SUBARU

IMPREZA

2003 Model Year

PDF Service Manual

GENERAL INFORMATION SECTION (Pub.No.G1860GE1)

ENGINE SECTION 1 (Pub.No.G1860GE2)

ENGINE SECTION 2 (Pub.No.G1860GE3)

TRANSMISSION SECTION (Pub.No.G1860GE4)

CHASSIS SECTION (Pub.No.G1860GE5)

BODY SECTION (Pub.No.G1860GE6)

WIRING SYSTEM SECTION (Pub.No.G1860GE7)

GENERAL INFORMATION SECTION

FOREWORD	FW
HOW TO USE THIS MANUALS	HU
SPECIFICATIONS	SPC
PRECAUTION	PC
NOTE	NT
IDENTIFICATION	ID
RECOMMENDED MATERIALS	RM
PRE-DELIVERY INSPECTION	PI
PERIODIC MAINTENANCE SERVICES	PM

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD. G1860GE1

FOREWORD

FW

Page
1. Foreword 2

1. Foreword

A: FOREWORD

These manuals are used when performing maintenance, repair, or diagnosis of the Subaru IMPREZA.

Applied model: GD*****, GG***** from 2003MY

The manuals contain the latest information at the time of publication. Changes in specifications, methods, etc. may be made without notice.

HOW TO USE THIS MANUAL

HU

Page
1. How to Use This Manual 2

1. How to Use This Manual

A: HOW TO USE THIS MANUAL

1. STRUCTURE

Each section consists of SCT that are broken down into SC that are divided into sections for each component. The specification, maintenance and other information for the components are included, and diagnosis information has also been added where necessary.

2. INDEX

The first page has an index with tabs.

3. COMPONENTS

Illustrations are listed for each component. The information necessary for repair work (tightening torque, grease up points, etc.) is described on these illustrations. Information is described using symbol. To order the parts, refer to parts catalogue.
Example:

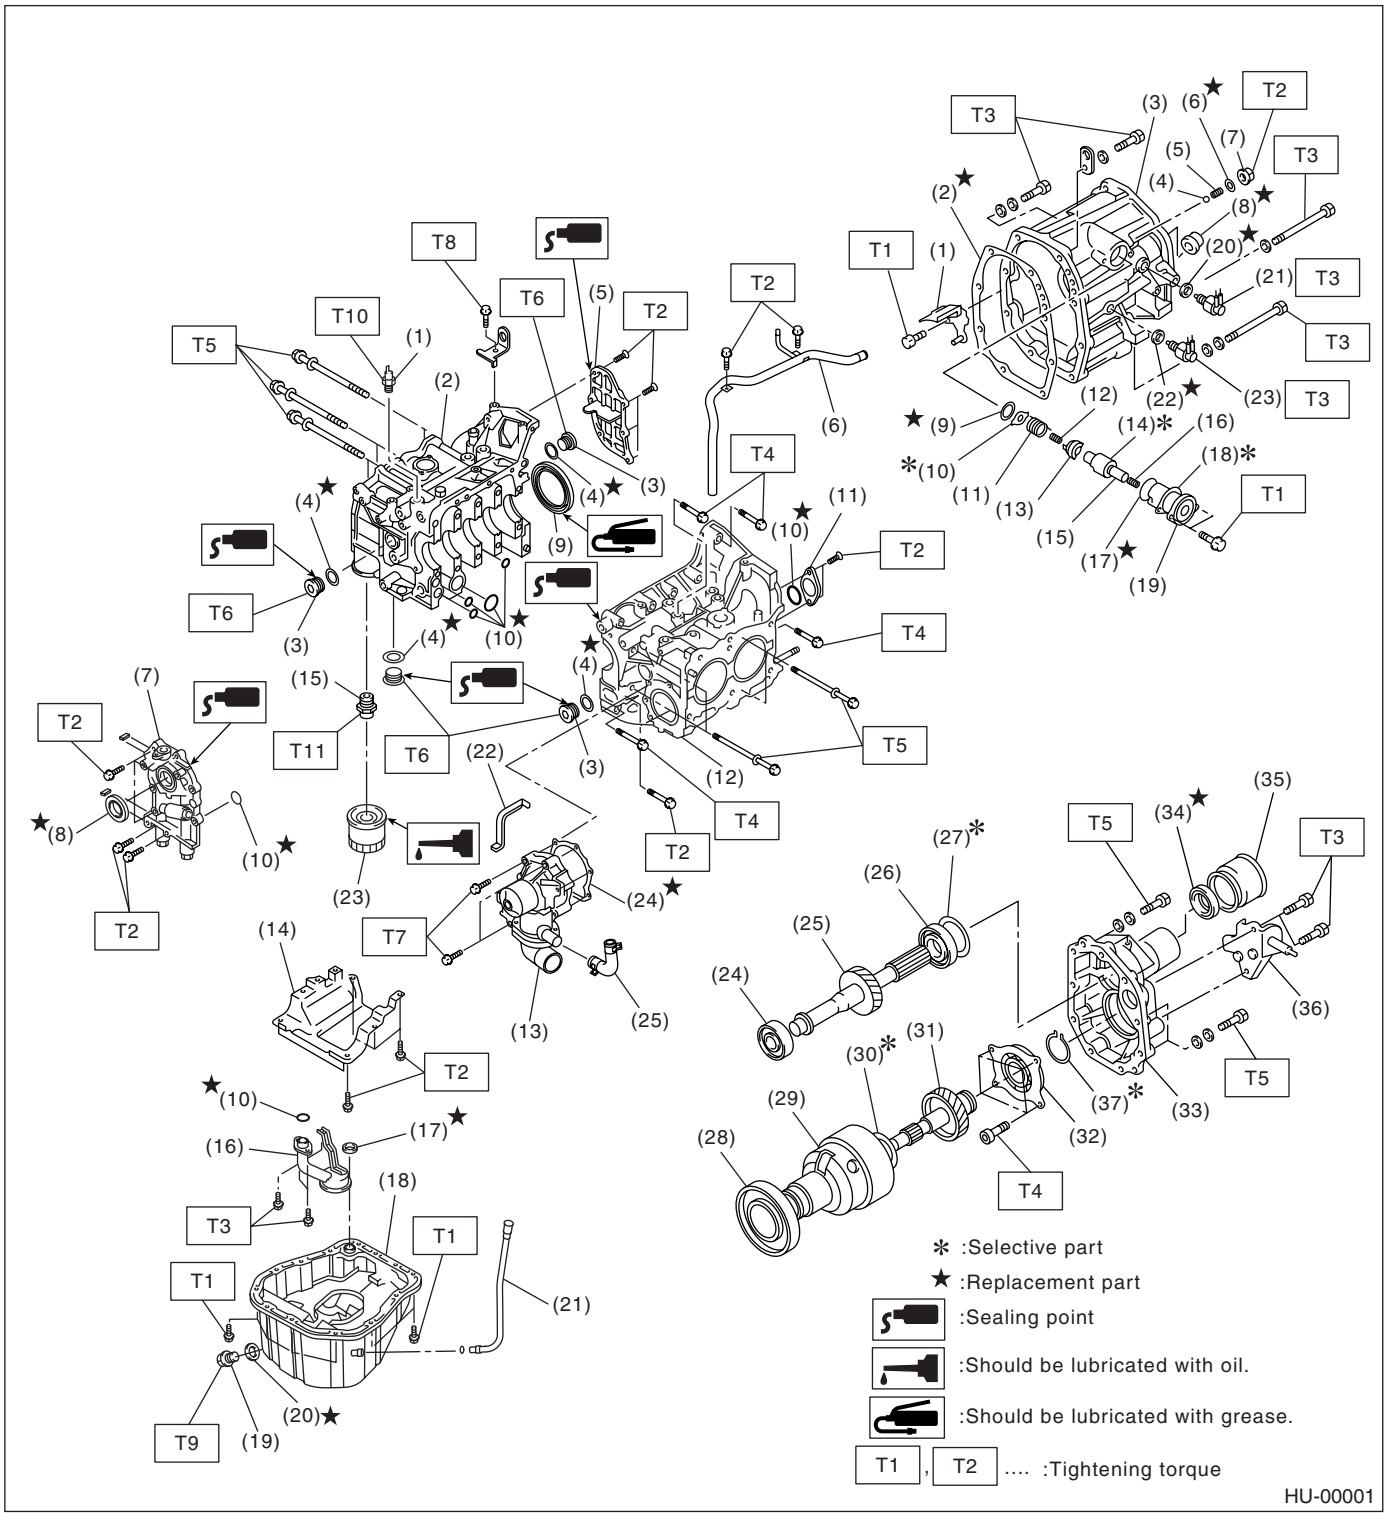

4. SPECIFICATIONS

If necessary, specifications are also included.

5. INSPECTION

Inspections are included to be carried out before and after maintenance.

6. MAINTENANCE

• Maintenance instructions for serviceable parts describes work area and detailed steps with illustration. It also describes the use of special tool, tightening torque, cautions for each procedure.
• If many serviceable parts are included in one service procedure, appropriate reference are provided for each part.

Example:

15.Main Shaft Assembly for Single-Range (A)

A: REMOVAL (B)

1) Remove the manual transmission assembly from vehicie. <Ref. to MT-33, REMOVAL, Manual Transmission Assembly.> (C)

---

11) Tighten the lock nuts to the specified torque using ST1 and ST2.

NOTE: (D)
Secure the lock nuts in two Places affer tightening.

ST2 499987003 SOCKET WRENCH
ST1 498937000 (E) TRANSMISSION HOLDER (F)

Tightening torque:
118 N·m (12.0 kgf-m, 86.8 ft-lb) (G)

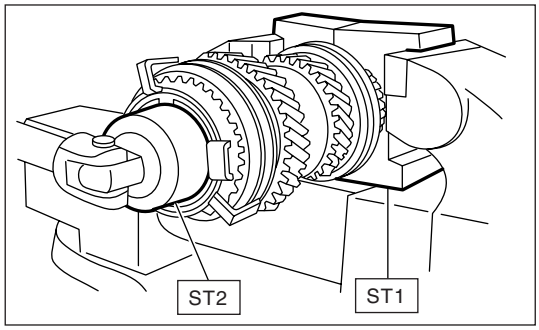

(H)

HU-00002

(A) Component
(B) Process
(C) Reference
(D) Caution
(E) Tool number of special tool
(F) Name of special tool
(G) Tightening torque
(H) Illustration

7. DIAGNOSIS

Tables showing a step-by-step process make it easy to conduct diagnosis.

8. SI UNITS

Measurements in these manuals are according to the SI units. Metric and yard/pound measurements are also included.

Example:

Tightening torque:
44 N·m (4.5 kgf-m, 33 ft-lb)

SPECIFICATIONS

SPC

Page
1. Impreza 2

1. Impreza

A: DIMENSIONS

Model			Sedan	Wagon	OUTBACK	STi
Overall length		mm (in)	4,415 (173.8)			
Overall width		mm (in)	1,740 (68.4)	1,695 (66.7)	1,710 (67.3)	1,740 (68.1)
Overall height (at C.W.)		mm (in)	1,440 (56.7)	1,465 (57.7), 1,485 (58.5)★4	1,475 (58.1), 1,495 (58.9)★4	1,440 (56.7)
Compartment	Length	mm (in)	1,890 (74.4)	1,845 (72.6)		1,890 (74.4)
	Width	mm (in)	1,380 (54.3)			
	Height	mm (in)	1,180 (46.5), 1,125 (44.3)★5	1,200 (47.2), 1,150 (45.3)★5	1,200 (47.2), 1,150 (45.3)★5	1,180 (46.5)
Wheelbase		mm (in)	2,525 (99.4)			
Tread	Front	mm (in)	1,485 (58.5)	1,460 (57.5)★1, 1,465 (57.7)	1,460 (57.5)	1,490 (58.7)
	Rear	mm (in)	1,475 (58.1), 1,480 (58.3)★3	1,450 (57.1)★1, 1,455 (57.3)	1,455 (57.3)	1,480 (58.3)
Minimum road clearance	Without catalytic converter	mm (in)	150 (5.9), 155 (6.1)★2	150 (5.9), 155 (6.1)★2	160 (6.3)	—
	With catalytic converter	mm (in)	150 (5.9), 155 (6.1)★3	150 (5.9), 155 (6.1)★3	160 (6.3)	155 (6.1)

★1: 1.6 L
★2: 2.0 L
★3: 2.0 L Turbo
★4: With roof rail
★5: With sun roof

B: ENGINE

Model	1.6 L	Non-turbo 2.0 L	Turbo 2.0 L	2.5 L	STi
Engine type	Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine				
Valve arrangement	Overhead camshaft type				
Bore × Stroke mm (in)	87.9 × 65.8 (3.461 × 2.591)	92 × 75 (3.62 × 2.95)		99.5 × 79 (3.92 × 3.11)	92 × 75 (3.62 × 2.95)
Displacement cm^3 (cu in)	1,597 (97.45)	1,994 (121.67)		2,457 (149.9)	1,994 (121.67)
Compression ratio	10.0±0.2		8.0±0.2	10.0±0.2	8.0±0.2
Firing order	1 — 3 — 2 — 4				
Idle speed at Park/Neutral position rpm	650±100★2 700±100★1	650±100★2 700±100★1	700±100★4 750±100	650±100	700±100
Maximum output kW (HP)/rpm	70 (94)/5,200	92 (123)/5,600	160 (215)/5,600 168 (225)/6,000★3 165 (221)/5,600★4	112 (150)/5,600	195 (261)/6,000
Maximum torque N·m (kgf-m, ft-lb) /rpm	143 (14.6, 105.5) /3,600	184 (18.8, 136.0) /3,600	292 (29.8, 215.4) /3,600 300 (30.6, 221.3) /4,000★3, ★4	223 (22.7, 164.5) /3,600	343 (35.0, 253.0) /4,000

★1: Without OBD
★2: With OBD
★3: Australia model
★4: Europe model

C: ELECTRICAL

Model			1.6 L	Non-turbo 2.0 L	Turbo 2.0 L	2.5 L	STi
Ignition timing at idling BTDC			5°±10°	10°±10°	12°±10°	10°±10°	12°±10°
Spark plug	Type and manufacturer	Without OBD	NGK: BKR6E (without catalyst) CHAMPION: RC8YC4 (with catalyst) NGK: BKR6E-11 (with catalyst)	NGK: BKR6E (without catalyst) CHAMPION: RC10YC4 (with catalyst) NGK: BKR5E-11 (with catalyst)	—	CHAMPION: RC10YC4 NGK: BKR5E-11	—
		With OBD	CHAMPION: RC8YC4 **Alternate** NGK: BKR6E-11	CHAMPION: RC10YC4 **Alternate** NGK: BKR5E-11	NGK: PFR6G	—	NGK: PFR6G
Generator			12V — 75A				
Battery	Type and capacity (5HR)	For Europe and South America	12V — 48AH (55D23L)	MT: 12V — 48AH (55D23L) AT: 12V — 52AH (65D23L)		—	12V — 48AH (55D23L)
		For Australia	—	12V — 27AH (34B19L)	12V — 40AH (50D20L)	12V — 27AH (34B19L)	12V — 40AH (50D20L)
		Others	12V — 27AH (34B19L)				—

D: TRANSMISSION

Model			1.6 L		Non-turbo 2.0 L		Turbo 2.0 L		2.5 L		STi
Transmission type			5MT	4AT	5MT	4AT	5MT	4AT	5MT	4AT	6MT
Clutch type			DSPD	TCC	DSPD	TCC	DSPD	TCC	DSPD	TCC	DSPD
Gear ratio		1st	3.454	2.785	3.454	2.785	3.454, 3.166★1	2.785	3.454	2.785	3.636
		2nd	2.062	1.545	2.062	1.545	1.947, 1.882★1	1.545	2.062	1.545	2.375
		3rd	1.448	1.000	1.448	1.000	1.366, 1.296★1	1.000	1.448	1.000	1.761
		4th	1.088	0.694	1.088	0.694	0.972	0.694	1.088	0.694	1.346
		5th	0.825	—	0.825	—	0.738	—	0.871, 0.780★1	—	0.971, 1.062★1
		6th	—	—	—	—	—	—	—	—	0.756, 0.842★1
		Reverse	3.333	2.272	3.333	2.272	3.333	2.272	3.333	2.272	3.545
		Dual range	1.447	—	1.447	—	—	—	—	—	—
Reduction gear (Front drive)	1st reduction	Type of gear	—	Helical	—	Helical	—	Helical	—	Helical	—
		Gear ratio	—	1.000	—	1.000	—	1.000	—	1.000	—
	Final reduction	Type of gear	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid
		Gear ratio	4.111	4.444	3.900	4.111	3.900, 4.444★1	4.111	3.700, 4.111★1	4.111	3.900
Reduction gear (Rear drive) (AWD model)	Transfer reduction	Type of gear	Helical	—	Helical	—	Helical	—	Helical	—	Helical
		Gear ratio	1.000	—	1.000	—	1.100, 1.000★1	—	1.000	—	1.100, 1.000★1
	Final reduction	Type of gear	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid	Hypoid
		Gear ratio	4.111	4.444	3.900	4.111	3.545, 4.444★1	4.111	3.700, 4.111★1	4.111	3.545, 3.900★1

5MT: 5-forward speeds with synchromesh and 1-reverse
4AT: Electronically controlled fully-automatic, 4-forward speeds and 1-reverse
6MT: 6-forward speeds with synchromesh and 1-reverse
DSPD: Dry Single Plate Diaphragm
TCC: Torque Converter Clutch
★1: Australia spec vehicle

E: STEERING

Model		Turbo 2.0 L, 2.5 L	OUTBACK	2.0 L NA, 1.6 L	STi
Type		Rack and Pinion			
Turns, lock to lock		RHD: 2.69 LHD: 3.02	3.02	3.22	2.69
Minimum turning circle m (ft)	Curb to curb	11 (36.1)	11 (36.1)	10.4 (34.1)	11 (36.1)
	Wall to wall	12.0 (39.4)	11.6 (38.1)	11.2 (36.7)	12.0 (39.4)

F: SUSPENSION

Front	Macpherson strut type, Independent, Coil spring
Rear	Dual-link type, Independent, Coil spring

G: BRAKE

Model	1.6 L	Non-turbo 2.0 L, 2.5 L	Turbo 2.0 L, STi
Service brake system	Dual circuit hydraulic with vacuum suspended power unit		
Front	Ventilated disc brake		
Rear	Drum brake	Disc brake	Ventilated disc brake
Parking brake	Mechanical on rear brakes		

H: TIRE

Model	BASE, TS	GX	RS	OUTBACK	WRX	STi
Rim size	14 × 5 1/2JJ	15 × 6JJ	16 × 6 1/2JJ	16 × 6 1/2JJ	17 × 7JJ	17 × 7 1/2JJ
Tire size	185/70R14 88H	195/60R15 88H	205/50R16 87V	P205/55R16 89V	215/45R17 87W	225/45R17 90W
Type	Steel belted radial, Tubeless					

I: CAPACITY

Model		1.6 L FWD		1.6 L AWD		Non-turbo 2.0 L		Turbo 2.0 L		2.5 L		STi
		5MT	4AT	5MT	4AT	5MT	4AT	5MT	4AT	5MT	4AT	6MT
Fuel tank	ℓ (US gal, Imp gal)	50 (13.2, 11.0)						60 (15.9, 13.2)				
Engine oil	Total capacity ℓ (US qt, Imp qt)	4.0 (4.2, 3.5)						4.5 (4.8, 4.0)		4.0 (4.2, 3.5)		4.5 (4.8, 4.0)
	Engine oil amount for refill ℓ (US qt, Imp qt)	Approx. 4.0 (4.2, 3.5)						Approx. 4.5 (4.8, 4.0)		Approx. 4.0 (4.2, 3.5)		Approx. 4.5 (4.8, 4.0)
Transmission gear oil	ℓ (US qt, Imp qt)	3.3 (3.5, 2.9)	—	3.5 (3.7, 3.1), 4.0 (4.2, 3.5)★1	—	3.5 (3.7, 3.1), 4.0 (4.2, 3.5)★1	—	3.5 (3.7, 3.1)	—	3.5 (3.7, 3.1)	—	4.1 (4.3, 3.6)
ATF	ℓ (US qt, Imp qt)	—	8.0 (8.5, 7.0)	—	8.4 (8.9, 7.4)	—	8.4 (8.9, 7.4)	—	9.3 (9.8, 8.2)	—	9.3 (9.8, 8.2)	—
Front differential gear oil	ℓ (US qt, Imp qt)	—	1.2 (1.3, 1.1)	—	1.2 (1.3, 1.1)	—	1.2 (1.3, 1.1)	—	1.2 (1.3, 1.1)	—	1.2 (1.3, 1.1)	—
Rear differential gear oil	ℓ (US qt, Imp qt)	—		0.8 (0.8, 0.7)								1.0 (1.1, 0.9)
Power steering fluid	ℓ (US qt, Imp qt)	0.7 (0.7, 0.6)										
Engine coolant	ℓ (US qt, Imp qt)	7.4 (7.8, 6.5)	7.3 (7.7, 6.4)	7.4 (7.8, 6.5)	7.3 (7.7, 6.4)	7.0 (7.4, 6.2)	6.9 (7.3, 6.1)	7.7 (8.1, 6.8)	7.6 (8.0, 6.7)	7.0 (7.4, 6.2)	6.9 (7.3, 6.1)	7.7 (8.1, 6.8)

★1: Dual range

J: WEIGHT

1. LHD MODEL

Sedan

Option code★1			E2			EC			K0	K4
Model			1.6 L							
			FWD			AWD				
			Base			TS				
			5MT	4AT		5MT				
Curb weight (C.W.)	Front	kgf (lb)	720 (1,587)	765 (1,687)	770 (1,698)	730 (1,609)	735 (1,620)	755 (1,664)	750 (1,654)	750 (1,654)
	Rear	kgf (lb)	470 (1,036)	470 (1,036)	470 (1,036)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)
	Total	kgf (lb)	1,190 (2,624)	1,235 (2,723)	1,240 (2,734)	1,250 (2,755)	1,255 (2,756)	1,275 (2,810)	1,270 (2,800)	1,270 (2,800)
Maximum permissible axle weight (M.P.A.W.)	Front	kgf (lb)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)
	Rear	kgf (lb)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)
Maximum permissible weight (M.P.W.)	Total	kgf (lb)	1,660 (3,660)	1,660 (3,660)	1,660 (3,660)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)
Option	Air conditioner		❍	❍	❍	—	—	❍	❍	❍
	ABS		—	—	❍	—	❍	❍	—	—
	Side airbag		—	—	—	—	—	—	—	—
	Sunroof		—	—	—	—	—	—	—	—
	Aluminium wheel		—	—	—	—	—	—	—	—
	Audio		—	—	—	—	—	—	—	—
	Seat in pure hide		—	—	—	—	—	—	—	—
	Rear spoiler		—	—	—	—	—	—	—	—
	Front LSD		—	—	—	—	—	—	—	—

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		KS	EC			K0	K4	KS	EC
Model		1.6 L							2.0 L
		AWD							
		TS							GX
		5MT	4AT						5MT
Curb weight (C.W.)	Front kgf (lb)	740 (1,631)	750 (1,654)	755 (1,644)	775 (1,709)	770 (1,698)	770 (1,698)	760 (1,676)	750 (1,654)
	Rear kgf (lb)	535 (1,179)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)	535 (1,179)
	Total kgf (lb)	1,275 (2,810)	1,270 (2,800)	1,275 (2,810)	1,295 (2,855)	1,290 (2,844)	1,290 (2,844)	1,295 (2,855)	1,285 (2,833)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	950 (2,094)
	Rear kgf (lb)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	910 (2,006)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,760 (3,880)
Option	Air conditioner	❍	—	—	❍	❍	❍	❍	—
	ABS	—	—	❍	❍	—	—	—	❍
	Side airbag	—	—	—	—	—	—	—	—
	Sunroof	—	—	—	—	—	—	—	—
	Aluminium wheel	—	—	—	—	—	—	—	—
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	—	—	—	—	—	—
	Rear spoiler	—	—	—	—	—	—	—	—
	Front LSD	—	—	—	—	—	—	—	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		EC		E2		K4		K0	KS
Model		2.0 L							
		AWD							
		GX							
		5MT							
Curb weight (C.W.)	Front kgf (lb)	770 (1,698)	765 (1,687)	770 (1,698)	765 (1,687)	770 (1,698)	765 (1,687)	760 (1,676)	765 (1,687)
	Rear kgf (lb)	535 (1,179)	535 (1,179)	535 (1,179)	535 (1,179)	535 (1,179)	530 (1,168)	525 (1,157)	560 (1,235)
	Total kgf (lb)	1,305 (2,877)	1,300 (2,866)	1,305 (2,877)	1,300 (2,866)	1,305 (2,877)	1,295 (2,855)	1,285 (2,833)	1,325 (2,921)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)
	Rear kgf (lb)	910 (2,066)	910 (2,066)	910 (2,066)	910 (2,066)	910 (2,066)	910 (2,066)	910 (2,066)	910 (2,066)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)
Option	Air conditioner	❍	❍	❍	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	❍	—	❍	—	—	—	—
	Sunroof	—	—	—	—	—	—	—	❍
	Aluminium wheel	—	❍	—	❍	—	❍	—	—
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	—	—	—	—	—	—
	Rear spoiler	—	—	—	—	—	—	—	❍
	Front LSD	—	—	—	—	—	—	—	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		EC			E2		K4		K0
Model		2.0 L							
		AWD							
		GX							
		4AT							
Curb weight (C.W.)	Front kgf (lb)	775 (1,709)	795 (1,753)	790 (1,742)	795 (1,742)	790 (1,742)	795 (1,753)	790 (1,742)	795 (1,753)
	Rear kgf (lb)	530 (1,168)	530 (1,168)	530 (1,168)	530 (1,168)	530 (1,168)	530 (1,168)	525 (1,157)	530 (1,168)
	Total kgf (lb)	1,305 (2,877)	1,325 (2,921)	1,320 (2,910)	1,325 (2,921)	1,320 (2,910)	1,325 (2,921)	1,315 (2,899)	1,325 (2,921)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)
	Rear kgf (lb)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)
Option	Air conditioner	—	❍	❍	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	—	❍	—	❍	—	—	—
	Sunroof	—	—	—	—	—	—	—	—
	Aluminium wheel	—	—	❍	—	❍	—	❍	—
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	—	—	—	—	—	—
	Rear spoiler	—	—	—	—	—	—	—	—
	Front LSD	—	—	—	—	—	—	—	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		KS	EC						
Model		2.0 L	2.0 L Turbo						
		AWD							
		GX	WRX						
		4AT	5MT						
Curb weight (C.W.)	Front kgf (lb)	790 (1,753)	835 (1,841)	820 (1,808)	835 (1,841)	835 (1,841)	840 (1,852)	835 (1,840)	840 (1,852)
	Rear kgf (lb)	555 (1,224)	560 (1,235)	550 (1,213)	555 (1,224)	560 (1,235)	570 (1,257)	565 (1,246)	570 (1,257)
	Total kgf (lb)	1,325 (2,921)	1,395 (3,075)	1,370 (3,020)	1,390 (3,065)	1,395 (3,075)	1,410 (3,109)	1,400 (3,087)	1,410 (3,109)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	950 (2,094)	990 (2,185)	990 (2,185)	990 (2,185)	990 (2,185)	990 (2,185)	990 (2,185)	990 (2,185)
	Rear kgf (lb)	910 (2,006)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,760 (3,880)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)
Option	Air conditioner	❍	❍	—	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	—	—	—	❍	❍	❍	—
	Sunroof	❍	—	—	—	—	❍	—	❍
	Aluminium wheel	❍	—	—	—	—	—	—	—
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	—	—	—	❍	—	—
	Rear spoiler	—	❍	—	—	—	—	❍	❍
	Front LSD	—	—	—	—	—	—	—	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		EC		K4			EC		
Model		2.0 L Turbo							
		AWD							
		WRX					STi		
		5MT							
Curb weight (C.W.)	Front kgf (lb)	840 (1,852)	840 (1,852)	835 (1,840)	840 (1,852)	840 (1,852)	885 (1,951)	865 (1,907)	885 (1,951)
	Rear kgf (lb)	570 (1,257)	575 (1,268)	560 (1,235)	575 (1,268)	575 (1,268)	585 (1,290)	585 (1,290)	585 (1,290)
	Total kgf (lb)	1,410 (3,109)	1,415 (3,120)	1,395 (3,075)	1,415 (3,120)	1,415 (3,120)	1,470 (3,241)	1,450 (3,197)	1,470 (3,241)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)
	Rear kgf (lb)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	1030 (2,271)	1030 (2,271)	1030 (2,271)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,880 (4,145)	1,880 (4,145)	1,880 (4,145)
Option	Air conditioner	❍	❍	❍	❍	❍	❍	—	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	❍	—	❍	❍	—	—	—
	Sunroof	❍	❍	—	❍	❍	—	—	—
	Aluminium wheel	—	—	—	—	—	—	—	—
	Audio	❍	❍	—	—	—	—	—	❍
	Seat in pure hide	—	❍	—	—	❍	—	—	—
	Rear spoiler	❍	❍	❍	❍	❍	—	—	—
	Front LSD	—	—	—	—	—	❍	❍	❍

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Wagon

Option code★1			EC				K0	K4	KS	EC
Model			1.6 L							
			AWD							
			TS							
			5MT D/R							4AT
Curb weight (C.W.)	Front	kgf (lb)	735 (1,620)	740 (1,631)	740 (1,631)	760 (1,676)	755 (1,664)	755 (1,664)	745 (1,643)	750 (1,654)
	Rear	kgf (lb)	545 (1,202)	545 (1,202)	550 (1,213)	545 (1,202)	545 (1,202)	545 (1,202)	560 (1,235)	545 (1,202)
	Total	kgf (lb)	1,280 (2,822)	1,285 (2,833)	1,290 (2,844)	1,305 (2,877)	1,300 (2,866)	1,300 (2,866)	1,305 (2,877)	1,295 (2,855)
Maximum permissible axle weight (M.P.A.W.)	Front	kgf (lb)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)
	Rear	kgf (lb)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)
Maximum permissible weight (M.P.W.)	Total	kgf (lb)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)
Option	Air conditioner		—	—	—	❍	❍	❍	❍	—
	ABS		—	❍	❍	❍	—	—	—	—
	Side airbag		—	—	❍	—	—	—	—	—
	Sunroof		—	—	—	—	—	—	—	—
	Aluminium wheel		—	—	—	—	—	—	—	—
	Audio		—	—	❍	—	—	—	—	—
	Seat in pure hide		—	—	—	—	—	—	—	—
	Spoiler pack		—	—	—	—	—	—	—	—

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

Option code*1		EC			K0	K4	KS	EC	
Model		1.6 L						2.0 L	
		AWD							
		TS						GX	
		4AT						5MT D/R	
Curb weight (C.W.)	Front kgf (lb)	755 (1,664)	755 (1,664)	775 (1,709)	770 (1,698)	770 (1,698)	760 (1,676)	760 (1,676)	785 (1,731)
	Rear kgf (lb)	545 (1,202)	550 (1,213)	545 (1,202)	545 (1,202)	545 (1,202)	560 (1,235)	570 (1,257)	585 (1,290)
	Total kgf (lb)	1,300 (2,866)	1,305 (2,877)	1,320 (2,910)	1,315 (2,899)	1,315 (2,899)	1,320 (2,910)	1,330 (2,932)	1,370 (3,020)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	950 (2,094)	950 (2,094)
	Rear kgf (lb)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	960 (2,0116)	960 (2,116)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,800 (3,969)	1,800 (3,969)
Option	Air conditioner	—	—	❍	❍	❍	❍	—	❍
	ABS	❍	❍	❍	—	—	—	❍	❍
	Side airbag	—	❍	—	—	—	—	—	❍
	Sunroof	—	—	—	—	—	—	—	❍
	Aluminium wheel	—	—	—	—	—	—	—	—
	Audio	—	❍	—	—	—	—	—	❍
	Seat in pure hide	—	—	—	—	—	—	—	—
	Spoiler pack	—	—	—	—	—	—	—	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

Option code★1		EC		K0	K4		KS	EC	
Model		2.0 L							
		AWD							
		GX							
		5MT D/R						4AT	
Curb weight (C.W.)	Front kgf (lb)	780 (1,720)	775 (1,709)	780 (1,720)	780 (1,720)	775 (1,709)	770 (1,698)	775 (1,709	800 (1,764)
	Rear kgf (lb)	570 (1,257)	570 (1,257)	570 (1,257)	570 (1,257)	565 (1,246)	590 (1,300)	565 (1,246)	580 (1,279)
	Total kgf (lb)	1,350 (2,977)	1,345 (2,965)	1,350 (2,977)	1,350 (2,977)	1,340 (2,955)	1,360 (2,999)	1,340 (2,955)	1,380 (3,042)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)
	Rear kgf (lb)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)
Option	Air conditioner	❍	❍	❍	❍	❍	❍	—	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	❍	—	—	—	—	—	❍
	Sunroof	—	—	—	—	—	❍	—	❍
	Aluminium wheel	—	❍	—	—	❍	❍	—	—
	Audio	—	—	—	—	—	—	—	❍
	Seat in pure hide	—	—	—	—	—	—	—	—
	Spoiler pack	—	—	—	—	—	—	—	—

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

Option code★1			EC		K0	K4		KS	EC	
Model			2.0 L						2.0 L Turbo	
			AWD							
			GX						WRX	
			4AT						5MT	
Curb weight (C.W.)	Front	kgf (lb)	795 (1,753)	790 (1,742)	795 (1,753)	795 (1,753)	790 (1,742)	790 (1,742)	805 (1,775)	825 (1,819)
	Rear	kgf (lb)	565 (1,246)	565 (1,246)	565 (1,246)	565 (1,246)	560 (1,235)	580 (1,279)	585 (1,290)	585 (1,290)
	Total	kgf (lb)	1,360 (2,999)	1,355 (2,987)	1,360 (2,999)	1,360 (2,999)	1,350 (2,977)	1,370 (3,020)	1,390 (3,065)	1,410 (3,109)
Maximum permissible axle weight (M.P.A.W.)	Front	kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	990 (2,183)	990 (2,183)
	Rear	kgf (lb)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	950 (2,094)	950 (2,094)
Maximum permissible weight (M.P.W.)	Total	kgf (lb)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,860 (4,101)	1,860 (4,101)
Option	Air conditioner		❍	❍	❍	❍	❍	❍	—	❍
	ABS		❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag		—	❍	—	—	—	—	—	—
	Sunroof		—	—	—	—	—	❍	—	—
	Aluminium wheel		—	❍	—	—	❍	❍	—	—
	Audio		—	—	—	—	—	—	—	—
	Seat in pure hide		—	—	—	—	—	—	—	—
	Spoiler pack		—	—	—	—	—	—	—	—

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

Option code★1		EC			K0
Model		2.0 L Turbo			
		AWD			
		WRX			
		5MT			
Curb weight (C.W.)	Front kgf (lb)	830 (1,830)	830 (1,830)	830 (1,830)	830 (1,830)
	Rear kgf (lb)	600 (1,322)	600 (1,322)	600 (1,322)	595 (1,311)
	Total kgf (lb)	1,430 (3,153)	1,430 (3,153)	1,430 (3,153)	1,425 (3,142)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)
	Rear kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,860 (4,101)	1,860 (4,101)	1,860 (4,101)	1,860 (4,101)
Option	Air conditioner	❍	❍	❍	❍
	ABS	❍	❍	❍	❍
	Side airbag	❍	❍	❍	❍
	Sunroof	❍	❍	❍	❍
	Aluminium wheel	—	—	—	—
	Audio	—	❍	❍	—
	Seat in pure hide	❍	—	❍	—
	Spoiler pack	—	—	—	—

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

2. RHD MODEL

Sedan

Option code★1			EK			K1		KA		
Model			1.6 L					2.0 L		
			AWD							
			TS					GX		
			5MT		4AT	5MT	4AT	5MT		4AT
Curb weight (C.W.)	Front	kgf (lb)	740 (1,631)	760 (1,676)	760 (1,676)	750 (1,654)	770 (1,698)	750 (1,654)	765 (1,687)	775 (1,709)
	Rear	kgf (lb)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)	520 (1,146)	535 (1,179)	535 (1,179)	530 (1,168)
	Total	kgf (lb)	1,260 (2,778)	1,280 (2,822)	1,280 (2,822)	1,270 (2,800)	1,290 (2,844)	1,285 (2,833)	1,300 (2,866)	1,305 (2,877)
Maximum permissible axle weight (M.P.A.W.)	Front	kgf (lb)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	950 (2,094)	950 (2,094)	950 (2,094)
	Rear	kgf (lb)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	890 (1,962)	910 (2,006)	910 (2,006)	910 (2,006)
Maximum permissible weight (M.P.W.)	Total	kgf (lb)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,700 (3,748)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)
Option	Air conditioner		—	❍	—	❍	❍	—	❍	—
	ABS		❍	❍	❍	—	—	❍	❍	❍
	Side airbag		—	—	—	—	—	—	—	—
	Sunroof		—	—	—	—	—	—	—	—
	Aluminium wheel		—	—	—	—	—	—	❍	—
	Audio		—	—	—	—	—	—	—	—
	Seat in pure hide		—	—	—	—	—	—	—	—
	Rear spoiler		—	—	—	—	—	—	❍	—
	Spoiler pack		—	—	—	—	—	—	❍	—
	Front LSD		—	—	—	—	—	—	—	—
	Cruise control		—	—	—	—	—	❍	❍	❍

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		KA	EK		K1		KA		EK
Model		2.0 L					2.5 L		2.0 L Turbo
		AWD							
		GX					RS		WRX
		4AT	5MT	4AT	5MT	4AT	5MT	4AT	5MT
Curb weight (C.W.)	Front kgf (lb)	790 (1,742)	770 (1,698)	795 (1,753)	770 (1,698)	795 (1,753)	780 (1,720)	805 (1,775)	835 (1,841)
	Rear kgf (lb)	530 (1,168)	535 (1,179)	530 (1,168)	535 (1,179)	530 (1,168)	540 (1,191)	535 (1,179)	565 (1,246)
	Total kgf (lb)	1,320 (2,910)	1,305 (2,877)	1,325 (2,921)	1,305 (2,877)	1,325 (2,921)	1,320 (2,910)	1,340 (2,955)	1,400 (3,086)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	990 (2,183)
	Rear kgf (lb)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	920 (2,028)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,760 (3,880)	1,780 (3,924)	1,780 (3,924)	1,850 (4,079)
Option	Air conditioner	❍	❍	❍	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	—	—	—	—	—	—	❍
	Sunroof	—	—	—	—	—	—	—	—
	Aluminium wheel	❍	❍	❍	—	—	—	—	—
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	—	—	—	—	—	—
	Rear spoiler	❍	❍	❍	—	—	❍	❍	❍
	Spoiler pack	❍	❍	❍	—	—	—	—	—
	Front LSD	—	—	—	—	—	—	—	—
	Cruise control	❍	—	—	—	—	❍	❍	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code*1		EK			KA				
Model		2.0 L Turbo							
		AWD							
		WRX							
		5MT						4AT	
Curb weight (C.W.)	Front kgf (lb)	835 (1,841)	840 (1,852)	840 (1,852)	840 (1,852)	835 (1,841)	840 (1,852)	860 (1,896)	865 (1,907)
	Rear kgf (lb)	560 (1,246)	570 (1,257)	575 (1,268)	575 (1,268)	560 (1,235)	570 (1,257)	555 (1,234)	565 (1,246)
	Total kgf (lb)	1,395 (3,075)	1,410 (3,109)	1,415 (3,120)	1,415 (3,120)	1,395 (3,075)	1,410 (3,109)	1,415 (3,120)	1,430 (3,153)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)
	Rear kgf (lb)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)	920 (2,028)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)	1,850 (4,079)
Option	Air conditioner	❍	❍	❍	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	❍	❍	❍	—	—	—	—
	Sunroof	—	❍	❍	❍	—	❍	—	—
	Aluminium wheel	—	—	—	—	—	—	—	❍
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	❍	❍	—	—	—	—
	Rear spoiler	❍	❍	❍	❍	❍	❍	❍	❍
	Spoiler pack	—	—	—	—	—	—	—	—
	Front LSD	—	—	—	—	—	—	—	—
	Cruise control	—	—	—	❍	❍	❍	❍	❍

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Option code★1		KA	EK	KA
Model		2.0 L Turbo		
		AWD		
		WRX	STi	
		4AT	6MT	
Curb weight (C.W.)	Front kgf (lb)	865 (1,907)	885 (1,952)	885 (1,952)
	Rear kgf (lb)	570 (1,257)	585 (1,290)	585 (1,290)
	Total kgf (lb)	1,435 (3,164)	1,470 (3,241)	1,470 (3,241)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	990 (2,183)	1,030 (2,271)	1,030 (2,271)
	Rear kgf (lb)	920 (2,028)	920 (2,028)	920 (2,028)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,850 (4,079)	1,880 (4,145)	1,880 (4,145)
Option	Air conditioner	❍	❍	❍
	ABS	❍	❍	❍
	Side airbag	❍	—	—
	Sunroof	❍	—	—
	Aluminium wheel	—	—	—
	Audio	—	—	—
	Seat in pure hide	❍	—	—
	Rear spoiler	❍	—	—
	Spoiler pack	—	—	—
	Front LSD	—	❍	❍
	Cruise control	❍	—	❍

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>

Wagon

Option code★1			EK			K1		KA		
Model			1.6 L					2.0 L		
			AWD							
			TS					GX		
			5MT D/R		4AT	5MT D/R	4AT	5MT D/R		4AT
Curb weight (C.W.)	Front	kgf (lb)	745 (1,642)	765 (1,687)	760 (1,676)	755 (1,664)	770 (1,698)	760 (1,676)	775 (1,709)	775 (1,709)
	Rear	kgf (lb)	545 (1,202)	545 (1,202)	545 (1,202)	545 (1,202)	545 (1,202)	570 (1,257)	570 (1,257)	565 (1,246)
	Total	kgf (lb)	1,290 (2,844)	1,310 (2,888)	1,305 (2,877)	1,300 (2,866)	1,315 (2,899)	1,330 (2,932)	1,345 (2,965)	1,340 (2,955)
Maximum permissible axle weight (M.P.A.W.)	Front	kgf (lb)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	900 (1,984)	950 (2,094)	950 (2,094)	950 (2,094)
	Rear	kgf (lb)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	910 (2,006)	960 (2,116)	960 (2,116)	960 (2,116)
Maximum permissible weight (M.P.W.)	Total	kgf (lb)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,730 (1,609)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)
Option	Air conditioner		—	❍	—	❍	❍	—	❍	—
	ABS		❍	❍	❍	—	—	❍	❍	❍
	Side airbag		—	—	—	—	—	—	—	—
	Sunroof		—	—	—	—	—	—	—	—
	Aluminium wheel		—	—	—	—	—	—	❍	—
	Audio		—	—	—	—	—	—	—	—
	Seat in pure hide		—	—	—	—	—	—	—	—
	Spoiler pack		—	—	—	—	—	—	❍	—
	Cruise control		—	—	—	—	—	❍	❍	❍

★1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

Option code*1		KA	EK	K1		KA		EK
Model		2.0 L						
		AWD						
		GX				OUTBACK		WRX
		4AT	5MT D/R	4AT	5MT D/R	4AT	5MT D/R	4AT	5MT
Curb weight (C.W.)	Front kgf (lb)	790 (1,742)	780 (1,720)	795 (1,753)	780 (1,720)	795 (1,753)	770 (1,698)	785 (1,731)	825 (1,819)
	Rear kgf (lb)	565 (1,246)	570 (1,257)	565 (1,246)	570 (1,257)	565 (1,246)	570 (1,257)	570 (1,257)	585 (1,830)
	Total kgf (lb)	1,355 (2,987)	1,350 (2,977)	1,360 (2,999)	1,350 (2,977)	1,360 (2,999)	1,340 (2,955)	1,355 (2,987)	1,410 (3,109)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	990 (2,183)
	Rear kgf (lb)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	960 (2,116)	950 (2,094)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,800 (3,969)	1,860 (4,101)
Option	Air conditioner	❍	❍	❍	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍	❍	❍	❍
	Side airbag	—	—	—	—	—	—	—	—
	Sunroof	—	—	—	—	—	—	—	—
	Aluminium wheel	❍	❍	❍	—	—	—	—	—
	Audio	—	—	—	—	—	—	—	—
	Seat in pure hide	—	—	—	—	—	—	—	—
	Spoiler pack	❍	❍	❍	—	—	—	—	❍
	Cruise control	❍	—	—	—	—	❍	❍	—

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

Option code*1		EK			KA	
Model		2.0 L				
		AWD				
		WRX				
		5MT				4AT
Curb weight (C.W.)	Front kgf (lb)	825 (1,819)	830 (1,830)	830 (1,830)	825 (1,819)	850 (1,874)
	Rear kgf (lb)	590 (1,301)	600 (1,323)	600 (1,323)	585 (1,830)	585 (1,830)
	Total kgf (lb)	1,415 (3,120)	1,430 (3,153)	1,430 (3,153)	1,410 (3,109)	1,435 (3,164)
Maximum permissible axle weight (M.P.A.W.)	Front kgf (lb)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)	990 (2,183)
	Rear kgf (lb)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)	950 (2,094)
Maximum permissible weight (M.P.W.)	Total kgf (lb)	1,860 (4,101)	1,860 (4,101)	1,860 (4,101)	1,860 (4,101)	1,860 (4,101)
Option	Air conditioner	❍	❍	❍	❍	❍
	ABS	❍	❍	❍	❍	❍
	Side airbag	❍	❍	❍	—	—
	Sunroof	—	❍	❍	—	—
	Aluminium wheel	—	—	—	—	—
	Audio	—	—	—	—	—
	Seat in pure hide	—	—	❍	—	—
	Spoiler pack	—	—	—	—	—
	Cruise control	—	—	—	❍	❍

*1: For option code, refer to ID section. <Ref. to ID-7, Option code.>
D/R: Dual range

PRECAUTION

PC

Page
1. Precaution 2

1. Precaution

A: PRECAUTION

Please clearly understand and adhere to the following general precautions. They must be strictly followed to avoid minor or serious injury to the person doing the work or people in the area.

1. ABS

Handle the ABS as a total system. Do not disassemble or attempt to repair individual parts. Doing so could prevent the ABS system from operating when needed or cause it to operate incorrectly and result in injury.

2. BRAKE FLUID

If brake fluid gets in your eyes or on your skin, do the following:

- Wash out your eyes and seek immediate medical attention.
- Wash your skin with soap and then rinse thoroughly with water.

3. RADIATOR FAN

The radiator fan may rotate without warning, even when the engine is not on. Do not place your hand, cloth, tools, or other items near the fan at any time.

4. ROAD TESTS

Always conduct road tests in accordance with traffic rules and regulations to avoid bodily injury and interrupting traffic.

5. AIRBAG

To prevent bodily injury from unexpected deployment of airbags and unnecessary maintenance, follow the instructions in this manual when performing maintenance on airbag components or nearby, and airbag wiring harnesses or nearby.
To prevent unexpected deployment, perform one of the steps below and then wait at least 20 seconds to discharge electricity before beginning work.

- Step 1: Turn the ignition switch OFF.
- Step 2: Disconnect the ground cable from battery.

6. AIRBAG DISPOSAL

To prevent bodily injury from unexpected airbag deployment, do not dispose airbag modules in the same way as other refuse. Follow the special instructions for disposal in this manual. Follow all government regulations concerning disposal of refuse.

7. AIRBAG MODULE

Adhere to the following when handling and storing the airbag module to prevent bodily injury from unexpected deployment:

- Do not hold the harnesses or connectors to carry module.
- Do not face the bag in the direction that it opens towards yourself or other people.
- Do not face the bag in the direction that it opens towards the floor or walls.

8. AIRBAG SPECIAL TOOLS

To prevent unexpected deployment, only use special tools.

9. WINDOW

Always wear safety glasses when working around any glass to prevent glass fragments from damaging your eyes.

10.WINDOW ADHESIVE

Always use the recommended or alternative adhesive when attaching glass to prevent it from coming loose and falling, resulting in accidents and injury.

NOTE

NT

Page
1. Note.....2

1. Note

A: NOTE

This is information that can improve efficiency of maintenance and assure sound work.

1. FASTENER NOTICE

Fasteners are used to prevent parts from damage and dislocation due to looseness. Fasteners must be tightened to the specified torque.
Do not apply paint, lubricant, rust retardant, or other substances to the surface around bolts, fasteners, etc. Doing so will make it difficult to obtain the correct torque and result in looseness and other problems.

2. STATIC ELECTRICITY DAMAGE

Do not touch the control unit, connectors, logic boards, and other such parts when there is a risk of static electricity. Always use a static electricity prevention cord or touch grounded metal before conducting work.

3. BATTERY

When removing the battery cables, always be sure to turn the ignition off to prevent electrical damage to the control unit from rush current.

4. SERVICE PARTS

Use authentic service parts for maximum performance and maintenance, when conducting repairs. Subaru/FHI will not be responsible for poor performance resulting from the use of parts not specified by a genuine dealer.

5. PROTECTING VEHICLE UNDER MAINTENANCE

Make sure to attach the fender cover, seat covers, etc. before work.

6. ENSURING SAFETY DURING WORK

When working in a group of two or more, perform the work with calling each other to ensure mutual safety.

7. LIFTS AND JACKS

When using a lift or jack to raise a vehicle, always follow instructions concerning jack-up points and weight limits to prevent the vehicle from falling, which could result in injury. Be especially careful to make sure the vehicle is balanced before raising it.

NOTE

Be sure to set the wheel stoppers when jacking-up only the front or rear of the vehicle.

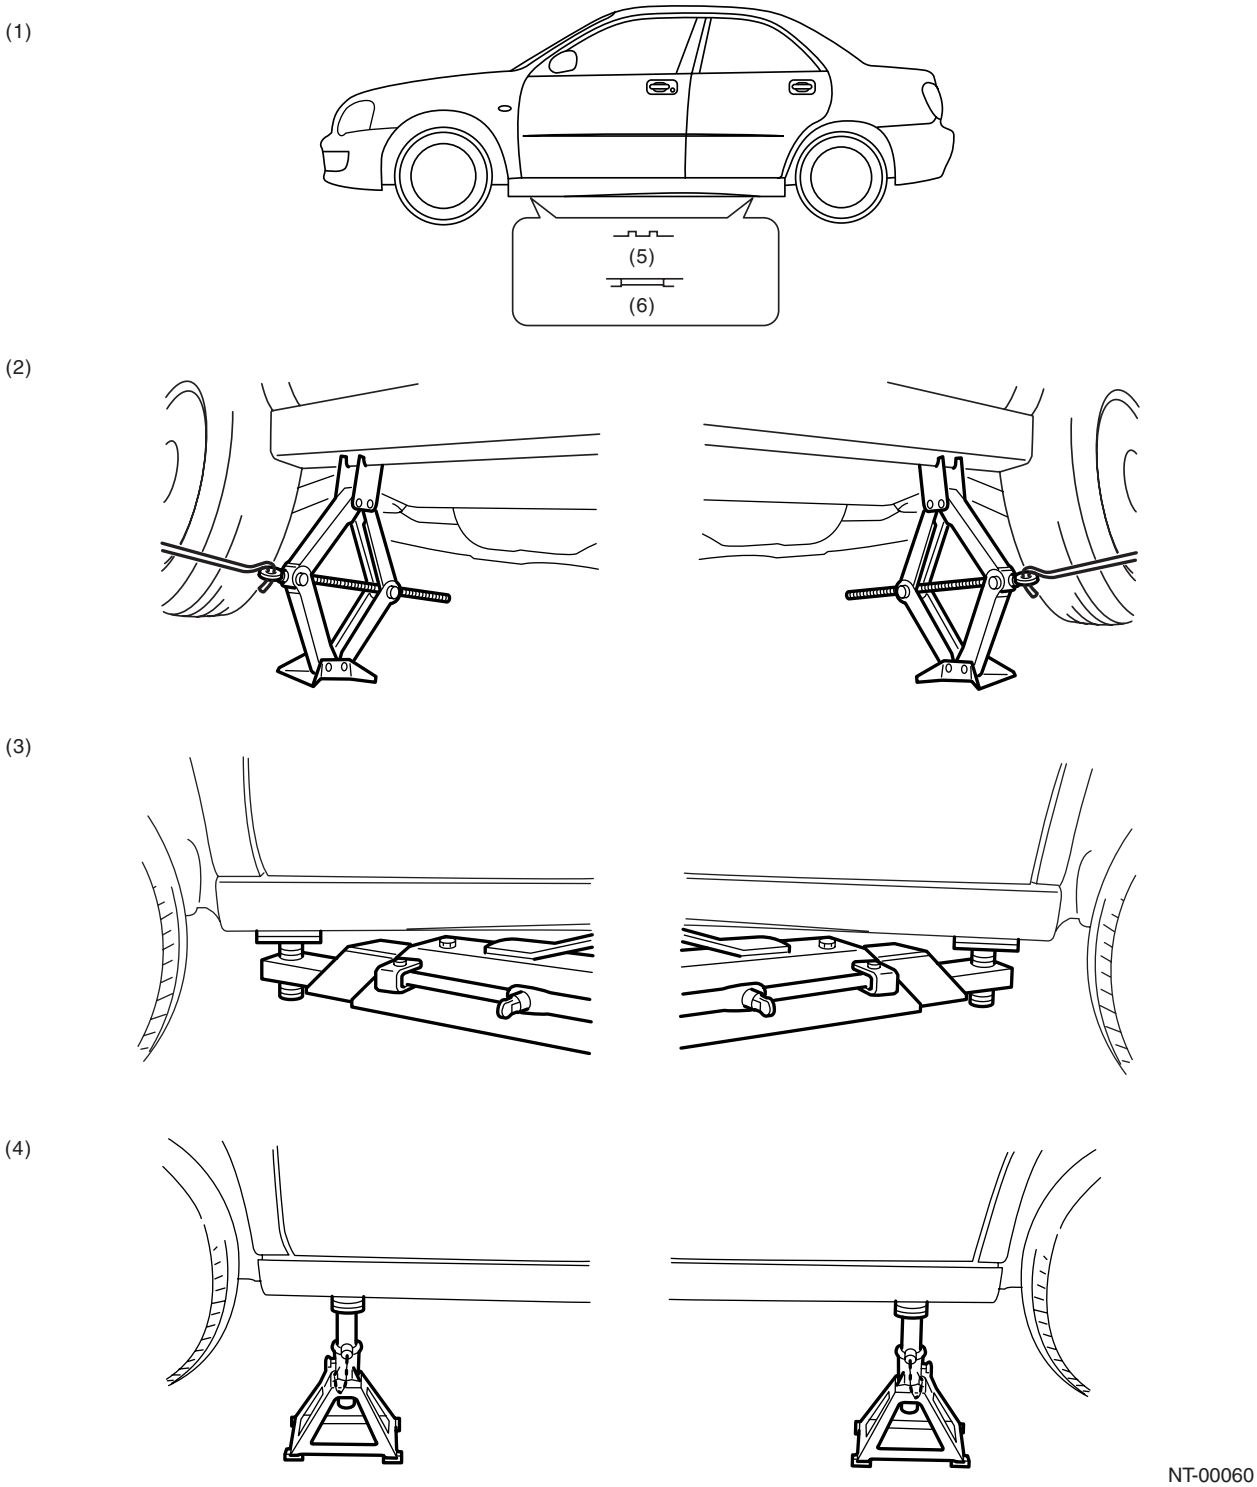

(1) Support locations
(2) Pantograph jack
(3) Lift
(4) Rigid rack
(5) Without side sill cover
(6) With side sill cover

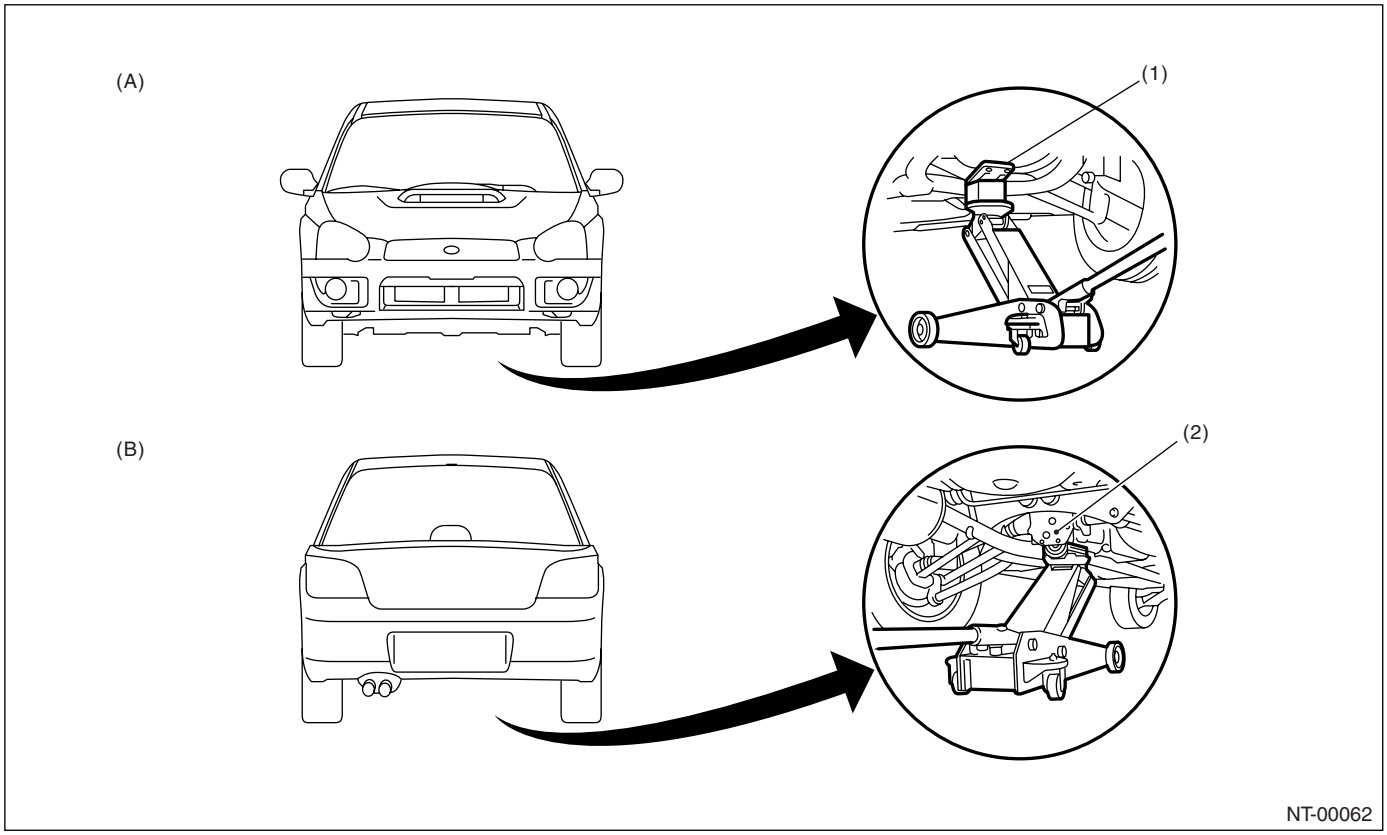

(A) Front
(B) Rear
(1) Front crossmember
(2) Rear differential

8. TIE-DOWNS

Tie downs are used when transporting vehicles and when using the chassis dynamo. Attach tie downs only to the specified points on the vehicle.

• Tie-down point

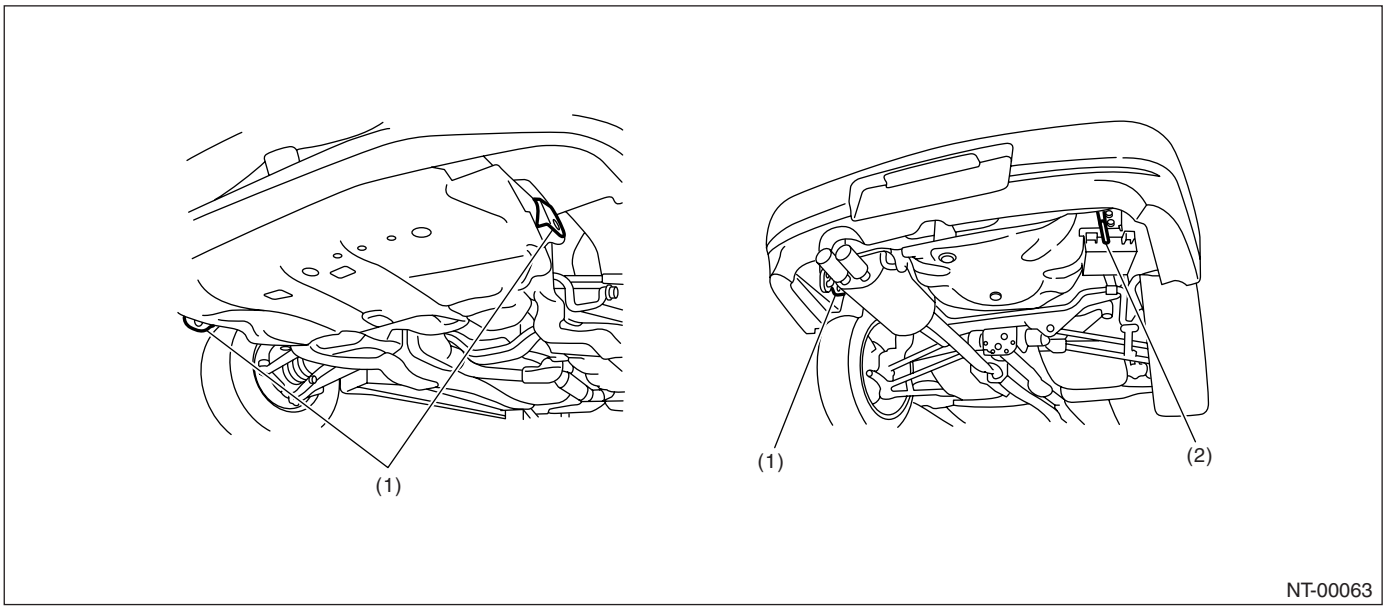

(1) Hook for tie-down (2) Hook for towing and tie-down

• Chain direction at tie-down condition

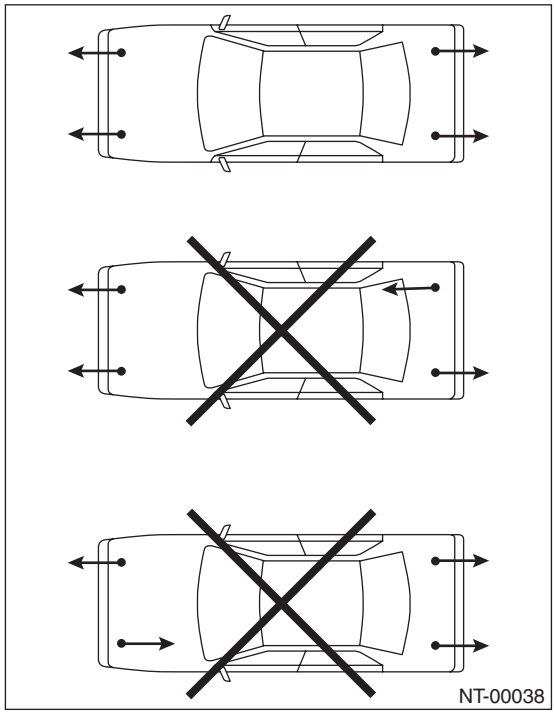

• Chain pulling range at tie-down condition

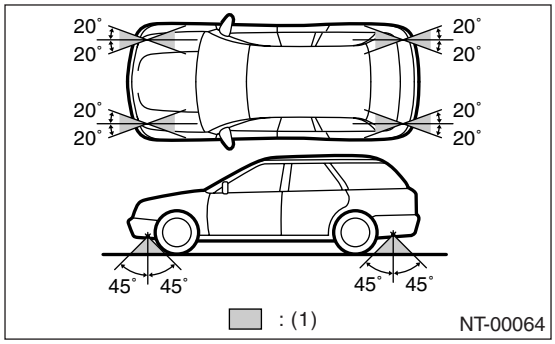

(1) Chain pulling range at tie-down condition

• Vehicle sinking volume at tie-down condition

Measure the distance L between tire highest point to arch highest point before tie-down and after tie-down. Difference of measurement value (drop height) shall be within 50.8 mm (1.97 in). Make sure to fix the vehicle securely.

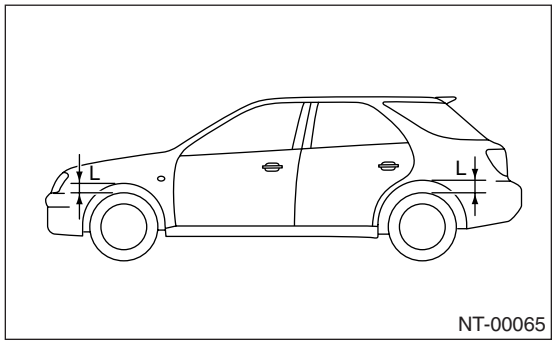

9. TOWING

Avoid towing vehicles except when the vehicle cannot be driven. For models with AWD, AT, or VTD, use a loader instead of towing. When towing other vehicles, to prevent excessive weight from damaging the hook or vehicle:

- Do not tow other vehicles with a front hook for tie down.
- Make sure the vehicle towing is heavier that the vehicle being towed.

• Front

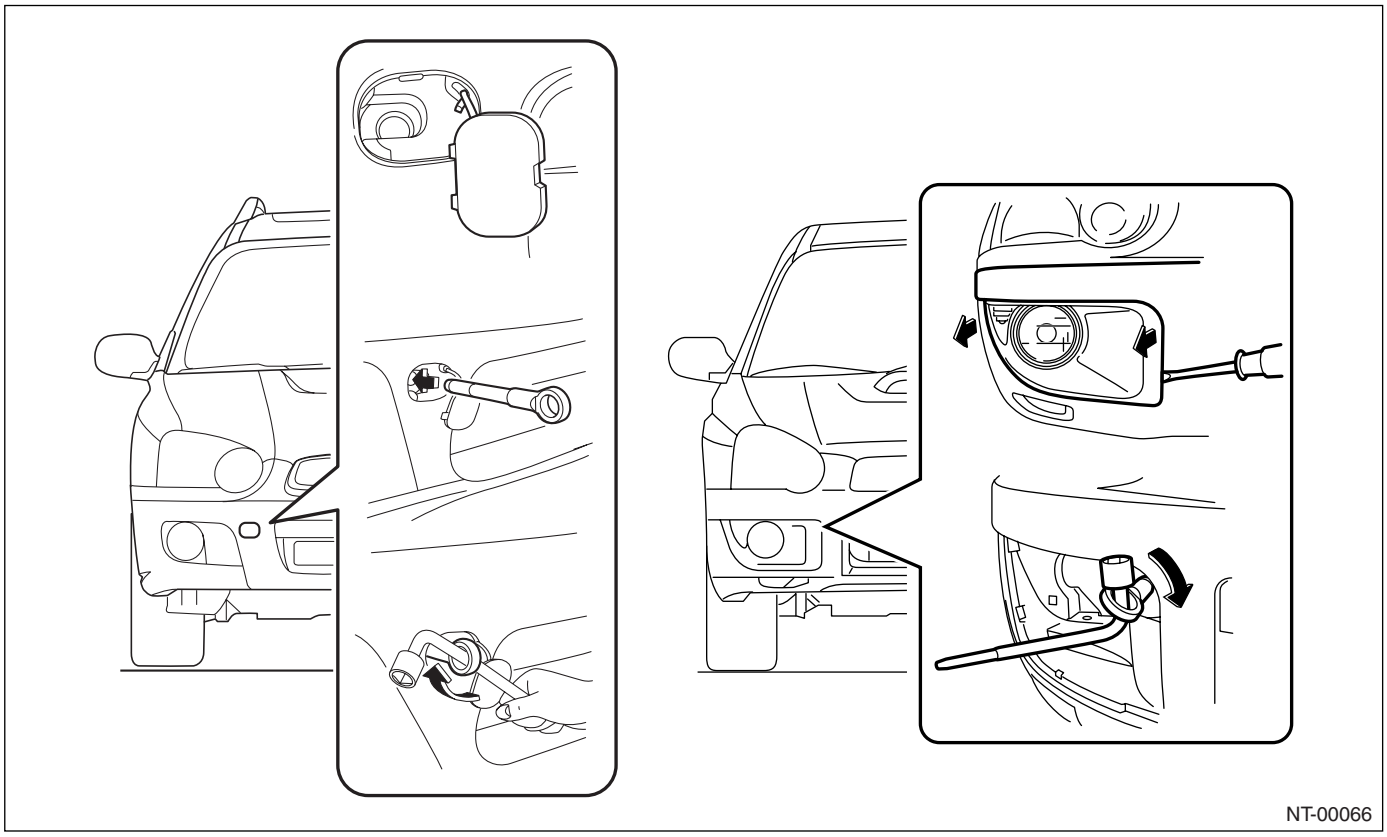

• Rear

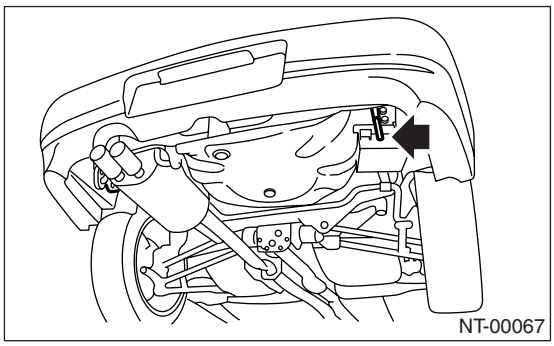

10.FRONT HOOD STAY INSTALLATION

• At the check and general maintenance

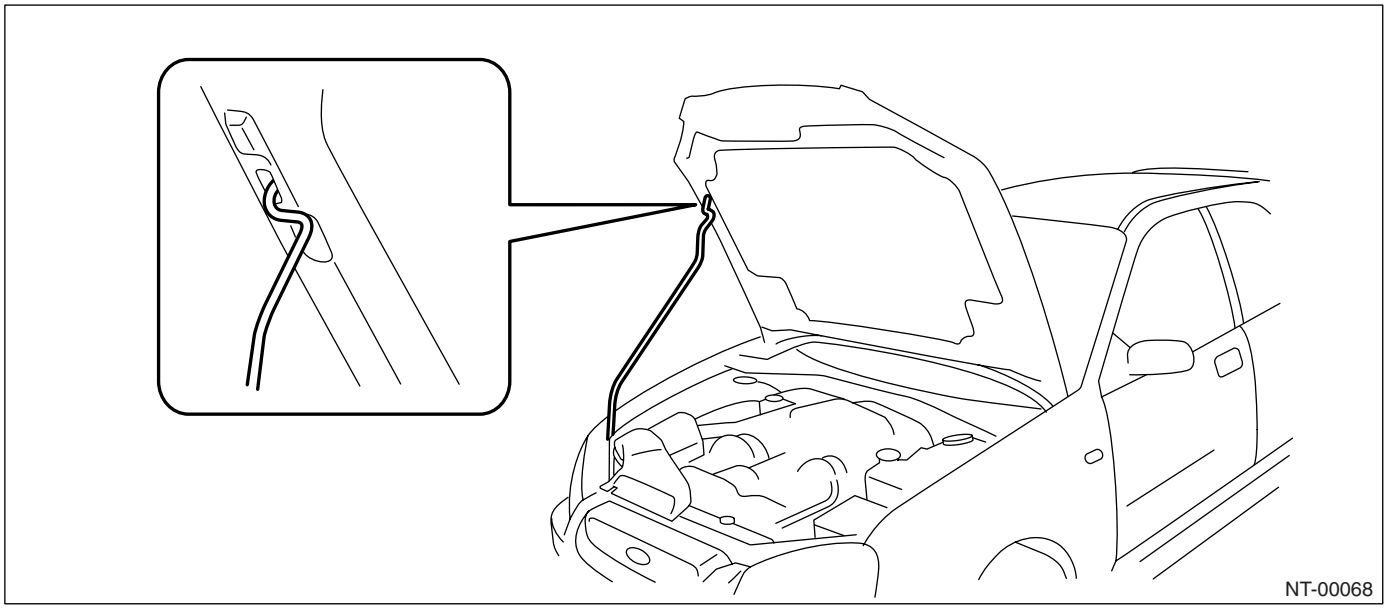

• When wider hood opening is necessary

Set stay into the hole of hood inner as shown in the figure below.

NOTE:
Before setting the hood in this position, remove the windshield washer hose attaching clip from the hood.

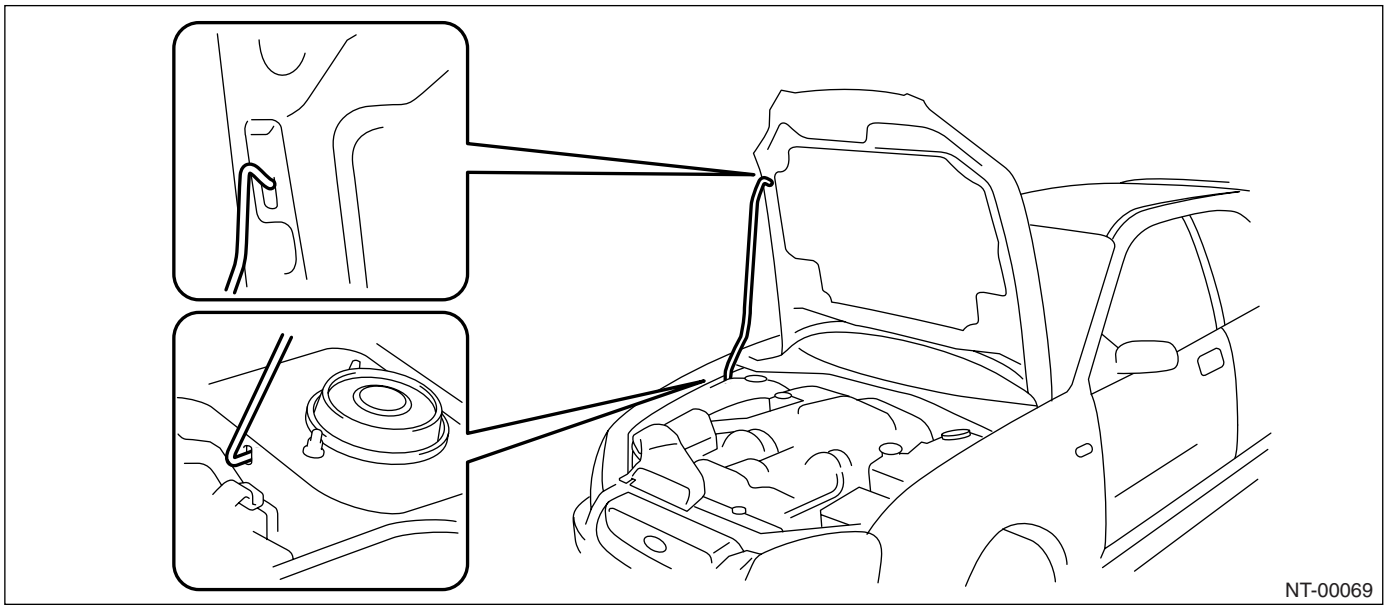

11.TRAINING

For information about training, contact a dealer or agent.

12.GENERAL SCAN TOOL

Using general scan tools will greatly improve efficiency of repairing engine electronic controls. The Subaru Select Monitor can be used to diagnose the engine and also the ABS, the air conditioner, and other parts.

IDENTIFICATION

ID

Page
1. Identification 2

1. Identification

A: IDENTIFICATION

1. IDENTIFICATION NUMBER AND LABEL LOCATIONS

The VIN (Vehicle Identification Numbers) is used to classify the vehicle.

- **POSITIONING OF THE PLATE LABEL FOR IDENTIFICATION**

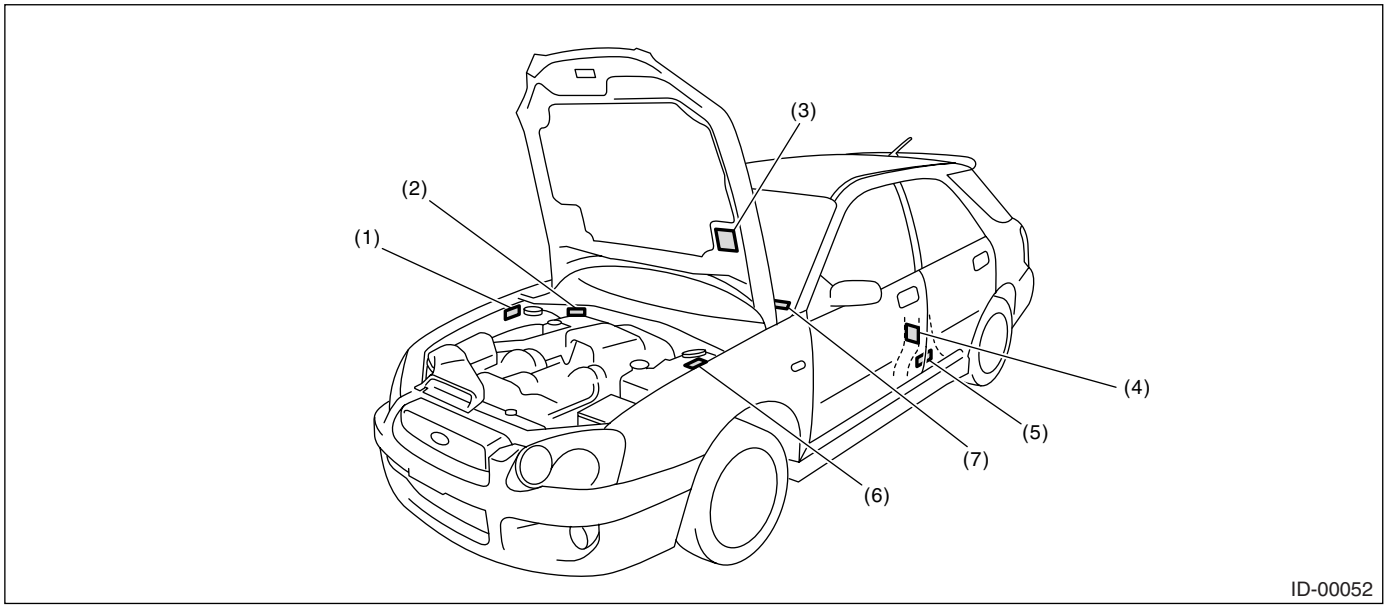

(1) ID plate (Europe model)
ADR compliance plate (Australia model)
(2) Vehicle identification number (VIN)
(3) Emission control label
(4) Tire inflation pressure label (Driver side) (Australia model)
Tire inflation pressure label (Driver side) (Except Australia model)
(5) Saudi Arabia plate (Saudi Arabia model)
Built date plate (Australia model)
(6) Model number plate
(7) Vehicle identification number (VIN) (Europe RHD model and Australia turbo model)

- **ENGINE**

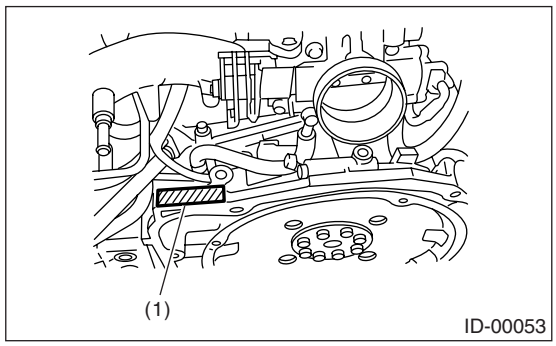

(1) Engine serial number

- **AUTOMATIC TRANSMISSION**

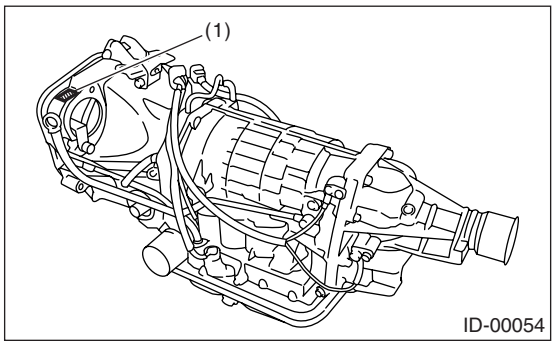

(1) Transmission serial number

IDENTIFICATION

• MANUAL TRANSMISSION

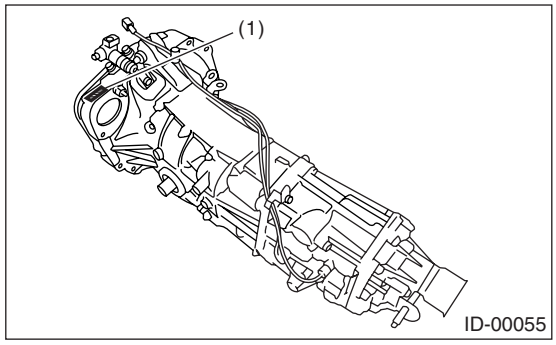

(1) Transmission serial number

• REAR DIFFERENTIAL

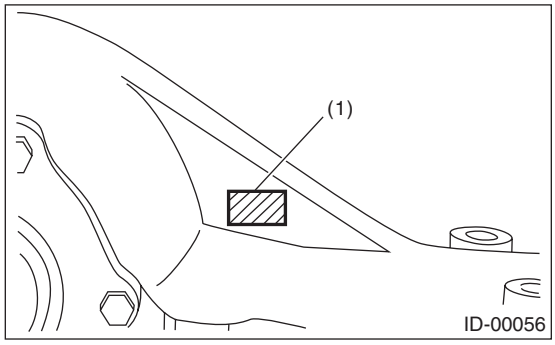

(1) Type (white paint)

• MODEL NUMBER PLATE

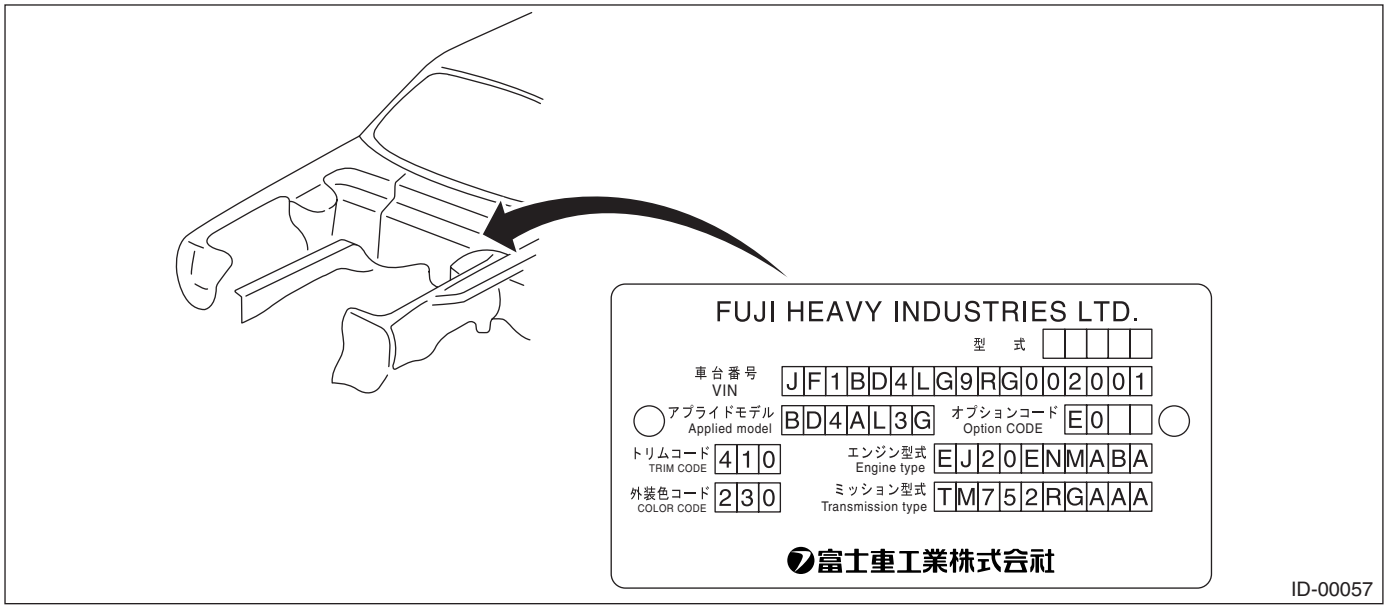

2. MEANING OF V.I.N.

The meaning of the VIN is as follows:

• Europe, Australia and General (Except GCC)

]JF1GD5LJ33G002001[

The starting and ending brackets ( ][ ) are stop marks.

Digits	Code	Meaning	Details
1 to 3	JF1	Manufacturer body area	JF1: Passenger car, FHI made
4	G	Car line	IMPREZA
5	D	Body type	D: 4 Door Sedan G: Wagon
6	5	Displacement	4: 1.6 L FWD 5: 1.6 L AWD 9: 2.0 L AWD A: 2.0 L AWD Turbo B: 2.0 L AWD High power turbo E: 2.5 L AWD
7	L	Steering position	K: RHD (Right-hand drive model) L: LHD (Left-hand drive model)
8	J	Engine & transmission	G: SOHC MPI 5-speed MT R: SOHC MPI 4-speed AT J: SOHC MPI Full-time AWD 5-speed MT K: SOHC MPI Full-time AWD 5-speed MT Dual range D: DOHC Turbo Full-time AWD 5-speed MT H: DOHC Turbo Full-time AWD 6-speed MT T: DOHC Turbo 4-speed AT Sport Shift
9	3	Drive type	3: Full-time AWD Single range 4: Full-time AWD Dual range 5: AWD AT 9: FWD
10	3	Model year	3: 2003MY
11	G	Factory location	G: FHI (Gunma)
12 to 17	002001	Serial number	—

• GCC countries (Saudi Arabia, etc.)

]JF1GD45MX3G002001[

The starting and ending brackets ( ][ ) are stop marks.

Digits	Code	Meaning	Details
1 to 3	JF1	Manufacturer body area	JF1: Passenger car, FHI made
4	G	Car line	IMPREZA
5	D	Body type	D: 4 Door Sedan G: Wagon
6	4	Displacement	4: 1.6 L AWD 8: 2.0 L AWD
7	5	Grade	5: TS 7: GX
8	M	Restraint	M: Manual belts, dual airbag
9	X	Check digit	0 to 9 & X
10	3	Model year	3: 2003MY
11	G	Transmission type	G: Full-time AWD 5-speed MT single range H: Full-time AWD 4-speed AT J: Full-time AWD 5-speed MT dual range
12 to 17	002001	Serial number	—

3. MODEL NUMBER PLATE

The model number plate indicates: the applied model, the option code, the trim code, the engine type, the transmission type, and the exterior color code. This information is helpful when placing orders for parts.

GD9CL5R

Digits	Code	Meaning	Details
1	G	Series	IMPREZA
2	D	Body style	D: 4 Door Sedan G: Wagon
3	9	Engine displacement Drive system Suspension system	4: 1.6 L FWD 5: 1.6 L AWD 9: 2.0 L AWD A: 2.0 L AWD Turbo B: 2.0 L AWD High power turbo E: 2.5 L AWD
4	C	Model year	C: 2003MY
5	L	Destination	K: Right-hand drive model market L: Left-hand drive model market
6	5	Grade	3: BASE 4: TS 5: GX 6: RS 7: OUTBACK 8: WRX E: STi
7	R	Transmission, fuel feed system	K: SOHC MPI Dual range 5-speed MT G: SOHC MPI 5-speed MT R: SOHC MPI 4-speed AT T: DOHC B MPI 4-speed AT Sport Shift J: SOHC MPI 5-speed MT AWD D: DOHC B MPI 5-speed MT AWD H: DOHC B MPI 6-speed MT AWD

The engine and transmission type are as follows:

• Engine

EJ161RX3AA

Digits	Code	Meaning	Details
1 and 2	EJ	Engine type	EJ: 4 cylinders
3 and 4	16	Displacement	16: 1.6 L 20: 2.0 L 25: 2.5 L
5	1	Fuel feed system	1: D-MPI SOHC-A 5: MPI Turbo 7: MPI High power turbo
6	R	Detailed specifications	Used when ordering parts. See the parts catalog for details.
7	X	Transmission	W: MT X: AT
8 to 10	3AA	Detailed specifications	Used when ordering parts. See the parts catalog for details.

• Transmission

TV1B4VYAAA

Digits	Code	Meaning	Details	
1	T	Transmission	T: Transmission	
2	V	Transmission type	Y: Full-time AWD MT center differential V: Full-time AWD AT center differential Z: Full-time AWD AT MPT	
3 and 4	1B	Classification	75: 5MT 85: 6MT 1A: AT 1B: AT	
5	4	Series	MT	4: 5MT 6: 6MT
			AT	4: AT
6	V	Transmission specifications	A: FWD 4-speed AT R: FWD Single Range 5-speed MT V: Full-time AWD 5-speed MT with viscous coupling center differential single range W: Full-time AWD 6-speed MT with viscous coupling center differential single range X: Full-time AWD 5-speed MT with viscous coupling center differential dual range Z: Full-time AWD 4-speed AT with MPT Y: Full-time AWD 4-speed AT with VTD	
7 to 10	YAAA	Detailed specifications	Used when ordering parts. See the parts catalog for details.	

• Rear differential 1

VA1

Code	Reduction gear ratio	LSD
XN	4.111	No
XP	4.444	No

• Rear differential 2

EG

Code	Reduction gear ratio	LSD
EG	3.900	No
ER	3.700	Viscous
EM	4.444	SURETRAC®
EJ	4.111	Viscous
EF	3.545	Viscous
HJ	3.545	SURETRAC®
HG	3.900	SURETRAC®

• Option code

ECPS

Digits	Code	Meaning	Details
1 and 2	EC	Destination	EC: EC KO: KO K4: K4 KS: KS EK: EK KA: KA K1: K1 E2: E2
3 and 4	PS	Main option of vehicle	—

RECOMMENDED MATERIALS

RM

Page
1. Recommended Materials 2

1. Recommended Materials

A: RECOMMENDED MATERIALS

1. GENERAL

To insure the best performance, always use the specified oil, gasoline, adhesive, sealant, etc. or a substitute of equivalent quality.

2. FUEL

Always use a gasoline of the same or higher octane value than specified in the owner's manual. Ignoring the specifications below will result in damage or poor operation of the engine and fuel injection system. Use the specified gasoline to correct performance.

• Unleaded gasoline

Use unleaded gasoline and not leaded gasoline on vehicles with catalytic converter installed to reduce air pollution. Using leaded gasoline will damage the catalytic converter.

Model	Petrol	RON
SOHC	Unleaded	More than 95 RON More than 90 RON*
DOHC turbo	Unleaded	More than 98 RON

*: Australia specification

• Leaded gasoline

On vehicles without catalytic converter, use leaded gasoline with an octane value of 90 RON or higher.

3. LUBRICANTS

Use either the lubricants in the table below or equivalent lubricants. See the table below to choose the correct SAE viscosity.

Lubricant	Recommended			Alternative
	API Spec.	CCMC Spec.	ACEA Spec.	API Spec.
Engine oil	SL, SJ Grade “Energy conserving”, or SH 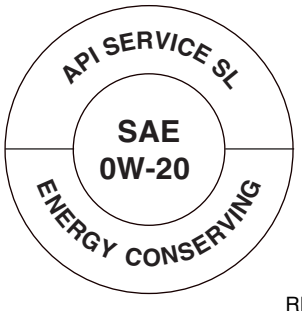 RM-00006 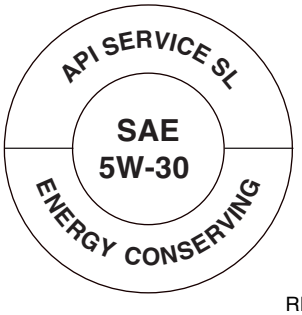 RM-00001 RM-00002	G4 or G5	A1, A2 or A3	SG, SF
Manual transmission oil	GL-5	—	—	—
AT front differential gear oil	GL-5	—	—	—
Rear differential gear oil	GL-5	—	—	—

SAE viscosity No. and applicable temperature
Engine oil
SOHC model

SAE viscosity No. and applicable temperature

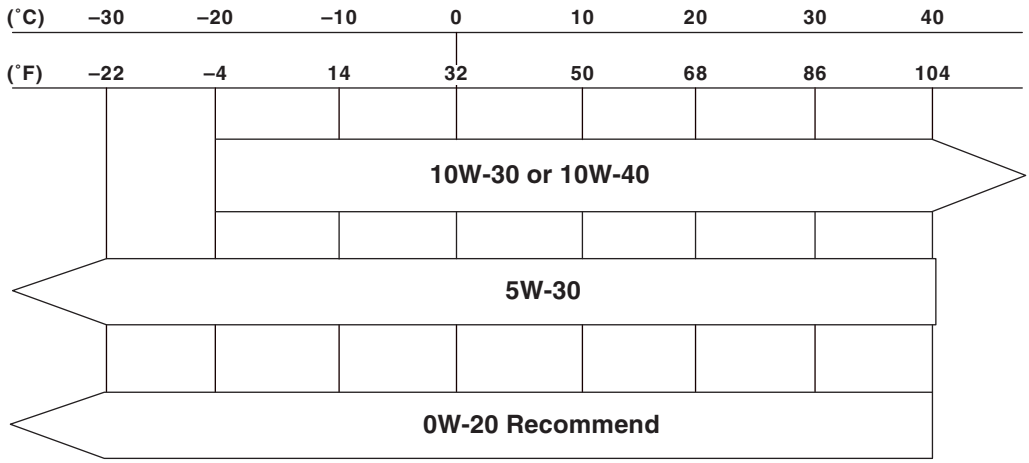

RM-00007

DOHC turbo model

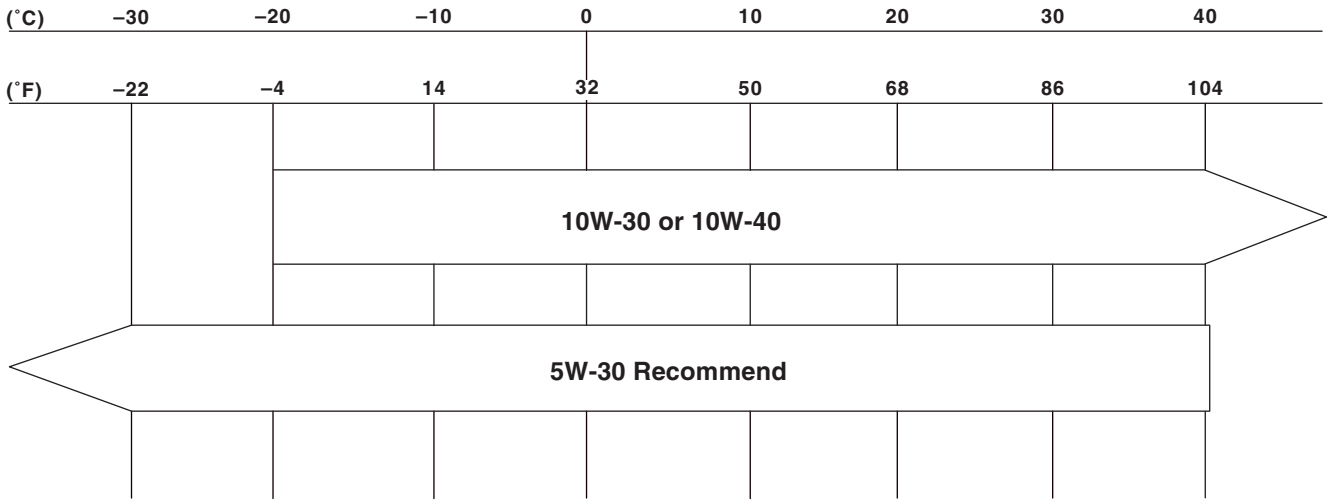

RM-00003

SAE viscosity No. and applicable temperature

Manual transmission oil and rear differential gear oil

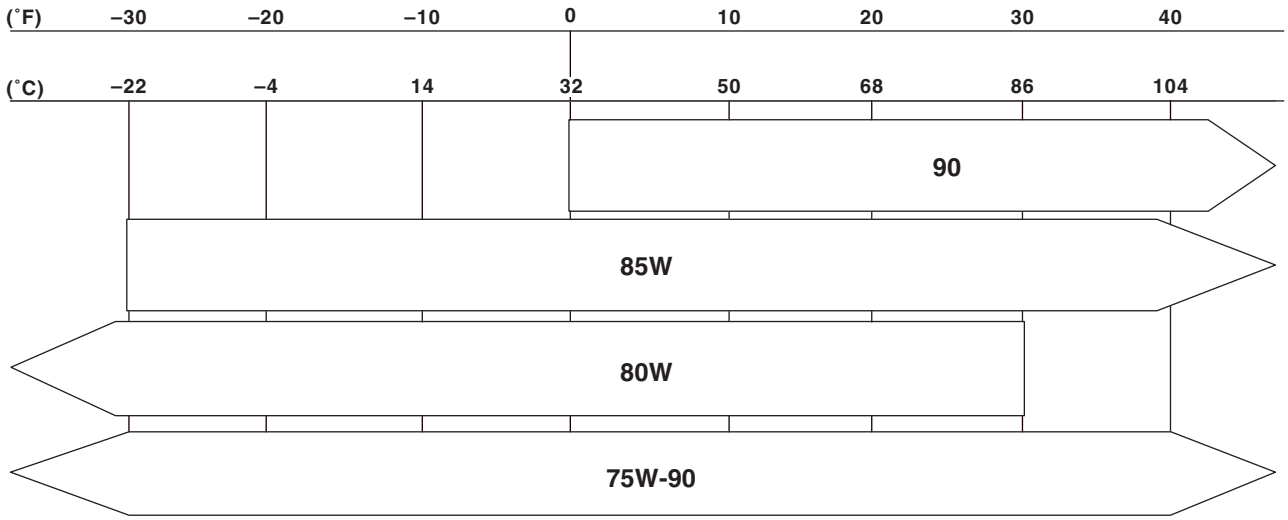

RM-00004

AT front differential gear oil

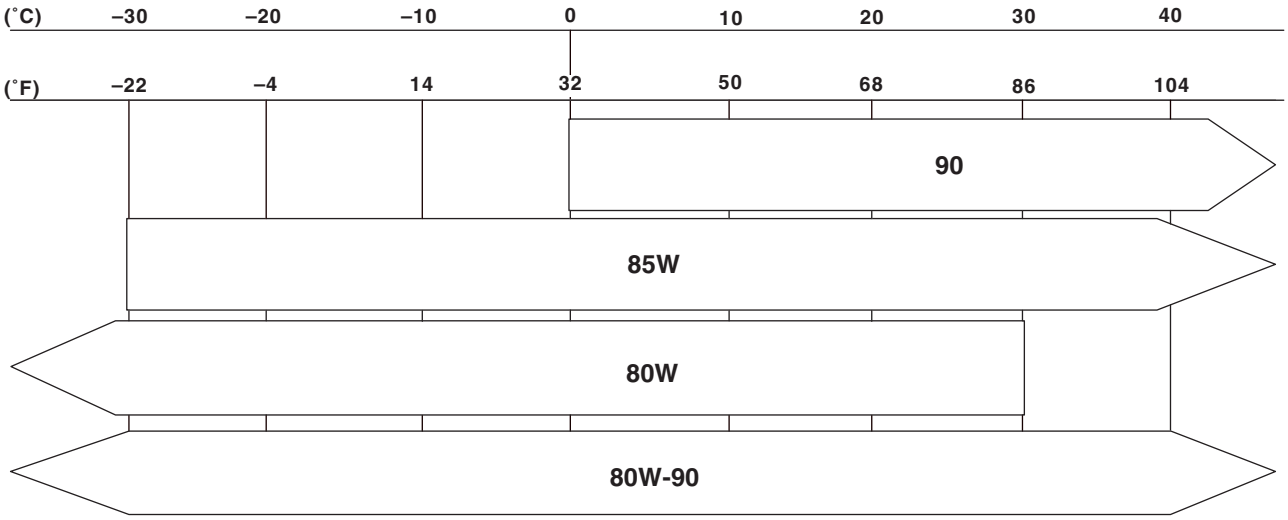

RM-00005

4. FLUID

Use the fluids specified in the table below. Do not mix two different kinds or makes of fluid.

Fluid	Recommended	Alternative	Remarks
Automatic transmission fluid	DEXRON III	—	—
Power steering fluid	DEXRON III	—	—
Brake fluid	FMVSS No. 116 DOT3	—	—
Clutch fluid	FMVSS No. 116 DOT3	FMVSS No. 116 DOT4	—

5. COOLANT

Use genuine coolant to protect the engine.

Coolant	Recommended	Item number	Alternative
Coolant	SUBARU coolant	000016218	None
Water for dilution	Distilled water	—	Tap water (Soft water)

6. REFRIGERANT

Standard air conditioners on Subaru vehicles use HFC134a refrigerant. Do not mix it with other refrigerants. Also, do not use any compressor oil except for DH-PR.

Air conditioner	Recommended	Item number	Alternative
Refrigerant	HFC134a	—	None
Compressor oil	DH-PR	—	None

7. GREASE

Use the grease and supplementary lubricants shown in the table below.

Grease	Application point	Recommended	Item number	Alternative
Supplementary lubricants	• O_2 sensor • Bolts, etc.	SUBARU CRC	004301003	—
Grease	MT main shaft	NICHIMOLY N-130	—	—
	Clutch master cylinder push rod	Silicolube G-40M	004404003	—
	• Gear shift lever • Select lever • Clutch operating cylinder • Accelerator pedal • Clutch pedal • Brake pedal • Clutch bearing • Clutch release lever	KOPR-KOTE	003603001	—
	Steering gear box	Valiant grease M-2	003608001	—
	• Disc brake • Drum brake wheel cylinder	Niglube RX-2	K0779GA102	—
	• Drum brake • Brake shoe	Molykote No. 7439	003602001	—
	Brake pad	Molykote AS-880N	K0777YA010	—
	Front axle SFJ	SSG-6003	28093TA000	—
	• Front axle EBJ • Front axle BJ • Rear axle EBJ	NTG2218	28093AA000	—
	Rear axle BJ87	NTG2218-M	28395FE010	—
	Rear axle BJ	Molylex No. 2	003601001	—
	Rear axle DOJ	VU-3A702	23223GA050	—
	• Throttle cable end • Door latch • Door striker	Silicolube G-30M	004404002	—

8. ADHESIVES

Use the adhesives shown in the table below, or equivalent.

Adhesive	Application point	Recommended	Item number	Alternative
Adhesive	Windshield, rear window glass, rear quarter glass and body	Dow Automotive's Adhesive: Gurit-ESSEX Betaseal 1502 or equivalent Glass primer: Betawipe VP 04604 or Betawipe 5001 Paint surface primer: Betaprime 5402	—	—
	Inner rearview mirror base	REPAIR KIT IN MR	65029FC000	—
	Soft vinyl	Cemedine 540	—	3M's EC-776, EC-847 or EC-1022 (Spray type)
	Momentary sealant	Cemedine 3000	—	Armstrong's Eastman 910

9. SEAL MATERIAL

Use seal material shown in the table below, or equivalent.

Seal material	Application point	Recommended	Item number	Alternative
Seal material	• Cylinder block • Torque converter clutch case • Transmission oil pan (6MT model)	Three Bond 1215	004403007	Dow Corning's No. 7038
	Transmission oil pan (AT model)	Three Bond 1217B	K0877YA020	—
	Rear differential	Three Bond 1324	004403042	—
	Rear differential	Three Bond 1105	004403010	Dow Corning's No. 7038
	Steering adjusting screw	Three Bond 1141	004403006	—
	Camshaft cap	Three Bond 1280B	K0877YA018	—
	• Front sealing cover • Rear sealing cover	3M Butyl Rubber 8626	—	—

PRE-DELIVERY INSPECTION

PI

Page
1. Pre-delivery Inspection.....2

1. Pre-delivery Inspection

A: GENERAL

The purposes of the pre-delivery inspection (PDI) are as follows.

- Remove the additional parts used for ensuring the vehicle quality during transportation and restore the vehicle to its normal state.
- check that the vehicle before delivery is in a normal state.
- Check for any damage or missing parts that may have taken place during transportation or storage.
- Make sure to provide a complete vehicle to the customer.

Because of the above reasons, all SUBARU distributor service must always carry out the PDIs before delivering a vehicle.

In addition, all franchised shops and PDI centers must check the status of every vehicle received to identify who is responsible for any possible defects.

B: PDI PROCEDURE

Follow the procedures shown in the table below.

Static Checks Just After Vehicle Receipt

Step	Check point
1. Appearance check	(1) If the vehicle is covered with protective coating, visually check the vehicle body for damage and dents. If the protective coating has been removed, visually check the body paints for small areas of damage or stains. (2) Visually check the glass and light lenses for any damage and cracks or excessive gaps to the body sheet metal. (3) Visually check the plated parts for any damage.
2. Tire check	(1) Check the tires for damage, abnormal conditions, and dents on the wheels. (2) Check the tire air pressure.
3. Fuse installation	If the vehicle is about to be delivered to the customer, attach a room lamp fuse.
4. Connection of air conditioner harness	If the vehicle is about to be delivered to the customer, connect the air conditioner harness.
5. Check the doors for lock/unlock and open/close operations.	(1) Using the key, check that the door can be locked and unlocked normally. (2) Open and close all doors to see that there are no abnormal conditions.
6. Operation check of double lock	Check that the double lock operates normally.
7. Operation check of the child safety lock system	Check that the child safety lock system operates normally.
8. Check the trunk lid for open/close operations.	(1) Operate the trunk lock release lever to check that the trunk opens normally. (2) Using the key, check that the trunk lid can be unlocked normally. (3) Open and close the trunk lid to see that there are no abnormal conditions.
9. Check the rear gate for lock/unlock and open/close operations.	(1) Check if the rear gate can be unlocked normally through the emergency hole. (2) Open and close the rear gate to see that there are no abnormal conditions. (3) Operate the power door locking switch to check that the rear gate is locked and unlocked normally.
10. Operation check of fuel lid opener lock release lever	Operate the fuel lid opener to check that the fuel lid is unlocked normally.
11. Accessory check	Check that the following accessories are provided: • Owner's manual • Warranty booklet • Service booklet • Spare key • Jack • Tool set • Spare tire
12. Operation check of hood lock release system	Operate the hood lock release lever to check that the hood opens normally.
13. Battery	Check the battery for any abnormal conditions such as rust and trace of battery fluid leaks.
14. Brake fluid	Check the fluid amount.
15. Engine oil	Check the oil amount.
16. Transmission fluid	Check the fluid amount.
17. AT front differential oil	Check the AT front differential oil amount.
18. Coolant	Check the coolant amount.
19. Clutch fluid	Check the clutch fluid amount.
20. Window washer fluid	Check the window washer fluid amount.
21. Hood latch check	Check that the hood is closed and latched securely.
22. Keyless entry system	Check that the keyless entry system operates normally.
23. Seat	(1) Check the seat surfaces for smears or dirt. (2) Check the seat installation conditions and functionality.

Step	Check point
24. Seat belt	Check the seat belt installation conditions and functionality.
25. Wheel alignment	Check that the wheel alignments are properly adjusted.

Checks with the Engine Running

Step	Check point
26. Test mode connector	Test mode connector.
27. Starting condition	Start the engine and check that the engine starts smoothly.
28. Exhaust system	Check that the exhaust noise is normal and no leaks are found.
29. Indicator light	Check that all the indicator lights operate normally.
30. Clock	Check that the clock operates normally.
31. Radio	Check that the radio system operates normally.
32. Front accessory power supply socket	Check that the front accessory power supply socket operates normally.
33. Lighting system	Check that the lighting systems operate normally.
34. Window washer	Check that the window washer system operates normally.
35. Wiper	Check that the wiper system operates normally.
36. Power window operation check	Check the power window for correct operations.

Dynamic Test with the Vehicle Running

Step	Check point
37. Brake test	Check that the foot brake operates normally.
38. Parking brake	Check that the parking brake operates normally.
39. AT shift control	Check the AT shift patterns are correct.
40. Heater & ventilation	Check that the heater & ventilation system operates normally.
41. Air conditioner	Check that the air conditioner operates normally.
42. Cruise control	Check that the cruise control system operates normally.

Checks after Dynamic Test

Step	Check point
43. ATF level	Check that the ATF level is normal.
44. Power steering fluid level	Check that the power steering fluid level is normal.
45. Fluid leak check	Check for fluid/oil leaks.
46. Water leak check	Spray the vehicle with water and check for water leaks.
47. Appearance check 2	(1) Remove the protective coating (if any). (2) Check the body paints for damage and smears. (3) Check the plated parts for damage and rust.

1. APPEARANCE CHECK

• If the vehicle is covered with protective coating, visually check the vehicle body for damage and dents.
• If there is no protective coating, check the body paints for small areas of damage or stains and repair as necessary.
• Check the window glass, door glass, and lights for any cracks or damage and repair or replace the parts as necessary.
• Check the plated parts, such as the grilles and door knobs, for damage or loss of gloss and repair or replace the parts as necessary.

2. TIRE CHECK

• Check the tire outer faces for any damage.
• Check the tire air pressure by referring to the following table.

Tire size	Tire inflation pressure kPa (kg/cm^2, psi)	
	Front	Rear
185/70R14	220 (2.2, 32)	200 (2.0, 29)
195/60R15	220 (2.2, 32)	200 (2.0, 29)
P205/55R16	220 (2.2, 32)	200 (2.0, 29)
205/50R16	220 (2.2, 32)	200 (2.0, 29)
215/45ZR17	230 (2.3, 33)	220 (2.2, 32)
225/45ZR17	230 (2.3, 33)	190 (1.9, 28)

3. FUSE INSTALLATION

A vehicle just delivered has no fuse for the room lamp circuit to prevent battery discharge. Attach a 15 A fuse (A) as shown in the figure.

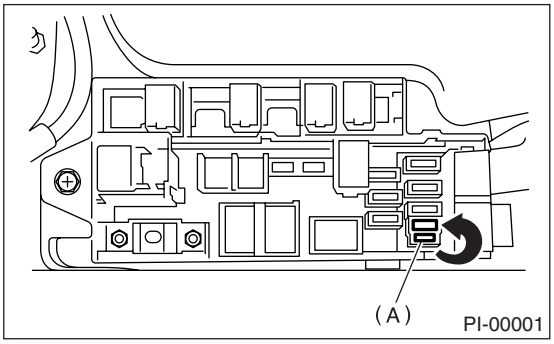

4. CONNECTION OF AIR CONDITIONER HARNESS

A vehicle just delivered has its air conditioner harness disconnected to protect the air conditioner compressor. Connect the harness as shown in the figure.

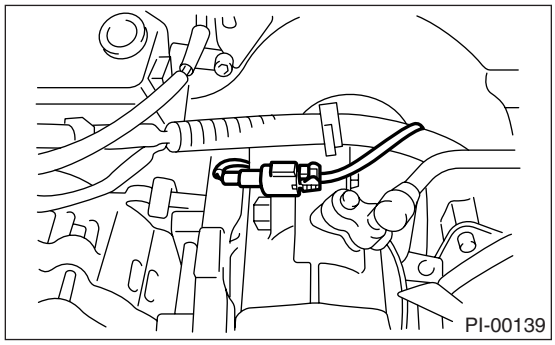

5. CHECK THE DOORS FOR LOCK/UNLOCK AND OPEN/CLOSE OPERATIONS

1) Using the key, lock and unlock the door several times to check for normal operation. Open and close the door several times for smooth movement.

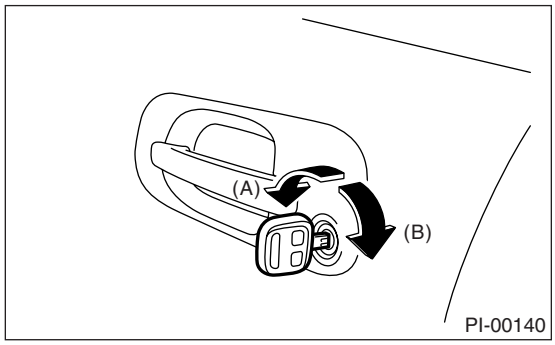

(A) Unlock
(B) Lock

2) Close the driver's door completely, and place the door lock knob (A) to the lock position. Then pull inner remotes (B) to ensure that doors will not open. For other doors, place the door lock knob (A) to the lock positions and then pull the inner remote to ensure that the doors will not open.

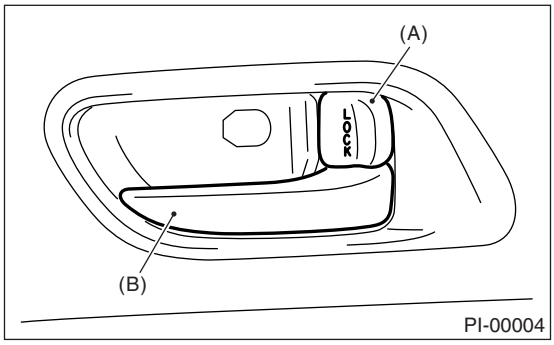

(A) Door lock knob
(B) Inner remote

3) Press the driver's side power door lock switch to lock side. Check that all doors including rear gate are locked.

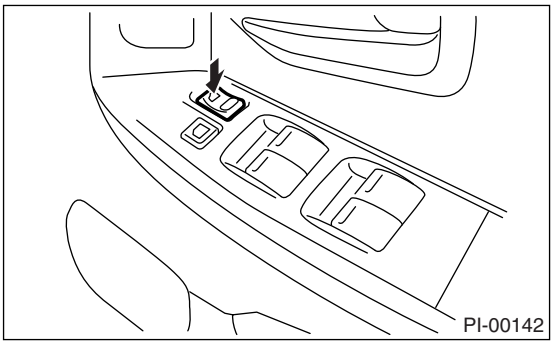

4) Press the driver's side power door lock switch to unlock side. Check that all doors including rear gate are unlocked.

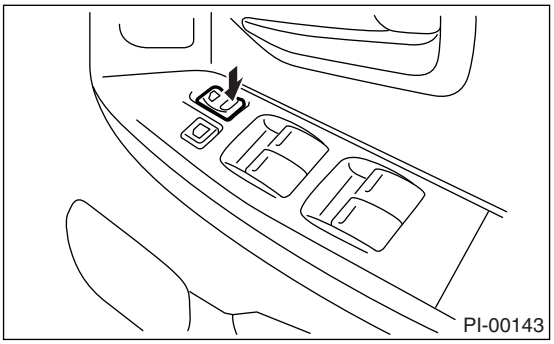

6. CHECK DOUBLE LOCK OPERATION

1) Fully open all the windows.
2) Remove the key.
3) Lock all the doors using the door key cylinder or transmitter.
4) Verify that all the doors including rear gate are not unlocked when pressing power door lock switch to unlock side.
5) Verify that the door is not opened when operating door lock knob to unlock position and pulling inner remote. Perform the same check for other doors.
6) Check that all the doors are unlocked when door is unlocked using door key cylinder or transmitter, or ignition switch is turned to ON.

7. CHECK THE OPERATION OF CHILD SAFETY LOCKS

1) Set the child safety lock on both rear doors to the lock positions.
2) Close the rear doors completely.
3) Check that the lock levers of the rear doors are in the unlock positions. Then, pull the inner remotes of the rear doors to ensure that the doors will not open.
4) Next, pull the outside door handles of the rear doors to ensure that the doors will open.

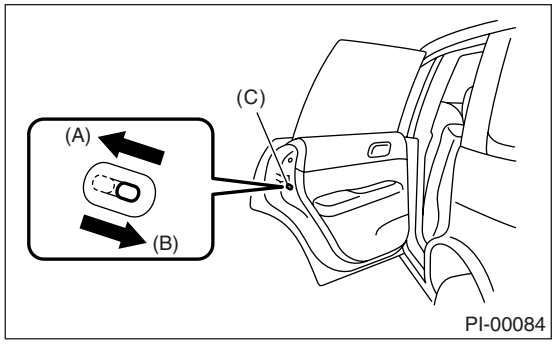

(A) Unlock
(B) Lock
(C) Child safety lock

8. CHECK THE TRUNK LID FOR OPEN/ CLOSE OPERATIONS

1) Operate the trunk lock release lever and verify that the trunk lid opens.
2) Using the key, open the trunk lid several times to check for normal operation.
3) Open and close the trunk lid several times for smooth movement.

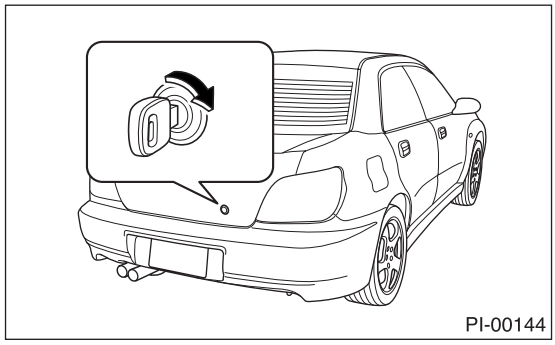
PI-00144

4) Set the trunk lid release lever to the cancel position, and check that the trunk lid can only be opened with the key.

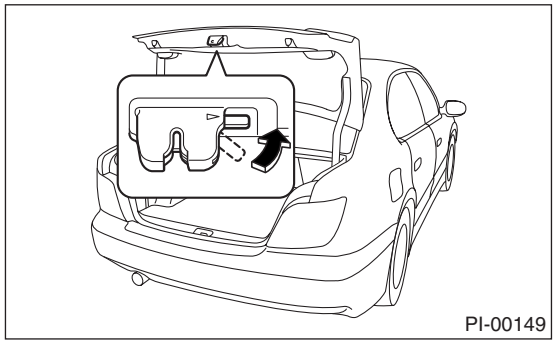
PI-00149

9. CHECK THE REAR GATE FOR LOCK/ UNLOCK AND OPEN/CLOSE OPERATIONS

1) Open and close the rear gate several times for smooth movement.
2) Operate the rear gate lever to check that the rear gate is locked and unlocked normally.
(1) Remove the blind cover inside the rear gate.

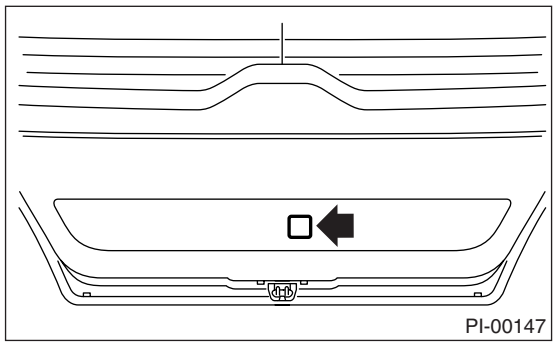
PI-00147

(2) Check that the rear gate is locked correctly when lever is operated using a finger.

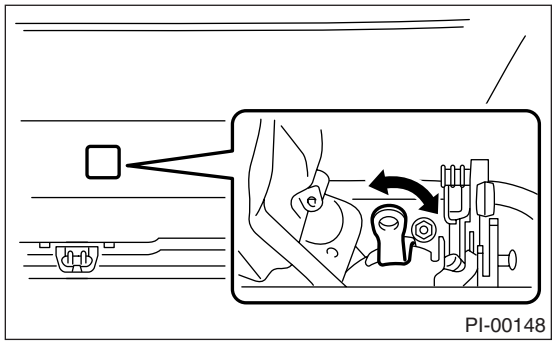
PI-00148

10.OPERATION CHECK OF FUEL LID OPENER LOCK RELEASE LEVER

Operate the fuel lid opener and verify that the fuel lid opens normally. Check that the filler cap is securely closed.

11.ACCESSORY CHECK

Check that the following accessories are provided in the luggage compartment or cargo area.
- Owner's manual
- Warranty booklet
- Service booklet
- Spare key
- Jack
- Tool set
- Spare tire

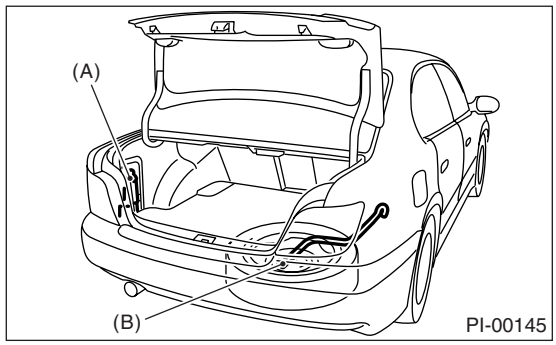

PI-00145

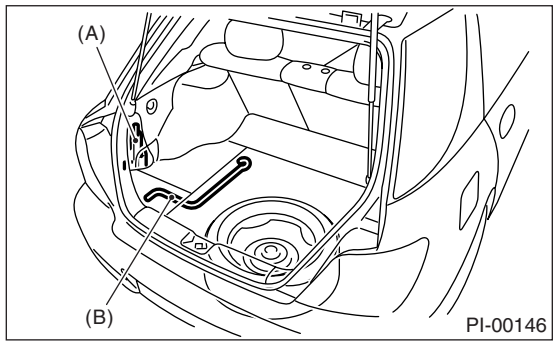

PI-00146

(A) Jack
(B) Jack handle

12.OPERATION CHECK OF HOOD LOCK RELEASE SYSTEM

Operate the hood release knob (A) and check that the hood is unlocked normally.

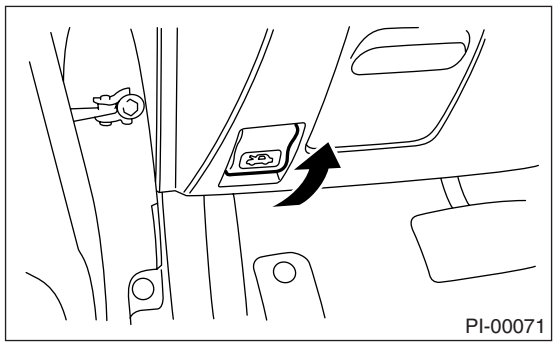

Operate the lever (A) and check that the hood is opened normally. Then support the hood with hood stay.

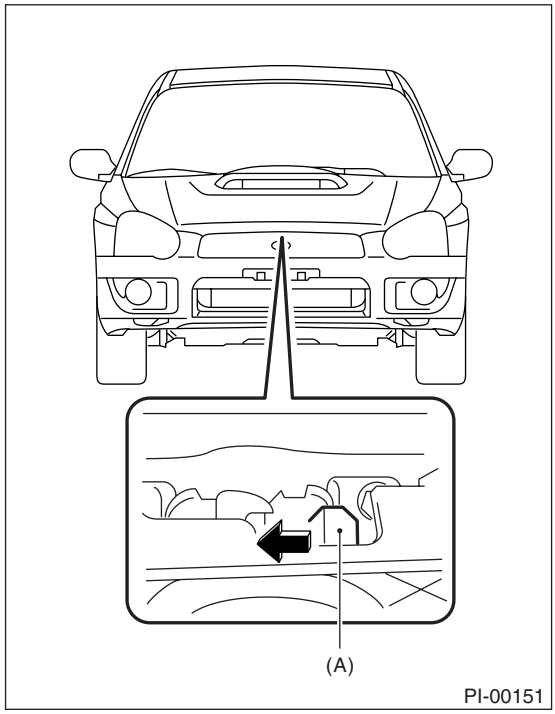

13.BATTERY

Check the battery terminals to make sure that no rust or corrosions due to fluid leaks are found. Check that the battery caps are securely tightened.

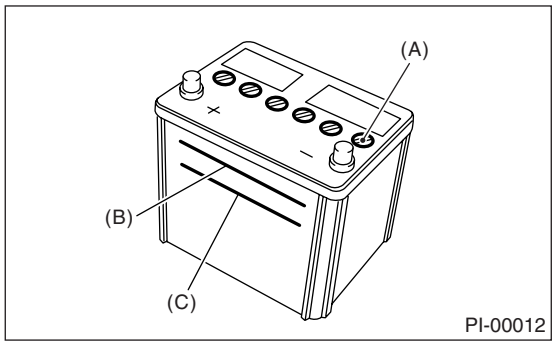

(A) Cap
(B) Upper level
(C) Lower level

14.BRAKE FLUID

Check the brake fluid amount. If the amount is insufficient, carry out a brake line test to identify brake fluid leaks and check the brake operation. After that, refill the brake fluid tank with the specified type of fluid.

15.ENGINE OIL

Check the engine oil amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified engine oil.

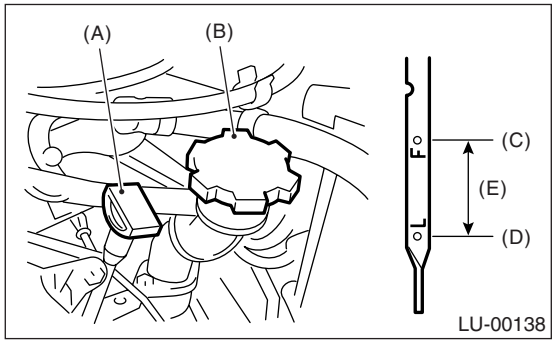

(A) Oil level gauge
(B) Engine oil filler cap
(C) Upper level
(D) Lower level
(E) Approx. 1.0 ℓ (1.1 US qt, 0.9 Imp qt)

16.TRANSMISSION FLUID

Check the transmission fluid amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified fluid.

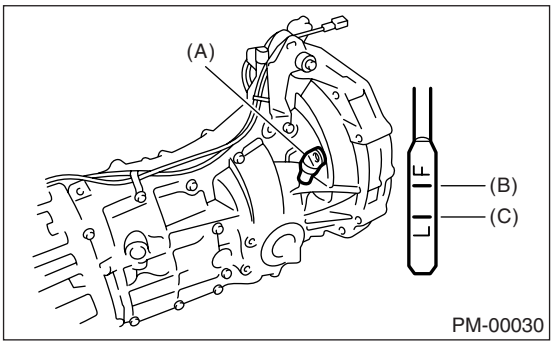

(A) Oil level gauge
(B) Upper level
(C) Lower level

17.AT FRONT DIFFERENTIAL OIL

Check the AT front differential oil amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified AT front differential oil.

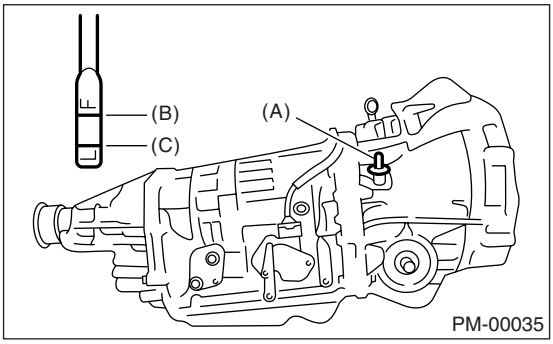

(A) Oil level gauge
(B) Upper level
(C) Lower level

18.COOLANT

Check the coolant amount on the reservoir. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of coolant with the specified concentration.

19.CLUTCH FLUID

Check the clutch fluid amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified fluid.

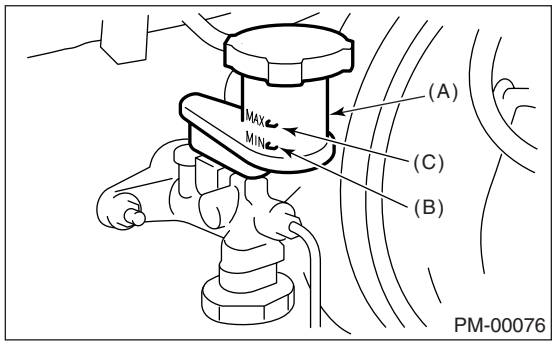

(A) Reservoir tank
(B) MIN level
(C) MAX level

20.WINDOW WASHER FLUID

Check the window washer fluid amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of washer fluid commercially available.

21.HOOD LATCH CHECK

Retract the hood stay and close the hood. Check that the hood is securely latched.

22.KEYLESS ENTRY SYSTEM

Check the keyless entry system operations as follows.

• Remove the key from the ignition switch and close all the doors including rear gate (wagon model).
• Press the “LOCK” button on the transmitter momentarily once and check that all the doors are locked and the hazard light flashes once.

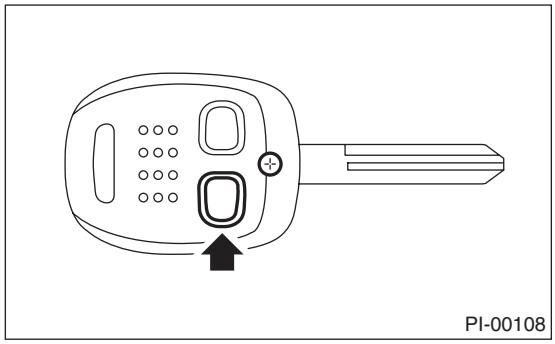

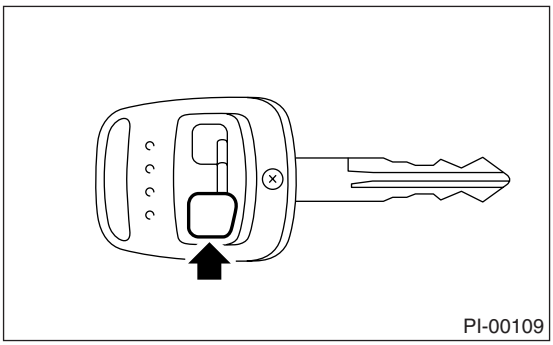

• Press the “OPEN” button on the transmitter momentarily once and check that all doors are unlocked, the hazard light flashes twice and the interior light illuminates.
• Close all doors and rear gate, press the “LOCK” button of the transmitter. Press the “OPEN” button of the transmitter and wait for 30 seconds. Check that all doors and the rear gate are automatically locked again.

23.SEAT

Check that each seat provides full functionality in sliding and reclining. Check all available functions of the rear seat such as a trunk-through center arm rest.

24.SEAT BELT

Pull out the seat belt and then release it. Check that the belt webbing retracts smoothly.

25.WHEEL ALIGNMENT

Check the wheel alignments. <Ref. to FS-7, Wheel Alignment.> and <Ref. to RS-10, Wheel Alignment.>

26.TEST MODE CONNECTOR

Turn the ignition switch to ON and check that the malfunction indicator light starts blinking. If the light blinks, return the ignition key to LOCK and disconnect the test mode connector. Then, turn the ignition key to ON again. If the malfunction indicator light blinks at that time in spite of the disconnected test mode connector, carry out an engine diagnosis.

• With OBD MODEL

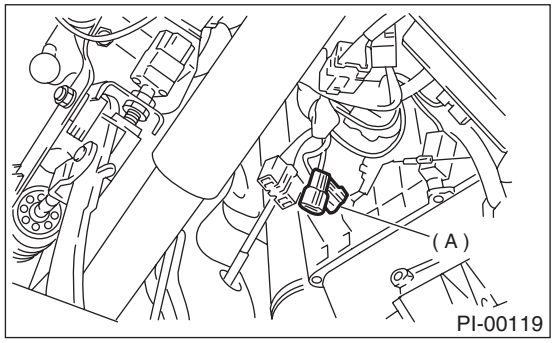

(A) Test mode connector (Green)

• Without OBD MODEL

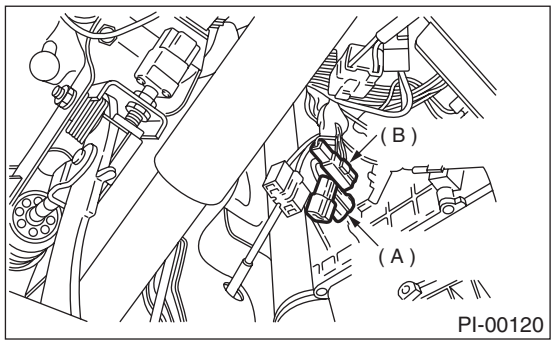

(A) Read memory connector (Black)
(B) Test mode connector (Green)

27.STARTING CONDITION

Start the engine and check that the engine starts smoothly. If any battery voltage problems are found, recharge or replace the battery. If any abnormal noises are observed, immediately stop the engine and check and repair the necessary components.

28.EXHAUST SYSTEM

Listen to the exhaust noise to see if no abnormal noises are observed.

29.INDICATOR LIGHT

Check that all the indicator lights are off.

30.CLOCK

Check the clock for normal operations and enough accuracy.

31.RADIO

Check the radio for full functionality and normal noise level. Also check the CD unit operations.

32.FRONT ACCESSORY POWER SUPPLY SOCKET

Check the front accessory power supply socket operations.

33.LIGHTING SYSTEM

- Check the headlight operations.
- Check the stop light operations.
- Check the other lights for normal operations.

34.WINDOW WASHER

Check that the window washer system injects washer fluid to the specified area of windshield shown in the figure.

Front injection position:

A: 350 mm (13.78 in)
B: 162 mm (5.91 in)
C: 300 mm (11.81 in)
D: 500 mm (23.62 in)

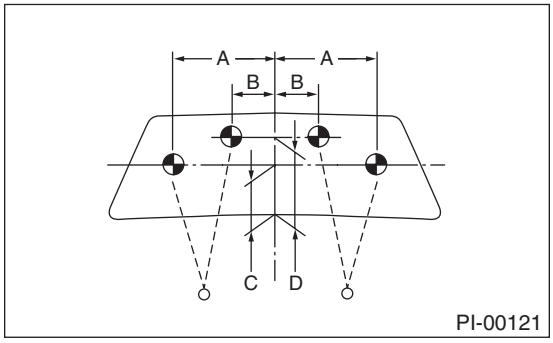

Rear injection position:

A: 39 mm (2.36 in)
B: 72°

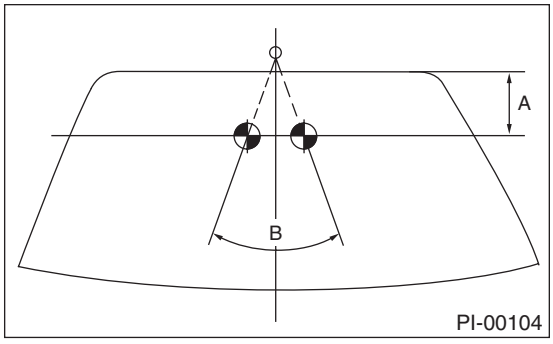

35.WIPER

Check the front and rear wipers for normal operations.

36.POWER WINDOW OPERATION CHECK

Manipulate the power window switches one by one to check that each of the power windows goes up and down with no abnormal noises.

37.BRAKE TEST

Check the foot brake for normal operations.

38.PARKING BRAKE

Check the parking brake for normal operations.

39.AT SHIFT CONTROL

Set the AT select lever to each gear position while checking that the demanded gear position is correctly attained.

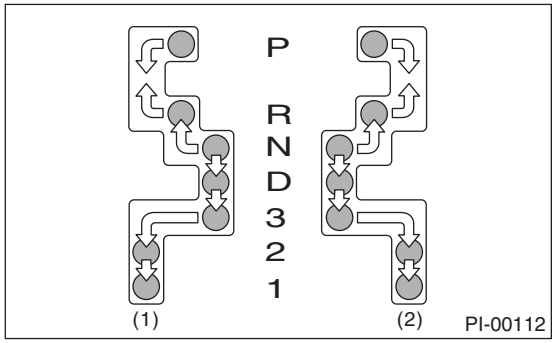

(1) RHD model
(2) LHD model

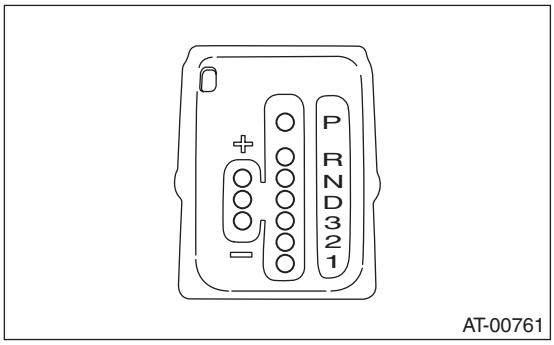

Selector Position	Gear Position			
	1st	2nd	3rd	4th
D	Yes	Yes	Yes	Yes
3	Yes	Yes	Yes	—
2	Yes	Yes	—	—
1	Yes	—	—	—
Sports shift	Yes	Yes	Yes	Yes

40.HEATER & VENTILATION

Operate the heater and ventilation system to check for normal outlet selection, air inlet selection, airflow and heating capacity.

41.AIR CONDITIONER

Operate the air conditioner. Check that the A/C compressor operates normally and enough cooling is provided.

42.CRUISE CONTROL

Operate the cruise control system. Check that the system is activated and deactivated correctly.

43.ATF LEVEL

Check that the ATF level is normal. If insufficient, check that no leaks are found. Then add the necessary amount of the specified ATF.

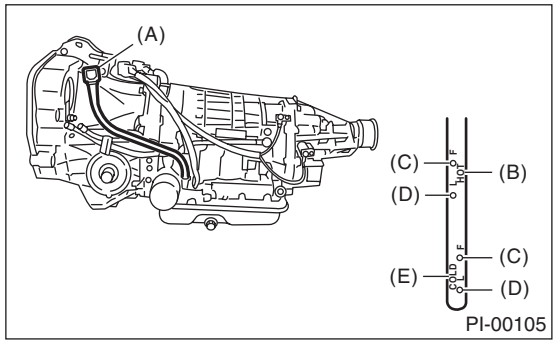

(A) Level gauge
(B) Check position when “HOT”
(C) Upper level
(D) Lower level
(E) Check position when “COLD”

44.POWER STEERING FLUID LEVEL

Check that the power steering fluid level is normal. If insufficient, check that no leaks are found. Then add the necessary amount of the specified power steering fluid.

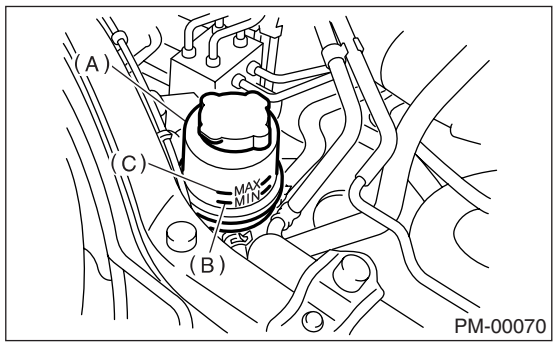

(A) Reservoir tank
(B) MIN level
(C) MAX level

45.FLUID LEAK CHECK

Check the entire areas of the vehicle for any trace of coolant/oil/fluid leaks.

46.WATER LEAK TEST

Spray the vehicle with water and check that no water enters the passenger compartment.

- Before performing the water leakage test, remove anything that may obstruct the operation or which must be kept dry.
- Close all windows completely, and then close all doors tightly. Close the hood and trunk lid before starting the test.
- Connect a hose to a tap, and spray water on the vehicle. The rate of water discharge must be approx. 20 — 25 ℓ (5.3 — 6.6 US gal, 4.4 — 5.5 Imp gal) per minute.

When spraying water on areas adjacent to the floor and wheel house, increase the pressure. When directing water on areas other than the floor portion and wheel house, decrease the pressure. But the force of water must be made strong occasionally by pressing the end of the hose.

NOTE:
Be sure to keep the hose at least 10 cm (3.9 in) from the vehicle.

Check the following areas:

- Front window and body framework mating portion
- Door mating portions
- Glass mating portions
- Rear quarter window mating portions
- Rear window and body framework mating portion
- Around roof drips

If any dampness in the compartment is discovered after the water has been applied, carefully check all areas that may have possibly contributed to the leak.

47.APPEARANCE CHECK 2

• Except paint protection coat wrap guard type

1) Check the paint after removing the paint protective coating and washing the vehicle.

NOTE:
Before removing the protective coating, be sure to wash the vehicle, because the painted surface may be scratched if the surface is rubbed with sand or other hard particles which may be attached to the protective coating.

2) Check the whole vehicle body for stains, flaking, damage caused by transportation, rust, dirt, cracks, or blistering.

NOTE:

- It is better to determine an inspection pattern in order to avoid missing an area, since the total inspection area is wide.

• It is desirable not to make corrections to the body paint unless absolutely needed. However, if any corrections are required to remove scratches or rust, the area to be corrected must be limited as much as possible. Re-painting and spray painting must be avoided whenever possible.

3) Carefully check each window glass for scratches. Slight damage may be removed by polishing with cerium oxide. (Half-fill a cup with cerium oxide, and add warm water to it. Then agitate the content until it turn to wax. Apply this wax to a soft cloth, and polish the glass.)

4) Check each portion of the vehicle body and underside components for the formation of rust. If rust is discovered, remove it with #80 — #180 emery paper, and treat the surface with rust preventive. After this treatment is completed, flush the portion thoroughly, and prepare the surface for repair painting.

5) Check each portion of the body and all of the chrome parts for deformation or distortion. Also check each lamp lens for cracks.

• Paint protection coat wrap guard type

1) Check the paint after removing the paint protective coating and washing the vehicle.

NOTE:

• Use of steam eases peeling off the warp guard.

• When performing on the vehicles left for a long time, or during low temperature period, sprinkle some water heated to 50 — 60°C (122 — 140°F) over the vehicle to raise its surface temperature before peeling off the wrap guard.

Do not use the water heated to over 60°C (140°F).

• If the adhesive remains on the coated surface, rub the portion with a flannel rag, etc. soaked with a coat of coating wax or a solvent, such as oil benzene and IPA, and then wipe it off.

• Avoid adhesion of the solvent to resin or rubber components. Do not use coating wax or a solvent while the component surface temperature is high due to hot weather, etc.

• If the coated surface is swollen out due to seams or moisture, expose the vehicle to the sun light for a few hours. Otherwise, heat the portion with seams or moisture using a dryer, etc.

• Dispose of the peeled wrap guard as burnable industrial garbage.

2) Check the whole vehicle body for stains, flaking, damage caused by transportation, rust, dirt, cracks, or blistering.

NOTE:

• It is better to determine an inspection pattern in order to avoid missing an area, since the total inspection area is wide.

• It is desirable not to make corrections to the body paint unless absolutely needed. However, if any corrections are required to remove scratches or rust, the area to be corrected must be limited as much as possible. Re-painting and spray painting must be avoided whenever possible.

3) Carefully check each window glass for scratches. Slight damage may be removed by polishing with cerium oxide. (Half-fill a cup with cerium oxide, and add warm water to it. Then agitate the content until it turn to wax. Apply this wax to a soft cloth, and polish the glass.)

4) Check each portion of the vehicle body and underside components for the formation of rust. If rust is discovered, remove it with #80 — #180 emery paper, and treat the surface with rust preventive. After this treatment is completed, flush the portion thoroughly, and prepare the surface for repair painting.

5) Check each portion of the body and all of the chrome parts for deformation or distortion. Also check each lamp lens for cracks.

PERIODIC MAINTENANCE SERVICES

PM

		Page
1.	General Description	2
2.	Schedule	3
3.	Engine Oil	8
4.	Engine Oil Filter	11
5.	Spark Plugs	12
6.	V-belt	13
7.	Timing Belt	16
8.	Fuel Line	20
9.	Fuel Filter	21
10.	Air Cleaner Element	22
11.	Cooling System	23
12.	Coolant	25
13.	Idle Mixture	27
14.	Clutch System	28
15.	Transmission Gear Oil	30
16.	Hill-holder System	31
17.	ATF	32
18.	Front & Rear Differential Gear Oil	34
19.	Brake Line	36
20.	Brake Fluid	38
21.	Disc Brake Pads and Discs	39
22.	Brake Linings and Drums	40
23.	Suspension	42
24.	Wheel Bearing	44
25.	Axle Boots & Joints	46
26.	Steering System (Power Steering)	47

1. General Description

A: GENERAL

Be sure to perform periodic maintenance in order to maintain vehicle performance and find problems before they become serious.

2. Schedule

A: MAINTENANCE SCHEDULE 1

1. FOR EUROPE AREA

For periodic maintenance of over 120,000 km (75,000 miles) or 96 months, carry out inspection by referring to the following table. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 120,000 km (75,000 miles) or 96 months.

			Maintenance interval [Number of months or km (miles), whichever occurs first]										
	Month				12	24	36	48	60	72	84	96	
	× 1,000 km		1.6	5	15	30	45	60	75	90	105	120	
	× 1,000 miles		1	3	9	19	28	38	47	56	66	75	Remarks
1	Engine oil				R	R	R	R	R	R	R	R	
2	Engine oil filter				R	R	R	R	R	R	R	R	
3	Spark plug	For Turbo									R		
		Others				R		R		R		R	
4	Drive belt(s)				I	I	I	I	I	I	I	I	
5	Camshaft drive belt										R		
6	Fuel line					I		I		I		I	
7	Fuel filter						R			R			
8	Air cleaner element				I	R	I	R	I	R	I	R	
9	Cooling system					I		I		I		I	
10	Coolant					R		R		R		R	
11	Clutch system					I		I		I		I	Adjust the clutch pedal free play every 1,600 km (1,000 miles)
12	Hill-holder system					I		I		I		I	
13	Transmission oil					I		R		I		R	
14	ATF					I		R		I		R	
15	Front & rear differential					I		R		I		R	
16	Brake line					I		I		I		I	
17	Brake fluid					R		R		R		R	
18	Disk brake pads & discs				I	I	I	I	I	I	I	I	
19	Brake linings & drums					I		I		I		I	
20	Parking brake					I		I		I		I	
21	Suspension					I		I		I		I	
22	Wheel bearing											(I)	
23	Axle boot & joint				I	I	I	I	I	I	I	I	
24	Steering system					I		I		I		I	
25	Clutch cable										R		

Symbols used:
R: Replace
I: Inspection
(I): Recommended service for safe vehicle operation.

NOTE:
(1) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
(2) ATF filter is a maintenance free part. ATF filter needs replacement, when it is physically damaged or ATF leaked.

2. EXCEPT FOR EUROPE AREA

For periodic maintenance of over 50,000 km (30,000 miles) or 48 months, carry out inspections by referring to the following tables. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 50,000 km (30,000 miles) or 48 months.

		Maintenance Interval [Number of months or km (miles), whichever occurs first]					
	Months		12	24	36	48	Remarks
	× 1,000 km	5	12.5	25	37.5	50	
	× 1,000 miles	3	7.5	15	22.5	30	
1	Engine oil		R	R	R	R	
2	Engine oil filter		R	R	R	R	

For periodic maintenance of over 100,000 km (60,000 miles) or 48 months, carry out inspections by referring to the following tables. For a maintenance period gone beyond these tables, apply them repeatedly as a set of 100,000 km (60,000 miles) or 48 months.

			Maintenance Interval [Number of months or km (miles), whichever occurs first]					
	Months			12	24	36	48	Remarks
	× 1,000 km		1.6	25	50	75	100	
	× 1,000 miles		1	15	30	45	60	
3	Spark plugs	For Turbo					R	
		Others		R	R	R	R	
4	Drive belt(s)			I	I	I	I	
5	Camshaft drive belt						R	
6	Fuel line				I		I	
7	Fuel filter				R		R	
8	Air cleaner element			I	R	I	R	
9	Cooling system				I		I	
10	Coolant				R		R	
11	Idle mixture		I	I	I	I	I	For models without catalyst converter
12	Clutch system			I	I	I	I	Adjust the clutch pedal free play every 1,600 km (1,000 miles)
13	Hill-holder system			I	I	I	I	
14	Transmission oil				R		R	
15	ATF				R		R	
16	Front & rear differential oil				R		R	
17	Brake line				I		I	
18	Brake fluid				R		R	
19	Disc brake pads & discs			I	I	I	I	
20	Brake linings and drums				I		I	
21	Parking brake			I	I	I	I	
22	Suspension			I	I	I	I	
23	Wheel bearing						(I)	
24	Axle boots & joints			I	I	I	I	
25	Steering system (Power steering)			I	I	I	I	
26	Clutch cable						R	

Symbols used:
R: Replace
I: Inspection
(R) or (I): Recommended service for safe vehicle operation.

NOTE:
(1) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
(2) ATF filter is a maintenance free part. ATF filter needs replacement, when it is physically damaged or ATF leaked.

B: MAINTENANCE SCHEDULE 2

1. EUROPE AREA

Item	Every	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil		Replace more frequently		Replace more frequently			Replace more frequently
Engine oil filter		Replace more frequently		Replace more frequently			Replace more frequently
Fuel line	12 months				I		
	15,000 km						
	9,000 miles						
Transmission oil							Replace more frequently
ATF							Replace more frequently
Front & rear differential oil							Replace more frequently
Brake line	12 months				I		
	15,000 km						
	9,000 miles						
Brake fluid	12 months					R	
	15,000 km						
	9,000 miles						
Brake pads	12 months	I	I		I		I
	15,000 km						
	9,000 miles						
Brake linings and drums	12 months	I	I		I		I
	15,000 km						
	9,000 miles						
Parking brake	12 months	I	I		I		I
	15,000 km						
	9,000 miles						
Suspension	12 months		I	I	I		
	15,000 km						
	9,000 miles						
Axle boots & joints	12 months	I	I		I		I
	15,000 km						
	9,000 miles						
Steering system (Power steering)	12 months		I	I	I		
	15,000 km						
	9,000 miles						

2. EXCEPT FOR EUROPE AREA

Item	Every	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil		Replace more frequently		Replace more frequently			Replace more frequently
Engine oil filter		Replace more frequently		Replace more frequently			Replace more frequently
Fuel line	6 months				I		
	12,500 km						
	7,500 miles						
Transmission oil							Replace more frequently
ATF							Replace more frequently
Front & rear differential oil							Replace more frequently
Brake line	6 months				I		
	12,500 km						
	7,500 miles						
Brake fluid	12 months					R	
	25,000 km						
	15,000 miles						
Brake pads	6 months	I	I		I		I
	12,500 km						
	7,500 miles						
Brake linings and drums	6 months	I	I		I		I
	12,500 km						
	7,500 miles						
Parking brake	6 months	I	I		I		I
	12,500 km						
	7,500 miles						
Suspension	6 months		I	I	I		
	12,500 km						
	7,500 miles						
Axle boots & joints	6 months	I	I		I		I
	12,500 km						
	7,500 miles						
Steering system (Power steering)	6 months		I	I	I		
	12,500 km						
	7,500 miles						

3. Engine Oil

A: REPLACEMENT

1) Open the engine oil filler cap for quick draining of the engine oil.

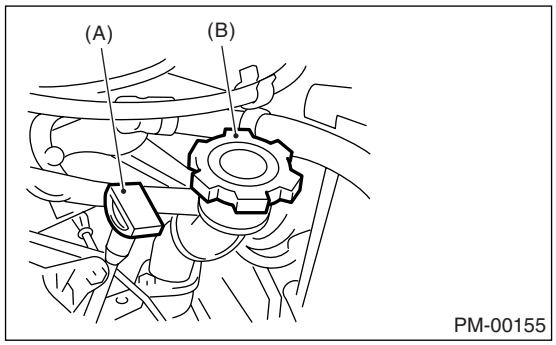

(A) Oil level gauge
(B) Oil filler cap

2) Remove the dip of service hole cover. (Turbo model)

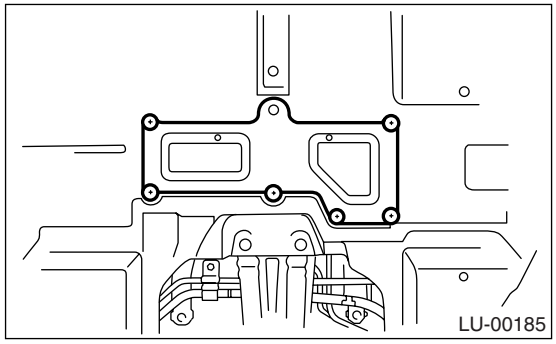

3) Drain the engine oil by loosening engine oil drain plug.

- DOHC TURBO MODEL

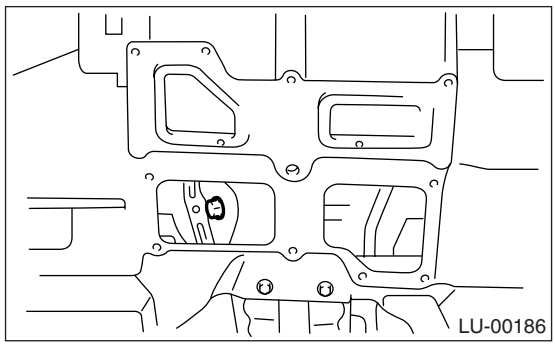

- SOHC MODEL

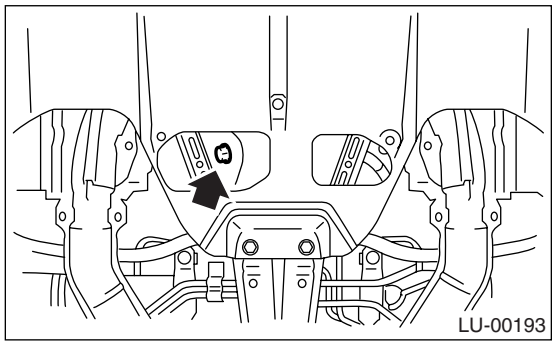

4) Replace the drain plug gasket.
5) Tighten the engine oil drain plug after draining engine oil.

Tightening torque:
44 N·m (4.5 kgf-m, 33 ft-lb)

- DOHC TURBO MODEL

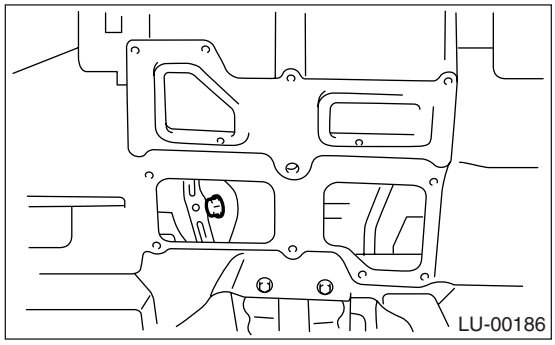

- SOHC MODEL

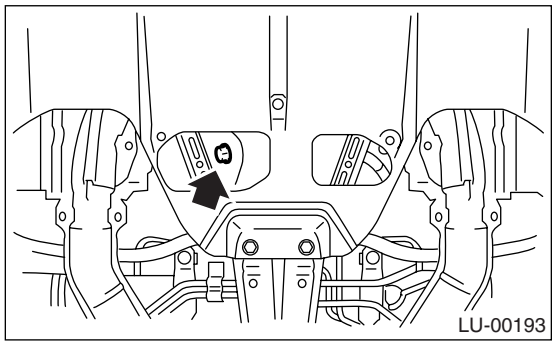

6) Fill engine oil through the filler pipe up to center between upper level and lower level. Make sure that the vehicle is placed level when checking oil level. Use engine oil of proper quality and viscosity, selected in accordance with the table in figure.

Recommended oil

API classification

SL or SJ with the words "Energy Conserving or Energy conserving II", CCMC specification G4 or G5, ACEA specification A1, A2 or A3, or New API mark displayed on the container (If it is impossible to get SL or SJ grade, you may use SG or SH grade.)

Engine oil capacity

SOHC model (Upper level):

Approx. 4.0 ℓ (4.2 US qt, 3.5 Imp qt)

SOHC model (Lower level):

Approx. 3.0 ℓ (3.2 US qt, 2.6 Imp qt)

DOHC Turbo model (Upper level):

Approx. 4.5 ℓ (4.8 US qt, 4.0 Imp qt)

DOHC Turbo model (Lower level):

Approx. 3.5 ℓ (3.7 US qt, 3.1 Imp qt)

- SOHC MODEL

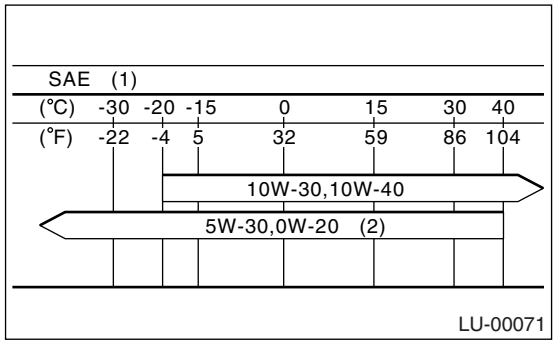

(1) Viscosity No. and applicable temperature
(2) Preferred

- EXCEPT FOR SOHC MODEL

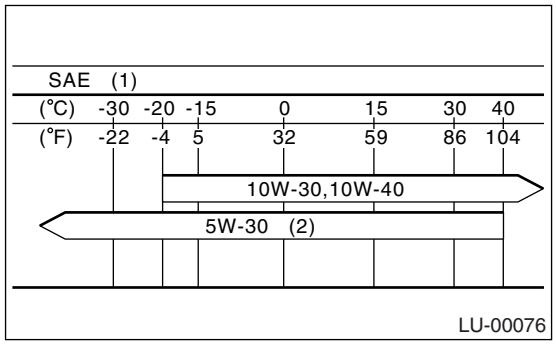

(1) Viscosity No. and applicable temperature
(2) Preferred

The proper viscosity helps vehicle get good cold and hot starting by reducing viscous friction and thus increasing cranking speed.

NOTE:

- When replenishing oil, it does not matter if the oil to be added is a different brand from that in the engine; however, use oil having the API classification and SAE viscosity No. designated by SUBARU.
- If vehicle is used in desert areas with very high temperatures or for other heavy duty applications, the following viscosity oils may be used:

API classification: SL or SJ.

SAE Viscosity No.: 30, 40, 10W-50, 20W-40, 20W-50

7) Close the engine oil filler cap.

8) Start the engine and warm it up for a time.

9) After the engine stops, recheck the oil level. <Ref. to PM-10, INSPECTION, Engine Oil.>

B: INSPECTION

1) Park the vehicle on a level surface.
2) Remove the oil level gauge and wipe it clean.
3) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in the proper orientation.
4) Remove it again and note the reading. If the engine oil level is below the “L” line, add oil to bring the level up to the “F” line.

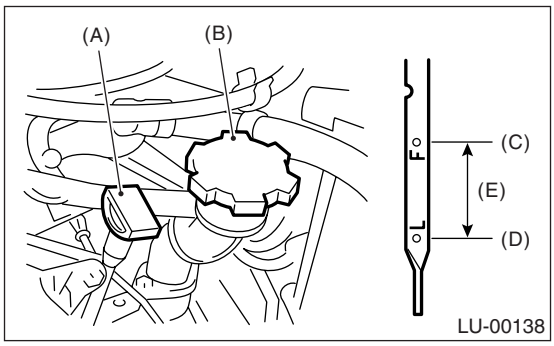

(A) Oil level gauge
(B) Oil filler cap
(C) Upper level
(D) Lower level
(E) Approx. 1 ℓ (1.1 Us qt, 0.9 Imp qt)

5) After turning off the engine, wait a few minutes for the oil to drain back into oil pan before checking the level.
6) Just after driving or while the engine is warm, engine oil level may show in the range between the “F” line and the notch mark. This is caused by thermal expansion of the engine oil.
7) To prevent overfilling the engine oil, do not add oil above the “F” line when the engine is cold.

4. Engine Oil Filter

A: REPLACEMENT

1) Remove the under cover.
2) Remove the oil filter with ST.
ST 498547000 OIL FILTER WRENCH

- SOHC MODEL

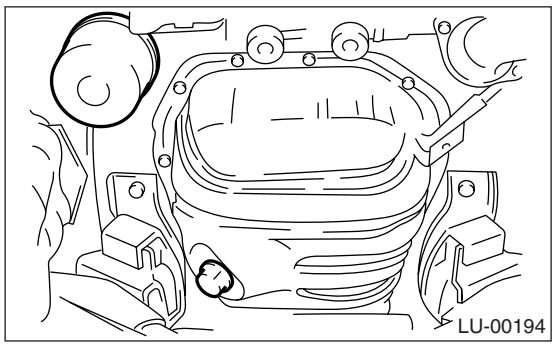

- DOHC TURBO MODEL

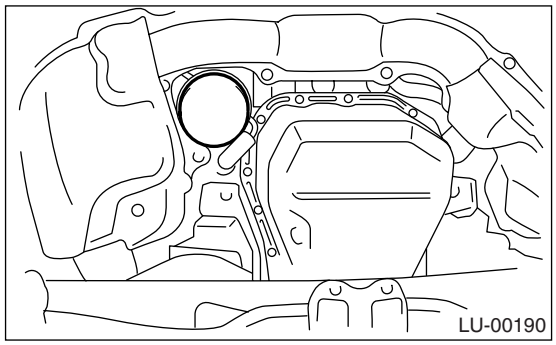

3) Get a new oil filter and apply a thin coat of engine oil to the seal rubber.
4) Install the oil filter by turning it by hand, being careful not to damage the seal rubber.
5) Tighten more (approx. 2/3 to 3/4 turn) after the seal rubber contacts the cylinder block. Do not tighten excessively, or oil may leak.
6) After installing the oil filter, run the engine and make sure that no oil is leaking around seal rubber.

NOTE:
The filter element and filter case are permanently joined; therefore, interior cleaning is not necessary.

7) Check the engine oil level. <Ref. to PM-10, INSPECTION, Engine Oil.>

5. Spark Plugs

A: REPLACEMENT

1. SOHC MODEL

1) Remove the intake duct and intake chamber.
2) Remove the washer tank and put it aside.
3) Disconnect the spark plug cord.
4) Remove the spark plug with a plug-wrench.

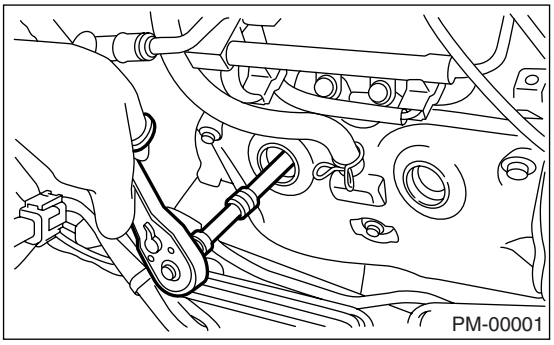

5) Set the new spark plugs.

Recommended spark plug:
1.6 L SOHC model (with catalytic converter)
CHAMPION: RC8YC4
NGK: BKR6E-11 (Alternate)
1.6 L SOHC model (without catalytic converter)
NGK: BKR6E
2.0 and 2.5 L SOHC model (with catalytic converter)
CHAMPION: RC10YC4
NGK: BKR5E-11 (Alternate)
2.0 SOHC model (without catalytic converter)
NGK: BKR6E

6) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

NOTE:
• Be sure to place the gasket between the cylinder head and spark plug.
• If a torque wrench is not available, tighten the spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.

2. DOHC MODEL

1) Disconnect the battery cables, and then remove the battery and battery carrier.
2) Remove the washer tank and put it aside.
3) Remove the air cleaner lower case.
4) Disconnect the connector from ignition coil.
5) Remove the ignition coil.

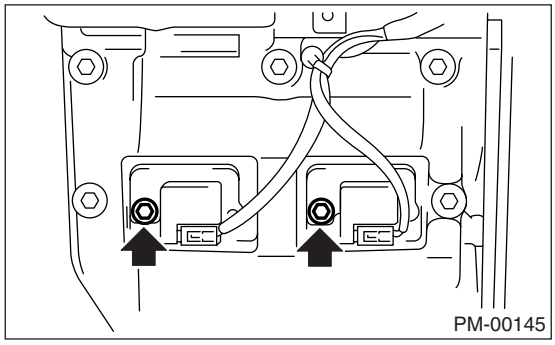

6) Remove the spark plug with a spark plug socket.

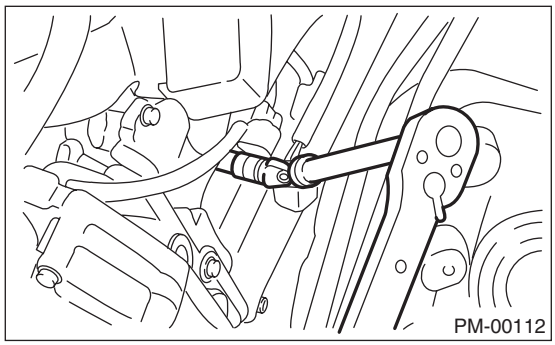

7) Set new spark plugs.

Recommended spark plug:
2.0 L DOHC Turbo model
NGK: PFR6G

8) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

9) Tighten the ignition coil.

Tightening torque:
16 N·m (1.6 kgf-m, 11.7 ft-lb)

NOTE:
• Be sure to place the gasket between the cylinder head and spark plug.
• If a torque wrench is not available, tighten the spark plug until gasket contacts cylinder head: then tighten further 1/4 to 1/2 turns.

6. V-belt

A: INSPECTION

1. WITHOUT USING BELT TENSION GAUGE

1) Replace the belts, if cracks, fraying or wear is found.
2) Check the V-belt tension and adjust it if necessary by changing the generator installing position and/or idler pulley installing position. <Ref. to PM-14, REPLACEMENT, V-belt.>

Belt tension

(A)
Replaced: 7 — 9 mm (0.276 — 0.354 in)
Reused: 9 — 11 mm (0.354 — 0.433 in)
(B)
Replaced: 7.5 — 8.5 mm (0.295 — 0.335 in)
Reused: 9.0 — 10.0 mm (0.354 — 0.394 in)

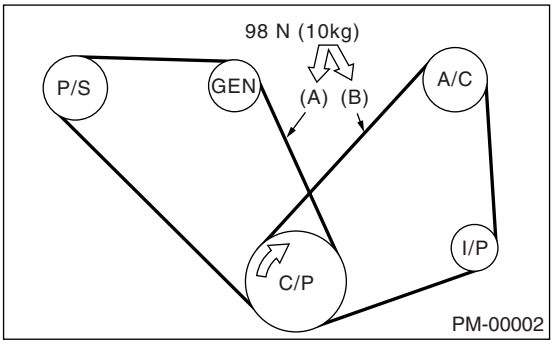

(A) Front side belt
(B) Rear side belt
C/P Crankshaft pulley
GEN Generator
P/S Power steering oil pump pulley
A/C Air conditioning compressor pulley
I/P Idler pulley

2. WITH USING BELT TENSION GAUGE

1) Replace the belts, if cracks, fraying or wear is found.
2) Remove the V-belt cover and radiator reservoir tank.
3) Check the belt tension using belt tension gauge. And adjust it if necessary by changing the generator installing position and/or idler pulley installing position.

Belt tension

(A) 490 — 640 N (50 — 65 kgf, 110 — 144 lb)
(B) 350 — 450 N (36 — 46 kgf, 79 — 101 lb)

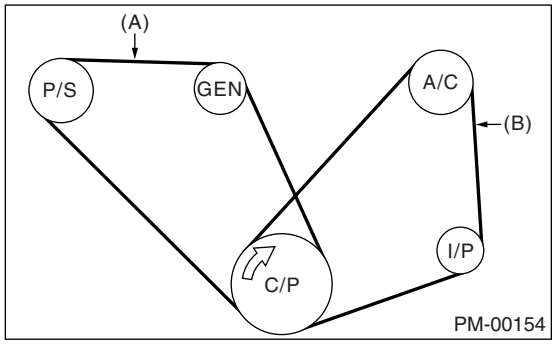

(A) Front side belt
(B) Rear side belt
C/P Crank pulley
GEN Generator
P/S Power steering oil pump pulley
A/C A/C compressor pulley
I/P Idler pulley

B: REPLACEMENT

1. V-BELT COVER

1) Remove the V-belt cover.
NON-TURBO MODEL

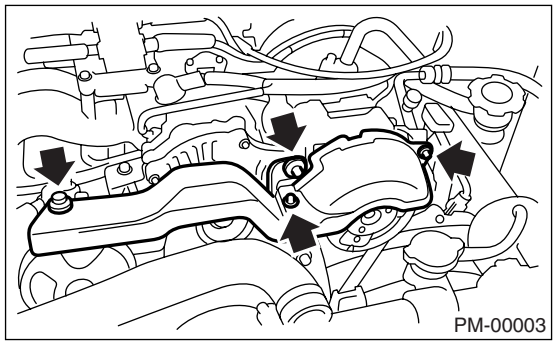

TURBO MODEL

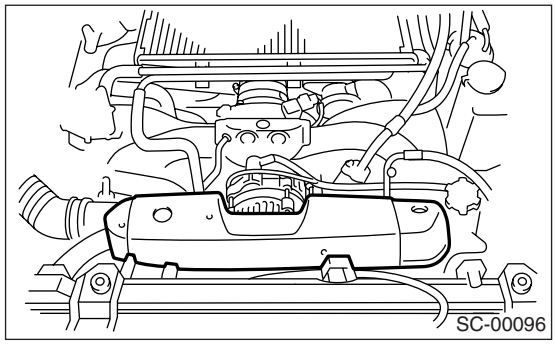

2. FRONT SIDE BELT (DRIVING POWER STEERING OIL PUMP AND GENERATOR)

NOTE:
Wipe off any oil or water on the belt and pulley.
1) Loosen the lock bolt (A).
2) Loosen the slider bolt (B).
3) Remove the front side belt (C).
4) Install a new belt, and tighten the slider bolt so as to obtain the specified belt tension.
5) Tighten the lock bolt (A).
6) Tighten the slider bolt (B).

Tightening torque:
Lock bolt:
25 N·m (2.5 kgf-m, 18 ft-lb)
Slider bolt:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

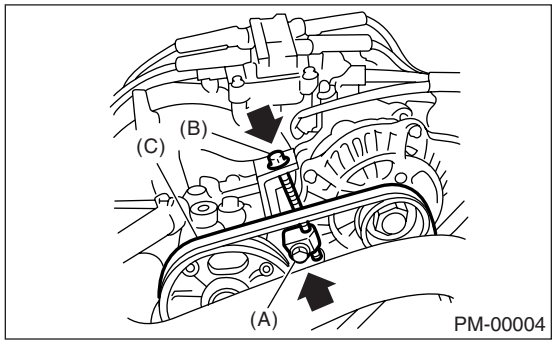

7) Idle the engine for approx. 5 min. to normalize the V-belt. (With using tension gauge)
8) Stop the engine, and then check the belt tension and adjust it. (With using tension gauge)
9) Idle the engine for approx. 1 min. to normalize the V-belt. (With using tension gauge)
10) Stop the engine, and then check the belt tension is within specified value. (With using tension gauge)
11) Adjust the belt tension until the value within specification. (With using tension gauge)

3. REAR SIDE BELT (DRIVING AIR CONDITIONER)

NOTE:
Wipe off any oil or water on the belt and pulley.

1) Remove the front side belt.
2) Loosen the lock nut (A).
3) Loosen the slider bolt (B).
4) Remove the rear side belt.
5) Install a new belt, and tighten the slider bolt so as to obtain the specified belt tension.
6) Tighten the lock nut (A).
7) Install the front side belt.

SOHC model
<Ref. to ME(H4SO)-44, FRONT SIDE BELT, INSTALLATION, V-belt.>
DOHC Turbo model
<Ref. to ME(H4DOTC)-55, FRONT SIDE BELT, INSTALLATION, V-belt.>

Tightening torque:
23 N·m (2.3 kgf-m, 17.0 ft-lb)

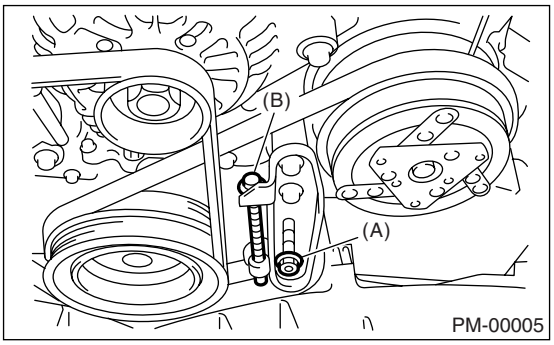

8) Idle the engine for approx. 5 min. to normalize the V-belt. (With using tension gauge)
9) Stop the engine, and then check the belt tension and adjust it. (With using tension gauge)
10) Idle the engine for approx. 1 min. to normalize the V-belt. (With using tension gauge)
11) Stop the engine, and then check the belt tension is within specified value. (With using tension gauge)
12) Adjust the belt tension until the value within specification. (With using tension gauge)

7. Timing Belt

A: REPLACEMENT

1. NON-TURBO MODEL

1) Remove the radiator fan and air conditioner fan. <Ref. to CO(H4SO)-25, Radiator Main Fan and Fan Motor.>, <Ref. to CO(H4SO)-26, Radiator Sub Fan and Fan Motor.>
2) Shield the radiator from any damage using cardboard and blanket.
3) Remove the V-belt cover.

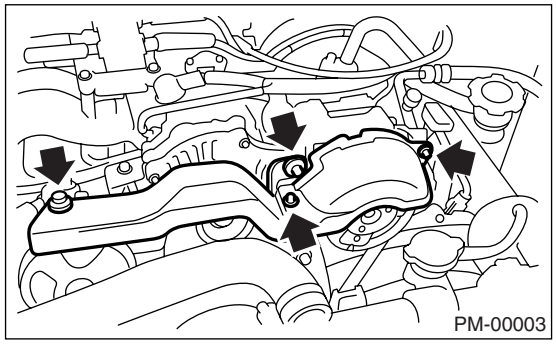

4) Remove the V-belts. <Ref. to ME(H4SO)-44, V-belt.>
5) Remove the air conditioning compressor drive belt tensioner.
6) To lock the crankshaft, use ST. Remove the pulley bolt.
2.5 L model:
ST 499977100 CRANKSHAFT PULLEY WRENCH
Except for 2.5 L model:
ST 499977400 CRANKSHAFT PULLEY WRENCH

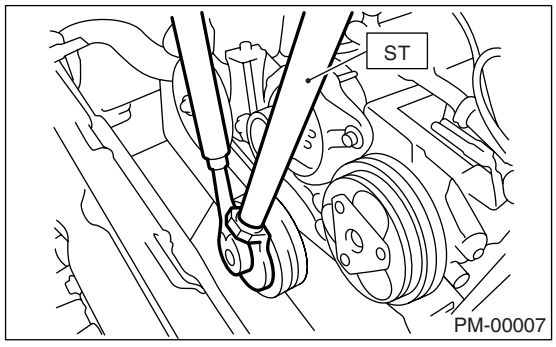

7) Remove the crankshaft pulley.
8) Remove the left side belt cover.
9) Remove the front timing belt cover.
10) Remove the timing belt guide. (MT model)

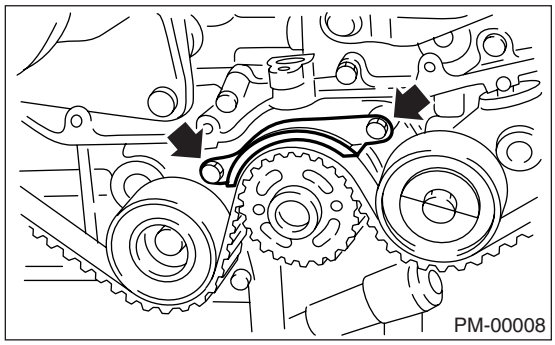

11) Turn the crankshaft and align alignment marks on crankshaft, and right and left camshaft sprockets with notches of belt cover and cylinder block.
ST 499987500 CRANKSHAFT SOCKET

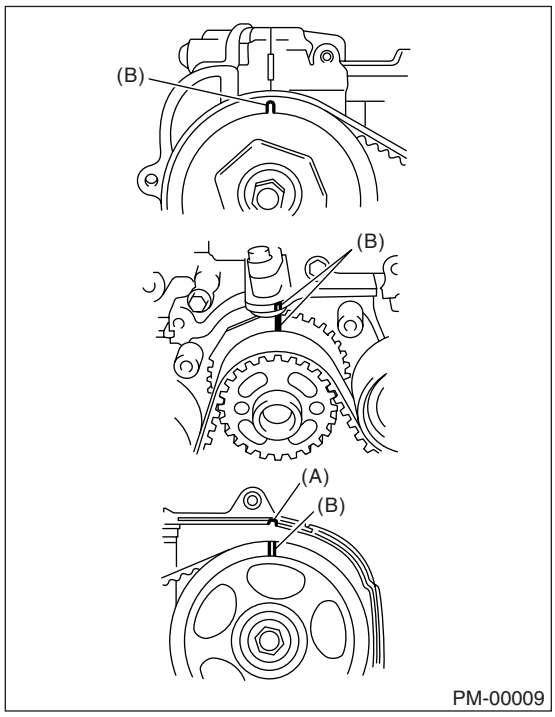

(A) Notch
(B) Alignment mark

12) Remove the belt idler.
13) Remove the belt idler (No. 2).

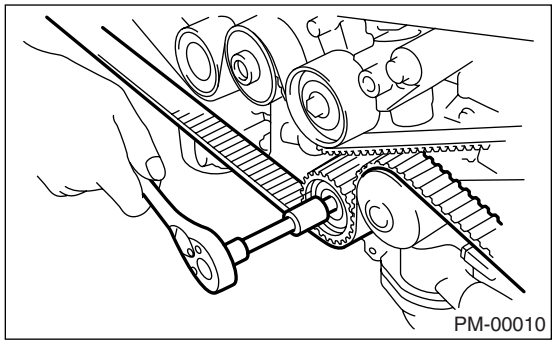

14) Remove the timing belt.

15) Remove the automatic belt tension adjuster assembly.

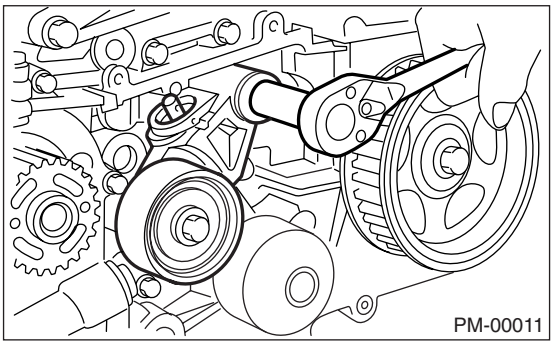

16) Install in the reverse order of removal. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>

2. DOHC MODEL

1) Remove the radiator fan and air conditioner fan. <Ref. to CO(H4DOTC)-28, Radiator Main Fan and Fan Motor.>, <Ref. to CO(H4DOTC)-30, Radiator Sub Fan and Fan Motor.>
2) Protect the radiator with cardboard and blanket.
3) Remove the V-belts. <Ref. to ME(H4DOTC)-55, V-belt.>
4) Remove the air conditioning compressor drive belt tensioner.
5) Remove the pulley bolt. To lock the crankshaft use ST.

Except for STi model:

ST	499977300	CRANKSHAFT PULLEY WRENCH

STi model:

ST	499977300	CRANKSHAFT PULLEY WRENCH

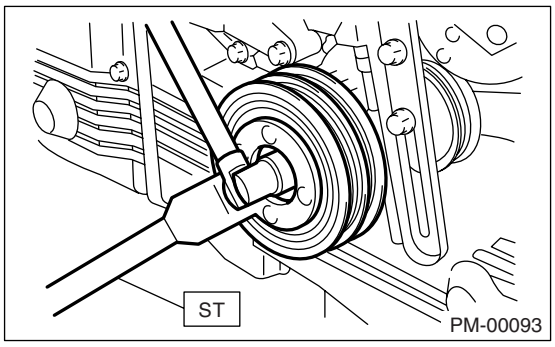

6) Remove the crankshaft pulley.
7) Remove the air conditioning compressor drive belt tensioner.
8) Remove the belt cover (LH).
9) Remove the belt cover (RH).
10) Remove the front belt cover.
11) Remove the timing belt guide. (MT model)

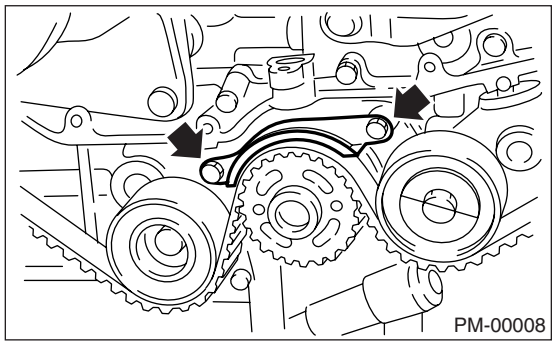

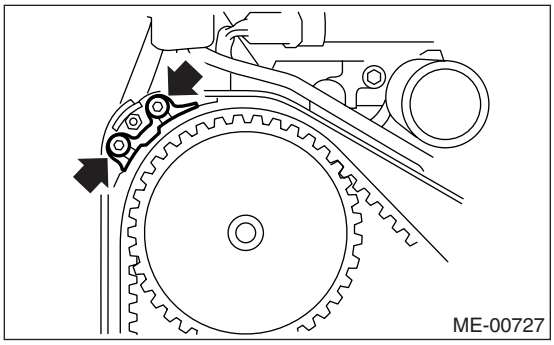

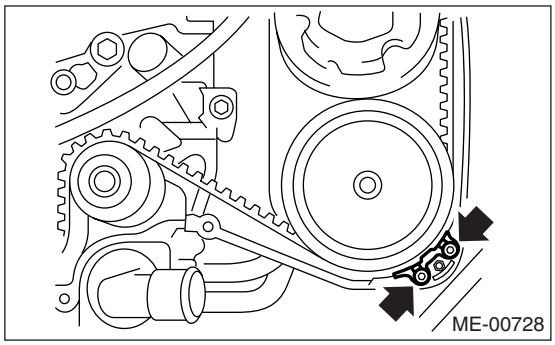

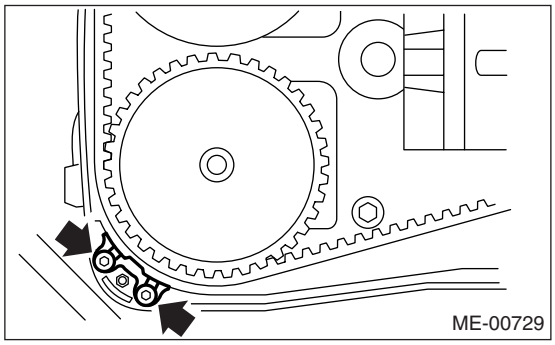

12) Turn the crankshaft and align alignment marks on crankshaft, and right and left camshaft sprockets with notches of belt cover and cylinder block. To turn the crankshaft, use ST.
ST 499987500 CRANKSHAFT SOCKET

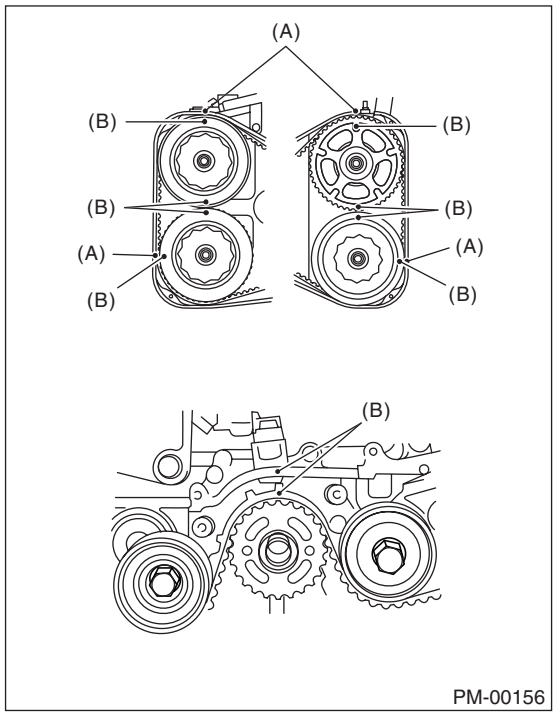

(A) Notch
(B) Alignment mark

13) Remove the belt idler.

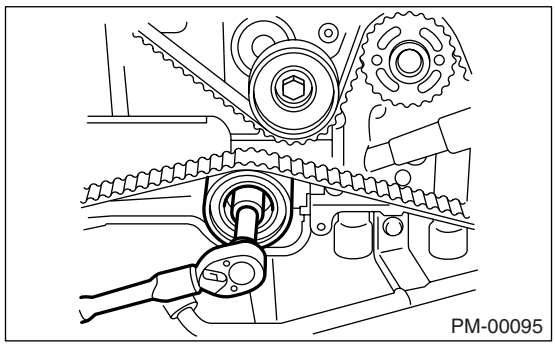

14) Remove the timing belt.

15) Remove the automatic belt tension adjuster assembly.

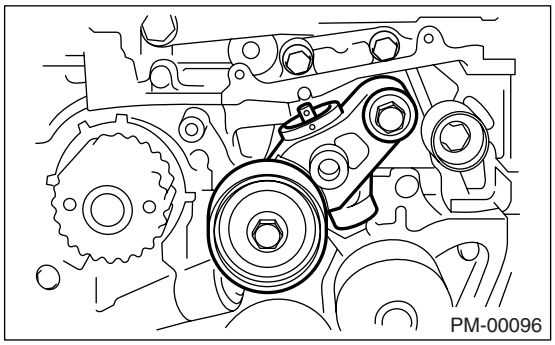

16) Install in the reverse order of removal. <Ref. to ME(H4DOTC)-60, Timing Belt Assembly.>

CAUTION:
When installing the timing belt, be sure to align all alignment marks on the belt with corresponding marks on the sprockets. If incorrectly installed, interference between pistons and valves may occur.

B: INSPECTION

1. SOHC MODEL

1) Remove the front timing belt cover and timing belt cover (LH).
2) While cranking the engine at least four rotations, check the timing belt back surface for cracks or damage. Replace the faulty timing belt as needed.
3) Measure the timing belt width W. If it is less than 27 mm (1.06 in), check idlers, tensioner, water pump pulley and cam sprocket to determine idler alignment (squareness). Replace the worn timing belt.

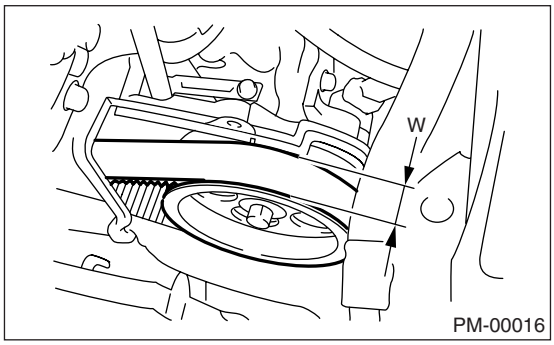

4) Install the front timing belt cover and timing belt cover (LH).

2. DOHC MODEL

1) Remove the timing belt cover (LH).
2) While cranking the engine at least four rotations, check the timing belt back surface for cracks or damage. Replace the faulty timing belt as needed.
3) Measure the timing belt width W. If it is less than 30 mm (1.18 in), check idlers, tensioner, water pump pulley and cam sprocket to determine idler alignment (squareness). Replace the worn timing belt.
4) Install the timing belt cover (LH).

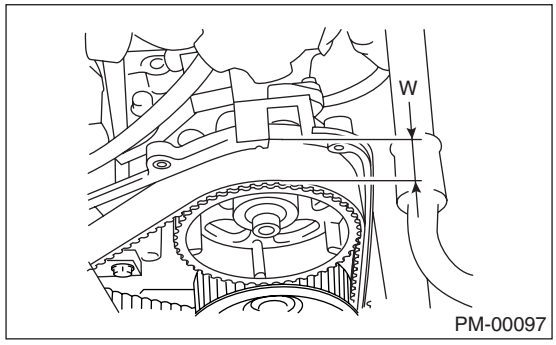

8. Fuel Line

A: INSPECTION

The fuel line is located mostly internally, so check pipes, areas near pipes, and engine compartment piping for rust, hose damage, loose bands, etc. If faulty parts are found, repair or replace them.
SOHC model
<Ref. to FU(H4SO)-65, Fuel Delivery, Return and Evaporation Lines.>
DOHC Turbo model
<Ref. to FU(H4DOTC)-69, Fuel Delivery, Return and Evaporation Lines.>

9. Fuel Filter

A: REPLACEMENT

For fuel filter replacement procedures, refer to “FU” section.
SOHC model
<Ref. to FU(H4SO)-62, Fuel Filter.>
DOHC Turbo model
<Ref. to FU(H4DOTC)-66, Fuel Filter.>

B: INSPECTION

1) If it is clogged, or if replacement interval has been reached, replace it.
2) If water is found in it, shake and expel the water from inlet port.

10.Air Cleaner Element

A: REPLACEMENT

1. NON-TURBO MODEL

1) Remove the air intake duct from air cleaner case.
2) Remove the bolt (A) which installs air cleaner case to stays.
3) Remove the clip (B) above the air cleaner case.

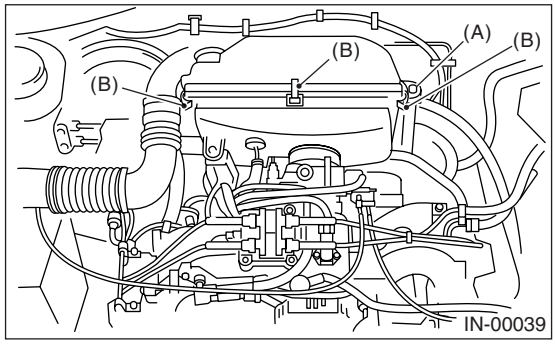

4) Remove the air cleaner.

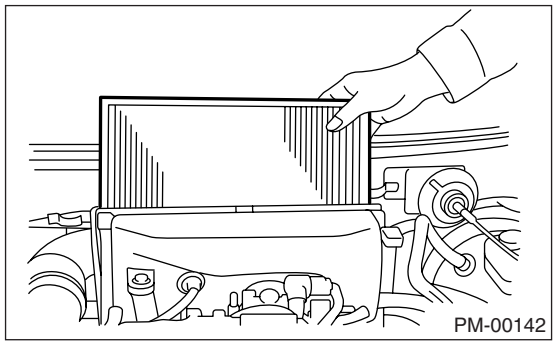

5) Install in the reverse order of removal.

NOTE:
Fasten with a clip after inserting the lower tab of the case.

2. TURBO MODEL

1) Remove the clip (B) above the air cleaner case.

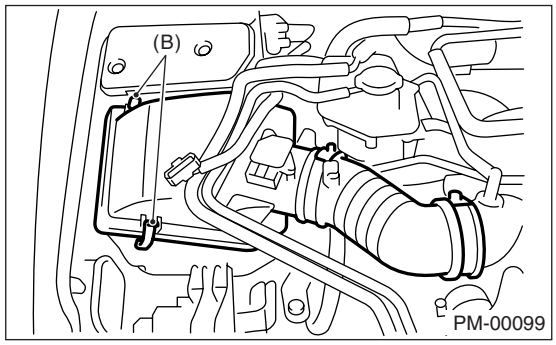

2) Remove the air cleaner.

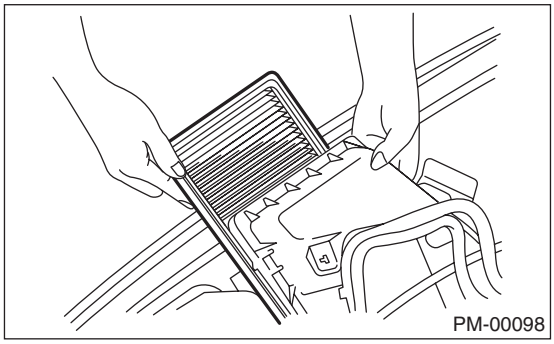

3) Install in the reverse order of removal.

NOTE:
Align the protruding portion of air cleaner upper cover with holes of air cleaner lower case, then secure upper cover to case.

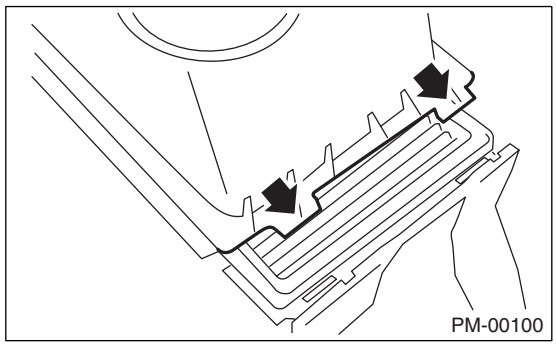

11.Cooling System

A: INSPECTION

1) Check the radiator for leakage, filling it with coolant and attach the radiator cap tester (A) to filler neck. Then apply a pressure.
Check the following points:

Non-turbo model
157 kPa (1.6 kg/cm^2, 23 psi)

Turbo model
122 kPa (1.2 kg/cm^2, 18 psi)

- Each portion of radiator for leakage
- Hose joints and other connections for leakage

NOTE:
- For turbo model, be sure to install the tester to filler tank side.
- When attaching or detaching tester and when operating tester, use special care not to deform radiator filler neck.

NON-TURBO MODEL

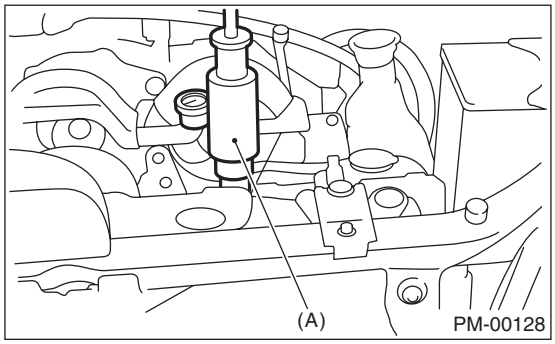

TURBO MODEL

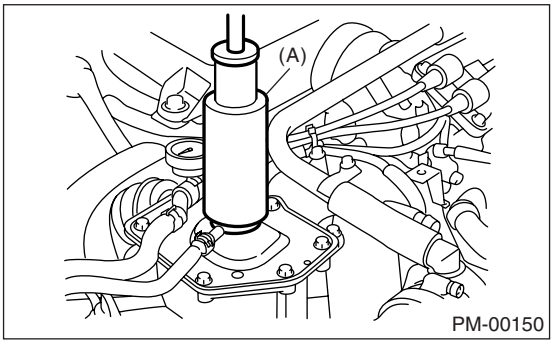

- When performing this check, be sure to keep the engine stationary and fill the radiator with coolant.
- Wipe off check points before applying pressure.
- Use care not to spill coolant when detaching the tester from radiator.
- Do not remove the radiator side cap. (Turbo model)

2) Check the radiator cap valve open pressure using radiator cap tester.

NOTE:
Rust or dirt on the cap may prevent the valve from functioning normally: be sure to clean the cap before testing.

Raise the pressure until the needle of gauge stops and see if the pressure can be retained for 5 to 6 seconds. The radiator cap is normal if a pressure above the service limit value has been maintained for this period.

Radiator cap valve open pressure

Non-turbo model
Standard value:
93 — 123 kPa (0.95 — 1.25 kg/cm^2, 14 — 18 psi)
Service limit:
83 kPa (0.85 kg/cm^2, 12 psi)

Turbo model
Filler tank side:
Standard value:
93 — 123 kPa (0.95 — 1.25 kg/cm^2, 14 — 18 psi)
Service limit:
83 kPa (0.85 kg/cm^2, 12 psi)
Radiator side:
Standard value:
122 — 152 kPa (1.24 — 1.55 kg/cm^2, 18 — 22 psi)
Service limit:
112 kPa (1.14 kg/cm^2, 16 psi)

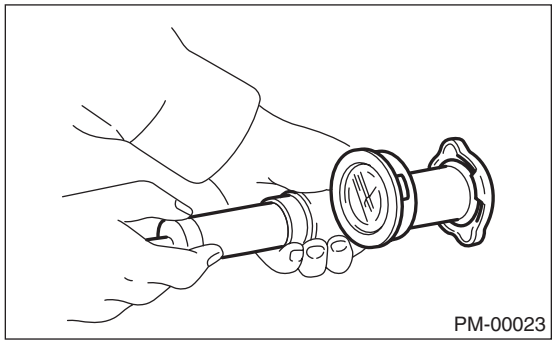

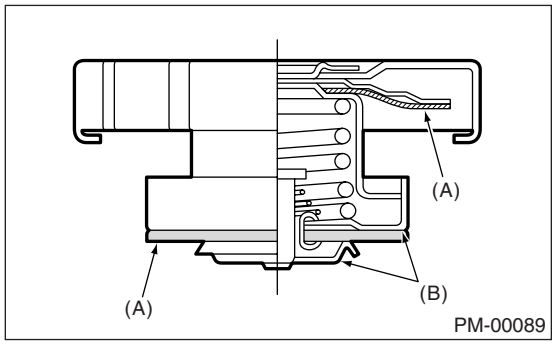

(A) Deformation
(B) Deformation, damage, rust

3) Start the engine, and then check it does not overheat or it is cooled excessively. If it overheats or it is cooled excessively, check the cooling system.
SOHC model
<Ref. to CO(H4SO)-16, Water Pump.>
<Ref. to CO(H4SO)-19, Thermostat.>
<Ref. to CO(H4SO)-21, Radiator.>
<Ref. to CO(H4SO)-24, Radiator Cap.>
DOHC Turbo model
<Ref. to CO(H4DOTC)-19, Water Pump.>
<Ref. to CO(H4DOTC)-21, Thermostat.>
<Ref. to CO(H4DOTC)-23, Radiator.>
<Ref. to CO(H4DOTC)-27, Radiator Cap.>
4) Check the electric fan operates using Subaru Select Monitor, when the coolant temperature exceeds 95°C (203°F). If not operate, check the electric fan system.
SOHC model
<Ref. to CO(H4SO)-7, Radiator Main Fan System.>
<Ref. to CO(H4SO)-10, Radiator Sub Fan System.>
DOHC Turbo model
<Ref. to CO(H4DOTC)-7, Radiator Main Fan System.>
<Ref. to CO(H4DOTC)-12, Radiator Sub Fan System.>

12.Coolant

A: REPLACEMENT

1. REPLACEMENT OF COOLANT

WARNING:
The radiator is of the pressurized type. Do not attempt to open the radiator cap immediately after the engine has been stopped.

1) Lift-up the vehicle.
2) Remove the under cover.
3) Place a container under drain pipe.
4) Loosen and remove the drain cock to drain engine coolant into container.

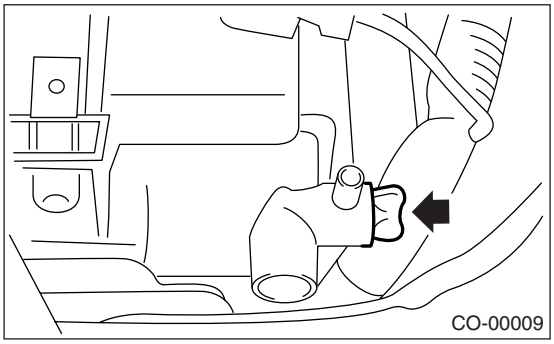

5) For quick draining, open the radiator cap.

NOTE:
Be careful not to spill coolant on the floor.

6) Drain the coolant from reservoir tank.
7) Tighten the radiator drain cock securely after draining coolant.
8) Slowly pour the coolant into radiator. Pour the coolant up to air bleeder hole, and then install the cap. (Turbo model)
9) Pour the coolant from radiator filler port to neck of filler, then pour into reservoir tank up to “FULL” level.

Coolant capacity (fill up to “FULL” level)
1.6 L AT model:
Approx. 7.3 ℓ (7.7 US qt, 6.4 Imp qt)
1.6 L MT model:
Approx. 7.4 ℓ (7.8 US qt, 6.5 Imp qt)
2.0 L Non-turbo AT model:
Approx. 6.9 ℓ (7.3 US qt, 6.1 Imp qt)
2.0 L Non-turbo MT model:
Approx. 7.0 ℓ (7.1 US qt, 6.2 Imp qt)
2.0 L Turbo AT model:
Approx. 7.6 ℓ (8.0 US qt, 6.7 Imp qt)
2.0 L Turbo MT model:
Approx. 7.7 ℓ (8.1 US qt, 6.8 Imp qt)
2.5 L AT model:
Approx. 6.9 ℓ (7.3 US qt, 6.1 Imp qt)
2.5 L MT model:
Approx. 7.0 ℓ (7.4 US qt, 6.2 Imp qt)

NOTE:
The SUBARU Genuine Coolant containing anti-freeze and anti-rust agents is especially made for SUBARU engine, which has an aluminum crankcase. Always use SUBARU Genuine Coolant, since other coolant may cause corrosion.

10) Securely install the radiator cap.
11) Run the engine for more than 5 minutes at 2,000 to 3,000 rpm. (Run the engine until radiator becomes hot in order to purge the air trapped in cooling system.)
12) Stop the engine and wait until coolant temperature lowers. Then open the radiator cap to check coolant level and add coolant up to radiator filler neck. Next, add coolant into reservoir tank up to “FULL” level.
13) After adding coolant, securely install the radiator and reservoir tank caps.

2. RELATIONSHIP OF SUBARU COOLANT CONCENTRATION AND FREEZING TEMPERATURE

The concentration and safe operating temperature of the SUBARU coolant is shown in the diagram. Measuring the temperature and specific gravity of the coolant will provide this information.
[Example]
If the coolant temperature is 25°C (77°F) and its specific gravity is 1.054, the concentration is 35% (point A), the safe operating temperature is −14°C (7°F) (point B), and the freezing temperature is −20°C (−4°F) (point C).

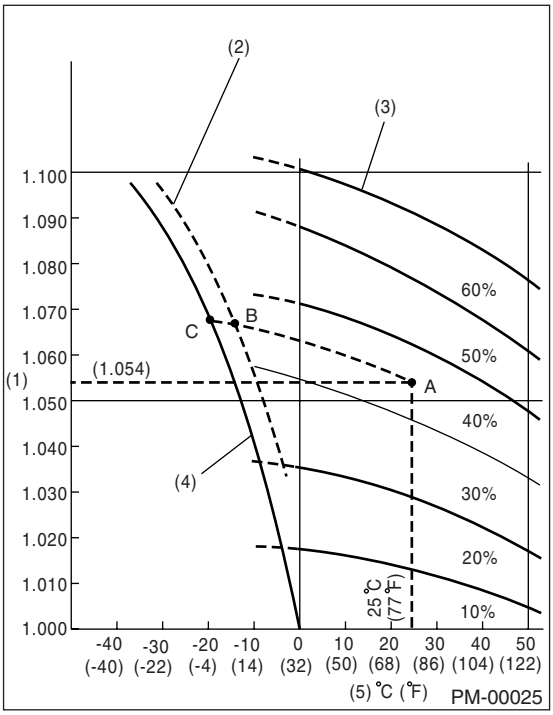

(1) Coolant gravity
(2) Safe operating temperature
(3) Concentration of coolant
(4) Freezing temperature
(5) Coolant temperature

3. PROCEDURE TO ADJUST THE CONCENTRATION OF THE COOLANT

To adjust the concentration of the coolant according to temperature, find the proper fluid concentration in the above diagram and replace the necessary amount of coolant with an undiluted solution of SUBARU genuine coolant (concentration 50%).
The amount of coolant that should be replaced can be determined using the diagram.
[Example]
Assume that the coolant concentration must be increased from 25% to 40%. Find point A, where the 25% line of coolant concentration intersects with the 40% curve of the necessary coolant concentration, and read the scale on the vertical axis of the graph at height A. The quantity of coolant to be drained is 2.1 ℓ (2.2 US qt, 1.8 Imp qt). Drain 2.1 ℓ (2.2 US qt, 1.8 Imp qt) of coolant from the cooling system and add 2.1 ℓ (2.2 US qt, 1.8 Imp qt) of the undiluted solution of SUBARU coolant.
If a coolant concentration of 50% is needed, drain all the coolant and refill with the undiluted solution only.

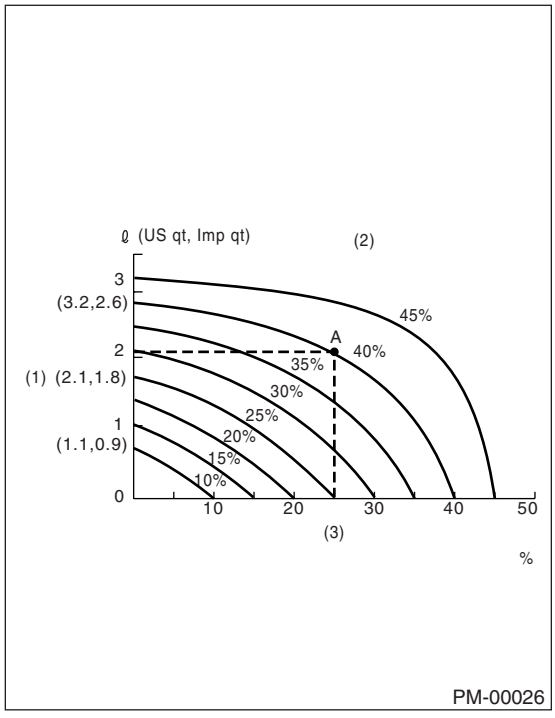

(1) Quantity of coolant to be drained
(2) Necessary concentration of coolant
(3) Concentration of coolant in vehicle cooling system

13.Idle Mixture

A: INSPECTION AND ADJUSTMENT

1. IDLE MIXTURE

Before measuring the idle mixture, make sure that the ignition timing and the engine idle speed are within specifications.
1) Set the gear position at “Neutral” for MT, or “N” or “P” for AT.
2) Warm up the engine sufficiently until cooling fan starts to operate.
3) Measure the idle mixture using CO meter.

Engine idle speed	CO
700±100 rpm	1.0±0.5%

4) If out of specification, adjust the idle mixture using CO adjusting screw of mass air flow sensor.
5) After adjusting the CO value, check and adjust the increment coefficient of CO resistor by using Select Monitor.
(1) Select “Current data display & Save” on the select monitor.
(2) If out of specified data, adjust the increment coefficient of CO resistor while rotating the CO adjusting screw (A).

Specified data:
0.28 — 4.22 V

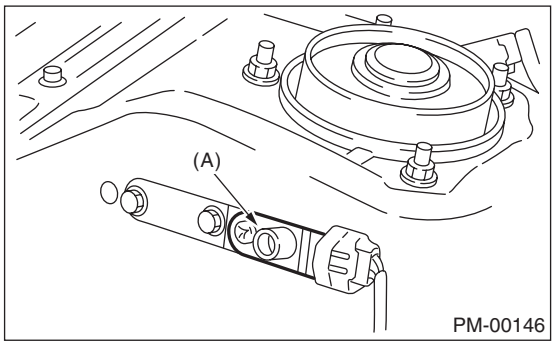

NOTE:
If driving the vehicle on out of specified data, the “DTC 49” is indicated in many case.

14.Clutch System

A: INSPECTION AND ADJUSTMENT

1. MECHANICAL CLUTCH TYPE

1) Inspect the free play of clutch pedal by operating pedal by hand.
If it is out of the specified value, adjust it by turning wing nut on engine side of clutch cable at release fork.

Tightening torque
(Adjusting nut on release fork):
4.4 — 7.4 N·m
(0.45 — 0.75 kgf-m, 3.3 — 5.4 ft-lb)

Standard free play A:
10 — 20 mm (0.39 — 0.79 in)

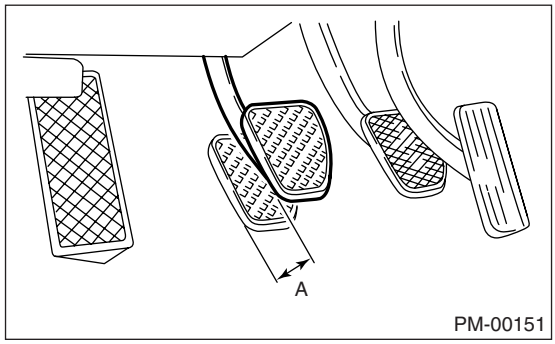

Fork lever free play allowance A:
2 — 4 mm (0.08 — 0.16 in)

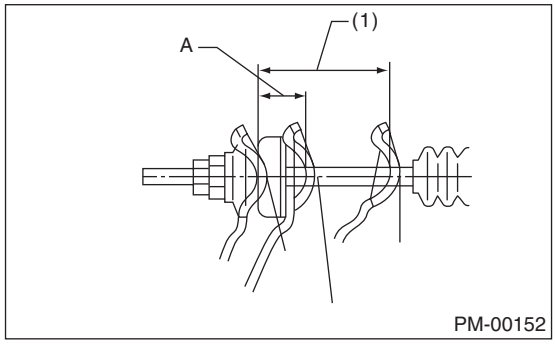

(1) Full stroke: 25.5 mm (1 in)

2) Pedal-to-floor plate gap in disengaged position.
(1) With the engine idling, pull the parking brake lever completely.
(2) Slowly depress the clutch pedal while moving shift lever into reverse.
(3) Stop depressing the clutch pedal when gearshifting is complete. With the clutch pedal in this position, measure the distance between the upper side of pedal pad and the lower end of front panel (intersection of front panel with floor). Check that the measured value is within the specification.

Standard:
80 mm (3.15 in) or more

3) Pedal height
Check that the clutch pedal pad surface is level with or higher than brake pedal pad surface.

2. HYDRAULIC CLUTCH TYPE

1) Push the release lever to retract the push rod of the operating cylinder and check if the fluid level in the clutch reservoir tank rises or not.
NON-TURBO MODEL

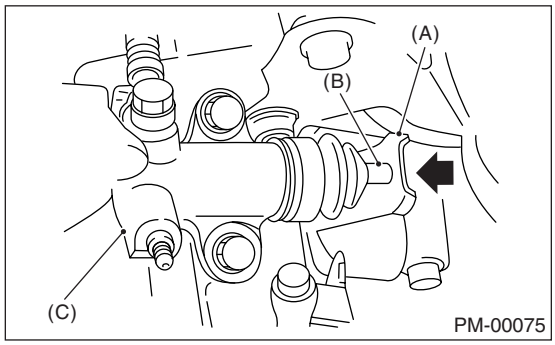

(A) Release lever
(B) Push rod
(C) Operating cylinder

TURBO MODEL

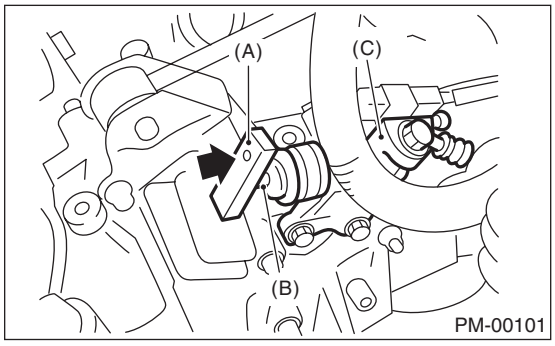

(A) Release lever
(B) Push rod
(C) Operating cylinder

2) If the fluid level rises, pedal free play is correct.
3) If the fluid level does not rise, or the push rod cannot be retracted, adjust the clutch pedal. <Ref. to CL-40, Clutch Pedal.>
4) Check the fluid level using the scale on the outside of the clutch master cylinder tank (A). If the level is below “MIN” (B), inspect the clutch master cylinder, operating cylinder and hydraulic line for fluid leaks. If fluid leaks are found, repair or replace. If fluid leaks are not found, add clutch fluid to bring it up to “MAX” (C) of clutch reservoir tank.

Recommended clutch fluid:
FMVSS No. 116, fresh DOT3 or DOT4 brake fluid

CAUTION:
Prevent the clutch fluid from being splashed over vehicle body. If the clutch fluid is splashed over vehicle body, flush it, and then wipe it up.

NOTE:
• Avoid mixing different brakes of brake fluid to prevent degradation of the fluid.
• Be careful not to allow dirt or dust to get into the reservoir tank.

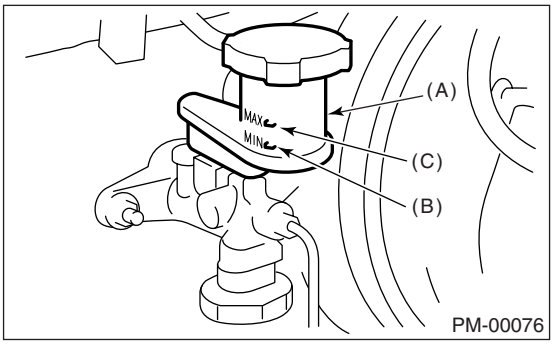

(A) Reservoir tank
(B) MIN level
(C) MAX level

15.Transmission Gear Oil

A: REPLACEMENT

1. MANUAL TRANSMISSION

1) Drain the gear oil by removing drain plug.

NOTE:
• Before starting work, cool off the transmission gear oil well.
• If transmission gear oil adheres to the exhaust pipe, wipe it off completely.

5MT

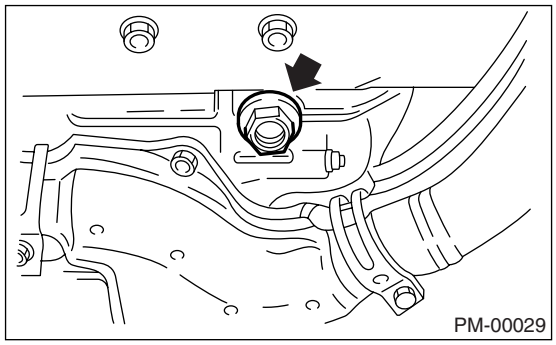

6MT

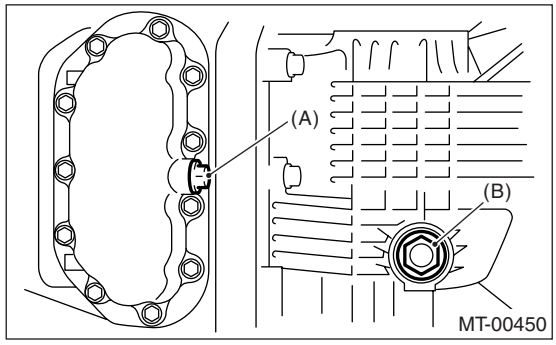

(A) Drain plug (Oil pan side)
(B) Drain plug (Clutch housing side)

2) Replace the gasket with new one, and then tighten it to the specified torque.

Tightening torque:
5MT
70 N·m (7.1 kgf-m, 51.6 ft-lb)
6MT (Oil pan side):
44 N·m (4.5 kgf-m, 32.5ft-lb)
6MT (Clutch housing side):
70 N·m (7.1 kgf-m, 51.6 ft-lb)

3) Fill transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

NOTE:
Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

Gear oil capacity:
FWD model
3.3 L (3.5 US qt, 2.5 Imp qt)
AWD model (5MT single range model):
3.5 L (3.7 US qt, 3.1 Imp qt)
AWD model (5MT dual range model):
4.0 L (4.2 US qt, 3.5 Imp qt)
6MT:
4.1 L (4.3 US qt, 3.6 Imp qt)

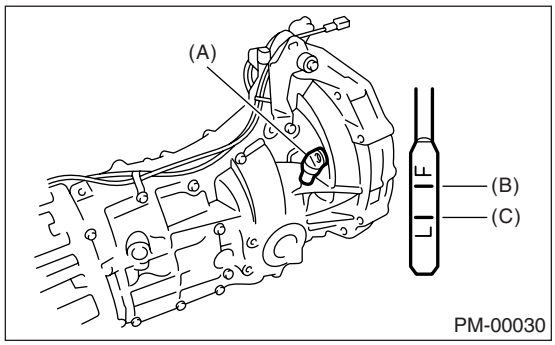

(A) Oil level gauge
(B) Upper level
(C) Lower level

16.Hill-holder System

A: INSPECTION AND ADJUSTMENT

1) Confirm the stopping and starting performance by activating the hill-holder on an uphill road of 3° or higher inclination.

(1) When the vehicle does not stop;
Tighten the adjusting nut of PHV cable.

(2) When the vehicle does not start properly;
A; When the hill-holder is released later than engagement of clutch (engine tends to stall): Loosen the adjusting nut gradually until smooth starting is enabled.
B; When the hill-holder is released earlier than engagement to clutch (vehicle slips down slightly): Tighten the adjusting nut so that hill-holder is released later than engagement of clutch (status in A). Then make adjustment the same as in A.

NOTE:
• Whenever turning the adjusting nut, hold the inner cable with pliers to prevent it from turning.
• Replace the pressure hold valve (PHV) or PHV cable with a new one, if they are defective and/or damaged.

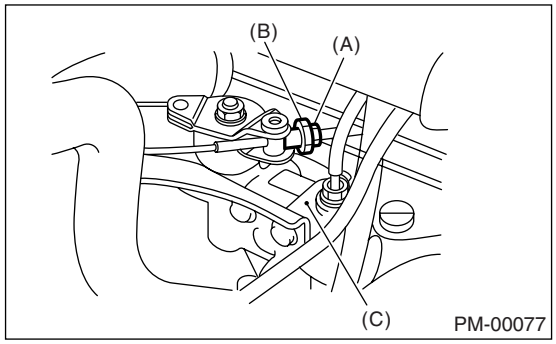

(A) Lock nut
(B) Adjusting nut
(C) Pressure hold valve

17.ATF

A: INSPECTION

CAUTION:
The level of ATF varies with fluid temperature. Pay attention to the fluid temperature when checking ATF level.

1) Raise the ATF temperature by driving a distance of 5 to 10 km (3 to 6 miles). Otherwise, idle the engine to raise ATF temperature to 70 — 80°C (158 — 176°F) on Subaru Select Monitor. <Ref. to 4AT-21, READ CURRENT DATA, OPERATION, Subaru Select Monitor.>
2) Make sure the vehicle is level.
3) After selecting all positions (P, R, N, D, 3, 2, 1), set the select lever in "P" range. Measure the ATF level with the engine idling for one or two minutes.

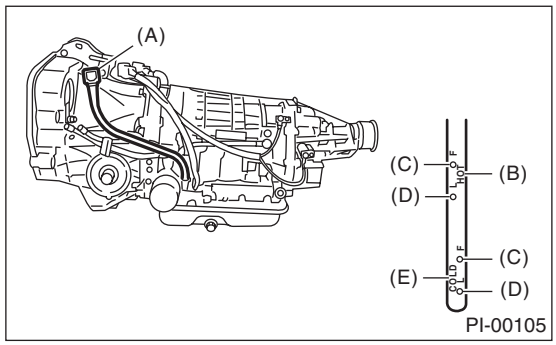

(A) Level gauge
(B) Hot side
(C) Upper level
(D) Lower level
(E) Cold side

4) Make sure that ATF level is above the center of upper and lower marks.

NOTE:
When the transmission is hot, the level should be above the center of upper and lower marks, and when it is cold, the level should be found below the center of these two marks.

5) If the ATF level is below the center between upper and lower marks, add the recommended ATF until the ATF level is found above the center between upper and lower marks.

CAUTION:
- **Use care not to exceed the upper limit level.**
- **Remember that the addition of ATF to the upper limit mark when the transmission is cold will result in overfilling of ATF, causing a transmission failure.**

6) Check ATF level after raising ATF temperature to 70 — 80°C (158 —176°F) by running the vehicle or by idling the engine again.
7) Check the ATF for leaks.
Check for leaks in the transmission. If there are leaks, it is necessary to repair or replace gasket, oil seals, plugs or other parts.

B: REPLACEMENT

1. AUTOMATIC TRANSMISSION FLUID

1) Drain the ATF (Automatic Transmission Fluid) by removing drain plug.

NOTE:
Before starting work, cool off the ATF well.

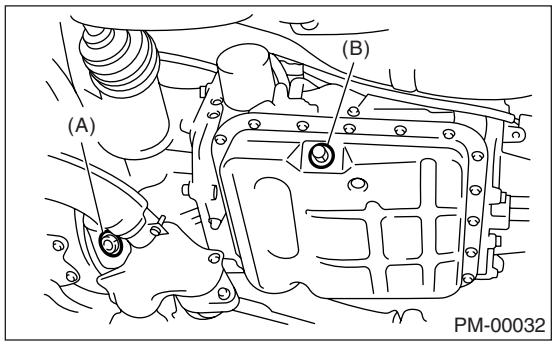

(A) Front differential drain plug
(B) ATF drain plug

2) Replace the gasket with a new one, and then tighten the specified torque.

Tightening torque:
25 N·m (2.55 kgf-m, 18.4 ft-lb)

3) Fill ATF up to the middle of the "COLD" side on level gauge by using the gauge hole.

Recommended fluid:
Dexron III type automatic transmission fluid

Fluid capacity:
Fill the same amount drained from ATF drain plug hole.

4) Check the ATF level. <Ref. to PM-32, INSPECTION, ATF.>

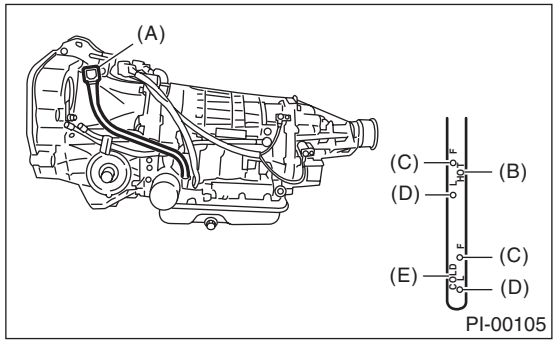

(A) Level gauge
(B) Hot side
(C) Upper level
(D) Lower level
(E) Cold side

2. ATF FILTER

NOTE:
ATF filter is a maintenance free part. ATF filter needs replacement, when it has physically damaged or ATF leaked.

For the replacement procedures of the ATF filter: <Ref. to 4AT-69, ATF Filter.>

18. Front & Rear Differential Gear Oil

A: REPLACEMENT

1. FRONT DIFFERENTIAL (MT MODEL)

For MT vehicle, differential oil works as manual transmission oil to lubricate differential. Refer to "Transmission Oil". <Ref. to PM-30, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (AT MODEL)

1) Drain the differential gear oil by removing drain plug using TORX®.

NOTE:
• Before starting work, cool off the differential gear oil well.
• If front differential gear oil adheres to the exhaust pipe, wipe it off completely.

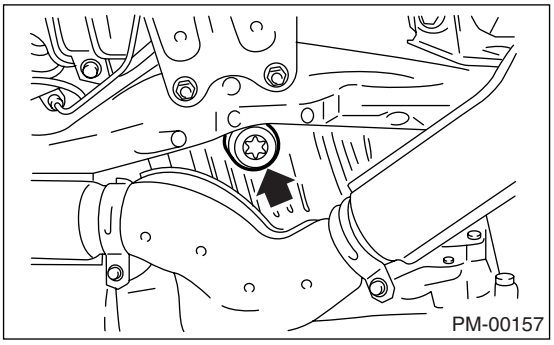

2) Replace the gasket with a new one, and then tighten the drain plug to specified torque.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

3) Fill differential gear oil through the oil level gauge hole up to the upper point of level gauge.

NOTE:
Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

Differential gear oil capacity:
1.1 — 1.3 ℓ (1.2 — 1.4 US qt, 1.0 — 1.1 Imp qt)

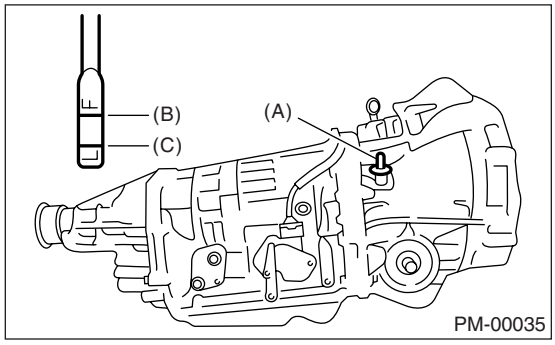

(A) Oil level gauge
(B) Upper level
(C) Lower level

3. REAR DIFFERENTIAL

1) Drain the oil by removing drain plug.
2) Remove the filler plug for quick draining oil.
3) Install the drain plug after draining oil.

NOTE:
• Apply fluid packing to the drain plug threads for T type.

Fluid packing:
Three Bond 1105 (Part No. 004403010)

• Use a new aluminum gasket for VA type.

Tightening torque:
T type:
49.0 N·m (5.0 kgf-m, 36.2 ft-lb)
VA type:
34 N·m (3.5 kgf-m, 25.3 ft-lb)

4) After installing the drain plug onto rear differential gear case firmly, fill oil up fully to the mouth of filler plug.

T TYPE

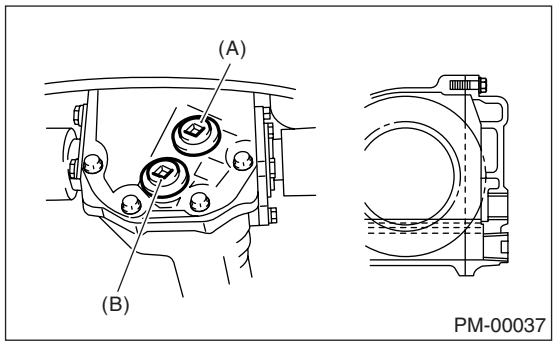

(A) Filler plug
(B) Drain plug

VA TYPE

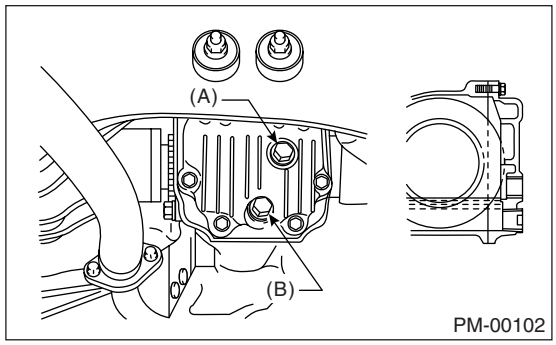

(A) Filler plug
(B) Drain plug

Oil capacity:
Except for STi model:
0.8 ℓ (0.8 US qt, 0.7 Imp qt)
STi model:
0.9 — 1.1 ℓ
(1.0 — 1.2 US qt, 0.8 — 1.0 Imp qt)

NOTE:
Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

5) Install the filler plug onto rear differential gear case firmly.

NOTE:
• Apply fluid packing to the filler plug threads for T type.

Fluid packing:
Three Bond 1105 (Part No. 004403010)

• Use a new aluminum gasket for VA type.

Tightening torque:
T type:
49.0 N·m (5.0 kgf-m, 36.2 ft-lb)
VA type:
34 N·m (3.5 kgf-m, 25.3 ft-lb)

19.Brake Line

A: INSPECTION

1. BRAKE LINE

1) Check scratches, swelling, corrosion, traces of fluid leakage on the brake hoses or pipe joints.
2) Check the possibility of adjacent parts interfering with brake pipes/hoses during driving, and loose connections/clamps.
3) Check any trace of fluid leakage, scratches, etc. on the master cylinder, wheel cylinder and pressure control valve.

NOTE:
• When the brake fluid level in the reservoir tank is lower than the specified limit, the brake fluid warning light on the combination meter will come on.
• Visually check the brake hose (using a mirror where it is difficult to see) for any damage.

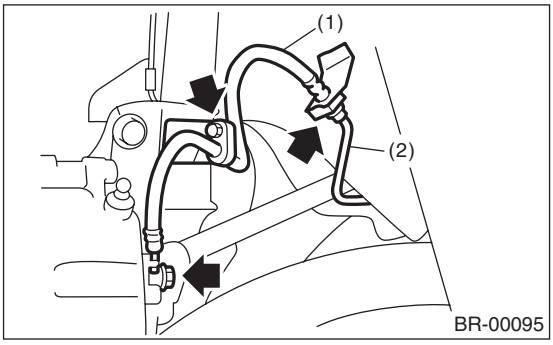

(1) Front brake hose
(2) Front brake pipe

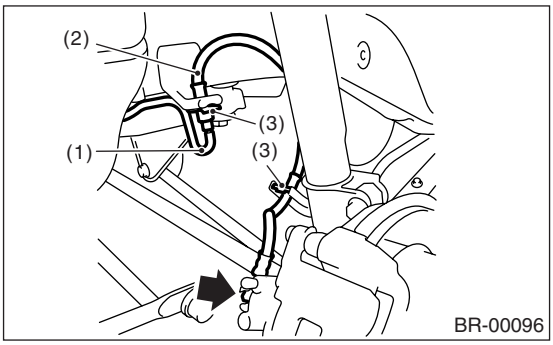

(1) Rear brake pipe
(2) Brake hose
(3) Clamp

B: CHECKING

1. SERVICE BRAKE

1) Check the free play of brake pedal with a force of less than 10 N (1 kgf, 2 lb).

Brake pedal free play:
0.5 — 2.0 mm (0.02 — 0.08 in)

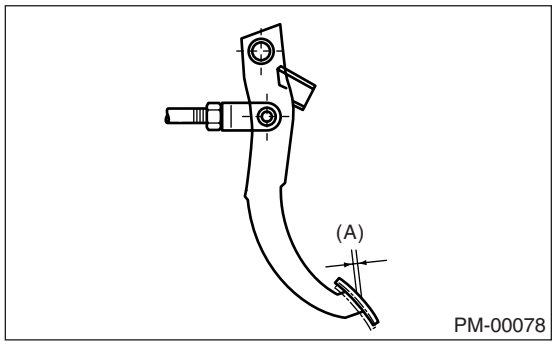

(A) Brake pedal free play

2) If the free play is out of specifications above, adjust the brake pedal as follows:
(1) Be sure the engine is off. (No vacuum is applied to brake booster.)
(2) There should be play between brake booster clevis and pin at brake pedal installing portion.
[Depress brake pedal pad with a force of less than 10 N (1 kgf, 2 lb) to a stroke of 0.5 to 2.0 mm (0.02 to 0.08 in).]
(3) Depress the surface of brake pad by hand.

(4) If there is no free play between clevis pin and clevis, turn the brake switch adjusting nut until the clearance between stopper and screw of brake switch becomes 0.3 mm (0.012 in).

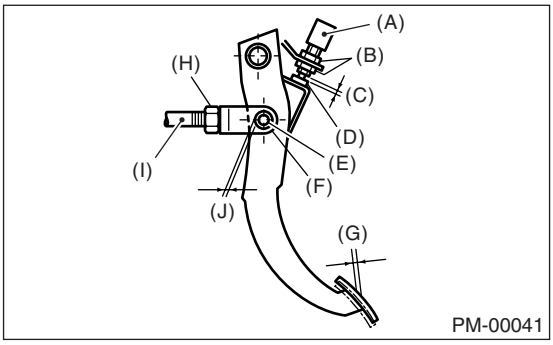

(A) Brake switch
(B) Adjusting nut
(C) 0.3 mm (0.012 in)
(D) Stopper
(E) Clevis pin
(F) Clevis
(G) Brake pedal free play
(H) Lock nut
(I) Brake booster operating rod
(J) Play at pin

3) Check the pedal stroke.
While the engine is idling, depress the brake pedal with a 490 N (50 kgf, 110 lb) load and measure the distance between brake pedal and steering wheel. With the brake pedal released, measure the distance between pedal and steering wheel again. The difference between the two measurements must be less than specified value. If the distance is more than specified, there is possibility of air inside the hydraulic unit.

Brake pedal reserve distance: A
90 mm (3.54 in)/ 490 N (50 kgf, 110 lb) or less

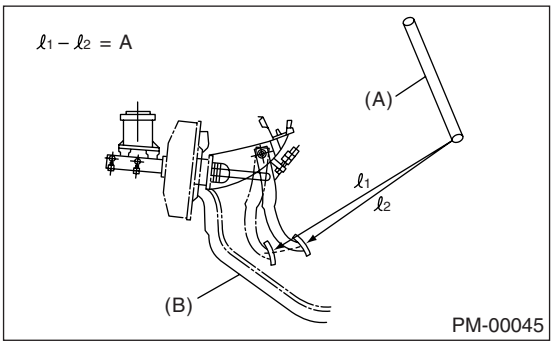

(A) Steering wheel
(B) Toe board

4) Check to see if air is in the hydraulic brake line by the feel of pedal operation. If air appears to exist in the line, bleed it from the system.
5) Check for even operation of all brakes, using a brake tester or by driving the vehicle for a short distance on a straight road.

2. BRAKE SERVO SYSTEM

1) With the engine off, depress the brake pedal several times applying the same pedal force: Make sure the travel distance should not change.
2) With the brake pedal depressed, start the engine: Make sure the pedal should move slightly toward the floor.
3) With the brake pedal depressed, stop the engine and keep the pedal depressed for 30 seconds: Make sure the pedal height should not change.
4) Check valve is built into the vacuum hose. Disconnect the vacuum hose to inspect function of check valve.
Blow air into the vacuum hose from its brake booster side end: Air must flow out of engine side end of hose. Next blow air into the hose from engine side: Air should not flow out of hose.
Replace both check valve and vacuum hose if the check valve is faulty. Engine side of vacuum hose is indicated by marking “ENG” as shown.

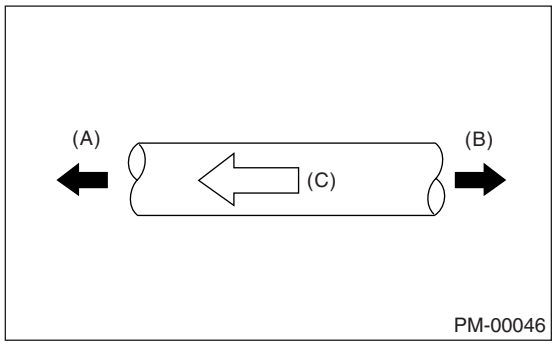

(A) Engine side
(B) Brake booster side
(C) ENG

5) Check the vacuum hose for cracks or other damage.

NOTE:
When installing the vacuum hose on the engine and brake booster, do not use soapy water or lubricating oil on their connections.

6) Check vacuum hose to make sure it is tight and secure.

20.Brake Fluid

A: REPLACEMENT

1) Either jack-up the vehicle and place a safety stand under it, or lift-up the vehicle.
2) Remove both front and rear wheels.
3) Draw out the brake fluid from master cylinder with syringe.
4) Refill the reservoir tank with recommended brake fluid.

Recommended brake fluid:
FMVSS No. 116, fresh DOT3 brake fluid

NOTE:
• Avoid mixing different brands of brake fluid to prevent degrading the quality of the fluid.
• Be careful not to allow dirt or dust to get into the reservoir tank.

Bleeding sequence (1) → (2) → (3) → (4)

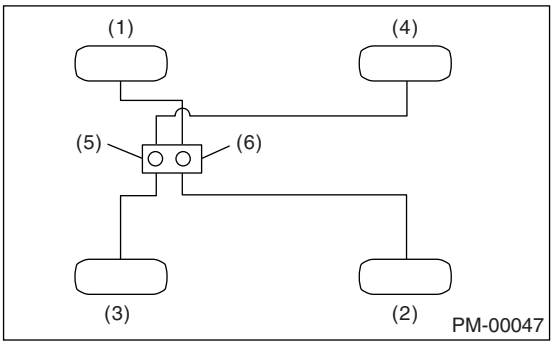

(1) Front right
(2) Rear left
(3) Front left
(4) Rear right
(5) Secondary
(6) Primary

5) Install one end of a vinyl tube onto the air bleeder and insert the other end of the tube into a container to collect the brake fluid.

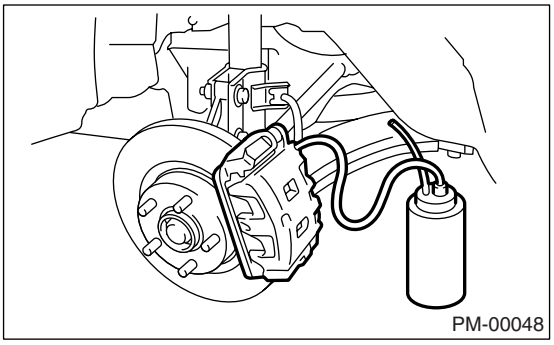

NOTE:
• Cover the bleeder with waste cloth, when loosening it, to prevent brake fluid from being splashed over surrounding parts.
• During the bleeding operation, keep the brake reservoir tank filled with brake fluid to eliminate entry of air.
• The brake pedal operating must be very slow.
• For convenience and safety, two people should do the work.
• The amount of brake fluid required is approx. 500 mℓ (16.9 US fl oz, 17.6 Imp fl oz) for total brake system.

6) Instruct your co-worker to depress the brake pedal slowly two or three times and then hold it depressed.
7) Loosen the bleeder screw approx. 1/4 turn until a small amount of brake fluid drains into container, and then quickly tighten the screw.
8) Repeat steps 6) and 7) above until there are no air bubbles in the drained brake fluid and new fluid flows through vinyl tube.

NOTE:
Add brake fluid as necessary while performing the air bleed operation, in order to prevent the tank from running short of brake fluid.

9) After completing the bleeding operation, hold brake pedal depressed and tighten the screw and install bleeder cap.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

10) Bleed air from each wheel cylinder by following the previous 5 steps.
11) Depress the brake pedal with a force of approx. 294 N (30 kgf, 66 lb) and hold it there for approx. 20 seconds. At this time check the pedal to see if it makes any unusual movement. Visually inspect the bleeder screws and brake pipe joints to make sure that there is no fluid leakage.
12) Install the wheels, and drive the vehicle for a short distance between 2 to 3 km (1 to 2 miles) to make sure that brakes are operating properly.

21.Disc Brake Pads and Discs

A: INSPECTION

1. DISC BRAKE PAD AND DISC

1) Jack-up the vehicle and support with rigid racks. Then remove the wheels.
2) Visually check the pad thickness through inspection hole of disc brake assembly. Replace the pad if necessary.

NOTE:
When replacing a pad, always replace the pads for both the right and left wheels at the same time. Also replace the pad clips if they are twisted or worn.

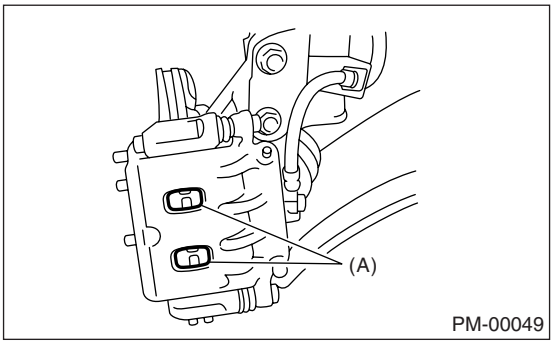

(A) Inspection hole

• Front

Pad thicknessmm (in)		
Standard	14, 15 inch	11 (0.43)
	16 inch	10 (0.39)
	17 inch	9.2 (0.36)
Service limit	14, 15 inch	1.5 (0.059)
	16 inch	1.5 (0.059)
	17 inch	1.2 (0.047)

• Rear

Pad thicknessmm (in)		
Standard	14 inch	9 (0.35)
	15 inch	11.5 (0.45)
	17 inch	9 (0.35)
Service limit	14 inch	1.5 (0.059)
	15 inch	1.5 (0.059)
	17 inch	1.2 (0.047)

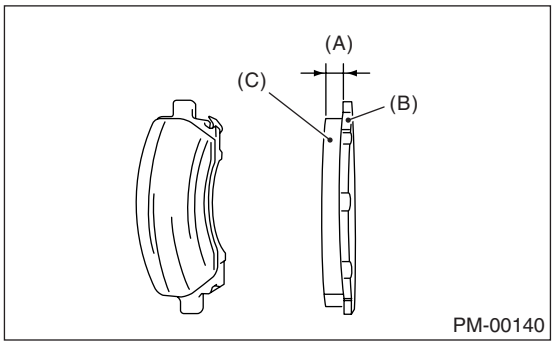

(1) Thickness of pad
(2) Back metal
(3) Lining

3) Check the disc rotor, and correct or replace if it is damaged or worn.
• Front

Disc rotor thicknessmm (in)		
Standard	14, 15, 16 inch	24 (0.94)
	17 inch	30 (1.18)
Service limit	14, 15, 16 inch	22 (0.87)
	17 inch	28 (1.10)

• Rear

Disc rotor thicknessmm (in)		
Standard	14 inch	10 (0.39)
	15 inch	18 (0.71)
	17 inch	20 (0.79)
Service limit	14 inch	8.5 (0.34)
	15 inch	16 (0.63)
	17 inch	18 (0.71)

4) Remove the caliper body. <Ref. to BR-31, Front Disc Brake Assembly.>, <Ref. to BR-42, Rear Disc Brake Assembly.>
5) Tighten the wheel nuts to secure disk rotor.
6) Set a dial gauge at a point less than 10 mm (0.39 in) from outer periphery of rotor, and then measure the disk rotor runout.

Disc rotor runout limit:
Front: 0.075 mm (0.0030 in)
Rear: 0.070 mm (0.0028 in)

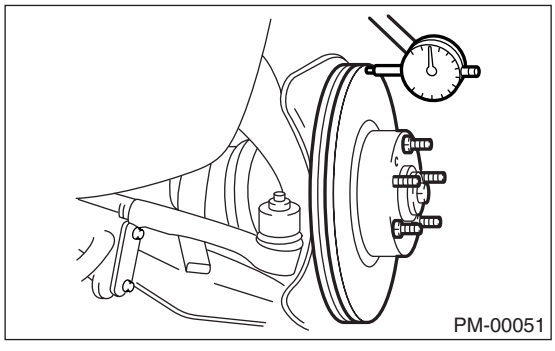

22.Brake Linings and Drums

A: INSPECTION

1. REAR DRUM BRAKE

1) Remove the brake drum, and check that there is no fluid leakage from wheel cylinder.
If there is fluid leakage from wheel cylinder, inspect the wheel cylinder, and then repair or replace it.
2) Inspect the brake shoes for damage or deformities and check brake linings for wear.

NOTE:
• Always replace both leading and trailing brake shoes for the right and left wheels at the same time.
• When either the right and left brake assembly is replaced, always replace the leading shoe and trailing shoe of the other.

Thickness of lining (except back metal)
Standard value: 4.1 mm (0.161 in)
Service limit: 1.5 mm (0.059 in)

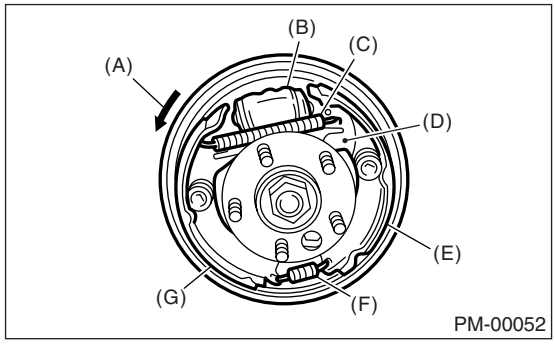

(A) Rotational direction of drum (Forward)
(B) Wheel cylinder
(C) Upper shoe return spring
(D) Adjusting lever
(E) Trailing shoe
(F) Lower shoe return spring
(G) Leading shoe

3) Check the brake drum for wear, dents or other damage.
If the inside surface of brake drum is streaked, correct the surface with emery cloth (#200 or more). If it is unevenly worn, tapered, or the outside surface of brake drum is damaged, correct or replace it.

Brake drum inner diameter
Standard value: 228.6 mm (9.000 in)
Service limit: 230.6 mm (9.079 in)

If deformation or wear of back plate, shoe, etc. is noticeable, replace the affected parts.

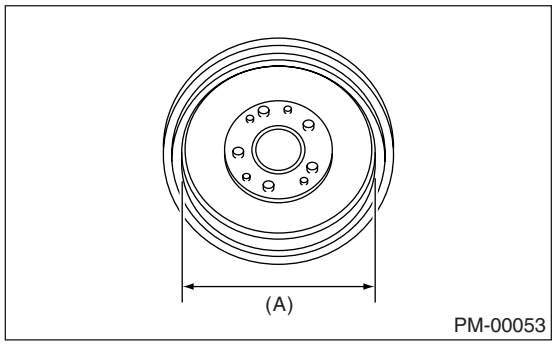

(A) Inside diameter

2. PARKING BRAKE (REAR DISC BRAKE)

Inspect the brake linings and drums of both sides of the rear brake at the same time by removing brake drums.
1) Inspect the brake shoes for damage or deformation and check brake linings for wear.

NOTE:
Always replace both primary and secondary brake shoes for the right and left wheels at the same time.

Brake lining thickness (except back metal)
Standard value: 3.2 mm (0.126 in)
Wear limit: 1.5 mm (0.059 in)

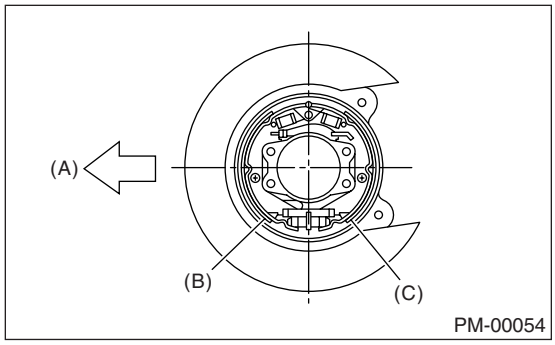

(A) Forward
(B) Brake shoe (Primary side)
(C) Brake shoe (Secondary side)

2) Check the disk rotor for wear, dents or other damage. If the inside surface of disk rotor is streaked, correct the surface with emery cloth (#200 or more). If it is unevenly worn or tapered, correct or replace it.

Brake drum inside diameter
Except for STi model
Standard value: 170 mm (6.69 in)
Wear limit: 171 mm (6.73 in)
STi model
Standard value: 190 mm (7.48 in)
Wear limit: 191 mm (7.52 in)

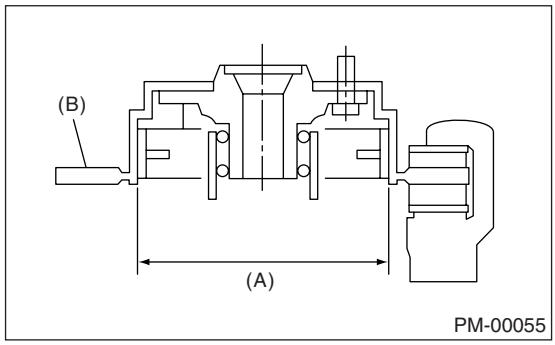

(A) Inside diameter
(B) Disk

3) If the deformation or wear of back plate, shoe, etc. is noticeable, replace them.
4) When the shoe return spring tension is excessively weakened, replace it.

B: ADJUSTMENT

1. REAR DRUM BRAKE

The main brake is adjusted automatically, and so there is no need to adjust it.

2. PARKING BRAKE (REAR DISC BRAKE)

For rear disc brake, adjust the parking brake after bleeding air.
1) Remove the rear cover (rubber) installed at back plate.
2) Turn the adjuster toward arrow mark (upward) until it is locked slightly, by using a flat tip screwdriver as shown in illustration.

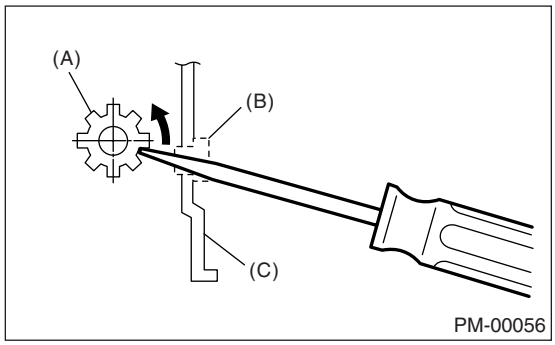

(A) Adjuster
(B) Cover (rubber)
(C) Back plate

3) Turn back (downward) the adjuster 3 to 4 notches.
4) Install the cover (rubber) at original position correctly.

23.Suspension

A: INSPECTION

1. SUSPENSION BALL JOINT

1) Jack-up the vehicle until front wheels are off ground.
2) Next, grasp the bottom of tire and move it in and out. If relative movement (B) is observed between the brake disc cover (A) and end of transverse link (D), ball joint (C) may be excessively worn.

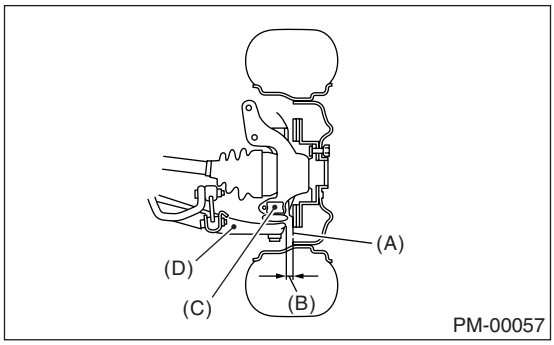

3) Next, grasp the end of transverse link and move it up and down. Relative movement (A) between the housing (D) and transverse link (C) boss indicates ball joint (B) may be excessively worn.

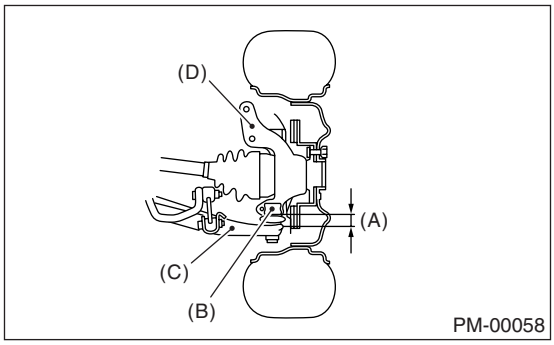

4) If relative movement is observed in the immediately preceding two steps, remove and inspect the ball joint. If free play exceeds standard, replace the ball joint. <Ref. to FS-19, Front Ball Joint.>
5) Damage of dust seal
Visually inspect the ball joint dust seal. If it is damaged, remove the transverse link. <Ref. to FS-16, Front Transverse Link.> And measure free play of ball joint. <Ref. to FS-19, Front Ball Joint.>

(1) When looseness exceeds standard value, replace the ball joint.
(2) If the dust seal is damaged, replace with the new ball joint.

NOTE:
When the transverse link ball joint has been removed or replaced, check the toe-in of front wheel. If the front wheel toe-in is not at specified value, adjust the toe-in. <Ref. to FS-7, Wheel Alignment.>

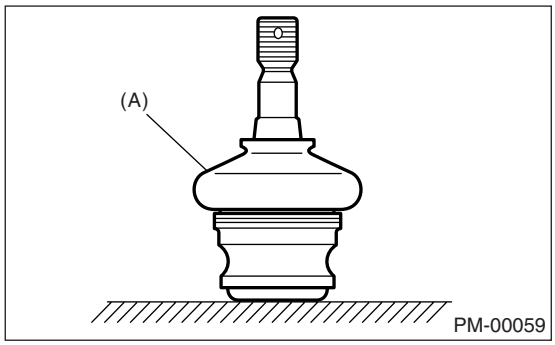

(A) Dust seal

2. TRANSVERSE LINK'S REAR BUSHING

Check oil leaks at around liquid-filled bushing. If oil leaks, replace the bushing.

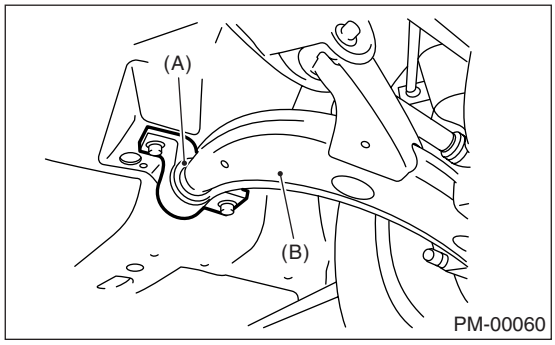

(A) Rear bushing
(B) Transverse link

3. WHEEL ARCH HEIGHT

1) Unload cargoes and set the vehicle in curb weight (empty) condition.
2) Then, check the wheel arch height of front and rear suspensions to ensure that they are within specified values. <Ref. to FS-7, Wheel Alignment.>
3) When the wheel arch height is out of standard, visually inspect the following components and replace deformed parts.
• Suspension components [Front strut assembly and rear shock absorber assembly]
• Parts connecting between suspension and body.
4) When no components are deformed, adjust the wheel arch height by replacing coil spring in the suspension which wheel arch height is out of standard. <Ref. to FS-7, Wheel Alignment.> <Ref. to RS-10, Wheel Alignment.>

4. WHEEL ALIGNMENT OF FRONT SUSPENSION

1) Check the alignment of front suspension to ensure that following items conform to standard values.
- Toe-in
- Camber angle
- Caster angle
- Steering angle

<Ref. to FS-7, Wheel Alignment.>
2) When the caster angle does not conform to reference, visually inspect the following components and replace deformed parts.
- Suspension components [Strut assembly, crossmember, transverse link, etc.]
- Body parts to which suspensions are installed.

3) When the toe-in and camber are out of standard value, adjust them so that they conform to respective service standard.
4) When the right-and-left turning angles of tire are out of standard, adjust to standard value.

5. WHEEL ALIGNMENT OF REAR SUSPENSION

1) Check the alignment of rear suspension to ensure that following items are within standard values.
- Toe-in
- Camber angle
- Thrust angle

<Ref. to RS-10, Wheel Alignment.>
2) When the camber angle does not conform to reference, visually inspect parts listed below. If deformation is observed, replace the damaged parts.
- Suspension components [Shock absorber, link F, link R, link UPR, arm R, sub frame, etc.]
- Body parts to which suspensions are installed.

3) When the toe-in and thrust angle are out of standard value, adjust them so that they conform to respective service standard.

6. OIL LEAKAGE OF STRUT

Visually inspect the front strut and rear strut for oil leakage as instructed. Replace front strut and rear strut if oil leaks excessively.

7. TIGHTNESS OF BOLTS AND NUTS

Check the bolts and nuts shown in the figure for looseness. Retighten the bolts and nuts to specified torque. If the self-lock nuts and bolts are removed, replace them with new ones.
Front suspension: <Ref. to FS-2, General Description.>
Rear suspension: <Ref. to RS-2, General Description.>

8. DAMAGE TO SUSPENSION PARTS

1) Check the following parts and the fastening portion of the vehicle body for deformation or excessive rusting which impairs the suspension. If necessary, replace the damaged parts with new ones. If minor rust formation, pitting, etc. are noted, remove the rust and apply remedial anti-corrosion measures.
- Front suspension
  - Transverse link
  - Crossmember
  - Strut
- Rear suspension
  - Crossmember
  - Lateral links
  - Trailing link
  - Strut
- In the district where salt is sprayed to melt snow on a road in winter, check suspension parts for damage caused by rust every 12 months after lapse of 60 months. Take rust prevention measure as required.

24.Wheel Bearing

A: INSPECTION

1. FRONT WHEEL BEARING

NOTE:
Inspect the condition of front wheel bearing grease.

1) Jack-up the front of vehicle.
2) While holding the front wheel by hand, swing it in and out to check bearing free play.
3) Loosen the wheel nuts and remove front wheel.
4) If bearing free play exists in step 2) above, attach a dial gauge to the hub and measure axial displacement in axial direction.

Service limit:
Straight-ahead position within 0.05 mm (0.0020 in)

5) Remove the bolts and self-locking nuts, and extract transverse link from front crossmember.
6) Remove the SFJ of front drive shaft from transmission. <Ref. to DS-18, Front Axle.>
7) While supporting the front drive shaft horizontally with one hand, turn the hub with the other to check for noise or binding.
If the hub is noisy or binds, disassemble the front axle and check condition of oil seals, bearing, etc.

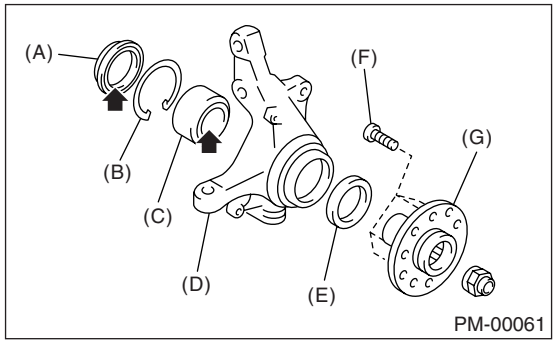

(A) Inner oil seal
(B) Snap ring
(C) Bearing
(D) Housing
(E) Outer oil seal
(F) Hub bolt
(G) Hub

2. REAR WHEEL BEARING

• AWD

1) Jack-up the rear of vehicle.
2) While holding the rear wheel by hand, swing it in and out to check bearing free play.
3) Loosen the wheel nuts and remove rear wheel.
4) If the bearing free play exists in step 2) above, attach a dial gauge to the hub COMPL and measure axial displacement in axial direction.

Service limit:
Straight-ahead position within 0.05 mm (0.0020 in)

5) Remove the DOJ of rear drive shaft from rear differential. <Ref. to DS-37, Rear Drive Shaft.>
6) While supporting the rear drive shaft horizontally with one hand, turn the hub COMPL with the other to check for noise or binding.
If the hub COMPL is noisy or binds, disassemble the rear axle and check condition of oil seals, bearings, etc.

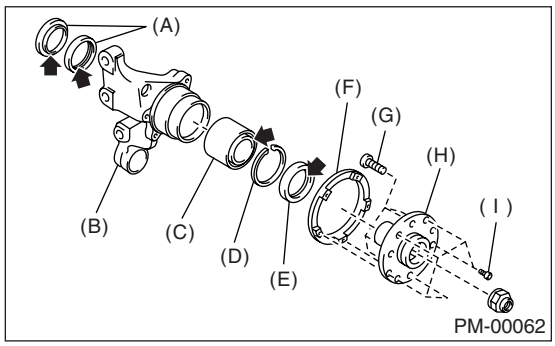

(A) Inner oil seal
(B) Rear housing
(C) Bearing
(D) Snap ring
(E) Outer oil seal
(F) Tone wheel
(G) Hub bolt
(H) Hub
(I) Socket bolt

• FWD

1) Jack-up the rear of vehicle.
2) While holding the rear wheel by hand, swing it in and out to check bearing free play.
3) Loosen the wheel nuts and remove rear wheel.
4) If the bearing free play exists in step 2) above, attach a dial gauge to the hub COMPL and measure axial displacement in axial direction.

Service limit:
Straight-ahead position within 0.05 mm (0.0020 in)

5) Turn the hub unit COMPL with hand to check for noise or binding.
If the hub unit COMPL is noisy or binds, replace the hub unit COMPL.

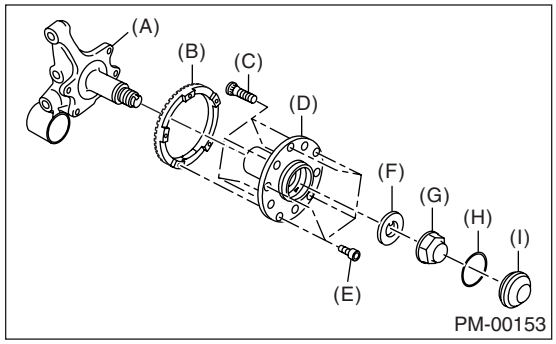

(A) Rear housing
(B) Tone wheel
(C) Hub bolt
(D) Hub unit COMPL
(E) Socket bolt
(F) Washer
(G) Hub nut
(H) O-ring
(I) Hub cap

25.Axle Boots & Joints

A: INSPECTION

1. FRONT AND REAR AXLE BOOTS

Inspect the front axle boots (A) and rear axle boots (B) for deformation, damage or failure. If faulty, replace them with new ones. <Ref. to DS-32, Front Drive Shaft.> <Ref. to DS-37, Rear Drive Shaft.>

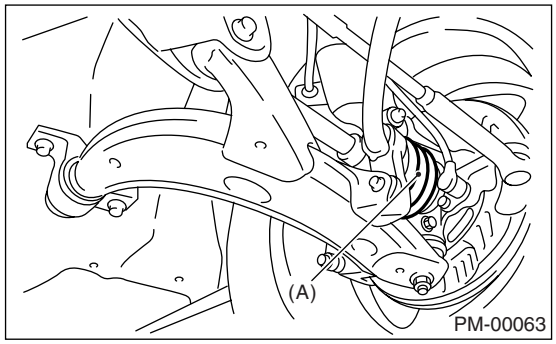

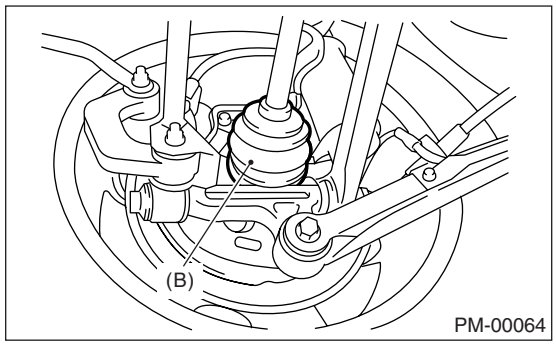

2. PROPELLER SHAFT

Inspect the propeller shaft for damage or failure. If faulty, replace with a new one. <Ref. to DS-15, Propeller Shaft.>

26.Steering System (Power Steering)

A: INSPECTION

1. STEERING WHEEL

1) Set the steering wheel in a straight-ahead position, and check the wheel spokes to make sure they are correctly set in their specified positions.
2) Lightly turn the steering wheel to the right and left to determine the point where front wheels start to move.
Measure the distance of the movement of steering wheel at the outer periphery of wheel.

Steering wheel free play:
0 — 17 mm (0 — 0.67 in)

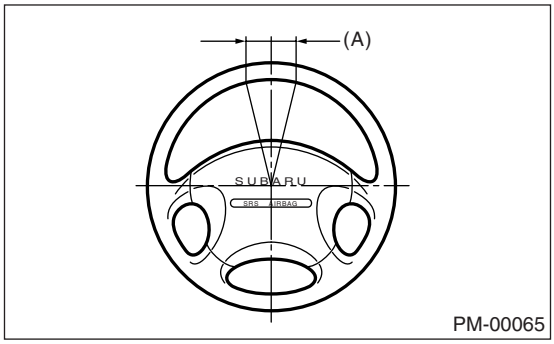

(A) Steering wheel free play

Move the steering wheel vertically toward the shaft to ascertain if there is play in the direction.

Maximum permissible play:
0.5 mm (0.020 in)

3) Drive the vehicle and check the following items during operation.
(1) Steering force:
The effort required for steering should be smooth and even at all points, and should not vary.
(2) Pull to one side:
Steering wheel should not be pulled to either side while driving on a level surface.
(3) Wheel runout:
Steering wheel should not show any sign of runout.
(4) Return factor:
Steering wheel should return to its original position after it has been turned and then released.

2. STEERING SHAFT JOINT

1) When the steering wheel free play is excessive, disconnect the universal joint of steering shaft and check it for any play and yawing torque (at the point of the crossing direction). Also inspect for any damage to sealing or worn serrations. If the joint is loose, retighten the mounting bolts to the specified torque.

Tightening torque:
24 N·m (2.4 kgf-m, 17.4 ft-lb)

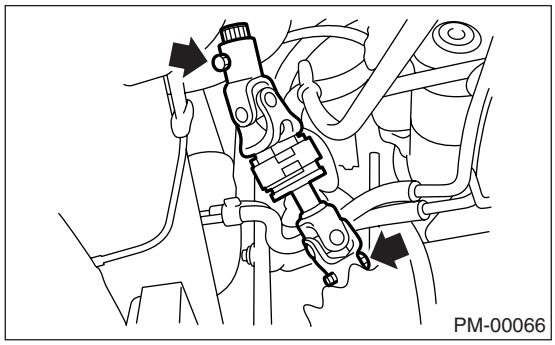

3. GEARBOX

1) With wheels placed on a level surface, turn the steering wheel 90° in both the right and left directions.
While the wheel is being rotated, reach under the vehicle and check for looseness in gearbox.

Tightening torque:
59 N·m (6.0 kgf-m, 43.4 ft-lb)

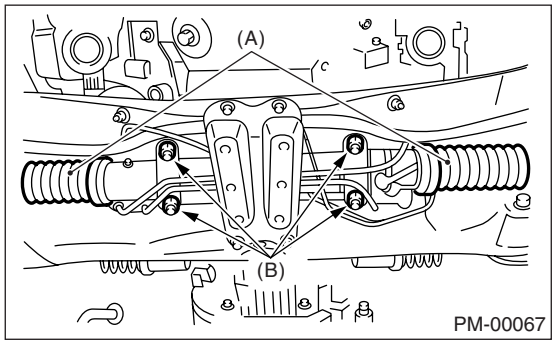

(A) Boot
(B) Gear box mounting bolt

2) Check the boot for damage, cracks or deterioration.
3) With the vehicle on a level surface, quickly turn the steering wheel to the right and left.
While the steering wheel is being rotated, check the gear backlash. If any unusual noise is noticed, adjust the gear backlash in the following manner.
(1) Tighten the adjusting screw to 7.4 N·m (0.75 kgf-m, 5.4 ft-lb) and then loosen. Repeat this operation twice.

(2) Retighten the adjusting screw to 7.4 N·m (0.75 kgf-m, 5.4 ft-lb) and back off 25°.
(3) Apply liquid packing to at least 1/3 of entire perimeter of adjusting screw thread.

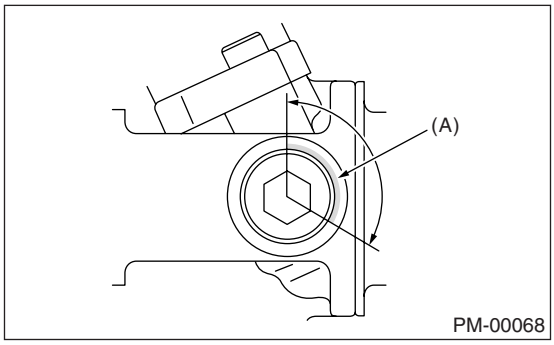

(A) Apply liquid packing to at least 1/3 of entire perimeter

(4) Install the lock nut. While holding the adjusting screw with a wrench, tighten the lock nut using ST.

ST 926230000 SPANNER

Tightening torque (Lock nut):
39 N·m (4.0 kgf-m, 29 ft-lb)

Hold the adjusting screw with a wrench to prevent it from turning, while tightening the lock nut.

4. TIE-ROD

1) Check the tie-rod and tie-rod ends for bends, scratches or other damage.

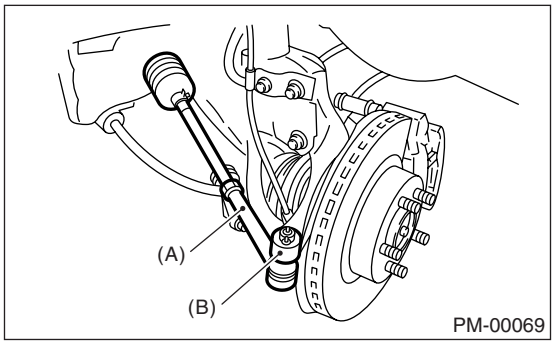

(A) Tie-rod end
(B) Knuckle arm

2) Check the connections of knuckle ball joints for play, inspect for damage on dust seals, and check free play of ball studs. If the castle nut is loose, retighten it to the specified torque, then tighten further up to 60° until the cotter pin hole is aligned.

Tightening torque:
27 N·m (2.75 kgf-m, 19.9 ft-lb)

3) Check the lock nut on tie-rod end for tightness. If it is loose, retighten it to the specified torque.

Tightening torque:
83 N·m (8.5 kgf-m, 61.5 ft-lb)

5. POWER STEERING FLUID LEVEL

NOTE:
• Check at power steering fluid temperature 20°C (68°F); read the fluid level on the “COLD” side.
• Check at power steering fluid temperature 80°C (176°F); read the fluid level on the “HOT” side.

1) Place the vehicle with engine “OFF” on a flat and level surface.
2) Check the fluid level using the scale on the outside of reservoir tank (A). If the level is below “MIN” (B), add fluid to bring it up to “MAX” (C).

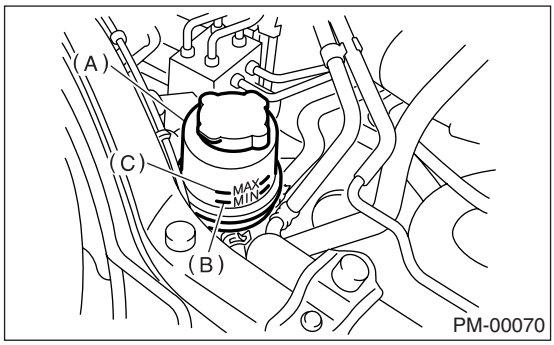

NOTE:
If the fluid level is at MAX level or above, drain fluid to keep the level in specified range of indicator by using a syringe or the like.

Recommended fluid:
Dexron III

Fluid capacity:
0.7 ℓ (0.7 US qt, 0.6 Imp qt)

6. POWER STEERING FLUID FOR LEAKS

Inspect the underside of oil pump and gearbox for power steering system, hoses, piping and their couplings for fluid leaks.
If fluid leaks are found, correct them by retightening their fitting bolts (or nuts) and/or replacing their parts.

NOTE:
• Wipe the leakage fluid off after correcting fluid leaks, or a wrong diagnosis is taken later.
• Also pay attention to clearances between hoses (or pipings) and other parts when inspecting fluid leaks.

7. HOSES OF OIL PUMP FOR DAMAGES

Check the pressure hose and return hose of oil pump for crack, swell or damage. Replace the hose with a new one if necessary.

NOTE:
Prevent the hoses from revolving and/or turning when installing hoses.

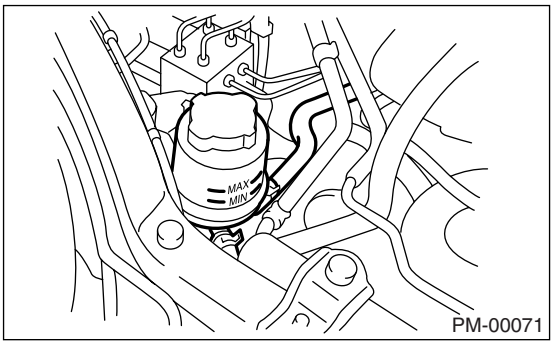

8. POWER STEERING PIPES FOR DAMAGE

Check the power steering pipes for corrosion and damage.
Replace the pipes with a new one if necessary.

9. GEARBOX BOOTS

Inspect both sides of gearbox boots as follows, and correct the defects if necessary.
1) (A) and (B) positions of gearbox boot are fitted correspondingly in (A) and (B) grooves of gearbox and the rod (C).
2) Clips are fitted outside of (A) and (B) positions of boot.
3) Boot does not have crack and hole.

NOTE:
Rotate (B) the position of gearbox boot against twist of it produced by adjustment of toe-in, etc.

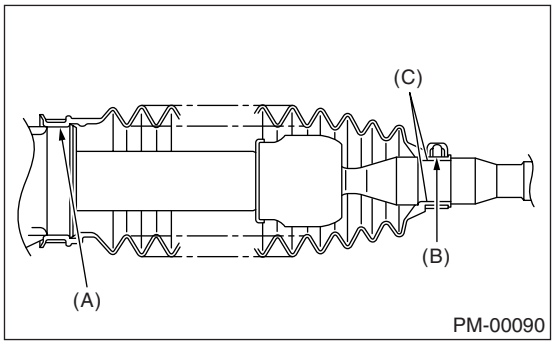

10.FITTING BOLTS AND NUTS

Inspect the fitting bolts and nuts of oil pump and bracket for looseness, and retighten them if necessary.
Inspect and/or retighten them when engine is cold.

ENGINE SECTION 1

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)	FU(H4SO)
EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)	EC(H4SO)
INTAKE (INDUCTION)	IN(H4SO)
MECHANICAL	ME(H4SO)
EXHAUST	EX(H4SO)
COOLING	CO(H4SO)
LUBRICATION	LU(H4SO)
SPEED CONTROL SYSTEMS	SP(H4SO)
IGNITION	IG(H4SO)
STARTING/CHARGING SYSTEMS	SC(H4SO)
ENGINE (DIAGNOSTICS)	EN(H4SO)
FUEL INJECTION (FUEL SYSTEMS)	FU(H4SOw/oOBD)
EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)	EC(H4SOw/oOBD)
INTAKE (INDUCTION)	IN(H4SOw/oOBD)
MECHANICAL	ME(H4SOw/oOBD)
EXHAUST	EX(H4SOw/oOBD)
COOLING	CO(H4SOw/oOBD)

ENGINE SECTION 1

LUBRICATION	LU(H4SOw/oOBD)
SPEED CONTROL SYSTEMS	SP(H4SOw/oOBD)
IGNITION	IG(H4SOw/oOBD)
STARTING/CHARGING SYSTEMS	SC(H4SOw/oOBD)
ENGINE (DIAGNOSTICS)	EN(H4SOw/oOBD)

FUEL INJECTION (FUEL SYSTEMS)

FU(H4SO)

		Page
1.	General Description	2
2.	Throttle Body	15
3.	Intake Manifold	16
4.	Engine Coolant Temperature Sensor	27
5.	Crankshaft Position Sensor	28
6.	Camshaft Position Sensor	29
7.	Knock Sensor	30
8.	Throttle Position Sensor	31
9.	Manifold Absolute Pressure Sensor	33
10.	Intake Air Temperature Sensor	34
11.	Idle Air Control Solenoid Valve	35
12.	EGR Valve	36
13.	Air Assist Injector Solenoid Valve	37
14.	Fuel Injector	38
15.	Front Oxygen (A/F) Sensor	44
16.	Rear Oxygen Sensor	46
17.	Engine Control Module (ECM)	48
18.	Main Relay	49
19.	Fuel Pump Relay	50
20.	Fuel	51
21.	Fuel Tank	52
22.	Fuel Filler Pipe	55
23.	Fuel Pump	59
24.	Fuel Level Sensor	61
25.	Fuel Filter	62
26.	Fuel Cut Valve	63
27.	Fuel Damper Valve	64
28.	Fuel Delivery, Return and Evaporation Lines	65
29.	Fuel System Trouble in General	68

1. General Description

A: SPECIFICATIONS

Item		Specification
Fuel tank	Capacity	50 ℓ (13.2 US gal, 11.0 Imp gal)
	Location	Under rear seat
Fuel pump	Type	Impeller
	Shutoff discharge pressure	370 — 677 kPa (3.77 — 6.9 kg/cm^2, 53.6 — 98 psi)
	Discharge flow	More than 65 ℓ (17.2 US gal, 14.3 Imp gal)/h [12 V at 300 kPa (3.06 kg/cm^2, 43.5 psi)]
Fuel filter		Cartridge type

B: COMPONENT

1. INTAKE MANIFOLD

• 1.6 L MODEL

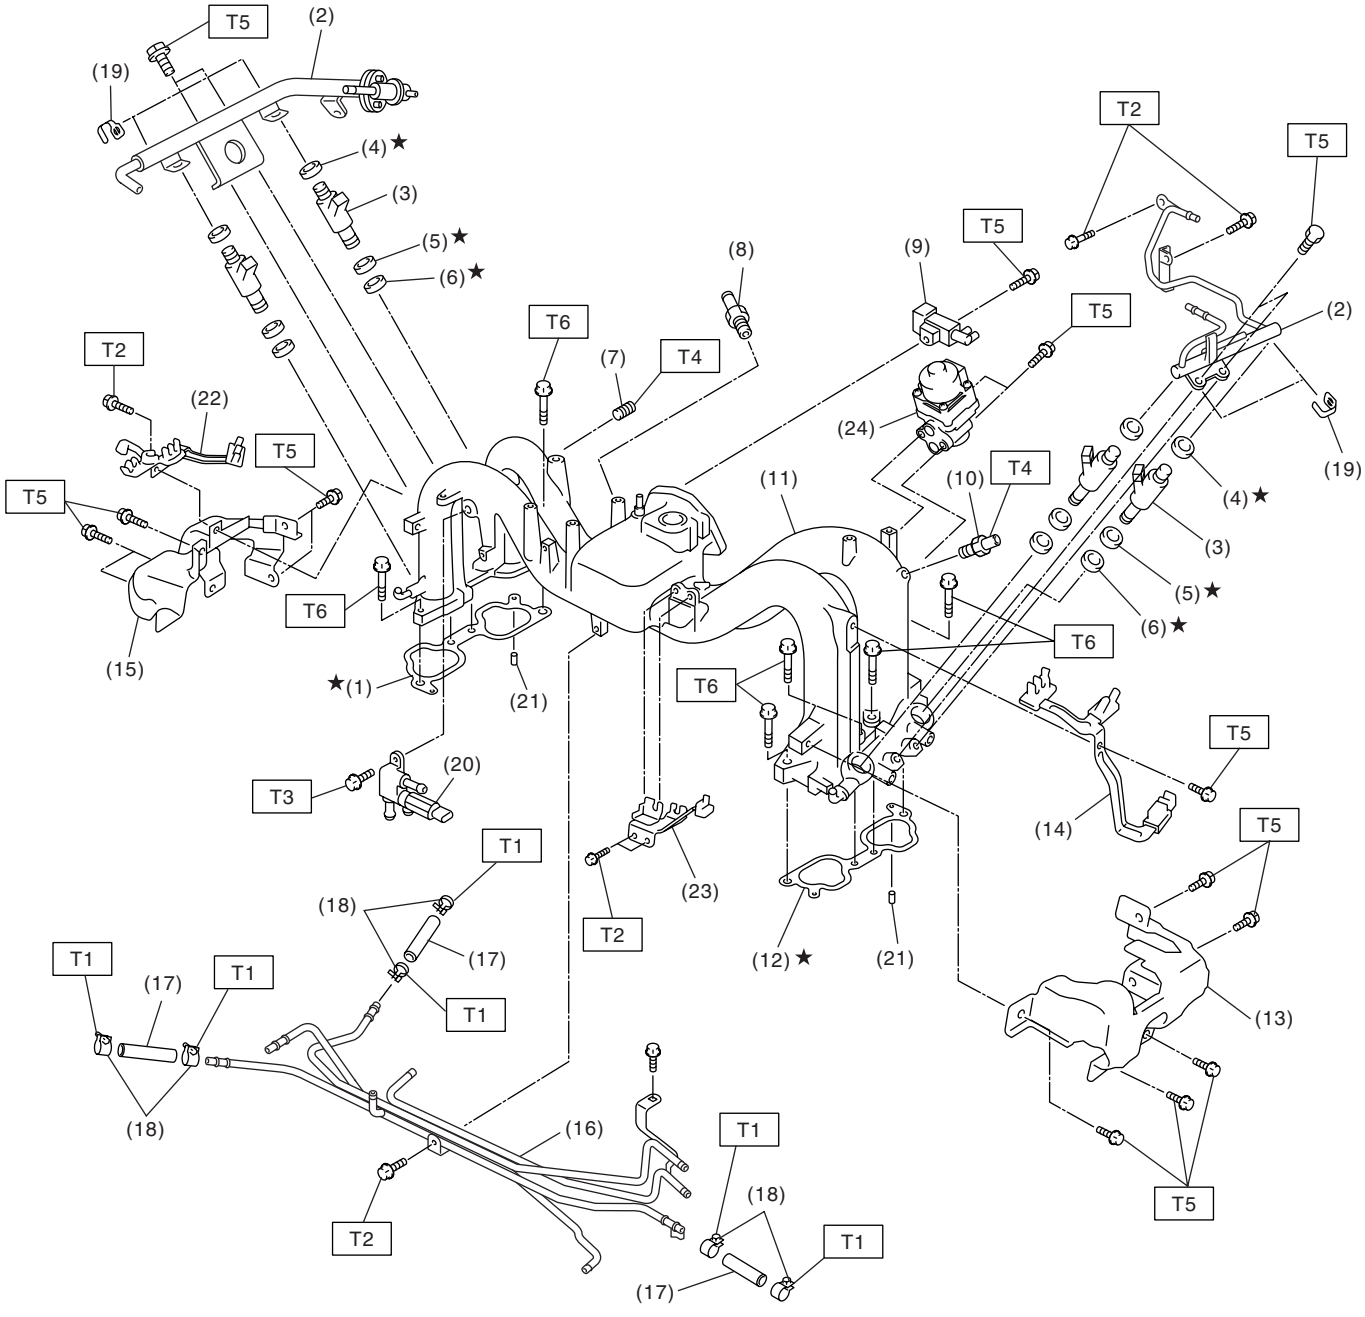

FU-00953

(1) Intake manifold gasket RH
(2) Fuel injector pipe
(3) Fuel injector
(4) O-ring
(5) O-ring
(6) O-ring
(7) Plug
(8) PCV valve
(9) Purge control solenoid valve
(10) Nipple
(11) Intake manifold
(12) Intake manifold gasket LH
(13) Fuel pipe protector LH
(14) Plug cord holder LH
(15) Fuel pipe protector RH
(16) Fuel pipe ASSY
(17) Fuel hose
(18) Clip
(19) Clip
(20) Air assist injector solenoid valve
(21) Guide pin
(22) Plug cord holder RH
(23) Accelerator cable bracket
(24) EGR valve

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.5 (0.15, 1.1)
T2: 5.0 (0.51, 3.7)
T3: 6.4 (0.65, 4.7)
T4: 17(1.7, 12.5)
T5: 19 (1.9, 14.0)
T6: 25 (2.5, 18.4)

• 2.0 L MODEL

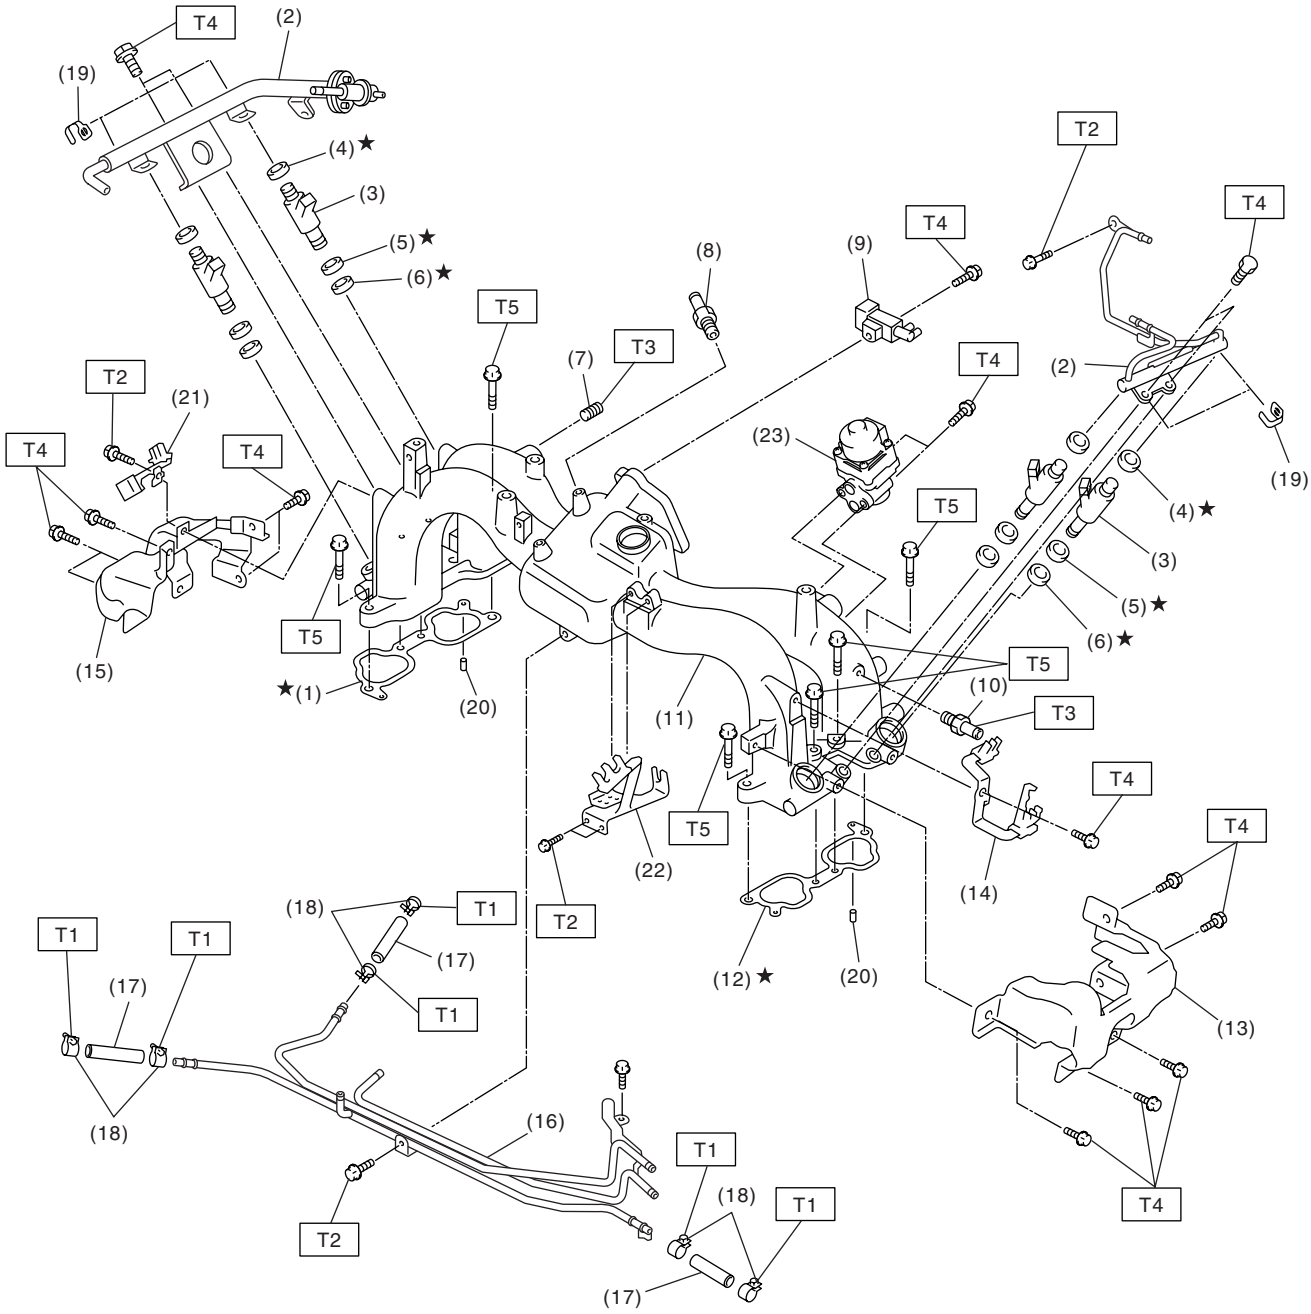

FU-00954

(1) Intake manifold gasket RH
(2) Fuel injector pipe
(3) Fuel injector
(4) O-ring
(5) O-ring
(6) O-ring
(7) Plug
(8) PCV valve
(9) Purge control solenoid valve
(10) Nipple
(11) Intake manifold
(12) Intake manifold gasket LH
(13) Fuel pipe protector LH
(14) Plug cord holder LH
(15) Fuel pipe protector RH
(16) Fuel pipe ASSY
(17) Fuel hose
(18) Clip
(19) Clip
(20) Guide pin
(21) Plug cord holder RH
(22) Accelerator cable bracket
(23) EGR valve

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.5 (0.15, 1.1)
T2: 5.0 (0.51, 3.7)
T3: 17 (1.7, 12.5)
T4: 19 (1.9, 13.7)
T5: 25 (2.5, 18.1)

2. AIR INTAKE SYSTEM

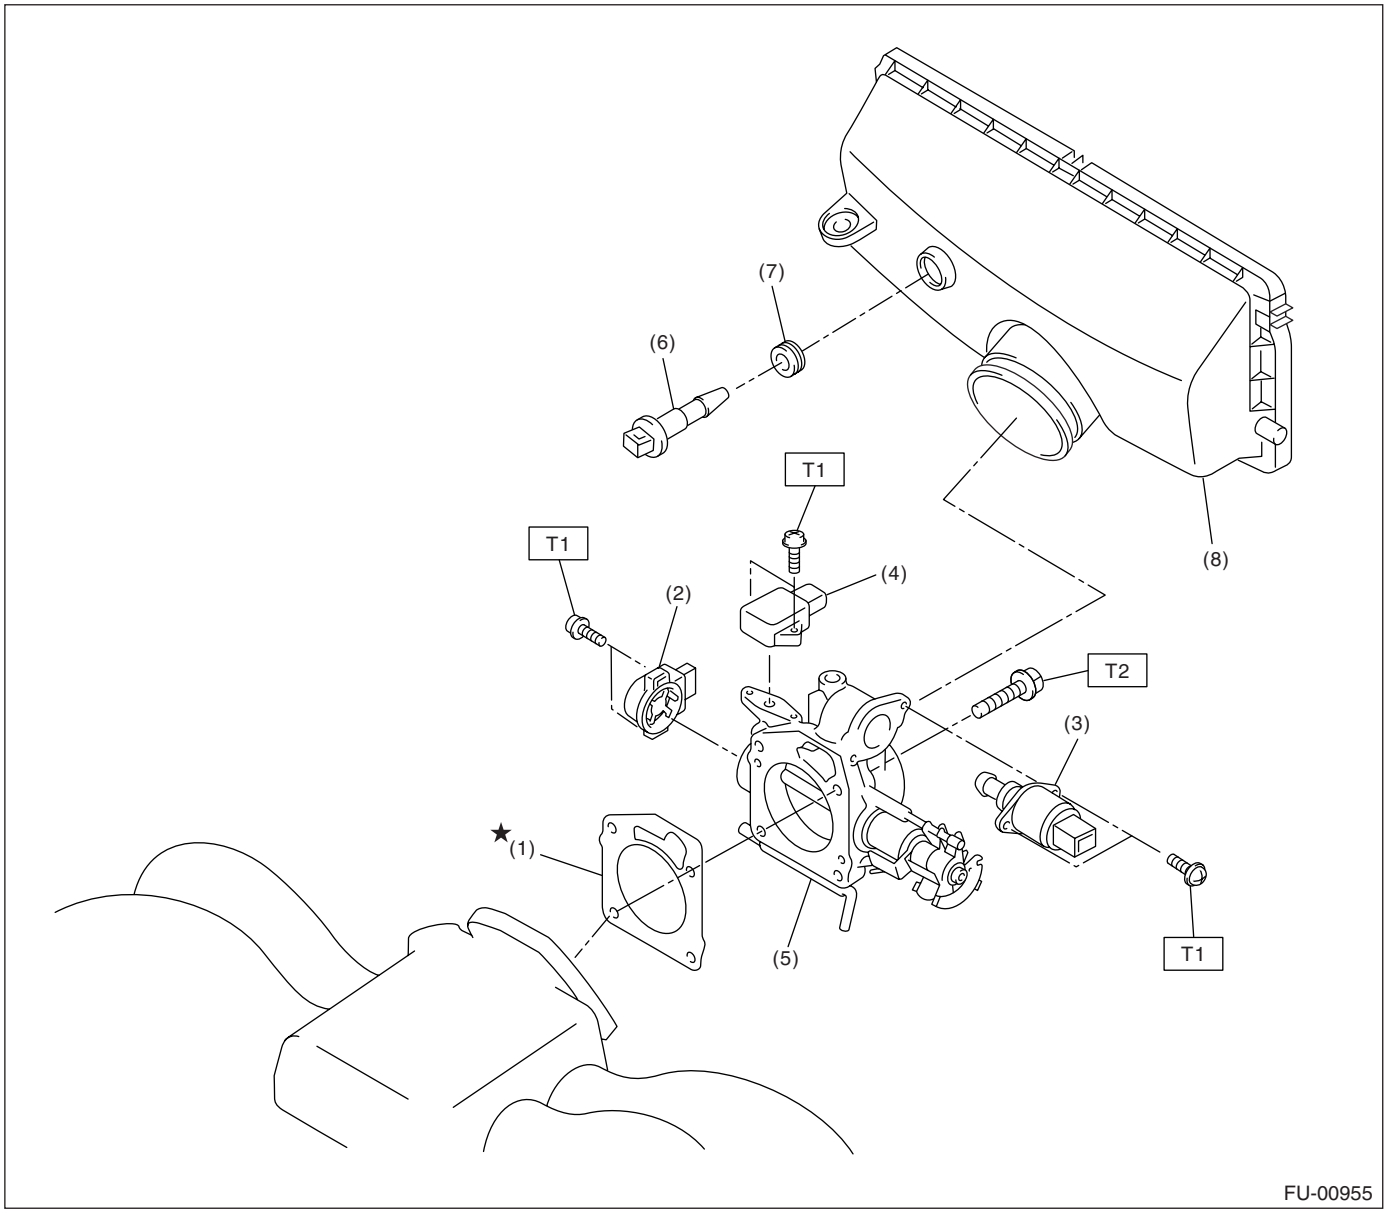

(1) Gasket
(2) Throttle position sensor
(3) Idle air control solenoid valve
(4) Manifold absolute pressure sensor
(5) Throttle body
(6) Intake air temperature sensor
(7) Grommet
(8) Air cleaner case

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.6 (0.16, 1.2)
T2: 22 (2.2, 15.9)

3. CRANKSHAFT POSITION, CAMSHAFT POSITION AND KNOCK SENSORS

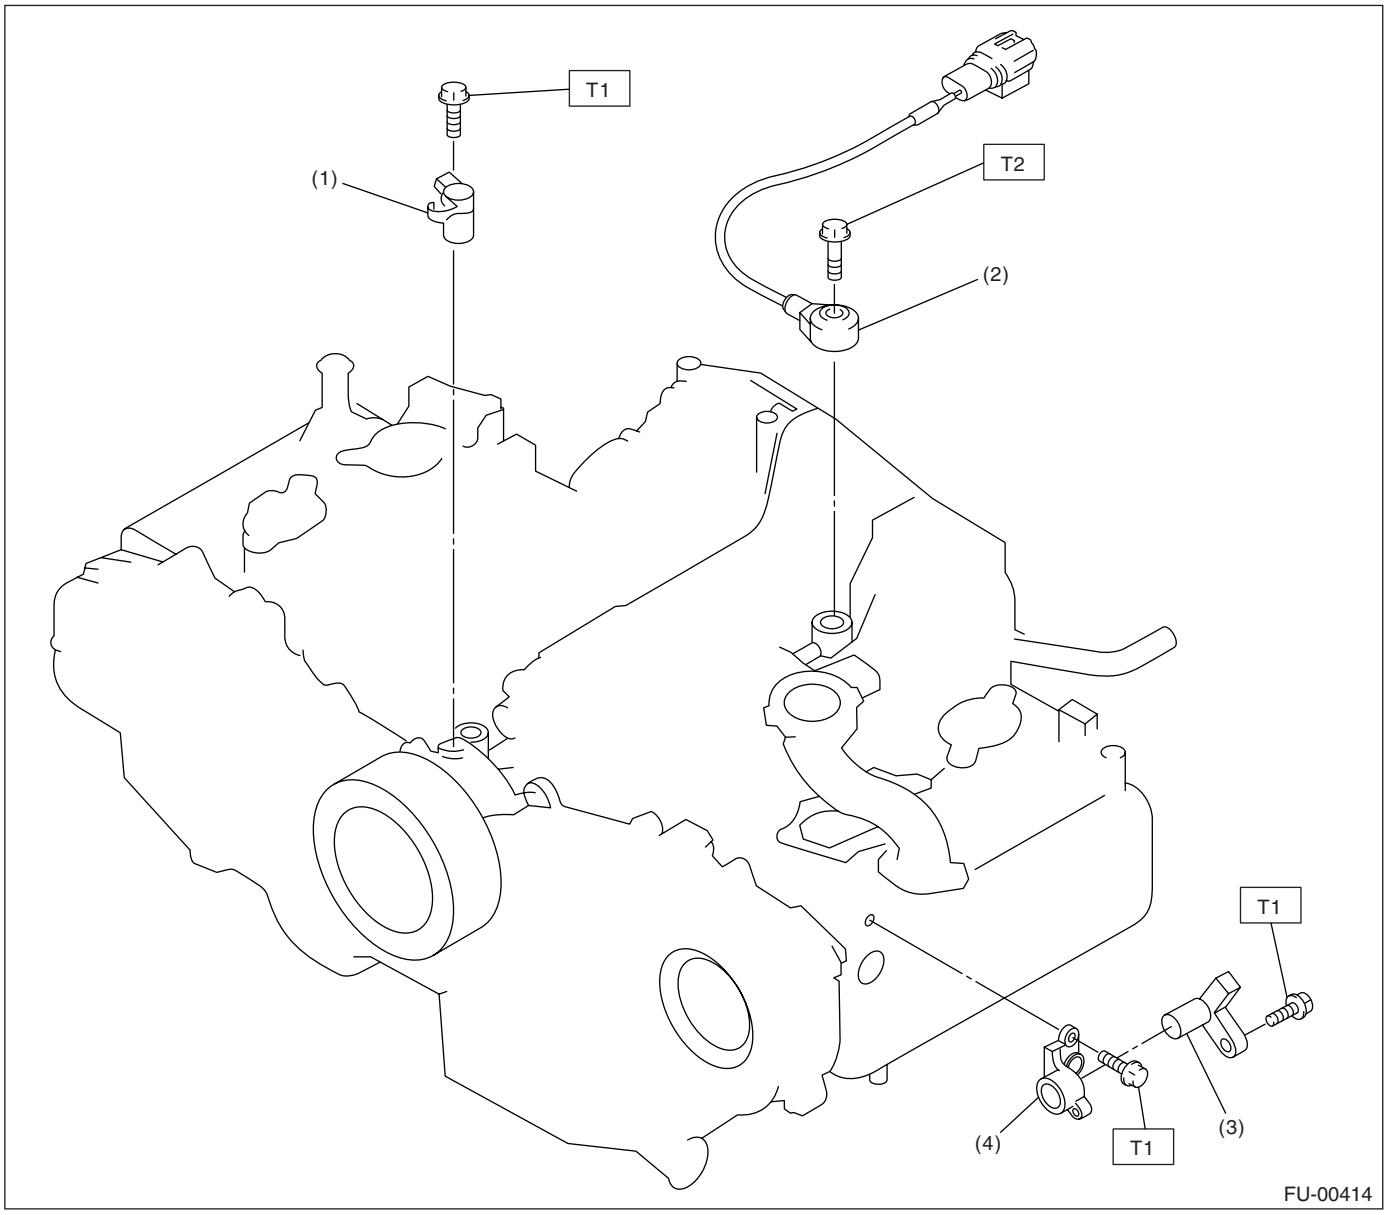

(1) Crankshaft position sensor
(2) Knock sensor
(3) Camshaft position sensor
(4) Camshaft position sensor support

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 24 (2.4, 17.4)

4. FUEL TANK

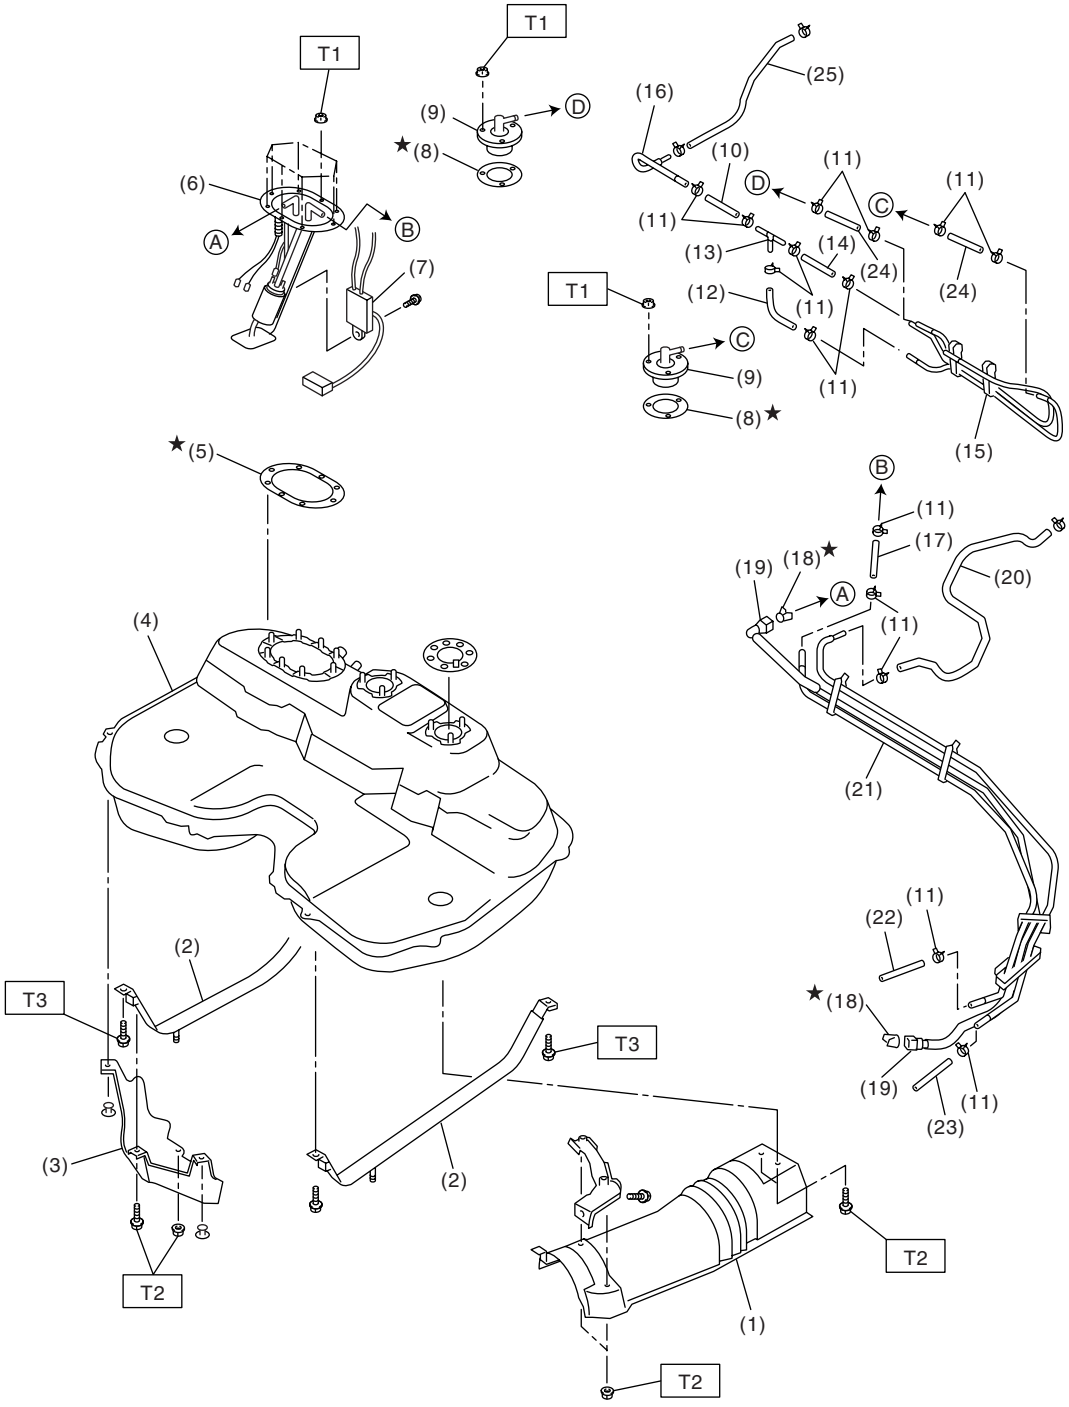

FU-00908

(1) Heat shield cover
(2) Fuel tank band
(3) Protector RH
(4) Fuel tank
(5) Fuel pump gasket
(6) Fuel pump ASSY
(7) Fuel level sensor
(8) Fuel cut valve gasket
(9) Fuel cut valve
(10) Evaporation hose A
(11) Clip
(12) Evaporation hose B
(13) Joint pipe
(14) Evaporation hose C
(15) Evaporation pipe ASSY
(16) Evaporation pipe
(17) Fuel return hose A
(18) Retainer
(19) Quick connector
(20) Evaporation hose D
(21) Fuel pipe ASSY
(22) Fuel return hose B
(23) Evaporation hose E
(24) Evaporation hose F
(25) Evaporation hose G

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 7.4 (0.75, 5.4)
T3: 33 (3.4, 24.3)

5. FUEL LINE

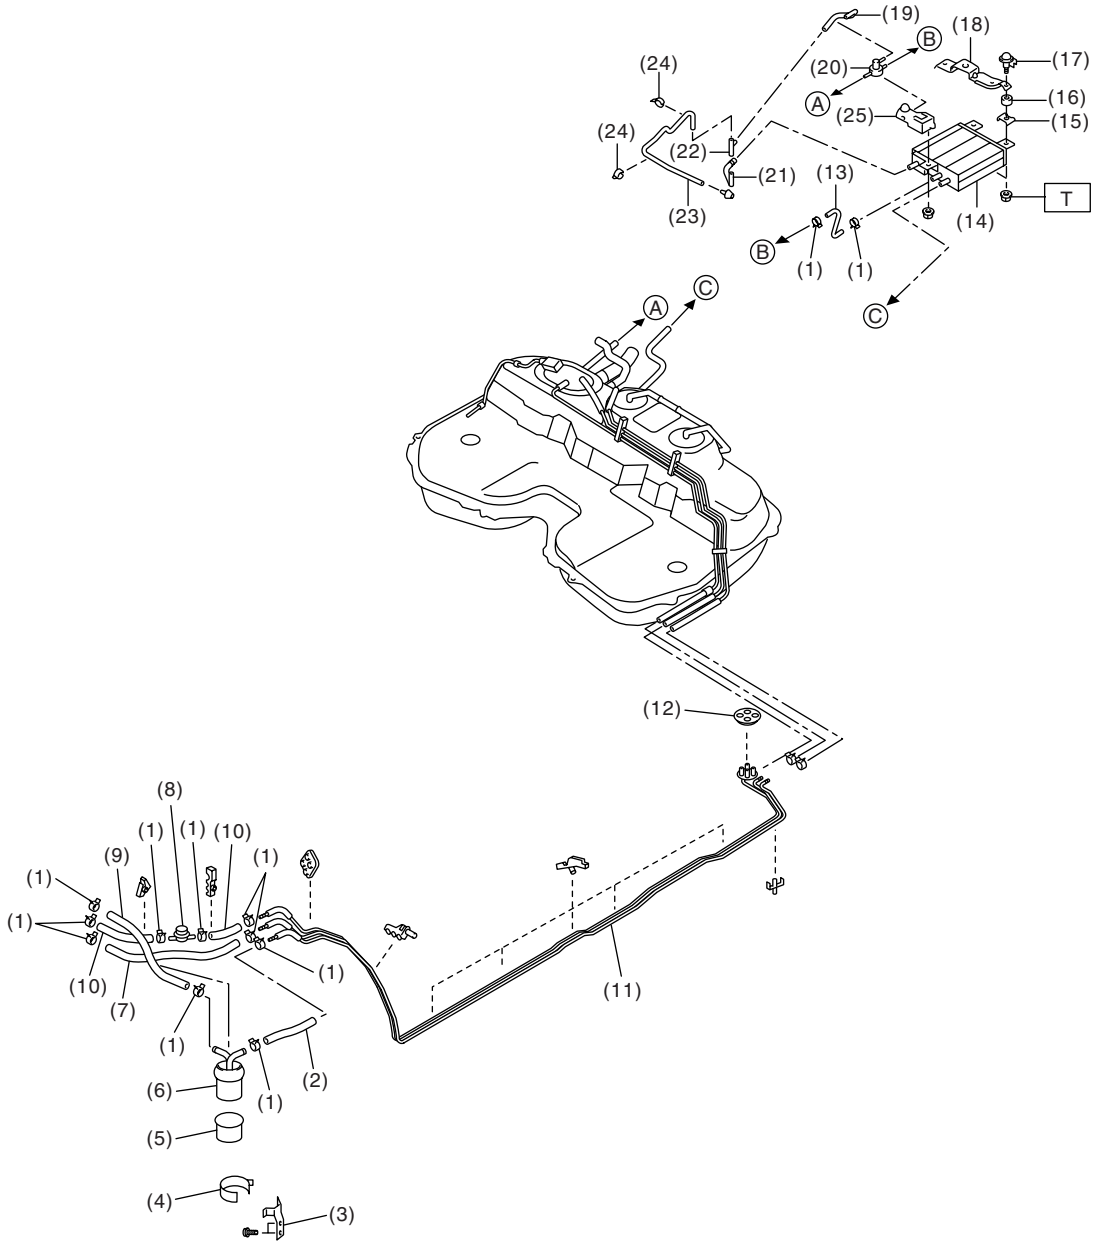

FU-00516

(1) Clip
(2) Fuel delivery hose A
(3) Fuel filter bracket
(4) Fuel filter holder
(5) Fuel filter cup
(6) Fuel filter
(7) Evaporation hose
(8) Fuel damper
(9) Fuel delivery hose B
(10) Fuel return hose
(11) Fuel pipe ASSY
(12) Grommet
(13) Canister hose A
(14) Canister
(15) Canister bracket plate
(16) Cushion
(17) Canister bracket spacer
(18) Rear canister bracket
(19) Two-way valve return hose
(20) Two-way valve
(21) Two-way valve drain hose A
(22) Connector
(23) Two-way valve drain hose B
(24) Clamp
(25) Front canister bracket

Tightening torque: N·m (kgf-m, ft-lb)
T: 23 (2.3, 17.0)

6. FUEL FILLER PIPE

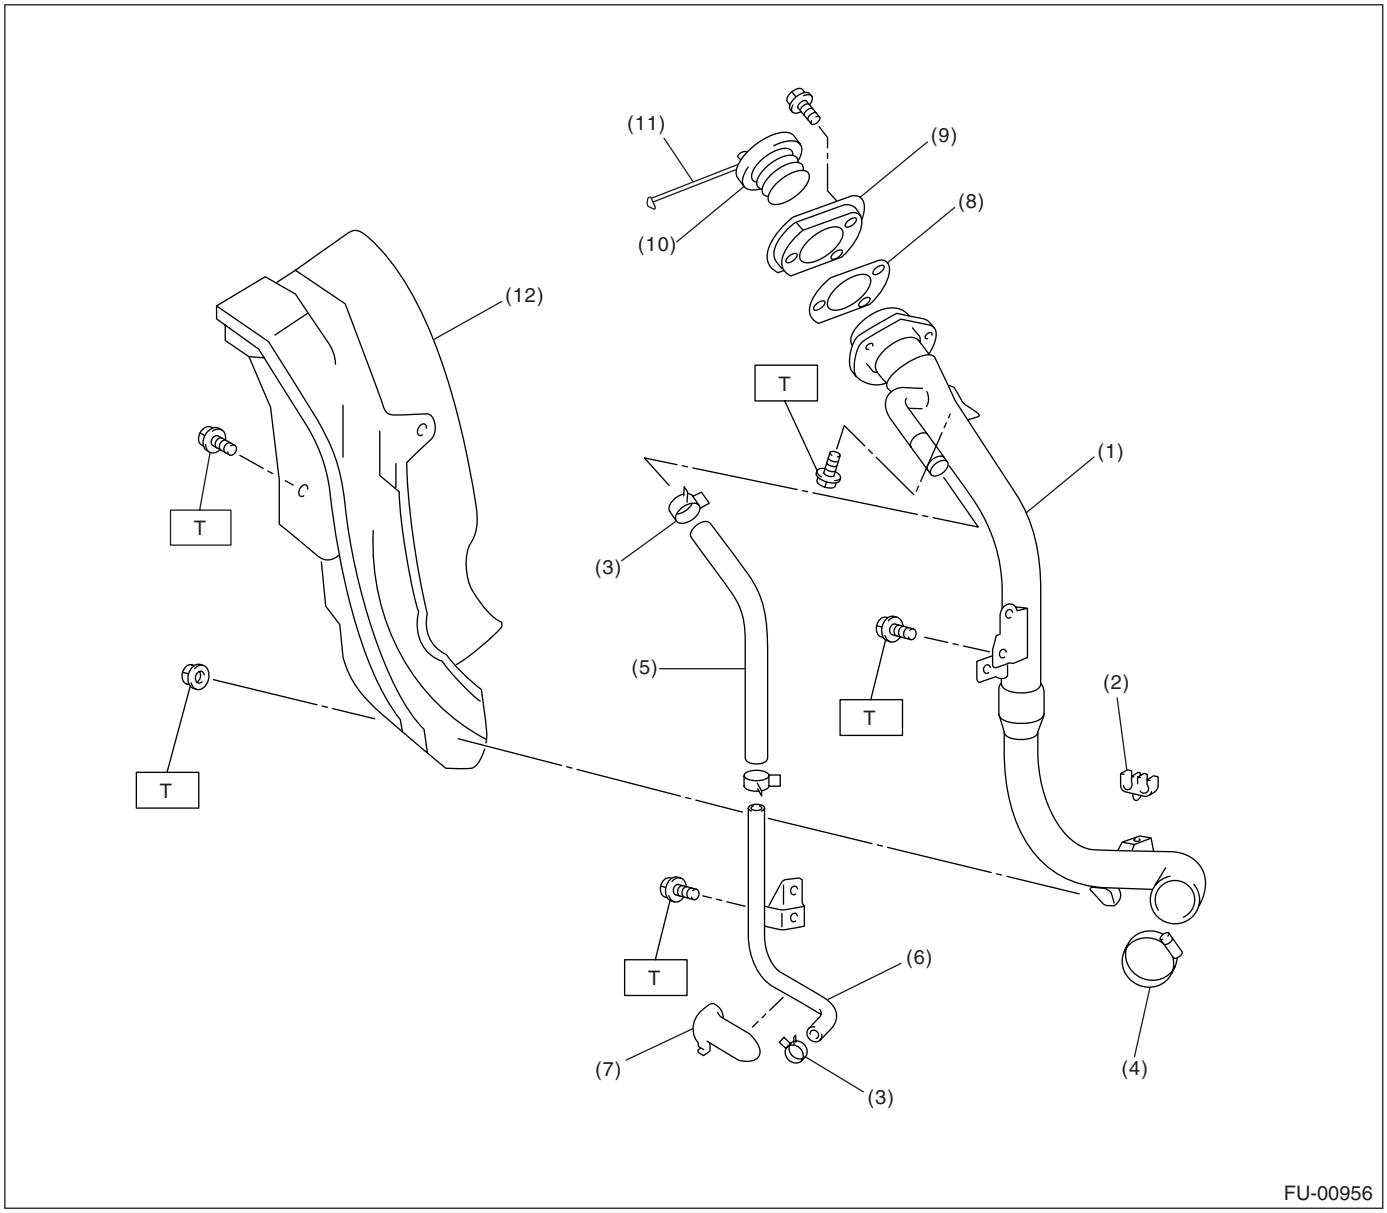

(1) Fuel filler pipe ASSY
(2) Evaporation hose holder
(3) Clip
(4) Clamp
(5) Air vent hose
(6) Air vent pipe
(7) Air vent pipe holder
(8) Filler pipe packing
(9) Filler ring
(10) Filler cap
(11) Filler cap tether
(12) Filler pipe protector

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
• Place “NO FIRE” signs near the working area.
• Be careful not to spill fuel on the floor.

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
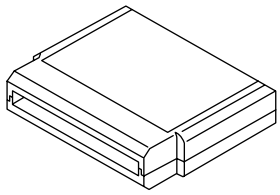 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical system.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. Throttle Body

A: REMOVAL

1) Disconnect the ground cable from battery.

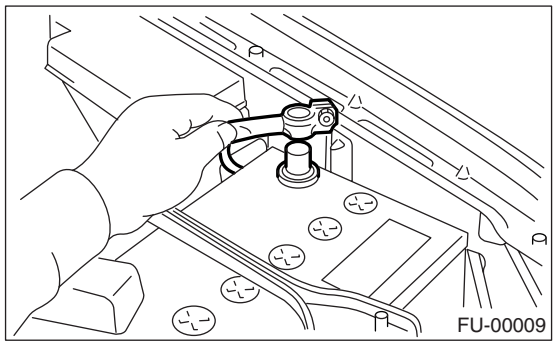

2) Remove the air cleaner case.<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
3) Disconnect the accelerator cable (A).
4) Disconnect the cruise control cable (B). (With cruise control model)

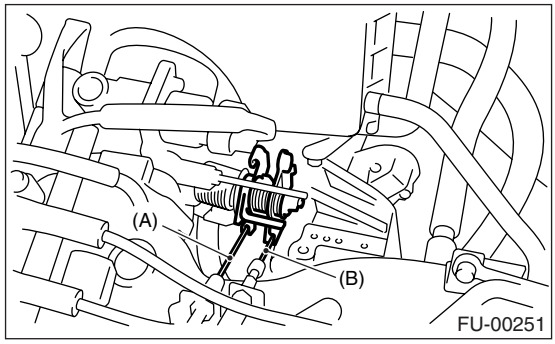

5) Disconnect the connectors from the idle air control solenoid valve, throttle position sensor and manifold absolute pressure sensor.

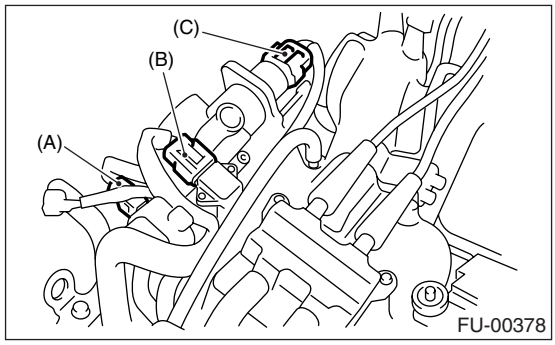

(A) Throttle position sensor
(B) Manifold absolute pressure sensor
(C) Idle air control solenoid valve

6) Disconnect the air by-pass hose from throttle body. (1.6 L model)

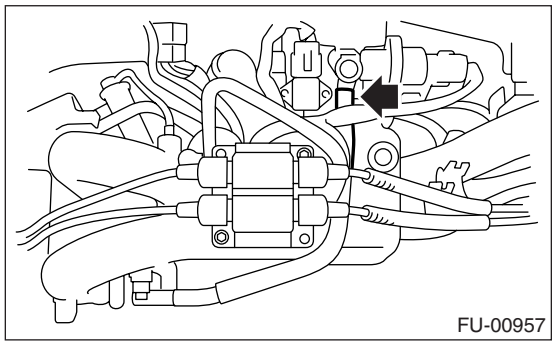

7) Disconnect the engine coolant hoses (A) from throttle body.
8) Remove the bolts (B) which install the throttle body to intake manifold.

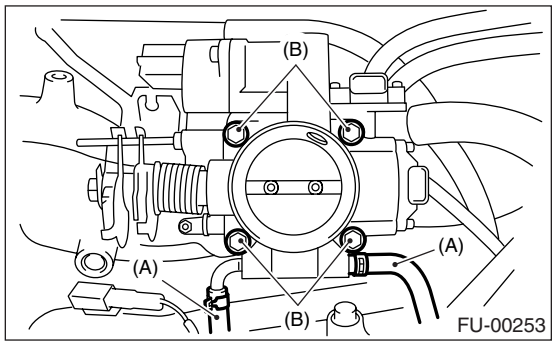

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
- Replace the gasket with a new one.
- For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

2) Adjust the accelerator cable play. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>

3. Intake Manifold

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel flap lid, and then remove the fuel filler cap.
3) Disconnect the ground cable from battery.

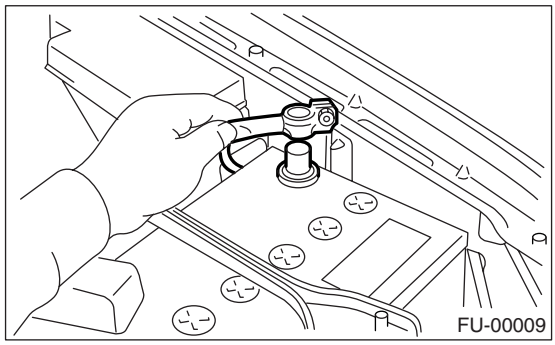

4) Remove the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
5) Disconnect the accelerator cable (A).
6) Disconnect the cruise control cable (B). (With cruise control model)

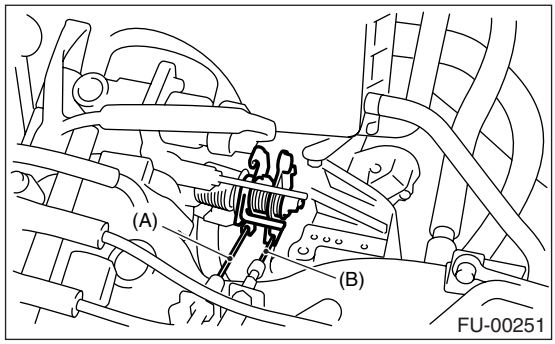

7) Remove the power steering pump and reservoir tank from bracket.
   (1) Remove the resonator chamber. <Ref. to IN(H4SO)-7, REMOVAL, Resonator Chamber.>
   (2) Remove the front side V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
   (3) Remove the bolts which hold the power steering pipes onto intake manifold protector.

NOTE:
Do not disconnect the power steering hose.

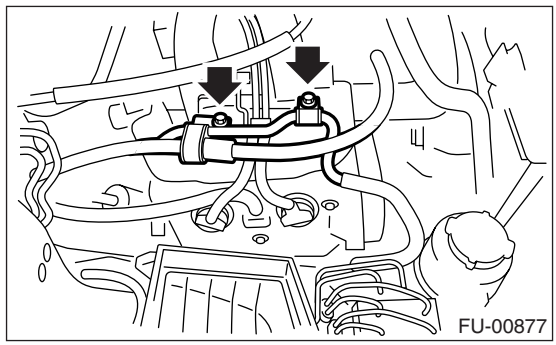

(4) Remove the bolts which install the power steering pump bracket.

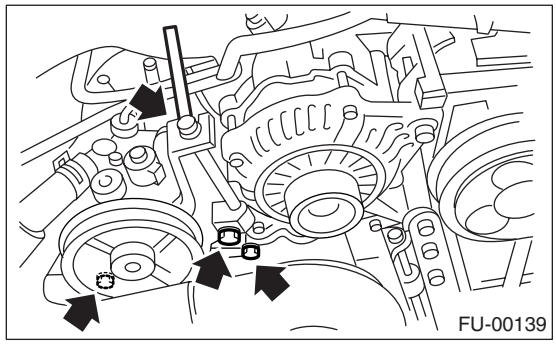

(5) Disconnect the connector from the power steering pump switch.

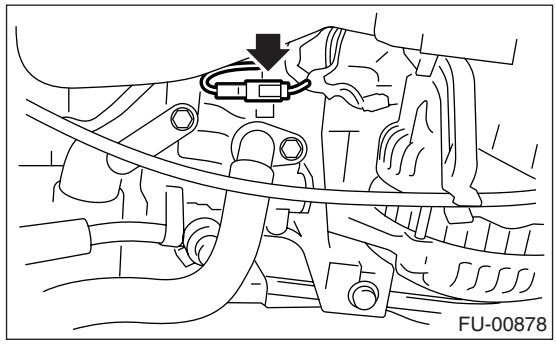

(6) Remove the power steering tank from the bracket by pulling it upwards.

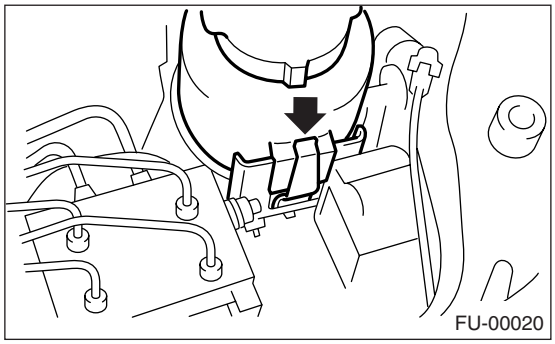

(7) Place the power steering pump on the right side wheel apron.

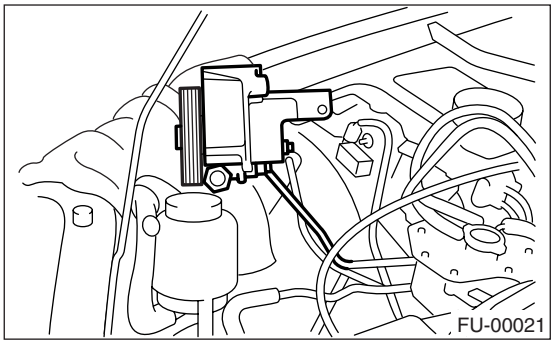

8) Disconnect the spark plug cords from spark plugs.
9) Disconnect the PCV hose from intake manifold.

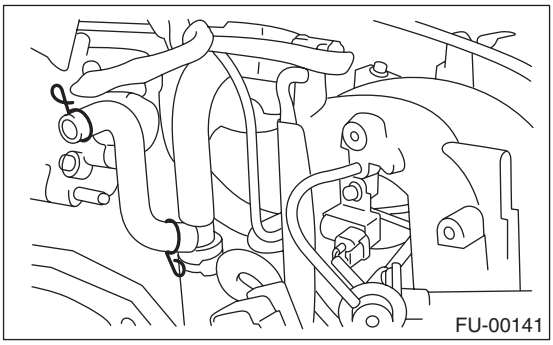

10) Disconnect the engine coolant hose (A) from throttle body.

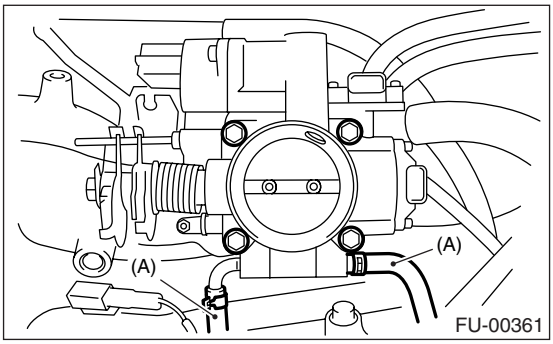

11) Disconnect the brake booster hose.

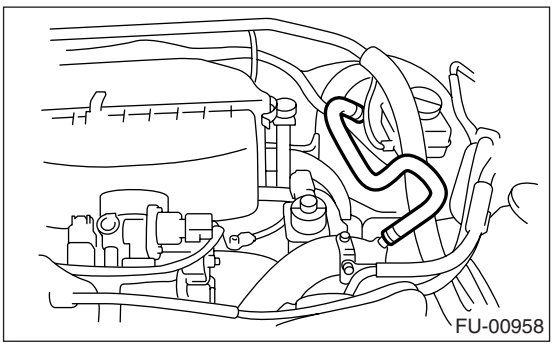

12) Remove the air cleaner case stay RH and engine harness bracket, and then disconnect the engine harness connectors from the bulkhead harness connectors.

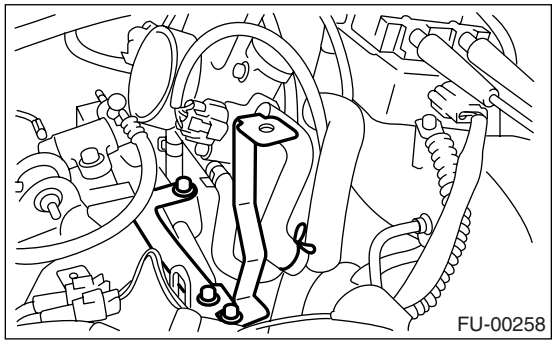

13) Disconnect the connectors from the engine coolant temperature sensor.

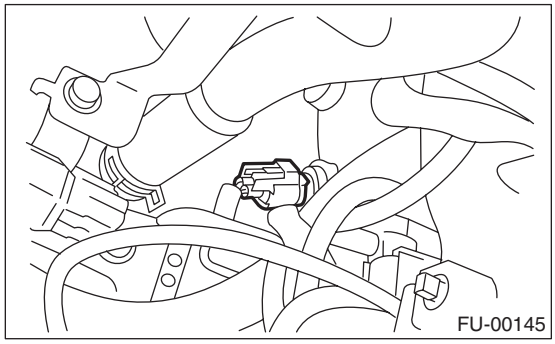

14) Disconnect the knock sensor connector.

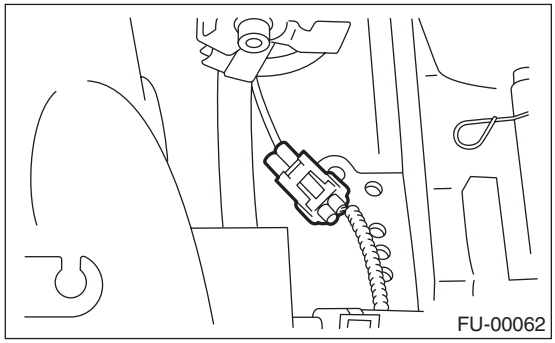

15) Disconnect the connector from the crankshaft position sensor.

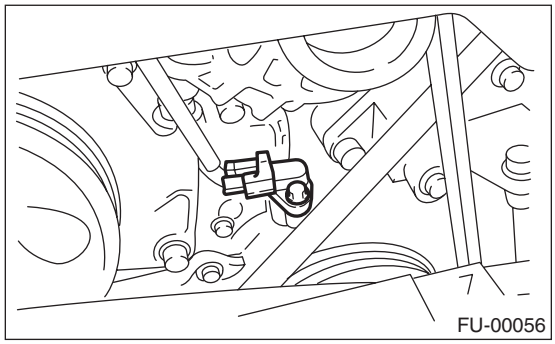

16) Disconnect the connector from the oil pressure switch.

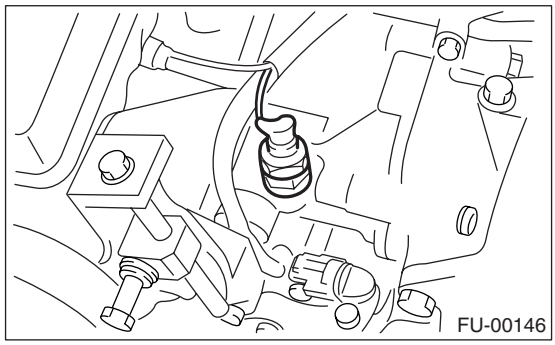

17) Disconnect the connector from the camshaft position sensor.

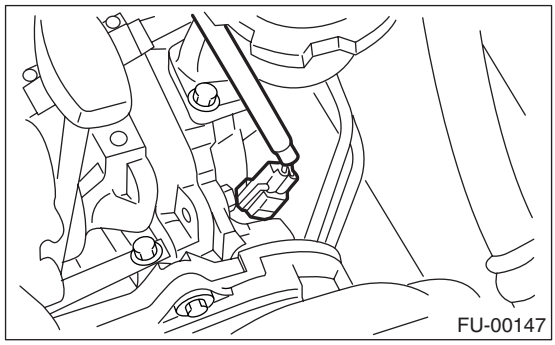

18) Remove the EGR pipe from intake manifold.

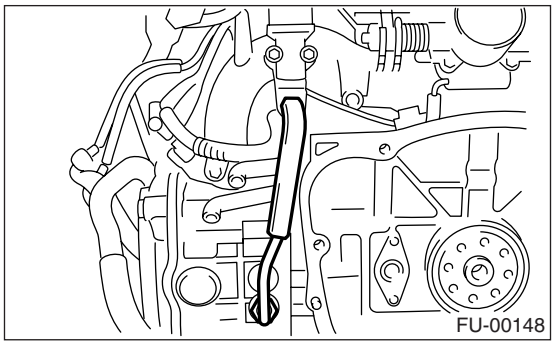

19) Disconnect the fuel hoses from fuel pipes.

WARNING:
- **Do not spill fuel.**
- **Catch fuel from hoses in a container or cloth.**

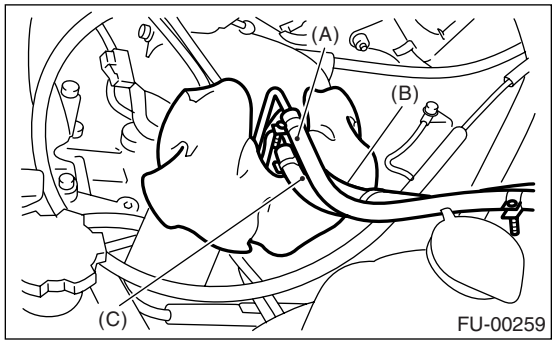

(A) Fuel delivery hose
(B) Return hose
(C) Evaporation hose

20) Remove the bolts which hold the intake manifold onto cylinder heads.

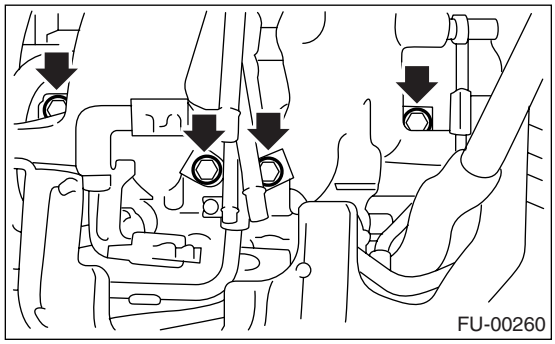

21) Remove the intake manifold.

B: INSTALLATION

1) Install the intake manifold onto cylinder heads.

NOTE:
Replace the gaskets with new ones.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

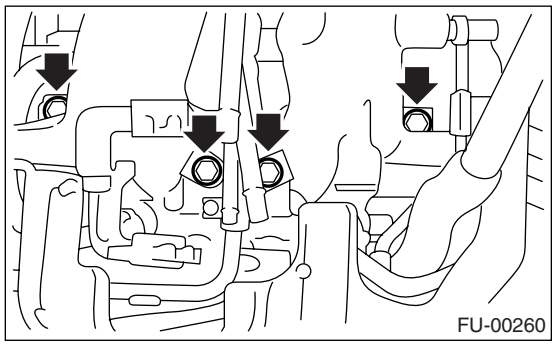

2) Connect the fuel hoses.

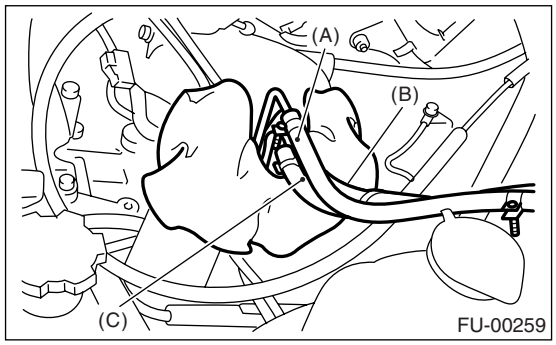

(A) Fuel delivery hose
(B) Return hose
(C) Evaporation hose

3) Connect the EGR pipe to intake manifold.

Tightening torque:
34 N·m (3.4 kgf-m, 24.6 ft-lb)

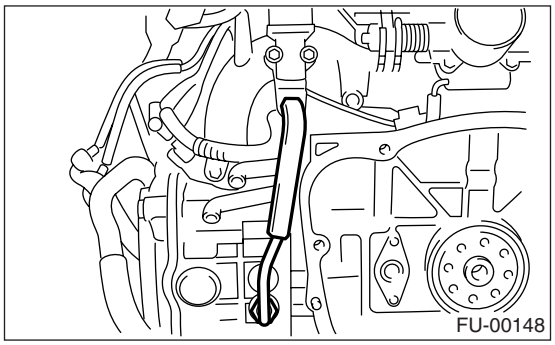

4) Connect the connector to the camshaft position sensor.

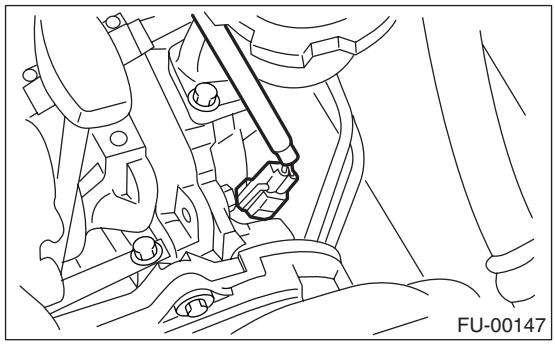

5) Connect the connector to the oil pressure switch.

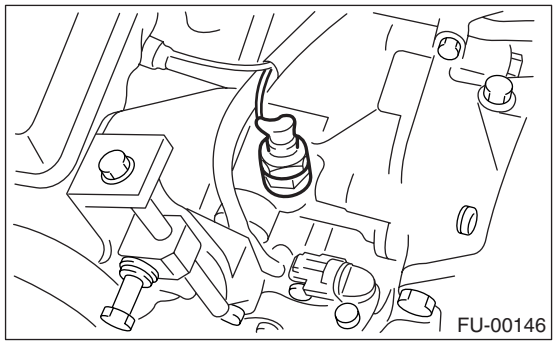

6) Connect the connector to the crankshaft position sensor.

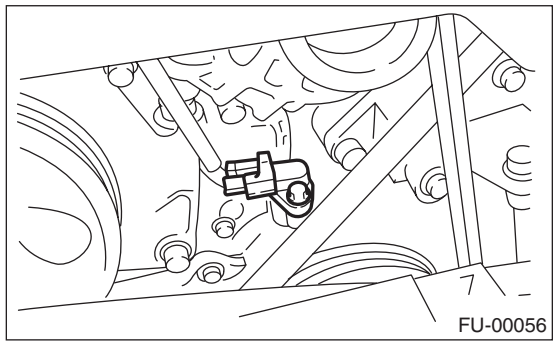

7) Connect the knock sensor connector.

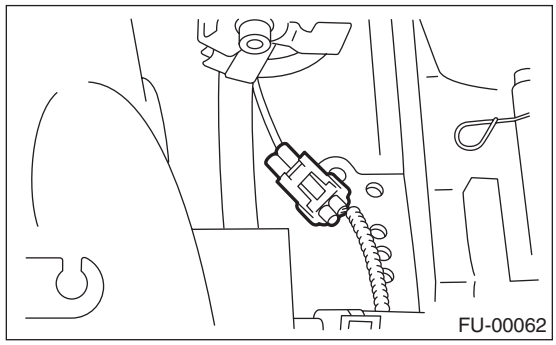

8) Connect the connectors to the engine coolant temperature sensor.

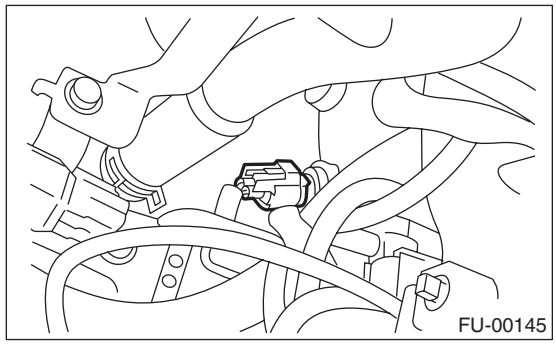

9) Install the air cleaner case stay RH and engine harness bracket, and connect the engine harness connectors to bulkhead connectors.

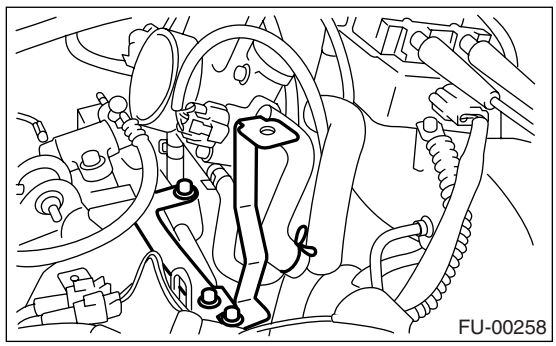

10) Connect the brake booster hose.

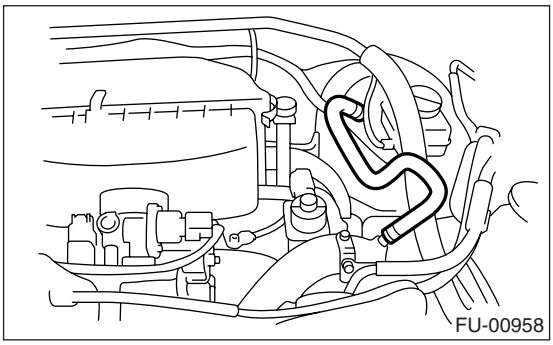

11) Connect the engine coolant hose (A) to throttle body.

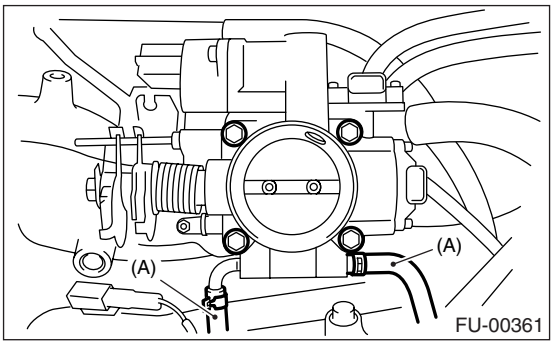

12) Connect the PCV hose to intake manifold.

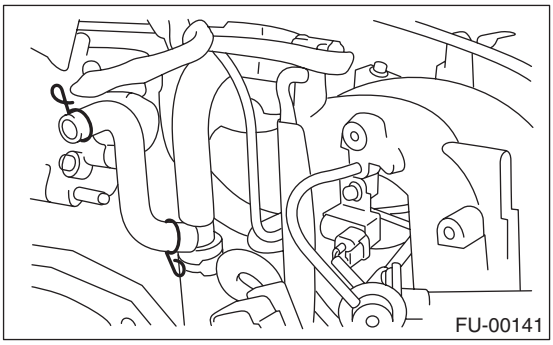

13) Connect the spark plug cords to spark plugs.
14) Install the power steering pump and reservoir tank to bracket.
(1) Install the reservoir tank to bracket.

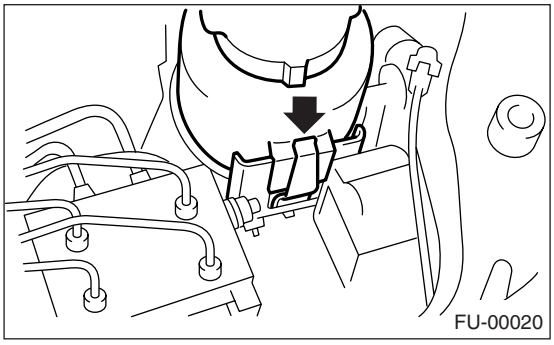

(2) Connect the connector to the power steering pump switch.

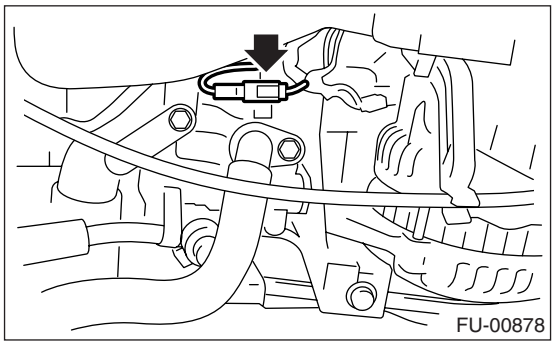

(3) Tighten the bolts which install the power steering pump bracket.

Tightening torque:
22 N·m (2.2 kgf-m, 15.9 ft-lb)

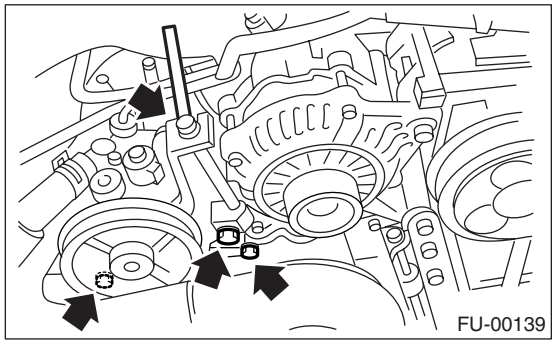

(4) Install the power steering pipes onto the right side intake manifold protector RH.

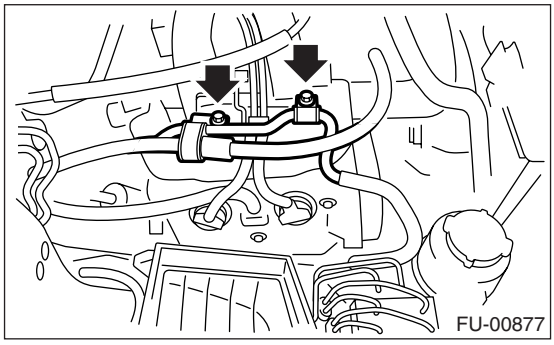

(5) Install the front side V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>
(6) Install the resonator chamber. <Ref. to IN(H4SO)-7, INSTALLATION, Resonator Chamber.>
15) Connect the accelerator cable (A). <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>

16) Connect the cruise control cable (B). (With cruise control model)

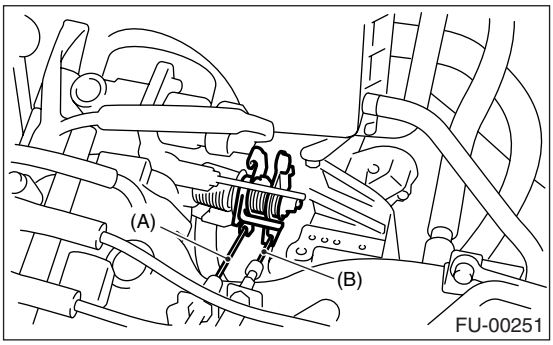

17) Install the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.> and <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
18) Connect the connector to the fuel pump relay.

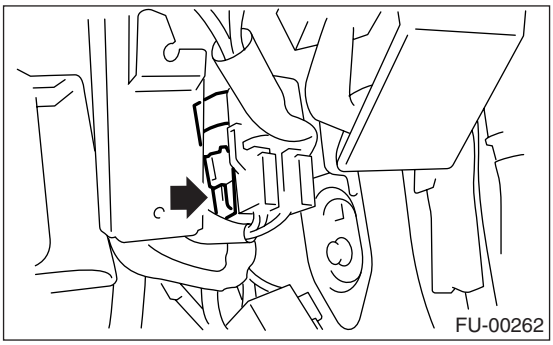

19) Connect the battery ground cable to battery.

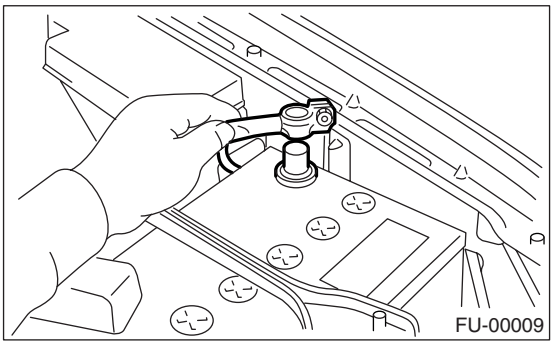

C: DISASSEMBLY

1) Disconnect the engine ground terminal from intake manifold.

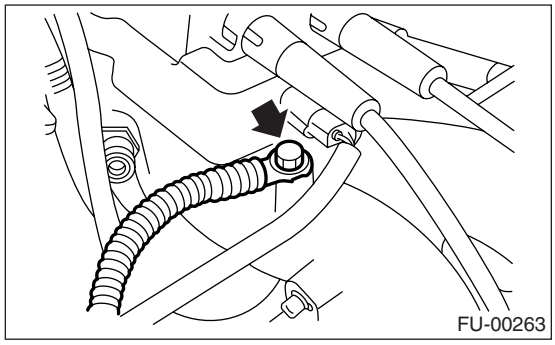

2) Disconnect the ignition coil and ignitor assembly. <Ref. to IG(H4SO)-8, REMOVAL, Ignition Coil & Ignitor ASSY.>
3) Remove the throttle body.<Ref. to FU(H4SO)-15, REMOVAL, Throttle Body.>
4) Remove the EGR valve.<Ref. to FU(H4SO)-36, REMOVAL, EGR Valve.>
5) Remove the air assist injector solenoid valve. (1.6 L model) <Ref. to FU(H4SO)-37, REMOVAL, Air Assist Injector Solenoid Valve.>
6) Disconnect the pressure regulator vacuum hose from intake manifold.

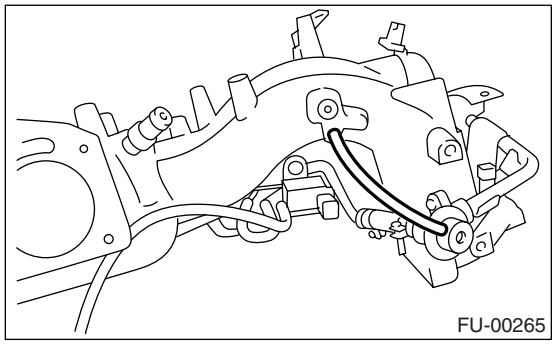

7) Remove the fuel pipe protector LH.

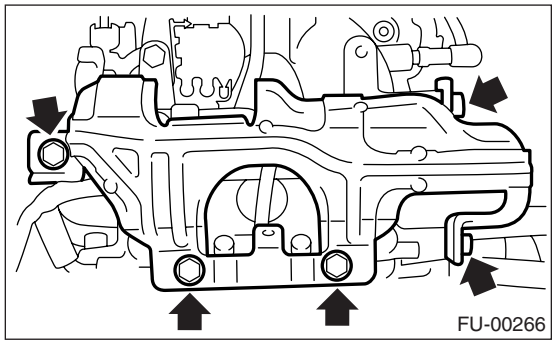

8) Remove the fuel pipe protector RH.

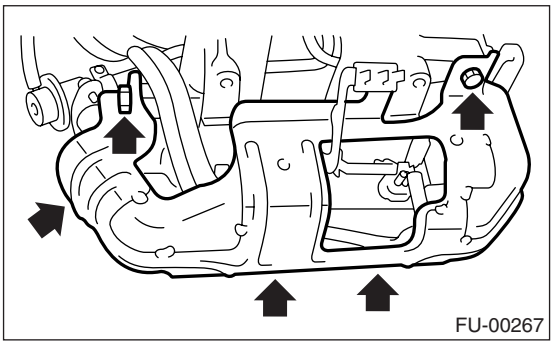

9) Disconnect the connectors from fuel injectors.

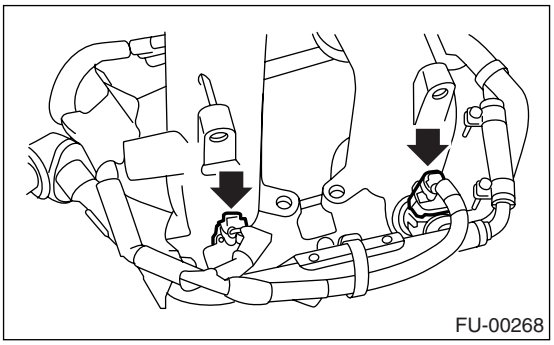

10) Disconnect the purge control solenoid valve. <Ref. to EC(H4SO)-7, REMOVAL, Purge Control Solenoid Valve.>

11) Remove the harness bands (A) and bolts (B) which hold the engine harness onto intake manifold.

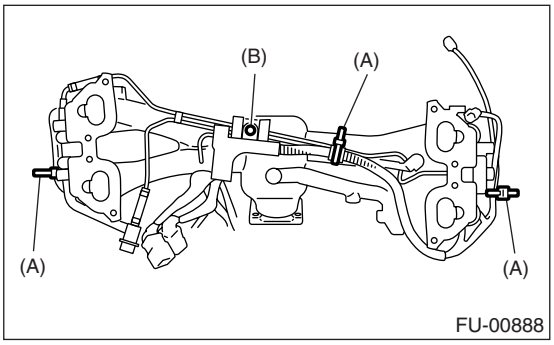

12) Remove the engine harness from the intake manifold.

13) Remove the bolt which installs the fuel injector pipe on the intake manifold as shown in the figure.

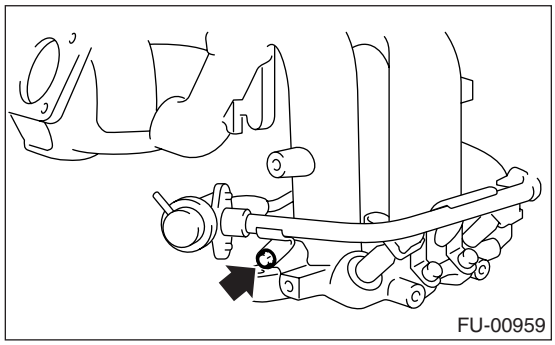

- RH SIDE

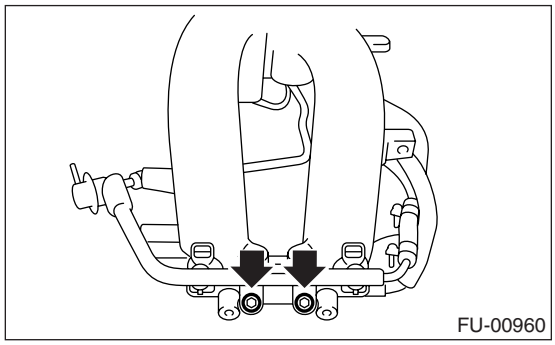

- LH SIDE

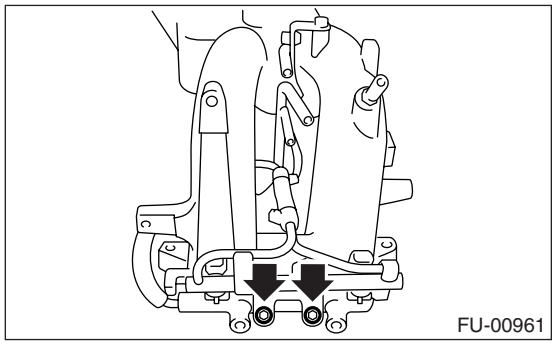

14) Remove the two bolts which hold the fuel pipes on intake manifold.

- 1.6 L MODEL

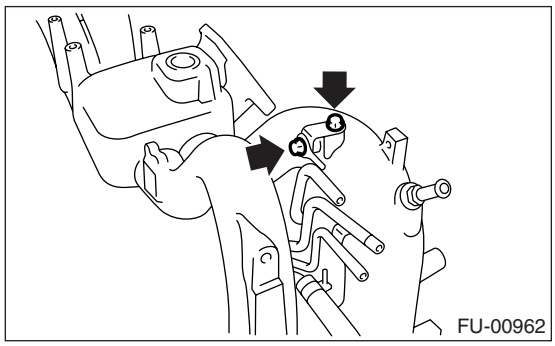

- 2.0 L MODEL

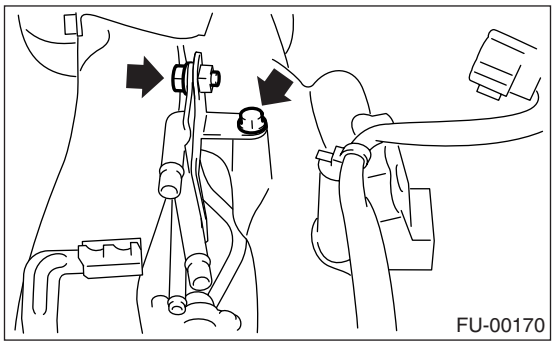

15) Remove the fuel injectors.
(1) Remove the fuel injector securing clip.

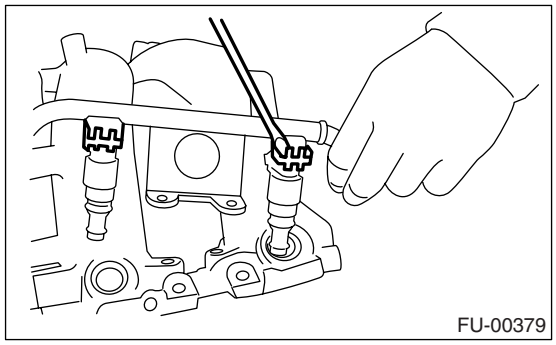

(2) Remove the fuel injector while lifting up the fuel injector pipe.

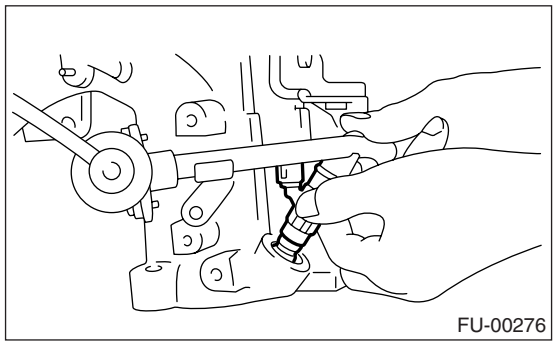

16) Disconnect the air by-pass hose from intake manifold. (1.6 L model)

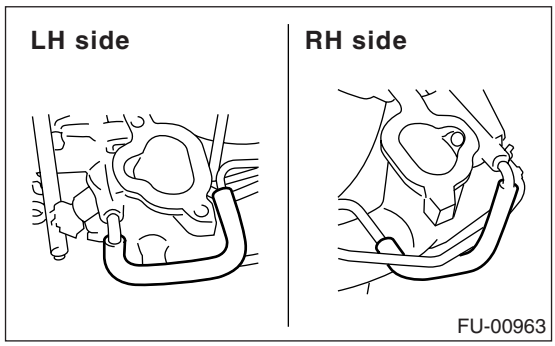

17) Loosen the clamp which holds the fuel injector pipe LH to fuel hose, and then remove the pipe from fuel hose.

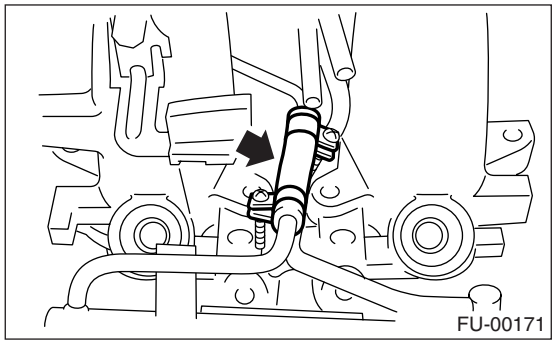

18) Loosen the clamp which holds the fuel injector pipe RH to fuel hose, and then remove the pipe from fuel hose.

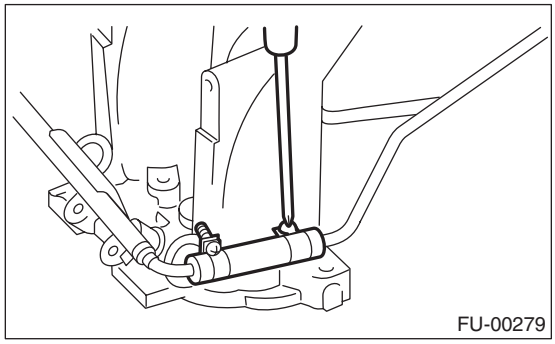

19) Remove the fuel injector pipe.
20) Remove the bolt which installs the fuel pipes on intake manifold.

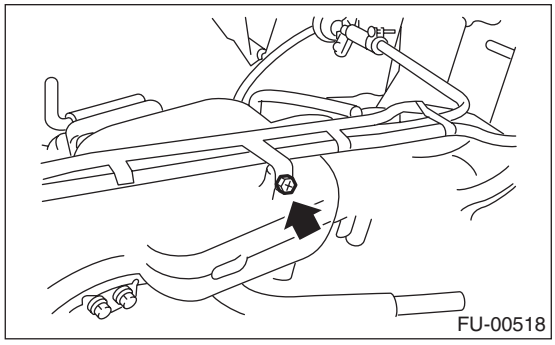

21) Remove the fuel pipe assembly and pressure regulator, from intake manifold.

D: ASSEMBLY

1) Install the fuel pipe assembly and pressure regulator, etc. to intake manifold.
2) Tighten the bolt which installs the fuel pipes on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

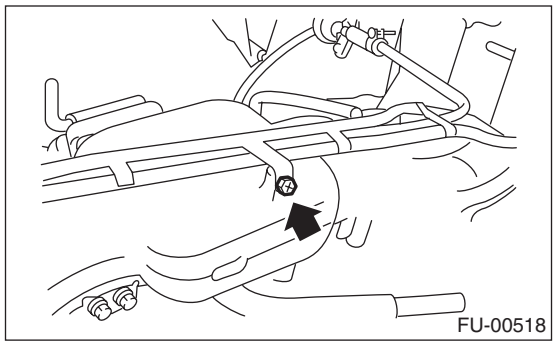

3) Connect the fuel injector pipe RH to fuel hose, and then tighten the clamp screw.

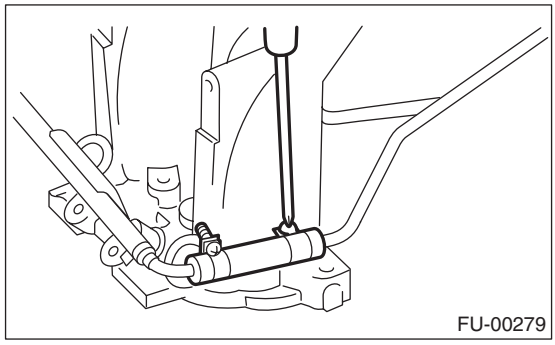

4) Connect the fuel injector pipe LH to fuel hose, and then tighten the clamp screw.

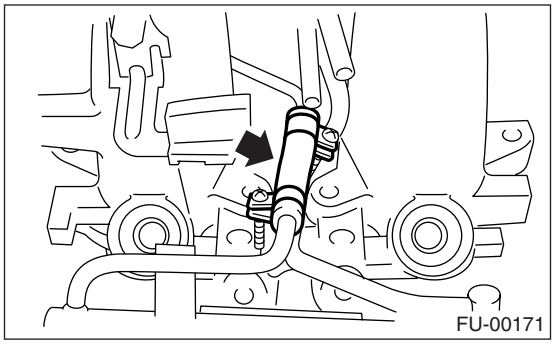

5) Connect the air by-pass hose. (1.6 L model)

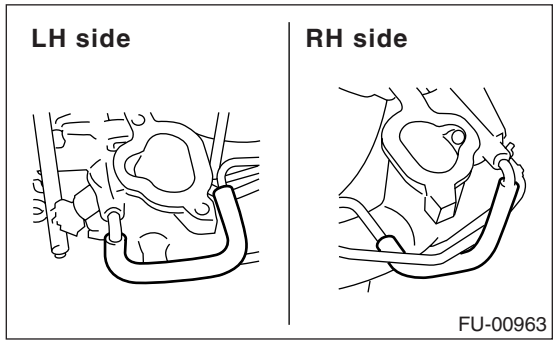

6) Install the fuel injectors.

NOTE:
Replace the O-rings with new ones.

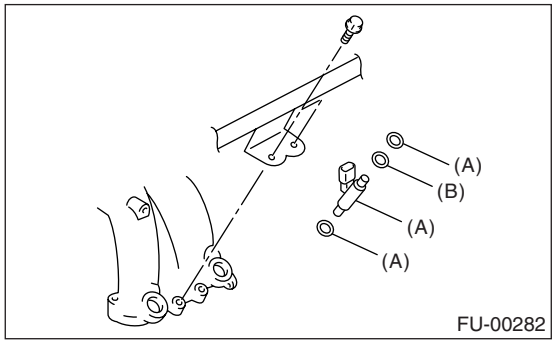

(A) O-ring
(B) Fuel injector

NOTE:
Do not forget to install the fuel injector securing clip.

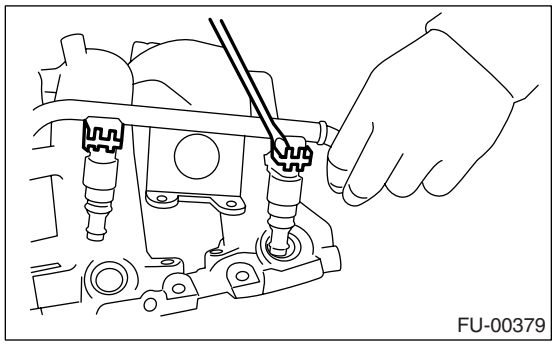

7) Tighten the bolt which installs the injector pipe on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

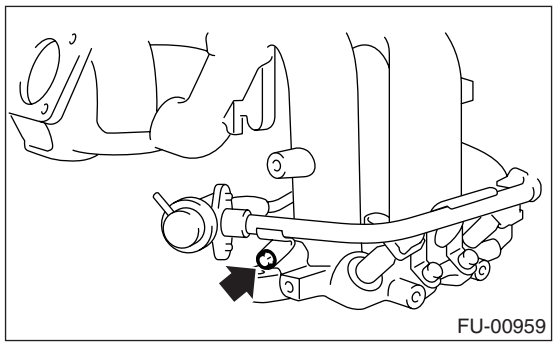

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

- RH SIDE

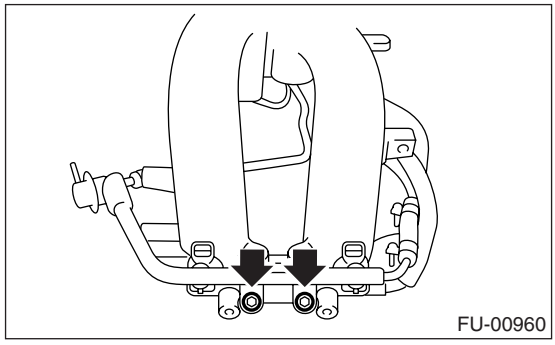

- LH SIDE

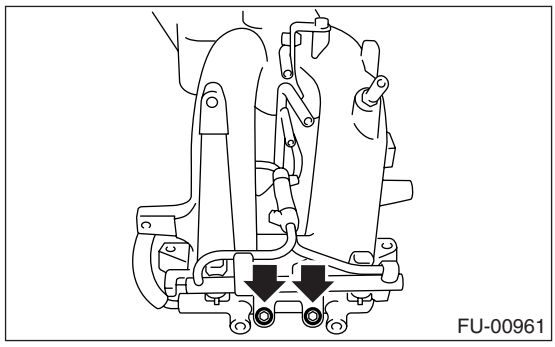

8) Tighten the two bolts which install the fuel pipes on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

- 1.6 L MODEL

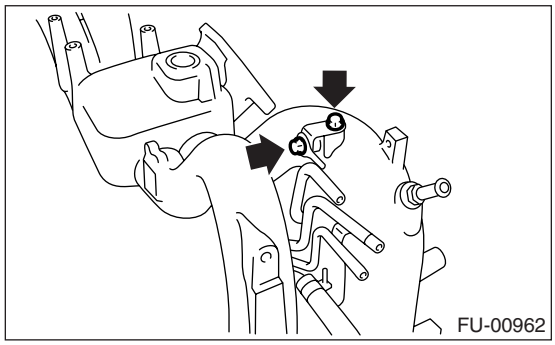

- 2.0 L MODEL

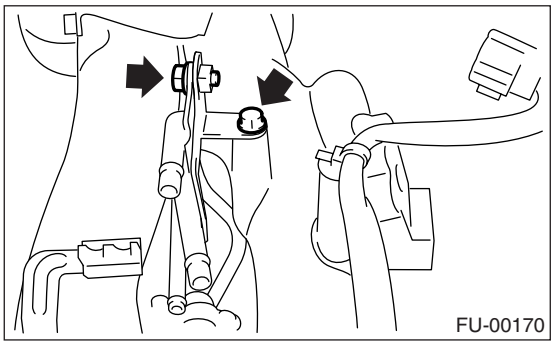

9) Install the engine harness onto intake manifold.
10) Hold the engine harness by harness bands (A) and bolts (B).

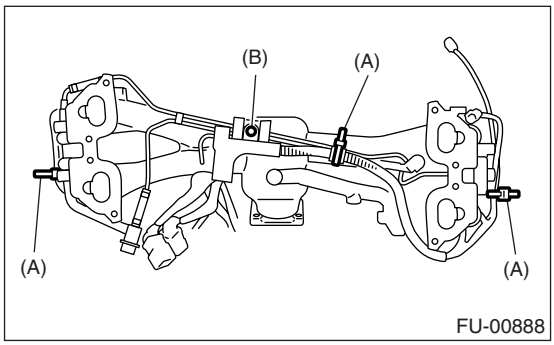

11) Connect the connector to fuel injector.

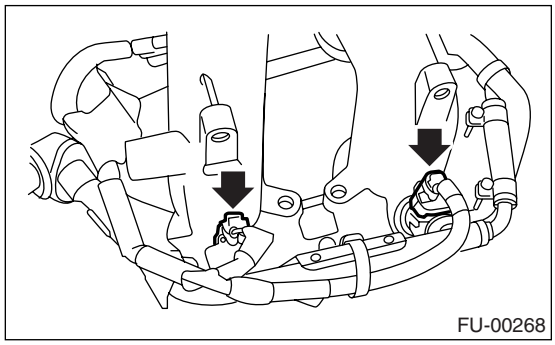

12) Install the fuel pipe protector RH.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

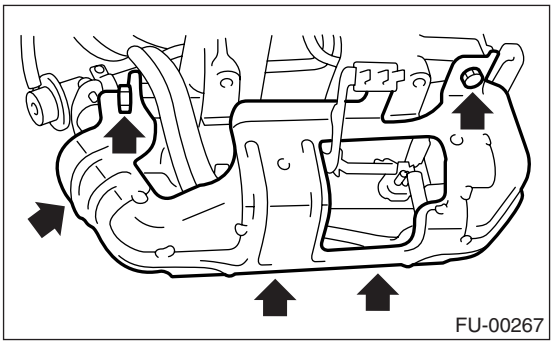

13) Install the fuel pipe protector LH.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

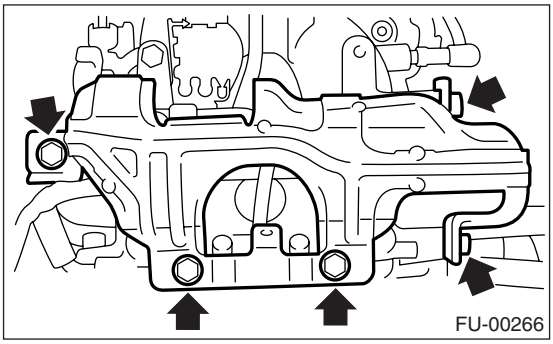

14) Install the purge control solenoid valve. <Ref. to EC(H4SO)-7, INSTALLATION, Purge Control Solenoid Valve.>
15) Connect the pressure regulator vacuum hose to intake manifold.

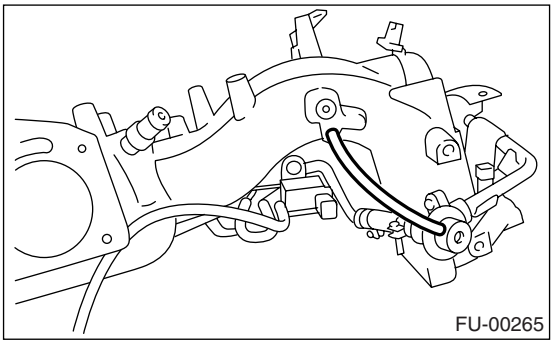

16) Install the air assist injector solenoid valve. (1.6 L model) <Ref. to FU(H4SO)-37, INSTALLATION, Air Assist Injector Solenoid Valve.>
17) Install the EGR valve. <Ref. to FU(H4SO)-36, INSTALLATION, EGR Valve.>
18) Install the throttle body to intake manifold. <Ref. to FU(H4SO)-15, INSTALLATION, Throttle Body.>
19) Install the ignition coil and ignitor assembly. <Ref. to IG(H4SO)-8, INSTALLATION, Ignition Coil & Ignitor ASSY.>
20) Install the engine ground terminal to intake manifold.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

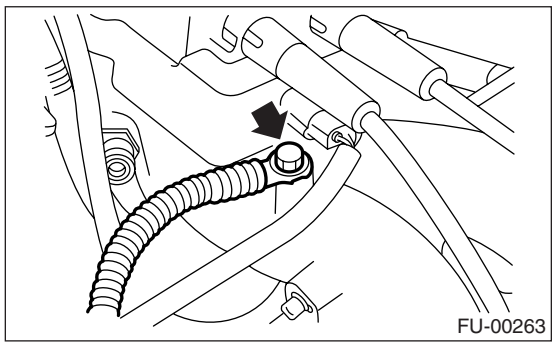

E: INSPECTION

Make sure the fuel pipe and fuel hoses are not cracked and the connections are tightened firmly.

4. Engine Coolant Temperature Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

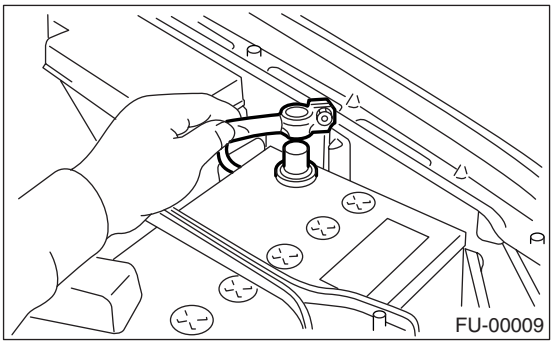

2) Remove the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
3) Disconnect the connector from the engine coolant temperature sensor.

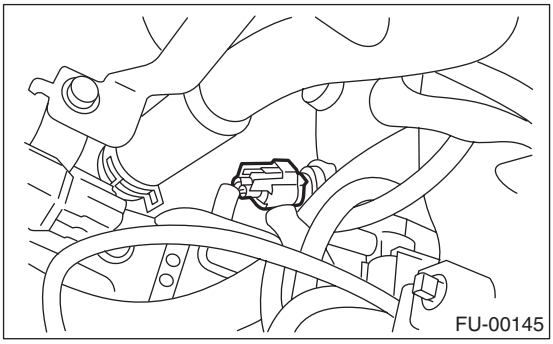

4) Remove the engine coolant temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

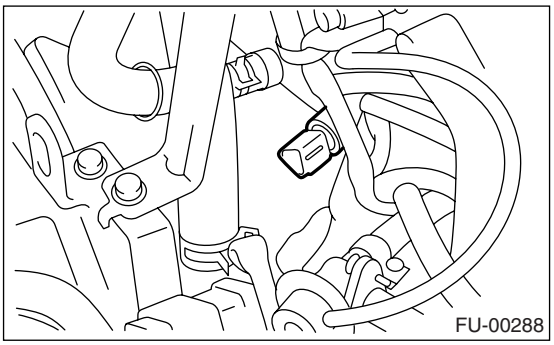

5. Crankshaft Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

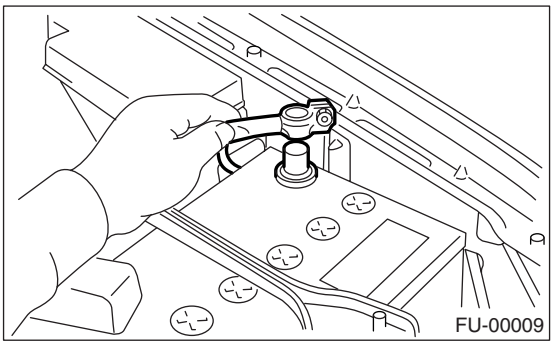

2) Remove the bolt which installs the crankshaft position sensor to cylinder block.

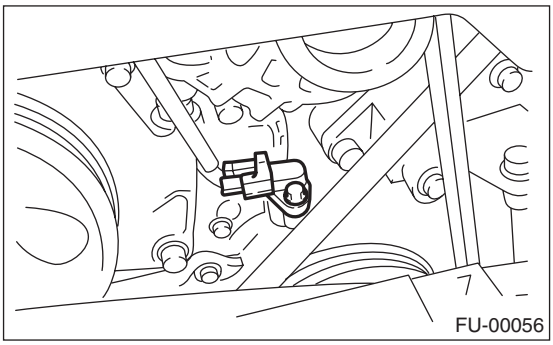

3) Remove the crankshaft position sensor, and then disconnect the connector from it.

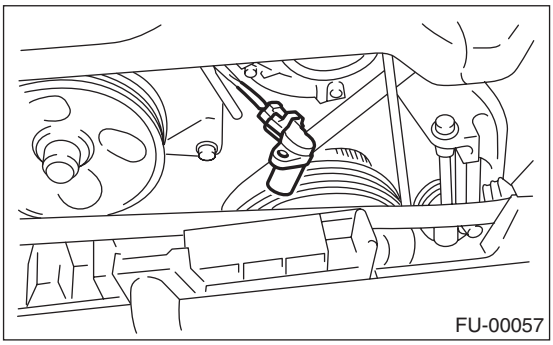

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

6. Camshaft Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

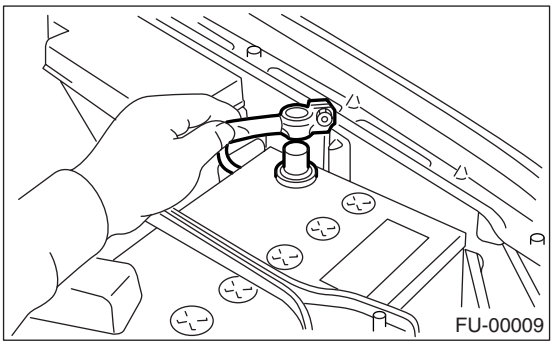

2) Disconnect the connector from the camshaft position sensor.

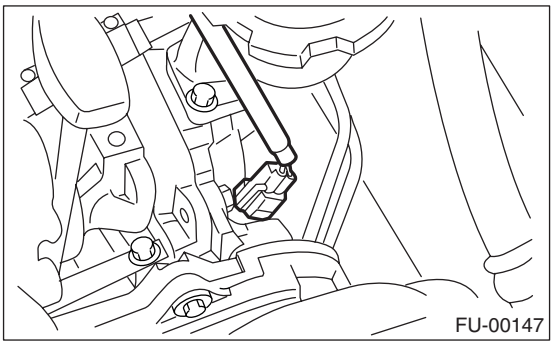

3) Remove the bolt which installs the camshaft position sensor to the camshaft position sensor support.

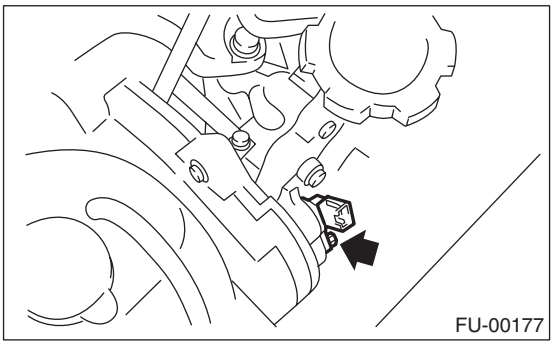

4) Remove the bolt which installs the camshaft position sensor support to the camshaft cap LH.

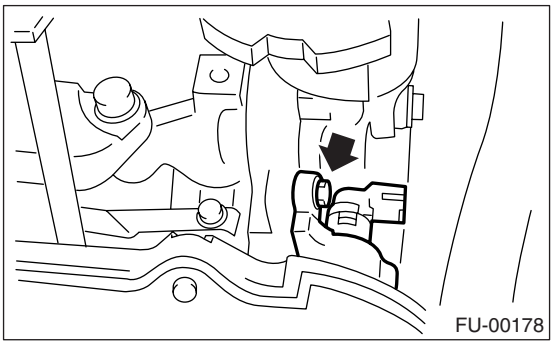

5) Remove the camshaft position sensor and camshaft position sensor support as a unit.
6) Remove the camshaft position sensor itself.

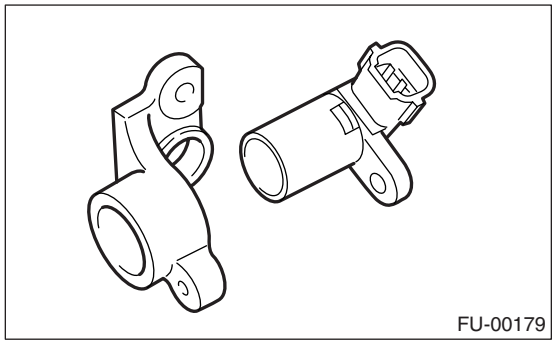

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

7. Knock Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

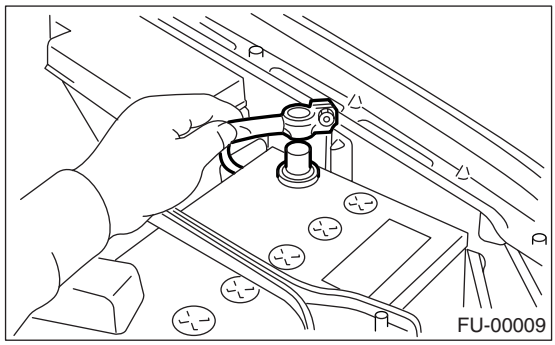

2) Remove the air cleaner case.<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
3) Disconnect the knock sensor connector.

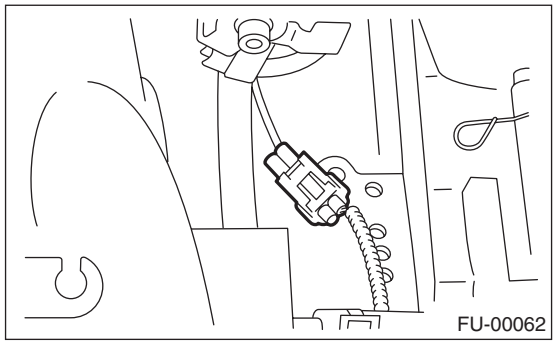

4) Remove the knock sensor from cylinder block.

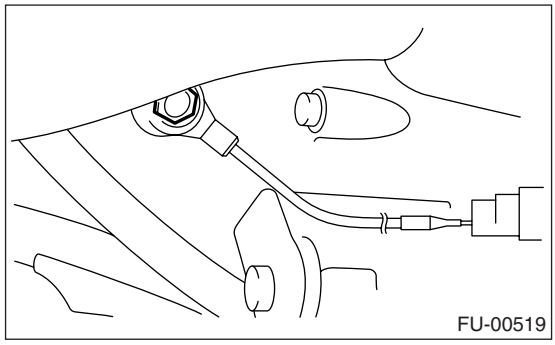

B: INSTALLATION

1) Install the knock sensor to cylinder block.

Tightening torque:
24 N·m (2.4 kgf-m, 17.4 ft-lb)

NOTE:
• For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>
• The extraction area of the knock sensor cord must be positioned at a 60° angle relative to engine rear.

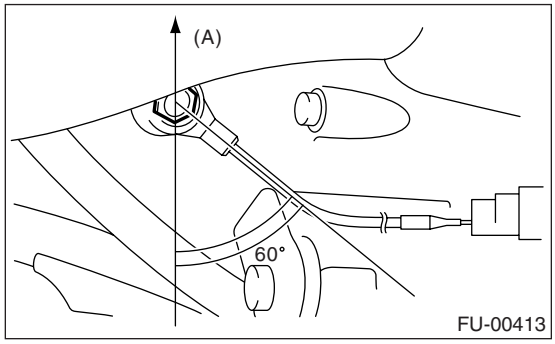

(A) Front side

2) Connect the knock sensor connector.

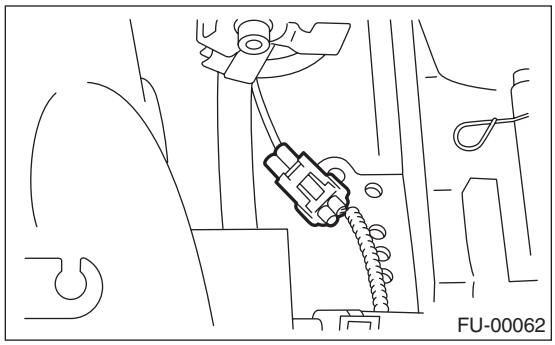

3) Install the air cleaner case.
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
4) Connect the battery ground cable to battery.

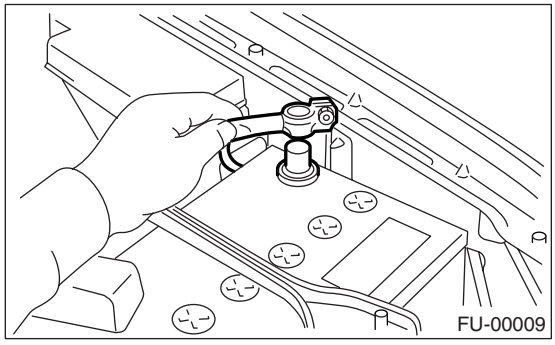

8. Throttle Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

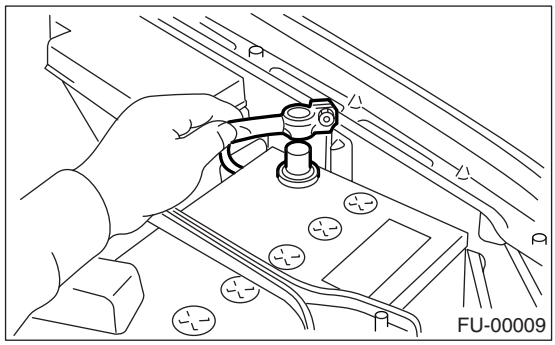

2) Disconnect the connector from the throttle position sensor.

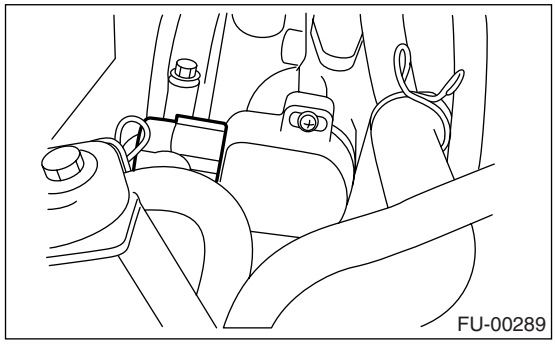

3) Remove the throttle position sensor holding screws, and then remove it.

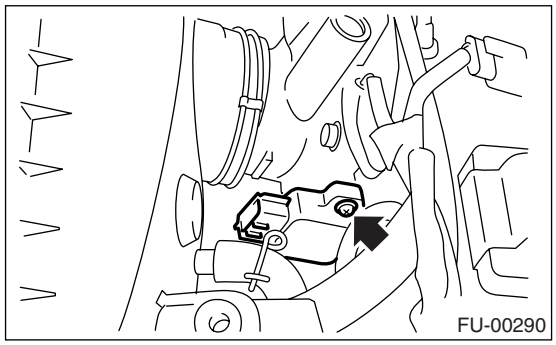

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

CAUTION:
When installing the throttle position sensor, adjust to specified data.

C: ADJUSTMENT

1) Turn the ignition switch to OFF.
2) Loosen the throttle position sensor holding screws.

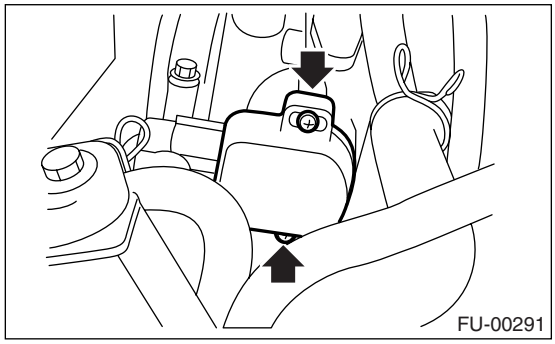

3) When using voltage meter;
   (1) Take out the ECM.
   (2) Turn the ignition switch to ON.
   (3) Adjust the throttle position sensor to proper position to allow the voltage signal to ECM to be in specification.

Connector & terminal / Specified voltage
(B135) No. 13 (+) — (B135) No. 19 (–) / 0.45 — 0.55 V
[Fully closed.]

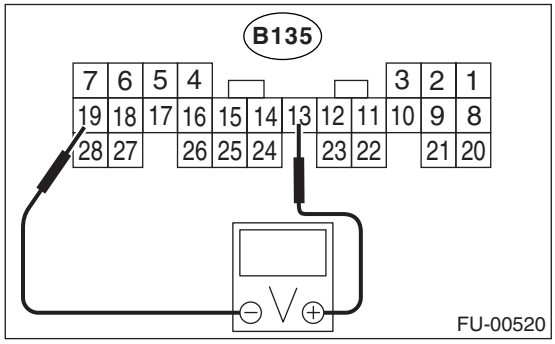

(4) Tighten the throttle position sensor holding screws.

Tightening torque:
1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

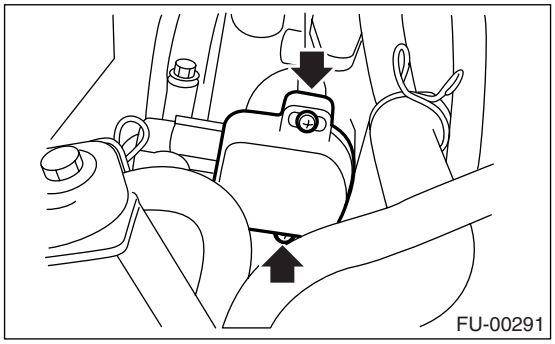

4) When using Subaru Select Monitor;
(1) Turn the ignition switch to OFF.
(2) Loosen the throttle position sensor holding screws.

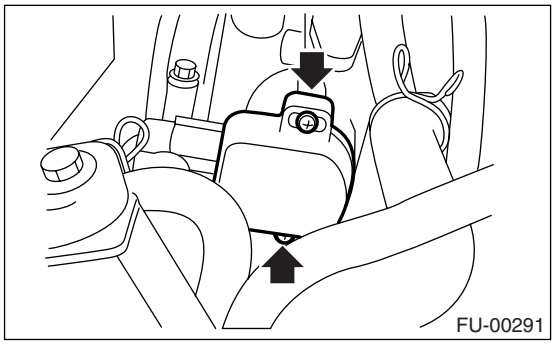

NOTE:
For detailed operation procedures, refer to the Subaru Select Monitor Operation Manual.

(3) Insert the cartridge to the Subaru Select Monitor.

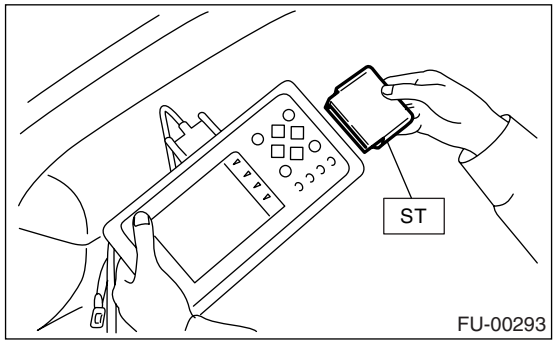

(4) Connect the Subaru Select Monitor to the data link connector.

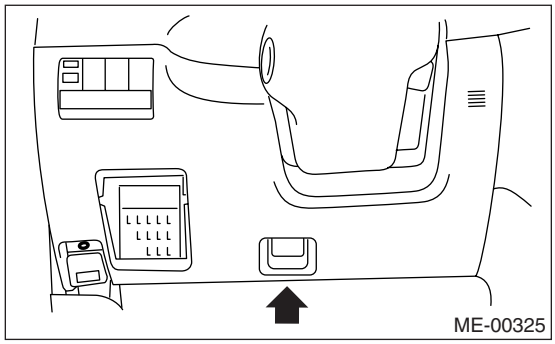

5) Turn the ignition switch to ON, and the Subaru Select Monitor switch to ON.
6) Select the {2. Each System Check} in «Main Menu».
7) Select the {Engine Control System} in «Selection Menu».
8) Select the {1. Current Data Display & Save} in «Engine Control System Diagnosis».
9) Select the {1.12 Data Display} in «Data Display Menu».
10) Adjust the throttle position sensor to the proper position to match with following specifications.

Condition: Throttle fully closed
Throttle opening angle 0.00%
Throttle sensor voltage 0.50 V

11) Tighten the throttle position sensor holding screws.

Tightening torque:
1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

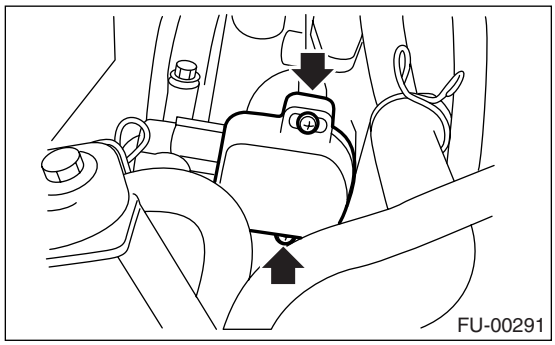

9. Manifold Absolute Pressure Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

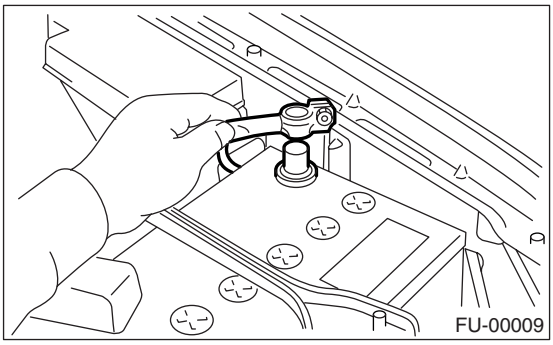

2) Disconnect the connector from manifold absolute pressure sensor.

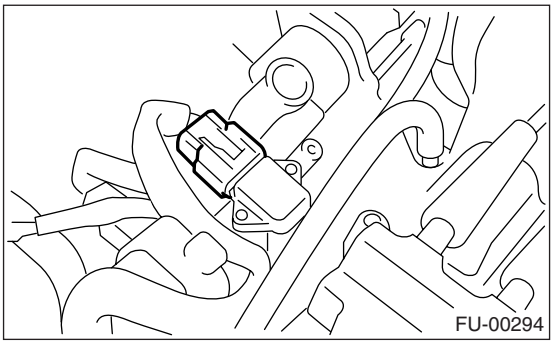

3) Remove the manifold absolute pressure sensor.

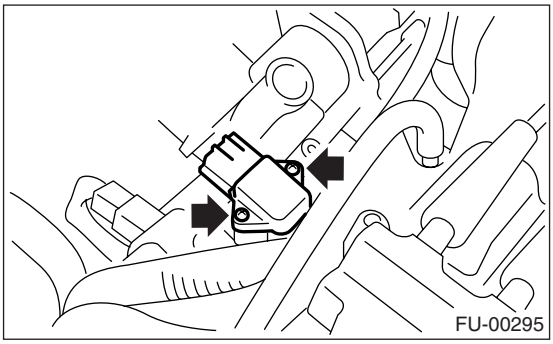

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>
- Replace the O-ring with a new one.

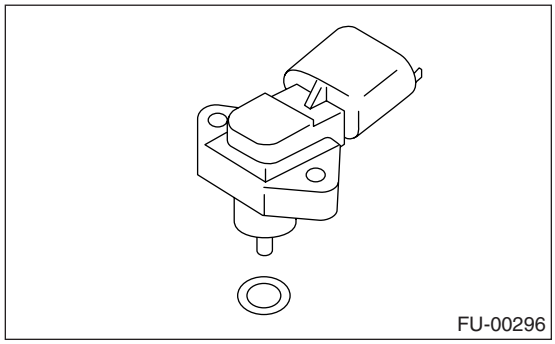

10.Intake Air Temperature Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

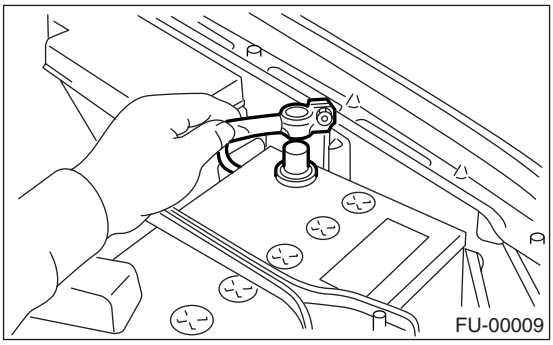

2) Disconnect the connector from the intake air temperature sensor.
3) Remove the intake air temperature sensor from the air cleaner case.

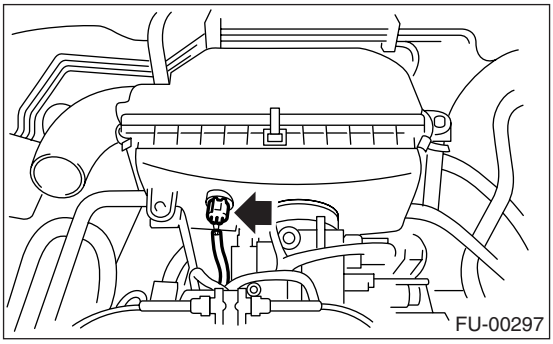

B: INSTALLATION

Install in the reverse order of removal.

11.Idle Air Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

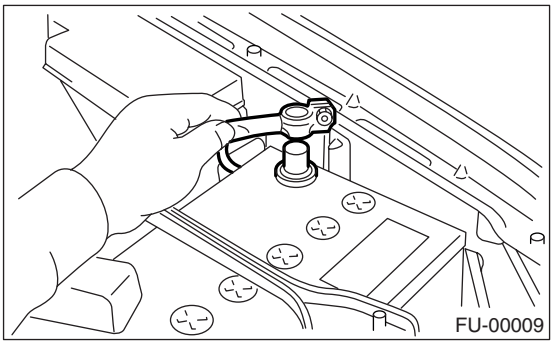

2) Disconnect the connector from the idle air control solenoid valve.

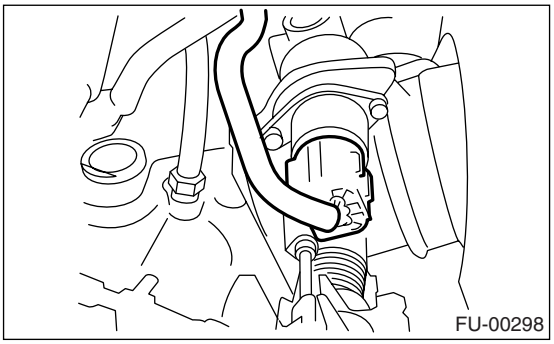

3) Remove the idle air control solenoid valve from throttle body.

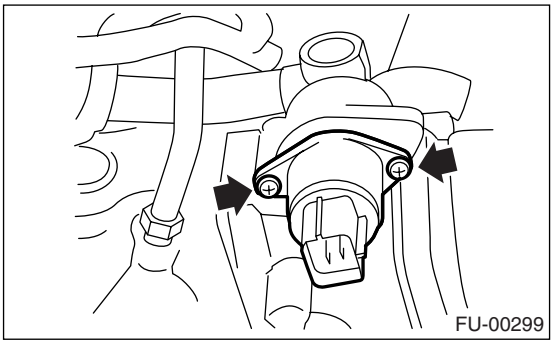

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>
- Replace the gasket with a new one.

12.EGR Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

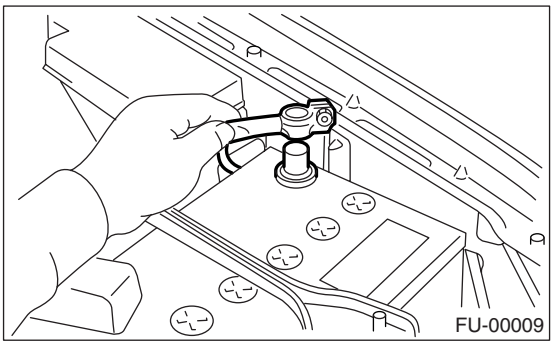

2) Disconnect the connector from EGR valve.

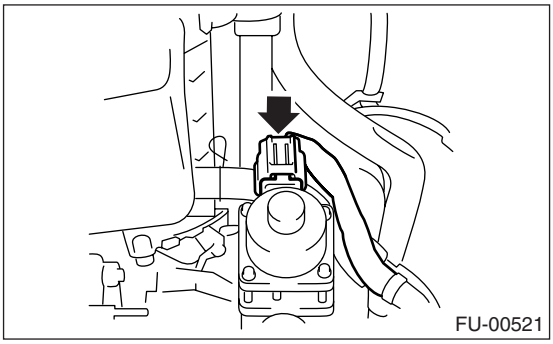

3) Remove the EGR valve from intake manifold.

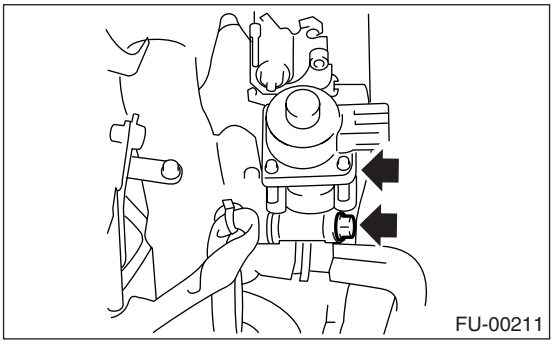

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

13. Air Assist Injector Solenoid Valve

A: REMOVAL

NOTE:
Air assist injector solenoid valve is equipped in 1.6 L model only.

1) Disconnect the ground cable from battery.

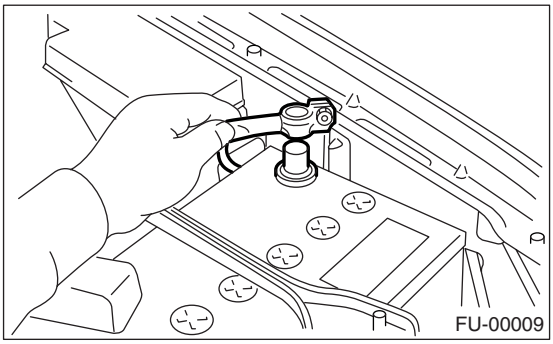

2) Disconnect the connector (A) from the air assist injector solenoid valve, and then disconnect the air by-pass hoses (B).

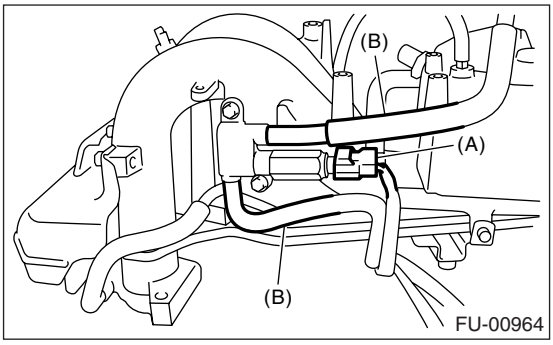

3) Remove the air assist injector solenoid valve from intake manifold.

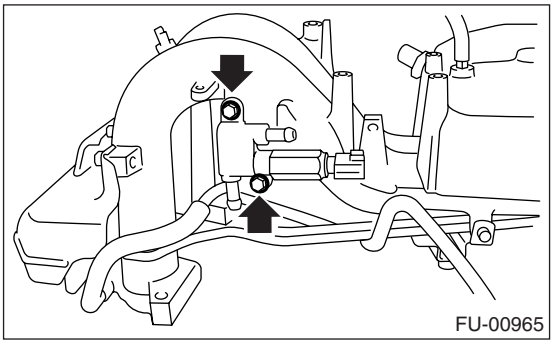

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

14.Fuel Injector

A: REMOVAL

1. RH SIDE

1) Release the fuel pressure.
<Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel flap lid, and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

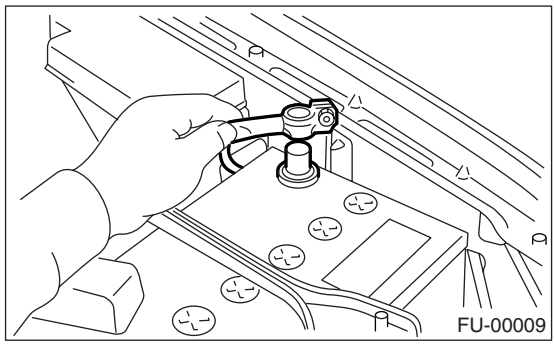

4) Remove the resonator chamber. <Ref. to IN(H4SO)-7, REMOVAL, Resonator Chamber.>
5) Remove the spark plug cords from spark plugs (#1 and #3 cylinders).

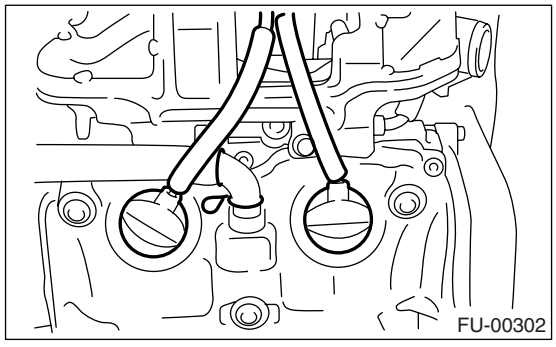

6) Remove the power steering pump and tank from brackets.
(1) Remove the front side V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
(2) Remove the bolts which hold the power steering pipes onto the intake manifold protector.

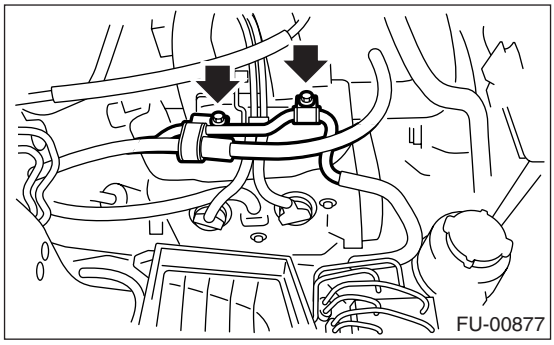

(3) Remove the bolts which install the power steering pump to bracket.

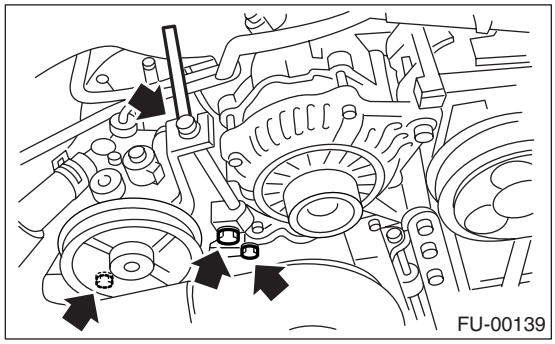

(4) Disconnect the connector from the power steering pump switch.

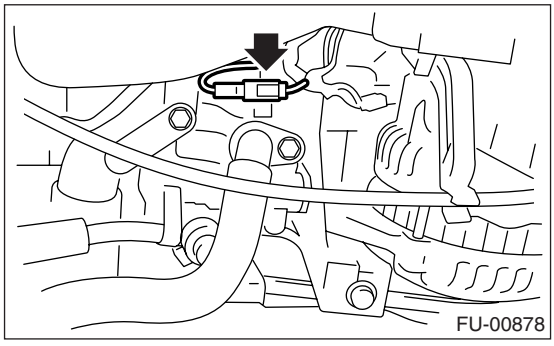

(5) Remove the power steering tank from the bracket by pulling it upwards.

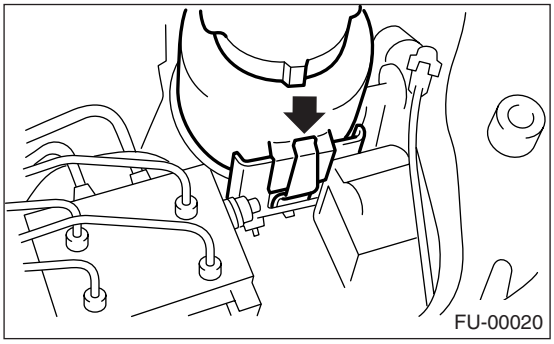

(6) Place the power steering pump and tank on the right side wheel apron.

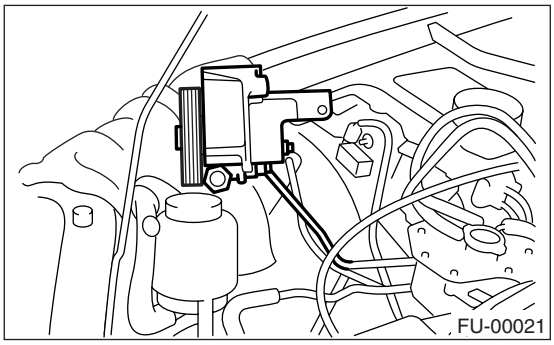

7) Remove the fuel pipe protector RH.

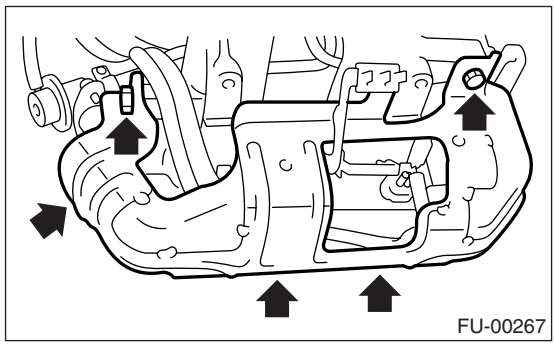

8) Disconnect the connector from fuel injector.

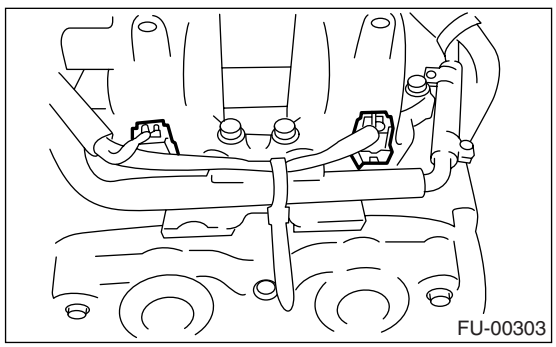

9) Remove the bolts which hold the fuel injector pipe to intake manifold.

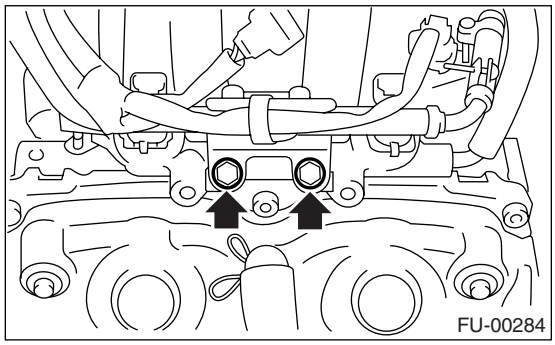

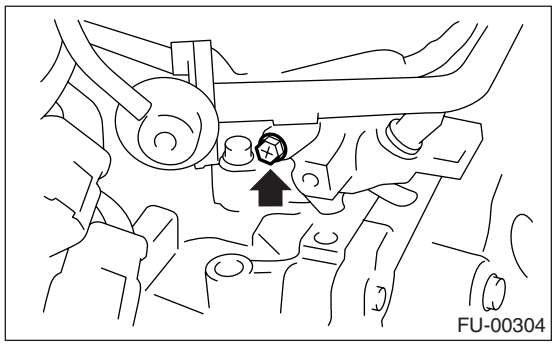

10) Remove the fuel injector from intake manifold.
(1) Remove the fuel injector securing clip.

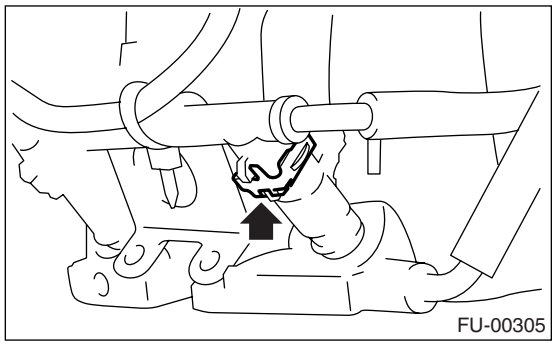

(2) Remove the fuel injector while lifting up the fuel injector pipe.

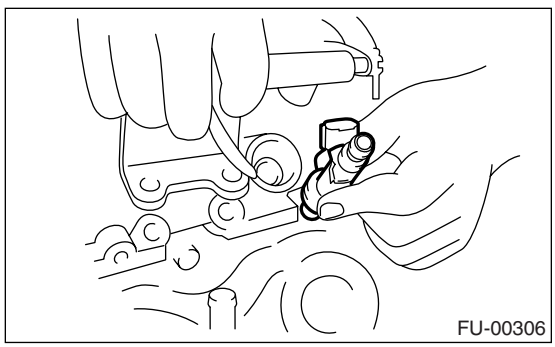

2. LH SIDE

1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel flap lid, and then remove the fuel filler cap.
3) Disconnect the ground cable from battery.

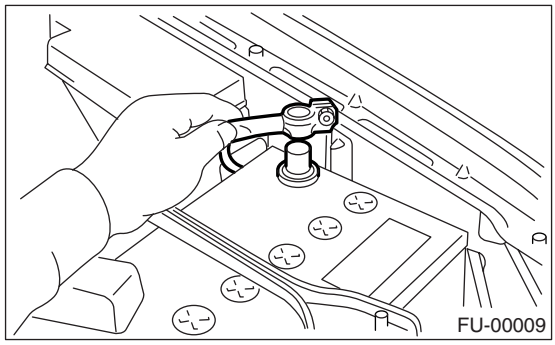

4) Remove the two bolts which install the washer tank on body.

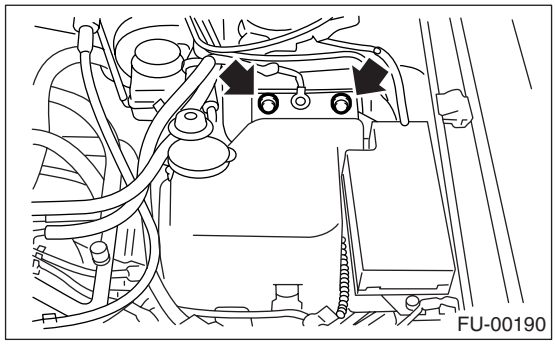

5) Disconnect the connector from the front window washer motor.
6) Disconnect the connector from the rear gate glass washer motor.

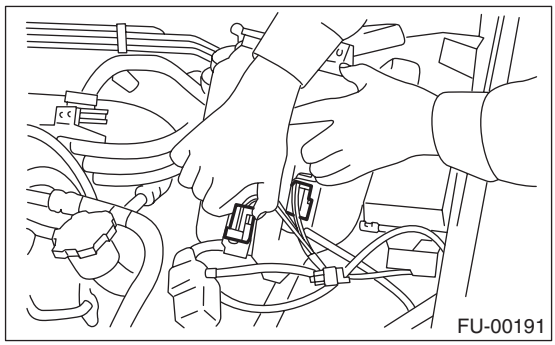

7) Disconnect the rear window glass washer hose from washer motor, and then plug the connection with a suitable cap.
8) Move the washer tank, and secure it away from working area.

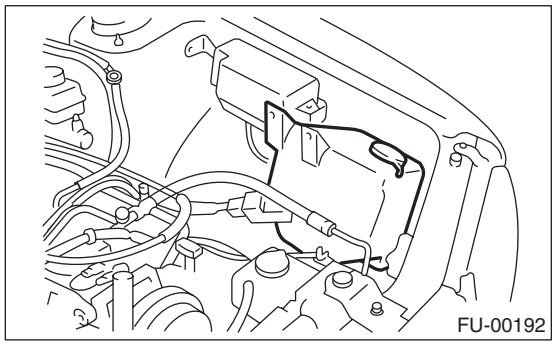

9) Remove the spark plug cords from spark plugs (#2 and #4 cylinders).

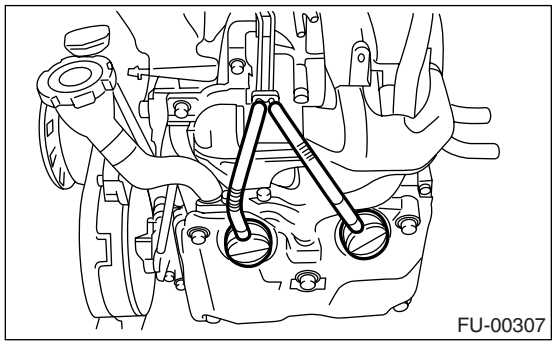

10) Remove the fuel pipe protector LH.

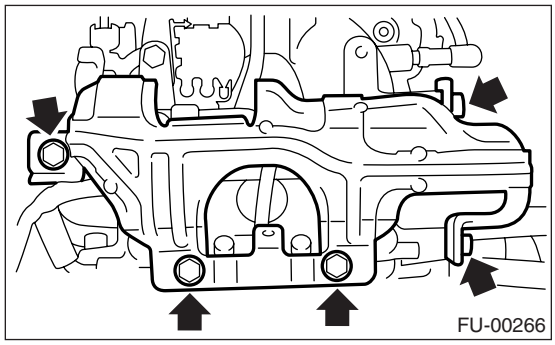

11) Disconnect the connector from fuel injector.

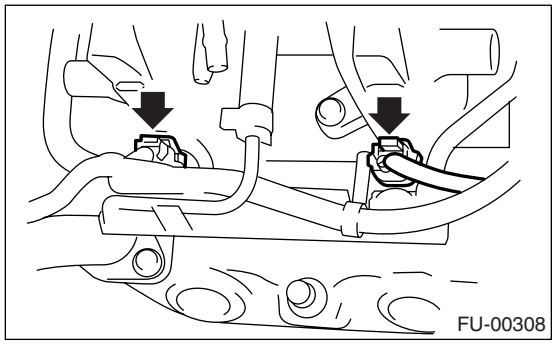

12) Remove the bolt which holds the fuel injector pipe to intake manifold.

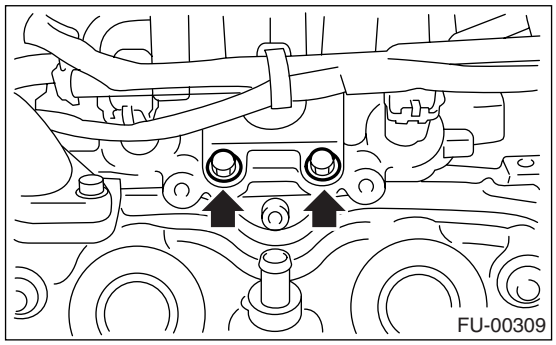

13) Remove the bolts which hold the fuel pipe on intake manifold.

- 1.6 L MODEL

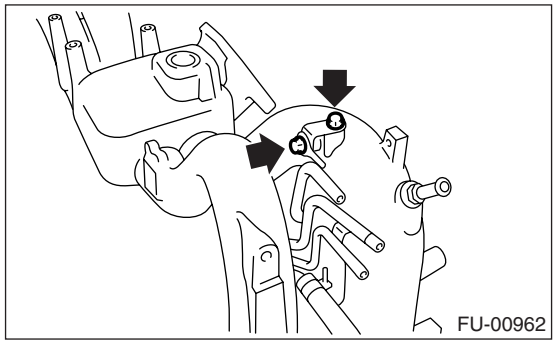

- 2.0 L MODEL

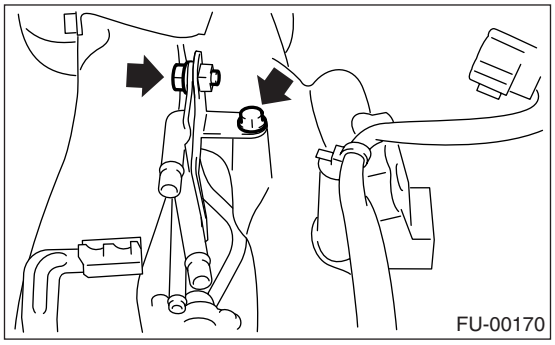

14) Remove the fuel injector from intake manifold.
(1) Remove the fuel injector securing clip.

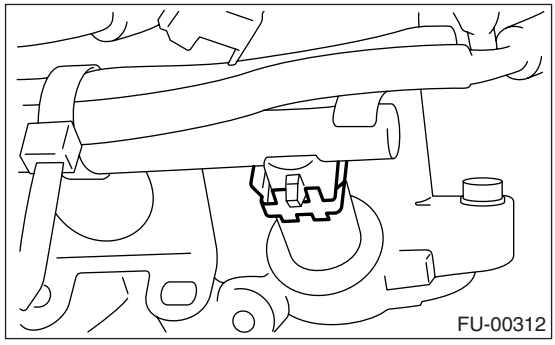

(2) Remove the fuel injector while lifting up the fuel injector pipe.

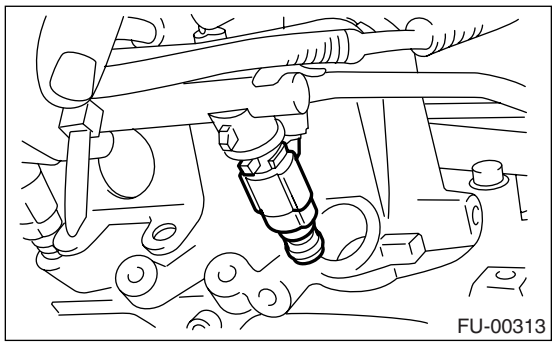

B: INSTALLATION

1. RH SIDE

Install in the reverse order of removal.

NOTE:
Replace O-rings with new ones.

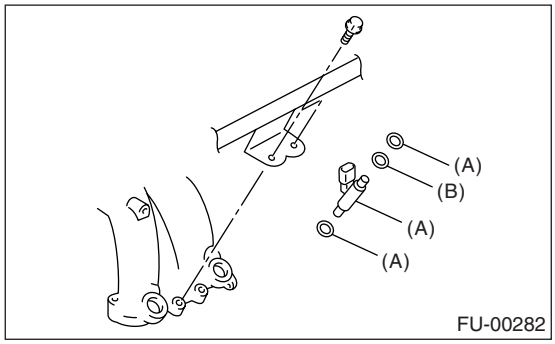

(A) O-ring
(B) Fuel injector

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

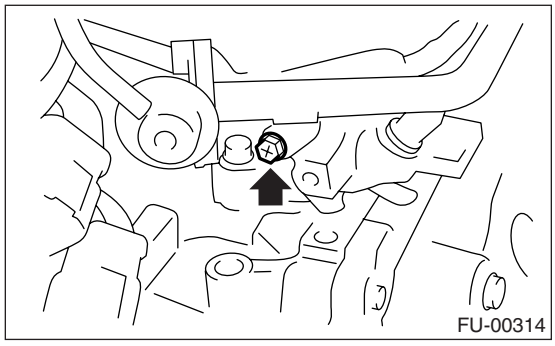

FUEL INJECTOR

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

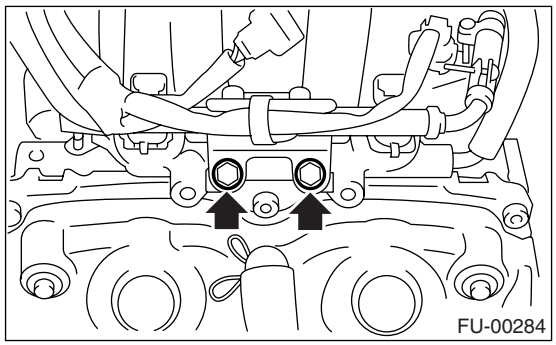

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

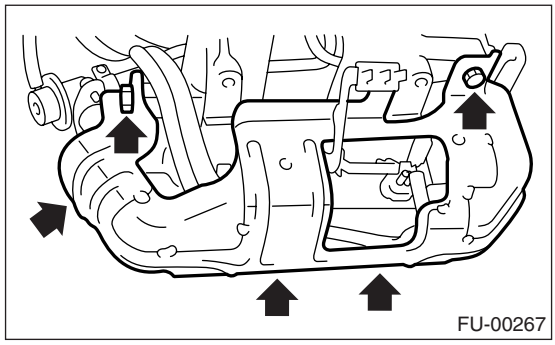

Tightening torque:
33 N·m (3.4 kgf-m, 24.3 ft-lb)

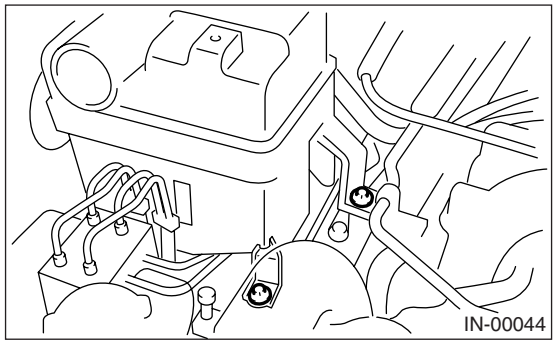

2. LH SIDE

Install in the reverse order of removal.

NOTE:
Replace O-rings with new ones.

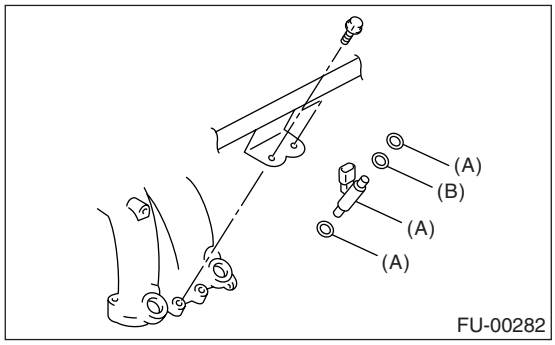

(A) O-ring
(B) Fuel injector

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

- 1.6 L MODEL

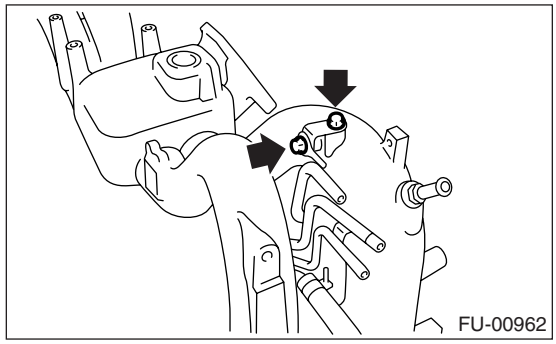

- 2.0 L MODEL

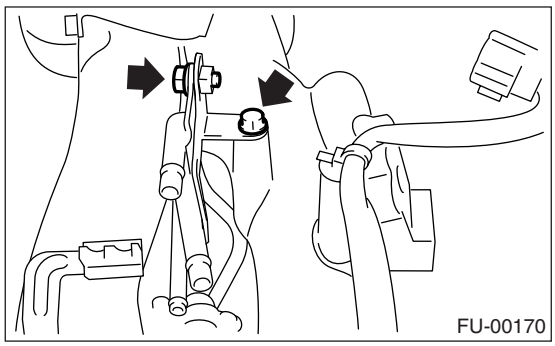

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

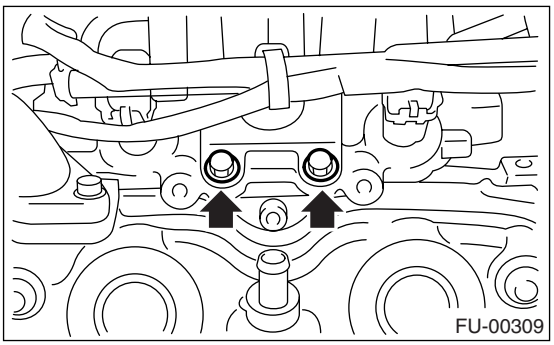

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

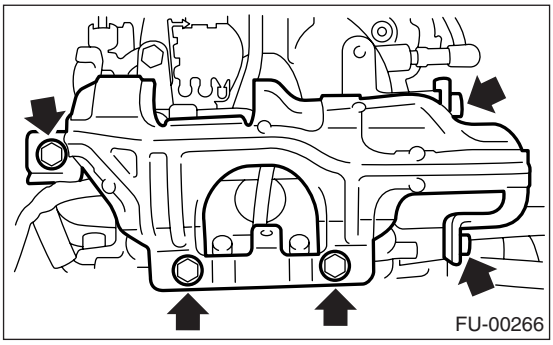

15.Front Oxygen (A/F) Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

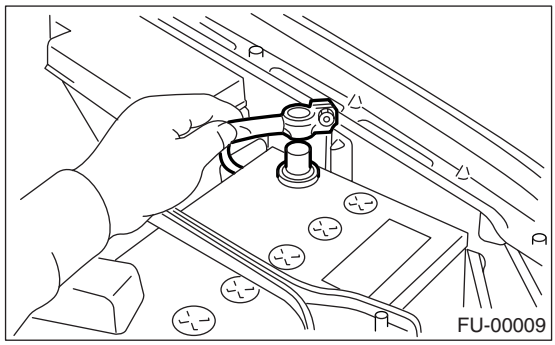

2) Disconnect the connector from engine hanger, and then disconnect the connector from front oxygen (A/F) sensor.

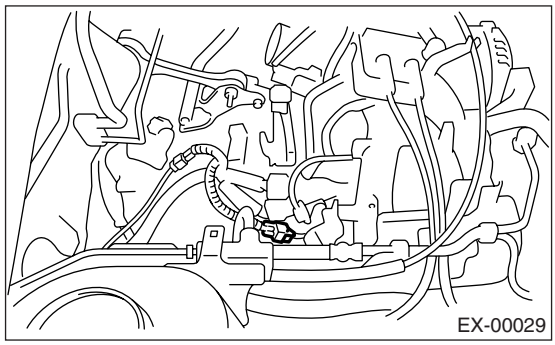

3) Lift-up the vehicle.
4) Apply SUBARU CRC or its equivalent to the threaded portion of front oxygen (A/F) sensor, and leave it for one minute or more.

SUBARU CRC (Part No. 004301003)

5) Remove the front oxygen (A/F) sensor.

CAUTION:
When removing the oxygen (A/F) sensor, wait until the exhaust pipe cools, otherwise it will damage the exhaust pipe.

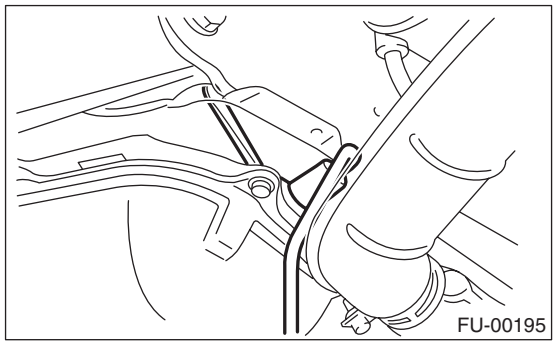

B: INSTALLATION

1) Before installing the front oxygen (A/F) sensor, apply anti-seize compound only to the threaded portion of front oxygen (A/F) sensor to make the next removal easier.

Anti-seize compound:
SS-30 by JET LUBE

CAUTION:
Never apply anti-seize compound to protector of the front oxygen (A/F) sensor.

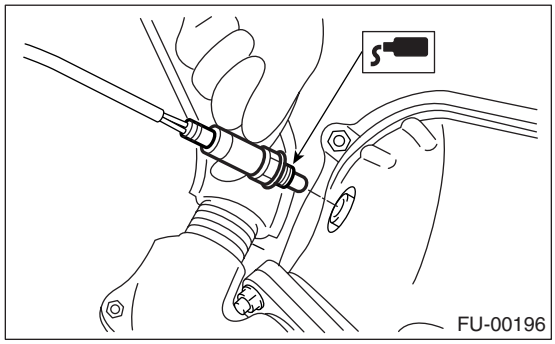

2) Install the front oxygen (A/F) sensor.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

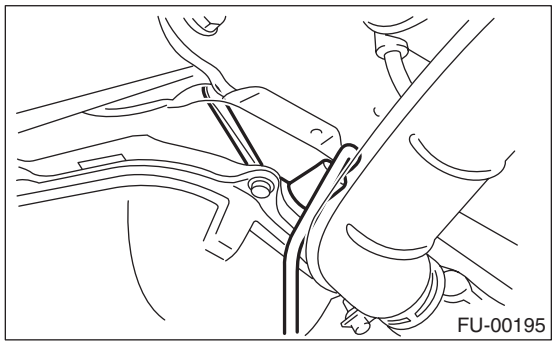

3) Lower the vehicle.
4) Connect the connector to front oxygen (A/F) sensor, and then connect the connector to engine hanger.

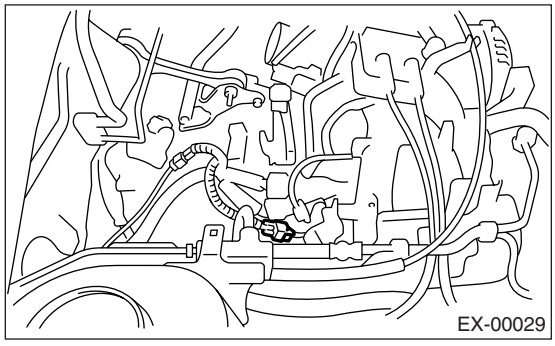

5) Connect the battery ground cable to battery.

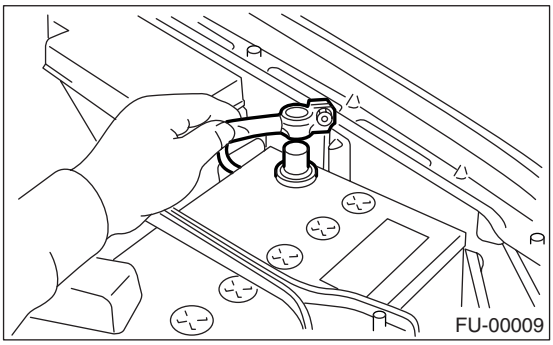

16.Rear Oxygen Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

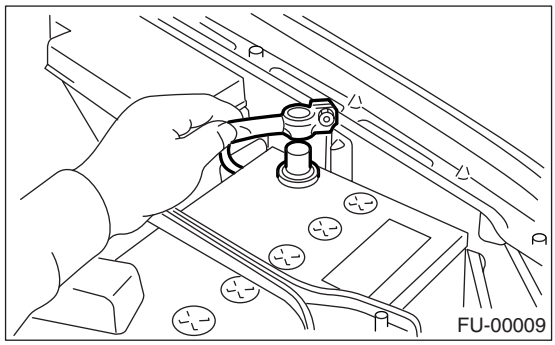

2) Lift-up the vehicle.
3) Disconnect the connector from the rear oxygen sensor.

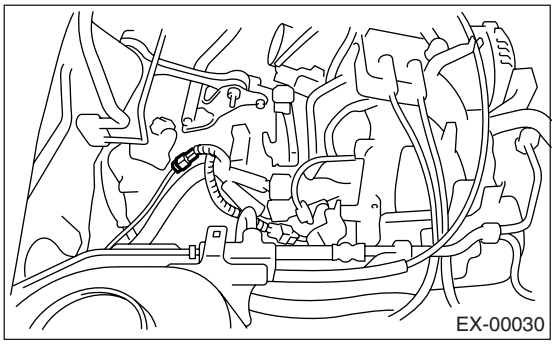

4) Apply SUBARU CRC or its equivalent to the threaded portion of rear oxygen sensor, and leave it for one minute or more.

SUBARU CRC (Part No. 004301003)

5) Remove the rear oxygen sensor.

CAUTION:
When removing the oxygen sensor, wait until the exhaust pipe cools, otherwise it will damage the exhaust pipe.

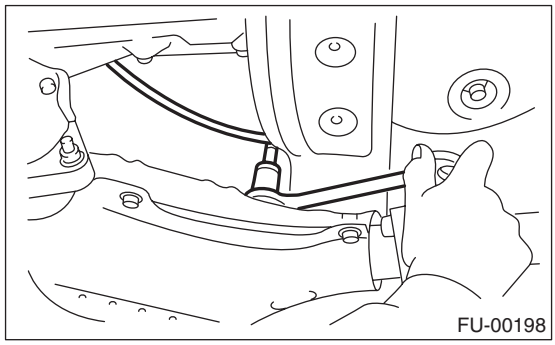

B: INSTALLATION

1) Before installing the rear oxygen sensor, apply the anti-seize compound only to the threaded portion of rear oxygen sensor to make the next removal easier.

CAUTION:
Never apply anti-seize compound to protector of the rear oxygen sensor.

Anti-seize compound:
SS-30 by JET LUBE

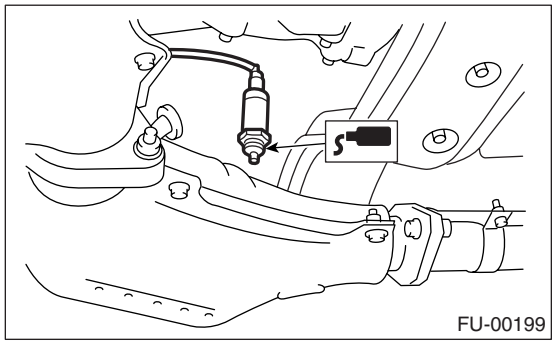

2) Install the rear oxygen sensor.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

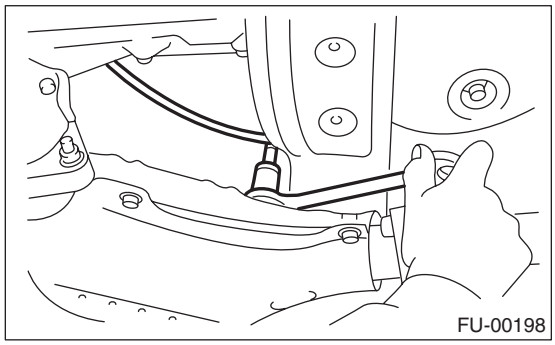

3) Connect the connector to the rear oxygen sensor.

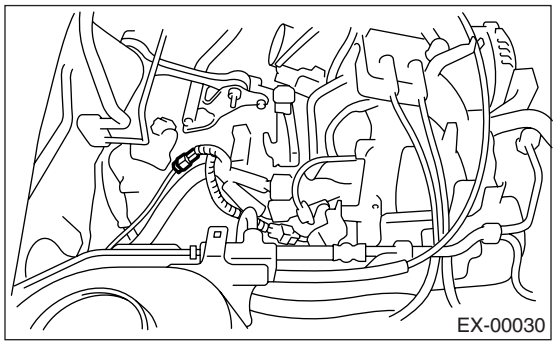

4) Lower the vehicle.

5) Connect the battery ground cable to battery.

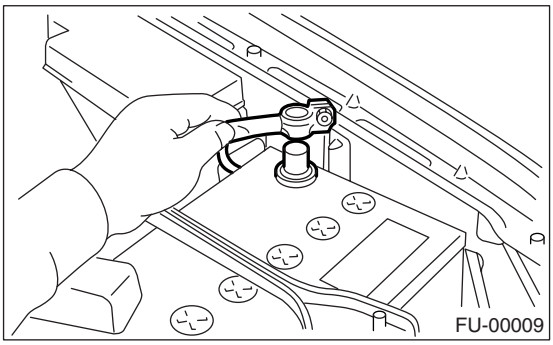

17.Engine Control Module (ECM)

A: REMOVAL

1) Disconnect the ground cable from battery.

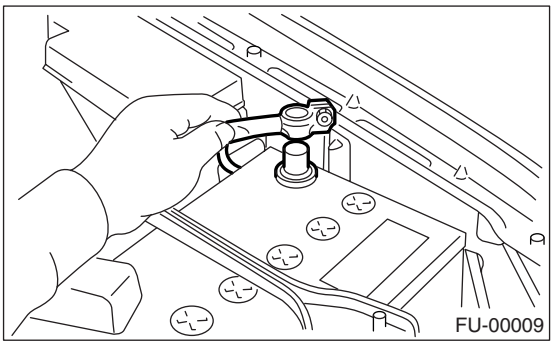

2) Remove the lower inner trim of passenger side.
<Ref. to EI-47, REMOVAL, Lower Inner Trim.>
3) Detach the floor mat of front passenger seat.
4) Remove the protect cover.

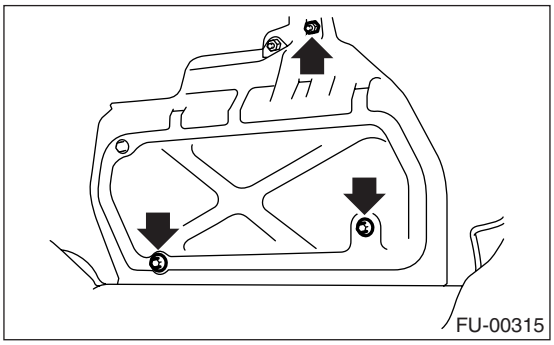

5) Remove the nuts (A) which hold ECM to bracket.
6) Remove the clip (B) from bracket.

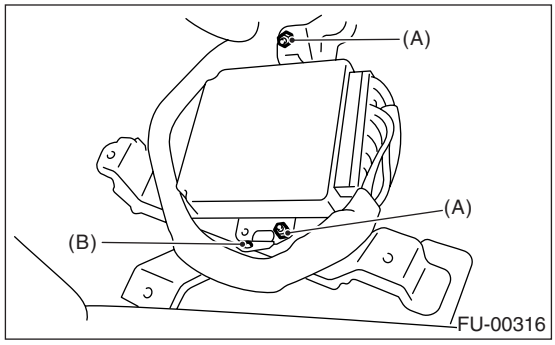

7) Disconnect the ECM connectors and take out the ECM.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
When replacing ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.

Tightening torque:
5 N·m (0.51 kgf-m, 3.7 ft-lb)

18.Main Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

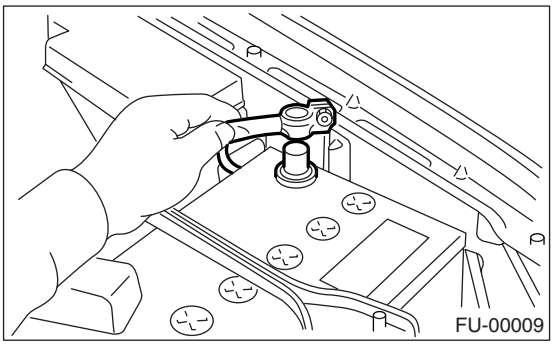

2) Remove the passenger's side front side sill cover.
3) Remove the bolt which holds the main bracket on body.
4) Disconnect the connectors from main relay.

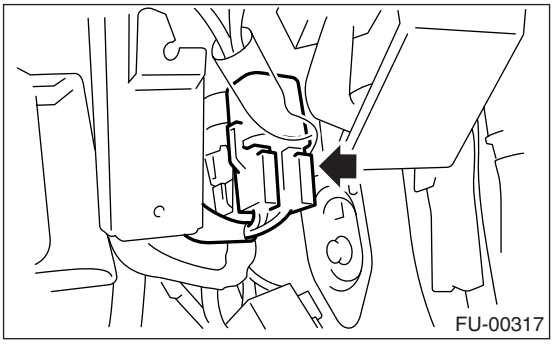

B: INSTALLATION

Install in the reverse order of removal.

19.Fuel Pump Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

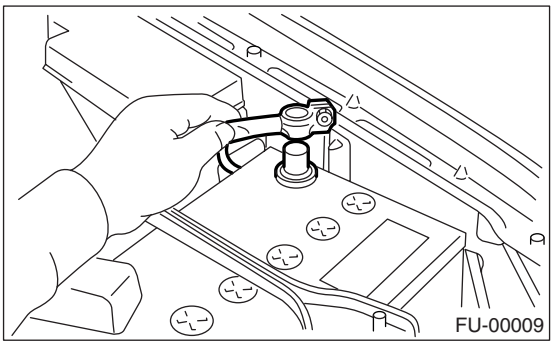

2) Remove the passenger's side front side sill cover.
3) Remove the bolt which holds the fuel pump relay bracket on body.
4) Disconnect the connector from fuel pump.

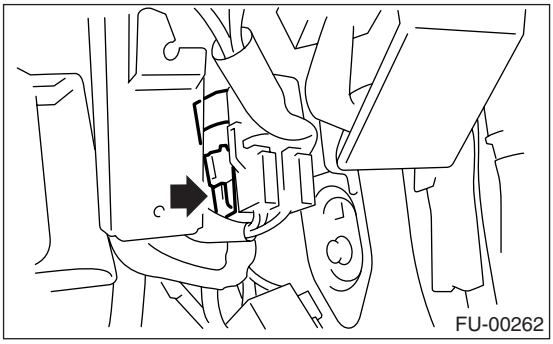

5) Remove the fuel pump relay from mounting bracket.

B: INSTALLATION

Install in the reverse order of removal.

20.Fuel

A: OPERATION

1. RELEASING OF FUEL PRESSURE

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel.**

1) Disconnect the connector from fuel pump relay.

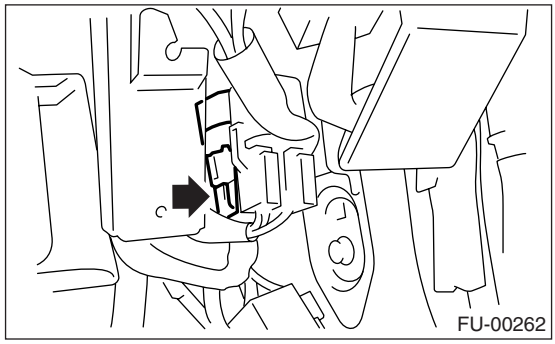

2) Start and run the engine until it stalls.
3) After the engine stalls, crank it for 5 more seconds.
4) Turn the ignition switch to OFF.

2. DRAINING FUEL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel.**

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

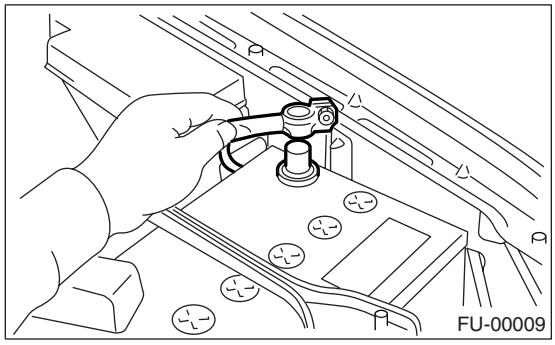

3) Open the fuel filler flap lid, and then remove the fuel filler cap.
4) Lift-up the vehicle.
5) Drain fuel from the fuel tank.
Set a container under the vehicle, and then remove the drain plug from fuel tank.

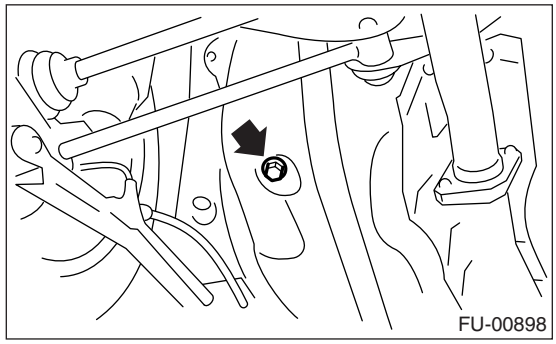

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

21.Fuel Tank

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel.**

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Drain fuel from fuel tank. <Ref. to FU(H4SO)-51, DRAINING FUEL, OPERATION, Fuel.>
4) Remove the rear seat.
5) Disconnect the connector (A) of fuel tank cord to rear harness.
6) Push the grommet (B) which holds the fuel tank cord on floor panel into under the body.

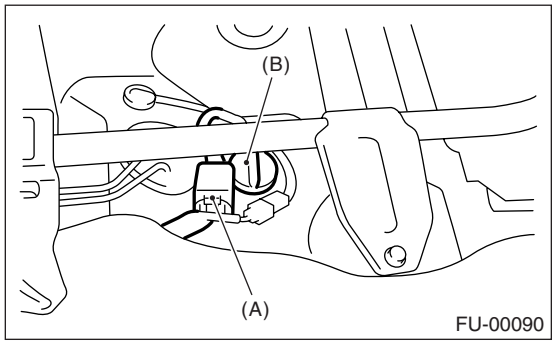

7) Remove the rear crossmember. <Ref. to RS-21, REMOVAL, Rear Crossmember.>
8) Disconnect the two-way valve hose (A) from two-way valve, and then disconnect the canister hose (B) from canister.

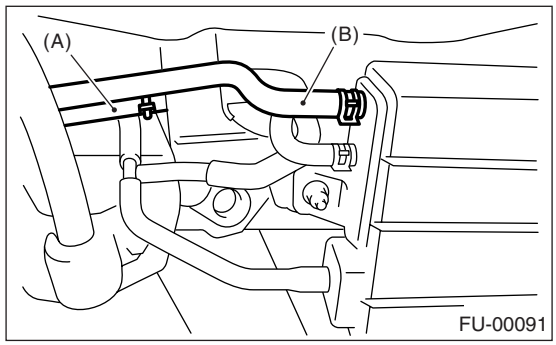

9) Loosen the clamp, and then disconnect the fuel filler hose and air vent hose from the fuel filler pipe.

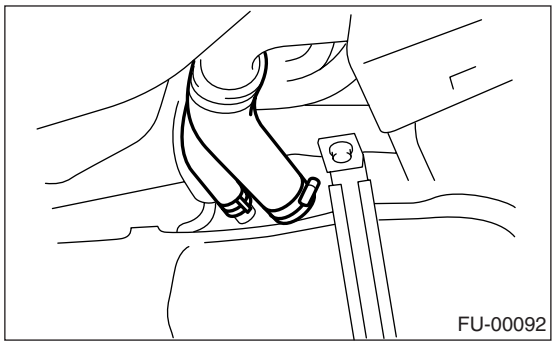

10) Move the clips, and then disconnect the quick connector. <Ref. to FU(H4SO)-65, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
11) Disconnect the fuel hoses.

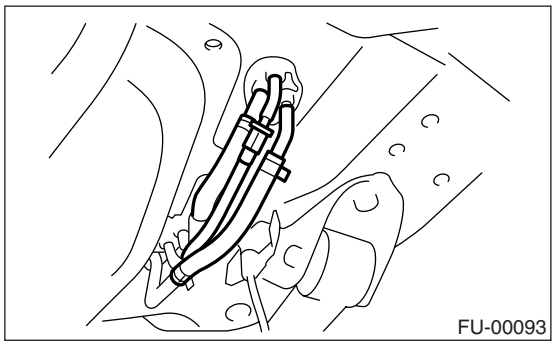

12) Support the fuel tank with transmission jack, and then remove the bolts from bands and dismount the fuel tank from vehicle.

WARNING:
A helper is required to perform this work.

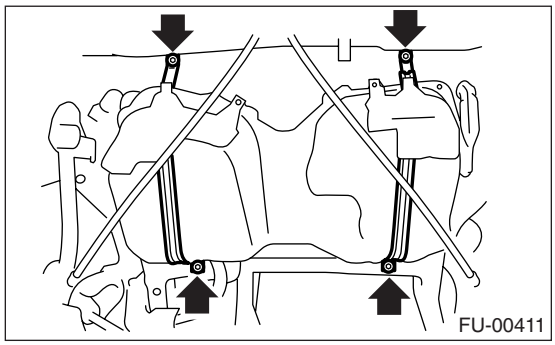

B: INSTALLATION

1) Support the fuel tank with transmission jack and push the fuel tank harness into access hole with grommet.
2) Set the fuel tank, and then temporarily tighten the bolts of fuel tank bands.

WARNING:
A helper is required to perform this work.

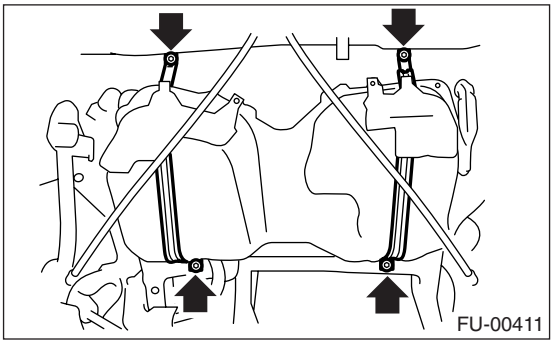

3) Connect the two-way valve hose (A) to two-way valve, and then connect the canister hose (B) to canister.

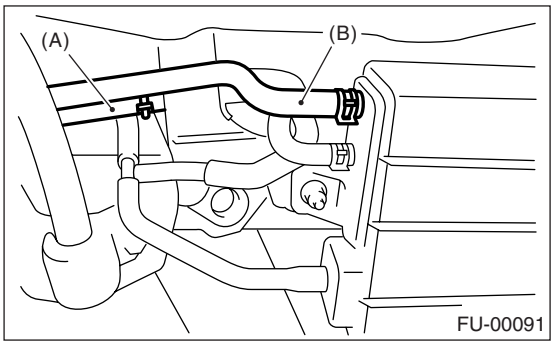

4) Connect the fuel filler hose and air vent hose.

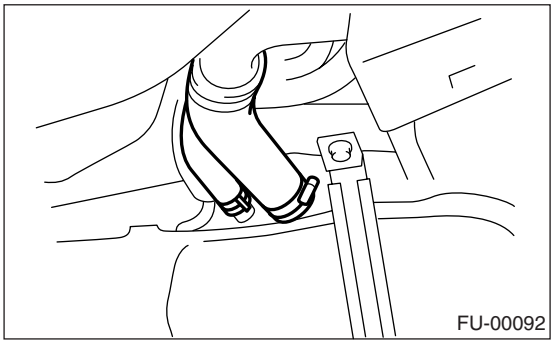

5) Connect the fuel hoses, and then secure them with clips and quick connector. <Ref. to FU(H4SO)-66, INSTALLATION, Fuel Delivery, Return and Evaporation Lines.>

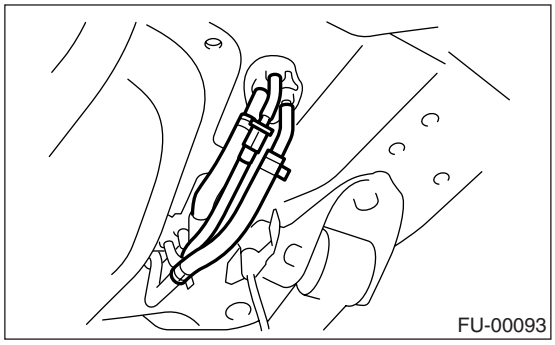

6) Tighten the band mounting bolts.

Tightening torque:
33 N·m (3.4 kgf-m, 24.3 ft-lb)

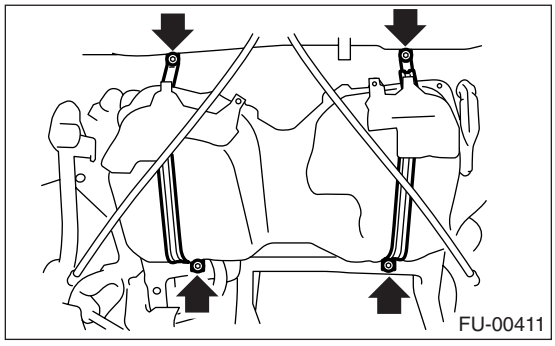

7) Install the rear crossmember. <Ref. to RS-21, INSTALLATION, Rear Crossmember.>
8) Connect the connector (A) to the fuel tank cord, and then plug the service hole with grommet (B).

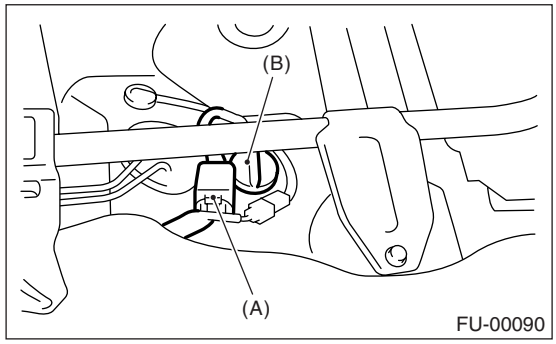

9) Set the rear seat and floor mat.

10) Connect the connector to fuel pump relay.

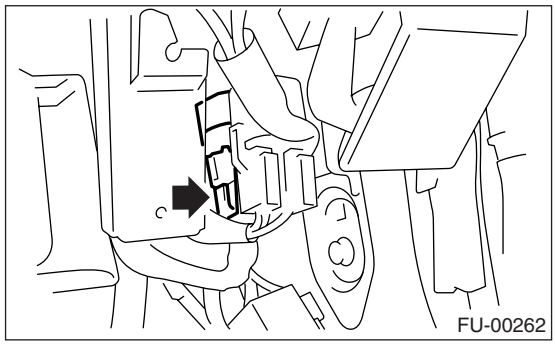

C: INSPECTION

1) Make sure there are no cracks, holes, or other damage on fuel tank.
2) Make sure the fuel hoses and fuel pipes are not cracked and the connections are tightened firmly.

22.Fuel Filler Pipe

A: REMOVAL

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel.**

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Disconnect the ground cable from battery.

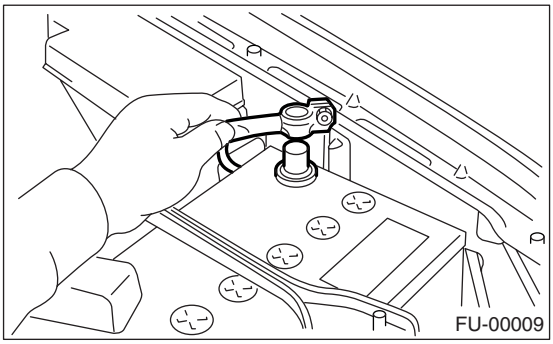
FU-00009

5) Remove the screws holding packing in place.

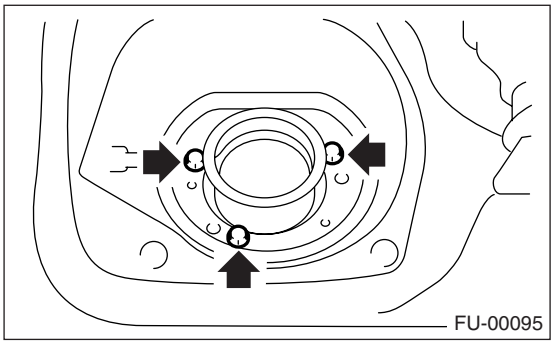
FU-00095

6) Loosen the rear wheel nuts RH.
7) Lift-up the vehicle.
8) Remove the rear wheel RH.

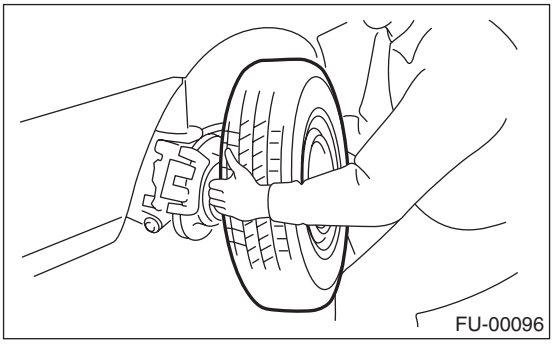
FU-00096

9) Drain fuel from the fuel tank. Set a container under the vehicle, and then remove the drain plug from fuel tank.

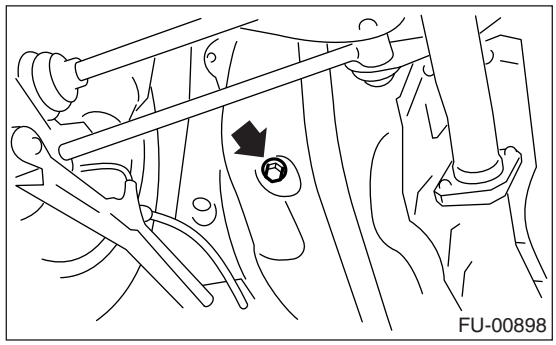
FU-00898

10) Tighten the fuel drain plug, and then install the front tank cover RH.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

11) Remove the fuel filler pipe protector.

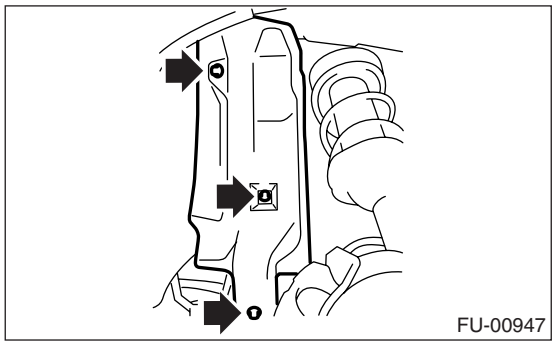
FU-00947

12) Separate the evaporation hoses from the clip of fuel filler pipe.

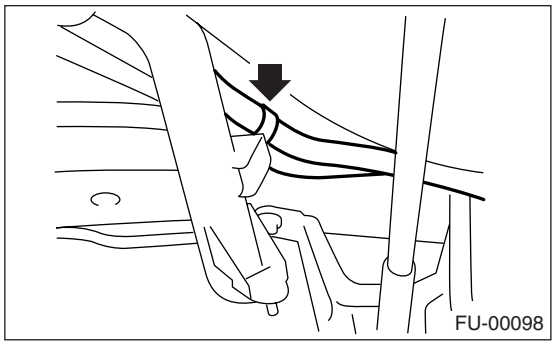
FU-00098

13) Disconnect the air vent hose from fuel filler pipe.

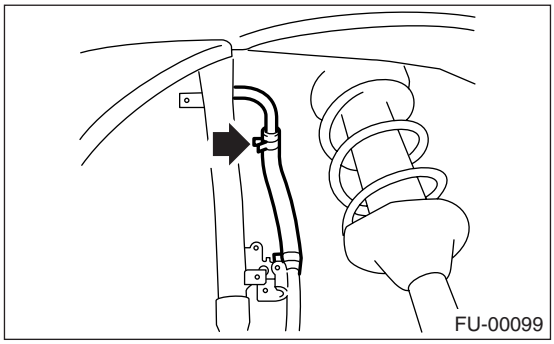

14) Remove the bolts which hold the fuel filler pipe bracket on body.

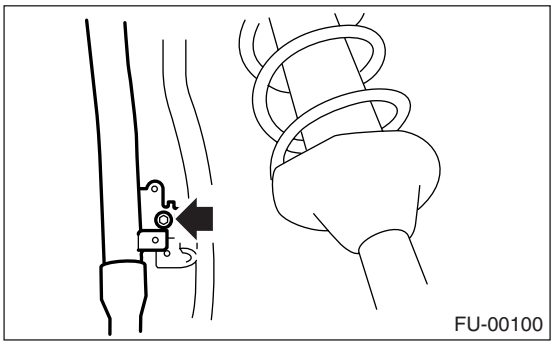

15) Loosen the clamp and separate the fuel filler hose (A) from fuel filler pipe.
16) Move the clip and separate the air vent hose (B).

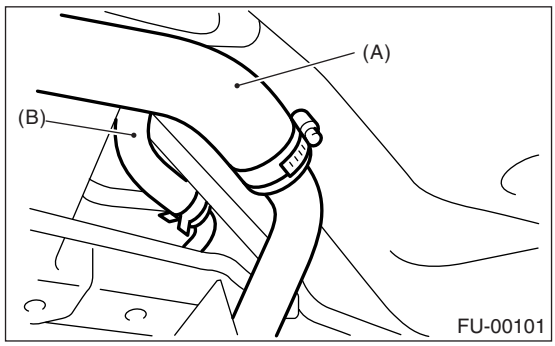

17) Remove the fuel filler pipe to the under side of vehicle.

18) Remove the air vent pipe together with clip from body.

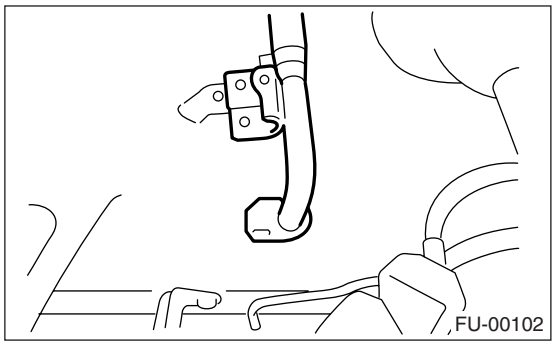

B: INSTALLATION

1) Hold the fuel filler flap open.
2) Set the fuel saucer (A) with rubber packing (C), and then insert the fuel filler pipe into hole from inner side of apron.
3) Align the holes in fuel filler pipe neck, and then set the cup (B) and tighten screws.

NOTE:
If the edges of rubber packing are folded toward inside, straighten it with a screwdriver.

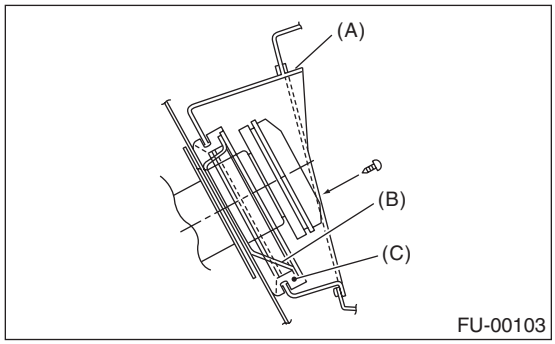

4) Install the air vent pipe.

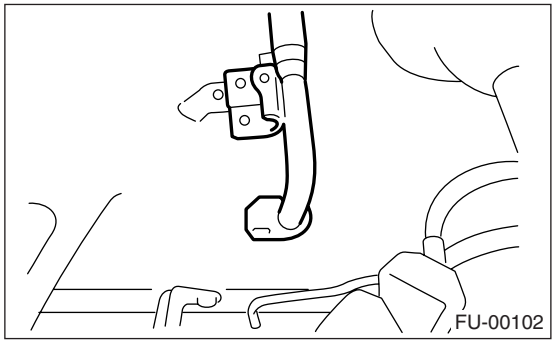

5) Connect the air vent hose to the fuel filler pipe.

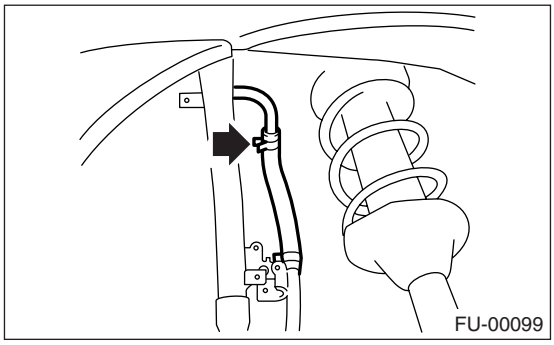

6) Insert the fuel filler hose (A) approx. 35 to 40 mm (1.38 to 1.57 in) over lower end of fuel filler pipe, and then tighten the clamp.

CAUTION:
Do not allow clips to touch the air vent hose (B) and rear suspension crossmember.

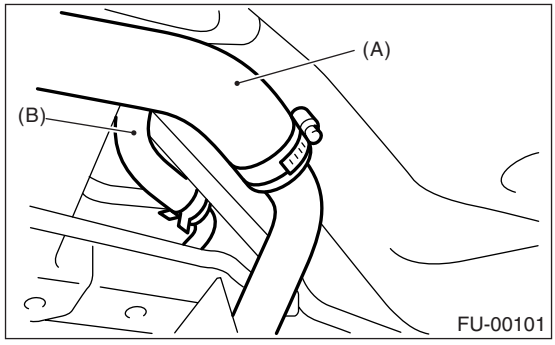

7) Insert the air vent hose approx. 25 to 30 mm (0.98 to 1.18 in) into the lower end of air vent pipe, and then hold the clip.

L = 27.5±2.5 mm (1.083±0.098 in)

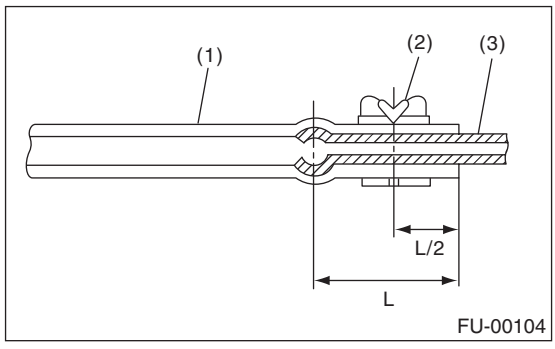

(1) Hose
(2) Clip
(3) Pipe

8) Tighten the bolt which holds the fuel filler pipe bracket on body.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

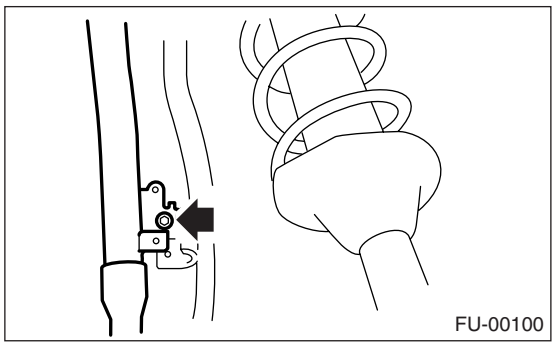

9) Hold the evaporation hoses onto clip of fuel filler pipe.

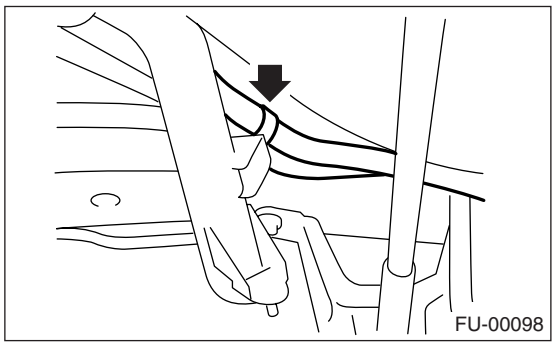

10) Install the fuel filler pipe protector.

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

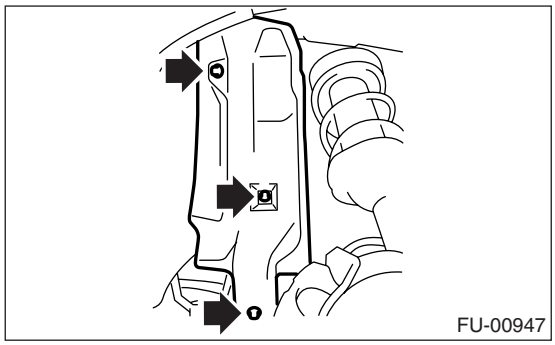

11) Install the rear wheel RH.

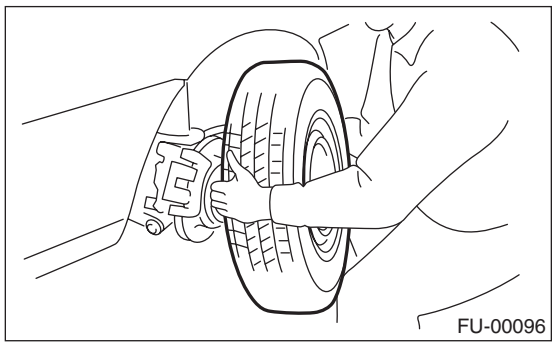

12) Lower the vehicle.
13) Tighten the wheel nuts.
14) Connect the connector to fuel pump relay.

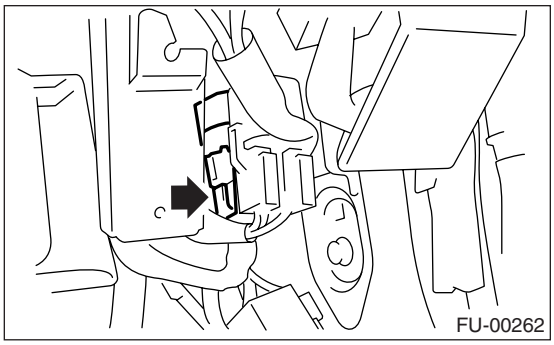

15) Connect the battery ground cable to battery.

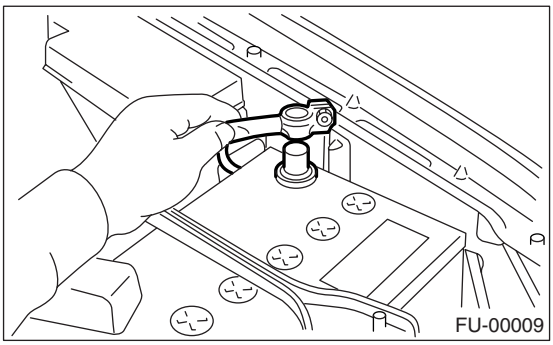

23.Fuel Pump

A: REMOVAL

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel.**

NOTE:
Fuel pump assembly consists of fuel pump and fuel level sensor.

1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid, and then remove the fuel filler cap.
3) Disconnect the ground cable from battery.

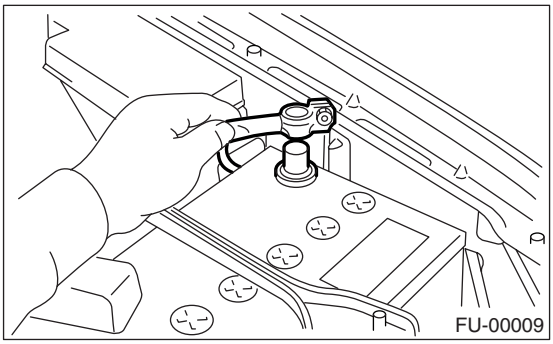
FU-00009

4) Lift-up the vehicle.
5) Drain fuel from the fuel tank. Set a container under the vehicle, and then remove the drain plug from fuel tank.

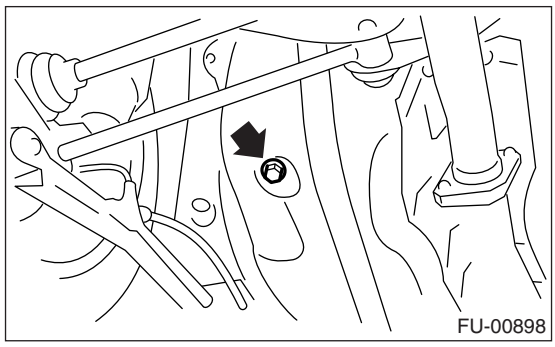
FU-00898

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

7) Raise the rear seat, and then turn the floor mat up.
8) Remove the access hole lid.

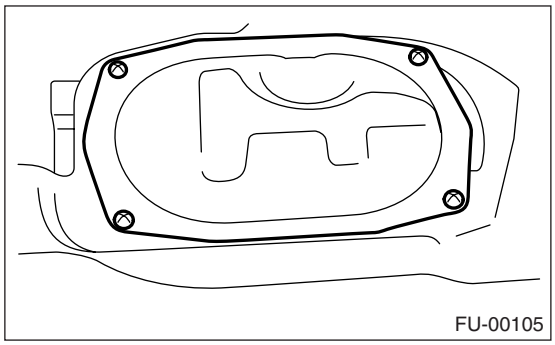
FU-00105

9) Disconnect the connector from fuel pump.

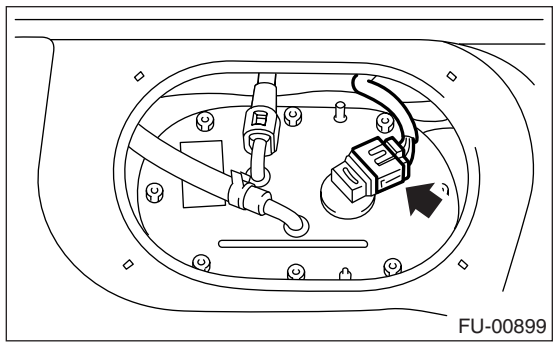
FU-00899

10) Disconnect the quick connector, and then disconnect the fuel delivery hose (A).
<Ref. to FU(H4SO)-65, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
11) Move the clip, and then disconnect the fuel return hose (B).

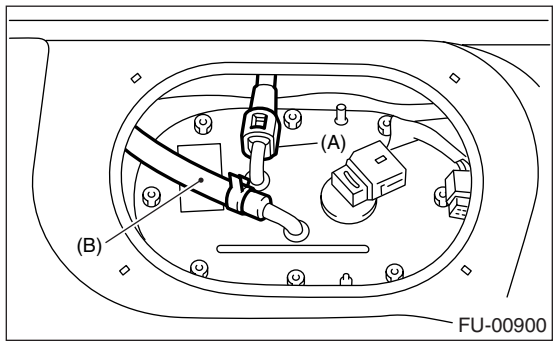

FU-00900

12) Remove the nuts which install the fuel pump assembly onto fuel tank.

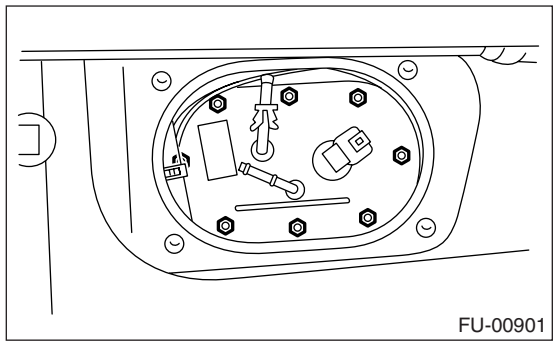
FU-00901

13) Take off the fuel pump assembly from fuel tank.

B: INSTALLATION

Install in the reverse order of removal. Do the following:

NOTE:
Replace the gasket with a new one.

(1) Ensure the sealing portion is free from fuel or foreign particles before installation.
(2) Tighten the nuts to specified torque in alphabetical sequence as shown in the figure.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

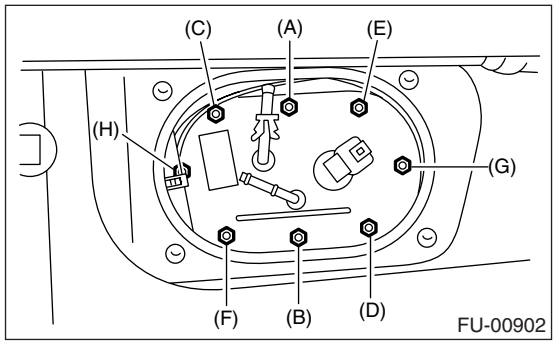

C: INSPECTION

Connect the lead harness to connector terminal of fuel pump, and then apply the battery power supply to check whether the pump operates.

WARNING:
• Wipe off the fuel completely.
• Keep the battery as far apart from fuel pump as possible.
• Be sure to turn the battery supply ON and OFF on battery side.
• Do not run the fuel pump for a long time under non-load condition.

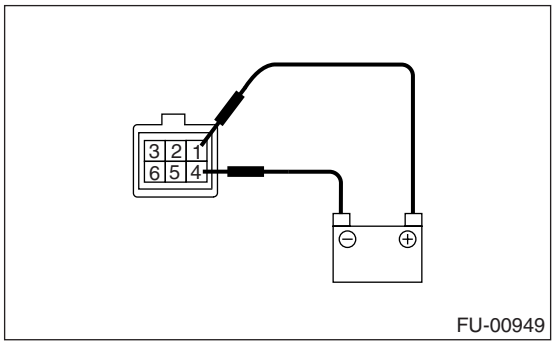

24.Fuel Level Sensor

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel.**

NOTE:
Fuel level sensor is built in the fuel pump assembly.

1) Remove the fuel pump assembly. <Ref. to FU(H4SO)-59, REMOVAL, Fuel Pump.>
2) Disconnect the connector from fuel pump bracket.

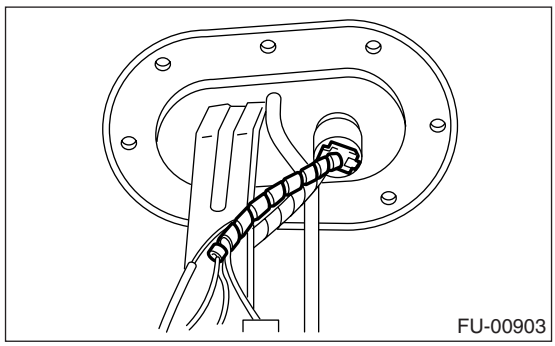

3) Remove the bolts which install the fuel level sensor on mounting bracket.

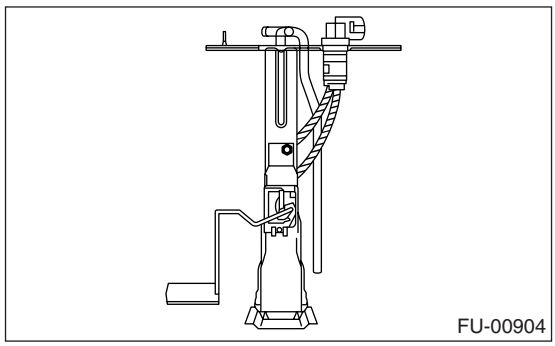

B: INSTALLATION

Install in the reverse order of removal.

25.Fuel Filter

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel.**

1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Disconnect the fuel delivery hoses from fuel filter.

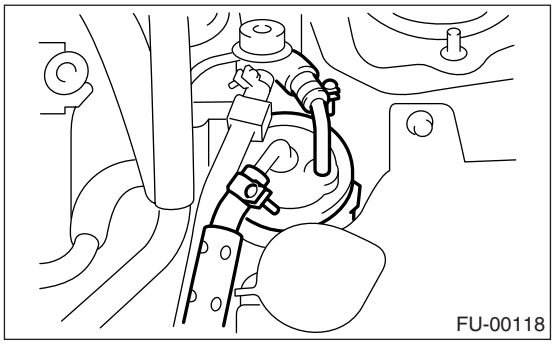

3) Remove the filter from holder.

B: INSTALLATION

CAUTION:
- **If the fuel hoses are damaged at connecting portion, replace them with new ones.**
- **If clamps are badly damaged, replace them with new ones.**

1) Install in the reverse order of removal.
2) Tighten the hose clamp screws.

Tightening torque:
1.25 N·m (0.13 kgf-m, 0.94 ft-lb)

C: INSPECTION

1) Check the inside of fuel filter for dirt and water sediment.
2) If it is clogged, or if replacement interval has been reached, replace it.
3) If water is found in it, shake and expel the water from inlet port.

26.Fuel Cut Valve

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel.**

1) Remove the fuel tank. <Ref. to FU(H4SO)-52, REMOVAL, Fuel Tank.>
2) Move the clip and disconnect the evaporation hose from fuel cut valve.

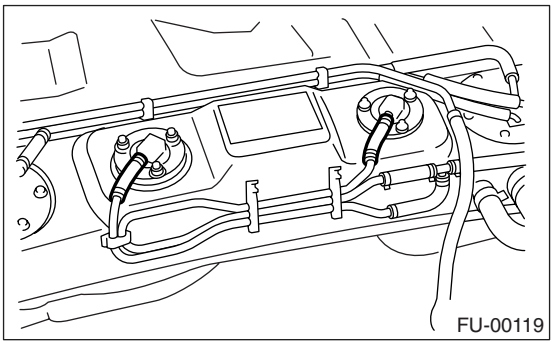

3) Remove the bolts which install the fuel cut valve.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SO)-3, COMPONENT, General Description.>

27.Fuel Damper Valve

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Remove the fuel damper valve from the fuel return line.

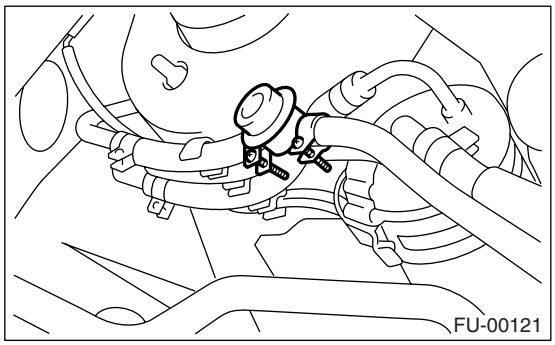

B: INSTALLATION

Install in the reverse order of removal.

28.Fuel Delivery, Return and Evaporation Lines

A: REMOVAL

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Open the fuel filler flap lid, and then remove the fuel filler cap.
4) Remove the floor mat. <Ref. to EI-55, REMOVAL, Floor Mat.>
5) Remove the fuel delivery pipes and hoses, fuel return pipes and hoses, evaporation pipes and hoses.

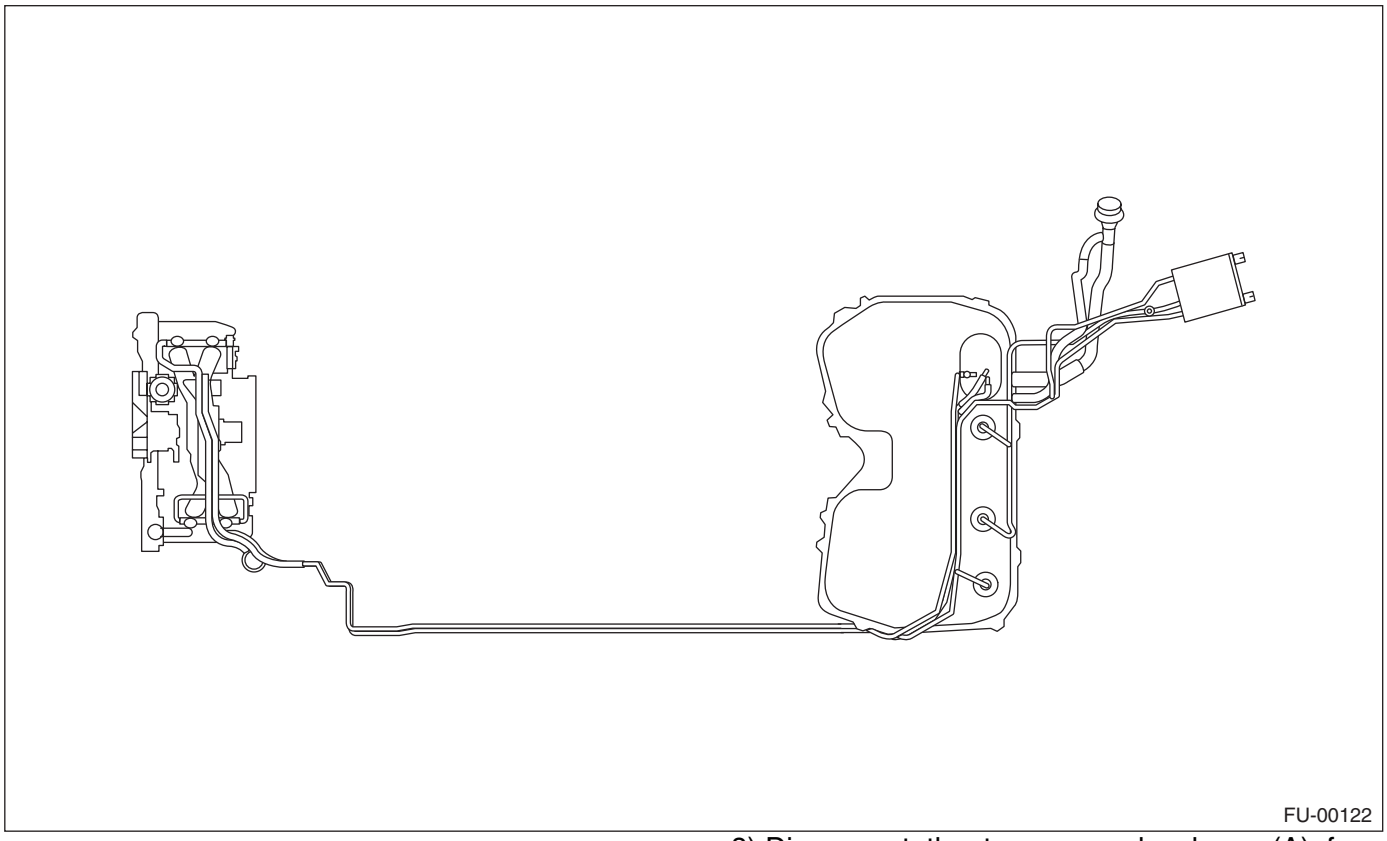
FU-00122

6) In the engine compartment, detach the fuel delivery hose (A), return hose (B) and evaporation hose (C).

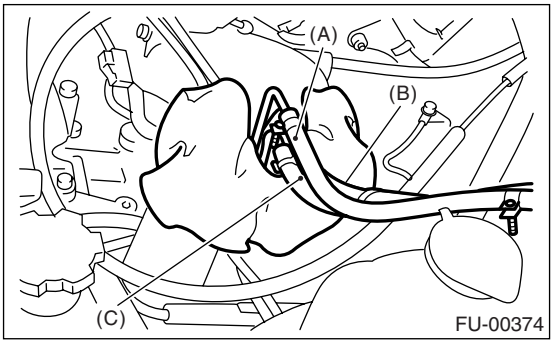

FU-00374

7) Lift-up the vehicle.

8) Disconnect the two-way valve hose (A) from two-way valve and disconnect the canister hose (B) from canister.

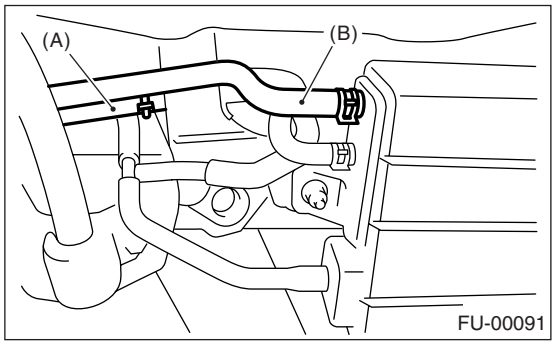

FU-00091

9) Separate the quick connector on fuel delivery line.

(1) Clean the pipe and connector, if they are covered with dust.

(2) Hold the connector (A), and then push the retainer (B) down.

(3) Pull out the connector (A) from retainer (B).

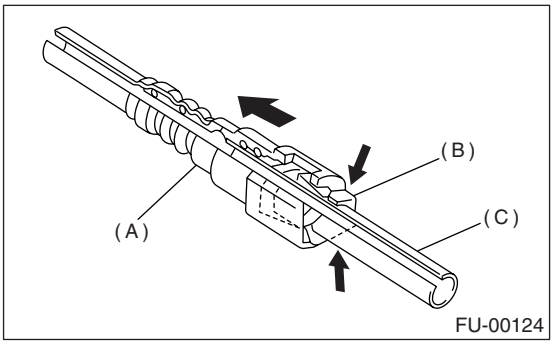

(A) Connector
(B) Retainer
(C) Pipe

B: INSTALLATION

1) Connect the quick connector on fuel delivery line.

NOTE:
- Replace the retainer with a new one.
- Make sure that the connected portion is not damaged or has dust. If necessary, clean the seal surface of pipe.

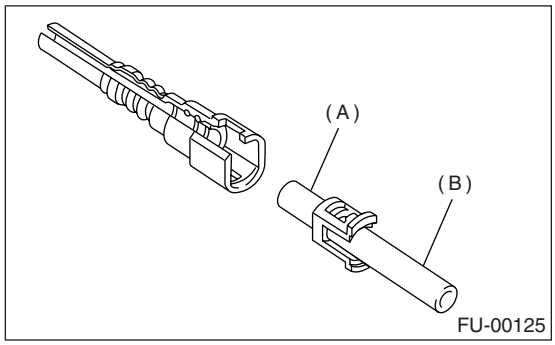

(A) Seal surface
(B) Pipe

(1) Set the new retainer (B) to connector (A).

(2) Push the pipe into connector completely.

NOTE:
At this time, two clicking sounds are heard.

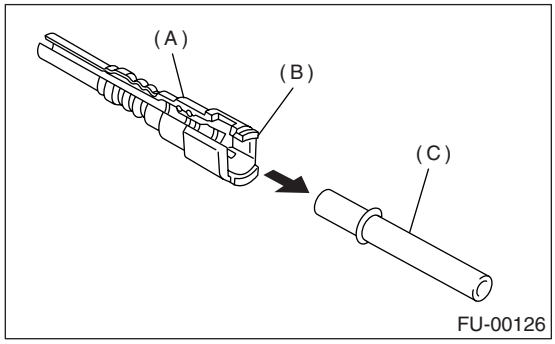

(A) Connector
(B) Retainer
(C) Pipe

CAUTION:
• Pull the connector to ensure it is connected securely.
• Ensure the two retainer pawls are engaged in their mating positions in connector.
• Be sure to inspect the hoses and their connections for any leakage of fuel.

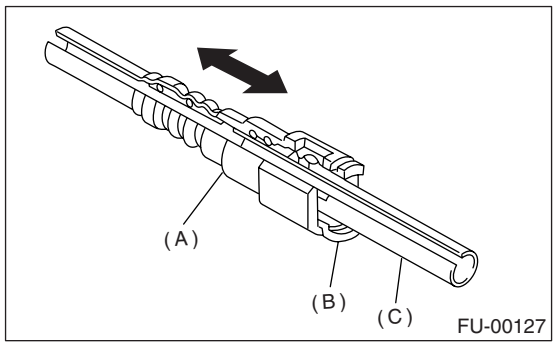

(A) Connector
(B) Retainer
(C) Pipe

2) Connect the fuel delivery hose to pipe with an overlap of 20 to 25 mm (0.79 to 0.98 in).
Type A: When the fitting length is specified.
Type B: When the fitting length is not specified.

ℓ : 2.5±1.5 mm (0.098±0.059 in)

L: 22.5±2.5 mm (0.886±0.098 in)

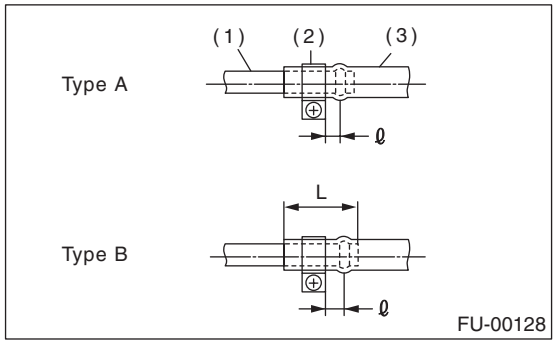

(1) Fitting
(2) Clamp
(3) Hose

3) Connect the evaporation hose to pipe by approx. 15 to 20 mm (0.59 to 0.79 in) from the hose end.

L = 17.5±2.5 mm (0.689±0.098 in)

CAUTION:
Be sure to inspect the hoses and their connections for any leakage of fuel.

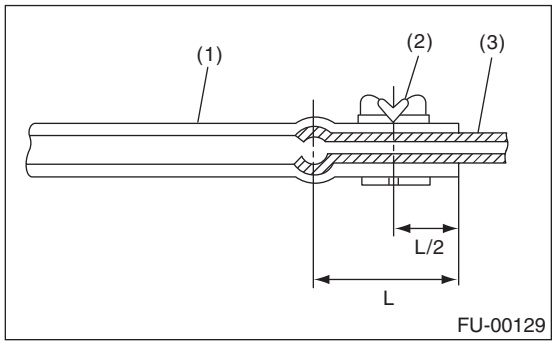

(1) Hose
(2) Clip
(3) Pipe

C: INSPECTION

1) Make sure that there are no cracks on the fuel pipes and fuel hoses.
2) Make sure that the fuel pipe and fuel hose connections are tightened firmly.

29.Fuel System Trouble in General

A: INSPECTION

Trouble and possible cause			Corrective action
1. Insufficient fuel supply to the injector			
1)	Fuel pump will not operate.		
	❍	Defective terminal contact.	Inspect connections, especially ground, and tighten securely.
	❍	Trouble in electromagnetic or electronic circuit parts.	Replace the fuel pump.
2)		Lowering of fuel pump function.	Replace the fuel pump.
3)		Clogged dust or water in the fuel filter.	Replace the fuel filter, clean or replace fuel tank.
4)		Clogged or bent fuel pipe or hose.	Clean, correct or replace the fuel pipe or hose.
5)		Air is mixed in the fuel system.	Inspect or retighten each connection part.
6)		Clogged or bent breather tube or pipe.	Clean, correct or replace the air breather tube or pipe.
7)		Damaged diaphragm of pressure regulator.	Replace.
2. Leakage or blow out fuel			
1)		Loosened joints of the fuel pipe.	Retightening.
2)		Cracked fuel pipe, hose and fuel tank.	Replace.
3)		Defective welding part on the fuel tank.	Replace.
4)		Defective drain packing of the fuel tank.	Replace.
5)		Clogged or bent air breather tube or air vent tube.	Clean, correct or replace the air breather tube or air vent tube.
3. Gasoline smell inside of compartment			
1)		Loose joints at air breather tube, air vent tube and fuel filler pipe.	Retightening.
2)		Defective packing air tightness on the fuel saucer.	Correct or replace the packing.
3)		Cracked fuel separator.	Replace the separator.
4)		Inoperative fuel pump modulator or circuit.	Replace.
4. Defective fuel meter indicator			
1)		Defective operation of fuel level sensor.	Replace.
2)		Defective operation of fuel meter.	Replace.
5. Noise			
1)		Large operation noise or vibration of fuel pump.	Replace.

NOTE:

• When the vehicle is left unattended for an extended period of time, water may accumulate in the fuel tank.

To prevent water condensation.

(1) Top off the fuel tank or drain the fuel completely.

(2) Drain the water condensation from the fuel filter.

• Refilling the fuel tank.

Refill the fuel tank while there is still some fuel left in the tank.

• Protecting the fuel system against freezing and water condensation.

(3) Cold areas:

In snow-covered areas, mountainous areas, skiing areas, etc. where ambient temperatures drop below 0°C (32°F) throughout the winter season, use an anti-freeze solution in the cooling system. Refueling will also complement the effect of anti-freeze solution each time the fuel level drops to about one-half. After the winter season, drain the water which may have accumulated in the fuel filter and fuel tank in the manner same as that described under “Affected areas” below.

(4) Affected areas:

When the water condensation is notched in the fuel filter, drain the water from both the fuel filter and fuel tank or use a water removing agent (or anti-freeze solution) in the fuel tank.

• Observe the instructions, notes, etc., indicated on the label affixed to the anti-freeze solution (water removing agent) container before use.

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

EC(H4SO)

		Page
1.	General Description	2
2.	Front Catalytic Converter	3
3.	Rear Catalytic Converter	4
4.	EGR Valve	5
5.	Canister	6
6.	Purge Control Solenoid Valve	7
7.	Two-way Valve	8

1. General Description

A: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Front Catalytic Converter

A: REMOVAL

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for center exhaust pipe.
<Ref. to EX(H4SO)-9, REMOVAL, Center Exhaust Pipe.>

B: INSTALLATION

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for center exhaust pipe.
<Ref. to EX(H4SO)-9, INSTALLATION, Center Exhaust Pipe.>

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

3. Rear Catalytic Converter

A: REMOVAL

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for center exhaust pipe.
<Ref. to EX(H4SO)-9, REMOVAL, Center Exhaust Pipe.>

B: INSTALLATION

The front and rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for center exhaust pipe.
<Ref. to EX(H4SO)-9, INSTALLATION, Center Exhaust Pipe.>

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

4. EGR Valve

A: PROCEDURE

For EGR valve removal and installation procedures, refer to FU section. <Ref. to FU(H4SO)-36, EGR Valve.>

5. Canister

A: REMOVAL

1) Lift-up the vehicle.
2) Loosen the two clamps which hold the two canister hoses, and then disconnect the three evaporation hoses from canister.

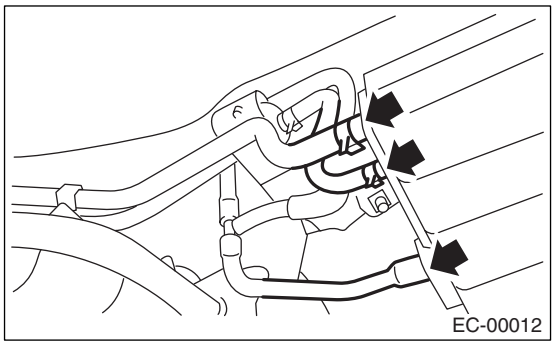

3) Remove the canister from body.

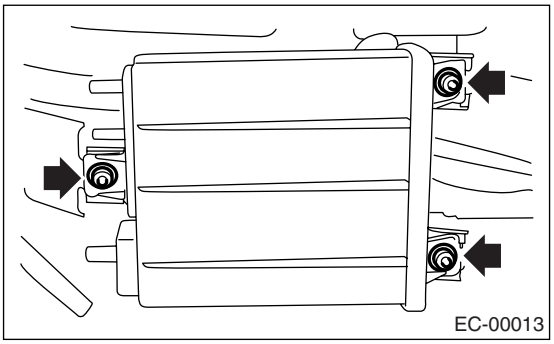

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
23 N·m (2.3 kgf-m, 17 ft-lb)

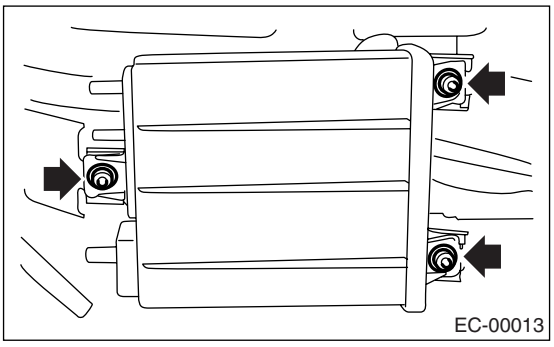

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.

6. Purge Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

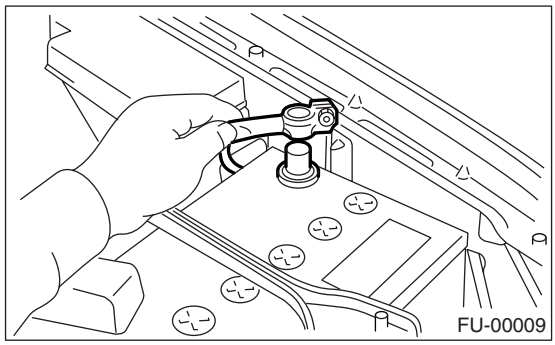

2) Disconnect the connector and hoses from the purge control solenoid valve, and then remove the purge control solenoid valve.

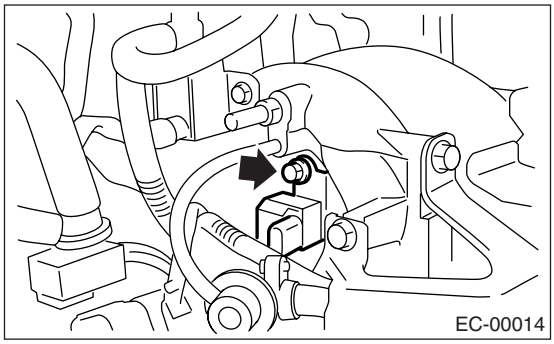

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

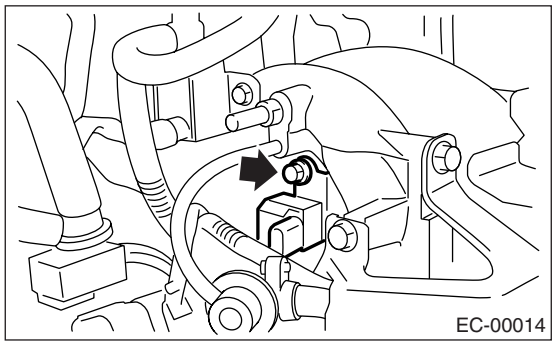

NOTE:
Connect the evaporation hoses as shown in the figure.

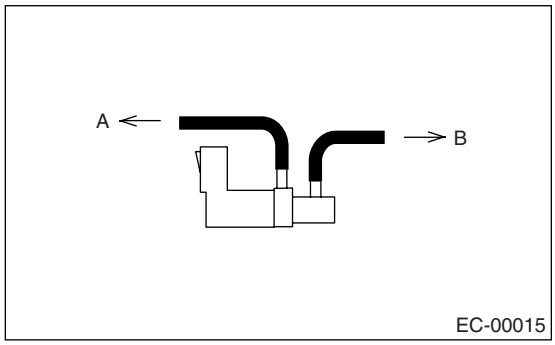

(A) To fuel pipe
(B) To intake manifold

C: INSPECTION

Make sure hoses are not cracked or loose.

7. Two-way Valve

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the canister from body. <Ref. to EC(H4SO)-6, REMOVAL, Canister.>
3) Remove the two-way valve with bracket as a single unit from body.

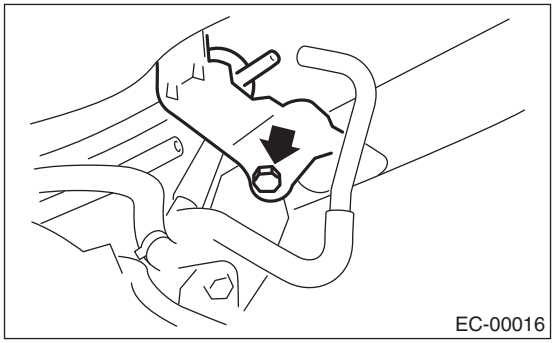

4) Remove the two-way valve from bracket.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure that the hoses are not cracked or loose.

INTAKE (INDUCTION)

IN(H4SO)

Page

1. General Description 2
2. Air Cleaner Element 4
3. Air Cleaner Case 5
4. Air Intake Duct 6
5. Resonator Chamber 7

1. General Description

A: COMPONENT

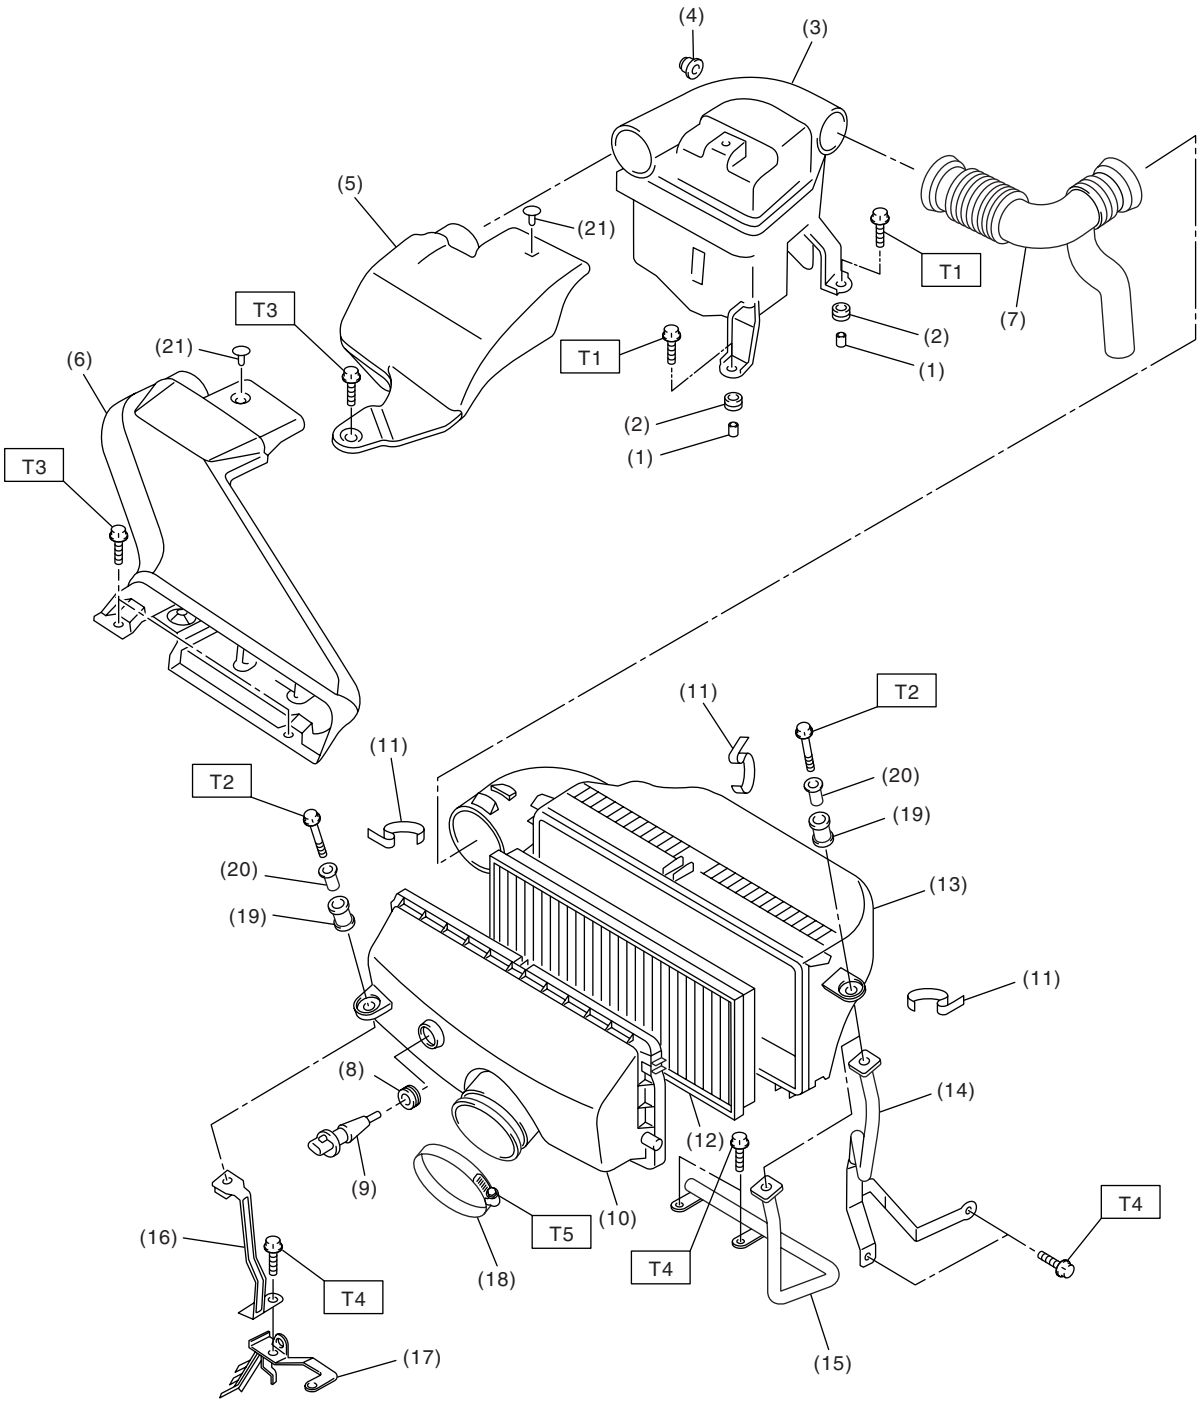

IN-00178

(1) Spacer
(2) Bush
(3) Resonator chamber
(4) Cushion
(5) Air intake duct A (1.6 L and 2.0 L)
(6) Air intake duct A (2.5 L)
(7) Air intake duct B
(8) Bush
(9) Intake air temperature sensor
(10) Air cleaner case A
(11) Clip
(12) Air cleaner element
(13) Air cleaner case B
(14) Stay LH (MT model)
(15) Stay LH (AT model)
(16) Stay RH
(17) Engine harness bracket
(18) Clamp
(19) Bush
(20) Spacer
(21) Clip

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	*33 (3.4, 24.6)*
T2:	*6.5 (0.66, 4.8)*
T3:	*7.5 (0.76, 5.5)*
T4:	*16 (1.6, 11.6)*
T5:	*3 (0.3, 2.2)*

B: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensor or units, be sure to disconnect the ground cable from battery.

2. Air Cleaner Element

A: REMOVAL

1) Remove the air intake duct from air cleaner case.
2) Remove the bolt (A) which secures the air cleaner case to stay.
3) Remove the clip (B) above the air cleaner case.

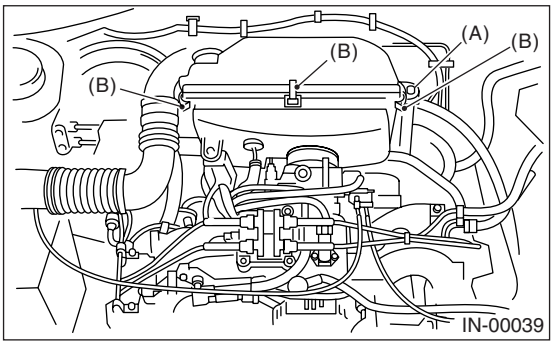

4) Remove the air cleaner element.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
• Fasten with a clip after inserting the lower tab of case.
• Refer to “COMPONENT” for tightening torque. <Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

Replace if excessively damaged or dirty.

3. Air Cleaner Case

A: REMOVAL

1) Disconnect the ground cable from battery.

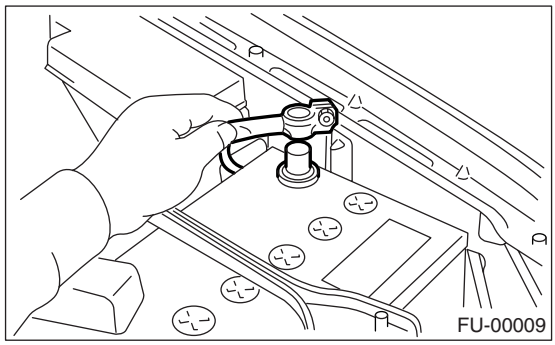

2) Disconnect the connector (A) of intake air temperature sensor.
3) Remove the bolt (B) which installs the air cleaner case to the stay.

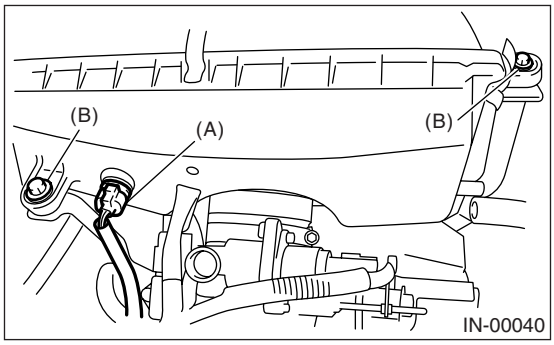

4) Disconnect the hoses and intake duct from the air cleaner case.
5) Loosen the clamp which connects the air cleaner case to throttle body.

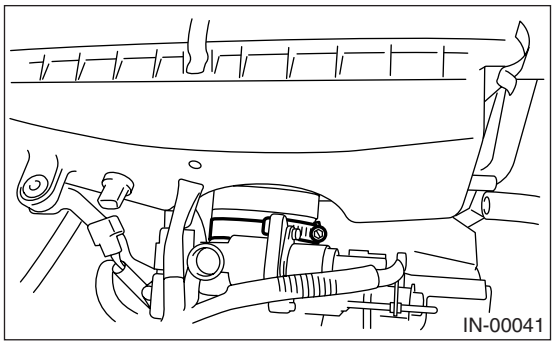

6) Remove the air cleaner case.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Refer to “COMPONENT” for tightening torque. <Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

Inspect for cracks and loose connections.

4. Air Intake Duct

A: REMOVAL

1) Remove the bolt (A) which installs the air intake duct A on front side of body.
2) Remove the clip (B) which connects the air intake duct A to resonator chamber.
3) Remove the air intake duct A.
4) Remove the air intake duct B from the resonator chamber and air cleaner case.

- 1.6 L and 2.0 L

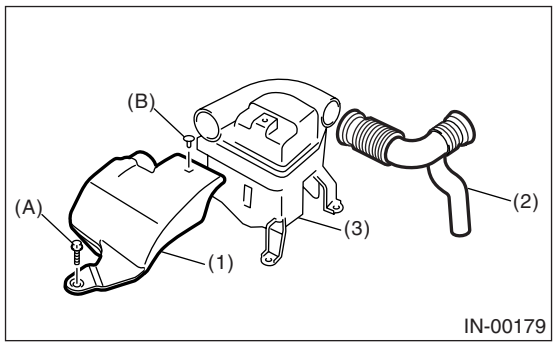

(1) Air intake duct A
(2) Air intake duct B
(3) Resonator chamber

- 2.5 L

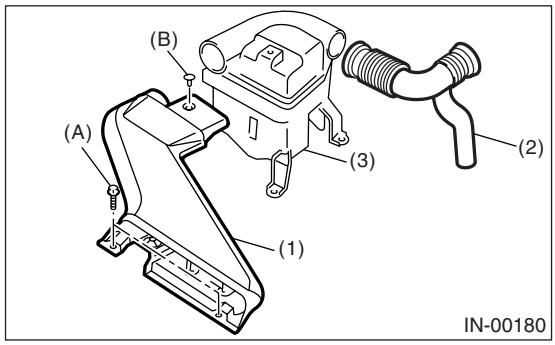

(1) Air intake duct A
(2) Air intake duct B
(3) Resonator chamber

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Refer to “COMPONENT” for tightening torque. <Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

1) Inspect for cracks and loose connections.
2) Inspect that no foreign objects are mixed in the air intake duct.

5. Resonator Chamber

A: REMOVAL

1) Remove the air intake duct. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
2) Remove the resonator chamber.

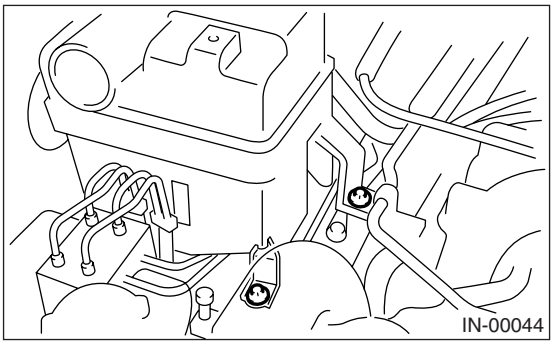

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Refer to “COMPONENT” for tightening torque. <Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

Inspect for cracks and loose connections.

MECHANICAL

ME(H4SO)

		Page
1.	General Description	2
2.	Compression	26
3.	Idle Speed	27
4.	Ignition Timing	28
5.	Intake Manifold Vacuum	29
6.	Engine Oil Pressure	30
7.	Fuel Pressure	31
8.	Valve Clearance	32
9.	Engine Assembly	35
10.	Engine Mounting	42
11.	Preparation for Overhaul	43
12.	V-belt	44
13.	Crankshaft Pulley	47
14.	Timing Belt Cover	49
15.	Timing Belt Assembly	50
16.	Camshaft Sprocket	55
17.	Crankshaft Sprocket	57
18.	Valve Rocker Assembly	58
19.	Camshaft	60
20.	Cylinder Head Assembly	64
21.	Cylinder Block	72
22.	Engine Trouble in General	92
23.	Engine Noise	97

1. General Description

A: SPECIFICATIONS

Engine	Model			1.6 L	2.0 L	2.5 L
	Type			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine		
	Valve arrangement			Belt driven, single over-head camshaft, 4-valve/cylinder		
	Bore × Stroke		mm (in)	87.9 × 65.8 (3.46 × 2.591)	92 × 75 (3.62 × 2.95)	99.5 × 79.0 (3.917 × 3.110)
	Displacement		cm^3 (cu in)	1,597 (97.45)	1,994 (121.67)	2,457 (150)
	Compression ratio			10.0		
	Compression pressure (at 350 rpm)		kPa (kg/cm^2, psi)	1,020 — 1,275 (10.4 — 13.0, 148 — 185)		
	Number of piston rings			Pressure ring: 2, Oil ring: 1		
	Intake valve timing	Opening		10° BTDC	4° BTDC	1° BTDC
		Closing		46° ABDC	48° ABDC	51° ABDC
	Exhaust valve timing	Opening		42° BBDC	48° BBDC	50° BBDC
		Closing		10° ATDC	4° ATDC	6° ATDC
	Valve clearance	Intake	mm (in)	0.20±0.02 (0.0079±0.0008)		
		Exhaust	mm (in)	0.25±0.02 (0.0098±0.0008)		
	Idling speed [At neutral position on MT, or “P” or “N” position on AT]		rpm	With OBD: 650±100 (No load) 850±100 (A/C ON) Without OBD: 700±100 (No load) 850±100 (A/C ON)		650±100 (No load) 850±100 (A/C ON)
	Firing order			1 → 3 → 2 → 4		
	Ignition timing		BTDC/rpm	With OBD: 5°±10°/650 Without OBD: 5°±10°/700	With OBD: 10°±10°/650 Without OBD: 10°±10°/700	10°±10°/650

NOTE:
STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter US: Undersize OS: Oversize

Belt tensioner adjuster	Protrusion of adjuster rod		5.2 — 6.2 mm (0.205 — 0.244 in)
Belt tensioner	Spacer O.D.		17.955 — 17.975 mm (0.7069 — 0.7077 in)
	Tensioner bush I.D.		18.00 — 18.08 mm (0.7087 — 0.7118 in)
	Clearance between spacer and bush	STD	0.025 — 0.125 mm (0.0010 — 0.0049 in)
		Limit	0.175 mm (0.0069 in)
	Side clearance of spacer	STD	0.20 — 0.55 mm (0.0079 — 0.0217 in)
		Limit	0.81 mm (0.0319 in)
Valve rocker arm	Clearance between shaft and arm	STD	0.020 — 0.054 mm (0.0008 — 0.0021 in)
		Limit	0.10 mm (0.0039 in)

Camshaft	Bend limit				0.025 mm (0.0010 in)
	Thrust clearance			STD	0.030 — 0.090 mm (0.0012 — 0.0035 in)
				Limit	0.10 mm (0.0039 in)
	Cam lobe height	1.6 L	Intake	STD	39.378 — 39.478 mm (1.5503 — 1.5542 in)
				Limit	39.278 mm (1.5464 in)
			Exhaust	STD	39.565 — 39.665 mm (1.5577 — 1.5616 in)
				Limit	39.465 mm (1.5537 in)
		2.0 L	Intake	STD	38.732 — 38.832 mm (1.5249 — 1.5288 in)
				Limit	38.632 mm (1.5209 in)
			Exhaust	STD	39.257 — 39.357 mm (1.5455 — 1.5495 in)
				Limit	39.157 mm (1.5416 in)
		2.5 L	Intake	STD	39.485 — 39.585 mm (1.5545 — 1.5585 in)
				Limit	39.385 mm (1.5506 in)
			Exhaust	STD	39.257 — 39.357 mm (1.5455 — 1.5495 in)
				Limit	39.157 mm (1.5416 in)
	Camshaft journal O.D.				31.928 — 31.945 mm (1.2570 — 1.2577 in)
	Camshaft journal hole I.D.				32.000 — 32.018 mm (1.2598 — 1.2605 in)
	Oil clearance			STD	0.055 — 0.090 mm (0.0022 — 0.0035 in)
				Limit	0.10 mm (0.0039 in)
Cylinder head	Surface warpage limit				0.05 mm (0.0020 in)
	Surface grinding limit				0.1 mm (0.004 in)
	Standard height				97.5 mm (3.84 in)
Valve seat	Refacing angle				90°
	Contacting width		Intake	STD	1.0 mm (0.039 in)
				Limit	1.7 mm (0.067 in)
			Exhaust	STD	1.5 mm (0.059 in)
				Limit	2.2 mm (0.087 in)
Valve guide	Inner diameter				6.000 — 6.012 mm (0.2362 — 0.2367 in)
	Protrusion above head			Intake	20.0 — 20.5 mm (0.787 — 0.807 in)
				Exhaust	16.5 — 17.0 mm (0.650 — 0.669 in)
Valve	Head edge thickness		Intake	STD	1.0 mm (0.039 in)
				Limit	0.6 mm (0.024 in)
			Exhaust	STD	1.2 mm (0.047 in)
				Limit	0.6 mm (0.024 in)
	Stem diameter			Intake	5.950 — 5.965 mm (0.2343 — 0.2348 in)
				Exhaust	5.945 — 5.960 mm (0.2341 — 0.2346 in)
	Stem oil clearance		STD	Intake	0.035 — 0.062 mm (0.0014 — 0.0024 in)
				Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)
			Limit	—	0.15 mm (0.0059 in)
	Overall length			Intake	120.6 mm (4.75 in)
				Exhaust	121.7 mm (4.79 in)
Valve spring	Free length				54.30 mm (2.1378 in)
	Squareness				2.5°, 2.4 mm (0.094 in)
	Tension/spring height			Set	214 — 246 N (22 — 25 kgf, 48 — 55 lb)/ 45.0 mm (1.772 in)
				Lift	526 — 582 N (54 — 59 kgf, 119 — 130 lb)/ 34.7 mm (1.366 in)

Cylinder block	Surface warpage limit (mating with cylinder head)				0.05 mm (0.0020 in)
	Surface grinding limit				0.1 mm (0.004 in)
	Standard height				201.0 mm (7.91 in)
	Cylinder bore	1.6 L	STD	A	87.905 — 87.915 mm (3.4608 — 3.4612 in)
				B	87.895 — 87.905 mm (3.4604 — 3.4608 in)
		2.0 L	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)
				B	91.995 — 92.005 mm (3.6218 — 3.6222 in)
		2.5 L	STD	A	99.505 — 99.515 mm (3.9175 — 3.9179 in)
				B	99.495 — 99.505 mm (3.9171 — 3.9175 in)
	Taper			STD	0.015 mm (0.0006 in)
				Limit	0.050 mm (0.0020 in)
	Out-of-roundness			STD	0.010 mm (0.0004 in)
				Limit	0.050 mm (0.0020 in)
	Piston clearance			STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
				Limit	0.050 mm (0.0020 in)
	Enlarging (boring) limit				0.5 mm (0.020 in)
Piston	Outer diameter	1.6 L	STD	A	87.885 — 87.895 mm (3.4600 — 3.4604 in)
				B	87.875 — 87.885 mm (3.4596 — 3.4600 in)
			0.25 mm (0.0098 in) OS		88.125 — 88.135 mm (3.4695 — 3.4699 in)
			0.50 mm (0.0197 in) OS		88.375 — 88.385 mm (3.4793 — 3.4797 in)
		2.0 L	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)
				B	91.975 — 91.985 mm (3.6211 — 3.6214 in)
			0.25 mm (0.0098 in) OS		92.225 — 92.235 mm (3.6309 — 3.6313 in)
			0.50 mm (0.0197 in) OS		92.475 — 92.485 mm (3.6407 — 3.6411 in)
		2.5 L	STD	A	99.485 — 99.495 mm (3.9167 — 3.9171 in)
				B	99.475 — 99.485 mm (3.9163 — 3.9167 in)
			0.25 mm (0.0098 in) OS		99.725 — 99.735 mm (3.9262 — 3.9266 in)
			0.50 mm (0.0197 in) OS		99.975 — 99.985 mm (3.9360 — 3.9364 in)
	Standard inner diameter of piston pin hole				23.000 — 23.006 mm (0.9055 — 0.9057 in)
Piston pin	Outer diameter				22.994 — 23.000 mm (0.9053 — 0.9055 in)
	Standard clearance between piston pin and hole in piston				0.004 — 0.008 mm (0.0002 — 0.0003 in)
	Degree of fit				Piston pin must be fitted into position with thumb at 20°C (68°F).
Piston ring	Piston ring gap	Top ring	STD		0.20 — 0.35 mm (0.0079 — 0.0138 in)
			Limit		1.0 mm (0.039 in)
		Second ring	STD	1.6 L, 2.5 L	0.35 — 0.50 mm (0.0138 — 0.0197 in)
				2.0 L	0.40 — 0.50 mm (0.0157 — 0.0197 in)
			Limit		1.0 mm (0.039 in)
		Oil ring	STD		0.20 — 0.50 mm (0.0079 — 0.0197 in)
			Limit		1.5 mm (0.059 in)
	Clearance between piston ring and piston ring groove	Top ring	STD		0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit		0.15 mm (0.0059 in)
		Second ring	STD		0.030 — 0.070 mm (0.0012 — 0.0028 in)
			Limit		0.15 mm (0.0059 in)

Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)
			Limit	0.4 mm (0.016 in)
Connecting rod bearing	Oil clearance	1.6 L 2.0 L	STD	0.010 — 0.038 mm (0.0004 — 0.0015 in)
			Limit	0.05 mm (0.0020 in)
		2.5 L	STD	0.020 — 0.046 mm (0.0008 — 0.0018 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion	1.6 L 2.0 L	STD	1.492 — 1.501 mm (0.0587 — 0.0591 in)
			0.03 mm (0.0012 in) US	1.510 — 1.513 mm (0.0594 — 0.0596 in)
			0.05 mm (0.0020 in) US	1.520 — 1.523 mm (0.0598 — 0.0600 in)
			0.25 mm (0.0098 in) US	1.620 — 1.623 mm (0.0638 — 0.0639 in)
		2.5 L	STD	1.490 — 1.502 mm (0.0587 — 0.0591 in)
			0.03 mm (0.0012 in) US	1.504 — 1.512 mm (0.0592 — 0.0595 in)
			0.05 mm (0.0020 in) US	1.514 — 1.522 mm (0.0596 — 0.0599 in)
			0.25 mm (0.0098 in) US	1.614 — 1.622 mm (0.0635 — 0.0639 in)
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)

Crankshaft	Bend limit			0.035 mm (0.0014 in)
	Crank pin and crank journal	Out-of-roundness		0.020 mm (0.0008 in) or less
		Grinding limit		0.250 mm (0.0098 in)
	Crank pin outer diameter	1.6 L	STD	47.984 — 48.000 mm (1.8891 — 1.8898 in)
			0.03 mm (0.0012 in) US	47.954 — 47.970 mm (1.8879 — 1.8886 in)
			0.05 mm (0.0020 in) US	47.934 — 47.950 mm (1.8872 — 1.8878 in)
			0.25 mm (0.0098 in) US	47.734 — 47.750 mm (1.8793 — 1.8799 in)
		2.0 L 2.5 L	STD	51.984 — 52.000 mm (2.0466 — 2.0472 in)
			0.03 mm (0.0012 in) US	51.954 — 51.970 mm (2.0454 — 2.0461 in)
			0.05 mm (0.0020 in) US	51.934 — 51.950 mm (2.0446 — 2.0453 in)
			0.25 mm (0.0098 in) US	51.734 — 51.750 mm (2.0368 — 2.0374 in)
	Crank journal outer diameter	#1, #3	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
	Oil clearance	#1	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#2	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#3	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#4	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#5	STD	0.010 — 0.031 mm (0.0004 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)

Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

B: COMPONENT

1. TIMING BELT

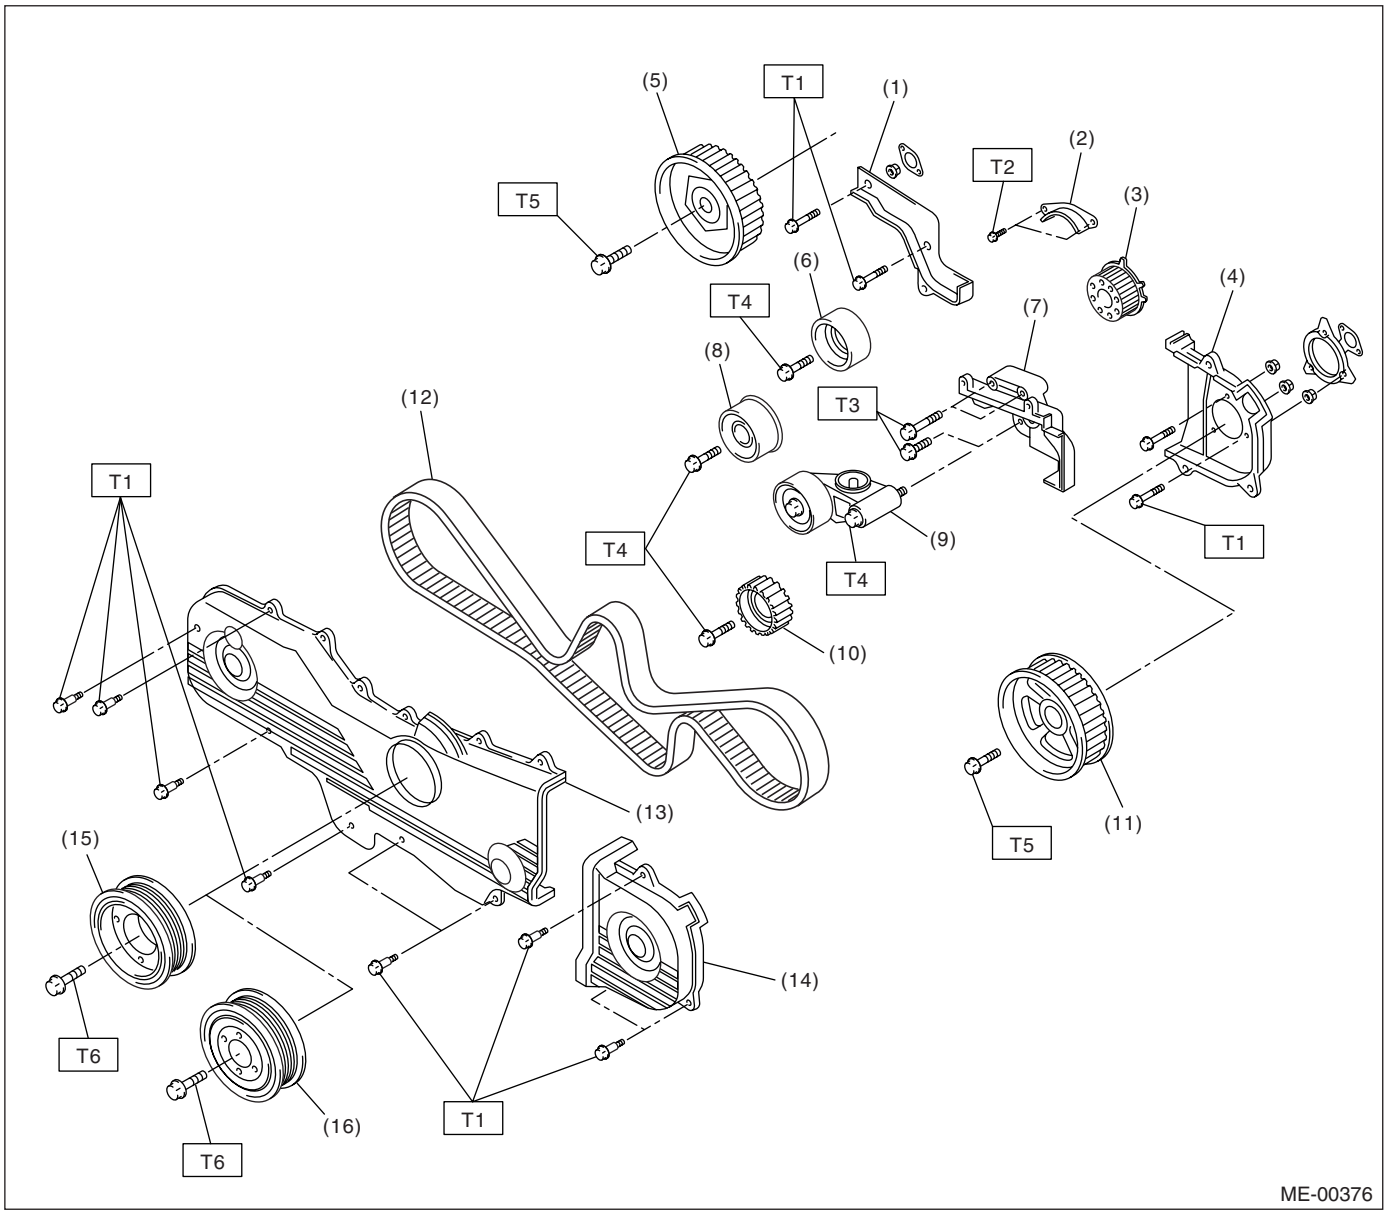

(1) Timing belt cover No. 2 (RH)
(2) Timing belt guide (MT model)
(3) Crankshaft sprocket
(4) Timing belt cover No. 2 (LH)
(5) Camshaft sprocket No. 1
(6) Belt idler (No. 1)
(7) Tensioner bracket
(8) Belt idler (No. 2)
(9) Automatic belt tension adjuster ASSY
(10) Belt idler No. 2
(11) Camshaft sprocket No. 2
(12) Timing belt
(13) Front timing belt cover
(14) Timing belt cover (LH)
(15) Crankshaft pulley (1.6 L and 2.0 L model)
(16) Crankshaft pulley (2.5 L model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5 (0.5, 3.6)
T2: 10 (1.0, 7.2)
T3: 25 (2.5, 18.1)
T4: 39 (4.0, 28.9)
T5: 78 (8.0, 57.9)
T6: <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>

2. CYLINDER HEAD AND CAMSHAFT

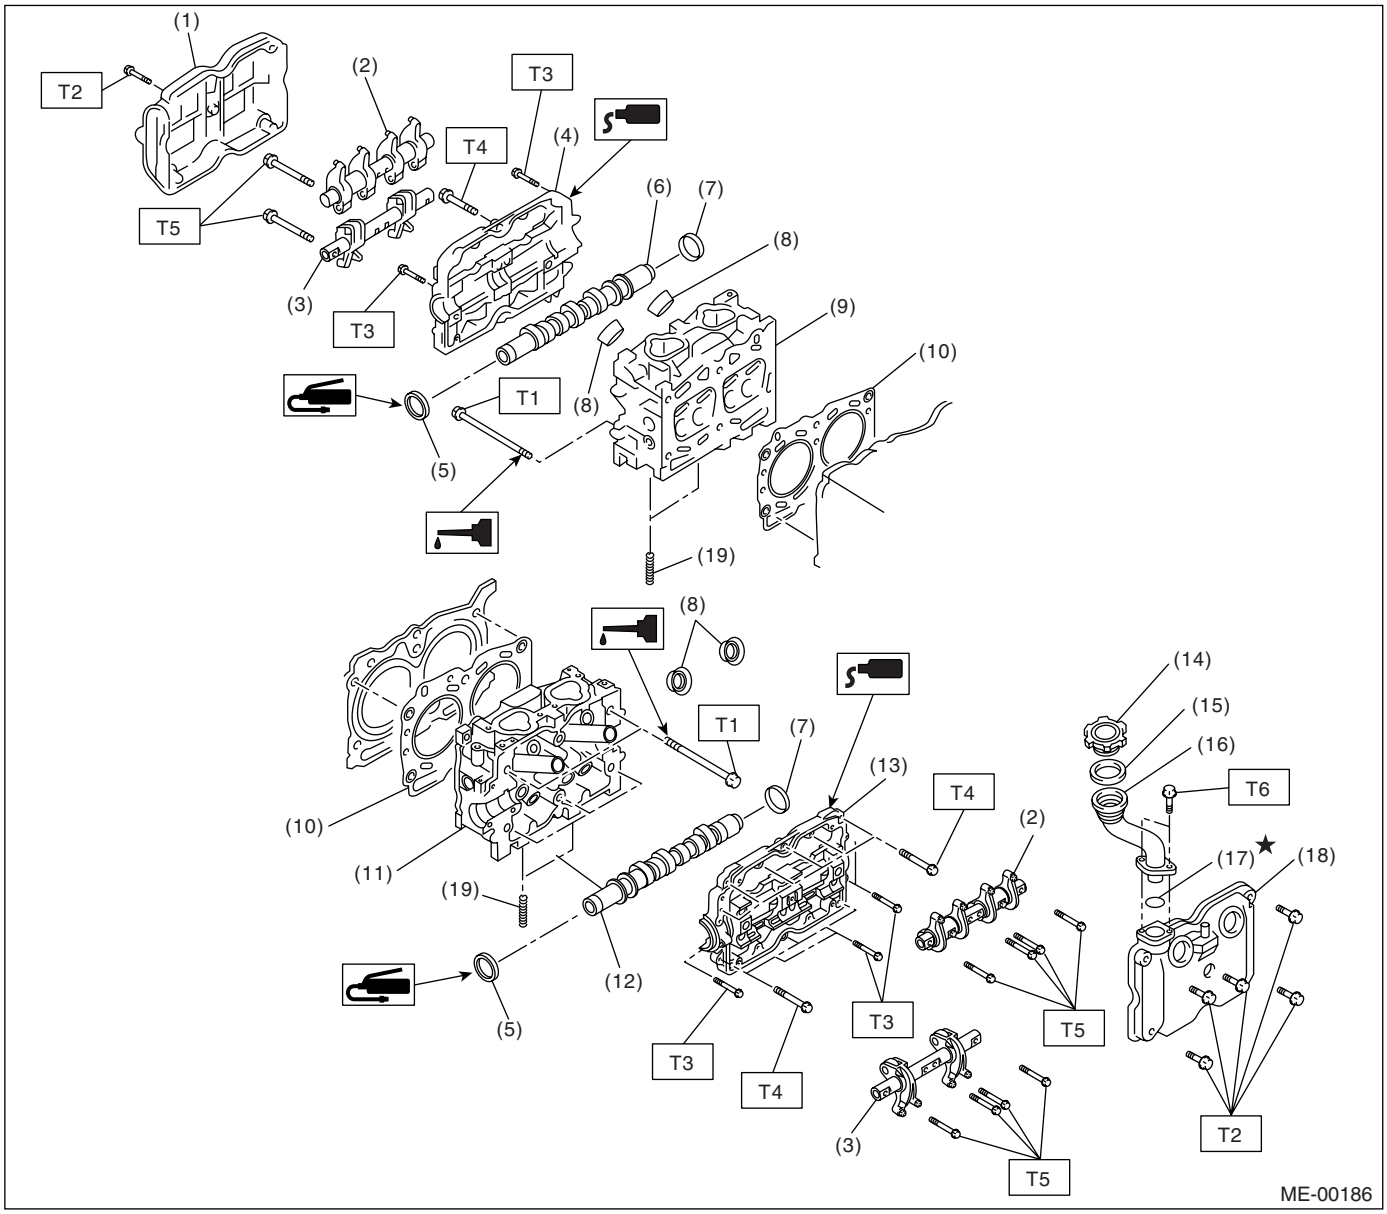

(1) Rocker cover (RH)
(2) Intake valve rocker ASSY
(3) Exhaust valve rocker ASSY
(4) Camshaft cap (RH)
(5) Oil seal
(6) Camshaft (RH)
(7) Plug
(8) Spark plug pipe gasket
(9) Cylinder head (RH)
(10) Cylinder head gasket
(11) Cylinder head (LH)
(12) Camshaft (LH)
(13) Camshaft cap (LH)
(14) Oil filler cap
(15) Gasket
(16) Oil filler duct
(17) O-ring
(18) Rocker cover (LH)
(19) Stud bolt

Tightening torque: N·m (kgf-m, ft-lb)

T1: <Ref. to ME(H4SO)-64, INSTALLATION, Cylinder Head Assembly.>
T2: 5 (0.5, 3.6)
T3: 10 (1.0, 7.2)
T4: 18 (1.8, 13.0)
T5: 25 (2.5, 18.1)
T6: 6.4 (0.65, 4.7)

3. VALVE ROCKER ASSEMBLY

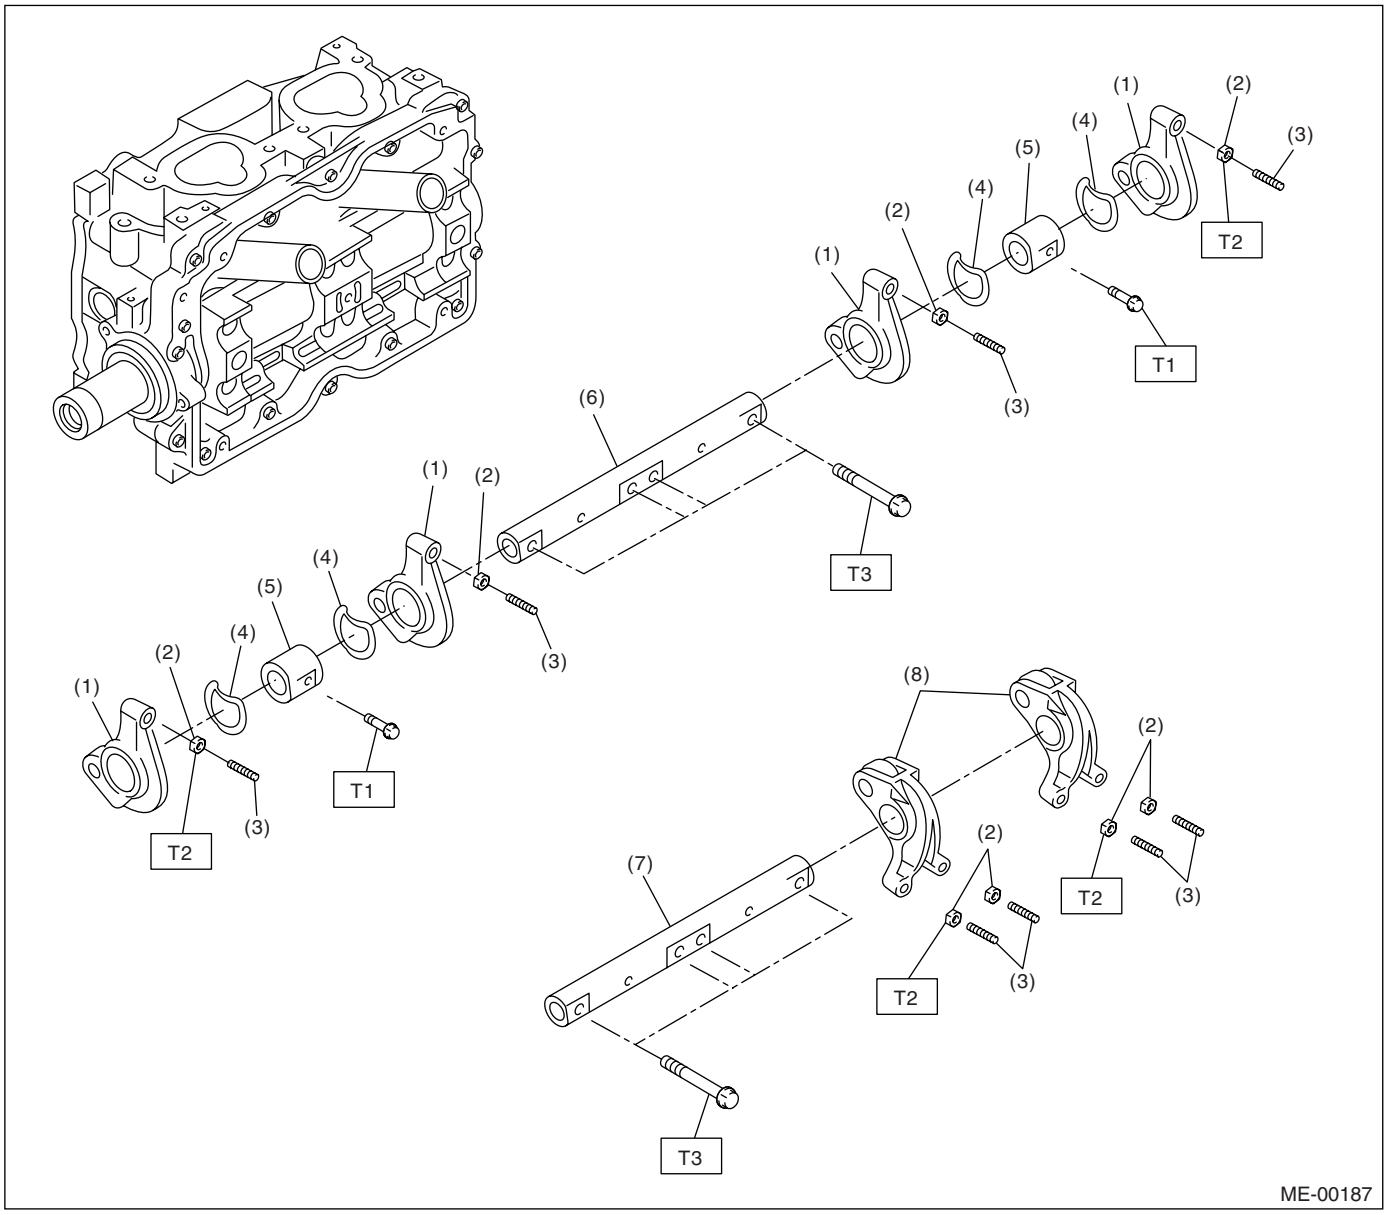

(1) Intake valve rocker arm
(2) Valve rocker nut
(3) Valve rocker adjust screw
(4) Spring
(5) Rocker shaft support
(6) Intake rocker shaft
(7) Exhaust rocker shaft
(8) Exhaust valve rocker arm

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5 (0.5, 3.6)
T2: 10 (1.0, 7.2)
T3: 25 (2.5, 18.1)

4. CYLINDER HEAD AND VALVE ASSEMBLY

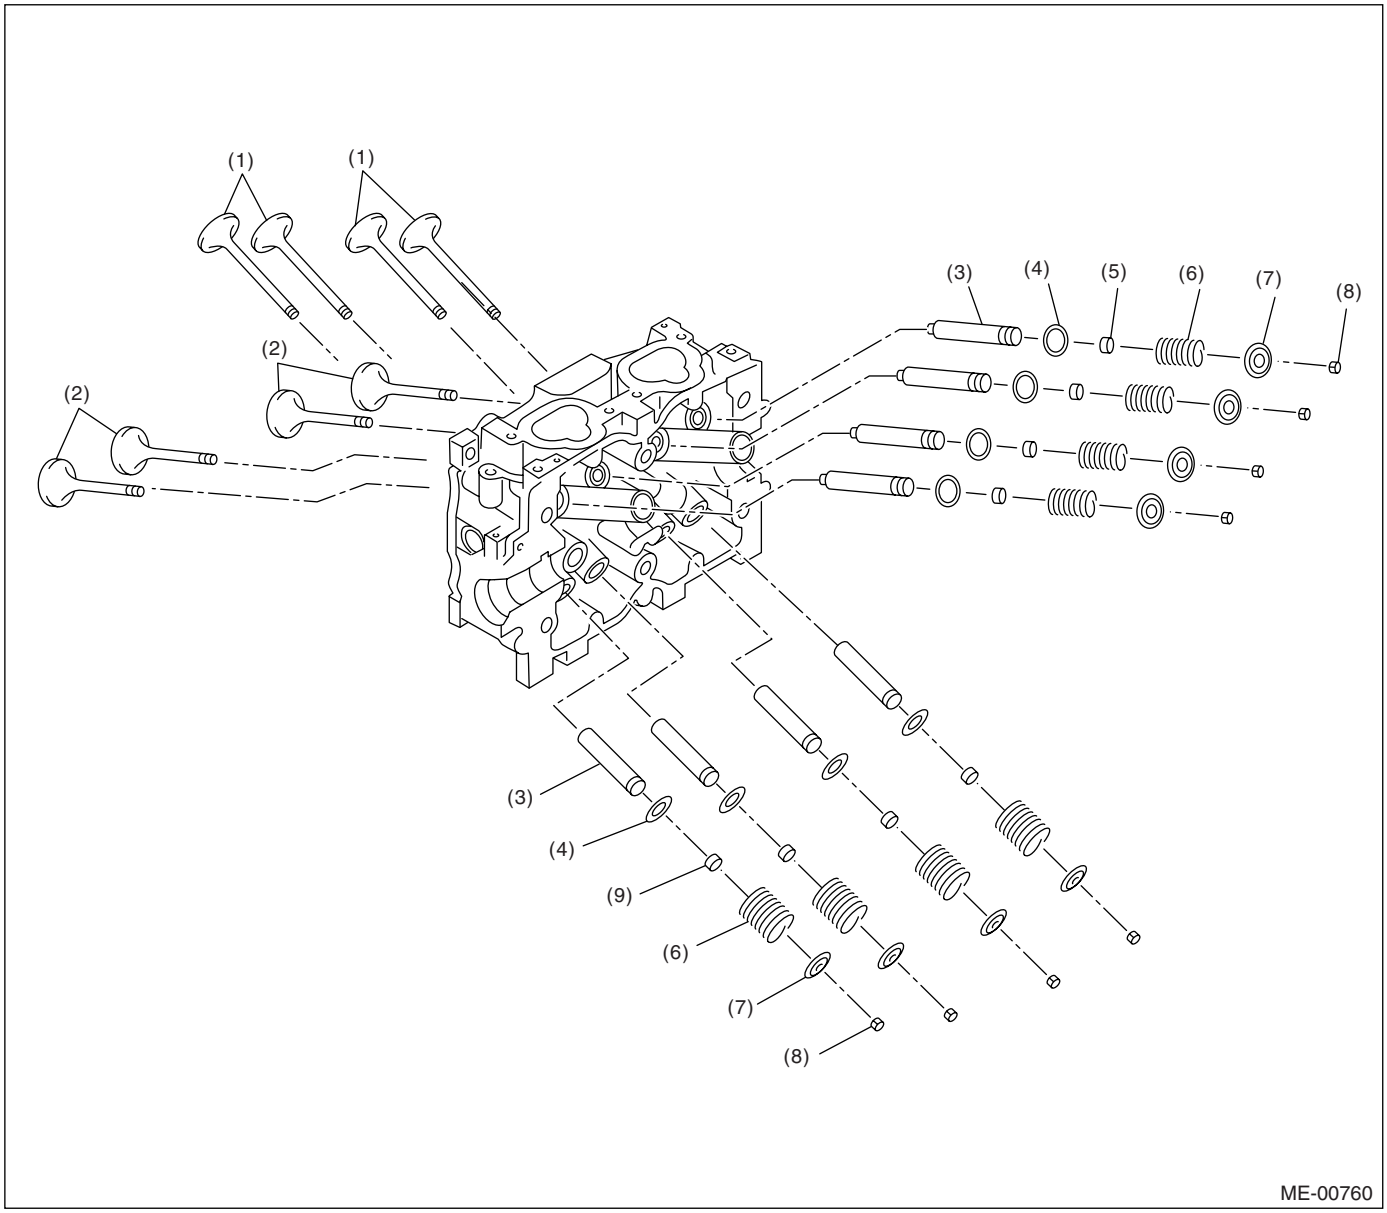

(1) Exhaust valve
(2) Intake valve
(3) Valve guide
(4) Valve spring seat
(5) Intake valve oil seal
(6) Valve spring
(7) Retainer
(8) Retainer key
(9) Exhaust valve oil seal

5. CYLINDER BLOCK

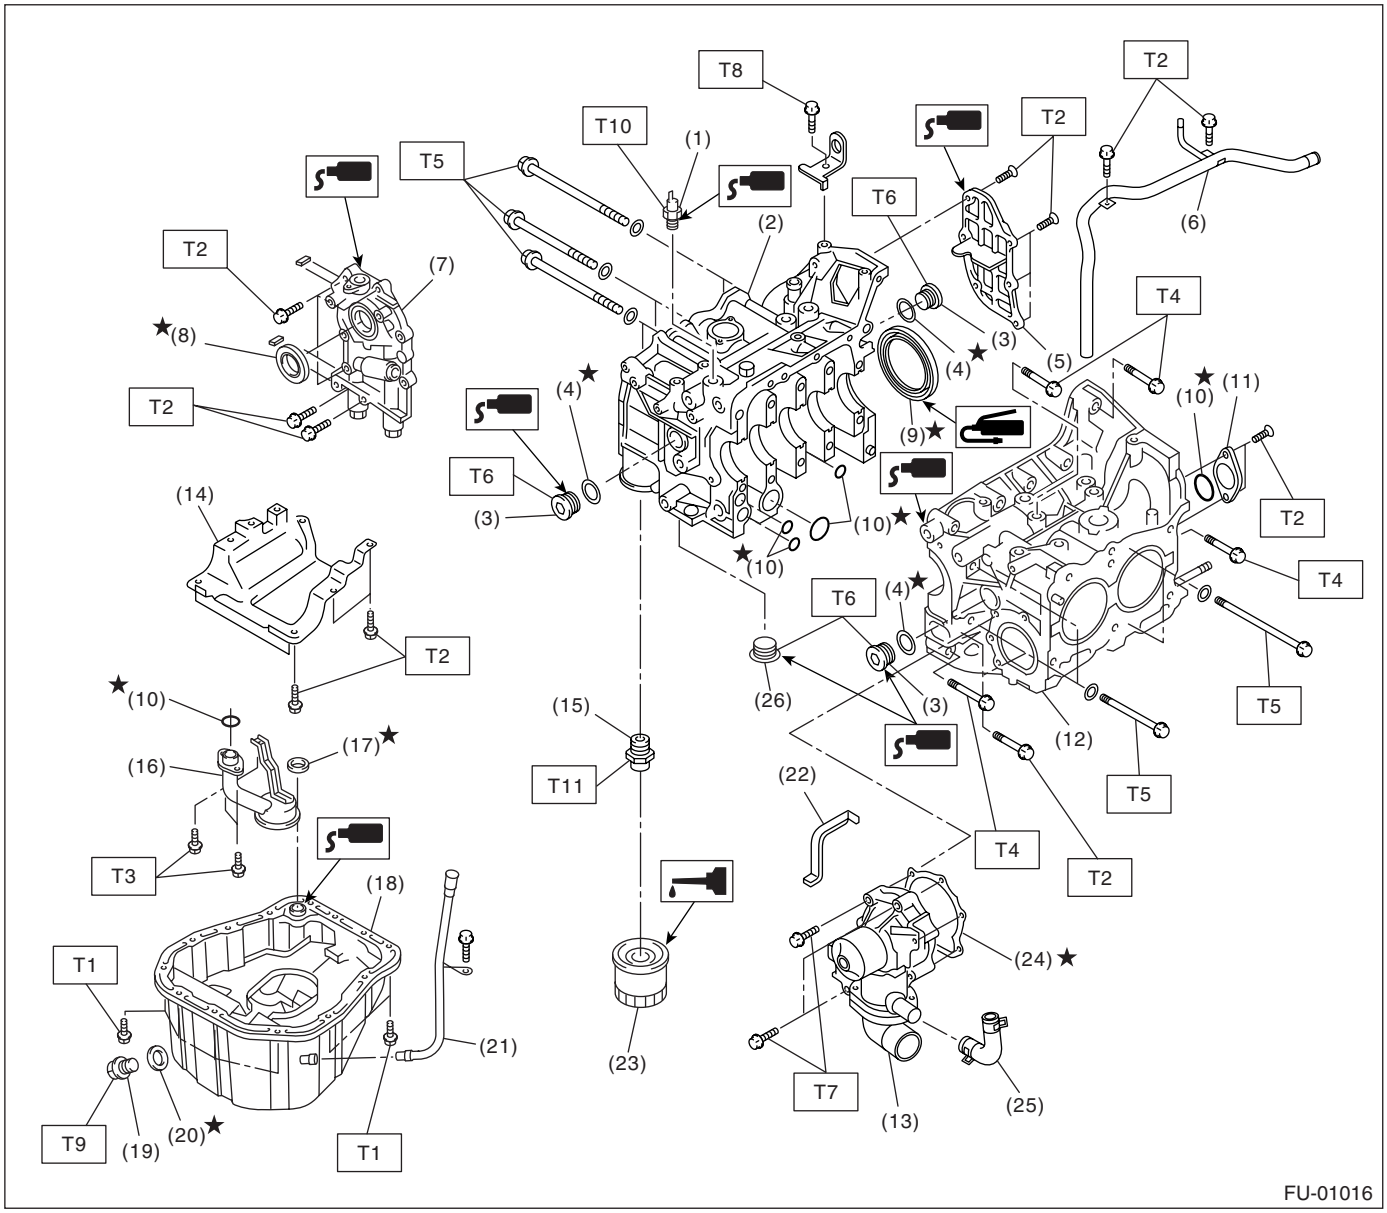

(1) Oil pressure switch
(2) Cylinder block (RH)
(3) Service hole plug
(4) Gasket
(5) Oil separator cover
(6) Water by-pass pipe
(7) Oil pump
(8) Front oil seal
(9) Rear oil seal
(10) O-ring
(11) Service hole cover
(12) Cylinder block (LH)
(13) Water pump
(14) Baffle plate
(15) Oil filter connector
(16) Oil strainer
(17) Gasket
(18) Oil pan
(19) Drain plug
(20) Metal gasket
(21) Oil level gauge guide
(22) Water pump sealing
(23) Oil filter
(24) Gasket
(25) Water pump hose
(26) Plug

Tightening torque: N·m (kgf-m, ft-lb)

T1: 5 (0.5, 3.6)
T2: 6.4 (0.65, 4.7)
T3: 10 (1.0, 7.2)
T4: 25 (2.5, 18.1)
T5: <Ref. to ME(H4SO)-76, INSTALLATION, Cylinder Block.>
T6: 70 (7.1, 50.6)
T7: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7)
T8: 16 (1.6, 11.6)
T9: 44 (4.5, 33)
T10: 25 (2.5, 18.1)
T11: 45 (4.6, 33.3)

6. CRANKSHAFT AND PISTON

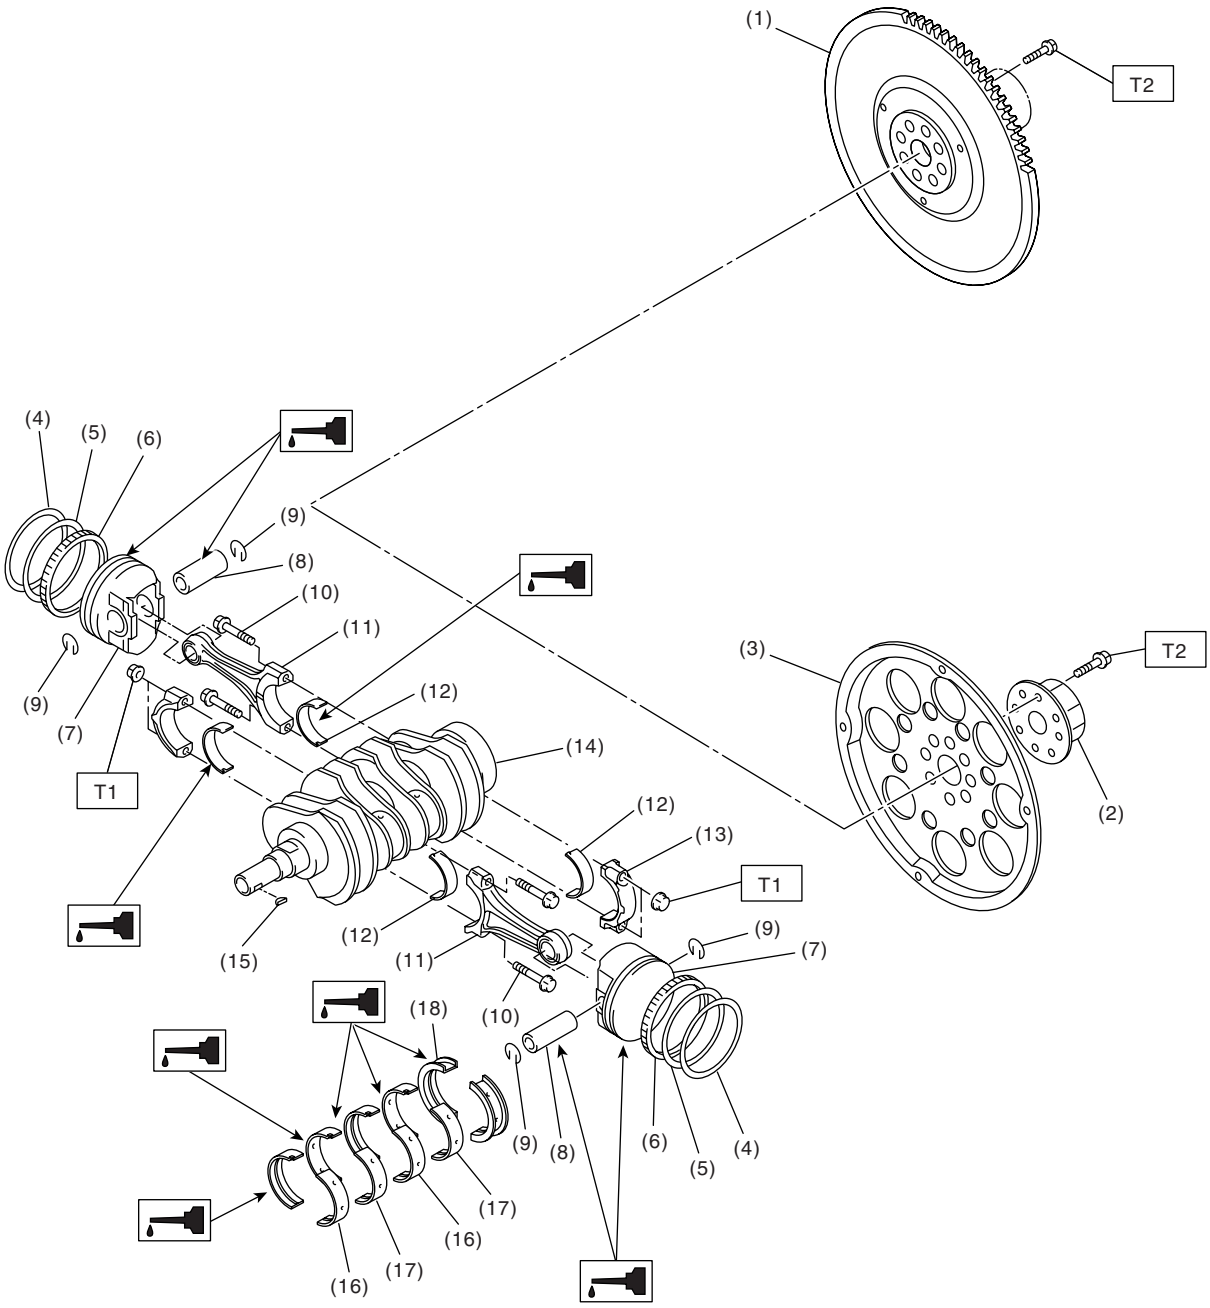

ME-00190

(1) Flywheel (MT model)
(2) Reinforcement (AT model)
(3) Drive plate (AT model)
(4) Top ring
(5) Second ring
(6) Oil ring
(7) Piston
(8) Piston pin
(9) Circlip
(10) Connecting rod bolt
(11) Connecting rod
(12) Connecting rod bearing
(13) Connecting rod cap
(14) Crankshaft
(15) Woodruff key
(16) Crankshaft bearing #1, #3
(17) Crankshaft bearing #2, #4
(18) Crankshaft bearing #5

Tightening torque: N·m (kgf-m, ft-lb)
T1: 45 (4.6, 33.3)
T2: 72 (7.3, 52.8)

7. ENGINE MOUNTING

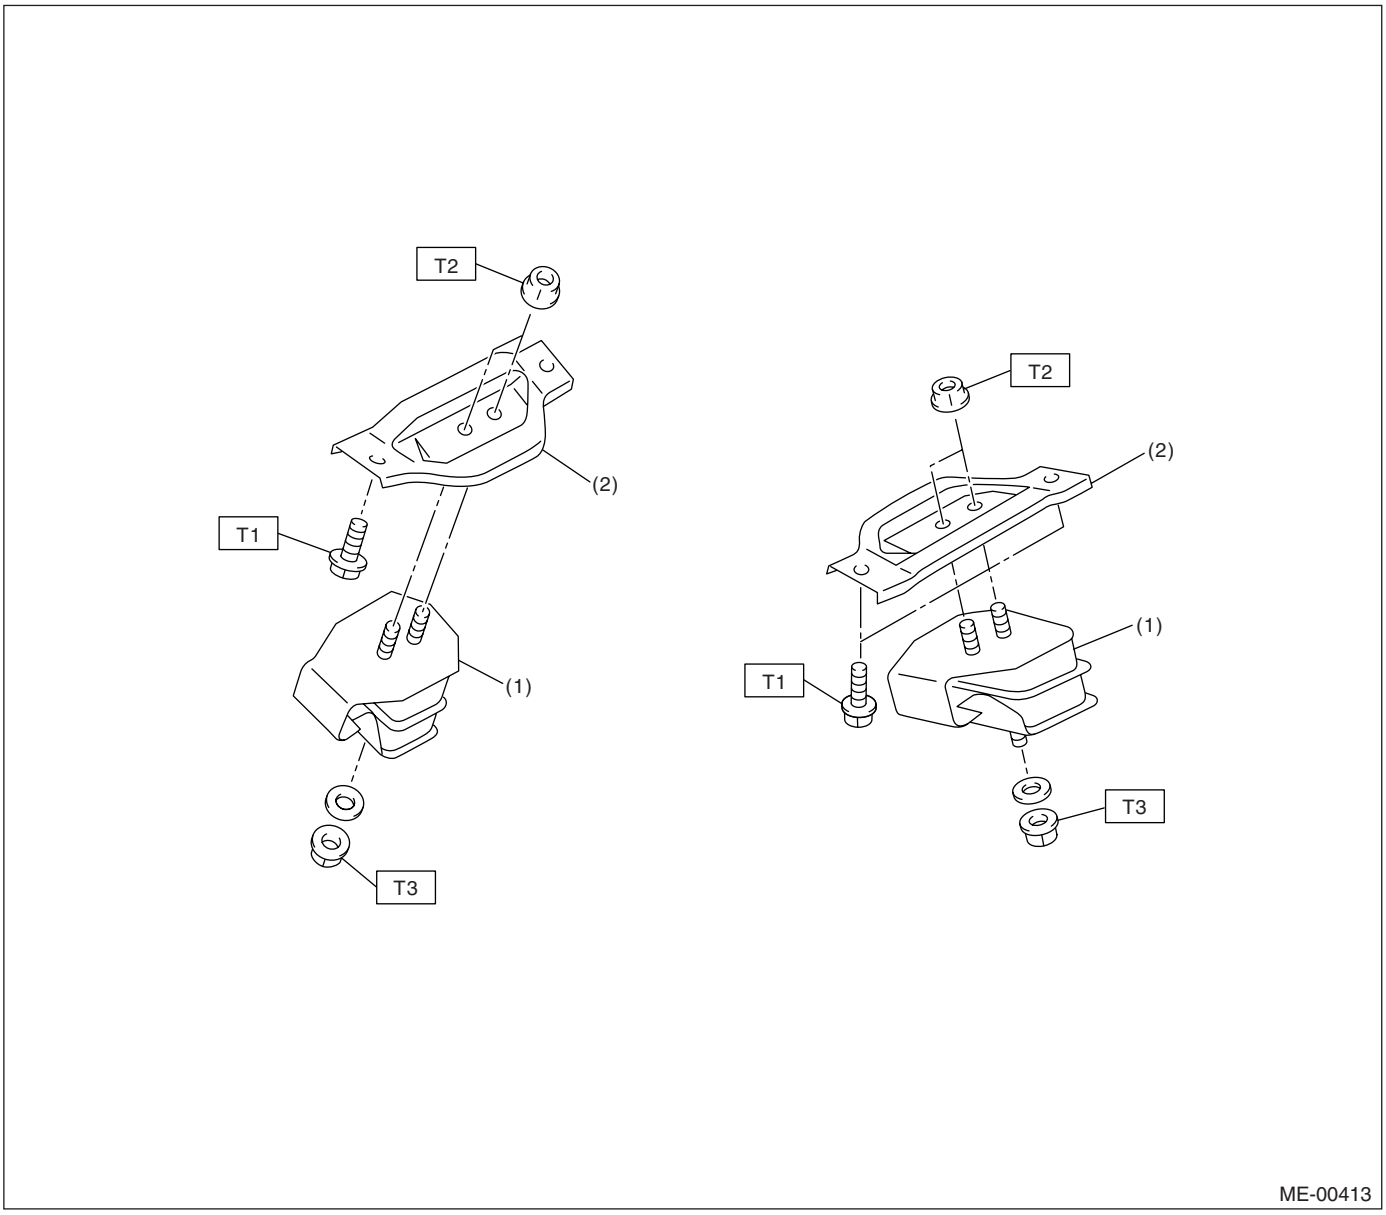

(1) Front cushion rubber
(2) Front engine mounting bracket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 35 (3.6, 25.8)
T2: 42 (4.3, 31.0)
T3: 85 (8.7, 63)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part in the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
• All parts should be thoroughly cleaned, paying special attention to the engine oil passages, pistons and bearings.
• Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
• Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
• All removed parts, if to be reused, should be reinstalled in the original positions and directions.
• Bolts, nuts and washers should be replaced with new ones as required.
• Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
• Remove or install engine in an area where chain hoists, lifting devices, etc. are available for ready use.
• Be sure not to damage coated surfaces of body panels with tools or stain seats and windows with coolant or oil. Place a cover over fenders, as required, for protection.
• Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
• Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
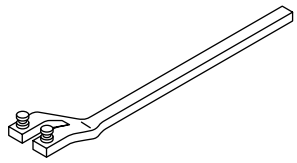 ST18231AA010	18231AA010	CAMSHAFT SPROCKET WRENCH	• Used for removing and installing camshaft sprocket. (LH side) • Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.
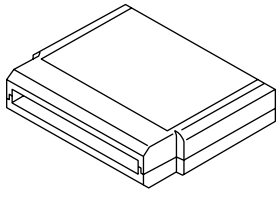 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
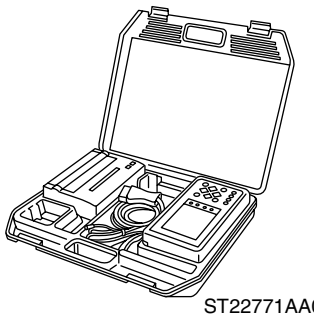 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)
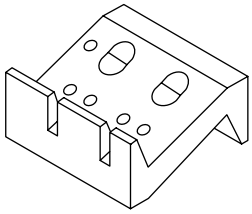 ST-498267800	498267800	CYLINDER HEAD TABLE	• Used for replacing valve guides. • Used for removing and installing valve springs.
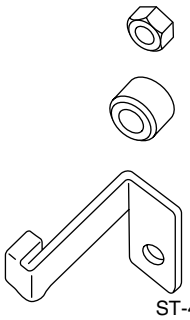 ST-498277200	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.
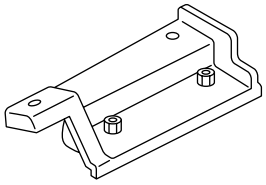 ST-498457000	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817000).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
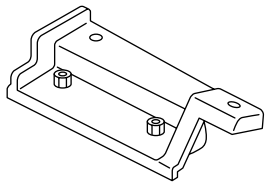 ST-498457100	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817000).
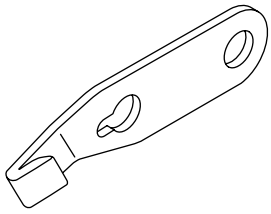 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of flywheel when loosening and tightening crankshaft pulley bolt, etc.
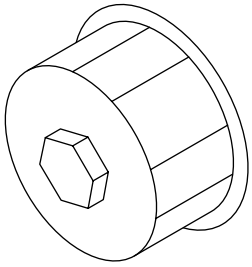 ST-498547000	498547000	OIL FILTER WRENCH	Used for removing and installing oil filter.
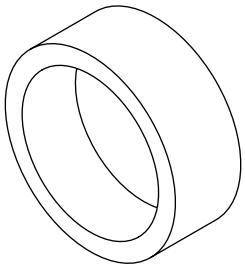 ST-498747000	498747000	PISTON GUIDE	Used for installing piston in cylinder. (1.6 L model)

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
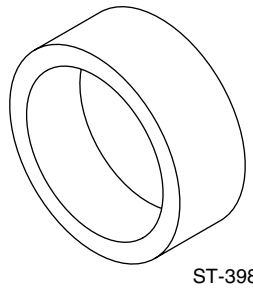 ST-398744300	398744300	PISTON GUIDE	Used for installing piston in cylinder. (2.0 L model)
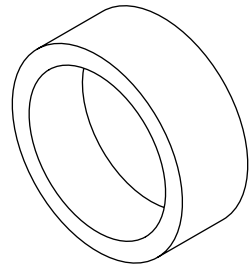 ST-498747300	498747300	PISTON GUIDE	Used for installing piston in cylinder. (2.5 L model)
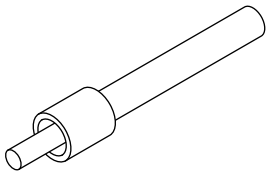 ST-498857100	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
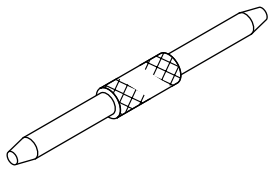 ST-499017100	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
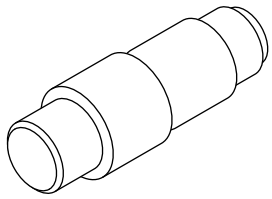 ST-499037100	499037100	CONNECTING ROD BUSHING REMOVER & INSTALLER	Used for removing and installing connecting rod bushing.
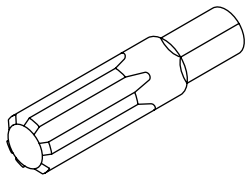 ST-499057000	499057000	TORX PLUS	Used for removing flywheel (Dual mass flywheel).
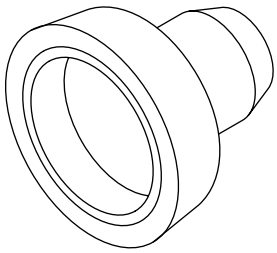 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
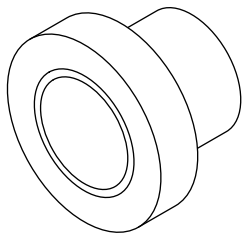 ST-499587500	499587500	OIL SEAL INSTALLER	• Used for installing camshaft oil seal. • Used with OIL SEAL GUIDE (499597000).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
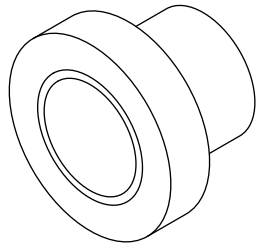 ST-499587700	499587700	CAMSHAFT OIL SEAL INSTALLER	Used for installing cylinder head plug.
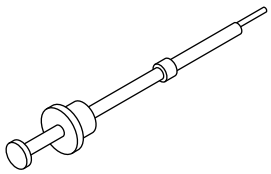 ST-499097700	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.
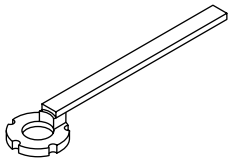 ST-499207400	499207400	CAMSHAFT SPROCKET WRENCH	Used for removing and installing camshaft sprocket. (RH side)
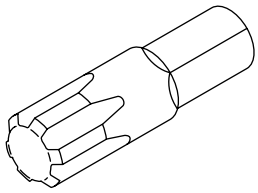 ST-499497000	499497000	TORX® PLUS	Used for removing and installing camshaft cap.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
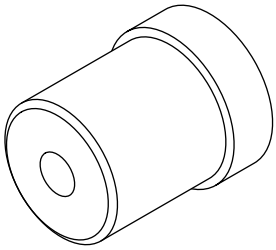 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
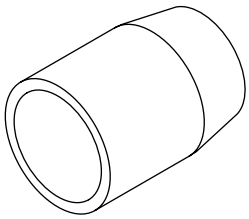 ST-499597000	499597000	OIL SEAL GUIDE	• Used for installing camshaft oil seal. • Used with CAMSHAFT OIL SEAL INSTALLER (499587500).
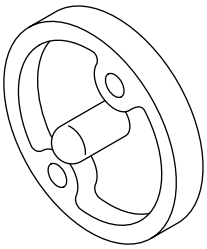 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).
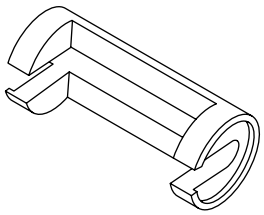 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
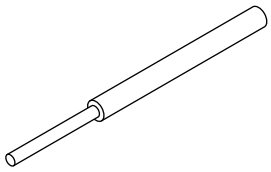 ST-499767200	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
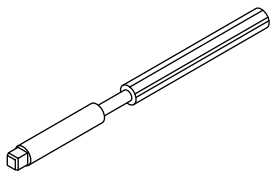 ST-499767400	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
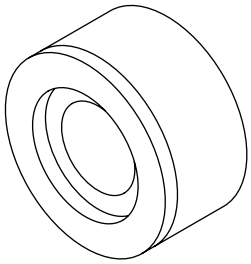 ST-499767700	499767700	VALVE GUIDE ADJUSTER	Used for installing valve guide. (Intake side)
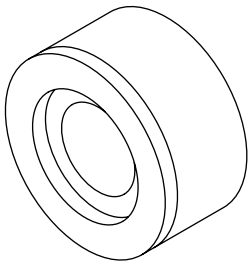 ST-499767800	499767800	VALVE GUIDE ADJUSTER	Used for installing valve guide. (Exhaust side)

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
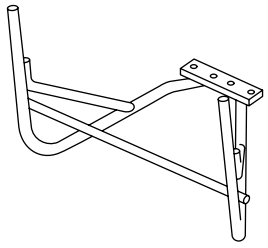 ST-499817100	499817100	ENGINE STAND	• Stand used for engine disassembly and assembly. • Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).
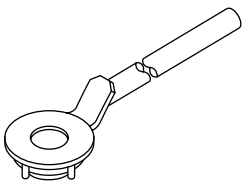 ST-499977400	499977400	CRANKSHAFT PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts. (1.6 L and 2.0 L model)
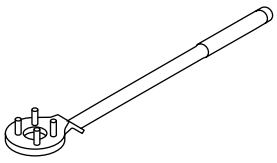 ST-499977100	499977100	CRANKSHAFT PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts. (2.5 L model)
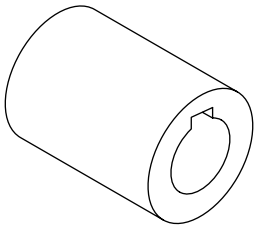 ST-499987500	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
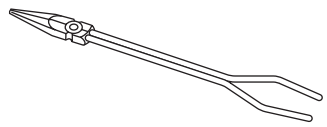 ST-499897200	499897200	PISTON CIR-CLIP PLIERS	Used for removing and installing piston pin circlip.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Compression Gauge	Used for measuring compression.
Tachometer (Secondary pick-up type)	Used for measuring idle speed.
Timing Light	Used for measuring ignition timing.

E: PROCEDURE

It is possible to conduct the following service procedures with engine on the vehicle, however, the procedures described in this section are based on the condition that the engine is removed from the vehicle.

- V-belt
- Timing Belt
- Valve Rocker Assembly
- Camshaft
- Cylinder Head

2. Compression

A: INSPECTION

CAUTION:
After warming up, engine becomes very hot. Be careful not to burn yourself during measurement.

1) After warming up the engine, turn the ignition switch to OFF.
2) Make sure that the battery is fully charged.
3) Lower the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.> or <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
4) Remove all the spark plugs. <Ref. to IG(H4SO)-5, REMOVAL, Spark Plug.>
5) Fully open the throttle valve.
6) Check the starter motor for satisfactory performance and operation.
7) Hold the compression gauge tight against spark plug hole.

NOTE:
When using a screw-in type compression gauge, the screw (put into cylinder head spark plug hole) should be less than 18 mm (0.71 in) long.

8) Crank the engine by means of starter motor, and then read the maximum value on the gauge when the pointer is steady.

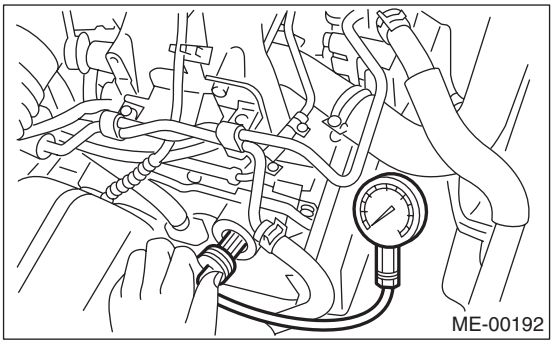

9) Perform at least two measurements per cylinder, and make sure that the values are correct.

Compression (350 rpm and fully open throttle):
Standard;
1,275 kPa (13.0 kgf/cm^2, 185 psi)
Limit;
1,020 kPa (10.4 kgf/cm^2, 148 psi)
Difference between cylinders;
49 kPa (0.5 kgf/cm^2, 7 psi), or less

3. Idle Speed

A: INSPECTION

1) Before checking idle speed, check the following:
   (1) Ensure the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and the hoses are connected properly.
   (2) Ensure the malfunction indicator light does not illuminate.
2) Warm up the engine.
3) Stop the engine, and then turn the ignition switch to OFF.
4) When using the SUBARU SELECT MONITOR, refer to the following. <Ref. to ME(H4SO)-16, SPECIAL TOOLS, PREPARATION TOOL, General Description.>
   (1) Insert the cartridge to SUBARU SELECT MONITOR.
   (2) Connect the SUBARU SELECT MONITOR to data link connector.

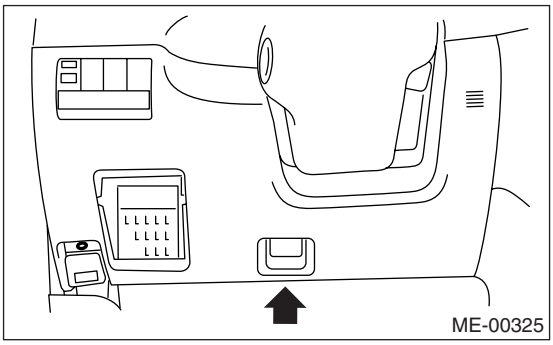

   (3) Turn the ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.
   (4) Select the {2. Each System Check} in Main Menu.
   (5) Select the {Engine Control System} in Selection Menu.
   (6) Select the {1. Current Data Display & Save} in Engine Control System Diagnosis.
   (7) Select the {1.12 Data Display} in Data Display Menu.
   (8) Start the engine, and then read the engine idle speed.
5) When using the tachometer (Secondary pick-up type).
   (1) Attach the pick-up clip to No. 1 cylinder spark plug cord.
   (2) Start the engine, and then read the engine idle speed.

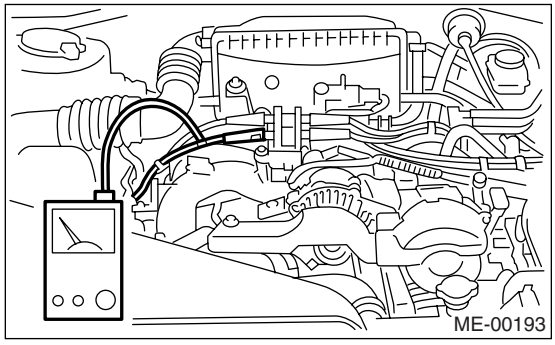

NOTE:
• When using the OBD-II general scan tool, carefully read its operation manual.
• This ignition system provides simultaneous ignition for #1 and #2 plugs. It must be noted that some tachometers may register twice that of actual engine speed.

6) Check the idle speed when unloaded. (With headlights, heater fan, rear defroster, radiator fan, air conditioning, etc. OFF)

Idle speed [No load and gears in neutral (MT model), or N or P (AT model) range]:
1.6 L and 2.0 L model:
650±100 rpm (With OBD)
700±100 rpm (Without OBD)
2.5 L model:
650±100 rpm

7) Check the idle speed when loaded. (Turn the air conditioning switch to “ON” and operate the compressor for at least 1 minute before measurement.)

Idle speed [A/C “ON” and gears in neutral (MT model) or N or P (AT model) range]:
850±100 rpm

NOTE:
Idle speed can not be adjusted manually, because the idle speed is automatically adjusted.
If the specified idle speed can not be maintained, refer to General On-board Diagnosis Table under “Engine Control System”. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.>

4. Ignition Timing

A: INSPECTION

CAUTION:
After warming up, engine becomes very hot. Be careful not to burn yourself during measurement.

1) Warm up the engine.
2) To check the ignition timing, connect a timing light to #1 cylinder spark plug cord, and illuminate the timing mark with timing light.
3) Start the engine at idle speed and check the ignition timing.

Ignition timing [BTDC/rpm]:
- ***1.6 L model:***
  - ***With OBD: 5°±10°/650***
  - ***Without OBD: 5°±10°/700***
- ***2.0 L model:***
  - ***With OBD: 10°±10°/650***
  - ***Without OBD: 10°±10°/700***
- ***2.5 L model:***
  - ***10°±10°/650***

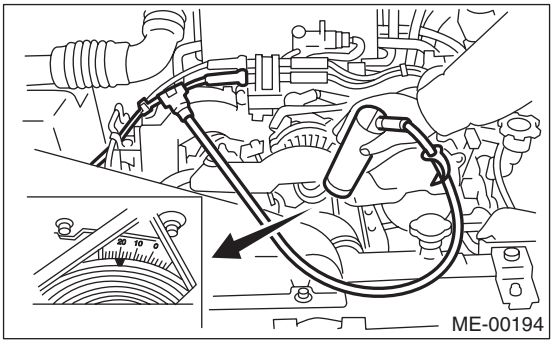

If the timing is not correct, check the ignition control system.
Refer to Engine Control System. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.>

5. Intake Manifold Vacuum

A: INSPECTION

1) Warm up the engine.
2) Disconnect the brake vacuum hose, and then install the vacuum gauge to hose fitting on manifold.
3) Keep the engine at idle speed, and then read the vacuum gauge indication.
By observing the gauge needle movement, the internal condition of engine can be diagnosed as described below.

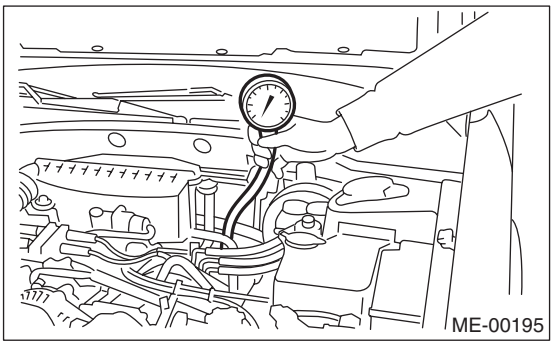

Vacuum pressure (at idling, A/C "OFF"):
Less than −60.0 kPa (−450 mmHg, −17.72 inHg)

Diagnosis of engine condition by measurement of manifold vacuum	
Vacuum gauge indication	Possible engine condition
1. Needle is steady but lower than normal position. This tendency becomes more evident as engine temperature rises.	Leakage around intake manifold gasket or disconnection or damaged vacuum hose
2. When engine speed is reduced slowly from higher speed, needle stops temporarily when it is lowering or becomes steady above normal position.	Back pressure too high, or exhaust system clogged
3. Needle intermittently drops to position lower than normal position.	Leakage around cylinder
4. Needle drops suddenly and intermittently from normal position.	Sticky valves
5. When engine speed is gradually increased, needle begins to vibrate rapidly at certain speed, and then vibration increases as engine speed increases.	Weak or broken valve springs
6. Needle vibrates above and below normal position in narrow range.	Defective ignition system

6. Engine Oil Pressure

A: INSPECTION

1) Disconnect the ground cable from battery.

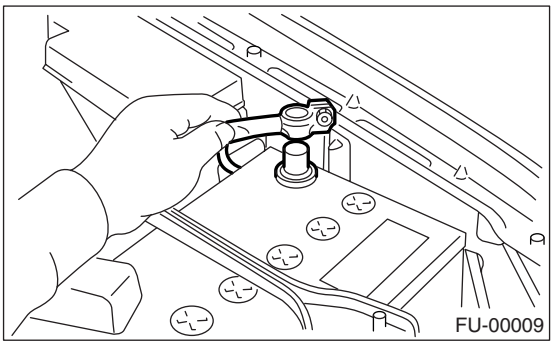

2) Remove the generator from bracket. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>
3) Disconnect the connector from oil pressure switch.
4) Remove the oil pressure switch from engine cylinder block. <Ref. to LU(H4SO)-18, REMOVAL, Oil Pressure Switch.>
5) Connect the oil pressure gauge hose to cylinder block.
6) Connect the battery ground cable to battery.

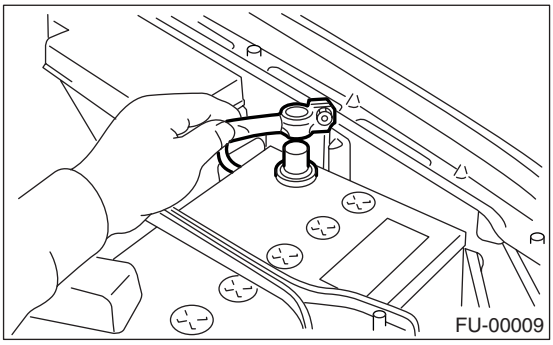

7) Start the engine, and then measure the oil pressure.

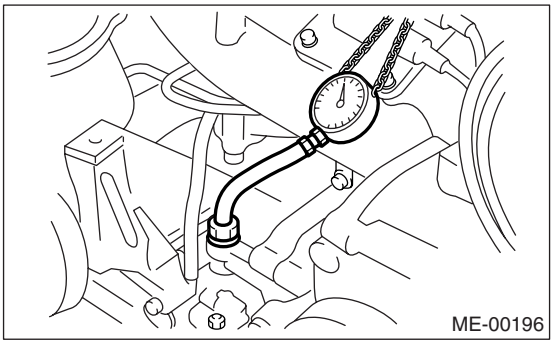

Oil pressure:
88 kPa (0.9 kg/cm^2, 13 psi) or more at 800 rpm
294 kPa (3.0 kg/cm^2, 43 psi) or more at 5,000 rpm

CAUTION:
• If the oil pressure is out of specification, check the oil pump, oil filter and lubrication line. <Ref. to LU(H4SO)-20, INSPECTION, Engine Lubrication System Trouble in General.>
• If the oil pressure warning light is turned ON and oil pressure is in specification, replace the oil pressure switch. <Ref. to LU(H4SO)-20, INSPECTION, Engine Lubrication System Trouble in General.>

NOTE:
The specified data is based on an engine oil temperature of 80°C (176°F).

8) After measuring the oil pressure, install the oil pressure switch. <Ref. to LU(H4SO)-18, INSTALLATION, Oil Pressure Switch.>

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

9) Install the generator and V-belt in the reverse order of removal, and then adjust the V-belt deflection. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

7. Fuel Pressure

A: INSPECTION

WARNING:
Before removing the fuel pressure gauge, lower the fuel pressure.

NOTE:
If out of specification, check or replace the pressure regulator and pressure regulator vacuum hose.

1) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel flap lid, and then remove the fuel filler cap.
3) Disconnect the fuel delivery hoses from fuel damper, and then connect the fuel pressure gauge.

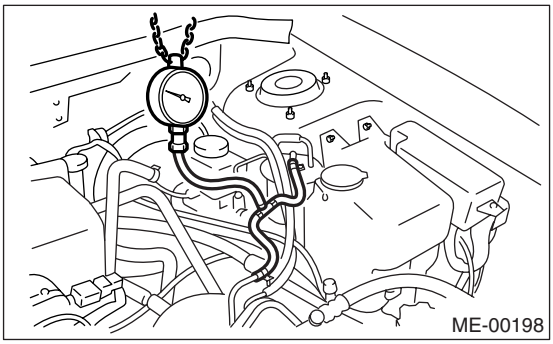

4) Connect the connector of fuel pump relay.

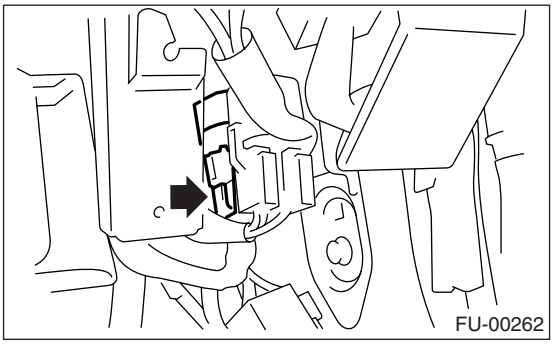

5) Start the engine.
6) Measure the fuel pressure while disconnecting the pressure regulator vacuum hose from intake manifold.

Fuel pressure:
Standard; 284 — 314 kPa (2.9 — 3.2 kg/cm^2, 41 — 46 psi)

7) After connecting the pressure regulator vacuum hose, measure the fuel pressure.

Fuel pressure:
Standard; 206 — 235 kPa (2.1 — 2.4 kg/cm^2, 30 — 34 psi)

NOTE:
The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm^2, 1 to 3 psi) higher than standard values during high-altitude operations.

8. Valve Clearance

A: INSPECTION

NOTE:
Inspection and adjustment of the valve clearance should be performed while engine is cold.

1) Set the vehicle on a lift.
2) Lift-up the vehicle.
3) Remove the under cover.
4) Lower the vehicle.
5) Disconnect the ground cable from battery.

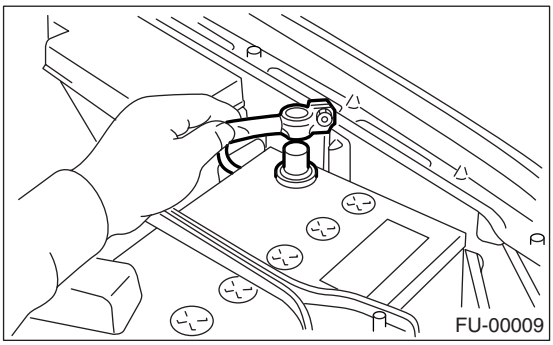

6) Remove the timing belt cover (LH).

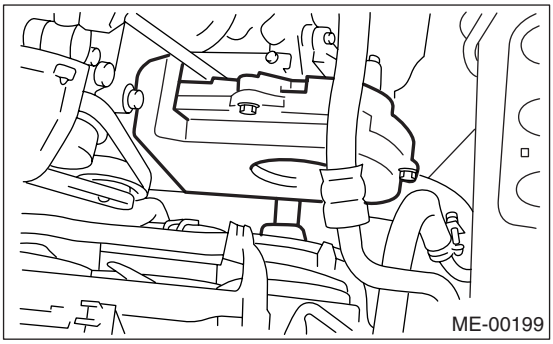

7) When inspecting the #1 and #3 cylinders;
   (1) Disconnect the spark plug cords from spark plugs RH side. <Ref. to IG(H4SO)-5, RH SIDE, REMOVAL, Spark Plug.>
   (2) Disconnect the PCV hose from rocker cover (RH).
   (3) Remove the bolts, and then remove the rocker cover (RH).
8) When inspecting the #2 and #4 cylinders;
   (1) Disconnect the spark plug cords from spark plugs (LH Side). <Ref. to IG(H4SO)-5, LH SIDE, REMOVAL, Spark Plug.>
   (2) Disconnect the PCV hose from rocker cover (LH).
   (3) Remove the bolts, and then remove the rocker cover (LH).
9) Set the #1 cylinder piston to top dead center of compression stroke by rotating crankshaft pulley clockwise using a socket wrench.

NOTE:
When arrow mark (A) on the camshaft sprocket (LH) comes exactly to the top, #1 cylinder piston is brought to the top dead center of compression stroke.

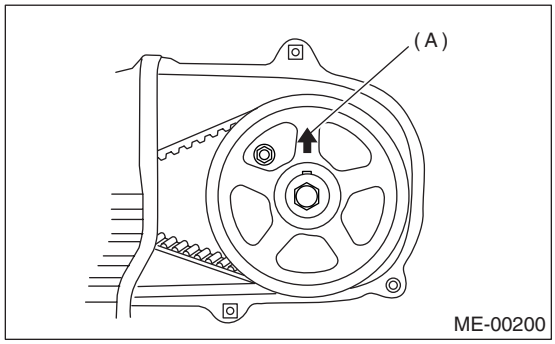

10) Measure the #1 cylinder valve clearance by using thickness gauge.

CAUTION:
• Insert the thickness gauge (A) in as horizontal a direction as possible with respect to the valve stem end face.
• Measure the exhaust valve clearances while lifting up the vehicle.

Valve clearance:
Intake;
0.20±0.02 mm (0.0079±0.0008 in)
Exhaust;
0.25±0.02 mm (0.0098±0.0008 in)

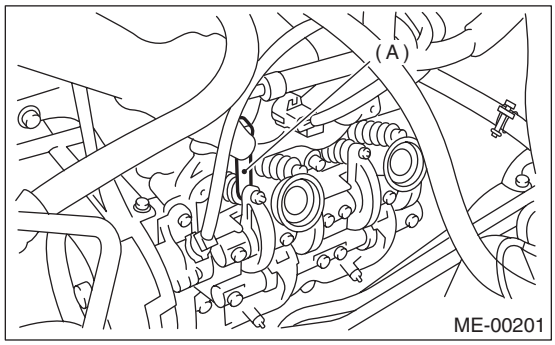

11) If necessary, adjust the valve clearance. <Ref. to ME(H4SO)-33, ADJUSTMENT, Valve Clearance.>

12) Similar to measurement procedures used for #1 cylinder, measure the cylinder valve clearances in the following sequence: #3, #2 and #4 cylinder.

NOTE:
• Be sure to set the cylinder pistons to their respective top dead centers on compression stroke before measuring valve clearances.
• To set each cylinder piston to its top dead center on compression stroke in the following sequence: #3, #2 and #4 cylinder, turn the crankshaft pulley clockwise by every 180° at starting with #1 cylinder piston being on top dead center on compression stroke.

13) After inspection, install the related parts in the reverse order of removal.

B: ADJUSTMENT

NOTE:
Adjustment of the valve clearance should be performed while engine is cold.

1) Set the #1 cylinder piston to top dead center of compression stroke by rotating crankshaft pulley clockwise using socket wrench.

NOTE:
When arrow mark (A) on the camshaft sprocket (LH) comes exactly to the top, #1 cylinder piston is brought to the top dead center of compression stroke.

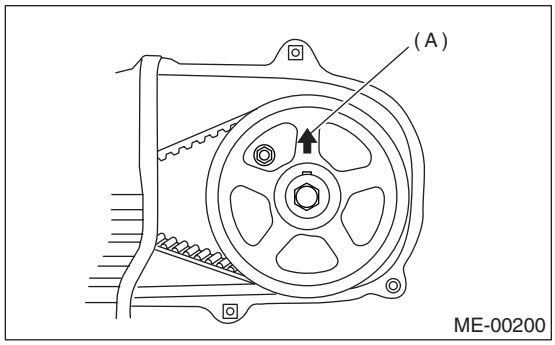

2) Adjust the #1 cylinder valve clearance.
(1) Loosen the valve rocker nut and screw.
(2) Place suitable thickness gauge.
(3) While noting the valve clearance, tighten the valve rocker adjust screw.
(4) When specified valve clearance is obtained, tighten the valve rocker nut.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

CAUTION:
• Insert the thickness gauge in as horizontal a direction as possible with respect to the valve stem end face.
• Adjust the exhaust valve clearances while lifting up the vehicle.

Valve clearance:
Intake;
0.20±0.02 mm (0.0079±0.0008 in)
Exhaust;
0.25±0.02 mm (0.0098±0.0008 in)

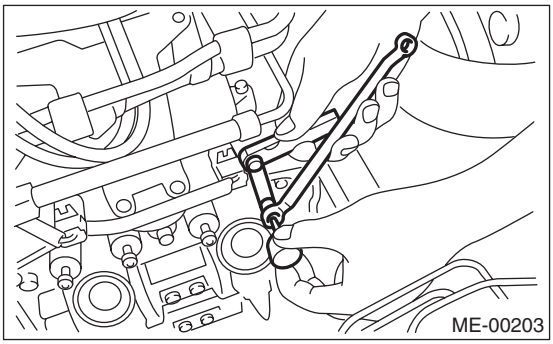

3) Ensure the valve clearances are within specifications.
4) Turn the crankshaft two complete rotations until #1 cylinder piston is again set to the top dead center on compression stroke.
5) Ensure the valve clearances are within specifications. If necessary, readjust the valve clearances.
6) Similar to adjustment procedures used for #1 cylinder, adjust the #2, #3 and #4 cylinder valve clearances.

NOTE:
• Be sure to set the cylinder pistons to their respective top dead centers on compression stroke before adjusting valve clearances.
• To set each cylinder piston to its top dead center on compression stroke in the following sequence: #3, #2 and #4 cylinder, turn the crankshaft pulley clockwise by every 180° at starting with #1 cylinder piston being on top dead center on compression stroke.

9. Engine Assembly

A: REMOVAL

1) Set the vehicle on a lift.
2) Open the front hood fully, and then support with the hood stay.
3) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-21, OPERATION, Refrigerant Recovery Procedure.>
4) Release the fuel pressure. <Ref. to FU(H4SO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
5) Remove the fuel filler cap.
6) Disconnect the ground cable from battery.

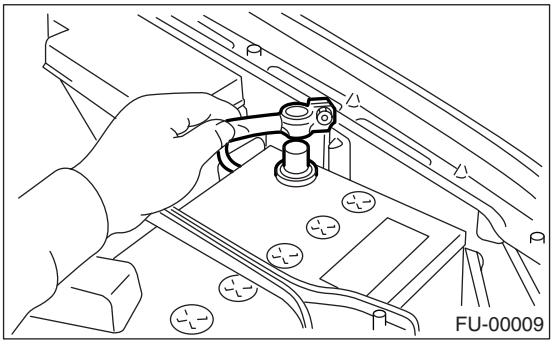

7) Remove the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
8) Remove the under cover.
9) Remove the radiator from vehicle. <Ref. to CO(H4SO)-21, REMOVAL, Radiator.>
10) Disconnect the A/C pressure hoses from A/C compressor.
11) Remove the air intake chamber stay.

- MT MODEL

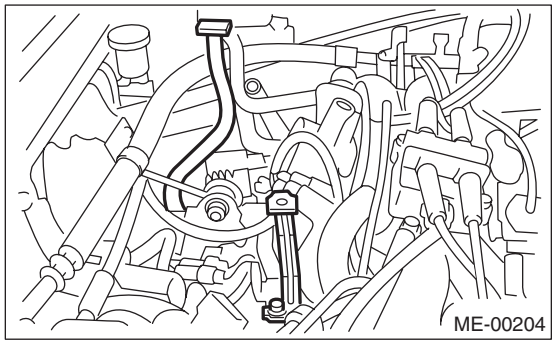

- AT MODEL

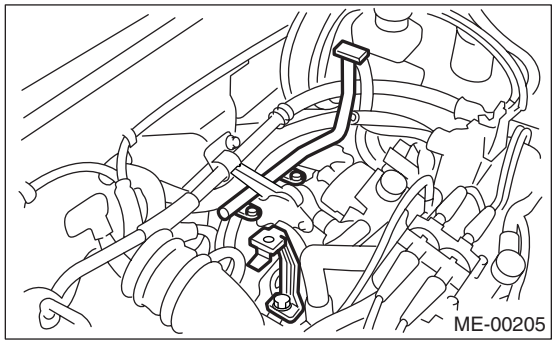

12) Disconnect the following connectors and cables.
(1) Front oxygen (A/F) sensor connector

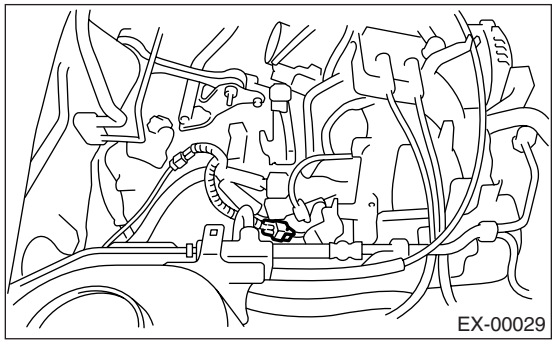

(2) Rear oxygen sensor connector

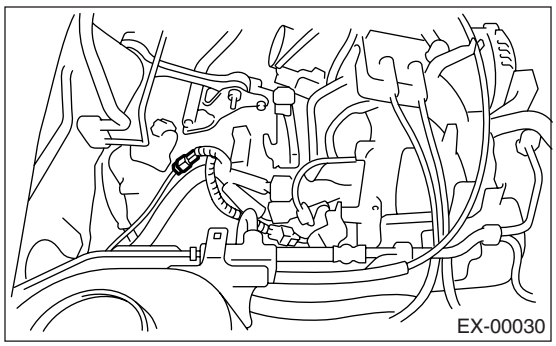

(3) Engine ground cable

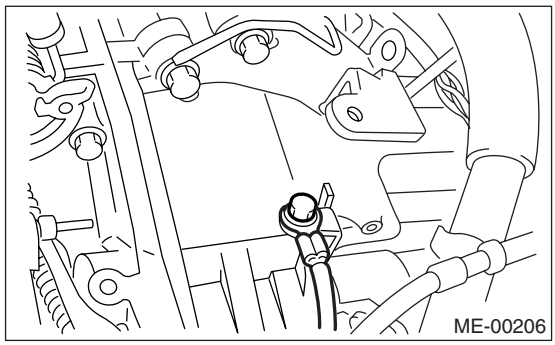

(4) Engine harness connectors

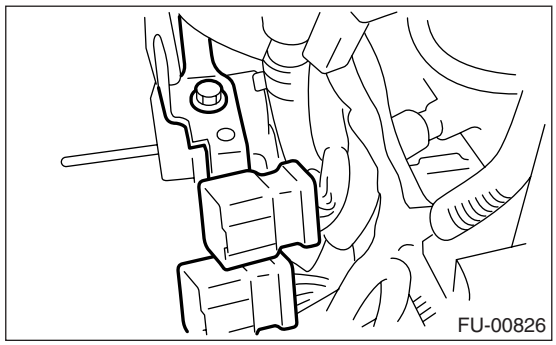

(5) Generator connector, terminal and A/C compressor connector

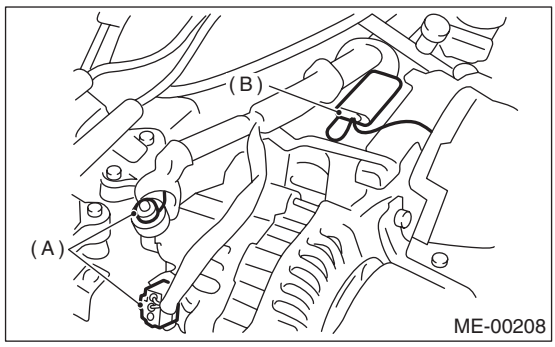

(A) Generator connector and terminal
(B) A/C compressor connector

(6) Accelerator cable (A) and cruise control cable (B) (Model with cruise control)

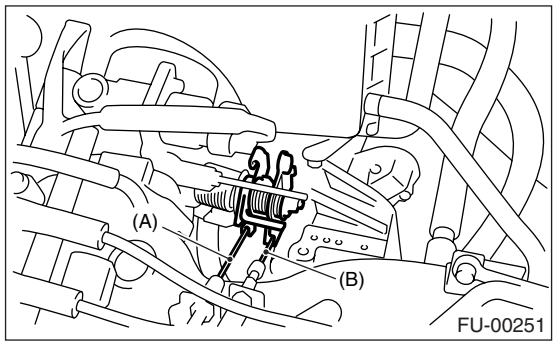

(7) Power steering switch connector

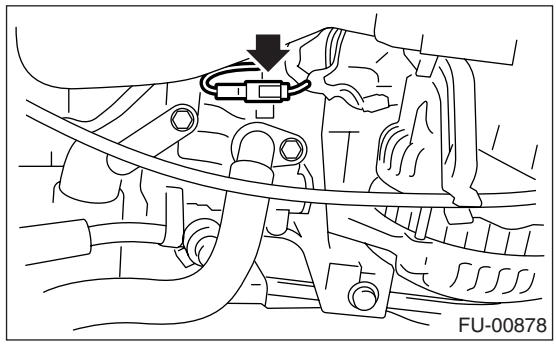

13) Disconnect the following hoses.
(1) Brake booster vacuum hose

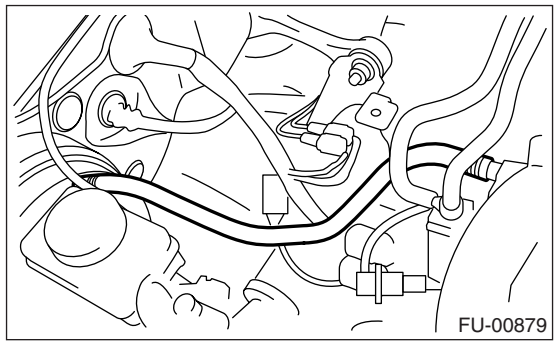

(2) Heater inlet outlet hose

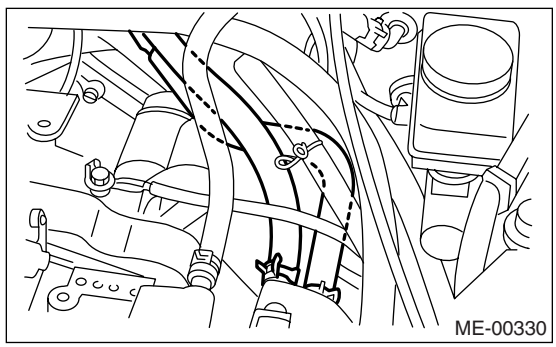

14) Remove the power steering pump from bracket.
(1) Remove the resonator chamber.
(2) Loosen the lock bolt and slider bolt, and then remove the front side V-belt. <Ref. to ME(H4SO)-44, FRONT SIDE BELT, REMOVAL, V-belt.>
(3) Remove the pipe with bracket.

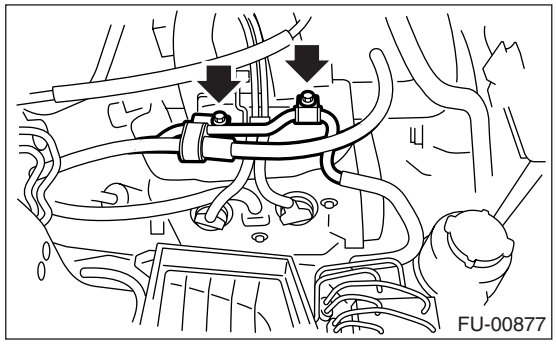
FU-00877

(4) Remove the bolts which install the power steering pump bracket.

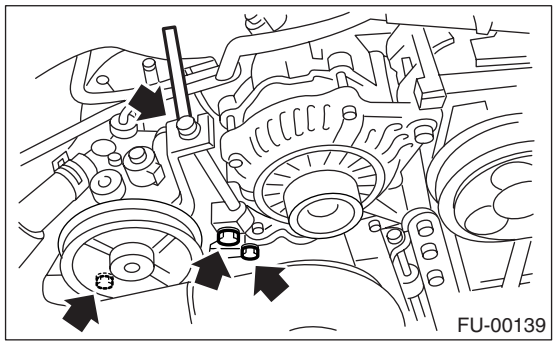
FU-00139

(5) Remove the power steering tank from bracket by pulling it upward.

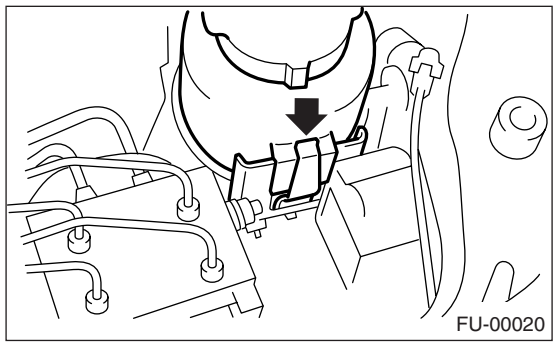
FU-00020

(6) Place the power steering pump on right side wheel apron.

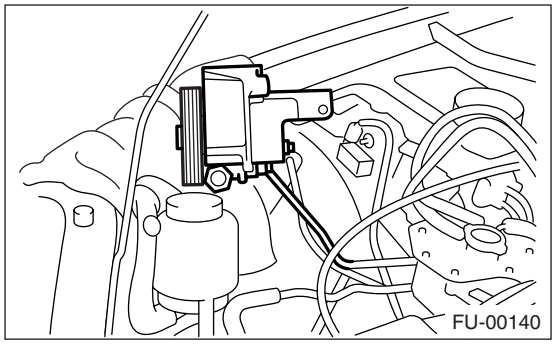
FU-00140

15) Remove the front and center exhaust pipe. <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
16) Remove the nuts which hold the lower side of transmission to engine.

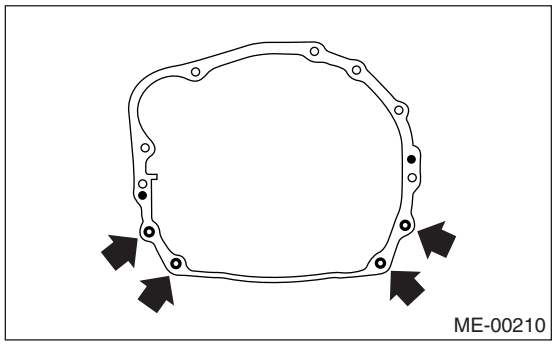
ME-00210

17) Remove the nuts which install the front cushion rubber onto front crossmember.

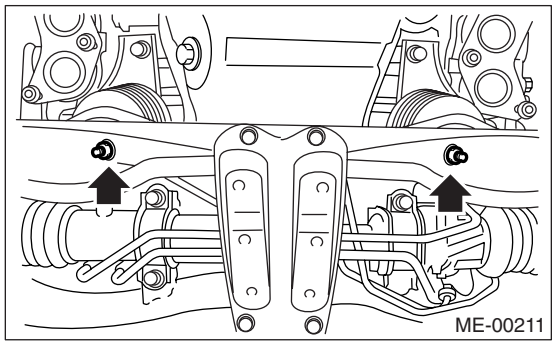
ME-00211

18) Separate the torque converter clutch from drive plate. (AT model)
(1) Lower the vehicle.
(2) Remove the service hole plug.
(3) Remove the bolts which hold the torque converter clutch to drive plate.
(4) Remove other bolts while rotating the engine using socket wrench.

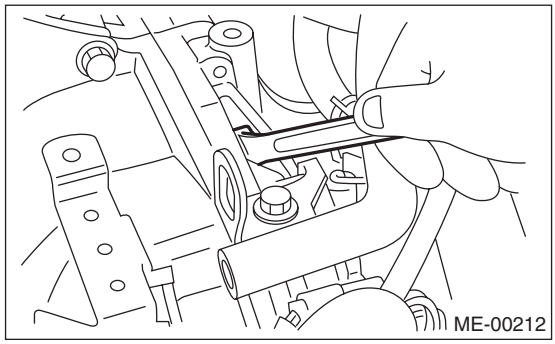

19) Remove the pitching stopper.

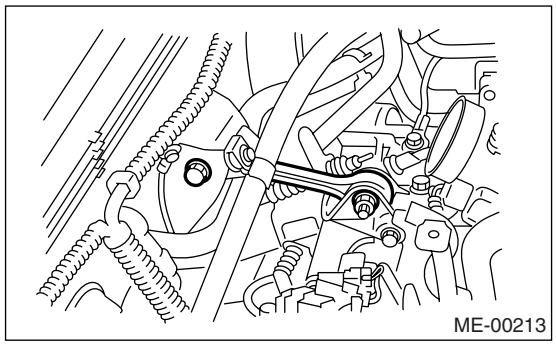

20) Disconnect the fuel delivery hose (A), return hose (B) and evaporation hose (C).

CAUTION:
• Disconnect the hose with its end wrapped with cloth to prevent fuel from splashing.
• Catch fuel from the hose into container.

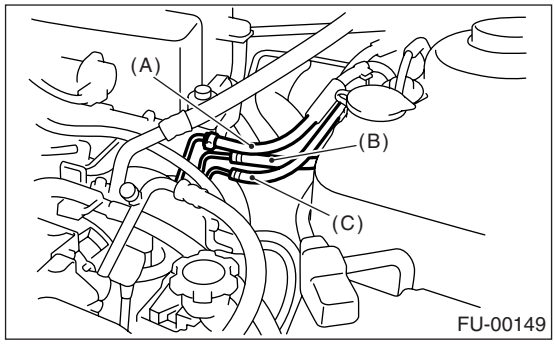

21) Support the engine with a lifting device and wire ropes.

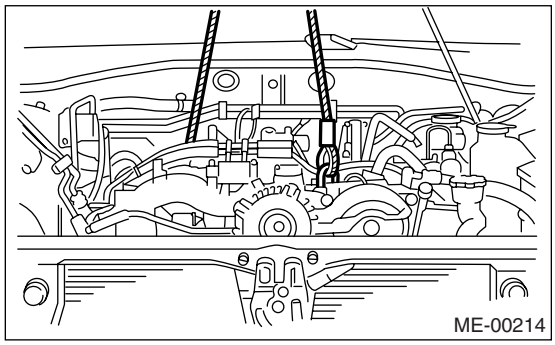

22) Support the transmission with a garage jack.

CAUTION:
Before moving the engine away from transmission, check to be sure no work has been overlooked. Doing this is very important in order to facilitate re-installation and because the transmission lowers under its own weight.

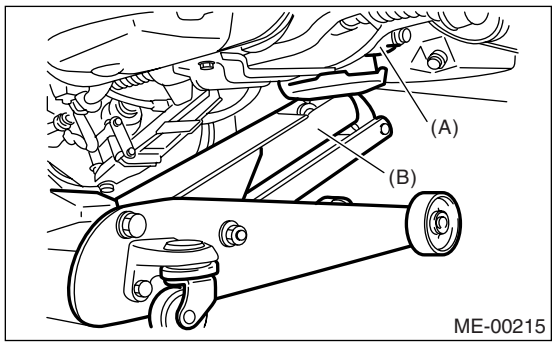

(A) Transmission
(B) Garage jack

23) Separation of the engine and transmission.
(1) Remove the starter. <Ref. to SC(H4SO)-7, REMOVAL, Starter.>
(2) Remove the bolts which hold the upper side of transmission to engine.

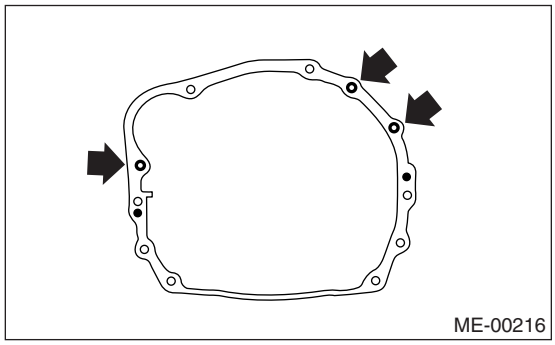

24) Install the ST to torque converter clutch case. (AT model)
ST 498277200 STOPPER SET

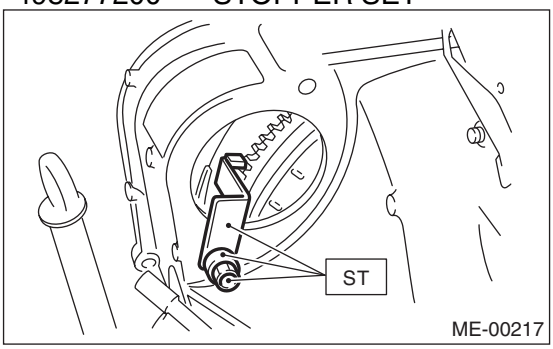

25) Remove the engine from vehicle.
(1) Slightly raise the engine.
(2) Raise the transmission with garage jack.
(3) Move the engine horizontally until main shaft is withdrawn from clutch cover.
(4) Slowly move the engine away from engine compartment.

NOTE:
Be careful not to damage the adjacent parts or body panels with crank pulley, oil level gauge, etc.

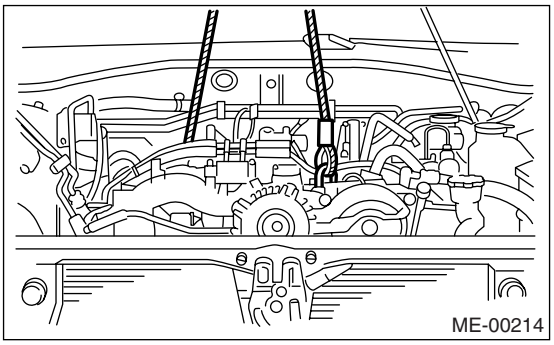

26) Remove the front cushion rubbers.

B: INSTALLATION

1) Install the front cushion rubbers.

Tightening torque:
34 N·m (3.5 kgf-m, 25.3 ft-lb)

2) Install the engine onto transmission.
(1) Position the engine in engine compartment and align it with transmission.

NOTE:
Be careful not to damage the adjacent parts or body panels with crank pulley, oil level gauge, etc.

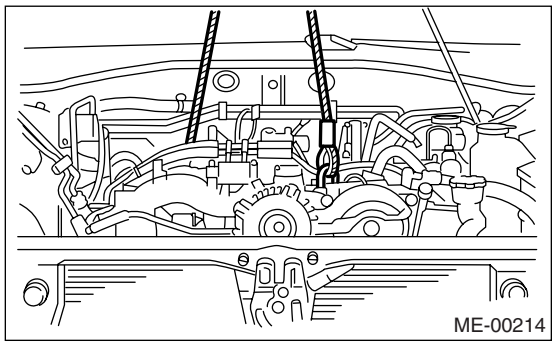

(2) Apply a small amount of grease to the spline of main shaft. (MT model)

3) Tighten the bolts which hold the upper side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

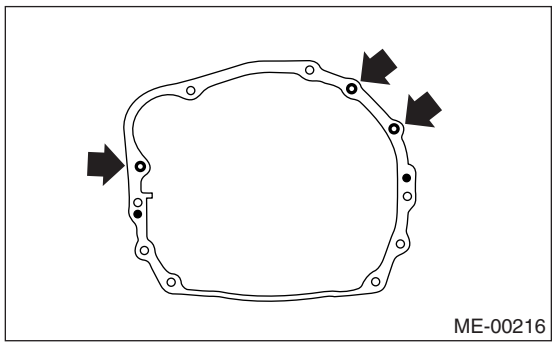

4) Remove the lifting device and wire ropes.

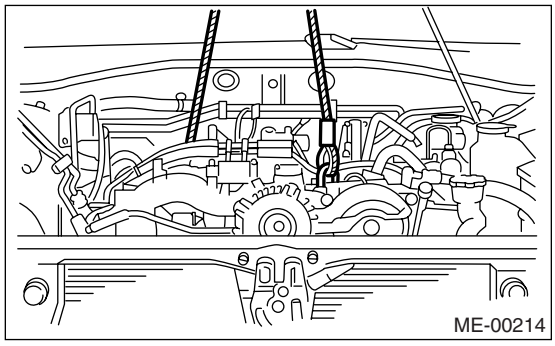

5) Remove the garage jack.

6) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

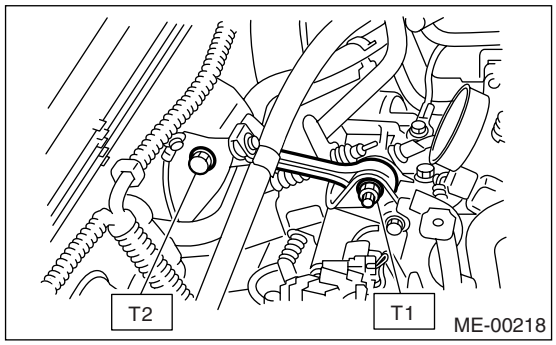

7) Remove the ST from torque converter clutch case. (AT model)

NOTE:
Be careful not to drop the ST into torque converter clutch case when removing ST.

ST 498277200 STOPPER SET

8) Install the starter. <Ref. to SC(H4SO)-7, INSTALLATION, Starter.>

9) Install the torque converter clutch onto drive plate. (AT model)

(1) Tighten the bolts which hold the torque converter clutch to drive plate.

(2) Tighten other bolts while rotating the engine by using a socket wrench.

NOTE:
Be careful not to drop the bolts into torque converter clutch housing.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

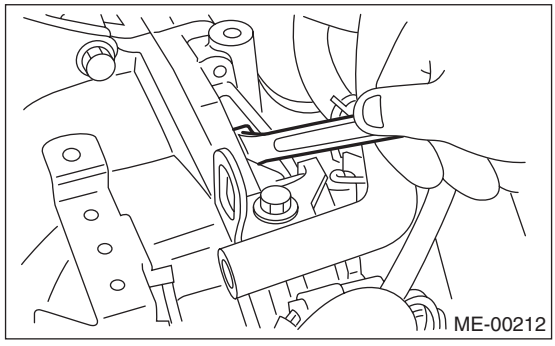

(3) Clog the plug onto service hole.

10) Install the power steering pump on bracket.

(1) Install the power steering tank on bracket.

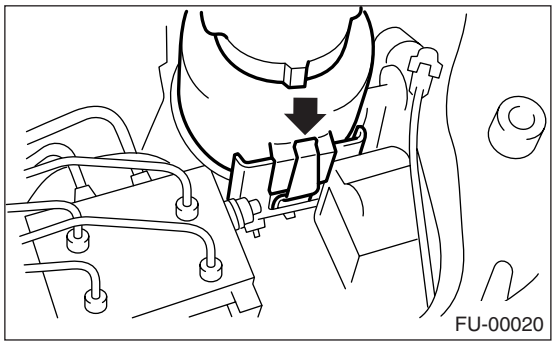

(2) Install the power steering pump on bracket, and then tighten the bolts.

Tightening torque:
20.1 N·m (2.05 kgf-m, 14.8 ft-lb)

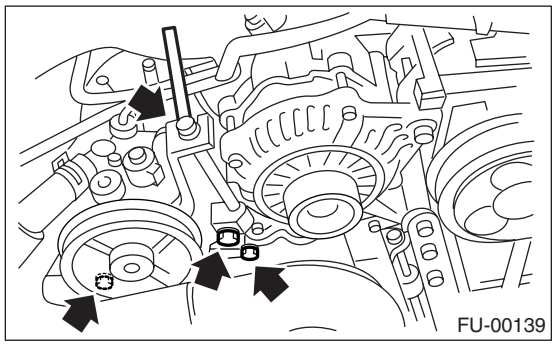

(3) Tighten the bolts which install the power steering pipe bracket, and then install the spark plug cords.

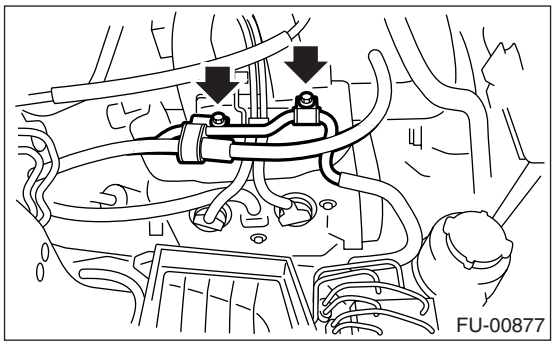

(4) Connect the power steering switch connector.

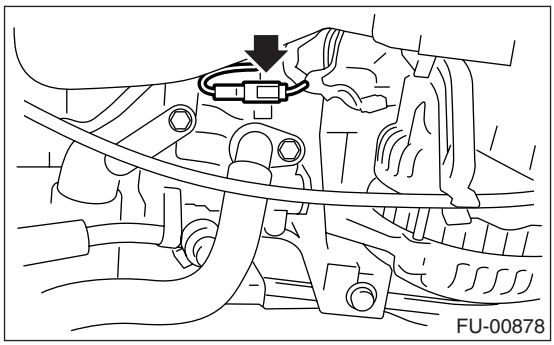

(5) Install the front side V-belt, and adjust it. <Ref. to ME(H4SO)-44, FRONT SIDE BELT, INSTALLATION, V-belt.>
(6) Install the resonator chamber.

Tightening torque:
33 N·m (3.4 kgf-m, 24.6 ft-lb)

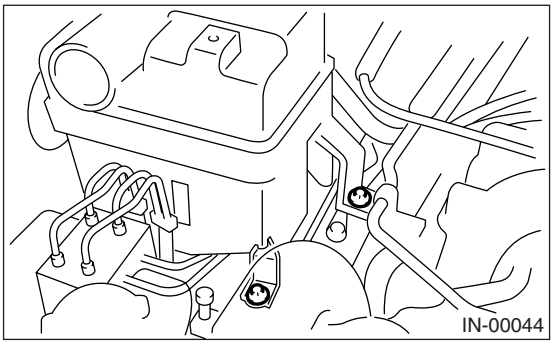

11) Tighten the nuts which hold the lower side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

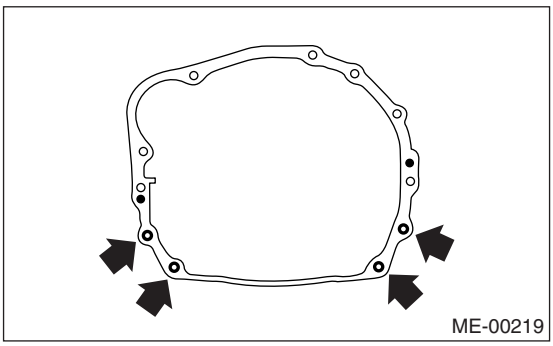

12) Tighten the nuts which install the front cushion rubber onto crossmember.

Tightening torque:
85 N·m (8.7 kgf-m, 63 ft-lb)

NOTE:
Make sure the front cushion rubber mounting bolts (A) and locator (B) are securely installed.

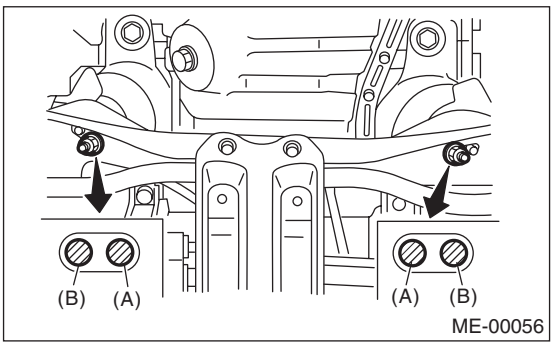

13) Install the front and center exhaust pipe. <Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>
14) Connect the following hoses.
(1) Fuel delivery hose, return hose and evaporation hose
(2) Heater inlet and outlet hoses
(3) Brake booster vacuum hose
15) Connect the following connectors.
(1) Engine ground cables

Tightening torque:
14 N·m (1.4 kgf-m, 10.1 ft-lb)

(2) Engine harness connectors
(3) Generator connector and terminal
(4) A/C compressor connectors
16) Connect the following cables.
(1) Accelerator cable
(2) Cruise control cable (Model with cruise control)
17) Adjust each connected cable.
18) Install the air cleaner case stay.

Tightening torque:
16 N·m (1.6 kgf-m, 11.6 ft-lb)

19) Install the A/C pressure hoses.
<Ref. to AC-37, INSTALLATION, Hose and Tube.>
20) Install the radiator to vehicle. <Ref. to CO(H4SO)-22, INSTALLATION, Radiator.>
21) Install the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.> and <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
22) Install the under cover.
23) Install battery in the vehicle, and then connect the cables.
24) Fill engine coolant.
<Ref. to CO(H4SO)-14, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
25) Check the ATF level and correct if necessary. (AT model)
<Ref. to 4AT-31, INSPECTION, Automatic Transmission Fluid.>
26) Charge the A/C system with refrigerant.
<Ref. to AC-22, OPERATION, Refrigerant Charging Procedure.>
27) Remove the front hood stay, and then close the front hood.
28) Take off the vehicle from lift arms.

C: INSPECTION

1) Make sure the pipes and hoses are installed correctly.
2) Make sure the engine coolant and ATF are at specified levels.

10.Engine Mounting

A: REMOVAL

1) Remove the engine assembly. <Ref. to ME(H4SO)-35, REMOVAL, Engine Assembly.>
2) Remove the engine mounting from engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Engine mounting;
35 N·m (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION

Make sure there are no cracks or other damage.

11.Preparation for Overhaul

A: PROCEDURE

1) After removing the engine from body, secure it in the ST shown below.

ST1	498457000	ENGINE STAND ADAPTER RH
ST2	498457100	ENGINE STAND ADAPTER LH
ST3	499817100	ENGINE STAND

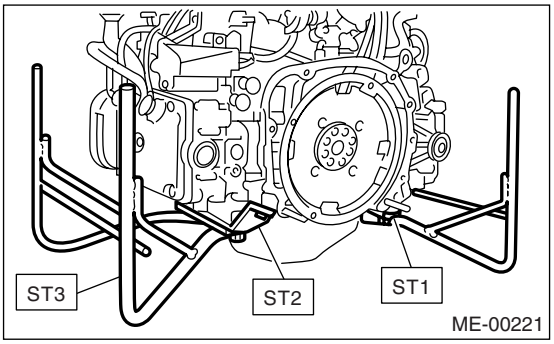

2) In this section the procedures described under each index are all connected and stated in order. It will be the complete procedure for overhauling of the engine itself when you go through all steps in the process.
Therefore, in this section, to conduct the particular procedure within the flow of a section, you need to go back and conduct the procedure described previously in order to do that particular procedure.

12.V-belt

A: REMOVAL

1. FRONT SIDE BELT

NOTE:
Perform the following procedures 1) to 4) with the engine installed to body.

1) Remove the V-belt cover.

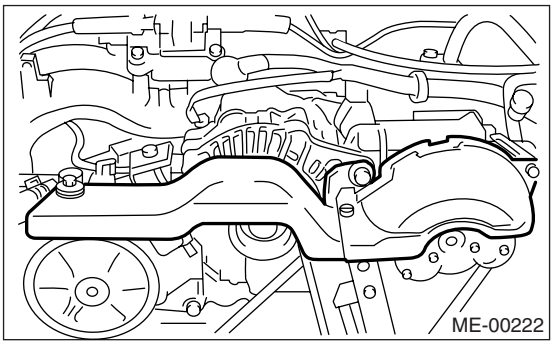

2) Loosen the lock bolt (A).
3) Loosen the slider bolt (B).
4) Remove the front side belt (C).

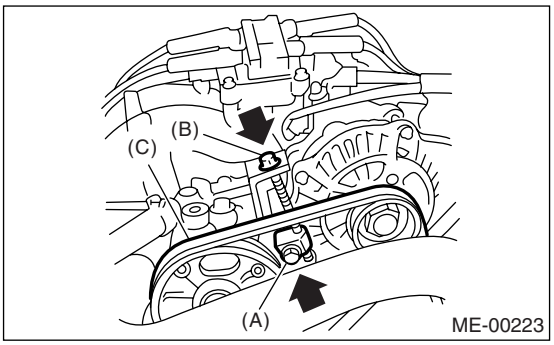

2. REAR SIDE BELT

1) Loosen the lock nut (A).
2) Loosen the slider bolt (B).

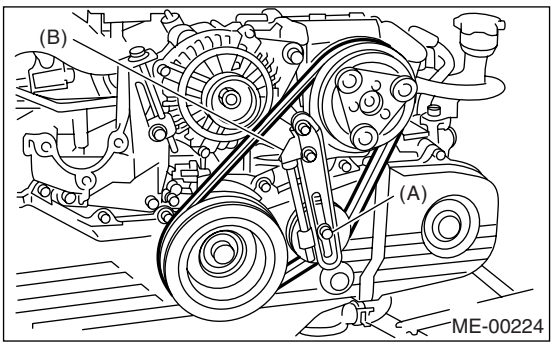

3) Remove the rear side belt.
4) Remove the belt tensioner.

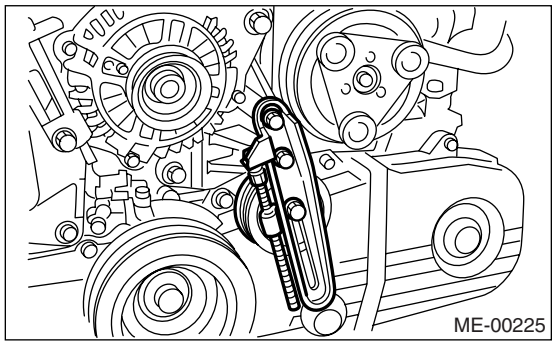

B: INSTALLATION

NOTE:
Wipe off any oil or water on the belt and pulley.

1. FRONT SIDE BELT

1) Install the belt (C), and tighten the slider bolt so as to obtain the specified belt tension <Ref. to ME(H4SO)-45, INSPECTION, V-belt.>
2) Tighten the lock bolt (A)
3) Tighten the slider bolt (B).

Tightening torque:
Lock bolt (A):
25 N·m (2.5 kgf-m, 18.1 ft-lb)
Slider bolt (B):
8 N·m (0.8 kgf-m, 5.5 ft-lb)

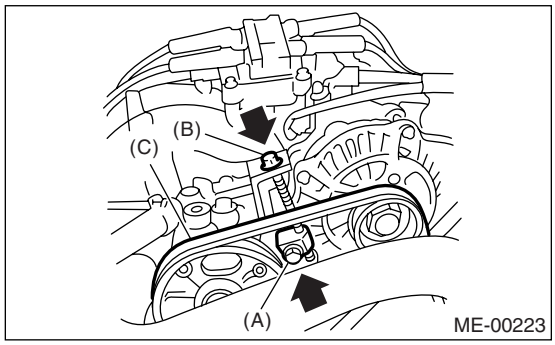

4) Idle the engine for approx. 5 min. to normalize the V-belt. (With using tension gauge)
5) Stop the engine, and then check the belt tension and adjust it. (With using tension gauge)
6) Idle the engine for approx. 1 min. to normalize the V-belt. (With using tension gauge)
7) Stop the engine, and then check the belt tension is within specified value. (With using tension gauge)
8) Adjust the belt tension until the value within specification. (With using tension gauge)

2. REAR SIDE BELT

1) Install the belt tensioner.
2) Install the belt, and tighten the slider bolt (B) so as to obtain the specified belt tension. <Ref. to ME(H4SO)-45, INSPECTION, V-belt.>
3) Tighten the lock nut (A).

Tightening torque:
Lock nut (A);
23 N·m (2.3 kgf-m, 17.0 ft-lb)

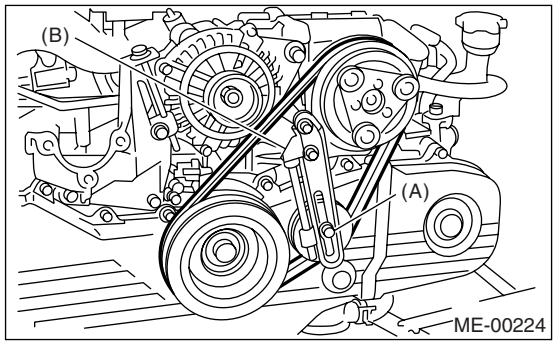

4) Idle the engine for approx. 5 min. to normalize the V-belt. (With using tension gauge)
5) Stop the engine, and then check the belt tension and adjust it. (With using tension gauge)
6) Idle the engine for approx. 1 min. to normalize the V-belt. (With using tension gauge)
7) Stop the engine, and then check the belt tension is within specified value. (With using tension gauge)
8) Adjust the belt tension until the value within specification. (With using tension gauge)

C: INSPECTION

1. PROCEDURES WITHOUT BELT TENSION GAUGE

1) Replace the belts, if cracks, fraying or wear is found.
2) Check the drive belt tension and adjust it if necessary by changing the generator installing position and/or idler pulley installing position.

Belt tension
(A)
replaced: 7 — 9 mm (0.276 — 0.354 in)
reused: 9 — 11 mm (0.354 — 0.433 in)
(B)
replaced: 7.5 — 8.5 mm (0.295 — 0.335 in)
reused: 9.0 — 10.0 mm (0.354 — 0.394 in)

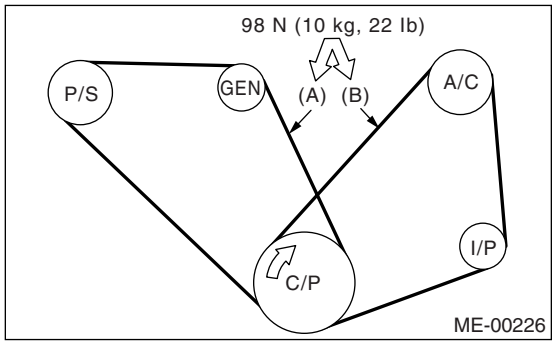

C/P	Crankshaft pulley
GEN	Generator
P/S	Power steering oil pump pulley
A/C	Air conditioning compressor pulley
I/P	Idler pulley

2. PROCEDURES WITH BELT TENSION GAUGE

1) Replace the belts, if cracks, fraying or wear is found.
2) Remove the V-belt cover and reservoir tank.
3) Check the V-belt tension using belt tension gauge and adjust it if necessary by changing the generator installing position and/or idler pulley installing position.

Belt tension
(A)
490 — 640 N (50.0 — 65.3 kgf, 110.2 — 143.9 lb)
(B)
350 — 450 N (35.7 — 45.9 kgf, 78.7 — 101.2 lb)

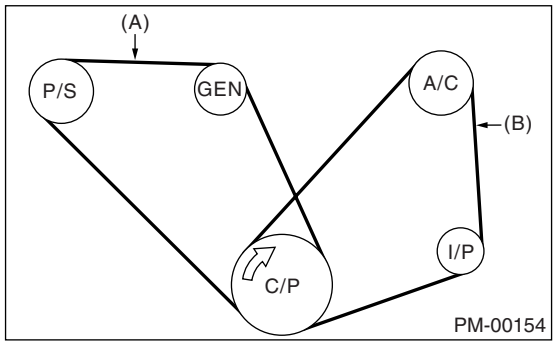

C/P	Crankshaft pulley
GEN	Generator
P/S	Power steering oil pump pulley
A/C	Air conditioning compressor pulley
I/P	Idler pulley

13.Crankshaft Pulley

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley bolt. To lock the crankshaft, use ST.

ST 499977400 CRANKSHAFT PULLEY WRENCH (1.6 L and 2.0 L model)
ST 499977100 CRANKSHAFT PULLEY WRENCH (2.5 L model)

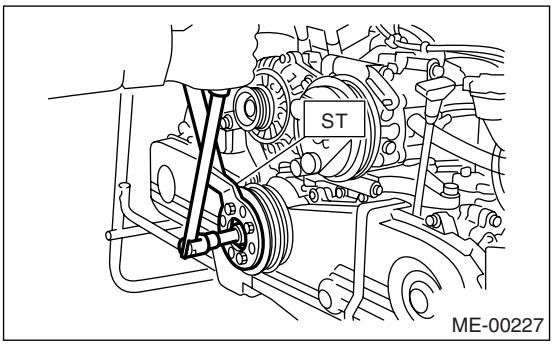

3) Remove the crankshaft pulley.

B: INSTALLATION

1. 1.6 L AND 2.0 L MODEL

1) Install the crankshaft pulley.
2) Install the pulley bolt.
To lock the crankshaft, use ST.

ST 499977400 CRANKSHAFT PULLEY WRENCH

(1) Clean the crankshaft pulley thread using an air gun.
(2) Apply engine oil to the crankshaft pulley bolt seat and thread.
(3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
(4) Tighten the crankshaft pulley bolts.

Tightening torque:
127 N·m (13.0 kgf-m, 94.0 ft-lb)

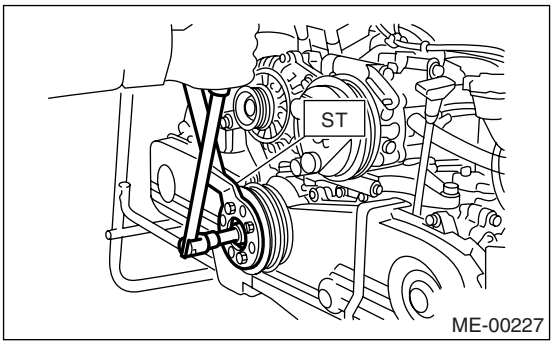

3) Confirm that the tightening angle of crankshaft pulley bolt is 45 degrees or more. If the tightening angle of crankshaft pulley bolt is less than 45 degrees, conduct the following procedures.
(1) Replace the crankshaft pulley bolts and clean them.

Crankshaft pulley bolt:
12369AA011

(2) Clean the crankshaft thread using an air gun.
(3) Apply engine oil to the crankshaft pulley bolt seal and thread.
(4) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
(5) Tighten the crankshaft pulley bolts keeping them in an angle between 45 degrees and 60 degrees.

NOTE:
Conduct the tightening procedures by confirming the turning angle of crankshaft pulley bolt referring to the gauge indicated on timing belt cover.

4) Install the belt tensioner.

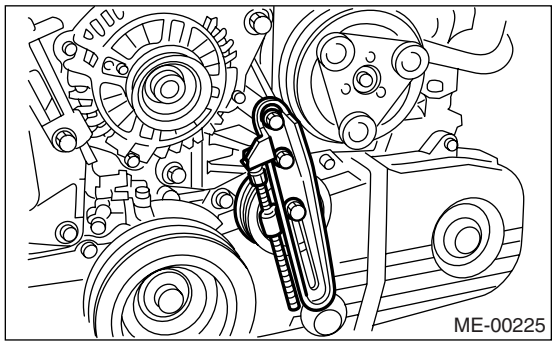

5) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

2. 2.5 L MODEL

1) Install the crankshaft pulley.
2) Install the pulley bolt.
To lock the crankshaft, use ST.
ST 499977100 CRANKSHAFT PULLEY WRENCH
(1) Clean the crankshaft pulley thread using an air gun.
(2) Apply engine oil to the crankshaft pulley bolt seat and thread.
(3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
(4) Tighten the crankshaft pulley bolts.

Tightening torque:
177 N·m (18.0 kgf-m, 130.2 ft-lb)

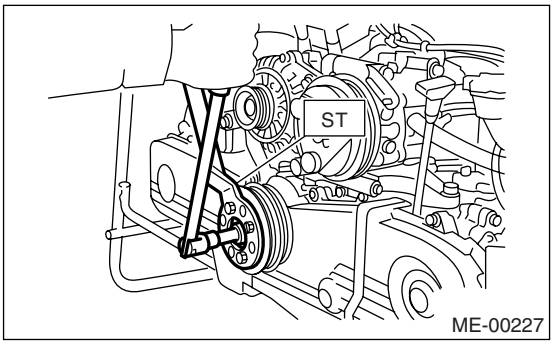

3) Confirm that the tightening angle of crankshaft pulley bolt is 65 degrees or more. If the tightening angle of crankshaft pulley bolt is less than 65 degrees, conduct the following procedures.
(1) Replace the crankshaft pulley bolts and clean them.

Crankshaft pulley bolt:
12369AA011

(2) Clean the crankshaft thread using an air gun.
(3) Apply engine oil to the crankshaft pulley bolt seal and thread.
(4) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
(5) Tighten the crankshaft pulley bolts keeping them in an angle between 65 degrees and 75 degrees.

NOTE:
Conduct the tightening procedures by confirming the turning angle of crankshaft pulley bolt referring to the gauge indicated on timing belt cover.

4) Install the A/C belt tensioner.

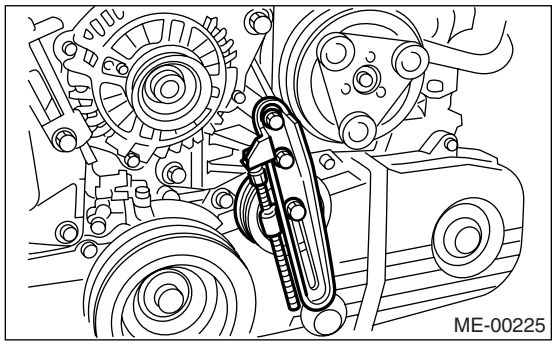

5) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1) Make sure the V-belt is not worn or otherwise damaged.
2) Check the tension of the belt. <Ref. to ME(H4SO)-45, INSPECTION, V-belt.>

14.Timing Belt Cover

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover (LH).
4) Remove the front timing belt cover.

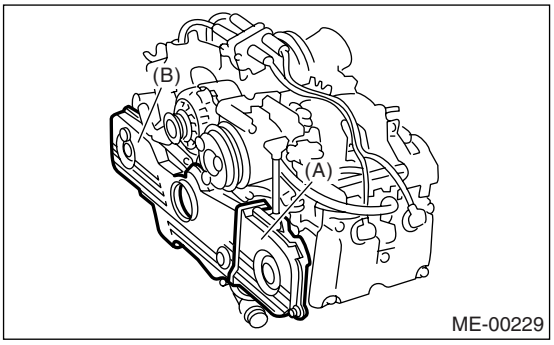

(A) Timing belt cover (LH)
(B) Front timing belt cover

B: INSTALLATION

1) Install the front timing belt cover.

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

2) Install the timing belt cover (LH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

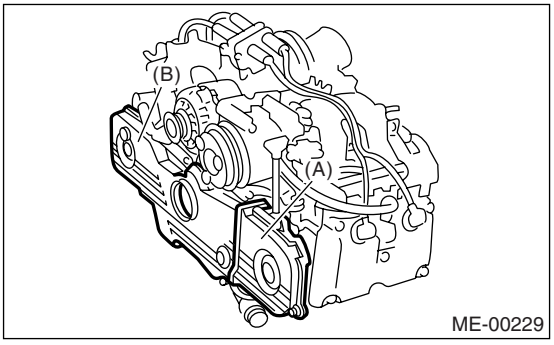

(A) Timing belt cover (LH)
(B) Front timing belt cover

3) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
4) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: INSPECTION

Make sure the cover is not damaged.

15.Timing Belt Assembly

A: REMOVAL

1. TIMING BELT

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt guide. (MT model)

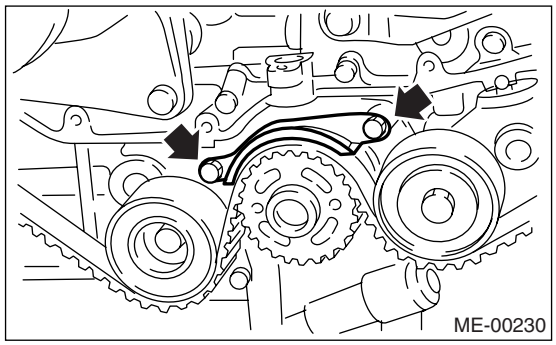

5) If the alignment mark (a) and/or arrow mark (which indicates rotation direction) on timing belt fade away, put new marks before removing the timing belt as shown in procedures below.
   (1) Turn the crankshaft using ST. Align the mark (a) of sprocket to cylinder block notch (b) and ensure the right side cam sprocket mark (c), cam cap and cylinder head matching surface (d) and/or left side cam sprocket mark (e) and timing belt cover notch (f) are properly adjusted.

ST 499987500 CRANKSHAFT SOCKET

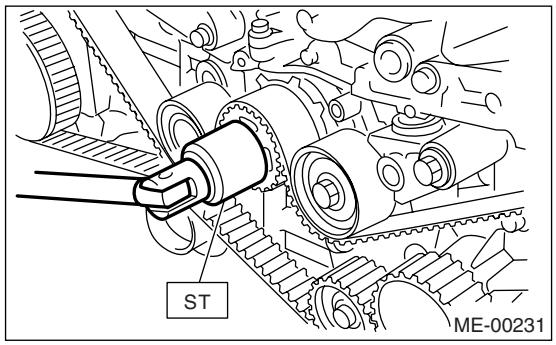

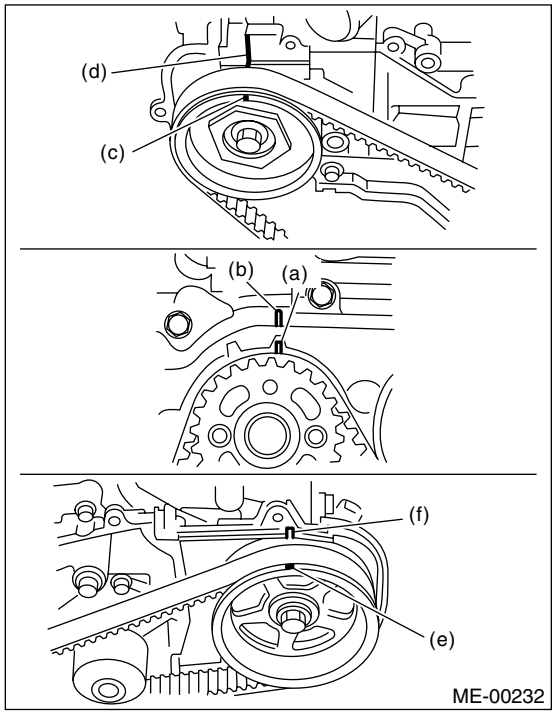

(2) Using white paint, put alignment and/or arrow marks on the timing belts in relation to crank sprocket and cam sprockets.

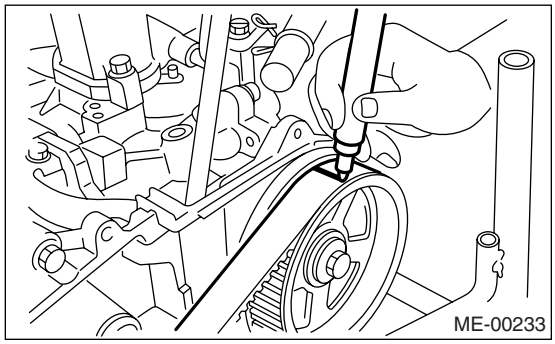

Specified data:
Z_1: 46.8 tooth length
Z_2: 43.7 tooth length

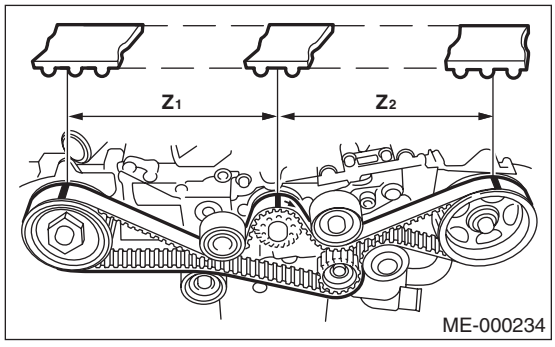

6) Remove the belt idler (No. 2).

7) Remove the belt idler No. 2.

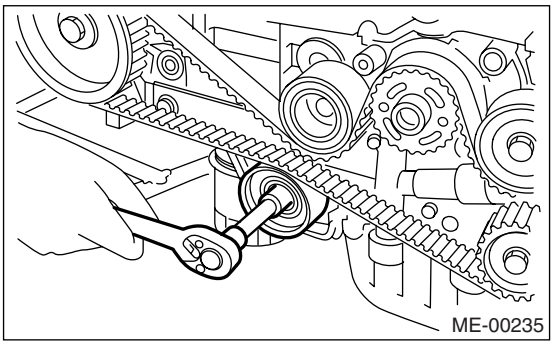

8) Remove the timing belt.

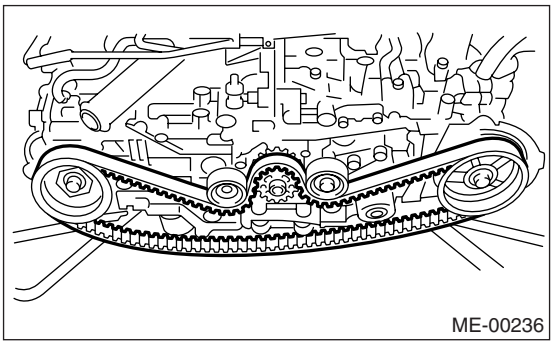

2. BELT IDLER AND AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY

1) Remove the belt idler (No. 1).

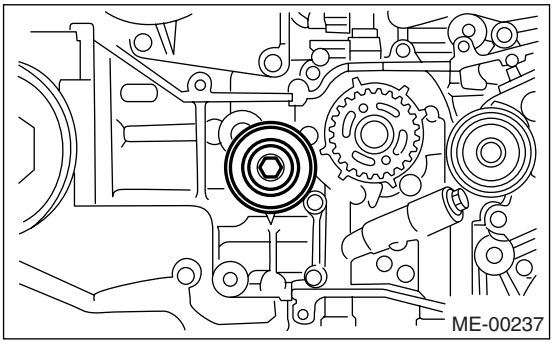

2) Remove the automatic belt tension adjuster assembly.

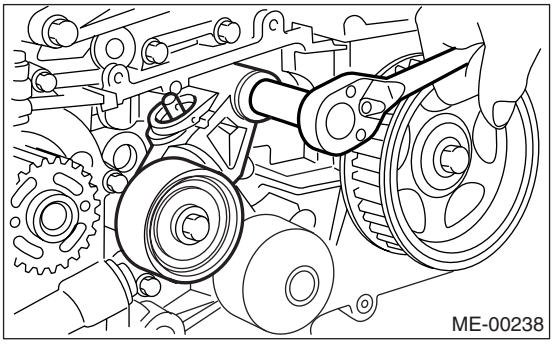

B: INSTALLATION

1. AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER

1) Preparation for installation of automatic belt tension adjuster assembly;

CAUTION:
• Always use a vertical type pressing tool to move the adjuster rod down.
• Do not use a lateral type vise.
• Push the adjuster rod vertically.
• Press-in the push adjuster rod gradually taking more than 3 minutes.
• Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
• Press the adjuster rod as far as the end surface of cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.
• Do not release the press pressure until stopper pin is completely inserted.

(1) Attach the automatic belt tension adjuster assembly to the vertical pressing tool.
(2) Slowly move the adjuster rod down with a pressure of 294 N (30 kgf, 66 lb) until the adjuster rod is aligned with the stopper pin hole in the cylinder.

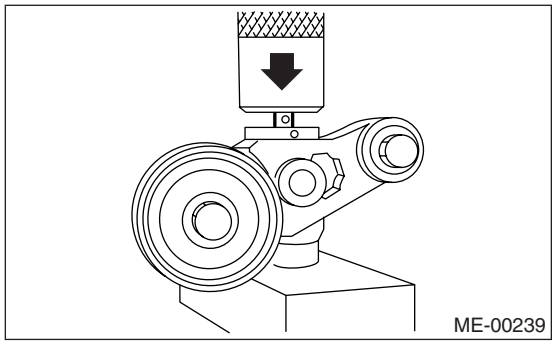

(3) With a 2 mm (0.08 in) dia. stopper pin or a 2 mm (0.08 in) (nominal) dia. hex bar wrench inserted into the stopper pin hole in the cylinder, secure the adjuster rod.

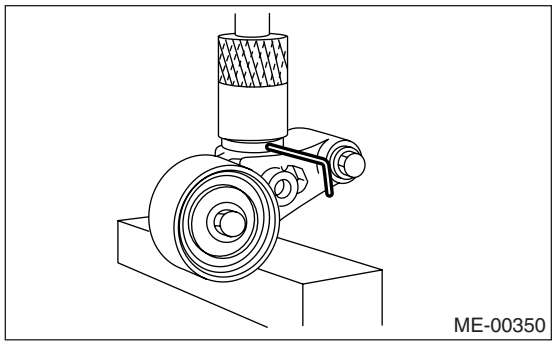

2) Install the automatic belt tension adjuster assembly.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

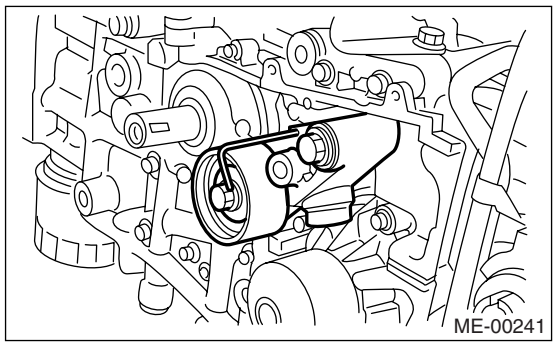

3) Install the belt idler (No. 1).

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

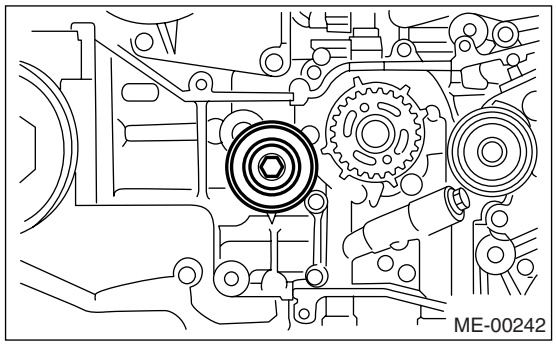

2. TIMING BELT

1) Preparation for the installation of automatic belt tension adjuster assembly. <Ref. to ME(H4SO)-51, AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER, INSTALLATION, Timing Belt Assembly.>

2) Installation of timing belt

(1) Turn the camshaft sprocket No. 2 using ST1, and then turn the camshaft sprocket No. 1 using ST2 so that their alignment marks (A) come to top positions.

ST1 18231AA010 CAMSHAFT SPROCKET WRENCH

NOTE:
Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.

ST2 499207400 CAMSHAFT SPROCKET WRENCH

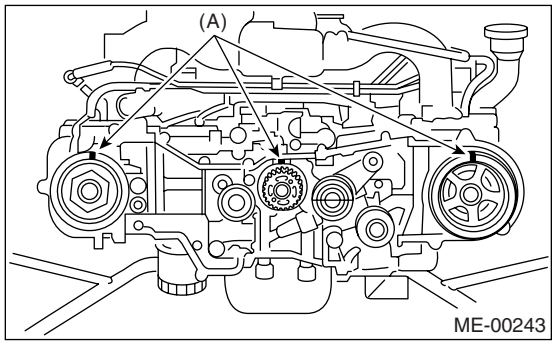

(2) While aligning alignment marks (B) on the timing belt with marks (A) on sprockets, position the timing belt properly.

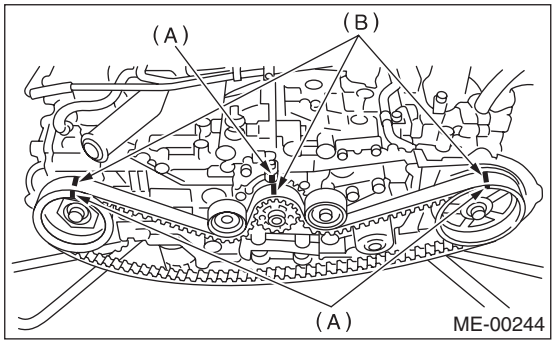

3) Install the belt idler No. 2.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

4) Install the belt idler (No. 2).

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

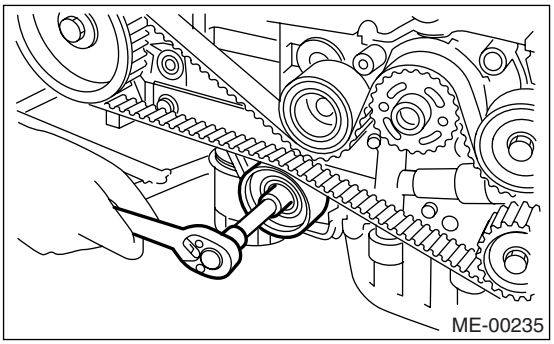

5) After ensuring that the marks on timing belt and camshaft sprockets are aligned, remove the stopper pin from belt tension adjuster.

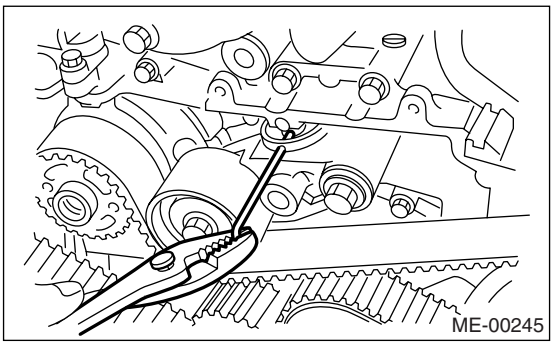

6) Install the timing belt guide. (MT model)
(1) Temporarily tighten the timing belt guide mounting bolts.

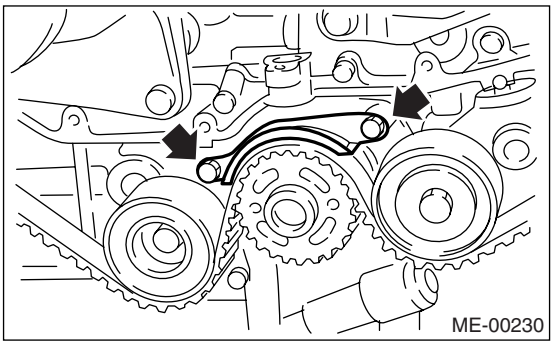

(2) Check and adjust the clearance between timing belt and timing belt guide by using thickness gauge.

Clearance:
1.0±0.5 mm (0.039±0.020 in)

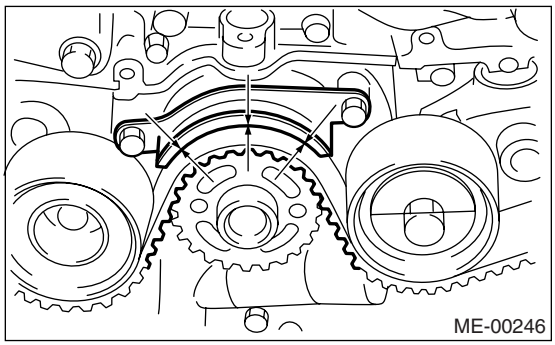

(3) Tighten the timing belt guide mounting bolts.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

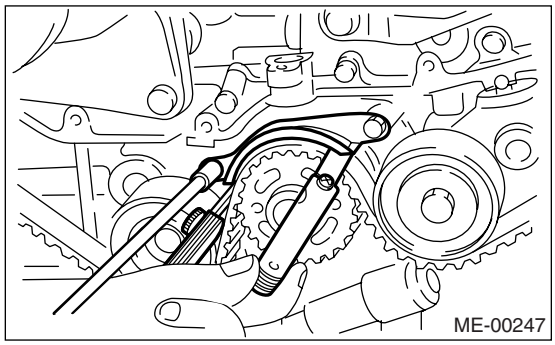

7) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>
8) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
9) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1. TIMING BELT

1) Check the timing belt teeth for breaks, cracks, and wear. If any fault is found, replace the belt.
2) Check the condition of back side of belt; if any crack is found, replace the belt.

CAUTION:
• Be careful not to let oil, grease or coolant contact the belt. Remove quickly and thoroughly if this happens.
• Do not bend the belt sharply.

Bending radius: h
60 mm (2.36 in) or more

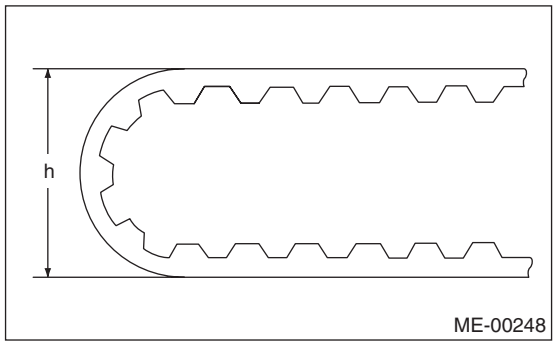

2. AUTOMATIC BELT TENSION ADJUSTER

1) Visually check oil seals for leaks, and rod ends for abnormal wear or scratches. If necessary, replace faulty parts.
2) Check that the adjuster rod does not move when a pressure of 294 N (30 kgf, 66 lb) is applied to it. This is to check adjuster rod stiffness.
3) If the adjuster rod is not stiff and moves freely when applying 294 N (30 kgf, 66 lb), check it using the following procedures:
(1) Slowly press the adjuster rod down to the end surface of the cylinder. Repeat this motion 2 or 3 times.
(2) With the adjuster rod moved all the way up, apply a pressure of 294 N (30 kgf, 66 lb) to it. Check adjuster rod stiffness.
(3) If the adjuster rod is not stiff and moves down, replace the automatic belt tension adjuster assembly with a new one.

CAUTION:
• Always use a vertical type pressing tool to move the adjuster rod down.
• Do not use a lateral type vise.
• Push the adjuster rod vertically.
• Press-in the adjuster rod gradually taking more than 3 minutes.
• Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
• Press the adjuster rod as far as the end surface of the cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.
4) Measure the extension of rod beyond the body. If it is not within specifications, replace with a new one.

Rod extension: H
5.7±0.5 mm (0.224±0.020 in)

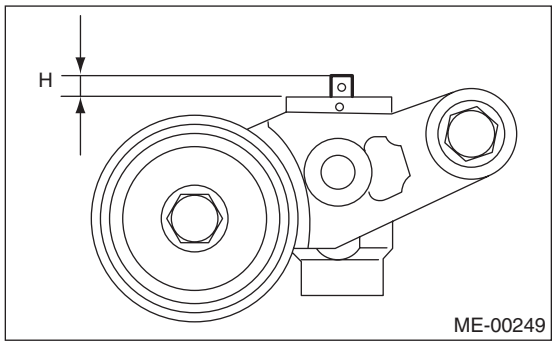

3. BELT TENSION PULLEY

1) Check the mating surfaces of timing belt and contact point of adjuster rod for abnormal wear or scratches. Replace the automatic belt tension adjuster assembly if faulty.
2) Check the tension pulley for smooth rotation. Replace if noise or excessive play is noted.
3) Check the tension pulley for grease leakage.

4. BELT IDLER

1) Check the belt idler for smooth rotation. Replace if noise or excessive play is noted.
2) Check the belt outer contacting surfaces of idler pulley for abnormal wear and scratches.
3) Check the belt idler for grease leakage.

16.Camshaft Sprocket

A: REMOVAL

1. REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4SO)-50, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft position sensor. <Ref. to FU(H4SO)-29, REMOVAL, Camshaft Position Sensor.>
6) Remove the camshaft sprocket No. 2. To lock the camshaft, use ST.
ST 18231AA010 CAMSHAFT SPROCKET WRENCH

NOTE:
Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.

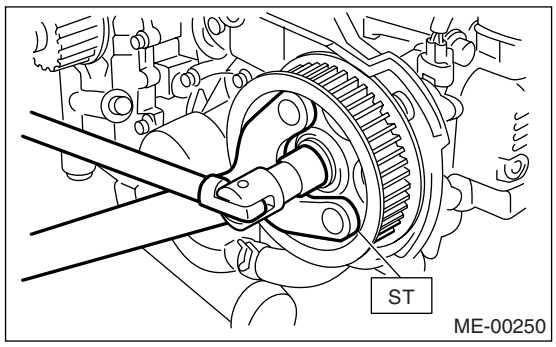

7) Remove the camshaft sprocket No. 1. To lock the camshaft, use ST.
ST 499207400 CAMSHAFT SPROCKET WRENCH

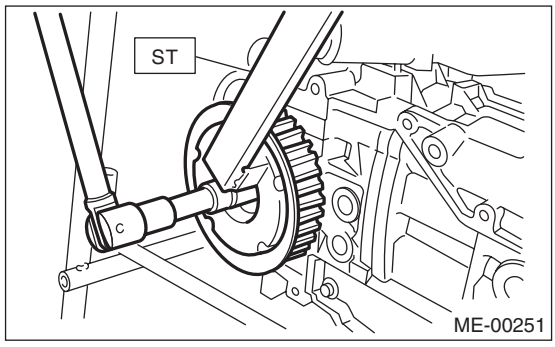

B: INSTALLATION

1) Install the camshaft sprocket No. 1. To lock the camshaft, use ST.
ST 499207400 CAMSHAFT SPROCKET WRENCH

Tightening torque:
78 N·m (8.0 kgf-m, 57.9 ft-lb)

NOTE:
Do not confuse the right and left side camshaft sprockets during installation. The camshaft sprocket No. 2 is identified by a projection used to monitor camshaft position sensor.

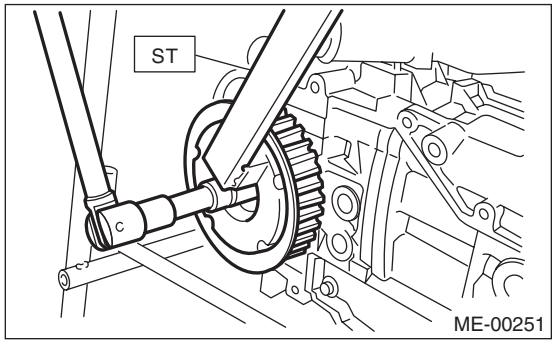

2) Install the camshaft sprocket No. 2. To lock camshaft, use ST.
ST 18231AA010 CAMSHAFT SPROCKET WRENCH

NOTE:
Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.

Tightening torque:
78 N·m (8.0 kgf-m, 57.9 ft-lb)

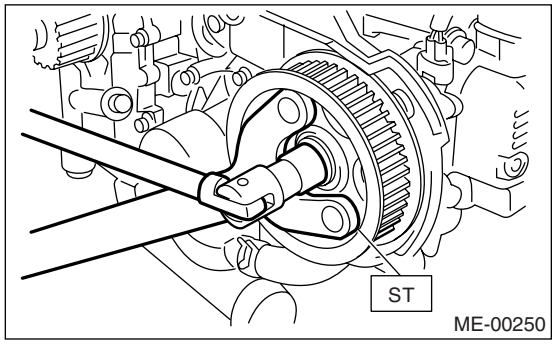

3) Install the camshaft position sensor. <Ref. to FU(H4SO)-29, INSTALLATION, Camshaft Position Sensor.>
4) Install the timing belt assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>
5) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>

6) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
7) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1) Check the sprocket teeth for abnormal wear and scratches.
2) Make sure there is no free play between sprocket and key.
3) Check the camshaft sprocket notch for sensor for damage and contamination of foreign matter.

17.Crankshaft Sprocket

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4SO)-50, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4SO)-55, REMOVAL, Camshaft Sprocket.>
6) Remove the crankshaft sprocket.

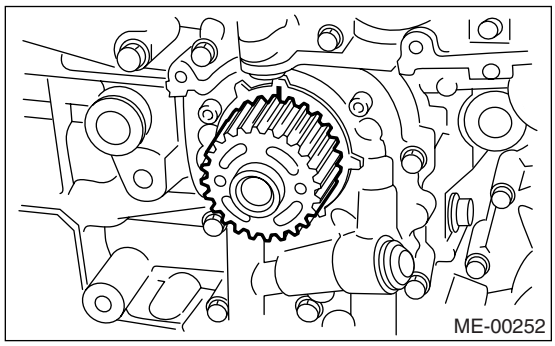

B: INSTALLATION

1) Install the crankshaft sprocket.

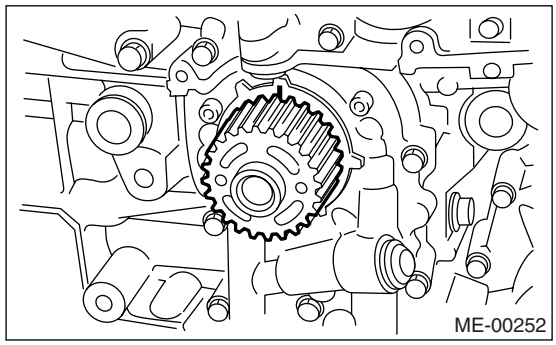

2) Install the camshaft sprocket. <Ref. to ME(H4SO)-55, INSTALLATION, Camshaft Sprocket.>
3) Install the timing belt assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>
4) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>
5) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
6) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1) Check the sprocket teeth for abnormal wear and scratches.
2) Make sure there is no free play between sprocket and key.
3) Check the crankshaft sprocket notch for sensor for damage and contamination of foreign matter.

18.Valve Rocker Assembly

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4SO)-50, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4SO)-55, REMOVAL, Camshaft Sprocket.>
6) Disconnect the PCV hose and remove rocker cover.
7) Removal of valve rocker assembly
   (1) Remove the bolts (a) through (h) in alphabetical sequence.

NOTE:
Leave two or three threads of bolts (g and h) engaged to retain the valve rocker assembly.

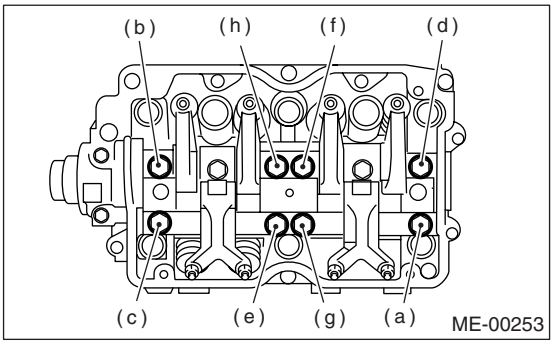

   (2) Remove the valve rocker assembly.

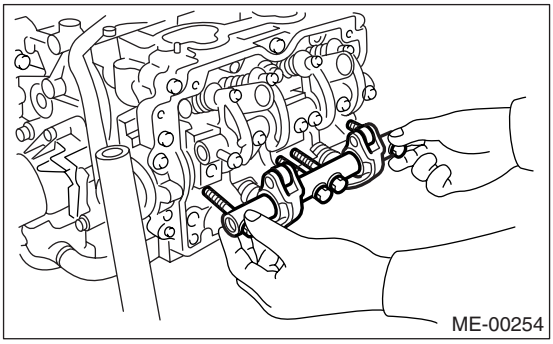

B: INSTALLATION

1) Installation of valve rocker assembly
   (1) Temporarily tighten the bolts (a) through (d) equally as shown in the figure.

NOTE:
Do not allow the valve rocker assembly to gouge knock pins.

   (2) Tighten the bolts (e) through (h) to specified torque.
   (3) Tighten the bolts (a) through (d) to specified torque.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

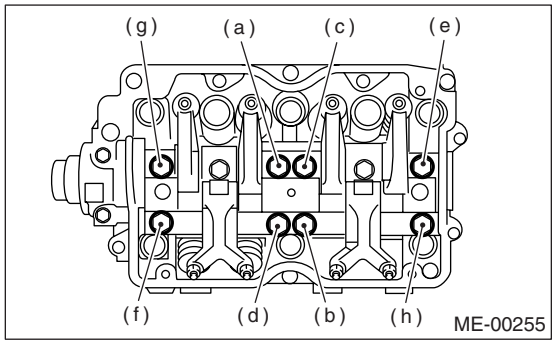

2) Adjust the valve clearances. <Ref. to ME(H4SO)-33, ADJUSTMENT, Valve Clearance.>
3) Install the rocker cover and connect PCV hose.
4) Install the camshaft sprocket. <Ref. to ME(H4SO)-55, INSTALLATION, Camshaft Sprocket.>
5) Install the timing belt assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>
6) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>
7) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
8) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: DISASSEMBLY

1) Remove the bolts which secure the rocker shaft.
2) Extract the rocker shaft. Remove the valve rocker arms, springs and shaft supports from rocker shaft.

NOTE:
Arrange all removed parts in order so that they can be installed in their original positions.

3) Remove the nut and adjuster screw from valve rocker.

D: ASSEMBLY

1) Install the adjuster screw and nut to valve rocker.
2) Arrange the valve rocker arms, springs and shaft supports in assembly order and insert valve rocker shaft.

Tightening torque (Shaft supports installing bolts):
5 N·m (0.5 kgf-m, 3.6 ft-lb)

NOTE:
Valve rocker arms, rocker shaft and shaft supports have identification marks. Ensure the parts with same markings are properly assembled.

3) Install the valve rocker shaft securing bolts.

E: INSPECTION

1. VALVE ROCKER ARM AND ROCKER SHAFT

1) Measure the inside diameter of valve rocker arm and outside diameter of valve rocker shaft, and determine the difference between the two (= oil clearance).

Clearance between arm and shaft:
Standard
0.020 — 0.054 mm (0.0008 — 0.0021 in)
Limit
0.10 mm (0.0039 in)

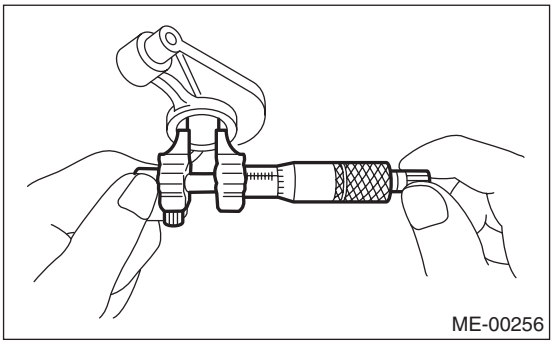
ME-00256

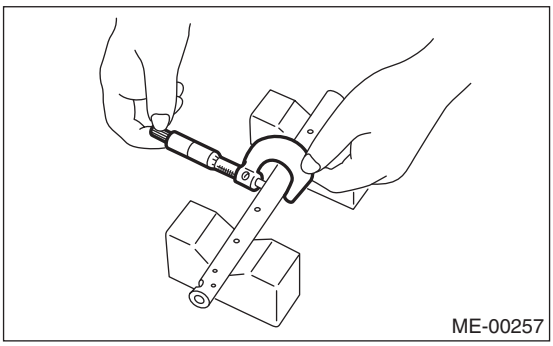
ME-00257

2) If oil clearance exceeds the limit, replace the valve rocker arm or shaft, whichever shows greater amount of wear.

Rocker arm inside diameter:
22.020 — 22.041 mm (0.8669 — 0.8678 in)

Rocker shaft diameter:
21.987 — 22.000 mm (0.8656 — 0.8661 in)

3) If cam or valve contact surface of valve rocker arm is worn or dented excessively, replace the valve rocker arm.
4) Check that the valve rocker arm roller rotates smoothly. If not, replace the valve rocker arm.

19.Camshaft

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4SO)-50, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4SO)-55, REMOVAL, Camshaft Sprocket.>
6) Remove the crankshaft sprocket. <Ref. to ME(H4SO)-57, REMOVAL, Crankshaft Sprocket.>
7) Remove the timing belt cover No. 2 (LH).
8) Remove the timing belt cover No. 2 (RH).

NOTE:
Do not damage or lose the seal rubber when removing the timing belt covers.

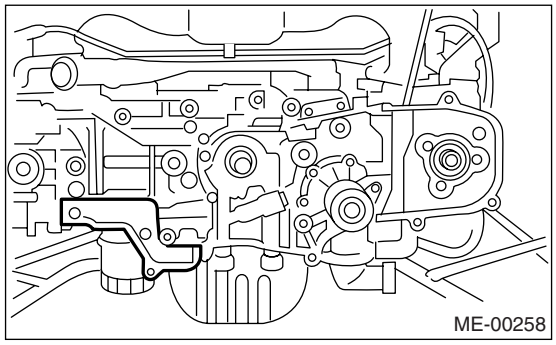
ME-00258

9) Remove the tensioner bracket.

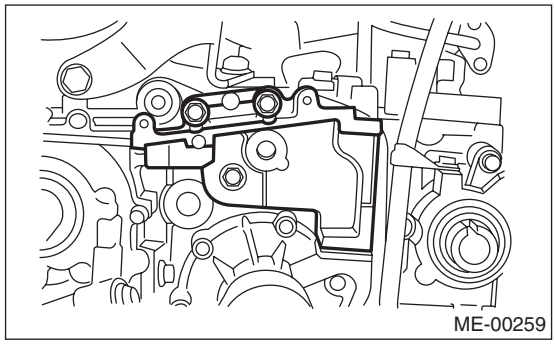
ME-00259

10) Remove the camshaft position sensor support. (LH side only)
11) Remove the oil level gauge guide. (LH side only)
12) Remove the valve rocker assembly. <Ref. to ME(H4SO)-58, REMOVAL, Valve Rocker Assembly.>
13) Remove the camshaft cap.
(1) Remove the bolts (a) through (b) in alphabetical sequence.

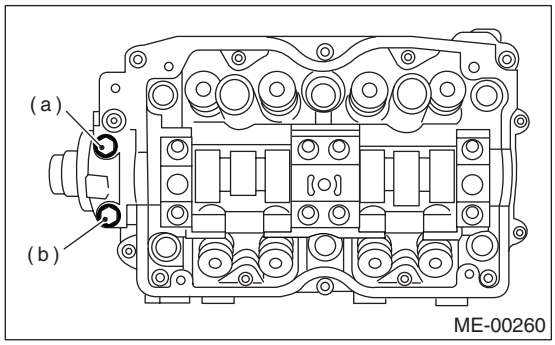

ME-00260

(2) Equally loosen the bolts (c) through (j) all the way in alphabetical sequence.

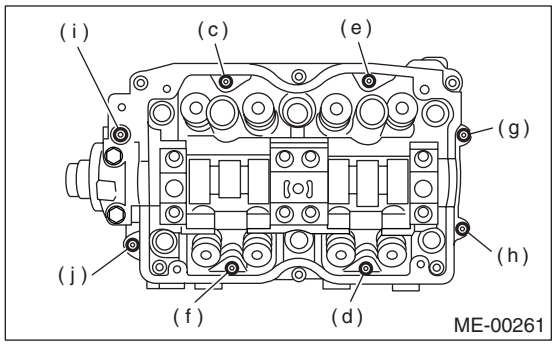

ME-00261

(3) Remove the bolts (k) through (p) in alphabetical sequence using ST.
ST 499497000 TORX® PLUS

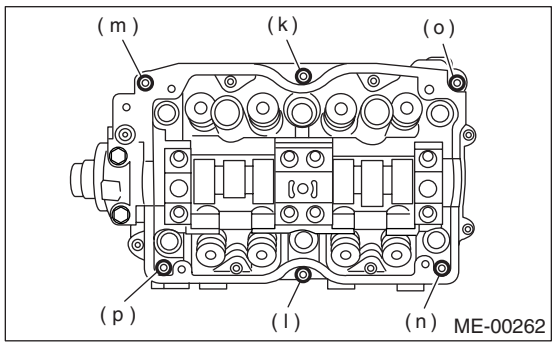

ME-00262

(4) Remove the camshaft cap.

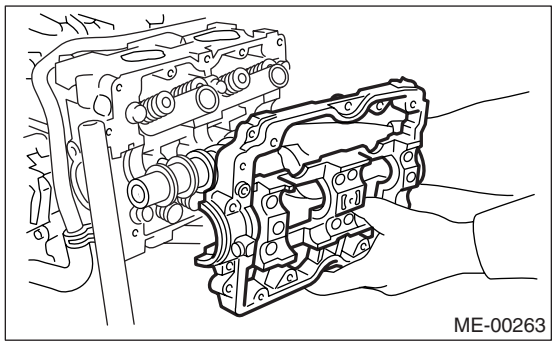
ME-00263

14) Remove the camshaft.
15) Remove the oil seal.

16) Remove the plug from rear side of camshaft.

CAUTION:
- **Do not remove the oil seal unless necessary.**
- **Do not scratch the journal surface when removing oil seal.**

B: INSTALLATION

1) Apply a coat of engine oil to the camshaft journals, and then install the camshaft.
2) Install the camshaft cap.
   (1) Apply liquid gasket on the around of camshaft cap.

Liquid gasket:
THREE BOND 1280B
Part No. K0877YA018

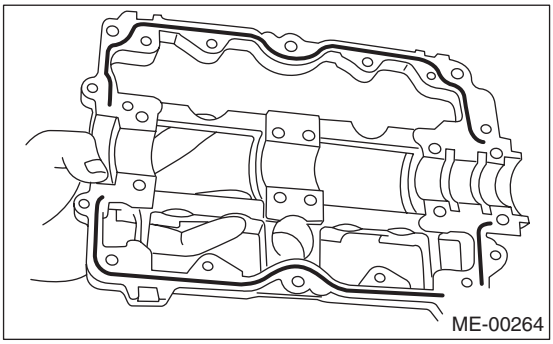

NOTE:
Apply a coat of 3 mm (0.12 in) dia. (A) liquid gasket along edge (B) of the camshaft cap (C) mating surface.

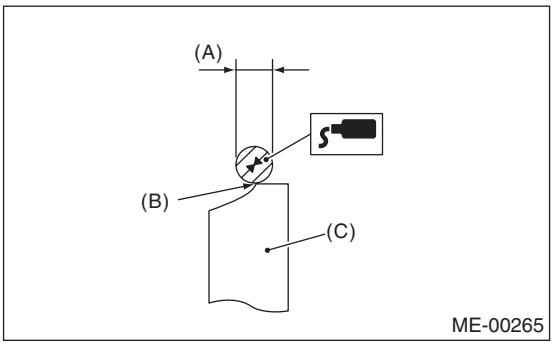

(2) Temporarily tighten the bolts (g) through (j) in alphabetical sequence.

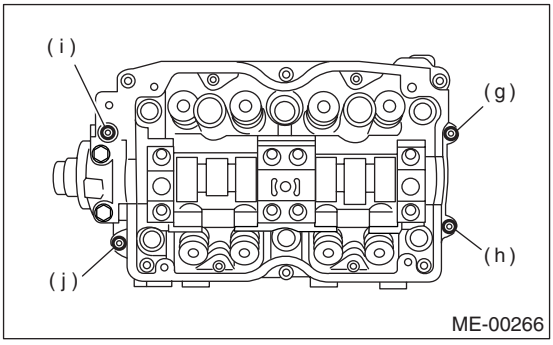

(3) Install the valve rocker assembly.

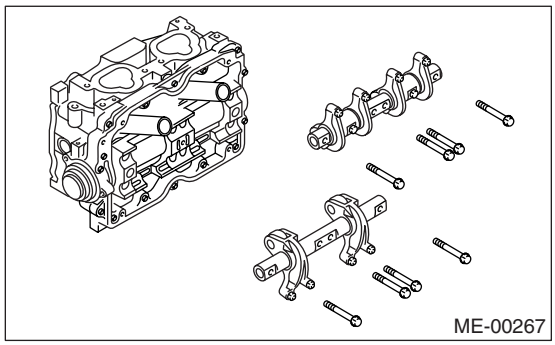

(4) Tighten the bolts (a) through (h) in alphabetical sequence.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

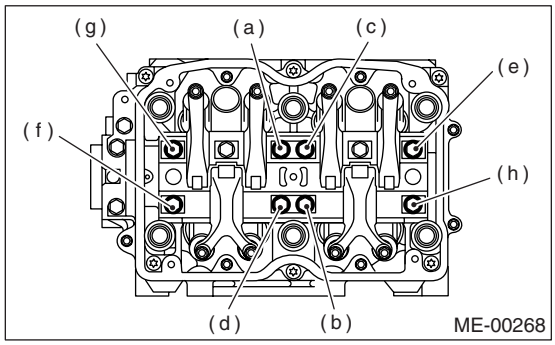

(5) Tighten the TORX® bolts (i) through (n) in alphabetical sequence using ST.
ST 499497000 TORX® PLUS

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

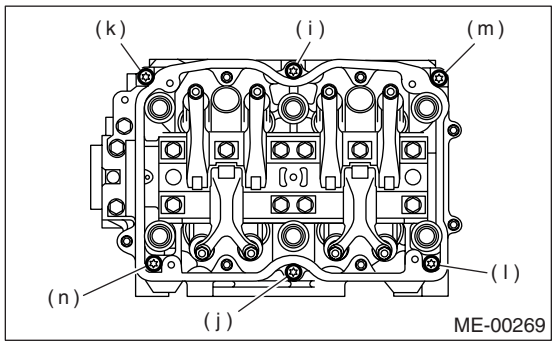

(6) Tighten the bolts (o) through (v) in alphabetical sequence.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

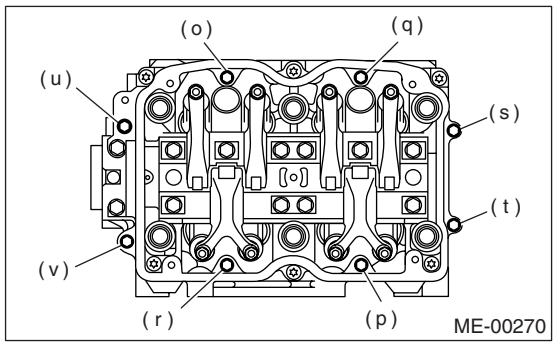

(7) Tighten the bolts (w) through (x) in alphabetical sequence.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

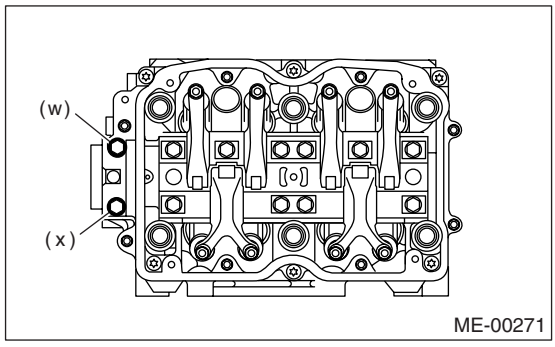

3) Apply a coat of grease to oil seal lips, and then install the oil seal (A) on camshaft using ST1 and ST2.

NOTE:
Use a new oil seal.

ST1 499597000 OIL SEAL GUIDE
ST2 499587500 OIL SEAL INSTALLER

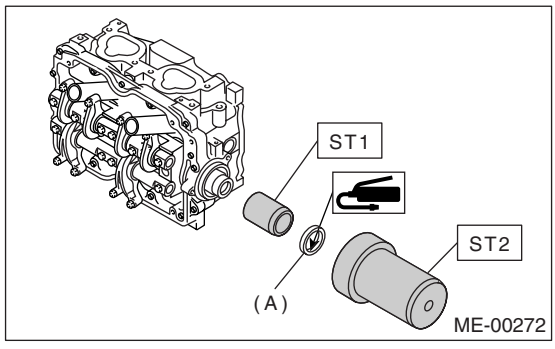

4) Install the plug using ST.

ST 499587700 CAMSHAFT OIL SEAL INSTALLER

5) Adjust the valve clearance. <Ref. to ME(H4SO)-33, ADJUSTMENT, Valve Clearance.>

6) Install the rocker cover and connect PCV hose.
7) Install the oil level gauge guide. (LH side only)
8) Install the camshaft position sensor support. (LH side only)
9) Install the tensioner bracket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

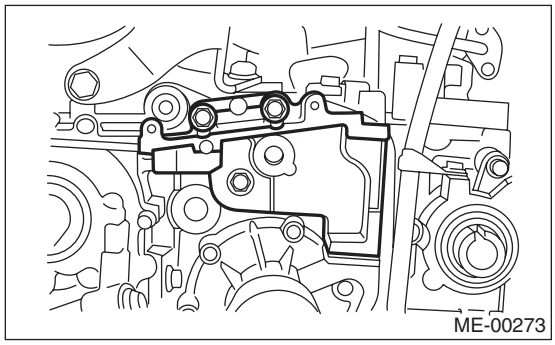

10) Install the timing belt cover No. 2 (RH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

11) Install the timing belt cover No. 2 (LH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

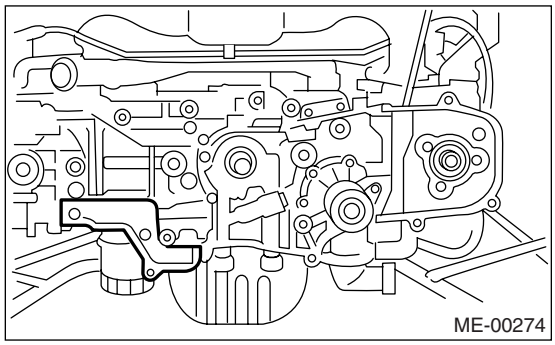

12) Install the crankshaft sprocket. <Ref. to ME(H4SO)-57, INSTALLATION, Crankshaft Sprocket.>
13) Install the camshaft sprocket. <Ref. to ME(H4SO)-55, INSTALLATION, Camshaft Sprocket.>
14) Install the timing belt assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>
15) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>
16) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
17) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1. CAMSHAFT

1) Measure the bend, and repair or replace if necessary.

Limit:
0.025 mm (0.0010 in)

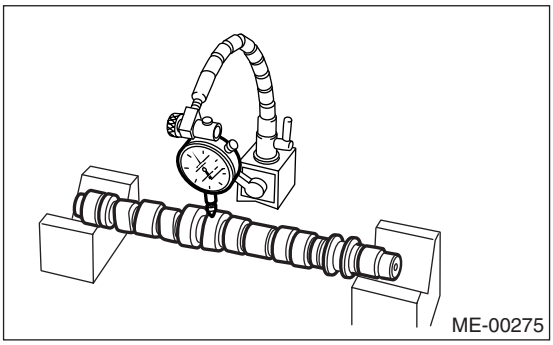

2) Check the journal for damage and wear. Replace if faulty.
3) Measure the outside diameter of camshaft journal and inside diameter of cylinder head journal, and determine the difference between two (= oil clearance). If the oil clearance exceeds specifications, replace the camshaft or cylinder head as necessary.

		Unit: mm (in)
Clearance at journal	Standard	0.055 — 0.090 (0.0022 — 0.0035)
	Limit	0.10 (0.0039)
Camshaft journal O.D.		31.928 — 31.945 (1.2570 — 1.2577)
Journal hole I.D.		32.000 — 32.018 (1.2598 — 1.2605)

4) Check the cam face condition; remove the minor faults by grinding with oil stone. Measure the cam height H; replace if the limit has been exceeded.

Cam height: H

Model	Item		Unit: mm (in)
1.6 L	Intake	STD	39.378 — 39.478 (1.5503 — 1.5542)
		Limit	39.278 (1.5464)
	Exhaust	STD	39.565 — 39.665 (1.5577 — 1.5616)
		Limit	39.465 (1.5537)
2.0 L	Intake	STD	38.732 — 38.832 (1.5249 — 1.5288)
		Limit	38.632 (1.5209)
	Exhaust	STD	39.257 — 39.357 (1.5455 — 1.5495)
		Limit	39.157 (1.5416)
2.5 L	Intake	STD	39.485 — 39.585 (1.5545 — 1.5585)
		Limit	39.385 (1.5506)
	Exhaust	STD	39.257 — 39.357 (1.5455 — 1.5495)
		Limit	39.157 (1.5416)

Cam base circle diameter A:
IN: 34.00 mm (1.3386 in)
EX: 34.00 mm (1.3386 in)

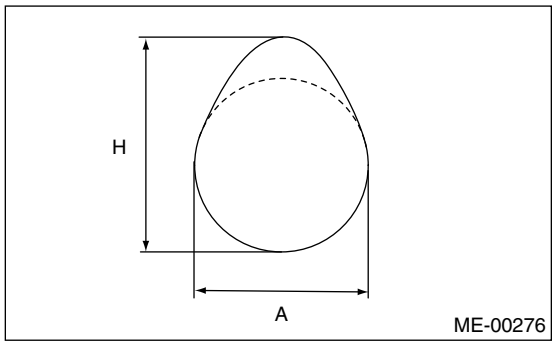

2. CAMSHAFT SUPPORT

Measure the thrust clearance of camshaft with dial gauge. If the clearance exceeds the limit, replace the camshaft support.

Standard:
0.030 — 0.090 mm (0.0012 — 0.0035 in)

Limit:
0.10 mm (0.0039 in)

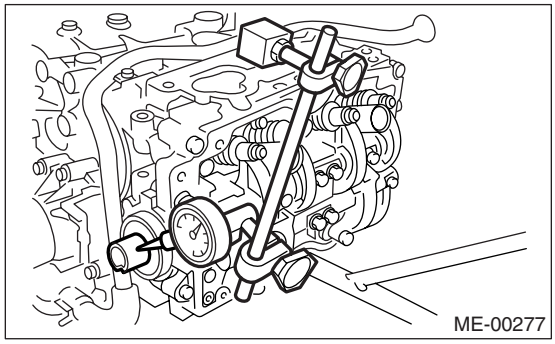

20.Cylinder Head Assembly

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4SO)-50, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4SO)-55, REMOVAL, Camshaft Sprocket.>
6) Remove the intake manifold. <Ref. to FU(H4SO)-16, REMOVAL, Intake Manifold.> or <Ref. to FU(H4SOw/oOBD)-16, REMOVAL, Intake Manifold.>
7) Remove the bolt which installs the A/C compressor bracket on cylinder head.
8) Remove the valve rocker assembly. <Ref. to ME(H4SO)-58, REMOVAL, Valve Rocker Assembly.>
9) Remove the camshaft. <Ref. to ME(H4SO)-60, REMOVAL, Camshaft.>
10) Remove the cylinder head bolts in alphabetical sequence shown in the figure.

NOTE:
Leave the bolts (a) and (c) engaged by three or four threads to prevent cylinder head from falling.

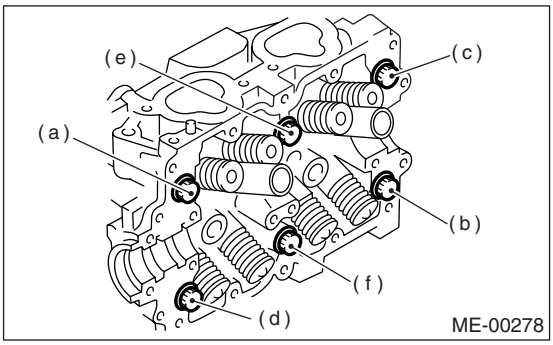

11) While tapping the cylinder head with a plastic hammer, separate it from cylinder block.
12) Remove the bolts (a) and (c) to remove cylinder head.

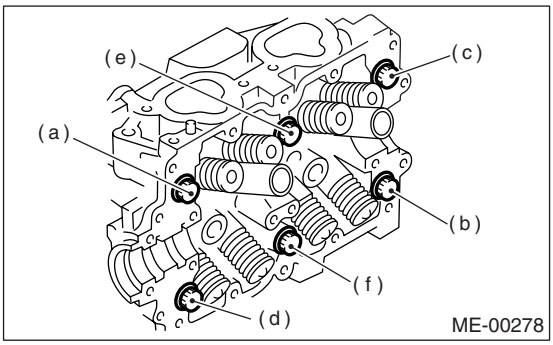

13) Remove the cylinder head gasket.

CAUTION:
Do not scratch the mating surface of cylinder head and cylinder block.

14) Similarly, remove the right side cylinder head.

B: INSTALLATION

1) Install the cylinder head and gaskets on cylinder block.

CAUTION:
- **Use new cylinder head gaskets.**
- **Be careful not to scratch the mating surface of cylinder block and cylinder head.**

2) Tighten the cylinder head bolts.
   (1) Apply a coat of engine oil to the washers and bolt threads.
   (2) Tighten all bolts to 29 N·m (3.0 kgf-m, 22 ft-lb) in alphabetical sequence.
   Then tighten all bolts to 69 N·m (7.0 kgf-m, 51 ft-lb) in alphabetical sequence.
   (3) Back off all bolts by 180° first; back them off by 180° again in reverse order of installation.
   (4) Tighten the bolts (a) and (b) to 34 N·m (3.5 kgf-m, 25 ft-lb) in reverse order of installation.
   (5) Tighten the bolts (c), (d), (e) and (f) to 15 N·m (1.5 kgf-m, 11 ft-lb).
   (6) Tighten all bolts by 80° to 90° in alphabetical sequence.

CAUTION:
Do not tighten bolts more than 90°.

   (7) Further tighten all bolts by 80° to 90° in alphabetical sequence shown in figure below.

CAUTION:
Ensure that the total "re-tightening angle" [in the former two steps], do not exceed 180°.

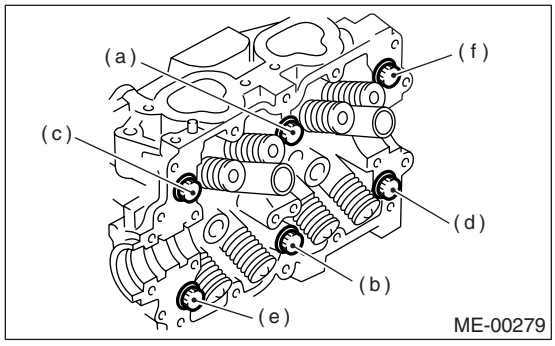

3) Install the camshaft. <Ref. to ME(H4SO)-61, INSTALLATION, Camshaft.>
4) Install the valve rocker assembly. <Ref. to ME(H4SO)-58, INSTALLATION, Valve Rocker Assembly.>
5) Install the A/C compressor bracket on cylinder head.
6) Install the intake manifold. <Ref. to FU(H4SO)-18, INSTALLATION, Intake Manifold.> or <Ref. to FU(H4SOw/oOBD)-18, INSTALLATION, Intake Manifold.>
7) Install the camshaft sprocket. <Ref. to ME(H4SO)-55, INSTALLATION, Camshaft Sprocket.>
8) Install the timing belt assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>
9) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>
10) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
11) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>

C: DISASSEMBLY

1) Place the cylinder head on ST.
ST 498267800 CYLINDER HEAD TABLE
2) Set the ST on valve spring. Compress the valve spring, and then remove the valve spring retainer key. Remove each valve and valve spring.
ST 499718000 VALVE SPRING REMOVER

CAUTION:
- **Mark each valve to prevent confusion.**
- **Use extreme care not to damage the lips of intake valve oil seals and exhaust valve oil seals.**

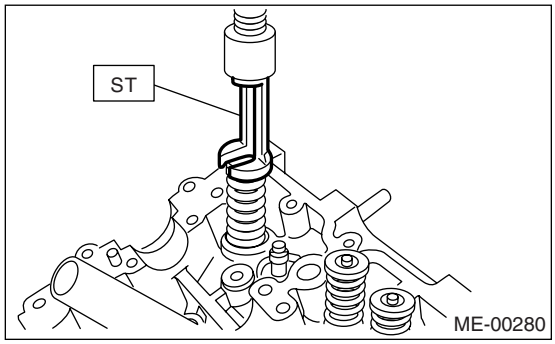

D: ASSEMBLY

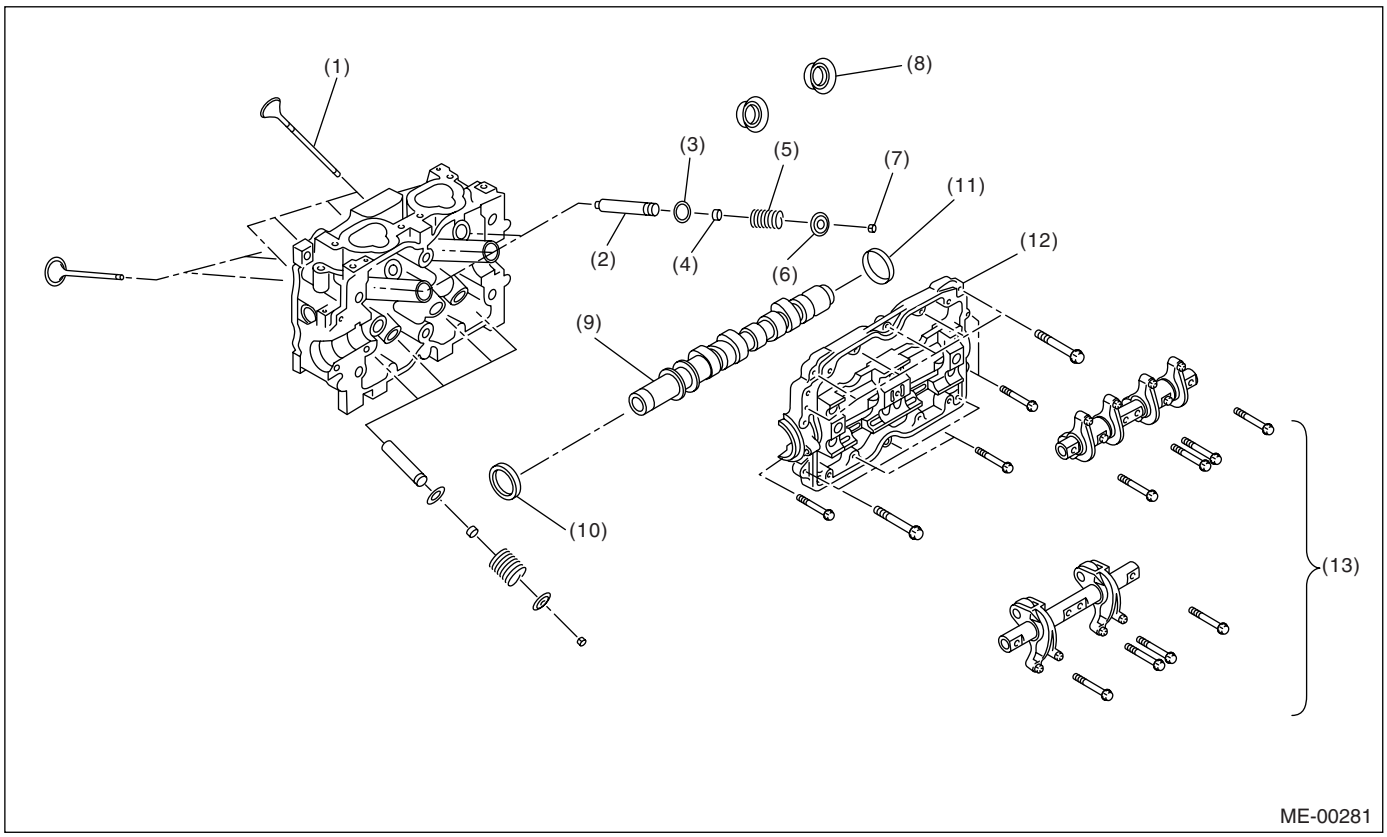

(1) Valve
(2) Valve guide
(3) Valve spring seat
(4) Oil seal
(5) Valve spring
(6) Retainer
(7) Retainer key
(8) Spark plug gasket
(9) Camshaft
(10) Oil seal
(11) Plug
(12) Camshaft cap
(13) Valve rocker ASSY

1) Installation of valve spring and valve
(1) Place the cylinder head on ST.

ST 498267800 CYLINDER HEAD TABLE

(2) Coat the stem of each valve with engine oil and insert valve into valve guide.

NOTE:
When inserting the valve into valve guide, use special care not to damage the oil seal lip.

(3) Install the valve spring and retainer.

NOTE:
Be sure to install the valve springs with their close-coiled end facing the seat on the cylinder head.

(4) Set the ST on valve spring.

ST 499718000 VALVE SPRING REMOVER

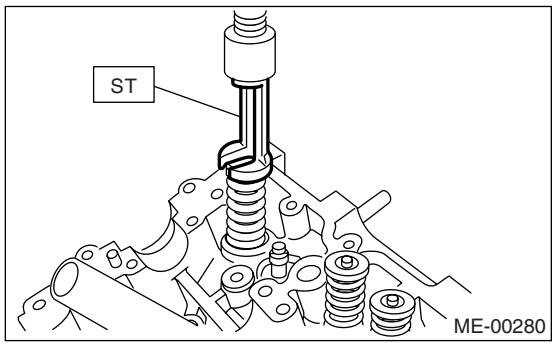

(5) Compress the valve spring, and then fit the valve spring retainer key.

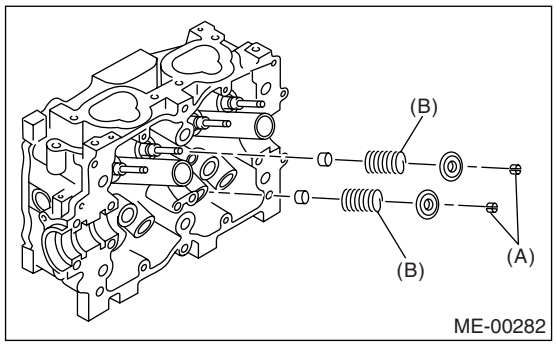

(A) Retainer key
(B) Valve spring

(6) After installing, tap the valve spring retainers lightly with plastic hammer for better seating.

E: INSPECTION

1. VALVE SPRING

1) Check the valve springs for damage, free length, and tension. Replace the valve spring if it is not to the specifications presented below.
2) To measure the squareness of valve spring, stand the spring on a surface plate and measure its deflection at the top using a try square.

Free length		54.30 mm (2.1378 in)
Squareness		2.5°, 2.4 mm (0.094 in)
Tension/spring height	Set	214 — 246 N (22 — 25 kgf, 48 — 55 lb)/ 45.0 mm (1.772 in)
	Lift	526 — 582 N (54 — 59 kgf, 119 — 130 lb)/ 34.7 mm (1.366 in)

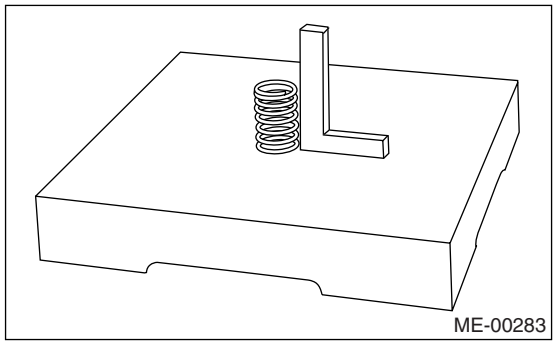

2. INTAKE AND EXHAUST VALVE OIL SEAL

Replace the oil seal with new one, if lip is damaged or spring out of place, or when the surfaces of intake valve and valve seat are reconditioned or intake valve guide is replaced. Use pliers to pinch and remove oil seal from valve.
1) Place the cylinder head on ST1.
2) Press-fit oil seal using ST2.

CAUTION:
• Apply engine oil to oil seal before press-fitting.
• When press-fitting oil seal, do not use hammer or strike in.
• Differentiate between intake valve oil seal and exhaust valve oil seal by noting their difference in color.

ST1 498267800 CYLINDER HEAD TABLE
ST2 498857100 VALVE OIL SEAL GUIDE

Color of rubber part:
Intake [Black]
Exhaust [Brown]

Color of spring part:
Intake [Silver]
Exhaust [Silver]

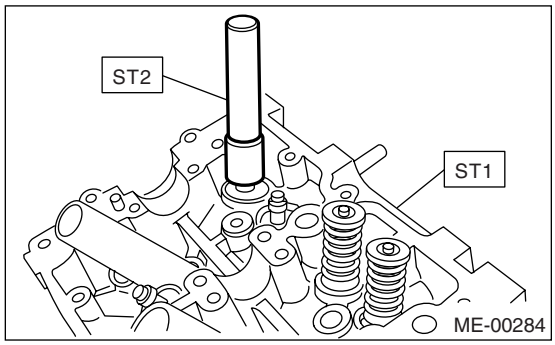

F: ADJUSTMENT

1. CYLINDER HEAD

1) Make sure that no crack or other damage exists. In addition to visual inspection, inspect important areas by means of red lead check.
Also make sure that gasket installing surface shows no trace of gas and water leaks.
2) Place the cylinder head on ST.
ST 498267800 CYLINDER HEAD TABLE
3) Measure the warping of the cylinder head surface that mates with crankcase using a straight edge and thickness gauge.
If the warping exceeds 0.05 mm (0.0020 in), regrind the surface with a surface grinder.

Warping limit:
0.05 mm (0.0020 in)

Grinding limit:
0.1 mm (0.004 in)

Standard height of cylinder head:
97.5 mm (3.839 in)

NOTE:
Uneven torque for the cylinder head bolts can cause warping. When reassembling, pay special attention to the torque so as to tighten evenly.

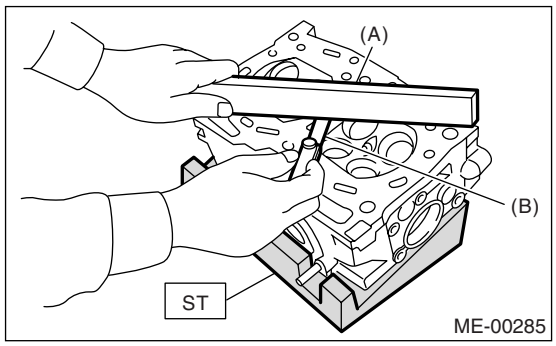

(A) Straight edge
(B) Thickness gauge

2. VALVE SEAT

Inspect the intake and exhaust valve seats, and then correct the contact surfaces with valve seat cutter if they are defective or when valve guides are replaced.

Valve seat width: W
Intake (A)
Standard 1.0 mm (0.039 in)
Limit 1.7 mm (0.067 in)
Exhaust (B)
Standard 1.5 mm (0.059 in)
Limit 2.2 mm (0.087 in)

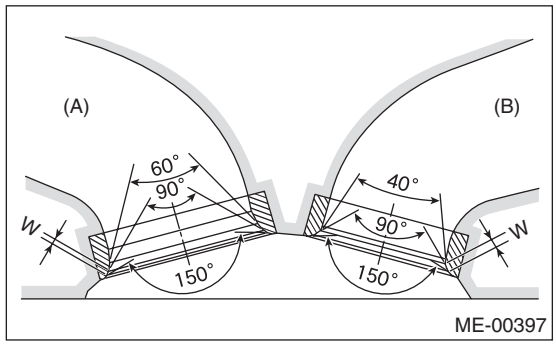

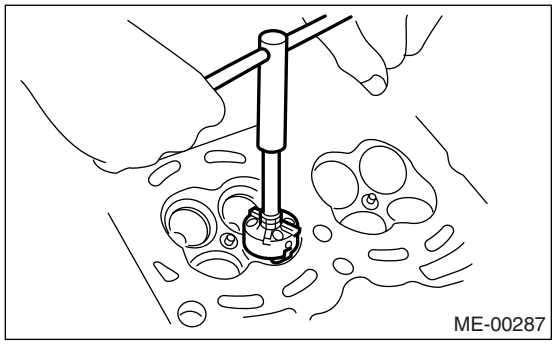

3. VALVE GUIDE

1) Check the clearance between valve guide and stem. The clearance can be checked by measuring the outside diameter of valve stem and the inside diameter of valve guide with outside and inside micrometers respectively.

Clearance between the valve guide and valve stem:
Standard
Intake 0.035 — 0.062 mm (0.0014 — 0.0024 in)
Exhaust 0.040 — 0.067 mm (0.0016 — 0.0026 in)
Limit
0.15 mm (0.0059 in)

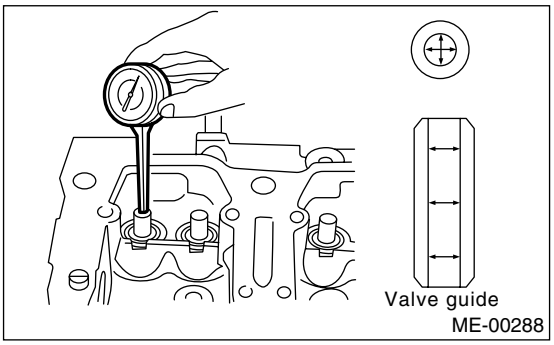

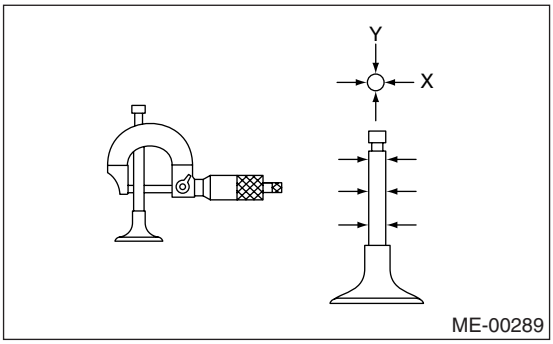

2) If the clearance between valve guide and stem exceeds the limit, replace the valve guide or valve itself whichever shows greater amount of wear. See the following procedure for valve guide replacement.

Valve guide inner diameter:
6.000 — 6.012 mm (0.2362 — 0.2367 in)

Valve stem outer diameters:
Intake
5.950 — 5.965 mm (0.2343 — 0.2348 in)
Exhaust
5.945 — 5.960 mm (0.2341 — 0.2346 in)

(1) Place the cylinder head on ST1 with the combustion chamber upward so that valve guides enter the holes in ST1.
(2) Insert the ST2 into valve guide and press it down to remove valve guide.

ST1 498267800 CYLINDER HEAD TABLE
ST2 499767200 VALVE GUIDE REMOVER

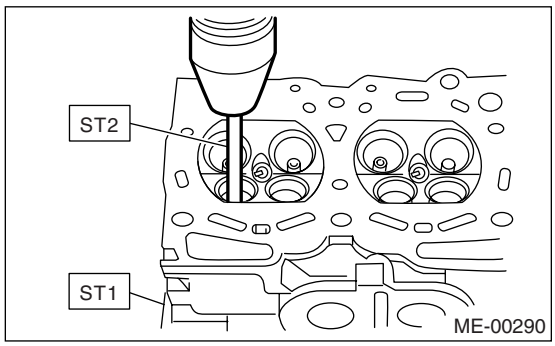

(3) Turn the cylinder head upside down and place ST as shown in the figure.

Intake side:
ST 499767700 VALVE GUIDE ADJUSTER
Exhaust side:
ST 499767800 VALVE GUIDE ADJUSTER

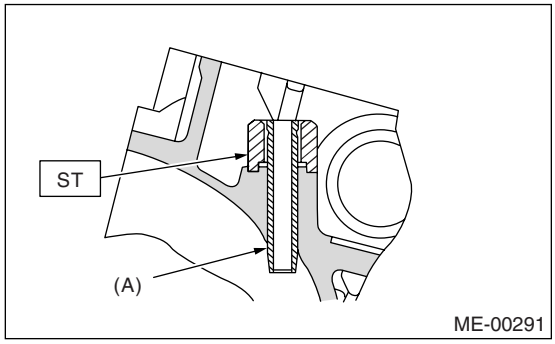

(A) Valve guide

(4) Before installing new oversize valve guide, make sure that neither scratches nor damages exist on the inside surface of valve guide holes in cylinder head.

(5) Put new valve guide, coated with sufficient oil, in the cylinder, and then insert the ST1 into valve guide. Press in until the valve guide upper end is flush with the upper surface of ST2.

ST1 499767200 VALVE GUIDE REMOVER
Intake side:
ST2 499767700 VALVE GUIDE ADJUSTER
Exhaust side:
ST2 499767800 VALVE GUIDE ADJUSTER

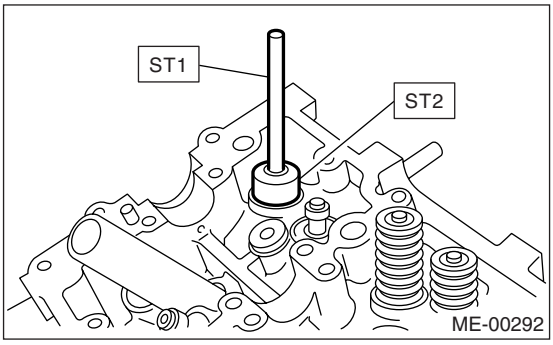

(6) Check the valve guide protrusion.

Valve guide protrusion: L
Intake
20.0 — 20.5 mm (0.787 — 0.807 in)
Exhaust
16.5 — 17.0 mm (0.650 — 0.669 in)

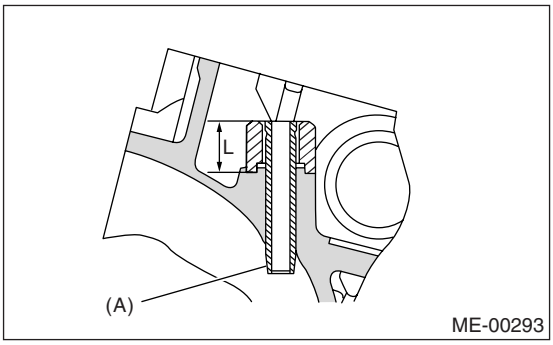

(A) Valve guide

(7) Ream the inside of valve guide with ST. Gently rotate the reamer clockwise while pressing it lightly into valve guide, and return it also rotating clockwise. After reaming, clean the valve guide to remove chips.

CAUTION:
• Apply engine oil to the reamer when reaming.
• If the inner surface of the valve guide is torn, the edge of the reamer should be slightly ground with an oil stone.
• If the inner surface of the valve guide becomes lustrous and the reamer does not chips, use a new reamer or remedy the reamer.

ST 499767400 VALVE GUIDE REAMER

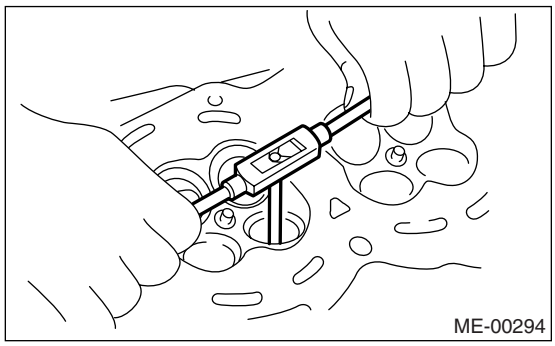

(8) Recheck the contact condition between valve and valve seat after replacing valve guide.

4. INTAKE AND EXHAUST VALVE

1) Inspect the flange and stem of valve, and replace if damaged, worn, or deformed, or if "H" is less than the specified limit.

H:
Intake
Standard 1.0 mm (0.039 in)
Limit 0.6 mm (0.024 in)
Exhaust
Standard 1.2 mm (0.047 in)
Limit 0.6 mm (0.024 in)

Valve overall length:
Intake
120.6 mm (4.75 in)
Exhaust
121.7 mm (4.79 in)

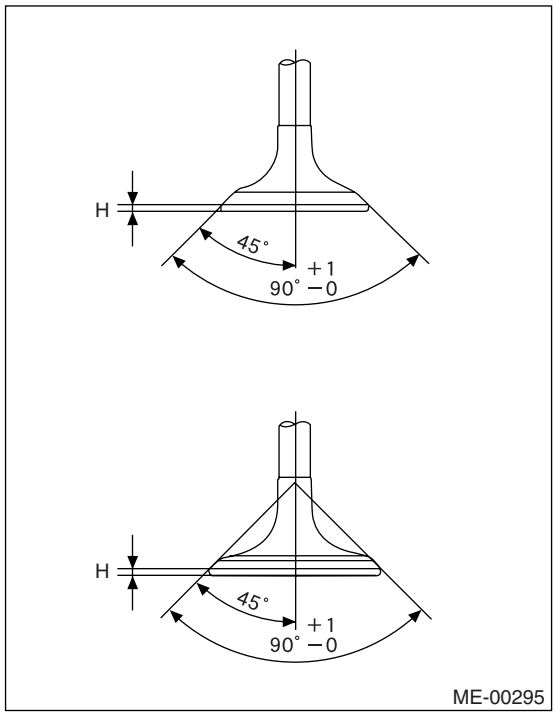

2) Put a small amount of grinding compound on the seat surface and lap the valve and seat surface. <Ref. to ME(H4SO)-68, VALVE SEAT, ADJUSTMENT, Cylinder Head Assembly.> Install a new intake valve oil seal after lapping.

21.Cylinder Block

A: REMOVAL

NOTE:
Before conducting this procedure, drain the engine oil completely if applicable.

1) Remove the intake manifold. <Ref. to FU(H4SO)-16, REMOVAL, Intake Manifold.> or <Ref. to FU(H4SOw/oOBD)-16, REMOVAL, Intake Manifold.>
2) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
3) Remove the crankshaft pulley. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
4) Remove the timing belt cover. <Ref. to ME(H4SO)-49, REMOVAL, Timing Belt Cover.>
5) Remove the timing belt assembly. <Ref. to ME(H4SO)-50, REMOVAL, Timing Belt Assembly.>
6) Remove the camshaft sprocket. <Ref. to ME(H4SO)-55, REMOVAL, Camshaft Sprocket.>
7) Remove the crankshaft sprocket. <Ref. to ME(H4SO)-47, REMOVAL, Crankshaft Pulley.>
8) Remove the generator and A/C compressor with their brackets.
9) Remove the rocker cover.
10) Remove the cylinder head bolts in alphabetical sequence shown in the figure.

NOTE:
Leave bolts (a) and (c) engaged by three or four threads to prevent cylinder head from falling.

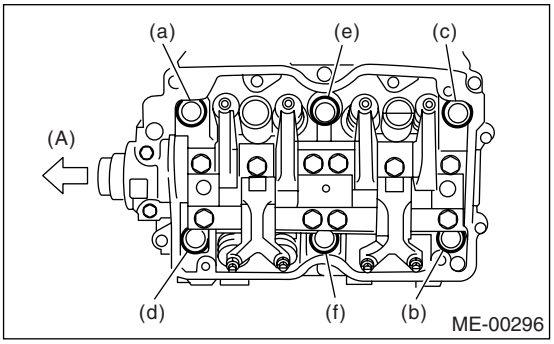

(A) Front

11) While tapping the cylinder head with a plastic hammer, separate it from cylinder block.

12) Remove the bolts (a) and (c) to remove cylinder head.

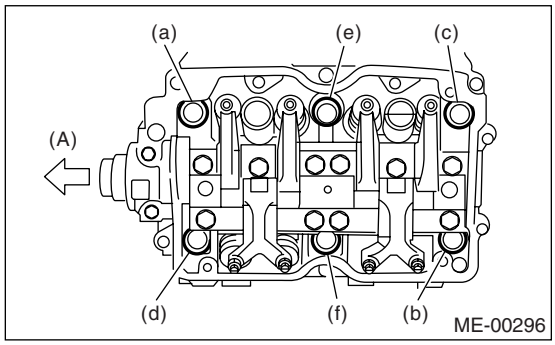

(A) Front

13) Remove the cylinder head gasket.

NOTE:
Do not scratch the mating surface of cylinder head and cylinder block.

14) Similarly, remove the right side cylinder head.
15) Remove the clutch housing cover. (MT model)
16) Remove the flywheel (MT model) or drive plate (AT model).
Using the ST, lock the crankshaft.
ST 498497100 CRANKSHAFT STOPPER

- MT MODEL

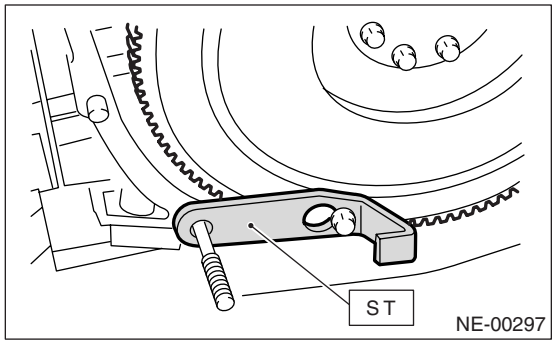

- AT MODEL

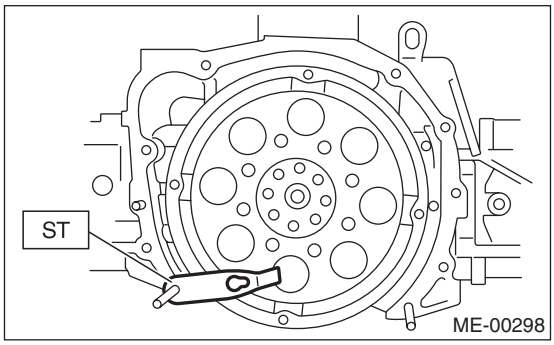

NOTE:
Using STs, remove the flywheel. (2.5 L MT model)
ST1 498497100CRANKSHAFT STOPPER
ST2 499057000 TORX PLUS

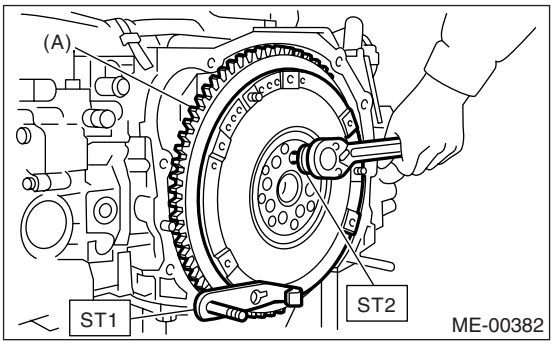

(A) Flywheel

17) Remove the oil separator cover.
18) Remove the water by-pass pipe for heater.
19) Loosen the bolts in alphabetical sequence as shown in the figure, and then remove the water pump.

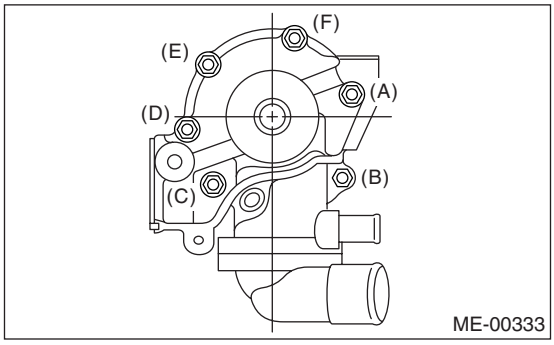

20) Remove the oil pump from cylinder block.
Use a flat-bladed screwdriver as shown in the figure when removing oil pump.

CAUTION:
Be careful not to scratch the mating surface of cylinder block and oil pump.

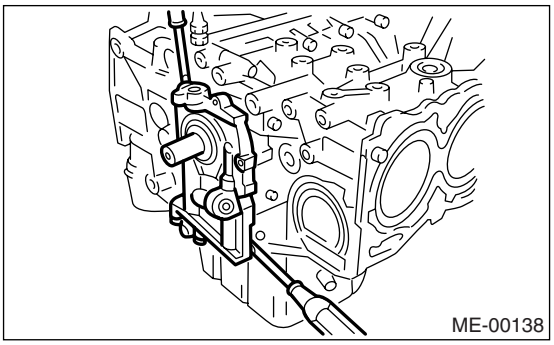

21) Removal of oil pan
(1) Turn the cylinder block to face the #2 and #4 piston sides upward.
(2) Remove the bolts which secure the oil pan to cylinder block.
(3) Insert a oil pan cutter blade between cylinder block-to-oil pan clearance, and then remove the oil pan.

NOTE:
Do not use a screwdriver or similar tool in place of oil pan cutter.

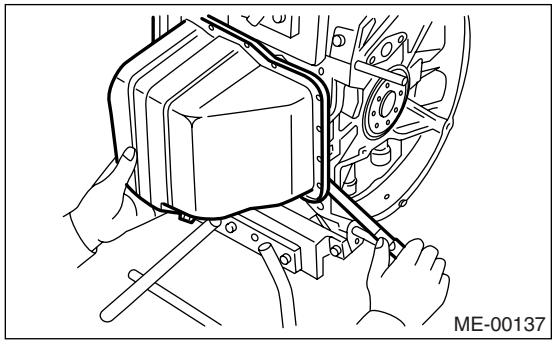

22) Remove the oil strainer stay.
23) Remove the oil strainer.
24) Remove the baffle plate.
25) Remove the oil filter using ST.
ST 498547000 OIL FILTER WRENCH

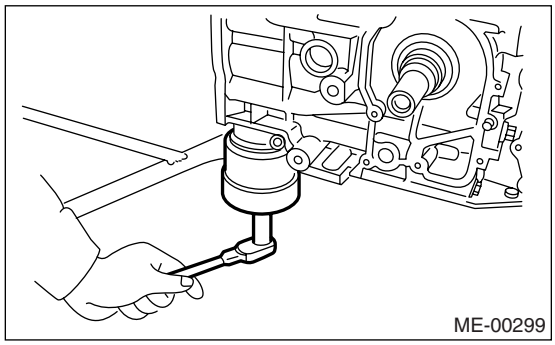

26) Remove the water pipe.

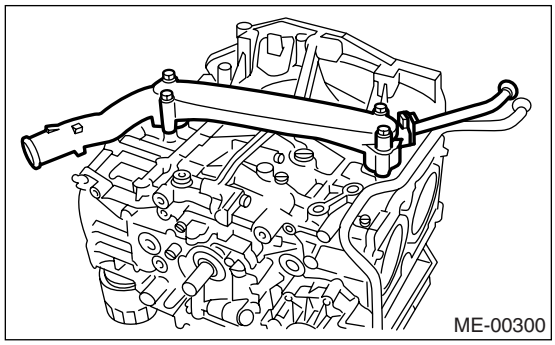

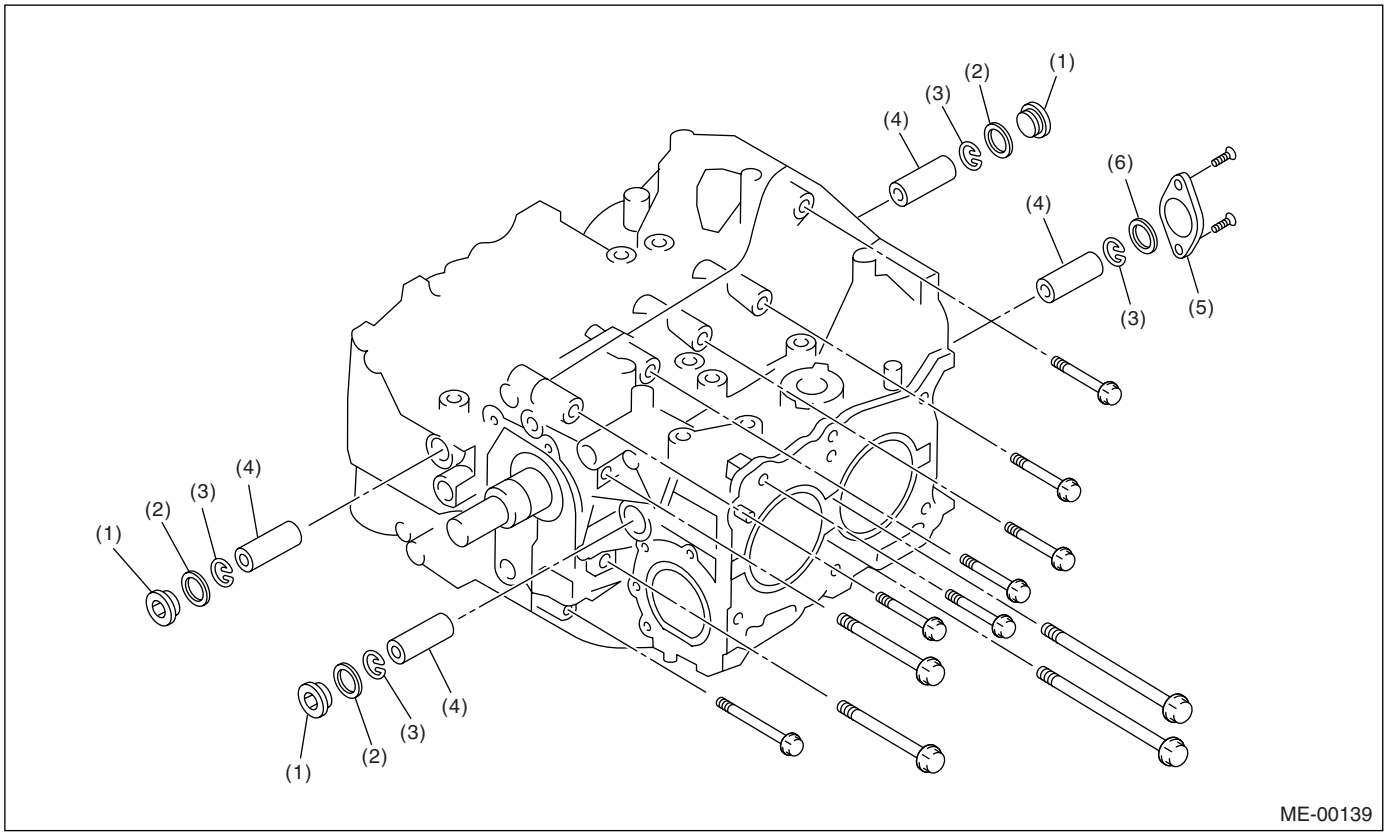

(1) Service hole plug
(2) Gasket
(3) Circlip
(4) Piston pin
(5) Service hole cover
(6) O-ring

27) Remove the service hole cover and service hole plugs using hexagon wrench [14 mm (0.55 in)].

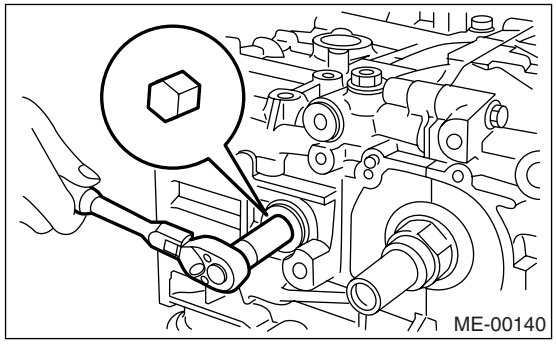

28) Rotate the crankshaft to bring #1 and #2 pistons to bottom dead center position, and then remove the piston circlip through service hole of #1 and #2 cylinders.

ST 499897200 PISTON CIRCLIP PLIER

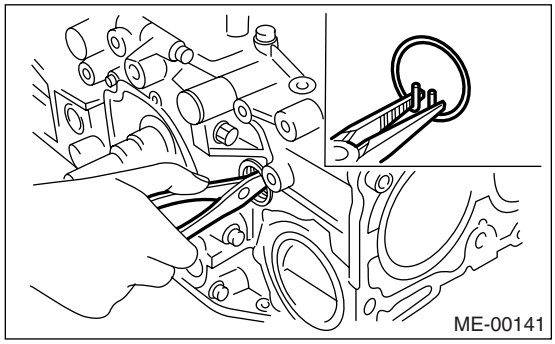

29) Draw out the piston pin from #1 and #2 pistons using ST.
ST 499097700 PISTON PIN REMOVER

NOTE:
Be careful not to confuse the original combination of piston, piston pin and cylinder.

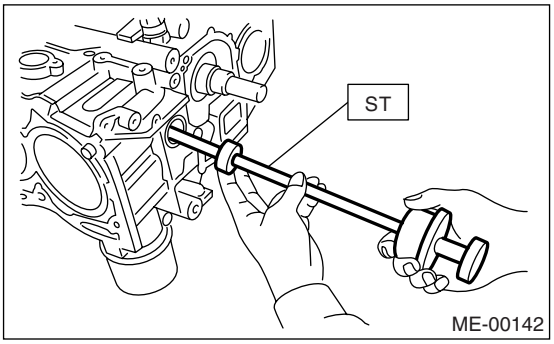

30) Similarly remove the piston pins from #3 and #4 pistons.
31) Remove the bolts which connect the cylinder block on the side of #2 and #4 cylinders.
32) Back off the bolts which connect the cylinder block on the side of #1 and #3 cylinders two or three turns.
33) Set up the cylinder block so that #1 and #3 cylinders are on the upper side, and then remove the cylinder block connecting bolts.
34) Separate the cylinder blocks (RH) and (LH).

NOTE:
When separating the cylinder block, do not allow the connecting rod to fall and damage the cylinder block.

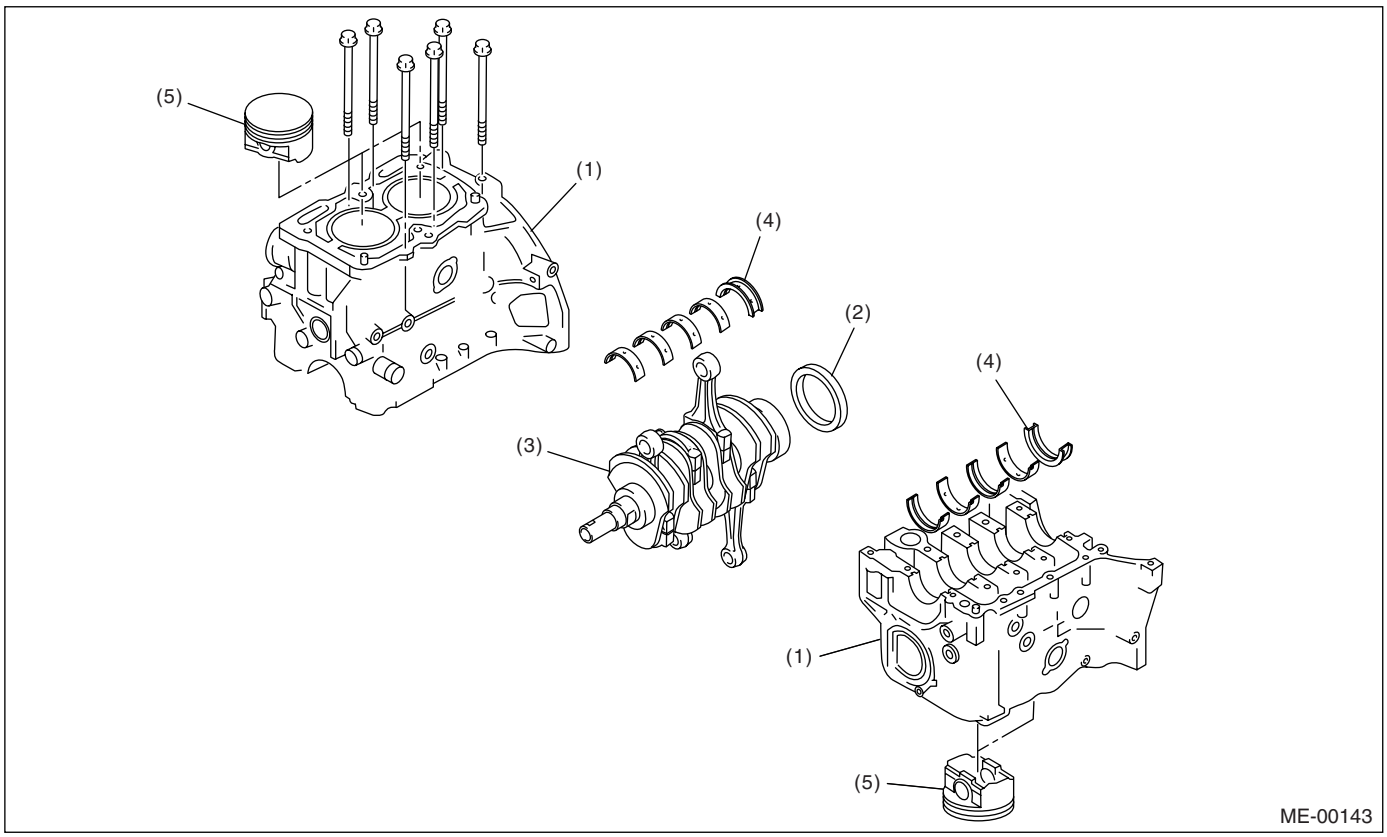

(1) Cylinder block
(2) Rear oil seal
(3) Crankshaft
(4) Crankshaft bearing
(5) Piston

35) Remove the rear oil seal.
36) Remove the crankshaft together with connecting rod.
37) Remove the crankshaft bearings from cylinder block using hammer handle.

NOTE:
Do not confuse the combination of crankshaft bearings. Press bearing at the end opposite to locking lip.

38) Draw out each piston from cylinder block using wooden bar or hammer handle.

NOTE:
Do not confuse the combination of piston and cylinder.

B: INSTALLATION

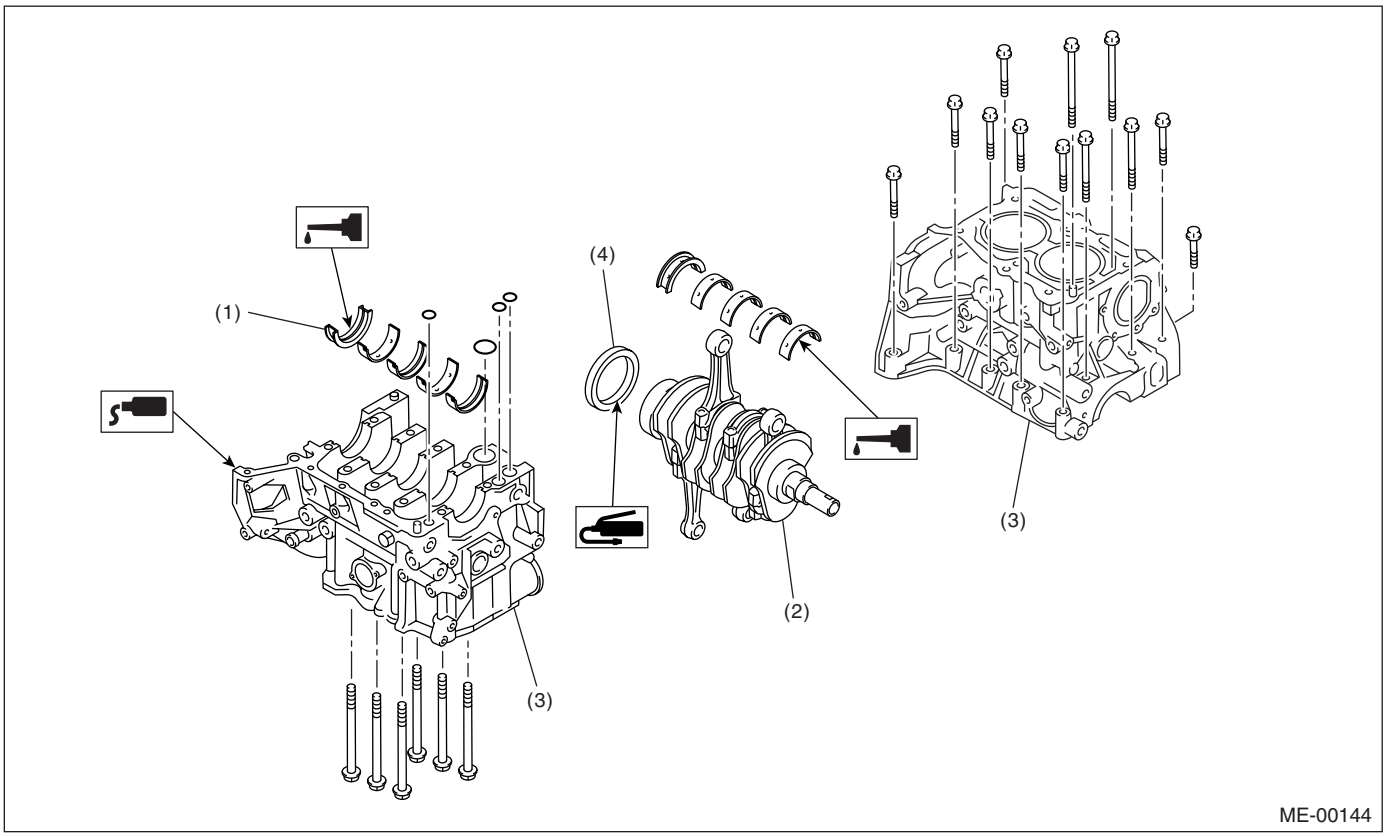

(1) Crankshaft bearing
(2) Crankshaft
(3) Cylinder block
(4) Rear oil seal

NOTE:
Remove oil in the mating surface of bearing and cylinder block before installation. Also apply a coat of engine oil to crankshaft pins.

1) Position the crankshaft on #2 and #4 cylinder block.
2) Apply fluid packing to the mating surface of #1 and #3 cylinder block, and position it on #2 and #4 cylinder block.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

NOTE:
Do not allow fluid packing to jut into O-ring grooves, oil passages, bearing grooves, etc.

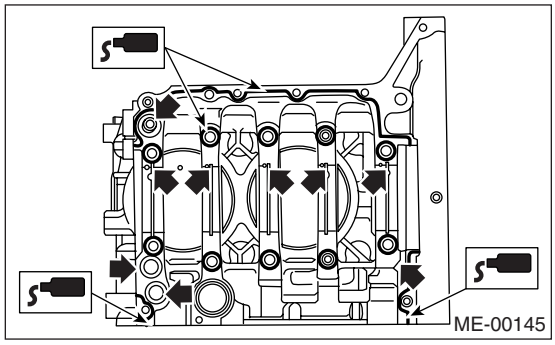

3) Tighten the 10 mm cylinder block connecting bolts in alphabetical sequence shown in the figure. (LH side)

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

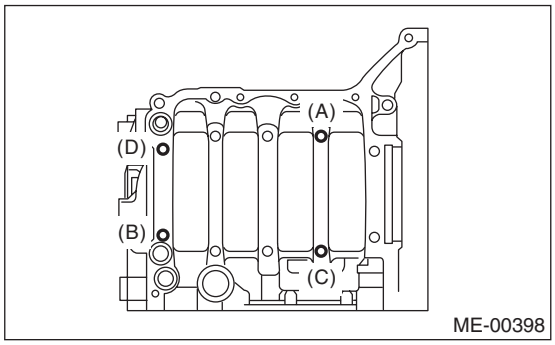

4) Tighten the 10 mm cylinder block connecting bolts in alphabetical sequence shown in the figure. (RH side)

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

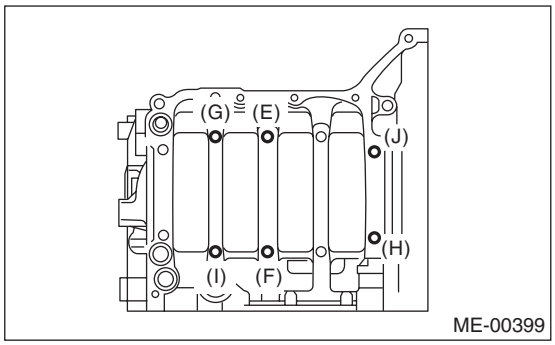

5) Further tighten the LH side bolts (A — D) to 90° in alphabetical sequence.

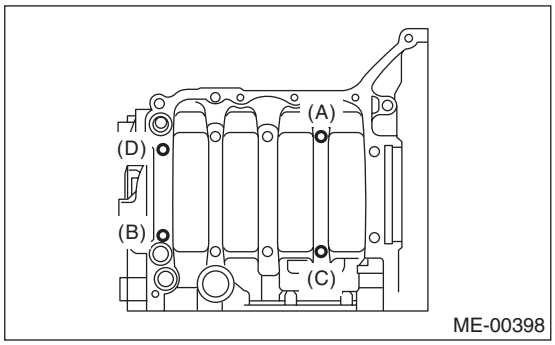

6) Further tighten the RH side bolts (E — J) to 90° in alphabetical sequence.

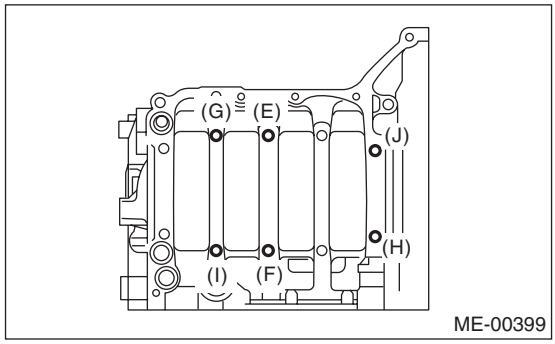

7) Tighten the 8 mm and 6 mm cylinder block connecting bolts in alphabetical sequence shown in the figure.

Tightening torque:
(A) — (G): 25 N·m (2.5 kgf-m, 18.1 ft-lb)
(H): 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

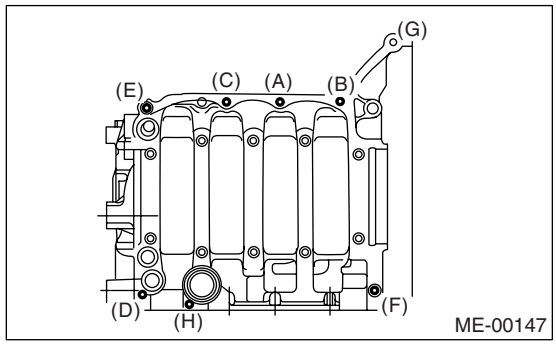

8) Install the rear oil seal using ST1 and ST2.
ST1 499597100 OIL SEAL GUIDE
ST2 499587200 OIL SEAL INSTALLER

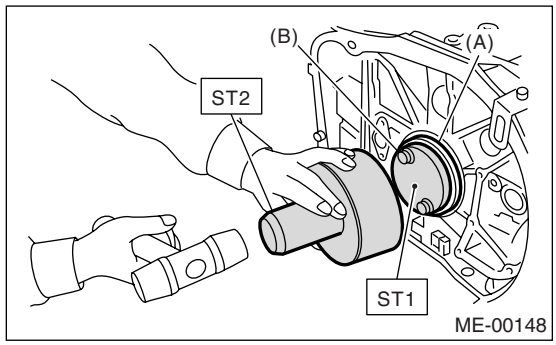

(A) Rear oil seal
(B) Flywheel attaching bolt

9) Position the top ring gap at (A) or (B) in the figure.

10) Position the second ring gap at 180° on the reverse side for top ring gap.

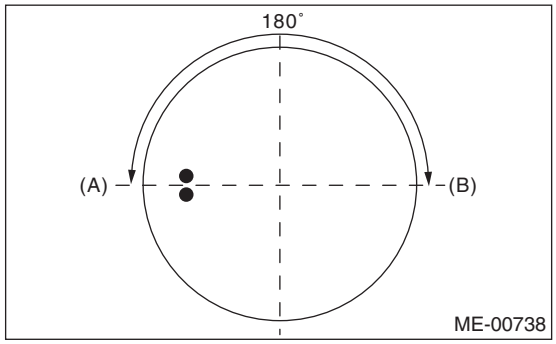

11) Position the expander gap at (C) in the figure.

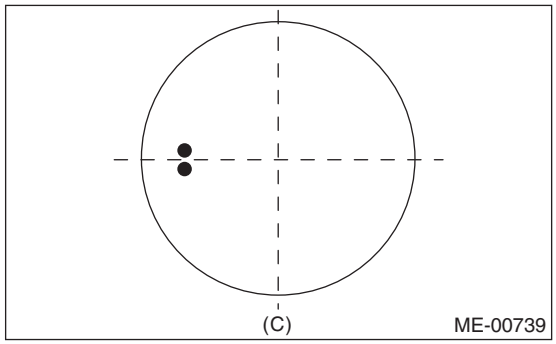

12) Position the lower rail gap at (D) in the figure.

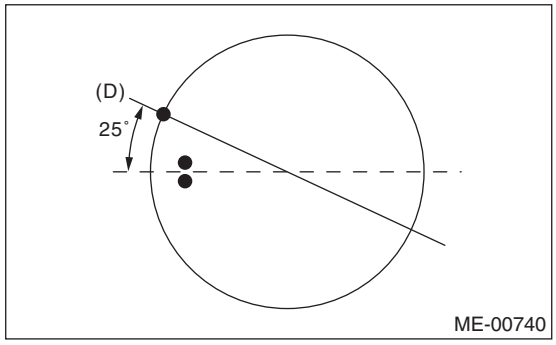

NOTE:
Align the lower rail stopper (F) to the lateral hole (E) on the piston.

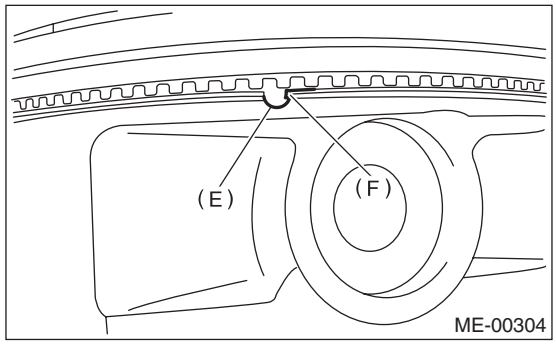

13) Position the upper rail gap at (G) in the figure.

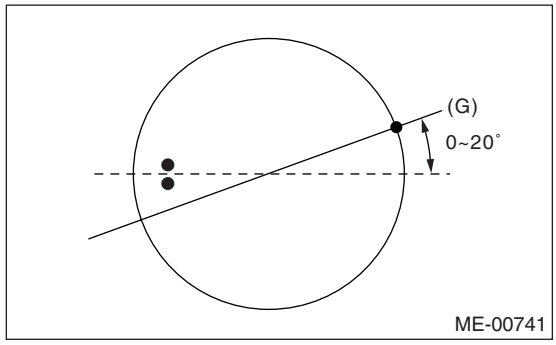

CAUTION:
• Ensure ring gaps do not face the same direction.
• Ensure ring gaps are not within the piston skirt area.

14) Install the circlip.
Install circlips in the piston holes located opposite service holes in cylinder block, when positioning all pistons in the corresponding cylinders.

NOTE:
Use new circlips.

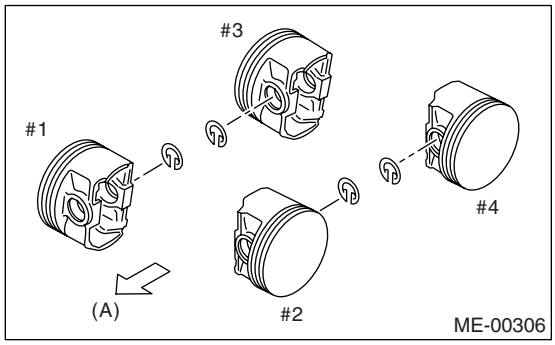

(A) Front side

CAUTION:
Piston front mark faces towards the front of the engine.

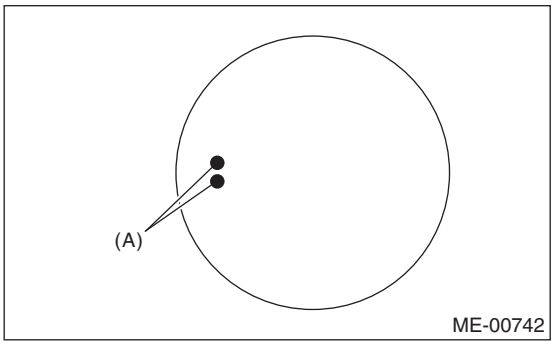

(A) Front mark

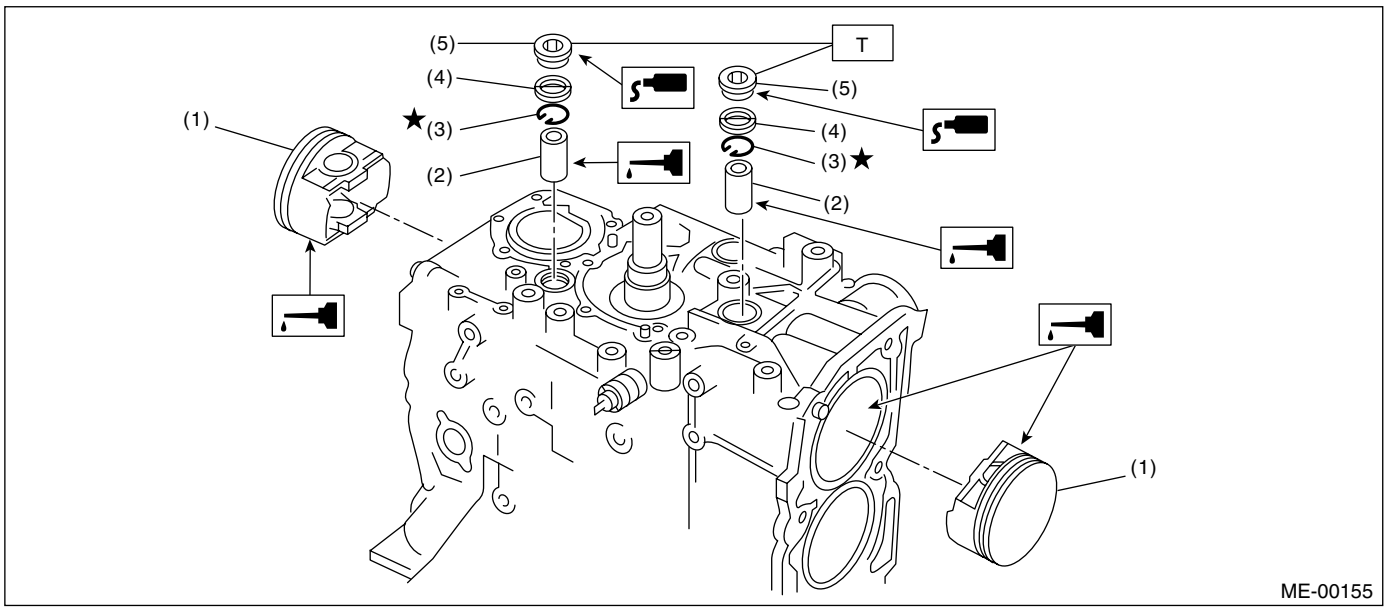

(1) Piston
(2) Piston pin
(3) Circlip
(4) Gasket
(5) Service hole plug

Tightening torque: N·m (kgf-m, ft-lb)
T: 70 (7.0, 50.6)

15) Installing piston
(1) Turn the cylinder block to face the #1 and #2 piston side upward.
(2) Using the ST1, turn the crankshaft so that #1 and #2 connecting rods are set at bottom dead center.

ST1 499987500 CRANKSHAFT SOCKET

(3) Apply a coat of engine oil to pistons and cylinders, and then insert the pistons in their cylinders using ST2.

ST2 498747000 PISTON GUIDE (1.6 L model)
ST2 398744300 PISTON GUIDE (2.0 L model)
ST2 498747300 PISTON GUIDE (2.5 L model)

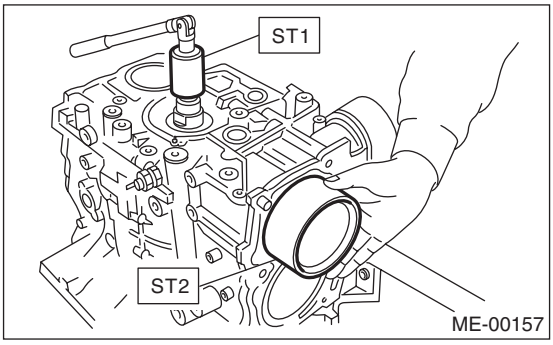

16) Installing piston pin
(1) Apply a coat of engine oil to the ST3 before insertion.
(2) Insert the ST3 into service hole to align piston pin hole with connecting rod small end.

ST3 499017100 PISTON PIN GUIDE

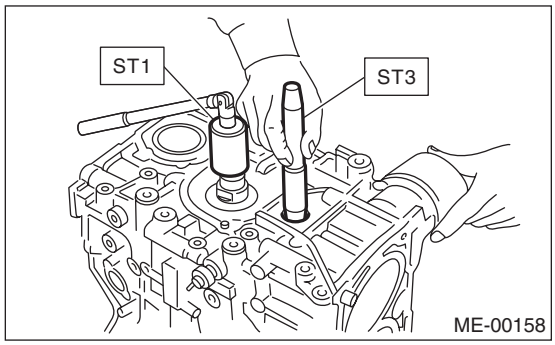

(3) Apply a coat of engine oil to the piston pin, and then insert the piston pin into piston and connecting rod through service hole.
(4) Install the circlip.

NOTE:
Use new circlips.

ST3 499897200 PISTON CIRCLIP PLIER

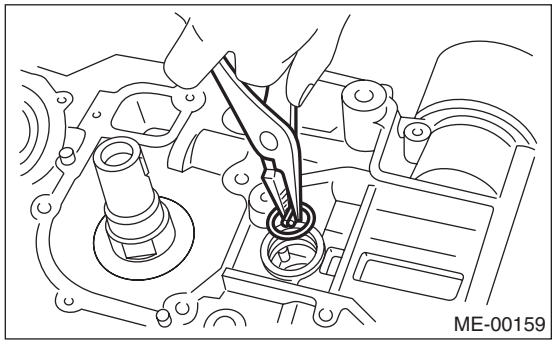

(5) Apply fluid packing around the service hole plug.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

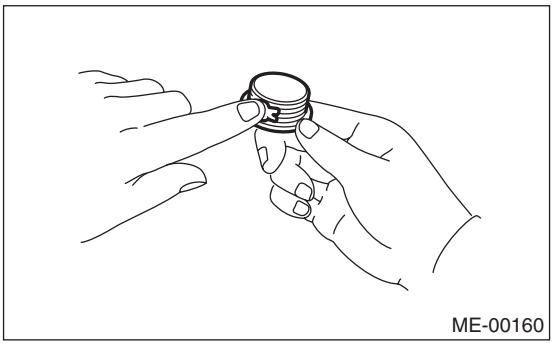

(6) Install the service hole plug and gasket.

NOTE:
Use a new gasket.

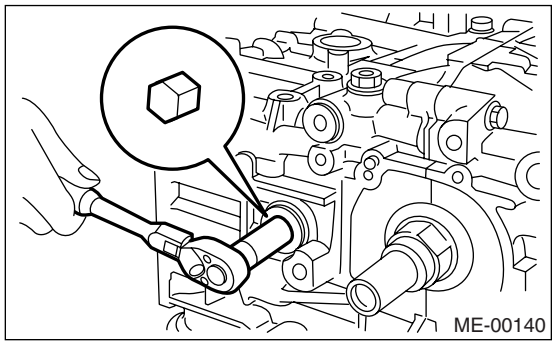

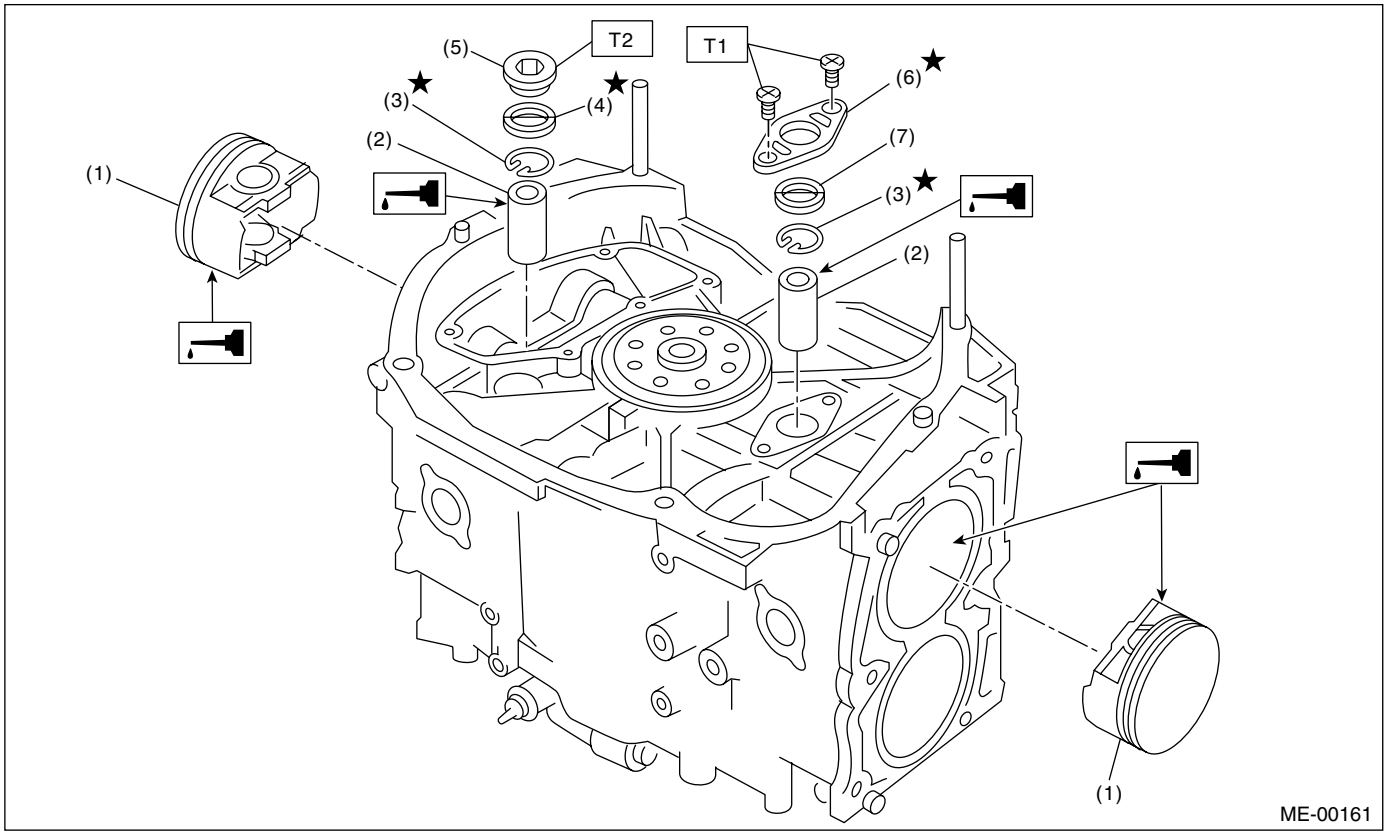

(1) Piston
(2) Piston pin
(3) Circlip
(4) Gasket
(5) Service hole plug
(6) Service hole cover
(7) O-ring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 70 (7.1, 51.4)

(7) Turn the cylinder block to face the #3 and #4 piston side upward. Using the same procedures as used for #1 and #2 cylinders, install the pistons and piston pins.

17) Install the water pipe.

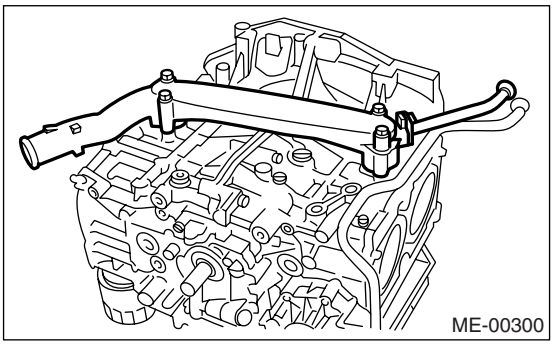

18) Install the baffle plate.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

19) Install the oil strainer and O-ring.

Tightening torque:
10 N·m (1.0 kgf-m, 7 ft-lb)

20) Install the oil strainer stay.

21) Apply fluid packing to the matching surfaces, and then install the oil pan.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

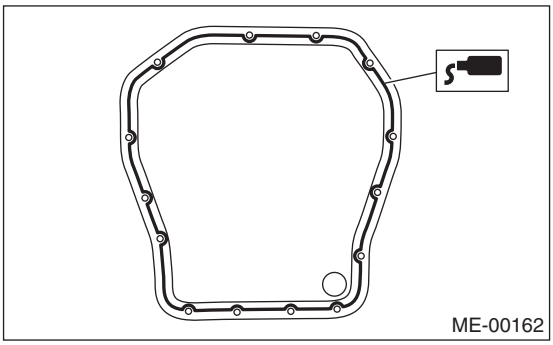

22) Apply fluid packing to the matching surfaces, and then install the oil separator cover.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

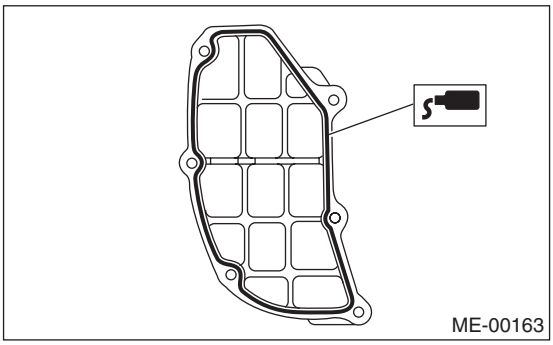

23) Install the flywheel or drive plate.
To lock the crankshaft, use ST.
ST 498497100 CRANKSHAFT STOPPER

Tightening torque:
72 N·m (7.3 kgf-m, 52.8 ft-lb)

- MT MODEL

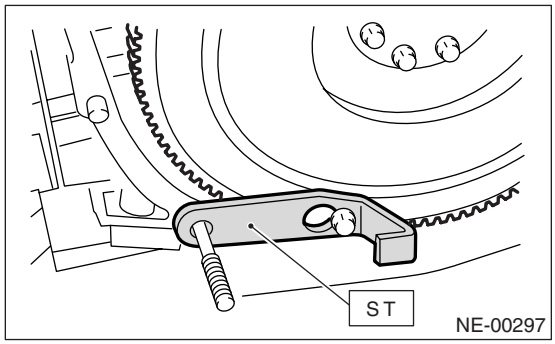

- AT MODEL

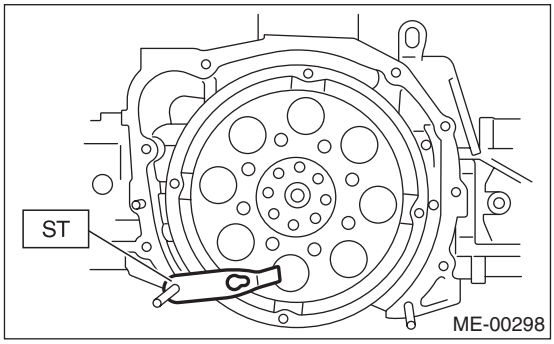

NOTE:
Using STs, remove the flywheel. (2.5 L MT model)
ST1 498497100 CRANKSHAFT STOPPER
ST2 499057000 TORX PLUS

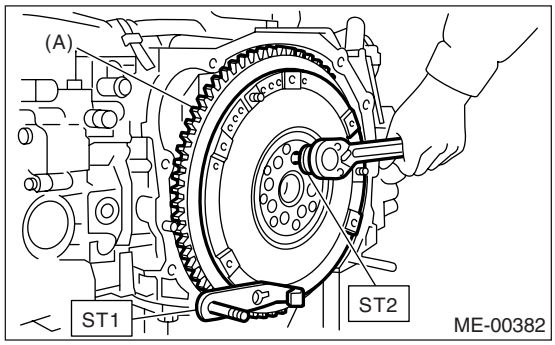

(A) Flywheel

24) Install the housing cover.

25) Installation of oil pump
(1) Discard the front oil seal after removal. Replace with a new one using the ST.
ST 499587100 OIL SEAL INSTALLER

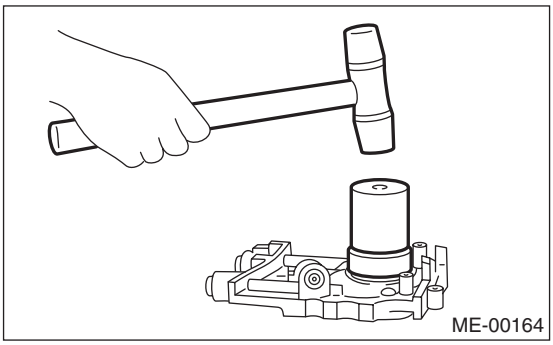

(2) Apply fluid packing to the matching surface of oil pump.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

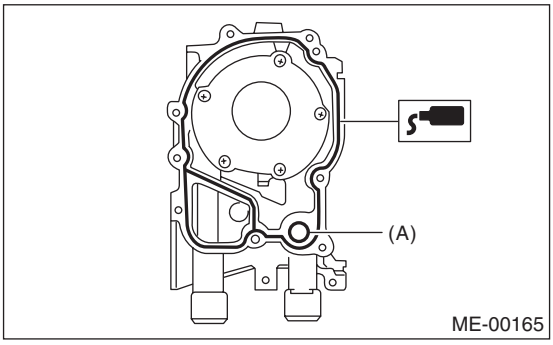

(A) O-ring

(3) Apply a coat of engine oil to the inside of oil seal.

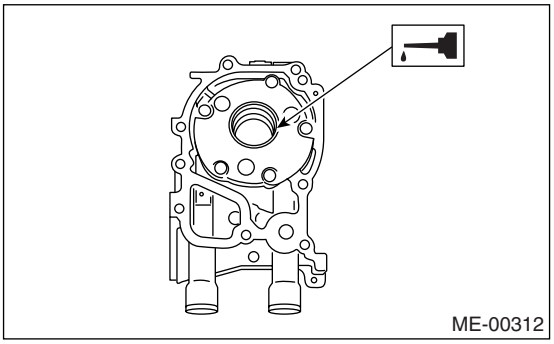

(4) Install the oil pump on cylinder block. Be careful not to damage the oil seal during installation.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

CAUTION:
• Do not forget to the install the O-ring and seal when installing oil pump.
• Align flat surface of oil pump's inner rotor with crankshaft before installation.

26) Install the water pump and gasket.

Tightening torque:
First; 12 N·m (1.2 kgf-m, 8.7 ft-lb)
Second; 12 N·m (1.2 kgf-m, 8.7 ft-lb)

CAUTION:
• Be sure to use a new gasket.
• When installing the water pump, tighten the bolts in two stages in alphabetical sequence as shown in the figure.

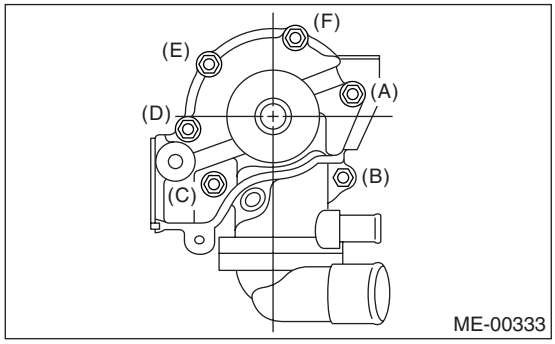

27) Install the water by-pass pipe for heater.
28) Install the oil filter using ST.
ST 498547000 OIL FILTER WRENCH
29) Tighten the cylinder head bolts.
(1) Apply a coat of engine oil to the washers and bolt threads.
(2) Tighten all bolts to 29 N·m (3.0 kgf-m, 22 ft-lb) in alphabetical sequence.
Then tighten all bolts to 69 N·m (7.0 kgf-m, 51 ft-lb) in alphabetical sequence.
(3) Back off all bolts by 180° first; back them off by 180° again.
(4) Tighten the bolts (a) and (b) to 34 N·m (3.5 kgf-m, 25 ft-lb).
(5) Tighten the bolts (c), (d), (e) and (f) to 15 N·m (1.5 kgf-m, 11 ft-lb).
(6) Tighten all bolts by 80° to 90° in alphabetical sequence.

CAUTION:
Do not tighten bolts more than 90°.

(7) Further tighten all bolts by 80° to 90° in alphabetical sequence.

CAUTION:
Ensure that the total "re-tightening angle" [in the former two steps], do not exceed 180°.

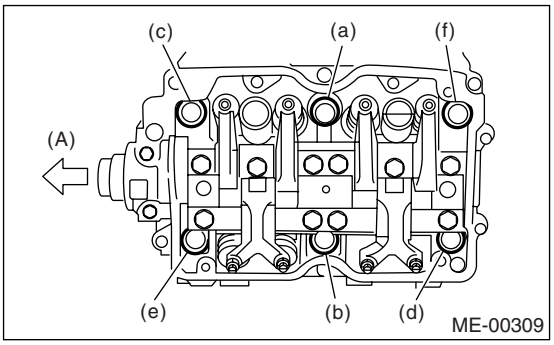

(A) Front

30) Install the oil level gauge guide, and then tighten the attaching bolt (left side only).
31) Install the rocker cover.
32) Install the crankshaft sprocket. <Ref. to ME(H4SO)-57, INSTALLATION, Crankshaft Sprocket.>
33) Install the camshaft sprocket. <Ref. to ME(H4SO)-55, INSTALLATION, Camshaft Sprocket.>
34) Install the timing belt assembly. <Ref. to ME(H4SO)-51, INSTALLATION, Timing Belt Assembly.>
35) Install the timing belt cover. <Ref. to ME(H4SO)-49, INSTALLATION, Timing Belt Cover.>
36) Install the crankshaft pulley. <Ref. to ME(H4SO)-47, INSTALLATION, Crankshaft Pulley.>
37) Install the generator and A/C compressor brackets on cylinder head.
38) Install the V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>
39) Install the intake manifold. <Ref. to FU(H4SO)-18, INSTALLATION, Intake Manifold.> or <Ref. to FU(H4SOw/oOBD)-18, INSTALLATION, Intake Manifold.>

C: DISASSEMBLY

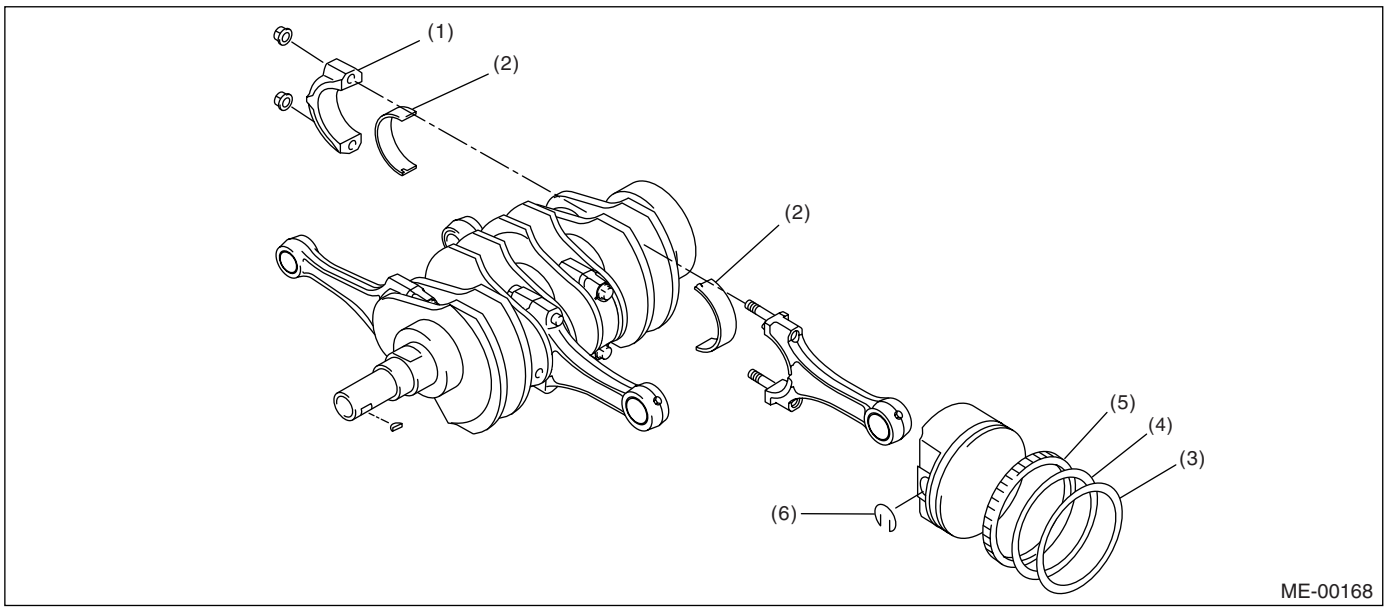

(1) Connecting rod cap
(2) Connecting rod bearing
(3) Top ring
(4) Second ring
(5) Oil ring
(6) Circlip

1) Remove the connecting rod cap.
2) Remove the connecting rod bearing.

NOTE:
Arrange the removed connecting rod, connecting rod cap and bearing in order to prevent confusion.

3) Remove the piston rings using the piston ring expander.
4) Remove the oil ring by hand.

NOTE:
Arrange the removed piston rings in good order to prevent confusion.

5) Remove the circlip.

D: ASSEMBLY

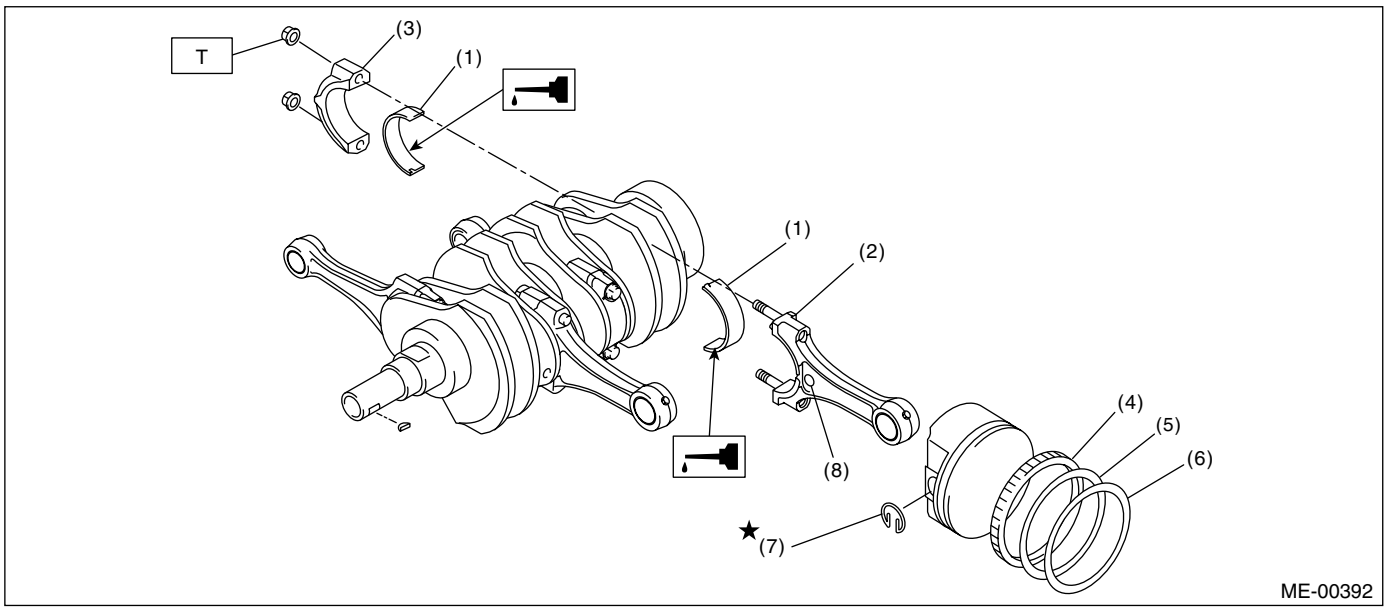

(1) Connecting rod bearing
(2) Connecting rod
(3) Connecting rod cap
(4) Oil ring
(5) Second ring
(6) Top ring
(7) Circlip
(8) Side mark

Tightening torque: N·m (kgf-m, ft-lb)
T: 45 (4.6, 33)

1) Apply oil to the surfaces of the connecting rod bearings.
2) Install the connecting rod bearings on connecting rods and connecting rod caps.
3) Position each connecting rod with the marked side facing forward, and then install them.
4) Install the connecting rod cap with connecting rod nut.
Ensure the arrow on connecting rod cap faces the front during installation.

CAUTION:
• Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching number.
• When tightening the connecting rod nuts, apply oil on the threads.

5) Install the expander, lower rail and upper rail in this order by hand. Then install the second ring and top ring using piston ring expander.

E: INSPECTION

1. CYLINDER BLOCK

1) Visually check for cracks and damage. Especially, inspect the important parts by means of red lead check.
2) Check the oil passages for clogging.
3) Inspect the crankcase surface that mates with cylinder head for warping by using a straight edge, and correct by grinding if necessary.

Warping limit:
0.05 mm (0.0020 in)

Grinding limit:
0.1 mm (0.004 in)

Standard height of cylinder block:
201.0 mm (7.91 in)

2. CYLINDER AND PISTON

1) The cylinder bore size is stamped on cylinder block's front upper surface.

NOTE:
• Measurement should be performed at a temperature 20°C (68°F).
• Standard sized pistons are classified into two grades, “A” and “B”. These grades should be used as a guide line in selecting a standard piston.

Standard diameter:
1.6 L model
A: 87.905 — 87.915 mm (3.4608 — 3.4612 in)
B: 87.895 — 87.905 mm (3.4604 — 3.4608 in)
2.0 L model
A: 92.005 — 92.015 mm (3.6222 — 3.6226 in)
B: 91.995 — 92.005 mm (3.6218 — 3.6222 in)
2.5 L model
A: 99.505 — 99.515 mm (3.9175 — 3.9179 in)
B: 99.495 — 99.505 mm (3.9171 — 3.9175 in)

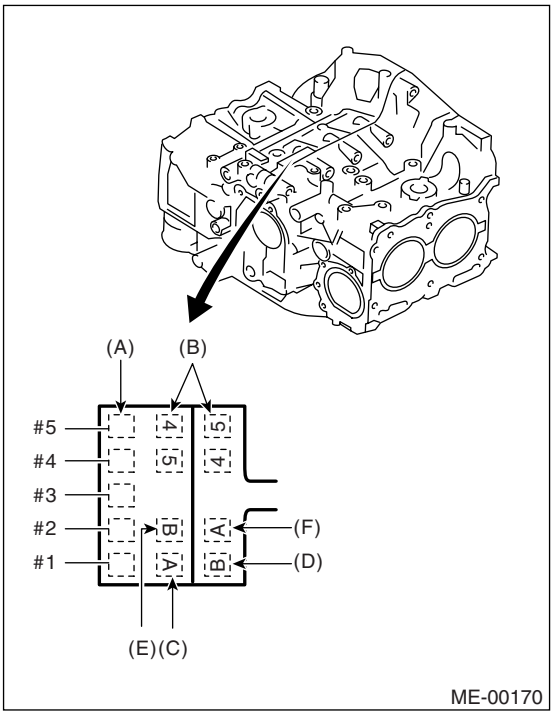

(A) Main journal size mark
(B) Cylinder block RH-LH combination mark
(C) #1 cylinder bore size mark
(D) #2 cylinder bore size mark
(E) #3 cylinder bore size mark
(F) #4 cylinder bore size mark

2) How to measure the inner diameter of each cylinder
Measure the inner diameter of each cylinder in both the thrust and piston pin directions at the heights shown in the figure, using a cylinder bore gauge.

NOTE:
Measurement should be performed at a temperature 20°C (68°F).

Taper:
Standard
0.015 mm (0.0006 in)
Limit
0.050 mm (0.0020 in)

Out-of-roundness:
Standard
0.010 mm (0.0004 in)
Limit
0.050 mm (0.0020 in)

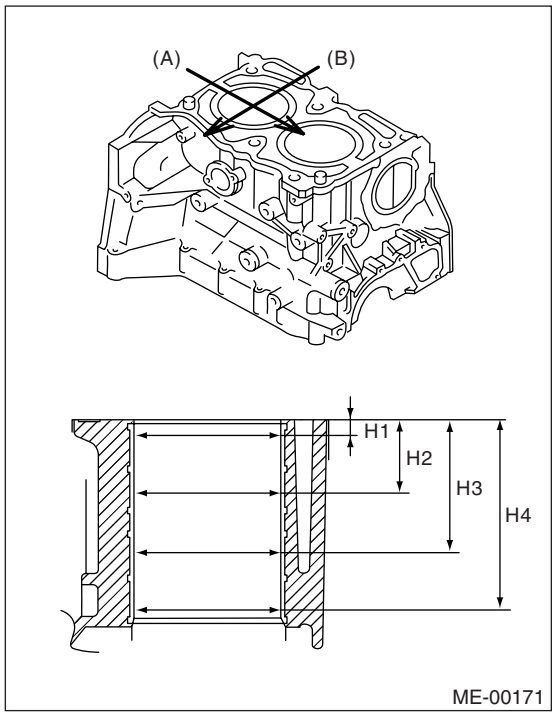

(A) Piston pin direction
(B) Thrust direction
H1 10 mm (0.39 in)
H2 45 mm (1.77 in)
H3 80 mm (3.15 in)
H4 115 mm (4.35 in)

3) When the piston is to be replaced due to general or cylinder wear, determine a suitable sized piston by measuring the piston clearance.

4) How to measure the outer diameter of each piston
Measure the outer diameter of each piston at the height shown in the figure. (Thrust direction)

NOTE:
Measurement should be performed at a temperature of 20°C (68°F).

Piston grade point H:
- ***1.6 L and 2.0 L model***
  40.0 mm (1.575 in)
- ***2.5 L model***
  37.0 mm (1.457 in)

Piston outer diameter:
1.6 L model
Standard
A: 87.885 — 87.895 mm (3.4600 — 3.4604 in)
B: 87.875 — 87.885 mm (3.4596 — 3.4699 in)
0.25 mm (0.0098 in) oversize
88.125 — 88.135 mm (3.4695 — 3.4699 in)
0.50 mm (0.0197 in) oversize
88.375 — 88.385 mm (3.4793 — 3.4797 in)
2.0 L model
Standard
A: 91.985 — 91.995 mm (3.6214 — 3.6218 in)
B: 91.975 — 91.985 mm (3.6211 — 3.6214 in)
0.25 mm (0.0098 in) oversize
92.225 — 92.235 mm (3.6309 — 3.6313 in)
0.50 mm (0.0197 in) oversize
92.475 — 92.485 mm (3.6407 — 3.6411 in)
2.5 L model
Standard
A: 99.485 — 99.495 mm (3.9167 — 3.9171 in)
B: 99.475 — 99.485 mm (3.9163 — 3.9167 in)
0.25 mm (0.0098 in) oversize
99.725 — 99.735 mm (3.9262 — 3.9266 in)
0.50 mm (0.0197 in) oversize
99.975 — 99.985 mm (3.9360 — 3.9364 in)

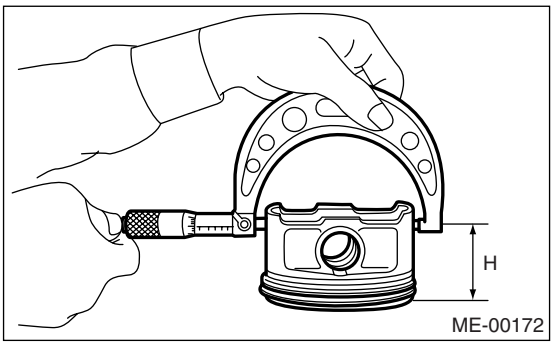

5) Calculate the clearance between cylinder and piston.

NOTE:
Measurement should be performed at a temperature of 20°C (68°F).

Cylinder to piston clearance at 20°C (68°F):
Standard
0.010 — 0.030 mm (0.0004 — 0.0012 in)
Limit
0.050 mm (0.0020 in)

6) Boring and honing
(1) If the value of taper, out-of-roundness, or cylinder-to-piston clearance measured exceeds the specified limit or if there is any damage on the cylinder wall, reboring it to use an oversize piston.

CAUTION:
When any of the cylinders needs reboring, all other cylinders must be bored at the same time, and use oversize pistons. Do not perform boring on one cylinder only, nor use an oversize piston for one cylinder only.

(2) If the cylinder inner diameter exceeds the limit after boring and honing, replace the crankcase.

NOTE:
Immediately after reboring, the cylinder diameter may differ from its real diameter due to temperature rise. Thus, pay attention to this when measuring the cylinder diameter.

Limit of cylinder enlarging (boring):
0.5 mm (0.020 in)

3. PISTON AND PISTON PIN

1) Check the pistons and piston pins for damage, cracks, and wear and the piston ring grooves for wear and damage. Replace if defective.
2) Measure the piston-to-cylinder clearance at each cylinder. <Ref. to ME(H4SO)-85, CYLINDER AND PISTON, INSPECTION, Cylinder Block.> If any of the clearances is not to specification, replace the piston or bore the cylinder to use an oversize piston.

3) Make the sure that piston pin can be inserted into piston pin hole with a thumb at 20°C (68°F). Replace if defective.

Standard clearance between piston pin and hole in piston:
Standard
0.004 — 0.008 mm (0.0002 — 0.0003 in)
Limit
0.020 mm (0.0008 in)

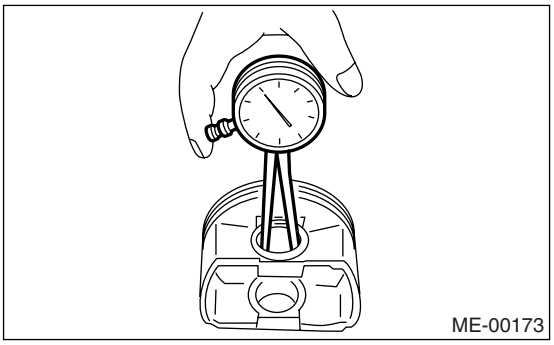

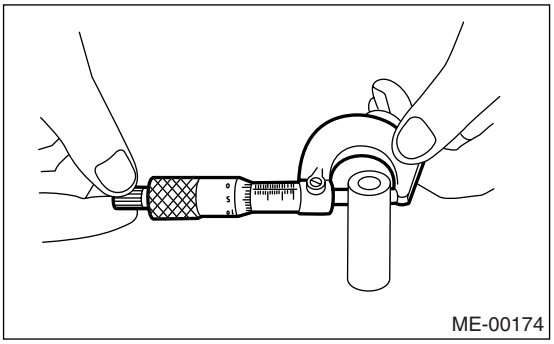

4) Check the circlip installation groove on piston for burr (A). If necessary, remove the burr from groove so that piston pin can lightly move.

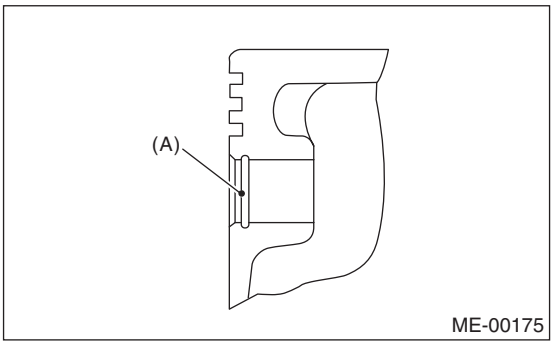

5) Check the piston pin circlip for distortion, cracks and wear.

4. PISTON RING

1) If the piston ring is broken, damaged, or worn, or if its tension is insufficient, or when the piston is replaced, replace the piston ring with a new one of the same size as the piston.

CAUTION:
• Marks are shown on the end of top and second rings. When installing the rings to piston, face these marks upward.
• Oil ring is composed of upper rail, expander and lower rail. Be careful of the rail direction when installing oil ring to the piston.

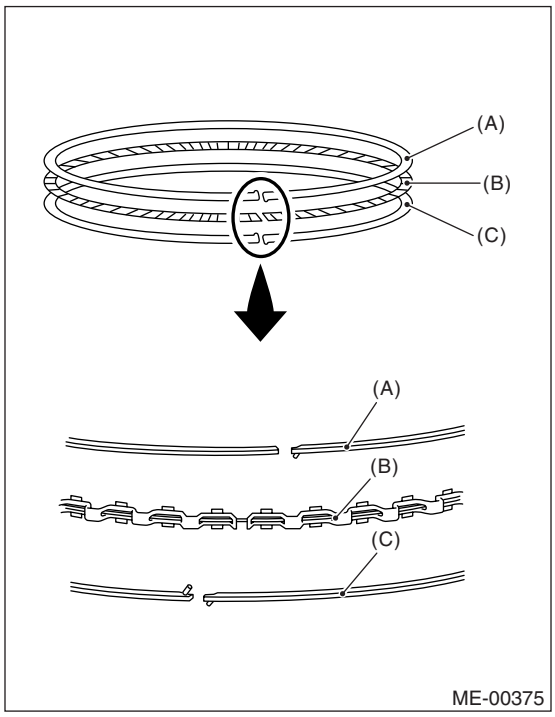

(A) Upper rail
(B) Expander
(C) Lower rail

2) Clean the piston ring groove and piston ring.

3) Squarely place the piston ring and oil ring in cylinder, and then measure the piston ring gap with a thickness gauge.

Unit: mm (in)

		Standard	Limit
Piston ring gap	Top ring	0.20 — 0.35 (0.0079 — 0.0138)	1.0 (0.039)
	Second ring	0.35 — 0.50 (0.0138 — 0.0197) 0.40 — 0.50 (0.0157 — 0.0197)*	1.0 (0.039)
	Oil ring rail	0.20 — 0.50 (0.0079 — 0.0197)	1.5 (0.059)

*: 2.0 L model

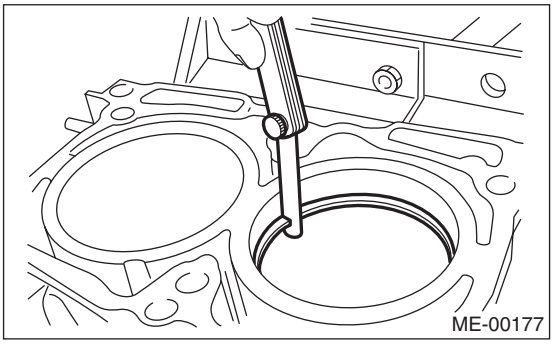

4) Measure the clearance between piston ring and piston ring groove with a thickness gauge.

Unit: mm (in)

		Standard	Limit
Clearance between piston ring and piston ring groove	Top ring	0.040 — 0.080 (0.0016 — 0.0031)	0.15 (0.0059)
	Second ring	0.030 — 0.070 (0.0012 — 0.0028)	0.15 (0.0059)

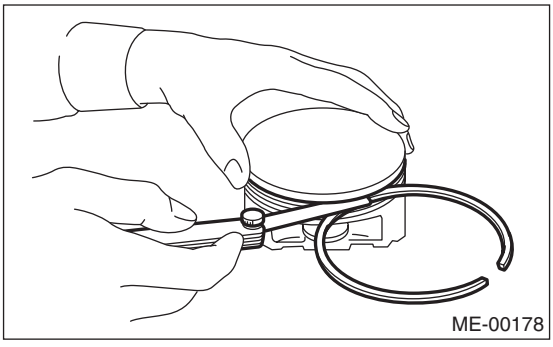

5. CONNECTING ROD

1) Replace the connecting rod, if the large or small end thrust surface is damaged.
2) Check for bend or twist using a connecting rod aligner. Replace the connecting rod if the bend or twist exceeds the limit.

Limit of bend or twist per 100 mm (3.94 in) in length:
0.10 mm (0.0039 in)

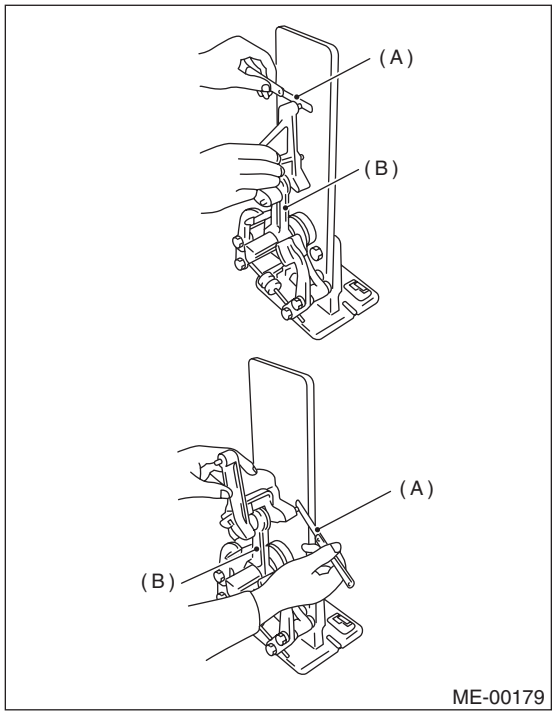

(A) Thickness gauge
(B) Connecting rod

3) Install the connecting rod fitted with bearing to crankshaft, and then measure the side clearance (thrust clearance). Replace the connecting rod if the side clearance exceeds the specified limit.

Connecting rod side clearance:
Standard
0.070 — 0.330 mm (0.0028 — 0.0130 in)
Limit
0.4 mm (0.016 in)

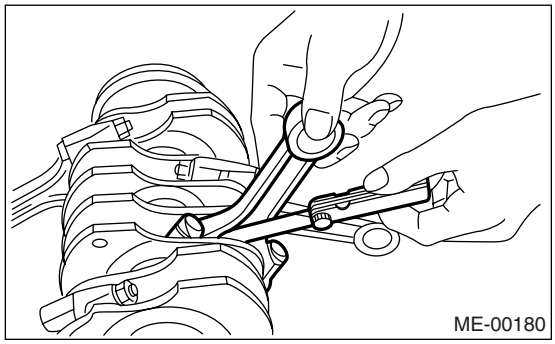

4) Inspect the connecting rod bearing for scar, peeling, seizure, melting, wear, etc.
5) Measure the oil clearance on individual connecting rod bearings by means of plastigauge. If any oil clearance is not within specification, replace the defective bearing with a new one of standard size or undersize as necessary. (See the table below.)

Connecting rod oil clearance:

• 1.6 L model
Standard
0.010 — 0.038 mm (0.0004 — 0.0015 in)
Limit
0.05 mm (0.0020 in)

Unit: mm (in)

Bearing	Bearing size (Thickness at center)	Outer diameter of crank pin
Standard	1.492 — 1.501 (0.0587 — 0.0591)	47.984 — 48.000 (1.8891 — 1.8898)
0.03 (0.0012) undersize	1.510 — 1.513 (0.0594 — 0.0596)	47.954 — 47.970 (1.8879 — 1.8868)
0.05 (0.0020) undersize	1.520 — 1.523 (0.0598 — 0.0600)	47.934 — 47.950 (1.8872 — 1.8878)
0.25 (0.0098) undersize	1.620 — 1.623 (0.0638 — 0.0639)	47.734 — 47.750 (1.8793 — 1.8799)

• 2.0 L model
Standard
0.010 — 0.038 mm (0.0004 — 0.0015 in)
Limit
0.05 mm (0.0020 in)

Unit: mm (in)

Bearing	Bearing size (Thickness at center)	Outer diameter of crank pin
Standard	1.492 — 1.501 (0.0587 — 0.0591)	51.984 — 52.000 (2.0466 — 2.0472)
0.03 (0.0012) undersize	1.510 — 1.513 (0.0594 — 0.0596)	51.954 — 51.970 (2.0454 — 2.0461)
0.05 (0.0020) undersize	1.520 — 1.523 (0.0598 — 0.0600)	51.934 — 51.950 (2.0446 — 2.0453)
0.25 (0.0098) undersize	1.620 — 1.623 (0.0638 — 0.0639)	51.734 — 51.750 (2.0368 — 2.0374)

• 2.5 L model
Standard
0.020 — 0.046 mm (0.0008 — 0.0018 in)
Limit
0.05 mm (0.0020 in)

Unit: mm (in)

Bearing	Bearing size (Thickness at center)	Outer diameter of crank pin
Standard	1.490 — 1.502 (0.0587 — 0.0591)	51.984 — 52.000 (2.0466 — 2.0472)
0.03 (0.0012) undersize	1.504 — 1.512 (0.0592 — 0.0595)	51.954 — 51.970 (2.0454 — 2.0461)
0.05 (0.0020) undersize	1.514 — 1.522 (0.0596 — 0.0599)	51.934 — 51.950 (2.0446 — 2.0453)
0.25 (0.0098) undersize	1.614 — 1.622 (0.0635 — 0.0639)	51.734 — 51.750 (2.0368 — 2.0374)

6) Inspect the bushing at connecting rod small end, and replace if worn or damaged. Also measure the piston pin clearance at connecting rod small end.

Clearance between piston pin and bushing:
Standard
0 — 0.022 mm (0 — 0.0009 in)
Limit
0.030 mm (0.0012 in)

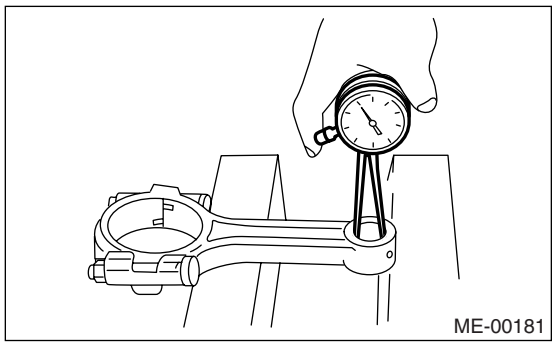
ME-00181

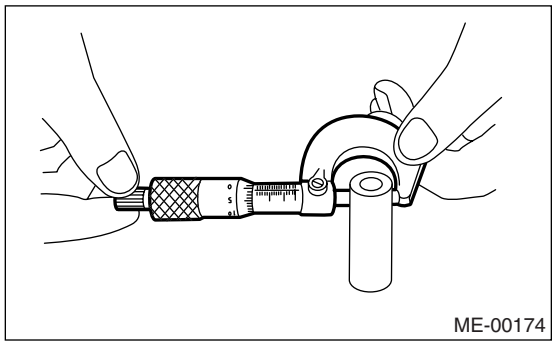
ME-00174

7) Replacement procedure is as follows.
(1) Remove the bushing from connecting rod with ST and press.
(2) Press the bushing with ST after applying oil on the periphery of bushing.

ST 499037100 CONNECTING ROD BUSHING REMOVER AND INSTALLER

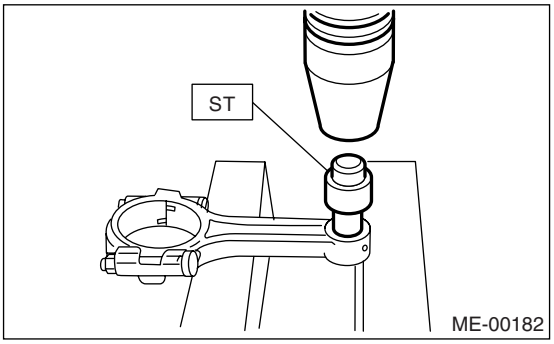

(3) Make two 3 mm (0.12 in) holes in bushing. Ream the inside of bushing.
(4) After the completion of reaming, clean the bushing to remove chips.

6. CRANKSHAFT AND CRANKSHAFT BEARING

1) Clean the crankshaft completely and check for cracks by means of red lead check etc., and replace if defective.
2) Measure the crankshaft bend, and correct or replace if it exceeds the limit.

NOTE:
If a suitable V-block is not available, install the #1 and #5 crankshaft bearing on cylinder block, position the crankshaft on these bearings and measure the crankshaft bend using a dial gauge.

Crankshaft bend limit:
0.035 mm (0.0014 in)

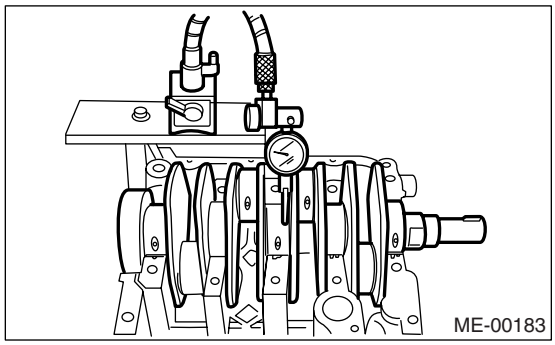

3) Inspect the crank journal and crank pin for wear. If they are not within the specifications, replace the bearing with a suitable (undersize) one, and then replace or recondition the crankshaft as necessary. When grinding the crank journal or crank pin, finish them to specified dimensions according to the undersize bearing to be used.

Crank pin and crank journal:
Out-of-roundness
0.020 mm (0.0008 in) or less
Taper limit
0.07 mm (0.0028 in)
Grinding limit
0.250 mm (0.0098 in)

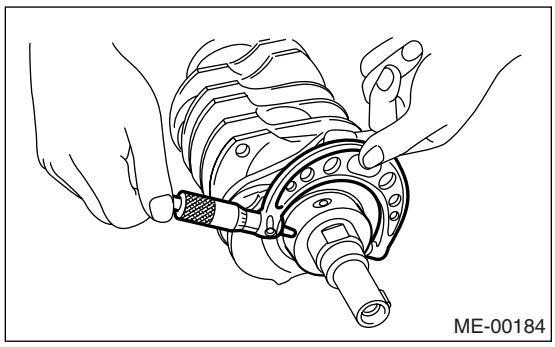

Unit: mm (in)

		Crank journal diameter		Crank pin diameter		
		#1, #3	#2, #4, #5	1.6 L	2.0 L	2.5 L
Standard	Journal O.D.	59.992 — 60.008 (2.3619 — 2.3625)	59.992 — 60.008 (2.3619 — 2.3625)	47.984 — 48.000 (1.8891 — 1.8898)	51.984 — 52.000 (2.0466 — 2.0472)	51.984 — 52.000 (2.0466 — 2.0472)
	Bearing size (Thickness at center)	1.998 — 2.011 (0.0787 — 0.0792)	2.000 — 2.013 (0.0787 — 0.0793)	1.492 — 1.510 (0.0587 — 0.0594)	1.492 — 1.501 (0.0587 — 0.0591)	1.490 — 1.502 (0.0587 — 0.0591)
0.03 (0.0012) undersize	Journal O.D.	59.962 — 59.978 (2.3607 — 2.3613)	59.962 — 59.978 (2.3607 — 2.3613)	47.954 — 47.970 (1.8879 — 1.8886)	51.954 — 51.970 (2.0454 — 2.0461)	51.954 — 51.970 (2.0454 — 2.0461)
	Bearing size (Thickness at center)	2.017 — 2.020 (0.0794 — 0.0795)	2.019 — 2.022 (0.0795 — 0.0796)	1.510 — 1.513 (0.0594 — 0.0596)	1.510 — 1.513 (0.0594 — 0.0596)	1.504 — 1.512 (0.0592 — 0.0595)
0.05 (0.0020) undersize	Journal O.D.	59.942 — 59.958 (2.3599 — 2.3605)	59.942 — 59.958 (2.3599 — 2.3605)	47.934 — 47.950 (1.8872 — 1.8878)	51.934 — 51.950 (2.0446 — 2.0453)	51.934 — 51.950 (2.0446 — 2.0453)
	Bearing size (Thickness at center)	2.027 — 2.030 (0.0798 — 0.0799)	2.029 — 2.032 (0.0799 — 0.0800)	1.520 — 1.523 (0.0598 — 0.0600)	1.520 — 1.523 (0.0598 — 0.0600)	1.514 — 1.522 (0.0596 — 0.0599)
0.25 (0.0098) undersize	Journal O.D.	59.742 — 59.758 (2.3520 — 2.3527)	59.742 — 59.758 (2.3520 — 2.3527)	47.734 — 47.750 (1.8793 — 1.8799)	51.734 — 51.750 (2.0368 — 2.0374)	51.734 — 51.750 (2.0368 — 2.0374)
	Bearing size (Thickness at center)	2.127 — 2.130 (0.0837 — 0.0839)	2.129 — 2.132 (0.0838 — 0.0839)	1.620 — 1.623 (0.0638 — 0.0639)	1.620 — 1.623 (0.0638 — 0.0639)	1.614 — 1.622 (0.0635 — 0.0639)

O.D.: Outer Diameter

4) Measure the thrust clearance of crankshaft at center bearing. If the clearance exceeds the limit, replace bearing.

Crankshaft thrust clearance:
Standard
0.030 — 0.115 mm (0.0012 — 0.0045 in)
Limit
0.25 mm (0.0098 in)

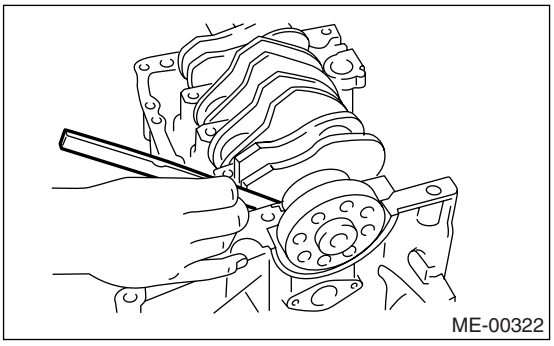

5) Inspect the individual crankshaft bearings for signs of flaking, seizure, melting, and wear.
6) Measure the oil clearance on each crankshaft bearing by means of plastigauge. If the measurement is not within the specification, replace the defective bearing with an undersize one, and then replace or recondition the crankshaft as necessary.

Unit: mm (in)

Crankshaft oil clearance		
#1	Standard	0.003 — 0.030 (0.0001 — 0.0012)
	Limit	0.040 (0.0016)
#2	Standard	0.012 — 0.033 (0.0005 — 0.0013)
	Limit	0.045 (0.0018)
#3	Standard	0.003 — 0.030 (0.0001 — 0.0012)
	Limit	0.040 (0.0016)
#4	Standard	0.012 — 0.033 (0.0005 — 0.0013)
	Limit	0.045 (0.0018)
#5	Standard	0.010 — 0.031 (0.0004 — 0.0012)
	Limit	0.040 (0.0016)

22.Engine Trouble in General

A: INSPECTION

NOTE:
"RANK" shown in the chart refer to the possibility of reason for the trouble in order ("Very often" to "Rarely")

A — Very often
B — Sometimes
C — Rarely

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
1. Engine will not start.			
1) Starter does not turn.	• Starter	• Defective battery-to-starter harness	B
		• Defective starter switch	C
		• Defective inhibitor switch or neutral switch	C
		• Defective starter	B
	• Battery	• Poor terminal connection	A
		• Run-down battery	A
		• Defective charging system	B
	• Friction	• Seizure of crankshaft and connecting rod bearing	C
		• Seized camshaft	C
		• Seized or stuck piston and cylinder	C
2) Initial combustion does not occur.	• Starter	• Defective starter	C
	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Fuel line	• Defective fuel pump and relay	A
		• Lack of or insufficient fuel	B
	• Belt	• Defective	B
		• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	B
		• Improper engine oil (low viscosity)	B
3) Initial combustion occurs.	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
	• Fuel line	• Defective fuel pump and relay	C
		• Clogged fuel line	C
		• Lack of or insufficient fuel	B
	• Belt	• Defective	B
		• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	B
		• Improper engine oil (low viscosity)	B

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
4) Engine stalls after initial combustion.	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	B
		• Loosened or cracked PCV hose	C
		• Loosened or cracked vacuum hose	C
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Dirty air cleaner element	C
	• Fuel line	• Clogged fuel line	C
		• Lack of or insufficient fuel	B
	• Belt	• Defective	B
		• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	B
		• Improper engine oil (low viscosity)	B
2. Rough idle and engine stall	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	A
		• Loosened or cracked PCV hose	A
		• Loosened or cracked vacuum hose	A
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Defective PCV valve	C
		• Loosened oil filler cap	B
		• Dirty air cleaner element	C
	• Fuel line	• Defective fuel pump and relay	C
		• Clogged fuel line	C
		• Lack of or insufficient fuel	B
	• Belt	• Defective timing	C
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	B
		• Loosened cylinder head bolts or defective gasket	B
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	B
		• Incorrect valve timing	A
		• Improper engine oil (low viscosity)	B
	• Lubrication system	• Incorrect oil pressure	B
		• Defective rocker cover gasket	C
	• Cooling system	• Overheating	C
	• Others	• Malfunction of evaporative emission control system	A
		• Stuck or damaged throttle valve	B
		• Accelerator cable out of adjustment	C

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3. Low output, hesitation and poor acceleration	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	A
		• Loosened or cracked PCV hose	A
		• Loosened or cracked vacuum hose	B
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Defective PCV valve	B
		• Loosened oil filler cap	B
		• Dirty air cleaner element	A
	• Fuel line	• Defective fuel pump and relay	B
		• Clogged fuel line	B
		• Lack of or insufficient fuel	C
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	B
		• Loosened cylinder head bolts or defective gasket	B
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	A
		• Improper engine oil (low viscosity)	B
	• Lubrication system	• Incorrect oil pressure	B
	• Cooling system	• Overheating	C
		• Over cooling	C
	• Others	• Malfunction of evaporative emission control system	A
4. Surging	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	A
		• Loosened or cracked PCV hose	A
		• Loosened or cracked vacuum hose	A
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Defective PCV valve	B
		• Loosened oil filler cap	B
		• Dirty air cleaner element	B
	• Fuel line	• Defective fuel pump and relay	B
		• Clogged fuel line	B
		• Lack of or insufficient fuel	C
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	C
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	A
		• Improper engine oil (low viscosity)	B
	• Cooling system	• Overheating	B
	• Others	• Malfunction of evaporative emission control system	C

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
5. Engine does not return to idle.	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked vacuum hose	A
	• Others	• Stuck or damaged throttle valve	A
		• Accelerator cable out of adjustment	B
6. Dieseling (Run-on)	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Cooling system	• Overheating	B
	• Others	• Malfunction of evaporative emission control system	B
7. After burning in exhaust system	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	C
		• Loosened or cracked PCV hose	C
		• Loosened or cracked vacuum hose	B
		• Defective PCV valve	B
		• Loosened oil filler cap	C
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	C
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	A
	• Lubrication system	• Incorrect oil pressure	C
	• Cooling system	• Over cooling	C
	• Others	• Malfunction of evaporative emission control system	C
8. Knocking	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened oil filler cap	B
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Incorrect valve timing	B
	• Cooling system	• Overheating	A
9. Excessive engine oil consumption	• Intake system	• Loosened or cracked PCV hose	A
		• Defective PCV valve	B
		• Loosened oil filler cap	C
	• Compression	• Defective valve stem	A
		• Worn or stuck piston rings, cylinder and piston	A
	• Lubrication system	• Loosened oil pump attaching bolts and defective gasket	B
		• Defective oil filter seal	B
		• Defective crankshaft oil seal	B
		• Defective rocker cover gasket	B
		• Loosened oil drain plug or defective gasket	B
		• Loosened oil pan fitting bolts or defective oil pan	B

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
10. Excessive fuel consumption	• Engine control system <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Dirty air cleaner element	A
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	C
		• Worn or stuck piston rings, cylinder and piston	B
		• Incorrect valve timing	B
	• Lubrication system	• Incorrect oil pressure	C
	• Cooling system	• Over cooling	C
	• Others	• Accelerator cable out of adjustment	B

23.Engine Noise

A: INSPECTION

Type of sound	Condition	Possible cause
Regular clicking sound	Sound increases as engine speed increases.	• Valve mechanism is defective. • Incorrect valve clearance • Worn valve rocker • Worn camshaft • Broken valve spring
Heavy and dull clank	Oil pressure is low.	• Worn crankshaft main bearing • Worn connecting rod bearing (big end)
	Oil pressure is normal.	• Loose flywheel mounting bolts • Damaged engine mounting
High-pitched clank (Spark knock)	Sound is noticeable when accelerating with an overload.	• Ignition timing advanced • Accumulation of carbon inside combustion chamber • Wrong spark plug • Improper gasoline
Clank when engine speed is medium (1,000 to 2,000 rpm).	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	• Worn crankshaft main bearing • Worn bearing at crankshaft end of connecting rod
Knocking sound when engine is operating under idling speed and engine is warm	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	• Worn cylinder liner and piston ring • Broken or stuck piston ring • Worn piston pin and hole at piston end of connecting rod
	Sound is not reduced if each fuel injector connector is disconnected in turn. (NOTE*)	• Unusually worn valve lifter • Worn cam gear • Worn camshaft journal bore in crankcase
Squeaky sound	—	• Insufficient generator lubrication
Rubbing sound	—	• Defective generator brush and rotor contact
Gear scream when starting engine	—	• Defective ignition starter switch • Worn gear and starter pinion
Sound like polishing glass with a dry cloth	—	• Loose drive belt • Defective water pump shaft
Hissing sound	—	• Loss of compression • Air leakage in air intake system, hoses, connections or manifolds
Timing belt noise	—	• Loose timing belt • Belt contacting case/adjacent part
Valve tappet noise	—	• Incorrect valve clearance

NOTE*:
When disconnecting the fuel injector connector, Malfunction Indicator Light illuminates and DTC is stored in ECM memory. Therefore, carry out the CLEAR MEMORY MODE <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> or <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.> or <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.> after connecting fuel injector connector.

EXHAUST

EX(H4SO)

Page

1. General Description 2
2. Front Exhaust Pipe 6
3. Center Exhaust Pipe 9
4. Rear Exhaust Pipe 10
5. Muffler 12

1. General Description

A: COMPONENT

1. 1.6 L

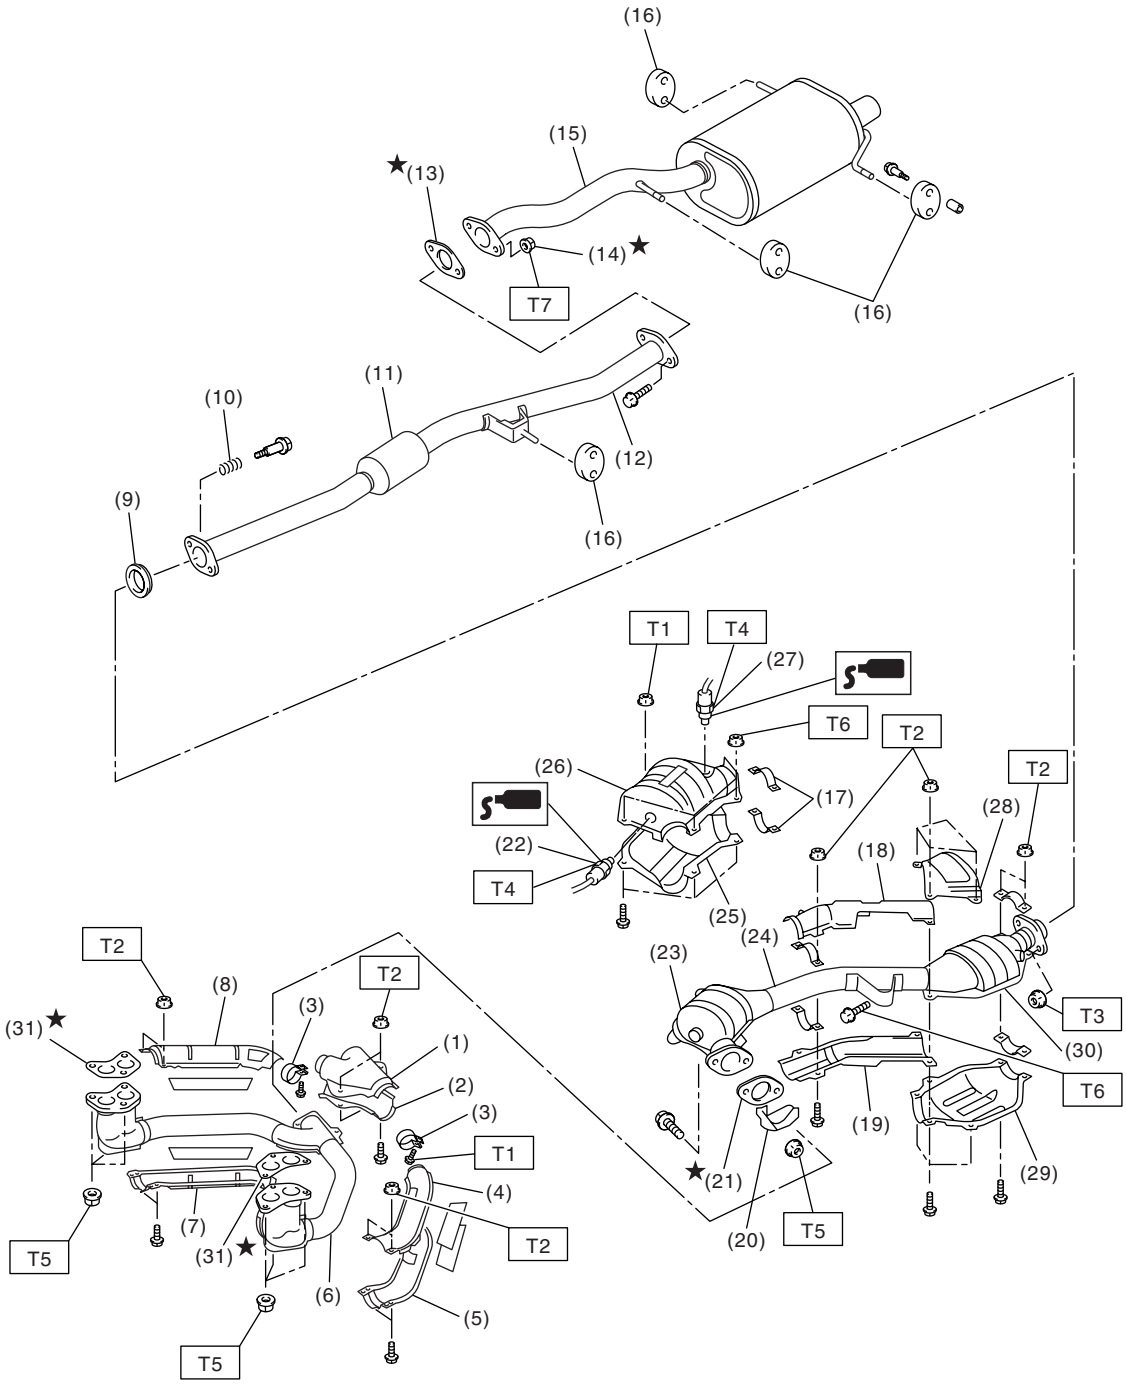

EX-00123

(1) Front exhaust pipe upper cover
(2) Front exhaust pipe lower cover
(3) Clamp
(4) Front exhaust pipe upper cover LH
(5) Front exhaust pipe lower cover LH
(6) Front exhaust pipe
(7) Front exhaust pipe lower cover RH
(8) Front exhaust pipe upper cover RH
(9) Gasket
(10) Spring
(11) Chamber
(12) Rear exhaust pipe
(13) Gasket
(14) Self-locking nut
(15) Muffler
(16) Cushion rubber
(17) Lower clamp
(18) Center exhaust pipe upper cover
(19) Center exhaust pipe lower cover
(20) Protector
(21) Gasket
(22) Front oxygen (A/F) sensor
(23) Front catalytic converter
(24) Center exhaust pipe
(25) Front catalytic converter lower cover
(26) Front catalytic converter upper cover
(27) Rear oxygen sensor
(28) Rear catalytic converter upper cover
(29) Rear catalytic converter lower cover
(30) Rear catalytic converter
(31) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 13 (1.3, 9.4)
T3: 18 (1.8, 13.0)
T4: 21 (2.1, 15.2)
T5: 30 (3.1, 22.4)
T6: 35 (3.6, 26.0)
T7: 48 (4.9, 35.4)

2. 2.0 L

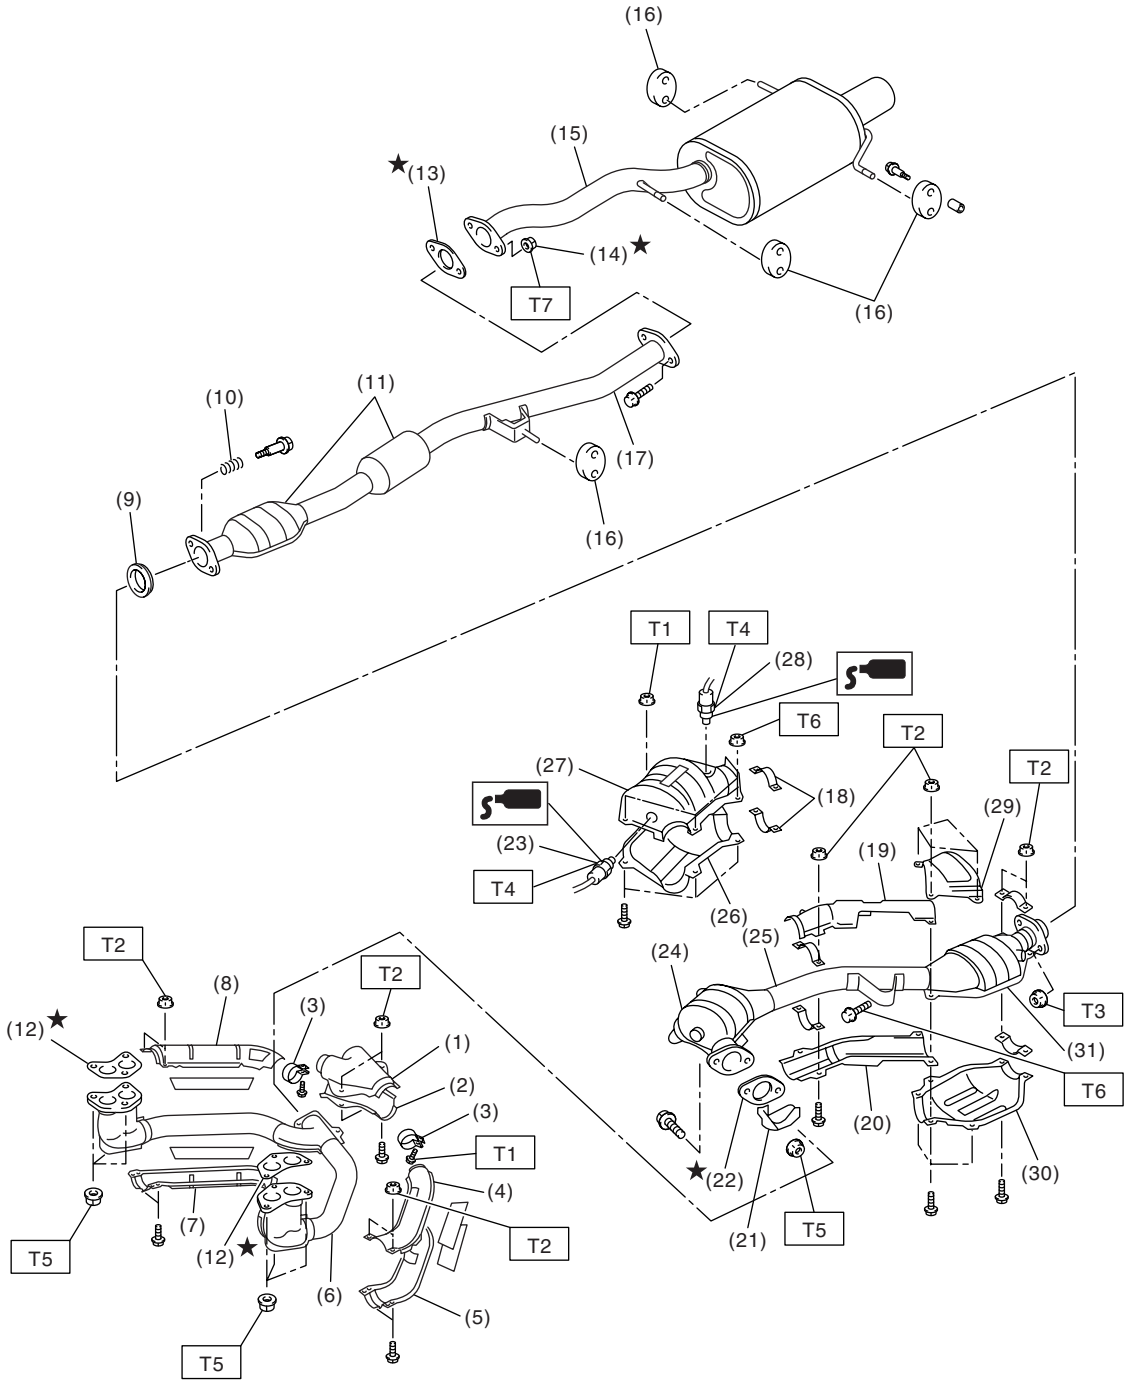

EX-00124

(1) Front exhaust pipe upper cover
(2) Front exhaust pipe lower cover
(3) Clamp
(4) Front exhaust pipe upper cover LH
(5) Front exhaust pipe lower cover LH
(6) Front exhaust pipe
(7) Front exhaust pipe lower cover RH
(8) Front exhaust pipe upper cover RH
(9) Gasket
(10) Spring
(11) Chamber
(12) Gasket
(13) Gasket
(14) Self-locking nut
(15) Muffler
(16) Cushion rubber
(17) Rear exhaust pipe
(18) Lower clamp
(19) Center exhaust pipe upper cover
(20) Center exhaust pipe lower cover
(21) Protector
(22) Gasket
(23) Front oxygen (A/F) sensor
(24) Front catalytic converter
(25) Center exhaust pipe
(26) Front catalytic converter lower cover
(27) Front catalytic converter upper cover
(28) Rear oxygen sensor
(29) Rear catalytic converter upper cover
(30) Rear catalytic converter lower cover
(31) Rear catalytic converter

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	***8 (0.8, 5.8)***
T2:	***13 (1.3, 9.4)***
T3:	***18 (1.8, 13.0)***
T4:	***21 (2.1, 15.2)***
T5:	***30 (3.1, 22.4)***
T6:	***35 (3.6, 26.0)***
T7:	***48 (4.9, 35.4)***

B: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Front Exhaust Pipe

A: REMOVAL

1) Disconnect the ground cable from battery.

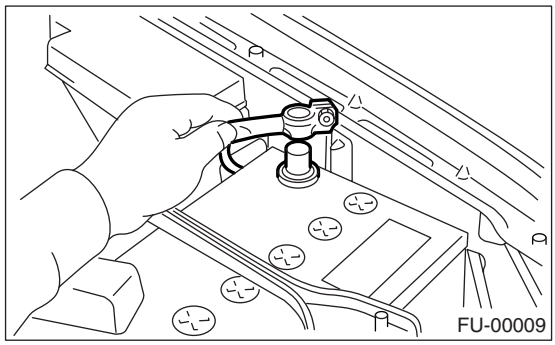

2) Disconnect the front oxygen (A/F) sensor connector.

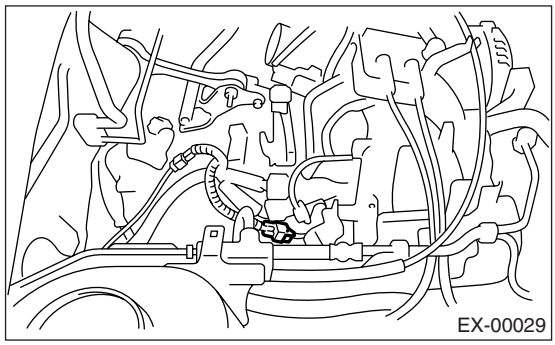

3) Disconnect the rear oxygen sensor connector.

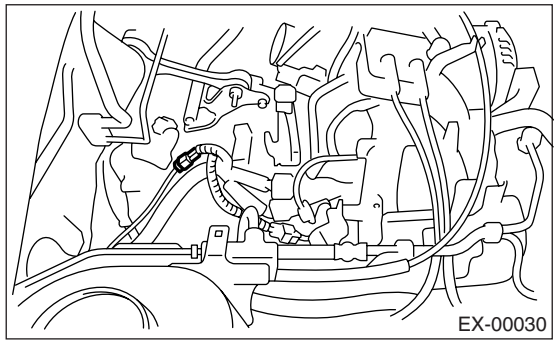

4) Lift-up the vehicle.

5) Separate the front and center exhaust pipe assembly and rear exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

- 1.6 L

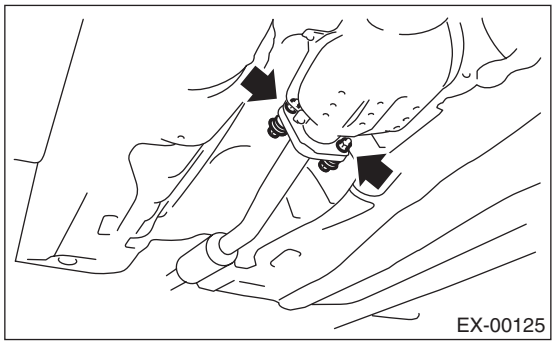

- 2.0 L

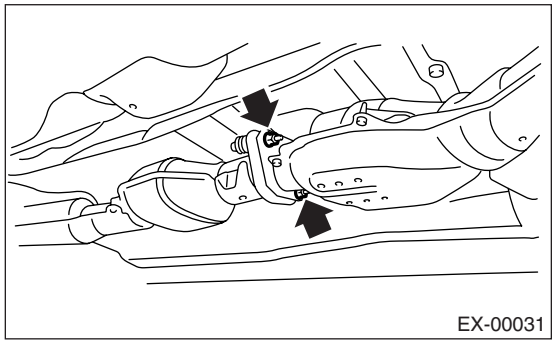

6) Remove the under cover.
7) Remove the nuts which hold the front exhaust pipe onto cylinder heads.

CAUTION:
Be careful not to pull down the front and center exhaust pipe assembly.

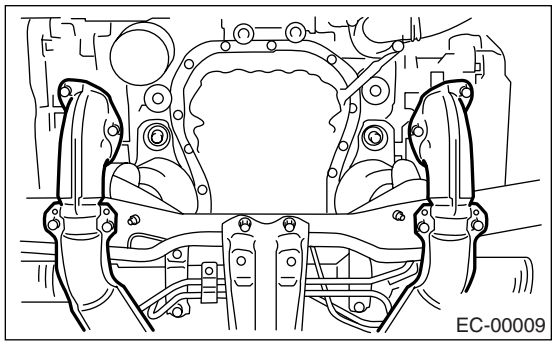

8) Remove the bolt which installs the front and center exhaust pipe assembly to hanger bracket.

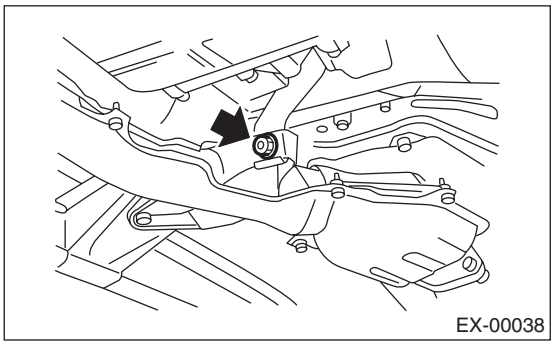

9) Remove the front and center exhaust pipe assembly from vehicle.

CAUTION:
• Be careful not to let the front and center exhaust pipe assembly fall off when removing as it is quite heavy.
• After removing the front and center exhaust pipe assembly, do not apply excessive pulling force on the rear exhaust pipe.

10) Separate the front exhaust pipe from center exhaust pipe.

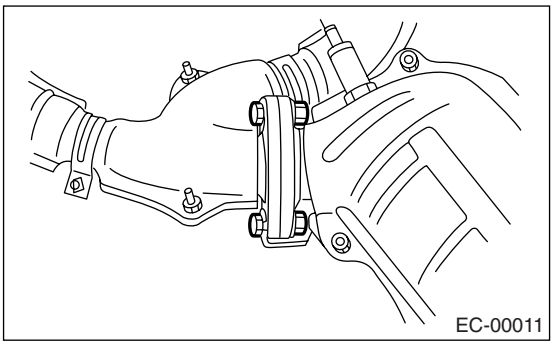

11) Remove the front oxygen (A/F) sensor and the rear oxygen sensor. <Ref. to FU(H4SO)-44, REMOVAL, Front Oxygen (A/F) Sensor.> and <Ref. to FU(H4SO)-46, REMOVAL, Rear Oxygen Sensor.>.

B: INSTALLATION

1) Install the front oxygen (A/F) sensor and the rear oxygen sensor. <Ref. to FU(H4SO)-44, INSTALLATION, Front Oxygen (A/F) Sensor.> and <Ref. to FU(H4SO)-46, INSTALLATION, Rear Oxygen Sensor.>.
2) Install the front exhaust pipe to center exhaust pipe.

NOTE:
Replace the gaskets with new ones.

Tightening torque:
30 N·m (3.1 kgf-m, 22.4 ft-lb)

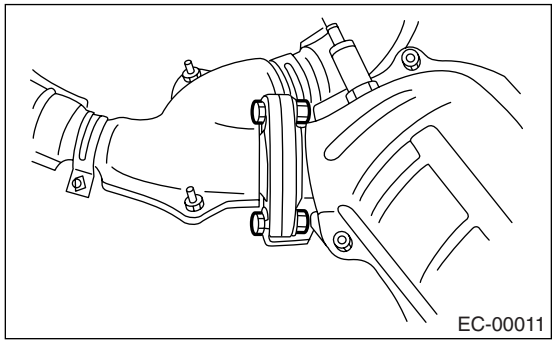

3) Install the front and center exhaust pipe assembly to vehicle.
4) Temporarily tighten the bolt which installs the front and center exhaust pipe assembly to hanger bracket.

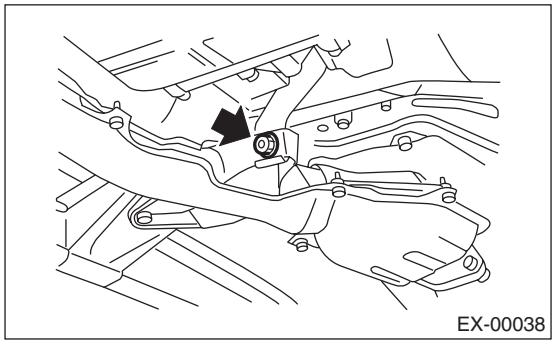

5) Tighten the nuts which hold the front exhaust pipe onto cylinder heads.

Tightening torque:
30 N·m (3.1 kgf-m, 22.4 ft-lb)

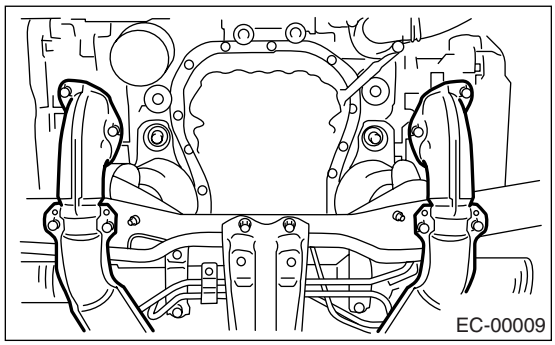

6) Install the under cover.
7) Tighten the bolts which install the front and center exhaust pipe assembly to rear exhaust pipe.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

- 1.6 L

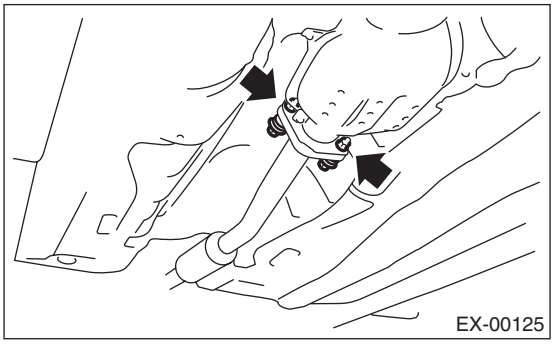

- 2.0 L

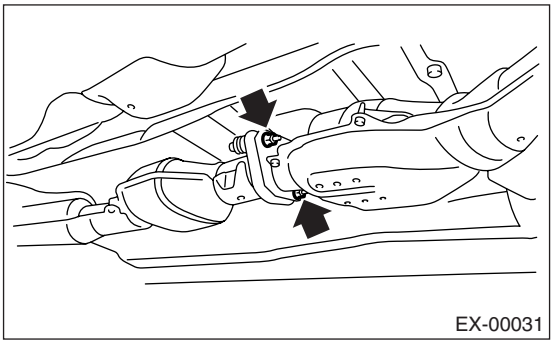

8) Tighten the bolt which holds the front and center exhaust pipe assembly to hanger bracket.

Tightening torque:
35 N·m (3.6 kgf-m, 26.0 ft-lb)

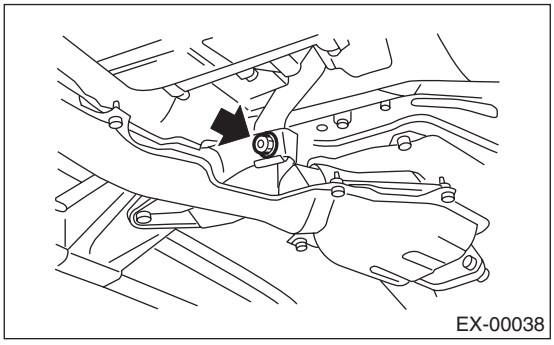

9) Lower the vehicle.

10) Connect the rear oxygen sensor connector.

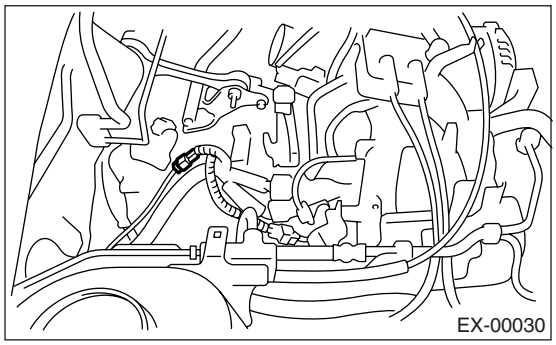

11) Connect the front oxygen (A/F) sensor connector.

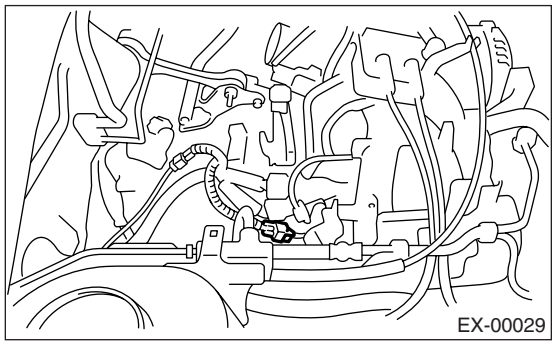

12) Connect the battery ground cable to battery.

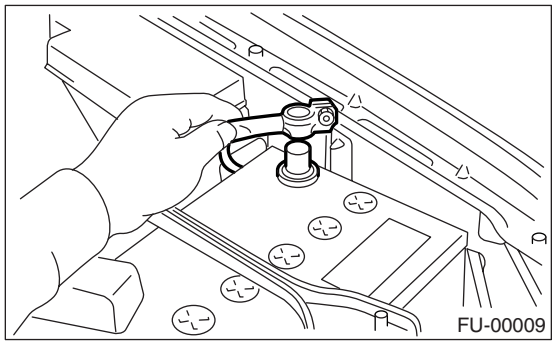

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

3. Center Exhaust Pipe

A: REMOVAL

After removing the center and front exhaust pipes as one unit, separate them. Refer to the procedure for removing the front exhaust pipe. <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>

B: INSTALLATION

Install the center exhaust pipe and front exhaust pipe as one unit. Refer to the procedure for installing the front exhaust pipe. <Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

4. Rear Exhaust Pipe

A: REMOVAL

1) Separate the rear exhaust pipe from center exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

- 1.6 L

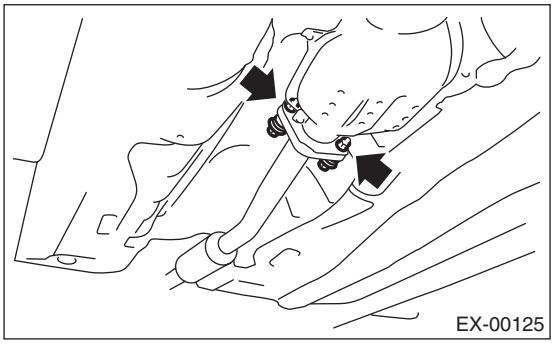

- 2.0 L

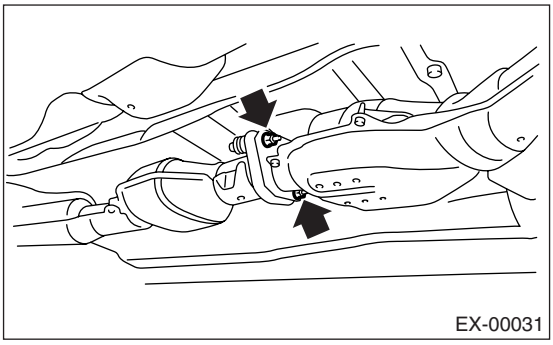

2) Separate the rear exhaust pipe from muffler.

CAUTION:
Be careful not to pull down the rear exhaust pipe.

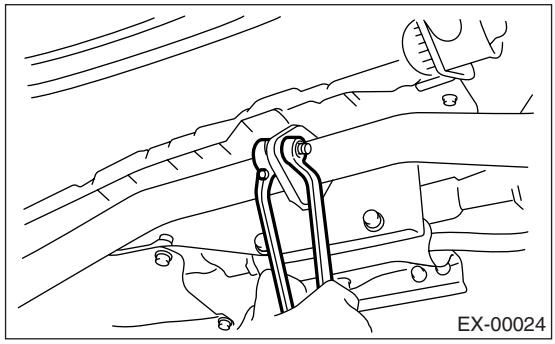

3) Apply a coat of SUBARU CRC to the mating area of cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

4) Remove the rear exhaust pipe bracket from cushion rubber.

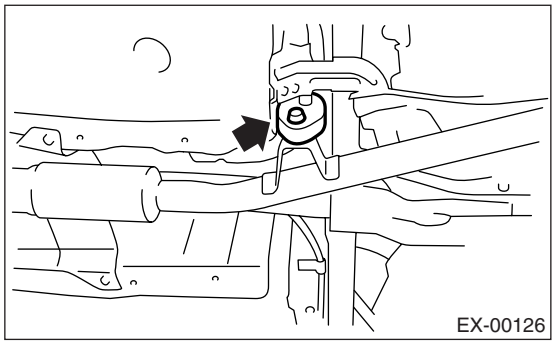

B: INSTALLATION

1) Apply a coat of SUBARU CRC to the mating area of cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

2) Install the rear exhaust pipe bracket to cushion rubber.

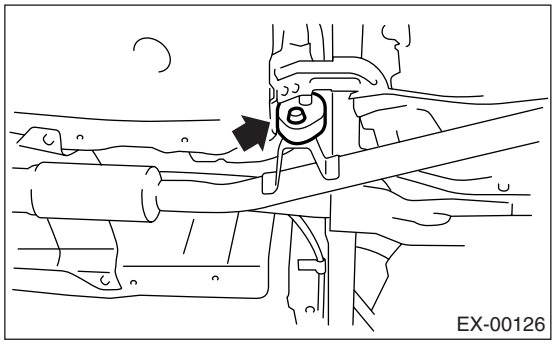

NOTE:
Replace the gaskets with new ones.

3) Install the rear exhaust pipe to muffler.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

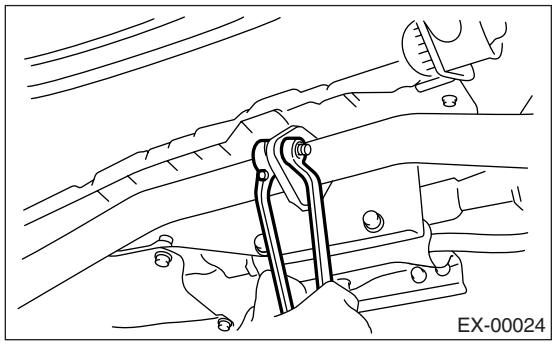

4) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

- 1.6 L

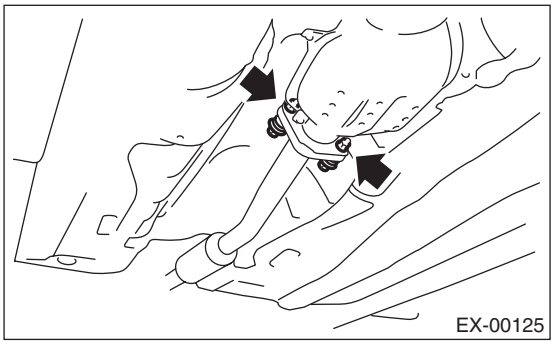

- 2.0 L

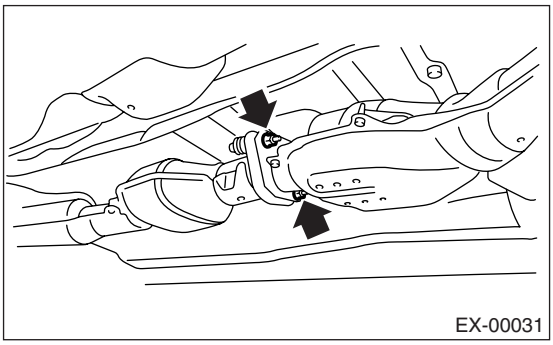

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.
3) Make sure the cushion rubber is not worn or cracked.

5. Muffler

A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

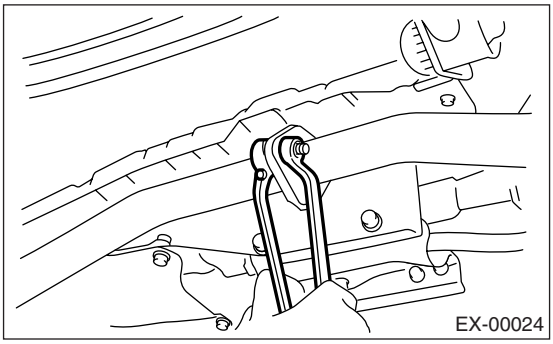

2) Apply a coat of SUBARU CRC to the mating area of cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

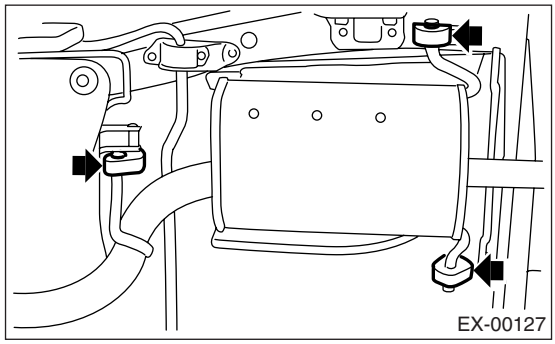

3) Remove the front, right and left cushion rubber, and detach the muffler assembly.

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
Replace the gasket with a new one.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

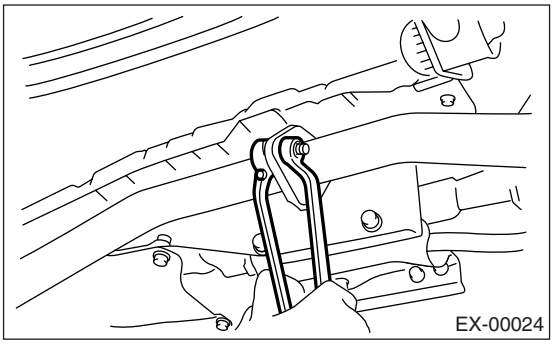

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.
3) Make sure the cushion rubber is not worn or cracked.

COOLING

CO(H4SO)

		Page
1.	General Description	2
2.	Radiator Main Fan System	7
3.	Radiator Sub Fan System	10
4.	Engine Coolant	14
5.	Water Pump	16
6.	Thermostat	19
7.	Radiator	21
8.	Radiator Cap	24
9.	Radiator Main Fan and Fan Motor	25
10.	Radiator Sub Fan and Fan Motor	26
11.	Reservoir Tank	27
12.	Engine Cooling System Trouble in General	28

1. General Description

A: SPECIFICATIONS

Cooling system			Electric fan + Forced engine coolant circulation system
Total engine coolant capacity ℓ (US qt, Imp qt)			1.6 L AT model: Approx. 7.3 (7.71, 6.42) 1.6 L MT model: Approx. 7.4 (7.82, 6.51) 2.0 L and 2.5 L AT model: Approx. 6.9 (7.29, 6.07) 2.0 L and 2.5 L MT model: Approx. 7.0 (7.4, 6.2)
Water pump	Type		Centrifugal impeller type
	Discharge performance I	Discharge	20 ℓ (5.3 US gal, 4.4 Imp gal)/min.
		Pump speed—Discharge pressure	760 rpm — 2.9 kPa (0.3 mAq)
		Engine coolant temperature	85°C (185°F)
	Discharge performance II	Discharge	100 ℓ (26.4 US gal, 22.0 Imp gal)/min.
		Pump speed—Discharge pressure	3,000 rpm — 49.0 kPa (5.0 mAq)
		Engine coolant temperature	85°C (185°F)
	Discharge performance III	Discharge	200 ℓ (52.8 US gal, 44.0 Imp gal)/min.
		Pump speed—Discharge pressure	6,000 rpm — 225.4 kPa (23.0 mAq)
		Engine coolant temperature	85°C (185°F)
	Impeller diameter		76 mm (2.99 in)
	Number of impeller vanes		8
	Pump pulley diameter		60 mm (2.36 in)
	Clearance between impeller and case	Standard	0.5 — 0.7 mm (0.020 — 0.028 in)
		Limit	1.0 mm (0.039 in)
	“Thrust” runout of impeller end		0.5 mm (0.020 in)
Thermostat	Type		Wax pellet type
	Starts to open		Model with OBD: 80 — 84°C (176 — 183°F)
			Model without OBD: 76 — 80°C (169 — 176°F)
	Fully opened		Model with OBD: 95°C (203°F)
			Model without OBD: 91°C (196°F)
	Valve lift		9.0 mm (0.354 in) or more
	Valve bore		35 mm (1.38 in)
Radiator fan	Motor	Main fan	70 W
		Sub fan	70 W
	Fan diameter × Blade		320 mm (11.81 in) × 5 (main fan) 320 mm (11.81 in) × 7 (sub fan)
Radiator	Type		Down flow, pressure type
	Core dimensions	Width × Height × Thickness	691.5 × 340 × 16 mm (27.22 × 13.39 × 0.63 in)
	Pressure range in which cap valve is open		Above: 108±15 kPa (1.1±0.15 kg/cm^2, 16±2 psi) Below: −1.0 to −4.9 kPa (−0.01 to −0.05 kg/cm^2, −0.1 to −0.7 psi)
	Fins		Corrugated fin type
Reservoir tank	Capacity		0.5 ℓ (0.5 US qt, 0.4 Imp qt)

B: COMPONENT

1. WATER PUMP

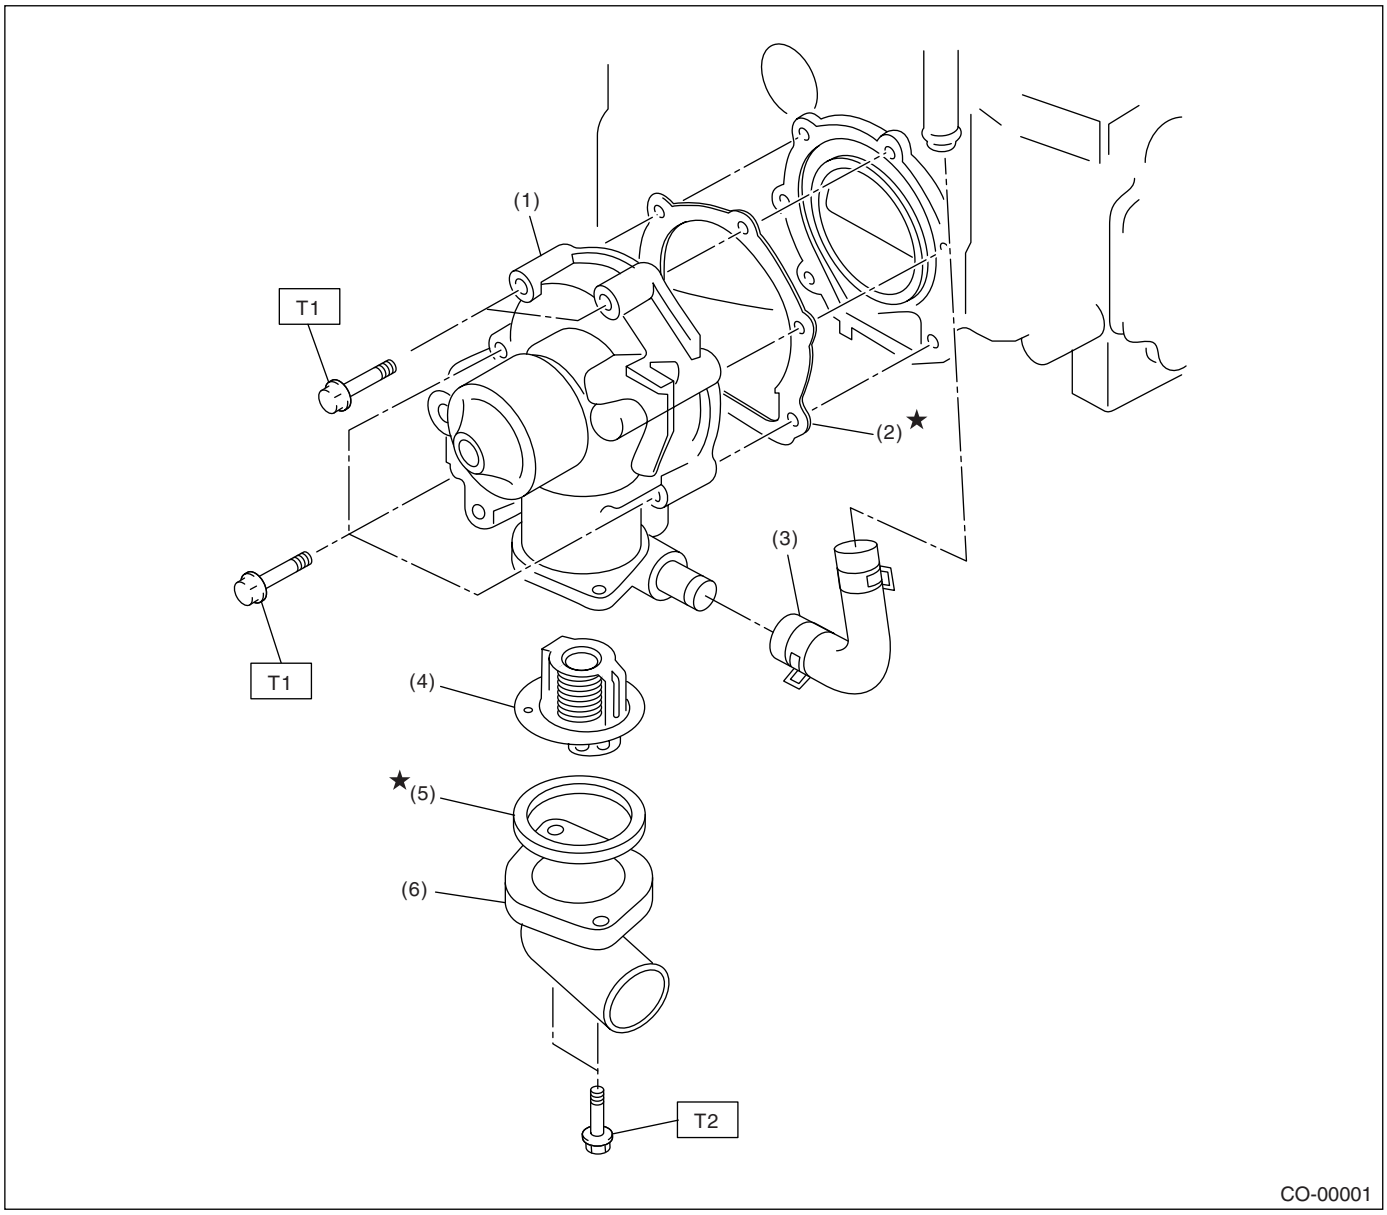

(1) Water pump ASSY
(2) Gasket
(3) Heater by-pass hose
(4) Thermostat
(5) Gasket
(6) Thermostat cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7)
T2: 6.5 (0.66, 4.8)

2. RADIATOR AND RADIATOR FAN

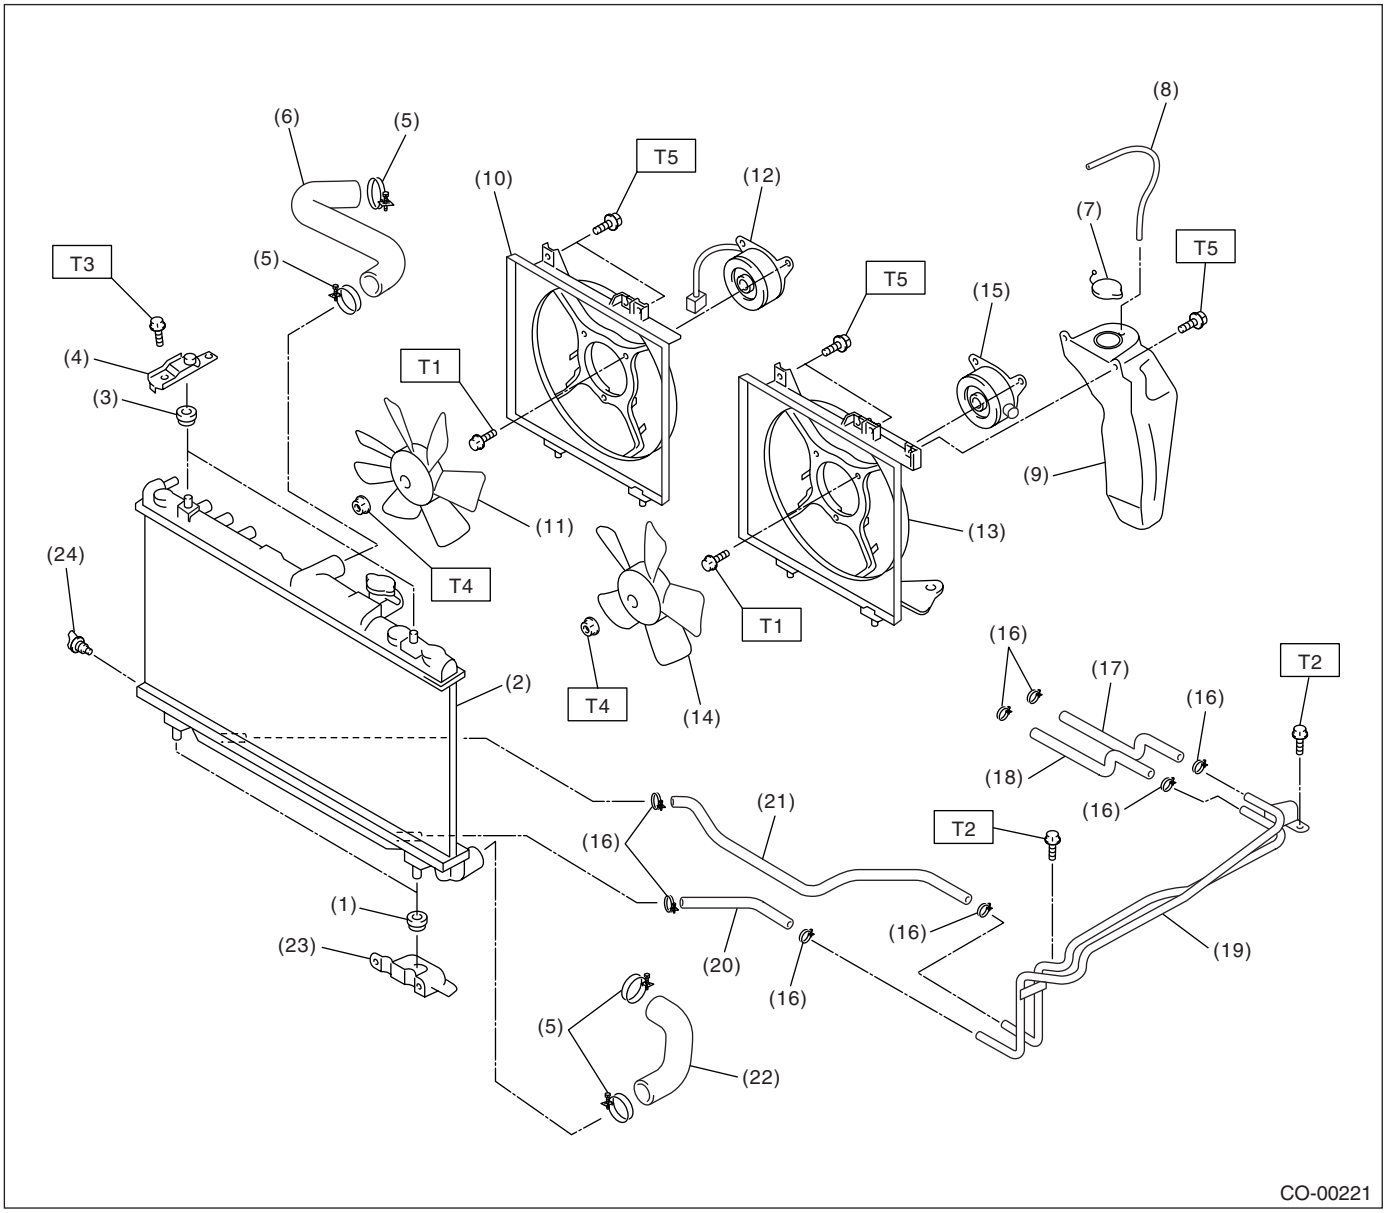

(1) Radiator lower cushion
(2) Radiator
(3) Radiator upper cushion
(4) Radiator upper bracket
(5) Clamp
(6) Radiator inlet hose
(7) Engine coolant reservoir tank cap
(8) Overflow hose
(9) Engine coolant reservoir tank
(10) Radiator sub fan shroud
(11) Radiator sub fan
(12) Radiator sub fan motor
(13) Radiator main fan shroud
(14) Radiator main fan
(15) Radiator main fan motor
(16) ATF hose clamp (AT model)
(17) ATF inlet hose A (AT model)
(18) ATF outlet hose A (AT model)
(19) ATF pipe (AT model)
(20) ATF inlet hose B (AT model)
(21) ATF outlet hose B (AT model)
(22) Radiator outlet hose
(23) Radiator lower bracket
(24) Radiator drain plug

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 12 (1.2, 8.7)
T3: 18 (1.8, 13.0)
T4: 3.4 (0.35, 2.5)
T5: 4.9 (0.50, 3.6)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part in the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
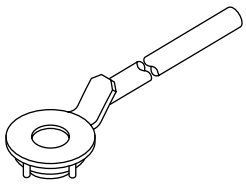 ST-499977400	499977400	CRANK PULLEY WRENCH	Used for stopping crankshaft pulley when loosening and tightening crankshaft pulley bolts. (1.6 L and 2.0 L model)
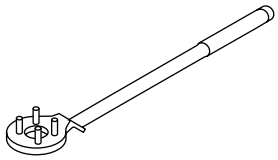 ST-499977100	499977100	CRANK PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolt. (2.5 L model)
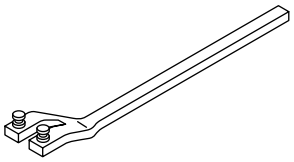 ST18231AA010	18231AA010	CAMSHAFT SPROCKET WRENCH	• Used for removing and installing camshaft sprocket. • Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.

2. Radiator Main Fan System

A: SCHEMATIC

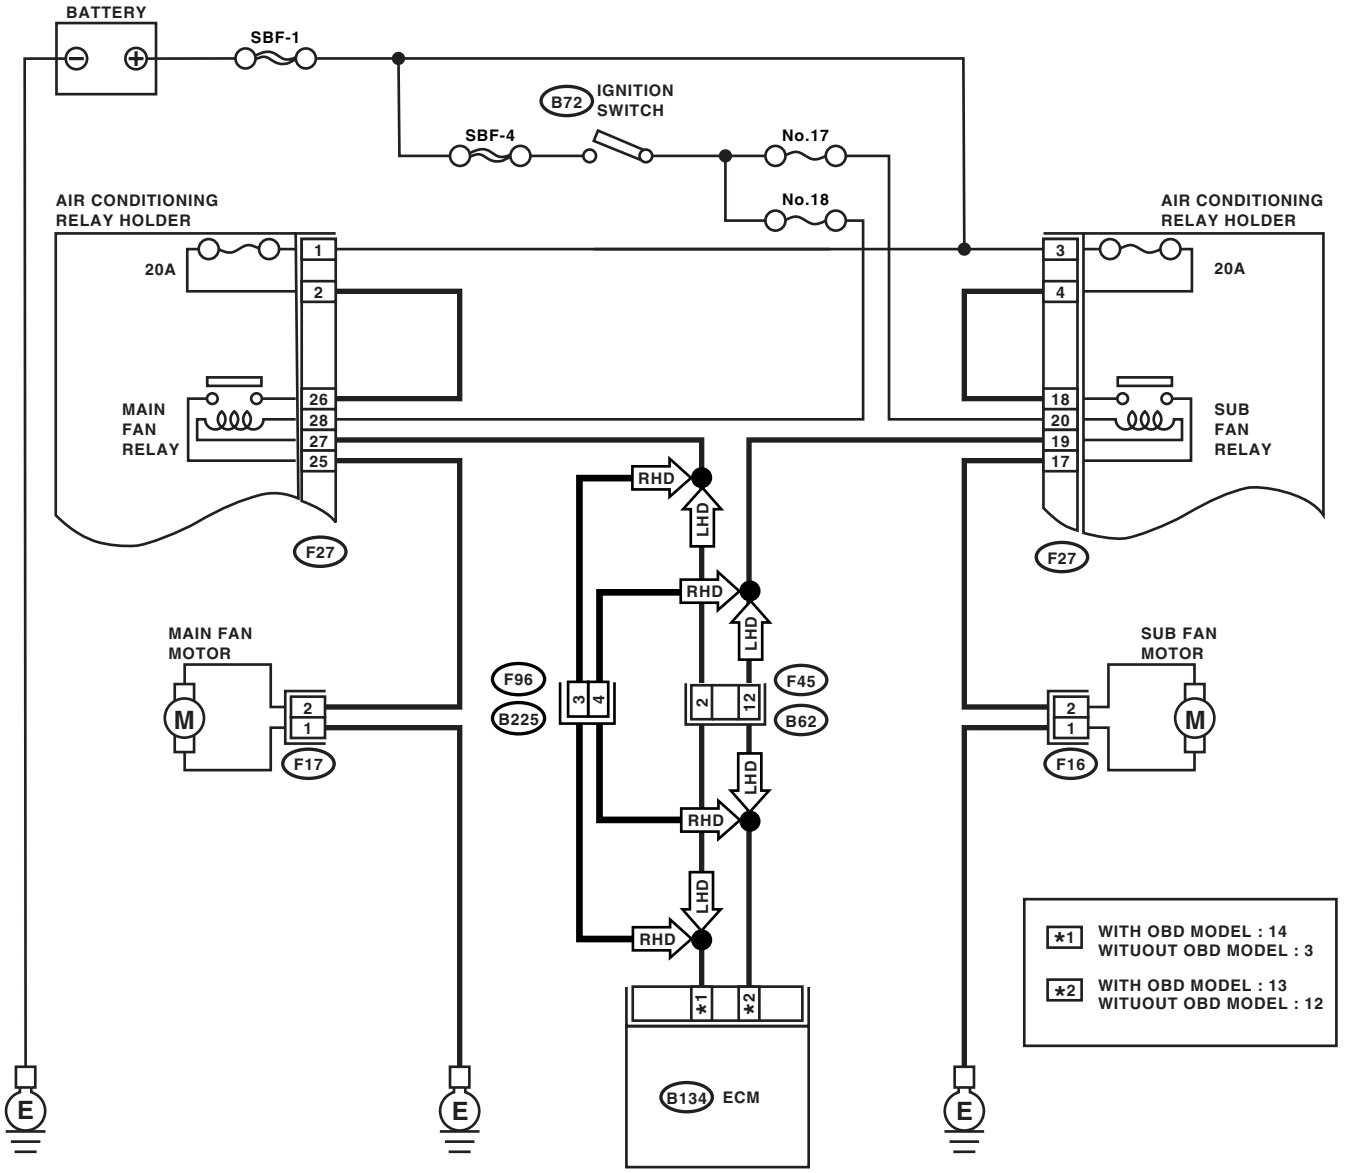

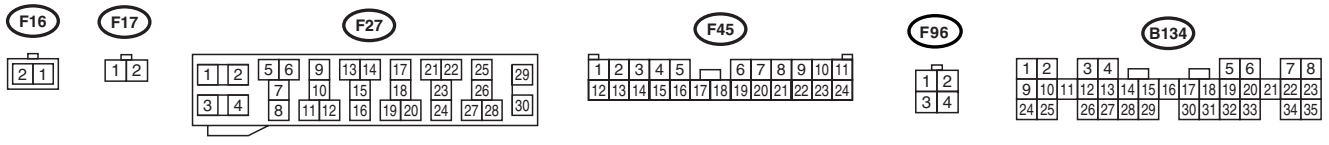

CO-00222

B: INSPECTION

DETECTING CONDITION:

- Engine coolant temperature is above 96°C (205°F).
- Vehicle speed is below 19 km/h (12 MPH).

TROUBLE SYMPTOM:

- Radiator main fan does not rotate under the above conditions.

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY TO MAIN FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from main fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 96°C (205°F). 4)Stop the engine and turn ignition switch to ON. 5)Measure the voltage between main fan motor connector and chassis ground. ***Connector & terminal*** ***(F17) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Go to step **5.**
2	**CHECK GROUND CIRCUIT OF MAIN FAN MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main fan motor connector and chassis ground. ***Connector & terminal*** ***(F17) No. 1 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the open circuit in harness between main fan motor connector and chassis ground.
3	**CHECK POOR CONTACT.** Check poor contact in main fan motor connector.	Is there poor contact in main fan motor connector?	Repair the poor contact in main fan motor connector.	Go to step **4.**
4	**CHECK MAIN FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 2, and ground (−) terminal to terminal No. 1 of main fan motor connector.	Does the main fan rotate?	Repair the poor contact in main fan motor connector.	Replace the main fan motor with a new one.
5	**CHECK POWER SUPPLY TO MAIN FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay from A/C relay holder. 3)Measure the voltage between main fan relay terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 26 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Go to step **7.**
6	**CHECK POWER SUPPLY TO MAIN FAN RELAY.** 1)Turn the ignition switch to ON. 2)Measure the voltage between main fan relay terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 28 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **10.**	Go to step **9.**
7	**CHECK 20 A FUSE.** 1)Remove the 20 A fuse from A/C relay holder. 2)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step **8.**

	Step	Check	Yes	No
8	**CHECK POWER SUPPLY TO A/C RELAY HOLDER 20 A FUSE TERMINAL.** Measure the voltage of harness between A/C relay holder 20 A fuse terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit in harness between 20 A fuse and main fan relay terminal.	Repair the open circuit in harness between main fuse box connector and 20 A fuse terminal.
9	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 18 from joint box. 3)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Repair the open circuit in harness between main fan relay and ignition switch.
10	**CHECK MAIN FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay. 3)Measure the resistance of main fan relay. ***Terminal*** ***No. 26 — No. 25:***	Is the resistance more than 1 MΩ?	Go to step **11.**	Replace the main fan relay.
11	**CHECK MAIN FAN RELAY.** 1)Connect the battery to terminals No. 27 and No. 28 of main fan relay. 2)Measure the resistance of main fan relay. ***Terminal*** ***No. 26 — No. 25:***	Is the resistance less than 1 Ω?	Go to step **12.**	Replace the main fan relay.
12	**CHECK HARNESS BETWEEN MAIN FAN RELAY TERMINAL AND MAIN FAN MOTOR CONNECTOR.** Measure the resistance of harness between main fan motor connector and main fan relay terminal. ***Connector & terminal*** ***(F17) No. 2 — (F27) No. 25:***	Is the resistance less than 1 Ω?	Go to step **13.**	Repair the open circuit in harness between main fan motor connector and main fan relay terminal.
13	**CHECK HARNESS BETWEEN MAIN FAN RELAY AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between main fan relay connector and ECM connector. ***Connector & terminal*** ***With OBD:*** ***(F27) No. 27 — (B134) No. 14:*** ***Without OBD:*** ***(F27) No. 27 — (B134) No. 3:***	Is the resistance less than 1 Ω?	Go to step **14.**	Repair the open circuit in harness between main fan relay and ECM.
14	**CHECK POOR CONTACT.** Check poor contact in connector between main fan and ECM.	Is there poor contact in connector between main fan motor and ECM?	Repair the poor contact connector.	Verify the DTC. Repair the trouble cause. <Ref. to EN(H4SO)-38, Read Diagnostic Trouble Code (DTC).>, <Ref. to EN(H4SOw/oOBD)-23, Read Diagnostic Trouble Code (DTC).>

3. Radiator Sub Fan System

A: SCHEMATIC

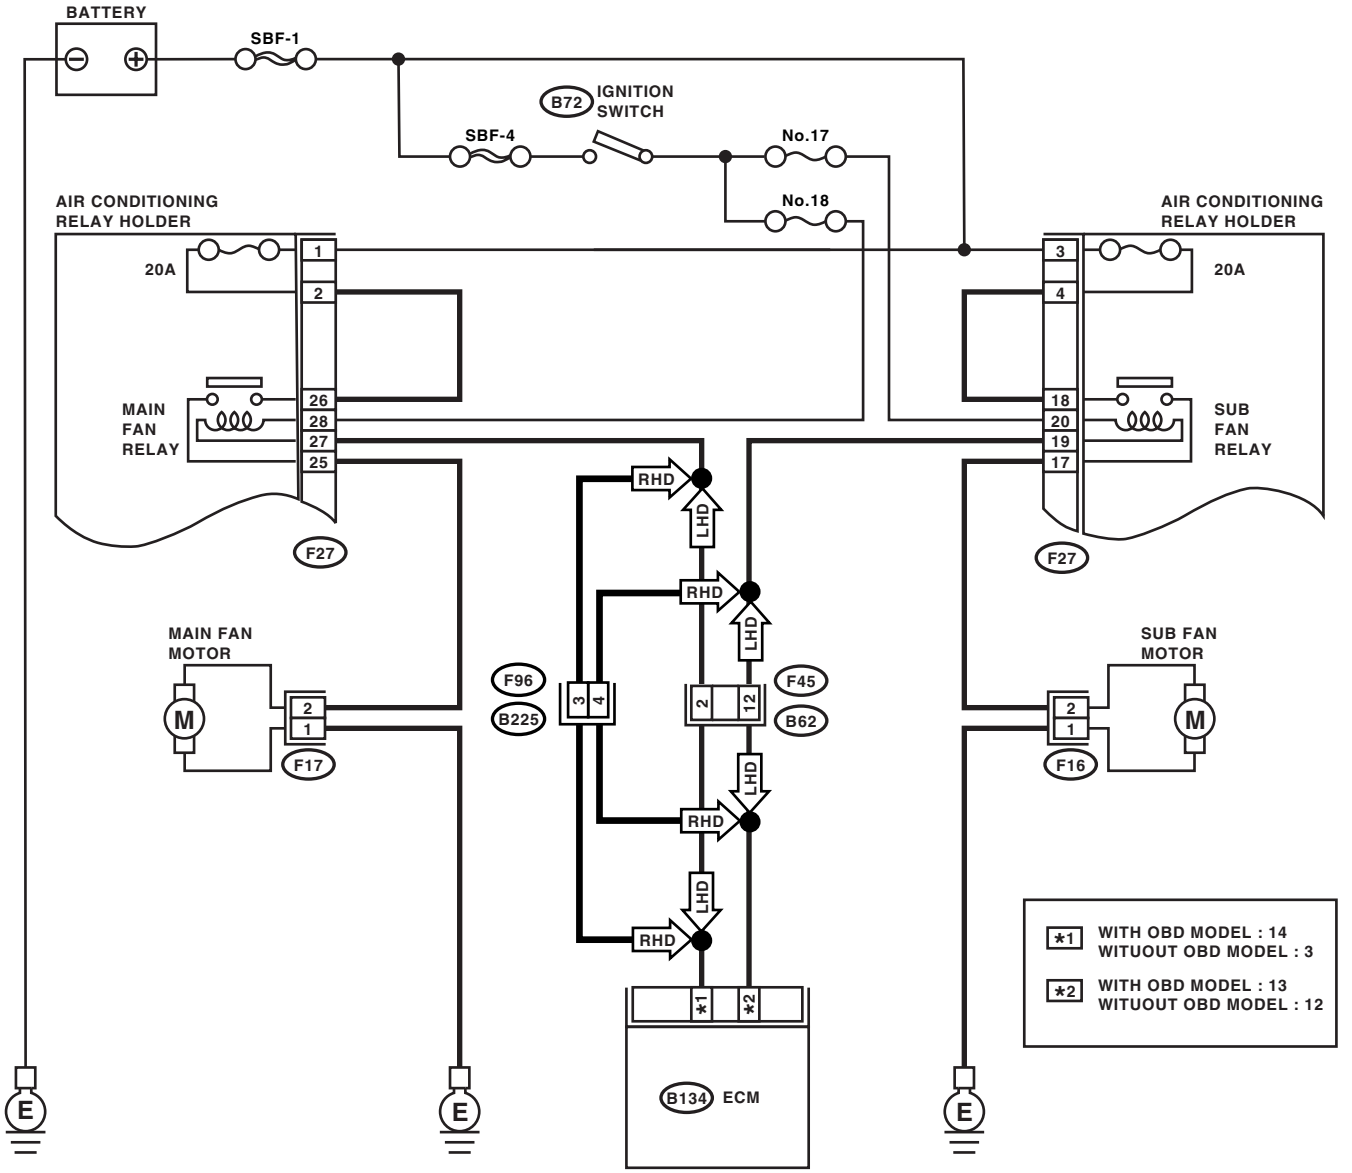

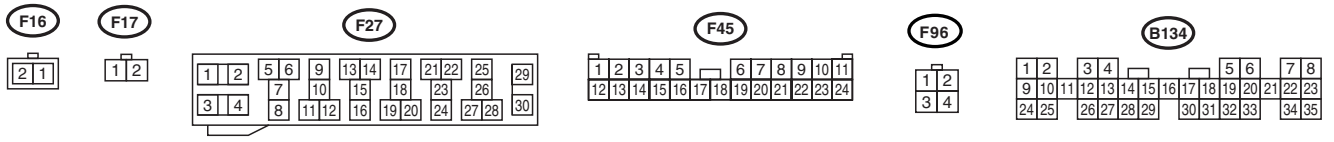

CO-00222

B: INSPECTION

NOTE:
System for A/C equipped models only.

DETECTING CONDITION:

Condition (1):

- Engine coolant temperature is below 95°C (203°F).
- A/C switch is turned ON.
- Vehicle speed is below 19 km/h (12 MPH).

Condition (2):

- Engine coolant temperature is above 100°C (212°F).
- A/C switch is turned OFF.
- Vehicle speed is below 19 km/h (12 MPH).

TROUBLE SYMPTOM:

- Radiator sub fan does not rotate under conditions (1) and (2) above.

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY TO SUB FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from sub fan motor and main fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 100°C (212°F). 4)Stop the engine and turn ignition switch to ON. 5)Measure the voltage between sub fan motor connector and chassis ground. ***Connector & terminal*** ***(F16) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Go to step **5.**
2	**CHECK GROUND CIRCUIT OF SUB FAN MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between sub fan motor connector and chassis ground. ***Connector & terminal*** ***(F16) No. 1 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the open circuit in harness between sub fan motor connector and chassis ground.
3	**CHECK POOR CONTACT.** Check poor contact in sub fan motor connector.	Is there poor contact in sub fan motor connector?	Repair the poor contact in sub fan motor connector.	Go to step **4.**
4	**CHECK SUB FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 2, and ground (−) terminal to terminal No. 1 of sub fan motor connector.	Does the sub fan rotate?	Repair the poor contact in sub fan motor connector.	Replace the sub fan motor with a new one.
5	**CHECK POWER SUPPLY TO SUB FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the sub fan relay from A/C relay holder. 3)Measure the voltage between sub fan relay terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 18 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Go to step **7.**

	Step	Check	Yes	No
6	**CHECK POWER SUPPLY TO SUB FAN RELAY.** 1)Turn the ignition switch to ON. 2)Measure the voltage between sub fan relay terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 20 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **10.**	Go to step **9.**
7	**CHECK 20 A FUSE.** 1)Remove the 20 A fuse from A/C relay holder. 2)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step **8.**
8	**CHECK POWER SUPPLY TO A/C RELAY HOLDER 20 A FUSE TERMINAL.** Measure the voltage of harness between A/C relay holder 20 A fuse terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit in harness between 20 A fuse and sub fan relay terminal.	Repair the open circuit in harness between main fuse box connector and 20 A fuse terminal.
9	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 17 from joint box. 3)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Repair the open circuit in harness between sub fan relay and ignition switch.
10	**CHECK SUB FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of sub fan relay. ***Terminals*** ***No. 17 — No. 18:***	Is the resistance more than 1 MΩ?	Go to step **11.**	Replace the sub fan relay.
11	**CHECK SUB FAN RELAY.** 1)Connect the battery to terminals No. 20 and No. 19 of sub fan relay. 2)Measure the resistance of sub fan relay. ***Terminals*** ***No. 17 — No. 18:***	Is the resistance less than 1 Ω?	Go to step **12.**	Replace the sub fan relay.
12	**CHECK HARNESS BETWEEN SUB FAN RELAY TERMINAL AND SUB FAN MOTOR CONNECTOR.** Measure the resistance of harness between sub fan motor connector and sub fan relay terminal. ***Connector & terminal*** ***(F16) No. 2 — (F27) No. 17:***	Is the resistance less than 1 Ω?	Go to step **13.**	Repair the open circuit in harness between sub fan motor and sub fan relay connector.
13	**CHECK HARNESS BETWEEN SUB FAN RELAY AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between sub fan relay connector and ECM connector. ***Connector & terminal*** ***With OBD:*** ***(F27) No. 19 — (B134) No. 13:*** ***Without OBD:*** ***(F27) No. 19 — (B134) No. 12:***	Is the resistance less than 1 Ω?	Go to step **14.**	Repair the open circuit in harness between sub fan relay and ECM.

	Step	Check	Yes	No
14	**CHECK POOR CONTACT.** Check poor contact in connector between sub fan and ECM.	Is there poor contact in connector between sub fan motor and ECM?	Repair the poor contact connector.	Verify the DTC. Repair the trouble cause. <Ref. to EN(H4SO)-38, Read Diagnostic Trouble Code (DTC).>, <Ref. to EN(H4SOw/ oOBD)-23, Read Diagnostic Trouble Code (DTC).>

4. Engine Coolant

A: REPLACEMENT

1. DRAINING OF ENGINE COOLANT

1) Lift-up the vehicle.
2) Remove the under cover.
3) Remove the drain plug to drain engine coolant into container.

NOTE:
Remove the radiator cap so that engine coolant will drain faster.

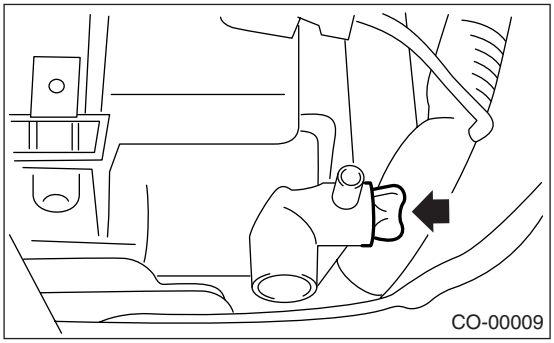

4) Install the drain plug.

2. FILLING OF ENGINE COOLANT

1) Fill engine coolant into the radiator up to filler neck position.

Coolant capacity (fill up to "FULL" level):
1.6 L AT model:
Approx. 7.3 ℓ (7.71 US qt, 6.42 Imp qt)
1.6 L MT model:
Approx. 7.4 ℓ (7.82 US qt, 6.51 Imp qt)
2.0 L and 2.5 L AT model:
Approx. 6.9 ℓ (7.29 US qt, 6.07 Imp qt)
2.0 L and 2.5 L MT model:
Approx. 7.0 ℓ (7.4 US qt, 6.2 Imp qt)

NOTE:
The SUBARU Genuine Coolant containing anti-freeze and anti-rust agents is especially made for SUBARU engine, which has an aluminum crank-case. Always use SUBARU Genuine Coolant, since other coolant may cause corrosion.

2) Fill engine coolant into the reservoir tank up to Full level.

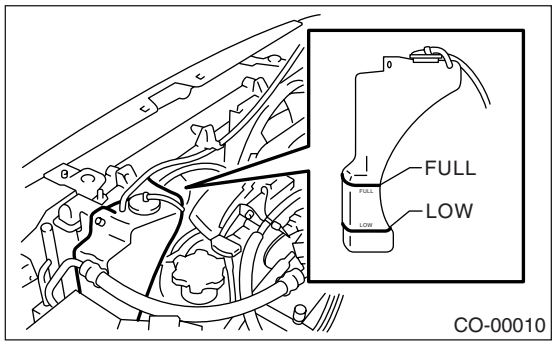

3) Warm-up the engine completely for more than 5 minutes at 2,000 to 3,000 rpm.
4) If the engine coolant level drops in radiator, add engine coolant to filler neck position.
5) If the engine coolant level drops from Full level of reservoir tank, add engine coolant to Full level.
6) Attach the radiator cap and reservoir tank cap properly.

B: INSPECTION

1. RELATIONSHIP OF SUBARU COOLANT CONCENTRATION AND FREEZING TEMPERATURE

The concentration and safe operating temperature of the SUBARU coolant is shown in the diagram. Measuring the temperature and specific gravity of the coolant will provide this information.
[Example]
If the coolant temperature is 25°C (77°F) and its specific gravity is 1.054, the concentration is 35% (point A), the safe operating temperature is −14°C (7°F) (point B), and the freezing temperature is −20°C (−4°F) (point C).

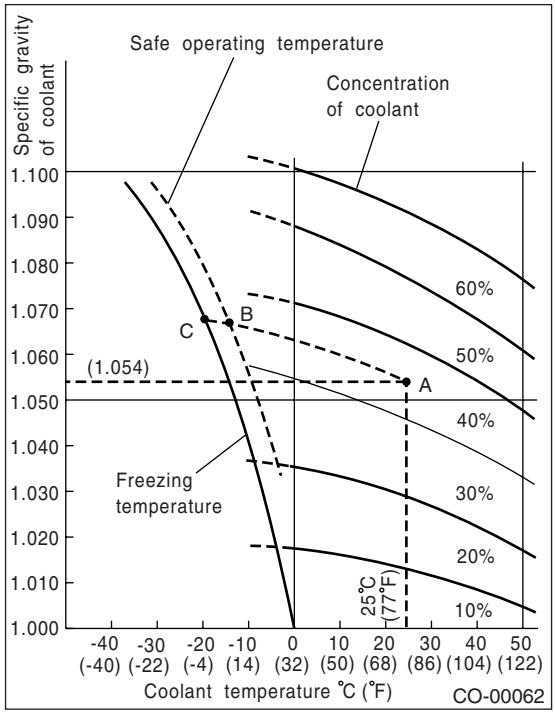

2. PROCEDURE TO ADJUST THE CONCENTRATION OF THE COOLANT

To adjust the concentration of the coolant according to temperature, find the proper fluid concentration in the above diagram and replace the necessary amount of coolant with an undiluted solution of SUBARU genuine coolant (concentration 50%).
The amount of coolant that should be replaced can be determined using the diagram.
[Example]
Assume that the coolant concentration must be increased from 25% to 40%. Find point A, where the 25% line of coolant concentration intersects with the 40% curve of the necessary coolant concentration, and read the scale on the vertical axis of the graph at height A. The quantity of coolant to be drained is 2.1 ℓ (2.2 US qt, 1.8 Imp qt). Drain 2.1 ℓ (2.2 US qt, 1.8 Imp qt) of coolant from the cooling system and add 2.1 ℓ (2.2 US qt, 1.8 Imp qt) of the undiluted solution of SUBARU coolant.
If a coolant concentration of 50% is needed, drain all the coolant and refill with the undiluted solution only.

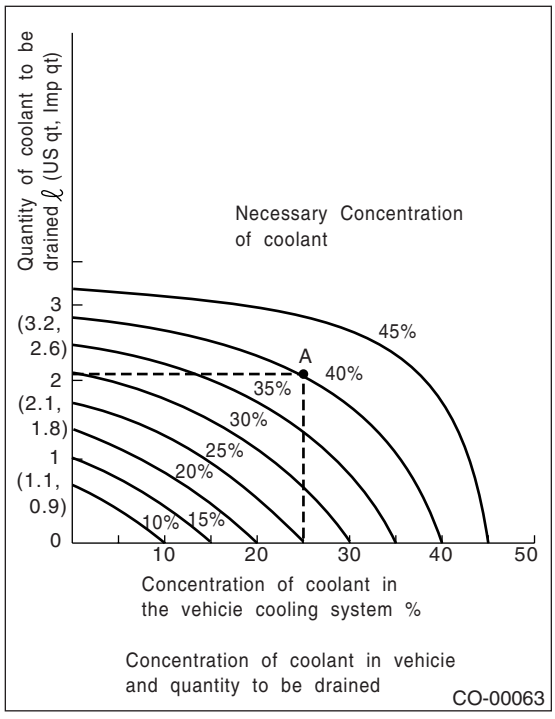

5. Water Pump

A: REMOVAL

1) Remove the radiator. <Ref. to CO(H4SO)-21, REMOVAL, Radiator.>
2) Remove the V-belts.
<Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
3) Remove the timing belt.
<Ref. to ME(H4SO)-50, TIMING BELT, REMOVAL, Timing Belt Assembly.>
4) Remove the automatic belt tension adjuster.

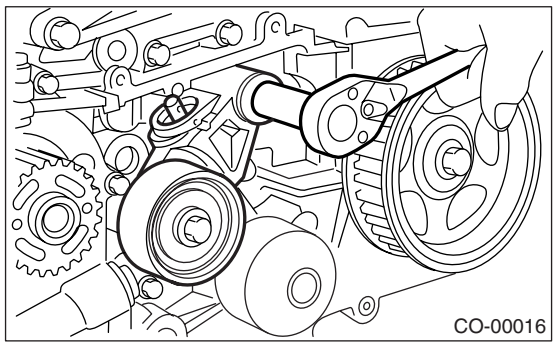

5) Remove the belt idler No. 2.

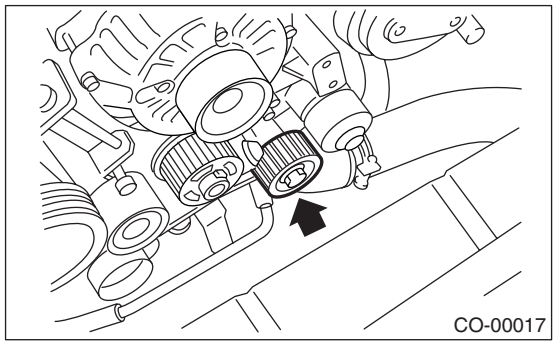

6) Remove the camshaft sprocket (LH) by using ST.
ST 18231AA010 CAMSHAFT SPROCKET WRENCH

NOTE:
Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.

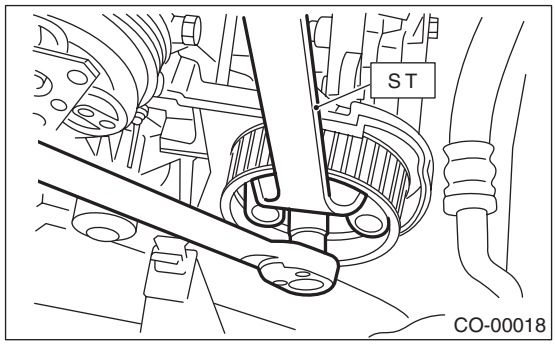

7) Remove the belt cover No. 2 (LH).

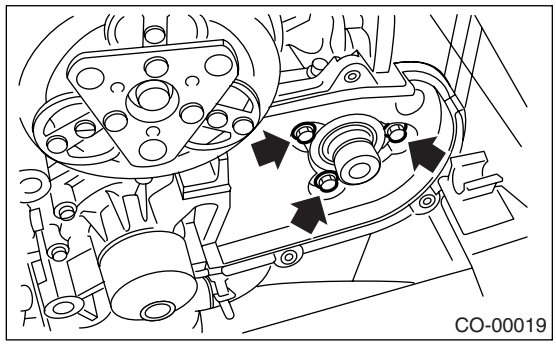

8) Remove the tensioner bracket.

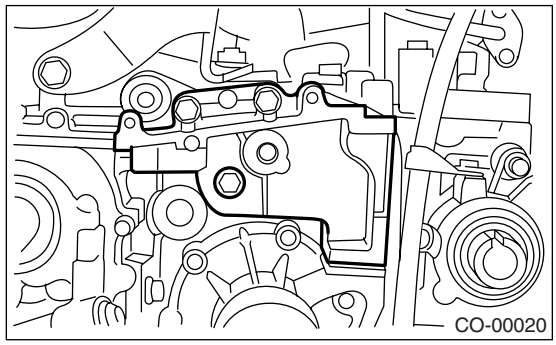

9) Disconnect the hose from water pump.
10) Remove the water pump.

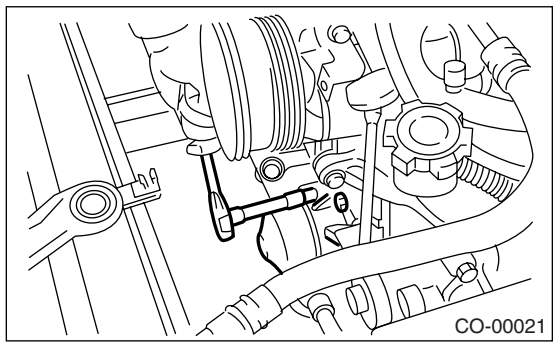

B: INSTALLATION

1) Install the water pump onto cylinder block (LH).

NOTE:
- Replace the gasket with a new one.
- When installing the water pump, tighten the bolts in two stages in alphabetical sequence as shown in the figure.

Tightening torque:
First:
12 N·m (1.2 kgf-m, 8.7 ft-lb)
Second:
12 N·m (1.2 kgf-m, 8.7 ft-lb)

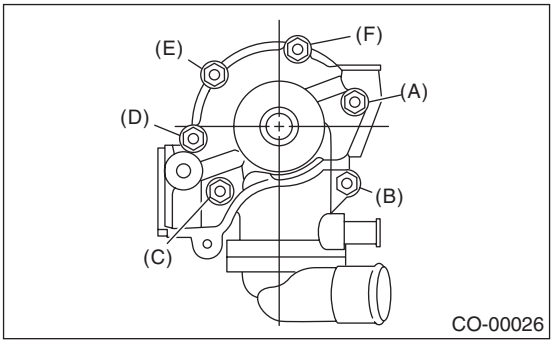

2) Connect the hose to water pump.
3) Install the tensioner bracket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

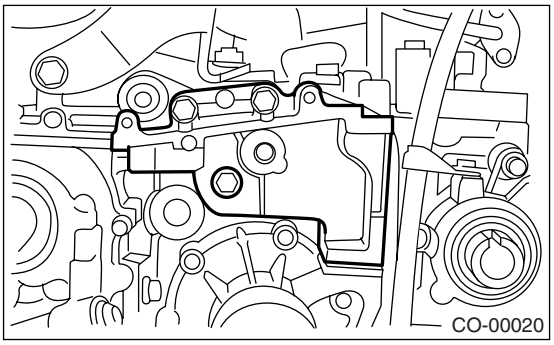

4) Install the belt cover No. 2 (LH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

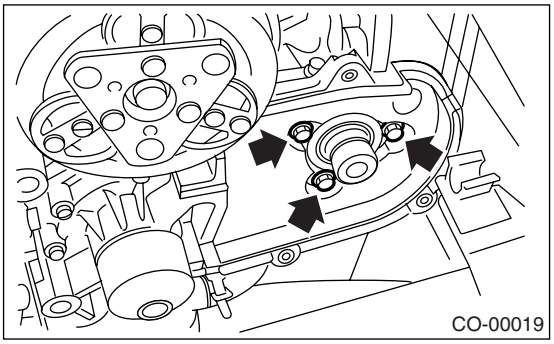

5) Install the camshaft sprockets (LH) by using ST.
ST 18231AA010 CAMSHAFT SPROCKET WRENCH

NOTE:
Also the CAMSHAFT SPROCKET WRENCH (499207100) can be used.

Tightening torque:
78 N·m (8.0 kgf-m, 57.9 ft-lb)

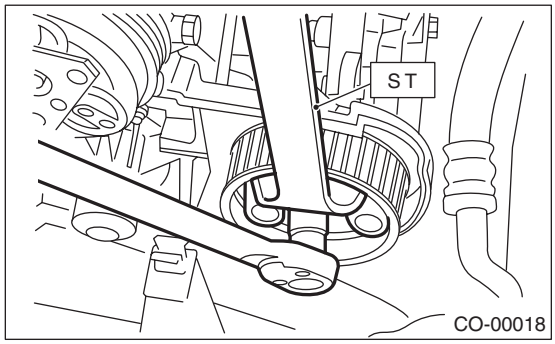

6) Install the belt idler No. 2.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

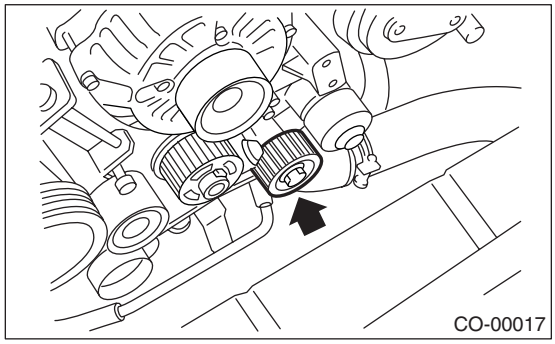

7) Install the automatic belt tension adjuster whose tension rod is held with pin. <Ref. to ME(H4SO)-51, AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER, INSTALLATION, Timing Belt Assembly.>
8) Install the timing belt. <Ref. to ME(H4SO)-52, TIMING BELT, INSTALLATION, Timing Belt Assembly.>
9) Install the V-belts. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>
10) Install the radiator. <Ref. to CO(H4SO)-22, INSTALLATION, Radiator.>

C: INSPECTION

1) Check the water pump bearing for smooth rotation.
2) Check the water pump pulley for abnormalities.
3) Using a dial gauge, measure the impeller runout in thrust direction while rotating the pulley.

"Thrust" runout limit:
0.5 mm (0.020 in)

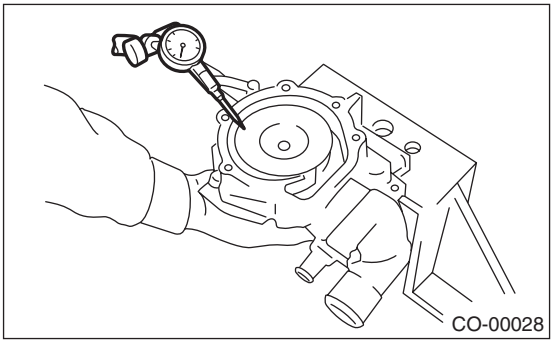

4) Check the clearance between impeller and pump case.

Clearance between impeller and pump case:
Standard
0.5 — 0.7 mm (0.020 — 0.028 in)
Limit
1.0 mm (0.039 in)

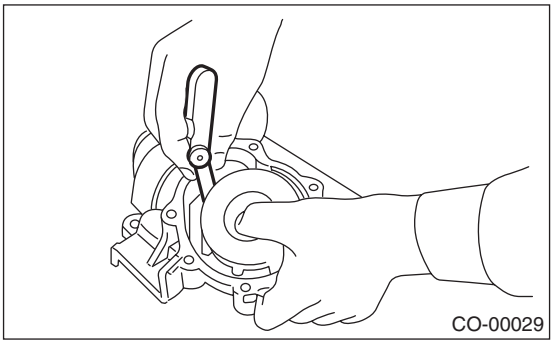

5) After water pump installation, check the pulley shaft for engine coolant leaks. If leaks are noted, replace the water pump assembly.

6. Thermostat

A: REMOVAL

1) Set the vehicle on a lift.
2) Lift-up the vehicle.
3) Remove the under cover.
4) Drain the engine coolant completely. <Ref. to CO(H4SO)-14, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

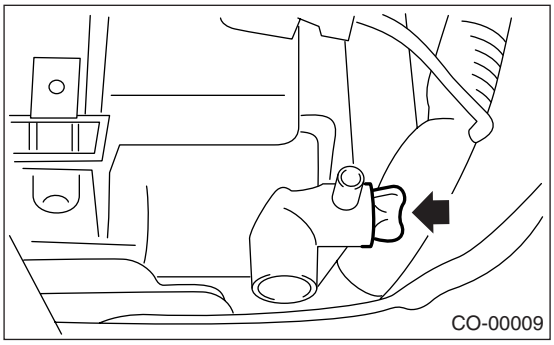

5) Disconnect the radiator outlet hose from thermostat cover.

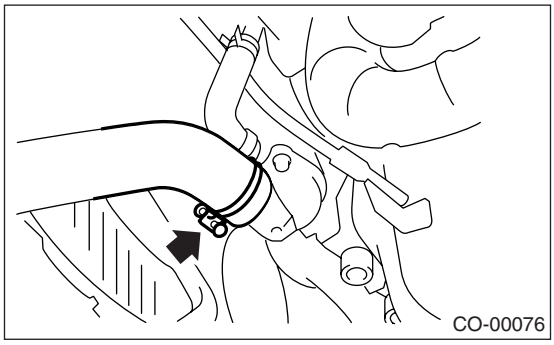

6) Remove the thermostat cover and gasket, and then pull out the thermostat.

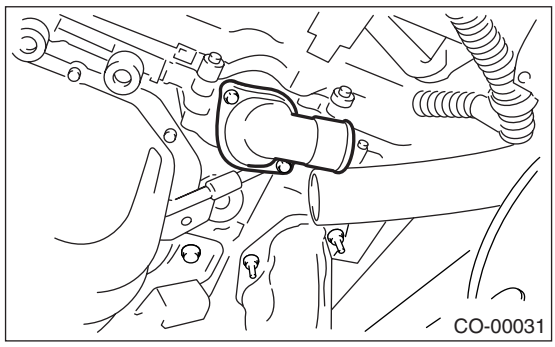

B: INSTALLATION

1) Install the thermostat in water pump, and then install the thermostat cover together with a gasket.

NOTE:
• When reinstalling the thermostat, use a new gasket.
• The thermostat must be installed with the jiggle pin (A) facing to front side.

Tightening torque:
6.5 N·m (0.65 kgf-m, 4.7 ft-lb)

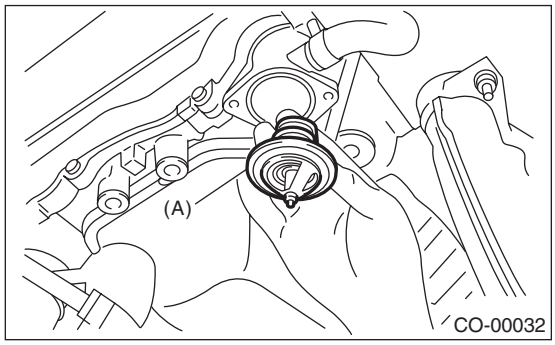

2) Fill engine coolant. <Ref. to CO(H4SO)-14, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

C: INSPECTION

Replace the thermostat if the valve does not close completely at an ambient temperature or if the following test shows unsatisfactory results.
Immerse the thermostat and thermometer in water. Raise water temperature gradually, and measure the temperature and valve lift when the valve begins to open and when the valve is fully opened. During the test, agitate the water for even temperature distribution. The measurement should be to the specification.

Starts to open:
Model with OBD:
80 — 84°C (176 — 183°F)
Model without OBD:
76 — 80°C (169 — 176°F)

Fully opens:
Model with OBD:
95°C (203°F)
Model without OBD:
91°C (196°F)

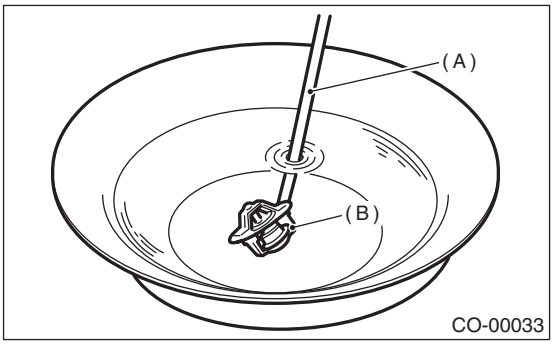

(A) Thermometer
(B) Thermostat

7. Radiator

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

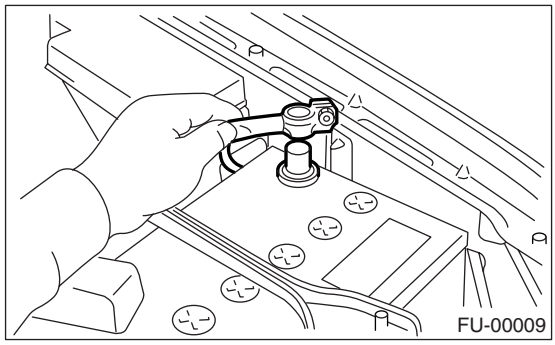

3) Lift-up the vehicle.
4) Remove the under cover.
5) Drain the engine coolant completely. <Ref. to CO(H4SO)-14, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
6) Disconnect the connectors of radiator main fan motor (A) and sub fan motor (B).

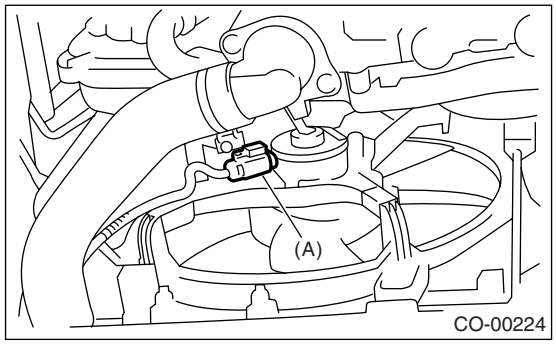

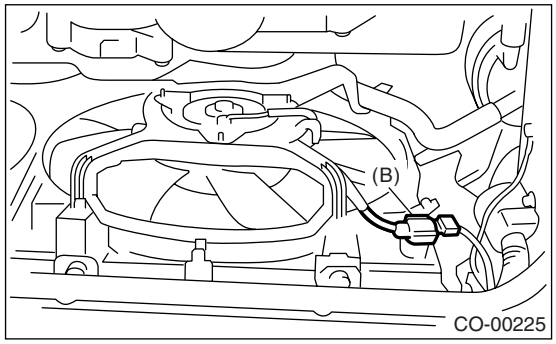

7) Disconnect the radiator outlet hose from water pump.

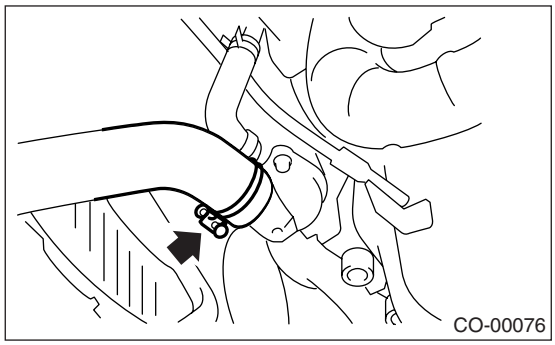

8) Disconnect the ATF cooler hoses from ATF pipe. (AT model)
Plug the openings in the hose and radiator with caps in order to prevent ATF from leaking.

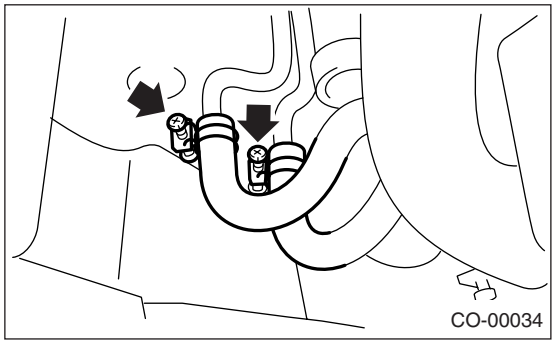

9) Lower the vehicle.
10) Disconnect the overflow hose.
11) Remove the reservoir tank. <Ref. to CO(H4SO)-27, REMOVAL, Reservoir Tank.>
12) Remove the air intake duct. (2.5 L model)
13) Disconnect the radiator inlet hose from engine.

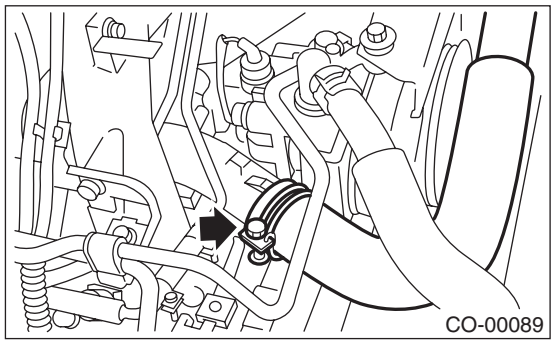

14) Remove the radiator upper brackets.

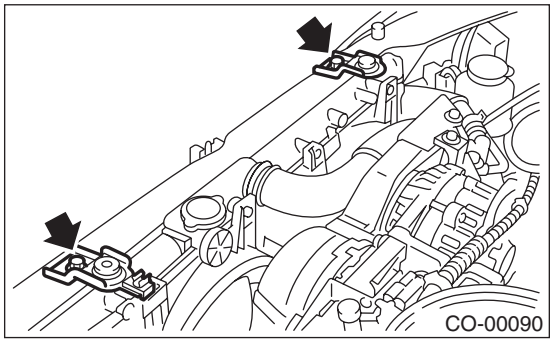

15) Detach the power steering hose from clip on radiator.

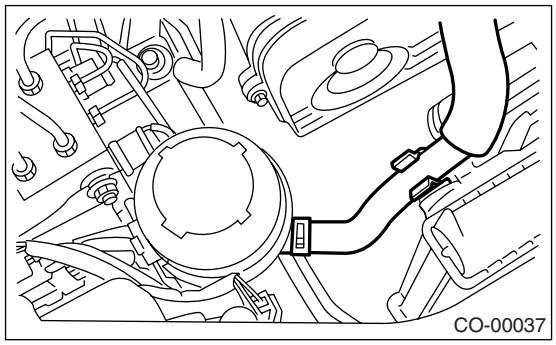

16) Lift the radiator up and away from the vehicle.

B: INSTALLATION

1) Attach the radiator lower cushions to holes on the radiator lower bracket.

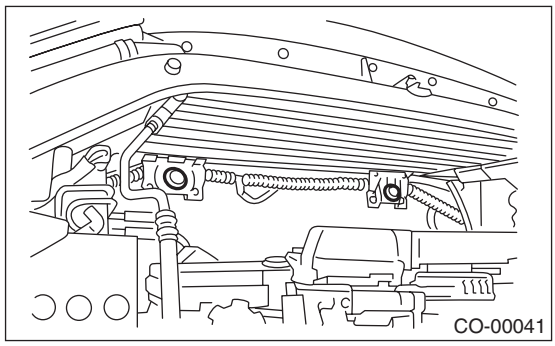

2) Install the radiator to vehicle.

NOTE:
Fit the pins on lower side of radiator into the cushions on the body side.

3) Install the radiator upper brackets, and then tighten the bolts.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

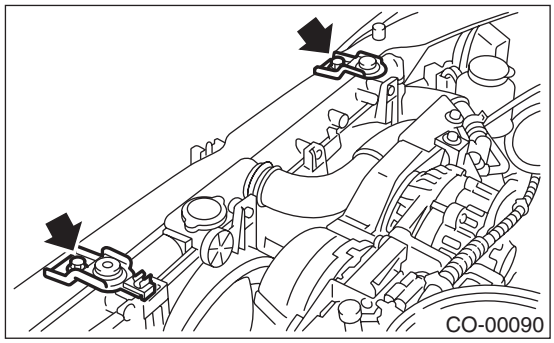

4) Attach the power steering hose to radiator.

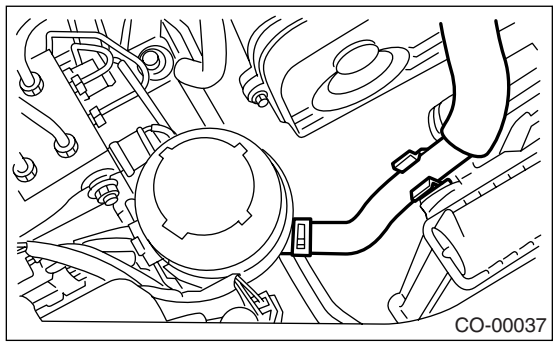

5) Connect the radiator inlet hose.

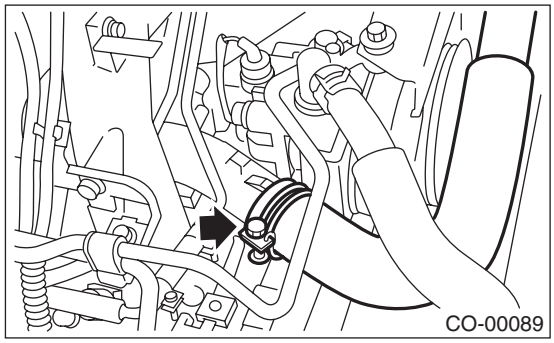

6) Install the air intake duct. (2.5 L model)
7) Install the reservoir tank.
8) Connect the overflow hose.
9) Lift-up the vehicle.
10) Connect the ATF cooler hoses. (AT model)

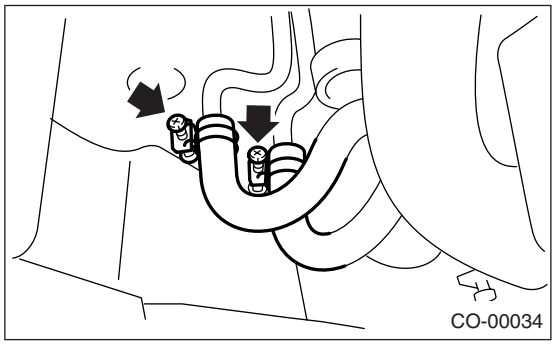

11) Connect the radiator outlet hose.

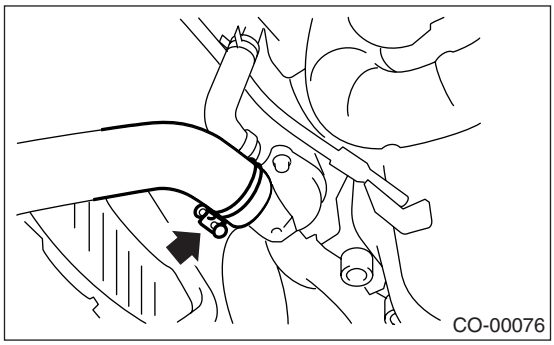

12) Connect the connectors to radiator main fan motor (A) and sub fan motor (B).

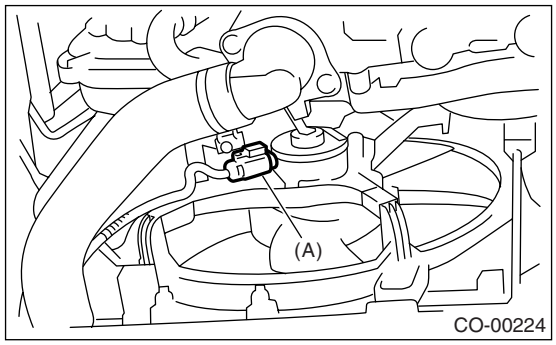

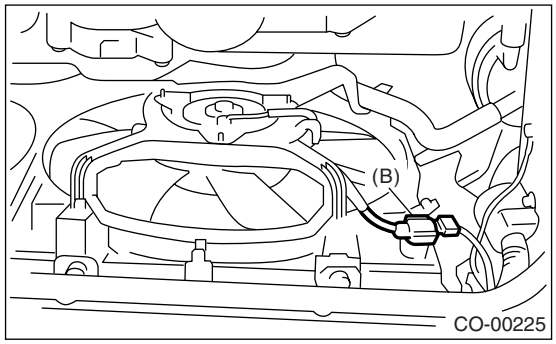

13) Install the under cover.
14) Lower the vehicle.
15) Connect the battery ground cable to battery.

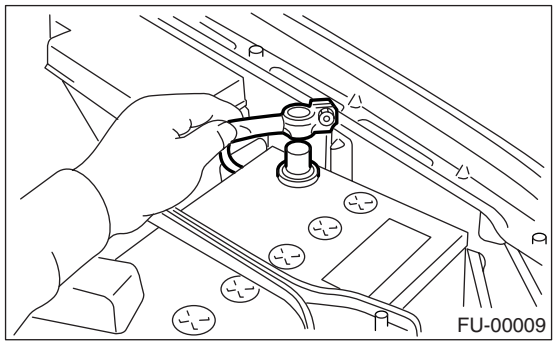

16) Fill engine coolant. <Ref. to CO(H4SO)-14, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
17) Check the ATF level. <Ref. to 4AT-31, INSPECTION, Automatic Transmission Fluid.>

C: INSPECTION

1) Remove the radiator cap, top off radiator, and then attach the tester to radiator in place of cap.

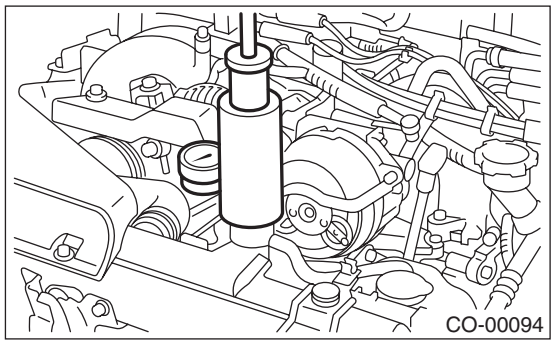

2) Apply a pressure of 157 kPa (1.6 kg/cm^2, 23 psi) to the radiator to check if:
(1) Engine coolant leaks at/around radiator.
(2) Engine coolant leaks at/around hoses or connections.

CAUTION:
• Engine should be turned off.
• Wipe engine coolant from check points in advance.
• Be careful to prevent engine coolant from spurting out when removing the tester.
• Be careful also not to deform the filler neck of radiator when installing or removing tester.

8. Radiator Cap

A: INSPECTION

1) Attach the radiator cap to tester.

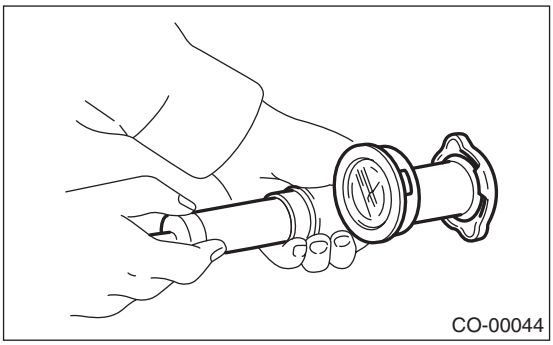

2) Increase the pressure until tester gauge pointer stops. Radiator cap is functioning properly if it holds the service limit pressure for 5 to 6 seconds.

Standard pressure:
93 — 123 kPa (0.95 — 1.25 kg/cm^2, 14 — 18 psi)

Service limit pressure:
83 kPa (0.85 kg/cm^2, 12 psi)

CAUTION:
Be sure to remove foreign matter and rust from the cap in advance otherwise, results of pressure test will be incorrect.

9. Radiator Main Fan and Fan Motor

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

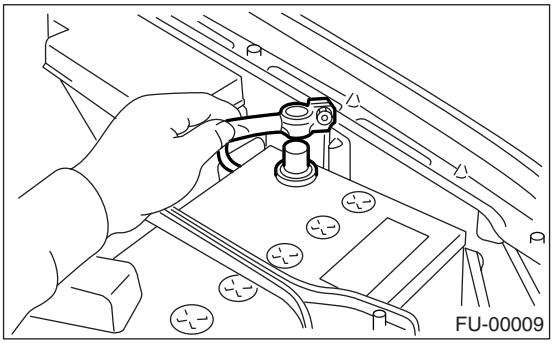

3) Lift-up the vehicle.
4) Remove the under cover.
5) Disconnect the connector of main fan motor (A).

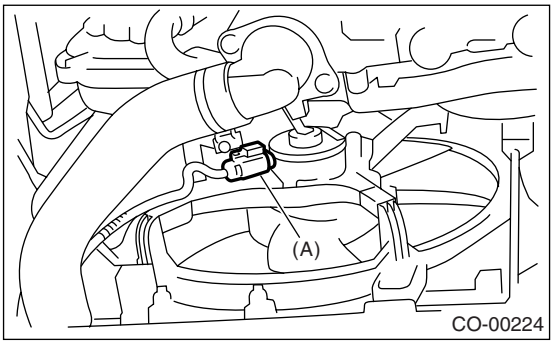

6) Remove the ATF hose from clip of radiator main fan motor assembly. (AT model)
7) Lower the vehicle.
8) Disconnect the overflow hose.
9) Remove the reservoir tank. <Ref. to CO(H4SO)-27, REMOVAL, Reservoir Tank.>
10) Remove the bolts which secure the radiator main fan shroud to radiator.

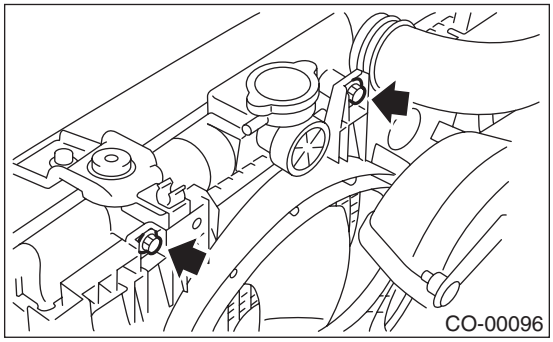

11) Remove the radiator fan motor assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
• If it is difficult to install the radiator main fan motor assembly, first loosen the bolts which hold the radiator sub fan motor assembly.
• Refer to COMPONENT for tightening torque. <Ref. to CO(H4SO)-3, COMPONENT, General Description.>

C: DISASSEMBLY

1) Remove the nut which holds the fan itself onto fan motor and shroud assembly.

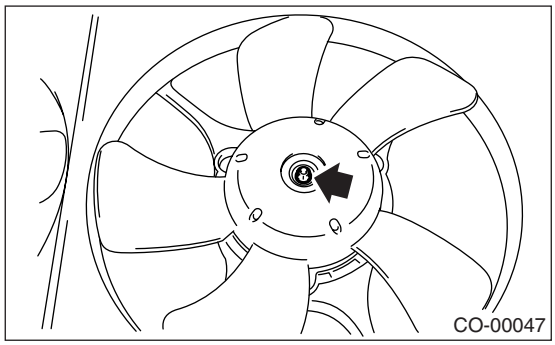

2) Remove the bolts which install the fan motor.

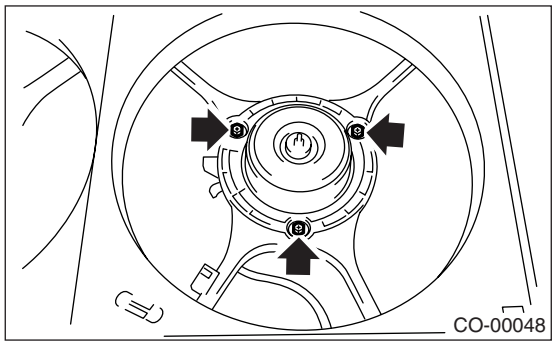

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:
Refer to COMPONENT for tightening torque. <Ref. to CO(H4SO)-3, COMPONENT, General Description.>

10. Radiator Sub Fan and Fan Motor

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

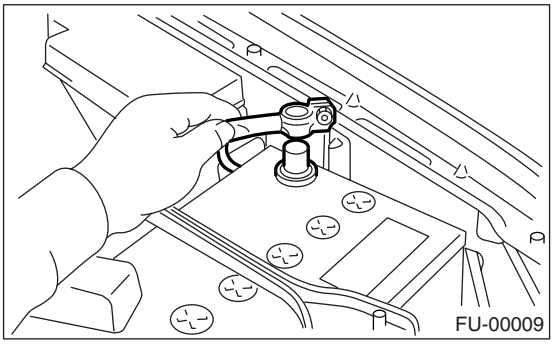

3) Lift-up the vehicle.
4) Remove the under cover.
5) Disconnect the connector of sub fan motor (B).

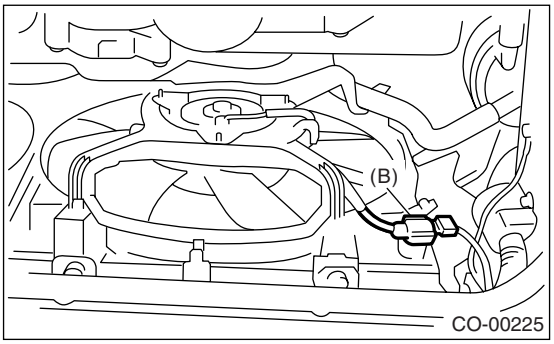

6) Remove the ATF hose from clips of radiator sub fan motor assembly. (AT model)
7) Lower the vehicle.
8) Remove the air intake duct. (2.5 L model)
9) Remove the bolts which hold the radiator sub fan shroud to radiator.

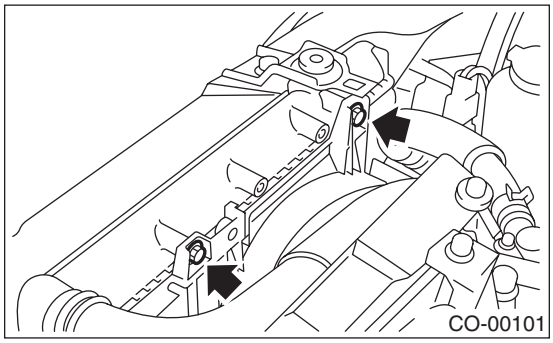

10) Remove the radiator sub fan motor assembly through the under side of vehicle.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Refer to COMPONENT for tightening torque. <Ref. to CO(H4SO)-3, COMPONENT, General Description.>

C: DISASSEMBLY

1) Remove the clip which holds the motor connector onto shroud.
2) Remove the nut which holds the fan itself onto fan motor.

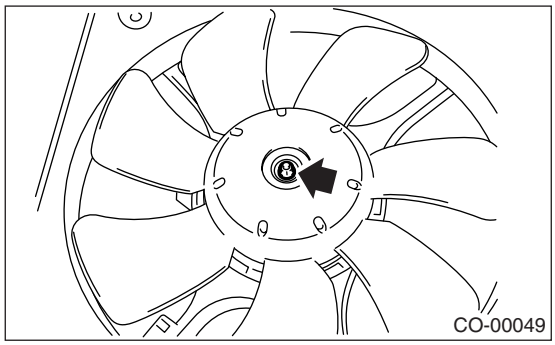

3) Remove the bolts which install the fan motor onto shroud.

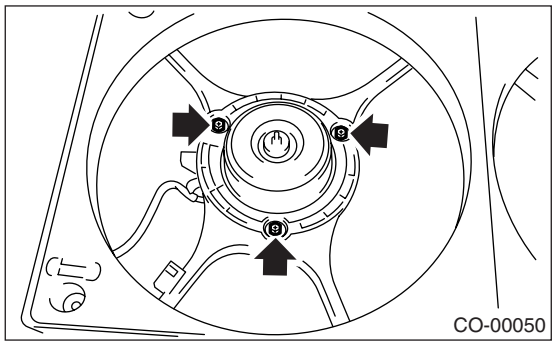

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:
Refer to COMPONENT for tightening torque. <Ref. to CO(H4SO)-3, COMPONENT, General Description.>

11.Reservoir Tank

A: REMOVAL

1) Disconnect the overflow hose from the radiator filler neck position.
2) Pressing the pawl (A), remove the reservoir tank by pulling in the direction indicated by the arrow.

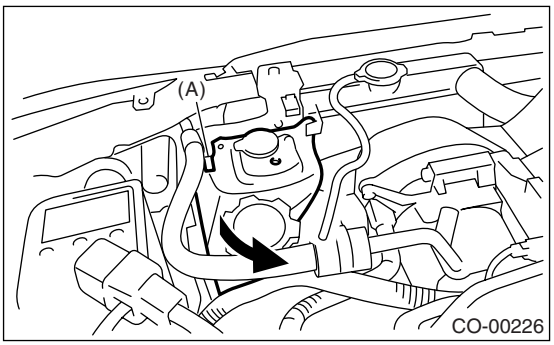

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure the engine coolant level is between full and low.

12.Engine Cooling System Trouble in General

A: INSPECTION

Trouble	Possible cause	Corrective action
Over-heating	a. Insufficient engine coolant	Replenish the engine coolant, inspect for leakage, and repair.
	b. Loose timing belt	Repair or replace the timing belt tensioner.
	c. Oil on timing belt	Replace.
	d. Malfunction of thermostat	Replace.
	e. Malfunction of water pump	Replace.
	f. Clogged engine coolant passage	Clean.
	g. Improper ignition timing	Inspect and repair the ignition control system. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>
	h. Clogged or leaking radiator	Clean or repair, or replace.
	i. Improper engine oil in engine coolant	Replace the engine coolant.
	j. Air/fuel mixture ratio too lean	Inspect and repair the fuel injection system. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.>
	k. Excessive back pressure in exhaust system	Clean or replace.
	l. Insufficient clearance between piston and cylinder	Adjust or replace.
	m. Slipping clutch	Repair or replace.
	n. Dragging brake	Adjust.
	o. Defective thermostat	Replace.
	p. Malfunction of radiator fan	Inspect the radiator fan relay, engine coolant temperature sensor or radiator motor and replace there.
Over-cooling	a. Atmospheric temperature extremely low	Partly cover the radiator front area.
	b. Defective thermostat	Replace.
Engine coolant leaks	a. Loosened or damaged connecting units on hoses	Repair or replace.
	b. Leakage from water pump	Replace.
	c. Leakage from water pipe	Repair or replace.
	d. Leakage around cylinder head gasket	Retighten the cylinder head bolts or replace gasket.
	e. Damaged or cracked cylinder head and crankcase	Repair or replace.
	f. Damaged or cracked thermostat case	Repair or replace.
	g. Leakage from radiator	Repair or replace.
Noise	a. Defective timing belt	Replace.
	b. Defective radiator fan	Replace.
	c. Defective water pump bearing	Replace the water pump.
	d. Defective water pump mechanical seal	Replace the water pump.

LUBRICATION

LU(H4SO)

Page

1. General Description 2
2. Oil Pressure System 6
3. Engine Oil....8
4. Oil Pump 10
5. Oil Pan and Strainer....14
6. Oil Pressure Switch....18
7. Engine Oil Filter....19
8. Engine Lubrication System Trouble in General....20

1. General Description

A: SPECIFICATIONS

Lubrication method				Forced lubrication
Oil pump	Pump type			Trochoid type
	Number of teeth	Inner rotor		9
		Outer rotor		10
	Outer rotor diameter × thickness			78 × 7 mm (3.07 × 0.28 in)
	Tip clearance between inner and outer rotor		STANDARD	0.04 — 0.14 mm (0.0016 — 0.0055 in)
			LIMIT	0.18 mm (0.0071 in)
	Side clearance between inner rotor and pump case		STANDARD	0.02 — 0.07 mm (0.0008 — 0.0028 in)
			LIMIT	0.12 mm (0.0047 in)
	Case clearance between outer rotor and pump case		STANDARD	0.10 — 0.175 mm (0.0039 — 0.0069 in)
			LIMIT	0.20 mm (0.0079 in)
	Capacity at 80°C (176°F)	600 rpm	- Discharge pressure	98 kPa (1.0 kg/cm^2, 14 psi)
			- Discharge quantity	3.2 ℓ (3.4 US qt, 2.8 Imp qt)/min.
		5,000 rpm	- Discharge pressure	294 kPa (3.0 kg/cm^2, 43 psi)
			- Discharge quantity	32.6 ℓ (34.4 US qt, 28.7 Imp qt)/min.
	Relief valve operation pressure			490 kPa (5.0 kg/cm^2, 71 psi)
Oil filter	Type			Full-flow filter type
	Filtration area			1,000 cm^2 (155 sq in)
	By-pass valve opening pressure			160 kPa (1.63 kg/cm^2, 23.2 psi)
	Outer diameter × width			80 × 70 mm (3.15 × 2.76 in)
	Oil filter to engine thread size			M 20 × 1.5
Oil pressure switch	Type			Immersed contact point type
	Working voltage — wattage			12 V — 3.4 W or less
	Warning light activation pressure			14.7 kPa (0.15 kg/cm^2, 2.1 psi)
	Proof pressure			More than 981 kPa (10 kg/cm^2, 142 psi)
Oil capacity (at replacement)				4.0 ℓ (4.2 US qt, 3.5 Imp qt)

B: COMPONENT

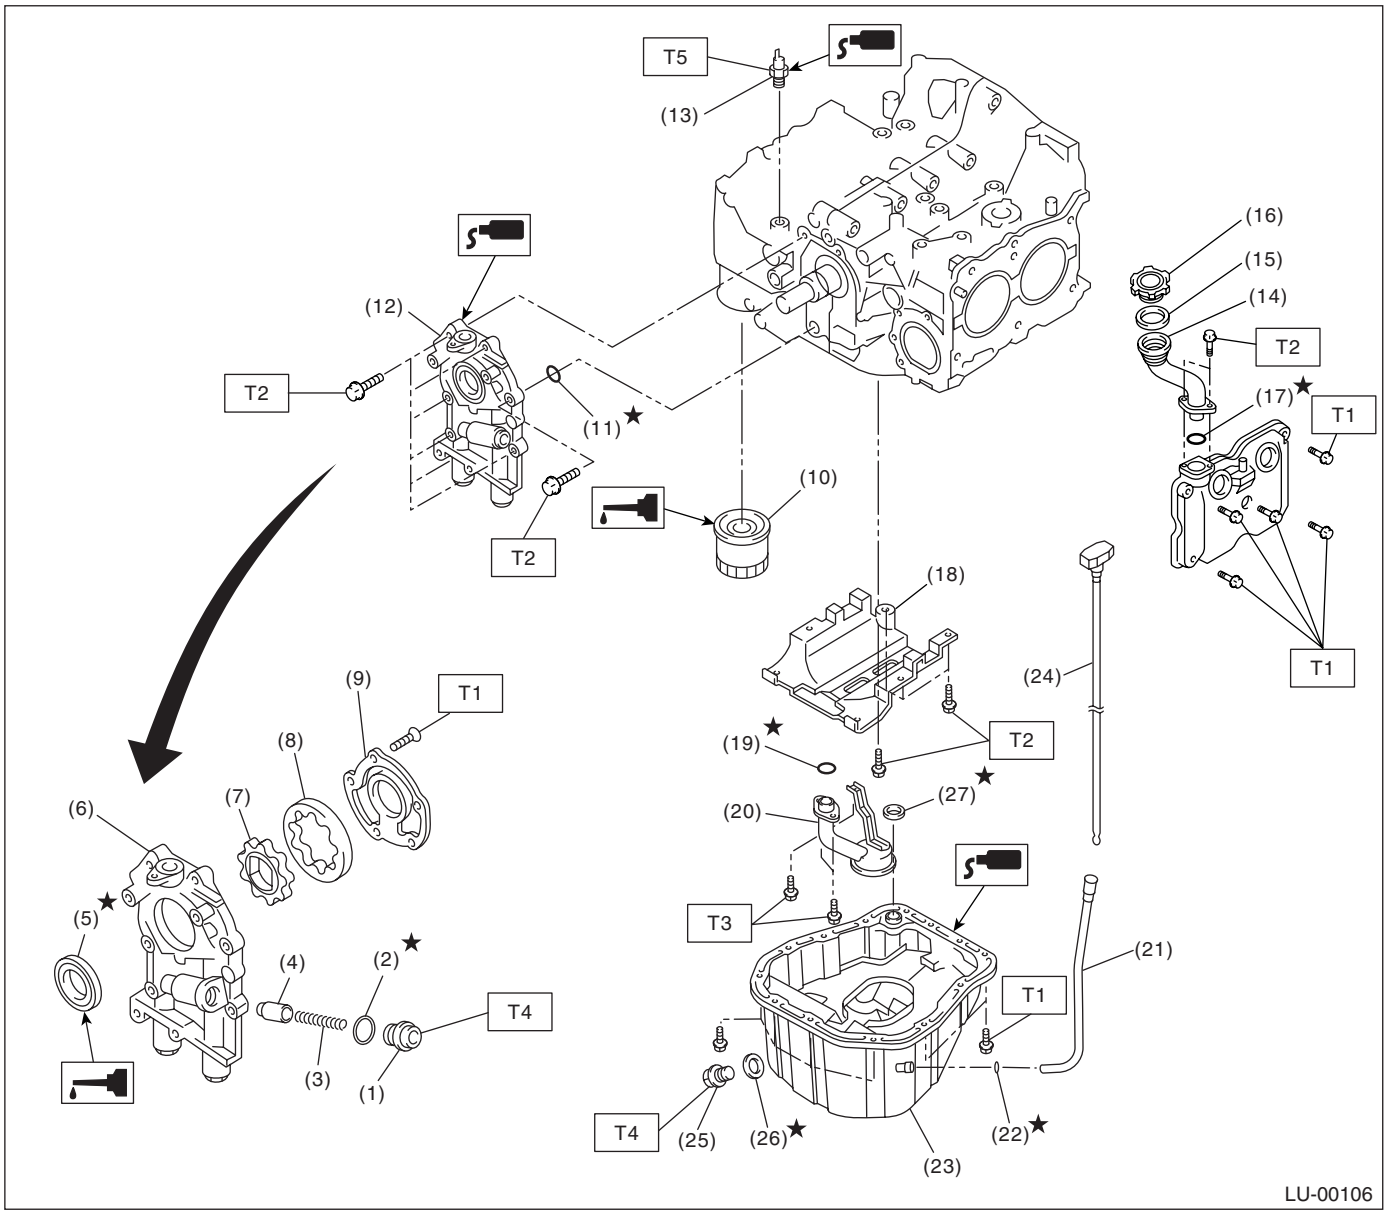

(1) Plug
(2) Gasket
(3) Relief valve spring
(4) Relief valve
(5) Oil seal
(6) Oil pump case
(7) Inner rotor
(8) Outer rotor
(9) Oil pump cover
(10) Oil filter
(11) O-ring
(12) Oil pump ASSY
(13) Oil pressure switch
(14) Oil filler duct
(15) O-ring
(16) Oil filler cap
(17) O-ring
(18) Baffle plate
(19) O-ring
(20) Oil strainer
(21) Oil level gauge guide
(22) O-ring
(23) Oil pan
(24) Oil level gauge
(25) Drain plug
(26) Metal gasket
(27) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5 (0.5, 3.6)
T2: 6.4 (0.65, 4.7)
T3: 10 (1.0, 7.2)
T4: 44 (4.5, 32.5)
T5: 25 (2.5, 18.1)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part in the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
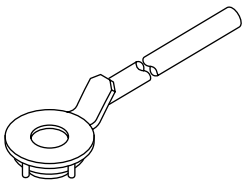 ST-499977400	499977400	CRANKSHAFT PULLEY WRENCH	• Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolt. • For 1.6 L and 2.0 L models.
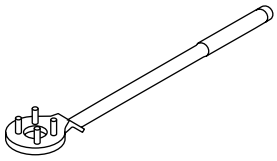 ST-499977100	499977100	CRANKSHAFT PULLEY WRENCH	• Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolt. • For 2.5 L model.
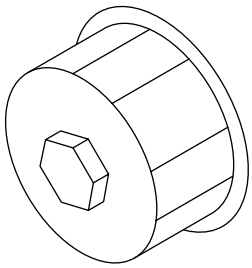 ST-498547000	498547000	OIL FILTER WRENCH	Used for removing and installing oil filter.
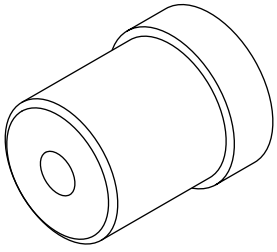 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.

2. Oil Pressure System

A: SCHEMATIC

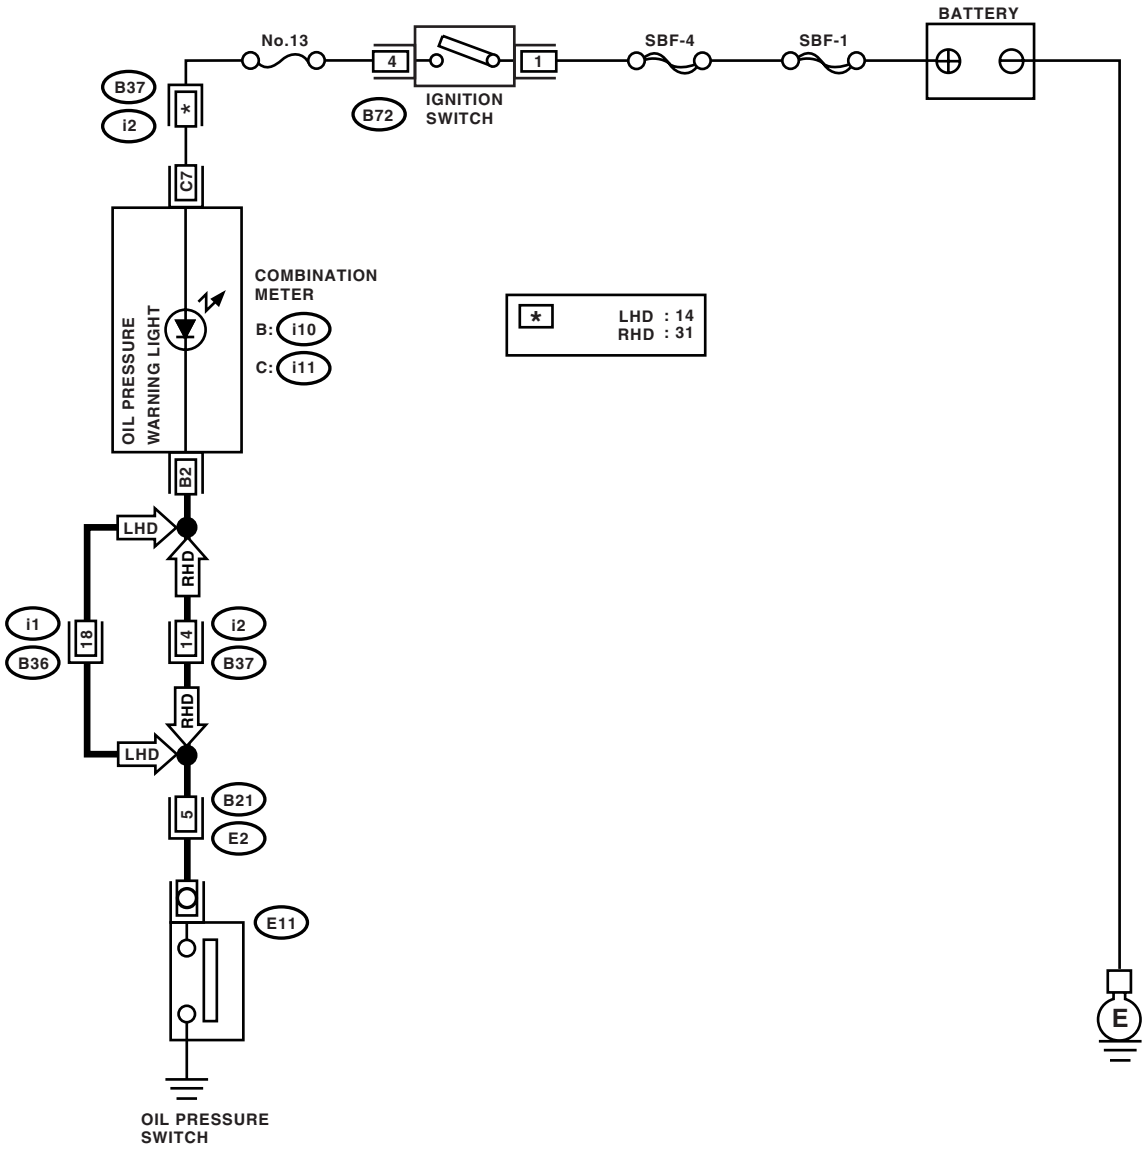

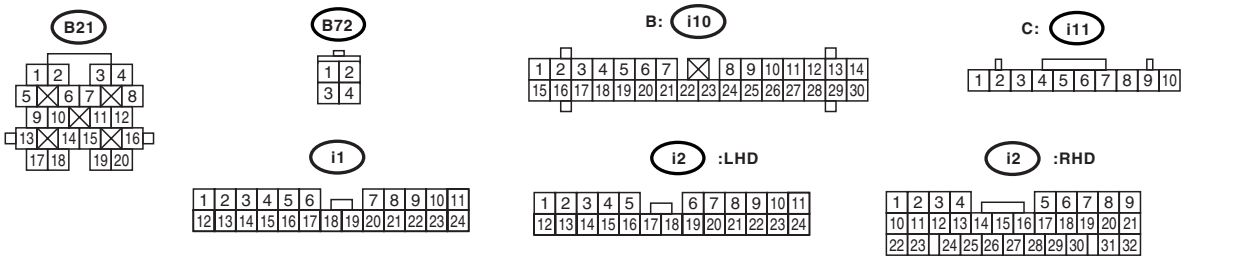

LU-00195

B: INSPECTION

	Step	Check	Yes	No
1	**CHECK COMBINATION METER.** 1)Turn the ignition switch to ON. (engine OFF) 2)Check other warning lights.	Does the warning lights go on?	Go to step **2.**	Repair or replace the combination meter. <Ref. to IDI-3, INSPECTION, Combination Meter System.>
2	**CHECK HARNESS CONNECTOR BETWEEN COMBINATION METER AND OIL PRESSURE SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from oil pressure switch. 3)Turn the ignition switch to ON. 4)Measure the voltage of harness between the oil pressure switch connector and chassis ground. ***Connector & terminal*** ***(E11) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Replace the oil pressure switch.	Go to step **3.**
3	**CHECK COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Measure the resistance of combination meter. ***Terminal*** ***(i11) No. 7 — (i10) No. 2:***	Is the resistance less than 10 Ω?	Replace the harness connector between combination meter and oil pressure switch.	Repair or replace the combination meter. <Ref. to IDI-3, INSPECTION, Combination Meter System.>

3. Engine Oil

A: INSPECTION

1) Park the vehicle on a level surface.
2) Remove the oil level gauge and wipe it clean.
3) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in the proper orientation.
4) Remove it again and note the reading. If the engine oil level is below the “L” line, add oil to bring the level up to “F” line.
5) After turning off the engine, wait a few minutes for the oil to drain back into the oil pan before checking the level.
6) Just after driving or while the engine is warm, engine oil level may show in the range between the “F” line and notch mark. This is caused by thermal expansion of the engine oil.

NOTE:
To prevent overfilling the engine oil, do not add oil above the “F” line when the engine is cold.

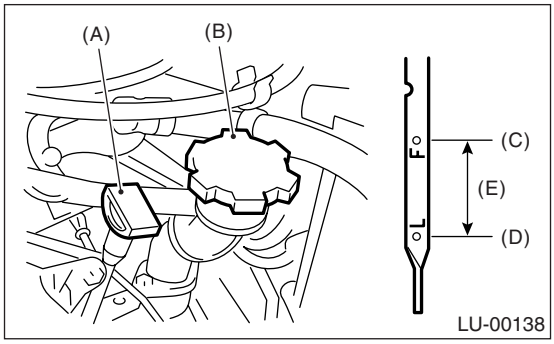

(A) Oil level gauge
(B) Engine oil filler cap
(C) Upper level
(D) Lower level
(E) Approx. 1.0 ℓ (1.1 US qt, 0.9 Imp qt)

B: REPLACEMENT

1) Open the engine oil filler cap for quick draining of the engine oil.
2) Lift up the vehicle.
3) Drain the engine oil by loosening the engine oil drain plug.

NOTE:
Prepare the container for draining of engine oil.

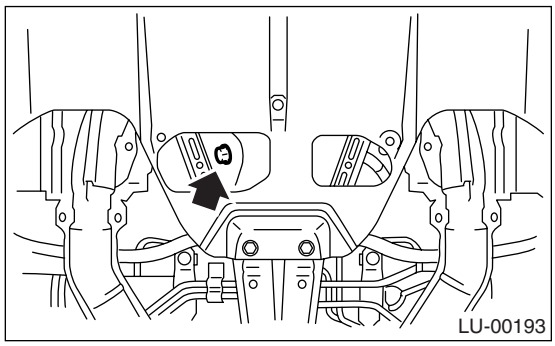

4) Tighten the engine oil drain plug after draining engine oil.

NOTE:
- Replace the drain plug gasket.
- Refer to COMPONENT of General Description for tightening torque. <Ref. to LU(H4SO)-3, COMPONENT, General Description.>

5) Fill engine oil through the filler duct up to upper level on level gauge. Make sure that the vehicle is placed level when checking oil level. Use the engine oil of proper quality and viscosity, selected in accordance with the table in figure.

Recommended oil

API classification SL, SJ with the “Energy Conserving” logo is printed, or SH (if you cannot obtain the oil with SL, SJ or SH grades, you may use SG, SF grades “ENERGY CONSERVING” oil.)
ACEA specification, A1, A2 or A3
CCMC specification, G4 or G5
New API certification mark (Star burst mark) label is on the container.

Engine oil capacity:
Upper level
4.0 ℓ (4.2 US qt, 3.5 Imp qt)
Lower level
3.0 ℓ (3.2 US qt, 2.6 Imp qt)

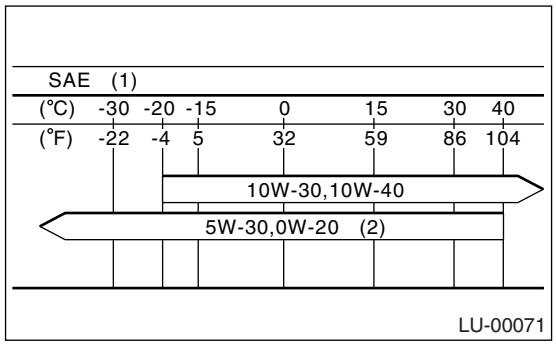

(1) SAE Viscosity No. and Applicable Temperature
(2) PREFERRED

The proper viscosity helps vehicle get good cold and hot starting by reducing viscous friction and thus increasing cranking speed.

CAUTION:
When replenishing oil, it does not matter if the oil to be added is a different brand from that in the engine; however, use oil having the API classification and SAE viscosity No. designated by SUBARU.

NOTE:
If the vehicle is used in areas with very high temperatures or for other heavy duty applications, the following viscosity oils may be used: API classification: SL or SJ or SH
SAE Viscosity No.: 30, 40, 10W-50, 20W-40, 20W-50.

6) Close the engine oil filler cap.
7) Start the engine and warm it up for a time.
8) After the engine stops, recheck the oil level. If necessary, add engine oil up to the upper level on level gauge.

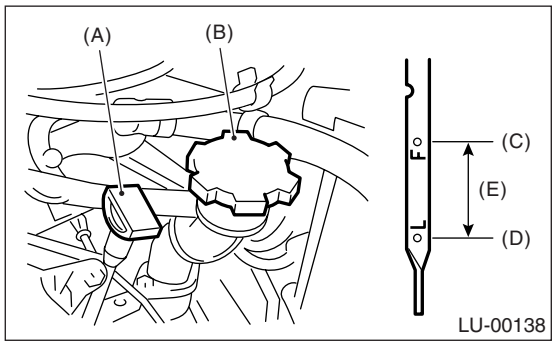

(A) Oil level gauge
(B) Engine oil filler cap
(C) Upper level
(D) Lower level
(E) Approx. 1.0 ℓ (1.1 US qt, 0.9 Imp qt)

4. Oil Pump

A: REMOVAL

1) Disconnect the ground cable from battery.

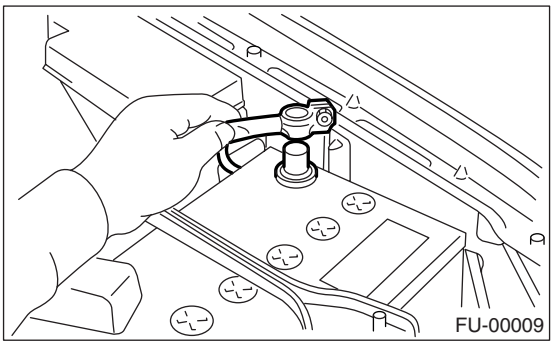

2) Lift-up the vehicle.
3) Remove the under cover.
4) Lower the vehicle.
5) Remove the radiator. <Ref. to CO(H4SO)-21, REMOVAL, Radiator.>
6) Remove the crankshaft position sensor.

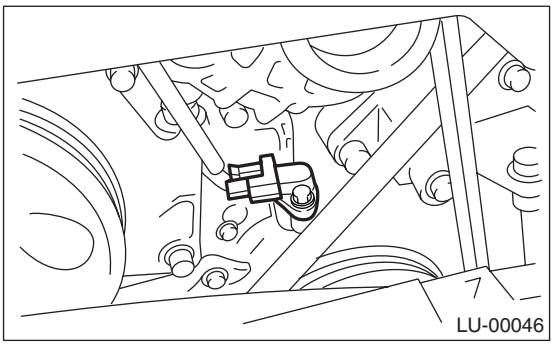

7) Remove the V-belts.
<Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
8) Remove the belt tensioner.

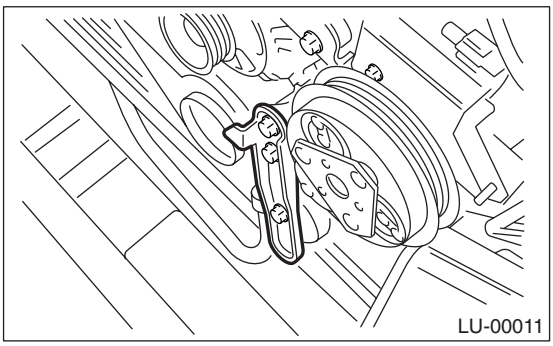

9) Remove the crankshaft pulley by using ST.
ST 499977400 CRANKSHAFT PULLEY WRENCH (1.6 L and 2.0 L models)
ST 499977100 CRANKSHAFT PULLEY WRENCH (2.5 L model)

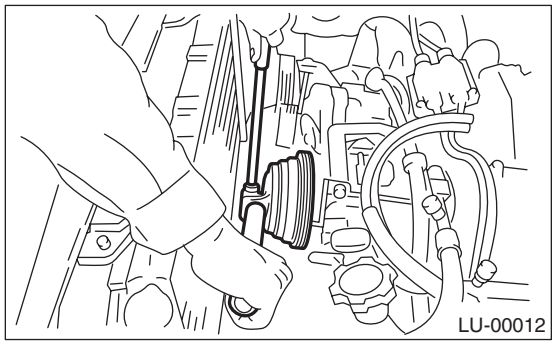

10) Remove the water pump. <Ref. to CO(H4SO)-16, REMOVAL, Water Pump.>
11) Remove the timing belt guide. (MT model)

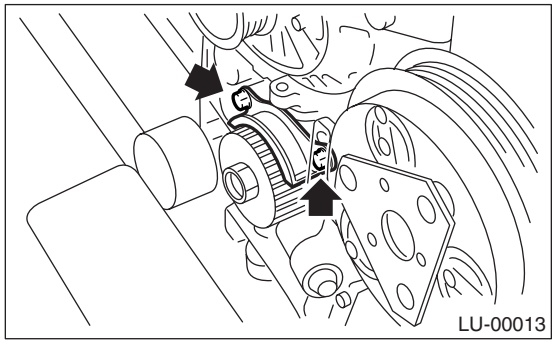

12) Remove the crankshaft sprocket.

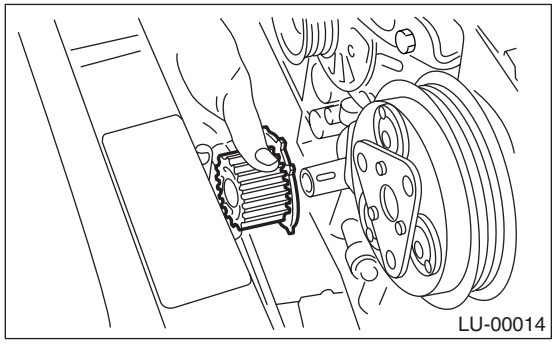

13) Remove the bolts which install the oil pump onto cylinder block.

NOTE:
If disassembling or inspecting the oil pump, loosen the plug of relief valve before removing the oil pump.

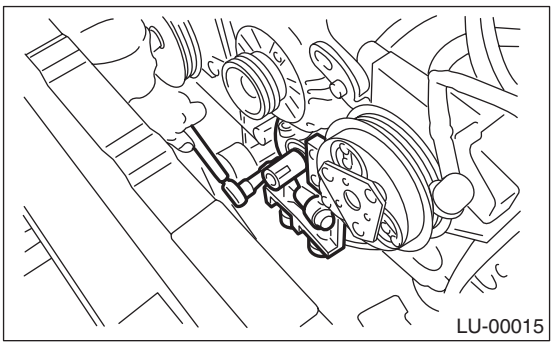

14) Remove the oil pump by using flat tip screwdriver.

CAUTION:
Be careful not to scratch the mating surfaces of cylinder block and oil pump.

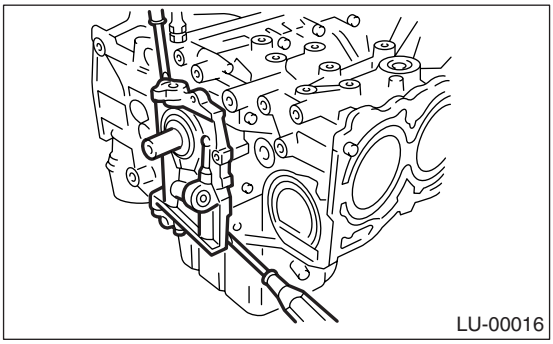

B: INSTALLATION

Install in the reverse order of removal.
Do the following:
1) Apply fluid packing to the matching surfaces of oil pump.

Fluid packing:
THREE BOND 1215 (Part No. 004403007) or equivalent

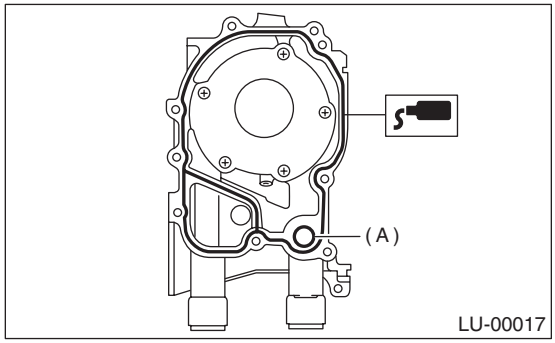

2) Replace the O-ring (A) with a new one.
3) Apply a coat of engine oil to the inside of oil seal.

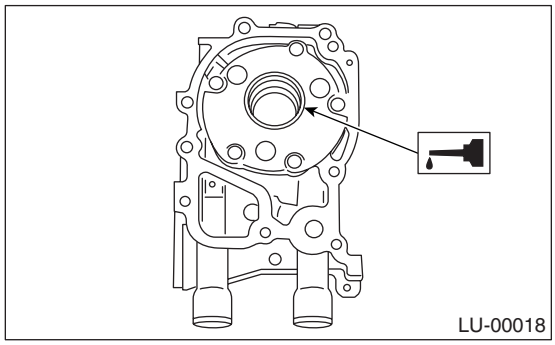

4) Be careful not to scratch the oil seal when installing oil pump on cylinder block.
5) Position the oil pump, aligning the notched area with crankshaft, and push the oil pump straight.

CAUTION:
Make sure the oil seal lip is not folded.

6) Install the oil pump.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

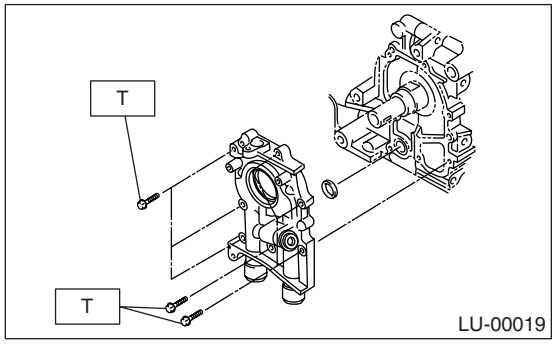

C: DISASSEMBLY

Remove the screws which secure the oil pump cover and disassemble oil pump. Inscribe alignment marks on the inner and outer rotors so that they can be replaced in their original positions during reassembly.

CAUTION:
Before disassembling the oil pump, remove the relief valve.

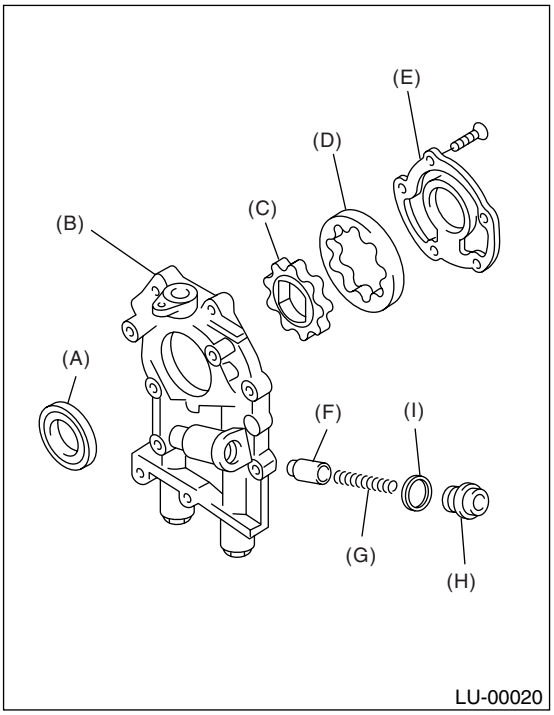

(A) Oil seal
(B) Oil pump case
(C) Inner rotor
(D) Outer rotor
(E) Oil pump cover
(F) Relief valve
(G) Relief valve spring
(H) Plug
(I) Gasket

D: ASSEMBLY

1) Install the front oil seal by using ST.
ST 499587100 OIL SEAL INSTALLER

NOTE:
Use a new oil seal.

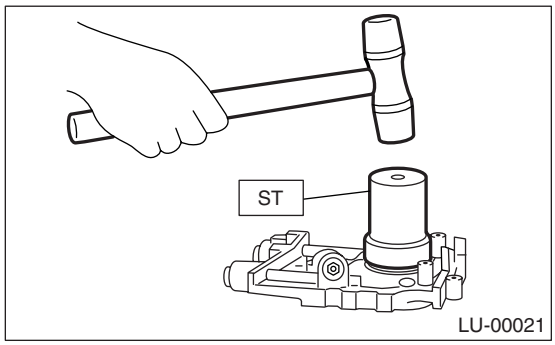

2) Apply a coat of engine oil to the inner and outer rotors.
3) Install the inner and outer rotors in their original positions.
4) Install the oil relief valve and relief valve spring and plug.

NOTE:
Use a new gasket.

5) Install the oil pump cover.

Tightening torque:
T1: 5 N·m (0.5 kgf-m, 3.6 ft-lb)
T2: 44 N·m (4.5 kgf-m, 32.5 ft-lb)

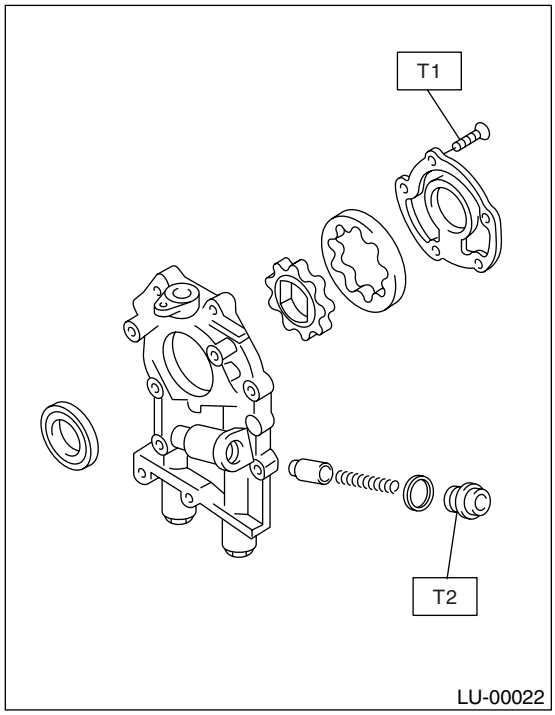

E: INSPECTION

1. TIP CLEARANCE

Measure the tip clearance of rotors. If clearance exceeds the limit, replace the rotors as a matched set.

Tip clearance:
Standard
0.04 — 0.14 mm (0.0016 — 0.0055 in)
Limit
0.18 mm (0.0071 in)

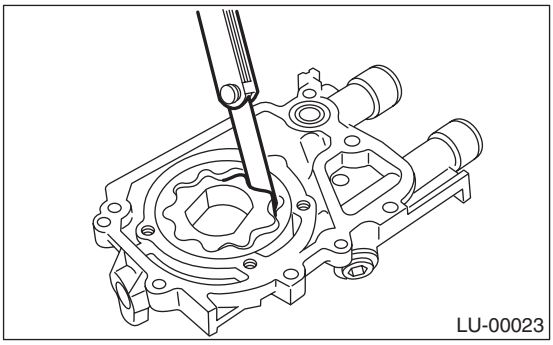
LU-00023

2. CASE CLEARANCE

Measure the clearance between the outer rotor and oil pump rotor housing. If clearance exceeds the limit, replace the rotor.

Case clearance:
Standard
0.10 — 0.175 mm (0.0039 — 0.0069 in)
Limit
0.20 mm (0.0079 in)

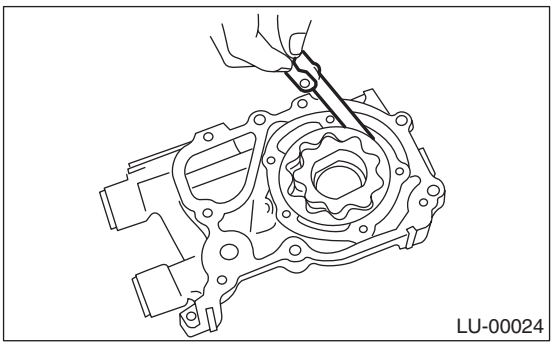
LU-00024

3. SIDE CLEARANCE

Measure the clearance between the oil pump inner rotor and pump cover. If clearance exceeds the limit, replace the rotor or pump body.

Side clearance:
Standard
0.02 — 0.07 mm (0.0008 — 0.0028 in)
Limit
0.12 mm (0.0047 in)

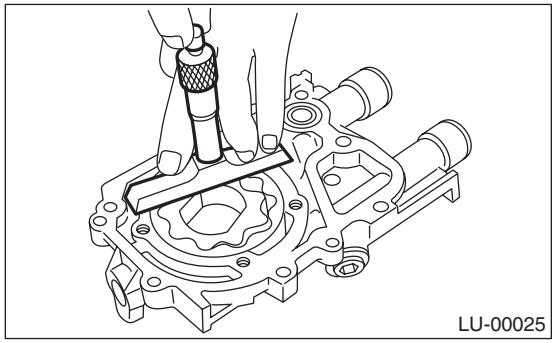
LU-00025

4. OIL RELIEF VALVE

Check the valve for fitting condition and damage, and the relief valve spring for damage and deterioration. Replace the parts if defective.

Relief valve spring:
Free length
72.8 mm (2.866 in)
Installed length
54.7 mm (2.154 in)
Load when installed
81.3 N (8.29 kgf, 18.24 lb)

5. OIL PUMP CASE

Check the oil pump case for worn shaft hole, clogged oil passage, worn rotor chamber, cracks, and other faults.

6. OIL SEAL

Check the oil seal lips for deformation, hardening, wear, etc. and replace if defective.

5. Oil Pan and Strainer

A: REMOVAL

1) Set the vehicle on a lift.
2) Remove the front wheels.
3) Disconnect the ground cable from battery.

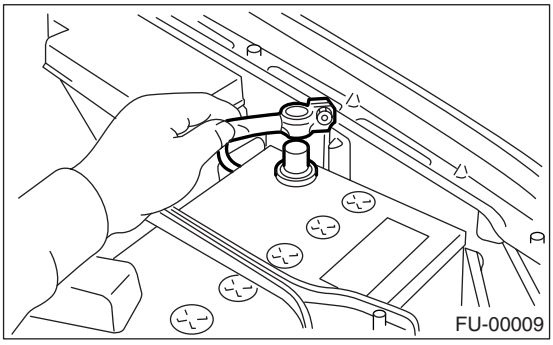

4) Remove the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
5) Remove the resonator chamber. <Ref. to IN(H4SO)-7, REMOVAL, Resonator Chamber.>
6) Remove the pitching stopper.

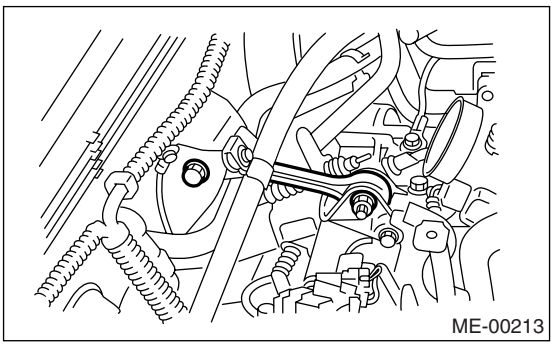

7) Remove the radiator upper brackets.

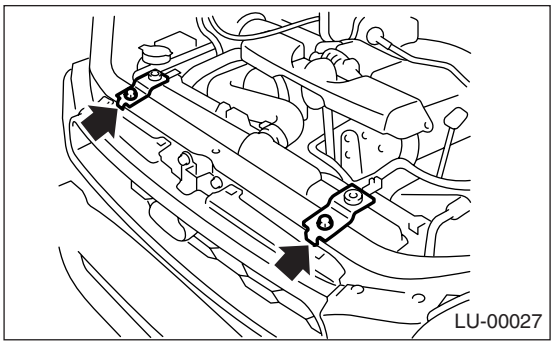

8) Support the engine with a lifting device and wire ropes.

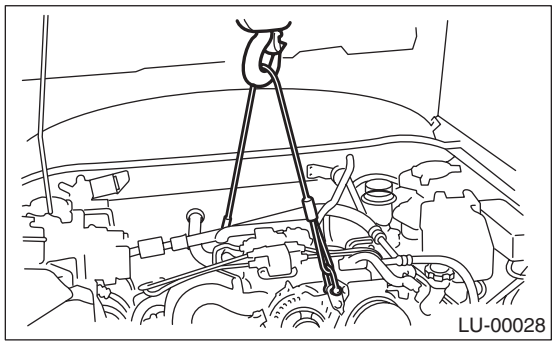

9) Lift-up the vehicle.

CAUTION:
When lifting up the vehicle, rise up the wire rope together.

10) Remove the under cover.
11) Drain the engine oil.
Set a container under the vehicle, and then remove the drain plug from oil pan.

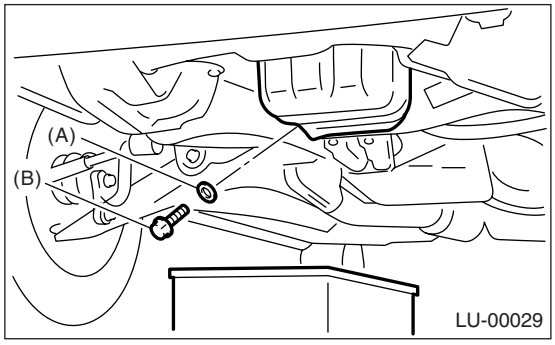

(A) Gasket
(B) Drain plug

12) Remove the front and center exhaust pipes. <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-6, REMOVAL, Front Exhaust Pipe.>
13) Remove the nuts which install the front cushion rubber onto front crossmember.

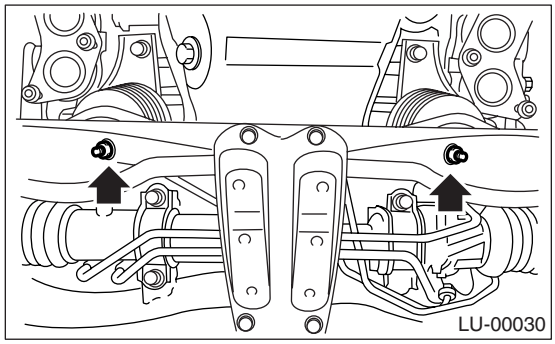

14) Remove the bolts which install the oil pan on cylinder block while raising up engine.

15) Insert the oil pan cutter blade between the cylinder block to oil pan clearance.

CAUTION:
Do not use a screwdriver or similar tool in place of oil pan cutter.

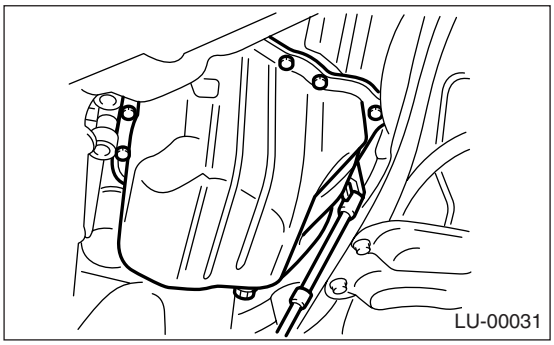

16) Remove the oil strainer.

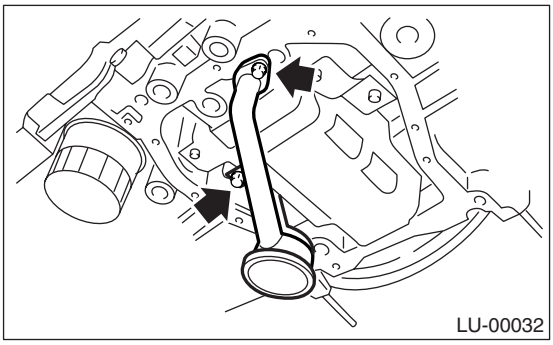

17) Remove the baffle plate.

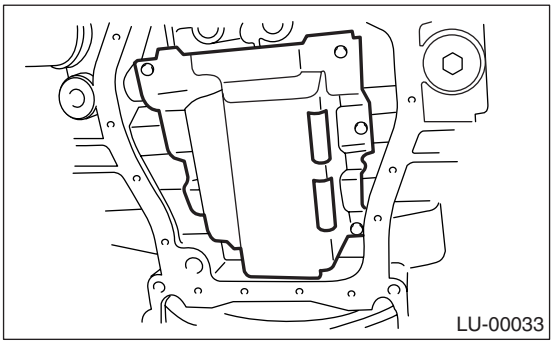

B: INSTALLATION

CAUTION:
Before installing the oil pan, clean the sealant from oil pan and engine block.

1) Install the baffle plate.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

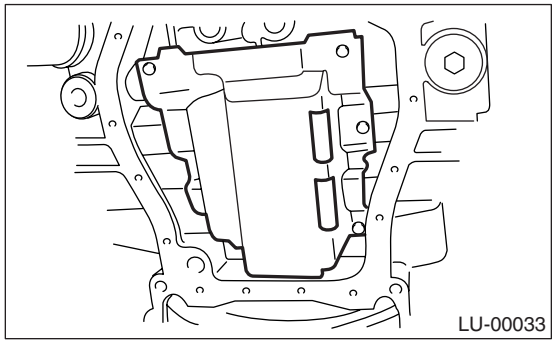

2) Install the oil strainer onto baffle plate.

NOTE:
Replace the O-ring with a new one.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

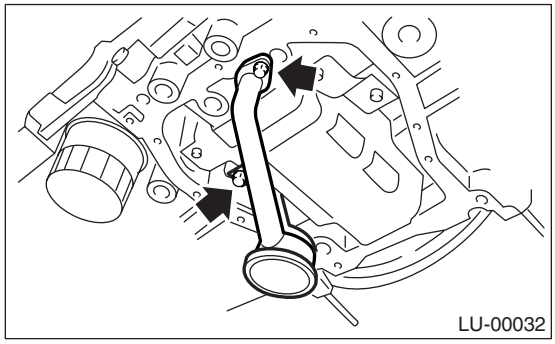

3) Apply fluid packing to the mating surfaces, and then install the oil pan.

Fluid packing:
THREE BOND 1215 (Part No. 004403007) or equivalent

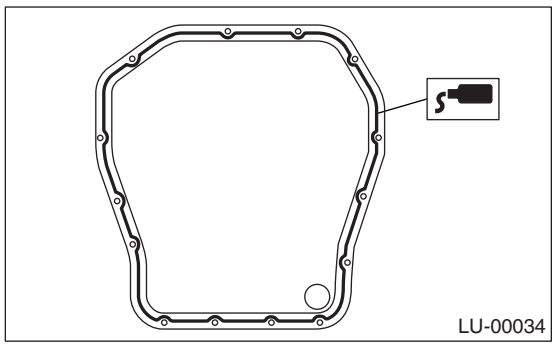

4) Tighten the bolts which install the oil pan onto engine block.

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

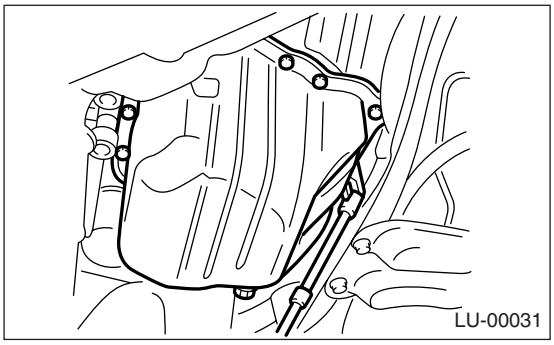

5) Lower the engine onto front crossmember.
6) Tighten the nuts which install the front cushion rubber onto front crossmember.

Tightening torque:
69 N·m (7.0 kgf-m, 50.9 ft-lb)

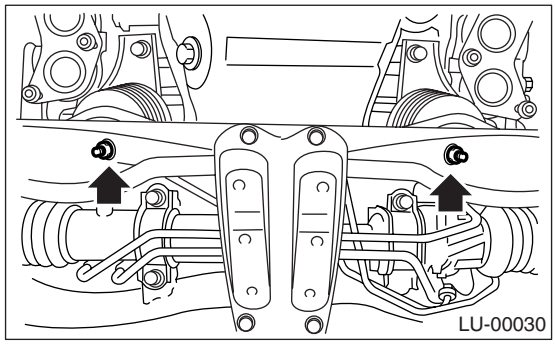

7) Install the front and center exhaust pipes. <Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>

NOTE:
Always use new gaskets.

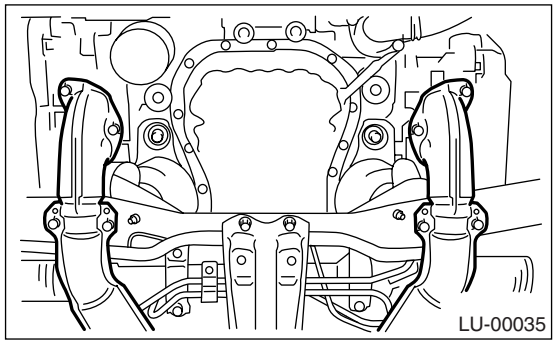

8) Install the under cover.
9) Lower the vehicle.

CAUTION:
When lowering the vehicle, lower the lifting device and wire rope together.

10) Remove the lifting device and steel cables.

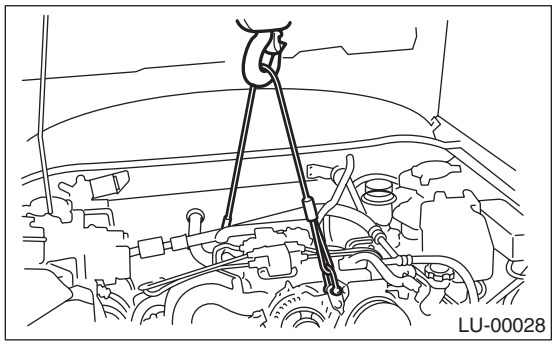

11) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 36.9 ft-lb)
T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)

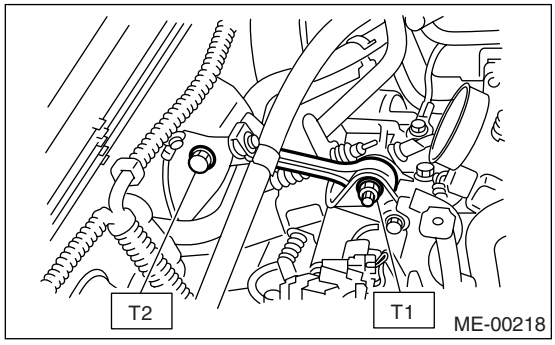

12) Install the radiator upper brackets.

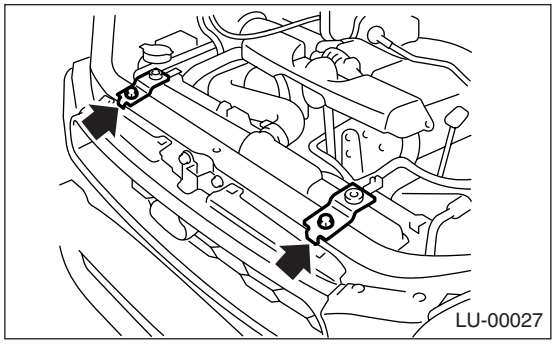

13) Install the resonator chamber. <Ref. to IN(H4SO)-7, INSTALLATION, Resonator Chamber.>
14) Install the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.> and <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
15) Install the front wheels.

16) Connect the battery ground cable to battery.

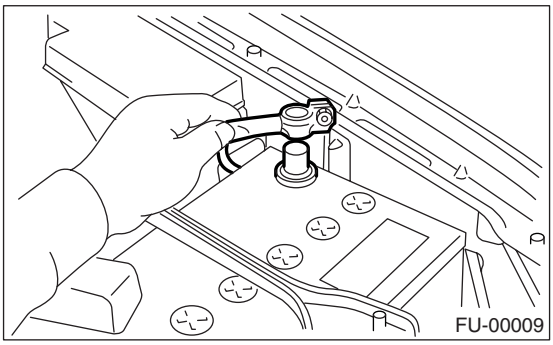

17) Fill engine oil. <Ref. to LU(H4SO)-8, INSPECTION, Engine Oil.>

C: INSPECTION

By visual check make sure the oil pan, oil strainer, oil strainer stay and baffle plate are not damaged.

6. Oil Pressure Switch

A: REMOVAL

1) Remove the generator from bracket. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>
2) Disconnect the terminal from oil pressure switch.

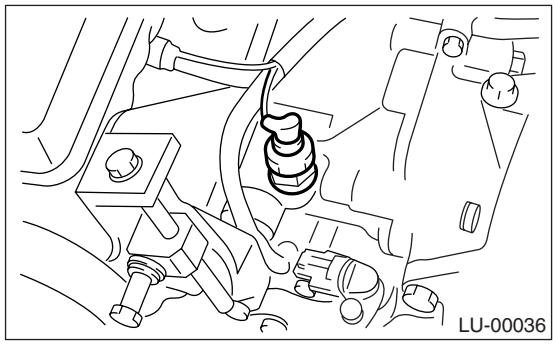

3) Remove the oil pressure switch.

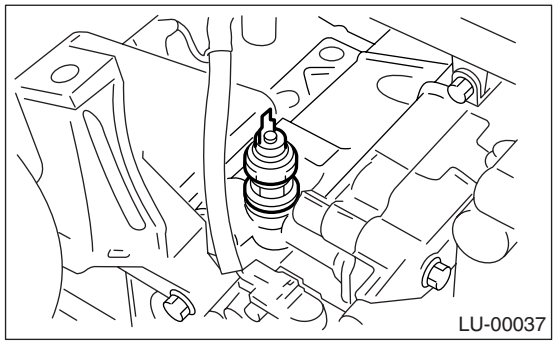

B: INSTALLATION

1) Apply fluid packing to the oil pressure switch threads.

Fluid packing:
THREE BOND 1324 (Part No. 004403007) or equivalent

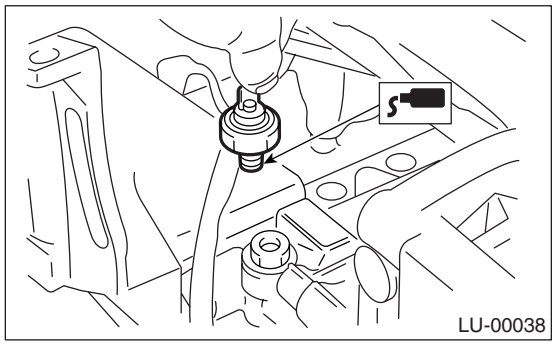

2) Install the oil pressure switch onto engine block.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

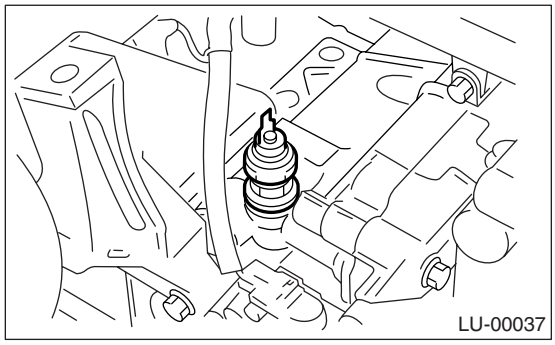

3) Connect the terminal of oil pressure switch.

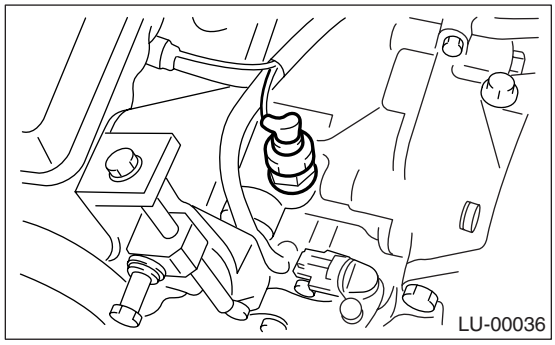

4) Install the generator on bracket. <Ref. to SC(H4SO)-14, INSTALLATION, Generator.>

C: INSPECTION

Make sure oil does not leak or seep from where the oil pressure switch is installed.

7. Engine Oil Filter

A: REMOVAL

1) Lift up the vehicle.
2) Remove the under cover.
3) Remove the oil filter with ST.
ST 498547000 OIL FILTER WRENCH

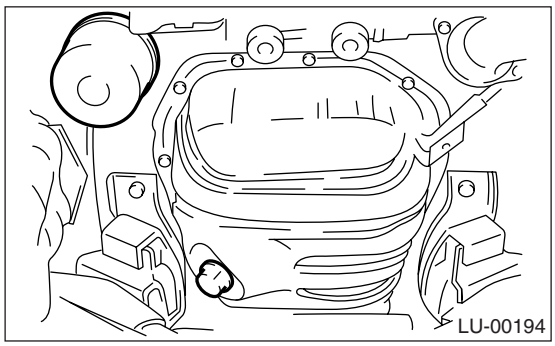

B: INSTALLATION

1) Get a new oil filter and apply a thin coat of engine oil to the seal rubber.
2) Install the oil filter by turning it by hand, being careful not to damage seal rubber.
3) Tighten more (approx. 2/3 to 3/4 turn) after the seal rubber contacts the oil pump case. Do not tighten excessively, or oil may leak.

C: INSPECTION

1) After installing the oil filter, run the engine and make sure no oil is leaking around seal rubber.

NOTE:
The filter element and filter case are permanently jointed; therefore, interior cleaning is not necessary.

2) Check the engine oil level. <Ref. to LU(H4SO)-8, INSPECTION, Engine Oil.>

8. Engine Lubrication System Trouble in General

A: INSPECTION

Before performing diagnostics, make sure the engine oil level is correct and no oil leakage exists.

Trouble	Possible cause		Corrective action
1. Warning light remains on.	1) Oil pressure switch failure	Cracked diaphragm or oil leakage within switch	Replace.
		Broken spring or seized contacts	Replace.
	2) Low oil pressure	Clogged oil filter	Replace.
		Malfunction of oil by-pass valve of oil filter	Clean or replace.
		Malfunction of oil relief valve of oil pump	Clean or replace.
		Clogged oil passage	Clean.
		Excessive tip clearance and side clearance of oil pump rotor and gear	Replace.
		Clogged oil strainer or broken pipe	Clean or replace.
	3) No oil pressure	Insufficient engine oil	Replenish.
		Broken pipe of oil strainer	Replace.
		Stuck oil pump rotor	Replace.
2. Warning light does not go on.	1) Malfunction of combination meter		Replace.
	2) Poor contact of switch contact points		Replace.
	3) Disconnection of wiring		Repair.
3. Warning light flickers momentarily.	1) Poor contact at terminals		Repair.
	2) Defective wiring harness		Repair.
	3) Low oil pressure		Check for the same possible causes as listed in 1.—2).

SPEED CONTROL SYSTEMS

SP(H4SO)

Page

1. General Description 2
2. Accelerator Pedal 4
3. Accelerator Control Cable 9

1. General Description

A: SPECIFICATION

Accelerator pedal	Free play	At pedal pad	0 — 4 mm (0 — 0.16 in)
	Stroke	At pedal pad	52 — 57 mm (2.05 — 2.24 in)

B: COMPONENT

1. LHD MODEL

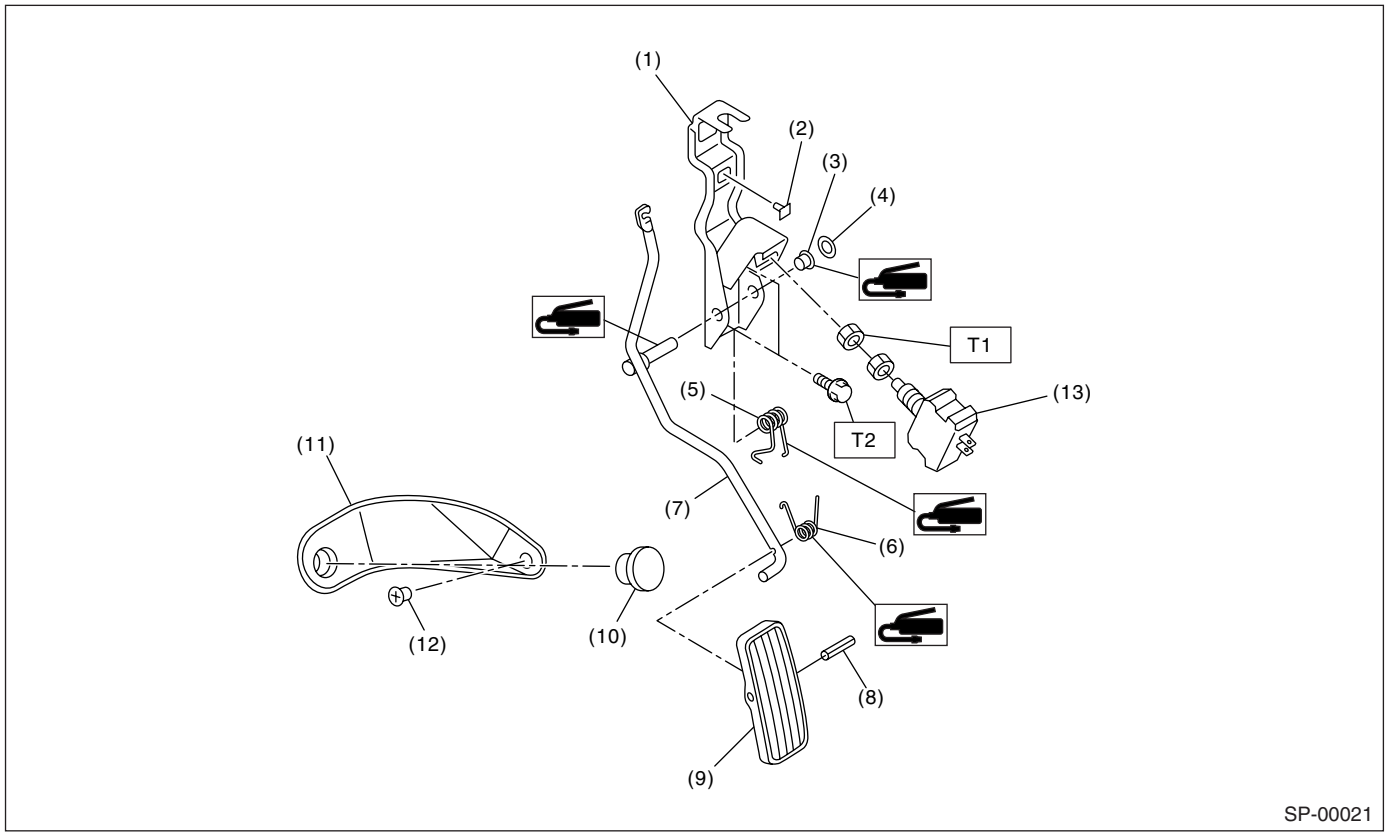

(1) Accelerator bracket
(2) Stopper
(3) Bushing
(4) Clip
(5) Accelerator spring
(6) Accelerator pedal spring
(7) Accelerator pedal lever
(8) Spring pin
(9) Accelerator pedal
(10) Accelerator stopper
(11) Accelerator plate
(12) Clip
(13) Kick-down switch (AT model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 12 (1.2, 9.0)
T2: 18 (1.8, 13.0)

2. RHD MODEL

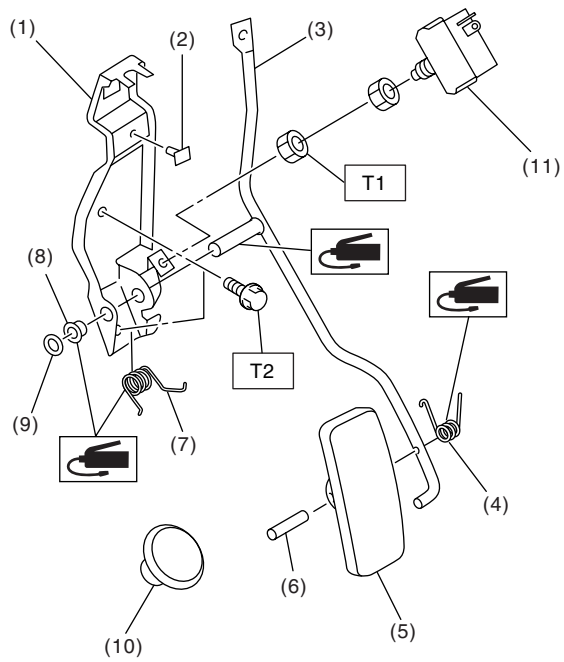

SP-00022

(1) Accelerator bracket
(2) Stopper
(3) Accelerator pedal lever
(4) Accelerator pedal spring
(5) Accelerator pedal
(6) Spring pin
(7) Accelerator spring
(8) Bushing
(9) Clip
(10) Accelerator stopper
(11) Kick-down switch (AT model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 12 (1.2, 9.0)
T2: 18 (1.8, 13.0)

C: CAUTION

- Wear work clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination, including dirt and corrosion, before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Accelerator Pedal

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the lock nut from accelerator cable bracket.
3) Separate the accelerator cable from bracket.
4) Remove the accelerator cable end from throttle cam.

NOTE:
Be careful not to kink the accelerator cable.

- SOHC MODEL

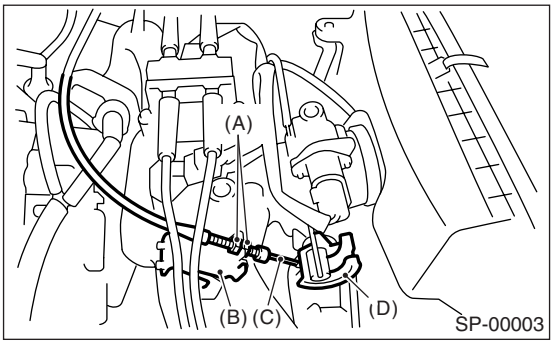

- DOHC MODEL

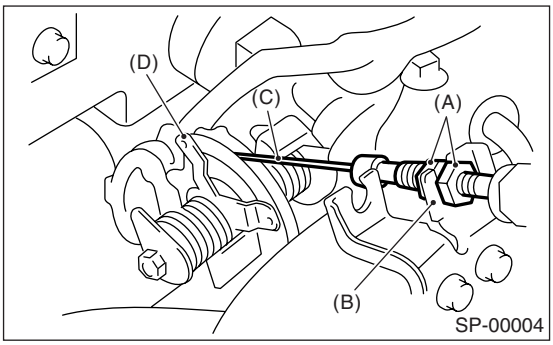

(A) Lock nut
(B) Accelerator cable bracket
(C) Accelerator cable
(D) Throttle cam

5) Remove the clip inside engine compartment.

- LHD SOHC MODEL

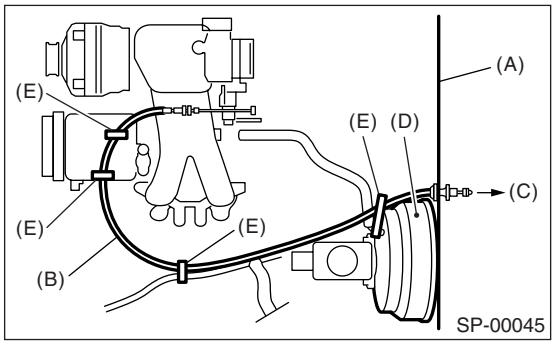

- RHD SOHC MODEL

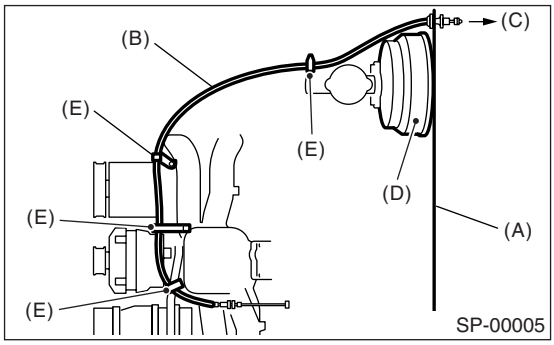

- LHD DOHC TURBO MODEL

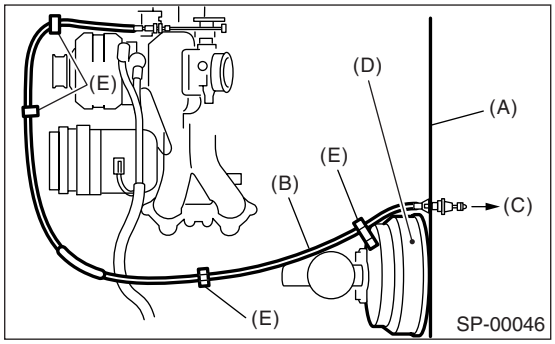

- RHD DOHC TURBO MODEL

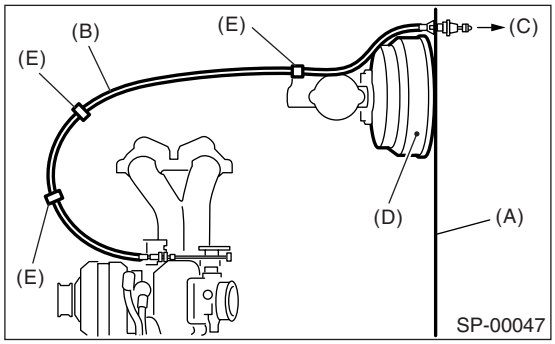

(A) Toe board
(B) Accelerator cable
(C) To accelerator pedal
(D) Brake booster
(E) Clip

6) Remove the instrument panel lower cover from instrument panel.
7) Disconnect the connector from kick-down switch. (AT model)
8) Remove the accelerator pedal connecting bolt from accelerator pedal bracket.

- LHD MODEL

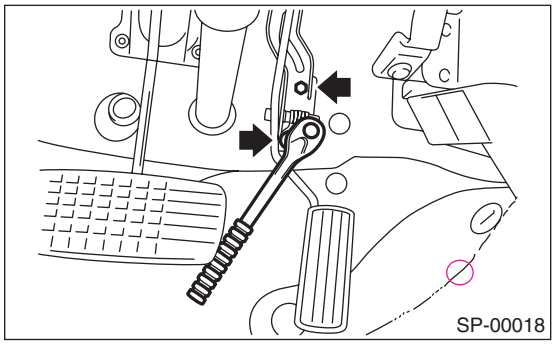

- RHD MODEL

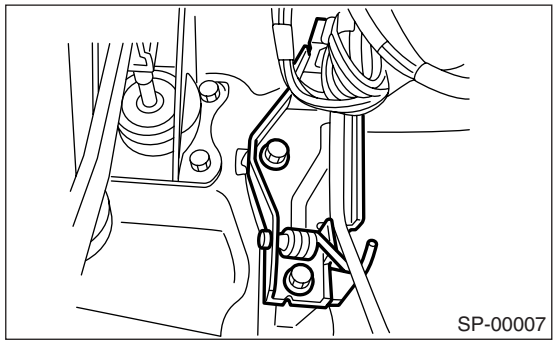

9) Disconnect the grommet from toe board.

NOTE:
From inside compartment, push the grommet (A) into hole.

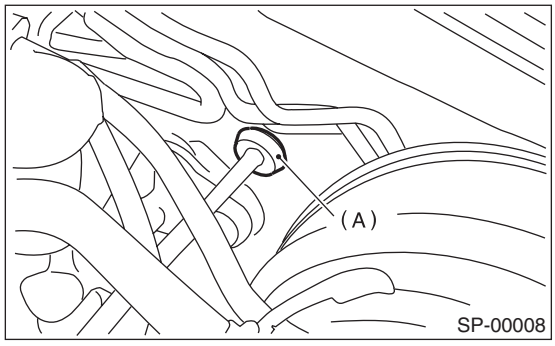

10) Pull out the cable from toe board hole.
11) Disconnect the accelerator cable bushing from accelerator pedal lever.

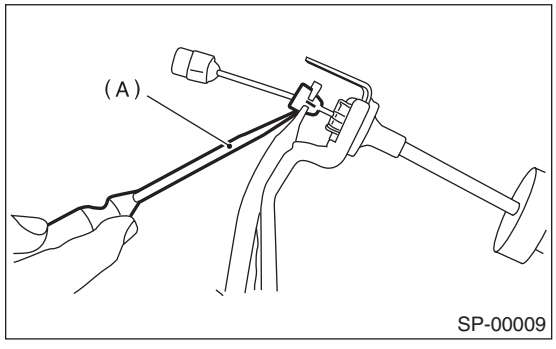

(A) Flat tip screwdriver

12) Disconnect the accelerator cable stopper (A) from bracket.

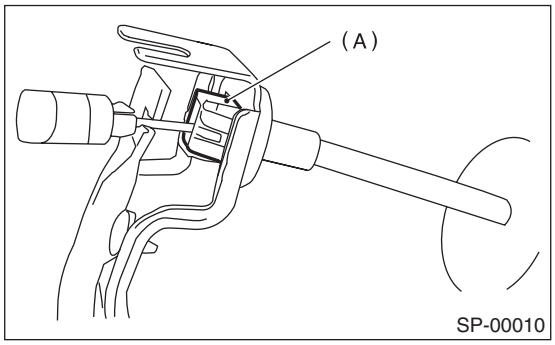

13) Separate the accelerator cable and bracket.

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
- If the cable clamp is damaged, replace it with a new one.
- Never fail to cover the outer cable end with boot.
- Be careful not to kink the accelerator cable.
- For tightening torque, refer to “COMPONENT”. <Ref. to SP(H4SO)-2, COMPONENT, General Description.>

C: DISASSEMBLY

1) Remove the clip, and then remove the accelerator pedal from bracket.
2) Pull out the spring pin, and then remove the accelerator pedal from accelerator pedal lever.

- LHD MODEL

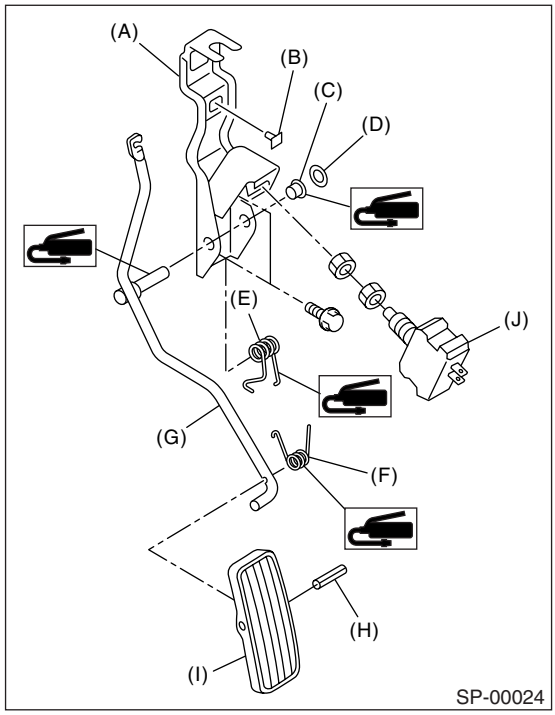

(A) Accelerator bracket
(B) Stopper
(C) Bushing
(D) Clip
(E) Accelerator spring
(F) Accelerator pedal spring
(G) Accelerator pedal lever
(H) Spring pin
(I) Accelerator pedal
(J) Kick-down switch (AT model)

- RHD MODEL

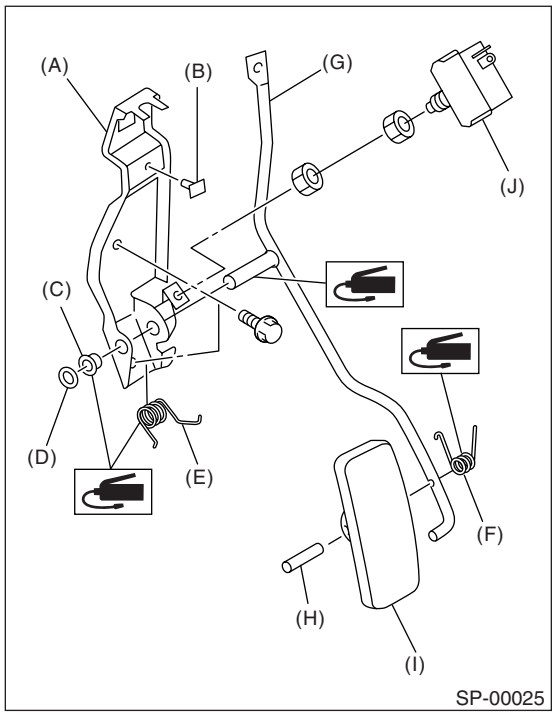

(A) Accelerator bracket
(B) Stopper
(C) Bushing
(D) Clip
(E) Accelerator spring
(F) Accelerator pedal spring
(G) Accelerator pedal lever
(H) Spring pin
(I) Accelerator pedal
(J) Kick-down switch (AT model)

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:
Clean and apply grease to the portions indicated in the figure.

Grease:
SUNLIGHT No.2 (Part No. 003602010)

E: INSPECTION

1. ACCELERATOR PEDAL

1) Lightly move the pedal pad in lateral direction to ensure that pedal deflection is in specified range.
2) If excessive deflection is noted, replace the bushing and clip with new ones.

Deflection of accelerator pedal:
Service limit
±2.0 mm (±0.079 in) or less

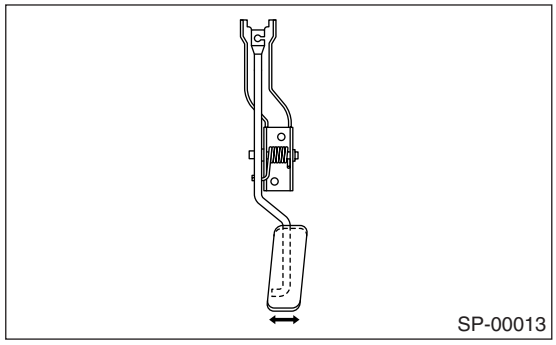

2. KICK-DOWN SWITCH

If the kick-down switch does not operate properly (or if it does not stop at the specified position), replace with a new one.

Specified position: A
2.0 — 3.5 mm (0.079 — 0.098 in)

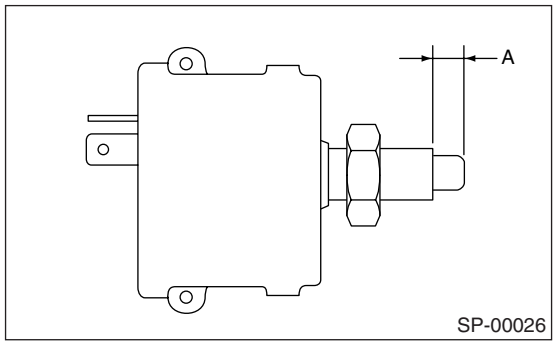

F: ADJUSTMENT

1) Check the pedal stroke and free play by operating the accelerator pedal by hand.
2) If it is not within specified value, adjust it by turning the nut connecting the accelerator cable to throttle body.

Free play at pedal pad: L
0 — 4 mm (0 — 0.16 in)

Stroke at pedal pad: A
52 — 57 mm (2.05 — 2.24 in)

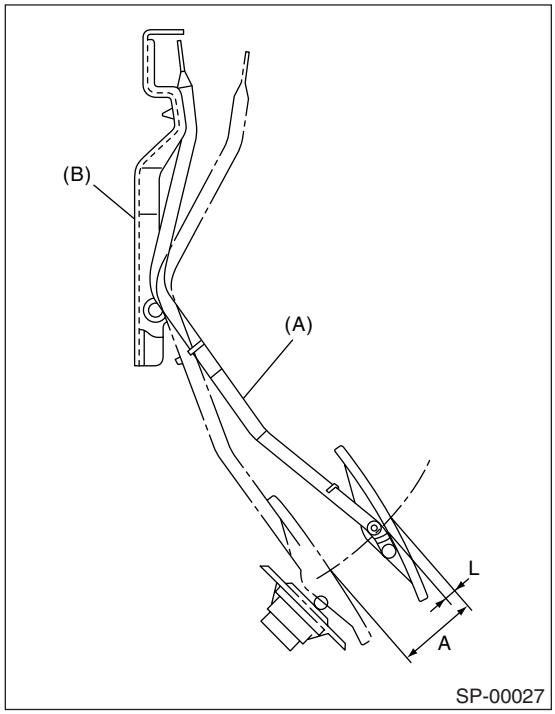

(A) Accelerator pedal
(B) Accelerator pedal bracket

Accelerator cable lock nut tightening torque:
12 N·m (1.2 kgf-m, 9 ft-lb)

3) Ensure the kick-down switch operates at the specified value in relation to the stroke of accelerator pedal.
If it is not within specified value, adjust it by adjusting the position of kick-down switch.

CAUTION:
Be careful not to rotate the kick-down switch.

Kick-down switch stroke: L
47 — 49 mm (1.85 — 1.93 in)

Kick-down switch tightening torque:
12 N·m (1.2 kgf-m, 9 ft-lb)

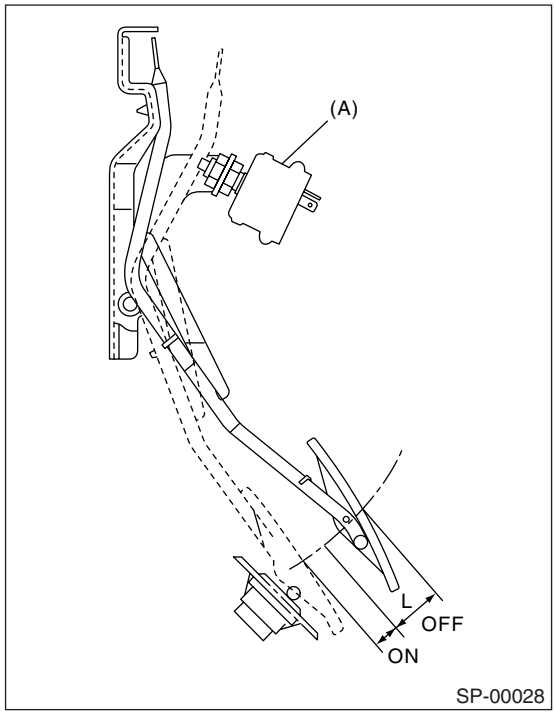

(A) Kick down switch

3. Accelerator Control Cable

A: REMOVAL

1) Remove the accelerator pedal.
<Ref. to SP(H4SO)-4, REMOVAL, Accelerator Pedal.>
2) Separate the accelerator cable and accelerator pedal.

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
- If the cable clamp is damaged, replace it with a new one.
- Never fail to cover the outer cable end with boot.
- Be careful not to kink the accelerator cable.
- Do not apply grease to except specified part.

2) Apply grease to engine side accelerator cable end.

Grease:
Silicolube G-30M (Part No. 004404002)

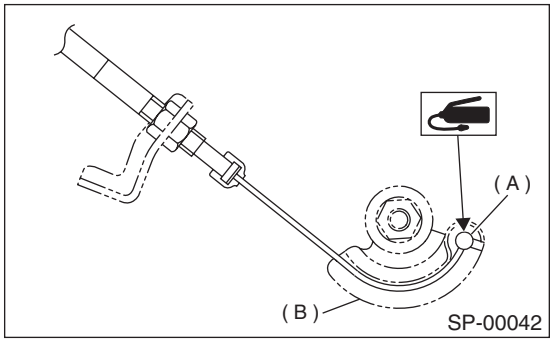

3) Adjustment after pedal installation. <Ref. to SP(H4SO)-7, ADJUSTMENT, Accelerator Pedal.>

C: INSPECTION

1) Make sure the inner cable is not twisted or worn.
2) Make sure the outer cable is not cracked.

IGNITION

IG(H4SO)

Page

1. General Description 2
2. Spark Plug 5
3. Ignition Coil & Ignitor ASSY 8
4. Spark Plug Cord 10

1. General Description

A: SPECIFICATIONS

Item			Designation
Ignition coil & ignitor ASSY	Model	1.6 L	CM12 — 100C
		2.0 L	FH0137
		2.5 L	
	Manufacturer	1.6 L	HITACHI
		2.0 L	DIAMOND
		2.5 L	
	Primary coil resistance	1.6 L	0.7 Ω±10%
		2.0 L	0.73 Ω±10%
		2.5 L	
	Secondary coil resistance	1.6 L	13.0 kΩ±20%
		2.0 L	12.8 kΩ±15%
		2.5 L	
	Insulation resistance between primary terminal and case		More than 100 MΩ
Spark plug	Type and manufacturer	1.6 L	NGK: BKR6E* CHAMPION: RC8YC4** NGK: BKR6E-11** (Alternate)
		2.0 L	NGK: BKR6E* CHAMPION: RC10YC4** NGK: BKR5E-11** (Alternate)
		2.5 L	
	Thread size mm		14, P = 1.25
	Spark gap mm (in)		0.7 — 0.8 (0.028 — 0.031)* 1.0 — 1.1 (0.039 — 0.043)**

*: Without catalytic converter
**: With catalytic converter

B: COMPONENT

1. 1.6 L MODEL

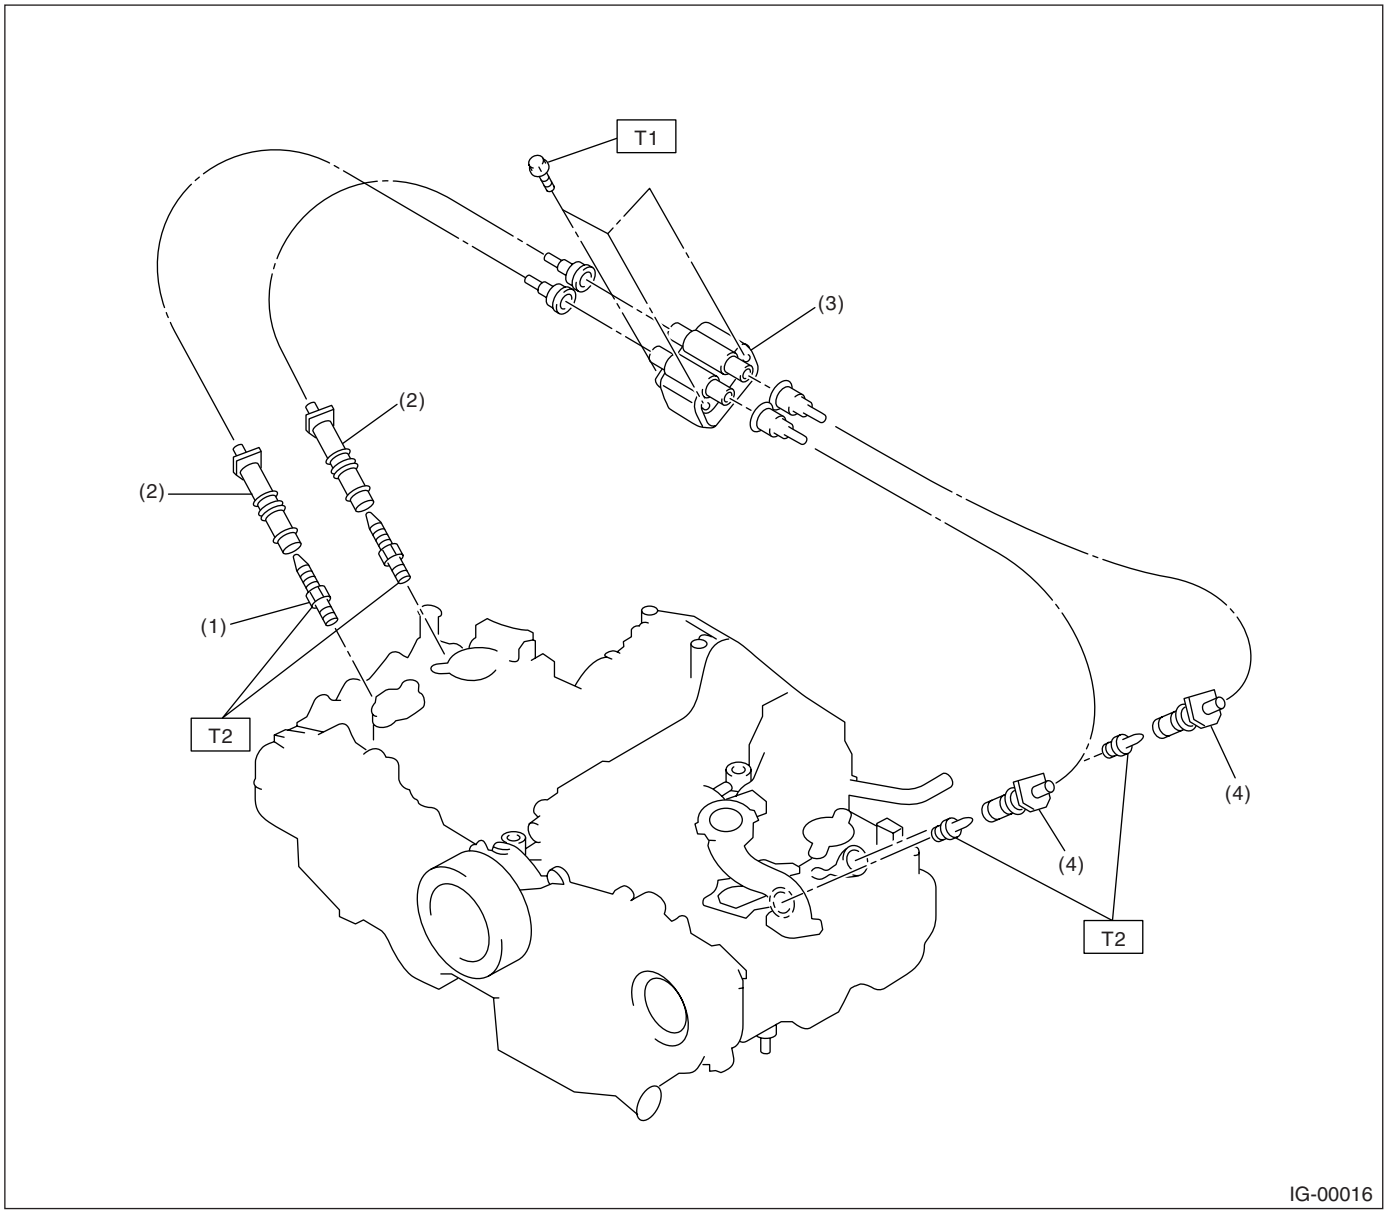

(1) Spark plug
(2) Spark plug cord (#1, #3)
(3) Ignition coil & ignitor ASSY
(4) Spark plug cord (#2, #4)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 21 (2.1, 15.5)

2. 2.0 L AND 2.5 L MODEL

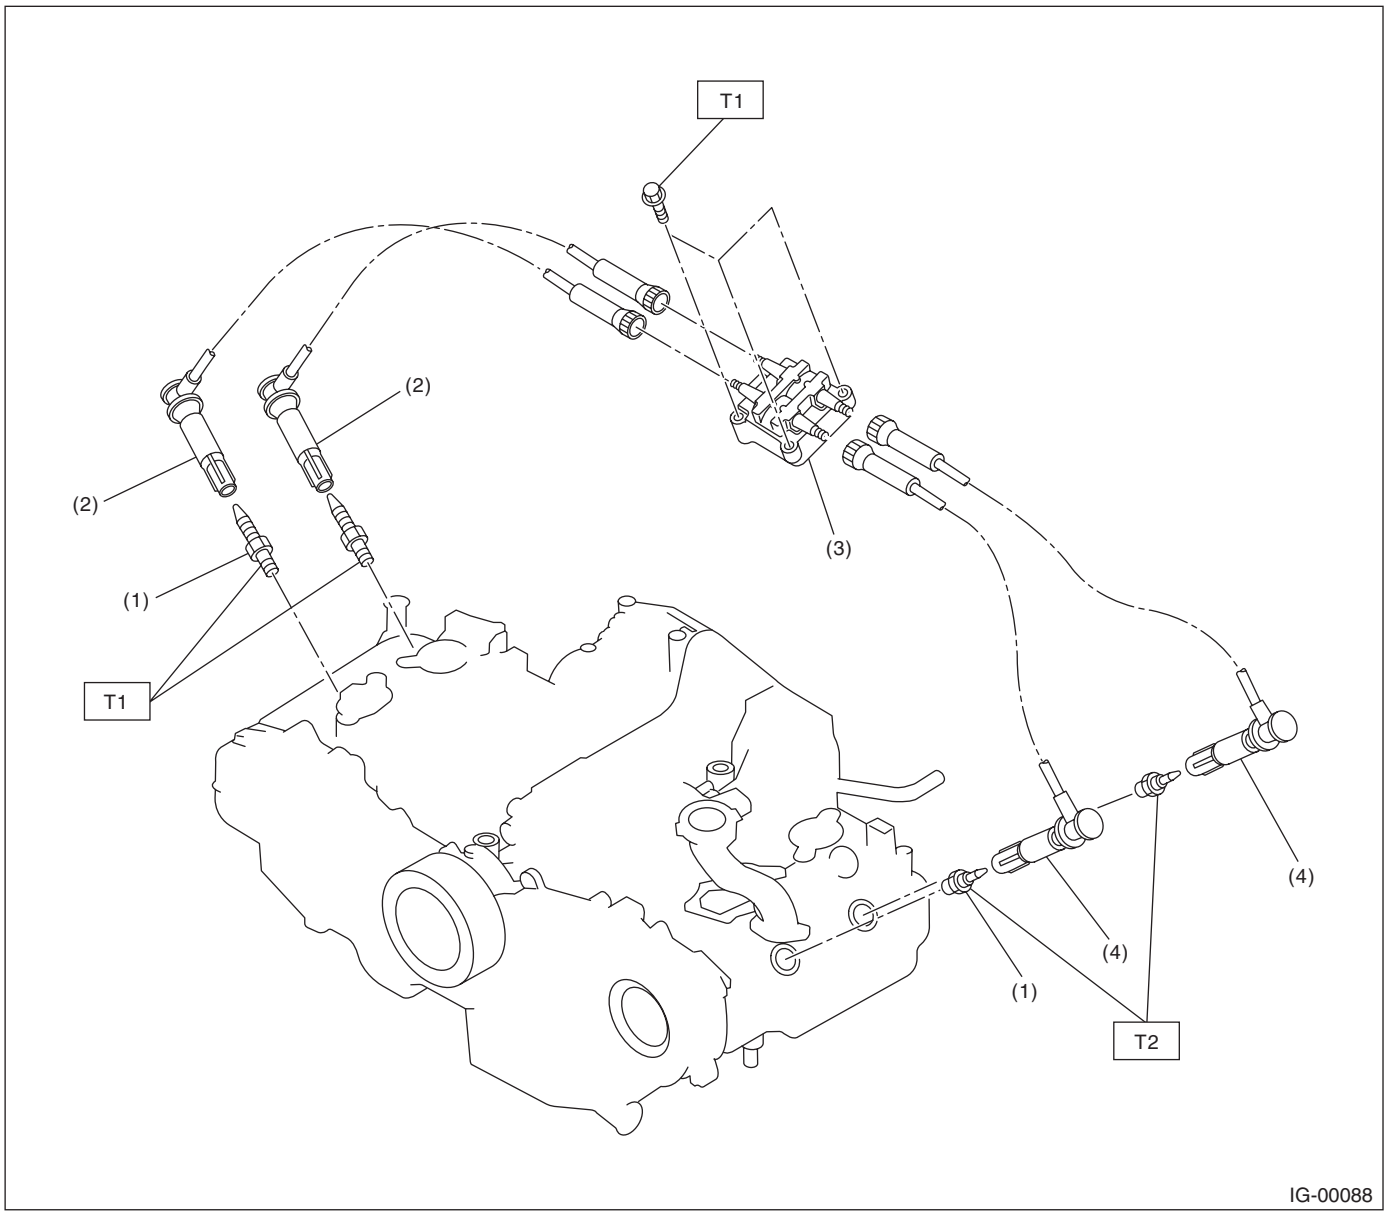

(1) Spark plug
(2) Spark plug cord (#1, #3)
(3) Ignition coil & ignitor ASSY
(4) Spark plug cord (#2, #4)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 21 (2.1, 15.5)

C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Spark Plug

A: REMOVAL

CAUTION:
All spark plugs installed on an engine, must be of the same heat range.

Spark plug	
1.6 L	NGK: BKR6E* CHAMPION: RC8YC4** NGK: BKR6E-11** (Alternate)
2.0 L	NGK: BKR6E* CHAMPION: RC10YC4** NGK: BKR5E-11** (Alternate)
2.5 L	

*: Without catalytic converter
**: With catalytic converter

1. RH SIDE

1) Disconnect the ground cable from battery.

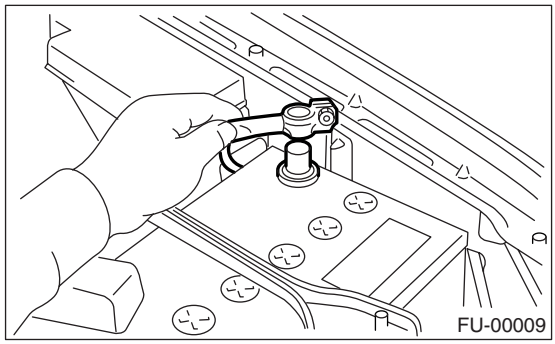

2) Remove the resonator chamber. <Ref. to IN(H4SO)-7, REMOVAL, Resonator Chamber.>
3) Remove the spark plug cords by pulling the boot, not cord itself.

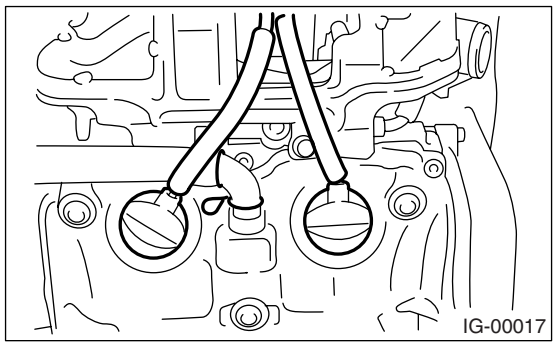

4) Remove the spark plugs using spark plug sockets.

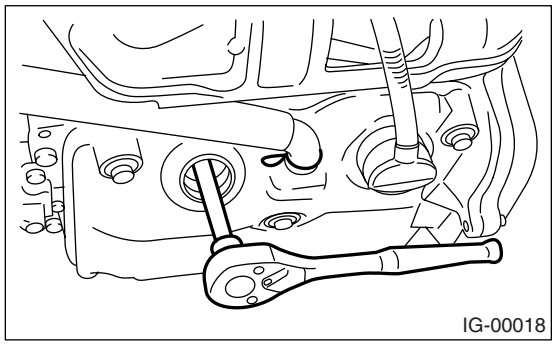

2. LH SIDE

1) Disconnect the ground cable from battery.

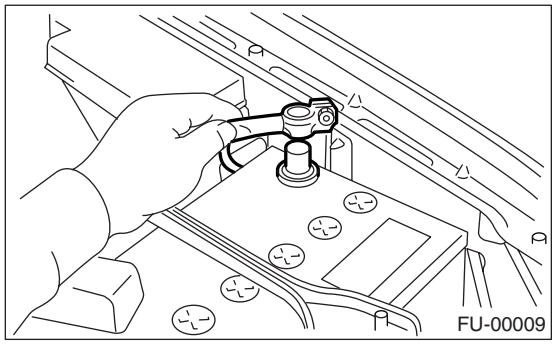

2) Disconnect the washer motor connector.

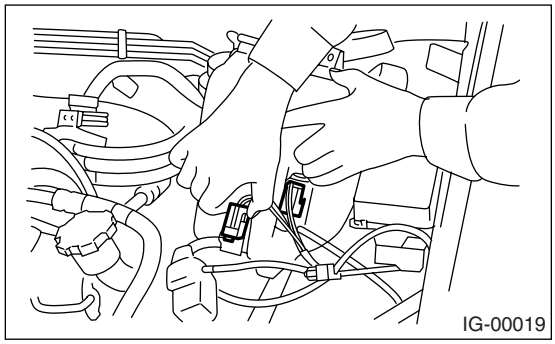

3) Disconnect the rear window glass washer hose from washer motor, then plug the connection with a suitable cap.
4) Remove the two bolts which hold the washer tank, then take the tank away from working area.

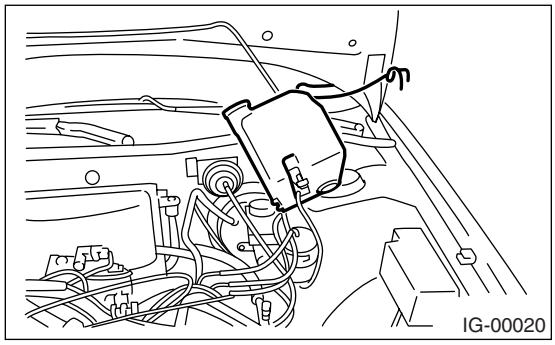

5) Remove the spark plug cords by pulling the boot, not cord itself.

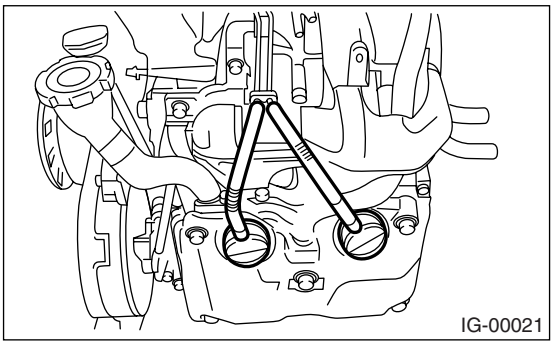
IG-00021

6) Remove the spark plugs with spark plug sockets.

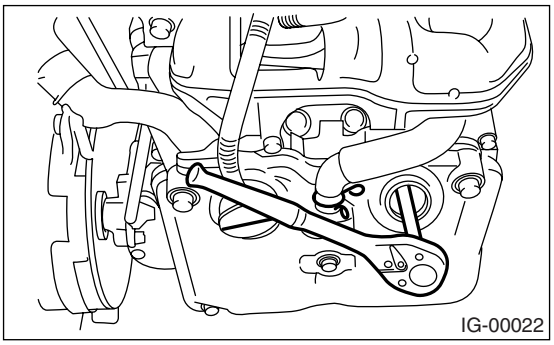
IG-00022

B: INSTALLATION

1. RH SIDE

Install in the reverse order of removal.

NOTE:
• For tightening torque, refer to “COMPONENT”. <Ref. to IG(H4SO)-3, COMPONENT, General Description.>
• The above torque should be only applied to new spark plugs without oil on their threads.
In case their threads are lubricated, the torque should be reduced by approx. 1/3 of the specified torque in order to avoid over-stressing.

2. LH SIDE

Install in the reverse order of removal.

NOTE:
• For tightening torque, refer to “COMPONENT”. <Ref. to IG(H4SO)-3, COMPONENT, General Description.>
• The above torque should be only applied to new spark plugs without oil on their threads.
In case their threads are lubricated, the torque should be reduced by approx. 1/3 of the specified torque in order to avoid over-stressing.

C: INSPECTION

Check the electrodes and inner and outer ceramic insulator of plugs, noting the type of deposits and the degree of electrode erosion.

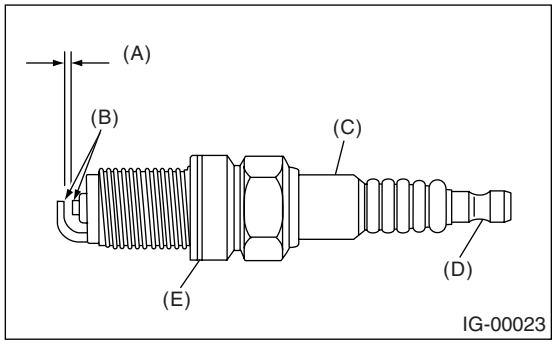

IG-00023

(A) Electrode gap
(B) Carbon accumulation or wear
(C) Cracks
(D) Damage
(E) Damaged gasket

1) Normal:
Brown to grayish-tan deposits and slight electrode wear indicates correct spark plug heat range.

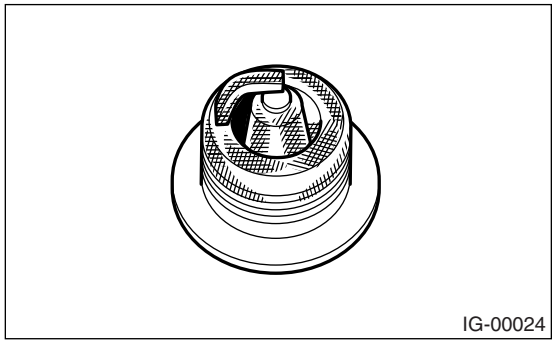
IG-00024

2) Carbon fouled:
Dry fluffy carbon deposits on insulator and electrode are mostly caused by slow speed driving in city, weak ignition, too rich fuel mixture, dirty air cleaner, etc.
It is advisable to replace with plugs having hotter heat range.

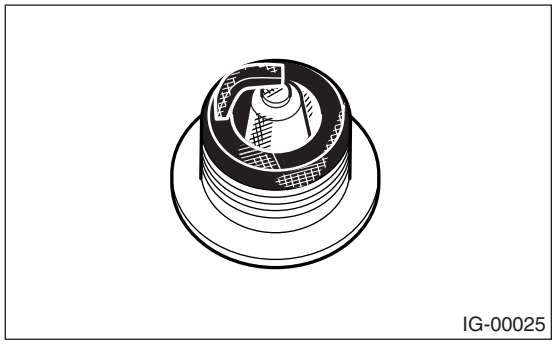
IG-00025

3) Oil fouled:
Wet black deposits show excessive oil entrance into combustion chamber through worn rings and pistons or excessive clearance between valve guides and stems. If the same condition remains after repair, use a hotter plug.

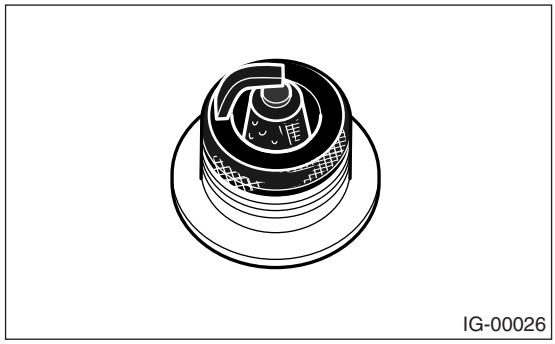
IG-00026

4) Overheating:
White or light gray insulator with black or gray brown spots and bluish burnt electrodes indicates engine overheating. Moreover, the appearance results from incorrect ignition timing, loose spark plugs, wrong selection of fuel, hotter range plug, etc. It is advisable to replace with plugs having colder heat range.

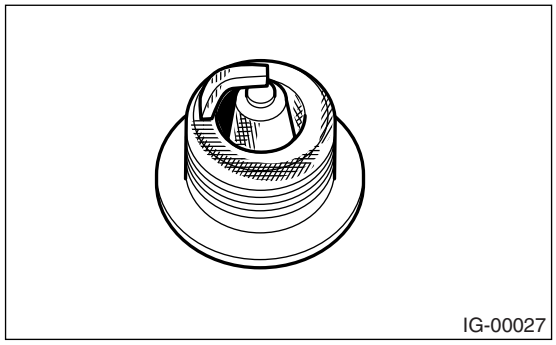
IG-00027

D: CLEANING
Clean the spark plugs in a sand blast type cleaner. Avoid excessive blasting. Clean and remove the carbon or oxide deposits, but do not wear away ceramic insulator.
If deposits are too stubborn, replace the plugs.

E: ADJUSTMENT
Correct it if the spark plug gap is measured with a gap gauge, and it is necessary.

Spark plug gap: L
With catalyst:
1.0 — 1.1 mm (0.039 — 0.043 in)
Without catalyst:
0.7 — 0.8 mm (0.028 — 0.031 in)

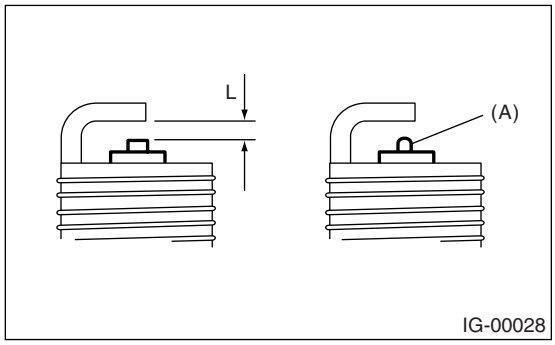

IG-00028

NOTE:
Replace with a new spark plug if this area (A) is worn to “ball” shape.

3. Ignition Coil & Ignitor ASSY

A: REMOVAL

1) Disconnect the ground cable from battery.

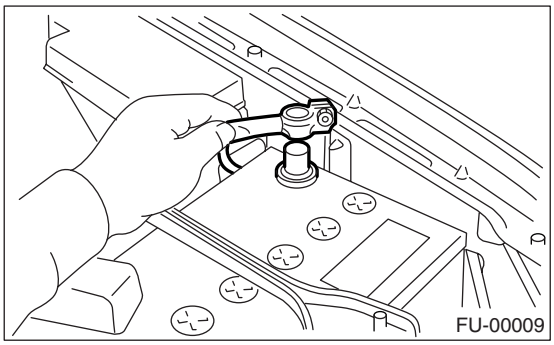

2) Disconnect the spark plug cords from ignition coil and ignitor ASSY.

- 1.6 L MODEL

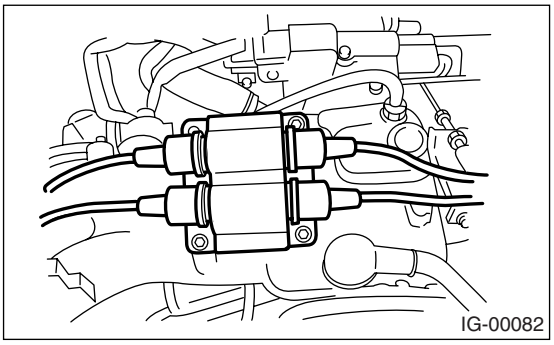

- 2.0 L and 2.5 L MODEL

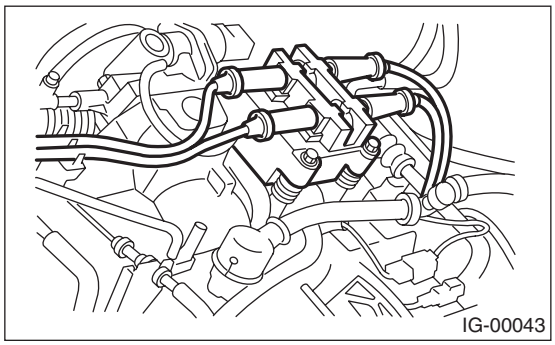

3) Disconnect the connector from ignition coil and ignitor ASSY.

4) Remove the ignition coil and ignitor ASSY.

- 1.6 L MODEL

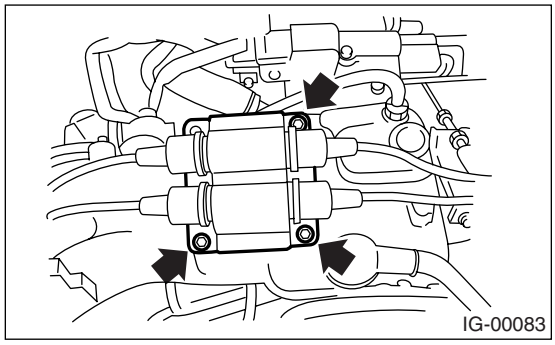

- 2.0 L and 2.5 L MODEL

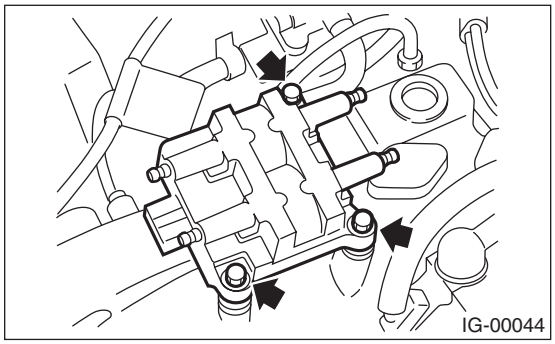

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”. <Ref. to IG(H4SO)-3, COMPONENT, General Description.>

CAUTION:
Connect the spark plugs to correct position. Misconnection may damage the unit.

C: INSPECTION

Using the accurate tester, inspect the following items, and replace if defective.
1) Primary coil resistance
2) Secondary coil resistance

CAUTION:
If the resistance is extremely low, this indicates the presence of a short-circuit.

Specified resistance:(1.6 L model)

[Primary side]
Between terminal No. 1 and No. 4
0.7 Ω±10%
Between terminal No. 1 and No. 2
0.7 Ω±10%

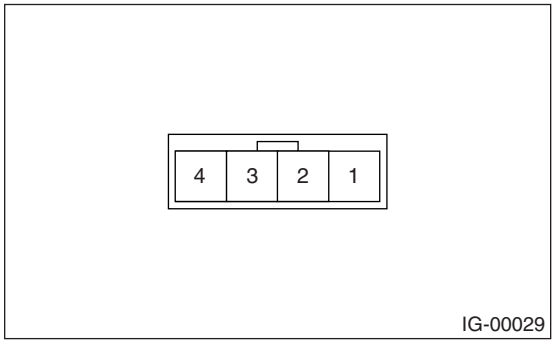

[Secondary side]
Between (A) and (B)
13.0 kΩ±20%
Between (C) and (D)
13.0 kΩ±20%

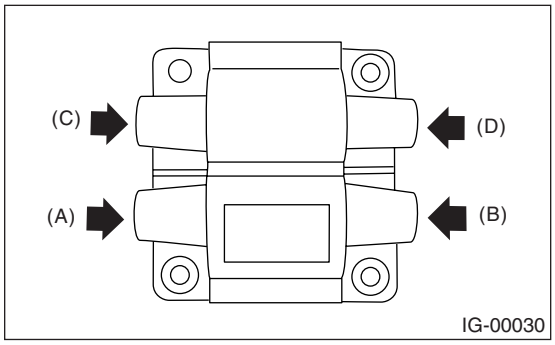

Specified resistance:(2.0 L and 2.5 L model)

[Primary side]
Between terminal No. 1 and No. 2
0.73 Ω±10%
Between terminal No. 2 and No. 4
0.73 Ω±10%

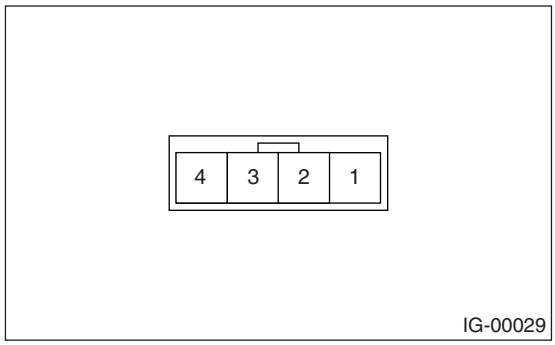

[Secondary side]
Between (A) and (B)
12.8 kΩ±15%
Between (C) and (D)
12.8 kΩ±15%

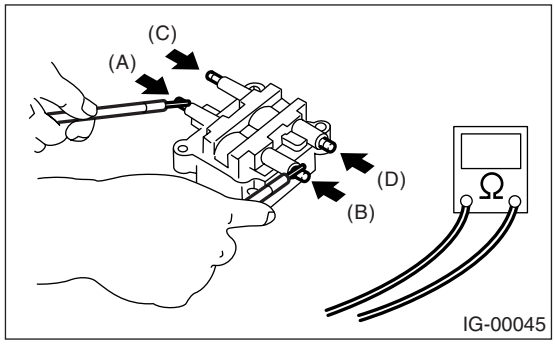

3) Insulation between primary terminal and case: 100 MΩ or more.

4. Spark Plug Cord

A: INSPECTION

Check for:
1) Damage to cords, deformation, burning or rust formation of terminals
2) Resistance values of cords

Resistance value:

#1 cord: 5.6 — 10.6 kΩ
#2 cord: 7.3 — 13.7 kΩ
#3 cord: 5.9 — 11.1 kΩ
#4 cord: 7.3 — 13.7 kΩ

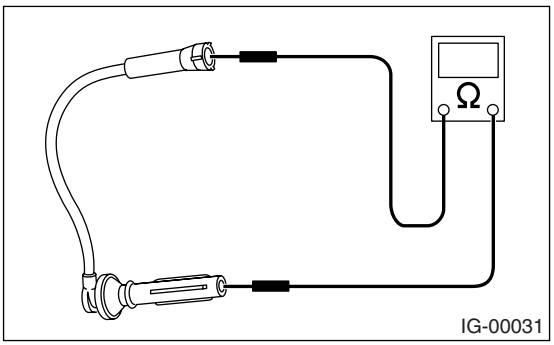

STARTING/CHARGING SYSTEMS

SC(H4SO)

Page

1. General Description 2
2. Starter 7
3. Generator 14
4. Battery 20

1. General Description

A: SPECIFICATIONS

1. NON-TURBO MODEL

Item			Designation		
Starter	Type		Reduction type		
	Vehicle type		MT	1.6 L AT	2.0 L AT, 2.5 L AT
	Model		M000T30471	M000T30571	M000T20171
	Manufacturer		Mitsubishi Electric		
	Voltage and output		12 V — 1.0 kW		12 V — 1.4 kW
	Direction of rotation		Counterclockwise (when observed from pinion)		
	Number of pinion teeth		8		9
	No-load characteristics	Voltage	11 V		
		Current	95 A or less		90 A or less
		Rotating speed	2,500 rpm or more		2,000 rpm or more
	Load characteristics	Voltage	7.5 V		7.7 V
		Current	300 A		400 A
		Torque	8.84 N·m (0.90 kgf-m, 6.5 ft-lb) or more		16.7 N·m (1.70 kgf-m, 12.3 ft-lb) or more
		Rotating speed	870 rpm or more		710 rpm or more
	Lock characteristics	Voltage	4 V		3.5 V
		Current	680 A or less		960 A or less
		Torque	17 N·m (1.73 kgf-m, 12.5 ft-lb) or more		31 N·m (3.16 kgf-m, 22.9 ft-lb) or more
Generator	Type		Rotating-field three-phase, voltage regulator built-in type, with load response control system		
	Model		A2TB5391, A2TB6291*		
	Manufacturer		Mitsubishi Electric		
	Voltage and output		12 V — 75 A		
	Polarity on ground side		Negative		
	Direction of rotation		Clockwise (when observed from pulley side)		
	Armature connection		Three-phase Y-type		
	Output current		1,500 rpm — 30 A or more 2,500 rpm — 64 A or more 5,000 rpm — 76 A or more		
	Regulated voltage		14.1 — 14.8 V [20°C (68°F)]		
Battery	Type and capacity	Europe and South America	12 V — 48 AH (55D 23L)		1.6 L: 12 V — 48 AH (55D 23L) 2.0 L: 12 V — 52 AH (65D 23L) 2.5 L: 12 V — 52 AH (75D 23L)
		Others	12 V — 27 AH (34D 19L)		

*: For Australia and general

2. TURBO MODEL

Item			Designation	
Starter	Type		Reduction type	
	Vehicle type		MT	AT
	Model		228000 — 9270	M001T20171
	Manufacturer		DENSO	Mitsubishi Electric
	Voltage and output		12 V — 1.0 kW	12 V — 1.4 kW
	Direction of rotation		Counterclockwise (when observed from pinion)	
	Number of pinion teeth		9	
	No-load characteristics	Voltage	11 V	
		Current	90 A or less	
		Rotating speed	2,860 rpm or more	2,000 rpm or more
	Load characteristics	Voltage	8 V	7.7 V
		Current	280 A	400 A
		Torque	9.3 N·m (0.95 kgf-m, 6.9 ft-lb) or more	16.7 N·m (1.70 kgf-m, 12.3 ft-lb) or more
		Rotating speed	860 rpm or more	710 rpm or more
	Lock characteristics	Voltage	5 V	3.5 V
		Current	515 A or less	960 A or less
		Torque	16 N·m (1.63 kgf-m, 11.8 ft-lb) or more	31 N·m (3.16 kgf-m, 22.9 ft-lb) or more
Generator	Type		Rotating-field three-phase, voltage regulator built-in type, with load response control system	
	Model		A2TB5391, A2TB6291*	
	Manufacturer		Mitsubishi Electric	
	Voltage and output		12 V — 75 A	
	Polarity on ground side		Negative	
	Direction of rotation		Clockwise (when observed from pulley side)	
	Armature connection		Three-phase Y-type	
	Output current		1,500 rpm — 30 A or more 2,500 rpm — 64 A or more 5,000 rpm — 76 A or more	
	Regulated voltage		14.1 — 14.8 V [20°C (68°F)]	
Battery	Type and capacity	Europe and South America	12 V — 48 AH (55D 23L)	12 V — 52 AH (65D 23L)
		Australia	12 V— 40 AH (50D 20L)	

*: For Australia and South America (except STi)

B: COMPONENT

1. STARTER

• EXCEPT DOHC TURBO MT MODEL

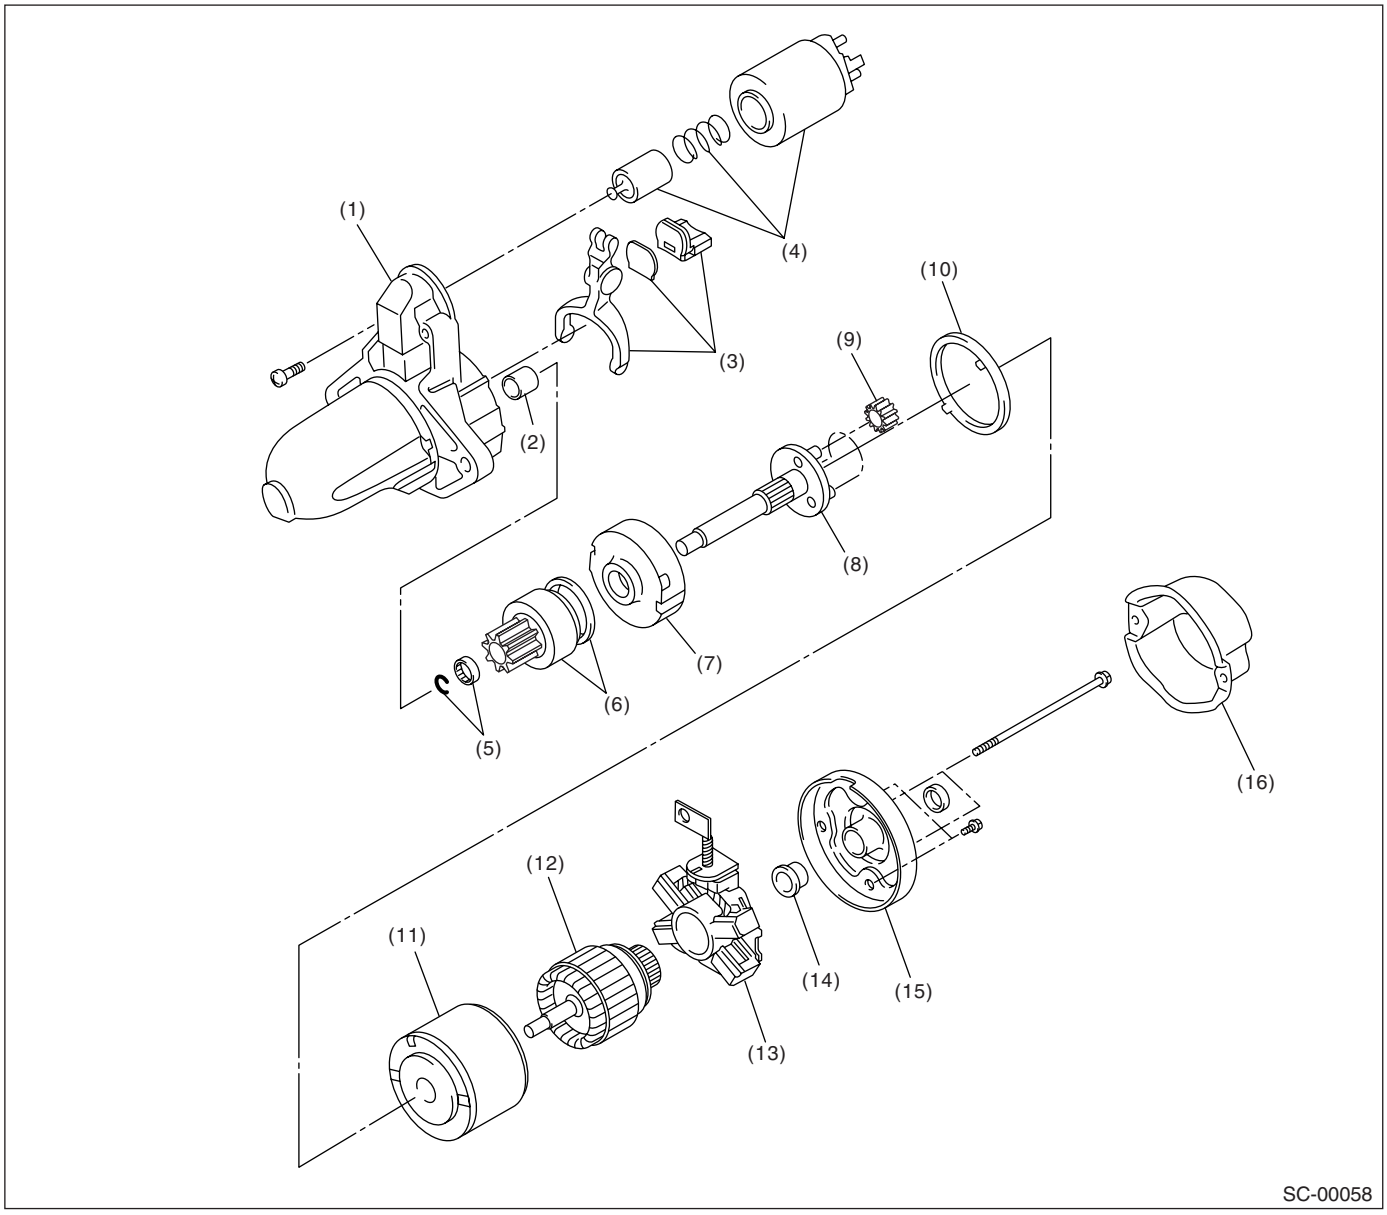

(1) Front bracket
(2) Sleeve bearing
(3) Lever set
(4) Magnet switch ASSY
(5) Stopper set
(6) Overrunning clutch
(7) Internal gear ASSY
(8) Shaft ASSY
(9) Gear ASSY
(10) Packing
(11) Yoke ASSY
(12) Armature
(13) Brush holder ASSY
(14) Sleeve bearing
(15) Rear cover
(16) Rear cover set

• DOHC TURBO MT MODEL

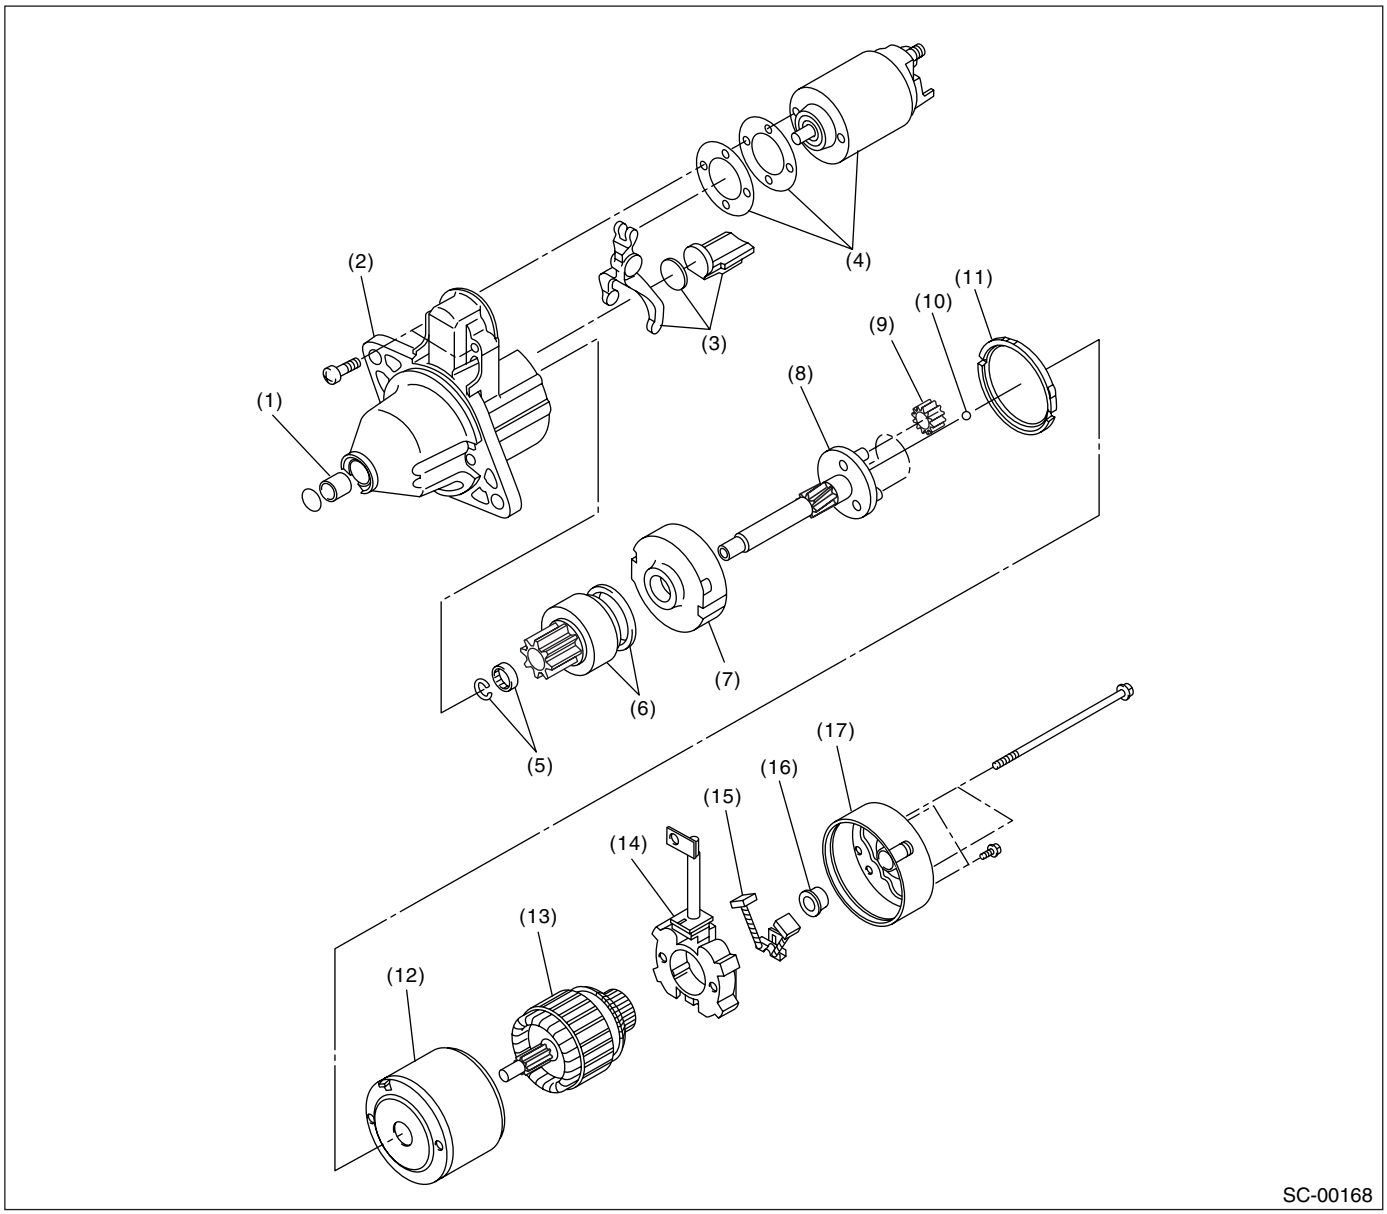

(1) Sleeve bearing
(2) Front bracket
(3) Lever set
(4) Magnet switch assembly
(5) Stopper set
(6) Overrunning clutch
(7) Internal gear assembly
(8) Shaft assembly
(9) Gear assembly
(10) Ball
(11) Packing
(12) Yoke assembly
(13) Armature
(14) Brush holder assembly
(15) Brush
(16) Sleeve bearing
(17) Rear bracket

2. GENERATOR

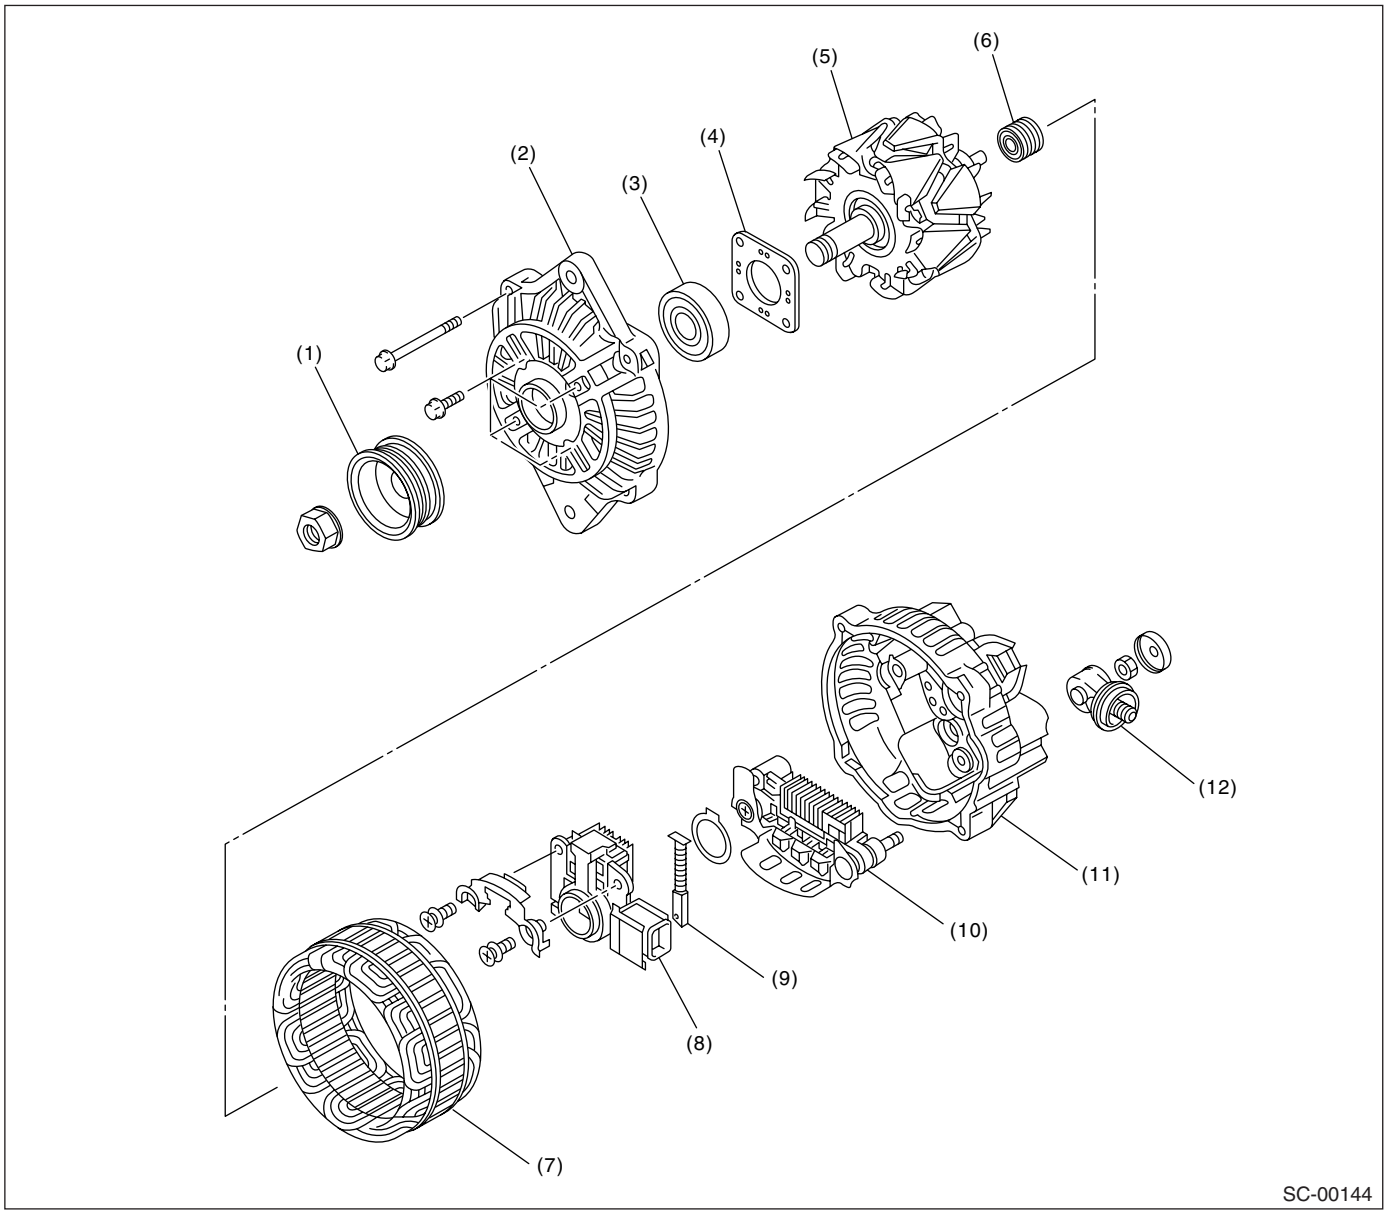

(1) Pulley
(2) Front cover
(3) Ball bearing
(4) Bearing retainer
(5) Rotor
(6) Bearing
(7) Stator coil
(8) IC regulator with brush
(9) Brush
(10) Rectifier
(11) Rear cover
(12) Terminal

C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Starter

A: REMOVAL

1) Disconnect the ground cable from battery.

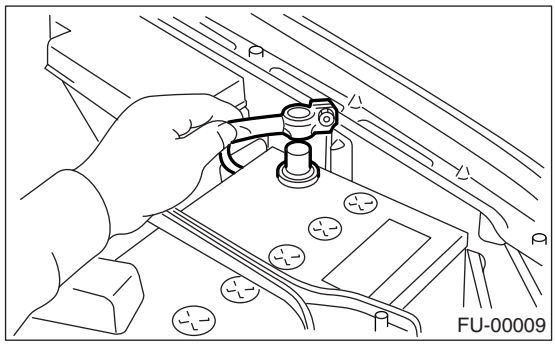

2) Remove the air cleaner case. (Non-turbo model) <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

3) Remove the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>

4) Remove the air cleaner case stay. (Non-turbo model)

- MT MODEL

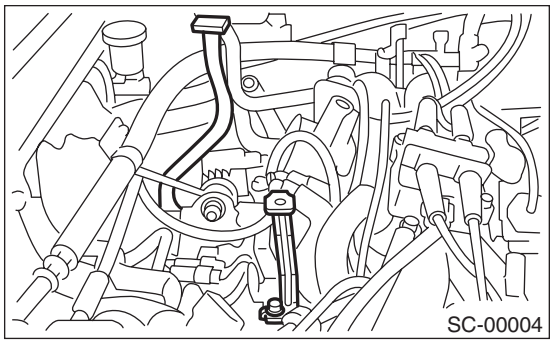

- AT MODEL

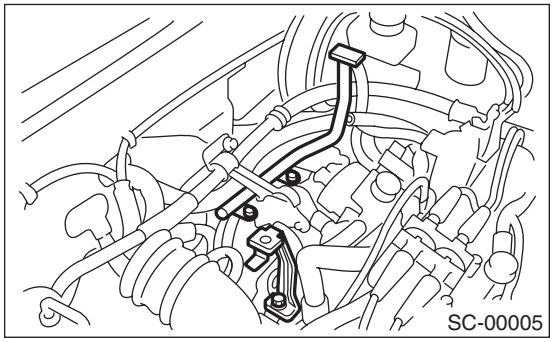

5) Disconnect the connector and terminal from starter.

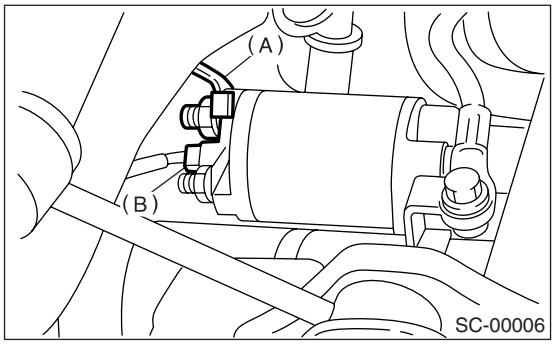

(A) Terminal
(B) Connector

6) Remove the starter from transmission.

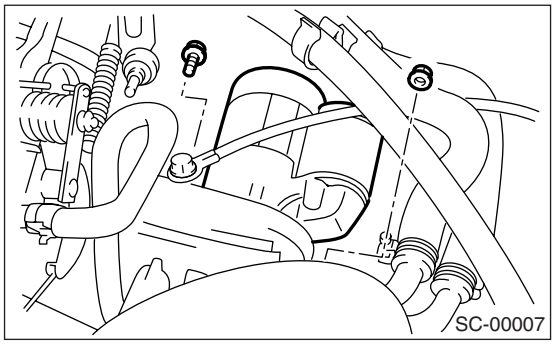

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
50 N·m (5.1 kgf-m, 37 ft-lb)

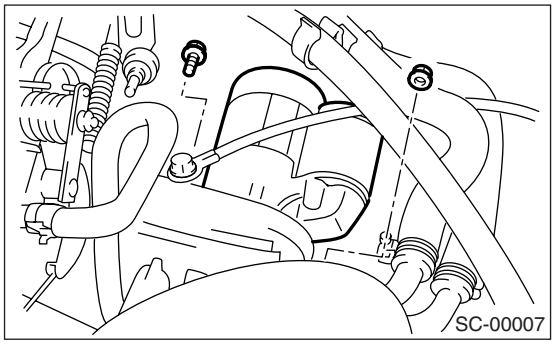

C: DISASSEMBLY

1. STARTER ASSEMBLY

1) Loosen the nut which holds the terminal M of switch assembly, and then disconnect the connector.
2) Remove the bolts which hold the switch assembly, and then remove switch assembly, plunger and plunger spring from starter as a unit.

NOTE:
Be careful because the pinion gap adjustment washer may sometimes be used on the mounting surface of switch assembly.

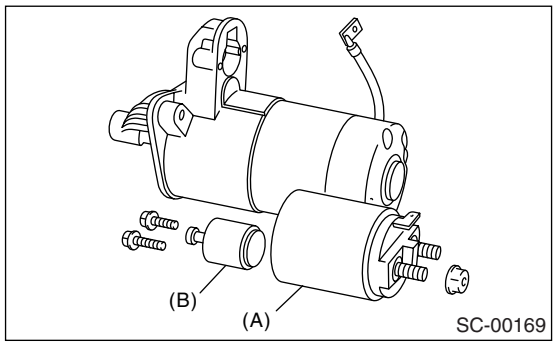

(A) Switch assembly
(B) Plunger

3) Remove both through-bolts and brush holder screws, and then detach the rear cover and brush holder.

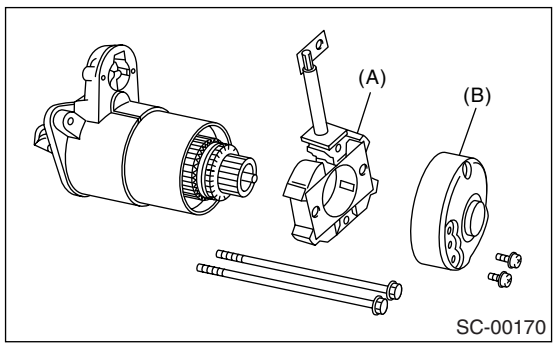

(A) Brush holder
(B) Rear cover

4) Remove the armature and yoke from front bracket. The ball used as a bearing will come off from the armature end.

NOTE:
Before removal of the yoke, put alignment marks on the yoke and front bracket.

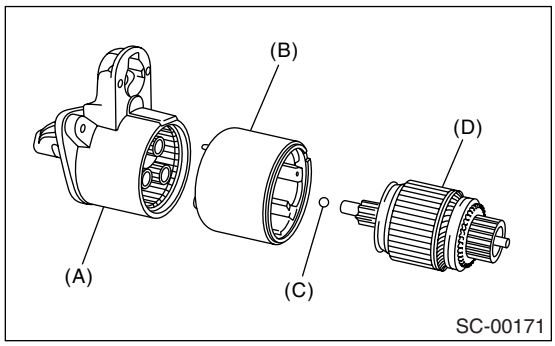

(A) Front bracket
(B) Yoke
(C) Ball
(D) Armature

5) Remove packing A, planetary gears, packing B and plate.

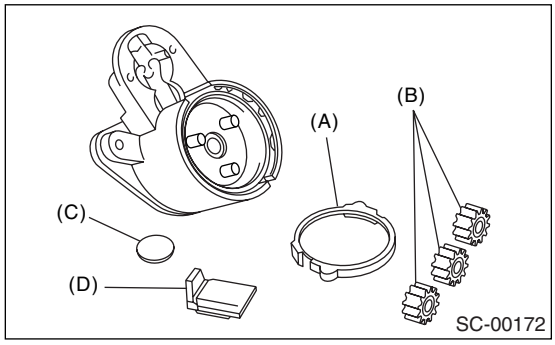

(A) Packing A
(B) Planetary gear
(C) Plate
(D) Packing B

6) Remove the shaft assembly and overrunning clutch as a unit.

NOTE:
Note the direction of the lever before removing.

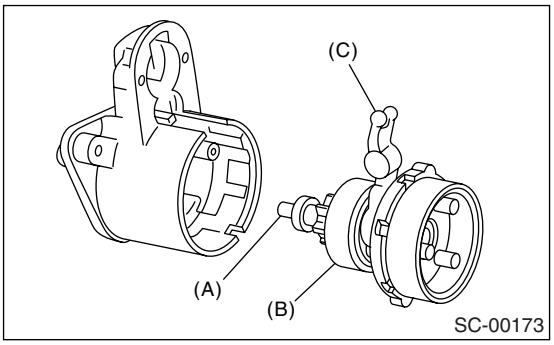

(A) Shaft assembly
(B) Overrunning clutch
(C) Lever

7) Remove the overrunning clutch from shaft assembly as follows:
(1) Remove the stopper from ring by lightly tapping the stopper with an appropriate tool (such as a fit socket wrench).
(2) Remove the ring, stopper and clutch from shaft.

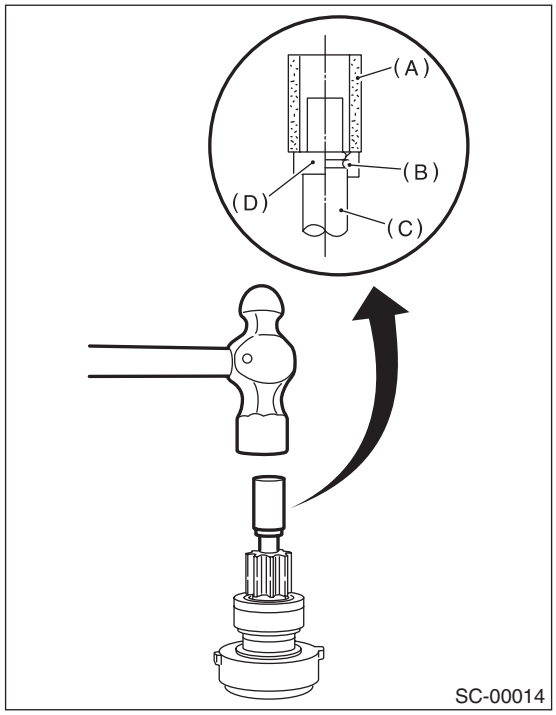

(A) Socket wrench
(B) Ring
(C) Shaft
(D) Stopper

2. BRUSH HOLDER

NOTE:
Only the brush holder of turbo MT model starter can be disassembled.

Slightly open the metal fitting while holding the insulating plate against the brush holder. Remove the insulating plate.
The brush and spring can be easily removed from the brush holder at this time.

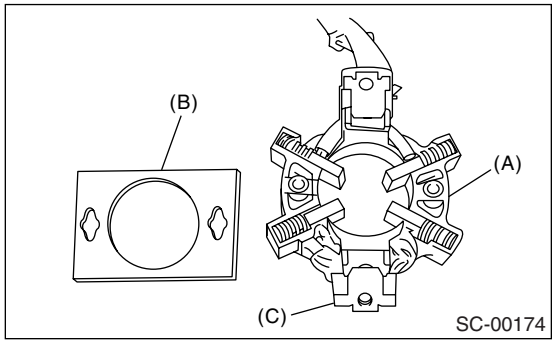

(A) Brush holder
(B) Insulating plate
(C) Metal fitting

D: ASSEMBLY

1) Assemble in the reverse order of disassembly.
2) Apply grease to the following parts before assembly.
- Front and rear bracket sleeve bearings
- Armature shaft gear
- Outer periphery of plunger
- Mating surfaces of plunger and lever
- Gear shaft splines
- Mating surfaces of lever and clutch
- Ball at armature shaft end
- Planetary gear

E: INSPECTION

1. ARMATURE

1) Check the commutator for any sign of burns of rough surfaces or stepped wear. If wear is of a minor nature, correct it by using sand paper.
2) Run-out test
Check the commutator run-out, and then replace if it exceeds the limit.

Commutator run-out:
Standard
0.05 mm (0.0020 in)
Service limit
Less than 0.10 mm (0.0039 in)

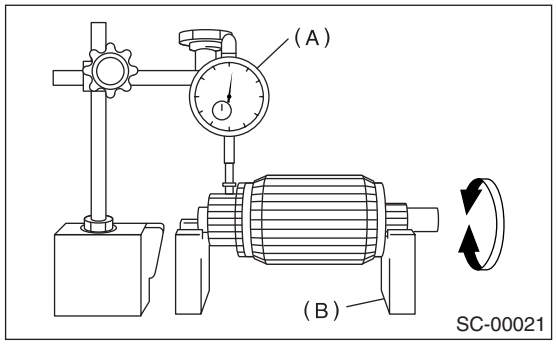

(A) Dial gauge
(B) V-block

3) Depth of segment mold
Check the depth of segment mold.

Depth of segment mold:
0.5 mm (0.020 in)

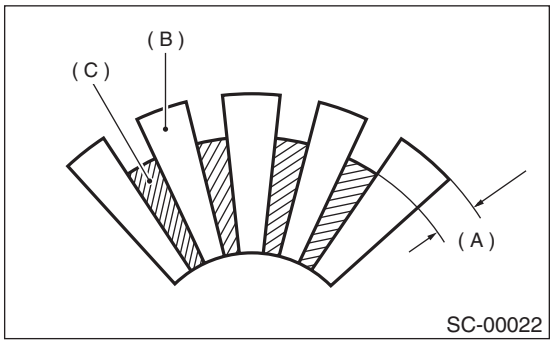

(A) Depth of mold
(B) Segment
(C) Mold

4) Armature short-circuit test
Check the armature for short-circuit by placing it on a growler tester. Hold an iron sheet against the armature core while slowly rotating armature. A short-circuited armature will cause the iron sheet to vibrate and to be attracted to core. If the iron sheet is attracted or vibrates, the armature, which is short-circuited, must be replaced or repaired.

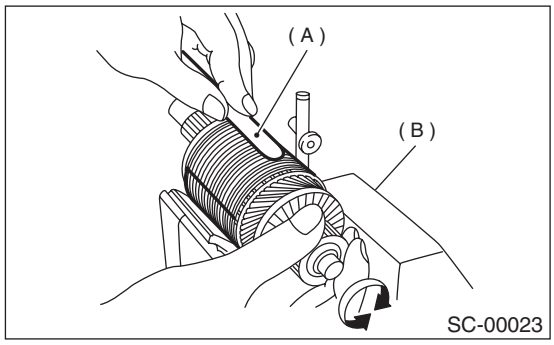

(A) Iron sheet
(B) Grower tester

5) Armature ground test
Using a circuit tester, touch one probe to the commutator segment and the other to shaft. There should be no continuity. If there is continuity, the armature is grounded.
Replace the armature if it is grounded.

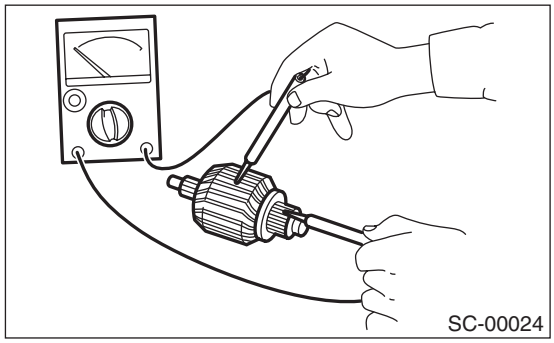

2. YOKE

Make sure the pole is set in position.

3. OVERRUNNING CLUTCH

Inspect the teeth of pinion for wear and damage. Replace if it is damaged. It is normal if the pinion rotates smoothly in direction of rotation (counterclockwise) and does not rotate in the opposite direction.

CAUTION:
Do not clean the overrunning clutch with oil to prevent grease from flowing out.

4. BRUSH AND BRUSH HOLDER

1) Brush length
Measure the brush length, and then replace if it is worn down to under the service limit.
Replace if abnormal wear or cracks are noticed.

Brush length:
Standard
12.3 mm (0.484 in)
Service limit
7.0 mm (0.276 in)

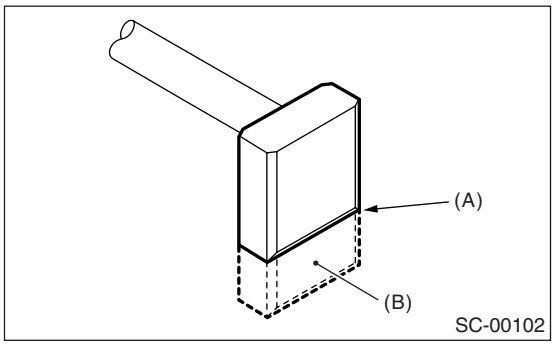

(A) Service limit line
(B) Brush

2) Brush movement
Be sure the brush moves smoothly inside brush holder.
3) Brush spring force
Measure the brush spring force with a spring scale. If it is less than the service limit, replace the brush holder.

Brush spring force:

Standard
Except DOHC turbo MT model
15.9 — 19.5 N (1.62 — 1.99 kgf, 3.57 — 4.38 lb) (when new)
DOHC turbo MT model
21.6 N (2.2 kgf, 4.9 lb) (when new)

Service limit
Except DOHC turbo MT model
2.5 N (0.25 kgf, 0.56 lb)
DOHC turbo MT model
5.9 N (0.6 kgf, 1.3 lb)

5. SWITCH ASSEMBLY

Using a circuit tester (set in “ohm”), check that there is continuity between terminals S and M, and between terminal S and ground.
Also check to be sure there is no continuity between terminals M and B.

Terminal/Specified resistance:
S — M/Less than 1 Ω
S — Ground/Less than 1Ω
M — B/More than 1 MΩ

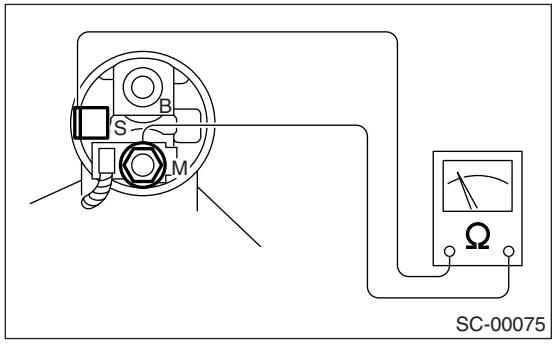

6. SWITCH ASSEMBLY OPERATION

1) Connect the terminal S of switch assembly to positive terminal of battery with a lead wire, and starter body to ground terminal of battery. The pinion should be forced endwise on shaft.

CAUTION:
With the pinion forced endwise on shaft, the starter motor may rotate because current flows through the pull-in coil to motor, however, this is not a problem.

2) Disconnect the connector from terminal M, and then connect the positive terminal of battery and terminal M using a lead wire and ground terminal to starter body.
In this test set up, the pinion should return to its original position even when it is pulled out with a screwdriver.

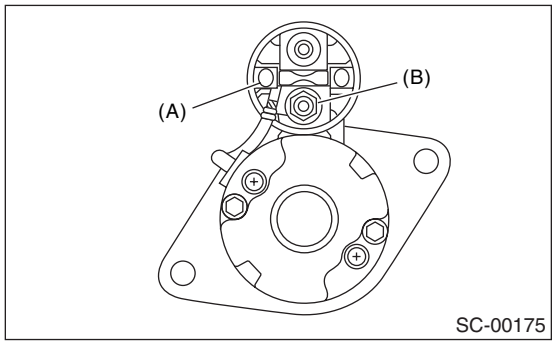

(A) Terminal S
(B) Terminal M

7. PINION GAP

1) Measure the pinion gap while the pinion is pulled out as shown in the figure.

Pinion gap:
0.5 — 2.0 mm (0.020 — 0.079 in)

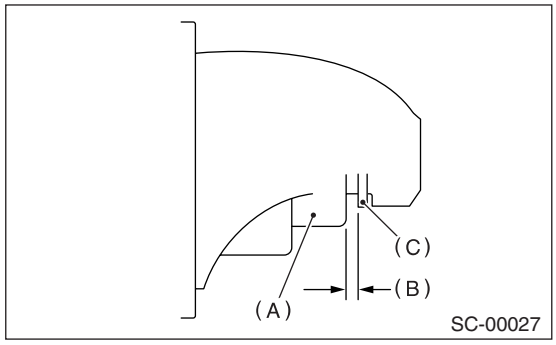

(A) Pinion
(B) Gap
(C) Stopper

If the motor is running with the pinion forced endwise on shaft, disconnect the connector from terminal M of switch assembly, and then connect terminal M to ground terminal (–) of battery with a lead wire. Next, gently push the pinion back with your fingertips, and then measure the pinion gap.
2) If the pinion gap is outside specified range, remove or add number of adjustment washers used on the mounting surface of switch assembly until correct pinion gap is obtained.

8. PERFORMANCE TEST

The starter should be submitted to performance tests whenever it has been overhauled, to assure its satisfactory performance when installed on the engine.
Three performance tests, no-load test, load test, and lock test, are presented here; however, if the load test and lock test cannot be performed, carry out at least the no-load test.
For these performance tests, use the circuit shown in figure.

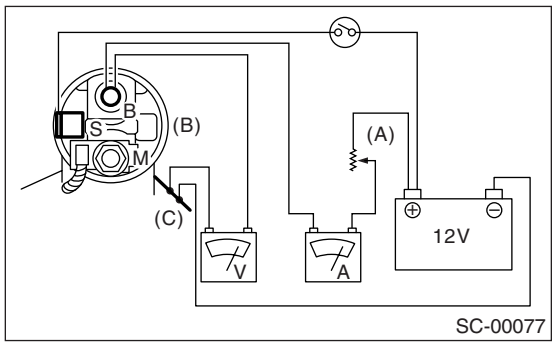

(A) Variable resistor
(B) Magnetic switch
(C) Starter body

1) No-load test
With switch on, adjust the variable resistor to obtain 11 V, take the ammeter reading, and then measure the starter speed. Compare these values with the specifications.

No-load test (standards):

Voltage/Current
1.6L MT, 2.0L Non-turbo MT, 2.5L MT and 1.6L AT
MAX. 11 V/Less than 95 A
2.0L Non-turbo AT, 2.5L AT
MAX. 11 V/Less than 90 A
2.0L Turbo
MAX. 11 V/Less than 90 A

Rotating speed
1.6L MT, 2.0L Non-turbo MT, 2.5L MT and 1.6L AT
More than 2,500 rpm
2.0L Non-turbo AT, 2.5L AT
More than 2,000 rpm
2.0L Turbo MT
More than 2,860 rpm
2.0L Turbo AT
More than 2,000 rpm

2) Load test
Apply the specified braking torque to starter. The condition is satisfactory if the current draw and starter speed are within the specifications.

Load test (standards):

Voltage/Load
- ***1.6L MT, 2.0L Non-turbo MT, 2.5L MT and 1.6L AT***
  - ***More than 7.5 V/8.84 N·m (0.90 kgf-m, 6.5 ft-lb)***
- ***2.0L Non-turbo AT, 2.5L AT***
  - ***More than 7.7 V/16.7 N·m (1.70 kgf-m, 12.3 ft-lb)***
- ***2.0L Turbo MT***
  - ***More than 8 V/9.3 N·m (0.95 kgf-m, 6.9 ft-lb)***
- ***2.0L Turbo AT***
  - ***More than 7.7 V/16.7 N·m (1.70 kgf-m, 12.3 ft-lb)***

Current/Speed
- ***1.6L MT, 2.0L Non-turbo MT, 2.5L MT and 1.6L AT***
  - ***More than 300 A/870 rpm***
- ***2.0L Non-turbo AT, 2.5L AT***
  - ***More than 400 A/710 rpm***
- ***2.0L Turbo MT***
  - ***More than 280 A/860 rpm***
- ***2.0L Turbo AT***
  - ***More than 400 A/710 rpm***

3) Lock test
With the starter stalled, or not rotating, measure the torque developed and current draw when the voltage is adjusted to the specified voltage.

Lock test (standards):

Voltage/Current
- ***1.6L MT, 2.0L Non-turbo MT, 2.5L MT and 1.6L AT***
  - ***Less than 4 V/680 A***
- ***2.0L Non-turbo AT, 2.5L AT***
  - ***Less than 3.5 V/960 A***
- ***2.0L Turbo MT***
  - ***Less than 5 V/515 A***
- ***2.0L Turbo AT***
  - ***Less than 3.5 V/960 A***

Torque
- ***1.6L MT, 2.0L Non-turbo MT, 2.5L MT and 1.6L AT***
  - ***17 N·m (1.73 kgf-m, 12.5 ft-lb)***
- ***2.0L Non-turbo AT, 2.5L AT***
  - ***31 N·m (3.16 kgf-m, 22.9 ft-lb)***
- ***2.0L Turbo MT***
  - ***16 N·m (1.63 kgf-m, 11.8 ft-lb)***
- ***2.0L Turbo AT***
  - ***31 N·m (3.16 kgf-m, 22.9 ft-lb)***

3. Generator

A: REMOVAL

1) Disconnect the ground cable from battery.

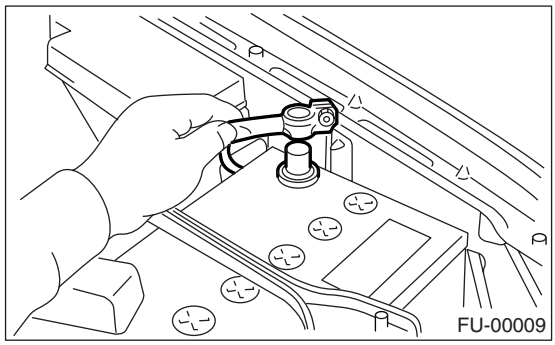

2) Disconnect the connector and terminal from generator.

- NON-TURBO MODEL

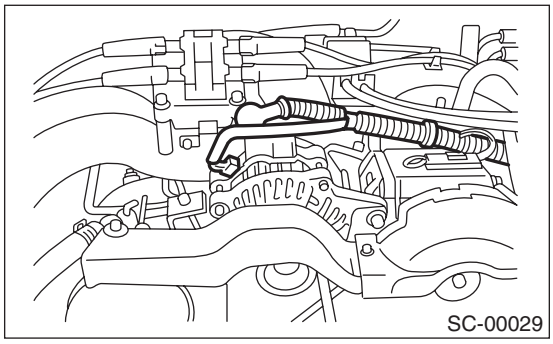

- TURBO MODEL

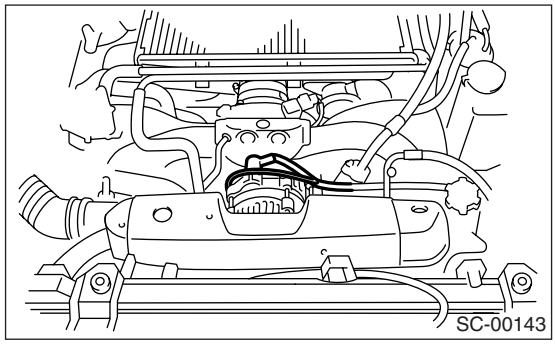

3) Remove the V-belt cover.

4) Remove the front side V-belt.

<Ref. to ME(H4SO)-44, FRONT SIDE BELT, REMOVAL, V-belt.> or <Ref. to ME(H4DOTC)-55, FRONT SIDE BELT, REMOVAL, V-belt.>

5) Remove the bolts which install generator onto bracket.

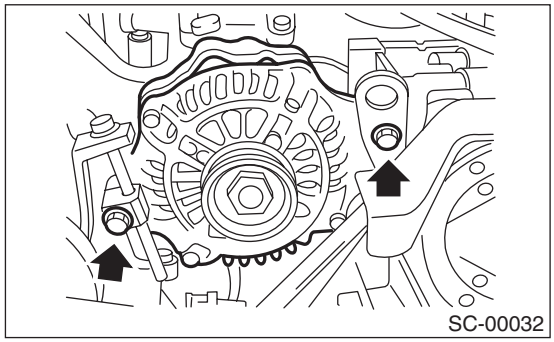

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

CAUTION:
Check and adjust the V-belt tension. <Ref. to ME(H4SO)-45, INSPECTION, V-belt.> or <Ref. to ME(H4DOTC)-56, INSPECTION, V-belt.>

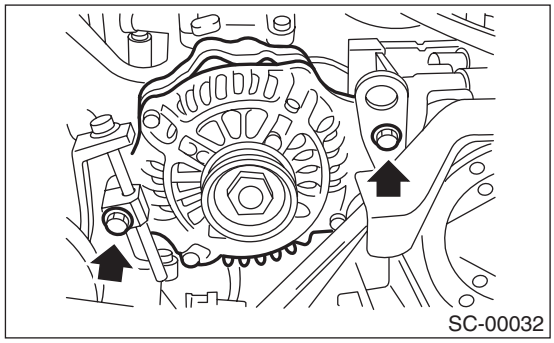

C: DISASSEMBLY

1) Remove the four through-bolts.

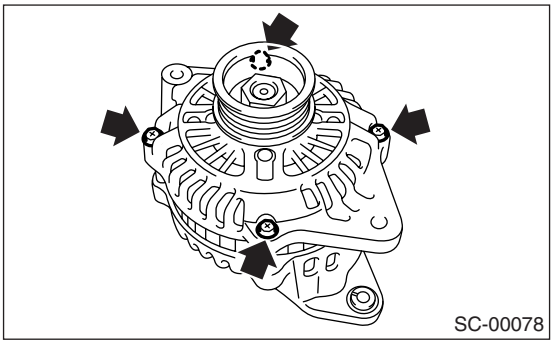

2) Heat portion (A) of rear cover to 50°C (122°F) with a heater drier.

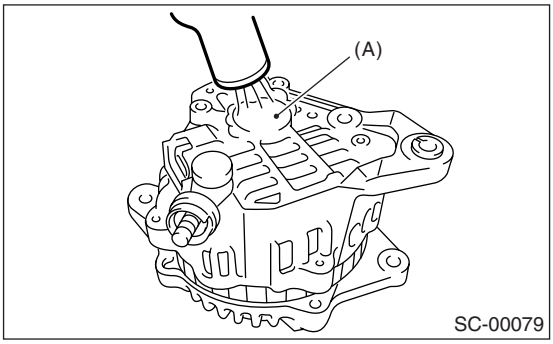

3) Then insert the tip of a flat tip screwdriver into the gap between stator core and front cover. Pry them apart to disassemble.

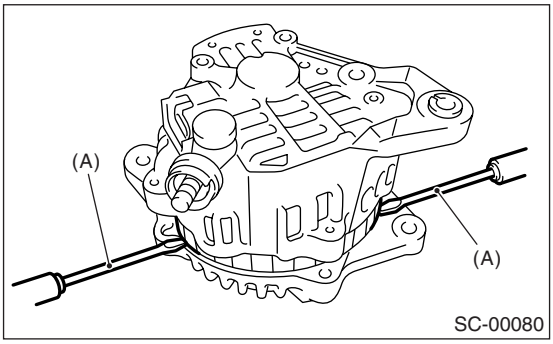

(A) Screwdriver

4) Hold the rotor with a vise and remove pulley nut.

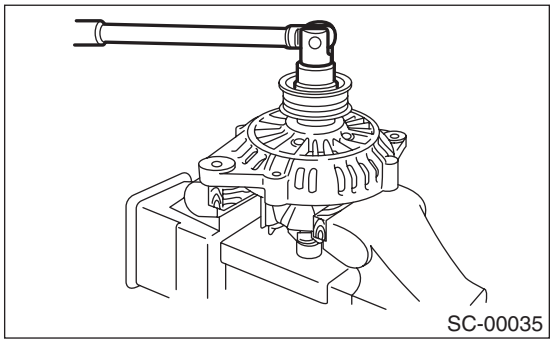

CAUTION:
When holding the rotor with a vise, place aluminum plates or wooden pieces on the vise jaws to prevent rotor from damage.

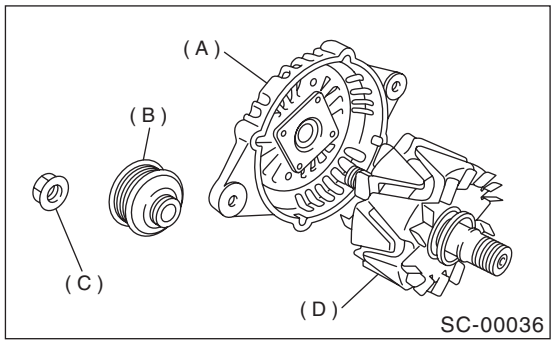

(A) Front cover
(B) Pulley
(C) Nut
(D) Rotor

5) Remove the ball bearing as follows.
(1) Remove the bolt, and then remove the bearing retainer.

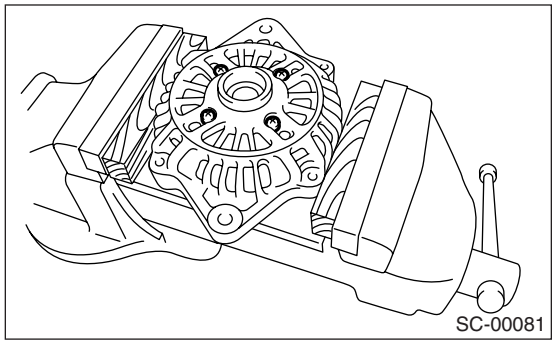

(2) Firmly install an appropriate tool (such as a fit socket wrench) to bearing inner race.

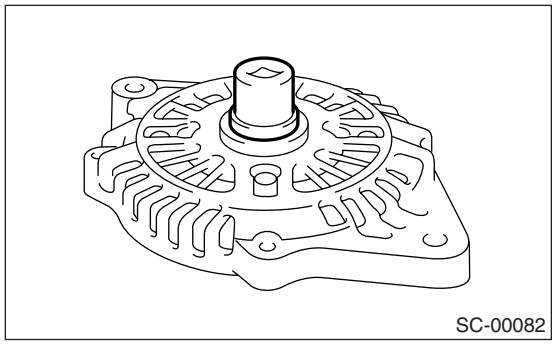

(3) Push the ball bearing off the front cover using a press.

6) Remove the bearing from rotor using a bearing puller.

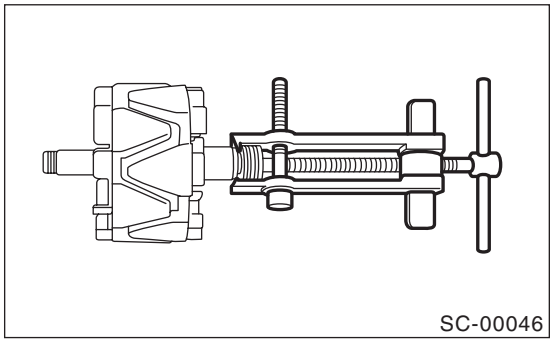

7) Unsolder connection between rectifier and stator coil to remove the stator coil.

CAUTION:
Do not allow a 180 — 270 W soldering iron to contact the terminals for more than 5 seconds at once because the rectifier cannot withstand so much heat.

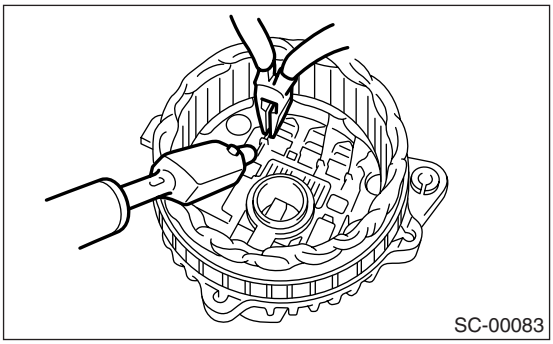

8) Remove the IC regulator as follows.
(1) Remove the screws which secure IC regulator to rear cover.

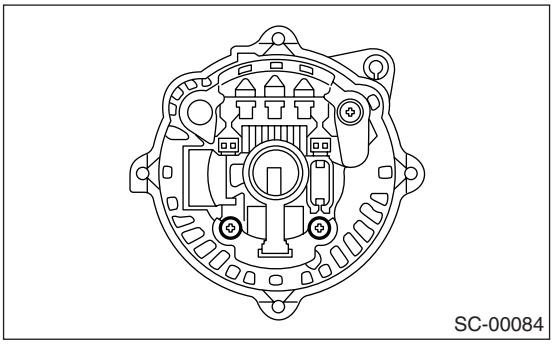

(2) Unsolder the connection between IC regulator and rectifier to remove the IC regulator.

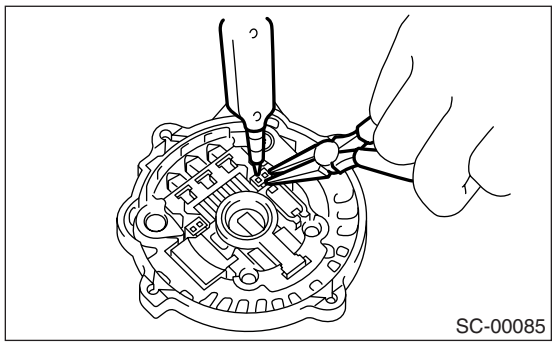

9) Remove the brush as follows.
(1) Remove cover A.

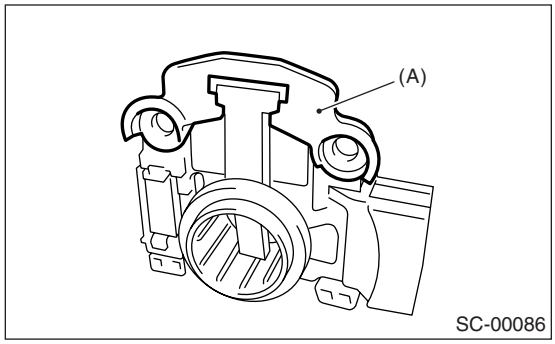

(A) Cover A

(2) Remove cover B.

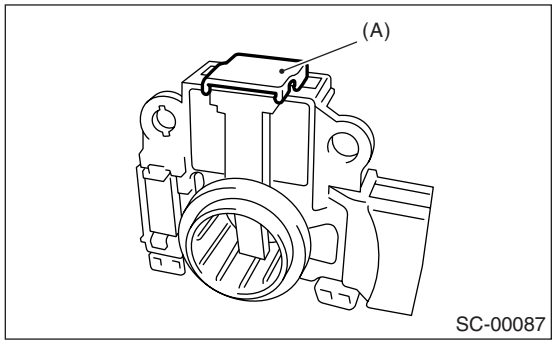

(A) Cover B

(3) Separate the brush from connection to remove.

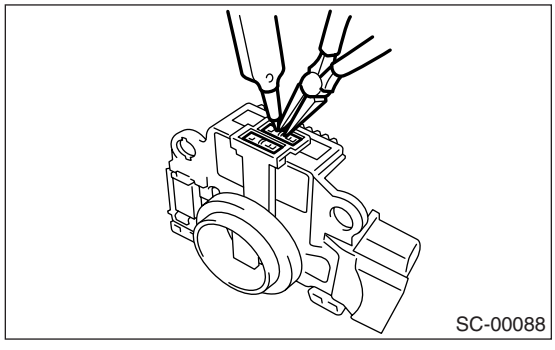

10) Remove the rectifier as follows.
(1) Remove the bolts which secure the rectifier.

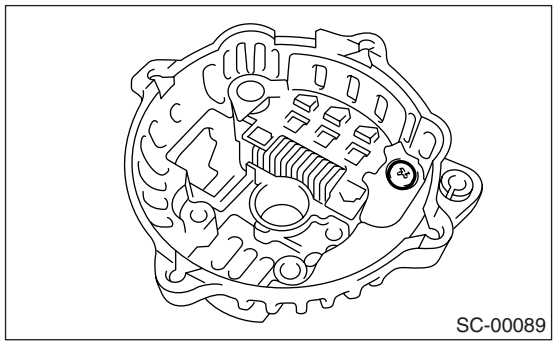

(2) Remove the cover of terminal B.

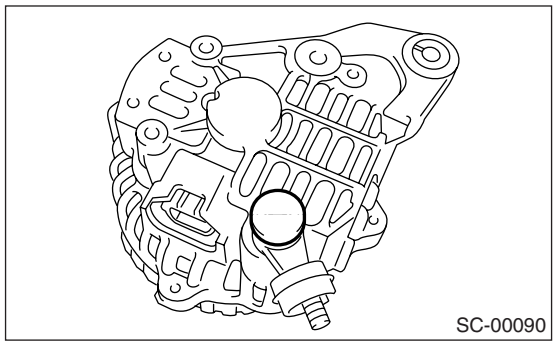

(3) Remove the nut of terminal B, and then remove the rectifier.

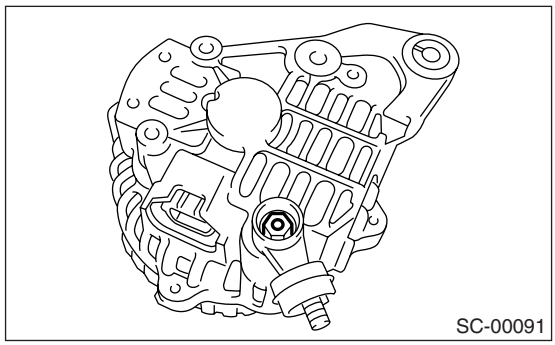

D: ASSEMBLY

Assemble in the reverse order of disassembly.
1) Pulling up brush
Before assembling, press the brush down into brush holder, and then fix them in that position by passing a [1 mm (0.08 in) dia. 40 to 50 mm (1.6 to 2.0 in) long] wire through the hole as shown in the figure.

CAUTION:
Be sure to remove the wire after reassembly.

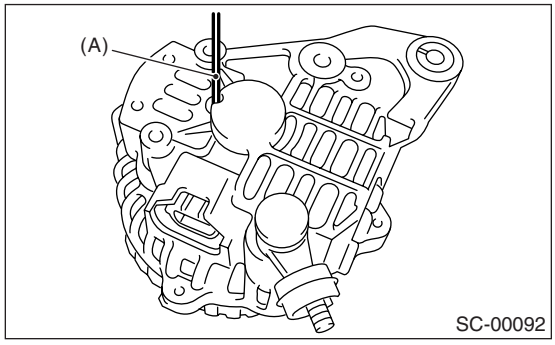

(A) Wire

2) Install the ball bearing.
(1) Set the ball bearing on the front cover, and then securely install an appropriate tool (such as a fit socket wrench) to the bearing outer race.
(2) Press the ball bearing into the specified position using a press.
(3) Install the bearing retainer.
3) Press the bearing (rear side) into the rotor shaft using a press to install.
4) Heat the bearing box in rear cover [50 to 60°C (122 to 140°F)], and then press the rear bearing into rear cover.

CAUTION:
Grease should not be applied to rear bearing. Remove the oil completely if it is found on bearing box.

5) After reassembly, turn the pulley by hand to check that rotor turns smoothly.

E: INSPECTION

1. DIODE

CAUTION:
Never use a mega tester (designed for reading high voltage) or any other similar instrument for this test; otherwise, the diodes may be damaged.

1) Checking positive diode
Check for continuity between the diode lead and positive side heat sink. The positive diode is in good condition if resistance is 1 Ω or less only in the direction from the diode lead to heat sink.

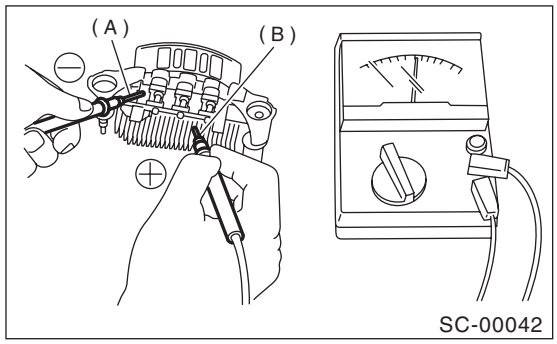

(A) Diode lead
(B) Heat sink (positive side)

2) Checking negative diode
Check for continuity between the negative side heat sink and diode lead. The negative diode is in good condition if resistance is 1 Ω or less only in the direction from the heat sink to diode lead.

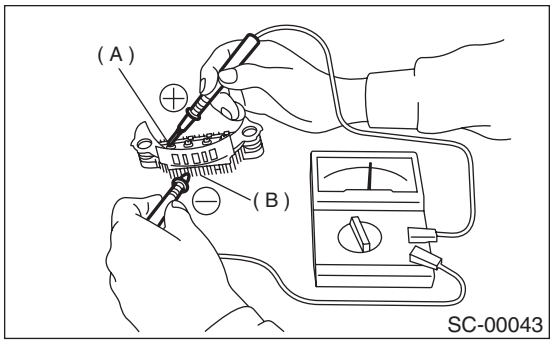

(A) Diode lead
(B) Heat sink (negative side)

2. ROTOR

1) Slip ring surface
Inspect the slip rings for contamination or any roughness on the sliding surface. Repair the slip ring surface using a lathe or sand paper.
2) Slip ring outer diameter
Measure the slip ring outer diameter. If the slip ring is worn, replace the rotor assembly.

Slip ring outer diameter:
Standard
22.7 mm (0.894 in)
Limit
22.1 mm (0.870 in)

3) Continuity test
Check the resistance between slip rings using circuit tester.
If the resistance is not within the specified range, replace the rotor assembly.

Specified resistance:
Approx. 1.8 — 2.2 Ω

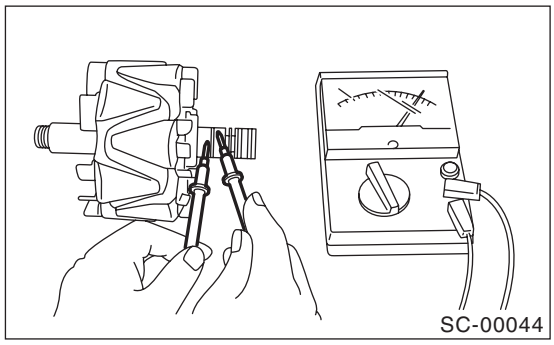

4) Insulation test
Check the continuity between slip ring and rotor core or shaft. If resistance is 1 Ω or less, the rotor coil is grounded, and so replace the rotor assembly.

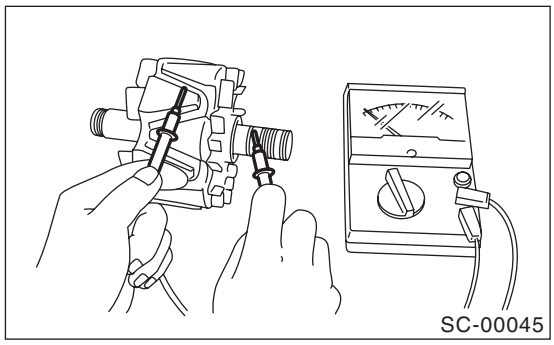

5) Ball bearing (rear side)
Check the rear ball bearing. Replace if it is noisy or if the rotor does not turn smoothly.

3. STATOR

1) Continuity test
Inspect the stator coil for continuity between each end of the lead wires. If resistance is 1 MΩ or more, the lead wire is broken, and so replace the stator assembly.

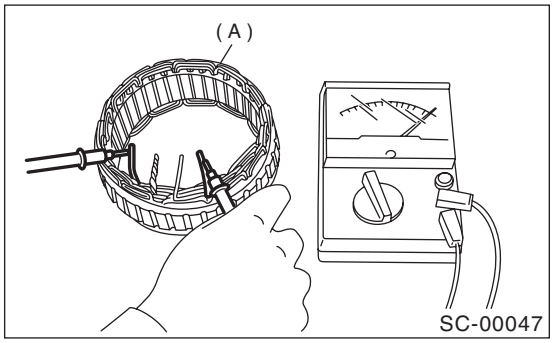

(A) Stator

2) Insulation test
Inspect the stator coil for continuity between stator core and each end of lead wire. If resistance is 1 Ω or less, the stator coil is grounded, and so replace the stator assembly.

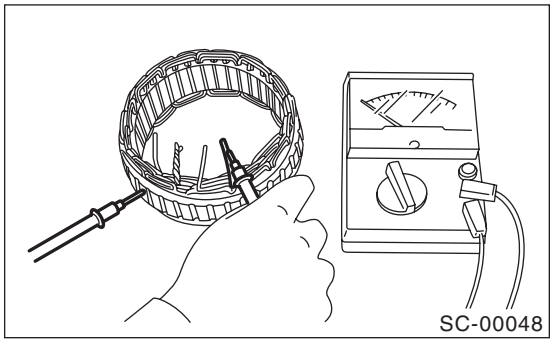

4. BRUSH

1) Measure the length of each brush. If wear exceeds the service limit, replace the brush. Each brush has the service limit mark (A) on it.

Brush length:
Standard
18.5 mm (0.728 in)
Service limit
5.0 mm (0.197 in)

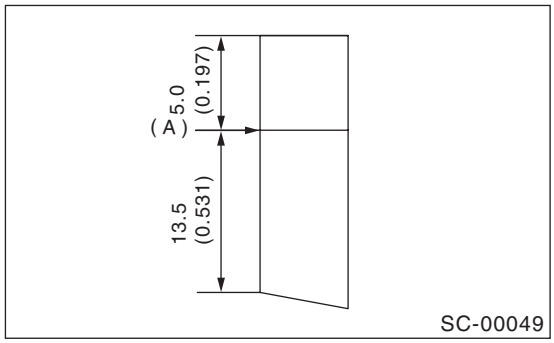

2) Checking brush spring for proper pressure
Using a spring pressure indicator, push the brush into the brush holder until its tip protrudes 2 mm (0.08 in). Then measure the pressure of brush spring. If the pressure is less than 2.648 N (270 g, 9.52 oz), replace the brush spring with a new one. The new spring must have a pressure of 4.609 to 5.786 N (470 to 590 g, 16.58 to 20.810 oz).

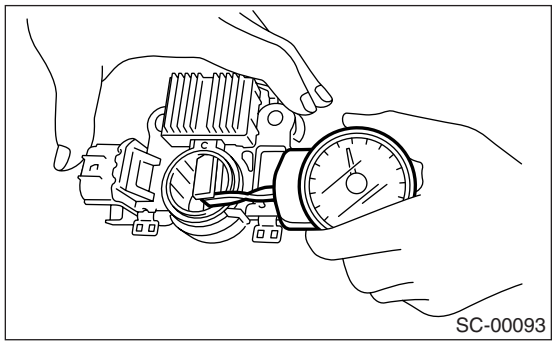

5. BEARING (FRONT SIDE)

Check the front ball bearing. If the resistance is felt while rotating, or if abnormal noise is heard, replace the ball bearing.

4. Battery

A: REMOVAL

1) Disconnect the positive (+) cable after disconnecting the ground (–) cable of battery.
2) Remove the flange nuts from battery rods, and then take off the battery holder.

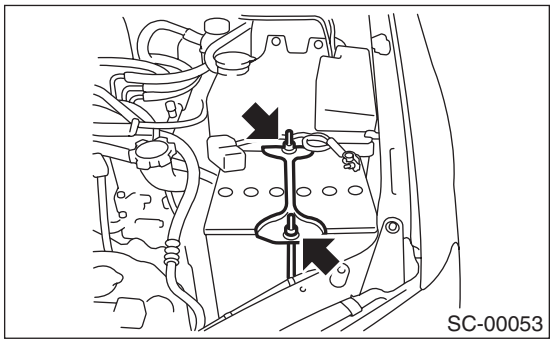

3) Remove the battery.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

NOTE:
• Clean the battery cable terminals, and then apply grease to retard formation of corrosion.
• Connect the positive (+) cable of battery and then the ground (–) cable of battery.

C: INSPECTION

WARNING:
• Electrolyte has toxicity; be careful handling the fluid.
• Avoid contact with skin, eyes or clothing. Especially at contact with eyes, flush with running water for 15 minutes and get prompt medical attention.
• Batteries produce explosive gasses. Keep sparks, flame, cigarettes away.
• Ventilate when charging or using in enclosed space.
• For safety, in case an explosion does occur, wear eye protection or shield your eyes when working near any battery. Never lean over a battery.
• Do not let the battery fluid contact eyes, skin, fabrics, or paint-work because battery fluid is corrosive acid.
• To lessen the risk of sparks, remove rings, metal watch-bands, and other metal jewelry. Never allow metal tools to contact the positive battery terminal and anything connected to it while you are at the same time in contact with any other metallic portion of the vehicle. This may cause a short circuit.

1. EXTERNAL PARTS:

Check for the existence of dirt or cracks on battery case, top cover, vent plugs, and terminal posts. If necessary, clean with water and wipe with a dry cloth.
Apply a thin coat of grease on the terminal posts to prevent corrosion.

2. ELECTROLYTE LEVEL:

Check the electrolyte level in each cell. If the level is below MIN LEVEL, bring the level to MAX LEVEL by pouring distilled water into the battery cell. Do not fill beyond MAX LEVEL.

3. SPECIFIC GRAVITY OF ELECTROLYTE:

1) Measure the specific gravity of electrolyte using a hydrometer and a thermometer.
Specific gravity varies with temperature of electrolyte so that it must be corrected at 20°C (68°F) using the following equation:

$S_{20} = St + 0.0007 \times (t - 20)$
S_{20}: Specific gravity corrected at electrolyte temperature of 20°C
St: Measured specific gravity
t: Measured temperature (°C)
Determine whether or not battery must be charged, according to corrected specific gravity.
Standard specific gravity: 1.220 — 1.290 [at 20°C (68°F)]

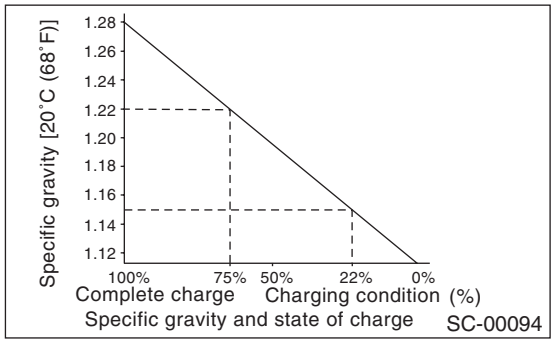

2) Measuring the specific gravity of the electrolyte in battery will disclose the state of charge of battery. The relation between specific gravity and state of charge is as shown in the figure.

D: MEASUREMENT

WARNING:
Do not bring an open flame close to the battery at this time.

CAUTION:
• Prior to charging, corroded terminals should be cleaned with a brush and common caustic soda solution.
• Be careful since the battery electrolyte overflows while charging the battery.
• Observe the instructions when handling battery charger.
• Before charging the battery on vehicle, disconnect battery ground terminal to prevent damage of generator diodes or other electrical units.

1. JUDGMENT OF BATTERY IN CHARGED CONDITION

1) Specific gravity of electrolyte is held within the specified range from 1.250 to 1.290 for more than one hour.
2) Voltage per battery cell is held at the specified range from 2.5 to 2.8 volts for more than one hour.

2. STATE OF CHARGE CHECK USING A HYDROMETER

Hydrometer indicator	State of charge	Corrective action
Green dot	Above 65%	Load test
Dark dot	Below 65%	Charge battery
Clear dot	Low electrolyte	Replace battery* (If cranking is difficult)
*: Check electrical system before replacement.		

3. NORMAL CHARGING

Charge the battery at current value specified by manufacturer or at approx. 1/10 of the battery's ampere-hour rating.

4. QUICK CHARGING

Quick charging is a method in which the battery is charged in a short period of time with a relatively large current by using a quick charger.
Since a large current flow raises electrolyte temperature, the battery is subject to damage if large current is used for prolonged time. For this reason, the quick charging must be carried out within a current range that will not increase the electrolyte temperature above 40°C (104°F).
It should be also remembered that the quick charging is a temporary means to bring battery voltage up to a fair value and, as a rule, a battery should be charged slowly with a low current.

CAUTION:
• Observe the items in 3. NORMAL CHARGING.
• Never use more than 10 amperes when charging the battery because that will shorten battery life.

ENGINE (DIAGNOSTICS)

EN(H4SO)

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	4
3.	General Description	6
4.	Electrical Components Location	9
5.	Engine Control Module (ECM) I/O Signal	23
6.	Engine Condition Data	26
7.	Transmission Control Module (TCM) I/O Signal	27
8.	Data Link Connector	28
9.	OBD-II General Scan Tool	29
10.	Subaru Select Monitor	31
11.	Read Diagnostic Trouble Code (DTC)	38
12.	Inspection Mode	39
13.	Drive Cycle	44
14.	Clear Memory Mode	46
15.	Compulsory Valve Operation Check Mode	47
16.	Malfunction indicator light	49
17.	Diagnostics for Engine Starting Failure	58
18.	List of Diagnostic Trouble Code (DTC)	73
19.	Diagnostic Procedure with Diagnostic Trouble Code (DTC)	79
20.	General Diagnostic Table	260

1. Basic Diagnostic Procedure

A: PROCEDURE

1. ENGINE

	Step	Check	Yes	No
1	**CHECK ENGINE START FAILURE.** 1)Ask the customer when and how the trouble occurred using the check list for interview. <Ref. to EN(H4SO)-4, CHECK, Check List for Interview.> 2)Start the engine.	Does the engine start?	Go to step **2.**	Inspection using "Diagnostics for Engine Start Failure". <Ref. to EN(H4SO)-58, Diagnostics for Engine Starting Failure.>
2	**CHECK ILLUMINATION OF MALFUNCTION INDICATOR LIGHT.**	Does malfunction indicator light illuminate?	Go to step **3.**	Inspection using "General Diagnostics Table". <Ref. to EN(H4SO)-260, INSPECTION, General Diagnostic Table.>
3	**CHECK INDICATION OF DTC ON DISPLAY.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor or the OBD-II general scan tool to data link connector. 3)Turn the ignition switch to ON and the Subaru Select Monitor or OBD-II general scan tool switch to ON. 4)Read the DTC on the Subaru Select Monitor or OBD-II general scan tool.	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC?	Record the DTC. Repair the trouble cause. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> Go to step **4.**	Repair the related parts. NOTE: If DTC is not shown on display although the malfunction indicator light illuminates, perform diagnostics of malfunction indicator light circuit or combination meter. <Ref. to EN(H4SO)-49, Malfunction indicator light.>
4	**PERFORM THE DIAGNOSIS.** 1)Perform the clear memory mode. <Ref. to EN(H4SO)-46, Clear Memory Mode.> 2)Perform the inspection mode. <Ref. to EN(H4SO)-39, Inspection Mode.>	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC?	Inspect using "Diagnostics Procedure with Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-79, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Complete the diagnosis.

2. AUTOMATIC TRANSMISSION

When the DTC about automatic transmission is shown on display, carry out the following basic check. After that, carry out the replacement or repair work.

1) ATF level check <Ref. to 4AT-31, Automatic Transmission Fluid.>
2) Differential gear oil level check <Ref. to 4AT-32, Differential Gear Oil.>
3) ATF leak check <Ref. to 4AT-31, Automatic Transmission Fluid.>
4) Differential gear oil leak check <Ref. to 4AT-32, Differential Gear Oil.>
5) Stall test <Ref. to 4AT-34, Stall Test.>
6) Line pressure test <Ref. to 4AT-37, Line Pressure Test.>
7) Transfer clutch pressure test <Ref. to 4AT-38, Transfer Clutch Pressure Test.>
8) Time lag test <Ref. to 4AT-36, Time Lag Test.>
9) Road test <Ref. to 4AT-33, Road Test.>
10) Shift characteristics <Ref. to 4AT-38, Transfer Clutch Pressure Test.>

2. Check List for Interview

A: CHECK

1. CHECK LIST NO. 1

Check the following items when problem has occurred.

NOTE:
Use copies of this page for interviewing customers.

Customer's name		Engine No.	
Date of sale		Fuel brand	
Date of repair		Odometer reading	km
VIN No.			miles
Weather	❑ Fine ❑ Cloudy ❑ Rainy ❑ Snowy ❑ Various/Others:		
Outdoor temperature	°C (°F)		
	❑ Hot ❑ Warm ❑ Cool ❑ Cold		
Place	❑ Highway ❑ Suburbs ❑ Inner city ❑ Uphill ❑ Downhill ❑ Rough road ❑ Others:		
Engine temperature	❑ Cold ❑ Warming-up ❑ After warming-up ❑ Any temperature ❑ Others:		
Engine speed	rpm		
Vehicle speed	km/h (MPH)		
Driving conditions	❑ Not affected ❑ At starting ❑ While idling ❑ At racing ❑ While accelerating ❑ While cruising ❑ While decelerating ❑ While turning (RH/LH)		
Headlight	❑ ON/❑ OFF	Rear defogger	❑ ON/❑ OFF
Blower	❑ ON/❑ OFF	Radio	❑ ON/❑ OFF
A/C compressor	❑ ON/❑ OFF	CD/Cassette	❑ ON/❑ OFF
Radiator fan	❑ ON/❑ OFF	Car phone	❑ ON/❑ OFF
Front wiper	❑ ON/❑ OFF	CB	❑ ON/❑ OFF
Rear wiper	❑ ON/❑ OFF		

2. CHECK LIST NO. 2

Check the following items about the vehicle's state when malfunction indicator light turns on.

NOTE:
Use copies of this page for interviewing customers.

a) Other warning lights or indicators turn on. ❑ Yes/❑ No
❑ Low fuel warning light ❑ Charge indicator light ❑ AT diagnostics indicator light ❑ ABS warning light ❑ Engine oil pressure warning light
b) Fuel level
• Lack of gasoline: ❑ Yes/❑ No • Indicator position of fuel gauge:
c) Intentional connecting or disconnecting of harness connectors or spark plug cords: ❑ Yes/❑ No
• What:
d) Intentional connecting or disconnecting of hoses: ❑ Yes/❑ No
• What:
e) Installing of parts other than genuine parts: ❑ Yes/❑ No
• What: • Where:
f) Occurrence of noise: ❑ Yes/❑ No
• From where: • What kind:
g) Occurrence of smell: ❑ Yes/❑ No
• From where: • What kind:
h) Intrusion of water into engine compartment or passenger compartment: ❑ Yes/❑ No
i) Troubles occurred
❑ Engine does not start. ❑ Engine stalls during idling. ❑ Engine stalls while driving. ❑ Engine speed decreases. ❑ Engine speed does not decrease. ❑ Rough idling ❑ Poor acceleration ❑ Back fire ❑ After fire ❑ No shift ❑ Excessive shift shock

3. General Description

A: CAUTION

1) Airbag system wiring harness is routed near the ECM, main relay and fuel pump relay.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
• Be careful not to damage the airbag system wiring harness when servicing the ECM, TCM, main relay and fuel pump relay.

2) Never connect the battery in reverse polarity.
• The ECM will be destroyed instantly.
• The fuel injector and other part will be damaged in just a few minutes more.

3) Do not disconnect the battery terminals while the engine is running.
• A large counter electromotive force will be generated in the generator, and this voltage may damage electronic parts such as ECM, etc.

4) Before disconnecting the connectors of each sensor and the ECM, be sure to turn OFF the ignition switch.

5) Poor contact has been identified as a primary cause of this problem. To measure the voltage and/or resistance of individual sensors or all electrical control modules at the harness side connector, use a tapered pin with a diameter of less than 0.64 mm (0.025 in). Do not insert the pin more than 5 mm (0.20 in) into the part.

6) Before removing the ECM from the located position, disconnect two cables on battery.
• Otherwise, the ECM may be damaged.

CAUTION:
When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on fuel injection system.

7) The connectors to each sensor in the engine compartment and the harness connectors on the engine side and body side are all designed to be waterproof. However, it is still necessary to take care not to allow water to get into the connectors when washing the vehicle, or when servicing the vehicle on a rainy day.

8) Use ECM mounting stud bolts at the body side grounding point when measuring voltage and resistance inside the passenger compartment.

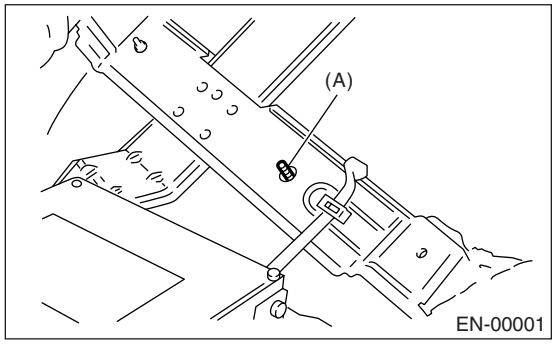

(A) Stud bolt

9) Use engine grounding terminal or engine proper as the grounding point to the body when measuring voltage and resistance in the engine compartment.

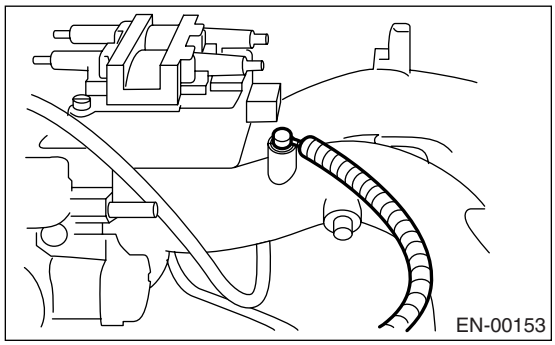

10) Use TCM mounting stud bolts at the body side grounding point when measuring voltage and resistance inside the passenger compartment.

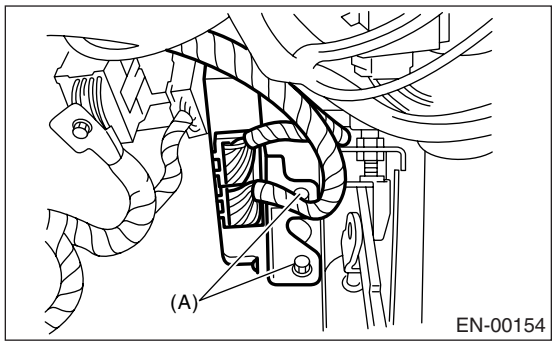

(A) Stud bolt

11) Every MFI-related part is a precision part. Do not drop them.

12) Observe the following cautions when installing a radio in MFI equipped models.

CAUTION:
• The antenna must be kept as far apart as possible from the control unit. (The ECM is located under the steering column, inside of the instrument panel lower trim panel.)
• The antenna feeder must be placed as far apart as possible from the ECM and MFI harness.
• Carefully adjust the antenna for correct matching.
• When mounting a large power type radio, pay special attention to the three items above mentioned.
• Incorrect installation of the radio may affect the operation of the ECM.

13) Before disconnecting the fuel hose, disconnect the fuel pump connector and crank the engine for more than five seconds to release pressure in the fuel system. If engine starts during this operation, run it until it stops.
14) Problems in the electronic-controlled automatic transmission may be caused by failure of the engine, the electronic control system, the transmission proper, or by a combination of these. These three causes must be distinguished clearly when performing diagnostics.
15) Diagnostics should be conducted by rotating with simple, easy operations and proceeding to complicated, difficult operations. The most important thing in diagnostics is to understand the customer's complaint, and distinguish between the three causes.
16) In AT models, do not continue the stall for more than five seconds at a time (from closed throttle, fully open throttle to stall engine speed).
17) On models with ABS, when performing driving test in jacked-up or lifted-up position, sometimes the warning light may be lit, but this is not a malfunction of the system. The reason for this is the speed difference between the front and rear wheels. After diagnosis of engine control system, perform the ABS memory clearance procedure of self-diagnosis system.

B: INSPECTION

Before performing diagnostics, check the following items which might affect engine problems:

1. BATTERY

1) Measure battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

2) Check the condition of the main and other fuses, and harnesses and connectors. Also check for proper grounding.

2. ENGINE GROUNDING

Make sure the engine grounding terminal is properly connected to the engine.

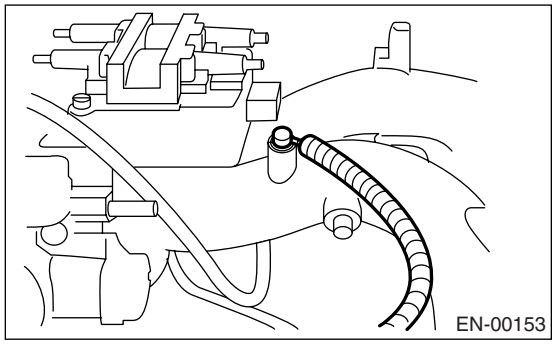

C: NOTE

1. DESCRIPTION

• The on-board diagnostics (OBD) system detects and indicates a fault in various inputs and outputs of the complex electronic control. Malfunction indicator light in the combination meter indicates occurrence of a fault or trouble.
• Further, against such a failure or sensors as may disable the drive, the fail-safe function is provided to ensure the minimal driveability.
• The OBD system incorporated with the vehicles within this engine family complies with Section 1968.1, California Code of Regulations (OBD-II regulation). The OBD system monitors the components and the system malfunction listed in Engine Section which affects on emissions.
• When the system decides that a malfunction occurs, malfunction indicator light illuminates. At the same time of the malfunction indicator light illumination or blinking, a DTC and a freeze frame engine conditions are stored into on-board computer.
• The OBD system stores freeze frame engine condition data (engine load, engine coolant temperature, fuel trim, engine speed and vehicle speed, etc.) into on-board computer when it detects a malfunction first.
• If the OBD system detects the various malfunctions including the fault of fuel trim or misfire, the OBD system first stores freeze frame engine conditions about the fuel trim or misfire.
• When the malfunction does not occur again for three consecutive driving cycles, malfunction indicator light is turned off, but DTC remains at on-board computer.
• The OBD-II system is capable of communication with a general scan tool (OBD-II general scan tool) formed by ISO 9141 CARB.

• The OBD-II diagnostics procedure is different from the usual diagnostics procedure. When troubleshooting the models with OBD-II, connect Subaru Select Monitor or the OBD-II general scan tool to the vehicle.

2. ENGINE AND EMISSION CONTROL SYSTEM

• The Multipoint Fuel Injection (MFI) system is a system that supplies the optimum air-fuel mixture to the engine for all the various operating conditions through the use of the latest electronic technology.
With this system fuel, which is pressurized at a constant pressure, is injected into the intake air passage of the cylinder head. The injection quantity of fuel is controlled by an intermittent injection system where the electro-magnetic injection valve (fuel injector) opens only for a short period of time, depending on the quantity of air required for one cycle of operation. In actual operation, the injection quantity is determined by the duration of an electric pulse applied to the fuel injector and this permits simple, yet highly precise metering of the fuel.
• Further, all the operating conditions of the engine are converted into electric signals, and this results in additional features of the system, such as large improved adaptability, easier addition of compensating element, etc.
The MFI system also has the following features:
• Reduced emission of harmful exhaust gases.
• Reduction in fuel consumption.
• Increased engine output.
• Superior acceleration and deceleration.
• Superior startability and warm-up performance in cold weather since compensation is made for coolant and intake air temperature.

3. AUTOMATIC TRANSMISSION AND ELECTRONIC-HYDRAULIC CONTROL SYSTEM

The electronic-hydraulic control system consists of various sensors and switches, the TCM and the hydraulic controller including solenoid valves. The system controls the transmission proper including shift control, lock-up control, overrunning clutch control, line pressure control and shift timing control. It also controls the AWD transfer clutch. In other words, the system detects various operating conditions from various input signals and sends output signals to shift solenoids 1, 2 and low clutch timing solenoid and 2-4 brake timing solenoid, line pressure duty solenoid, lock-up duty solenoid, transfer duty solenoid and 2-4 brake duty solenoid (a total of eight solenoids).

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
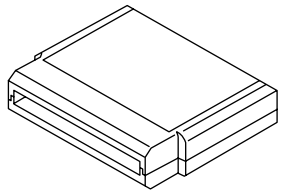 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

4. Electrical Components Location

A: LOCATION

1. ENGINE

• MODULE

LHD

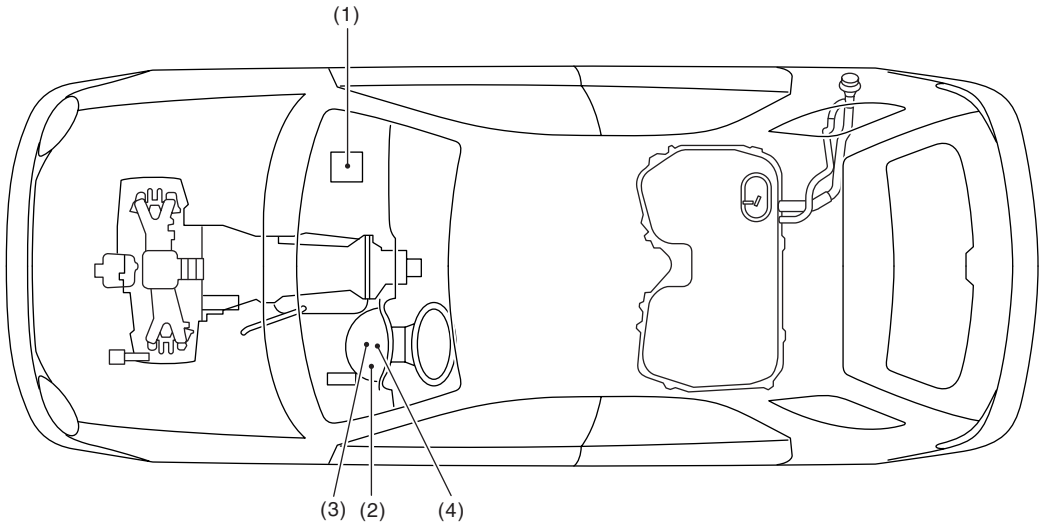

EN-01397

RHD

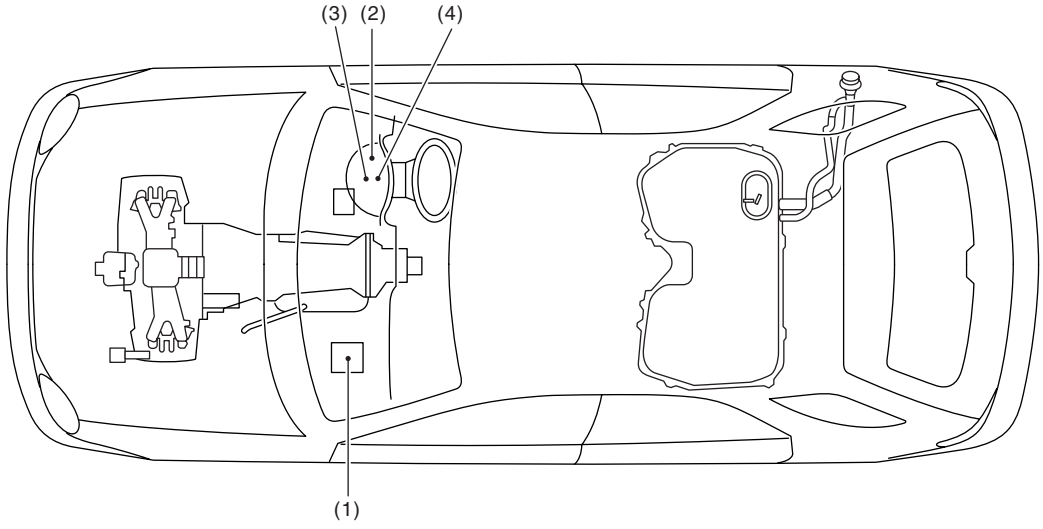

EN-01398

(1) Engine control module (ECM)
(2) Malfunction indicator light
(3) Test mode connector
(4) Data link connector

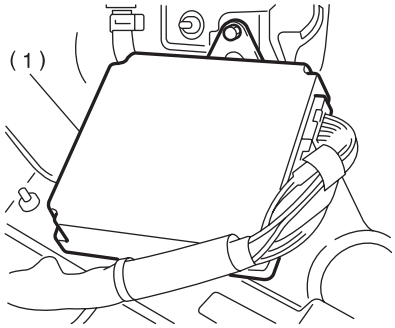

EN-00156

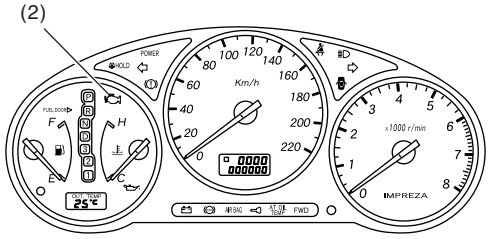

EN-01399

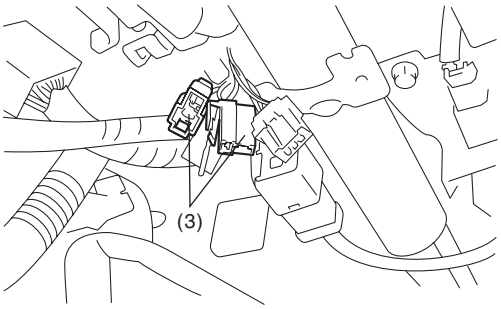

EN-01149

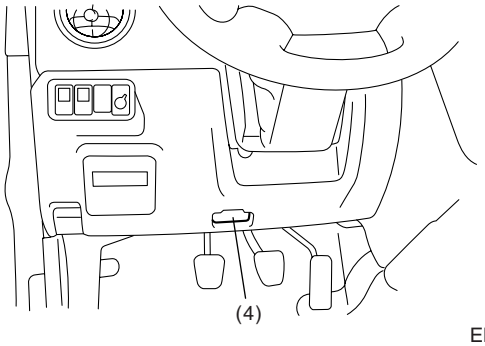

EN-01150

• SENSOR

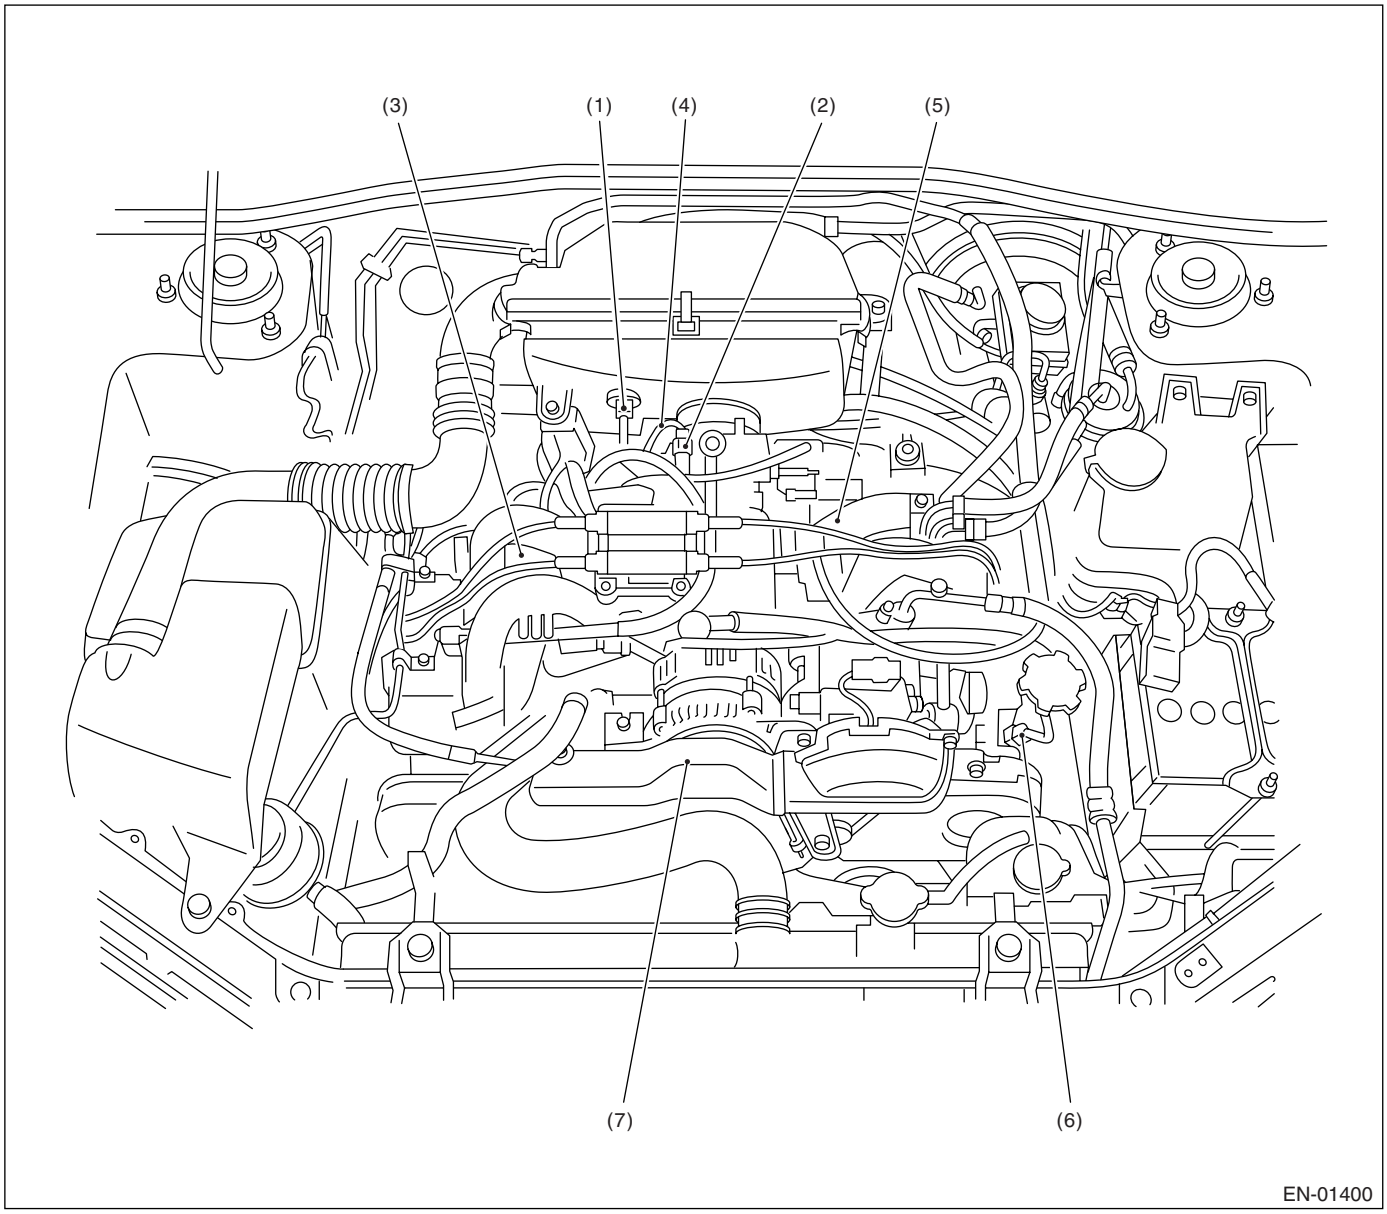

(1) Intake air temperature sensor
(2) Manifold absolute pressure sensor
(3) Engine coolant temperature sensor
(4) Throttle position sensor
(5) Knock sensor
(6) Camshaft position sensor
(7) Crankshaft position sensor

EN-00006

EN-00160

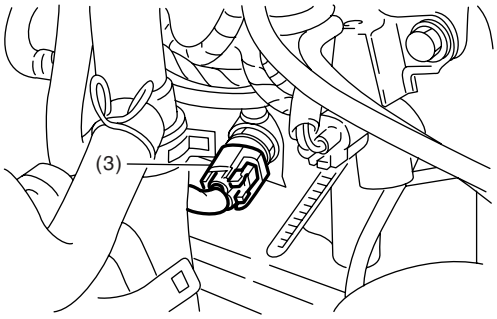

EN-00008

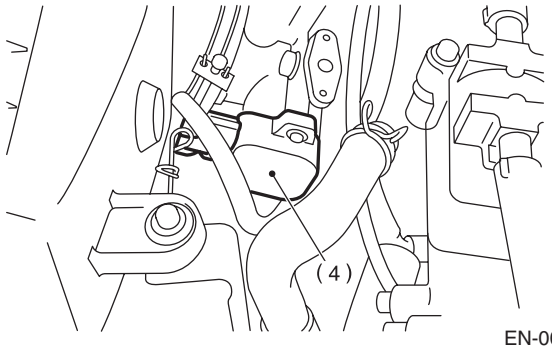

EN-00161

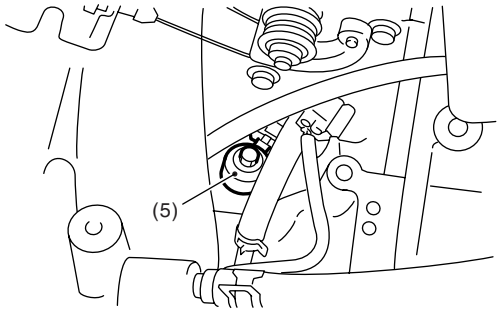

EN-00010

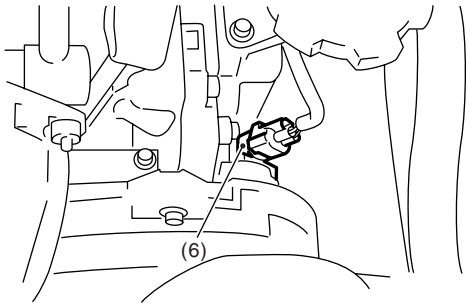

EN-00011

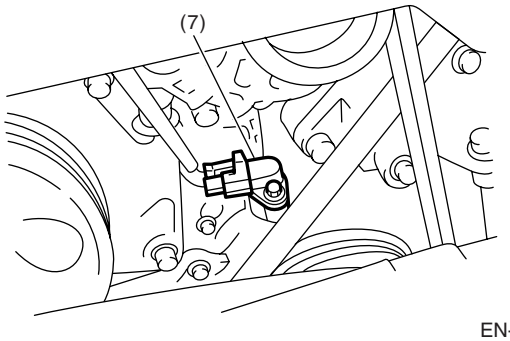

EN-00012

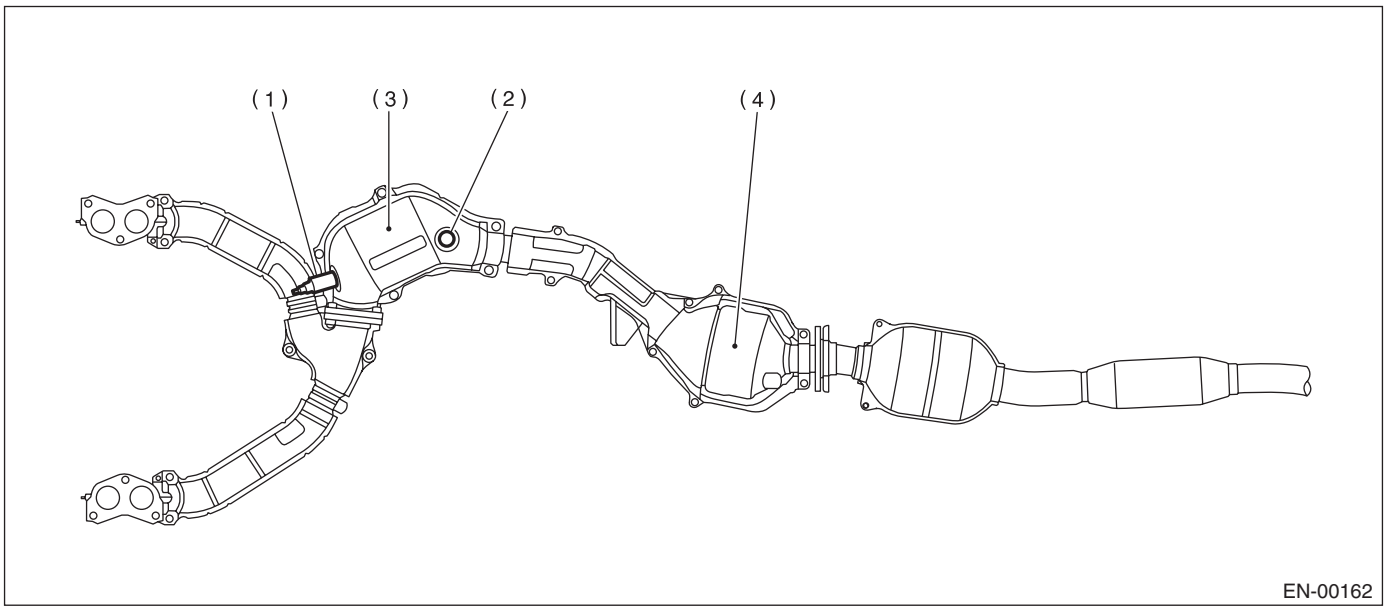

(1) Front oxygen (A/F) sensor
(2) Rear oxygen sensor
(3) Front catalytic converter
(4) Rear catalytic converter

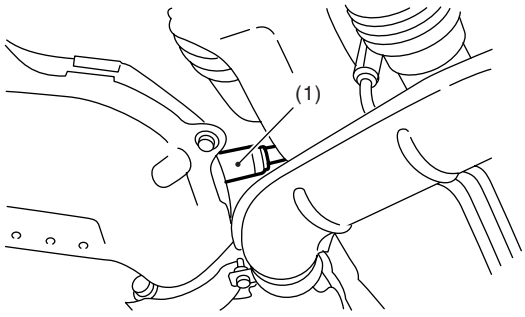

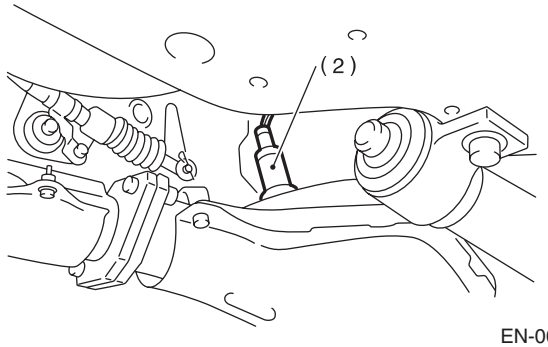

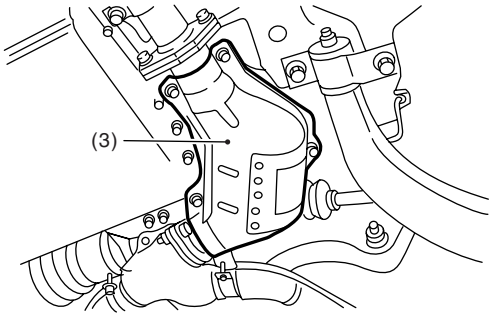

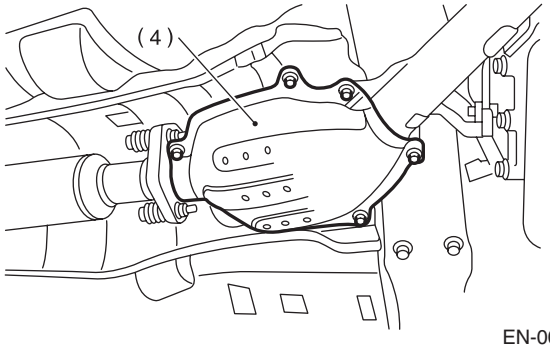

LHD

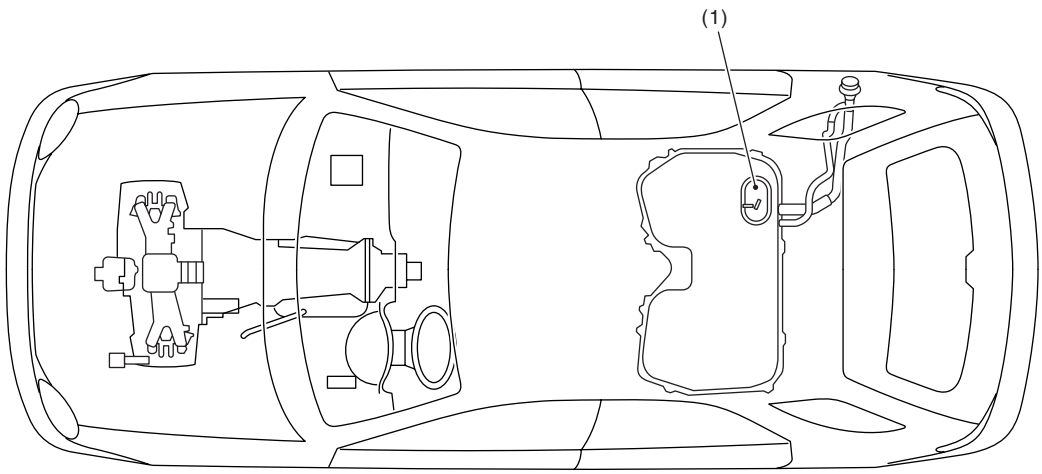

EN-01401

RHD

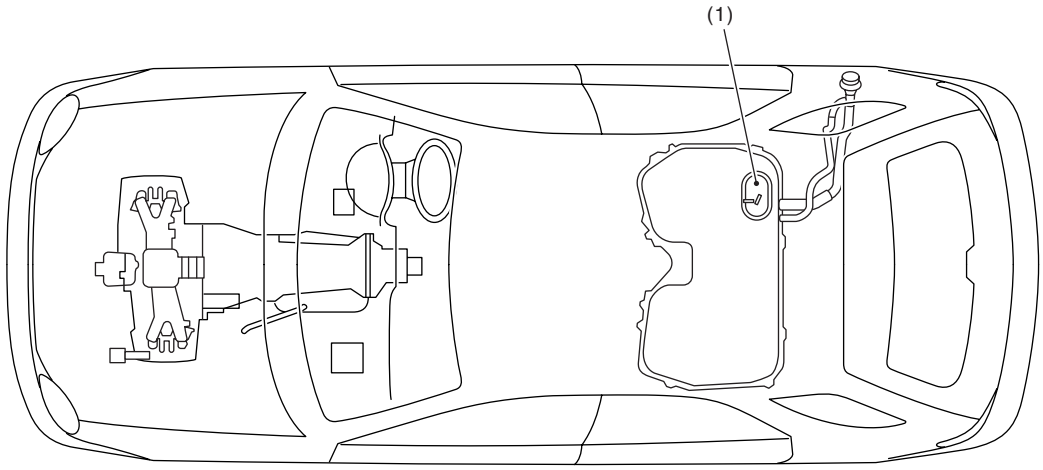

EN-01402

(1) Fuel level sensor

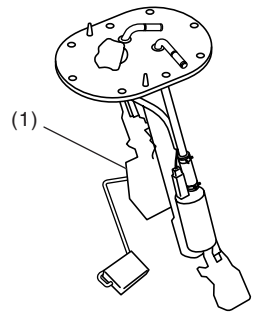

EN-01403

• SOLENOID VALVE, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS

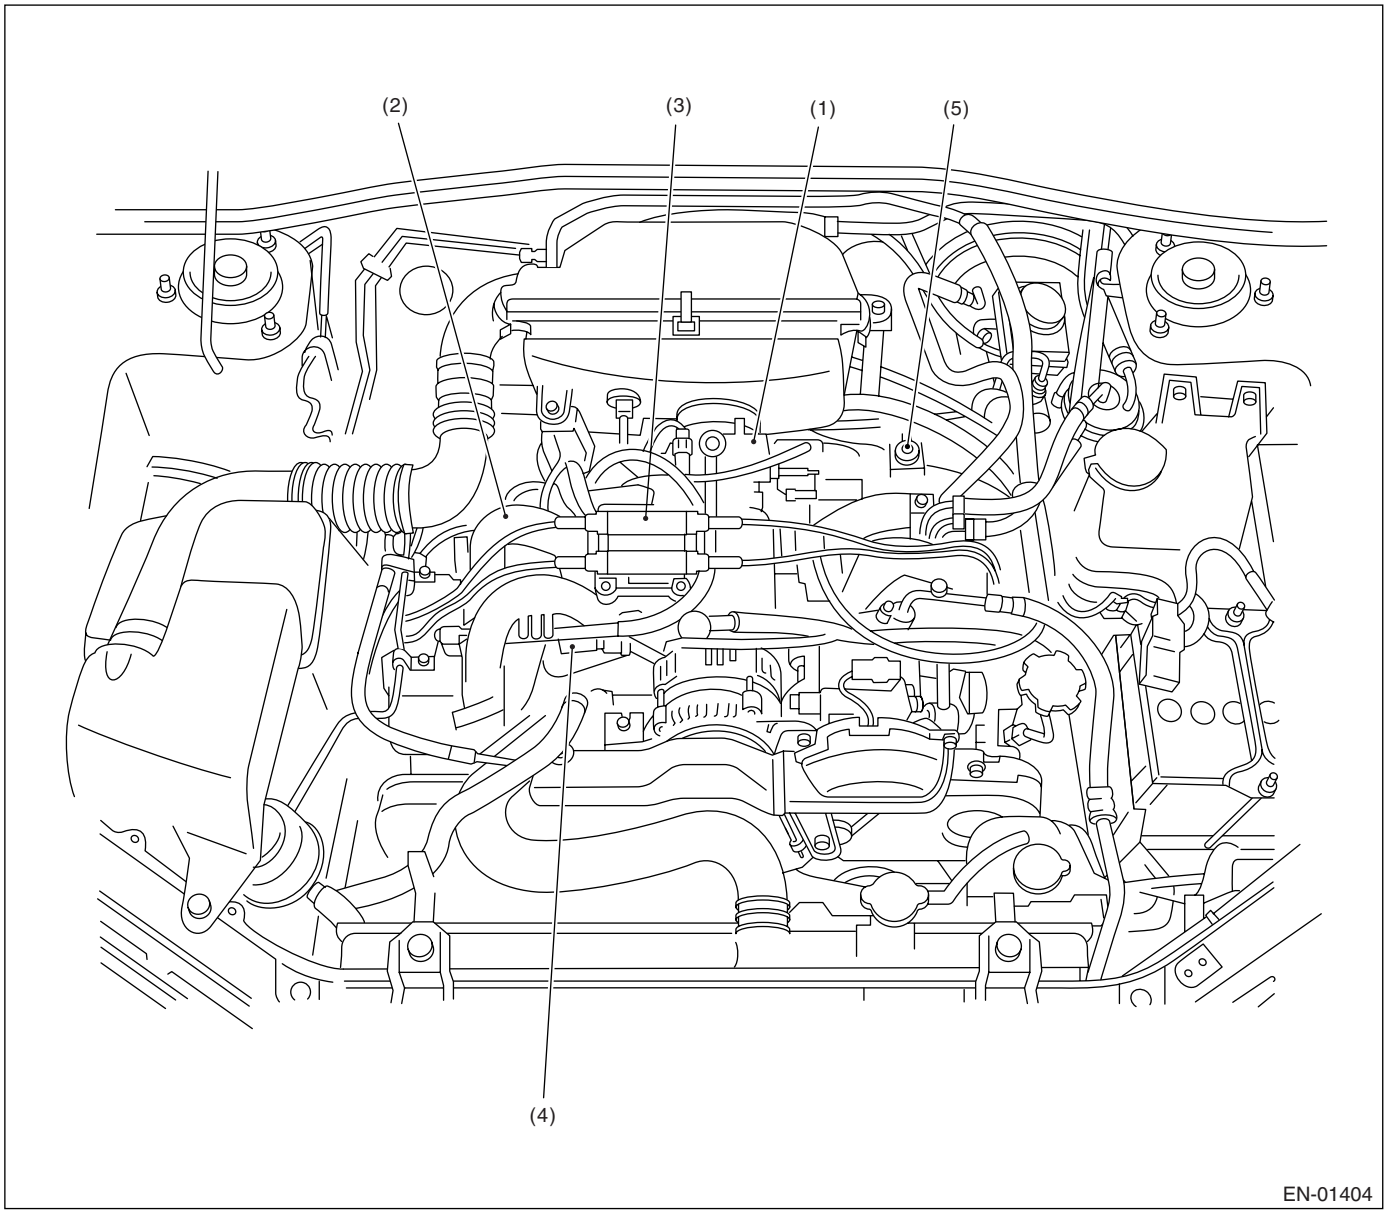

(1) Idle air control solenoid valve
(2) Purge control solenoid valve
(3) Ignition coil & ignitor ASSY
(4) Air assisted injector solenoid valve (1.6 L model)
(5) EGR valve

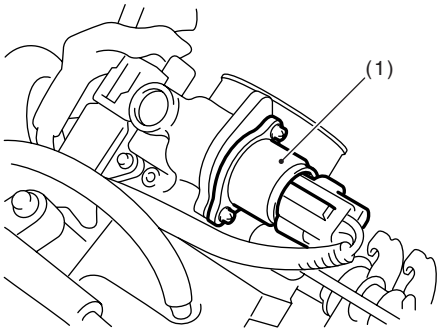

EN-00249

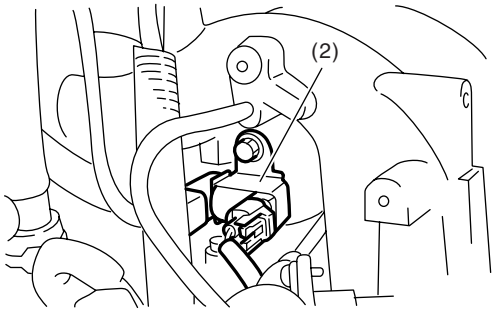

EN-00250

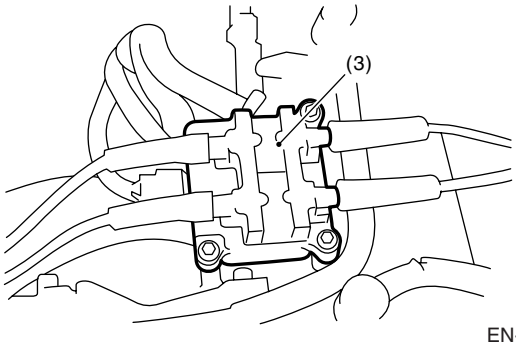

EN-00251

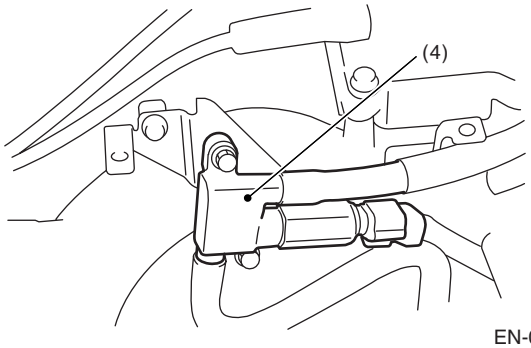

EN-01595

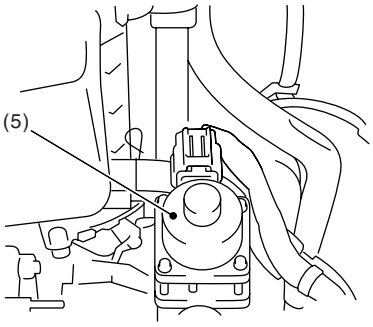

EN-01590

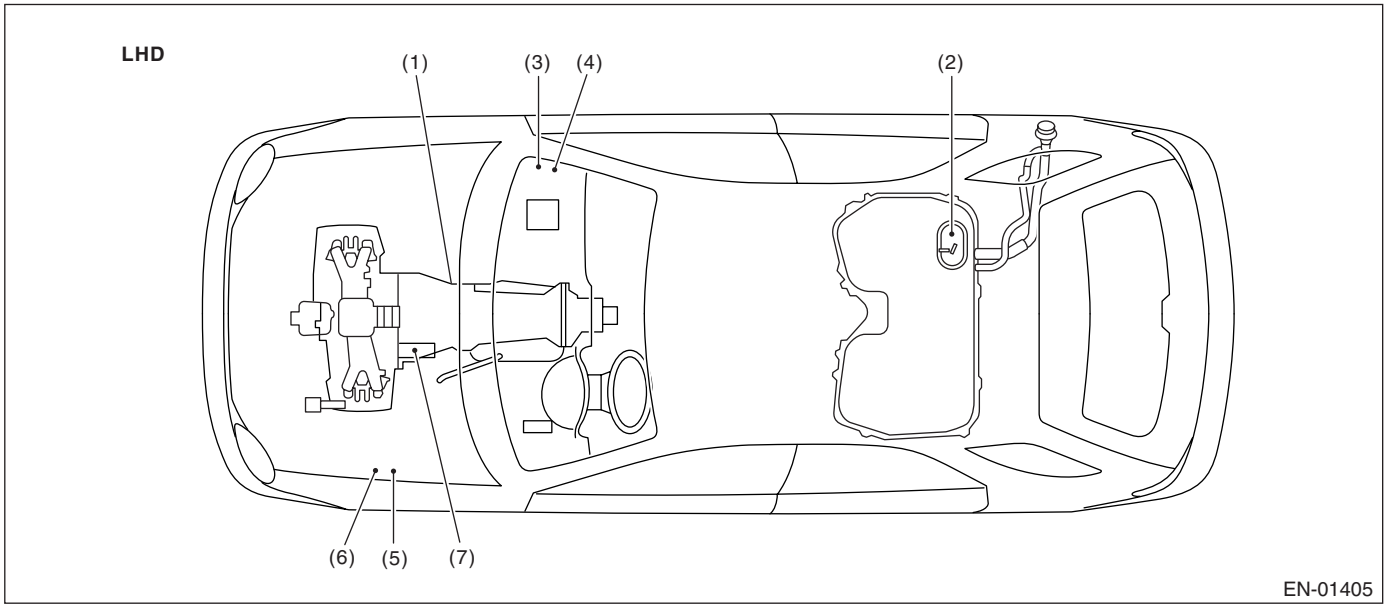

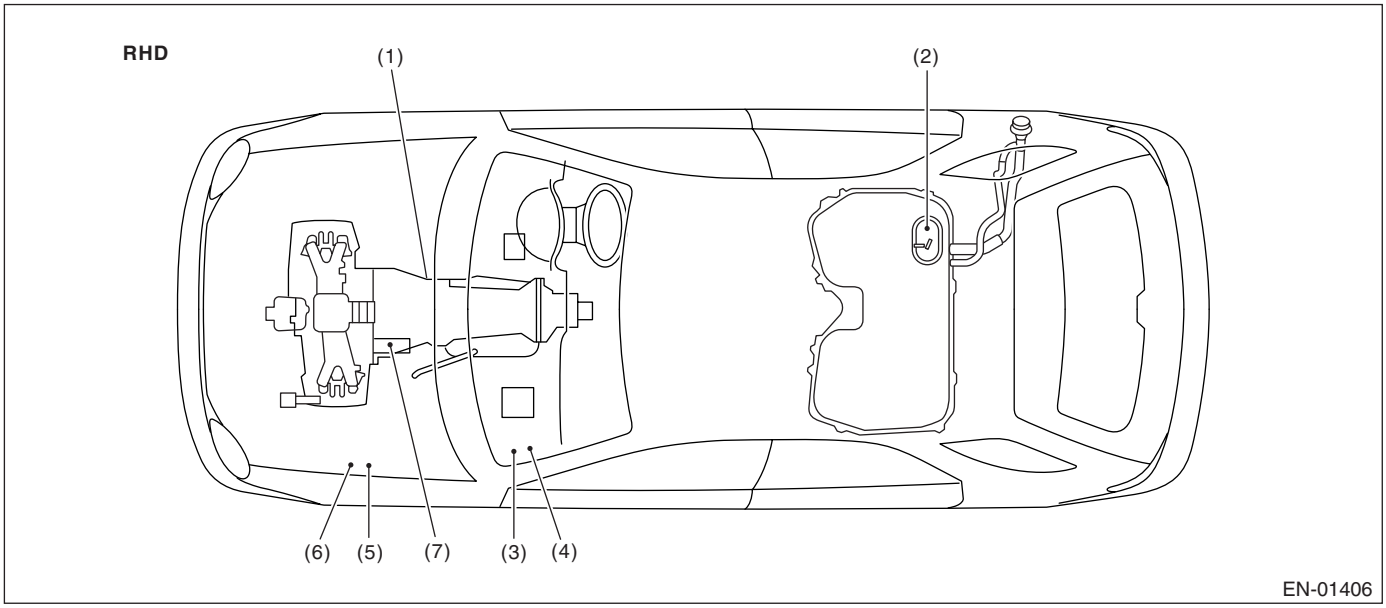

(1) Inhibitor switch
(2) Fuel pump
(3) Main relay
(4) Fuel pump relay
(5) Radiator main fan relay
(6) Radiator sub fan relay
(7) Starter

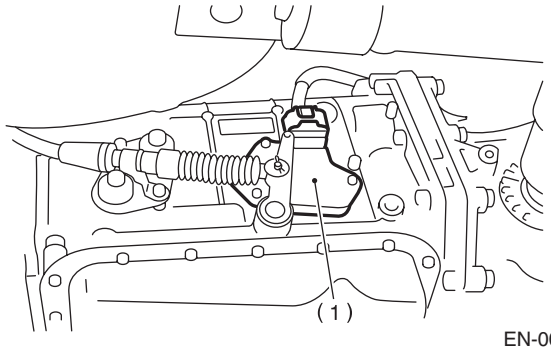

EN-00178

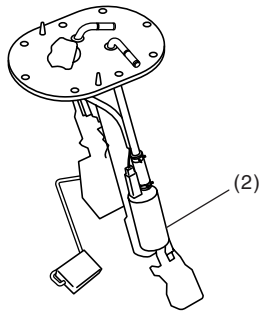

EN-01407

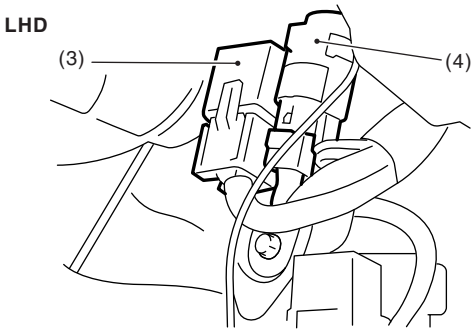

EN-01408

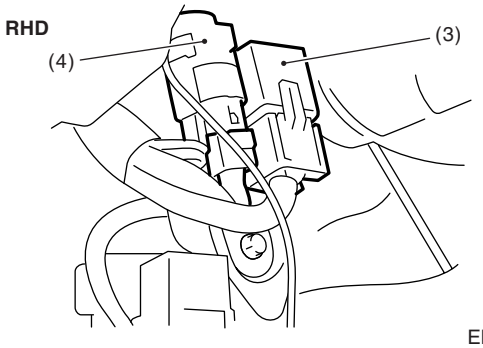

EN-01409

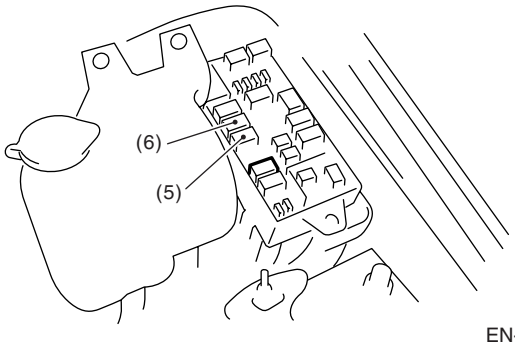

EN-00180

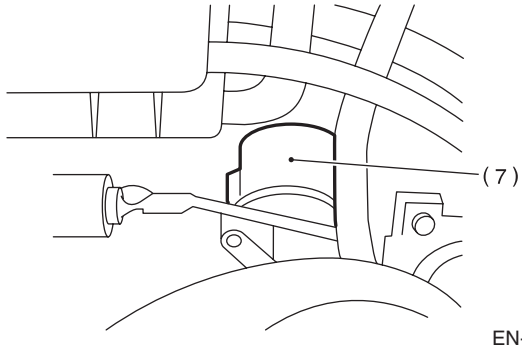

EN-00181

2. TRANSMISSION

• MODULE

LHD

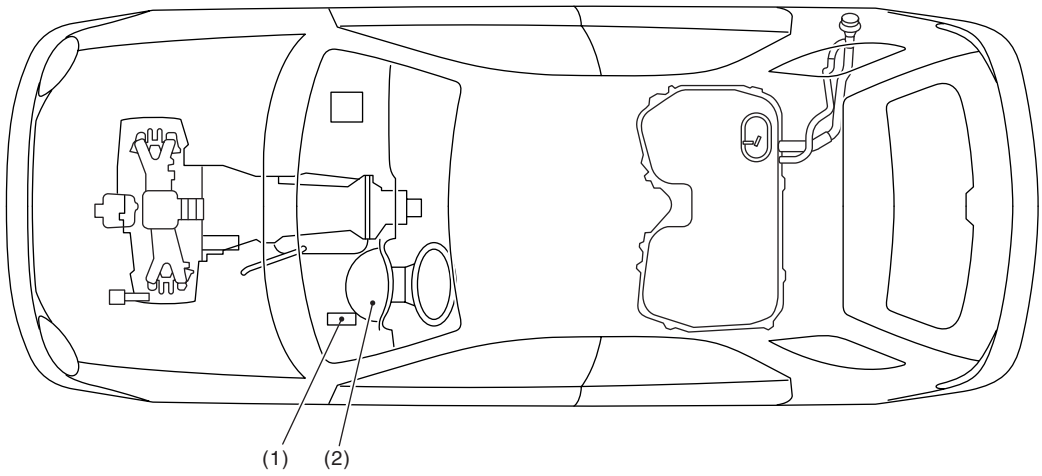

EN-01410

RHD

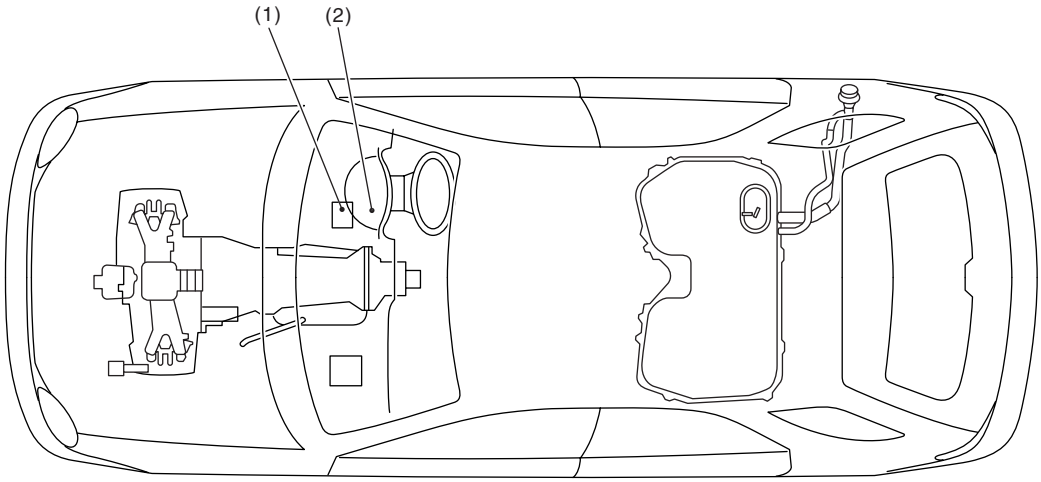

EN-01411

(1) Transmission control module (TCM) (AT model)

(2) AT diagnostic indicator light (AT model)

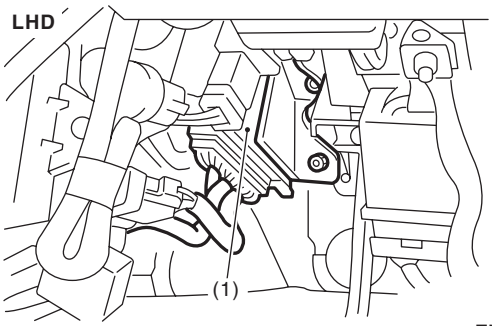

EN-01412

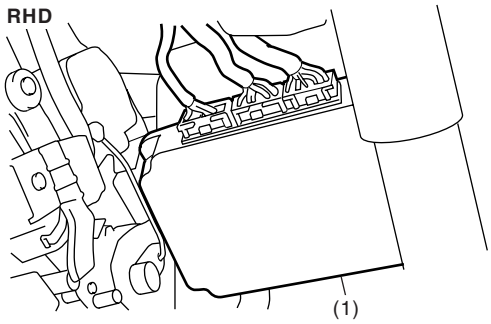

EN-01413

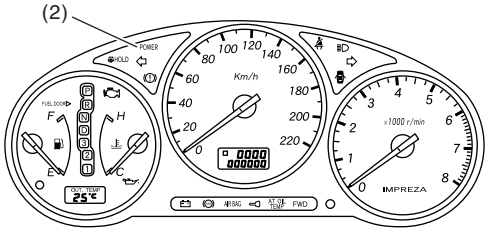

EN-01414

• SENSOR

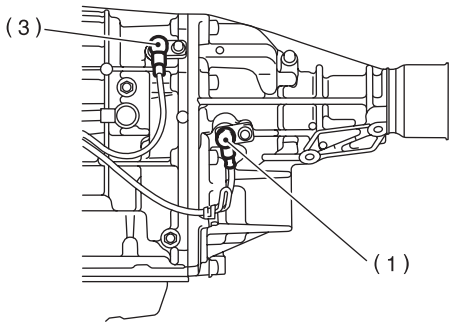

EN-00184

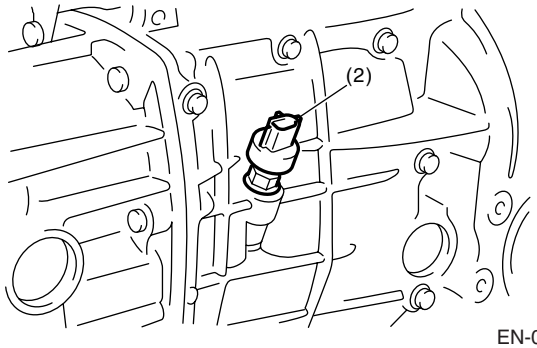

EN-00107

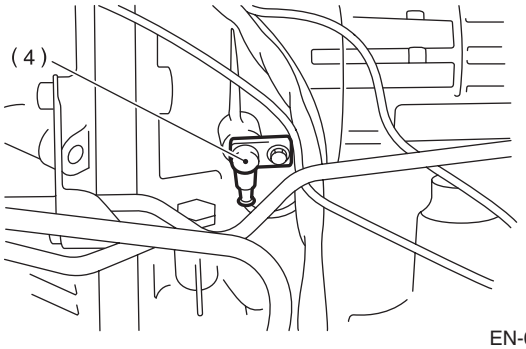

EN-00186

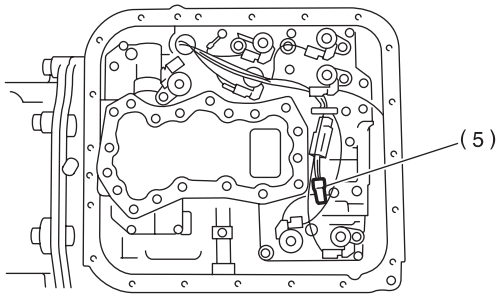

EN-00187

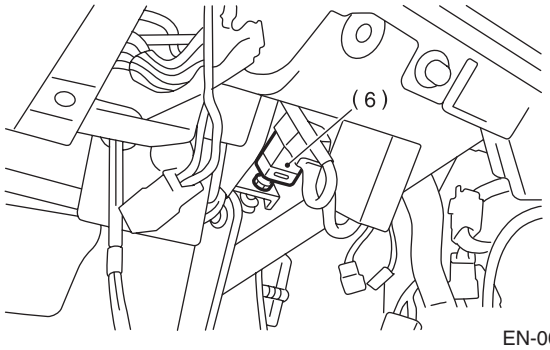

EN-00188

(1) Rear vehicle speed sensor (AT model)
(2) Front vehicle speed sensor (MT model)
(3) Front vehicle speed sensor (AT model)
(4) Torque converter turbine speed sensor
(5) ATF temperature sensor (AT model)
(6) Brake light switch

• SOLENOID VALVE AND SWITCH (AT MODELS)

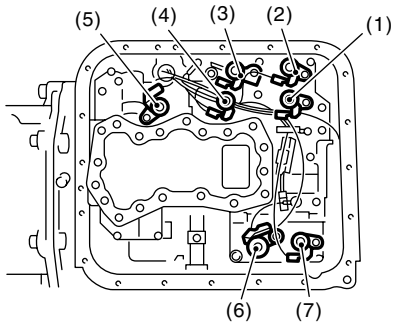

AT-00334

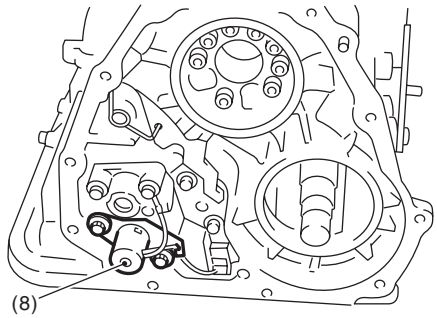

AT-00335

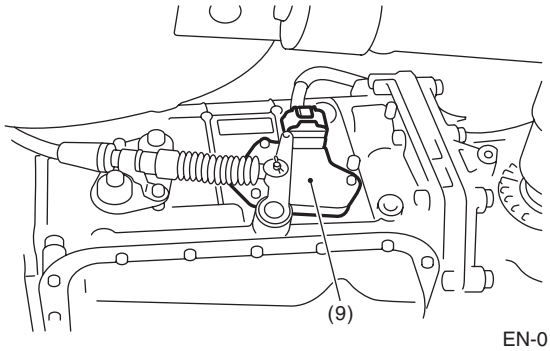

EN-01415

SUBARU.

(1) Shift solenoid valve 1
(2) Shift solenoid valve 2
(3) Line pressure duty solenoid
(4) Low clutch timing solenoid
(5) Lock up duty solenoid
(6) 2-4 brake duty solenoid
(7) 2-4 brake timing solenoid
(8) Transfer duty solenoid
(9) Inhibitor switch

• SOLENOID VALVE AND SWITCH (MT MODELS)

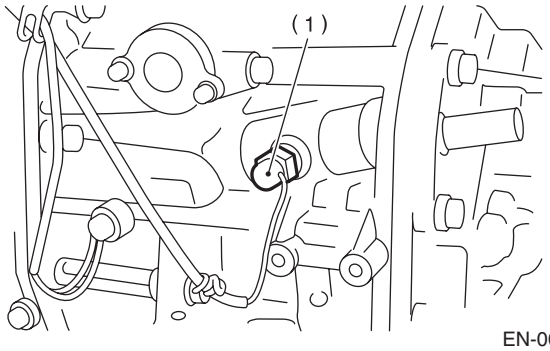

EN-00192

SUBARU.

(1) Neutral position switch

5. Engine Control Module (ECM) I/O Signal

A: ELECTRICAL SPECIFICATION

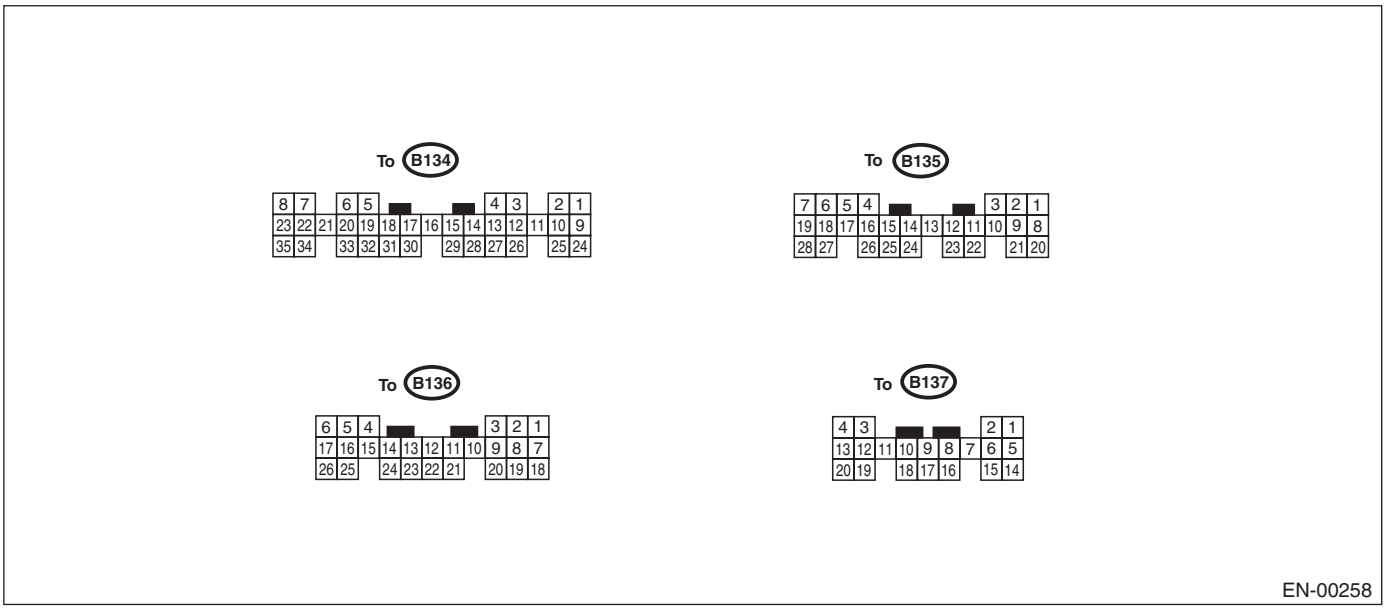

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	6 5*	0	−7 to +7	Sensor output waveform
	Signal (−)	B135	17	0	0	—
	Shield	B135	28	0	0	—
Camshaft position sensor	Signal (+)	B135	7 6*	0	−7 to +7	Sensor output waveform
	Signal (−)	B135	18	0	0	—
	Shield	B135	28	0	0	—
Throttle position sensor	Signal	B135	13	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	3	5	5	—
	GND (sensor)	B135	19	0	0	—
Rear oxygen sensor	Signal	B135	14	0	0 — 0.9	—
	Shield	B137	15	0	0	—
	GND (sensor)	B135	19	0	0	—
Front oxygen (A/F) sensor heater	Signal 1	B136	6	0 — 1.0	0 — 1.0	—
	Signal 2	B136	17	0 — 1.0	0 — 1.0	—
Rear oxygen sensor heater signal		B136	4	0 — 1.0	0 — 1.0	—
Engine coolant temperature sensor	Signal	B135	12	1.0 — 1.4	1.0 — 1.4	After warm-up the engine.
	GND (sensor)	B135	19	0	0	After warm-up the engine.
Vehicle speed signal		B137	10	0 or 5	0 or 5	“5” and “0” are repeatedly displayed when vehicle is driven.
Starter switch		B136	20	0	0	Cranking: 8 — 14

ENGINE CONTROL MODULE (ECM) I/O SIGNAL

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
A/C switch		B136	11	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Ignition switch		B136	10	10 — 13	13 — 14	—
Neutral position switch	MT	B136	21	ON: 12±0.5 OFF: 0		Switch is ON when gear is in neutral position.
	AT	B136	21	ON: 0 OFF: 12±0.5		Switch is ON when shift is in “N” or “P” position.
Test mode connector		B136	3	5	5	When connected: 0
Knock sensor	Signal	B135	16	2.8	2.8	—
	Shield	B135	27	0	0	—
Back-up power supply		B135	9	10 — 13	13 — 14	Ignition switch “OFF”: 10 — 13
Control unit power supply		B135	1	10 — 13	13 — 14	—
		B135	2	10 — 13	13 — 14	—
Sensor power supply		B135	3	5	5	—
Ignition control	#1, #2	B134	33	0	1 — 3.4	Waveform
	#3, #4	B134	32	0	1 — 3.4	Waveform
Fuel injector	#1	B134	34	10 — 13	1 — 14	Waveform
	#2	B134	23	10 — 13	1 — 14	Waveform
	#3	B134	22	10 — 13	1 — 14	Waveform
	#4	B134	8	10 — 13	1 — 14	Waveform
Idle air control solenoid valve	Signal 1	B134	20	—	1 — 13	Waveform
	Signal 2	B134	6	—	1 — 13	Waveform
	Signal 3	B134	5	—	1 — 13	Waveform
	Signal 4	B134	19	—	1 — 13	Waveform
	Power supply	B135	2	10 — 13	13 — 14	—
Fuel pump relay control		B134	2	ON: 0.5, or less OFF: 10 — 13	0.5, or less	—
A/C relay control		B134	9	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—
Radiator fan relay 1 control		B134	14	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—
Radiator fan relay 2 control		B134	13	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	Models with A/C
Self-shutoff control		B136	12	10 — 13	13 — 14	—
Malfunction indicator light		B134	28	—	—	Light “ON”: 1, or less Light “OFF”: 10 — 14
Engine speed output		B134	10	—	0 — 13, or more	Waveform
Torque control 1 signal		B136	1	5	5	—
Torque control 2 signal		B136	18	5	5	—
Torque control cut signal		B136	15	8	8	—
Purge control solenoid valve		B134	29	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—
Fuel level sensor		B135	25	0.12 — 4.75	0.12 — 4.75	—
EGR solenoid valve	Signal 1	B134	18	0 or 10 — 13	0 or 10 — 13	—
	Signal 2	B134	17	0 or 10 — 13	0 or 10 — 13	—
	Signal 3	B134	16	0 or 10 — 13	0 or 10 — 13	—
	Signal 4	B134	15	0 or 10 — 13	0 or 10 — 13	—
AT diagnosis input signal		B137	19	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	Waveform

Content	Connector No.	Terminal No.	Signal (V)		Note
			Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Small light switch	B137	20	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Blower fan switch	B137	13	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Rear defogger switch	B137	4	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Front oxygen (A/F) sensor signal 1	B136	13	—	2.05 — 2.25	—
Front oxygen (A/F) sensor signal 2	B136	22	—	1.75 — 1.95	—
Manifold absolute pressure sensor	B135	15	4.0 — 4.8	1.1 — 1.9	—
Intake air temperature sensor	B137	6	3.15 — 3.33	3.15 — 3.33	Intake air temperature: 25°C (75°F)
Air assisted injector solenoid valve	B134	12	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—
Immobilizer input/output	B137	17	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—
Immobilizer input/output	B137	18	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—
Power steering switch	B136	9	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—
Front wiper signal	B137	11	ON: 0, or 10 — 13 OFF: 0	ON: 0, or 13 — 14 OFF: 0	—
Generator control	B136	25	0 — 6.5	0 — 6.5	—
SSM/GST communication line	B137	16	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—
GND (sensors)	B135	19	0	0	—
GND (injectors)	B134	35	0	0	—
GND (ignition system)	B136	26	0	0	—
GND (power supply)	B134	7	0	0	—
GND (control systems)	B137	14	0	0	—
	B135	21	0	0	—
GND (oxygen sensor heater 1)	B136	5	0	0	—
GND (oxygen sensor heater 2)	B136	16	0	0	—

∗ : Without immobilizer

6. Engine Condition Data

A: ELECTRICAL SPECIFICATION

Content	Specified data
Engine load	1.6 — 2.9 (%): Idling
	6.4 — 12.8 (%): 2,500 rpm racing

Measuring condition:
- After the engine is warmed-up.
- Gear position is in “N” or “P” range.
- A/C is turned OFF.
- All accessory switches are turned OFF.

7. Transmission Control Module (TCM) I/O Signal

A: ELECTRICAL SPECIFICATION

For electrical specification of TCM I/O signal, refer to 4AT section. <Ref. to 4AT-13, ELECTRICAL SPECIFICATION, Transmission Control Module (TCM) I/O Signal.>

8. Data Link Connector

A: NOTE

This connector is used both for OBD-II general scan tools and the Subaru Select Monitor.

CAUTION:
Do not connect any scan tools other than the OBD-II general scan tools and the Subaru Select Monitor, because the circuit for the Subaru Select Monitor may be damaged.

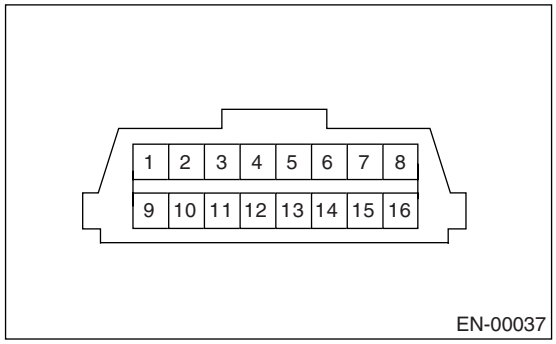

Terminal No.	Contents	Terminal No.	Contents
1	Power supply	9	Blank
2	Blank	10	Subaru Select Monitor signal
3	Blank	11	Blank
4	Blank	12	Ground
5	Blank	13	Ground
6	Test mode check signal 1	14	Blank
7	Blank	15	Blank
8	Test mode check signal 2	16	Blank

9. OBD-II General Scan Tool

A: OPERATION

1. HOW TO USE OBD-II GENERAL SCAN TOOL

1) Prepare a general scan tool (OBD-II general scan tool) required by SAE J1978.
2) Connect the OBD-II general scan tool to data link connector located in the lower portion of the instrument panel (on driver's side).

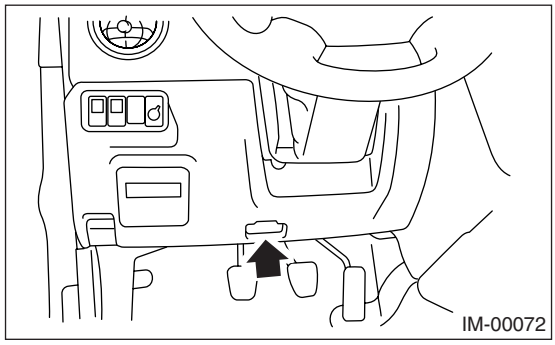

3) Using the OBD-II general scan tool, call up DTC and freeze frame data.
OBD-II general scan tool functions consist of:
(1) MODE $01: Current powertrain diagnostic data
(2) MODE $02: Powertrain freeze frame data
(3) MODE $03: Emission-related powertrain DTC
(4) MODE $04: Clear/Reset emission-related diagnostic information
Read out data according to repair procedures. (For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual.)

NOTE:
For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>

2. MODE $01 (CURRENT POWERTRAIN DIAGNOSTIC DATA)

Refers to data denoting the current operating condition of analog input/output, digital input/output or the powertrain system.
A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
01	Number of emission-related powertrain DTC and malfunction indicator light status	ON/OFF
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim	%
07	Long term fuel trim	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h
0E	Ignition timing advance	°
0F	Intake air temperature	°C
10	Air flow rate from manifold absolute pressure sensor	g/sec
11	Throttle valve opening angle	%
13	Check whether oxygen sensor is installed.	—
15	Oxygen sensor output voltage and short term fuel trim associated with oxygen sensor—bank 1 sensor 2	V and %
1C	On-board diagnosis system	—

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to access generic OBD-II PIDs (MODE $01).

3. MODE $02 (POWERTRAIN FREEZE FRAME DATA)

Refers to data denoting the operating condition when trouble is sensed by on-board diagnosis system.
A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
02	DTC that caused CARB to require freeze frame data storage	—
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim	%
07	Long term fuel trim	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to access freeze frame data (MODE $02).

4. MODE $03 (EMISSION-RELATED POWERTRAIN DIAGNOSTIC TROUBLE CODE (DTC))

Refer to Read Diagnostic Trouble Code (DTC) for information about data denoting emission-related powertrain DTC. <Ref. to EN(H4SO)-38, Read Diagnostic Trouble Code (DTC).>

5. MODE $04 (CLEAR/RESET EMISSION-RELATED DIAGNOSTIC INFORMATION)

Refers to mode used to clear or reset emission-related diagnostic information (OBD-II trouble diagnostic information).

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to clear or reset emission-related diagnostic information (MODE $04).

10.Subaru Select Monitor

A: OPERATION

1. HOW TO USE SUBARU SELECT MONITOR

1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

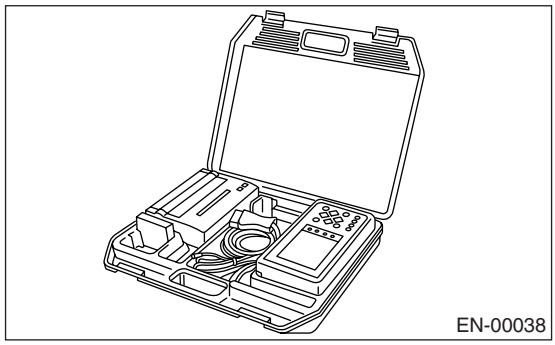

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

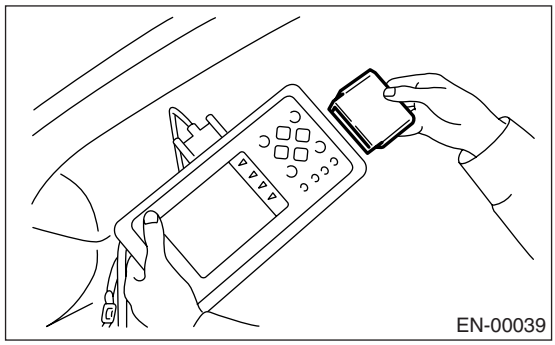

4) Connect the Subaru Select Monitor to data link connector.
(1) Data link connector located in the lower portion of instrument panel (on driver's side).

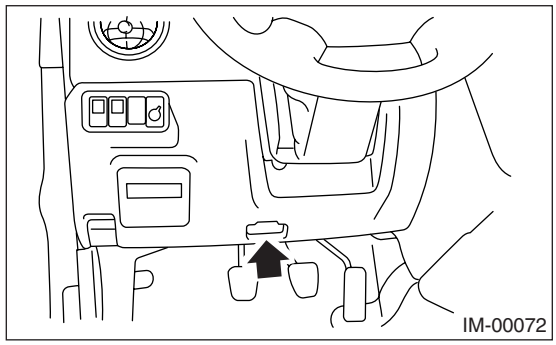

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.

5) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

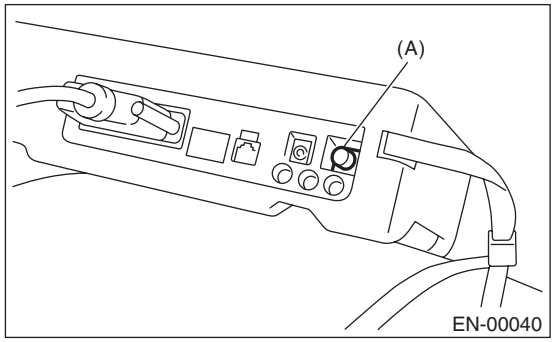

(A) Power switch

6) Using the Subaru Select Monitor, call up DTC and various data, then record them.

2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE)

Refer to Read Diagnostic Trouble Code (DTC) for information about how to indicate DTC. <Ref. to EN(H4SO)-38, Read Diagnostic Trouble Code (DTC).>

3. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (OBD MODE)

Refer to Read Diagnostic Trouble Code (DTC) for information about how to indicate DTC. <Ref. to EN(H4SO)-38, Read Diagnostic Trouble Code (DTC).>

4. READ CURRENT DATA FOR ENGINE (NORMAL MODE)

1) On «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until the desired data is shown.
• A list of support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Vehicle speed signal	Vehicle Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Engine coolant temperature signal	Coolant Temp.	°C or °F
Ignition timing signal	Ignition Timing	deg
Throttle position signal	Throttle Opening Angle	%
Throttle position signal	Throttle Sensor Voltage	V
Injection pulse width	Fuel Injection #1 Pulse	ms
Idle air control signal	ISC Valve Step	STEP
Engine load data	Engine Load	%
Front oxygen (A/F) sensor resistance	A/F Sensor #1 Resistance	ohm
Front oxygen (A/F) sensor output signal	A/F Sensor #1	—
Rear oxygen sensor output signal	Rear O_2 Sensor	V
Short term fuel trim	A/F Correction #1	%
Knock sensor signal	Knocking Correction	deg
Atmospheric absolute pressure signal	Atmosphere Pressure	mmHg, kPa, inHg or psi
Intake manifold relative pressure signal	Mani. Relative Pressure	mmHg, kPa, inHg or psi
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg, kPa, inHg or psi
A/F correction (short term fuel trim) by rear oxygen sensor	A/F Correction #3	%
Long term whole fuel trim	A/F Learning #1	%
Front oxygen (A/F) sensor heater current	Front O_2 Heater #1	A
Rear oxygen sensor heater current	Rear O_2 Heater Current	A
Canister purge control solenoid valve duty ratio	CPC Valve Duty Ratio	%
Fuel level signal	Fuel Level	V
Intake air temperature signal	Intake Air Temp.	°C or °F
Learned ignition timing	Learned Ignition Timing	deg
EGR signal	EGR step	STEP
Generator duty ratio	ALT Duty	%
Ignition switch signal	Ignition Switch	ON or OFF
Test mode connector signal	Test Mode Signal	ON or OFF
Neutral position switch signal	Neutral Position Switch	ON or OFF
Air conditioning switch signal	A/C Switch	ON or OFF
Air conditioning signal	A/C Compressor Signal	ON or OFF
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF
Fuel pump relay signal	Fuel Pump Relay	ON or OFF
Knocking signal	Knocking Signal	ON or OFF
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF
Power steering switch signal	P/S Switch	ON or OFF
Engine torque control signal #1	Torque Control Signal #1	ON or OFF
Engine torque control signal #2	Torque Control Signal #2	ON or OFF
Engine torque control permission signal	Torque Permission Signal	ON or OFF

Contents	Display	Unit of measure
Rear oxygen sensor rich signal	Rear O_2 Rich Signal	ON or OFF
Starter switch signal	Starter Switch Signal	ON or OFF
Idle switch signal	Idle Switch Signal	ON or OFF
Crankshaft position sensor signal	Crankshaft Position Sig.	ON or OFF
Camshaft position sensor signal	Camshaft Position Sig.	ON or OFF
Rear defogger switch signal	Rear Defogger Switch	ON or OFF
Blower fan switch signal	Blower Fan Switch	ON or OFF
Small light switch signal	Light Switch	ON or OFF
Wiper switch signal	Wiper Switch	ON or OFF
Air assisted injector solenoid valve signal	Assist Air Sol. Valve	ON or OFF
AT/MT identification terminal	AT model ID Signal	ON or OFF

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

5. READ CURRENT DATA FOR ENGINE (OBD MODE)

1) On «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On «OBD Menu» display screen, select the {Current Data Display & Save} and press the [YES] key.
6) On «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
7) Using the scroll key, move the display screen up or down until the desired data is shown.
• A list of support data is shown in the following table.

Contents	Display	Unit of measure
Number of DTC	Number of DTC	—
Malfunction indicator light status	MI (MIL)	ON or OFF
Monitoring test of misfire	Misfire monitoring	Complete or incomplete
Monitoring test of fuel system	Fuel system monitoring	Complete or incomplete
Monitoring test of comprehensive component	Component monitoring	Complete or incomplete
Test of catalytic converter	Catalyst Diagnosis	Complete or incomplete
Test of heated catalytic converter	Heated catalyst	No support
Test of evaporative emission purge control system	Evaporative purge system	No support
Test of secondary air system	Secondary air system	No support
Test of air conditioning system refrigerant	A/C system refrigerant	No support
Test of oxygen sensor	Oxygen sensor	Complete or incomplete
Test of oxygen sensor heater	O_2 Heater Diagnosis	Complete or incomplete
Test of EGR system	EGR system	No support
Air fuel ratio control system for bank 1	Fuel System for Bank 1	—
Engine load data	Calculated load value	%
Engine coolant temperature signal	Coolant Temp.	°C or °F
Short term fuel trim by front oxygen (A/F) sensor	Short term fuel trim B1	%
Long term fuel trim by front oxygen (A/F) sensor	Long term fuel trim B1	%
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg, kPa, inHg or psi
Engine speed signal	Engine Speed	rpm
Vehicle speed signal	Vehicle Speed	km/h or MPH
Ignition timing advance for #1 cylinder	Ignition timing adv. #1	°
Intake air temperature signal	Intake Air Temp.	°C or °F
Intake air amount	Mass Air Flow	g/s
Throttle position signal	Throttle Opening Angle	%
Rear oxygen sensor output signal	Oxygen Sensor #12	V
Air fuel ratio correction by rear oxygen sensor	Short term fuel trim #12	%
On-board diagnostic system	OBD System	—
A/F sensor check	A/F sensor	—
A/F sensor #11	A/F sensor #11	V
A/F sensor #11	A/F sensor #11	—

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

6. READ FREEZE FRAME DATA FOR ENGINE (OBD MODE)

1) On «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On «OBD Menu» display screen, select the {Freeze Frame Data} and press the [YES] key.
• A list of support data is shown in the following table.

Contents	Display	Unit of measure
DTC for freeze frame data	Freeze frame data	DTC
Air fuel ratio control system for bank 1	Fuel system for Bank1	—
Engine load data	Engine Load	%
Engine coolant temperature signal	Coolant Temp.	°C or °F
Short term fuel trim by front oxygen (A/F) sensor	Short term fuel trim B1	%
Long term fuel trim by front oxygen (A/F) sensor	Long term fuel trim B1	%
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg, kPa, inHg or psi
Engine speed signal	Engine Speed	rpm
Vehicle speed signal	Vehicle Speed	km/h or MPH

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

7. LED OPERATION MODE FOR ENGINE

1) On «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On «Data Display Menu» display screen, select the {Data & LED Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until the desired data is shown.
• A list of support data is shown in the following table.

Contents	Display	Message	LED "ON" requirements
Ignition switch signal	Ignition Switch	ON or OFF	When ignition switch is turned ON.
Test mode connector signal	Test Mode Signal	ON or OFF	When test mode connector is connected.
Neutral position switch signal	Neutral Position Switch	ON or OFF	When neutral position signal is entered.
Air conditioning switch signal	A/C Switch	ON or OFF	When air conditioning switch is turned ON.
Air conditioning relay signal	A/C Relay	ON or OFF	When air conditioning relay is in function.
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF	When radiator main fan relay is in function.
Fuel pump relay signal	Fuel Pump Relay	ON or OFF	When fuel pump relay is in function.
Knocking signal	Knocking Signal	ON or OFF	When knocking signal is entered.
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF	When radiator sub fan relay is in function.
Engine torque control signal #1	Torque Control Signal #1	ON or OFF	When engine torque control signal 1 is entered.
Engine torque control signal #2	Torque Control Signal #2	ON or OFF	When engine torque control signal 2 is entered.
Engine torque control permission signal	Torque Control Permit	ON or OFF	When engine torque control permission signal is entered.
Rear oxygen sensor rich signal	Rear O_2 Rich Signal	ON or OFF	When rear oxygen sensor mixture ratio is rich.
Starter switch signal	Starter Switch Signal	ON or OFF	When starter switch signal is entered.
Idle switch signal	Idle Switch Signal	ON or OFF	When idle switch signal is entered.
Crankshaft position sensor signal	Crankshaft Position Sig.	ON or OFF	When crankshaft position sensor signal is entered.
Camshaft position sensor signal	Camshaft Position Sig.	ON or OFF	When camshaft position sensor signal is entered.
Power steering switch signal	P/S Switch	ON or OFF	When power steering switch signal is entered.
Rear defogger switch signal	Rear Defogger Switch	ON or OFF	When rear defogger switch is turned ON.
Blower fan switch signal	Blower Fan Switch	ON or OFF	When blower fan switch is turned ON.
Small light switch signal	Light Switch	ON or OFF	When small light switch is turned ON.
Wiper switch signal	Wiper Switch	ON or OFF	When wiper switch is turned ON.
Air assist injector solenoid valve signal	Assist Air Sol. Valve	ON or OFF	When air assist injector solenoid valve signal is input.
AT/MT identification terminal	AT Vehicle ID Signal	ON or OFF	ON when vehicle is AT.

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

8. READ CURRENT DATA FOR AT

1) On «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
3) Press the [YES] key after the information of transmission type is displayed.
4) On «Transmission Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until the desired data is shown.
• A list of support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Rear vehicle speed sensor signal	Vehicle Speed #1	km/h or MPH
Front vehicle speed sensor signal	Vehicle Speed #2	km/h or MPH
Engine speed signal	Engine Speed	rpm
Automatic transmission fluid temperature signal	ATF Temp.	°C or °F
Throttle position signal	Throttle Sensor Voltage	V
Gear position	Gear Position	—
Line pressure control duty ratio	Line Pressure Duty Ratio	%
Lock up clutch control duty ratio	Lock Up Duty Ratio	%
Transfer clutch control duty ratio	Transfer Duty Ratio	%
Power supply for throttle position sensor	Throttle Sensor Power	V
Torque converter turbine speed signal	AT Turbine Speed	rpm
2-4 brake timing pressure control duty ratio	2-4B Duty Ratio	%
Manifold absolute pressure sensor voltage	Mani. Pressure Voltage	V
2 wheel drive switch signal	2WD Switch	ON or OFF
Kick down switch signal	Kick Down Switch	ON or OFF
Stop light switch signal	Stop light Switch	ON or OFF
Anti lock brake system signal	ABS Signal	ON or OFF
Cruise control system signal	Cruise Control Signal	ON or OFF
Neutral/Parking range signal	N/P Range Signal	ON or OFF
Reverse range signal	R Range Signal	ON or OFF
Drive range signal	D Range Signal	ON or OFF
3rd range signal	3rd Range Signal	ON or OFF
2nd range signal	2nd Range Signal	ON or OFF
1st range signal	1st Range Signal	ON or OFF
Shift control solenoid A	Shift Solenoid #1	ON or OFF
Shift control solenoid B	Shift Solenoid #2	ON or OFF
Torque control output signal #1	Torque Control Signal #1	ON or OFF
Torque control output signal #2	Torque Control Signal #2	ON or OFF
Torque control cut signal	Torque Control Cut Sig.	ON or OFF
2-4 brake timing control solenoid valve	2-4 Brake Timing Sol.	ON or OFF
Low clutch timing control solenoid valve	Low Clutch Timing Sol.	ON or OFF
Automatic transmission diagnosis indicator light	AT Diagnosis light	ON or OFF

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

11. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

1) On «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {Diagnostic Code(s) Display} and press the [YES] key.
5) On «Diagnostic Code(s) Display» display screen, select the {Current Diagnostic Code(s)} or {History Diagnostic Code(s)} and press the [YES] key.

NOTE:
• For detailed operation procedure, refer to SUBARU SELECT MONITOR OPERATION MANUAL.
• For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>

2. SUBARU SELECT MONITOR (OBD MODE)

1) On «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On «OBD Menu» display screen, select the {Diagnosis Code(s) Display} and press the [YES] key.
6) Make sure that a DTC is shown on display screen.

NOTE:
• For detailed operation procedure, refer to SUBARU SELECT MONITOR OPERATION MANUAL.
• For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>

3. OBD-II GENERAL SCAN TOOL

Refers to data denoting emission-related powertrain DTC.
For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to access emission-related powertrain DTC (MODE $03).

12.Inspection Mode

A: OPERATION

Carry out trouble diagnosis shown in the following DTC table.
When performing trouble diagnosis which is not shown in the DTC table, refer to the next item Drive cycle. <Ref. to EN(H4SO)-44, Drive Cycle.>

DTC	Item
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)
P0066	Air Assisted Injector Control Circuit or Circuit Low
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input
P0112	Intake Air Temperature Circuit Low Input
P0113	Intake Air Temperature Circuit High Input
P0117	Engine Coolant Temperature Circuit Low Input
P0118	Engine Coolant Temperature Circuit High Input
P0122	Throttle/Pedal Position Sensor/Switch “A” Circuit Low Input
P0123	Throttle/Pedal Position Sensor/Switch “A” Circuit High Input
P0129	Atmospheric Pressure Sensor Circuit Range/Performance
P0131	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 1)
P0132	O2 Sensor Circuit High Voltage (Bank 1 Sensor 1)
P0134	O_2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)
P0137	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)
P0138	O_2 Sensor Circuit High Voltage (Bank 1 Sensor 2)
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)
P0335	Crankshaft Position Sensor “A” Circuit
P0336	Crankshaft Position Sensor “A” Circuit Range/Performance
P0340	Camshaft Position Sensor “A” Circuit (Bank 1 or Single Sensor)
P0341	Camshaft Position Sensor “A” Circuit Range/Performance (Bank 1 or Single Sensor)
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low
P0459	Canister Purge Solenoid Circuit (High)
P0462	Fuel Level Sensor Circuit Low Input
P0463	Fuel Level Sensor Circuit High Input
P0502	Vehicle Speed Sensor Circuit Low Input
P0503	Vehicle Speed Sensor Intermittent/Erratic/High
P0512	Starter Request Circuit
P0513	Incorrect Immobilizer Key
P0519	Idle Control System Malfunction (Fail-Safe)
P0558	Generator Circuit Low Input
P0565	Cruise Control On Signal
P0604	Internal Control Module Random Access Memory (RAM) Error
P0691	Cooling Fan 1 Control Circuit Low
P0692	Cooling Fan 1 Control Circuit High
P0703	Torque Converter/Brake Switch “B” Circuit
P0705	Transmission Range Sensor Circuit (PRNDL Input)
P0710	Transmission Fluid Temperature Sensor Circuit
P0716	Torque Converter Turbine Speed Sensor
P0720	Output Speed Sensor Circuit
P0726	Engine Speed Input Circuit Range/Performance

DTC	Item
P0731	Gear 1 Incorrect Ratio
P0732	Gear 2 Incorrect Ratio
P0733	Gear 3 Incorrect Ratio
P0734	Gear 4 Incorrect Ratio
P0741	Torque Converter Clutch Circuit Performance or Stuck Off
P0743	Torque Converter Clutch Circuit Electrical
P0748	Pressure Control Solenoid “A” Electrical
P0753	Shift Solenoid “A” Electrical
P0758	Shift Solenoid “B” Electrical
P0771	Low Clutch Timing Solenoid
P0778	Pressure Control Solenoid “B” Electrical
P0785	Shift/Timing Solenoid
P0851	Neutral Switch Input Circuit Low
P0852	Neutral Switch Input Circuit High
P0864	TCM Communication Circuit Range/Performance
P0865	TCM Communication Circuit Low
P0866	TCM Communication Circuit High
P1110	Atmospheric Pressure Sensor Circuit Malfunction (Low Input)
P1111	Atmospheric Pressure Sensor Circuit Malfunction (High Input)
P1510	ISC Solenoid Valve Signal #1 Circuit Malfunction (Low Input)
P1511	ISC Solenoid Valve Signal #1 Circuit Malfunction (High Input)
P1512	ISC Solenoid Valve Signal #2 Circuit Malfunction (Low Input)
P1513	ISC Solenoid Valve Signal #2 Circuit Malfunction (High Input)
P1514	ISC Solenoid Valve Signal #3 Circuit Malfunction (Low Input)
P1515	ISC Solenoid Valve Signal #3 Circuit Malfunction (High Input)
P1516	ISC Solenoid Valve Signal #4 Circuit Malfunction (Low Input)
P1517	ISC Solenoid Valve Signal #4 Circuit Malfunction (High Input)
P1518	Starter Switch Circuit Low Input
P1560	Back-up Voltage Circuit Malfunction
P1570	Antenna
P1571	Reference Code Incompatibility
P1572	IMM Circuit Failure (Except Antenna Circuit)
P1574	Key Communication Failure
P1576	EGI Control Module EEPROM
P1577	IMM Control Module EEPROM
P1698	Engine Torque Control Cut Signal Circuit Low Input
P1699	Engine Torque Control Cut Signal Circuit High Input
P1700	Throttle Position Sensor
P1711	Engine Torque Control Signal 1 Circuit Malfunction
P1712	Engine Torque Control Signal 2 Circuit Malfunction

1. PREPARATION FOR THE INSPECTION MODE

1) Make sure the fuel remains approx. half amount [20 — 40 ℓ (5.3 — 10.6 US gal, 4.4 — 8.8 Imp gal)] and the battery voltage is 12 V or more.
2) Raise the vehicle using a garage jack and place on safety stands or drive the vehicle onto free rollers.

WARNING:
• Before raising the vehicle, ensure the parking brake is applied.
• Do not use a pantograph jack in place of a safety stand.
• Secure a rope or wire to the front and rear towing or tie-down hooks to prevent the lateral runout of front wheels.
• Do not abruptly depress/release the clutch pedal or accelerator pedal during works even when engine is operating at low speeds since this may cause vehicle to jump off free rollers.
• In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the safety stands and the vehicle.
• Since the rear wheels will also rotate, do not place anything near them. Also, make sure nobody goes in front of the vehicle.

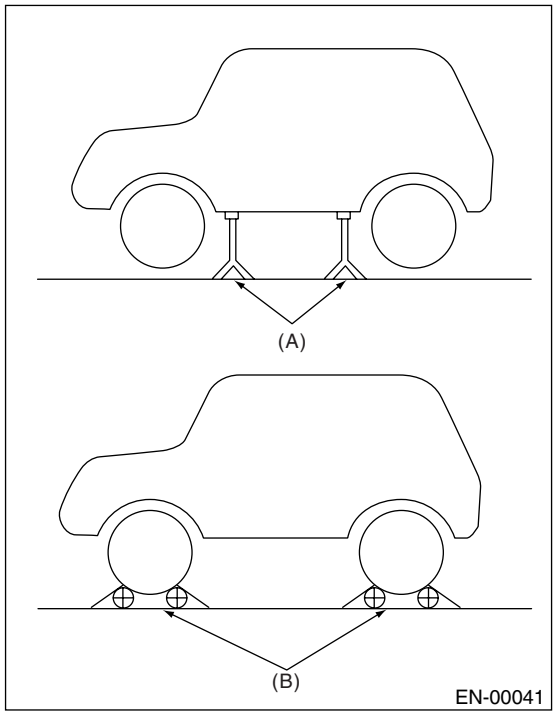

(A) Safety stand
(B) Free rollers

2. SUBARU SELECT MONITOR

1) After clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H4SO)-46, Clear Memory Mode.>
2) Warm up the engine.
3) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

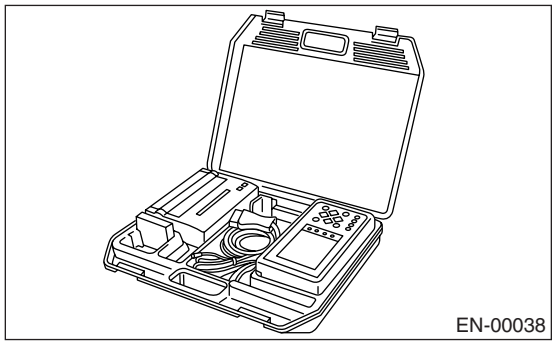

4) Connect the diagnosis cable to Subaru Select Monitor.
5) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

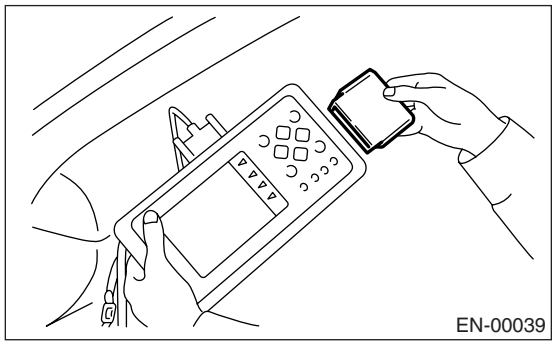

6) Connect the test mode connector (A) at the lower portion of instrument panel (on driver's side).

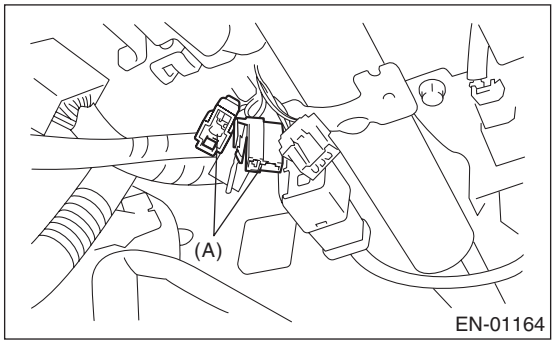

7) Connect the Subaru Select Monitor to data link connector.

(1) Data link connector is located in the lower portion of the instrument panel (on the driver's side).

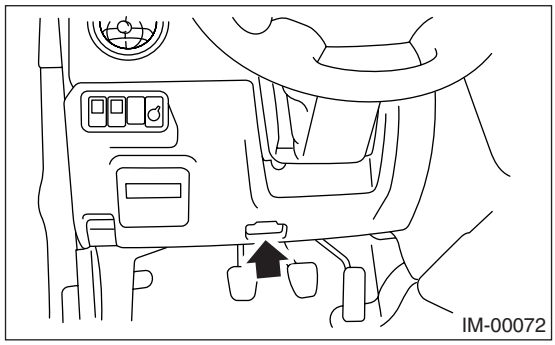

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

8) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

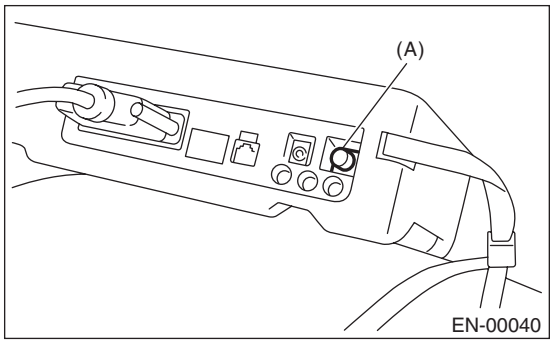

(A) Power switch

9) On «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
10) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
11) Press the [YES] key after the information of engine type is displayed.
12) On «Engine Diagnosis» display screen, select the {Dealer Check Mode Procedure} and press the [YES] key.
13) When the “Perform Inspection (Dealer Check) Mode?” is shown on display screen, press the [YES] key.
14) Perform subsequent procedures as instructed on display screen.

• If trouble still remains in memory, the corresponding DTC appears on display screen.

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For details concerning the DTC, refer to the List of Diagnostic Trouble Code (DTC).
<Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>
• Release the parking brake.
• The speed difference between front and rear wheels may light either the ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

3. OBD-II GENERAL SCAN TOOL

1) After clearing memory, check for any remaining unresolved trouble data: <Ref. to EN(H4SO)-46, Clear Memory Mode.>
2) Warm up the engine.
3) Connect the test mode connector (A) at the lower side of instrument panel (on the driver's side).

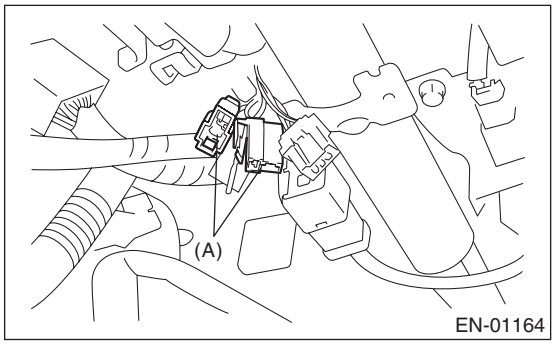

4) Connect the OBD-II general scan tool to its data link connector in the lower portion of instrument panel (on the driver's side).

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

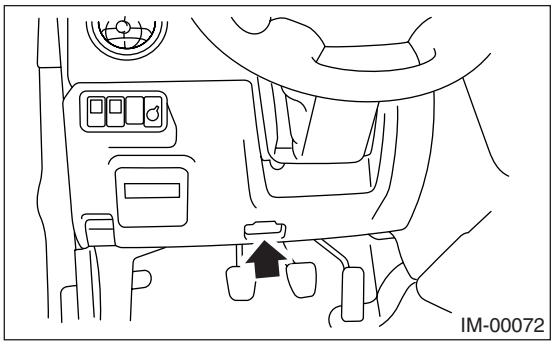

5) Start the engine.

NOTE:
• Ensure the selector lever is placed in “P” position before starting. (AT models)
• Depress the clutch pedal when starting engine. (MT models)

6) Using the selector lever or shift lever, turn the “P” position switch and “N” position switch to ON.
7) Depress the brake pedal to turn brake switch ON. (AT models)
8) Keep the engine speed in 2,500 — 3,000 rpm range for 40 seconds.
9) Place the selector lever or shift lever in “D” position (AT models) or “1st” gear (MT models) and drive the vehicle at 5 to 10 km/h (3 to 6 MPH).

NOTE:
• On AWD vehicles, release the parking brake.
• The speed difference between front and rear wheels may light ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

10) Using the OBD-II general scan tool, check for DTC and record the result(s).

NOTE:
• For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.
• For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC).
<Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>

13.Drive Cycle

A: OPERATION

There are three drive patterns for the trouble diagnosis. Driving in the specified pattern allows to diagnose malfunctioning items listed below. After the malfunctioning items listed below are repaired, always check whether they correctly resume their functions by driving in the required drive pattern.

1. PREPARATION FOR DRIVE CYCLE

1) Make sure that the fuel remains approx. half amount [20 — 40 ℓ (5.3 — 10.6 US gal, 4.4 — 8.8 Imp gal)], and battery voltage is 12V or more.
2) After performing the diagnostics and cleaning memory, check for any remaining unresolved trouble data. <Ref. to EN(H4SO)-46, Clear Memory Mode.>
3) Separate the test mode connector.

NOTE:
• Except for the water temperature specified items at starting, the diagnosis is carried out after engine warm up.
• Carry out the diagnosis which is marked * on DTC twice, then, after finishing first diagnosis, stop the engine and do second time at the same condition.

2. AFTER RUNNING 20 MINUTES AT 80 KM/H (50 MPH), IDLE ENGINE FOR 1 MINUTE.

DTC	Item	Condition
P0067	Air Assisted Injector Control Circuit High	Coolant temperature at start is less than 60°C (140°F).
*P0111	Intake Air Temperature Circuit Range/Performance	Coolant temperature at start is less than 30°C (86°F).
*P0121	Throttle/Pedal Position Sensor/Switch “A” Circuit Range/Performance	—
*P0125	Insufficient Coolant Temperature for Closed Loop Fuel Control	Coolant temperature at start is less than 20°C (68°F).
*P0133	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	—
*P0171	System too Lean (Bank 1)	—
*P0172	System too Rich (Bank 1)	—
*P0420	Catalyst System Efficiency Below Threshold (Bank 1)	—
*P0483	Cooling Fan Rationality Check	—
*P0506	Idle Control System RPM Lower Than Expected	—
*P0507	Idle Control System RPM Higher Than Expected	—
P0562	System Voltage Low	—
P0563	System Voltage High	—
P1137	O_2 Sensor Circuit (Bank1 Sensor1)	—

3. DRIVE ACCORDING TO THE FOLLOWING DRIVE PATTERN

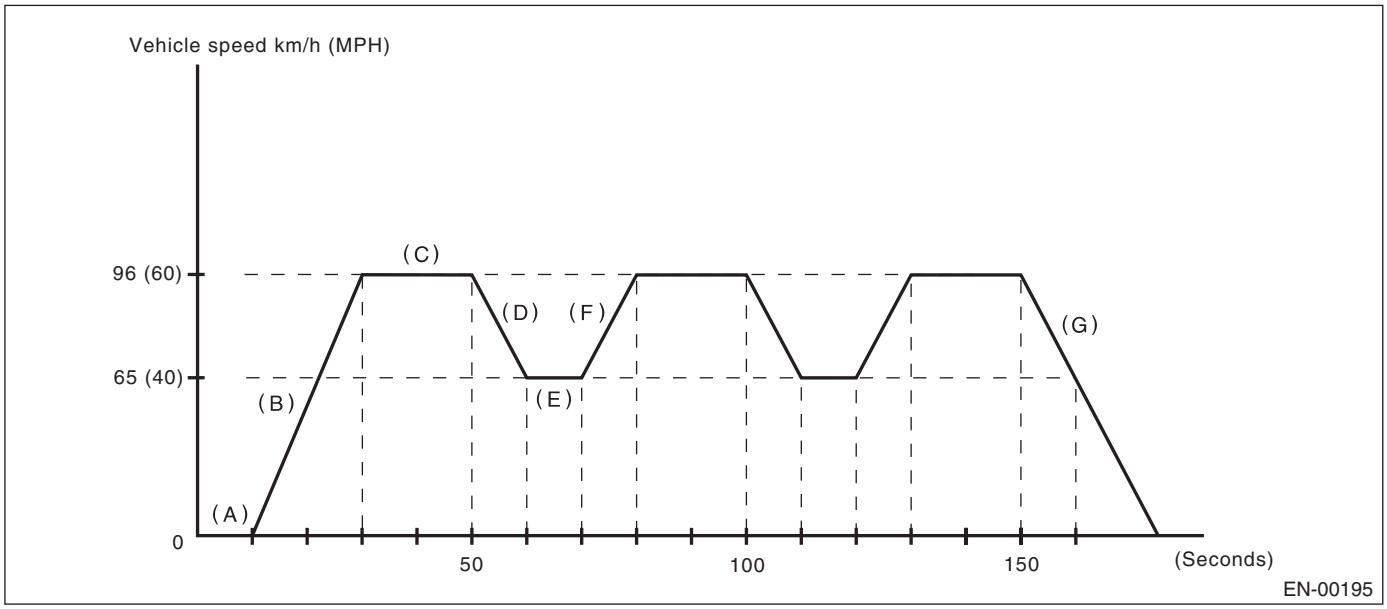

(A) Idle engine for 1 minute.
(B) Accelerate to 96 km/h (60 MPH) within 20 seconds.
(C) Drive vehicle at 96 km/h (60 MPH) for 20 seconds.
(D) Decelerate with fully closed throttle to 65 km/h (40 MPH).
(E) Drive vehicle at 65 km/h (40 MPH) for 10 seconds.
(F) Accelerate to 96 km/h (60 MPH) within 10 seconds.
(G) Stop vehicle with throttle fully closed.

DTC	Item	Condition
*P0030	HO2S Heater Control Circuit (Bank 1 Sensor 1)	—
P0130	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 1)	—
*P0139	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 2)	—
P0301	Cylinder 1 Misfire Detected	Diagnosis frequency is different from misfire ratio.
P0302	Cylinder 2 Misfire Detected	Diagnosis frequency is different from misfire ratio.
P0303	Cylinder 3 Misfire Detected	Diagnosis frequency is different from misfire ratio.
P0304	Cylinder 4 Misfire Detected	Diagnosis frequency is different from misfire ratio.
P0400	Exhaust gas recirculation flow	—
P0559	Generator Circuit High Input	—
P1134	A/F Sensor Micro-Computer Problem	—
P1492	EGR Solenoid Valve Signal #1 Circuit Malfunction (Low Input)	—
P1493	EGR Solenoid Valve Signal #1 Circuit Malfunction (High Input)	—
P1494	EGR Solenoid Valve Signal #2 Circuit Malfunction (Low Input)	—
P1495	EGR Solenoid Valve Signal #2 Circuit Malfunction (High Input)	—
P1496	EGR Solenoid Valve Signal #3 Circuit Malfunction (Low Input)	—
P1497	EGR Solenoid Valve Signal #3 Circuit Malfunction (High Input)	—
P1498	EGR Solenoid Valve Signal #4 Circuit Malfunction (Low Input)	—
P1499	EGR Solenoid Valve Signal #4 Circuit Malfunction (High Input)	—

14.Clear Memory Mode

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

1) On «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
5) When the 'Done' and 'Turn Ignition Switch OFF' are shown on display screen, turn the ignition switch to OFF, and then turn the Subaru Select Monitor to OFF.

NOTE:
• After the memory has been cleared, the idle air control solenoid valve must be initialized. To do this, turn the ignition switch to ON position. Wait 3 seconds before starting the engine.
• For detailed operation procedure, refer to SUBARU SELECT MONITOR OPERATION MANUAL.

2. SUBARU SELECT MONITOR (OBD MODE)

1) On «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On «OBD Menu» display screen, select the {4. Diagnosis Code(s) Cleared} and press the [YES] key.
6) When the 'Clear Diagnostic Code?' is shown on the display screen, press the [YES] key.
7) Turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:
• After the memory has been cleared, the idle air control solenoid valve must be initialized. To do this, turn the ignition switch to ON position. Wait 3 seconds before starting the engine.
• For detailed operation procedure, refer to SUBARU SELECT MONITOR OPERATION MANUAL.

3. OBD-II GENERAL SCAN TOOL

For clear memory procedures using the OBD-II general scan tool, refer to OBD-II General Scan Tool Instruction Manual.
After the memory has been cleared, the idle air control solenoid valve must be initialized. To do this, turn the ignition switch to ON position. Wait 3 seconds before starting the engine.

15. Compulsory Valve Operation Check Mode

A: OPERATION

1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

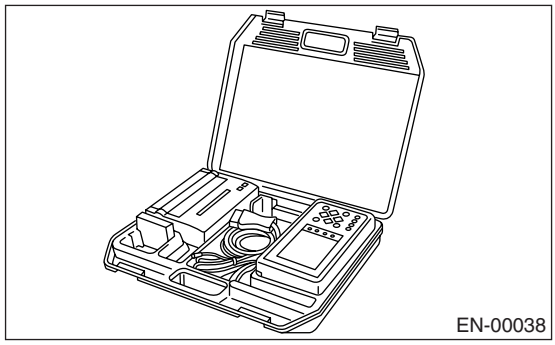

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

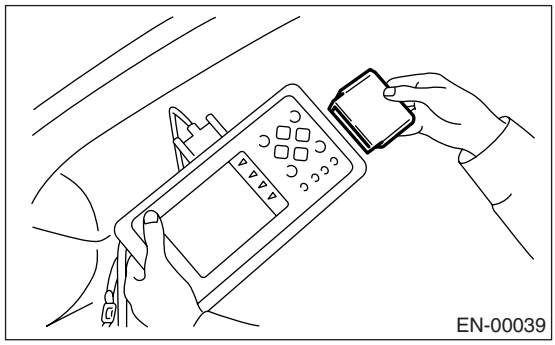

4) Connect the test mode connector (A) at the lower portion of instrument panel (on driver's side).

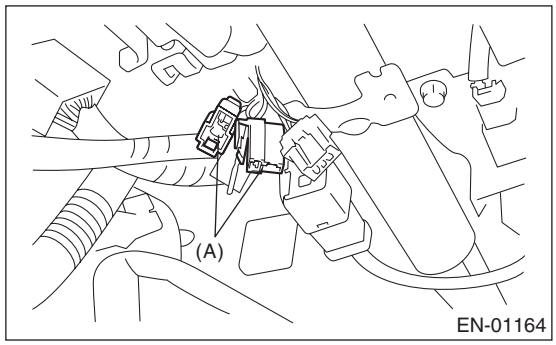

5) Connect the Subaru Select Monitor to data link connector.
(1) Data link connector is located in the lower portion of instrument panel (on driver's side).

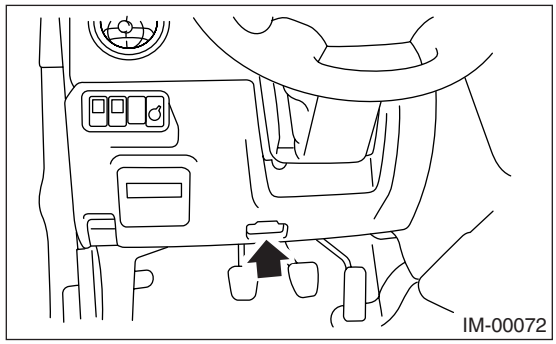

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.

6) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

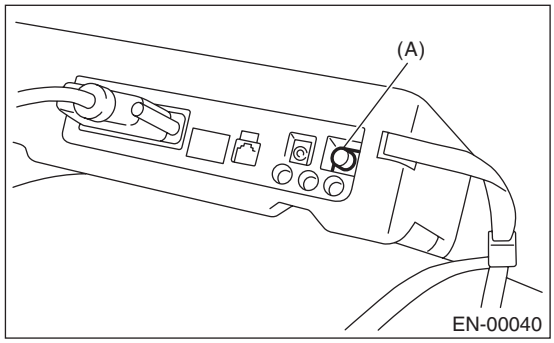

(A) Power switch

7) On «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
8) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
9) Press the [YES] key after the information of engine type is displayed.
10) On «Engine Diagnosis» display screen, select the {System Operation Check Mode} and press the [YES] key.
11) On «System Operation Check Mode» display screen, select the {Actuator ON/OFF Operation} and press the [YES] key.
12) Select the desired compulsory actuator on the «Actuator ON/OFF Operation» display screen and press the [YES] key.

13) Pressing the [NO] key completes the compulsory operation check mode. The display will then return to the «Actuator ON/OFF Operation» screen.

• A list of support data is shown in the following table.

Contents	Display
Compulsory fuel pump relay operation check	Fuel Pump Relay
Compulsory radiator fan relay operation check	Radiator Fan Relay
Compulsory air conditioning relay operation check	A/C Compressor Relay
Compulsory purge control solenoid valve operation check	CPC Solenoid Valve
Compulsory EGR valve operation check	EGR Solenoid Valve

NOTE:

• The following parts will be displayed but not functional because they are not installed on vehicle.

Display
ASV Solenoid Valve
PCV Solenoid Valve
Vent Control Solenoid Valve
FICD Solenoid
Pressure Switching Sol. 1
Pressure Switching Sol. 2
Fuel Tank Sensor Control Valve
Turbocharger Wastegate Solenoid

• For detailed operation procedure, refer to SUBARU SELECT MONITOR OPERATION MANUAL.

16.Malfunction indicator light

A: PROCEDURE

1. Activation of malfunction indicator light. <Ref. to EN(H4SO)-50, ACTIVATION OF MALFUNCTION INDICATOR LIGHT, Malfunction indicator light.>
↓
2. Malfunction indicator light does not come on. <Ref. to EN(H4SO)-51, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction indicator light.>
↓
3. Malfunction indicator light does not go off. <Ref. to EN(H4SO)-53, MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF., Malfunction indicator light.>
↓
4. Malfunction indicator light does not blink at a cycle of 3 Hz. <Ref. to EN(H4SO)-54, MALFUNCTION INDICATOR LIGHT DOES NOT BLINK AT A CYCLE OF 3 HZ., Malfunction indicator light.>
↓
5. Malfunction indicator light remains blinking at a cycle of 3 Hz. <Ref. to EN(H4SO)-56, MALFUNCTION INDICATOR LIGHT REMAINS BLINKING AT A CYCLE OF 3 HZ., Malfunction indicator light.>

B: ACTIVATION OF MALFUNCTION INDICATOR LIGHT

1) When the ignition switch is turned to ON (engine off), the malfunction indicator light (A) in the combination meter illuminates.

NOTE:
If the malfunction indicator light does not illuminate, perform diagnostics of the malfunction indicator light circuit or the combination meter circuit. <Ref. to EN(H4SO)-51, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction indicator light.>

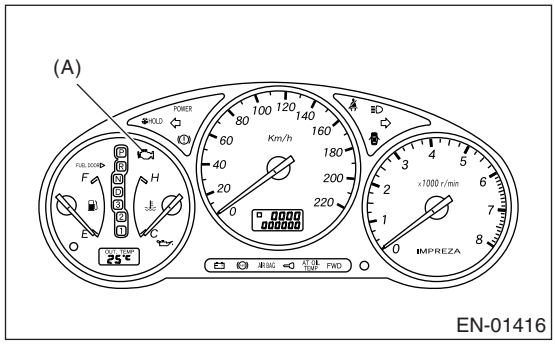

2) After starting the engine, the malfunction indicator light goes out. If it does not, either the engine or the emission control system is malfunctioning.

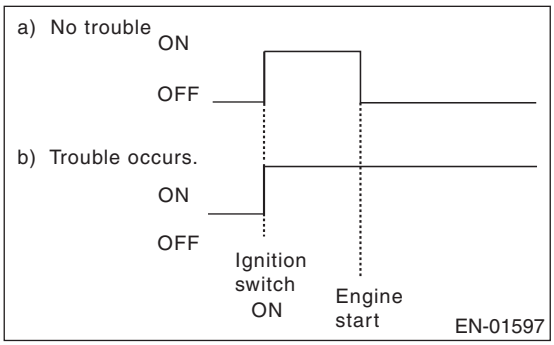

3) If the diagnosis system senses a misfire which could damage the catalyzer, the malfunction indicator light will blink at a cycle of 1 Hz.

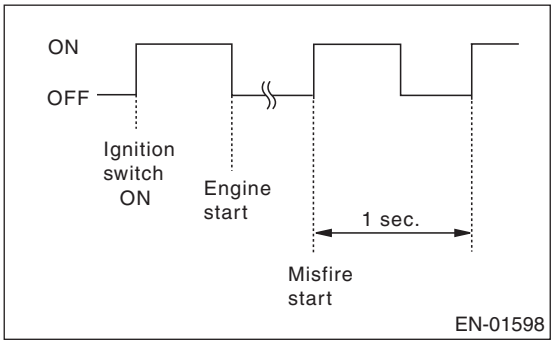

4) When the ignition switch is turned to ON (engine off) or to “START” with test mode connector connected, the malfunction indicator light blinks at a cycle of 3 Hz.

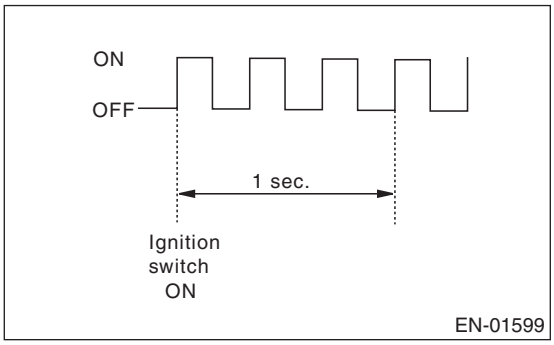

C: MALFUNCTION INDICATOR LIGHT DOES NOT COME ON.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is open or shorted.
- **TROUBLE SYMPTOM:**
  - When the ignition switch is turned ON (engine OFF), malfunction indicator light does not come on.
- **WIRING DIAGRAM:**

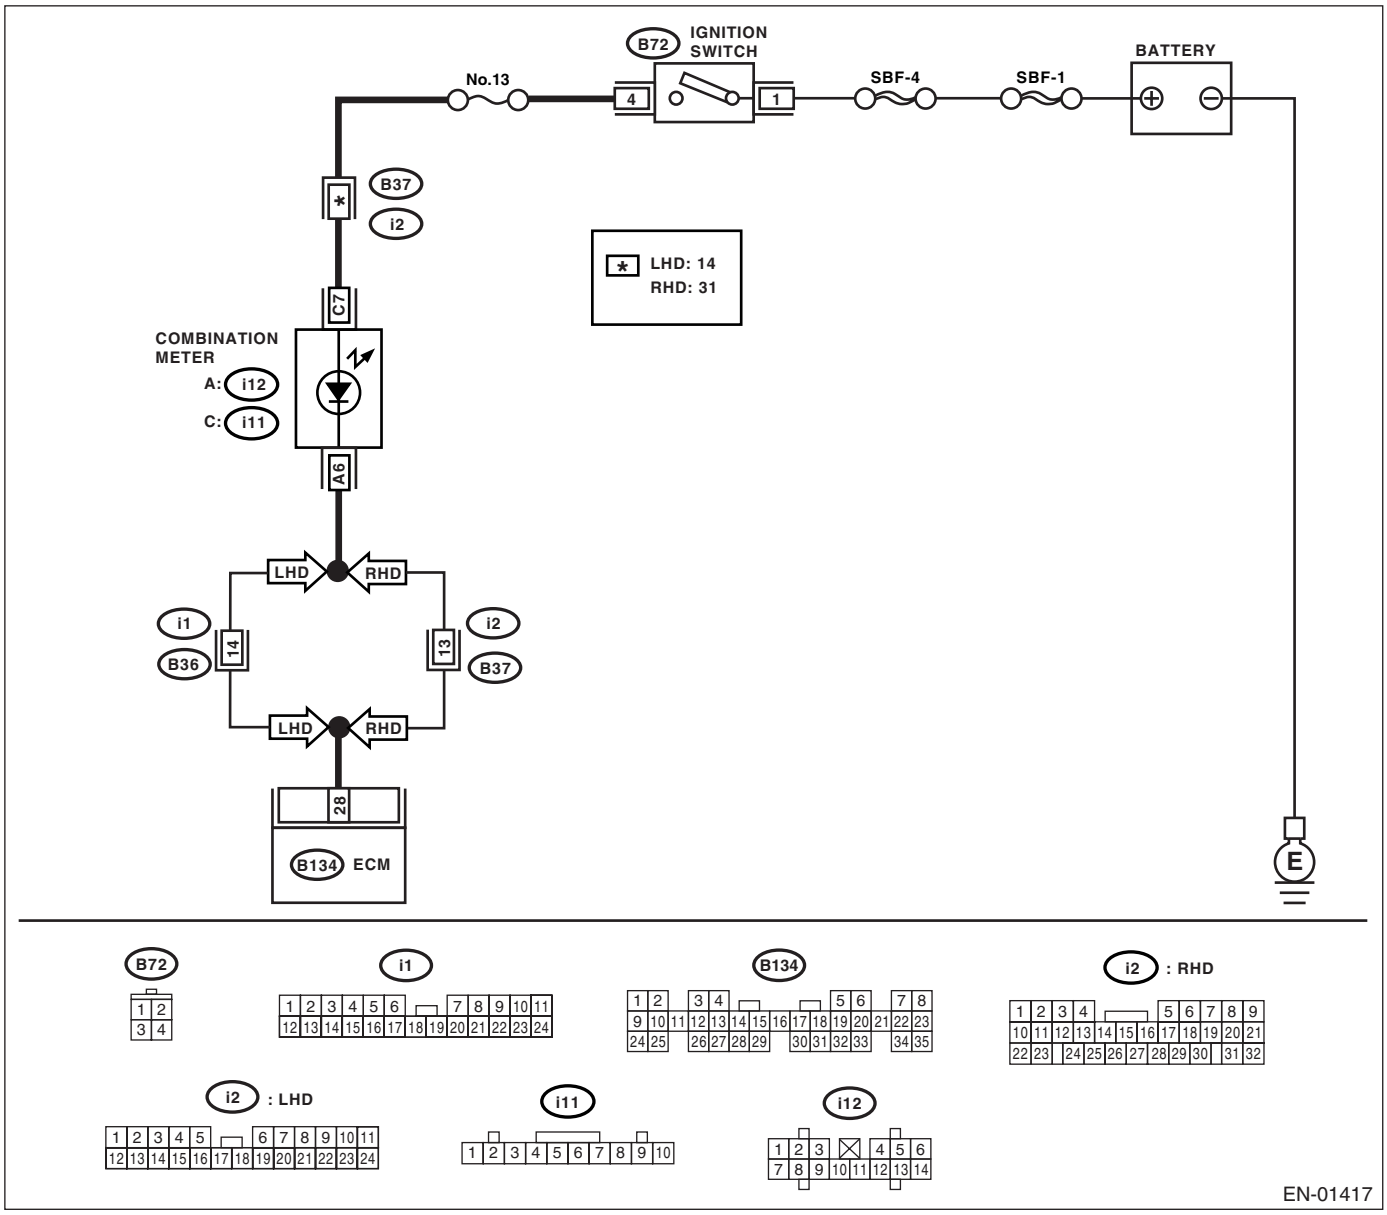

Step		Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 28 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Go to step **2.**
2	**CHECK POOR CONTACT.** Check poor contact by shaking or pulling ECM connector and harness.	Does the malfunction indicator light illuminate?	Repair poor contact in ECM connector.	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK ECM CONNECTOR.** Check the ECM connector connection.	Is the ECM connector correctly connected?	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Repair connection of ECM connector.
4	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. <Ref. to IDI-11, Combination Meter Assembly.> 3)Disconnect the connector from ECM and combination meter. 4)Measure the resistance of harness between ECM and combination meter connector. ***Connector & terminal*** ***(B134) No. 28 — (i12) No. 6:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and combination meter connector • Poor contact in coupling connector
5	**CHECK POOR CONTACT.** Check poor contact in combination meter connector.	Is there poor contact in combination meter connector?	Repair poor contact in combination meter connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN COMBINATION METER AND IGNITION SWITCH CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 7 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the combination meter circuit board. <Ref. to IDI-11, Combination Meter Assembly.>	Check the following and repair if necessary. NOTE: • Blown out fuse (No. 13). • Open or short circuit in harness between fuse (No. 13) and battery terminal • Poor contact in ignition switch connector

D: MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is shorted.
- **TROUBLE SYMPTOM:**
  - Although malfunction indicator light comes on when the engine runs, DTC is not shown on Subaru select monitor or OBD-II general scan tool display.
- **WIRING DIAGRAM:**

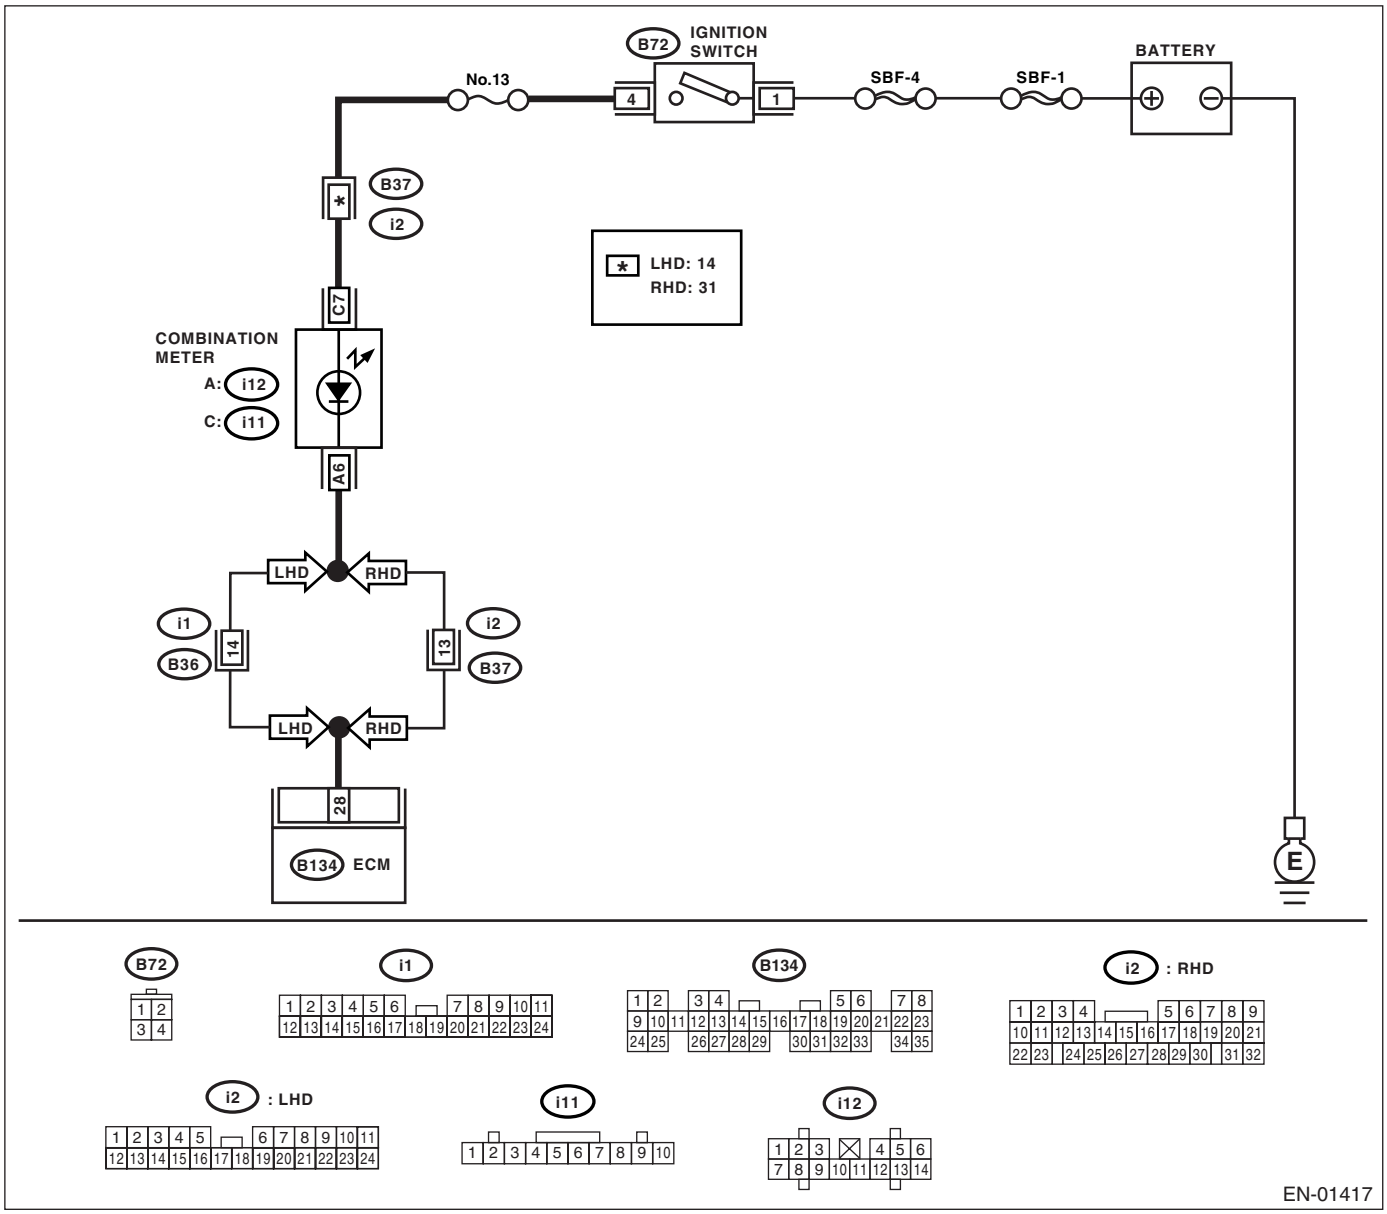

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Turn the ignition switch to ON.	Dose the malfunction indicator light illuminate?	Repair short circuit in harness between combination meter and ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

E: MALFUNCTION INDICATOR LIGHT DOES NOT BLINK AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is open or shorted.
  - Test mode connector circuit is in open.
- **TROUBLE SYMPTOM:**
  - When in inspection mode, malfunction indicator light does not blink at a cycle of 3 Hz.
- **WIRING DIAGRAM:**

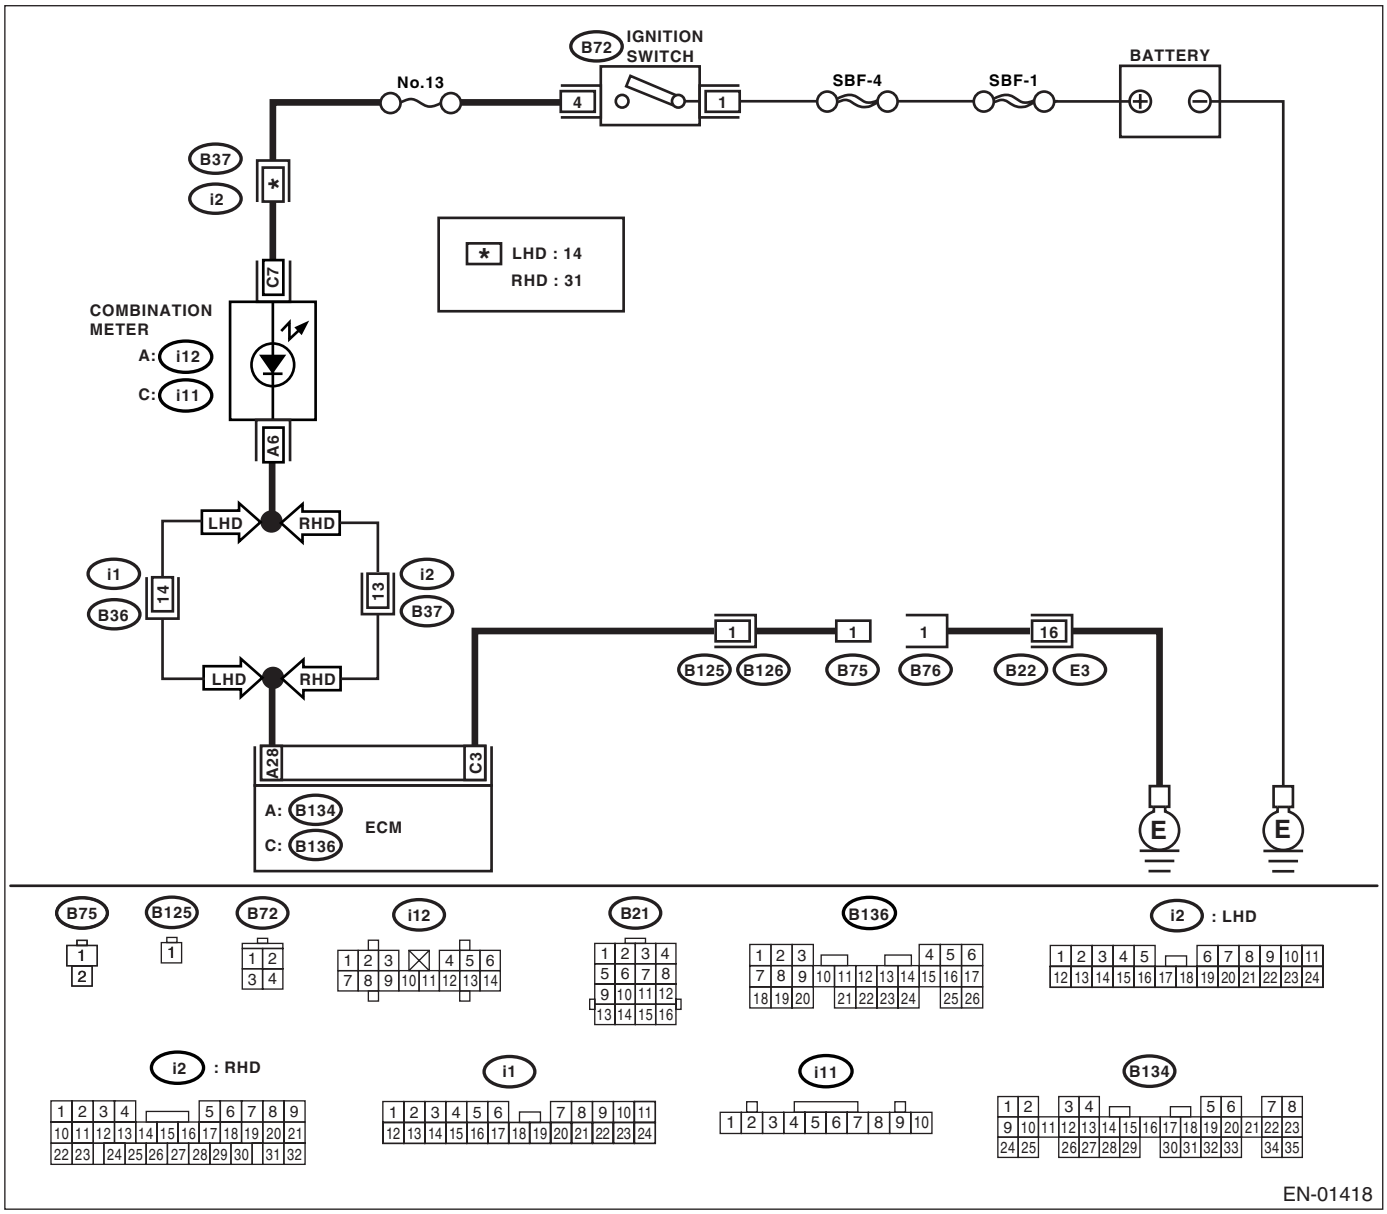

	Step	Check	Yes	No
1	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Disconnect the test mode connector. 3)Turn the ignition switch to ON. (engine OFF)	Dose the malfunction indicator light illuminate?	Go to step **2.**	Repair the malfunction indicator light circuit. <Ref. to EN(H4SO)-51, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction indicator light.>
2	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Turn the ignition switch to ON.	Dose the malfunction indicator light illuminate?	Repair ground short circuit in harness between combination meter and ECM connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN TEST MODE CONNECTOR AND CHASSIS GROUND.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between test mode connector and chassis ground. ***Connector & terminal*** ***(B76) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between test mode connector and chassis ground
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Go to step **5.**
5	**CHECK HARNESS BETWEEN ECM AND TEST MODE CONNECTOR.** 1)Connect the test mode connector. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 3 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair open circuit in harness between ECM and test mode connector.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

F: MALFUNCTION INDICATOR LIGHT REMAINS BLINKING AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - Test mode connector circuit is shorted.
- **TROUBLE SYMPTOM:**
  - Malfunction indicator light blinks at a cycle of 3 Hz when the ignition switch is turned to ON.
- **WIRING DIAGRAM:**

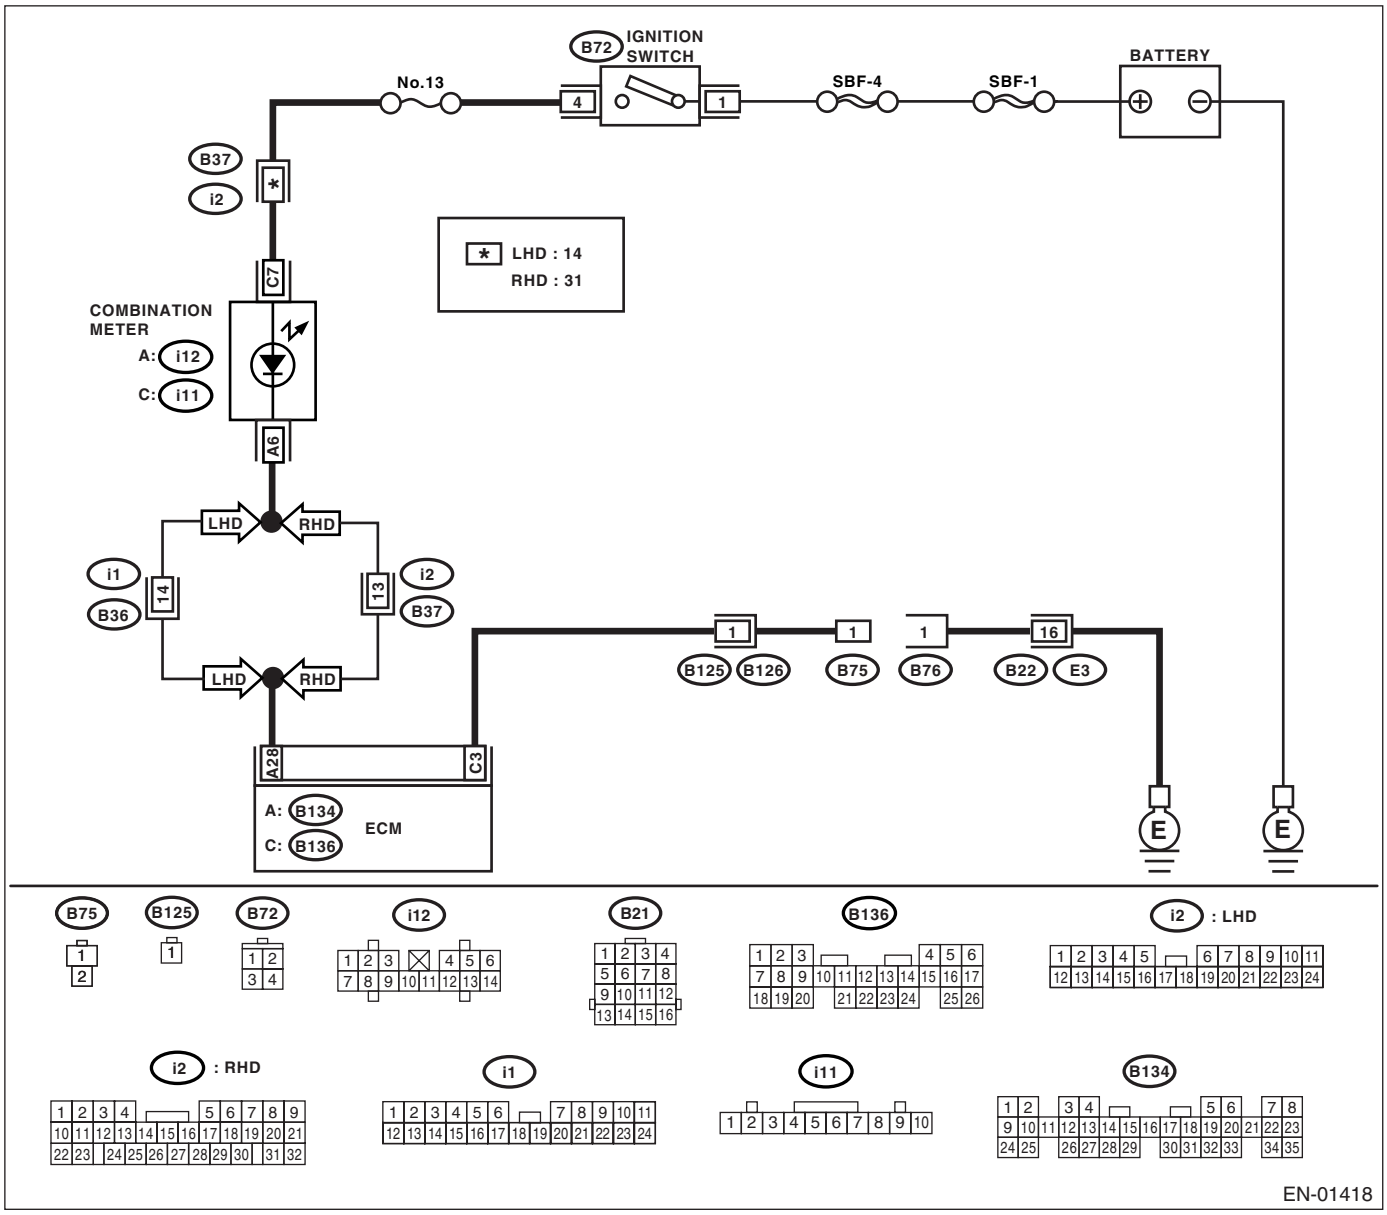

	Step	Check	Yes	No
1	**CHECK TEST MODE CONNECTOR.** 1)Disconnect the test mode connector. 2)Turn the ignition switch to ON.	Dose the malfunction indicator light blink?	Go to step **2.**	System is in good order. NOTE: Malfunction indicator light blinks at a cycle of 3 Hz when test mode connector is connected.
2	**CHECK HARNESS BETWEEN ECM CONNECTOR AND ENGINE GROUNDING TERMINAL.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 3 — Chassis ground:***	Is the resistance less than 5 Ω?	Repair short circuit in harness between ECM and test mode connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

17.Diagnostics for Engine Starting Failure

A: PROCEDURE

1. Inspection of starter motor circuit. <Ref. to EN(H4SO)-59, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
2. Inspection of ECM power supply and ground line. <Ref. to EN(H4SO)-62, CONTROL MODULE POWER SUPPLY AND GROUND LINE, Diagnostics for Engine Starting Failure.>
↓
3. Inspection of ignition control system. <Ref. to EN(H4SO)-65, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
↓
4. Inspection of fuel pump circuit. <Ref. to EN(H4SO)-68, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
5. Inspection of fuel injector circuit. <Ref. to EN(H4SO)-71, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

B: STARTER MOTOR CIRCUIT

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

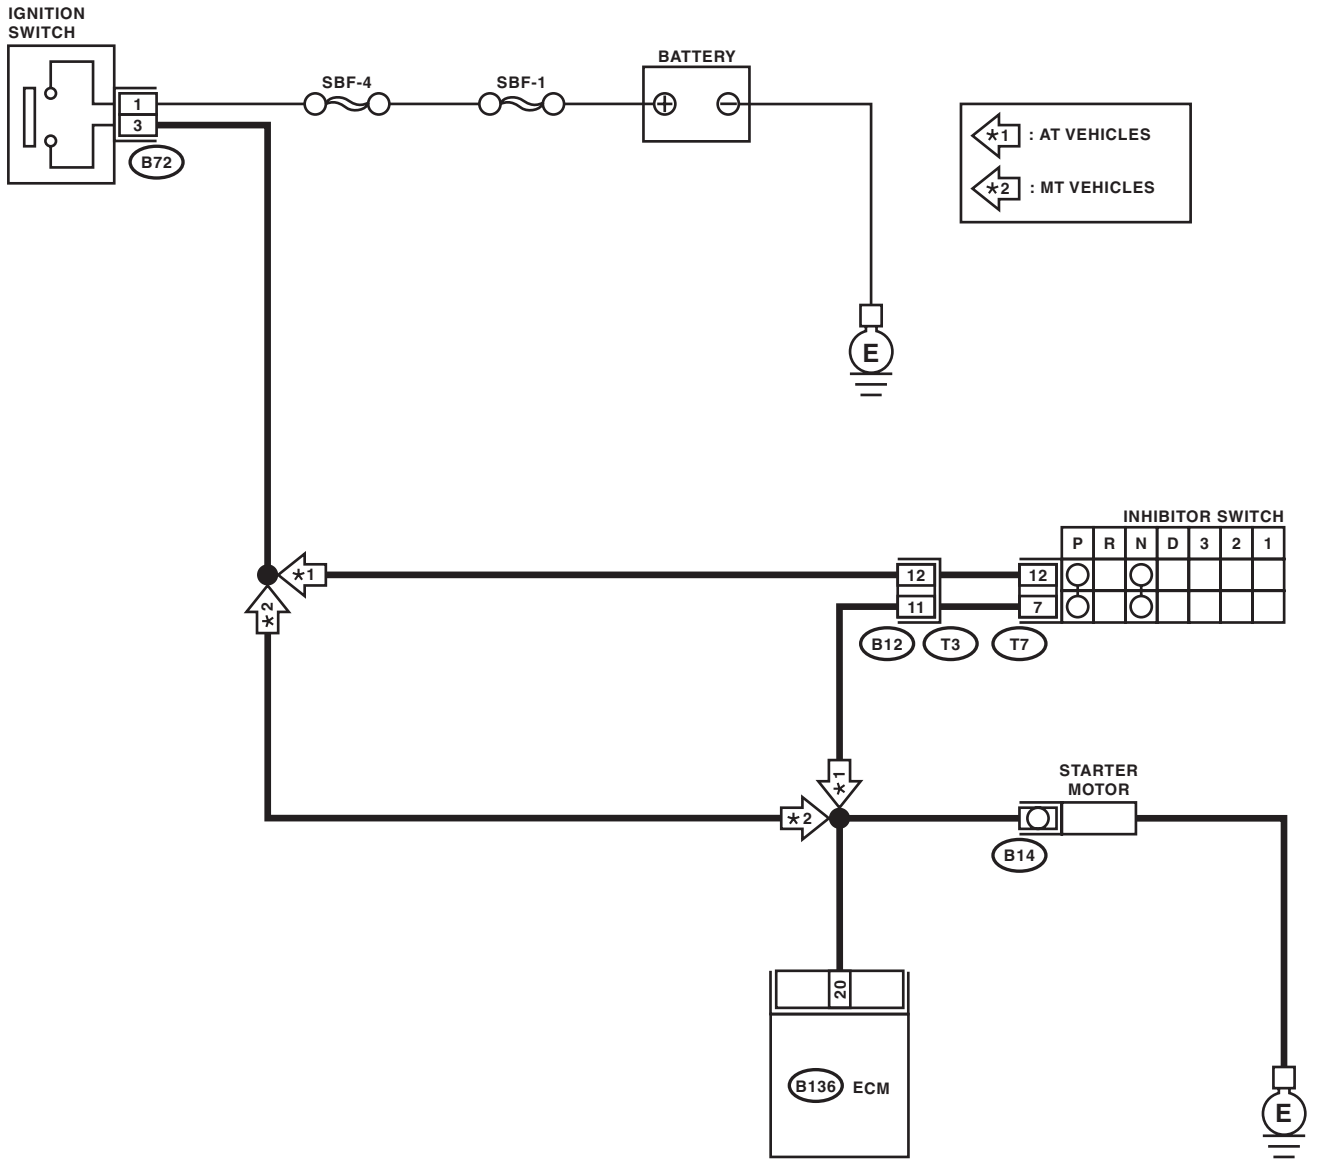

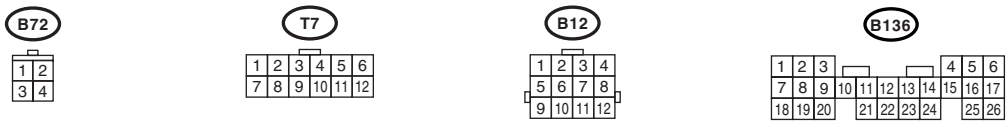

EN-01440

DIAGNOSTICS FOR ENGINE STARTING FAILURE

	Step	Check	Yes	No
1	**CHECK BATTERY.** Check the battery voltage.	Is the voltage more than 12 V?	Go to step **2.**	Charge or replace the battery.
2	**CHECK INPUT SIGNAL FOR STARTER MOTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from starter motor. 3)Turn the ignition switch to ST. 4)Measure the power supply voltage between starter motor connector terminal and engine ground. ***Connector & terminal*** ***(B14) No. 1 (+) — Engine ground (−):*** NOTE: •On AT models, place the select lever in the "P" or "N" range. •On MT models, depress the clutch pedal.	Is the voltage more than 10 V?	Go to step **3.**	Go to step **4.**
3	**CHECK GROUND CIRCUIT OF STARTER MOTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the terminal from starter motor. 3)Measure the resistance of ground cable between ground cable terminal and engine ground.	Is the resistance less than 5 Ω?	Check the starter motor. <Ref. to SC(H4SO)-7, Starter.>	Repair open circuit of ground cable.
4	**CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.** 1)Disconnect the connector from ignition switch. 2)Measure the power supply voltage between ignition switch connector and chassis ground. ***Connector & terminal*** ***(B72) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **5.**	Repair open circuit in harness between ignition switch and battery, and check fuse SBF No. 4 and SBF No. 1.
5	**CHECK IGNITION SWITCH.** 1)Disconnect the connector from ignition switch. 2)Measure the resistance between ignition switch terminals while turning ignition switch to the "ST" position. ***Terminals*** ***No. 1 — No. 3:***	Is the resistance less than 5 Ω?	Go to step **6.**	Replace the ignition switch.
6	**CHECK TRANSMISSION TYPE.**	Is the target AT model?	Go to step **7.**	A temporary poor contact. Check each connector for poor contact.
7	**CHECK INPUT VOLTAGE OF INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from inhibitor switch. 3)Connect the connector to ignition switch. 4)Measure the input voltage between inhibitor switch connector terminal and engine ground while turning ignition switch to ST. ***Connector & terminal*** ***(B12) No. 12 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **8.**	Repair open or ground short circuit in harness between inhibitor switch and ignition switch. NOTE: Check security system (if equipped).

	Step	Check	Yes	No
8	**CHECK INHIBITOR SWITCH.** 1)Place the select lever in the “P” or “N” range. 2)Measure the resistance between inhibitor switch terminals. ***Connector & terminal*** ***(T3) No. 11 — No. 12:***	Is the resistance less than 1 Ω?	Repair open or ground short circuit in harness between inhibitor switch and starter motor.	Replace the inhibitor switch. <Ref. to 4AT-48, Inhibitor Switch.>

C: CONTROL MODULE POWER SUPPLY AND GROUND LINE

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

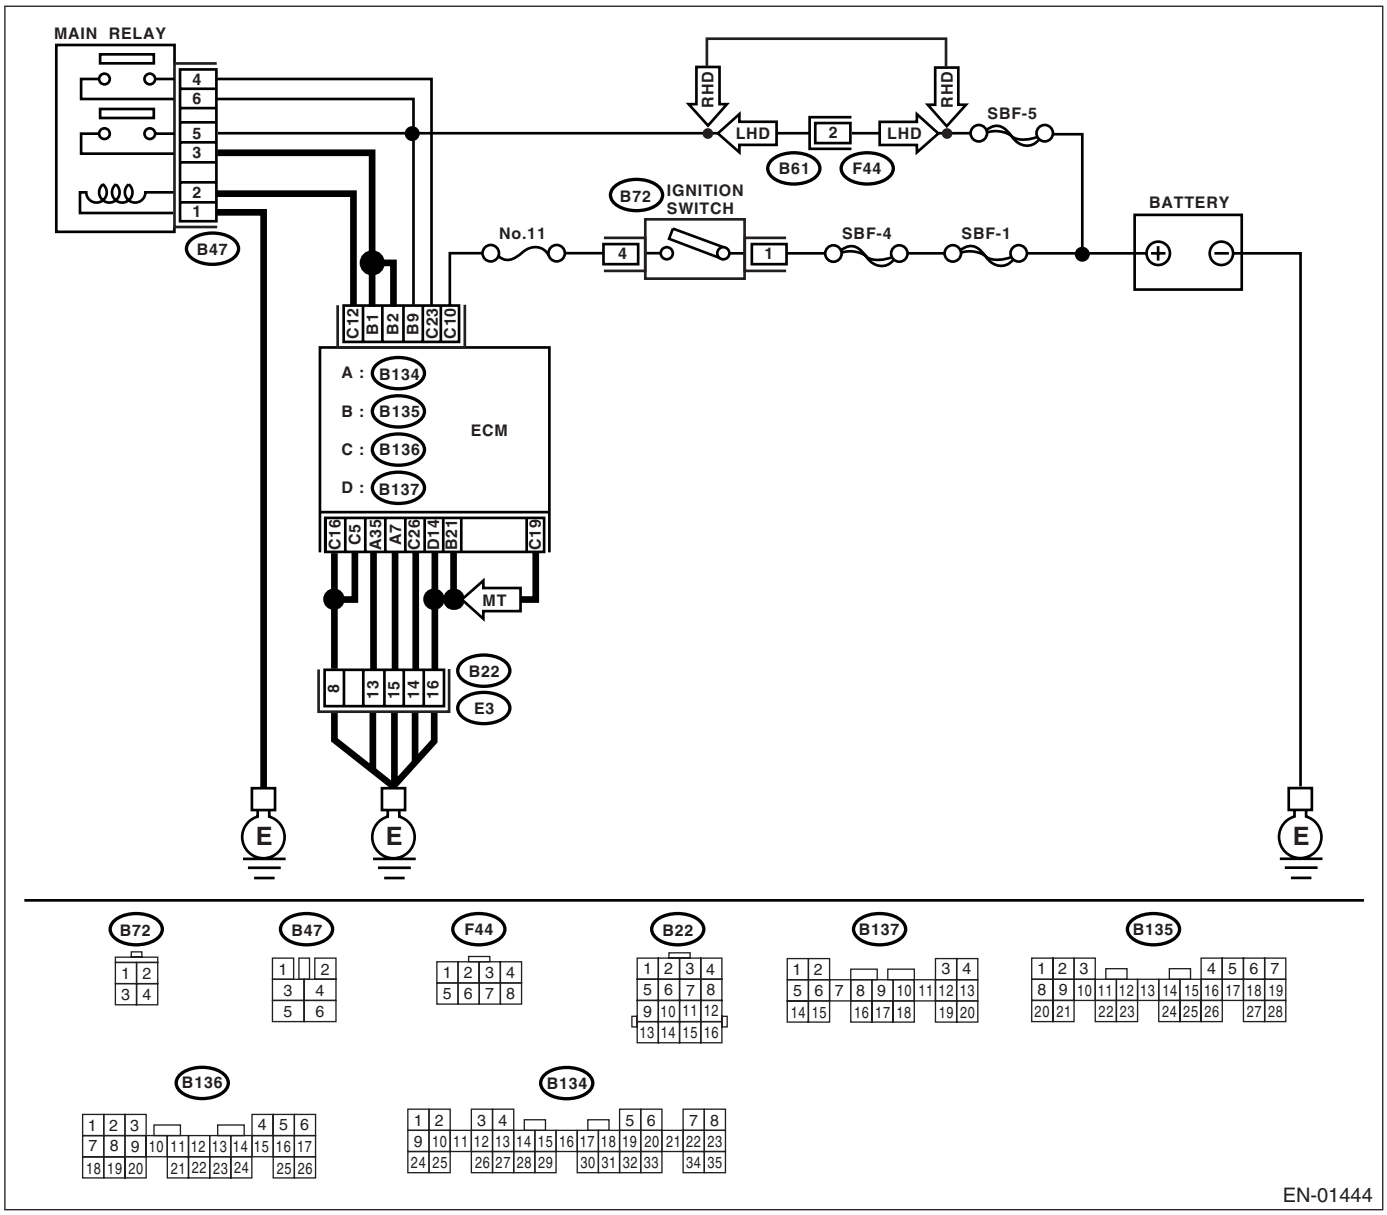

Step		Check	Yes	No
1	**CHECK MAIN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main relay. 3)Connect the battery to main relay terminals No. 1 and No. 2. 4)Measure the resistance between main relay terminals. ***Terminals*** ***No. 3 — No. 5:*** ***No. 4 — No. 6:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the main relay.

	Step	Check	Yes	No
2	**CHECK GROUND CIRCUIT OF ECM.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 7 — Chassis ground:*** ***(B134) No. 35 — Chassis ground:*** ***(B135) No. 21 — Chassis ground:*** ***(B136) No. 5 — Chassis ground:*** ***(B136) No. 16 — Chassis ground:*** ***(B136) No. 26 — Chassis ground:*** ***(B137) No. 14 — Chassis ground:*** ***(B136) No. 19 — Chassis ground: (MT model)***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair open circuit in harness between ECM connector and engine grounding terminal.
3	**CHECK INPUT VOLTAGE OF ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Repair open or ground short circuit of power supply circuit.
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 10 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **5.**	Repair open or ground short circuit of power supply circuit.
5	**CHECK HARNESS BETWEEN ECM AND MAIN RELAY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 12 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair ground short circuit in harness between ECM connector and main relay connector, then replace the ECM.
6	**CHECK OUTPUT VOLTAGE FROM ECM.** 1)Connect the connector to ECM. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 12 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Replace the ECM.
7	**CHECK INPUT VOLTAGE OF MAIN RELAY.** Check the voltage between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **8.**	Repair open circuit in harness between ECM connector and main relay connector.
8	**CHECK GROUND CIRCUIT OF MAIN RELAY.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 1 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **9.**	Repair open circuit between main relay and chassis ground.
9	**CHECK INPUT VOLTAGE OF MAIN RELAY.** Measure the voltage between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 5 (+) — Chassis ground (–):*** ***(B47) No. 6 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **10.**	Repair open or ground short circuit in harness of power supply circuit.

Step		Check	Yes	No
10	**CHECK INPUT VOLTAGE OF ECM.** 1)Connect the main relay connector. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 1 (+) — Chassis ground (–):*** ***(B135) No. 2 (+) — Chassis ground (–):*** ***(B136) No. 23 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Check ignition control system. <Ref. to EN(H4SO)-65, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Repair open or ground short circuit in harness between ECM connector and main relay connector.

D: IGNITION CONTROL SYSTEM

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

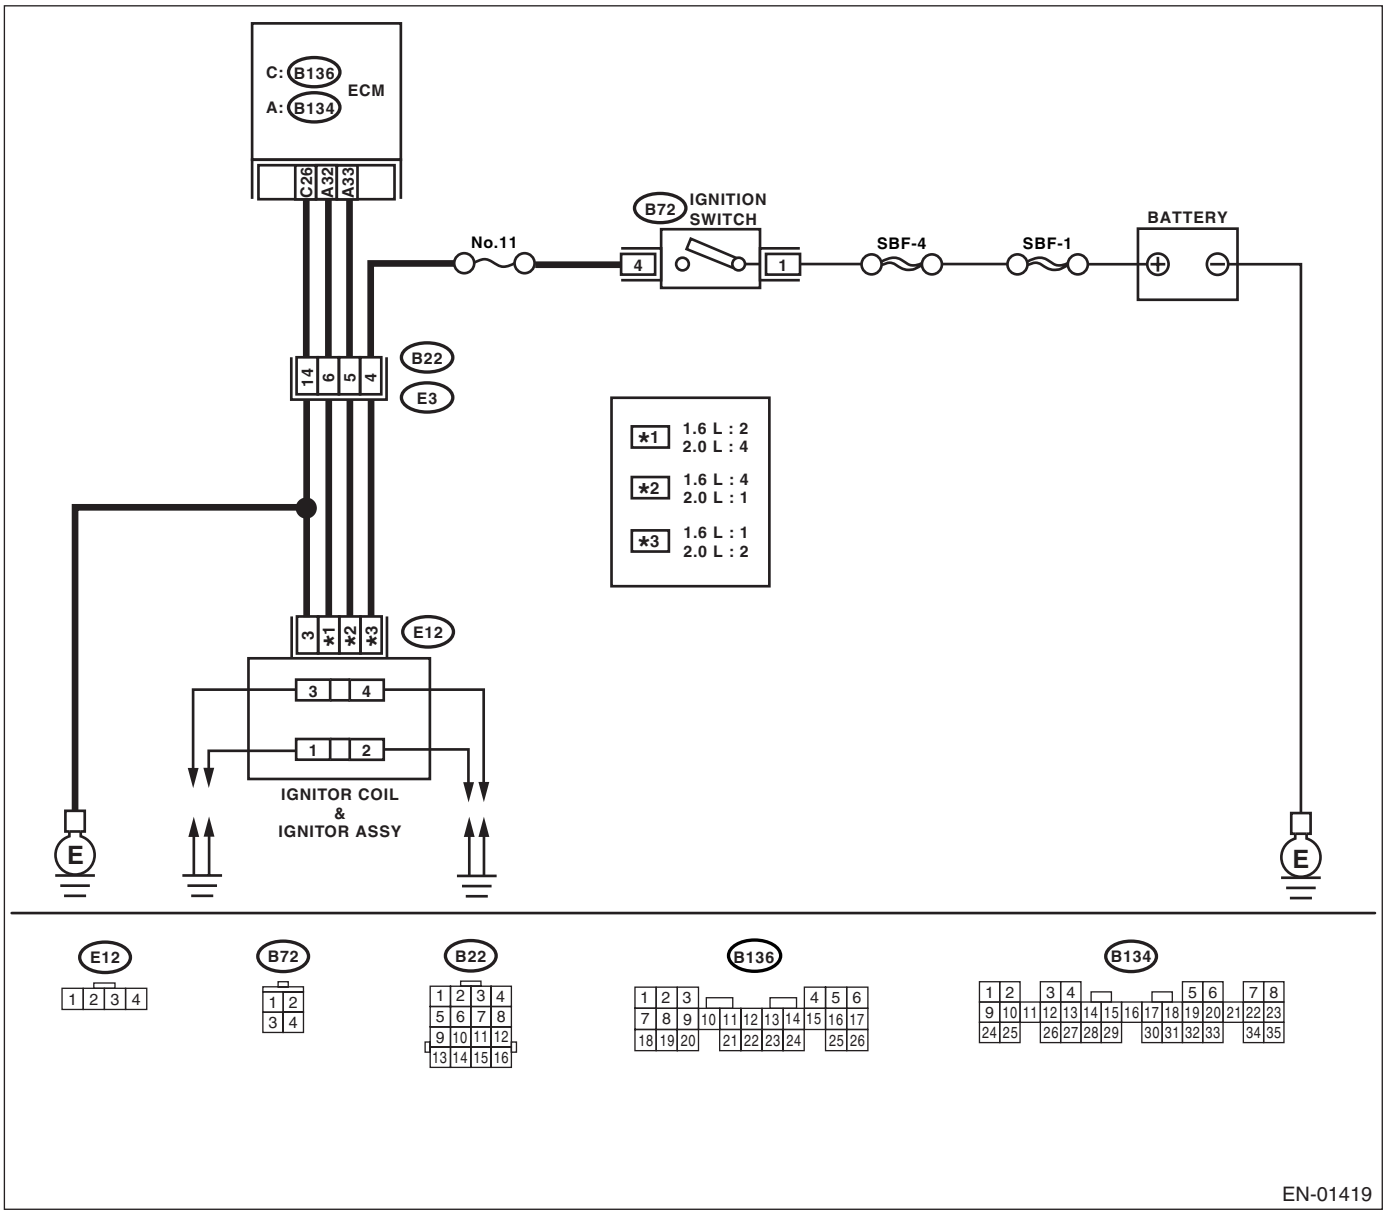

	Step	Check	Yes	No
1	**CHECK IGNITION SYSTEM FOR SPARKS.** 1)Remove the plug cord cap from each spark plug. 2)Install the new spark plug on plug cord cap. **CAUTION:** **Do not remove the spark plug from engine.** 3)Contact the spark plug's thread portion on engine. 4)While opening the throttle valve fully, crank the engine to check that spark occurs at each cylinder.	Does spark occur at each cylinder?	Check fuel pump system. <Ref. to EN(H4SO)-68, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step **2.**
2	**CHECK POWER SUPPLY CIRCUIT FOR IGNITION COIL & IGNITOR ASSY.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ignition coil & ignitor ASSY. 3)Turn the ignition switch to ON. 4)Measure the power supply voltage between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***1.6 L: (E12) No. 1 (+) — Engine ground (−):*** ***2.0 L: (E12) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ignition coil & ignitor ASSY, and ignition switch connector • Poor contact in coupling connectors
3	**CHECK HARNESS OF IGNITION COIL & IGNITOR ASSY GROUND CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***(E12) No. 3 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ignition coil & ignitor ASSY connector and engine grounding terminal
4	**CHECK IGNITION COIL & IGNITOR ASSY.** 1)Remove the spark plug cords. 2)Measure the resistance between spark plug cord contact portions to check secondary coil. ***Terminals*** ***No. 1 — No. 2:*** ***No. 3 — No. 4:***	Is the resistance 10 — 15 kΩ?	Go to step **5.**	Replace the ignition coil & ignitor ASSY. <Ref. to IG(H4SO)-8, Ignition Coil & Ignitor ASSY.>

	Step	Check	Yes	No
5	**CHECK INPUT SIGNAL FOR IGNITION COIL & IGNITOR ASSY.** 1)Connect the connector to ignition coil & ignitor ASSY. 2)Check if voltage varies synchronously with engine speed when cranking, while monitoring voltage between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***1.6 L: (E12) No. 4 (+) — Engine ground (–):*** ***2.0 L: (E12) No. 1 (+) — Engine ground (–):*** ***1.6 L: (E12) No. 2 (+) — Engine ground (–):*** ***2.0 L: (E12) No. 4 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **6.**	Replace the ignition coil & ignitor ASSY. <Ref. to IG(H4SO)-8, Ignition Coil & Ignitor ASSY.>
6	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Disconnect the connector from ignition coil & ignitor ASSY. 4)Measure the resistance of harness between ECM and ignition coil & ignitor ASSY connector. ***Connector & terminal*** ***1.6 L: (B134) No. 33 — (E12) No. 4:*** ***2.0 L: (B134) No. 33 — (E12) No. 1:*** ***1.6 L: (B134) No. 32 — (E12) No. 2:*** ***2.0 L: (B134) No. 32 — (E12) No. 4:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and ignition coil & ignitor ASSY connector • Poor contact in coupling connector
7	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** Measure the resistance of harness between ECM and engine ground. ***Connector & terminal:*** ***(B134) No. 33 — Engine ground:*** ***(B134) No. 32 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair ground short circuit in harness between ECM and ignition coil & ignitor ASSY connector.
8	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Check fuel pump circuit. <Ref. to EN(H4SO)-68, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>

E: FUEL PUMP CIRCUIT

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

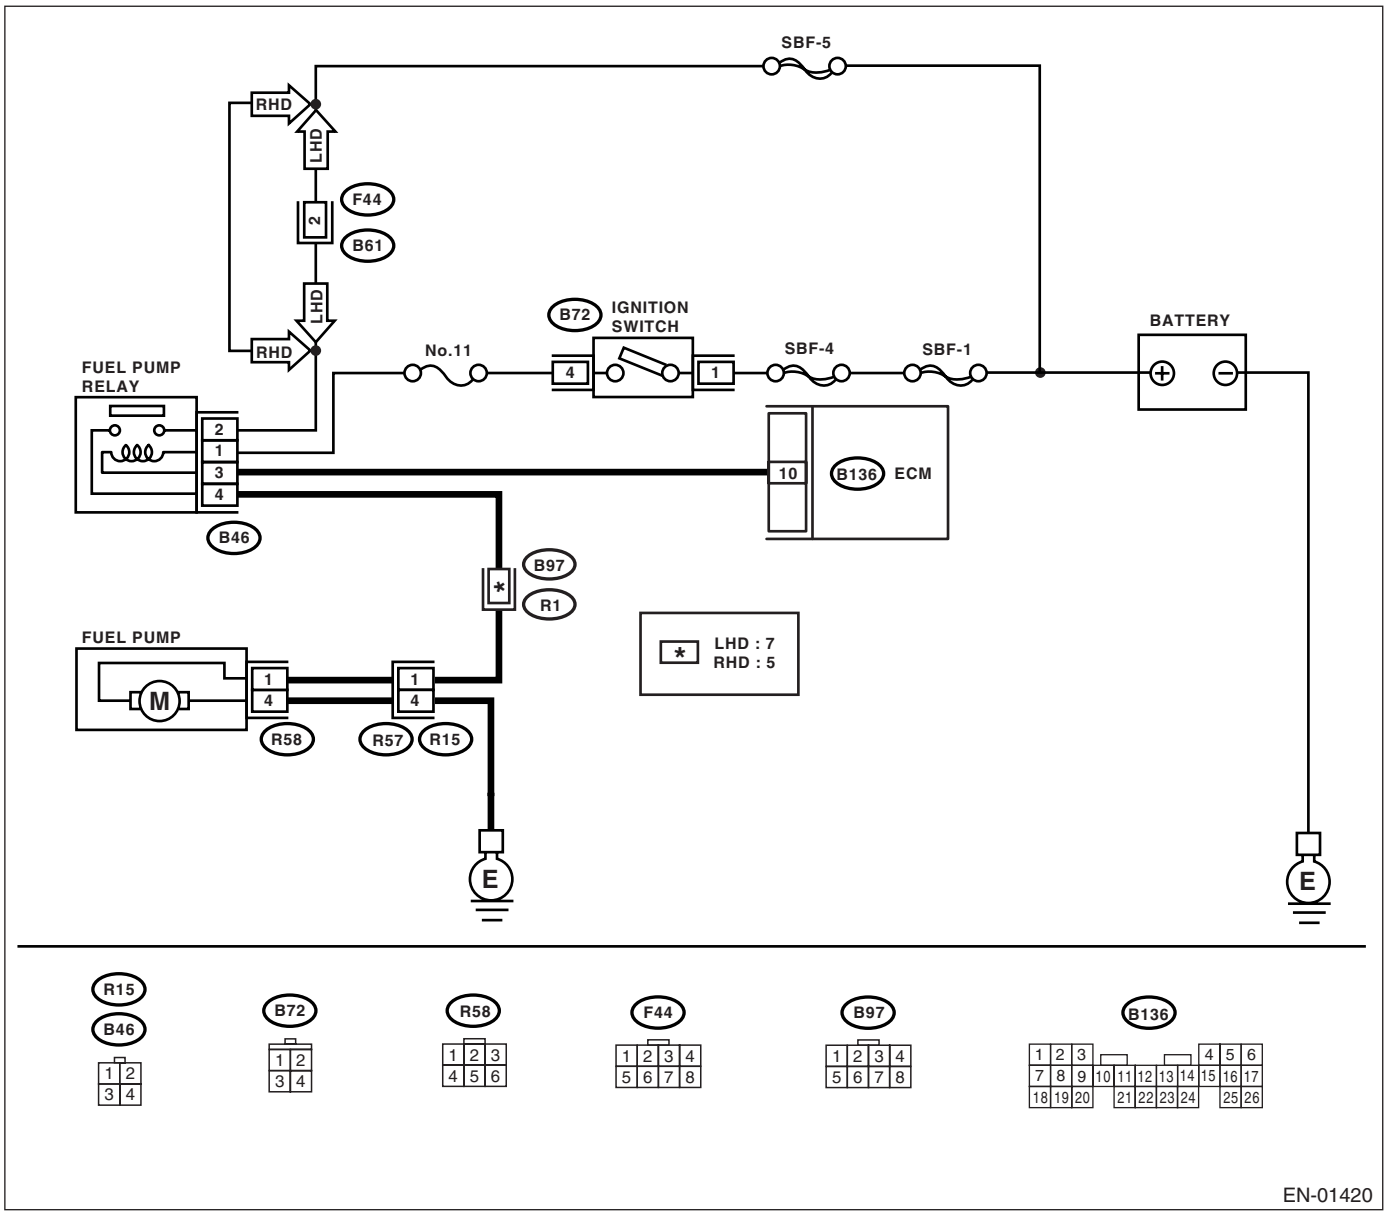

	Step	Check	Yes	No
1	**CHECK OPERATING SOUND OF FUEL PUMP.** Make sure that fuel pump is in operation for two seconds when turning the ignition switch to ON. NOTE: Fuel pump operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4SO)-47, Compulsory Valve Operation Check Mode.>	Does the fuel pump produce operating sound?	Check fuel injector circuit. <Ref. to EN(H4SO)-71, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step **2.**
2	**CHECK GROUND CIRCUIT OF FUEL PUMP.** 1)Turn the ignition switch to OFF. 2)Remove the fuel pump access hole lid. 3)Disconnect the connector from fuel pump. 4)Measure the resistance of harness connector between fuel pump and chassis ground. ***Connector & terminal*** ***(R58) No. 4 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between fuel pump connector and chassis grounding terminal • Poor contact in coupling connector
3	**CHECK POWER SUPPLY TO FUEL PUMP.** 1)Turn the ignition switch to ON. 2)Measure the voltage of power supply circuit between fuel pump connector and chassis ground. ***Connector & terminal*** ***(R58) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the fuel pump. <Ref. to FU(H4SO)-59, Fuel Pump.>	Go to step **4.**
4	**CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness connector between fuel pump and fuel pump relay. ***Connector & terminal*** ***(R58) No. 1 — (B46) No. 4:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between fuel pump connector and chassis grounding terminal • Poor contact in coupling connectors
5	**CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.** Measure the resistance of harness between fuel pump and fuel pump relay connector. ***Connector & terminal*** ***(R58) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair short circuit in harness between fuel pump and fuel pump relay connector.

	Step	Check	Yes	No
6	**CHECK FUEL PUMP RELAY.** 1)Disconnect the connectors from fuel pump relay and main relay. 2)Remove the fuel pump relay and main relay with bracket. 3)Connect the battery to fuel pump relay connector terminals No. 1 and No. 3. 4)Measure the resistance between connector terminals of fuel pump relay. ***Terminals*** ***No. 2 — No. 4:***	Is the resistance less than 10 Ω?	Go to step **7.**	Replace the fuel pump relay. <Ref. to FU(H4SO)-50, Fuel Pump Relay.>
7	**CHECK HARNESS BETWEEN ECM AND FUEL PUMP RELAY CONNECTOR.** 1)Disconnect the connectors from ECM. 2)Measure the resistance of harness between ECM and fuel pump relay connector. ***Connector & terminal*** ***(B136) No. 10 — (B46) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair open circuit in harness between ECM and fuel pump relay connector.
8	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Check fuel injector circuit. <Ref. to EN(H4SO)-71, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

F: FUEL INJECTOR CIRCUIT

CAUTION:
- **Check or repair only faulty parts.**
- **After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.**
- **WIRING DIAGRAM:**

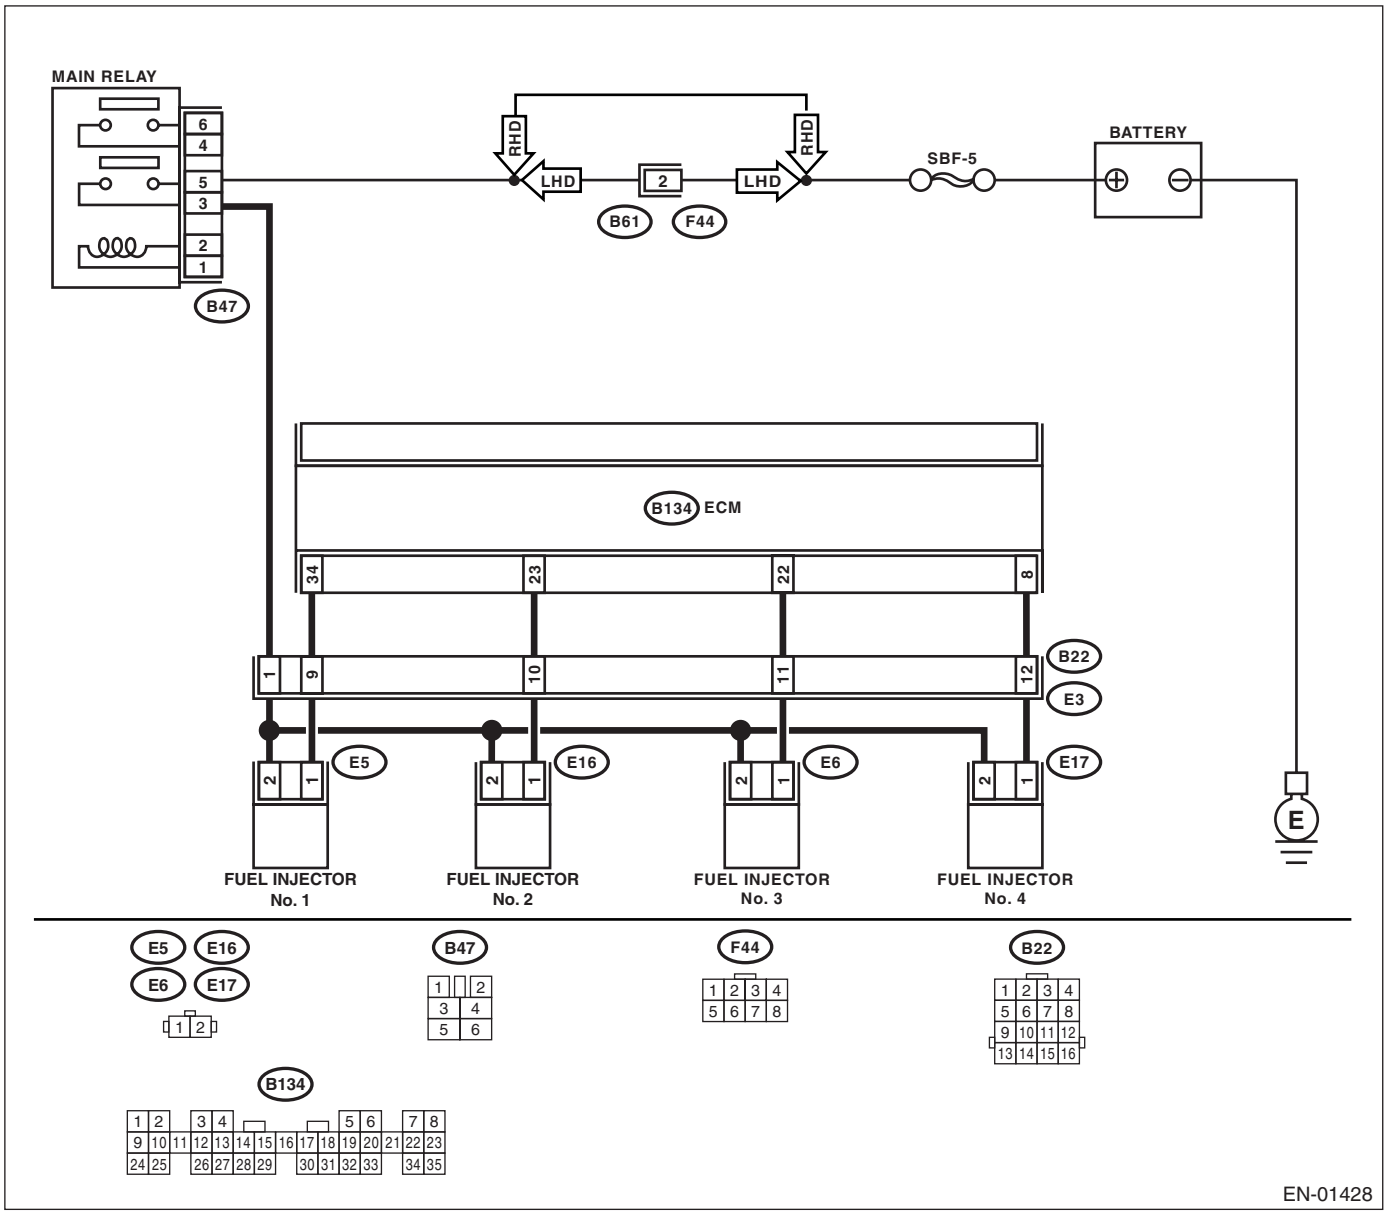

	Step	Check	Yes	No
1	**CHECK OPERATION OF EACH FUEL INJECTOR.** While cranking the engine, check that each fuel injector emits “operating” sound. Use a sound scope or attach a screwdriver to the injector for this check.	Dose the fuel injector operate?	Check the fuel pressure. <Ref. to ME(H4SO)-31, INSPECTION, Fuel Pressure.>	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK POWER SUPPLY TO EACH FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from #1 cylinder fuel injector. 3)Turn the ignition switch to ON. 4)Measure the power supply voltage between the fuel injector terminal and engine ground. ***Connector & terminal*** ***#1 (E5) No. 2 (+) — Engine ground (–):*** ***#2 (E16) No. 2 (+) — Engine ground (–):*** ***#3 (E6) No. 2 (+) — Engine ground (–):*** ***#4 (E17) No. 2 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and fuel injector connector • Poor contact in main relay connector • Poor contact in coupling connector (B22) • Poor contact in fuel injector connector
3	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***#1 (B134) No. 34 — (E5) No. 1:*** ***#2 (B134) No. 23 — (E16) No. 1:*** ***#3 (B134) No. 22 — (E6) No. 1:*** ***#4 (B134) No. 8 — (E17) No. 1:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector
4	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***#1 (B134) No. 34 — Chassis ground:*** ***#2 (B134) No. 23 — Chassis ground:*** ***#3 (B134) No. 22 — Chassis ground:*** ***#4 (B134) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair ground short circuit in harness between ECM and fuel injector connector.
5	**CHECK EACH FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between each fuel injector terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **6.**	Replace the faulty fuel injector.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Inspection using “General Diagnostic Table”. <Ref. to EN(H4SO)-260, INSPECTION, General Diagnostic Table.>

18.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Index
P0030	HO2S Heater Control Circuit (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-79, DTC P0030 — HO2S HEATER CONTROL CIRCUIT (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-82, DTC P0031 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-85, DTC P0032 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	<Ref. to EN(H4SO)-87, DTC P0037 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	<Ref. to EN(H4SO)-90, DTC P0038 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0066	Air Assisted Injector Control Circuit or Circuit Low	<Ref. to EN(H4SO)-92, DTC P0066 — AIR ASSISTED INJECTOR CONTROL CIRCUIT OR CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0067	Air Assisted Injector Control Circuit High	<Ref. to EN(H4SO)-94, DTC P0067 — AIR ASSISTED INJECTOR CONTROL CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input	<Ref. to EN(H4SO)-96, DTC P0107 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input	<Ref. to EN(H4SO)-99, DTC P0108 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0111	Intake Air Temperature Circuit Range/Performance	<Ref. to EN(H4SO)-102, DTC P0111 — INTAKE AIR TEMPERATURE CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0112	Intake Air Temperature Circuit Low Input	<Ref. to EN(H4SO)-104, DTC P0112 — INTAKE AIR TEMPERATURE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0113	Intake Air Temperature Circuit High Input	<Ref. to EN(H4SO)-106, DTC P0113 — INTAKE AIR TEMPERATURE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0117	Engine Coolant Temperature Circuit Low Input	<Ref. to EN(H4SO)-109, DTC P0117 — ENGINE COOLANT TEMPERATURE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0118	Engine Coolant Temperature Circuit High Input	<Ref. to EN(H4SO)-111, DTC P0118 — ENGINE COOLANT TEMPERATURE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0121	Throttle/Pedal Position Sensor/ Switch “A” Circuit Range/Performance	<Ref. to EN(H4SO)-114, DTC P0121 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0122	Throttle/Pedal Position Sensor/ Switch “A” Circuit Low Input	<Ref. to EN(H4SO)-116, DTC P0122 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0123	Throttle/Pedal Position Sensor/ Switch “A” Circuit High Input	<Ref. to EN(H4SO)-119, DTC P0123 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0125	Insufficient Coolant Temperature for Closed Loop Fuel Control	<Ref. to EN(H4SO)-121, DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0129	Atmospheric Pressure Sensor Circuit Range/Performance	<Ref. to EN(H4SO)-122, DTC P0129 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0130	O_2 Sensor Circuit (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-123, DTC P0130 — O2 SENSOR CIRCUIT (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0131	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-125, DTC P0131 — O2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0132	O_2 Sensor Circuit High Voltage (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-127, DTC P0132 — O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0133	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-129, DTC P0133 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0134	O_2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	<Ref. to EN(H4SO)-131, DTC P0134 — O2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0137	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	<Ref. to EN(H4SO)-133, DTC P0137 — O2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0138	O_2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	<Ref. to EN(H4SO)-135, DTC P0138 — O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0139	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 2)	<Ref. to EN(H4SO)-138, DTC P0139 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0171	System too Lean (Bank 1)	<Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0172	System too Rich (Bank 1)	<Ref. to EN(H4SO)-140, DTC P0172 — SYSTEM TOO RICH (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0301	Cylinder 1 Misfire Detected	<Ref. to EN(H4SO)-142, DTC P0301 — CYLINDER 1 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0302	Cylinder 2 Misfire Detected	<Ref. to EN(H4SO)-142, DTC P0302 — CYLINDER 2 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0303	Cylinder 3 Misfire Detected	<Ref. to EN(H4SO)-142, DTC P0303 — CYLINDER 3 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0304	Cylinder 4 Misfire Detected	<Ref. to EN(H4SO)-143, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)	<Ref. to EN(H4SO)-150, DTC P0327 — KNOCK SENSOR 1 CIRCUIT LOW INPUT (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)	<Ref. to EN(H4SO)-152, DTC P0328 — KNOCK SENSOR 1 CIRCUIT HIGH INPUT (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0335	Crankshaft Position Sensor “A” Circuit	<Ref. to EN(H4SO)-154, DTC P0335 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0336	Crankshaft Position Sensor “A” Circuit Range/Performance	<Ref. to EN(H4SO)-156, DTC P0336 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0340	Camshaft Position Sensor “A” Circuit (Bank 1 or Single Sensor)	<Ref. to EN(H4SO)-158, DTC P0340 — CAMSHAFT POSITION SENSOR “A” CIRCUIT (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0341	Camshaft Position Sensor “A” Circuit Range/Performance (Bank 1 or Single Sensor)	<Ref. to EN(H4SO)-160, DTC P0341 — CAMSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0400	Exhaust Gas Recirculation Flow	<Ref. to EN(H4SO)-163, DTC P0400 — EXHAUST GAS RECIRCULATION FLOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0420	Catalyst System Efficiency Below Threshold (Bank 1)	<Ref. to EN(H4SO)-166, DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low	<Ref. to EN(H4SO)-168, DTC P0458 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0459	Evaporative Emission Control System Purge Control Valve Circuit High	<Ref. to EN(H4SO)-171, DTC P0459 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0462	Fuel Level Sensor Circuit Low Input	<Ref. to EN(H4SO)-173, DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0463	Fuel Level Sensor Circuit High Input	<Ref. to EN(H4SO)-176, DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0483	Cooling Fan Rationality Check	<Ref. to EN(H4SO)-180, DTC P0483 — COOLING FAN RATIONALITY CHECK —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0502	Vehicle Speed Sensor Circuit Low Input	<Ref. to EN(H4SO)-182, DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0503	Vehicle Speed Sensor Intermittent/ Erratic/High	<Ref. to EN(H4SO)-183, DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0506	Idle Control System RPM Lower Than Expected	<Ref. to EN(H4SO)-185, DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0507	Idle Control System RPM Higher Than Expected	<Ref. to EN(H4SO)-187, DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0512	Starter Request Circuit	<Ref. to EN(H4SO)-189, DTC P0512 — STARTER REQUEST CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0513	Incorrect Immobilizer Key	<Ref. to IM-15, DTC P0513 INCORRECT IMMOBILIZER KEY, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P0519	Idle Control System Malfunction (Fail-Safe)	<Ref. to EN(H4SO)-192, DTC P0519 — IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0558	Generator Circuit Low Input	<Ref. to EN(H4SO)-194, DTC P0558 — GENERATOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0559	Generator Circuit High Input	<Ref. to EN(H4SO)-195, DTC P0559 — GENERATOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0562	System Voltage Low	<Ref. to EN(H4SO)-196, DTC P0562 — SYSTEM VOLTAGE LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0563	System Voltage High	<Ref. to EN(H4SO)-198, DTC P0563 — SYSTEM VOLTAGE HIGH—, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0565	Cruise Control On Signal	<Ref. to EN(H4SO)-201, DTC P0565 — CRUISE CONTROL ON SIGNAL —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0604	Internal Control Module Random Access Memory (RAM) Error	<Ref. to EN(H4SO)-203, DTC P0604 — INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0691	Cooling Fan 1 Control Circuit Low	<Ref. to EN(H4SO)-205, DTC P0691 — COOLING FAN 1 CONTROL CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0692	Cooling Fan 1 Control Circuit High	<Ref. to EN(H4SO)-208, DTC P0692 — COOLING FAN 1 CONTROL CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0703	Torque Converter/Brake Switch “B” Circuit	<Ref. to EN(H4SO)-211, DTC P0703 — TORQUE CONVERTER/BRAKE SWITCH “B” CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0705	Transmission Range Sensor Circuit (PRNDL Input)	<Ref. to 4AT-109, CHECK INHIBITOR SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>
P0710	Transmission Fluid Temperature Sensor Circuit	<Ref. to 4AT-45, DTC 27 ATF TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0716	Torque Converter Turbine Speed Sensor	<Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0720	Output Speed Sensor Circuit	<Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0726	Engine Speed Input Circuit Range/ Performance	<Ref. to 4AT-41, DTC 11 ENGINE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0731	Gear 1 Incorrect Ratio	<Ref. to EN(H4SO)-214, DTC P0731 — GEAR 1 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0732	Gear 2 Incorrect Ratio	<Ref. to EN(H4SO)-214, DTC P0732 — GEAR 2 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0733	Gear 3 Incorrect Ratio	<Ref. to EN(H4SO)-214, DTC P0733 — GEAR 3 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0734	Gear 4 Incorrect Ratio	<Ref. to EN(H4SO)-215, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0741	Torque Converter Clutch Circuit Performance or Stuck Off	<Ref. to EN(H4SO)-216, DTC P0741 — TORQUE CONVERTER CLUTCH CIRCUIT PERFORMANCE OR STUCK OFF —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0743	Torque Converter Clutch Circuit Electrical	<Ref. to 4AT-82, DTC 77 LOCK-UP DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0748	Pressure Control Solenoid “A” Electrical	<Ref. to 4AT-76, DTC 75 LINE PRESSURE DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0753	Shift Solenoid “A” Electrical	<Ref. to 4AT-64, DTC 71 SHIFT SOLENOID 1, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0758	Shift Solenoid “B” Electrical	<Ref. to 4AT-67, DTC 72 SHIFT SOLENOID 2, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0771	Low Clutch Timing Solenoid	<Ref. to 4AT-70, DTC 73 LOW CLUTCH TIMING SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0778	Pressure Control Solenoid “B” Electrical	<Ref. to 4AT-79, DTC 76 2-4 BRAKE DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0785	Shift/Timing Solenoid	<Ref. to 4AT-73, DTC 74 2-4 BRAKE TIMING SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0851	Neutral Switch Input Circuit Low	<Ref. to EN(H4SO)-218, DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> <Ref. to EN(H4SO)-220, DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW (AT VEHICLES) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0852	Neutral Switch Input Circuit High	<Ref. to EN(H4SO)-222, DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH (MT VEHICLES) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0864	TCM Communication Circuit Range/ Performance	<Ref. to EN(H4SO)-226, DTC P0864 — TCM COMMUNICATION CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0865	TCM Communication Circuit Low	<Ref. to EN(H4SO)-228, DTC P0865 — TCM COMMUNICATION CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0866	TCM Communication Circuit High	<Ref. to EN(H4SO)-230, DTC P0866 — TCM COMMUNICATION CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1110	Atmospheric Pressure Sensor Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-232, DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1111	Atmospheric Pressure Sensor Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-233, DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P1134	A/F Sensor Micro-computer Problem	<Ref. to EN(H4SO)-234, DTC P1134 — A/F SENSOR MICRO-COMPUTER PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1137	O_2 Sensor Circuit (Lamda=1) (Bank1 Sensor1)	<Ref. to EN(H4SO)-236, DTC P1137 — O2 SENSOR CIRCUIT (LAMDA=1) (BANK1 SENSOR1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1492	EGR Solenoid Valve Signal #1 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-238, DTC P1492 — EGR SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1493	EGR Solenoid Valve Signal #1 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-238, DTC P1493 — EGR SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1494	EGR Solenoid Valve Signal #2 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-238, DTC P1494 — EGR SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1495	EGR Solenoid Valve Signal #2 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-238, DTC P1495 — EGR SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1496	EGR Solenoid Valve Signal #3 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-238, DTC P1496 — EGR SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1497	EGR Solenoid Valve Signal #3 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-238, DTC P1497 — EGR SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1498	EGR Solenoid Valve Signal #4 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-239, DTC P1498 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1499	EGR Solenoid Valve Signal #4 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-241, DTC P1499 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1510	ISC Solenoid Valve Signal #1 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-243, DTC P1510 — ISC SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1511	ISC Solenoid Valve Signal #1 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-243, DTC P1511 — ISC SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1512	ISC Solenoid Valve Signal #2 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-243, DTC P1512 — ISC SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1513	ISC Solenoid Valve Signal #2 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-243, DTC P1513 — ISC SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1514	ISC Solenoid Valve Signal #3 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-243, DTC P1514 — ISC SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1515	ISC Solenoid Valve Signal #3 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-243, DTC P1515 — ISC SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1516	ISC Solenoid Valve Signal #4 Circuit Malfunction (Low Input)	<Ref. to EN(H4SO)-244, DTC P1516 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1517	ISC Solenoid Valve Signal #4 Circuit Malfunction (High Input)	<Ref. to EN(H4SO)-246, DTC P1517 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1518	Starter Switch Circuit Low input	<Ref. to EN(H4SO)-247, DTC P1518 — STARTER SWITCH CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P1560	Back-up Voltage Circuit Malfunction	<Ref. to EN(H4SO)-250, DTC P1560 — BACK-UP VOLTAGE CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1570	Antenna	<Ref. to IM-16, DTC P1570 ANTENNA, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1571	Reference Code Incompatibility	<Ref. to IM-18, DTC P1571 REFERENCE CODE INCOMPATIBILITY, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1572	IMM Circuit Failure (Except antenna circuit)	<Ref. to IM-19, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1574	Key Communication Failure	<Ref. to IM-23, DTC P1574 KEY COMMUNICATION FAILURE, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1576	EGI Control Module EEPROM	<Ref. to IM-23, DTC P1576 EGI CONTROL MODULE EEPROM, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1577	IMM Control Module EEPROM	<Ref. to IM-23, DTC P1577 IMM CONTROL MODULE EEPROM, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1698	Engine Torque Control Cut Signal Circuit Low Input	<Ref. to EN(H4SO)-252, DTC P1698 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1699	Engine Torque Control Cut Signal Circuit High Input	<Ref. to EN(H4SO)-254, DTC P1699 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1700	Throttle Position Sensor	<Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1711	Engine Torque Control Signal 1 Circuit Malfunction	<Ref. to EN(H4SO)-256, DTC P1711 — ENGINE TORQUE CONTROL SIGNAL 1 CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1712	Engine Torque Control Signal 2 Circuit Malfunction	<Ref. to EN(H4SO)-258, DTC P1712 — ENGINE TORQUE CONTROL SIGNAL 2 CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

19.Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC P0030 — HO2S HEATER CONTROL CIRCUIT (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, Inspection Mode.> .

- **WIRING DIAGRAM:**

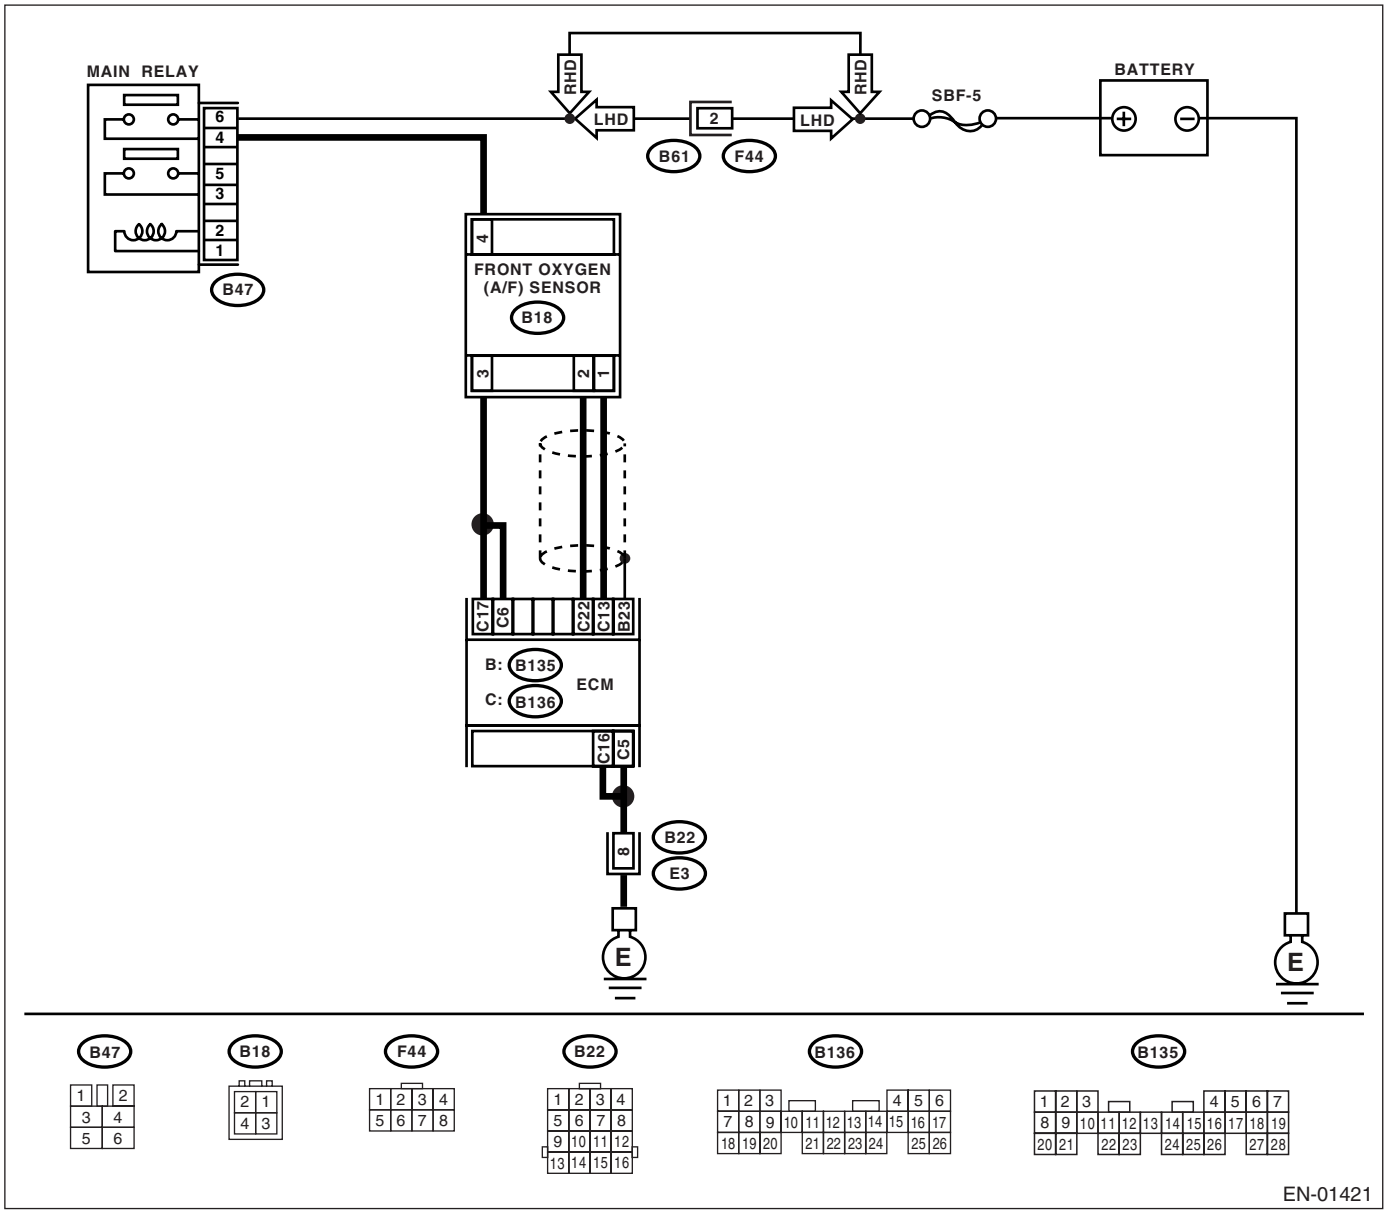

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Start the engine and warm-up engine. 2)Turn the ignition switch to OFF. 3)Disconnect the connectors from ECM and front oxygen (A/F) sensor. 4)Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B136) No. 6 — (B18) No. 3:*** ***(B136) No. 17 — (B18) No. 3:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B136) No. 13 — (B18) No. 1:*** ***(B136) No. 22 — (B18) No. 2:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.
3	**CHECK HARNESS BETWEEN MAIN RELAY AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** Measure the resistance of harness between main relay and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B47) No. 4 — (B18) No. 4:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.
4	**CHECK FRONT OXYGEN (A/F) SENSOR.** Measure the resistance between front oxygen (A/F) sensor connector terminals. ***Terminals*** ***No. 3 — No. 4:***	Is the resistance less than 5 Ω?	Go to step **5.**	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>
5	**CHECK POOR CONTACT.** Check the poor contact in ECM and front oxygen (A/F) sensor connector.	Is there poor contact in ECM or front oxygen (A/F) sensor connector?	Repair the poor contact in ECM or front oxygen (A/F) sensor connector.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

B: DTC P0031 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

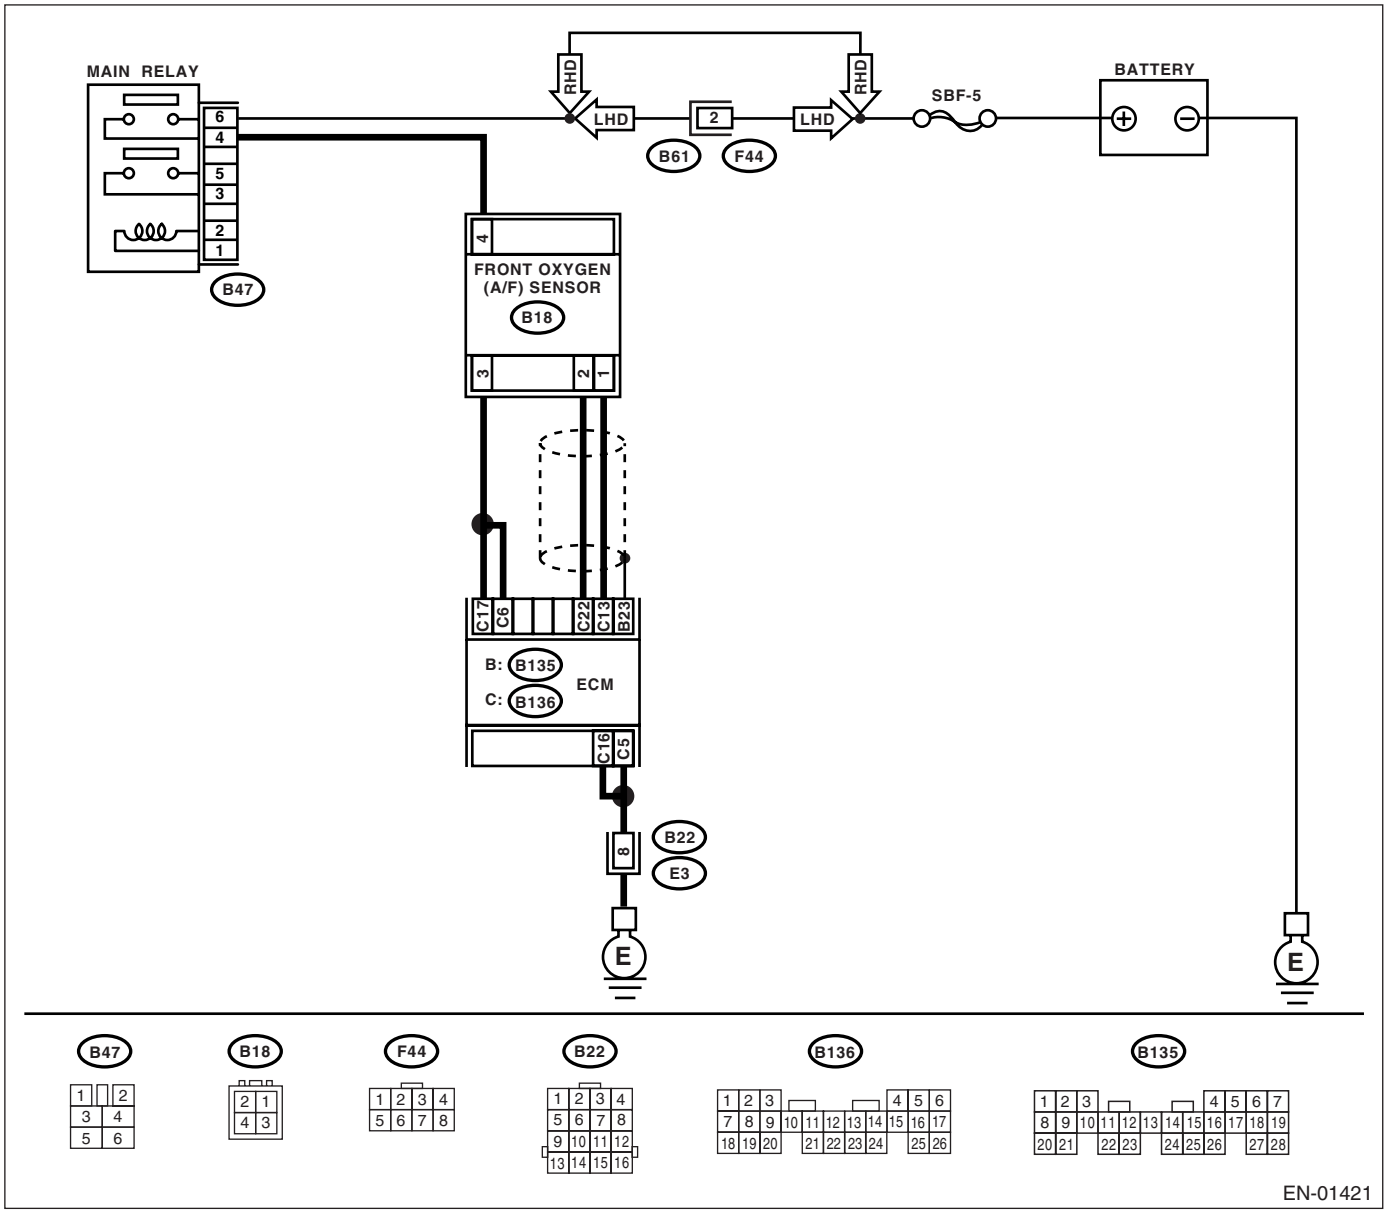

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool display DTC P0031 and P0037 at the same time?	Go to step **2.**	Go to step **5.**

	Step	Check	Yes	No
2	**CHECK POWER SUPPLY TO FRONT OXYGEN (A/F) SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from front oxygen (A/F) sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between front oxygen (A/F) sensor connector and engine ground. ***Connector & terminal*** ***(B18) No. 4 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Repair power supply line. NOTE: In this case, repair the following: • Open circuit in harness between main relay and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in main relay connector
3	**CHECK GROUND CIRCUIT OF ECM.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 5 — Chassis ground:*** ***(B136) No. 16 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine ground terminal • Poor contact in ECM connector Poor contact in coupling connector
4	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 0.2 A?	Repair poor contact in connector. NOTE: In this case, repair the following: • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector	Go to step **5.**
5	**CHECK INPUT SIGNAL FROM ECM.** 1)Start and idle the engine. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 6 (+) — Chassis ground (–):*** ***(B136) No. 17 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **7.**	Go to step **6.**
6	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 6 (+) — Chassis ground (–):*** ***(B136) No. 17 (+) — Chassis ground (–):***	Does the voltage change by shaking the ECM harness and connector?	Repair poor contact in ECM connector.	Go to step **7.**

	Step	Check	Yes	No
7	**CHECK FRONT OXYGEN (A/F) SENSOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between front oxygen (A/F) sensor connector terminals. ***Terminals*** ***No. 3 — No. 4:***	Is the resistance less than 10 Ω?	Repair harness and connector. NOTE: In this case, repair the following: • Open or ground short circuit in harness between front oxygen (A/F) sensor and ECM connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-51, Fuel.>

C: DTC P0032 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

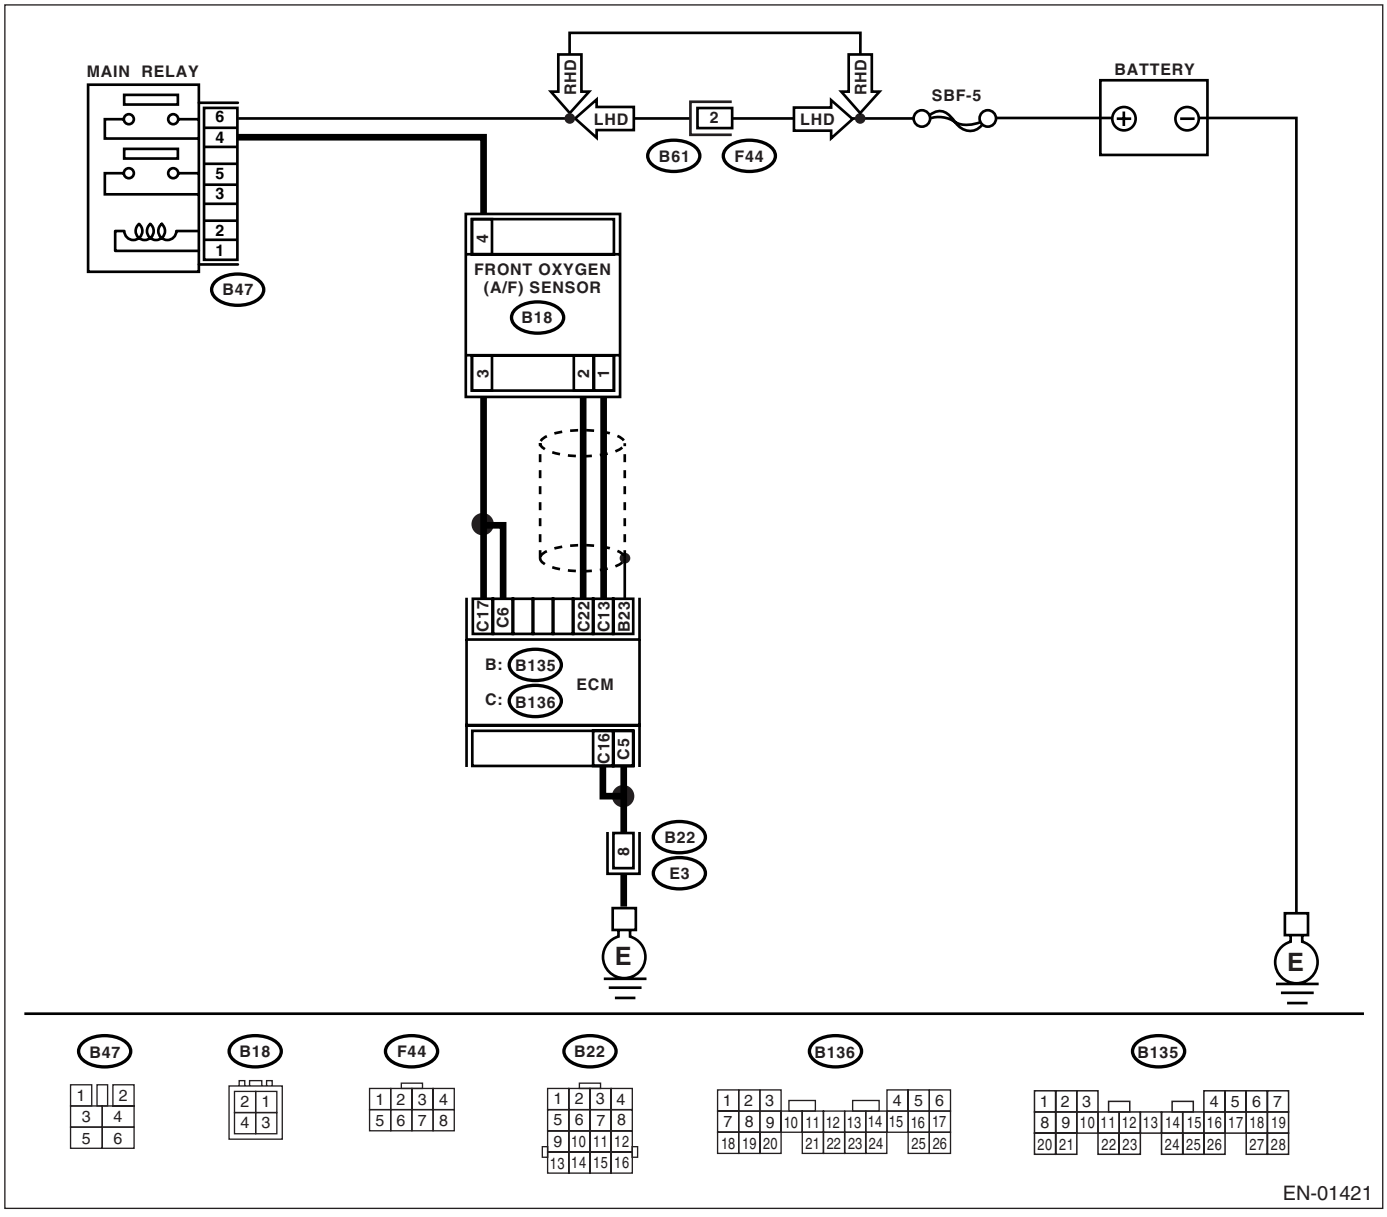

Step		Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 6 (+) — Chassis ground (−):*** ***(B136) No. 17 (+) — Chassis ground (−):***	Is the voltage more than 8 V?	Go to step **2.**	Go to step **3.**

	Step	Check	Yes	No
2	**CHECK FRONT OXYGEN (A/F) SENSOR HEATER CURRENT.** 1)Turn the ignition switch to OFF. 2)Repair the battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. 3)Turn the ignition switch to ON. 4)Read the data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 2.3 A?	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	END
3	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 6 (+) — Chassis ground (−):*** ***(B136) No. 17 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.	END

D: DTC P0037 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

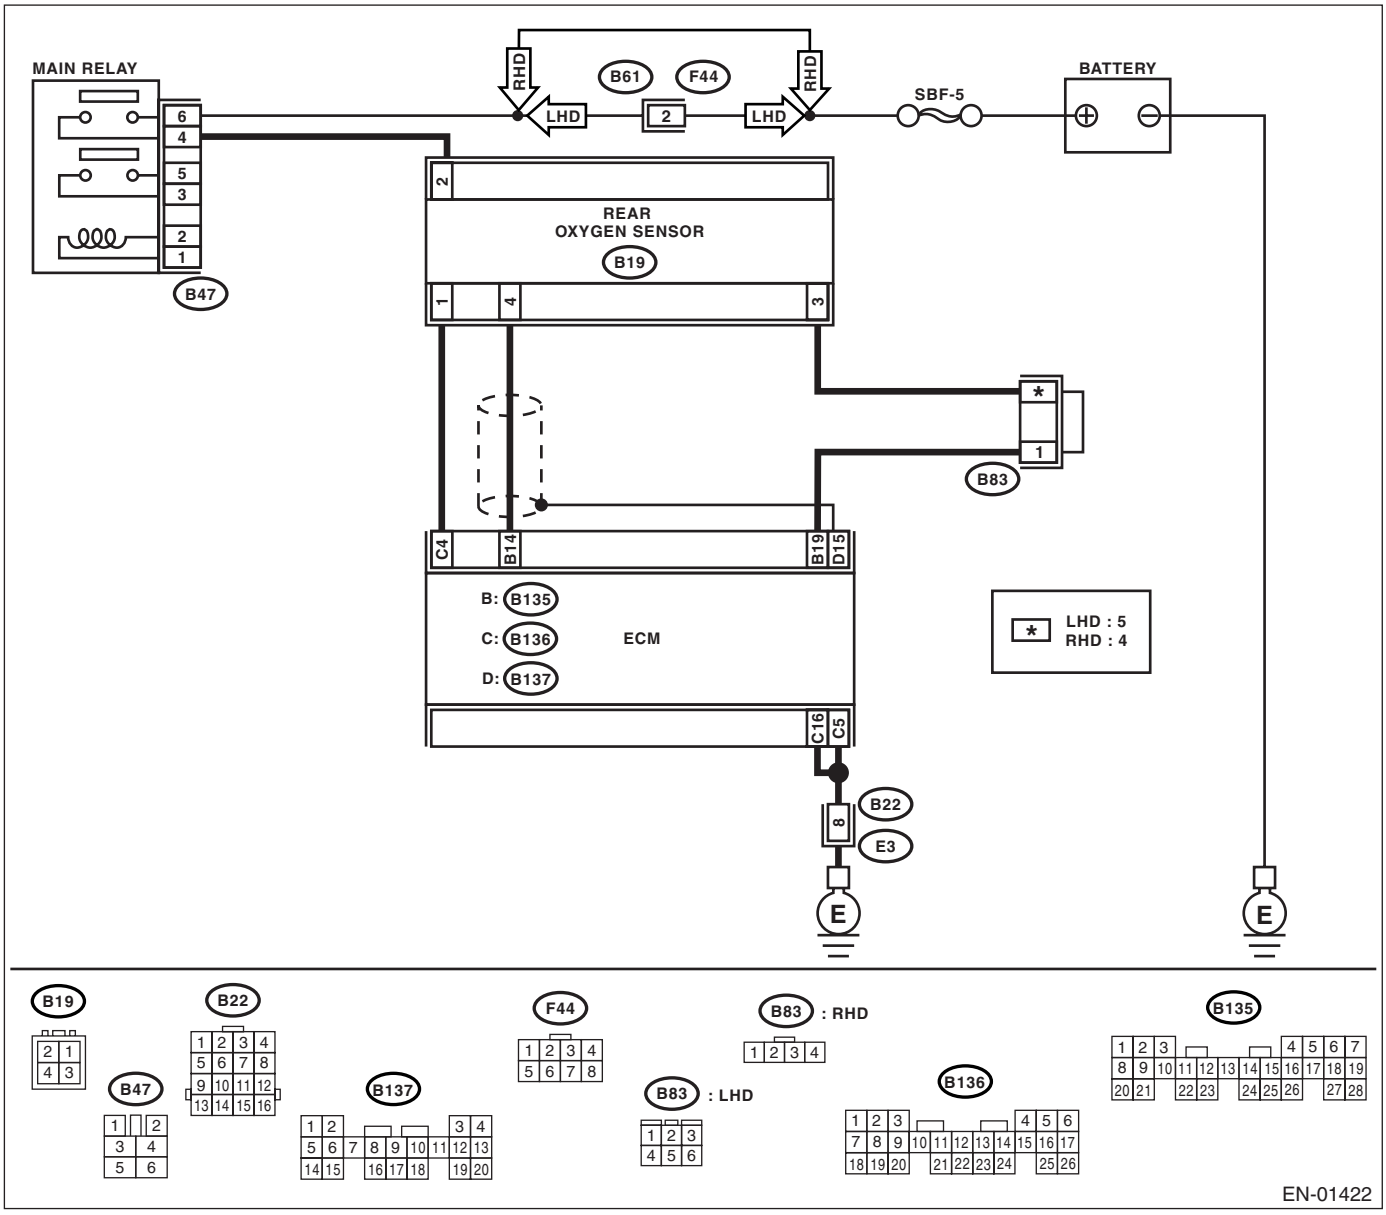

	Step	Check	Yes	No
1	**CHECK GROUND CIRCUIT OF ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 5 — Chassis ground:*** ***(B136) No. 16 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **2.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine ground terminal • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of rear oxygen sensor heater current using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 0.2 A?	Repair the connector. NOTE: In this case, repair the following: • Poor contact in rear oxygen sensor connector • Poor contact in rear oxygen sensor connecting harness connector • Poor contact in ECM connector	Go to step **3.**
3	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start and idle the engine. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 4 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **6.**	Go to step **4.**
4	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 4 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair poor contact in ECM connector.	Go to step **5.**
5	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Disconnect the connector from rear oxygen sensor. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 4 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Repair battery short circuit in harness between ECM and rear oxygen sensor connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

	Step	Check	Yes	No
6	**CHECK POWER SUPPLY TO REAR OXYGEN SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between rear oxygen sensor connector and engine ground or chassis ground. ***Connector & terminal*** ***(B19) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Repair power supply line. NOTE: In this case, repair the following: • Open circuit in harness between main relay and rear oxygen sensor connector • Poor contact in rear oxygen sensor connector • Poor contact in coupling connector
7	**CHECK REAR OXYGEN SENSOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between rear oxygen sensor connector terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 30 Ω?	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector • Poor contact in coupling connector	Replace the rear oxygen sensor. <Ref. to FU(H4SO)-46, Rear Oxygen Sensor.>

E: DTC P0038 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

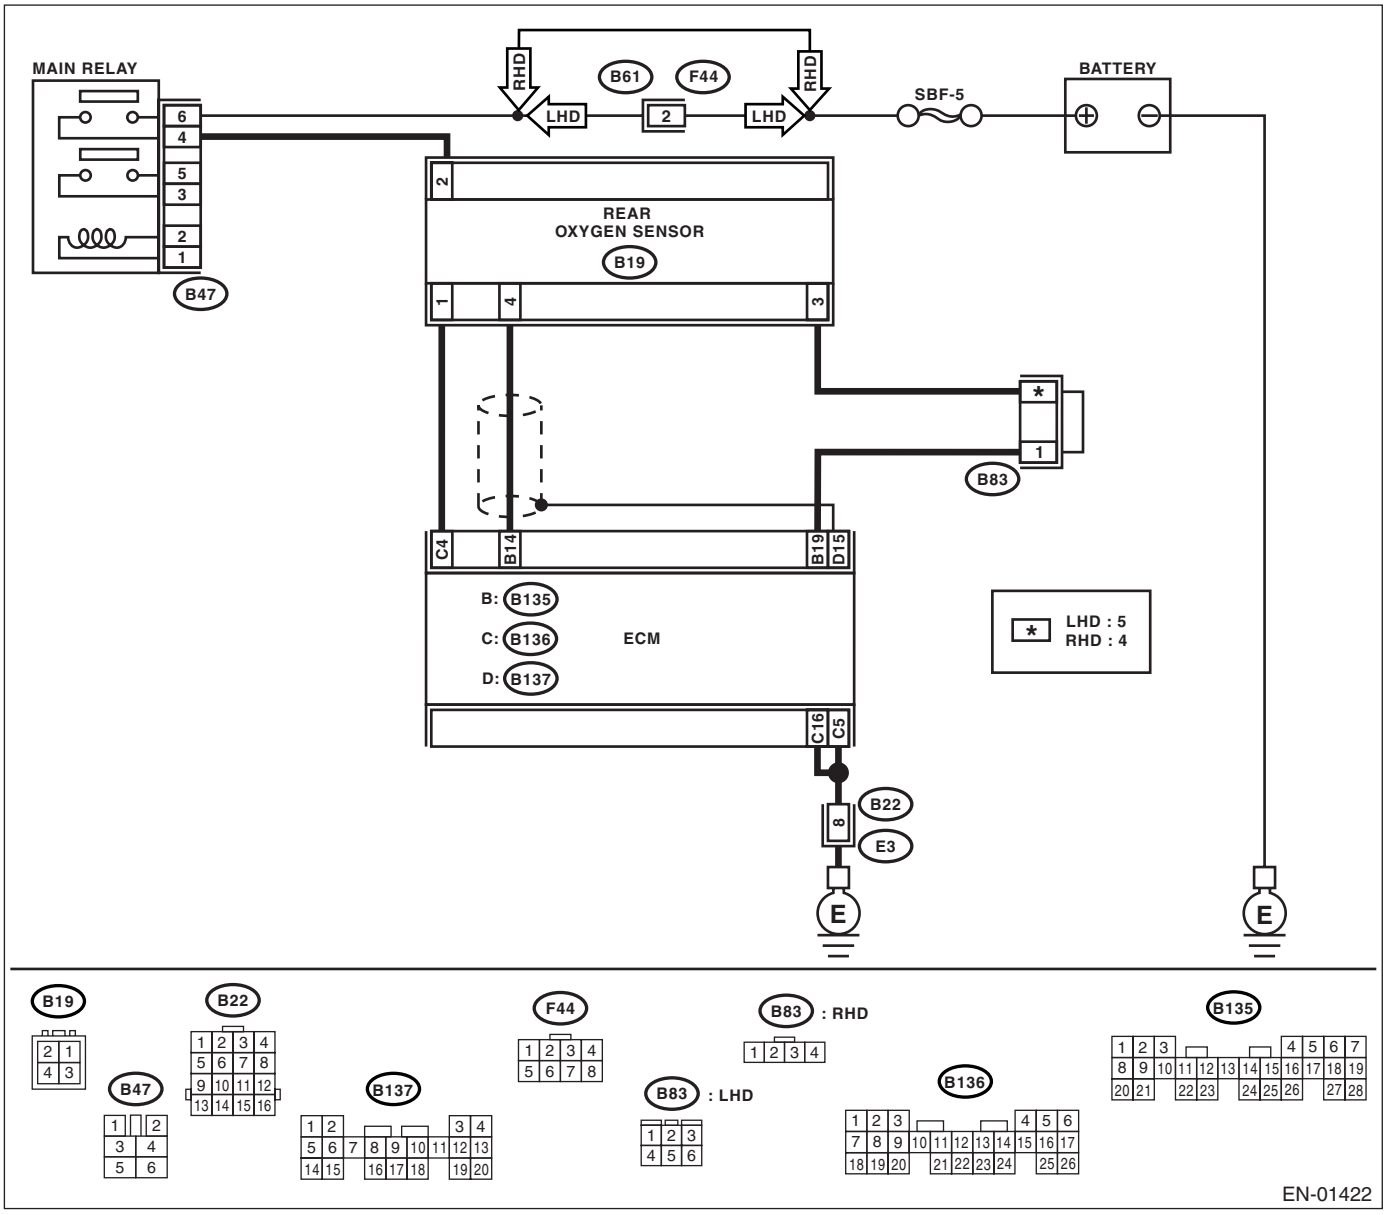

Step		Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 4 (+) — Chassis ground (−):***	Is the voltage more than 8 V?	Go to step **2.**	Go to step **3.**

	Step	Check	Yes	No
2	**CHECK CURRENT DATA.** 1)Turn the ignition switch to OFF. 2)Repair the battery short circuit in harness between ECM and rear oxygen sensor connector. 3)Turn the ignition switch to ON. 4)Read the data of rear oxygen sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 7 A?	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	END
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	END

F: DTC P0066 — AIR ASSISTED INJECTOR CONTROL CIRCUIT OR CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

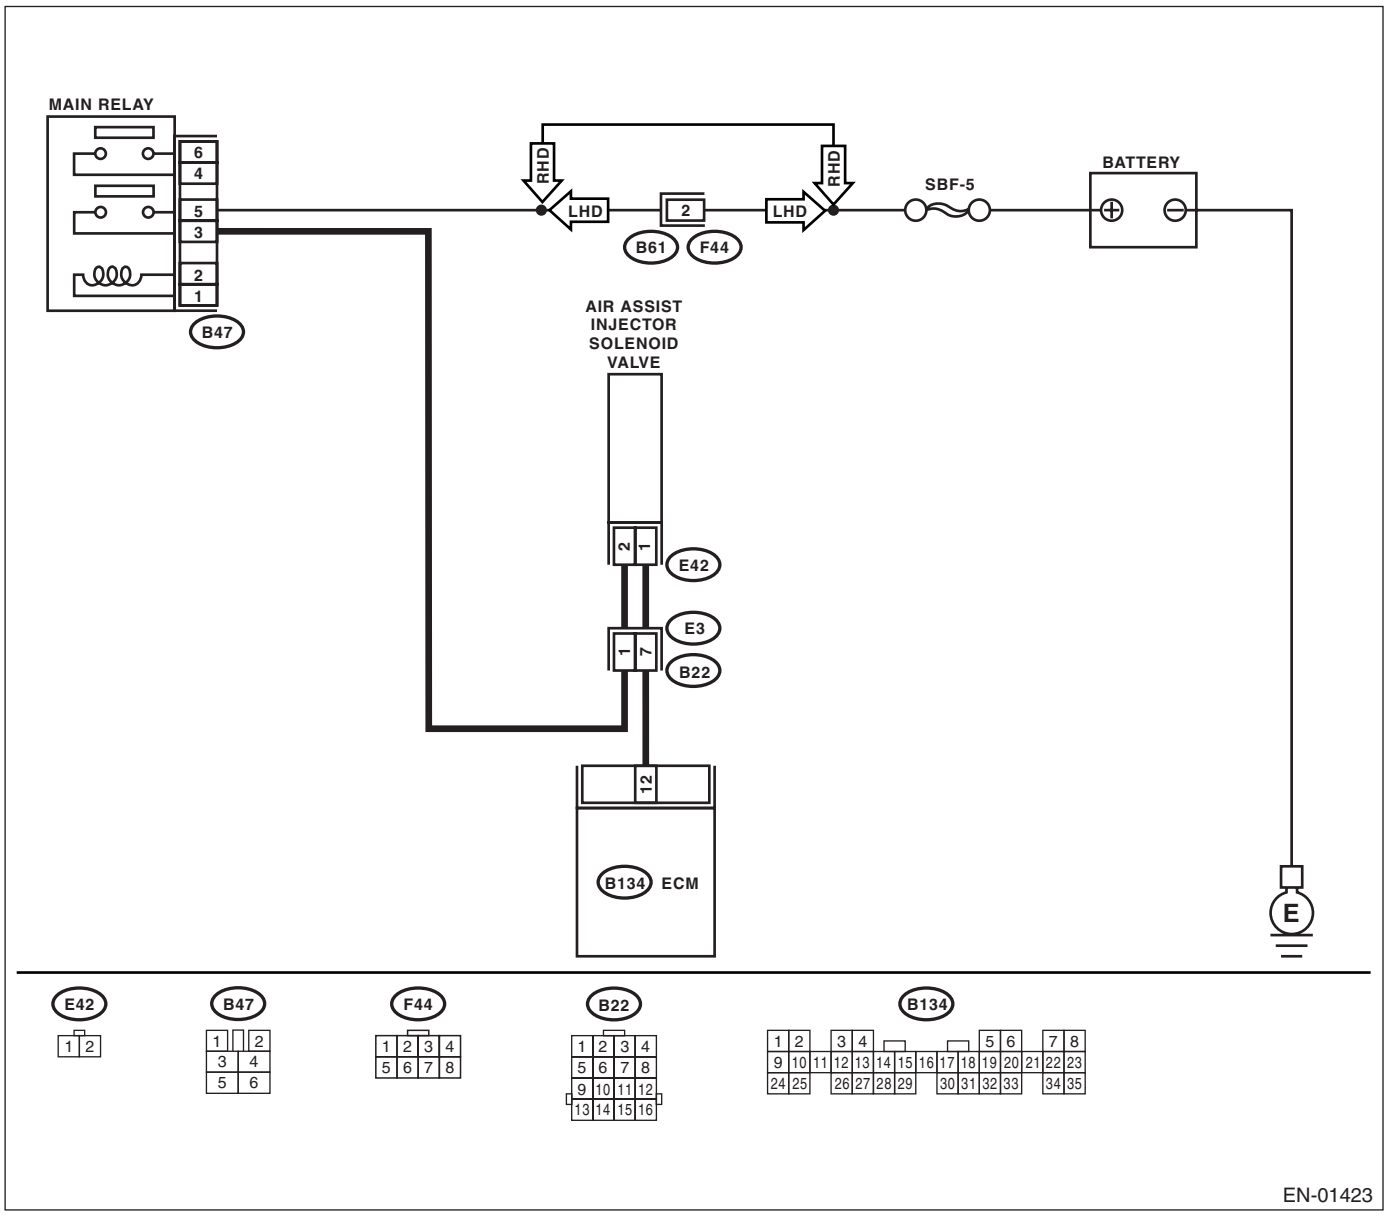

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn ignition switch to ON. 2)Measure voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair poor contact in ECM connector.	Go to step **2.**
2	**CHECK POWER SUPPLY TO AIR ASSIST INJECTOR SOLENOID VALVE.** 1)Turn ignition switch to OFF. 2)Disconnect connector from air assist injector solenoid valve. 3)Turn ignition switch to ON. 4)Measure voltage between air assist injector solenoid valve and engine ground. ***Connector & terminal*** ***(E42) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between air assist injector solenoid valve and main relay connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN ECM AND AIR ASSIST INJECTOR SOLENOID VALVE CONNECTOR.** 1)Turn ignition switch to OFF. 2)Disconnect connector from ECM. 3)Measure resistance of harness between ECM and air assist injector solenoid valve connector. ***Connector & terminal*** ***(B134) No. 12— (E42) No. 1:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and air assist injector solenoid valve connector • Poor contact in coupling connector
4	**CHECK HARNESS BETWEEN ECM AND AIR ASSIST INJECTOR SOLENOID VALVE CONNECTOR.** Measure resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 12— Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair ground short circuit in harness between ECM and air assist injector solenoid valve connector.
5	**CHECK POOR CONTACT.** Check poor contact in ECM and air assist injector solenoid valve connectors.	Is there poor contact in ECM and air assist injector solenoid valve connectors?	Repair poor contact in ECM and air assist injector solenoid valve connectors.	Replace air assist injector solenoid valve. <Ref. to FU(H4SO)-37, Air Assist Injector Solenoid Valve.>

G: DTC P0067 — AIR ASSISTED INJECTOR CONTROL CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

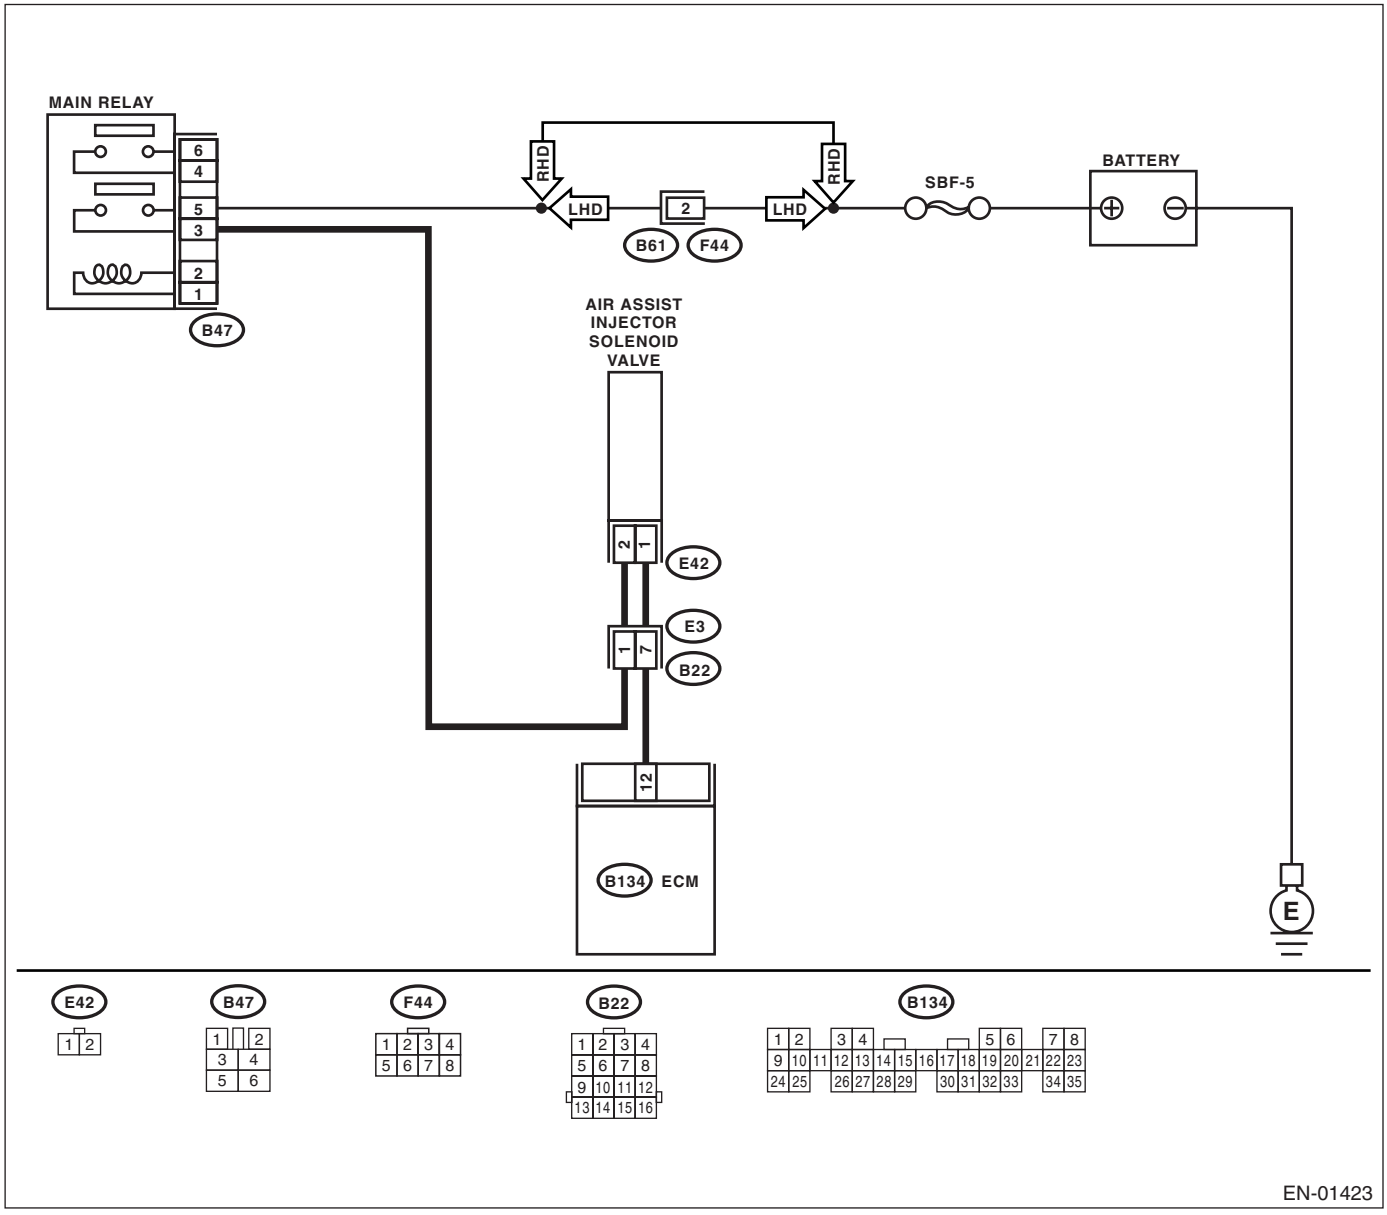

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn ignition switch to ON. 2)Measure voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Go to step **3.**
2	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn ignition switch to OFF. 2)Disconnect connector from air assist injector solenoid valve. 3)Turn ignition switch to ON. 4)Measure voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and air assist injector solenoid valve connector. After repair, replace ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Replace air assist injector solenoid valve <Ref. to FU(H4SO)-37, Air Assist Injector Solenoid Valve.> and ECM <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>
3	**CHECK OUTPUT SIGNAL FROM ECM.** Measure voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 12 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair battery short circuit in harness between ECM and air assist injector solenoid valve connector. After repair, replace ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Contact with your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

H: DTC P0107 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

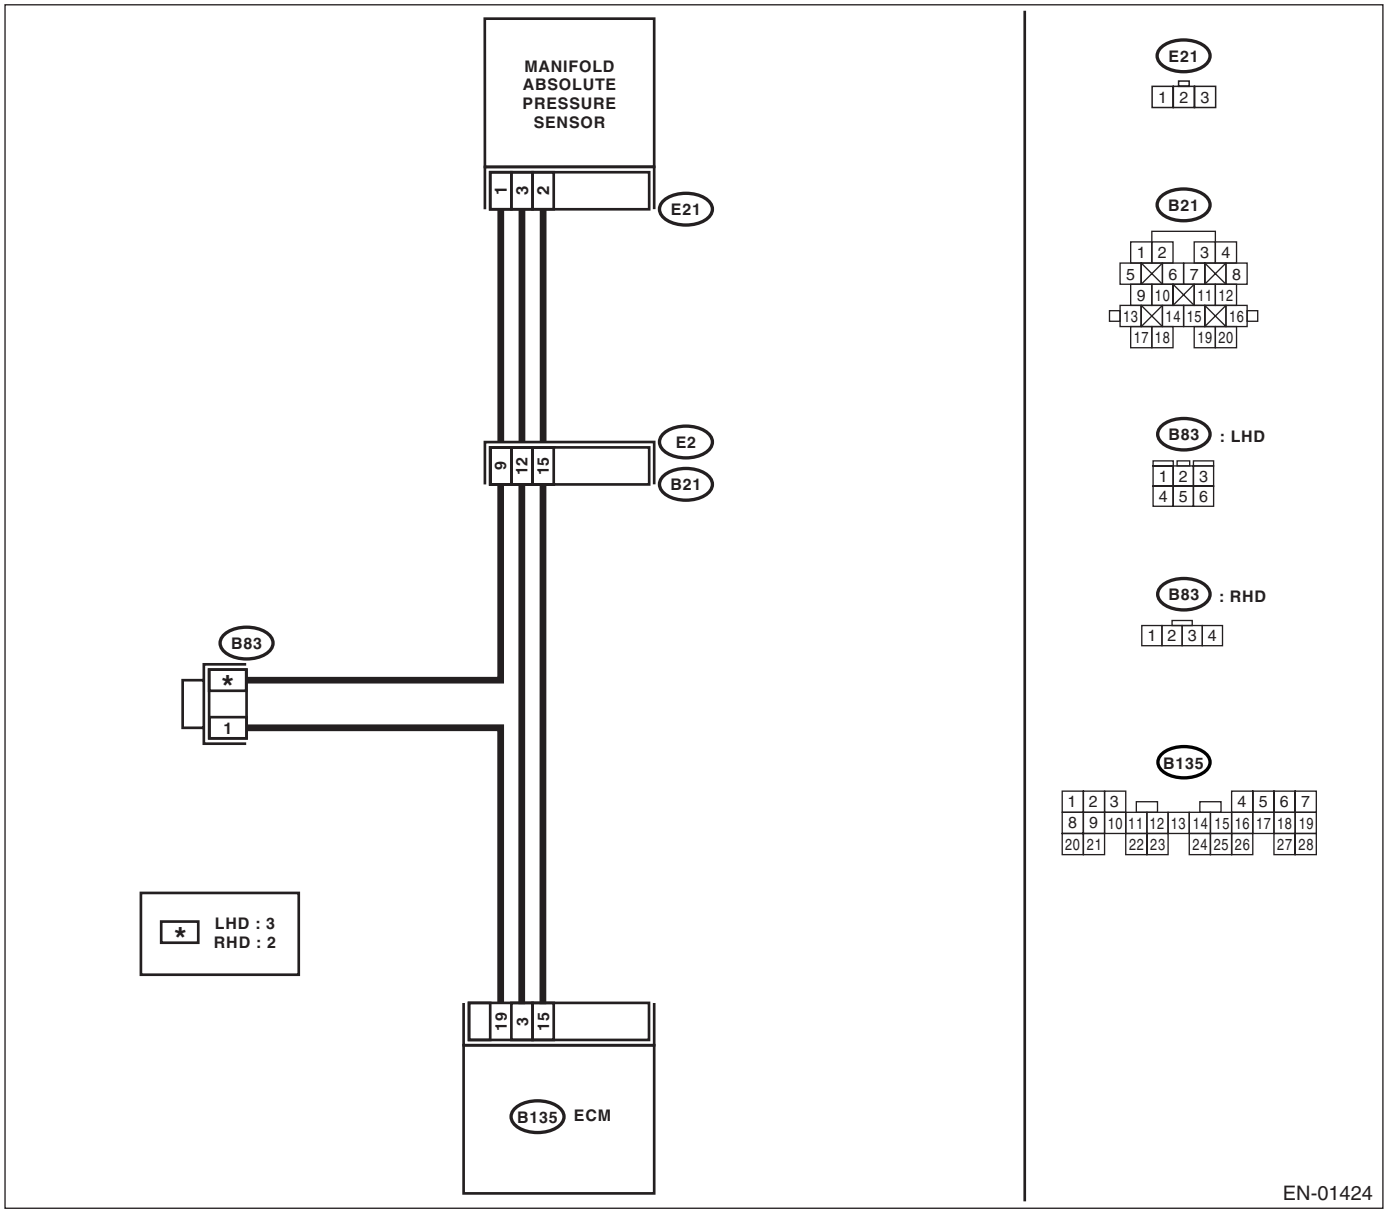

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the measured value less than 13.3 kPa (100 mmHg, 3.94 inHg)?	Go to step **3.**	Go to step **2.**
2	**CHECK POOR CONTACT.** Check poor contact in ECM and manifold absolute pressure sensor connector.	Is there poor contact in ECM or manifold absolute pressure sensor connector?	Repair poor contact in ECM or manifold absolute pressure sensor connector.	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.
3	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **5.**	Go to step **4.**
4	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 3 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair poor contact in ECM connector.	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 15 (+) — Chassis ground (−):***	Is the voltage less than 0.2 V?	Go to step **7.**	Go to step **6.**
6	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR)** Read the data of atmospheric absolute pressure signal using Subaru Select Monitor. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.>	Is the measured value more than 13.3 kPa (100 mmHg, 3.94 inHg) by shaking the harness and connector of ECM?	Repair poor contact in ECM connector.	Go to step **7.**

	Step	Check	Yes	No
7	**CHECK HARNESS BETWEEN MANIFOLD ABSOLUTE PRESSURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from manifold absolute pressure sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E21) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **8.**	Repair open circuit in harness between ECM and manifold absolute pressure sensor connector.
8	**CHECK HARNESS BETWEEN MANIFOLD ABSOLUTE PRESSURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B135) No. 19 — (E20) No. 1:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair open circuit in harness between ECM and manifold absolute pressure sensor connector.
9	**CHECK POOR CONTACT.** Check poor contact in manifold absolute pressure sensor connector.	Is there poor contact in manifold absolute pressure sensor connector?	Repair poor contact in manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <Ref. to FU(H4SO)-33, Manifold Absolute Pressure Sensor.>

I: DTC P0108 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

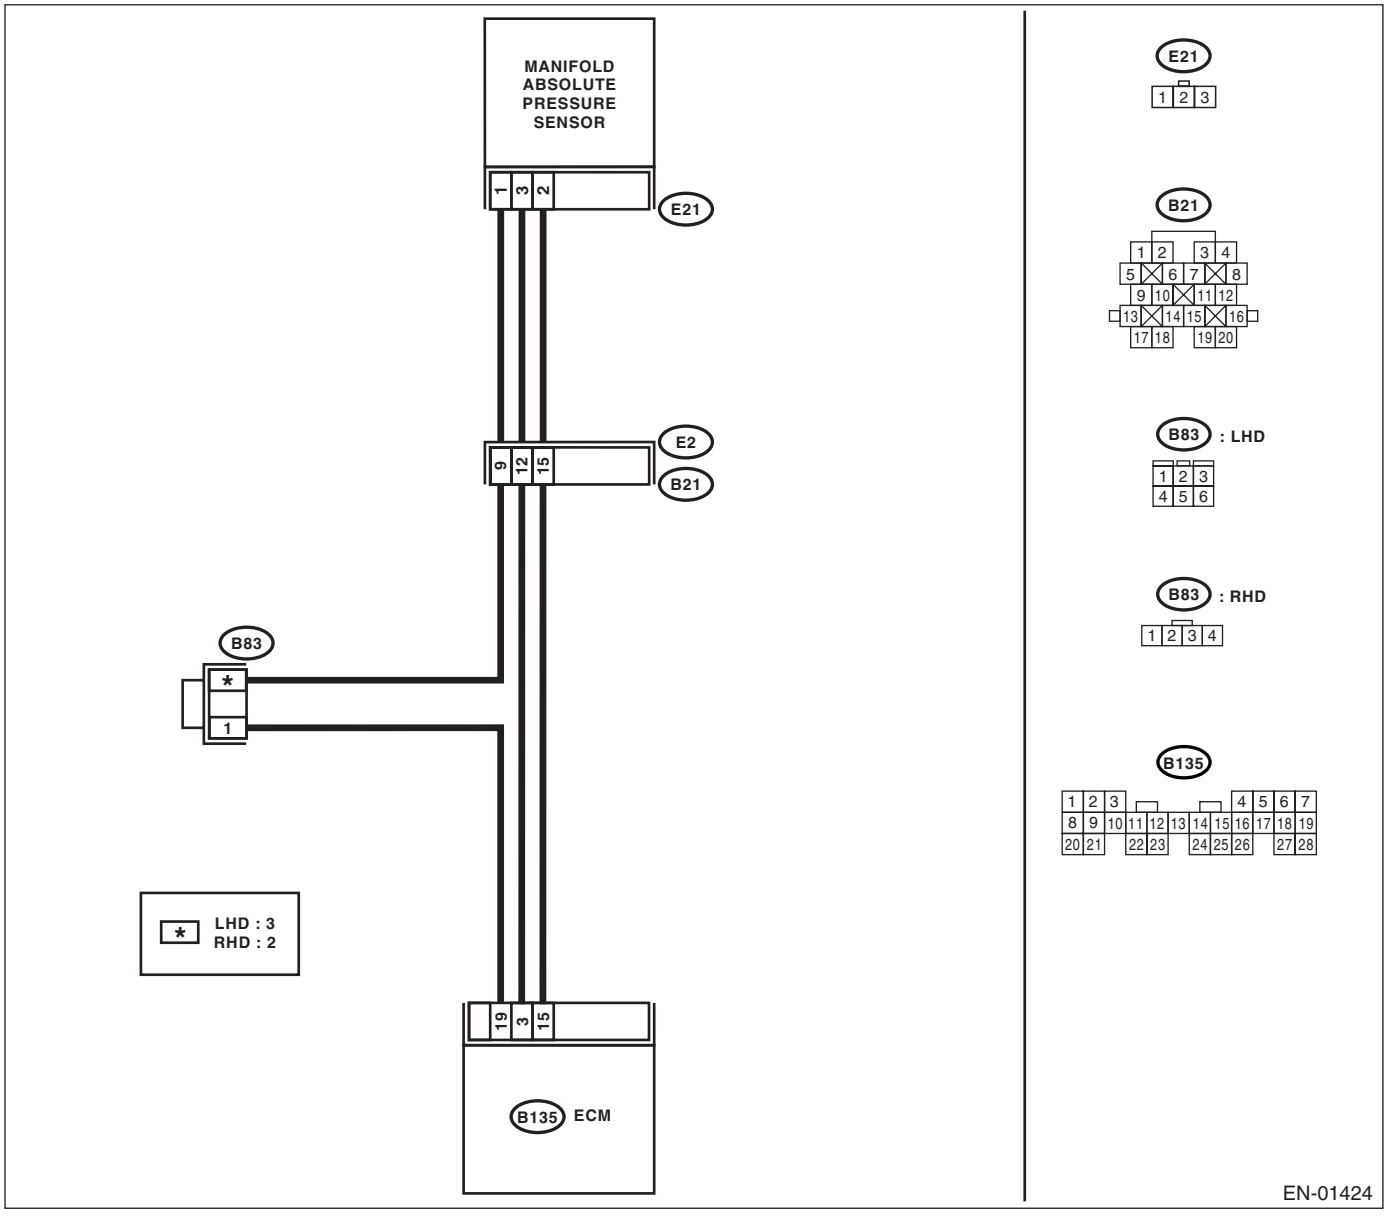

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the measured value more than 119.5 kPa (896.5 mmHg, 35.29 inHg)?	Go to step **10.**	Go to step **2.**
2	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Go to step **3.**
3	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 3 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair poor contact in ECM connector.	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 15 (+) — Chassis ground (−):***	Is the voltage less than 0.2 V?	Go to step **6.**	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR)** Read the data of atmospheric absolute pressure signal using Subaru Select Monitor. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.>	Is the measured value more than 13.3 kPa (100 mmHg, 3.94 inHg) by shaking the harness and connector of ECM?	Repair poor contact in ECM connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN MANIFOLD ABSOLUTE PRESSURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from manifold absolute pressure sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E21) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **7.**	Repair open circuit in harness between ECM and manifold absolute pressure sensor connector.

	Step	Check	Yes	No
7	**CHECK HARNESS BETWEEN MANIFOLD ABSOLUTE PRESSURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B135) No. 15 — (E21) No. 2:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair open circuit in harness between ECM and manifold absolute pressure sensor connector.
8	**CHECK HARNESS BETWEEN MANIFOLD ABSOLUTE PRESSURE SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B135) No. 19 — (E21) No. 1:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair open circuit in harness between ECM and manifold absolute pressure sensor connector.
9	**CHECK POOR CONTACT.** Check poor contact in manifold absolute pressure sensor connector.	Is there poor contact in manifold absolute pressure sensor connector?	Repair poor contact in manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <Ref. to FU(H4SO)-33, Manifold Absolute Pressure Sensor.>
10	**CHECK HARNESS BETWEEN MANIFOLD ABSOLUTE PRESSURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF and Subaru Select Monitor or the OBD-II general scan tool switch to OFF. 2)Disconnect the connector from manifold absolute pressure sensor. 3)Turn the ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON. 4)Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the measured value more than 119.5 kPa (896.5 mmHg, 35.29 inHg)?	Repair battery short circuit in harness between ECM and manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <Ref. to FU(H4SO)-33, Manifold Absolute Pressure Sensor.>

J: DTC P0111 — INTAKE AIR TEMPERATURE CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

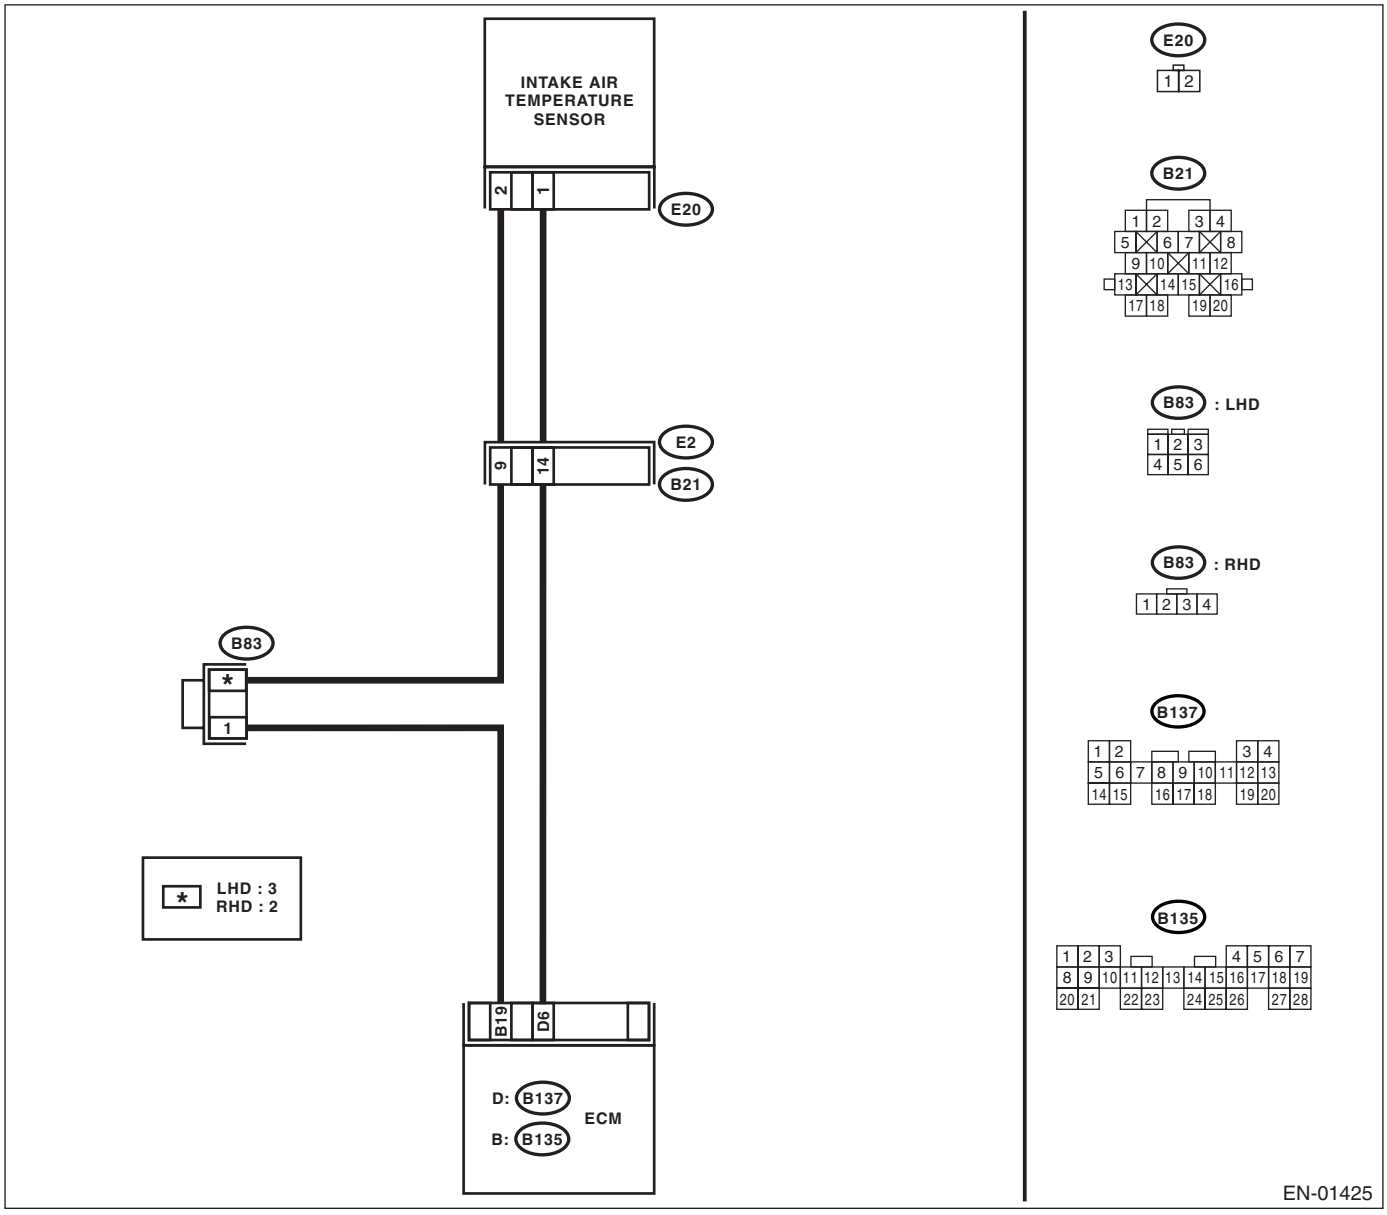

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0111.	Go to step **2.**
2	**CHECK ENGINE COOLANT TEMPERATURE.** 1)Start the engine and warm it up completely. 2)Measure the engine coolant temperature using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the engine coolant temperature 75°C (167°F) — 95°C (203°F)?	Replace the intake air temperature sensor. <Ref. to FU(H4SO)-34, Intake Air Temperature Sensor.>	Inspect DTC P0125 using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>

K: DTC P0112 — INTAKE AIR TEMPERATURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

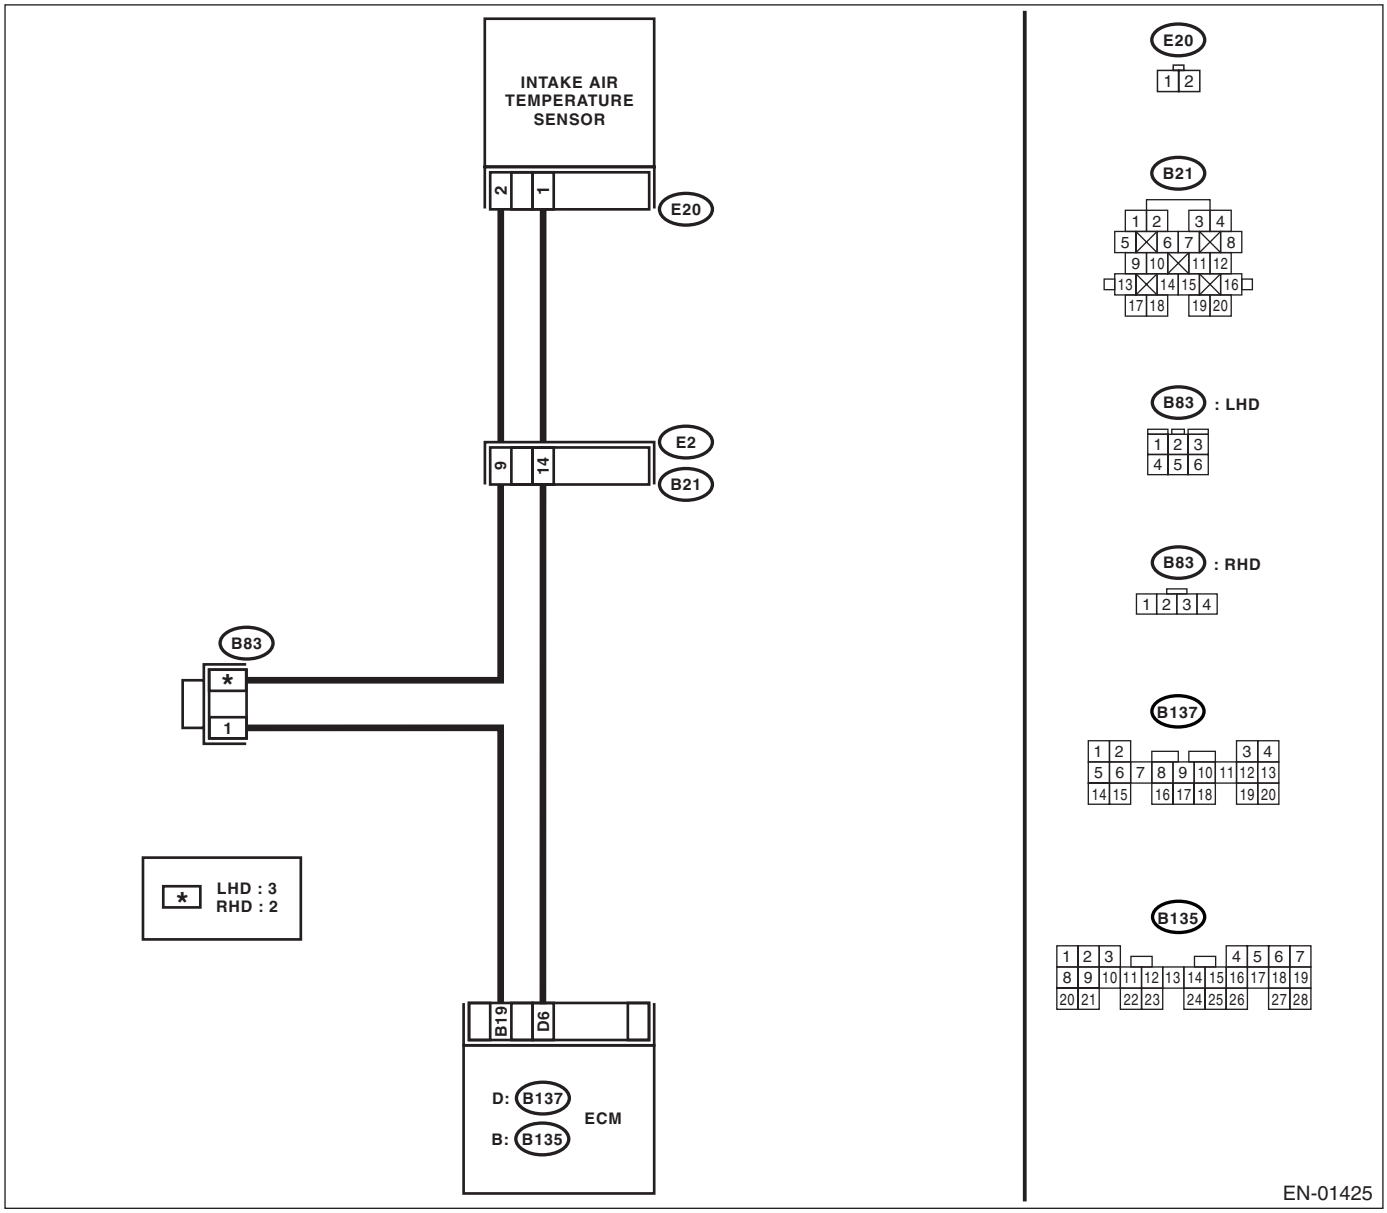

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the intake air temperature more than 120°C (248°F)?	Go to step **2.**	Repair poor contact. NOTE: In this case, repair the following: • Poor contact in intake air temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from intake air temperature sensor. 3)Turn the ignition switch to ON. 4)Read the data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the intake air temperature less than −40°C (−40°F)?	Replace the intake air temperature sensor. <Ref. to FU(H4SO)-34, Intake Air Temperature Sensor.>	Repair ground short circuit in harness between intake air temperature sensor and ECM connector.

L: DTC P0113 — INTAKE AIR TEMPERATURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

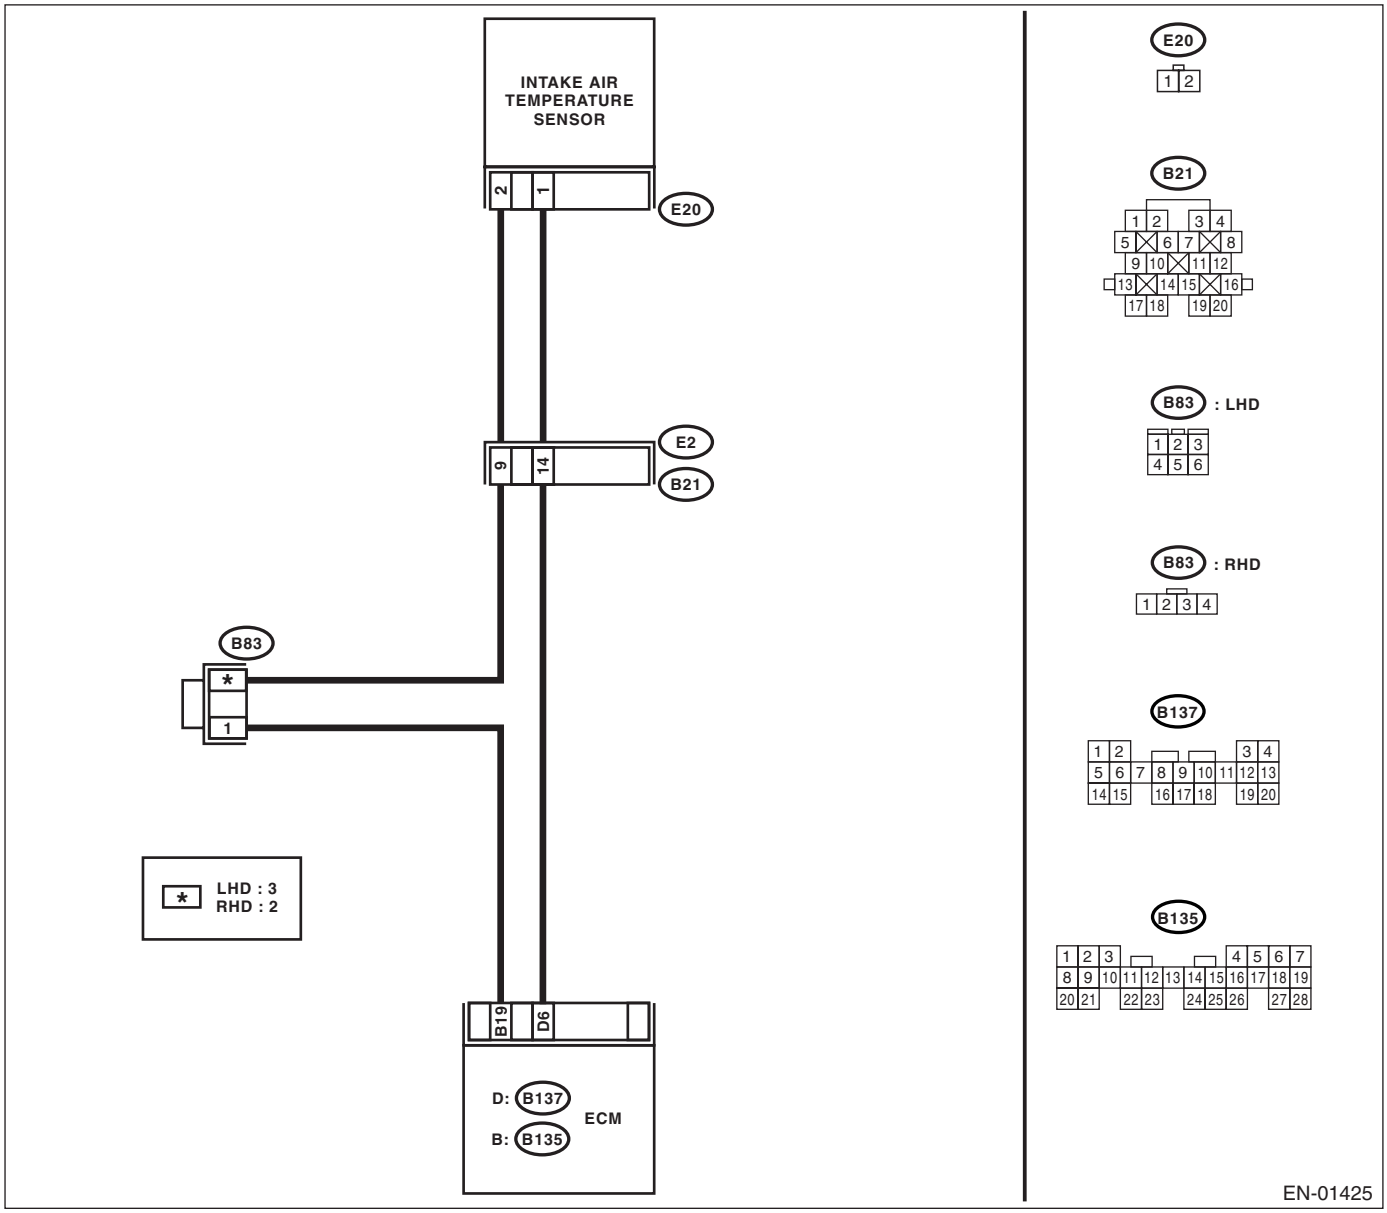

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the intake air temperature less than −40°C (−40°F)?	Go to step **2.**	Repair poor contact. NOTE: In this case, repair the following: • Poor contact in intake air temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from intake air temperature sensor. 3)Measure the voltage between intake air temperature and manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E20) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between intake air temperature sensor and ECM connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between intake air temperature sensor connector and engine ground. ***Connector & terminal*** ***(E20) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between intake air temperature sensor and ECM connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** Measure the voltage between intake air temperature sensor connector and engine ground. ***Connector & terminal*** ***(E20) No. 1 (+) — Engine ground (−):***	Is the voltage more than 3 V?	Go to step **5.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between intake air temperature sensor and ECM connector • Poor contact in intake air temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between intake air temperature sensor connector and engine ground. ***Connector & terminal*** ***(E20) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Replace the intake air temperature sensor. <Ref. to FU(H4SO)-34, Intake Air Temperature Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between intake air temperature sensor and ECM connector • Poor contact in intake air temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector

M: DTC P0117 — ENGINE COOLANT TEMPERATURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

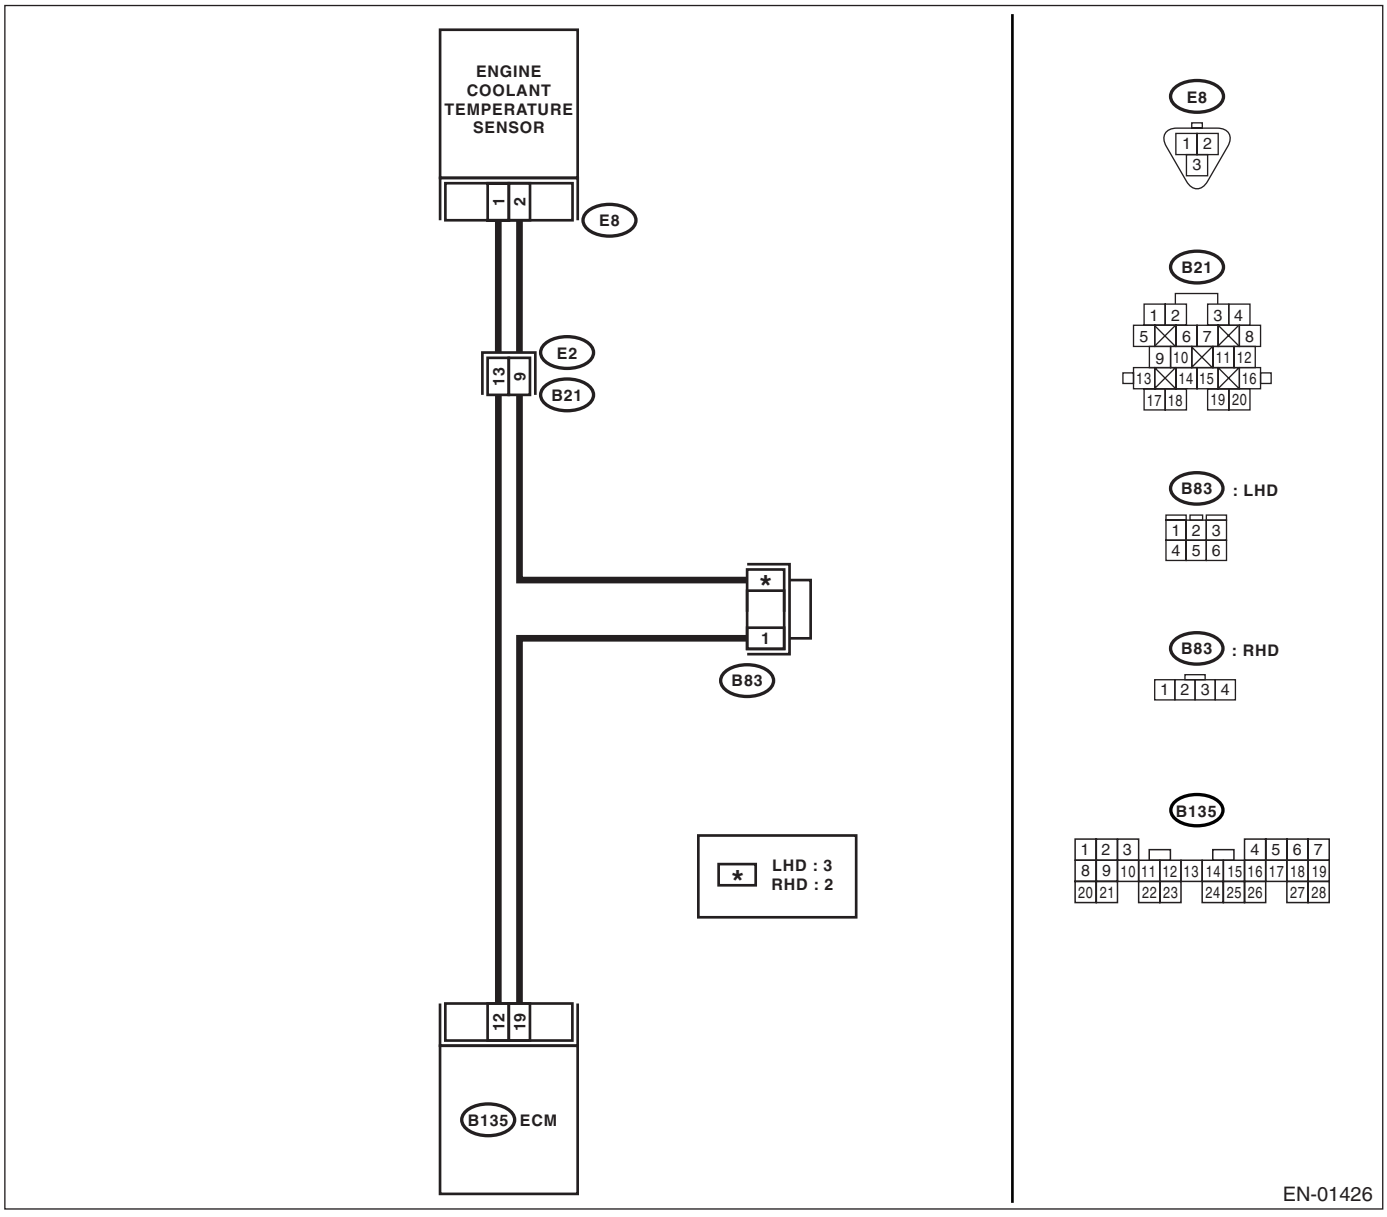

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the engine coolant temperature more than 150°C (302°F)?	Go to step **2.**	Repair poor contact. NOTE: In this case, repair the following: • Poor contact in engine coolant temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from engine coolant temperature sensor. 3)Turn the ignition switch to ON. 4)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the engine coolant temperature less than −40°C (−40°F)?	Replace the engine coolant temperature sensor. <Ref. to FU(H4SO)-27, Engine Coolant Temperature Sensor.>	Repair ground short circuit in harness between engine coolant temperature sensor and ECM connector.

N: DTC P0118 — ENGINE COOLANT TEMPERATURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

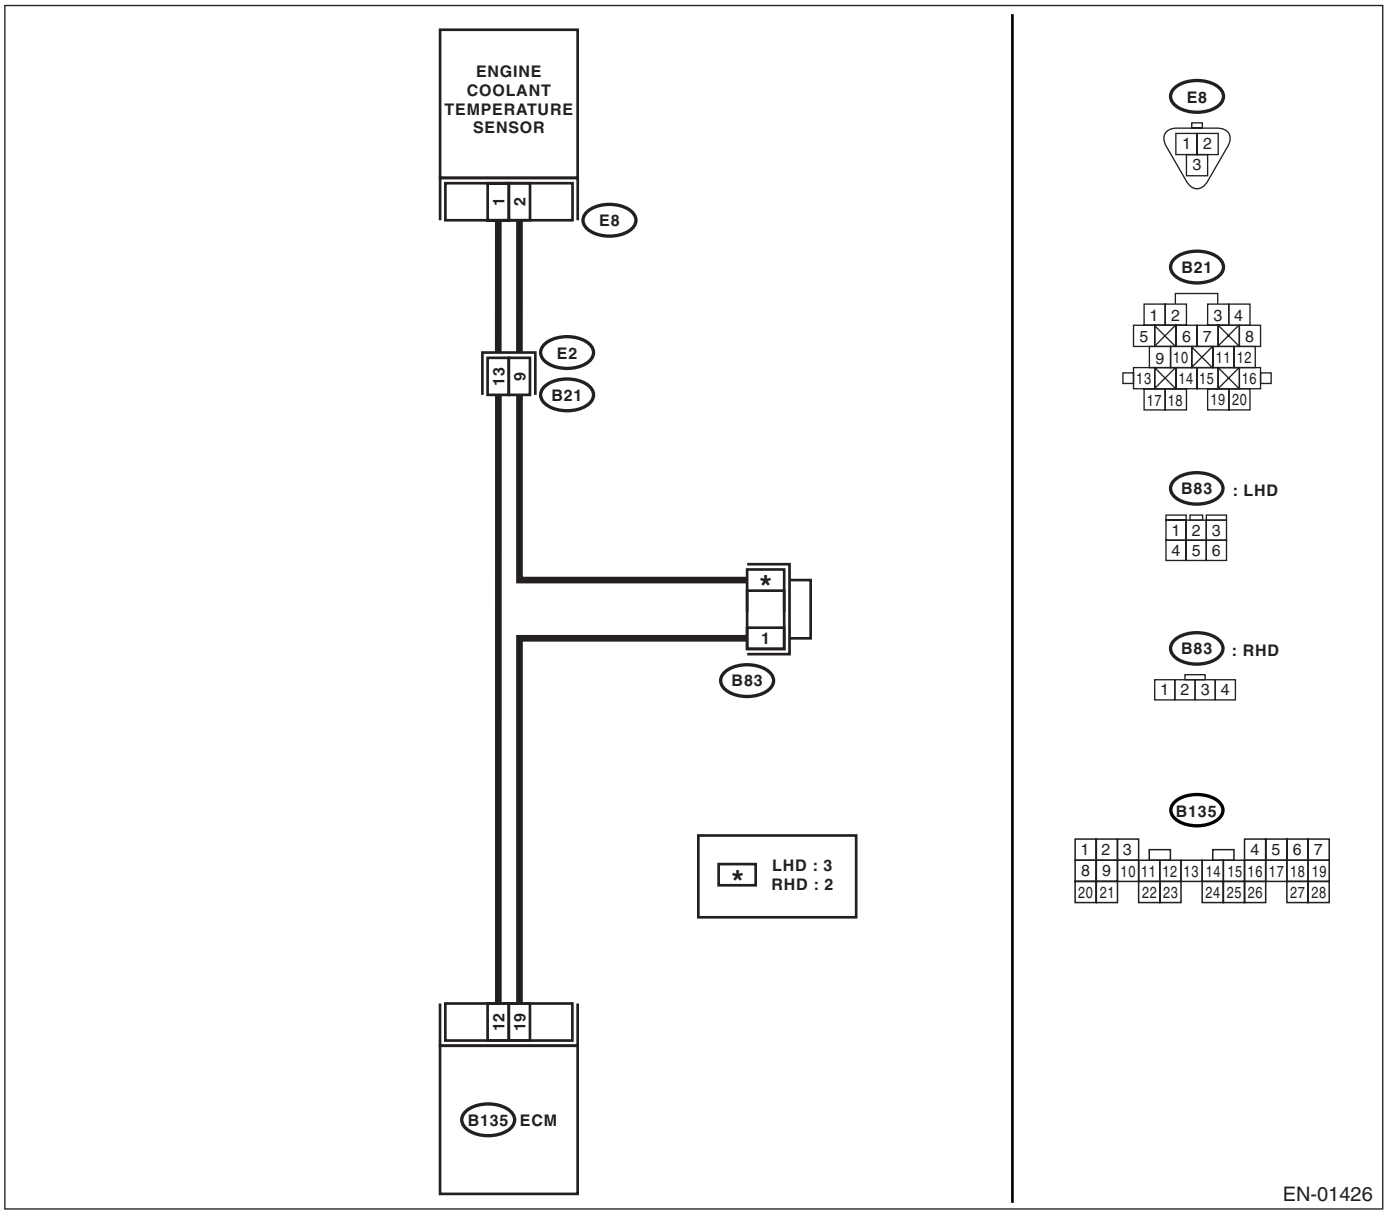

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the engine coolant temperature less than −40°C (−40°F)?	Go to step **2.**	Repair poor contact. NOTE: In this case, repair the following: • Poor contact in engine coolant temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from engine coolant temperature sensor. 3)Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 (+) — Engine ground (−):***	Is the voltage more than 4 V?	Go to step **5.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Replace the engine coolant temperature sensor. <Ref. to FU(H4SO)-27, Engine Coolant Temperature Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector

O: DTC P0121 — THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

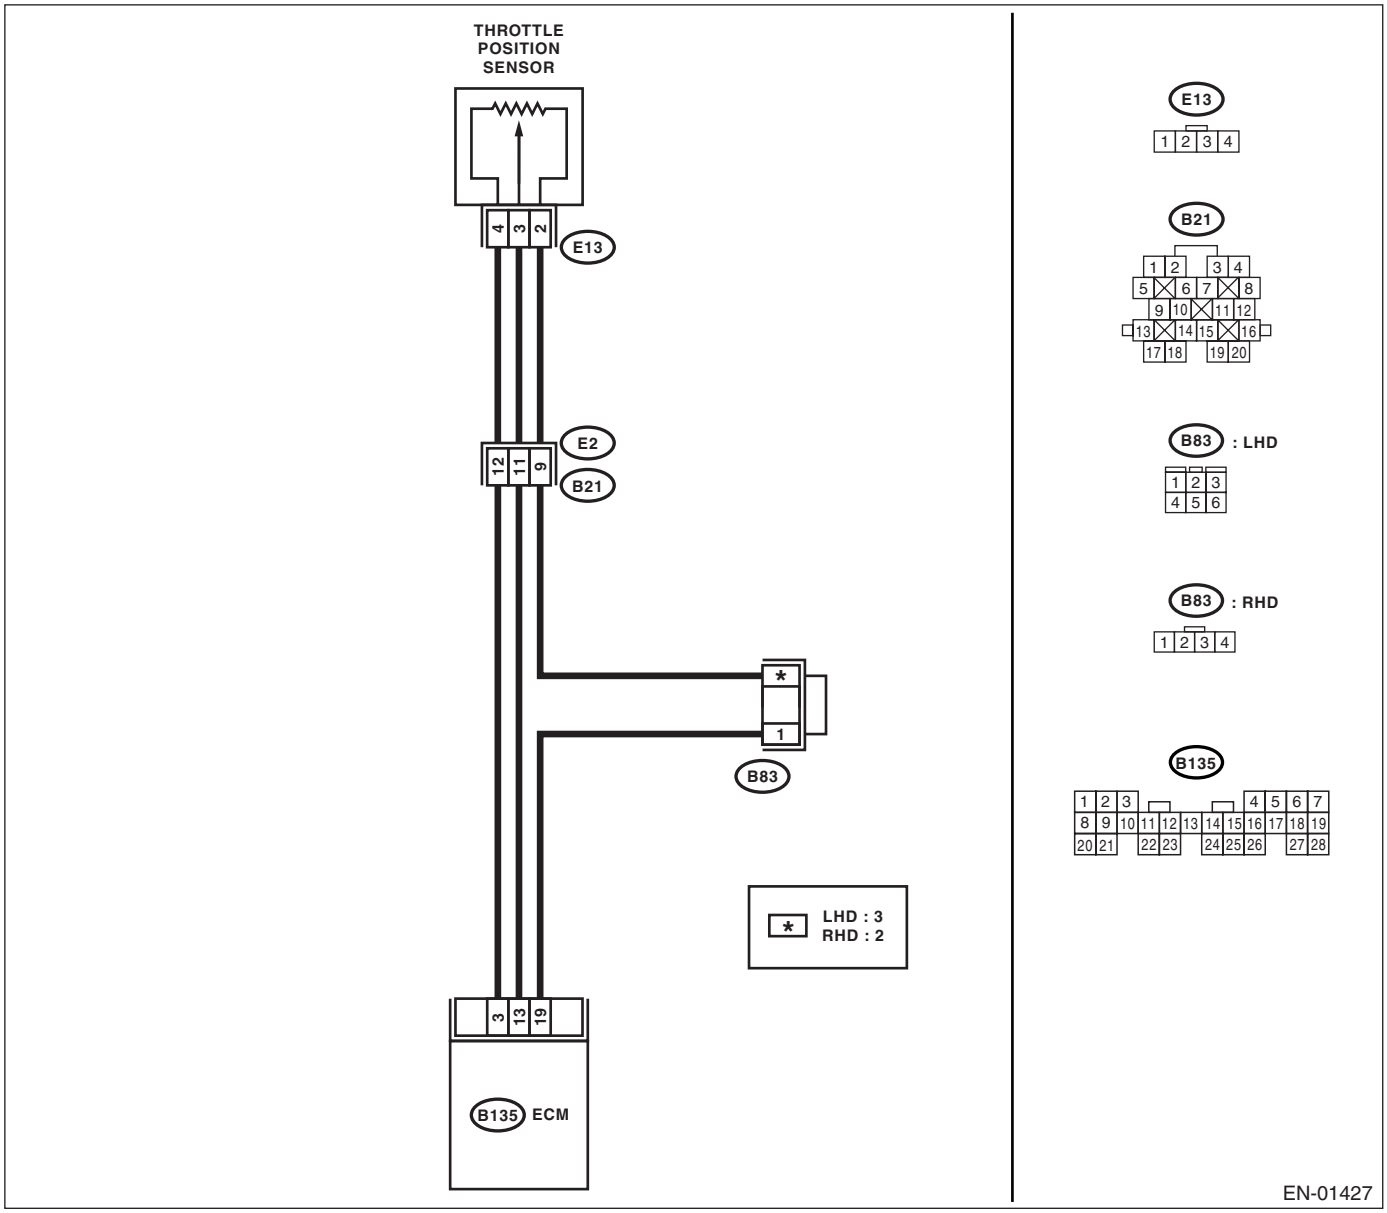

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC P0122 or P0123 using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0121.	Replace the throttle position sensor. <Ref. to FU(H4SO)-31, Throttle Position Sensor.>

P: DTC P0122 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

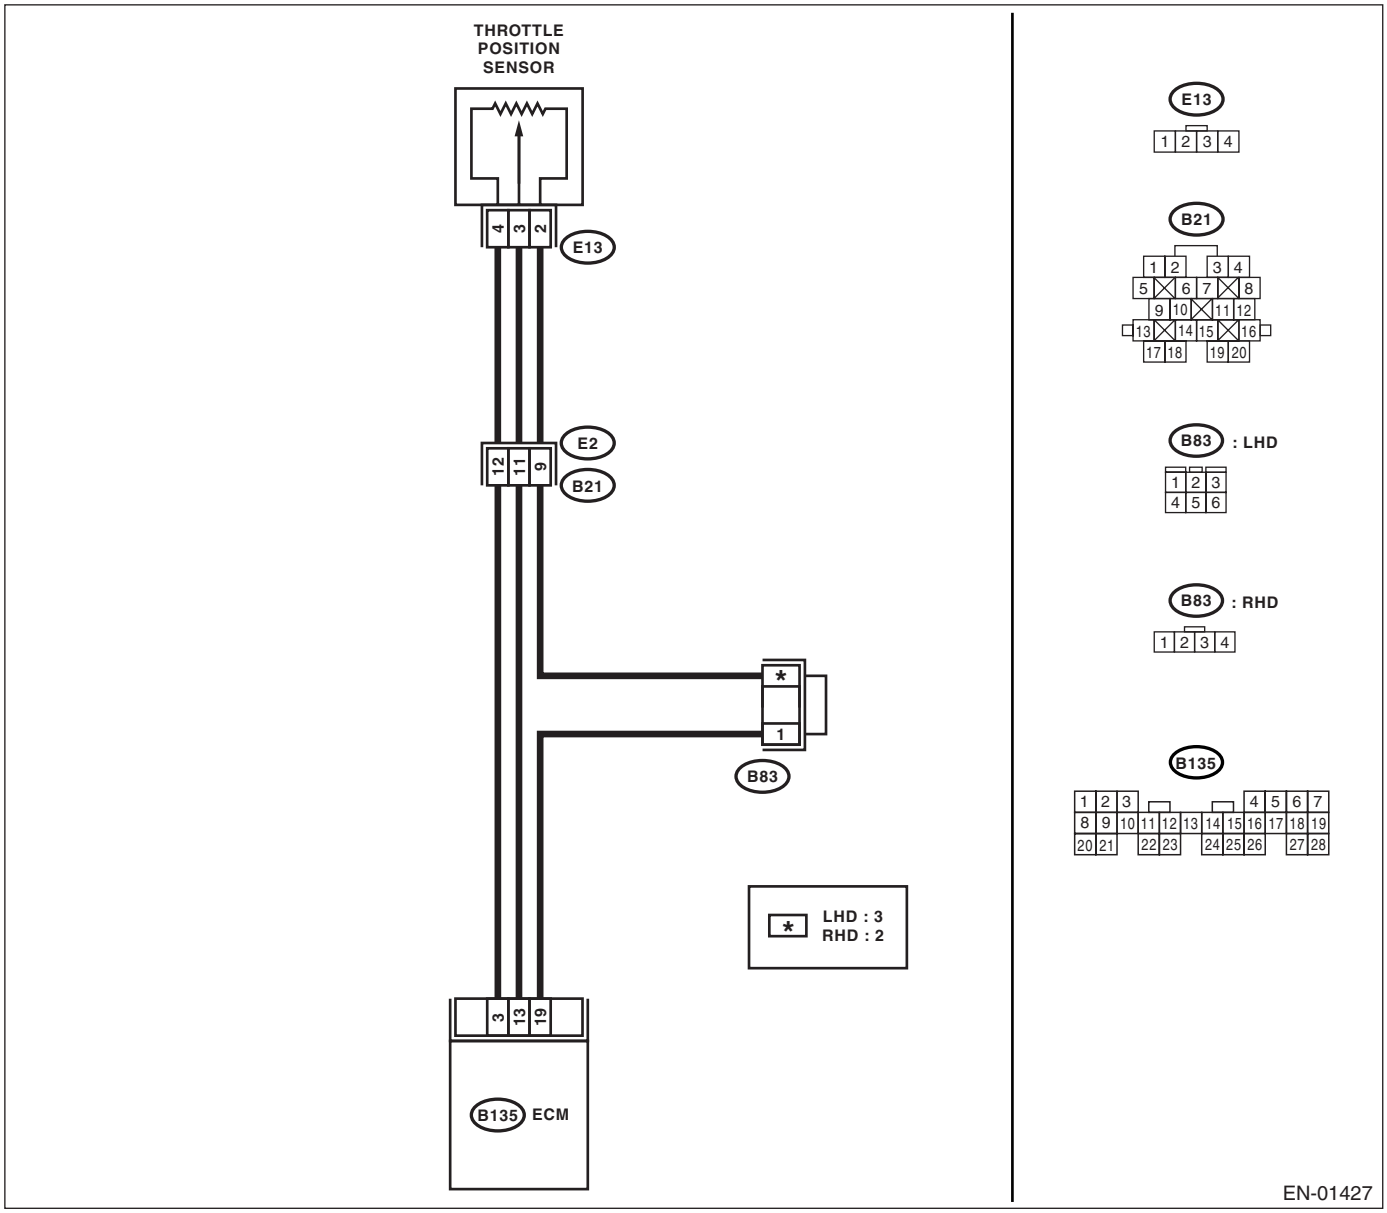

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage less than 0.1 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground while throttle valve is fully closed. ***Connector & terminal*** ***(B135) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Go to step **3.**
3	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 3 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair poor contact in ECM connector.	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 13 (+) — Chassis ground (−):***	Is the voltage more than 0.1 V?	Go to step **6.**	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 13 (+) — Chassis ground (−):***	Does the voltage change by shaking the ECM harness and connector?	Repair poor contact in ECM connector.	Go to step **6.**

	Step	Check	Yes	No
6	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from throttle position sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 4 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **7.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector
7	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between ECM connector and throttle position sensor connector. ***Connector & terminal*** ***(B135) No. 13 — (E13) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in ECM connector • Poor contact in throttle position sensor connector • Poor contact in coupling connector
8	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** Measure the resistance of harness between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 3 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair ground short circuit in harness between throttle position sensor and ECM connector.
9	**CHECK POOR CONTACT.** Check poor contact in throttle position sensor connector.	Is there poor contact in throttle position sensor connector?	Repair poor contact in throttle position sensor connector.	Replace the throttle position sensor. <Ref. to FU(H4SO)-31, Throttle Position Sensor.>

Q: DTC P0123 — THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

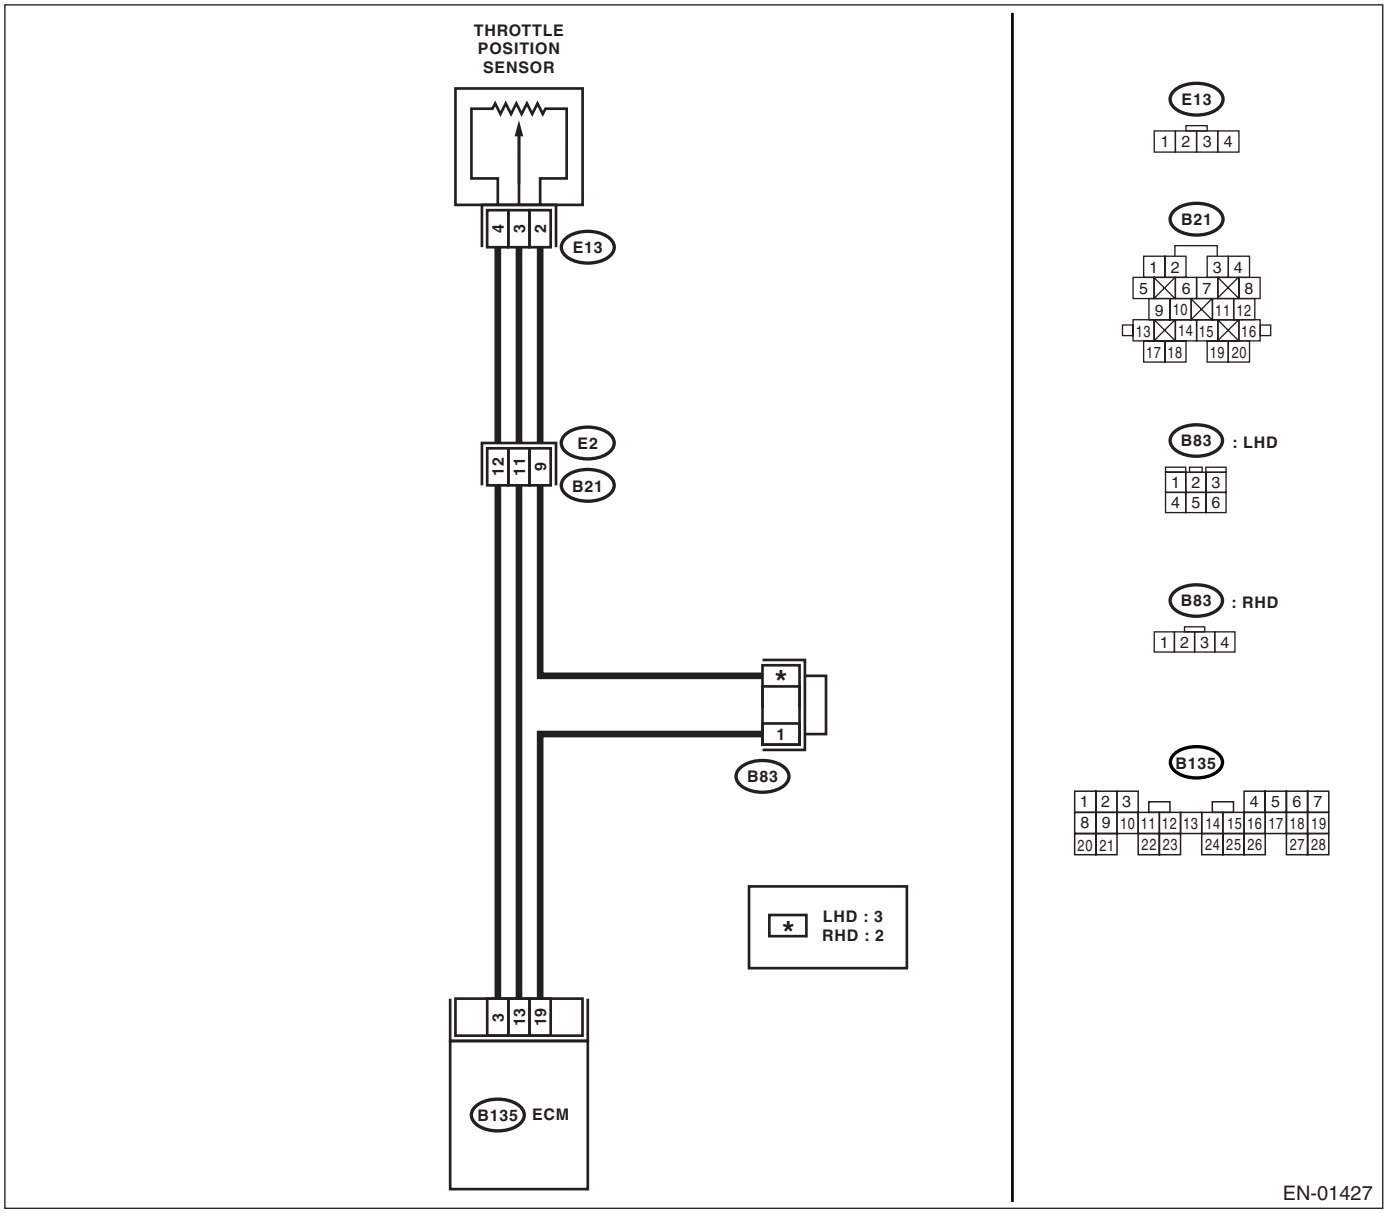

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage more than 4.9 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from throttle position sensor. 3)Measure the resistance of harness between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in coupling connector • Poor contact in joint connector
3	**CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.9 V?	Repair battery short circuit in harness between throttle position sensor and ECM connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Replace the throttle position sensor. <Ref. to FU(H4SO)-31, Throttle Position Sensor.>

R: DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine would not return to idling.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

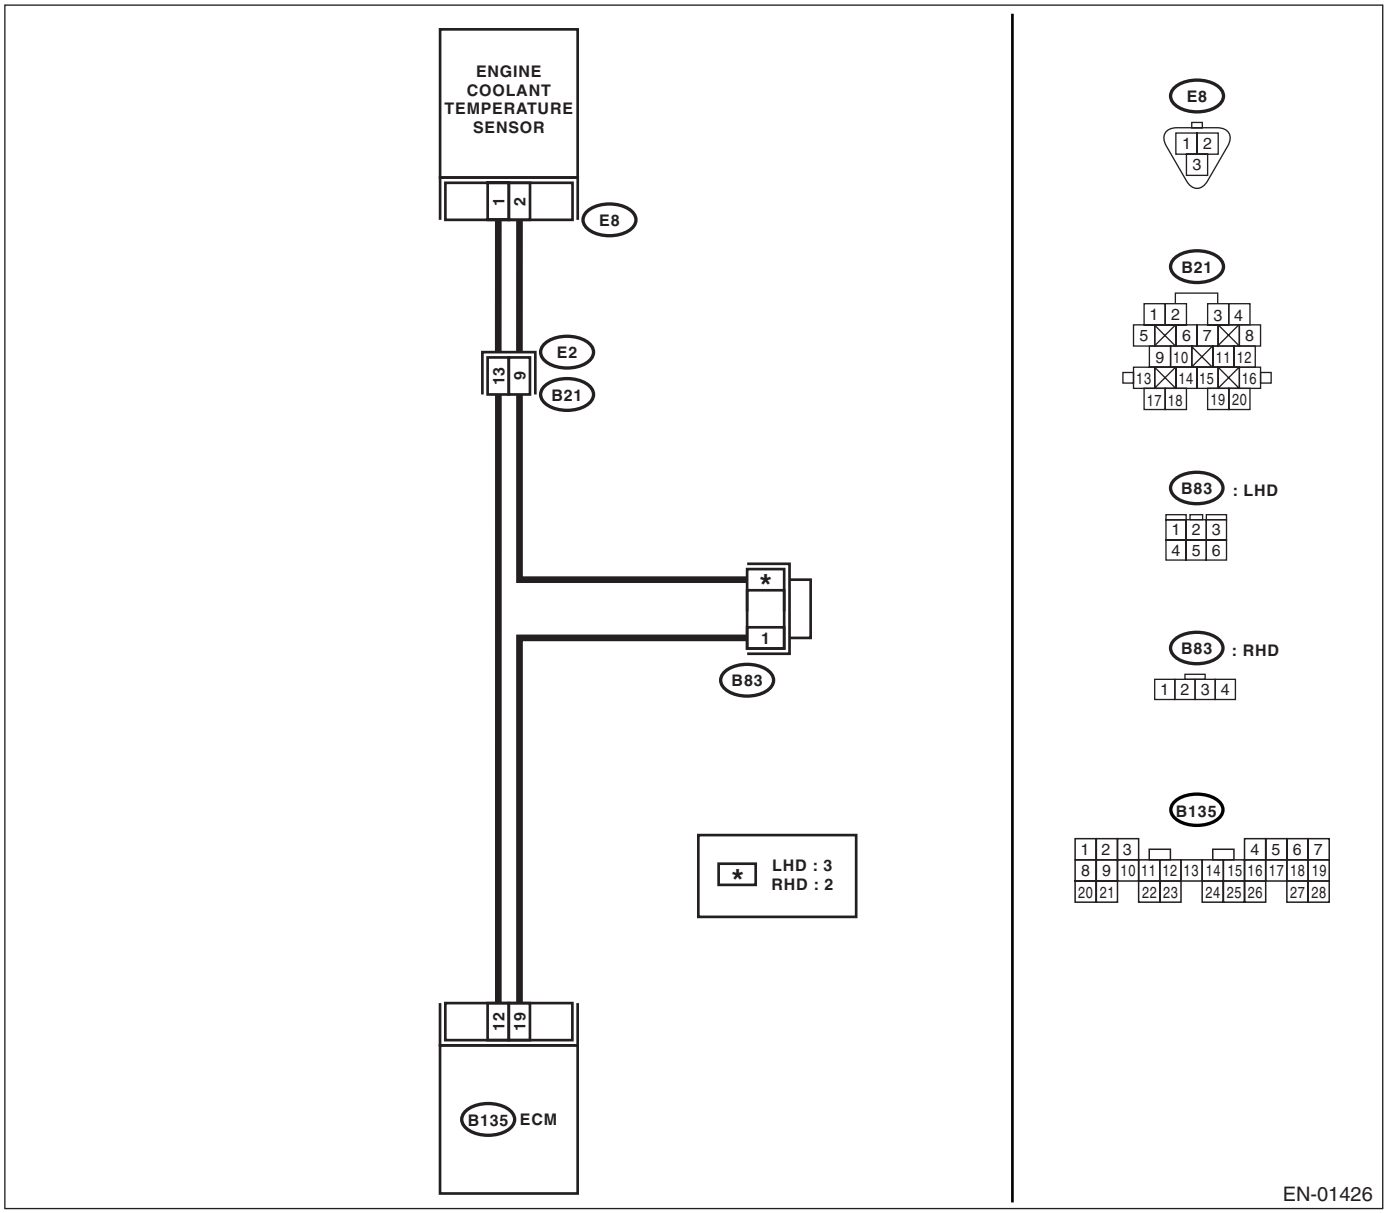

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0125.	Go to step **2.**
2	**CHECK THERMOSTAT.**	Does the thermostat remain opened?	Replace the thermostat. <Ref. to CO(H4SO)-19, Thermostat.>	Replace the engine coolant temperature sensor. <Ref. to FU(H4SO)-27, Engine Coolant Temperature Sensor.>

S: DTC P0129 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: It is not necessary to inspect DTC P0129.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

T: DTC P0130 — O_2 SENSOR CIRCUIT (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

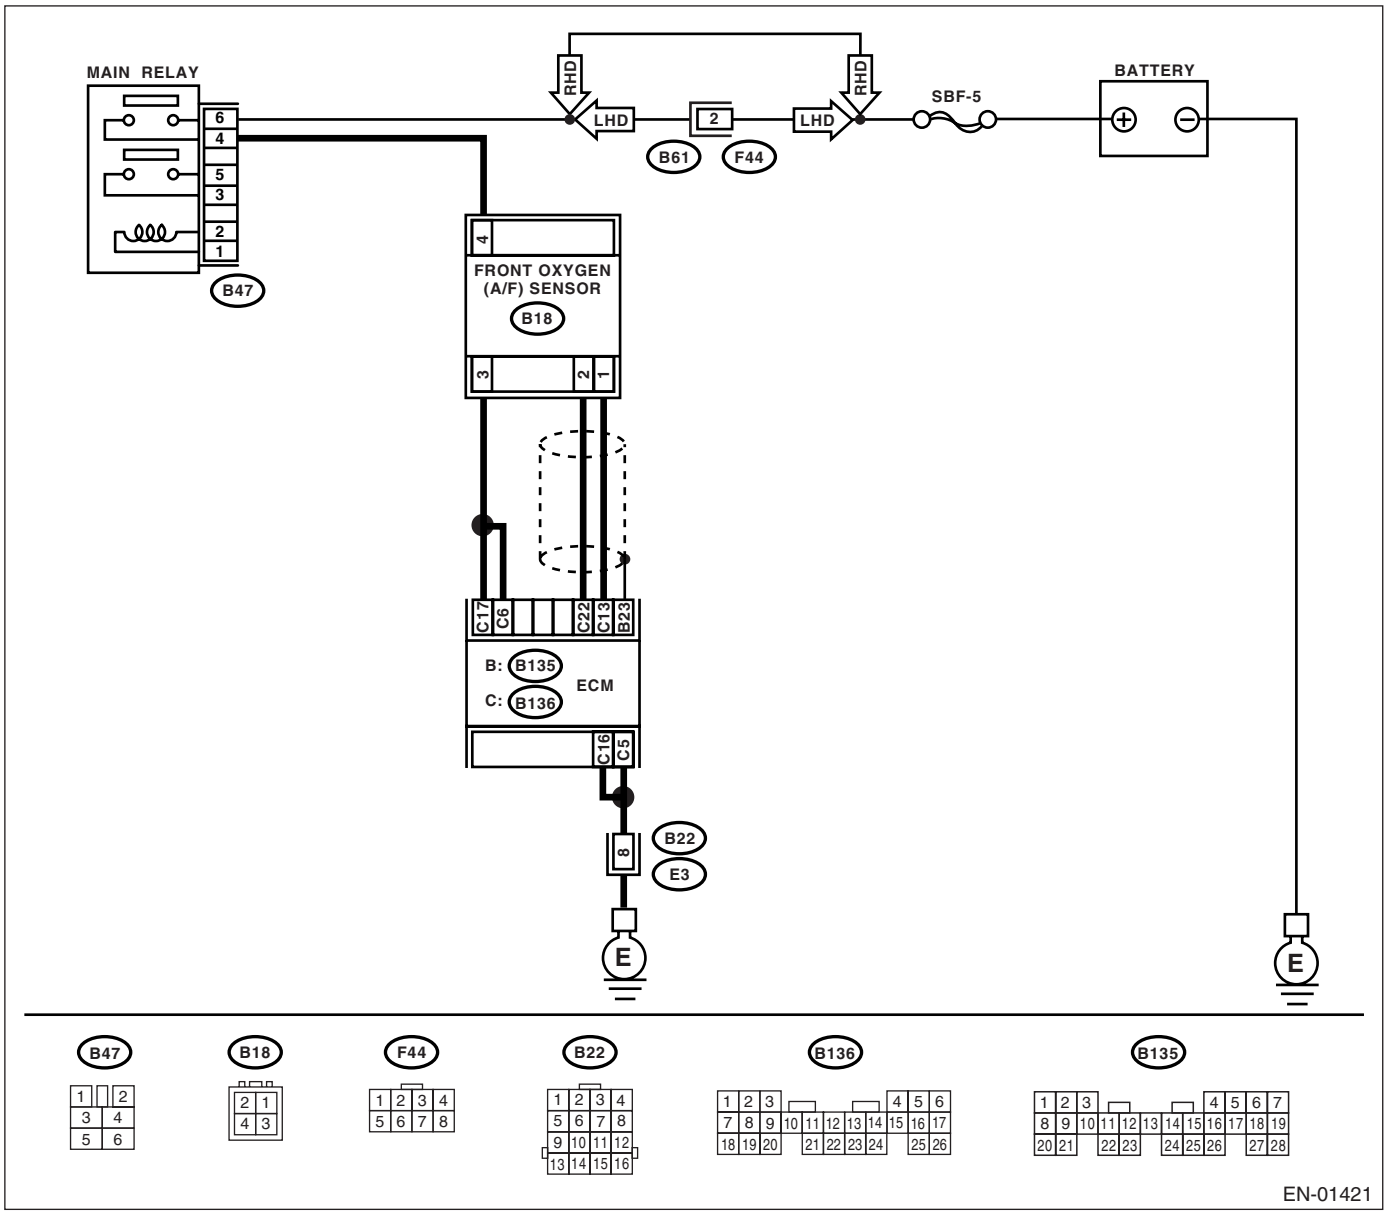

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK FRONT OXYGEN (A/F) SENSOR DATA.** 1)Start the engine. 2)While observing the Subaru Select Monitor or OBD-II general scan tool screen, warm-up the engine until coolant temperature is above 70°C (160°F). If the engine is already warmed-up, operate at idle speed for at least 1 minute. 3)Read the data of front oxygen (A/F) sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage 0.85 — 1.15 V?	Go to step **3.**	Go to step **4.**
3	**CHECK FRONT OXYGEN (A/F) SENSOR DATA.** 1)Race the engine at speeds from idling to 5,000 rpm for a total of 5 cycles. 2)Read the data of front oxygen (A/F) sensor signal during racing using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Air fuel ratio is rich at normal condition or during racing. •To increase engine speed to 5,000 rpm, slowly depress accelerator pedal, taking approximately 5 seconds, and quickly release accelerator pedal to decrease engine speed.	Is the voltage more than 1.1 V?	Go to step **6.**	Go to step **4.**
4	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and front oxygen (A/F) sensor connector. 3)Measure the resistance between ECM and front oxygen (A/F) sensor. ***Connector & terminals*** ***(B136) No. 13 — (B18) No. 1:*** ***(B136) No. 22 — (B18) No. 2:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair open circuit between ECM and front oxygen (A/F) sensor.
5	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR.** Measure the resistance between ECM and chassis ground. ***Connector & terminals*** ***(B136) No. 13 — Chassis ground:*** ***(B136) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair ground short circuit between ECM and front oxygen (A/F) sensor.
6	**CHECK EXHAUST SYSTEM.** Check exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness of front oxygen (A/F) sensor •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace faulty parts.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

U: DTC P0131 — O_2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

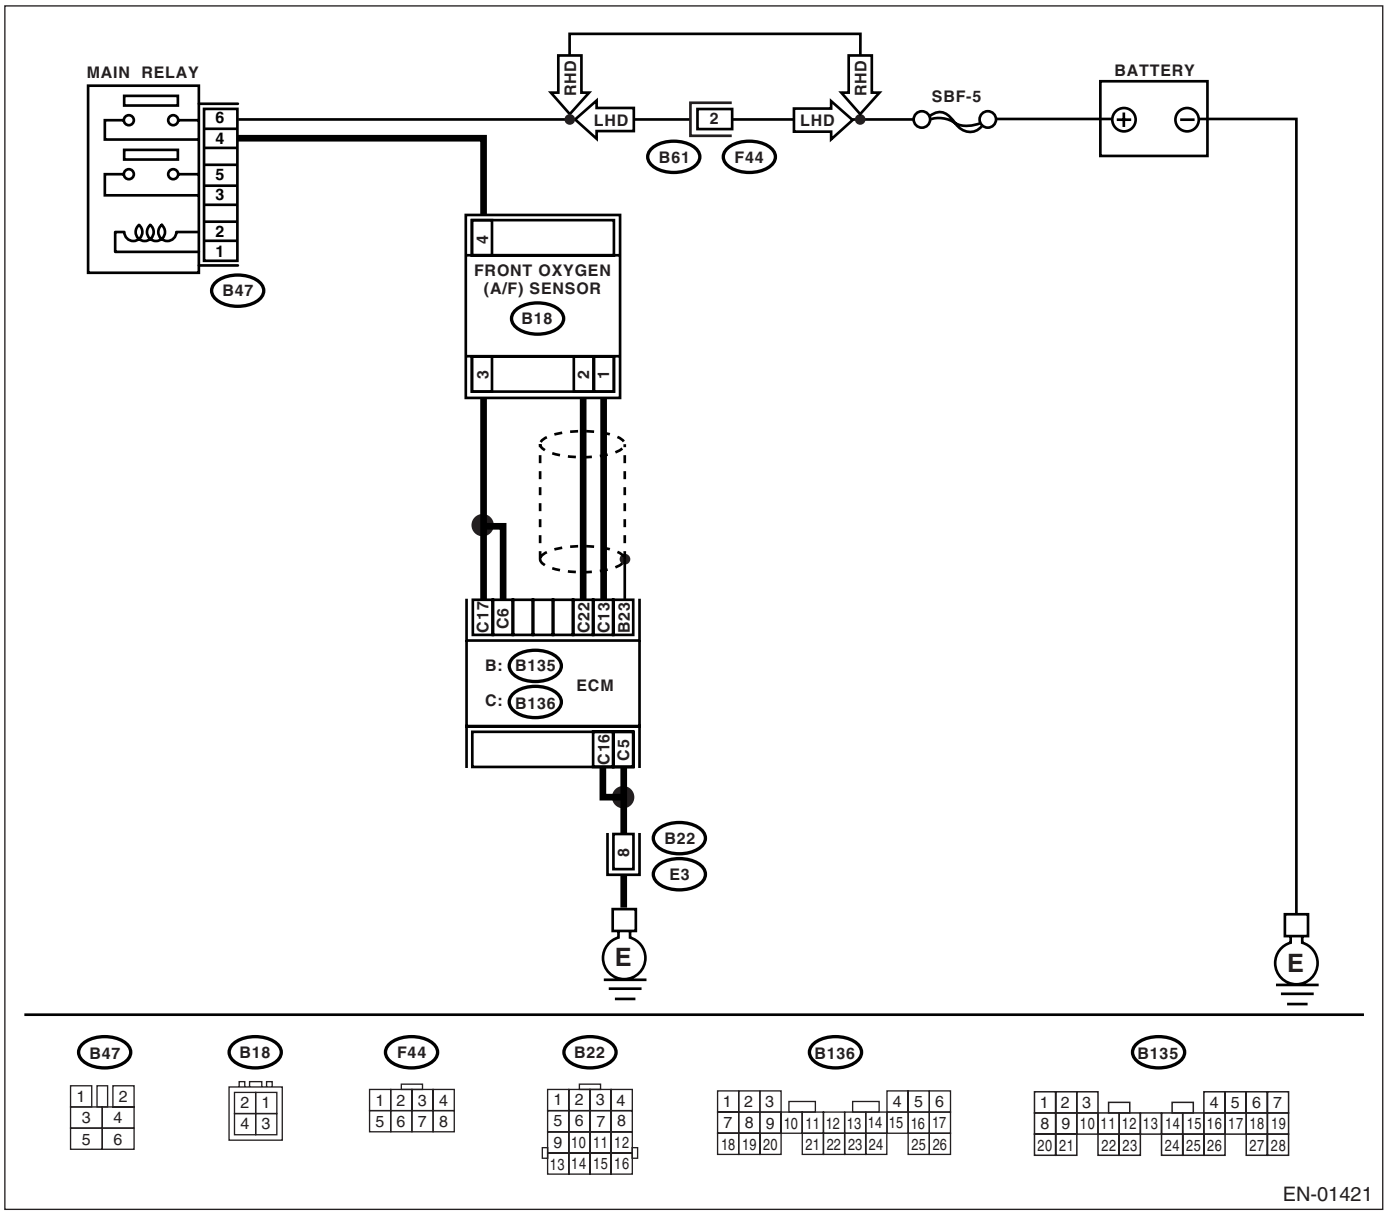

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and front oxygen (A/F) sensor connector. 3)Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B136) No. 13 — Chassis ground:*** ***(B136) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>	Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.

V: DTC P0132 — O_2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

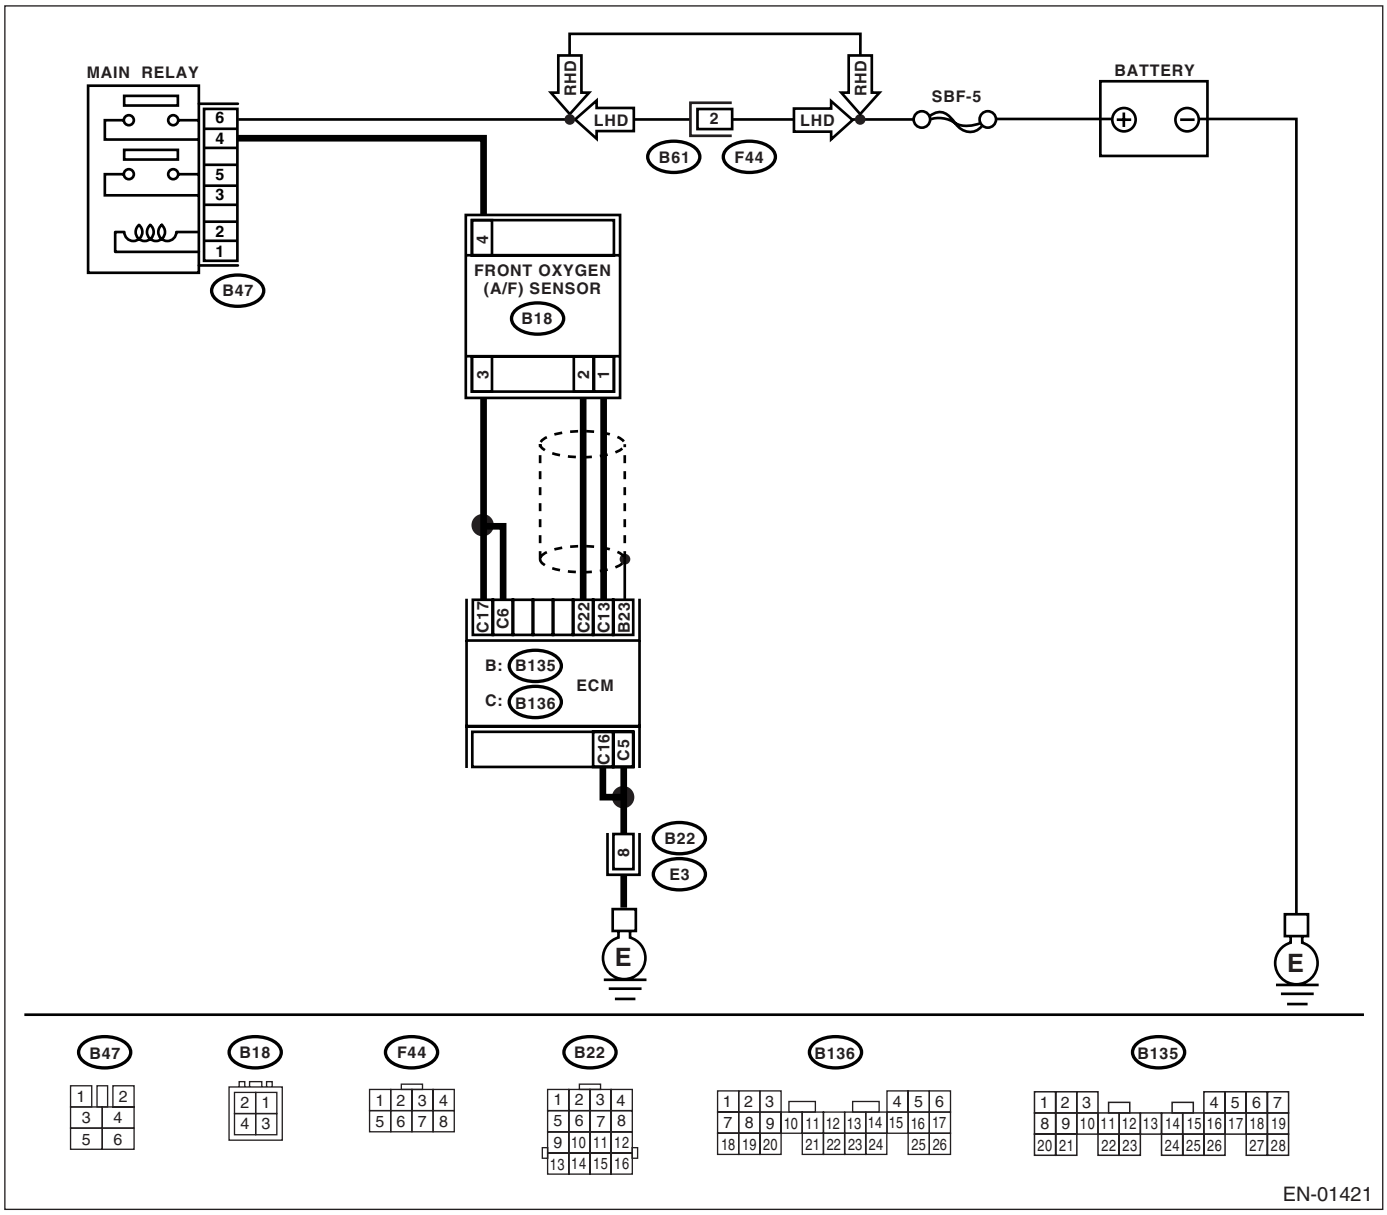

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from front oxygen (A/F) sensor. 3)Measure the voltage of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 13 (+) — Chassis ground (−):*** ***(B136) No. 22 (+) — Chassis ground (−):***	Is the voltage more than 8 V?	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.

W: DTC P0133 — O_2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 1)

—

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

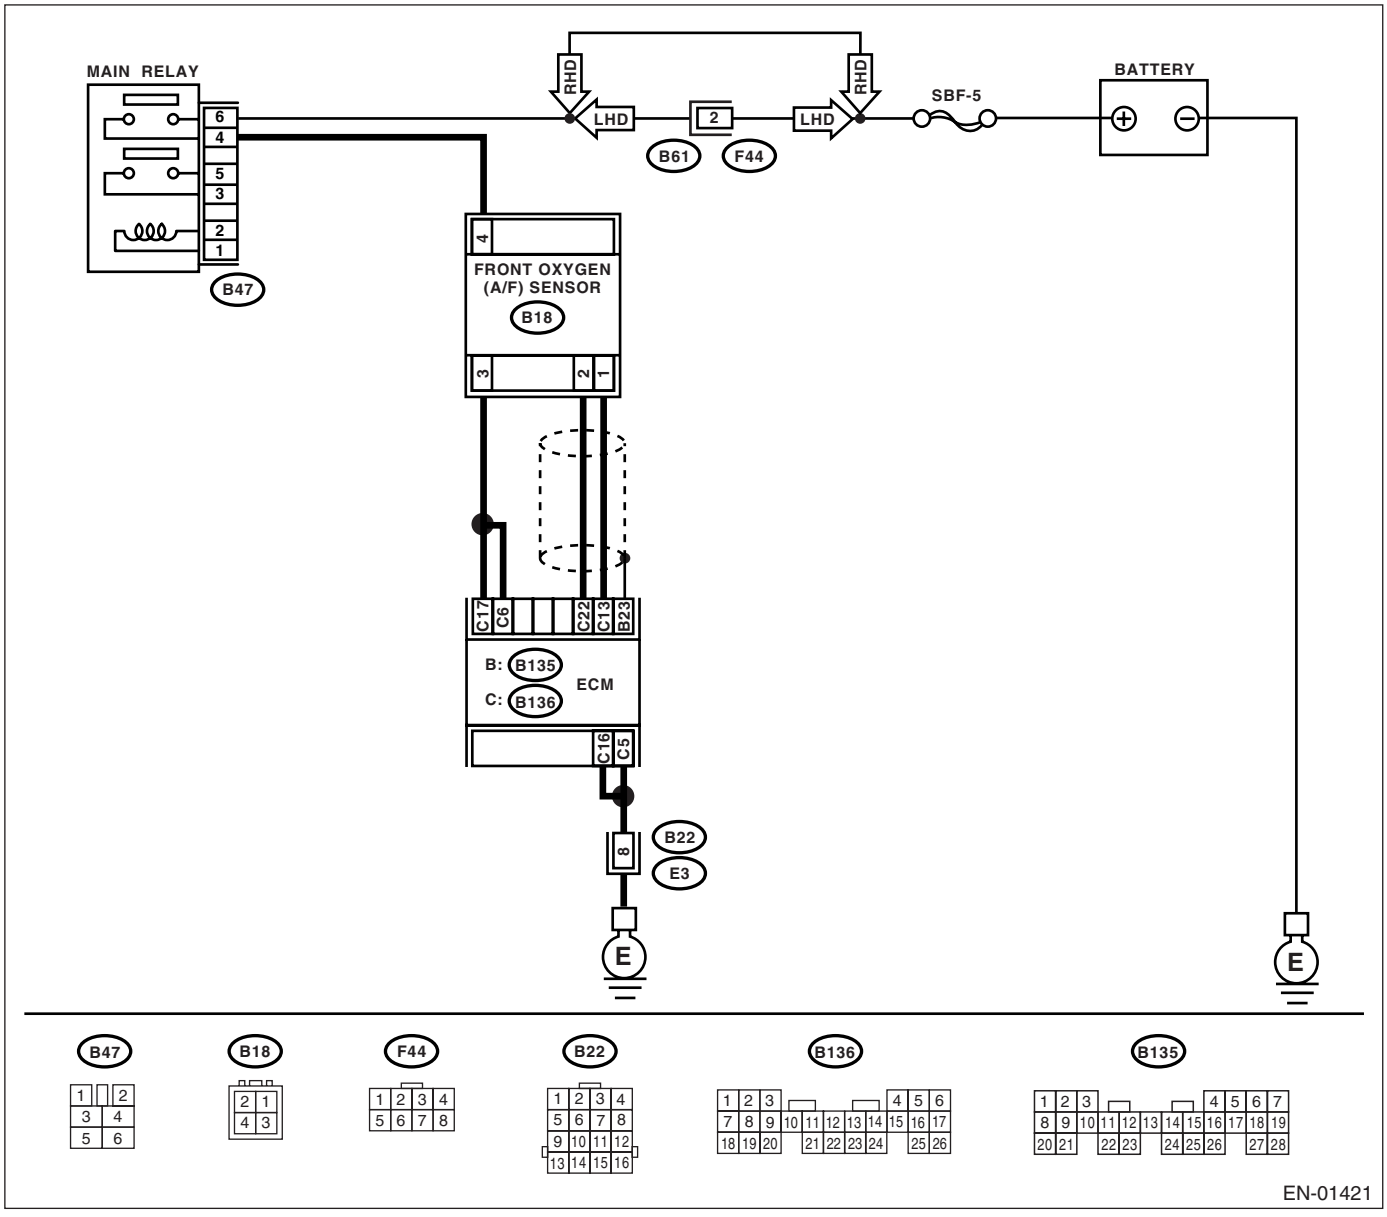

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0133.	Go to step **2.**
2	**CHECK EXHAUST SYSTEM.** NOTE: Check the following items. •Loose installation of front portion of exhaust pipe onto cylinder heads •Loose connection between front exhaust pipe and front catalytic converter •Damage of exhaust pipe resulting in a hole	Is there a fault in exhaust system?	Repair exhaust system.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

X: DTC P0134 — O_2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

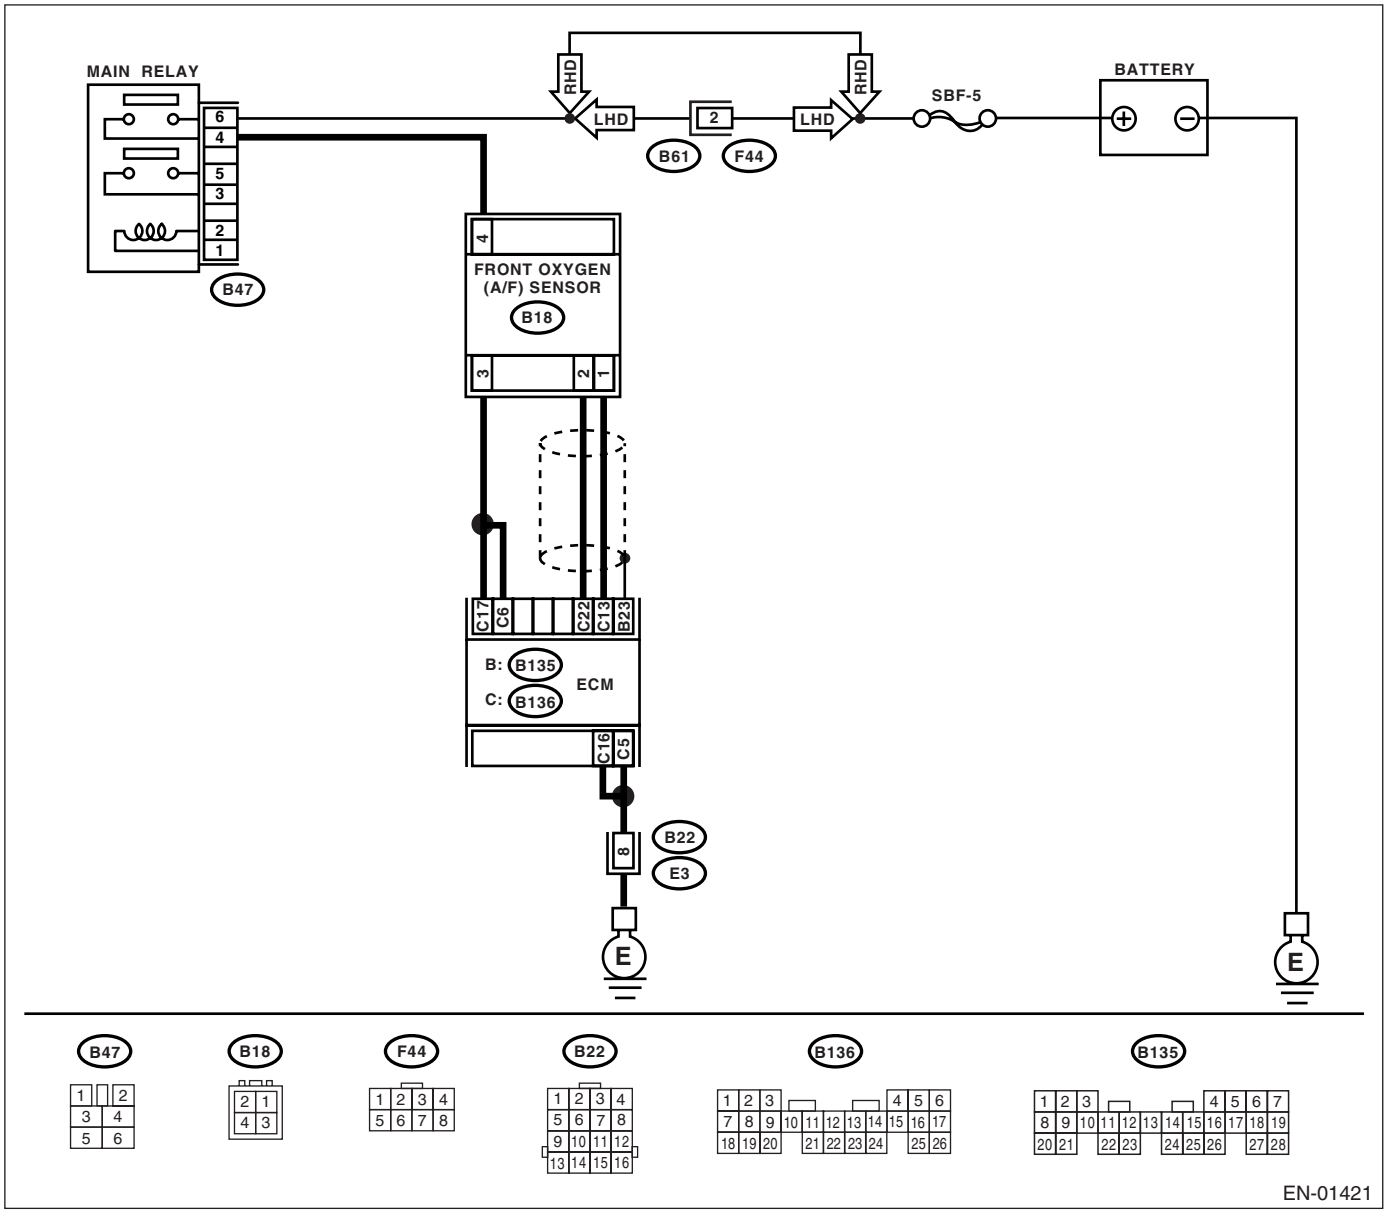

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and front oxygen (A/F) sensor connector. 3)Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B136) No. 13 — (B18) No. 1:*** ***(B136) No. 22 — (B18) No. 2:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector
2	**CHECK POOR CONTACT.** Check poor contact in front oxygen (A/F) sensor connector.	Is there poor contact in front oxygen (A/F) sensor connector?	Repair poor contact in front oxygen (A/F) sensor connector.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

Y: DTC P0137 — O_2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

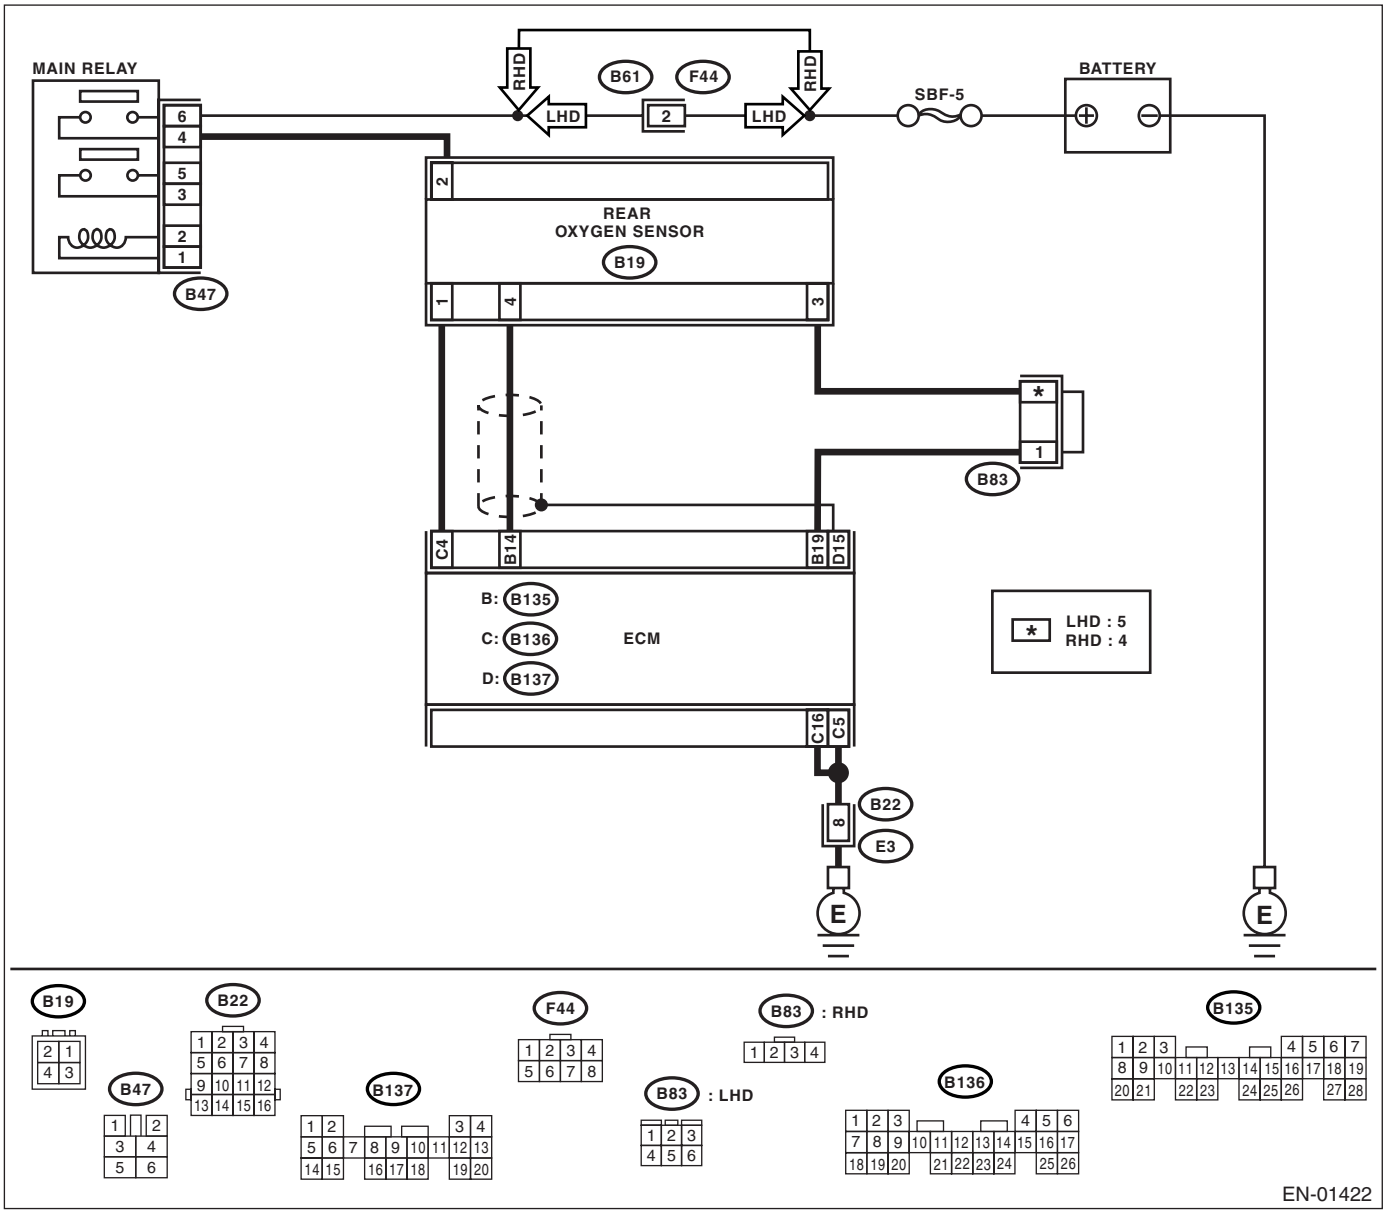

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0137.	Go to step **2.**
2	**CHECK REAR OXYGEN SENSOR DATA.** 1)Warm-up the engine until engine coolant temperature is above 70°C (158°F), and keep the engine speed at 5,000 rpm for two minutes. 2)Read the data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage 490 mV?	Go to step **5.**	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and rear oxygen sensor. 3)Measure the resistance of harness between ECM and rear oxygen sensor connector. ***Connector & terminal*** ***(B135) No. 14 — (B19) No. 4:*** ***(B135) No. 19 — (B19) No. 3:***	Is the resistance more than 3 Ω?	Repair open circuit in harness between ECM and rear oxygen sensor connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN REAR OXYGEN SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between rear oxygen sensor harness connector and engine ground or chassis ground. ***Connector & terminal*** ***(B19) No. 4 (+) — Engine ground (−):***	Is the voltage 0.2 — 0.5 V?	Replace the rear oxygen sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector

Step		Check	Yes	No
5	**CHECK EXHAUST SYSTEM.** Check exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace faulty parts.	Replace the rear oxygen sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

Z: DTC P0138 — O_2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

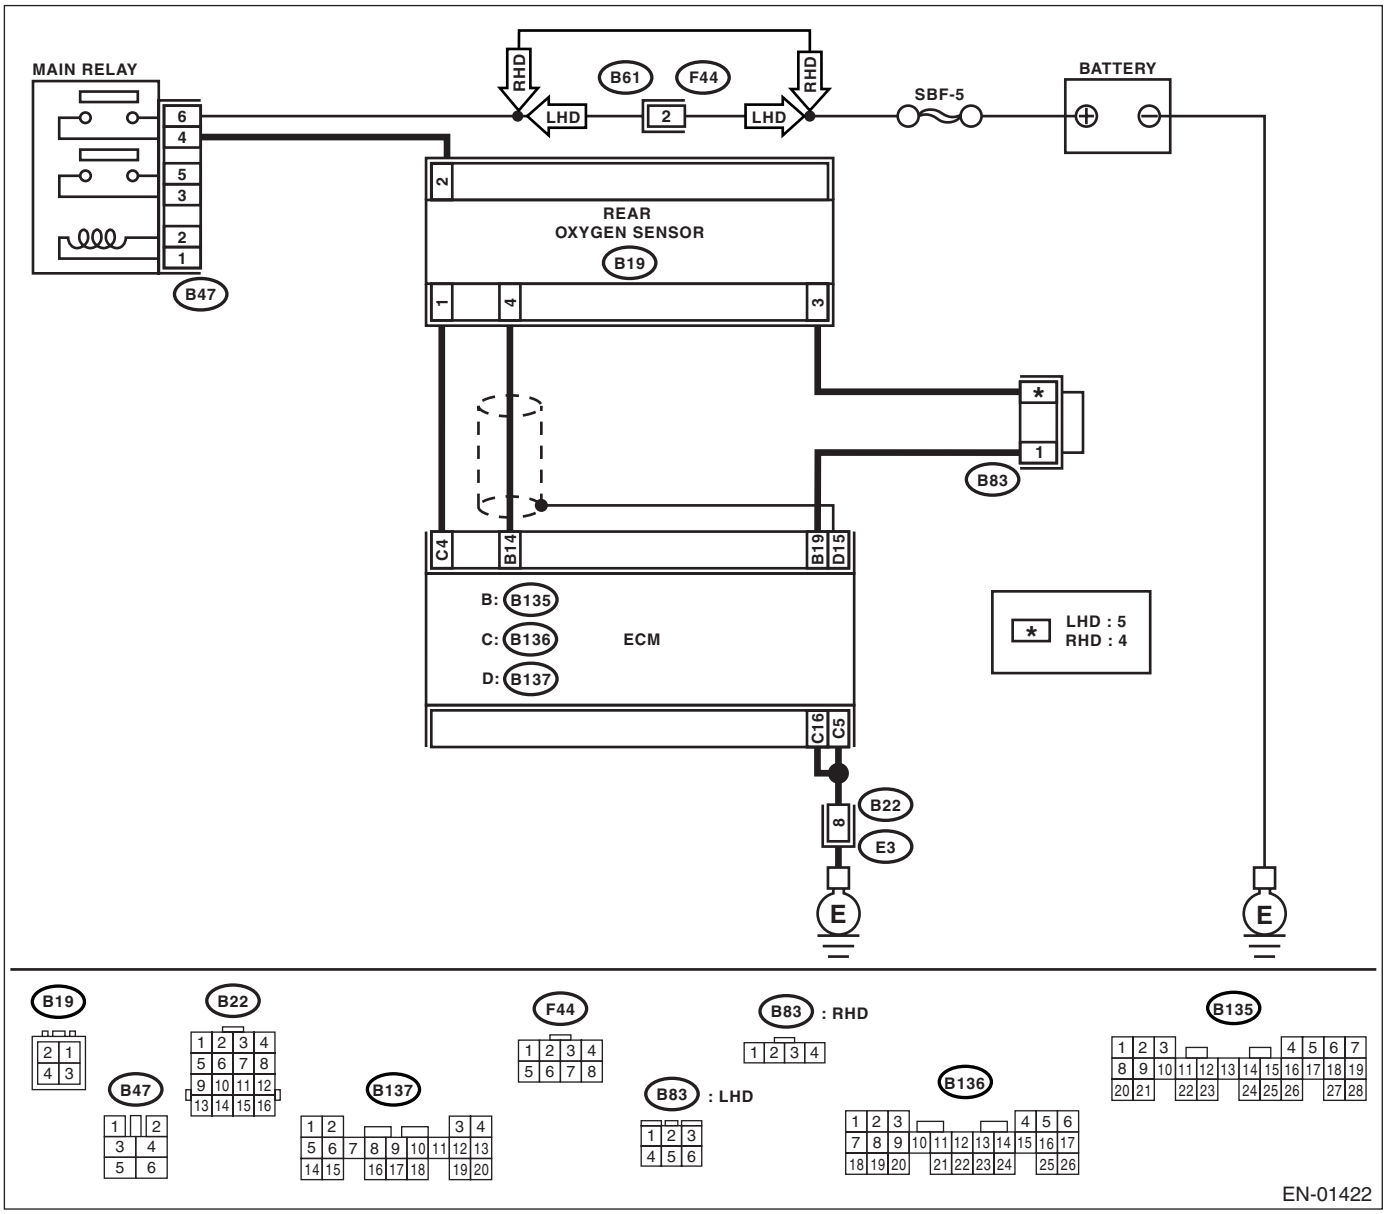

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0138.	Go to step **2.**
2	**CHECK REAR OXYGEN SENSOR DATA.** 1)Warm-up the engine until engine coolant temperature is above 70°C (158°F), and immediately decrease the engine speed from 5,000 rpm. 2)Read the data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage 250 mV?	Go to step **5.**	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and rear oxygen sensor. 3)Measure the resistance of harness between ECM and rear oxygen sensor connector. ***Connector & terminal*** ***(B135) No. 14 — (B19) No. 4:*** ***(B135) No. 19 — (B19) No. 3:***	Is the resistance more than 3 Ω?	Repair open circuit in harness between ECM and rear oxygen sensor connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN REAR OXYGEN SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between rear oxygen sensor harness connector and engine ground or chassis ground. ***Connector & terminal*** ***(B19) No. 4 (+) — Engine ground (−):***	Is the voltage 0.2 — 0.5 V?	Replace the rear oxygen sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector

	Step	Check	Yes	No
5	**CHECK EXHAUST SYSTEM.** Check exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace faulty parts.	Replace the rear oxygen sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

AA:DTC P0139 — O_2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

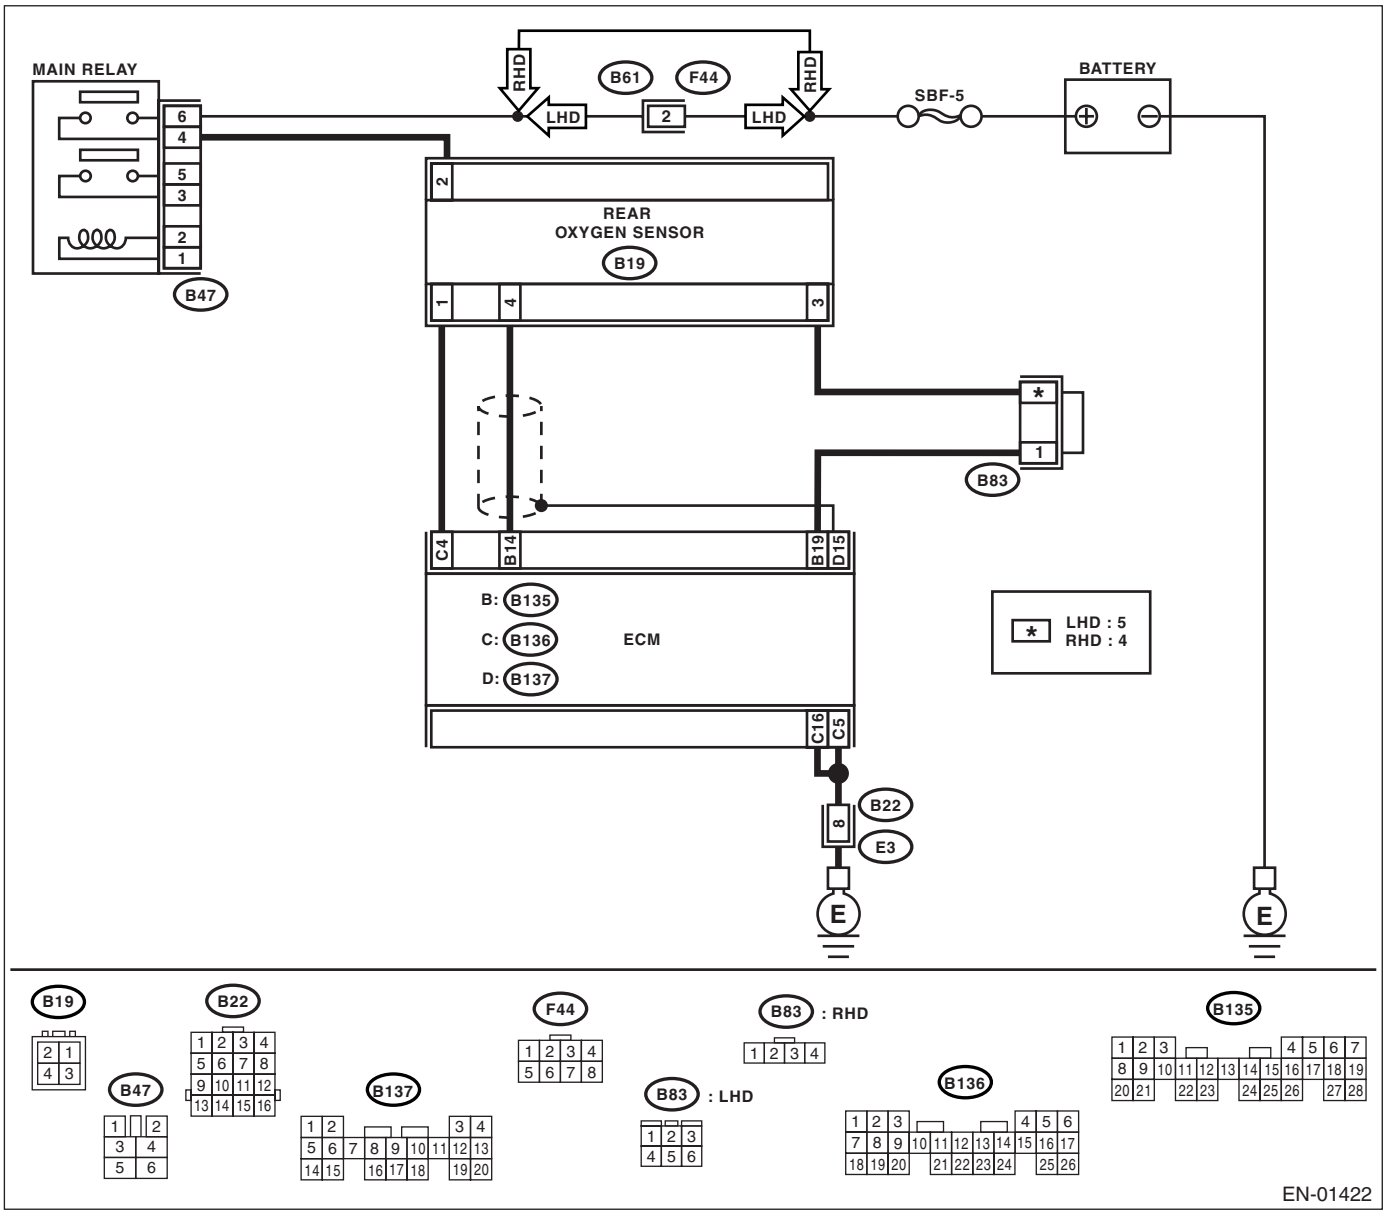

EN-01422

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0139.	Replace the rear oxygen sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

AB:DTC P0171 — SYSTEM TOO LEAN (BANK 1) —

Refer to DTC P0172 for diagnostic procedure. <Ref. to EN(H4SO)-140, DTC P0172 — SYSTEM TOO RICH (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AC:DTC P0172 — SYSTEM TOO RICH (BANK 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK EXHAUST SYSTEM.**	Are there holes or loose bolts on exhaust system?	Repair exhaust system.	Go to step **2.**
2	**CHECK EGR VALVE.**	Is the EGR valve stuck?	Replace the EGR valve.	Go to step **3.**
3	**CHECK AIR INTAKE SYSTEM.**	Are there holes, loose bolts or disconnection of hose on air intake system?	Repair air intake system.	Go to step **4.**
4	**CHECK PURGE CONTROL SOLENOID VALVE.**	Is the purge control solenoid valve stuck?	Replace the purge control solenoid valve.	Go to step **5.**
5	**CHECK PCV VALVE.**	Is PCV valve operated?	Go to step **6.**	Replace the PCV valve.
6	**CHECK FUEL PRESSURE.** **Warning:** **•Place "NO FIRE" signs near the working area.** **•Be careful not to spill fuel on the floor.** 1)Release fuel pressure. (1) Disconnect the connector from fuel pump relay. (2) Start the engine and run it until it stalls. (3) After the engine stalls, crank it for five more seconds. (4) Turn the ignition switch to OFF. 2)Connect the connector to fuel pump relay. 3)Disconnect the fuel delivery hose from fuel filter, and connect fuel pressure gauge. 4)Install the fuel filler cap. 5)Start the engine and idle while gear position is neutral. 6)Measure the fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold. **Warning:** **Before removing the fuel pressure gauge, release fuel pressure.** NOTE: If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.	Is the fuel pressure 284 — 314 kPa (2.9 — 3.2 kg/cm^2, 41 — 46 psi)?	Go to step **7.**	Repair the following items. Fuel pressure too high • Clogged fuel return line or bent hose Fuel pressure too low • Improper fuel pump discharge • Clogged fuel supply line

	Step	Check	Yes	No
7	**CHECK FUEL PRESSURE.** After connecting the pressure regulator vacuum hose, measure fuel pressure. **Warning:** **Before removing the fuel pressure gauge, release fuel pressure.** NOTE: •If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again. •If out of specification as measured at this step, check or replace pressure regulator and pressure regulator vacuum hose.	Is the fuel pressure 206 — 235 kPa (2.1 — 2.4 kg/cm^2, 30 — 34 psi)?	Go to step **8.**	Repair the following items. Fuel pressure too high • Faulty pressure regulator • Clogged fuel return line or bent hose Fuel pressure too low • Faulty pressure regulator • Improper fuel pump discharge • Clogged fuel supply line
8	**CHECK ENGINE COOLANT TEMPERATURE SENSOR.** 1)Start the engine and warm-up completely. 2)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the engine coolant temperature 70 — 100°C (158 — 212°F)?	Go to step **9.**	Replace the engine coolant temperature sensor. <Ref. to FU(H4SO)-27, Engine Coolant Temperature Sensor.>
9	**CHECK PRESSURE SENSOR SIGNAL.** 1)Start the engine and warm-up engine until coolant temperature is greater than 60°C (140°F). 2)Place the select lever in “N” or “P” range. 3)Turn the A/C switch to OFF. 4)Turn all accessory switches to OFF. 5)Read the data of pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Idling: Is the measured value 24.0 — 41.3 kPa (180 — 310 mmHg, 7.09 — 12.20 inHg)? , Ignition ON: Is the measured value 73.3 — 106.6 kPa (550 — 800 mmHg, 21.65 — 31.50 inHg)?	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.	Replace the Pressure sensor. <Ref. to FU(H4SO)-33, Manifold Absolute Pressure Sensor.>

AD:DTC P0301 — CYLINDER 1 MISFIRE DETECTED —

NOTE:
For the diagnostic procedure, refer to DTC P0304. <Ref. to EN(H4SO)-143, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AE:DTC P0302 — CYLINDER 2 MISFIRE DETECTED —

NOTE:
For the diagnostic procedure, refer to DTC P0304. <Ref. to EN(H4SO)-143, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AF:DTC P0303 — CYLINDER 3 MISFIRE DETECTED —

NOTE:
For the diagnostic procedure, refer to DTC P0304. <Ref. to EN(H4SO)-143, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AG:DTC P0304 — CYLINDER 4 MISFIRE DETECTED —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
  - Immediately at fault recognition (A misfire which could damage catalyst occurs.)
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Erroneous idling
  - Rough driving

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

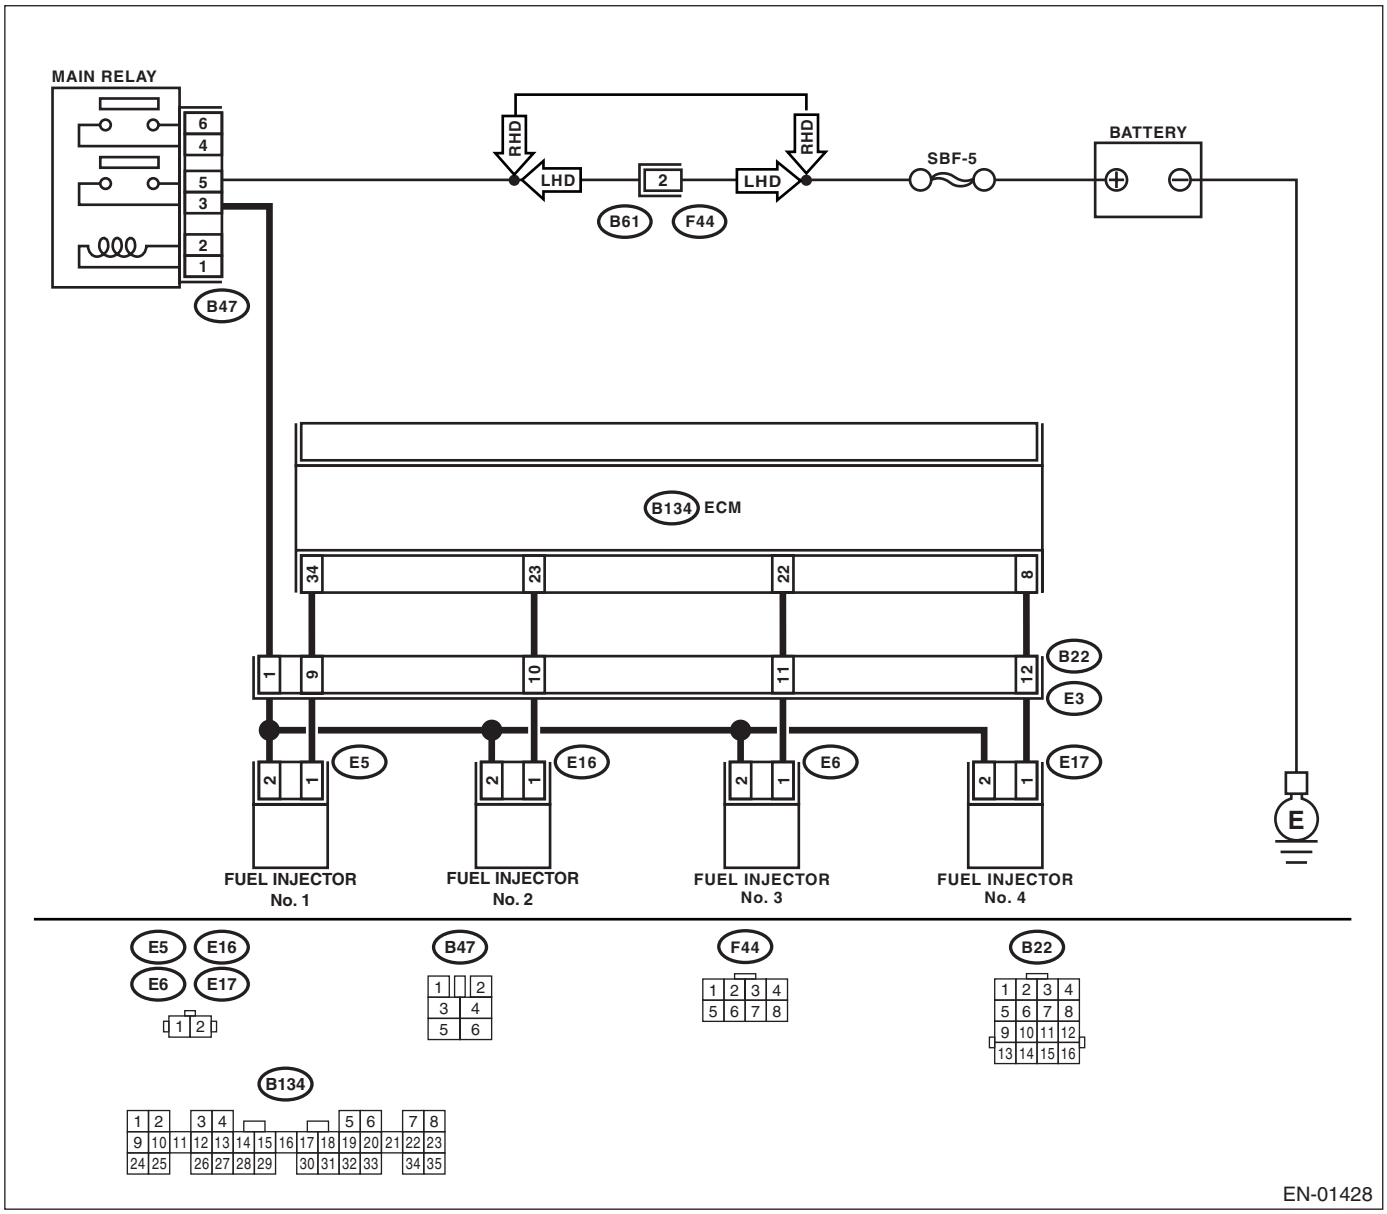

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0301, P0302, P0303 and P0304.	Go to step **2.**
2	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground on faulty cylinders. ***Connector & terminal*** ***#1 (B134) No. 34 (+) — Chassis ground (−):*** ***#2 (B134) No. 23 (+) — Chassis ground (−):*** ***#3 (B134) No. 22 (+) — Chassis ground (−):*** ***#4 (B134) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **7.**	Go to step **3.**
3	**CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel injector on faulty cylinders. 3)Measure the resistance between ECM connector and engine ground on faulty cylinders. ***Connector & terminal*** ***#1 (E5) No. 1 — Engine ground:*** ***#2 (E16) No. 1 — Engine ground:*** ***#3 (E6) No. 1 — Engine ground:*** ***#4 (E17) No. 1 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair ground short circuit in harness between fuel injector and ECM connector.
4	**CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.** Measure the resistance of harness connector between ECM connector and fuel injector on faulty cylinders. ***Connector & terminal*** ***#1 (B134) No. 34 — (E5) No. 1:*** ***#2 (B134) No. 23 — (E16) No. 1:*** ***#3 (B134) No. 22 — (E6) No. 1:*** ***#4 (B134) No. 8 — (E17) No. 1:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector
5	**CHECK FUEL INJECTOR.** Measure the resistance between fuel injector terminals on faulty cylinder. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 5 Ω — 20 Ω?	Go to step **6.**	Replace the faulty fuel injector. <Ref. to FU(H4SO)-38, Fuel Injector.>

	Step	Check	Yes	No
6	**CHECK POWER SUPPLY LINE.** 1)Turn the ignition switch to ON. 2)Measure the voltage between fuel injector and engine ground on faulty cylinders. ***Connector & terminal*** ***#1 (E5) No. 2 (+) — Engine ground (−):*** ***#2 (E16) No. 2 (+) — Engine ground (−):*** ***#3 (E6) No. 2 (+) — Engine ground (−):*** ***#4 (E17) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair poor contact in all connectors in fuel injector circuit.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and fuel injector connector on faulty cylinders • Poor contact in coupling connector • Poor contact in main relay connector • Poor contact in fuel injector connector on faulty cylinders
7	**CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel injector on faulty cylinder. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM connector and chassis ground on faulty cylinders. ***Connector & terminal*** ***#1 (B134) No. 34 (+) — Chassis ground (−):*** ***#2 (B134) No. 23 (+) — Chassis ground (−):*** ***#3 (B134) No. 22 (+) — Chassis ground (−):*** ***#4 (B134) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and fuel injector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **8.**
8	**CHECK FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between fuel injector terminals on faulty cylinder. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Replace the faulty fuel injector <Ref. to FU(H4SO)-38, Fuel Injector.> and ECM <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **9.**
9	**CHECK INSTALLATION OF CAMSHAFT POSITION SENSOR/CRANKSHAFT POSITION SENSOR.**	Is the camshaft position sensor or crankshaft position sensor loosely installed?	Tighten camshaft position sensor or crankshaft position sensor.	Go to step **10.**
10	**CHECK CRANKSHAFT SPROCKET.** Remove the timing belt cover.	Is the crankshaft sprocket rusted or does it have broken teeth?	Replace the crankshaft sprocket. <Ref. to ME(H4SO)-57, Crankshaft Sprocket.>	Go to step **11.**
11	**CHECK INSTALLATION CONDITION OF TIMING BELT.** Turn the crankshaft using ST, and align alignment mark on crankshaft sprocket with alignment mark on cylinder block. ST 499987500 CRANKSHAFT SOCKET	Is the timing belt dislocated from its proper position?	Repair installation condition of timing belt. <Ref. to ME(H4SO)-50, Timing Belt Assembly.>	Go to step **12.**

Step		Check	Yes	No
12	**CHECK FUEL LEVEL.**	Is the fuel meter indication higher than the “Lower” level?	Go to step **13.**	Replenish fuel so fuel meter indication is higher than the “Lower” level. After replenishing fuel, Go to step **13.**
13	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Clear the memory using Subaru Select Monitor. <Ref. to EN(H4SO)-46, Clear Memory Mode.> 2)Start the engine, and drive the vehicle more than 10 minutes.	Does the malfunction indicator light illuminate or blink?	Go to step **15.**	Go to step **14.**
14	**CHECK CAUSE OF MISFIRE DIAGNOSED.**	Was the cause of misfire identified when the engine is running. Ex. Disconnection of spark plug cord.	Finish diagnostics operation, if the engine has no abnormality.	1. Repair poor contact. NOTE: In this case, repair the following: • Poor contact in ignitor connector • Poor contact in ignition coil connector • Poor contact in fuel injector connector on faulty cylinders • Poor contact in ECM connector • Poor contact in coupling connector 2. If there is no poor contact, check the followings and contact with your Subaru distributor service. • Fuel condition • Whether addition agent is used or not • Plug condition • Plug cord condition • Engine oil condition

	Step	Check	Yes	No
15	**CHECK AIR INTAKE SYSTEM.**	Is there a fault in air intake system?	Repair air intake system. NOTE: Check the following items: • Are there air leaks or air suction caused by loose or dislocated nuts and bolts? • Are there cracks or any disconnection of hoses?	Go to step **16.**
16	**CHECK MISFIRE SYMPTOM.** 1)Turn the ignition switch to ON. 2)Read the DTC. •Subaru Select Monitor <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual. NOTE: Perform diagnosis according to the items listed below.	Does the Subaru Select Monitor or OBD-II general scan tool display only one DTC?	Go to step **21.**	Go to step **17.**
17	**CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.** Is any other DTC displayed?	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0301 and P0302?	Go to step **22.**	Go to step **18.**
18	**CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.** Is any other DTC displayed?	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0303 and P0304?	Go to step **23.**	Go to step **19.**
19	**CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.** Is any other DTC displayed?	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0301 and P0303?	Go to step **24.**	Go to step **20.**
20	**CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.** Is any other DTC displayed?	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0302 and P0304?	Go to step **25.**	Go to step **26.**
21	**ONLY ONE CYLINDER**	Is there a fault in that cylinder?	Repair or replace faulty parts. NOTE: Check the following items. • Spark plug • Spark plug cord • Fuel injector • Compression ratio	Go to DTC P0171. <Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

Step		Check	Yes	No
22	GROUP OF #1 AND #2 CYLINDERS	Are there faults in #1 and #2 cylinders?	Repair or replace faulty parts. NOTE: • Check the following items. • Spark plugs • Fuel injectors • Ignition coil • Compression ratio • If no abnormal is discovered, check for “IGNITION CONTROL SYSTEM” of #1 and #2 cylinders side. <Ref. to EN(H4SO)-65, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Go to DTC P0171. <Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
23	GROUP OF #3 AND #4 CYLINDERS	Are there faults in #3 and #4 cylinders?	Repair or replace faulty parts. NOTE: • Check the following items. • Spark plugs • Fuel injectors • Ignition coil • If no abnormal is discovered, check for “16. D: IGNITION CONTROL SYSTEM” of #3 and #4 cylinders side. <Ref. to EN(H4SO)-65, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Go to DTC P0171. <Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
24	GROUP OF #1 AND #3 CYLINDERS	Are there faults in #1 and #3 cylinders?	Repair or replace faulty parts. NOTE: Check the following items. • Spark plugs • Fuel injectors • Skipping timing belt teeth	Go to DTC P0171. <Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

Step		Check	Yes	No
25	GROUP OF #2 AND #4 CYLINDERS	Are there faults in #2 and #4 cylinders?	Repair or replace faulty parts. NOTE: Check the following items. • Spark plugs • Fuel injectors • Compression ratio • Skipping timing belt teeth	Go to DTC P0171. <Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
26	CYLINDER AT RANDOM	Is the engine idle rough?	Go to DTC P0170. <Ref. to EN(H4SO)-139, DTC P0171 — SYSTEM TOO LEAN (BANK 1) — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Repair or replace faulty parts. NOTE: Check the following items. • Spark plugs • Fuel injectors • Compression ratio

AH:DTC P0327 — KNOCK SENSOR 1 CIRCUIT LOW INPUT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Poor driving performance
  - Knocking occurs.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

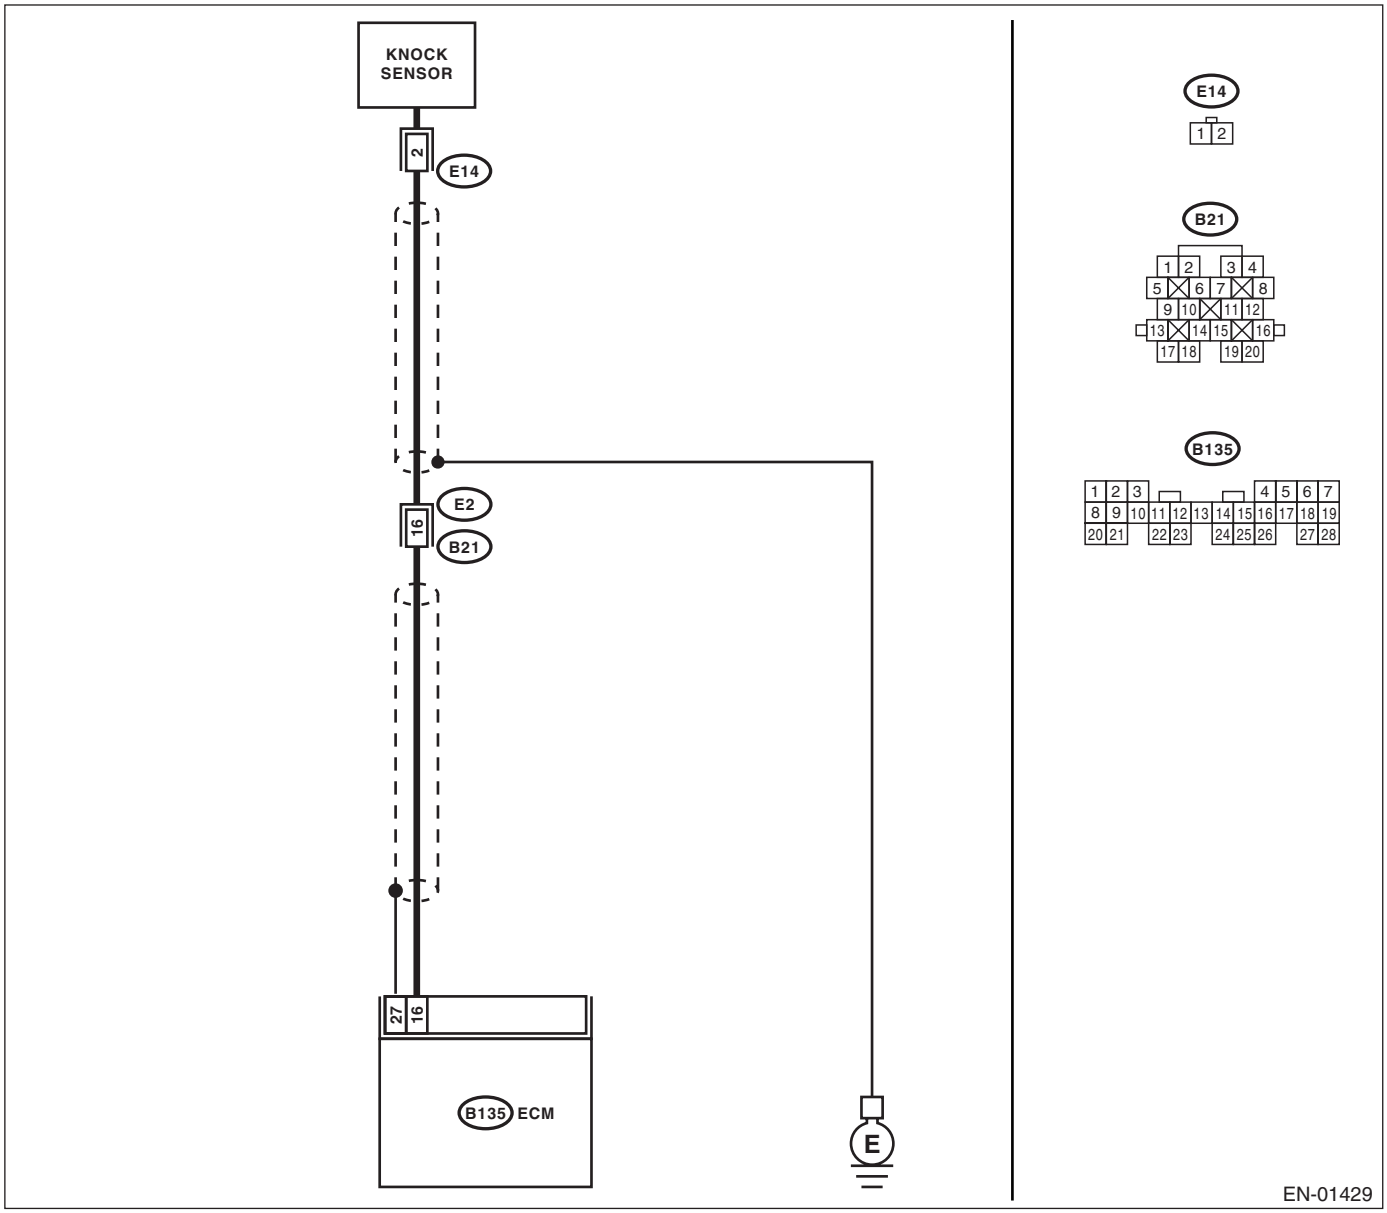

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance between ECM harness connector and chassis ground. ***Connector & terminal*** ***(B135) No. 16 — Chassis ground:***	Is the resistance more than 700 kΩ?	Go to step **2.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between knock sensor and ECM connector • Poor contact in knock sensor connector • Poor contact in coupling connector
2	**CHECK KNOCK SENSOR.** 1)Disconnect the connector from knock sensor. 2)Measure the resistance between knock sensor connector terminal and engine ground. ***Terminal*** ***No. 2 — Engine ground:***	Is the resistance more than 700 kΩ?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between knock sensor and ECM connector • Poor contact in knock sensor connector • Poor contact in coupling connector
3	**CHECK CONDITION OF KNOCK SENSOR INSTALLATION.**	Is the knock sensor installation bolt tightened securely?	Replace the knock sensor. <Ref. to FU(H4SO)-30, Knock Sensor.>	Tighten knock sensor installation bolt securely.

AI: DTC P0328 — KNOCK SENSOR 1 CIRCUIT HIGH INPUT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Poor driving performance
  - Knocking occurs.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

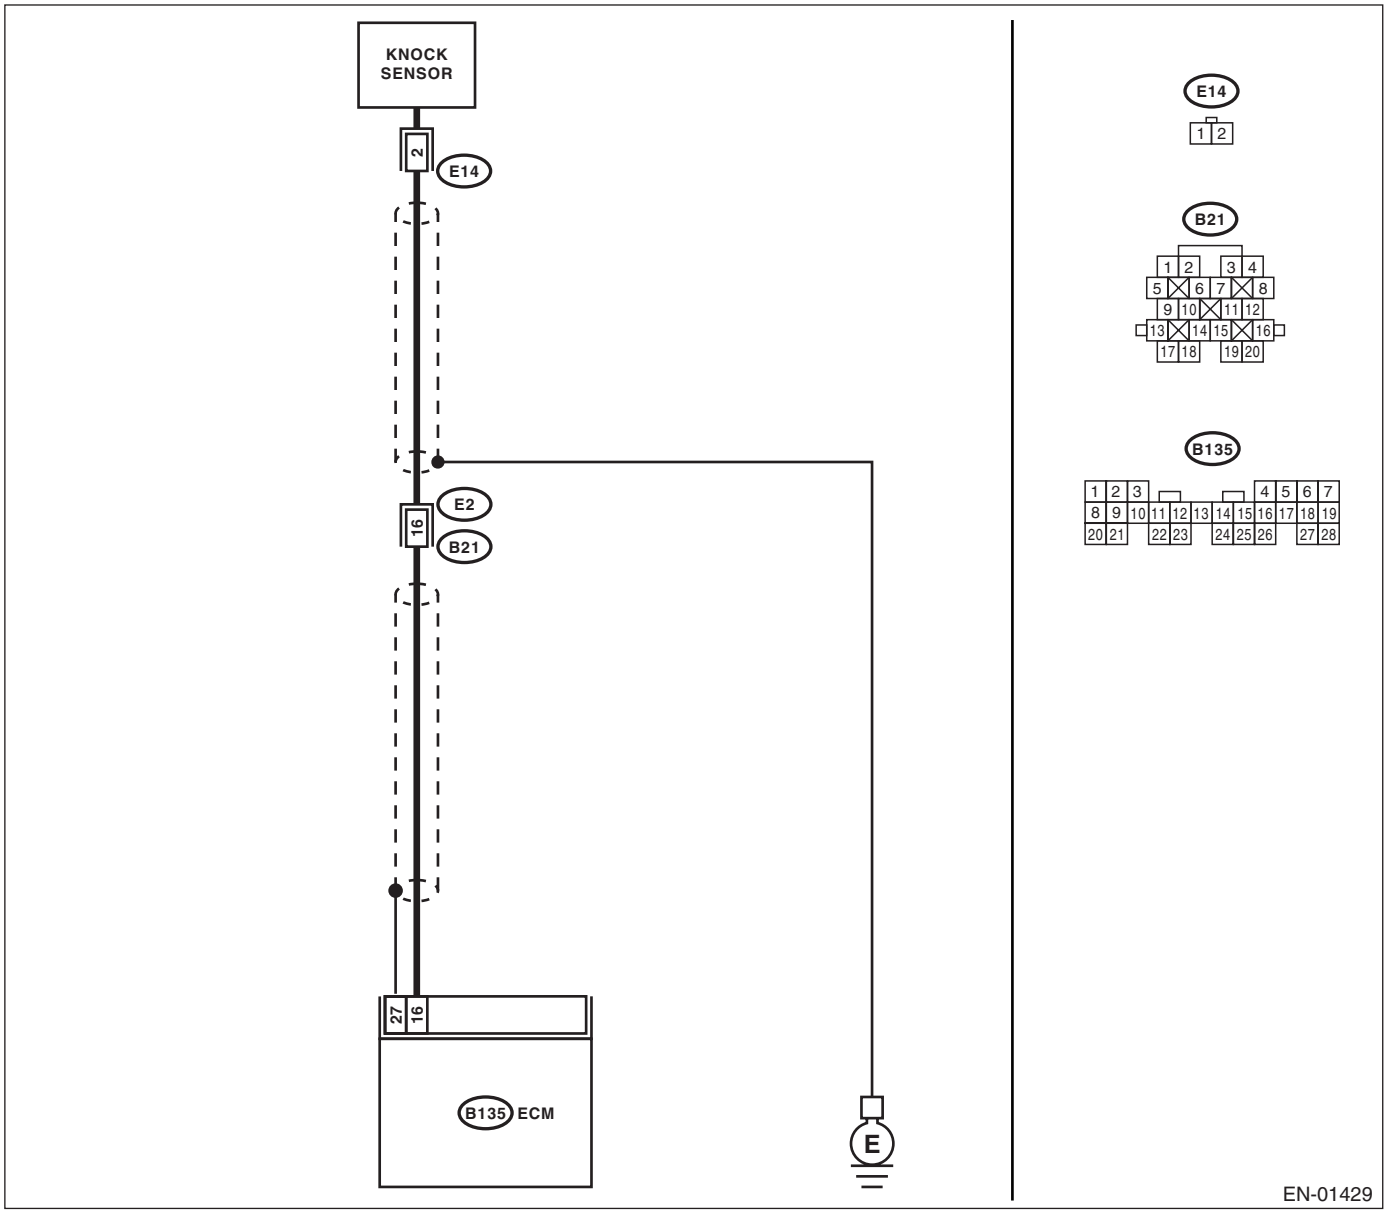

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 16 — Chassis ground:***	Is the resistance less than 400 kΩ?	Go to step **2.**	Go to step **3.**
2	**CHECK KNOCK SENSOR.** 1)Disconnect the connector from knock sensor. 2)Measure the resistance between knock sensor connector terminal and engine ground. ***Terminal*** ***No. 2 — Engine ground:***	Is the resistance less than 400 kΩ?	Replace the knock sensor. <Ref. to FU(H4SO)-30, Knock Sensor.>	Repair ground short circuit in harness between knock sensor connector and ECM connector. NOTE: The harness between both connectors is shielded. Repair short circuit of harness together with shield.
3	**CHECK INPUT SIGNAL FOR ECM.** 1)Connect the connectors to ECM and knock sensor. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 16 (+) — Chassis ground (−):***	Is the voltage more than 2 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.) NOTE: In this case, repair the following: • Poor contact in knock sensor connector • Poor contact in ECM connector • Poor contact in coupling connector	Repair poor contact in ECM connector.

AJ:DTC P0335 — CRANKSHAFT POSITION SENSOR "A" CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

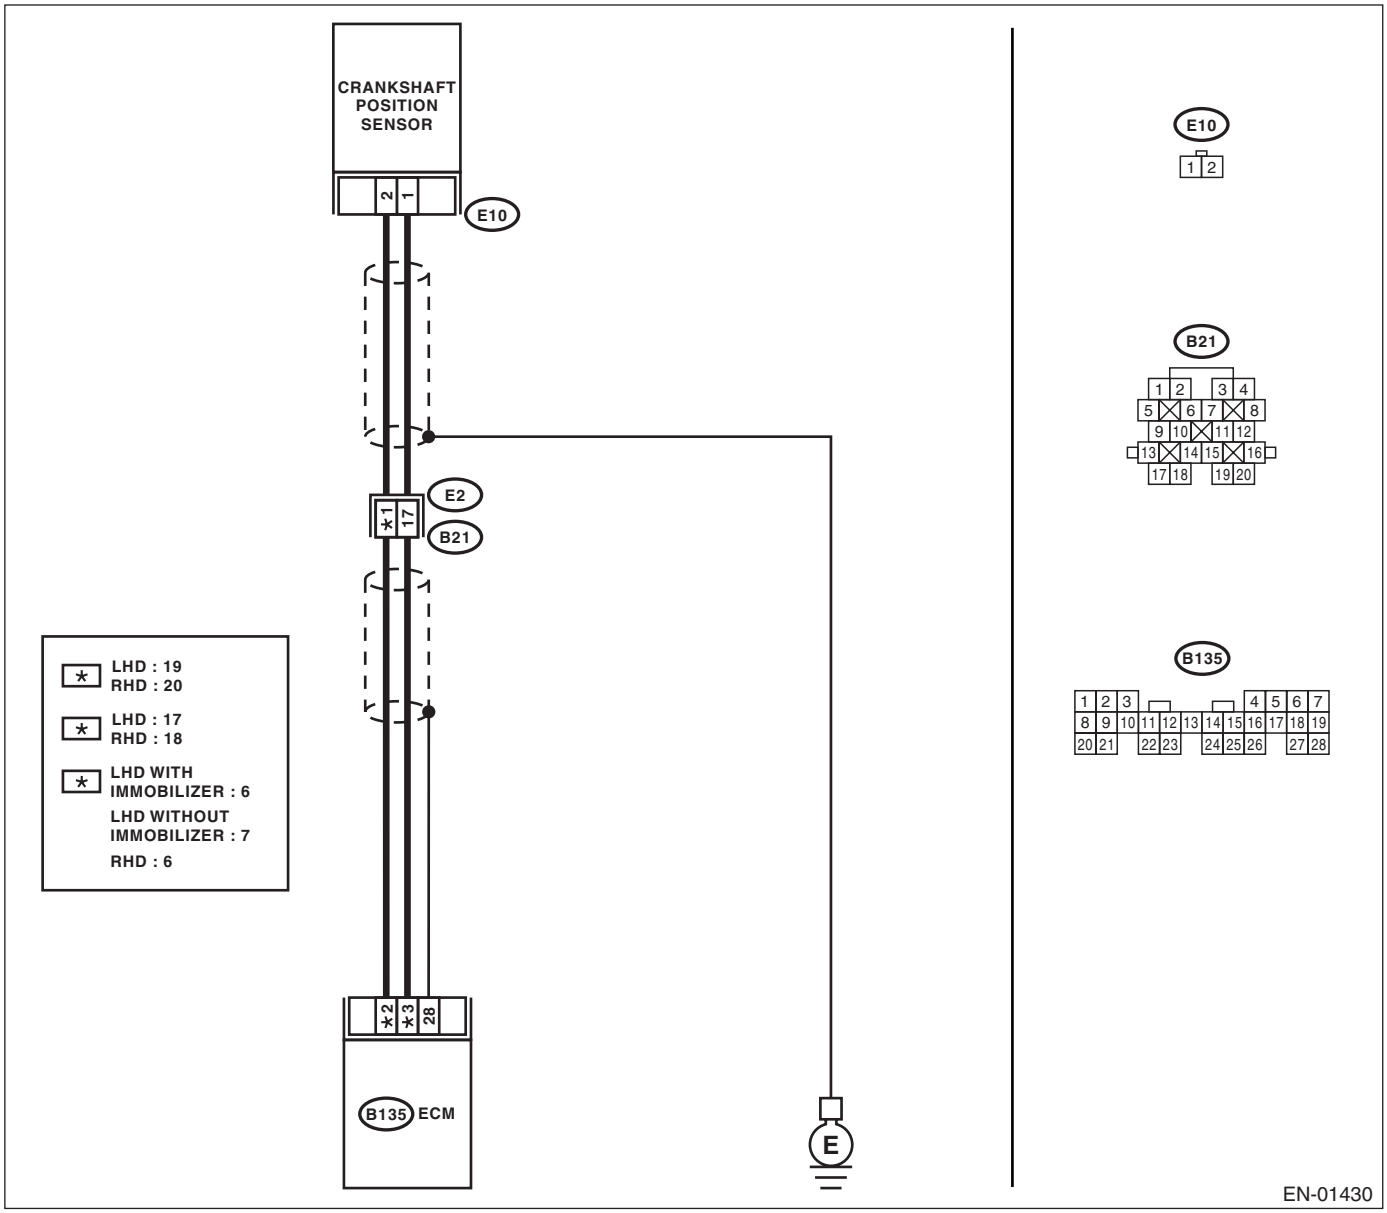

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from crankshaft position sensor. 3)Measure the resistance of harness between crankshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E10) No. 1 — Engine ground:***	Is the resistance more than 100 kΩ?	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between crankshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector	Go to step **2.**
2	**CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between crankshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E10) No. 1 — Engine ground:***	Is the resistance less than 10 Ω?	Repair ground short circuit in harness between crankshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.	Go to step **3.**
3	**CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between crankshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E10) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between crankshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
4	**CHECK CONDITION OF CRANKSHAFT POSITION SENSOR.**	Is the crankshaft position sensor installation bolt tightened securely?	Go to step **5.**	Tighten crankshaft position sensor installation bolt securely.
5	**CHECK CRANKSHAFT POSITION SENSOR.** 1)Remove the crankshaft position sensor. 2)Measure the resistance between connector terminals of crankshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Repair poor contact in crankshaft position sensor connector.	Replace the crankshaft position sensor. <Ref. to FU(H4SO)-28, Crankshaft Position Sensor.>

AK:DTC P0336 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT RANGE/ PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

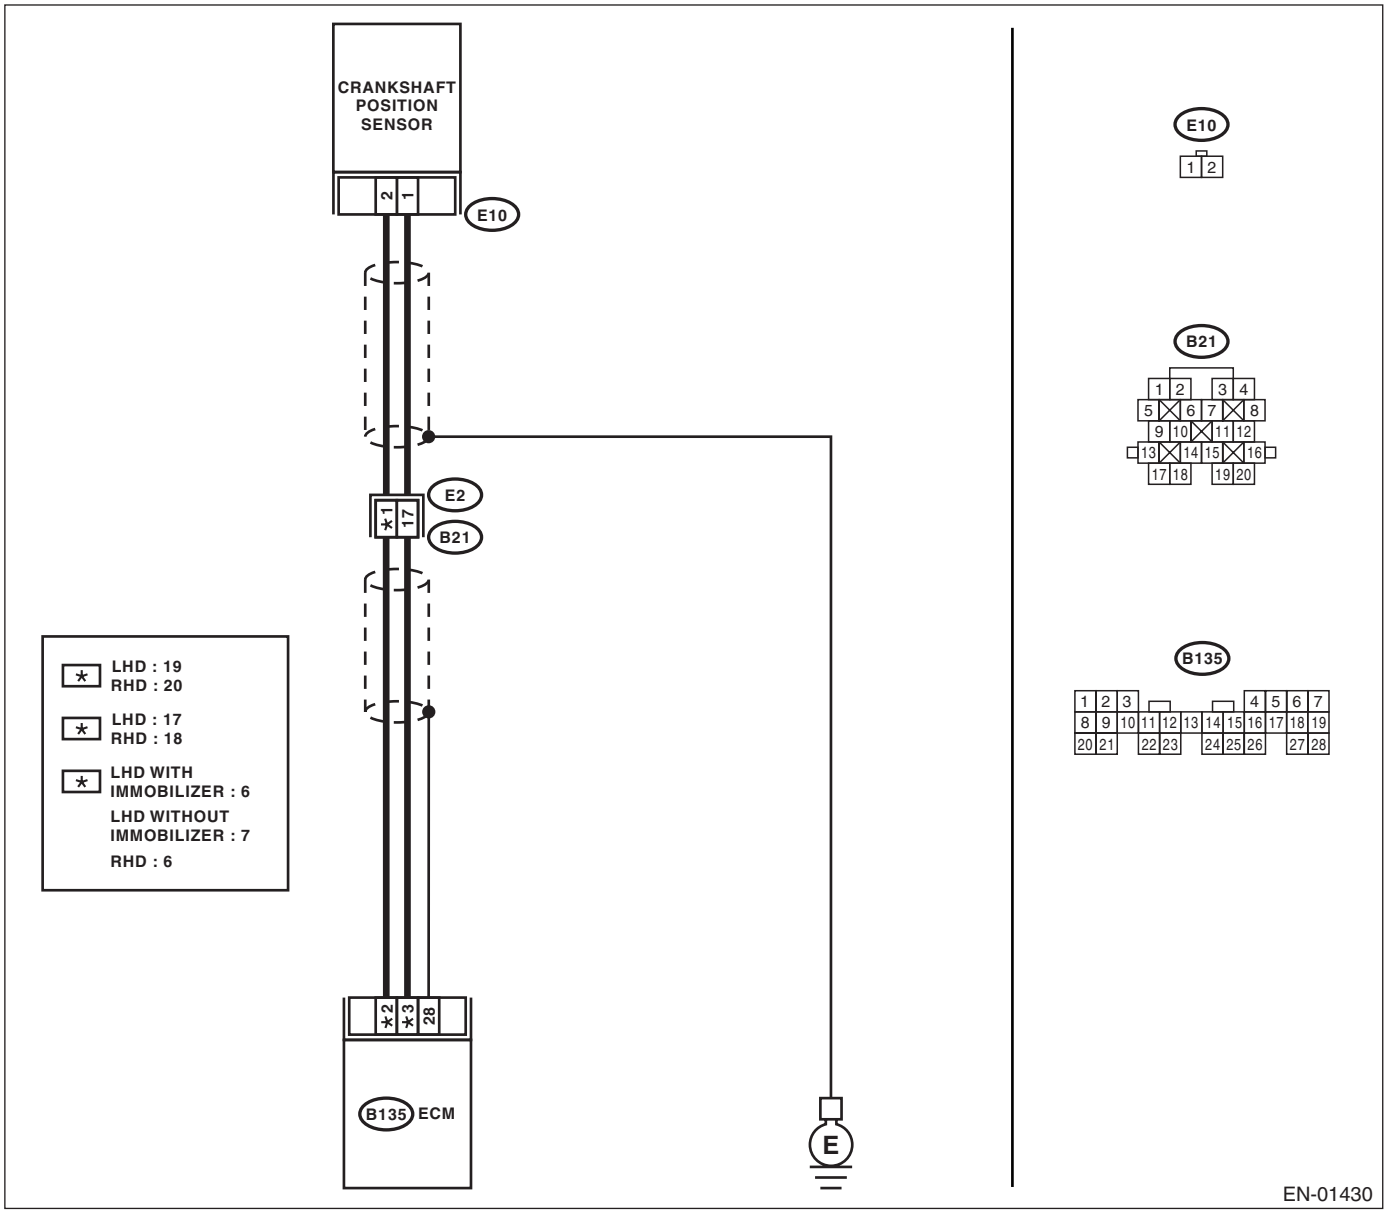

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK CONDITION OF CRANKSHAFT POSITION SENSOR.** Turn the ignition switch to OFF.	Is the crankshaft position sensor installation bolt tightened securely?	Go to step **3.**	Tighten crankshaft position sensor installation bolt securely.
3	**CHECK CRANKSHAFT SPROCKET.** Remove the front belt cover.	Are crankshaft sprocket teeth cracked or damaged?	Replace the crankshaft sprocket. <Ref. to ME(H4SO)-57, Crankshaft Sprocket.>	Go to step **4.**
4	**CHECK INSTALLATION CONDITION OF TIMING BELT.** Turn the crankshaft using ST, and align alignment mark on crankshaft sprocket with alignment mark on cylinder block. ST 499987500 CRANKSHAFT SOCKET	Is the timing belt dislocated from its proper position?	Repair installation condition of timing belt. <Ref. to ME(H4SO)-50, Timing Belt Assembly.>	Replace the crankshaft position sensor. <Ref. to FU(H4SO)-28, Crankshaft Position Sensor.>

AL:DTC P0340 — CAMSHAFT POSITION SENSOR “A” CIRCUIT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

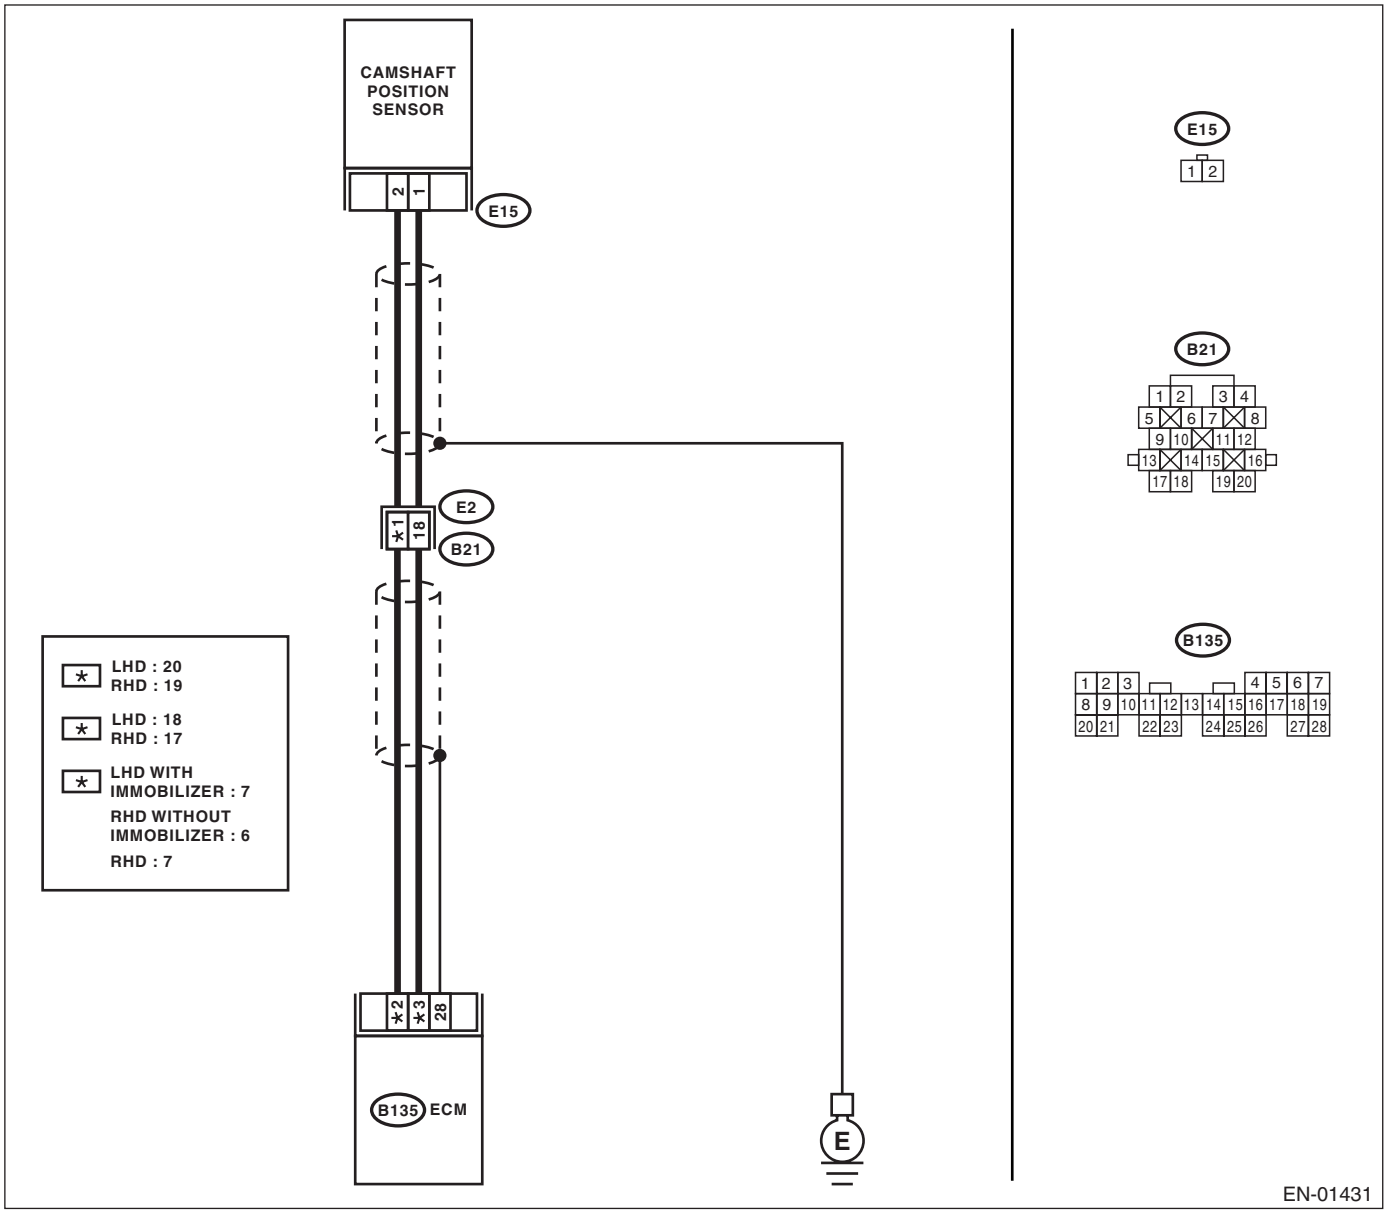

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from camshaft position sensor. 3)Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance more than 100 kΩ?	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector	Go to step **2.**
2	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance less than 10 Ω?	Repair ground short circuit in harness between camshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.	Go to step **3.**
3	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
4	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR.**	Is the camshaft position sensor installation bolt tightened securely?	Go to step **5.**	Tighten camshaft position sensor installation bolt securely.
5	**CHECK CAMSHAFT POSITION SENSOR.** 1)Remove the camshaft position sensor. 2)Measure the resistance between connector terminals of camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Repair poor contact in camshaft position sensor connector.	Replace the camshaft position sensor. <Ref. to FU(H4SO)-29, Camshaft Position Sensor.>

AM:DTC P0341 — CAMSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

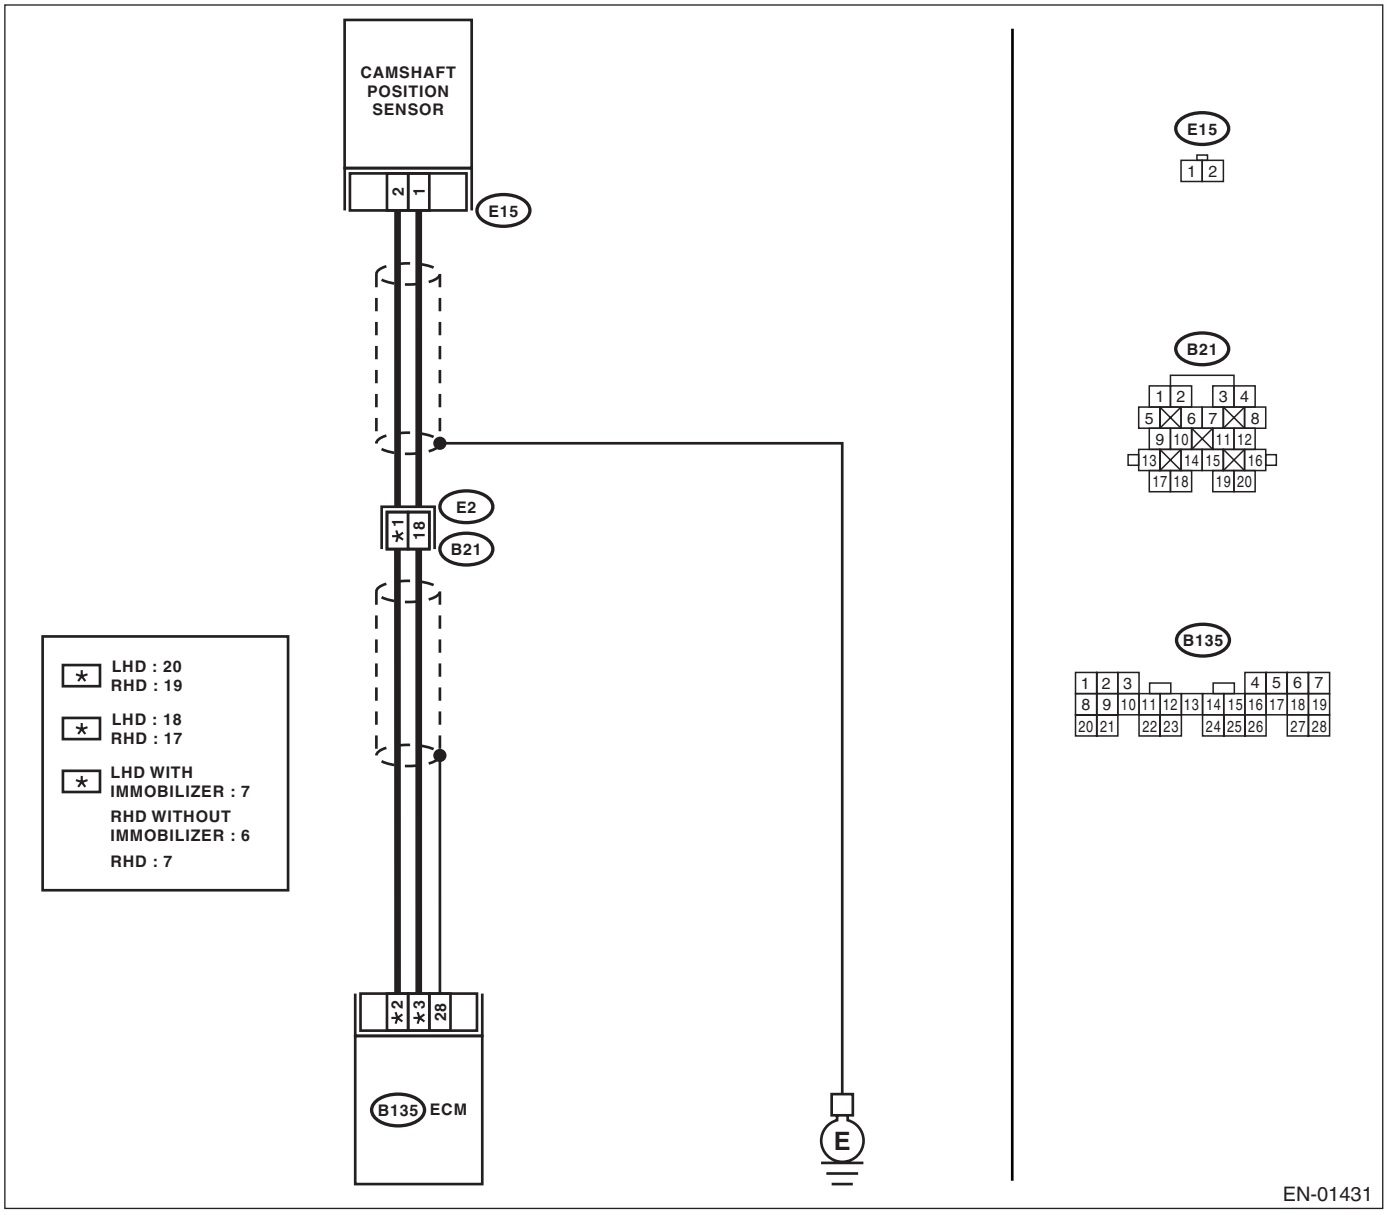

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from camshaft position sensor. 3)Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance more than 100 kΩ?	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector	Go to step **3.**
3	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance less than 10 Ω?	Repair ground short circuit in harness between camshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.	Go to step **4.**
4	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
5	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR.**	Is the camshaft position sensor installation bolt tightened securely?	Go to step **6.**	Tighten camshaft position sensor installation bolt securely.
6	**CHECK CAMSHAFT POSITION SENSOR.** 1)Remove the camshaft position sensor. 2)Measure the resistance between connector terminals of camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Go to step **7.**	Replace the camshaft position sensor. <Ref. to FU(H4SO)-29, Camshaft Position Sensor.>

	Step	Check	Yes	No
7	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR.** Turn the ignition switch to OFF.	Is the camshaft position sensor installation bolt tightened securely?	Go to step **8.**	Tighten camshaft position sensor installation bolt securely.
8	**CHECK CAMSHAFT SPROCKET.** Remove the front belt cover. <Ref. to ME(H4SO)-49, Timing Belt Cover.>	Are camshaft sprocket teeth cracked or damaged?	Replace the camshaft sprocket. <Ref. to ME(H4SO)-55, Camshaft Sprocket.>	Go to step **9.**
9	**CHECK INSTALLATION CONDITION OF TIMING BELT.** Turn the camshaft using ST, and align alignment mark on camshaft sprocket with alignment mark on timing belt cover LH. ST 499207100 CAMSHAFT SPROCKET WRENCH	Is the timing belt dislocated from its proper position?	Repair installation condition of timing belt. <Ref. to ME(H4SO)-50, Timing Belt Assembly.>	Replace the camshaft position sensor. <Ref. to FU(H4SO)-29, Camshaft Position Sensor.>

AN:DTC P0400 — EXHAUST GAS RECIRCULATION FLOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Poor driving performance on low engine speed
  - Erroneous idling
  - Poor driving performance.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

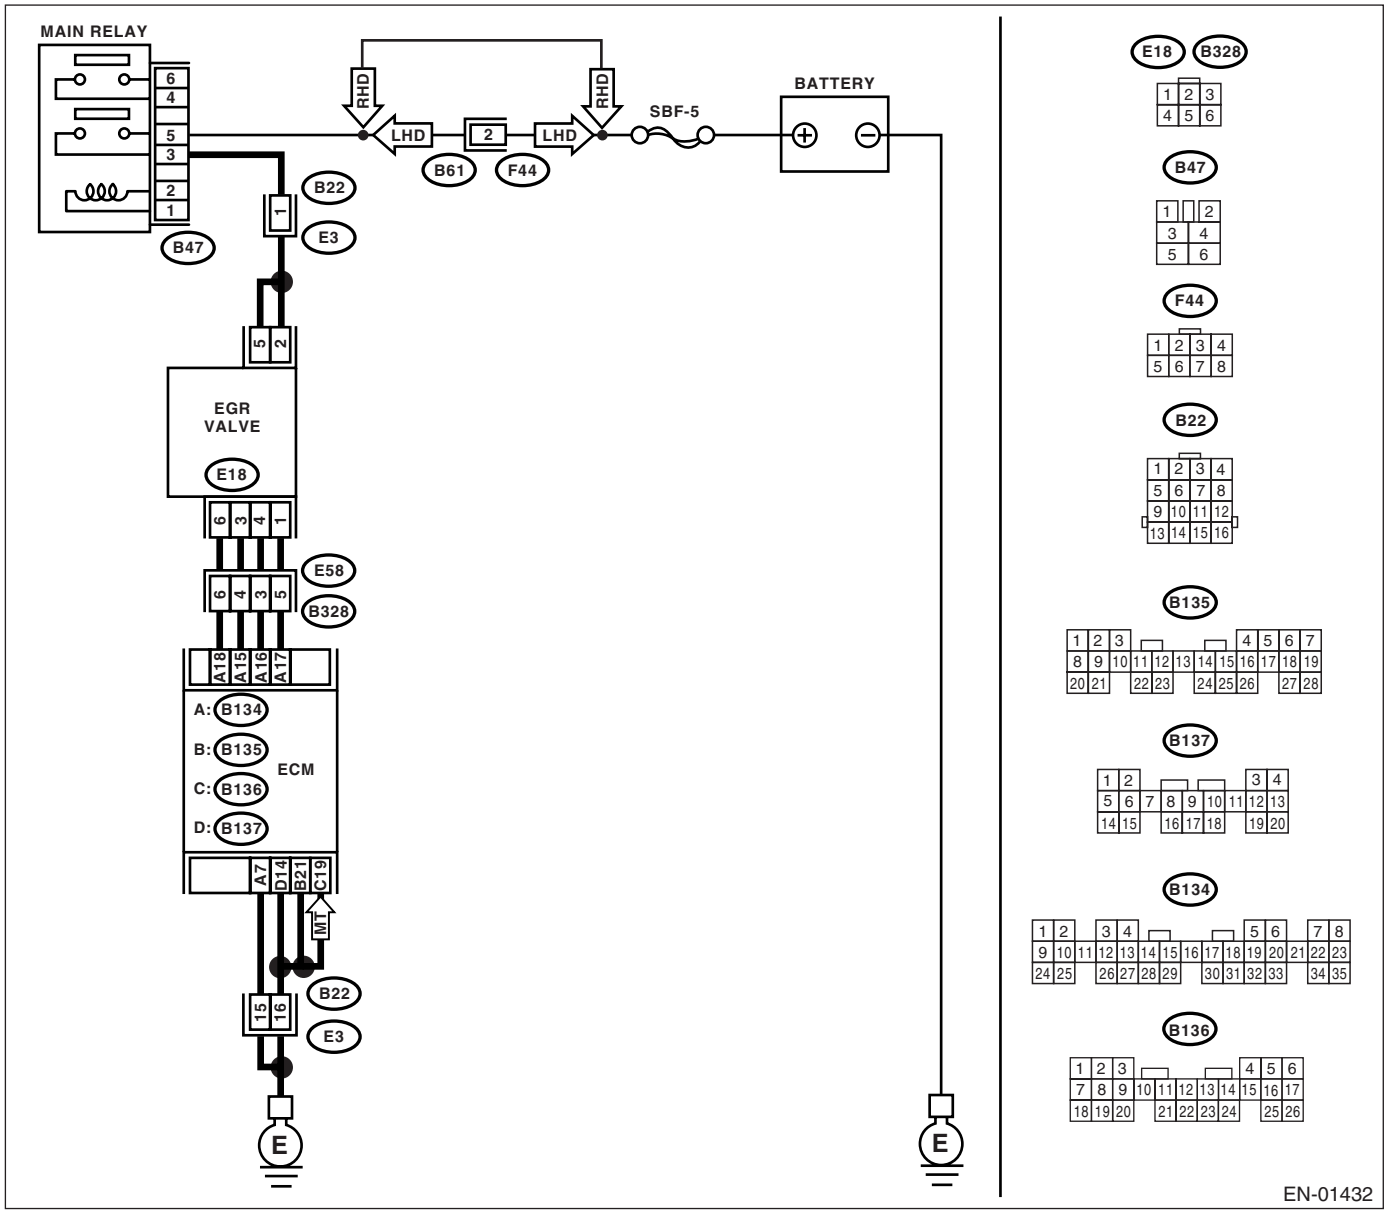

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK CURRENT DATA.** 1)Start engine. 2)Rear the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the measured value more than 53.3 kPa (400 mmHg, 15.75 inHg)?	Check if EGR valve, intake manifold pressure sensor and throttle body are securely installed.	Go to step **3.**
3	**CHECK POWER SUPPLY TO EGR SOLENOID VALVE.** 1)Disconnect the connector from EGR solenoid valve. 2)Turn the ignition switch to ON. 3)Measure the voltage between EGR solenoid valve and engine ground. ***Connector & terminal*** ***(E18) No. 2 — Engine ground:*** ***(E18) No. 5 — Engine ground:***	Is the voltage more than 10 V?	Go to step **4.**	Repair the open circuit in harness between main relay and EGR solenoid valve connector.
4	**CHECK EGR SOLENOID VALVE.** Measure the resistance between EGR solenoid valve terminals. NOTE: Make sure there are no foreign objects caught between EGR solenoid valve and valve seat. ***Terminals*** ***No. 1 — No. 2:*** ***No. 3 — No. 2:*** ***No. 4 — No. 5:*** ***No. 6 — No. 5:***	In the resistance 20 Ω — 30 Ω?	Go to step **5.**	Replace the EGR solenoid valve. <Ref. to EC(H4SO)-5, EGR Valve.>
5	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the connectors to ECM and EGR solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 15 (+) — Chassis ground (–) :*** ***(B134) No. 16 (+) — Chassis ground (–) :*** ***(B134) No. 17 (+) — Chassis ground (–) :*** ***(B134) No. 18 (+) — Chassis ground (–) :***	Is the voltage 0 — 10 V?	Repair the poor contact in ECM connector.	Go to step **6.**

	Step	Check	Yes	No
6	**CHECK HARNESS BETWEEN EGR SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from EGR solenoid valve and ECM. 3)Measure the resistance of harness between EGR solenoid valve and ECM connector. ***Connector & terminal*** ***(B134) No. 18 — (E18) No. 6:*** ***(B134) No. 17 — (E18) No. 1:*** ***(B134) No. 16 — (E18) No. 4:*** ***(B134) No. 15 — (E18) No. 3:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair the open circuit in harness between ECM and EGR solenoid valve connector.
7	**CHECK HARNESS BETWEEN EGR SOLENOID VALVE AND ECM CONNECTOR.** Measure the resistance of harness between EGR solenoid valve and chassis ground. ***Connector & terminal*** ***(B134) No. 15 — Chassis ground:*** ***(B134) No. 16 — Chassis ground:*** ***(B134) No. 17 — Chassis ground:*** ***(B134) No. 18 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair the short circuit in harness between main relay and EGR solenoid valve connector.
8	**CHECK POOR CONTACT.** Check the poor contact in ECM and EGR solenoid valve connector.	Is there poor contact in ECM and EGR solenoid valve connector?	Repair the poor contact in ECM and EGR solenoid valve connector.	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.

AO:DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD (BANK 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Idle mixture is out of specifications.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

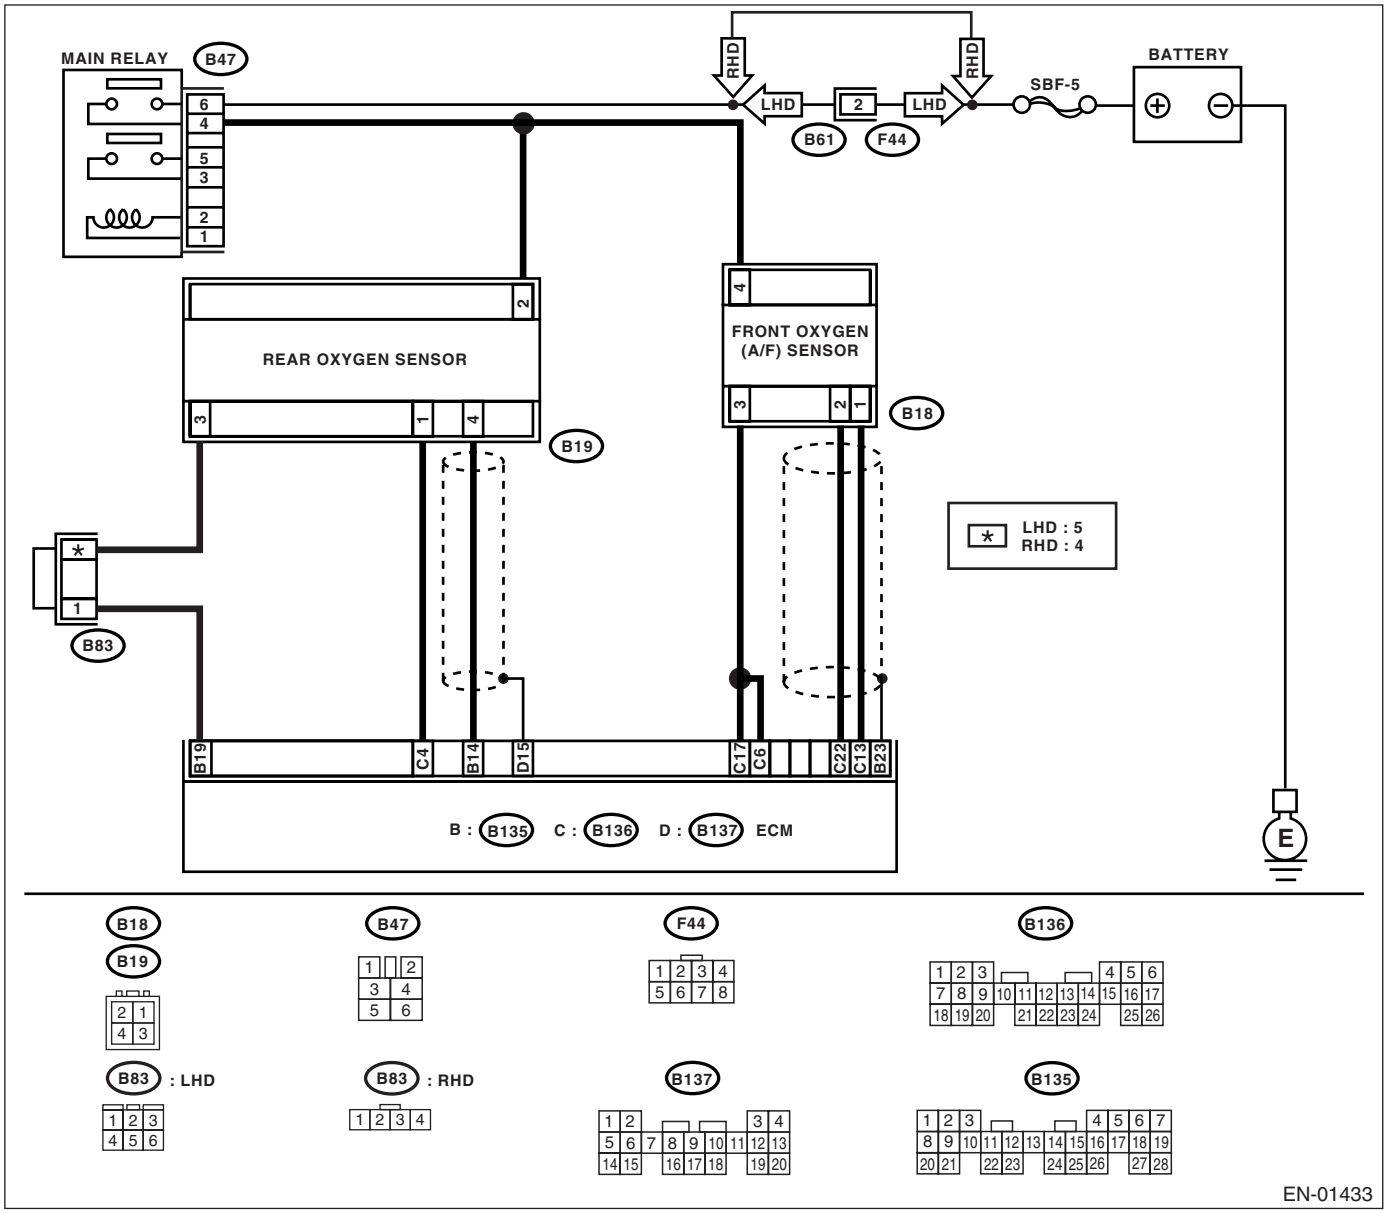

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0420.	Go to step **2.**
2	**CHECK EXHAUST SYSTEM.** Check for gas leaks or air suction caused by loose or dislocated nuts and bolts, and open hole at exhaust pipes. NOTE: Check the following positions. •Between cylinder head and front exhaust pipe •Between front exhaust pipe and front catalytic converter •Between front catalytic converter and rear catalytic converter	Is there a fault in exhaust system?	Repair or replace the exhaust system. <Ref. to EX(H4SO)-2, General Description.>	Go to step **3.**
3	**CHECK CATALYTIC CONVERTER.**	Is there damage at rear face or front face of front catalyst?	Replace the catalytic converter. <Ref. to EC(H4SO)-3, Front Catalytic Converter.>	Go to step **5.**
4	**CHECK REAR OXYGEN SENSOR GROUND HARNESS.** 1)Disconnect the rear oxygen sensor and ECM connectors. 2)Measure the resistance between rear oxygen sensor connector and ECM connector. ***Connector & terminal*** ***(B19) No. 3 — (B135) No. 19:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between ECM and rear oxygen sensor.
5	**CHECK SHIELD HARNESS.**	Is the shield harness opened?	Repair the shield harness.	Contact with your Subaru distributor service.

AP:DTC P0458 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

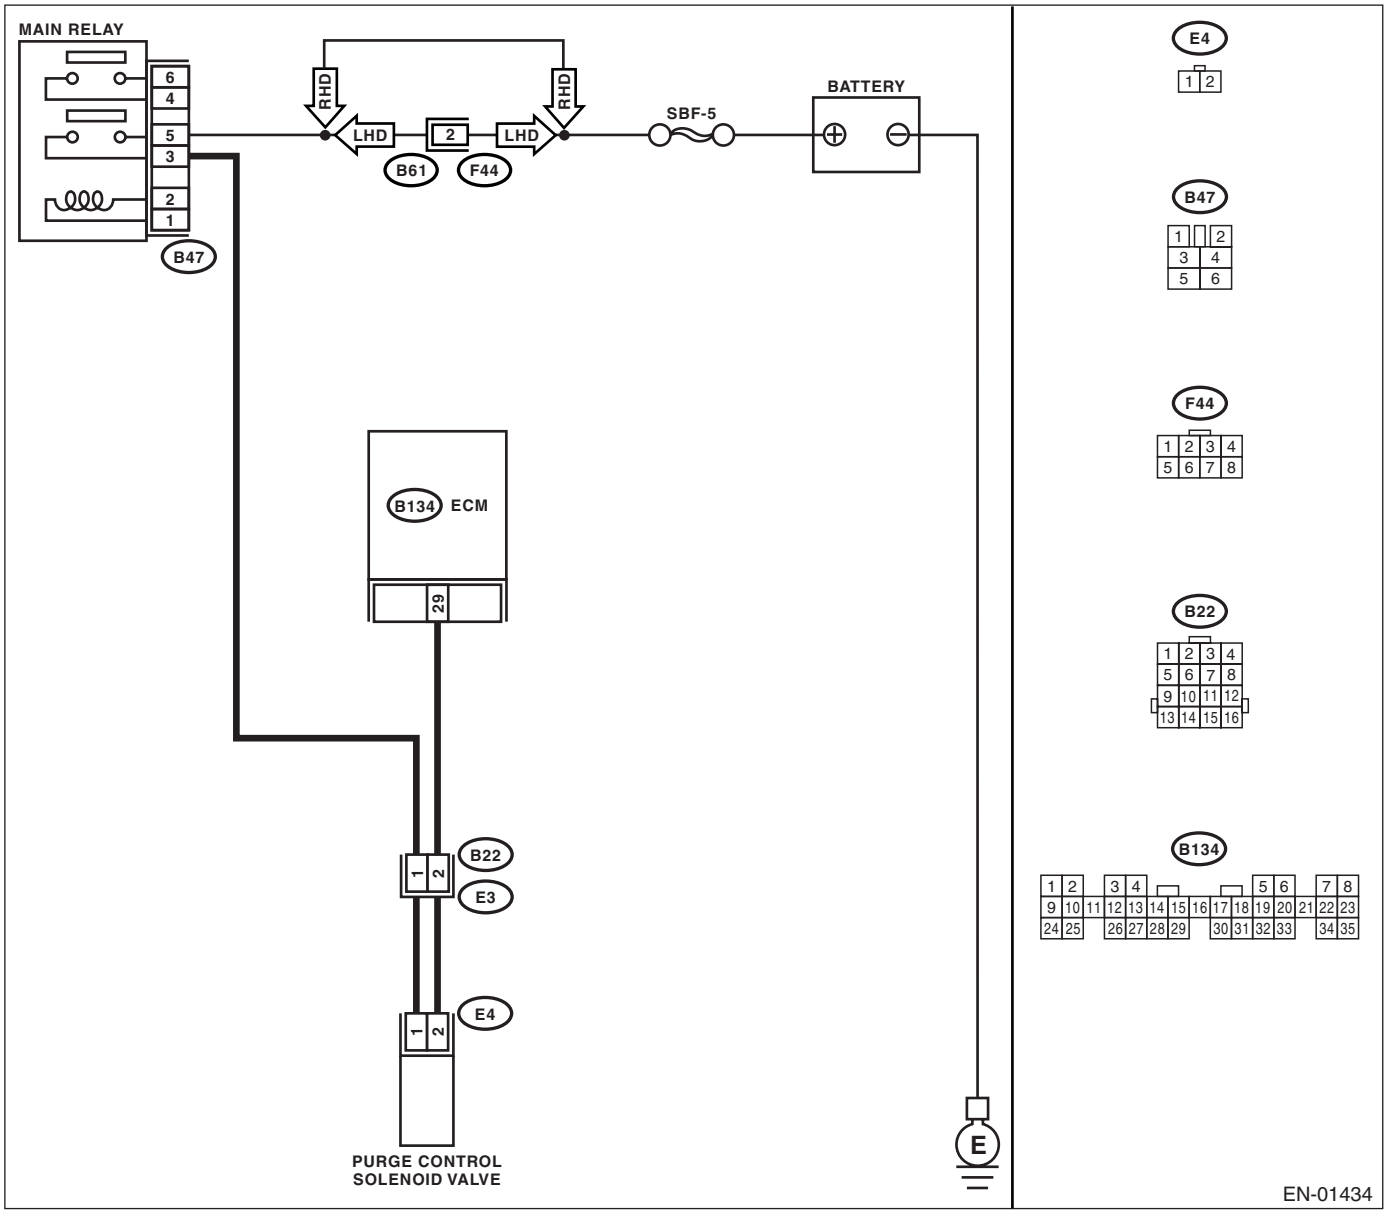

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 29 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.	Go to step **2.**
2	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from purge control solenoid valve and ECM. 3)Measure the resistance of harness between purge control solenoid valve connector and engine ground. ***Connector & terminal*** ***(E4) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair ground short circuit in harness between ECM and purge control solenoid valve connector.
3	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** Measure the resistance of harness between ECM and purge control solenoid valve of harness connector. ***Connector & terminal*** ***(B134) No. 29 — (E4) No. 2:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair open circuit in harness between ECM and purge control solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and purge control solenoid valve connector • Poor contact in coupling connector
4	**CHECK PURGE CONTROL SOLENOID VALVE.** 1)Remove the purge control solenoid valve. 2)Measure the resistance between purge control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 10 — 100 Ω?	Go to step **5.**	Replace the purge control solenoid valve. <Ref. to EC(H4SO)-7, Purge Control Solenoid Valve.>
5	**CHECK POWER SUPPLY TO PURGE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to ON. 2)Measure the voltage between purge control solenoid valve and engine ground. ***Connector & terminal*** ***(E4) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Repair open circuit in harness between main relay and purge control solenoid valve connector.

	Step	Check	Yes	No
6	**CHECK POOR CONTACT.** Check poor contact in purge control solenoid valve connector.	Is there poor contact in purge control solenoid valve connector?	Repair poor contact in purge control solenoid valve connector.	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

AQ:DTC P0459 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

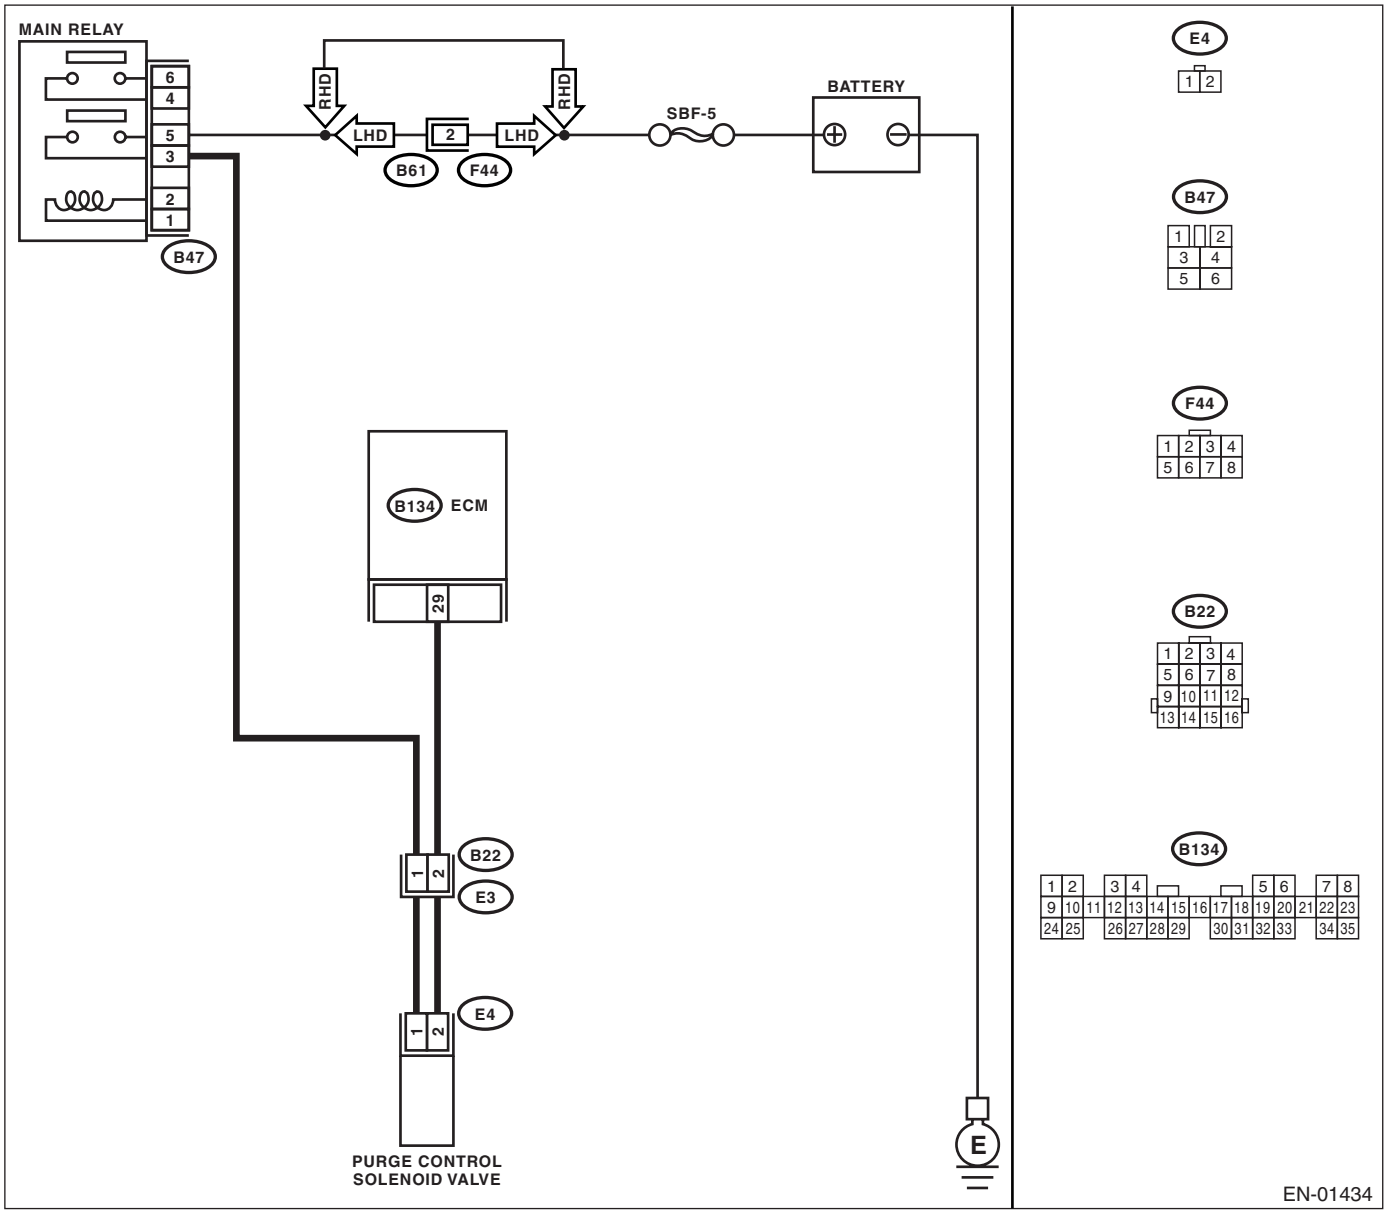

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector at the lower portion of instrument panel (on the driver's side). 3)Turn the ignition switch to ON. 4)While operating the purge control solenoid valve, measure voltage between ECM and chassis ground. NOTE: Purge control solenoid valve operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4SO)-47, Compulsory Valve Operation Check Mode.> ***Connector & terminal*** ***(B134) No. 29 (+) — Chassis ground (−):***	Is the voltage 0 — 10 V?	Go to step **2.**	Even if malfunction indicator light light up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.
2	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 29 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Go to step **3.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from purge control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 29 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and purge control solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **5.**
5	**CHECK PURGE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between purge control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Replace the purge control solenoid valve <Ref. to EC(H4SO)-7, Purge Control Solenoid Valve.> and ECM <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **6.**
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

AR:DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

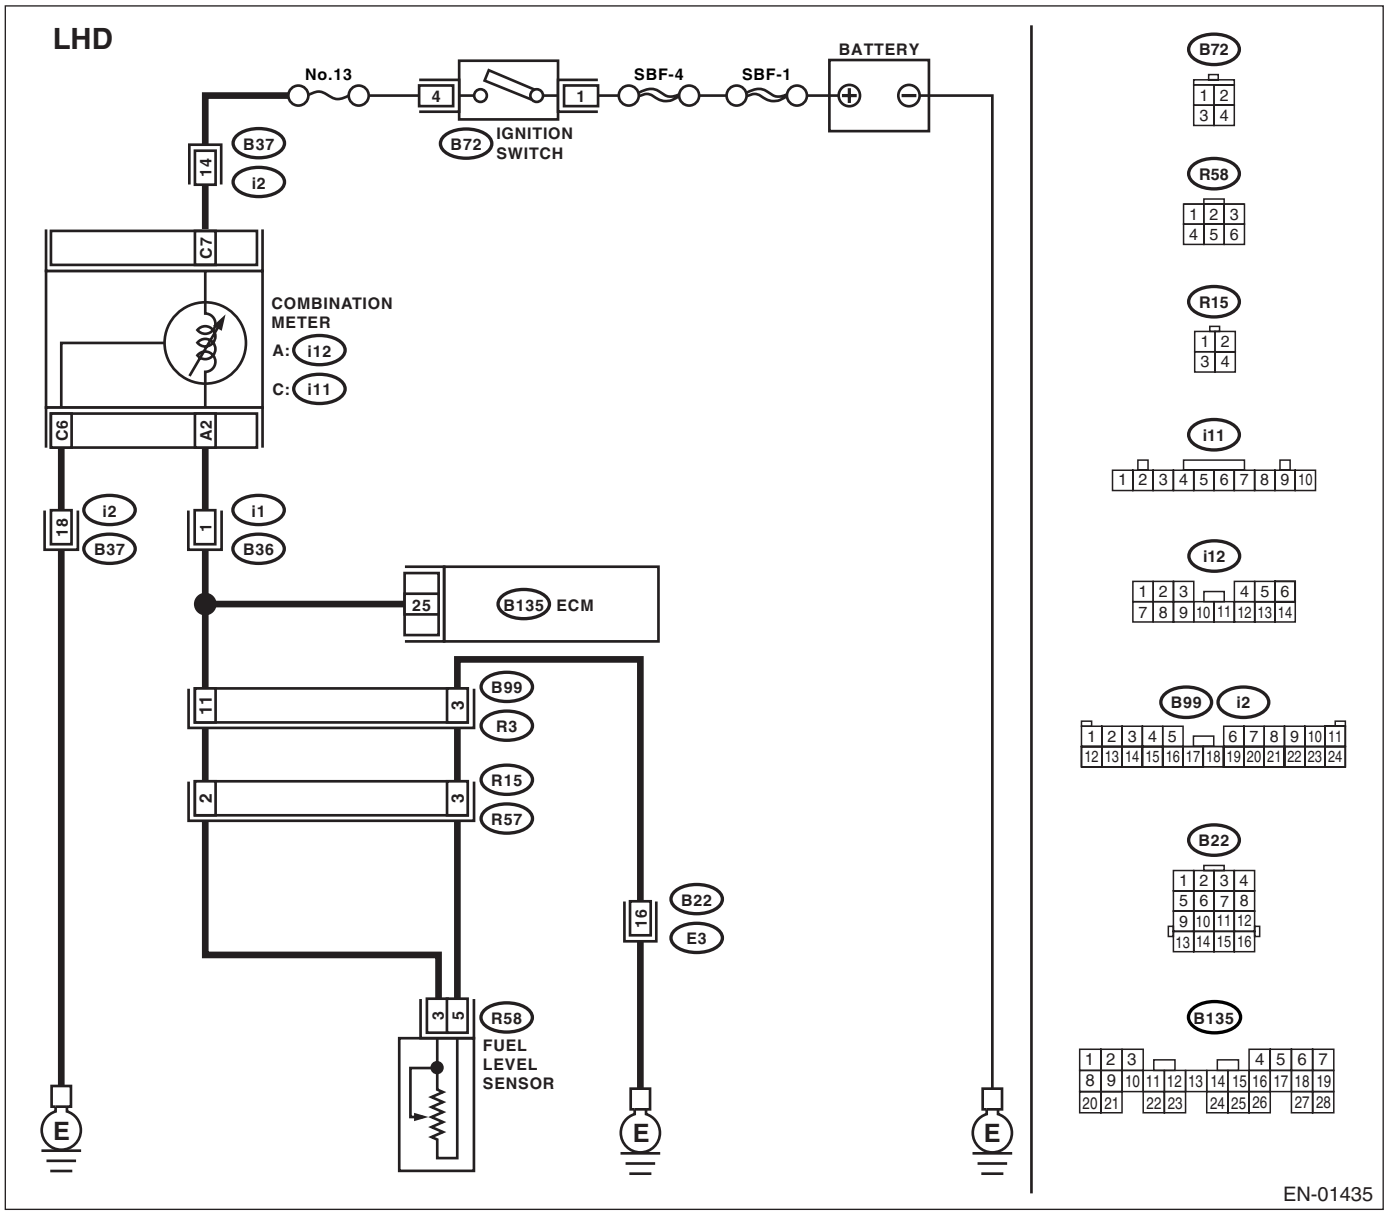

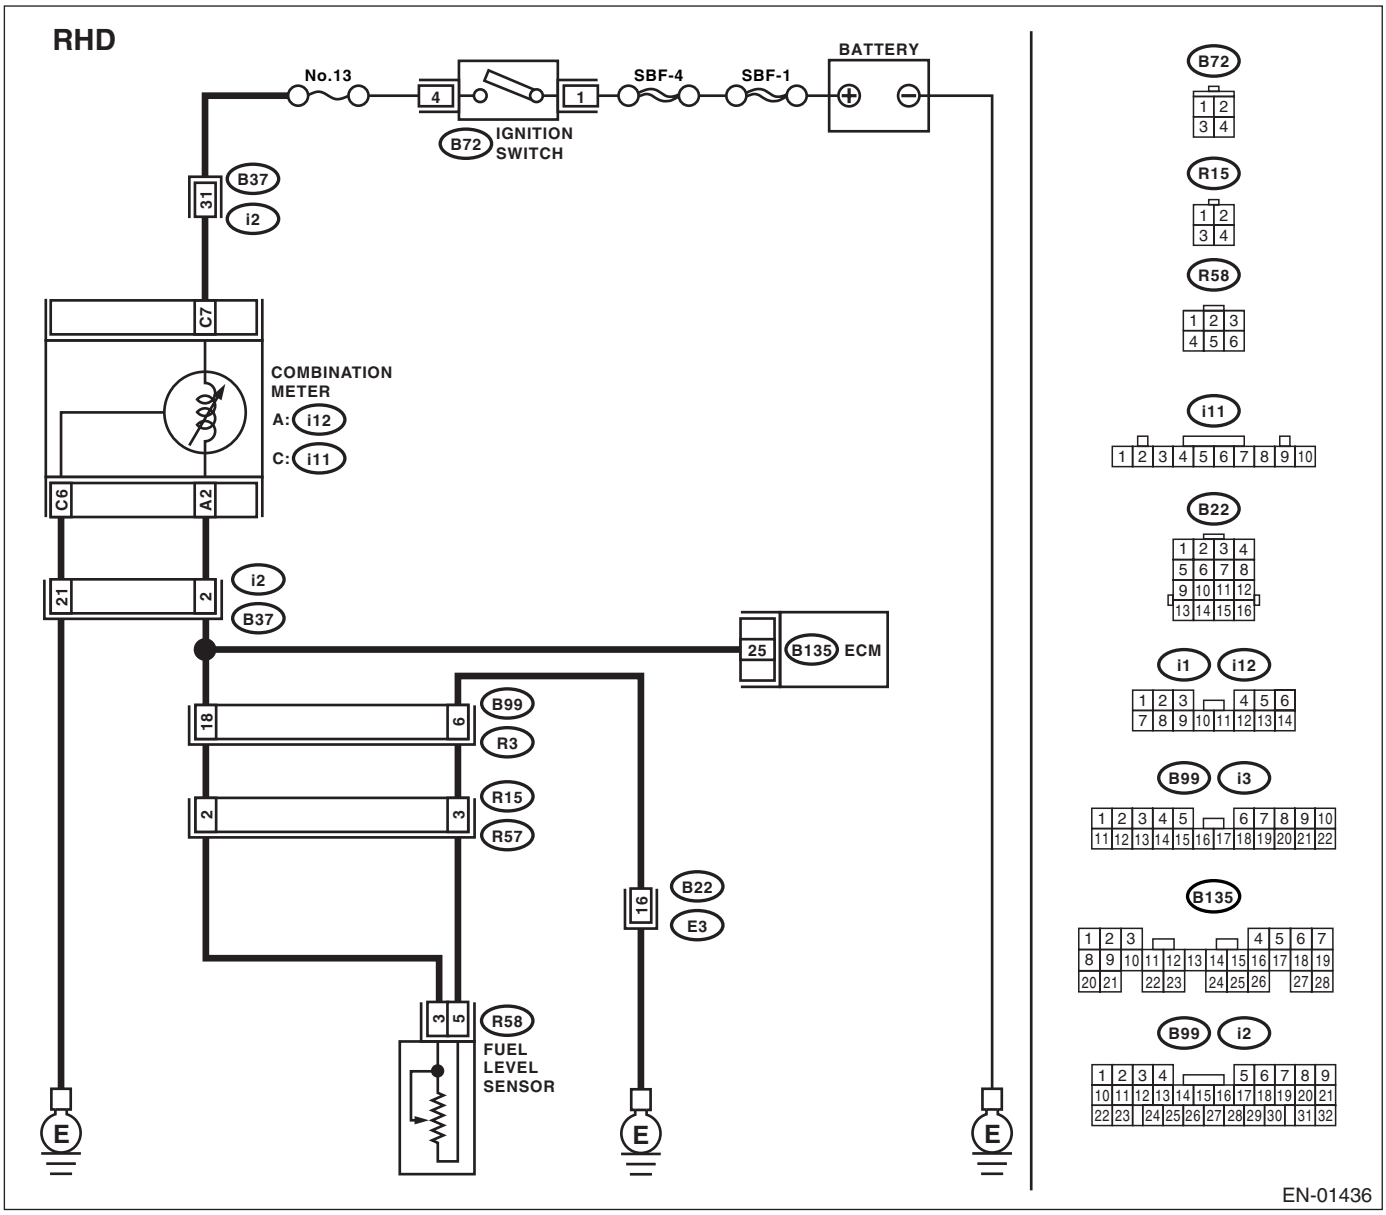

	Step	Check	Yes	No
1	**CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER.**	Does the speedometer and tachometer operate normally?	Go to step **2.**	Repair or replace the combination meter. <Ref. to IDI-3, Combination Meter System.>
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. (Engine OFF) 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage less than 0.12 V?	Go to step **4.**	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)** Read the data of fuel level sensor signal using Subaru Select Monitor. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.>	Is the voltage less than 0.12 V by shaking the harness and connector of ECM?	Repair poor contact in ECM connector.	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in combination meter connector • Poor contact in ECM connector • Poor contact in coupling connectors
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Turn the ignition switch to OFF. 2)Separate fuel tank cord connector (R57) and rear wiring harness connector (R15). 3)Turn the ignition switch to ON. 4)Measure the voltage of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage more than 0.12 V?	Go to step **5.**	Go to step **6.**
5	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from connector (i11) and ECM connector. 3)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 25 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair ground short circuit in harness between ECM and combination meter connector.
6	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER.** Measure the resistance between ECM and combination meter connector. ***Connector & terminal*** ***(B135) No. 25 — (i12) No. 2:***	Is the resistance less than 10 Ω?	Repair or replace the combination meter. <Ref. to IDI-3, Combination Meter System.>	Repair open circuit between ECM and combination meter connector. NOTE: In this case, repair the following: Poor contact in coupling connector
7	**CHECK FUEL TANK CORD.** 1)Disconnect the connector from fuel pump assembly. 2)Measure the resistance between fuel pump assembly and chassis ground. ***Connector & terminal*** ***(R58) No. 3 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair ground short circuit in fuel tank cord.

	Step	Check	Yes	No
8	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel pump assembly. <Ref. to FU(H4SO)-59, Fuel Pump.> 2)Measure the resistance between fuel level sensor and terminals with its float set to the full position. ***Terminals*** ***No. 3 — No. 5:***	Is the resistance 0.5 — 2.5 Ω?	Repair poor contact in harness between ECM and combination meter connector.	Replace the fuel level sensor.

AS:DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

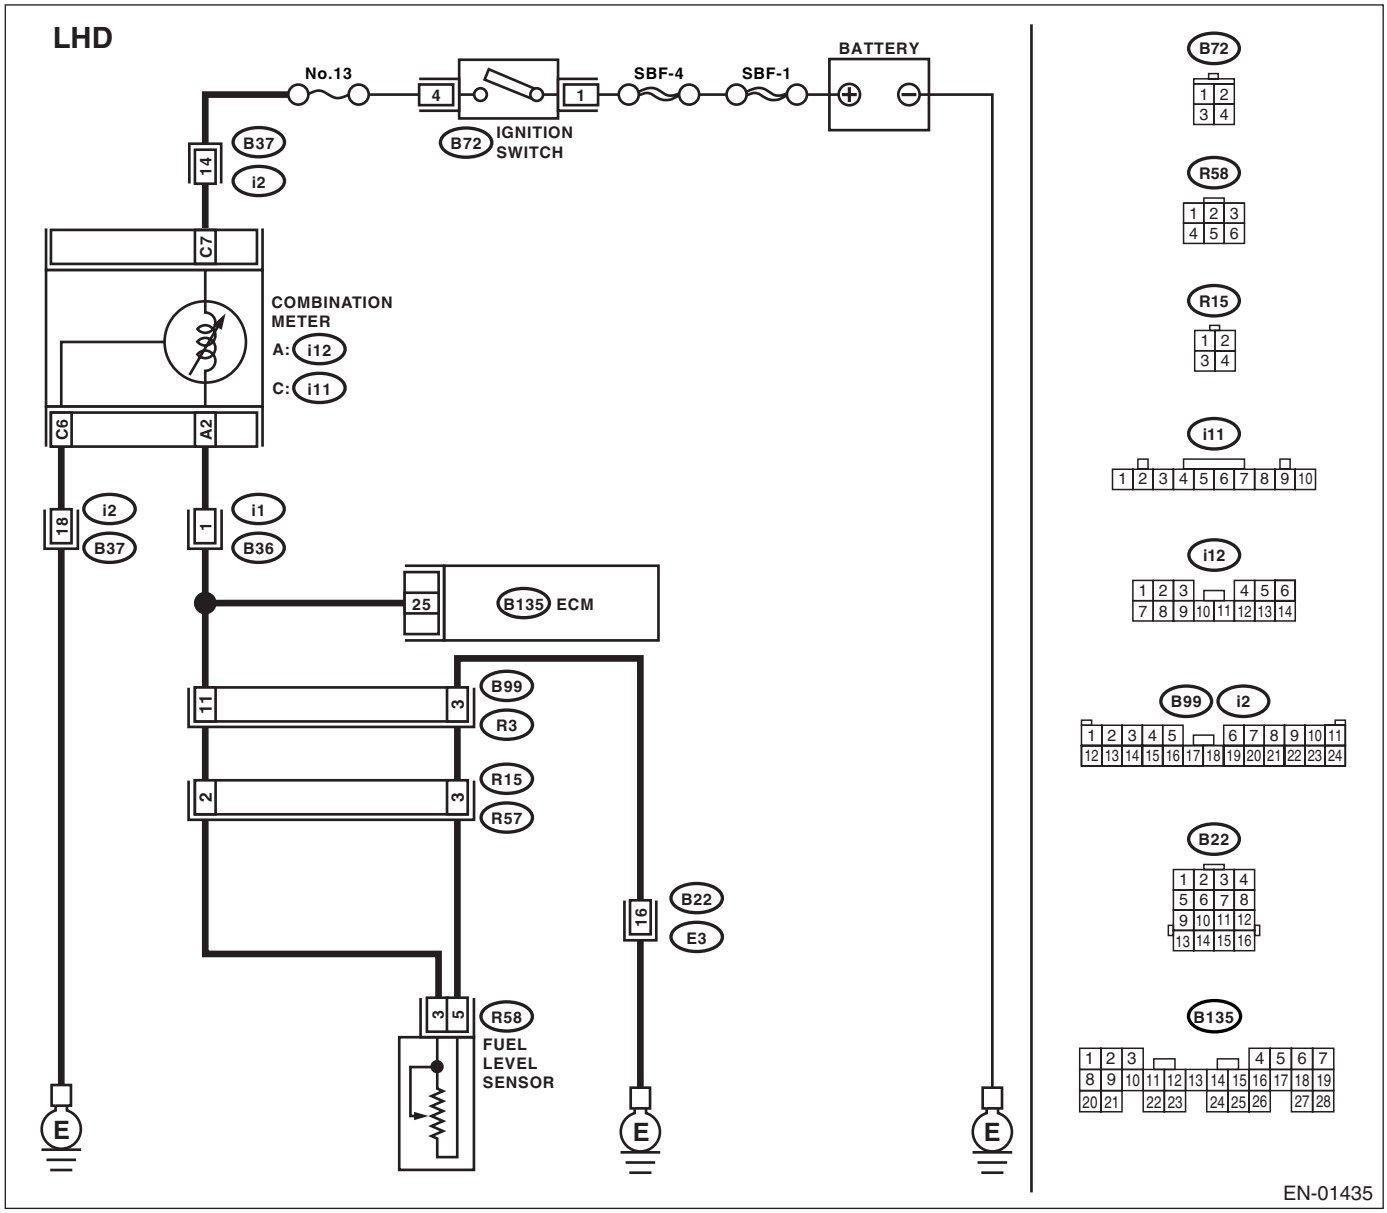

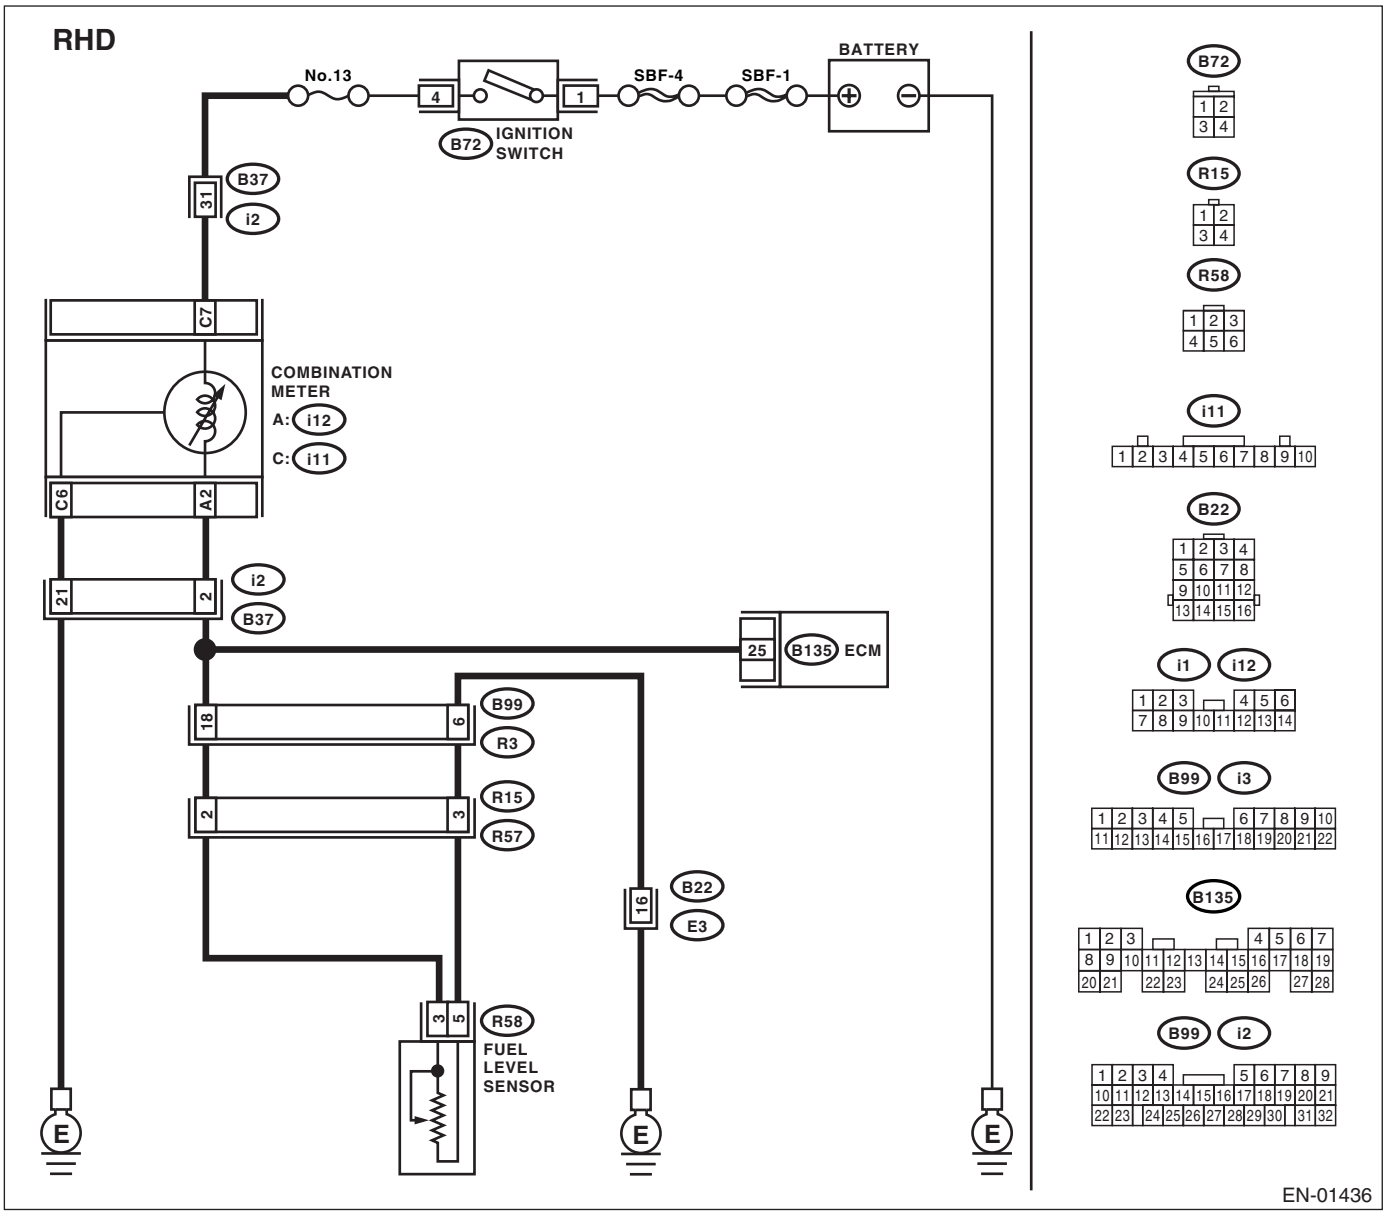

Step		Check	Yes	No
1	**CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER.**	Does the speedometer and tachometer operate normally?	Go to step **2.**	Repair or replace the combination meter. <Ref. to IDI-3, Combination Meter System.>

	Step	Check	Yes	No
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. (Engine OFF) 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage more than 4.75 V?	Go to step **3.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in fuel pump connector • Poor contact in coupling connector
3	**CHECK INPUT VOLTAGE OF ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the combination meter connector (i12) and ECM connector. 3)Turn the ignition switch to ON. 4)Measure the voltage of harness between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage more than 4.75 V?	Go to step **4.**	Repair battery short circuit between ECM and combination meter connector.
4	**CHECK HARNESS BETWEEN ECM AND FUEL TANK CORD.** 1)Turn the ignition switch to OFF. 2)Separate fuel tank cord connector (R57) and rear wiring harness connector (R15). 3)Measure the resistance between ECM and fuel tank cord. ***Connector & terminal*** ***(B135) No. 25 — (R15) No. 2:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair open circuit between ECM and fuel tank cord.
5	**CHECK HARNESS BETWEEN FUEL TANK CORD AND CHASSIS GROUND.** Measure the resistance between fuel tank cord and chassis ground. ***Connector & terminal*** ***(R15) No. 3 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **6.**	Repair open circuit between fuel tank cord and chassis ground. NOTE: In this case, repair the following: Poor contact in coupling connectors
6	**CHECK FUEL TANK CORD.** 1)Disconnect the connector from fuel level sensor. 2)Measure the resistance between fuel level sensor and coupling connector. ***Connector & terminal*** ***(R57) No. 3 — (R58) No. 5:***	Is the resistance less than 10 Ω?	Go to step **7.**	Repair open circuit between coupling connector and fuel level sensor.
7	**CHECK FUEL TANK CORD.** Measure the resistance between fuel level sensor and coupling connector. ***Connector & terminal*** ***(R57) No. 2 — (R58) No. 3:***	Is the resistance less than 10 Ω?	Go to step **8.**	Repair open circuit between coupling connector and fuel level sensor.

	Step	Check	Yes	No
8	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel pump assembly. <Ref. to FU(H4SO)-59, Fuel Pump.> 2)While moving the fuel level sensor float up and down, measure resistance between fuel level sensor terminals. ***Terminals*** ***No. 3 — No. 5:***	Is the resistance more than 54.5 Ω?	Replace the fuel level sensor. <Ref. to FU(H4SO)-61, Fuel Level Sensor.>	Replace the combination meter. <Ref. to IDI-11, Combination Meter Assembly.>

AT:DTC P0483 — COOLING FAN RATIONALITY CHECK —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Occurrence of noise
  - Overheating

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

NOTE:
If the vehicle, with the engine idling, is placed very close to a wall or another vehicle, preventing normal cooling function, the OBD system may detect malfunction.

- **WIRING DIAGRAM:**

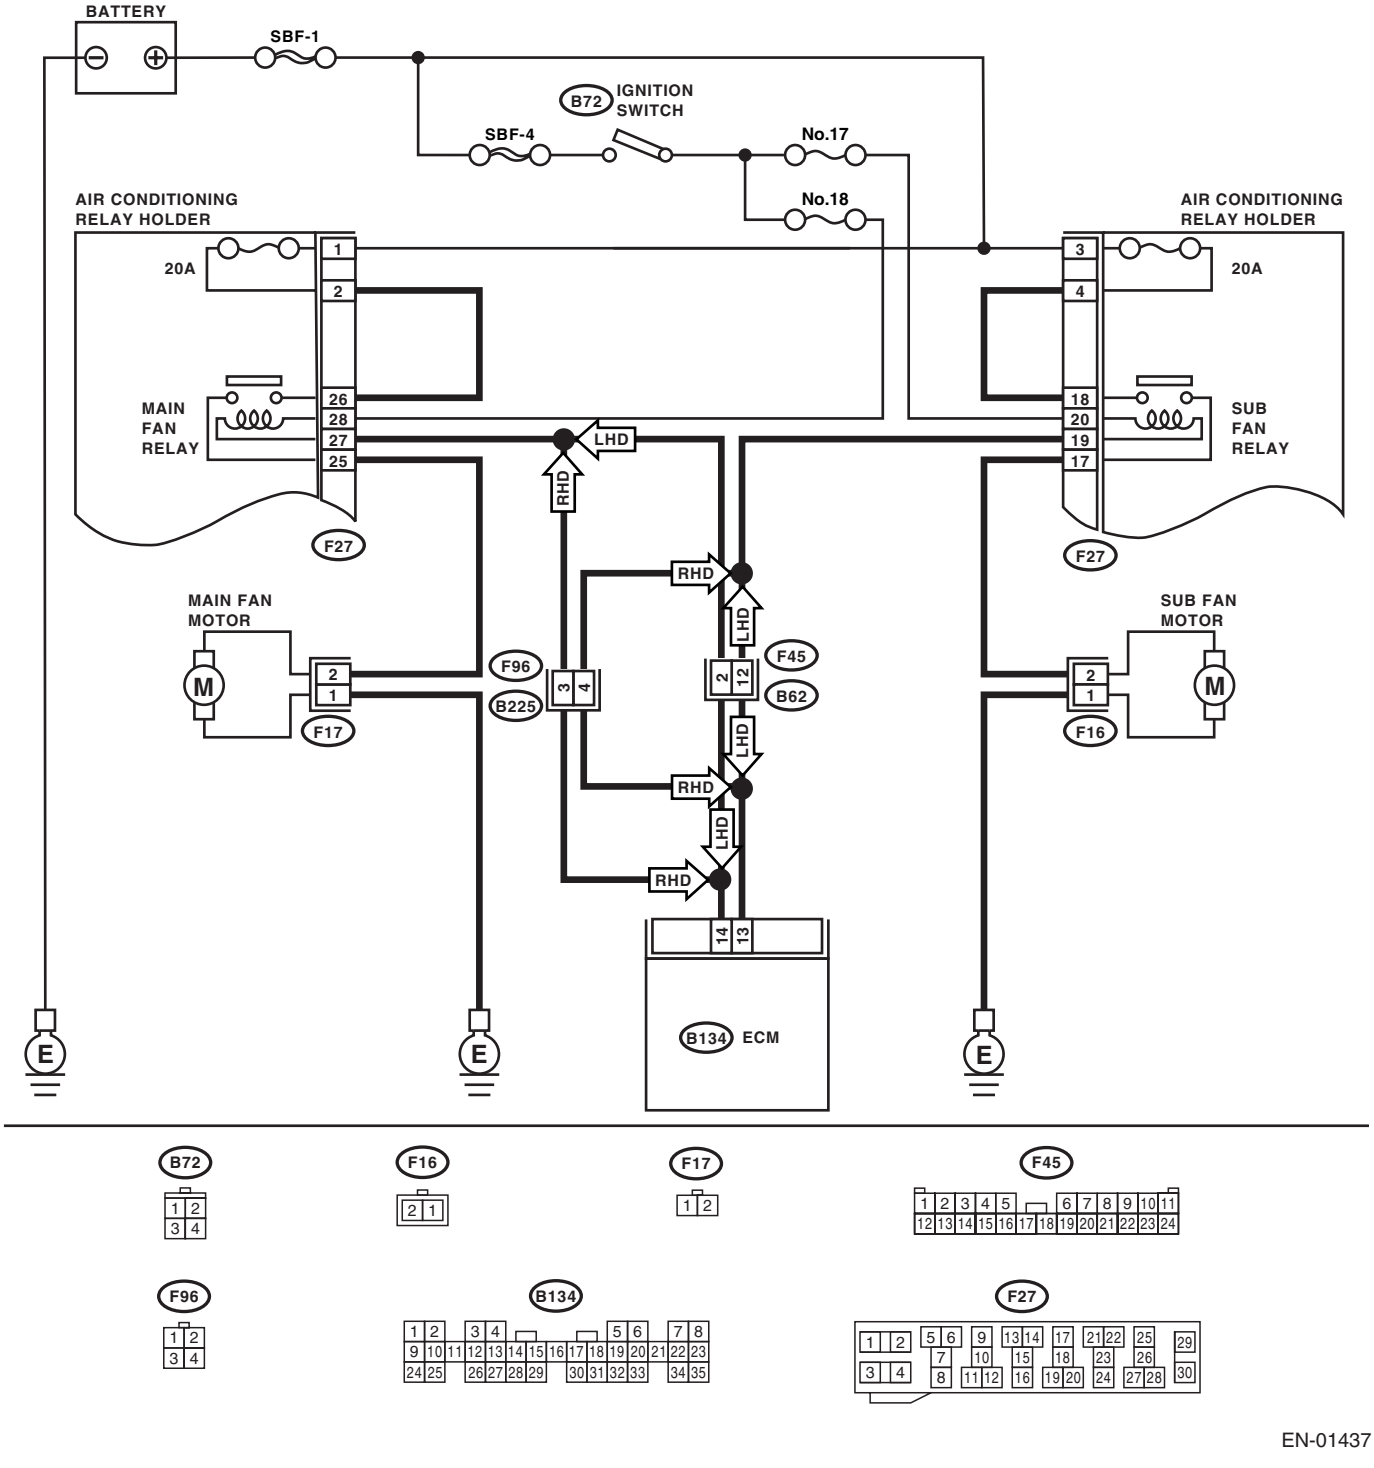

EN-01437

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Check radiator fan and fan motor. <Ref. to CO(H4SO)-25, Radiator Main Fan and Fan Motor.> and <Ref. to CO(H4SO)-26, Radiator Sub Fan and Fan Motor.>

AU:DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —

NOTE:
For the diagnostic procedure, refer to DTC P0503. <Ref. to EN(H4SO)-183, DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AV:DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

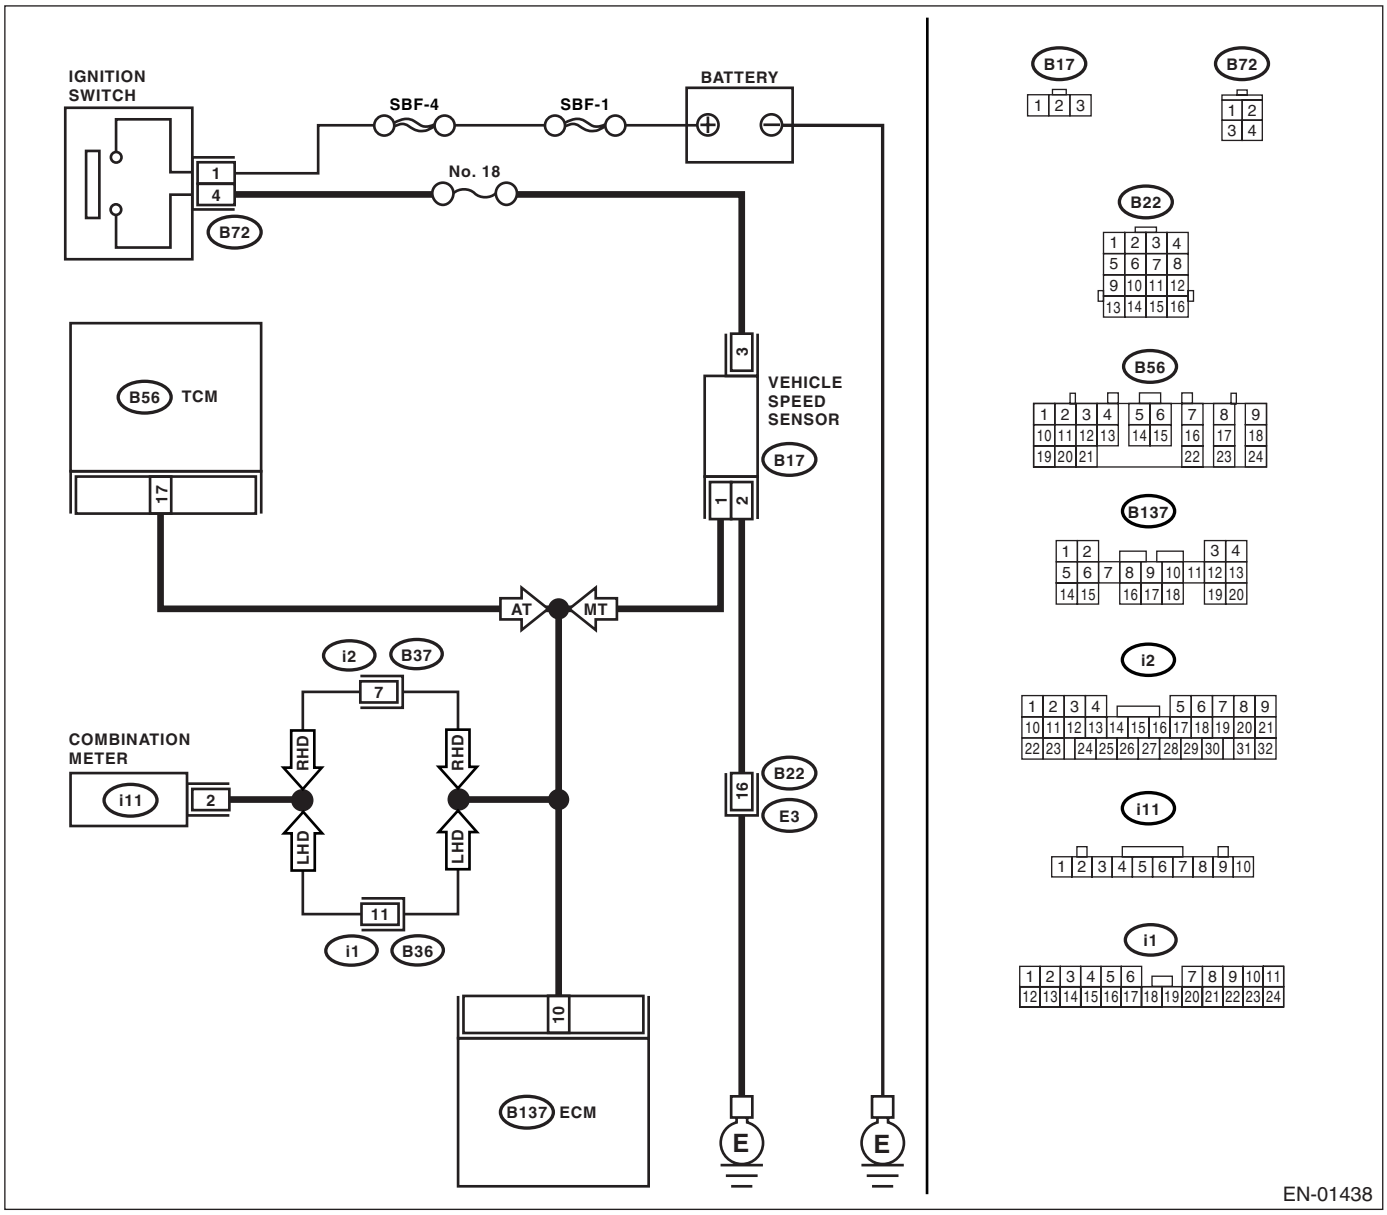

Step		Check	Yes	No
1	**CHECK TRANSMISSION TYPE.**	Is the target AT model?	Go to step **2.**	Go to step **3.**

	Step	Check	Yes	No
2	**CHECK DTC P0720 ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0720?	Check front vehicle speed sensor signal circuit. <Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Go to step **3.**
3	**CHECK SPEEDOMETER OPERATION IN COMBINATION METER.**	Does the speedometer operate normally?	Go to step **4.**	Check speedometer and vehicle speed sensor. <Ref. to IDI-14, Speedometer.> and <Ref. to 4AT-52, Front Vehicle Speed Sensor.> and <Ref. to 4AT-56, Rear Vehicle Speed Sensor.> and <Ref. to 4AT-57, Torque Converter Turbine Speed Sensor.>
4	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from combination meter. 3)Measure the resistance between ECM and combination meter. ***Connector & terminal*** ***(B137) No. 10 — (i11) No. 2:***	Is the resistance less than 10 Ω?	Repair poor contact in ECM connector.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and combination meter connector • Poor contact in ECM connector • Poor contact in combination meter connector • Poor contact in coupling connector

AW:DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine is difficult to start.
  - Engine does not start.
  - Erroneous idling
  - Engine stalls.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

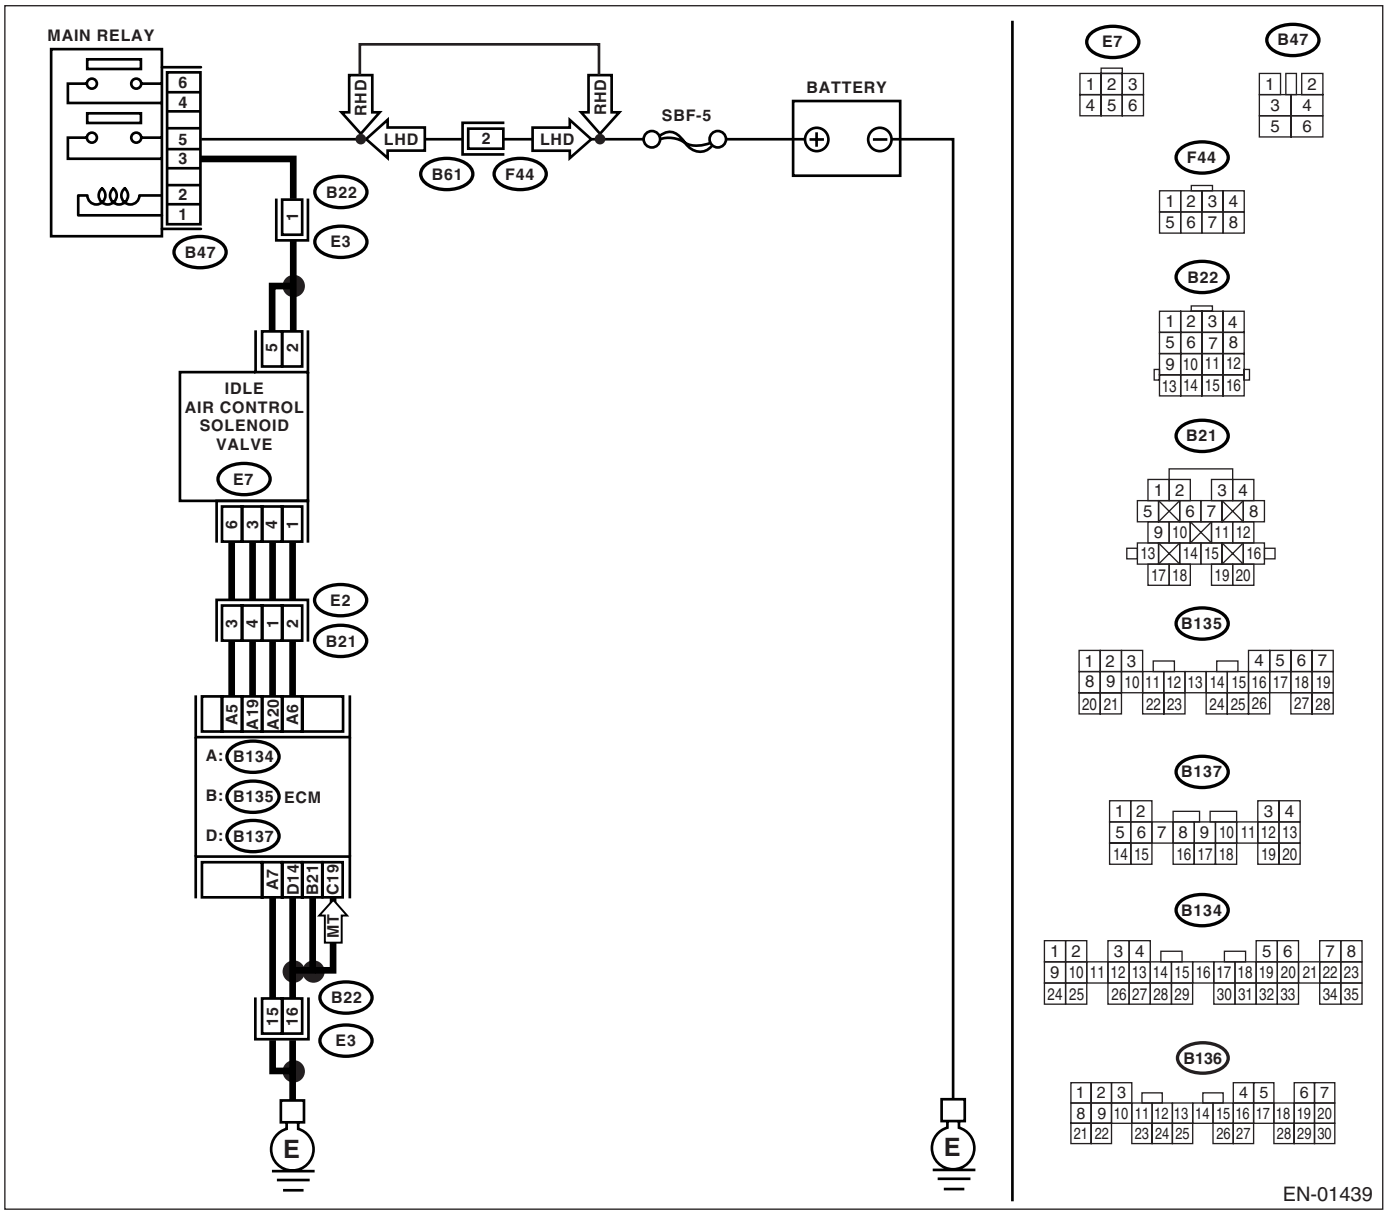

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0506.	Go to step **2.**
2	**CHECK AIR BY-PASS LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4SO)-35, REMOVAL, Idle Air Control Solenoid Valve.> 3)Remove the throttle body from intake manifold. <Ref. to FU(H4SO)-15, REMOVAL, Throttle Body.> 4)Using an air gun, force air into the idle air control solenoid valve installation area. Confirm that forced air subsequently escapes from throttle body interior.	Does air flow out?	Replace the idle air control solenoid valve. <Ref. to FU(H4SO)-35, INSTALLATION, Idle Air Control Solenoid Valve.>	Replace the throttle body. <Ref. to FU(H4SO)-15, INSTALLATION, Throttle Body.>

AX:DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine keeps running at higher revolution than specified idling revolution.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

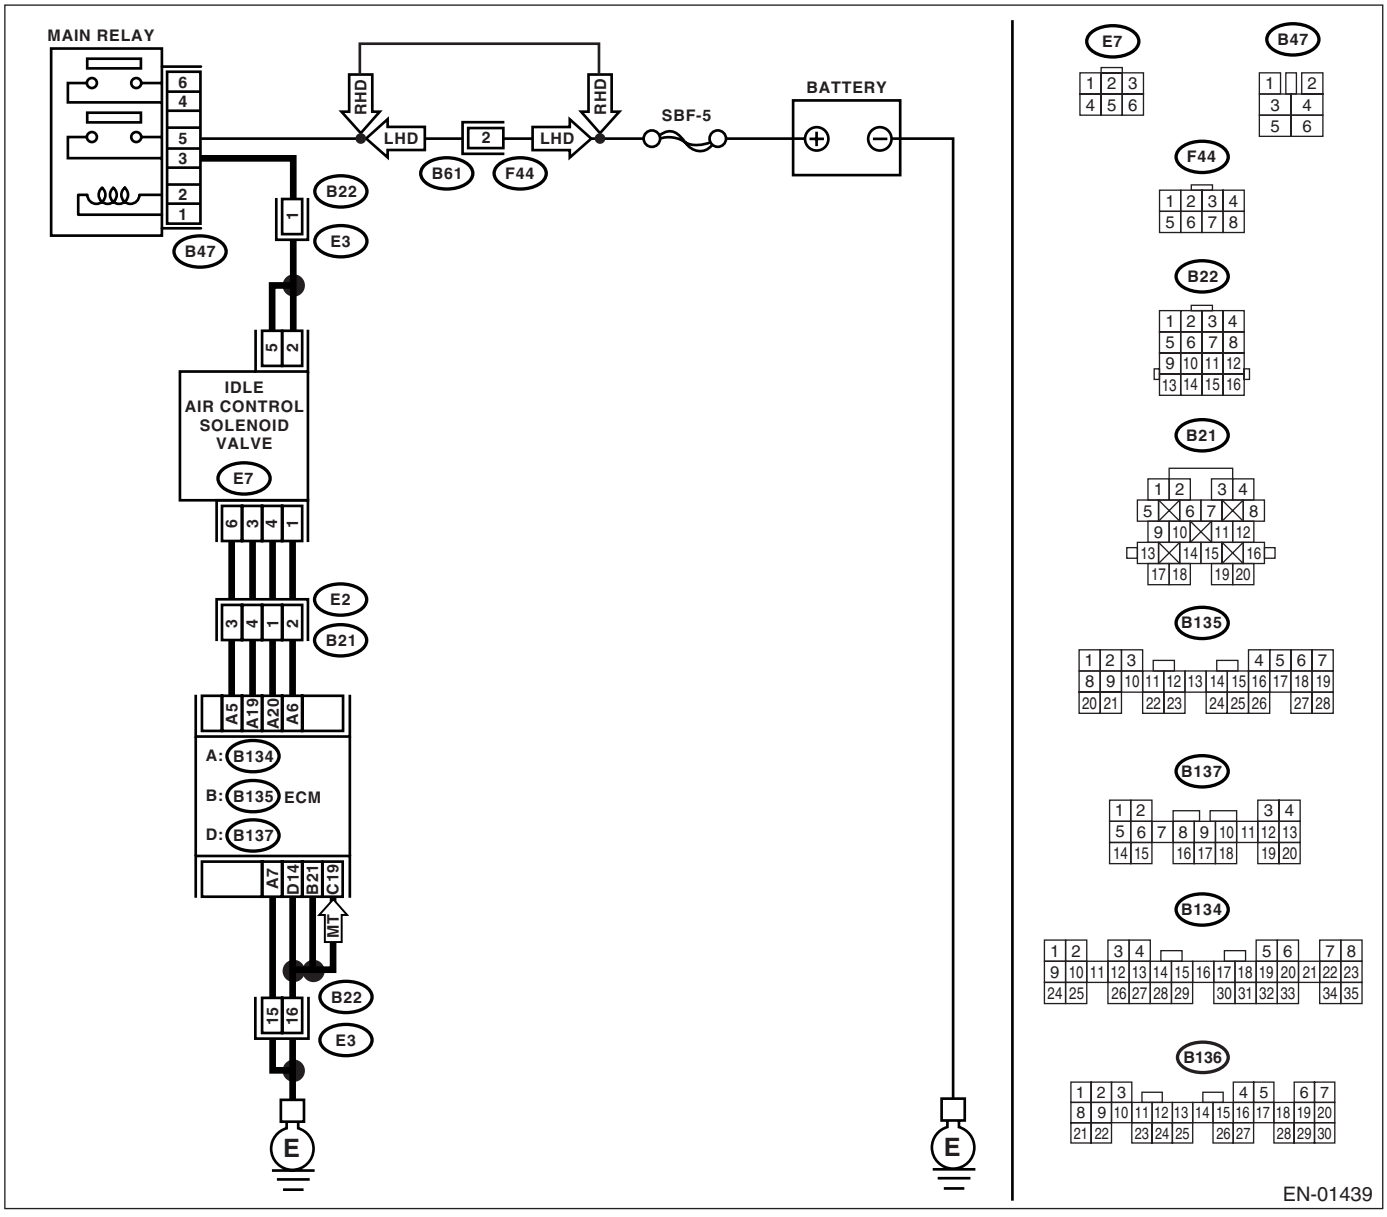

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0507.	Go to step **2.**
2	**CHECK AIR INTAKE SYSTEM.** 1)Turn the ignition switch to ON. 2)Start the engine, and idle it. 3)Check the following items. •Loose installation of intake manifold, idle air control solenoid valve and throttle body •Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket •Disconnections of vacuum hoses	Is there a fault in air intake system?	Repair air suction and leaks.	Go to step **3.**
3	**CHECK THROTTLE CABLE.**	Is throttle cable play correct?	Go to step **4.**	Adjust throttle cable. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>
4	**CHECK AIR BY-PASS LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4SO)-35, REMOVAL, Idle Air Control Solenoid Valve.> 3)Confirm that there are no foreign particles in air by-pass line.	Is air by-pass line clogged by foreign particles?	Remove foreign particles from air by-pass line.	Replace the idle air control solenoid valve. <Ref. to FU(H4SO)-35, INSTALLATION, Idle Air Control Solenoid Valve.>

AY:DTC P0512 — STARTER REQUEST CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

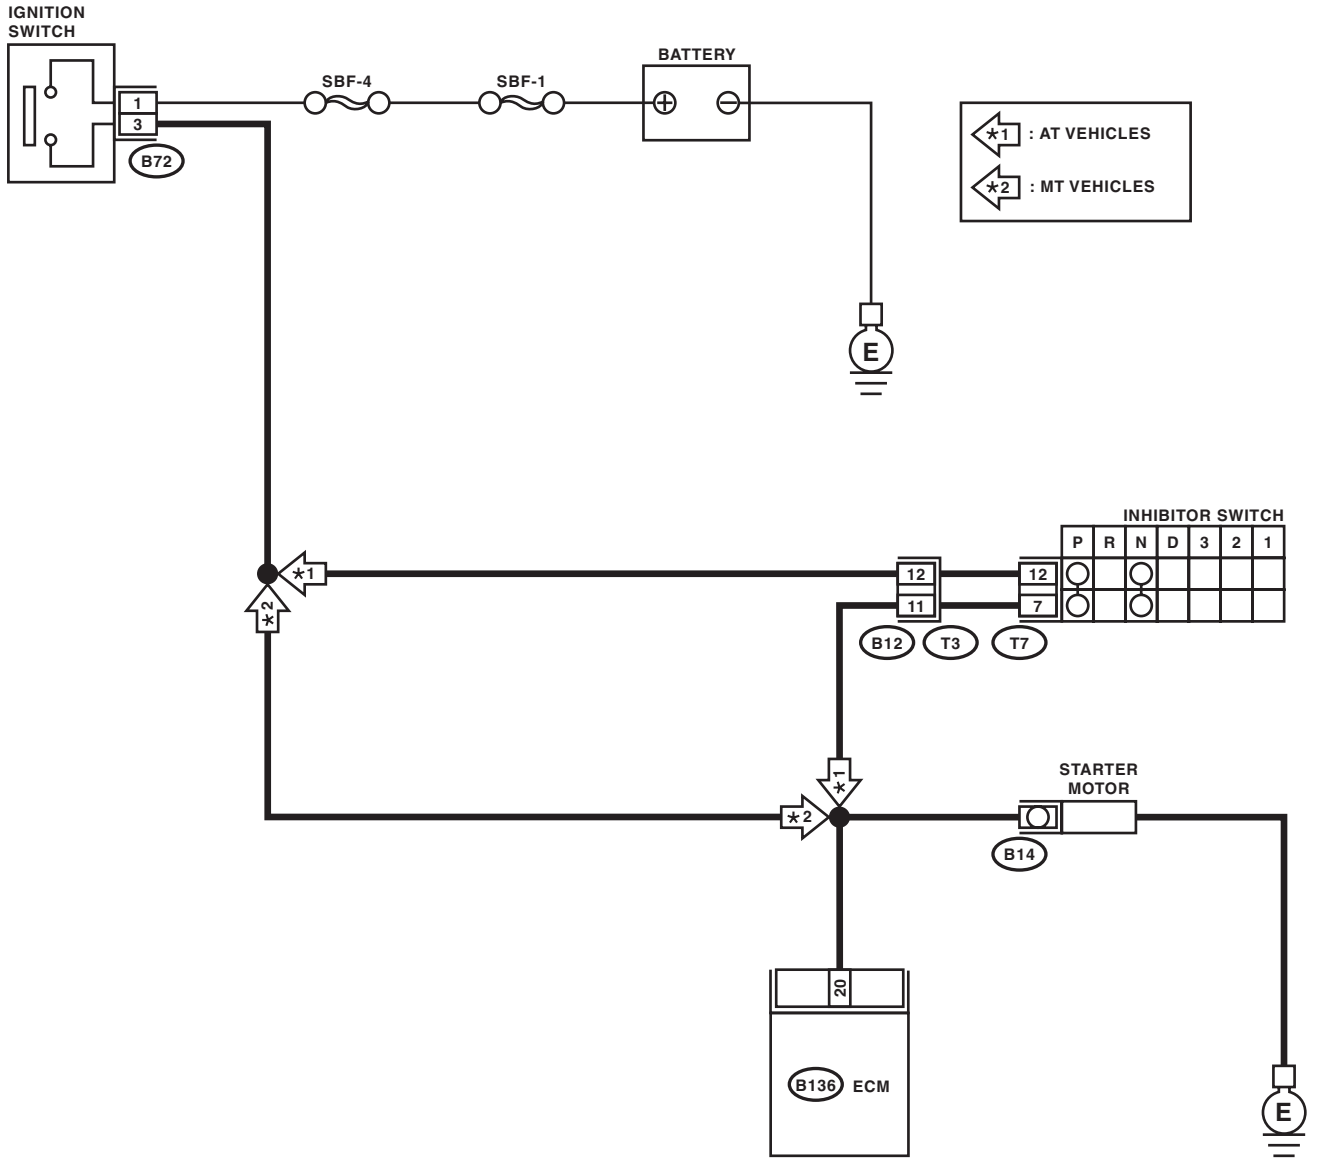

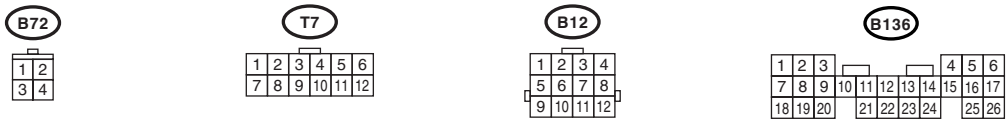

EN-01440

	Step	Check	Yes	No
1	**CHECK OPERATION OF STARTER MOTOR.** Turn the ignition switch to ON. NOTE: Place the inhibitor switch in each position. (AT model) Depress or release the clutch pedal. (MT model)	Dose the starter motor operate?	Repair battery short circuit in starter motor circuit.	Check starter motor circuit. <Ref. to EN(H4SO)-59, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

AZ:DTC P0519 — IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine keeps running at higher revolution than specified idling revolution.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

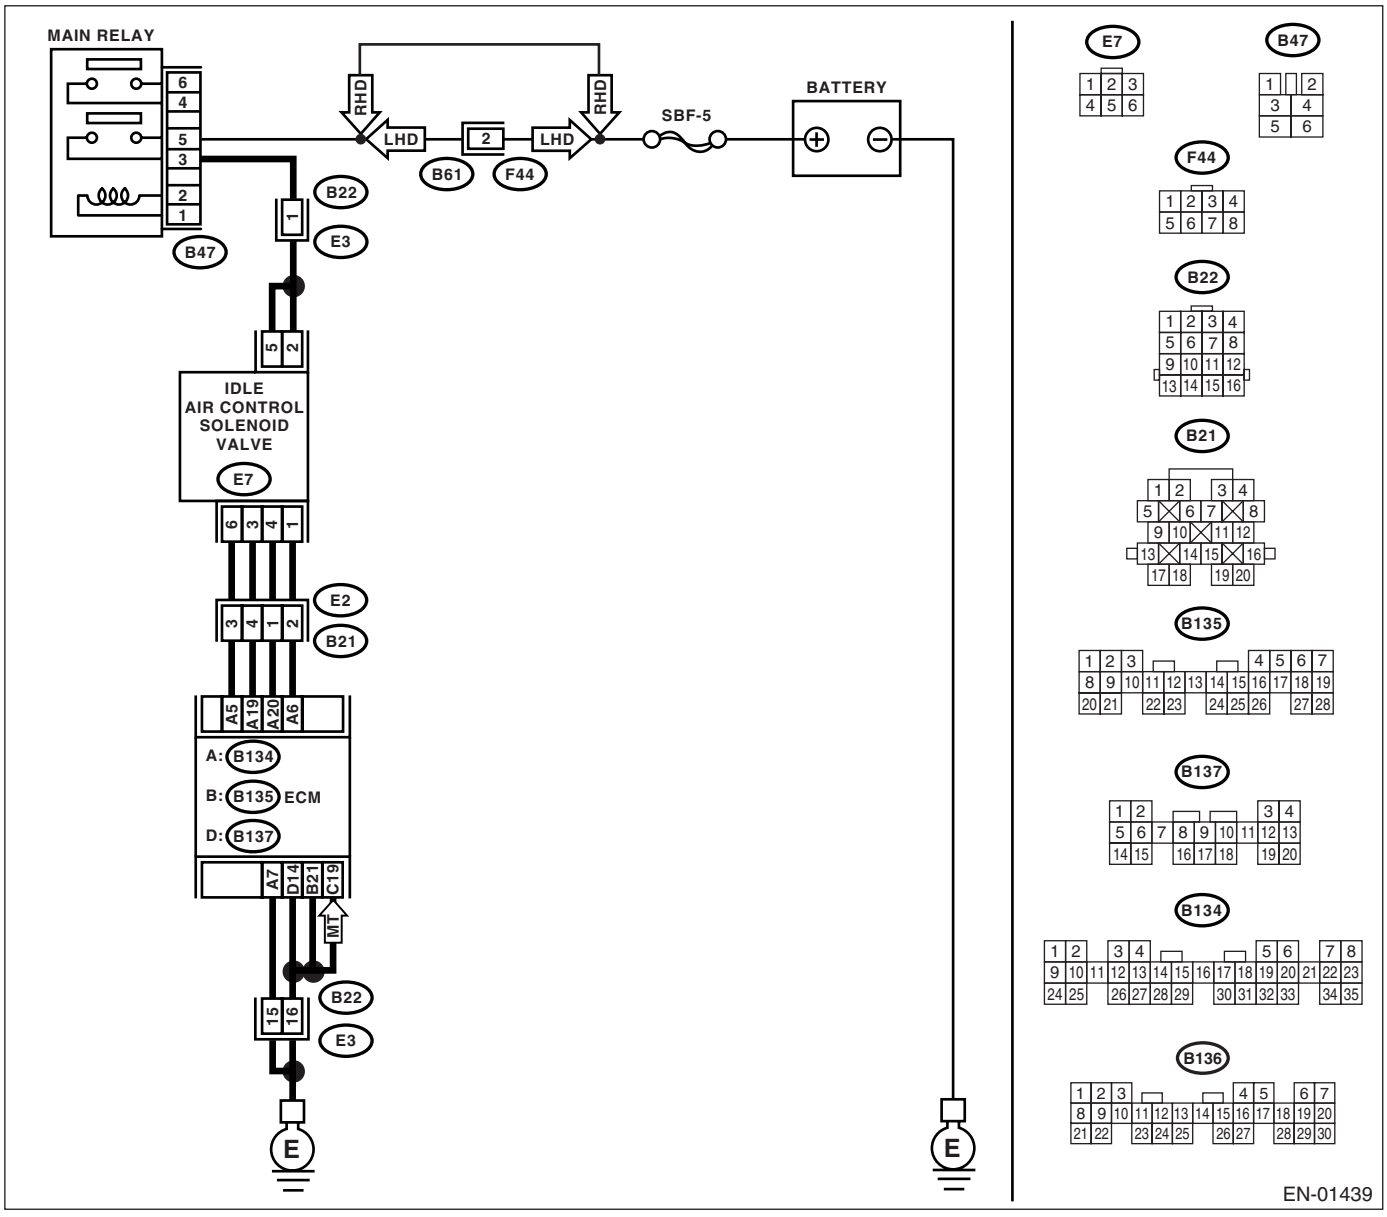

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0519.	Go to step **2.**
2	**CHECK AIR INTAKE SYSTEM.** 1)Turn the ignition switch to ON. 2)Start the engine, and idle it. 3)Check the following items. •Loose installation of intake manifold, idle air control solenoid valve and throttle body •Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket •Disconnections of vacuum hoses	Is there a fault in air intake system?	Repair air suction and leaks.	Go to step **3.**
3	**CHECK THROTTLE CABLE.**	Is throttle cable play correct?	Go to step **4.**	Adjust throttle cable. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>
4	**CHECK AIR BY-PASS LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4SO)-35, Idle Air Control Solenoid Valve.> 3)Confirm that there are no foreign particles in air by-pass line.	Is air by-pass line clogged by foreign particles?	Remove foreign particles from air by-pass line.	Replace the idle air control solenoid valve. <Ref. to FU(H4SO)-35, Idle Air Control Solenoid Valve.>

BA:DTC P0558 — GENERATOR CIRCUIT LOW INPUT —

CAUTION:
For diagnostic procedure, refer to DTC P0559. <Ref. to EN(H4SO)-195, DTC P0559 — GENERATOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>.

BB:DTC P0559 — GENERATOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, Inspection Mode.> .

- **WIRING DIAGRAM:**

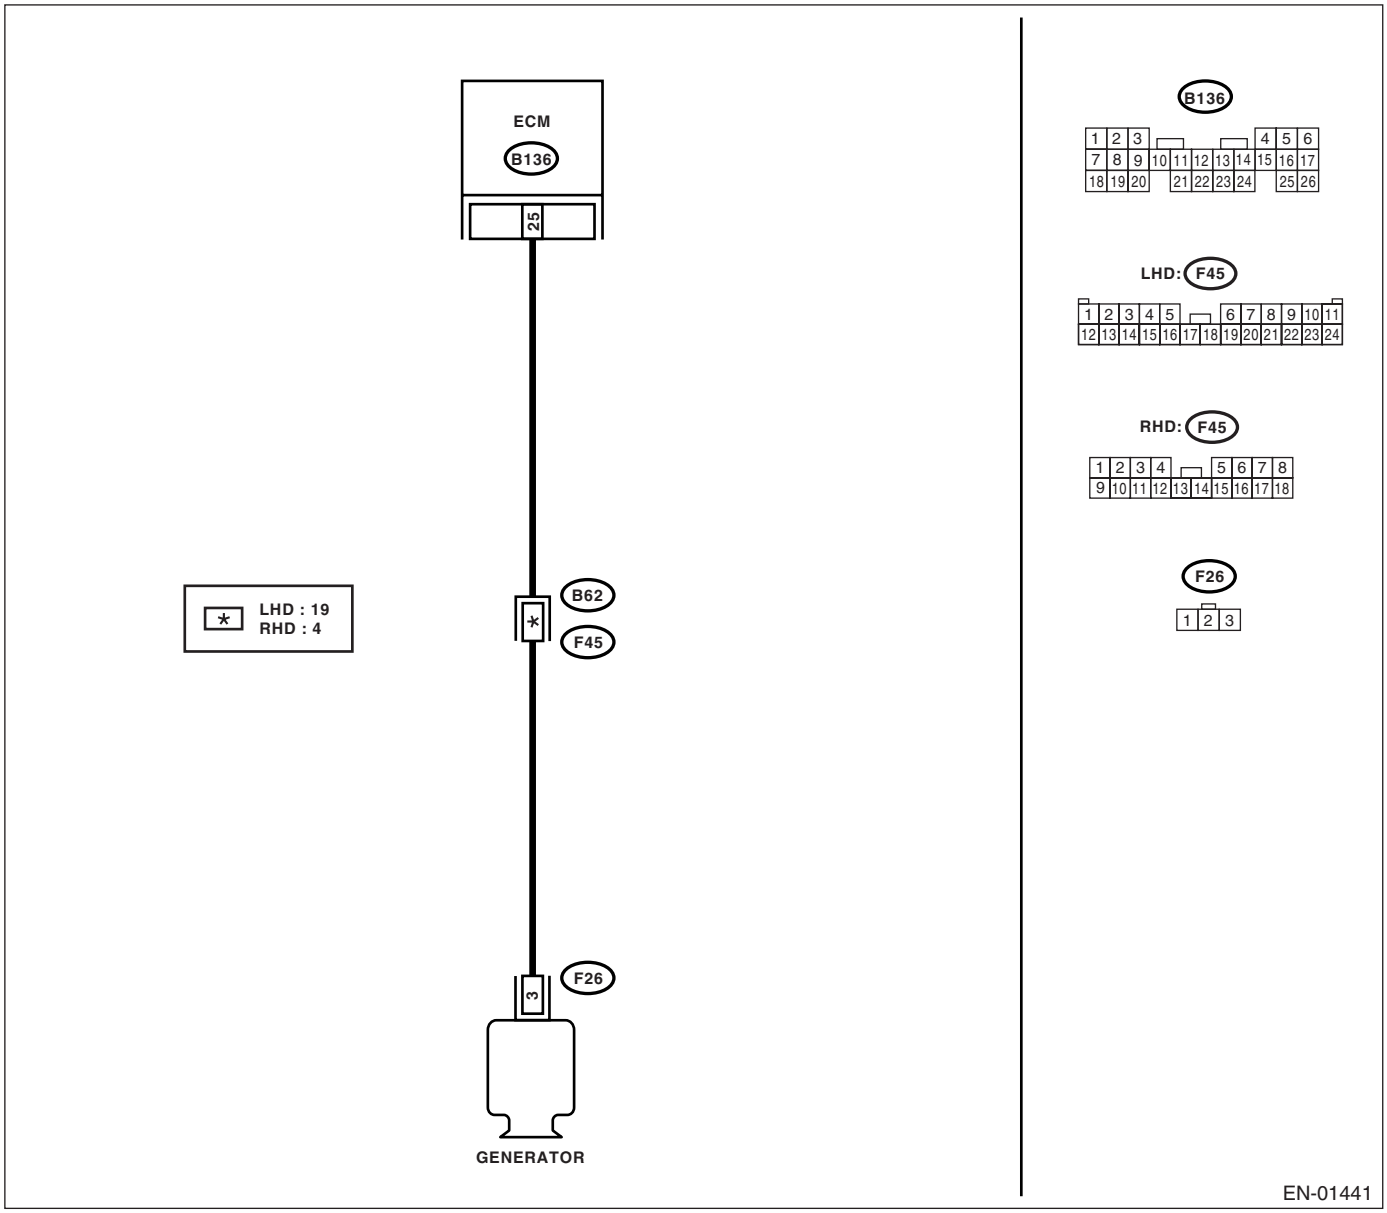

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN GENERATOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from generator and ECM. 3)Measure the resistance of harness between generator connector and engine ground. ***Connector & terminal*** ***(F26) No. 3 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **2.**	Repair the ground short circuit in harness between ECM and purge control solenoid valve connector.

Step		Check	Yes	No
2	**CHECK HARNESS BETWEEN GENERATOR AND ECM CONNECTOR.** Measure the resistance of harness between ECM and generator of harness connector. ***Connector & terminal*** ***(B136) No. 25 — (F26) No. 3:***	Is the resistance less than 1 Ω?	Repair poor contact in connector.	Repair the open circuit in harness between ECM and generator connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and generator connector • Poor contact in coupling connector

BC:DTC P0562 — SYSTEM VOLTAGE LOW —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Charge warning light comes on.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, Inspection Mode.>.

- **WIRING DIAGRAM:**

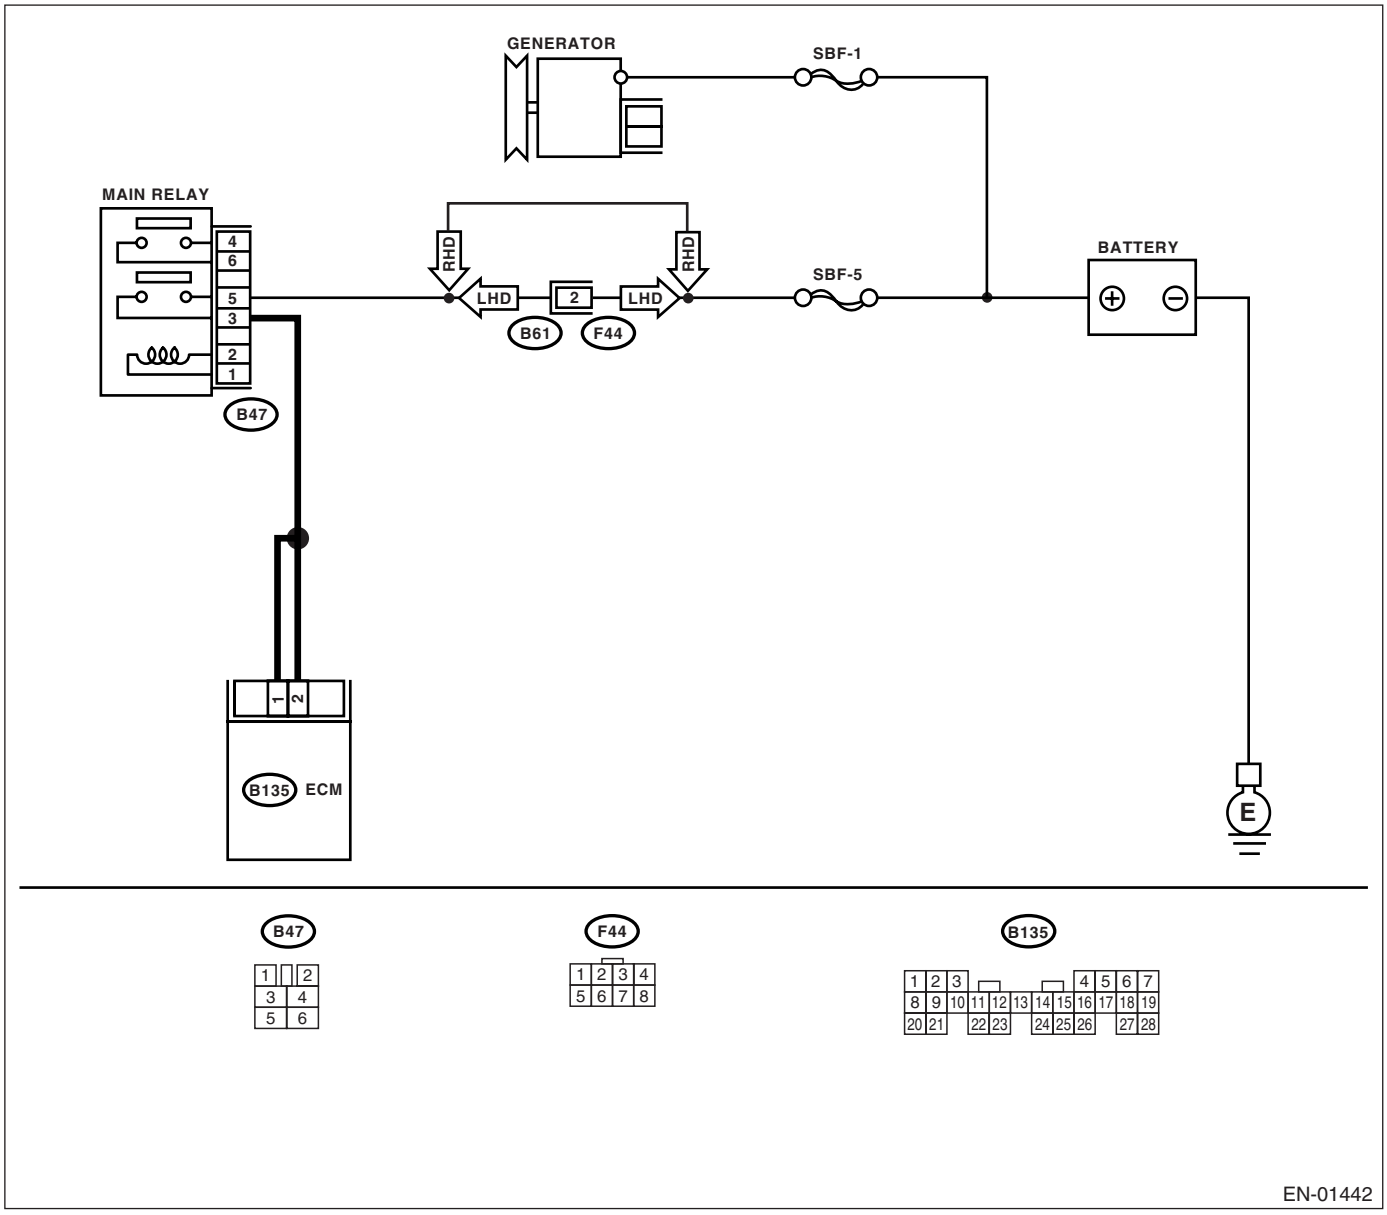

	Step	Check	Yes	No
1	**CHECK GENERATOR.** 1)Start the engine. 2)Idle after warm-up. 3)Measure the voltage between generator B terminal and chassis ground. ***Terminal*** ***Generator B terminal (+) — Chassis ground (–):***	Is the voltage more than 10.8 V?	Go to step **2.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
2	**CHECK GENERATOR.** 1)Run the engine at 5,000 rpm. 2)Measure the voltage between generator B terminal and chassis ground. ***Terminal*** ***Generator B terminal (+) — Chassis ground (–):***	Is the voltage more than 10.8 V?	Go to step **3.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>

	Step	Check	Yes	No
3	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Are the positive and ground battery terminals tightly clamped?	Go to step **4.**	Tighten the clamp of terminal.
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Run the engine at idle. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 1 (+) — Chassis ground (−):*** ***(B135) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10.8 V?	Go to step **5.**	Repair the harness connector between battery, main relay and ECM.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ECM?	Repair the connector.	Go to step **6.**
6	**CHECK ECM.** 1)Connect all connectors. 2)Erase the memory. 3)Perform inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the generator. <Ref. to SC(H4SO)-14, Generator.>	Go to step **7.**
7	**CHECK ANY OTHER DTC ON DISPLAY.**	Is there any other DTC on display?	Check the relevant DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	A temporary poor contact.

BD: DTC P0563 — SYSTEM VOLTAGE HIGH—

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Charge warning light comes on.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, Inspection Mode.>.

- **WIRING DIAGRAM:**

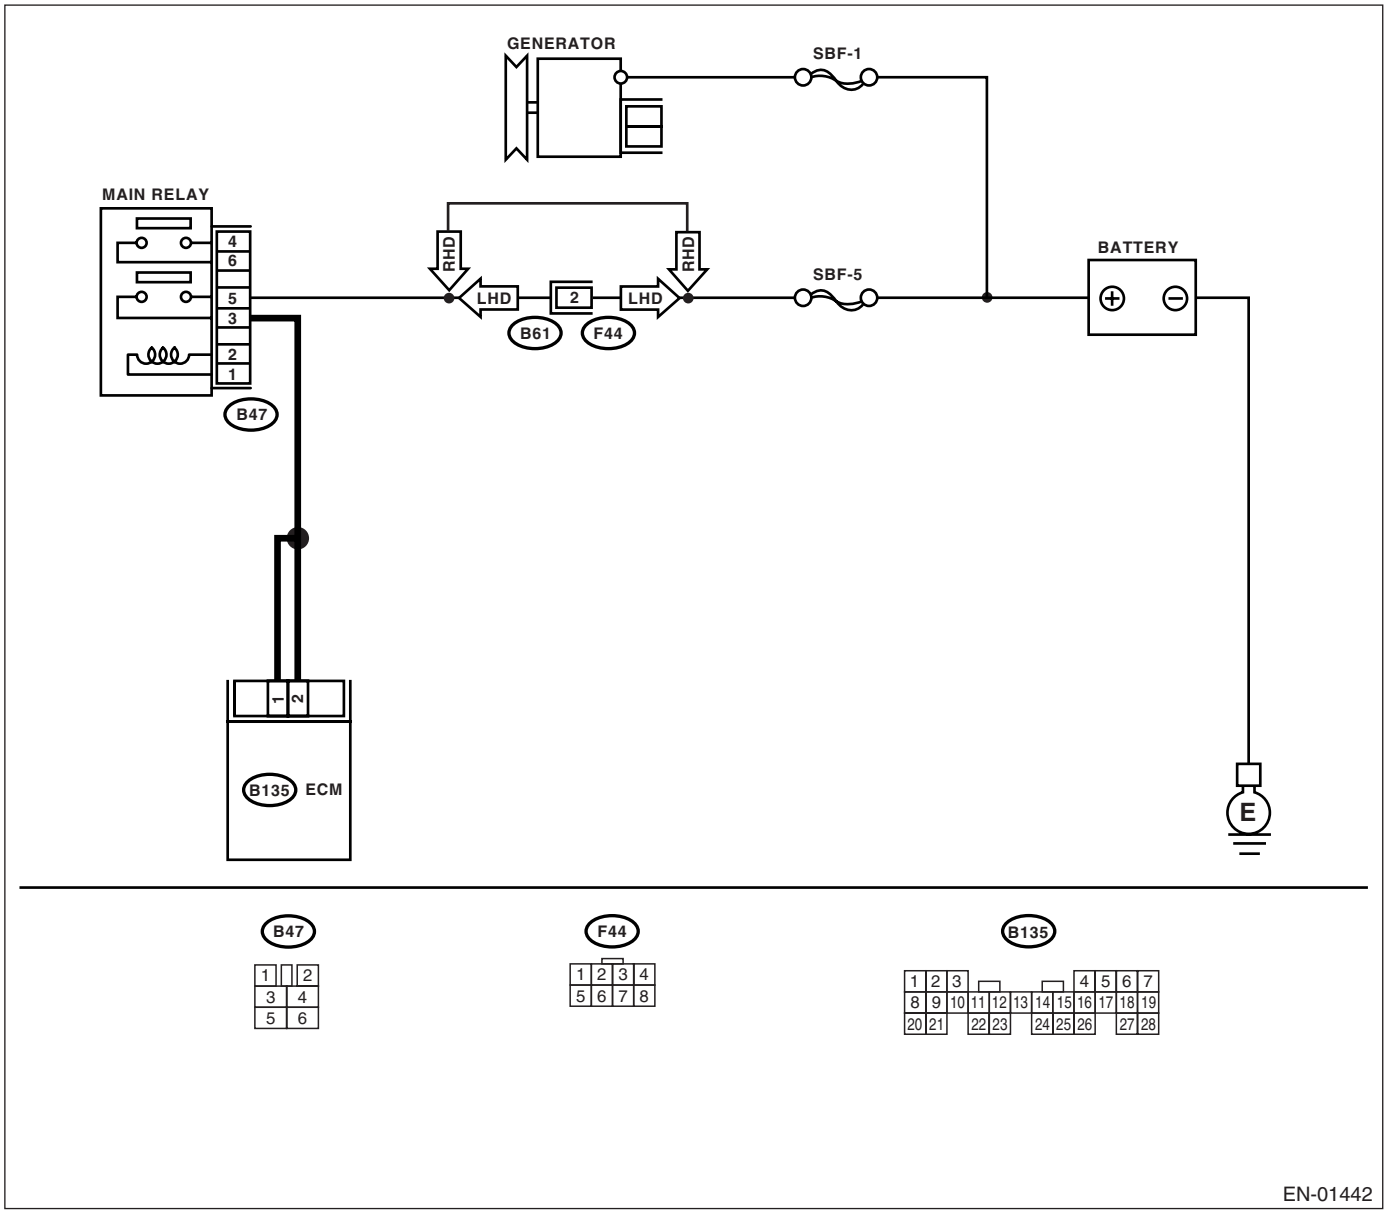

	Step	Check	Yes	No
1	**CHECK GENERATOR.** 1)Start the engine. 2)Idle after warm-up. 3)Measure the voltage between generator B terminal and chassis ground. ***Terminal*** ***Generator B terminal (+) — Chassis ground (–):***	Is the voltage less than 16.2 V?	Go to step **2.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
2	**CHECK GENERATOR.** 1)Run the engine at 5,000 rpm. 2)Measure the voltage between generator B terminal and chassis ground. ***Terminal*** ***Generator B terminal (+) — Chassis ground (–):***	Is the voltage less than 16.2 V?	Go to step **3.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>

	Step	Check	Yes	No
3	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Are the positive and ground battery terminals tightly clamped?	Go to step **4.**	Tighten the clamp of terminal.
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Run the engine at idle. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 1 (+) — Chassis ground (−):*** ***(B135) No. 2 (+) — Chassis ground (−):***	Is the voltage less than 16.2 V?	Go to step **5.**	Repair the harness connector between battery, main relay and ECM.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ECM?	Repair the connector.	Go to step **6.**
6	**CHECK ECM.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the generator. <Ref. to SC(H4SO)-14, Generator.>	Go to step **7.**
7	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check the relevant DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	A temporary poor contact.

BE:DTC P0565 — CRUISE CONTROL ON SIGNAL —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

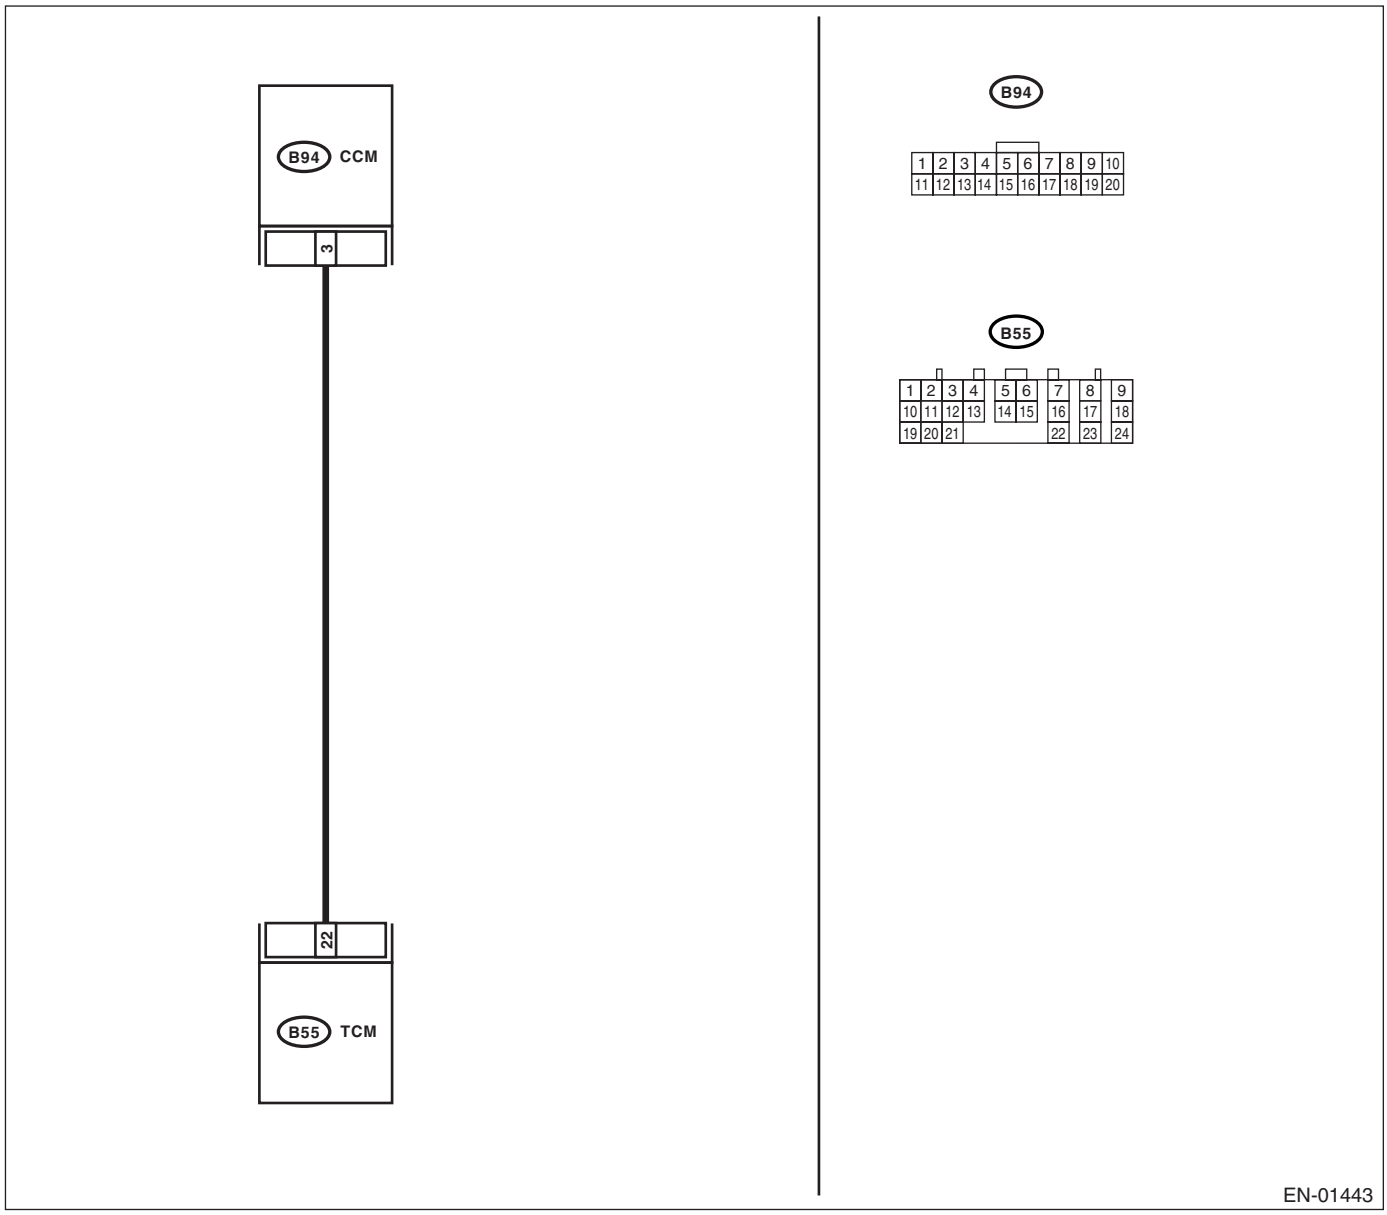

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and CCM. 3)Measure the resistance of harness between TCM and CCM connector. ***Connector & terminal*** ***(B55) No. 22— (B94) No. 3:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair open circuit in harness between TCM and CCM connector.
2	**CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair short circuit in harness between TCM and CCM connector.
3	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connector to TCM and CCM. 2)Lift-up the vehicle or set the vehicle on free rollers. **CAUTION:** **On AWD models, raise all wheels off ground.** 3)Start the engine. 4)Turn the cruise control main switch to ON. 5)Move select lever to “D” range and slowly increase vehicle speed to 50 km/h (31 MPH). 6)Turn the cruise control command switch to ON. 7)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 22 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Check cruise control command switch circuit. <Ref. to CC-8, INSPECTION, Cruise Control Command Switch.>
4	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BF:DTC P0604 — INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine does not start.
  - Engine stalls.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

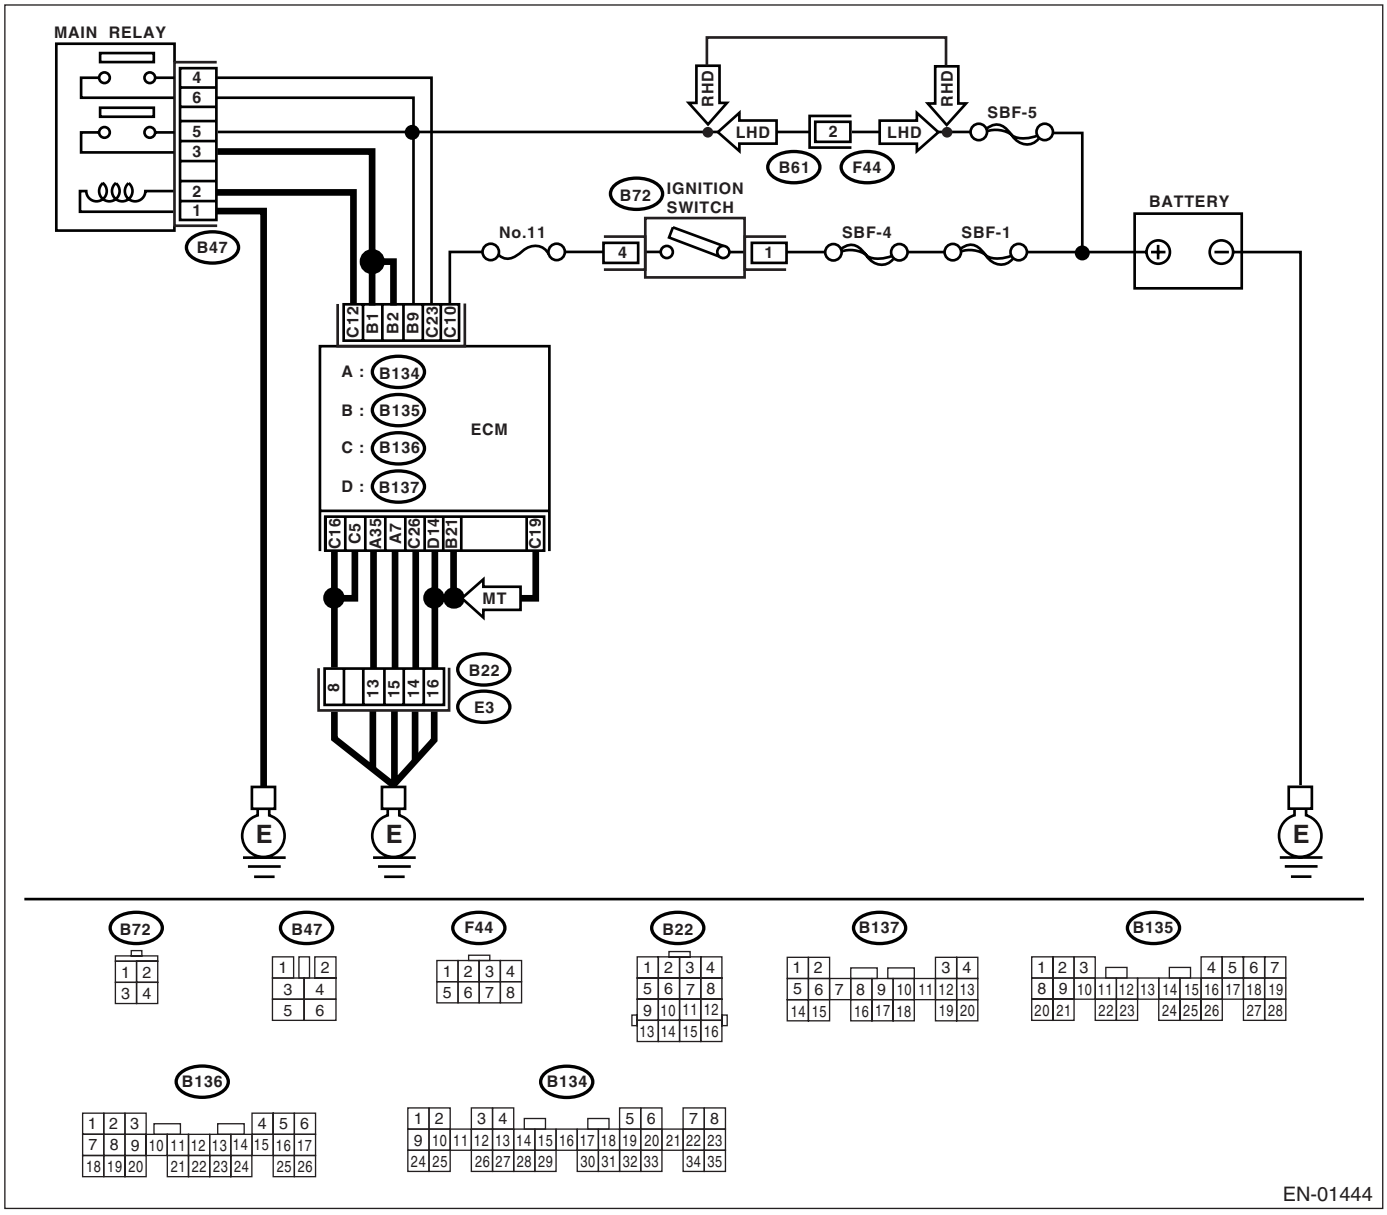

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check the relevant DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	A temporary poor contact occurs.

BG:DTC P0691 — COOLING FAN 1 CONTROL CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Radiator fan does not operate properly.
  - Overheating

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

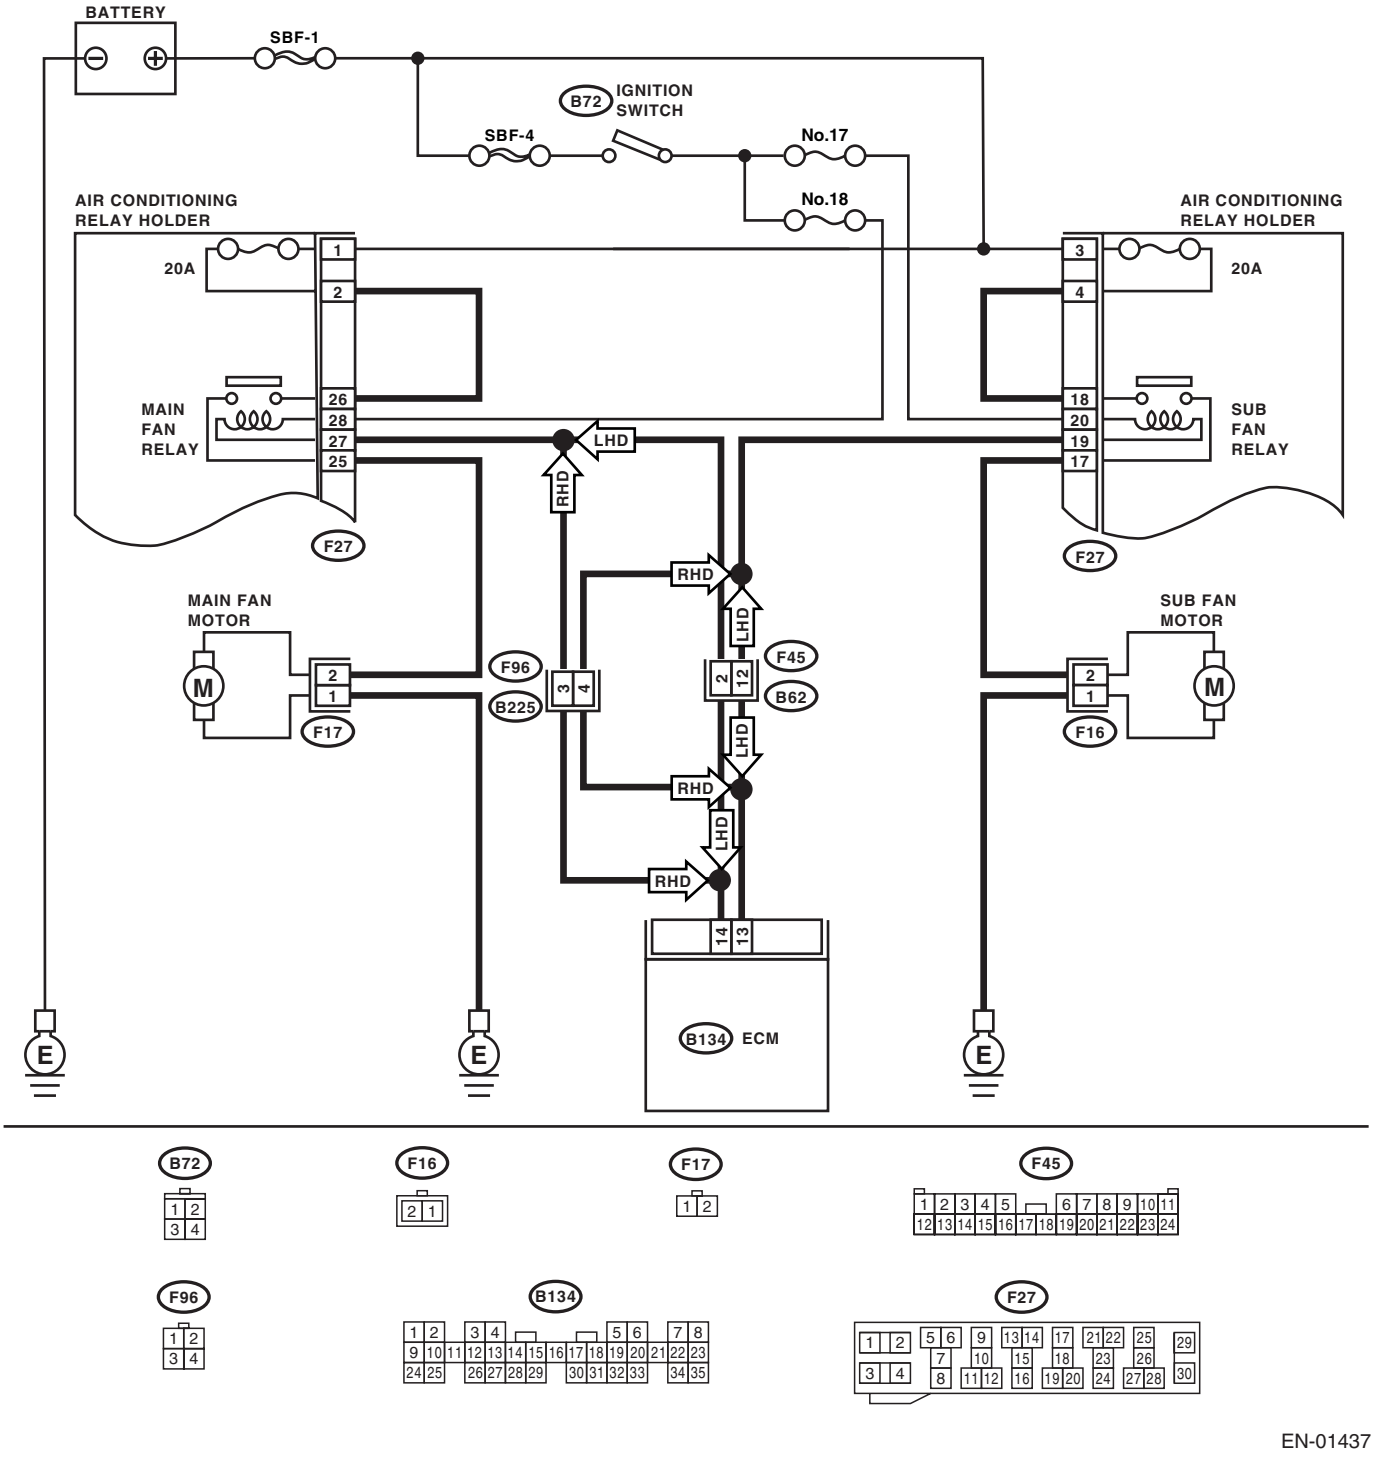

EN-01437

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector at the lower portion of instrument panel (on the driver's side). 3)Turn the ignition switch to ON. 4)While operating the radiator fan relay, measure voltage between ECM terminal and ground. NOTE: Radiator fan relay operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> ***Connector & terminal*** ***(B134) No. 14 (+) — Chassis ground (−):***	Is the voltage 0 — 10 V?	Repair poor contact in ECM connector.	Go to step **2.**
2	**CHECK GROUND SHORT CIRCUIT IN RADIATOR MAIN FAN RELAY CONTROL CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 14 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair ground short circuit in radiator main fan relay control circuit.	Go to step **3.**
3	**CHECK POWER SUPPLY FOR RELAY.** 1)Remove the main fan relay from A/C relay holder. 2)Turn the ignition switch to ON. 3)Measure the voltage between fuse and relay box (F/B) connector and chassis ground. ***Connector & terminal*** ***(F27) No. 28 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Repair open circuit in harness between ignition switch and fuse and relay box (F/B) connector.
4	**CHECK MAIN FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main fan relay terminals. ***Terminal*** ***No. 27 — No. 28:***	Is the resistance 87 — 107 Ω?	Go to step **5.**	Replace the main fan relay.
5	**CHECK OPEN CIRCUIT IN MAIN FAN RELAY CONTROL CIRCUIT.** Measure the resistance of harness between ECM and main fan relay connector. ***Connector & terminal*** ***(B134) No. 14 — (F27) No. 27:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and main fan relay connector • Poor contact in coupling connector
6	**CHECK POOR CONTACT.** Check poor contact in ECM or main fan relay connector.	Is there poor contact in ECM or main fan relay connector?	Repair poor contact in ECM or main fan relay connector.	Contact with SUBARU distributor service.

BH:DTC P0692 — COOLING FAN 1 CONTROL CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Radiator fan does not operate properly.
  - Overheating

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

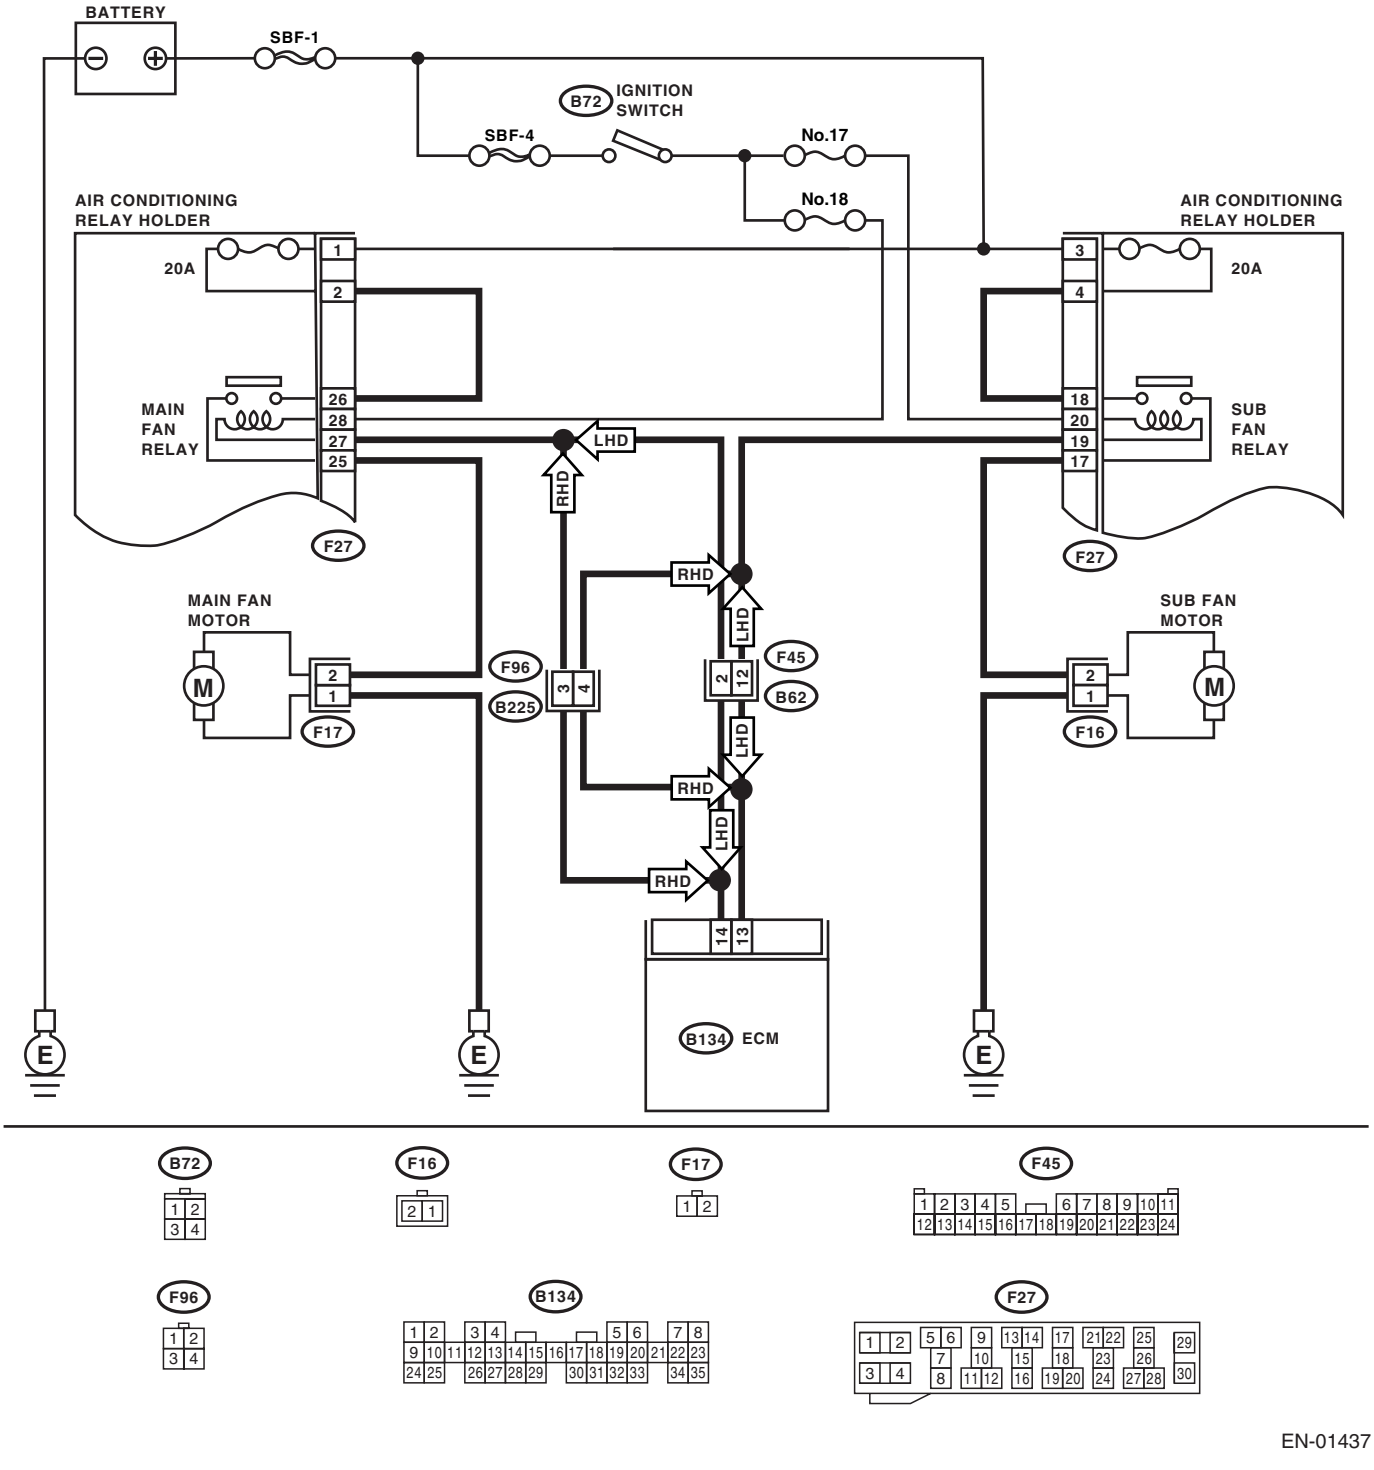

EN-01437

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector at the lower portion of instrument panel (on the drive's side). 3)Turn the ignition switch to ON. 4)While operating the radiator fan relay, measure voltage between ECM and chassis ground. NOTE: Radiator fan relay operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4SO)-47, Compulsory Valve Operation Check Mode.> ***Connector & terminal*** ***(B134) No. 14 (+) — Chassis ground (−):*** ***(B134) No. 13 (+) — Chassis ground (−):***	Is the voltage 0 — 10 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.	Go to step **2.**
2	**CHECK SHORT CIRCUIT IN RADIATOR FAN RELAY CONTROL CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay and sub fan relay. (with A/C models) 3)Disconnect the test mode connector. 4)Turn the ignition switch to ON. 5)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 14 (+) — Chassis ground (−):*** ***(B134) No. 13 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in radiator fan relay control circuit. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **3.**
3	**CHECK MAIN FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay. 3)Measure the resistance between main fan relay terminals. ***Terminal*** ***No. 25 — No. 26:***	Is the resistance less than 1 Ω?	Replace the main fan relay and ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **4.**
4	**CHECK SUB FAN RELAY.** 1)Remove the sub fan relay. 2)Measure the resistance between sub fan relay terminals. ***Terminal*** ***No. 17 — No. 18:***	Is the resistance less than 1 Ω?	Replace the sub fan relay and ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Go to step **5.**
5	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

BI: DTC P0703 — TORQUE CONVERTER/BRAKE SWITCH "B" CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

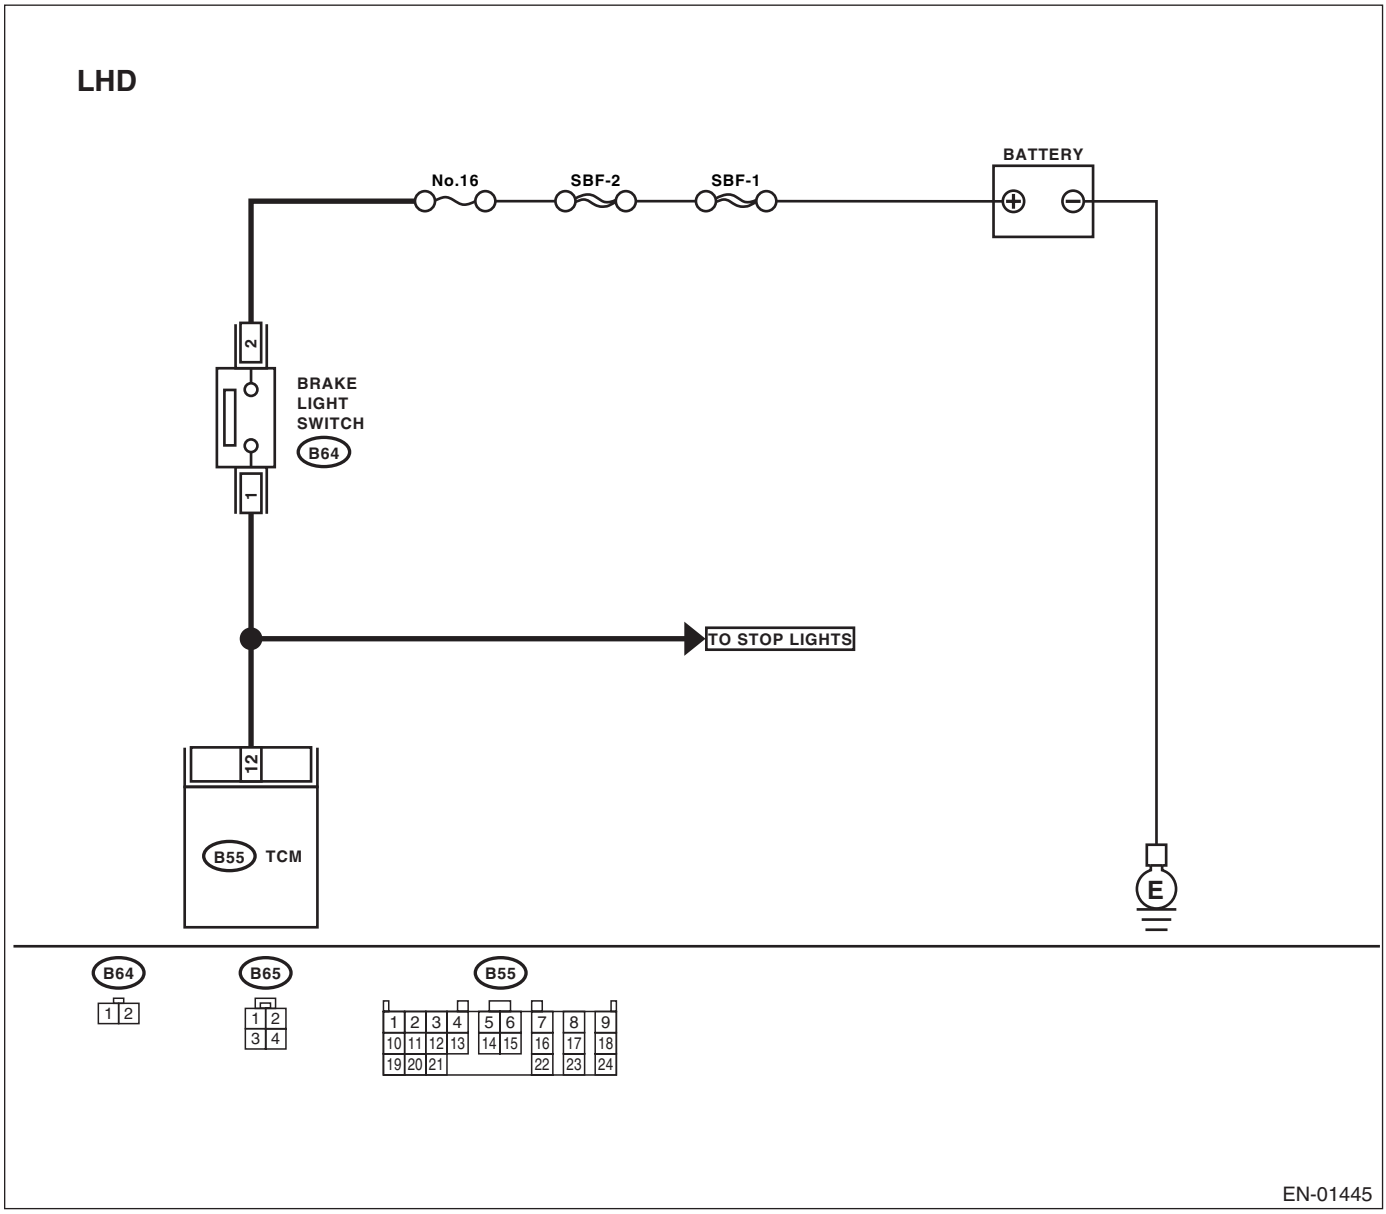

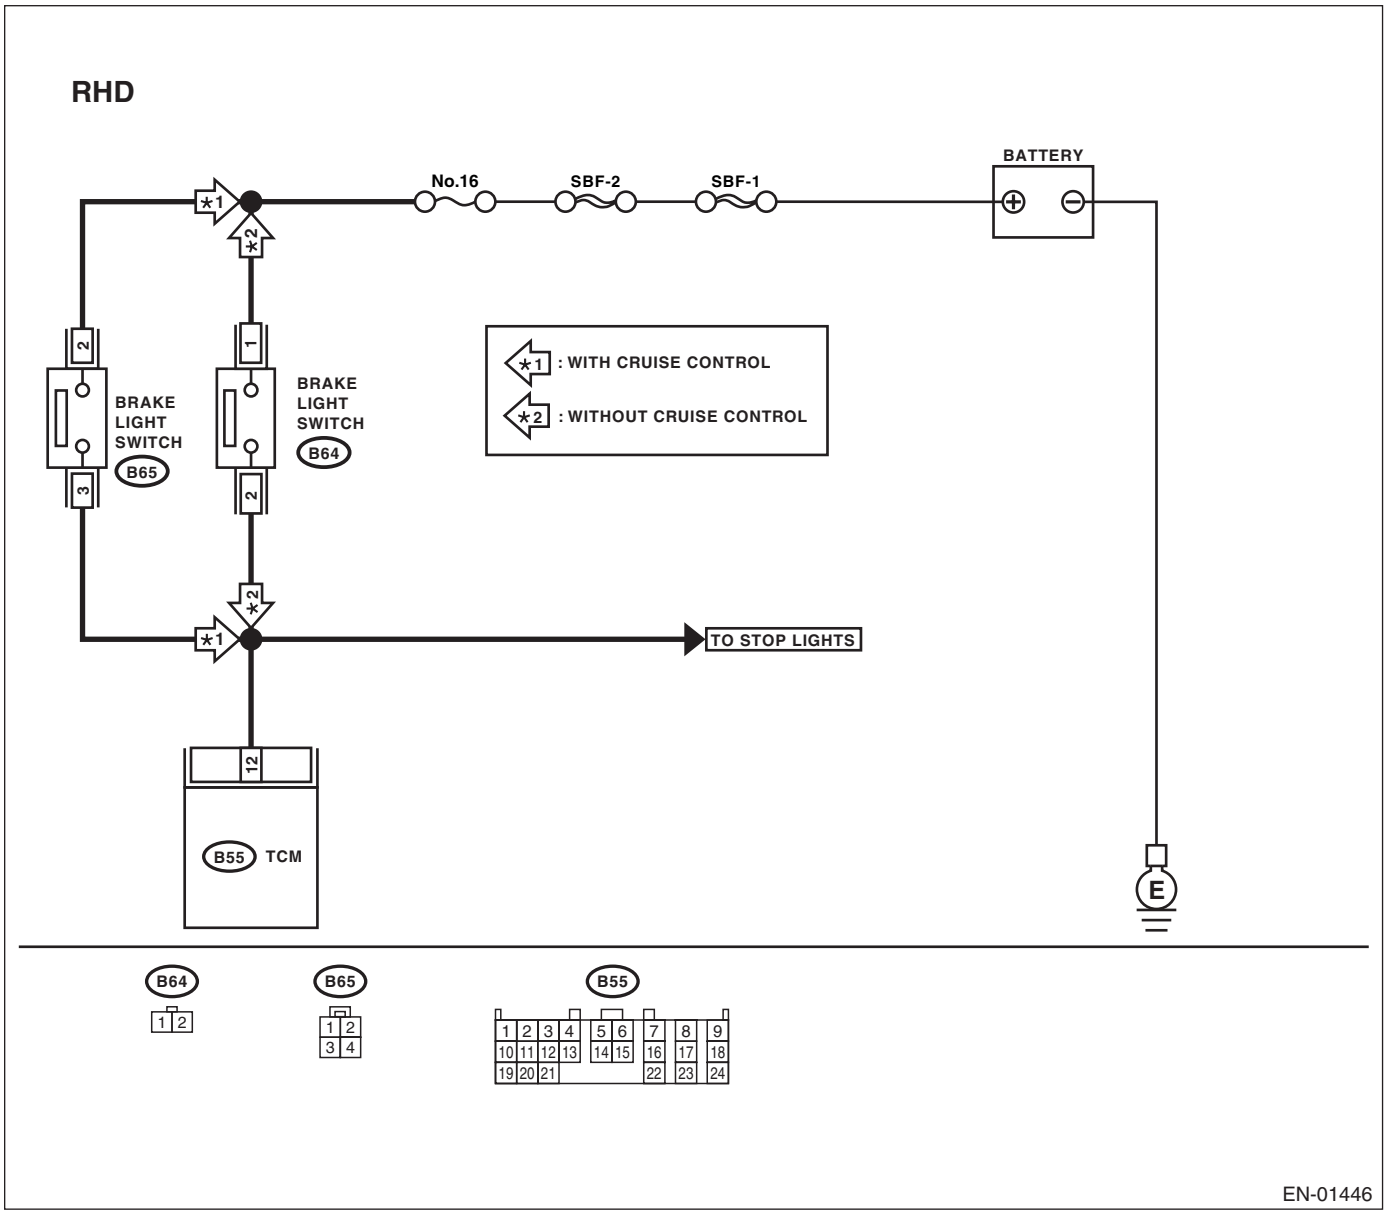

Step		Check	Yes	No
1	**CHECK OPERATION OF BRAKE LIGHT.**	Does the brake light illuminate when depressing the brake pedal?	Go to step **2.**	Repair or replace the brake light circuit.

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR.** 1)Disconnect the connectors from TCM and brake light switch. 2)Measure the resistance of harness between TCM and brake light switch connector. ***Connector & terminal*** ***LHD*** ***(B55) No. 12 — (B64) No. 1:*** ***RHD (With cruise control)*** ***(B55) No. 12 — (B64) No. 2:*** ***RHD (With cruise control)*** ***(B55) No. 12 — (B65) No. 3:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair or replace the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between TCM and brake light switch connector • Poor contact in TCM connector • Poor contact in brake light switch connector
3	**CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 12 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair ground short circuit in harness between TCM and brake light switch connector.
4	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and brake light switch. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 12 (+) — Chassis ground (−):***	Is the voltage less than 1 V when releasing the brake pedal?	Go to step **5.**	Adjust or replace the brake light switch. <Ref. to LI-8, STOP LIGHT SWITCH, INSPECTION, Stop Light System.>
5	**CHECK INPUT SIGNAL FOR TCM.** Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V when depressing the brake pedal?	Go to step **6.**	Adjust or replace the brake light switch. <Ref. to LI-8, STOP LIGHT SWITCH, INSPECTION, Stop Light System.>
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BJ:DTC P0731 — GEAR 1 INCORRECT RATIO —

NOTE:
For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H4SO)-215, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BK:DTC P0732 — GEAR 2 INCORRECT RATIO —

NOTE:
For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H4SO)-215, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BL:DTC P0733 — GEAR 3 INCORRECT RATIO —

NOTE:
For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H4SO)-215, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BM:DTC P0734 — GEAR 4 INCORRECT RATIO —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Shift point too high or too low; engine brake not effected in “3” range; excessive shift shock; excessive tight corner “braking”

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK THROTTLE POSITION SENSOR CIRCUIT.** Check throttle position sensor circuit. <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in throttle position sensor circuit?	Repair or replace the throttle position sensor circuit.	Go to step **3.**
3	**CHECK FRONT VEHICLE SPEED SENSOR CIRCUIT.** Check front vehicle speed sensor circuit. <Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in front vehicle speed sensor circuit?	Repair or replace the front vehicle speed sensor circuit.	Go to step **4.**
4	**CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT.** Check torque converter turbine speed sensor circuit. <Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in torque converter turbine speed sensor circuit?	Repair or replace the torque converter turbine speed sensor circuit.	Go to step **5.**
5	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Go to step **6.**
6	**CHECK MECHANICAL TROUBLE.** Check mechanical trouble in automatic transmission.	Is there any mechanical trouble in automatic transmission?	Repair or replace the automatic transmission. <Ref. to 4AT-33, INSPECTION, Road Test.>	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BN:DTC P0741 — TORQUE CONVERTER CLUTCH CIRCUIT PERFORMANCE OR STUCK OFF —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - No lock-up (after engine warm-up)
  - No shift or excessive tight corner “braking”

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK LOCK-UP DUTY SOLENOID CIRCUIT.** Check lock-up duty solenoid circuit. <Ref. to 4AT-82, DTC 77 LOCK-UP DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in lock-up duty solenoid circuit?	Repair or replace the lock-up duty solenoid circuit.	Go to step **3.**
3	**CHECK THROTTLE POSITION SENSOR CIRCUIT.** Check throttle position sensor circuit. <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in throttle position sensor circuit?	Repair or replace the throttle position sensor circuit.	Go to step **4.**
4	**CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT.** Check torque converter turbine speed sensor circuit. <Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in torque converter turbine speed sensor circuit?	Repair or replace the torque converter turbine speed sensor circuit.	Go to step **5.**
5	**CHECK ENGINE SPEED INPUT CIRCUIT.** Check engine speed input circuit. <Ref. to 4AT-41, DTC 11 ENGINE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in engine speed input circuit?	Repair or replace the engine speed input circuit.	Go to step **6.**
6	**CHECK INHIBITOR SWITCH CIRCUIT.** Check inhibitor switch circuit. <Ref. to 4AT-109, CHECK INHIBITOR SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Is there any trouble in inhibitor switch circuit?	Repair or replace the inhibitor switch circuit.	Go to step **7.**
7	**CHECK BRAKE LIGHT SWITCH CIRCUIT.** Check brake light switch circuit. <Ref. to 4AT-101, CHECK BRAKE SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Is there any trouble in brake light switch circuit?	Repair or replace the brake light switch circuit.	Go to step **8.**

	Step	Check	Yes	No
8	**CHECK ATF TEMPERATURE SENSOR CIRCUIT.** Check ATF temperature sensor circuit. <Ref. to 4AT-45, DTC 27 ATF TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in ATF temperature sensor circuit?	Repair or replace the ATF temperature sensor circuit.	Go to step **9.**
9	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Go to step **10.**
10	**CHECK MECHANICAL TROUBLE.** Check mechanical trouble in automatic transmission.	Is there any mechanical trouble in automatic transmission?	Repair or replace the automatic transmission. <Ref. to 4AT-33, INSPECTION, Road Test.>	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BO:DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

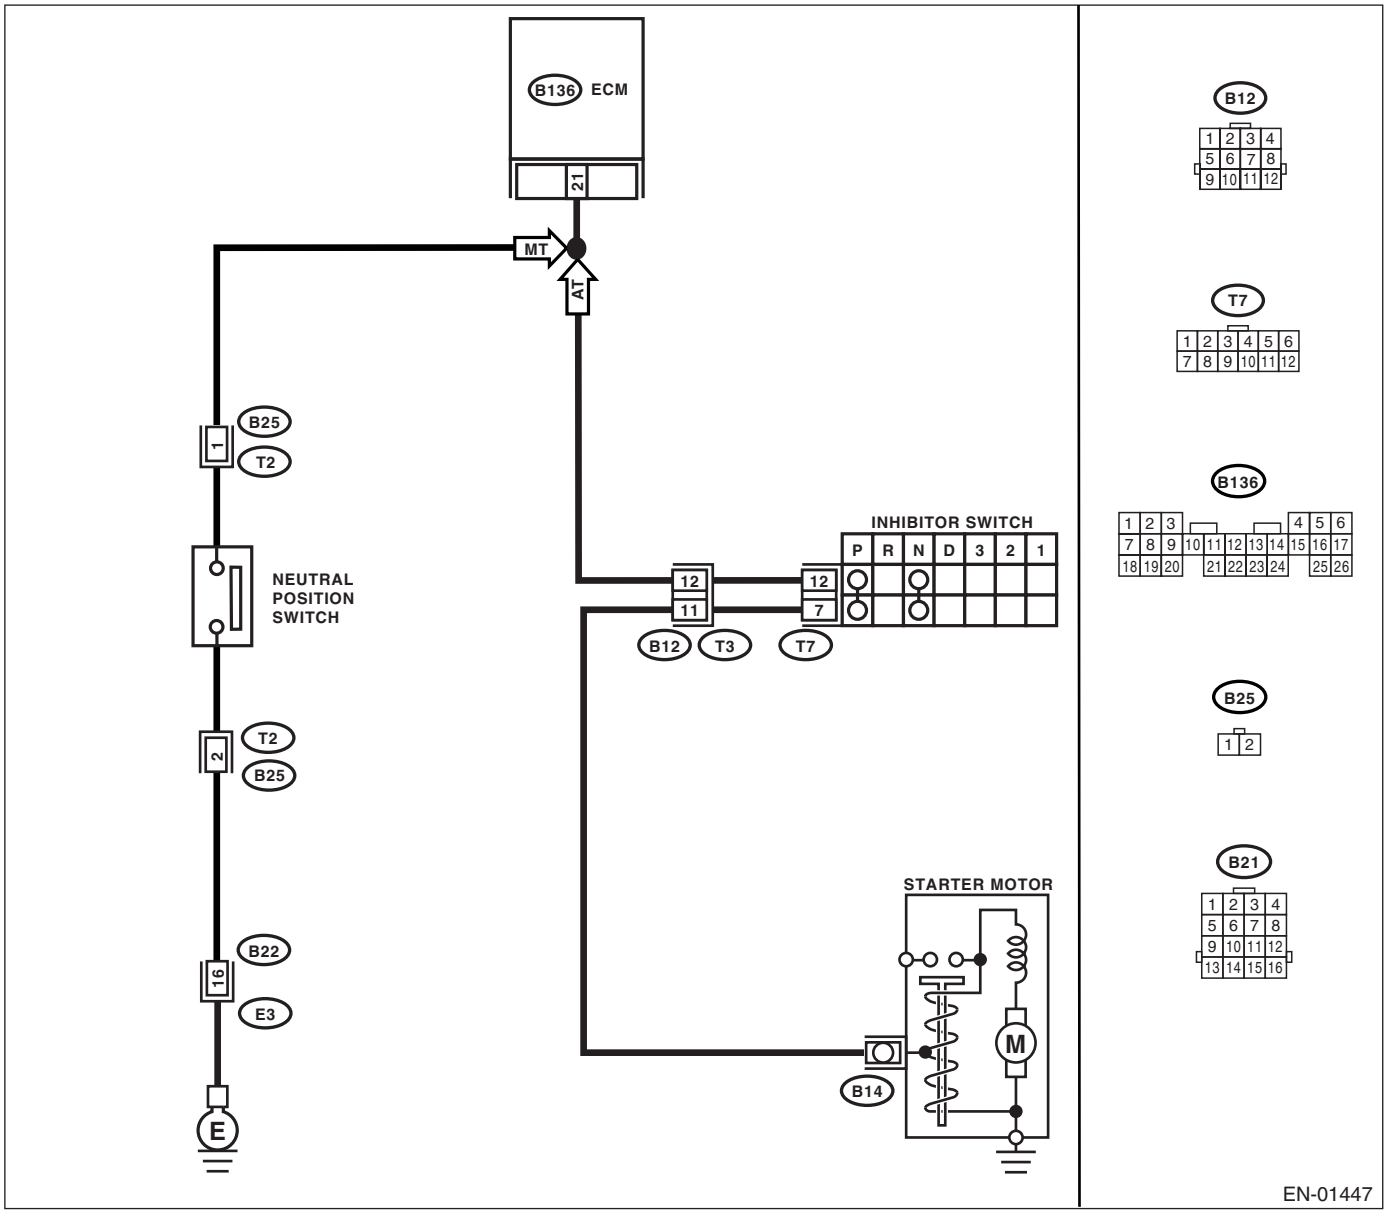

	Step	Check	Yes	No
1	**CHECK OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC P0705 using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Place the select lever except for “N” and “P” ranges. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 21 (+) — Chassis ground (−):***	Is the voltage 4.5 — 5.5 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND TRANSMISSION HARNESS CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and transmission harness connector (T3). 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 21 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair ground short circuit in harness between ECM and transmission harness connector.
4	**CHECK TRANSMISSION HARNESS CONNECTOR.** 1)Disconnect the connector from inhibitor switch. 2)Measure the resistance of harness between transmission harness connector and engine ground. ***Connector & terminal*** ***(T3) No. 12 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair ground short circuit in harness between transmission harness and inhibitor switch connector.
5	**CHECK INHIBITOR SWITCH.** Measure the resistance between inhibitor switch connector the receptacle's terminals in select lever except for “N” range. ***Terminals*** ***No. 7 — No. 12:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Replace the inhibitor switch. <Ref. to 4AT-48, Inhibitor Switch.>
6	**CHECK SELECTOR CABLE CONNECTION.**	Is there any fault in selector cable connection to inhibitor switch?	Repair selector cable connection. <Ref. to CS-14, INSPECTION, Select Cable.>	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

BP:DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW (AT VEHICLES) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

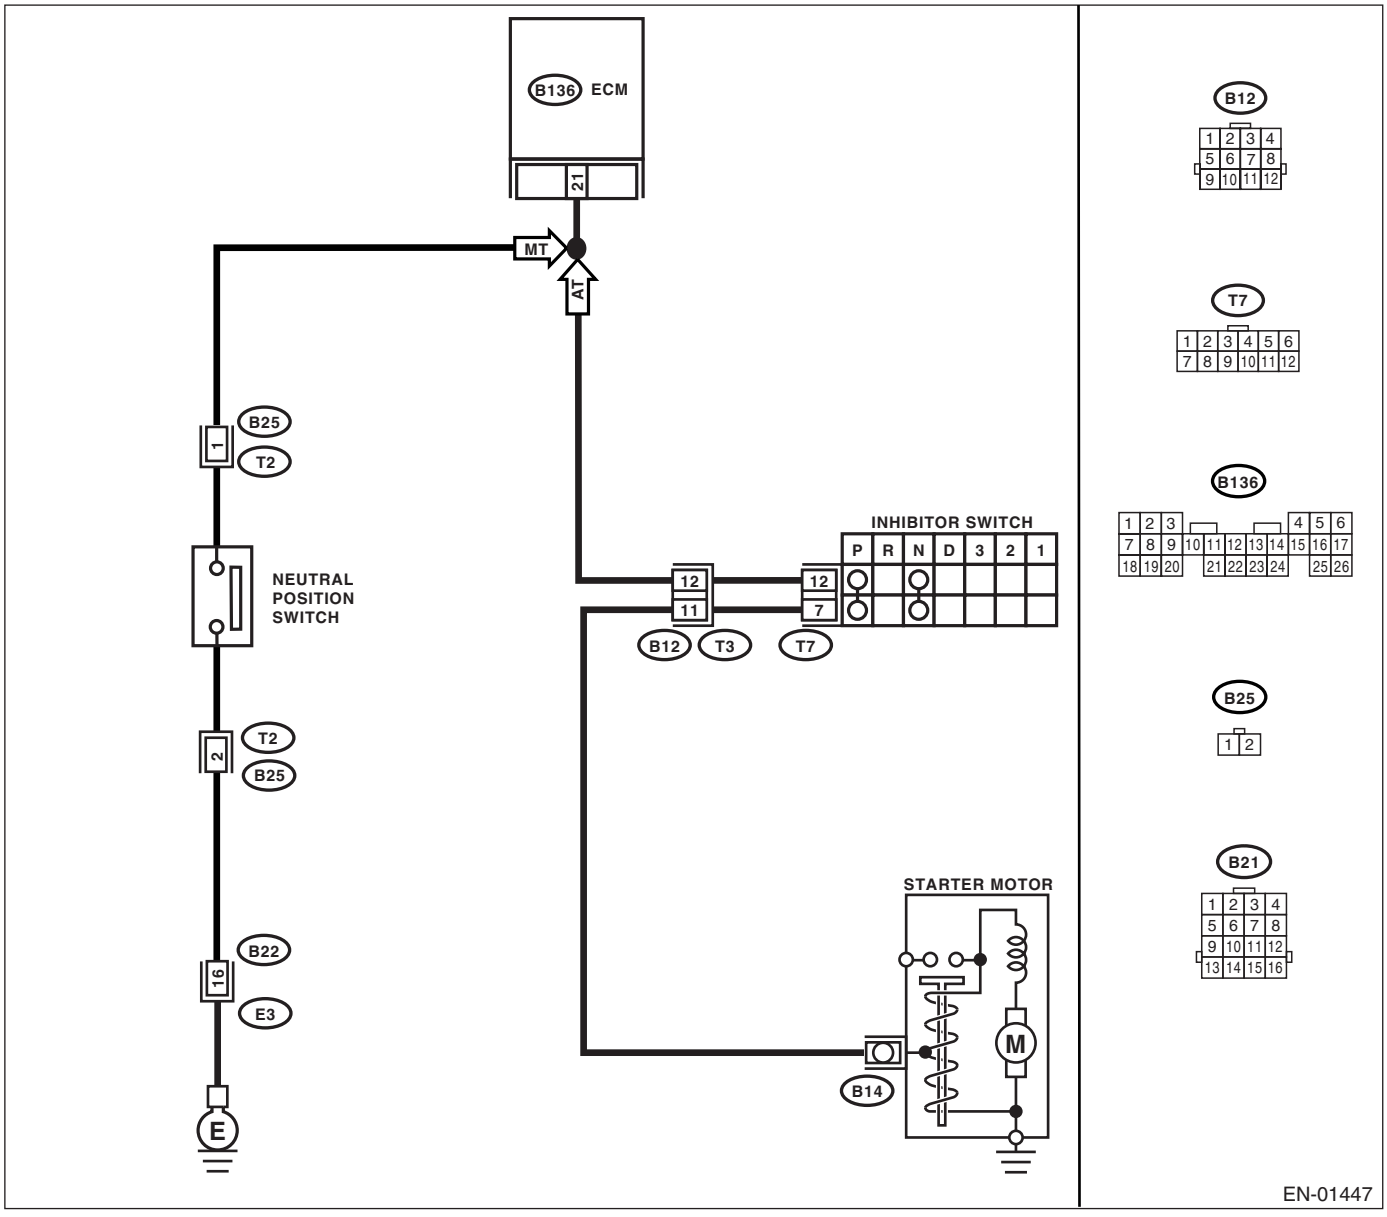

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Place the shift lever in neutral. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 21 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Place the shift lever in a position except for neutral. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 21 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Go to step **4.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Contact with SUBARU distributor service.
4	**CHECK NEUTRAL POSITION SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission harness. 3)Place the shift lever in neutral. 4)Measure the resistance between transmission harness and connector terminals. ***Connector & terminal*** ***(T2) No. 1 — No. 2:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair short circuit in transmission harness or replace neutral position switch.
5	**CHECK NEUTRAL POSITION SWITCH.** 1)Place the shift lever in a position except for neutral. 2)Measure the resistance between transmission harness connector terminals.	Is the resistance less than 1 Ω?	Go to step **6.**	Repair short circuit in transmission harness or replace neutral position switch.
6	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 21 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair ground short circuit in harness between ECM and transmission harness connector.
7	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and transmission harness connector. ***Connector & terminal*** ***(B136) No. 21 — (B25) No. 1:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair open circuit in harness between ECM and transmission harness connector.
8	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** Measure the resistance of harness between transmission harness connector and engine ground. ***Connector & terminal*** ***(B25) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **9.**	Repair open circuit between transmission harness connector and engine ground terminal.
9	**CHECK POOR CONTACT.** Check poor contact in transmission harness connector.	Is there poor contact in transmission harness connector?	Repair poor contact in transmission harness connector.	Contact with SUBARU distributor service.

BQ:DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH (MT VEHICLES) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

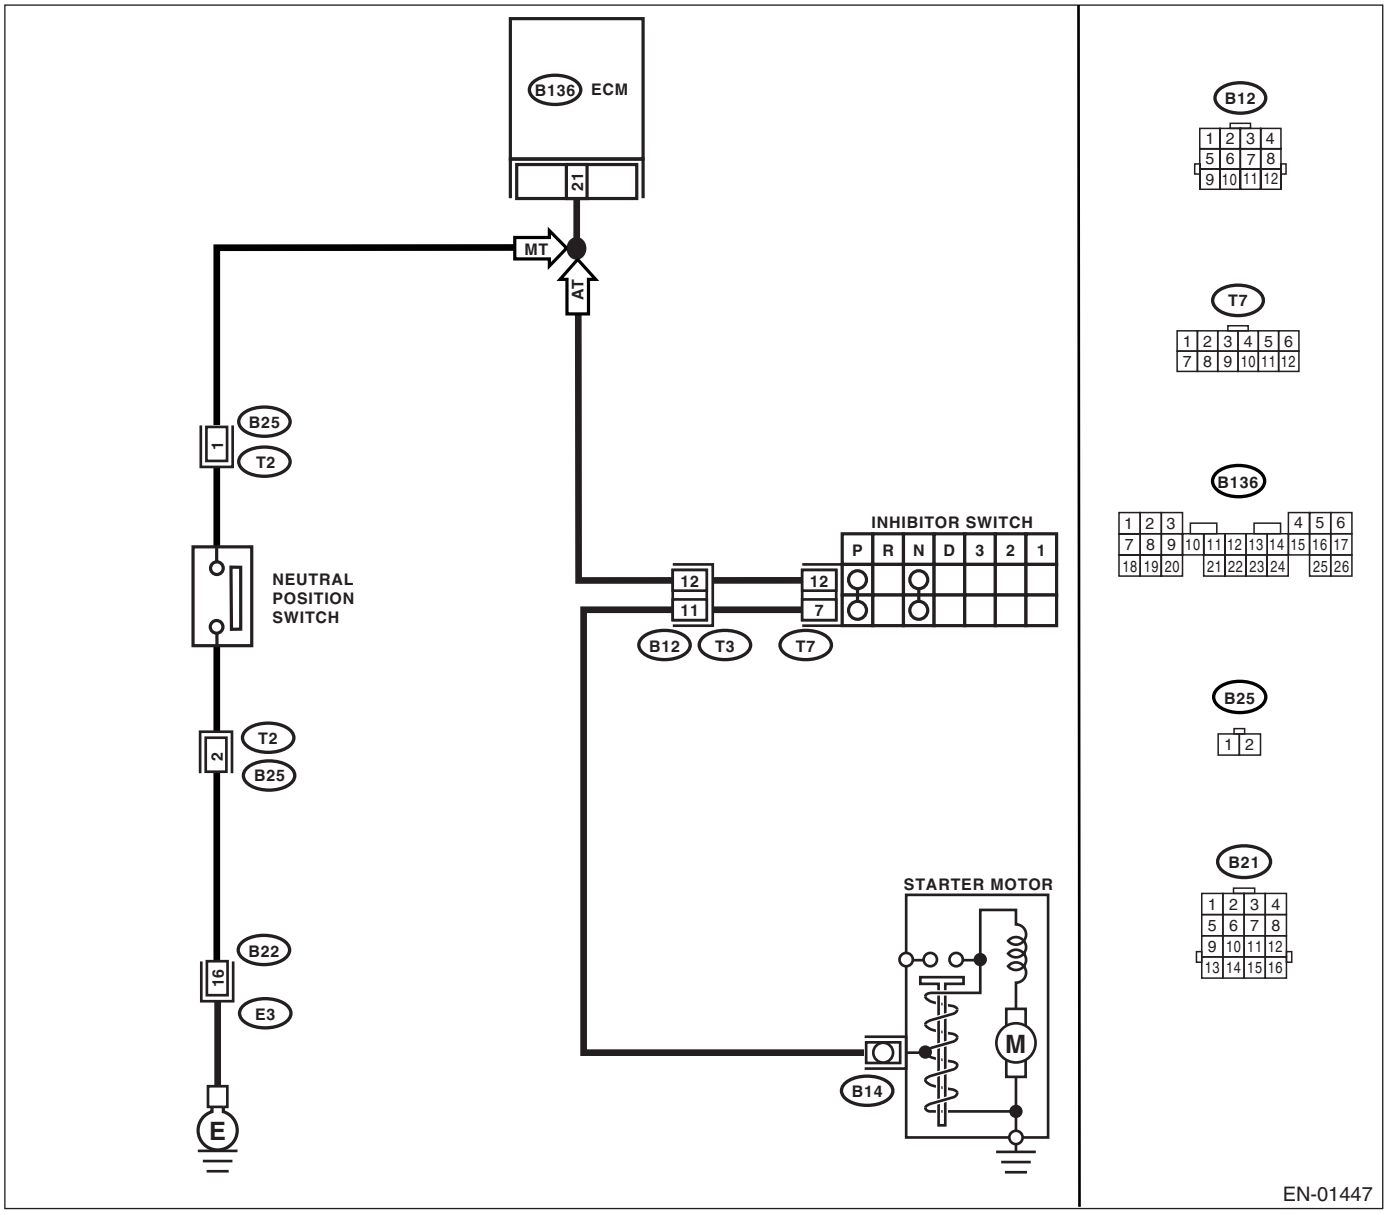

	Step	Check	Yes	No
1	**CHECK OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground in select lever “N” and “P” ranges. ***Connector & terminal*** ***(B136) No. 21 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Go to step **5.**

	Step	Check	Yes	No
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground in select lever except for "N" and "P" ranges. ***Connector & terminal*** ***(B136) No. 21 (+) — Chassis ground (−):***	Is the voltage 4.5 — 5.5 V?	Go to step **4.**	Go to step **5.**
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 21 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and inhibitor switch connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN ECM AND INHIBITOR SWITCH CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and inhibitor switch. 3)Measure the resistance of harness between ECM and inhibitor switch connector. ***Connector & terminal*** ***(B136) No. 21 — (T7) No. 12:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and inhibitor switch connector • Poor contact in coupling connector • Poor contact in inhibitor switch connector • Poor contact in ECM connector
7	**CHECK INHIBITOR SWITCH GROUND LINE.** Measure the resistance of harness between inhibitor switch connector and engine ground. ***Connector & terminal*** ***(T7) No. 7 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **8.**	Repair open circuit in harness between inhibitor switch connector and starter motor ground line. NOTE: In this case, repair the following: • Open circuit in harness between inhibitor switch connector and starter motor ground line • Poor contact in starter motor connector • Poor contact in starter motor ground • Starter motor

	Step	Check	Yes	No
8	**CHECK INHIBITOR SWITCH.** Measure the resistance between inhibitor switch connector receptacle's terminals in select lever “N” and “P” ranges. ***Terminals*** ***No. 7 — No. 12:***	Is the resistance less than 1 Ω?	Go to step **9.**	Replace the inhibitor switch. <Ref. to 4AT-48, Inhibitor Switch.>
9	**CHECK SELECTOR CABLE CONNECTION.**	Is there any fault in selector cable connection to inhibitor switch?	Repair selector cable connection. <Ref. to CS-14, INSPECTION, Select Cable.>	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

BR:DTC P0864 — TCM COMMUNICATION CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

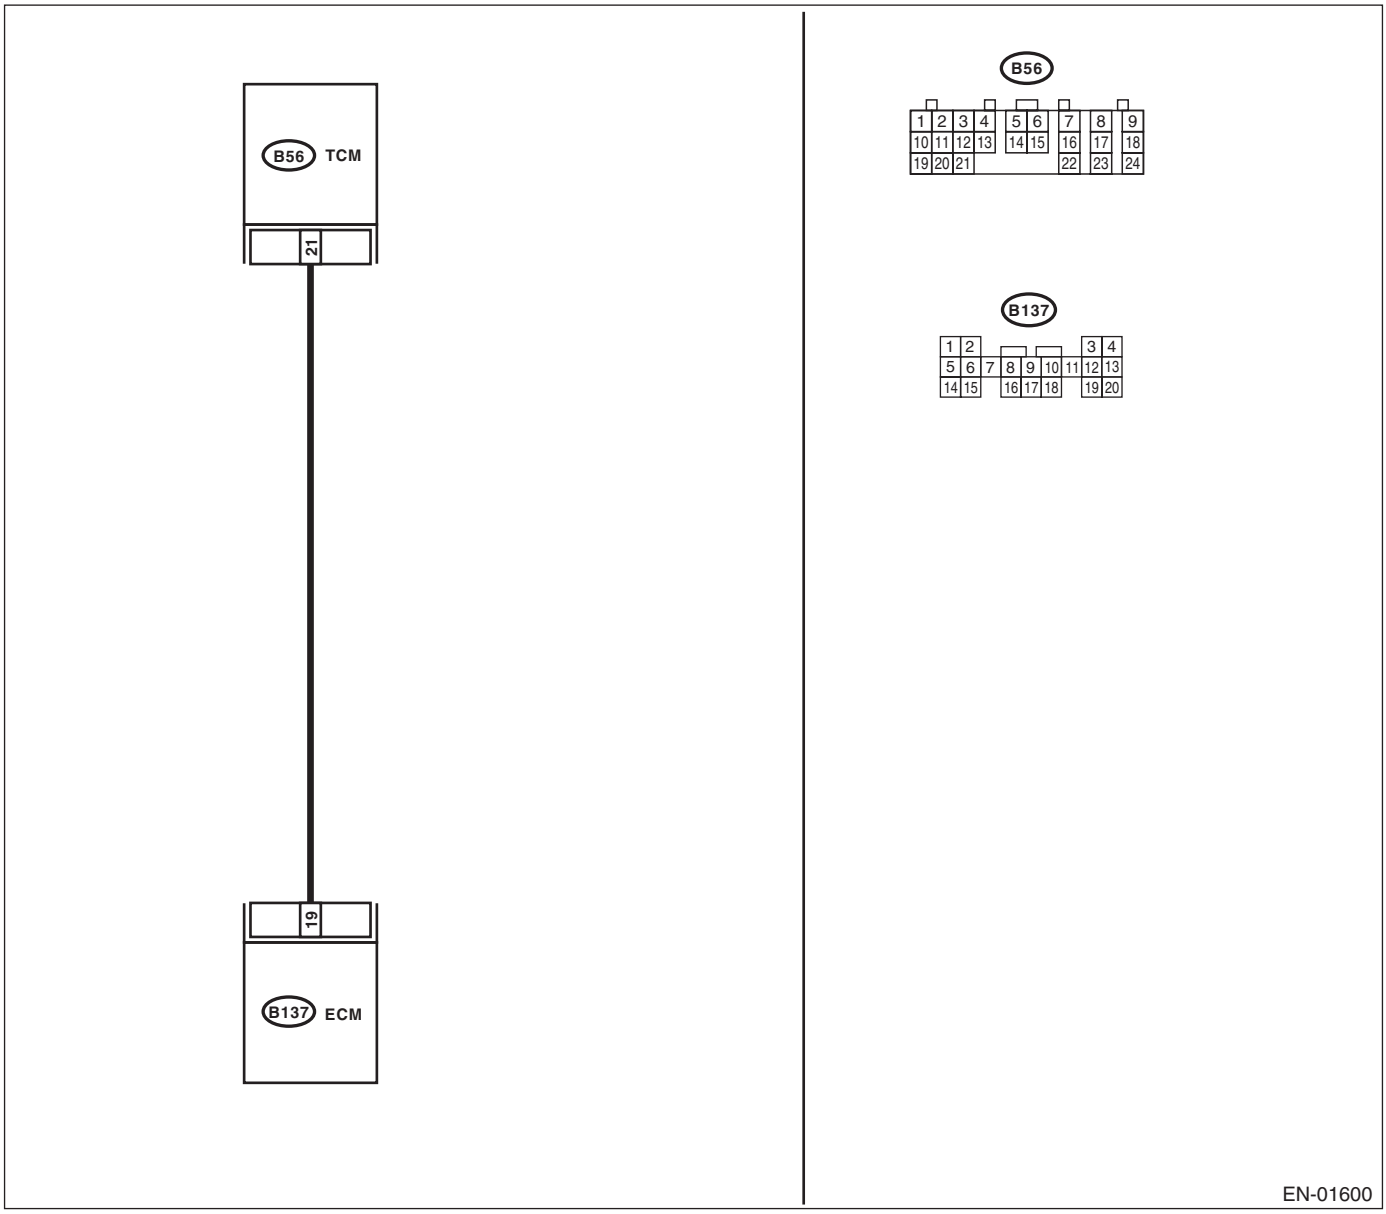

Step		Check	Yes	No
1	**CHECK DRIVING CONDITION.** 1)Start and warm-up the engine until the radiator fan makes one complete rotation. 2)Drive the vehicle.	Is the AT shift control functioning properly?	Go to step **2.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

Step		Check	Yes	No
2	**CHECK ACCESSORY.**	Are car phone and/or CB installed on vehicle?	Repair grounding line of car phone or CB system.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BS:DTC P0865 — TCM COMMUNICATION CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

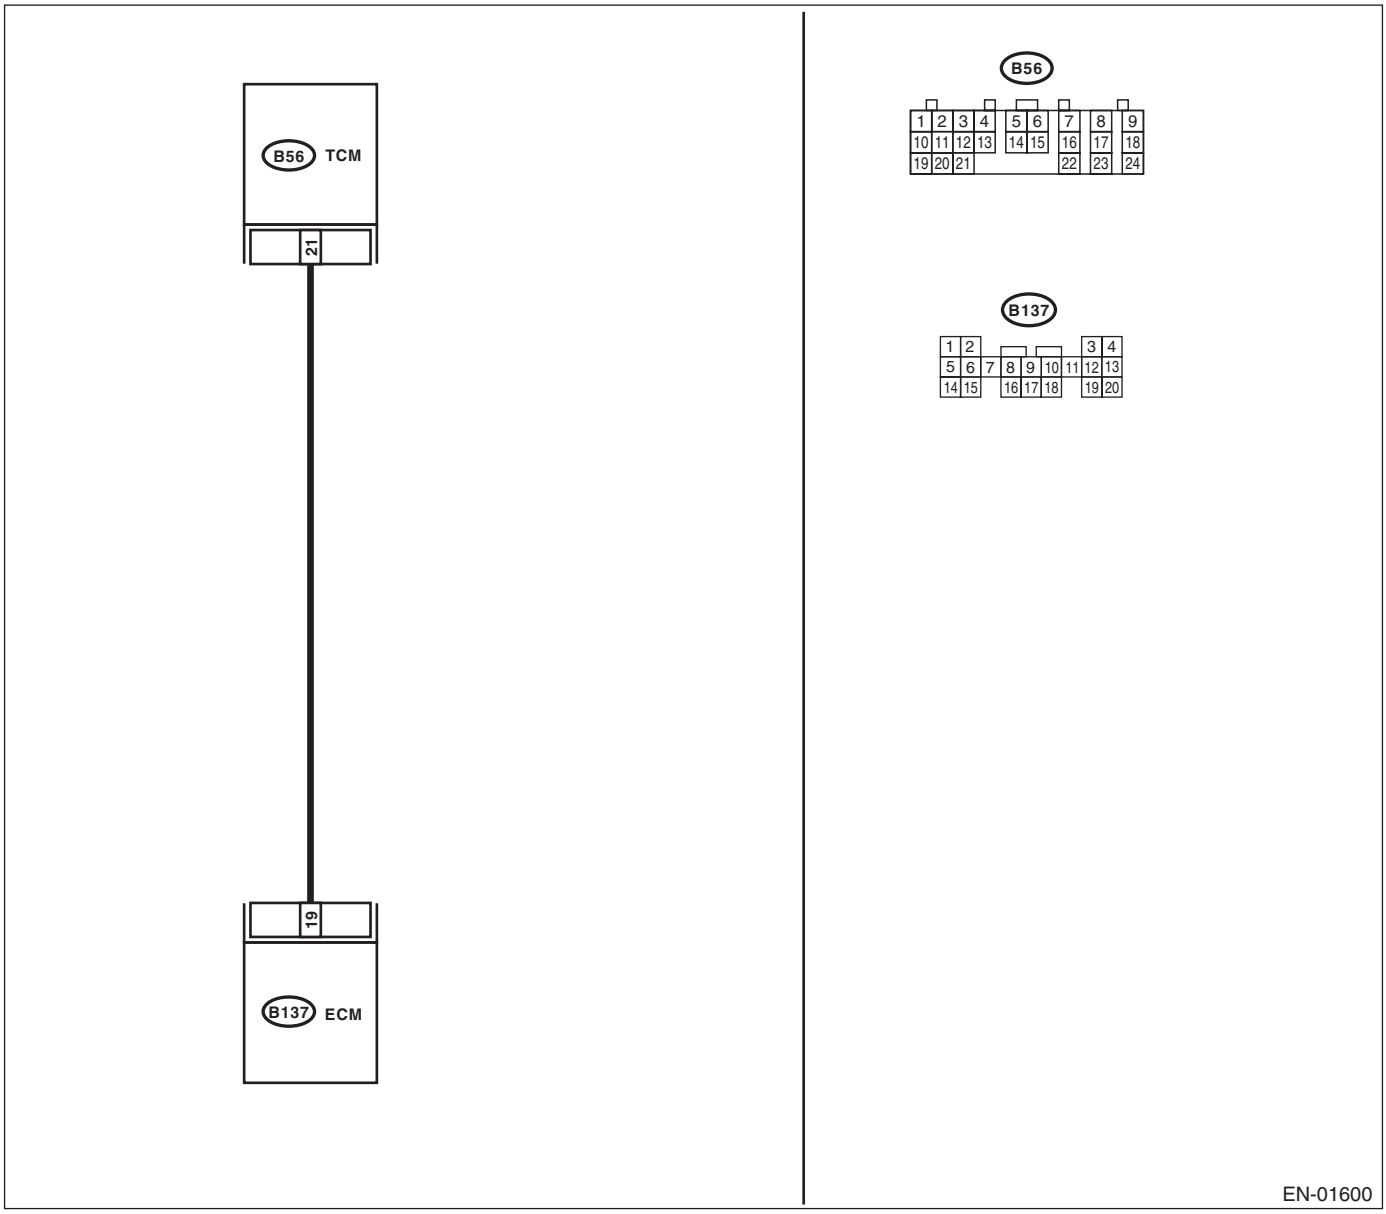

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. NOTE: In this case, repair the following: • Poor contact in ECM connector • Poor contact in TCM connector
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and TCM. 3)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair ground short circuit in harness between ECM and TCM connector.
3	**CHECK OUTPUT SIGNAL FOR ECM.** 1)Connect the connector to ECM. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 5 V?	Go to step **4.**	Repair poor contact in ECM connector.
4	**CHECK DTC FOR AUTOMATIC TRANSMISSION.** Read the DTC for automatic transmission. <Ref. to 4AT-24, Read Diagnostic Trouble Code (DTC).>	Does the DTC appear for automatic transmission?	Check DTC for automatic transmission. <Ref. to 4AT-41, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BT:DTC P0866 — TCM COMMUNICATION CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

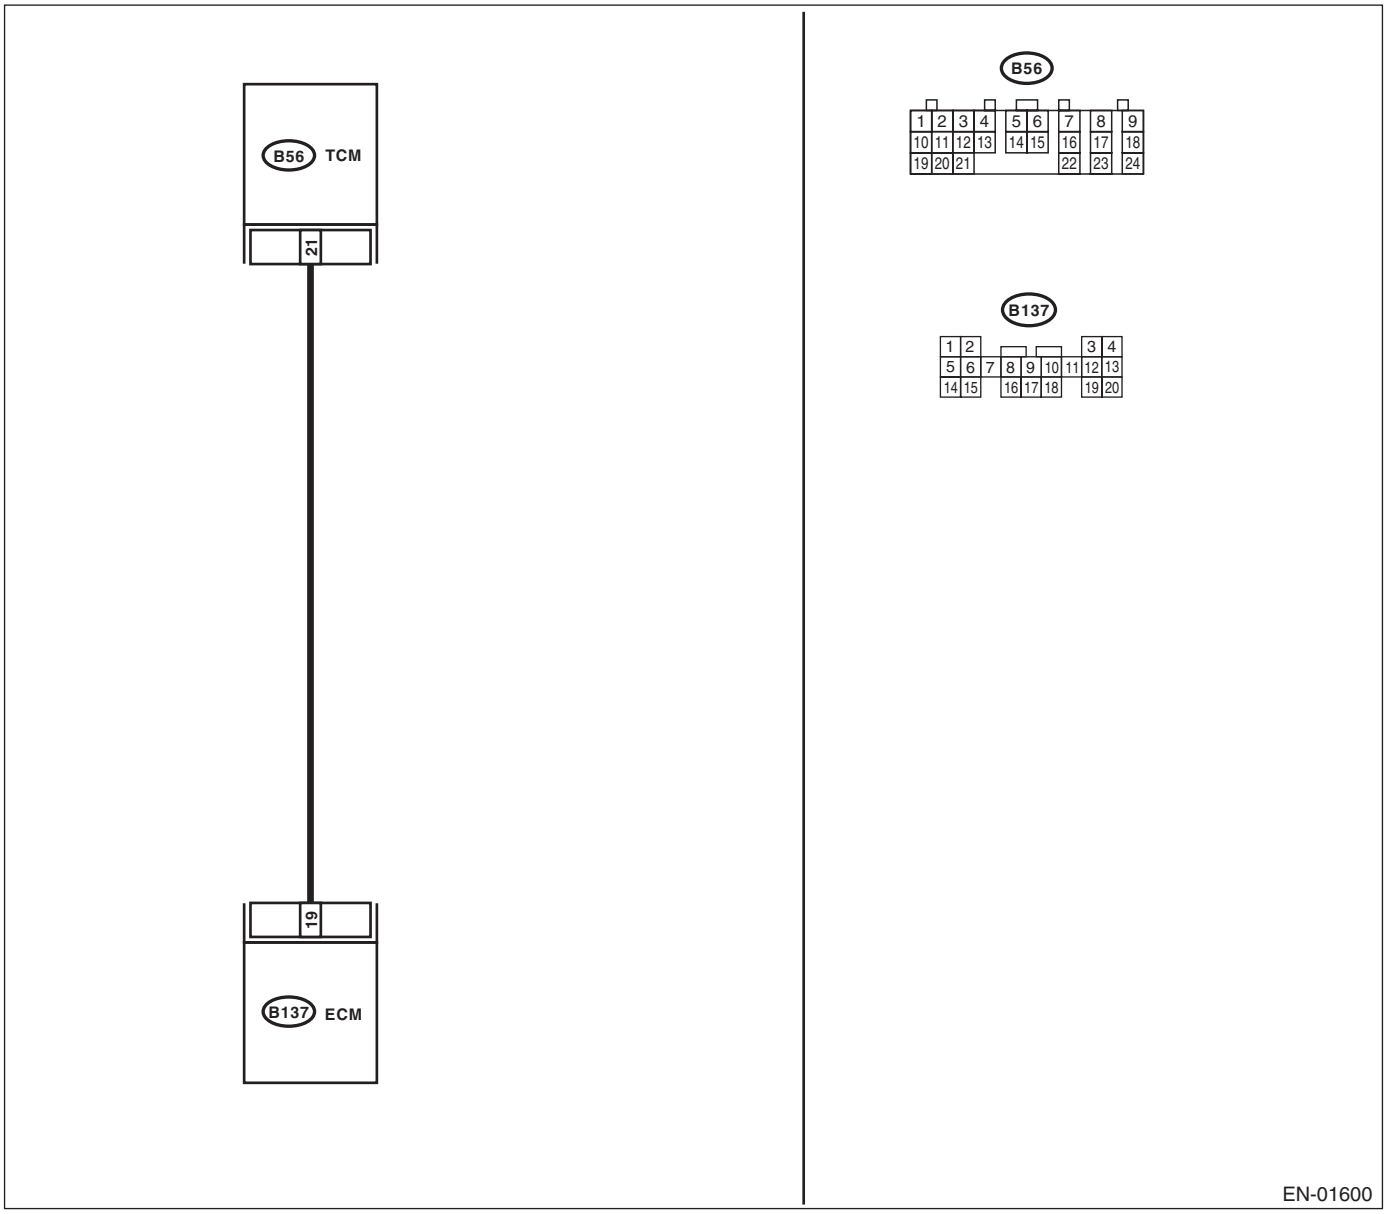

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and TCM connector.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 4 V?	Go to step **5.**	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Repair poor contact in ECM connector.	Go to step **4.**
4	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage 1 — 4 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. NOTE: In this case, repair the following: • Poor contact in ECM connector • Poor contact in TCM connector	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B56) No. 21 (+) — Chassis ground (−):***	Is the voltage more than 4 V?	Go to step **6.**	Repair open circuit in harness between ECM and TCM connector.
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Check TCM power supply line and grounding line.

BU:DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (LOW INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: It is not necessary to inspect DTC P0129.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

BV:DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (HIGH INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: It is not necessary to inspect DTC P1111.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

BW:DTC P1134 — A/F SENSOR MICRO-COMPUTER PROBLEM —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, Inspection Mode.>.

WIRING DIAGRAM:

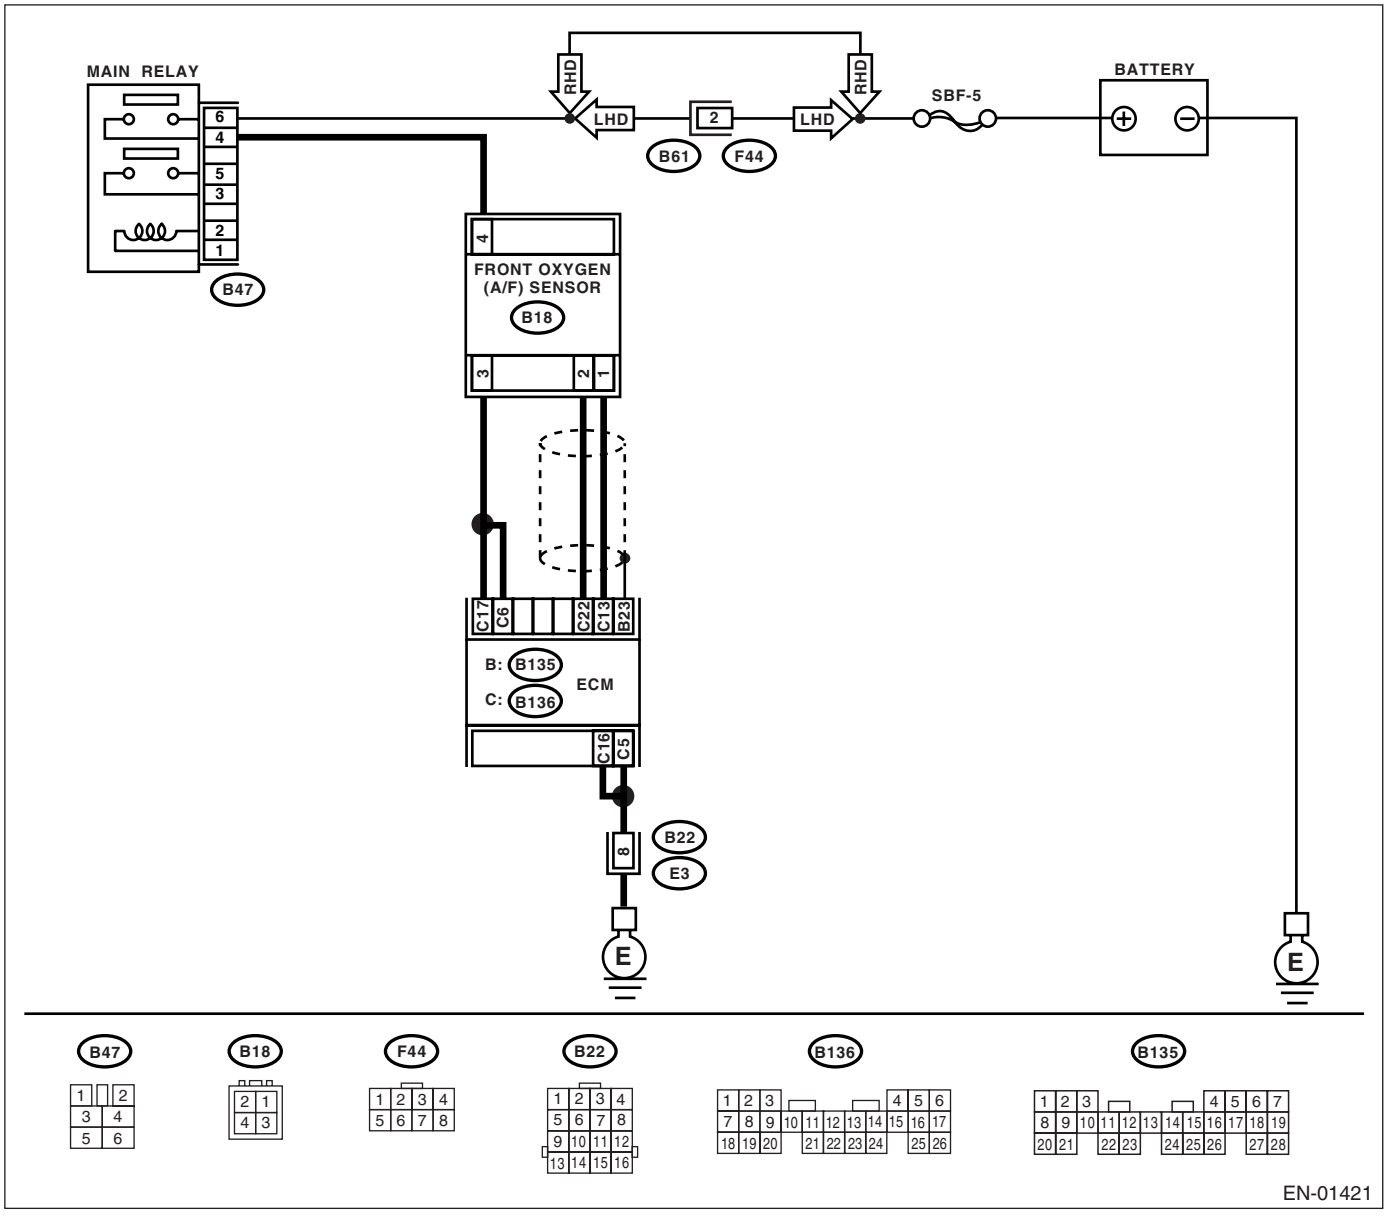

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> NOTE: It is not necessary to inspect DTC P1134.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

BX: DTC P1137 — O_2 SENSOR CIRCUIT (LAMDA=1) (BANK1 SENSOR1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

WIRING DIAGRAM:

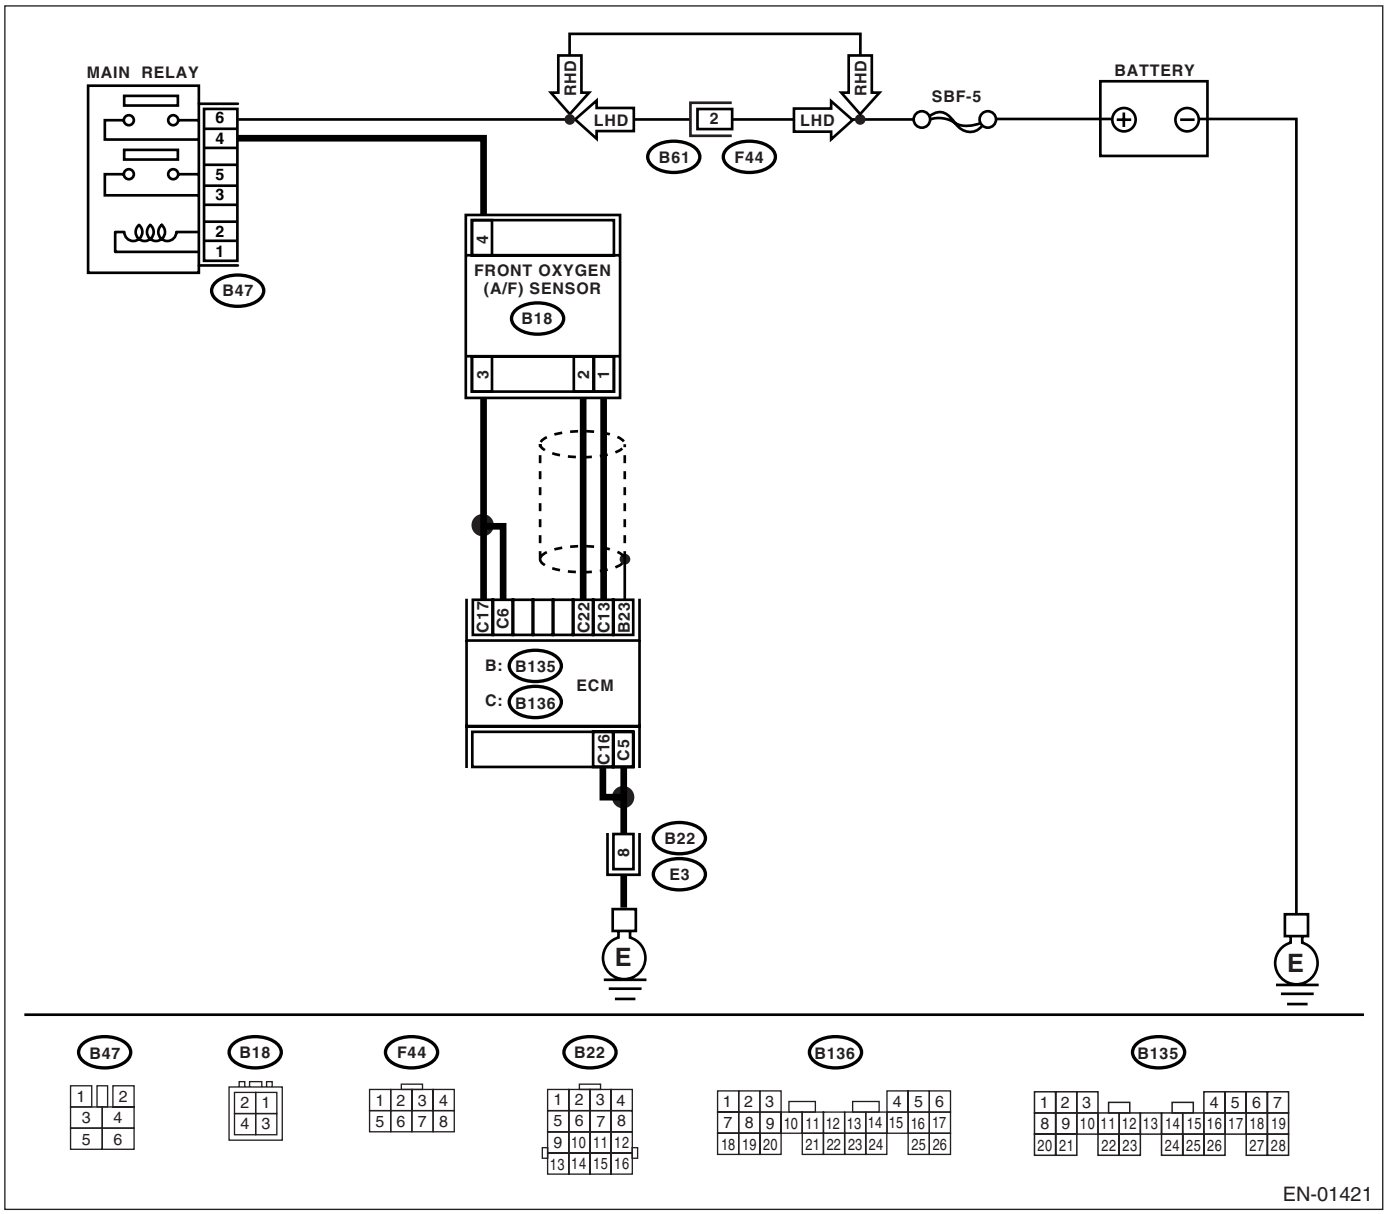

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK FRONT OXYGEN (A/F) SENSOR DATA.** 1)Start the engine. 2)While observing the Subaru Select Monitor or OBD-II general scan tool screen, warm-up the engine until coolant temperature is above 70°C (160°F). If the engine is already warmed-up, operate at idle speed for at least 1 minute. 3)Read the data of front oxygen (A/F) sensor signal during idling using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4SO)-31, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage 0.85 V — 1.15 V?	Go to step **3.**	Go to step **4.**
3	**CHECK FRONT OXYGEN (A/F) SENSOR DATA.** Race the engine at speeds from idling to 5,000 rpm for a total of 5 cycles. NOTE: •Air fuel ratio is rich at normal condition or during racing. •To increase engine speed to 5,000 rpm, slowly depress accelerator pedal, taking approximately 5 seconds, and quickly release accelerator pedal to decrease engine speed.	Is the voltage more than 1.1 V?	Go to step **6.**	Go to step **4.**
4	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and front oxygen (A/F) sensor connector. 3)Measure the resistance between ECM and front oxygen (A/F) sensor. ***Connector & terminals*** ***(B136) No. 13 — (B18) No. 1:*** ***(B136) No. 22 — (B18) No. 2:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair open circuit between ECM and front oxygen (A/F) sensor.
5	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR.** Measure the resistance between ECM and chassis ground. ***Connector & terminals*** ***(B136) No. 13 — Chassis ground:*** ***(B136) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair ground short circuit between ECM and front oxygen (A/F) sensor.
6	**CHECK EXHAUST SYSTEM.** Check exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness of front oxygen (A/F) sensor •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace faulty parts.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4SO)-44, Front Oxygen (A/F) Sensor.>

BY:DTC P1492 — EGR SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (LOW INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1498. <Ref. to EN(H4SO)-239, DTC P1498 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BZ:DTC P1493 — EGR SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (HIGH INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1499. <Ref. to EN(H4SO)-241, DTC P1499 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CA:DTC P1494 — EGR SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (LOW INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1498. <Ref. to EN(H4SO)-239, DTC P1498 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CB:DTC P1495 — EGR SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (HIGH INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1499. <Ref. to EN(H4SO)-241, DTC P1499 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CC:DTC P1496 — EGR SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (LOW INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1498. <Ref. to EN(H4SO)-239, DTC P1498 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CD:DTC P1497 — EGR SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (HIGH INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1499. <Ref. to EN(H4SO)-241, DTC P1499 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CE:DTC P1498 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance.
  - Engine breathing

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

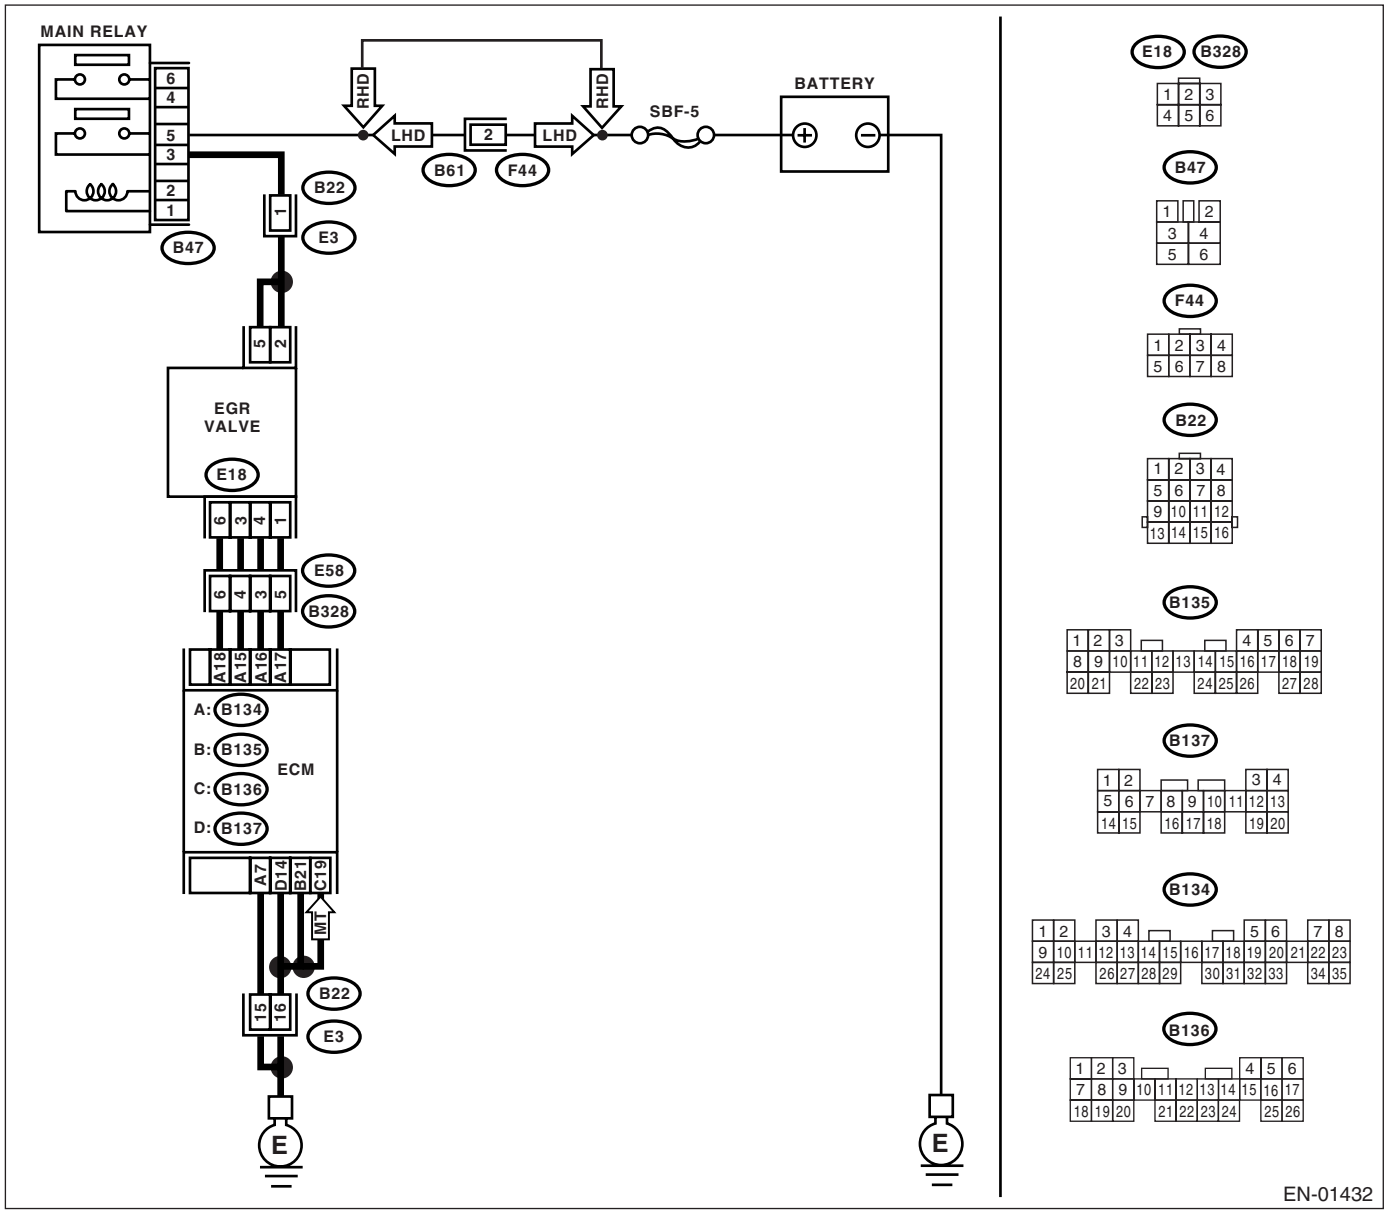

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY TO EGR SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from EGR solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between EGR solenoid valve connector and engine ground. ***Connector & terminal*** ***(E18) No. 2 (+) — Engine ground (−):*** ***(E18) No. 5 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between EGR solenoid valve and main relay connector • Poor contact in coupling connector
2	**CHECK HARNESS BETWEEN ECM AND EGR SOLENOID VALVE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM and EGR solenoid valve connector. ***Connector & terminal*** ***DTC P1492; (B134) No. 18 — (E18) No. 6:*** ***DTC P1494; (B134) No. 17 — (E18) No. 1:*** ***DTC P1496; (B134) No. 16 — (E18) No. 4:*** ***DTC P1498; (B134) No. 15 — (E18) No. 3:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and EGR solenoid valve connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN ECM AND EGR SOLENOID VALVE CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance between ECM connector and chassis ground. ***Connector & terminal*** ***DTC P1492; (B134) No. 18 — Chassis ground:*** ***DTC P1494; (B134) No. 17 — Chassis ground:*** ***DTC P1496; (B134) No. 16 — Chassis ground:*** ***DTC P1498; (B134) No. 15 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair ground short circuit in harness between ECM and EGR solenoid valve connector.
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector and EGR solenoid valve connector.	Is there poor contact in ECM connector or EGR solenoid valve connector?	Repair poor contact in ECM connector or EGR solenoid valve connector.	Replace the EGR solenoid valve. <Ref. to FU(H4SO)-35, Idle Air Control Solenoid Valve.>

CF:DTC P1499 — EGR SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance.
  - Engine breathing

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

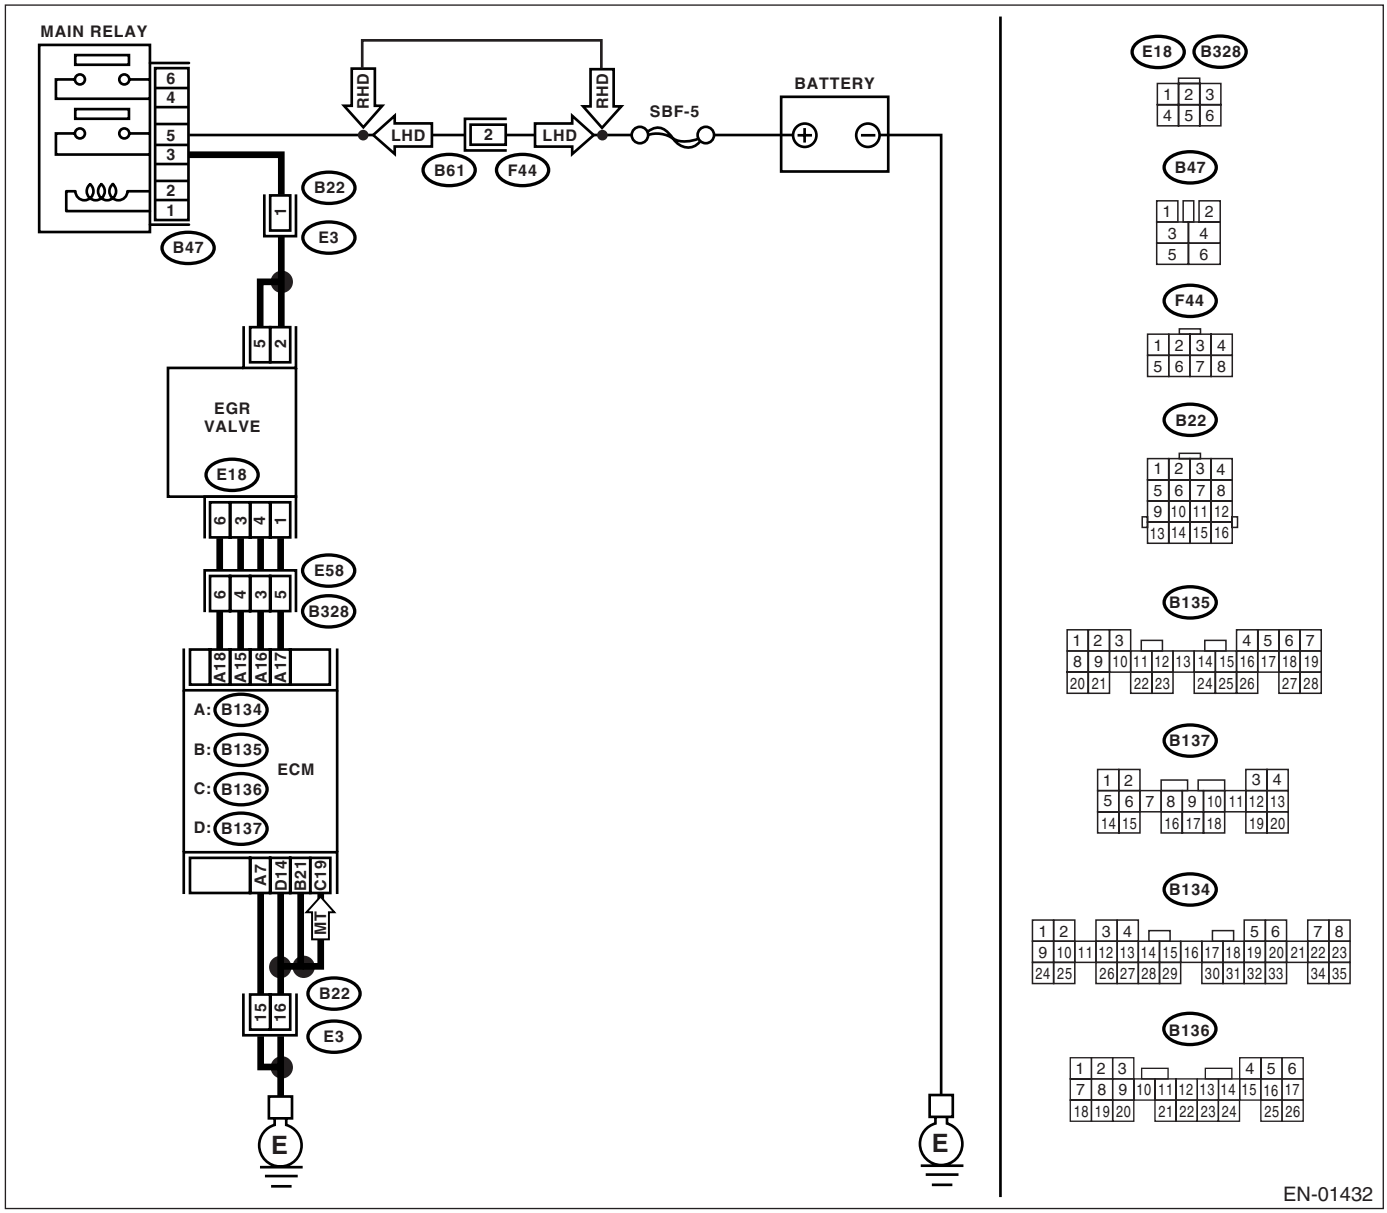

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check the DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK GROUND CIRCUIT FOR ECM.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 7 — Chassis ground:*** ***(B137) No. 14 — Chassis ground:*** ***(B135) No. 21 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM connector and engine ground terminal • Poor contact in ECM connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN ECM AND EGR SOLENOID VALVE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from EGR solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***DTC P1493; (B134) No. 18 (+) — Chassis ground (–):*** ***DTC P1495; (B134) No. 17 (+) — Chassis ground (–):*** ***DTC P1497; (B134) No. 16 (+) — Chassis ground (–):*** ***DTC P1499; (B134) No. 15 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and EGR solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

CG:DTC P1510 — ISC SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (LOW INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1516. <Ref. to EN(H4SO)-244, DTC P1516 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CH:DTC P1511 — ISC SOLENOID VALVE SIGNAL #1 CIRCUIT MALFUNCTION (HIGH INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1517. <Ref. to EN(H4SO)-246, DTC P1517 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CI: DTC P1512 — ISC SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (LOW INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1516. <Ref. to EN(H4SO)-244, DTC P1516 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CJ:DTC P1513 — ISC SOLENOID VALVE SIGNAL #2 CIRCUIT MALFUNCTION (HIGH INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1517. <Ref. to EN(H4SO)-246, DTC P1517 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CK:DTC P1514 — ISC SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (LOW INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1516. <Ref. to EN(H4SO)-244, DTC P1516 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CL:DTC P1515 — ISC SOLENOID VALVE SIGNAL #3 CIRCUIT MALFUNCTION (HIGH INPUT) —

NOTE:
For the diagnostic procedure, refer to DTC P1517. <Ref. to EN(H4SO)-246, DTC P1517 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CM:DTC P1516 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (LOW INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Engine breathing

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

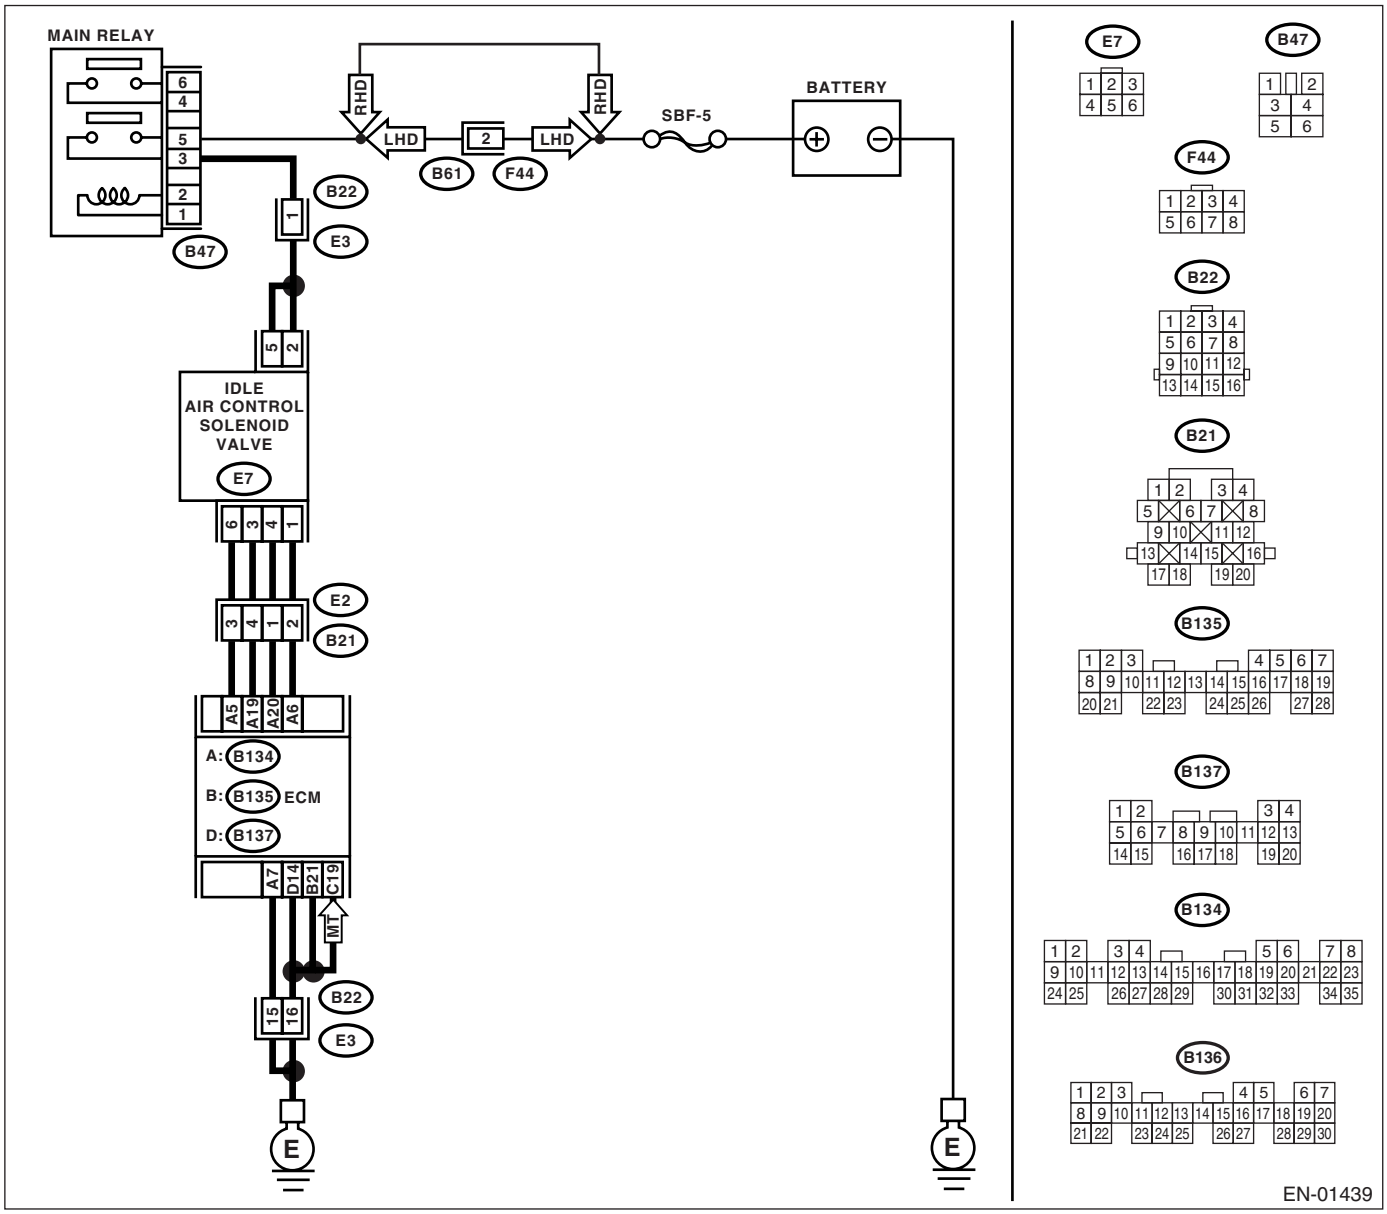

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY TO IDLE AIR CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from idle air control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between idle air control solenoid valve connector and engine ground. ***Connector & terminal*** ***(E7) No. 2 (+) — Engine ground (−):*** ***(E7) No. 5 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between idle air control solenoid valve and main relay connector • Poor contact in coupling connector
2	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM and idle air control solenoid valve connector. ***Connector & terminal*** ***DTC P1510; (B134) No. 20 — (E7) No. 4:*** ***DTC P1512; (B134) No. 6 — (E7) No. 1:*** ***DTC P1514; (B134) No. 5 — (E7) No. 6:*** ***DTC P1516; (B134) No. 19 — (E7) No. 3:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and idle air control solenoid valve connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance between ECM connector and chassis ground. ***Connector & terminal*** ***DTC P1510; (B134) No. 20 — Chassis ground:*** ***DTC P1512; (B134) No. 6 — Chassis ground:*** ***DTC P1514; (B134) No. 5 — Chassis ground:*** ***DTC P1516; (B134) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair ground short circuit in harness between ECM and idle air control solenoid valve connector.
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector and idle air control solenoid valve connector.	Is there poor contact in ECM connector or idle air control solenoid valve connector?	Repair poor contact in ECM connector or idle air control solenoid valve connector.	Replace the idle air control solenoid valve. <Ref. to FU(H4SO)-35, Idle Air Control Solenoid Valve.>

CN:DTC P1517 — ISC SOLENOID VALVE SIGNAL #4 CIRCUIT MALFUNCTION (HIGH INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Engine breathing

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

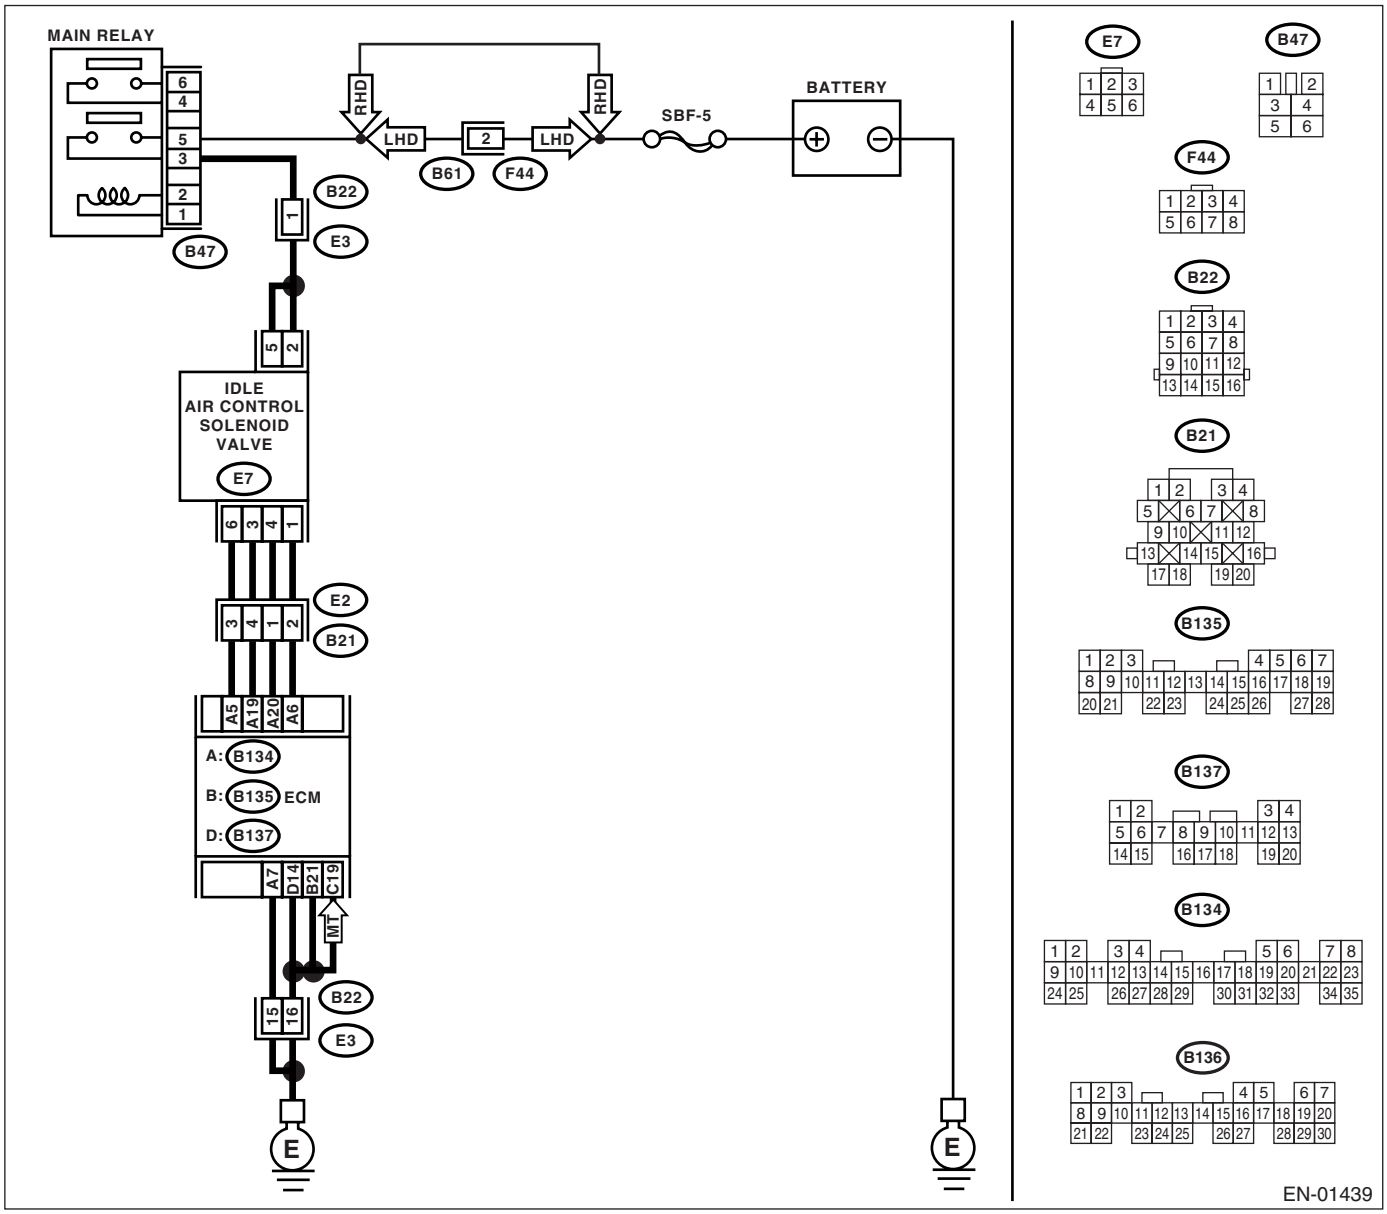

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Check the DTC using the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK GROUND CIRCUIT FOR ECM.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 7 — Chassis ground:*** ***(B137) No. 14 — Chassis ground:*** ***(B135) No. 21 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM connector and engine ground terminal • Poor contact in ECM connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from idle air control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***DTC P1511; (B134) No. 20 (+) — Chassis ground (–):*** ***DTC P1513; (B134) No. 6 (+) — Chassis ground (–):*** ***DTC P1515; (B134) No. 5 (+) — Chassis ground (–):*** ***DTC P1517; (B134) No. 19 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>

CO:DTC P1518 — STARTER SWITCH CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

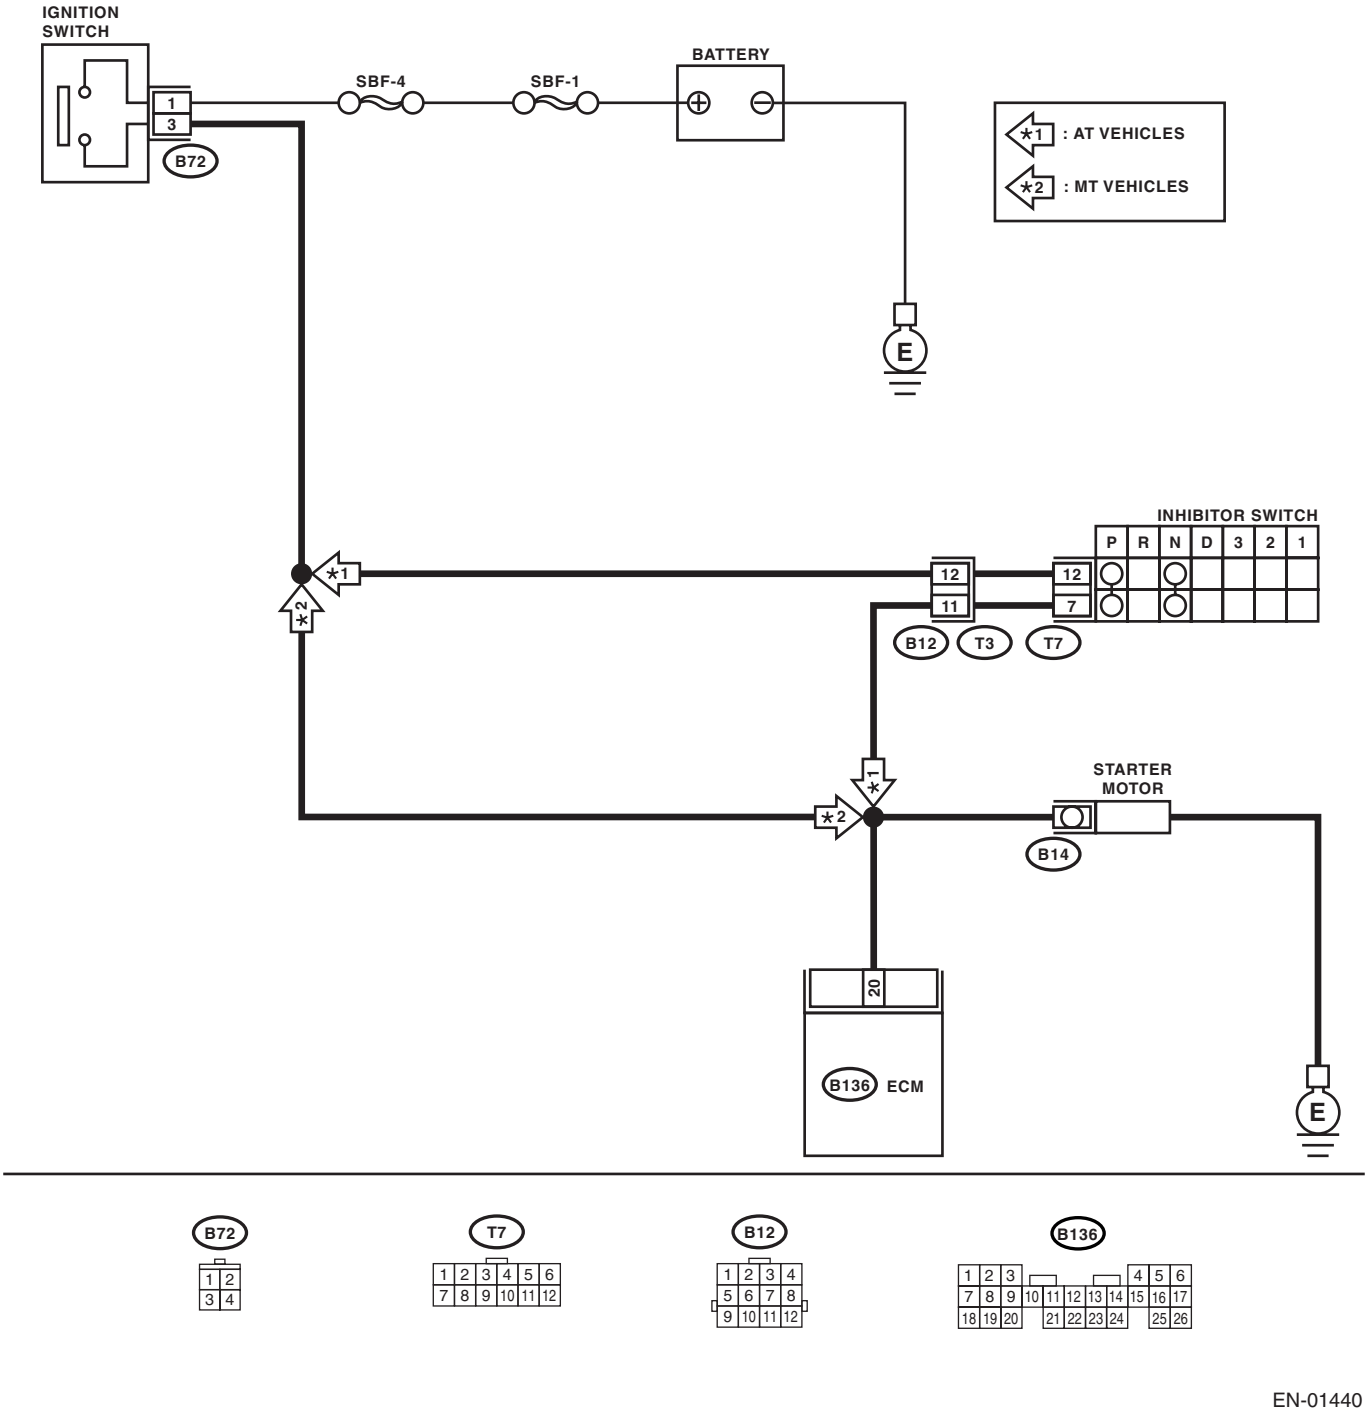

EN-01440

	Step	Check	Yes	No
1	**CHECK OPERATION OF STARTER MOTOR.** Place the inhibitor switch in the “P” or “N” range. (AT model) Depress the clutch pedal. (MT model)	Does the starter motor operate when ignition switch is turned to “ST”?	Repair harness and connector. NOTE: In this case, repair the following: • Open or ground short circuit in harness between ECM and starter motor connector. • Poor contact in ECM connector.	Check starter motor circuit. <Ref. to EN(H4SO)-59, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

CP:DTC P1560 — BACK-UP VOLTAGE CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

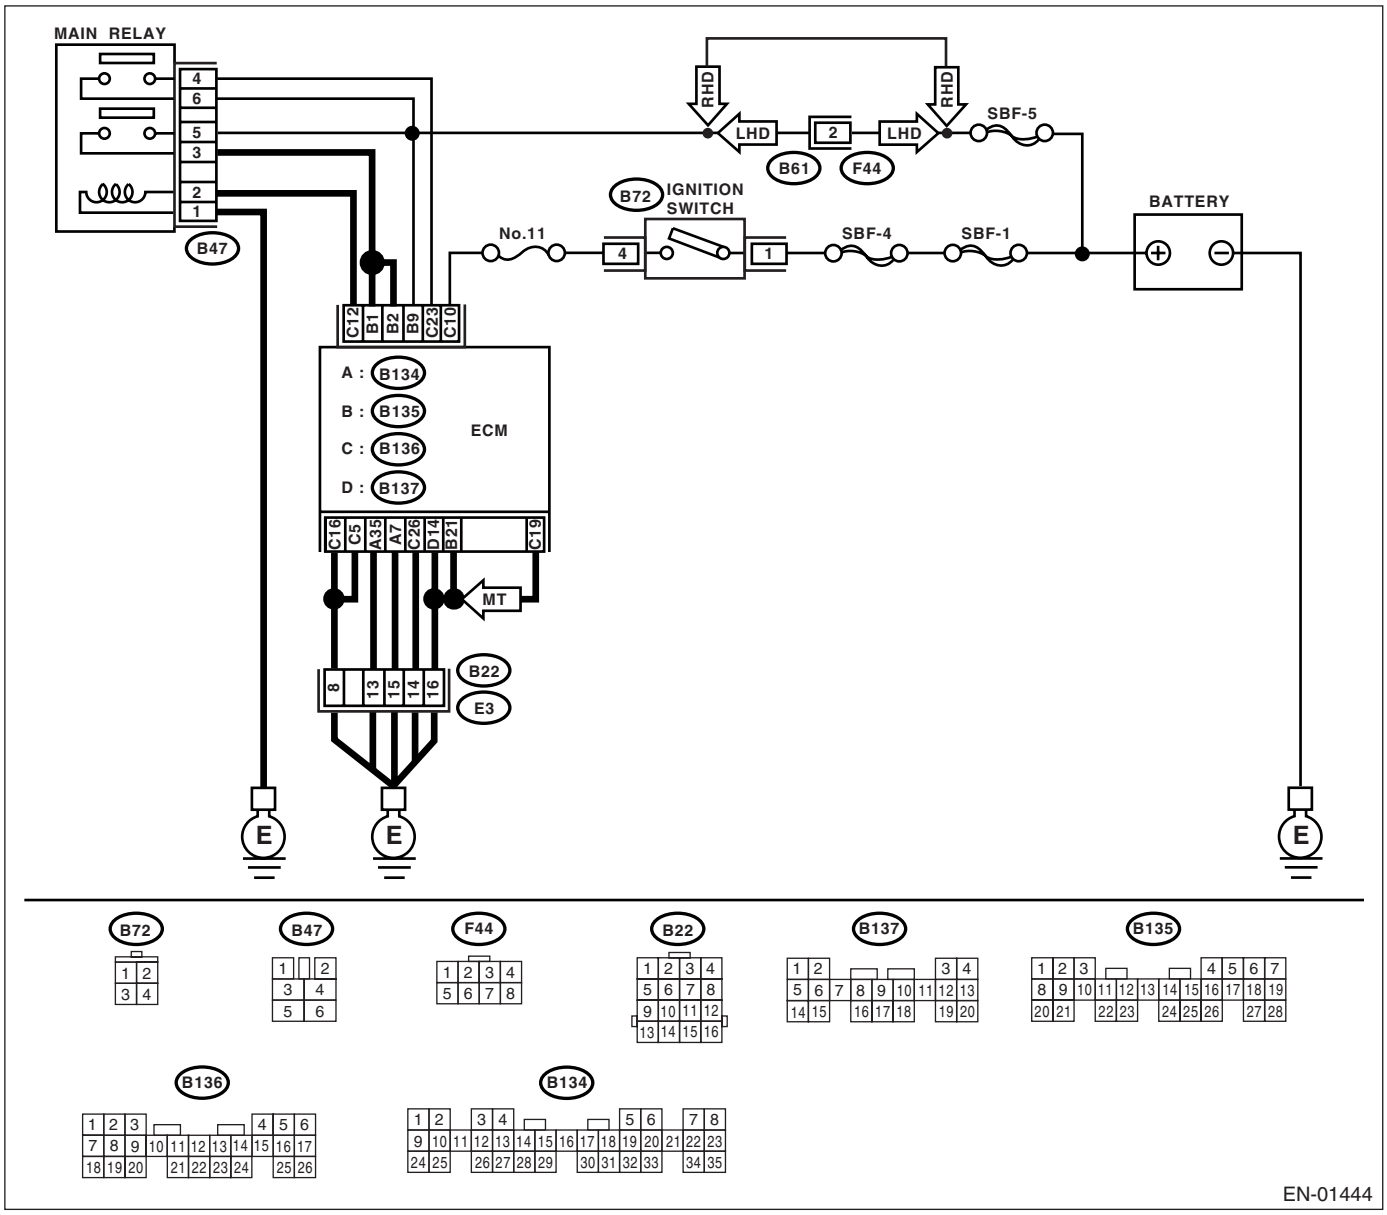

Step		Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 9 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair poor contact in ECM connector.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN ECM AND MAIN FUSE BOX CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 9 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair ground short circuit in harness between ECM connector and battery terminal.	Go to step **3.**
3	**CHECK FUSE SBF-5.**	Is the fuse blown out?	Replace the fuse.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and battery • Poor contact in ECM connector • Poor contact in battery terminal

CQ:DTC P1698 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

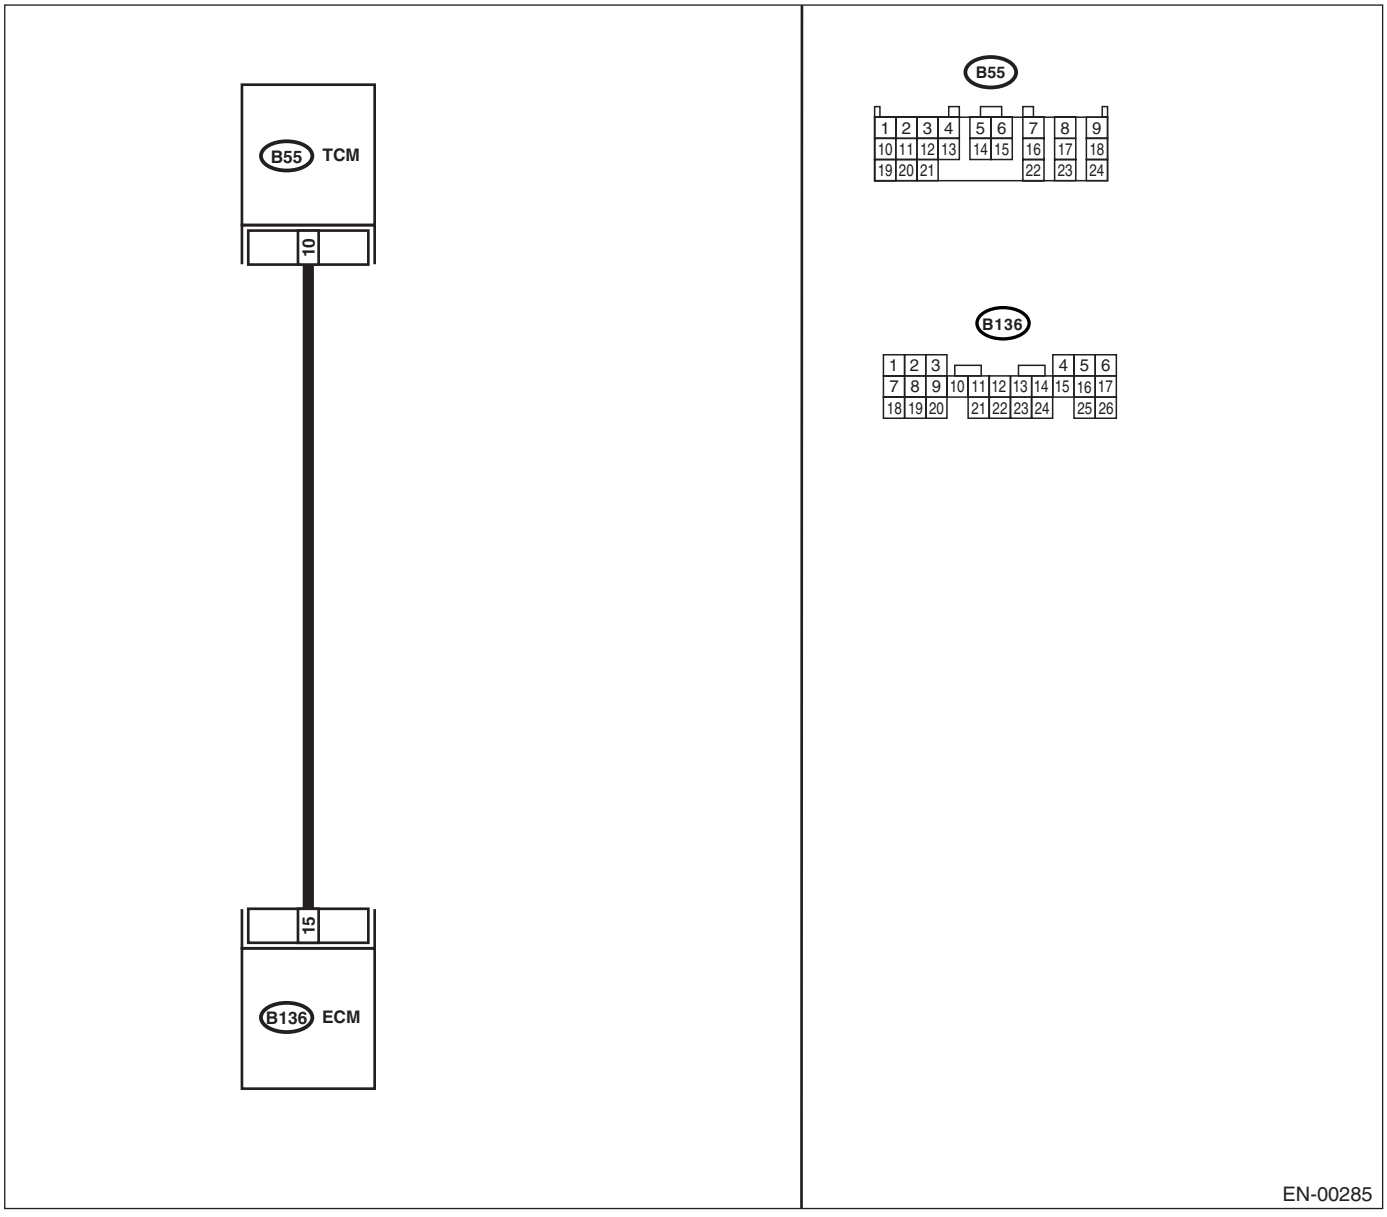

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start the engine, and warm-up the engine. 2)Turn the ignition switch to OFF. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 15 (+) — Chassis ground (−):***	Is the voltage more than 3 V?	Repair poor contact in ECM connector.	Go to step **2.**
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 15 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair ground short circuit in harness between ECM and TCM connector.
3	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and TCM connector. ***Connector & terminal*** ***(B136) No. 15 — (B55) No. 10:***	Is the resistance less than 1 Ω?	Repair poor contact in ECM or TCM connector.	Repair open circuit in harness between ECM and TCM connector.

CR:DTC P1699 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

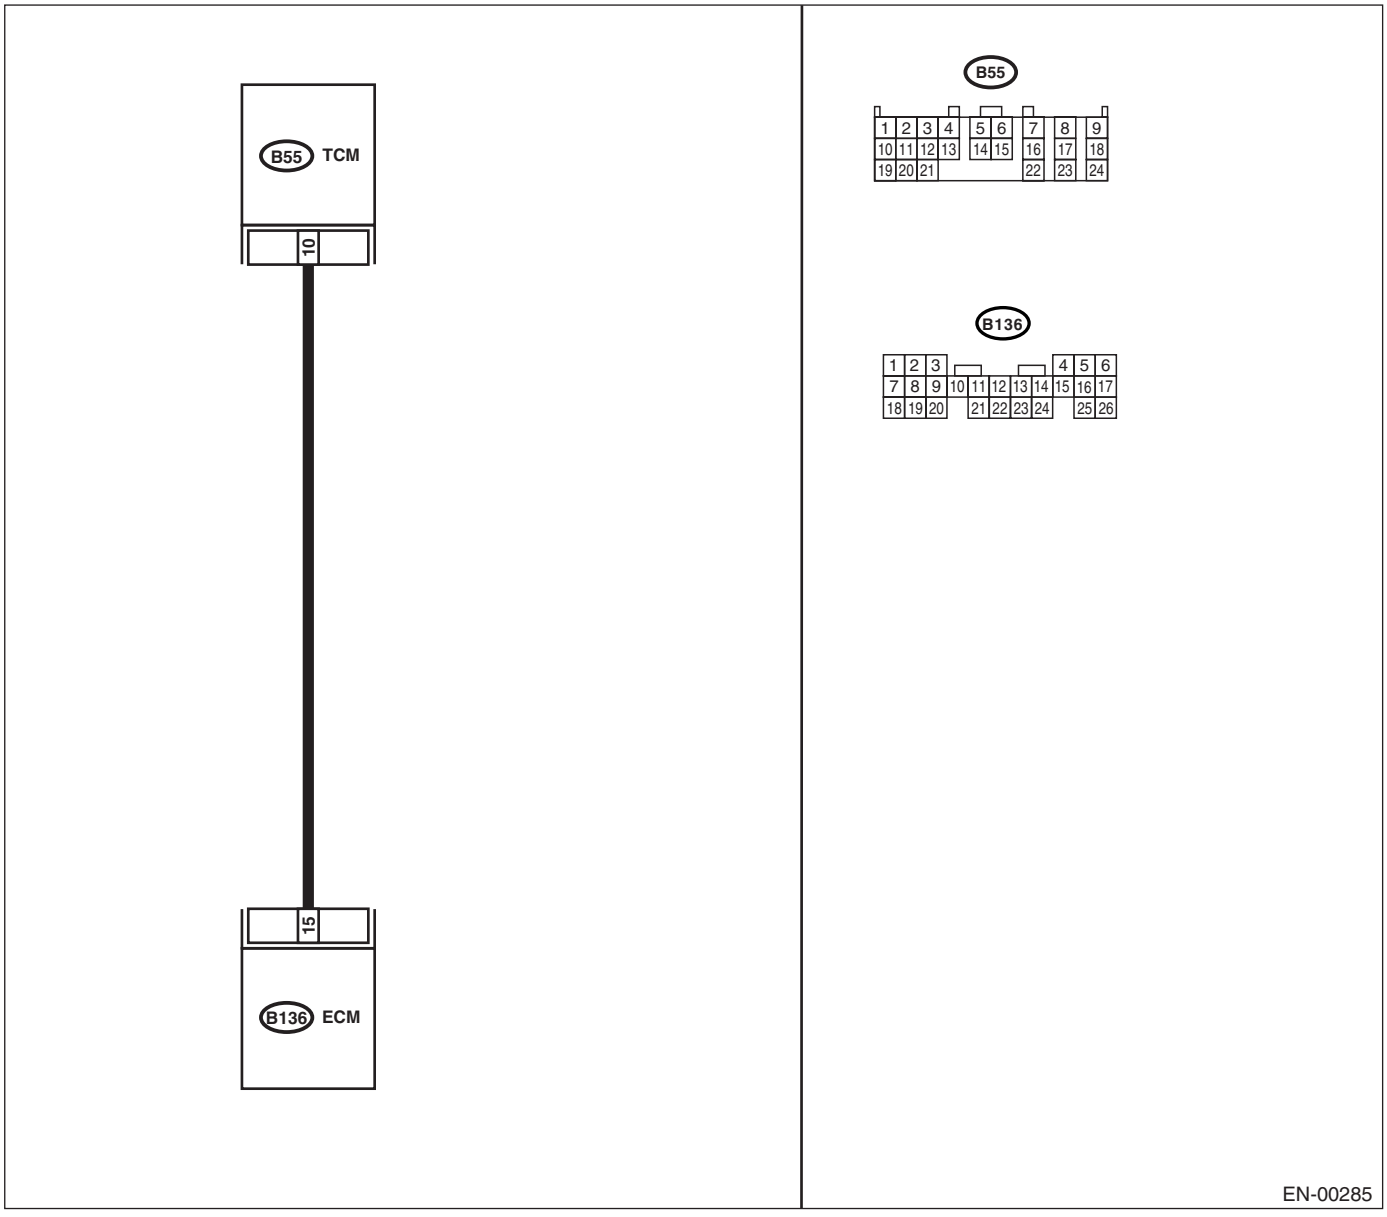

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start the engine, and warm-up the engine. 2)Turn the ignition switch to OFF. 3)Disconnect the connector from TCM. 4)Turn the ignition switch to ON. 5)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 15 (+) — Chassis ground (−):***	Is the voltage less than 3 V?	Go to step **2.**	Repair battery short circuit in harness between ECM and TCM connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 15 (+) — Chassis ground (−):***	Is the voltage more than 10 V by shaking the harness and connector of ECM?	Repair battery short circuit in harness between ECM and TCM connector. After repair, replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>	Contact with SUBARU distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

CS:DTC P1711 — ENGINE TORQUE CONTROL SIGNAL 1 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Excessive shift shock

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

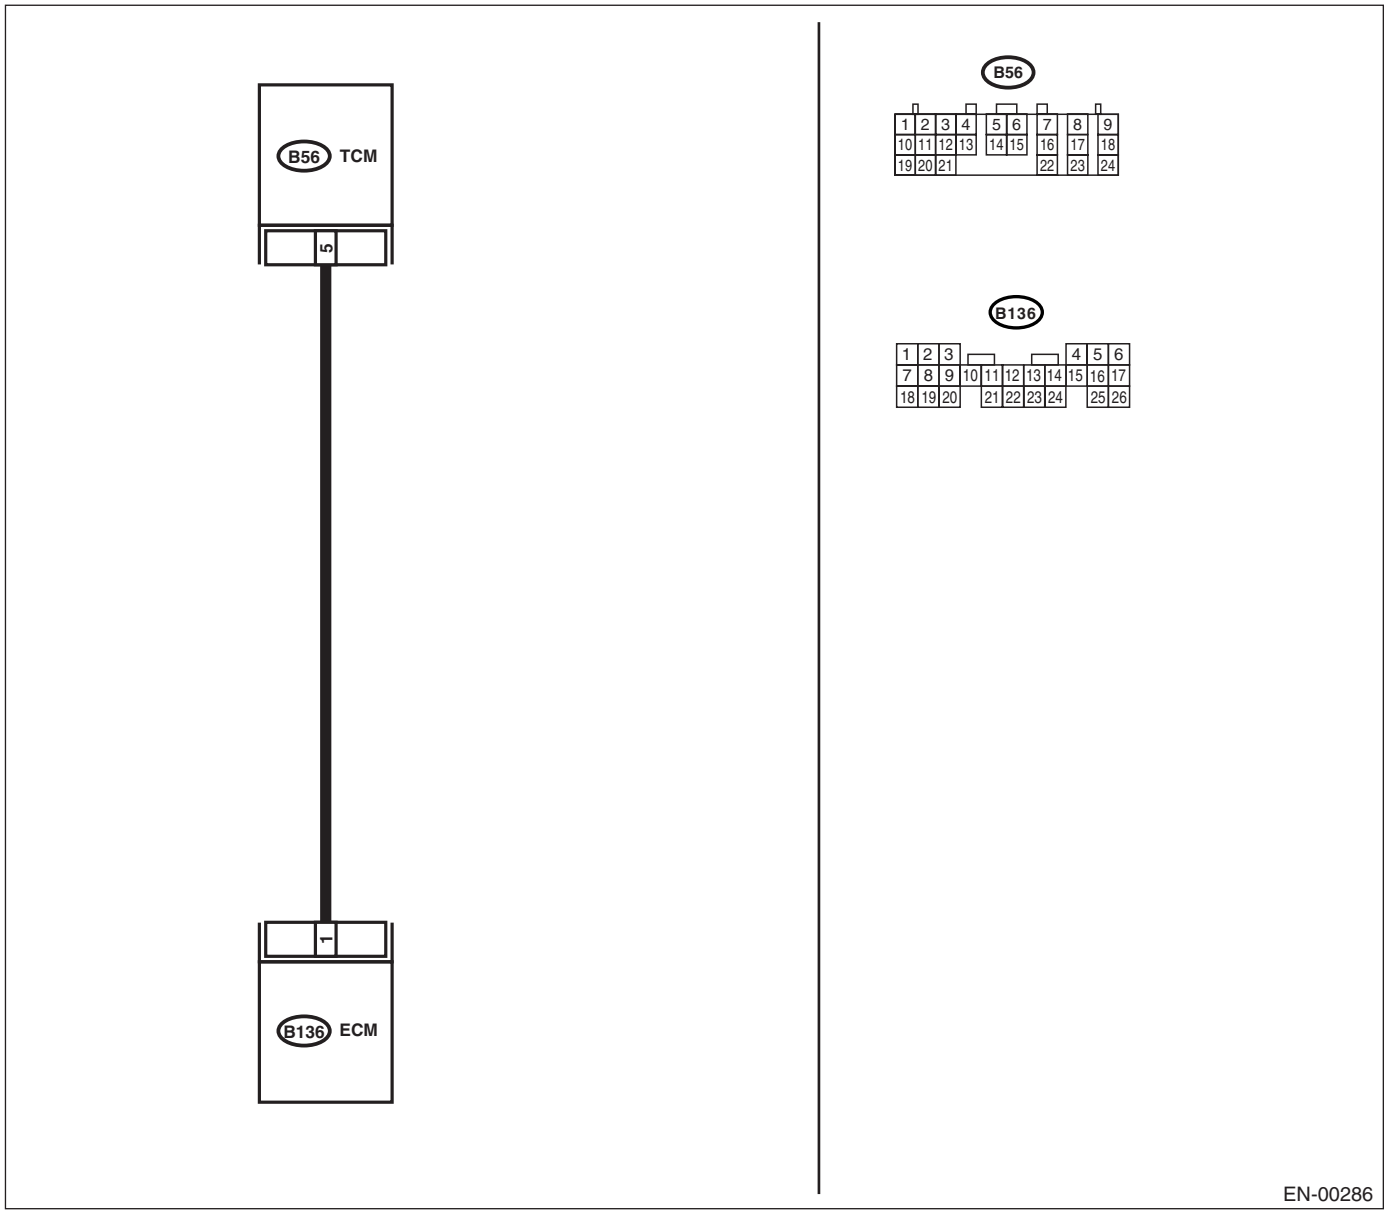

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and TCM connector.	Go to step **3.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between ECM and TCM connector. ***Connector & terminal*** ***(B136) No. 1 — (B56) No. 5:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair open circuit in harness between ECM and TCM connector.
5	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair ground short circuit in harness between ECM and TCM connector.
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

CT:DTC P1712 — ENGINE TORQUE CONTROL SIGNAL 2 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Excessive shift shock

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4SO)-46, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4SO)-39, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

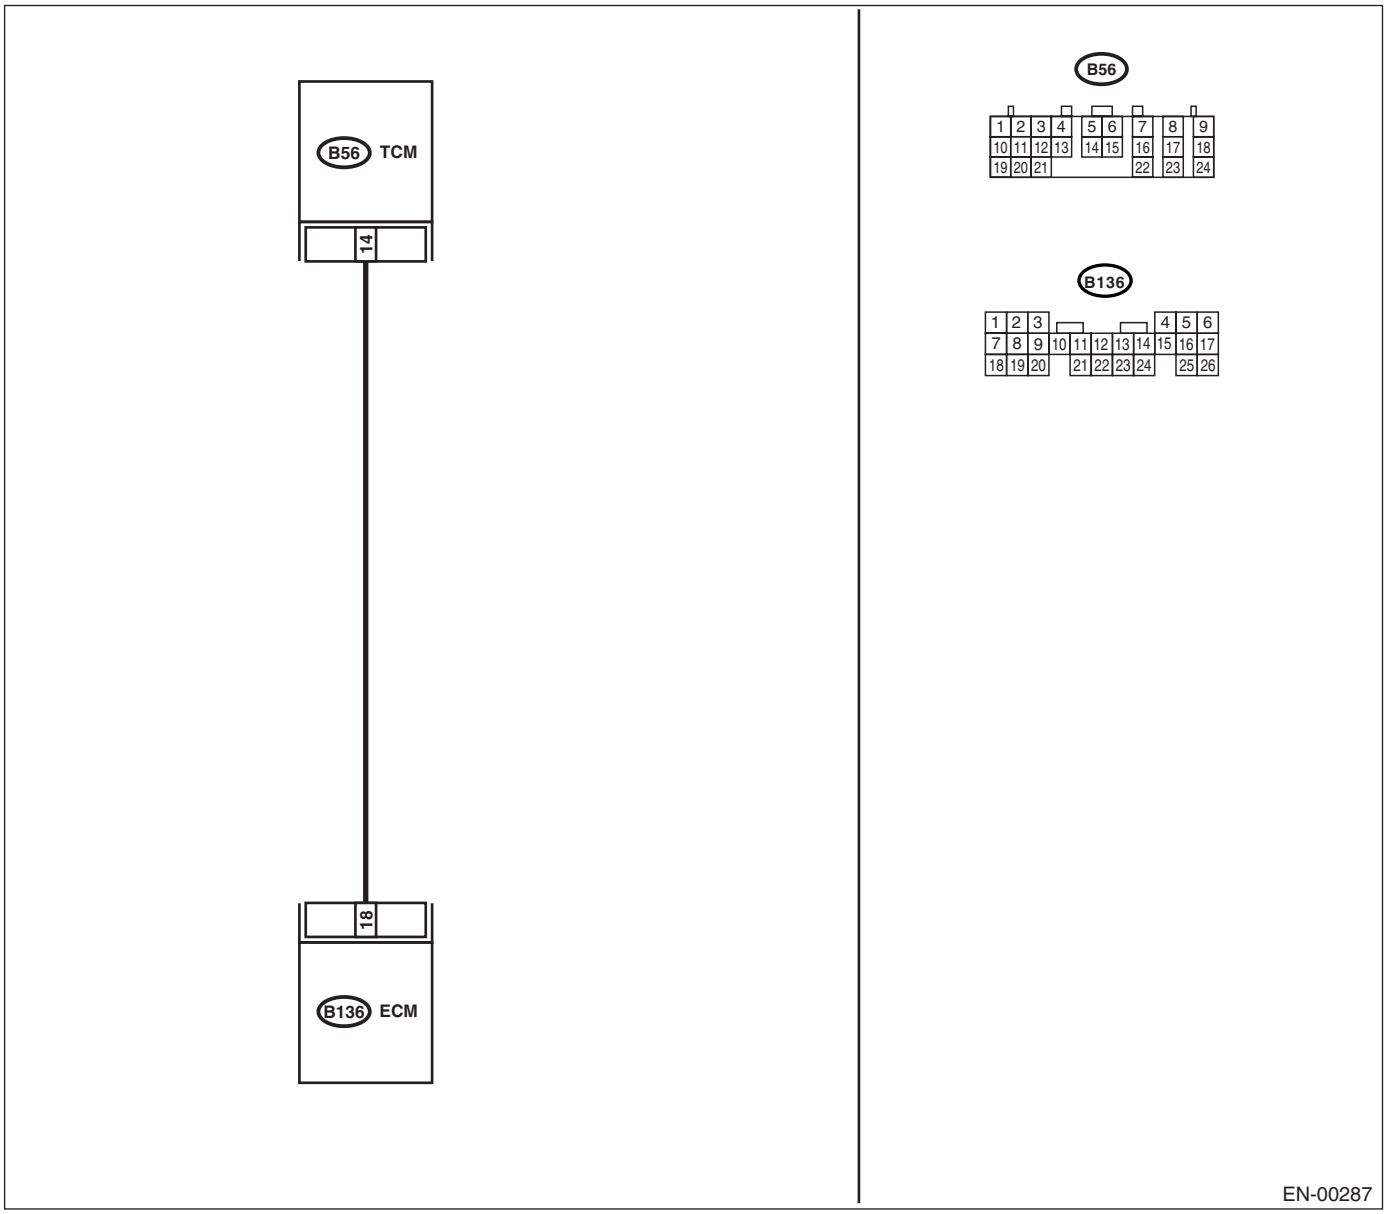

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 18 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 18 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and TCM connector.	Go to step **3.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between ECM and TCM connector. ***Connector & terminal*** ***(B136) No. 18 — (B56) No. 14:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair open circuit in harness between ECM and TCM connector.
5	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 18 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair ground short circuit in harness between ECM and TCM connector.
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

20.General Diagnostic Table

A: INSPECTION

1. ENGINE

NOTE:
Malfunction of parts other than those listed is also possible. <Ref. to ME(H4SO)-92, Engine Trouble in General.>

Symptom	Problem parts
1. Engine stalls during idling.	1) Idle air control solenoid valve 2) Manifold absolute pressure sensor 3) Intake air temperature sensor 4) Ignition parts (*1) 5) Engine coolant temperature sensor (*2) 6) Crankshaft position sensor (*3) 7) Camshaft position sensor (*3) 8) Fuel injection parts (*4)
2. Rough idling	1) Idle air control solenoid valve 2) Manifold absolute pressure sensor 3) Intake air temperature sensor 4) Engine coolant temperature sensor (*2) 5) Ignition parts (*1) 6) Air intake system (*5) 7) Fuel injection parts (*4) 8) Throttle position sensor 9) Crankshaft position sensor (*3) 10) Camshaft position sensor (*3) 11) Oxygen sensor 12) Fuel pump and fuel pump relay
3. Engine does not return to idle.	1) Idle air control solenoid valve 2) Engine coolant temperature sensor 3) Accelerator cable (*6) 4) Throttle position sensor 5) Manifold absolute pressure sensor 6) Intake air temperature sensor
4. Poor acceleration	1) Manifold absolute pressure sensor 2) Intake air temperature sensor 3) Throttle position sensor 4) Fuel injection parts (*4) 5) Fuel pump and fuel pump relay 6) Engine coolant temperature sensor (*2) 7) Crankshaft position sensor (*3) 8) Camshaft position sensor (*3) 9) A/C switch and A/C cut relay 10) Engine torque control signal circuit 11) Ignition parts (*1)
5. Engine stalls or engine sags or hesitates at acceleration.	1) Manifold absolute pressure sensor 2) Intake air temperature sensor 3) Engine coolant temperature sensor (*2) 4) Crankshaft position sensor (*3) 5) Camshaft position sensor (*3) 6) Purge control solenoid valve 7) Fuel injection parts (*4) 8) Throttle position sensor 9) Fuel pump and fuel pump relay

Symptom	Problem parts
6. Surge	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Manifold absolute pressure sensor 4) Engine coolant temperature sensor (*2) 5) Crankshaft position sensor (*3) 6) Camshaft position sensor (*3) 7) Fuel injection parts (*4) 8) Throttle position sensor 9) Fuel pump and fuel pump relay
7. Spark knock	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Manifold absolute pressure sensor 4) Engine coolant temperature sensor 5) Knock sensor 6) Fuel injection parts (*4) 7) Fuel pump and fuel pump relay
8. After burning in exhaust system	1) Intake manifold pressure sensor 2) Intake air temperature sensor 3) Manifold absolute pressure sensor 4) Engine coolant temperature sensor (*2) 5) Fuel injection parts (*4) 6) Fuel pump and fuel pump relay

*1: Check ignition coil & ignitor ASSY and spark plug.
*2: Indicate the symptom occurring only in cold temperatures.
*3: Ensure the secure installation.
*4: Check fuel injector, fuel pressure regulator and fuel filter.
*5: Inspect air leak in air intake system.
*6: Adjust accelerator cable.

2. AUTOMATIC TRANSMISSION

NOTE:
Check general diagnostics table with non-conformity symptom for automatic transmission. <Ref. to 4AT-2, Basic Diagnostic Procedure.>

FUEL INJECTION (FUEL SYSTEMS)

FU(H4SOw/oOBD)

		Page
1.	General Description	2
2.	Throttle Body	15
3.	Intake Manifold	16
4.	Engine Coolant Temperature Sensor	28
5.	Crankshaft Position Sensor	29
6.	Camshaft Position Sensor	30
7.	Knock Sensor	31
8.	Throttle Position Sensor	32
9.	Intake Air Temperature and Manifold Absolute Pressure Sensor	34
10.	Idle Air Control Solenoid Valve	35
11.	Fuel Injector	36
12.	Oxygen Sensor	41
13.	Engine Control Module (ECM)	43
14.	Main Relay	44
15.	Fuel Pump Relay	45
16.	Fuel	46
17.	Fuel Tank	47
18.	Fuel Filler Pipe	50
19.	Fuel Pump	54
20.	Fuel Level Sensor	57
21.	Fuel Sub Level Sensor	58
22.	Fuel Filter	59
23.	Fuel Cut Valve	60
24.	Fuel Damper Valve	61
25.	Fuel Delivery, Return and Evaporation Lines	62
26.	Fuel System Trouble in General	65

1. General Description

A: SPECIFICATIONS

Model		1.6 L and 2.0 L	2.5 L
Fuel tank	Capacity	50 ℓ (13.2 US gal, 11.0 Imp gal)	60 ℓ (15.9 US gal, 13.2 Imp gal)
	Location	Under rear seat	
Fuel pump	Type	Impeller	
	Shutoff discharge pressure	370 — 677 kPa (3.77 — 6.9 kg/cm^2, 53.6 — 98 psi)	
	Discharge flow	More than 65 ℓ (17.2 US gal, 14.3 Imp gal)/h [12 V at 300 kPa (3.06 kg/cm^2, 43.5 psi)]	
Fuel filter		Cartridge type	

B: COMPONENT

1. INTAKE MANIFOLD

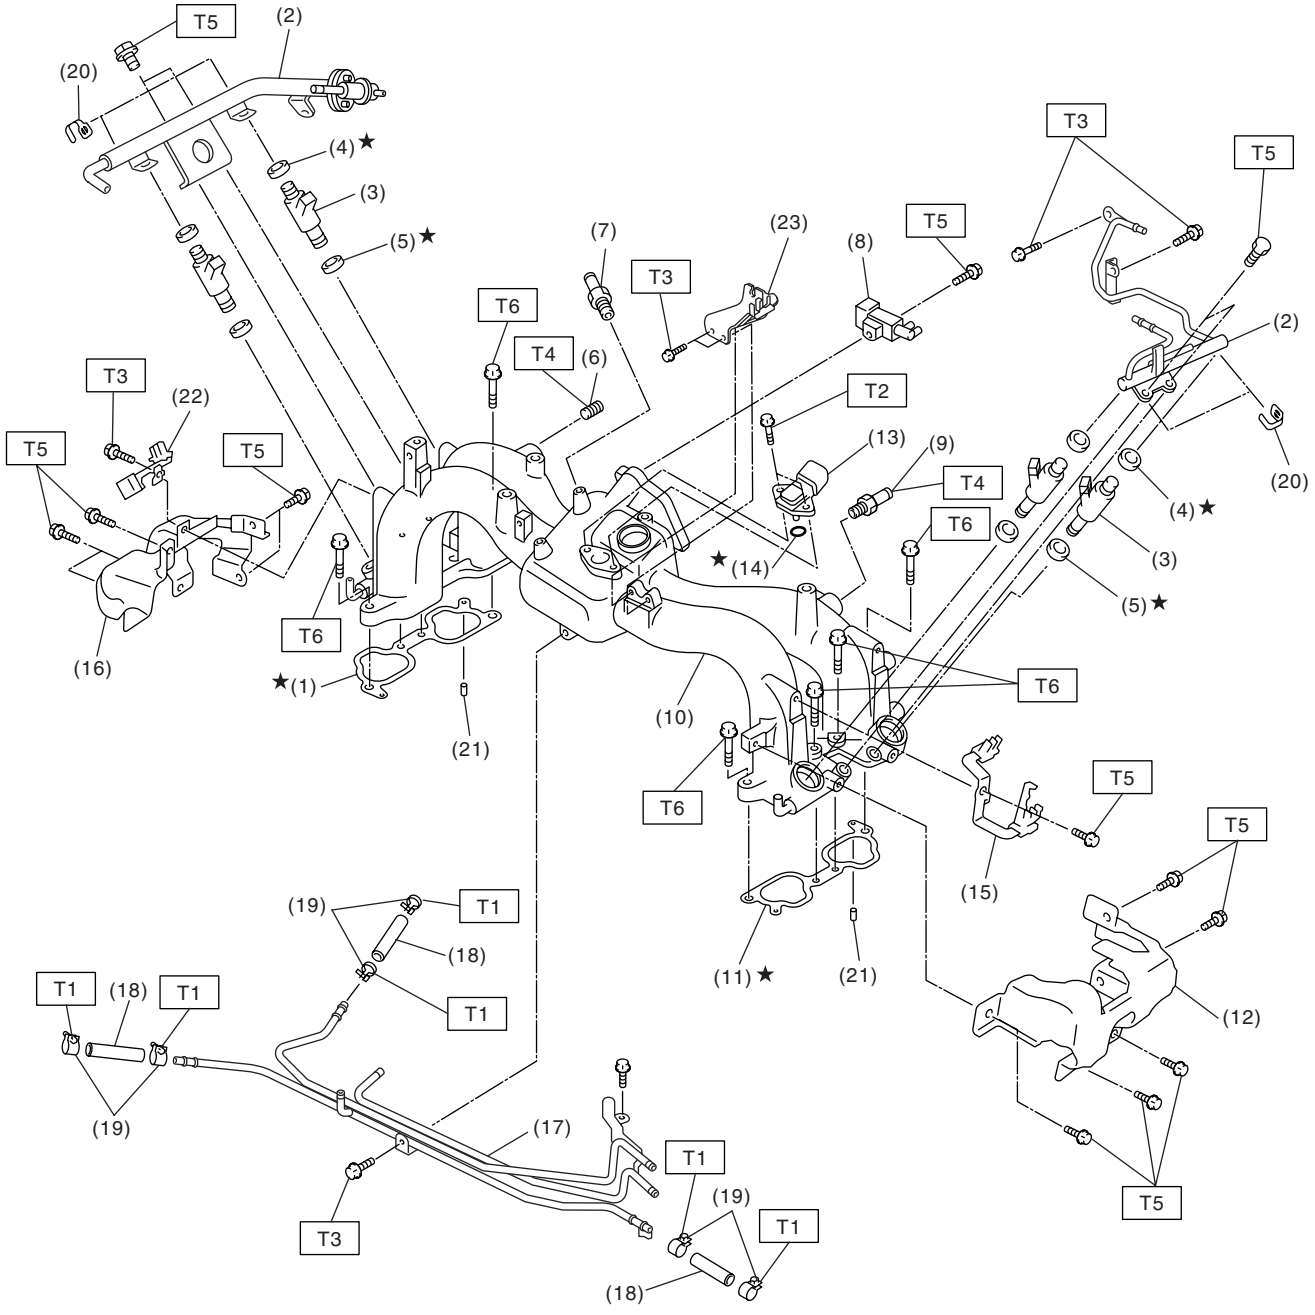

FU-00906

(1) Intake manifold gasket RH
(2) Fuel injector pipe
(3) Fuel injector
(4) O-ring
(5) O-ring
(6) Plug
(7) PCV valve
(8) Purge control solenoid valve
(9) Nipple
(10) Intake manifold
(11) Intake manifold gasket LH
(12) Fuel pipe protector LH
(13) Intake air temperature and manifold absolute pressure sensor
(14) O-ring
(15) Plug cord holder LH
(16) Fuel pipe protector RH
(17) Fuel pipe ASSY
(18) Fuel hose
(19) Clip
(20) Clip
(21) Guide pin
(22) Plug cord holder RH
(23) Accelerator cable bracket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.5 (0.15, 1.1)
T2: 3.4 (0.35, 2.5)
T3: 5.0 (0.51, 3.7)
T4: 17 (1.7, 12.5)
T5: 19 (1.9, 14.0)
T6: 25 (2.5, 18.4)

2. AIR INTAKE SYSTEM

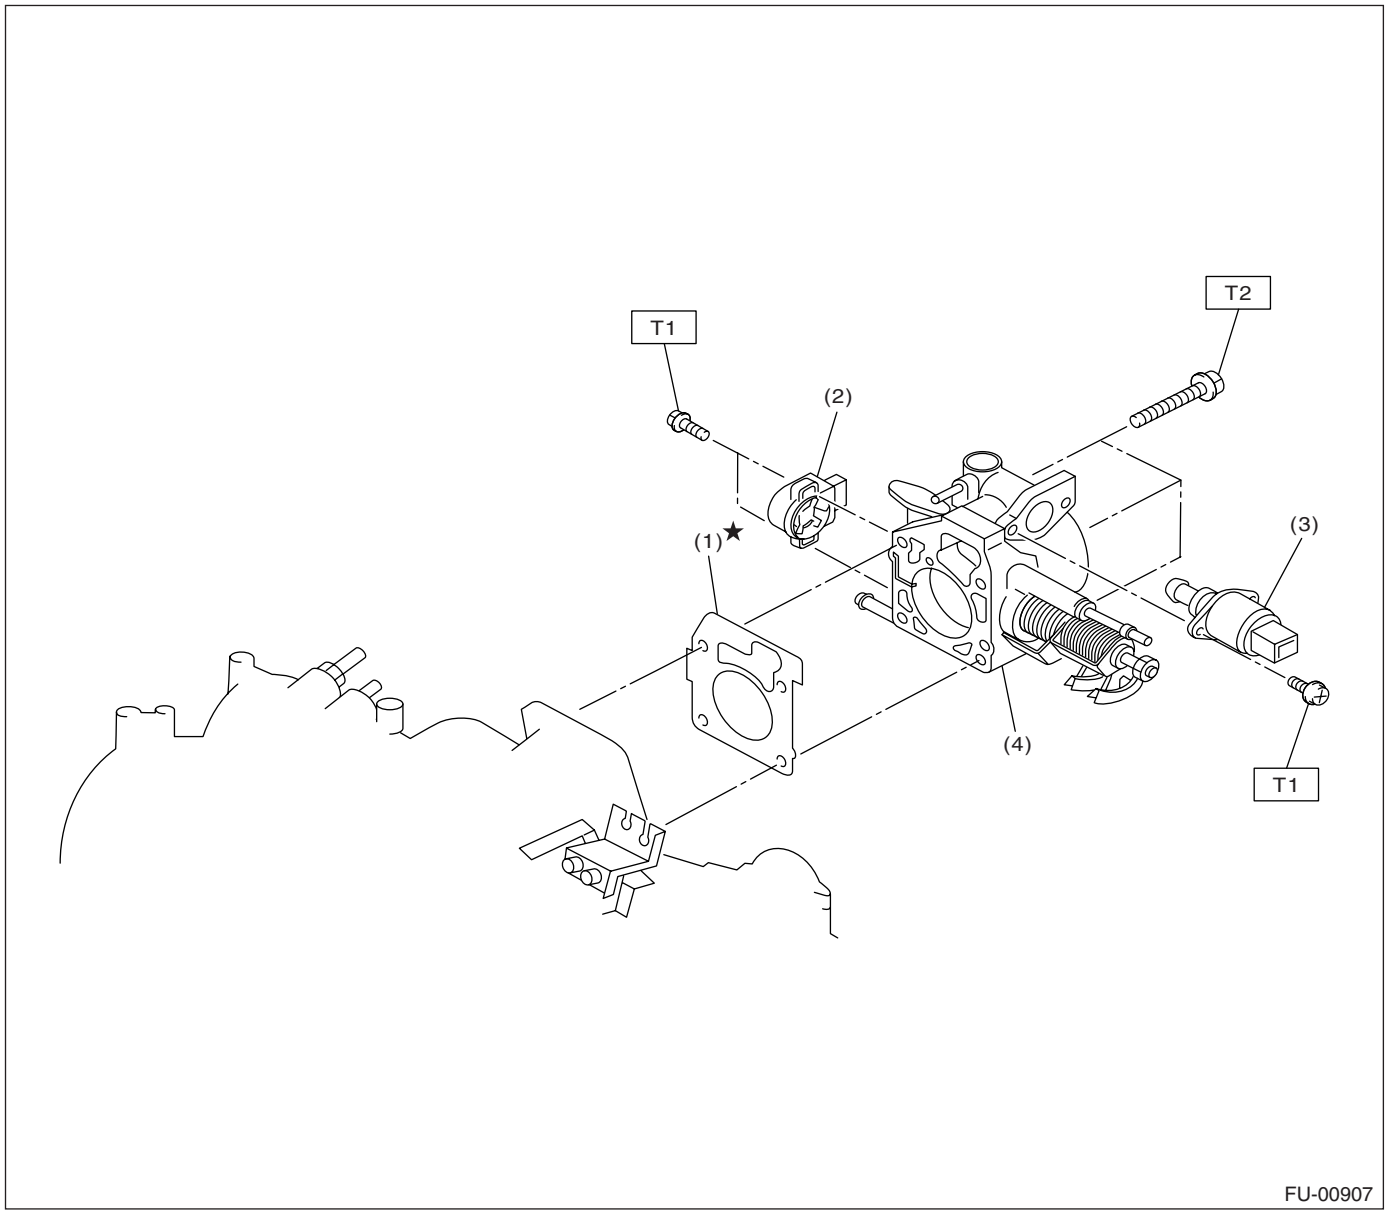

(1) Gasket
(2) Throttle position sensor
(3) Idle air control solenoid valve
(4) Throttle body

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.6 (0.16, 1.2)
T2: 22 (2.2, 16.2)

3. CRANKSHAFT POSITION, CAMSHAFT POSITION AND KNOCK SENSORS

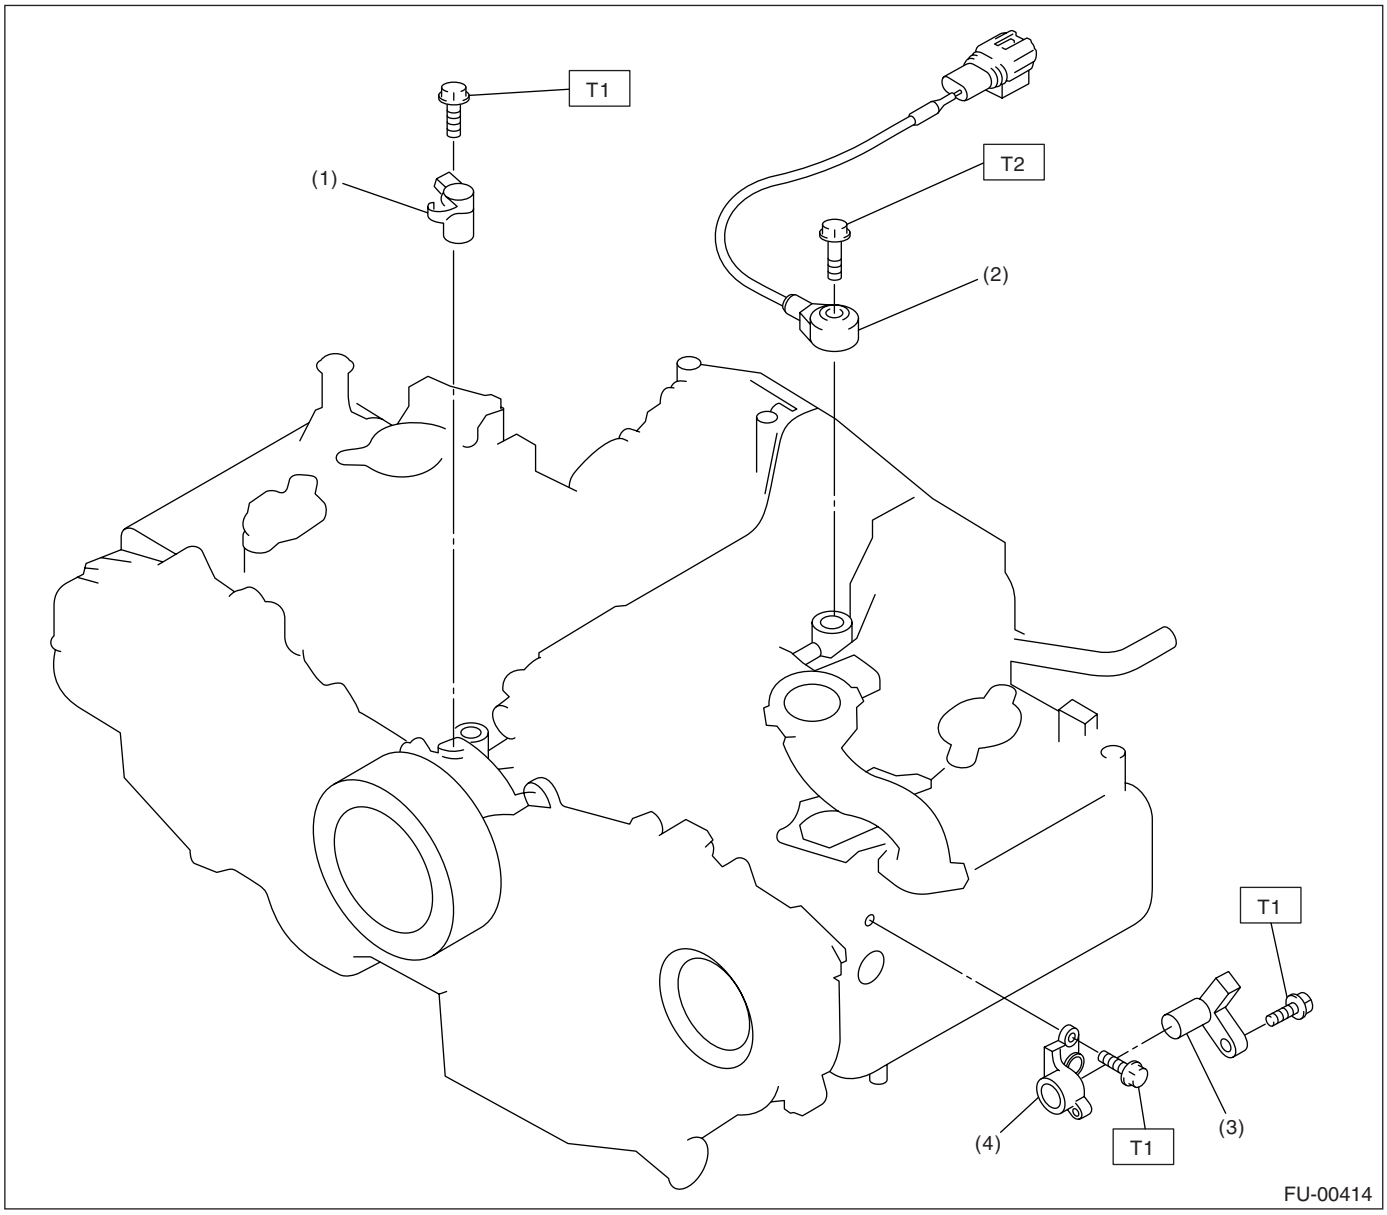

(1) Crankshaft position sensor
(2) Knock sensor
(3) Camshaft position sensor
(4) Camshaft position sensor support

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 24 (2.4, 17.4)

4. FUEL TANK

• 1.6 L and 2.0 L MODEL

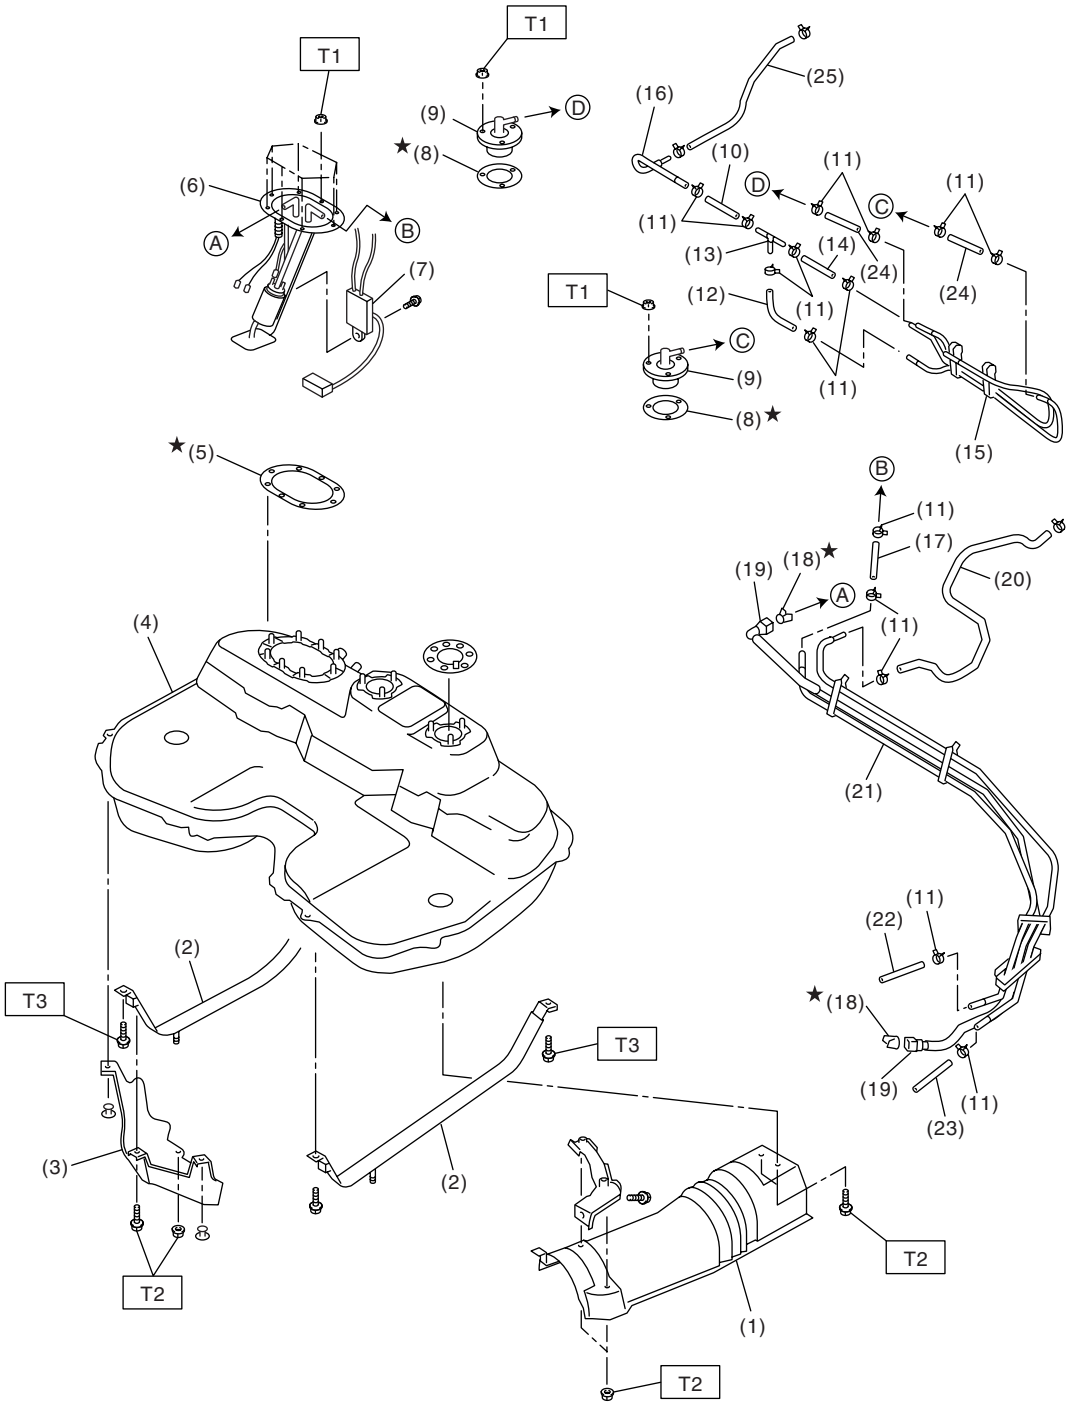

FU-00908

(1) Heat shield cover
(2) Fuel tank band
(3) Protector RH
(4) Fuel tank
(5) Fuel pump gasket
(6) Fuel pump ASSY
(7) Fuel level sensor
(8) Fuel cut valve gasket
(9) Fuel cut valve
(10) Evaporation hose A
(11) Clip
(12) Evaporation hose B
(13) Joint pipe
(14) Evaporation hose C
(15) Evaporation pipe ASSY
(16) Evaporation pipe
(17) Fuel return hose A
(18) Retainer
(19) Quick connector
(20) Evaporation hose D
(21) Fuel pipe ASSY
(22) Fuel return hose B
(23) Evaporation hose E
(24) Evaporation hose F
(25) Evaporation hose G

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 7.4 (0.75, 5.4)
T3: 33 (3.4, 24.3)

• 2.5 L MODEL

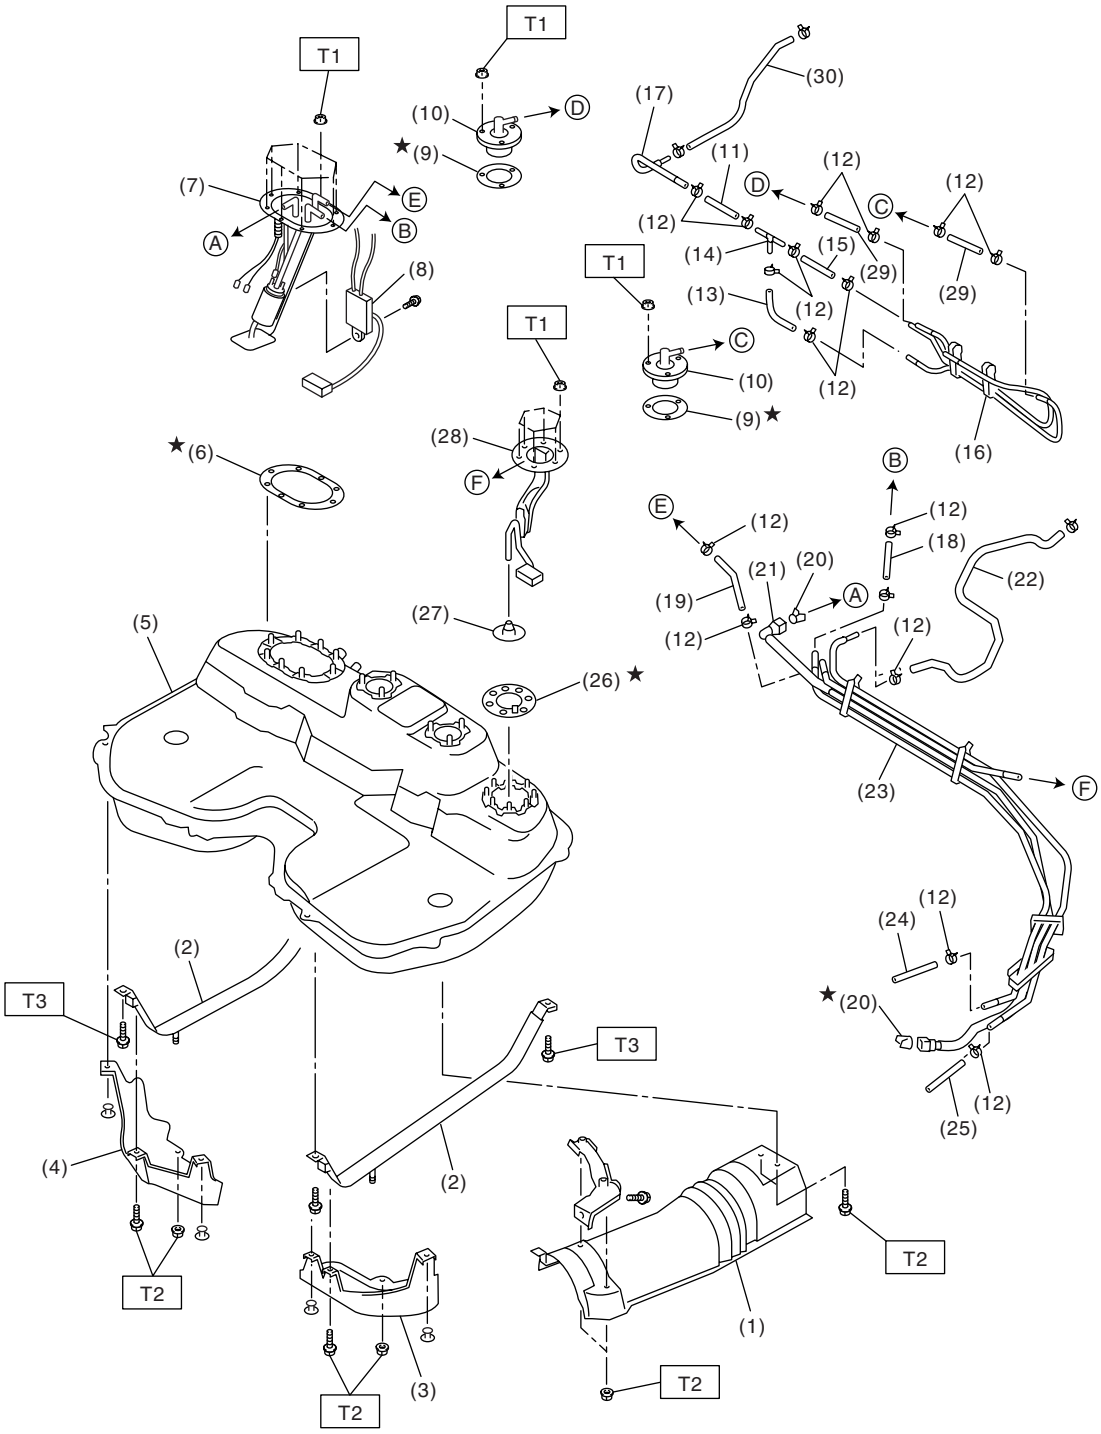

FU-00909

(1) Heat shield cover
(2) Fuel tank band
(3) Protector LH
(4) Protector RH
(5) Fuel tank
(6) Fuel pump gasket
(7) Fuel pump ASSY
(8) Fuel level sensor
(9) Fuel cut valve gasket
(10) Fuel cut valve
(11) Evaporation hose A
(12) Clip
(13) Evaporation hose B
(14) Joint pipe
(15) Evaporation hose C
(16) Evaporation pipe ASSY
(17) Evaporation pipe
(18) Fuel return hose A
(19) Jet pump hose
(20) Retainer
(21) Quick connector
(22) Evaporation hose E
(23) Fuel pipe ASSY
(24) Fuel return hose B
(25) Evaporation hose E
(26) Fuel sub level sensor gasket
(27) Jet pump filter
(28) Fuel sub level sensor
(29) Evaporation hose F
(30) Evaporation hose G

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 7.4 (0.75, 5.4)
T3: 33 (3.4, 24.3)

5. FUEL LINE

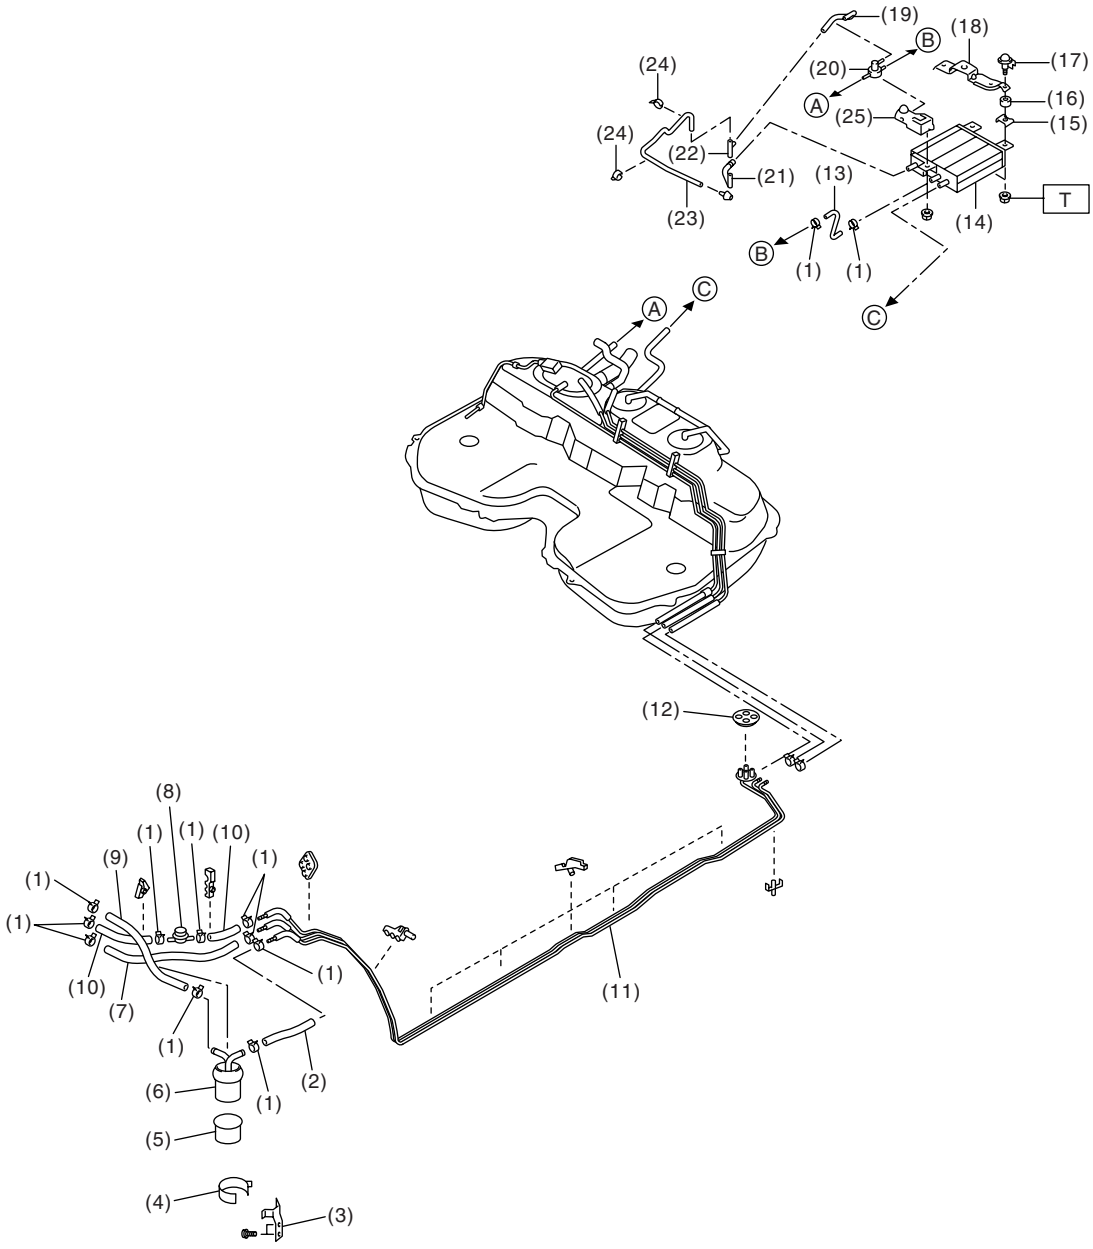

FU-00910

(1) Clip
(2) Fuel delivery hose A
(3) Fuel filter bracket
(4) Fuel filter holder
(5) Fuel filter cup
(6) Fuel filter
(7) Evaporation hose
(8) Fuel damper
(9) Fuel delivery hose B
(10) Fuel return hose
(11) Fuel pipe ASSY
(12) Grommet
(13) Canister hose A
(14) Canister
(15) Canister bracket plate
(16) Cushion
(17) Canister bracket spacer
(18) Rear canister bracket
(19) Two-way valve return hose
(20) Two-way valve
(21) Two-way valve drain hose A
(22) Connector
(23) Two-way valve drain hose B
(24) Clamp
(25) Front canister bracket

Tightening torque: N·m (kgf-m, ft-lb)
T: 23 (2.3, 17.0)

6. FUEL FILLER PIPE

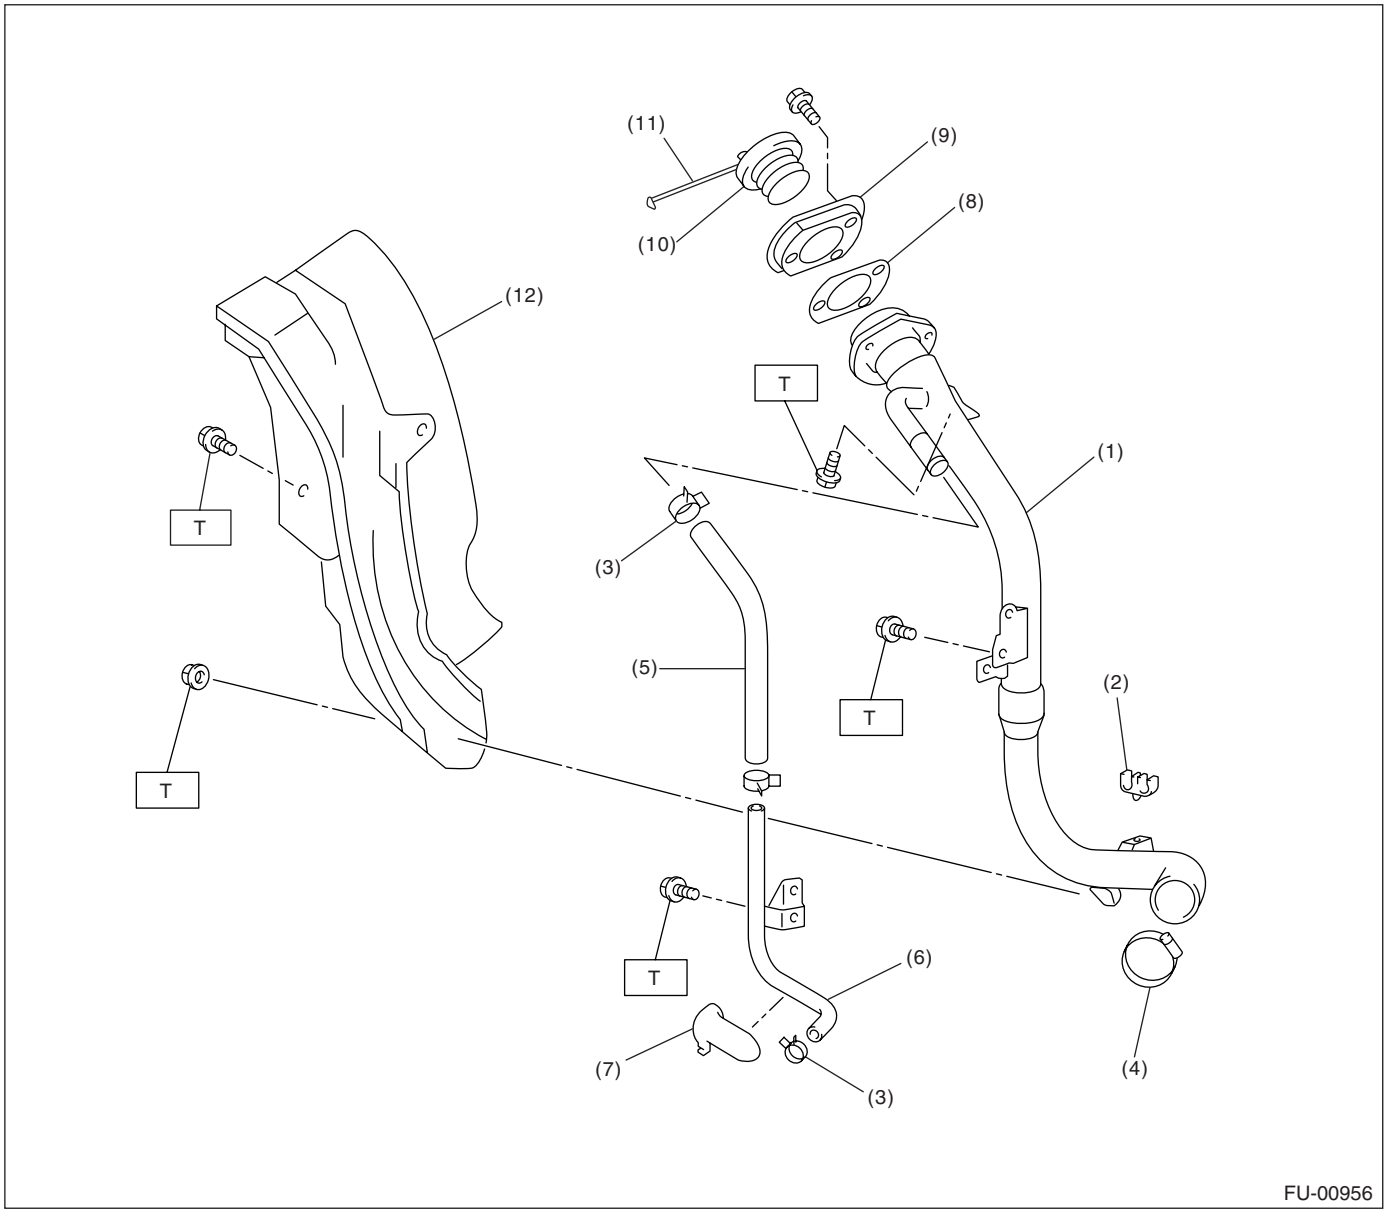

(1) Fuel filler pipe ASSY
(2) Evaporation hose holder
(3) Clip
(4) Clamp
(5) Air vent hose
(6) Air vent pipe
(7) Air vent pipe holder
(8) Filler pipe packing
(9) Filler ring
(10) Filler cap
(11) Filler cap tether
(12) Filler pipe protector

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
• Place “NO FIRE” signs near the working area.
• Be careful not to spill fuel on the floor.

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
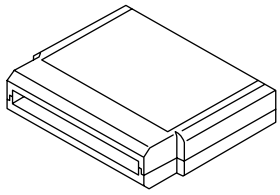 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical system.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. Throttle Body

A: REMOVAL

1) Disconnect the ground cable from battery.

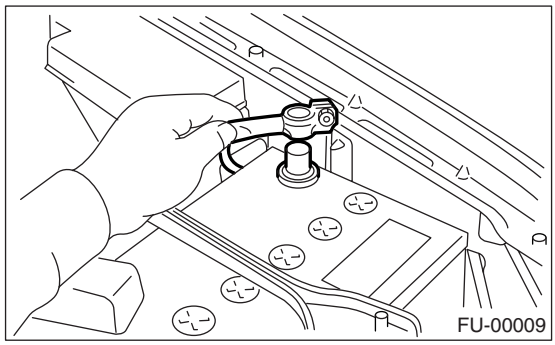

2) Remove the air cleaner case.
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
3) Disconnect the accelerator cable (A).
4) Disconnect the cruise control cable (B). (Model with cruise control)

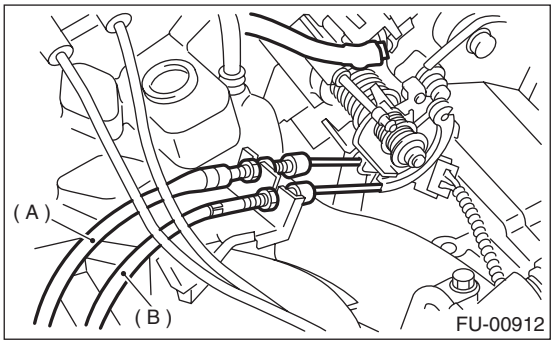

5) Disconnect the connectors from idle air control solenoid valve and throttle position sensor.
6) Disconnect the air by-pass hose from purge control solenoid valve.

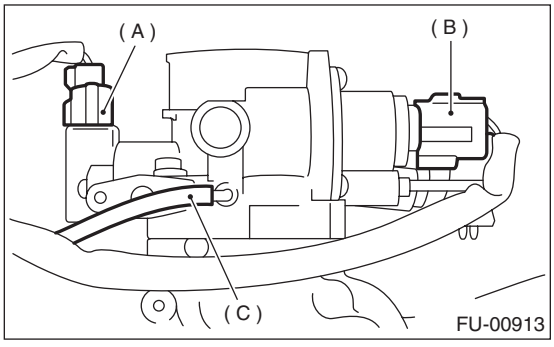

(A) Throttle position sensor
(B) Idle air control solenoid valve
(C) Air by-pass hose from purge control solenoid valve

7) Disconnect the engine coolant hoses from throttle body.

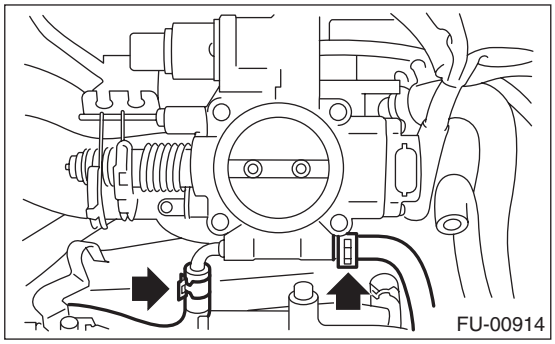

8) Remove the bolts which install the throttle body to intake manifold.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
- Always use a new gasket.
- For tightening torque, refer to “COMPONENT”.

<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

3. Intake Manifold

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

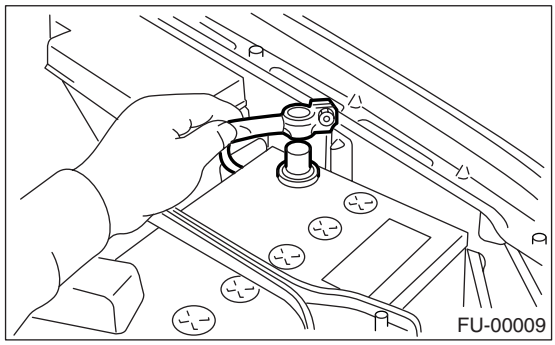

4) Remove the air intake duct and air cleaner assembly. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
5) Disconnect the accelerator cable (A).
6) Disconnect the cruise control cable (B). (Model with cruise control)

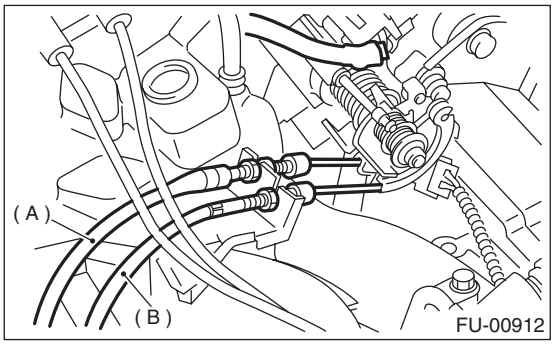

7) Remove the power steering pump and tank from brackets.
(1) Remove the resonator chamber. <Ref. to IN(H4SO)-7, REMOVAL, Resonator Chamber.>
(2) Remove the front side V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
(3) Remove the bolts which hold the power steering pipes onto intake manifold protector.

NOTE:
Do not disconnect the power steering hose.

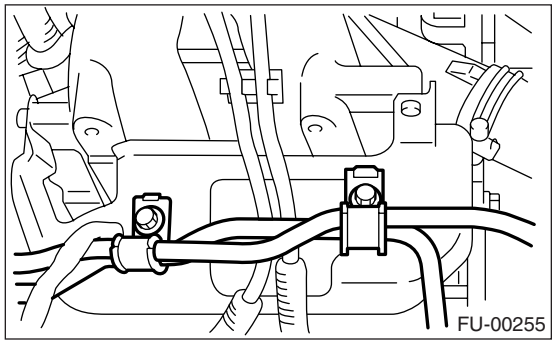

(4) Remove the bolts which install the power steering pump bracket.

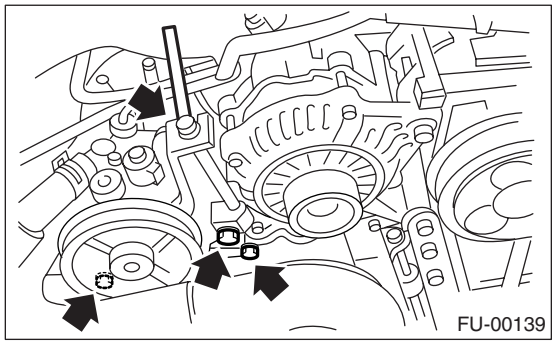

(5) Disconnect the connector from power steering pump switch.

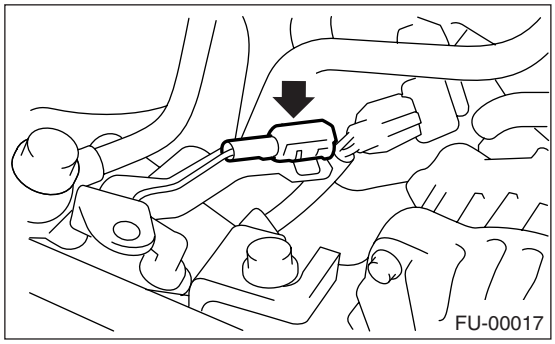

(6) Remove the power steering tank from the bracket by pulling it upward.

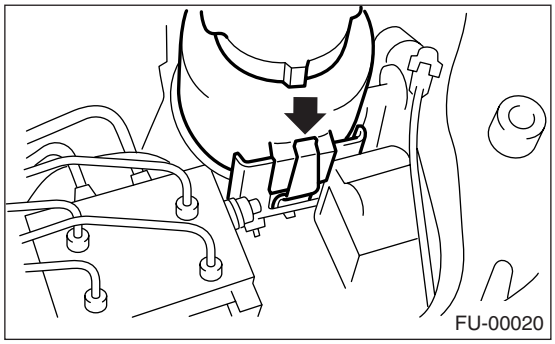

(7) Place the power steering pump and tank on right side wheel apron.

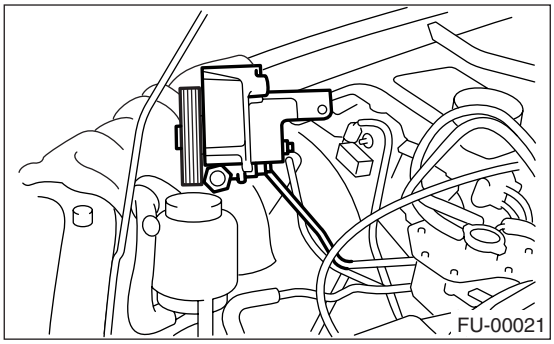

8) Disconnect the spark plug cords from spark plugs.
9) Disconnect the PCV hose from intake manifold.

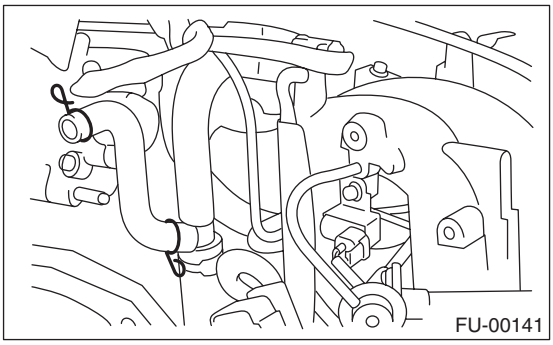

10) Disconnect the engine coolant hose from throttle body.

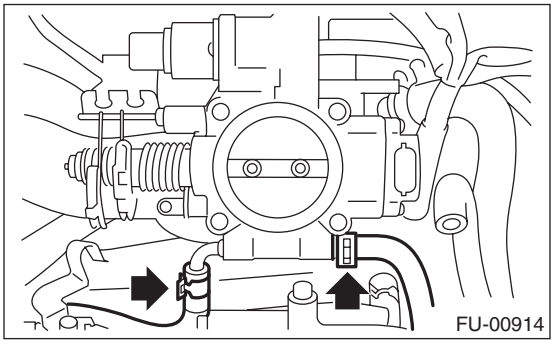

11) Disconnect the brake booster hose.

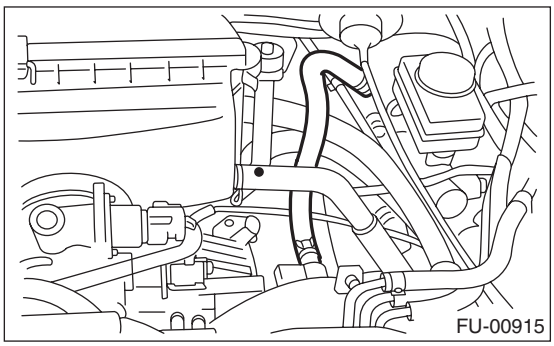

12) Remove the air cleaner case stay RH and engine harness bracket, and then disconnect the engine harness connectors from bulkhead harness connectors.

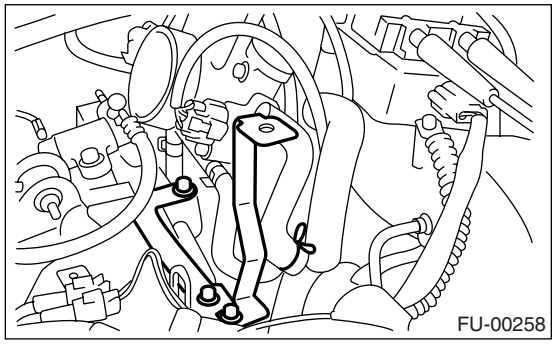

13) Disconnect the connectors from engine coolant temperature sensor.

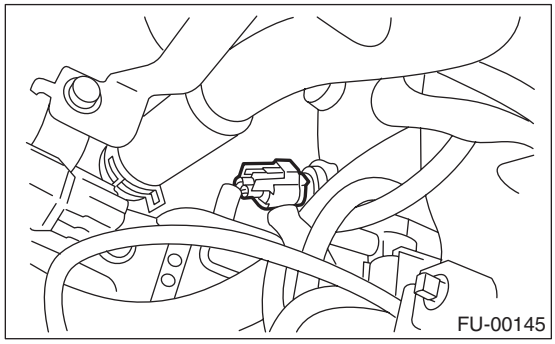

14) Disconnect the knock sensor connector.

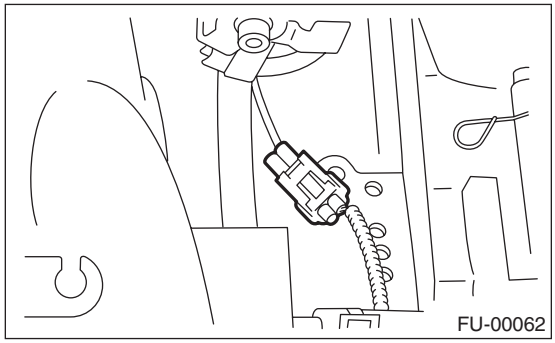

15) Disconnect the connector from crankshaft position sensor.

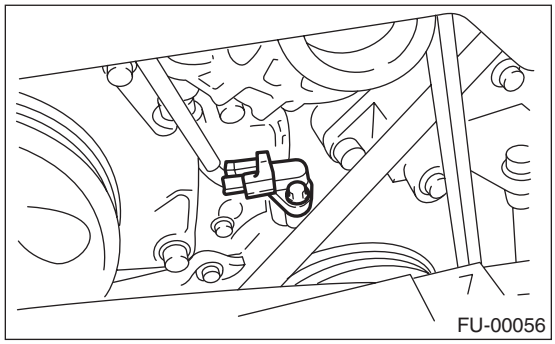

16) Disconnect the connector from oil pressure switch.

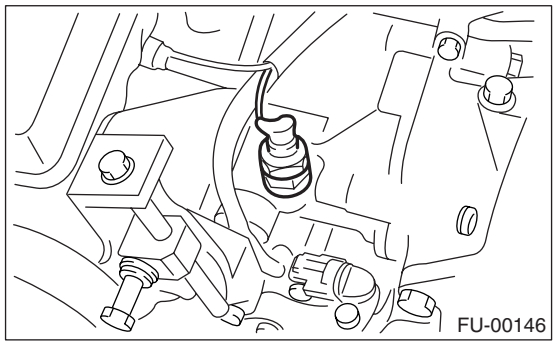

17) Disconnect the connector from camshaft position sensor.

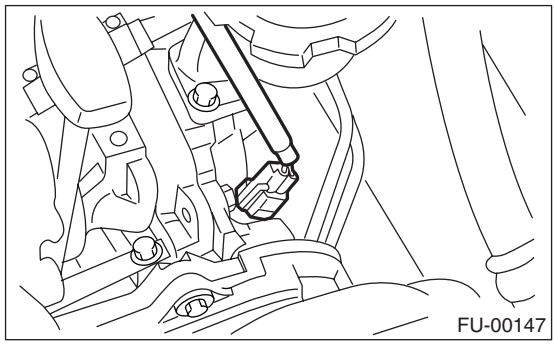

18) Disconnect the fuel hoses from fuel pipes.

WARNING:
• Do not spill fuel.
• Catch the fuel from hoses in a container or cloth.

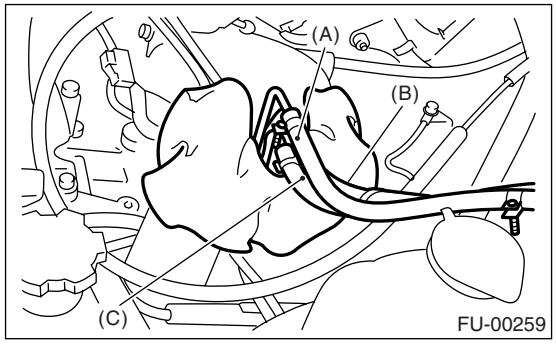

(A) Fuel delivery hose
(B) Return hose
(C) Evaporation hose

19) Remove the bolts which hold the intake manifold onto cylinder heads.

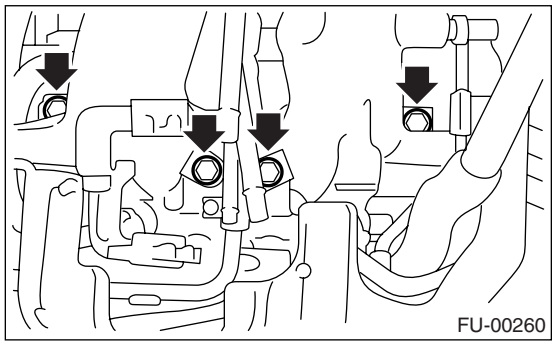

20) Remove the intake manifold.

B: INSTALLATION

1) Install the intake manifold onto cylinder heads.

NOTE:
Always use new gaskets.

Tightening torque:
25 N·m (2.5 kgf-m, 18.4 ft-lb)

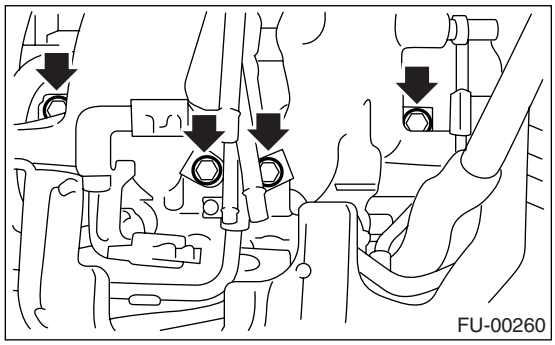

2) Connect the fuel hoses.

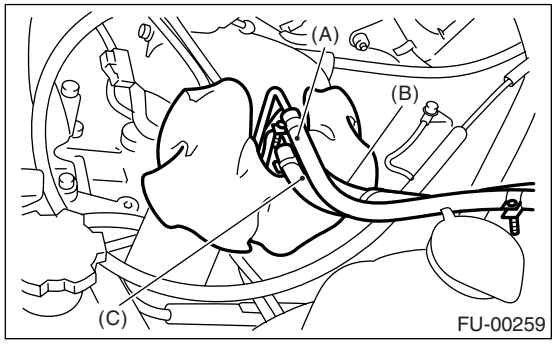

(A) Fuel delivery hose
(B) Return hose
(C) Evaporation hose

3) Connect the connector to camshaft position sensor.

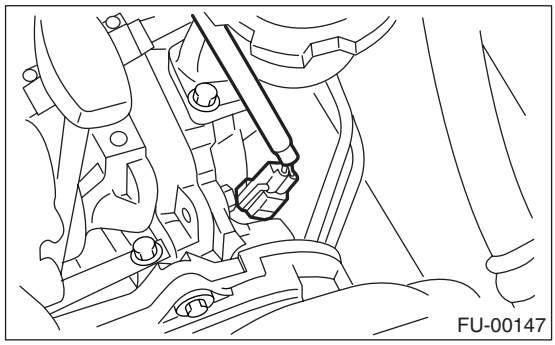

4) Connect the connector to oil pressure switch.

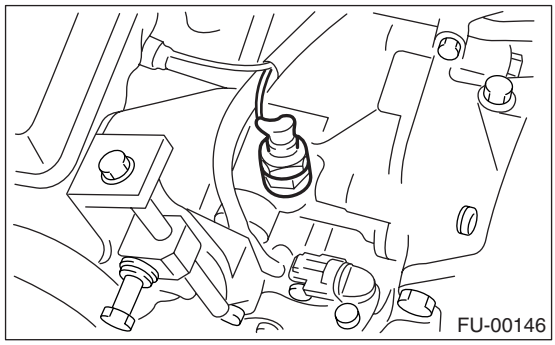

5) Connect the connector to crankshaft position sensor.

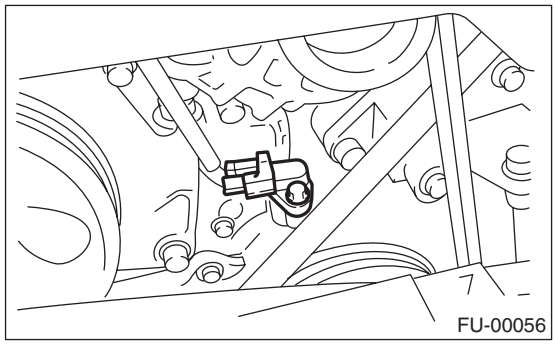

6) Connect the knock sensor connector.

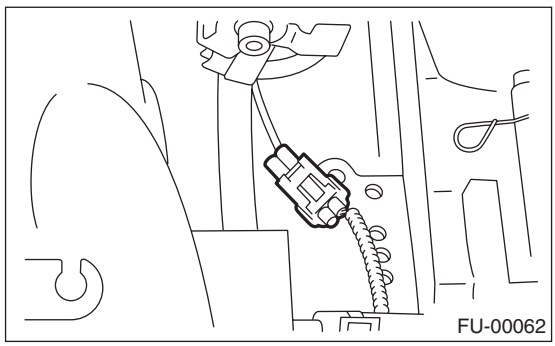

7) Connect the connectors to engine coolant temperature sensor.

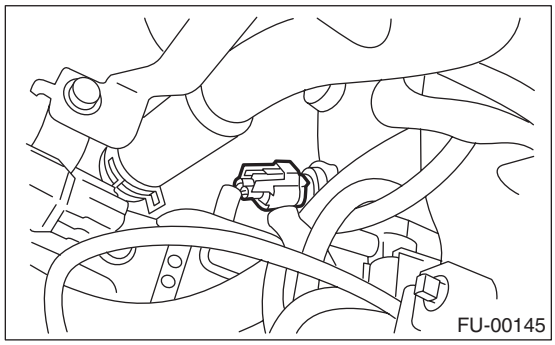

8) Install the air cleaner case stay RH and engine harness bracket, and then connect the engine harness connectors to bulkhead connectors.

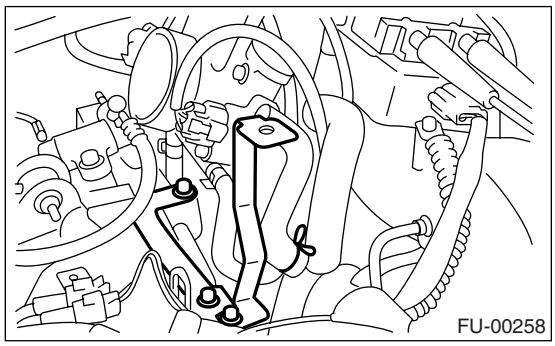

9) Connect the brake booster hose.

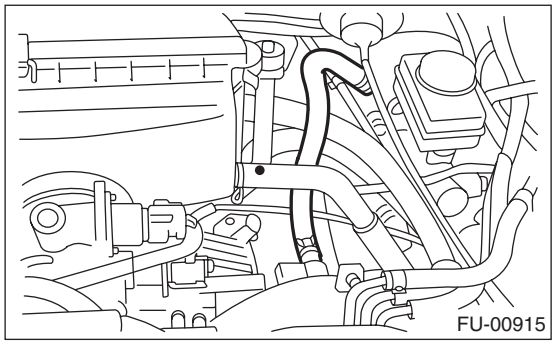

10) Connect the engine coolant hose to throttle body.

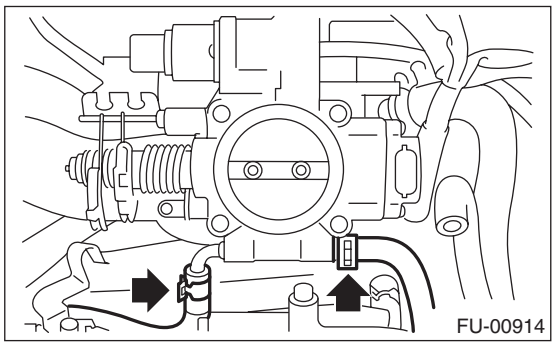

11) Connect the PCV hose to intake manifold.

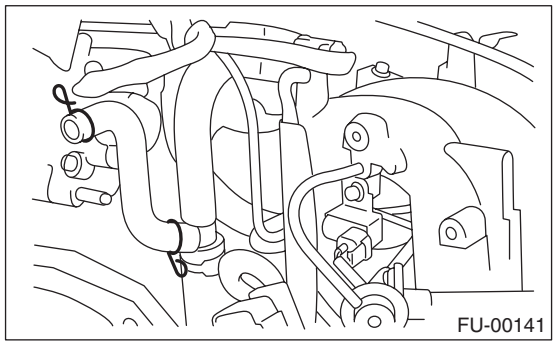

12) Connect the spark plug cords to the spark plugs.
13) Install the power steering pump and tank on brackets.
(1) Install the power steering tank on bracket.

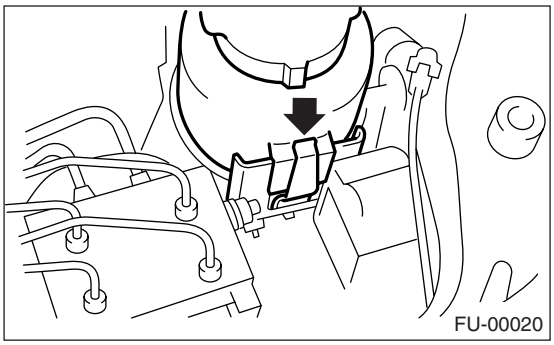

(2) Connect the connector to the power steering pump switch.

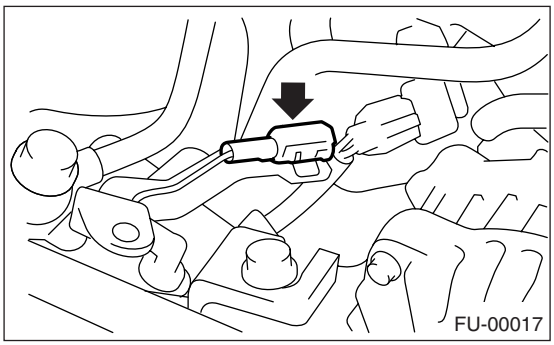

(3) Tighten the bolts which install the power steering pump on bracket.

Tightening torque:
22 N·m (2.2 kgf-m, 16.2 ft-lb)

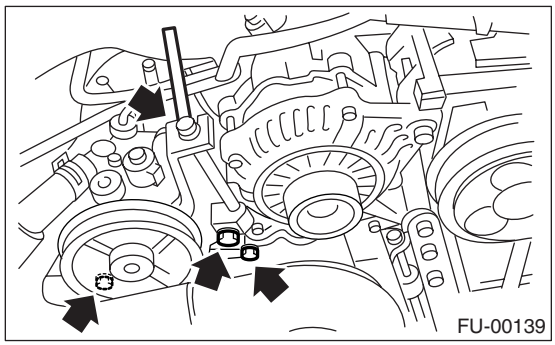

(4) Install the power steering pipes onto intake manifold protector RH.

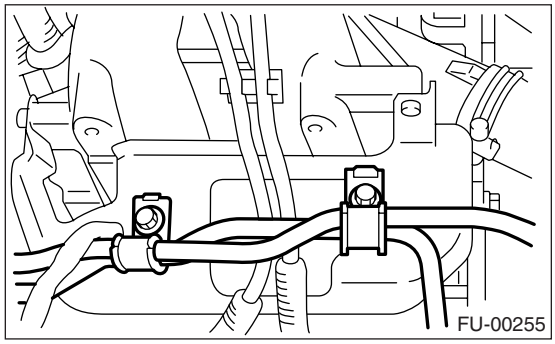

(5) Install the front side V-belt. <Ref. to ME(H4SO)-44, INSTALLATION, V-belt.>
(6) Install the resonator chamber.
<Ref. to IN(H4SO)-7, INSTALLATION, Resonator Chamber.>
14) Connect the accelerator cable (A).
15) Connect the cruise control cable (B). (Model with cruise control)

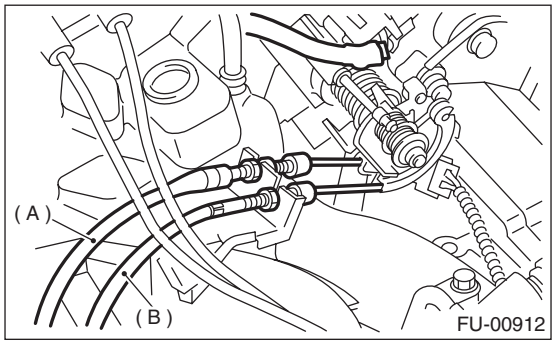

16) Install the air intake duct and air cleaner assembly. <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.> and <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>

17) Connect the connector to the fuel pump relay.

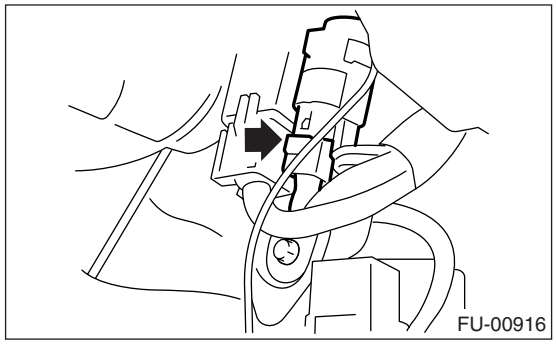

18) Connect the battery ground cable to battery.

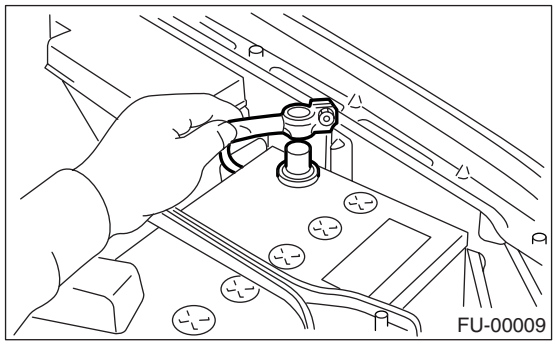

C: DISASSEMBLY

1) Disconnect the engine ground cable from intake manifold.

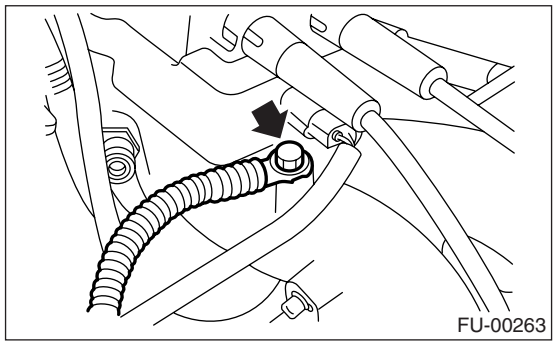

2) Disconnect the connector from ignition coil & ignitor ASSY.

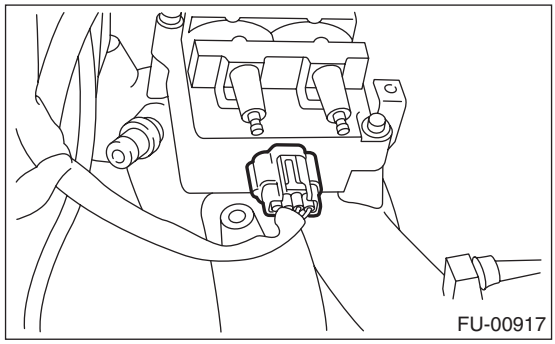

3) Remove the ignition coil & ignitor ASSY.

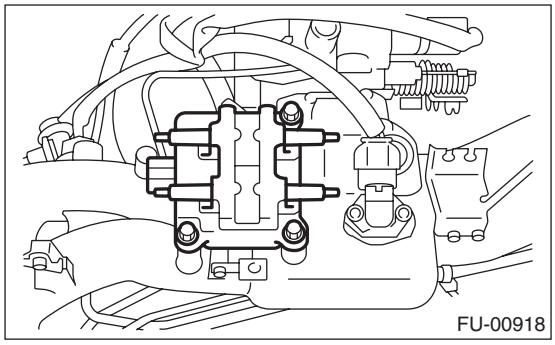

4) Disconnect the connector from intake air temperature and manifold absolute pressure sensor.

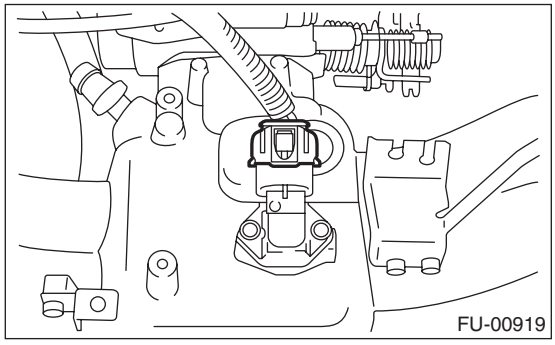

5) Remove the intake air temperature and manifold absolute pressure sensor from intake manifold.

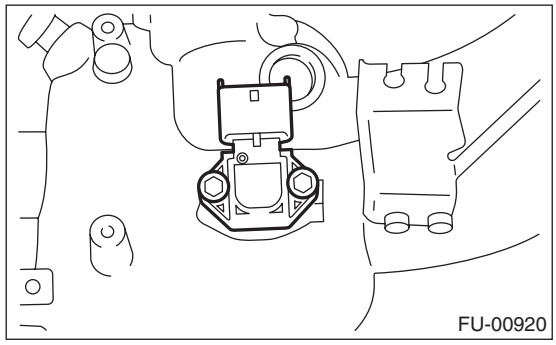

6) Disconnect the connectors from throttle position sensor and idle air control solenoid valve.
7) Remove the throttle body.

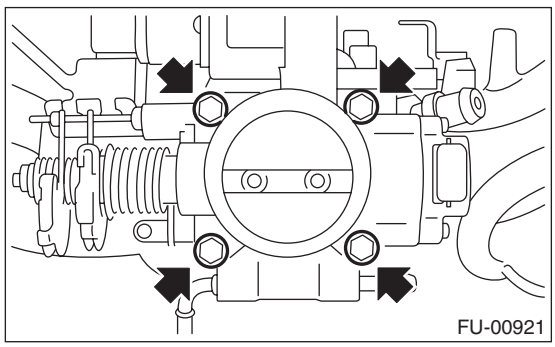

8) Disconnect the pressure regulator vacuum hose from intake manifold.

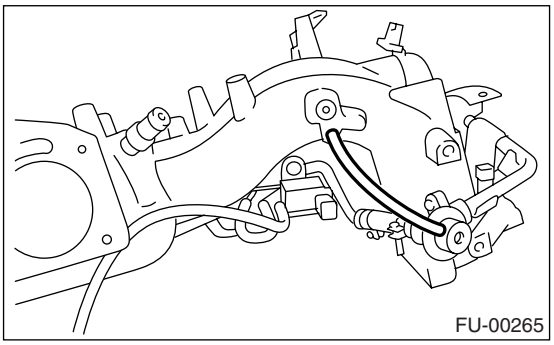

9) Remove the fuel pipe protector LH.

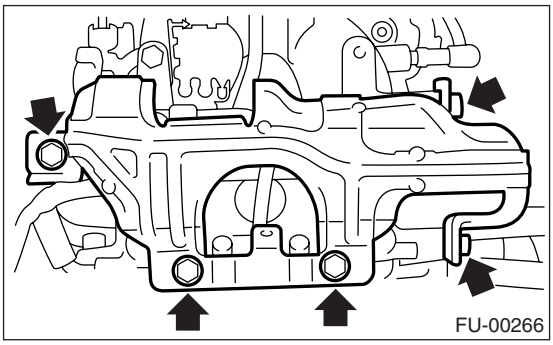

10) Remove the fuel pipe protector RH.

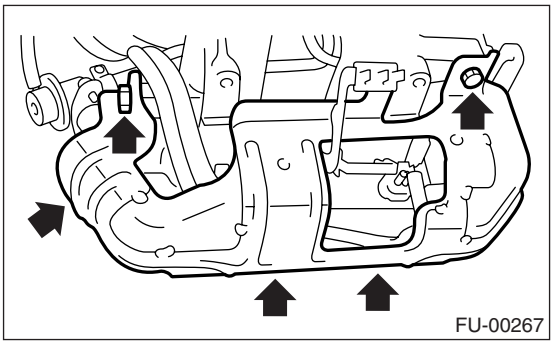

11) Disconnect the connectors from fuel injectors.

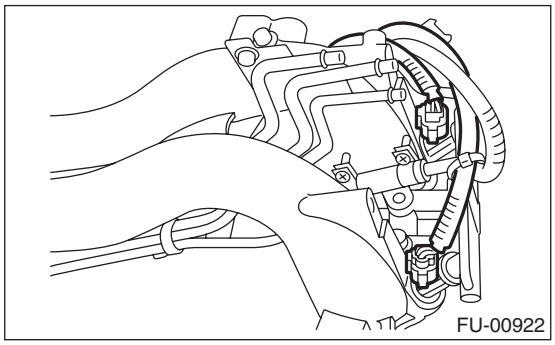

12) Disconnect the connector from purge control solenoid valve.

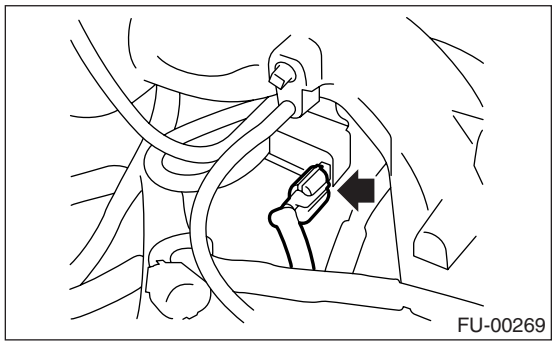

13) Disconnect the air by-pass hose from purge control solenoid valve.
14) Remove the harness bands (A) and harness bracket (B) which hold the engine harness onto intake manifold.

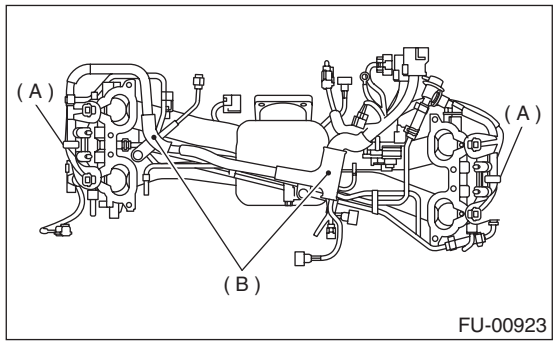

15) Remove the engine harness from intake manifold.
16) Remove the purge control solenoid valve.

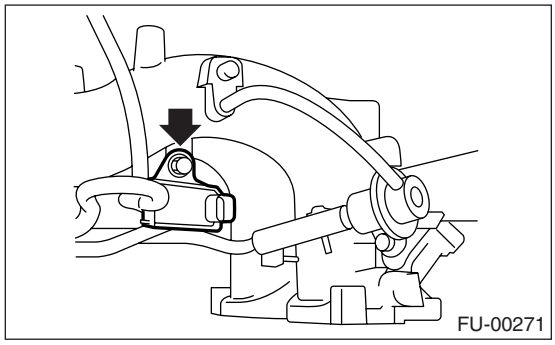

17) Remove the bolt which installs the fuel injector pipe on intake manifold as shown in the figure.

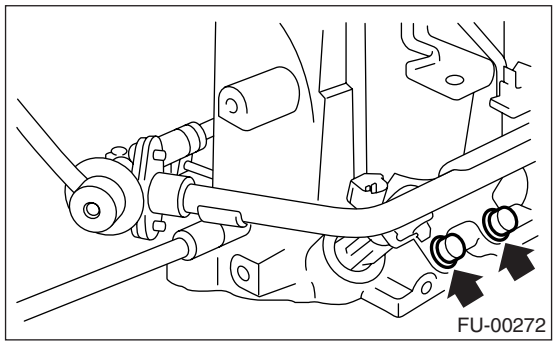

18) Remove the bolt which installs the fuel injector pipe LH on intake manifold.

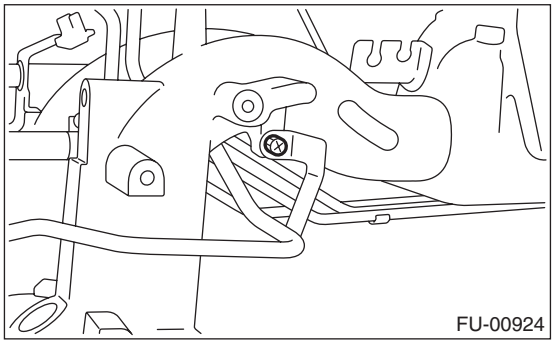

19) Remove the two bolts which hold the fuel pipes on intake manifold.

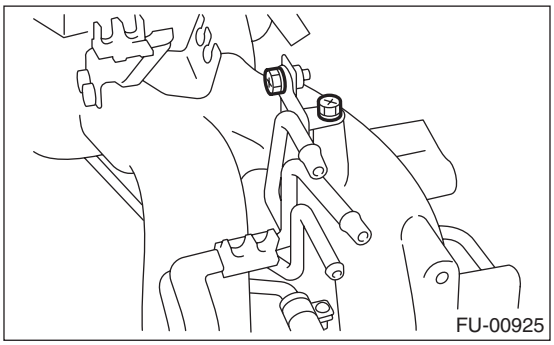

20) Remove the fuel injectors.
(1) Remove the fuel injector securing clip.

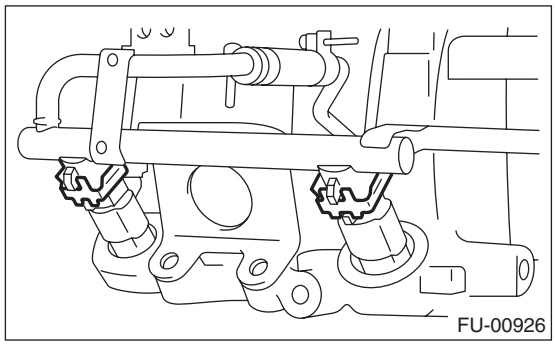

(2) Remove the fuel injector while lifting up the fuel injector pipe.

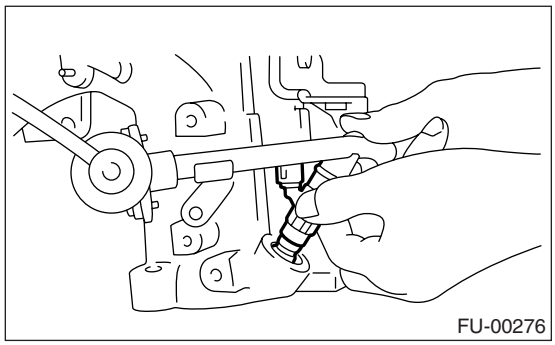

21) Loosen the clamp which holds the fuel injector pipe LH to fuel hose, and then remove the pipe from fuel hose.

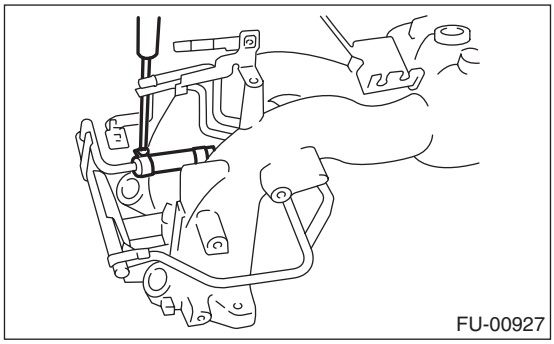

22) Loosen the clamp which holds the fuel injector pipe RH to fuel hose, and remove the pipe from fuel hose.

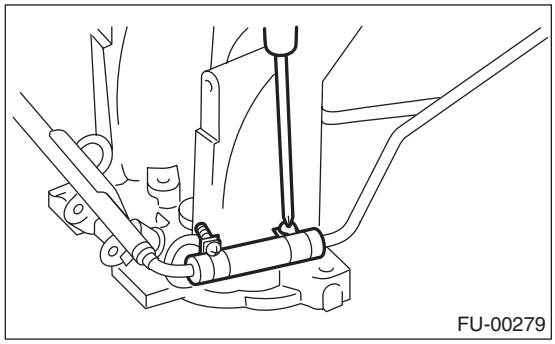

23) Remove the fuel injector pipe.

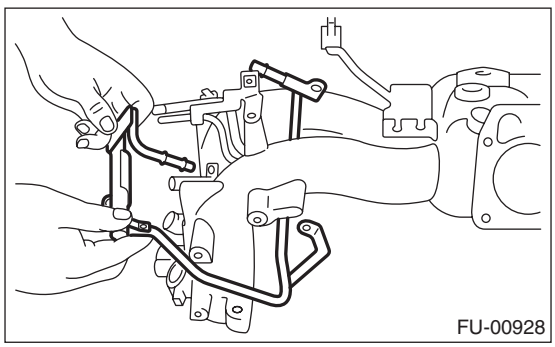

24) Remove the bolt which installs the fuel pipes on intake manifold.

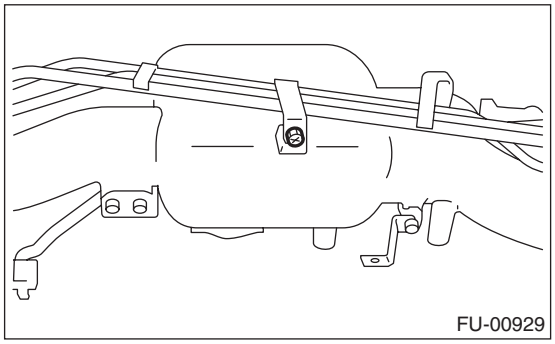

25) Remove the fuel pipe assembly (B) and pressure regulator (A) from intake manifold.

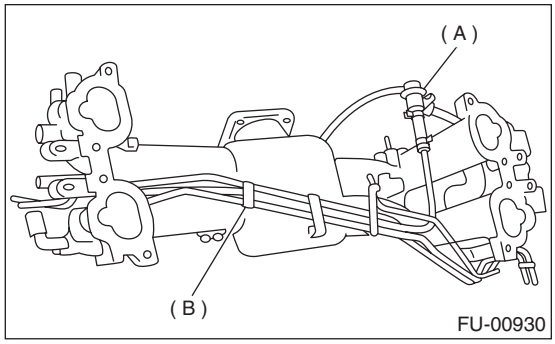

D: ASSEMBLY

1) Install the fuel pipe assembly (B) and pressure regulator (A), etc. to intake manifold.

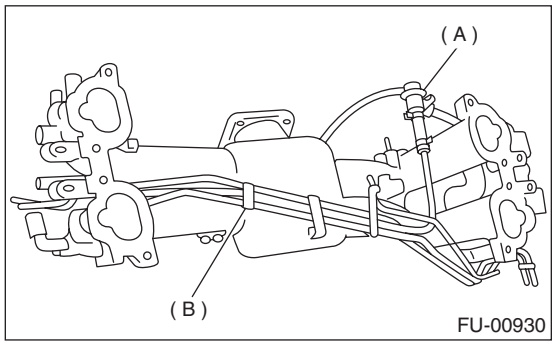

2) Tighten the bolt which installs the fuel pipes on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

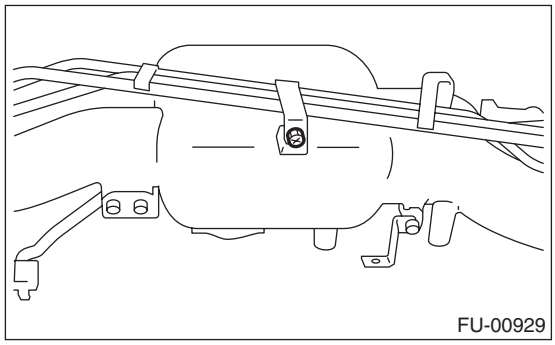

3) Connect the fuel injector pipe RH to fuel hose, and tighten the clamp screws.

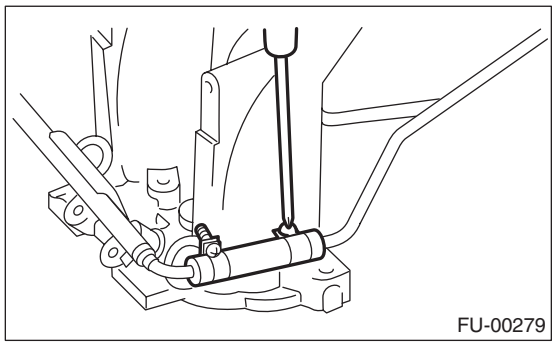

4) Install the fuel injector pipe.

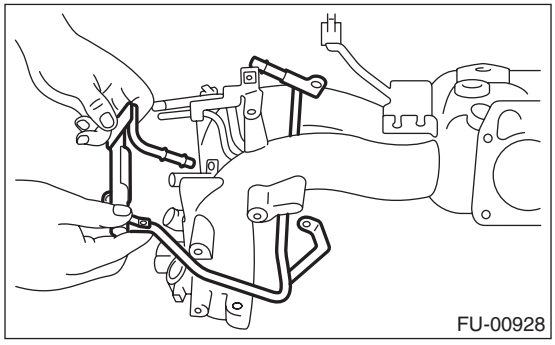

5) Connect the fuel injector pipe LH to fuel hose, and then tighten the clamp screw.

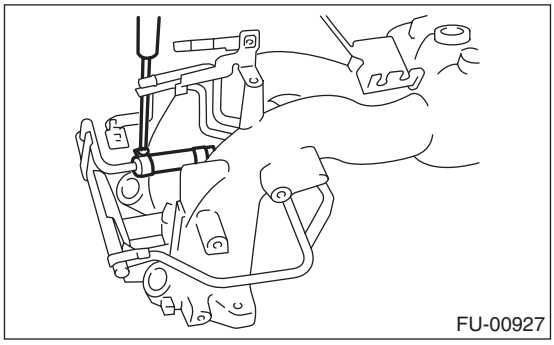

6) Install the fuel injectors.

NOTE:
Always use new O-rings.

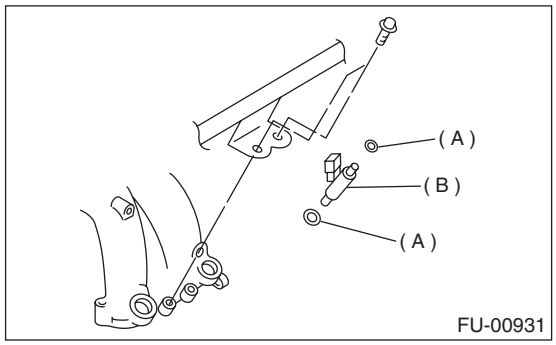

(A) O-ring
(B) Fuel injector

NOTE:
Do not forget to install the fuel injector securing clip.

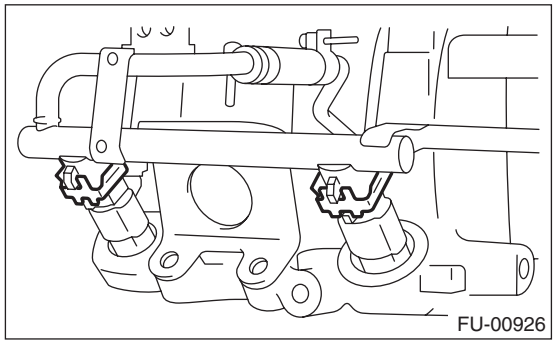

7) Tighten the bolt which installs the fuel injector pipe on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

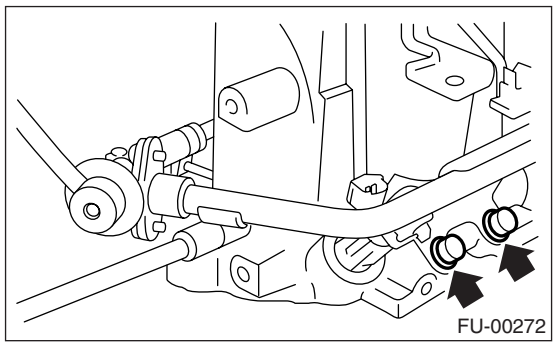

8) Tighten the two bolts which install the fuel pipes on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

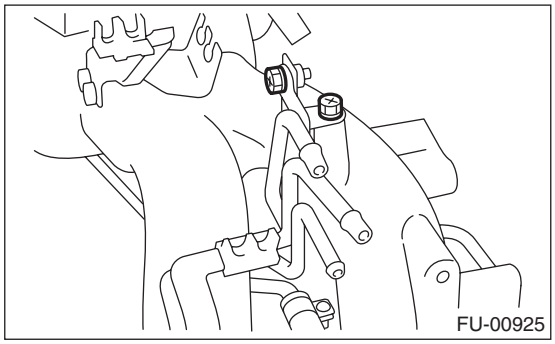

9) Tighten the bolt which installs the injector pipe on intake manifold.

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

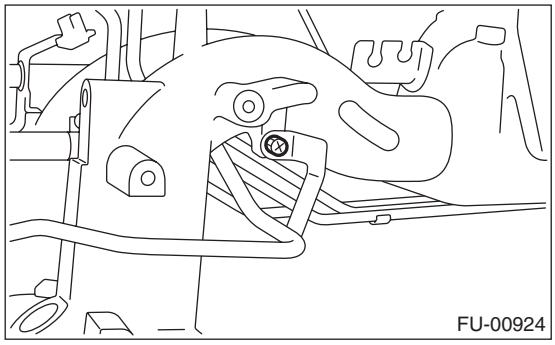

10) Install the purge control solenoid valve.

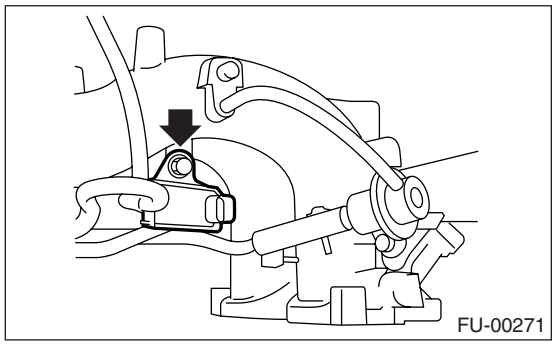

11) Connect the hoses to the purge control solenoid valve.

NOTE:
Carefully connect the evaporation hoses.

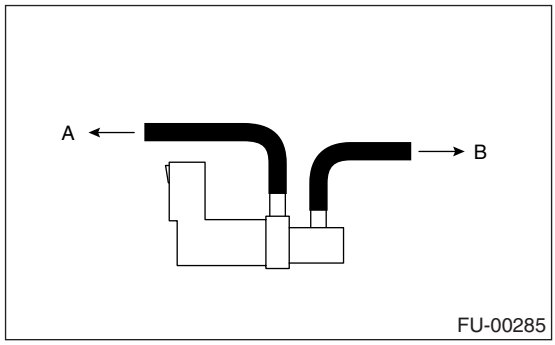

A: To fuel pipe
B: To throttle body

12) Install the engine harness onto intake manifold.

Tightening torque:
16 N·m (1.6 kgf-m, 11.8 ft-lb)

13) Connect the connectors to the fuel injectors and purge control solenoid valve.
14) Hold the engine harness by harness band (A) and harness bracket (B).

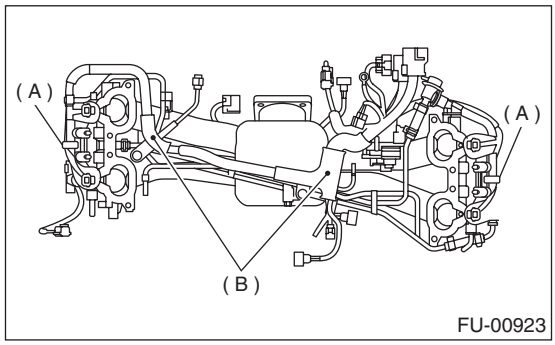

NOTE:
Do not use harness bands on the harnesses which are supposed to be protected by fuel pipe protector.

15) Install the fuel pipe protector RH.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

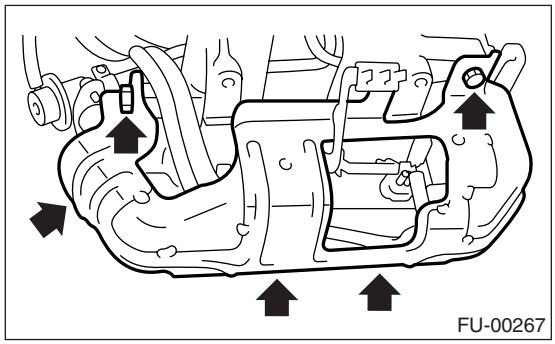

16) Install the fuel pipe protector LH.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

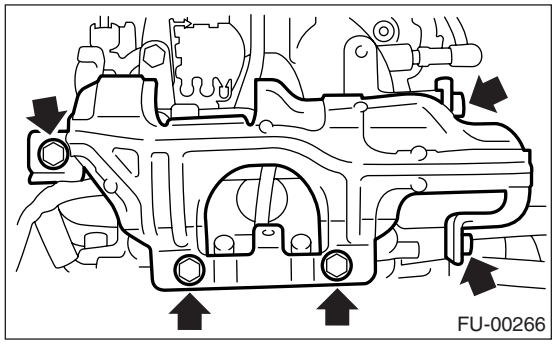

17) Connect the pressure regulator vacuum hose to intake manifold.

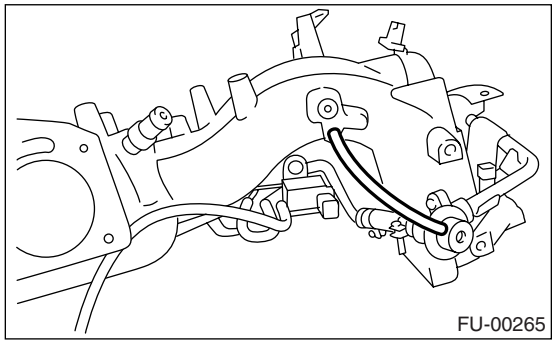

18) Install the throttle body to intake manifold.

NOTE:
Replace the gasket with a new one.

Tightening torque:
22 N·m (2.2 kgf-m, 16.2 ft-lb)

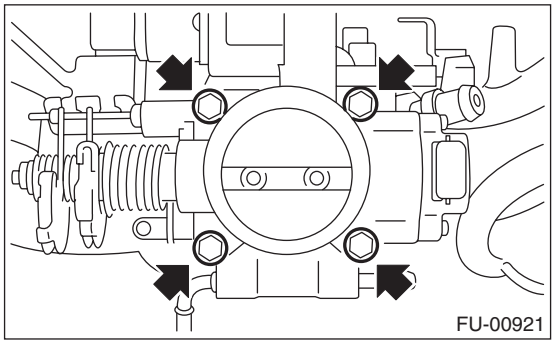

19) Connect the air by-pass hose from purge control solenoid valve to throttle body.
20) Install the intake air temperature and manifold absolute pressure sensor.

Tightening torque:
3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

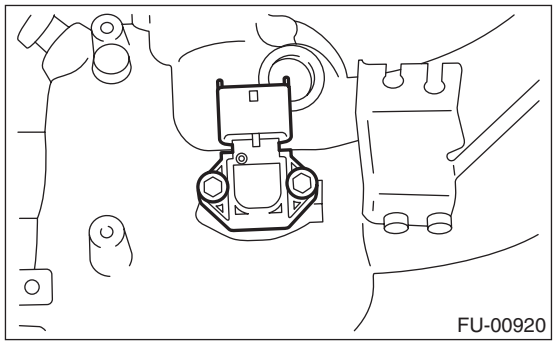

NOTE:
Replace the O-ring with a new one.

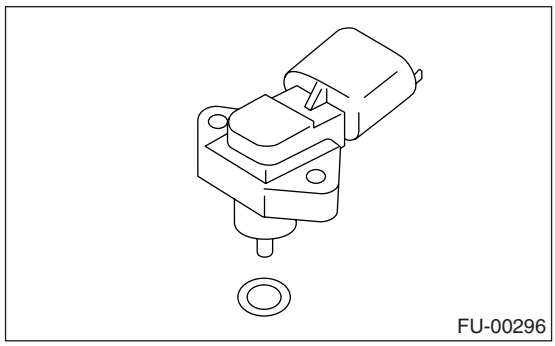

21) Connect the connector to intake air temperature and manifold absolute pressure sensor.
22) Connect the connectors to throttle position sensor and idle air control solenoid valve.

23) Install the ignition coil & ignitor ASSY.

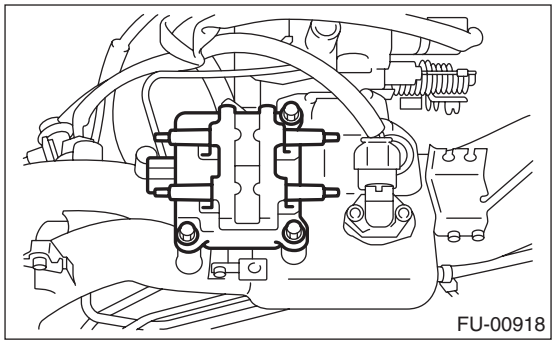

24) Connect the connector to ignition coil & ignitor ASSY.
25) Install the engine ground cable to intake manifold.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

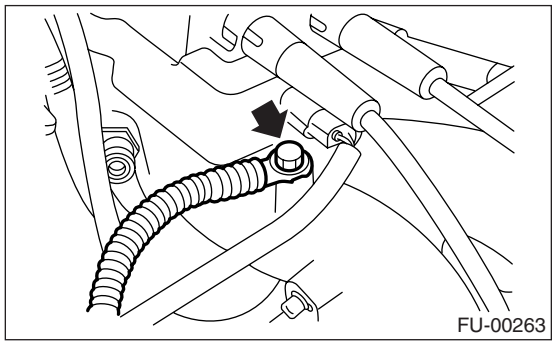

E: INSPECTION

Make sure the fuel pipe and fuel hoses are not cracked and the connections are tightened firmly.

4. Engine Coolant Temperature Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

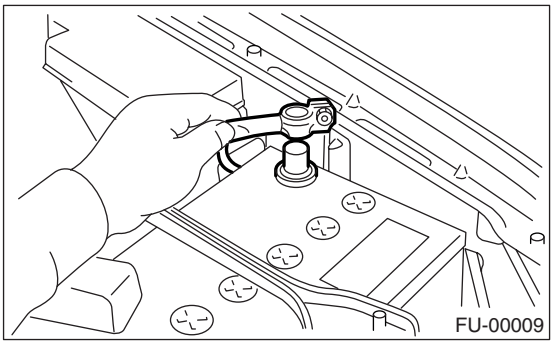

2) Remove the air intake duct and air cleaner case. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

3) Disconnect the connector from engine coolant temperature sensor.

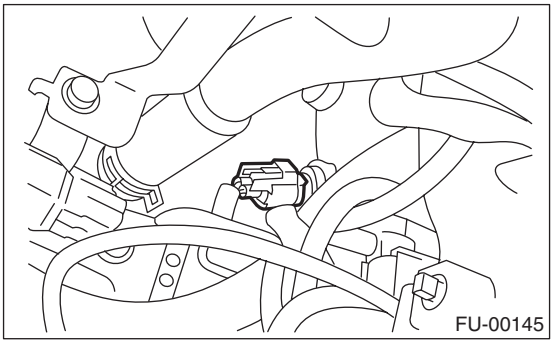

4) Remove the engine coolant temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

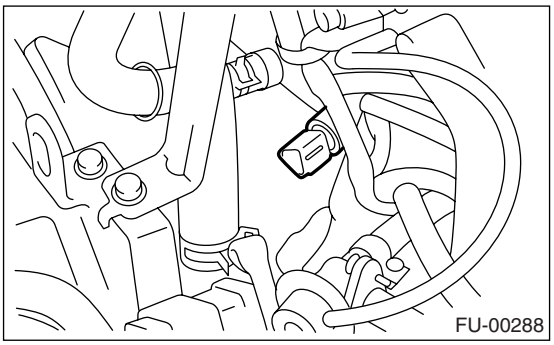

5. Crankshaft Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

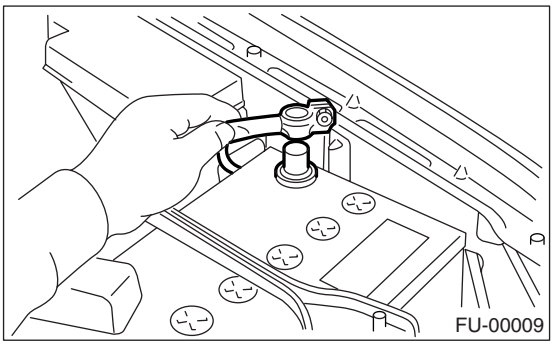

2) Remove the bolt which installs the crankshaft position sensor to cylinder block.

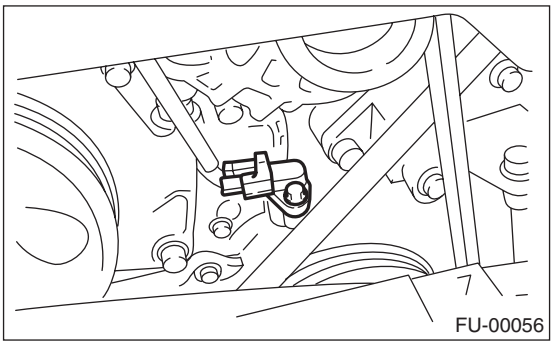

3) Remove the crankshaft position sensor, and then disconnect the connector from it.

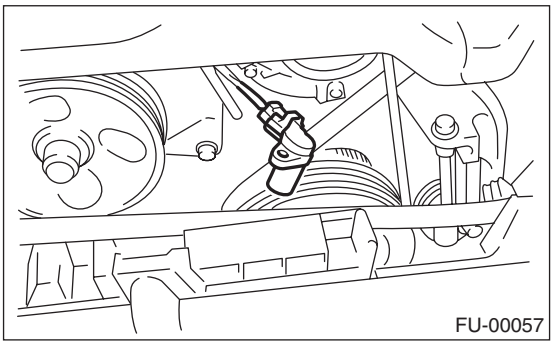

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”.
<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

6. Camshaft Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

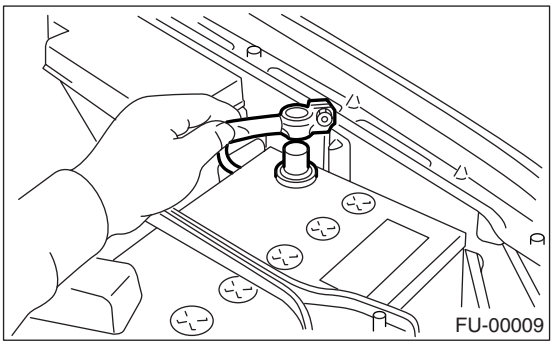

2) Disconnect the connector from camshaft position sensor.

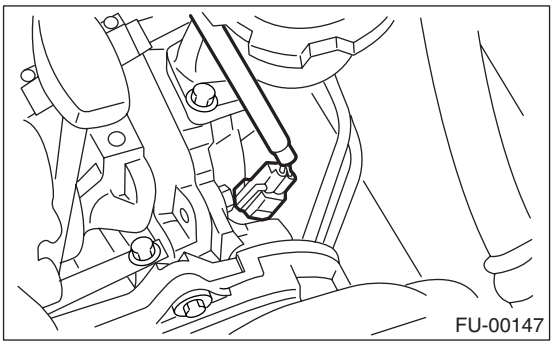

3) Remove the bolt which installs the camshaft position sensor to camshaft position sensor support.

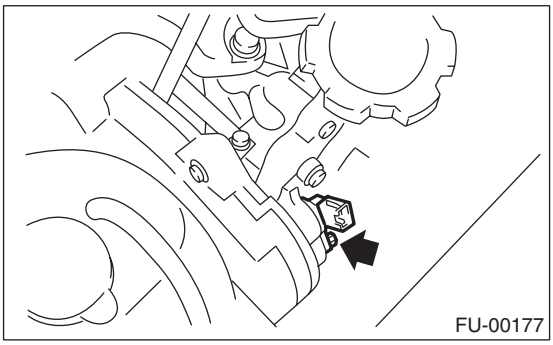

4) Remove the bolt which installs the camshaft position sensor support to camshaft cap LH.

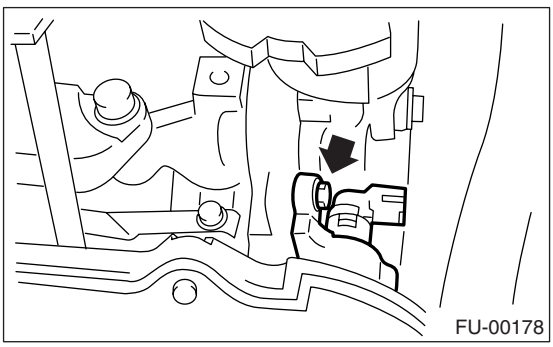

5) Remove the camshaft position sensor and camshaft position sensor support as a unit.
6) Remove the camshaft position sensor itself.

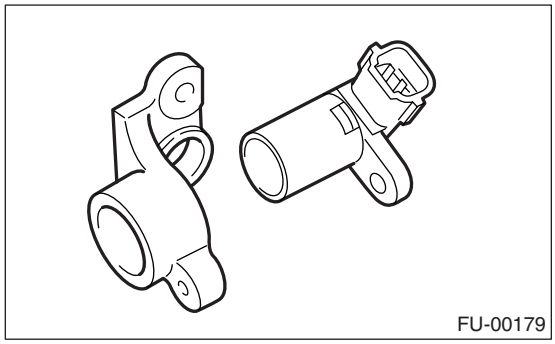

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”.
<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

7. Knock Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

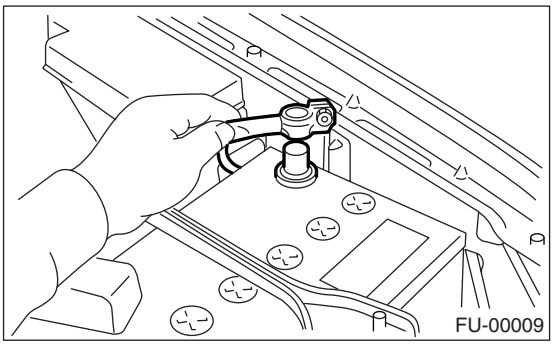

2) Remove the air cleaner case.
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
3) Disconnect the knock sensor connector.

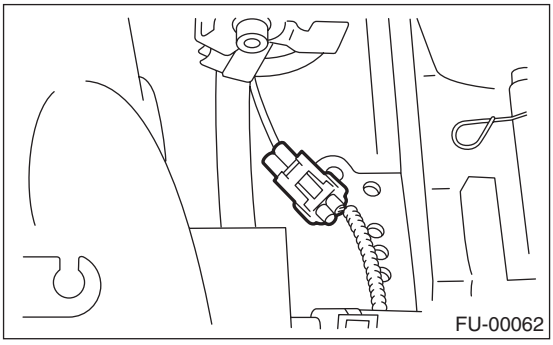

4) Remove the knock sensor from cylinder block.

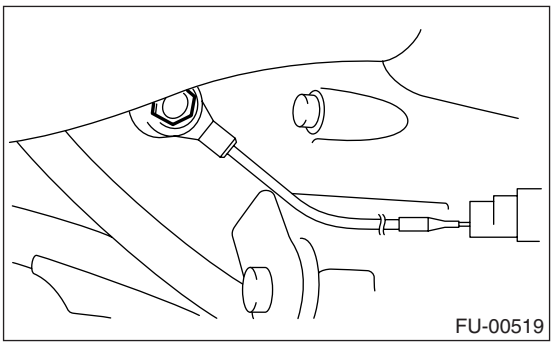

B: INSTALLATION

1) Install the knock sensor to cylinder block.

NOTE:
- For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>
- Extraction area of knock sensor cord must be positioned at a 60° angle relative to engine rear.

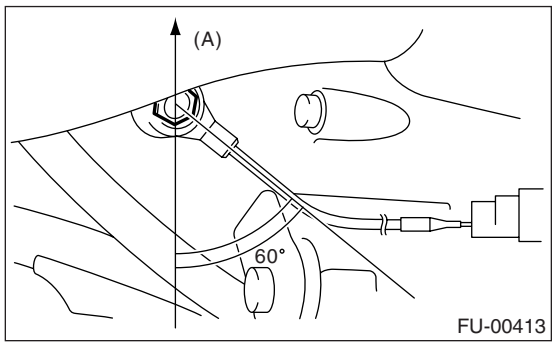

(A) Front side

2) Connect the knock sensor connector.

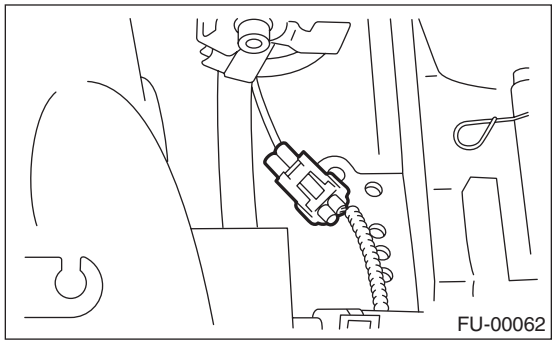

3) Install the air cleaner case.
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
4) Connect the battery ground cable to battery.

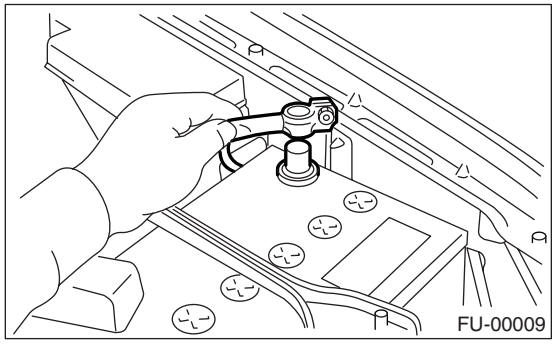

8. Throttle Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

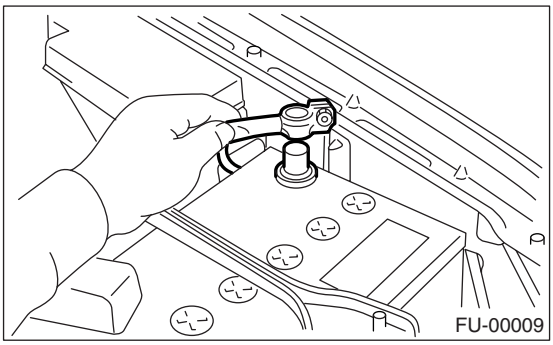

2) Disconnect the connector from throttle position sensor.

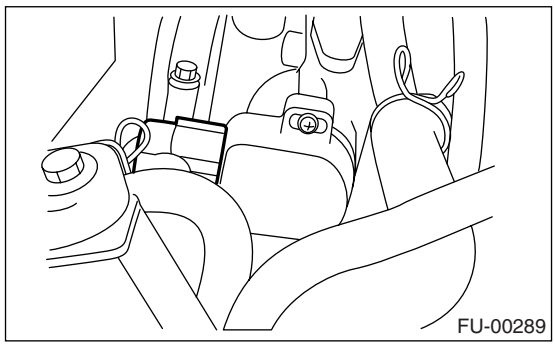

3) Remove the throttle position sensor holding screws, and remove it.

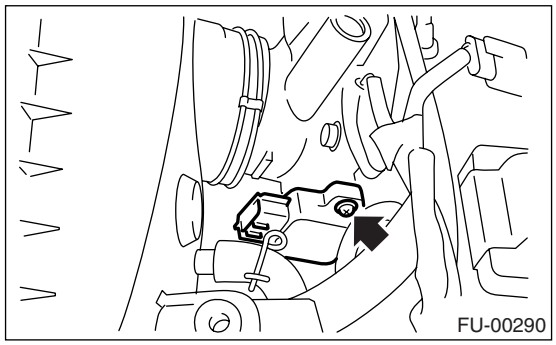

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”.
<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

CAUTION:
When installing the throttle position sensor, adjust to specified data.

C: ADJUSTMENT

1) Turn the ignition switch to OFF.
2) Loosen the throttle position sensor holding screws.

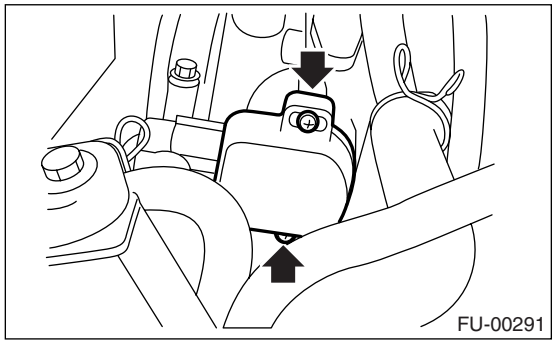

3) When using the voltage meter;
   (1) Take out the ECM.
   (2) Turn the ignition switch to ON.
   (3) Adjust the throttle position sensor to proper position to make the voltage signal to ECM come to specification.

Connector & terminal/Specified voltage
(B136) No. 16 — (B136) No. 17/0.45 — 0.55 V
[Fully closed.]

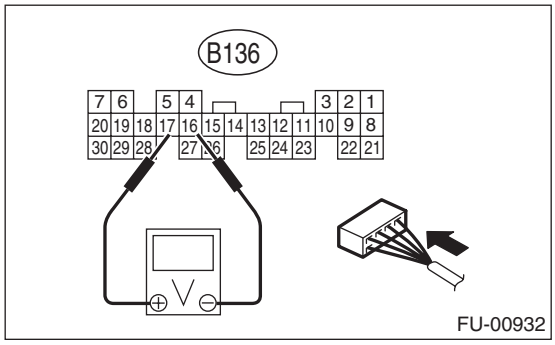

   (4) Tighten the throttle position sensor holding screws.

NOTE:
For tightening torque, refer to “COMPONENT”.
<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

4) When using the Subaru Select Monitor;
   (1) Turn the ignition switch to OFF.
   (2) Loosen the throttle position sensor holding screws.

NOTE:
For detailed operation procedures, refer to Subaru Select Monitor Operation Manual.

(3) Insert the cartridge to Subaru Select Monitor.

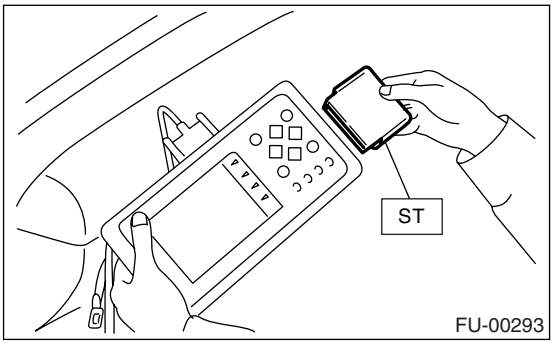

(4) Connect the Subaru Select Monitor to data link connector.

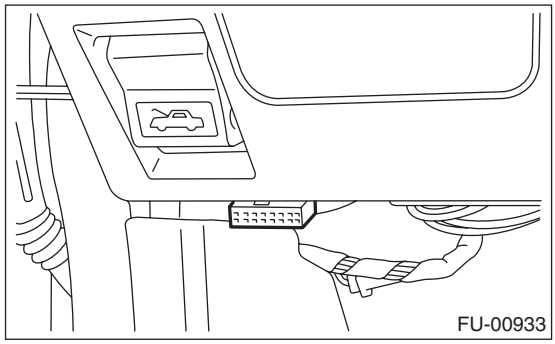

5) Turn the ignition switch to ON, and Subaru Select Monitor switch to ON.
6) Select the {2. Each System Check} in Main Menu.
7) Select the {Engine Control System} in Selection Menu.
8) Select the {1. Current Data Display & Save} in Engine Control System Diagnosis.
9) Select the {1.12 Data Display} in Data Display Menu.
10) Adjust the throttle position sensor to proper position to match with the following specifications.

Condition: Throttle fully closed
Throttle opening angle 0.00%
Throttle sensor voltage 0.50 V

11) Tighten the throttle position sensor holding screws.

NOTE:
For tightening torque, refer to “COMPONENT”.
<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

9. Intake Air Temperature and Manifold Absolute Pressure Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

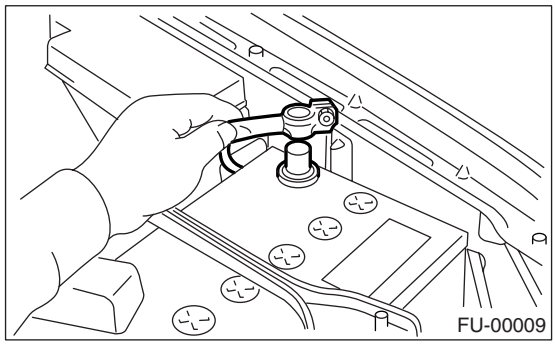

2) Disconnect the spark plug cord from ignition coil and ignitor ASSY.

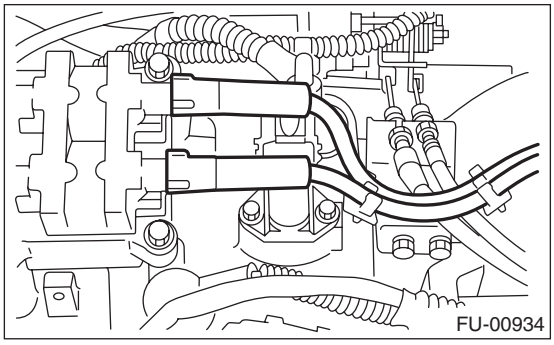

3) Disconnect the connector from intake air temperature and manifold absolute pressure sensor.

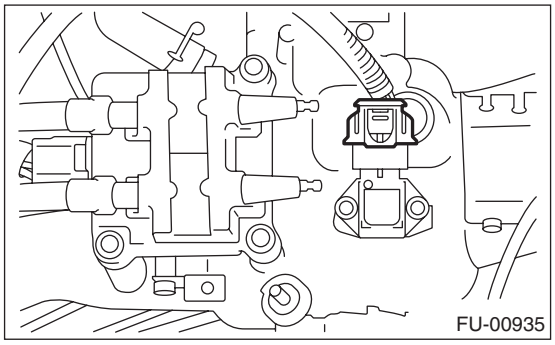

4) Remove the intake air temperature and manifold absolute pressure sensor.

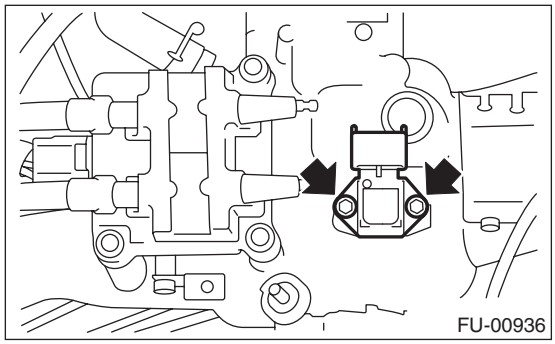

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- For tightening torque, refer to “COMPONENT”. <Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>
- Replace the O-ring with a new one.

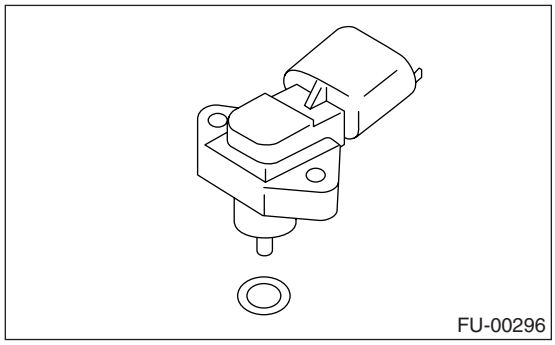

10.Idle Air Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

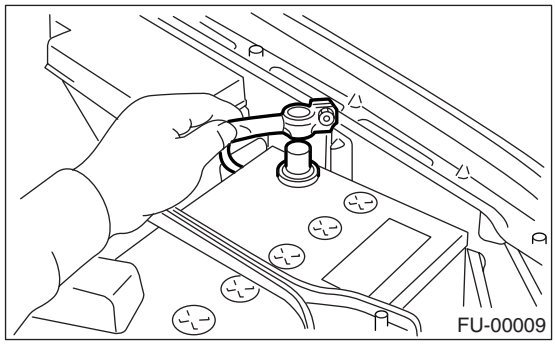

2) Disconnect the connector from idle air control solenoid valve.

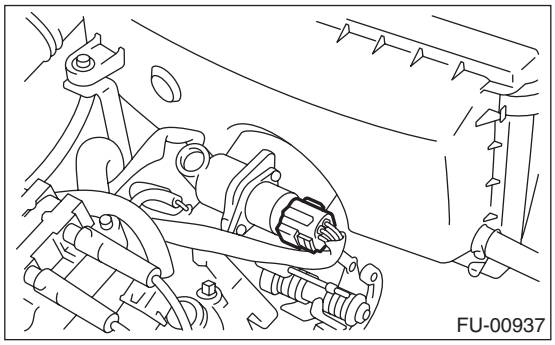

3) Remove the idle air control solenoid valve from throttle body.

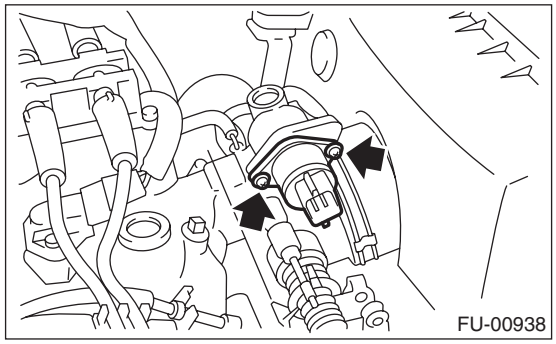

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
- Always use a new gasket.
- For tightening torque, refer to “COMPONENT”.

<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

11.Fuel Injector

A: REMOVAL

1. RH SIDE

1) Release the fuel pressure.
<Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

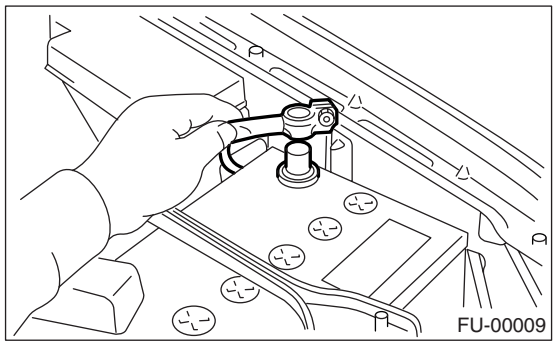

4) Remove the resonator chamber. <Ref. to IN(H4SO)-7, REMOVAL, Resonator Chamber.>
5) Remove the spark plug cords from spark plugs (#1 and #3 cylinders).

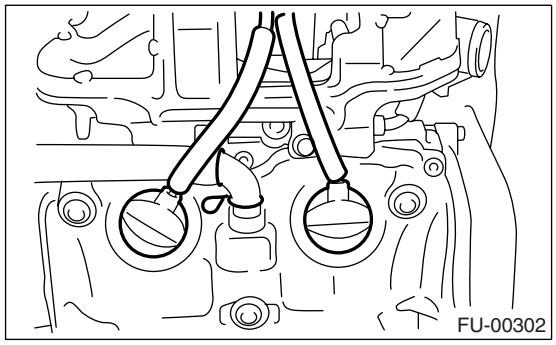

6) Remove the power steering pump and tank from brackets.
(1) Remove the front side V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.>
(2) Remove the bolts which hold the power steering pipes onto intake manifold protector.

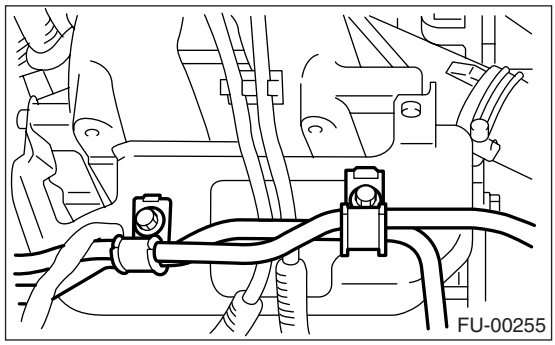

(3) Remove the bolts which install the power steering pump to bracket.

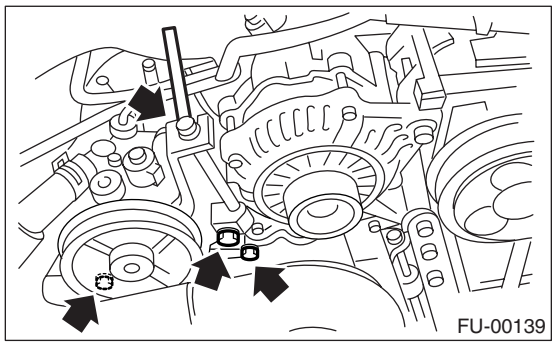

(4) Disconnect the connector from power steering pump switch.

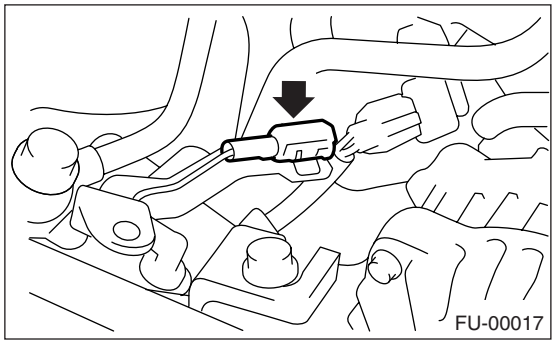

(5) Remove the power steering tank from the bracket by pulling it upwards.

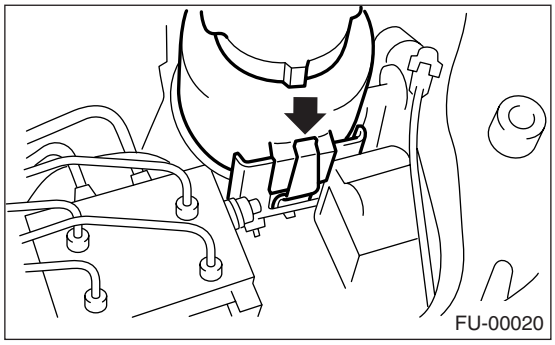

(6) Place the power steering pump and tank on the right side wheel apron.

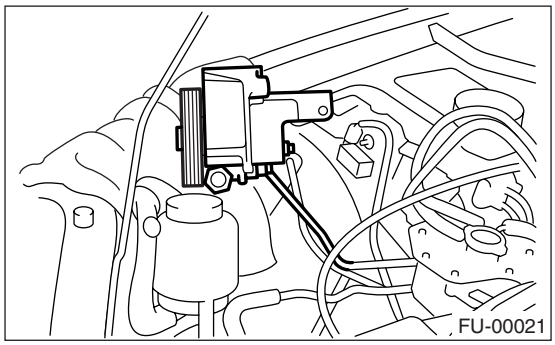

7) Remove the fuel pipe protector RH.

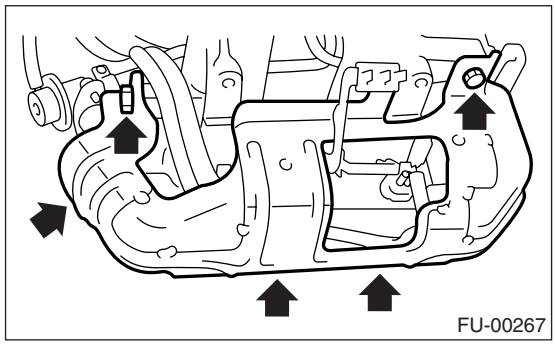

8) Disconnect the connector from fuel injector.

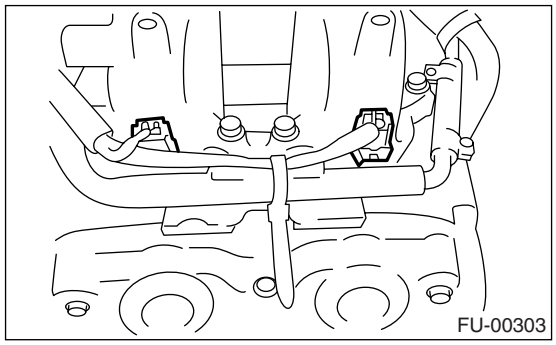

9) Remove the bolts which hold the fuel injector pipe to intake manifold.

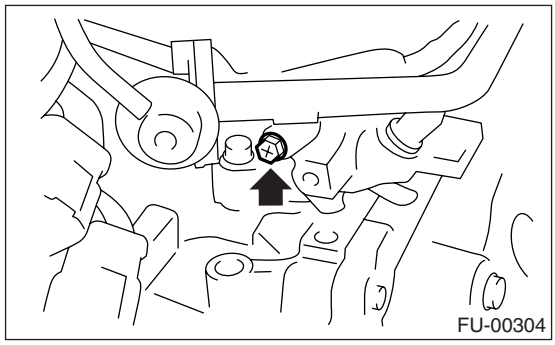

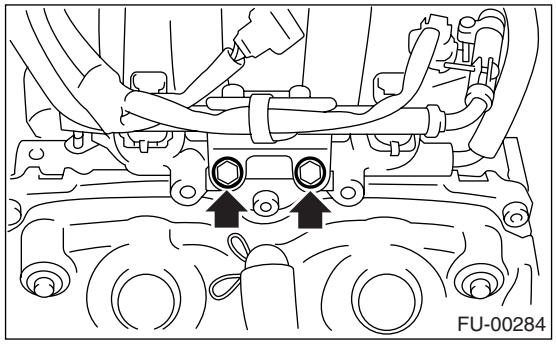

10) Remove the fuel injector from intake manifold.
(1) Remove the fuel injector securing clip.

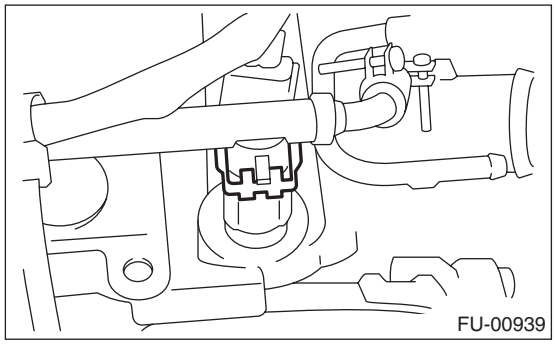

(2) Remove the fuel injector while lifting up the fuel injector pipe.

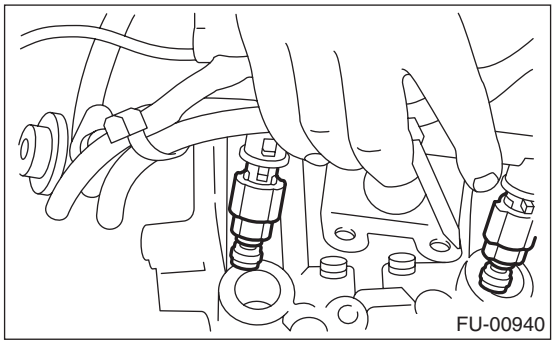

2. LH SIDE

1) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

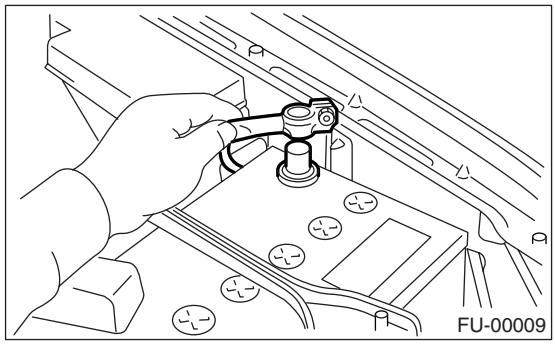

4) Remove the two bolts which install the washer tank on body.

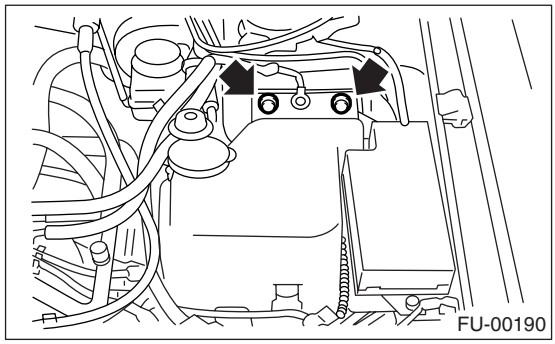

5) Disconnect the connector from front window washer motor.
6) Disconnect the connector from rear gate glass washer motor.

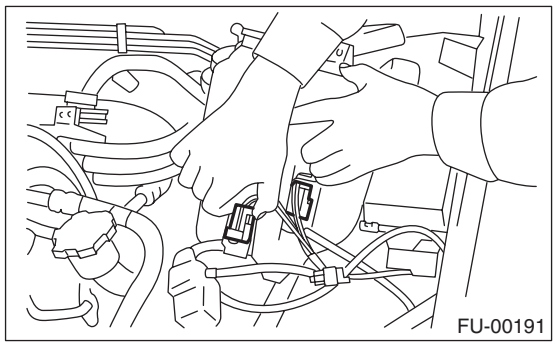

7) Disconnect the rear window glass washer hose from washer motor, and then plug the connection with a suitable cap.
8) Move the washer tank, and secure it away from working area.

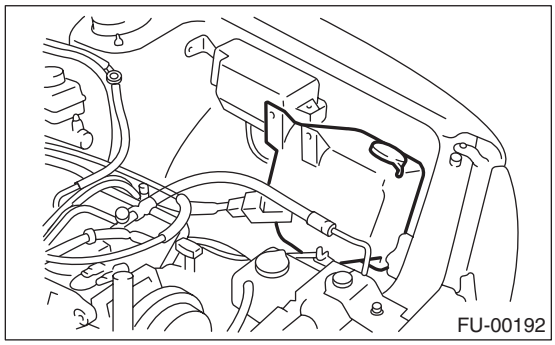

9) Remove the spark plug cords from spark plugs (#2 and #4 cylinders).

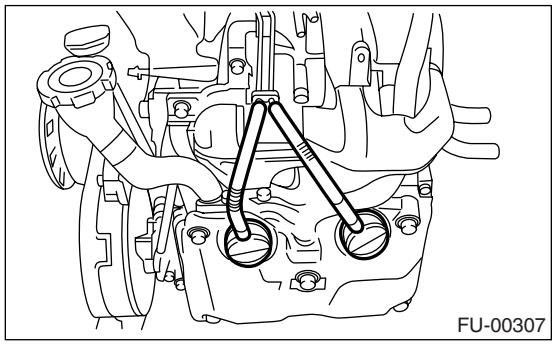

10) Remove the fuel pipe protector LH.

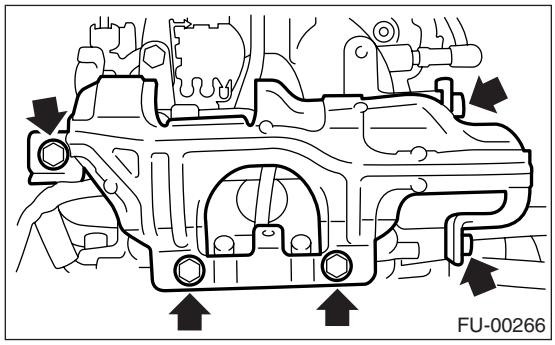

11) Disconnect the connector from fuel injector.

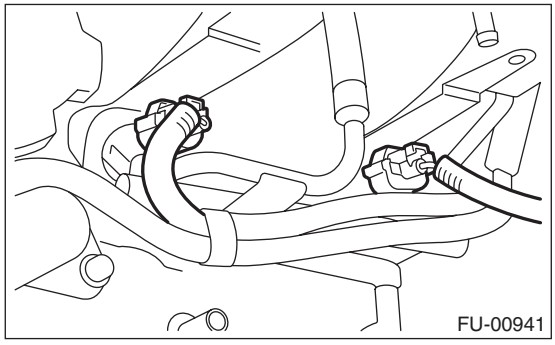

12) Remove the bolt which installs the fuel injector pipe to intake manifold.

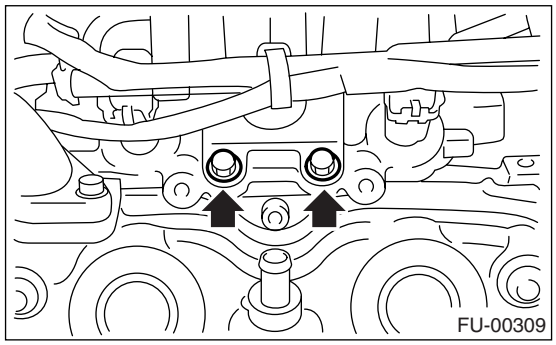

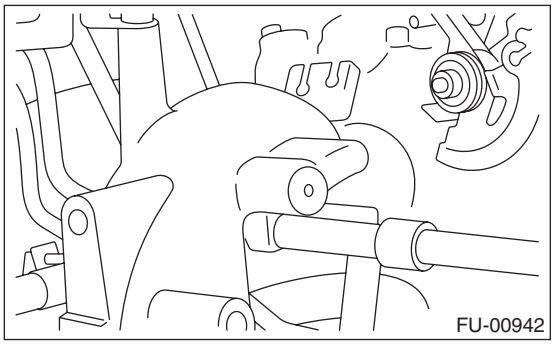

13) Remove the bolt which holds the fuel pipe on intake manifold.

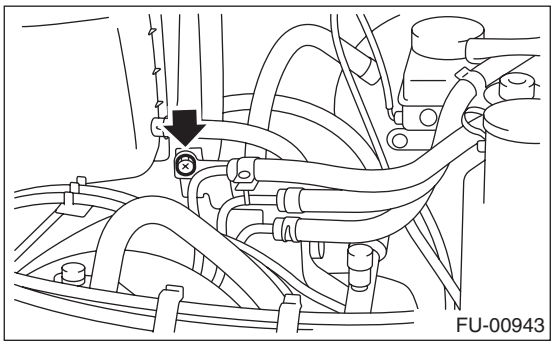

14) Remove the fuel injector from intake manifold.
(1) Remove the fuel injector securing clip.

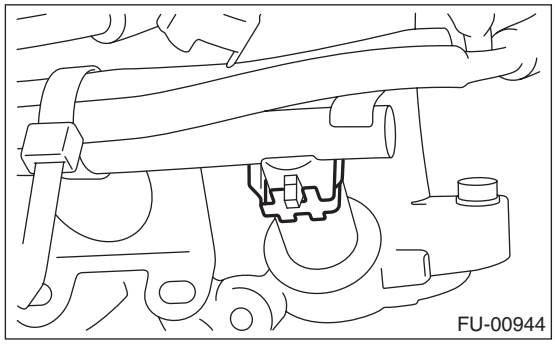

(2) Remove the fuel injector while lifting up the fuel injector pipe.

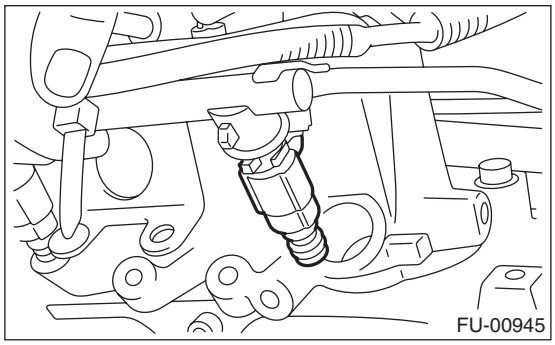

B: INSTALLATION

1. RH SIDE

Install in the reverse order of removal.

NOTE:
Replace the O-rings with new ones.

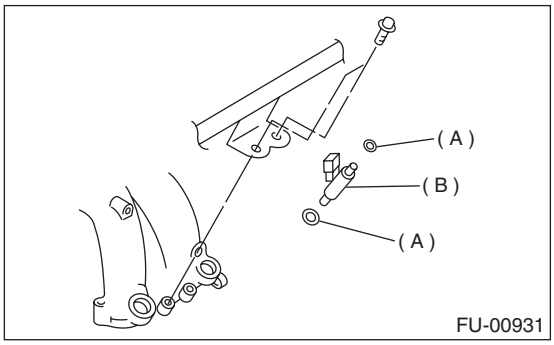

(A) O-ring
(B) Fuel injector

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

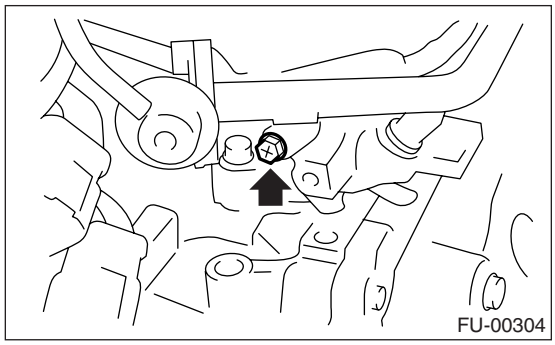

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

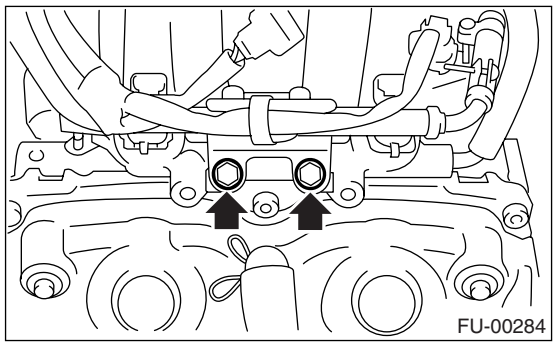

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

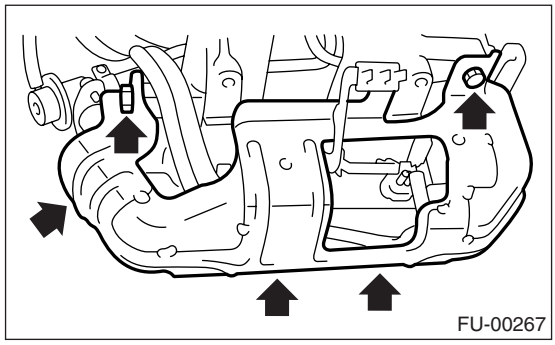

2. LH SIDE

Install in the reverse order of removal.

NOTE:
Replace the O-rings with new ones.

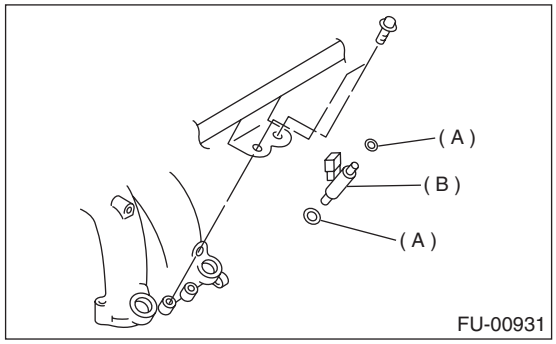

(A) O-ring
(B) Fuel injector

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

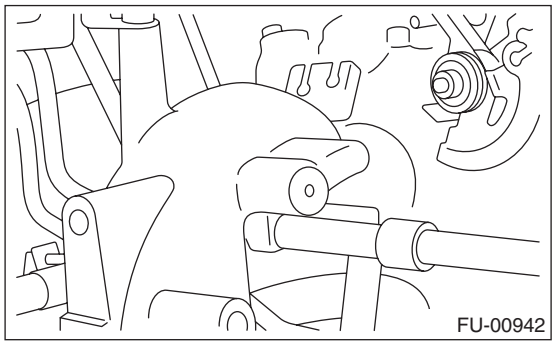

Tightening torque:
5.0 N·m (0.51 kgf-m, 3.7 ft-lb)

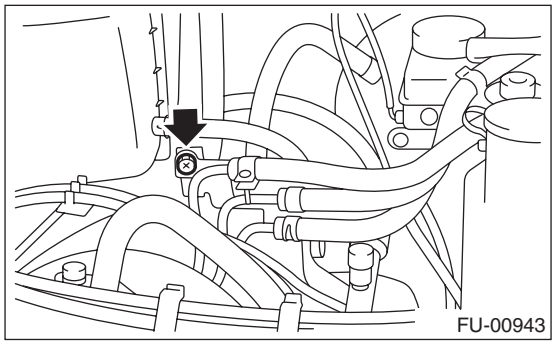

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

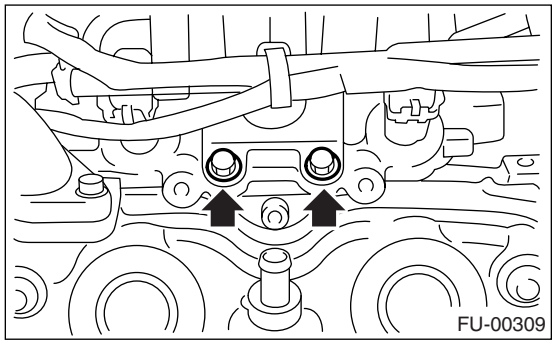

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

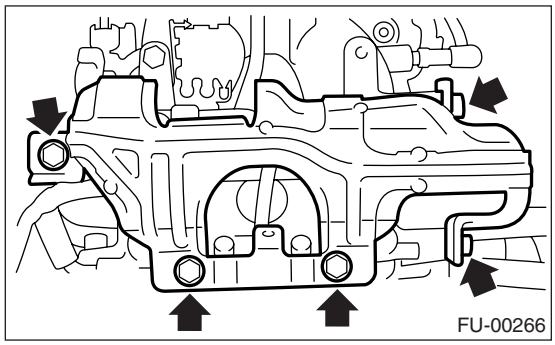

12.Oxygen Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

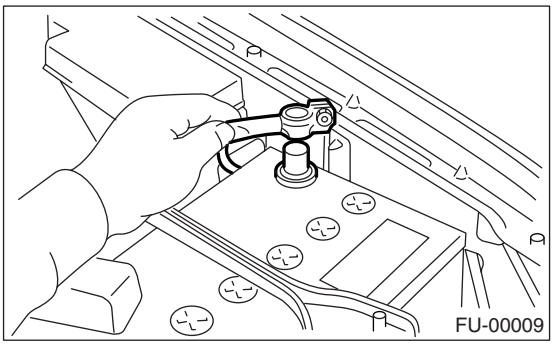

2) Disconnect the connector from oxygen sensor.

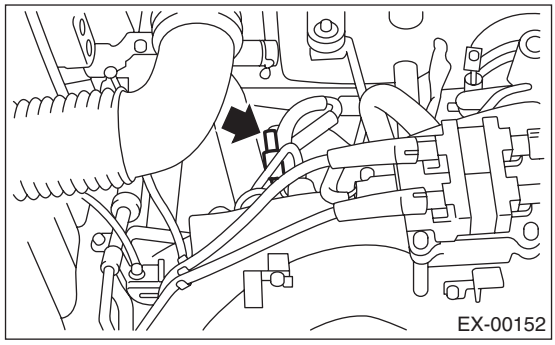

3) Lift-up the vehicle.
4) Apply SUBARU CRC or its equivalent to the threaded portion of oxygen sensor, and leave it for 1 minute or more.

SUBARU CRC (Part No. 004301003)

5) Remove the oxygen sensor.

CAUTION:
When removing the oxygen sensor, wait until the exhaust pipe cools, otherwise it will damage exhaust pipe.

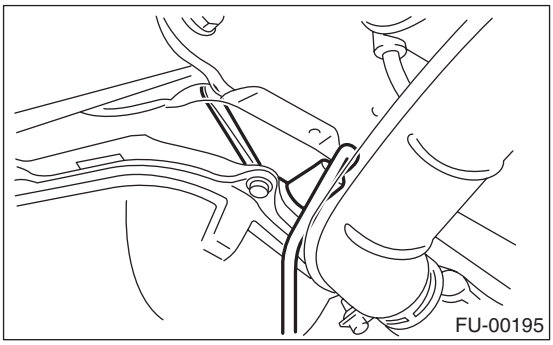

B: INSTALLATION

1) Before installing the oxygen sensor, apply anti-seize compound only to the threaded portion of oxygen sensor to make the next removal easier.

Anti-seize compound:
SS-30 by JET LUBE

CAUTION:
Never apply anti-seize compound to the protector of oxygen sensor.

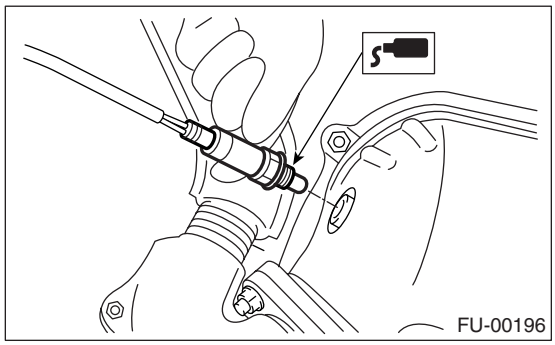

2) Install the oxygen sensor.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

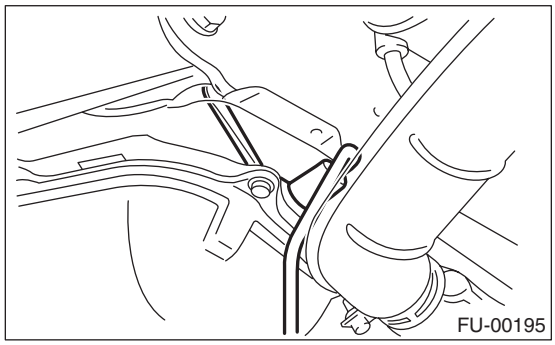

3) Lower the vehicle.
4) Connect the connector of oxygen sensor.

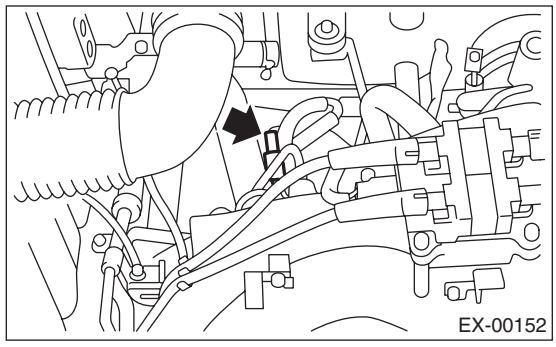

5) Connect the battery ground cable to battery.

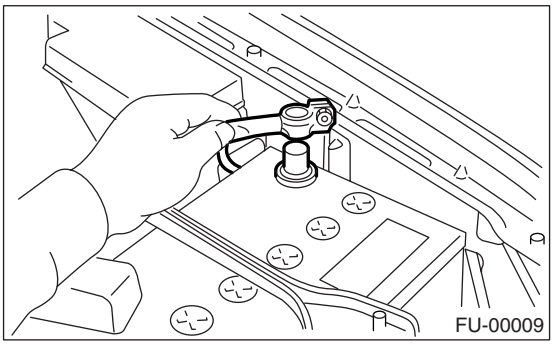

13.Engine Control Module (ECM)

A: REMOVAL

1) Disconnect the ground cable from battery.

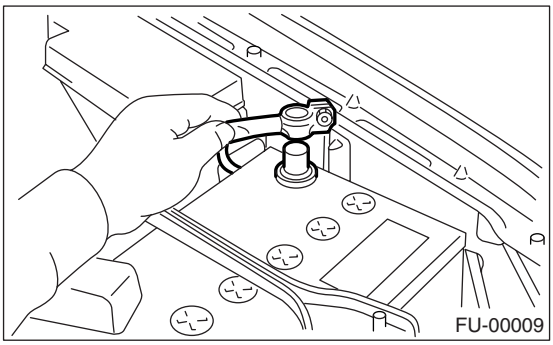

2) Remove the lower inner trim of passenger side. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
3) Detach the floor mat of front passenger seat.
4) Remove the protect cover.

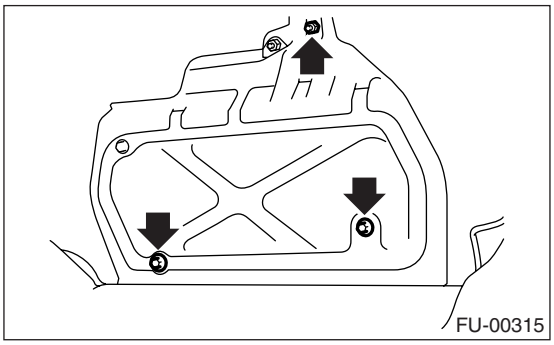

5) Remove the nuts (A) which hold the ECM to bracket.
6) Remove the clip (B) from bracket.

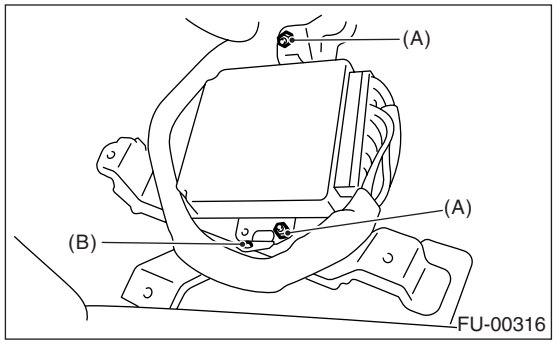

7) Disconnect the ECM connectors and take out the ECM.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage to fuel injection system.

Tightening torque:
5 N·m (0.51 kgf-m, 3.7 ft-lb)

14.Main Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

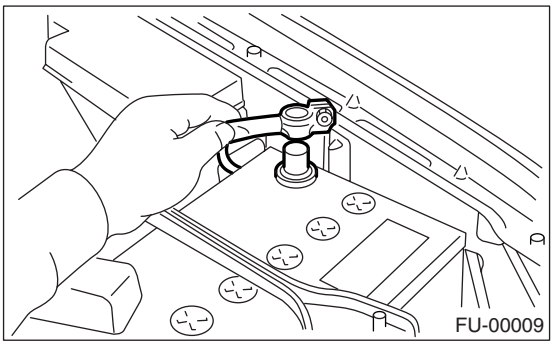

2) Remove the front side sill cover of passenger side.
3) Remove the bolt which holds the main relay bracket on body.
4) Disconnect the connectors from main relay.

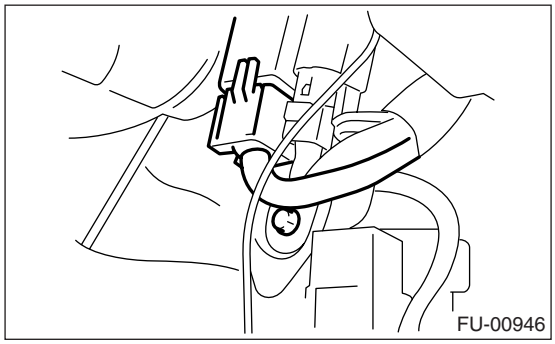

B: INSTALLATION

Install in the reverse order of removal.

15.Fuel Pump Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

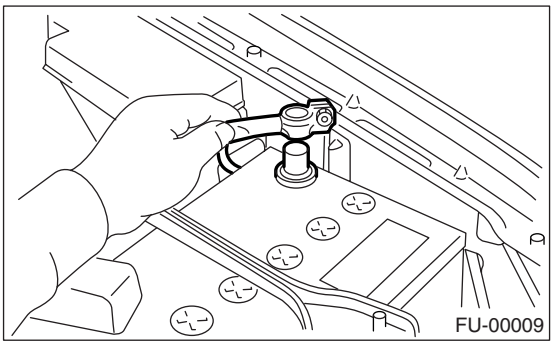

2) Remove the front side sill cover of passenger side .
3) Remove the bolt which holds the fuel pump relay bracket on body.
4) Disconnect the connector from fuel pump relay.

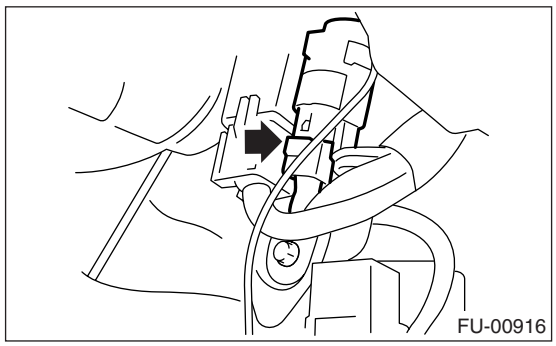

5) Remove the fuel pump relay from mounting bracket.

B: INSTALLATION

Install in the reverse order of removal.

16.Fuel

A: OPERATION

1. RELEASING OF FUEL PRESSURE

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Disconnect the connector from fuel pump relay.

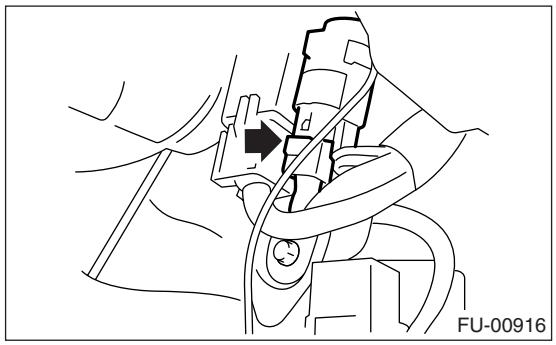

2) Start and run the engine until it stalls.
3) After the engine stalls, crank it for 5 more seconds.
4) Turn the ignition switch to OFF.

2. DRAINING FUEL

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

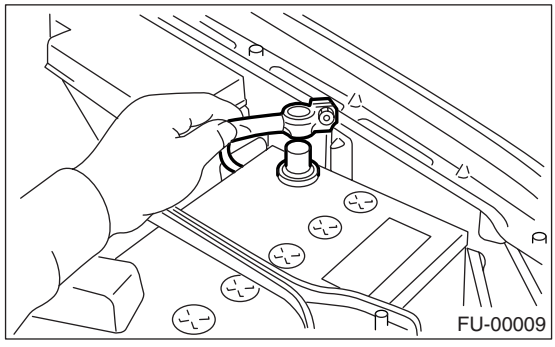

3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Lift-up the vehicle.
5) Drain fuel from fuel tank.
Set a container under the vehicle and remove the drain plug from fuel tank.
- 1.6 L and 2.0 L MODEL

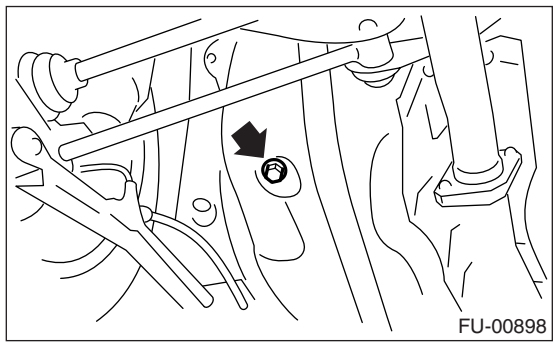

- 2.5 L MODEL

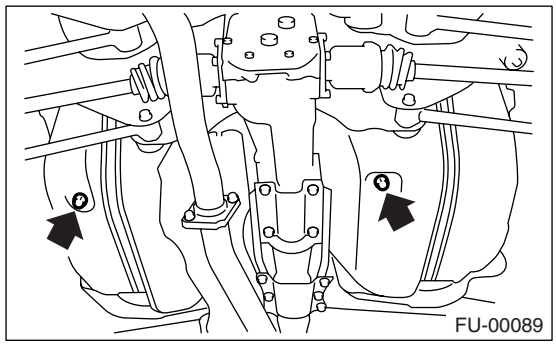

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

17.Fuel Tank

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Drain fuel from fuel tank. <Ref. to FU(H4SOw/oOBD)-46, DRAINING FUEL, OPERATION, Fuel.>
4) Remove the rear seat.
5) Disconnect the connector (A) of fuel tank cord to rear harness.
6) Push the grommet (B) which hold the fuel tank cord on floor panel down under body.

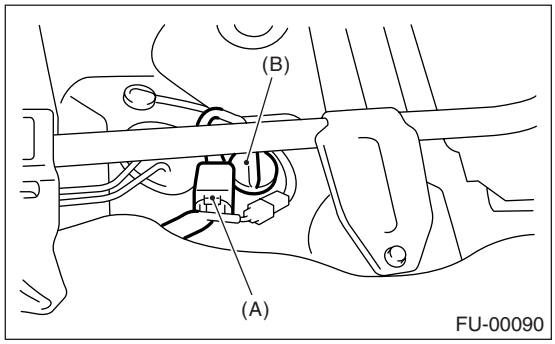

7) Remove the rear crossmember. <Ref. to RS-21, REMOVAL, Rear Crossmember.>
8) Disconnect the two-way valve hose (A) from two-way valve and disconnect the canister hose (B) from canister.

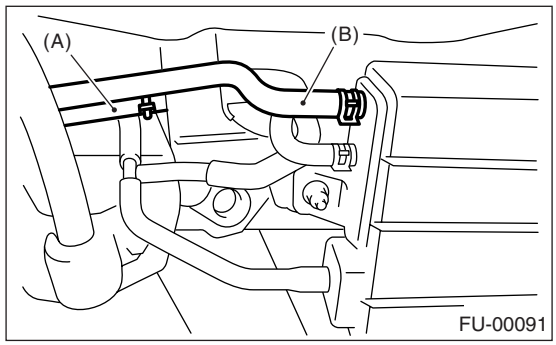

9) Loosen the clamp and disconnect the fuel filler hose and air vent hose from fuel filler pipe.

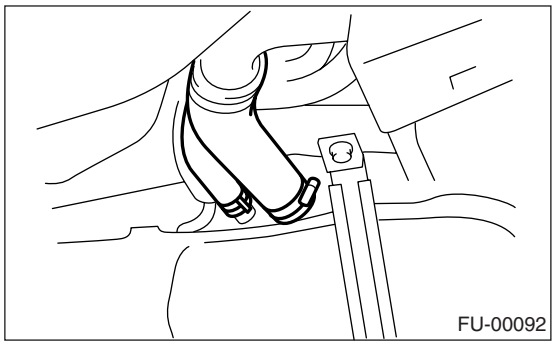

10) Move the clips, and then disconnect the quick connector. <Ref. to FU(H4SOw/oOBD)-62, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
11) Disconnect the fuel hoses.

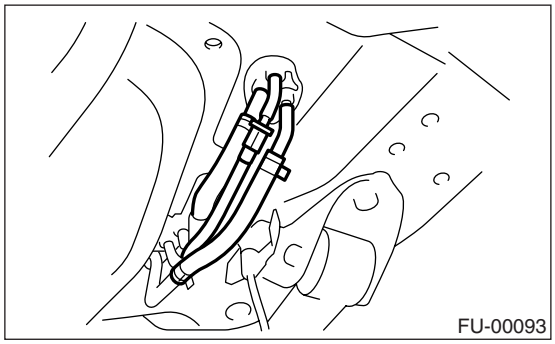

12) Support the fuel tank with transmission jack, remove the bolts from bands, and then dismount the fuel tank from vehicle.

WARNING:
A helper is required to perform this work.

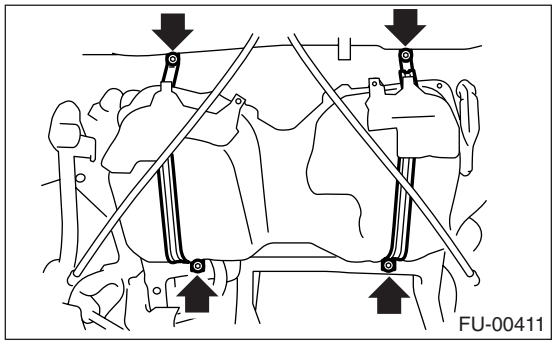

B: INSTALLATION

1) Support the fuel tank with transmission jack and push the fuel tank harness into access hole with grommet.
2) Set the fuel tank and temporarily tighten the bolts of fuel tank bands.

WARNING:
A helper is required to perform this work.

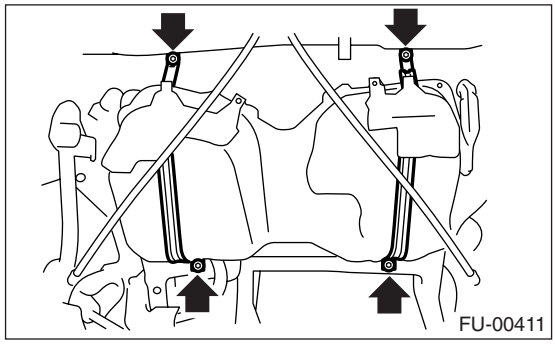

3) Connect the two-way valve hose (A) to two-way valve and connect the canister hose (B) to canister.

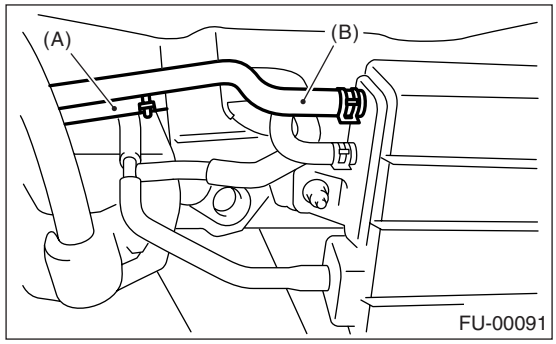

4) Connect the fuel filler hose and air vent hose.

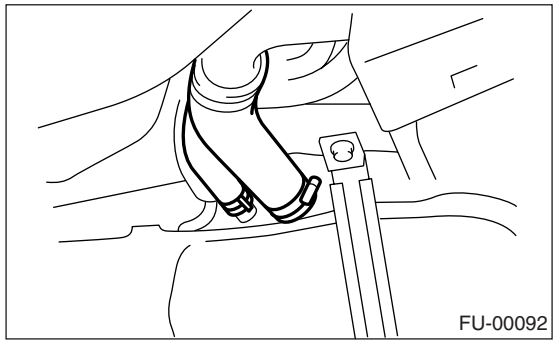

5) Connect the fuel hoses, and then secure them with clips and quick connector. <Ref. to FU(H4SOw/oOBD)-63, INSTALLATION, Fuel Delivery, Return and Evaporation Lines.>

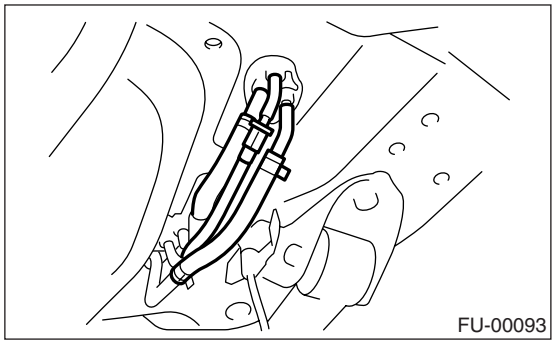

6) Tighten the band mounting bolts.

Tightening torque:
33 N·m (3.4 kgf-m, 24.3 ft-lb)

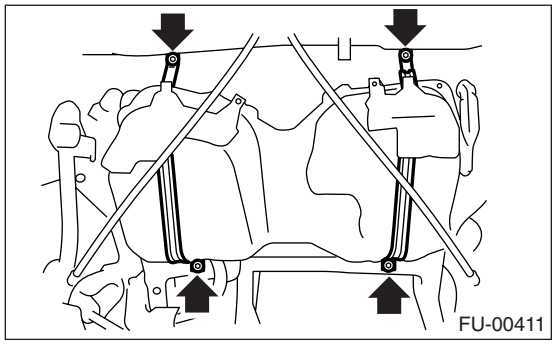

7) Install the rear crossmember. <Ref. to RS-21, INSTALLATION, Rear Crossmember.>
8) Connect the connectors (A) to fuel tank cord and plug the service hole with grommet (B).

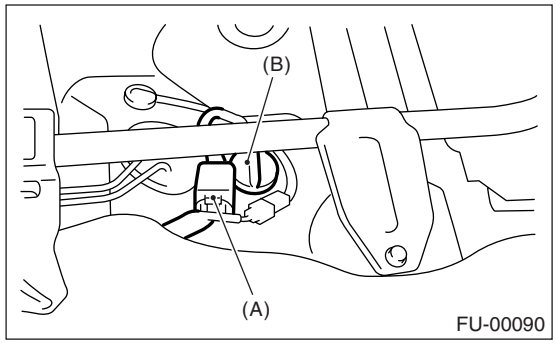

9) Set the rear seat and floor mat.

10) Connect the connector to the fuel pump relay.

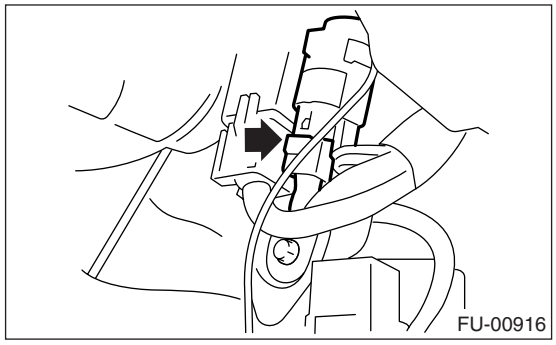

C: INSPECTION

1) Make sure there are no cracks, holes, or other damage on fuel tank.
2) Make sure the fuel hoses and fuel pipes are not cracked and the connections are tightened firmly.

18.Fuel Filler Pipe

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Disconnect the ground cable from battery.

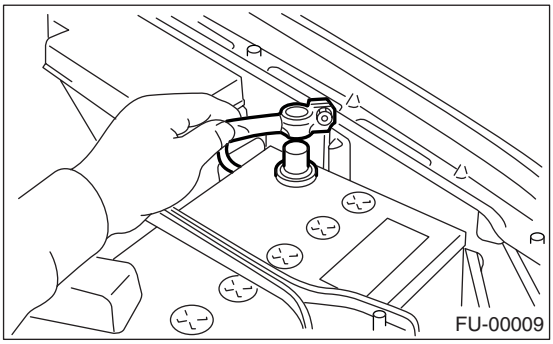

5) Remove the screws holding packing in place.

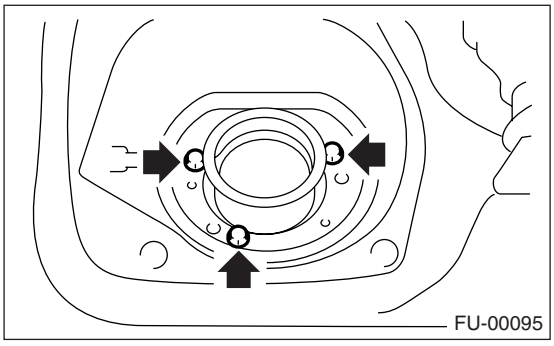

6) Remove the nuts of rear wheel RH.
7) Lift-up the vehicle.
8) Remove the rear wheel RH.

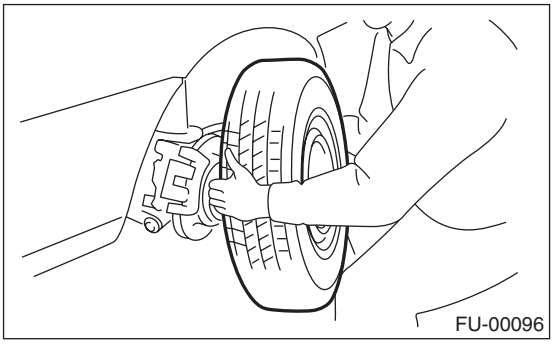

9) Drain fuel from the fuel tank. Set a container under the vehicle and remove the drain plug from fuel tank.
- 1.6 L and 2.0 L MODEL

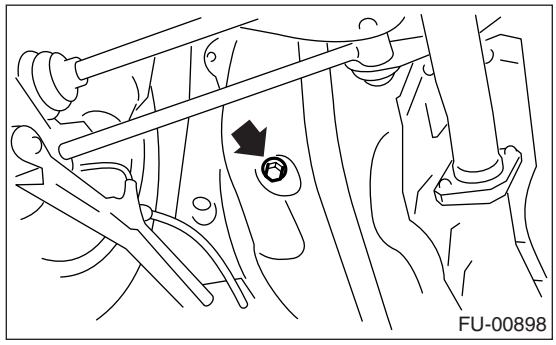

- 2.5 L MODEL

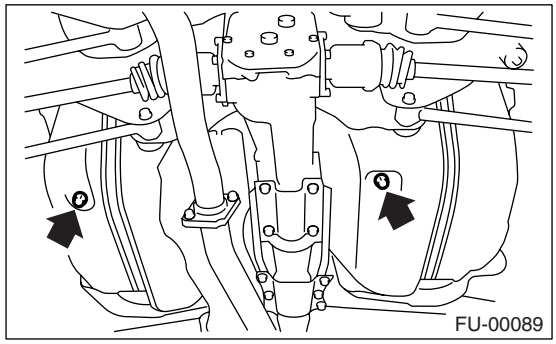

10) Tighten the fuel drain plug and then install the front right side tank cover.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

11) Remove the fuel filler pipe protector.

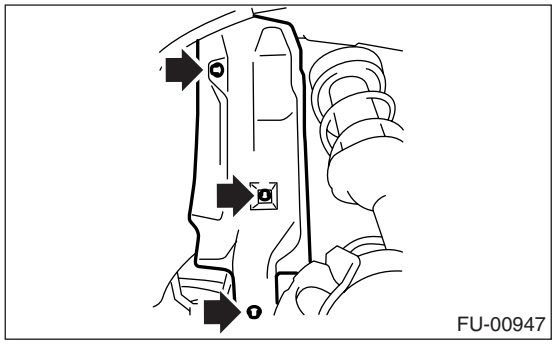

12) Separate the evaporation hoses from clip of fuel filler pipe.

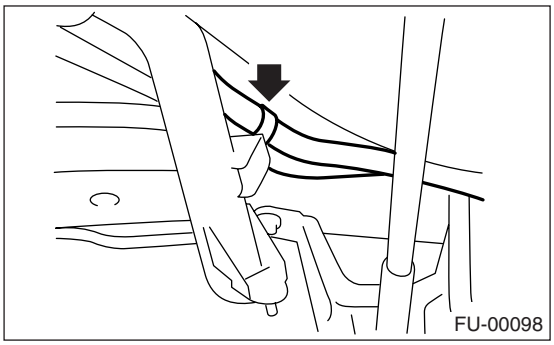

13) Disconnect the air vent hose from fuel filler pipe.

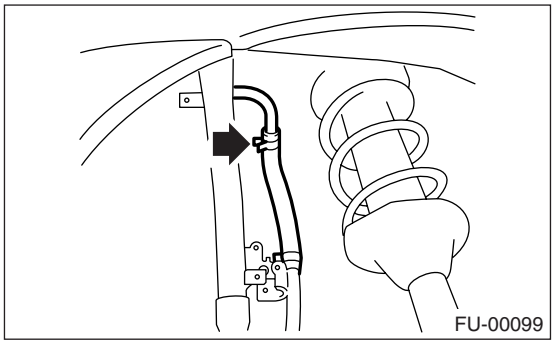

14) Remove the bolt which holds the fuel filler pipe bracket on body.

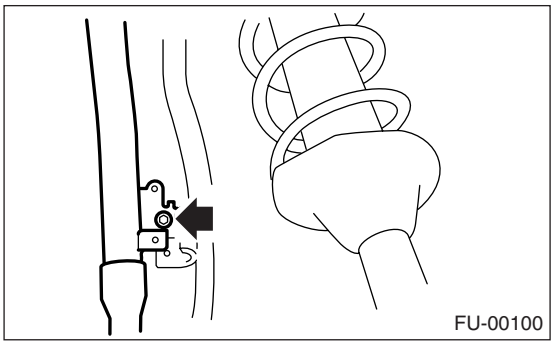

15) Loosen the clamp and separate the fuel filler hose (A) from fuel filler pipe.
16) Move the clip and separate the air vent hose (B).

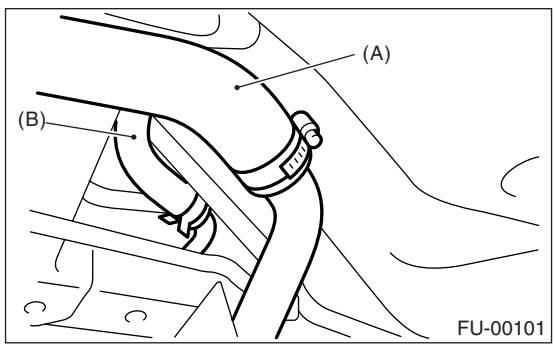

17) Remove the fuel filler pipe to under side of vehicle.
18) Remove the air vent pipe together with clip from body.

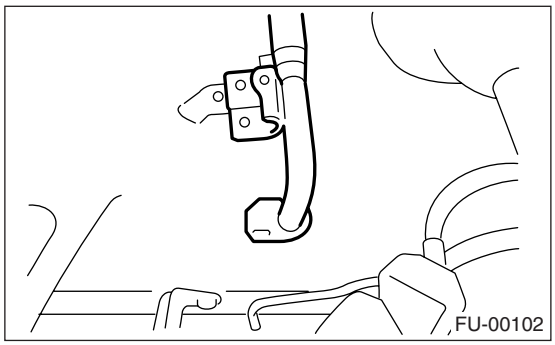

B: INSTALLATION

1) Open the fuel filler flap lid.
2) Set the fuel saucer (A) with rubber packing (C) and insert the fuel filler pipe into hole from the inner side of apron.
3) Align the holes in fuel filler pipe neck, set the cup (B), and then tighten the screws.

NOTE:
If the edges of rubber packing are folded toward inside, straighten it with a screwdriver.

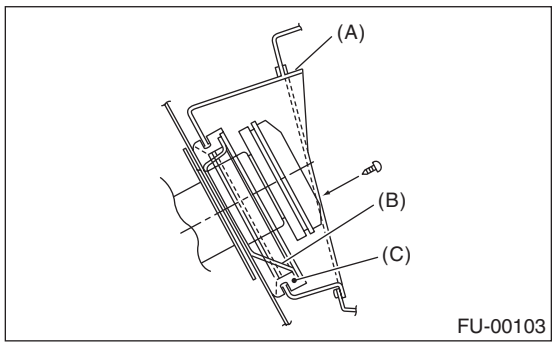

4) Install the air vent pipe.

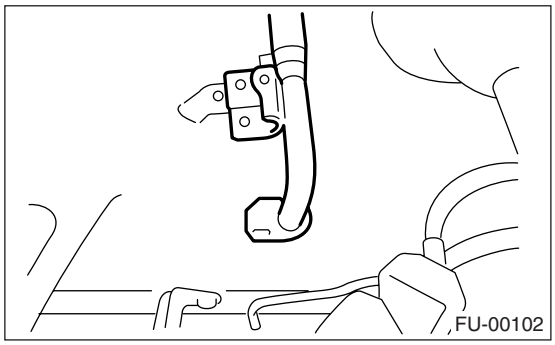

5) Connect the air vent hose to the fuel filler pipe.

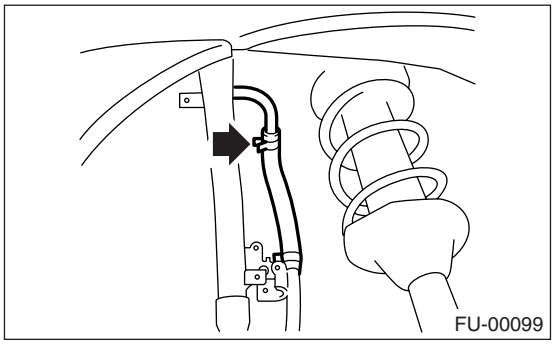

6) Insert the fuel filler hose (A) approx. 35 to 40 mm (1.38 to 1.57 in) over the lower end of fuel filler pipe and tighten the clamp.

CAUTION:
Do not allow the clips to touch the air vent hose (B) and rear suspension crossmember.

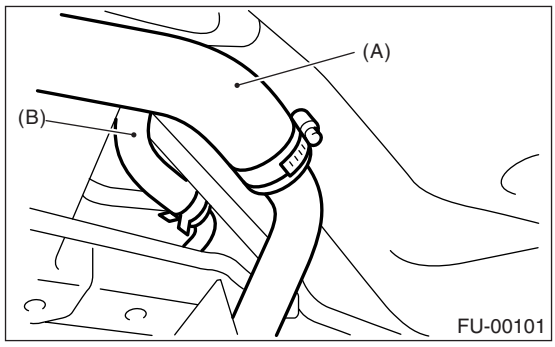

7) Insert the air vent hose approx. 25 to 30 mm (0.98 to 1.18 in) into the lower end of air vent pipe and hold clip.

L = 27.5±2.5 mm (1.083±0.098 in)

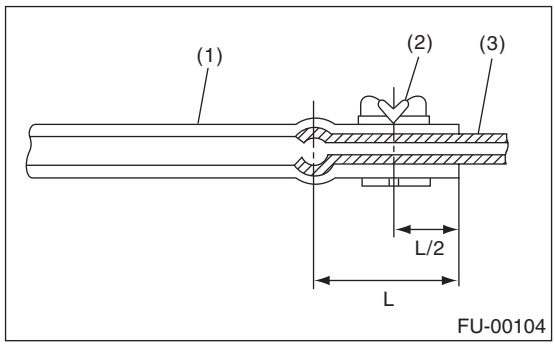

(1) Hose
(2) Clip
(3) Pipe

8) Tighten the bolt which holds the fuel filler pipe bracket on body.

Tightening torque:
7.5 N·m (0.75 kgf-m, 5.4 ft-lb)

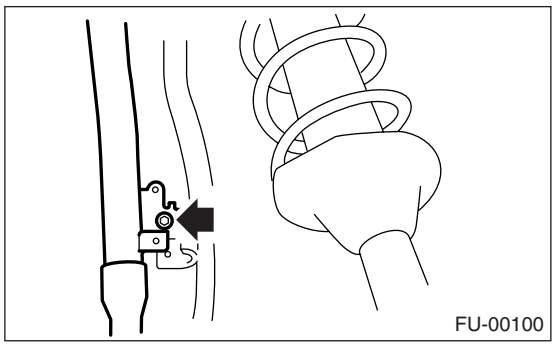

9) Tighten the bolts which hold the evaporation hoses onto clip of fuel filler pipe.

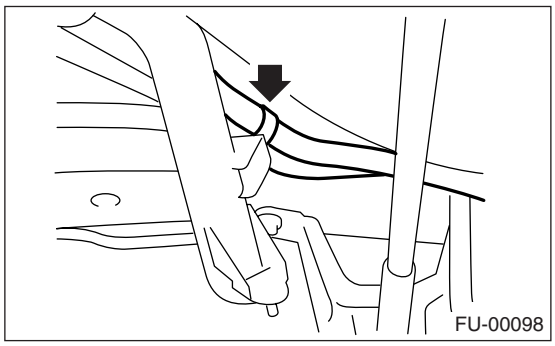

10) Install the fuel filler pipe protector.

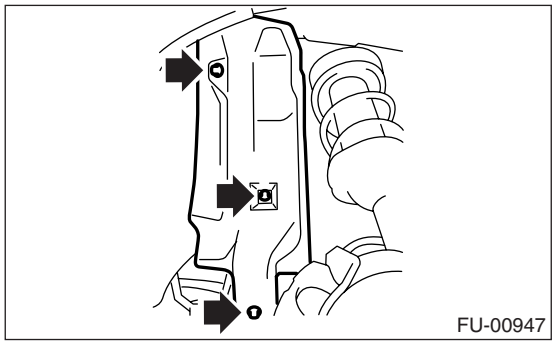

11) Install the rear wheel RH.

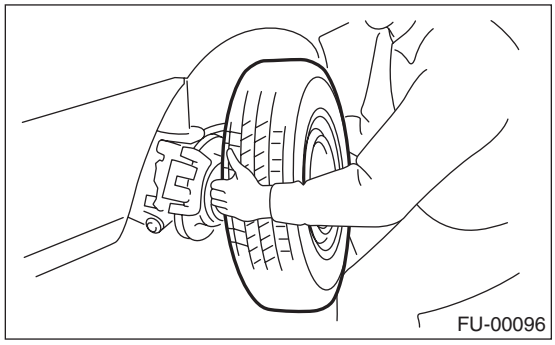

12) Lower the vehicle.
13) Tighten the wheel nuts.

14) Connect the connector to the fuel pump relay.

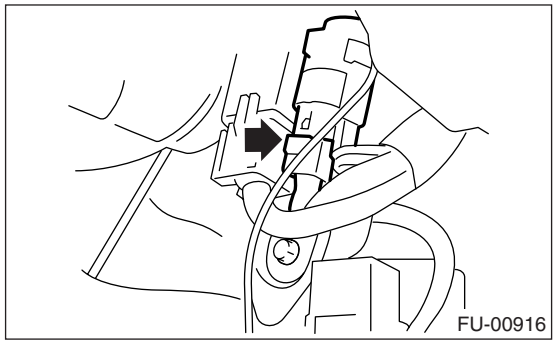

15) Connect the battery ground cable to battery.

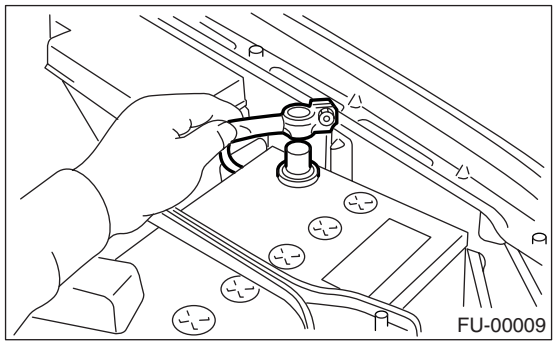

19.Fuel Pump

A: REMOVAL

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

NOTE:
Fuel pump assembly consists of fuel pump and fuel level sensor.

- **1.6 L and 2.0 L MODEL**

1) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

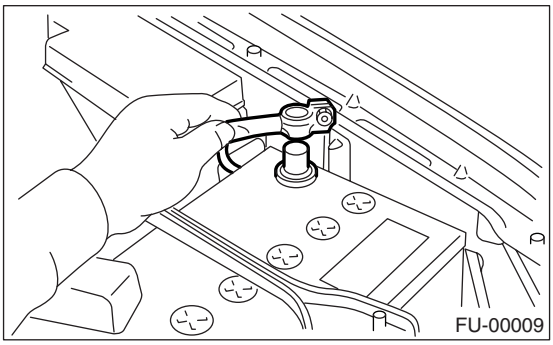

4) Lift-up the vehicle.
5) Drain fuel from fuel tank. Set a container under vehicle and remove the drain plug from fuel tank.

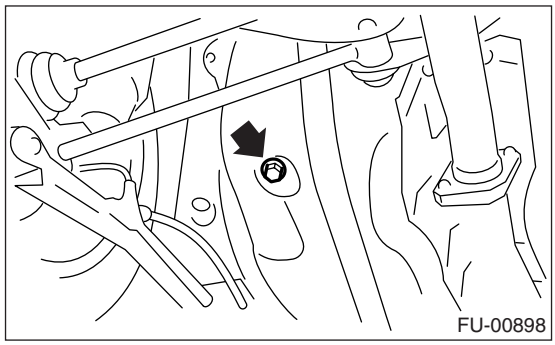

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

7) Raise the rear seat and turn the floor mat up.
8) Remove the access hole lid.

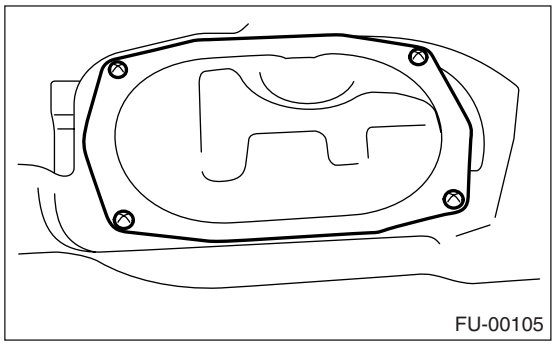

9) Disconnect the connector from fuel pump.

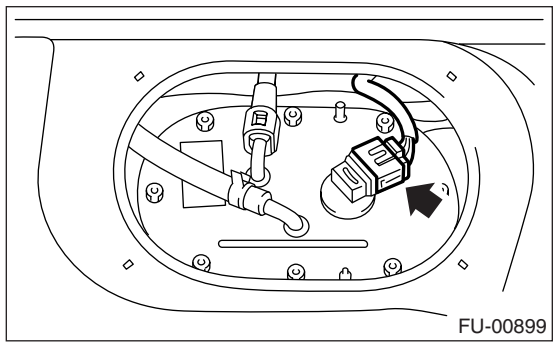

10) Disconnect the quick connector and then disconnect the fuel delivery hose (A). <Ref. to FU(H4SOw/oOBD)-62, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
11) Move the clip and then disconnect the fuel return hose (B).

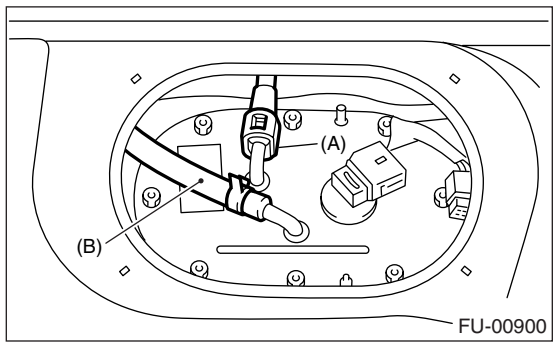

12) Remove the nuts which install the fuel pump assembly onto fuel tank.

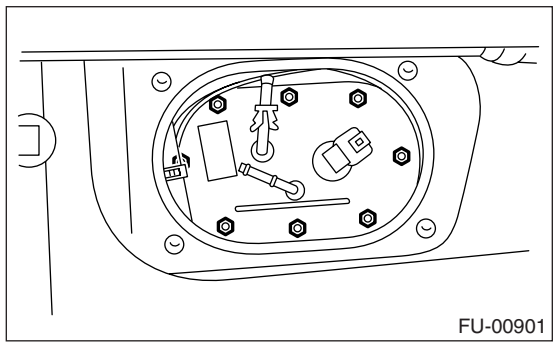

13) Take off the fuel pump assembly from fuel tank.

• **2.5 L MODEL**

1) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

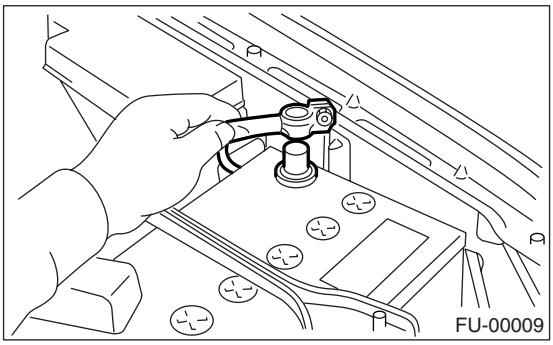

4) Lift-up the vehicle.
5) Drain fuel from fuel tank. Set a container under the vehicle and remove the drain plug from fuel tank.

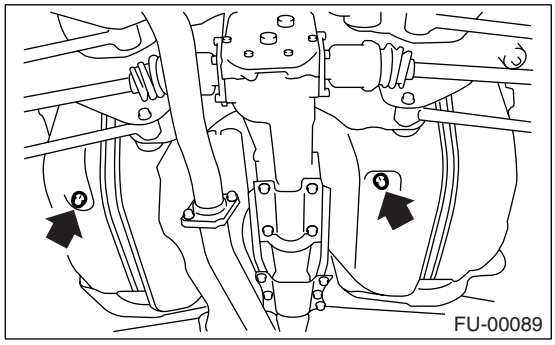

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

7) Raise the rear seat and turn the floor mat up.
8) Remove the access hole lid.

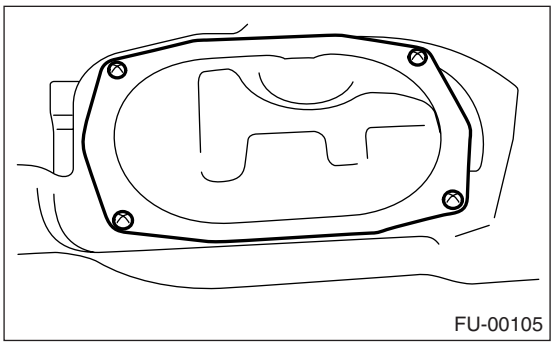

9) Disconnect the connector from fuel pump.

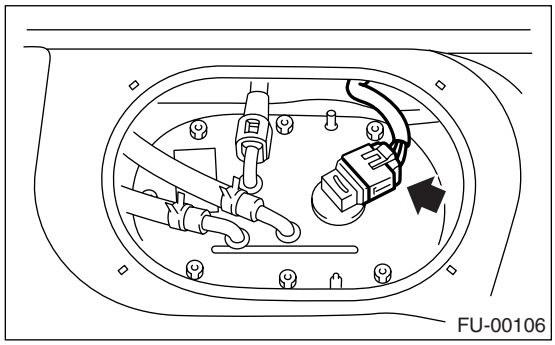

10) Disconnect the quick connector, and then disconnect the fuel delivery hose (A). <Ref. to FU(H4SOw/oOBD)-62, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
11) Move the clips, and then disconnect the fuel return hose (B) and jet pump hose (C).

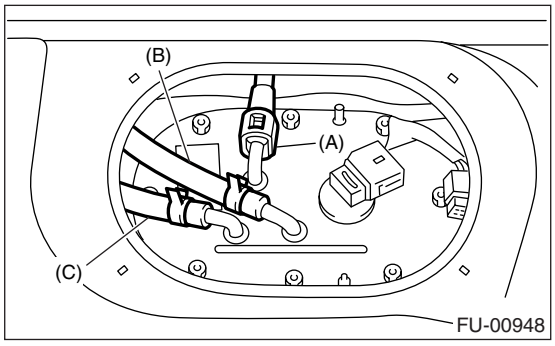

12) Remove the nuts which install the fuel pump assembly onto fuel tank.

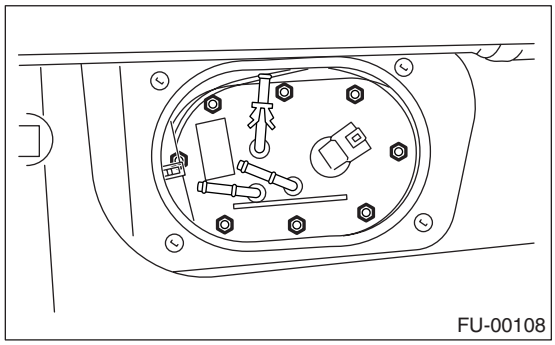

13) Take off the fuel pump assembly from fuel tank.

B: INSTALLATION

Install in the reverse order of removal. Do the following:

NOTE:
Always use new gaskets.

(1) Ensure the sealing portion is free from fuel or foreign particles before installation.
(2) Tighten the nuts to specified torque in alphabetical sequence shown in the figure.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

- 1.6 L and 2.0 L MODEL

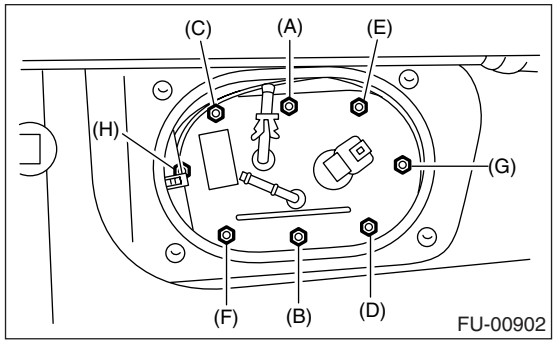

- 2.5 L MODEL

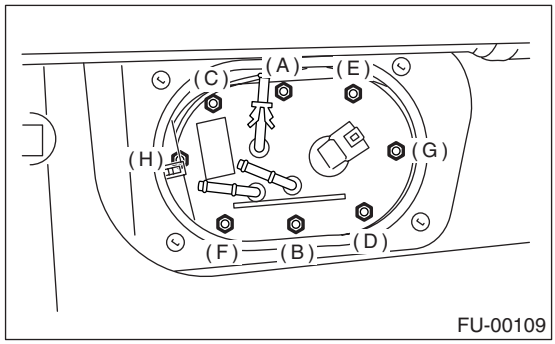

C: INSPECTION

Connect the lead harness to connector terminal of fuel pump and apply battery power supply to check whether the pump operates.

WARNING:
• Wipe off the fuel completely.
• Keep the battery as far apart from fuel pump as possible.
• Be sure to turn the battery supply ON and OFF on battery side.
• Do not run the fuel pump for a long time under non-load condition.

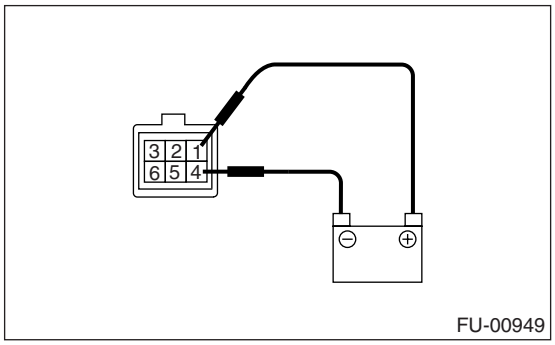

20.Fuel Level Sensor

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

NOTE:
Fuel level sensor is built in the fuel pump assembly.

1) Remove the fuel pump assembly. <Ref. to FU(H4SOw/oOBD)-54, REMOVAL, Fuel Pump.>
2) Disconnect the connector from fuel pump bracket.
- 1.6 L and 2.0 L MODEL

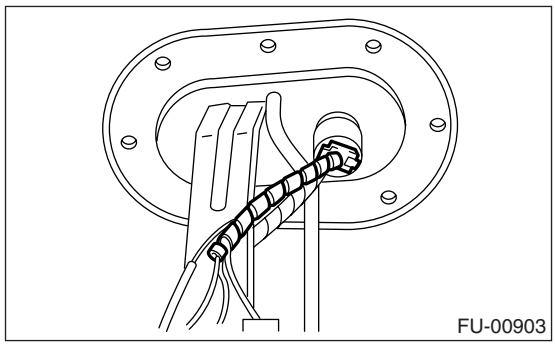

- 2.5 L MODEL

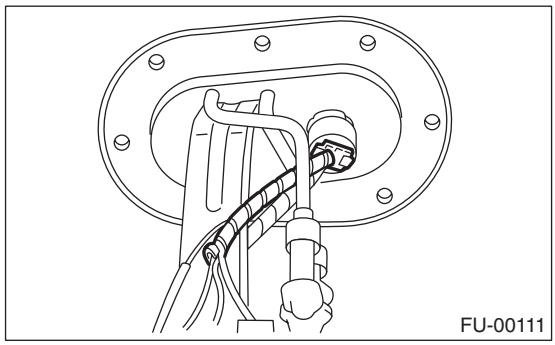

3) Remove the bolt which installs the fuel level sensor on mounting bracket.
- 1.6 L and 2.0 L MODEL

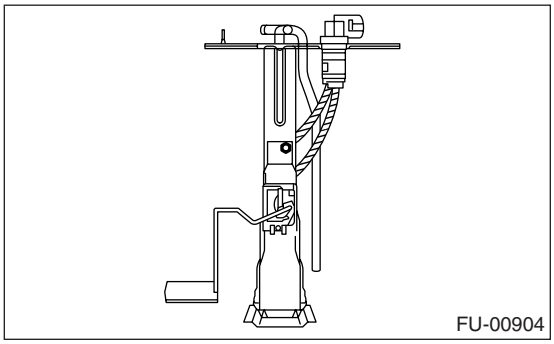

- 2.5 L MODEL

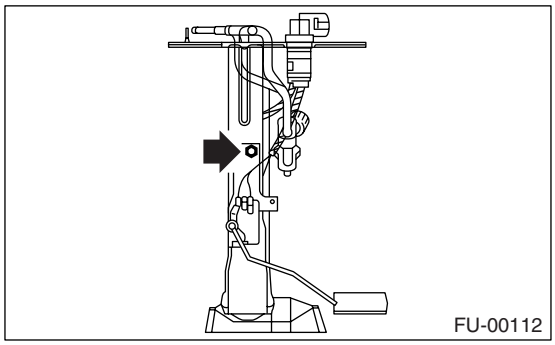

B: INSTALLATION

Install in the reverse order of removal.

21.Fuel Sub Level Sensor

A: REMOVAL

NOTE:
Fuel sub level sensor is equipped to only 2.5 L model.

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Disconnect the ground cable from battery.

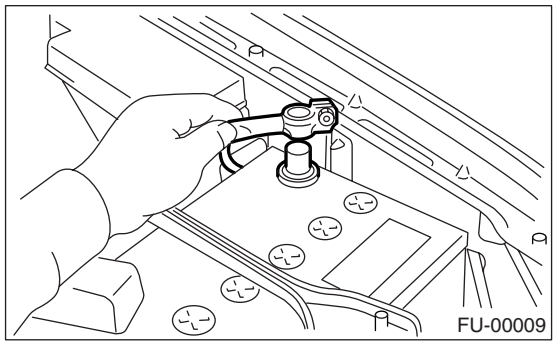

2) Lift-up the vehicle.
3) Drain fuel from fuel tank. Set a container under vehicle and remove the drain plug from fuel tank.

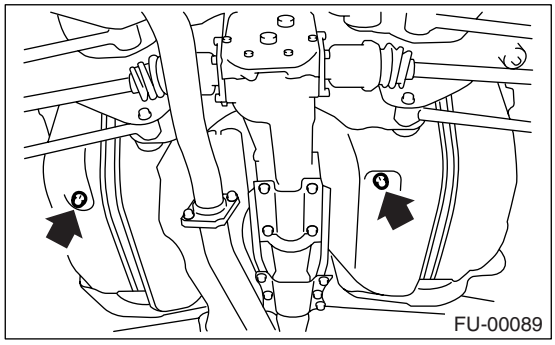

4) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

5) Remove the rear seat.
6) Remove the service hole cover.

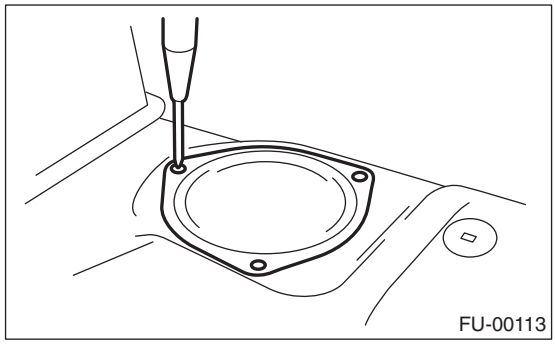

7) Disconnect the connector from fuel sub level sensor.
8) Disconnect the fuel jet pump hose.

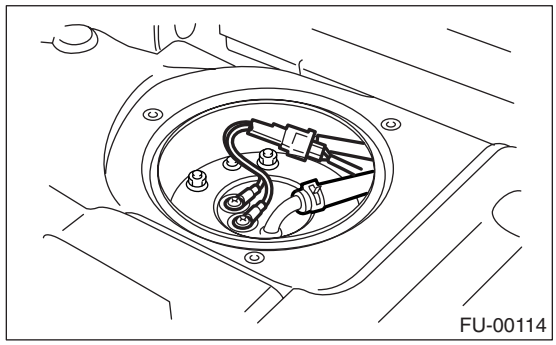

9) Remove the bolts which install the fuel sub meter unit on fuel tank.

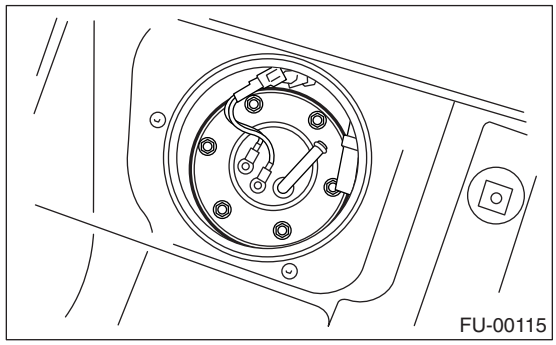

10) Remove the fuel sub level sensor.

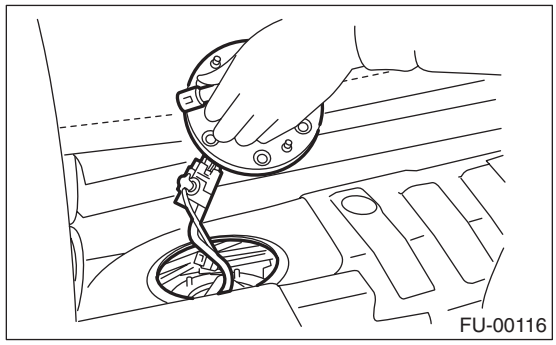

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

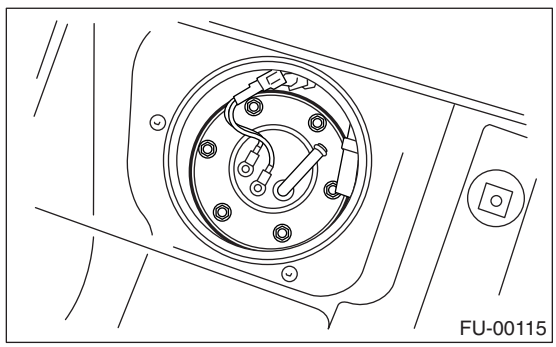

22.Fuel Filter

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Disconnect the fuel delivery hoses from fuel filter.

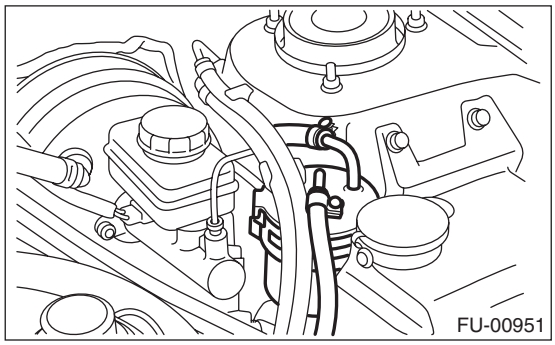

3) Remove the filter from holder.

B: INSTALLATION

CAUTION:
- **If fuel hoses are damaged at connecting portion, replace them with new ones.**
- **If clamps are badly damaged, replace them with new ones.**

1) Install in the reverse order of removal.
2) Tighten the hose clamp screws.

Tightening torque:
1.25 N·m (0.13 kgf-m, 0.94 ft-lb)

C: INSPECTION

1) Check the inside of fuel filter for dirt and water sediment.
2) If it is clogged, or if replacement interval has been reached, replace it.
3) If water is found in it, shake and expel the water from inlet port.

23.Fuel Cut Valve

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Remove the fuel tank. <Ref. to FU(H4SOw/oOBD)-47, REMOVAL, Fuel Tank.>
2) Move the clip and disconnect the evaporation hose from fuel cut valve.

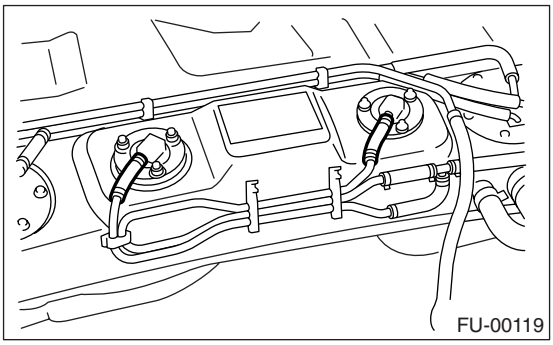

3) Remove the bolts which install the fuel cut valve.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
For tightening torque, refer to “COMPONENT”.
<Ref. to FU(H4SOw/oOBD)-3, COMPONENT, General Description.>

24.Fuel Damper Valve

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Remove the fuel damper valve from fuel return line.

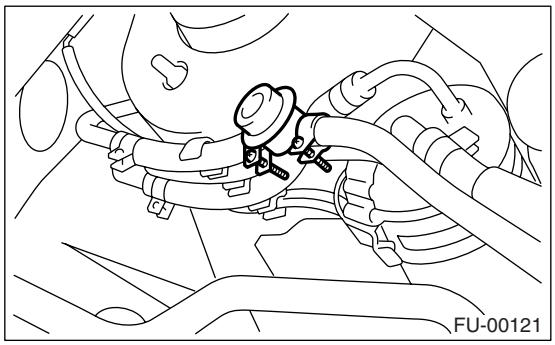

B: INSTALLATION

Install in the reverse order of removal.

25.Fuel Delivery, Return and Evaporation Lines

A: REMOVAL

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4SOw/oOBD)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Remove the floor mat. <Ref. to EI-55, REMOVAL, Floor Mat.>
5) Remove the fuel delivery pipes and hoses, fuel return pipes and hoses, evaporation pipes and hoses.

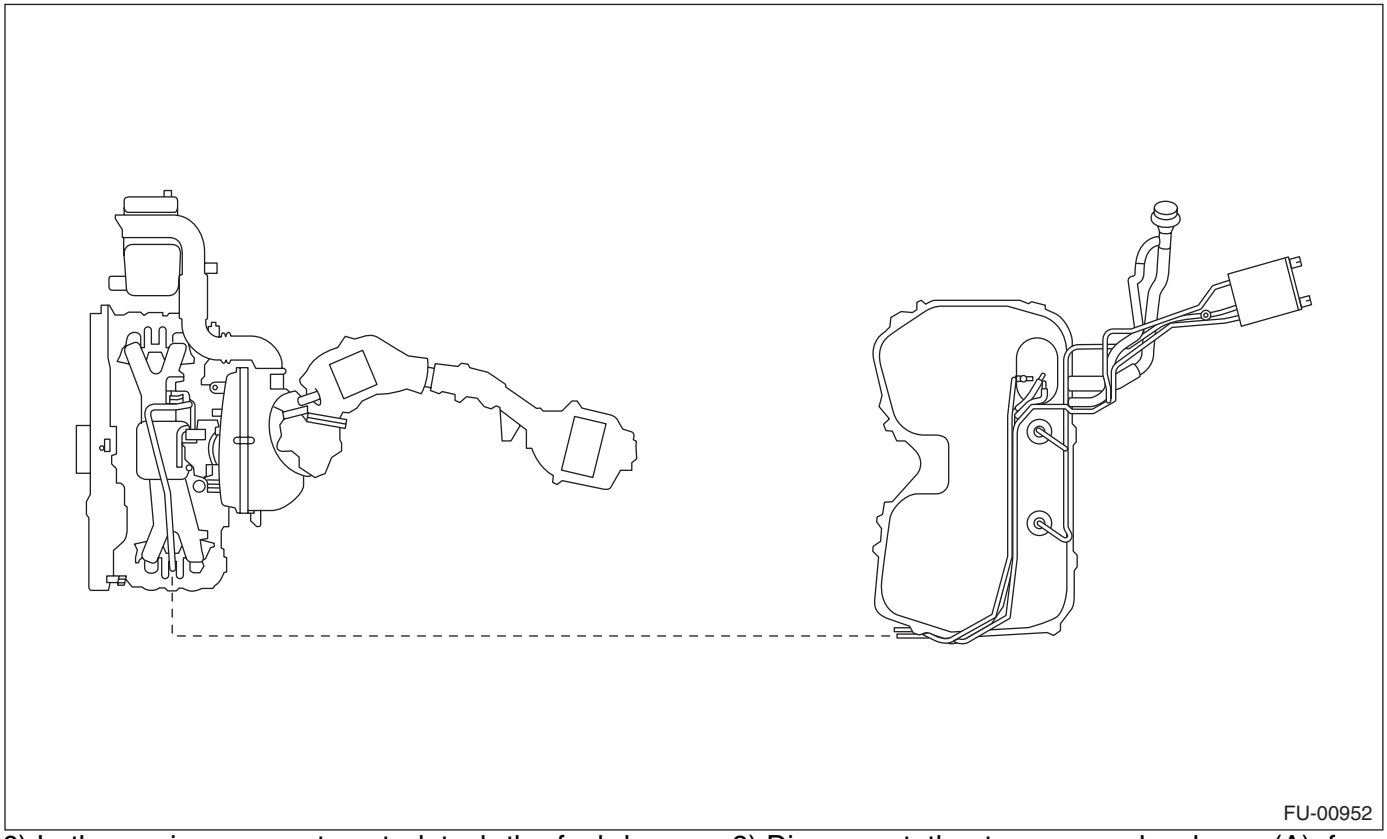
FU-00952

6) In the engine compartment, detach the fuel delivery hoses, return hoses and evaporation hose.

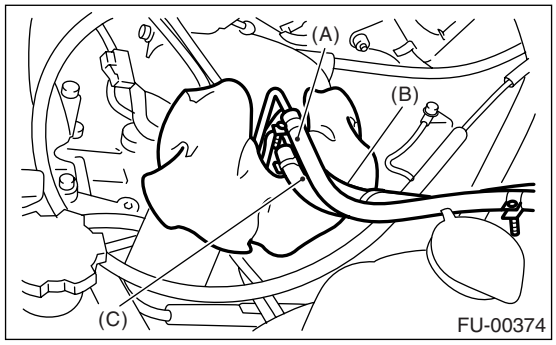

FU-00374

(A) Fuel delivery hose
(B) Return hose
(C) Evaporation hose

7) Lift-up the vehicle.

8) Disconnect the two-way valve hose (A) from two-way valve and disconnect the canister hose (B) from canister.

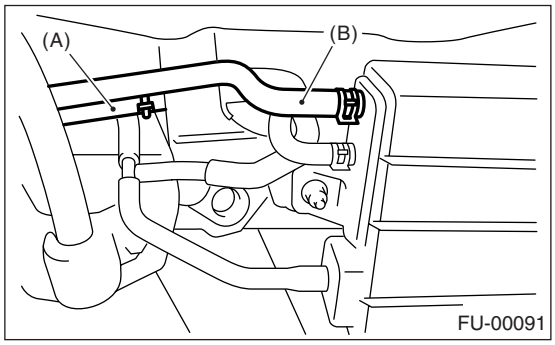

FU-00091

9) Separate the quick connector on fuel delivery line.
(1) Clean the pipe and connector, if they are covered with dust.
(2) Hold the connector (A) and push retainer (B) down.
(3) Pull out the connector (A) from retainer (B).

NOTE:
Replace the retainer with a new one.

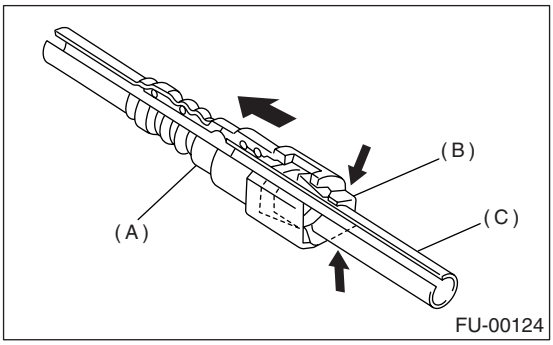

(A) Connector
(B) Retainer
(C) Pipe

B: INSTALLATION

1) Connect the quick connector on fuel delivery line.

NOTE:
- Always use a new retainer.
- Make sure the connected portion is not damaged or not covered with dust. If necessary, clean the seal surface of pipe.

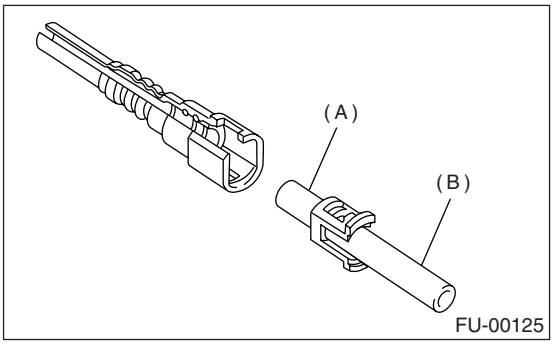

(A) Seal surface
(B) Pipe

(1) Set the new retainer (B) to connector (A).
(2) Push the pipe into connector completely.

NOTE:
At this time, two clicking sounds are heard.

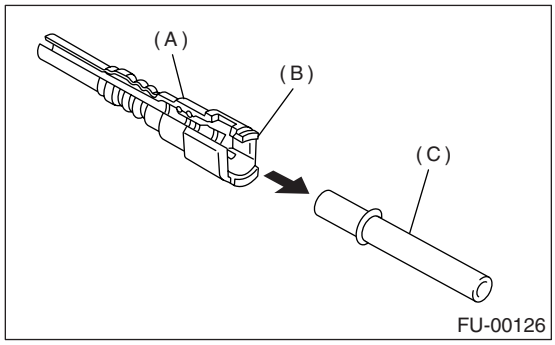

(A) Connector
(B) Retainer
(C) Pipe

CAUTION:
• Pull the connector to ensure it is connected securely.
• Ensure the two retainer pawls are engaged in their mating positions in connector.
• Be sure to inspect the hoses and their connections for any leakage of fuel.

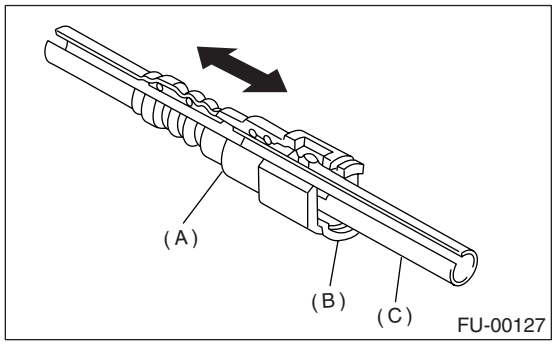

(A) Connector
(B) Retainer
(C) Pipe

2) Connect the fuel delivery hose to pipe with an overlap of 20 to 25 mm (0.79 to 0.98 in).
Type A: When the fitting length is specified.
Type B: When the fitting length is not specified.

ℓ : 2.5±1.5 mm (0.098±0.059 in)

L: 22.5±2.5 mm (0.886±0.098 in)

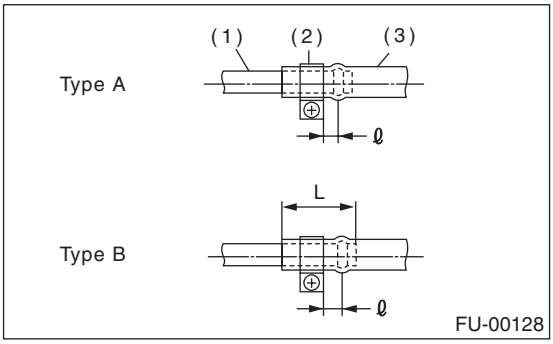

(1) Fitting
(2) Clamp
(3) Hose

3) Connect the evaporation hose to pipe by approx. 15 mm (0.59 in) from hose end.

L = 17.5±2.5 mm (0.689±0.098 in)

CAUTION:
Be sure to inspect the hoses and their connections for any leakage of fuel.

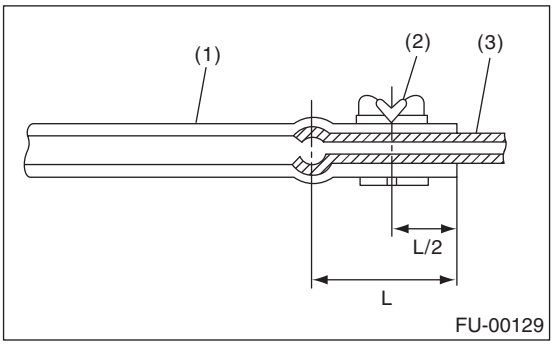

(1) Hose
(2) Clip
(3) Pipe

C: INSPECTION

1) Make sure there are no cracks on fuel pipes and fuel hoses.
2) Make sure the fuel pipe and fuel hose connections are tightened firmly.

26.Fuel System Trouble in General

A: INSPECTION

Trouble and possible cause		Corrective action
1. Insufficient fuel supply to injector		
1)	Fuel pump will not operate.	
	❍ Defective terminal contact.	Inspect connections, especially ground, and tighten securely.
	❍ Trouble in electromagnetic or electronic circuit parts.	Replace the fuel pump.
2)	Lowering of fuel pump function.	Replace the fuel pump.
3)	Clogged dust or water in fuel filter.	Replace the fuel filter, clean or replace fuel tank.
4)	Clogged or bent fuel pipe or hose.	Clean, correct or replace the fuel pipe or hose.
5)	Air is mixed in fuel system.	Inspect or retighten each connection part.
6)	Clogged or bent breather tube or pipe.	Clean, correct or replace the air breather tube or pipe.
7)	Damaged diaphragm of pressure regulator.	Replace.
2. Leakage or blow out fuel		
1)	Loosened joints of fuel pipe.	Retightening.
2)	Cracked fuel pipe, hose and fuel tank.	Replace.
3)	Defective welding part on fuel tank.	Replace.
4)	Defective drain packing of fuel tank.	Replace.
5)	Clogged or bent air breather tube or air vent tube.	Clean, correct or replace the air breather tube or air vent tube.
3. Gasoline smell inside of compartment		
1)	Loose joints at air breather tube, air vent tube and fuel filler pipe.	Retightening.
2)	Defective packing air tightness on fuel saucer.	Correct or replace the packing.
3)	Cracked fuel separator.	Replace the separator.
4)	Inoperative fuel pump modulator or circuit.	Replace.
4. Defective fuel meter indicator		
1)	Defective operation of fuel meter unit.	Replace.
2)	Defective operation of fuel meter.	Replace.
5. Noise		
1)	Large operation noise or vibration of fuel pump.	Replace.

NOTE:
• When the vehicle is left unattended for an extended period of time, water may accumulate in the fuel tank. To prevent water condensation.
(1) Top off the fuel tank or drain the fuel completely.
(2) Drain water condensation from the fuel filter.
• Refilling the fuel tank.
Refill the fuel tank while there is still some fuel left in the tank.
• Protecting the fuel system against freezing and water condensation.
(3) Cold areas
In snow-covered areas, mountainous areas, skiing areas, etc. where ambient temperatures drop below 0°C (32°F) throughout the winter season, use an anti-freeze solution in the cooling system. Refueling will also complement the effect of anti-freeze solution each time the fuel level drops to about one-half. After the winter season, drain water which may have accumulated in the fuel filter and fuel tank in the manner same as that described under “Affected areas” below.
(4) Affected areas
When water condensation is notched in the fuel filter, drain water from both the fuel filter and fuel tank or use a water removing agent (or anti-freeze solution) in the fuel tank.
• Observe the instructions, notes, etc., indicated on the label affixed to the anti-freeze solution (water removing agent) container before use.

EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)
EC(H4SOw/oOBD)

Page

1. General Description 2
2. Front Catalytic Converter 3
3. Rear Catalytic Converter 4
4. Canister 5
5. Purge Control Solenoid Valve 6
6. Two-way Valve 7

1. General Description

A: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Front Catalytic Converter

A: REMOVAL

The front catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for center exhaust pipe. <Ref. to EX(H4SOw/oOBD)-9, REMOVAL, Center Exhaust Pipe.>

B: INSTALLATION

The front catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for center exhaust pipe. <Ref. to EX(H4SOw/oOBD)-9, INSTALLATION, Center Exhaust Pipe.>

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

3. Rear Catalytic Converter

A: REMOVAL

The rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the removal procedures are the same as those for center exhaust pipe. <Ref. to EX(H4SOw/oOBD)-9, REMOVAL, Center Exhaust Pipe.>

B: INSTALLATION

The rear catalytic converter and center exhaust pipe are integrated into one unit. Therefore, the installation procedures are the same as those for center exhaust pipe. <Ref. to EX(H4SOw/oOBD)-9, INSTALLATION, Center Exhaust Pipe.>

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

4. Canister

A: REMOVAL

1) Lift-up the vehicle.
2) Loosen the two clamps which hold the two canister hoses, and then disconnect the three evaporation hoses from canister.

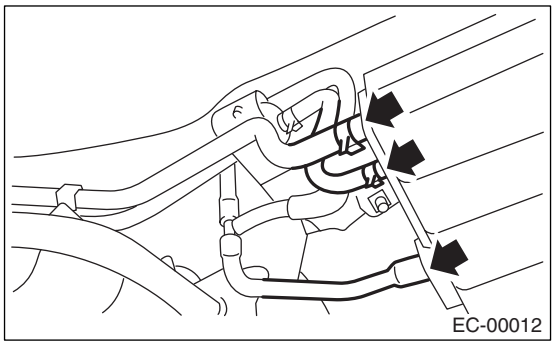

3) Remove the canister from body.

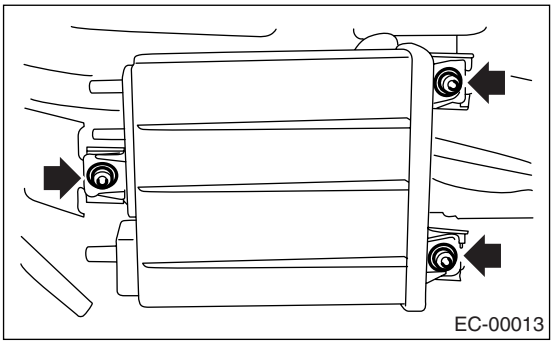

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
23 N·m (2.3 kgf-m, 17 ft-lb)

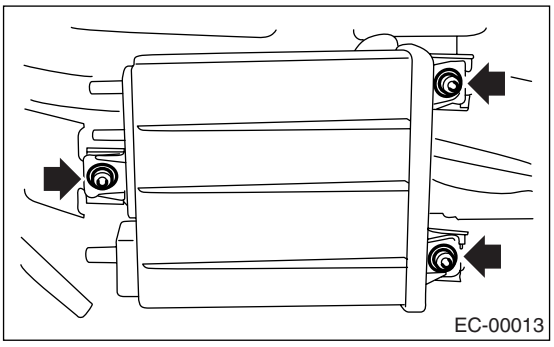

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.

5. Purge Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

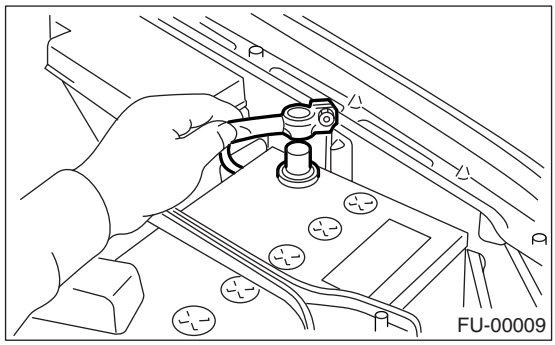

2) Disconnect the connector and hose of purge control solenoid valve, and then remove the purge control solenoid valve.

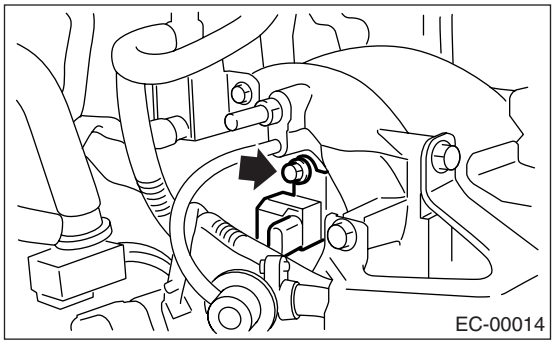

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

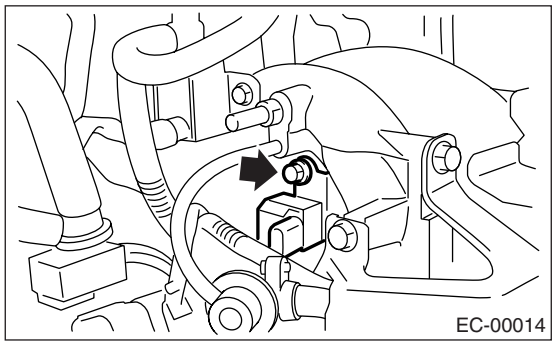

NOTE:
Connect the evaporation hoses as shown in the figure.

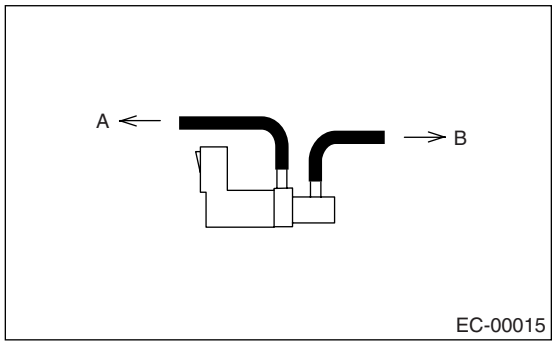

(A) To fuel pipe
(B) To throttle body

C: INSPECTION

Make sure hoses are not cracked or loose.

6. Two-way Valve

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the canister from body. <Ref. to EC(H4SOw/oOBD)-5, REMOVAL, Canister.>
3) Remove the two-way valve with bracket as a single unit from body.

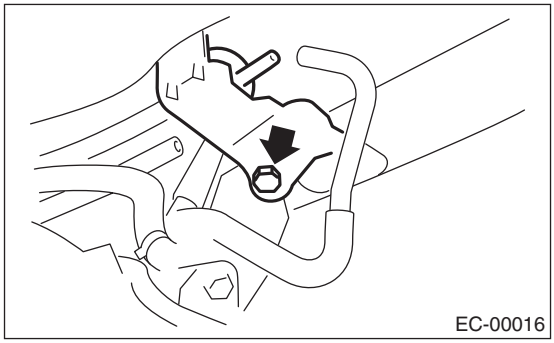

4) Remove the two-way valve from bracket.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure that the hoses are not cracked or loose.

INTAKE (INDUCTION)

IN(H4SOw/oOBD)

Page

1. General Description 2

1. General Description

A: SPECIFICATIONS

Specification of model without OBD is included in IN(H4SO) section. <Ref. to IN(H4SO)-2, General Description.>

MECHANICAL

ME(H4SOw/oOBD)

Page

1. General Description 2

1. General Description

A: SPECIFICATIONS

Specification of model without OBD is the same as that of model with OBD. <Ref. to ME(H4SO)-2, General Description.>

EXHAUST

EX(H4SOw/oOBD)

Page

1. General Description 2
2. Front Exhaust Pipe....6
3. Center Exhaust Pipe 9
4. Rear Exhaust Pipe 10
5. Muffler 11

1. General Description

A: COMPONENT

1. WITH CATALYTIC CONVERTER

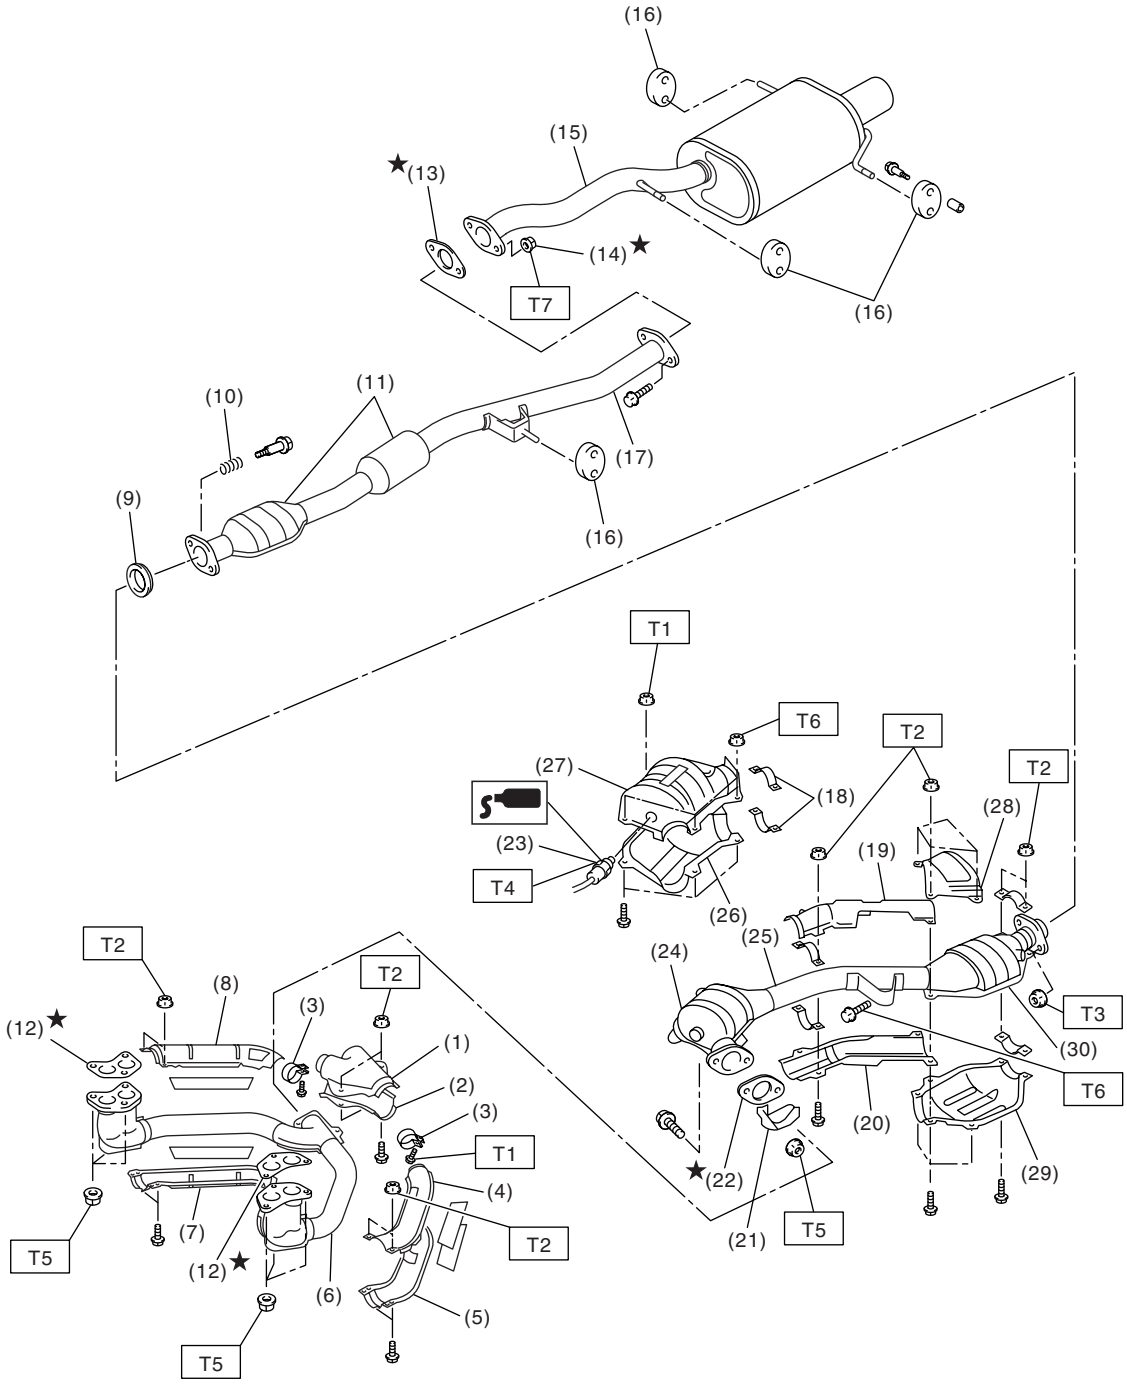

EX-00150

(1) Front exhaust pipe upper cover
(2) Front exhaust pipe lower cover
(3) Clamp
(4) Front exhaust pipe upper cover LH
(5) Front exhaust pipe lower cover LH
(6) Front exhaust pipe
(7) Front exhaust pipe lower cover RH
(8) Front exhaust pipe upper cover RH
(9) Gasket
(10) Spring
(11) Chamber
(12) Gasket
(13) Gasket
(14) Self-locking nut
(15) Muffler
(16) Cushion rubber
(17) Rear exhaust pipe
(18) Lower clamp
(19) Center exhaust pipe upper cover
(20) Center exhaust pipe lower cover
(21) Protector
(22) Gasket
(23) Oxygen sensor
(24) Front catalytic converter
(25) Center exhaust pipe
(26) Front catalytic converter lower cover
(27) Front catalytic converter upper cover
(28) Rear catalytic converter upper cover
(29) Rear catalytic converter lower cover
(30) Rear catalytic converter

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.9)
T2: 13 (1.3, 9.6)
T3: 18 (1.8, 13.3)
T4: 21 (2.1, 15.5)
T5: 30 (3.1, 22.1)
T6: 35 (3.6, 25.8)
T7: 48 (4.9, 35.4)

2. WITHOUT CATALYTIC CONVERTER

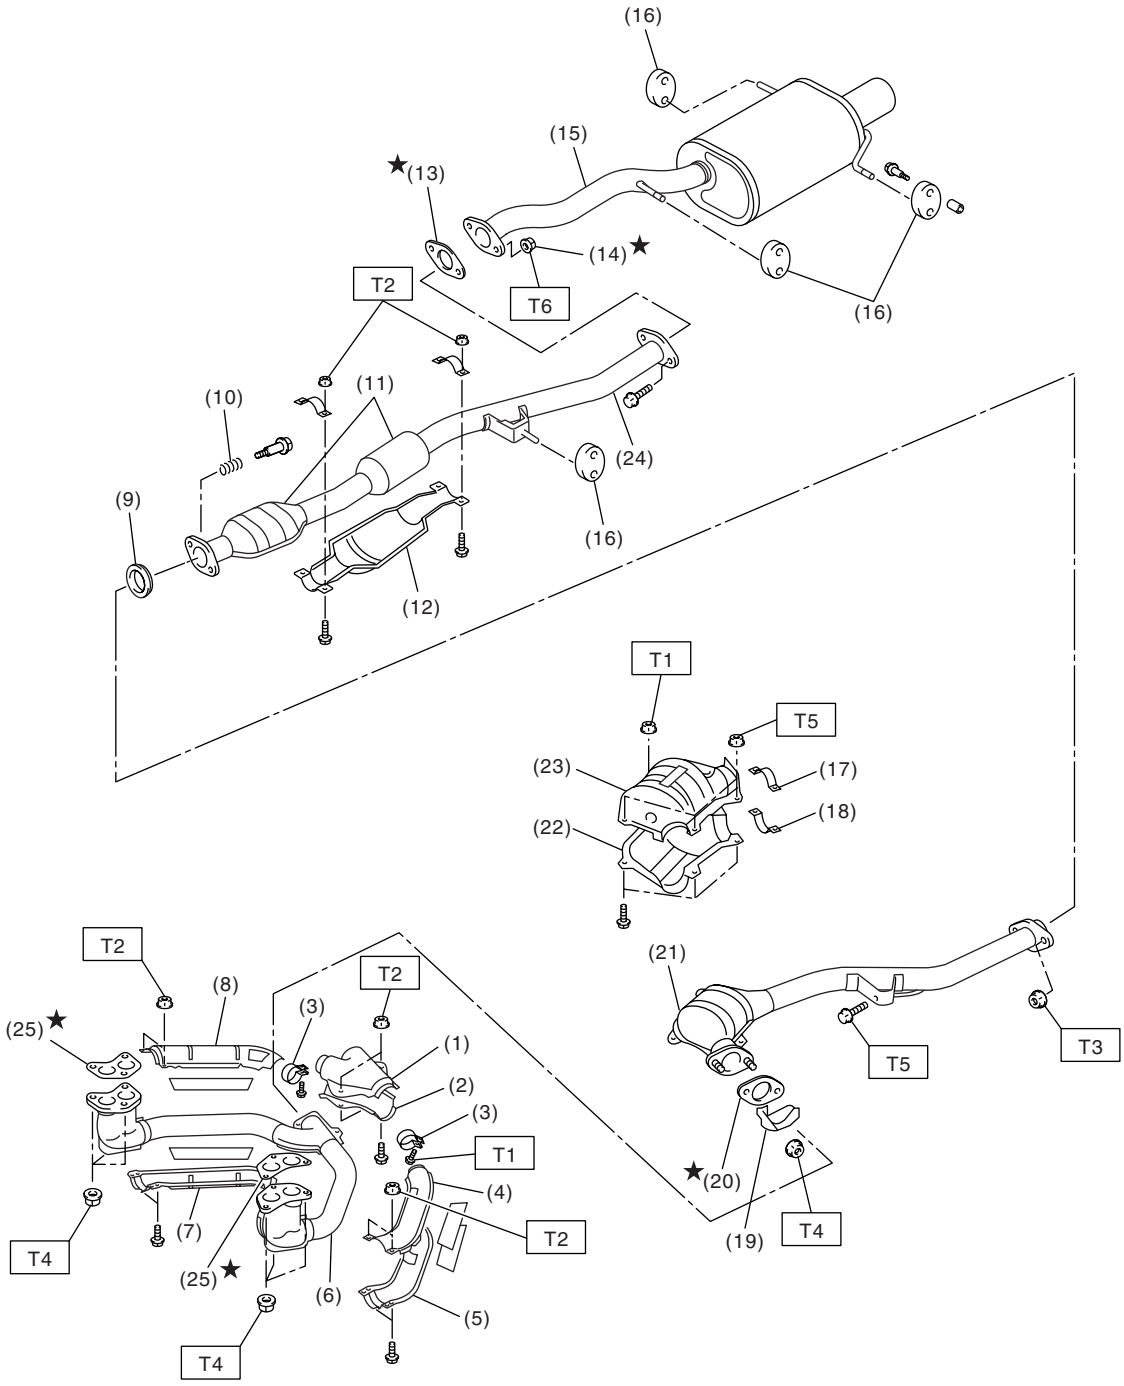

EX-00151

(1) Front exhaust pipe upper cover
(2) Front exhaust pipe lower cover
(3) Clamp
(4) Front exhaust pipe upper cover LH
(5) Front exhaust pipe lower cover LH
(6) Front exhaust pipe
(7) Front exhaust pipe lower cover RH
(8) Front exhaust pipe upper cover RH
(9) Gasket
(10) Spring
(11) Chamber
(12) Rear exhaust pipe cover
(13) Gasket
(14) Self-locking nut
(15) Muffler
(16) Cushion rubber
(17) Upper clamp
(18) Lower clamp
(19) Protector
(20) Gasket
(21) Center exhaust pipe
(22) Center exhaust pipe lower cover
(23) Center exhaust pipe upper cover
(24) Rear exhaust pipe
(25) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.9)
T2: 13 (1.3, 9.6)
T3: 18 (1.8, 13.3)
T4: 30 (3.1, 22.1)
T5: 35 (3.6, 25.8)
T6: 48 (4.9, 35.4)

B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Front Exhaust Pipe

A: REMOVAL

1) Disconnect the ground cable from battery.

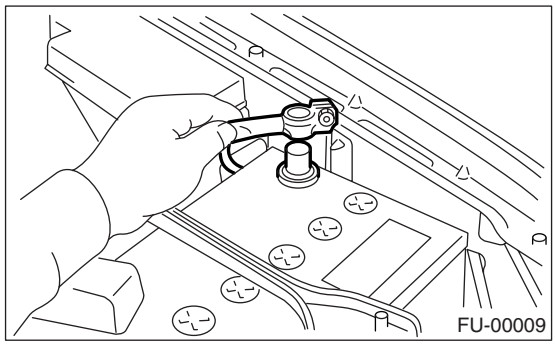

2) Disconnect the oxygen sensor connector. (With catalytic converter)

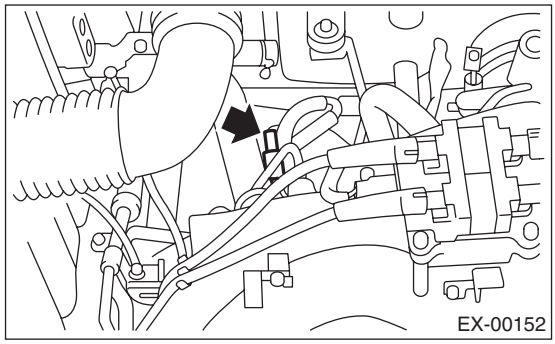

3) Lift-up the vehicle.

4) Separate the front and center exhaust pipe assembly from rear exhaust pipe.

WARNING:
Be careful, the exhaust pipe is hot.

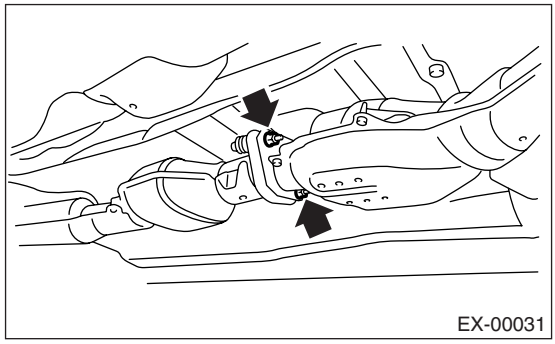

5) Remove the under cover.

6) Remove the nuts which hold the front exhaust pipe onto cylinder heads.

CAUTION:
Be careful not to pull down the front and center exhaust pipe assembly.

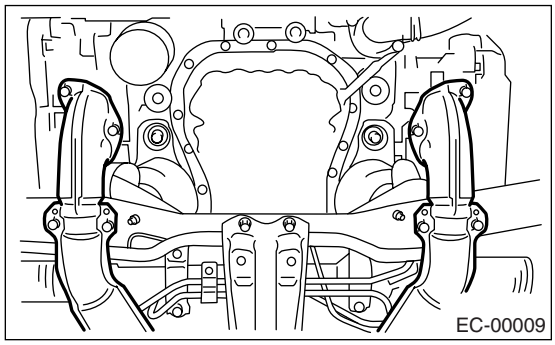

7) Remove the bolt which installs the front and center exhaust pipe assembly to hanger bracket.

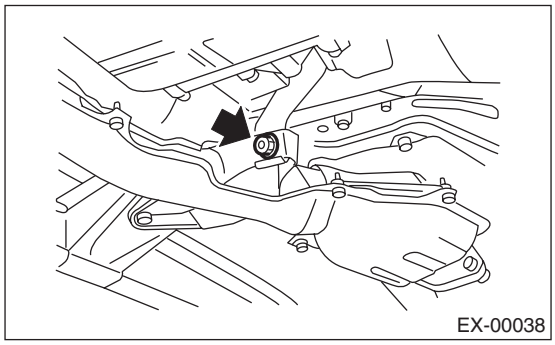

8) Remove the front and center exhaust pipe assembly from vehicle.

CAUTION:
• Be careful not to let the front and center exhaust pipe assembly fall off when removing as it is quite heavy.
• After removing the front and center exhaust pipe assembly, do not apply excessive pulling force on the rear exhaust pipe.

9) Separate the front exhaust pipe from center exhaust pipe.

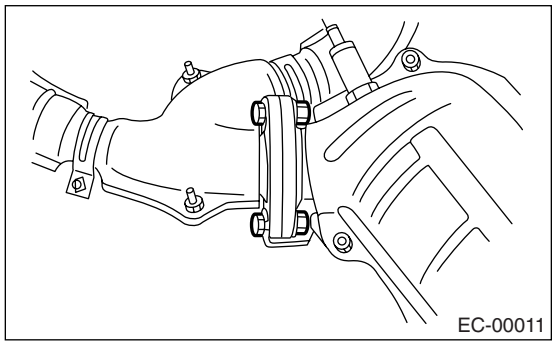

10) Remove the oxygen sensor. (With catalytic converter) <Ref. to FU(H4SOw/oOBD)-41, REMOVAL, Oxygen Sensor.>

B: INSTALLATION

1) Install the oxygen sensor. (With catalytic converter) <Ref. to FU(H4SOw/oOBD)-41, INSTALLATION, Oxygen Sensor.>
2) Install the front exhaust pipe to center exhaust pipe.

NOTE:
Replace the gaskets with new ones.

Tightening torque:
30 N·m (3.1 kgf-m, 22.1 ft-lb)

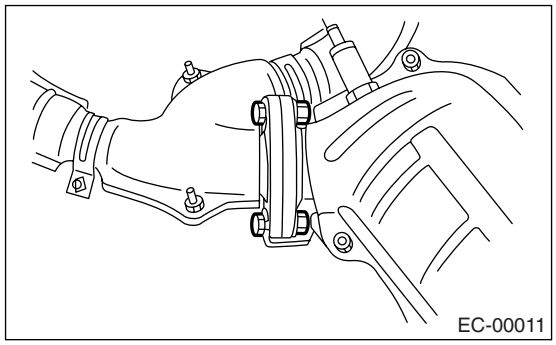

3) Install the front and center exhaust pipe assembly to vehicle.
4) Temporarily tighten the bolt which installs the front and center exhaust pipe assembly to hanger bracket.

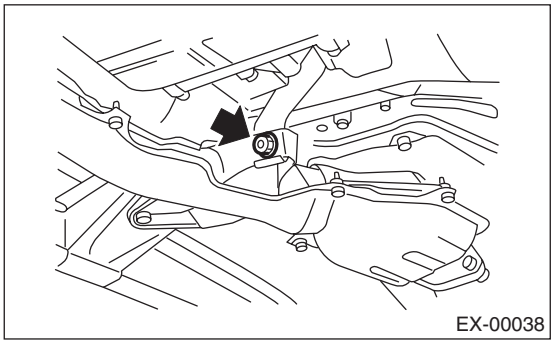

5) Tighten the nuts which hold the front exhaust pipe onto cylinder heads.

Tightening torque:
30 N·m (3.1 kgf-m, 22.1 ft-lb)

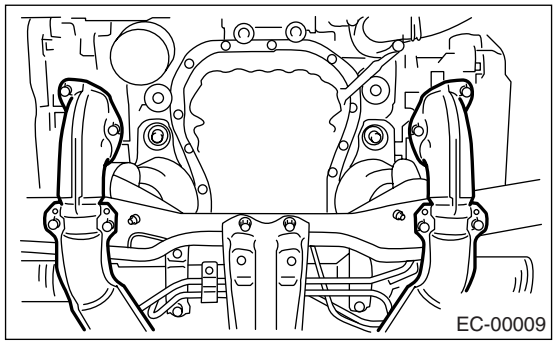

6) Install the under cover.

7) Tighten the bolts which install the front and center exhaust pipe assembly to rear exhaust pipe.

Tightening torque:
18 N·m (1.8 kgf-m, 13.3 ft-lb)

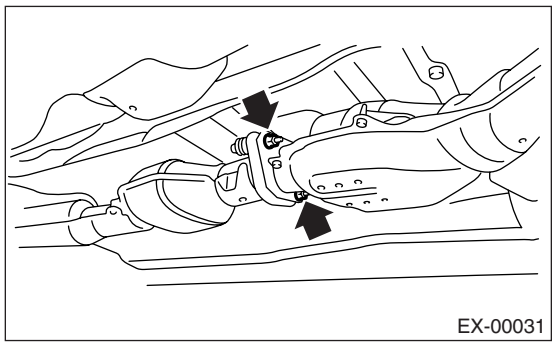

8) Tighten the bolt which holds the front and center exhaust pipe assembly to hanger bracket.

Tightening torque:
35 N·m (3.6 kgf-m, 25.8 ft-lb)

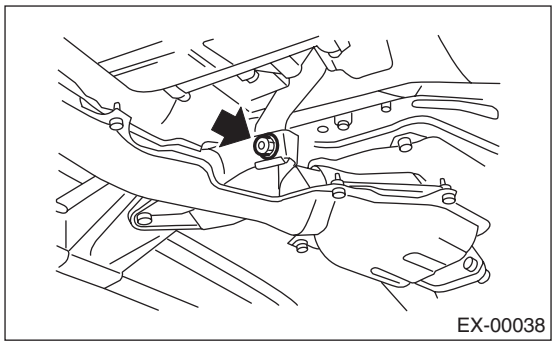

9) Lower the vehicle.
10) Connect the oxygen sensor connector. (With catalytic converter)

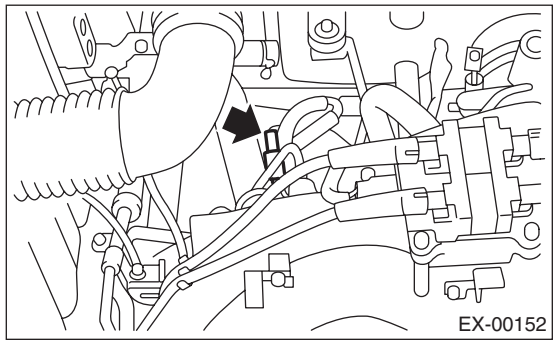

11) Connect the battery ground cable to battery.

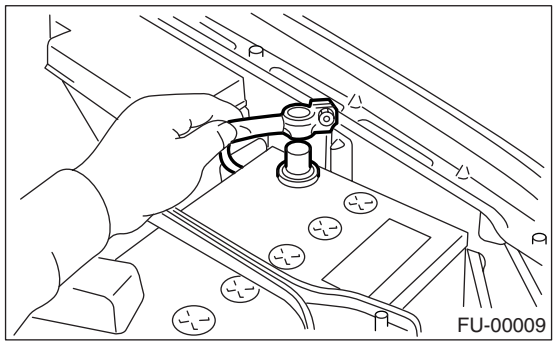

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

3. Center Exhaust Pipe

A: REMOVAL

After removing the center and front exhaust pipes as one unit, separate them. Refer to the procedure for removing the front exhaust pipe. <Ref. to EX(H4SOw/oOBD)-6, REMOVAL, Front Exhaust Pipe.>

B: INSTALLATION

Install the center exhaust pipe and front exhaust pipe as one unit. Refer to the procedure for installing the front exhaust pipe. <Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>

C: INSPECTION

1) Make sure there are no exhaust leaks from the connections and welds.
2) Make sure there are no holes or rusting.

4. Rear Exhaust Pipe

A: REMOVAL

1) Separate the rear exhaust pipe from center exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

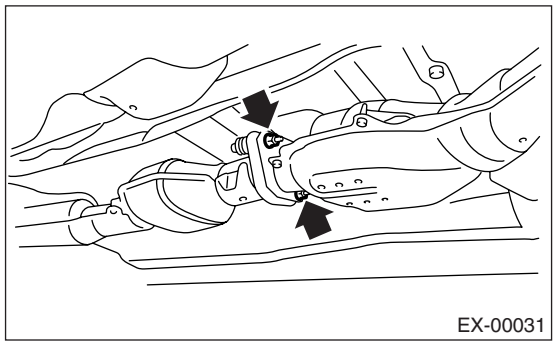

2) Separate the rear exhaust pipe from muffler.

CAUTION:
Be careful not to pull down the rear exhaust pipe.

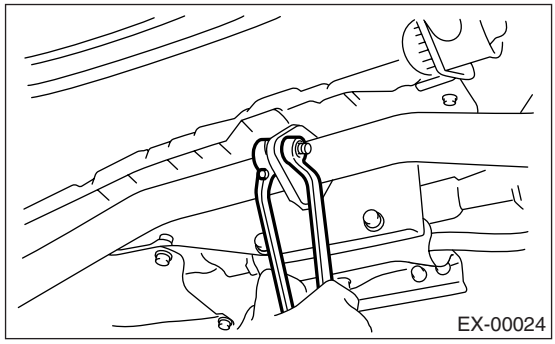

3) Apply a coat of SUBARU CRC to mating area of cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

4) Remove the rear exhaust pipe bracket from cushion rubber.

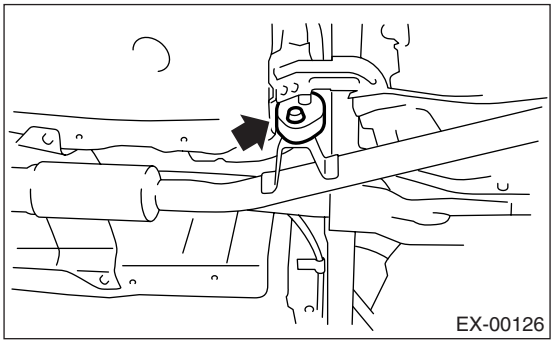

B: INSTALLATION

1) Apply a coat of SUBARU CRC to mating area of cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

2) Install the rear exhaust pipe bracket to cushion rubber.

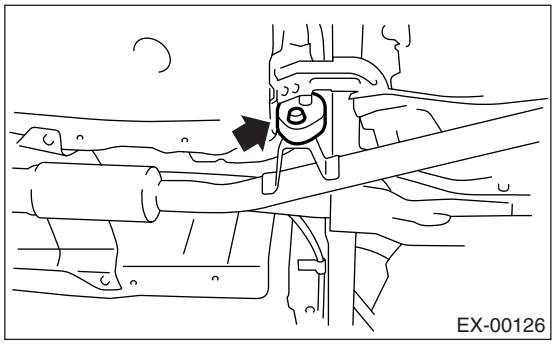

NOTE:
Replace the gaskets with new ones.

3) Install the rear exhaust pipe to muffler.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

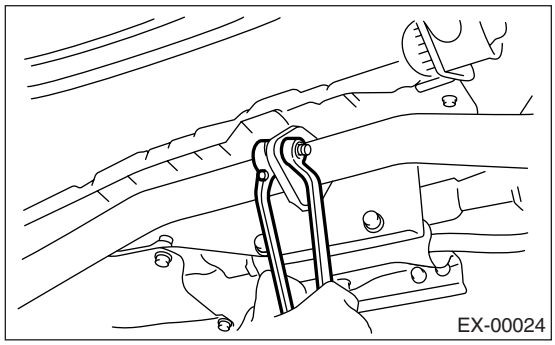

4) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:
18 N·m (1.8 kgf-m, 13.3 ft-lb)

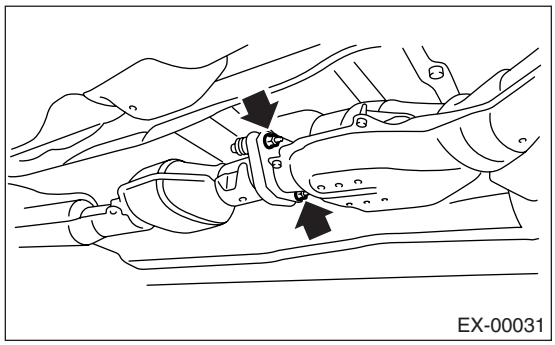

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.
3) Make sure the cushion rubber is not worn or cracked.

5. Muffler

A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

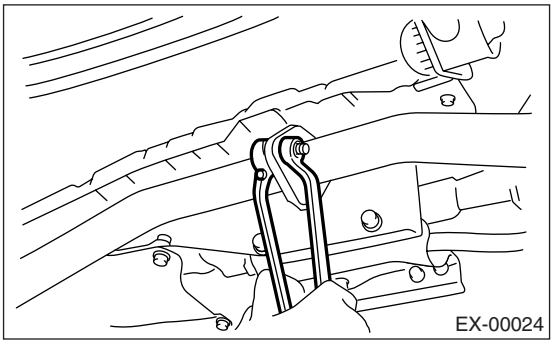

2) Apply a coat of SUBARU CRC to mating area of cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

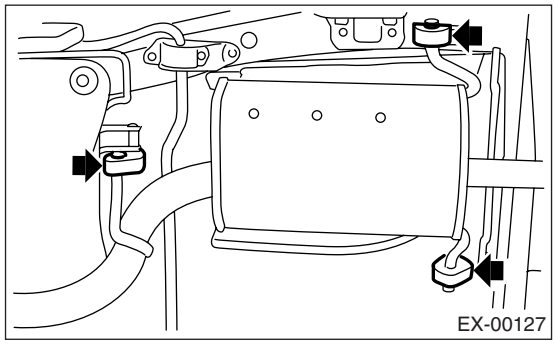

3) Remove the front, right and left cushion rubber, and detach the muffler assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Replace the gasket with a new one.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

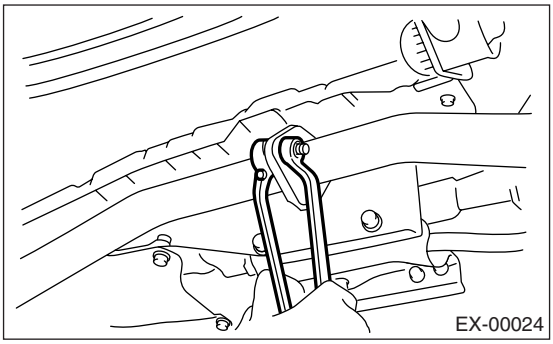

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.
3) Make sure the cushion rubber is not worn or cracked.

COOLING

CO(H4SOw/oOBD)

Page

1. General Description 2

1. General Description

A: SPECIFICATIONS

Specification of model without OBD is the same as that of model with OBD. <Ref. to CO(H4SO)-2, General Description.>

LUBRICATION

LU(H4SOw/oOBD)

Page
1. General Description 2

1. General Description

A: SPECIFICATIONS

Specification of model without OBD is the same as that of model with OBD. <Ref. to LU(H4SO)-2, General Description.>

SPEED CONTROL SYSTEMS

SP(H4SOw/oOBD)

Page

1. General Description 2

1. General Description

A: SPECIFICATION

Specification of model without OBD is the same as that of model with OBD. <Ref. to SP(H4SO)-2, General Description.>

IGNITION

IG(H4SOw/oOBD)

Page

1. General Description 2

1. General Description

A: SPECIFICATIONS

Specifications for model without OBD is included in IG(H4SO) section. <Ref. to IG(H4SO)-2, General Description.>

STARTING/CHARGING SYSTEMS

SC(H4SOw/oOBD)

Page

1. General Description 2

1. General Description

A: SPECIFICATIONS

Specification of model without OBD is included in SC(H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H4SOw/oOBD)

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	4
3.	General Description	6
4.	Electrical Components Location	9
5.	Engine Control Module (ECM) I/O Signal	17
6.	Subaru Select Monitor	20
7.	Read Diagnostic Trouble Code (DTC)	23
8.	Inspection Mode	25
9.	Clear Memory Mode	27
10.	Compulsory Valve Operation Check Mode	28
11.	Malfunction Indicator Light	29
12.	Diagnostics for Engine Starting Failure	37
13.	List of Diagnostic Trouble Code (DTC)	54
14.	Diagnostic Procedure with Diagnostic Trouble Code (DTC)	56
15.	General Diagnostic Table	96

1. Basic Diagnostic Procedure

A: PROCEDURE

1. WITH SUBARU SELECT MONITOR

	Step	Check	Yes	No
1	**CHECK ENGINE START FAILURE.** 1)Ask the customer when and how trouble occurred using the interview check list. <Ref. to EN(H4SOw/oOBD)-4, CHECK, Check List for Interview.> 2)Start the engine.	Does the engine start?	Go to step **2.**	Inspection using "Diagnostics for Engine Starting Failure". <Ref. to EN(H4SOw/oOBD)-37, Diagnostics for Engine Starting Failure.>
2	**CHECK ILLUMINATION OF MALFUNCTION INDICATOR LIGHT.** <Ref. to EN(H4SOw/oOBD)-29, ACTIVATION OF MALFUNCTION INDICATOR LIGHT, Malfunction Indicator Light.>	Does the malfunction indicator light illuminate?	Go to step **3.**	Inspection using "General Diagnostic Table". <Ref. to EN(H4SOw/oOBD)-96, INSPECTION, General Diagnostic Table.>
3	**CHECK INDICATION OF DTC ON DISPLAY.** 1)Turn the ignition switch to OFF. 2)Connect the SUBARU Select Monitor to data link connector. 3)Turn the ignition switch to ON and the SUBARU Select Monitor switch to ON. 4)Read any DTC on SUBARU Select Monitor. <Ref. to EN(H4SOw/oOBD)-23, WITH SUBARU SELECT MONITOR, OPERATION, Read Diagnostic Trouble Code (DTC).>	Does the SUBARU Select Monitor indicate DTC? <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>	Record the DTC. Repair the trouble cause. <Ref. to EN(H4SOw/oOBD)-56, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Go to step **4.**	Repair the related parts. NOTE: If a DTC is not shown on display although malfunction indicator light illuminates, perform diagnostics of circuit or combination meter. <Ref. to EN(H4SOw/oOBD)-29, Malfunction Indicator Light.>
4	**PERFORM THE DIAGNOSIS.** 1)Perform the Clear Memory Mode. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> 2)Perform the inspection mode. <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>	Does the SUBARU Select Monitor indicate DTC? <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>	Record the DTC. Repair the trouble cause. <Ref. to EN(H4SOw/oOBD)-56, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Go to step **4.**	Complete the diagnosis.

2. WITHOUT SUBARU SELECT MONITOR

CAUTION:
• Check the connector while it is connected unless specified otherwise.
• Be sure to check again from the beginning in order to prevent secondary trouble caused by repair work.

	Step	Check	Yes	No
1	**CHECK ENGINE START FAILURE.** 1)Ask the customer when and how trouble occurred using interview check list. <Ref. to EN(H4SOw/oOBD)-4, CHECK, Check List for Interview.> 2)Start the engine.	Does the engine start?	Go to step **2.**	Inspection using "Diagnostics for Engine Starting Failure". <Ref. to EN(H4SOw/oOBD)-37, Diagnostics for Engine Starting Failure.>
2	**CHECK ILLUMINATION OF MALFUNCTION INDICATOR LIGHT.** <Ref. to EN(H4SOw/oOBD)-29, ACTIVATION OF MALFUNCTION INDICATOR LIGHT, Malfunction Indicator Light.>	Does the malfunction indicator light illuminate?	Go to step **3.**	Inspection using "General Diagnostic Table". <Ref. to EN(H4SOw/oOBD)-96, INSPECTION, General Diagnostic Table.>
3	**CHECK INDICATION OF DTC ON MALFUNCTION INDICATOR LIGHT.** 1)Perform the read DTC (read memory mode).<Ref. to EN(H4SOw/oOBD)-23, WITHOUT SUBARU SELECT MONITOR, OPERATION, Read Diagnostic Trouble Code (DTC).> 2)Read any DTC on malfunction indicator light.	Does the malfunction indicator light indicate DTC? <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>	Repair the trouble cause. Go to step **4.**	Repair the related parts. NOTE: If the DTC is not shown on malfunction indicator light although malfunction indicator light illuminates, perform diagnostics of circuit or combination meter.<Ref. to EN(H4SOw/oOBD)-29, Malfunction Indicator Light.>
4	**PERFORM THE DIAGNOSIS.** 1)Perform the Clear Memory Mode. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> 2)Perform the inspection mode. <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>	Does the malfunction indicator light indicate DTC? <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>	Repair the trouble cause. Go to step **4.**	Complete the diagnosis.

2. Check List for Interview

A: CHECK

1. CHECK LIST No. 1

Check the following items when problem has occurred.

NOTE:
Use copies of this page for interviewing customers.

Customer's name		Engine No.	
Date of sale		Fuel brand	
Date of repair		Odometer reading	km
VIN			miles
Weather	❑ Fine ❑ Cloudy ❑ Rainy ❑ Snowy ❑ Various/Others:		
Outdoor temperature	°C (°F)		
	❑ Hot ❑ Warm ❑ Cool ❑ Cold		
Place	❑ Highway ❑ Suburbs ❑ Inner city ❑ Uphill ❑ Downhill ❑ Rough road ❑ Others:		
Engine temperature	❑ Cold ❑ Warming-up ❑ After warming-up ❑ Any temperature ❑ Others:		
Engine speed	rpm		
Vehicle speed	MPH		
Driving conditions	❑ Not affected ❑ At starting ❑ While idling ❑ At racing ❑ While accelerating ❑ While cruising ❑ While decelerating ❑ While turning (RH/LH)		
Headlight	❑ ON/❑ OFF	Rear defogger	❑ ON/❑ OFF
Blower	❑ ON/❑ OFF	Radio	❑ ON/❑ OFF
A/C compressor	❑ ON/❑ OFF	CD/Cassette	❑ ON/❑ OFF
Radiator fan	❑ ON/❑ OFF	Car phone	❑ ON/❑ OFF
Front wiper	❑ ON/❑ OFF	CB	❑ ON/❑ OFF
Rear wiper	❑ ON/❑ OFF		

2. CHECK LIST No. 2

Check the following items about the vehicle's state when the malfunction indicator light turns on.

NOTE:
Use copies of this page for interviewing customers.

a) Other warning lights or indicators turn on. ❑ Yes/❑ No
❑ Low fuel warning light ❑ Charge indicator light ❑ AT diagnostics indicator light ❑ ABS warning light ❑ Engine oil pressure warning light
b) Fuel level
• Lack of gasoline: ❑ Yes/❑ No • Indicator position of fuel gauge:
c) Intentional connecting or disconnecting of harness connectors or spark plug cords: ❑ Yes/❑ No
• What:
d) Intentional connecting or disconnecting of hoses: ❑ Yes/❑ No
• What:
e) Installing of parts other than genuine parts: ❑ Yes/❑ No
• What: • Where:
f) Occurrence of noise: ❑ Yes/❑ No
• From where: • What kind:
g) Occurrence of smell: ❑ Yes/❑ No
• From where: • What kind:
h) Intrusion of water into engine compartment or passenger compartment: ❑ Yes/❑ No
i) Troubles occurred
❑ Engine does not start. ❑ Engine stalls during idling. ❑ Engine stalls while driving. ❑ Engine speed decreases. ❑ Engine speed does not decrease. ❑ Rough idling ❑ Poor acceleration ❑ Back fire ❑ After fire ❑ No shift ❑ Excessive shift shock

3. General Description

A: CAUTION

1) Airbag system wiring harness is routed near engine control module (ECM), main relay and fuel pump relay.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
• Be careful not to damage the airbag system wiring harness when servicing the engine control module (ECM), transmission control module (TCM), main relay and fuel pump relay.

2) Never connect the battery in reverse polarity.
• The ECM will be destroyed instantly.
• The fuel injector and other part will be damaged in just a few minutes more.

3) Do not disconnect the battery cables while the engine is running.
• A large counter electromotive force will be generated in the alternator, and this voltage may damage electronic parts such as ECM, etc.

4) Before disconnecting the connectors of each sensor and the ECM, be sure to turn the ignition switch to OFF.

5) Poor contact has been identified as a primary cause of this problem. To measure the voltage and/or resistance of individual sensors or all electrical control modules at the harness side connector, use a tapered pin with a diameter of less than 0.64 mm (0.025 in). Do not insert the pin more than 5 mm (0.20 in) into the part.

6) Before removing the ECM from located position, disconnect two cables on battery.
• Otherwise, the ECM may be damaged.

CAUTION:
When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.

7) The connectors to each sensor in the engine compartment and the harness connectors on the engine side and body side are all designed to be waterproof. However, it is still necessary to take care not to allow water to get into the connectors when washing the vehicle, or when servicing the vehicle on a rainy day.

8) Use the ECM mounting stud bolt at the body head grounding points when measuring voltage and resistance inside the passenger compartment.

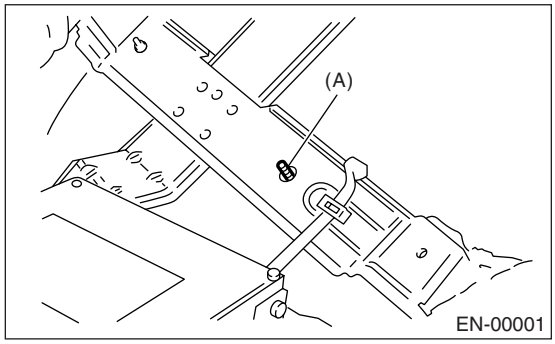

(A) Stud bolt

9) Use the engine grounding terminal or engine proper as the grounding point to the body, when measuring voltage and resistance in the engine compartment.

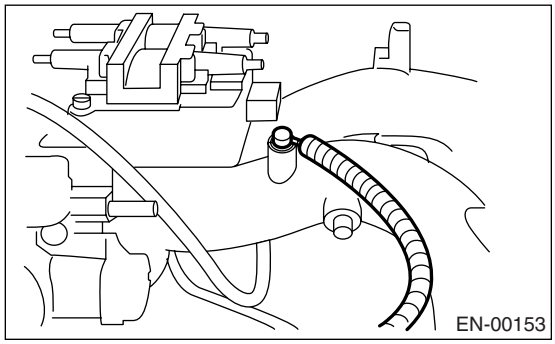

10) Use the TCM mounting stud bolts at the body head grounding point, when measuring voltage and resistance inside the passenger compartment.

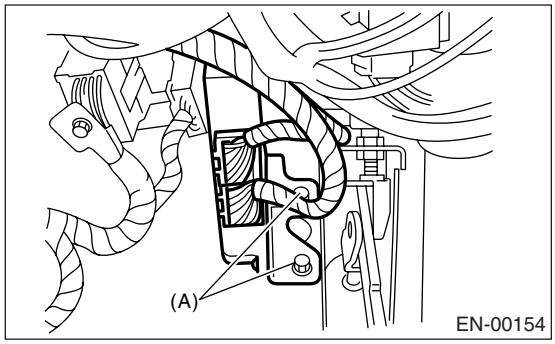

(A) Stud bolt

11) Every MFI-related part is a precision part. Do not drop them.

12) Observe the following cautions when installing a radio in MFI equipped models.

CAUTION:
• The antenna must be kept as far apart as possible from the control unit.
(The ECM is located under the steering column, inside of the instrument panel lower trim panel.)
• The antenna feeder must be placed as far apart as possible from the ECM and MFI harness.
• Carefully adjust the antenna for correct matching.
• When mounting a large power type radio, pay special attention to the three items above mentioned.
• Incorrect installation of the radio may affect the operation of the ECM.

13) Before disconnecting the fuel hose, disconnect the fuel pump connector and crank the engine for more than 5 seconds to release pressure in the fuel system. If the engine starts during this operation, run it until it stops.
14) Problems in the electronic-controlled automatic transmission may be caused by failure of the engine, the electronic control system, the transmission proper, or by a combination of these. These three causes must be distinguished clearly when performing diagnostics.
15) Diagnostics should be conducted by rotating with simple, easy operations and proceeding to complicated, difficult operations. The most important thing in diagnostics is to understand customer's complaint, and distinguish between the three causes.
16) In AT model, do not continue the stall for more than 5 seconds at a time (from closed throttle, fully open throttle to stall engine speed).
17) On ABS model, when performing driving test in jacked-up or lifted-up position, sometimes the warning light may be lit, but this is not a malfunction of the system. The reason for this is the speed difference between the front and rear wheels. After diagnosis of engine control system, perform the ABS memory clearance procedure of self-diagnosis system.

B: INSPECTION

Before performing diagnostics, check the following items which might affect engine problems:

1. BATTERY

1) Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

2) Check the condition of the main and other fuses, and harnesses and connectors. Also check for proper grounding.

2. ENGINE GROUNDING

Make sure the engine grounding cable is properly connected to the engine.

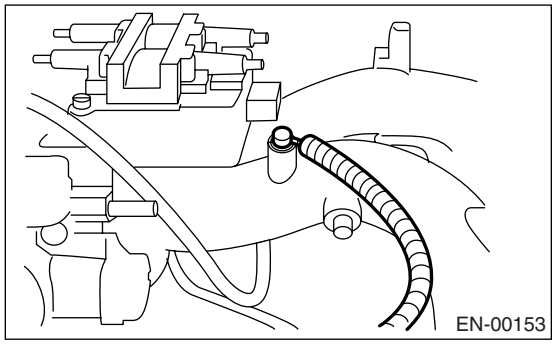

C: NOTE

1. ENGINE AND EMISSION CONTROL SYSTEM

• The Multipoint Fuel Injection (MFI) system is a system that supplies the optimum air-fuel mixture to the engine for all the various operating conditions through the use of the latest electronic technology.
With this system fuel, which is pressurized at a constant pressure, is injected into the intake air passage of the cylinder head. The injection quantity of fuel is controlled by an intermittent injection system where the electro-magnetic injection valve (fuel injector) opens only for a short period of time, depending on the quantity of air required for one cycle of operation. In actual operation, the injection quantity is determined by the duration of an electric pulse applied to the fuel injector and this permits simple, yet highly precise metering of the fuel.
• Further, all the operating conditions of the engine are converted into electric signals, and this results in additional features of the system, such as large improved adaptability, easier addition of compensating element, etc.
The MFI system also has the following features:

- Reduced emission of harmful exhaust gases.
- Reduced in fuel consumption.
- Increased engine output.
- Superior acceleration and deceleration.
- Superior startability and warm-up performance in cold weather since compensation is made for coolant and intake air temperature.

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
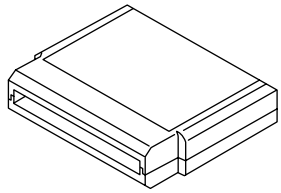 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

4. Electrical Components Location

A: LOCATION

1. MODULE

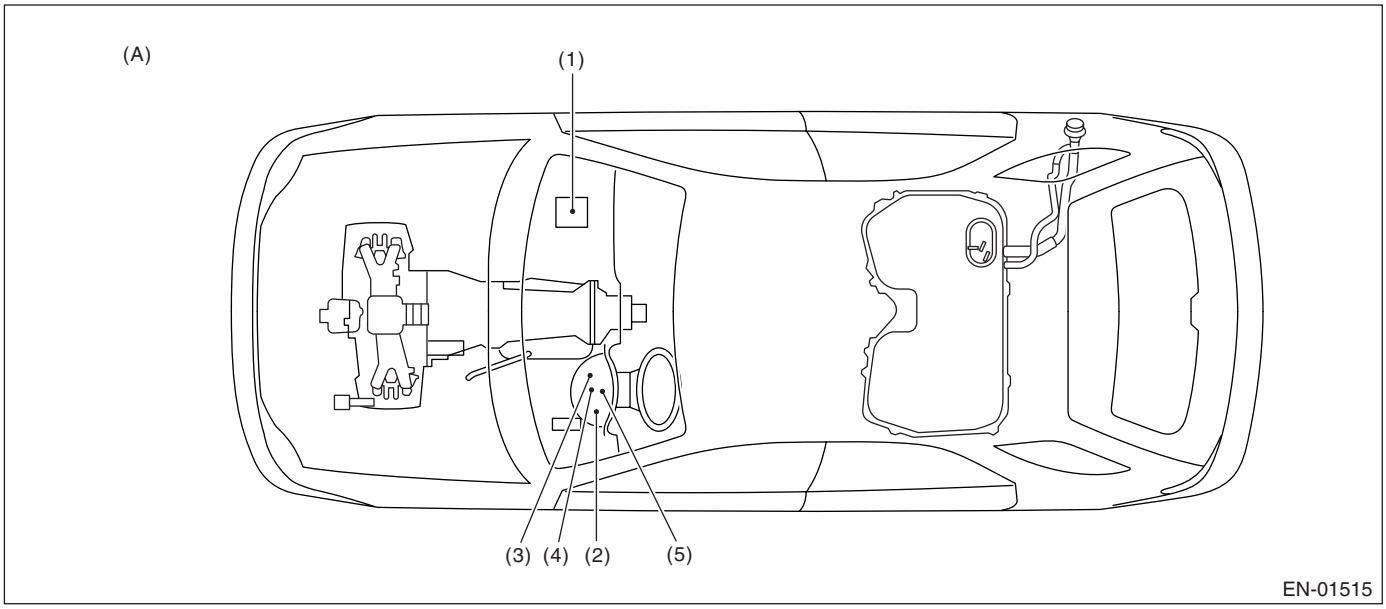

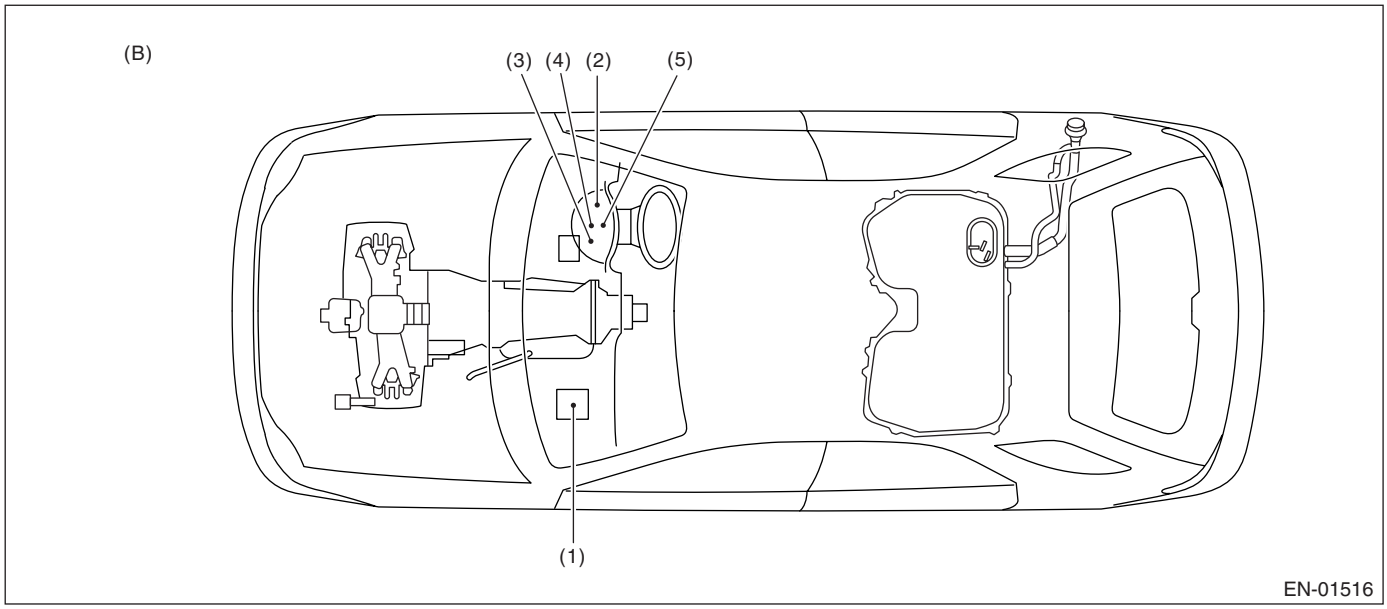

(A) LHD
(B) RHD

(1) Engine control module (ECM)
(2) Malfunction indicator light
(3) Read memory connector
(4) Test mode connector
(5) Data link connector

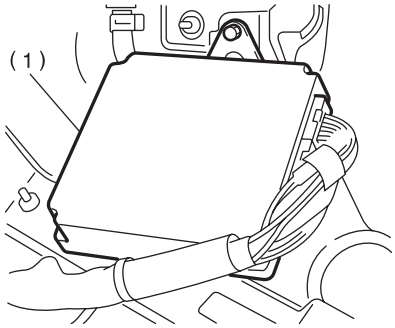

EN-00156

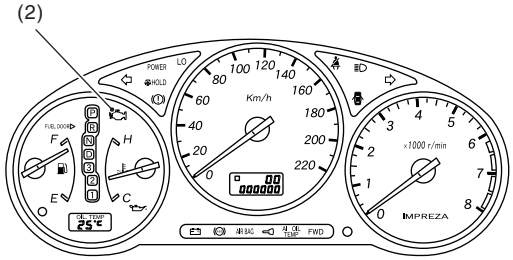

EN-01517

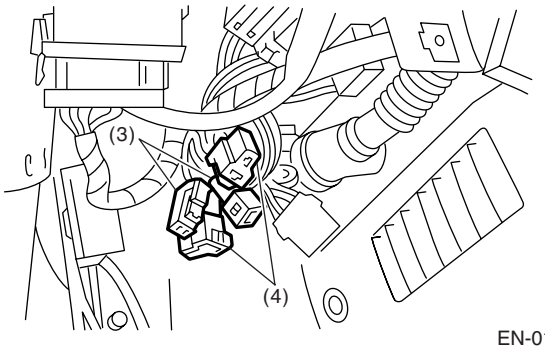

EN-01518

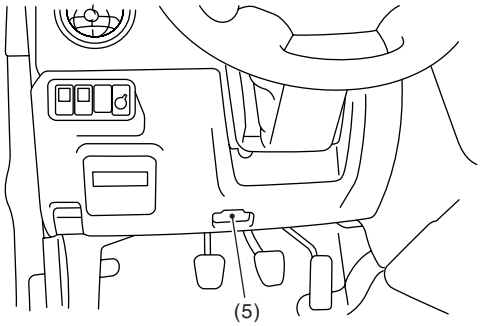

EN-01519

2. SENSOR

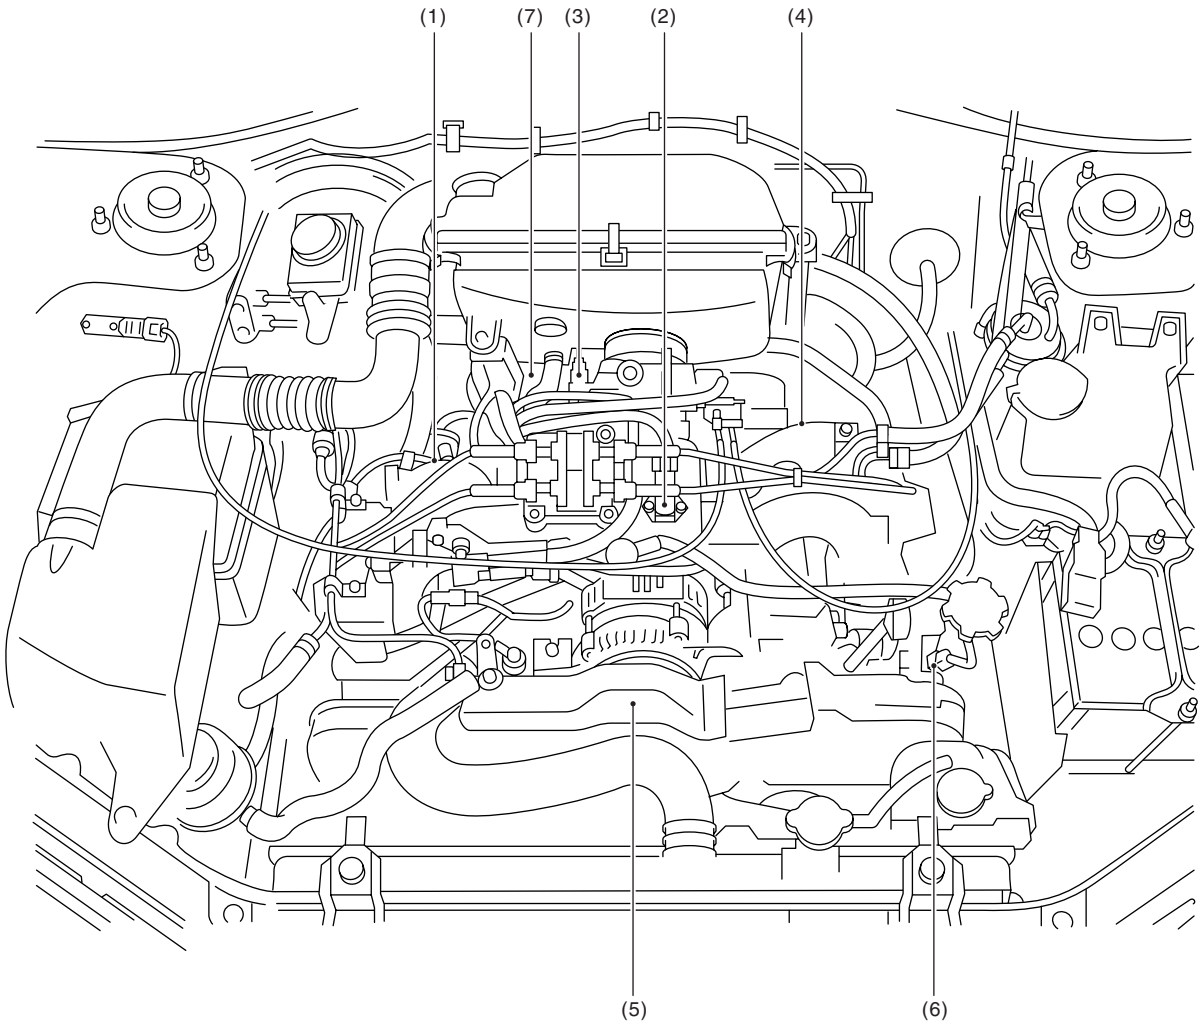

(1) Engine coolant temperature sensor
(2) Intake air temperature and Manifold absolute pressure sensor
(3) Throttle position sensor
(4) Knock sensor
(5) Crankshaft position sensor
(6) Camshaft position sensor
(7) Vehicle speed sensor

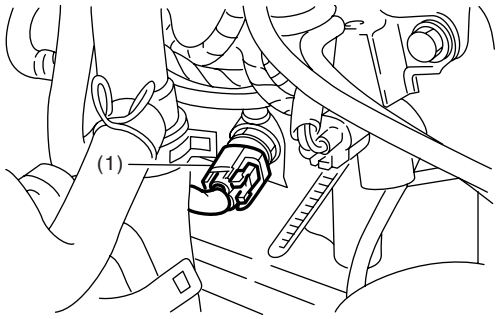

EN-01521

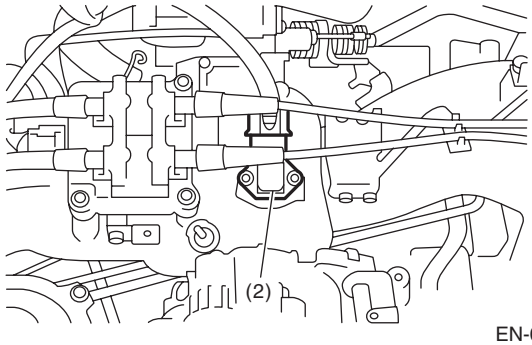

EN-01522

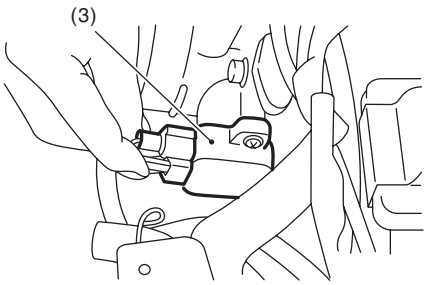

EN-01523

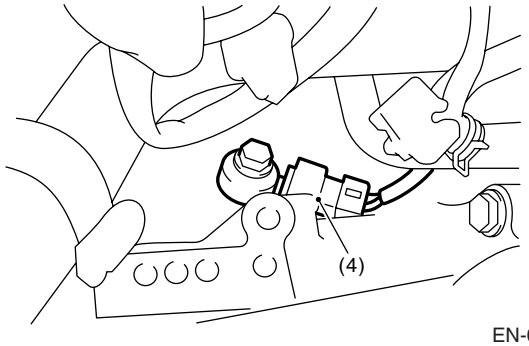

EN-01524

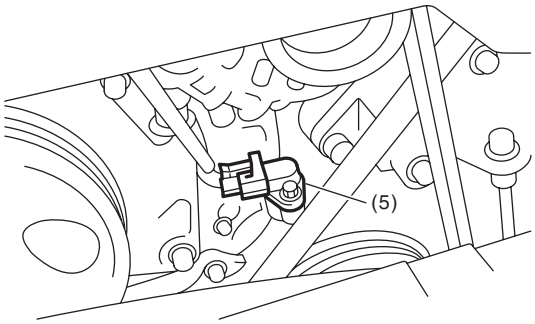

EN-01525

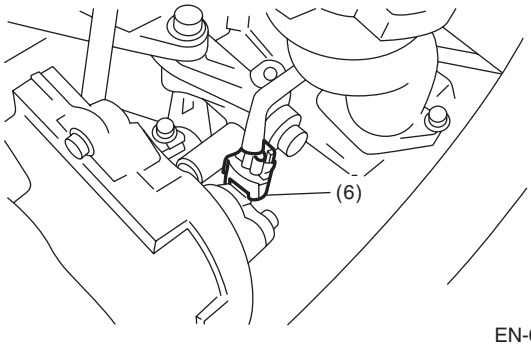

EN-01526

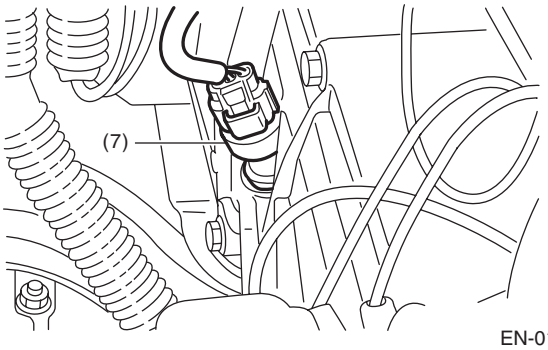

EN-01527

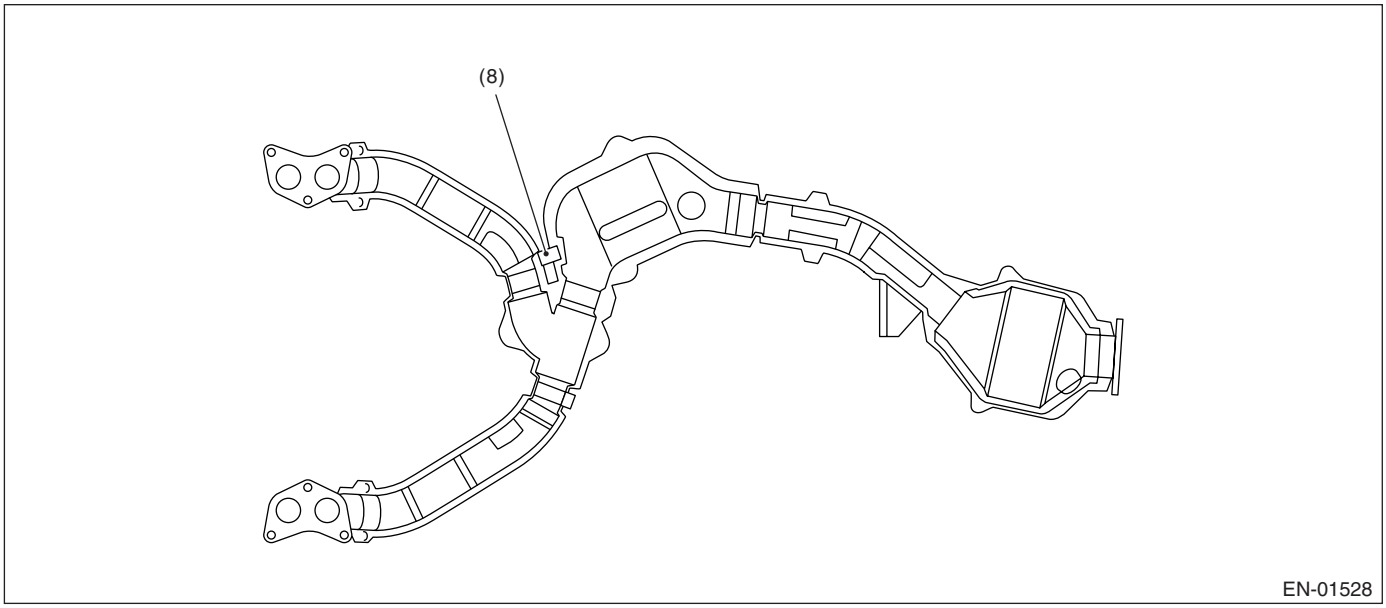

(8) Oxygen sensor (With catalyst converter model)

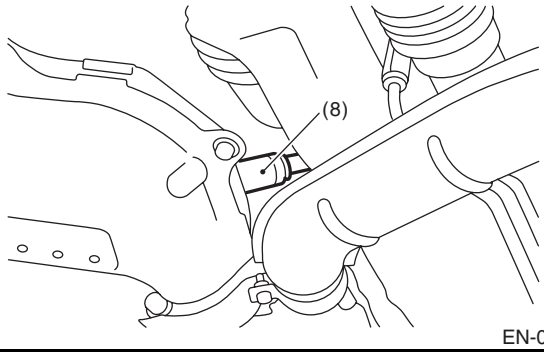

3. SOLENOID VALVE, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS

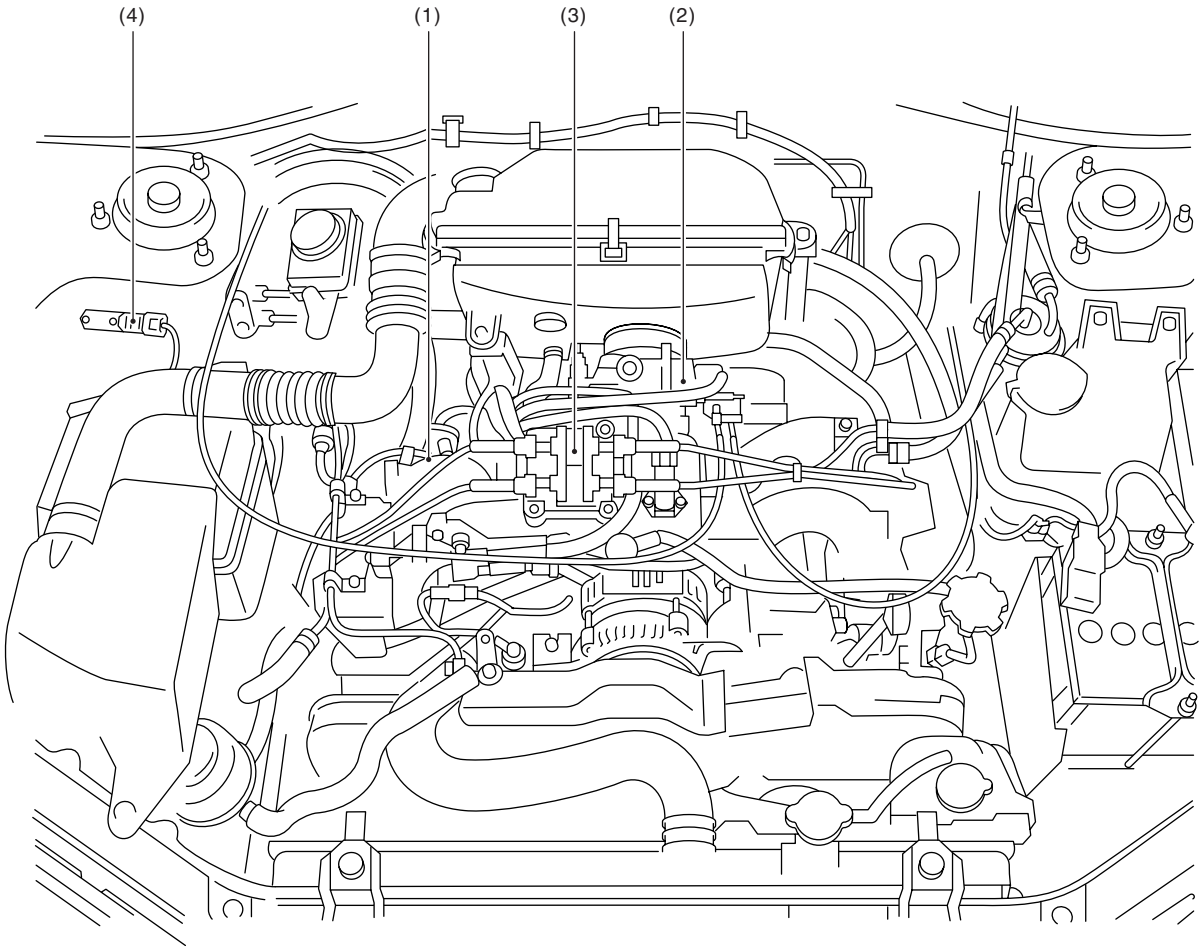

(1) Purge control solenoid valve
(2) Idle air control solenoid valve
(3) Ignition coil and ignitor ASSY
(4) CO resistor (Without catalyst converter model)

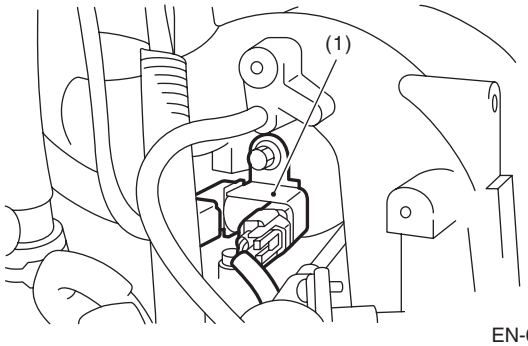

EN-01531

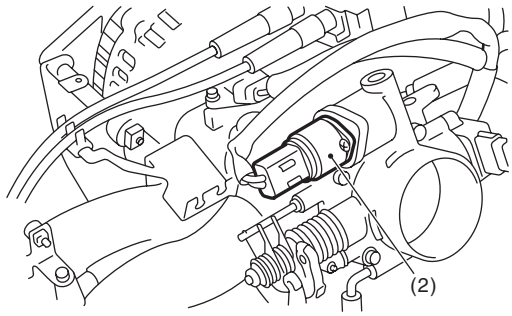

EN-01532

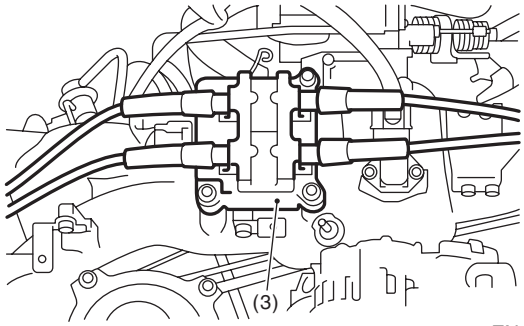

EN-01533

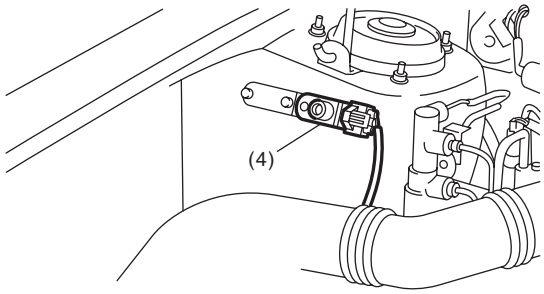

EN-01534

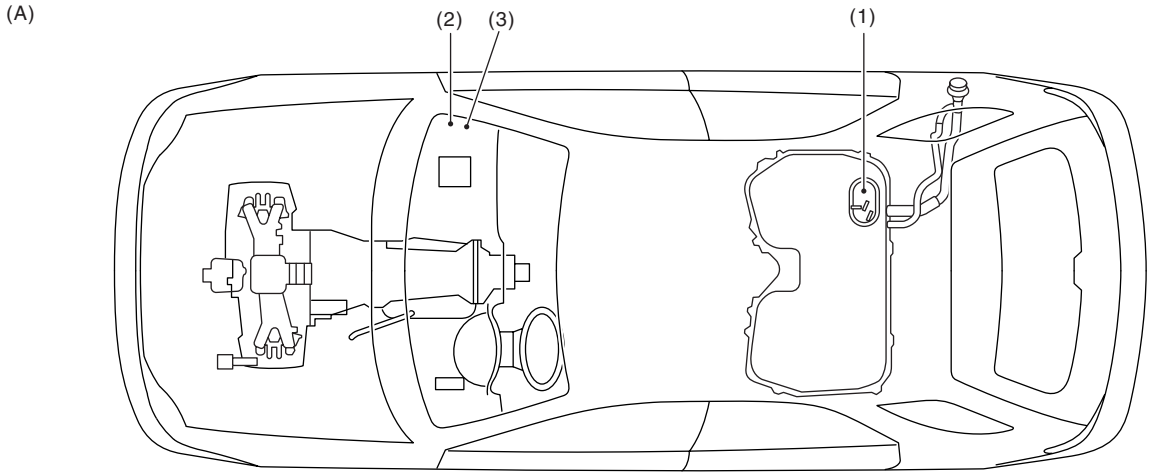

EN-01535

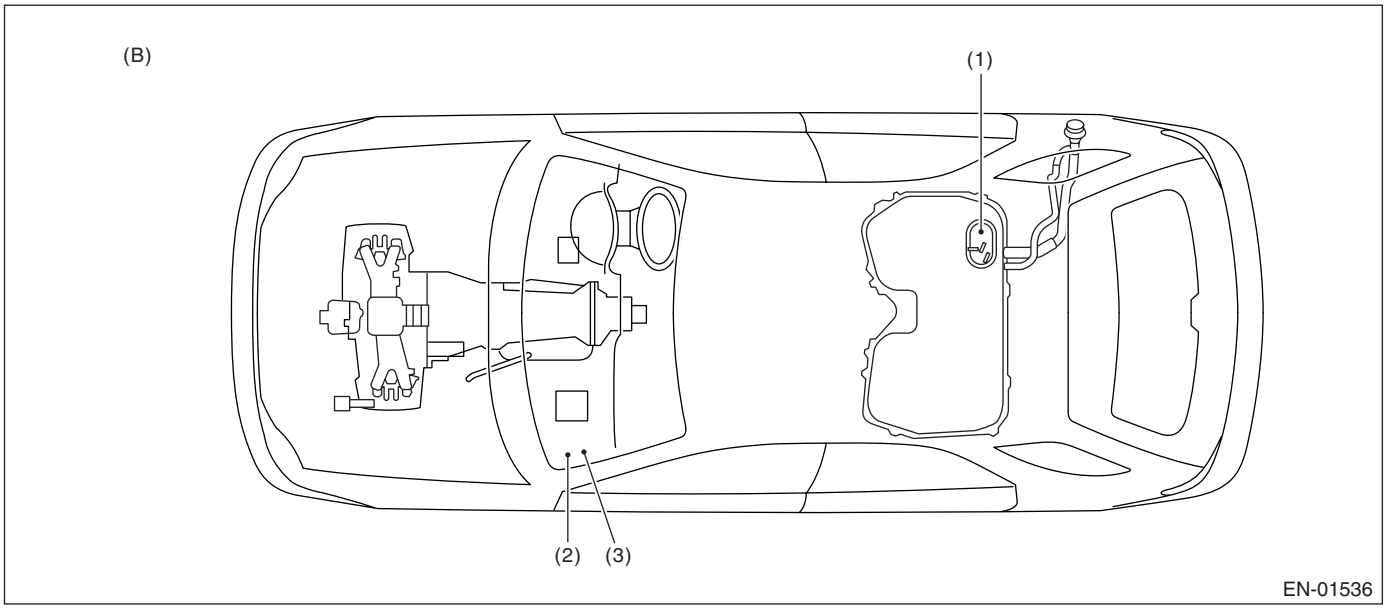

(A) LHD
(B) RHD
(1) Fuel pump
(2) Main relay
(3) Fuel pump relay

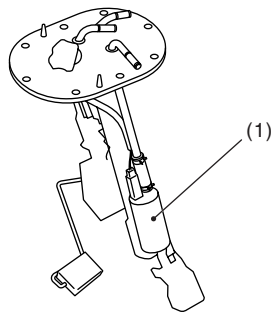

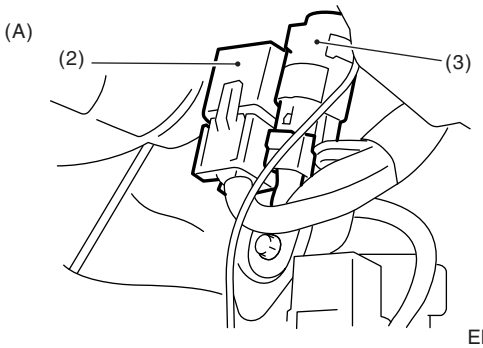

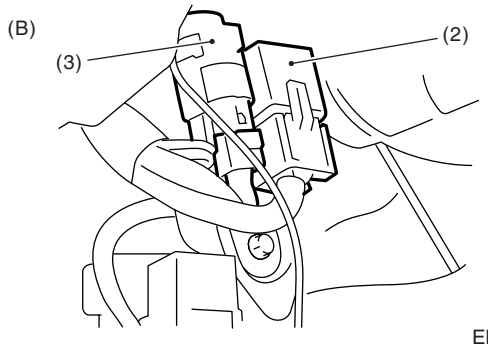

5. Engine Control Module (ECM) I/O Signal

A: ELECTRICAL SPECIFICATION

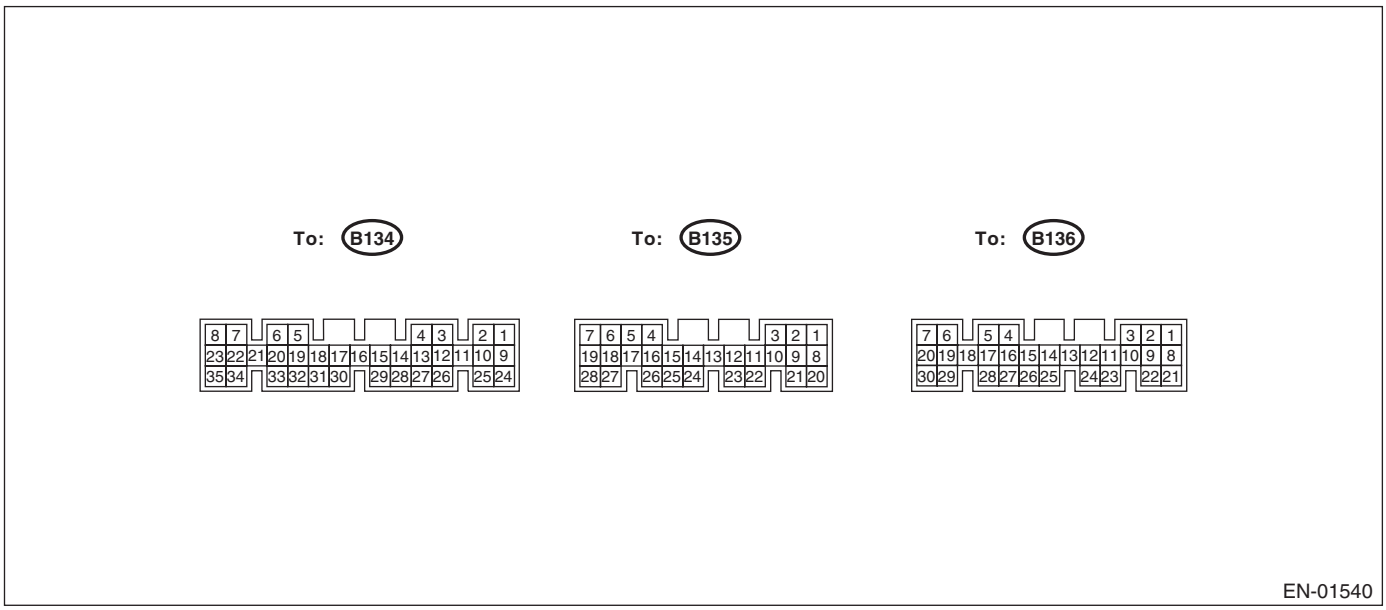

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	*2 1	0	±6	Sensor output waveform
	Signal (–)	B135	8	0	0	—
	Shield	B135	10	0	0	—
Camshaft position sensor	Signal (+)	B135	*1 2	0	±6	Sensor output waveform
	Signal (–)	B135	8	0	0	—
	Shield	B135	10	0	0	—
Intake air temperature sensor	Signal	B136	13	2.3 — 2.5	1.4 — 1.6	Ambient temperature: 25°C (77°F)
Throttle position sensor	Signal	B136	17	Fully closed: 0.5±0.3 Fully opened: 4.3±0.3		—
	Power supply	B136	15	5	5	—
	GND	B136	16	0	0	—
Oxygen sensor	Signal	B136	7	0		Rich mixture: 0.7 Lean mixture: 0
	Shield	B136	23	0	0	—
Engine coolant temperature sensor	Signal	B136	14	0.6 — 1.0	0.6 — 1.0	After warm-up
	GND	B136	16	0	0	—
Vehicle speed sensor		B135	24	0 or 5	0 or 5	“5” and “0” are repeatedly displayed when vehicle is driven.
Starter switch		B135	28	0	0	Cranking: 10 to 14
A/C switch		B135	27	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Ignition switch		B135	7	10 — 13	13 — 14	—
Neutral position switch (MT)		B135	26	ON: 5 OFF: 0		Switch is ON when gear is in neutral position.
Park/Neutral position switch (AT)		B135	26	ON: 0 OFF: 5		Switch is ON when shift lever is in “P” or “N” position.

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Test mode connector		B135	14	5	5	When connected: 0
Read memory connector		B135	15	5	5	When connected: 0
Back-up power supply		B136	9	10 — 13	13 — 14	—
Control unit power supply		B136	1	10 — 13	13 — 14	—
			2			
Ignition control	# 1, # 2	B134	25	0	3.4, max.	—
	# 3, # 4	B134	26	0	3.4, max.	—
Fuel injector	# 1	B134	4	10 — 13	13 — 14	Waveform
	# 2	B134	13	10 — 13	13 — 14	Waveform
	# 3	B134	14	10 — 13	13 — 14	Waveform
	# 4	B134	15	10 — 13	13 — 14	Waveform

*: With immobilizer

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Idle air control solenoid valve	Signal 1	B134	5	—	1 — 13	Waveform
	Signal 2	B134	6	—	1 — 13	Waveform
	Signal 3	B134	19	—	1 — 13	Waveform
	Signal 4	B134	20	—	1 — 13	Waveform
Torque control signal 1		B135	16	5	5	—
Torque control signal 2		B135	17	5	5	—
Fuel pump relay control		B134	29* 16	ON: 0 OFF: 10 — 13	0	—
A/C relay control		B134	17	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Radiator fan relay 1 control		B134	3	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Radiator fan relay 2 control		B134	12	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Self-shutoff control		B135	19	10 — 13	13 — 14	—
Malfunction indicator light		B134	11	—	—	Light “ON”: 1, max. Light “OFF”: 10 — 14
Engine speed output		B134	30	—	0 — 13, min.	Waveform
Knock sensor	Signal	B136	4	2.8	2.8	—
	Shield	B136	25	0	0	—
Manifold absolute pressure sensor	Signal	B136	5	3.4 — 3.6	1.2 — 1.8	—
	Power supply		15	5	5	—
	GND		16	0	0	—
Purge control solenoid valve		B134	2	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
GND (sensors)		B136	16	0	0	—
GND (injectors)		B134	7	0	0	—
GND (ignition system)		B134	27	0	0	—
GND (power supply)		B134	8	0	0	—
GND (control systems)		B136	21	0	0	—
		B136	22	0	0	—
Select monitor signal		B135	11	—	—	—
			12	—	—	—
Power steering switch		B135	13	ON: 0 OFF: 10 — 13	ON: 0 OFF: 10 — 13	—
Torque control cut signal		B134	31	8	8	—
AT load signal		B136	11	0 — 0.3	0.8 — 1.2	—
MT/AT identification		B135	25	MT: 0 AT: 5	MT: 0 AT: 5	—

*: With immobilizer

6. Subaru Select Monitor

A: OPERATION

1. HOW TO USE SUBARU SELECT MONITOR

1) Prepare the SUBARU Select Monitor kit.

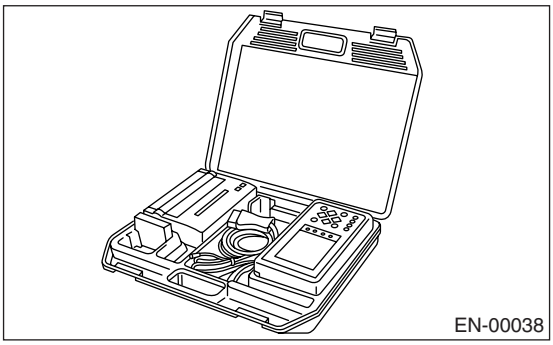

2) Connect the diagnosis cable to SUBARU Select Monitor.
3) Insert the cartridge into SUBARU Select Monitor.

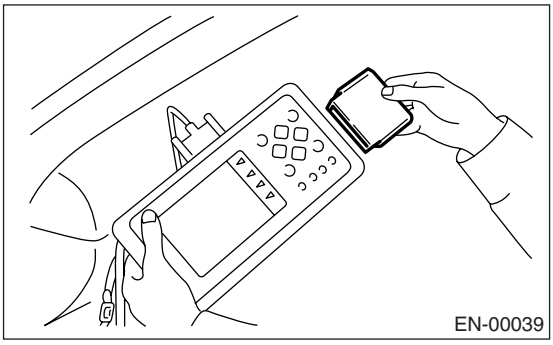

4) Connect the SUBARU Select Monitor to data link connector.

(1) The data link connector is located in lower portion of instrument panel (on driver's side).

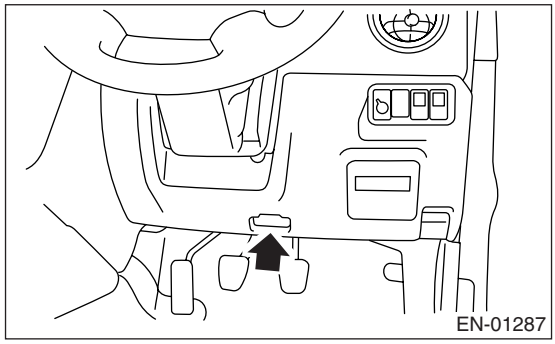

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect the scan tools except for SUBARU Select Monitor.

5) Turn the ignition switch to ON (engine OFF) and SUBARU Select Monitor switch to ON.

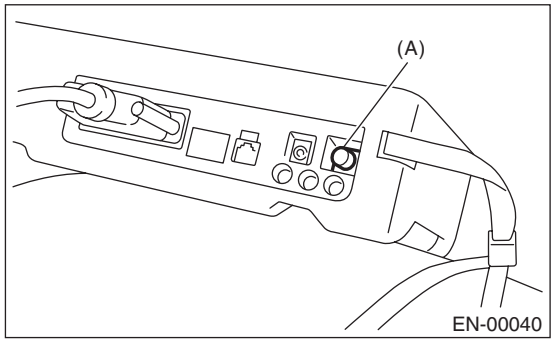

(A) Power switch

6) Using the SUBARU Select Monitor, call up any DTCs and various data, then record them.

2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE.

Refer to Read DTC for information about how to indicate the DTC. <Ref. to EN(H4SOw/oOBD)-23, Read Diagnostic Trouble Code (DTC).>

3. READ CURRENT DATA SHOWN ON DISPLAY.

1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {1. Current Data Display & Save} and press the [YES] key.
5) On the «Data Display Menu» display screen, select the {1. 12 Data Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until desired data is shown.
• A list of the support data is shown in the following table.

Contents	Unit of measure
Battery voltage	V
Vehicle speed signal	km/h or MPH
Engine speed signal	rpm
Engine coolant temperature signal	°C or °F
Ignition timing signal	deg
Manifold absolute pressure sensor signal	mmHg or kPa or inHg or psi
Intake air temperature signal	°C or °F
Throttle position signal	V
Injection pulse width	ms
ISC valve step	STEP
Oxygen sensor output signal*1	V
Knock correction	deg
CO resistor*2	g/h
A/F correction #1	%
A/F learning #1	%
Ignition switch signal	ON or OFF
Automatic transmission vehicle identification signal	ON or OFF
Test mode connector signal	ON or OFF
Neutral position switch signal	ON or OFF
Air conditioning switch signal	ON or OFF
Air conditioning compressor signal	ON or OFF
Radiator fan relay signal #1	ON or OFF
Fuel pump relay signal	ON or OFF
Knocking signal	ON or OFF
Radiator fan relay signal #2	ON or OFF
Torque control signal #1	ON or OFF
Torque control signal #2	ON or OFF
Torque permission signal	ON or OFF
TCS AET signal	ON or OFF
Canister purge control solenoid valve	ON or OFF
Oxygen sensor rich signal	ON or OFF
Read memory connector signal	ON or OFF
P/S switch	ON or OFF
Starter switch	ON or OFF
Crankshaft position sensor signal	ON or OFF
Camshaft position sensor signal	ON or OFF
Rear defogger switch	ON or OFF
Blower fan switch	ON or OFF
Light switch	ON or OFF
Idle switch signal	ON or OFF

*1: With catalyst model only
*2: Without catalyst model only

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

4. LED OPERATION MODE FOR ENGINE

Contents	Message	LED “ON” requirements
Ignition switch signal	ON or OFF	When ignition switch is turned ON.
Automatic transmission vehicle identification signal	ON or OFF	When AT identification signal is entered.
Test mode connector signal	ON or OFF	When test mode connector is connected.
Neutral position switch signal*1	ON or OFF	When neutral position switch signal is entered.
Air conditioning switch signal	ON or OFF	When air conditioning switch is turned ON.
Air conditioning compressor signal	ON or OFF	When air conditioning compressor is in function.
Radiator fan relay signal #1	ON or OFF	When radiator fan relay #1 is in function.
Fuel pump relay signal	ON or OFF	When fuel pump relay is in function.
Knocking signal	ON or OFF	When knocking signal is entered.
Radiator fan relay signal #2	ON or OFF	When radiator fan relay #2 is in function.
Engine torque control signal #1	ON or OFF	When torque control signal #1 is entered.
Torque control signal #2	ON or OFF	When torque control signal #2 is entered.
Torque permission signal	ON or OFF	When torque permission signal is entered.
TCS AET signal	ON or OFF	When TCS AET signal is entered.
Canister purge control solenoid valve	ON or OFF	When canister purge control solenoid valve is in function.
Oxygen sensor rich signal*2	ON or OFF	When oxygen sensor mixture ratio is rich.
Read memory connector signal	ON or OFF	When read memory connector is connected.
P/S switch	ON or OFF	When steering wheel is turned.
Starter switch	ON or OFF	When starter switch signal is entered.
Crankshaft position sensor signal	ON or OFF	When crankshaft position sensor signal is entered.
Camshaft position sensor signal	ON or OFF	When camshaft position sensor signal is entered.
Rear defogger switch	ON or OFF	When rear defogger switch signal is entered.
Blower fan switch	ON or OFF	When blower fan switch signal is entered.
Light switch	ON or OFF	When light switch signal is entered.
Idle switch signal	ON or OFF	When throttle sensor sends signal that throttle opening angle is in idle position.

*1: On MT model, switch is turned ON when gear position is in neutral position.
On AT model, switch is turned ON when shift position is in “P” or “N” position.
*2: With catalyst model only

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. WITH SUBARU SELECT MONITOR

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {DTC Display} and press the [YES] key.
5) On the «DTC Display» display screen, select the {Current DTC} or {History DTC} and press the [YES] key.

NOTE:
- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For detailed concerning DTCs, refer to the List of DTC. <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>

2. WITHOUT SUBARU SELECT MONITOR

	Step	Check	Yes	No
1	**CHECK STATUS OF CHECK MALFUNCTION INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Connect the read memory connector. <Ref. to EN(H4SOw/oOBD)-9, LOCATION, Electrical Components Location.> 3)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Go to step **2.**	Check the following and repair if necessary. NOTE: • Open or short circuit in engine control module power supply or ground line • Open or short circuit in malfunction indicator light
2	**CHECK DTC.**	Does the malfunction indicator light indicate DTC?	Record the DTC. Then turn the ignition switch to OFF, disconnect read memory connector.	Complete the read DTC. Turn the ignition switch to OFF and disconnect read memory connector.

The malfunction indicator light flashes code corresponding to faulty parts. The long segment (1.3 seconds ON) indicates a “ten”, and the short segment (0.2 seconds ON) signifies “one”. And middle segment (0.5 seconds ON) means OK code.

NOTE:
• For detailed concerning DTCs, refer to the List of DTC. <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>

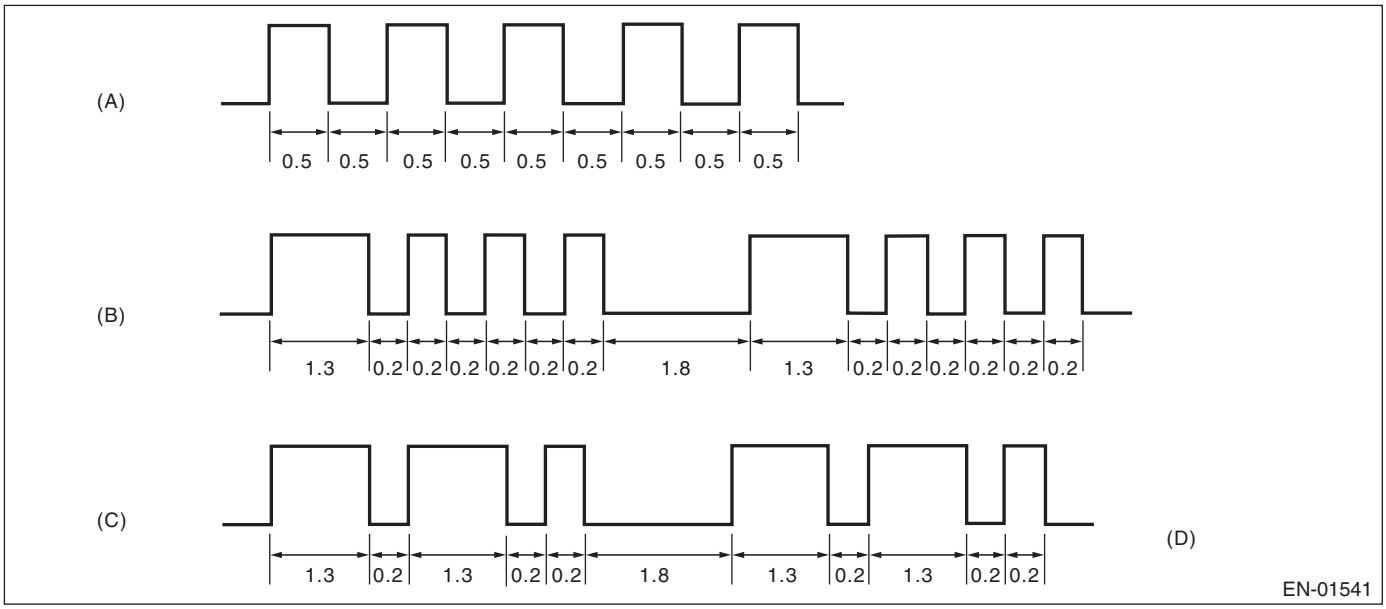

(A) OK code
(B) DTC 13
(C) DTC 21
(D) Unit: second

8. Inspection Mode

A: OPERATION

1. PREPARATIONS FOR THE INSPECTION MODE

Raise the vehicle using a garage jack and place on rigid racks or drive the vehicle onto free rollers.

WARNING:
• Before raising the vehicle, ensure parking brake is applied.
• Do not use a pantograph jack in place of a rigid rack.
• Secure a rope or wire to the front and rear towing or tie-down hooks to prevent the lateral runout of front wheels.
• Do not abruptly depress/release the clutch pedal or accelerator pedal during works even when engine is operating at low speeds since this may cause vehicle to jump off free rollers.
• In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the rigid racks and the vehicle.
• Since the rear wheels will also rotate, do not place anything near them. Also, make sure that nobody goes in front of the vehicle.

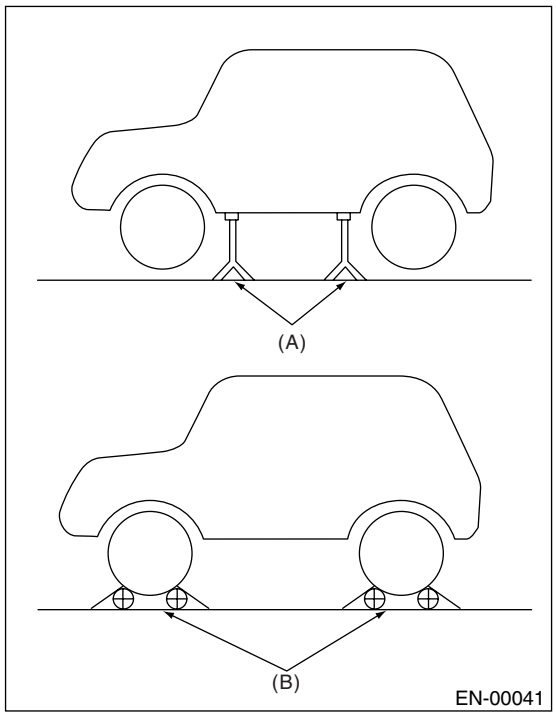

(A) Rigid rack
(B) Free rollers

2. WITH SUBARU SELECT MONITOR

After performing diagnostics and clearing memory, check for any remaining unresolved trouble data.
1) Connect the test mode connector (green) at the lower portion of instrument panel (on the driver's side).

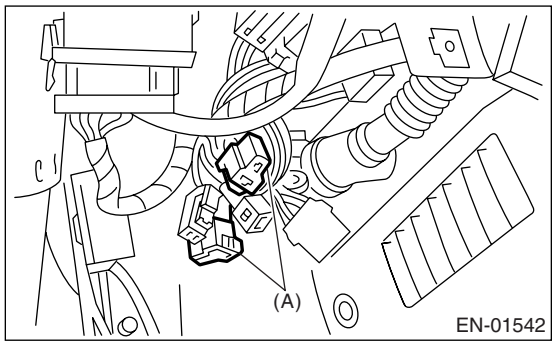

(A) Test mode connector

2) Connect the SUBARU Select Monitor to data link connector. <Ref. to EN(H4SOw/oOBD)-9, LOCATION, Electrical Components Location.>
3) Turn the ignition switch to ON (engine OFF) and SUBARU Select Monitor switch to ON.

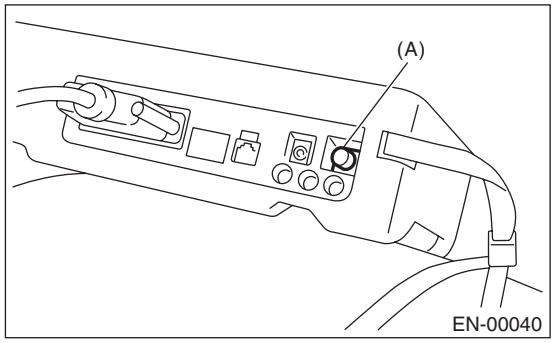

(A) Power switch

4) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
5) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
6) Press the [YES] key after displayed the information of engine type.
7) On the «Engine Diagnosis» display screen, select the {6. Dealer Check Mode Procedure} and press the [YES] key.
8) When the "Perform Inspection (Dealer Check) Mode?" is shown on the display screen, press the [YES] key.

9) Perform subsequent procedures as instructed on the display screen.
• If trouble still remains in the memory, the corresponding DTC appears on the display screen.

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For detailed concerning DTCs, refer to the DTC LIST. <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>
• On AWD vehicles, release the parking brake.
• The speed difference between front and rear wheels may light ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

3. WITHOUT SUBARU SELECT MONITOR

	Step	Check	Yes	No
1	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Start and warm-up the engine. 2)Turn the ignition switch to OFF. 3)Set the shift lever to neutral position (MT model), or set selector lever to “P” position (AT model). 4)Connect the test mode connector (green) at lower portion of instrument panel (on driver’s side). 5)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Go to step **2.**	Check the following and repair if necessary. NOTE: • Open or short circuit in engine control module power supply or ground line • Open or short circuit in malfunction indicator light
2	**CHECK DTC.** 1)Set the selector lever to “N” position, and then set selector lever to “P” position again (AT model only). 2)Start the engine.	Does the malfunction indicator light indicate DTC?	Record the DTC and inspect using DTC. <Ref. to EN(H4SOw/oOBD)-56, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Go to step **3.**
3	**CHECK DTC.** 1)Drive the vehicle at speed greater than 11 km/h (7 MPH) for at least 1 minute. 2)Warm-up the engine above 2,000 rpm.	Does the malfunction indicator light indicate DTC?	Record the DTC and inspect using DTC. <Ref. to EN(H4SOw/oOBD)-56, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Turn the ignition switch to OFF. Disconnect the test mode connector. Complete the inspection mode. NOTE: When the on-board diagnosis system indicates no trouble, trouble is in a different symptom.

9. Clear Memory Mode

A: OPERATION

1. WITH SUBARU SELECT MONITOR

1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
5) When the “Done” and “Turn Ignition Switch OFF” are shown on the display screen, turn the SUBARU Select Monitor and ignition switch to OFF.

NOTE:
• After the memory has been cleared, the ISC must be initialized. To do this, turn the ignition switch to the ON position. Wait 3 seconds before starting the engine.
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

2. WITHOUT SUBARU SELECT MONITOR

	Step	Check	Yes	No
1	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Set the shift lever to neutral position (MT model), or set selector lever to “P” position (AT model). 3)Connect the test mode connector and read memory connector at lower portion of instrument panel (on driver’s side). 4)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Go to step **2.**	Check the following and repair if necessary. NOTE: • Open or short circuit in engine control module power supply or ground line • Open or short circuit in malfunction indicator light
2	**CHECK DTC.** 1)Set the selector lever to “N” position, and then set selector lever to “P” position again (AT model only). 2)Start the engine. 3)Drive the vehicle at speed greater than 11 km/h (7 MPH) for at least 1 minute. 4)Warm-up engine above 2,000 rpm.	Does the malfunction indicator light indicate DTC? <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>	Record the DTC. Repair the trouble cause. <Ref. to EN(H4SOw/oOBD)-56, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Turn the ignition switch to OFF. Disconnect the read memory connector and test mode connector. Complete the Clear Memory Mode.

10. Compulsory Valve Operation Check Mode

A: OPERATION

1) Connect the test mode connector at the lower portion of instrument panel (on the driver's side).

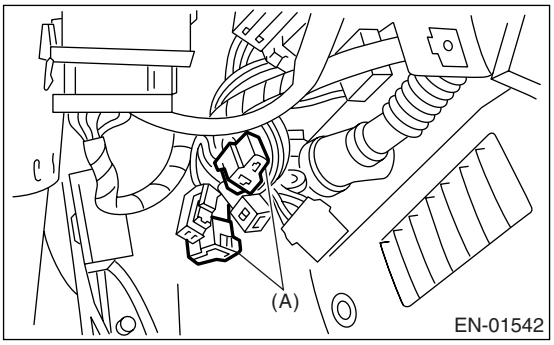

(A) Test mode connector

2) Each valve functions when the ignition switch is turned to ON (engine OFF).

• A list of the support portion is shown in the following table.

Contents
Compulsory fuel pump relay operation check
Compulsory purge control solenoid valve operation check
Compulsory radiator fan relay operation check
Compulsory air conditioning relay operation check

11.Malfunction Indicator Light

A: PROCEDURE

1. Activation of malfunction indicator light. <Ref. to EN(H4SOw/oOBD)-29, ACTIVATION OF MALFUNCTION INDICATOR LIGHT, Malfunction Indicator Light.>
↓
2. Malfunction indicator light does not come on. <Ref. to EN(H4SOw/oOBD)-31, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction Indicator Light.>
↓
3. Malfunction indicator light does not go off. <Ref. to EN(H4SOw/oOBD)-33, MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF., Malfunction Indicator Light.>
↓
4. Malfunction indicator light does not blink at a cycle of 3 Hz. <Ref. to EN(H4SOw/oOBD)-34, MALFUNCTION INDICATOR LIGHT DOES NOT BLINK AT A CYCLE OF 3 HZ., Malfunction Indicator Light.>
↓
5. Malfunction indicator light remains blinking at a cycle of 3 Hz. <Ref. to EN(H4SOw/oOBD)-36, MALFUNCTION INDICATOR LIGHT REMAINS BLINKING AT A CYCLE OF 3 HZ., Malfunction Indicator Light.>

B: ACTIVATION OF MALFUNCTION INDICATOR LIGHT

1) When the ignition switch is turned to ON (engine off), the malfunction indicator light in the combination meter illuminates.

NOTE:
If the malfunction indicator light does not illuminate, perform diagnostics of the malfunction indicator light circuit or the combination meter circuit. <Ref. to IDI-11, Combination Meter Assembly.>

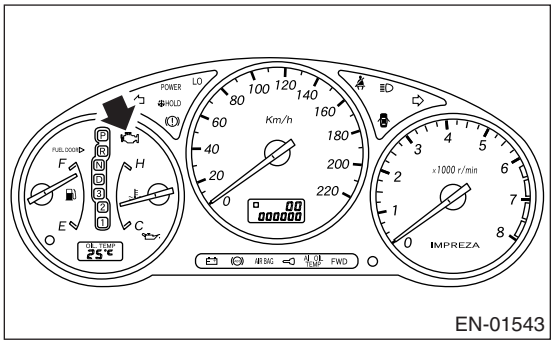

2) After starting the engine, the malfunction indicator light goes out. If it does not, either the engine or the emission control system is malfunctioning. <Ref. to EN(H4SOw/oOBD)-2, PROCEDURE, Basic Diagnostic Procedure.>

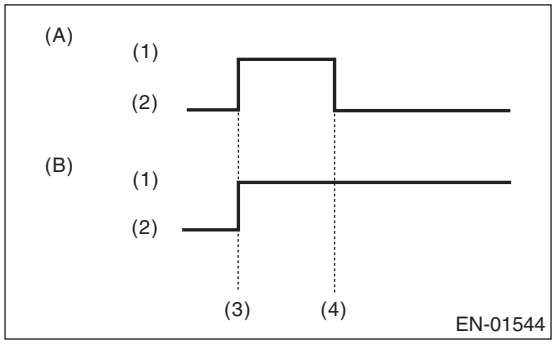

(A) Malfunction indicator light when no trouble
(B) Malfunction indicator light when trouble occurs
(1) ON
(2) OFF
(3) Ignition switch ON
(4) Engine start

3) When the ignition switch is turned to ON (engine off) or to START with the test mode connector connected, the malfunction indicator light blinks at a cycle of 3 Hz.

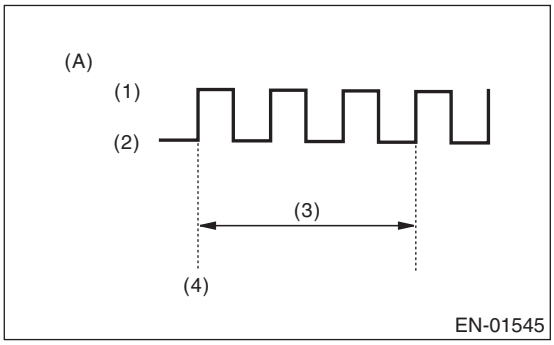

(A) Malfunction indicator light when no trouble
(1) ON
(2) OFF
(3) 1 sec.
(4) Ignition switch ON

C: MALFUNCTION INDICATOR LIGHT DOES NOT COME ON.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is open or shorted.
- **TROUBLE SYMPTOM:**
  - When the ignition switch is turned ON (engine OFF), the malfunction indicator light does not come on.
- **WIRING DIAGRAM:**

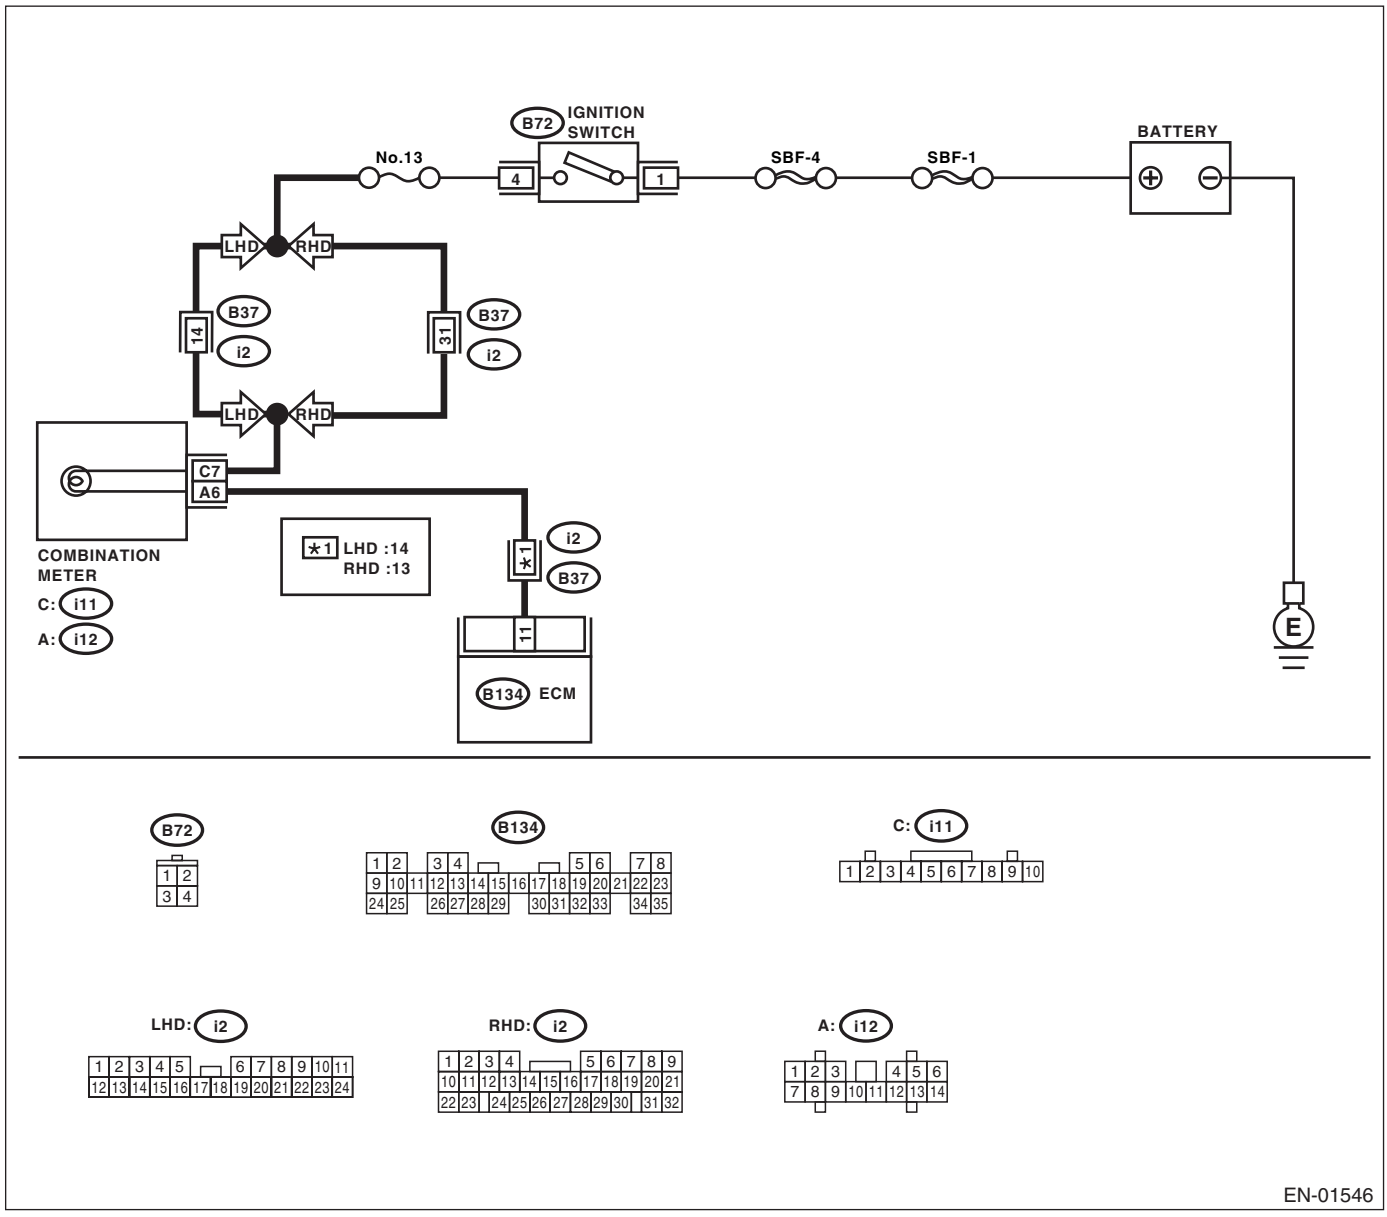

Step		Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 11 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Go to step **2.**
2	**CHECK POOR CONTACT.**	Does the malfunction indicator light come on when shaking or pulling ECM connector and harness?	Repair poor contact in the ECM connector.	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK ECM CONNECTOR.**	Is the ECM connector correctly connected?	Replace the ECM.	Repair the connection of ECM connector.
4	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. <Ref. to IDI-11, Combination Meter Assembly.> 3)Disconnect the connector from ECM and combination meter. 4)Measure the resistance of harness between ECM and combination meter connector. ***Connector & terminal*** ***(B134) No. 11 — (i12) No. 6:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and combination meter connector • Poor contact in coupling connector
5	**CHECK POOR CONTACT.** Check poor contact in combination meter connector. <Ref. to IDI-11, Combination Meter Assembly.>	Is there poor contact in combination meter connector?	Repair the poor contact in combination meter connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN COMBINATION METER AND IGNITION SWITCH CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 7 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **7.**	Check the following and repair if necessary. NOTE: • Broken down ignition relay • Blown out fuse (No. 5) • If replaced fuse (No. 5) blows easily, check the harness for short circuit of harness between fuse (No. 5) and ignition relay connector. • Open or short circuit in harness between fuse (No. 5) and battery terminal • Open circuit in harness between fuse (No. 5) and ignition relay connector • Poor contact in ignition relay connector • Poor contact in ignition switch connector
7	**CHECK POOR CONTACT.** Check poor contact in combination meter connector. <Ref. to IDI-11, Combination Meter Assembly.>	Is there poor contact in combination meter connector?	Repair the poor contact in combination meter connector.	Replace the bulb or combination meter.

D: MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is shorted.
- **TROUBLE SYMPTOM:**
  - Although the malfunction indicator light comes on when engine runs, but DTC is not shown on SUBARU Select Monitor or OBD-II general scan tool display.
- **WIRING DIAGRAM:**

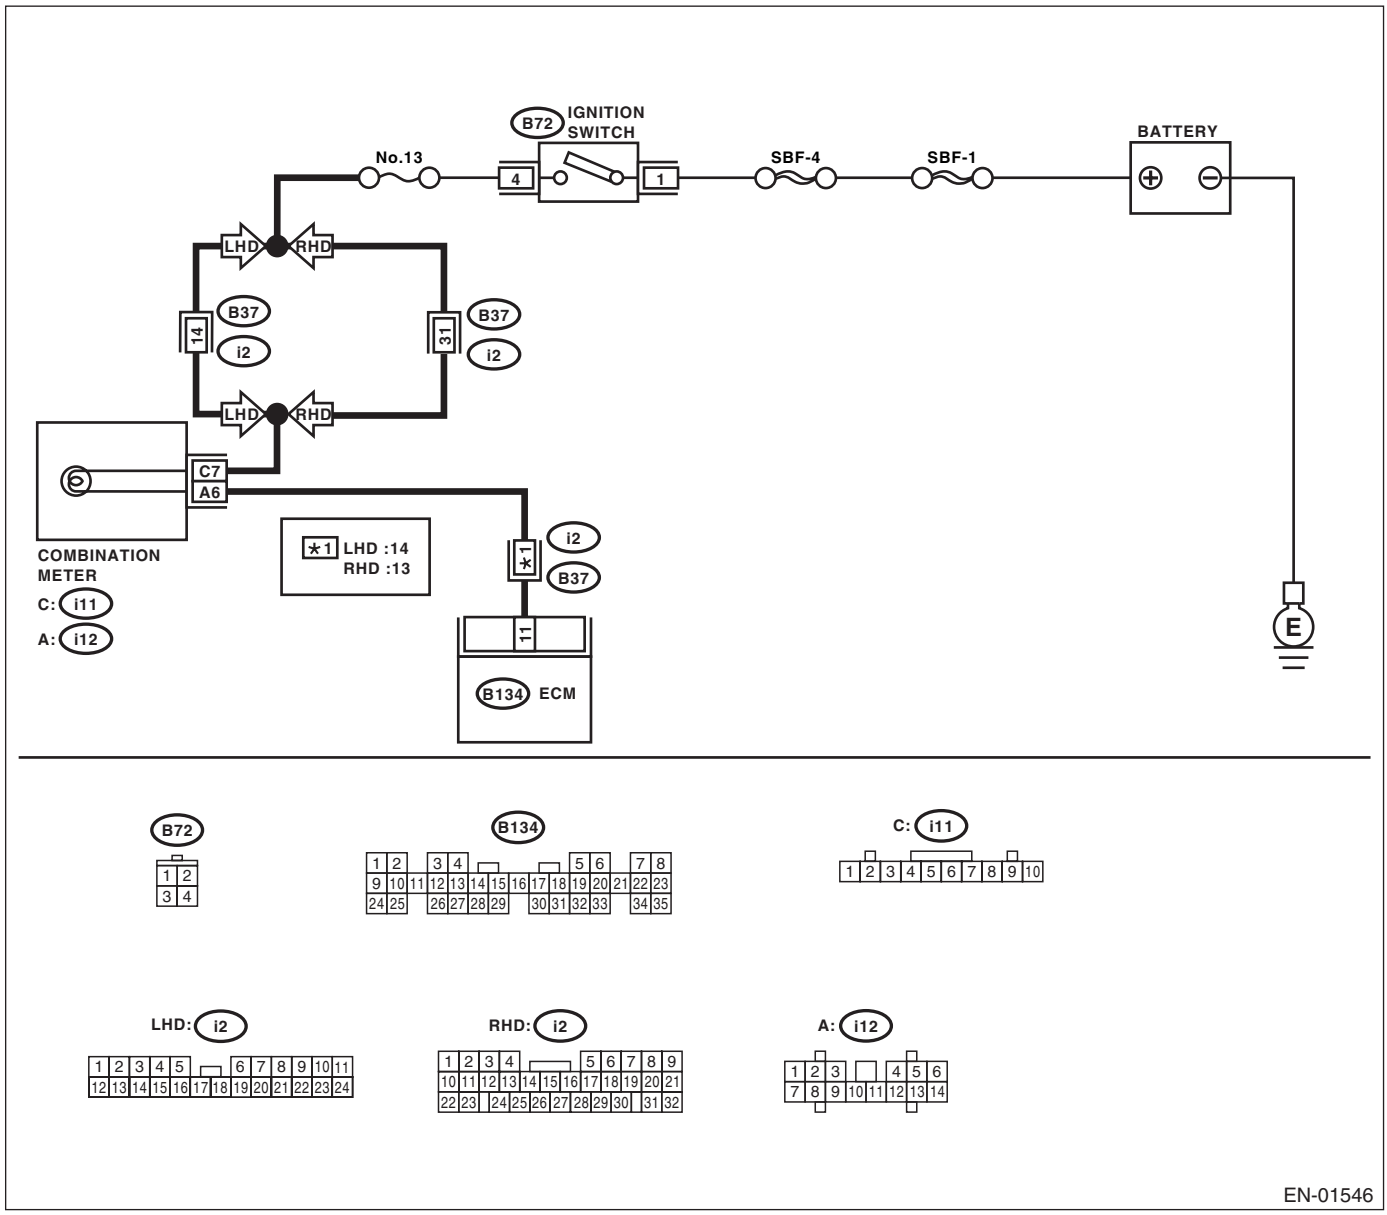

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Repair the short circuit in harness between combination meter and ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

E: MALFUNCTION INDICATOR LIGHT DOES NOT BLINK AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is open or shorted.
  - Test mode connector circuit is in open.
- **TROUBLE SYMPTOM:**
  - During inspection mode, the malfunction indicator light does not blink at a cycle of 3 Hz.
- **WIRING DIAGRAM:**

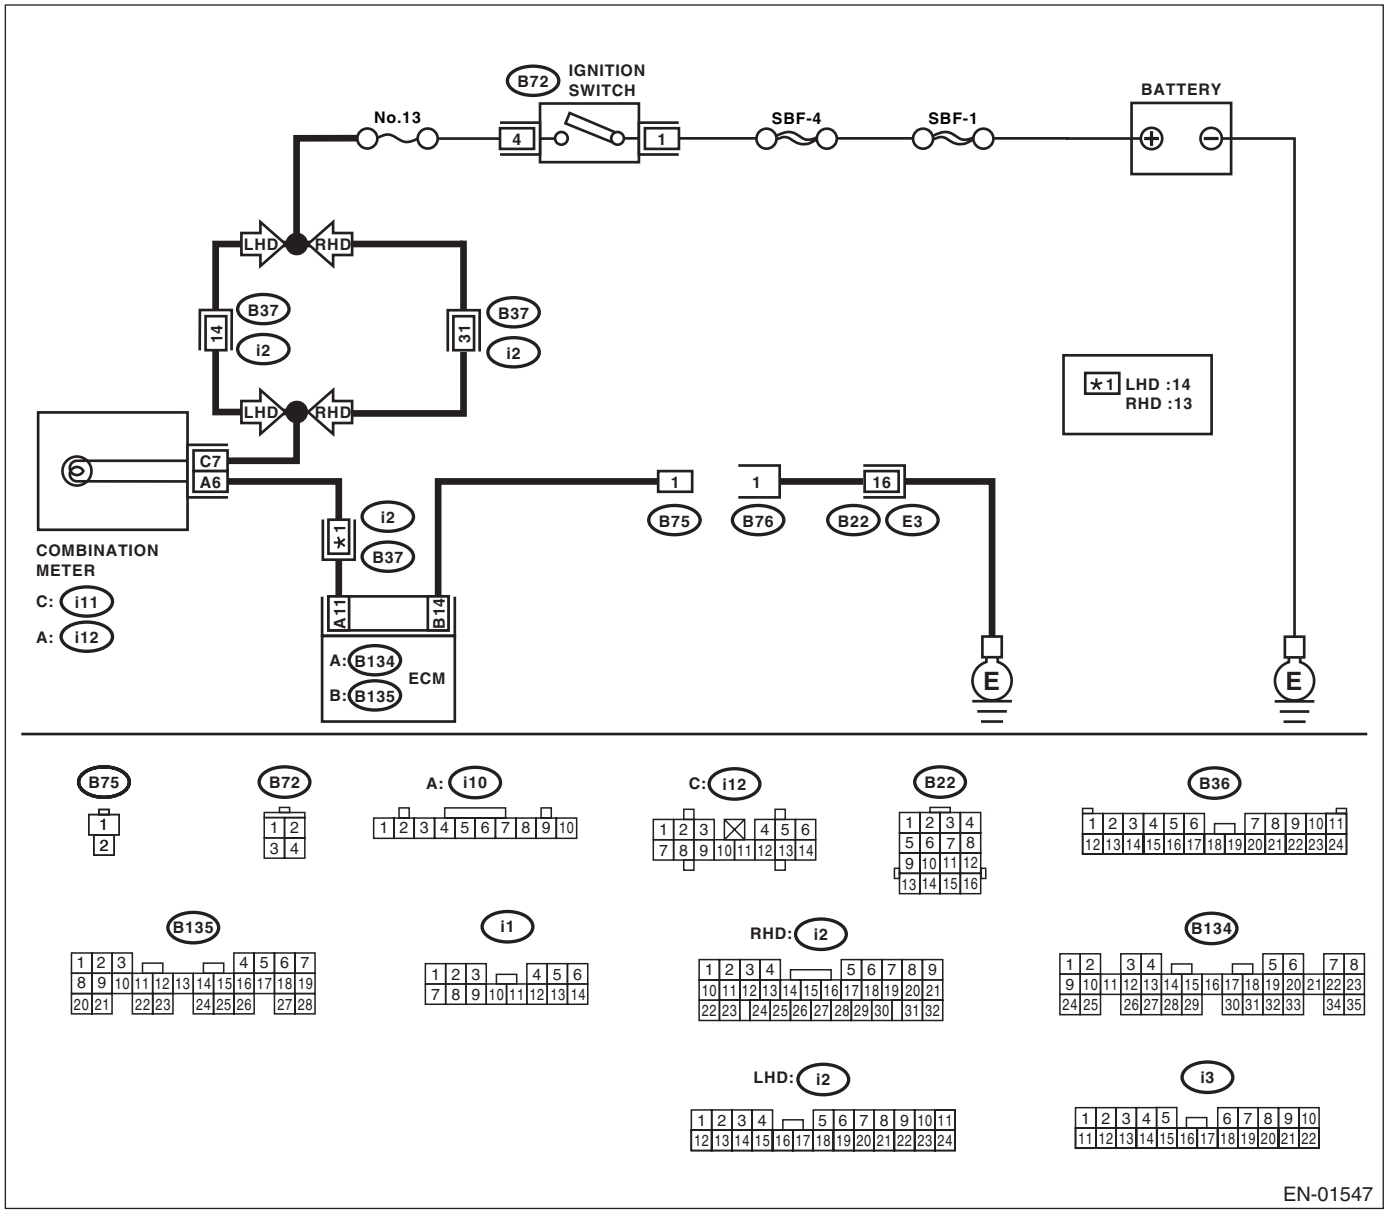

	Step	Check	Yes	No
1	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Disconnect the test mode connector at lower portion of instrument panel (on driver's side). 3)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Go to step **2.**	Repair the malfunction indicator light circuit. <Ref. to EN(H4SOw/oOBD)-31, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction Indicator Light.>
2	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between test mode connector and chassis ground. ***Connector & terminal*** ***(B75) No. 1 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Go to step **5.**
3	**CHECK HARNESS BETWEEN ECM AND TEST MODE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and test mode connector. ***Connector & terminal*** ***(B135) No. 14 — (B75) No. 1:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and test mode connector
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>
5	**CHECK HARNESS BETWEEN READ MEMORY CONNECTOR AND CHASSIS GROUND.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between read memory connector and chassis ground. ***Connector & terminal*** ***(B76) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between read memory connector and chassis ground
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

F: MALFUNCTION INDICATOR LIGHT REMAINS BLINKING AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - Test mode connector circuit is shorted.
- **TROUBLE SYMPTOM:**
  - Even though test mode connector is disconnected, the malfunction indicator light blinks at a cycle of 3 Hz when ignition switch is turned to ON.
- **WIRING DIAGRAM:**

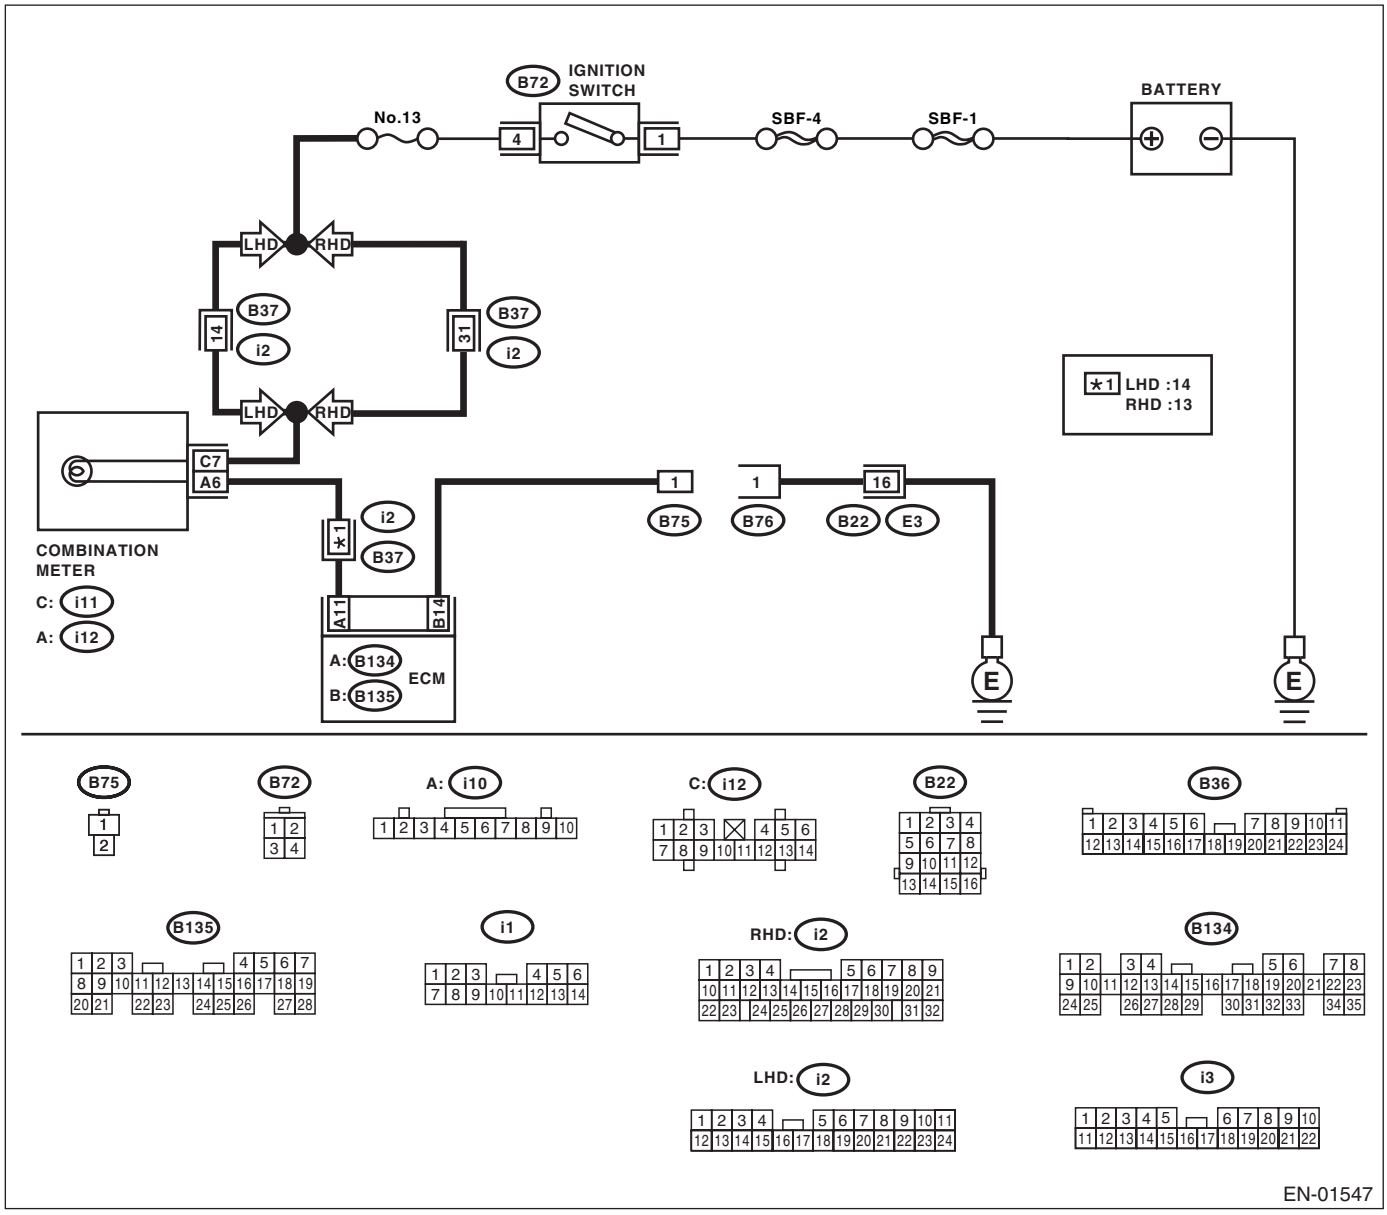

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM CONNECTOR AND ENGINE GROUNDING TERMINAL.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM connector and engine ground. ***Connector & terminal*** ***(B135) No. 14 — Engine ground:***	Is the resistance less than 5 Ω?	Repair the short circuit in harness between ECM and test mode connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

12.Diagnostics for Engine Starting Failure

A: PROCEDURE

1. Inspection of starter motor circuit. <Ref. to EN(H4SOw/oOBD)-38, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
2. Inspection of ECM power supply and ground line. <Ref. to EN(H4SOw/oOBD)-41, ENGINE CONTROL MODULE (ECM) POWER SUPPLY AND GROUND LINE, Diagnostics for Engine Starting Failure.>
↓
3. Inspection of ignition control system. <Ref. to EN(H4SOw/oOBD)-44, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
↓
4. Inspection of fuel pump circuit. <Ref. to EN(H4SOw/oOBD)-48, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
5. Inspection of fuel injector circuit. <Ref. to EN(H4SOw/oOBD)-51, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

B: STARTER MOTOR CIRCUIT

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

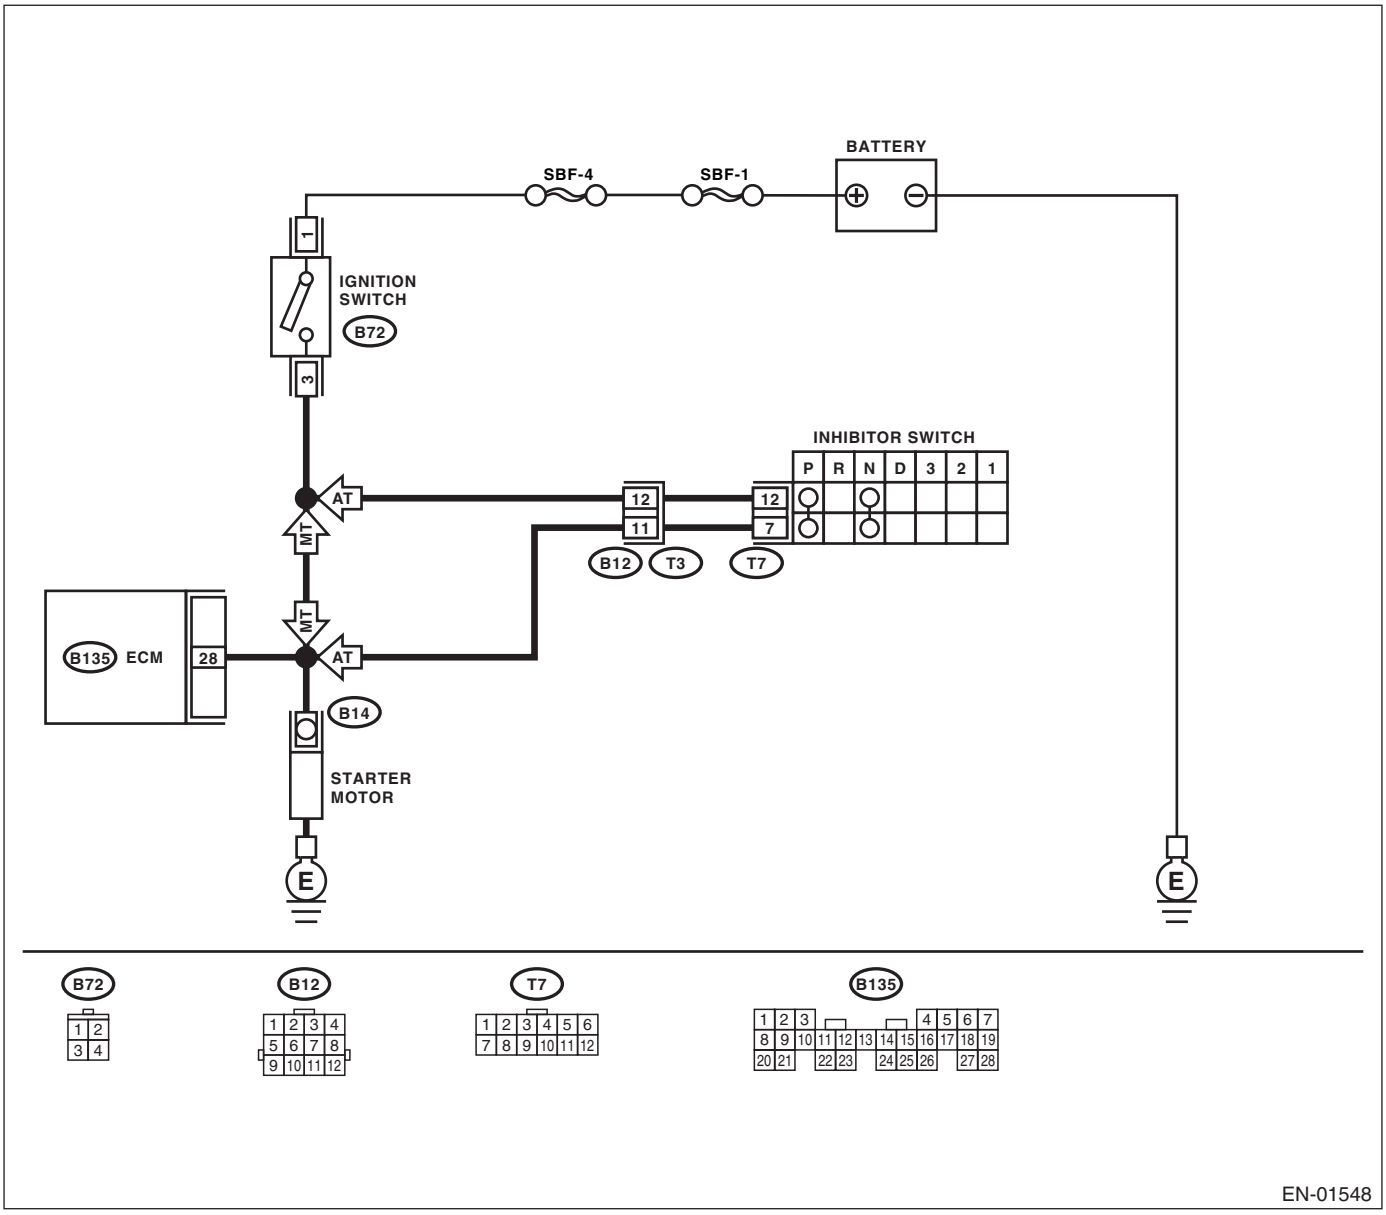

Step		Check	Yes	No
1	**CHECK OPERATION OF STARTER MOTOR.**	Does the starter motor operate when the switch starts?	Go to step **2.**	Go to step **3.**
2	**CHECK DTC.** <Ref. to EN(H4SOw/oOBD)-23, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is the DTC stored in memory? <Ref. to EN(H4SOw/oOBD)-54, LIST, List of Diagnostic Trouble Code (DTC).>	Record the DTC. Repair the trouble cause. <Ref. to EN(H4SOw/oOBD)-56, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK INPUT SIGNAL FOR STARTER MOTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from starter motor. 3)Turn the ignition switch to START. 4)Measure the power supply voltage between starter motor connector terminal and engine ground. ***Connector & terminal*** ***(B14) No. 1 (+) — Engine ground (−):*** NOTE: On AT model, place the selector lever in the "P" or "N" position.	Is the voltage more than 10 V?	Go to step **4.**	Go to step **5.**
4	**CHECK GROUND CIRCUIT OF STARTER MOTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the terminal from starter motor. 3)Measure the resistance of ground cable between ground cable terminal and engine ground.	Is the resistance less than 5 Ω?	Check the starter motor. <Ref. to SC(H4SO)-10, INSPECTION, Starter.>	Repair the open circuit of ground cable.
5	**CHECK HARNESS BETWEEN ECM AND STARTER MOTOR CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between starter motor and ECM. ***Connector & terminal*** ***(B14) No. 1 — Engine ground:***	Is the resistance less than 1 Ω?	Repair the ground short circuit.	Go to step **6.**
6	**CHECK HARNESS BETWEEN ECM AND STARTER MOTOR CIRCUIT.** 1)Turn the ignition switch to START. 2)Measure the resistance of fuse. ***Connector & terminal*** ***(B14) No. 1 — Engine ground:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair the ground short circuit.
7	**CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.** 1)Ignition the switch to OFF. 2)Disconnect the connector from ignition switch. 3)Measure the power supply voltage between ignition switch connector and chassis ground. ***Connector & terminal*** ***(B72) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **8.**	Repair the open circuit in harness between ignition switch and battery.
8	**CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.** 1)Connect the connector to ignition switch. 2)Turn the ignition switch to START. 3)Measure the voltage between ignition switch and chassis ground. ***Connector & terminal*** ***(B72) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **9.**	Replace the ignition switch.
9	**CHECK TRANSMISSION TYPE.**	Is the vehicle AT?	Go to step **10.**	Repair the open circuit between ignition switch and starter motor circuit.

	Step	Check	Yes	No
10	**CHECK INHIBITOR SWITCH CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Place the selector lever in the “P” or “N” position. 3)Separate the transmission harness connector. 4)Measure the resistance between transmission harness connector receptacle's terminals. ***Connector & terminal*** ***(T3) No. 11 — No. 12:***	Is the resistance less than 1 Ω?	Repair the open circuit in harness between starter motor and ignition switch connector.	Go to step **11.**
11	**CHECK TRANSMISSION HARNESS.** 1)Disconnect the connector from inhibitor switch. 2)Measure the resistance of harness between transmission harness and inhibitor switch connector. ***Connector & terminal*** ***(T3) No. 11 — (T7) No. 7:*** ***(T3) No. 12 — (T7) No. 12:***	Is the resistance less than 1 Ω?	Go to step **12.**	Repair the open circuit in harness between transmission harness and inhibitor switch connector.
12	**CHECK POOR CONTACT.** Check poor contact in inhibitor switch connector.	Is there poor contact in inhibitor switch connector?	Repair the poor contact in inhibitor switch connector.	Replace the inhibitor switch.

C: ENGINE CONTROL MODULE (ECM) POWER SUPPLY AND GROUND LINE

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

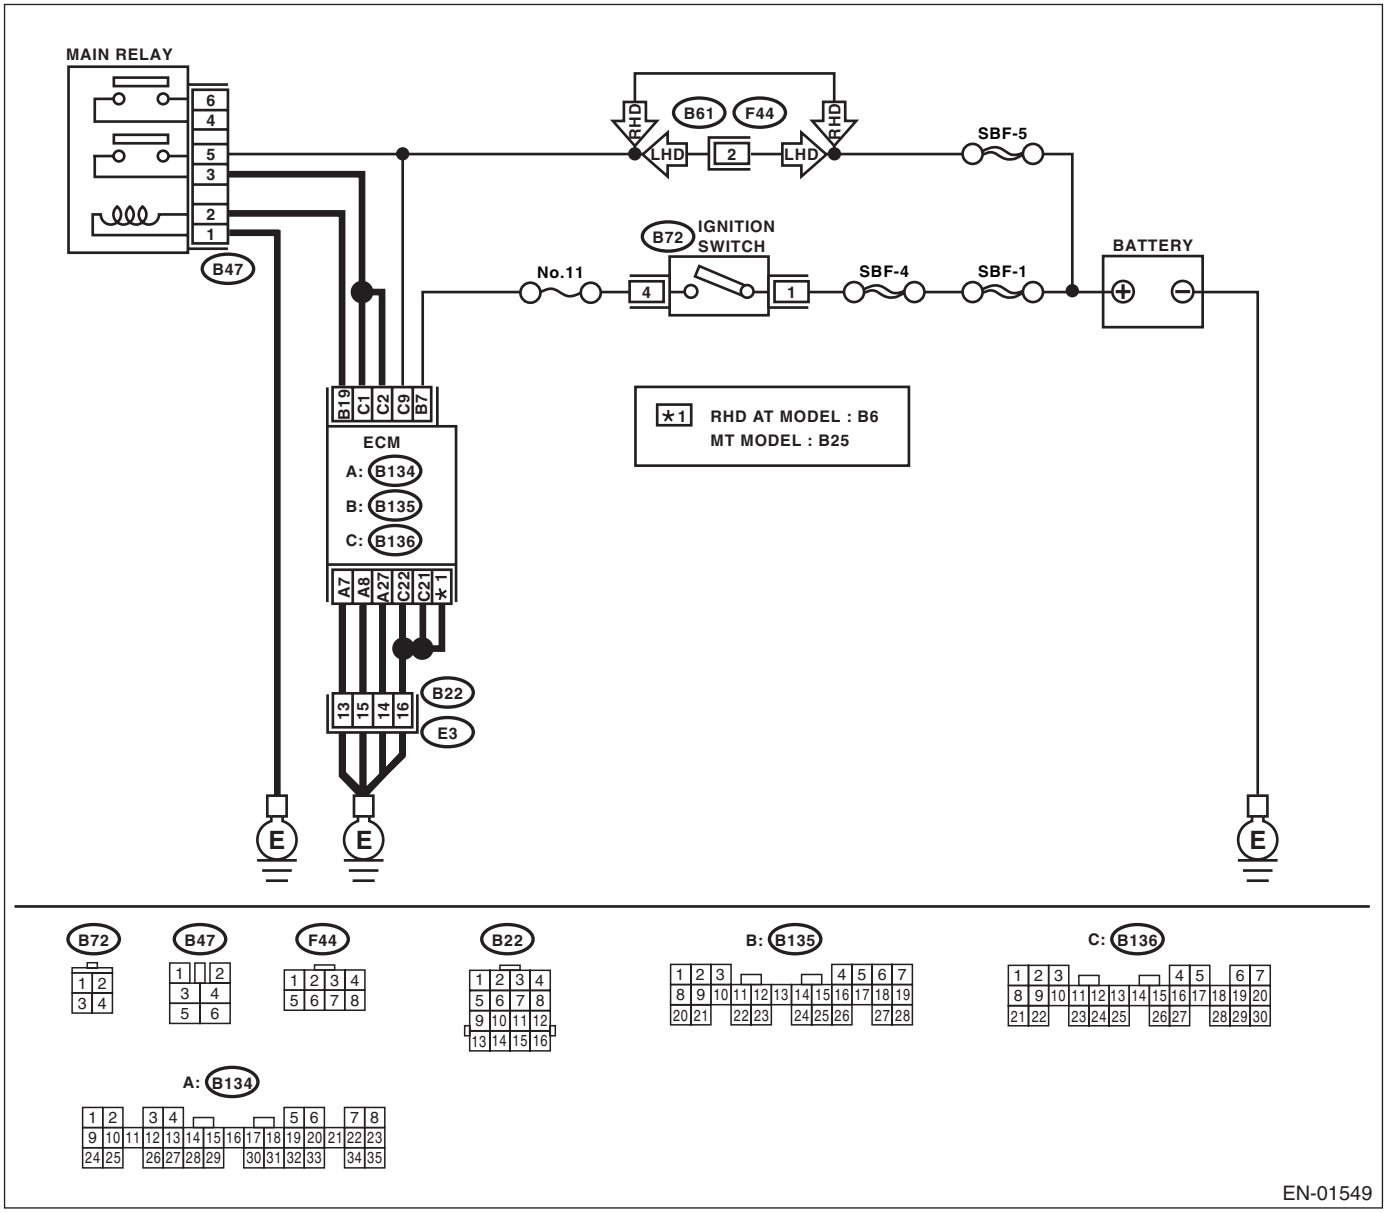

	Step	Check	Yes	No
1	**CHECK MAIN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main relay. 3)Connect the battery to main relay terminals No. 1 and No. 2. 4)Measure the resistance between main relay terminals. ***Terminals*** ***No. 3 — No. 5:*** ***No. 4 — No. 6:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the main relay.
2	**CHECK GROUND CIRCUIT OF ECM.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 21 — Chassis ground:*** ***(B136) No. 22 — Chassis ground:*** ***(B134) No. 27 — Chassis ground:*** ***(B134) No. 8 — Chassis ground:*** ***(B134) No. 7 — Chassis ground:*** ***(B135) No. 25 — Chassis ground: (MT model)*** ***(B135) No. 6 — Chassis ground: (RHD AT model)***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the open circuit in harness between ECM connector and engine grounding terminal.
3	**CHECK INPUT VOLTAGE OF ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 9 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the open or ground short circuit of power supply circuit.
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 7 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **5.**	Repair the open or ground short circuit of power supply circuit.
5	**CHECK HARNESS BETWEEN ECM AND MAIN RELAY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the ground short circuit in harness between ECM connector and main relay connector, and then replace the ECM.
6	**CHECK OUTPUT VOLTAGE FROM ECM.** 1)Connect the connector to ECM. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 19 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Replace the ECM.
7	**CHECK INPUT VOLTAGE OF MAIN RELAY.** Check the voltage between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **8.**	Repair the open circuit in harness between ECM connector and main relay connector.

	Step	Check	Yes	No
8	**CHECK GROUND CIRCUIT OF MAIN RELAY.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 1 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **9.**	Repair the open circuit between main relay and chassis ground.
9	**CHECK INPUT VOLTAGE OF MAIN RELAY.** Measure the voltage between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 5 (+) — Chassis ground (–):*** ***(B47) No. 6 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **10.**	Repair the open or ground short circuit in harness of power supply circuit.
10	**CHECK INPUT VOLTAGE OF ECM.** 1)Connect the main relay connector. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 1 (+) — Chassis ground (–):*** ***(B136) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Check the ignition control system. <Ref. to EN(H4SOw/oOBD)-44, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Repair the open or ground short circuit in harness between ECM connector and main relay connector.

D: IGNITION CONTROL SYSTEM

CAUTION:
After repair or replacement of the faulty parts, conduct the Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

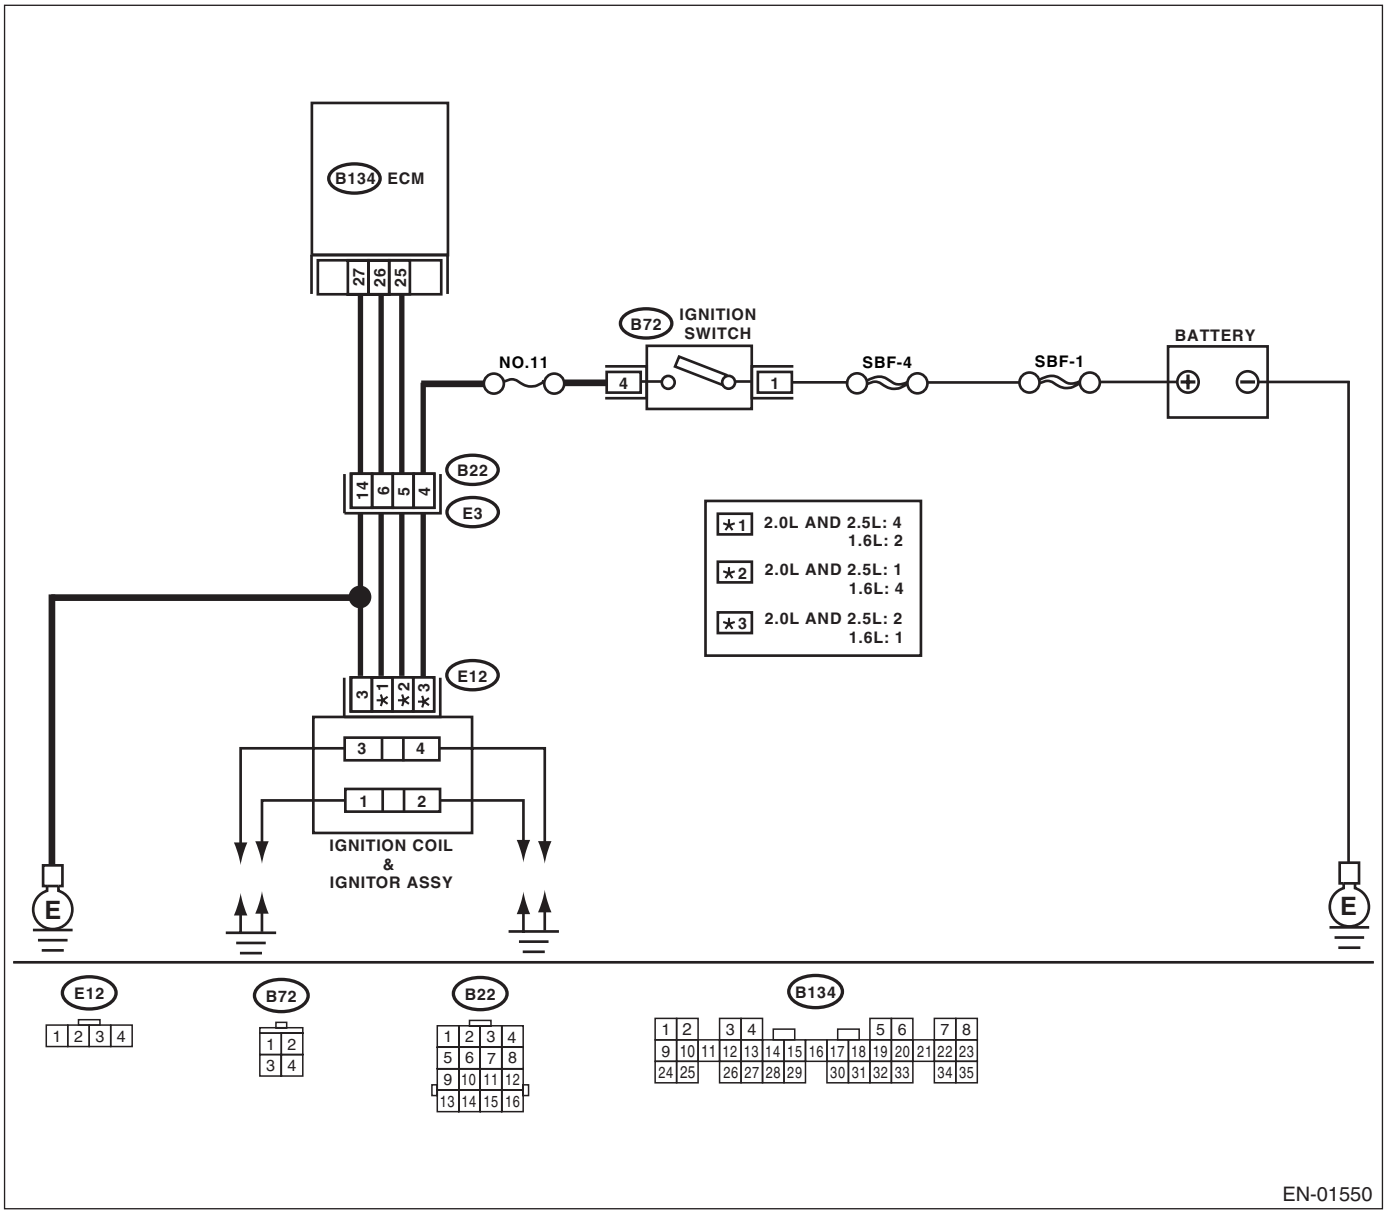

	Step	Check	Yes	No
1	**CHECK IGNITION SYSTEM FOR SPARKS.** 1)Remove the plug cord cap from each spark plug. 2)Install new spark plug on the plug cord cap. **CAUTION:** **Do not remove the spark plug from engine.** 3)Contact the spark plug's thread portion on engine. 4)While opening the throttle valve fully, crank engine to check that spark occurs at each cylinder.	Does spark occur at each cylinder?	Check the fuel pump system. <Ref. to EN(H4SOw/oOBD)-48, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step **2.**
2	**CHECK POWER SUPPLY CIRCUIT FOR IGNITION COIL & IGNITOR ASSY.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ignition coil & ignitor ASSY. 3)Turn the ignition switch to ON. 4)Measure the power supply voltage between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***1.6 L*** ***(E12) No. 1 (+) — Engine ground (−):*** ***2.0 L and 2.5 L*** ***(E12) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit or ground short in harness between ignition coil & ignitor ASSY, and ignition switch connector • Poor contact in coupling connector (B22)
3	**CHECK HARNESS OF IGNITION COIL & IGNITOR ASSY GROUND CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***(E12) No. 3 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ignition coil & ignitor ASSY connector and engine grounding terminal
4	**CHECK IGNITION COIL & IGNITOR ASSY.** 1)Remove the spark plug cords. 2)Measure the resistance between spark plug cord contact portions to check secondary coil. ***Terminals*** ***1.6 L*** ***No. 4 — No. 1:*** ***2.0 L and 2.5 L*** ***No. 1 — No. 2:***	Is the resistance 10 — 15 Ω?	Go to step **5.**	Replace the ignition coil & ignitor ASSY.
5	**CHECK IGNITION COIL & IGNITOR ASSY.** Measure the resistance between spark plug cord contact portions to check secondary coil. ***Terminals*** ***1.6 L*** ***No. 3 — No. 2:*** ***2.0 L and 2.5 L*** ***No. 3 — No. 4:***	Is the resistance 10 — 15 Ω?	Go to step **6.**	Replace the ignition coil & ignitor ASSY.

	Step	Check	Yes	No
6	**CHECK INPUT SIGNAL FOR IGNITION COIL & IGNITOR ASSY.** Check if the voltage varies synchronously with engine speed when cranking, while monitoring voltage between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***1.6 L*** ***(E12) No. 4 (+) — Engine ground (–):*** ***2.0 L and 2.5 L*** ***(E12) No. 1 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Replace the ignition coil & ignitor ASSY.
7	**CHECK INPUT SIGNAL FOR IGNITION COIL & IGNITOR ASSY.** Check if the voltage varies synchronously with engine speed when cranking, while monitoring voltage between ignition coil & ignitor ASSY connector and engine ground. ***Connector & terminal*** ***1.6 L*** ***(E12) No. 2 (+) — Engine ground (–):*** ***2.0 L and 2.5 L*** ***(E12) No. 4 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **8.**	Replace the ignition coil & ignitor ASSY.
8	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and ignition coil & ignitor ASSY connector. ***Connector & terminal*** ***1.6 L*** ***(B134) No. 26 — (E12) No. 2:*** ***2.0 L and 2.5 L*** ***(B134) No. 26 — (E12) No. 4:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and ignition coil & ignitor ASSY connector • Poor contact in a coupling connector (B22)
9	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** Measure the resistance of harness between ECM and ignition coil & ignitor ASSY connector. ***Connector & terminal*** ***1.6 L*** ***(B134) No. 25 — (E12) No. 4:*** ***2.0 L and 2.5 L*** ***(B134) No. 25 — (E12) No. 1:***	Is the resistance less than 1 Ω?	Go to step **10.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and ignition coil & ignitor ASSY connector • Poor contact in a coupling connector (B22)

	Step	Check	Yes	No
10	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** Measure the resistance of harness between ECM and ignition coil & ignitor ASSY connector. ***Connector & terminal:*** ***(B134) No. 27 — (E12) No. 3:***	Is the resistance less than 1 Ω?	Go to step **11.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and ignition coil & ignitor ASSY connector • Poor contact in a coupling connector (B22)
11	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal:*** ***(B134) No. 26 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **12.**	Repair the ground short circuit in harness between ECM and ignition coil & ignitor ASSY connector.
12	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 25 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **13.**	Repair the ground short circuit in harness between ECM and ignition coil & ignitor ASSY connector.
13	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Check the spark plug and spark plug cord. <Ref. to IG(H4SO)-6, INSPECTION, Spark Plug.> <Ref. to IG(H4SO)-10, INSPECTION, Spark Plug Cord.>

E: FUEL PUMP CIRCUIT

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

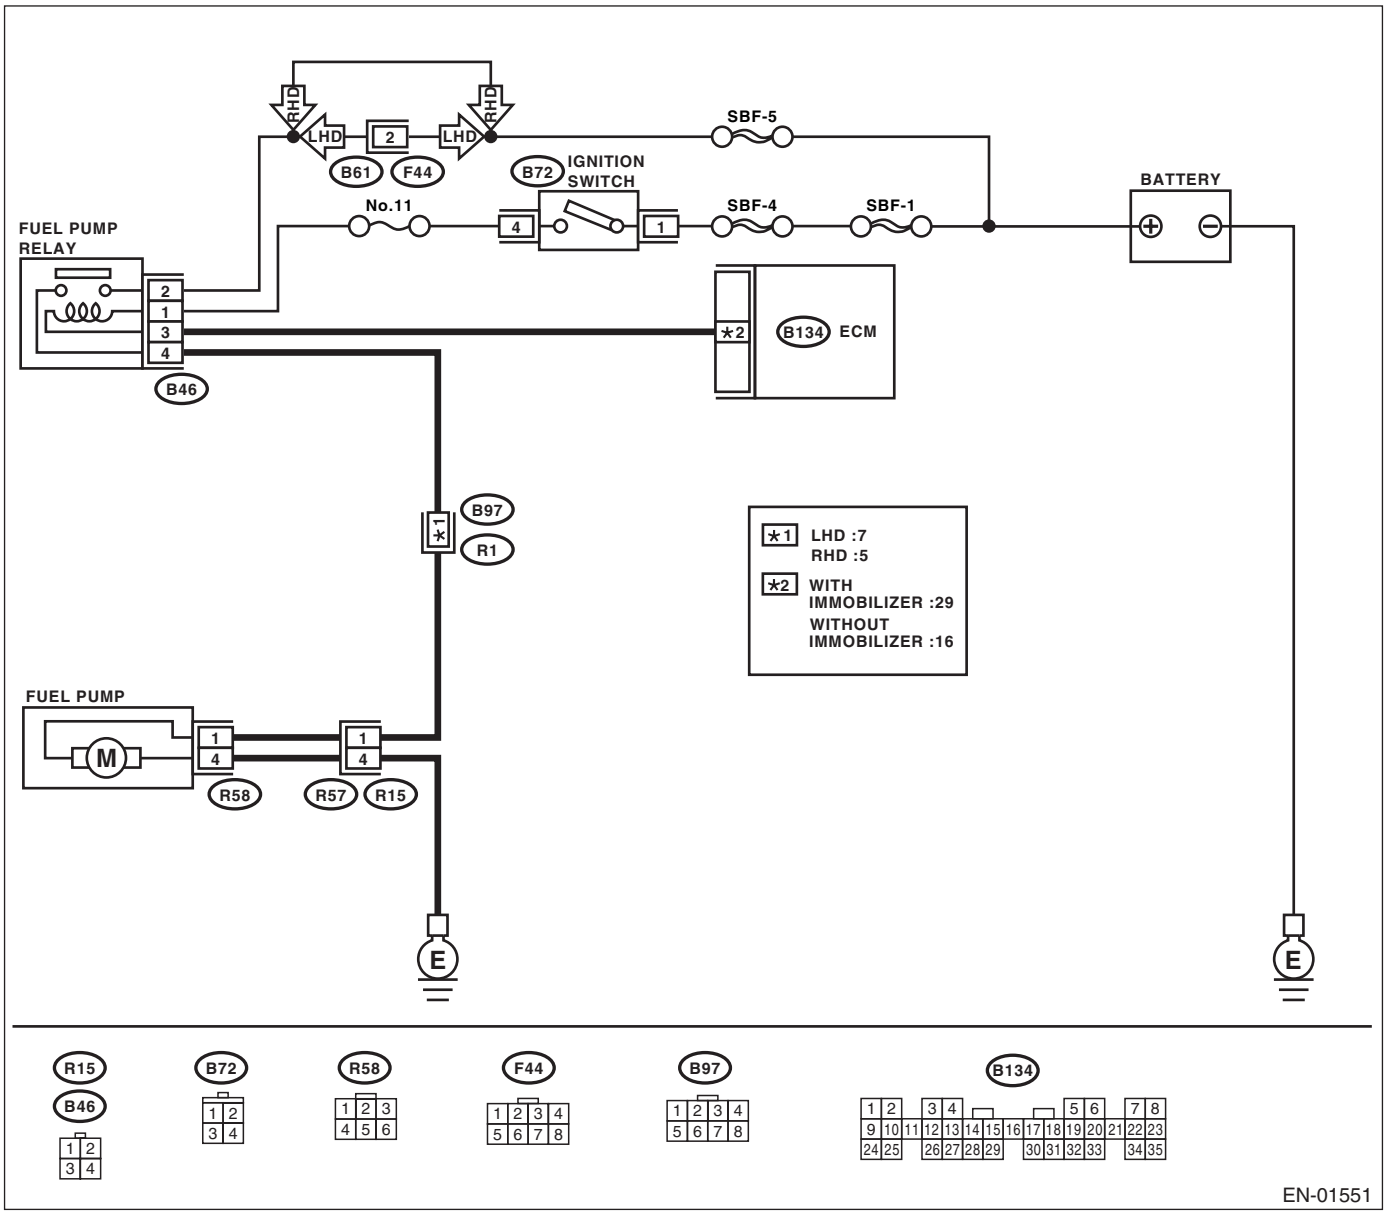

	Step	Check	Yes	No
1	**CHECK OPERATING SOUND OF FUEL PUMP.** Make sure that the fuel pump is in operation for 2 seconds when turning ignition switch to ON. NOTE: Fuel pump operation check can also be executed using "COMPULSORY VALVE OPERATION CHECK MODE". For the procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE".<Ref. to EN(H4SOw/oOBD)-28, OPERATION, Compulsory Valve Operation Check Mode.>	Does the fuel pump produce operating sound?	Check the fuel injector circuit. <Ref. to EN(H4SOw/oOBD)-51, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step **2.**
2	**CHECK GROUND CIRCUIT OF FUEL PUMP.** 1)Turn the ignition switch to OFF. 2)Raise the rear seat, and turn the floor mat up. 3)Remove the service hole cover. 4)Disconnect the connector from fuel pump. 5)Measure the resistance of harness connector between fuel pump and chassis ground. ***Connector & terminal*** ***(R58) No. 4 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between fuel pump connector and chassis grounding terminal • Poor contact in coupling connector (R15) and (B97)
3	**CHECK POWER SUPPLY TO FUEL PUMP.** 1)Turn the ignition switch to ON. 2)Measure the voltage of power supply circuit between fuel pump connector and chassis ground. ***Connector & terminal*** ***(R58) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the fuel pump.	Go to step **4.**
4	**CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between fuel pump and fuel pump relay connector. ***Connector & terminal*** ***(R58) No. 1 — (B46) No. 4:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between fuel pump and fuel pump relay connector • Poor contact in coupling connectors (R15) and (B97)
5	**CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.** Measure the resistance of harness between fuel pump and fuel pump relay connector. ***Connector & terminal*** ***(R58) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the ground short circuit in harness between fuel pump and fuel pump relay connector.

	Step	Check	Yes	No
6	**CHECK FUEL PUMP RELAY.** 1)Disconnect the connector from fuel pump relay. 2)Remove the fuel pump relay from bracket. 3)Connect the battery to fuel pump relay connector terminals No. 1 and No. 3. 4)Measure the resistance between connector terminals of fuel pump relay. ***Terminals*** ***No. 2 — No. 4:***	Is the resistance less than 10 Ω?	Go to step **7.**	Replace the fuel pump relay.
7	**CHECK HARNESS BETWEEN ECM AND FUEL PUMP RELAY CONNECTOR.** 1)Disconnect the connectors from ECM. 2)Measure the resistance of harness between ECM and fuel pump relay connector. ***Connector & terminal*** ***With Immobilizer*** ***(B134) No. 29 — (B46) No. 3:*** ***Without Immobilizer*** ***(B134) No. 16 — (B46) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between ECM and fuel pump relay connector.
8	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Check the fuel injector circuit. <Ref. to EN(H4SOw/oOBD)-51, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

F: FUEL INJECTOR CIRCUIT

CAUTION:
- **Check or repair only the faulty parts.**
- **After repair or replacement of the faulty parts, conduct the Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>**
- **WIRING DIAGRAM:**

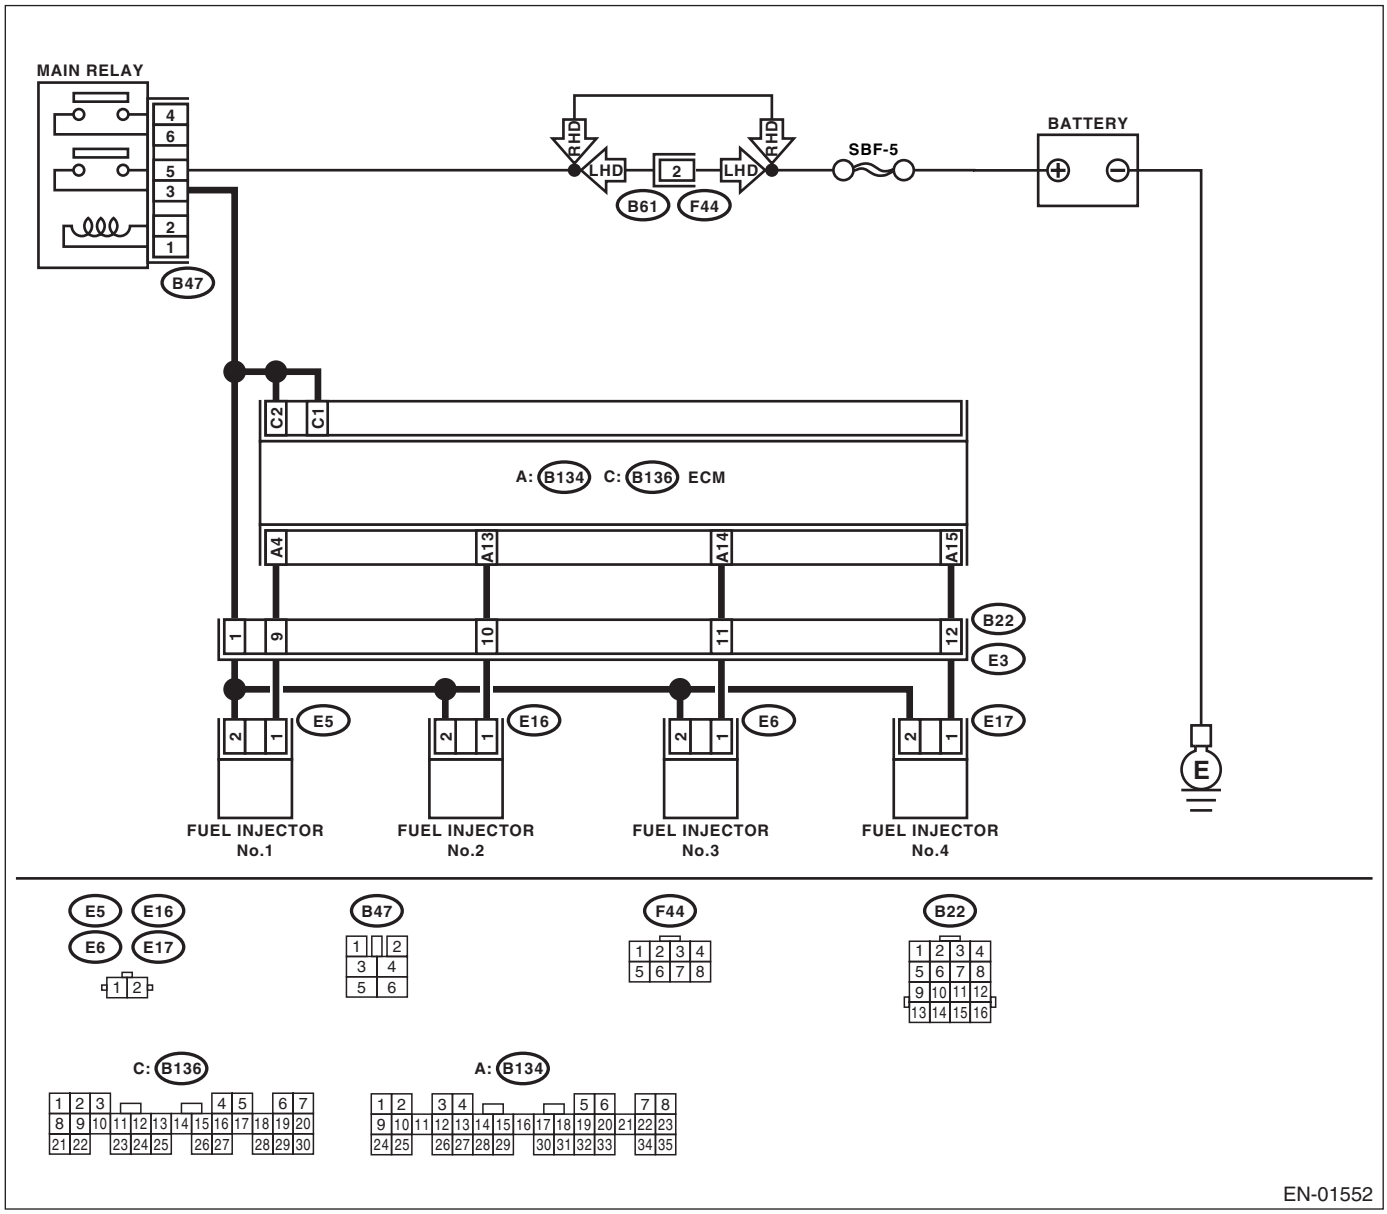

Step		Check	Yes	No
1	**CHECK OPERATION OF EACH FUEL INJECTOR.** While cranking the engine, check that each fuel injector emits “operating” sound. Use a sound scope or attach a screwdriver to injector for this check.	Does the fuel injector emit “operating” sound?	Check the fuel pressure. <Ref. to ME(H4SO)-31, INSPECTION, Fuel Pressure.>	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK POWER SUPPLY TO EACH FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from each cylinder fuel injector. 3)Turn the ignition switch to ON. 4)Measure the power supply voltage between the fuel injector terminal and engine ground. ***Connector & terminal*** ***#1 (E5) No. 2 (+) — Engine ground (–):*** ***#2 (E16) No. 2 (+) — Engine ground (–):*** ***#3 (E6) No. 2 (+) — Engine ground (–):*** ***#4 (E17) No. 2 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and fuel injector connector • Poor contact in main relay connector • Poor contact in coupling connector (B22) • Poor contact in fuel injector connector
3	**CHECK EACH FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between each fuel injector terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **4.**	Replace the faulty fuel injector.
4	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** 1)Disconnect the connector from ECM. 2)Connect the connector to #1 fuel injector. 3)Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 4 — (B136) No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector (B22)
5	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 4 — Chassis ground:***	Is the resistance less than 1 Ω?	Repair the ground short circuit in harness between ECM and fuel injector connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** 1)Connect the connector to #2 fuel injector. 2)Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 13 — (B136) No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **7.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector (B22)

	Step	Check	Yes	No
7	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 13 — Chassis ground:***	Is the resistance less than 1 Ω?	Repair the ground short circuit in harness between ECM and fuel injector connector.	Go to step **8.**
8	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** 1)Connect the connector to #3 fuel injector. 2)Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 14 — (B136) No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **9.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector (B22)
9	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 14 — Chassis ground:***	Is the resistance less than 1 Ω?	Repair the ground short circuit in harness between ECM and fuel injector connector.	Go to step **10.**
10	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** 1)Connect the connector to #4 fuel injector. 2)Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 15 — (B136) No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **11.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector (B22)
11	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B134) No. 15 — Chassis ground:***	Is the resistance less than 1 Ω?	Repair the ground short circuit in harness between ECM and fuel injector connector.	Go to step **12.**
12	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Inspection using “General Diagnostic Table”. <Ref. to EN(H4SO)-260, INSPECTION, General Diagnostic Table.>

13.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Contents of diagnosis	Index
11	Crankshaft position sensor	• No signal entered from crankshaft position sensor when starter switch is ON. • Harness connector between ECM and crankshaft position sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-56, DTC 11 CRANKSHAFT POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
12	Starter switch	• Starter switch signal is abnormal. • Harness connector between ECM and starter switch is in short or open.	<Ref. to EN(H4SOw/oOBD)-59, DTC 12 STARTER SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
13	Camshaft position sensor	• No signal entered from camshaft position sensor, but signal entered from crankshaft position sensor. • Harness connector between ECM and camshaft position sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-61, DTC 13 CAMSHAFT POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
21	Engine coolant temperature sensor	• Engine coolant temperature sensor signal is abnormal. • Harness connector between ECM and engine coolant temperature sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-63, DTC 21 ENGINE COOLANT TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
22	Knock sensor	• Knock sensor signal is abnormal. • Harness connector between ECM and knock sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-66, DTC 22 KNOCK SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
24	Idle air control solenoid valve	• Idle air control solenoid valve is not in function. • Harness connector between ECM and idle air control solenoid valve is in short or open.	<Ref. to EN(H4SOw/oOBD)-68, DTC 24 IDLE AIR CONTROL SOLENOID VALVE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
26	Intake air temperature sensor	• Intake air temperature sensor signal is abnormal. • Harness connector between ECM and intake air temperature sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-71, DTC 26 INTAKE AIR TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
31	Throttle position sensor	• Throttle position sensor signal is abnormal. • Throttle position sensor is installed abnormally. • Harness connector between ECM and throttle position sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-74, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
32	Oxygen sensor	• Oxygen sensor is not in function. • Harness connector between ECM and oxygen sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-76, DTC 32 OXYGEN SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
33	Vehicle speed signal	• Vehicle speed signal is abnormal. • Harness connector between ECM and vehicle speed sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-79, DTC 33 VEHICLE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
35	Purge control solenoid valve	• Purge control solenoid valve is not in function. • Harness connector between ECM and purge control solenoid valve is in short or open.	<Ref. to EN(H4SOw/oOBD)-81, DTC 35 PURGE CONTROL SOLENOID VALVE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Contents of diagnosis	Index
38	Torque control signal (AT)	• Abnormal signal is entered from TCM. • Harness connector between ECM and TCM is in short or open.	<Ref. to EN(H4SOw/oOBD)-84, DTC 38 TORQUE CONTROL SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
45	Manifold absolute pressure sensor	• Manifold absolute pressure sensor signal is abnormal. • Harness connector between ECM and Manifold absolute pressure sensor is in short or open.	<Ref. to EN(H4SOw/oOBD)-86, DTC 45 PRESSURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
46	CO resistor (General spec. vehicles)	• CO resistor signal is abnormal. • Harness connector between ECM and CO resistor is in short or open. • CO valve is not adjusted to specification.	<Ref. to EN(H4SOw/oOBD)-88, DTC 46 CO RESISTOR (GENERAL SPEC. VEHICLES), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
51	Neutral position switch (MT)	• Neutral position switch signal is abnormal. • Harness connector between ECM and neutral position switch is in short or open.	<Ref. to EN(H4SOw/oOBD)-90, DTC 51 NEUTRAL POSITION SWITCH (MT MODEL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	Park/Neutral position switch (AT)	• Park/neutral position switch signal is abnormal. • Shift cable is connected abnormally. • Harness connector between ECM and inhibitor switch is in short or open.	<Ref. to EN(H4SOw/oOBD)-92, DTC 51 PARK/NEUTRAL POSITION SWITCH (AT MODEL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
53*	Immobilizer system	Faulty immobilizer system.	<Ref. to IM-2, Basic Diagnostic Procedure.>
85	Charge system	Charge system is abnormal.	<Ref. to EN(H4SOw/oOBD)-94, DTC 85 CHARGE SYSTEM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

*: Immobilizer system equipped model only

14.Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC 11 CRANKSHAFT POSITION SENSOR

- **DIAGNOSIS:**
  - No signal entered from crankshaft position sensor when ignition switch is ON.
  - The harness connector between ECM and crankshaft position sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Restarting impossible

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

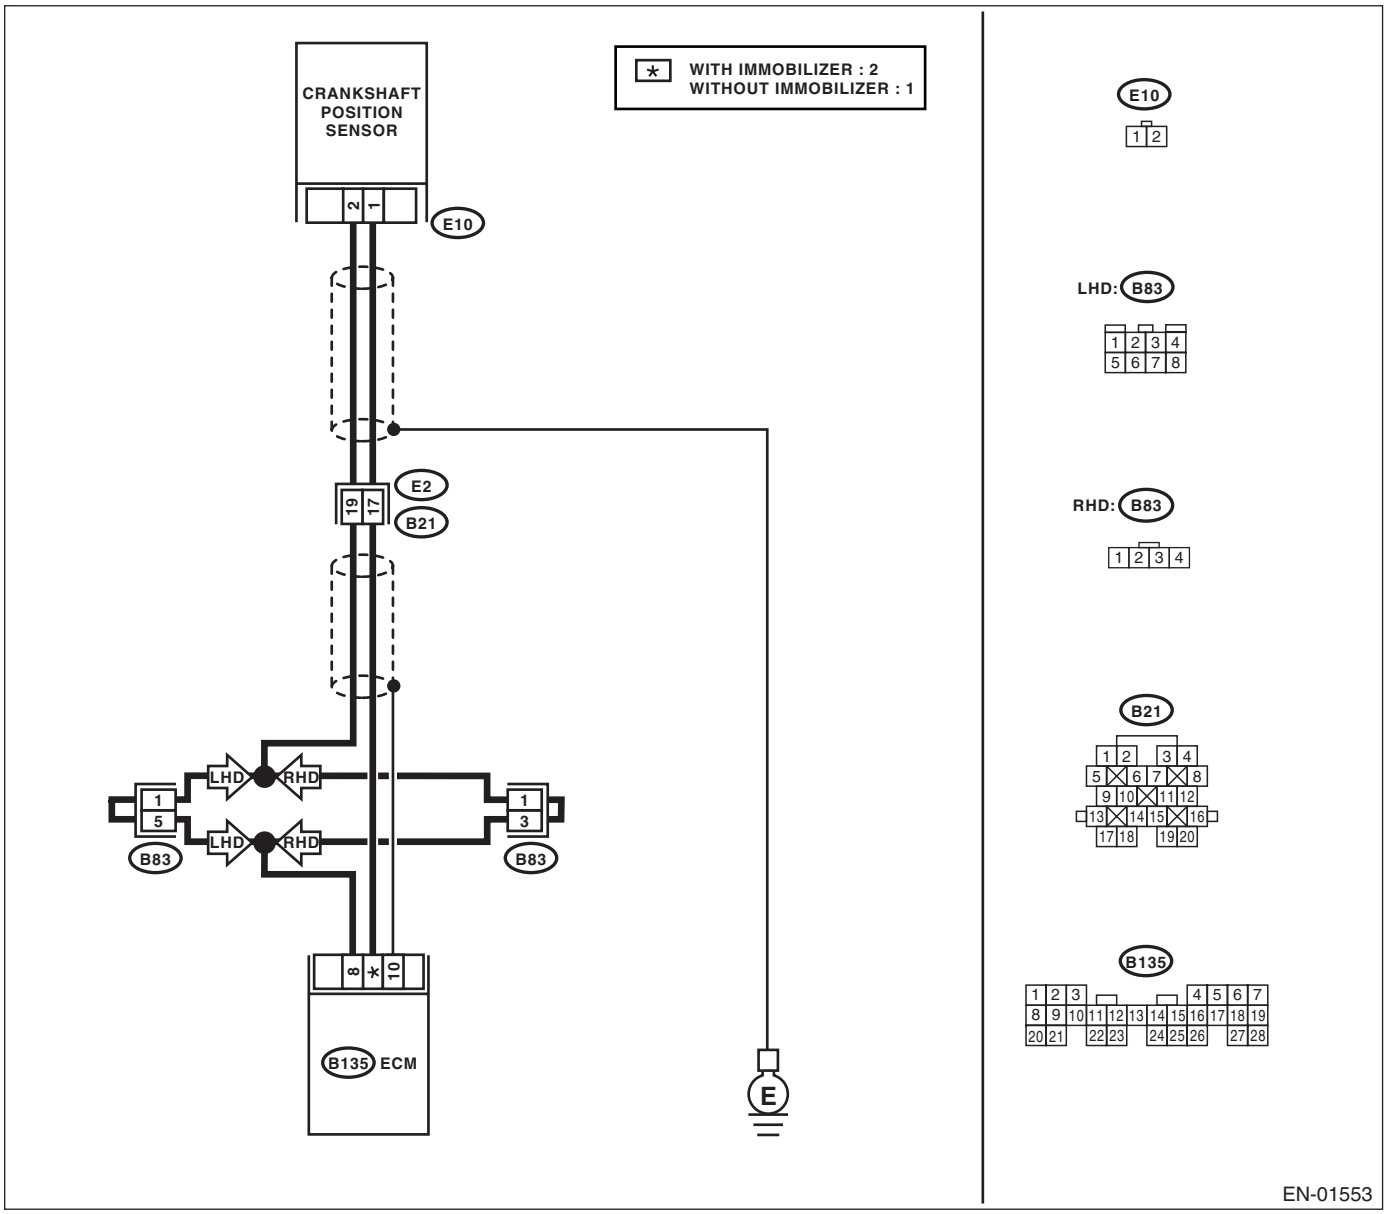

	Step	Check	Yes	No
1	**CHECK CONDITION OF CRANKSHAFT POSITION SENSOR INSTALLATION.**	Are the crankshaft position sensor installing bolts tightened securely?	Go to step **2.**	Tighten the crankshaft position sensor installing bolts securely.
2	**CHECK CRANKSHAFT POSITION SENSOR.** 1)Remove the crankshaft position sensor. 2)Measure the resistance between connector terminals of crankshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Go to step **3.**	Replace the crankshaft position sensor.
3	**CHECK HARNESS BETWEEN ECM AND CRANKSHAFT POSITION SENSOR CONNECTOR.** 1)Connect the connector to crankshaft position sensor. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between crankshaft position sensor connector and ECM. ***Connector & terminal*** ***With Immobilizer*** ***(B135) No. 8 — (B135) No. 2*** ***Without Immobilizer*** ***(B135) No. 8 — (B135) No. 1***	Is the resistance 1 — 5 kΩ?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between crankshaft position sensor and ECM connector • Poor contact in coupling connector (B21)
4	**CHECK HARNESS BETWEEN ECM AND CRANKSHAFT POSITION SENSOR CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 8 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between crankshaft position sensor and ECM connector.	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to OFF. 2)Set the oscilloscope probe at ECM connector terminal positive (+) and its ground lead at negative (−). 3)Measure the voltage indicated on oscilloscope while cranking engine. ***Connector & terminal*** ***With Immobilizer*** ***(B135) No. 2 (+) — (B135) No. 8 (−)*** ***Without Immobilizer*** ***(B135) No. 1 (+) — (B135) No. 8 (−)***	Is the voltage more than 400 mV?	Go to step **6.**	Replace the crankshaft position sensor.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Go to step **7.**
7	**CHECK ECM.** 1)Connect all connectors. 2)Erase the memory. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> 3)Perform the inspection mode. <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.> 4)Read any DTC on the display. <Ref. to EN(H4SOw/oOBD)-23, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is the same DTC as in current diagnosis still being output?	Replace the generator.	Go to step **8.**

Step		Check	Yes	No
8	**CHECK ANY OTHER DTCs APPEARANCE.**	Is any other DTC displayed?	Proceed with the diagnosis corresponding to the DTC.	A temporary poor contact.

B: DTC 12 STARTER SWITCH

- **DIAGNOSIS:**
  - The starter switch signal is abnormal.
  - The harness connector between ECM and starter switch is open or shorted.
- **TROUBLE SYMPTOM:**
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

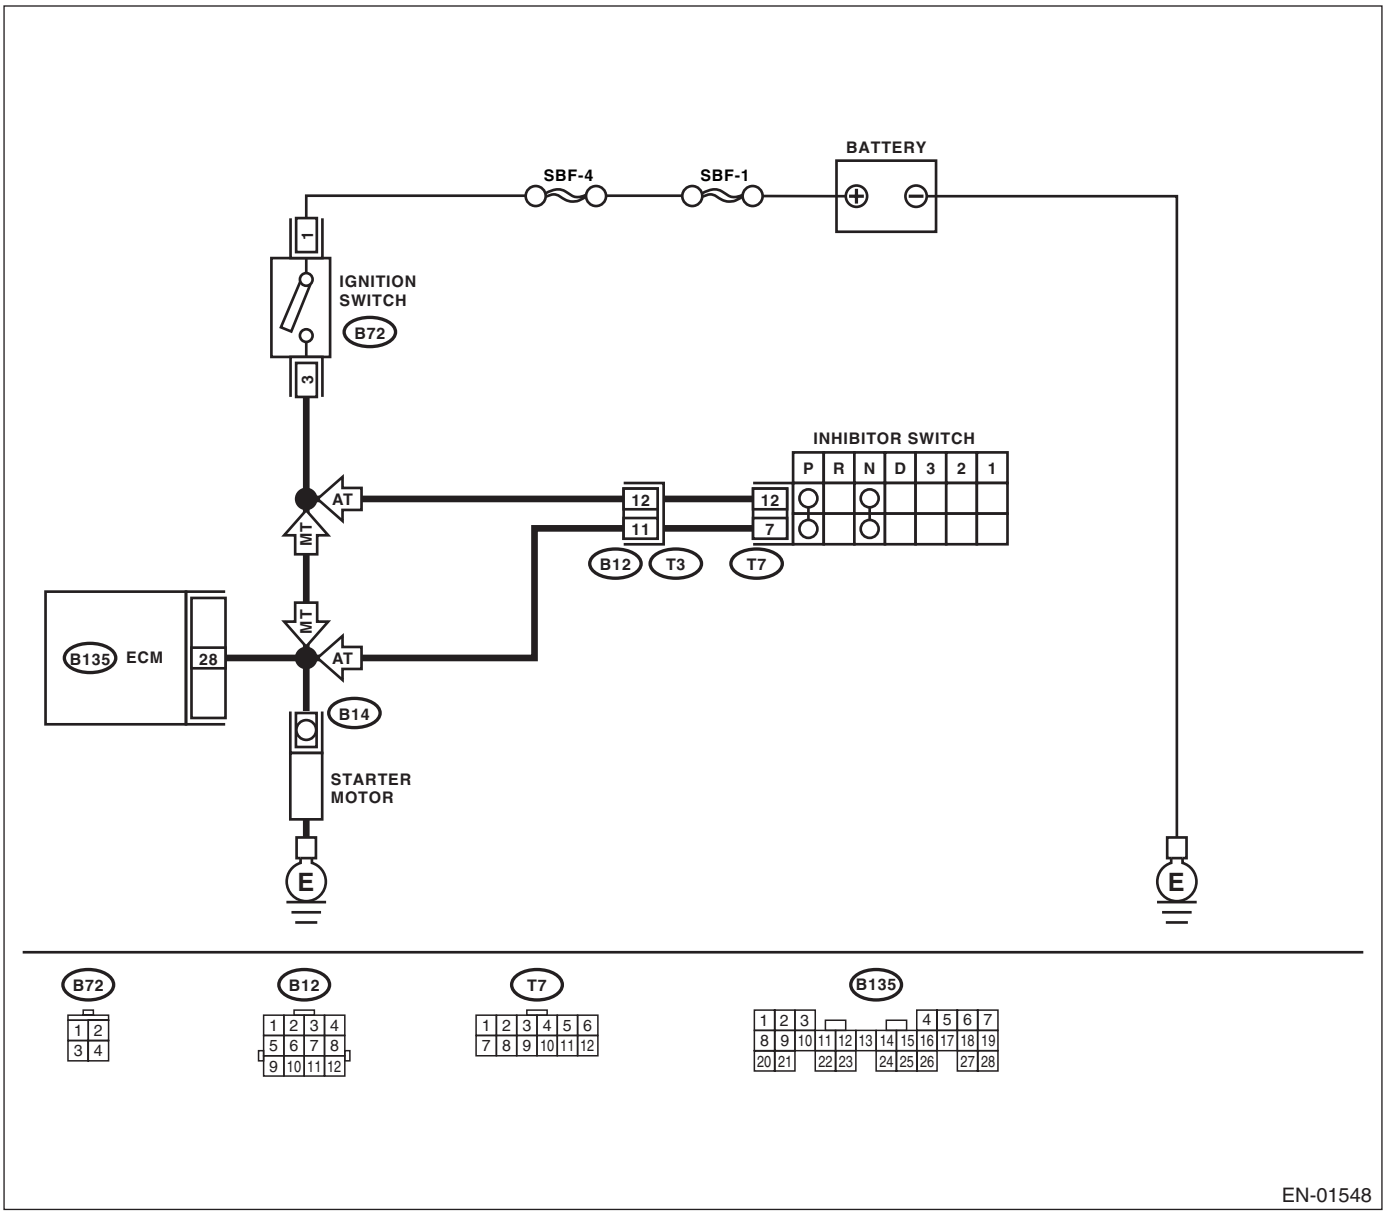

Step		Check	Yes	No
1	**CHECK OPERATION OF STARTER MOTOR.**	Does the starter motor operate when ignition switch is turned to START?	Go to step **2.**	Check the starter motor circuit.

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN ECM AND IGNITION SWITCH CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Set the selector lever to “P” or “N” position (AT model). 4)Turn the ignition switch to START. 5)Measure the power supply voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 28 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Repair the poor contact in ECM connector.	Repair the open or ground short circuit in harness between ECM and ignition switch connector.

C: DTC 13 CAMSHAFT POSITION SENSOR

- **DIAGNOSIS:**
  - No signal entered from camshaft position sensor, but signal entered from crankshaft position sensor.
  - The harness connector between ECM and camshaft position sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

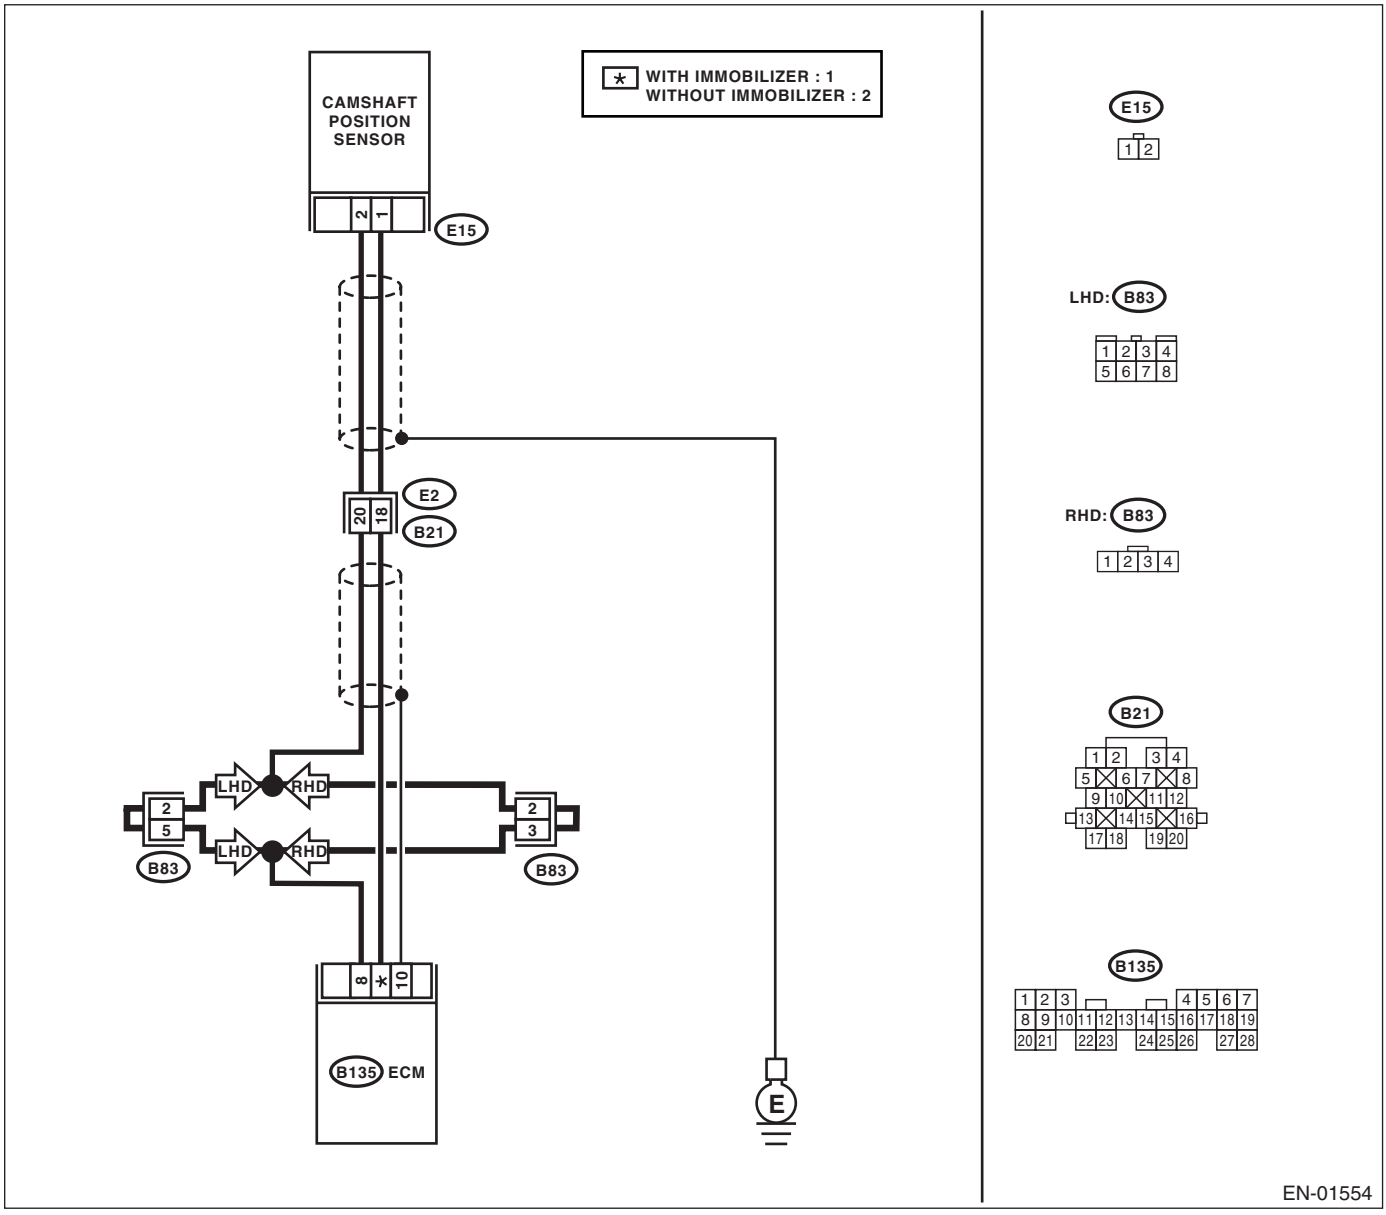

Step		Check	Yes	No
1	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR INSTALLATION.**	Are the camshaft position sensor installing bolts tightened securely?	Go to step **2.**	Tighten the camshaft position sensor installing bolts securely.

	Step	Check	Yes	No
2	**CHECK CAMSHAFT POSITION SENSOR.** 1)Remove the camshaft position sensor. 2)Measure the resistance between connector terminals of camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Go to step **3.**	Replace the camshaft position sensor.
3	**CHECK HARNESS BETWEEN ECM AND CAMSHAFT POSITION SENSOR CONNECTOR.** 1)Connect the connector to camshaft position sensor. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between camshaft position sensor connector and ECM. ***Connector & terminal*** ***With Immobilizer*** ***(B135) No. 8 — (B135) No. 1:*** ***Without Immobilizer*** ***(B135) No. 8 — (B135) No. 2:***	Is the resistance 1 — 5 kΩ?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in coupling connector (B21)
4	**CHECK HARNESS BETWEEN ECM AND CAMSHAFT POSITION SENSOR CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 8 — Chassis ground:***	Is the resistance less than 5 Ω?	Repair the ground short circuit in harness between camshaft position sensor and ECM connector.	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Set the oscilloscope probe at ECM connector terminal positive (+) and its ground lead at negative (−). 4)Measure the voltage indicated on oscilloscope while cranking engine. ***Connector & terminal*** ***With Immobilizer*** ***(B135) No. 1 (+) — (B135) No. 8 (−):*** ***Without Immobilizer*** ***(B135) No. 2 (+) — (B135) No. 8 (−):***	Is the voltage more than 400 mV?	Go to step **6.**	Replace the camshaft position sensor.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Go to step **7.**
7	**CHECK ECM.** 1)Connect all connectors. 2)Erase the memory. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> 3)Perform the inspection mode. <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.> 4)Read any DTC on the display. <Ref. to EN(H4SOw/oOBD)-23, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is the same DTC as in the current diagnosis still being output?	Replace the generator.	Go to step **8.**
8	**CHECK ANY OTHER DTCs APPEARANCE.**	Is any other DTC displayed?	Proceed with the diagnosis corresponding to the DTC.	A temporary poor contact.

D: DTC 21 ENGINE COOLANT TEMPERATURE SENSOR

- **DIAGNOSIS:**
  - The engine coolant temperature sensor signal is abnormal.
  - The harness connector between ECM and engine coolant temperature sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

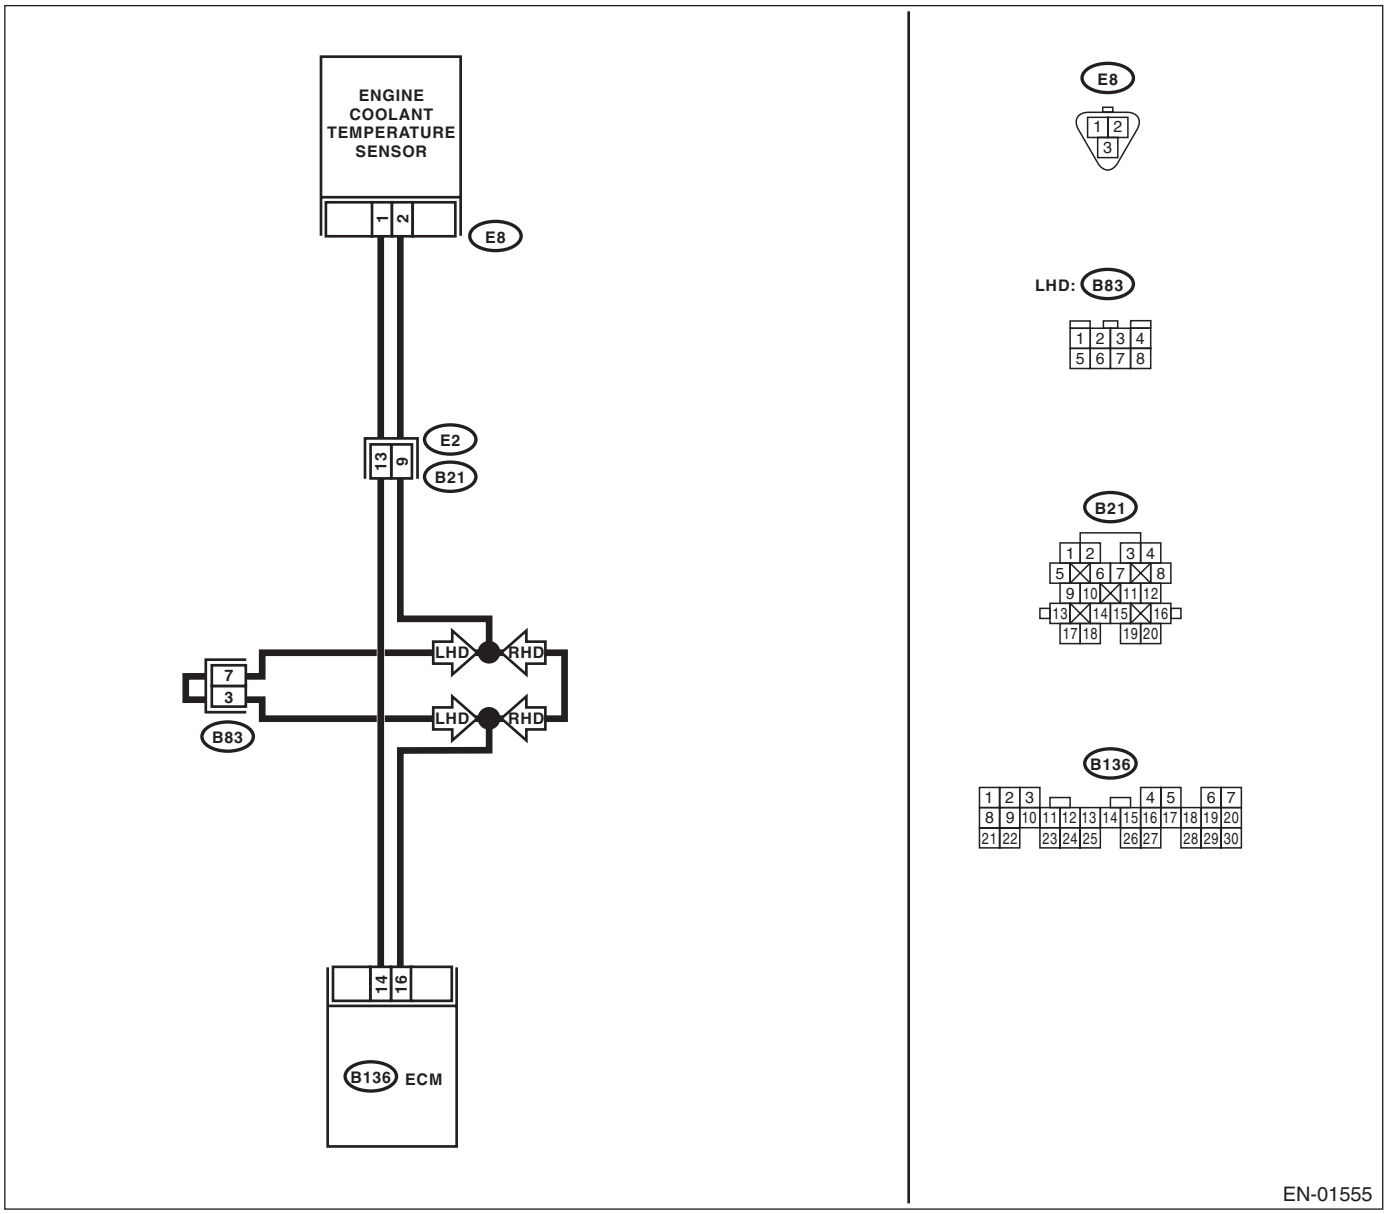

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Remove the generator. 3)Disconnect the connector from engine coolant temperature sensor. 4)Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step **2.**
2	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 (+) — Engine ground (–):***	Is the voltage more than 4 V?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector (B21)

	Step	Check	Yes	No
4	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector (B21) • Poor contact in sensor ground joint connector (B83)
5	**CHECK ENGINE COOLANT TEMPERATURE SENSOR.** Measure the resistance between engine coolant temperature sensor terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 2 — 3 kΩ at 20°C (68°F)?	Go to step **6.**	Replace the engine coolant temperature sensor.
6	**CHECK ENGINE COOLANT TEMPERATURE SENSOR.** Measure the resistance between engine coolant temperature sensor terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 0.35 — 0.4 kΩ at 80°C (176°F)?	Go to step **7.**	Replace the engine coolant temperature sensor.
7	**CHECK ENGINE COOLANT TEMPERATURE SENSOR.** Measure the resistance between engine coolant temperature sensor terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 0.2 — 0.3 kΩ at 90°C (194°F)?	Replace the ECM.	Replace the engine coolant temperature sensor.

E: DTC 22 KNOCK SENSOR

- **DIAGNOSIS:**
  - The knock sensor signal is abnormal.
  - The harness connector between ECM and knock sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

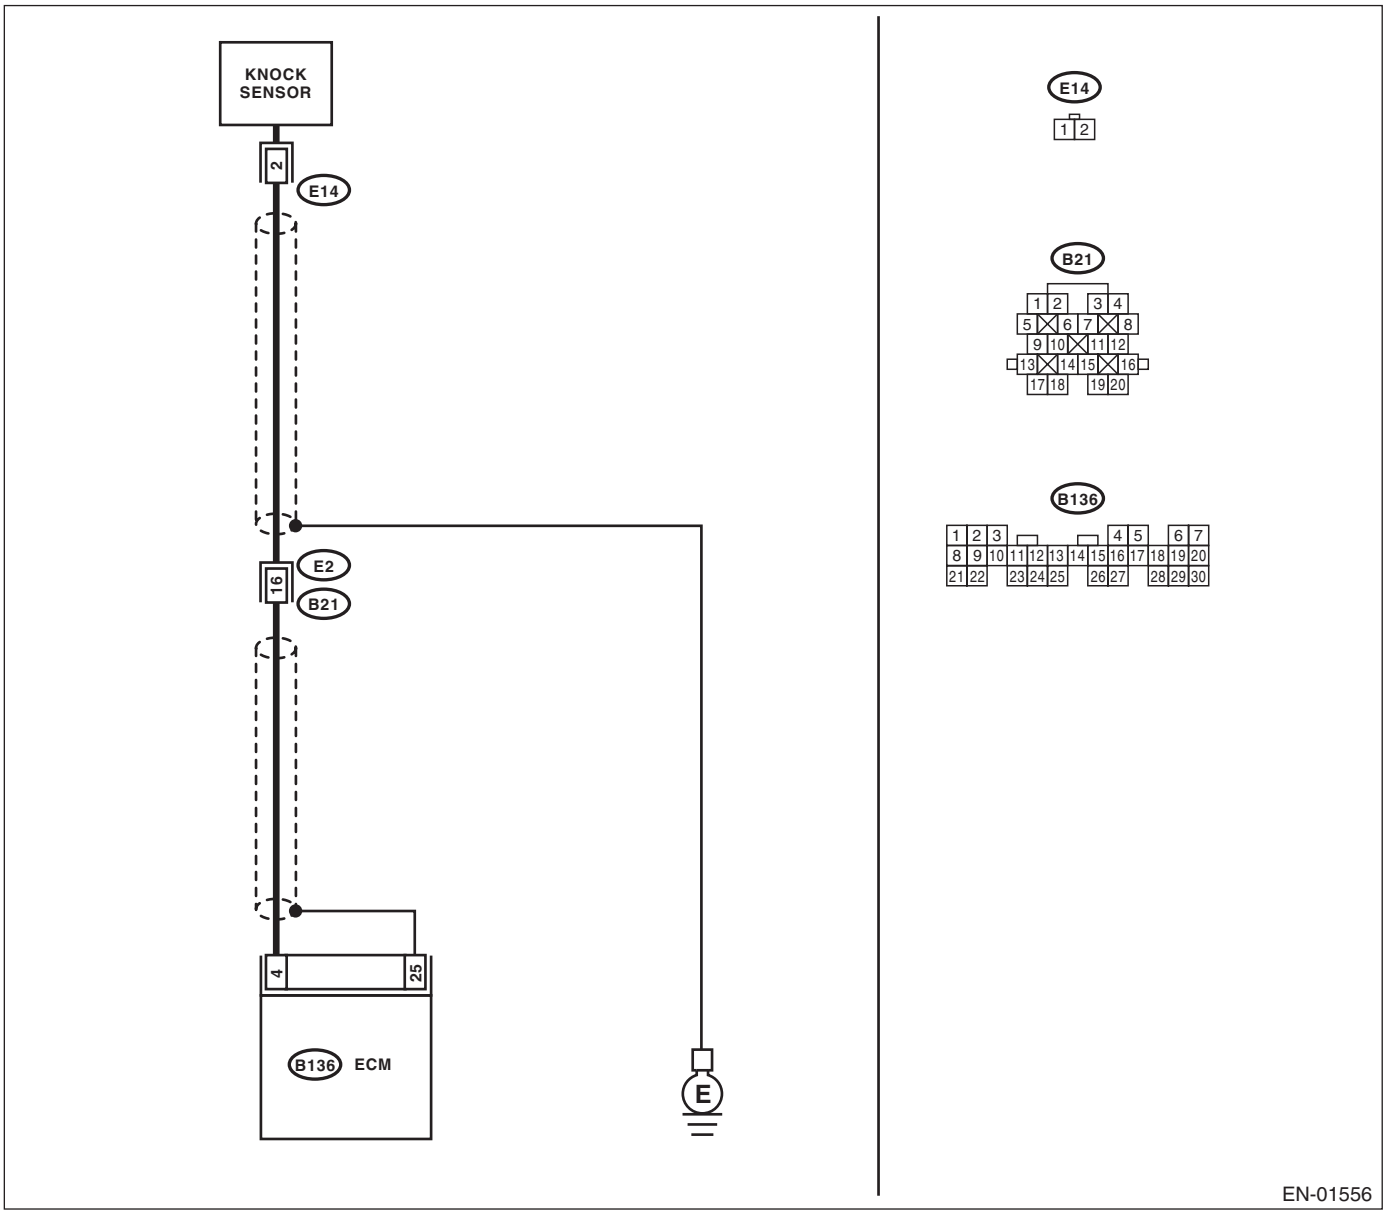

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 4 (+) — Chassis ground (–):***	Is the voltage more than 3 V?	Go to step **2.**	Go to step **3.**
2	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>
3	**CHECK KNOCK SENSOR.** 1)Disconnect the connector from knock sensor. 2)Measure the resistance between knock sensor connector terminal and engine ground. ***Terminals*** ***No. 2 — Engine ground:***	Is the resistance 530 kΩ — 590 kΩ?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between knock sensor and ECM connector • Poor contact in knock sensor connector • Poor contact in coupling connector (B21)
4	**CHECK HARNESS CONNECTOR BETWEEN ECM AND KNOCK SENSOR.** Measure the resistance of harness connector between ECM and knock sensor. ***Connector & terminal*** ***(E14) No. 2 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **5.**	Replace the knock sensor. <Ref. to FU(H4SOw/oOBD)-31, Knock Sensor.>
5	**CHECK HARNESS CONNECTOR BETWEEN ECM AND KNOCK SENSOR.** Measure the resistance of harness of harness connector between ECM connector and knock sensor. ***Connector & terminal*** ***(B136) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the ground short circuit between ECM and knock sensor.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

F: DTC 24 IDLE AIR CONTROL SOLENOID VALVE

- **DIAGNOSIS:**
  - The idle air control solenoid valve is not in function.
  - The harness connector between ECM and idle air control solenoid valve is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Hard to start
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

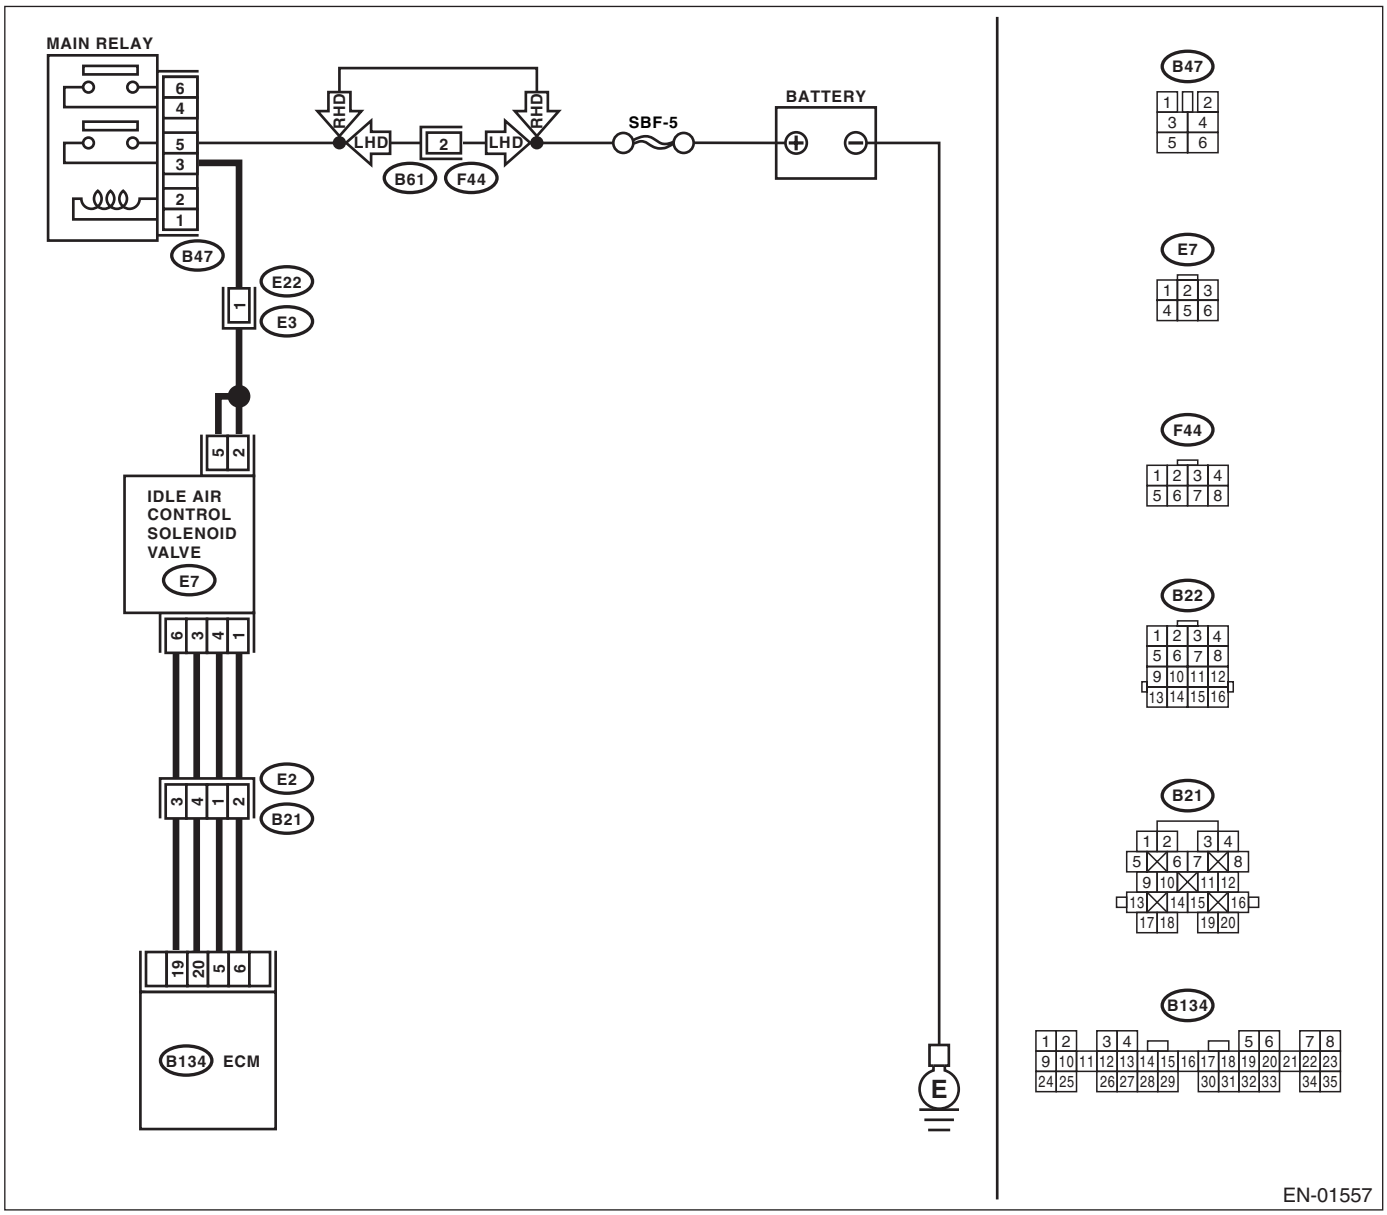

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY TO IDLE AIR CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from idle air control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between idle air control solenoid valve connector and engine ground. ***Connector & terminal*** ***(E7) No. 2 (+) — Engine ground (−):*** ***(E7) No. 5 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between idle air control solenoid valve and main relay connector • Poor contact in coupling connector (B22)
2	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM and idle air control solenoid valve connector. ***Connector & terminal*** ***#1 (B134) No. 20 — (E7) No. 3:*** ***#2 (B134) No. 6 — (E7) No. 1:*** ***#3 (B134) No. 19 — (E7) No. 6:*** ***#4 (B134) No. 5 — (E7) No. 4:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and idle air control solenoid valve connector • Poor contact in coupling connector (B21)
3	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance between ECM connector and chassis ground. ***Connector & terminal*** ***#1 (B134) No. 20 — Chassis ground:*** ***#2 (B134) No. 6 — Chassis ground:*** ***#3 (B134) No. 19 — Chassis ground:*** ***#4 (B134) No. 5 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the ground short circuit in harness between ECM and idle air control solenoid valve connector.
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector and idle air control solenoid valve connector.	Is there poor contact in ECM connector or idle air control solenoid valve connector?	Repair the poor contact in ECM connector or idle air control solenoid valve connector.	Go to step **5.**
5	**CHECK IDLE SPEED.**	Is the idling speed higher than standard?	Go to step **6.**	Go to step **8.**
6	**CHECK AIR INTAKE SYSTEM.** 1)Turn the ignition switch to ON. 2)Start the engine, and idle it. 3)Check the following items. •Loose installation of intake manifold, idle air control solenoid valve and throttle body •Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket •Disconnections of vacuum hoses	Is there a fault in the air intake system?	Repair the air suction and leaks.	Go to step **7.**

	Step	Check	Yes	No
7	**CHECK AIR BY-PASS LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4SOw/oOBD)-35, Idle Air Control Solenoid Valve.> 3)Confirm that there are no foreign particles in the by-pass air line.	Are foreign particles in the by-pass air line?	Remove the foreign particles from by-pass air line.	Replace the idle air control solenoid valve. <Ref. to FU(H4SOw/oOBD)-35, Idle Air Control Solenoid Valve.>
8	**CHECK AIR BY-PASS LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4SOw/oOBD)-35, Idle Air Control Solenoid Valve.> 3)Remove the throttle body from intake manifold. <Ref. to FU(H4SOw/oOBD)-15, Throttle Body.> 4)Confirm that there are no foreign particles in the throttle body. 5)Using an air gun, force air into the idle air control solenoid valve installation area. Confirm that forced air subsequently escapes from the throttle body interior.	Does air flow out?	Replace the idle air control solenoid valve. <Ref. to FU(H4SOw/oOBD)-35, Idle Air Control Solenoid Valve.>	Replace the throttle body. <Ref. to FU(H4SOw/oOBD)-15, Throttle Body.>

G: DTC 26 INTAKE AIR TEMPERATURE SENSOR

- **DIAGNOSIS:**
  - The intake air temperature sensor signal is abnormal.
  - The harness connector between ECM and intake air temperature sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

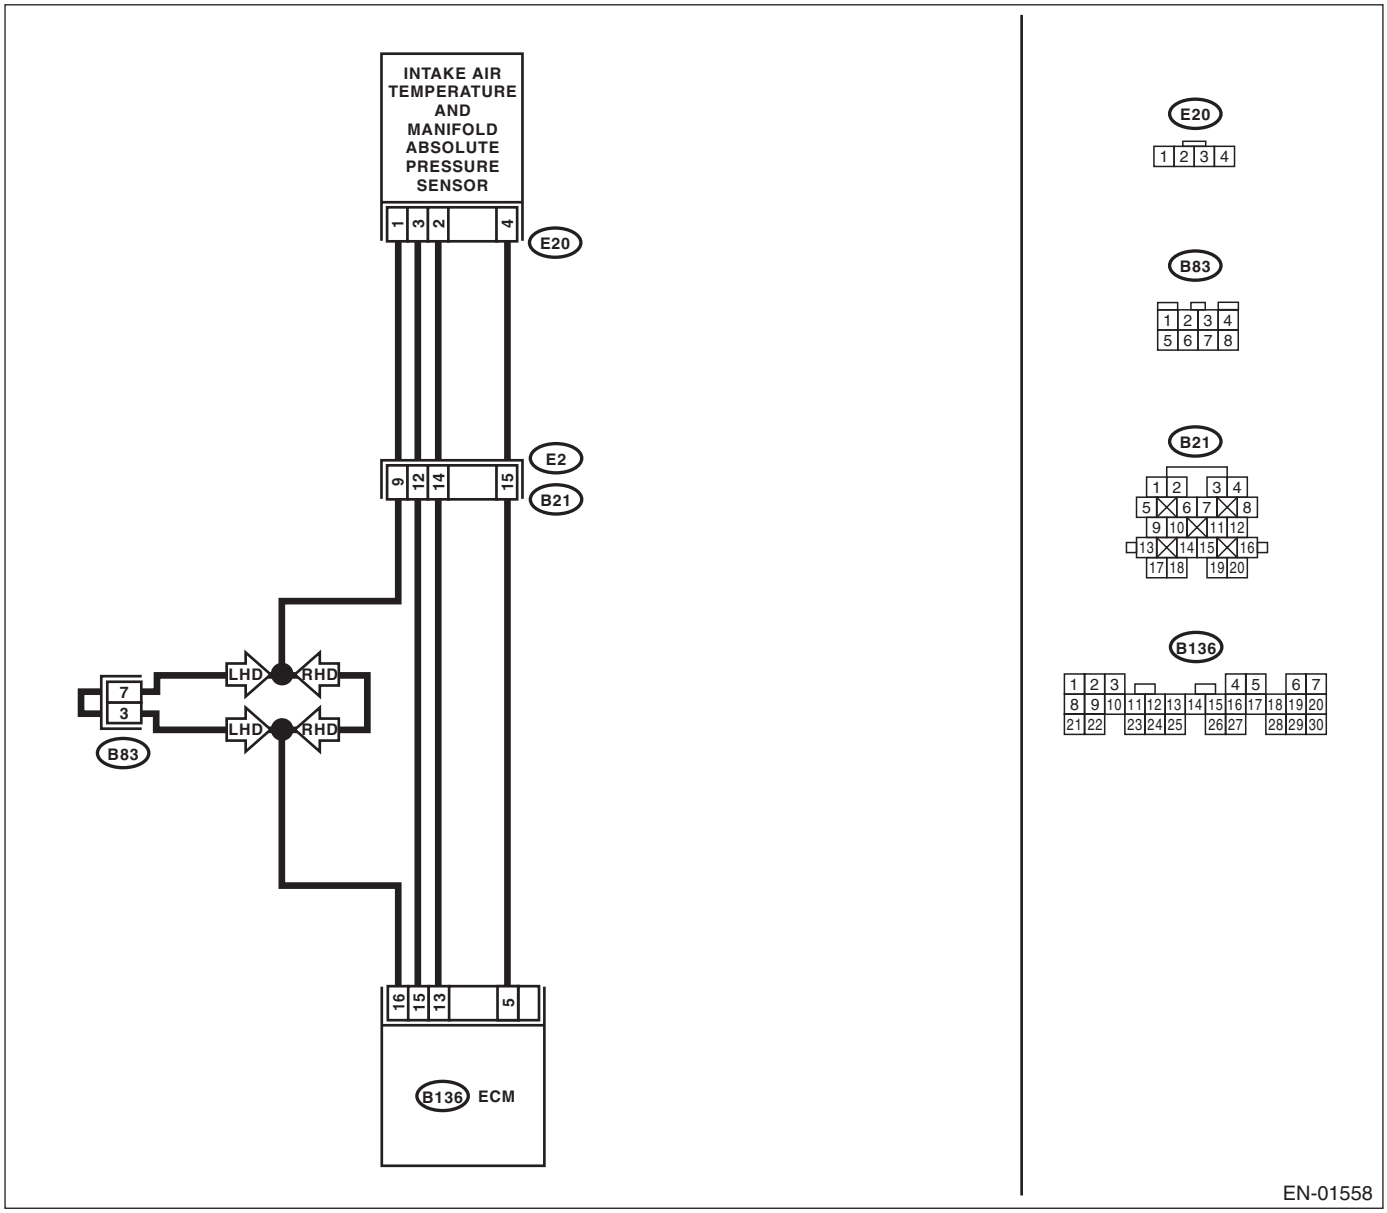

	Step	Check	Yes	No
1	**CHECK INTAKE AIR TEMPERATURE SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from intake air temperature sensor. 3)Measure the resistance between intake air temperature sensor terminals. ***Terminals*** ***No. 2 — No. 3:***	Is the resistance 2 — 3 kΩ at 20°C (68°F)?	Go to step **2.**	Replace the intake air temperature sensor. <Ref. to FU(H4SOw/oOBD)-34, Intake Air Temperature and Manifold Absolute Pressure Sensor.>
2	**CHECK INTAKE AIR TEMPERATURE SENSOR.** Measure the resistance between intake air temperature sensor terminals. ***Terminals*** ***No. 2 — No. 3:***	Is the resistance 0.66 — 1 kΩ at 50°C (122°F)?	Go to step **3.**	Replace the intake air temperature sensor. <Ref. to FU(H4SOw/oOBD)-34, Intake Air Temperature and Manifold Absolute Pressure Sensor.>
3	**CHECK HARNESS BETWEEN ECM AND INTAKE AIR TEMPERATURE SENSOR CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness connector between ECM and intake air temperature sensor connector. ***Connector & terminal*** ***(B136) No. 15 — (E20) No. 3:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and intake air temperature and manifold absolute pressure sensor connector • Poor contact in coupling connector (B21)
4	**CHECK HARNESS BETWEEN ECM AND INTAKE AIR TEMPERATURE SENSOR CONNECTOR.** Measure the resistance of harness connector between ECM and intake air temperature sensor connector. ***Connector & terminal*** ***(B136) No. 13 — (E20) No. 2:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the harness and connector.
5	**CHECK HARNESS BETWEEN ECM AND INTAKE AIR TEMPERATURE SENSOR CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 15 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the ground short circuit in harness between ECM and idle air control solenoid valve connector.
6	**CHECK HARNESS BETWEEN ECM AND INTAKE AIR TEMPERATURE SENSOR CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 13 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit in harness between ECM and idle air control solenoid valve connector.

	Step	Check	Yes	No
7	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Contact with your SUBARU distributor service. NOTE: Inspection by your SUBARU distributor service is required, because probable cause is deterioration of multiple parts.

H: DTC 31 THROTTLE POSITION SENSOR

- **DIAGNOSIS:**
  - The throttle position sensor signal is abnormal.
  - The throttle position sensor is installed abnormally.
  - The harness connector between ECM and throttle position sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

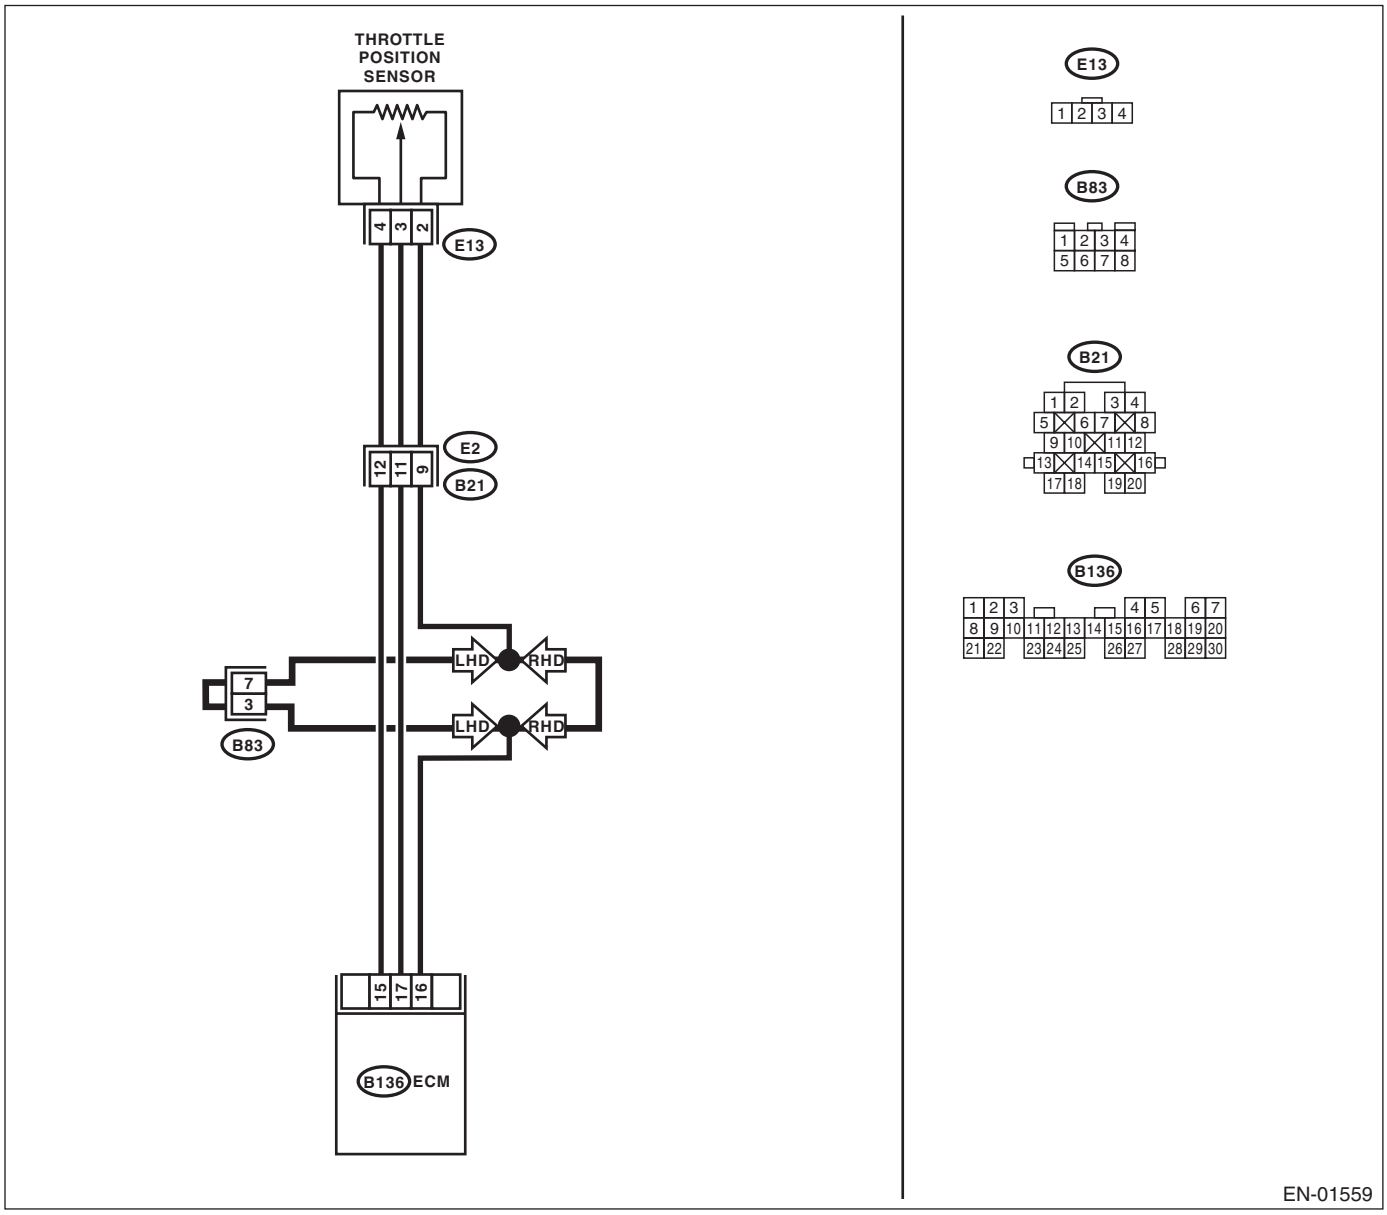

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR.** 1)Disconnect the connector from ECM and throttle position sensor. 2)Measure the resistance between ECM and throttle position sensor. ***Connector & terminal*** ***(B136) No. 16 — (E13) No. 2:*** ***(B136) No. 17 — (E13) No. 3:*** ***(B136) No. 15 — (E13) No. 4:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit between ECM and throttle position sensor.
2	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** 1)Disconnect the connector from TCM. (AT model) 2)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 16 — Chassis ground:*** ***(B136) No. 17 — Chassis ground:*** ***(B136) No. 15 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the ground short circuit between ECM and chassis ground.
3	**CHECK INPUT SIGNAL FOR ECM.** 1)Connect the connector to ECM and throttle position sensor. 2)Ignition the switch to ON. 3)Measure the voltage between ECM terminals while throttle valve is fully closed. ***Connector & terminal*** ***(B136) No. 15 (+) — No. 17 (–):***	Is the voltage less than 0.1 V?	Go to step **5.**	Go to step **4.**
4	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM terminals while throttle valve is fully opened. ***Connector & terminal*** ***(B136) No. 15 (+) — No. 17 (–):***	Is the voltage more than 4.5 V?	Go to step **5.**	Go to step **6.**
5	**CHECK POOR CONTACT.** Check poor contact in throttle position sensor connector.	Is there poor contact in throttle position sensor connector?	Repair the poor contact in throttle position sensor connector.	Replace the throttle position sensor.
6	**CHECK CONDITION OF THROTTLE POSITION SENSOR INSTALLATION.**	Are the throttle position sensor installing screw tightened securely?	Replace the throttle position sensor.	Adjust the throttle position sensor and tighten throttle position sensor installing screws securely.

I: DTC 32 OXYGEN SENSOR

- **DIAGNOSIS:**
  - The oxygen sensor is not in function.
  - The harness connector between ECM and oxygen sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Failure of engine to start
  - Erroneous idling
  - Poor driving performance
  - Engine stalls.
  - Idle mixture is out of specifications.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

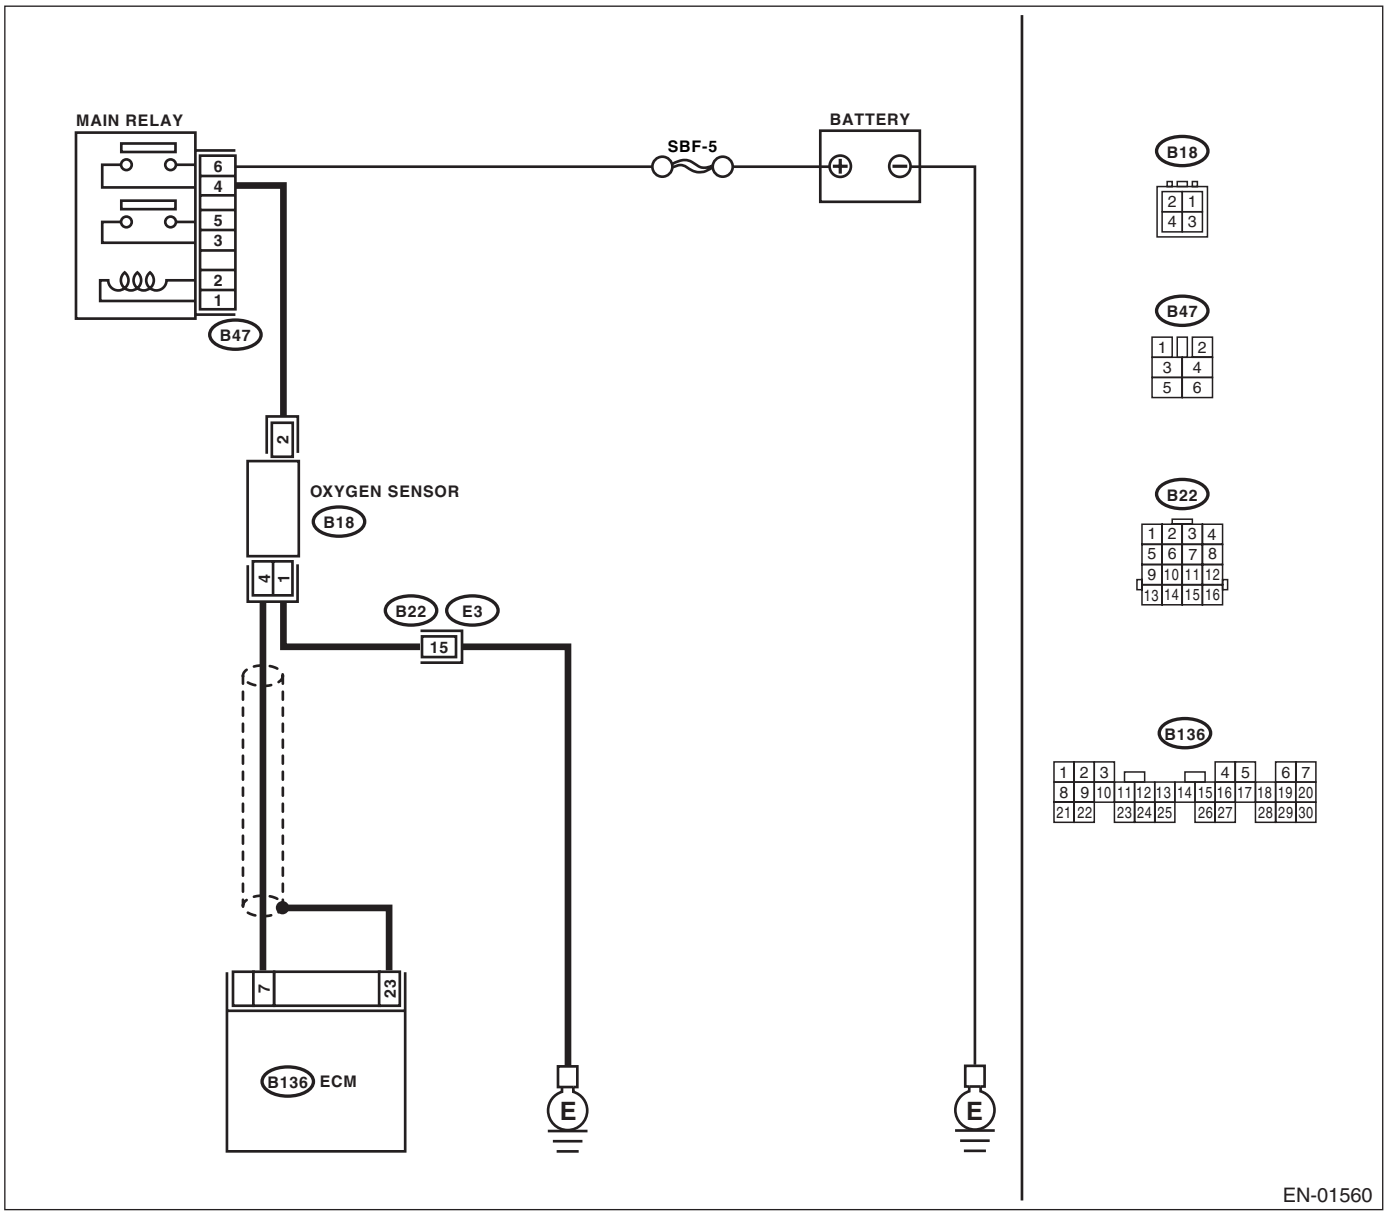

	Step	Check	Yes	No
1	**CHECK FOR OTHER CAUSES AFFECTING EXHAUST GAS.** NOTE: •Check for use of improper fuel. •Check if engine oil or coolant level is extremely low.	Is CO % more than 2% after the engine warm up?	Check the fuel system.	Go to step **2.**
2	**CHECK EXHAUST SYSTEM.**	Is there a fault in the exhaust system?	Repair the exhaust system. NOTE: • Loose installation of front portion of exhaust pipe onto cylinder heads • Loose connection between front exhaust pipe and front catalytic converter • Damage of exhaust pipe resulting in hole	Go to step **3.**
3	**CHECK INPUT VOLTAGE FOR OXYGEN SENSOR.** 1)Disconnect the connector from oxygen sensor connector. 2)Measure the voltage between main relay and oxygen sensor. ***Connector & terminal*** ***(B18) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the open circuit between main relay and oxygen sensor.
4	**CHECK HARNESS CONNECTOR BETWEEN OXYGEN SENSOR AND ENGINE GROUND CABLE.** Measure the resistance between oxygen sensor and chassis ground. ***Connector & terminal*** ***(B18) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit between oxygen sensor and chassis ground.
5	**CHECK OXYGEN SENSOR.** Measure the resistance between oxygen sensor terminals. ***Connector & terminal*** ***No. 1 — No. 2:***	Is the resistance less than 30 Ω?	Repair poor contact.	Go to step **6.**
6	**CHECK HARNESS BETWEEN ECM AND OXYGEN SENSOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit between ECM and chassis ground.
7	**CHECK HARNESS BETWEEN ECM AND OXYGEN SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 7 (+) — Chassis ground (–):***	Is the voltage more than 0.2 V?	Repair the battery short circuit between ECM and oxygen sensor.	Go to step **8.**

	Step	Check	Yes	No
8	**CHECK INPUT VOLTAGE FOR ECM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to ECM and oxygen sensor. 3)Set the oscilloscope probe at ECM connector terminal positive (+) and its ground lead at negative (–). 4)Start the engine.	Do 0.1 and 1 V waveform patterns alternately appear on the oscilloscope screen?	Go to step **9.**	Replace the oxygen sensor.
9	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Replace the oxygen sensor connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

J: DTC 33 VEHICLE SPEED SIGNAL

- **DIAGNOSIS:**
  - The vehicle speed signal is abnormal.
  - The harness connector between ECM and vehicle speed sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

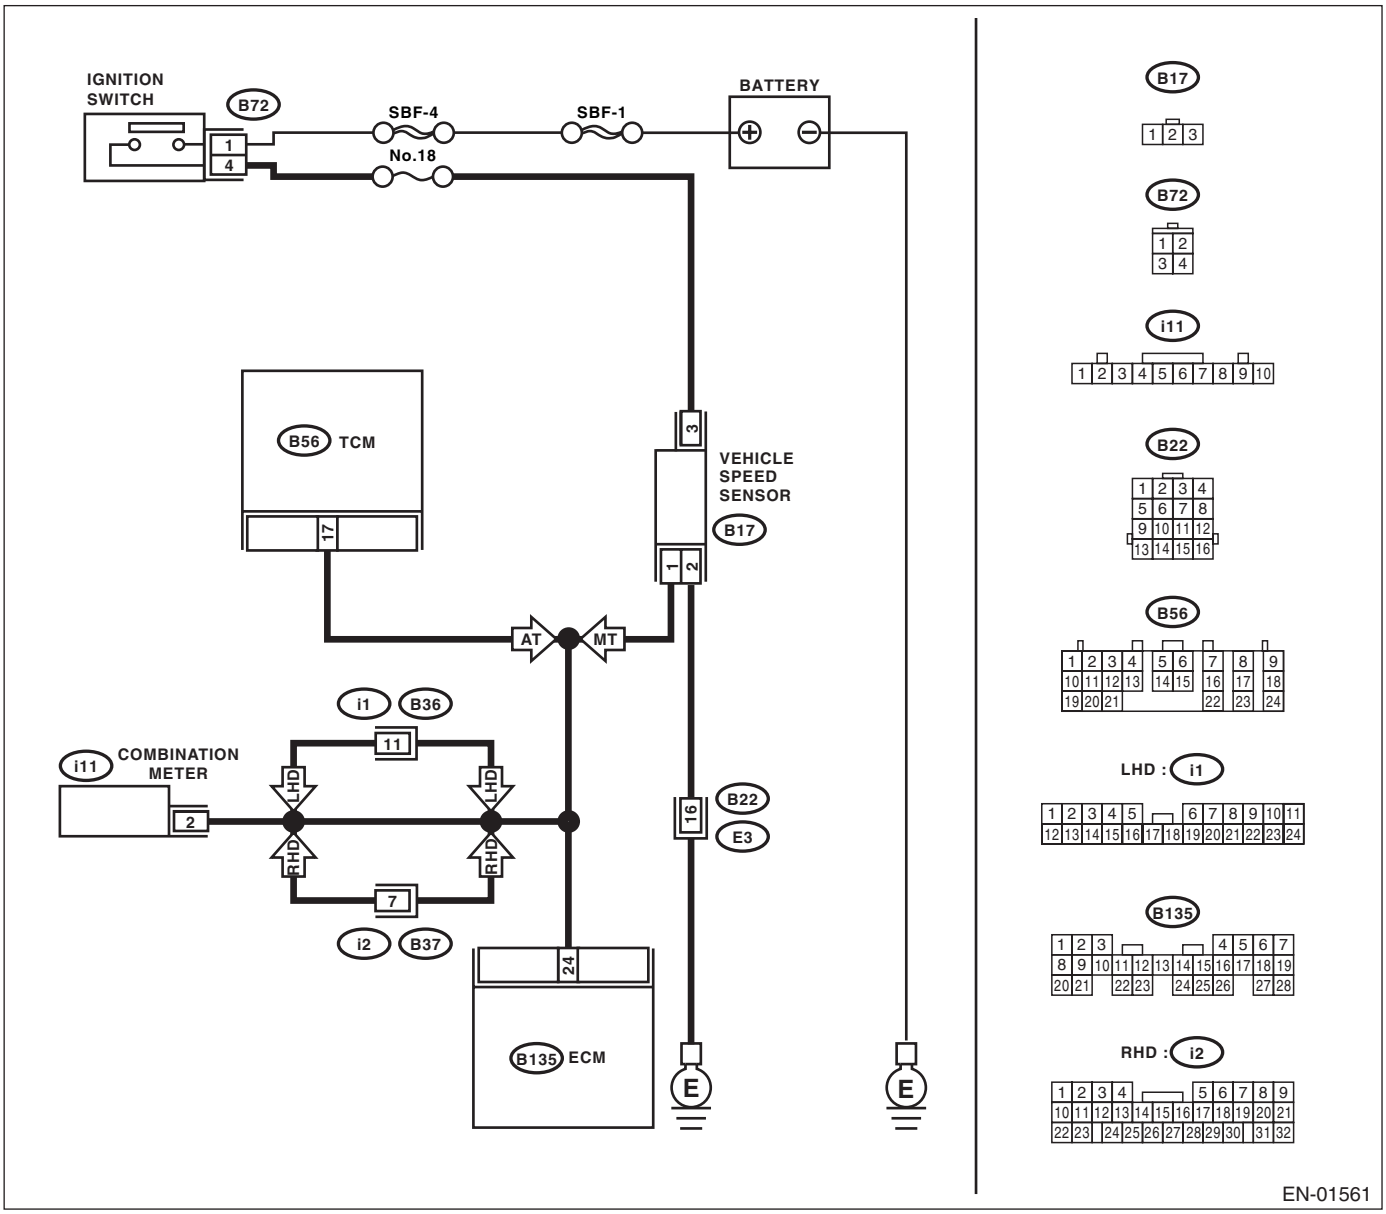

Step		Check	Yes	No
1	**CHECK SPEEDOMETER OPERATION IN COMBINATION METER.**	Does the speedometer operate normally?	Go to step **2.**	Check the speedometer and vehicle speed sensor.

	Step	Check	Yes	No
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Lift-up the vehicle. 2)Set the oscilloscope probe at ECM connector terminal positive (+) and its ground lead at negative (−). ***Connector & terminal*** ***(B135) No. 24 (+) — Chassis ground (−):*** 3)Start the engine. 4)Shift on the gear position, and put the vehicle at constant speed. 5)Measure the signal voltage indicated on oscilloscope.	Is the voltage more than 3 V?	Go to step **3.**	Go to step **4.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 24 (+) — Chassis ground (−):***	Is the voltage more than 2 V?	Repair the harness and connector. NOTE: In this case, repair the following: Battery short circuit in harness between ECM and combination meter connector	Go to step **5.**
5	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 24 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and combination meter connector.	Go to step **6.**
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

K: DTC 35 PURGE CONTROL SOLENOID VALVE

- **DIAGNOSIS:**
  - The purge control solenoid valve is not in function.
  - The harness connector between ECM and purge control solenoid valve is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

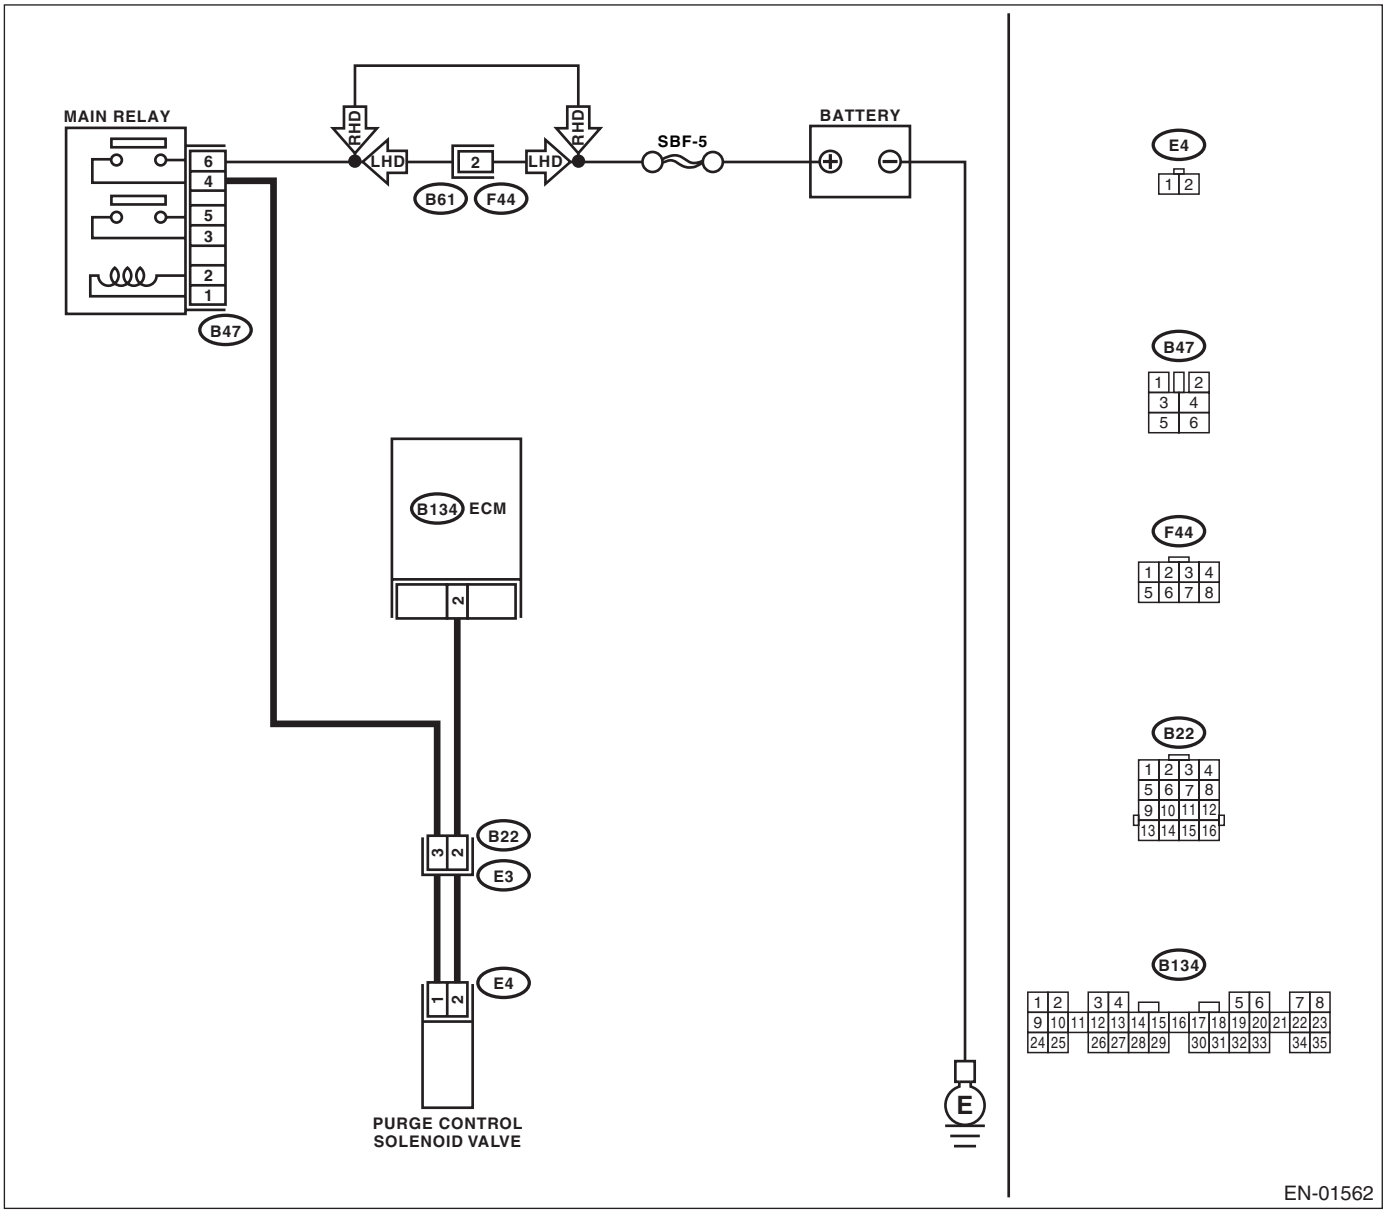

	Step	Check	Yes	No
1	**CHECK OPERATION SOUND OF PURGE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector at lower portion of instrument panel (on driver's side). 3)Turn the ignition switch to ON. 4)Make sure that the ON/OFF operating sound of purge control solenoid valve occurs at about 10 Hz.	Does the purge control solenoid valve produce operating sound?	Go to step **2.**	Go to step **3.**
2	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>
3	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the test mode connector. 3)Disconnect the connector from purge control solenoid valve. 4)Turn the ignition switch to ON. 5)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and purge control solenoid valve connector. After repair, replace the ECM.	Go to step **4.**
4	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and purge control solenoid valve of harness connector. ***Connector & terminal*** ***(B134) No. 2 — (E4) No. 2:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between ECM and purge control solenoid valve connector.
5	**CHECK PURGE CONTROL SOLENOID VALVE.** 1)Remove the purge control solenoid valve. 2)Measure the resistance between purge control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 23 — 27 Ω?	Go to step **6.**	Replace the purge control solenoid valve. <Ref. to EC(H4SOw/oOBD)-6, Purge Control Solenoid Valve.>

	Step	Check	Yes	No
6	**CHECK POWER SUPPLY TO PURGE CONTROL SOLENOID VALVE.** 1)Connect the connector to engine control module (ECM). 2)Turn the ignition switch to ON. 3)Measure the voltage between purge control solenoid valve and engine ground. ***Connector & terminal*** ***(E4) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **7.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and purge control solenoid valve connector • Poor contact in main relay connector • Poor contact in coupling connector (B22)
7	**CHECK POOR CONTACT.** Check poor contact in purge control solenoid valve connector.	Is there poor contact in purge control solenoid valve connector?	Repair the poor contact in purge control solenoid valve connector.	Contact with your SUBARU distributor service. NOTE: Inspection by your SUBARU distributor service is required, because probable cause is deterioration of multiple parts.

L: DTC 38 TORQUE CONTROL SIGNAL

- **DIAGNOSIS:**
  - Abnormal signal entered from TCM
  - The harness connector between ECM and TCM is shorted.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

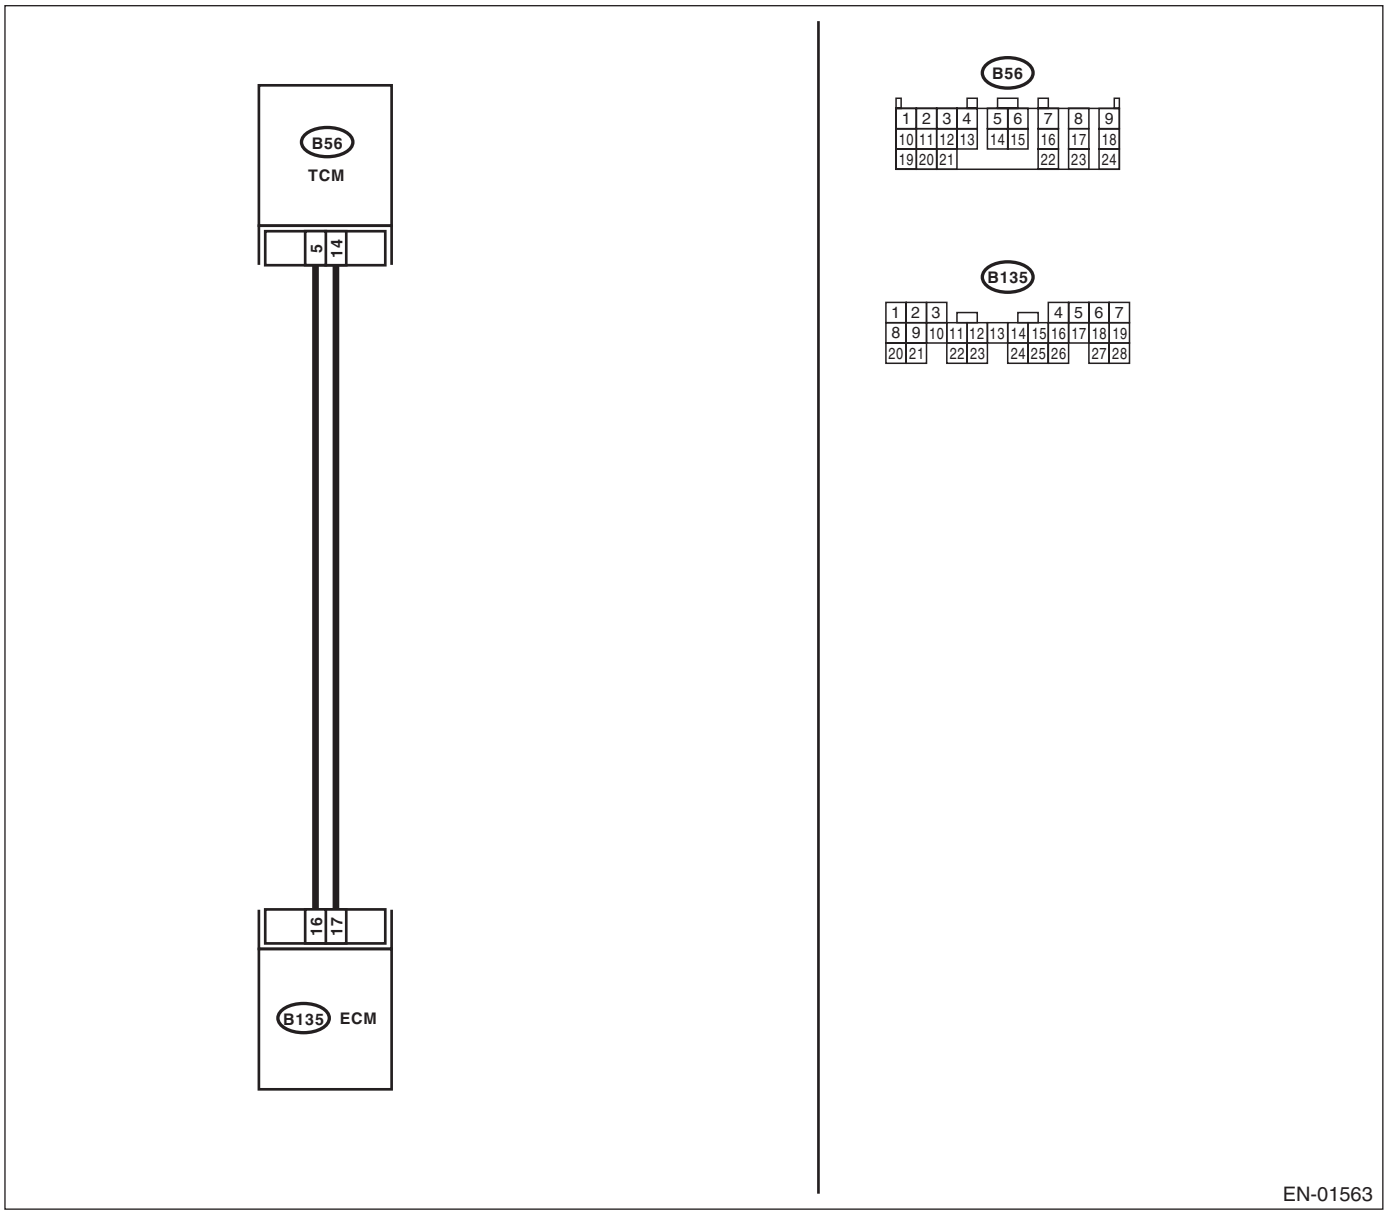

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Disconnect the connectors from ECM and TCM. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 17 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and TCM connector.	Go to step **2.**
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 16 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

M: DTC 45 PRESSURE SENSOR

- **DIAGNOSIS:**
  - The manifold absolute pressure sensor signal is abnormal.
  - The harness connector between ECM and manifold absolute pressure sensor is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

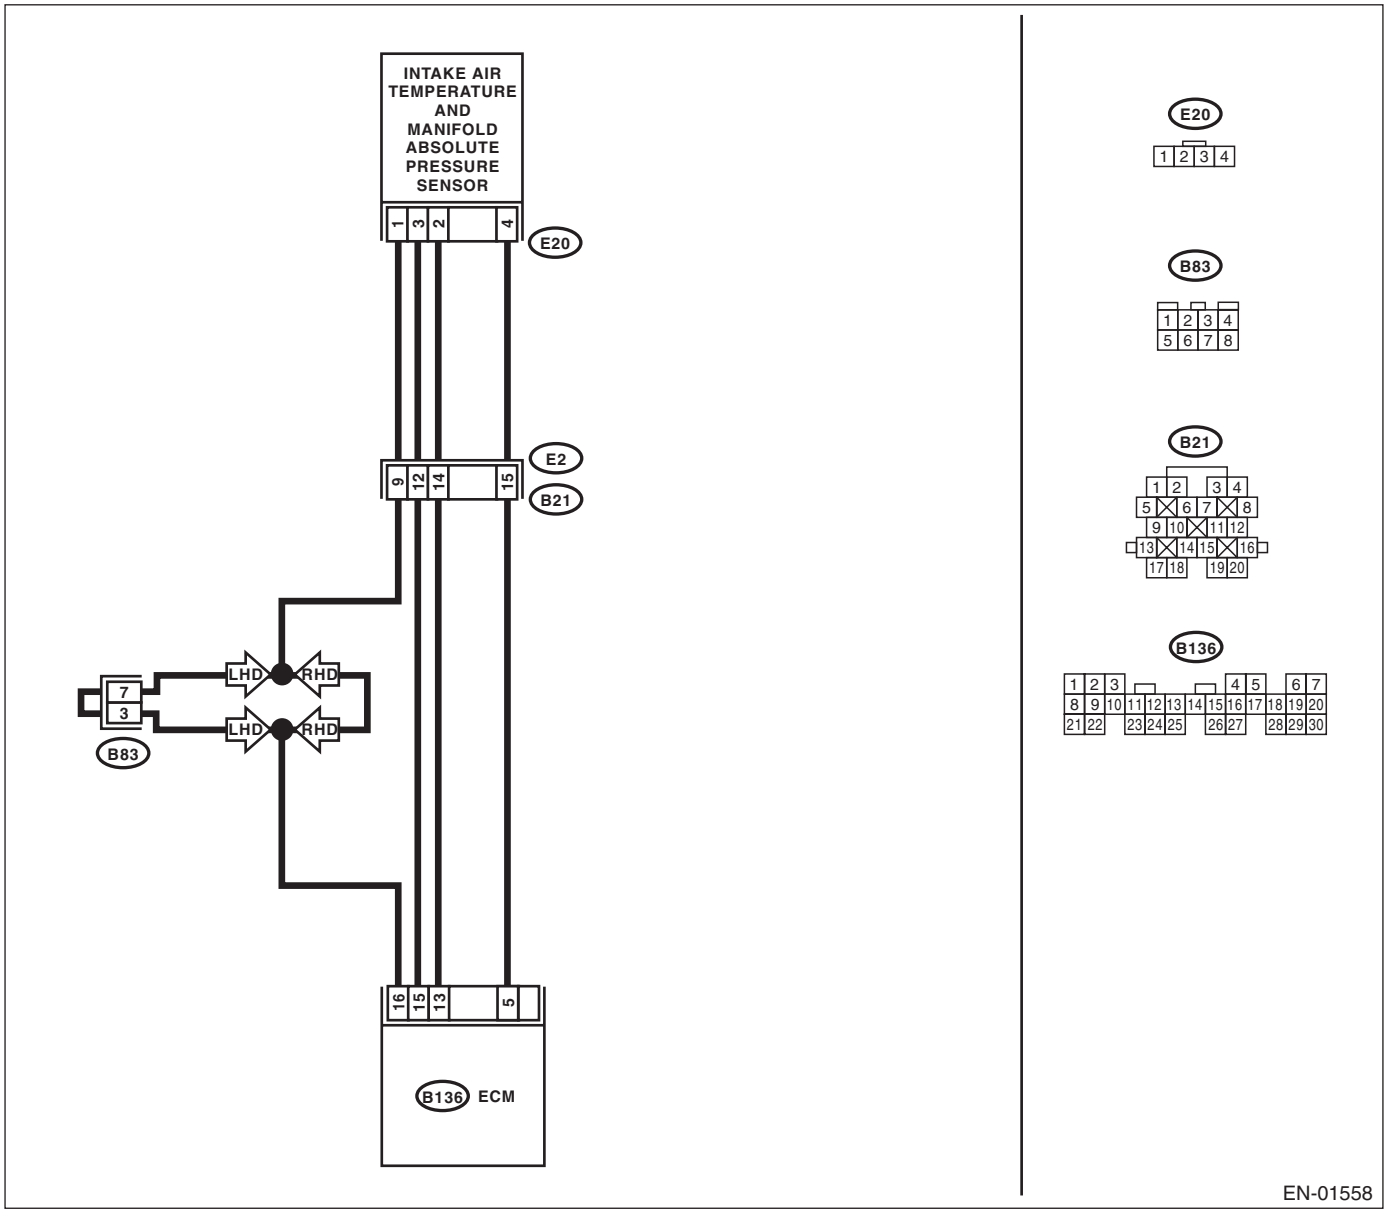

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** 1)Disconnect the connector from manifold absolute pressure sensor. 2)Turn the ignition switch to ON. 3)Measure the voltage between manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E20) No. 3 (+) — Engine ground (–):***	Is the voltage 4.5 — 5.5 V?	Go to step **2.**	Repair the open or ground short circuit in harness between ECM and manifold absolute pressure sensor.
2	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B136) No. 16 — (E20) No. 1:*** ***(B136) No. 5 — (E20) No. 4:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
3	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 5 — Chassis ground:*** ***(B136) No. 16 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the ground short circuit in harness between ECM and manifold absolute pressure sensor connector.
4	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to ECM and manifold absolute pressure sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 5 (+) — Chassis ground (–):***	Is the voltage 2.3 — 2.5 V?	Go to step **5.**	Replace the manifold absolute pressure sensor. <Ref. to FU(H4SOw/oOBD)-34, Intake Air Temperature and Manifold Absolute Pressure Sensor.>
5	**CHECK INPUT SIGNAL FOR ECM.** 1)Start the engine, and idle it. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 5 (+) — Chassis ground (–):***	Is the voltage 1.2 — 1.8 V?	Go to step **6.**	Replace the manifold absolute pressure sensor. <Ref. to FU(H4SOw/oOBD)-34, Intake Air Temperature and Manifold Absolute Pressure Sensor.>
6	**CHECK POOR CONTACT.** Check poor contact in manifold absolute pressure sensor connector.	Is there poor contact in manifold absolute pressure sensor connector?	Repair the poor contact in manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <Ref. to FU(H4SOw/oOBD)-34, Intake Air Temperature and Manifold Absolute Pressure Sensor.>

N: DTC 46 CO RESISTOR (GENERAL SPEC. VEHICLES)

- **DIAGNOSIS:**
  - The CO resistor signal is abnormal.
  - The harness connector between ECM and CO resistor is open or shorted.
  - The CO value is not adjusted to specifications.
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Mixture ratio is too rich or too lean.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

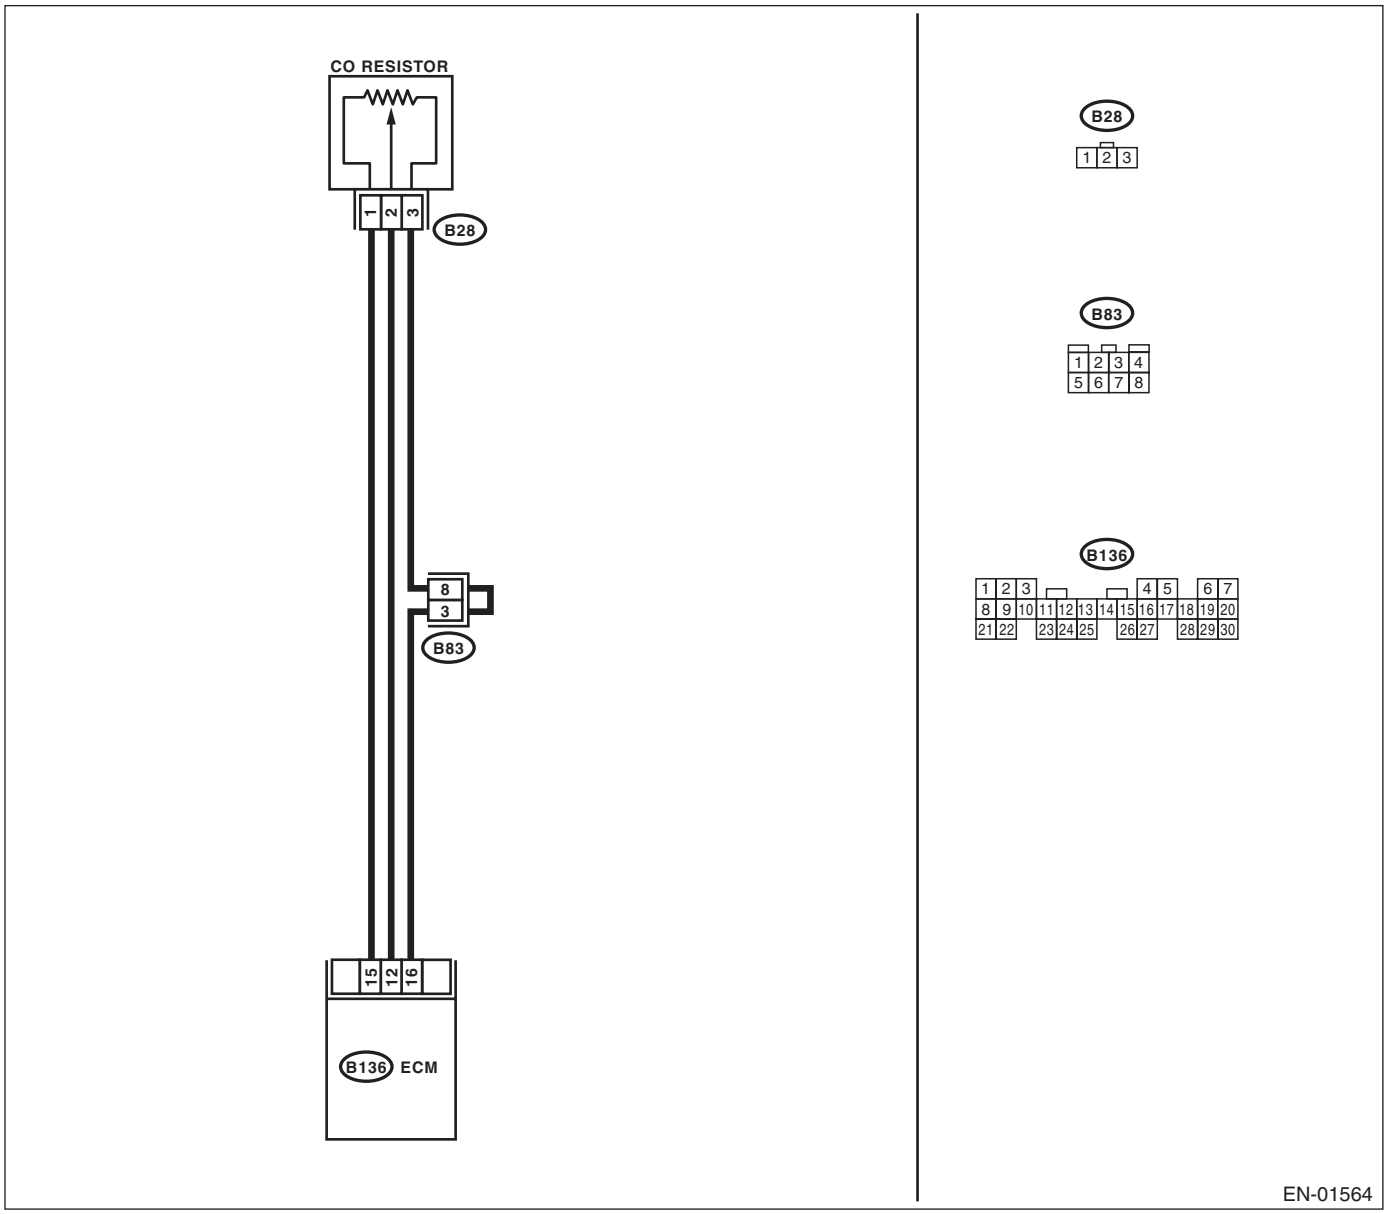

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 12 (+) — Chassis ground (–):***	Is the voltage 0.5 — 4.5 V?	Go to step **3.**	Go to step **2.**
2	**CHECK POOR CONTACT.**	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>
3	**CHECK HARNESS BETWEEN CO RESISTOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and CO resistor. 3)Measure the resistance of harness between ECM and CO resistor connector. ***Connector & terminal*** ***(B136) No. 15 — (B155) No. 1:*** ***(B136) No. 12 — (B155) No. 2:*** ***(B136) No. 16 — (B155) No. 3:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between ECM and CO resistor connector.
4	**CHECK HARNESS BETWEEN CO RESISTOR AND ECM CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 15 — Chassis ground:*** ***(B136) No. 12 — Chassis ground:*** ***(B136) No. 16 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the short circuit in harness between ECM and CO resistor connector.
5	**CHECK CO RESISTOR.** Measure the resistance between CO resistor terminals. ***Terminals*** ***No. 1 — No. 3:***	Is the resistance 4 — 6 kΩ?	Go to step **6.**	Replace the CO resistor.
6	**CHECK CO RESISTOR.** Measure the variable resistance between CO resistor terminals while rotating the screw of CO resistor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 0 — 6 kΩ?	Replace the ECM.	Replace the CO resistor. NOTE: Ensure resistance varies in response to screw rotation.

O: DTC 51 NEUTRAL POSITION SWITCH (MT MODEL)

- **DIAGNOSIS:**
  - The neutral position switch signal is abnormal.
  - The harness connector between ECM and neutral position switch is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

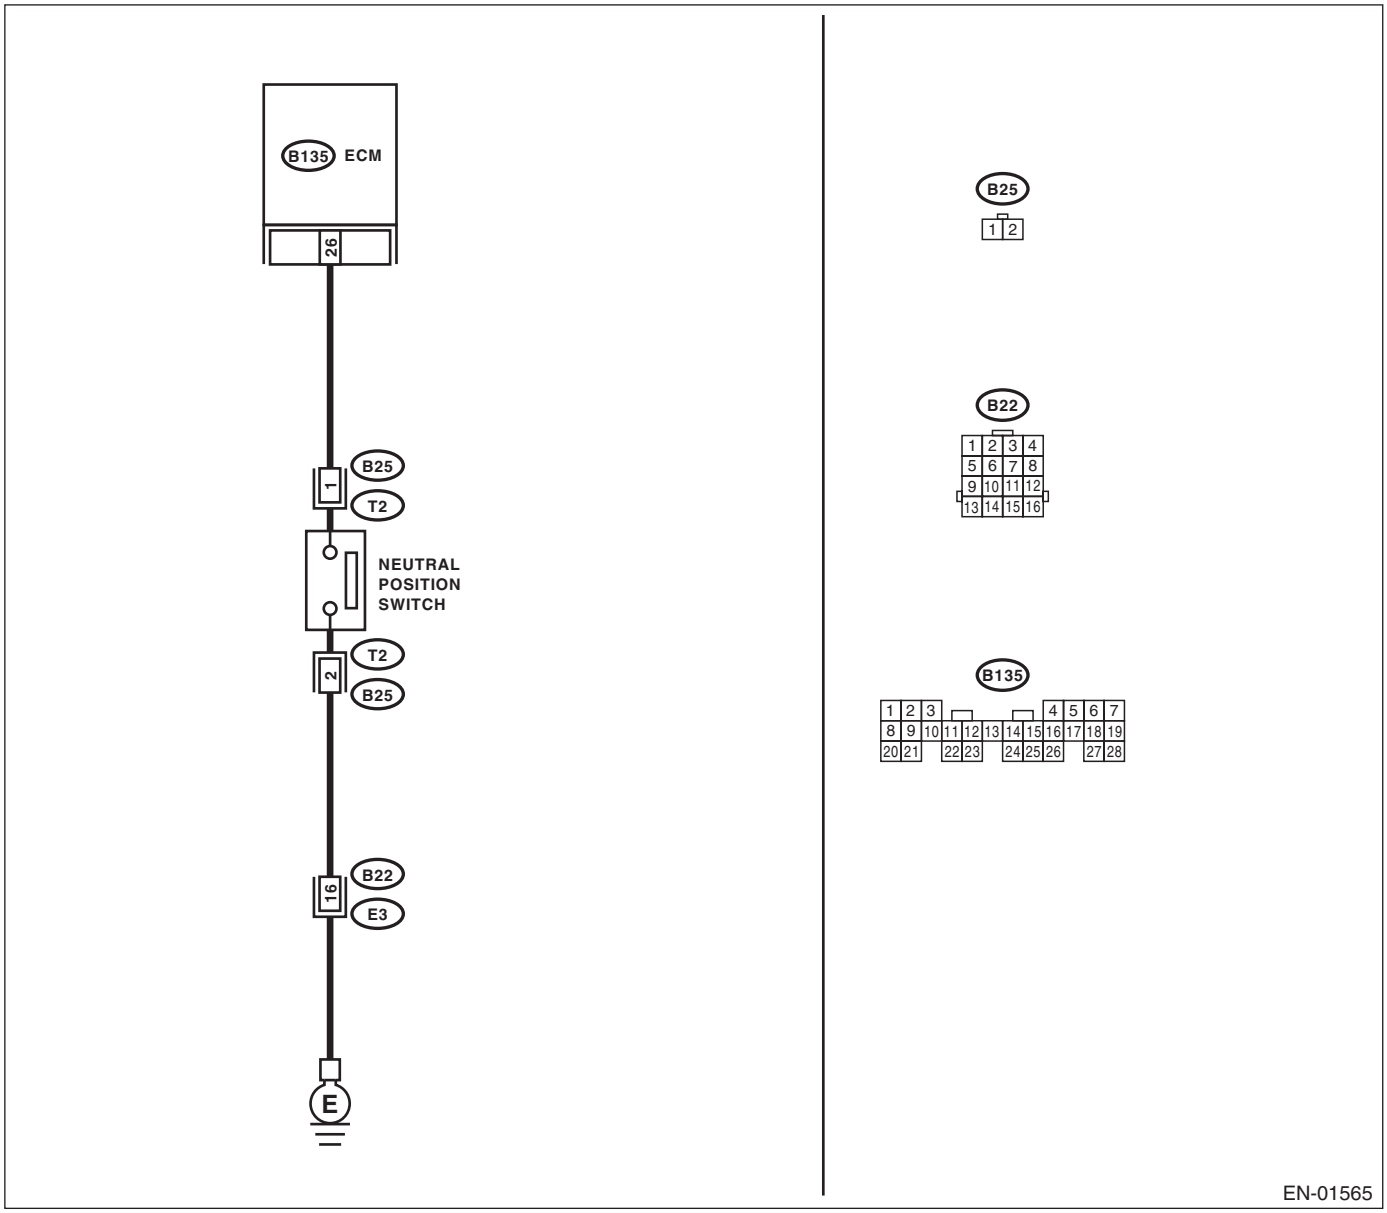

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 26 (+) — Chassis ground (−):***	Is the voltage 4.5 — 5.5 V in neutral position?	Go to step **3.**	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 26 (+) — Chassis ground (−):***	Is the voltage less than 1 V in other positions?	Go to step **3.**	Go to step **4.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>
4	**CHECK NEUTRAL POSITION SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission harness. 3)Measure the resistance between transmission harness and connector terminals. ***Connector & terminal*** ***(T2) No. 1 — No. 2:***	Is the resistance more than 1 MΩ in neutral position?	Go to step **5.**	Repair the short circuit in transmission harness or replace neutral position switch.
5	**CHECK NEUTRAL POSITION SWITCH.** Measure the resistance between transmission harness connector terminals. ***Connector & terminal*** ***(T2) No. 1 — No. 2:***	Is the resistance less than 10 Ω in other positions?	Go to step **6.**	Repair the open circuit in transmission harness or replace neutral position switch.
6	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and transmission harness connector. ***Connector & terminal*** ***(B135) No. 26 — (B25) No. 1:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair the open circuit in harness between ECM and transmission harness connector.
7	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 26 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and transmission harness connector.	Go to step **8.**
8	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

P: DTC 51 PARK/NEUTRAL POSITION SWITCH (AT MODEL)

- **DIAGNOSIS:**
  - The park/neutral position switch signal is abnormal.
  - The shift cable is connected abnormally.
  - The harness connector between ECM/TCM and inhibitor switch is open or shorted.
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

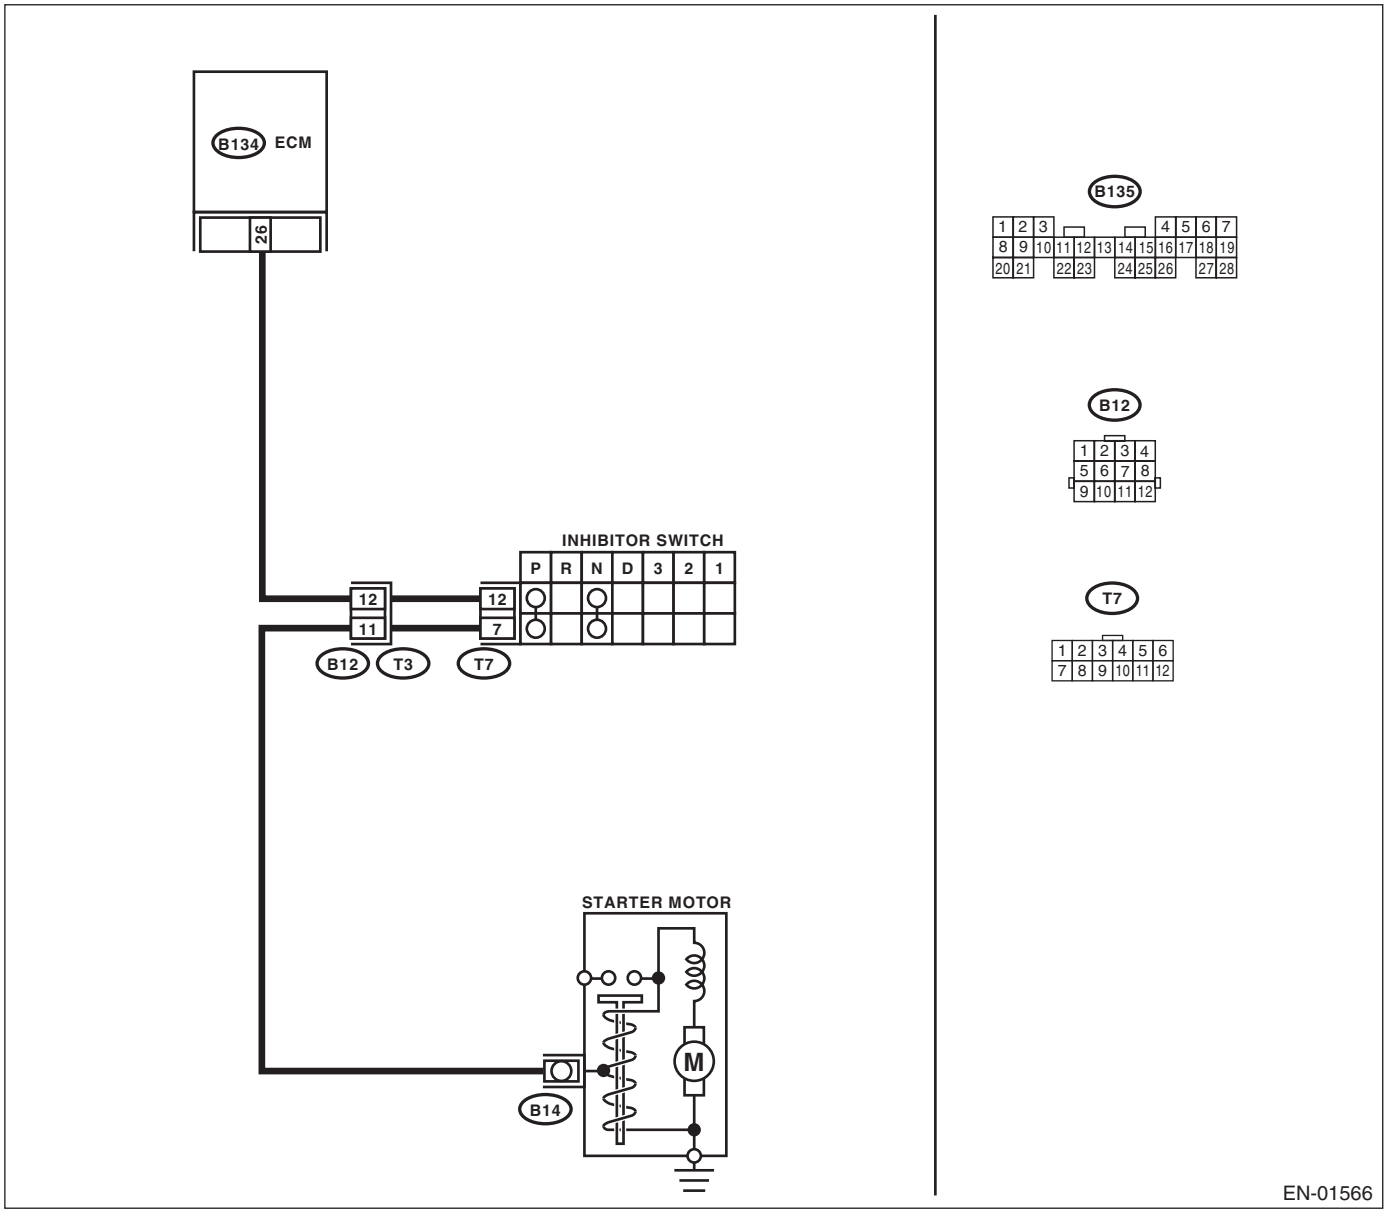

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground in selector lever "N" and "P" positions. ***Connector & terminal*** ***(B135) No. 26 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **2.**	Go to step **3.**
2	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND INHIBITOR SWITCH CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and inhibitor switch. 3)Measure the resistance of harness between ECM and inhibitor switch connector. ***Connector & terminal*** ***(B135) No. 26 — (T7) No. 12:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and inhibitor switch connector • Poor contact in coupling connector (B12) • Poor contact in inhibitor switch connector • Poor contact in ECM connector
4	**CHECK INHIBITOR SWITCH GROUND LINE.** Measure the resistance of harness between inhibitor switch connector and engine ground. ***Connector & terminal*** ***(T7) No. 12 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the open circuit in inhibitor switch ground line.
5	**CHECK HARNESS BETWEEN ECM AND TRANSMISSION HARNESS CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 26 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and transmission harness connector.	Go to step **6.**
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).>

Q: DTC 85 CHARGE SYSTEM

- **DIAGNOSIS:**
  - Power source voltage of the ECM is low or high.
- **TROUBLE SYMPTOM:**
  - Charge warning light comes on.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory and inspection modes. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> and <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

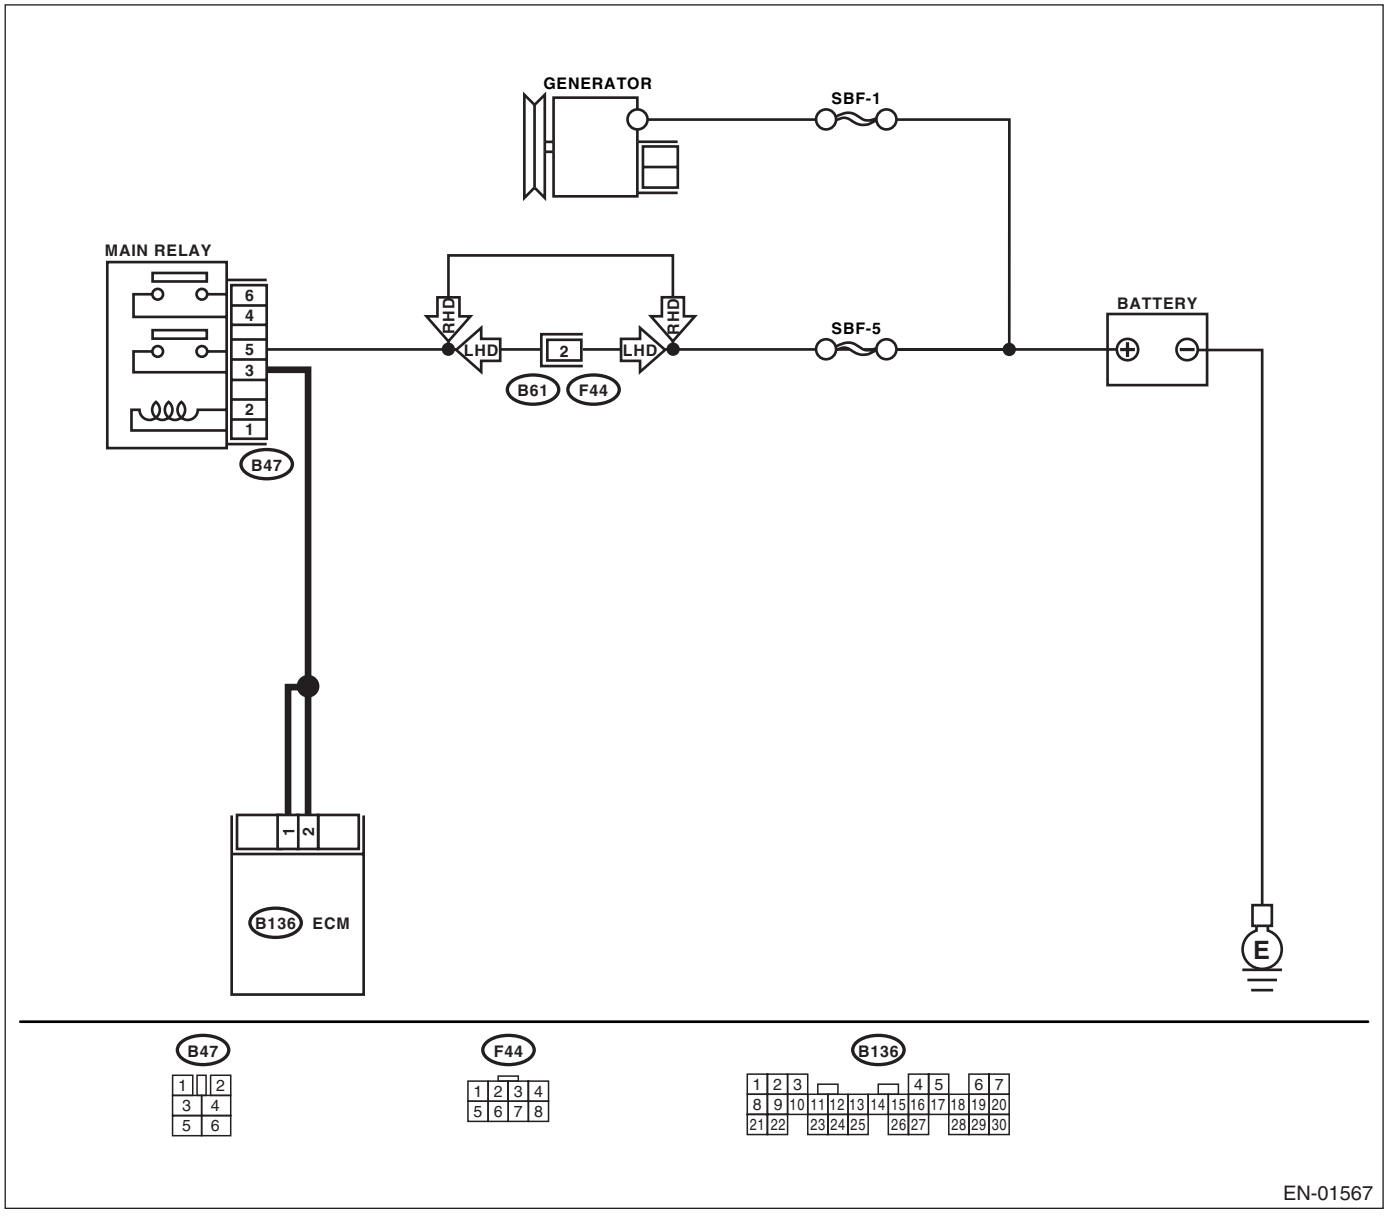

	Step	Check	Yes	No
1	**CHECK GENERATOR.** 1)Start the engine. 2)Idle after warm-up. 3)Measure the voltage between generator B terminal and chassis ground. ***Terminal*** ***Generator B terminal (+) — Chassis ground (–):***	Is the voltage 10.8 V — 16.2 V?	Go to step **2.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
2	**CHECK GENERATOR.** 1)Run the engine at 5,000 rpm. 2)Measure the voltage between generator B terminal and chassis ground. ***Terminal*** ***Generator B terminal (+) — Chassis ground (–):***	Is the voltage 10.8 V — 16.2 V?	Go to step **3.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
3	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Are the positive and ground battery terminals tightly clamped?	Go to step **4.**	Tighten the clamp of terminal.
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Run the engine at idle. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B136) No. 1 (+) — Chassis ground (–):*** ***(B136) No. 2 (+) — Chassis ground (–):***	Is the voltage 10.8 V — 16.2 V?	Go to step **5.**	Repair the harness connector between battery, main relay and ECM.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in the connectors between generator, battery and ECM?	Repair the connector.	Go to step **6.**
6	**CHECK ECM.** 1)Connect all connectors. 2)Erase the memory. <Ref. to EN(H4SOw/oOBD)-27, OPERATION, Clear Memory Mode.> 3)Perform the inspection mode. <Ref. to EN(H4SOw/oOBD)-25, OPERATION, Inspection Mode.> 4)Read any DTC on the display. <Ref. to EN(H4SOw/oOBD)-23, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is the same DTC as in the current diagnosis still being output?	Replace the generator.	Go to step **7.**
7	**CHECK ANY OTHER DTCs APPEARANCE.**	Is any other DTC displayed?	Proceed with the diagnosis corresponding to the DTC.	A temporary poor contact.

15.General Diagnostic Table

A: INSPECTION

NOTE:
• Malfunction of parts other than those listed is also possible.
• The right-hand priority column indicates inspection priority of probable causes of the symptom. Carry out the check starting from A.

Symptom	Problem parts	Priority
1. Engine does not start. (Internal combustion does not occur.)	1) ECM power supply	A
	2) Engine ground cable	A
	3) Crankshaft position sensor	B
	4) Camshaft position sensor	B
	5) Fuel pump	B
	6) Pressure regulator	B
	7) Ignition coil & ignitor	C
	8) Spark plug	C
	9) Fuel injector	C
2. Engine does not start. (Internal combustion occurs.)	1) ECM power supply	A
	2) Spark plug	A
	3) Engine coolant temperature sensor	B
	4) Pressure regulator	B
	5) Manifold absolute pressure sensor	C
	6) Fuel pump	C
	7) Fuel injector	C
	8) Camshaft position sensor	C
	9) Crankshaft position sensor	C
	10) Idle air control solenoid valve	C
3. Engine does not start. (Engine stalls after internal combustion.)	1) ECM power supply	A
	2) Manifold absolute pressure sensor	A
	3) Engine coolant temperature sensor	B
	4) Spark plug	B
	5) Ignition coil	C
	6) Fuel pump	C
	7) Pressure regulator	C
	8) Fuel injector	C
	9) Idle air control solenoid valve	C
4. Engine stalls.	1) Idle air control solenoid valve	A
	2) Manifold absolute pressure sensor	B
	3) Spark plug	B
	4) Accelerator cable is out of adjustment	B
	5) ECM power supply	C
	6) Throttle position sensor	C
	7) Crankshaft position sensor	C
	8) Vehicle speed sensor	C
	9) Ignition coil	C
	10) Fuel pump	C

Symptom	Problem parts	Priority
5. Rough idling	1) Spark plug	A
	2) Manifold absolute pressure sensor	B
	3) Engine coolant temperature sensor	B
	4) Pressure regulator	B
	5) Idle air control solenoid valve	B
	6) Air leak in air intake system	B
	7) ECM power supply	C
	8) Throttle position sensor	C
	9) Camshaft position sensor	C
	10) Crankshaft position sensor	C
	11) Oxygen sensor	C
	12) Fuel pump	C
	13) Fuel injector	C
	14) Test mode or read memory connectors are connected	C
	15) Intake air temperature sensor	C
6. Hard to drive at constant speed	1) Pressure regulator	A
	2) Fuel injector	B
	3) Manifold absolute pressure sensor	C
	4) Engine coolant temperature sensor	C
	5) Throttle position sensor	C
	6) Fuel pump	C
7. Poor acceleration/deceleration	1) Spark plug	A
	2) Throttle position sensor	B
	3) Ignition coil	B
	4) Fuel pump	B
	5) Pressure regulator	B
	6) Fuel injector	B
	7) Manifold absolute pressure sensor	C
	8) Engine coolant temperature sensor	C
	9) Idle air control solenoid valve	C
	10) Knock sensor	C
8. Poor return to idling	1) Accelerator cable is out of adjustment	A
	2) Throttle position sensor	B
	3) Idle air control solenoid valve	B
	4) Manifold absolute pressure sensor	C
	5) Engine coolant temperature sensor	C
9. Back fire	1) Spark plug	A
	2) Fuel injector	B
	3) Ignition coil and ignitor	C
	4) Fuel pump	C
	5) Pressure regulator	C
10. Knocking	1) Manifold absolute pressure sensor	A
	2) Fuel pump	B
	3) Knock sensor	B
	4) Pressure regulator	B
	5) Engine coolant temperature sensor	C
11. Excessive fuel consumption	1) Manifold absolute pressure sensor	A
	2) Pressure regulator	B
12. Shocks while driving	1) Pressure regulator	A
	2) ECM power supply	B
	3) Throttle position sensor	B

GENERAL DIAGNOSTIC TABLE

Symptom	Problem parts	Priority
13. Poor engine revving	1) Pressure regulator	A
	2) Manifold absolute pressure sensor	B
	3) Engine coolant temperature sensor	B
	4) Throttle sensor	B
	5) Fuel pump	B
14. Remarks	1) ECM power supply	A*
	2) Manifold absolute pressure sensor	B*
	3) Pressure regulator	B*
	4) Idle air control solenoid valve	B*
	5) Air leak in air intake system	B*

A*: Including ECM ground circuit
B*: Check hoses.

ENGINE SECTION 2

FUEL INJECTION (FUEL SYSTEMS)	FU(H4DOTC)
EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)	EC(H4DOTC)
INTAKE (INDUCTION)	IN(H4DOTC)
MECHANICAL	ME(H4DOTC)
EXHAUST	EX(H4DOTC)
COOLING	CO(H4DOTC)
LUBRICATION	LU(H4DOTC)
SPEED CONTROL SYSTEMS	SP(H4DOTC)
IGNITION	IG(H4DOTC)
STARTING/CHARGING SYSTEMS	SC(H4DOTC)
ENGINE (DIAGNOSTICS)	EN(H4DOTC)

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD. G1860GE3

FUEL INJECTION (FUEL SYSTEMS)

FU(H4DOTC)

		Page
1.	General Description	2
2.	Throttle Body	13
3.	Intake Manifold	14
4.	Engine Coolant Temperature Sensor	28
5.	Crankshaft Position Sensor	29
6.	Camshaft Position Sensor	30
7.	AVCS Camshaft Position Sensor	31
8.	Knock Sensor	32
9.	Throttle Position Sensor	33
10.	Mass Air Flow and Intake Air Temperature Sensor	34
11.	Manifold Absolute Pressure Sensor	35
12.	Idle Air Control Solenoid Valve	36
13.	Fuel Injector	37
14.	Tumble Generator Valve Assembly	41
15.	Tumble Generator Valve Actuator	42
16.	Wastegate Control Solenoid Valve	43
17.	Front Oxygen (A/F) Sensor	44
18.	Rear Oxygen Sensor	46
19.	Exhaust Temperature Sensor	48
20.	Engine Control Module (ECM)	49
21.	Main Relay	50
22.	Fuel Pump Relay	51
23.	Fuel Pump Control Unit	52
24.	Fuel	53
25.	Fuel Tank	54
26.	Fuel Filler Pipe	57
27.	Fuel Pump	61
28.	Fuel Level Sensor	63
29.	Fuel Sub Level Sensor	64
30.	Fuel Filter	66
31.	Fuel Cut Valve	67
32.	Fuel Damper Valve	68
33.	Fuel Delivery, Return and Evaporation Lines	69
34.	Fuel System Trouble in General	72

1. General Description

A: SPECIFICATIONS

Fuel tank	Capacity	60 ℓ (15.9 US gal, 13.2 Imp gal)
	Location	Under rear seat
Fuel pump	Type	Impeller
	Shutoff discharge pressure	450 — 677 kPa (4.59 — 6.9 kg/cm^2, 65.27 — 98.2 psi)
	Discharge flow	More than 130 ℓ (34.3 US gal, 28.6 Imp gal)/h [12 V at 300 kPa (3.06 kg/cm^2, 43.5 psi)]
Fuel filter		Cartridge type

B: COMPONENT

1. INTAKE MANIFOLD

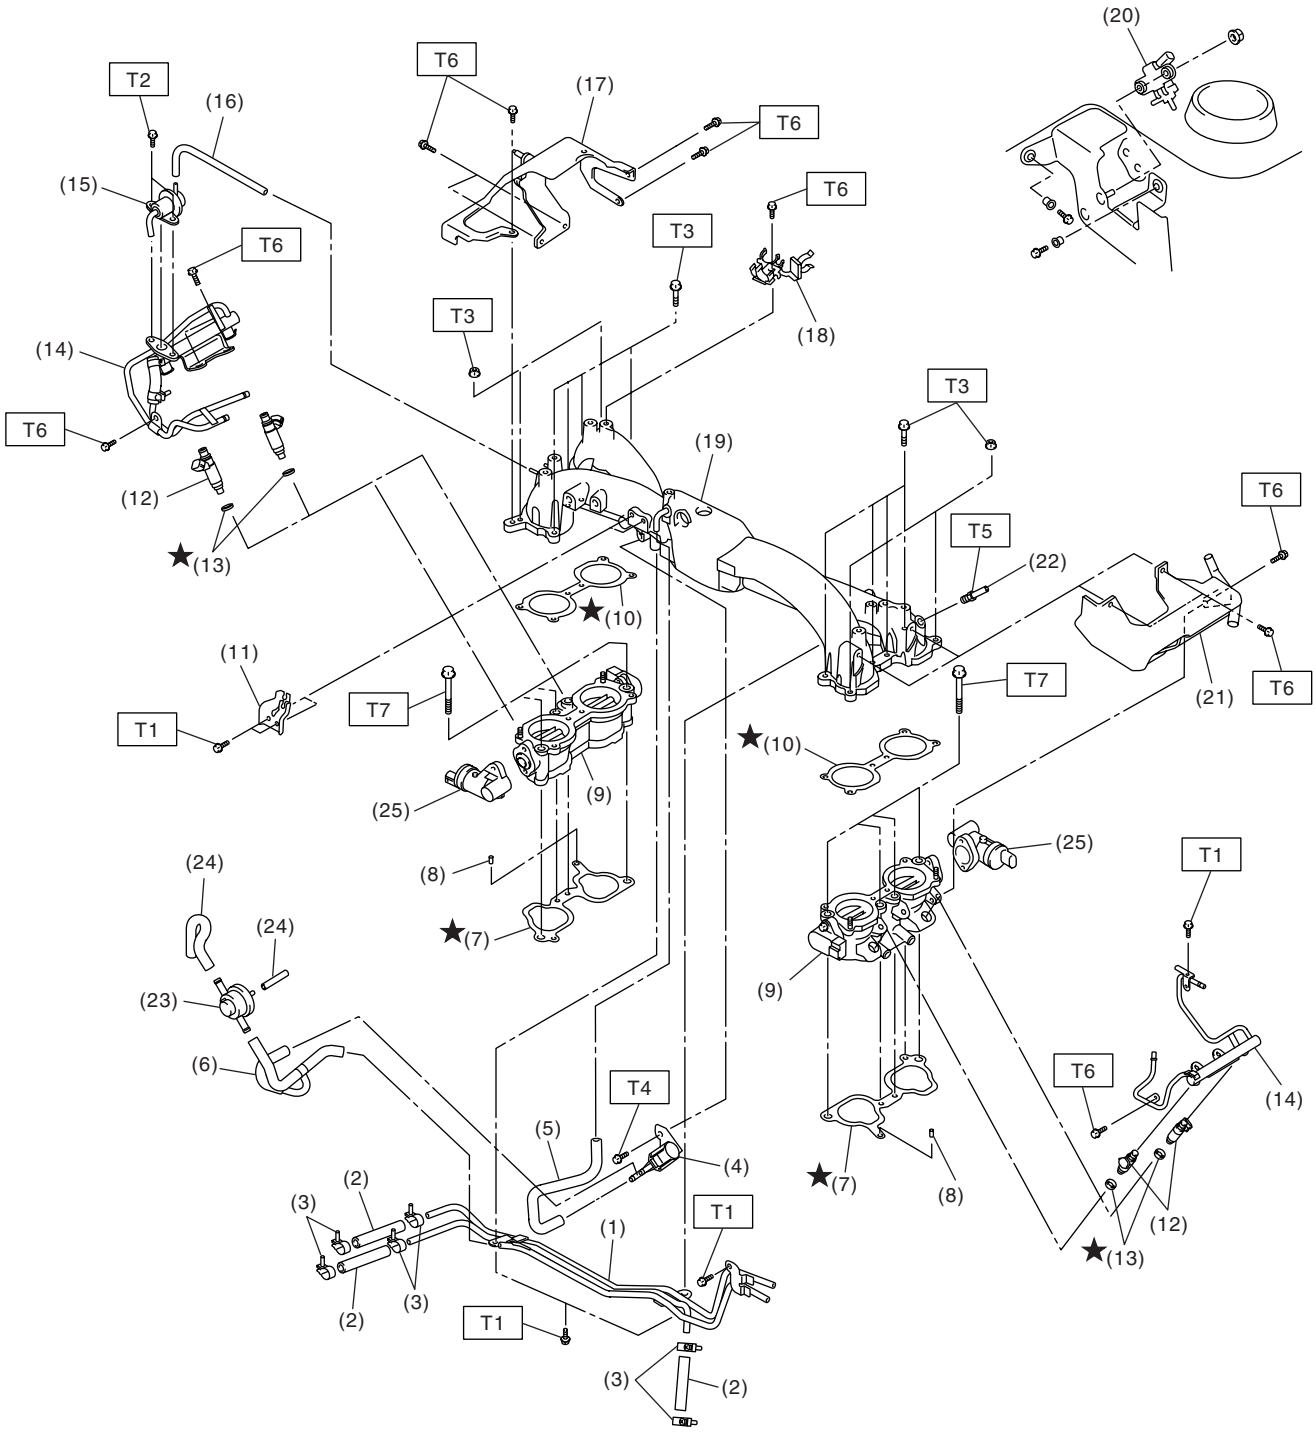

FU-00966

(1) Fuel pipe ASSY
(2) Fuel hose
(3) Clip
(4) Purge control solenoid valve
(5) Vacuum hose
(6) Vacuum control hose
(7) Intake manifold gasket
(8) Guide pin
(9) Tumble generator valve ASSY (Except STi model)
(10) Gasket
(11) Accelerator cable bracket (MT model)
(12) Fuel injector
(13) Insulator
(14) Fuel injector pipe
(15) Pressure regulator
(16) Pressure regulator hose
(17) Fuel pipe protector RH
(18) Blow-by hose stay
(19) Intake manifold
(20) Wastegate control solenoid valve ASSY
(21) Fuel pipe protector LH
(22) Nipple
(23) Purge valve (Except Australia model)
(24) Purge hose (Except Australia model)
(25) Tumble generator valve actuator (Except STi model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5.0 (0.5, 3.6)
T2: 6.4 (0.65, 4.7)
T3: 8.25 (0.84, 6.1)
T4: 16 (1.6, 11.8)
T5: 17 (1.7, 12.5)
T6: 19 (1.9, 14.0)
T7: 25 (2.5, 18.4)

2. AIR INTAKE SYSTEM

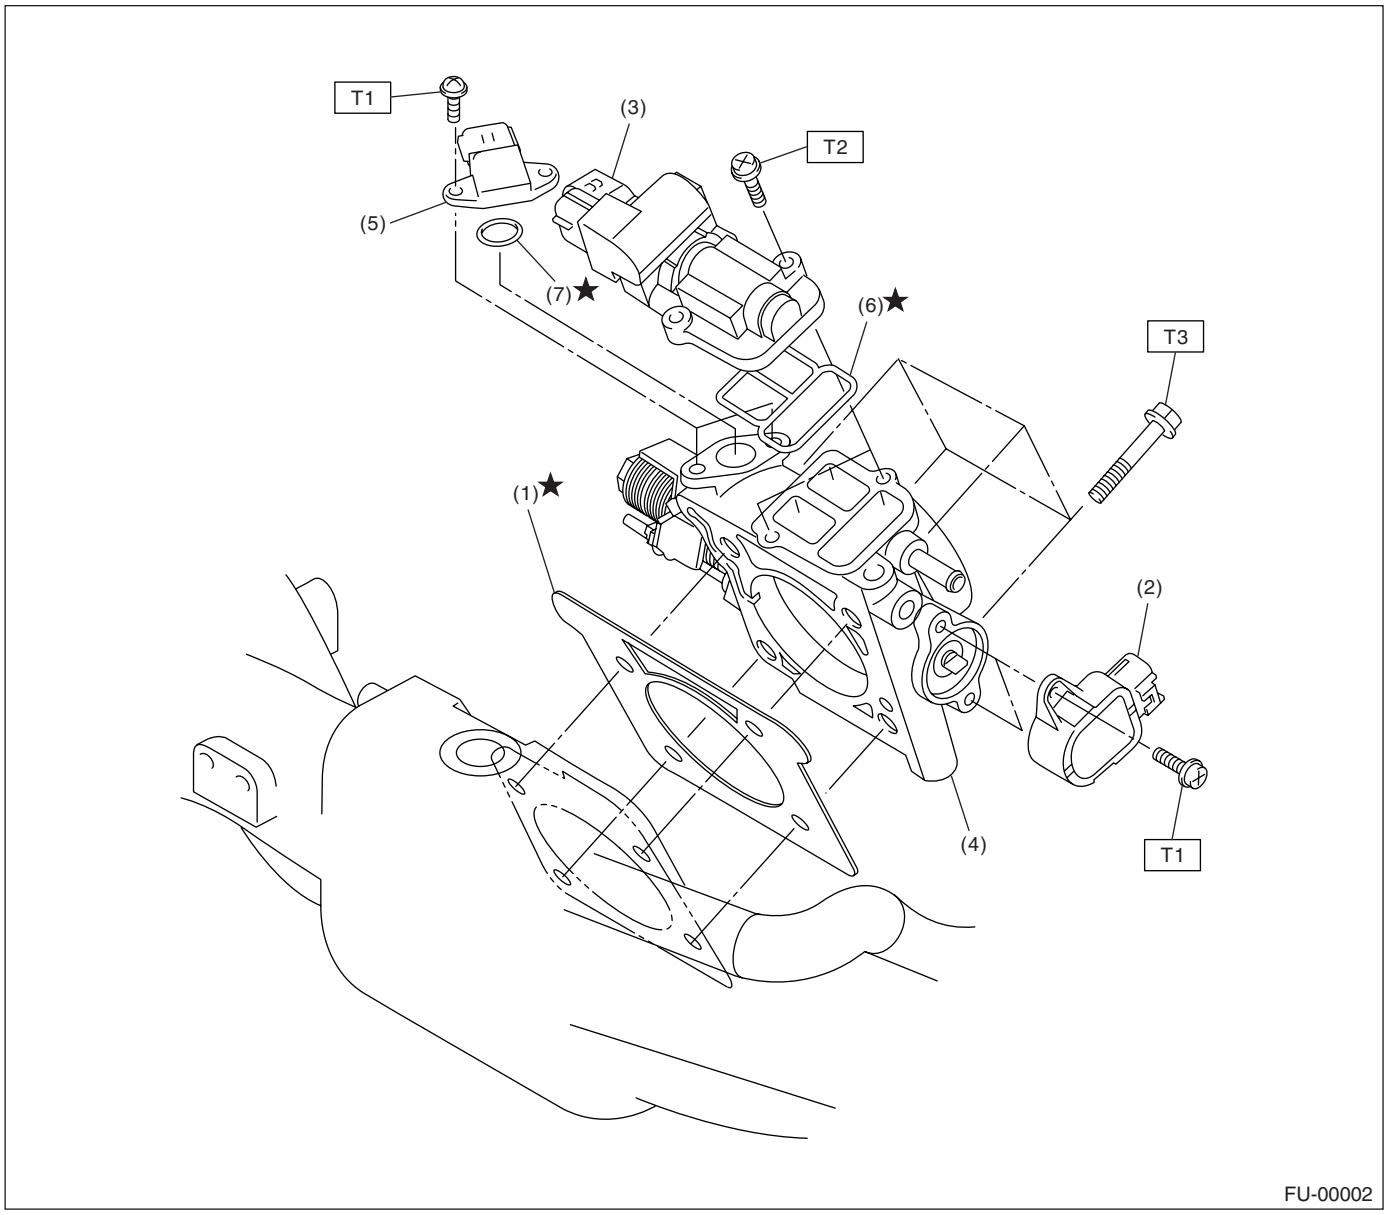

(1)	Gasket	(5)	Manifold absolute pressure sensor	***Tightening torque: N·m (kgf-m, ft-lb)***
(2)	Throttle position sensor	(6)	Gasket	***T1: 1.6 (0.16, 1.2)***
(3)	Idle air control solenoid valve	(7)	O-ring	***T2: 2.8 (0.29, 2.1)***
(4)	Throttle body			***T3: 22 (2.2, 16.2)***

3. CRANKSHAFT POSITION, CAMSHAFT POSITION AND KNOCK SENSORS

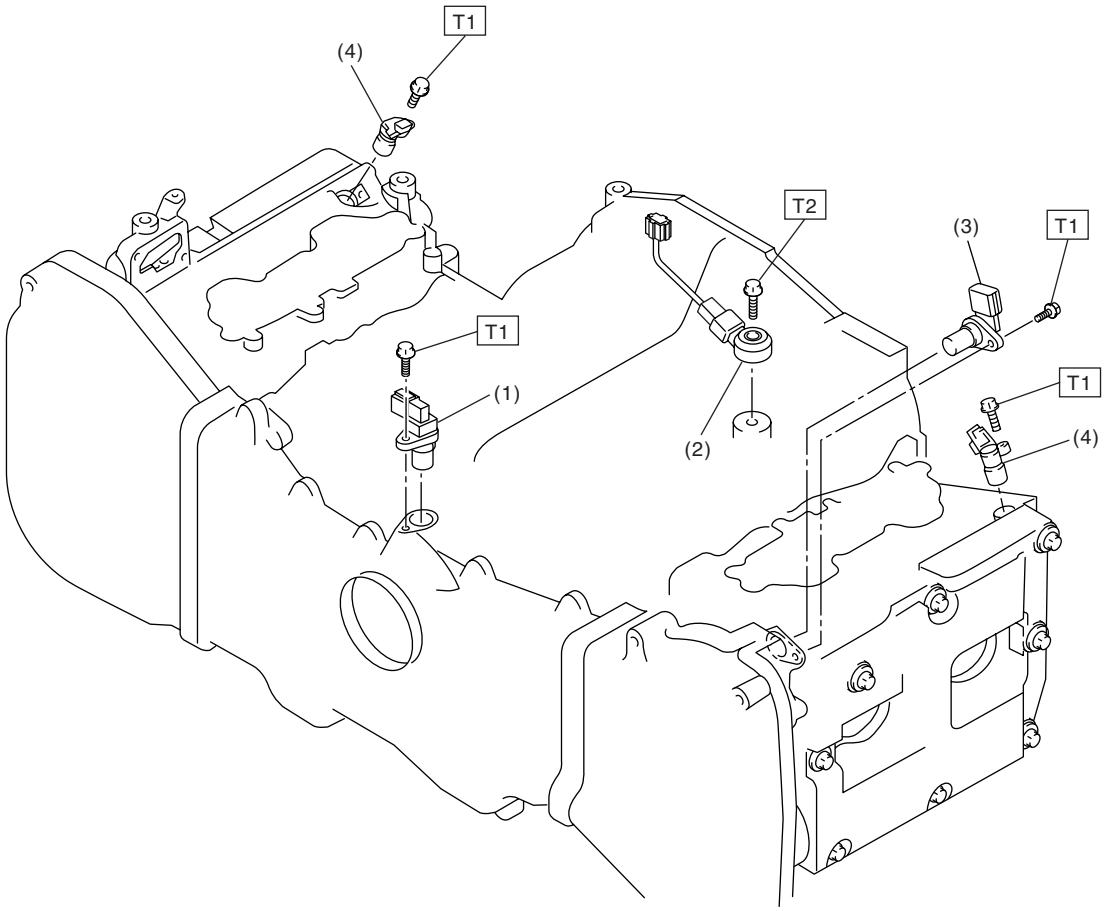

(1) Crankshaft position sensor
(2) Knock sensor
(3) Camshaft position sensor
(4) AVCS camshaft position sensor (STi model and Australia model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 24 (2.4, 17.4)

4. FUEL TANK

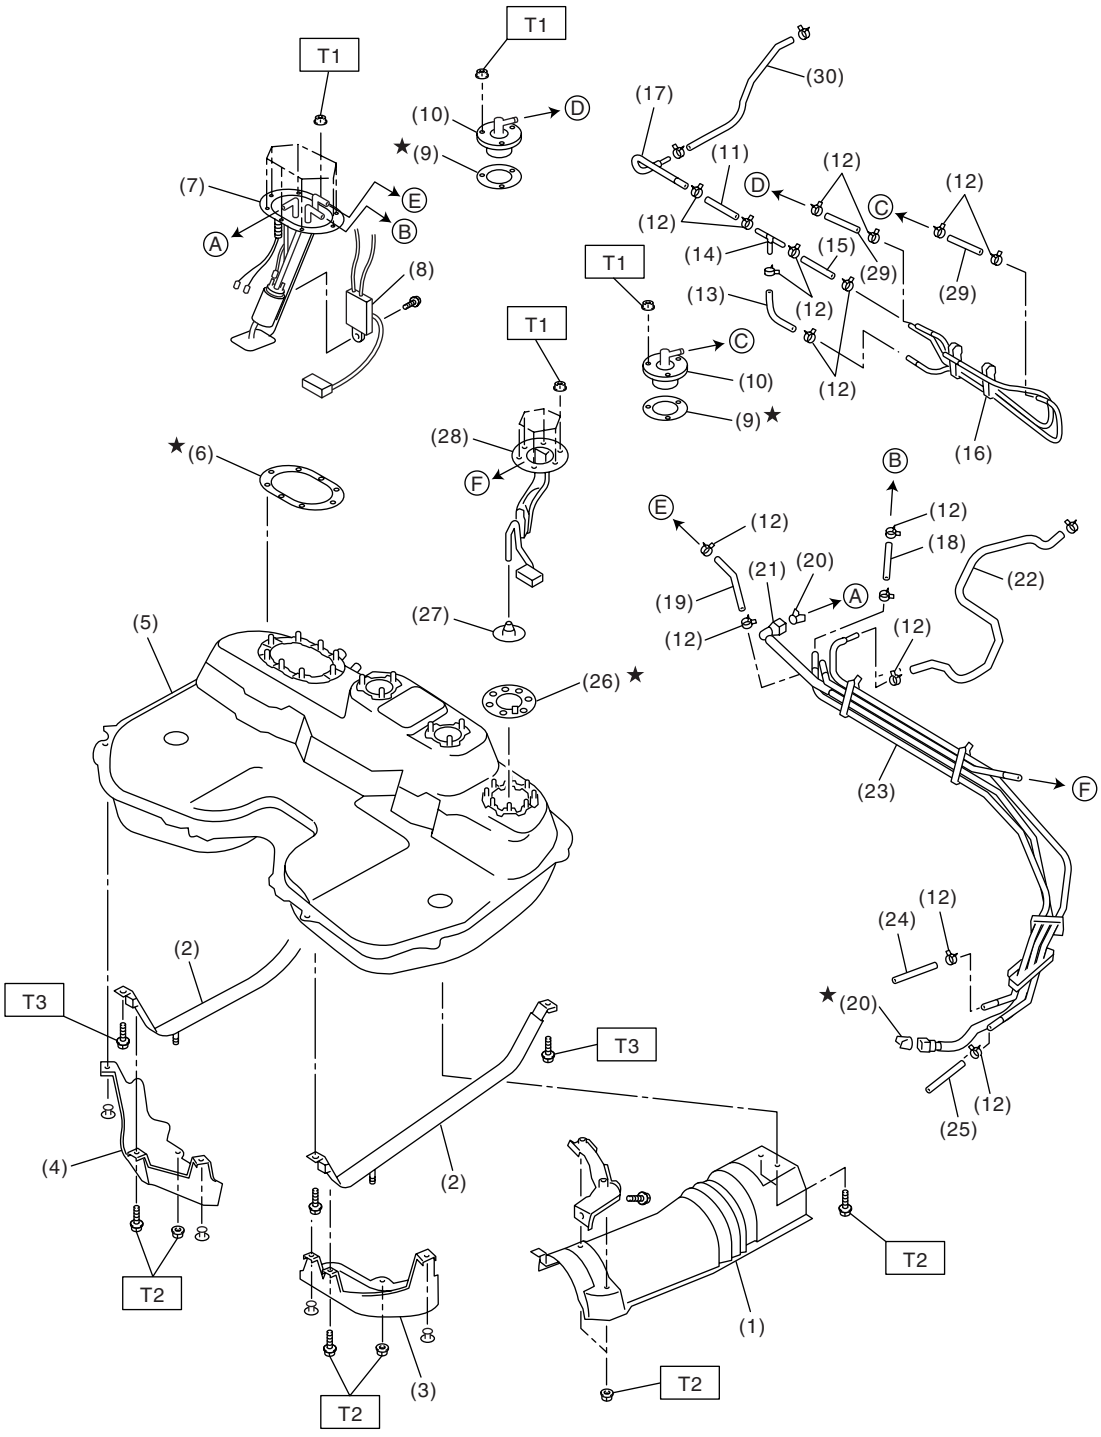

FU-00909

(1) Heat shield cover
(2) Fuel tank band
(3) Protector LH
(4) Protector RH
(5) Fuel tank
(6) Fuel pump gasket
(7) Fuel pump ASSY
(8) Fuel level sensor
(9) Fuel cut valve gasket
(10) Fuel cut valve
(11) Evaporation hose A
(12) Clip
(13) Evaporation hose B
(14) Joint pipe
(15) Evaporation hose C
(16) Evaporation pipe ASSY
(17) Evaporation pipe
(18) Fuel return hose A
(19) Jet pump hose
(20) Retainer
(21) Quick connector
(22) Evaporation hose D
(23) Fuel pipe ASSY
(24) Fuel return hose B
(25) Evaporation hose E
(26) Fuel sub level sensor gasket
(27) Jet pump filter
(28) Fuel sub level sensor
(29) Evaporation hose F
(30) Evaporation hose G

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 7.4 (0.75, 5.4)
T3: 33 (3.4, 24.3)

5. FUEL LINE

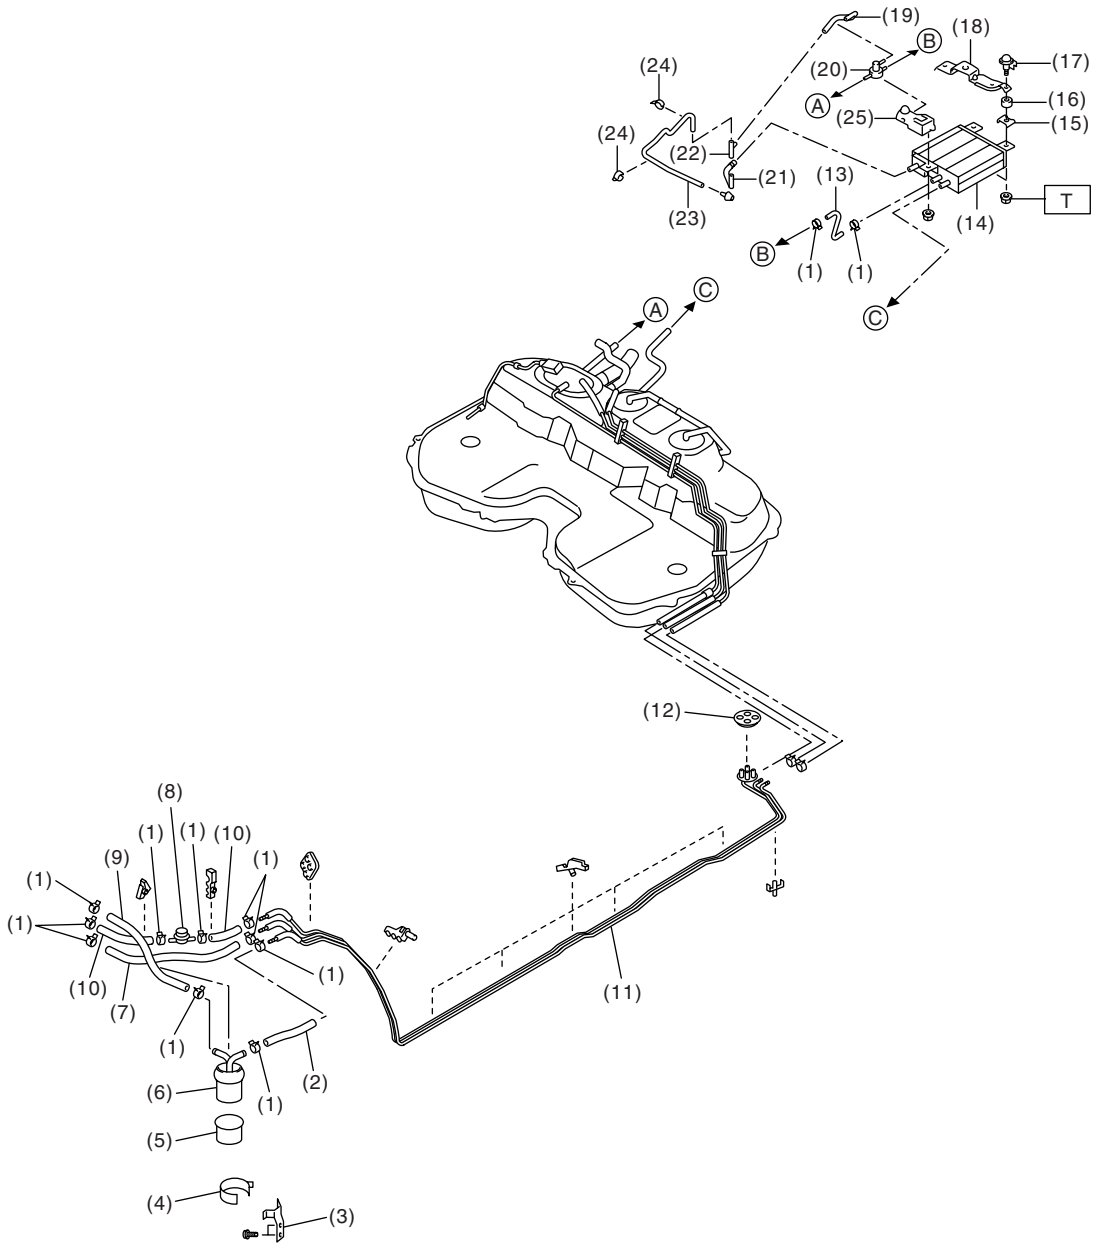

FU-00516

(1) Clip
(2) Fuel delivery hose A
(3) Fuel filter bracket
(4) Fuel filter holder
(5) Fuel filter cup
(6) Fuel filter
(7) Evaporation hose
(8) Fuel damper
(9) Fuel delivery hose B
(10) Fuel return hose
(11) Fuel pipe ASSY
(12) Grommet
(13) Canister hose A
(14) Canister
(15) Canister bracket plate
(16) Cushion
(17) Canister bracket spacer
(18) Rear canister bracket
(19) Two-way valve return hose
(20) Two-way valve
(21) Two-way valve drain hose A
(22) Connector
(23) Two-way valve drain hose B
(24) Clamp
(25) Front canister bracket

Tightening torque: N·m (kgf-m, ft-lb)
T: 23 (2.3, 17.0)

6. FUEL FILLER PIPE

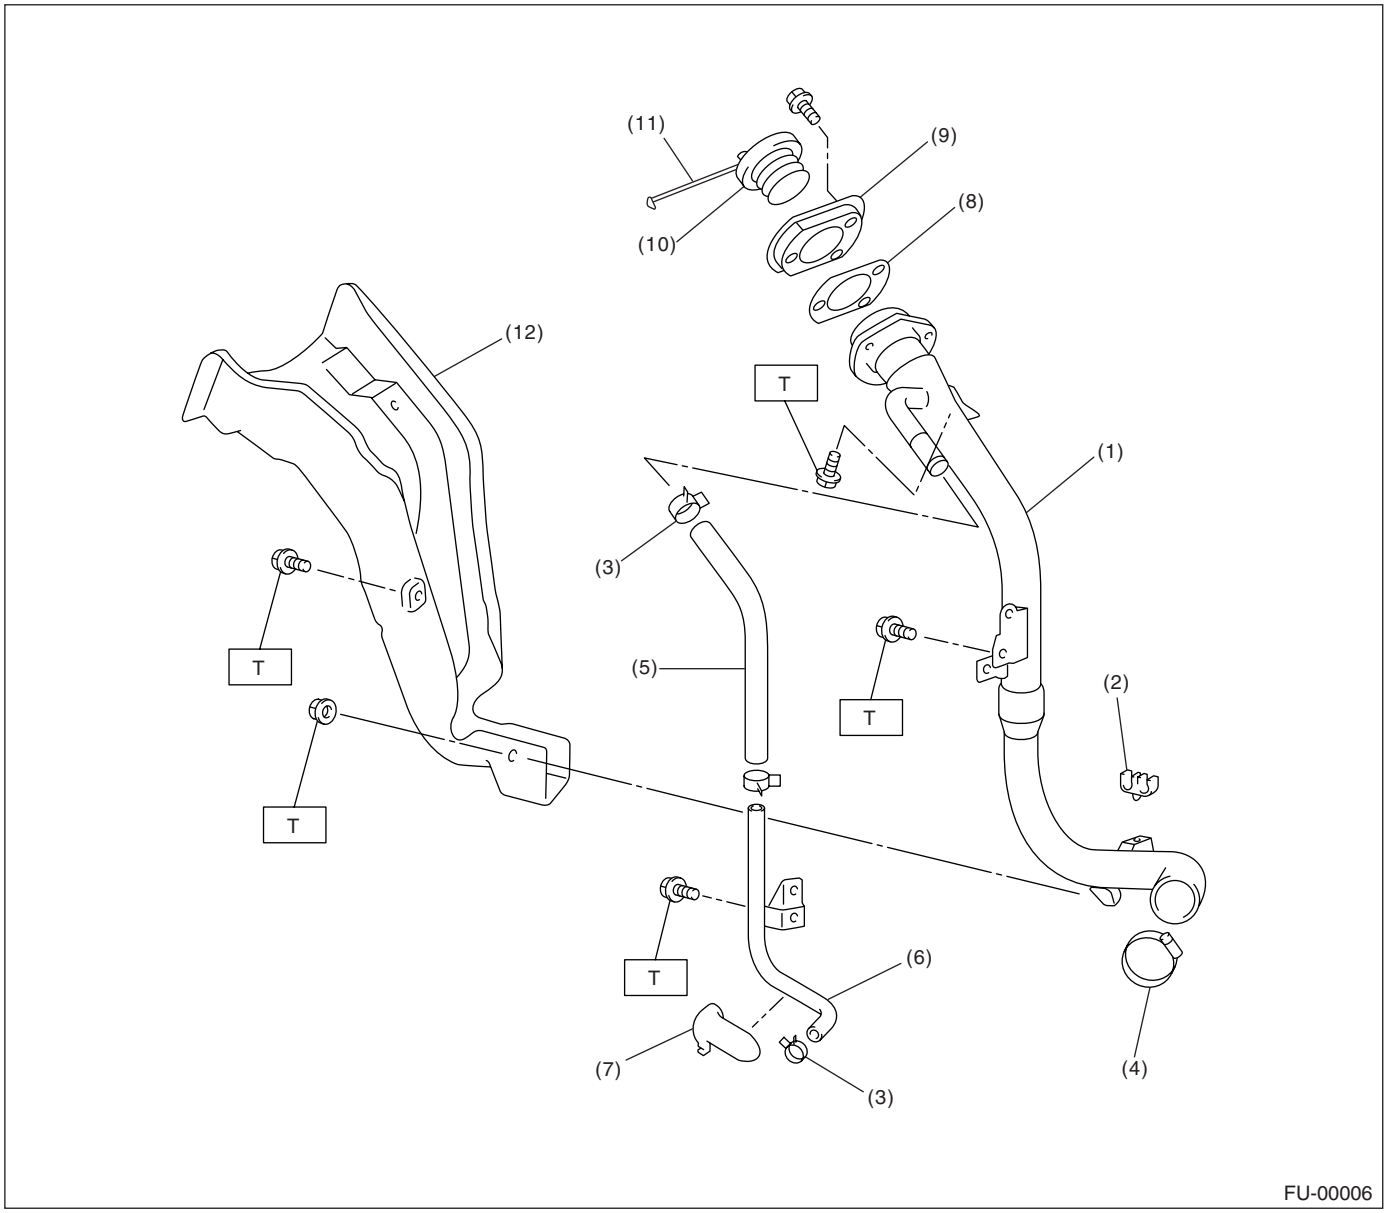

(1) Fuel filler pipe ASSY
(2) Evaporation hose holder
(3) Clip
(4) Clamp
(5) Air vent hose
(6) Air vent pipe
(7) Air vent pipe holder
(8) Filler pipe packing
(9) Filler ring
(10) Filler cap
(11) Filler cap tether
(12) Filler pipe protector

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
• Place “NO FIRE” signs near the working area.
• Be careful not to spill fuel on the floor.

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
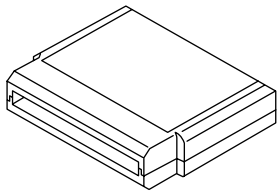 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical system.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. Throttle Body

A: REMOVAL

1) Disconnect the ground cable from battery.

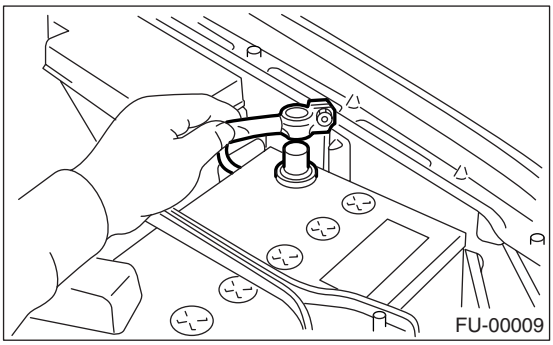

2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>

3) Disconnect the connector from the throttle position sensor (A) and idle air control solenoid valve (B) and manifold absolute pressure sensor (C).

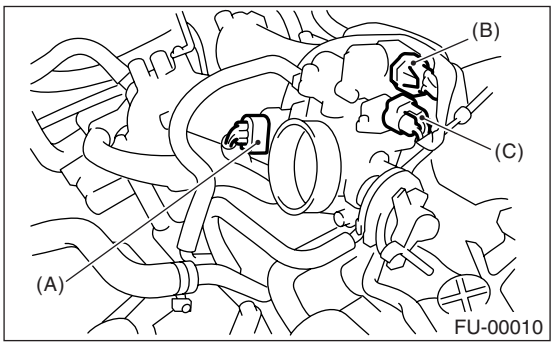

4) Disconnect the accelerator cable.

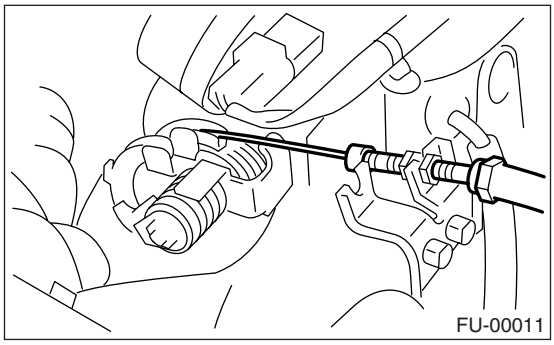

5) Disconnect the engine coolant hoses from throttle body.

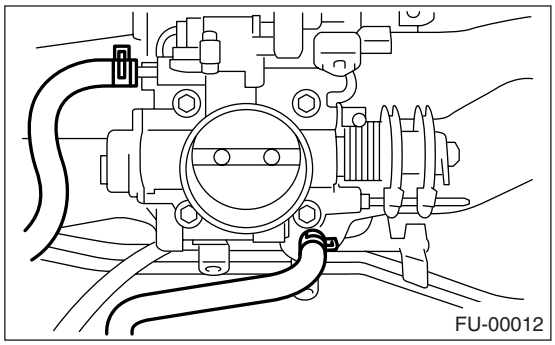

6) Remove the bolts which secure the throttle body to intake manifold.

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
Always use a new gasket.

Tightening torque:
22 N·m (2.2 kgf-m, 16.2 ft-lb)

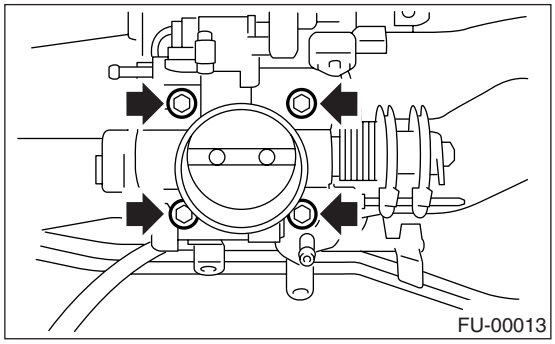

2) Adjust the accelerator cable play. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>

3. Intake Manifold

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

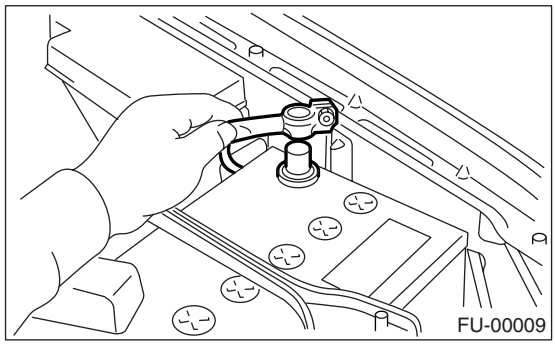

4) Lift-up the vehicle.
5) Remove the under cover.
6) Drain the coolant about 3.0 ℓ (3.2 US qt, 2.6 Imp qt).

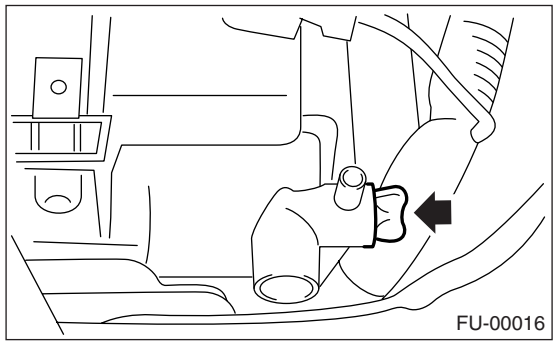

7) Remove the air cleaner upper cover and air intake boot. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
8) Remove the air cleaner element.
9) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
10) Disconnect the accelerator cable.

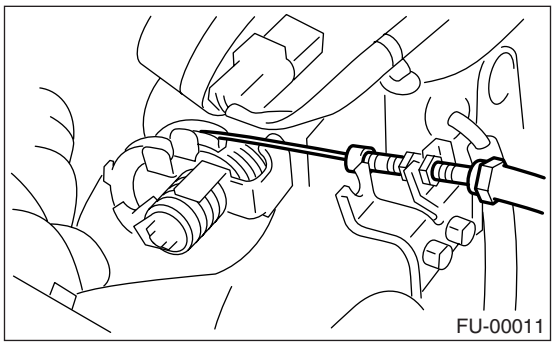

11) Remove the coolant filler tank. <Ref. to CO(H4DOTC)-33, REMOVAL, Coolant Filler Tank.>
12) Remove the power steering pump.
(1) Remove the front side V-belt.
<Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
(2) Disconnect the power steering switch connector.

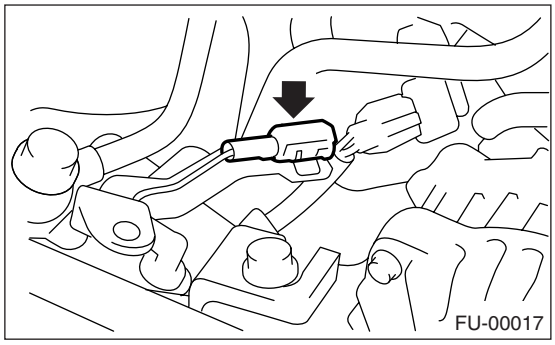

(3) Remove the bolts which secure the power steering pipe brackets to intake manifold.

NOTE:
Do not disconnect the power steering hose.

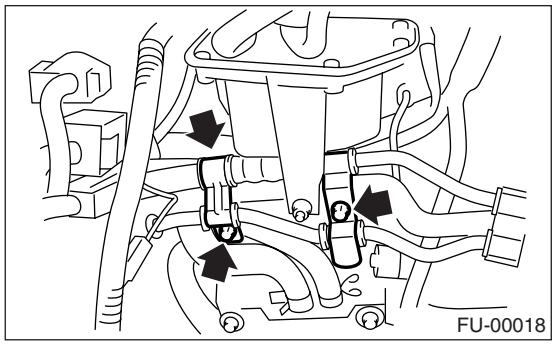

(4) Remove the bolts which secure the power steering pump bracket.

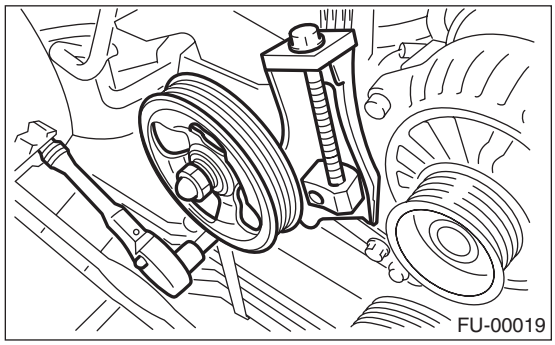

(5) Remove the power steering tank from the bracket by pulling it upward.

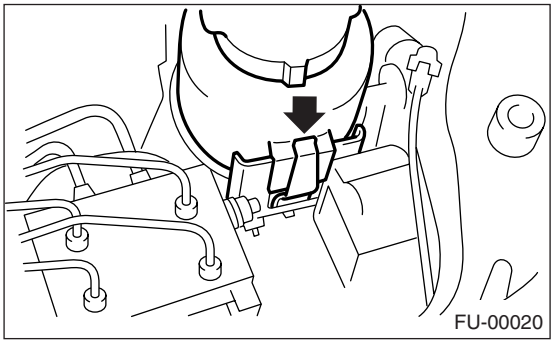

(6) Place the power steering pump on right side wheel apron.

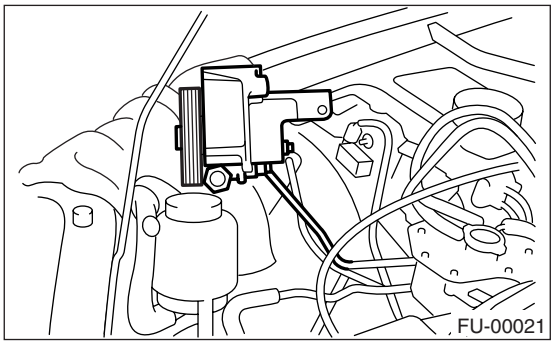

13) Disconnect the emission hose from PCV valve.

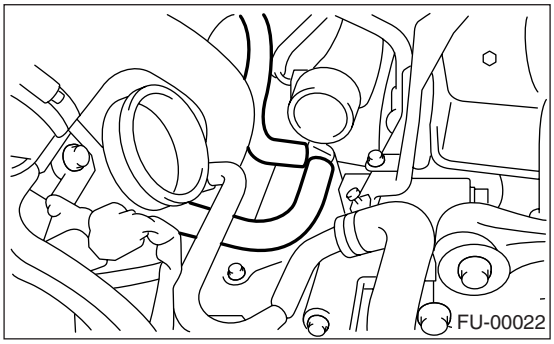

14) Disconnect the engine coolant hoses from throttle body.

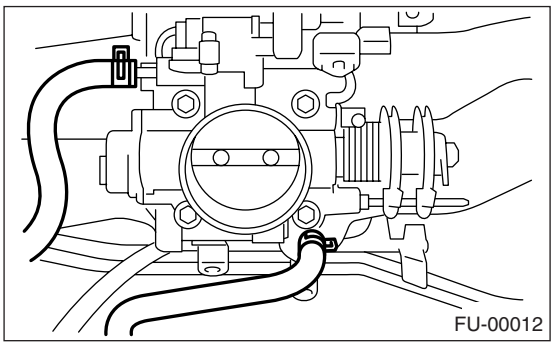

15) Disconnect the brake booster hose.

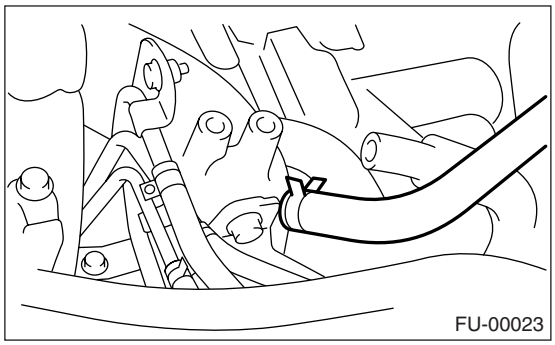

16) Disconnect the pressure hose from intake duct.

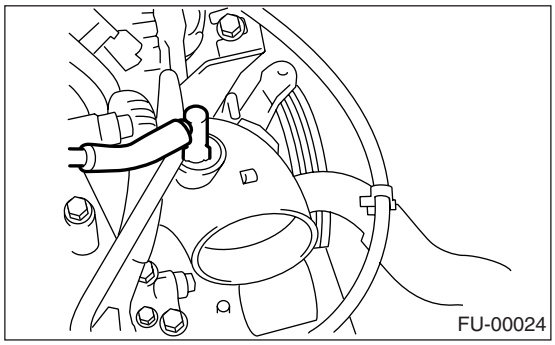

17) Disconnect the engine harness connectors from bulkhead harness connectors.

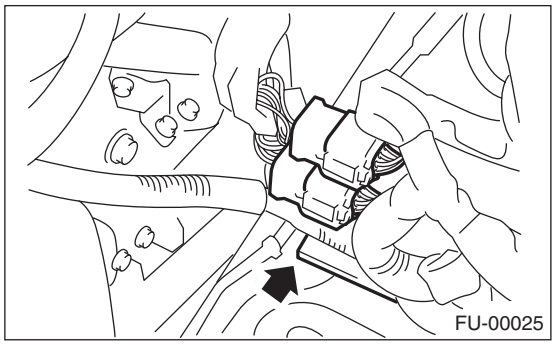

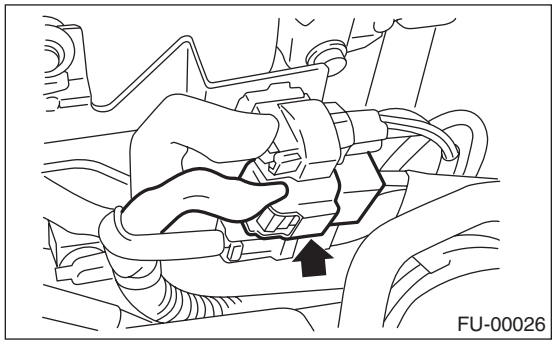

18) Disconnect the connectors from the engine coolant temperature sensor (A), oil pressure switch (B) and crankshaft position sensor (C).

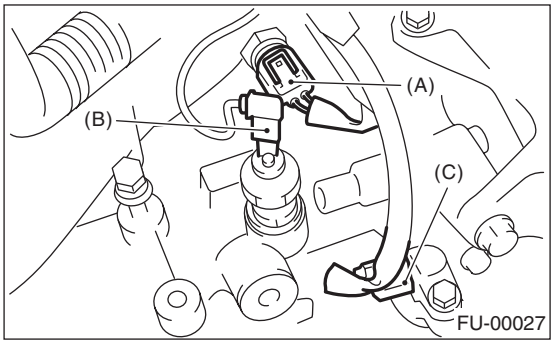

19) Disconnect the knock sensor connector.

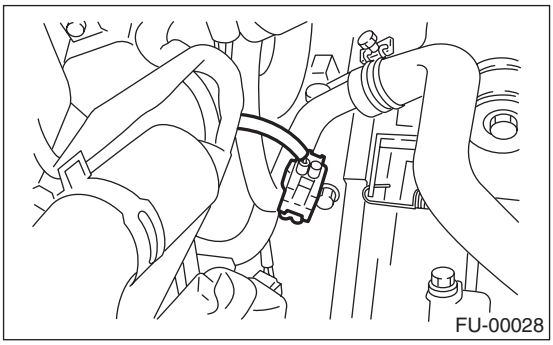

20) Disconnect the connector from crankshaft position sensor.

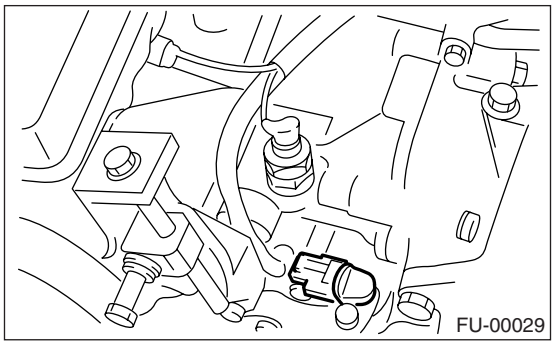

21) Disconnect the connector from camshaft position sensor.

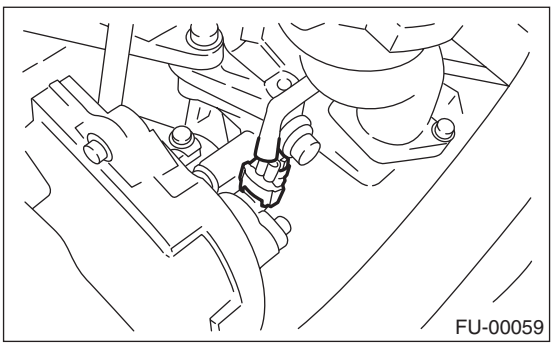

22) Disconnect the connector from ignition coil.

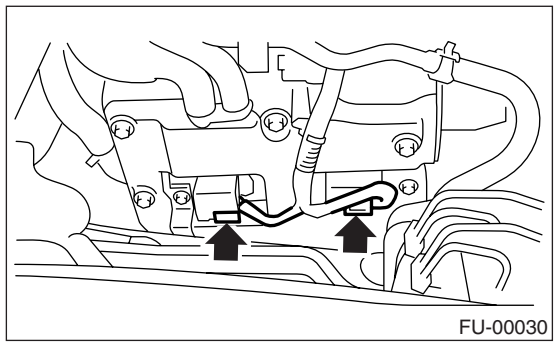

23) Disconnect the engine harness fixed by clip (A) from bracket.

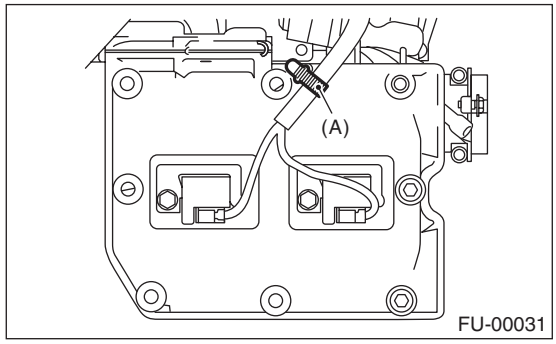

24) Disconnect the fuel delivery hose, return hose and evaporation hose.

CAUTION:
- **Do not spill fuel.**
- **Catch the fuel from hoses in a container or cloth.**

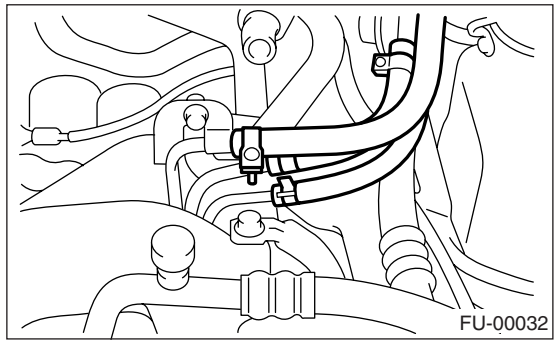

25) Remove the bolts which secure the intake manifold to cylinder heads.

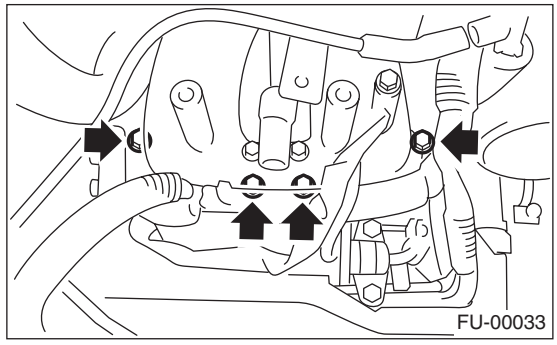

26) Remove the intake manifold.

B: INSTALLATION

1) Install the intake manifold onto cylinder heads.

NOTE:
Always use new gaskets.

Tightening torque:
25 N·m (2.5 kgf-m, 18.4 ft-lb)

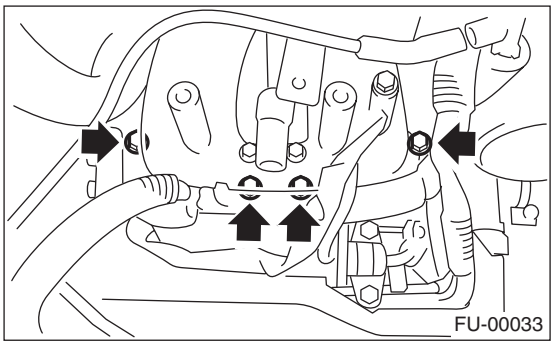

2) Connect the fuel delivery hose, return hose and evaporation hose.

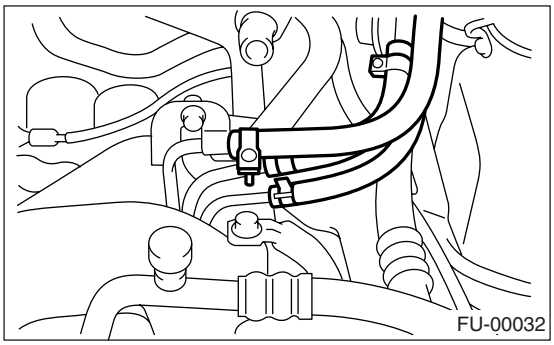

3) Connect the connector to the oil pressure switch (B), crankshaft position sensor (C) and engine coolant temperature sensor (A).

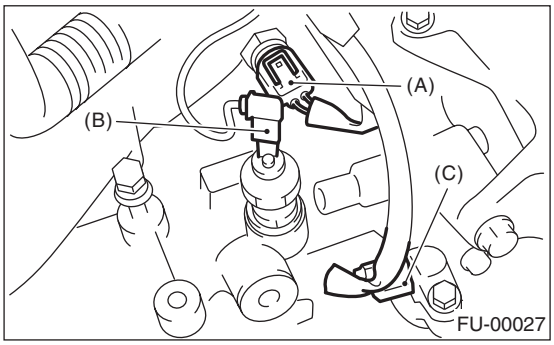

4) Connect the connector to knock sensor.

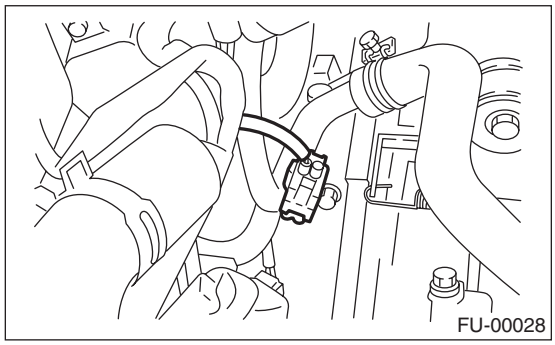

5) Connect the connector to crankshaft position sensor.

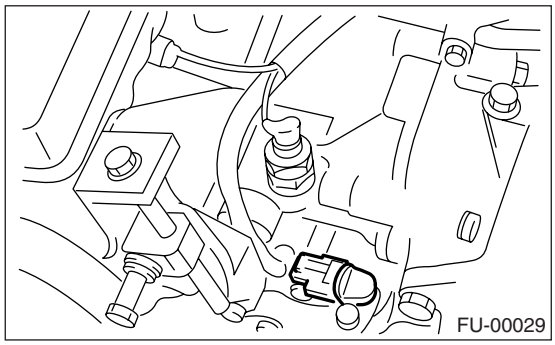

6) Connect the connector to camshaft position sensor.

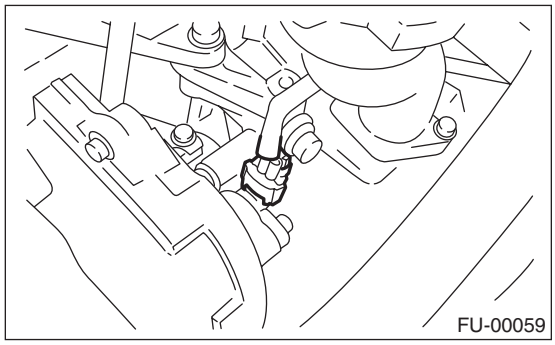

7) Connect the connector to ignition coil.

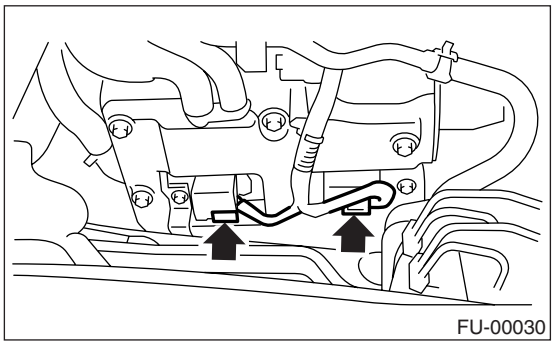

8) Connect the engine harness with clip (A) to the bracket.

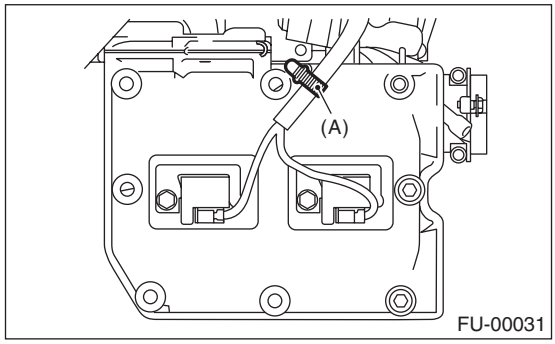

9) Connect the engine harness connector to bulkhead harness connectors.

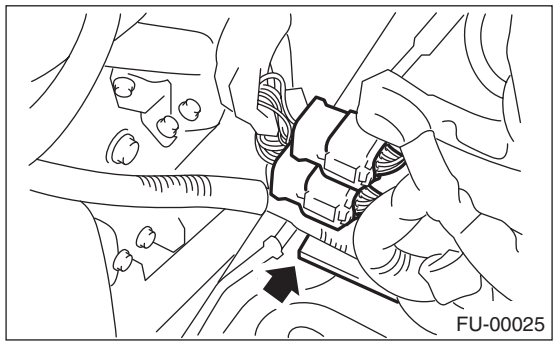

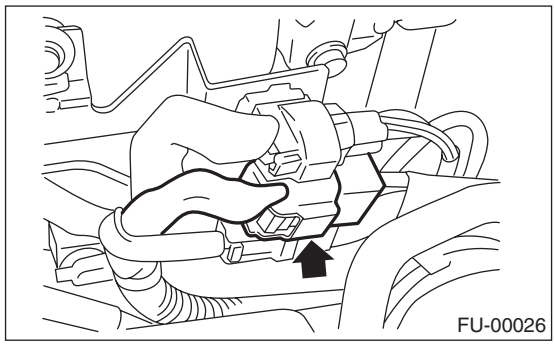

10) Connect the brake booster vacuum hose.

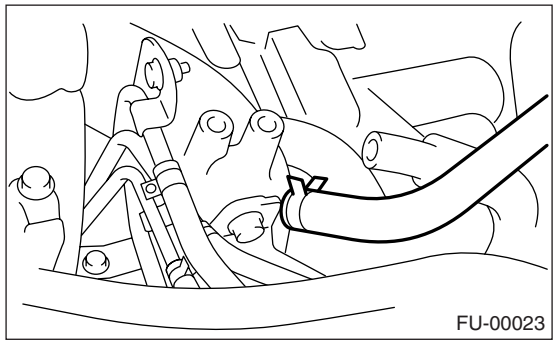

11) Connect the engine coolant hoses to throttle body.

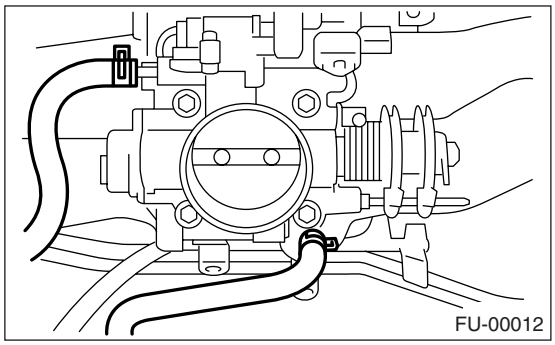

12) Connect the emission hose to PCV valve.

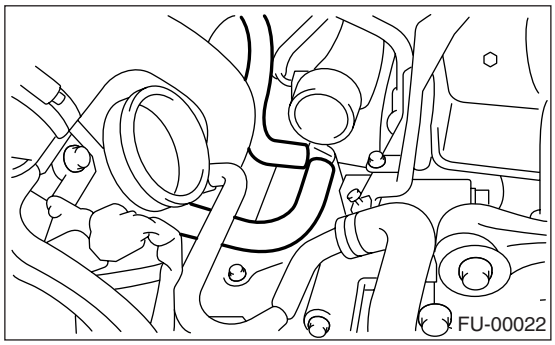

13) Connect the pressure hose to intake duct.

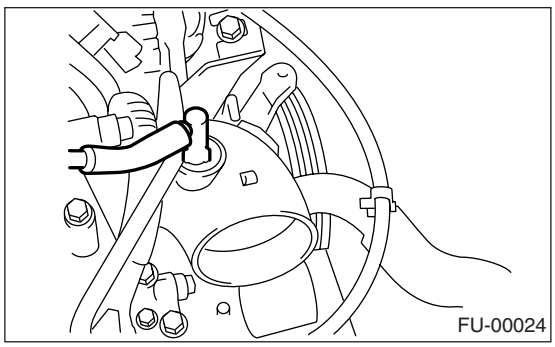

14) Install the power steering pump.
(1) Install the power steering tank on bracket.

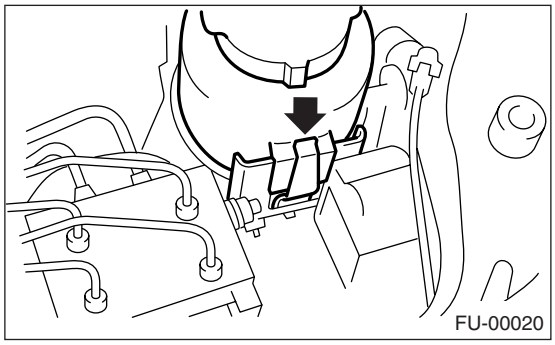

(2) Connect the connector to the power steering pump switch.

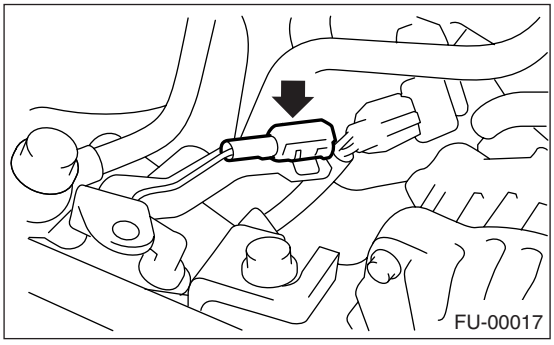

(3) Install the power steering pump, and then tighten the bolts.

Tightening torque:
22 N·m (2.2 kgf-m, 16.2 ft-lb)

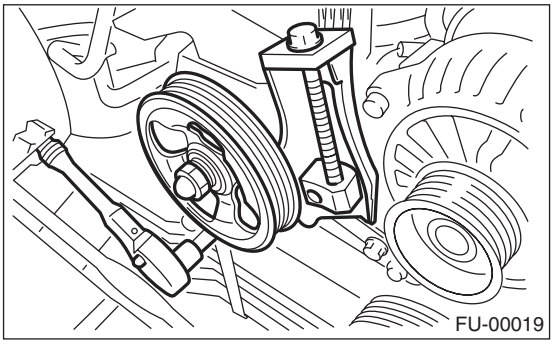

(4) Install the power steering pipe brackets on right side intake manifold.

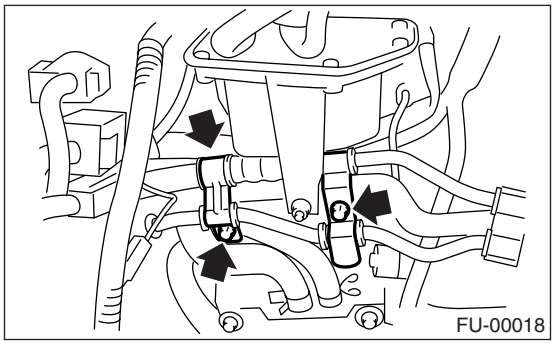

(5) Install the front side V-belt.
<Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
15) Install the coolant filler tank. <Ref. to CO(H4DOTC)-33, INSTALLATION, Coolant Filler Tank.>
16) Connect the accelerator cable. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>

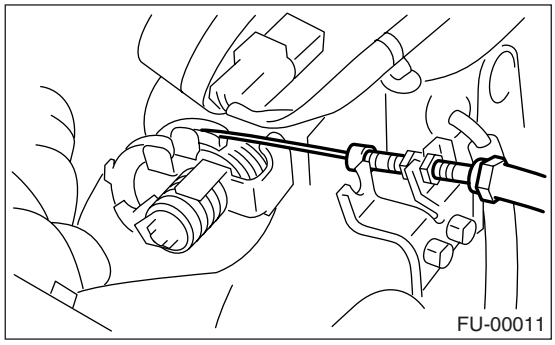

17) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
18) Install the air cleaner element.
19) Install the air cleaner upper cover and air intake duct as a unit. <Ref. to IN(H4DOTC)-8, INSTALLATION, Air Cleaner.>
20) Connect the connector to the fuel pump relay.

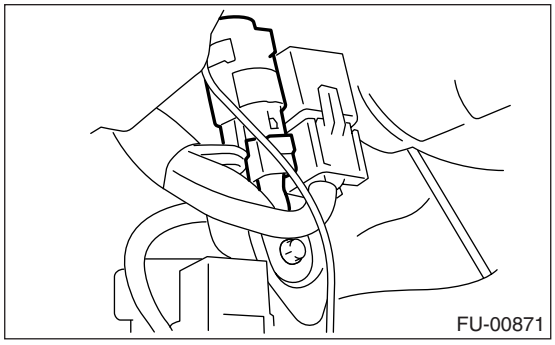

21) Connect the battery ground cable to battery.

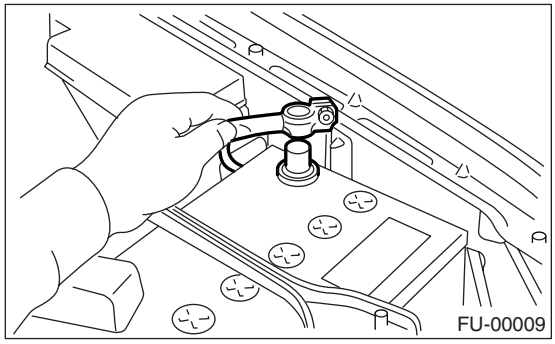

22) Lift-up the vehicle.
23) Install the under cover.
24) Fill the coolant. <Ref. to CO(H4DOTC)-17, FILLING OF ENGINE COOLANT, Engine Coolant.>

C: DISASSEMBLY

1) Remove the fuel pipe protector LH.

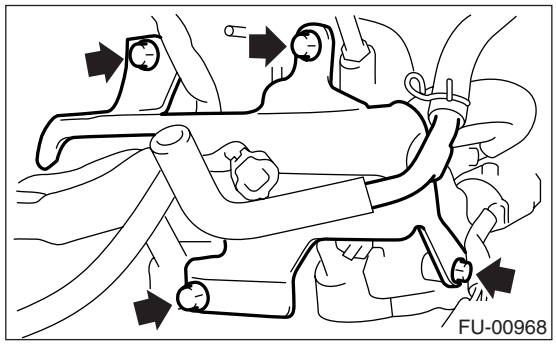

2) Remove the fuel pipe protector RH.

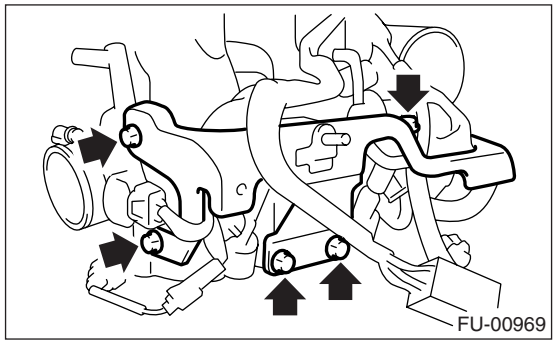

3) Remove the engine ground cable from intake manifold.

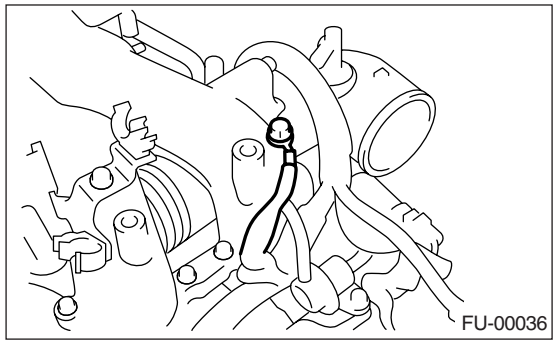

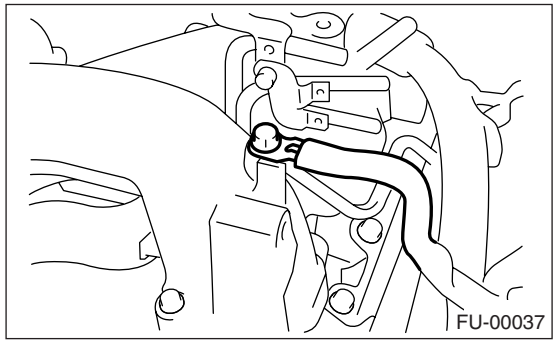

4) Disconnect the connector from the throttle position sensor (A), idle air control solenoid valve (B) and manifold absolute pressure sensor (C).

5) Disconnect the engine harness fixed by clip (D) from intake manifold.

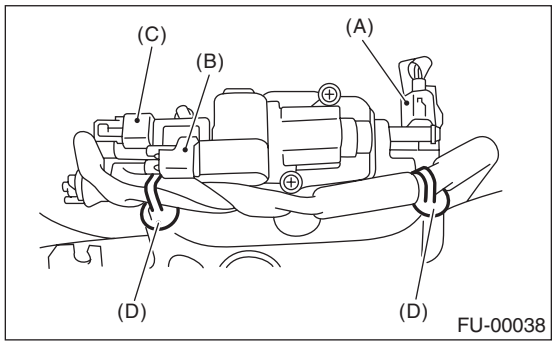

6) Remove the throttle body from intake manifold.

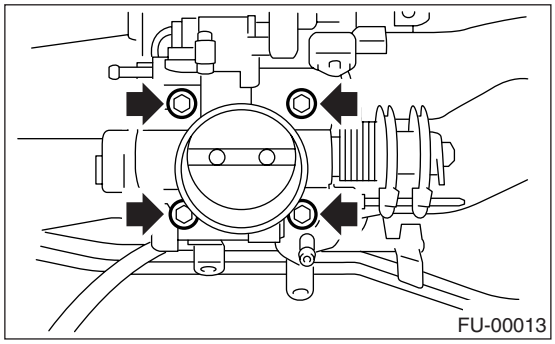

7) Disconnect the connector from fuel injector.

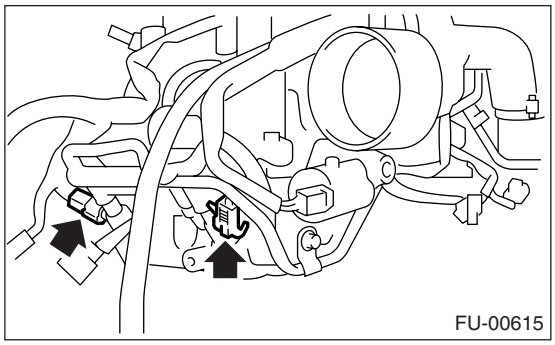

8) Disconnect the connector from tumble generator valve actuator. (Except STi model)

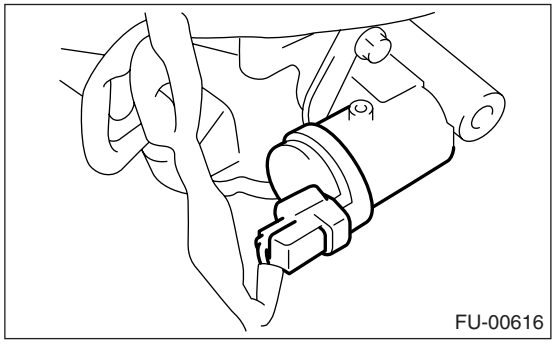

9) Disconnect the connector from tumble generator valve sensor. (Except STi model)

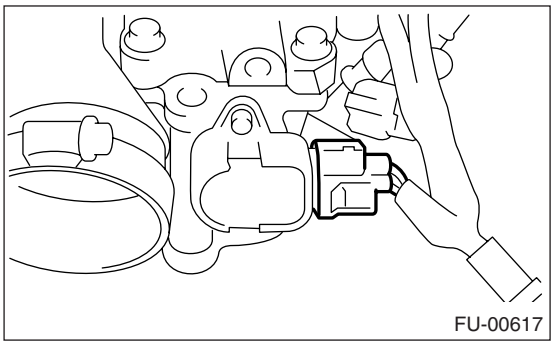

10) Disconnect the connector from purge control solenoid valve.

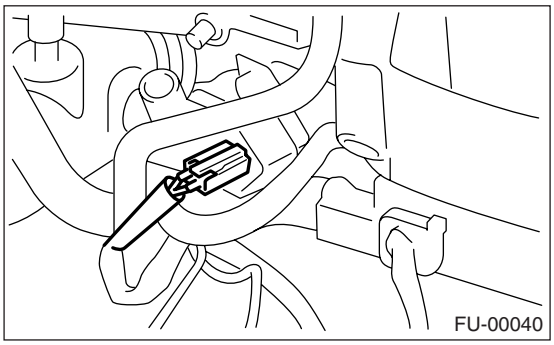

11) Remove the purge control solenoid valve.

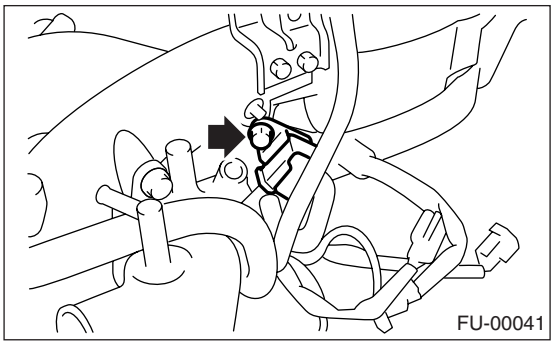

12) Disconnect the evaporation hose from intake manifold.

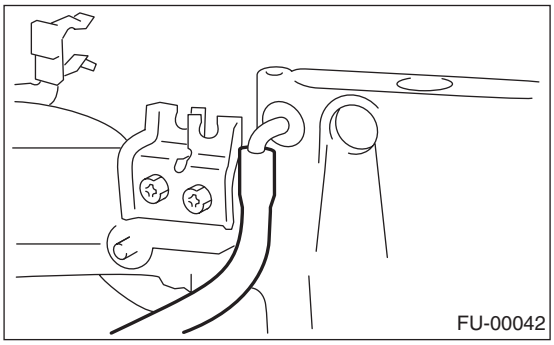

13) Disconnect the evaporation hose from purge valve. (Except Australia model)

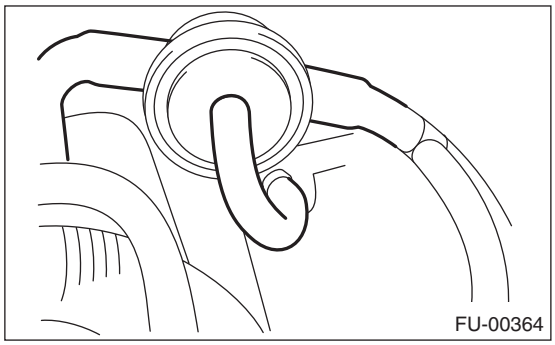

14) Remove the two bolts which hold the fuel pipes on the left side of intake manifold.

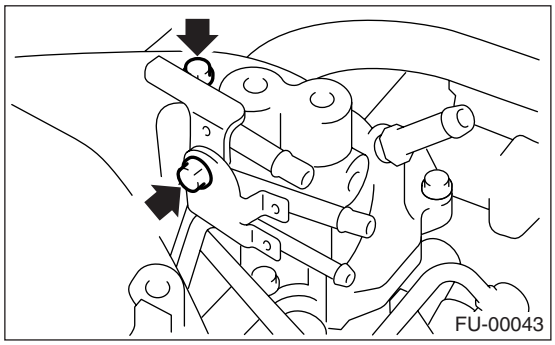

15) Remove the bolts which hold the fuel injector pipe onto intake manifold.
- LH SIDE

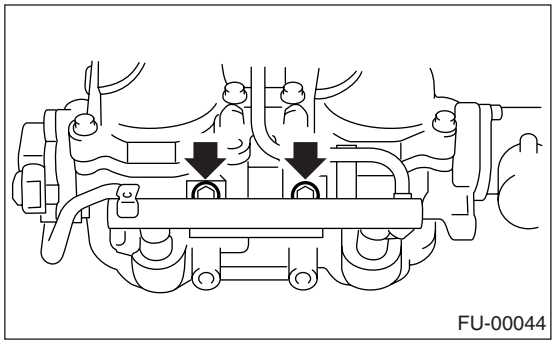

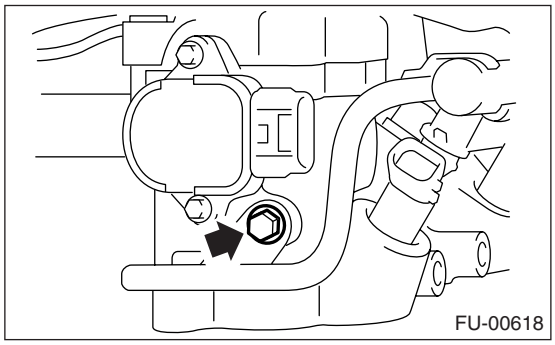

- RH SIDE

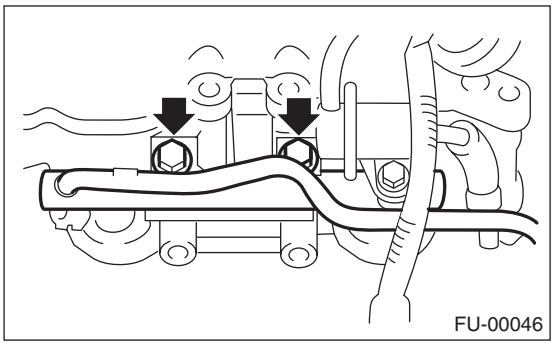

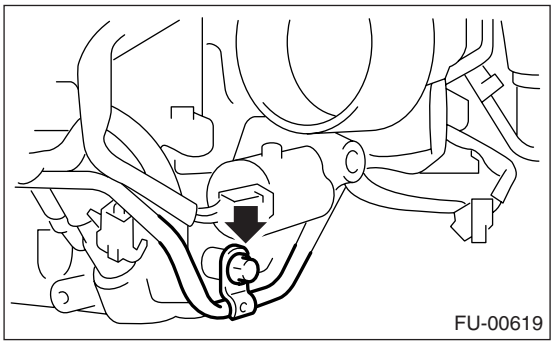

16) Remove the fuel injector.

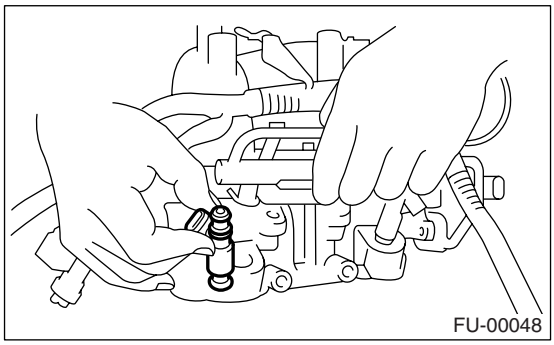

17) Remove the harness bracket which holds the engine harness onto intake manifold.

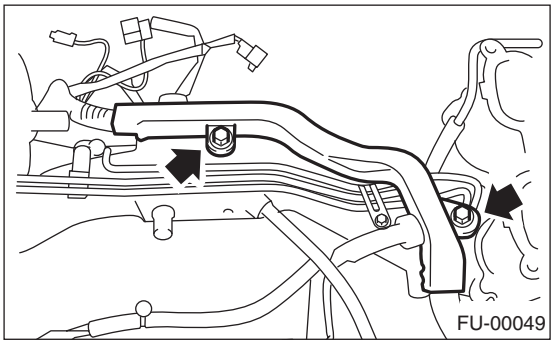

18) Remove the engine harness from intake manifold.

19) Loosen the clamp which holds the front left side fuel hose to injector pipe, and remove the pipe from clamp.

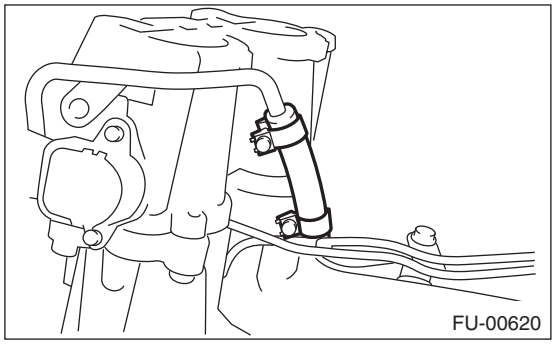

20) Remove the fuel injector pipe LH.
21) Remove the bolts which install the fuel pipe on intake manifold.

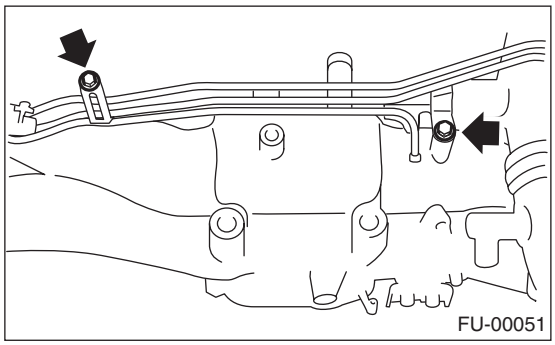

22) Remove the fuel pipe assembly and pressure regulator from intake manifold.
23) Remove the intake duct from intake manifold.

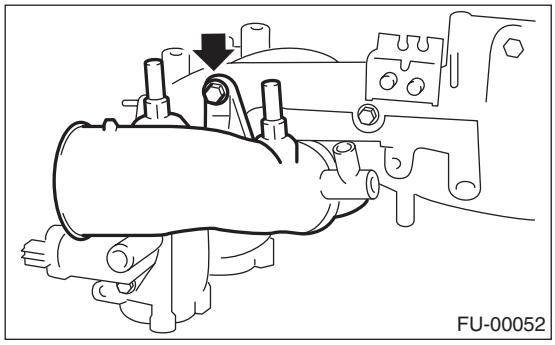

24) Remove the intake manifold.

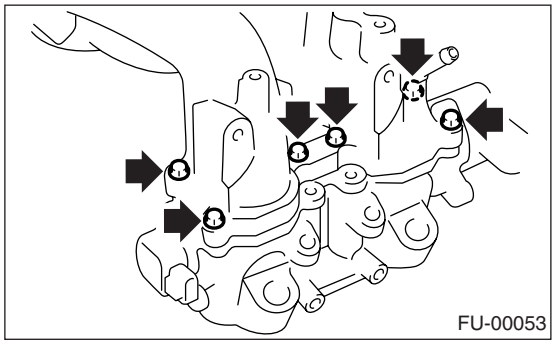

D: ASSEMBLY

NOTE:
Replace the gasket with a new one.

1) Install the intake manifold.

Tightening torque:
8.25 N·m (0.84 kgf-m, 6.1 ft-lb)

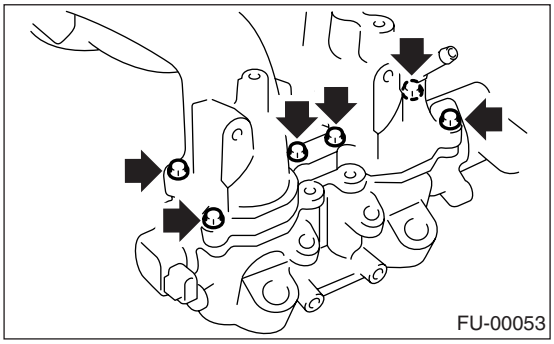

2) Install the air intake duct to intake manifold.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

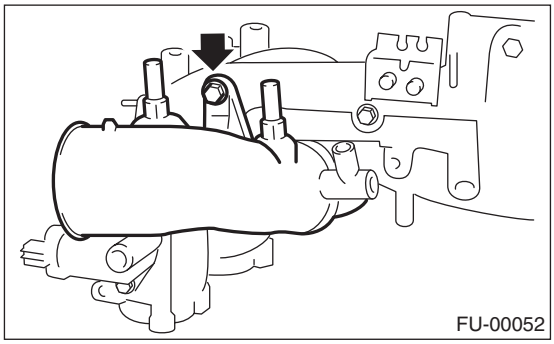

3) Install the fuel pipe assembly and pressure regulator to intake manifold.

Tightening torque:
4.9 N·m (0.5 kgf-m, 3.6 ft-lb)

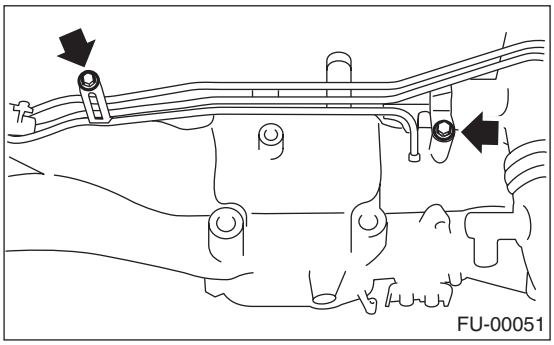

4) Install the fuel injector pipe LH.

5) Connect the left side fuel hose to injector pipe, and tighten the clamp screw.

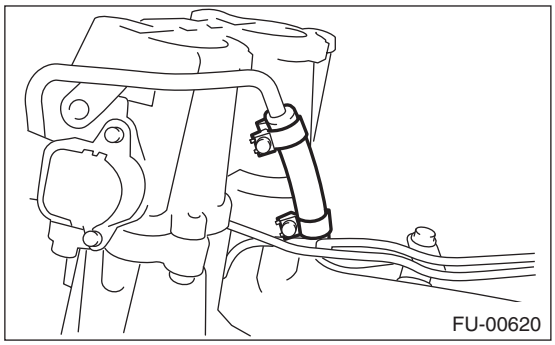

6) Install the engine harness to intake manifold.
7) Install the harness bracket which holds the engine harness onto intake manifold.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

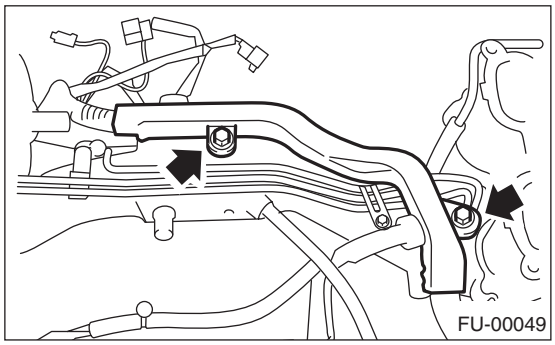

8) Install the fuel injector.

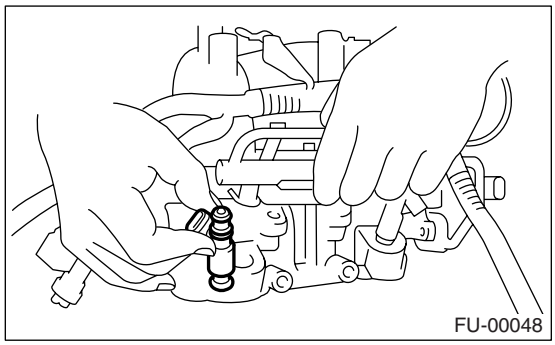

9) Tighten the bolts which install the fuel injector pipe onto intake manifold.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

- LH SIDE

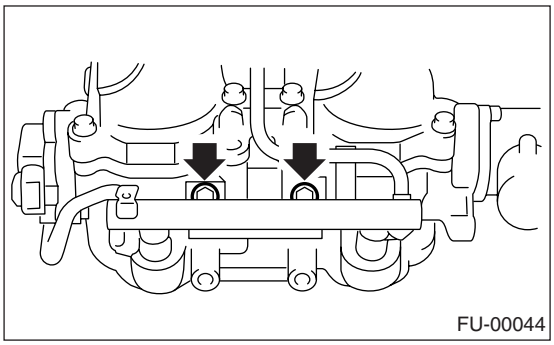

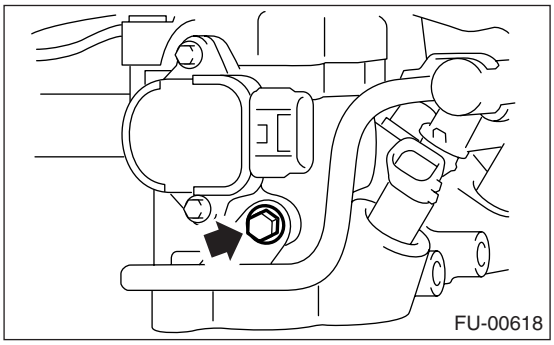

- RH SIDE

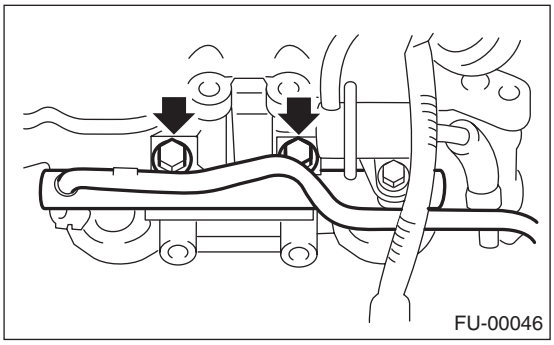

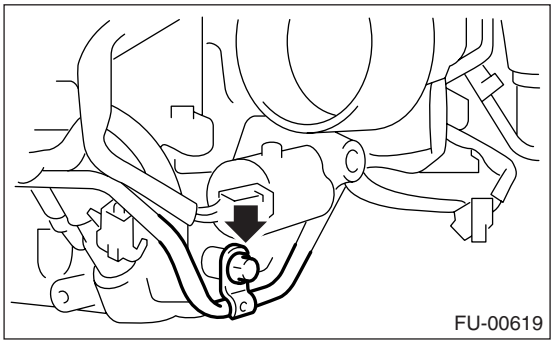

10) Tighten the two bolts which install the fuel pipes on the left side of intake manifold.

Tightening torque:
4.9 N·m (0.5 kgf-m, 3.6 ft-lb)

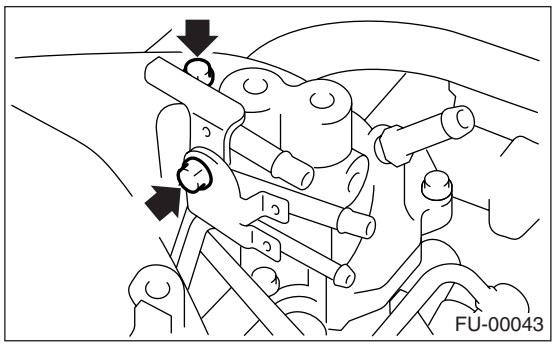

11) Connect the evaporation hoses to the purge valve. (Except Australia model)

NOTE:
Connect the evaporation hose as shown in the figure.

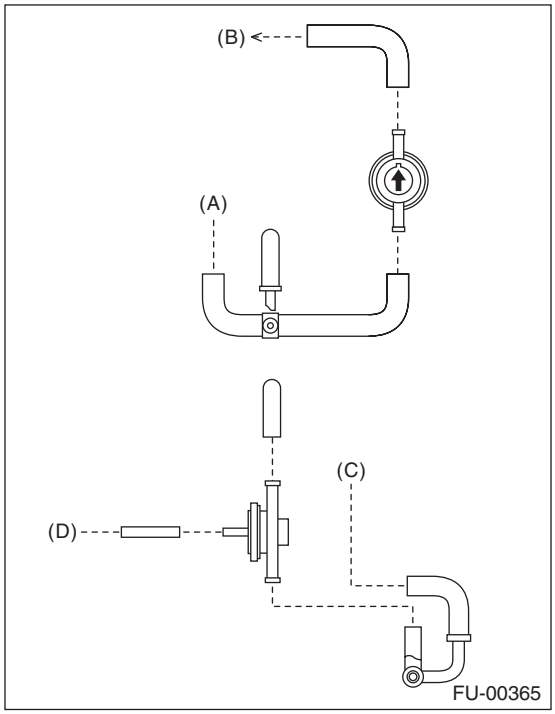

(A) To fuel pipe ASSY
(B) To intake duct
(C) To purge control solenoid valve
(D) To intake manifold

12) Connect the evaporation hose to intake manifold.

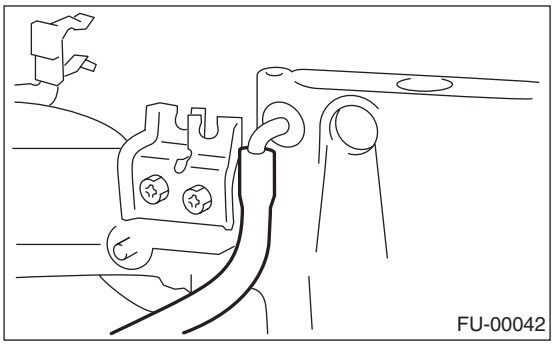

13) Install the purge control solenoid valve.

Tightening torque:
16 N·m (1.6 kgf-m, 11.8 ft-lb)

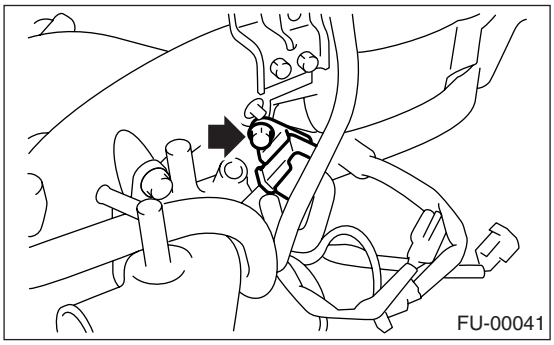

14) Connect the hoses to the purge control solenoid valve.

NOTE:
Connect the evaporation hose as shown in the figure.

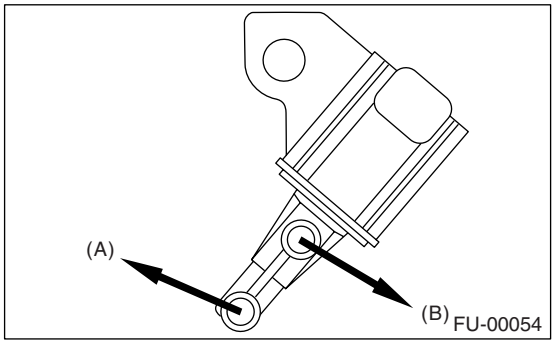

(A) To intake manifold
(B) To fuel pipe (Australia model)
To purge valve (Except STi model)

15) Connect the connector to the purge control solenoid valve.

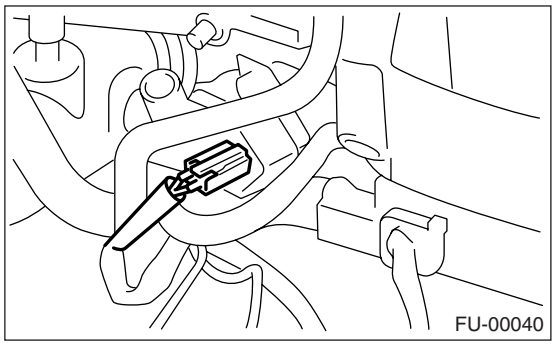

16) Connect the connector to the tumble generator valve sensor. (Except STi model)

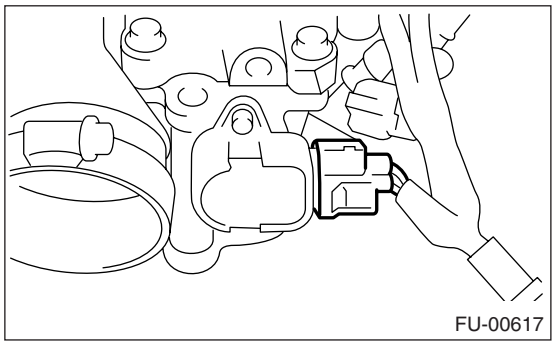

17) Connect the connector to the tumble generator valve actuator. (Except STi model)

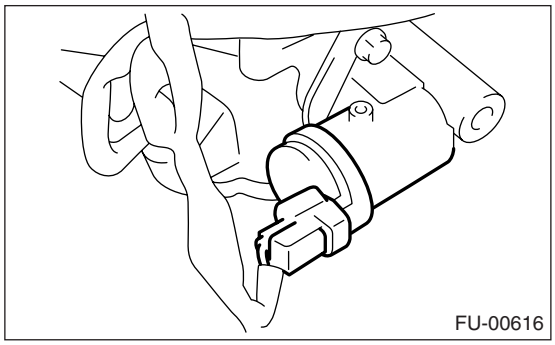

18) Connect the connector to fuel injector.

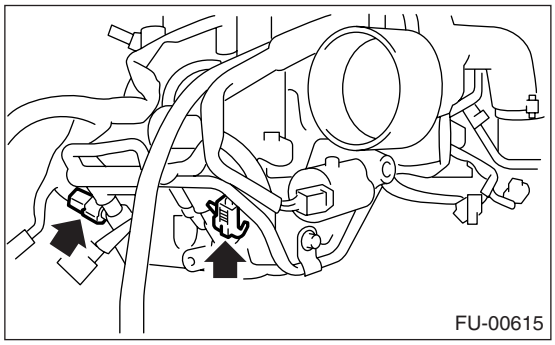

19) Install the throttle body to intake manifold.

NOTE:
Replace the gasket with a new one.

Tightening torque:
22 N·m (2.2 kgf-m, 16.2 ft-lb)

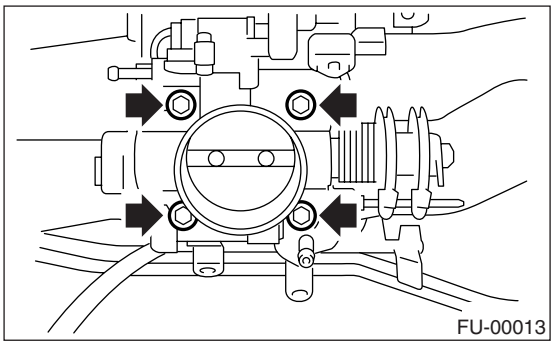

20) Connect the connector to the throttle position sensor (A), idle air control solenoid valve (B) and manifold absolute pressure sensor (C).
21) Connect the engine harness with clip (D) to intake manifold.

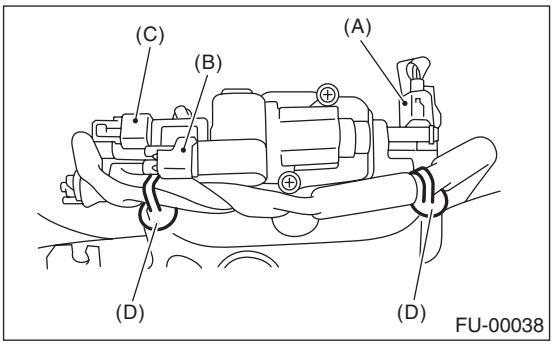

22) Install the engine ground cable to intake manifold.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

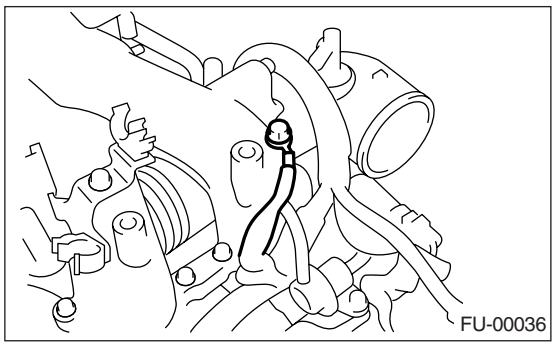

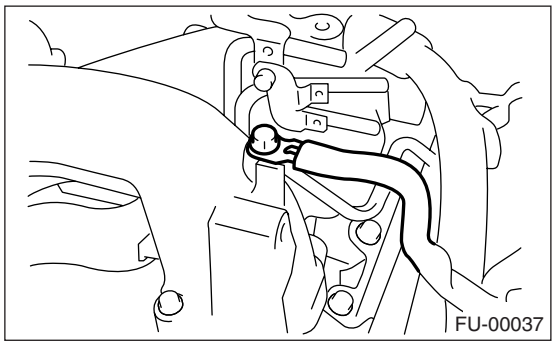

23) Install the fuel pipe protector RH.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

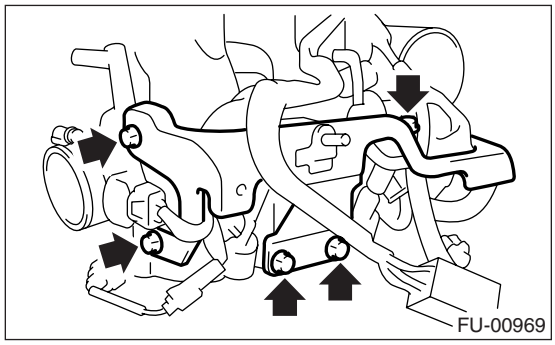

24) Install the fuel pipe protector LH.

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

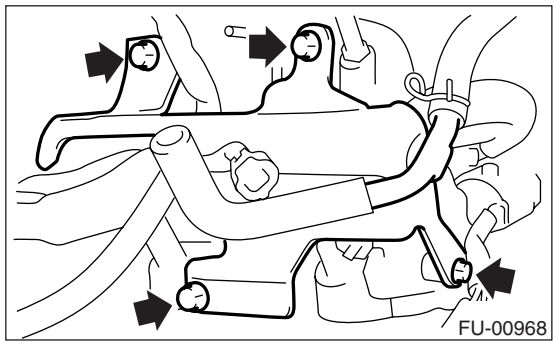

E: INSPECTION

Make sure the fuel pipe and fuel hoses are not cracked and the connections are tightened firmly.

4. Engine Coolant Temperature Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

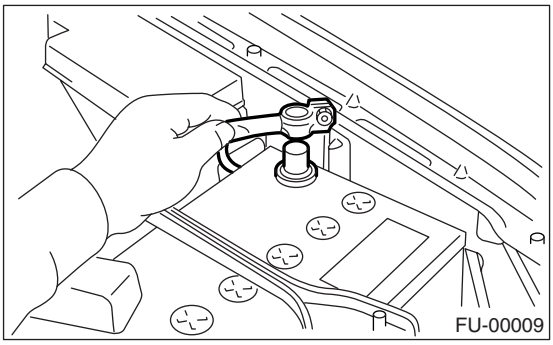

2) Remove the generator. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>
3) Drain the engine coolant. <Ref. to CO(H4DOTC)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
4) Disconnect the connector from engine coolant temperature sensor.

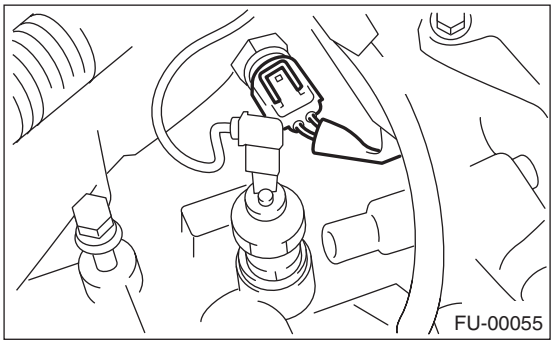

5) Remove the engine coolant temperature sensor.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
18 N·m (1.8 kgf-m, 13.3 ft-lb)

5. Crankshaft Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

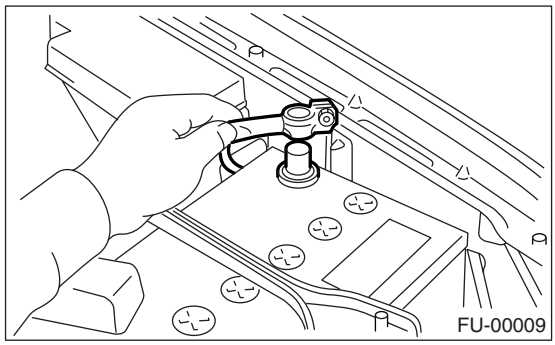

2) Remove the bolt which installs the crankshaft position sensor to cylinder block.

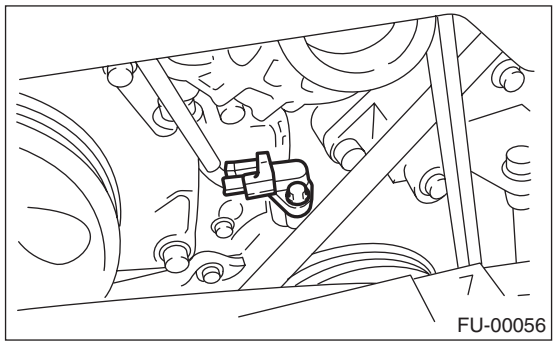

3) Remove the crankshaft position sensor, and disconnect the connector from it.

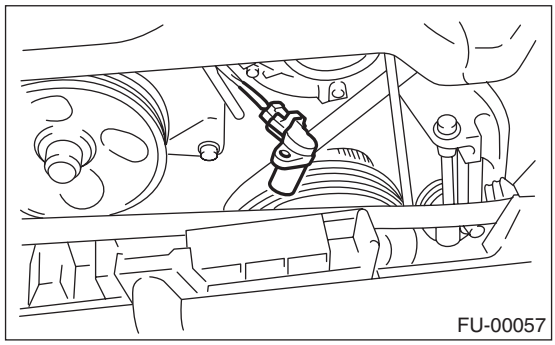

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

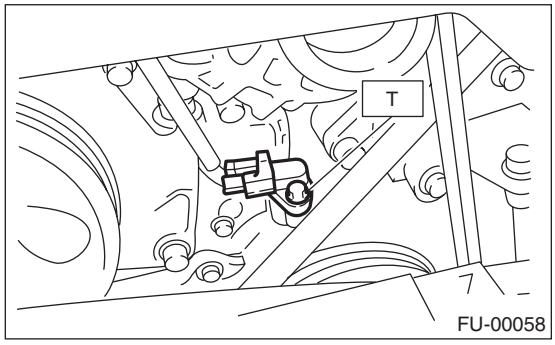

6. Camshaft Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

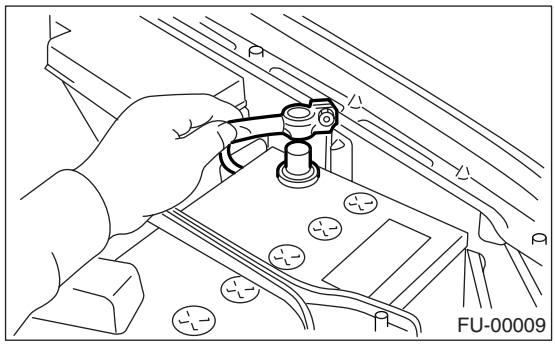

2) Disconnect the connector from camshaft position sensor.

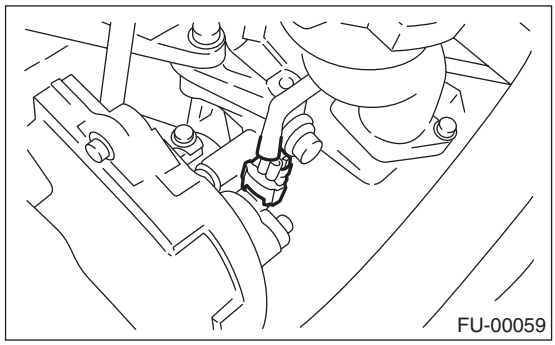

3) Remove the camshaft position sensor from camshaft support LH.

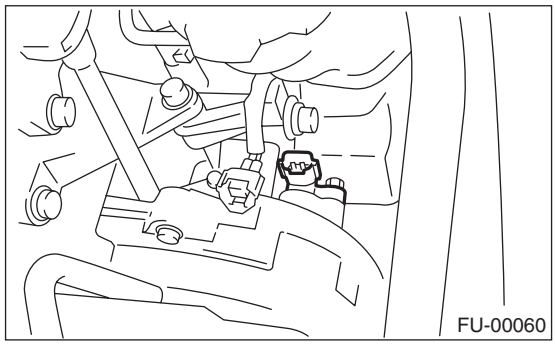

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

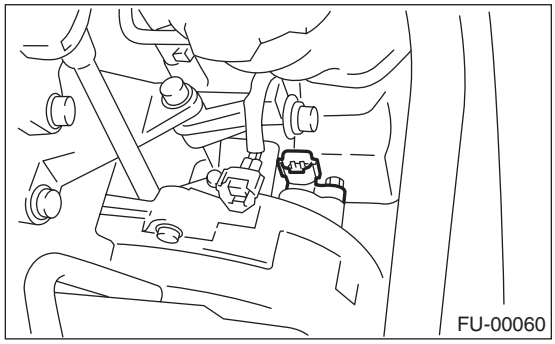

7. AVCS Camshaft Position Sensor

A: REMOVAL

NOTE:
This component is installed to STi and Australia model.

1) Disconnect the ground cable from battery.
2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
4) Disconnect the AVCS camshaft position sensor connector.
5) Remove the AVCS camshaft position sensor.

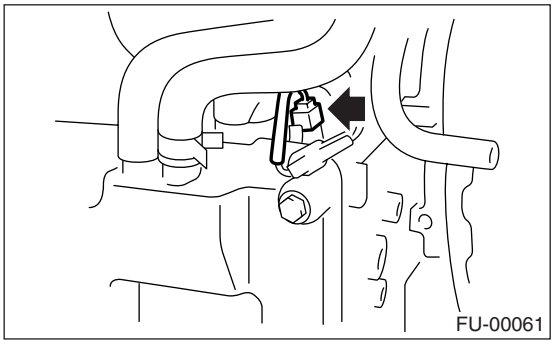

B: INSTALLATION

Install in the reverse order of removal.

8. Knock Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

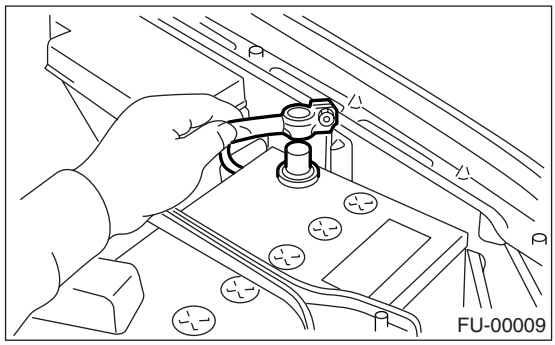

2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Disconnect the knock sensor connector.

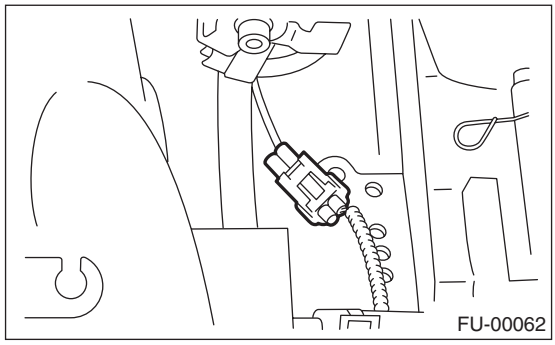

4) Remove the knock sensor from cylinder block.

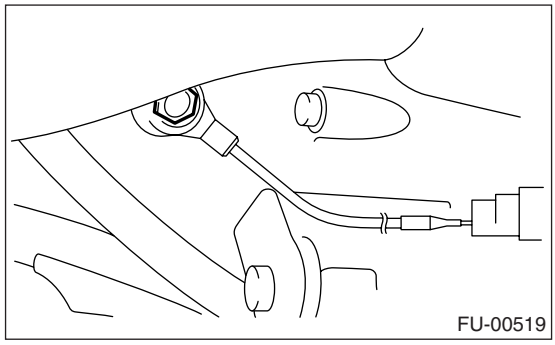

B: INSTALLATION

1) Install the knock sensor to cylinder block.

Tightening torque:
24 N·m (2.4 kgf-m, 17.4 ft-lb)

NOTE:
Extraction area of knock sensor cord must be positioned at a 60° angle relative to engine rear.

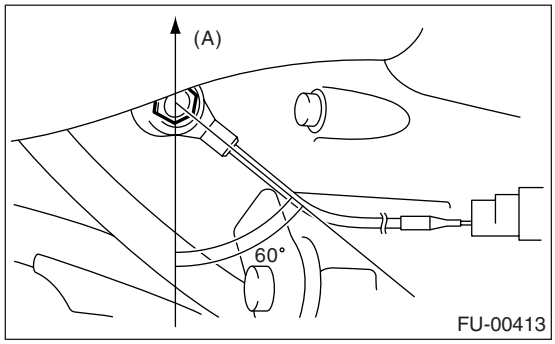

(A) Front side

2) Connect the knock sensor connector.

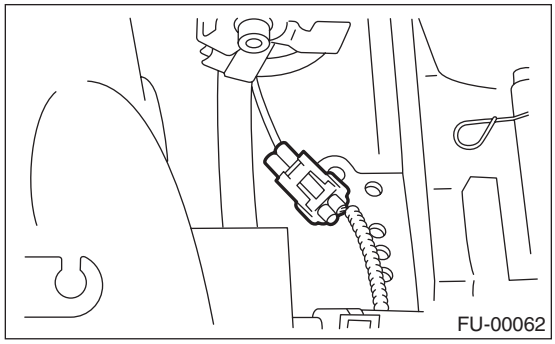

3) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
4) Connect the battery ground cable to battery.

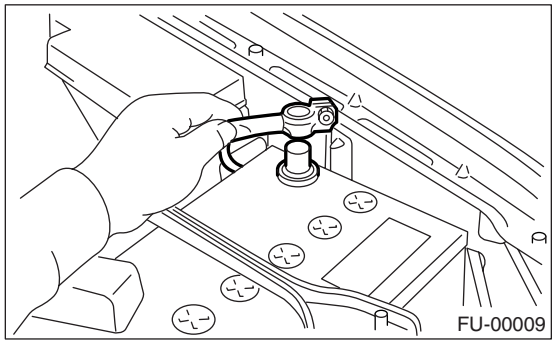

9. Throttle Position Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

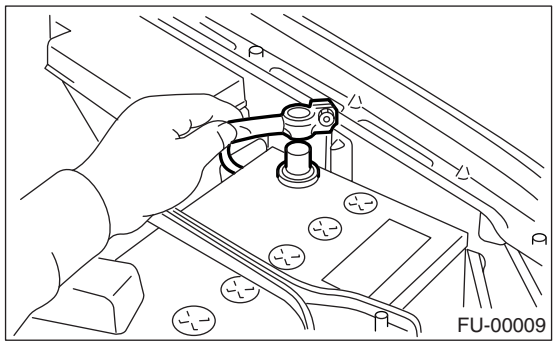

2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>

3) Disconnect the connector from throttle position sensor.

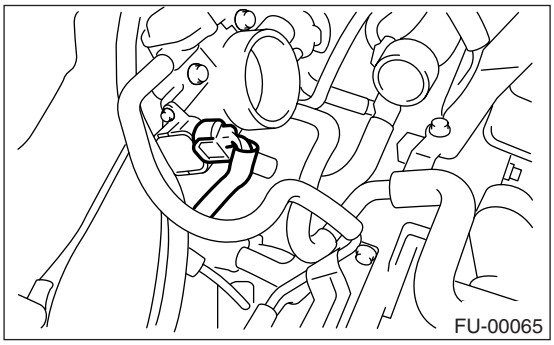

4) Remove the throttle position sensor holding screws, and remove it.

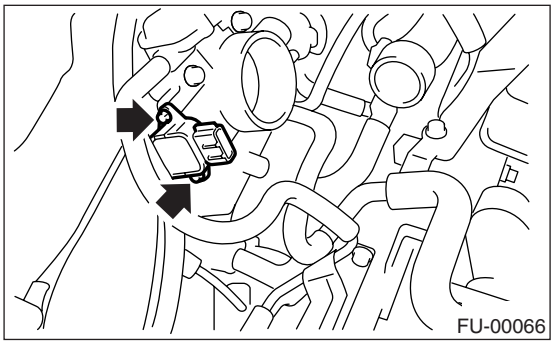

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

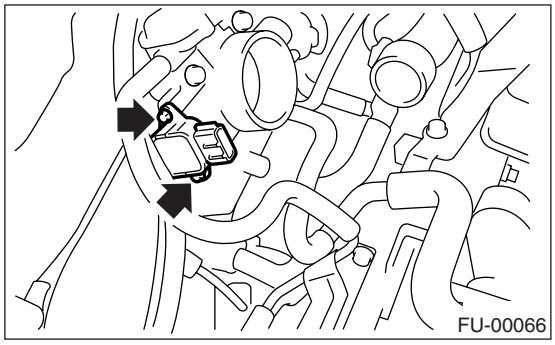

10.Mass Air Flow and Intake Air Temperature Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

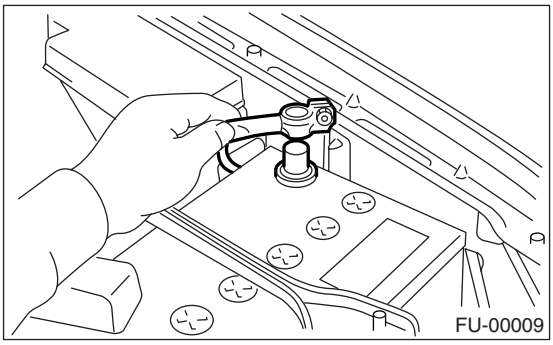

2) Disconnect the connector from mass air flow and intake air temperature sensor.
3) Remove the mass air flow and intake air temperature sensor.

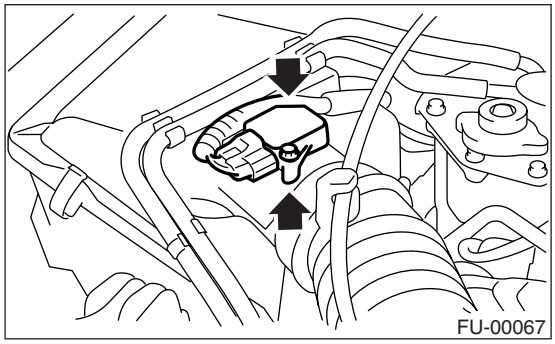

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
1.7 N·m (0.17 kgf-m, 1.2 ft-lb)

11.Manifold Absolute Pressure Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

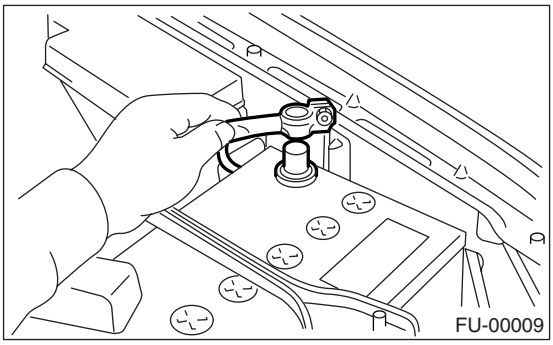

2) Remove the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, REMOVAL, Idle Air Control Solenoid Valve.>
3) Disconnect the connectors from manifold absolute pressure sensor.

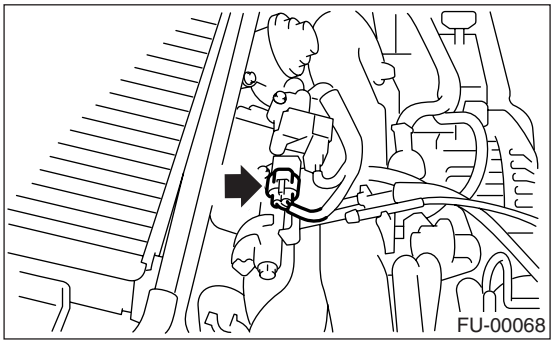

4) Remove the manifold absolute pressure sensor from throttle body.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Replace the O-rings for manifold absolute pressure sensor with new ones.

Tightening torque:
1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

12.Idle Air Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

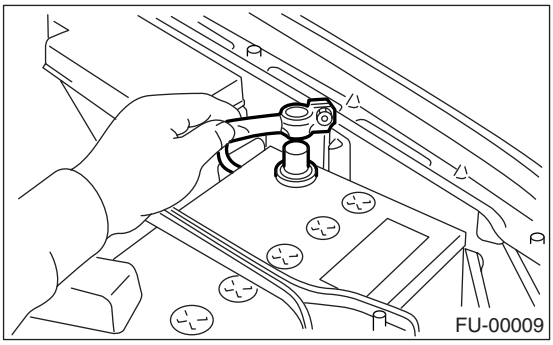

2) Disconnect the connector from idle air control solenoid valve.

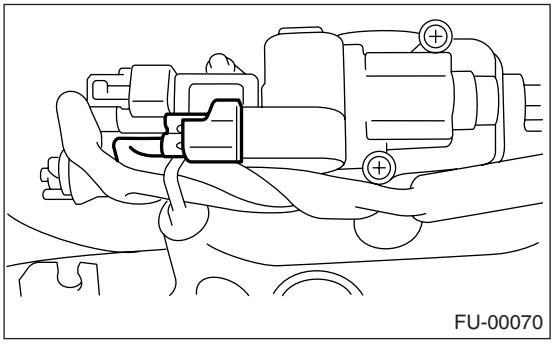

3) Remove the idle air control solenoid valve from throttle body.

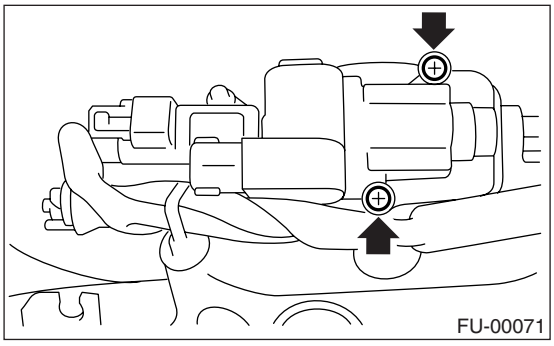

4) Remove the gasket from throttle body.

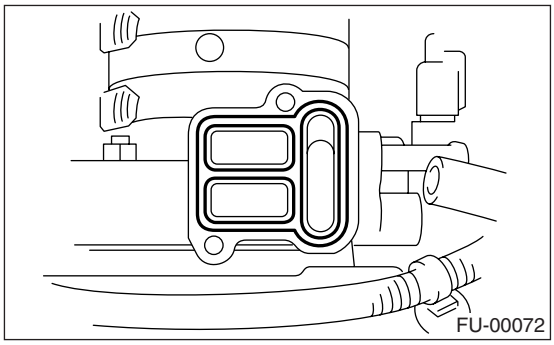

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Replace the gasket with a new one.

Tightening torque:
2.8 N·m (0.29 kgf-m, 2.1 ft-lb)

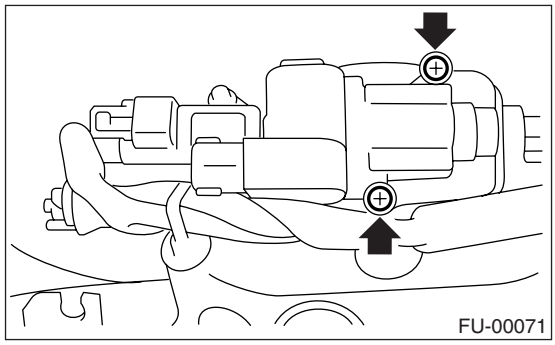

13.Fuel Injector

A: REMOVAL

1. RH SIDE

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

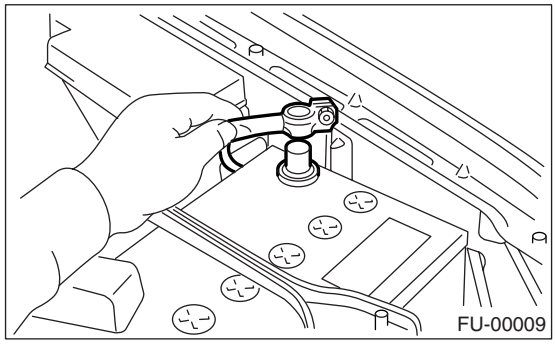

4) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
5) Remove the fuel pipe protector RH.

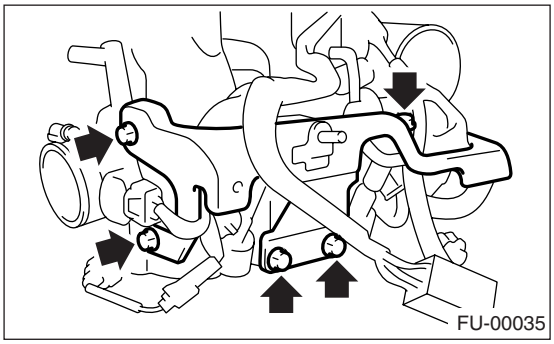

6) Disconnect the connector from fuel injector.

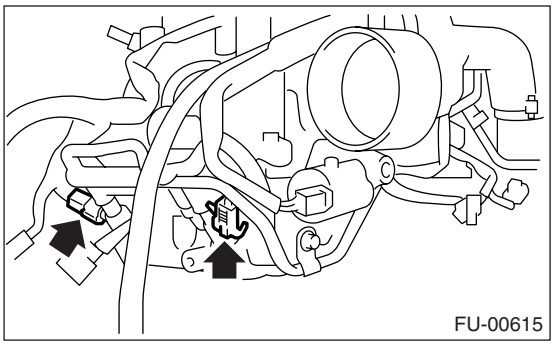

7) Remove the bolts which hold the injector pipe to intake manifold.

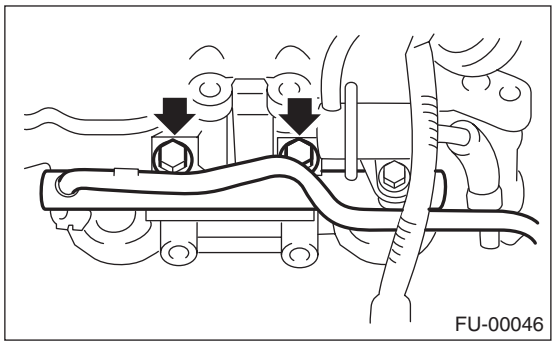

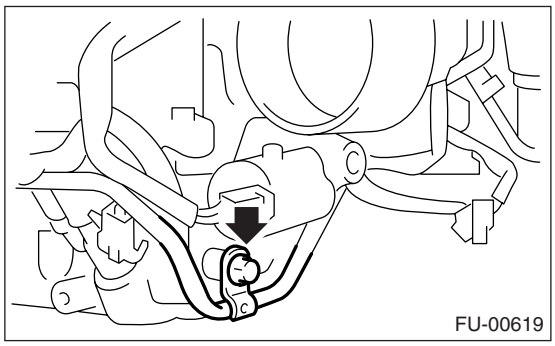

8) Remove the fuel injector while lifting up the fuel injector pipe.

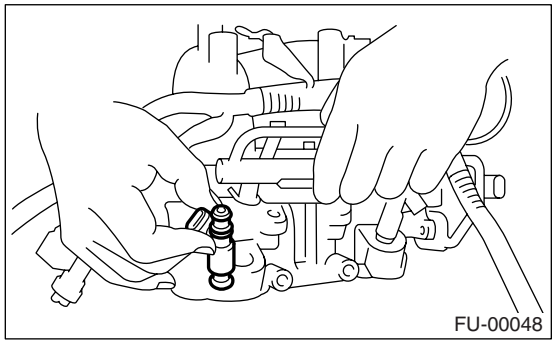

2. LH SIDE

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

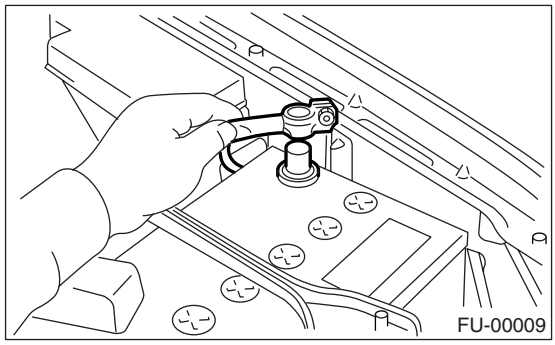

4) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
5) Remove the fuel pipe protector LH.

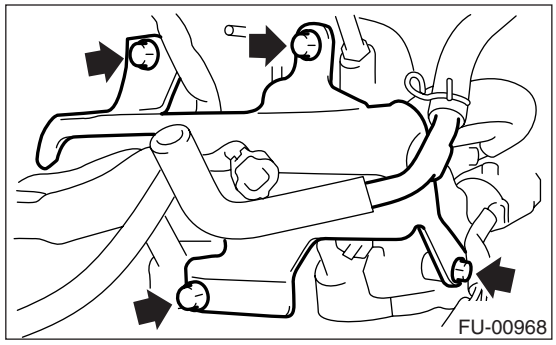

6) Disconnect the connector from fuel injector.

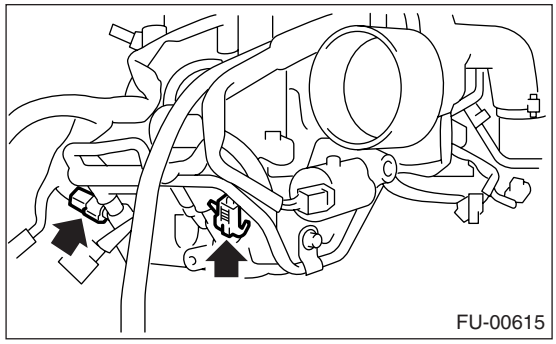

7) Remove the bolts which hold the injector pipe to intake manifold.

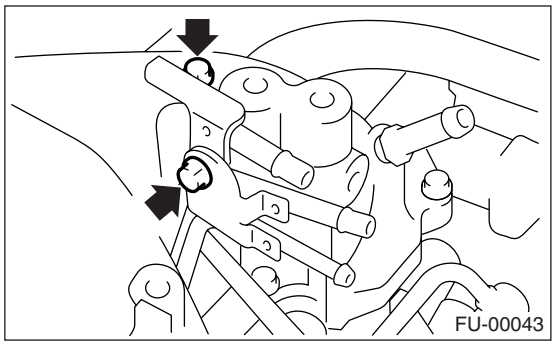

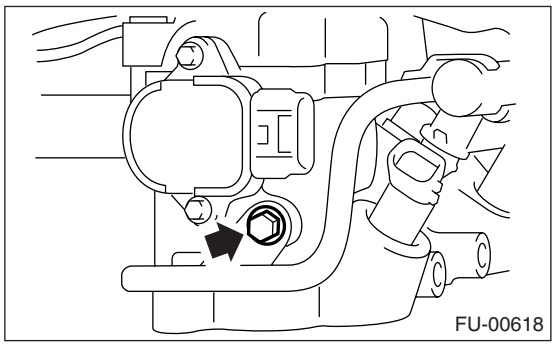

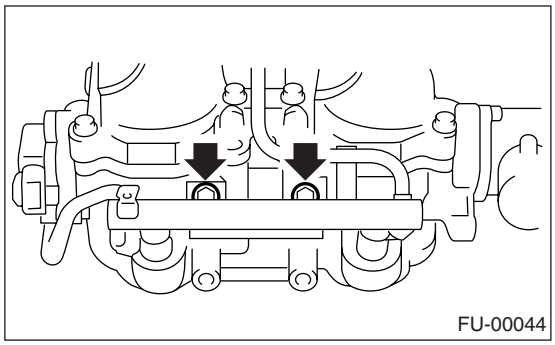

8) Remove the fuel injector while lifting up the fuel injector pipe.

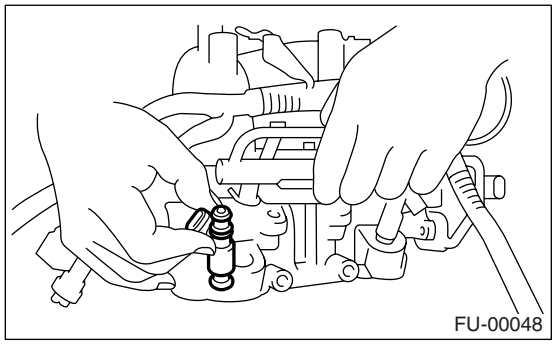

B: INSTALLATION

1. RH SIDE

Install in the reverse order of removal.

NOTE:
Replace the O-ring and insulators with new ones.

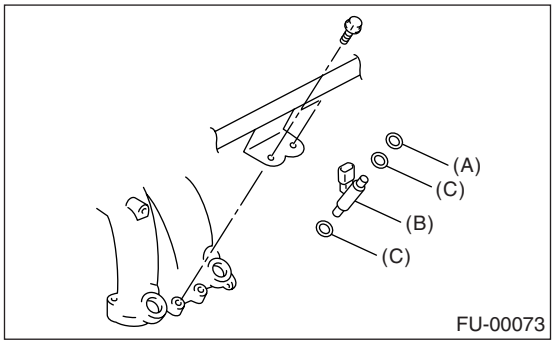

(A) O-ring
(B) Fuel injector
(C) Insulator

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

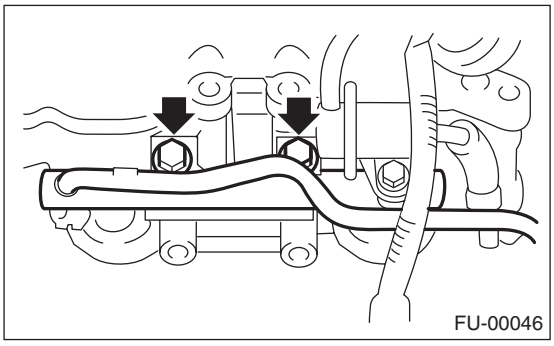

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

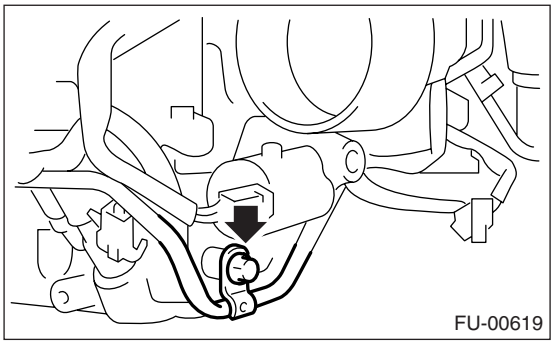

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

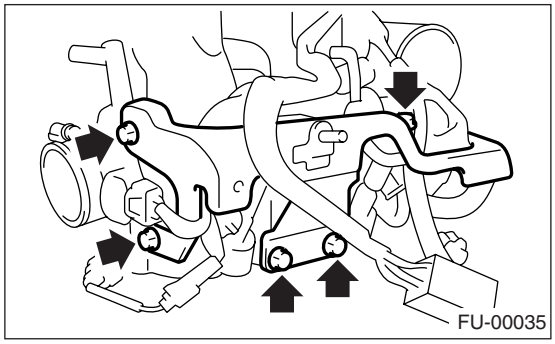

2. LH SIDE

Install in the reverse order of removal.

NOTE:
Replace the O-ring and insulators with new ones.

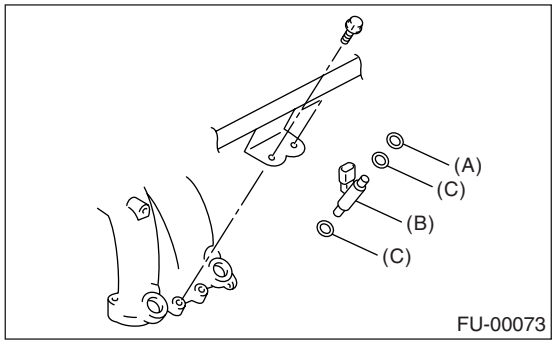

(A) O-ring
(B) Fuel injector
(C) Insulator

Tightening torque:
4.9 N·m (0.5 kgf-m, 3.6 ft-lb)

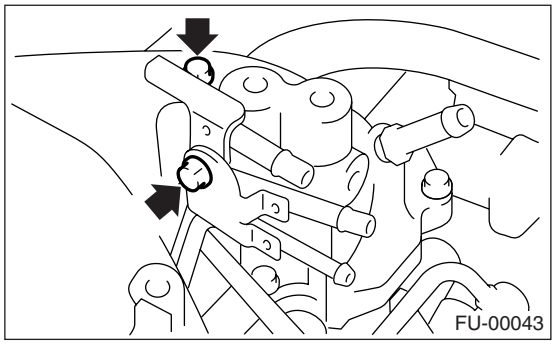

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

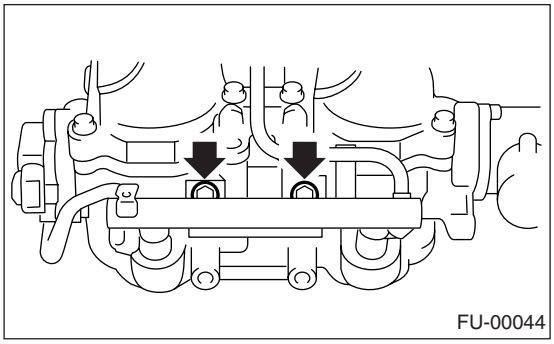

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

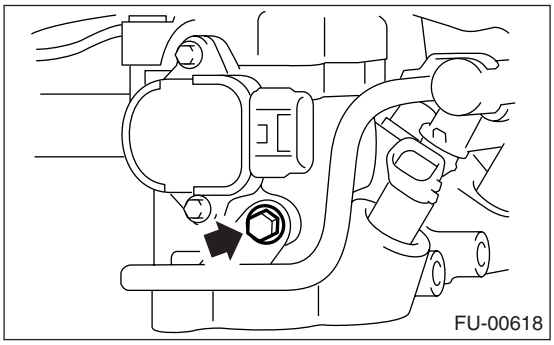

Tightening torque:
19 N·m (1.9 kgf-m, 14.0 ft-lb)

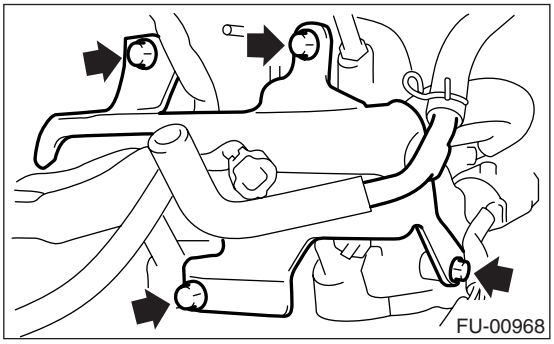

14. Tumble Generator Valve Assembly

A: REMOVAL

NOTE:
This component is installed to except STi model.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid, and then remove the fuel filler cap.
3) Disconnect the ground cable from battery.

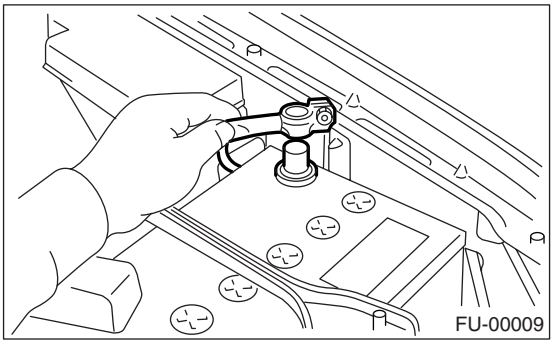
FU-00009

4) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
5) Disconnect the connector from tumble generator valve sensor.

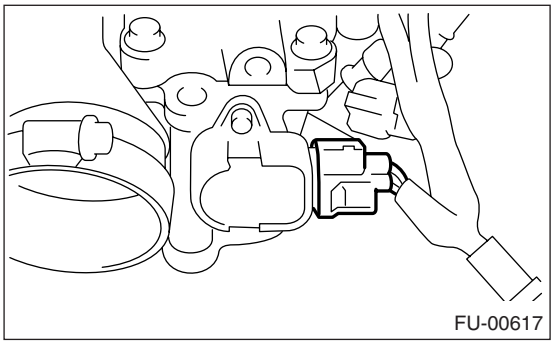
FU-00617

6) Disconnect the connector from tumble generator valve actuator.

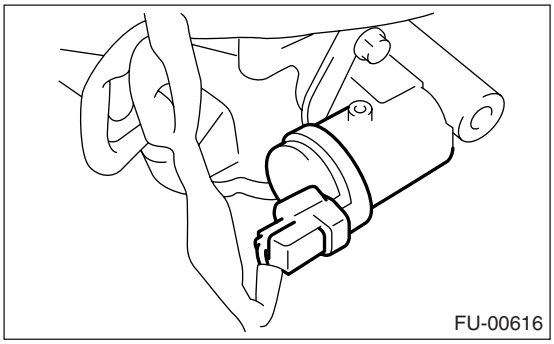
FU-00616

7) Remove the fuel injector. <Ref. to FU(H4DOTC)-37, REMOVAL, Fuel Injector.>
8) Remove the tumble generator valve body from intake manifold.

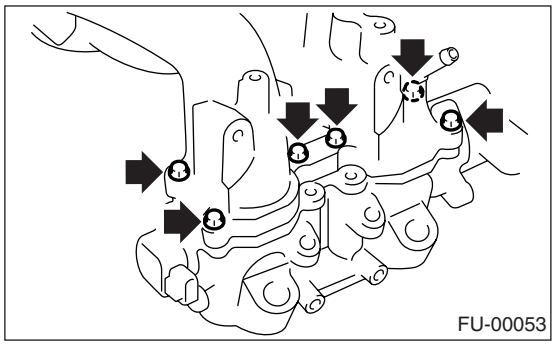
FU-00053

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Always use new gaskets.

Tightening torque:
8.25 N·m (0.84 kgf-m, 6.1 ft-lb)

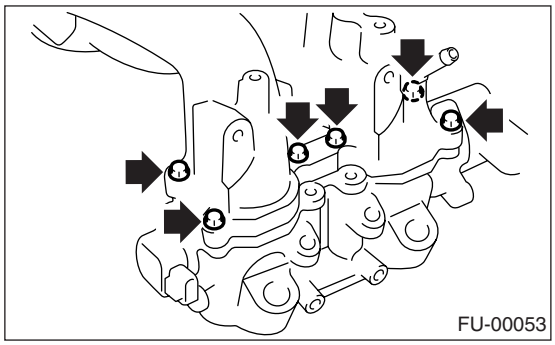
FU-00053

15. Tumble Generator Valve Actuator

A: REMOVAL

NOTE:
This component is installed to except STi model.

1. RH SIDE

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

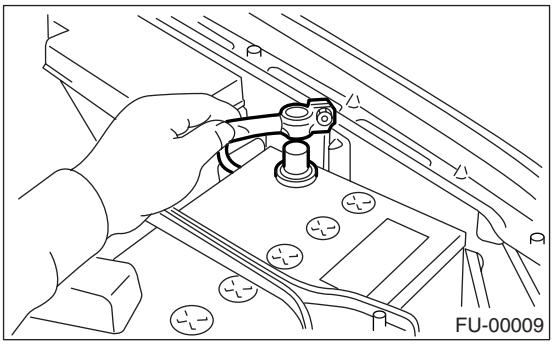

4) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
5) Disconnect the connector from tumble generator valve actuator RH.
6) Remove the tumble generator valve RH.

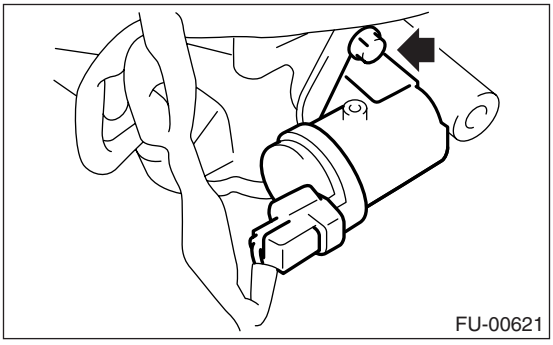

2. LH SIDE

1) Disconnect the ground cable from battery.

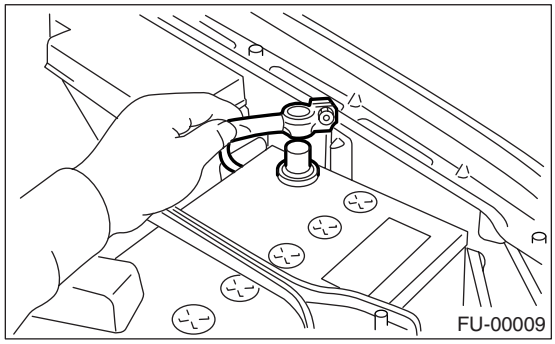

2) Disconnect the connector from tumble generator valve LH.
3) Remove the tumble generator valve actuator LH.

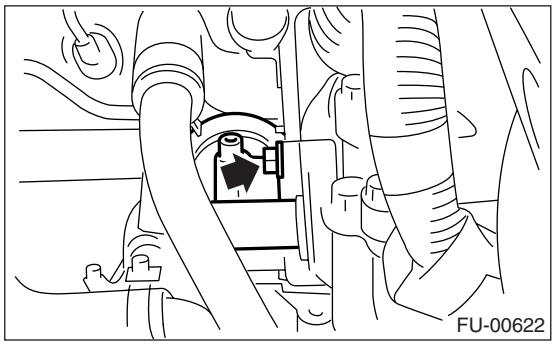

B: INSTALLATION

1. RH SIDE

Install in the reverse order of removal.

2. LH SIDE

Install in the reverse order of removal.

16. Wastegate Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

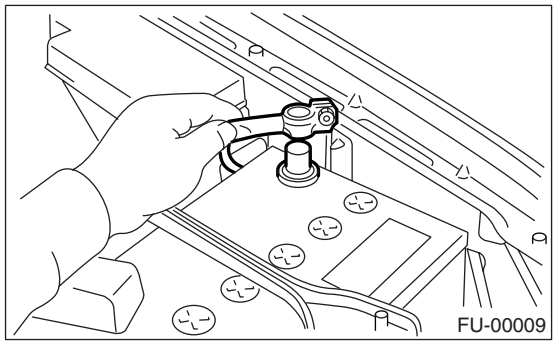

2) Disconnect the engine harness connector (A) from bracket.
3) Disconnect the connector (B) from wastegate control solenoid valve.
4) Remove the bracket from body.

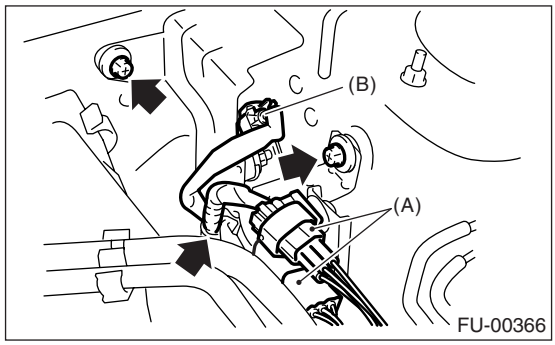

5) Disconnect the pressure hoses (C) from wastegate control solenoid valve.

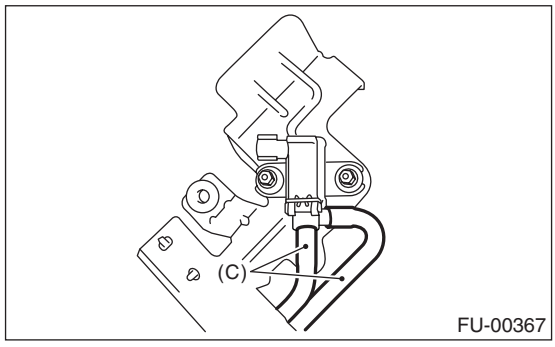

6) Remove the wastegate control solenoid valve from bracket.

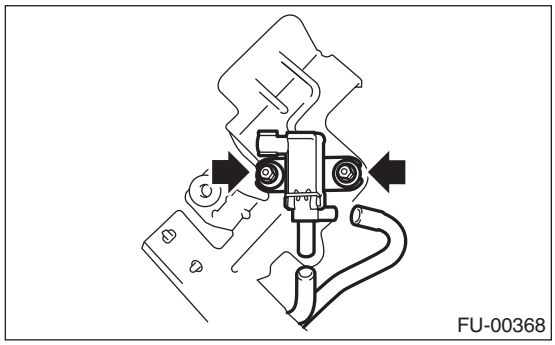

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

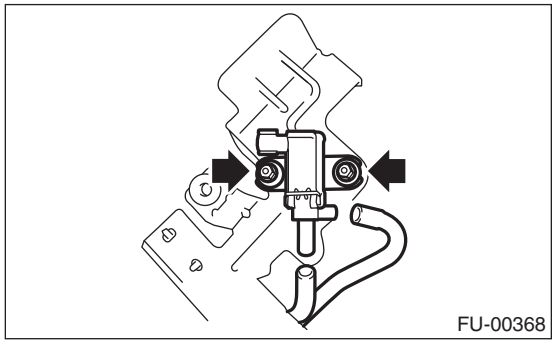

17.Front Oxygen (A/F) Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

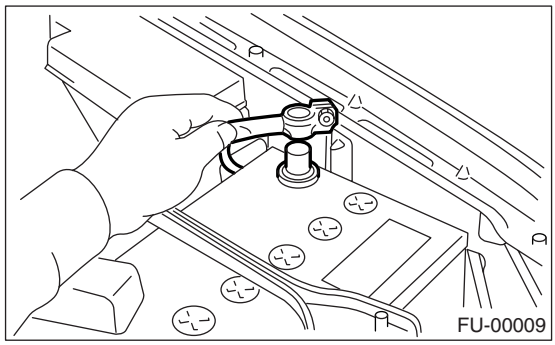

2) Disconnect the connector from front oxygen (A/F) sensor.

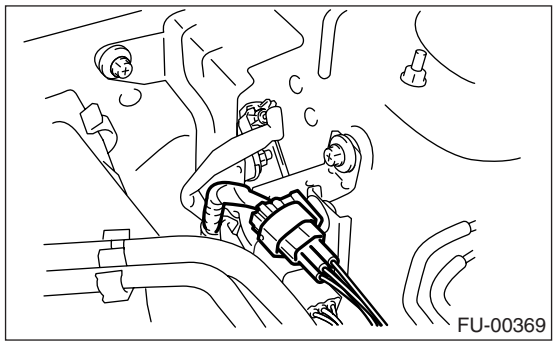

3) Disconnect the engine harness fixed by clip (A) from bracket (B).

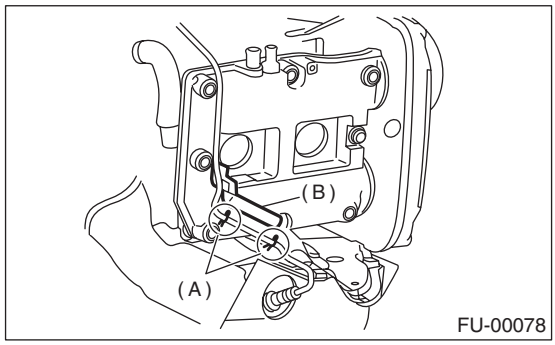

4) Remove the front right side wheel.
5) Lift-up the vehicle.
6) Remove the service hole cover.

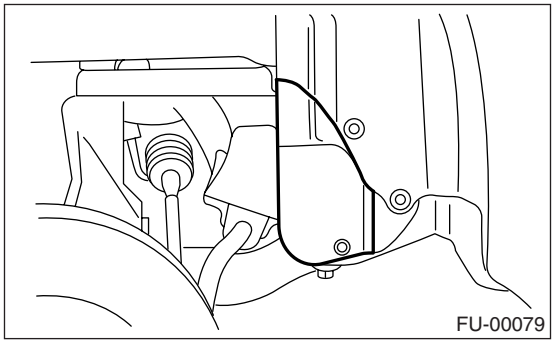

7) Apply SUBARU CRC or its equivalent to the threaded portion of front oxygen (A/F) sensor, and leave it for 1 minute or more.

SUBARU CRC (Part No. 004301003)

8) Remove the front oxygen (A/F) sensor.

CAUTION:
When removing the oxygen (A/F) sensor, wait until the exhaust pipe cools, otherwise it will damage the exhaust pipe.

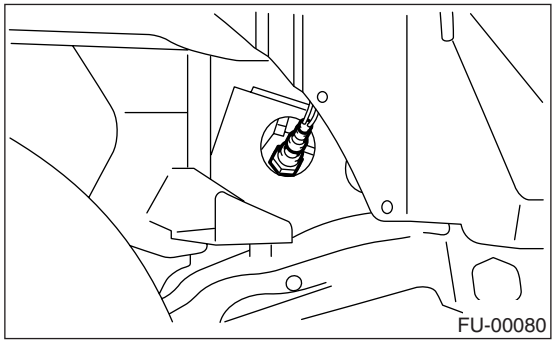

B: INSTALLATION

1) Before installing the front oxygen (A/F) sensor, apply anti-seize compound only to the threaded portion of front oxygen (A/F) sensor to make next removal easier.

Anti-seize compound:
SS-30 by JET LUBE

CAUTION:
Never apply anti-seize compound to the protector of front oxygen (A/F) sensor.

2) Install the front oxygen (A/F) sensor.

Tightening torque:
30 N·m (3.1 kgf-m, 22.1 ft-lb)

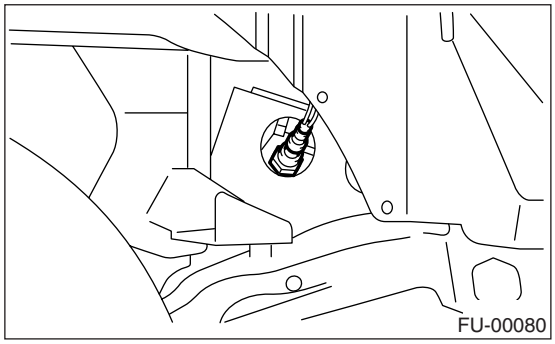

3) Install the service hole cover.

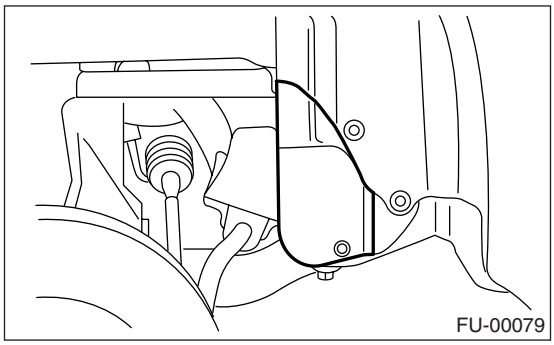

4) Lower the vehicle.
5) Install the front right side wheel.
6) Connect the engine harness with clip (A) to bracket (B).

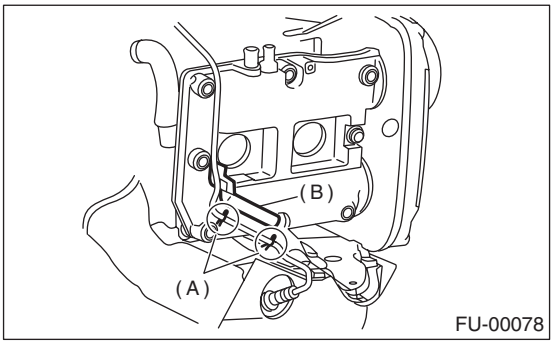

7) Connect the connector of front oxygen (A/F) sensor.

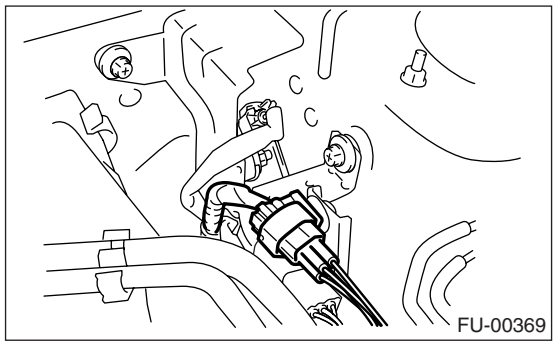

8) Connect the battery ground cable to battery.

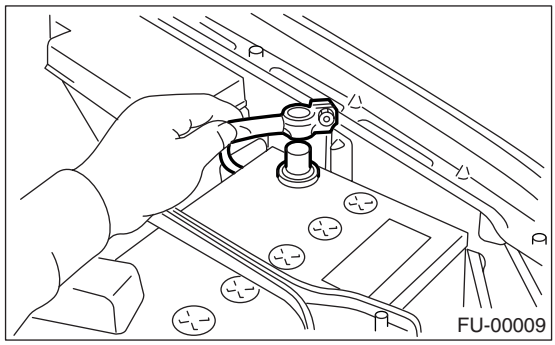

18.Rear Oxygen Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

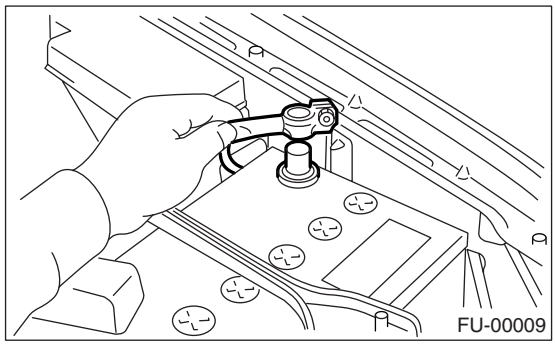

2) Lift-up the vehicle.
3) Disconnect the connector from rear oxygen sensor.

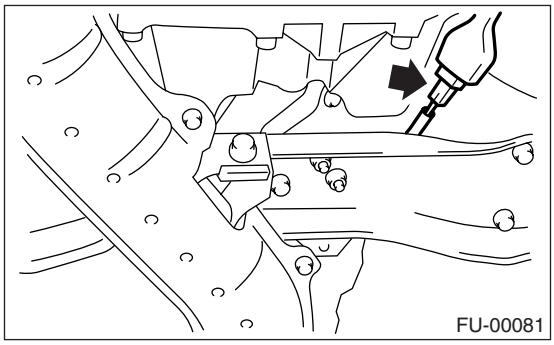

4) Remove the clip by pulling it out from the upper side of crossmember.

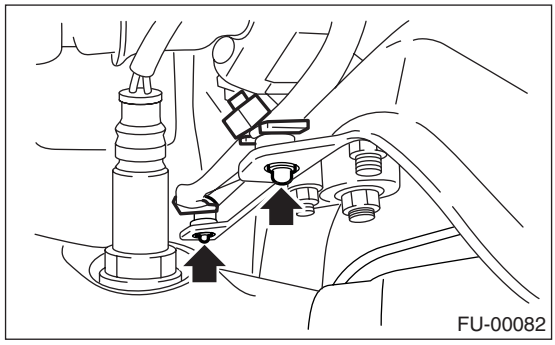

5) Apply SUBARU CRC or its equivalent to the threaded portion of rear oxygen sensor, and leave it for 1 minute or more.

SUBARU CRC (Part No. 004301003)

6) Remove the rear oxygen sensor.

CAUTION:
When removing the oxygen sensor, wait until the exhaust pipe cools, otherwise it will damage the exhaust pipe.

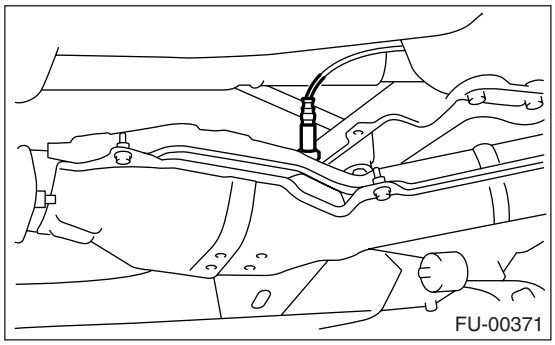

B: INSTALLATION

1) Before installing the rear oxygen sensor, apply anti-seize compound only to the threaded portion of rear oxygen sensor to make next removal easier.

CAUTION:
Never apply anti-seize compound to the protector of rear oxygen sensor.

Anti-seize compound:
SS-30 by JET LUBE

2) Install the rear oxygen sensor.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

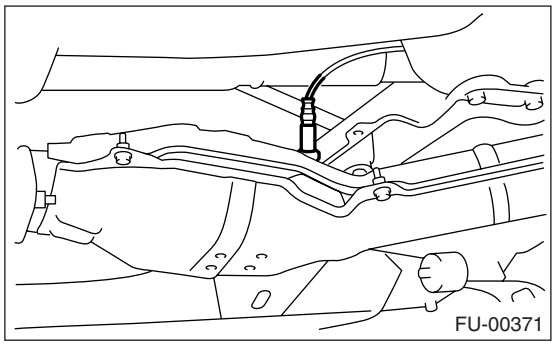

3) Connect the connector to rear oxygen sensor.

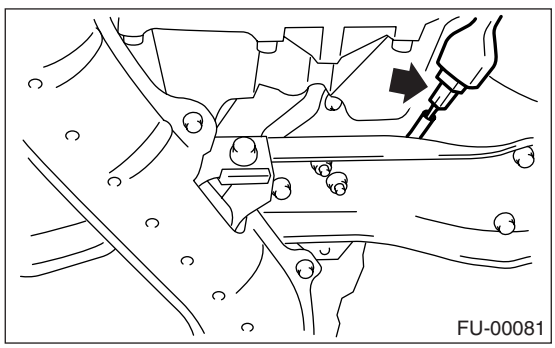

4) Connect the clip to crossmember.

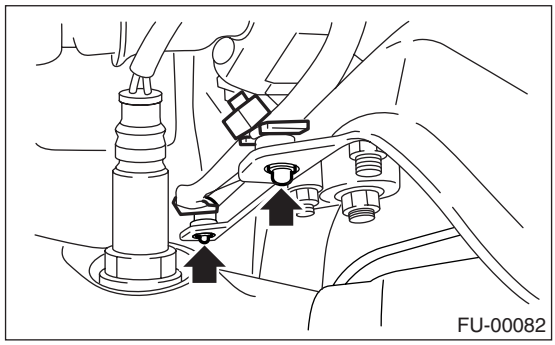

5) Lower the vehicle.
6) Connect the battery ground cable to battery.

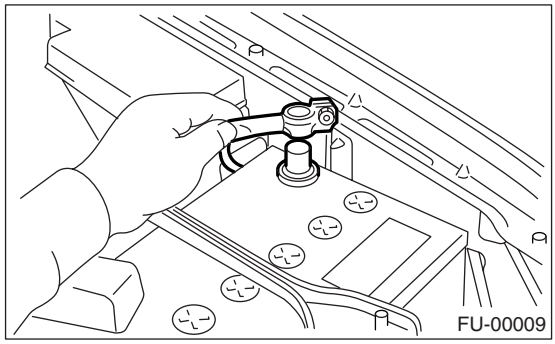

19.Exhaust Temperature Sensor

A: REMOVAL

NOTE:
This component is installed to except STi and Australia model.

1) Disconnect the ground cable from battery.

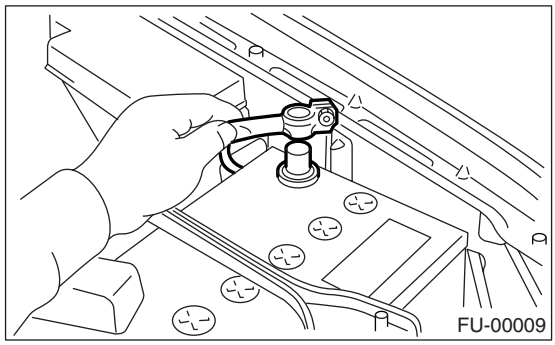

2) Remove the joint pipe. <Ref. to EX(H4DOTC)-13, REMOVAL, Joint Pipe.>

3) Apply SUBARU CRC or its equivalent to the threaded portion of exhaust temperature sensor, and leave it for 1 minute or more.

SUBARU CRC (Part No. 004301003)

4) Remove the exhaust temperature sensor.

CAUTION:
When removing the exhaust temperature sensor, wait until the exhaust pipe cools, otherwise it will damage the exhaust pipe.

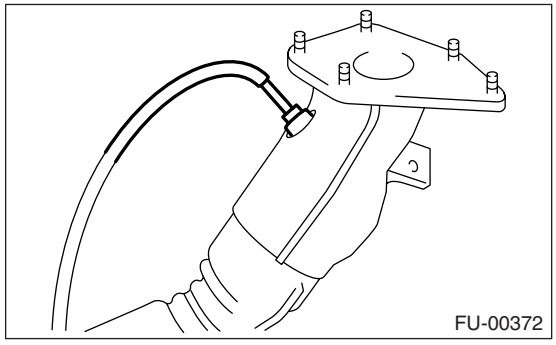

B: INSTALLATION

1) Before installing the exhaust temperature sensor, apply anti-seize compound only to the threaded portion of rear oxygen sensor to make next removal easier.

CAUTION:
Never apply anti-seize compound to the protector of exhaust temperature sensor.

Anti-seize compound:
SS-30 by JET LUBE

2) Install the exhaust temperature sensor.

NOTE:
Align the harness (A) direction of exhaust temperature sensor to the marking (B) of joint pipe, and tighten the screws.

Tightening torque:
21 N·m (2.1 kgf-m, 15.2 ft-lb)

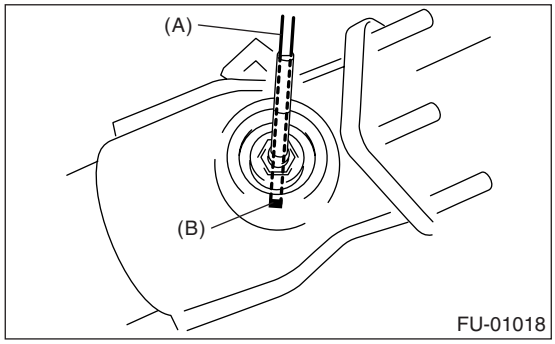

3) Install the joint pipe. <Ref. to EX(H4DOTC)-13, INSTALLATION, Joint Pipe.>

4) Connect the battery ground cable to battery.

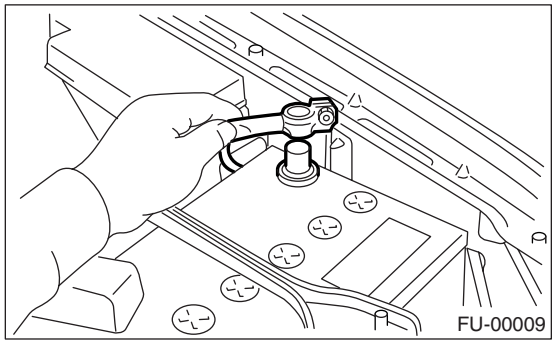

20.Engine Control Module (ECM)

A: REMOVAL

1) Disconnect the ground cable from battery.

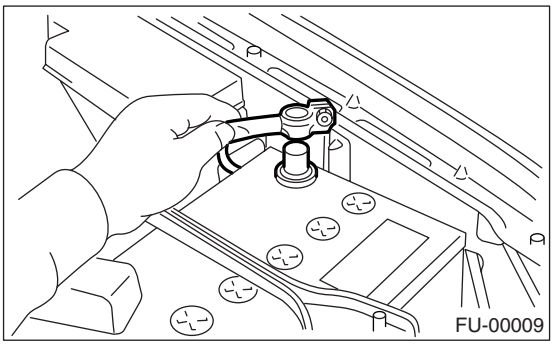

2) Remove the lower inner trim of passenger side.
<Ref. to EI-47, REMOVAL, Lower Inner Trim.>
3) Detach the floor mat of front passenger seat side.
4) Remove the protect cover.

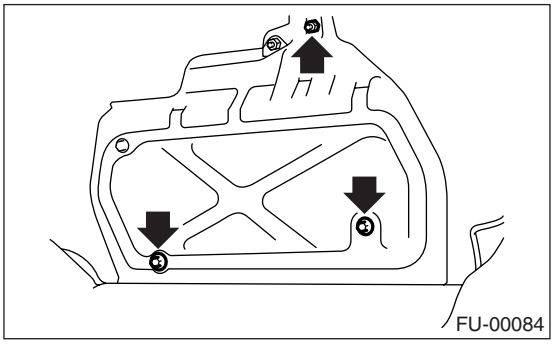

5) Remove the nuts (A) which hold the ECM to bracket.
6) Remove the clip (B) from bracket.

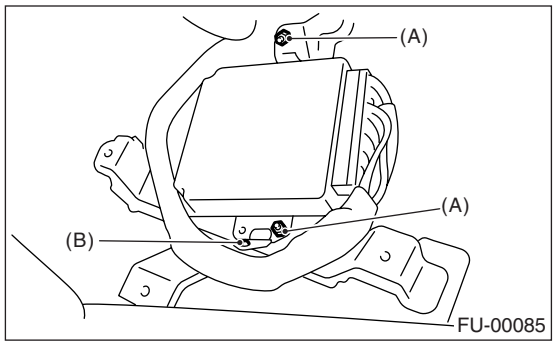

7) Disconnect the ECM connectors and take out the ECM.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.

21.Main Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

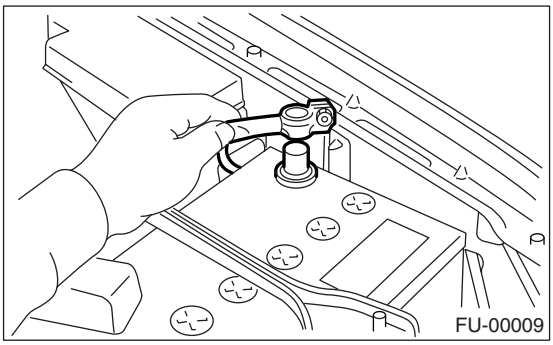

2) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
3) Remove the bolt which holds the main relay bracket on body.
4) Disconnect the connectors from main relay.

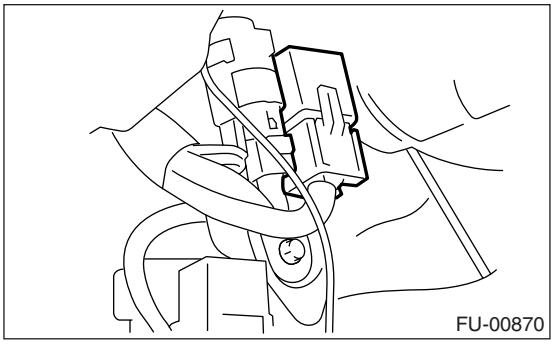

B: INSTALLATION

Install in the reverse order of removal.

22.Fuel Pump Relay

A: REMOVAL

1) Disconnect the ground cable from battery.

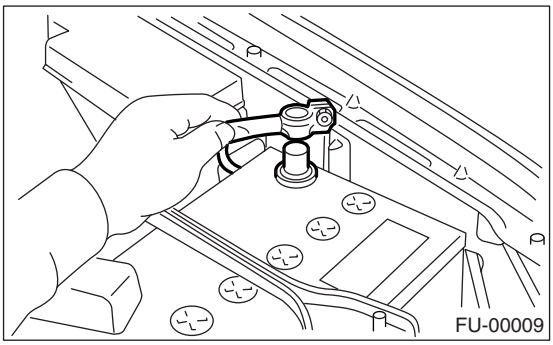

2) Remove the glove box.<Ref. to EI-39, REMOVAL, Glove Box.>
3) Remove the bolt which holds the fuel pump relay bracket on body.
4) Disconnect the connector from fuel pump relay.

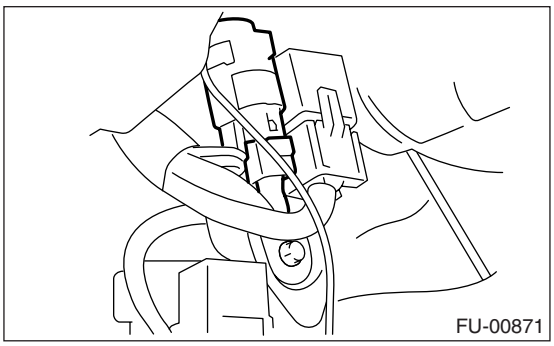

5) Remove the fuel pump relay from mounting bracket.

B: INSTALLATION

Install in the reverse order of removal.

23.Fuel Pump Control Unit

A: REMOVAL

1) Disconnect the ground cable from battery.

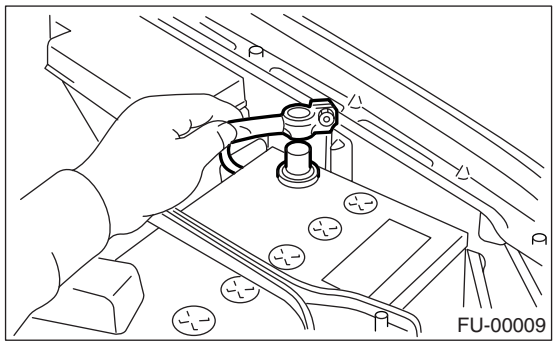

2) Remove the rear quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
3) Disconnect the connector from fuel pump control unit.

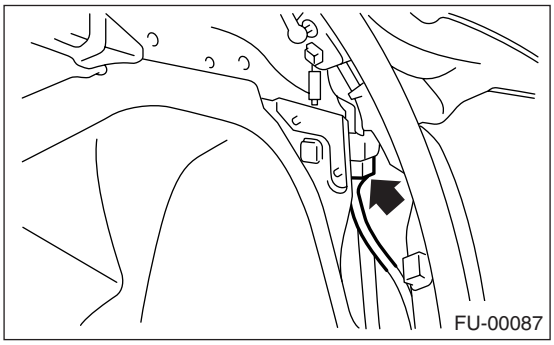

4) Remove the fuel pump control unit.

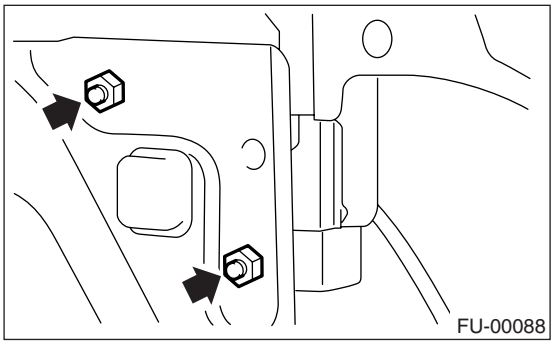

B: INSTALLATION

Install in the reverse order of removal.

24.Fuel

A: OPERATION

1. RELEASING OF FUEL PRESSURE

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Disconnect the connector from fuel pump relay.

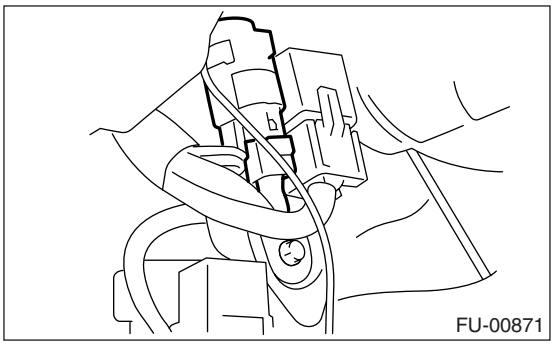

2) Start and run the engine until it stalls.
3) After the engine stalls, crank it for 5 more seconds.
4) Turn the ignition switch to OFF.

2. DRAINING FUEL

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

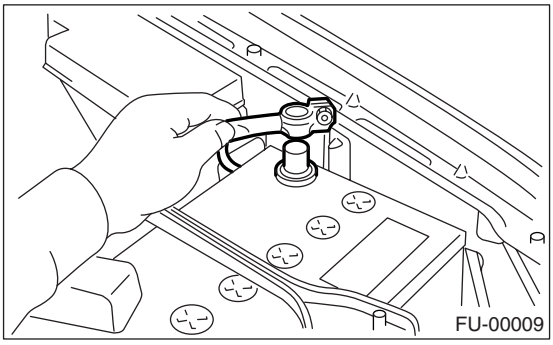

3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Lift-up the vehicle.
5) Drain fuel from the fuel tank.
Set a container under vehicle and remove the drain plug from fuel tank.

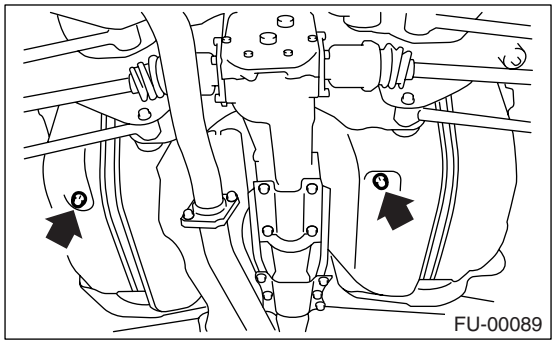

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

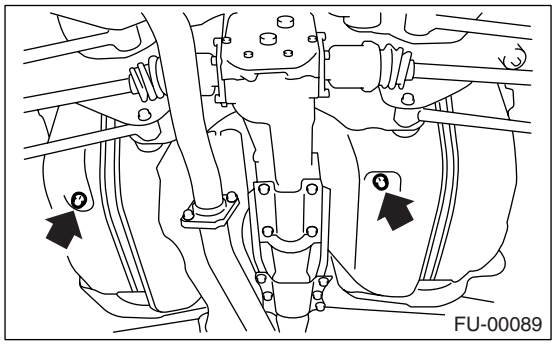

25.Fuel Tank

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Drain fuel from fuel tank. <Ref. to FU(H4DOTC)-53, DRAINING FUEL, OPERATION, Fuel.>
4) Remove the rear seat.
5) Disconnect the connector (A) of fuel tank cord to rear harness.
6) Push the grommet (B) which holds the fuel tank cord on floor panel down under body.

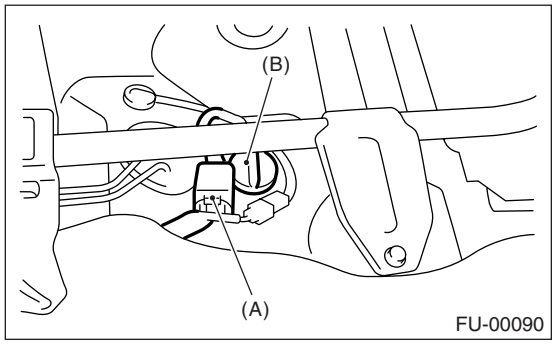

7) Remove the rear crossmember. <Ref. to RS-21, REMOVAL, Rear Crossmember.>
8) Disconnect the two-way valve hose (A) from two-way valve, and disconnect the canister hose (B) from canister.

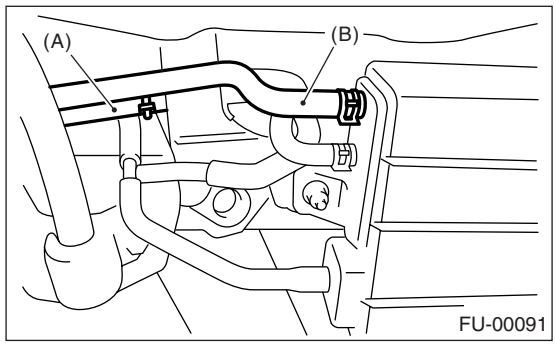

9) Loosen the clamp and disconnect the fuel filler hose and air vent hose from fuel filler pipe.

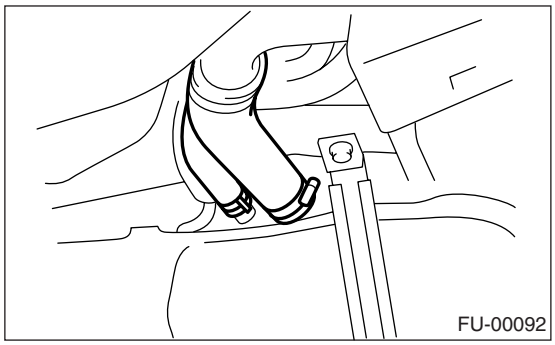

10) Move the clips and disconnect the quick connector. <Ref. to FU(H4DOTC)-69, REMOVAL, Fuel Delivery, Return and Evaporation Lines.>
11) Disconnect the fuel hoses.

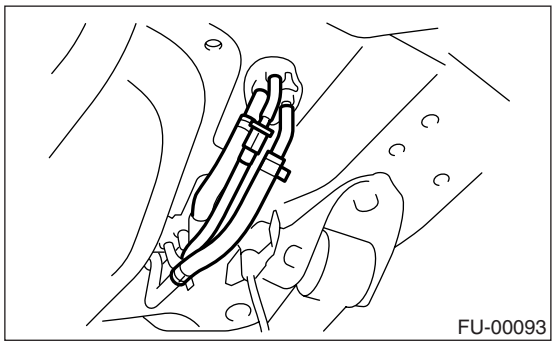

12) Support the fuel tank with transmission jack, remove the bolts from bands, and then dismount the fuel tank from vehicle.

WARNING:
A helper is required to perform this work.

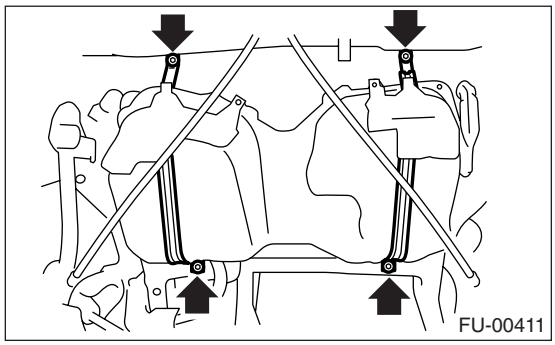

B: INSTALLATION

1) Support the fuel tank with transmission jack and push the fuel tank harness into access hole with grommet.
2) Set the fuel tank and temporarily tighten the bolts of fuel tank bands.

WARNING:
A helper is required to perform this work.

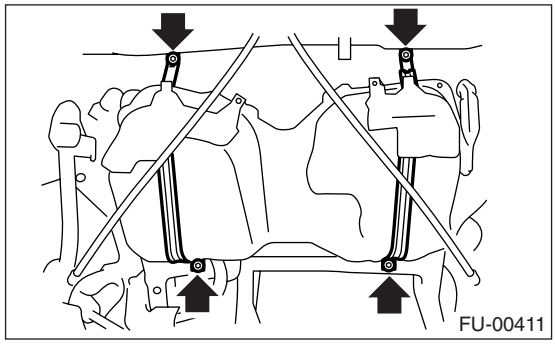

3) Connect the two-way valve hose (A) to two-way valve and connect the canister hose (B) to canister.

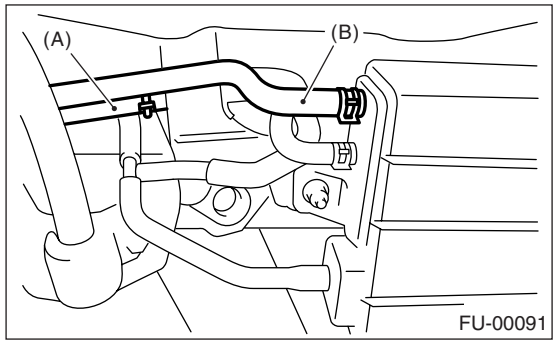

4) Connect the fuel filler hose and air vent hose.

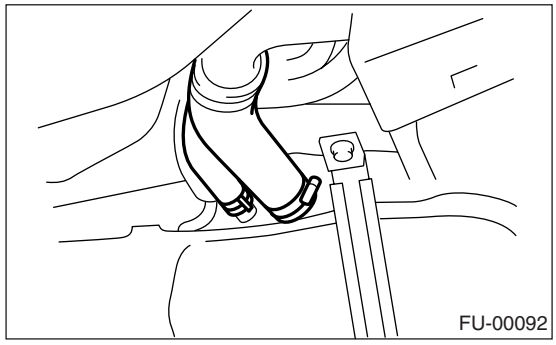

5) Connect the fuel hoses, and secure them with clips and quick connector. <Ref. to FU(H4DOTC)-70, INSTALLATION, Fuel Delivery, Return and Evaporation Lines.>

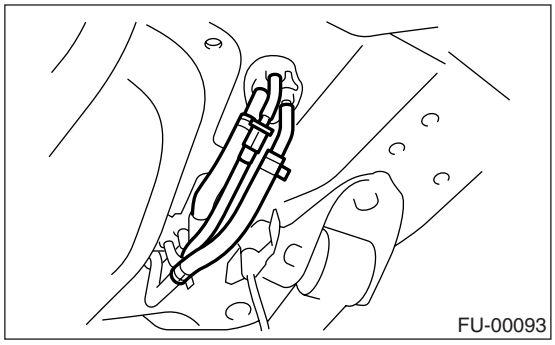

6) Tighten the band mounting bolts.

Tightening torque:
33 N·m (3.4 kgf-m, 24.3 ft-lb)

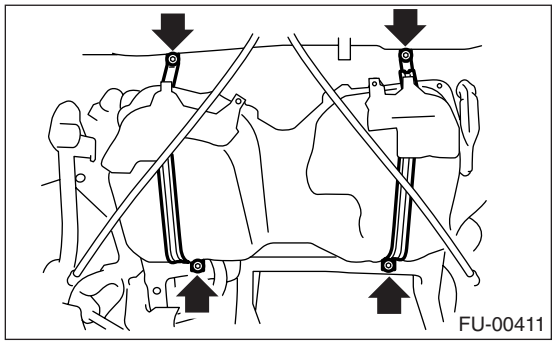

7) Install the rear crossmember. <Ref. to RS-21, INSTALLATION, Rear Crossmember.>
8) Connect the connector (A) to the fuel tank cord, and plug the service hole with grommet (B).

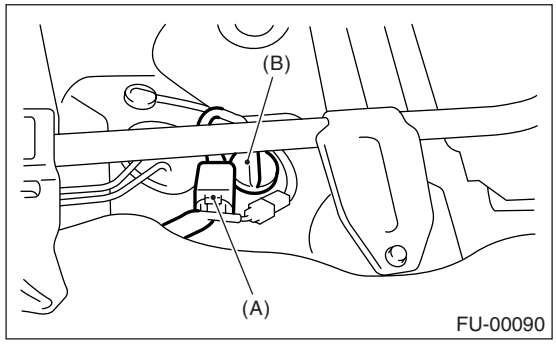

9) Set the rear seat and floor mat.

10) Connect the connector to the fuel pump relay.

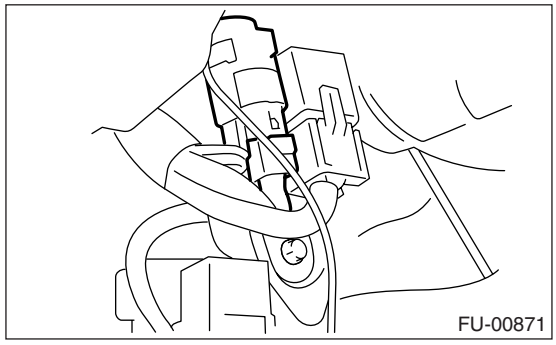

C: INSPECTION

1) Make sure there are no cracks, holes or other damage on fuel tank.
2) Make sure the fuel hoses and fuel pipes are not cracked and the connections are tightened firmly.

26.Fuel Filler Pipe

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Disconnect the ground cable from battery.

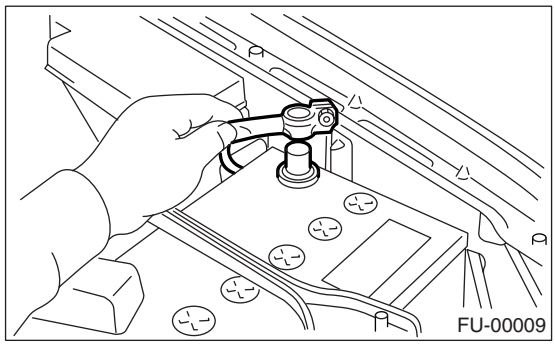

5) Remove the screws holding the packing in place.

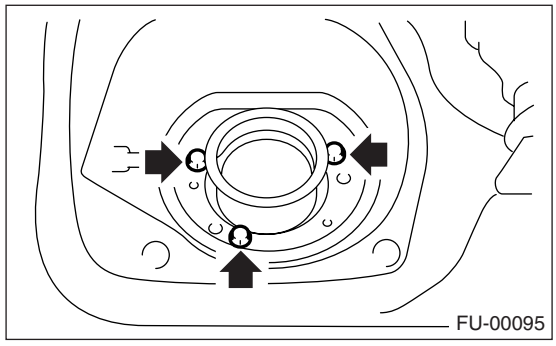

6) Loosen the rear right side wheel nuts.
7) Lift-up the vehicle.
8) Remove the rear right side wheel.

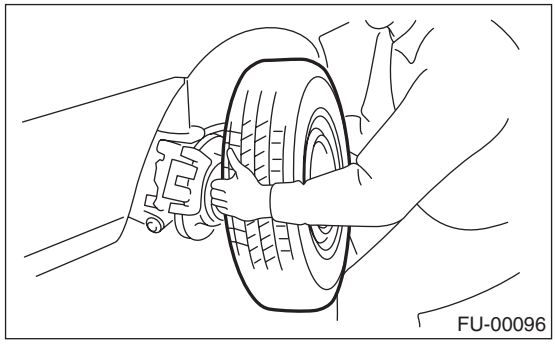

9) Drain fuel from fuel tank. Set a container under vehicle and remove the drain plug from fuel tank.

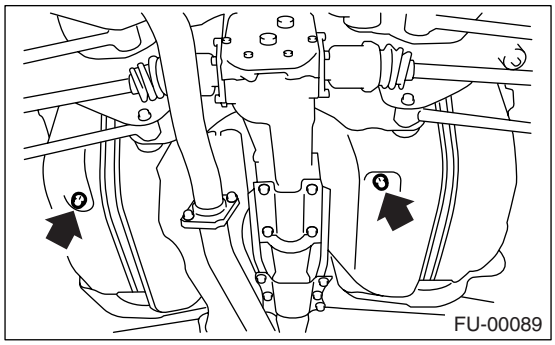

10) Tighten the fuel drain plug, and install the front right side tank cover.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

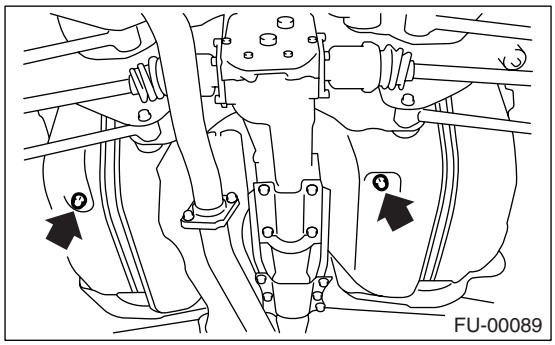

11) Remove the fuel filler pipe protector.

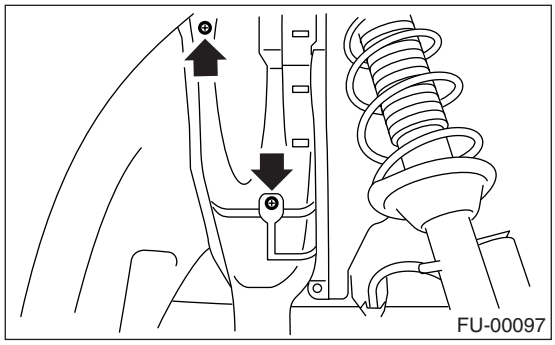

12) Separate the evaporation hoses from clip of fuel filler pipe.

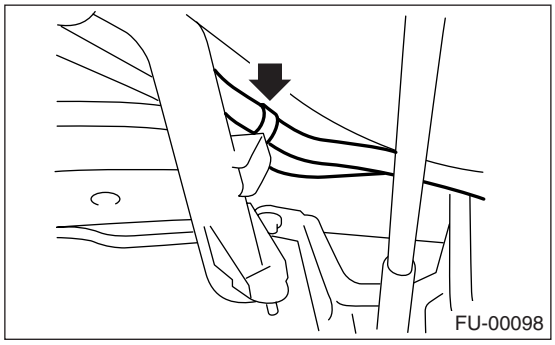

13) Disconnect the air vent hose from fuel filler pipe.

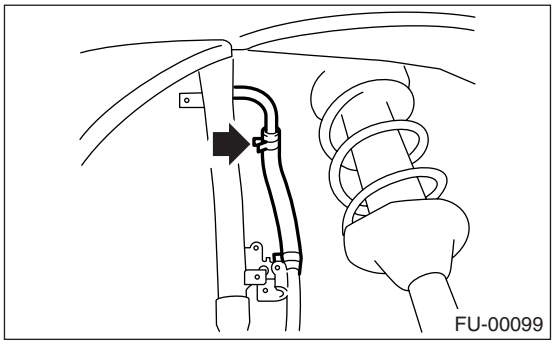

14) Remove the bolts which hold the fuel filler pipe bracket on body.

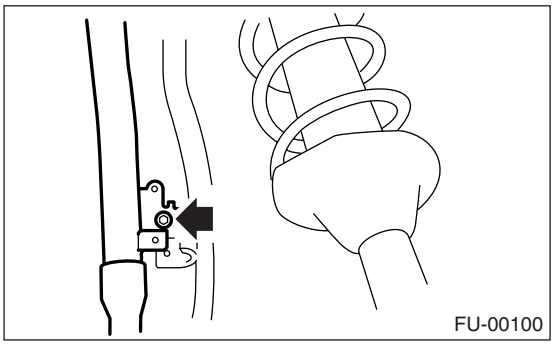

15) Loosen the clamp and separate the fuel filler hose (A) from fuel filler pipe.
16) Move the clip and separate the air vent hose (B).

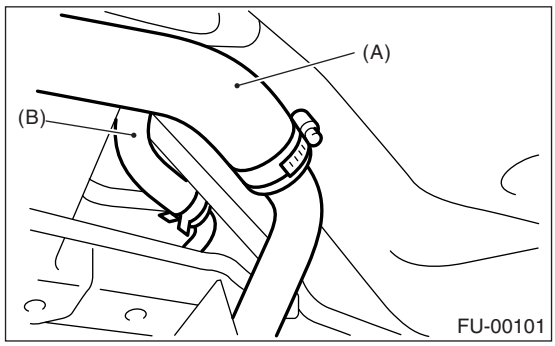

17) Remove the fuel filler pipe to under side of vehicle.

18) Remove the air vent pipe together with clip from body.

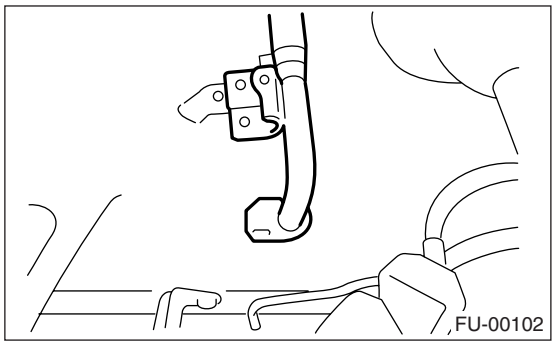

B: INSTALLATION

1) Hold the fuel filler flap open.
2) Set the fuel saucer (A) with rubber packing (C) and insert the fuel filler pipe into hole from the inner side of apron.
3) Align the holes in fuel filler pipe neck, set the cup (B), and then tighten the screws.

NOTE:
If the edges of rubber packing are folded toward inside, straighten it with a screwdriver.

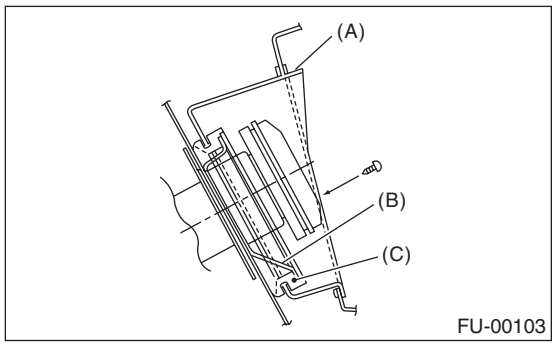

4) Install the air vent pipe.

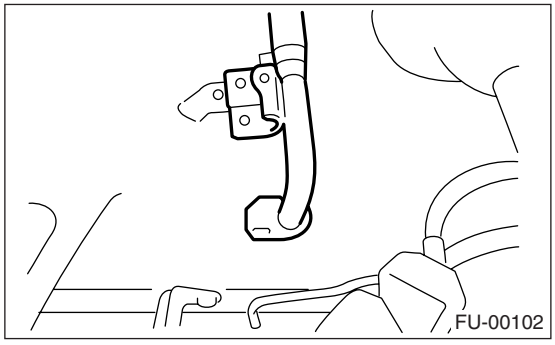

5) Connect the air vent hose to the fuel filler pipe.

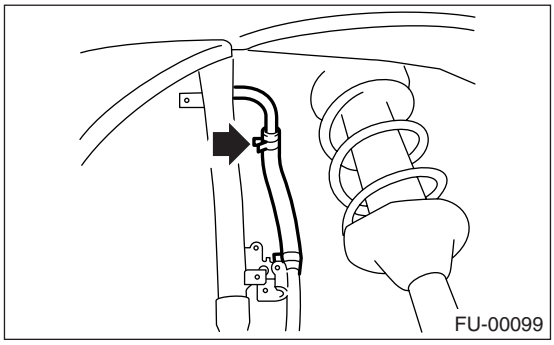

6) Insert the fuel filler hose (A) approx. 35 to 40 mm (1.38 to 1.57 in) over the lower end of fuel filler pipe and tighten the clamp.

CAUTION:
Do not allow clips to touch the air vent hose (B) and rear suspension crossmember.

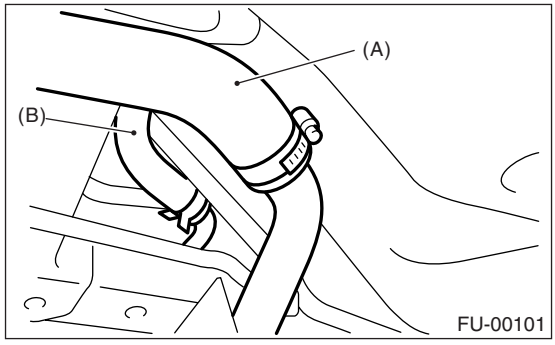

7) Insert the air vent hose approx. 25 to 30 mm (0.98 to 1.18 in) into the lower end of air vent pipe and hold clip.

L = 27.5±2.5 mm (1.083±0.098 in)

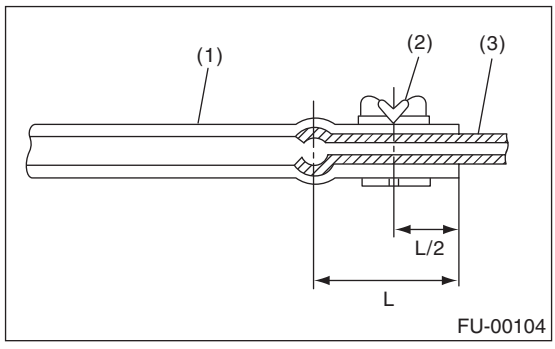

(1) Hose
(2) Clip
(3) Pipe

8) Tighten the bolt which holds the fuel filler pipe bracket on body.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

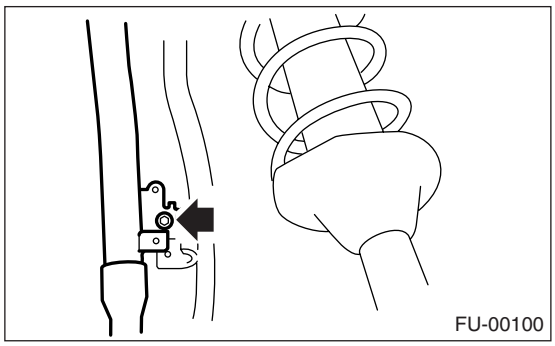

9) Hold the evaporation hoses onto clip of fuel filler pipe.

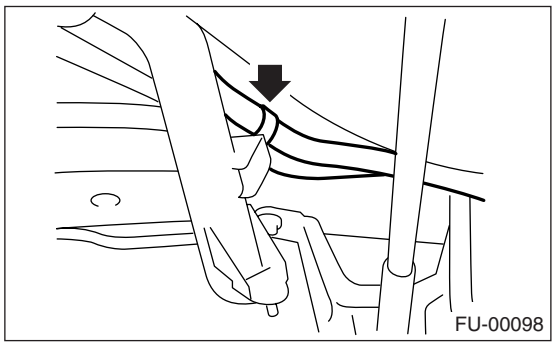

10) Install the fuel filler pipe protector.

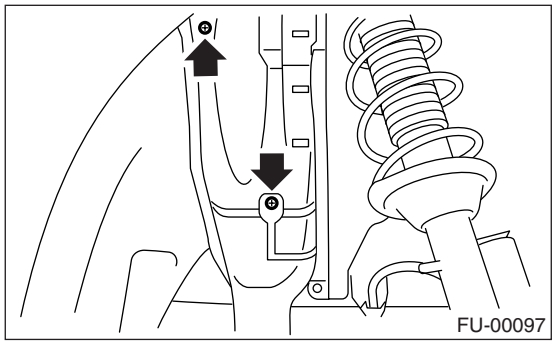

11) Install the rear right wheel.

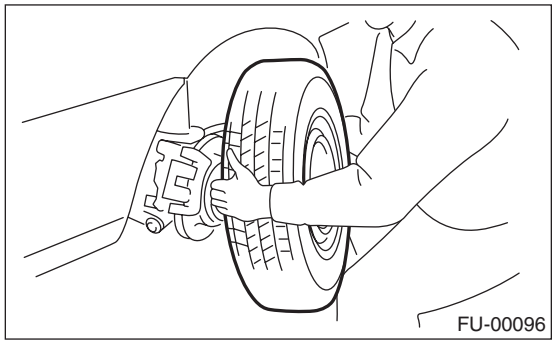

12) Lower the vehicle.
13) Tighten the wheel nuts.

14) Connect the connector to the fuel pump relay.

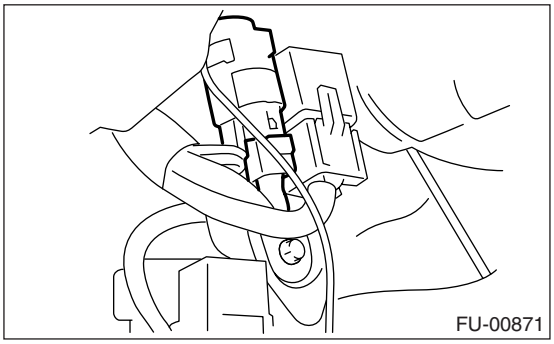

15) Connect the battery ground cable to battery.

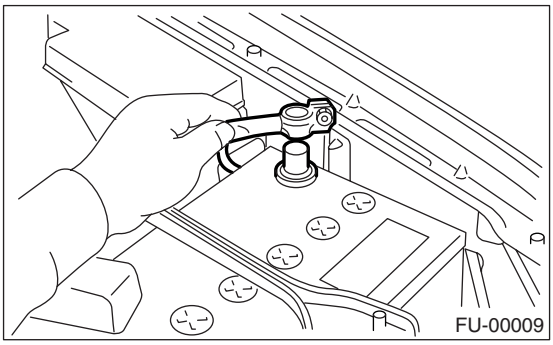

27.Fuel Pump

A: REMOVAL

WARNING:
- **Place "NO FIRE" signs near working area.**
- **Be careful not to spill fuel on floor.**

NOTE:
Fuel pump assembly consists of fuel pump and fuel level sensor.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel filler flap lid and remove the fuel filler cap.
3) Disconnect the ground cable from battery.

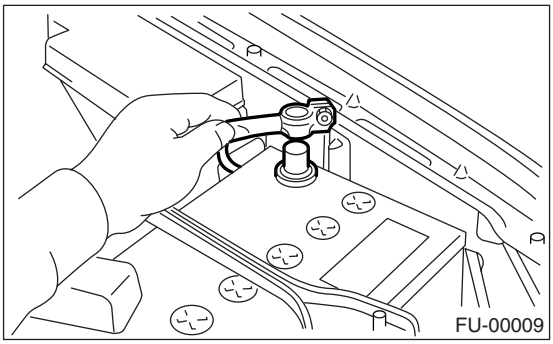
FU-00009

4) Lift-up the vehicle.
5) Drain fuel from fuel tank. Set a container under vehicle and remove the drain plug from fuel tank.

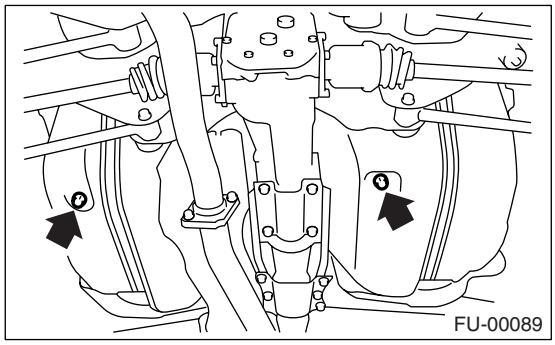
FU-00089

6) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

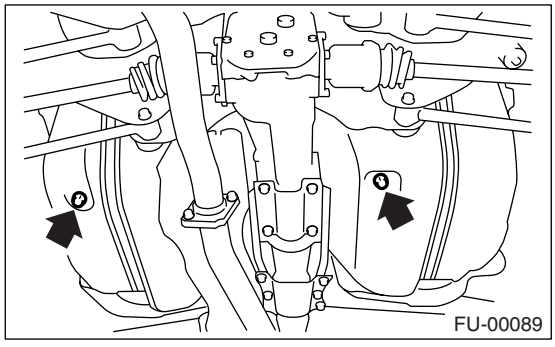
FU-00089

7) Raise the rear seat and turn the floor mat up.
8) Remove the access hole lid.

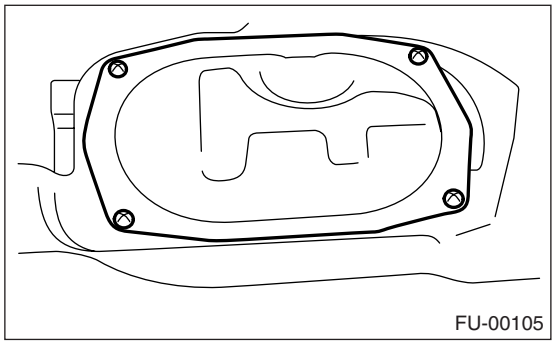
FU-00105

9) Disconnect the connector from fuel pump.

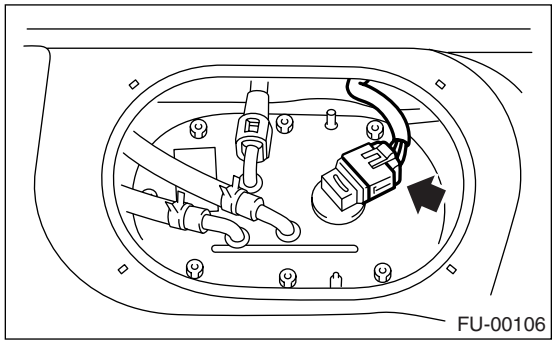
FU-00106

10) Disconnect the quick connector, and disconnect the fuel delivery hose. <Ref. to FU(H4DOTC)-69, Fuel Delivery, Return and Evaporation Lines.>
11) Move the clips, and then disconnect the fuel return hose (A) and jet pump hose (B).

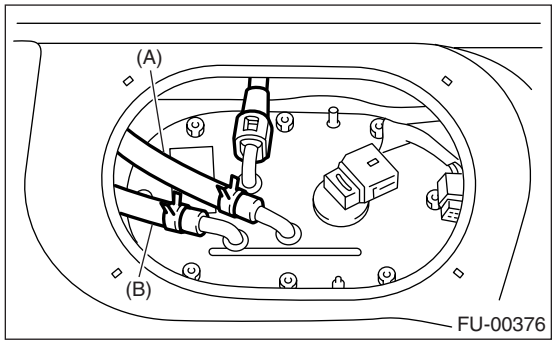

FU-00376

12) Remove the nuts which install the fuel pump assembly onto fuel tank.

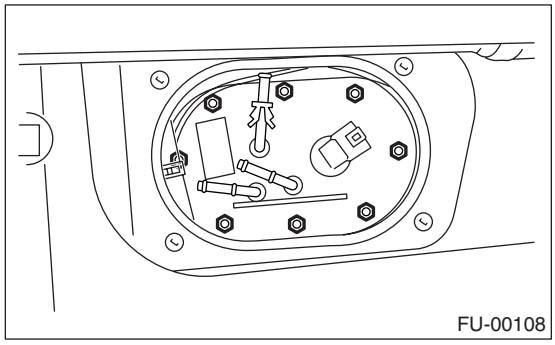
FU-00108

13) Take off the fuel pump assembly from fuel tank.

B: INSTALLATION

Install in the reverse order of removal. Do the following:

NOTE:
Replace the gaskets with new ones.

(1) Ensure sealing portion is free from fuel or foreign particles before installation.
(2) Tighten the nuts to specified torque in alphabetical sequence as shown in the figure.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

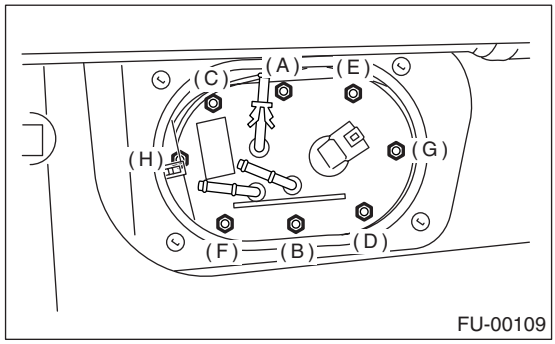

C: INSPECTION

Connect the lead harness to connector terminal of fuel pump, and then apply battery power supply to check whether the pump operates.

WARNING:
• Wipe off the fuel completely.
• Keep the battery as far apart from fuel pump as possible.
• Be sure to turn the battery supply ON and OFF on battery side.
• Do not run the fuel pump for a long time under non-load condition.

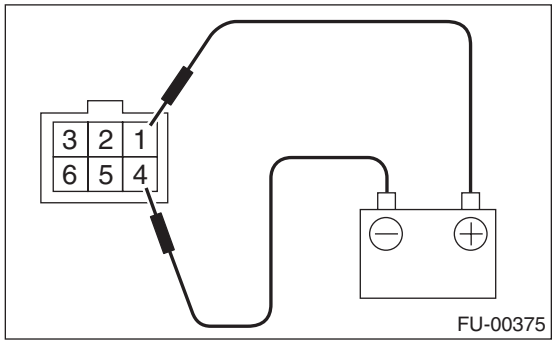

28.Fuel Level Sensor

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

NOTE:
Fuel level sensor is built in fuel pump assembly.

1) Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-61, REMOVAL, Fuel Pump.>
2) Disconnect the connector from fuel pump bracket.

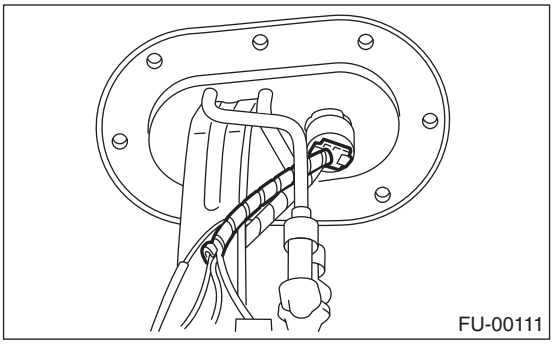

3) Remove the bolt which installs the fuel level sensor on mounting bracket.

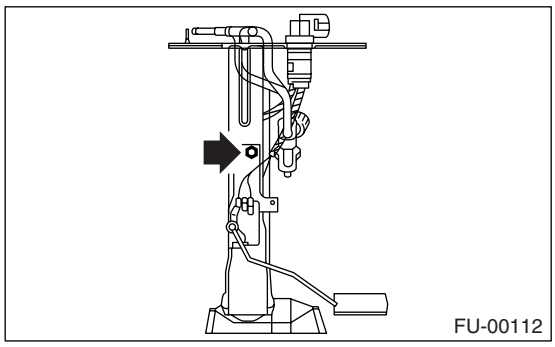

B: INSTALLATION

Install in the reverse order of removal.

29.Fuel Sub Level Sensor

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Disconnect the ground cable from battery.

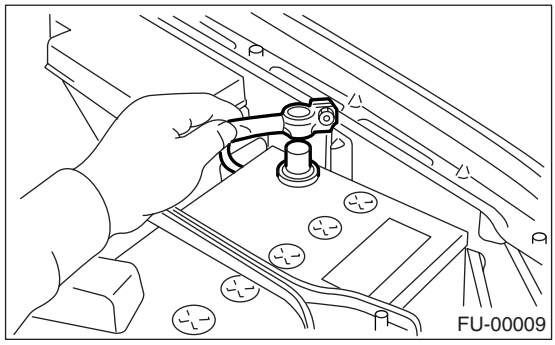

2) Lift-up the vehicle.
3) Drain fuel from fuel tank. Set a container under vehicle and remove the drain plug from fuel tank.

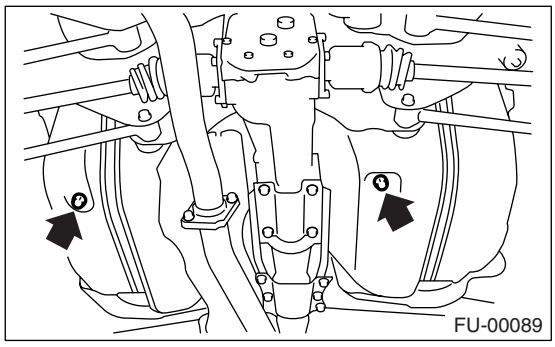

4) Tighten the fuel drain plug.

Tightening torque:
26 N·m (2.7 kgf-m, 19.2 ft-lb)

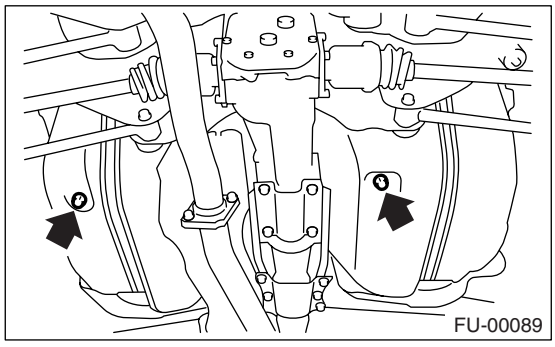

5) Remove the rear seat.
6) Remove the service hole cover.

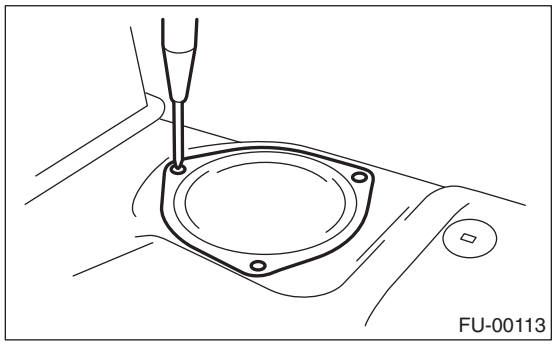

7) Disconnect the connector from fuel sub level sensor.
8) Disconnect the fuel jet pump hose.

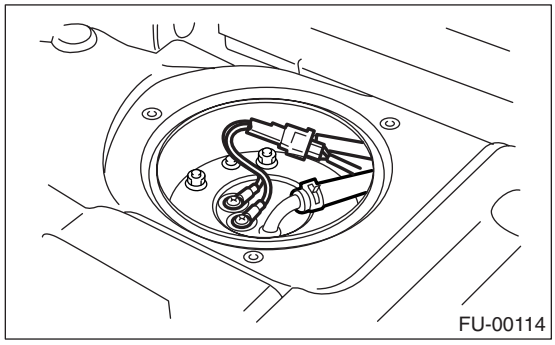

9) Remove the bolts which install the fuel sub level sensor on fuel tank.

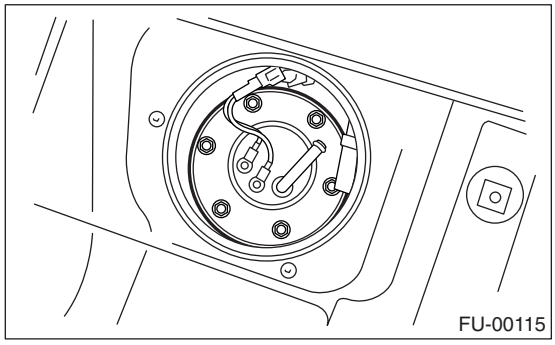

10) Remove the fuel sub level sensor.

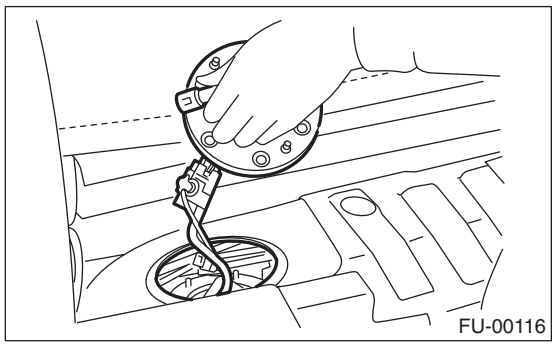

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

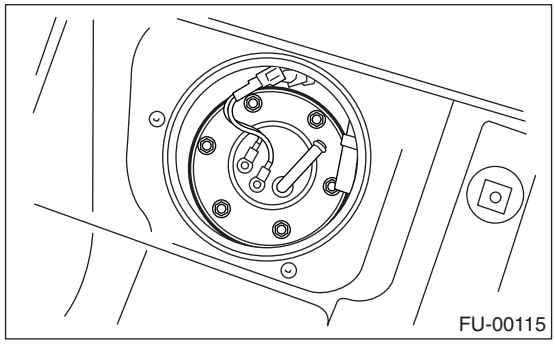

30.Fuel Filter

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Disconnect the fuel delivery hoses from fuel filter.

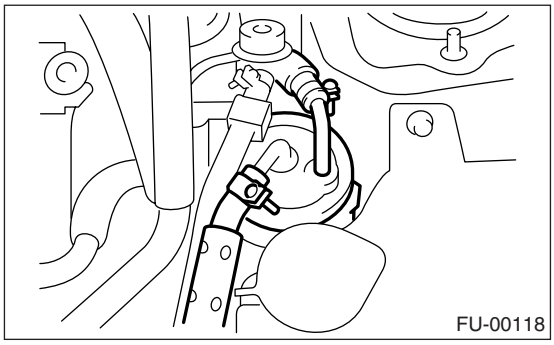

3) Remove the filter from holder.

B: INSTALLATION

CAUTION:
- **If fuel hoses are damaged at connecting portions, replace them with new ones.**
- **If clamps are badly damaged, replace them with new ones.**

1) Install in the reverse order of removal.
2) Tighten the hose clamp screws.

Tightening torque:
1.25 N·m (0.13 kgf-m, 0.94 ft-lb)

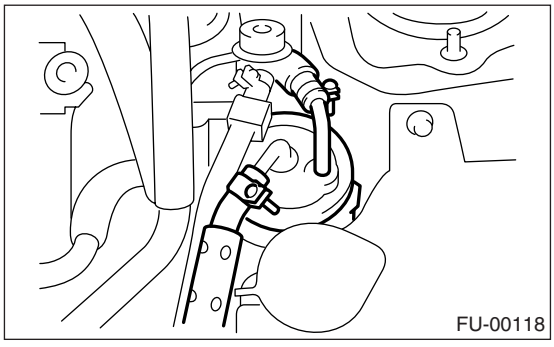

C: INSPECTION

1) Check the inside of fuel filter for dirt and water sediment.
2) If it is clogged, or if replacement interval has been reached, replace it.
3) If water is found in it, shake and expel the water from inlet port.

31.Fuel Cut Valve

A: REMOVAL

WARNING:
- **Place “NO FIRE” signs near working area.**
- **Be careful not to spill fuel on floor.**

1) Remove the fuel tank. <Ref. to FU(H4DOTC)-54, REMOVAL, Fuel Tank.>
2) Move the clip and disconnect the evaporation hose from fuel cut valve.

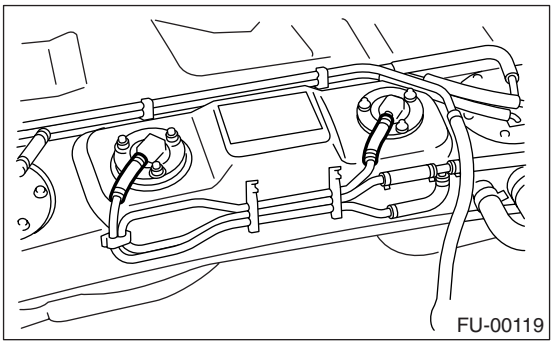

3) Remove the bolts which install the fuel cut valve.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

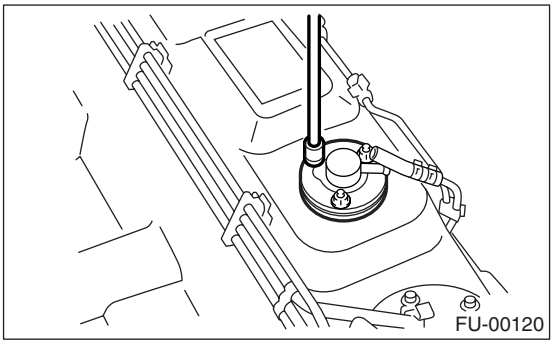

32.Fuel Damper Valve

A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Remove the fuel damper valve from fuel return line.

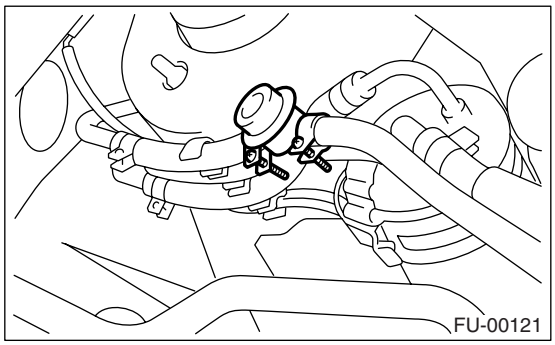

B: INSTALLATION

Install in the reverse order of removal.

33.Fuel Delivery, Return and Evaporation Lines

A: REMOVAL

1) Set the vehicle on a lift.
2) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
3) Open the fuel filler flap lid and remove the fuel filler cap.
4) Remove the floor mat. <Ref. to EI-55, REMOVAL, Floor Mat.>
5) Remove the fuel delivery pipes and hoses, fuel return pipes and hoses, evaporation pipes and hoses.

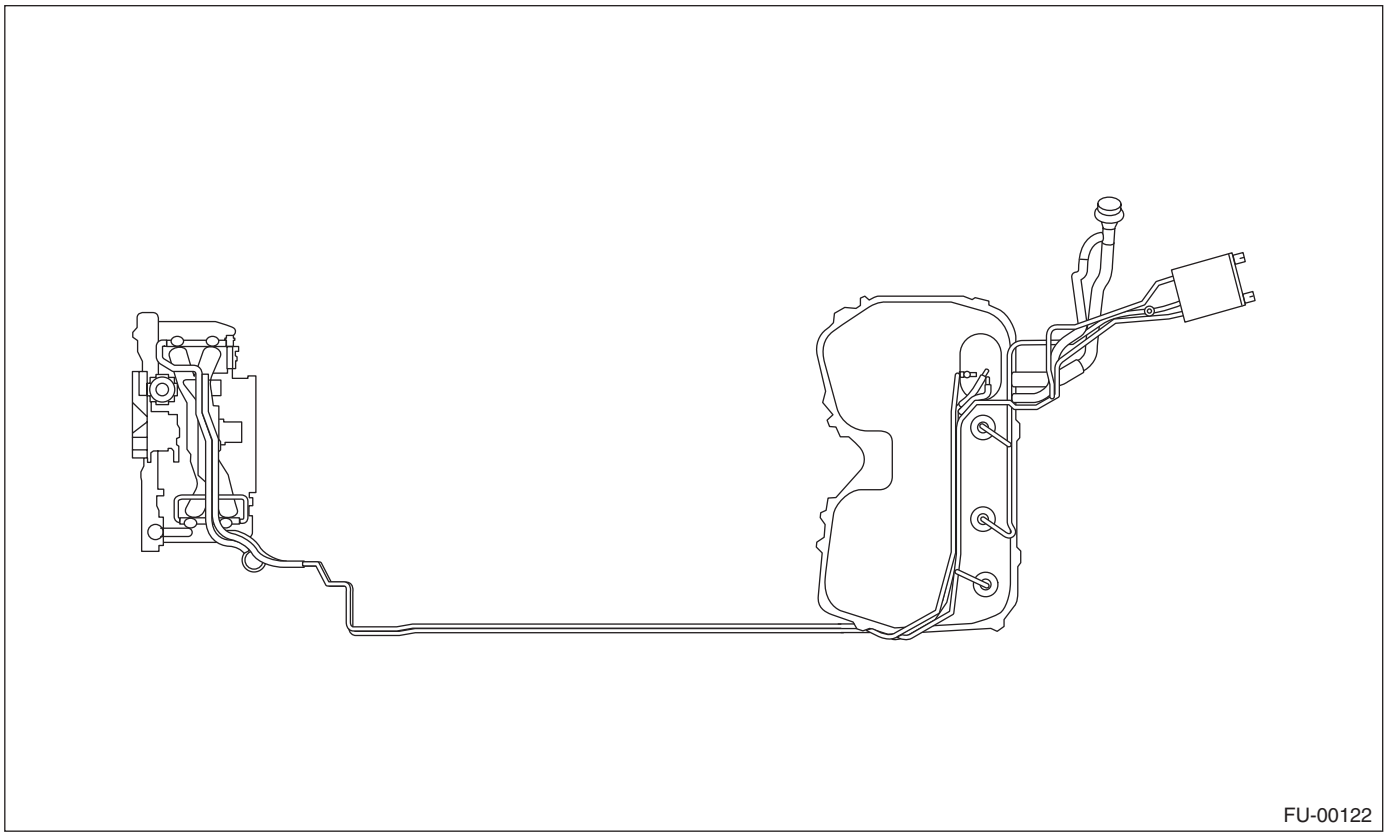
FU-00122

6) In the engine compartment, detach the fuel delivery hoses (A), return hoses (B) and evaporation hoses (C).

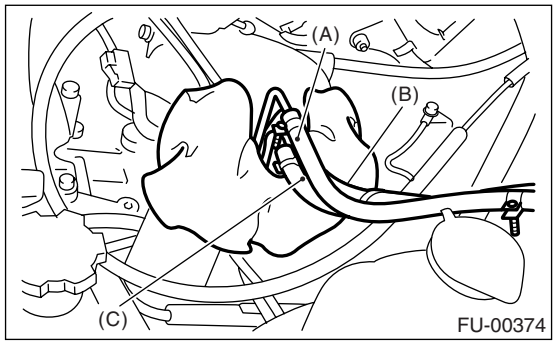

FU-00374

7) Lift-up the vehicle.

8) Disconnect the two-way valve hose (A) from two-way valve and disconnect the canister hose (B) from canister.

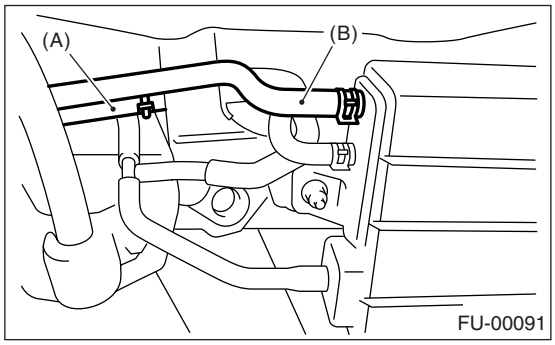

FU-00091

9) Separate the quick connector on fuel delivery line.
(1) Clean the pipe and connector, if they are covered with dust.
(2) Hold the connector (A) and push retainer (B) down.
(3) Pull out the connector (A) from retainer (B).

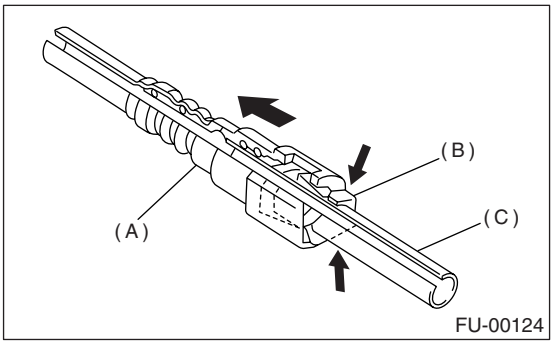

(A) Connector
(B) Retainer
(C) Pipe

B: INSTALLATION

1) Connect the quick connector on fuel delivery line.

NOTE:
- Replace the retainer with a new one.
- Make sure the connected portion is not damaged or has dust. If necessary, clean the seal surface of pipe.

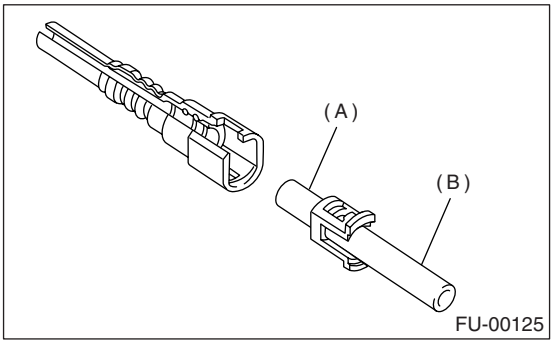

(A) Seal surface
(B) Pipe

(1) Set the new retainer (B) to connector (A).
(2) Push the pipe into connector completely.

NOTE:
At this time, two clicking sounds are heard.

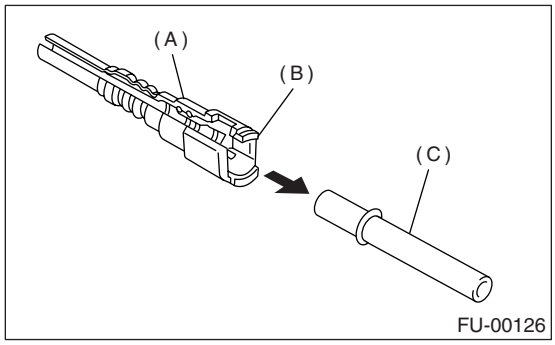

(A) Connector
(B) Retainer
(C) Pipe

CAUTION:
• Pull the connector to ensure it is connected securely.
• Ensure the two retainer pawls are engaged in their mating positions in connector.
• Be sure to inspect the hoses and their connections for any leakage of fuel.

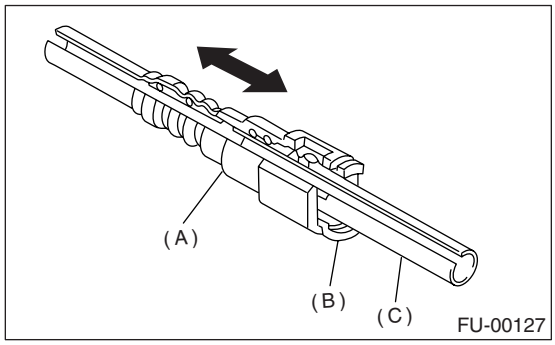

(A) Connector
(B) Retainer
(C) Pipe

2) Connect the fuel delivery hose to pipe with an overlap of 20 to 25 mm (0.79 to 0.98 in).
Type A: When the fitting length is specified.
Type B: When the fitting length is not specified.

ℓ : 2.5±1.5 mm (0.098±0.059 in)

L: 22.5±2.5 mm (0.886±0.098 in)

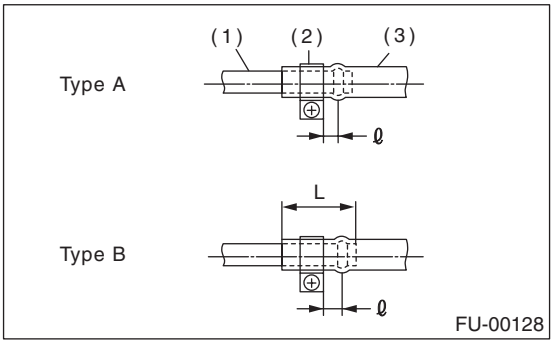

(1) Fitting
(2) Clamp
(3) Hose

3) Connect the evaporation hose to pipe by approx. 15 mm (0.59 in) from hose end.

L = 17.5±2.5 mm (0.689±0.098 in)

CAUTION:
Be sure to inspect the hoses and their connections for any leakage of fuel.

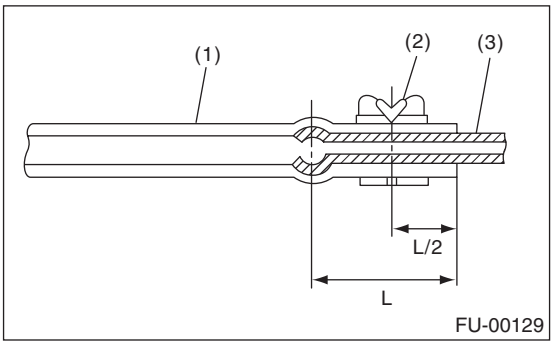

(1) Hose
(2) Clip
(3) Pipe

C: INSPECTION

1) Make sure there are no cracks on fuel pipes and fuel hoses.
2) Make sure the fuel pipe and fuel hose connections are tightened firmly.

34.Fuel System Trouble in General

A: INSPECTION

Trouble and possible cause			Corrective action
1. Insufficient fuel supply to injector			
1)	Fuel pump will not operate		
	❍	Defective terminal contact	Inspect connections, especially ground, and tighten securely.
	❍	Trouble in electromagnetic or electronic circuit parts	Replace the fuel pump.
2)		Lowering of fuel pump function	Replace the fuel pump.
3)		Clogged dust or water in fuel filter	Replace the fuel filter, clean or replace fuel tank.
4)		Clogged or bent fuel pipe or hose	Clean, correct or replace the fuel pipe or hose.
5)		Air is mixed in fuel system	Inspect or retighten each connection part.
6)		Clogged or bent breather tube or pipe	Clean, correct or replace the air breather tube or pipe.
7)		Damaged diaphragm of pressure regulator	Replace.
2. Leakage or blow out fuel			
1)		Loosened joints of fuel pipe	Retightening.
2)		Cracked fuel pipe, hose and fuel tank	Replace.
3)		Defective welding part on fuel tank	Replace.
4)		Defective drain packing of fuel tank	Replace.
5)		Clogged or bent air breather tube or air vent tube	Clean, correct or replace the air breather tube or air vent tube.
3. Gasoline smell inside of compartment			
1)		Loose joints at air breather tube, air vent tube and fuel filler pipe	Retightening.
2)		Defective packing air tightness on fuel saucer	Correct or replace the packing.
3)		Cracked fuel separator	Replace the separator.
4)		Inoperative fuel pump modulator or circuit	Replace.
4. Defective fuel meter indicator			
1)		Defective operation of fuel level sensor	Replace.
2)		Defective operation of fuel meter	Replace.
5. Noise			
1)		Large operation noise or vibration of fuel pump	Replace.

NOTE:
• When the vehicle is left unattended for an extended period of time, water may accumulate in the fuel tank. To prevent water condensation.
(1) Top off the fuel tank or drain the fuel completely.
(2) Drain the water condensation from the fuel filter.
• Refilling the fuel tank.
Refill the fuel tank while there is still some fuel left in the tank.
• Protecting the fuel system against freezing and water condensation.
(3) Cold areas:
In snow-covered areas, mountainous areas, skiing areas, etc. where ambient temperatures drop below 0°C (32°F) throughout the winter season, use an anti-freeze solution in the cooling system. Refueling will also complement the effect of anti-freeze solution each time the fuel level drops to about one-half. After the winter season, drain the water which may have accumulated in the fuel filter and fuel tank in the manner same as that described under “Affected areas” below.
(4) Affected areas:
When the water condensation is notched in the fuel filter, drain the water from both the fuel filter and fuel tank or use a water removing agent (or anti-freeze solution) in the fuel tank.
• Observe the instructions, notes, etc., indicated on the label affixed to the anti-freeze solution (water removing agent) container before use.

EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)
EC(H4DOTC)

Page

1. General Description 2
2. Front Catalytic Converter 3
3. Rear Catalytic Converter 4
4. Precatalytic Converter 5
5. Canister 6
6. Purge Control Solenoid Valve 7
7. Two-way Valve 8

1. General Description

A: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Front Catalytic Converter

A: REMOVAL

1) Remove the front catalytic converter and center exhaust pipe as a unit. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
2) Separate the front catalytic converter (A) from rear catalytic converter (B). (Except for Australia model)

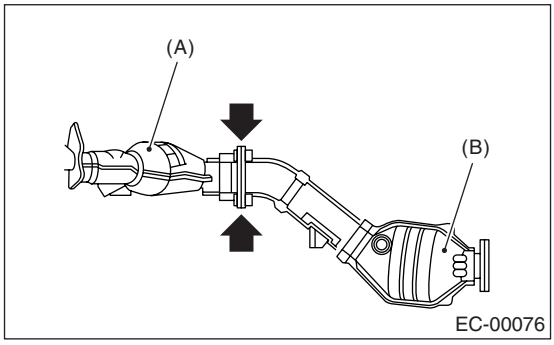

B: INSTALLATION

NOTE:
Replace the gaskets with new ones.
Install in the reverse order of removal.

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

3. Rear Catalytic Converter

A: REMOVAL

1) Remove the rear catalytic converter and center exhaust pipe as a unit. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
2) Separate the rear catalytic converter (B) from front catalytic converter (A). (Except for Australia model)

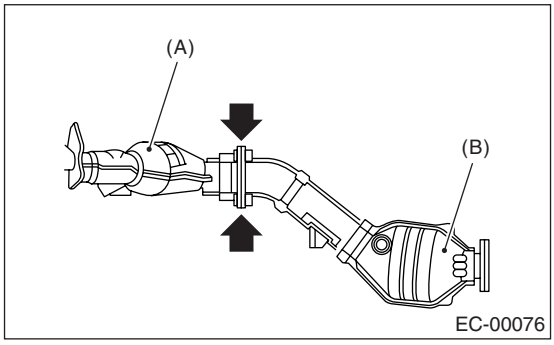

B: INSTALLATION

NOTE:
Replace the gaskets with new ones.
Install in the reverse order of removal.

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

4. Precatalytic Converter

A: REMOVAL

NOTE:
Precatalytic converter is equipped on models except for STi and Australia model.

Precatalytic converter (A) is built in the joint pipe. Refer to the removal of joint pipe for removal procedure. <Ref. to EX(H4DOTC)-13, REMOVAL, Joint Pipe.>

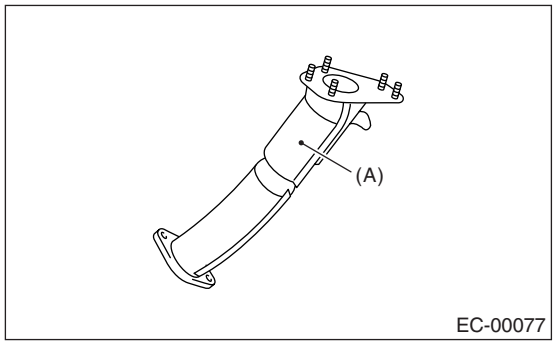

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.

5. Canister

A: REMOVAL

1) Lift-up the vehicle.
2) Loosen the two clamps which hold the two canister hoses, and then disconnect the three evaporation hoses from canister.

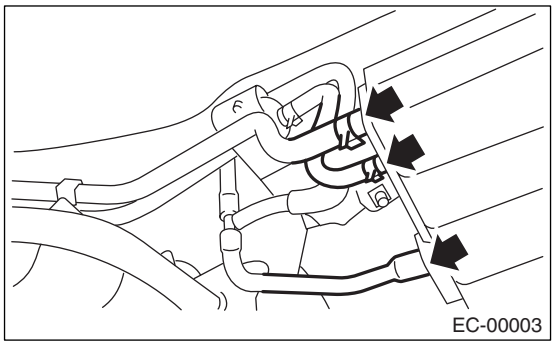

3) Remove the canister from body.

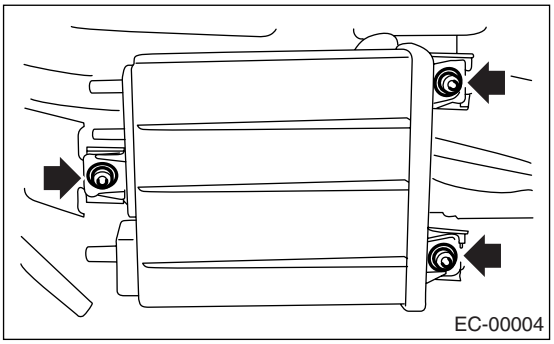

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:
23 N·m (2.3 kgf-m, 17 ft-lb)

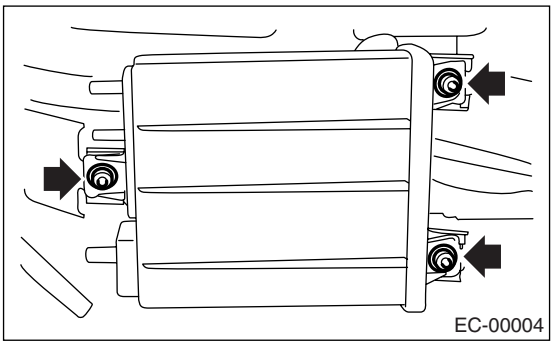

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.

6. Purge Control Solenoid Valve

A: REMOVAL

1) Disconnect the ground cable from battery.

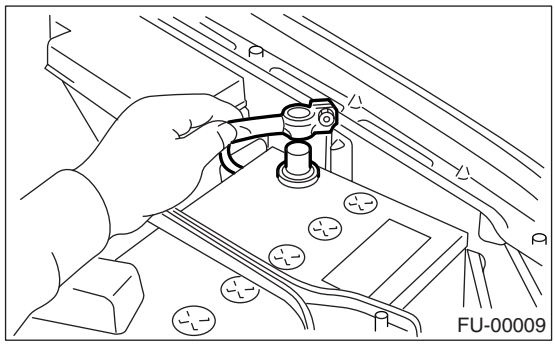

2) Disconnect the connector and hoses from purge control solenoid valve.
3) Remove the bolt which installs the purge control solenoid valve onto intake manifold.

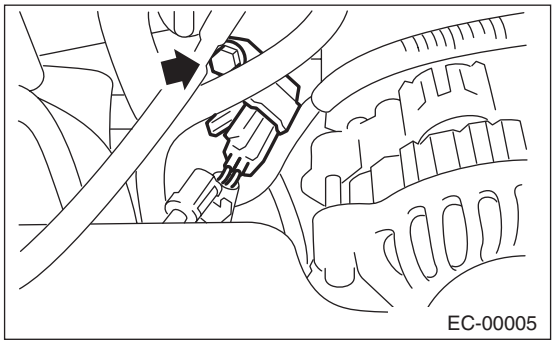

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

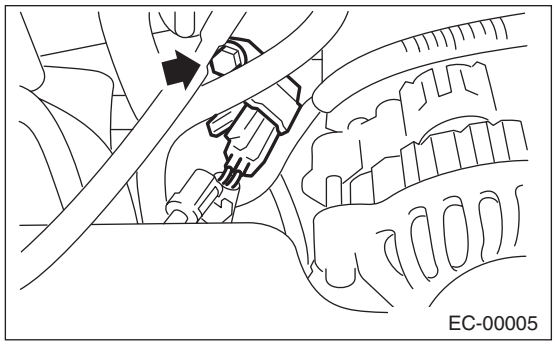

NOTE:
Connect the evaporation hoses as shown in the figure.

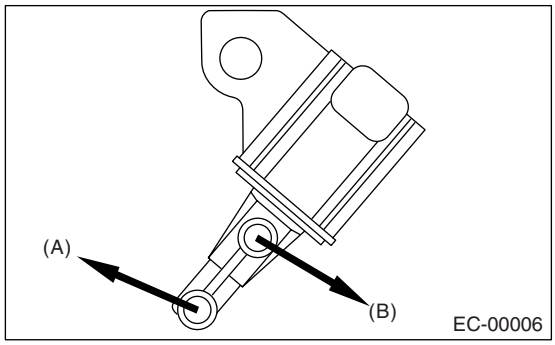

(A) To intake manifold
(B) To purge valve (Except for Australia model)
To fuel pipe (Australia model)

C: INSPECTION

Make sure the hoses are not cracked or loose.

7. Two-way Valve

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the canister from body. <Ref. to EC(H4DOTC)-6, REMOVAL, Canister.>
3) Remove the two-way valve with bracket as a unit from body.

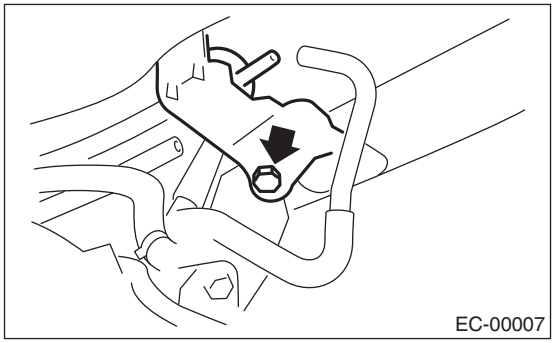

4) Remove the two-way valve from bracket.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure that the hoses are not cracked or loose.

INTAKE (INDUCTION)

IN(H4DOTC)

		Page
1.	General Description	2
2.	Air Cleaner	8
3.	Air Intake Duct	9
4.	Intake Duct	10
5.	Intercooler	11
6.	Turbocharger	13
7.	Air By-pass Valve	15
8.	Resonator Chamber	16
9.	Intercooler Water Spray Tank	17
10.	Intercooler Water Spray Nozzle	18

1. General Description

A: COMPONENT

1. AIR CLEANER

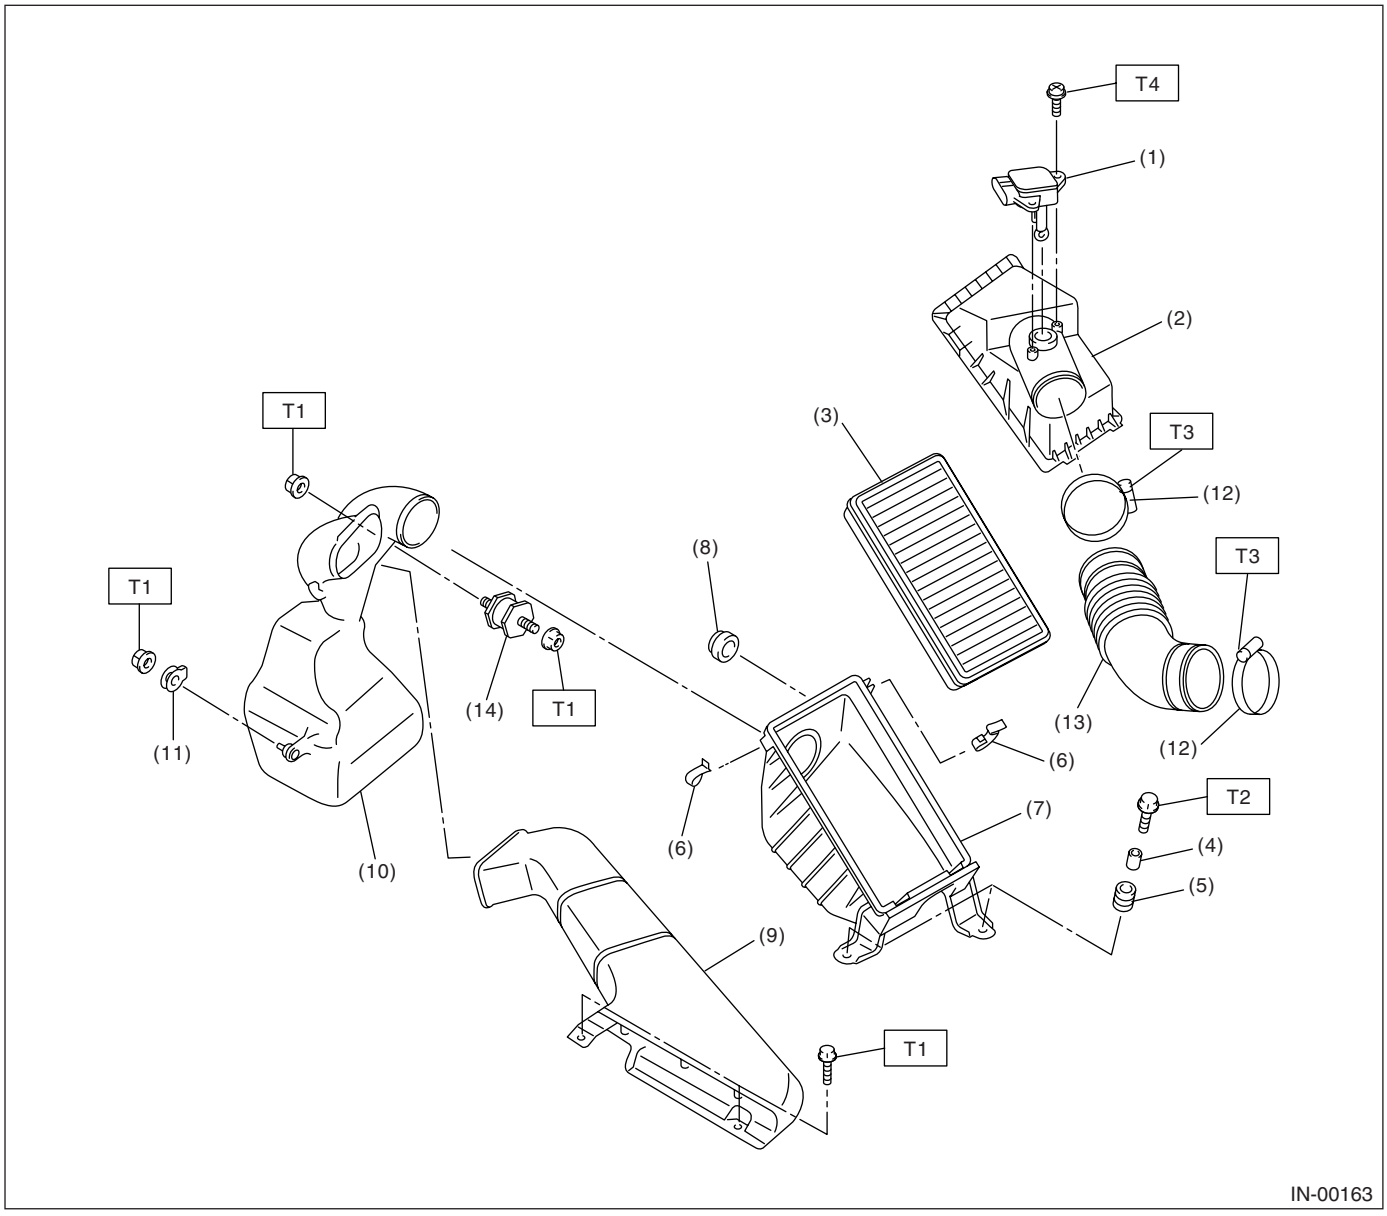

(1) Mass air flow and intake air temperature sensor
(2) Air cleaner upper cover
(3) Air cleaner element
(4) Spacer
(5) Bushing
(6) Clip
(7) Air cleaner lower case
(8) Cushion rubber
(9) Air intake duct
(10) Resonator chamber ASSY
(11) Cushion rubber
(12) Clamp
(13) Air intake boot
(14) Cushion

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 33 (3.4, 24.6)
T3: 2.5 (0.25, 1.8)
T4: 1.7 (0.17, 1.2)

2. INTAKE DUCT

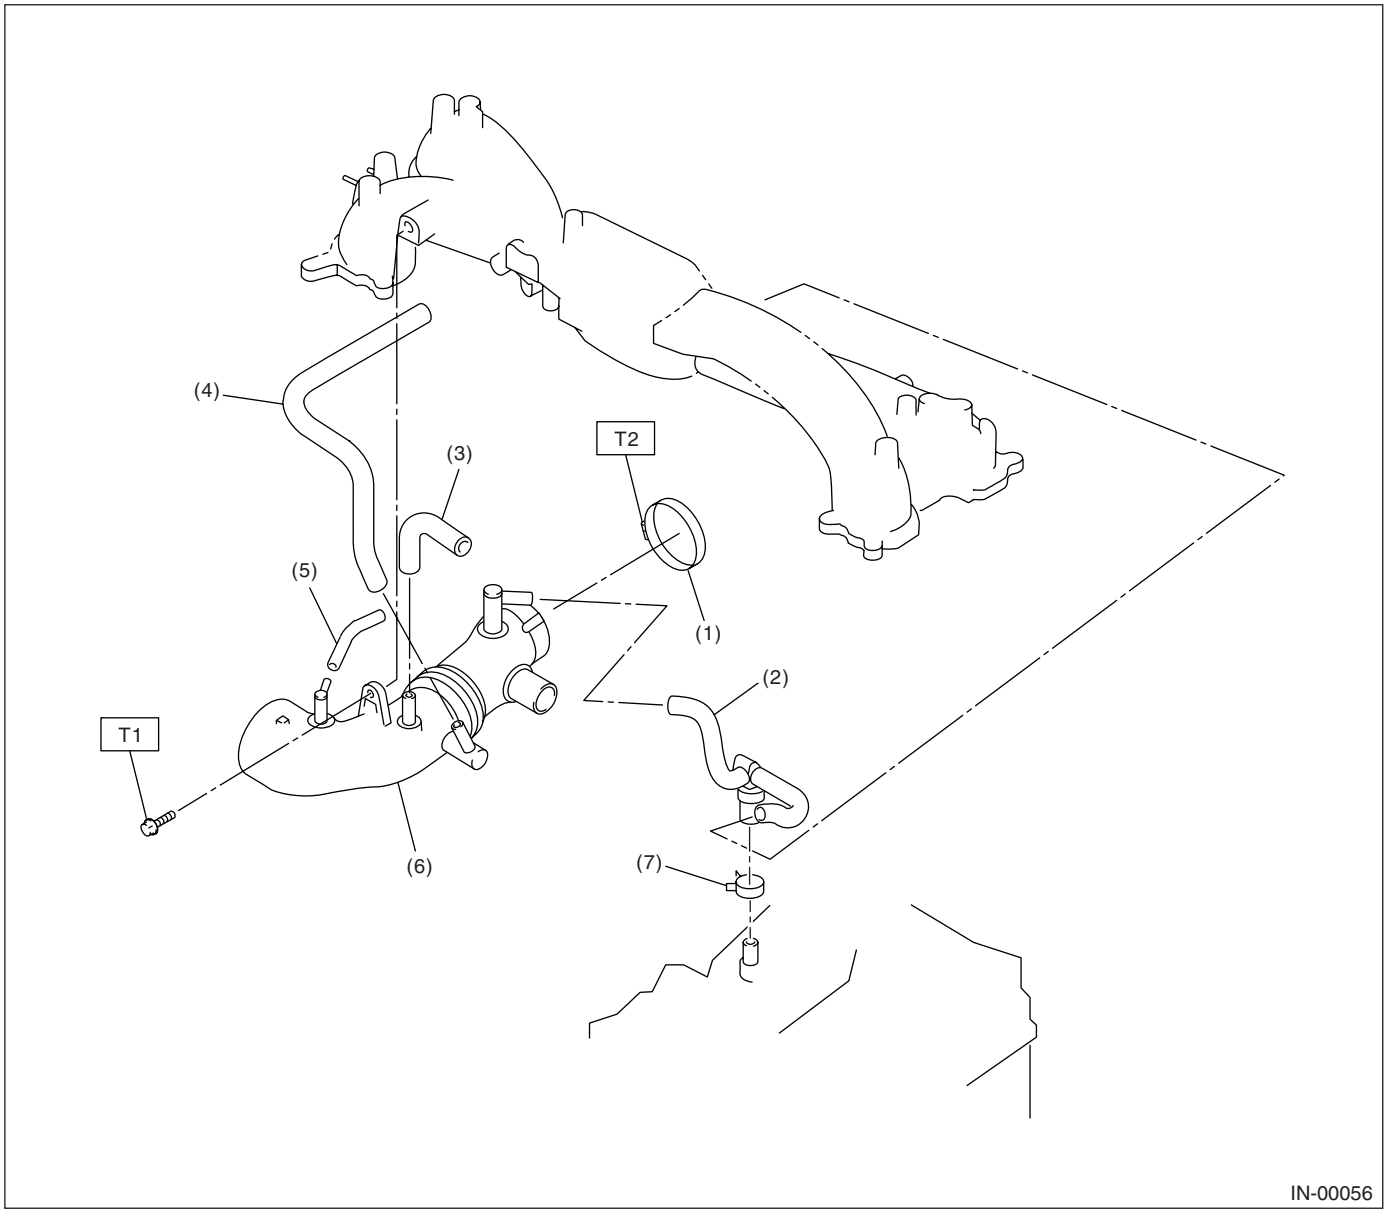

(1) Clamp
(2) PCV hose ASSY
(3) Air by-pass hose A
(4) Air by-pass hose B
(5) Air by-pass hose C
(6) Intake duct
(7) Clamp

Tightening torque: N·m (kgf-m, ft-lb)
T1: 19 (1.9, 13.7)
T2: 3 (0.3, 2.2)

3. INTERCOOLER

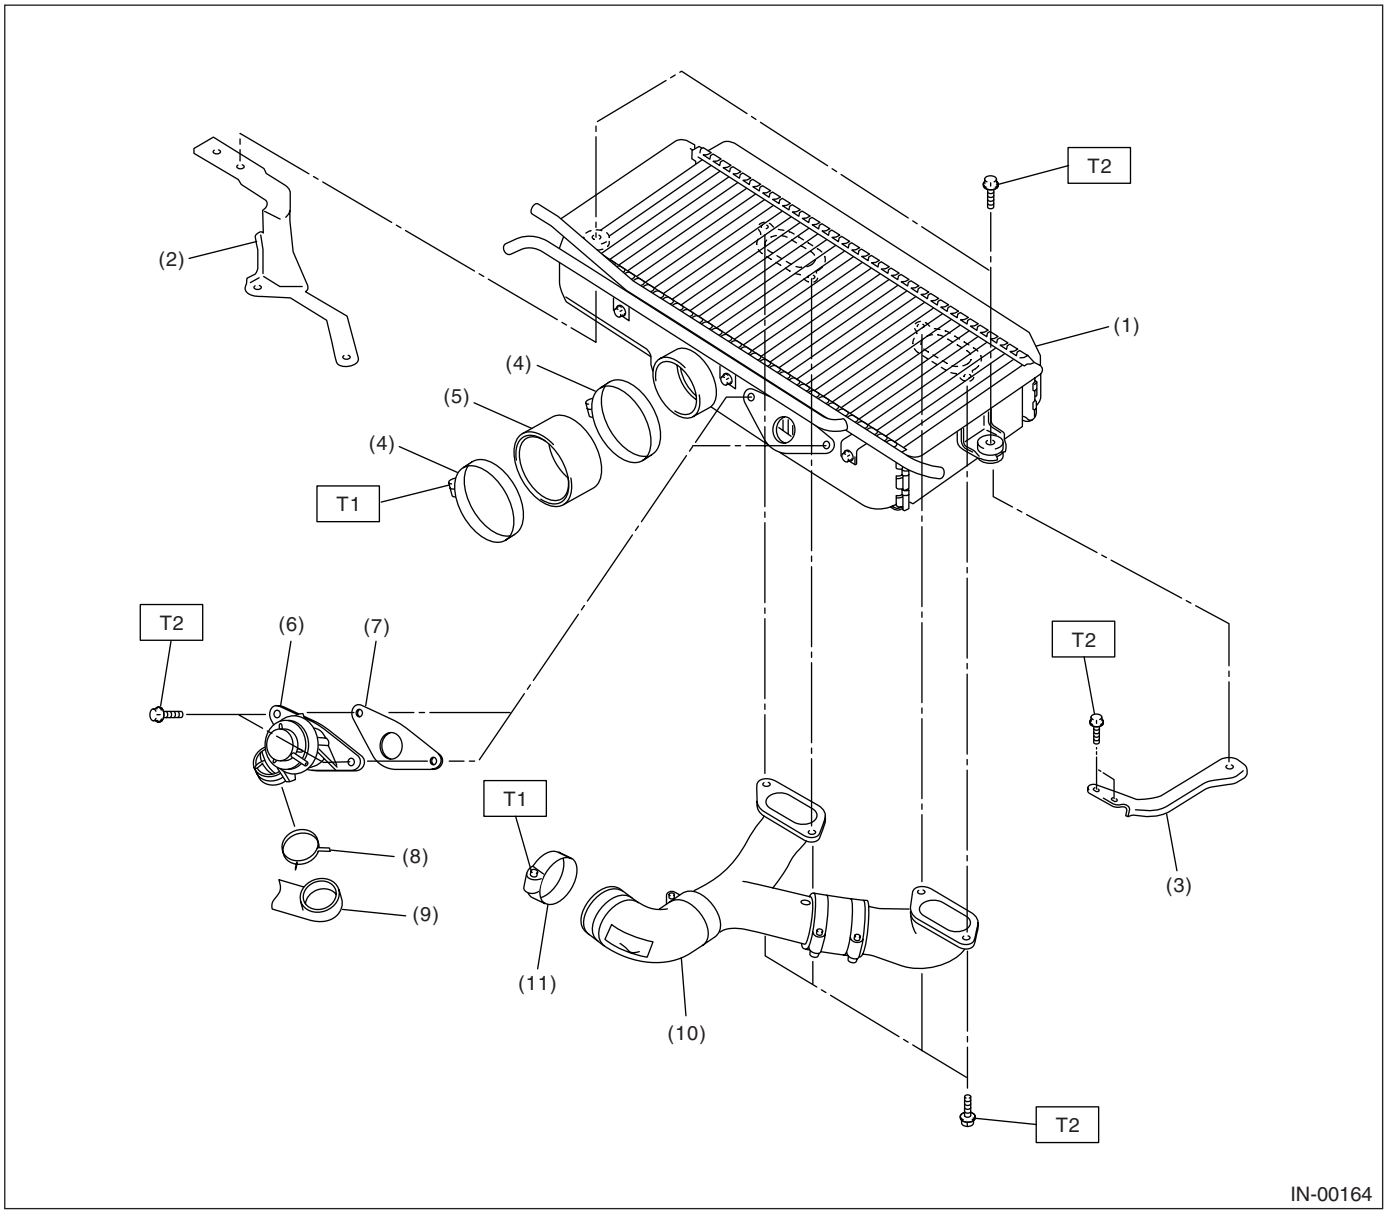

(1) Intercooler
(2) Intercooler bracket RH
(3) Intercooler bracket LH
(4) Clamp
(5) Air intake duct
(6) Air by-pass valve
(7) Gasket
(8) Clamp
(9) Air by-pass hose A
(10) Intercooler duct
(11) Clamp

Tightening torque: N·m (kgf-m, ft-lb)
T1: 3 (0.3, 2.2)
T2: 16 (1.6, 11.6)

4. TURBOCHARGER

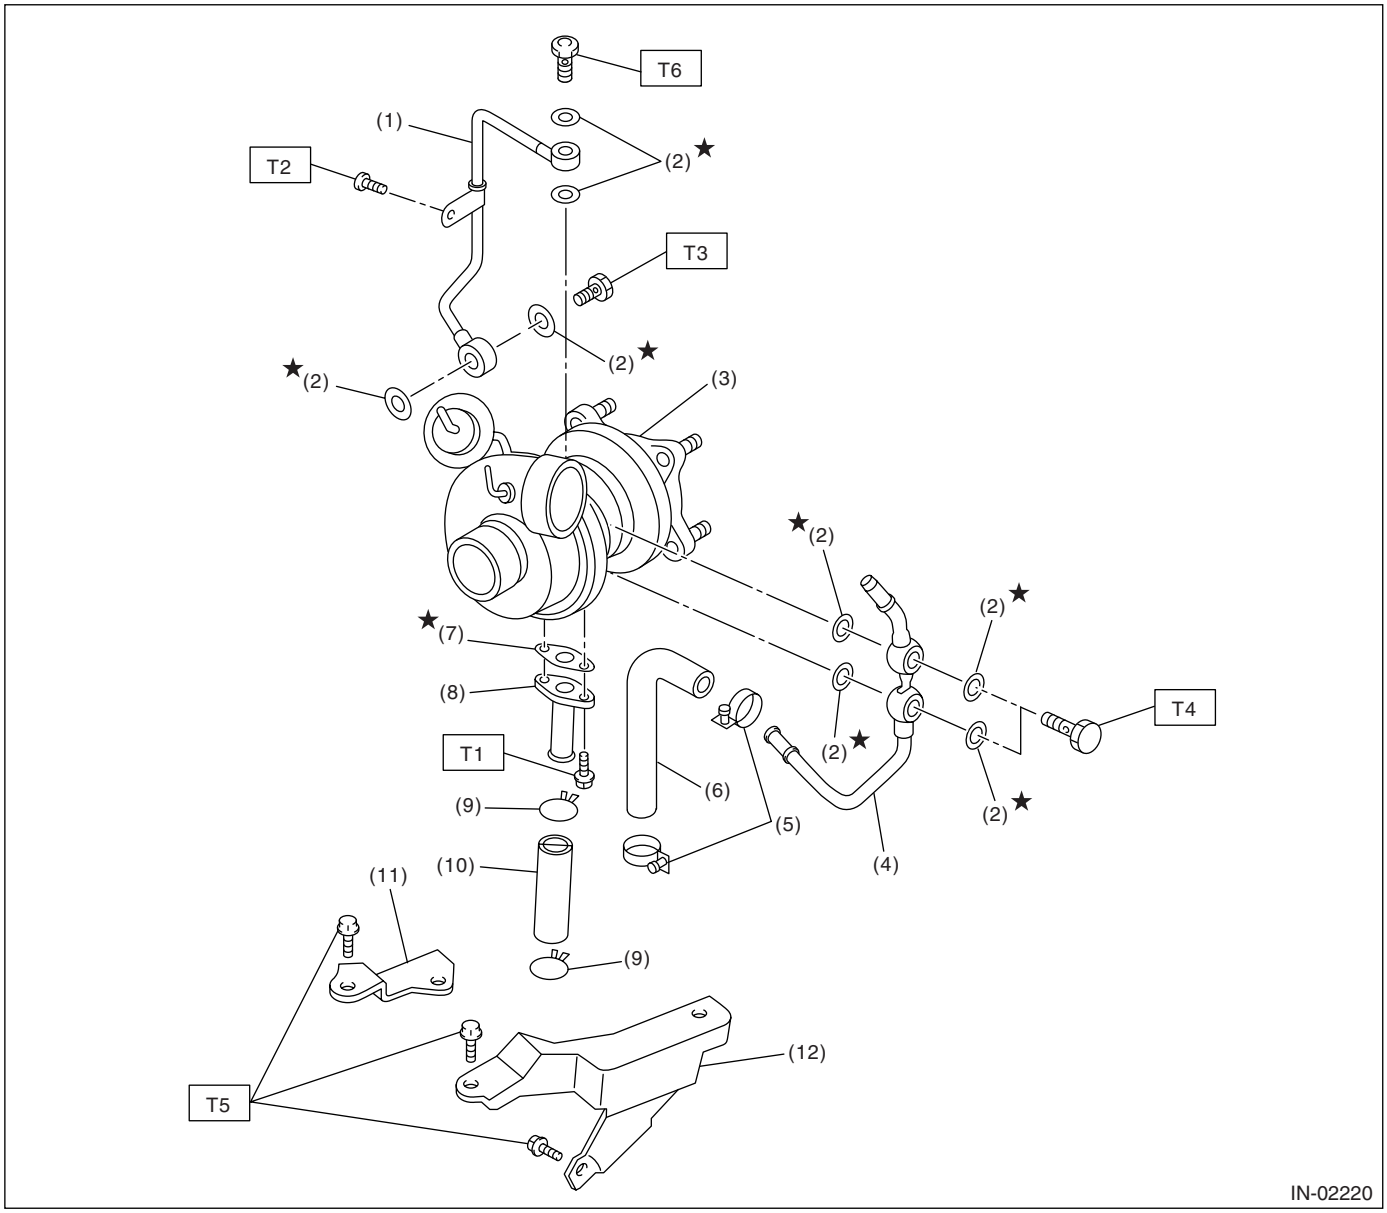

(1)	Oil inlet pipe	(7)	Gasket
(2)	Metal gasket	(8)	Oil outlet pipe
(3)	Turbocharger	(9)	Clip
(4)	Water pipe	(10)	Oil outlet hose
(5)	Clamp	(11)	Turbocharger bracket RH
(6)	Engine coolant hose	(12)	Turbocharger bracket LH

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 4.9 (0.50, 3.6)
T3: 29 (3.0, 21.7)
T4: 33 (3.4, 24.6)
T5: 16 (1.6, 11.6)

5. INTERCOOLER WATER SPRAY TANK

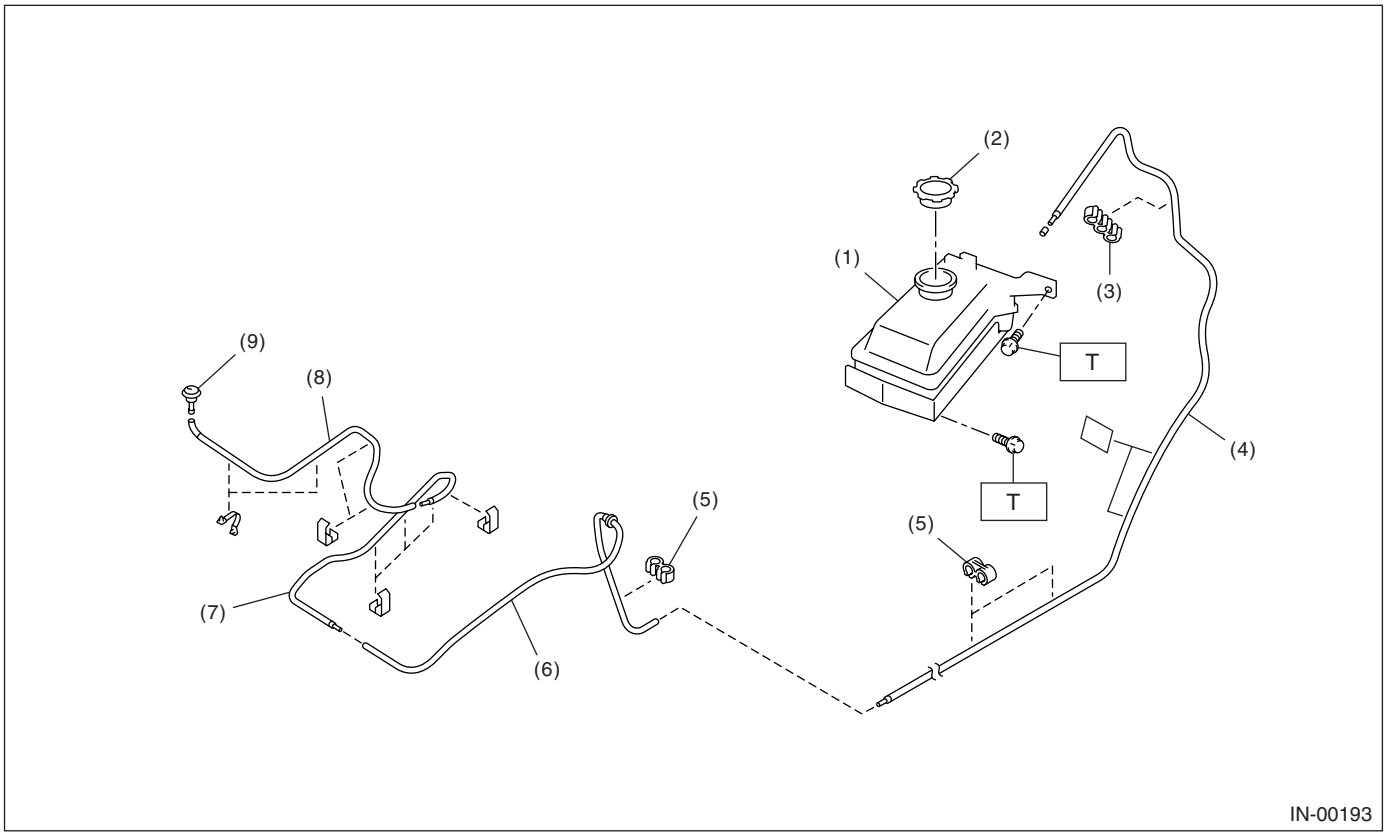

(1) Water tank ASSY
(2) Water tank cap
(3) Clamp
(4) Rear hose
(5) Clamp
(6) Center hose
(7) Front hose
(8) Intercooler hose
(9) Nozzle

Tightening torque: N·m (kgf-m, ft-lb)
T: 6.0 (0.61, 4.4)

B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensor or units, be sure to disconnect the ground cable from battery.

2. Air Cleaner

A: REMOVAL

1) Disconnect the ground cable from battery.

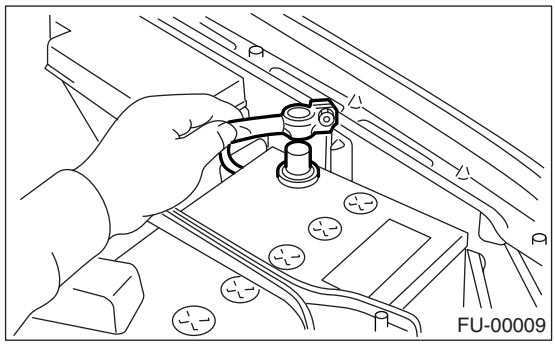

2) Disconnect the connector from mass air flow sensor.

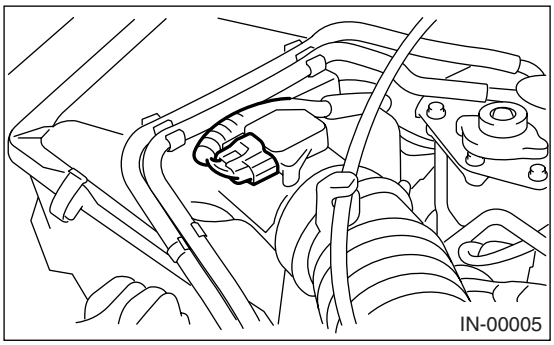

3) Loosen the clamp (A) which connects the air intake boot and intake duct.
4) Remove the clip (B) from air cleaner upper cover.

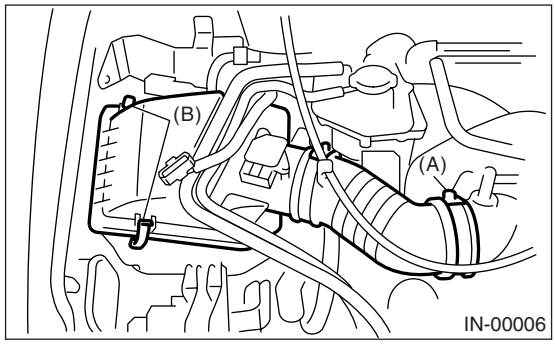

5) Remove the air cleaner upper cover.
6) Remove the air cleaner element.
7) Remove the air cleaner lower case.

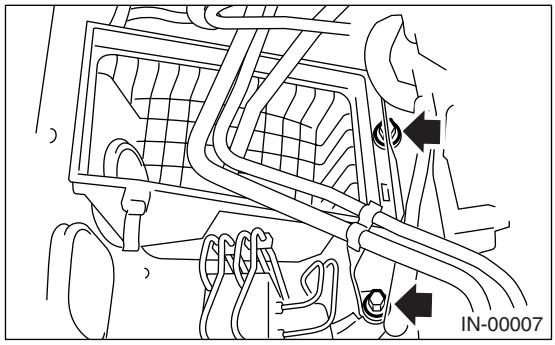

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
33 N·m (3.4 kgf-m, 24.6 ft-lb)

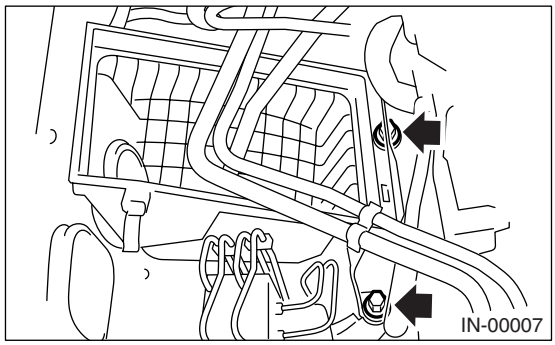

NOTE:
Before installing the air cleaner upper cover, align the holes with protruding portions of air cleaner lower case, then secure the upper cover to the lower case.

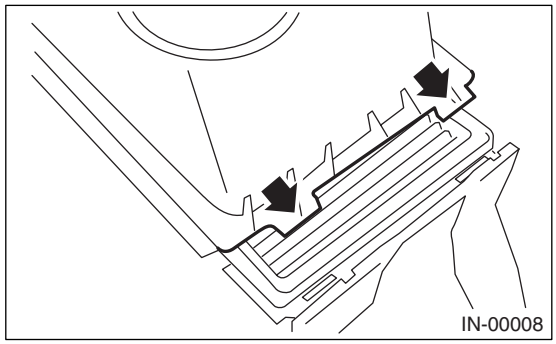

C: INSPECTION

Replace it if excessively damaged or dirty.

3. Air Intake Duct

A: REMOVAL

Remove the bolts which install the air intake duct on front side of body.

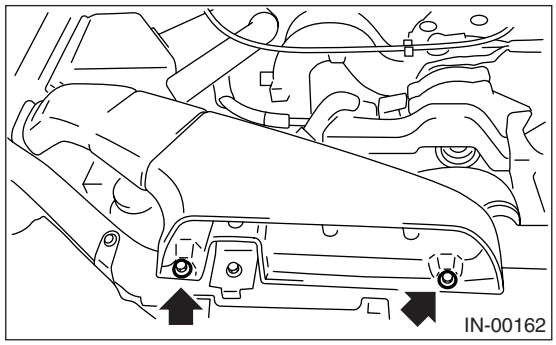

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

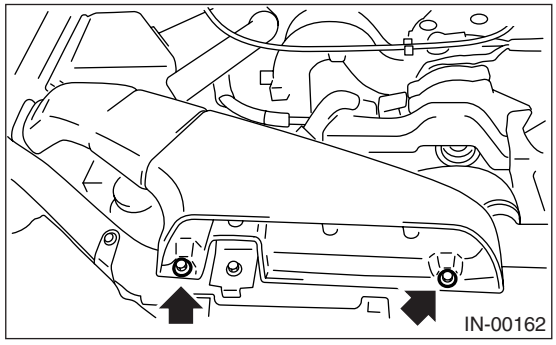

C: INSPECTION

1) Inspect for cracks and loose connections.
2) Inspect that no foreign objects are mixed in air intake duct.

4. Intake Duct

A: REMOVAL

1) Disconnect the ground cable from battery.

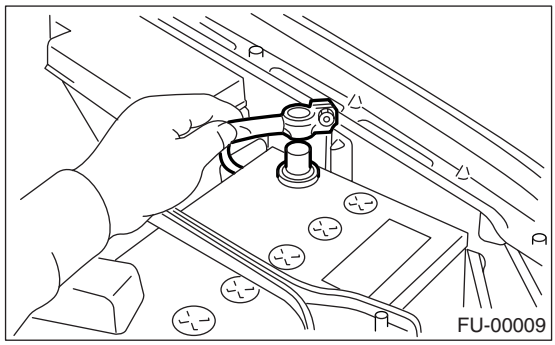

2) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
3) Remove the sensor, engine harness and fuel pipe attached to intake manifold. <Ref. to FU(H4DOTC)-20, DISASSEMBLY, Intake Manifold.>
4) Remove the intake duct from intake manifold.

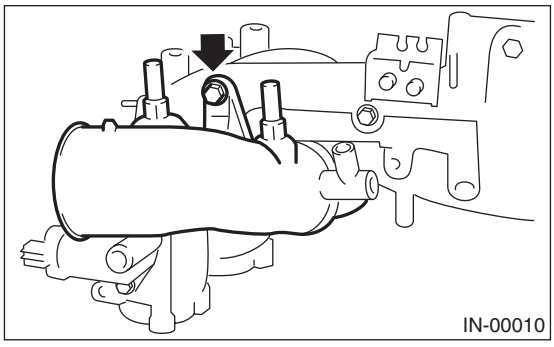

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

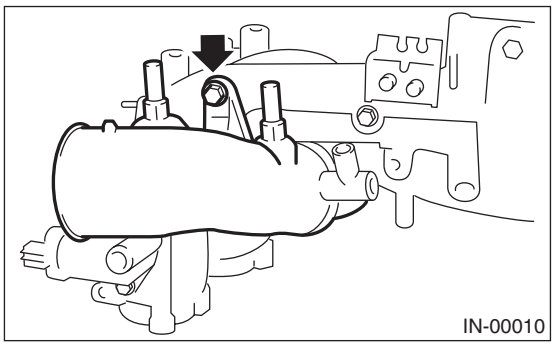

5. Intercooler

A: REMOVAL

1) Disconnect the air by-pass hoses from intercooler.

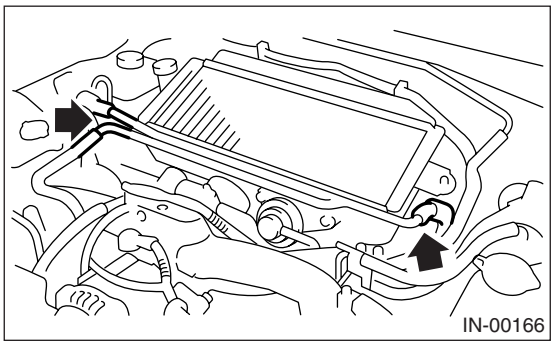

2) Separate the air by-pass valve from intercooler.

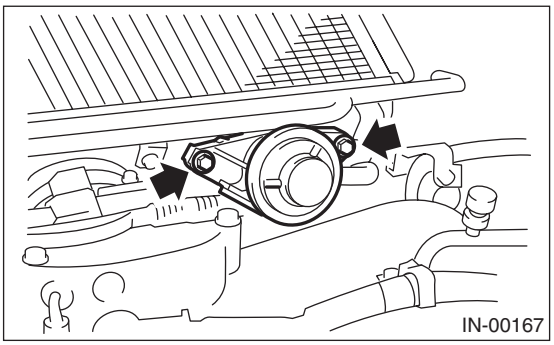

3) Remove the bolts which secure the intercooler to bracket.

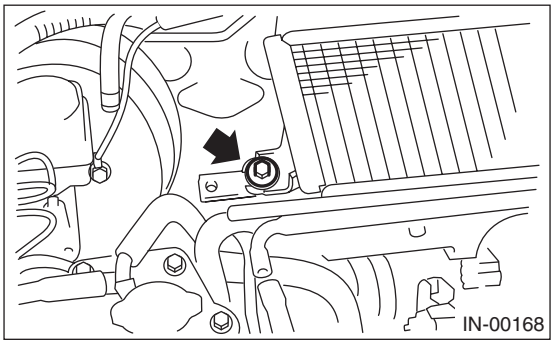

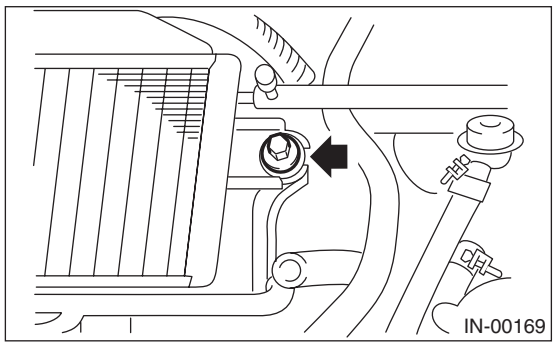

4) Separate the intercooler air duct from turbocharger.

5) Separate the intercooler from throttle body.

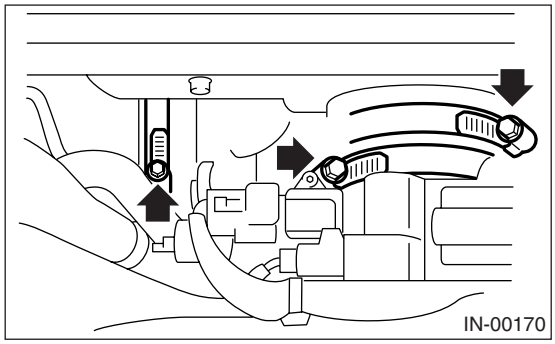

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
16 N·m (1.6 kgf-m, 11.6 ft-lb)

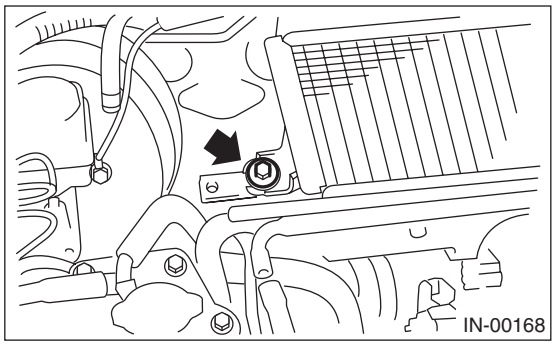

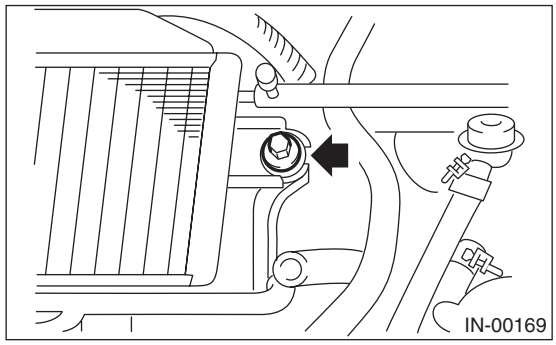

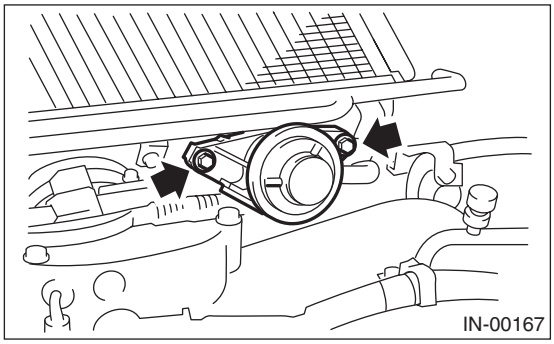

C: DISASSEMBLY

Remove the intercooler ducts from intercooler.

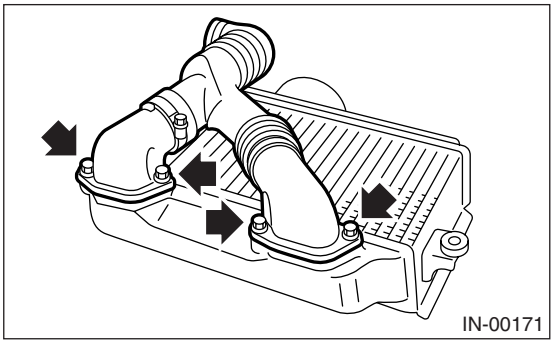

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:
16 N·m (1.6 kgf-m, 11.7 ft-lb)

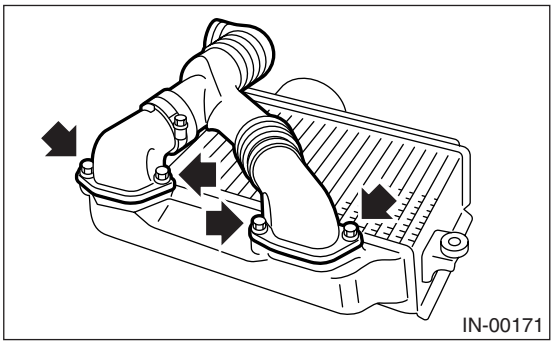

6. Turbocharger

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

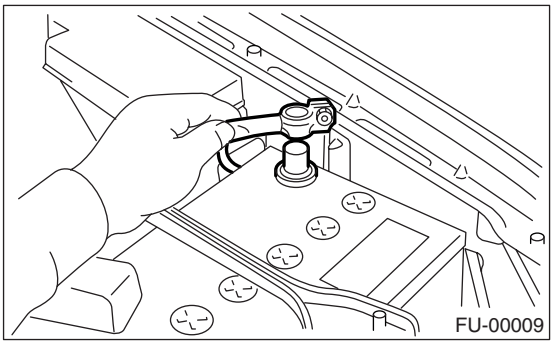

3) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
4) Lower the vehicle.
5) Separate the turbocharger joint pipe from turbocharger.

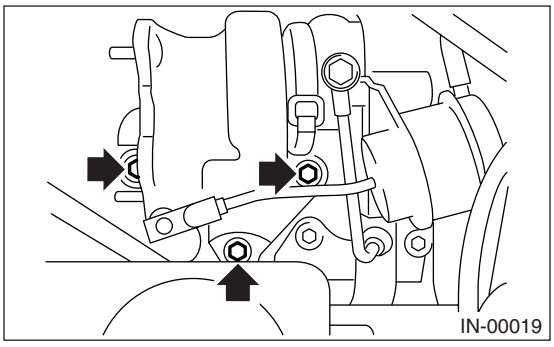

6) Disconnect the engine coolant hose which is connected to coolant filler tank.

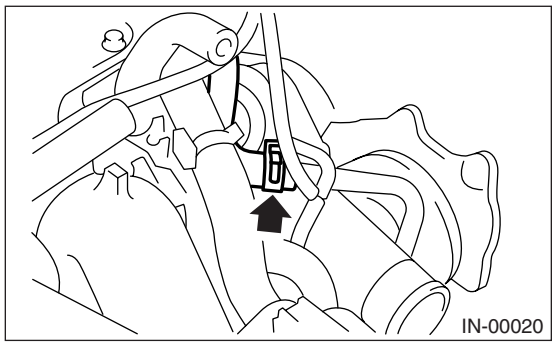

7) Loosen the clamp which secures the turbocharger to intake duct.

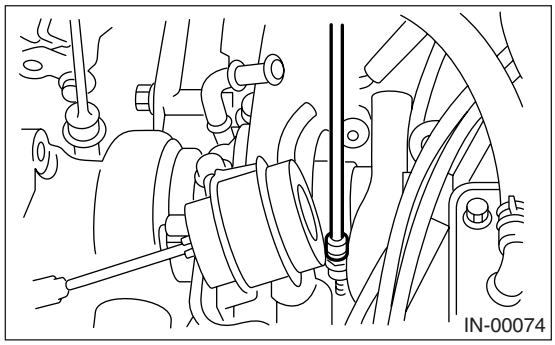

8) Remove the bolt which secures the bracket of oil pipe to turbocharger.
9) Remove the oil pipe from turbocharger.

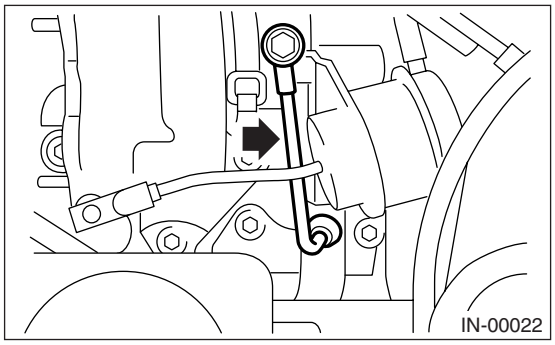

10) Disconnect the engine coolant hose.
11) Remove the turbocharger bracket.

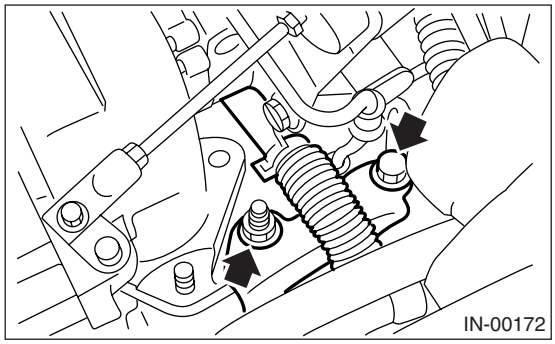

12) Disconnect the oil outlet hose from pipe.

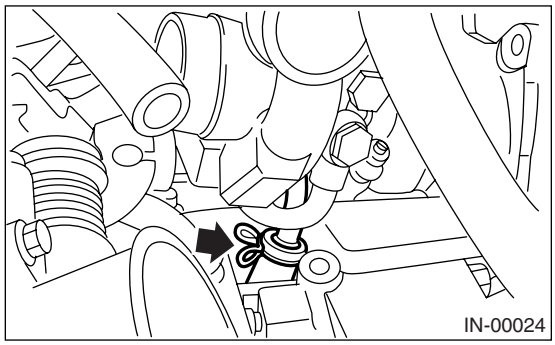

13) Take out the turbocharger from engine compartment.

B: INSTALLATION

1) Connect the oil outlet hose to outlet pipe.

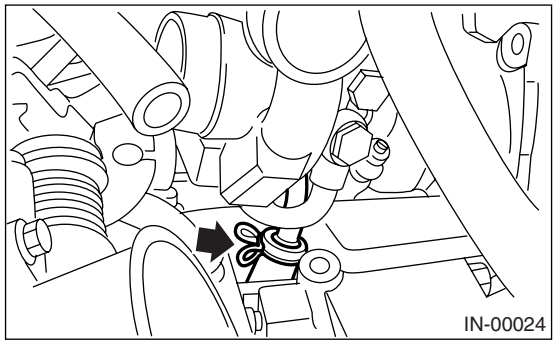

2) Install the turbocharger to intake duct.

Tightening torque:
3 N·m (0.3 kgf-m, 2.2 ft-lb)

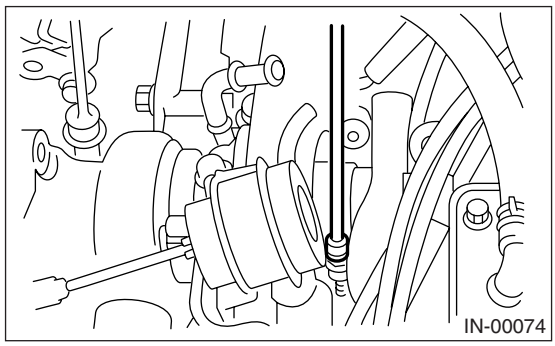

3) Install the oil pipe to turbocharger.

Tightening torque:
16 N·m (1.6 kgf-m, 11.6 ft-lb)

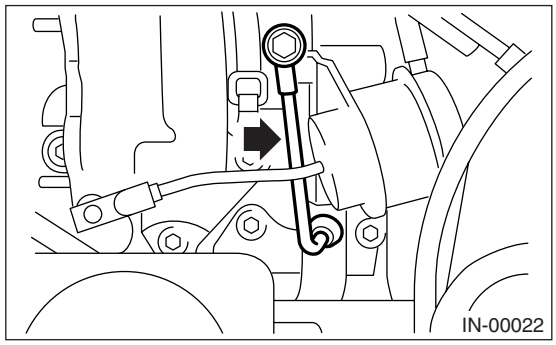

4) Install the joint pipe to turbocharger.

NOTE:
Replace the gasket with a new one.

Tightening torque:
35 N·m (3.6 kgf-m, 25.8 ft-lb)

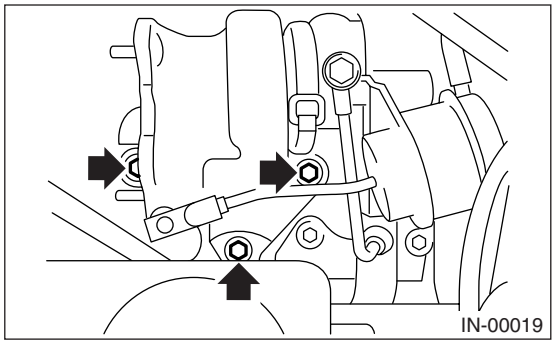

5) Connect the engine coolant hose.
6) Install the turbocharger bracket.

Tightening torque:
33 N·m (3.4 kgf-m, 24.6 ft-lb)

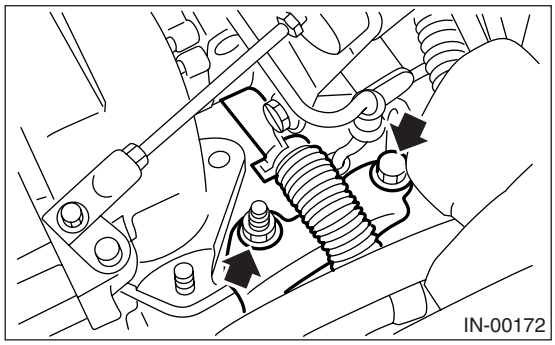

7) Connect the engine coolant hose which is connected to coolant filler tank.

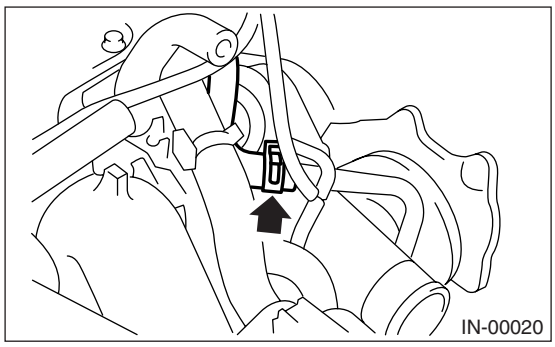

8) Lift-up the vehicle.
9) Install the center exhaust pipe. <Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>

7. Air By-pass Valve

A: REMOVAL

1) Remove the air by-pass valve from intercooler.

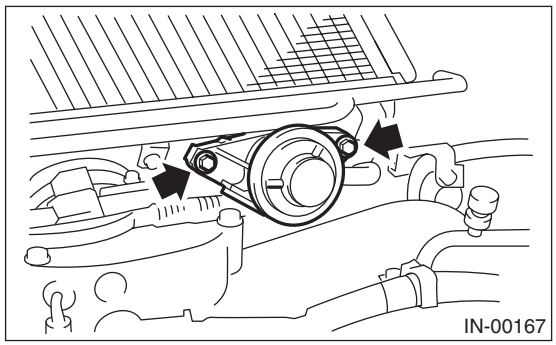

2) Disconnect the air by-pass hoses from air by-pass valve.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
16 N·m (1.6 kgf-m, 11.6 ft-lb)

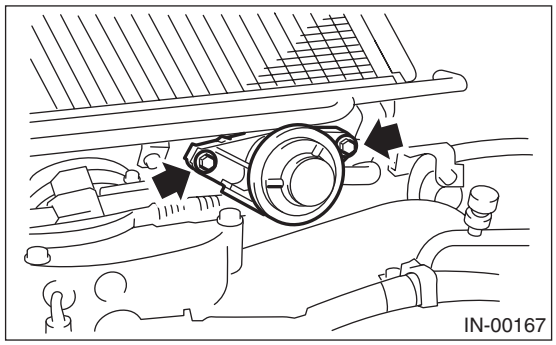

8. Resonator Chamber

A: REMOVAL

1) Set the vehicle on a lift.
2) Remove the air intake duct. <Ref. to IN(H4DOTC)-9, REMOVAL, Air Intake Duct.>
3) Remove the air cleaner lower case. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
4) Remove the resonator chamber mounting bolt on right side of engine compartment.

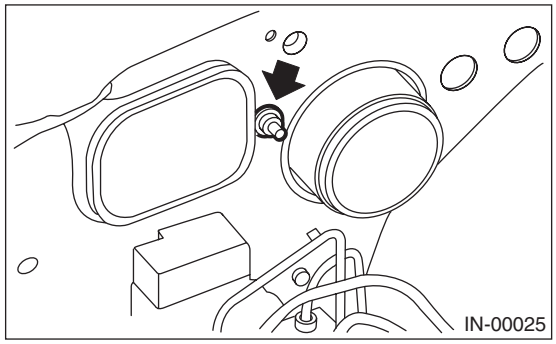

5) Remove the front right tire, and lift up the vehicle.
6) Remove the front mudguard RH.
7) Remove the resonator chamber from the inside front fender.

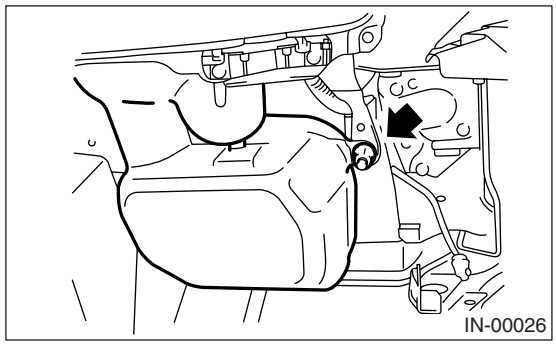

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

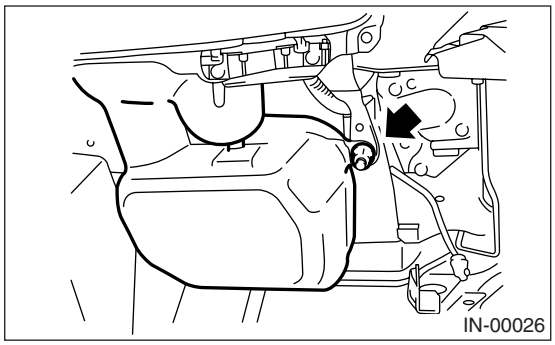

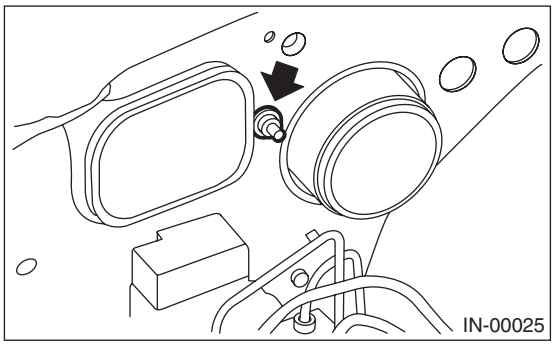

C: INSPECTION

Inspect for cracks and loose connections. Check that no foreign objects are mixed in resonator chamber.

9. Intercooler Water Spray Tank

A: REMOVAL

1) Disconnect the ground cable from battery.

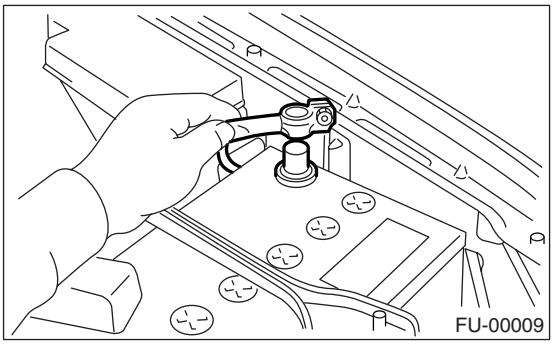

2) Remove the trunk trim. <Ref. to EI-54, REMOVAL, Trunk Trim.>
3) Disconnect the water tank connector.

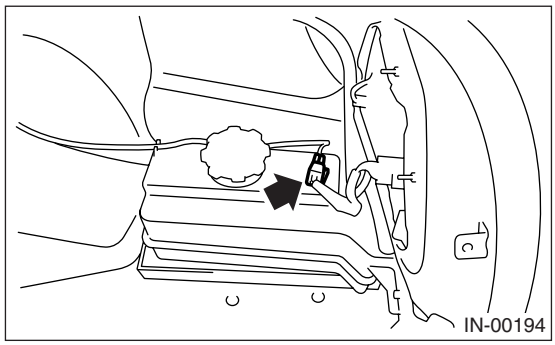

4) Remove the two water tank installation bolts.

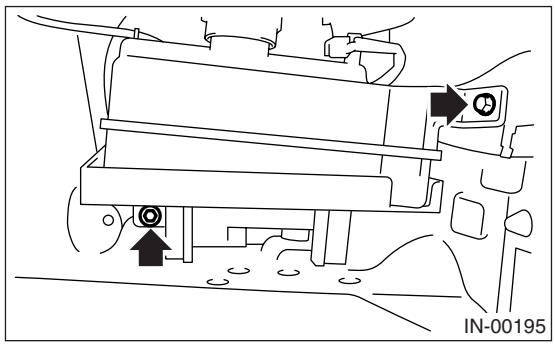

5) Remove the hose between body and water tank, then remove the water tank.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

C: INSPECTION

1) Make sure the hose is not deformed, damaged, cracked or clogged.
2) Make sure the water tank is not damaged or cracked

10.Intercooler Water Spray Nozzle

A: REMOVAL

1) Open the front hood.
2) Disconnect the connecting part of hose.
3) Push the clip of nozzle upward with the clip pressed by fingers from inside of front hood.

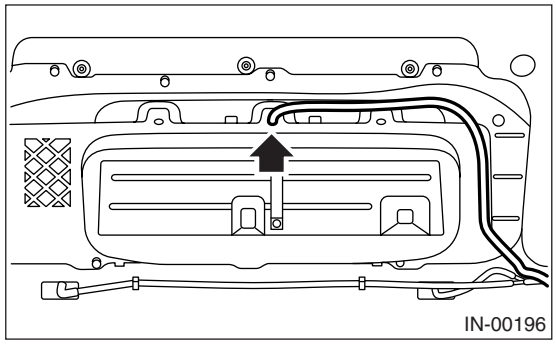

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure the hose and nozzle are not deformed, damaged, cracked or clogged.

MECHANICAL

ME(H4DOTC)

		Page
1.	General Description	2
2.	Compression	34
3.	Idle Speed	35
4.	Ignition Timing	36
5.	Intake Manifold Vacuum	37
6.	Engine Oil Pressure	38
7.	Fuel Pressure	39
8.	Valve Clearance	40
9.	Engine Assembly	44
10.	Engine Mounting	53
11.	Preparation for Overhaul	54
12.	V-belt	55
13.	Crankshaft Pulley	58
14.	Timing Belt Cover	59
15.	Timing Belt Assembly	60
16.	Camshaft Sprocket	69
17.	Crankshaft Sprocket	71
18.	Camshaft	72
19.	Cylinder Head Assembly	81
20.	Cylinder Block	89
21.	Intake and Exhaust Valve	109
22.	Piston	110
23.	Connecting Rod	111
24.	Crankshaft	112
25.	Engine Trouble in General	113
26.	Engine Noise	118

1. General Description

A: SPECIFICATIONS

1. DOHC TURBO MODEL (EXCEPT FOR STi AND AUSTRALIA MODEL)

Engine	Type			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine
	Valve arrangement			Belt driven, double overhead camshaft, 4-valve/cylinder
	Bore × Stroke		mm (in)	92 × 75 (3.62 × 2.95)
	Piston displacement		cm^3 (cu in)	1,994 (121.67)
	Compression ratio			8.0
	Compression pressure (at 200 — 300 rpm)		kPa (kgf/cm^2, psi)	981 — 1,177 (10 — 12, 142 — 171)
	Number of piston rings			Pressure ring: 2, Oil ring: 1
	Intake valve timing	Opening		BTDC 10°
		Closing		ABDC 50°
	Exhaust valve timing	Opening		BBDC 53°
		Closing		ATDC 7°
	Valve clearance	Intake	mm (in)	0.20±0.02 (0.0079±0.0008)
		Exhaust	mm (in)	0.25±0.02 (0.0098±0.0008)
	Idling speed [At neutral position on MT or “P” or “N” range on AT]		rpm	700±100 (No load) 800±150 (A/C switch ON)
	Firing order			1 → 3 → 2 → 4
	Ignition timing		BTDC/rpm	12°±10°/700

NOTE:
STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter OS: Oversize US: Undersize

Belt tension adjuster	Protrusion of adjuster rod			5.2 — 6.2 mm (0.205 — 0.244 in)
Belt tensioner	Spacer O.D.			17.955 — 17.975 mm (0.7069 — 0.7077 in)
	Tensioner bush I.D.			18.0 — 18.08 mm (0.7087 — 0.7118 in)
	Clearance between spacer and bush		STD	0.025 — 0.125 mm (0.0010 — 0.0049 in)
			Limit	0.175 mm (0.0069 in)
	Side clearance of spacer		STD	0.2 — 0.55 mm (0.0079 — 0.0217 in)
			Limit	0.81 mm (0.0319 in)
Camshaft	Bend limit			0.020 mm (0.0079 in)
	Thrust clearance		STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.10 mm (0.0039 in)
	Cam lobe height	Intake	STD	46.25 — 46.35 mm (1.821 — 1.825 in)
			Limit	46.15 mm (1.817 in)
		Exhaust	STD	46.15 — 46.25 mm (1.817 — 1.821 in)
			Limit	46.05 mm (1.813 in)
	Journal O.D.	STD	Front	37.946 — 37.963 mm (1.4939 — 1.4946 in)
			Center rear	29.946 — 29.963 mm (1.1790 — 1.1796 in)
	Oil clearance		STD	0.037 — 0.072 mm (0.0015 — 0.0028 in)
			Limit	0.10 mm (0.0039 in)
Cylinder head	Surface warpage limit			0.05 mm (0.0020 in)
	Surface grinding limit			0.3 mm (0.012 in)
	Standard height			127.5 mm (5.02 in)
Valve seat	Refacing angle			90°
	Contacting width	Intake	STD	1.0 mm (0.039 in)
			Limit	1.7 mm (0.067 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	2.2 mm (0.087 in)
Valve guide	Inner diameter			6.000 — 6.012 mm (0.2362 — 0.2367 in)
	Protrusion above head			15.8 — 16.2 mm (0.622 — 0.638 in)
Valve	Head edge thickness	Intake	STD	1.2 mm (0.047 in)
			Limit	0.8 mm (0.031 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	0.8 mm (0.031 in)
	Stem diameter		Intake	5.955 — 5.970 mm (0.2344 — 0.2350 in)
			Exhaust	5.945 — 5.960 mm(0.2341 — 0.2346 in)
	Stem oil clearance	STD	Intake	0.030 — 0.057 mm (0.0012 — 0.0022 in)
			Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)
		Limit	—	0.15 mm (0.0059 in)
	Overall length		Intake	104.4 mm (4.110 in)
			Exhaust	104.7 mm (4.122 in)
Valve spring	Free length			47.32 mm (1.8630 in)
	Squareness			2.5°, 2.1 mm (0.083 in)
	Tension/spring height		Set	205 — 235 N (20.9 — 24.0 kgf, 46.1 — 52.8 lb)/ 36.0 mm (1.417 in)
			Lift	426 — 490 N (43.4 — 50.0 kgf, 95.8 — 110 lb)/ 26.5 mm (1.043 in)

Cylinder block	Surface warpage limit (mating with cylinder head)			0.05 mm (0.0020 in)
	Surface grinding limit			0.1 mm (0.004 in)
	Cylinder bore	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)
			B	91.995 — 92.005 mm (3.6218 — 3.6222 in)
	Taper		STD	0.015 mm (0.0006 in)
			Limit	0.050 mm (0.0020 in)
	Out-of-roundness		STD	0.010 mm (0.0004 in)
			Limit	0.050 mm (0.0020 in)
	Piston clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
			Limit	0.050 mm (0.0020 in)
	Enlarging (boring) limit			0.5 mm (0.020 in)
Piston	Outer diameter	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)
			B	91.975 — 91.985 mm (3.6211 — 3.6214 in)
		0.25 mm (0.0098 in) OS		92.225 — 92.235 mm (3.6309 — 3.6313 in)
		0.50 mm (0.0197 in) OS		92.475 — 92.485 mm (3.6407 — 3.6411 in)
Piston pin	Standard clearance between piston pin and hole in piston		STD	0.004 — 0.008 mm (0.0002 — 0.0003 in)
			Limit	0.020 mm (0.0008 in)
	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).
Piston ring	Piston ring gap	Top ring	STD	0.20 — 0.25 mm (0.0079 — 0.0098 in)
			Limit	1.0 mm (0.039 in)
		Second ring	STD	0.40 — 0.50 mm (0.016 — 0.020 in)
			Limit	1.0 mm (0.039 in)
		Oil ring	STD	0.20 — 0.50 mm (0.0079 — 0.020 in)
			Limit	1.5 mm (0.059 in)
	Clearance between piston ring and piston ring groove	Top ring	STD	0.04 — 0.08 mm (0.0016 — 0.0031 in)
			Limit	0.15 mm (0.0059 in)
		Second ring	STD	0.030 — 0.070 mm (0.0012 — 0.0028 in)
			Limit	0.15 mm (0.0059 in)
Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)
			Limit	0.4 mm (0.016 in)
Connecting rod bearing	Oil clearance		STD	0.020 — 0.046 mm (0.0008 — 0.0018 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion		STD	1.486 — 1.498 mm (0.0585 — 0.0590 in)
			0.03 mm (0.0012 in) US	1.504 — 1.512 mm (0.0592 — 0.0595 in)
			0.05 mm (0.0020 in) US	1.514 — 1.522 mm (0.0596 — 0.0599 in)
			0.25 mm (0.0098 in) US	1.614 — 1.622 mm (0.0635 — 0.0639 in)
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)

Crankshaft	Bend limit			0.035 mm (0.0014 in)
	Crank pin and crank journal	Out-of-roundness		0.005 mm (0.0002 in) or less
		Grinding limit		0.25 mm (0.0098 in)
	Crank pin outer diameter		STD	51.984 — 52.000 mm (2.0466 — 2.0472)
			0.03 mm (0.0012 in) US	51.954 — 51.970 mm (2.0454 — 2.0461)
			0.05 mm (0.0020 in) US	51.934 — 51.950 mm (2.0447 — 2.0453)
			0.25 mm (0.0098 in) US	51.734 — 51.750 mm (2.0368 — 2.0374)
	Crank journal outer diameter	#1, #3, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
	Oil clearance	#1	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#2	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#3	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#4	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#5	STD	0.010 — 0.031 mm (0.0004 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)

Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

2. STi MODEL

Engine	Type			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine
	Valve arrangement			Belt driven, double overhead camshaft, 4-valve/cylinder
	Bore × Stroke mm (in)			92 × 75 (3.62 × 2.95)
	Piston displacement cm^3 (cu in)			1,994 (121.67)
	Compression ratio			8.0
	Compression pressure (at 200 — 300 rpm) kPa (kgf/cm^2, psi)			981 — 1,177 (10 — 12, 142 — 171)
	Number of piston rings			Pressure ring: 2, Oil ring: 1
	Intake valve timing	Opening	Max. retard	ATDC 6°
			Min. advance	BTDC 24°
		Closing	Max. retard	ABDC 68°
			Min. advance	ABDC 38°
	Exhaust valve timing	Opening		BBDC 58°
		Closing		ATDC 10°
	Valve clearance	Intake mm (in)		0.20±0.02 (0.0079±0.0008)
		Exhaust mm (in)		0.25±0.02 (0.0098±0.0008)
	Idling speed [At neutral position on MT] rpm			700±100 (No load) 800±150 (A/C switch ON)
	Firing order			1 → 3 → 2 → 4
	Ignition timing BTDC/rpm			12°±10°/700

NOTE:
STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter OS: Oversize US: Undersize

Belt tension adjuster	Protrusion of adjuster rod			5.2 — 6.2 mm (0.205 — 0.244 in)
Belt tensioner	Spacer O.D.			17.955 — 17.975 mm (0.7069 — 0.7077 in)
	Tensioner bush I.D.			18.0 — 18.08 mm (0.7087 — 0.7118 in)
	Clearance between spacer and bush		STD	0.025 — 0.125 mm (0.0010 — 0.0049 in)
			Limit	0.175 mm (0.0069 in)
	Side clearance of spacer		STD	0.2 — 0.55 mm (0.0079 — 0.0217 in)
			Limit	0.81 mm (0.0319 in)
Camshaft	Bend limit			0.020 mm (0.0079 in)
	Thrust clearance		STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.10 mm (0.0039 in)
	Cam lobe height	Intake	STD	45.25 — 45.35 mm (1.781 — 1.785 in)
			Limit	45.15 mm (1.758 in)
		Exhaust	STD	45.60 — 45.70 mm (1.795 — 1.799 in)
			Limit	45.50 mm (1.791 in)
	Journal O.D.	STD	Front	37.946 — 37.963 mm (1.4939 — 1.4946 in)
			Center rear	29.946 — 29.963 mm (1.1790 — 1.1796 in)
	Oil clearance		STD	0.037 — 0.072 mm (0.0015 — 0.0028 in)
			Limit	0.10 mm (0.0039 in)
Cylinder head	Surface warpage limit			0.05 mm (0.0020 in)
	Surface grinding limit			0.3 mm (0.012 in)
	Standard height			127.5 mm (5.02 in)
Valve seat	Refacing angle			90°
	Contacting width	Intake	STD	1.0 mm (0.039 in)
			Limit	1.7 mm (0.067 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	2.2 mm (0.087 in)
Valve guide	Inner diameter			6.000 — 6.012 mm (0.2362 — 0.2367 in)
	Protrusion above head			15.8 — 16.2 mm (0.622 — 0.638 in)
Valve	Head edge thickness	Intake	STD	1.2 mm (0.047 in)
			Limit	0.8 mm (0.031 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	0.8 mm (0.031 in)
	Stem diameter		Intake	5.955 — 5.970 mm (0.2344 — 0.2350 in)
			Exhaust	5.945 — 5.960 mm (0.2341 — 0.2346 in)
	Stem oil clearance	STD	Intake	0.030 — 0.057 mm (0.0012 — 0.0022 in)
			Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)
		Limit	—	0.15 mm (0.0059 in)
	Overall length		Intake	104.4 mm (4.110 in)
			Exhaust	104.7 mm (4.122 in)
Valve spring	Free length			43.89 mm (1.728 in)
	Squareness			2.5°, 1.9 mm (0.075 in)
	Tension/spring height		Set	205 — 237 N (20.9 — 24.2 kgf, 46.1 — 53.3 lb)/ 36.0 mm (1.417 in)
			Lift	553 — 611 N (56.4 — 62.3 kgf, 124 — 137 lb)/ 26.45 mm (1.041 in)

Cylinder block	Surface warpage limit (mating with cylinder head)			0.05 mm (0.0020 in)
	Surface grinding limit			0.1 mm (0.004 in)
	Cylinder bore	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)
			B	91.995 — 92.005 mm (3.6218 — 3.6222 in)
	Taper		STD	0.015 mm (0.0006 in)
			Limit	0.050 mm (0.0020 in)
	Out-of-roundness		STD	0.010 mm (0.0004 in)
			Limit	0.050 mm (0.0020 in)
	Piston clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
			Limit	0.050 mm (0.0020 in)
	Enlarging (boring) limit			0.5 mm (0.020 in)
Piston	Outer diameter	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)
			B	91.975 — 91.985 mm (3.6211 — 3.6214 in)
		0.25 mm (0.0098 in) OS		92.225 — 92.235 mm (3.6309 — 3.6313 in)
		0.50 mm (0.0197 in) OS		92.475 — 92.485 mm (3.6407 — 3.6411 in)
Piston pin	Standard clearance between piston pin and hole in piston		STD	0.004 — 0.008 mm (0.0002 — 0.0003 in)
			Limit	0.020 mm (0.0008 in)
	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).
Piston ring	Piston ring gap	Top ring	STD	0.20 — 0.25 mm (0.0079 — 0.0098 in)
			Limit	1.0 mm (0.039 in)
		Second ring	STD	0.40 — 0.50 mm (0.016 — 0.020 in)
			Limit	1.0 mm (0.039 in)
		Oil ring	STD	0.20 — 0.50 mm (0.0079 — 0.020 in)
			Limit	1.5 mm (0.059 in)
	Clearance between piston ring and piston ring groove	Top ring	STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.15 mm (0.0059 in)
		Second ring	STD	0.030 — 0.070 mm (0.0012 — 0.0028 in)
			Limit	0.15 mm (0.0059 in)
Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)
			Limit	0.4 mm (0.016 in)
Connecting rod bearing	Oil clearance		STD	0.020 — 0.046 mm (0.0008 — 0.0018 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion		STD	1.486 — 1.498 mm (0.0585 — 0.0590 in)
			0.03 mm (0.0012 in) US	1.504 — 1.512 mm (0.0592 — 0.0595 in)
			0.05 mm (0.0020 in) US	1.514 — 1.522 mm (0.0596 — 0.0599 in)
			0.25 mm (0.0098 in) US	1.614 — 1.622 mm (0.0635 — 0.0639 in)
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)

Crankshaft	Bend limit			0.035 mm (0.0014 in)
	Crank pin and crank journal	Out-of-roundness		0.005 mm (0.0002 in) or less
		Grinding limit		0.25 mm (0.0098 in)
	Crank pin outer diameter		STD	51.984 — 52.000 mm (2.0466 — 2.0472)
			0.03 mm (0.0012 in) US	51.954 — 51.970 mm (2.0454 — 2.0461)
			0.05 mm (0.0020 in) US	51.934 — 51.950 mm (2.0447 — 2.0453)
			0.25 mm (0.0098 in) US	51.734 — 51.750 mm (2.0368 — 2.0374)
	Crank journal outer diameter	#1, #3, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
	Oil clearance	#1	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#2	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#3	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#4	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#5	STD	0.010 — 0.031 mm (0.0004 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)

Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

3. DOHC TURBO MODEL (AUSTRALIA MODEL EXCEPT FOR STi MODEL)

Engine	Type			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine
	Valve arrangement			Belt driven, double overhead camshaft, 4-valve/cylinder
	Bore × Stroke mm (in)			92 × 75 (3.62 × 2.95)
	Piston displacement cm^3 (cu in)			1,994 (121.67)
	Compression ratio			8.0
	Compression pressure (at 200 — 300 rpm) kPa (kgf/cm^2, psi)			1.108 — 1,304 (11 — 13, 161 — 189)
	Number of piston rings			Pressure ring: 2, Oil ring: 1
	Intake valve timing	Opening	Max. retard	ATDC 7°
			Min. advance	BTDC 27°
		Closing	Max. retard	ABDC 67°
			Min. advance	ABDC 33°
	Exhaust valve timing	Opening		BBDC 53°
		Closing		ATDC 7°
	Valve clearance	Intake mm (in)		0.20±0.02 (0.0079±0.0008)
		Exhaust mm (in)		0.25±0.02 (0.0098±0.0008)
	Idling speed [At neutral position on MT, or “P” or “N” position on AT] rpm		MT	650±50 (No load) 800±50 (A/C switch ON)
			AT	700±50 (No load) 820±50 (A/C switch ON)
	Firing order			1 → 3 → 2 → 4
	Ignition timing BTDC/rpm		MT	12°±3°/650
			AT	12°±3°/700

NOTE:
STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter OS: Oversize US: Undersize

Belt tension adjuster	Protrusion of adjuster rod			5.2 — 6.2 mm (0.205 — 0.244 in)
Belt tensioner	Spacer O.D.			17.955 — 17.975 mm (0.7069 — 0.7077 in)
	Tensioner bush I.D.			18.0 — 18.08 mm (0.7087 — 0.7118 in)
	Clearance between spacer and bush		STD	0.025 — 0.125 mm (0.0010 — 0.0049 in)
			Limit	0.175 mm (0.0069 in)
	Side clearance of spacer		STD	0.2 — 0.55 mm (0.0079 — 0.0217 in)
			Limit	0.81 mm (0.0319 in)
Camshaft	Bend limit			0.020 mm (0.0079 in)
	Thrust clearance		STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.10 mm (0.0039 in)
	Cam lobe height	Intake	STD	46.25 — 46.35 mm (1.821 — 1.825 in)
			Limit	46.15 mm (1.817 in)
		Exhaust	STD	46.15 — 46.25 mm (1.817 — 1.821 in)
			Limit	46.05 mm (1.813 in)
	Journal O.D.	STD	Front	37.946 — 37.963 mm (1.4939 — 1.4946 in)
			Center rear	29.946 — 29.963 mm (1.1790 — 1.1796 in)
	Oil clearance		STD	0.037 — 0.072 mm (0.0015 — 0.0028 in)
			Limit	0.10 mm (0.0039 in)
Cylinder head	Surface warpage limit			0.05 mm (0.0020 in)
	Surface grinding limit			0.3 mm (0.012 in)
	Standard height			127.5 mm (5.02 in)
Valve seat	Refacing angle			90°
	Contacting width	Intake	STD	1.0 mm (0.039 in)
			Limit	1.7 mm (0.067 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	2.2 mm (0.087 in)
Valve guide	Inner diameter			6.000 — 6.012 mm (0.2362 — 0.2367 in)
	Protrusion above head			15.8 — 16.2 mm (0.622 — 0.638 in)
Valve	Head edge thickness	Intake	STD	1.2 mm (0.047 in)
			Limit	0.8 mm (0.031 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	0.8 mm (0.031 in)
	Stem diameter		Intake	5.955 — 5.970 mm (0.2344 — 0.2350 in)
			Exhaust	5.945 — 5.960 mm(0.2341 — 0.2346 in)
	Stem oil clearance	STD	Intake	0.030 — 0.057 mm (0.0012 — 0.0022 in)
			Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)
		Limit	—	0.15 mm (0.0059 in)
	Overall length		Intake	104.4 mm (4.110 in)
			Exhaust	104.7 mm (4.122 in)
Valve spring	Free length			47.32 mm (1.8630 in)
	Squareness			2.5°, 2.1 mm (0.083 in)
	Tension/spring height		Set	205 — 235 N (20.9 — 24.0 kgf, 46.1 — 52.8 lb)/ 36.0 mm (1.417 in)
			Lift	426 — 490 N (43.4 — 50.0 kgf, 95.8 — 110 lb)/ 26.5 mm (1.043 in)

Cylinder block	Surface warpage limit (mating with cylinder head)			0.05 mm (0.0020 in)
	Surface grinding limit			0.1 mm (0.004 in)
	Cylinder bore	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)
			B	91.995 — 92.005 mm (3.6218 — 3.6222 in)
	Taper		STD	0.015 mm (0.0006 in)
			Limit	0.050 mm (0.0020 in)
	Out-of-roundness		STD	0.010 mm (0.0004 in)
			Limit	0.050 mm (0.0020 in)
	Piston clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
			Limit	0.050 mm (0.0020 in)
	Enlarging (boring) limit			0.5 mm (0.020 in)
Piston	Outer diameter	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)
			B	91.975 — 91.985 mm (3.6211 — 3.6214 in)
		0.25 mm (0.0098 in) OS		92.225 — 92.235 mm (3.6309 — 3.6313 in)
		0.50 mm (0.0197 in) OS		92.475 — 92.485 mm (3.6407 — 3.6411 in)
Piston pin	Standard clearance between piston pin and hole in piston		STD	0.004 — 0.008 mm (0.0002 — 0.0003 in)
			Limit	0.020 mm (0.0008 in)
	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).
Piston ring	Piston ring gap	Top ring	STD	0.20 — 0.25 mm (0.0079 — 0.0098 in)
			Limit	1.0 mm (0.039 in)
		Second ring	STD	0.40 — 0.50 mm (0.016 — 0.020 in)
			Limit	1.0 mm (0.039 in)
		Oil ring	STD	0.20 — 0.50 mm (0.0079 — 0.020 in)
			Limit	1.5 mm (0.059 in)
	Clearance between piston ring and piston ring groove	Top ring	STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.15 mm (0.0059 in)
		Second ring	STD	0.030 — 0.070 mm (0.0012 — 0.0028 in)
			Limit	0.15 mm (0.0059 in)
Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)
			Limit	0.4 mm (0.016 in)
Connecting rod bearing	Oil clearance		STD	0.020 — 0.046 mm (0.0008 — 0.0018 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion		STD	1.486 — 1.498 mm (0.0585 — 0.0590 in)
			0.03 mm (0.0012 in) US	1.504 — 1.512 mm (0.0592 — 0.0595 in)
			0.05 mm (0.0020 in) US	1.514 — 1.522 mm (0.0596 — 0.0599 in)
			0.25 mm (0.0098 in) US	1.614 — 1.622 mm (0.0635 — 0.0639 in)
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)

Crankshaft	Bend limit			0.035 mm (0.0014 in)
	Crank pin and crank journal	Out-of-roundness		0.005 mm (0.0002 in) or less
		Grinding limit		0.25 mm (0.0098 in)
	Crank pin outer diameter		STD	51.984 — 52.000 mm (2.0466 — 2.0472)
			0.03 mm (0.0012 in) US	51.954 — 51.970 mm (2.0454 — 2.0461)
			0.05 mm (0.0020 in) US	51.934 — 51.950 mm (2.0447 — 2.0453)
			0.25 mm (0.0098 in) US	51.734 — 51.750 mm (2.0368 — 2.0374)
	Crank journal outer diameter	#1, #3, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
	Oil clearance	#1	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#2	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#3	STD	0.003 — 0.030 mm (0.0001 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
		#4	STD	0.012 — 0.033 mm (0.0005 — 0.0013 in)
			Limit	0.045 mm (0.0018 in)
		#5	STD	0.010 — 0.031 mm (0.0004 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)

Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

B: COMPONENT

1. TIMING BELT

• EXCEPT FOR STi AND AUSTRALIA MODEL

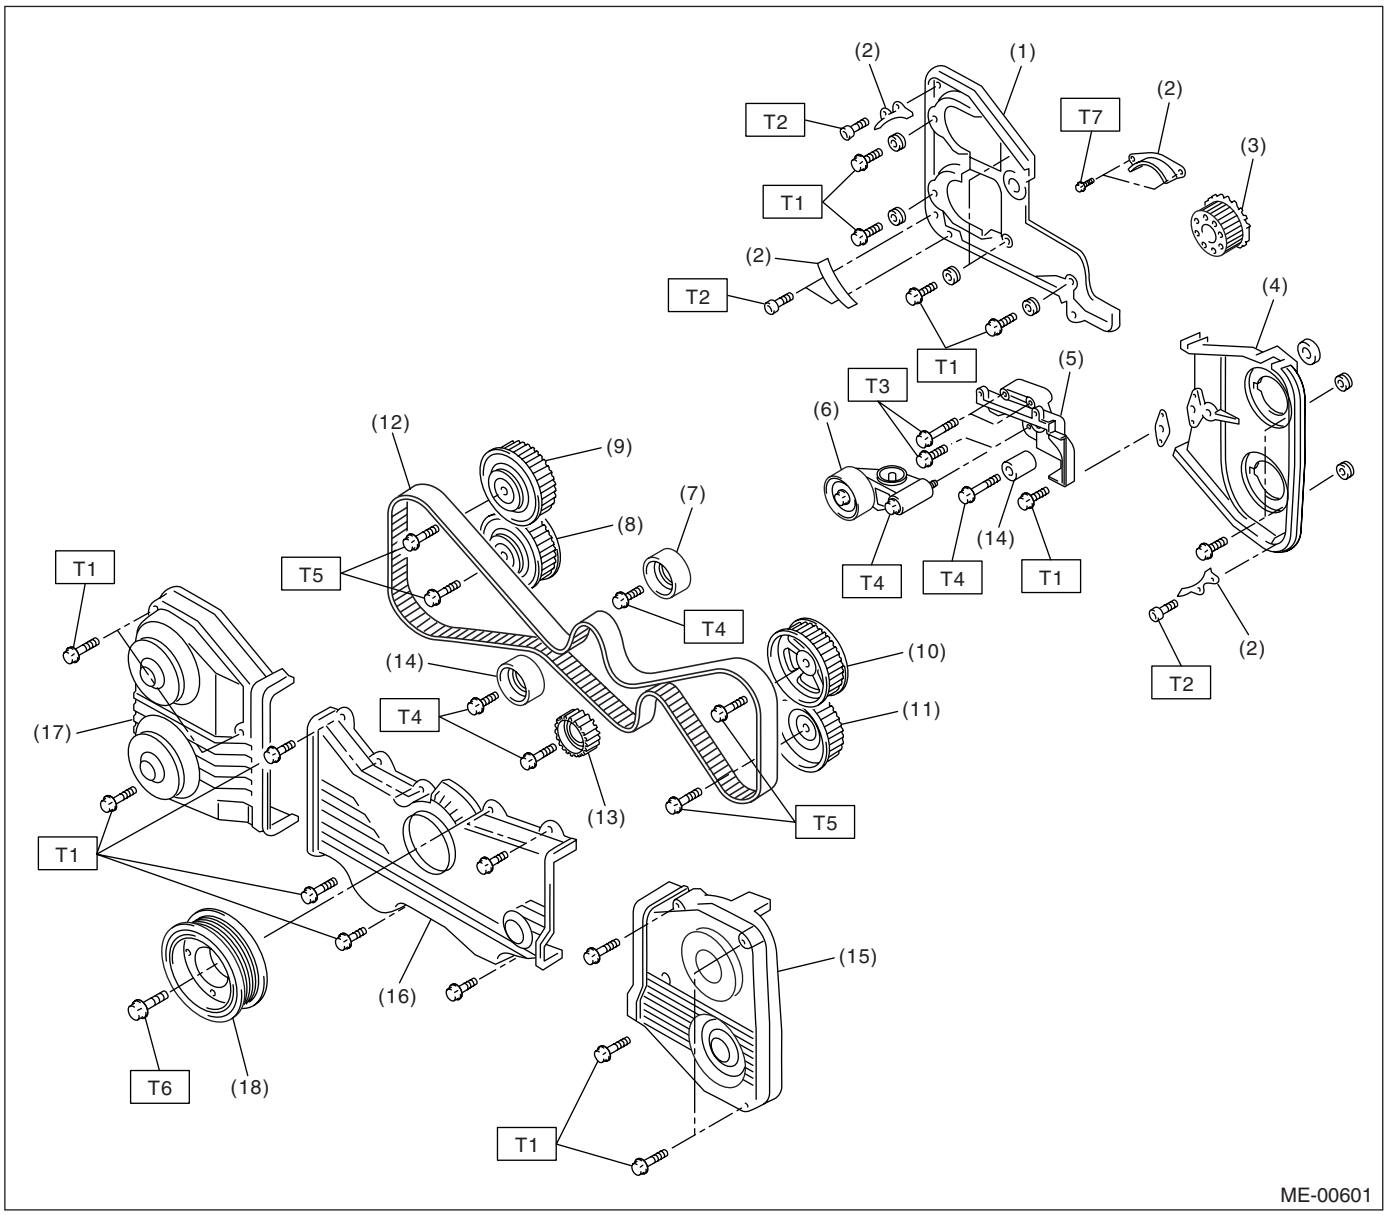

(1) Timing belt cover No. 2 (RH)
(2) Timing belt guide (MT model)
(3) Crankshaft sprocket
(4) Timing belt cover No. 2 (LH)
(5) Tensioner bracket
(6) Automatic belt tension adjuster ASSY
(7) Belt idler
(8) Exhaust camshaft sprocket (RH)
(9) Intake camshaft sprocket (RH)
(10) Intake camshaft sprocket (LH)
(11) Exhaust camshaft sprocket (LH)
(12) Timing belt
(13) Belt idler No. 2
(14) Belt idler
(15) Timing belt cover (LH)
(16) Front belt cover
(17) Timing belt cover (RH)
(18) Crankshaft pulley

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5 (0.5, 3.6)
T2: 6.4 (0.65, 4.7)
T3: 25 (2.5, 18.1)
T4: 39 (4.0, 28.9)
T5: 98 (10, 72.4)
T6: <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
T7: 10 (1.0, 7.2)

• STi AND AUSTRALIA MODEL

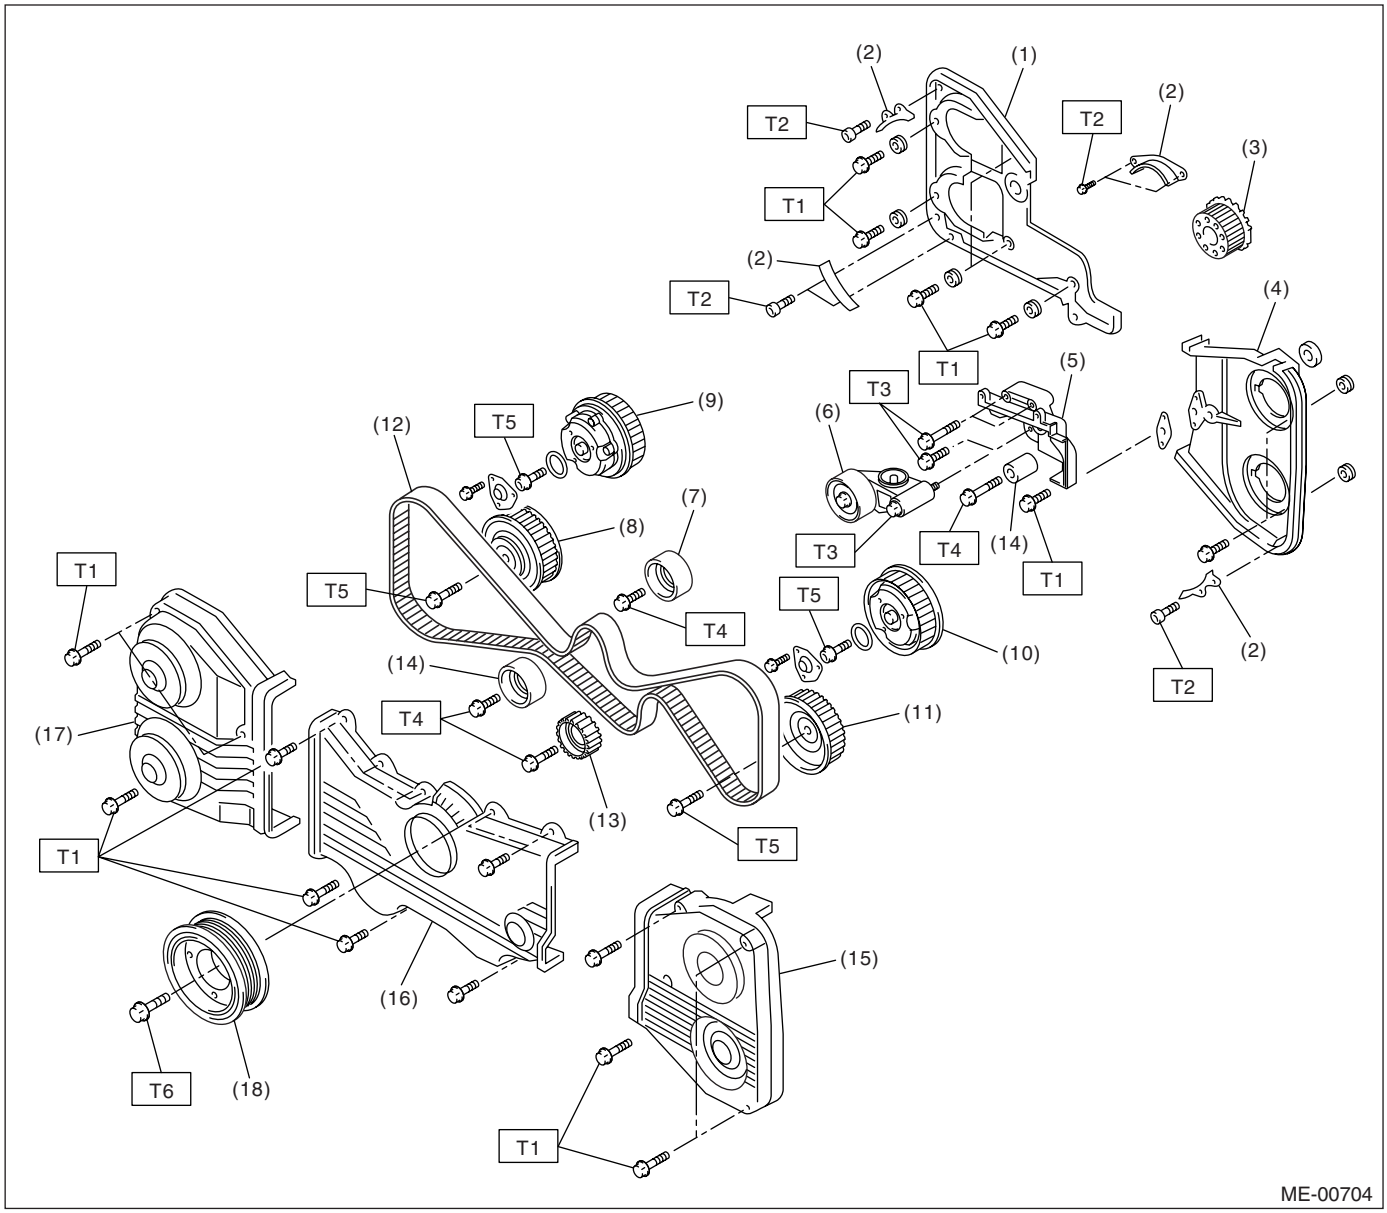

(1) Timing belt cover No. 2 (RH)
(2) Timing belt guide
(3) Crankshaft sprocket
(4) Timing belt cover No. 2 (LH)
(5) Tensioner bracket
(6) Automatic belt tension adjuster ASSY
(7) Belt idler
(8) Exhaust camshaft sprocket (RH)
(9) Intake camshaft sprocket (RH)
(10) Intake camshaft sprocket (LH)
(11) Exhaust camshaft sprocket (LH)
(12) Timing belt
(13) Belt idler No. 2
(14) Belt idler
(15) Timing belt cover (LH)
(16) Front belt cover
(17) Timing belt cover (RH)
(18) Crankshaft pulley

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5 (0.5, 3.6)
T2: 10 (1.0, 7)
T3: 25 (2.5, 18.1)
T4: 39 (4.0, 28.9)
T5: 98 (10, 72.4)
T6: <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>

2. CYLINDER HEAD AND CAMSHAFT

• EXCEPT FOR STi AND AUSTRALIA MODEL

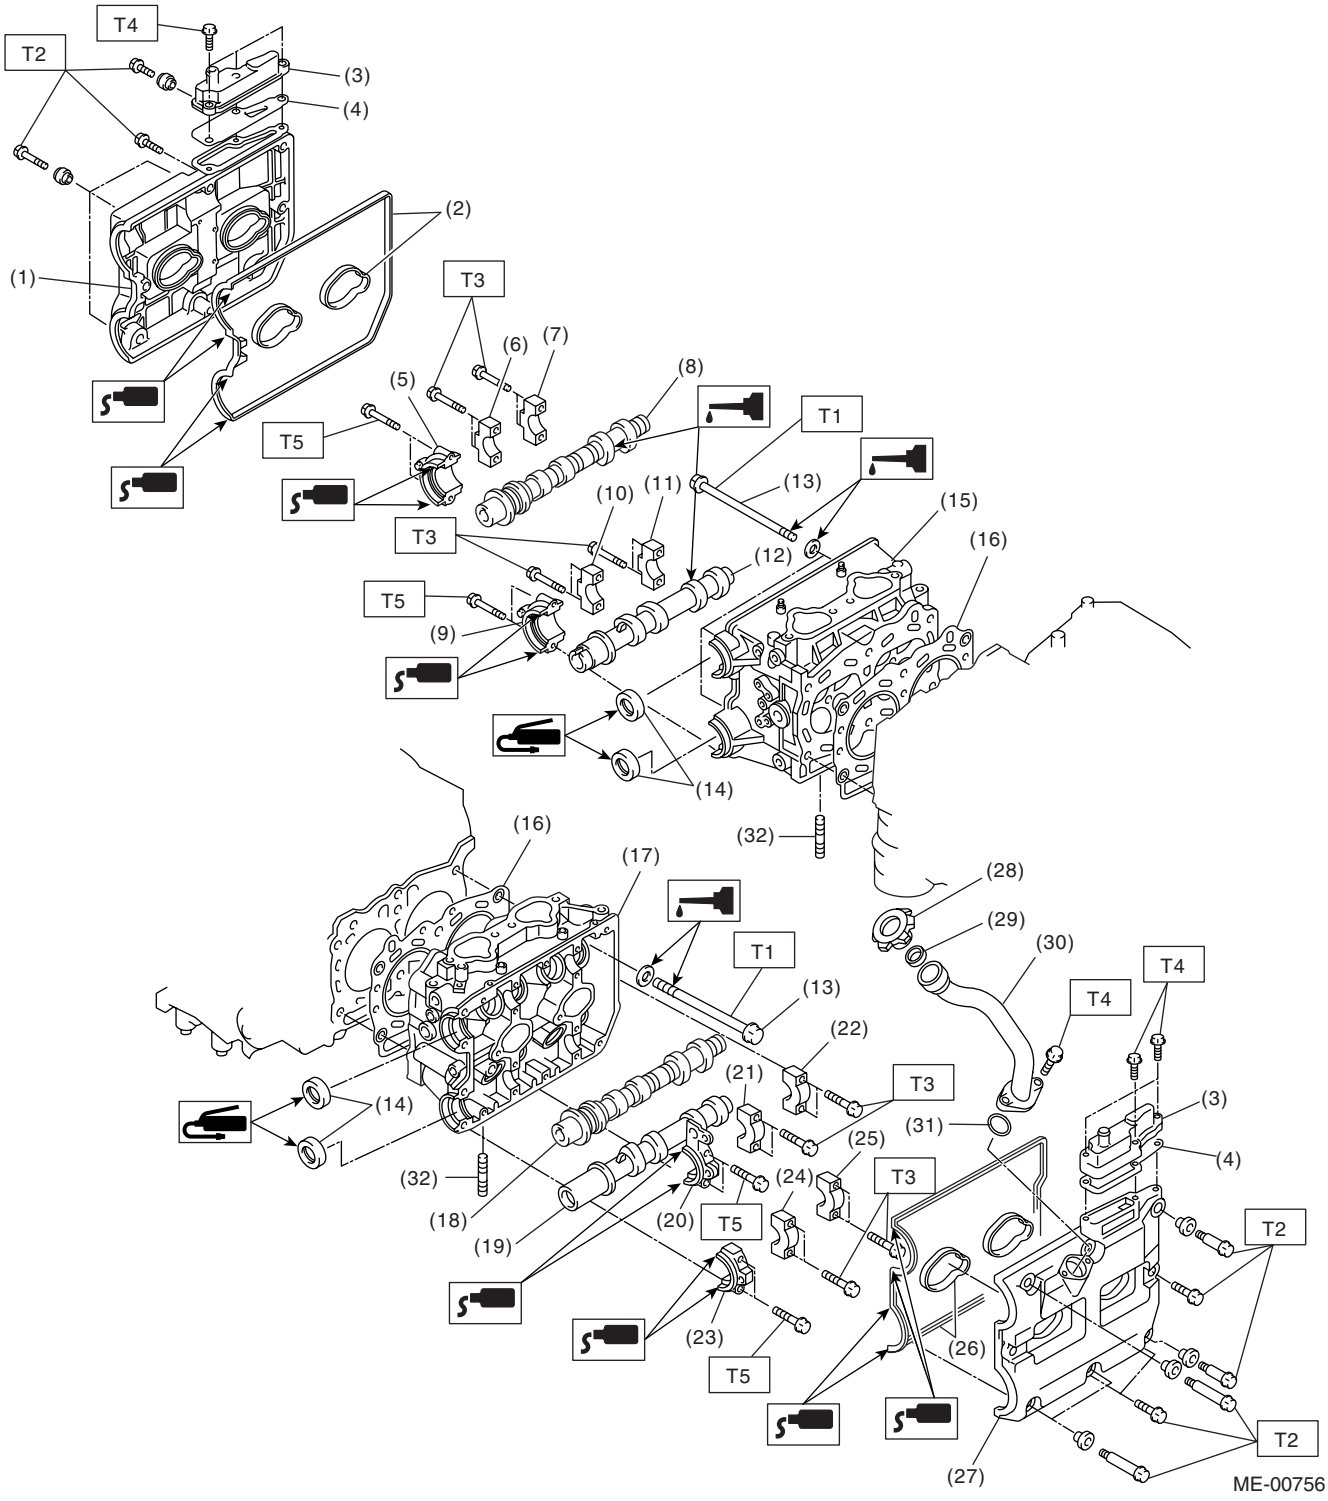

(1) Rocker cover (RH)
(2) Rocker cover gasket (RH)
(3) Oil separator cover
(4) Gasket
(5) Intake camshaft cap (Front RH)
(6) Intake camshaft cap (Center RH)
(7) Intake camshaft cap (Rear RH)
(8) Intake camshaft cap (RH)
(9) Exhaust camshaft cap (Front RH)
(10) Exhaust camshaft cap (Center RH)
(11) Exhaust camshaft cap (Rear RH)
(12) Exhaust camshaft (RH)
(13) Cylinder head bolt
(14) Oil seal
(15) Cylinder head (RH)
(16) Cylinder head gasket
(17) Cylinder head (LH)
(18) Intake camshaft (LH)
(19) Exhaust camshaft (LH)
(20) Intake camshaft cap (Front LH)
(21) Intake camshaft cap (Center LH)
(22) Intake camshaft cap (Rear LH)
(23) Exhaust camshaft cap (Front LH)
(24) Exhaust camshaft cap (Center LH)
(25) Exhaust camshaft cap (Rear LH)
(26) Rocker cover gasket (LH)
(27) Rocker cover (LH)
(28) Oil filler cap
(29) Gasket
(30) Oil filler duct
(31) O-ring
(32) Stud bolt

Tightening torque: N·m (kgf-m, ft-lb)

T1:	***<Ref. to ME(H4DOTC)-81, INSTALLATION, Cylinder Head Assembly.>***
T2:	***5 (0.5, 3.6)***
T3:	***20 (2.0, 14.5)***
T4:	***6.4 (0.65, 4.7)***
T5:	***10 (1.0, 7.2)***

• STi AND AUSTRALIA MODEL

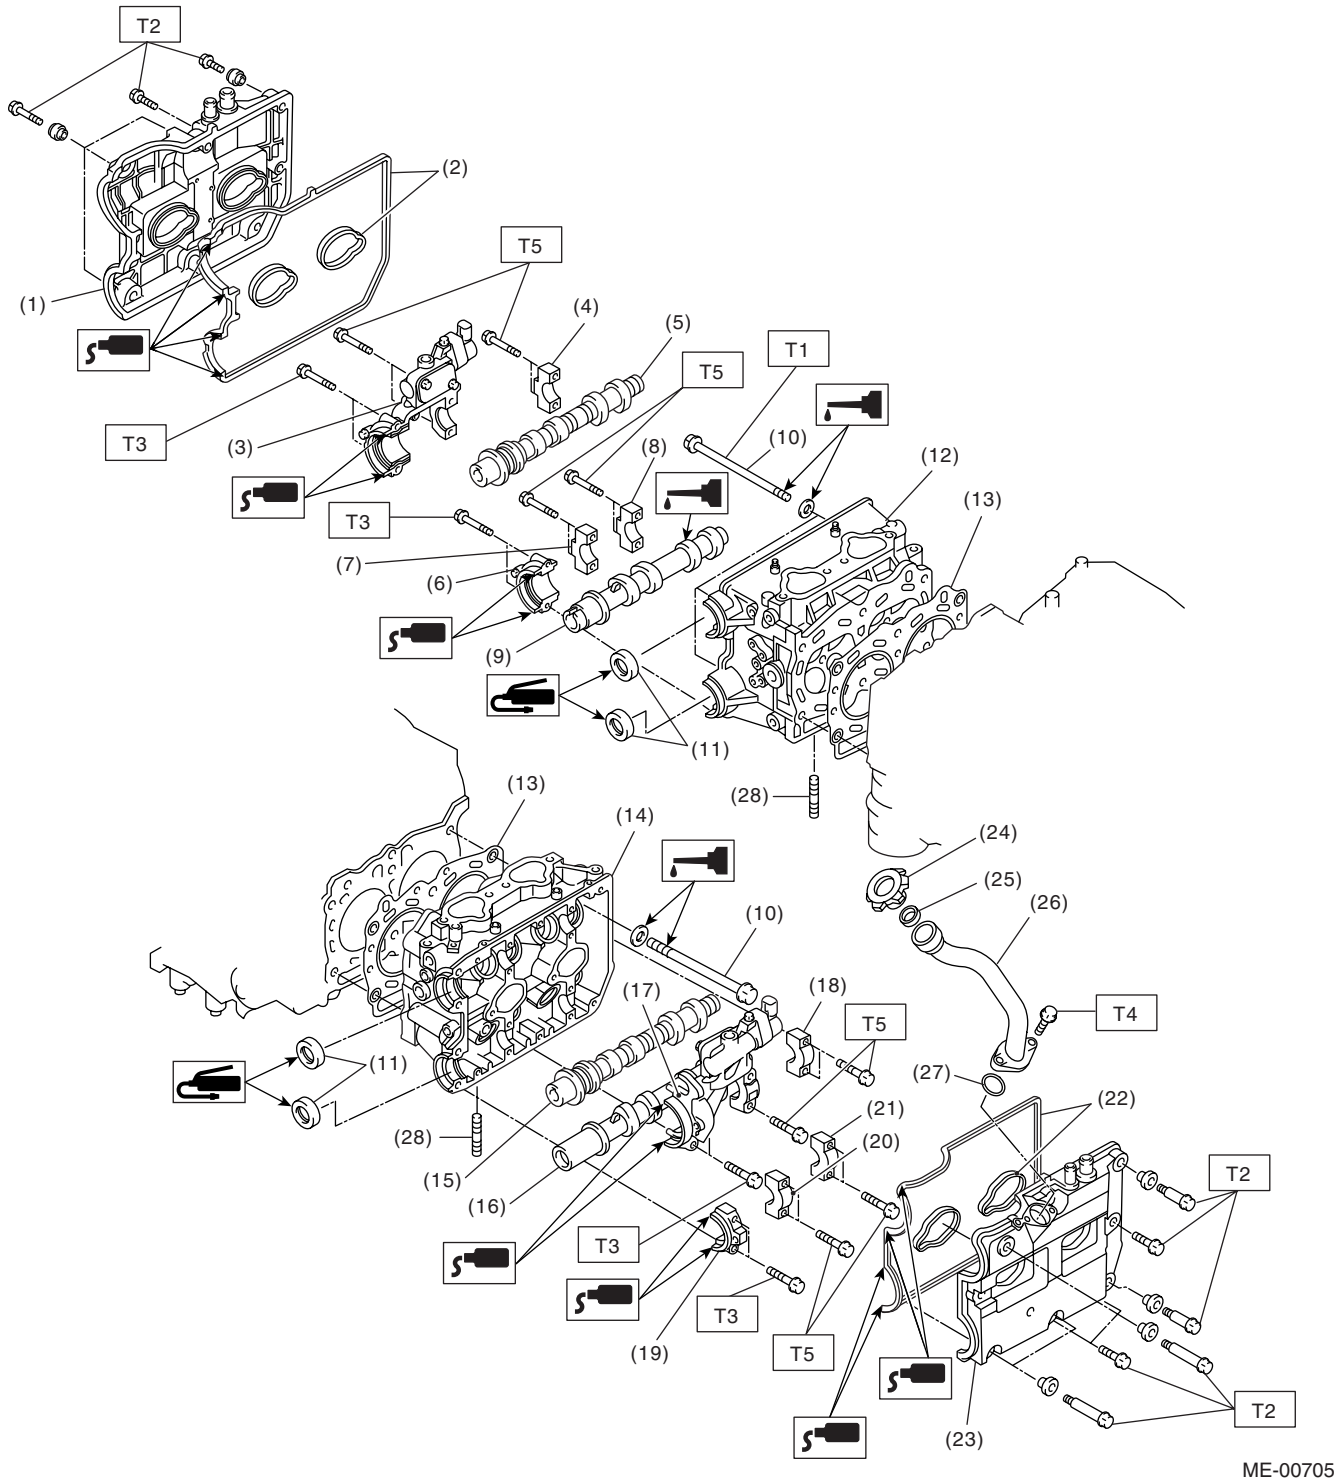

(1) Rocker cover (RH)
(2) Rocker cover gasket (RH)
(3) Variable valve timing solenoid valve assembly (RH)
(4) Intake camshaft cap (RH)
(5) Intake camshaft (RH)
(6) Exhaust camshaft cap (Front RH)
(7) Exhaust camshaft cap (Center RH)
(8) Exhaust camshaft cap (Rear RH)
(9) Exhaust camshaft (RH)
(10) Cylinder head bolt
(11) Oil seal
(12) Cylinder head (RH)
(13) Cylinder head gasket
(14) Cylinder head (LH)
(15) Intake camshaft (LH)
(16) Exhaust camshaft (LH)
(17) Variable valve timing solenoid valve assembly (LH)
(18) Intake camshaft cap (LH)
(19) Exhaust camshaft cap (Front LH)
(20) Exhaust camshaft cap (Center LH)
(21) Exhaust camshaft cap (Rear LH)
(22) Rocker cover gasket (LH)
(23) Rocker cover (LH)
(24) Oil filler cap
(25) Gasket
(26) Oil filler duct
(27) O-ring
(28) Stud bolt

Tightening torque: N·m (kgf-m, ft-lb)

T1: <Ref. to ME(H4DOTC)-81, INSTALLATION, Cylinder Head Assembly.>
T2: 5 (0.5, 3.6)
T3: 10 (1.0, 7)
T4: 6.4 (0.65, 4.7)
T5: 20 (2.0, 14.5)

3. CYLINDER HEAD AND VALVE ASSEMBLY

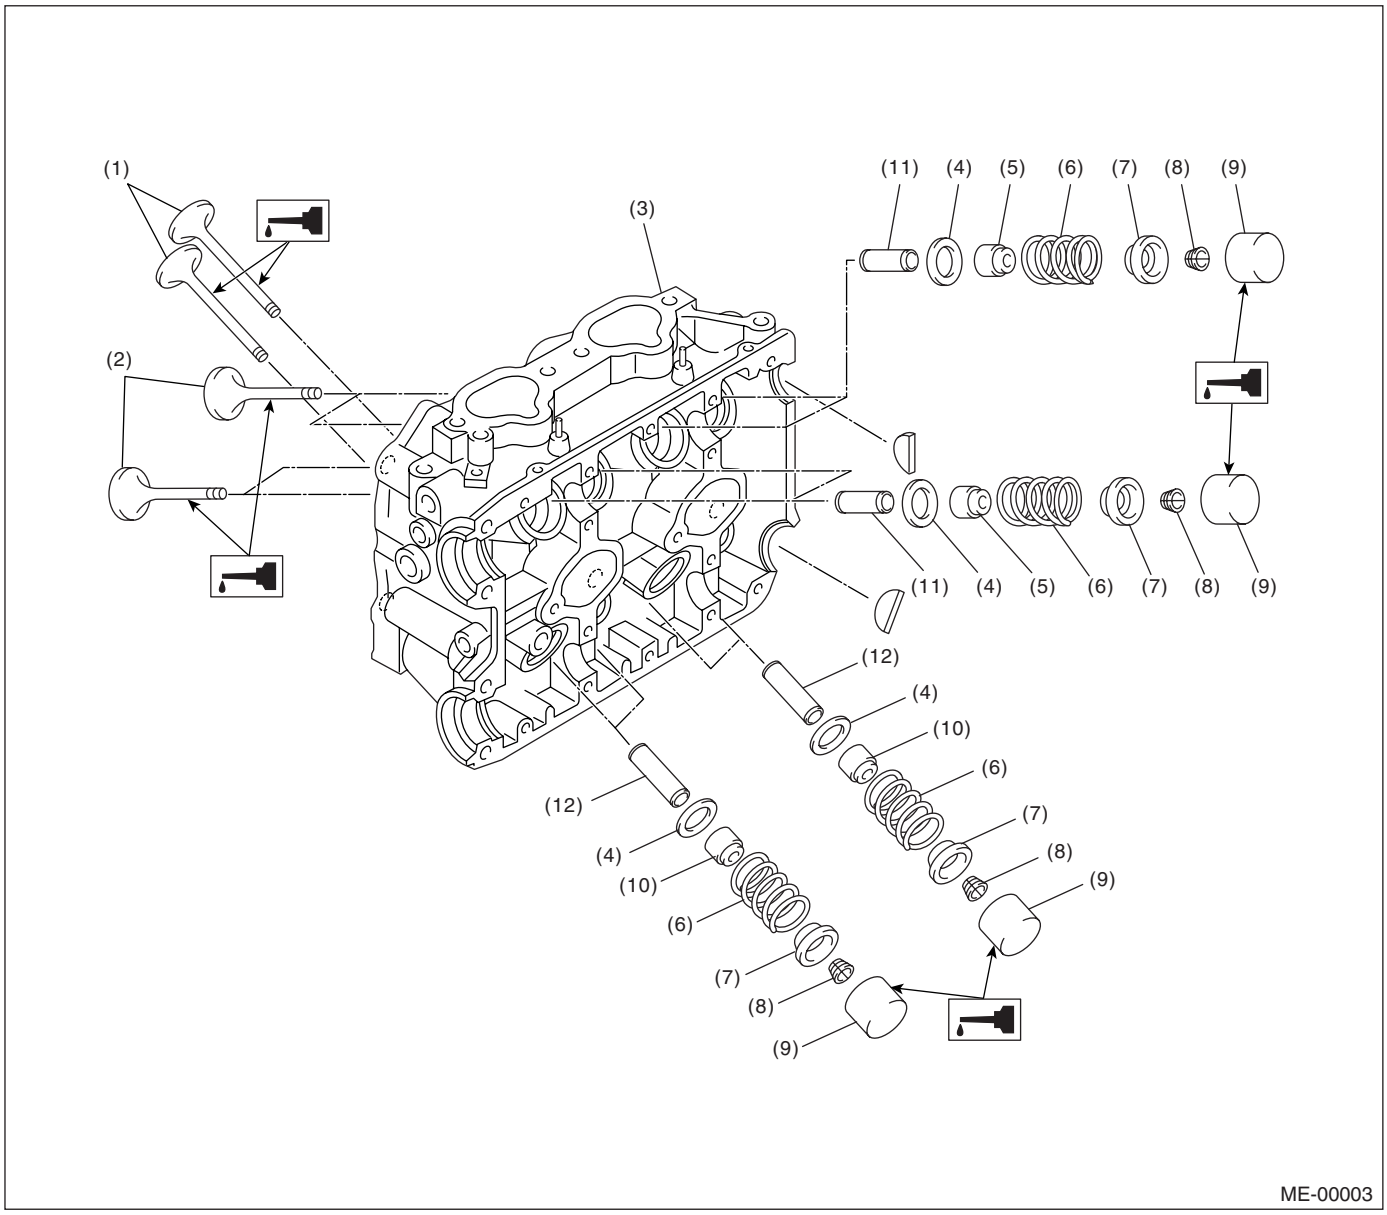

(1) Exhaust valve
(2) Intake valve
(3) Cylinder head
(4) Valve spring seat
(5) Intake valve oil seal
(6) Valve spring
(7) Retainer
(8) Retainer key
(9) Valve lifter
(10) Exhaust valve oil seal
(11) Intake valve guide
(12) Exhaust valve guide

4. CYLINDER BLOCK

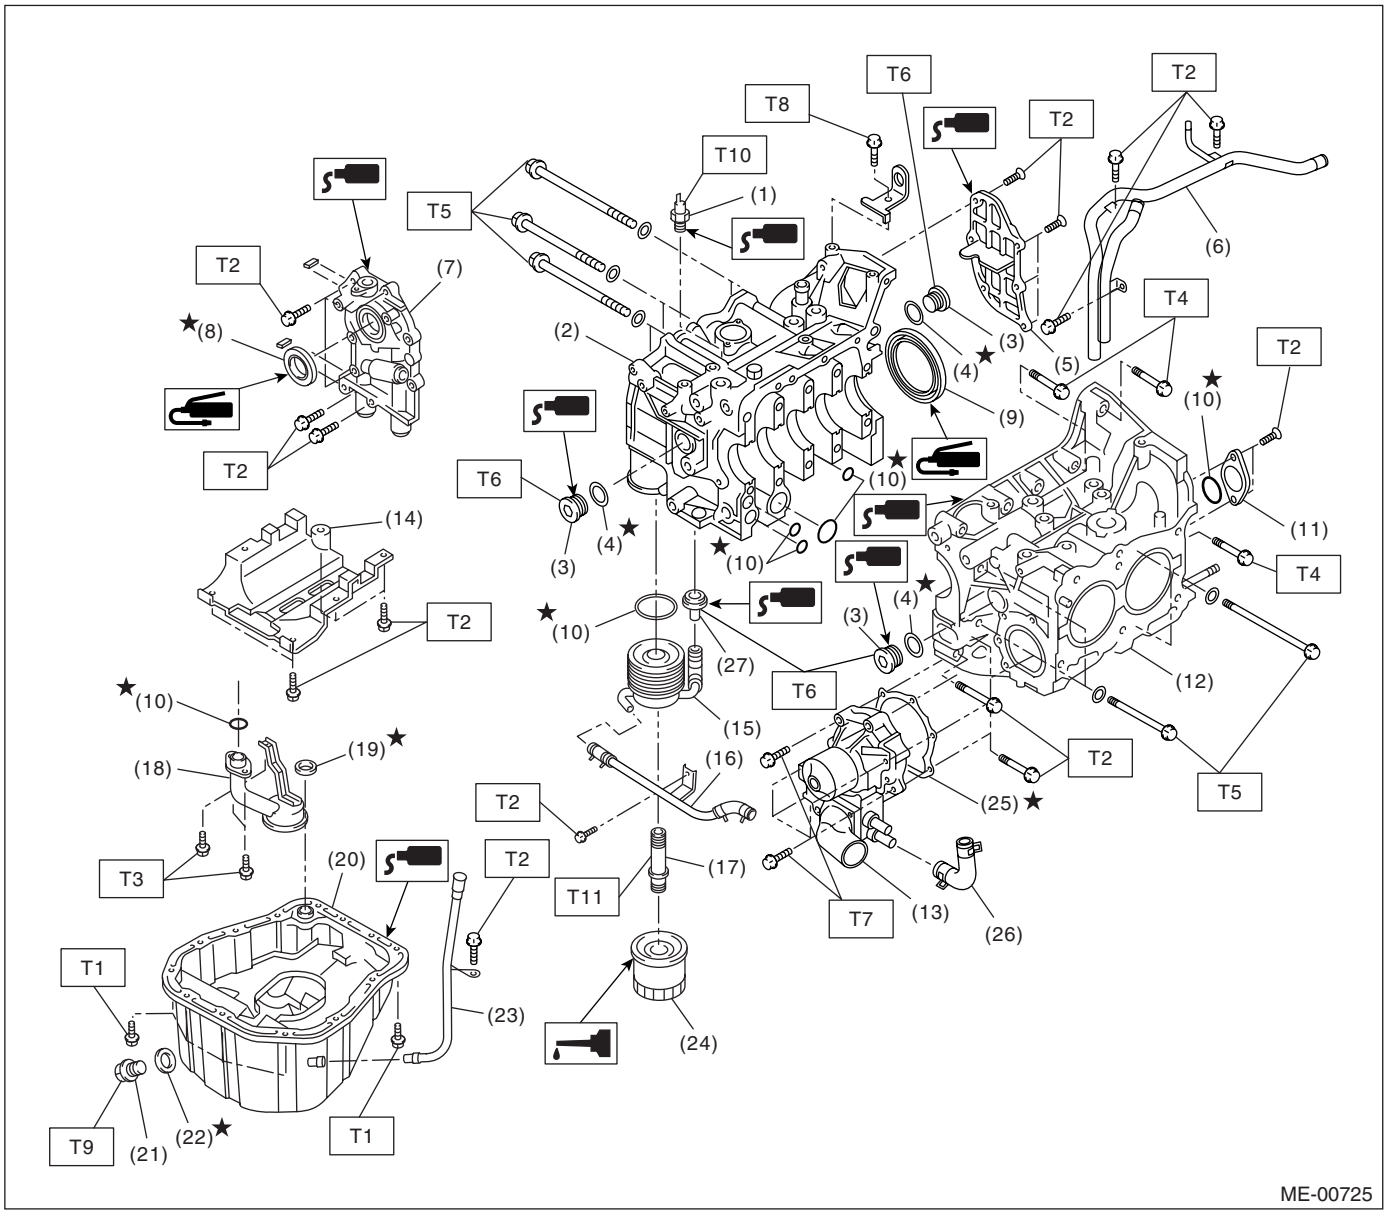

ME-00725

(1) Oil pressure switch
(2) Cylinder block (RH)
(3) Service hole plug
(4) Gasket
(5) Oil separator cover
(6) Water by-pass pipe
(7) Oil pump
(8) Front oil seal
(9) Rear oil seal
(10) O-ring
(11) Service hole cover
(12) Cylinder block (LH)
(13) Water pump
(14) Baffle plate
(15) Oil cooler
(16) Water by-pass pipe
(17) Connector
(18) Oil strainer
(19) Gasket
(20) Oil pan
(21) Drain plug
(22) Metal gasket
(23) Oil level gauge guide
(24) Oil filter
(25) Gasket
(26) Water pump hose
(27) Plug

Tightening torque: N·m (kgf-m, ft-lb)

T1: 5 (0.5, 3.6)
T2: 6.4 (0.65, 4.7)
T3: 10 (1.0, 7.2)
T4: 25 (2.5, 18.1)
T5: <Ref. to ME(H4DOTC)-93, INSTALLATION, Cylinder Block.>
T6: 69 (7.0, 50.9)
T7: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7)
T8: 16 (1.6, 11.6)
T9: 44 (4.5, 33)
T10: 25 (2.5, 18.1)
T11: 54 (5.5, 40)

5. CRANKSHAFT AND PISTON

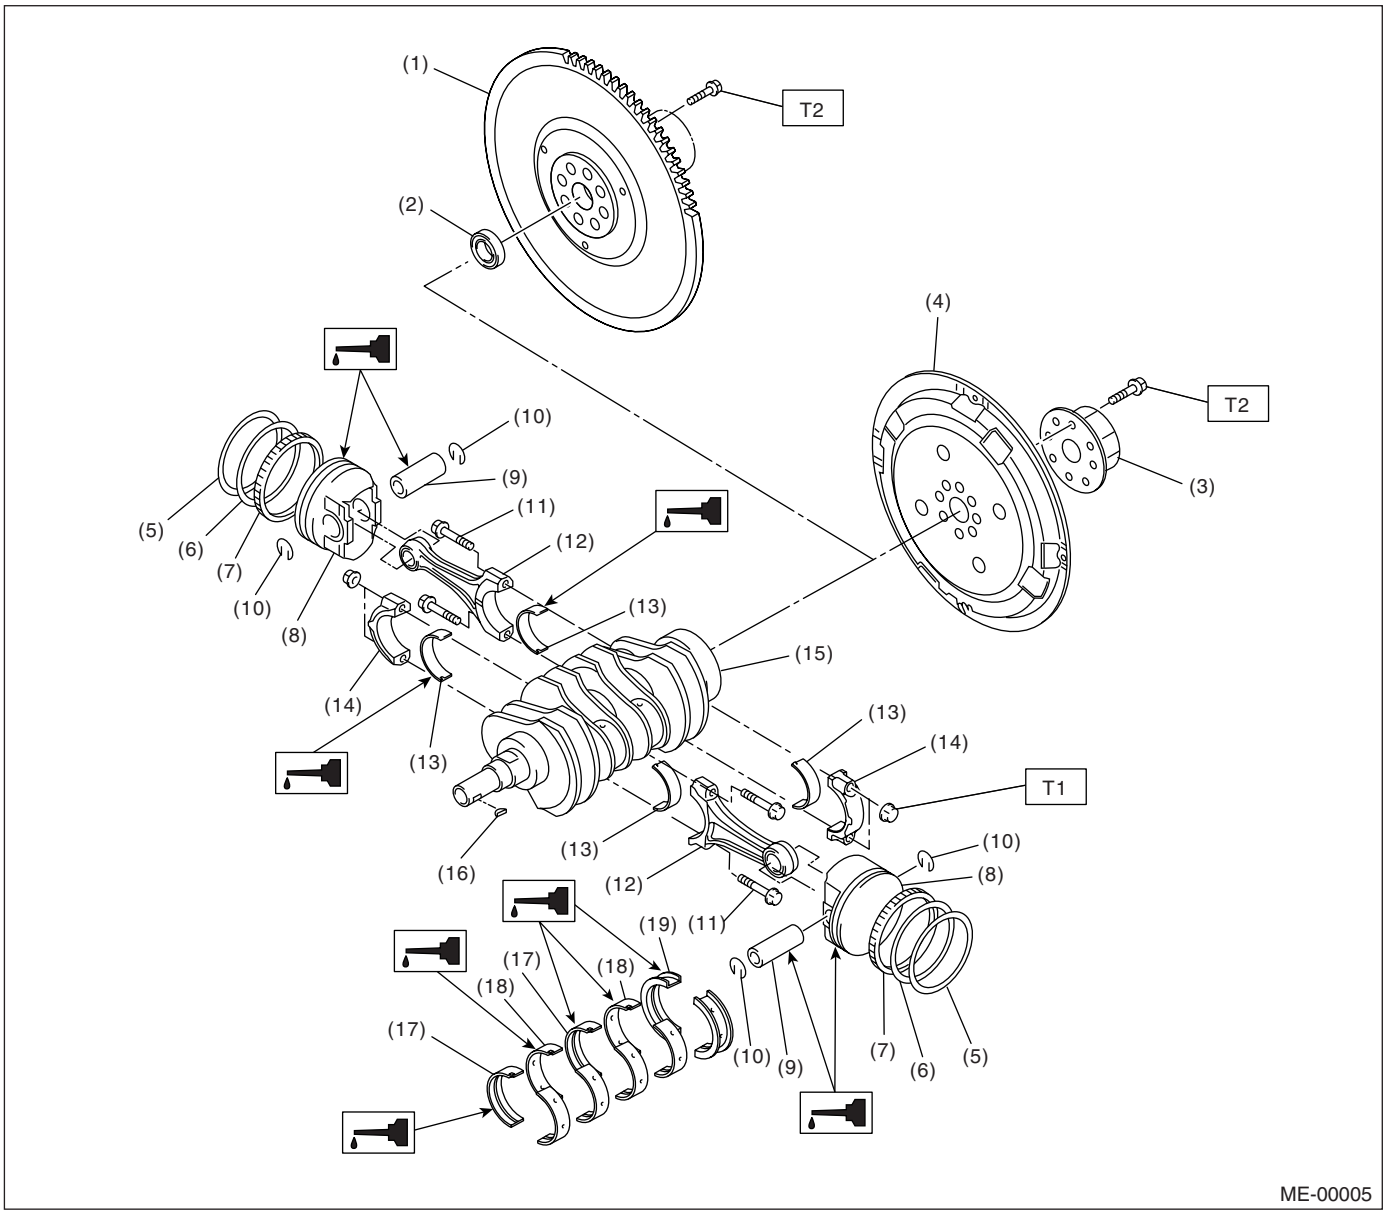

(1) Flywheel (MT model)
(2) Ball bearing (MT model)
(3) Reinforcement (AT model)
(4) Drive plate (AT model)
(5) Top ring
(6) Second ring
(7) Oil ring
(8) Piston
(9) Piston pin
(10) Circlip
(11) Connecting rod bolt
(12) Connecting rod
(13) Connecting rod bearing
(14) Connecting rod cap
(15) Crankshaft
(16) Woodruff key
(17) Crankshaft bearing #1, #3
(18) Crankshaft bearing #2, #4
(19) Crankshaft bearing #5

Tightening torque: N·m (kgf-m, ft-lb)
T1: 45 (4.6, 33.3)
T2: 72 (7.3, 52.8)

6. ENGINE MOUNTING

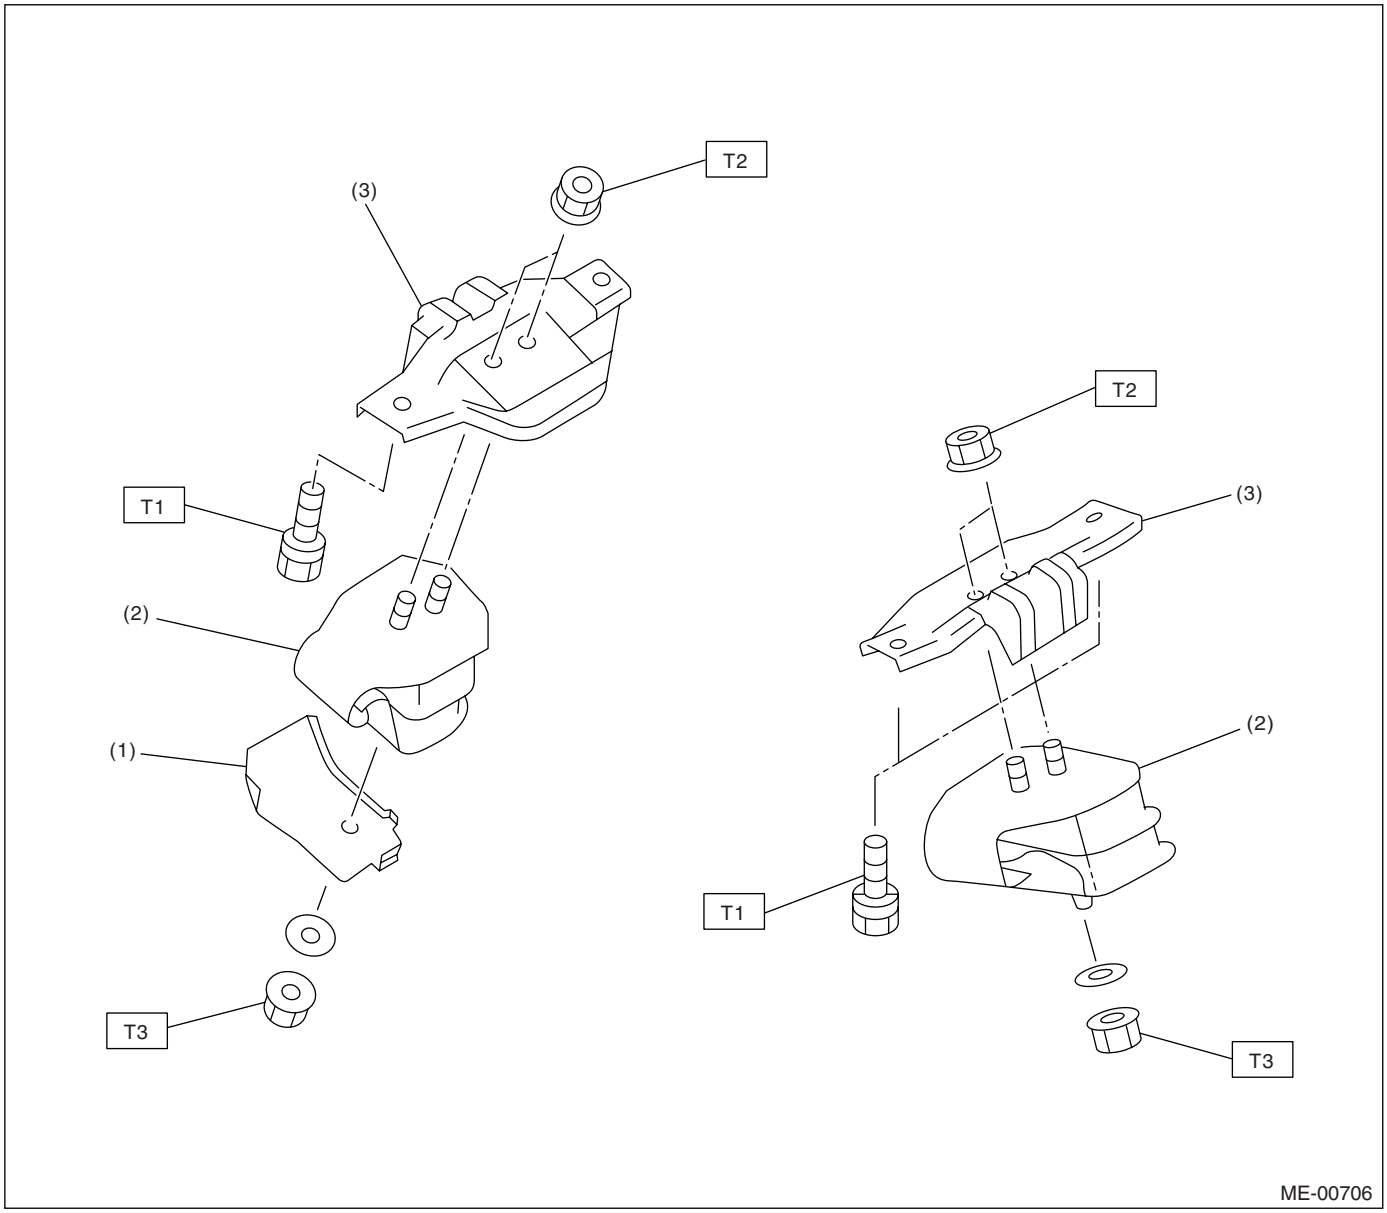

(1) Heat shield cover
(2) Front cushion rubber
(3) Front engine mounting bracket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 35 (3.6, 25.8)
T2: 42 (4.3, 30.9)
T3: 85 (8.7, 62.7)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part in the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
• All parts should be thoroughly cleaned, paying special attention to the engine oil passages, pistons and bearings.
• Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
• Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
• All removed parts, if to be reused, should be reinstalled in the original positions and directions.
• Bolts, nuts and washers should be replaced with new ones as required.
• Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
• Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
• Be sure not to damage coated surfaces of body panels with tools or stain seats and windows with coolant or oil. Place a cover over fenders, as required, for protection.
• Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
• Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
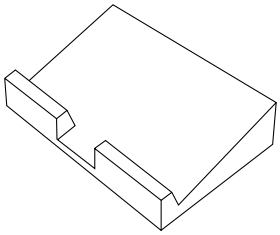 ST-498267600	498267600	CYLINDER HEAD TABLE	• Used for replacing valve guides. • Used for removing and installing valve springs.
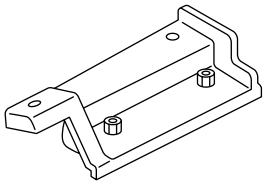 ST-498457000	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817000).
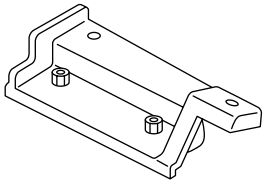 ST-498457100	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817000).
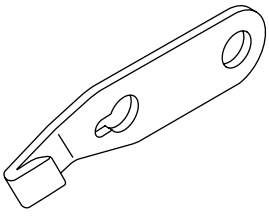 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of flywheel when loosening and tightening crankshaft pulley bolt, etc.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
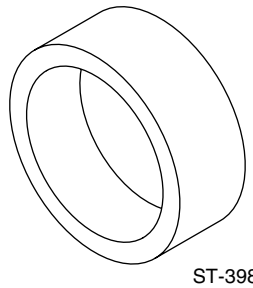 ST-398744300	398744300	PISTON GUIDE	Used for installing piston in cylinder for 2.0 L engine.
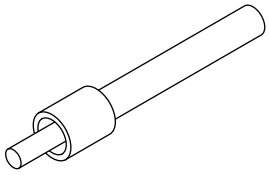 ST-498857100	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
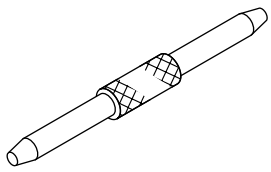 ST-499017100	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
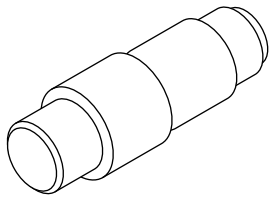 ST-499037100	499037100	CONNECTING ROD BUSHING REMOVER & INSTALLER	Used for removing and installing connecting rod bushing.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
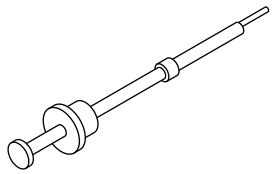 ST-499097600	499097600	PISTON PIN REMOVER ASSY	Used for removing piston pin. (Except for Australia model)
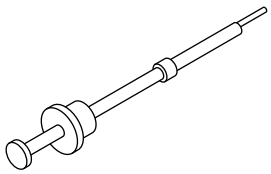 ST-499097700	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin. (Australia model except for STi model)
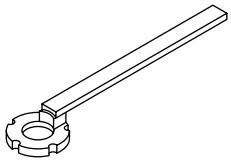 ST-499207400	499207400	CAMSHAFT SPROCKET WRENCH	Used for removing and installing exhaust camshaft sprocket and intake camshaft sprocket (RH). (Except for STi and Australia model)
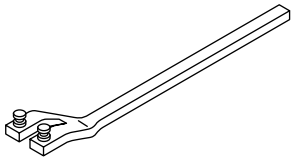 ST18231AA010	18231AA010	CAMSHAFT SPROCKET WRENCH	Used for removing and installing intake camshaft sprocket (LH). (Except for STi and Australia model)

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
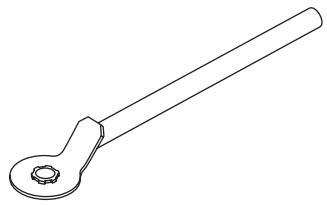 ST-499977500	499977500	CAMSHAFT SPROCKET WRENCH	Used for removing and installing intake camshaft sprocket. (STi and Australia model)
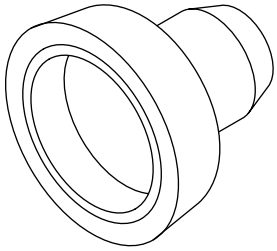 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
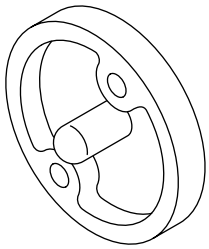 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).
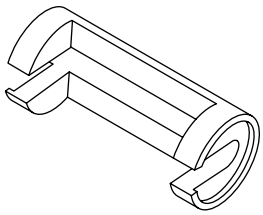 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
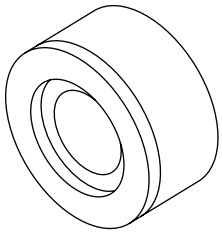 ST18251AA020	18251AA020	VALVE GUIDE ADJUSTER	Used for installing intake and exhaust valve guides.
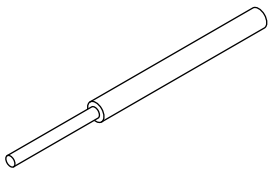 ST-499767200	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
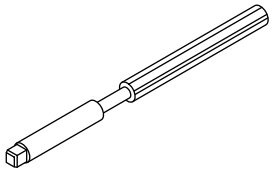 ST-499767400	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
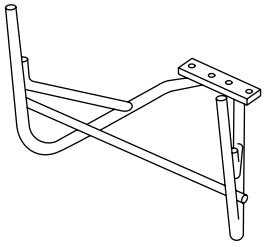 ST-499817000	499817000	ENGINE STAND	• Stand used for engine disassembly and assembly. • Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
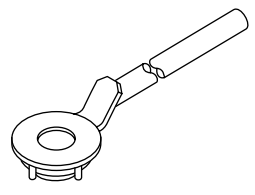 ST-499977400	499977400	CRANKSHAFT PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts.
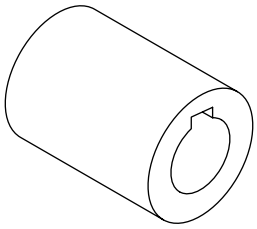 ST-499987500	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
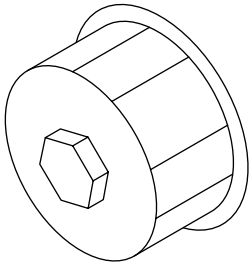 ST-498547000	498547000	OIL FILTER WRENCH	Used for removing and installing the oil filter.
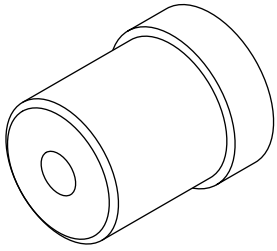 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
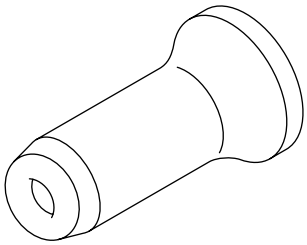 ST-499587600	499587600	OIL SEAL INSTALLER	Used for installing camshaft oil seal for DOHC engine.
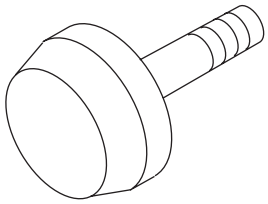 ST-499597200	499597200	OIL SEAL GUIDE	Used for installing camshaft oil seal for DOHC engine. Used with OIL SEAL GUIDE (499587600).
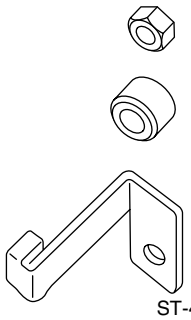 ST-498277200	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.
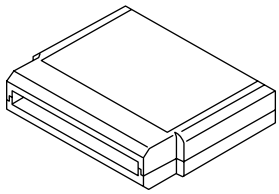 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
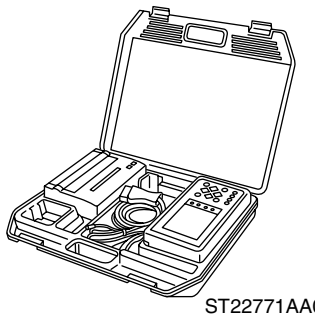 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Compression Gauge	Used for measuring compression.

E: PROCEDURE

It is possible to conduct the following service procedures with engine on the vehicle, however, the procedures described in this section are based on the condition that the engine is removed from the vehicle.

- V-belt
- Timing Belt
- Camshaft
- Cylinder Head

2. Compression

A: INSPECTION

CAUTION:
After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

1) After warming-up the engine, turn the ignition switch to OFF.
2) Make sure that the battery is fully charged.
3) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
4) Remove all the spark plugs. <Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>
5) Fully open the throttle valve.
6) Check the starter motor for satisfactory performance and operation.
7) Hold the compression gauge tight against spark plug hole.

NOTE:
When using a screw-in type compression gauge, the screw (put into cylinder head spark plug hole) should be less than 18 mm (0.71 in) long.

8) Crank the engine by means of starter motor, and then read the maximum value on the gauge when the pointer is steady.

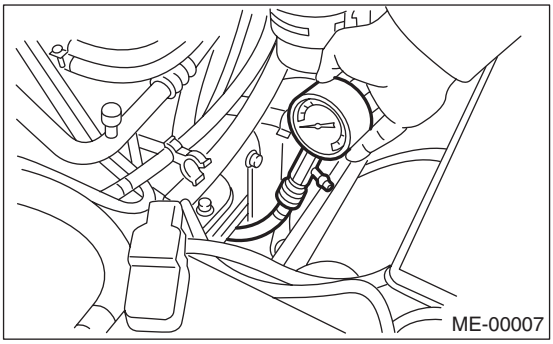

9) Perform at least two measurements per cylinder, and make sure that the values are correct.

Compression (350 rpm and fully open throttle):

Except for Australia model
Standard
981 — 1,177 kPa (10 — 12 kgf/cm^2, 142 — 171 psi)
Limit
882 kPa (9.0 kgf/cm^2, 128 psi)
Difference between cylinders
Less than 49 kPa (0.5 kgf/cm^2, 7 psi)

Australia model (Except for STi model)
Standard
1.108 — 1,304 kPa (11 — 13 kgf/cm^2, 161 — 189 psi)
Limit
951 kPa (10 kgf/cm^2, 138 psi)
Difference between cylinders
Less than 49 kPa (0.5 kgf/cm^2, 7 psi)

3. Idle Speed

A: INSPECTION

1. USING SUBARU SELECT MONITOR

1) Before checking the idle speed, check the following:
   (1) Ensure the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and that the hoses are connected properly.
   (2) Ensure the malfunction indicator light does not illuminate.
2) Warm-up the engine.
3) Stop the engine, and then turn the ignition switch to OFF.
4) Insert the cartridge to SUBARU SELECT MONITOR.
5) Connect the SUBARU SELECT MONITOR to data link connector.
6) Turn the ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.
7) Select the {2. Each System Check} in Main Menu.
8) Select the {Engine Control System} in Selection Menu.
9) Select the {1. Current Data Display & Save} in Engine Control System Diagnosis.
10) Select the {1.12 Data Display} in Data Display Menu.
11) Start the engine, and then read the engine idle speed.
12) Check the idle speed when unloaded. (With headlights, heater fan, rear defroster, radiator fan, air conditioning, etc. OFF)

Idle speed [No load and gears in neutral]:
Except for Australia model
700±100 rpm
Australia model (Except for STi model)
650±50 rpm (MT model)
700±50 rpm (AT model)

13) Check the idle speed when loaded. (Turn the air conditioning switch to “ON” and operate the compressor for at least 1 minute before measurement.)

Idle speed [A/C “ON”, no load and gears in neutral]:
Except for Australia model
800±150 rpm
Australia model (Except for STi model)
800±50 rpm (MT model)
820±50 rpm (AT model)

NOTE:
As idle speed is controlled by the automatic adjustment type, it can not be adjusted manually. If the idle speed is out of specifications, refer to General On-board Diagnosis Table under “Engine Control System”. <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>

4. Ignition Timing

A: INSPECTION

1. USING SUBARU SELECT MONITOR

1) Before checking the ignition timing speed, check the following:
   (1) Ensure the air cleaner element is free from clogging, spark plugs are in good condition, and that hoses are connected properly.
   (2) Ensure the malfunction indicator light does not illuminate.
2) Warm-up the engine.
3) Stop the engine, and then turn the ignition switch to OFF.
4) Insert the cartridge to SUBARU SELECT MONITOR.
5) Connect the SUBARU SELECT MONITOR to data link connector.
6) Turn the ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.
7) Select the {2. Each System Check} in Main Menu.
8) Select the {Engine Control System} in Selection Menu.
9) Select the {1. Current Data Display & Save} in Engine Control System Diagnosis.
10) Select the {1.12 Data Display} in Data Display Menu.
11) Start the engine and check the ignition timing at idle speed.

Ignition timing [BTDC/rpm]:
Except for Australia model
12°±10°/700
Australia model (Except for STi model)
12°±3°/650 (MT model)
12°±3°/700 (AT model)

If the timing is not correct, check the ignition control system. Refer to Engine Control System. <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>

5. Intake Manifold Vacuum

A: INSPECTION

1) Warm-up the engine.
2) Disconnect the brake vacuum hose, and then install the vacuum gauge to hose fitting on manifold.
3) Keep the engine at the idle speed, and then read the vacuum gauge indication.
By observing the gauge needle movement, the internal condition of engine can be diagnosed as described below.

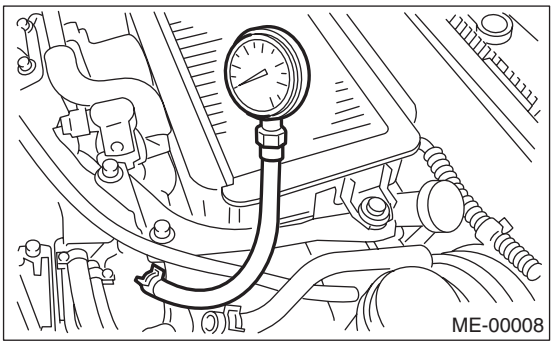

Vacuum pressure (at idling, A/C "OFF"):
Less than −60.0 kPa (−450 mmHg, −17.72 inHg)

Diagnosis of engine condition by measurement of manifold vacuum	
Vacuum gauge indication	Possible engine condition
1. Needle is steady but lower than normal position. This tendency becomes more evident as engine temperature rises.	Leakage around intake manifold gasket or disconnection or damaged vacuum hose
2. When engine speed is reduced slowly from higher speed, needle stops temporarily when it is lowering or becomes steady above normal position.	Back pressure too high, or exhaust system clogged
3. Needle intermittently drops to position lower than normal position.	Leakage around cylinder
4. Needle drops suddenly and intermittently from normal position.	Sticky valves
5. When engine speed is gradually increased, needle begins to vibrate rapidly at certain speed, and then vibration increases as engine speed increases.	Weak or broken valve springs
6. Needle vibrates above and below normal position in narrow range.	Defective ignition system or throttle chamber idle adjustment

6. Engine Oil Pressure

A: INSPECTION

1) Remove the oil pressure switch from engine cylinder block. <Ref. to LU(H4DOTC)-18, REMOVAL, Oil Pressure Switch.>
2) Connect the oil pressure gauge hose to cylinder block.
3) Connect the battery ground cable to battery.

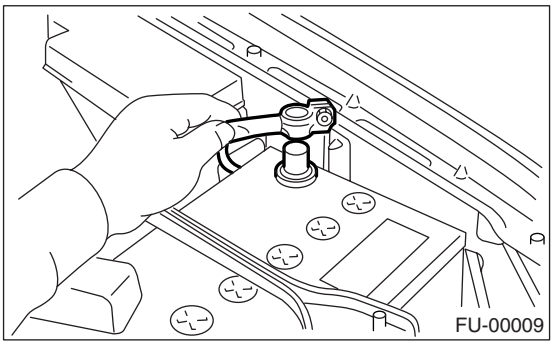

4) Start the engine, and then measure the oil pressure.

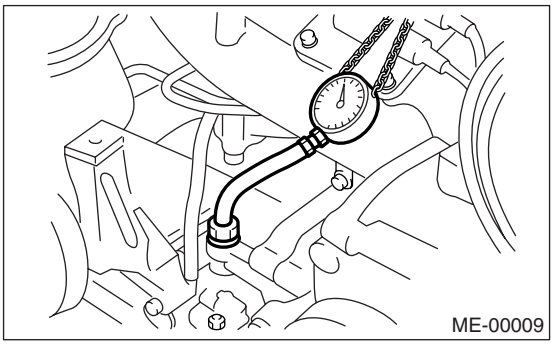

Oil pressure:
98 kPa (1.0 kg/cm^2, 14 psi) or more at 800 rpm
294 kPa (3.0 kg/cm^2, 43 psi) or more at 5,000 rpm

- If the oil pressure is out of specification, check oil pump, oil filter and lubrication line. <Ref. to LU(H4DOTC)-21, INSPECTION, Engine Lubrication System Trouble in General.>
- If the oil pressure warning light is turned ON and oil pressure is in specification, replace the oil pressure switch. <Ref. to LU(H4DOTC)-21, INSPECTION, Engine Lubrication System Trouble in General.>

NOTE:
The specified data is based on an engine oil temperature of 80°C (176°F).

5) After measuring the oil pressure, install the oil pressure switch. <Ref. to LU(H4DOTC)-18, INSTALLATION, Oil Pressure Switch.>

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

7. Fuel Pressure

A: INSPECTION

CAUTION:
Before removing the fuel pressure gauge, release the fuel pressure.

NOTE:
If out of specification, check or replace the pressure regulator and pressure regulator vacuum hose.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
2) Open the fuel flap lid, and then remove the fuel filler cap.
3) Disconnect the fuel delivery hoses from fuel filter, and then connect the fuel pressure gauge.

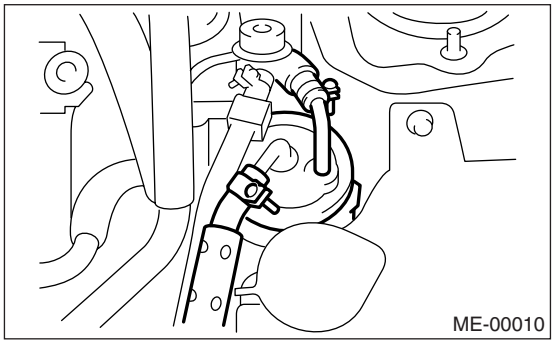

4) Connect the connector of fuel pump relay.

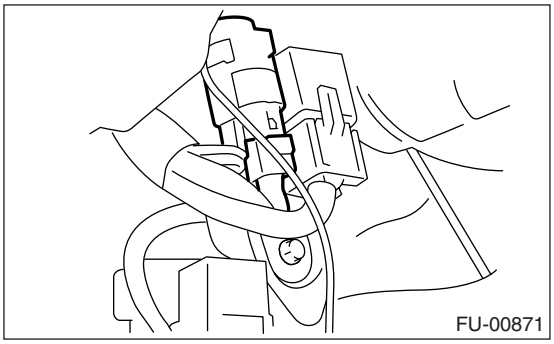

5) Start the engine.
6) Measure the fuel pressure while disconnecting the pressure regulator vacuum hose from intake manifold.

Fuel pressure:
Standard; 284 — 314 kPa (2.9 — 3.2 kgf/cm^2, 41 — 46 psi)

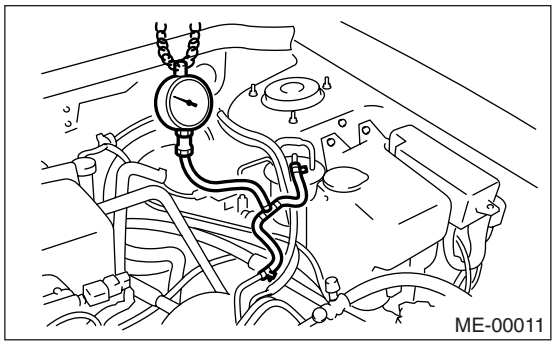

7) After connecting the pressure regulator vacuum hose, measure the fuel pressure.

Fuel pressure:
Standard; 230 — 260 kPa (2.35 — 2.65 kgf/cm^2, 33 — 38 psi)

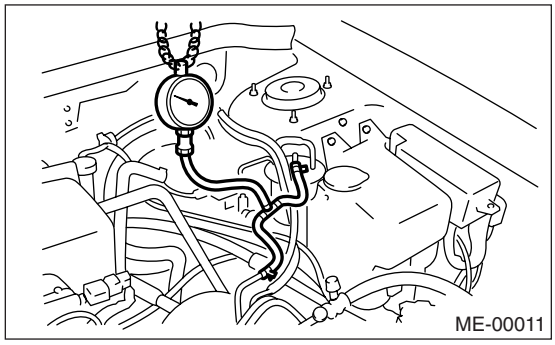

NOTE:
The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kgf/cm^2, 1 to 3 psi) higher than standard values during high-altitude operations.

8. Valve Clearance

A: INSPECTION

Inspection and adjustment of the valve clearance should be performed while engine is cold.

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

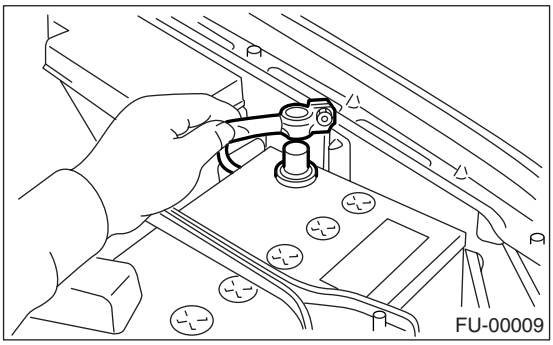

3) Remove the air intake duct. <Ref. to IN(H4DOTC)-9, REMOVAL, Air Intake Duct.>
4) Remove the bolts which secure the timing belt cover (RH).
5) Lift-up the vehicle.
6) Remove the under cover.
7) Loosen the remaining bolts which secure the timing belt cover (RH), and then remove the timing belt cover.
8) Lower the vehicle.
9) When inspecting the #1 and #3 cylinders:
   (1) Pull out the engine harness connector with bracket from air cleaner upper cover.

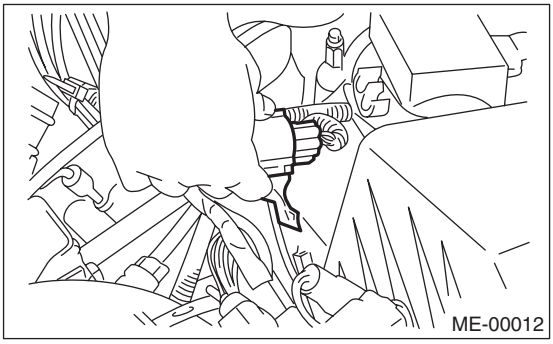

   (2) Remove the air cleaner case. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
   (3) Disconnect the ignition coil connector.
   (4) Remove the ignition coil.
   (5) Place a suitable container under the vehicle.
   (6) Disconnect the PCV hose from rocker cover (RH).
   (7) Remove the bolts, and then remove the rocker cover (RH).

10) When inspecting the #2 and #4 cylinders:
   (1) Disconnect the battery cable, and then remove the battery and battery carrier.

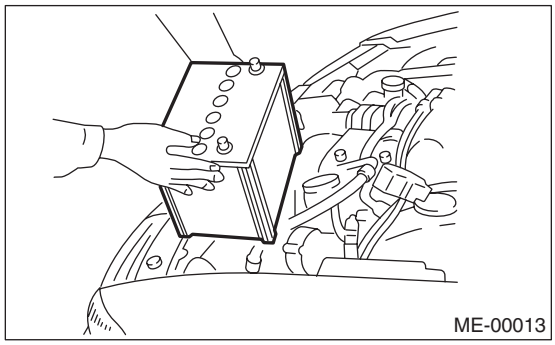

   (2) Remove the bolt which secures the engine harness bracket onto body.

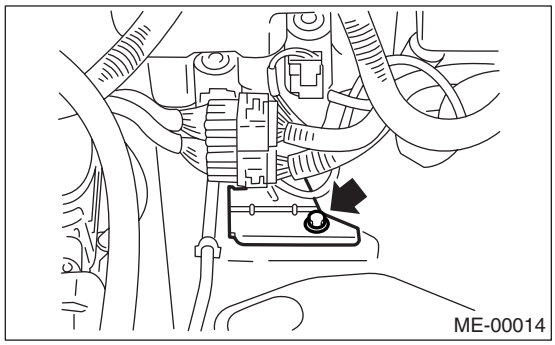

   (3) Disconnect the washer motor connectors.

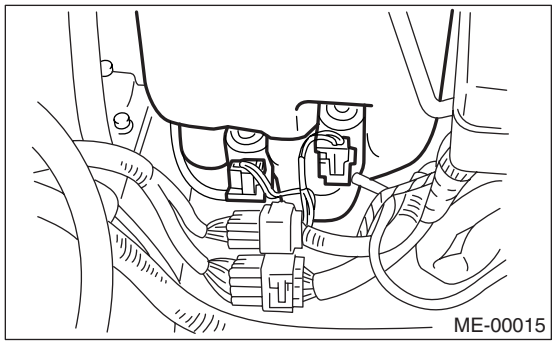

   (4) Remove the washer tank mounting bolts.

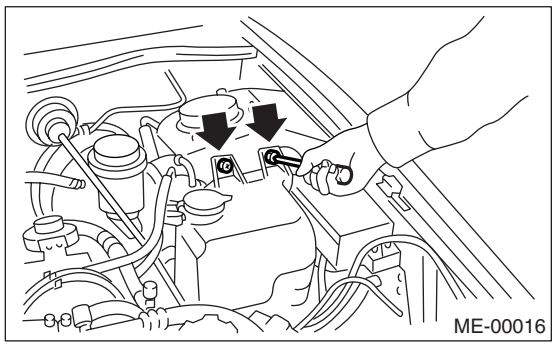

(5) Move the washer tank upward.

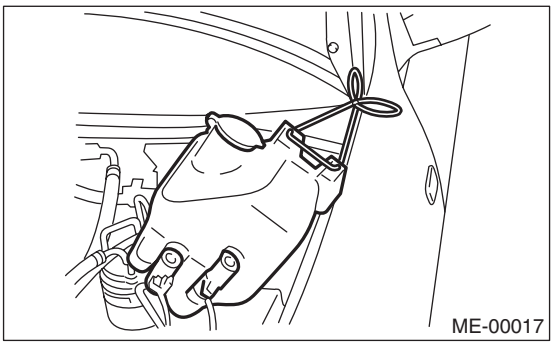

(6) Disconnect the ignition coil connector.
(7) Remove the ignition coil.
(8) Place a suitable container under the vehicle.
(9) Disconnect the PCV hose from rocker cover (LH).
(10) Remove the bolts, and then remove the rocker cover (LH).

11) Turn the crankshaft pulley clockwise until arrow mark on the camshaft sprocket is set to position shown in the figure.

NOTE:
Turn the crankshaft using socket wrench.

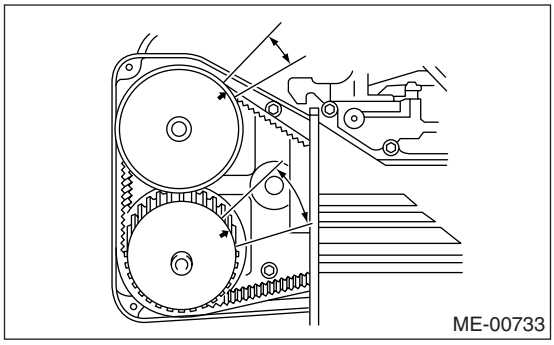

12) Measure the #1 cylinder intake valve and #3 cylinder exhaust valve clearance by using thickness gauge (A).

NOTE:
• Insert the thickness gauge in as horizontal a direction as possible with respect to the shim.
• Measure the exhaust valve clearances while lifting-up the vehicle.

Valve clearance:
Intake: 0.20±0.02 mm (0.0079±0.0008 in)
Exhaust: 0.25±0.02 mm (0.0098±0.0008 in)

NOTE:
If the measured value is not within specification, take notes of the value in order to adjust the valve clearance later on.

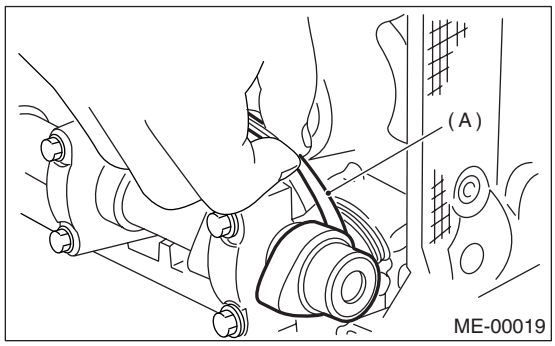

13) If necessary, adjust the valve clearance. <Ref. to ME(H4DOTC)-42, ADJUSTMENT, Valve Clearance.>

14) Further turn the crankshaft pulley clockwise. Using the same procedures described previously, and then measure the valve clearances again.

(1) Set the arrow mark on camshaft sprocket to position shown in the figure, and then measure the #2 cylinder exhaust valve and #3 cylinder intake valve clearances.

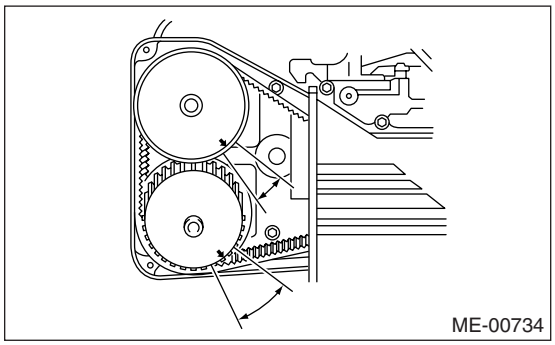

(2) Set the arrow mark on camshaft sprocket to position shown in the figure, and then measure the #2 cylinder intake valve and #4 cylinder exhaust valve clearances.

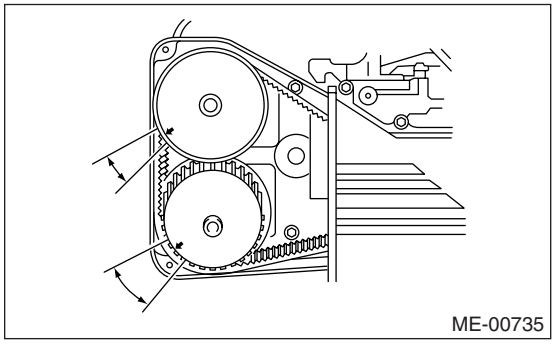

(3) Set the arrow mark on camshaft sprocket to position shown in the figure, and then measure the #1 cylinder exhaust valve and #4 cylinder intake valve clearances.

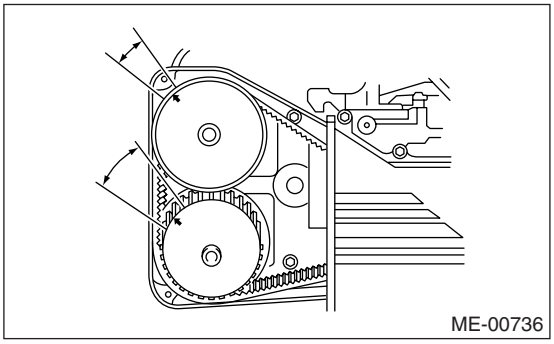
ME-00736

15) After inspection, install the related parts in the reverse order of removal.

Tightening torque:
33 N·m (3.4 kgf-m, 25 ft-lb)

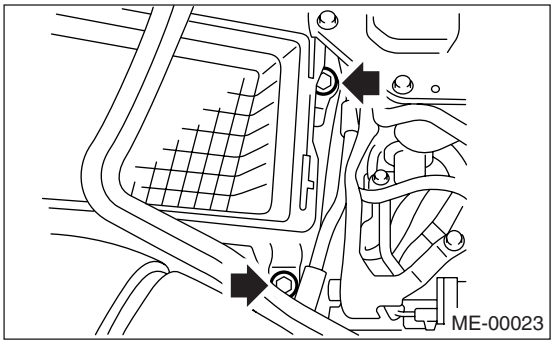
ME-00023

B: ADJUSTMENT

CAUTION:
Adjustment of the valve clearance should be performed while engine is cold.

1) Measure all valve clearances. <Ref. to ME(H4DOTC)-40, INSPECTION, Valve Clearance.>

NOTE:
Record each valve clearance after it has been measured.

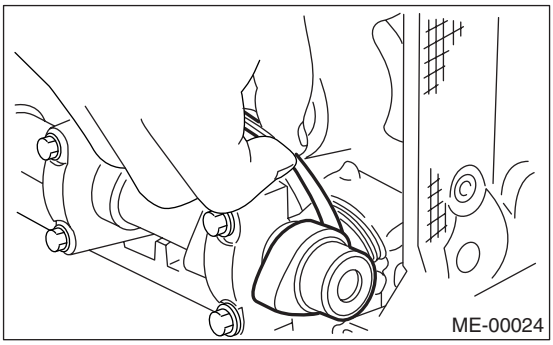
ME-00024

2) Remove the camshaft. <Ref. to ME(H4DOTC)-72, REMOVAL, Camshaft.>

3) Remove the valve lifter.
4) Measure the thickness of valve lifter with a micrometer.

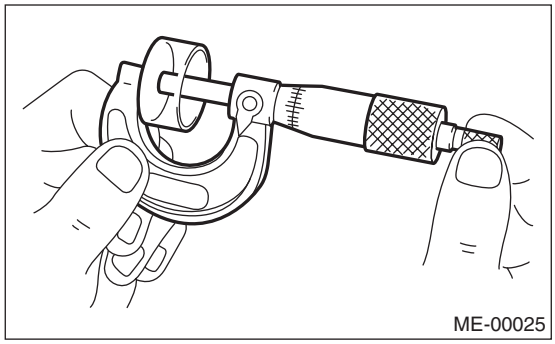
ME-00025

5) Select a shim of suitable thickness using measured valve clearance and valve lifter thickness, by referring to the following table.

Unit: mm
Intake valve: S =V – 0.20 Exhaust valve: S =V – 0.25
S: Valve lifter thickness to be used V: Measured valve clearance

Part No.	Thickness mm (in)
13228 AB101	4.68 (0.1843)
13228 AB111	4.69 (0.1846)
13228 AB121	4.70 (0.1850)
13228 AB131	4.71 (0.1854)
13228 AB141	4.72 (0.1858)
13228 AB151	4.73 (0.1862)
13228 AB161	4.74 (0.1866)
13228 AB171	4.75 (0.1870)
13228 AB181	4.76 (0.1874)
13228 AB191	4.77 (0.1878)
13228 AB201	4.78 (0.1882)
13228 AB211	4.79 (0.1886)
13228 AB221	4.80 (0.1890)
13228 AB231	4.81 (0.1894)
13228 AB241	4.82 (0.1898)
13228 AB251	4.83 (0.1902)
13228 AB261	4.84 (0.1906)
13228 AB271	4.85 (0.1909)
13228 AB281	4.86 (0.1913)
13228 AB291	4.87 (0.1917)
13228 AB301	4.88 (0.1921)
13228 AB311	4.89 (0.1925)
13228 AB321	4.90 (0.1929)
13228 AB331	4.91 (0.1933)
13228 AB341	4.92 (0.1937)
13228 AB351	4.93 (0.1941)
13228 AB361	4.94 (0.1945)
13228 AB371	4.95 (0.1949)
13228 AB381	4.96 (0.1953)

Part No.	Thickness mm (in)
13228 AB391	4.97 (0.1957)
13228 AB401	4.98 (0.1961)
13228 AB411	4.99 (0.1965)
13228 AB421	5.00 (0.1969)
13228 AB431	5.01 (0.1972)
13228 AB441	5.02 (0.1976)
13228 AB451	5.03 (0.1980)
13228 AB461	5.04 (0.1984)
13228 AB471	5.05 (0.1988)
13228 AB481	5.06 (0.1992)
13228 AB491	5.07 (0.1996)
13228 AB501	5.08 (0.2000)
13228 AB511	5.09 (0.2004)
13228 AB521	5.10 (0.2008)
13228 AB531	5.11 (0.2012)
13228 AB541	5.12 (0.2016)
13228 AB551	5.13 (0.2020)
13228 AB561	5.14 (0.2024)
13228 AB571	5.15 (0.2028)
13228 AB581	5.16 (0.2031)
13228 AB591	5.17 (0.2035)
13228 AB601	5.18 (0.2039)
13228 AB611	5.19 (0.2043)
13228 AB621	5.20 (0.2047)
13228 AB631	5.21 (0.2051)
13228 AB641	5.22 (0.2055)
13228 AB651	5.23 (0.2059)
13228 AB661	5.24 (0.2063)
13228 AB671	5.25 (0.2067)
13228 AB681	5.26 (0.2071)
13228 AB691	5.27 (0.2075)
13228 AB701	4.38 (0.1724)
13228 AB711	4.40 (0.1732)
13228 AB721	4.42 (0.1740)
13228 AB731	4.44 (0.1748)
13228 AB741	4.46 (0.1756)
13228 AB751	4.48 (0.1764)
13228 AB761	4.50 (0.1771)
13228 AB771	4.52 (0.1780)
13228 AB781	4.54 (0.1787)
13228 AB791	4.56 (0.1795)
13228 AB801	4.58 (0.1803)
13228 AB811	4.60 (0.1811)
13228 AB821	4.62 (0.1819)
13228 AB831	4.64 (0.1827)
13228 AB841	4.66 (0.1835)
13228 AB851	5.29 (0.2083)
13228 AB861	5.31 (0.2091)
13228 AB871	5.33 (0.2098)
13228 AB881	5.35 (0.2106)
13228 AB891	5.37 (0.2114)

Part No.	Thickness mm (in)
13228 AB901	5.39 (0.2122)
13228 AB911	5.41 (0.2123)
13228 AB921	5.43 (0.2138)
13228 AB931	5.45 (0.2146)
13228 AB941	5.47 (0.2154)
13228 AB951	5.49 (0.2161)
13228 AB961	5.51 (0.2169)
13228 AB971	5.53 (0.2177)
13228 AB981	5.55 (0.2185)
13228 AB991	5.57 (0.2193)
13228 AC001	5.59 (0.2201)
13228 AC011	5.61 (0.2209)
13228 AC021	5.63 (0.2217)
13228 AC031	5.65 (0.2224)

6) Inspect all valves for clearance again at this stage. If the valve clearance is not correct, repeat the procedure over again from the first step.
7) After inspection, install the related parts in the reverse order of removal.

9. Engine Assembly

A: REMOVAL

1) Set the vehicle on a lift.
2) Open the front hood fully, and then support with the hood stay.
3) Collect the refrigerant from A/C system.
4) Release the fuel pressure.
   (1) Disconnect the fuel pump relay connector.

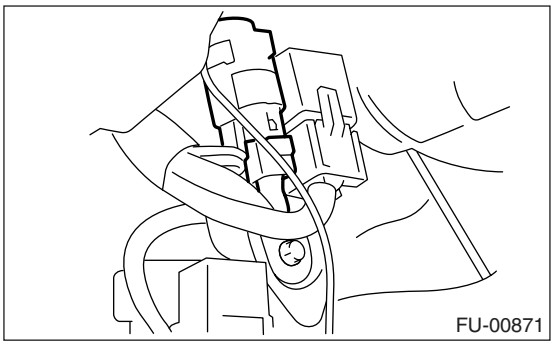

   (2) Start the engine, and run until stalls.
   (3) After the engine stalls, crank it for 5 seconds more.
   (4) Turn the ignition switch to OFF.
5) Remove the filler cap.
6) Disconnect the ground cable from battery.

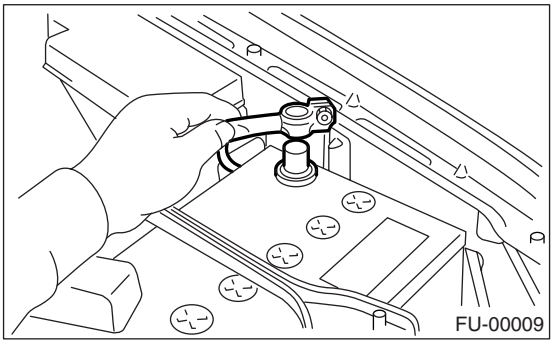

7) Remove the radiator from vehicle. <Ref. to CO(H4DOTC)-23, REMOVAL, Radiator.>
8) Remove the coolant filler tank. <Ref. to CO(H4DOTC)-33, REMOVAL, Coolant Filler Tank.>
9) Disconnect the A/C pressure hoses from A/C compressor.

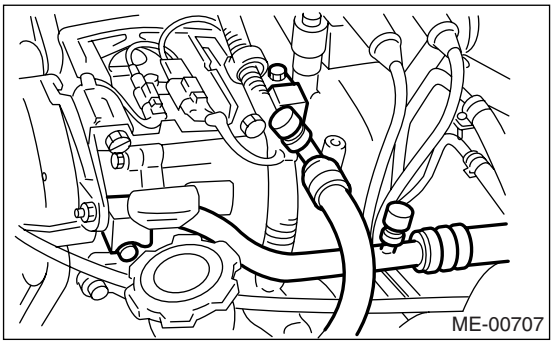

10) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
11) Disconnect the following connectors and cable.
   (1) Engine harness connector

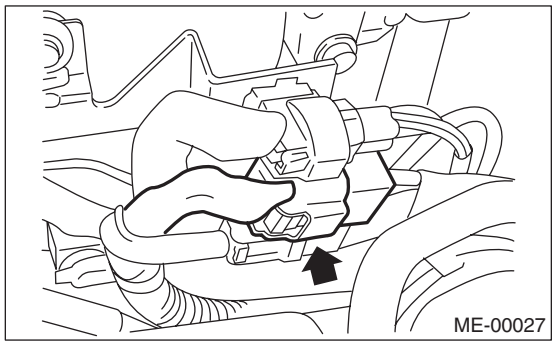

   (2) Engine ground terminal

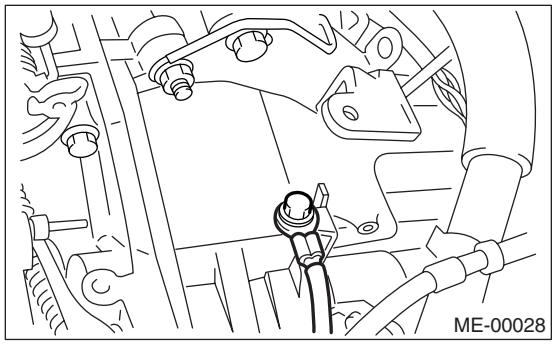

   (3) Engine harness connector

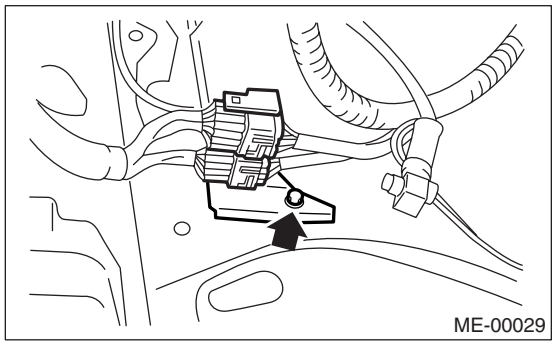

   (4) Generator connector, terminal and A/C compressor connectors

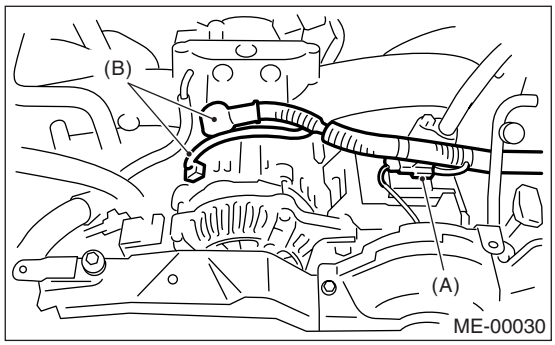

   (A) A/C compressor connector
   (B) Generator connector and terminal

(5) Accelerator cable (MT model)

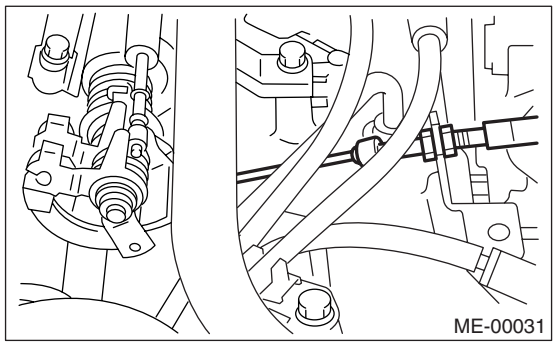

(6) Clutch release spring (MT model)

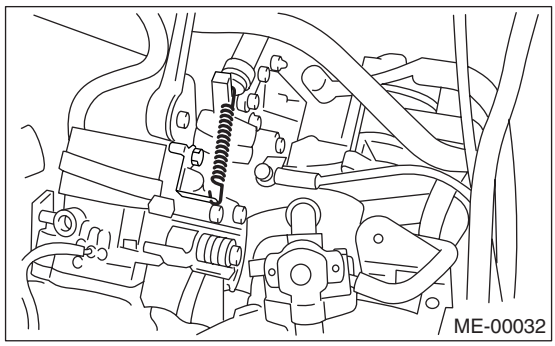

12) Disconnect the following hoses.

(1) Brake booster vacuum hose

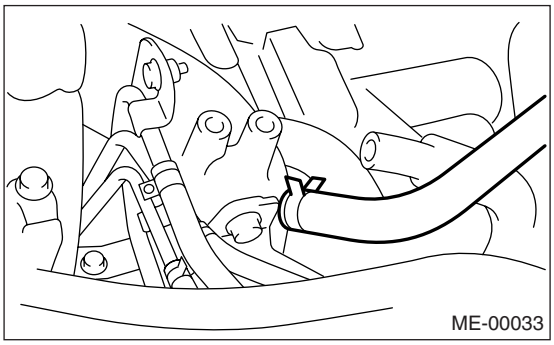

(2) Heater inlet outlet hose

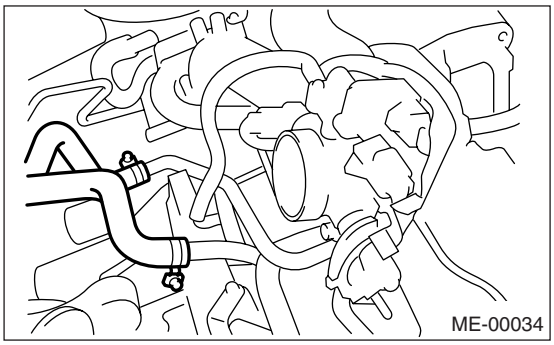

13) Remove the power steering pump from bracket.

(1) Loosen the lock bolt and slider bolt, and then remove the front side V-belt. <Ref. to ME(H4DOTC)-55, FRONT SIDE BELT, REMOVAL, V-belt.>

(2) Disconnect the power steering switch connector.

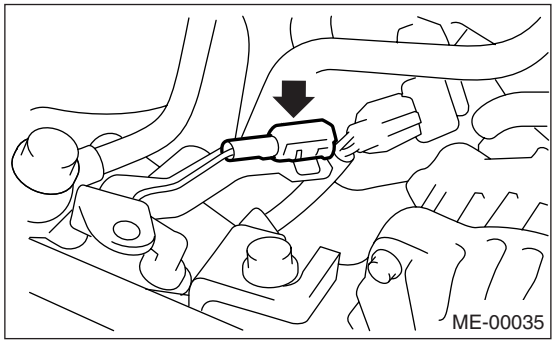

(3) Remove the pipe with bracket from intake manifold.

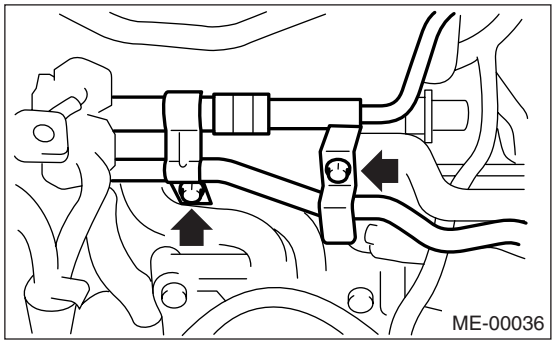

(4) Remove the power steering pump from engine.

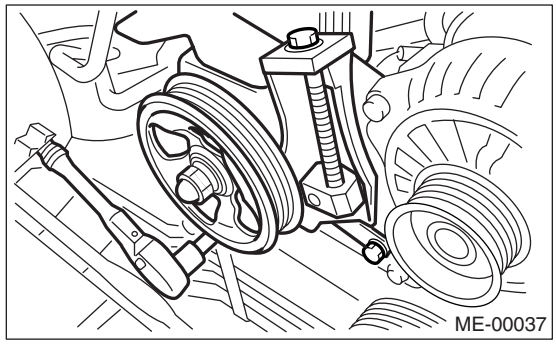

(5) Remove the power steering tank from bracket by pulling it upward.

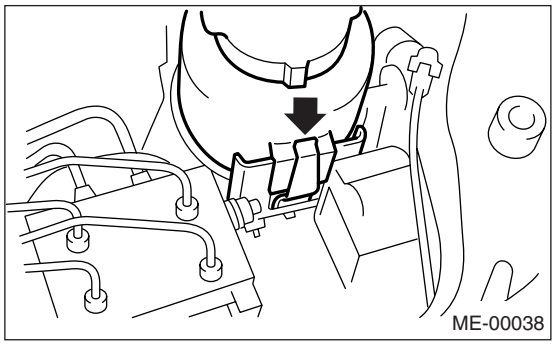

(6) Place the power steering pump on right side wheel apron.

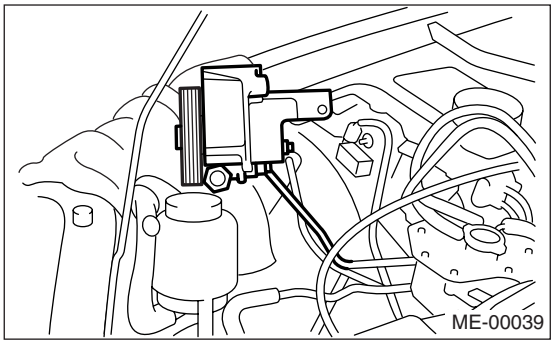

14) Lift-up the vehicle.
15) Remove the ATF cooler pipe from frame. (AT model)
16) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
17) Remove the nuts which hold the lower side of transmission to engine.

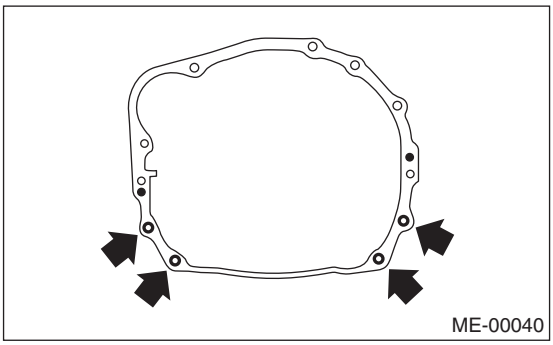

18) Remove the nuts which install the front cushion rubber onto front crossmember.

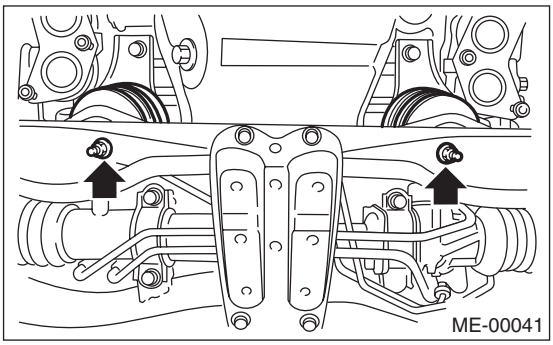

19) Lower the vehicle.
20) Separate the clutch release fork from release bearing. (MT model)
(1) Remove the clutch operating cylinder from transmission.
(2) Remove the plug using a 10 mm hexagon wrench.

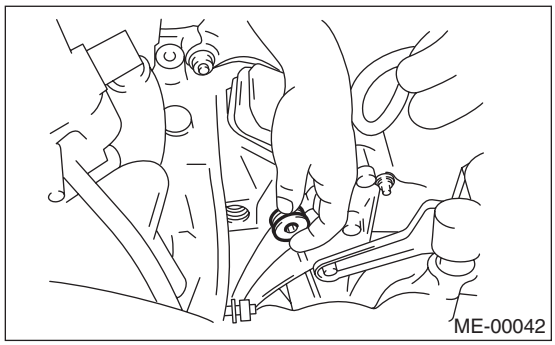

(3) Screw the 6 mm dia. bolt into release fork shaft, and remove it.

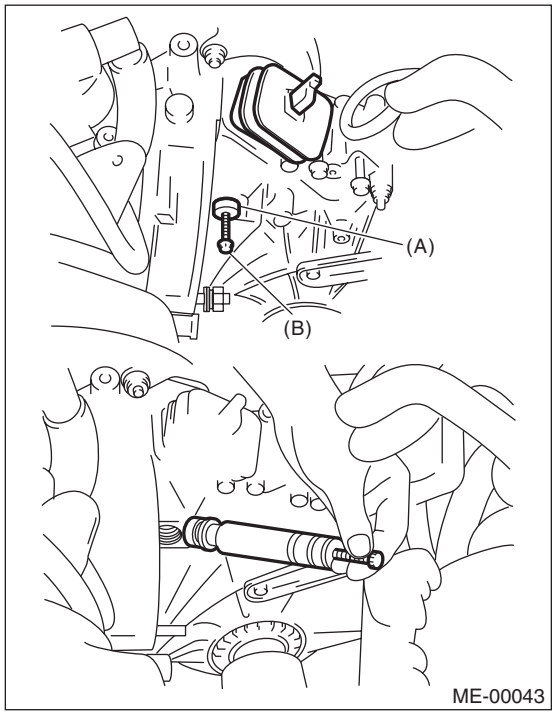

(A) Shaft
(B) Bolt

(4) Raise the release fork, and then unfasten the release bearing tabs to free release fork.

NOTE:
Step (4) is required to prevent interference with engine when removing the engine from transmission.

21) Separate the torque converter clutch from drive plate. (AT model)
(1) Lower the vehicle.
(2) Remove the service hole plug.
(3) Remove the bolts which hold the torque converter clutch to drive plate.

(4) Remove the other bolts while rotating the engine using socket wrench.

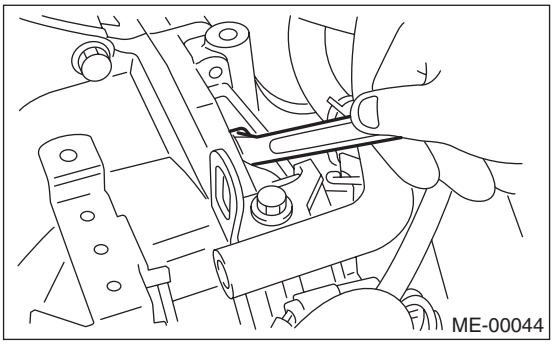

22) Remove the pitching stopper.

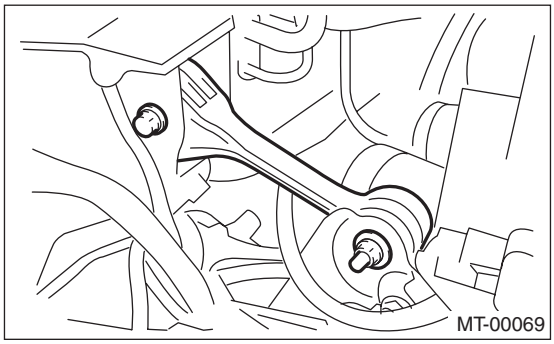

23) Disconnect the fuel delivery hose, return hose and evaporation hose.

NOTE:
- Catch fuel from the hose into container.
- Disconnect the hose with its end wrapped with cloth to prevent fuel from splashing.

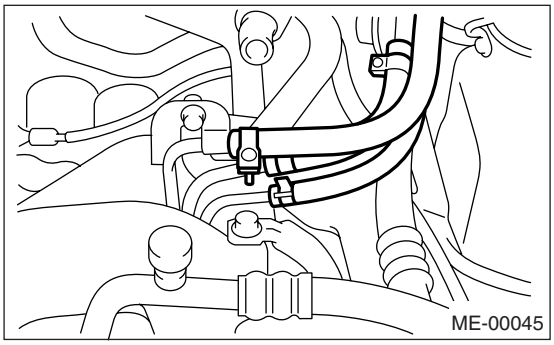

24) Remove the fuel filter and bracket.

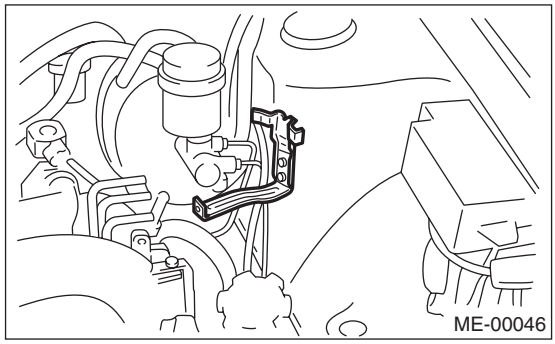

25) Support the engine with a lifting device and wire ropes.

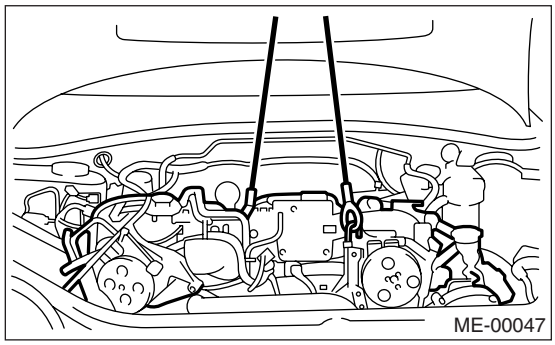

26) Support the transmission with a garage jack.

NOTE:
Before moving the engine away from transmission, check to be sure no work has been overlooked. Doing this is very important in order to facilitate re-installation and because transmission lowers under its own weight.

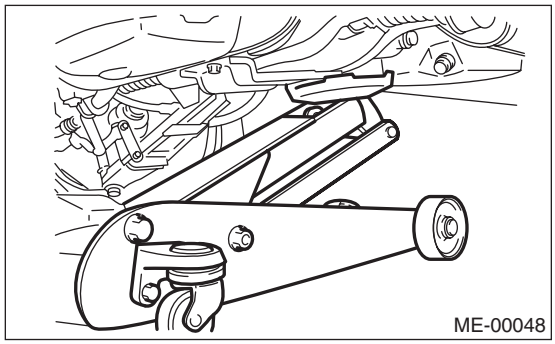

27) Separation of the engine and transmission.
(1) Remove the starter. <Ref. to SC(H4SO)-7, REMOVAL, Starter.>
(2) Install the ST to torque converter clutch case. (AT model)

ST 498277200 STOPPER SET

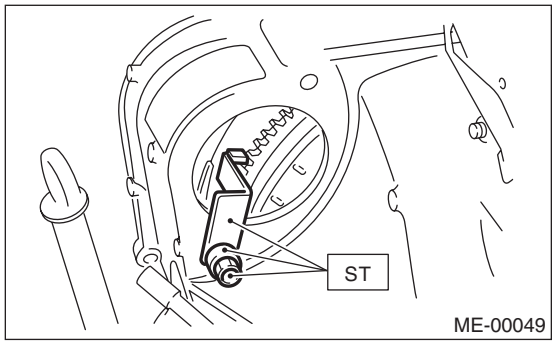

(3) Remove the bolts which hold the right upper side of transmission to engine.

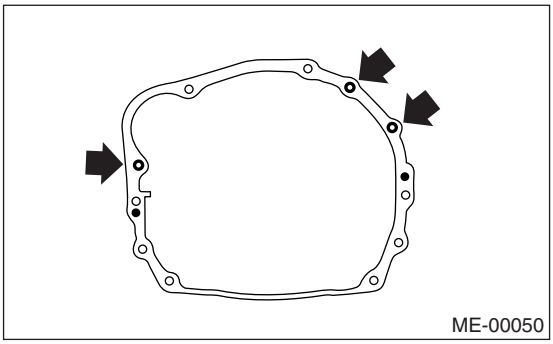

28) Remove the engine from vehicle.
(1) Slightly raise the engine.
(2) Raise the transmission with garage jack.
(3) Move the engine horizontally until the main-shaft is withdrawn from clutch cover.
(4) Slowly move the engine away from engine compartment.

NOTE:
Be careful not to damage adjacent parts or body panels with crank pulley, oil pressure gauge, etc.

29) Remove the front cushion rubbers.

B: INSTALLATION

1) Install the clutch release fork and bearing onto transmission. (MT model)
(1) Remove the release bearing from clutch cover with flat type screw driver.

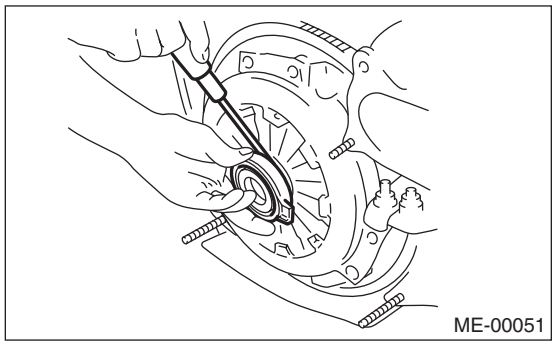

(2) Install the release bearing on transmission.
(3) Install the release fork into release bearing tab.

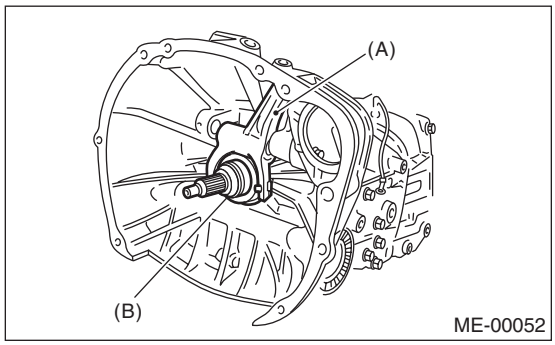

(A) Release fork
(B) Release bearing

(4) Apply grease to the specified points.
- Spline FX2200
- Shaft SUNLIGHT 2

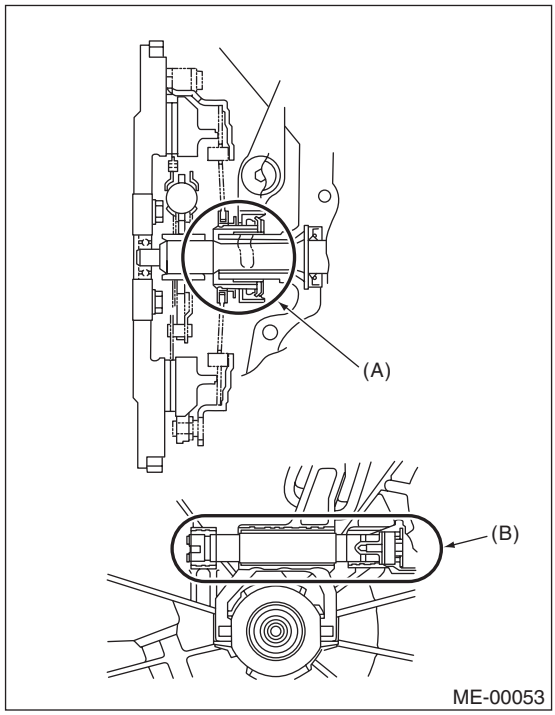

(A) Spline (FX2200)
(B) Shaft (SUNLIGHT 2)

(5) Insert the release fork shaft into release fork.

CAUTION:
Make sure the cutout portion of release fork shaft contacts spring pin.

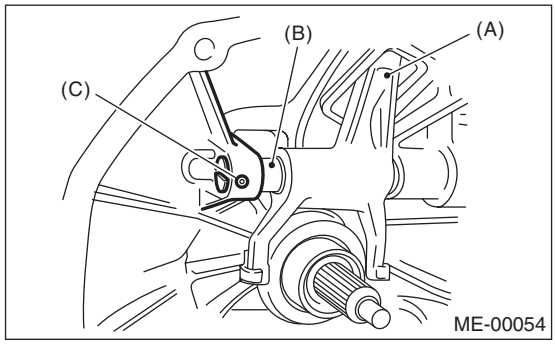

(A) Release fork
(B) Release shaft
(C) Spring pin

(6) Tighten the plug.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

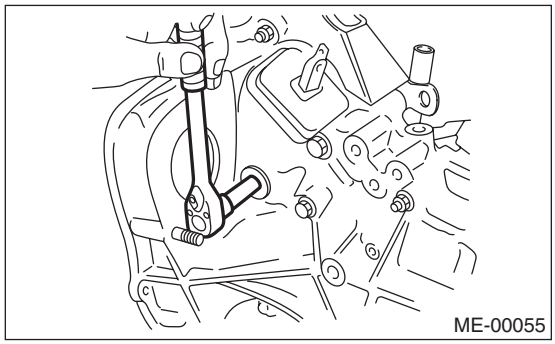

2) Install the front cushion rubbers to engine.

Tightening torque:
35 N·m (3.6 kgf-m, 25.8 ft-lb)

3) Install the engine onto transmission.
(1) Position the engine in engine compartment, and then align it with the transmission.

NOTE:
Be careful not to damage the adjacent parts or body panels with crank pulley, oil pressure gauge, etc.

(2) Apply a small amount of grease to the splines of mainshaft. (MT model)

4) Tighten the bolts which hold the right upper side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

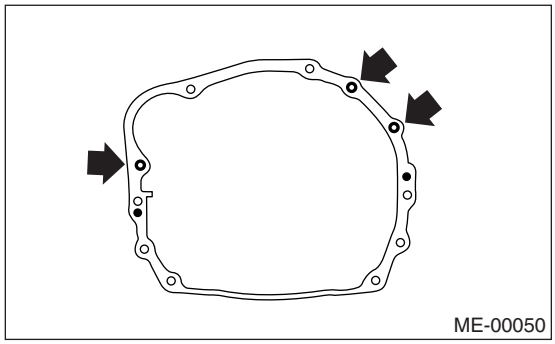

5) Remove the lifting device and wire ropes.

6) Remove the garage jack.

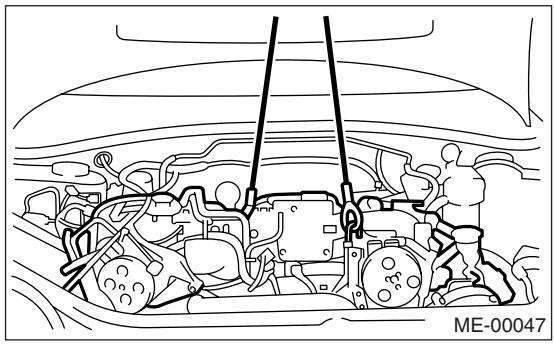

7) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

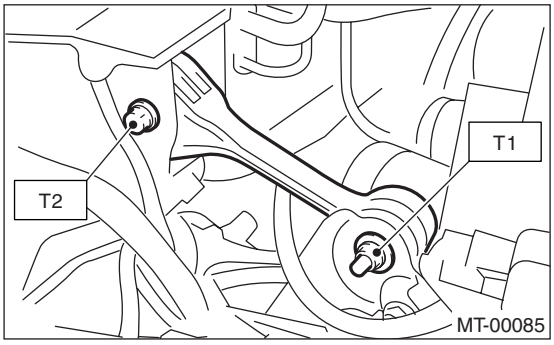

8) Remove the ST from torque converter clutch case. (AT model)

NOTE:
Be careful not to drop the ST into torque converter clutch case when removing ST.
ST 498277200 STOPPER SET

9) Install the starter. <Ref. to SC(H4SO)-7, INSTALLATION, Starter.>

10) Install the torque converter clutch onto drive plate. (AT model)
(1) Tighten the bolts which hold the torque converter clutch to drive plate.
(2) Tighten other bolts while rotating the engine by using ST.

CAUTION:
Be careful not to drop bolts into the torque converter clutch housing.
ST 499977300 CRANKSHAFT PULLEY WRENCH

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

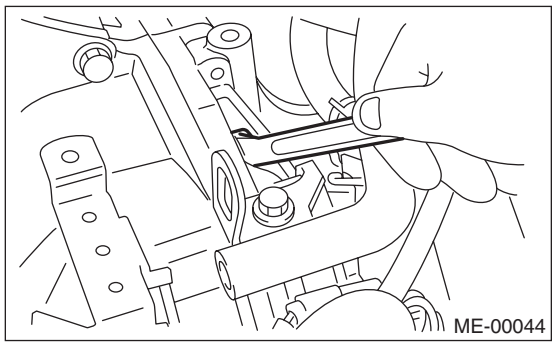

(3) Clog the service hole with plug.

11) Install the fuel filter and bracket.

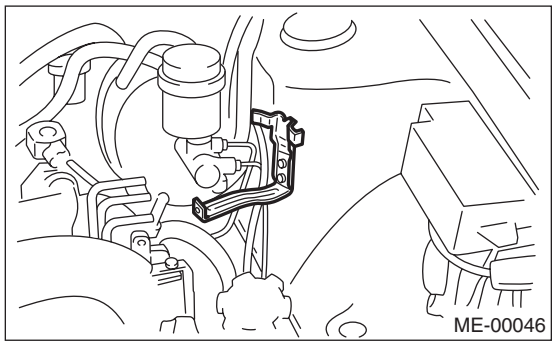

12) Install the power steering pump on bracket.
(1) Install the power steering tank on bracket.

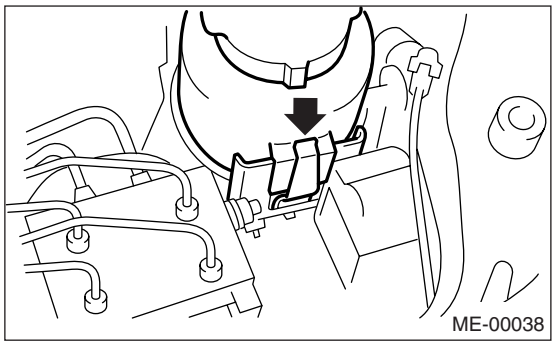

(2) Install the power steering pump.

Tightening torque:
20.1 N·m (2.05 kgf-m, 14.8 ft-lb)

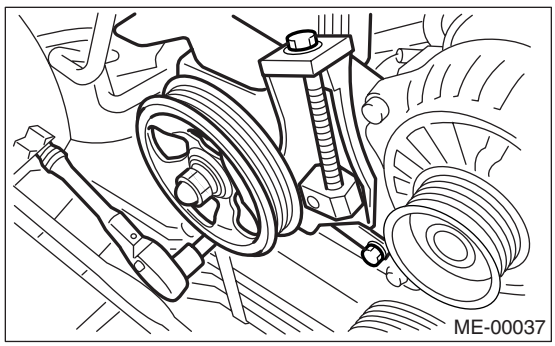

(3) Install the power steering pipe bracket on intake manifold RH.

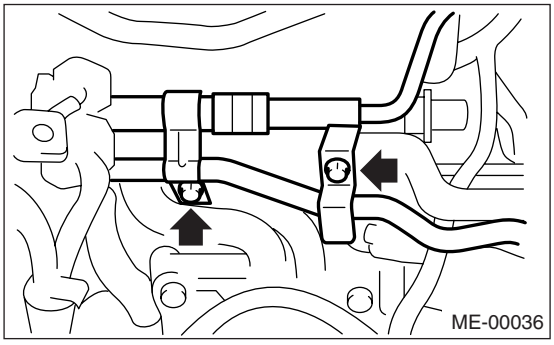

(4) Connect the power steering switch connector.

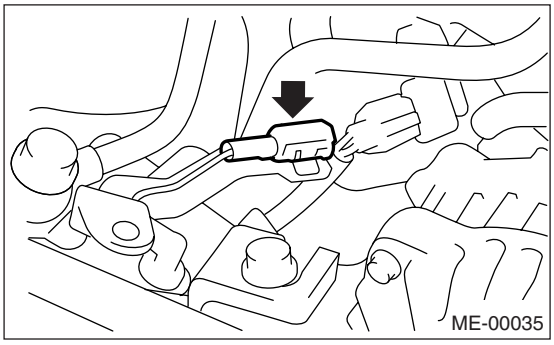

(5) Install the front side V-belt, and adjust it. <Ref. to ME(H4DOTC)-55, FRONT SIDE BELT, INSTALLATION, V-belt.>

13) Lift-up the vehicle.

14) Tighten the nuts which hold the lower side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

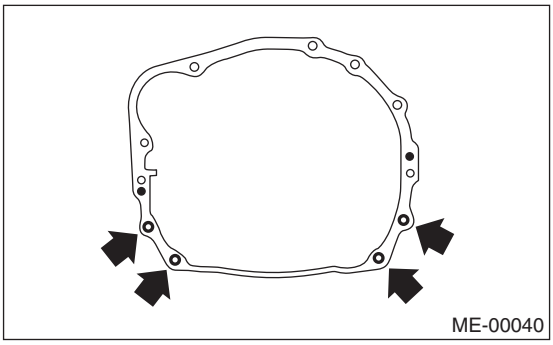

15) Tighten the nuts which install the front cushion rubber onto crossmember.

Tightening torque:
85 N·m (8.7 kgf-m, 62.7 ft-lb)

NOTE:
Make sure the front cushion rubber mounting bolts (A) and locator (B) are securely installed.

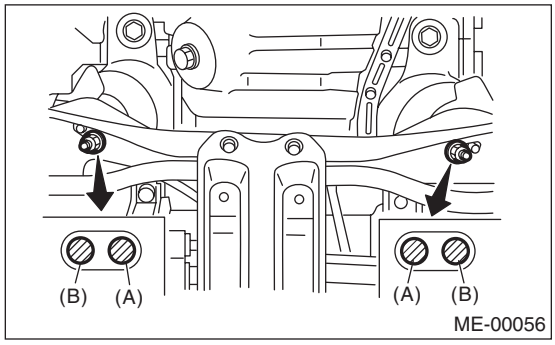

16) Install the ATF cooler pipe to frame. (AT model)

17) Install the center exhaust pipe.
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>

18) Lower the vehicle.

19) Connect the following hoses:
(1) Fuel delivery hose, return hose and evaporation hose
(2) Heater inlet and outlet hoses
(3) Brake booster vacuum hose

20) Connect the following connectors and terminals:
(1) Engine ground terminal
(2) Engine harness connectors
(3) Generator connector and terminal
(4) A/C compressor connectors

21) Connect the following cables:
(1) Accelerator cable
(2) Clutch release spring

22) After connecting each cable, adjust them.

23) Install the air intake system.
(1) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
(2) Install the air cleaner element and air cleaner upper cover.
(3) Install the engine harness connector bracket.
(4) Install the filler hose to air cleaner case.

24) Install the A/C pressure hoses.

NOTE:
Use new O-rings.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

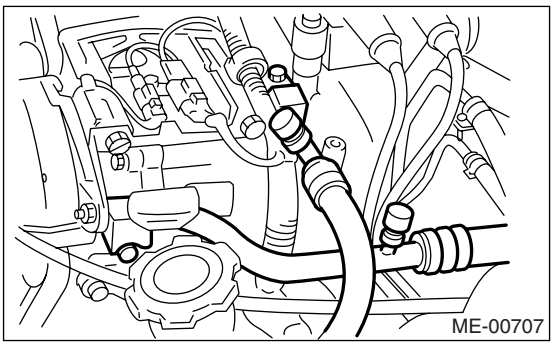

25) Install the radiator. <Ref. to CO(H4DOTC)-24, INSTALLATION, Radiator.>
26) Install the coolant filler tank. <Ref. to CO(H4DOTC)-33, INSTALLATION, Coolant Filler Tank.>
27) Install the window washer tank.
28) Install the battery in the vehicle, and then connect the cables.
29) Fill coolant.
<Ref. to CO(H4DOTC)-17, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
30) Charge the A/C system with refrigerant.
<Ref. to AC-22, OPERATION, Refrigerant Charging Procedure.>
31) Remove the front hood stay, and close the front hood.
32) Take off the vehicle from lift arms.

10.Engine Mounting

A: REMOVAL

1) Remove the engine assembly. <Ref. to ME(H4DOTC)-44, REMOVAL, Engine Assembly.>
2) Remove the engine mounting from engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Engine mounting;
35 N·m (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION

Make sure there are no cracks or other damage.

11.Preparation for Overhaul

A: PROCEDURE

1) After removing the engine from body, secure it in the ST shown below.

ST1	498457000	ENGINE STAND ADAPTER RH
ST2	498457100	ENGINE STAND ADAPTER LH
ST3	499817000	ENGINE STAND

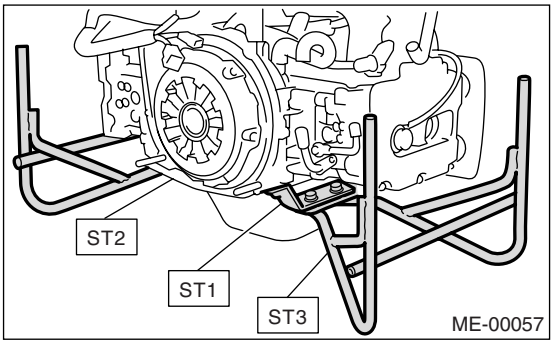

2) In this section the procedures described under each index are all connected and stated in order. It will be the complete procedure for overhauling of the engine itself when you go through all steps in the process.
Therefore, in this section, to conduct the particular procedure within the flow of a section, you need to go back and conduct the procedure described previously in order to do that particular procedure.

12.V-belt

A: REMOVAL

1. FRONT SIDE BELT

1) Remove the V-belt cover.

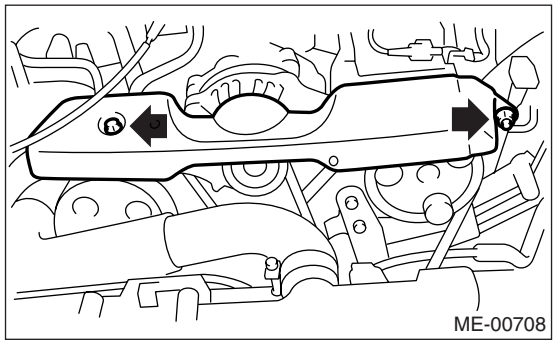

2) Loosen the lock bolt (A).
3) Loosen the slider bolt (B).
4) Remove the front side belt (C).

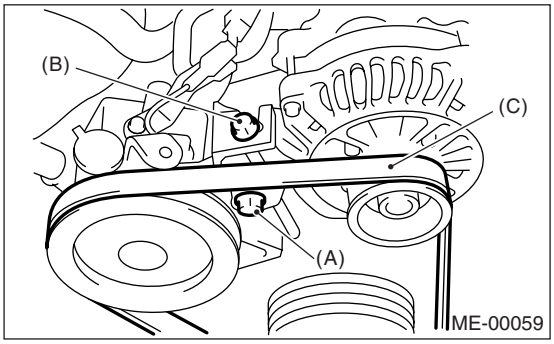

2. REAR SIDE BELT

1) Loosen the lock nut (A).
2) Loosen the slider bolt (B).

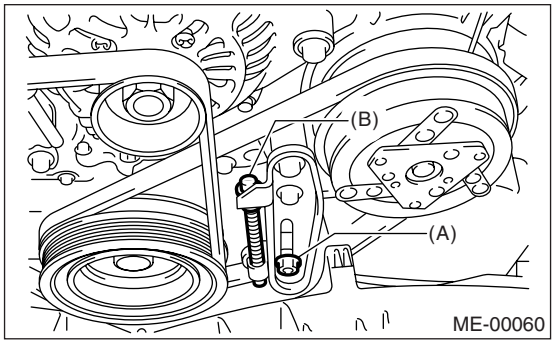

3) Remove the A/C belt.
4) Remove the A/C belt tensioner.

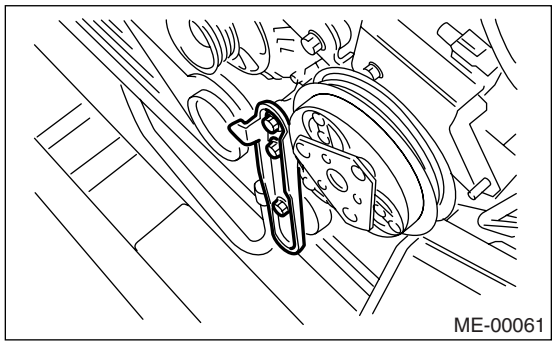

B: INSTALLATION

1. FRONT SIDE BELT

CAUTION:
Wipe off any oil or water on the belt and pulley.

1) Install the belt (C), and tighten the slider bolt so as to obtain the specified belt tension <Ref. to ME(H4DOTC)-56, INSPECTION, V-belt.>
2) Tighten the lock bolt (A).
3) Tighten the slider bolt (B).

Tightening torque:
Lock bolt through bolt:
25 N·m (2.5 kgf-m, 18.1 ft-lb)
Slider bolt:
8 N·m (0.8 kgf-m, 5.5 ft-lb)

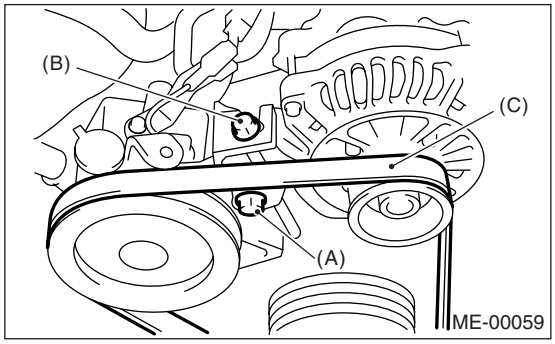

4) Idle the engine for approx. 5 min. to normalize the V-belt. (With using tension gauge)
5) Stop the engine, and then check the belt tension and adjust it. (With using tension gauge)
6) Idle the engine for approx. 1 min. to normalize the V-belt. (With using tension gauge)
7) Stop the engine, and then check the belt tension is within specified value. (With using tension gauge)
8) Adjust the belt tension until the value within specification. (With using tension gauge)

2. REAR SIDE BELT

1) Install the belt, and tighten the slider bolt (B) so as to obtain the specified belt tension. <Ref. to ME(H4DOTC)-56, INSPECTION, V-belt.>
2) Tighten the lock nut (A).

Tightening torque:
Lock nut (A);
22.6 N·m (2.3 kgf-m, 16.6 ft-lb)

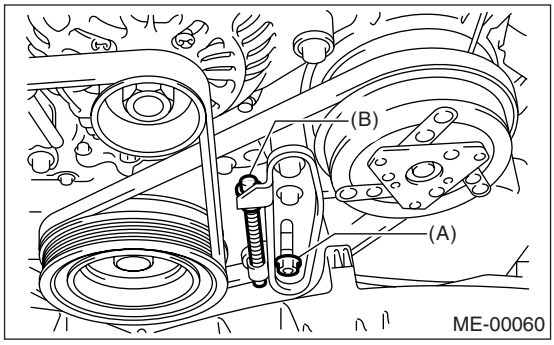

3) Idle the engine for approx. 5 min. to normalize the V-belt. (With using tension gauge)
4) Stop the engine, and then check the belt tension and adjust it. (With using tension gauge)
5) Idle the engine for approx. 1 min. to normalize the V-belt. (With using tension gauge)
6) Stop the engine, and then check the belt tension is within specified value. (With using tension gauge)
7) Adjust the belt tension until the value within specification. (With using tension gauge)

C: INSPECTION

1. WITHOUT USING BELT TENSION GAUGE

1) Replace the belts, if cracks, fraying or wear is found.
2) Check the drive belt tension and adjust it if necessary by changing generator installing position and/or idler pulley installing position.

Belt tension
(A)
replaced: 7 — 9 mm (0.276 — 0.354 in)
reused: 9 — 11 mm (0.354 — 0.433 in)
(B)*
replaced: 7.5 — 8.5 mm (0.295 — 0.335 in)
reused: 9.0 — 10.0 mm (0.354 — 0.394 in)
****: with air conditioner***

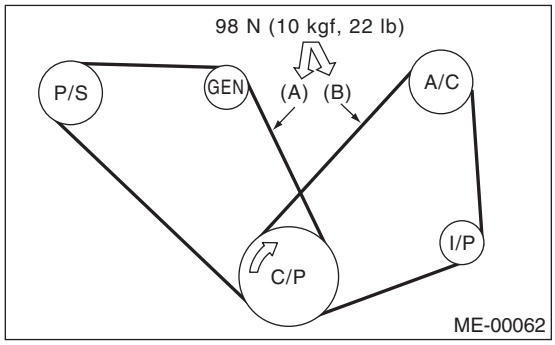

C/P	Crankshaft pulley
GEN	Generator
P/S	Power steering oil pump pulley
A/C	Air conditioning compressor pulley
I/P	Idler pulley

2. WITH USING BELT TENSION GAUGE

1) Replace the belts, if cracks, fraying or wear is found.
2) Remove the V-belt cover and radiator reservoir tank.
3) Check the belt tension using belt tension gauge. And adjust it if necessary by changing the generator installing position and/or idler pulley installing position.

Belt tension

(A) 490 — 640 N (50 — 65 kgf, 110 — 144 lb)
(B) 350 — 450 N (36 — 46 kgf, 79 — 101 lb)

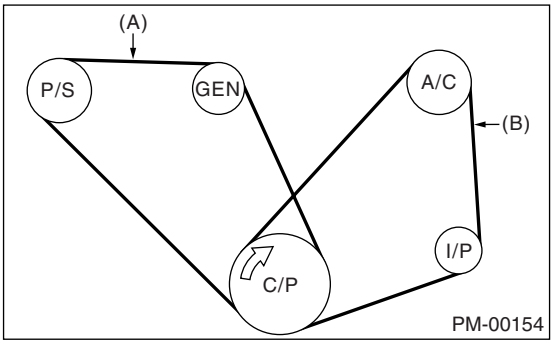

(A) Front side belt
(B) Rear side belt
C/P Crankshaft pulley
GEN Generator
P/S Power steering oil pump pulley
A/C A/C compressor pulley
I/P Idler pulley

13.Crankshaft Pulley

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley bolt. To lock the crankshaft, use ST.

ST 499977400 CRANKSHAFT PULLEY WRENCH

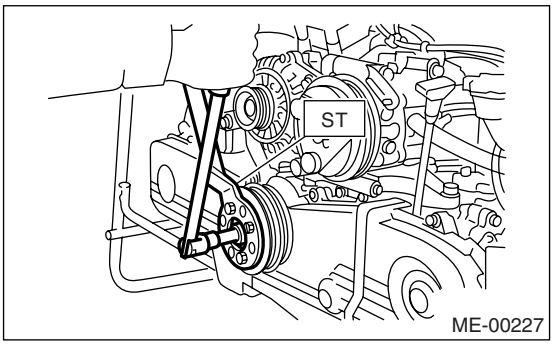

3) Remove the crankshaft pulley.

B: INSTALLATION

1) Install the crankshaft pulley.
2) Install the pulley bolt.

To lock the crankshaft, use ST.

ST 499977400 CRANKSHAFT PULLEY WRENCH

(1) Clean the crankshaft pulley thread using an air gun.
(2) Apply engine oil to the crankshaft pulley bolt seat and thread.
(3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
(4) Tighten the crankshaft pulley bolts.

Tightening torque:
127 N·m (13 kgf-m, 94.0 ft-lb)

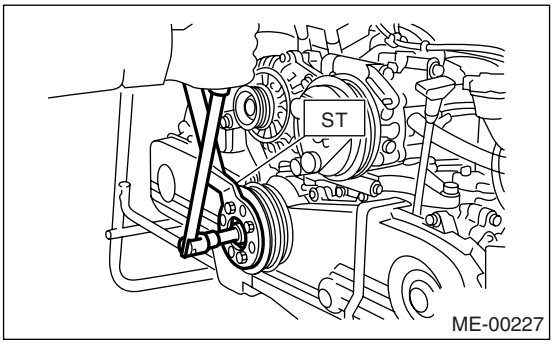

3) Confirm that the tightening angle of crankshaft pulley bolt is 45 degrees or more. If the tightening angle of crankshaft pulley bolt is less than 45 degrees, conduct the following procedures.

CAUTION:
If the tightening angle of crankshaft pulley bolt is less than 45 degrees, the bolt should be damaged. In this case, the bolt must be replaced.

(1) Replace the crankshaft pulley bolts and clean them.

Crankshaft pulley bolt:
12369AA011

(2) Clean the crankshaft thread using an air gun.
(3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
(4) Tighten the crankshaft pulley bolts keeping them in an angle between 45 degrees and 60 degrees.

NOTE:
Conduct the tightening procedures by confirming the turning angle of crankshaft pulley bolt referring to the gauge indicated on timing belt cover.

4) Install the A/C belt tensioner.

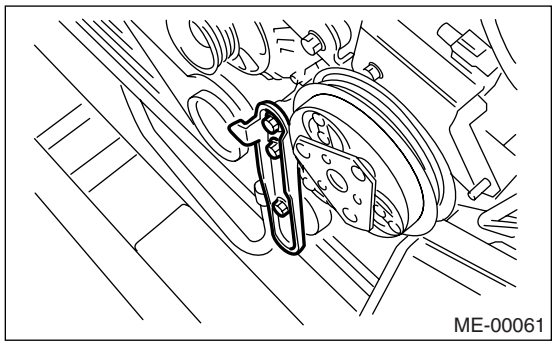

5) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: INSPECTION

1) Make sure the V-belt is not worn or otherwise damaged.
2) Check the tension of the belt. <Ref. to ME(H4DOTC)-56, INSPECTION, V-belt.>

14.Timing Belt Cover

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover (LH) (A).
4) Remove the timing belt cover (RH) (B).
5) Remove the front timing belt cover (C).

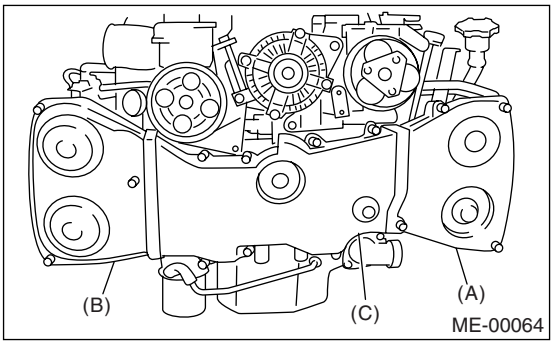

B: INSTALLATION

1) Install the front timing belt cover (C).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

2) Install the timing belt cover (RH) (B).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

3) Install the timing belt cover (LH) (A).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

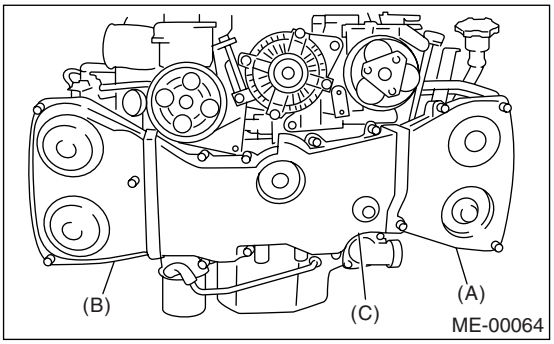

4) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
5) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: INSPECTION

Make sure the cover is not damaged.

15.Timing Belt Assembly

A: REMOVAL

1. TIMING BELT

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt guides. (MT model)

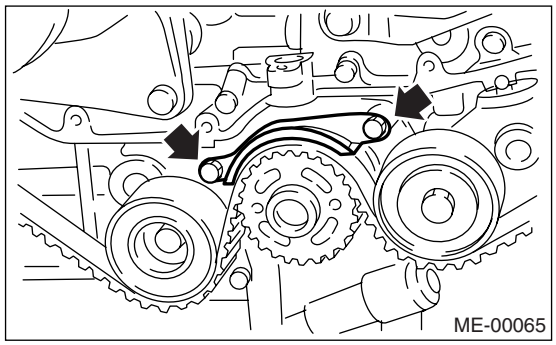

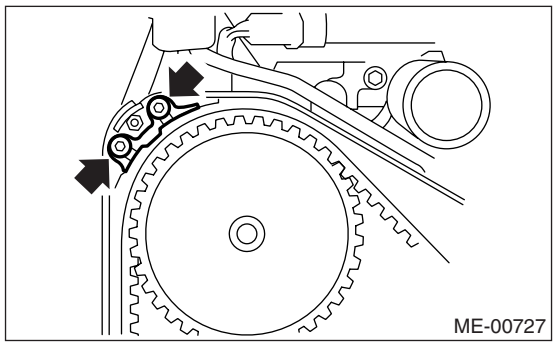

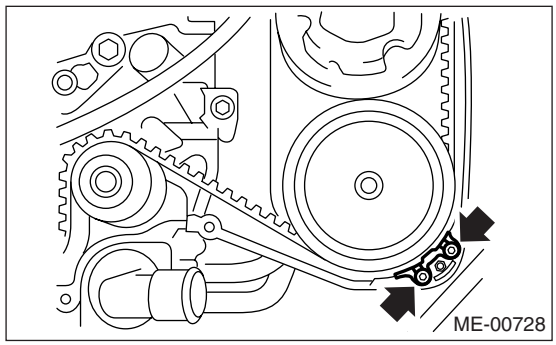

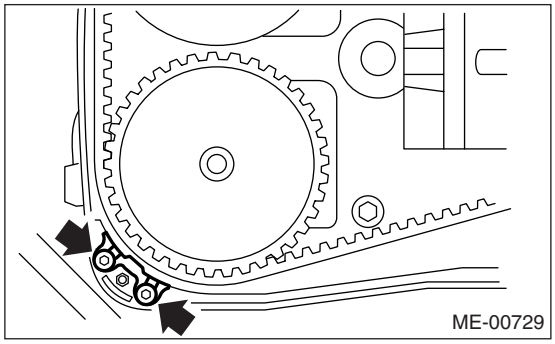

5) If the alignment mark and/or arrow mark (which indicates rotation direction) on timing belt fade away, put new marks before removing the timing belt as follows:
   (1) Turn the crankshaft using ST, and align the alignment marks on crankshaft sprocket, intake camshaft sprocket (LH), exhaust camshaft sprocket (LH), intake camshaft sprocket (RH) and exhaust camshaft sprocket (RH) with notches of timing belt cover and cylinder block.

ST 499987500 CRANKSHAFT SOCKET

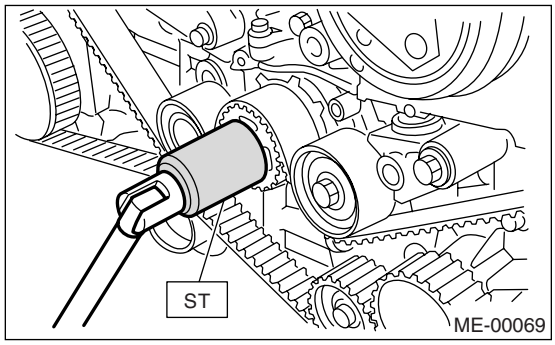

(2) Using white paint, put alignment and/or arrow marks on the timing belts in relation to the sprockets.

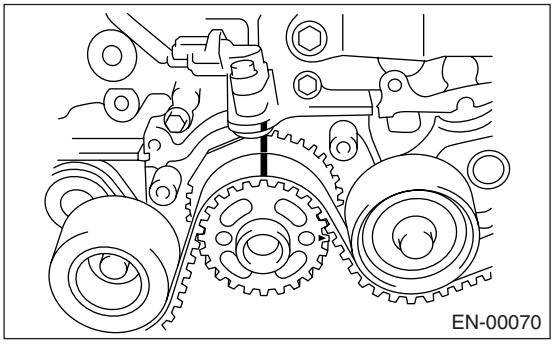

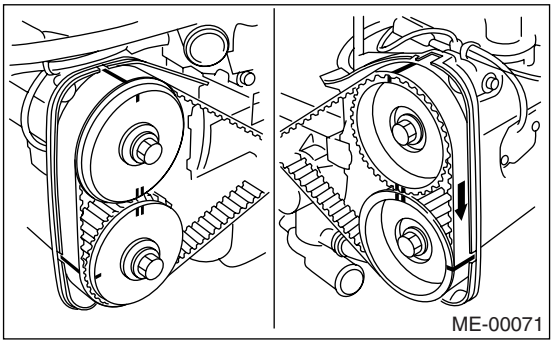

Z_1: 54.5 tooth length
Z_2: 51 tooth length
Z_3: 28 tooth length

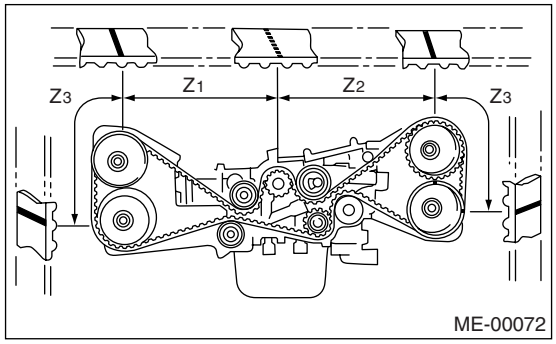

6) Remove the belt idler (A).

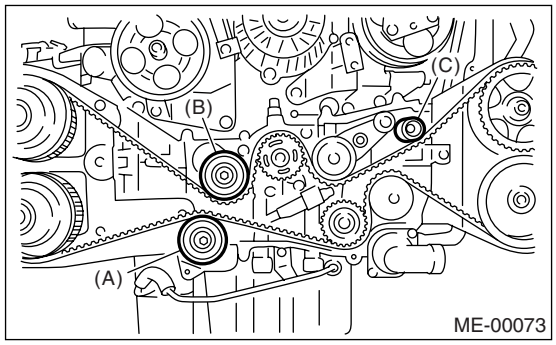

7) Remove the timing belt.

CAUTION:
After the timing belt has been removed, never rotate the intake and exhaust, camshaft sprocket. If the camshaft sprocket is rotated, the intake and exhaust valve heads strike together and valve stems are bent.

2. BELT IDLER AND AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY

1) Remove the belt idler (B) and (C).

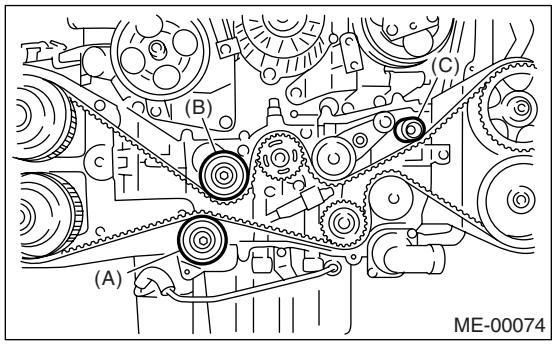

2) Remove the belt idler No. 2.

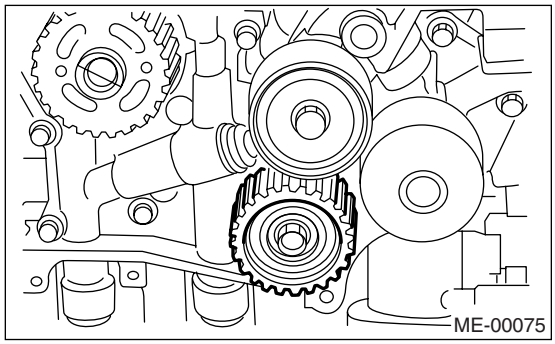

3) Remove the automatic belt tension adjuster assembly.

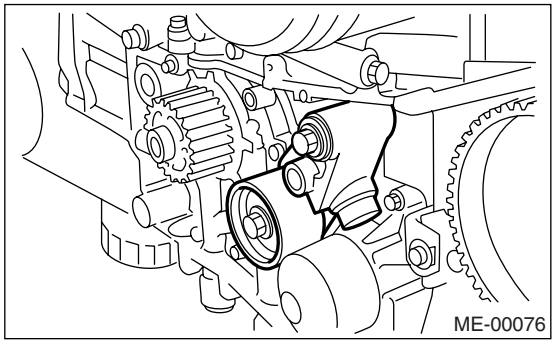

B: INSTALLATION

1. AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER

1) Preparation for installation of automatic belt tension adjuster assembly:

NOTE:
• Always use a vertical type pressing tool to move the adjuster rod down.
• Do not use a lateral type vise.
• Push the adjuster rod vertically.
• Be sure to slowly move the adjuster rod down applying a pressure of 294 N (30 kgf, 66 lb).
• Press-in the push adjuster rod gradually taking more than 3 minutes.
• Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
• Press the adjuster rod as far as the end surface of cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.
• Do not release the press pressure until stopper pin is completely inserted.

(1) Attach the automatic belt tension adjuster assembly to the vertical pressing tool.
(2) Slowly move the adjuster rod down with a pressure of 294 N (30 kgf, 66 lb) until the adjuster rod is aligned with the stopper pin hole in the cylinder.

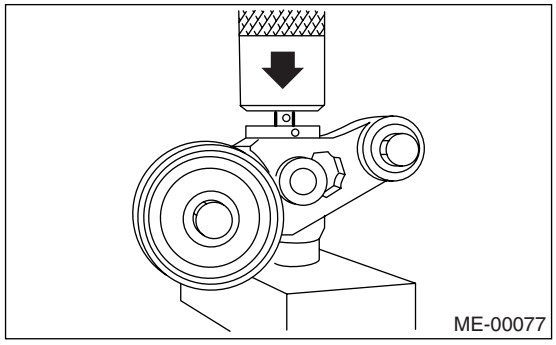
ME-00077

(3) With a 2 mm (0.08 in) dia. stopper pin or a 2 mm (0.08 in) (nominal) dia. hex bar wrench inserted into the stopper pin hole in the cylinder, secure the adjuster rod.

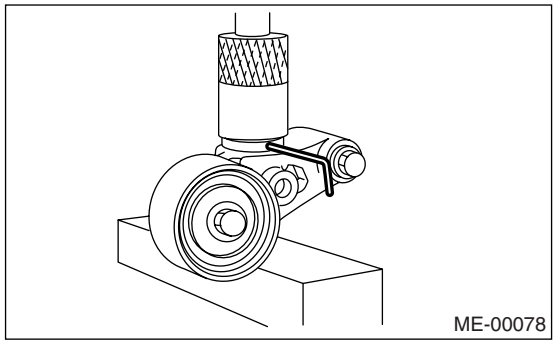
ME-00078

2) Install the automatic belt tension adjuster assembly.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

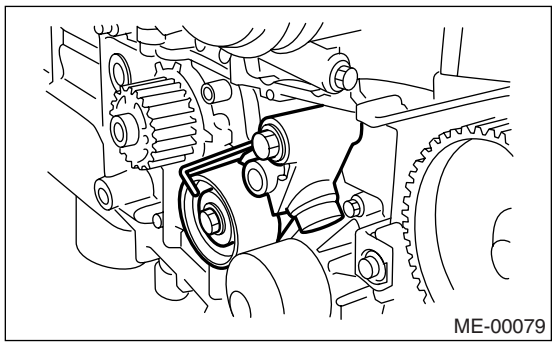
ME-00079

3) Install the belt idler No. 2.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

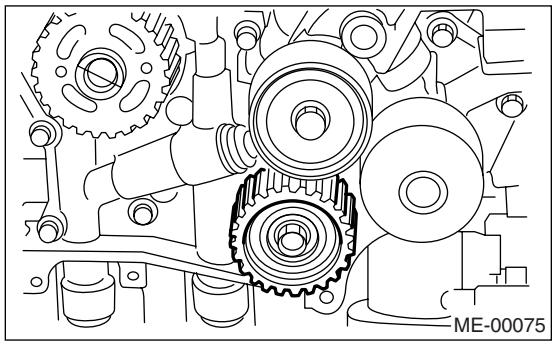
ME-00075

4) Install the belt idler.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

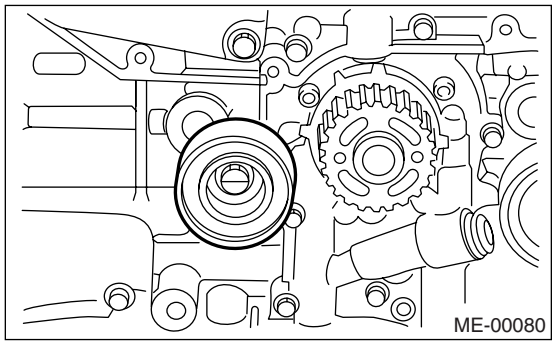
ME-00080

2. TIMING BELT

1) Preparation for installation of automatic belt tension adjuster assembly. <Ref. to ME(H4DOTC)-62, AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER, Timing Belt Assembly.>

2) Crankshaft and camshaft sprocket alignment.

(1) Align mark (A) on the crankshaft sprocket with mark on the oil pump cover at cylinder block.

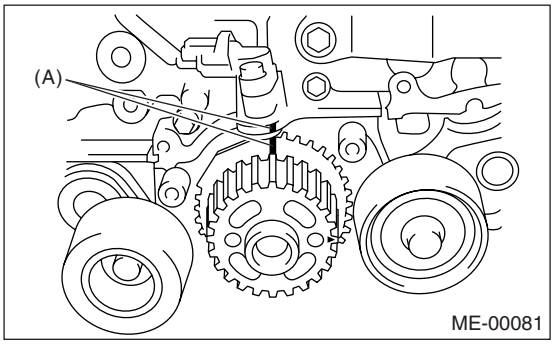

(2) Align single line mark (A) on the exhaust camshaft sprocket (RH) with notch (B) on timing belt cover.

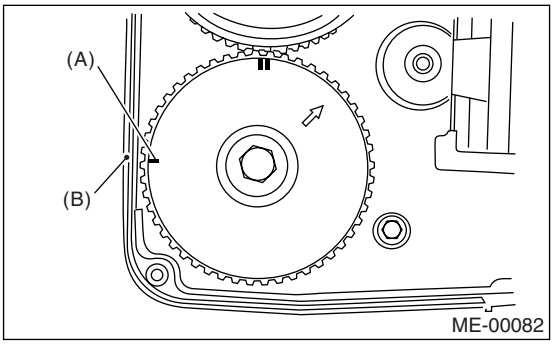

(3) Align single line mark (A) on the intake camshaft sprocket (RH) with notch (B) on timing belt cover.
(Make sure double lines (C) on intake camshaft and exhaust camshaft sprockets are aligned.)

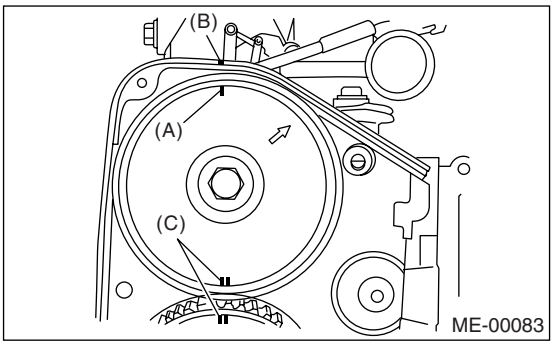

(4) Align single line mark (A) on exhaust camshaft sprocket (LH) with notch (B) on timing belt cover by turning the sprocket counterclockwise (as viewed from front of engine).

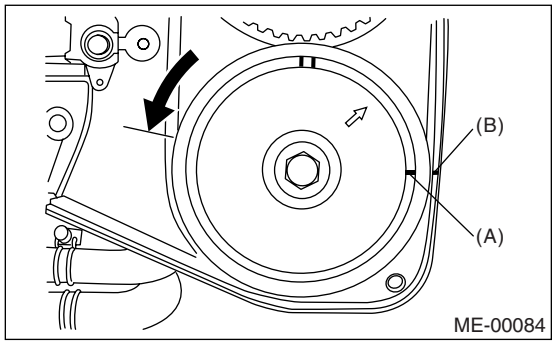

(5) Align the single line mark (A) on intake camshaft sprocket (LH) with notch (B) on timing belt cover by turning the sprocket clockwise (as viewed from front of engine).
Ensure the double lines (C) on intake and exhaust camshaft sprockets are aligned.

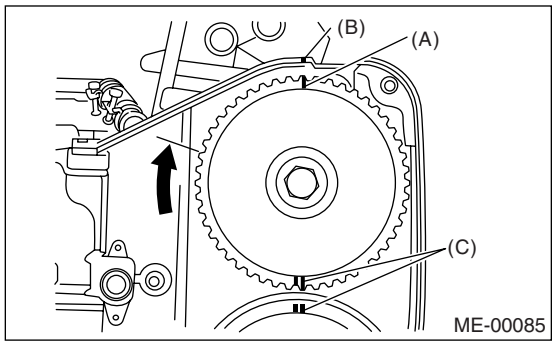

(6) Ensure the camshaft and crankshaft sprockets are positioned properly.

CAUTION:
• Intake and exhaust camshafts for this DOHC engine can be independently rotated with the timing belts removed. As can be seen from the figure, if the intake and exhaust valves are lifted simultaneously, their heads will interfere with each other, resulting in bent valves.

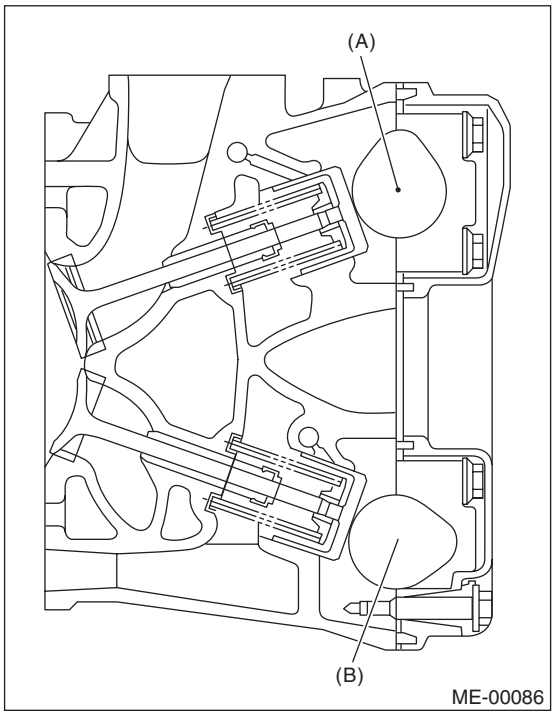

(A) Intake camshaft
(B) Exhaust camshaft

• When the timing belts are not installed, four camshafts are held at the "zero-lift" position, where all cams on camshafts do not push the intake and exhaust valves down. (Under this condition, all valves remain unlifted.)
• When the camshafts are rotated to install the timing belts, #2 intake and #4 exhaust cam of camshafts (LH) are held to push their corresponding valves down. (Under this condition, these valves are held lifted.) Camshafts (RH) are held so that their cams do not push valves down.
• Camshafts (LH) must be rotated from the "zero-lift" position to the position where the timing belt is to be installed at as small an angle as possible, in order to prevent mutual interference of intake and exhaust valve heads.
• Do not allow the camshafts to rotate in the direction shown in the figure as this causes both intake and exhaust valves to lift simultaneously, resulting in interference with their heads.

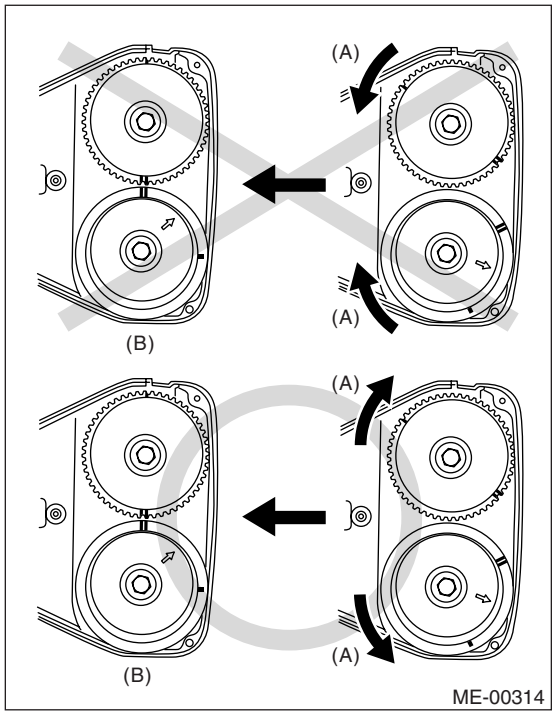

(A) Rotating direction
(B) Timing belt installation position

3) Installation of timing belt:

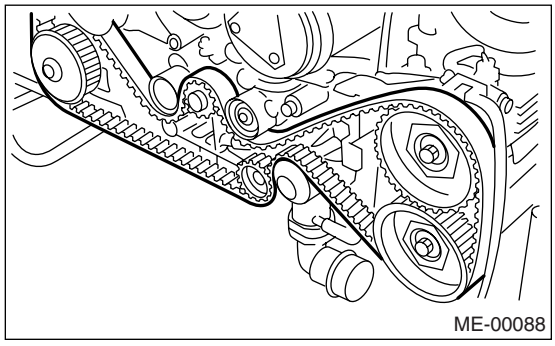

Align the alignment mark on timing belt with marks on sprockets in alphabetical order shown in the figure. While aligning marks, position the timing belt properly.

CAUTION:
• Disengagement of more than three timing belt teeth may result in interference between the valve and piston.
• Ensure the belt's rotating direction is correct.

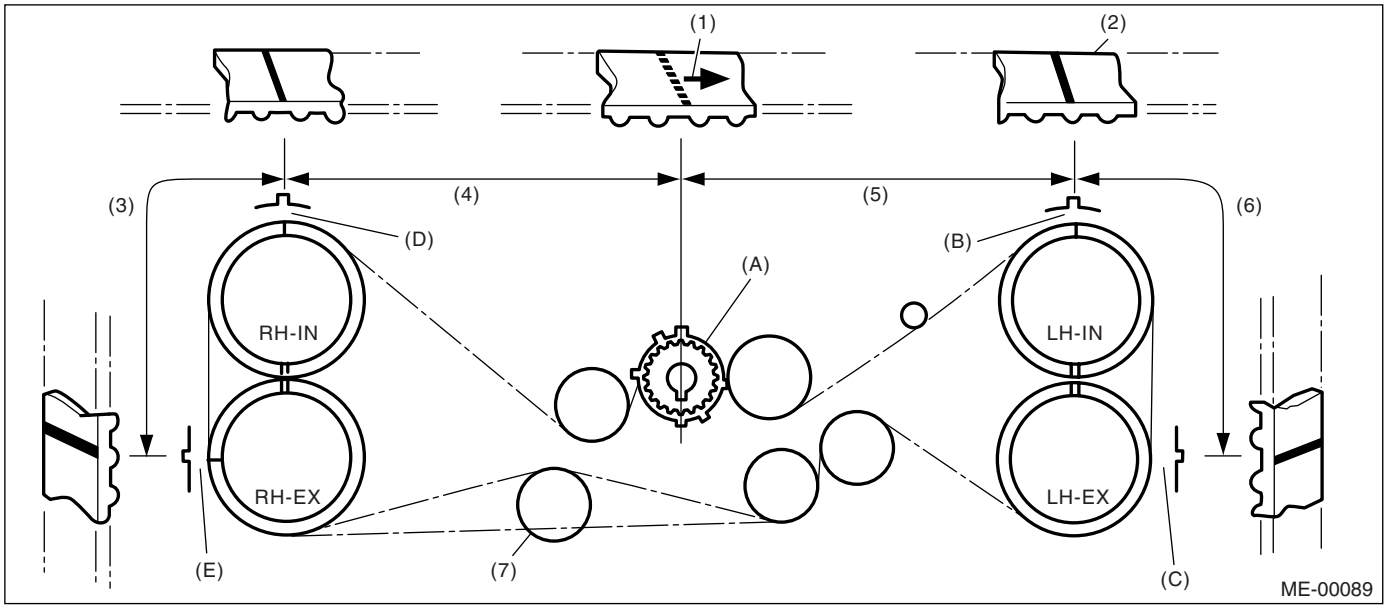

(1) Arrow mark
(2) Timing belt
(3) 28 tooth length
(4) 54.5 tooth length
(5) 51 tooth length
(6) 28 tooth length
(7) Install it in the end

4) Install the belt idlers.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

NOTE:
Make sure that the marks on the timing belt and sprockets are aligned.

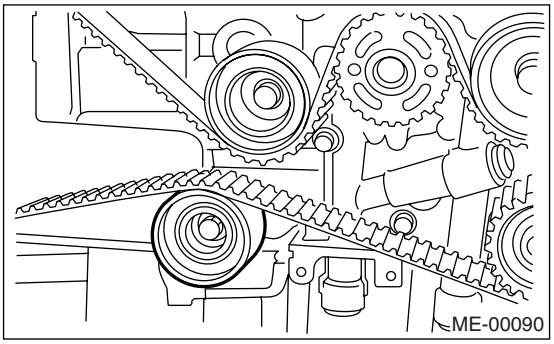

5) After ensuring that the marks on the timing belt and sprockets are aligned, remove the stopper pin from tensioner adjuster.

6) Install the timing belt guide. (MT model)
(1) Temporarily tighten the bolts.
(2) Check and adjust the clearance between timing belt and timing belt guide.

Clearance:
1.0±0.5 mm (0.039±0.020 in)

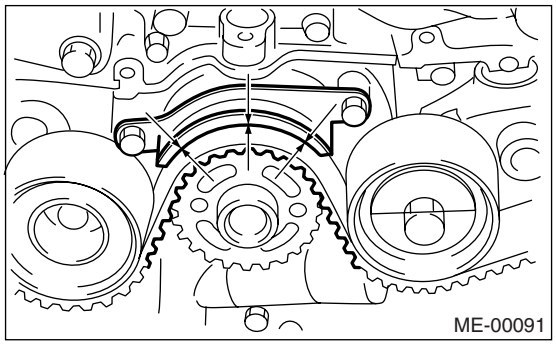
ME-00091

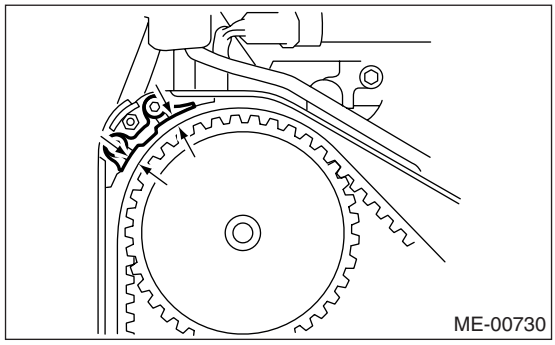
ME-00730

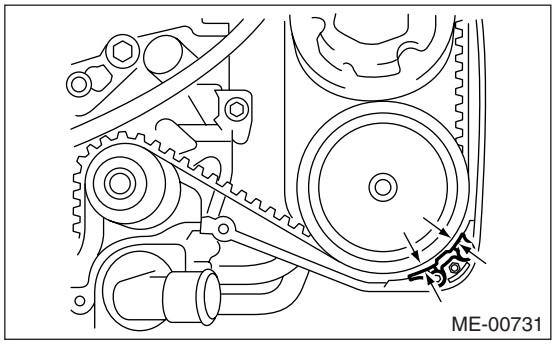
ME-00731

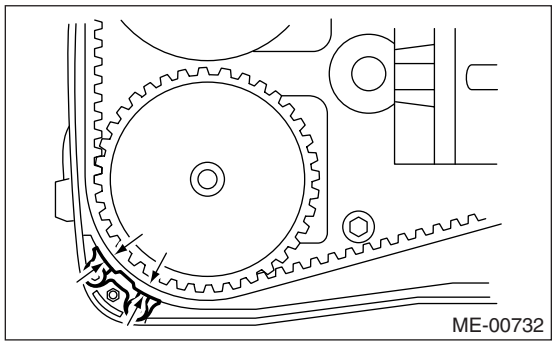
ME-00732

(3) Tighten the bolts.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

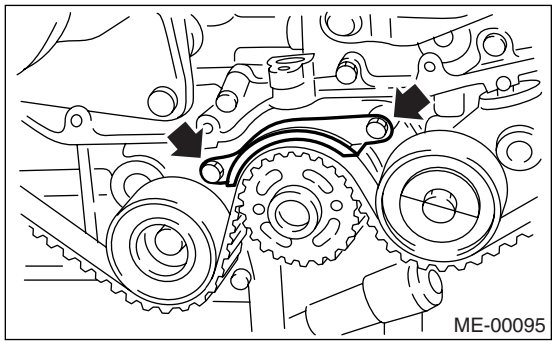
ME-00095

Tightening torque:
6.4 N·m (0.7 kgf-m, 5.1 ft-lb)

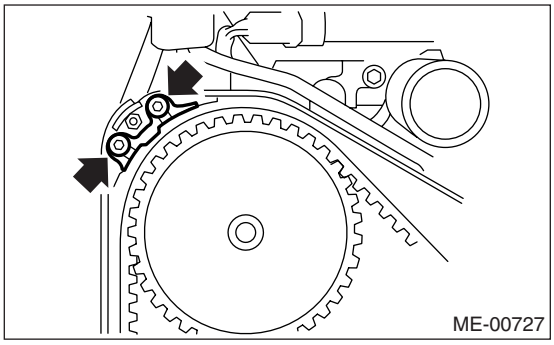
ME-00727

Tightening torque:
6.4 N·m (0.7 kgf-m, 5.1 ft-lb)

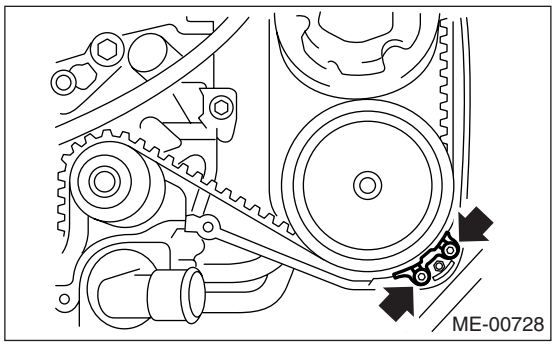
ME-00728

Tightening torque:
6.4 N·m (0.7 kgf-m, 5.1 ft-lb)

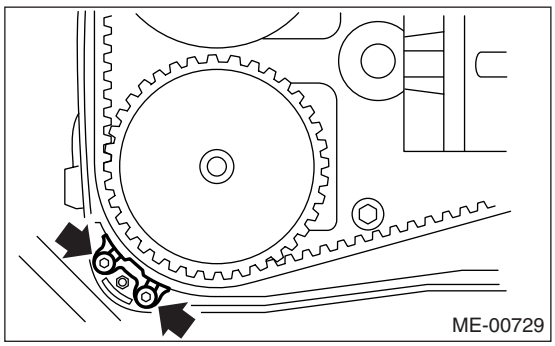
ME-00729

7) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
8) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
9) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: INSPECTION

1. TIMING BELT

1) Check the timing belt teeth for breaks, cracks, and wear. If any fault is found, replace the belt.
2) Check the condition of back side of belt; if any crack is found, replace the belt.

NOTE:
• Be careful not to let oil, grease or coolant contact the belt. Remove quickly and thoroughly if this happens.
• Do not bend the belt sharply.

Bending radius: h
60 mm (2.36 in) or more

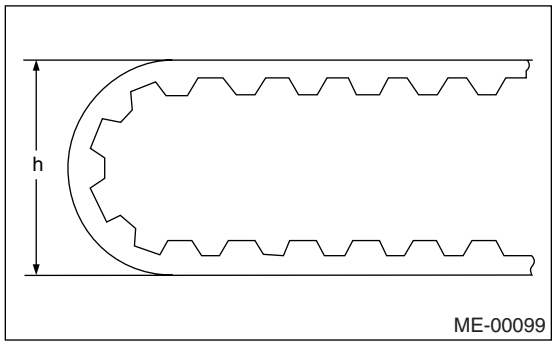

2. AUTOMATIC BELT TENSION ADJUSTER

1) Visually check the oil seals for leaks, and rod ends for abnormal wear or scratches. If necessary, replace the automatic belt tension adjuster assembly.

NOTE:
Slight traces of oil at rod's oil seal does not indicate a problem.

2) Check that the adjuster rod does not move when a pressure of 294 N (30 kgf, 66 lb) is applied to it. This is to check adjuster rod stiffness.
3) If the adjuster rod is not stiff and moves freely when applying 294 N (30 kgf, 66 lb), check it using the following procedures:
(1) Slowly press the adjuster rod down to the end surface of the cylinder. Repeat this motion 2 or 3 times.
(2) With the adjuster rod moved all the way up, apply a pressure of 294 N (30 kgf, 66 lb) to it. Check the adjuster rod stiffness.
(3) If the adjuster rod is not stiff and moves down, replace the automatic belt tension adjuster assembly with a new one.

NOTE:
• Always use a vertical type pressing tool to move the adjuster rod down.
• Do not use a lateral type vise.

• Push the adjuster rod vertically.
• Press-in the push adjuster rod gradually taking more than 3 minutes.
• Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
• Press the adjuster rod as far as the end surface of the cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.

4) Measure the extension of rod beyond the body. If it is not within specifications, replace with a new one.

Rod extension: H
5.7±0.5 mm (0.224±0.020 in)

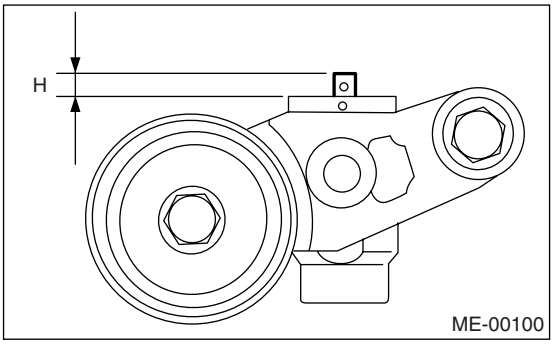

3. BELT TENSION PULLEY

1) Check the mating surfaces of timing belt and contact point of adjuster rod for abnormal wear or scratches. Replace the belt tension pulley if faulty.
2) Check the belt tension pulley for smooth rotation. Replace if noise or excessive play is noted.
3) Check the belt tension pulley for grease leakage.

4. BELT IDLER

1) Check the belt idler for smooth rotation. Replace if noise or excessive play is noted.
2) Check the outer contacting surfaces of idler pulley for abnormal wear and scratches.
3) Check the belt idler for grease leakage.

16.Camshaft Sprocket

A: REMOVAL

1. EXCEPT FOR STi AND AUSTRALIA MODEL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft position sensor. <Ref. to FU(H4DOTC)-30, REMOVAL, Camshaft Position Sensor.>
6) Remove the camshaft sprockets. To lock the camshaft, use ST.

ST 18231AA010 CAMSHAFT SPROCKET WRENCH (INTAKE LH)
ST 499207400 CAMSHAFT SPROCKET WRENCH (Except INTAKE LH)

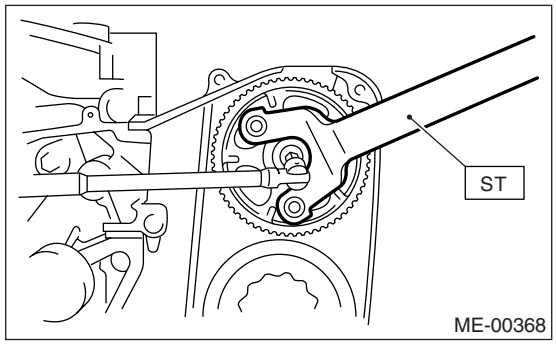

2. STi AND AUSTRALIA MODEL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft position sensor. <Ref. to FU(H4DOTC)-30, REMOVAL, Camshaft Position Sensor.>
6) Remove the camshaft sprockets. To lock the camshaft, use ST.

ST 499207400 CAMSHAFT SPROCKET WRENCH

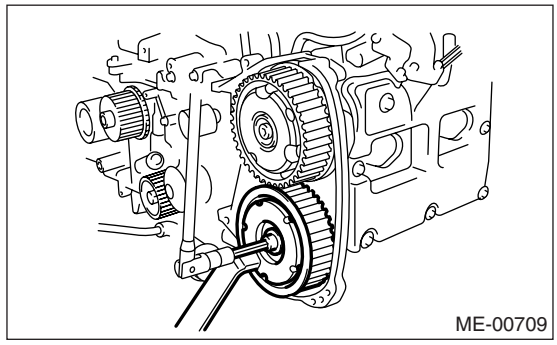

ST 499977500 CAMSHAFT SPROCKET WRENCH

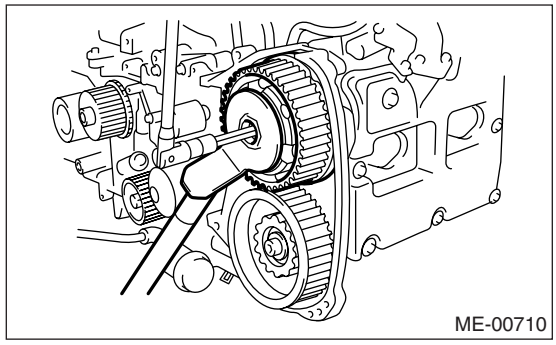

B: INSTALLATION

1. EXCEPT FOR STi AND AUSTRALIA MODEL

1) Install the camshaft sprocket. To lock the camshaft, use ST.

ST	18231AA010	CAMSHAFT SPROCKET WRENCH (INTAKE LH)
ST	499207400	CAMSHAFT SPROCKET WRENCH (Except INTAKE LH)

Tightening torque:
98 N·m (10 kgf-m, 72.4 ft-lb)

NOTE:
Do not confuse the camshaft sprockets (RH) and (LH) intake side during installation. The camshaft sprocket (LH) is identified by a projection used to monitor camshaft position sensor.

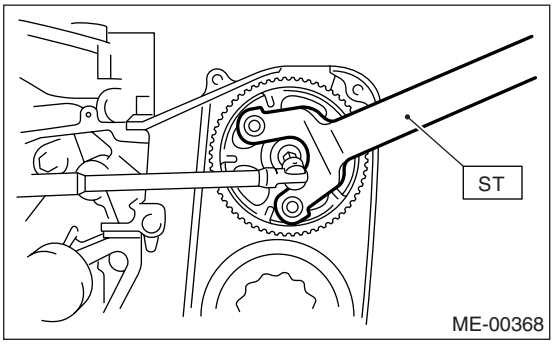

2) Install the camshaft position sensor. <Ref. to FU(H4DOTC)-30, INSTALLATION, Camshaft Position Sensor.>
3) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>
4) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
5) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
6) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

2. STi AND AUSTRALIA MODEL

1) Install the camshaft sprocket No. 1 and No. 2. To lock the camshaft, use ST.

ST	499207400	CAMSHAFT SPROCKET WRENCH

Tightening torque:
98 N·m (10 kgf-m, 72.4 ft-lb)

NOTE:
Do not confuse camshaft sprockets (RH) and (LH) during installation. The camshaft sprocket No. 2 is identified by a projection used to monitor camshaft position sensor.

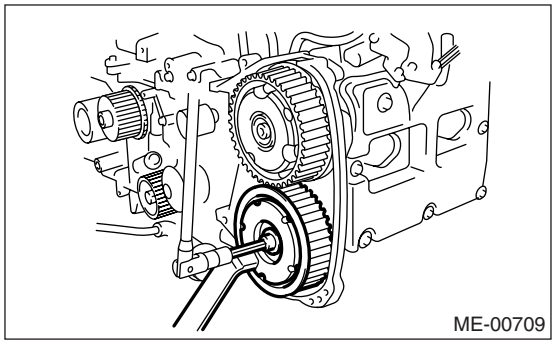

ST	499977500	CAMSHAFT SPROCKET WRENCH

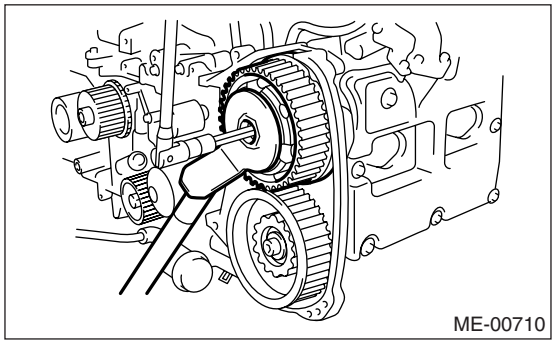

2) Install the camshaft position sensor. <Ref. to FU(H4DOTC)-30, INSTALLATION, Camshaft Position Sensor.>
3) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>
4) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
5) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
6) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: INSPECTION

1) Check the sprocket teeth for abnormal wear and scratches.
2) Make sure there is no free play between sprocket and key.
3) Check the crankshaft sprocket notch used for sensor for damage and contamination of foreign matter.

17.Crankshaft Sprocket

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4DOTC)-69, REMOVAL, Camshaft Sprocket.>
6) Remove the crankshaft sprocket.

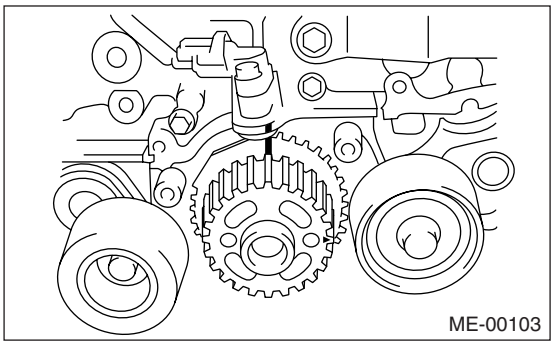

B: INSTALLATION

1) Install the crankshaft sprocket.

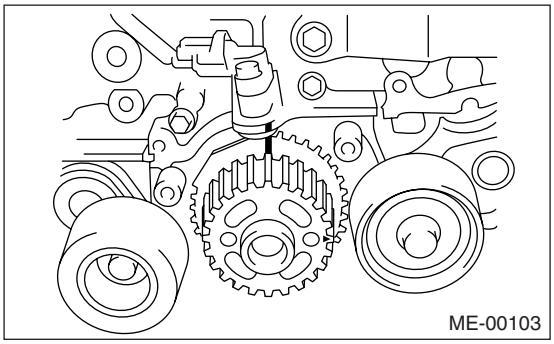

2) Install the camshaft sprocket. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
3) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>
4) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
5) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
6) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: INSPECTION

1) Check the sprocket teeth for abnormal wear and scratches.
2) Make sure there is no free play between sprocket and key.
3) Check the crankshaft sprocket notch used for sensor for damage and contamination of foreign matter.

18.Camshaft

A: REMOVAL

1. EXCEPT FOR STi AND AUSTRALIA MODEL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4DOTC)-69, REMOVAL, Camshaft Sprocket.>
6) Remove the crankshaft sprocket. <Ref. to ME(H4DOTC)-71, REMOVAL, Crankshaft Sprocket.>
7) Remove the tensioner bracket.

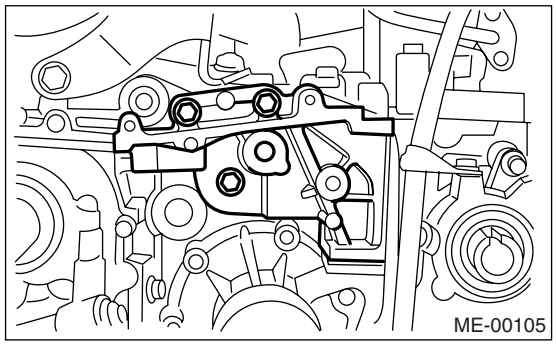
ME-00105

8) Remove the timing belt cover No. 2 (LH).

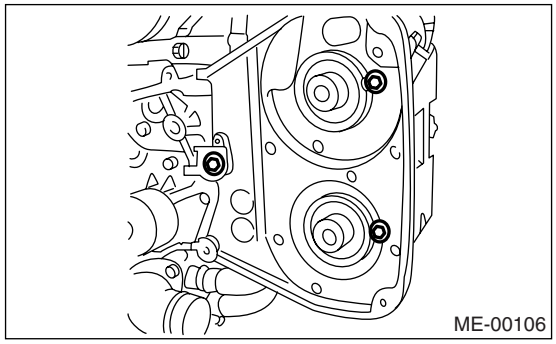
ME-00106

9) Remove the timing belt cover No.2 (RH).

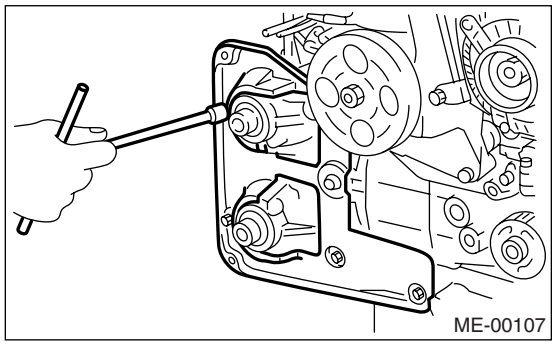
ME-00107

10) Disconnect the ignition coil connector.
11) Remove the ignition coil.
12) Remove the rocker cover and gasket.
13) Loosen the intake camshaft cap bolts equally, a little at a time in alphabetical sequence shown in the figure.

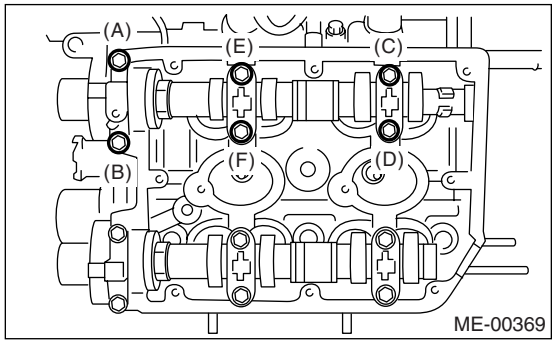

ME-00369

14) Remove the camshaft cap and intake camshaft.
15) Loosen the exhaust camshaft cap bolts equally, a little at a time in alphabetical sequence shown in the figure.

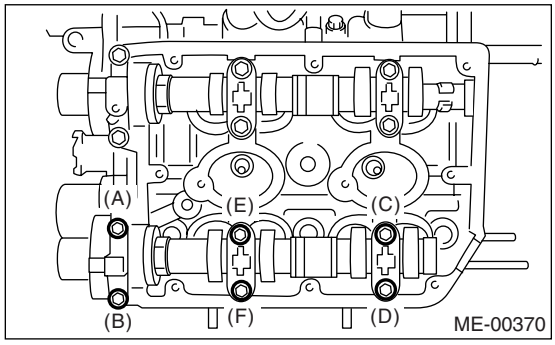

ME-00370

16) Remove the camshaft caps and exhaust camshaft.

NOTE:
Arrange the camshaft caps in order so that they can be installed in their original positions.

17) Similarly, remove the camshafts (RH) and related parts.

2. STi AND AUSTRALIA MODEL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4DOTC)-69, REMOVAL, Camshaft Sprocket.>
6) Remove the crankshaft sprocket. <Ref. to ME(H4DOTC)-71, REMOVAL, Crankshaft Sprocket.>
7) Disconnect the variable valve timing solenoid valve assembly connector.

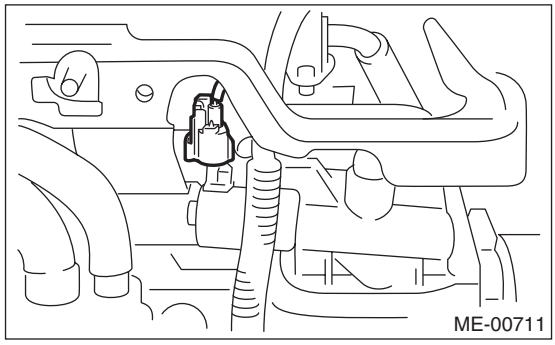
ME-00711

8) Remove the tensioner bracket.

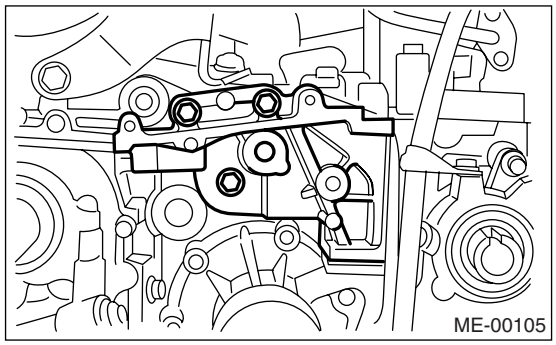
ME-00105

9) Remove the timing belt cover No. 2 (LH).

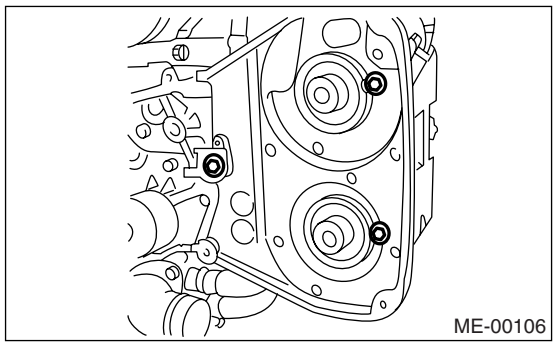
ME-00106

10) Remove the timing belt cover No.2 (RH).

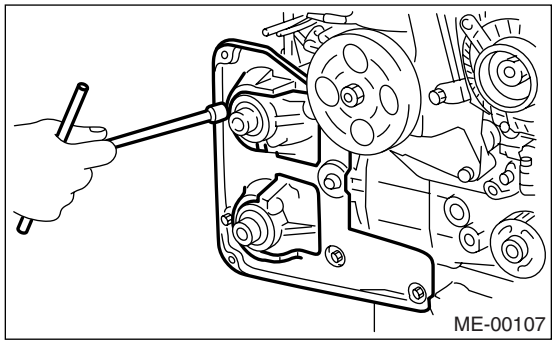
ME-00107

11) Remove the spark plug cord.
12) Remove the oil level gauge guide. (LH side)
13) Remove the rocker cover and gasket.
14) Remove the oil pipe.

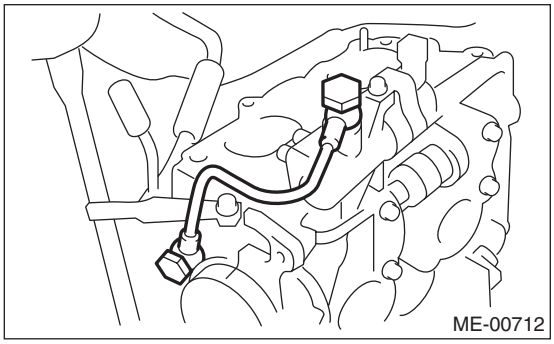
ME-00712

15) Loosen the variable valve timing solenoid valve assembly and intake camshaft cap bolts equally, a little at a time in alphabetical sequence shown in the figure.

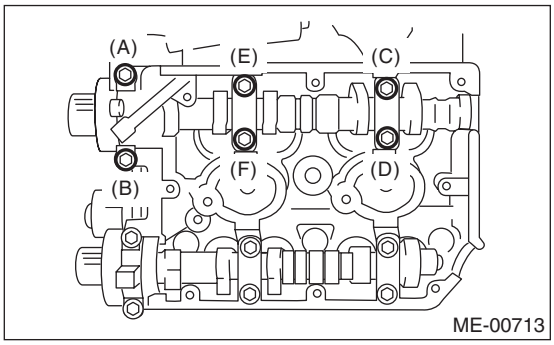

ME-00713

16) Remove the variable valve timing solenoid valve assembly, intake camshaft cap, and camshaft.

17) Loosen the exhaust camshaft cap bolts equally, a little at a time in alphabetical sequence shown in the figure.

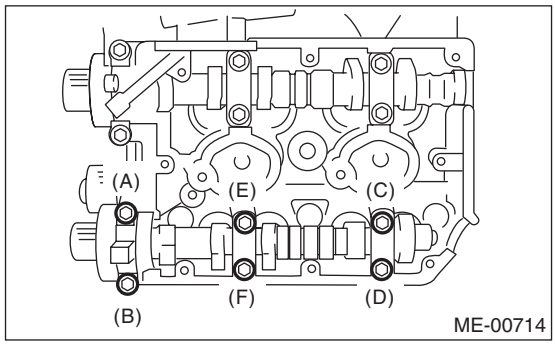

18) Remove the exhaust camshaft cap and camshaft.

NOTE:
Arrange the camshaft caps in order so that they can be installed in their original positions.

19) Similarly, remove the camshafts (RH) and related parts.

B: INSTALLATION

1. EXCEPT FOR STi AND AUSTRALIA MODEL

1) Camshaft installation:
Apply engine oil to the cylinder head at camshaft bearing location before installing the camshaft. Install the camshaft so that each valves is close to or in contact with “base circle” of cam lobe.

NOTE:
• When the camshafts are positioned as shown in the figure, camshafts need to be rotated at a minimum to align with the timing belt during installation.
• Camshaft (RH) need not be rotated when set at the position shown in the figure.
Intake camshaft (LH): Rotate 80° clockwise.
Exhaust camshaft (LH): Rotate 45° counterclockwise.

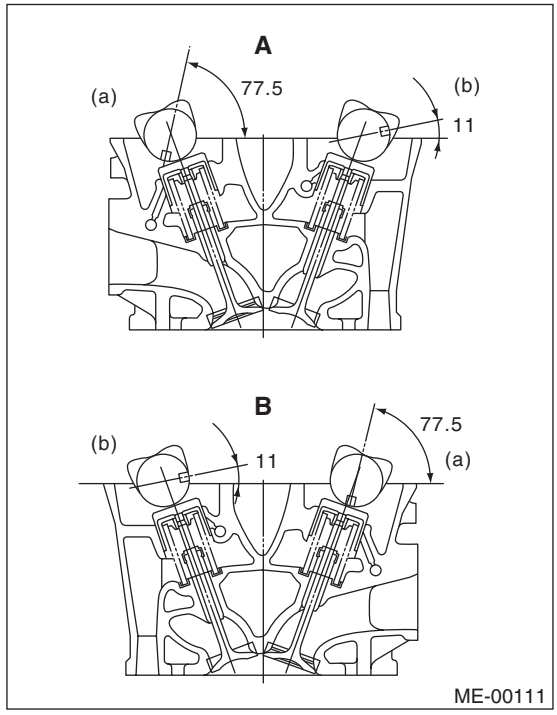

A Cylinder head (LH)
B Cylinder head (RH)
(a) Intake camshaft
(b) Exhaust camshaft

2) Camshaft cap installation:
(1) Apply fluid packing sparingly to the cap mating surface.

NOTE:
Do not apply fluid packing excessively. Failure to do so may cause excess packing to come out and flow toward oil seal, resulting in oil leaks.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

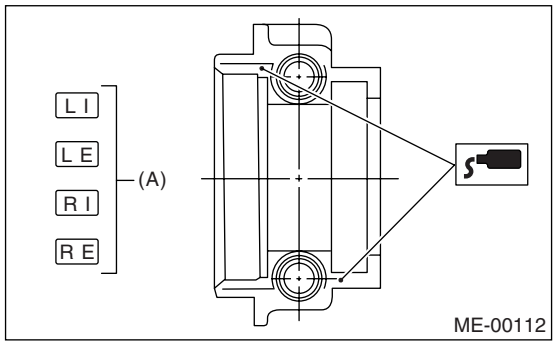

(2) Apply engine oil to cap bearing surface and install the cap on camshaft as shown by identification mark (A).
(3) Gradually tighten the camshaft cap in at least two stages in alphabetical sequence shown in the figure, and then tighten to specified torque.

Tightening torque:
T1: 10 N·m (1.0 kgf-m, 7.2 ft-lb)
T2: 20 N·m (2.0 kgf-m, 14.5 ft-lb)

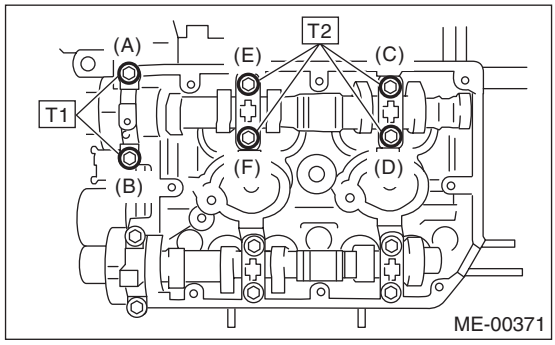

(4) Similarly, tighten the cap on exhaust side.
After tightening the cap, ensure the camshaft rotates only slightly while holding it at "base" circle.

Tightening torque:
T1: 10 N·m (1.0 kgf-m, 7.2 ft-lb)
T2: 20 N·m (2.0 kgf-m, 14.5 ft-lb)

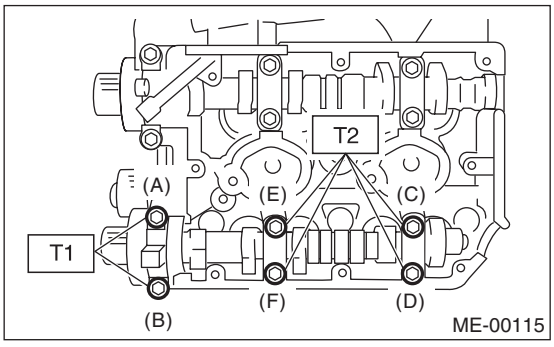

3) Camshaft oil seal installation:
Apply grease to the new oil seal lips and press onto the front end of camshaft by using ST1 and ST2.

NOTE:
Use a new oil seal.

ST1	499587600	OIL SEAL INSTALLER
ST2	499597200	OIL SEAL GUIDE

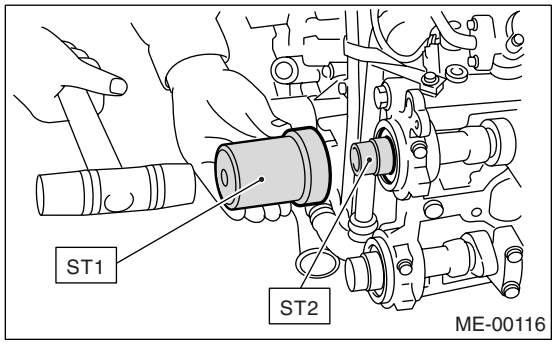

4) Rocker cover installation:
(1) Install the gasket on rocker cover.
Install the peripheral gasket and ignition coil gasket.
(2) Apply fluid packing to the indicated portion on rocker cover.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

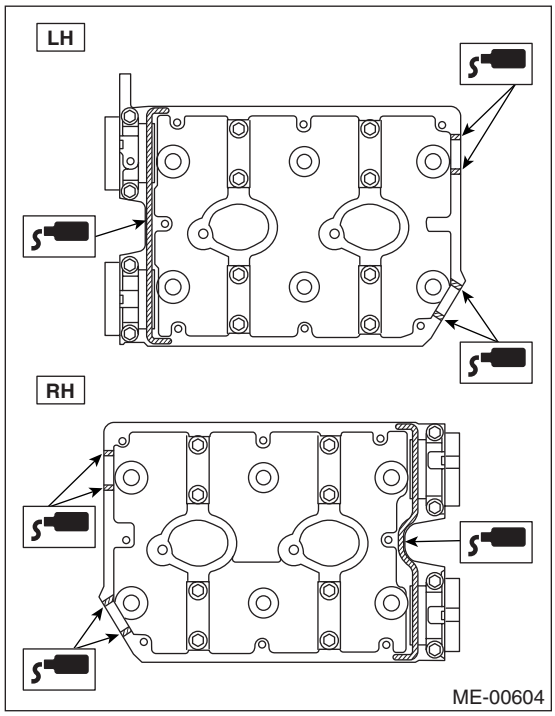

(3) Install the rocker cover on cylinder head.
Ensure the gasket is properly positioned during installation.
5) Install the ignition coil.
6) Connect the ignition coil connector.

7) Similarly, install the parts on right-hand side.
8) Install the timing belt cover No. 2 (RH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

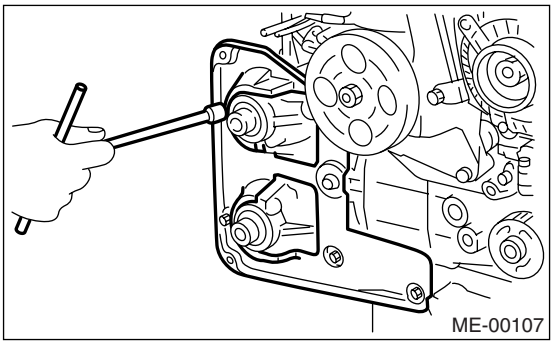

9) Install the tensioner bracket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

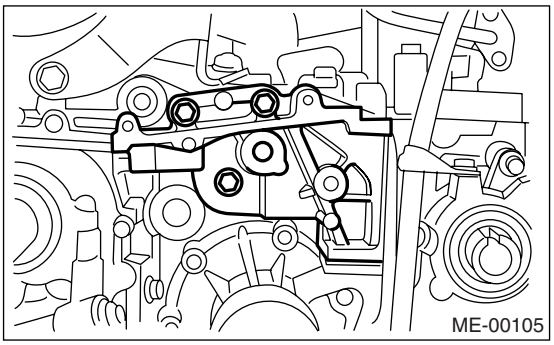

10) Install the timing belt cover No. 2 (LH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

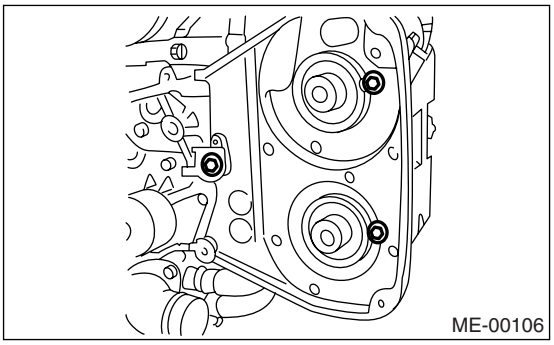

11) Install the crankshaft sprocket. <Ref. to ME(H4DOTC)-71, INSTALLATION, Crankshaft Sprocket.>
12) Install the camshaft sprockets. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
13) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>
14) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
15) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
16) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

2. STi AND AUSTRALIA MODEL

1) Camshaft installation:
Apply engine oil to cylinder head at camshaft bearing location before installing the camshaft. Install the camshaft so that each valve is close to or in contact with “base circle” of cam lobe.

NOTE:
• When the camshafts are positioned as shown in the figure, camshafts need to be rotated at a minimum to align with the timing belt during installation.
• Camshaft (RH) need not be rotated when set at position shown in the figure.
Intake camshaft (LH): Rotate 80° clockwise.
Exhaust camshaft (LH): Rotate 45° counterclockwise.

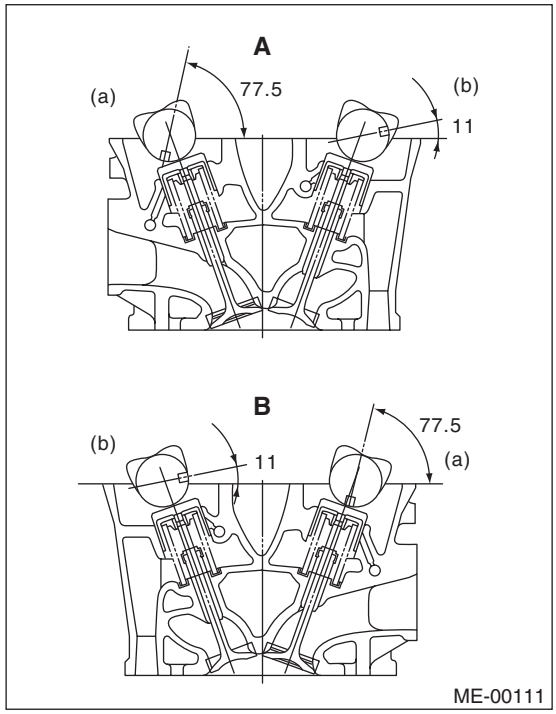

A Cylinder head (LH)
B Cylinder head (RH)
(a) Intake camshaft
(b) Exhaust camshaft

2) Camshaft cap and variable valve timing solenoid valve assembly installation:
(1) Apply fluid packing sparingly to cap mating surface.

NOTE:
Do not apply fluid packing excessively. Failure to do so may cause excess packing to come out and flow toward the oil seal, resulting in oil leaks.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

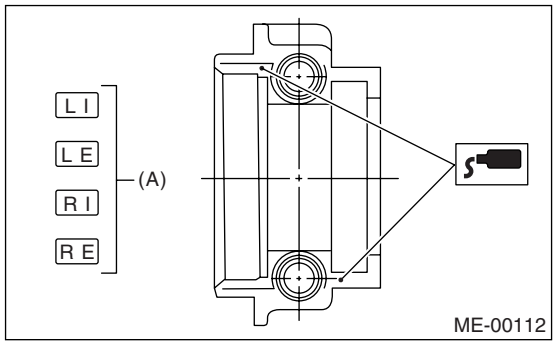

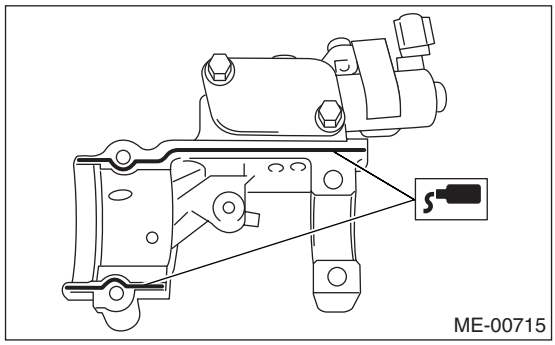

(2) Apply engine oil to cap bearing surface and install the cap on camshaft as shown by identification mark (A).
(3) Gradually tighten the camshaft cap and oil control valve assembly in at least two stages in alphabetical sequence shown in the figure, and then tighten to specified torque.

Tightening torque:
T1: 10 N·m (1.0 kgf-m, 7 ft-lb)
T2: 20 N·m (2.0 kgf-m, 14.5 ft-lb)

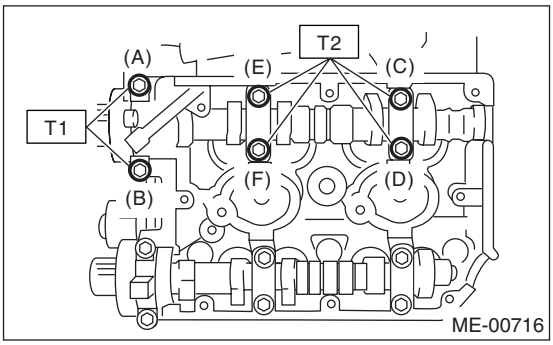

(4) Similarly, tighten cap on the exhaust side.
After tightening cap, ensure the camshaft rotates only slightly while holding it at “base” circle.

Tightening torque:
T1: 10 N·m (1.0 kgf-m, 7 ft-lb)
T2: 20 N·m (2.0 kgf-m, 14.5 ft-lb)

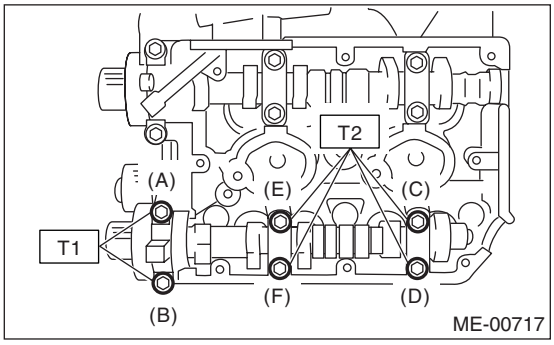

3) Camshaft oil seal installation:
Apply grease to new oil seal lips and press onto front end of camshaft by using ST1 and ST2.

NOTE:
Use a new oil seal.

ST1	499587600	OIL SEAL GUIDE
ST2	499597200	OIL SEAL GUIDE

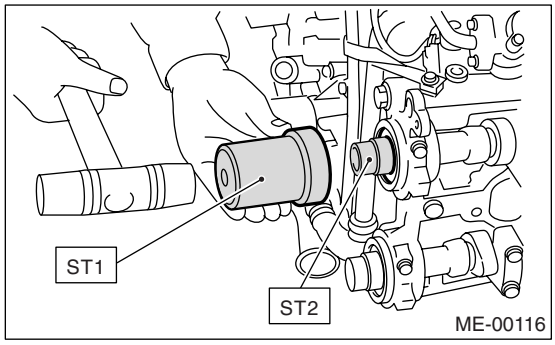

4) Rocker cover installation:
(1) Install the gasket on rocker cover.
Install the peripheral gasket and ignition coil gasket.
(2) Apply fluid packing to four front open edges of peripheral gasket.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

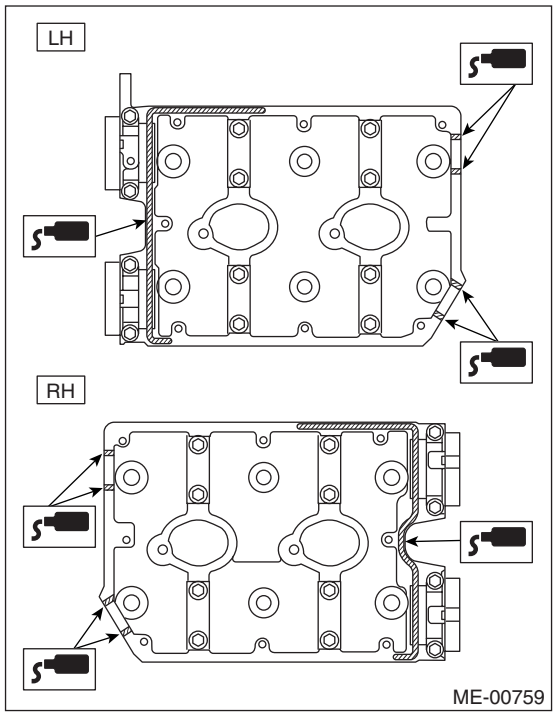

(3) Install the rocker cover on cylinder head. Ensure the gasket is properly positioned during installation.

5) Install the oil pipe.

Tightening torque:
30 N·m (3.1 kgf-m, 22.1 ft-lb)

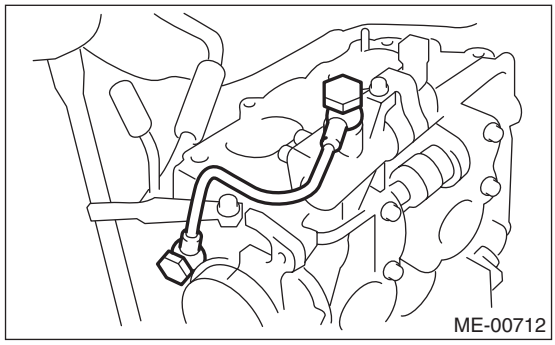

6) Connect the variable valve timing solenoid valve connector.

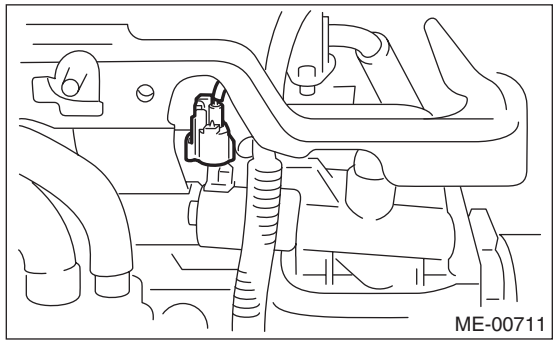

7) Install the spark plug cord.
8) Similarly, install the parts on right-hand side.
9) Install the tensioner bracket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

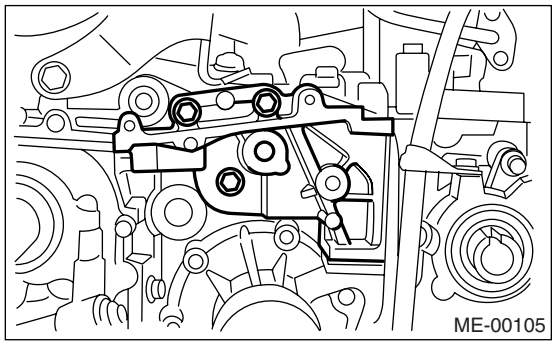

10) Install the timing belt cover No. 2 (RH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

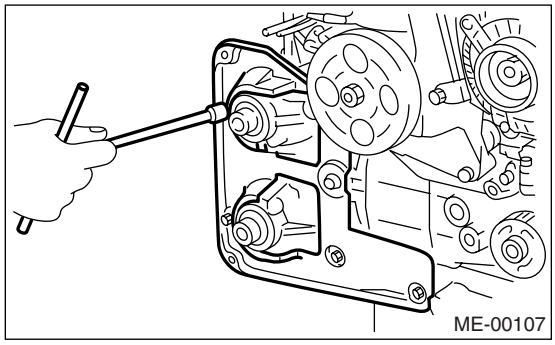

11) Install the timing belt cover No. 2 (LH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

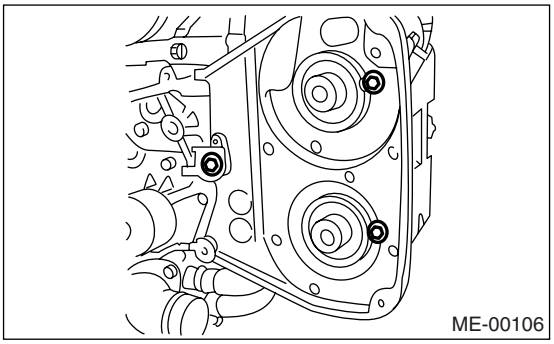

12) Install the crankshaft sprocket. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
13) Install the camshaft sprockets. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
14) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>
15) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
16) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
17) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: INSPECTION

1) Measure the bend, and repair or replace if necessary.

Limit:
0.020 mm (0.0008 in)

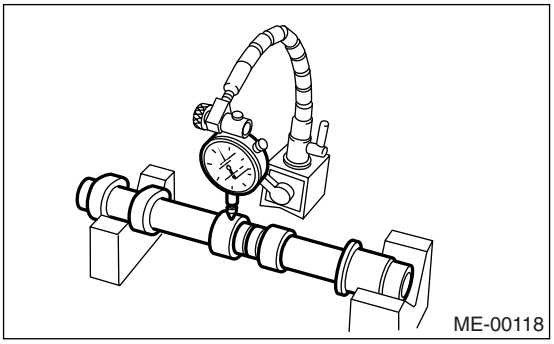

2) Check the journal for damage and wear. Replace if faulty.
3) Measure the outside diameter of camshaft journal. If the journal diameter is not as specified, check the oil clearance.

	Camshaft journal	
	Front	Center, rear
Standard	37.946 — 37.963 mm (1.4939 — 1.4946 in)	29.946 — 29.963 mm (1.1790 — 1.1796 in)

4) Measurement of the camshaft journal oil clearance:
(1) Clean the bearing caps and camshaft journals.
(2) Place the camshafts on cylinder head.
(Without installing the valve rocker.)
(3) Place a plastigauge across each of the camshaft journals.
(4) Gradually tighten the cap in at least two stages in alphabetical sequence shown in the figure, and then tighten to specified torque.
Do not turn the camshaft.

Tightening torque:
T1: 10 N·m (1.0 kgf-m, 7.2 ft-lb)
T2: 20 N·m (2.0 kgf-m, 14.5 ft-lb)

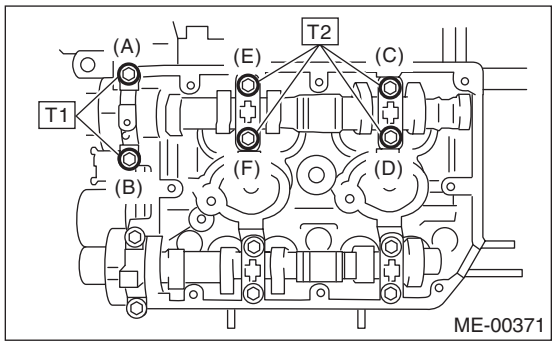

(5) Remove the bearing caps.
(6) Measure the widest point of plastigauge on each journal.
If the oil clearance exceeds the limit, replace the camshaft. If necessary, replace the camshaft caps and cylinder head as a set.

Standard:
0.037 — 0.072 mm (0.0015 — 0.0028 in)

Limit:
0.10 mm (0.0039 in)

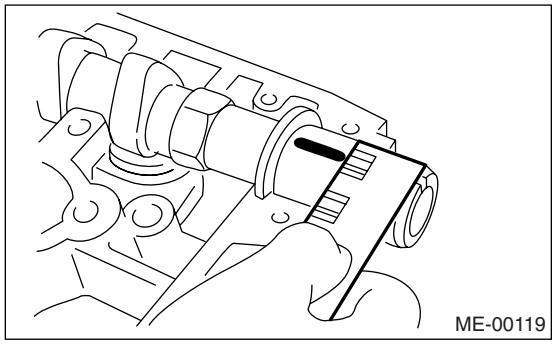

(7) Completely remove the plastigauge.

5) Check the cam face condition; remove the minor faults by grinding with oil stone. Measure the cam height H, replace if the limit has been exceeded.

Cam height: H

Standard:
• Except for STi model
Intake:
46.25 — 46.35 mm (1.821 — 1.825 in)
Exhaust:
46.15 — 46.25 mm (1.817 — 1.821 in)
• STi model
Intake:
45.25 — 45.35 mm (1.781 — 1.785 in)
Exhaust:
45.60 — 45.70 mm (1.795 — 1.799 in)

Limit:
• Except for STi model
Intake:
46.15 mm (1.817 in)
Exhaust:
46.05 mm (1.813 in)
• STi model
Intake:
45.15 mm (1.778 in)
Exhaust:
45.50 mm (1.791 in)

Cam base circle diameter A:
37.0 mm (1.457 in)

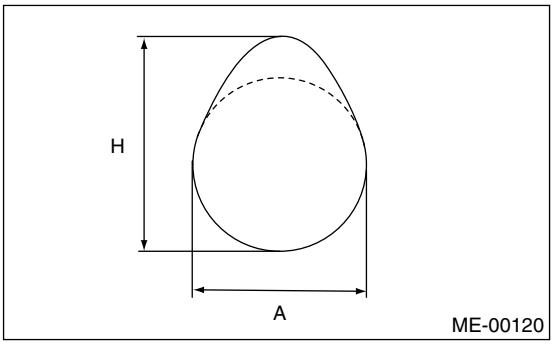

6) Measure the thrust clearance of camshaft with dial gauge. If the clearance exceeds the limit, replace the caps and cylinder head as a set. If necessary, replace the camshaft.

Standard:
0.040 — 0.080 mm (0.0016 — 0.0031 in)

Limit:
0.1 mm (0.004 in)

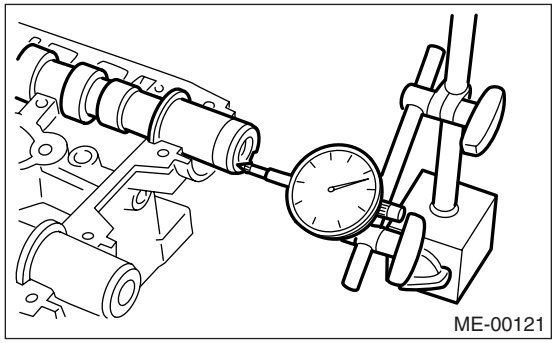

19.Cylinder Head Assembly

A: REMOVAL

1) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
2) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
3) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
4) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
5) Remove the camshaft sprocket. <Ref. to ME(H4DOTC)-69, REMOVAL, Camshaft Sprocket.>
6) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
7) Remove the bolt which installs the A/C compressor bracket on cylinder head.
8) Remove the camshaft. <Ref. to ME(H4DOTC)-72, REMOVAL, Camshaft.>
9) Remove the cylinder head bolts in alphabetical sequence shown in the figure.
Leave bolts (A) and (D) engaged by three or four threads to prevent the cylinder head from falling.

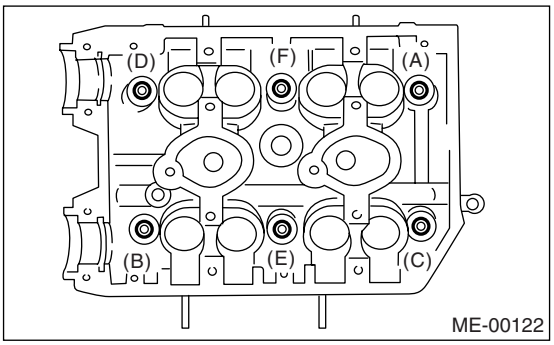

10) While tapping the cylinder head with a plastic hammer, separate it from cylinder block.
Remove the bolts (A) and (D) to remove cylinder head.

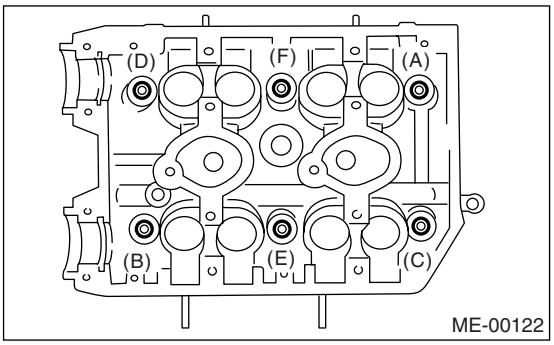

11) Remove the cylinder head gasket.

NOTE:
Do not scratch the mating surface of cylinder head and cylinder block.

12) Similarly, remove the cylinder head (RH).

B: INSTALLATION

1) Install the cylinder head and gaskets on cylinder block.

NOTE:
- Use new cylinder head gaskets.
- Be careful not to scratch the mating surface of cylinder head and cylinder block.

2) Tighten the cylinder head bolts.
   (1) Apply a coat of engine oil to the washers and bolt threads.
   (2) Tighten all bolts to 29 N·m (3.0 kgf-m, 22 ft-lb) in alphabetical sequence.
   (3) Tighten all bolts to 69 N·m (7.0 kgf-m, 51 ft-lb) in alphabetical sequence again.
   (4) Back off all bolts by 180° first; back them off by 180° again in reverse order of installation.
   (5) Tighten all bolts to 39 N·m (4.0 kgf-m, 29 ft-lb) in alphabetical sequence.
   (6) Tighten all bolts 80 to 90° in alphabetical sequence.
   (7) Tighten all bolts by 40 to 45° in alphabetical sequence again.

NOTE:
Do not tighten the bolts by more than 45°.
   (8) Further tighten all bolts (A) and (B) by 40 to 45°.

NOTE:
Ensure that the total “re-tightening angle” in the previous two steps do not exceed 90°.

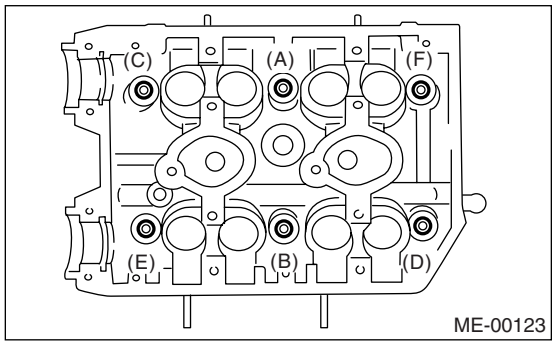

3) Install the camshaft. <Ref. to ME(H4DOTC)-74, INSTALLATION, Camshaft.>
4) Install the A/C compressor bracket on cylinder head.
5) Install the intake manifold. <Ref. to FU(H4DOTC)-17, INSTALLATION, Intake Manifold.>
6) Install the camshaft sprocket. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
7) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>

8) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
9) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
10) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>

C: DISASSEMBLY

1) Remove the valve lifters.
2) Compress the valve spring and remove the valve spring retainer key. Remove each valve and valve spring.

ST1 498267600 CYLINDER HEAD TABLE
ST2 499718000 VALVE SPRING REMOVER

NOTE:
• Keep the removed parts in order for re-installing in their original positions.
• Mark each valve to prevent confusion.
• Use extreme care not to damage the lips of the intake valve oil seals and exhaust valve oil seals.

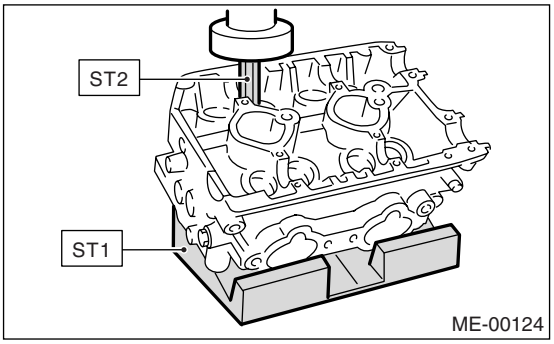

D: ASSEMBLY

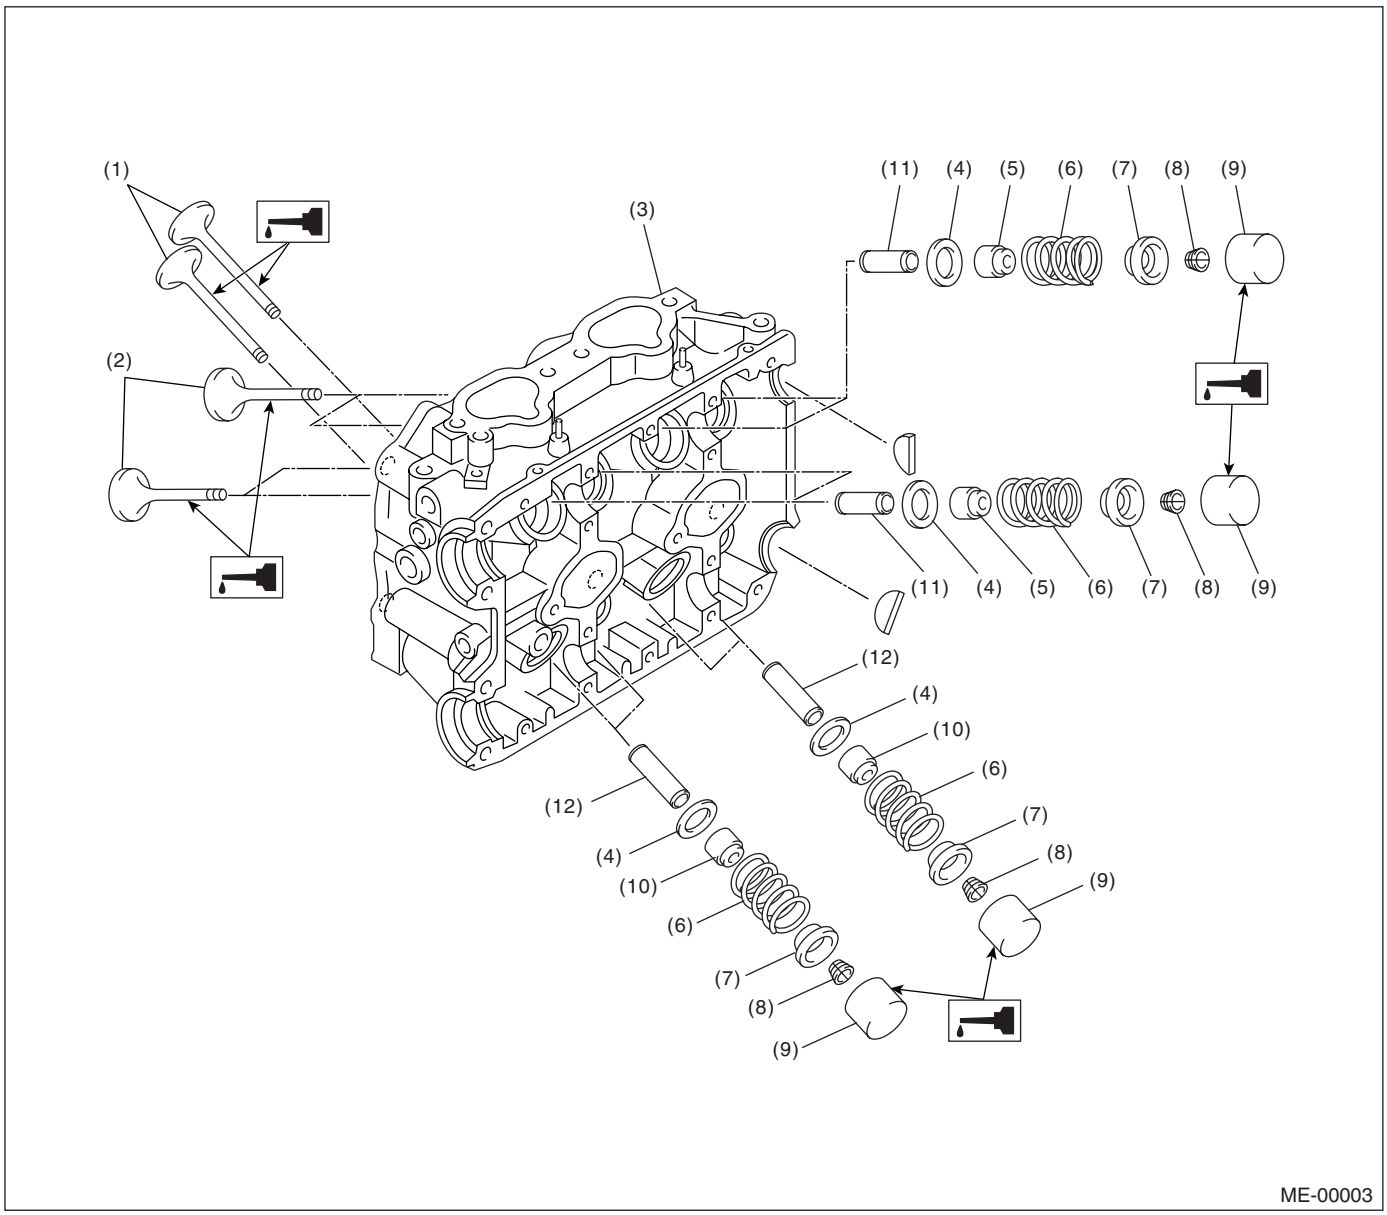

(1) Exhaust valve
(2) Intake valve
(3) Cylinder head
(4) Valve spring seat
(5) Intake valve oil seal
(6) Valve spring
(7) Retainer
(8) Retainer key
(9) Valve lifter
(10) Exhaust valve oil seal
(11) Intake valve guide
(12) Exhaust valve guide

1) Installation of valve spring and valve:
(1) Coat the stem of each valve with engine oil and insert the valve into valve guide.

NOTE:
When inserting the valve into valve guide, use special care not to damage the oil seal lip.

(2) Set the cylinder head on ST1.
(3) Install the valve spring and retainer using ST2.

ST1 498267600 CYLINDER HEAD TABLE
ST2 499718000 VALVE SPRING REMOVER

NOTE:
Be sure to install the valve springs with their close-coiled end facing the seat on cylinder head.

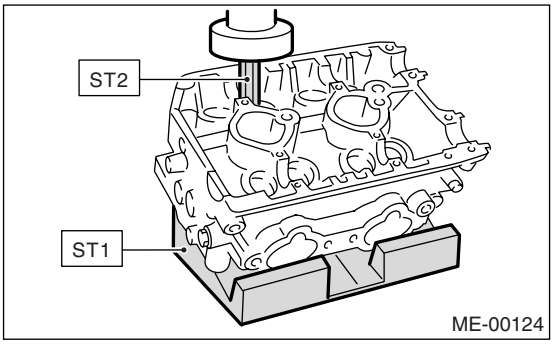

(4) Compress the valve spring, and then fit the valve spring retainer key.
(5) After installing, tap the valve spring retainers lightly with wooden hammer for better seating.

2) Apply oil to the surface of the valve lifter.
3) Install the valve lifter.

E: INSPECTION

1. CYLINDER HEAD

1) Make sure that no crack or other damage exists. In addition to visual inspection, inspect the important areas by means of red check.
2) Measure the warping of the cylinder head surface that mates with crankcase by using a straight edge (A) and thickness gauge (B).
If the warping exceeds 0.05 mm (0.0020 in), re-grind the surface with a surface grinder.

Warping limit:
0.05 mm (0.0020 in)

Grinding limit:
0.3 mm (0.012 in)

Standard height of cylinder head:
127.5 mm (5.02 in)

NOTE:
Uneven torque for the cylinder head nuts can cause warping. When reassembling, pay special attention to the torque so as to tighten evenly.

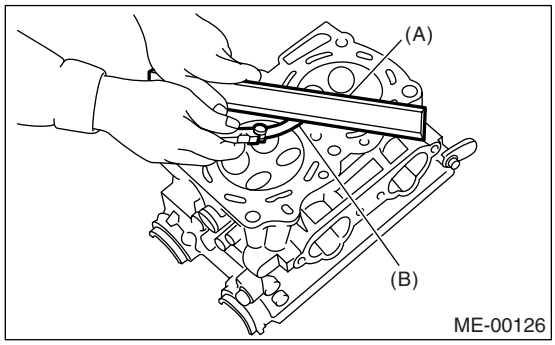

2. VALVE SEAT

Inspect the intake and exhaust valve seats, and then correct the contact surfaces with valve seat cutter if they are defective or when valve guides are replaced.

Valve seat width: W
Intake
Standard
1.0 mm (0.039 in)
Limit
1.7 mm (0.067 in)
Exhaust
Standard
1.5 mm (0.059 in)
Limit
2.2 mm (0.087 in)

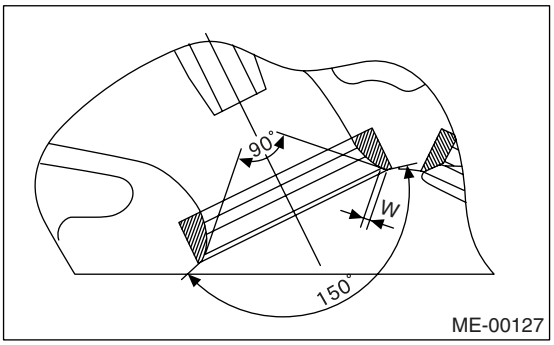

3. VALVE GUIDE

1) Check the clearance between valve guide and stem. The clearance can be checked by measuring the outside diameter of valve stem and the inside diameter of valve guide with outside and inside micrometers respectively.

Clearance between the valve guide and valve stem:

Standard
Intake
0.030 — 0.057 mm (0.0012 — 0.0022 in)
Exhaust
0.040 — 0.067 mm (0.0016 — 0.0026 in)

Limit
0.15 mm (0.0059 in)

2) If the clearance between valve guide and stem exceeds the limit, replace the valve guide or valve itself whichever shows greater amount of wear. See the following procedure for valve guide replacement.

Valve guide inner diameter:
6.000 — 6.012 mm (0.2362 — 0.2367 in)

Valve stem outer diameters:
• DOHC turbo model
Intake
5.955 — 5.970 mm (0.2344 — 0.2350 in)
Exhaust
5.945 — 5.960 mm (0.2341 — 0.2346 in)

(1) Place the cylinder head on ST1 with the combustion chamber upward so that valve guides enter the holes in ST1.
(2) Insert the ST2 into valve guide and press it down to remove the valve guide.

ST1 498267600 CYLINDER HEAD TABLE
ST2 499767200 VALVE GUIDE REMOVER

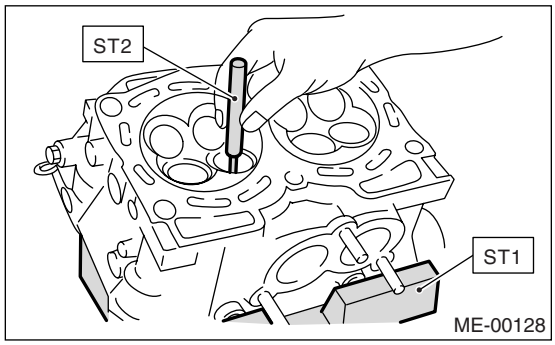

(3) Turn the cylinder head upside down and place ST as shown in the figure.

ST 18251AA020 VALVE GUIDE ADJUSTER

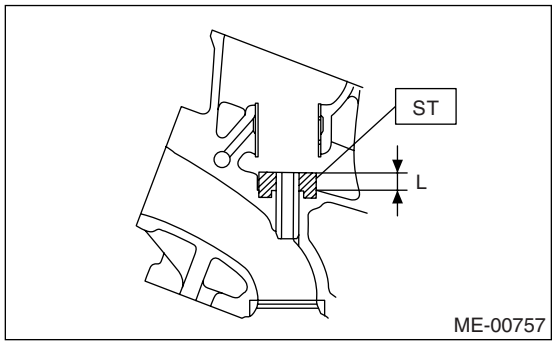

(4) Before installing a new valve guide, make sure that neither scratches nor damages exist on the inside surface of the valve guide holes in cylinder head.

(5) Put a new valve guide, coated with sufficient oil, in cylinder, and insert ST1 into valve guide. Press in until the valve guide upper end is flush with the upper surface of ST2.

ST1 499767200VALVE GUIDE REMOVER
ST2 18251AA020 VALVE GUIDE ADJUSTER

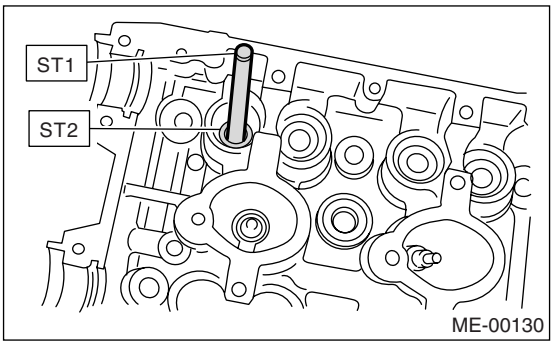

(6) Check the valve guide protrusion.

Valve guide protrusion: L
15.8 — 16.2 mm (0.622 — 0.638 in)

(7) Ream the inside of valve guide with ST. Gently rotate the reamer clockwise while pressing it lightly into the valve guide, and return it also rotating clockwise. After reaming, clean the valve guide to remove chips.

ST 499767400 VALVE GUIDE REAMER

NOTE:
• Apply engine oil to the reamer when reaming.
• If the inner surface of the valve guide is torn, the edge of the reamer should be slightly ground with an oil stone.
• If the inner surface of the valve guide becomes lustrous and the reamer does not chip, use a new reamer or remedy the reamer.

(8) Recheck the contact condition between valve and valve seat after replacing the valve guide.

4. INTAKE AND EXHAUST VALVE

1) Inspect the flange and stem of valve, and replace if damaged, worn, or deformed, or if “H” is less than the specified limit.

H:
Intake (A)
Standard
1.2 mm (0.047 in)
Limit
0.8 mm (0.031 in)
Exhaust (B)
Standard
1.5 mm (0.059 in)
Limit
0.8 mm (0.031 in)

Valve overall length:
Intake (A)
104.4 mm (4.110 in)
Exhaust (B)
104.7 mm (4.122 in)

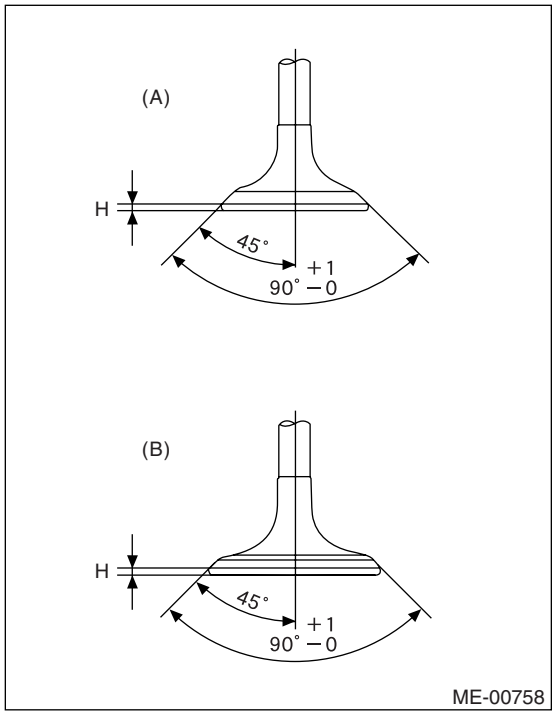

2) Put a small amount of grinding compound on the seat surface and lap the valve and seat surface. Install a new intake valve oil seal after lapping.

5. VALVE SPRINGS

1) Check the valve springs for damage, free length, and tension. Replace the valve spring if it is not within specifications presented in the table.
2) To measure the squareness of valve spring, stand the spring on a surface plate and measure its deflection at the top using a try square.

- Except for STi model

		Valve spring
Free length		47.32 mm (1.863 in)
Tension/spring height	Set	205 — 235 N (20.9 — 24.0 kgf, 41.6 — 52.8 lb) /36.0 mm (1.417 in)
	Lift	426 — 490 N (43.4 — 50.0 kgf, 95.8 — 110 lb) /26.5 mm (1.04 in)
Squareness		2.5°, 2.1 mm (0.083 in)

- STi model

		Valve spring
Free length		43.89 mm (1.728 in)
Tension/spring height	Set	205 — 237 N (20.9 — 24.2 kgf, 46.1 — 53.3 lb) /36.0 mm (1.417 in)
	Lift	553 — 611 N (56.4 — 62.3 kgf, 124 — 137 lb) /26.45 mm (1.041 in)
Squareness		2.5°, 1.9 mm (0.075 in)

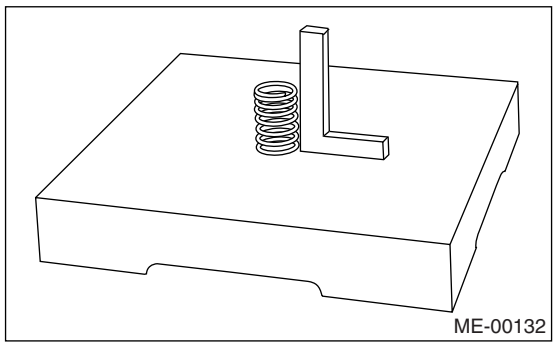

6. INTAKE AND EXHAUST VALVE OIL SEAL

Replace the oil seal with a new one, if the lip is damaged or spring out of place, or when the surfaces of intake valve and valve seat are reconditioned or intake valve guide is replaced.
1) Place the cylinder head on ST1.
2) Press in the oil seal to the specified dimension indicated in the figure by using ST2.
ST1 498267600 CYLINDER HEAD TABLE
ST2 498857100 VALVE OIL SEAL GUIDE

NOTE:
- Apply engine oil to oil seal before press-fit.
- Differentiate between the intake valve oil seal and exhaust valve oil seal by noting their difference in color.

Color of rubber part:
Intake [Black]
Exhaust [Brown]

Color of spring part:
Intake [Silver]
Exhaust [Silver]

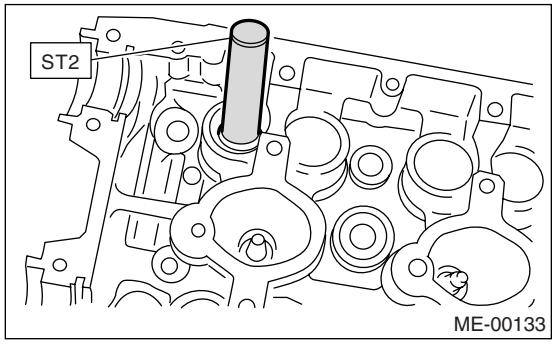

7. VALVE LIFTER

1) Visually check the valve lifter.
2) Measure the outer diameter of valve lifter.

Outer diameter:
34.959 — 34.975 mm (1.3763 — 1.3770 in)

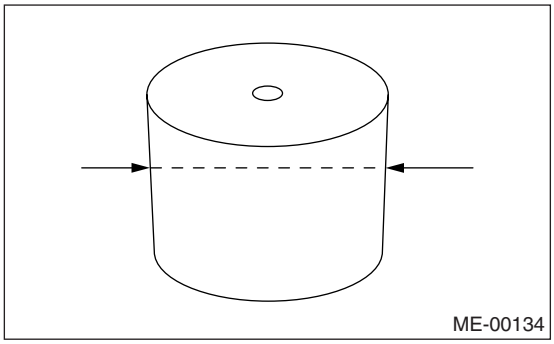

3) Measure the inner diameter of valve lifter mating part on cylinder head.

Inner diameter:
34.994 — 35.016 mm (1.3777 — 1.3786 in)

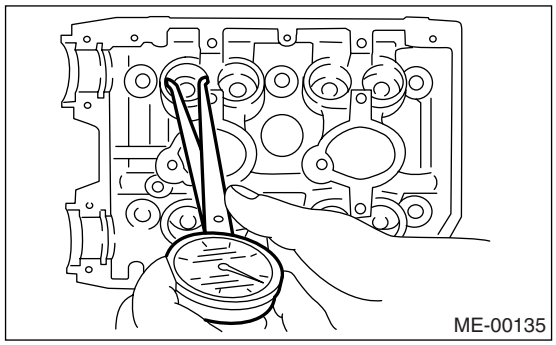

NOTE:
If difference between outer diameter of valve lifter and inner diameter of valve lifter mating part is over the limit, replace the cylinder head.

Standard:
0.019 — 0.057 mm (0.0007 — 0.0022 in)

Limit:
0.100 mm (0.0039 in)

F: DISPOSAL

CAUTION:
• Metallic sodium is enclosed in the exhaust valve. Metallic sodium is extremely alkaline and may produce severe chemical reactions. Full consideration must therefore be given to the following points when handling or disposing of the valve.
• Since metallic sodium may cause blindness if contacted with the eyes, burns if contacted with the skin, and fire, do not deliberately take the valve apart.

1) If the valve is damaged, remove the valve and neutralize it by immersing it in water, and dispose of it in the same way that general steel materials are disposed of. The disposal method is described in the following.
(1) Wearing rubber gloves, remove the damaged valve from the cylinder head.
(2) Prepare a large receptacle (bucket or other container) in a well ventilated location, and fill the receptacle with water (at least 10 liters).
(3) Immerse the damaged valve in the receptacle.

CAUTION:
A severe reaction may occur, so stand at least 2 — 3 m from the receptacle. Because the reaction will produce hydrogen gas, moreover, keep the receptacle away from sparks or flames.

(4) Once the reaction is completed (about 4 — 5 hours have elapsed), carefully remove the valve using large pincers so that the reaction liquid does not contact your skin, and dispose of it with other parts that are being disposed of.
(5) The reaction liquid is a strong alkaline solution, so it must be disposed of in accordance with local regulations.

CAUTION:
Make sure the reaction liquid does not contact your skin. If contact with skin occurs, immediately wash the affected area with large quantities of water.

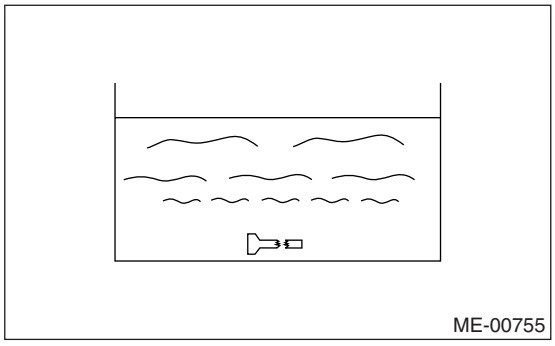

20.Cylinder Block

A: REMOVAL

NOTE:
Before conducting this procedure, drain the engine oil completely if applicable.

1) Remove the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
2) Remove the V-belt. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
3) Remove the crankshaft pulley. <Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>
4) Remove the timing belt cover. <Ref. to ME(H4DOTC)-59, REMOVAL, Timing Belt Cover.>
5) Remove the timing belt assembly. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
6) Remove the camshaft sprocket. <Ref. to ME(H4DOTC)-69, REMOVAL, Camshaft Sprocket.>
7) Remove the crankshaft sprocket. <Ref. to ME(H4DOTC)-71, REMOVAL, Crankshaft Sprocket.>
8) Remove the generator and A/C compressor with their brackets.
9) Remove the cylinder head assembly. <Ref. to ME(H4DOTC)-81, REMOVAL, Cylinder Head Assembly.>
10) Remove the clutch disc and cover. (MT model) <Ref. to CL-20, REMOVAL, Clutch Disc and Cover.>
11) Remove the flywheel. (MT model) <Ref. to CL-24, REMOVAL, Flywheel.>
12) Remove the drive plate. (AT model)
Using the ST, lock crankshaft.
ST 498497100 CRANKSHAFT STOPPER

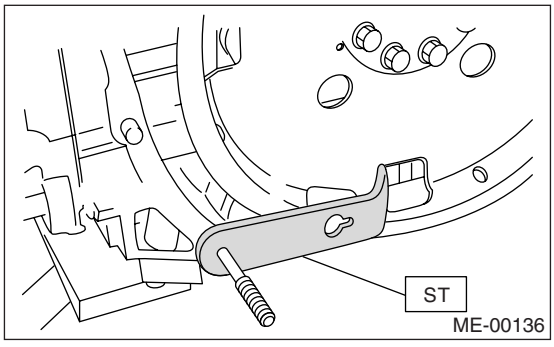

13) Remove the oil separator cover.
14) Remove the water by-pass pipe for heater.
15) Remove the oil filter.
ST 498547000 OIL FILTER WRENCH
16) Remove the oil cooler.

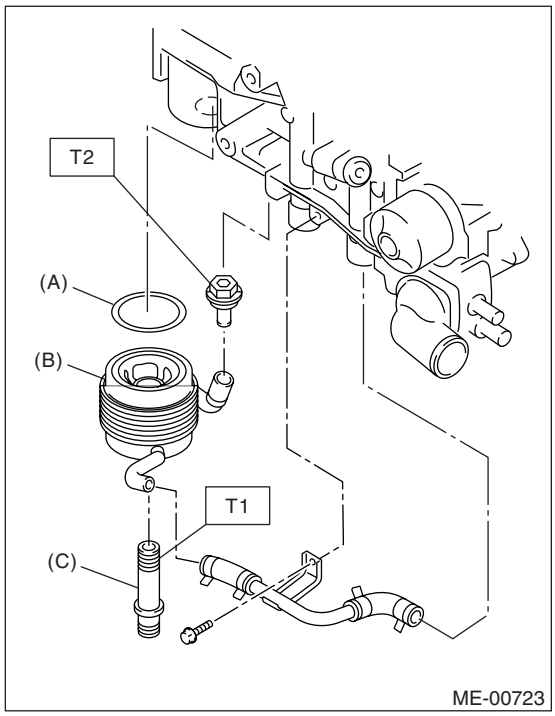

(A) Gasket
(B) Oil cooler
(C) Oil cooler connector

17) Removal of oil pan:
(1) Turn the cylinder block with #2 and #4 piston sides facing upward.
(2) Remove the bolts which secure oil pan to cylinder block.
(3) Insert an oil pan cutter blade between cylinder block-to-oil pan clearance, and then remove the oil pan.
Do not use a screwdriver or similar tool in place of oil pan cutter.
18) Remove the oil strainer stay.
19) Remove the oil strainer.
20) Remove the baffle plate.
21) Remove the water pipes.
22) Remove the water pump.

23) Remove the oil pump from cylinder block.
Use a flat-bladed screwdriver as shown in the figure when removing the oil pump.

NOTE:
Be careful not to scratch the mating surface of cylinder block and oil pump.

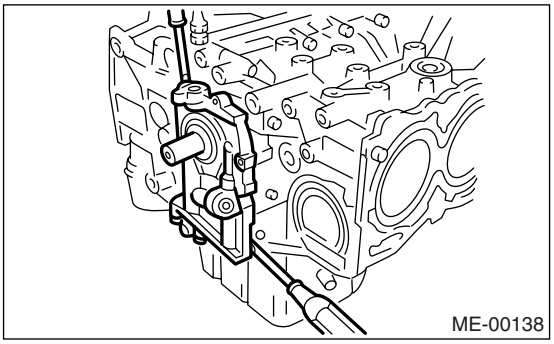
ME-00138

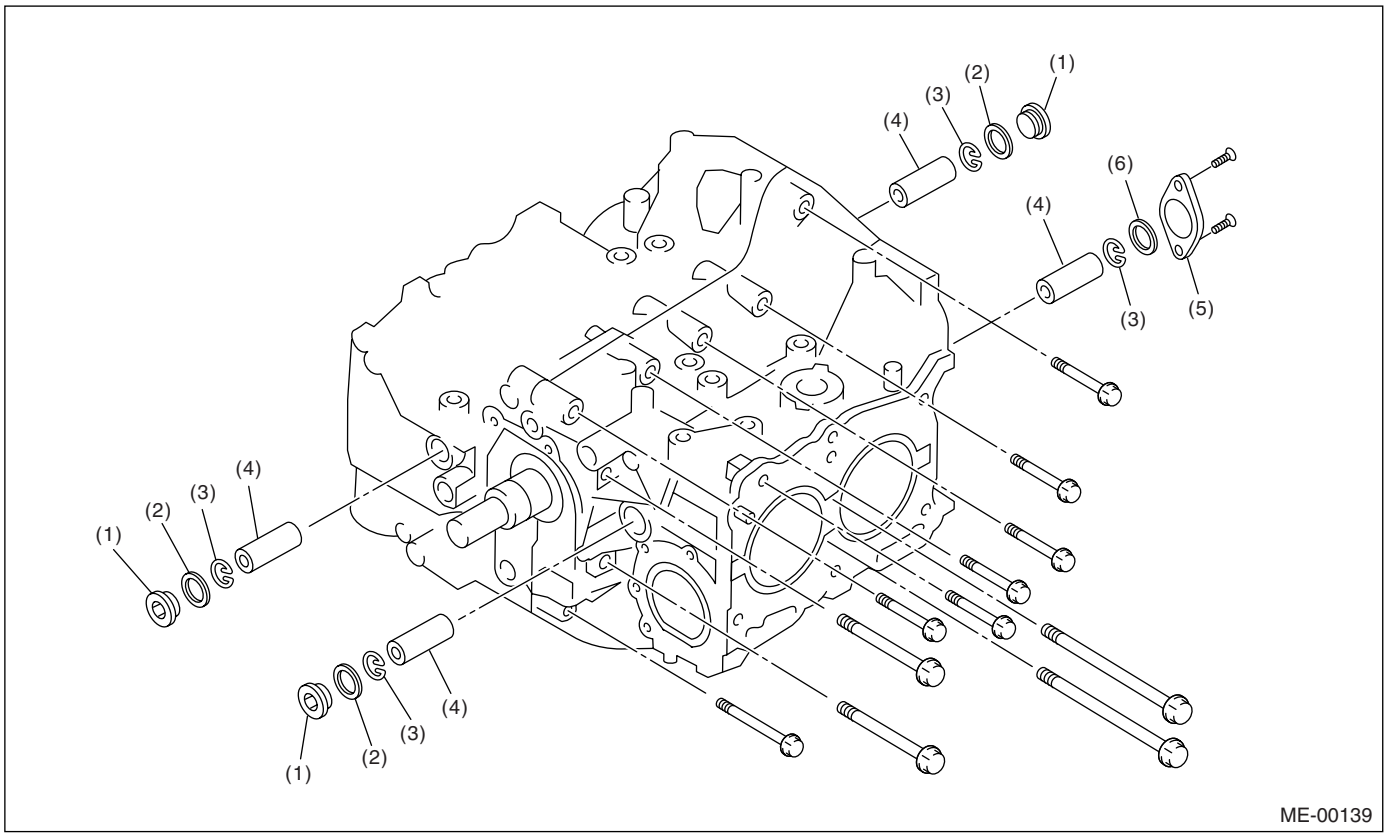

ME-00139

(1) Service hole plug
(2) Gasket
(3) Circlip
(4) Piston pin
(5) Service hole cover
(6) O-ring

24) Remove the service hole cover and service hole plugs using hexagon wrench [14 mm (0.55 in)].

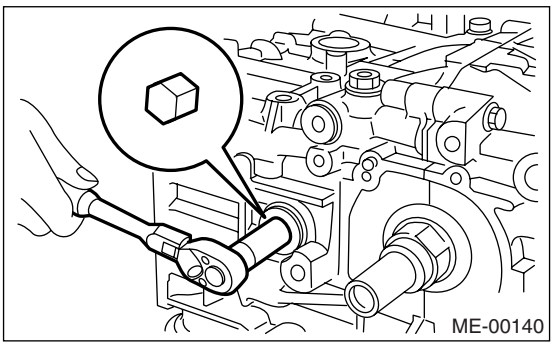

25) Rotate the crankshaft to bring #1 and #2 pistons to bottom dead center position, and then remove the piston circlip through service hole of #1 and #2 cylinders.

ST 499897200 PISTON CIRCLIP PLIERS

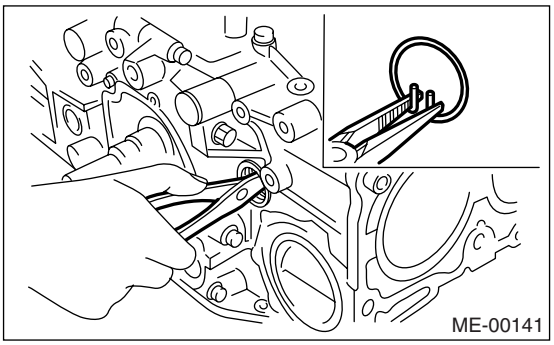

26) Draw out the piston pin from #1 and #2 pistons using ST.

ST 499097700 PISTON PIN REMOVER (Australia model except for STi model)

ST 499097600 PISTON PIN REMOVER (Except for Australia model)

NOTE:
Be careful not to confuse the original combination of piston, piston pin and cylinder.

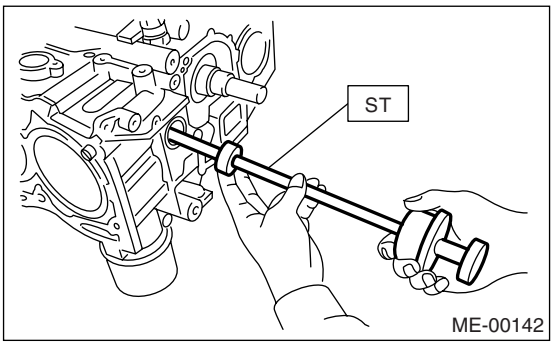

27) Similarly remove the piston pins from #3 and #4 pistons.

28) Remove the bolts which connect the cylinder block on the side of #2 and #4 cylinders.

29) Back off the bolts which connect the cylinder block on the side of #1 and #3 cylinders two or three turns.

30) Set up the cylinder block so that #1 and #3 cylinders are on the upper side, then remove the cylinder block connecting bolts.

31) Separate the cylinder blocks (LH) and (RH).

NOTE:
When separating the cylinder block, do not allow the connecting rod to fall and damage the cylinder block.

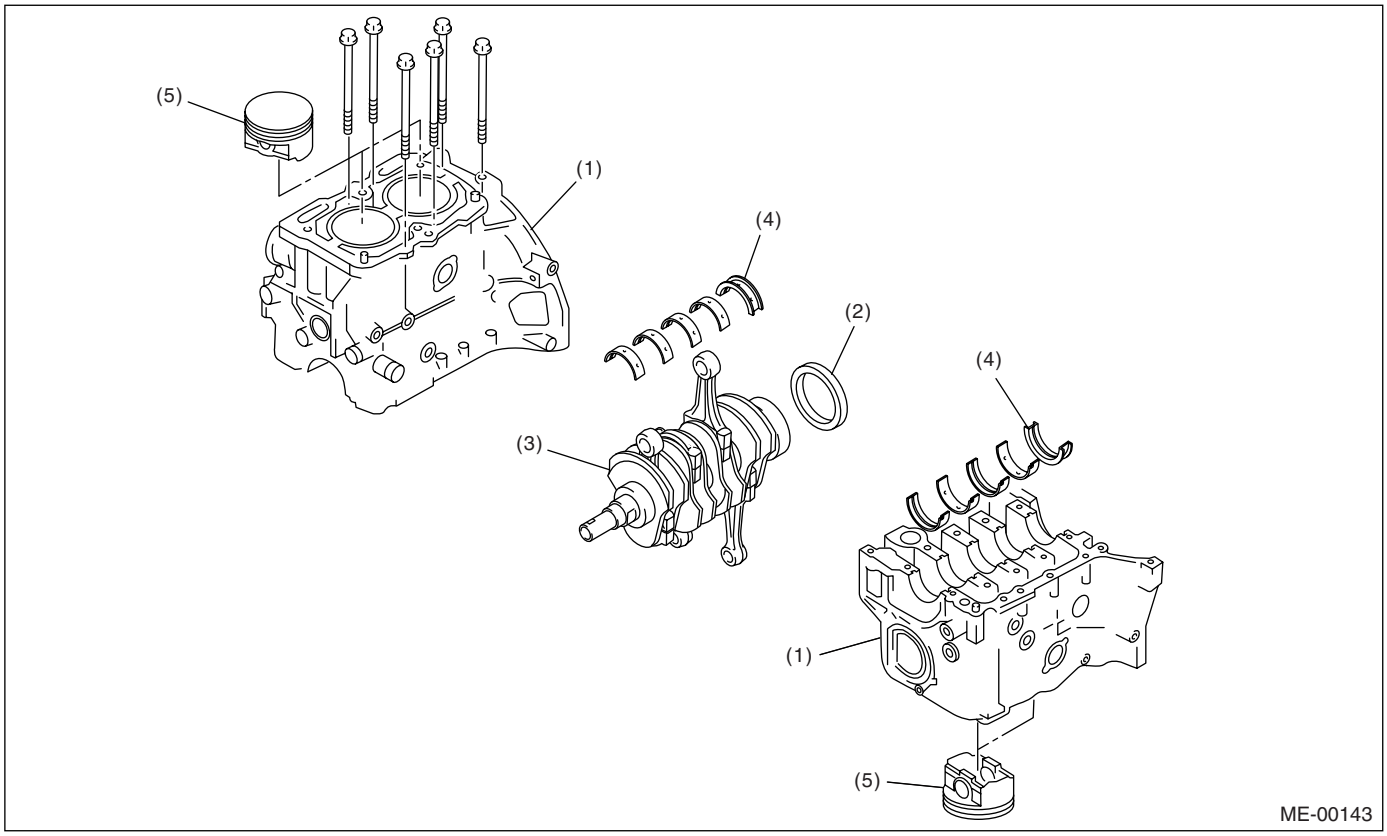

(1) Cylinder block
(2) Rear oil seal
(3) Crankshaft
(4) Crankshaft bearing
(5) Piston

32) Remove the rear oil seal.
33) Remove the crankshaft together with connecting rod.
34) Remove the crankshaft bearings from cylinder block using a hammer handle.

NOTE:
Do not confuse the combination of crankshaft bearings.
Press the bearing at the end opposite to locking lip.

35) Draw out each piston from cylinder block using a wooden bar or hammer handle.

NOTE:
Do not confuse the combination of piston and cylinder.

B: INSTALLATION

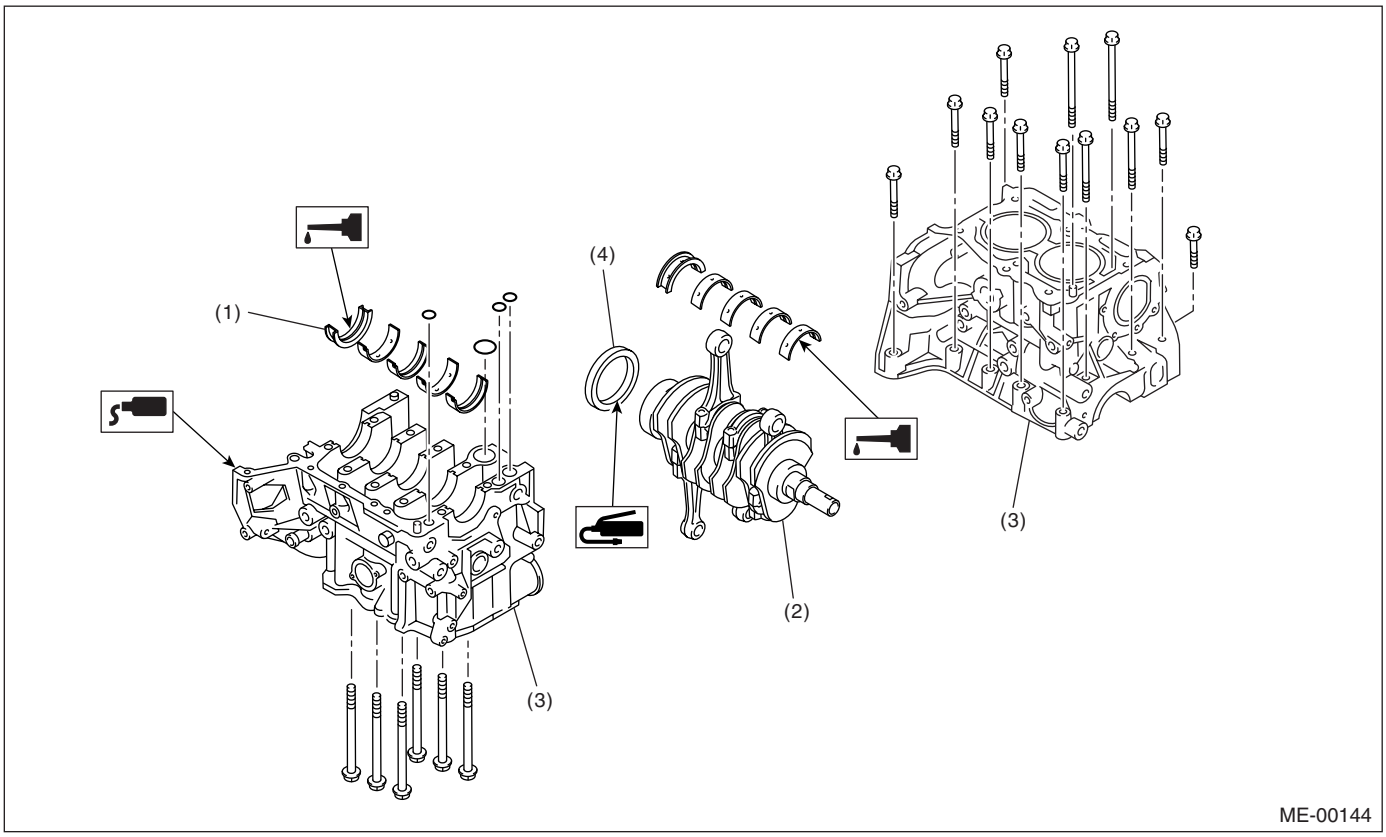

(1) Crankshaft bearing
(2) Crankshaft
(3) Cylinder block
(4) Rear oil seal

1) Remove oil in the mating surface of bearing and cylinder block before installation. Also apply a coat of engine oil to crankshaft pins.
2) Position the crankshaft on #2 and #4 cylinder block.
3) Apply fluid packing to the mating surface of #1 and #3 cylinder block, and position it on #2 and #4 cylinder block.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

NOTE:
Do not allow fluid packing to jut into O-ring grooves, oil passages, bearing grooves, etc.

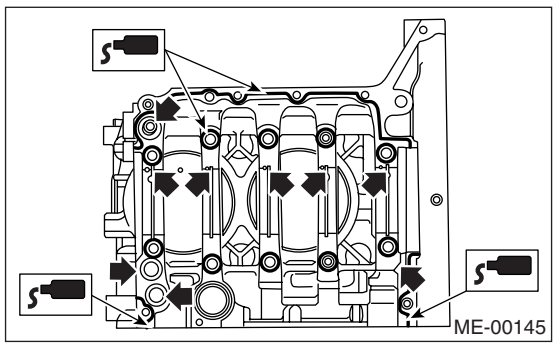

4) Tighten the 10 mm cylinder block connecting bolts in alphabetical sequence shown in the figure. (LH side)

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

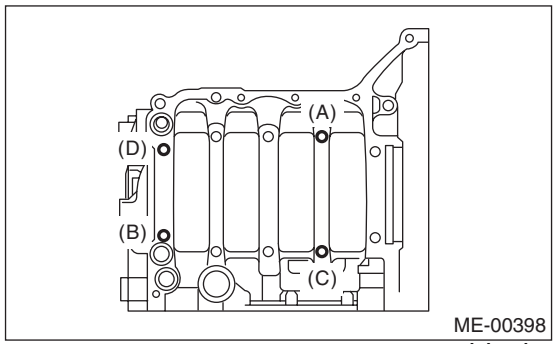

5) Tighten the 10 mm cylinder block connecting bolts in alphabetical sequence shown in the figure. (RH side)

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

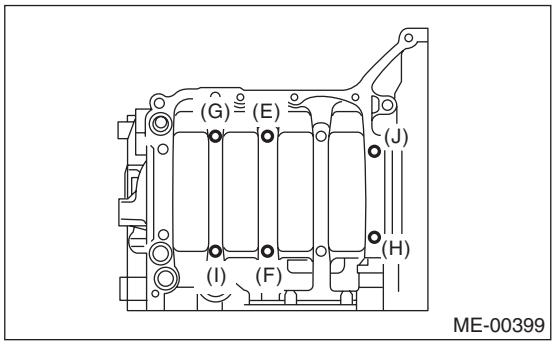

6) Further tighten the LH side bolts (A — D) to 90° in alphabetical sequence.

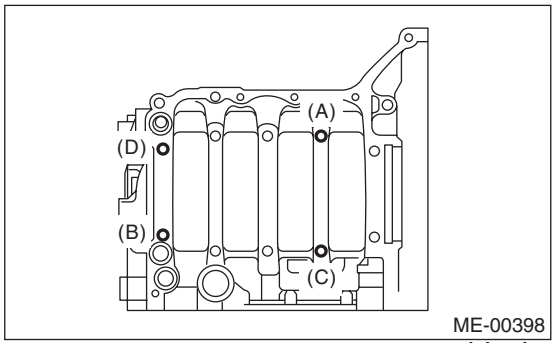

7) Further tighten the RH side bolts (E — J) to 90° in alphabetical sequence.

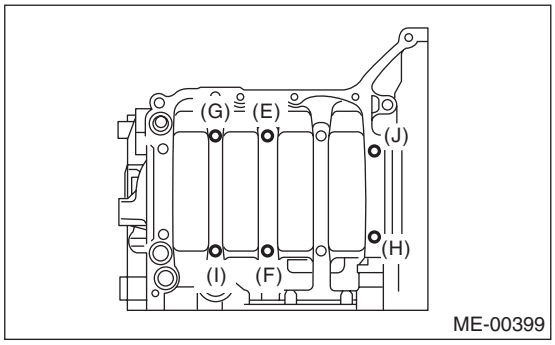

8) Tighten the 8 mm and 6 mm cylinder block connecting bolts in alphabetical sequence shown in the figure.

Tightening torque:
(A) — (G): 25 N·m (2.5 kgf-m, 18.1 ft-lb)
(H): 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

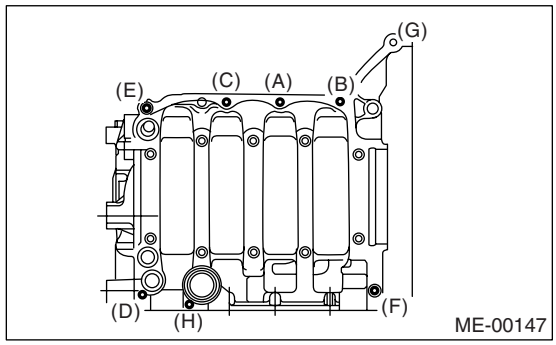

9) Install the rear oil seal using ST1 and ST2.

ST1	499597100	CRANKSHAFT OIL SEAL GUIDE
ST2	499587200	CRANKSHAFT OIL SEAL INSTALLER

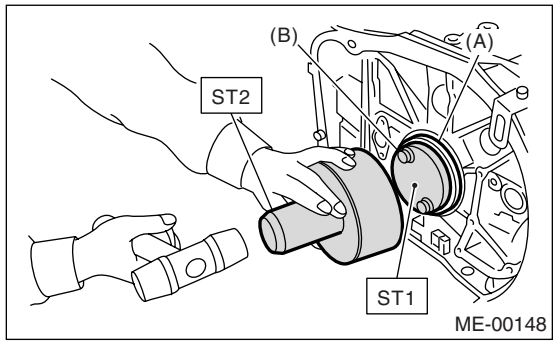

(A) Rear oil seal
(B) Flywheel attaching bolt

10) Position the top ring gap at (A) or (B) in the figure.
11) Position the second ring gap at 180° on the reverse side for the top ring gap.

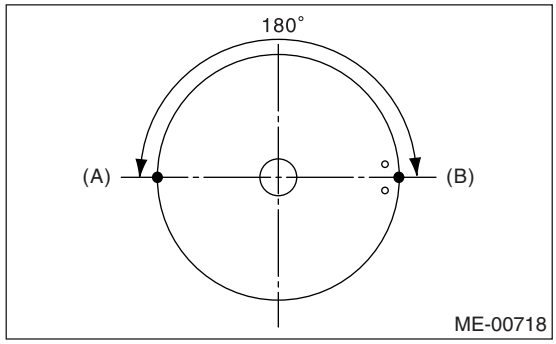

12) Position the expander gap at (C) in the figure.

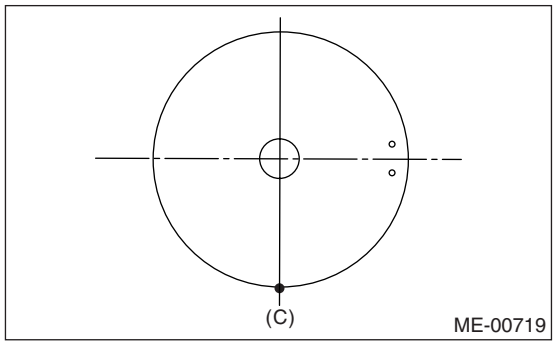

13) Position the lower rail gap at (D) in the figure.

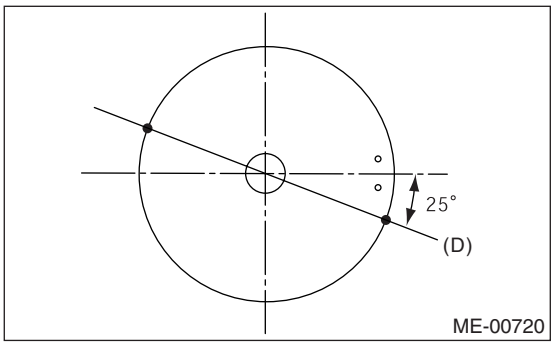

14) Align lower rail spin stopper (F) with piston side surface hole (E).

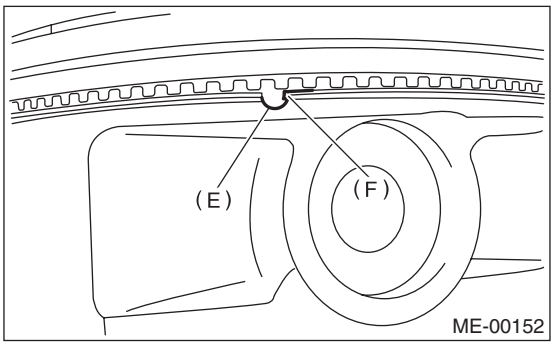

15) Position the upper rail gap at (G) in the figure.

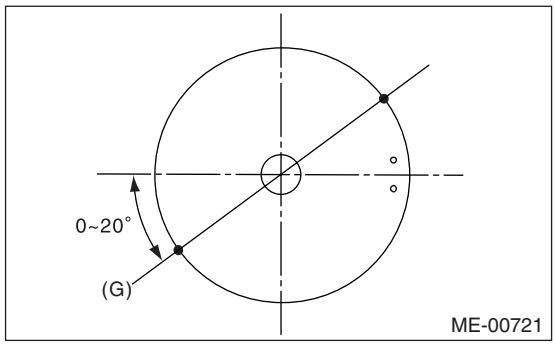

NOTE:
- Ensure ring gaps do not face the same direction.
- Ensure ring gaps are not within the piston skirt area.

16) Install the circlip.
Install the circlips in piston holes located opposite of service holes in cylinder block, when positioning all pistons in the corresponding cylinders.

NOTE:
Use new circlips.

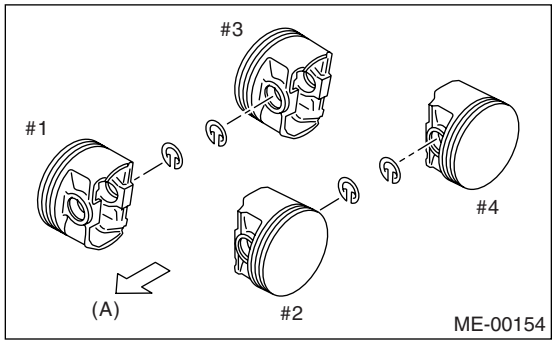

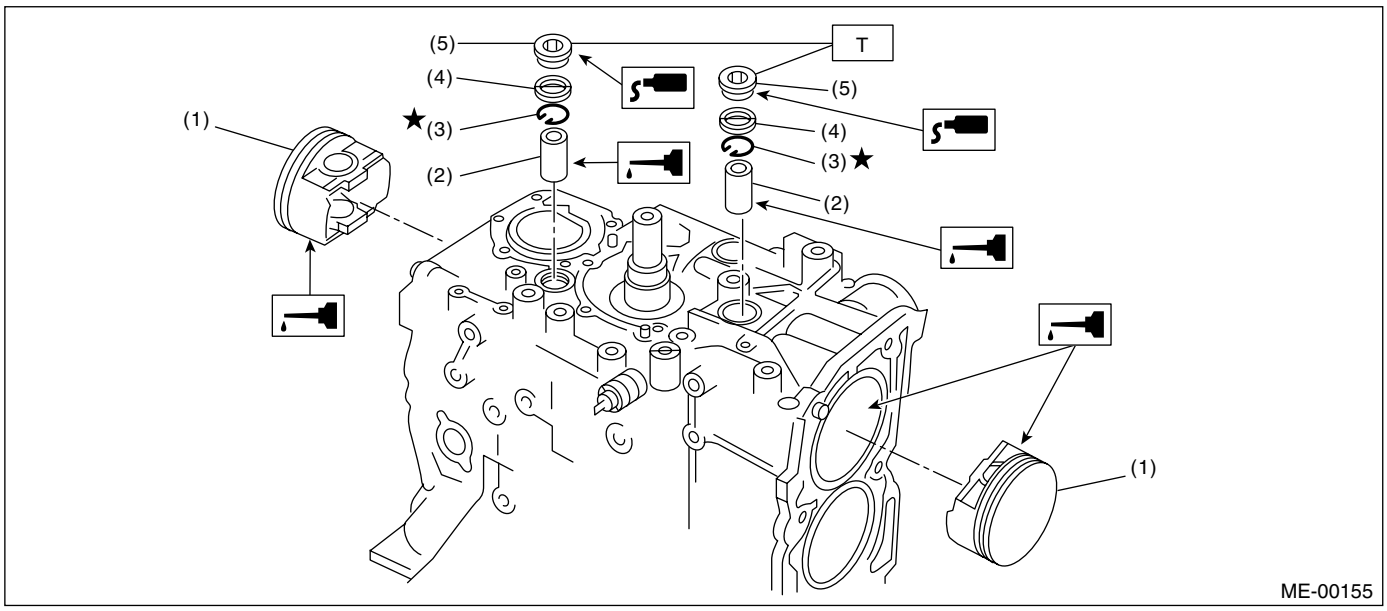

(1) Piston
(2) Piston pin
(3) Circlip
(4) Gasket
(5) Service hole plug

Tightening torque: N·m (kgf-m, ft-lb)
T: 70 (7.1, 51.4)

17) Installing the piston:
(1) Turn the cylinder block so that #1 and #2 cylinders face upward.
(2) Using the ST1, turn the crankshaft so that #1 and #2 connecting rods are set at bottom dead center.

ST1 499987500 CRANKSHAFT SOCKET

(3) Apply a coat of engine oil to the pistons and cylinders and insert pistons in their cylinders using ST2.

ST2 398744300 PISTON GUIDE

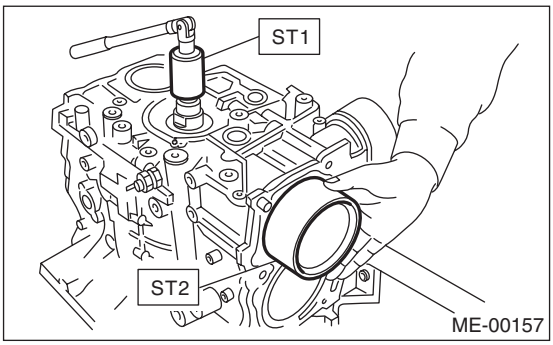

NOTE:
Piston front mark faces towards the front of the engine.

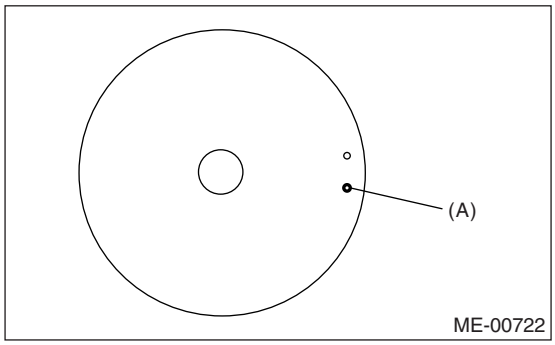

(A) Front mark

18) Installing piston pin:
(1) Apply a coat of engine oil to ST3, and then insert the ST3 into service hole to align piston pin hole with connecting rod small end.

ST3 499017100 PISTON PIN GUIDE

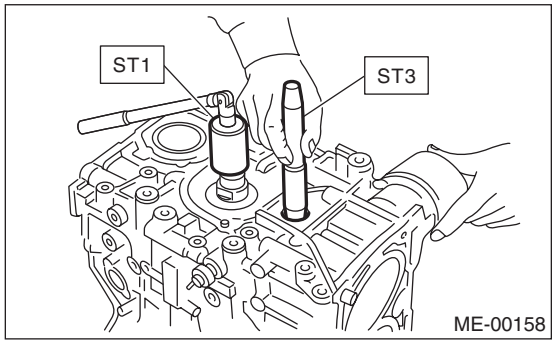

(2) Apply a coat of engine oil to the piston pin and insert piston pin into piston and connecting rod through service hole.

(3) Using the ST, install the circlip.

ST 499897200 PISTON CIRCLIP PLIERS

NOTE:
Use new circlips.

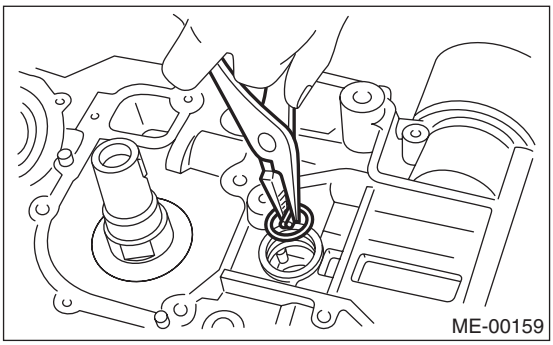

(4) Apply fluid packing around the service hole plug.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

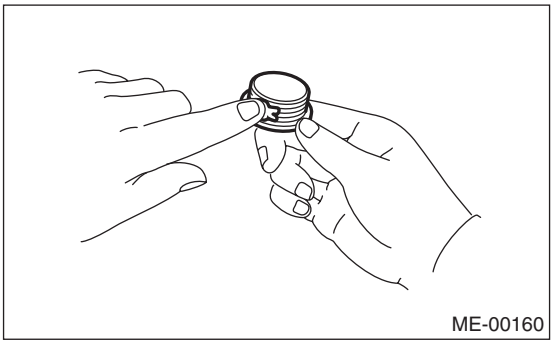

(5) Install the service hole plug and gasket.

NOTE:
Use a new gasket.

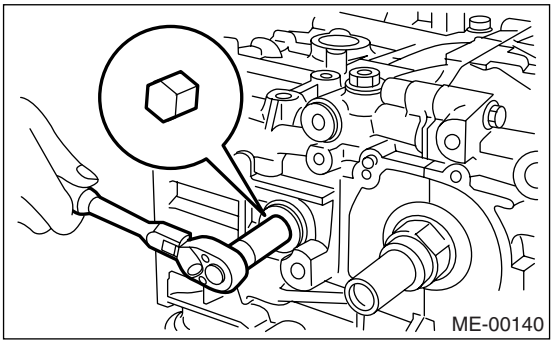

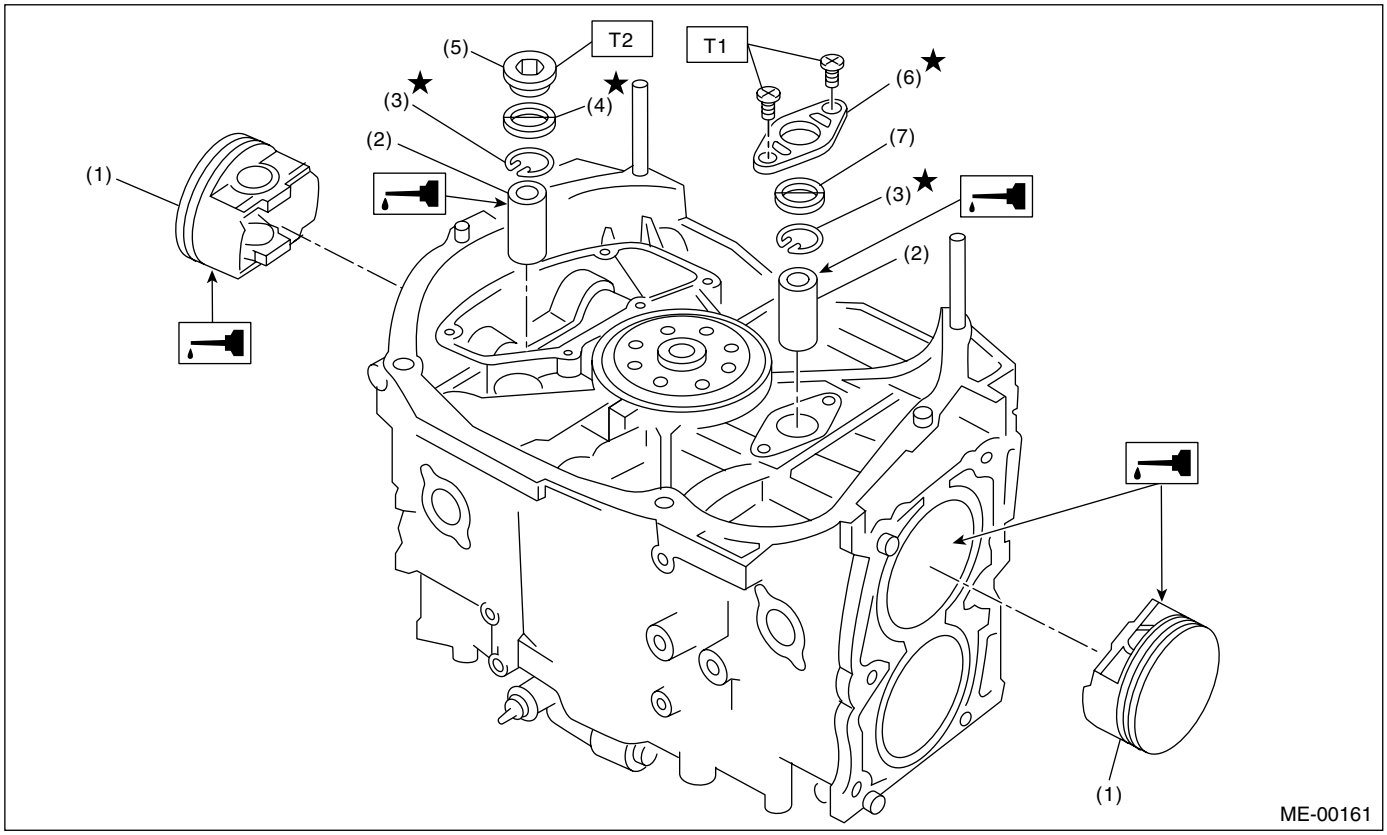

(1) Piston
(2) Piston pin
(3) Circlip
(4) Gasket
(5) Service hole plug
(6) Service hole cover
(7) O-ring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 70 (7.1, 51.4)

(6) Turn the cylinder block so that #3 and #4 cylinders face upward. Using the same procedures as used for #1 and #2 cylinders, install the pistons and piston pins.

19) Install the water pipe.
20) Install the baffle plate.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

21) Install the oil strainer and O-ring

Tightening torque:
10 N·m (1.0 kgf-m, 7 ft-lb)

22) Install the oil strainer stay.

23) Apply fluid packing to the matching surfaces, and then install the oil pan.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

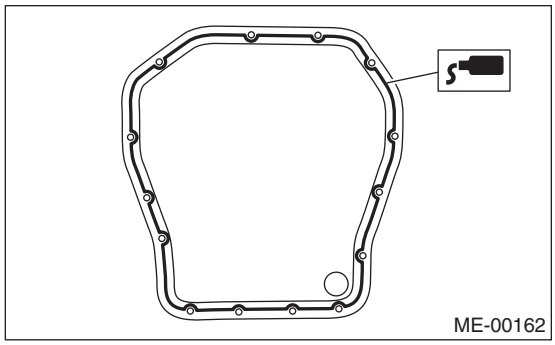

24) Apply fluid packing to the matching surfaces, and then install the oil separator cover.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

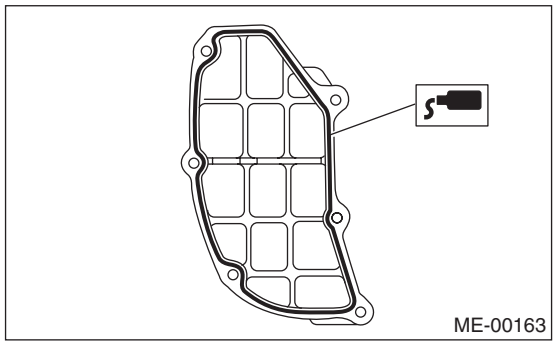

25) Install the drive plate. (AT model)
To lock the crankshaft, use ST.
ST 498497100 CRANKSHAFT STOPPER

Tightening torque:
72 N·m (7.3 kgf-m, 52.8 ft-lb)

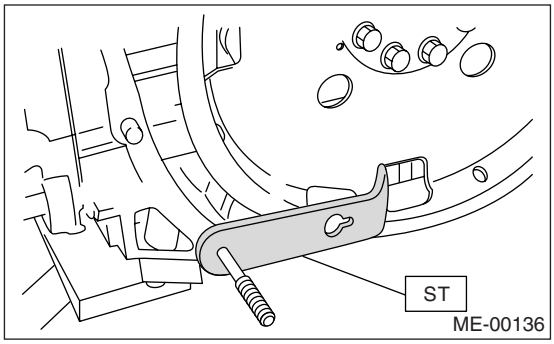

26) Install the flywheel. (MT model) <Ref. to CL-24, INSTALLATION, Flywheel.>
27) Install the clutch disc and cover. (MT model) <Ref. to CL-20, INSTALLATION, Clutch Disc and Cover.>
28) Installation of oil pump:
(1) Discard the front oil seal after removal. Replace with a new one using the ST.
ST 499587100 OIL SEAL INSTALLER

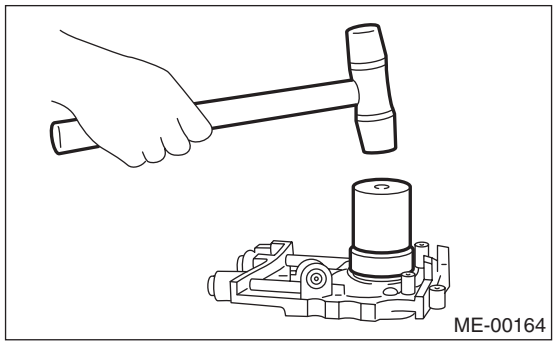

(2) Apply fluid packing to the matching surface of oil pump.

Fluid packing:
Part No. 004403007
THREE BOND 1215 or equivalent

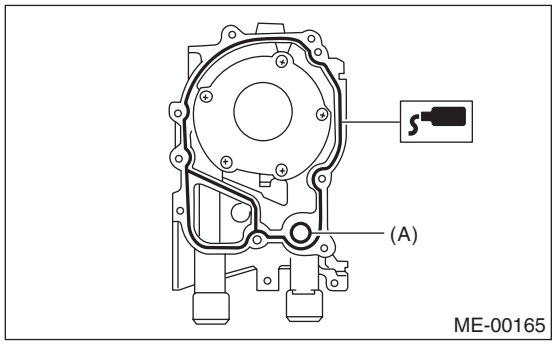

(A) O-ring

(3) Apply a coat of engine oil to the inside of the oil seal.

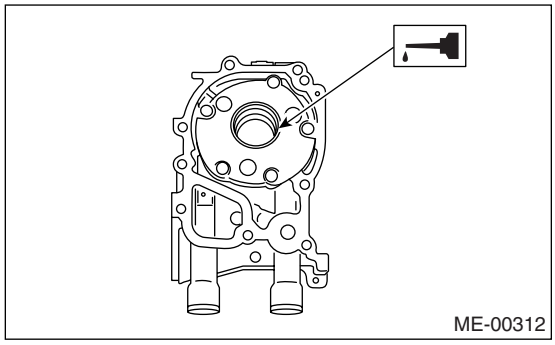

(4) Install the oil pump on cylinder block. Be careful not to damage the oil seal during installation.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

NOTE:
• Do not forget to install the O-ring and seal when installing the oil pump.
• Align the flat surface of oil pump's inner rotor with crankshaft before installation.

29) Install the water pump and gasket.

Tightening torque:
First; 12 N·m (1.2 kgf-m, 8.7 ft-lb)
Second; 12 N·m (1.2 kgf-m, 8.7 ft-lb)

NOTE:
- Be sure to use a new gasket.
- When installing the water pump, tighten the bolts in two stages in alphabetical sequence as shown in the figure.

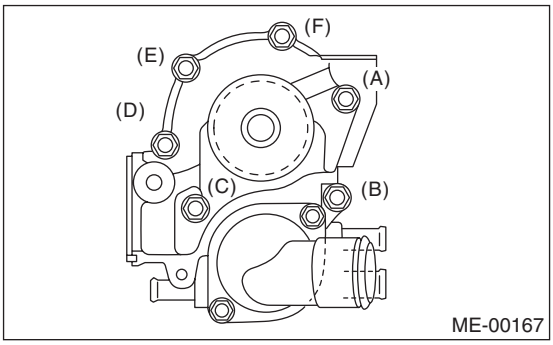

30) Install the water by-pass pipe for heater.
31) Install the oil cooler.

Tightening torque:
T1: 54 N·m (5.5 kgf-m, 40 ft-lb)
T2: 69 N·m (7.0 kgf-m, 50.6 ft-lb)

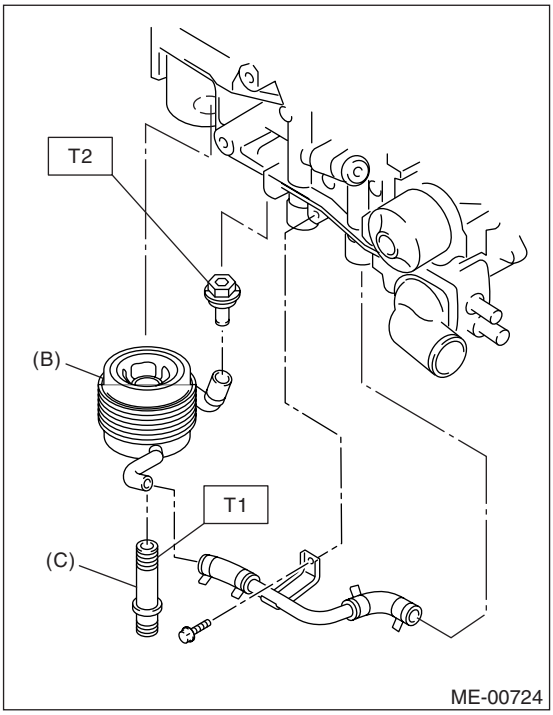

(A) O-ring
(B) Oil cooler
(C) Oil cooler connector

32) Install the oil filter using ST.
ST 498547000 OIL FILTER WRENCH

33) Install the water by-pass pipe between oil cooler and water pump.
34) Install the water pipe.

NOTE:
Always use a new O-ring.

35) Install the cylinder head assembly. <Ref. to ME(H4DOTC)-81, INSTALLATION, Cylinder Head Assembly.>
36) Install the oil level gauge guide and tighten the attaching bolt (LH side).
37) Install the rocker cover.
38) Install the crankshaft sprocket. <Ref. to ME(H4DOTC)-71, INSTALLATION, Crankshaft Sprocket.>
39) Install the camshaft sprocket. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
40) Install the timing belt assembly. <Ref. to ME(H4DOTC)-62, INSTALLATION, Timing Belt Assembly.>
41) Install the timing belt cover. <Ref. to ME(H4DOTC)-59, INSTALLATION, Timing Belt Cover.>
42) Install the crankshaft pulley. <Ref. to ME(H4DOTC)-58, INSTALLATION, Crankshaft Pulley.>
43) Install the generator and A/C compressor brackets on cylinder head.
44) Install the V-belt. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>
45) Install the intake manifold. <Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>

C: DISASSEMBLY

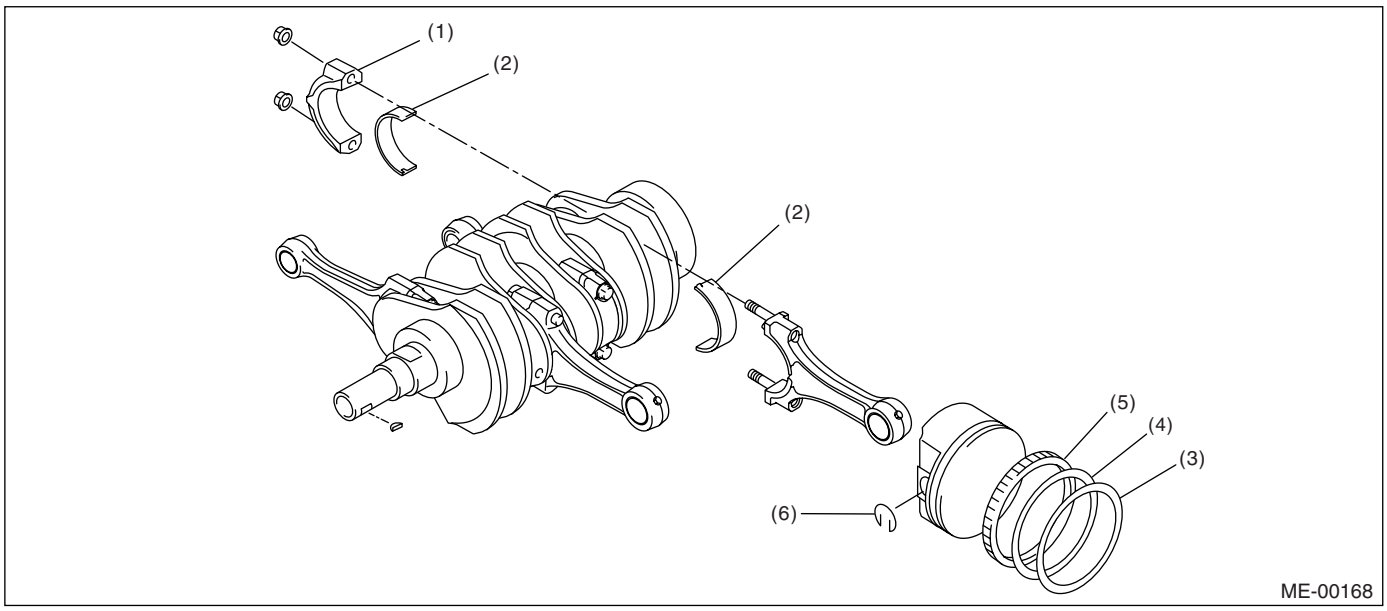

(1) Connecting rod cap
(2) Connecting rod bearing
(3) Top ring
(4) Second ring
(5) Oil ring
(6) Circlip

1) Remove the connecting rod cap.
2) Remove the connecting rod bearing.

NOTE:
Arrange the removed connecting rod, connecting rod cap and bearing in order to prevent confusion.

3) Remove the piston rings using the piston ring expander.
4) Remove the oil ring by hand.

NOTE:
Arrange the removed piston rings in proper order to prevent confusion.

5) Remove the circlip.

D: ASSEMBLY

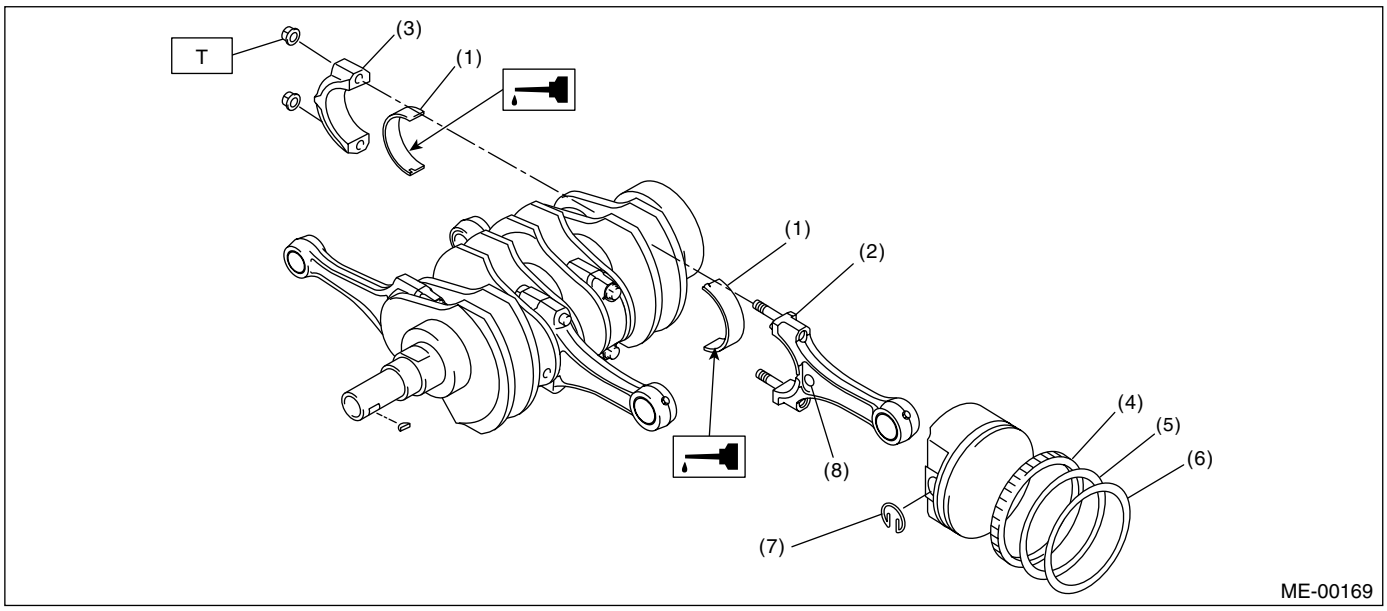

(1) Connecting rod bearing
(2) Connecting rod
(3) Connecting rod cap
(4) Oil ring
(5) Second ring
(6) Top ring
(7) Circlip
(8) Side mark

Tightening torque: N·m (kgf-m, ft-lb)
T: 45 (4.6, 33)

1) Apply oil to the surfaces of the connecting rod bearings. Install the connecting rod bearings on connecting rods and connecting rod caps.
2) Install the connecting rod on crankshaft.

NOTE:
Position each connecting rod with the side marked facing forward.

3) Install the connecting rod cap with connecting rod nut.
Ensure the arrow on connecting rod cap faces the front during installation.

NOTE:
• Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching number.
• When tightening the connecting rod nuts, apply oil on the threads.

4) Install the oil ring spacer, upper rail and lower rail in this order by hand. Then install the second ring and top ring with a piston ring expander.

E: INSPECTION

1. CYLINDER BLOCK

1) Visually check for cracks and damage. Especially, inspect the important parts by means of red lead check.
2) Check the oil passages for clogging.
3) Inspect the crankcase surface that mates with cylinder head for warping by using a straight edge, and correct by grinding if necessary.

Warping limit:
0.05 mm (0.0020 in)

Grinding limit:
0.1 mm (0.004 in)

Standard height of cylinder block:
201.0 mm (7.91 in)

2. CYLINDER AND PISTON

1) The cylinder bore size is stamped on cylinder block's front upper surface.

NOTE:
Measurement should be performed at a temperature of 20°C (68°F).

NOTE:
Standard sized pistons are classified into two grades, “A” and “B”. These grades should be used as a guide line in selecting a standard piston.

Standard diameter:
A: 92.005 — 92.015 mm (3.6222 — 3.6226 in)
B: 91.995 — 92.005 mm (3.6218 — 3.6222 in)

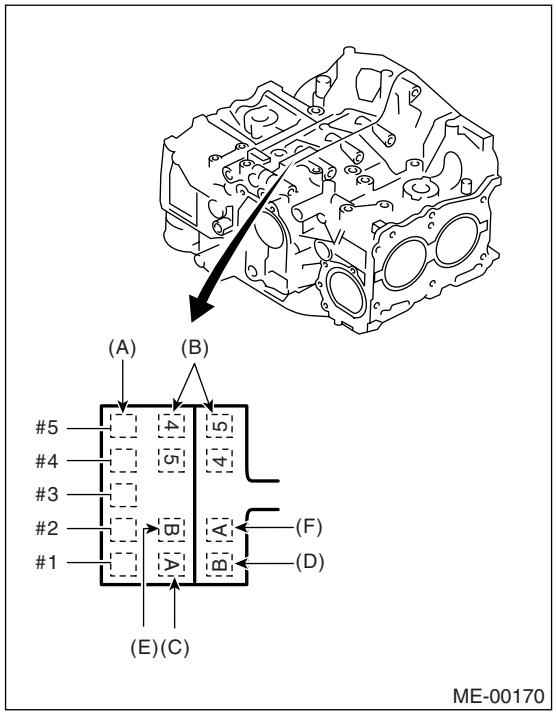

(A) Main journal size mark
(B) Cylinder block (RH)-(LH) combination mark
(C) #1 cylinder bore size mark
(D) #2 cylinder bore size mark
(E) #3 cylinder bore size mark
(F) #4 cylinder bore size mark

2) How to measure the inner diameter of each cylinder:
Measure the inner diameter of each cylinder in both the thrust and piston pin directions at the heights shown in the figure, using a cylinder bore gauge.

NOTE:
Measurement should be performed at a temperature of 20°C (68°F).

Taper:
Standard
0.015 mm (0.0006 in)
Limit
0.050 mm (0.0020 in)

Out-of-roundness:
Standard
0.010 mm (0.0004 in)
Limit
0.050 mm (0.0020 in)

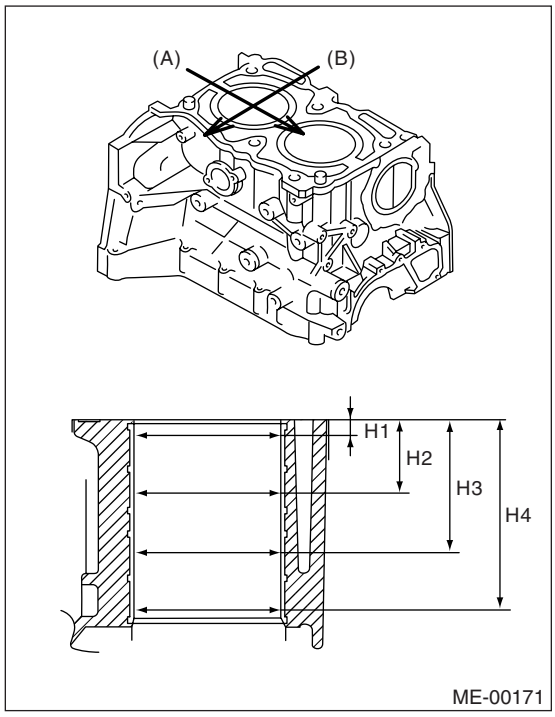

(A) Piston pin direction
(B) Thrust direction
H1: 10 mm (0.39 in)
H2: 45 mm (1.77 in)
H3: 80 mm (3.15 in)
H4: 115 mm (4.53 in)

3) When the piston is to be replaced due to general or cylinder wear, determine a suitable sized piston by measuring the piston clearance.

4) How to measure the outer diameter of each piston:
Measure the outer diameter of each piston at the height shown in the figure. (Thrust direction)

NOTE:
Measurement should be performed at a temperature of 20°C (68°F).

Piston grade point H:
40.0 mm (1.57 in)

Piston outer diameter:
Standard
A: 91.985 — 91.995 mm
(3.6214 — 3.6218 in)
B: 91.975 — 91.985 mm
(3.6211 — 3.6214 in)
0.25 mm (0.0098 in) oversize
92.225 — 92.235 mm
(3.6309 — 3.6313 in)
0.50 mm (0.0197 in) oversize
92.475 — 92.485 mm
(3.6407 — 3.6411 in)

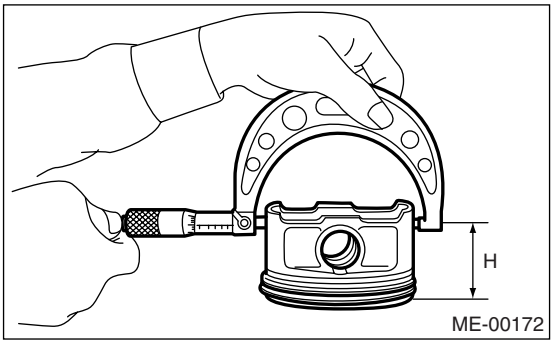

5) Calculate the clearance between cylinder and piston.

NOTE:
Measurement should be performed at a temperature of 20°C (68°F).

Cylinder to piston clearance at 20°C (68°F):
Standard
0.010 — 0.030 mm (0.0004 — 0.0012 in)
Limit
0.050 mm (0.0020 in)

6) Boring and honing:
(1) If the value of taper, out-of-roundness, or cylinder-to-piston clearance measured exceeds the specified limit or if there is any damage on the cylinder wall, reboring it to use an oversize piston.

CAUTION:
When any of the cylinders needs reboring, all other cylinders must be bored at the same time, and use oversize pistons. Do not perform boring on one cylinder only, nor use an oversize piston for one cylinder only.

(2) If the cylinder inner diameter exceeds the limit after boring and honing, replace the crankcase.

NOTE:
Immediately after reboring, the cylinder diameter may differ from its real diameter due to temperature rise. Thus, pay attention to this when measuring the cylinder diameter.

Limit of cylinder enlarging (boring):
0.5 mm (0.020 in)

3. PISTON AND PISTON PIN

1) Check the pistons and piston pins for damage, cracks, and wear and the piston ring grooves for wear and damage. Replace if defective.
2) Measure the piston-to-cylinder clearance at each cylinder. <Ref. to ME(H4DOTC)-103, CYLINDER AND PISTON, INSPECTION, Cylinder Block.> If any of the clearances is not within specification, replace the piston or bore the cylinder to use an oversize piston.
3) Make sure that the piston pin can be inserted into the piston pin hole with a thumb at 20°C (68°F). Replace if defective.

Standard clearance between piston pin and hole in piston:
Standard
0.004 — 0.008 mm (0.0002 — 0.0003 in)
Limit
0.020 mm (0.0008 in)

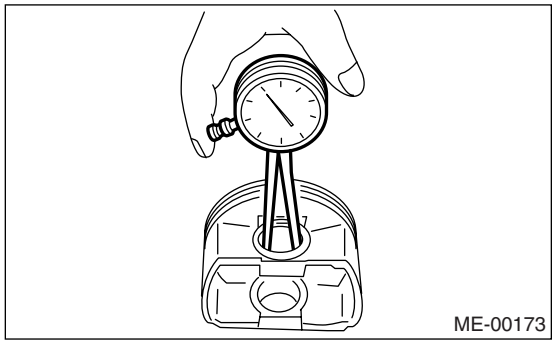

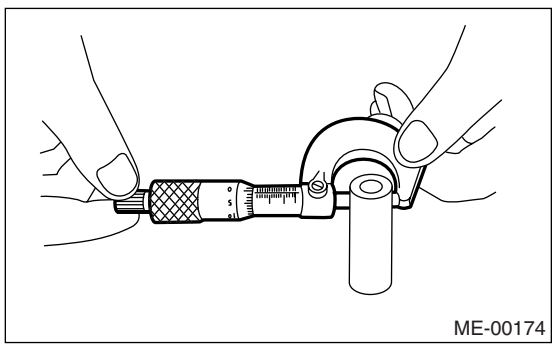

4) Check the circlip installation groove on piston for burr (A). If necessary, remove the burr from groove so that the piston pin can lightly move.

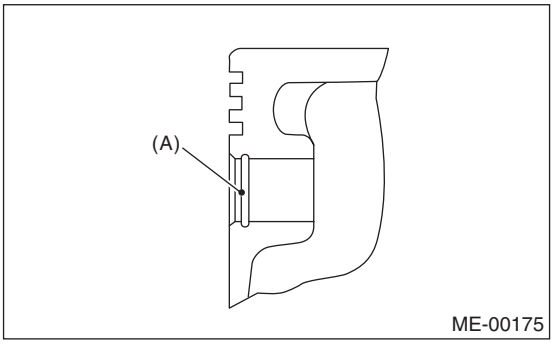

5) Check the piston pin circlip for distortion, cracks and wear.

4. PISTON RING

1) If the piston ring is broken, damaged, or worn, or if its tension is insufficient, or when the piston is replaced, replace the piston ring with a new one of the same size as the piston.

NOTE:
• Marks are shown on the end of top and second rings. When installing the rings to piston, face this mark upward.
• Oil ring consists of upper rail, expander and lower rail. When installing on piston, be careful of each rail's direction.

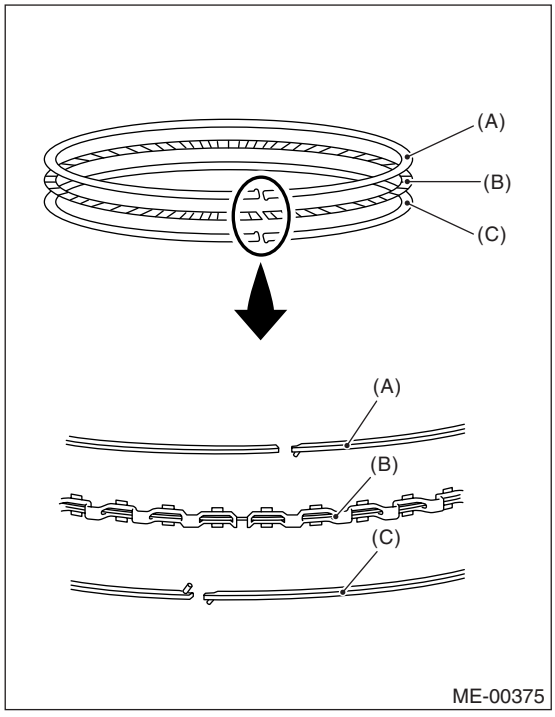

(A) Upper rail
(B) Expander
(C) Lower rail

2) Squarely place the piston ring and oil ring in cylinder, and then measure the piston ring gap with a thickness gauge.

Unit: mm (in)

		Standard	Limit
Piston ring gap	Top ring	0.20 — 0.25 (0.0079 — 0.0098)	1.0 (0.039)
	Second ring	0.35 — 0.50 (0.0138 — 0.0197)	1.0 (0.039)
	Oil ring rail	0.20 — 0.50 (0.0079 — 0.0197)	1.5 (0.059)

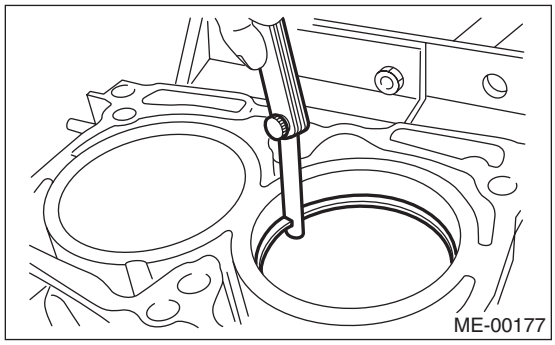

3) Measure the clearance between piston ring and piston ring groove with a thickness gauge.

NOTE:
Before measuring the clearance, clean the piston ring groove and piston ring.

Unit: mm (in)

		Standard	Limit
Clearance between piston ring and piston ring groove	Top ring	0.040 — 0.080 (0.0016 — 0.0031)	0.15 (0.0059)
	Second ring	0.030 — 0.070 (0.0012 — 0.0028)	0.15 (0.0059)

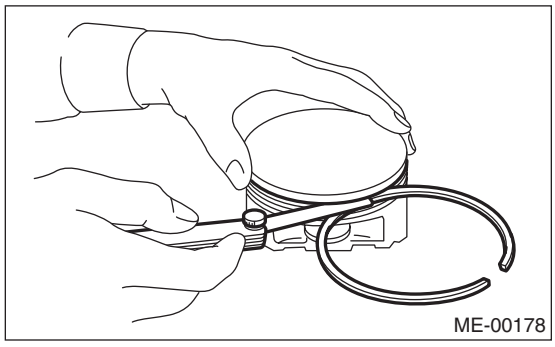

5. CONNECTING ROD

1) Replace the connecting rod, if the large or small end thrust surface is damaged.
2) Check for bend or twist using a connecting rod aligner. Replace the connecting rod if the bend or twist exceeds the limit.

Limit of bend or twist per 100 mm (3.94 in) in length:
0.10 mm (0.0039 in)

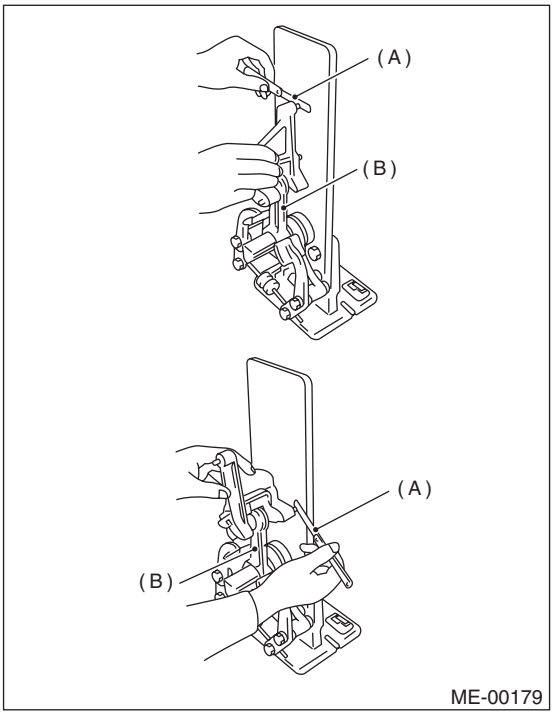

(A) Thickness gauge
(B) Connecting rod

3) Install the connecting rod fitted with bearing to crankshaft, and then measure the side clearance (thrust clearance). Replace the connecting rod if the side clearance exceeds the specified limit.

Connecting rod side clearance:
Standard
0.070 — 0.330 mm (0.0028 — 0.0130 in)
Limit
0.40 mm (0.016 in)

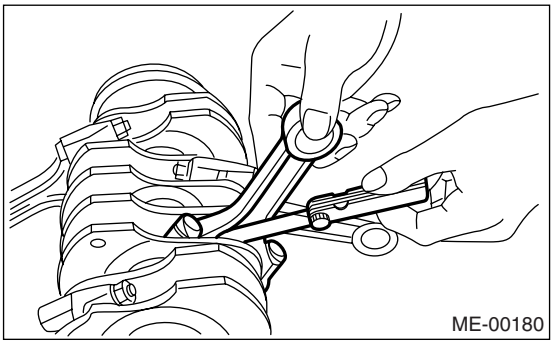

4) Inspect the connecting rod bearing for scar, peeling, seizure, melting, wear, etc.
5) Measure the oil clearance on individual connecting rod bearings by means of plastigauge. If any oil clearance is not within specification, replace the defective bearing with a new one of standard size or undersize as necessary. (See the table below.)

Connecting rod oil clearance:
Standard
0.020 — 0.046 mm (0.0008 — 0.0018 in)
Limit
0.050 mm (0.0020 in)

Unit: mm (in)

Bearing	Bearing size (Thickness at center)	Outer diameter of crank pin
Standard	1.486 — 1.498 (0.0585 — 0.0590)	51.984 — 52.000 (2.0466 — 2.0472)
0.03 (0.0012) undersize	1.504 — 1.512 (0.0592 — 0.0595)	51.954 — 51.970 (2.0454 — 2.0461)
0.05 (0.0020) undersize	1.514 — 1.522 (0.0596 — 0.0599)	51.934 — 51.950 (2.0447 — 2.0453)
0.25 (0.0098) undersize	1.614 — 1.622 (0.0635 — 0.0639)	51.734 — 51.750 (2.0368 — 2.0374)

6) Inspect the bushing at connecting rod small end, and replace if worn or damaged. Also measure the piston pin clearance at connecting rod small end.

Clearance between piston pin and bushing:
Standard
0 — 0.022 mm (0 — 0.0009 in)
Limit
0.030 mm (0.0012 in)

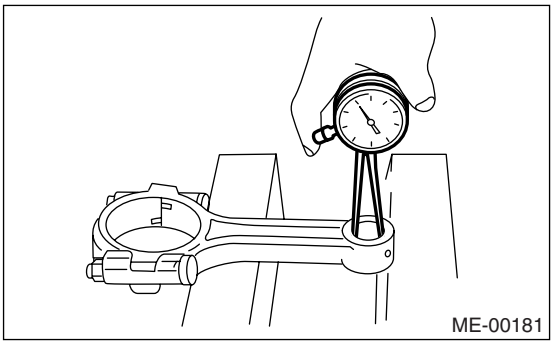
ME-00181

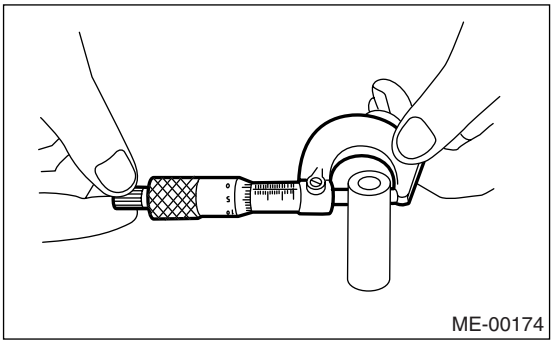
ME-00174

7) Replacement procedure is as follows:
(1) Remove the bushing from connecting rod with ST and press.
(2) Press the bushing with ST after applying oil on the periphery of bushing.

ST 499037100 CONNECTING ROD BUSHING REMOVER AND INSTALLER

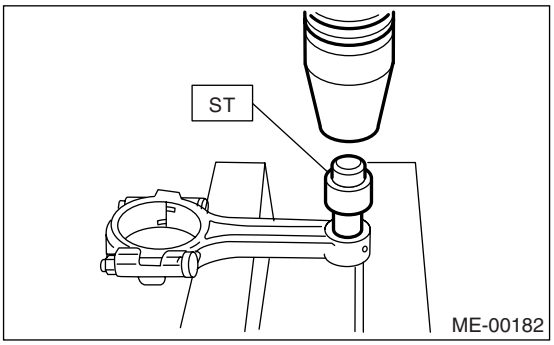

ME-00182

(3) Make two 3 mm (0.12 in) holes in bushing. Ream the inside of bushing.
(4) After the completion of reaming, clean the bushing to remove chips.

6. CRANKSHAFT AND CRANKSHAFT BEARING

1) Clean the crankshaft completely and check for cracks by means of red lead check etc., and replace if defective.
2) Measure the crankshaft bend, and correct or replace if it exceeds the limit.

NOTE:
If a suitable V-block is not available, install the #1 and #5 crankshaft bearing on cylinder block, position the crankshaft on these bearings and measure the crankshaft bend using a dial gauge.

Crankshaft bend limit:
0.035 mm (0.0014 in)

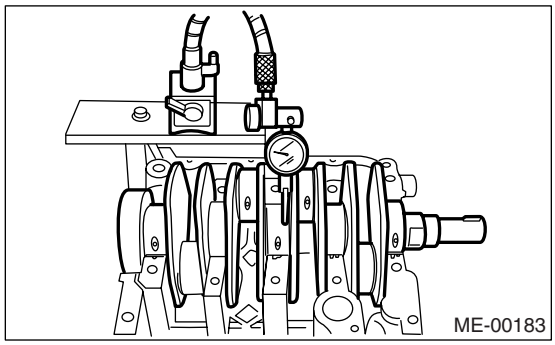
ME-00183

3) Inspect the crank journal and crank pin for wear. If they are not within the specifications, replace the bearing with a suitable (undersize) one, and then replace or recondition the crankshaft as necessary. When grinding the crank journal or crank pin, finish them to specified dimensions according to the undersize bearing to be used.

Crank pin and crank journal:
Out-of-roundness
0.005 mm (0.0002 in) or less
Taper limit
0.07 mm (0.0028 in)
Grinding limit
0.250 mm (0.0098 in)

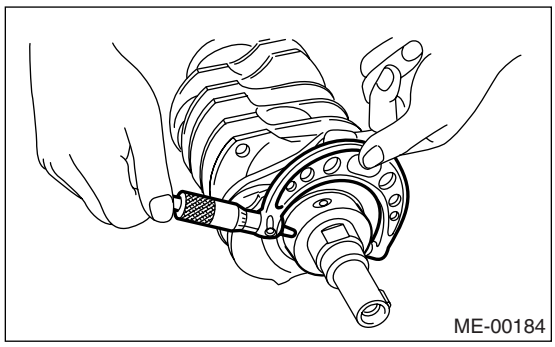
ME-00184

Unit: mm (in)

		Crank journal diameter		Crank pin diameter
		#1, #3, #5	#2, #4	
Standard	Journal O.D.	59.992 — 60.008 (2.3619 — 2.3625)	59.992 — 60.008 (2.3619 — 2.3625)	51.984 — 52.000 (2.0466 — 2.0472)
	Bearing size (Thickness at center)	1.998 — 2.011 (0.0787 — 0.0792)	2.000 — 2.013 (0.0787 — 0.0793)	1.486 — 1.498 (0.0585 — 0.0590)
0.03 (0.0012) undersize	Journal O.D.	59.962 — 59.978 (2.3607 — 2.3613)	59.962 — 59.978 (2.3607 — 2.3613)	51.954 — 51.970 (2.0454 — 2.0461)
	Bearing size (Thickness at center)	2.017 — 2.020 (0.0794 — 0.0795)	2.019 — 2.022 (0.0795 — 0.0796)	1.504 — 1.512 (0.0592 — 0.0595)
0.05 (0.0020) undersize	Journal O.D.	59.942 — 59.958 (2.3599 — 2.3605)	59.942 — 59.958 (2.3599 — 2.3605)	51.934 — 51.950 (2.0447 — 2.0453)
	Bearing size (Thickness at center)	2.027 — 2.030 (0.0798 — 0.0799)	2.029 — 2.032 (0.0799 — 0.0800)	1.514 — 1.522 (0.0596 — 0.0599)
0.25 (0.0098) undersize	Journal O.D.	59.742 — 59.758 (2.3520 — 2.3527)	59.742 — 59.758 (2.3520 — 2.3527)	51.734 — 51.750 (2.0368 — 2.0374)
	Bearing size (Thickness at center)	2.127 — 2.130 (0.0837 — 0.0839)	2.129 — 2.132 (0.0838 — 0.0839)	1.614 — 1.622 (0.0635 — 0.0639)

O.D.: Outer Diameter

4) Measure the thrust clearance of crankshaft at center bearing. If the clearance exceeds the limit, replace the bearing.

Crankshaft thrust clearance:
Standard
0.030 — 0.115 mm (0.0012 — 0.0045 in)
Limit
0.25 mm (0.0098 in)

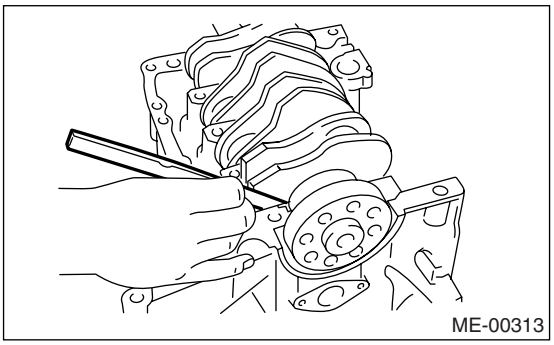
ME-00313

5) Inspect individual crankshaft bearings for signs of flaking, seizure, melting, and wear.

6) Measure the oil clearance on each crankshaft bearing by means of plastigauge. If the measurement is not within the specification, replace the defective bearing with an undersize one, and replace or recondition the crankshaft as necessary.

Unit: mm (in)

Crankshaft oil clearance		
#1	STD	0.003 — 0.030 (0.0001 — 0.0012)
	Limit	0.040 (0.0016)
#2	STD	0.012 — 0.033 (0.0005 — 0.0013)
	Limit	0.045 (0.0018)
#3	STD	0.003 — 0.030 (0.0001 — 0.0012)
	Limit	0.040 (0.0016)
#4	STD	0.012 — 0.033 (0.0005 — 0.0013)
	Limit	0.045 (0.0018)
#5	STD	0.010 — 0.031 (0.0004 — 0.0012)
	Limit	0.040 (0.0016)

21.Intake and Exhaust Valve

A: REMOVAL AND INSTALLATION

For operations related to intake and exhaust valve, refer to “19. Cylinder Head.” <Ref. to ME(H4DOTC)-81, REMOVAL, Cylinder Head Assembly.> and <Ref. to ME(H4DOTC)-81, INSTALLATION, Cylinder Head Assembly.>

22.Piston

A: REMOVAL AND INSTALLATION

For operations related to piston, refer to “20. Cylinder Block.” <Ref. to ME(H4DOTC)-89, REMOVAL, Cylinder Block.> and <Ref. to ME(H4DOTC)-93, INSTALLATION, Cylinder Block.>

23.Connecting Rod

A: REMOVAL AND INSTALLATION

For operations related to connecting rod, refer to “20. Cylinder Block.” <Ref. to ME(H4DOTC)-89, REMOVAL, Cylinder Block.> and <Ref. to ME(H4DOTC)-93, INSTALLATION, Cylinder Block.>

24.Crankshaft

A: REMOVAL AND INSTALLATION

For operations related to crankshaft, refer to “20. Cylinder Block.” <Ref. to ME(H4DOTC)-89, REMOVAL, Cylinder Block.> and <Ref. to ME(H4DOTC)-93, INSTALLATION, Cylinder Block.>

25.Engine Trouble in General

A: INSPECTION

NOTE:
"RANK" shown in the chart refers to the possibility of reason for the trouble in order ("Very often" to "Rarely")
A — Very often
B — Sometimes
C — Rarely

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
1. Engine will not start.			
1) Starter does not turn.	Starter	Defective battery-to-starter harness	B
		Defective starter switch	C
		Defective inhibitor switch or neutral switch	C
		Defective starter	B
	Battery	Poor terminal connection	A
		Run-down battery	A
		Defective charging system	B
	Friction	Seizure of crankshaft and connecting rod bearing	C
		Seized camshaft	C
		Seized or stuck piston and cylinder	C
2) Initial combustion does not occur.	Starter	Defective starter	C
	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Fuel line	Defective fuel pump and relay	A
		Lack of or insufficient fuel	B
	Belt	Defective	B
		Defective timing	B
	Compression	Incorrect valve clearance	C
		Loosened spark plugs or defective gasket	C
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	C
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	B
		Improper engine oil (low viscosity)	B
3) Initial combustion occurs.	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Defective intake manifold gasket	B
		Defective throttle body gasket	B
	Fuel line	Defective fuel pump and relay	C
		Clogged fuel line	C
		Lack of or insufficient fuel	B
	Belt	Defective	B
		Defective timing	B
	Compression	Incorrect valve clearance	C
		Loosened spark plugs or defective gasket	C
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	C
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	B
		Improper engine oil (low viscosity)	B

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
4) Engine stalls after initial combustion.	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened or cracked intake duct	B
		Loosened or cracked PCV hose	C
		Loosened or cracked vacuum hose	C
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Dirty air cleaner element	C
	Fuel line	Clogged fuel line	C
		Lack of or insufficient fuel	B
	Belt	Defective	B
		Defective timing	B
	Compression	Incorrect valve clearance	C
		Loosened spark plugs or defective gasket	C
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	C
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	B
		Improper engine oil (low viscosity)	B
2. Rough idle and engine stall	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened or cracked intake duct	A
		Loosened or cracked PCV hose	A
		Loosened or cracked vacuum hose	A
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Defective PCV valve	C
		Loosened oil filler cap	B
		Dirty air cleaner element	C
	Fuel line	Defective fuel pump and relay	C
		Clogged fuel line	C
		Lack of or insufficient fuel	B
	Belt	Defective timing	C
	Compression	Incorrect valve clearance	B
		Loosened spark plugs or defective gasket	B
		Loosened cylinder head bolts or defective gasket	B
		Improper valve seating	B
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	B
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	B
	Lubrication system	Incorrect oil pressure	B
		Defective rocker cover gasket	C
	Cooling system	Overheating	C
	Others	Malfunction of evaporative emission control system	A
		Stuck or damaged throttle valve	B
		Accelerator cable out of adjustment	C

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3. Low output, hesitation and poor acceleration	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened or cracked intake duct	A
		Loosened or cracked PCV hose	A
		Loosened or cracked vacuum hose	B
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Defective PCV valve	B
		Loosened oil filler cap	B
		Dirty air cleaner element	A
	Fuel line	Defective fuel pump and relay	B
		Clogged fuel line	B
		Lack of or insufficient fuel	C
	Belt	Defective timing	B
	Compression	Incorrect valve clearance	B
		Loosened spark plugs or defective gasket	B
		Loosened cylinder head bolts or defective gasket	B
		Improper valve seating	B
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	B
	Lubrication system	Incorrect oil pressure	B
	Cooling system	Overheating	C
		Over cooling	C
	Others	Malfunction of evaporative emission control system	A
4. Surging	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened or cracked intake duct	A
		Loosened or cracked PCV hose	A
		Loosened or cracked vacuum hose	A
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Defective PCV valve	B
		Loosened oil filler cap	B
		Dirty air cleaner element	B
	Fuel line	Defective fuel pump and relay	B
		Clogged fuel line	B
		Lack of or insufficient fuel	C
	Belt	Defective timing	B
	Compression	Incorrect valve clearance	B
		Loosened spark plugs or defective gasket	C
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	C
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	B
	Cooling system	Overheating	B
	Others	Malfunction of evaporative emission control system	C

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
5. Engine does not return to idle.	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened or cracked vacuum hose	A
	Others	Stuck or damaged throttle valve	A
		Accelerator cable out of adjustment	B
6. Dieseling (Run-on)	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Cooling system	Overheating	B
	Others	Malfunction of evaporative emission control system	B
7. Afterburning in exhaust system	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened or cracked intake duct	C
		Loosened or cracked PCV hose	C
		Loosened or cracked vacuum hose	B
		Defective PCV valve	B
		Loosened oil filler cap	C
	Belt	Defective timing	B
	Compression	Incorrect valve clearance	B
		Loosened spark plugs or defective gasket	C
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	B
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
	Lubrication system	Incorrect oil pressure	C
	Cooling system	Over cooling	C
	Others	Malfunction of evaporative emission control system	C
8. Knocking	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Loosened oil filler cap	B
	Belt	Defective timing	B
	Compression	Incorrect valve clearance	C
		Incorrect valve timing	B
	Cooling system	Overheating	A
9. Excessive engine oil consumption	Intake system	Loosened or cracked PCV hose	A
		Defective PCV valve	B
		Loosened oil filler cap	C
	Compression	Defective valve stem	A
		Worn or stuck piston rings, cylinder and piston	A
	Lubrication system	Loosened oil pump attaching bolts and defective gasket	B
		Defective oil filter o-ring	B
		Defective crankshaft oil seal	B
		Defective rocker cover gasket	B
		Loosened oil drain plug or defective gasket	B
		Loosened oil pan fitting bolts or defective oil pan	B

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
10. Excessive fuel consumption	Engine control system <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>		A
	Intake system	Dirty air cleaner element	A
	Belt	Defective timing	B
	Compression	Incorrect valve clearance	B
		Loosened spark plugs or defective gasket	C
		Loosened cylinder head bolts or defective gasket	C
		Improper valve seating	B
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	B
		Incorrect valve timing	B
	Lubrication system	Incorrect oil pressure	C
	Cooling system	Over cooling	C
	Others	Accelerator cable out of adjustment	B

26.Engine Noise

A: INSPECTION

Type of sound	Condition	Possible cause
Regular clicking sound	Sound increases as engine speed increases.	• Valve mechanism is defective. • Incorrect valve clearance • Worn valve rocker • Worn camshaft • Broken valve spring
Heavy and dull clank	Oil pressure is low.	• Worn crankshaft main bearing • Worn connecting rod bearing (big end)
	Oil pressure is normal.	• Loose flywheel mounting bolts • Damaged engine mounting
High-pitched clank (Spark knock)	Sound is noticeable when accelerating with an overload.	• Ignition timing advanced • Accumulation of carbon inside combustion chamber • Wrong spark plug • Improper gasoline
Clank when engine speed is medium (1,000 to 2,000 rpm).	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	• Worn crankshaft main bearing • Worn bearing at crankshaft end of connecting rod
Knocking sound when engine is operating under idling speed and engine is warm	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	• Worn cylinder liner and piston ring • Broken or stuck piston ring • Worn piston pin and hole at piston end of connecting rod
	Sound is not reduced if each fuel injector connector is disconnected in turn. (NOTE*)	• Unusually worn valve lifter • Worn cam gear • Worn camshaft journal bore in crankcase
Squeaky sound	—	• Insufficient generator lubrication
Rubbing sound	—	• Defective generator brush and rotor contact
Gear scream when starting engine	—	• Defective ignition starter switch • Worn gear and starter pinion
Sound like polishing glass with a dry cloth	—	• Loose drive belt • Defective water pump shaft
Hissing sound	—	• Loss of compression • Air leakage in air intake system, hoses, connections or manifolds
Timing belt noise	—	• Loose timing belt • Belt contacting case/adjacent part
Valve tappet noise	—	• Incorrect valve clearance

NOTE*:
When disconnecting the fuel injector connector, Malfunction Indicator Light illuminates and DTC is stored in ECM memory.
Therefore, carry out the CLEAR MEMORY MODE <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4DOTC)-40, OPERATION, Inspection Mode.> after connecting the fuel injector connector.

EXHAUST

EX(H4DOTC)

Page

1. General Description 2
2. Front Exhaust Pipe....7
3. Center Exhaust Pipe 9
4. Joint Pipe 13
5. Rear Exhaust Pipe 14
6. Muffler 15

1. General Description

A: COMPONENT

1. FRONT EXHAUST PIPE

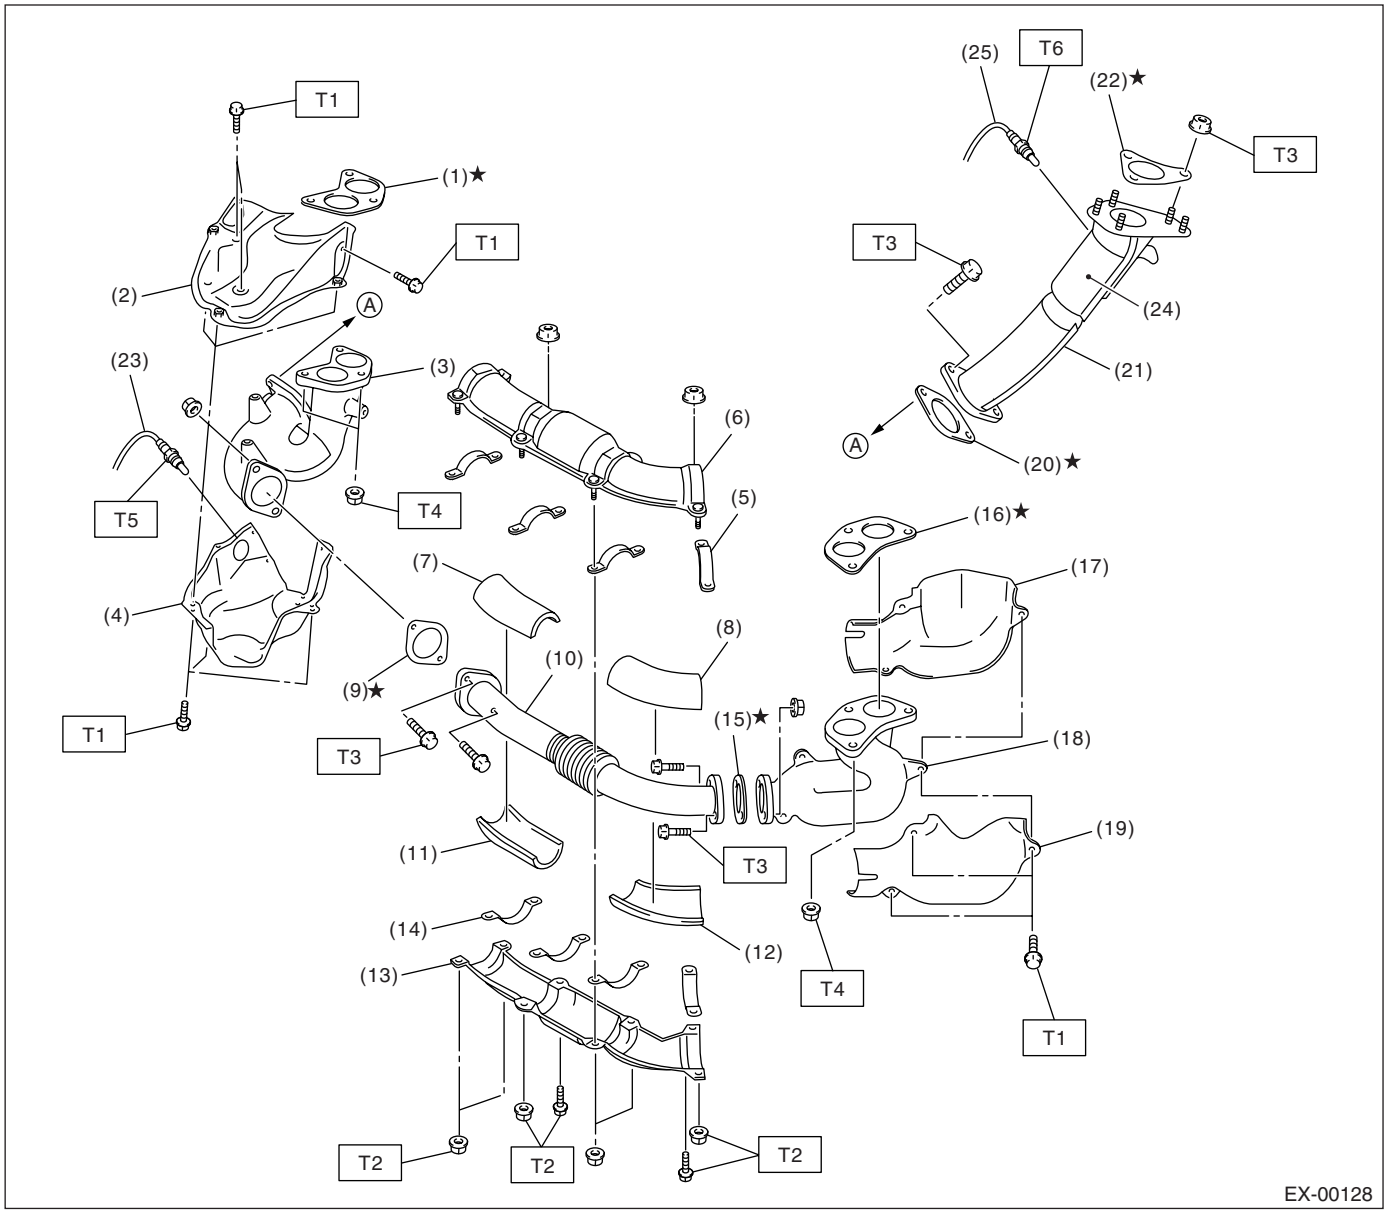

(1) Gasket
(2) Exhaust manifold upper cover (RH)
(3) Exhaust manifold (RH)
(4) Exhaust manifold lower cover (RH)
(5) Front exhaust pipe upper clamp
(6) Front exhaust pipe upper cover
(7) Front exhaust pipe upper insulator (RH)
(8) Front exhaust pipe upper insulator (LH)
(9) Gasket
(10) Front exhaust pipe
(11) Front exhaust pipe lower insulator (RH)
(12) Front exhaust pipe lower insulator (LH)
(13) Front exhaust pipe lower cover
(14) Front exhaust pipe lower clamp
(15) Gasket
(16) Gasket
(17) Exhaust manifold upper cover (LH)
(18) Exhaust manifold (LH)
(19) Exhaust manifold lower cover (LH)
(20) Gasket
(21) Turbocharger joint pipe
(22) Gasket
(23) Front oxygen (A/F) sensor
(24) Precatalytic converter (Except Australia model and STi model)
(25) Exhaust temperature sensor (Except Australia model and STi model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 19 (1.9, 13.7)
T2: 25 (2.5, 18.1)
T3: 35 (3.6, 26.0)
T4: 40 (4, 28.9)
T5: <Ref. to FU(H4DOTC)-44, INSTALLATION, Front Oxygen (A/F) Sensor.>
T6: <Ref. to FU(H4DOTC)-48, INSTALLATION, Exhaust Temperature Sensor.>

2. CENTER AND REAR EXHAUST PIPE, AND MUFFLER

• EXCEPT AUSTRALIA MODEL

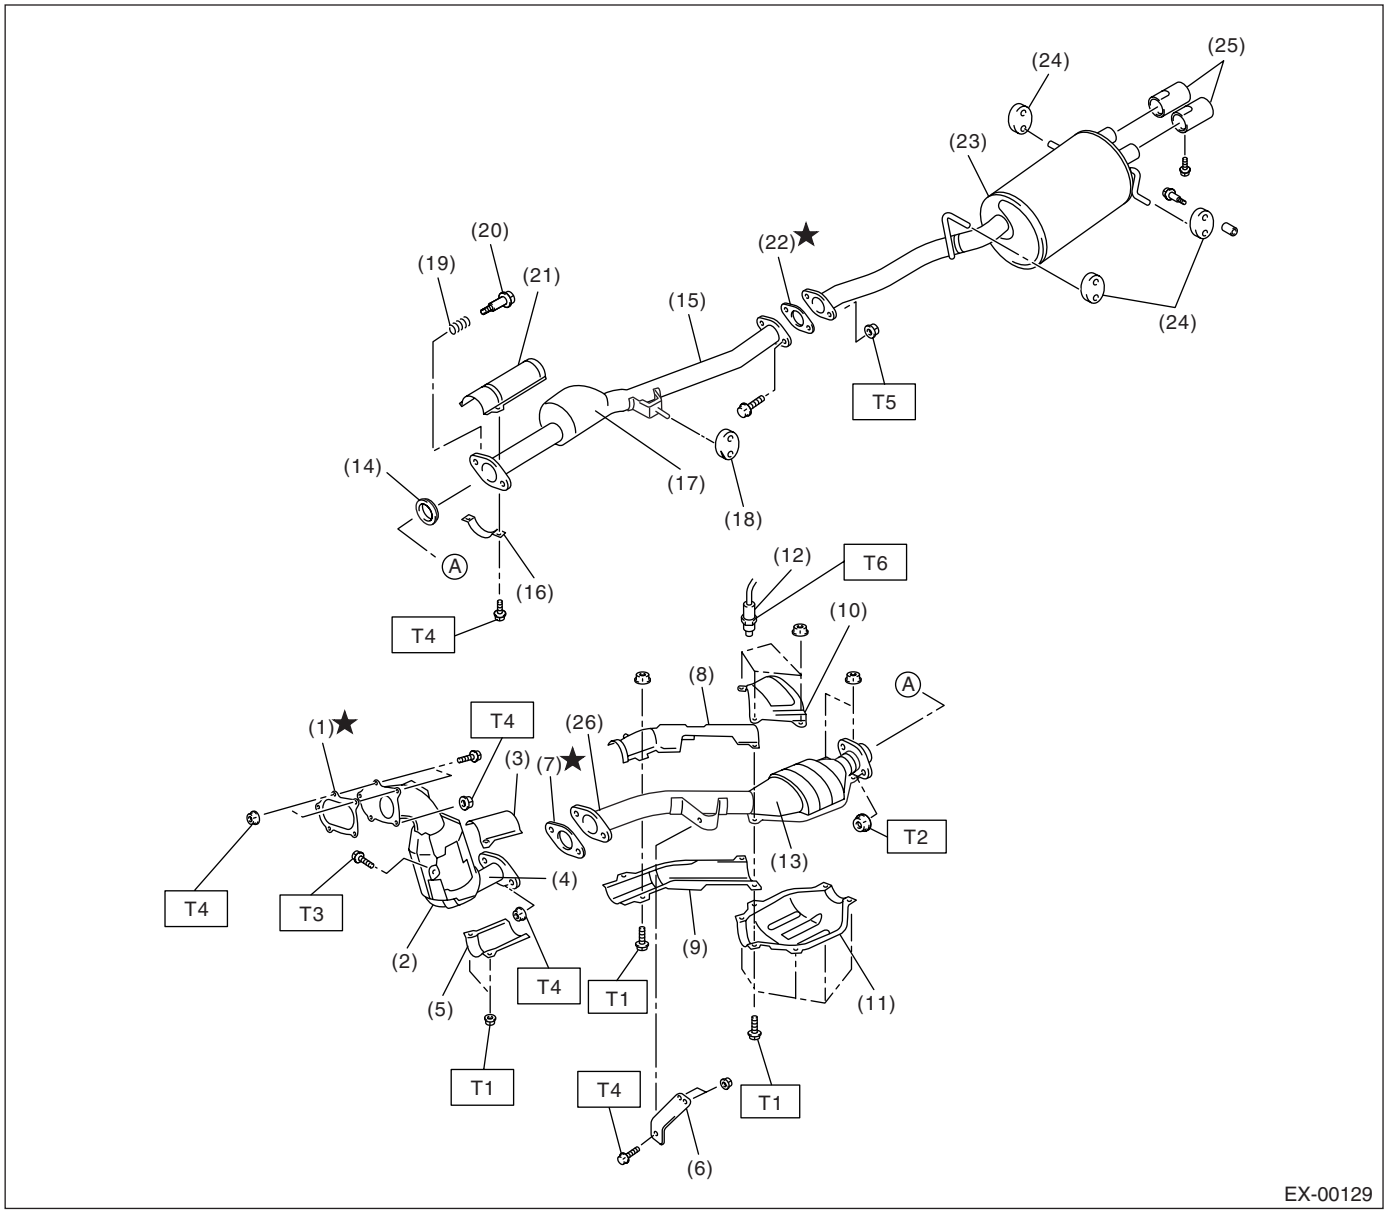

(1) Gasket
(2) Front catalytic converter
(3) Center pipe upper cover (Front)
(4) Center exhaust pipe (Front)
(5) Center pipe lower cover (Front)
(6) Bracket
(7) Gasket
(8) Center pipe upper cover (Rear)
(9) Center pipe lower cover (Rear)
(10) Rear catalytic converter upper cover
(11) Rear catalytic converter lower cover
(12) Rear oxygen sensor
(13) Rear catalytic converter
(14) Gasket
(15) Rear exhaust pipe
(16) Clamp
(17) Chamber
(18) Cushion rubber
(19) Spring
(20) Bolt
(21) Rear exhaust pipe upper cover (Front)
(22) Gasket
(23) Muffler
(24) Cushion rubber
(25) Muffler cutter
(26) Center exhaust pipe (Rear)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 13 (1.3, 9.6)
T2: 18 (1.8, 13.0)
T3: 30 (3.1, 22.4)
T4: 35 (3.6, 26.0)
T5: 48 (4.9, 35.4)
T6: <Ref. to FU(H4DOTC)-46, INSTALLATION, Rear Oxygen Sensor.>

• AUSTRALIA MODEL

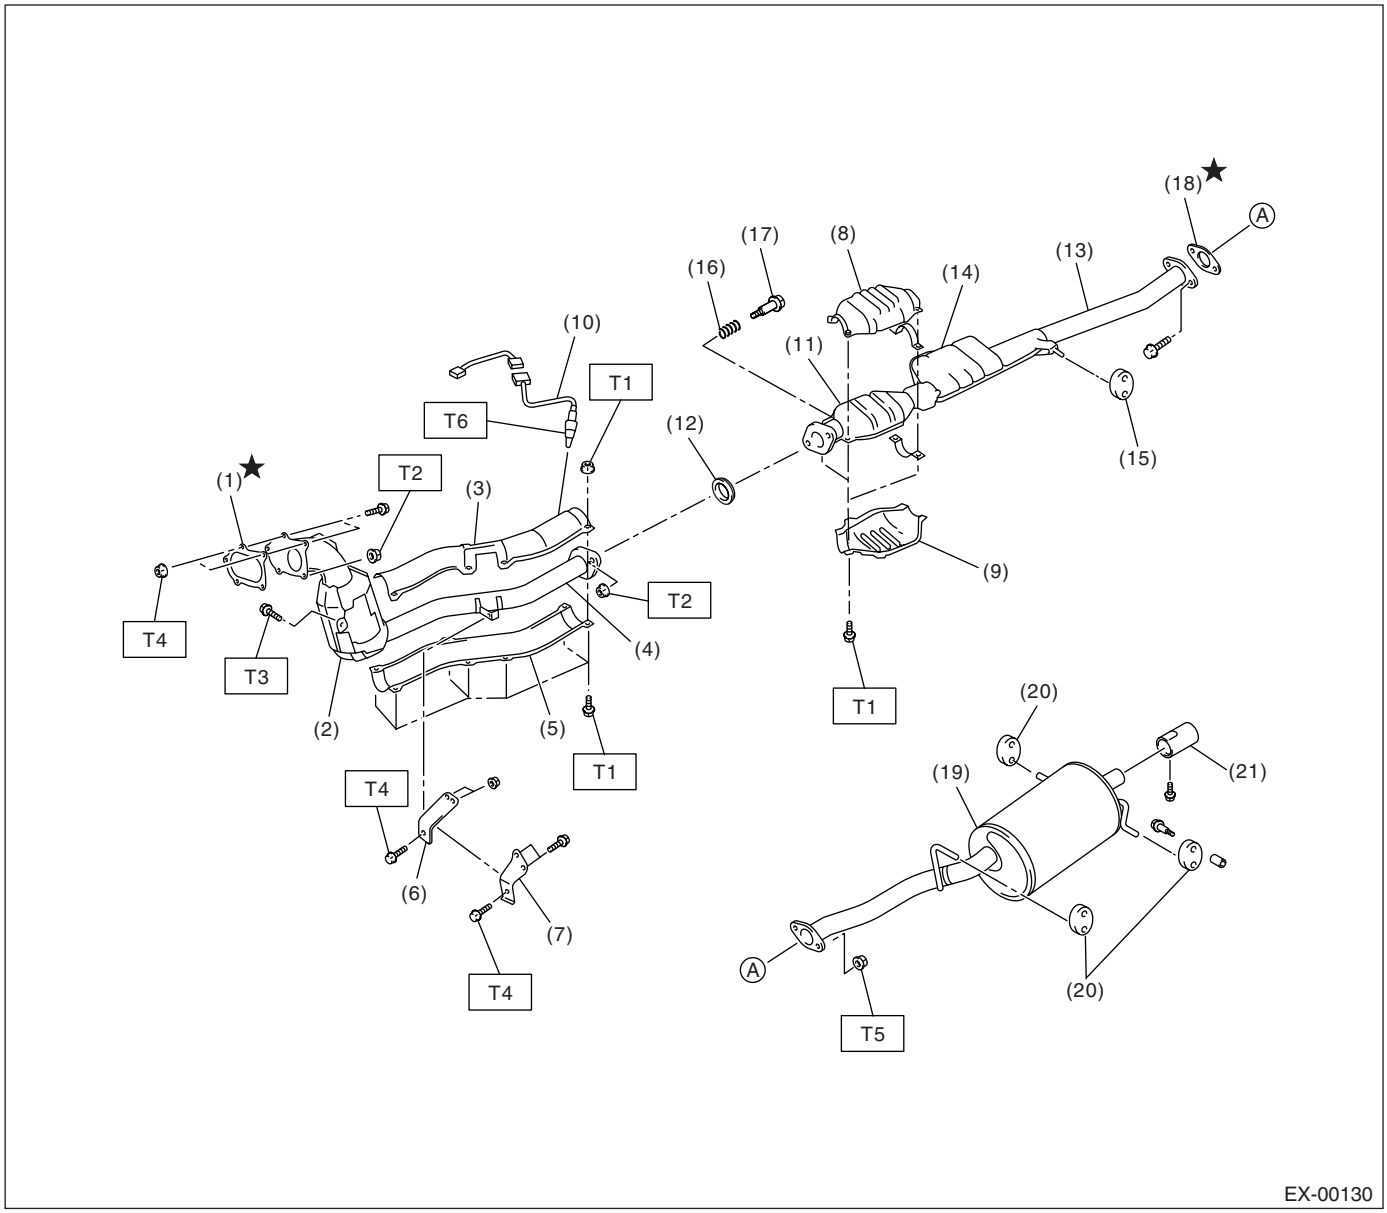

(1) Gasket
(2) Front catalytic converter
(3) Upper center pipe cover
(4) Center exhaust pipe
(5) Center pipe lower cover
(6) Bracket (MT vehicles only)
(7) Bracket (AT vehicles only)
(8) Rear catalytic converter upper cover
(9) Rear catalytic converter lower cover
(10) Rear oxygen sensor
(11) Rear catalytic converter
(12) Gasket
(13) Rear exhaust pipe
(14) Chamber
(15) Cushion rubber
(16) Spring
(17) Bolt
(18) Gasket
(19) Muffler
(20) Cushion rubber
(21) Muffler cutter

Tightening torque: N·m (kgf-m, ft-lb)
T1: 13 (1.3, 9.6)
T2: 18 (1.8, 13.0)
T3: 30 (3.1, 22.4)
T4: 35 (3.6, 26.0)
T5: 48 (4.9, 35.4)
T6: <Ref. to FU(H4DOTC)-46, INSTALLATION, Rear Oxygen Sensor.>

B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Front Exhaust Pipe

A: REMOVAL

1) Disconnect the ground cable from battery.

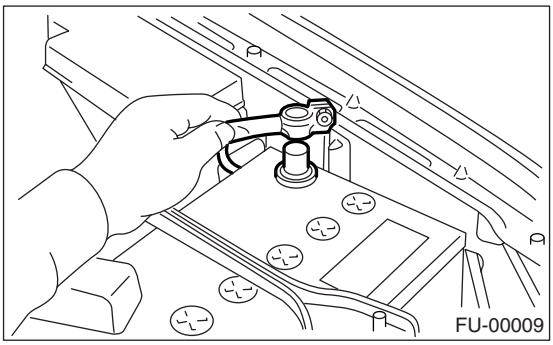

2) Remove the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, REMOVAL, Front Oxygen (A/F) Sensor.>
3) Remove the under cover.
4) Remove the lower exhaust manifold cover (RH).
5) Remove the lower and upper exhaust manifold covers (LH).

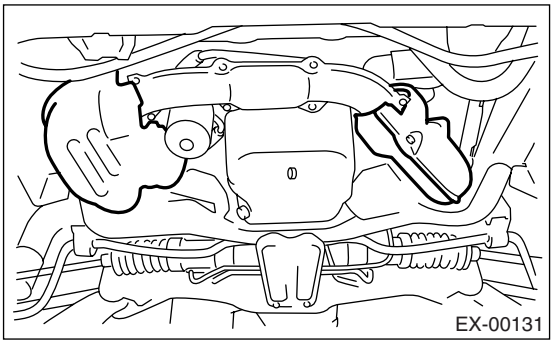

6) Remove the bolts and nuts which hold the front exhaust pipe assembly to turbocharger joint pipe.
7) While holding the front exhaust pipe assembly with one hand, remove the nuts which hold the front exhaust pipe assembly to cylinder head exhaust port.

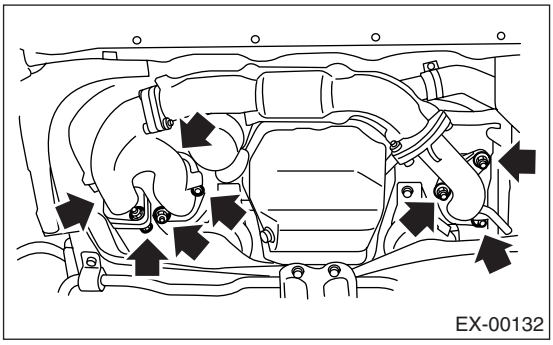

8) Remove the front exhaust pipe assembly.
9) Remove the covers from exhaust manifold and front exhaust pipe.
10) Separate the front exhaust pipe from exhaust manifolds.

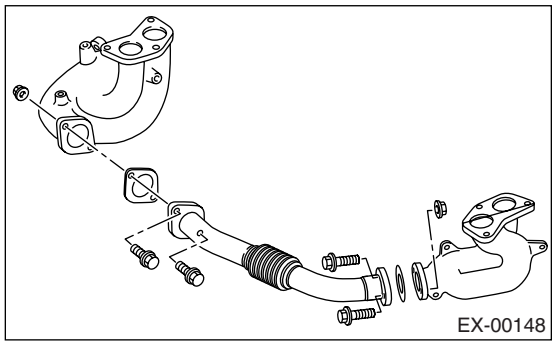

B: INSTALLATION

NOTE:
Replace the gaskets with new ones.

1) Assemble the front exhaust pipe and exhaust manifolds.

Tightening torque:
35 N·m (3.6 kgf-m, 26.0 ft-lb)

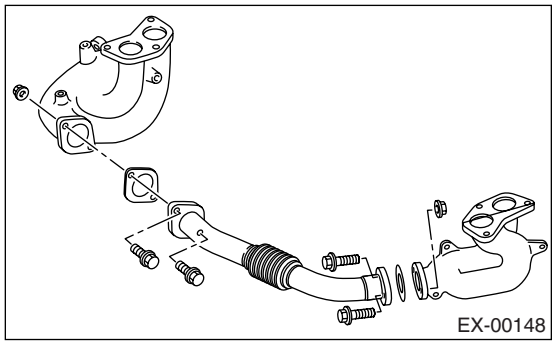

2) Install the front exhaust pipe covers.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

3) Install the upper exhaust manifold cover (RH).

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

4) Install the front exhaust pipe assembly.

Tightening torque:
35 N·m (3.6 kgf-m, 26.0 ft-lb)

5) Connect the exhaust manifold (RH) to turbocharger joint pipe.

Tightening torque:
35 N·m (3.6 kgf-m, 26.0 ft-lb)

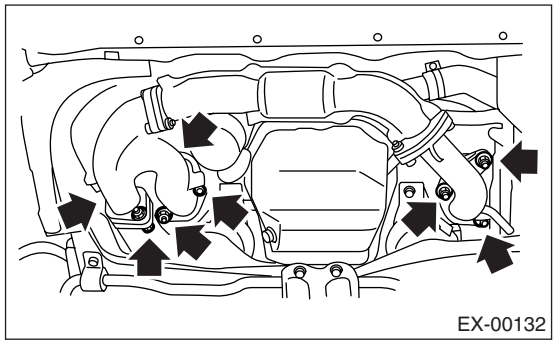

6) Install the upper and lower exhaust manifold covers (LH).

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

7) Install the lower exhaust manifold cover (RH).

Tightening torque:
19 N·m (1.9 kgf-m, 13.7 ft-lb)

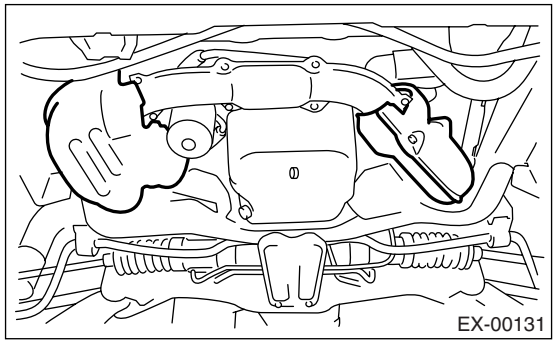

8) Install the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, INSTALLATION, Front Oxygen (A/F) Sensor.>
9) Install the under cover.
10) Connect the battery ground cable to battery.

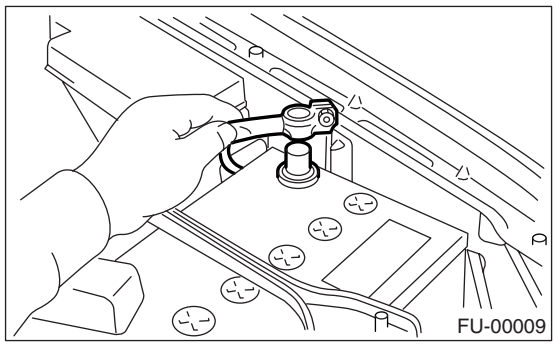

3. Center Exhaust Pipe

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
4) Remove the intercooler bracket.

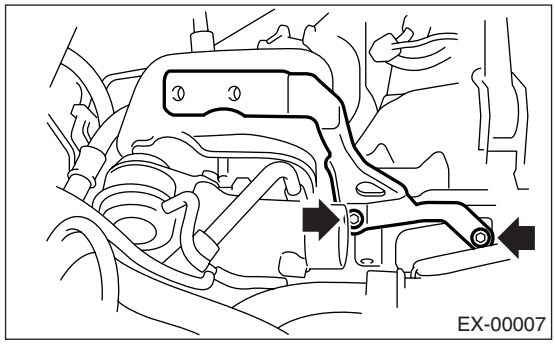

5) Lift-up the vehicle.
6) Remove the under cover.
7) Remove the universal joint bolts and then remove the universal joint (RHD model).

CAUTION:
Scribe alignment marks on the universal joint so that it can be reassembled at the original serration.

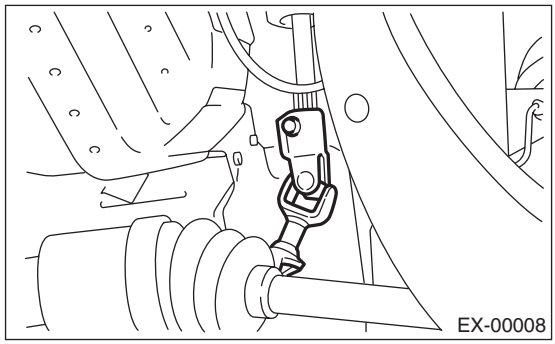

8) Remove the bolts which install the lower side of turbocharger upper cover.

CAUTION:
Be careful, the turbocharger and exhaust pipe are hot.

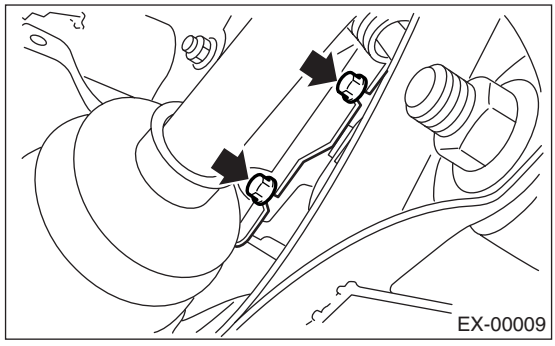

9) Lower the vehicle.
10) Remove the turbocharger upper cover.

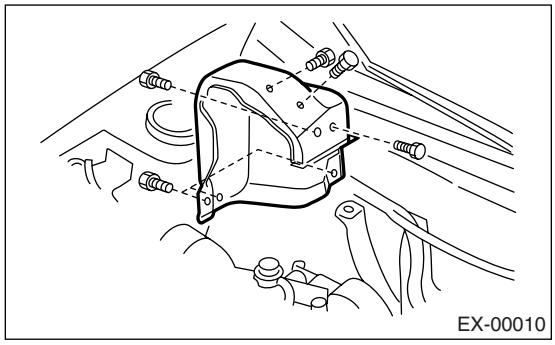

11) Remove the bolts which install the lower upper side of turbocharger upper cover, and remove it.

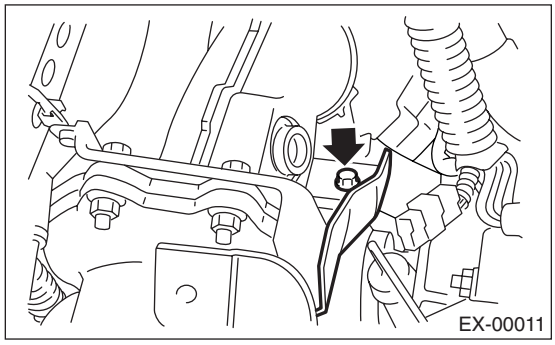

12) Separate the center exhaust pipe from turbocharger.

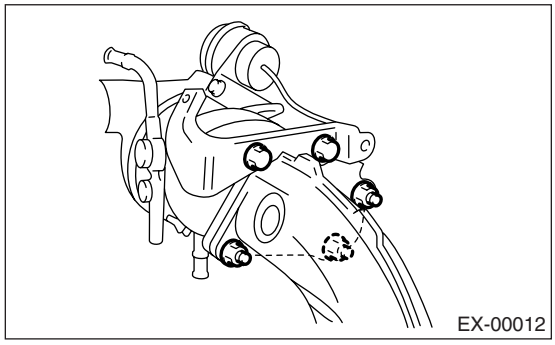

13) Lift-up the vehicle.
14) Disconnect the connector from rear oxygen sensor.

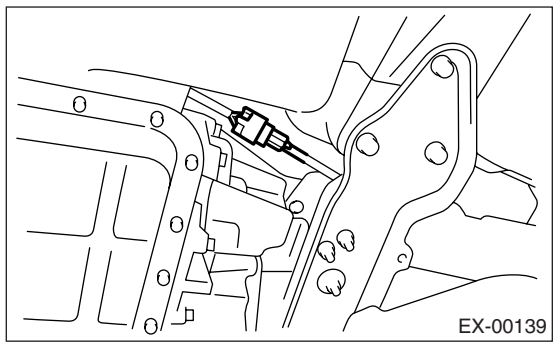

15) Vertically draw out the clip from crossmember.

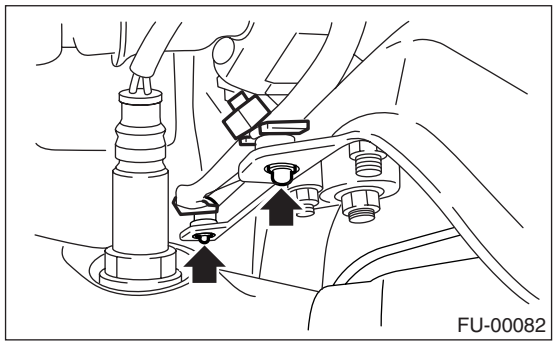

16) Separate the center exhaust pipe from rear exhaust pipe.

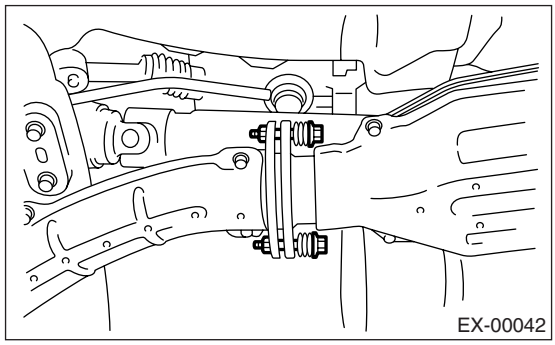

17) Remove the bolt which holds the center exhaust pipe bracket to transmission.

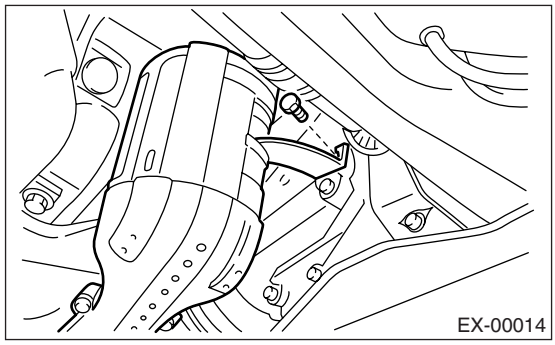

18) Remove the intercooler bracket.
19) Remove the bolt which holds the center exhaust pipe to hanger bracket.

CAUTION:
Be careful not to pull down the center exhaust pipe.

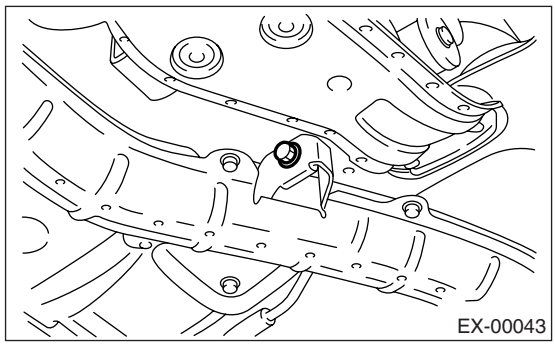

20) Remove the center exhaust pipe.

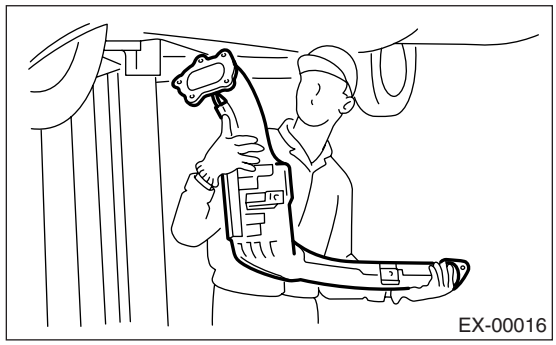

B: INSTALLATION

NOTE:
Replace the gaskets with new ones.

1) Install the center exhaust pipe and temporarily tighten the bolt which holds the center exhaust pipe to hanger bracket.
2) Temporarily tighten the bolt which holds the center pipe to transmission.
3) Connect the center exhaust pipe to turbocharger.

Tightening torque:
35 N·m (3.6 kgf-m, 26.0 ft-lb)

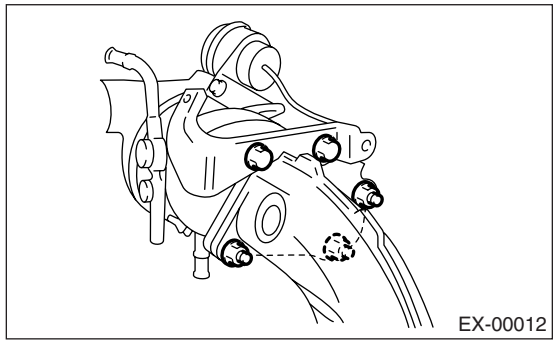

4) Install the center exhaust pipe to rear exhaust pipe.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

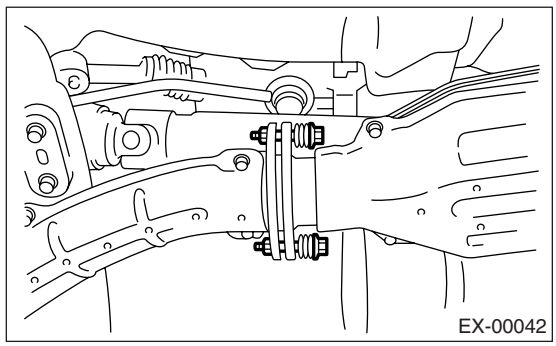

5) Connect the connector to rear oxygen sensor.

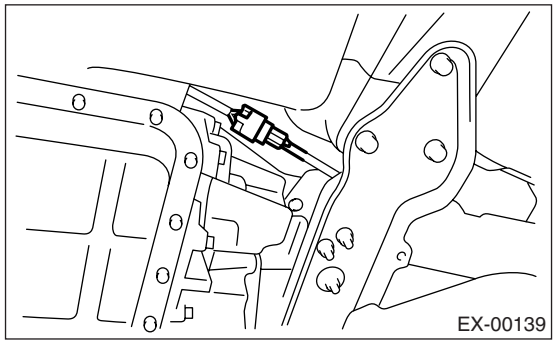

6) Secure the clip on crossmember.

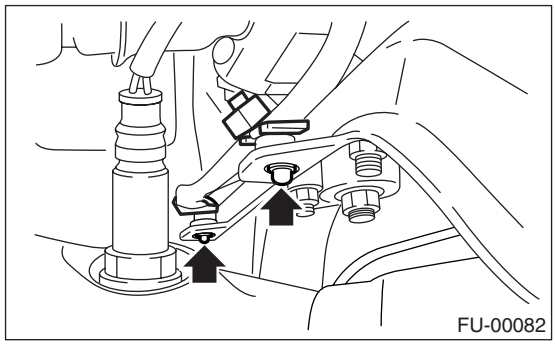

7) Tighten the bolt which holds the center exhaust pipe bracket to transmission.

Tightening torque:
30 N·m (3.1 kgf-m, 22.4 ft-lb)

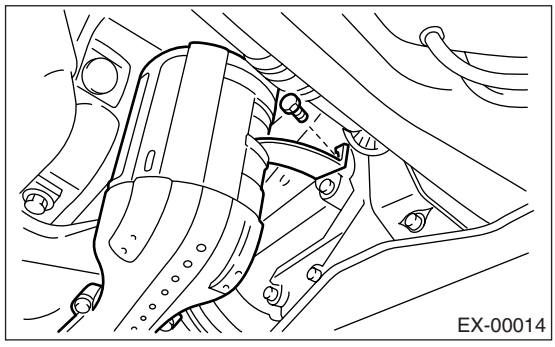

8) Tighten the bolt which holds the center exhaust pipe to hanger bracket.

Tightening torque:
35 N·m (3.6 kgf-m, 26.0 ft-lb)

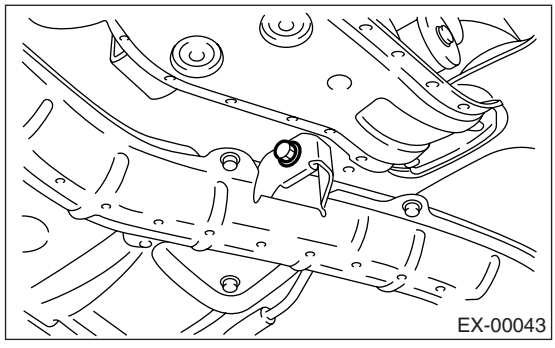

9) Lower the vehicle.
10) Place the turbocharger lower cover, and tighten the bolts which install the upper side of lower cover.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

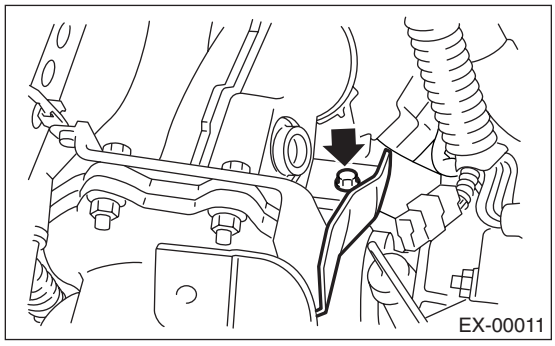

11) Place the turbocharger upper cover, and tighten the bolts which install the upper side of upper cover.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

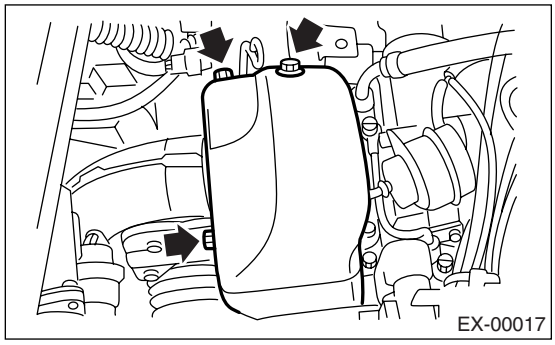

12) Lift-up the vehicle.
13) Tighten the bolts which install the under side of turbocharger upper cover.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

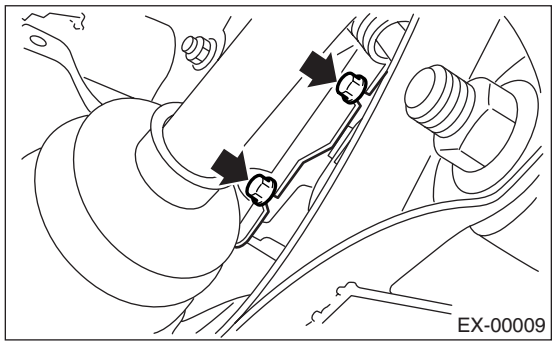

14) Install the universal joint (RHD model).
(1) Align the bolt hole on long yoke side of universal joint with the cutout at serrated section of shaft end, and insert the universal joint.
(2) Align the bolt hole on short yoke side of universal joint with the cutout at serrated section of gearbox assembly. Lower the universal joint completely.
(3) Temporarily tighten the bolt on short yoke side. Raise the universal joint to make sure the bolt is properly passing through the cutout at serrated section.
(4) Tighten the bolt on long yoke side, then that on the short yoke side.

Tightening torque:
24 N·m (2.4 kgf-m, 17.4 ft-lb)

CAUTION:
• Make sure that the universal joint bolts are tightened through notches in shaft serration.
• Excessively large tightening torque of universal joint bolts may lead to heavy steering wheel operation.

Standard clearance between gearbox to DOJ:
More than 15 mm (0.59 in)

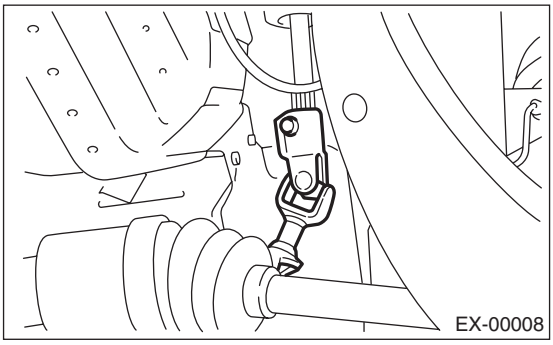

15) Install the under cover.
16) Lower the vehicle.
17) Install the intercooler bracket.

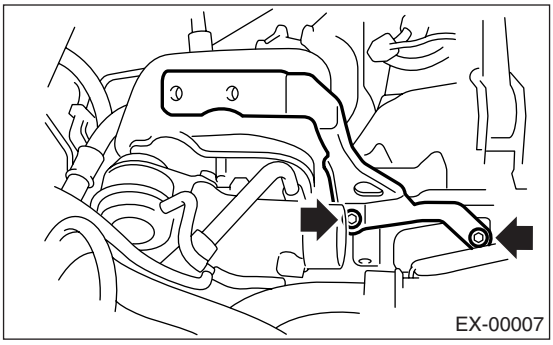

18) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
19) Align the center of roll connector. <Ref. to AB-11, ROLL CONNECTOR, INSPECTION, Inspection Locations After a Collision.>

4. Joint Pipe

A: REMOVAL

1) Disconnect the ground cable from battery.

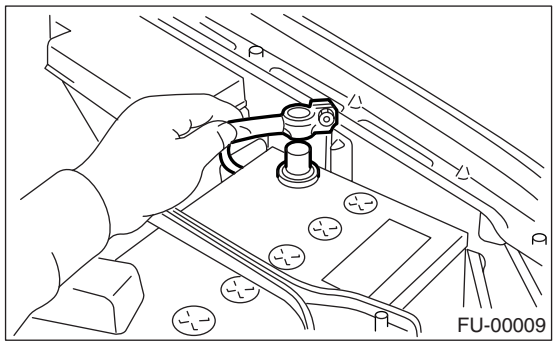

2) Remove the solenoid valve cover.

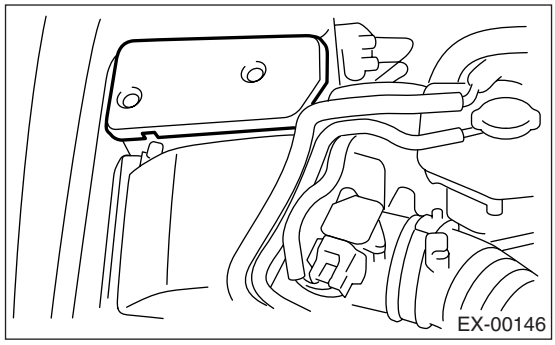

3) Disconnect the exhaust temperature sensor connector.

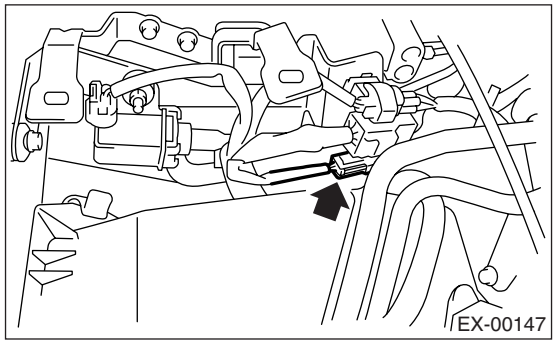

4) Remove the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, REMOVAL, Front Oxygen (A/F) Sensor.>
5) Remove the under cover.
6) Remove the lower exhaust manifold cover (RH).

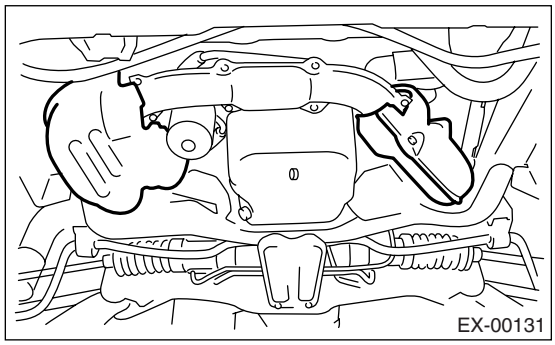

7) Remove the nuts which hold the front exhaust manifold to joint pipe.

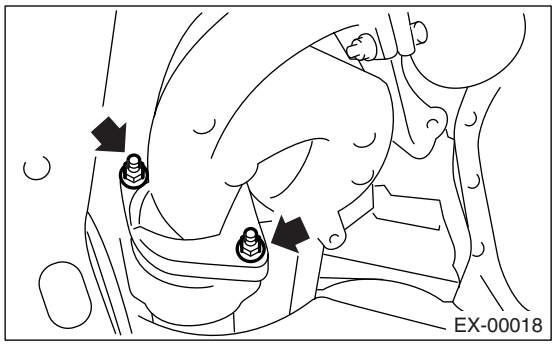

8) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
9) Remove the turbocharger. <Ref. to IN(H4DOTC)-13, REMOVAL, Turbocharger.>
10) Take off the joint pipe in the upward direction.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
T: 35 N·m (3.6 kgf-m, 26.0 ft-lb)

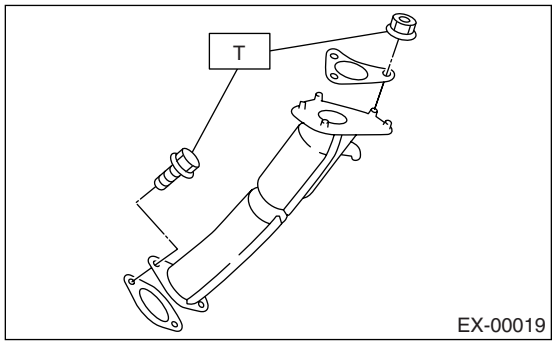

5. Rear Exhaust Pipe

A: REMOVAL

1) Disconnect the ground cable from battery.

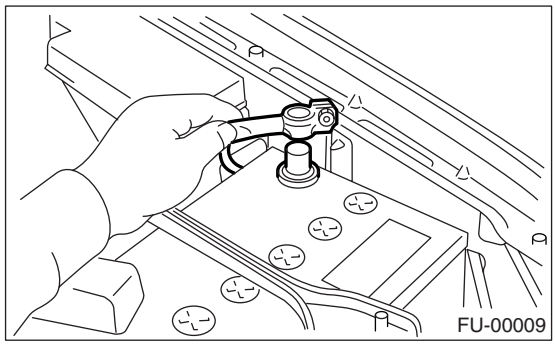

2) Lift-up the vehicle.
3) Separate the rear exhaust pipe from center exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

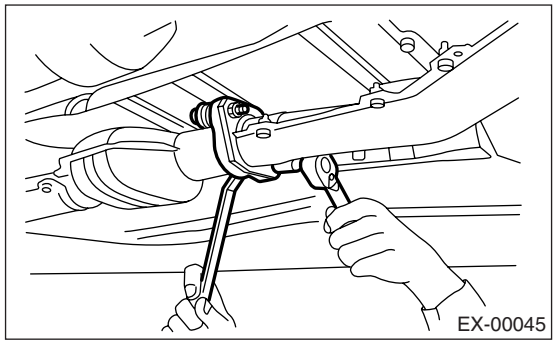

4) Separate the rear exhaust pipe from muffler.

CAUTION:
Be careful not to pull down the rear exhaust pipe.

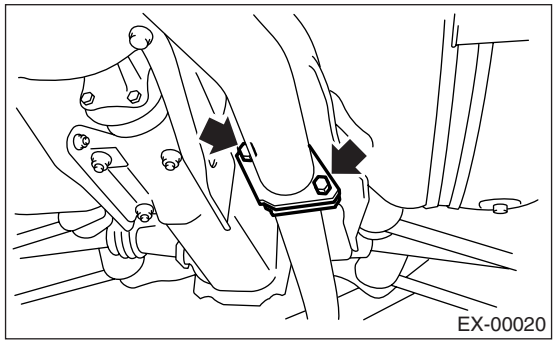

5) Remove the rear exhaust pipe.

B: INSTALLATION

NOTE:
Replace the gaskets with new ones.
1) Install the rear exhaust pipe to muffler.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

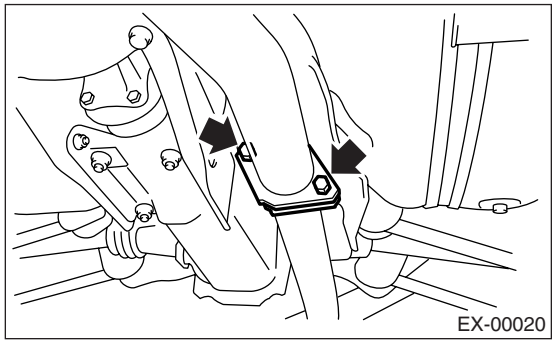

2) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

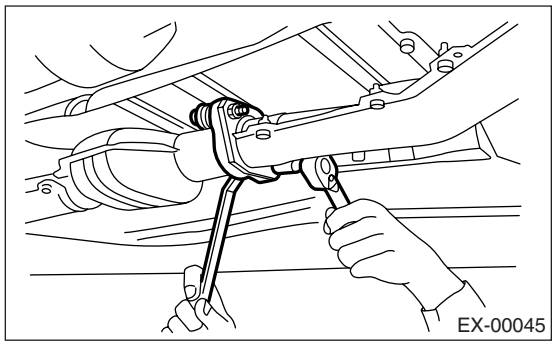

3) Lower the vehicle.
4) Connect the battery ground cable to battery.

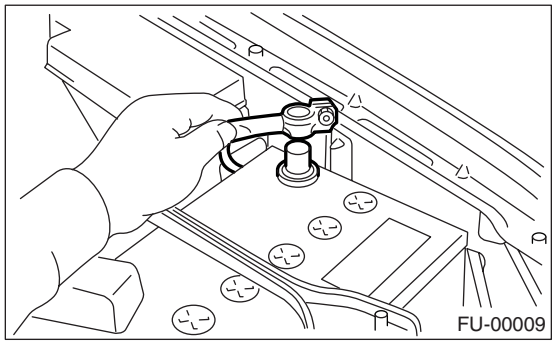

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.
3) Make sure the cushion rubber is not worn or cracked.

6. Muffler

A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

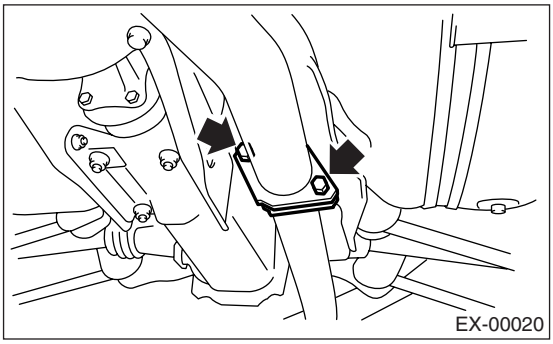

2) Remove the rubber cushions, and detach the muffler.

CAUTION:
Be careful not to drop the muffler during removal.

NOTE:
To facilitate removal, apply a coat of SUBARU CRC to the mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

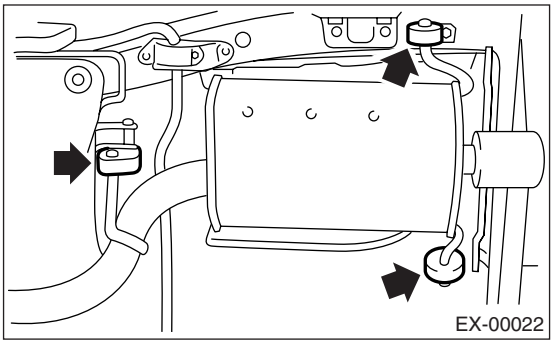

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
Replace the gasket with a new one.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

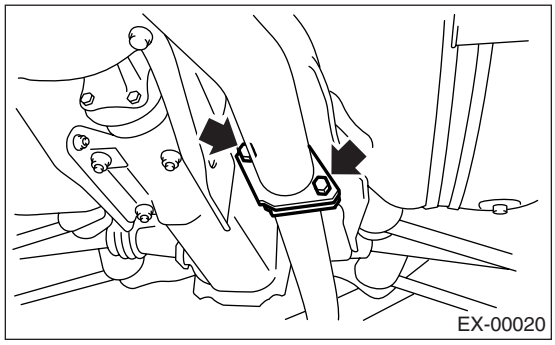

C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.
2) Make sure there are no holes or rusting.
3) Make sure the cushion rubber is not worn or cracked.

COOLING

CO(H4DOTC)

		Page
1.	General Description	2
2.	Radiator Main Fan System	7
3.	Radiator Sub Fan System	12
4.	Engine Coolant	17
5.	Water Pump	19
6.	Thermostat	21
7.	Radiator	23
8.	Radiator Cap	27
9.	Radiator Main Fan and Fan Motor	28
10.	Radiator Sub Fan and Fan Motor	30
11.	Reservoir Tank	32
12.	Coolant Filler Tank	33
13.	Engine Cooling System Trouble in General	34

1. General Description

A: SPECIFICATIONS

Model			DOHC TURBO
Cooling system			Electric fan + Forced engine coolant circulation system
Total engine coolant capacity ℓ (US qt, Imp qt)			AT: Approx. 7.6 (8.03, 6.69) MT: Approx. 7.7 (8.14, 6.78)
Water pump	Type		Centrifugal impeller type
	Discharge performance I	Discharge	20 ℓ (5.3 US gal, 4.4 Imp gal)/min.
		Pump speed—Discharge pressure	760 rpm — 2.9 kPa (0.3 mAq)
		Engine coolant temperature	85°C (185°F)
	Discharge performance II	Discharge	100 ℓ (26.4 US gal, 22.0 Imp gal)/min.
		Pump speed—Discharge pressure	3,000 rpm — 49.0 kPa (5.0 mAq)
		Engine coolant temperature	85°C (185°F)
	Discharge performance III	Discharge	200 ℓ (52.8 US gal, 44.0 Imp gal)/min.
		Pump speed—Discharge pressure	6,000 rpm — 225.4 kPa (23.0 mAq)
		Engine coolant temperature	85°C (185°F)
	Impeller diameter		76 mm (2.99 in)
	Number of impeller vanes		8
	Pump pulley diameter		60 mm (2.36 in)
	Clearance between impeller and case	Standard	0.5 — 0.7 mm (0.020 — 0.028 in)
		Limit	1.0 mm (0.039 in)
	"Thrust" runout of impeller end		0.5 mm (0.020 in)
Thermostat	Type		Wax pellet type
	Starts to open		76 — 80°C (169 — 176°F)
	Fully opened		91°C (196°F)
	Valve lift		9.0 mm (0.354 in) or more/91°C (196°F)
	Valve bore		35 mm (1.38 in)
Radiator fan	Motor	Main fan	120 W
		Sub fan	120 W
	Fan diameter × Blade		320 mm (11.81 in) × 5 (main fan) 320 mm (11.81 in) × 7 (sub fan)
Radiator	Type		Down flow, pressure type
	Core dimensions	Width × Height × Thickness	AT: 691.5 × 340 × 16 mm (27.22 × 13.39 × 0.63 in) MT: 691.5 × 340 × 27 mm (27.22 × 13.39 × 1.06 in)
	Pressure range in which cap valve is open	Coolant filler tank side	Above: 108±15 kPa (1.1±0.15 kg/cm^2, 16±2 psi) Below: –1.0 to –4.9 kPa (–0.01 to –0.05 kg/cm^2, –0.1 to –0.7 psi)
		Radiator side	Above only: 137±14.7 kPa (1.40±0.15 kg/cm^2, 20±2.1 psi)
	Fins		Corrugated fin type
Reservoir tank	Capacity		0.5 ℓ (0.5 US qt, 0.4 Imp qt)

B: COMPONENT

1. WATER PUMP

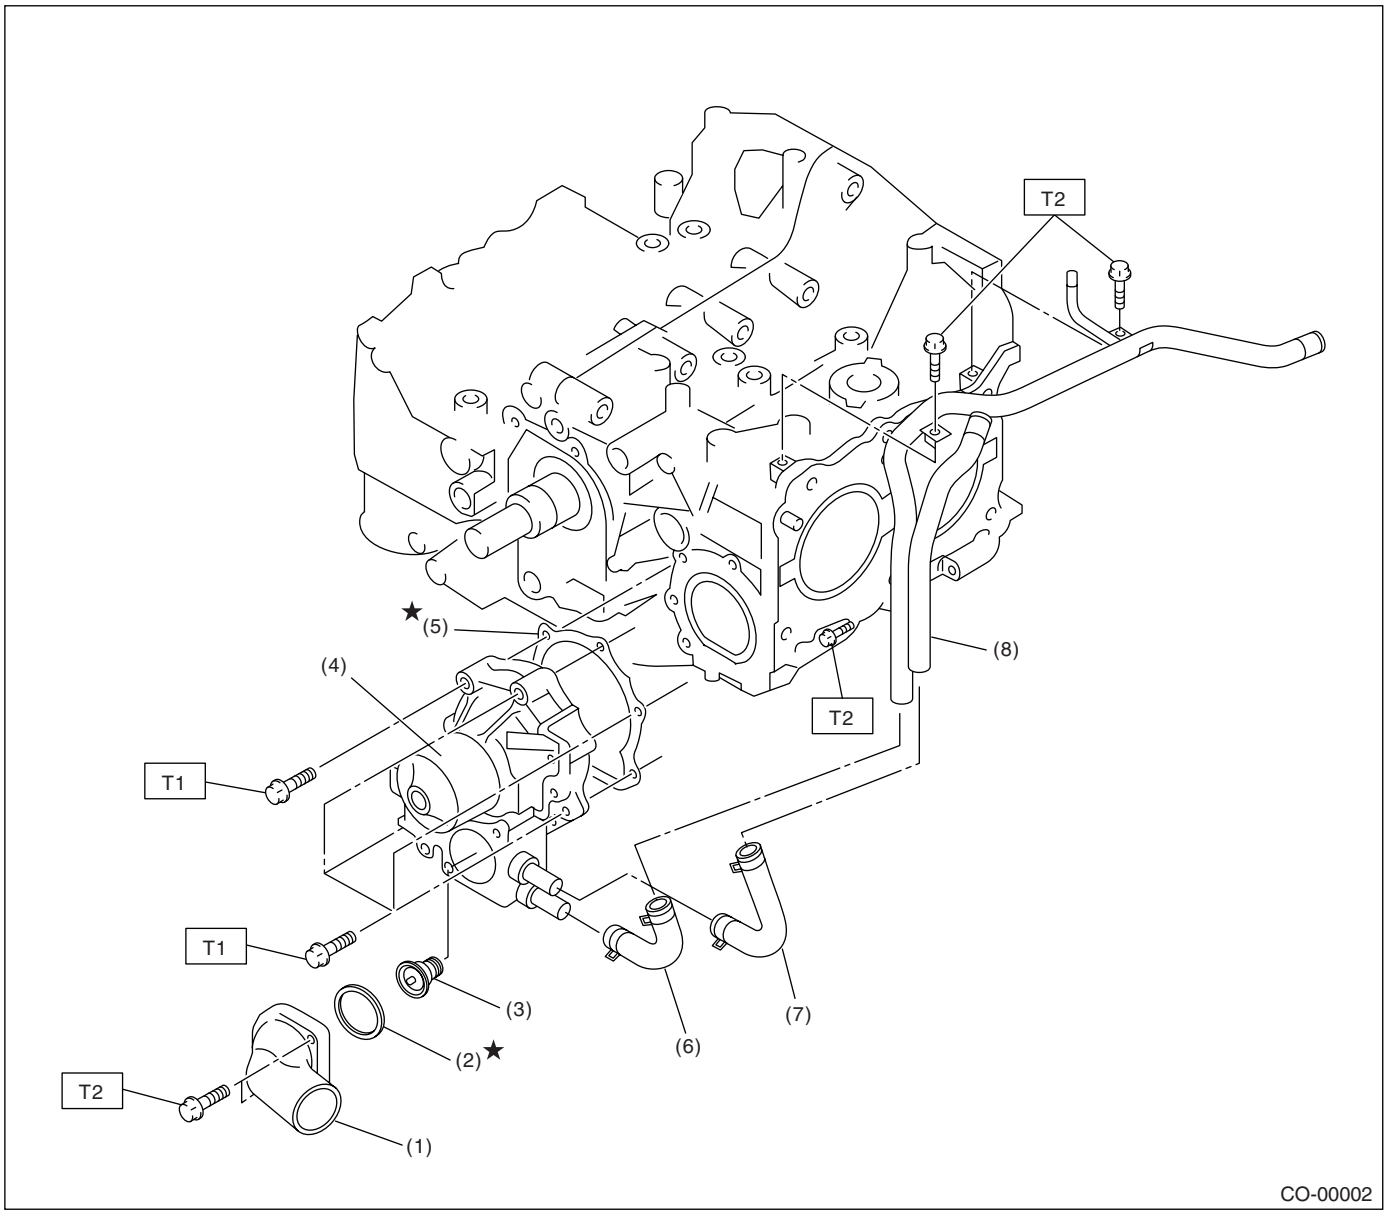

(1) Thermostat cover
(2) Gasket
(3) Thermostat
(4) Water pump ASSY
(5) Gasket
(6) Heater by-pass hose
(7) Coolant filler tank by-pass hose
(8) Water by-pass pipe

Tightening torque: N·m (kgf-m, ft-lb)
T1: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7)
T2: 6.5 (0.66, 4.8)

2. RADIATOR AND RADIATOR FAN

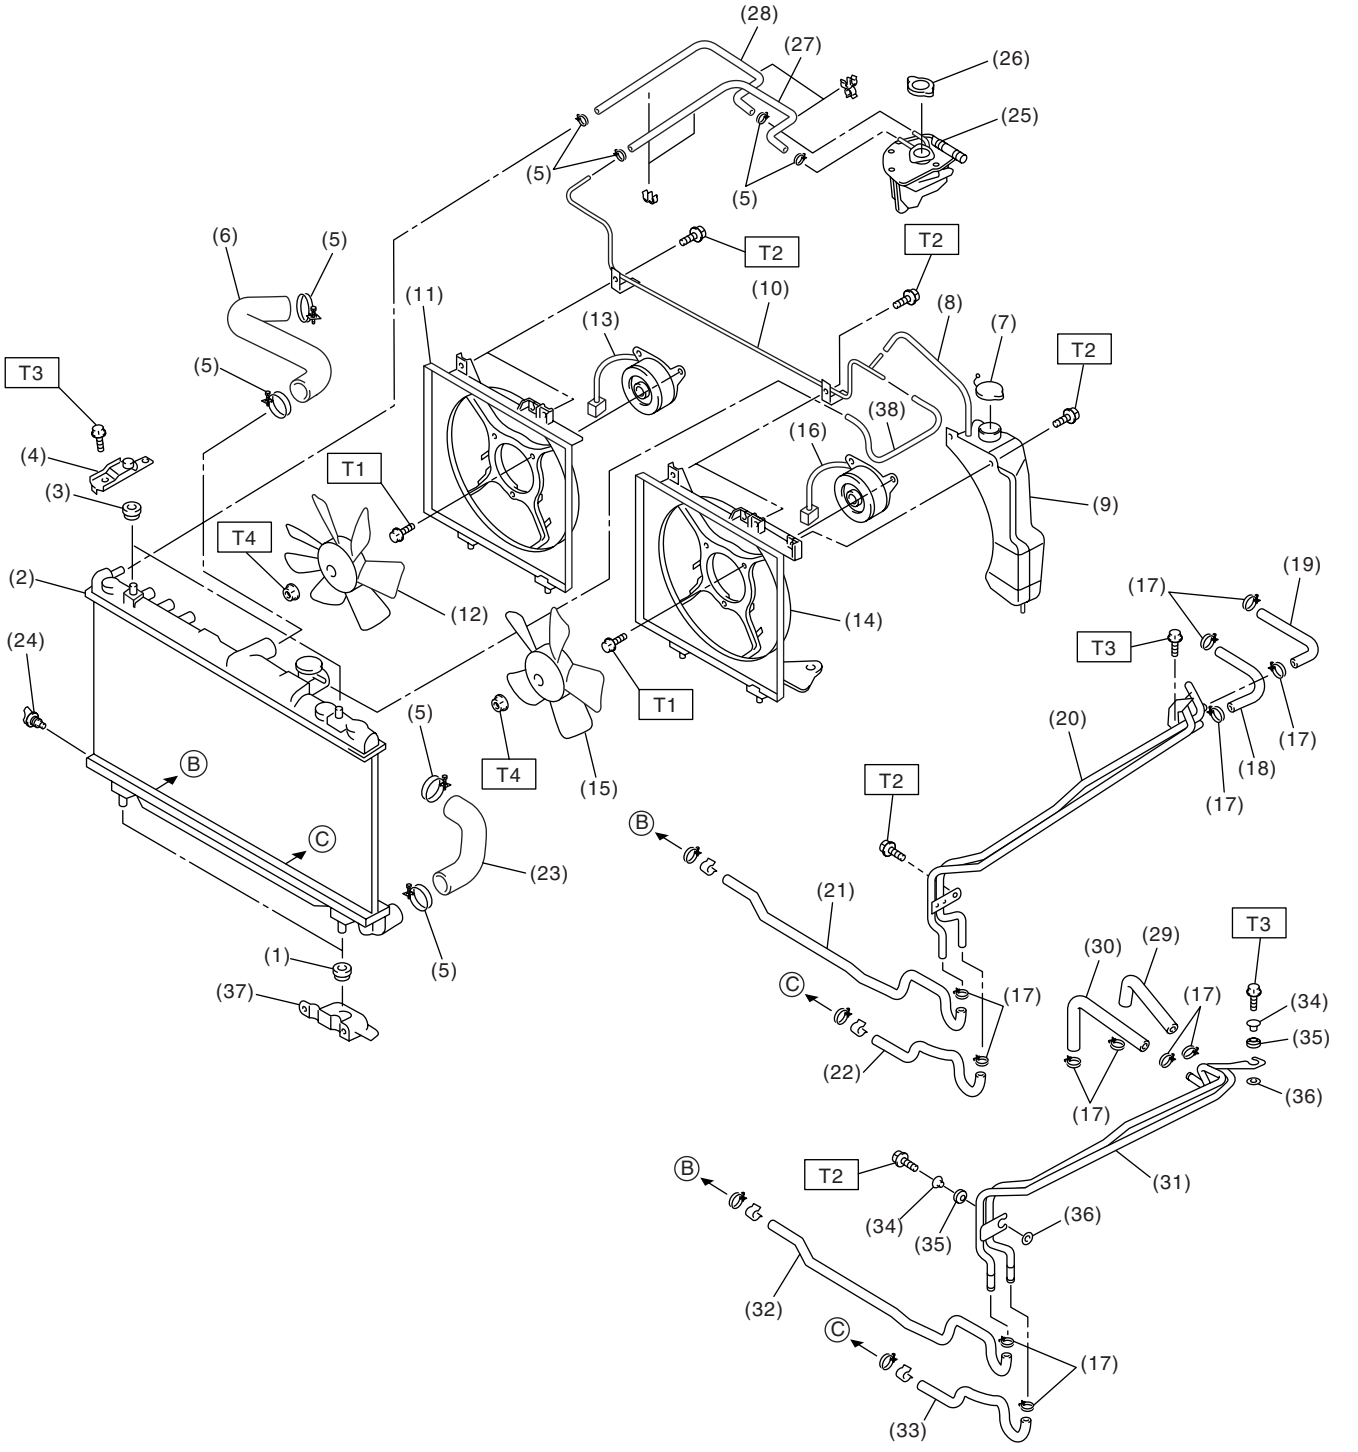

(1) Radiator lower cushion
(2) Radiator
(3) Radiator upper cushion
(4) Radiator upper bracket
(5) Clamp
(6) Radiator inlet hose
(7) Engine coolant reservoir tank cap
(8) Overflow hose A
(9) Engine coolant reservoir tank
(10) Overflow pipe
(11) Radiator sub fan shroud
(12) Radiator sub fan
(13) Radiator sub fan motor
(14) Radiator main fan shroud
(15) Radiator main fan
(16) Radiator main fan motor
(17) ATF hose clamp (AT model)
(18) ATF inlet hose A (AT model)
(19) ATF outlet hose A (AT model)
(20) ATF pipe (AT model)
(21) ATF inlet hose B (AT model)
(22) ATF outlet hose B (AT model)
(23) Radiator outlet hose
(24) Radiator drain plug
(25) Engine coolant filler tank
(26) Radiator cap (engine coolant filler tank cap)
(27) Engine overflow hose
(28) Engine air breather hose
(29) Oil cooler inlet hose A (MT model with oil cooler)
(30) Oil cooler outlet hose A (MT model with oil cooler)
(31) Oil cooler pipe (MT model with oil cooler)
(32) Oil cooler inlet hose B (MT model with oil cooler)
(33) Oil cooler outlet hose B (MT model with oil cooler)
(34) Spacer (MT model with oil cooler)
(35) Cushion (MT model with oil cooler)
(36) Setting washer (MT model with oil cooler)
(37) Radiator lower bracket
(38) Overflow hose B

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.4 (0.45, 3.3)
T2: 7.5 (0.76, 5.5)
T3: 18 (1.8, 13.0)
T4: 3.4 (0.35, 2.5)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part in the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
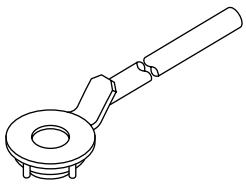 ST-499977400	499977400	CRANKSHAFT PULLEY WRENCH	Used for stopping crankshaft pulley when loosening and tightening crankshaft pulley bolts.
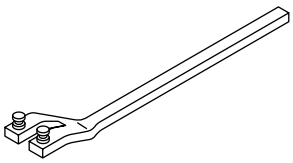 ST18231AA010	18231AA010	CAMSHAFT SPROCKET WRENCH	Used for removing and installing intake camshaft sprocket. (Except for STi and Australia model)
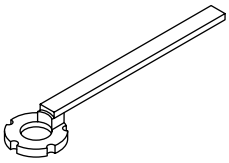 ST-499207400	499207400	CAMSHAFT SPROCKET WRENCH	Used for removing and installing exhaust camshaft sprocket.
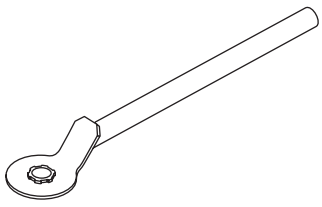 ST-499977500	499977500	CAMSHAFT SPROCKET WRENCH	Used for removing and installing intake camshaft sprocket. (STi and Australia model)

2. Radiator Main Fan System

A: SCHEMATIC

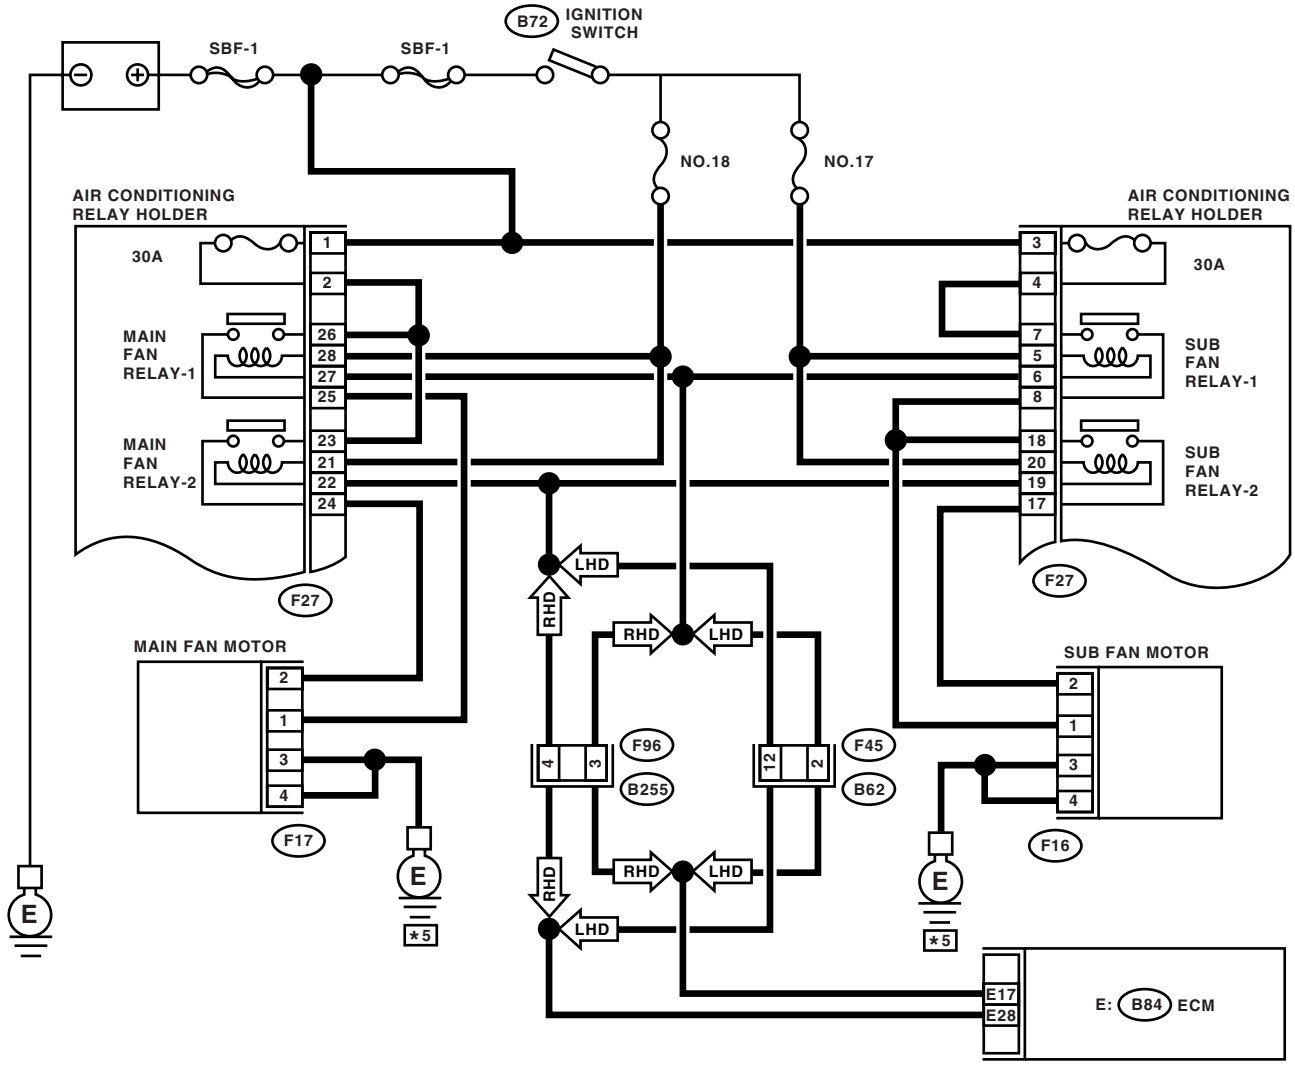

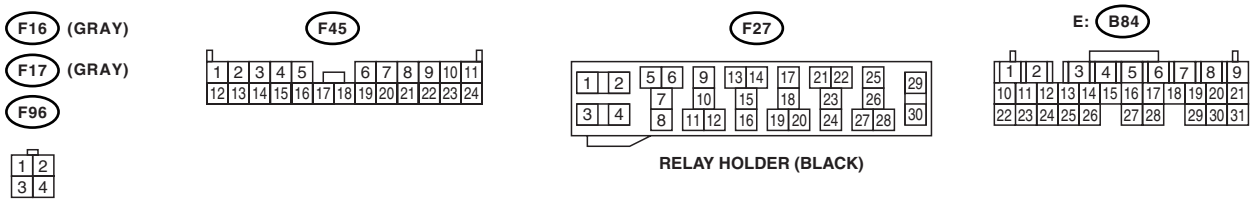

CO-00207

B: INSPECTION

DETECTING CONDITION:

- Engine coolant temperature is above 96°C (205°F).
- A/C compressor is rotated.
- Vehicle speed is below 19 km/h (12 MPH).

TROUBLE SYMPTOM:

- Radiator main fan does not rotate under the above conditions.
- Radiator main fan does not rotate at high speed when the following conditions are both met:
  (1) Engine coolant temperature is above 90°C (194°F).
  (2) A/C is ON.

	Step	Check	Yes	No
1	**CHECK OPERATION OF RADIATOR.** 1)Run the engine at idle. (Vehicle stationary) 2)Turn the A/C switch to OFF. 3)Warm the engine coolant temperature over 96°C (205°F).	Does the main radiator fan rotate?	Go to step **2.**	Go to step **3.**
2	**CHECK OPERATION OF RADIATOR.** Turn the A/C switch to ON at condition of step 1.	Does the main radiator fan rotate faster when A/C compressor is operated?	Radiator main fan system is okay.	Go to step **17.**
3	**CHECK POWER SUPPLY TO MAIN FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from main fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 96°C (205°F). 4)Stop the engine and turn ignition switch to ON. 5)Measure the voltage between main fan motor connector and chassis ground. ***Connector & terminal*** ***(F17) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Go to step **7.**
4	**CHECK GROUND CIRCUIT OF MAIN FAN MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main fan motor connector and chassis ground. ***Connector & terminal*** ***(F17) No. 3 — Chassis ground:*** ***(F17) No. 4 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the open circuit in harness between main fan motor connector and chassis ground.
5	**CHECK POOR CONTACT.** Check poor contact in main fan motor connector.	Is there poor contact in main fan motor connector?	Repair the poor contact in main fan motor connector.	Go to step **6.**
6	**CHECK MAIN FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 1, and ground (−) terminal to terminal No. 3 or No. 4 of main fan motor connector.	Does the main fan rotate?	Repair the poor contact in main fan motor connector.	Replace the main fan motor with a new one.

	Step	Check	Yes	No
7	**CHECK POWER SUPPLY TO MAIN FAN RELAY1.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay1 from A/C relay holder. 3)Measure the voltage between main fan relay1 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 26 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **8.**	Go to step **9.**
8	**CHECK POWER SUPPLY TO MAIN FAN RELAY1.** 1)Turn the ignition switch to ON. 2)Measure the voltage between main fan relay1 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 28 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **12.**	Go to step **11.**
9	**CHECK 30 A FUSE.** 1)Remove the 30 A fuse from A/C relay holder. 2)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step **10.**
10	**CHECK POWER SUPPLY TO A/C RELAY HOLDER 30 A FUSE TERMINAL.** Measure the voltage of harness between A/C relay holder 30 A fuse terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit in harness between 30 A fuse and main fan relay terminal.	Repair the open circuit in harness between main fuse box connector and 30 A fuse terminal.
11	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 18 from joint box. 3)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Repair the open circuit in harness between main fan relay and ignition switch.
12	**CHECK MAIN FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay1. 3)Measure the resistance of main fan relay1. ***Terminals*** ***No. 26 — No. 25:***	Is the resistance more than 1 MΩ?	Go to step **13.**	Replace the main fan relay.
13	**CHECK MAIN FAN RELAY.** 1)Connect the battery to terminals No. 27 and No. 28 of main fan relay1. 2)Measure the resistance of main fan relay1. ***Terminals*** ***No. 26 — No. 25:***	Is the resistance less than 1 Ω?	Go to step **14.**	Replace the main fan relay.
14	**CHECK HARNESS BETWEEN MAIN FAN RELAY TERMINAL AND MAIN FAN MOTOR CONNECTOR.** Measure the resistance of harness between main fan motor connector and main fan relay terminal. ***Connector & terminal*** ***(F17) No. 1 — (F27) No. 25:***	Is the resistance less than 1 Ω?	Go to step **15.**	Repair the open circuit in harness between main fan motor connector and main fan relay terminal.
15	**CHECK HARNESS BETWEEN MAIN FAN RELAY AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between main fan relay connector and ECM connector. ***Connector & terminal*** ***(F27) No. 27 — (B84) No. 17:***	Is the resistance less than 1 Ω?	Go to step **16.**	Repair the open circuit in harness between main fan relay and ECM.

	Step	Check	Yes	No
16	**CHECK POOR CONTACT.** Check poor contact in connector between main fan and ECM.	Is there poor contact in connector between main fan motor and ECM?	Repair the poor contact connector.	Record the DTC. Repair the trouble cause. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>
17	**CHECK POWER SUPPLY TO MAIN FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from main fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 96°C (205°F). 4)Turn the A/C switch ON. 5)Measure the voltage while A/C compressor is rotating. 6)Measure the voltage between main fan motor connector and chassis ground. ***Connector & terminal*** ***(F17) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **18.**	Go to step **20.**
18	**CHECK POOR CONTACT.** Check poor contact in main fan motor connector.	Is there poor contact in main fan motor connector?	Repair the poor contact in main fan motor connector.	Go to step **19.**
19	**CHECK MAIN FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 2, and ground (−) terminal to terminal No. 1 of main fan motor connector.	Does the main fan rotate?	Repair the poor contact in main fan motor connector.	Replace the main fan motor with a new one.
20	**CHECK POWER SUPPLY TO MAIN FAN RELAY2.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay2 from A/C relay holder. 3)Measure the voltage between main fan relay2 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 23 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **21.**	Go to step **22.**
21	**CHECK POWER SUPPLY TO MAIN FAN RELAY2.** 1)Turn the ignition switch to ON. 2)Measure the voltage between main fan relay2 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 21 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **25.**	Go to step **24.**
22	**CHECK 30 A FUSE.** 1)Remove the 30 A fuse from A/C relay holder. 2)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step **23.**
23	**CHECK POWER SUPPLY TO A/C RELAY HOLDER 30 A FUSE TERMINAL.** Measure the voltage of harness between A/C relay holder 30 A fuse terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit in harness between 30 A fuse and main fan relay terminal.	Repair the open circuit in harness between main fuse box connector and 30 A fuse terminal.

	Step	Check	Yes	No
24	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 18 from joint box. 3)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Repair the open circuit in harness between main fan relay and ignition switch.
25	**CHECK MAIN FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay2. 3)Measure the resistance of main fan relay2. ***Terminals*** ***No. 23 — No. 24:***	Is the resistance more than 1 MΩ?	Go to step **26.**	Replace the main fan relay.
26	**CHECK MAIN FAN RELAY.** 1)Connect the battery to terminals No. 21 and No. 22 of main fan relay1. 2)Measure the resistance of main fan relay2. ***Terminals*** ***No. 23 — No. 24:***	Is the resistance less than 1 Ω?	Go to step **27.**	Replace the main fan relay.
27	**CHECK HARNESS BETWEEN MAIN FAN RELAY TERMINAL AND MAIN FAN MOTOR CONNECTOR.** Measure the resistance of harness between main fan motor connector and main fan relay terminal. ***Connector & terminal*** ***(F17) No. 2 — (F27) No. 24:***	Is the resistance less than 1 Ω?	Go to step **28.**	Repair the open circuit in harness between main fan motor connector and main fan relay terminal.
28	**CHECK HARNESS BETWEEN MAIN FAN RELAY AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between main fan relay connector and ECM connector. ***Connector & terminal*** ***(F27) No. 22 — (B84) No. 28:***	Is the resistance less than 1 Ω?	Go to step **29.**	Repair the open circuit in harness between main fan relay and ECM.
29	**CHECK POOR CONTACT.** Check poor contact in connector between main fan and ECM.	Is there poor contact in connector between main fan motor and ECM?	Repair the poor contact connector.	Record the DTC. Repair the trouble cause. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>

3. Radiator Sub Fan System

A: SCHEMATIC

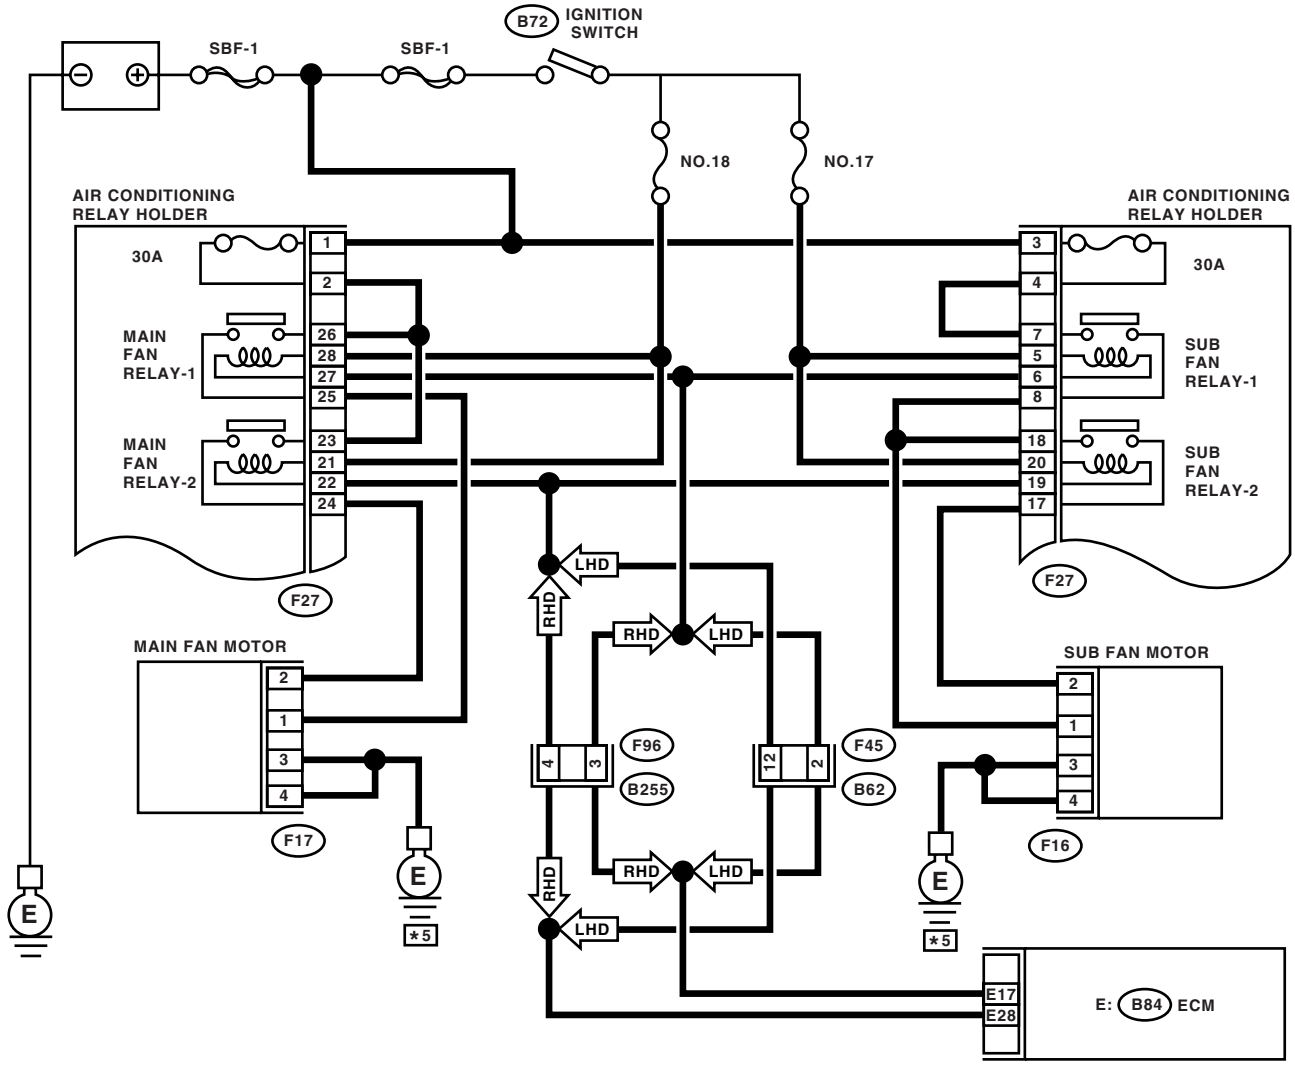

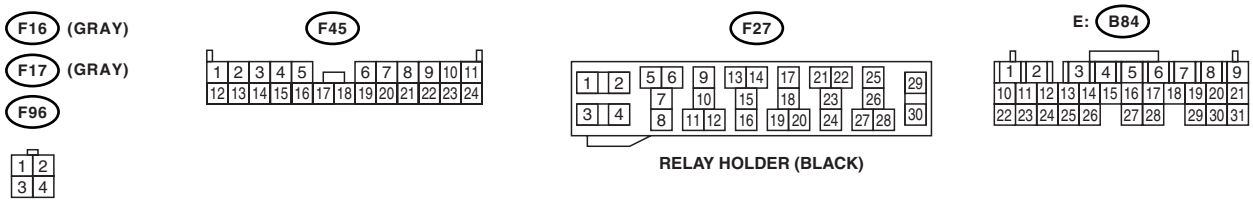

CO-00207

B: INSPECTION

DETECTING CONDITION:

- Engine coolant temperature is above 96°C (205°F).
- A/C compressor is rotated.
- Vehicle speed is below 19 km/h (12 MPH).

TROUBLE SYMPTOM:

- Radiator sub fan does not rotate under the above conditions.
- Radiator sub fan does not rotate at high speed when the following conditions are both met:
  (1) Engine coolant temperature is above 90°C (194°F).
  (2) A/C is ON.

	Step	Check	Yes	No
1	**CHECK OPERATION OF RADIATOR.** 1)Run the engine at idle. (Vehicle stationary) 2)Turn the A/C switch to OFF. 3)Warm the engine coolant temperature over 96°C (205°F).	Does the radiator sub fan rotate?	Go to step **2.**	Go to step **3.**
2	**CHECK OPERATION OF RADIATOR.** Turn the A/C switch to ON at condition of step 1.	Does the radiator sub fan rotate faster when A/C compressor is operated?	Radiator main fan system is okay.	Go to step **17.**
3	**CHECK POWER SUPPLY TO SUB FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from sub fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 96°C (205°F). 4)Stop the engine and turn ignition switch to ON. 5)Measure the voltage between sub fan motor connector and chassis ground. ***Connector & terminal*** ***(F16) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Go to step **7.**
4	**CHECK GROUND CIRCUIT OF SUB FAN MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between sub fan motor connector and chassis ground. ***Connector & terminal*** ***(F16) No. 3 — Chassis ground:*** ***(F16) No. 4 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the open circuit in harness between sub fan motor connector and chassis ground.
5	**CHECK POOR CONTACT.** Check poor contact in sub fan motor connector.	Is there poor contact in sub fan motor connector?	Repair the poor contact in sub fan motor connector.	Go to step **6.**
6	**CHECK MAIN FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 1, and ground (−) terminal to terminal No. 3 or No. 4 of sub fan motor connector.	Does the main fan rotate?	Repair the poor contact in sub fan motor connector.	Replace the sub fan motor with a new one.

	Step	Check	Yes	No
7	**CHECK POWER SUPPLY TO SUB FAN RELAY1.** 1)Turn the ignition switch to OFF. 2)Remove the sub fan relay1 from A/C relay holder. 3)Measure the voltage between sub fan relay1 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 7 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **8.**	Go to step **9.**
8	**CHECK POWER SUPPLY TO SUB FAN RELAY1.** 1)Turn the ignition switch to ON. 2)Measure the voltage between sub fan relay1 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 5 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **12.**	Go to step **11.**
9	**CHECK 30 A FUSE.** 1)Remove the 30 A fuse from A/C relay holder. 2)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step **10.**
10	**CHECK POWER SUPPLY TO A/C RELAY HOLDER 30 A FUSE TERMINAL.** Measure the voltage of harness between A/C relay holder 30 A fuse terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit in harness between 30 A fuse and sub fan relay terminal.	Repair the open circuit in harness between sub fuse box connector and 30 A fuse terminal.
11	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 17 from joint box. 3)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Repair the open circuit in harness between sub fan relay and ignition switch.
12	**CHECK SUB FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main fan relay1. 3)Measure the resistance of sub fan relay1. ***Terminals*** ***No. 7 — No. 8:***	Is the resistance more than 1 MΩ?	Go to step **13.**	Replace the sub fan relay.
13	**CHECK SUB FAN RELAY.** 1)Connect the battery to terminals No. 6 and No. 5 of sub fan relay1. 2)Measure the resistance of sub fan relay. ***Terminals*** ***No. 7 — No. 8:***	Is the resistance less than 1 Ω?	Go to step **14.**	Replace the sub fan relay.
14	**CHECK HARNESS BETWEEN SUB FAN RELAY TERMINAL AND SUB FAN MOTOR CONNECTOR.** Measure the resistance of harness between sub fan motor connector and sub fan relay terminal. ***Connector & terminal*** ***(F16) No. 1 — (F27) No. 8:***	Is the resistance less than 1 Ω?	Go to step **15.**	Repair the open circuit in harness between sub fan motor connector and sub fan relay terminal.
15	**CHECK HARNESS BETWEEN SUB FAN RELAY AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between sub fan relay connector and ECM connector. ***Connector & terminal*** ***(F27) No. 6 — (B84) No. 17:***	Is the resistance less than 1 Ω?	Go to step **16.**	Repair the open circuit in harness between sub fan relay and ECM.

	Step	Check	Yes	No
16	**CHECK POOR CONTACT.** Check poor contact in connector between sub fan and ECM.	Is there poor contact in connector between sub fan motor and ECM?	Repair the poor contact connector.	Record the DTC. Repair the trouble cause. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>
17	**CHECK POWER SUPPLY TO SUB FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from sub fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 96°C (205°F). 4)Turn the A/C switch ON. 5)Measure the voltage while A/C compressor is rotating. 6)Measure the voltage between sub fan motor connector and chassis ground. ***Connector & terminal*** ***(F16) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **18.**	Go to step **20.**
18	**CHECK POOR CONTACT.** Check poor contact in sub fan motor connector.	Is there poor contact in sub fan motor connector?	Repair the poor contact in sub fan motor connector.	Go to step **19.**
19	**CHECK SUB FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 2, and ground (−) terminal to terminal No. 3 or No. 4 of sub fan motor connector.	Does the main fan rotate?	Repair the poor contact in sub fan motor connector.	Replace the sub fan motor with a new one.
20	**CHECK POWER SUPPLY TO SUB FAN RELAY2.** 1)Turn the ignition switch to OFF. 2)Remove the sub fan relay2 from A/C relay holder. 3)Measure the voltage between sub fan relay2 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 18 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **21.**	Go to step **22.**
21	**CHECK POWER SUPPLY TO SUB FAN RELAY2.** 1)Turn the ignition switch to ON. 2)Measure the voltage between sub fan relay2 terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 20 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **23.**	Go to step **24.**
22	**CHECK 30 A FUSE.** 1)Remove the 30 A fuse from A/C relay holder. 2)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step **23.**
23	**CHECK POWER SUPPLY TO A/C RELAY HOLDER 30 A FUSE TERMINAL.** Measure the voltage of harness between A/C relay holder 30 A fuse terminal and chassis ground. ***Connector & terminal*** ***(F27) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit in harness between 30 A fuse and sub fan relay terminal.	Repair the open circuit in harness between sub fuse box connector and 30 A fuse terminal.

	Step	Check	Yes	No
24	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 17 from joint box. 3)Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Repair the open circuit in harness between sub fan relay and ignition switch.
25	**CHECK SUB FAN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the sub fan relay2. 3)Measure the resistance of main fan relay2. ***Terminals*** ***No. 18 — No. 17:***	Is the resistance more than 1 MΩ?	Go to step **26.**	Replace the sub fan relay.
26	**CHECK MAIN FAN RELAY.** 1)Connect the battery to terminals No. 19 and No. 20 of sub fan relay2. 2)Measure the resistance of main fan relay2. ***Terminals*** ***No. 18 — No. 17:***	Is the resistance less than 1 Ω?	Go to step **27.**	Replace the sub fan relay.
27	**CHECK HARNESS BETWEEN SUB FAN RELAY TERMINAL AND SUB FAN MOTOR CONNECTOR.** Measure the resistance of harness between sub fan motor connector and sub fan relay2 terminal. ***Connector & terminal*** ***(F16) No. 2 — (F27) No. 17:***	Is the resistance less than 1 Ω?	Go to step **28.**	Repair the open circuit in harness between sub fan motor connector and sub fan relay terminal.
28	**CHECK HARNESS BETWEEN SUB FAN RELAY AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between sub fan relay connector and ECM connector. ***Connector & terminal*** ***(F27) No. 19 — (B84) No. 28:***	Is the resistance less than 1 Ω?	Go to step **29.**	Repair the open circuit in harness between sub fan relay and ECM.
29	**CHECK POOR CONTACT.** Check poor contact in connector between sub fan and ECM.	Is there poor contact in connector between sub fan motor and ECM?	Repair the poor contact connector.	Record the DTC. Repair the trouble cause. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>

4. Engine Coolant

A: REPLACEMENT

1. DRAINING OF ENGINE COOLANT

1) Lift-up the vehicle.
2) Remove the under cover.
3) Remove the drain cock to drain engine coolant into container.

NOTE:
Remove the coolant filler tank cap so that engine coolant will drain faster.

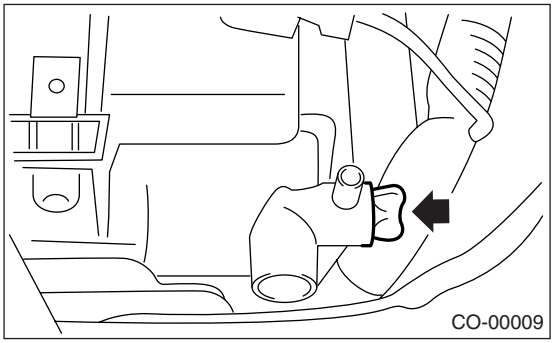

4) Install the drain cock.

2. FILLING OF ENGINE COOLANT

1) Fill engine coolant into the coolant filler tank up to filler neck position.

Coolant capacity (fill up to "FULL" level):
AT model
Approx. 7.6 ℓ (8.03 US qt, 6.69 Imp qt)
MT model
Approx. 7.7 ℓ (8.14 US qt, 6.78 Imp qt)

CAUTION:
Do not mix up the coolant filler tank side cap with radiator side cap.

NOTE:
• Do not remove the radiator side cap when filling engine coolant.
• The SUBARU Genuine Coolant containing anti-freeze and anti-rust agents is especially made for SUBARU engine, which has an aluminum crank-case. Always use SUBARU Genuine Coolant, since other coolant may cause corrosion.

2) Fill engine coolant into the reservoir tank up to Full level.

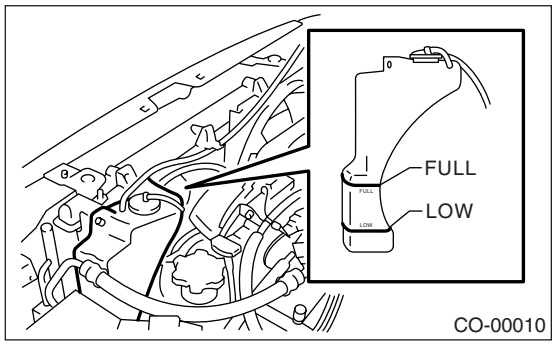

3) Warm-up the engine completely for more than 5 minutes at 2,000 to 3,000 rpm.
4) If the engine coolant level drops in coolant filler tank, add engine coolant to filler neck position.
5) If the engine coolant level drops from Full level of reservoir tank, add engine coolant to Full level.
6) Attach the coolant filler tank cap and reservoir tank cap properly.

B: INSPECTION

1. RELATIONSHIP OF SUBARU COOLANT CONCENTRATION AND FREEZING TEMPERATURE

The concentration and safe operating temperature of the SUBARU coolant is shown in the diagram. Measuring the temperature and specific gravity of the coolant will provide this information.
[Example]
If the coolant temperature is 25°C (77°F) and its specific gravity is 1.054, the concentration is 45% (point A), the safe operating temperature is −14°C (7°F) (point B), and the freezing temperature is −20°C (−4°F) (point C).

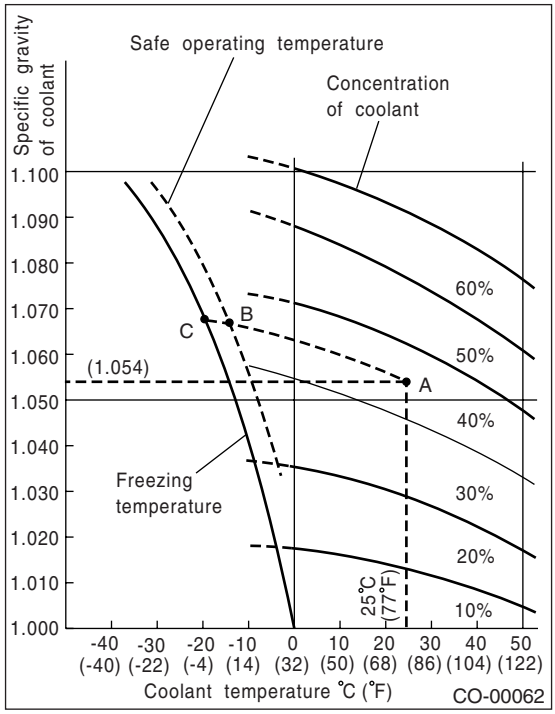

2. PROCEDURE TO ADJUST THE CONCENTRATION OF THE COOLANT

To adjust the concentration of the coolant according to temperature, find the proper fluid concentration in the above diagram and replace the necessary amount of coolant with an undiluted solution of SUBARU genuine coolant (concentration 50%).
The amount of coolant that should be replaced can be determined using the diagram.
[Example]
Assume that the coolant concentration must be increased from 25% to 40%. Find point A, where the 25% line of coolant concentration intersects with the 40% curve of the necessary coolant concentration, and read the scale on the vertical axis of the graph at height A. The quantity of coolant to be drained is 2.1 ℓ (2.2 US qt, 1.8 Imp qt). Drain 2.1 ℓ (2.2 US qt, 1.8 Imp qt) of coolant from the cooling system and add 2.1 ℓ (2.2 US qt, 1.8 Imp qt) of the undiluted solution of SUBARU coolant.
If a coolant concentration of 50% is needed, drain all the coolant and refill with the undiluted solution only.

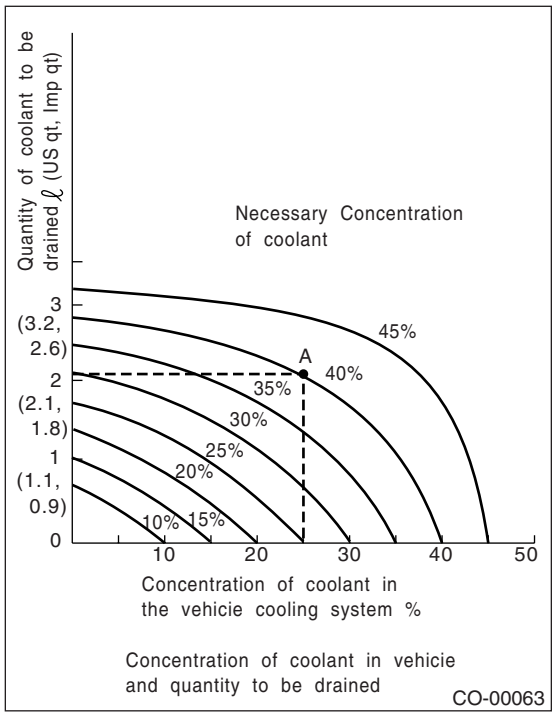

5. Water Pump

A: REMOVAL

1) Remove the radiator. <Ref. to CO(H4DOTC)-23, REMOVAL, Radiator.>
2) Remove the V-belts. <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
3) Remove the timing belt. <Ref. to ME(H4DOTC)-60, REMOVAL, Timing Belt Assembly.>
4) Remove the automatic belt tension adjuster (A).
5) Remove the belt idler (B).
6) Remove the belt idler No. 2 (C).

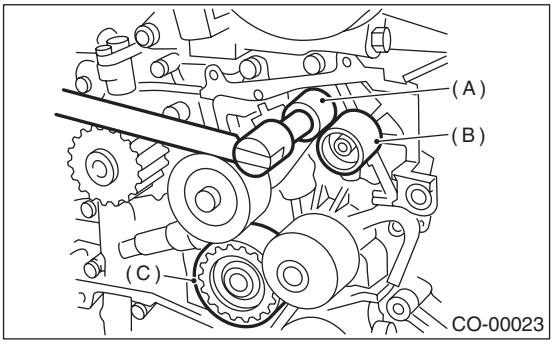

7) Remove the camshaft position sensor. <Ref. to FU(H4DOTC)-30, REMOVAL, Camshaft Position Sensor.>
8) Remove the camshaft sprockets (LH) by using ST. <Ref. to ME(H4DOTC)-69, REMOVAL, Camshaft Sprocket.>
9) Remove the belt cover No. 2 (LH).

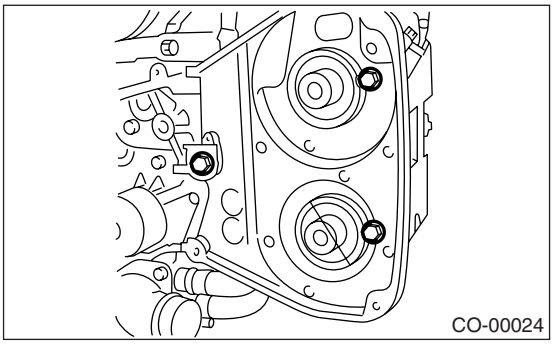

10) Remove the tensioner bracket.

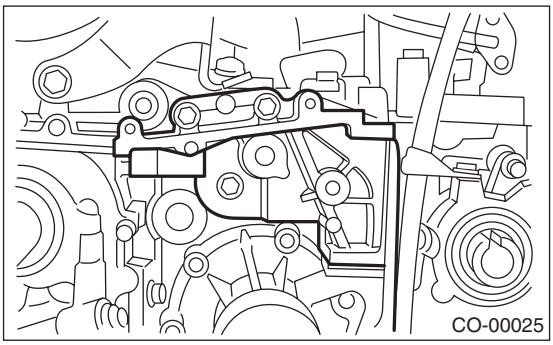

11) Disconnect the hose from water pump.
12) Remove the water pump.

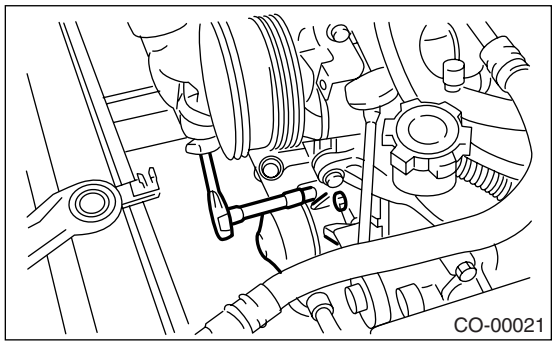

B: INSTALLATION

1) Install the water pump onto cylinder block (LH).

NOTE:
- Replace the gasket with a new one.
- When installing the water pump, tighten bolts in two stages in alphabetical sequence as shown in the figure.

Tightening torque:
First:
12 N·m (1.2 kgf-m, 8.7 ft-lb)
Second:
12 N·m (1.2 kgf-m, 8.7 ft-lb)

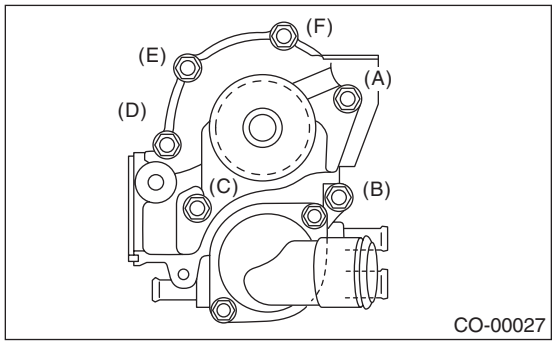

2) Connect the hose to water pump.
3) Install the tensioner bracket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

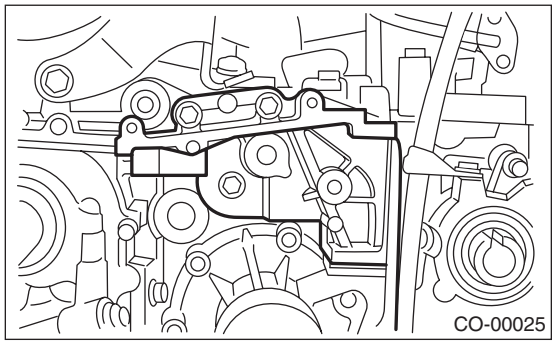

4) Install the belt cover No. 2 (LH).

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

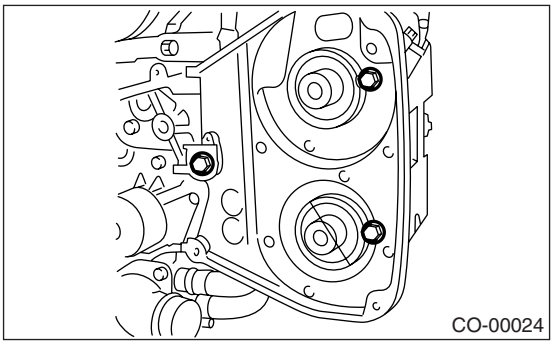

5) Install the camshaft sprockets (LH) by using ST. <Ref. to ME(H4DOTC)-70, INSTALLATION, Camshaft Sprocket.>
6) Install the camshaft position sensor. <Ref. to FU(H4DOTC)-30, INSTALLATION, Camshaft Position Sensor.>
7) Install the belt idler No. 2 (C).
8) Install the belt idler (B).
9) Install the automatic belt tension adjuster (A) which has tension rod held by pin. <Ref. to ME(H4DOTC)-62, AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER, INSTALLATION, Timing Belt Assembly.>

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

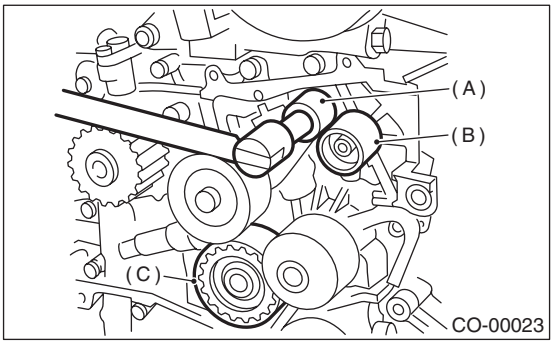

10) Install the timing belt. <Ref. to ME(H4DOTC)-63, TIMING BELT, INSTALLATION, Timing Belt Assembly.>
11) Install the V-belts. <Ref. to ME(H4DOTC)-55, INSTALLATION, V-belt.>
12) Install the radiator. <Ref. to CO(H4DOTC)-24, INSTALLATION, Radiator.>

C: INSPECTION

1) Check the water pump bearing for smooth rotation.
2) Check the water pump pulley for abnormalities.
3) Using a dial gauge, measure the impeller runout in thrust direction while rotating the pulley.

"Thrust" runout limit:
0.5 mm (0.020 in)

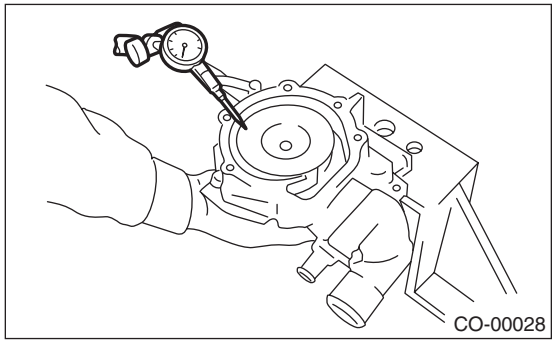

4) Check the clearance between impeller and pump case.

Clearance between impeller and pump case:
Standard
0.5 — 0.7 mm (0.020 — 0.028 in)
Limit
1.0 mm (0.039 in)

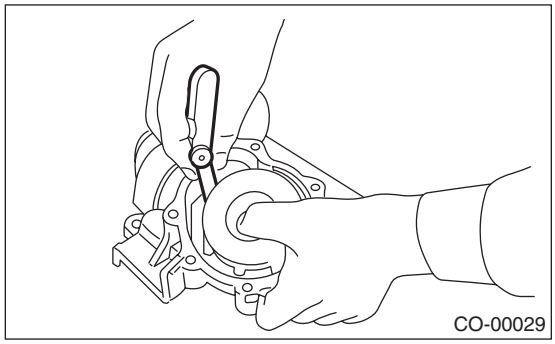

5) After water pump installation, check the pulley shaft for engine coolant leaks. If leaks are noted, replace the water pump assembly.

6. Thermostat

A: REMOVAL

1) Set the vehicle on a lift.
2) Lift-up the vehicle.
3) Remove the under cover.
4) Drain the engine coolant completely. <Ref. to CO(H4DOTC)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

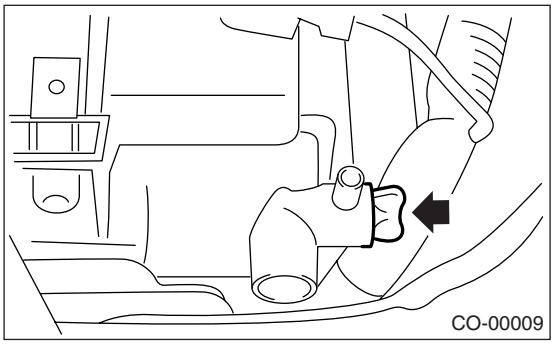

5) Disconnect the radiator outlet hose.

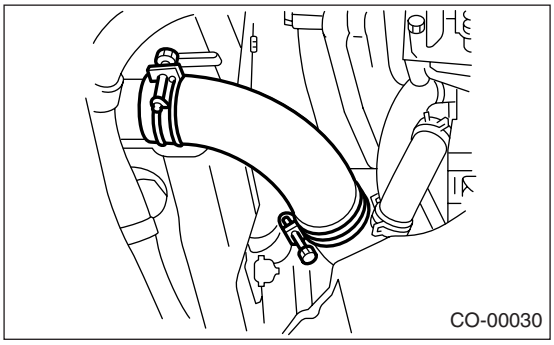

6) Remove the thermostat cover and gasket, and then pull out the thermostat.

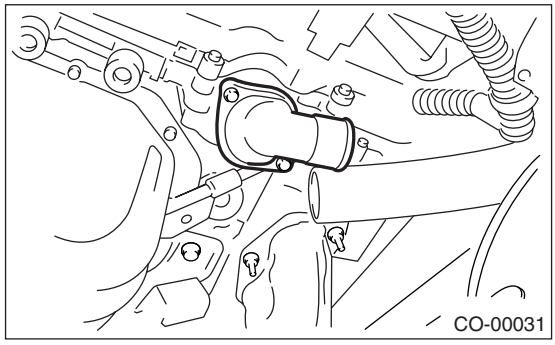

B: INSTALLATION

1) Install the thermostat in water pump, and then install the thermostat cover together with a gasket.

NOTE:
• When reinstalling the thermostat, use a new gasket.
• The thermostat must be installed with the jiggle pin (A) facing to front side.

Tightening torque:
6.5 N·m (0.65 kgf-m, 4.7 ft-lb)

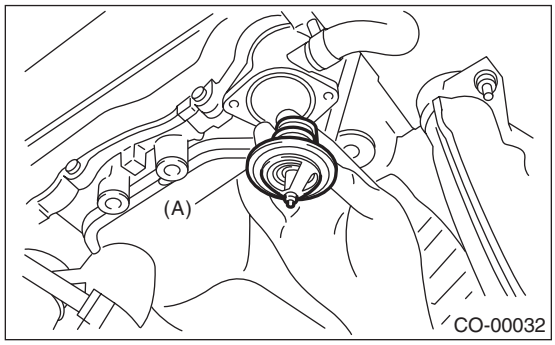

2) Fill engine coolant. <Ref. to CO(H4DOTC)-17, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

C: INSPECTION

Replace the thermostat if the valve does not close completely at an ambient temperature or if the following test shows unsatisfactory results.
Immerse the thermostat and thermometer in water. Raise water temperature gradually, and measure the temperature and valve lift when the valve begins to open and when the valve is fully opened. During the test, agitate the water for even temperature distribution. The measurement should be to the specification.

Starts to open:
76 — 80°C (169 — 176°F)

Fully opens:
91°C (196°F)

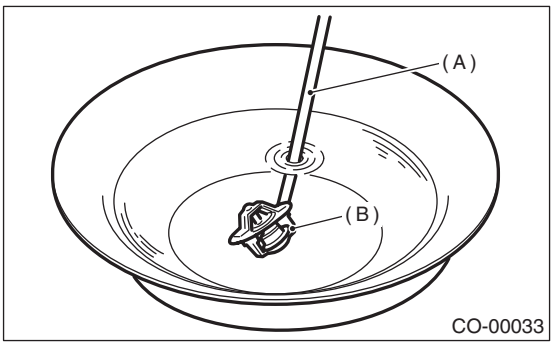

(A) Thermometer
(B) Thermostat

7. Radiator

A: REMOVAL

WARNING:
The radiator is pressurized. Wait until the engine cools down before working on the radiator.

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.

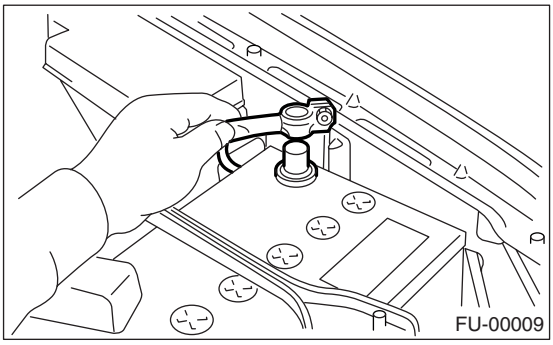

3) Lift-up the vehicle.
4) Remove the under cover.
5) Drain the engine coolant completely. <Ref. to CO(H4DOTC)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
6) Disconnect the connectors of radiator main fan motor (A) and sub fan motor (B).

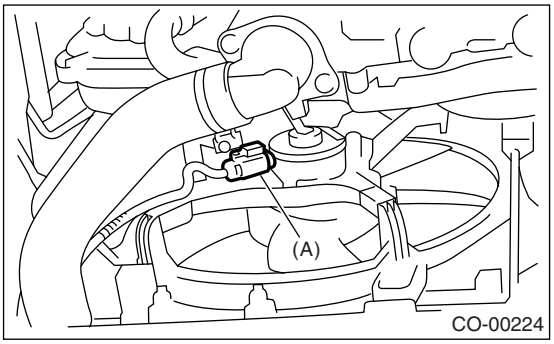

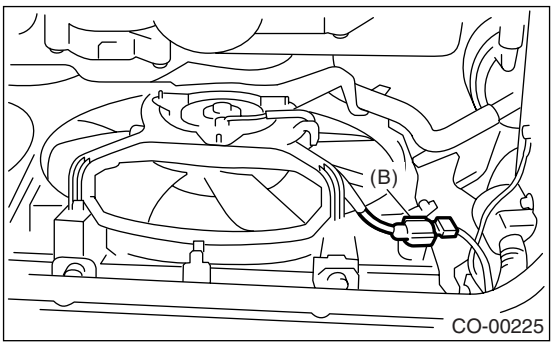

7) Disconnect the radiator outlet hose from thermostat cover.

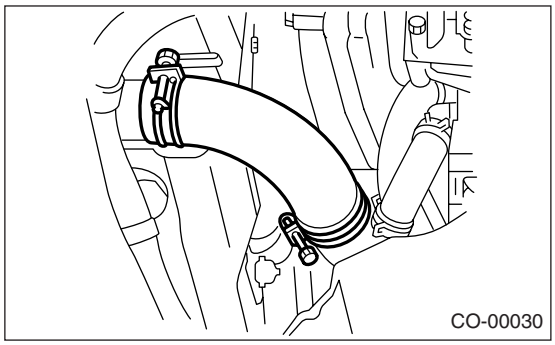

8) Disconnect the ATF cooler hose from ATF pipe. (AT model)
Plug the openings in the hose and radiator with caps in order to prevent ATF from leaking.
9) Disconnect the oil cooler hose from oil cooler pipe. (MT model with oil cooler)
Install the cap to prevent oil from leaking.

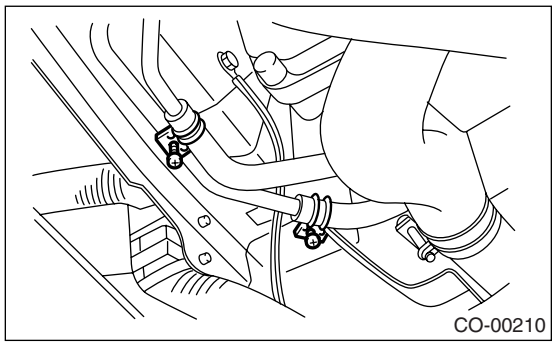

10) Lower the vehicle.
11) Remove the air intake duct.

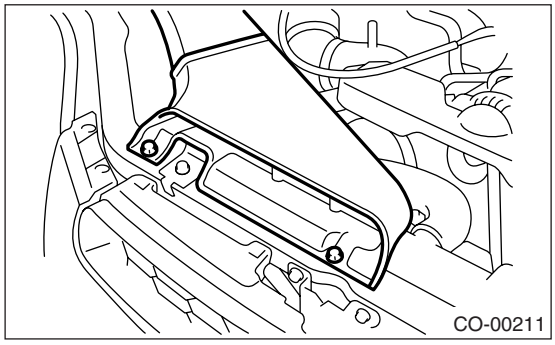

12) Remove the V-belt covers.

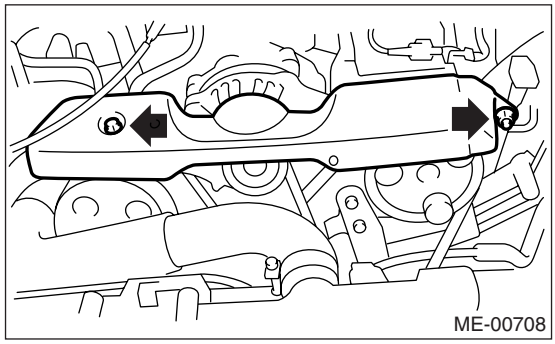

13) Disconnect the overflow hose.
14) Remove the reservoir tank. <Ref. to CO(H4DOTC)-32, REMOVAL, Reservoir Tank.>
15) Disconnect the radiator inlet hose (A) and water tank hose (B) from radiator.

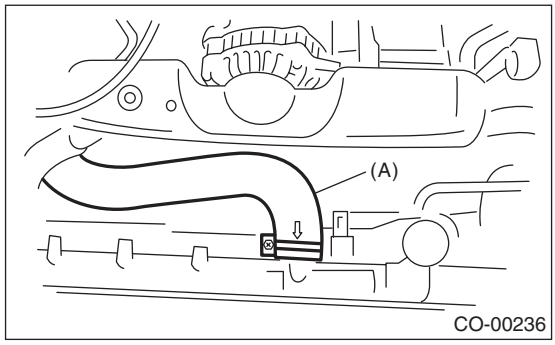

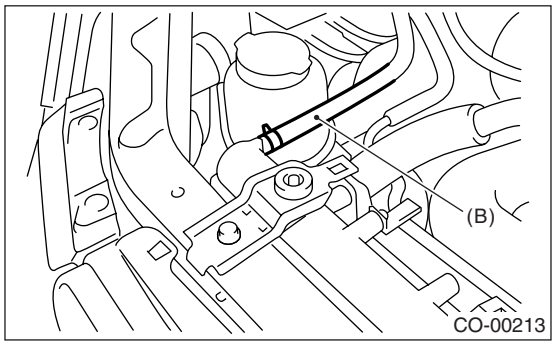

16) Remove the radiator upper brackets.

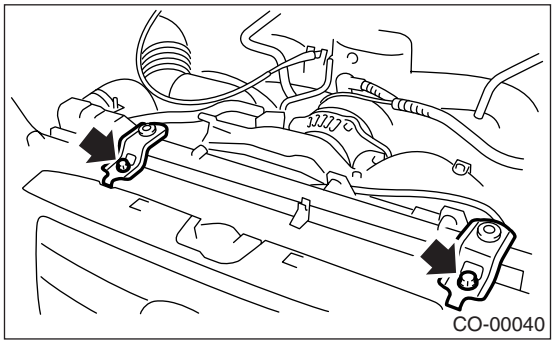

17) While lifting the radiator up, slide it to the left.
18) Lift-up the radiator, and then remove it from vehicle.

B: INSTALLATION

1) Attach the radiator mounting cushions to the holes on vehicle.

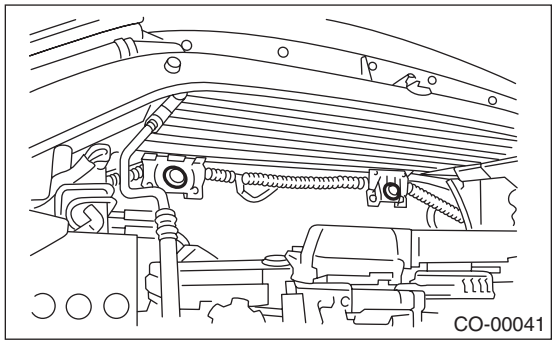

2) Install the radiator to vehicle.

NOTE:
Fit the pins on lower side of radiator into the cushions on body side.

3) Install the radiator brackets, and then tighten the bolts.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

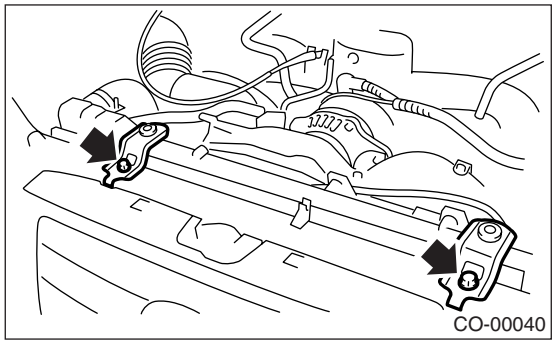

4) Connect the radiator inlet hose (A) and water tank hose (B).

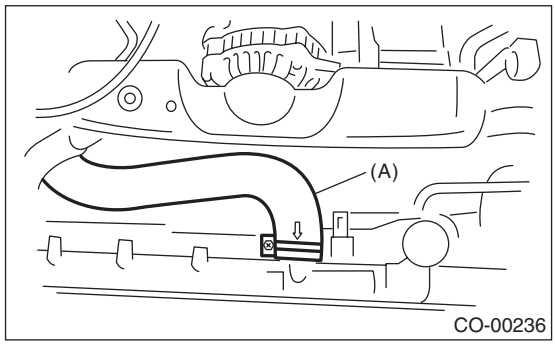

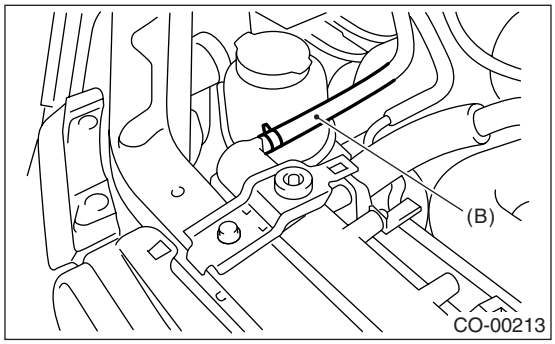

5) Install the reservoir tank. <Ref. to CO(H4DOTC)-32, INSTALLATION, Reservoir Tank.>
6) Connect the overflow hose.
7) Install the V-belt cover.

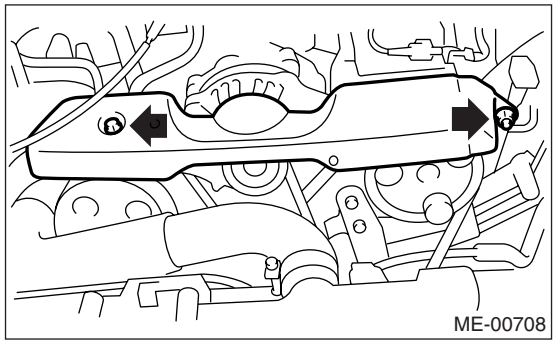

8) Install the air intake duct.
<Ref. to IN(H4DOTC)-9, INSTALLATION, Air Intake Duct.>
9) Lift-up the vehicle.
10) Connect the ATF cooler hoses. (AT model).

11) Connect the oil cooler hose. (MT model with oil cooler)

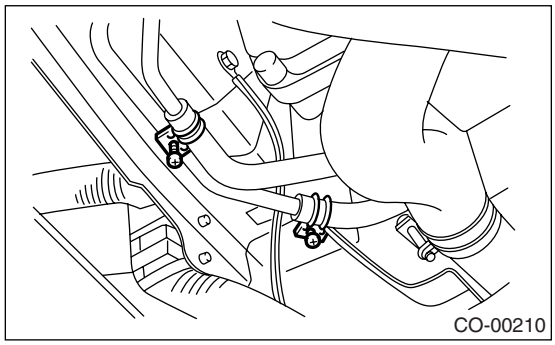

12) Connect the radiator outlet hose.

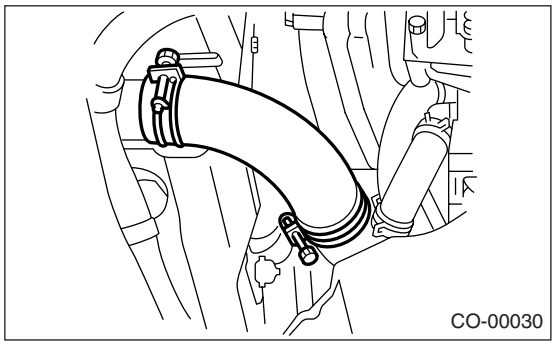

13) Connect the connectors to radiator main fan motor (A) and sub fan motor (B).

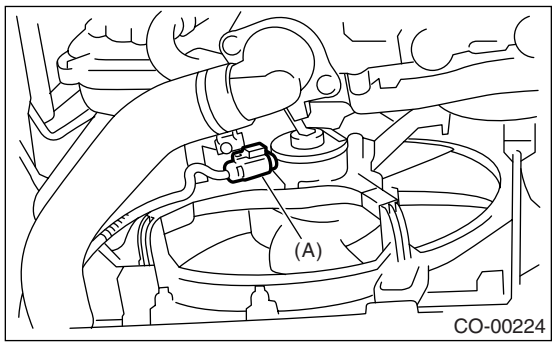

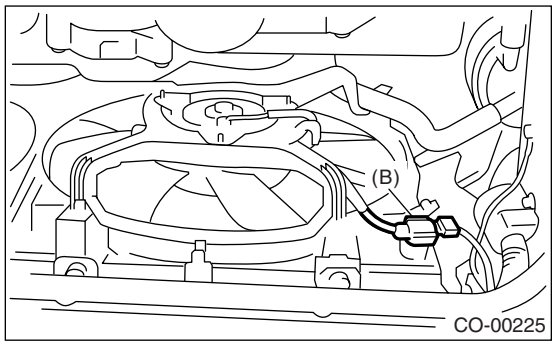

14) Install the under cover.
15) Lower the vehicle.

16) Connect the battery ground cable to battery.

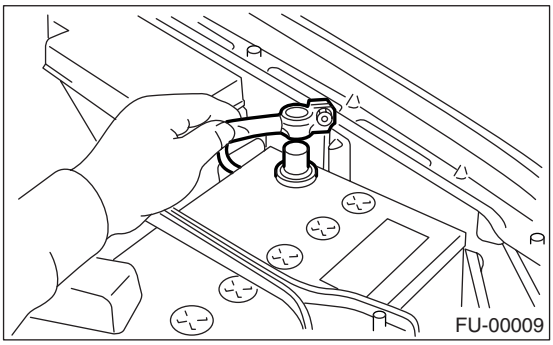

17) Fill engine coolant. <Ref. to CO(H4DOTC)-17, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
18) Check the ATF level. <Ref. to 4AT-31, INSPECTION, Automatic Transmission Fluid.>

C: INSPECTION

1) Remove the coolant filler tank cap, top off coolant filler tank, and then attach the tester to coolant filler tank in place of cap.

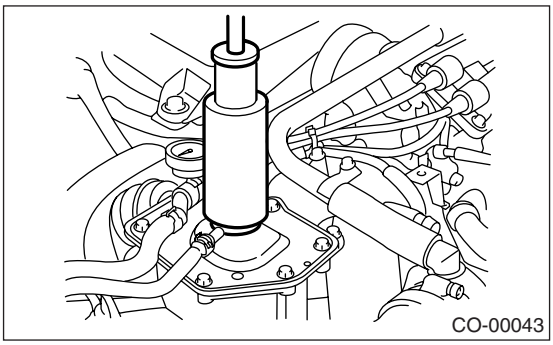

2) Apply a pressure of 122 kPa (1.2 kg/cm^2, 18 psi) to the radiator to check if:
   (1) Engine coolant leaks at/around radiator.
   (2) Engine coolant leaks at/around hoses or connections.

CAUTION:
• Inspection must be carried out at the side of coolant filler tank, not at the side of radiator.
• Engine should be turned off.
• Wipe engine coolant from check points in advance.
• Be careful to prevent engine coolant from spurting out when removing the tester.
• Be careful also not to deform the filler neck of coolant filler tank when installing or removing tester.

8. Radiator Cap

A: INSPECTION

1) Attach the radiator cap to tester.

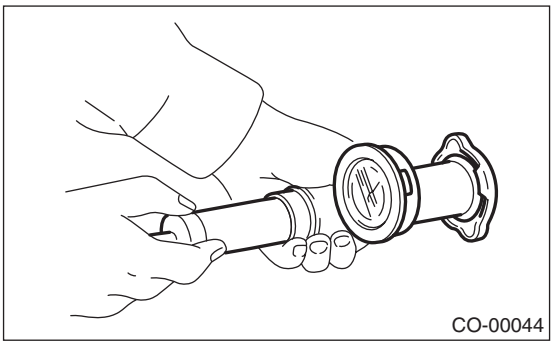

2) Increase the pressure until tester gauge pointer stops. Radiator cap is functioning properly if it holds the service limit pressure for 5 to 6 seconds.

Coolant filler tank side

Standard pressure:

93 — 123 kPa (0.95 — 1.25 kg/cm^2, 14 — 18 psi)

Service limit pressure:

83 kPa (0.85 kg/cm^2, 12 psi)

Radiator side

Standard pressure:

122 — 152 kPa (1.24 — 1.55 kg/cm^2, 18 — 22 psi)

Service limit pressure:

112 kPa (1.14 kg/cm^2, 16 psi)

CAUTION:

• Be sure to remove foreign matter and rust from the cap in advance otherwise, results of pressure test will be incorrect.

• Do not mix up the coolant filler tank side cap with radiator side cap.

9. Radiator Main Fan and Fan Motor

A: REMOVAL

1) Disconnect the ground cable from battery.

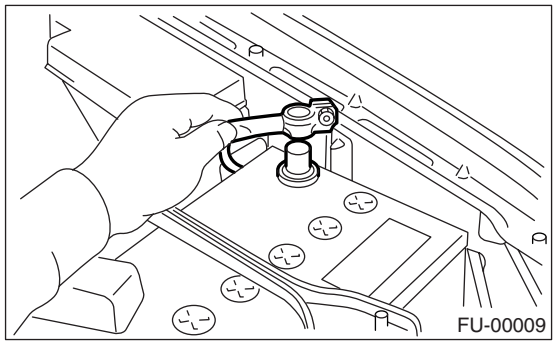

2) Lift-up the vehicle.
3) Remove the under cover.
4) Disconnect the connector of main fan motor (A).

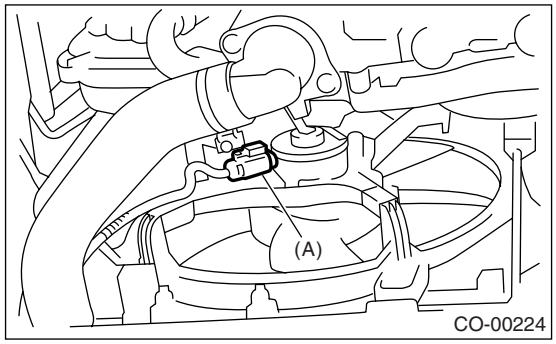

5) Lower the vehicle.
6) Remove the air intake duct.

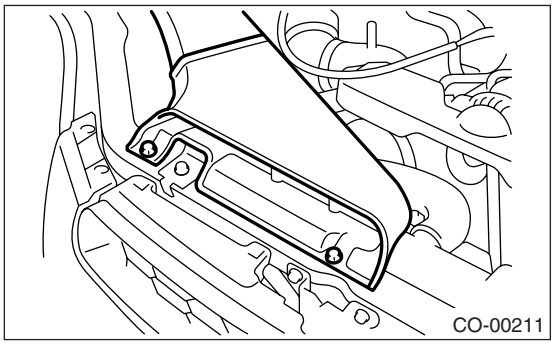

7) Disconnect the overflow hose.
8) Remove the overflow pipe.
9) Remove the reservoir tank. <Ref. to CO(H4DOTC)-32, REMOVAL, Reservoir Tank.>
10) Remove the radiator main fan motor assembly.

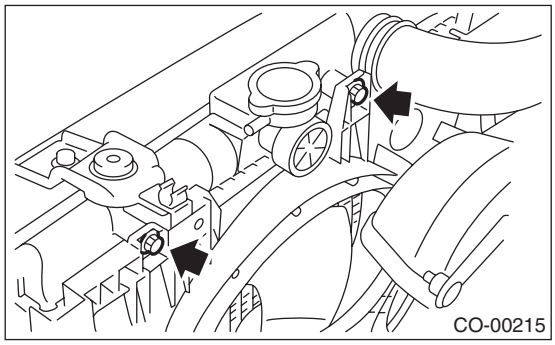

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
When the main fan motor assembly cannot be installed as is, loosen the sub fan motor assembly securing bolts to install it.

Tightening torque:
4.9 N·m (0.50 kgf-m, 3.6 ft-lb)

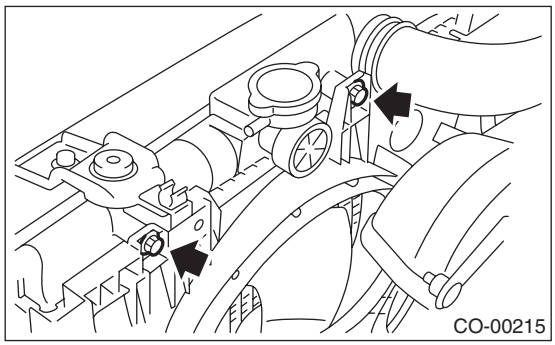

C: DISASSEMBLY

1) Remove the nut which holds the fan itself onto fan motor and shroud assembly.

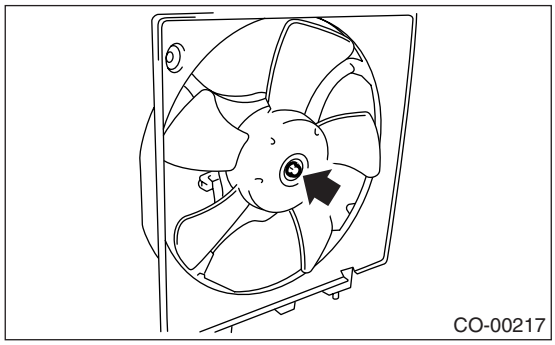

2) Remove the bolts which install the fan motor onto shroud.

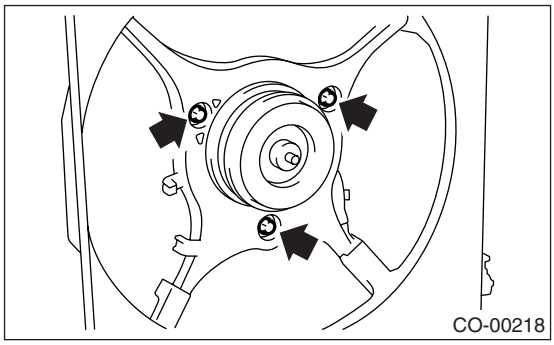
CO-00218

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

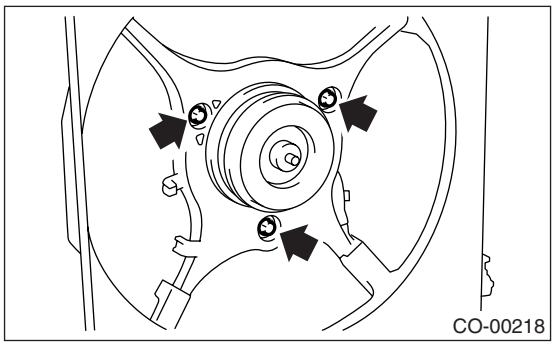
CO-00218

Tightening torque:
3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

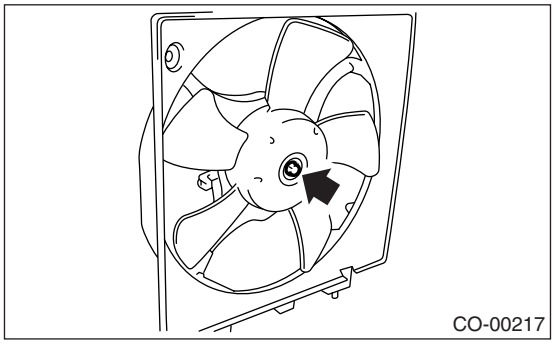
CO-00217

10. Radiator Sub Fan and Fan Motor

A: REMOVAL

1) Disconnect the ground cable from battery.

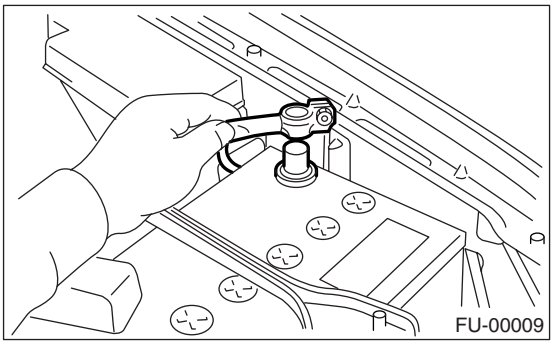

2) Lift-up the vehicle.
3) Remove the under cover.
4) Disconnect the connector of sub fan motor (B).

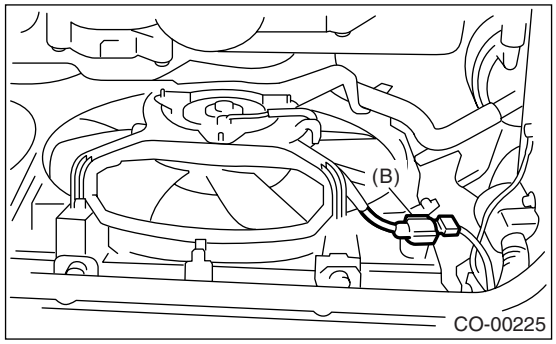

5) Lower the vehicle.
6) Remove the air intake duct.

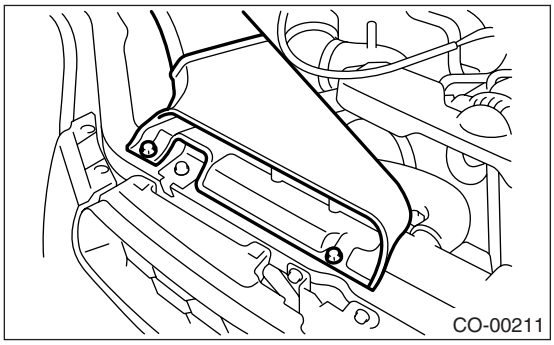

7) Remove the bolts which hold the sub fan shroud to radiator.
8) Remove the overflow pipe.
9) Remove the radiator sub fan shroud through the under side of vehicle.

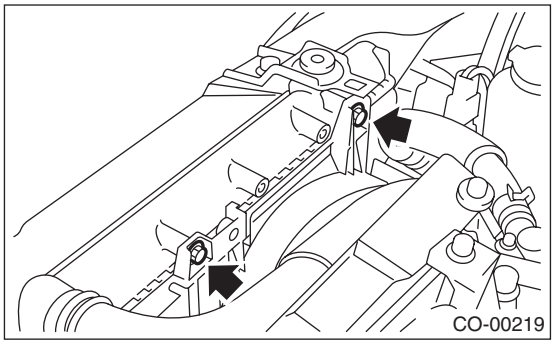

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
4.9 N·m (0.50 kgf-m, 3.6 ft-lb)

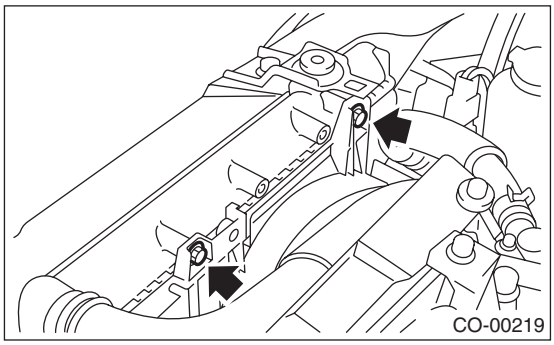

C: DISASSEMBLY

1) Remove the clip which holds the motor harness onto shroud.

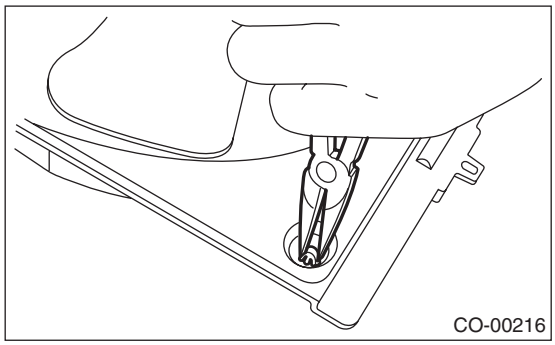

2) Remove the nut which holds the fan itself onto fan motor and shroud assembly.

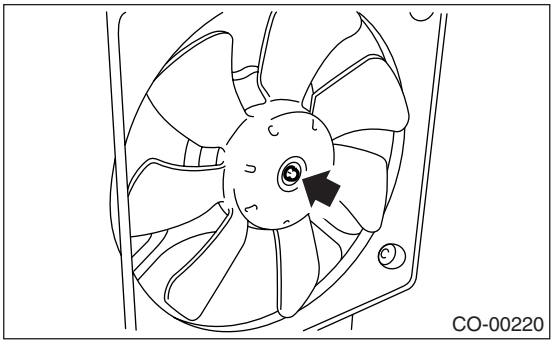

3) Remove the bolts which install the fan motor onto shroud.

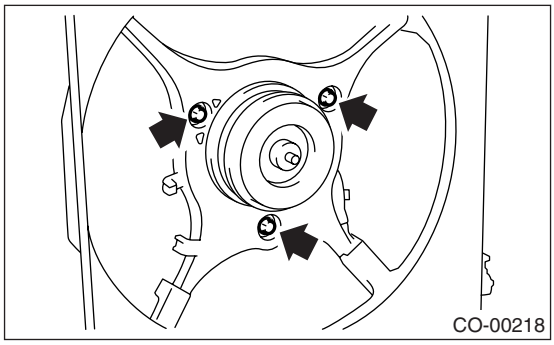

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:
4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

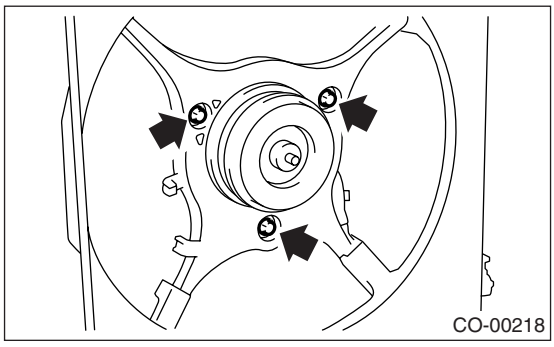

Tightening torque:
3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

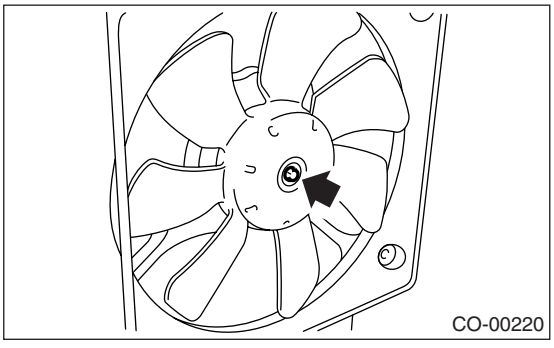

11.Reservoir Tank

A: REMOVAL

1) Disconnect the overflow hose from the radiator filler neck position.
2) Pull out the reservoir tank to direction of arrow while pushing the pawl (A).

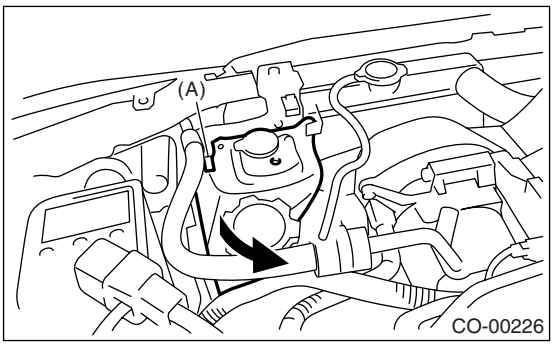

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Refer to COMPONENT for tightening torque. <Ref. to CO(H4DOTC)-3, COMPONENT, General Description.>

C: INSPECTION

Make sure the engine coolant level is between full and low.

12.Coolant Filler Tank

A: REMOVAL

WARNING:
The radiator is pressurized. Wait until the engine cools down before working on the radiator.

1) Drain the coolant about 3.0 ℓ (3.2 US qt, 2.6 Imp qt). <Ref. to CO(H4DOTC)-17, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
2) Remove the air cleaner upper cover and air intake boot. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
3) Remove the air cleaner element.
4) Disconnect the engine coolant hoses from coolant filler tank.

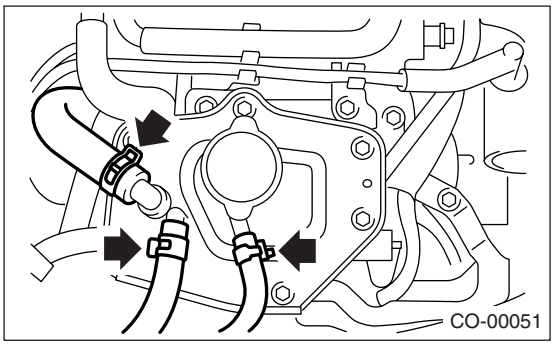

5) Remove the bolts and nut which install the coolant filler tank.
6) Disconnect the engine coolant hose which connects the under side of coolant filler tank.
7) Remove the coolant filler tank.

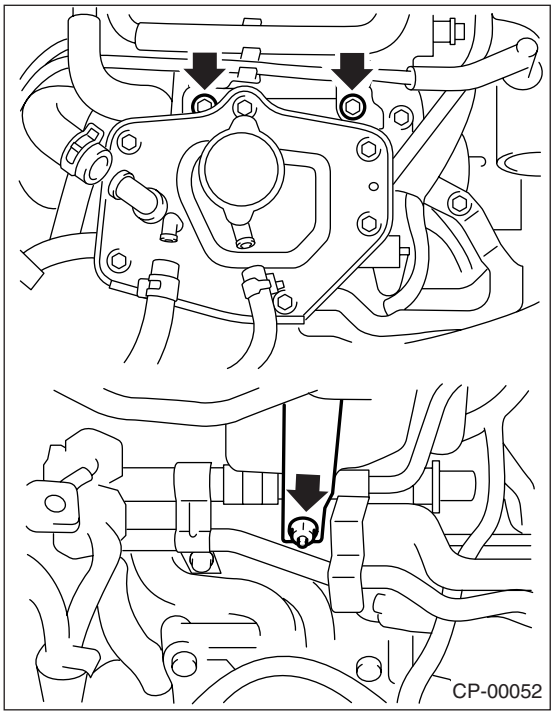

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:
T1: 16 N·m (1.6 kgf-m, 11.8 ft-lb)
T2: 13 N·m (1.3 kgf-m, 9.6 ft-lb)

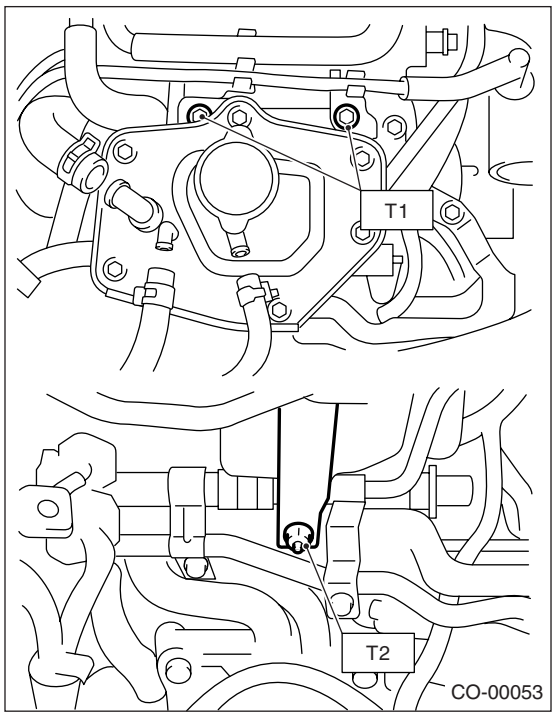

2) Fill engine coolant. <Ref. to CO(H4DOTC)-17, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

13.Engine Cooling System Trouble in General

A: INSPECTION

Trouble	Possible cause	Corrective action
Over-heating	a. Insufficient engine coolant	Replenish the engine coolant, inspect for leakage, and repair.
	b. Loose timing belt	Repair or replace the timing belt tensioner.
	c. Oil on drive belt	Replace.
	d. Malfunction of thermostat	Replace.
	e. Malfunction of water pump	Replace.
	f. Clogged engine coolant passage	Clean.
	g. Improper ignition timing	Inspect and repair the ignition control system. <Ref. to EN(H4DOTC)-2, PROCEDURE, Basic Diagnostic Procedure.>
	h. Clogged or leaking radiator	Clean or repair, or replace.
	i. Improper engine oil in engine coolant	Replace the engine coolant.
	j. Air/fuel mixture ratio too lean	Inspect and repair the fuel injection system. <Ref. to EN(H4DOTC)-2, PROCEDURE, Basic Diagnostic Procedure.>
	k. Excessive back pressure in exhaust system	Clean or replace.
	l. Insufficient clearance between piston and cylinder	Adjust or replace.
	m. Slipping clutch	Repair or replace.
	n. Dragging brake	Adjust.
	o. Defective thermostat	Replace.
	p. Malfunction of radiator fan	Inspect the radiator fan relay, engine coolant temperature sensor or radiator motor and replace there.
Over-cooling	a. Atmospheric temperature extremely low	Partly cover the radiator front area.
	b. Defective thermostat	Replace.
Engine coolant leaks.	a. Loosened or damaged connecting units on hoses	Repair or replace.
	b. Leakage from water pump	Replace.
	c. Leakage from water pipe	Repair or replace.
	d. Leakage around cylinder head gasket	Retighten the cylinder head bolts or replace gasket.
	e. Damaged or cracked cylinder head and crankcase	Repair or replace.
	f. Damaged or cracked thermostat case	Repair or replace.
	g. Leakage from radiator	Repair or replace.
Noise	a. Defective drive belt	Replace.
	b. Defective radiator fan	Replace.
	c. Defective water pump bearing	Replace the water pump.
	d. Defective water pump mechanical seal	Replace the water pump.

LUBRICATION

LU(H4DOTC)

Page

1. General Description 2
2. Oil Pressure System 6
3. Engine Oil....8
4. Oil Pump 10
5. Oil Pan and Strainer....14
6. Oil Pressure Switch....18
7. Engine Oil Cooler....19
8. Engine Oil Filter....20
9. Engine Lubrication System Trouble in General....21

1. General Description

A: SPECIFICATIONS

Lubrication method				Forced lubrication
Oil pump	Pump type			Trochoid type
	Number of teeth	Inner rotor		9
		Outer rotor		10
	Outer rotor diameter × thickness			78 × 10 mm (3.07 × 0.39 in)
	Tip clearance between inner and outer rotor		STANDARD	0.04 — 0.14 mm (0.0016 — 0.0055 in)
			LIMIT	0.18 mm (0.0071 in)
	Side clearance between inner rotor and pump case		STANDARD	0.02 — 0.07 mm (0.0008 — 0.0028 in)
			LIMIT	0.12 mm (0.0047 in)
	Case clearance between outer rotor and pump case		STANDARD	0.10 — 0.175 mm (0.0039 — 0.0069 in)
			LIMIT	0.20 mm (0.0079 in)
	Capacity at 80°C (176°F)	600 rpm	Discharge pressure	98 kPa (1.0 kg/cm^2, 14 psi)
			Discharge quantity	4.6 ℓ (4.9 US qt, 4.0 Imp qt)/min.
		5,000 rpm	Discharge pressure	294 kPa (3.0 kg/cm^2, 43 psi)
			Discharge quantity	47.0 ℓ (49.7 US qt, 41.4 Imp qt)/min.
	Relief valve operation pressure			588 kPa (6.0 kg/cm^2, 85 psi)
Oil filter	Type			Full-flow filter type
	Filtration area			760 cm^2 (118 sq in)
	By-pass valve opening pressure			157 kPa (1.60 kg/cm^2, 22.8 psi)
	Outer diameter × width			80 × 70 mm (3.15 × 2.76 in)
	Oil filter to engine thread size			M 20 × 1.5
Oil pressure switch	Type			Immersed contact point type
	Working voltage — wattage			12 V — 3.4 W or less
	Warning light activation pressure			14.7 kPa (0.15 kg/cm^2, 2.1 psi)
	Proof pressure			More than 981 kPa (10 kg/cm^2, 142 psi)
Oil capacity (at replacement)				4.5 ℓ (4.8 US qt, 4.0 Imp qt)

B: COMPONENT

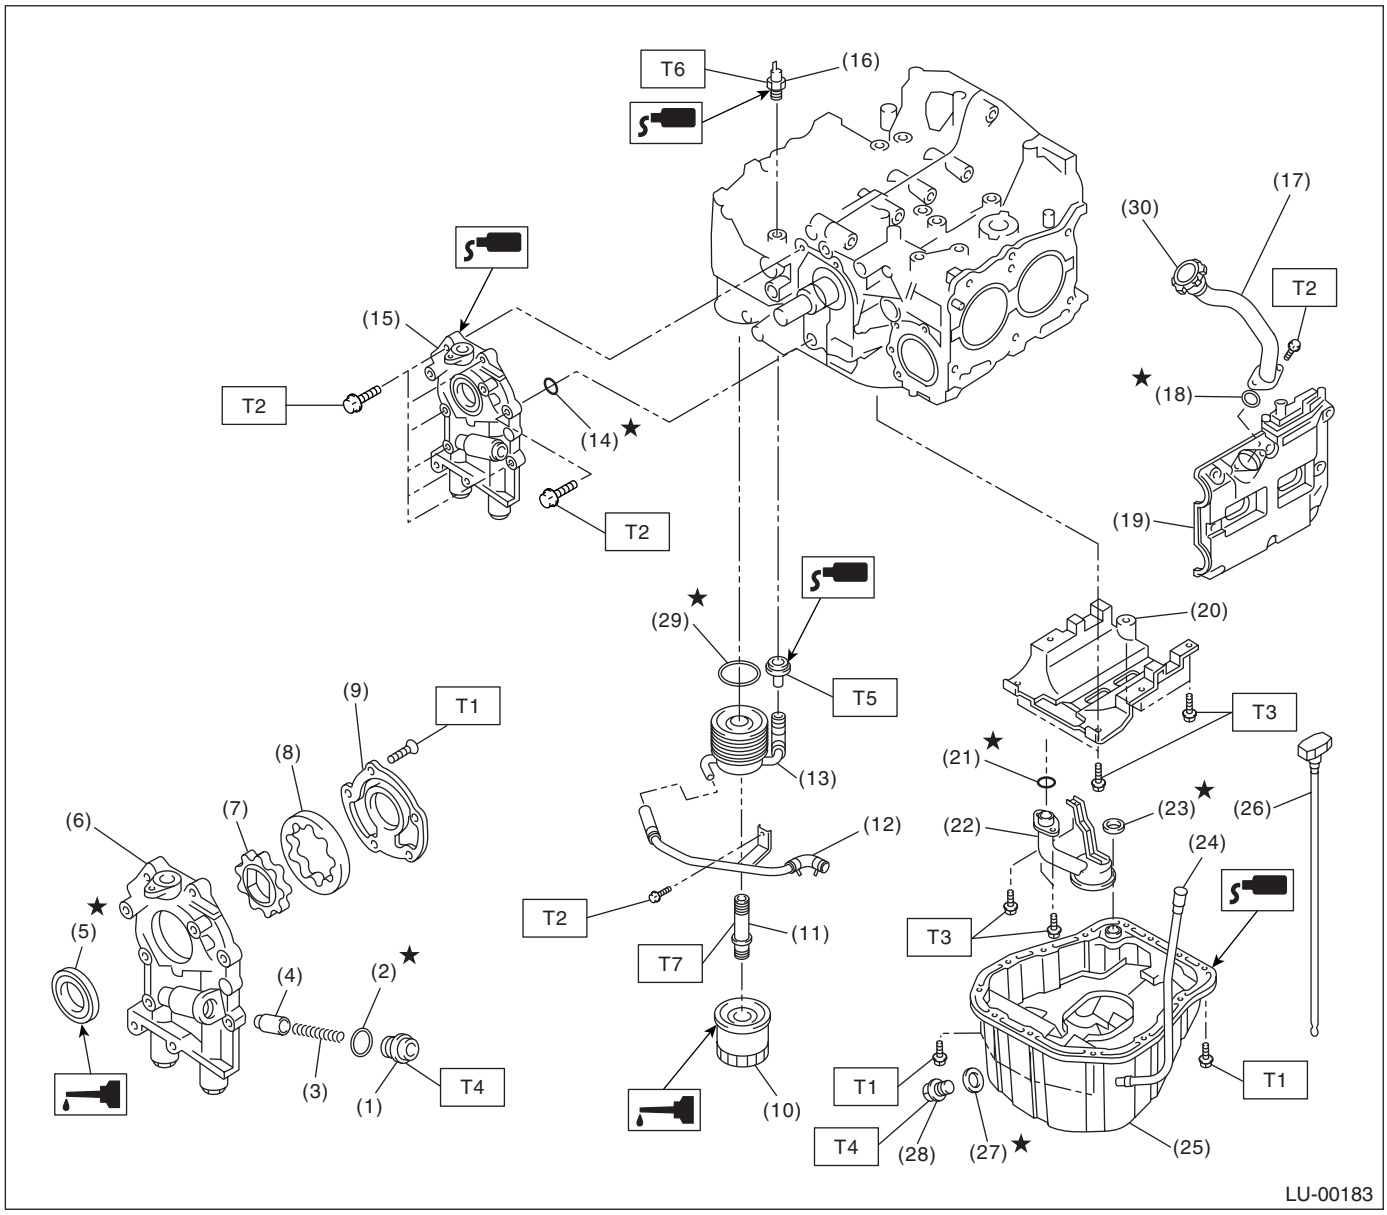

(1) Plug
(2) Gasket
(3) Relief valve spring
(4) Relief valve
(5) Oil seal
(6) Oil pump case
(7) Inner rotor
(8) Outer rotor
(9) Oil pump cover
(10) Oil filter
(11) Oil cooler connector (Model with oil cooler)
(12) Water by-pass pipe (Model with oil cooler)
(13) Oil cooler (Model with oil cooler)
(14) O-ring
(15) Oil pump ASSY
(16) Oil pressure switch
(17) Oil filler duct
(18) O-ring
(19) Rocker cover
(20) Baffle plate
(21) O-ring
(22) Oil strainer
(23) Gasket
(24) Oil level gauge guide
(25) Oil pan
(26) Oil level gauge
(27) Metal gasket
(28) Drain plug
(29) O-ring
(30) Oil filler cap

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5 (0.5, 3.6)
T2: 6.4 (0.65, 4.7)
T3: 10 (1.0, 7.0)
T4: 44 (4.5, 32.5)
T5: 69 (7.0, 50.9)
T6: 25 (2.5, 18.1)
T7: 54 (5.5, 40)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part in the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
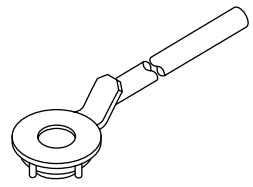 ST-499977400	499977400	CRANKSHAFT PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolt.
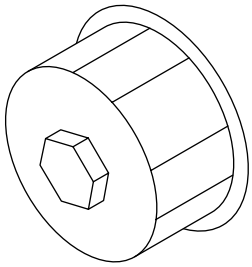 ST-498547000	498547000	OIL FILTER WRENCH	Used for removing and installing oil filter.
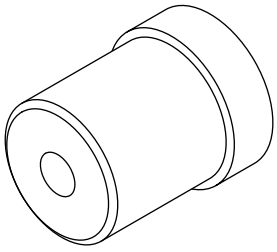 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.

2. Oil Pressure System

A: SCHEMATIC

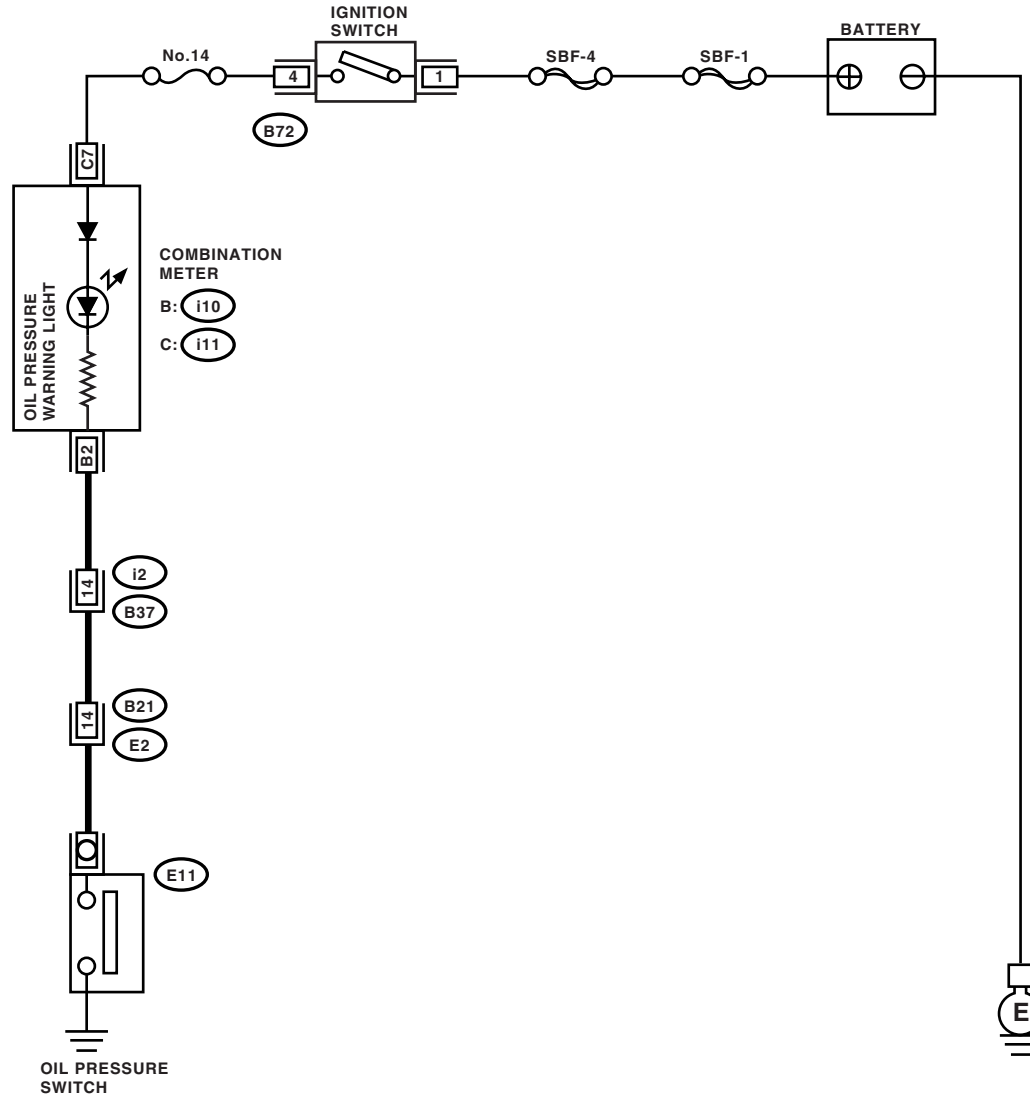

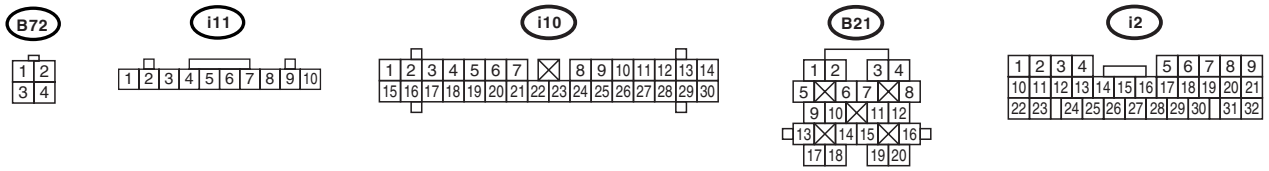

LU-00207

B: INSPECTION

	Step	Check	Yes	No
1	**CHECK COMBINATION METER.** 1)Turn the ignition switch to ON. (engine OFF) 2)Check other warning lights.	Does the warning lights go on?	Go to step **2.**	Repair or replace the combination meter. <Ref. to IDI-3, INSPECTION, Combination Meter System.>
2	**CHECK HARNESS CONNECTOR BETWEEN COMBINATION METER AND OIL PRESSURE SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from oil pressure switch. 3)Turn the ignition switch ON. 4)Measure the voltage of harness between the combination meter connector and chassis ground. ***Connector & terminal*** ***(E11) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Replace the oil pressure switch.	Go to step **3.**
3	**CHECK COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Measure the resistance of combination meter. ***Terminals*** ***No. C7 — No. B2:***	Is the resistance less than 10 Ω?	Replace the harness connector between combination meter and oil pressure switch.	Repair or replace the combination meter.

3. Engine Oil

A: INSPECTION

1) Park the vehicle on a level surface.
2) Remove the oil level gauge and wipe it clean.
3) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in proper orientation.
4) Remove it again and note the reading. If the engine oil level is below the “L” line, add oil to bring the level up to “F” line.
5) After turning off the engine, wait a few minutes for oil to drain back into the oil pan before checking the level.
6) Just after driving or while the engine is warm, engine oil level may show in the range between the “F” line and notch mark. This is caused by thermal expansion of engine oil.

NOTE:
To prevent overfilling the engine oil, do not add oil above “F” line when the engine is cold.

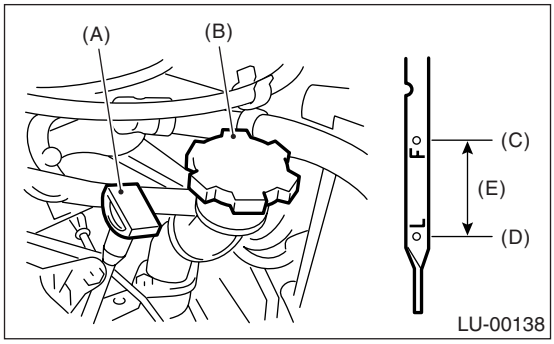

(A) Oil level gauge
(B) Engine oil filler cap
(C) Upper level
(D) Lower level
(E) Approx. 1.0 ℓ (1.1 US qt, 0.9 Imp qt)

B: REPLACEMENT

1) Open the engine oil filler cap for quick draining of engine oil.
2) Remove the clips of service hole cover.

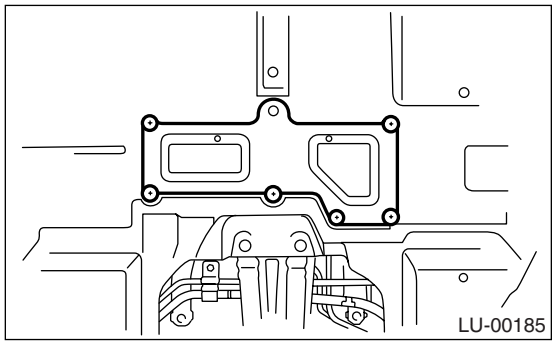

3) Drain the engine oil by loosening the engine oil drain plug.

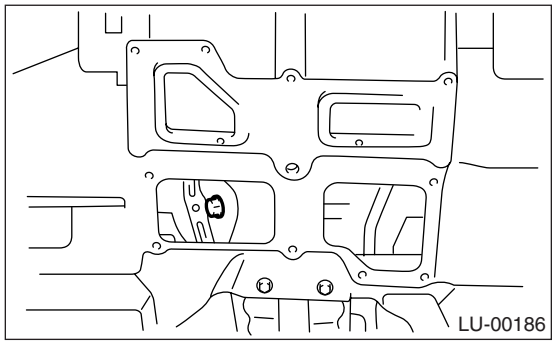

4) Replace the drain plug gasket.
5) Tighten the engine oil drain plug after draining engine oil.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

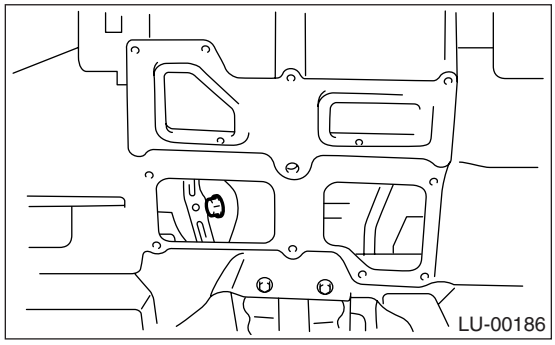

6) Install the service hole cover.
7) Fill engine oil through the filler pipe up to upper level on level gauge. Make sure that the vehicle is placed level when checking oil level. Use the engine oil of proper quality and viscosity, selected in accordance with the table in figure.

Recommended oil
API classification
SL or SJ or SH with the words "Energy Conserving or Energy conserving II", CCMC specification G4 or G5, ACEA specification A1, A2 or A3, or New API mark displayed on the container (If it is impossible to get SL or SJ or SH grade, you may use SG grade.)

Engine oil capacity:
Upper level
4.5 ℓ (4.8 US qt, 4.0 Imp qt)
Lower level
3.5 ℓ (3.7 US qt, 3.1 Imp qt)

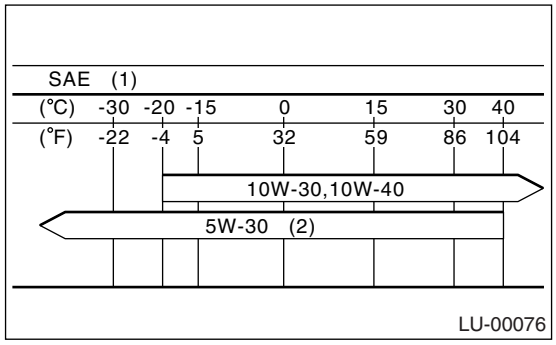

(1) SAE Viscosity No. and Applicable Temperature
(2) PREFERRED

The proper viscosity helps vehicle get good cold and hot starting by reducing viscous friction and thus increasing cranking speed.

CAUTION:
When replenishing oil, it does not matter if the oil to be added is a different brand from that in the engine; however, use oil having the API classification and SAE viscosity No. designated by SUBARU.

NOTE:
If the vehicle is used in areas with very high temperatures or for other heavy duty applications, the following viscosity oils may be used: API classification: SL or SJ or SH
SAE Viscosity No.: 30, 40, 10W-50, 20W-40, 20W-50.

8) Close the engine oil filler cap.
9) Start the engine and warm it up for a time.
10) After the engine stops, recheck the oil level. If necessary, add engine oil up to the upper level on level gauge.

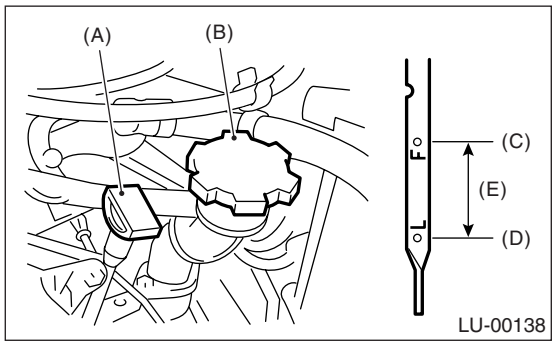

(A) Oil level gauge
(B) Engine oil filler cap
(C) Upper level
(D) Lower level
(E) Approx. 1.0 ℓ (1.1 US qt, 0.9 Imp qt)

4. Oil Pump

A: REMOVAL

1) Disconnect the ground cable from battery.

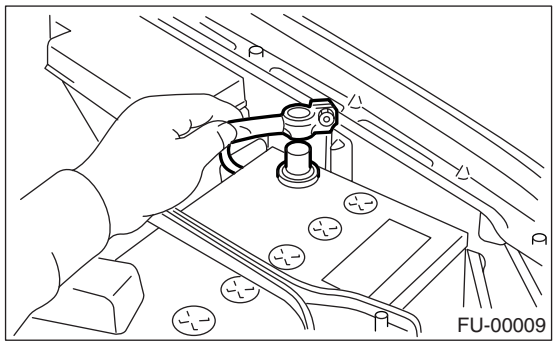

2) Lift-up the vehicle.
3) Remove the under cover.
4) Remove the bolts which install the water pipe of oil cooler to oil pump.

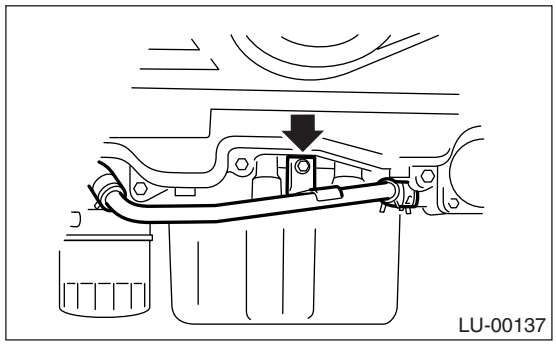

5) Remove the water pipe and hoses between oil cooler and water pump.

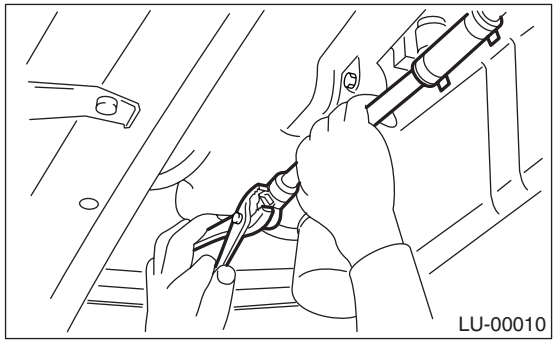

6) Remove the radiator. <Ref. to CO(H4SO)-21, REMOVAL, Radiator.>

7) Remove the crankshaft position sensor.

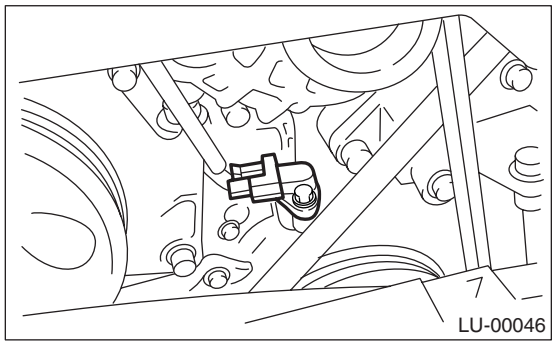

8) Remove the V-belts.
<Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
9) Remove the rear side V-belt tensioner.

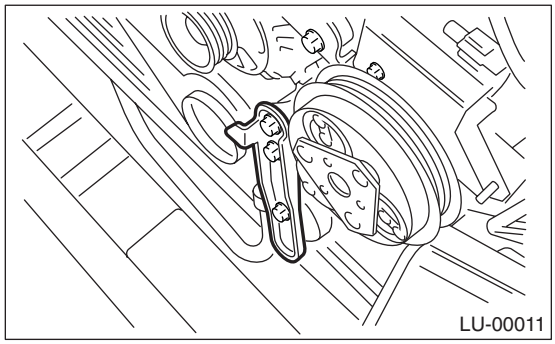

10) Remove the crankshaft pulley by using ST.
<Ref. to ME(H4DOTC)-58, REMOVAL, Crankshaft Pulley.>

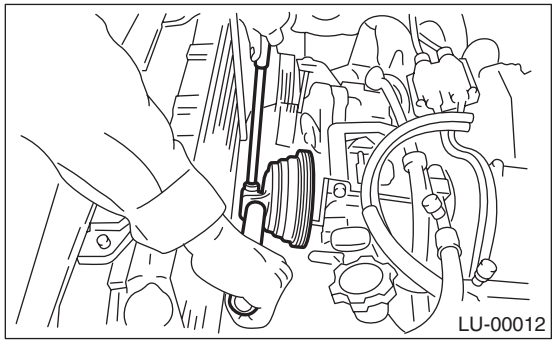

11) Remove the water pump. <Ref. to CO(H4SO)-16, REMOVAL, Water Pump.>
12) Remove the timing belt guide. (MT model)

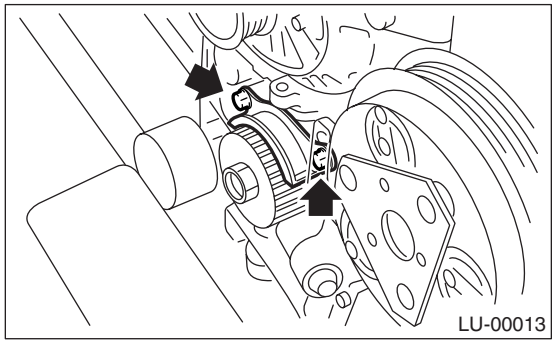

13) Remove the crankshaft sprocket.

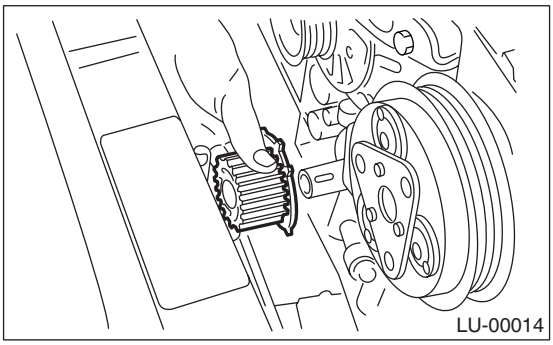

14) Remove the bolts which install the oil pump onto cylinder block.

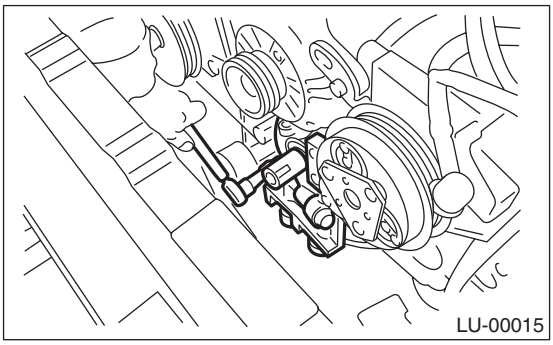

15) Remove the oil pump using the flat tip screwdriver.

CAUTION:
Be careful not to scratch the mating surfaces of cylinder block and oil pump.

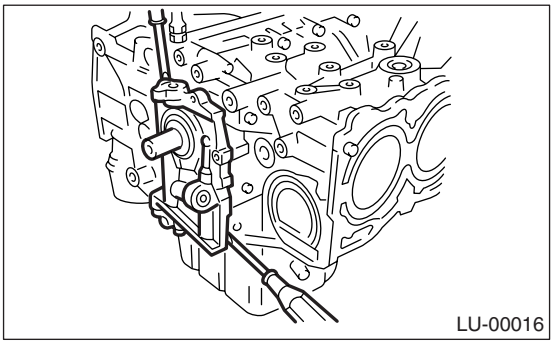

B: INSTALLATION

Install in the reverse order of removal.
Do the following:
1) Apply fluid packing to the matching surfaces of oil pump.

Fluid packing:
THREE BOND 1215 (Part No. 004403007) or equivalent

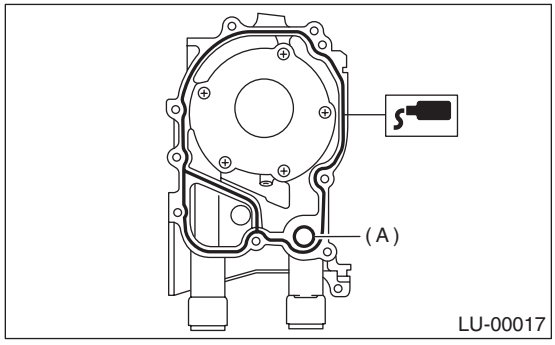

2) Replace the O-ring (A) with a new one.
3) Apply a coat of engine oil to the inside of oil seal.

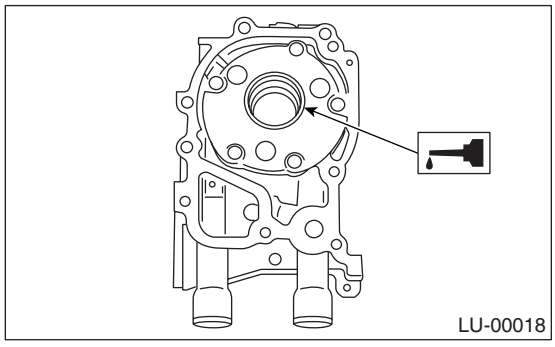

4) Be careful not to scratch the oil seal when installing the oil pump on cylinder block.
5) Position the oil pump, aligning the notched area with crankshaft, and push the oil pump straight.

CAUTION:
Make sure the oil seal lip is not folded.

6) Install the oil pump.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

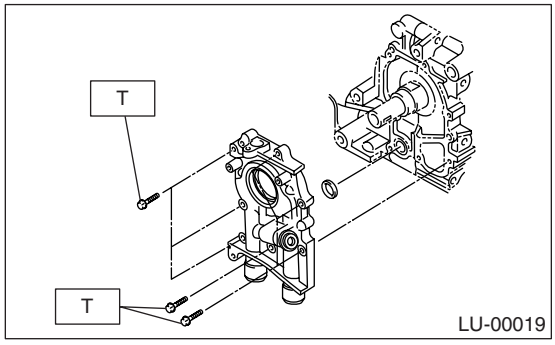

C: DISASSEMBLY

Remove the screws which secure the oil pump cover and disassemble oil pump. Inscribe alignment marks on the inner and outer rotors so that they can be replaced in their original positions during reassembly.

CAUTION:
Before disassembling the oil pump, remove the relief valve.

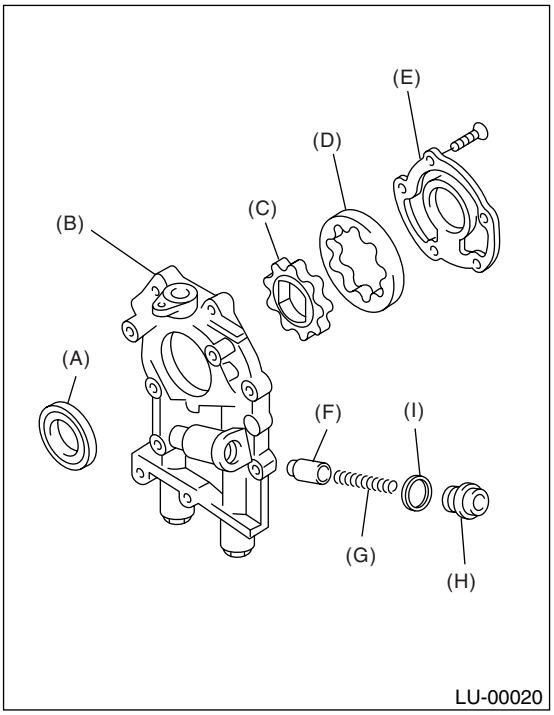

(A) Oil seal
(B) Pump case
(C) Inner rotor
(D) Outer rotor
(E) Pump cover
(F) Relief valve
(G) Relief valve spring
(H) Plug
(I) Gasket

D: ASSEMBLY

1) Install the front oil seal by using ST.
ST 499587100 OIL SEAL INSTALLER

NOTE:
Use a new oil seal.

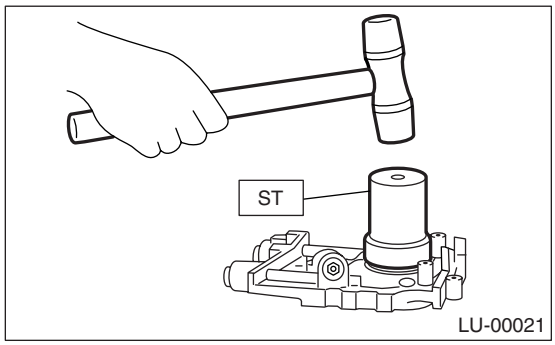

2) Apply a coat of engine oil to the inner and outer rotors.
3) Install the inner and outer rotors in their original positions.
4) Install the oil relief valve, relief valve spring and plug.

NOTE:
Use a new gasket.

5) Install the oil pump cover.

Tightening torque:
T1: 5 N·m (0.5 kgf-m, 3.6 ft-lb)
T2: 44 N·m (4.5 kgf-m, 32.5 ft-lb)

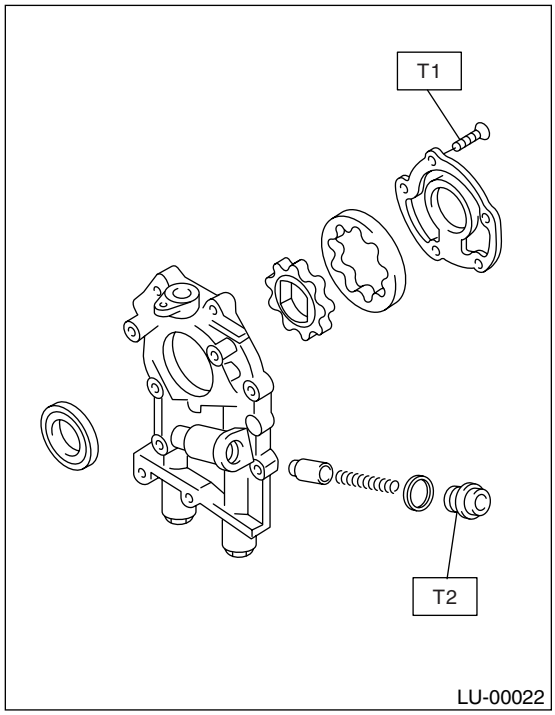

E: INSPECTION

1. TIP CLEARANCE

Measure the tip clearance of rotors. If clearance exceeds the limit, replace the rotors as a matched set.

Tip clearance:
Standard
0.04 — 0.14 mm (0.0016 — 0.0055 in)
Limit
0.18 mm (0.0071 in)

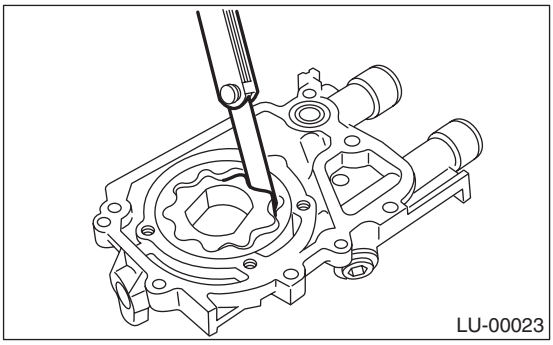

2. CASE CLEARANCE

Measure the clearance between outer rotor and oil pump rotor housing. If clearance exceeds the limit, replace the rotor.

Case clearance:
Standard
0.10 — 0.175 mm (0.0039 — 0.0069 in)
Limit
0.20 mm (0.0079 in)

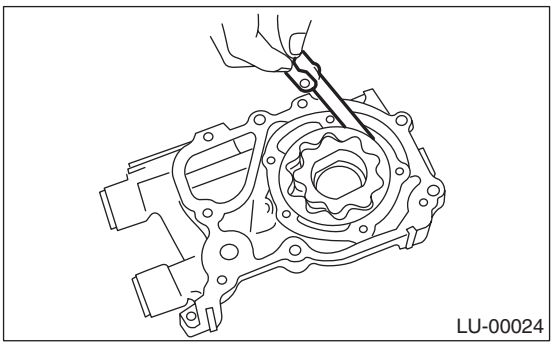

3. SIDE CLEARANCE

Measure the clearance between the oil pump inner rotor and pump cover. If clearance exceeds the limit, replace the rotor or pump body.

Side clearance:
Standard
0.02 — 0.07 mm (0.0008 — 0.0028 in)
Limit
0.12 mm (0.0047 in)

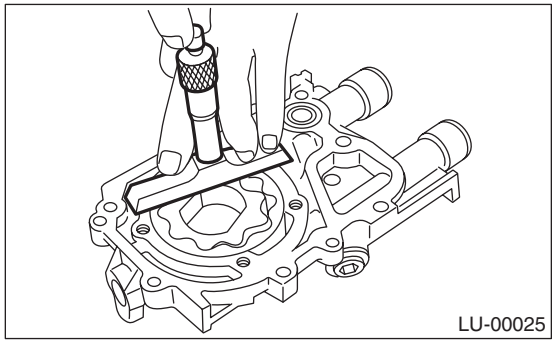

4. OIL RELIEF VALVE

Check the valve for fitting condition and damage, and the relief valve spring for damage and deterioration. Replace the parts if defective.

Relief valve spring:
Free length
73.7 mm (2.902 in)
Installed length
54.7 mm (2.154 in)
Load when installed
93.1 N (9.49 kgf, 20.88 lb)

5. OIL PUMP CASE

Check the oil pump case for worn shaft hole, clogged oil passage, worn rotor chamber, cracks, and other faults.

6. OIL SEAL

Check the oil seal lips for deformation, hardening, wear, etc. and replace if defective.

5. Oil Pan and Strainer

A: REMOVAL

1) Set the vehicle on a lift.
2) Remove the front wheels.
3) Disconnect the ground cable from battery.

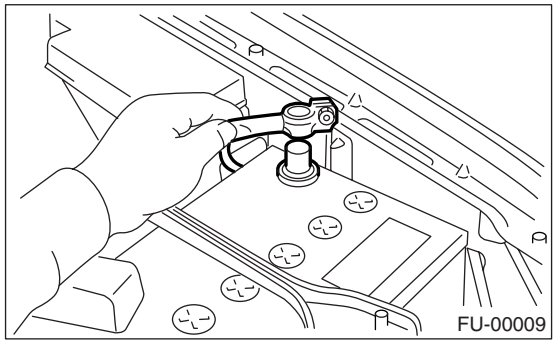

4) Disconnect the connector from mass air flow sensor.

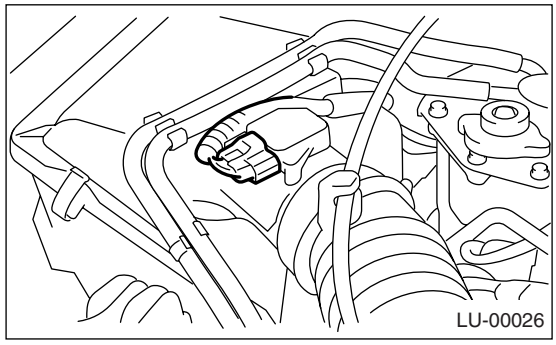

5) Remove the air intake boot and air cleaner upper cover.

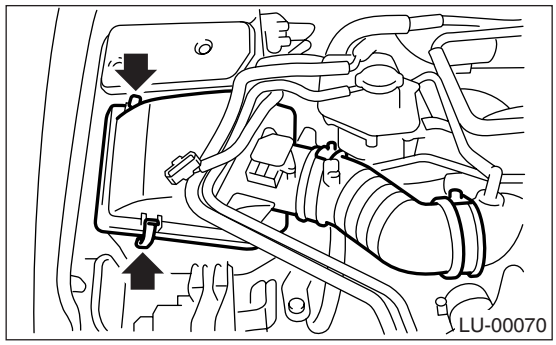

6) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>

7) Remove the pitching stopper.

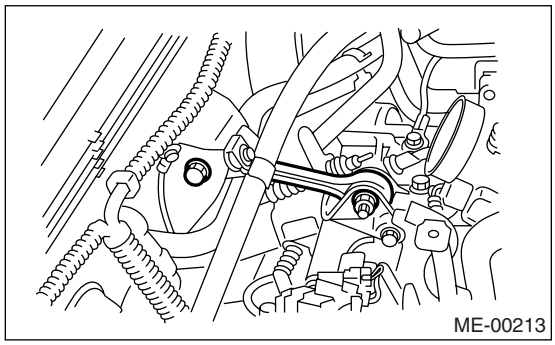

8) Remove the radiator upper brackets.

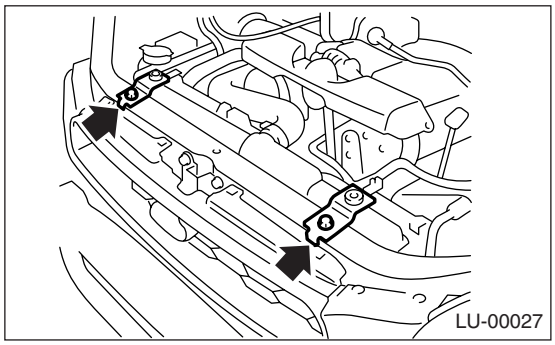

9) Support the engine with a lifting device and wire ropes.

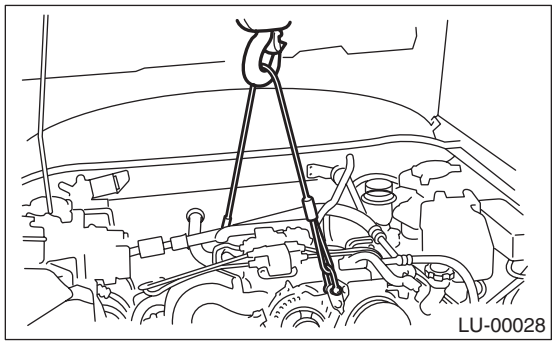

10) Lift-up the vehicle.

CAUTION:
When lifting up the vehicle, rise up the wire rope together.

11) Remove the under cover.
12) Drain the engine oil.

13) Remove the nuts which install the front cushion rubber onto front crossmember.

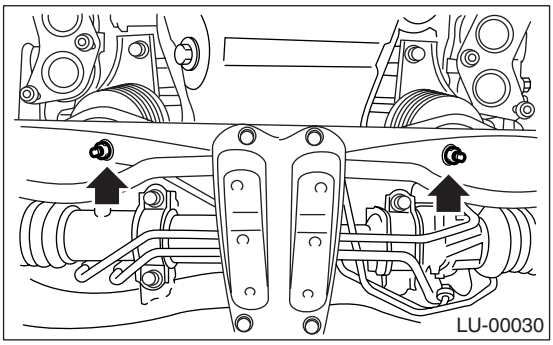

14) Remove the bolts which install the oil pan on cylinder block while raising up engine.
15) Insert the oil pan cutter blade between cylinder block-to-oil pan clearance.

CAUTION:
Do not use a screwdriver or similar tool in place of oil pan cutter.

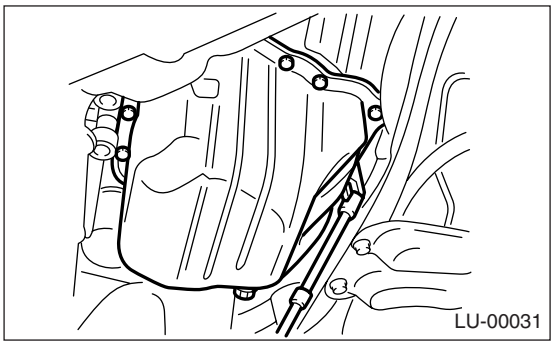

16) Remove the oil strainer.

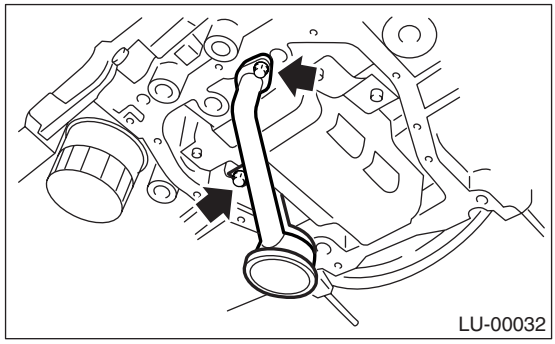

17) Remove the baffle plate.

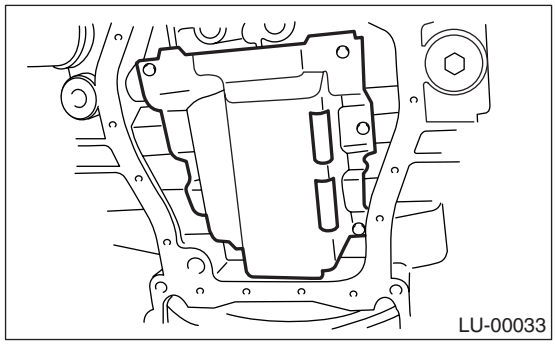

B: INSTALLATION

CAUTION:
Before installing the oil pan, clean sealant from oil pan and engine block.

1) Install the baffle plate.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

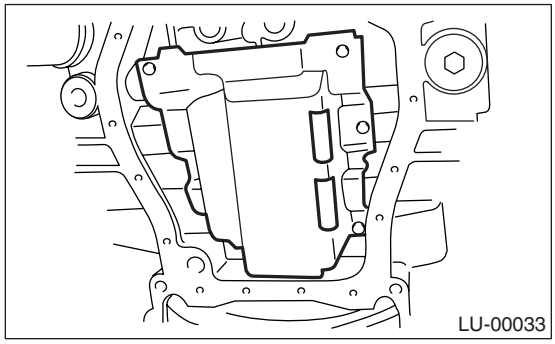

2) Install the oil strainer onto baffle plate.

NOTE:
Replace the O-ring with a new one.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

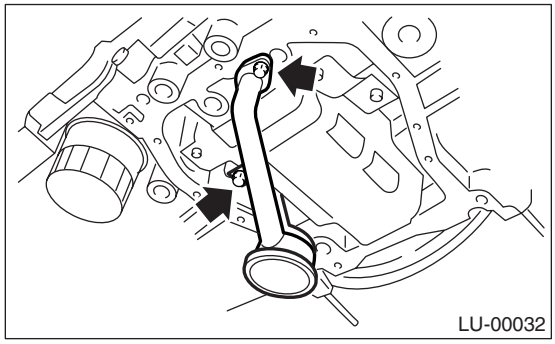

3) Apply fluid packing to the mating surfaces, and then install the oil pan.

Fluid packing:
THREE BOND 1215 (Part No. 004403007) or equivalent

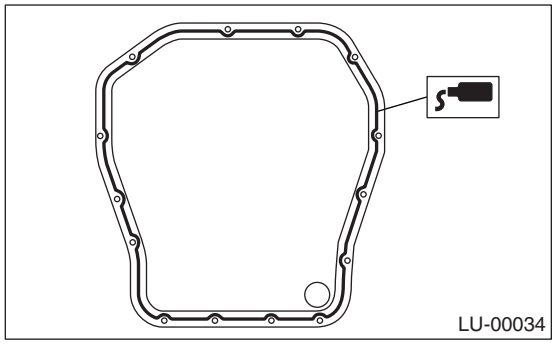

4) Tighten the bolts which install the oil pan onto engine block.

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

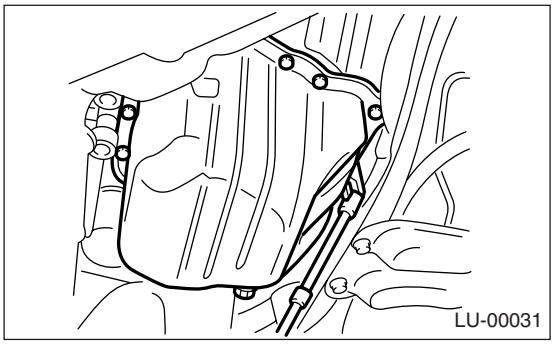

5) Lower the engine onto front crossmember.
6) Tighten the nuts which install the front cushion rubber onto front crossmember.

Tightening torque:
83 N·m (8.5 kgf-m, 61 ft-lb)

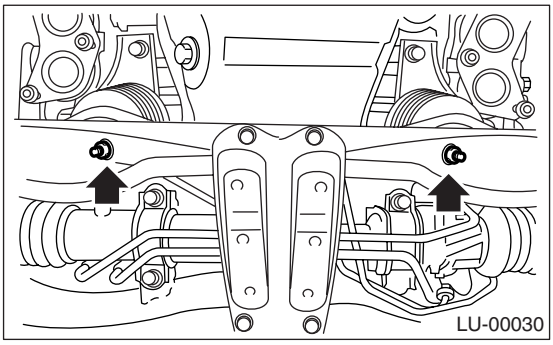

7) Install the under cover.
8) Lower the vehicle.

CAUTION:
When lowering the vehicle, lower the lifting device and wire rope together.

9) Remove the lifting device and steel cables.

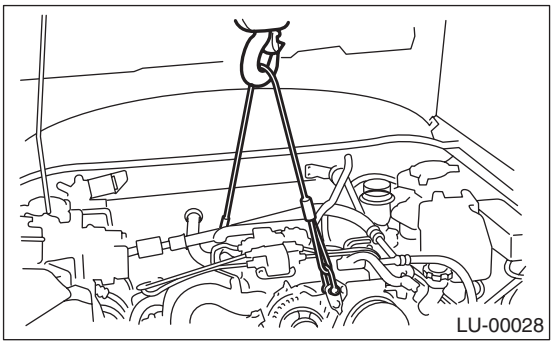

10) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 36.9 ft-lb)
T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)

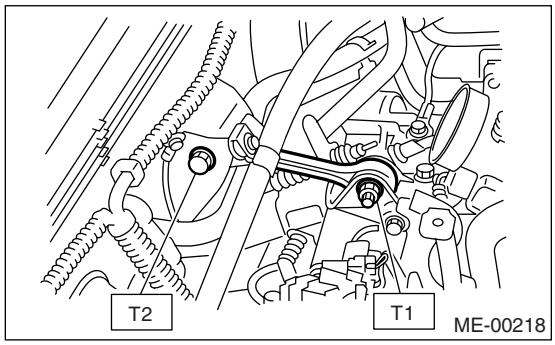

11) Install the radiator upper brackets.

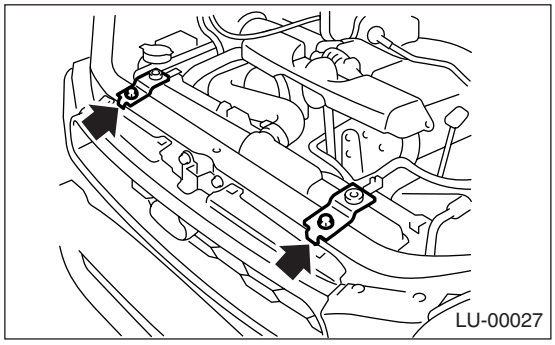

12) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
13) Install the air intake boot and air cleaner upper cover.

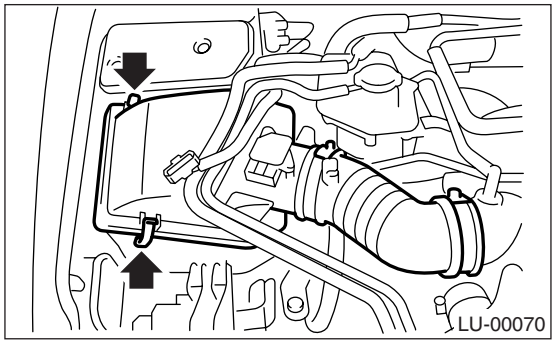

14) Connect the connector to mass air flow sensor.

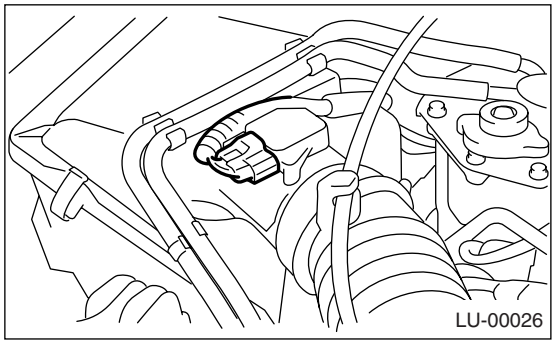

15) Install the front wheels.
16) Connect the battery ground cable to battery.

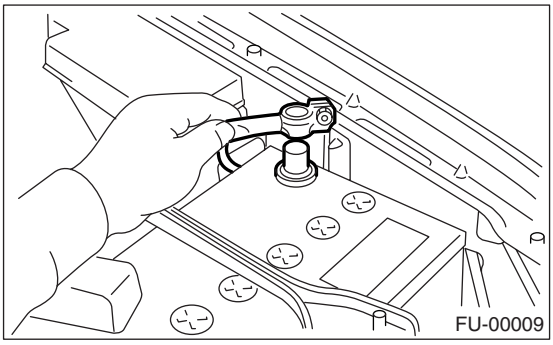

17) Fill engine oil. <Ref. to LU(H4DOTC)-8, INSPECTION, Engine Oil.>

C: INSPECTION

By visual check, make sure the oil pan, oil strainer, oil strainer stay and baffle plate are not damaged.

6. Oil Pressure Switch

A: REMOVAL

1) Remove the generator from bracket. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>
2) Disconnect the terminal from oil pressure switch.

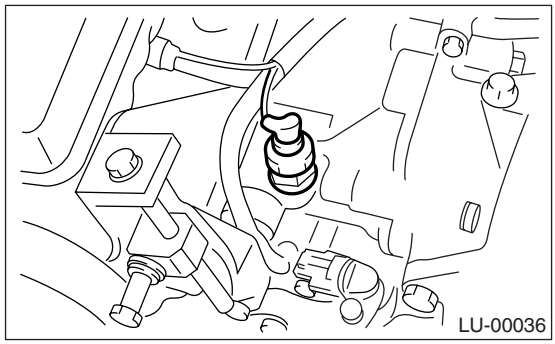

3) Remove the oil pressure switch.

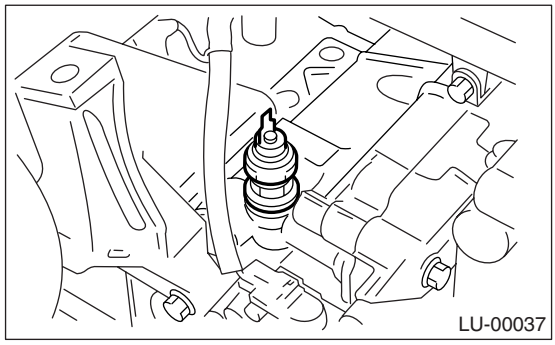

B: INSTALLATION

1) Apply fluid packing to the oil pressure switch threads.

Fluid packing:
THREE BOND 1324 (Part No. 004403007) or equivalent

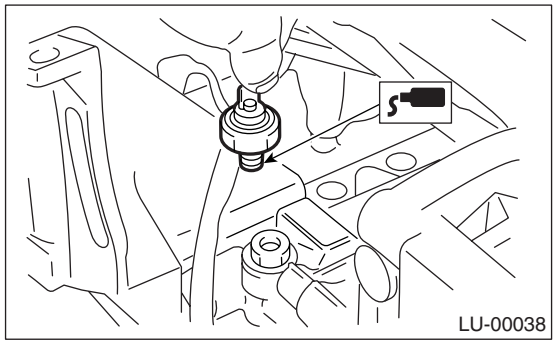

2) Install the oil pressure switch onto engine block.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

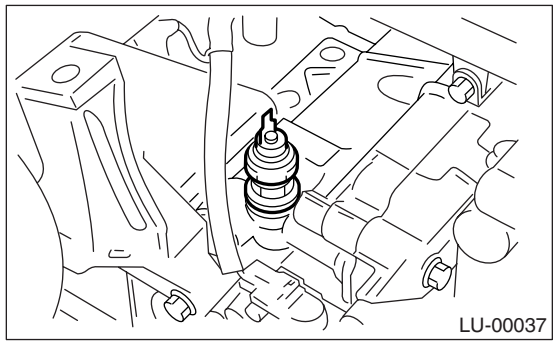

3) Connect the terminal of oil pressure switch.

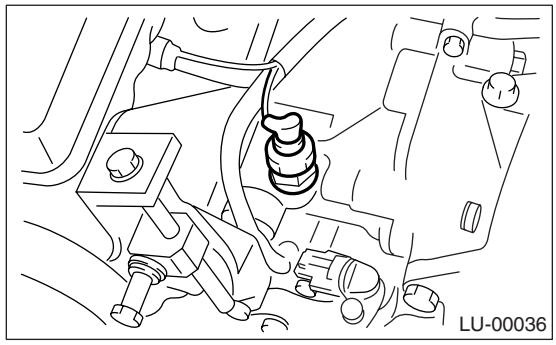

4) Install the generator on bracket. <Ref. to SC(H4SO)-14, INSTALLATION, Generator.>

C: INSPECTION

Make sure oil does not leak or seep from where the oil pressure switch is installed.

7. Engine Oil Cooler

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the under cover.
3) Drain the engine oil.
4) Drain the engine coolant.
5) Remove the water by-pass pipe between oil cooler and water pump.

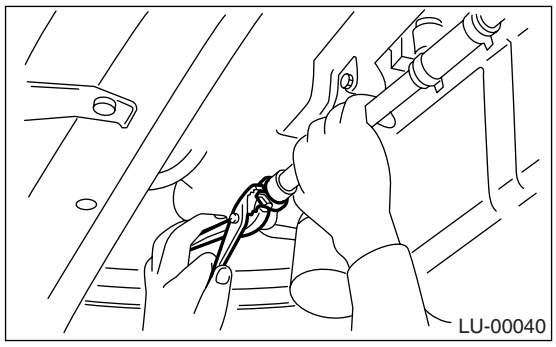

6) Remove the engine oil filter. <Ref. to LU(H4DOTC)-20, REMOVAL, Engine Oil Filter.>
7) Remove the connector, and then remove the oil cooler.

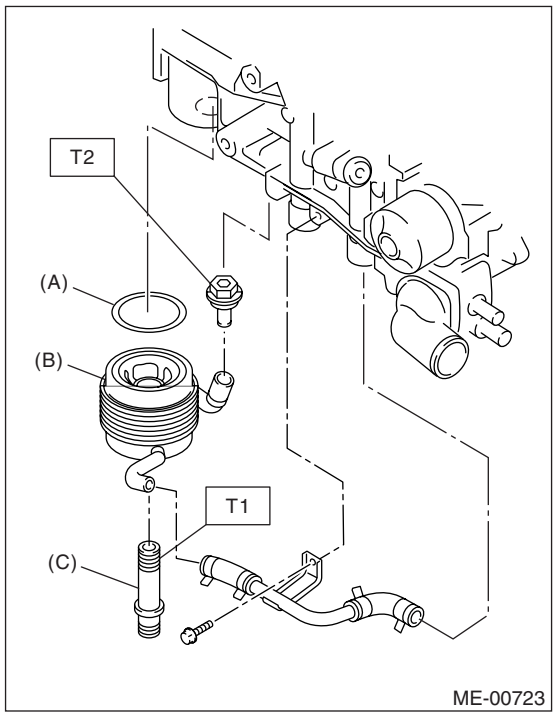

(A) O-ring
(B) Oil cooler
(C) Oil cooler connector

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:
T1: 54 N·m (5.5 kgf-m, 40 ft-lb)
T2: 69 N·m (7.0 kgf-m, 50.6 ft-lb)

NOTE:
Always use a new O-ring.

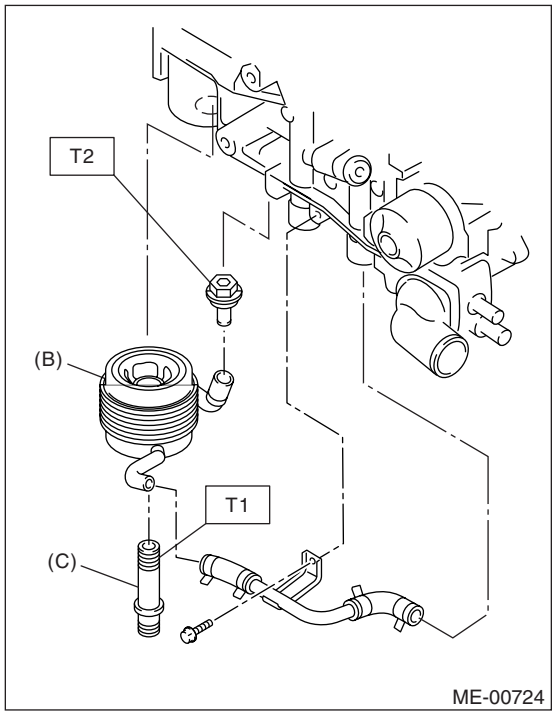

C: INSPECTION

1) Check the coolant passages are not clogged using air blow method.
2) Check the mating surfaces of cylinder block, O-ring groove and oil filter for damage.

8. Engine Oil Filter

A: REMOVAL

1) Remove the under cover.
2) Remove the oil filter with ST.
ST 498547000 OIL FILTER WRENCH

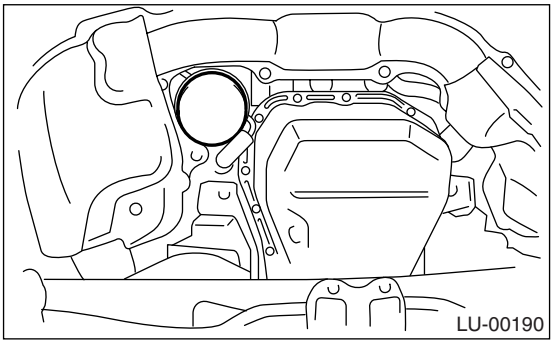

B: INSTALLATION

1) Get a new oil filter and apply a thin coat of engine oil to seal rubber.
2) Install the oil filter by turning it by hand, being careful not to damage seal rubber.
3) Tighten more (approx. 2/3 to 3/4 turn) after the seal rubber contacts the oil pump case. Do not tighten excessively, or oil may leak.

C: INSPECTION

1) After installing the oil filter, run the engine and make sure that no oil is leaking around seal rubber.

NOTE:
The filter element and filter case are permanently jointed; therefore, interior cleaning is not necessary.

2) Check the engine oil level. <Ref. to LU(H4DOTC)-8, INSPECTION, Engine Oil.>

9. Engine Lubrication System Trouble in General

A: INSPECTION

Before performing diagnostics, make sure that the engine oil level is correct and no oil leakage exists.

Trouble	Possible cause		Corrective action
1. Warning light remains on.	1) Oil pressure switch failure	Cracked diaphragm or oil leakage within switch	Replace.
		Broken spring or seized contacts	Replace.
	2) Low oil pressure	Clogged oil filter	Replace.
		Malfunction of oil by-pass valve of oil filter	Clean or replace.
		Malfunction of oil relief valve of oil pump	Clean or replace.
		Clogged oil passage	Clean.
		Excessive tip clearance and side clearance of oil pump rotor and gear	Replace.
		Clogged oil strainer or broken pipe	Clean or replace.
	3) No oil pressure	Insufficient engine oil	Replenish.
		Broken pipe of oil strainer	Replace.
		Stuck oil pump rotor	Replace.
2. Warning light does not go on.	1) Poor contact of switch contact points		Replace.
	2) Disconnection of wiring		Repair.
3. Warning light flickers momentarily.	1) Poor contact at terminals		Repair.
	2) Defective wiring harness		Repair.
	3) Low oil pressure		Check for the same possible causes as listed in 1. — 2).

SPEED CONTROL SYSTEMS

SP(H4DOTC)

Page

1. General Description 2

1. General Description

A: SPECIFICATION

Specifications for Turbo model is included in SP (H4SO) section. <Ref. to SP(H4SO)-2, General Description.>

IGNITION

IG(H4DOTC)

Page

1. General Description 2
2. Spark Plug.....4
3. Ignition Coil & Ignitor ASSY 7

1. General Description

A: SPECIFICATIONS

Item			Designation
Ignition coil & ignitor assembly	Model		FK0186
	Ignition type		Direct ignition
	Manufacturer		DIAMOND
Spark plug	Type and manufacturer		NGK: PFR6G
	Thread size	mm	14, P = 1.25
	Spark plug gap	mm (in)	0.7 — 0.8 (0.028 — 0.031)
	Electrode		Platinum

B: COMPONENT

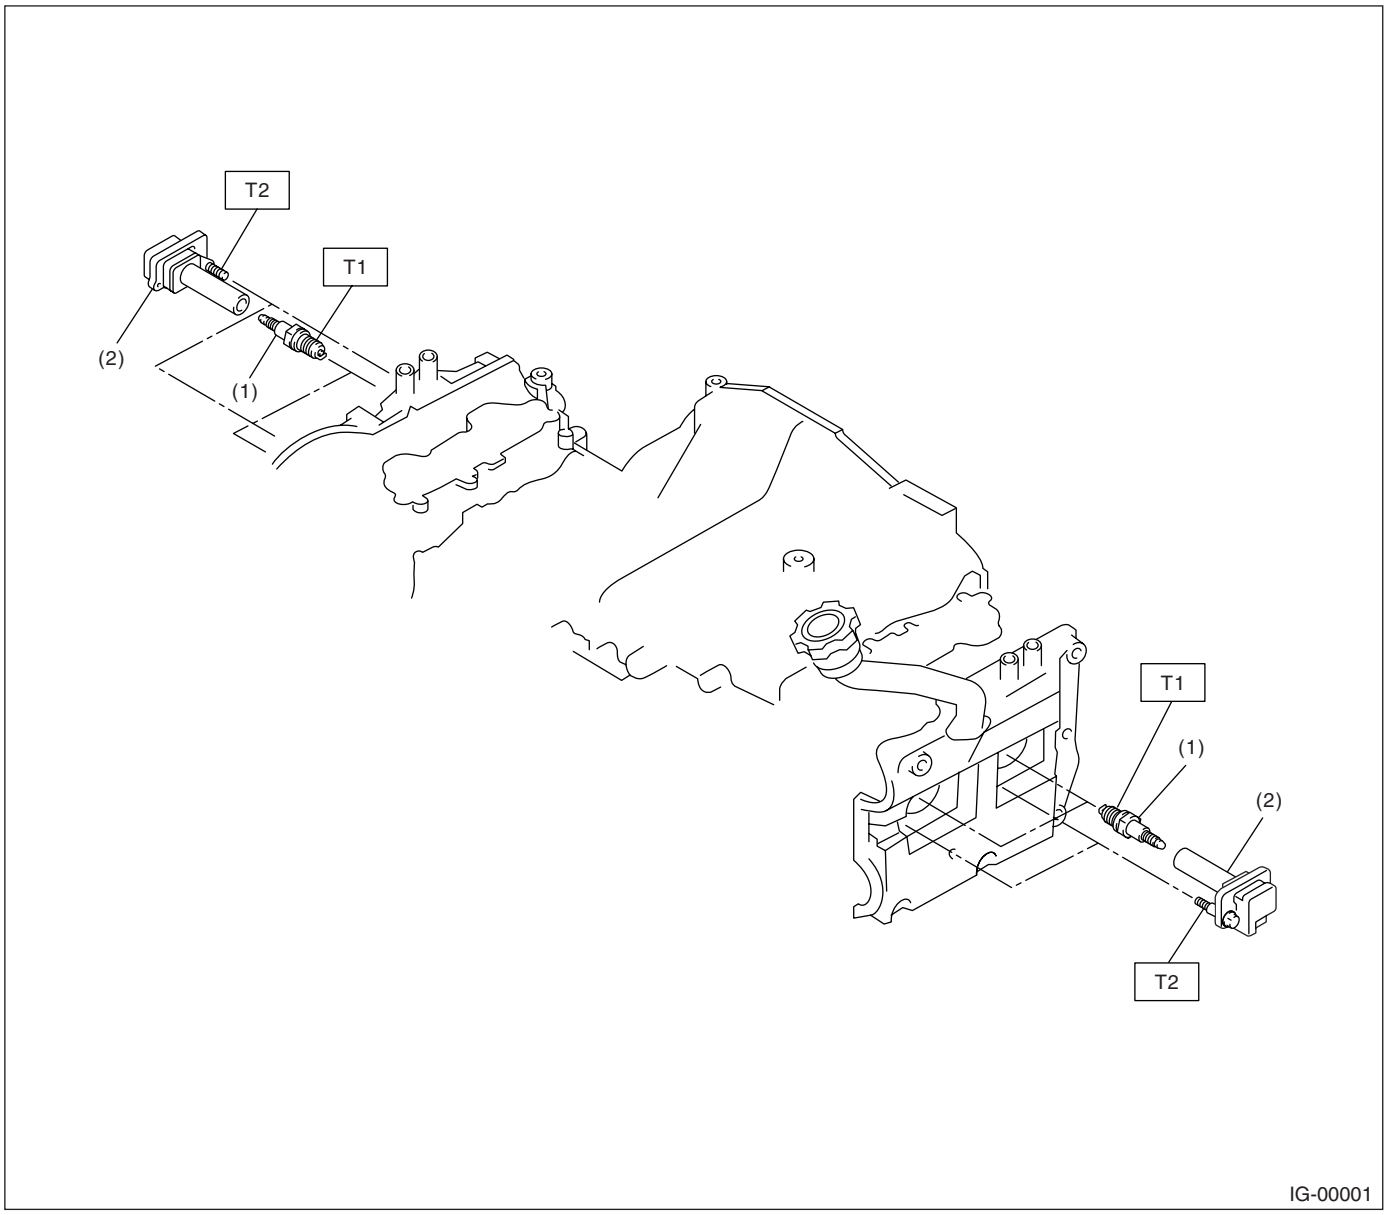

(1) Spark plug
(2) Ignition coil & ignitor ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T1: 21 (2.1, 15.2)
T2: 16 (1.6, 11.7)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.

2. Spark Plug

A: REMOVAL

CAUTION:
All spark plugs installed on an engine, must be of the same heat range.

Spark plug:
NGK: PFR6G

1. RH SIDE

1) Disconnect the ground cable from battery.

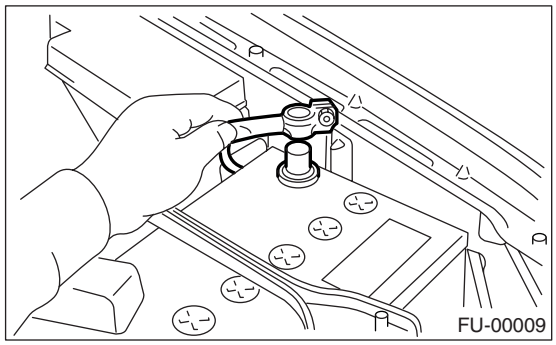

2) Remove the air cleaner lower case. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
3) Disconnect the connector from ignition coil.

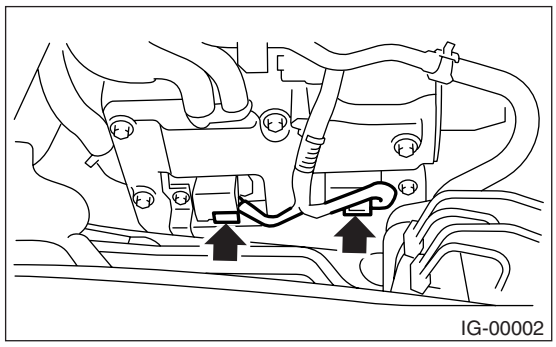

4) Remove the ignition coil.

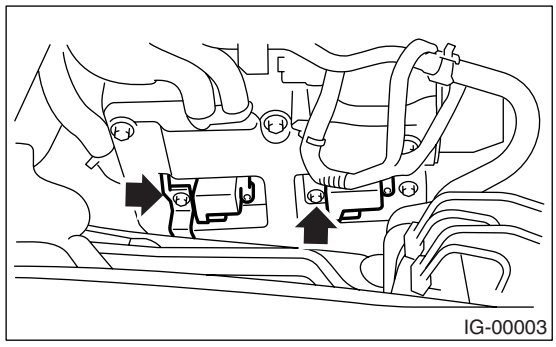

5) Remove the spark plugs with the spark plug sockets.

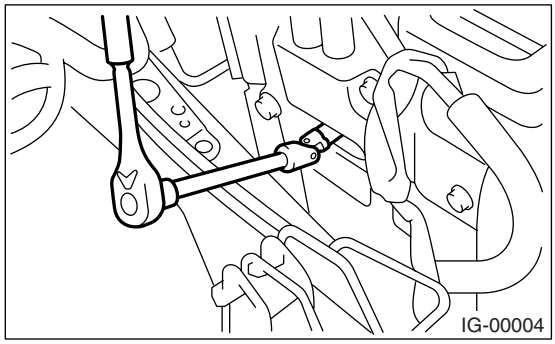

2. LH SIDE

1) Disconnect the battery cables, and then remove the battery and battery carrier.

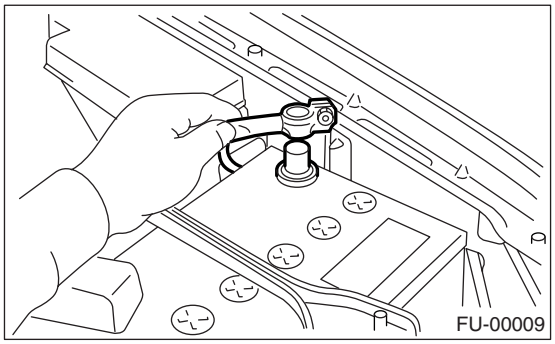

2) Disconnect the washer motor connector.

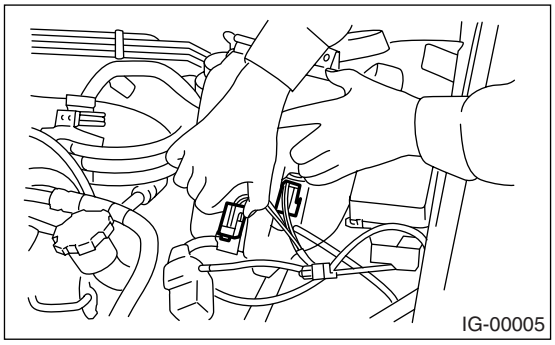

3) Disconnect the rear window glass washer hose from washer motor, then plug connection with a suitable cap.
4) Remove the two bolts which hold washer tank, then take the tank away from working area.

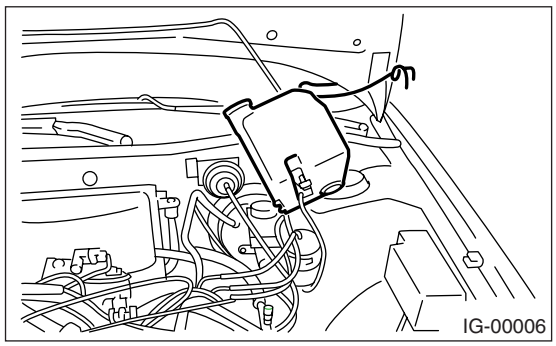

5) Disconnect the connector from ignition coil.

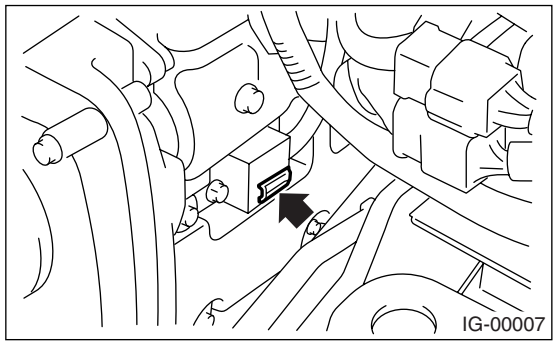

6) Remove the ignition coil.

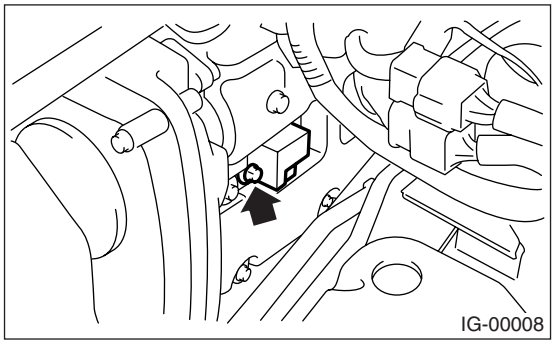

7) Remove the spark plugs with the spark plug sockets.

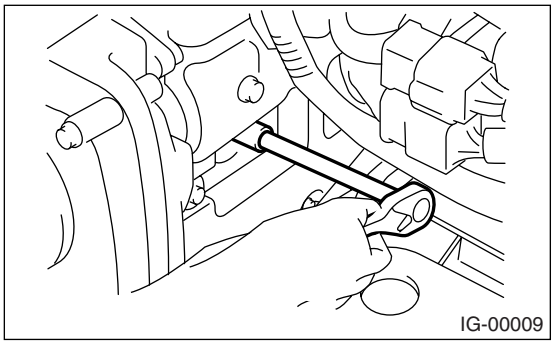

B: INSTALLATION

1. RH SIDE

1) Install in the reverse order of removal.

Tightening torque (Spark plug):
21 N·m (2.1 kgf-m, 15.2 ft-lb)

Tightening torque (Ignition coil):
16 N·m (1.6 kgf-m, 11.7 ft-lb)

NOTE:
The above torque should be only applied to new spark plugs without oil on their threads.
In case their threads are lubricated, the torque should be reduced by approx. 1/3 of the specified torque in order to avoid over-stressing.

2. LH SIDE

1) Install in the reverse order of removal.

Tightening torque (Spark plug):
21 N·m (2.1 kgf-m, 15.2 ft-lb)

Tightening torque (Ignition coil):
16 N·m (1.6 kgf-m, 11.7 ft-lb)

NOTE:
The above torque should be only applied to new spark plugs without oil on their threads.
In case their threads are lubricated, the torque should be reduced by approx. 1/3 of the specified torque in order to avoid over-stressing.

C: INSPECTION

Check the electrodes and inner and outer porcelain of plugs, noting the type of deposits and the degree of electrode erosion.

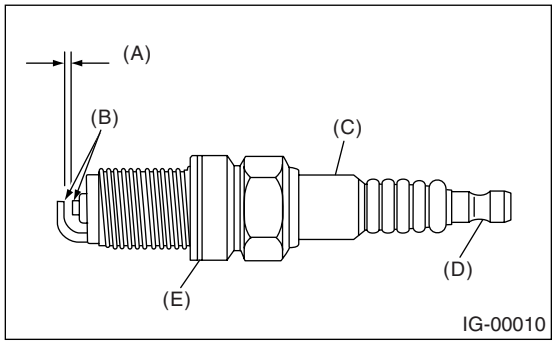

(A) Spark plug gap
(B) Carbon accumulation or wear
(C) Cracks
(D) Damage
(E) Damaged gasket

1) Normal:
Brown to grayish-tan deposits and slight electrode wear indicates correct spark plug heat range.

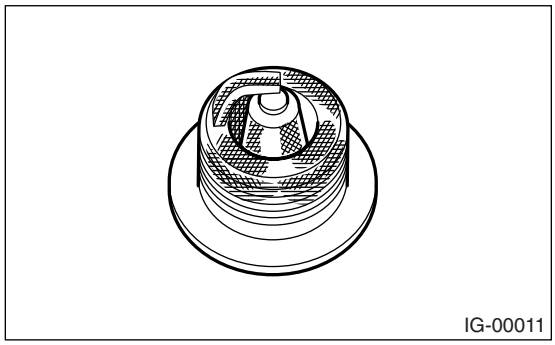

2) Carbon fouled:
Dry fluffy carbon deposits on insulator and electrode are mostly caused by slow speed driving in city, weak ignition, too rich fuel mixture, dirty air cleaner, etc.
It is advisable to replace with plugs having hotter heat range.

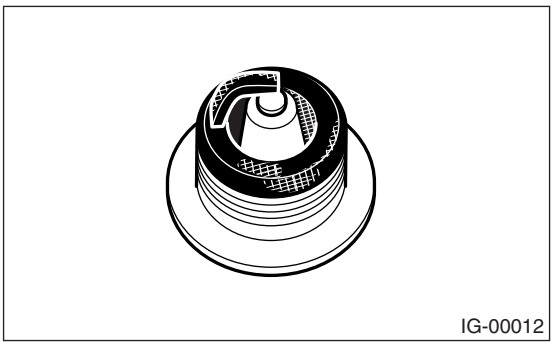
IG-00012

3) Oil fouled:
Wet black deposits show excessive oil entrance into combustion chamber through worn rings and pistons or excessive clearance between valve guides and stems. If the same condition remains after repair, use a hotter plug.

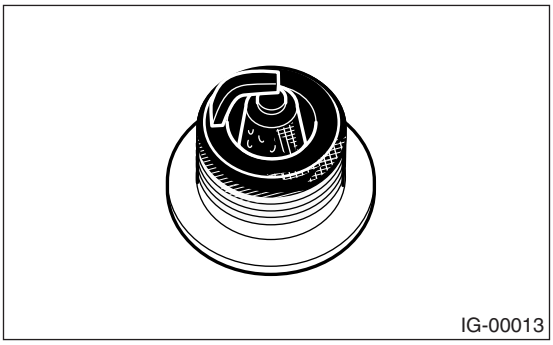
IG-00013

4) Overheating:
White or light gray insulator with black or brown spots and bluish burnt electrodes indicates engine overheating. Moreover, the appearance results from incorrect ignition timing, loose spark plugs, wrong selection of fuel, hotter range plug, etc. It is advisable to replace with plugs having colder heat range.

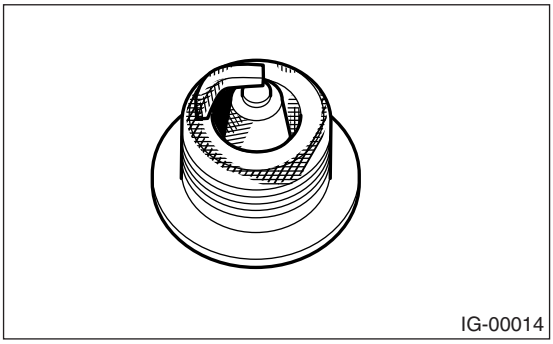
IG-00014

D: ADJUSTMENT

Clean the spark plugs with a wire brush. Clean and remove the carbon or oxide deposits, but do not wear away porcelain.
If deposits are too stubborn, replace the plugs.
After cleaning the spark plugs, correct the spark plug gap using a gap gauge.

NOTE:
Do not use spark plug cleaners, because the spark plugs are applied with platinum tips.

Spark plug gap: L
0.7 — 0.8 mm (0.028 — 0.031 in)

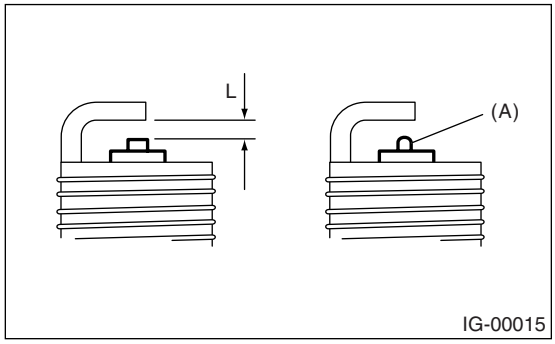

IG-00015

NOTE:
Replace with a new spark plug if this area (A) is worn to “ball” shape.

3. Ignition Coil & Ignitor ASSY

A: REMOVAL

Direct ignition type has been adopted.
Refer to the “Spark Plug Removal” for removal procedure. <Ref. to IG(H4DOTC)-4, REMOVAL, Spark Plug.>

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:
16 N·m (1.6 kgf-m, 11.7 ft-lb)

C: INSPECTION

For inspection, refer to the following. <Ref. to EN(H4DOTC)-67, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

STARTING/CHARGING SYSTEMS

SC(H4DOTC)

Page

1. General Description 2

1. General Description

A: SPECIFICATION

Specifications for Turbo model is included in SC (H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H4DOTC)

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	4
3.	General Description	6
4.	Electrical Components Location	9
5.	Engine Control Module (ECM) I/O Signal	23
6.	Engine Condition Data	27
7.	Transmission Control Module (TCM) I/O Signal	28
8.	Data Link Connector	29
9.	OBD-II General Scan Tool	30
10.	Subaru Select Monitor	32
11.	Read Diagnostic Trouble Code (DTC)	39
12.	Inspection Mode	40
13.	Drive Cycle	46
14.	Clear Memory Mode	48
15.	Compulsory Valve Operation Check Mode	49
16.	Malfunction Indicator Light	51
17.	Diagnostics for Engine Starting Failure	60
18.	List of Diagnostic Trouble Code (DTC)	75
19.	Diagnostic Procedure with Diagnostic Trouble Code (DTC)	82
20.	General Diagnostic Table	314

1. Basic Diagnostic Procedure

A: PROCEDURE

1. ENGINE

	Step	Check	Yes	No
1	**CHECK ENGINE START FAILURE.** 1)Ask the customer when and how trouble occurred using the interview check list. <Ref. to EN(H4DOTC)-4, CHECK, Check List for Interview.> 2)Start the engine.	Does the engine start?	Go to step **2.**	Inspection using "Diagnostics for Engine Start Failure". <Ref. to EN(H4DOTC)-60, Diagnostics for Engine Starting Failure.>
2	**CHECK ILLUMINATION OF MALFUNCTION INDICATOR LIGHT.**	Does the malfunction indicator light illuminate?	Go to step **3.**	Inspection using "General Diagnostics Table". <Ref. to EN(H4DOTC)-314, General Diagnostic Table.>
3	**CHECK INDICATION OF DTC ON DISPLAY.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor or OBD-II general scan tool to data link connector. 3)Turn the ignition switch to ON and the Subaru Select Monitor or OBD-II general scan tool switch to ON. 4)Read the DTC on Subaru Select Monitor or OBD-II general scan tool.	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC?	Record the DTC code. Repair the trouble cause. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> Go to step **4.**	Repair the related parts. NOTE: If a DTC is not shown on display although malfunction indicator light illuminates, perform diagnostics of malfunction indicator light circuit or combination meter. <Ref. to EN(H4DOTC)-51, Malfunction Indicator Light.>
4	**PERFORM THE DIAGNOSIS.** 1)Perform the clear memory mode. <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> 2)Perform the inspection mode. <Ref. to EN(H4DOTC)-40, Inspection Mode.>	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC?	Inspect using "Diagnostics Procedure with Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-82, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Complete the diagnosis.

2. AUTOMATIC TRANSMISSION

When DTC about automatic transmission is shown on display, carry out the following basic check. After that, carry out the replacement or repair work.
1) ATF level check <Ref. to 4AT-31, Automatic Transmission Fluid.>
2) Differential gear oil level check <Ref. to 4AT-32, Differential Gear Oil.>
3) ATF leak check <Ref. to 4AT-31, Automatic Transmission Fluid.>
4) Differential gear oil leak check <Ref. to 4AT-32, Differential Gear Oil.>
5) Stall test <Ref. to 4AT-34, Stall Test.>
6) Line pressure test <Ref. to 4AT-37, Line Pressure Test.>
7) Transfer clutch pressure test <Ref. to 4AT-38, Transfer Clutch Pressure Test.>
8) Time lag test <Ref. to 4AT-36, Time Lag Test.>
9) Road test <Ref. to 4AT-33, Road Test.>
10) Shift characteristics <Ref. to 4AT-38, Transfer Clutch Pressure Test.>

2. Check List for Interview

A: CHECK

1. CHECK LIST NO. 1

Check the following items when problem has occurred.

NOTE:
Use copies of this page for interviewing customers.

Customer's name		Engine No.	
Date of sale		Fuel brand	
Date of repair		Odometer reading	km
VIN			miles
Weather	❑ Fine ❑ Cloudy ❑ Rainy ❑ Snowy ❑ Various/Others:		
Outdoor temperature	°C (°F)		
	❑ Hot ❑ Warm ❑ Cool ❑ Cold		
Place	❑ Highway ❑ Suburbs ❑ Inner city ❑ Uphill ❑ Downhill ❑ Rough road ❑ Others:		
Engine temperature	❑ Cold ❑ Warming-up ❑ After warming-up ❑ Any temperature ❑ Others:		
Engine speed	rpm		
Vehicle speed	km/h (MPH)		
Driving conditions	❑ Not affected ❑ At starting ❑ While idling ❑ At racing ❑ While accelerating ❑ While cruising ❑ While decelerating ❑ While turning (RH/LH)		
Headlight	❑ ON/❑ OFF	Rear defogger	❑ ON/❑ OFF
Blower	❑ ON/❑ OFF	Radio	❑ ON/❑ OFF
A/C compressor	❑ ON/❑ OFF	CD/Cassette	❑ ON/❑ OFF
Cooling fan	❑ ON/❑ OFF	Car phone	❑ ON/❑ OFF
Front wiper	❑ ON/❑ OFF	CB	❑ ON/❑ OFF
Rear wiper	❑ ON/❑ OFF		

2. CHECK LIST NO. 2

Check the following items about the vehicle's state when malfunction indicator light turns on.

NOTE:
Use copies of this page for interviewing customers.

a) Other warning lights or indicators turn on. ❑ Yes/❑ No
❑ Low fuel warning light ❑ Charge indicator light ❑ AT diagnostics indicator light ❑ ABS warning light ❑ Engine oil pressure warning light
b) Fuel level
• Lack of gasoline: ❑ Yes/❑ No • Indicator position of fuel gauge:
c) Intentional connecting or disconnecting of harness connectors or spark plug cords: ❑ Yes/❑ No
• What:
d) Intentional connecting or disconnecting of hoses: ❑ Yes/❑ No
• What:
e) Installing of parts other than genuine parts: ❑ Yes/❑ No
• What: • Where:
f) Occurrence of noise: ❑ Yes/❑ No
• From where: • What kind:
g) Occurrence of smell: ❑ Yes/❑ No
• From where: • What kind:
h) Intrusion of water into engine compartment or passenger compartment: ❑ Yes/❑ No
i) Troubles occurred
❑ Engine does not start. ❑ Engine stalls during idling. ❑ Engine stalls while driving. ❑ Engine speed decreases. ❑ Engine speed does not decrease. ❑ Rough idling ❑ Poor acceleration ❑ Back fire ❑ After fire ❑ No shift ❑ Excessive shift shock

3. General Description

A: CAUTION

1) Airbag system wiring harness is routed near the ECM, main relay and fuel pump relay.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use the electrical test equipment on these circuit.
• Be careful not to damage the airbag system wiring harness when servicing the ECM, TCM, main relay and fuel pump relay.

2) Never connect the battery in reverse polarity.
• The ECM will be destroyed instantly.
• The fuel injector and other part will be damaged in just a few minutes more.

3) Do not disconnect the battery cables while the engine is running.
• A large counter electromotive force will be generated in the alternator, and this voltage may damage electronic parts such as ECM, etc.

4) Before disconnecting the connectors of each sensor and the ECM, be sure to turn the ignition switch to OFF.

5) Poor contact has been identified as a primary cause of this problem. To measure the voltage and/or resistance of individual sensors or all electrical control modules at the harness side connector, use a tapered pin with a diameter of less than 0.64 mm (0.025 in). Do not insert the pin more than 5 mm (0.20 in) into the part.

6) Before removing the ECM from located position, disconnect two cables on battery.
• Otherwise, the ECM may be damaged.

CAUTION:
When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.

7) The connectors to each sensor in the engine compartment and the harness connectors on the engine side and body side are all designed to be waterproof. However, it is still necessary to take care not to allow water to get into the connectors when washing the vehicle, or when servicing the vehicle on a rainy day.

8) Use the ECM mounting stud bolt at the body head grounding points when measuring voltage and resistance inside the passenger compartment.

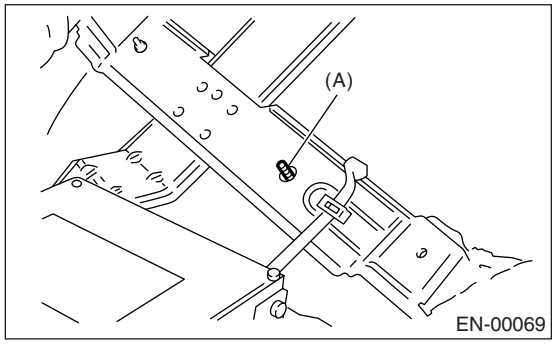

(A) Stud bolt

9) Use the engine grounding terminal or engine proper as the grounding point to the body, when measuring voltage and resistance in the engine compartment.

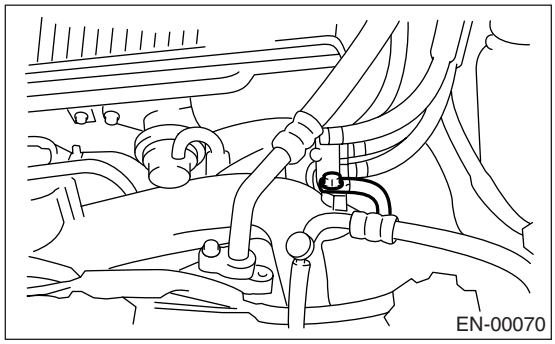

10) Use the TCM mounting stud bolts at the grounding point, when measuring voltage and resistance inside the passenger compartment.

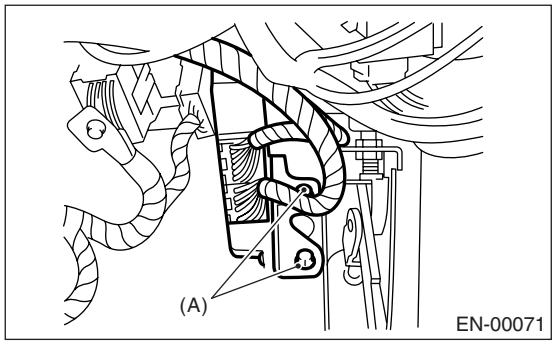

(A) Stud bolt

11) Every MFI-related part is a precision part. Do not drop them.

12) Observe the following cautions when installing a radio in MFI equipped models.

CAUTION:
• The antenna must be kept as far apart as possible from the control unit.
(The ECM is located under the steering column, inside of the instrument panel lower trim panel.)
• The antenna feeder must be placed as far as possible from ECM and MFI harness.
• Carefully adjust the antenna for correct matching.
• When mounting a large power type radio, pay special attention to the three items above mentioned.
• Incorrect installation of the radio may affect the operation of ECM.

13) Before disconnecting the fuel hose, disconnect the fuel pump connector and crank the engine for more than 5 seconds to release pressure in the fuel system. If the engine starts during this operation, run it until it stops.
14) Problems in the electronic-controlled automatic transmission may be caused by failure of the engine, the electronic control system, the transmission proper, or by a combination of these. These three causes must be distinguished clearly when performing diagnostics.
15) Diagnostics should be conducted by rotating with simple, easy operations and proceeding to complicated, difficult operations. The most important thing in diagnostics is to understand the customer's complaint, and distinguish between the three causes.
16) On model with ABS, when performing driving test in jacked-up or lifted-up position, sometimes the warning light may be lit, but this is not a malfunction of the system. The reason for this is the speed difference between front and rear wheels. After diagnosis of engine control system, perform the ABS memory clearance procedure of self-diagnosis system.

B: INSPECTION

Before performing diagnostics, check the following items which might affect engine problems:

1. BATTERY

1) Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

2) Check the condition of main and other fuses, and harnesses and connectors. Also check for proper grounding.

2. ENGINE GROUNDING

Make sure the engine grounding terminal is properly connected to engine.

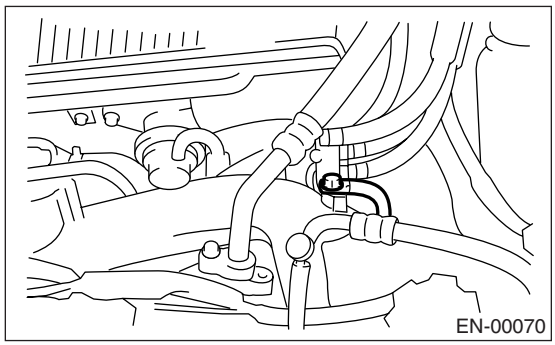

C: NOTE

1. DESCRIPTION

• The on-board diagnostics (OBD) system detects and indicates a fault in various inputs and outputs of complex electronic control. Malfunction indicator light in combination meter indicates occurrence of a fault or trouble.
• Further, against such a failure or sensors as may disable the drive, the fail-safe function is provided to ensure the minimal driveability.
• The OBD system incorporated with the vehicles within this engine family complies with Section 1968.1, California Code of Regulations (OBD-II regulation). The OBD system monitors the components and the system malfunction listed in Engine Section which affects on emissions.
• When the system decides that a malfunction occurs, malfunction indicator light illuminates. At the same time of malfunction indicator light illumination or blinking, a DTC and a freeze frame engine conditions are stored into on-board computer.
• The OBD system stores freeze frame engine condition data (engine load, engine coolant temperature, fuel trim, engine speed and vehicle speed, etc.) into on-board computer when it detects a malfunction first.

• If the OBD system detects the various malfunctions including the fault of fuel trim or misfire, the OBD system first stores freeze frame engine conditions about the fuel trim or misfire.
• When the malfunction does not occur again for three consecutive driving cycles, malfunction indicator light is turned off, but DTC remains at on-board computer.
• The OBD-II system is capable of communication with a general scan tool (OBD-II general scan tool) formed by ISO 9141 CARB.
• The OBD-II diagnostics procedure is different from usual diagnostics procedure. When troubleshooting model with OBD-II, connect the Subaru Select Monitor or the OBD-II general scan tool to the vehicle.

2. ENGINE AND EMISSION CONTROL SYSTEM

• The Multipoint Fuel Injection (MFI) system is a system that supplies the optimum air-fuel mixture to the engine for all the various operating conditions through the use of the latest electronic technology.
With this system fuel, which is pressurized at a constant pressure, is injected into the intake air passage of the cylinder head. The injection quantity of fuel is controlled by an intermittent injection system where the electro-magnetic injection valve (fuel injector) opens only for a short period of time, depending on the quantity of air required for one cycle of operation. In actual operation, the injection quantity is determined by the duration of an electric pulse applied to the fuel injector and this permits simple, yet highly precise metering of the fuel.
• Further, all the operating conditions of the engine are converted into electric signals, and this results in additional features of the system, such as large improved adaptability, easier addition of compensating element, etc.
The MFI system also has the following features:
• Reduced emission of harmful exhaust gases.
• Reduced in fuel consumption.
• Increased engine output.
• Superior acceleration and deceleration.
• Superior startability and warm-up performance in cold weather since compensation is made for coolant and intake air temperature.

D: PREPARATION TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
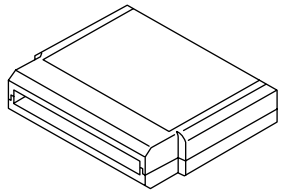 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

4. Electrical Components Location

A: LOCATION

1. ENGINE

• Module

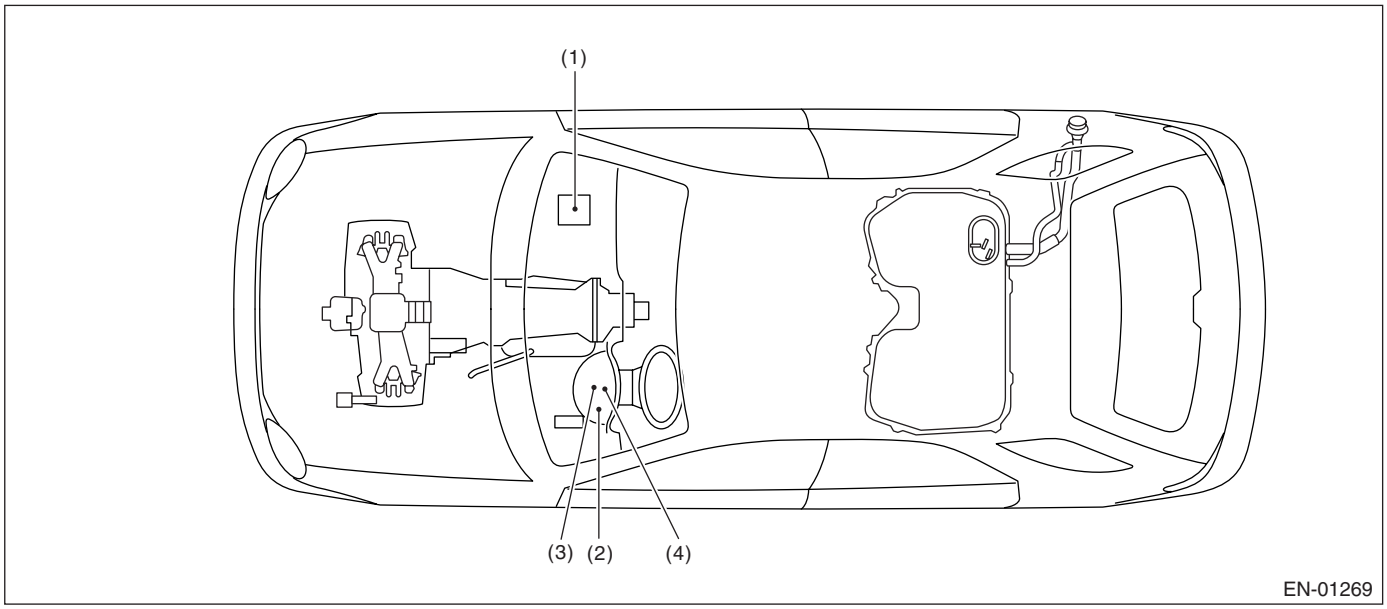

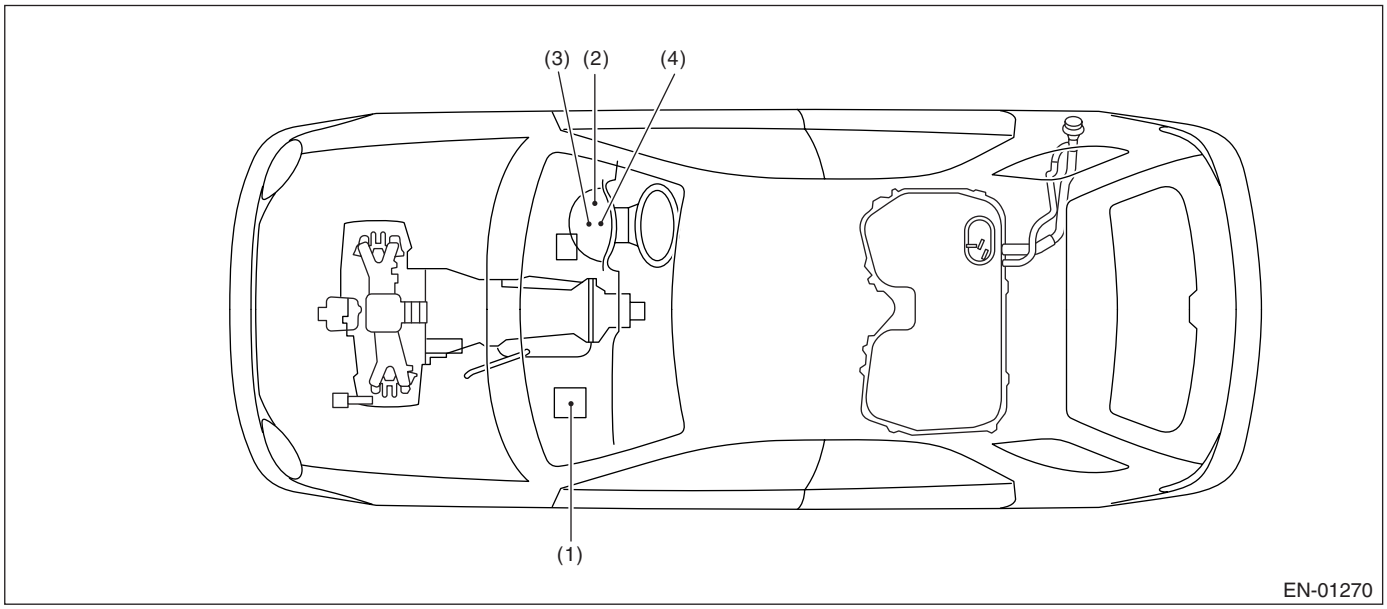

(1) Engine control module (ECM)
(2) Malfunction indicator light
(3) Test mode connector
(4) Data link connector

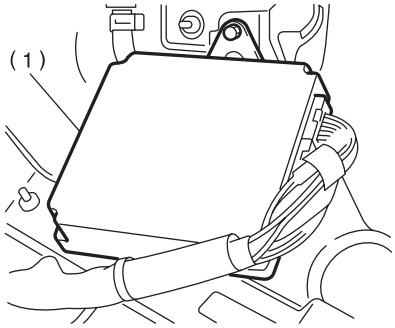

EN-00156

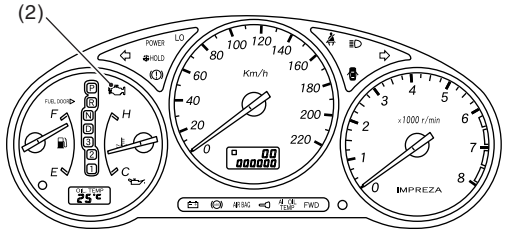

EN-01271

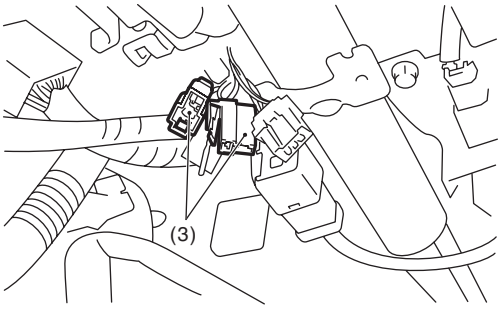

EN-01272

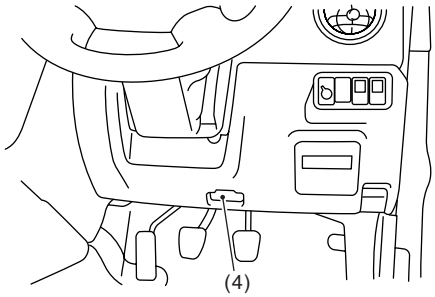

EN-01273

• Sensor

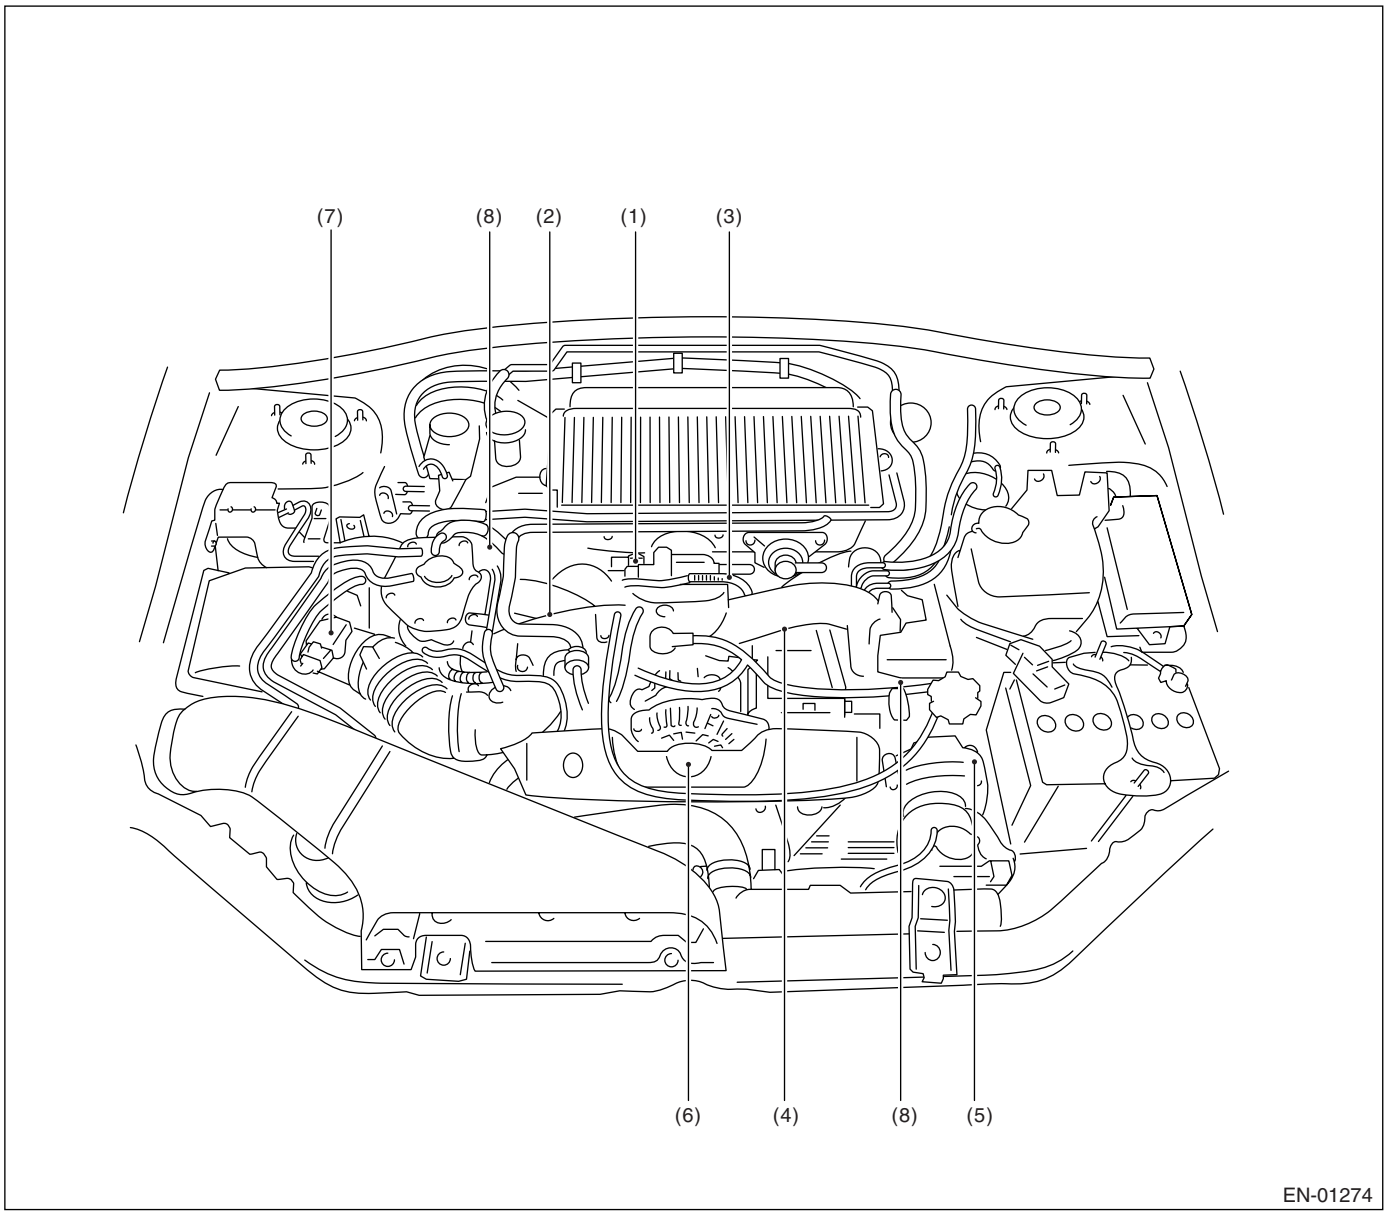

(1) Manifold absolute pressure sensor
(2) Engine coolant temperature sensor
(3) Throttle position sensor
(4) Knock sensor
(5) Camshaft position sensor
(6) Crankshaft position sensor
(7) Mass air flow and intake air temperature sensor
(8) Tumble generator valve position sensor

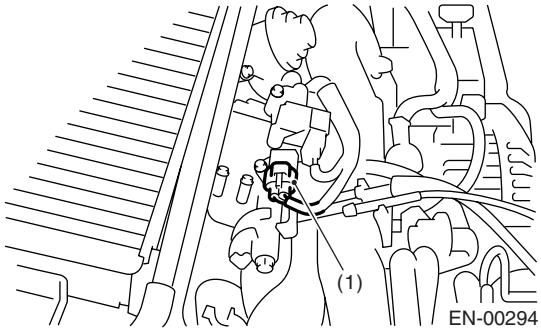
(1)
EN-00294

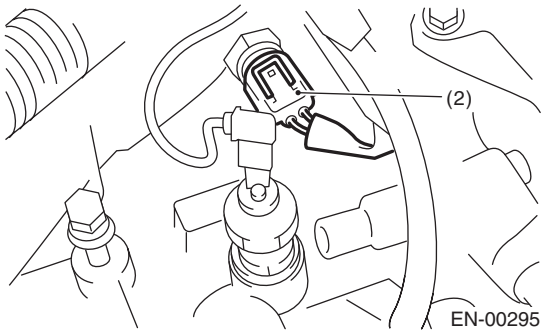
(2)
EN-00295

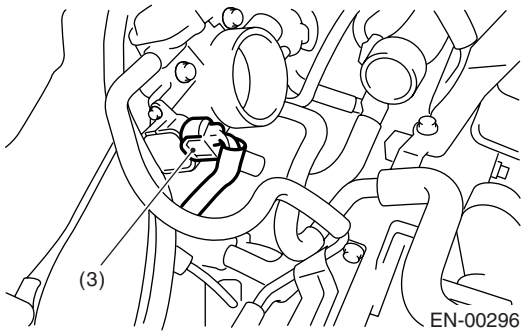
(3)
EN-00296

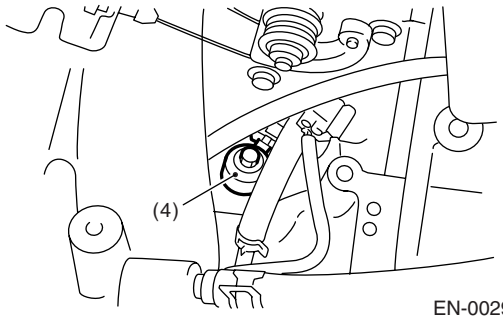
(4)
EN-00297

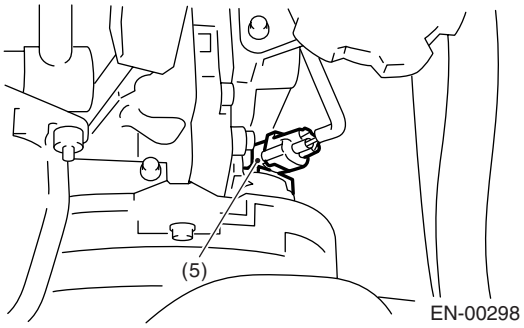
(5)
EN-00298

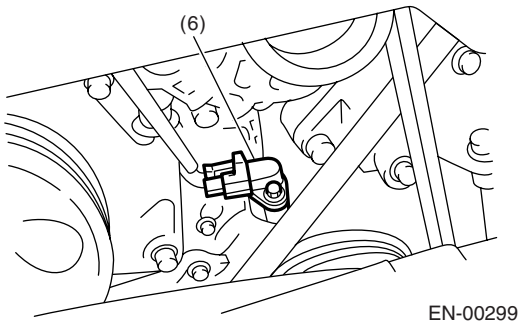
(6)
EN-00299

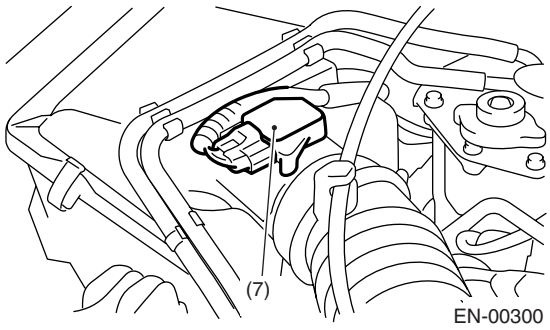
(7)
EN-00300

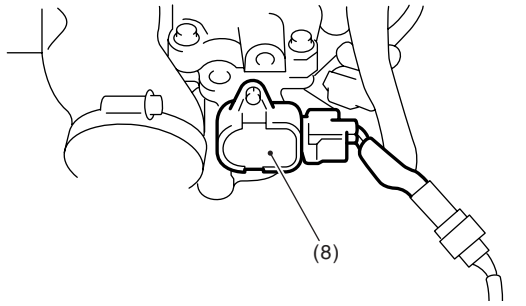
(8)
EN-00301

• Except for Australia model

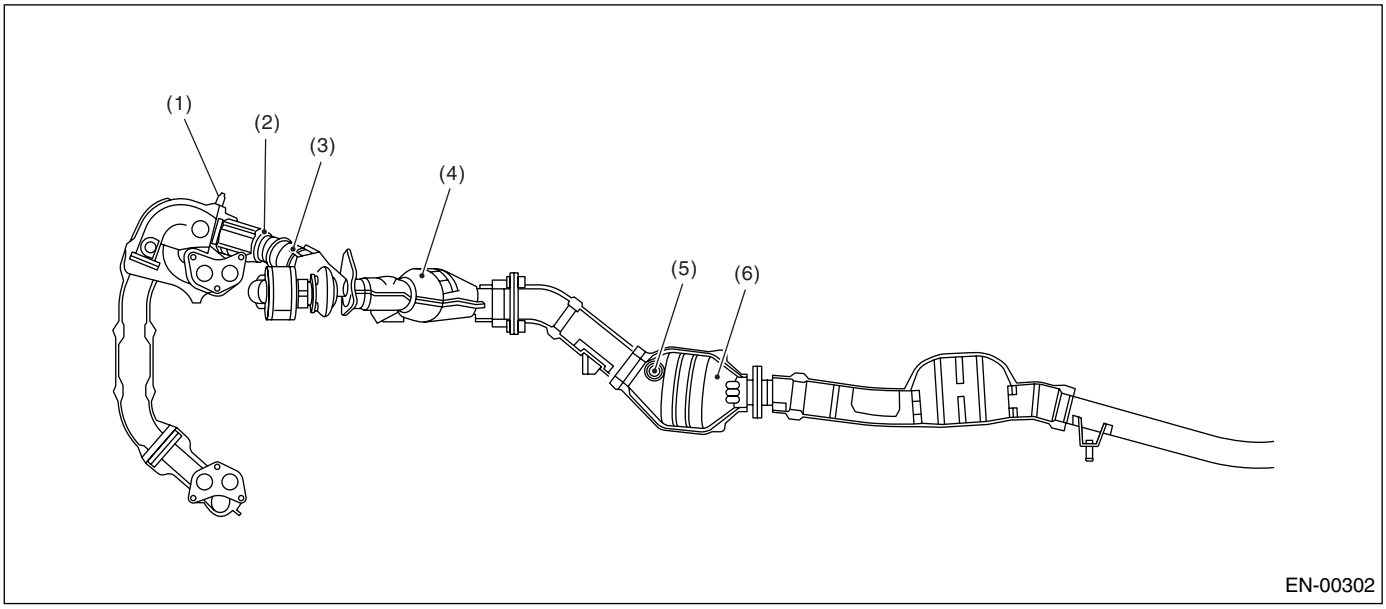

• For Australia model except for STi

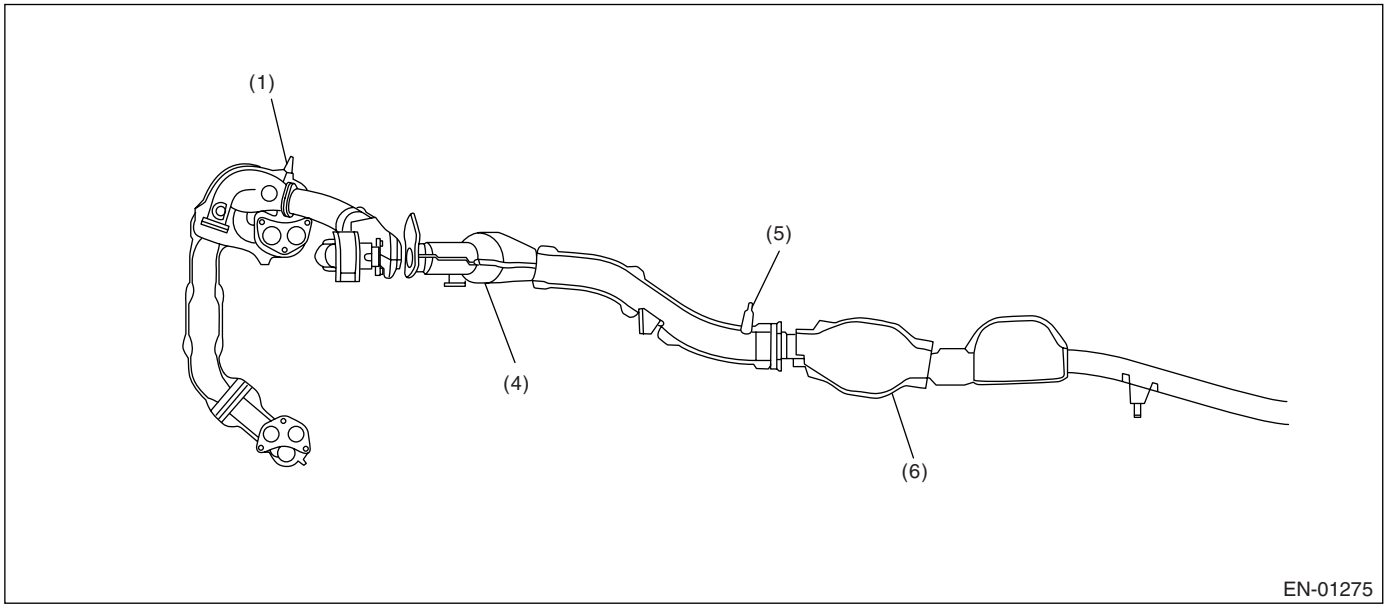

(1) Front oxygen (A/F) sensor
(2) Precatalytic converter (Except for Australia DOHC Turbo model and STi model)
(3) Exhaust temperature sensor (Except for Australia DOHC Turbo model and STi model)
(4) Front catalytic converter
(5) Rear oxygen sensor (Except for Australia model)
(6) Rear catalytic converter

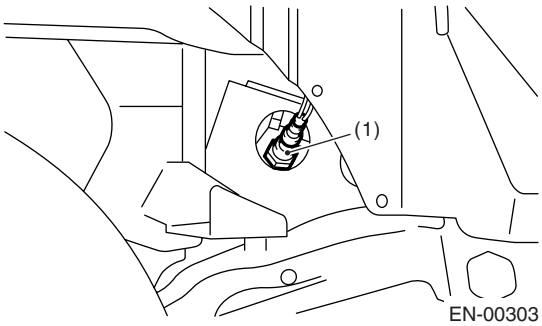

EN-00303

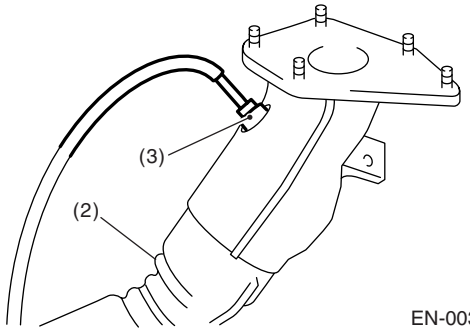

EN-00304

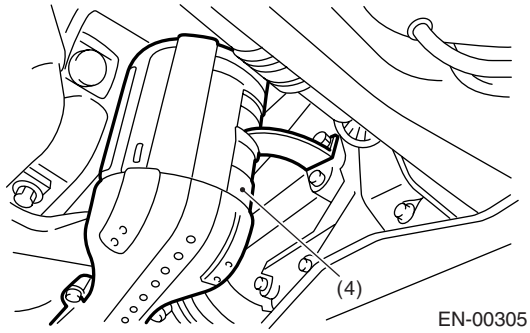

EN-00305

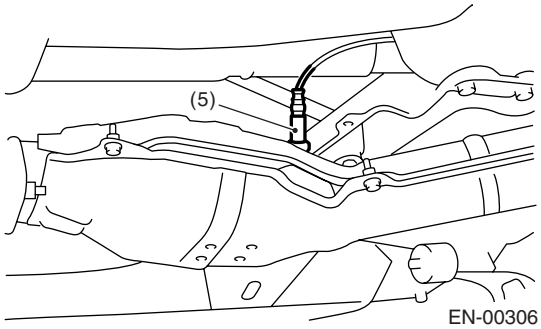

EN-00306

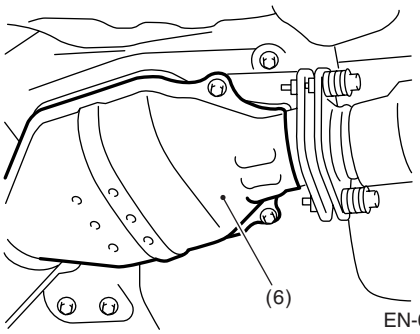

EN-00307

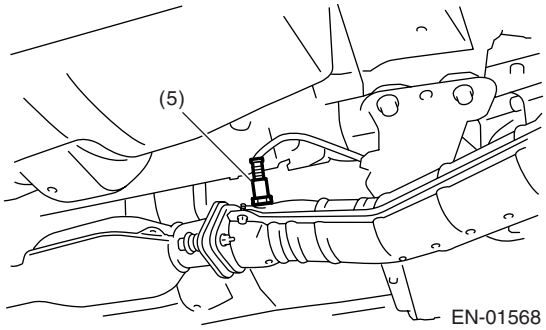

EN-01568

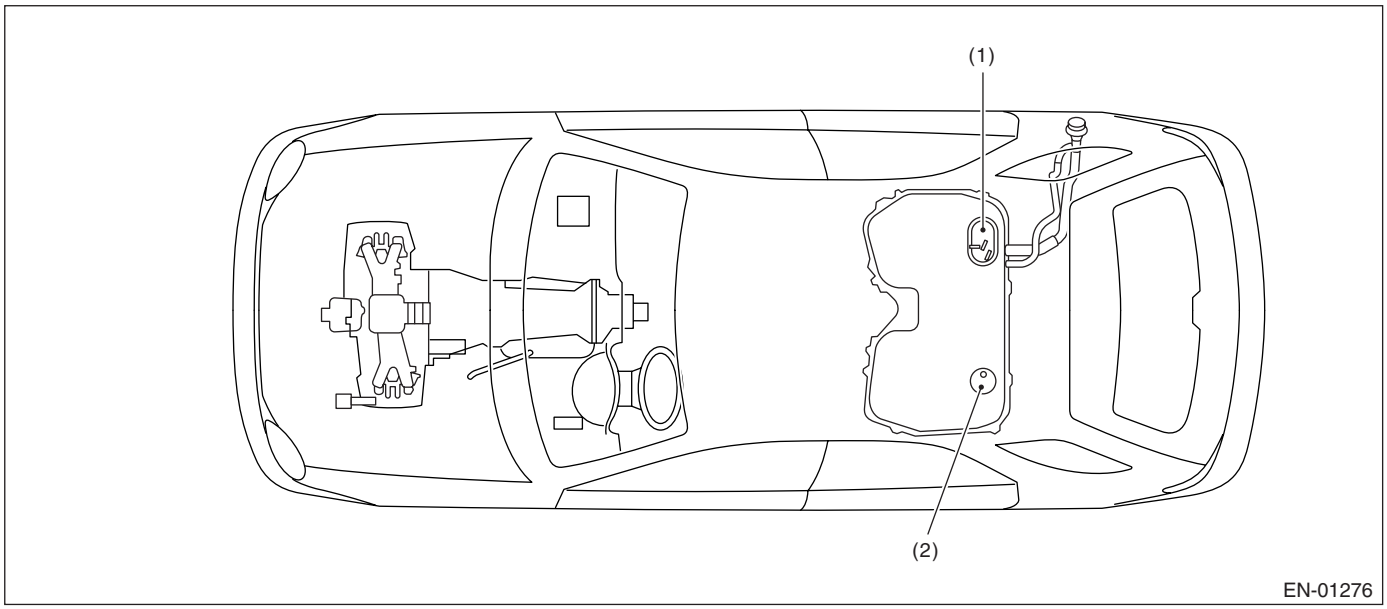

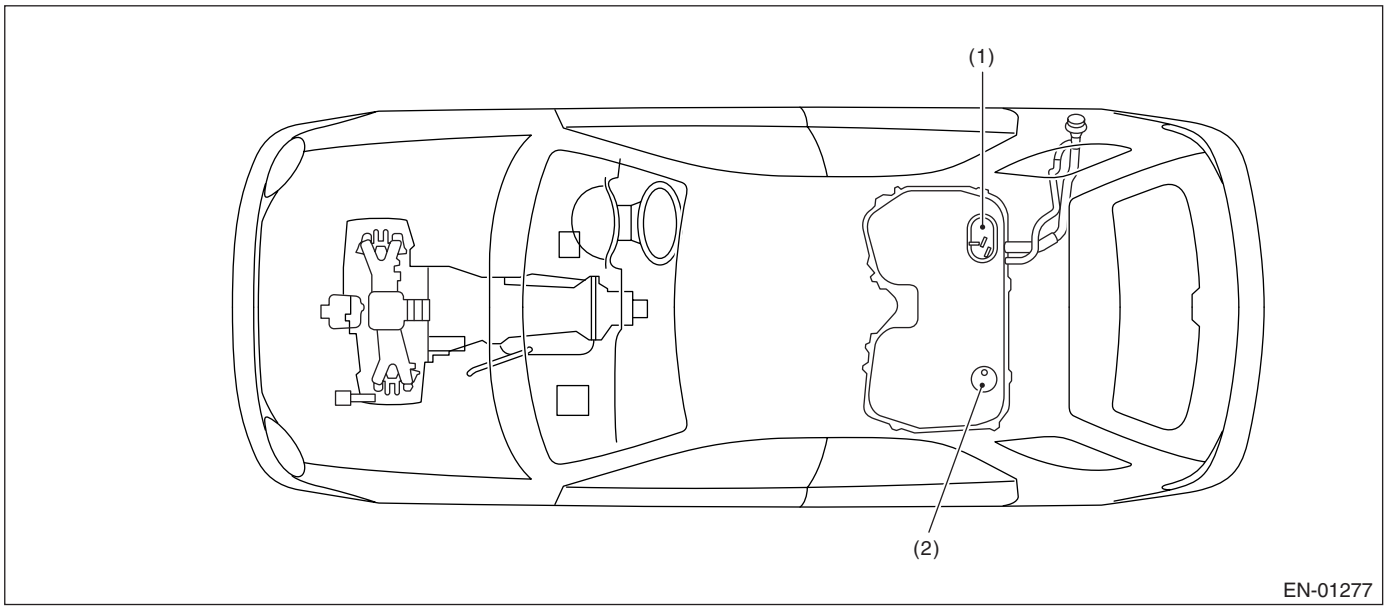

(1) Fuel level sensor (2) Fuel sub level sensor

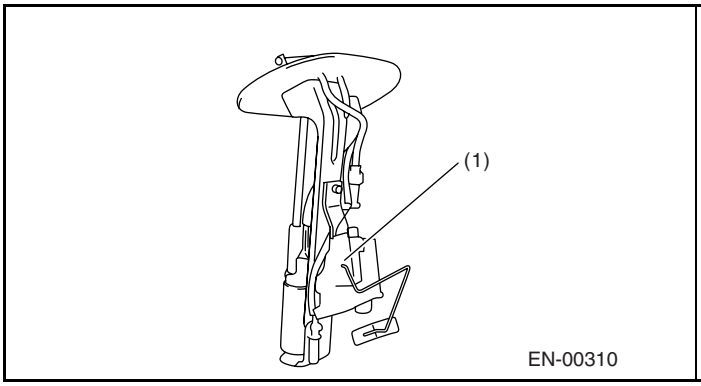

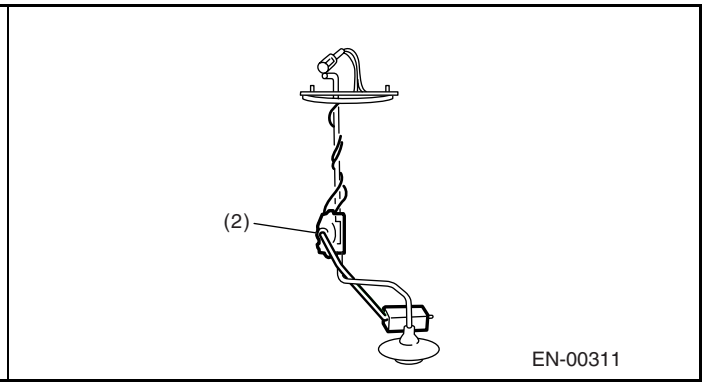

• Solenoid Valve, Actuator, Emission Control System Parts and Ignition System Parts

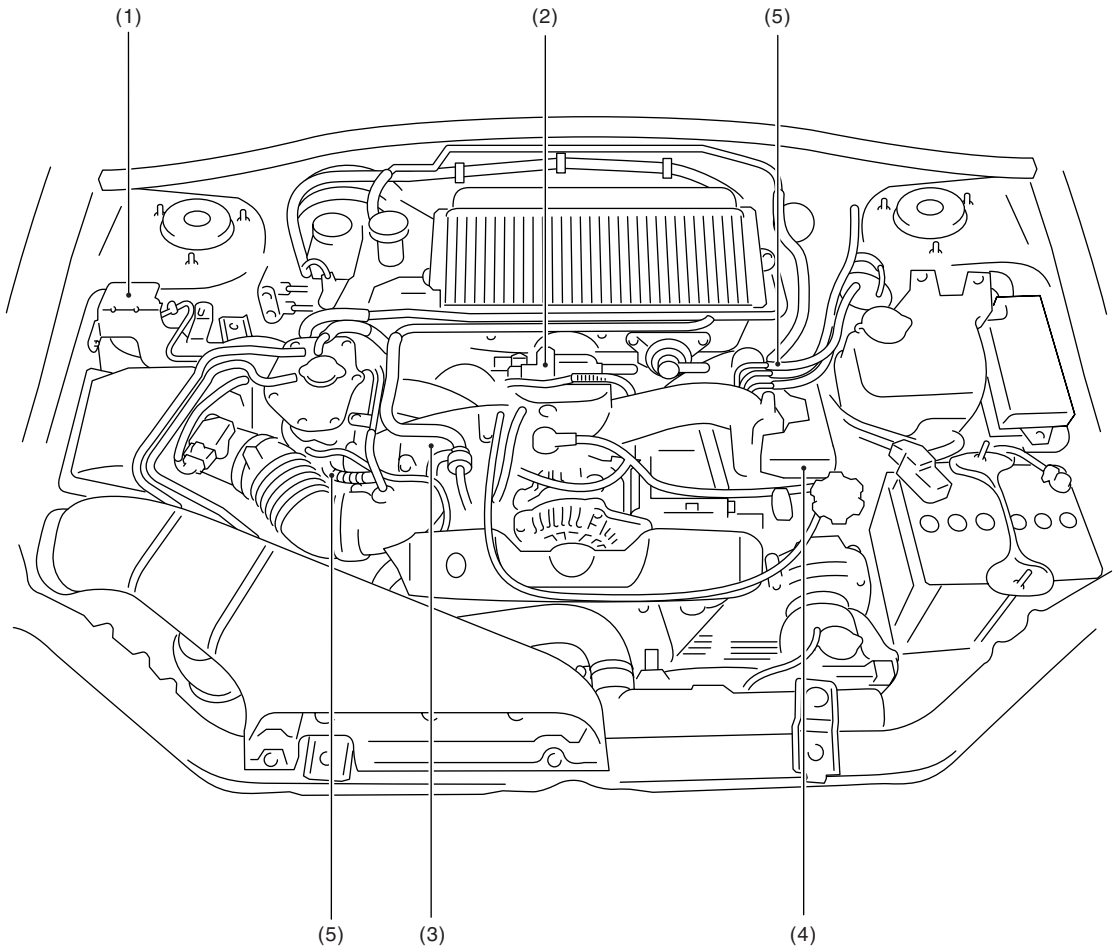

(1) Wastegate control solenoid valve
(2) Idle air control solenoid valve
(3) Purge control solenoid valve
(4) Ignition coil
(5) Tumble generator valve actuator

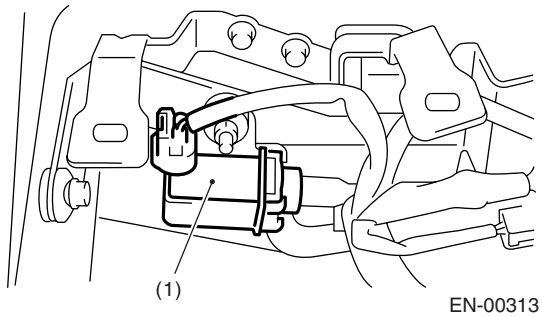

EN-00313

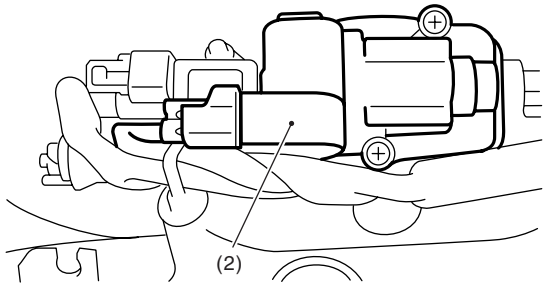

EN-00314

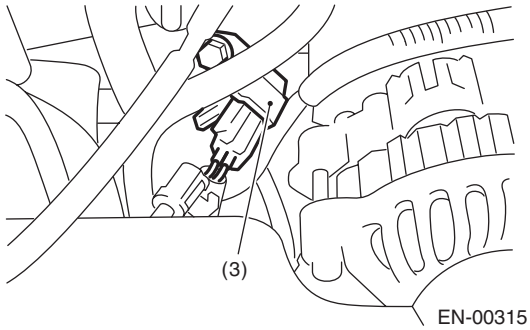

EN-00315

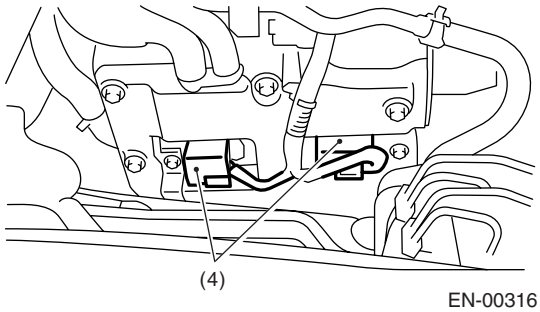

EN-00316

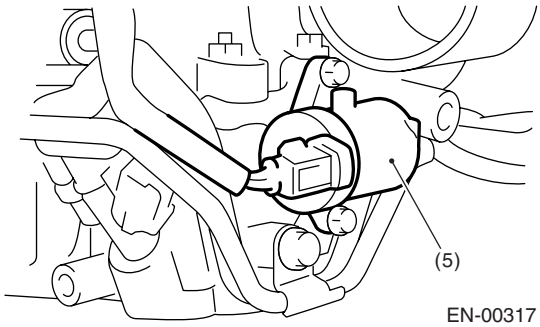

EN-00317

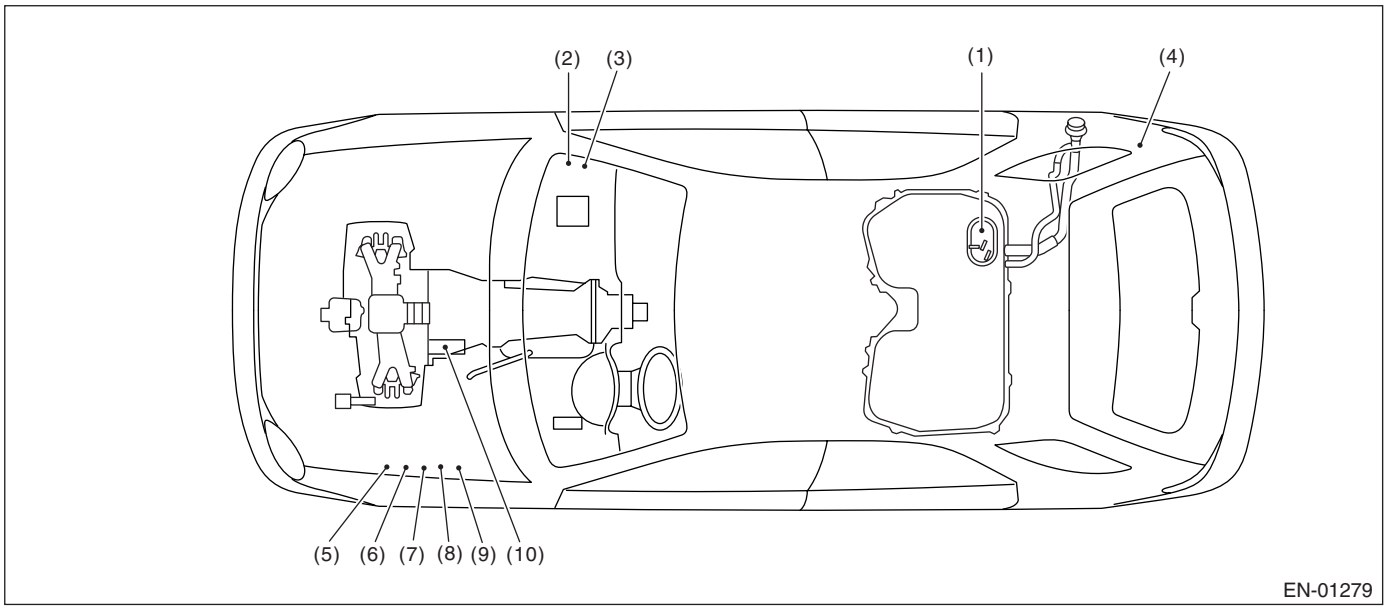

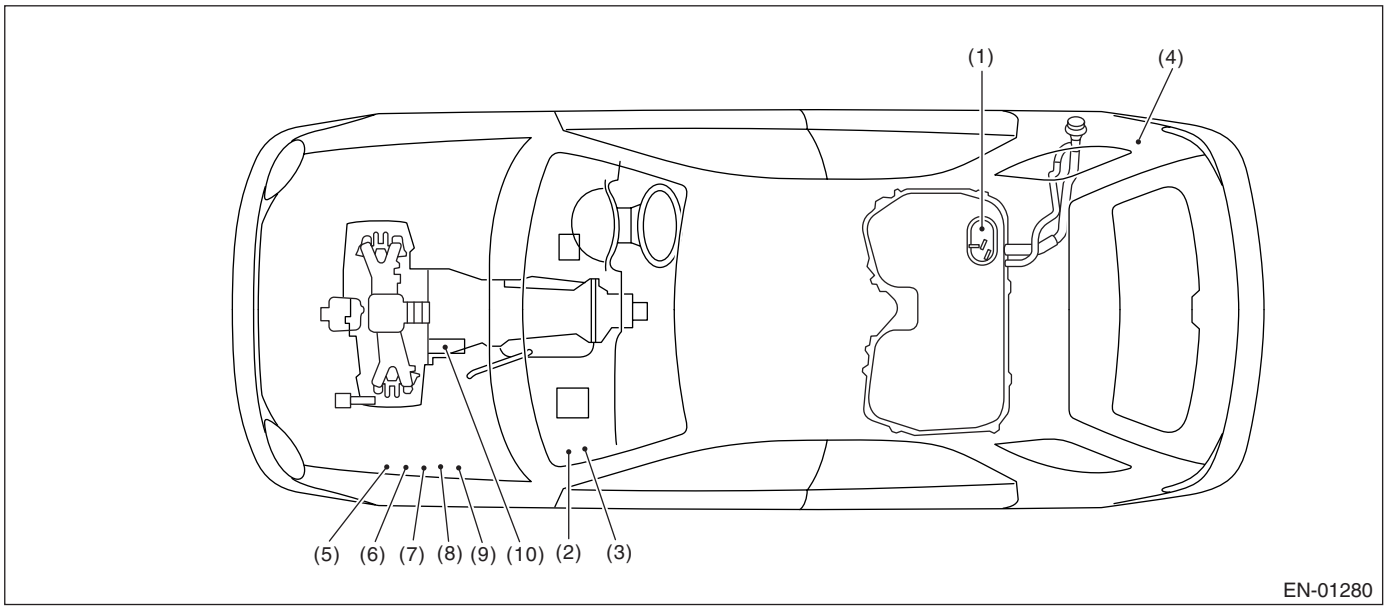

(1) Fuel pump
(2) Inhibitor switch
(3) Main relay
(4) Fuel pump relay
(5) Fuel pump control unit
(6) Radiator main fan relay 1
(7) Radiator main fan relay 2
(8) Radiator sub fan relay 1
(9) Radiator sub fan relay 2
(10) Starter

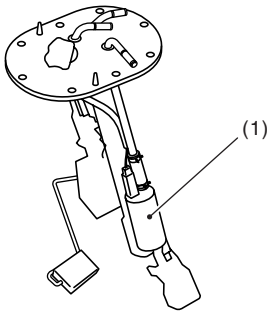

EN-00320

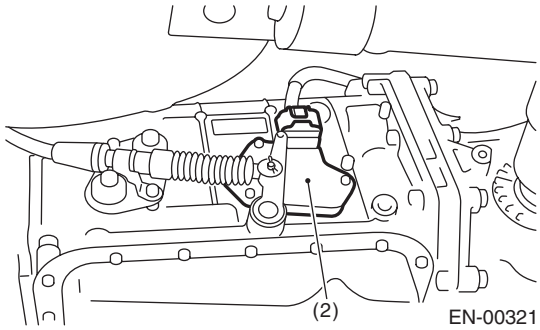

EN-00321

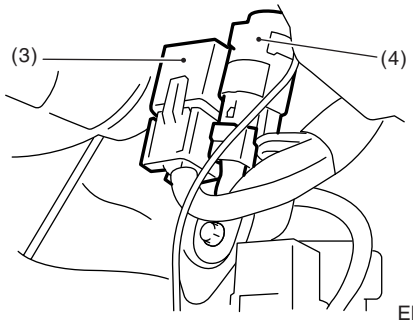

EN-01281

EN-01282

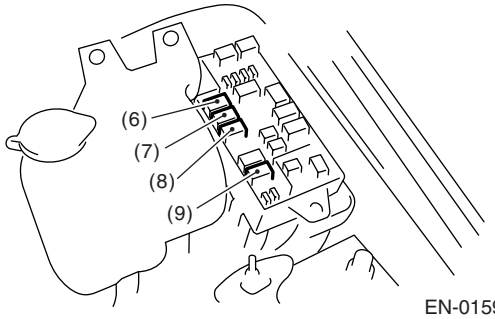

EN-01596

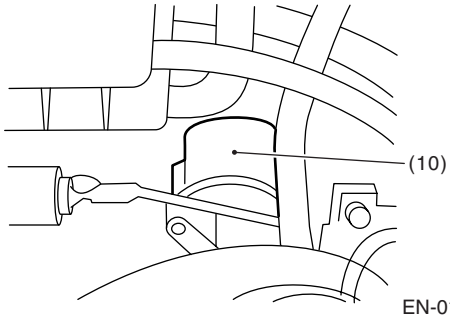

EN-01328

2. TRANSMISSION

• Module

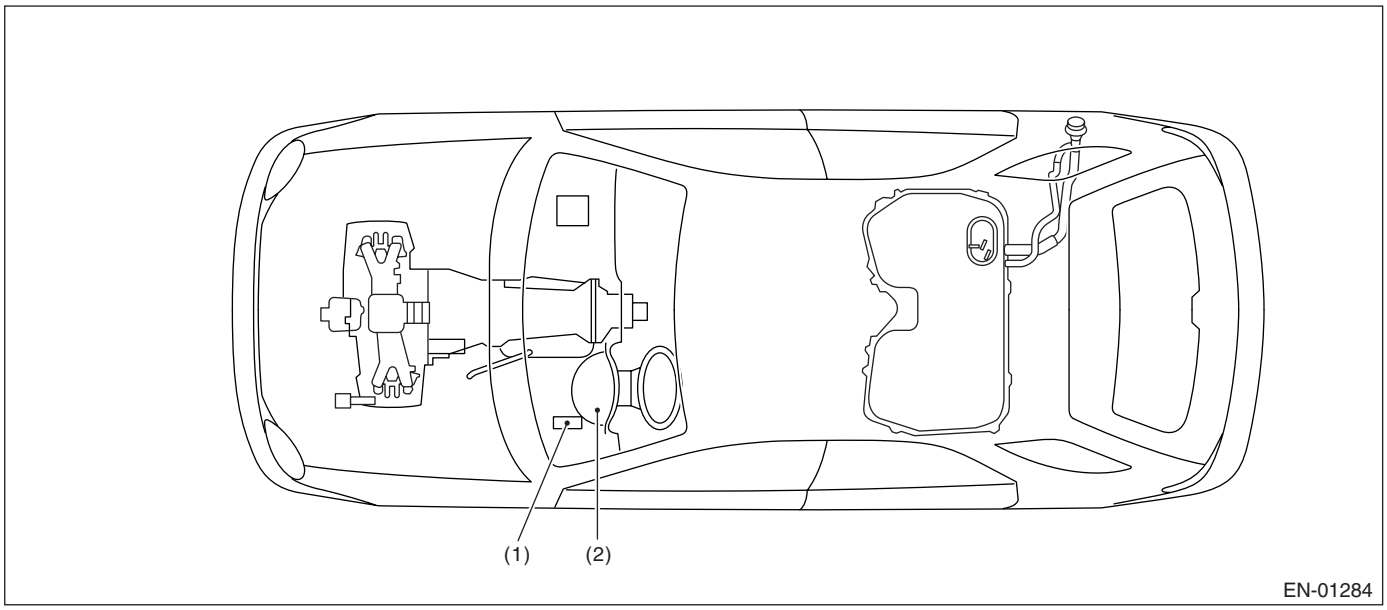

(1) Transmission control module (TCM) (for AT model)
(2) AT diagnostic indicator light (for AT model)

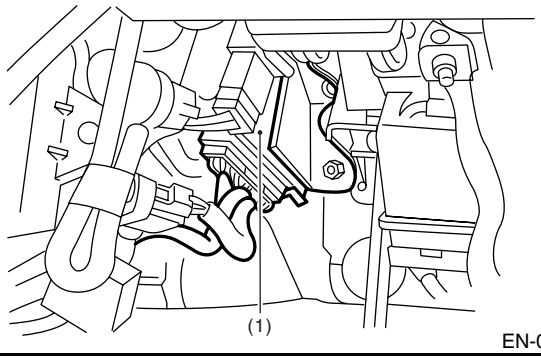

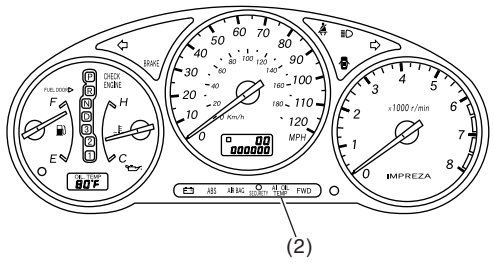

• Sensor

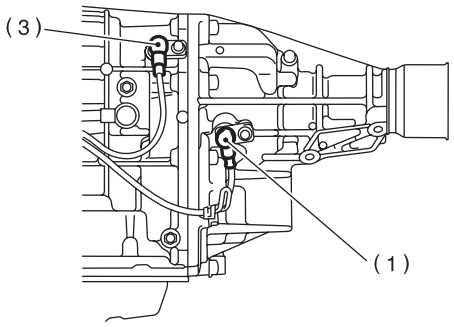

EN-00184

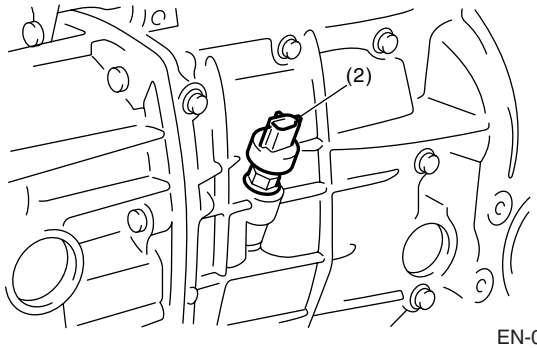

EN-00107

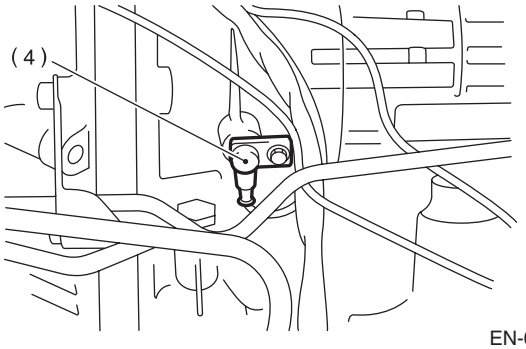

EN-00186

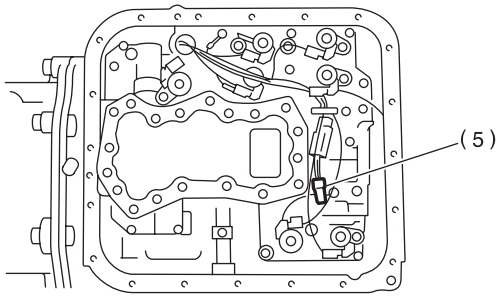

EN-00187

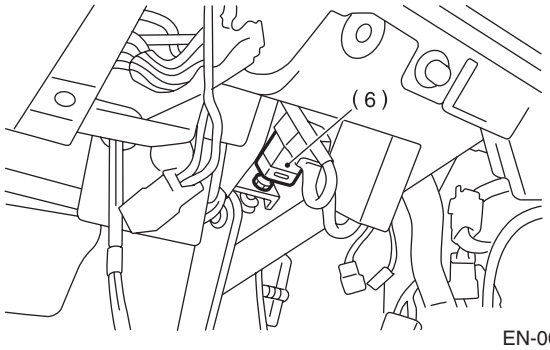

EN-00188

(1) Rear vehicle speed sensor (for AT model)
(2) Front vehicle speed sensor (for MT model)
(3) Front vehicle speed sensor (for AT model)
(4) Torque converter turbine speed sensor (for AT model)
(5) ATF temperature sensor (for AT model)
(6) Brake light switch

• Solenoid Valve and Switch (AT model)

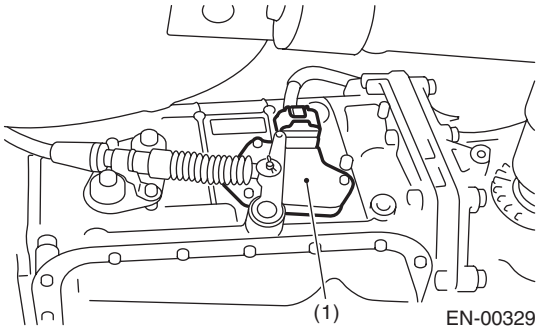

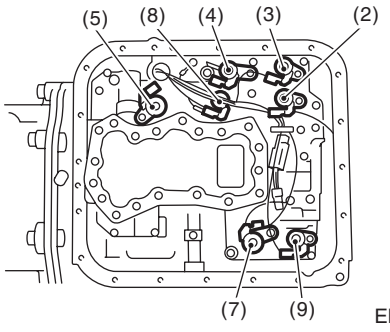

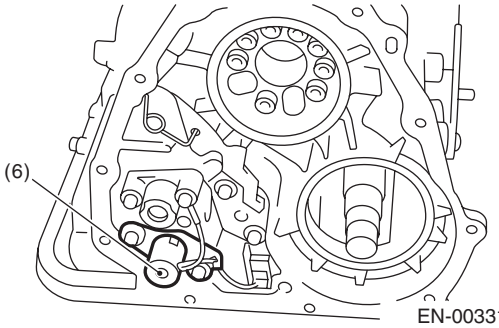

SUBARU.

(1) Inhibitor switch
(2) Shift solenoid valve 1
(3) Shift solenoid valve 2
(4) Line pressure duty solenoid
(5) Lock-up duty solenoid
(6) Transfer duty solenoid
(7) 2-4 brake duty solenoid
(8) Low clutch timing solenoid valve
(9) 2-4 brake timing solenoid valve

• Solenoid Valve and Switch (MT model)

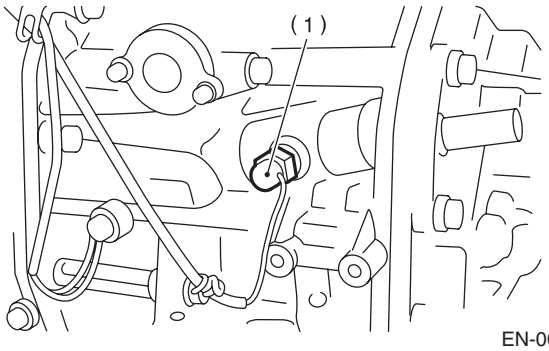

SUBARU.

(1) Neutral position switch

5. Engine Control Module (ECM) I/O Signal

A: ELECTRICAL SPECIFICATION

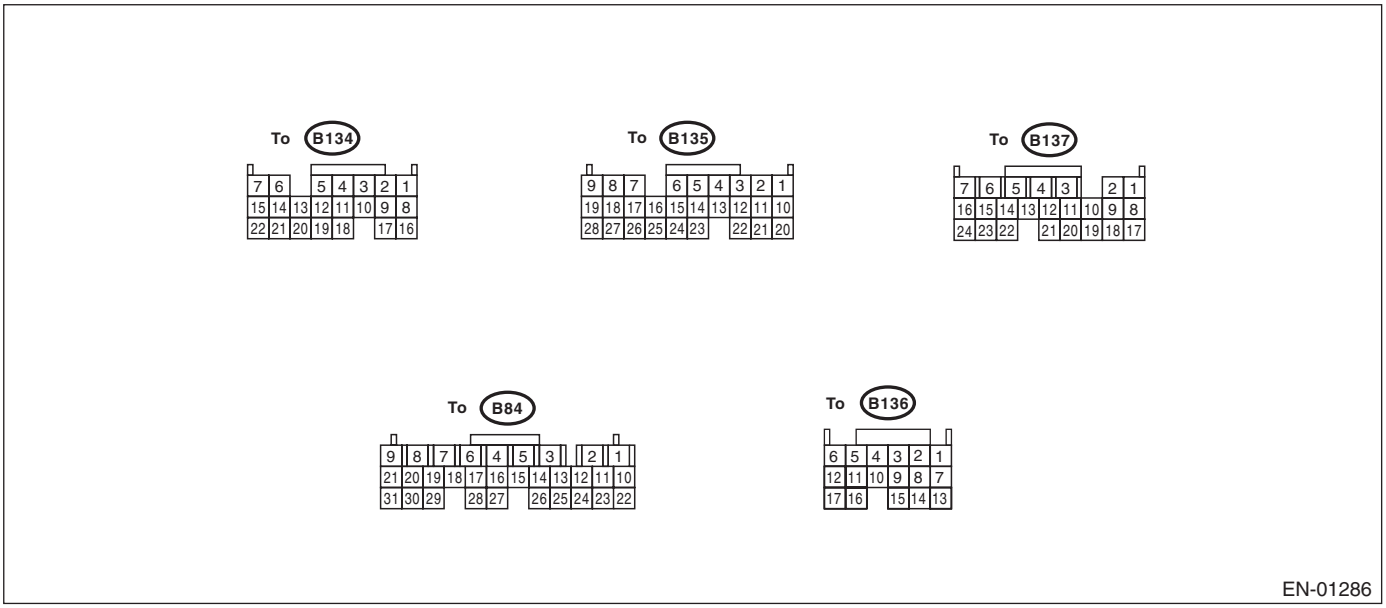

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	2	0	–7 — +7	Sensor output waveform
	Signal (–)	B135	11	0	0	—
	Shield	B135	21	0	0	—
Camshaft position sensor	Signal (+)	B135	1	0	–7 — +7	Sensor output waveform
	Signal (–)	B135	10	0	0	—
	Shield	B135	21	0	0	—
Throttle position sensor	Signal	B135	7	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	9	5	5	—
	GND (sensor)	B135	19	0	0	—
Rear oxygen sensor	Signal	B135	17	0	0 — 0.9	—
	Shield	B135	26	0	0	—
	GND (sensor)	B135	19	0	0	—
Front oxygen (A/F) sensor heater	Signal 1	B84	5	0 — 1.0	0 — 1.0	—
	Signal 2	B84	4	0 — 1.0	0 — 1.0	—
Rear oxygen sensor heater signal		B137	13	0 — 1.0	0 — 1.0	—
Engine coolant temperature sensor	Signal	B135	18	1.0 — 1.4	1.0 — 1.4	After warm-up the engine.
	GND (sensor)	B135	19	0	0	After warm-up the engine.
Vehicle speed signal		B134	1	0 or 5	0 or 5	“5” and “0” are repeatedly displayed when vehicle is driven.

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Generator signal		B84	11	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 10 — 13	Waveform
Mass air flow sensor	Signal	B136	13	—	0.3 — 4.5	—
	Shield	B136	8	0	0	—
	GND	B136	7	0	0	—
Intake air temperature sensor signal		B135	27	—	—	—
Exhaust gas temperature sensor	Signal	B135	16	—	—	—
	GND (sensor)	B135	19	0	0	—
Tumble generator valve position sensor RH	Signal	B135	23	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	9	5	5	—
	GND (sensor)	B135	19	0	0	—
Tumble generator valve position sensor LH	Signal	B135	13	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	9	5	5	—
	GND (sensor)	B135	19	0	0	—
Tumble generator valve RH (open)		B136	4	0 or 5	0 or 5	—
Tumble generator valve RH (close)		B136	5	0 or 5	0 or 5	—
Tumble generator valve LH (open)		B136	10	0 or 5	0 or 5	—
Tumble generator valve LH (close)		B136	11	0 or 5	0 or 5	—
Wastegate control solenoid valve		B84	24	10 — 13	13 — 14	—
Starter switch		B134	16	0	0	Cranking: 8 — 14
A/C switch		B134	6	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Ignition switch		B134	14	10 — 13	13 — 14	—
Neutral position switch		B134	8	ON: 12±0.5 OFF: 0		Switch is ON when gear is in neutral position.
Test mode connector		B134	5	5	5	When connected: 0
Knock sensor	Signal	B135	4	2.8	2.8	—
	Shield	B135	22	0	0	—
Back-up power supply		B84	10	10 — 13	13 — 14	Ignition switch “OFF”: 10 — 13
Control unit power supply		B84	2	10 — 13	13 — 14	—
		B84	3	10 — 13	13 — 14	—
Sensor power supply		B135	9	5	5	—
Line end check 1		B134	10	0	0	—
Ignition control	#1	B137	24	0	13 — 14	Waveform
	#2	B137	23	0	13 — 14	Waveform
	#3	B137	22	0	13 — 14	Waveform
	#4	B137	21	0	13 — 14	Waveform

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Fuel injector	#1	B84	1	10 — 13	1 — 14	Waveform
	#2	B137	6	10 — 13	1 — 14	Waveform
	#3	B137	5	10 — 13	1 — 14	Waveform
	#4	B137	4	10 — 13	1 — 14	Waveform
Idle air control solenoid valve	Signal	B137	10	0 or 13 — 14	0 or 13 — 14	Waveform
Fuel pump control unit	Signal 1	B134	13	—	—	—
	Signal 2	B137	16	—	—	—
A/C relay control		B84	27	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—
Radiator fan relay 1 control		B84	17	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—
Radiator fan relay 2 control		B84	28	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	Model with A/C only
Malfunction indicator lamp		B84	15	—	—	Light “ON”: 1, or less Light “OFF”: 10 — 14
Engine speed output		B137	9	—	0 — 13, or more	Waveform
Purge control solenoid valve		B84	16	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—
Manifold absolute pressure sensor	Signal	B135	8	1.7 — 2.4	1.1 — 1.6	—
	Power supply	B135	9	5	5	
	GND (sensor)	B135	19	0	0	
Fuel level sensor		B135	25	0.12 — 4.75	0.12 — 4.75	—
Small light switch		B134	17	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Blower fan switch		B134	9	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Rear defogger switch		B134	3	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Power steering oil pressure switch		B135	24	10 — 13	ON: 0 OFF: 13 — 14	—
Wiper switch		B135	12	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Front oxygen (A/F) sensor signal (+)		B84	29	2.8 — 3.2	2.8 — 3.2	—
Front oxygen (A/F) sensor signal (−)		B84	19	2.4 — 2.7	2.4 — 2.7	—
Front oxygen (A/F) sensor shield		B84	18	0	0	—
SSM/GST communication line		B134	21	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—
Torque control 1 signal		B134	19	More than 4	More than 4	—
Torque control 2 signal		B134	18	More than 4	More than 4	—
Torque control cut signal		B137	14	8	8	—
AT diagnosis input signal		B135	20	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	Waveform
AT load signal		B135	28	4.3 — 4.4	0.9 — 1.4	—
GND (sensors)		B135	19	0	0	—

Content	Connector No.	Terminal No.	Signal (V)		Note
			Ignition SW ON (Engine OFF)	Engine ON (Idling)	
GND (injectors)	B137	8	0	0	—
GND (ignition system)	B137	18	0	0	—
GND (power supply)	B137	17	0	0	—
	B134	22	0	0	—
GND (control systems)	B134	7	0	0	—
	B134	15	0	0	—
GND (oxygen sensor heater 1)	B84	9	0	0	—
GND (oxygen sensor heater 2)	B84	8	0	0	—

6. Engine Condition Data

A: ELECTRICAL SPECIFICATION

Content	Specified data
Engine load	1.6 — 2.9 (%): Idling
	6.4 — 12.8 (%): 2,500 rpm racing

Measuring condition:
- After warm-up the engine.
- Gear position is in neutral position.
- A/C is turned to OFF.
- All accessory switches are turned to OFF.

7. Transmission Control Module (TCM) I/O Signal

A: ELECTRICAL SPECIFICATION

<Ref. to 4AT-13, Transmission Control Module (TCM) I/O Signal.>

8. Data Link Connector

A: NOTE

This connector is used both for the OBD-II general scan tools and Subaru Select Monitor.

CAUTION:
Do not connect any scan tools other than the OBD-II general scan tools and Subaru Select Monitor, because the circuit for Subaru Select Monitor may be damaged.

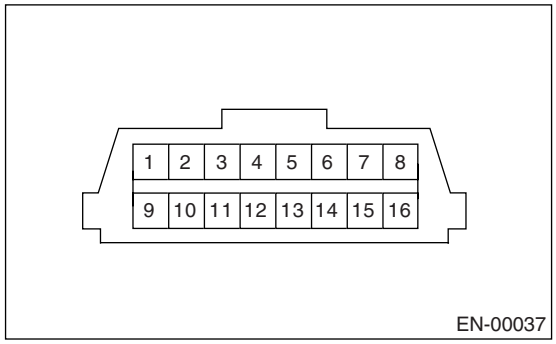

Terminal No.	Contents	Terminal No.	Contents
1	Power supply	9	Blank
2	Blank	10	Subaru Select Monitor signal
3	Blank	11	Blank
4	Blank	12	Ground
5	Blank	13	Ground
6	Line end check signal 1	14	Blank
7	Blank	15	Blank
8	Line end check signal 2	16	Blank

9. OBD-II General Scan Tool

A: OPERATION

1. HOW TO USE OBD-II GENERAL SCAN TOOL

1) Prepare a general scan tool (OBD-II general scan tool) required by SAE J1978.
2) Open the cover and connect the OBD-II general scan tool to data link connector located in the lower portion of instrument panel (on the driver's side).

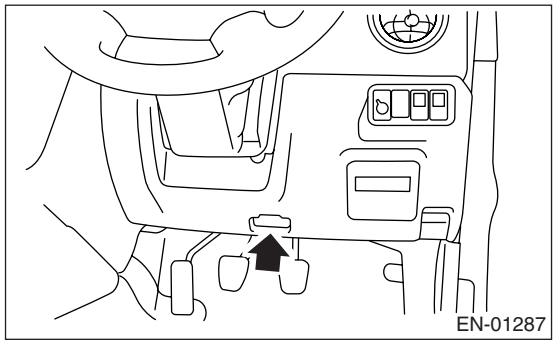

3) Using the OBD-II general scan tool, call up DTC and freeze frame data.
OBD-II general scan tool functions consist of:
(1) MODE $01: Current powertrain diagnostic data
(2) MODE $02: Powertrain freeze frame data
(3) MODE $03: Emission-related powertrain DTC
(4) MODE $04: Clear/Reset emission-related diagnostic information
Read out the data according to repair procedures. (For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual.)

NOTE:
For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

2. MODE $01 (CURRENT POWERTRAIN DIAGNOSTIC DATA)

Refers to data denoting the current operating condition of analog input/output, digital input/output and/or the powertrain system.
A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
01	Number of emission-related powertrain DTC and malfunction indicator light status	ON/OFF
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim	%
07	Long term fuel trim	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h
0E	Ignition timing advance	°
0F	Intake air temperature	°C
10	Air flow rate from manifold absolute pressure sensor	g/sec
11	Throttle valve opening angle	%
13	Check whether oxygen sensor is installed.	—
15	Oxygen sensor output voltage and short term fuel trim associated with oxygen sensor—bank 2	V and %
24	A/F sensor 1 output voltage and short term fuel trim associated with A/F sensor 1	V and %
1C	On-board diagnosis system	—

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to access generic OBD-II PIDs (MODE $01).

3. MODE $02 (POWERTRAIN FREEZE FRAME DATA)

Refers to data denoting the operating condition when trouble is sensed by the on-board diagnosis system. A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
02	DTC that caused CARB required freeze frame data storage	—
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim	%
07	Long term fuel trim	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to access freeze frame data (MODE $02).

4. MODE $03 (EMISSION-RELATED POWERTRAIN DIAGNOSTIC TROUBLE CODE (DTC))

Refer to Read Diagnostic Trouble Code (DTC) for information about data denoting emission-related powertrain DTC. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>

5. MODE $04 (CLEAR/RESET EMISSION-RELATED DIAGNOSTIC INFORMATION)

Refers to the mode used to clear or reset emission-related diagnostic information (OBD-II trouble diagnostic information).

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to clear or reset emission-related diagnostic information (MODE $04).

10.Subaru Select Monitor

A: OPERATION

1. HOW TO USE SUBARU SELECT MONITOR

1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)-8, PREPARATION TOOL, General Description.>

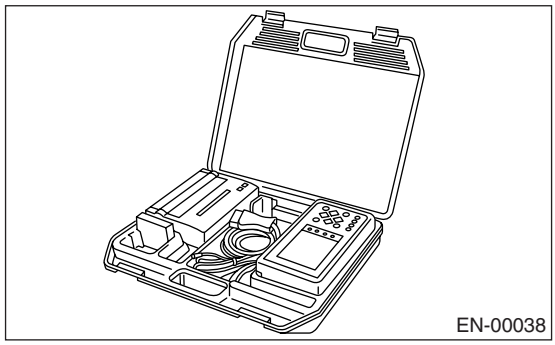

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4DOTC)-8, PREPARATION TOOL, General Description.>

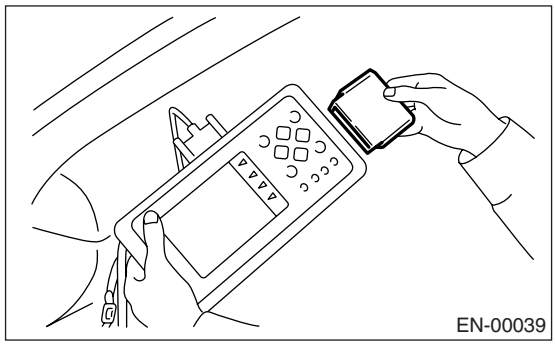

4) Connect the Subaru Select Monitor to data link connector.
(1) Data link connector is located in the lower portion of instrument panel (on the driver's side).

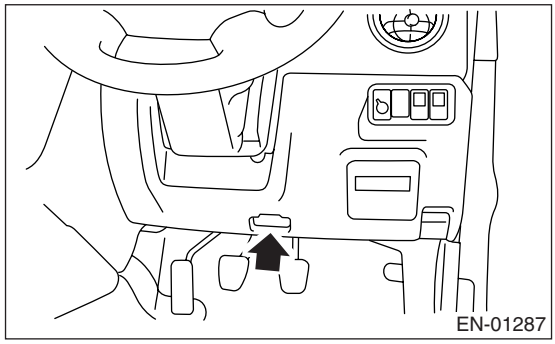

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

5) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

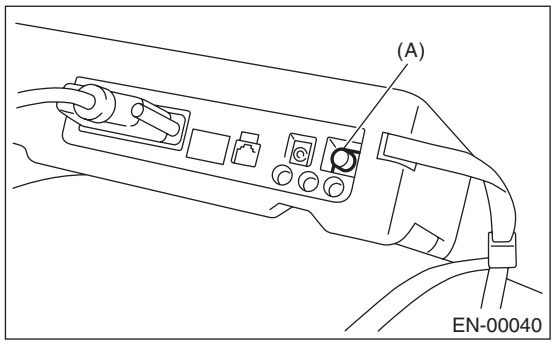

(A) Power switch

6) Using the Subaru Select Monitor, call up the DTC and various data, and then record them.

2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE. (NORMAL MODE)

Refer to Read Diagnostic Trouble Code (DTC) for information about how to indicate DTC. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>

3. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE. (OBD MODE)

Refer to Read Diagnostic Trouble Code (DTC) for information about how to indicate DTC. <Ref. to EN(H4DOTC)-39, Read Diagnostic Trouble Code (DTC).>

4. READ CURRENT DATA FOR ENGINE. (NORMAL MODE)

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until desired data is shown.
• A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Vehicle speed signal	Vehicle Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Engine coolant temperature signal	Coolant Temp.	°C or °F
Ignition timing signal	Ignition Timing	deg
Throttle position signal	Throttle Opening Angle	%
Throttle position signal	Throttle Sensor Voltage	V
Injection pulse width	Fuel Injection #1 Pulse	ms
Idle air control signal	ISC Valve Duty Ratio	%
Alternator duty control signal	ALT Duty	%
Fuel pump duty control signal	Fuel Pump Duty	%
A/F sensor current	A/F Sensor #1 Current	mA
A/F sensor resistance	A/F Sensor #1 Resistance	Ω
Front oxygen (A/F) sensor output signal	A/F Sensor #1	—
Rear oxygen sensor output signal	Rear O_2 Sensor	V
Short term fuel trim	A/F Correction #1	%
Knock sensor signal	Knocking Correction	deg
Atmospheric absolute pressure signal	Atmosphere Pressure	mmHg or kPa or inHg or psi
Intake manifold relative pressure signal	Mani. Relative Pressure	mmHg or kPa or inHg or psi
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg or kPa or inHg or psi
A/F correction (short term fuel trim) by rear oxygen sensor	A/F Correction #3	%
Long term whole fuel trim	A/F Learning #1	%
Front oxygen (A/F) sensor heater current	A/F Heater Current 1	A
Rear oxygen sensor heater voltage	Rear O_2 Heater Voltage	V
Canister purge control solenoid valve duty ratio	CPC Valve Duty Ratio	%
Primary supercharged pressure control signal	Primary Control	%
Tumble generator valve position sensor signal (right side)	TGV Position Sensor R	V
Tumble generator valve position sensor signal (left side)	TGV Position Sensor L	V
Tumble generator valve drive signal	TGV Drive	OPEN or CLOSE
Fuel level signal	Fuel Level	V
Intake air temperature signal	Intake Air Temp.	°C or °F
Learned ignition timing	Learned Ignition Timing	deg
Mass air flow sensor signal	Mass Air Flow	g/s
Mass air flow sensor signal	Air Flow Sensor Voltage	V
Valve timing signal	VVT Adv. Ang. Amount R	deg
Valve timing signal	VVT Adv. Ang. Amount L	deg
Variable valve timing solenoid valve signal	OCV Duty R	%
Variable valve timing solenoid valve signal	OCV Duty L	%

Contents	Display	Unit of measure
Variable valve timing solenoid valve current	OCV Current R	mA
Variable valve timing solenoid valve current	OCV Current L	mA
AT/MT identification signal	AT Vehicle ID Signal	AT or MT
Test mode signal	Test Mode Signal	ON or OFF
Electric load switch signal	Electric Load Signal	ON or OFF
Air fuel ratio control system for Bank 1	Fuel System For Bank 1	—
Ignition switch signal	Ignition Switch	ON or OFF
Test mode connector signal	Test Mode Signal	ON or OFF
Neutral position switch signal	Neutral Position Switch	ON or OFF
Air conditioning switch signal	A/C Switch	ON or OFF
Air conditioning signal	A/C Compressor Signal	ON or OFF
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF
Fuel pump relay signal	Fuel Pump Relay	ON or OFF
Knocking signal	Knocking Signal	ON or OFF
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF
Power steering switch signal	P/S Switch	ON or OFF
Engine torque control signal #1	Torque Control Signal #1	ON or OFF
Engine torque control signal #2	Torque Control Signal #2	ON or OFF
Engine torque control permission signal	Torque Permission Signal	ON or OFF
Rear oxygen sensor rich signal	Rear O_2 Rich Signal	ON or OFF
Starter switch signal	Starter Switch	ON or OFF
Idle switch signal	Idle Switch	ON or OFF
Crankshaft position sensor signal	Crankshaft Position Sig.	ON or OFF
Camshaft position sensor signal	Camshaft Position Sig.	ON or OFF
Rear defogger switch signal	Rear Defogger SW	ON or OFF
Blower fan switch signal	Blower Fan SW	ON or OFF
Small light switch signal	Light Switch	ON or OFF
Tumble generator valve output signal	TGV Output	ON or OFF

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

5. READ CURRENT DATA FOR ENGINE. (OBD MODE)

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On the «OBD Menu» display screen, select the {Current Data Display & Save} and press the [YES] key.
6) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
7) Using the scroll key, move the display screen up or down until desired data is shown.
• A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Number of DTC	Number of DTC	—
Malfunction indicator light status	MI (MIL)	Complete or incomplete
Monitoring test of misfire	Misfire monitoring	Complete or incomplete
Monitoring test of fuel system	Fuel system monitoring	Complete or incomplete
Monitoring test of comprehensive component	Component monitoring	Complete or incomplete
Test of catalyst	Catalyst Diagnosis	Complete or incomplete
Test of heated catalyst	Heated catalyst	No support
Test of evaporative emission purge control system	Evaporative purge system	No support
Test of secondary air system	Secondary air system	No support
Test of air conditioning system refrigerant	A/C system refrigerant	No support
Test of oxygen sensor	Oxygen sensor	Complete or incomplete
Test of oxygen sensor heater	O_2 Heater Diagnosis	Complete or incomplete
Test of EGR system	EGR system	No support
Air fuel ratio control system for bank 1	Fuel System for Bank 1	—
Engine load data	Calculated load value	%
Engine coolant temperature signal	Coolant Temp.	°C or °F
Short term fuel trim by front oxygen (A/F) sensor	Short term fuel trim B1	%
Long term fuel trim by front oxygen (A/F) sensor	Long term fuel trim B1	%
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg or kPa or inHg or psi
Engine speed signal	Engine Speed	rpm
Vehicle speed signal	Vehicle Speed	km/h or MPH
Ignition timing advance for #1 cylinder	Ignition timing adv. #1	°
Intake air temperature signal	Intake Air Temp.	°C or °F
Intake air amount	Mass Air Flow	g/s
Throttle position signal	Throttle Opening Angle	%
A/F sensor equipment	A/F sensor	—
Rear oxygen sensor output signal	Oxygen Sensor #12	V
Air fuel ratio correction by rear oxygen sensor	Short term fuel trim #12	%
On-board diagnostic system	OBD System	—
A/F sensor output signal	A/F sensor #11	V
A/F lambda signal	A/F sensor #11	—

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

6. READ FREEZE FRAME DATA FOR ENGINE. (OBD MODE)

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On the «OBD Menu» display screen, select the {Freeze Frame Data} and press the [YES] key.
• A list of the support data is shown in the following table.

Contents	Display	Unit of measure
DTC for freeze frame data	Freeze frame data	DTC
Air fuel ratio control system for bank 1	Fuel system for Bank1	ON or OFF
Engine load data	Engine Load	%
Engine coolant temperature signal	Coolant Temp.	°C or °F
Short term fuel trim by front oxygen (A/F) sensor	Short term fuel trim B1	%
Long term fuel trim by front oxygen (A/F) sensor	Long term fuel trim B1	%
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg, kPa, inHg or psi
Engine speed signal	Engine Speed	rpm
Vehicle speed signal	Vehicle Speed	km/h or MPH
Air fuel ratio control system for bank 1	Fuel System for Bank 1	—
Ignition timing advance for #1 cylinder	Ignition timing adv. #1	°
Intake air temperature signal	Intake Air Temp.	°C or °F
Intake air amount	Mass Air Flow	g/s
Throttle position signal	Throttle Opening Angle	%

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

7. READ OXYGEN SENSOR MONITORING TEST RESULTS DATA FOR ENGINE. (OBD MODE)

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On the «OBD Menu» display screen, select the {O_2 Sensor Monitor} and press the [YES] key.
6) On the «O_2 Sensor Select» display screen, select the {Bank 1-Sensor1} or {Bank 1-Sensor2} and press the [YES] key.
• Bank 1-Sensor1 indicates the front oxygen or A/F sensor, and Bank 1-Sensor2 indicates the rear oxygen sensor.
• A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Oxygen sensor for monitoring test	<O_2 Sensor Monitor (-------)>	—
Rich to lean oxygen sensor threshold voltage	Rich to lean sensor volt	V
Lean to rich oxygen sensor threshold voltage	Lean to rich sensor volt	V
Low oxygen sensor voltage for switch time calculation	Low sensor voltage	V
High oxygen sensor voltage for switch time calculation	High sensor voltage	V
Rich to lean oxygen sensor switch time	Rich to lean switch time	sec
Lean to rich oxygen sensor switch time	Lean to rich switch time	sec
Maximum oxygen sensor voltage for test cycle	Maximum sensor Voltage	V
Minimum oxygen sensor voltage for test cycle	Minimum sensor Voltage	V

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

8. LED OPERATION MODE FOR ENGINE

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On the «Data Display Menu» display screen, select the {Data & LED Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until the desired data is shown.
• A list of the support data is shown in the following table.

Contents	Display	Message	LED "ON" requirements
Ignition switch signal	Ignition Switch	ON or OFF	When ignition switch is turned to ON.
Test mode connector signal	Test Mode Signal	ON or OFF	When test mode connector is connected.
Neutral position switch signal	Neutral SW	ON or OFF	When neutral position signal is entered.
Air conditioning switch signal	A/C SW	ON or OFF	When air conditioning switch is turned ON.
Air conditioning relay signal	A/C Relay	ON or OFF	When air conditioning relay is in function.
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF	When radiator main fan relay is in function.
Knocking signal	Knocking Signal	ON or OFF	When knocking signal is entered.
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF	When radiator sub fan relay is in function.
Engine torque control signal #1	Torque Control Signal #1	ON or OFF	When engine torque control signal 1 is entered.
Engine torque control signal #2	Torque Control Signal #2	ON or OFF	When engine torque control signal 2 is entered.
Engine torque control permission signal	Torque Control Permit	ON or OFF	When engine torque control permission signal is entered.
Rear oxygen sensor rich signal	Rear O_2 Rich Signal	ON or OFF	When rear oxygen sensor mixture ratio is rich.
Starter switch signal	Starter Switch Signal	ON or OFF	When starter switch signal is entered.
Idle switch signal	Idle Switch Signal	ON or OFF	When idle switch signal is entered.
Crankshaft position sensor signal	Crankshaft Position Sig.	ON or OFF	When crankshaft position sensor signal is entered.
Camshaft position sensor signal	Camshaft Position Sig.	ON or OFF	When camshaft position sensor signal is entered.
Power steering switch signal	P/S SW	ON or OFF	When power steering switch is entered.
Rear defogger switch signal	Rear Defogger SW	ON or OFF	When rear defogger switch is turned ON.
Blower fan switch signal	Blower Fan SW	ON or OFF	When blower fan switch is turned ON.
Light switch signal	Light SW	ON or OFF	When small light switch is turned ON.
AT/MT identification signal	AT Vehicle ID Signal	ON or OFF	When AT vehicle is checked.
Tumble generator valve actuator signal	TGV Signal	ON or OFF	When TGV actuator signal is entered.
Tumble generator valve drive signal	TGV Drive	ON or OFF	When TGV moves and valve opens.

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

9. READ CURRENT DATA FOR AT

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
3) Press the [YES] key after the information of transmission type is displayed.
4) On the «Transmission Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until desired data is shown.
• A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Rear vehicle speed sensor signal	Rear Wheel Speed	km/h or MPH
Front vehicle speed sensor signal	Front Wheel Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Automatic transmission fluid temperature signal	ATF Temp.	°C or °F
Mass air flow sensor signal	Air Flow Sensor Voltage	V
Throttle position signal	Throttle Sensor Voltage	V
Gear position	Gear Position	—
Line pressure control duty ratio	Line Pressure Duty Ratio	%
Lock up clutch control duty ratio	Lock Up Duty Ratio	%
Transfer clutch control duty ratio	Transfer Duty Ratio	%
Power supply for throttle position sensor	Throttle Sensor Power	V
Torque converter turbine speed signal	Turbine Revolution Speed	rpm
2-4 brake timing pressure control duty ratio	Brake Clutch Duty Ratio	%
Stop lamp switch signal	Stop Light Switch	ON or OFF
Anti lock brake system signal	ABS Signal	ON or OFF
Cruise control system signal	Cruise Control Signal	ON or OFF
Neutral/Parking range signal	N/P Range Signal	ON or OFF
Reverse range signal	R Range Signal	ON or OFF
Drive range signal	D Range Signal	ON or OFF
3rd range signal	3rd Range Signal	ON or OFF
2nd range signal	2nd Range Signal	ON or OFF
1st range signal	1st Range Signal	ON or OFF
Shift control solenoid A	Shift Solenoid #1	ON or OFF
Shift control solenoid B	Shift Solenoid #2	ON or OFF
Torque control output signal #1	Torque Control Signal #1	ON or OFF
Torque control output signal #2	Torque Control Signal #2	ON or OFF
Torque control cut signal	Torque Control Cut Sig.	ON or OFF
2-4 brake timing control solenoid valve	2-4 Brake Timing Sol.	ON or OFF
Low clutch timing control solenoid valve	Low Clutch Timing Sol.	ON or OFF
Automatic transmission diagnosis indicator lamp	Diagnosis Lamp	ON or OFF

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

11. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {DTC Display} and press the [YES] key.
5) On the «DTC Display» display screen, select the {Current DTC} or {History DTC} and press the [YES] key.

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For detailed concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

2. SUBARU SELECT MONITOR (OBD MODE)

1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On the «OBD Menu» display screen, select the {DTC Display} and press the [YES] key.
6) Make sure that a DTC is shown on the display screen.

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For detailed concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

3. OBD-II GENERAL SCAN TOOL

Refers to data denoting emission-related powertrain DTC.
For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

NOTE:
Refer to OBD-II general scan tool manufacturer's instruction manual to access emission-related powertrain DTC (MODE $03).

12.Inspection Mode

A: OPERATION

Carry out trouble diagnosis shown in the following DTC table.
When performing trouble diagnosis which is not shown in the DTC table, refer to the next item Drive cycle. <Ref. to EN(H4DOTC)-46, Drive Cycle.>

DTC	Item	Condition
P0011	"A" Camshaft Position-Timing Over-Advanced or System Performance (Bank 1)	—
P0021	"A" Camshaft Position-Timing Over-Advanced or System Performance (Bank 2)	—
P0030	HO2S Heater Control Circuit (Bank 1 Sensor 1)	—
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	—
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	—
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	—
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	—
P0068	Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance	—
P0102	Mass or Volume Air Flow Circuit Low Input	—
P0103	Mass or Volume Air Flow Circuit High Input	—
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input	—
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input	—
P0111	Intake Air Temperature Circuit Range/Performance	—
P0112	Intake Air Temperature Circuit Low Input	—
P0113	Intake Air Temperature Circuit High Input	—
P0117	Engine Coolant Temperature Circuit Low Input	—
P0118	Engine Coolant Temperature Circuit High Input	—
P0122	Throttle/Pedal Position Sensor/Switch "A" Circuit Low Input	—
P0123	Throttle/Pedal Position Sensor/Switch "A" Circuit High Input	—
P0129	Atmospheric Pressure Sensor Circuit Range/Performance	—
P0130	O_2 Sensor Circuit (Bank 1 Sensor 1)	—
P0134	O_2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	—
P0137	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	—
P0138	O_2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	—
P0171	System too Lean (Bank 1)	—
P0172	System too Rich (Bank 1)	—
P0230	Fuel Pump Primary Circuit	—
P0245	Turbo/Super Charger Wastegate Solenoid "A" Low	—
P0246	Turbo/Super Charger Wastegate Solenoid "A" High	—
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)	—
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)	—
P0335	Crankshaft Position Sensor "A" Circuit	—
P0336	Crankshaft Position Sensor "A" Circuit Range/Performance	—
P0340	Camshaft Position Sensor "A" Circuit (Bank 1 or Single Sensor)	—
P0341	Camshaft Position Sensor "A" Circuit Range/Performance (Bank 1 or Single Sensor)	—
P0365	Camshaft Position Sensor "B" Circuit (Bank 1)	—
P0390	Camshaft Position Sensor "B" Circuit (Bank 2)	—
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low	—
P0462	Fuel Level Sensor Circuit Low Input	—
P0463	Fuel Level Sensor Circuit High Input	—
P0464	Fuel Level Sensor Circuit Intermittent	—

DTC	Item	Condition
P0502	Vehicle Speed Sensor Circuit Low Input	—
P0503	Vehicle Speed Sensor Intermittent/Erratic/High	—
P0508	Idle Control System Circuit Low	—
P0509	Idle Control System Circuit High	—
P0512	Starter Request Circuit	—
P0513	Incorrect Immobilizer Key	—
P0519	Idle Control System Malfunction (Fail-Safe)	—
P0558	Generator Circuit Low Input	—
P0559	Generator Circuit High Input	—
P0565	Cruise Control On Signal	—
P0604	Internal Control Module Random Access Memory (RAM) Error	—
P0691	Cooling Fan 1 Control Circuit Low	—
P0692	Cooling Fan 1 Control Circuit High	—
P0703	Torque Converter/Brake Switch “B” Circuit	—
P0705	Transmission Range Sensor Circuit (PRNDL Input)	—
P0710	Transmission Fluid Temperature Sensor Circuit	—
P0716	Torque Converter Turbine Speed Sensor	—
P0720	Output Speed Sensor Circuit	—
P0726	Engine Speed Input Circuit Range/Performance	—
P0731	Gear 1 Incorrect Ratio	—
P0732	Gear 2 Incorrect Ratio	—
P0733	Gear 3 Incorrect Ratio	—
P0734	Gear 4 Incorrect Ratio	—
P0741	Torque Converter Clutch Circuit Performance or Stuck Off	—
P0743	Torque Converter Clutch Circuit Electrical	—
P0748	Pressure Control Solenoid “A” Electrical	—
P0753	Shift Solenoid “A” Electrical	—
P0758	Shift Solenoid “B” Electrical	—
P0771	Low Clutch Timing Solenoid	—
P0778	Pressure Control Solenoid “B” Electrical	—
P0785	Shift/Timing Solenoid	—
P0851	Neutral Switch Input Circuit Low	—
P0852	Neutral Switch Input Circuit High	—
P0864	TCM Communication Circuit Range/Performance	—
P0865	TCM Communication Circuit Low	—
P0866	TCM Communication Circuit High	—
P1086	Tumble Generated Valve Position Sensor 2 Circuit Low	—
P1087	Tumble Generated Valve Position Sensor 2 Circuit High	—
P1088	Tumble Generated Valve Position Sensor 1 Circuit Low	—
P1089	Tumble Generated Valve Position Sensor 1 Circuit High	—
P1090	Tumble Generated Valve System 1 (Valve Open)	Engine coolant temperature is −5 — 5°C (−41 — 41°F) at engine start.
P1091	Tumble Generated Valve System 1 (Valve Close)	—
P1092	Tumble Generated Valve System 2 (Valve Open)	Engine coolant temperature is −5 — 5°C (−41 — 41°F) at engine start.
P1093	Tumble Generated Valve System 2 (Valve Close)	—
P1094	Tumble Generated Valve Signal 1 Circuit Malfunction (Open)	—
P1095	Tumble Generated Valve Signal 1 Circuit Malfunction (Short)	—
P1096	Tumble Generated Valve Signal 2 Circuit Malfunction (Open)	—
P1097	Tumble Generated Valve Signal 2 Circuit Malfunction (Short)	—
P1110	Atmospheric Pressure sensor circuit malfunction (Low input)	—
P1111	Atmospheric Pressure sensor circuit malfunction (High input)	—

DTC	Item	Condition
P1134	A/F Sensor Micro-Computer Problem	—
P1152	O_2 Sensor Circuit Range/Performance (Low) (Bank1 Sensor1)	—
P1153	O_2 Sensor Circuit Range/Performance (High) (Bank1 Sensor1)	—
P1306	OCV Solenoid Valve Signal 1 Circuit Malfunction (Open)	—
P1307	OCV Solenoid Valve Signal 1 Circuit Malfunction (Short)	—
P1308	OCV Solenoid Valve Signal 2 Circuit Malfunction (Open)	—
P1309	OCV Solenoid Valve Signal 2 Circuit Malfunction (Short)	—
P1518	Starter Switch Circuit Low Input	—
P1560	Back-up Voltage Circuit Malfunction	—
P1570	Antenna	—
P1571	Reference Code Incompatibility	—
P1572	IMM Circuit Failure (Except Antenna Circuit)	—
P1574	Key Communication Failure	—
P1576	EGI Control Module EEPROM	—
P1577	IMM Control Module EEPROM	—
P1698	Engine Torque Control Cut Signal Circuit Low Input	—
P1699	Engine Torque Control Cut Signal Circuit High Input	—
P1700	Throttle Position Sensor	—
P1711	Engine Torque Control Signal 1 Circuit Malfunction	—
P1712	Engine Torque Control Signal 2 Circuit Malfunction	—

1. PREPARATION FOR THE INSPECTION MODE

1) Make sure that the fuel remains approx. half amount [20 — 40 ℓ (5.3 — 10.6 US gal, 4.4 — 8.8 Imp gal)] and the battery voltage is 12 V or more.
2) Raise the vehicle using a garage jack and place on safety stands or drive the vehicle onto free rollers.

WARNING:
• Before raising the vehicle, ensure the parking brake is applied.
• Do not use a pantograph jack in place of a safety stand.
• Secure a rope or wire to the front and rear towing or tie-down hooks to prevent the lateral runout of front wheels.
• Do not abruptly depress/release the clutch pedal or accelerator pedal during works even when engine is operating at low speeds since this may cause vehicle to jump off free rollers.
• In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the safety stands and the vehicle.
• Since the rear wheels will also rotate, do not place anything near them. Also, make sure that nobody goes in front of the vehicle.

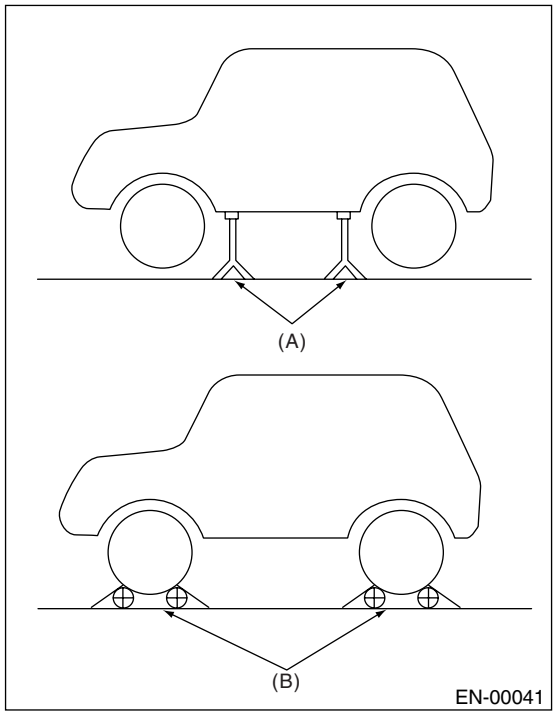

(A) Safety stand
(B) Free rollers

2. SUBARU SELECT MONITOR

1) Clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H4DOTC)-48, Clear Memory Mode.>
2) Warm up the engine.
3) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)-8, PREPARATION TOOL, General Description.>

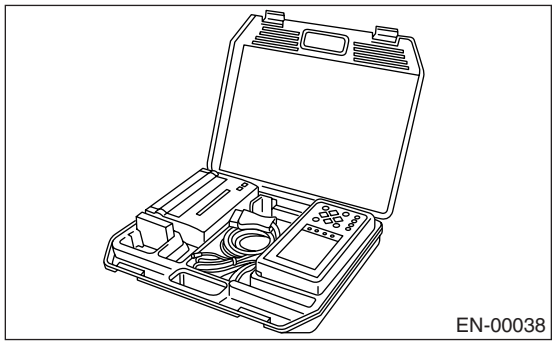

4) Connect the diagnosis cable to Subaru Select Monitor.
5) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4DOTC)-8, PREPARATION TOOL, General Description.>

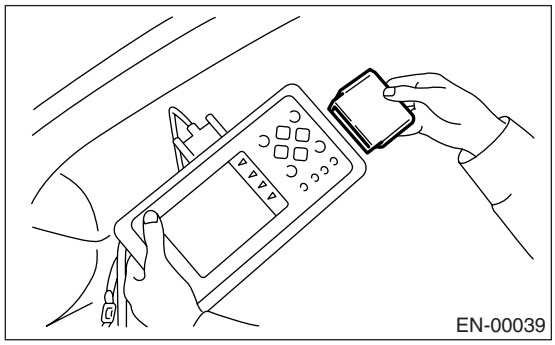

6) Connect the test mode connector (A) at the lower portion of instrument panel (on the driver's side).

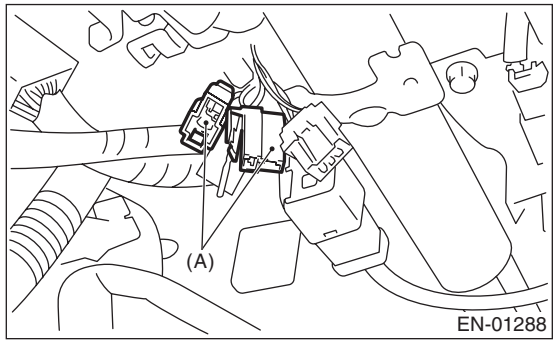

(A) Test mode connector

7) Connect the Subaru Select Monitor to data link connector.

(1) Connect the Subaru Select Monitor to data link connector located in the lower portion of the instrument panel (on the driver's side).

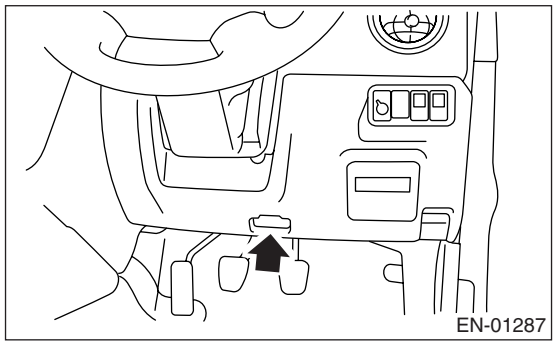

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

8) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

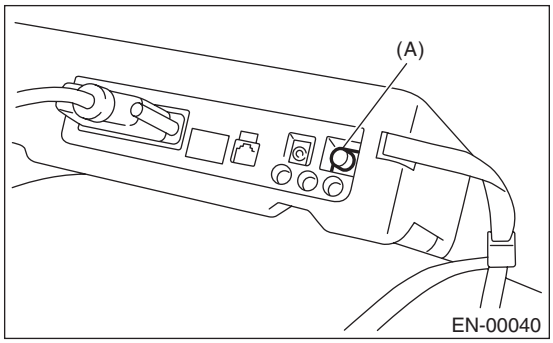

(A) Power switch

9) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
10) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
11) Press the [YES] key after the information of engine type is displayed.
12) On the «Engine Diagnosis» display screen, select the {Dealer Check Mode Procedure} and press the [YES] key.
13) When the “Perform Inspection (Dealer Check) Mode?” is shown on the display screen, press the [YES] key.
14) Perform subsequent procedures as instructed on the display screen.

- If trouble still remains in the memory, the corresponding DTC appears on the display screen.

NOTE:
- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For detailed concerning the DTC, refer to the List of Diagnostic Trouble Code (DTC).

<Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

- Release the parking brake.
- The speed difference between front and rear wheels may light either the ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

3. OBD-II GENERAL SCAN TOOL

1) After performing the diagnostics and clearing memory, check for any remaining unresolved trouble data: <Ref. to EN(H4DOTC)-48, Clear Memory Mode.>
2) Warm up the engine.
3) Connect the test mode connector (A) at the lower side of instrument panel (on the driver's side).

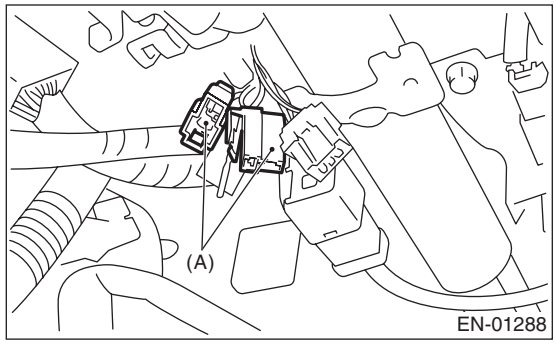

4) Connect the OBD-II general scan tool to its data link connector in the lower portion of instrument panel (on the driver's side).

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

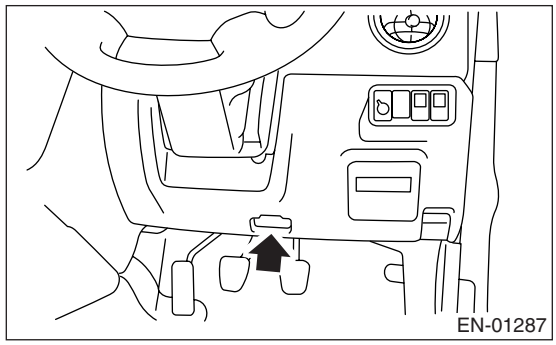

5) Start the engine.

NOTE:
• Ensure the select lever is placed in “P” range before starting. (AT model)
• Depress the clutch pedal when starting engine. (MT model)

6) Using the select lever or shift lever, turn the “P” position switch and “N” position switch to ON.
7) Depress the brake pedal to turn brake switch ON. (AT model)
8) Keep the engine speed in 2,500 — 3,000 rpm range for 40 seconds.
9) Place the select lever or shift lever in “D” range (AT model) or “1st” gear (MT model) and drive the vehicle at 5 to 10 km/h (3 to 6 MPH).

NOTE:
• On AWD model, release the parking brake.
• The speed difference between front and rear wheels may light ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

10) Using the OBD-II general scan tool, check for DTC and record the result(s).

NOTE:
• For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.
• For detailed concerning DTC, refer to the List of Diagnostic Trouble Code (DTC).
<Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

13.Drive Cycle

A: OPERATION

There are three drive patterns for the trouble diagnosis. Driving in the specified pattern allows to diagnose malfunctioning items listed below. After the malfunctioning items listed below are repaired, always check whether they correctly resume their functions by driving in the required drive pattern.

1. PREPARATION FOR THE DRIVE CYCLE

1) Make sure that the fuel remains approx. half amount [20 — 40 ℓ (5.3 — 10.6 US gal, 4.4 — 8.8 Imp gal)], and battery voltage is 12 V or more.
2) After performing the diagnostics and cleaning memory, check for any remaining unresolved trouble data. <Ref. to EN(H4DOTC)-48, Clear Memory Mode.>
3) Separate the test mode connector.

NOTE:
• Except for the engine coolant temperature specified items at starting, the diagnosis is carried out after engine warm up.
• Carry out the diagnosis which is marked * on DTC twice, then, after finishing first diagnosis, stop the engine and do second time at the same condition.

2. AFTER RUNNING 20 MINUTES AT 80 KM/H (50 MPH), IDLE ENGINE FOR 1 MINUTE.

DTC	Item	Condition
*P0125	Insufficient Coolant Temperature for Closed Loop Fuel Control	Engine coolant temperature is less than 20°C (68°F) at engine start.
*P0133	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	—
*P0420	Catalyst System Efficiency Below Threshold (Bank 1)	—
P0459	Evaporative Emission Control System Purge Control Valve Circuit High	—
P0461	Fuel Level Sensor Circuit Range/Performance	—
P0545	Exhaust Gas Temperature Sensor Circuit Low-Bank1	—
P0546	Exhaust Gas Temperature Sensor Circuit High-Bank1	—
P1312	Exhaust Gas Temperature Sensor Malfunction	Engine coolant temperature is less than 30°C (86°F) at engine start.

3. IDLE FOR 10 MINUTES

NOTE:
Before the diagnosis, drive the vehicle at 10 km/h (6 MPH) or more.

DTC	Item	Condition
*P0483	Cooling Fan Rationality Check	—
*P0506	Idle Control System RPM Lower Than Expected	—
*P0507	Idle Control System RPM Higher Than Expected	—

4. DRIVE ACCORDING TO THE FOLLOWING DRIVE PATTERN

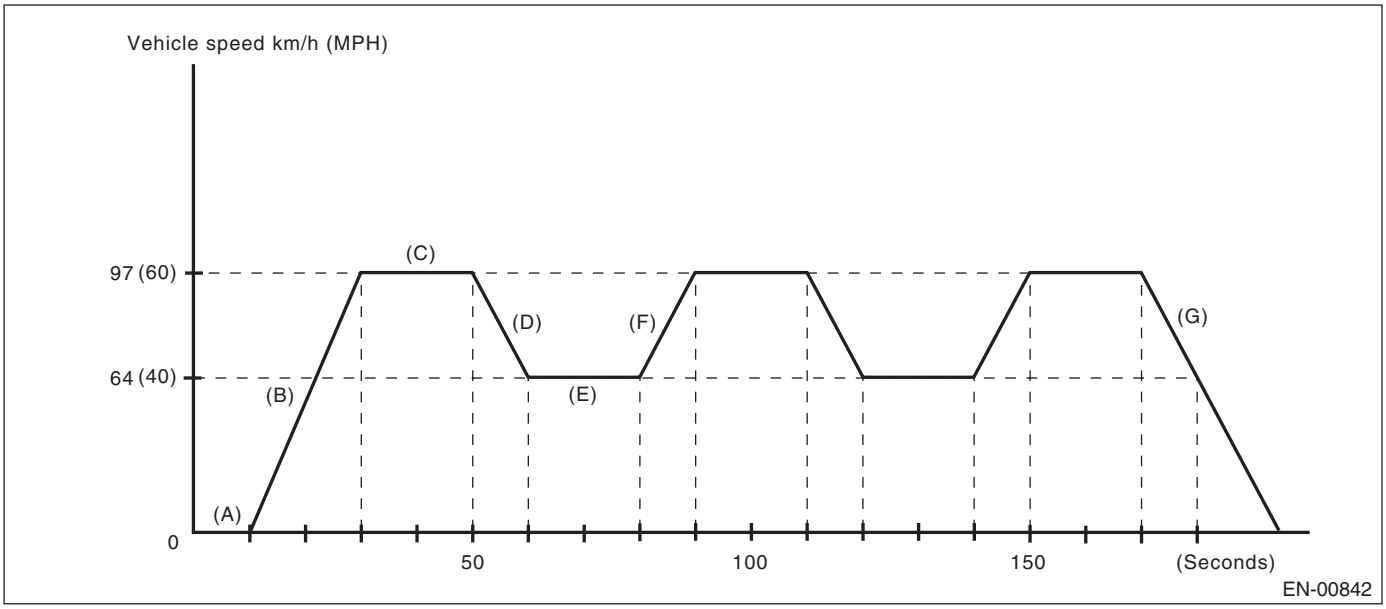

(A) Idle engine for 10 seconds or more.
(B) Accelerate to 97 km/h (60 MPH) within 20 seconds.
(C) Drive vehicle at 97 km/h (60 MPH) for 20 seconds.
(D) Decelerate with fully closed throttle to 64 km/h (40 MPH).
(E) Drive vehicle at 64 km/h (40 MPH) for 20 seconds.
(F) Accelerate to 97 km/h (60 MPH) within 10 seconds.
(G) Stop vehicle with throttle fully closed.

DTC	Item	Condition
*P0121	Throttle/Pedal Position Sensor/Switch “A” Circuit Range/Performance	—
*P0139	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 2)	—
*P0301	Cylinder 1 Misfire Detected	In some cases, diagnosis may complete at once.
*P0302	Cylinder 2 Misfire Detected	In some cases, diagnosis may complete at once.
*P0303	Cylinder 3 Misfire Detected	In some cases, diagnosis may complete at once.
*P0304	Cylinder 4 Misfire Detected	In some cases, diagnosis may complete at once.
*P0101	Mass or Volume Air Flow Circuit Range/Performance	—
P0244	Turbo/Super Charger Wastegate Solenoid “A” Range/Performance	—
P1301	Misfire Detected (High Temperature Exhaust Gas)	—
P1544	Exhaust Gas Temperature Too High	—

14.Clear Memory Mode

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
5) When the 'Done' and 'Turn Ignition Switch OFF' are shown on the display screen, turn the ignition switch to OFF, and then turn the Subaru Select Monitor to OFF.

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

2. SUBARU SELECT MONITOR (OBD MODE)

1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
5) On the «OBD Menu» display screen, select the {4. Diagnosis Code(s) Cleared} and press the [YES] key.
6) When the 'Clear Diagnostic Code?' is shown on the display screen, press the [YES] key.
7) Turn the ignition switch to OFF, and then turn the Subaru Select Monitor to OFF.

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

3. OBD-II GENERAL SCAN TOOL

For clear memory procedures using the OBD-II general scan tool, refer to the OBD-II General Scan Tool Instruction Manual.

15. Compulsory Valve Operation Check Mode

A: OPERATION

1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)-8, PREPARATION TOOL, General Description.>

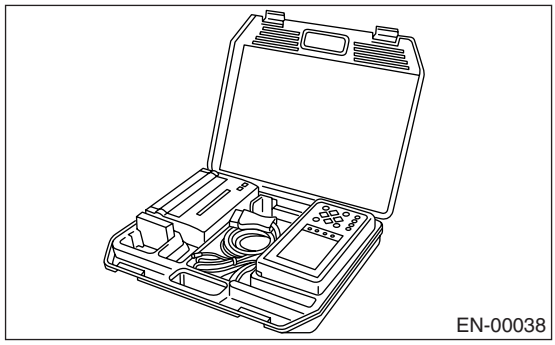

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4DOTC)-8, PREPARATION TOOL, General Description.>

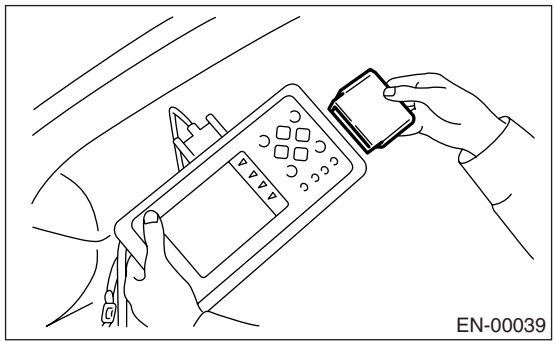

4) Connect the test mode connector (A) at the lower portion of instrument panel (on the driver's side).

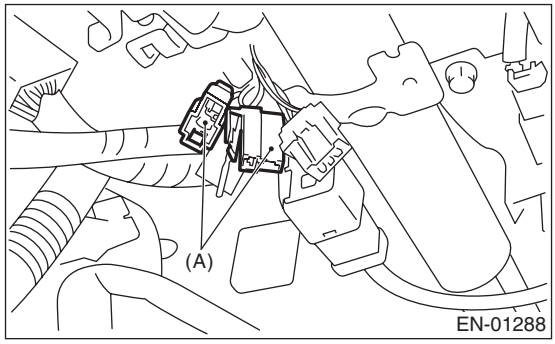

5) Connect the Subaru Select Monitor to data link connector.

(1) Connect the Subaru Select Monitor to data link connector located in the lower portion of instrument panel (on the driver's side).

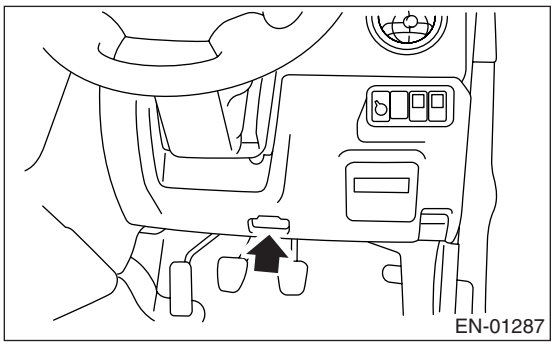

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect scan tools except for the Subaru Select Monitor and OBD-II general scan tool.

6) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

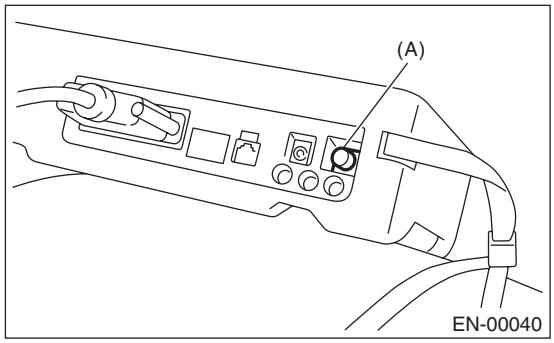

(A) Power switch

7) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
8) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
9) Press the [YES] key after the information of engine type is displayed.
10) On the «Engine Diagnosis» display screen, select the {System Operation Check Mode} and press the [YES] key.
11) On the «System Operation Check Mode» display screen, select the {Actuator ON/OFF Operation} and press the [YES] key.
12) Select the desired compulsory actuator on the «Actuator ON/OFF Operation» display screen and press the [YES] key.
13) Pressing the [NO] key completes the compulsory operation check mode. The display will then return to the «Actuator ON/OFF Operation» screen.

• A list of support data is shown in the following table.

Contents	Display
Compulsory fuel pump relay operation check	Fuel Pump Relay
Compulsory radiator fan relay operation check	Radiator Fan Relay
Compulsory air conditioning relay operation check	A/C Compressor Relay
Compulsory purge control solenoid valve operation check	CPC Solenoid Valve

NOTE:
• The following parts will be displayed but not functional because they are not installed on the vehicle.

Display
EGR Solenoid Valve
ASV Solenoid Valve
PCV Solenoid Valve
Vent Control Solenoid Valve
FICD Solenoid
Pressure Switching Sol. 1
Pressure Switching Sol. 2
AAI Solenoid Valve
Fuel Tank Sensor Control Valve

• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

16.Malfunction Indicator Light

A: PROCEDURE

1. Activation of check malfunction indicator light. <Ref. to EN(H4DOTC)-52, ACTIVATION OF MALFUNCTION INDICATOR LIGHT, Malfunction Indicator Light.>
↓
2. Check that the malfunction indicator light does not come on. <Ref. to EN(H4DOTC)-53, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction Indicator Light.>
↓
3. Check that the malfunction indicator light does not go off. <Ref. to EN(H4DOTC)-55, MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF., Malfunction Indicator Light.>
↓
4. Check that the malfunction indicator light does not blink at a cycle of 3 Hz. <Ref. to EN(H4DOTC)-56, MALFUNCTION INDICATOR LIGHT DOES NOT BLINK AT A CYCLE OF 3 HZ., Malfunction Indicator Light.>
↓
5. Check that the malfunction indicator light remains blinking at a cycle of 3 Hz. <Ref. to EN(H4DOTC)-58, MALFUNCTION INDICATOR LIGHT REMAINS BLINKING AT A CYCLE OF 3 HZ., Malfunction Indicator Light.>

B: ACTIVATION OF MALFUNCTION INDICATOR LIGHT

1) When the ignition switch is turned to ON (engine off), the malfunction indicator light in the combination meter illuminates.

NOTE:
If the malfunction indicator light does not illuminate, perform diagnostics of the malfunction indicator light circuit or the combination meter circuit. <Ref. to EN(H4DOTC)-53, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction Indicator Light.>

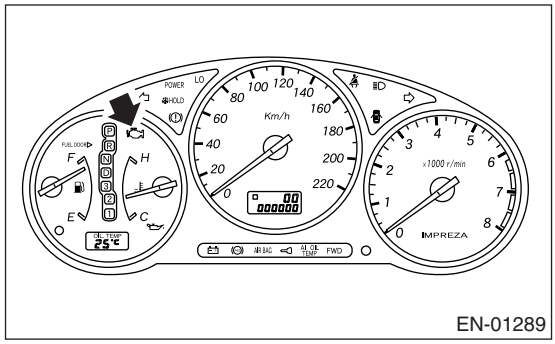

(A) Malfunction indicator light

2) After starting the engine, the malfunction indicator light goes out. If it does not, either the engine or the emission control system is malfunctioning.

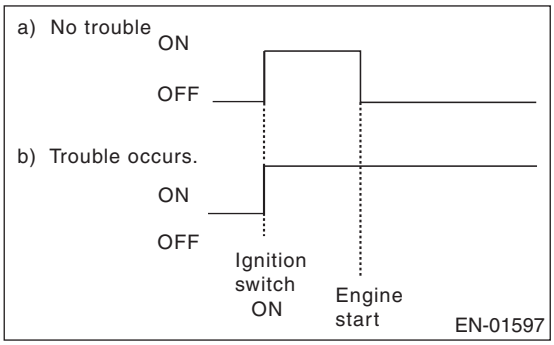

3) If the diagnosis system senses a misfire which could damage the catalyzer, the malfunction indicator light will blink at a cycle of 1 Hz.

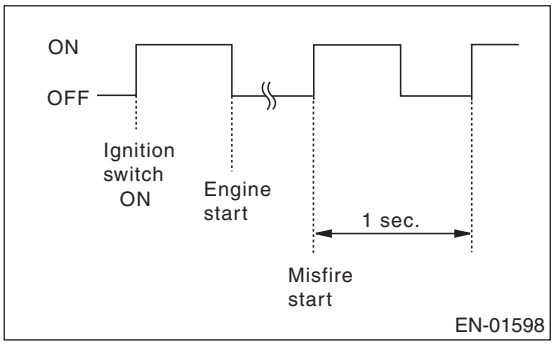

4) When the ignition switch is turned to ON (engine off) or to START with the test mode connector connected, the malfunction indicator light blinks at a cycle of 3 Hz.

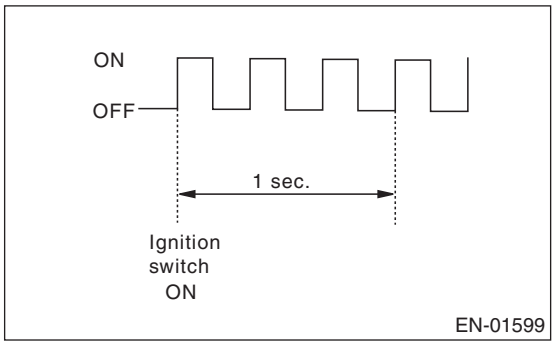

C: MALFUNCTION INDICATOR LIGHT DOES NOT COME ON.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is shorted.
- **TROUBLE SYMPTOM:**
  - When the ignition switch is turned to ON (engine OFF), malfunction indicator light does not come on.
- **WIRING DIAGRAM:**

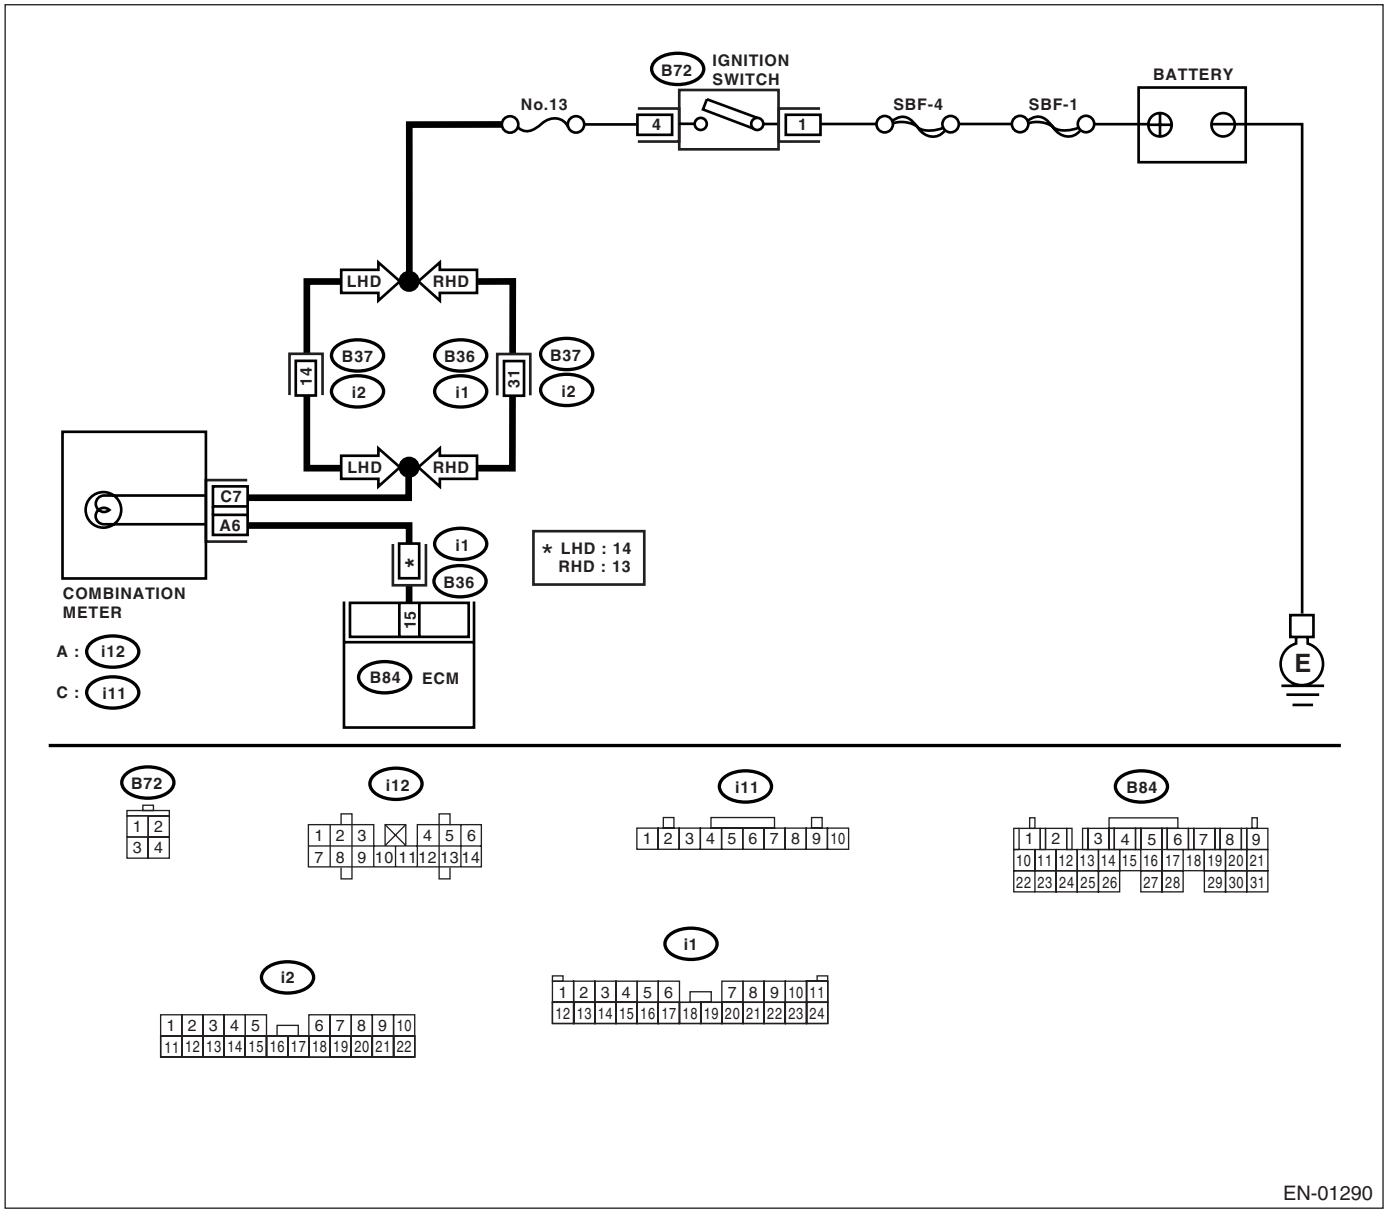

EN-01290

Step		Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 15 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Go to step **2.**
2	**CHECK POOR CONTACT.**	Does the malfunction indicator light come on when shaking or pulling ECM connector and harness?	Repair the poor contact in ECM connector.	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK ECM CONNECTOR.**	Is the ECM connector correctly connected?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Repair the connection of ECM connector.
4	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. <Ref. to IDI-11, Combination Meter Assembly.> 3)Disconnect the connector from ECM and combination meter. 4)Measure the resistance of harness between ECM and combination meter connector. ***Connector & terminal*** ***(B84) No. 15 — (i12) No. 6:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and combination meter connector • Poor contact in coupling connector
5	**CHECK POOR CONTACT.** Check poor contact in combination meter connector.	Is there poor contact in combination meter connector?	Repair the poor contact in combination meter connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN COMBINATION METER AND IGNITION SWITCH CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 7 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the combination meter circuit board. <Ref. to IDI-11, Combination Meter Assembly.>	Check the following and repair if necessary. NOTE: • Blown out fuse (No. 14) • Open or short circuit in harness between fuse (No. 14) and battery terminal • Poor contact in ignition switch connector

D: MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is shorted.
- **TROUBLE SYMPTOM:**
  - Although malfunction indicator light comes on when engine runs, but DTC is not shown on Subaru Select Monitor or OBD-II general scan tool display.
- **WIRING DIAGRAM:**

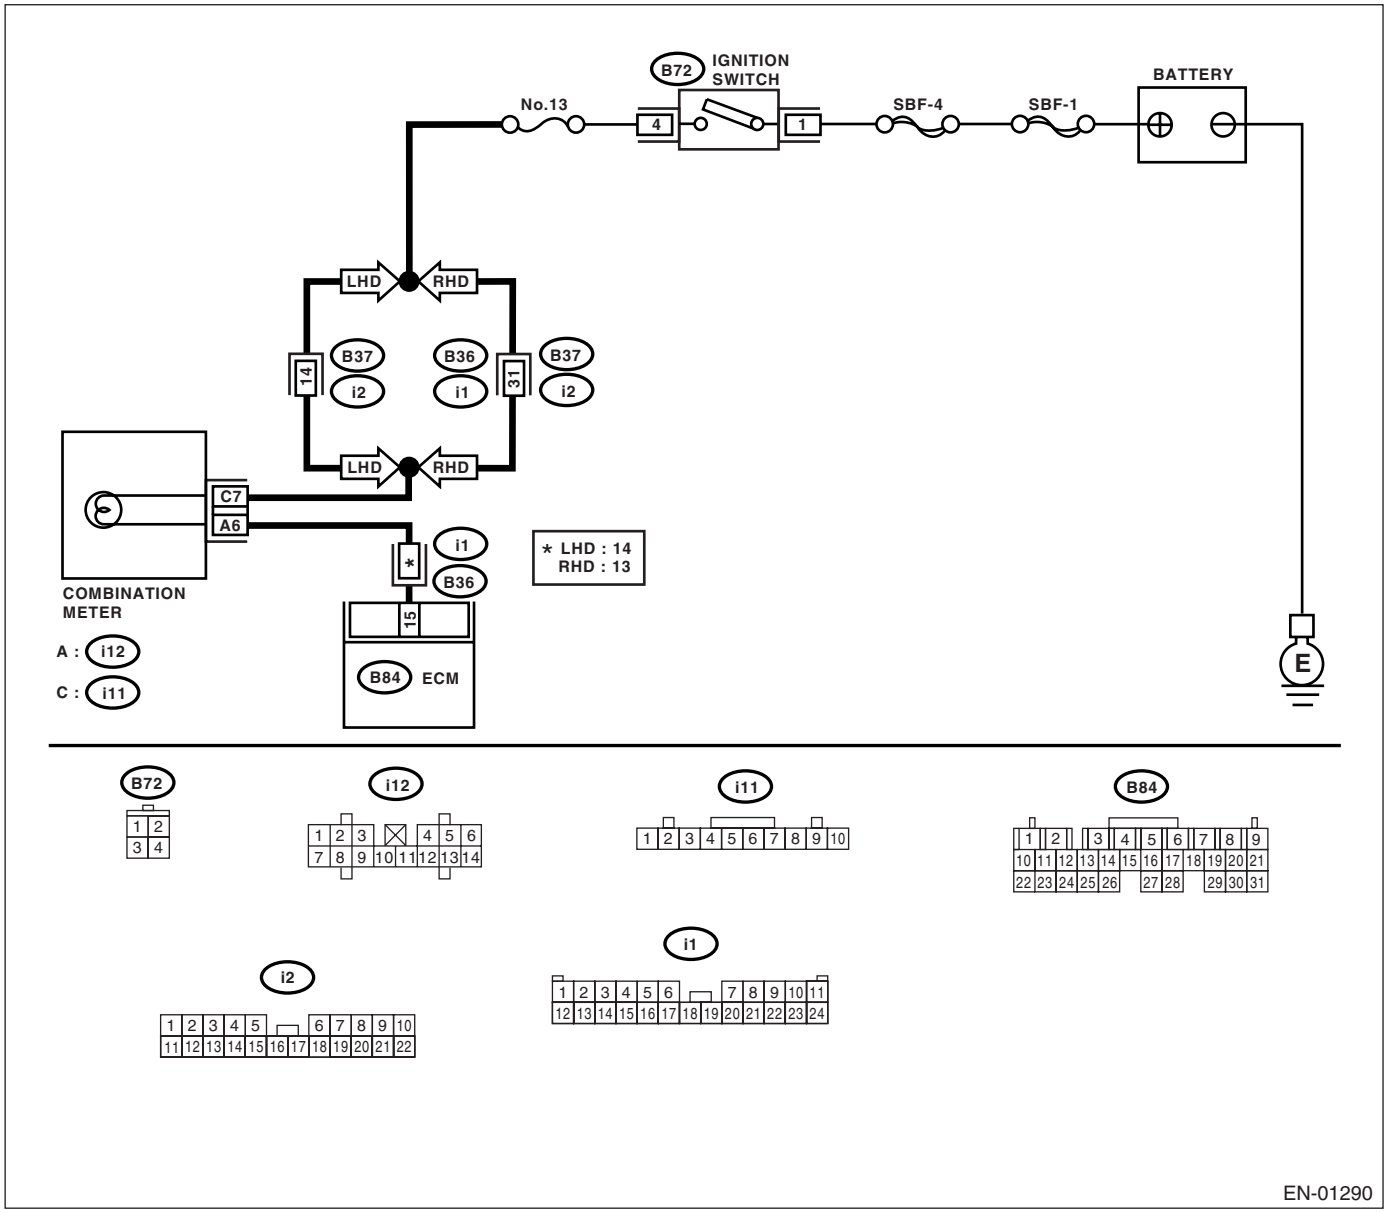

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Repair the short circuit in harness between combination meter and ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

E: MALFUNCTION INDICATOR LIGHT DOES NOT BLINK AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - The malfunction indicator light circuit is open or shorted.
  - Test mode connector circuit is open.
- **TROUBLE SYMPTOM:**
  - During inspection mode, malfunction indicator light does not blink at a cycle of 3 Hz.
- **WIRING DIAGRAM:**

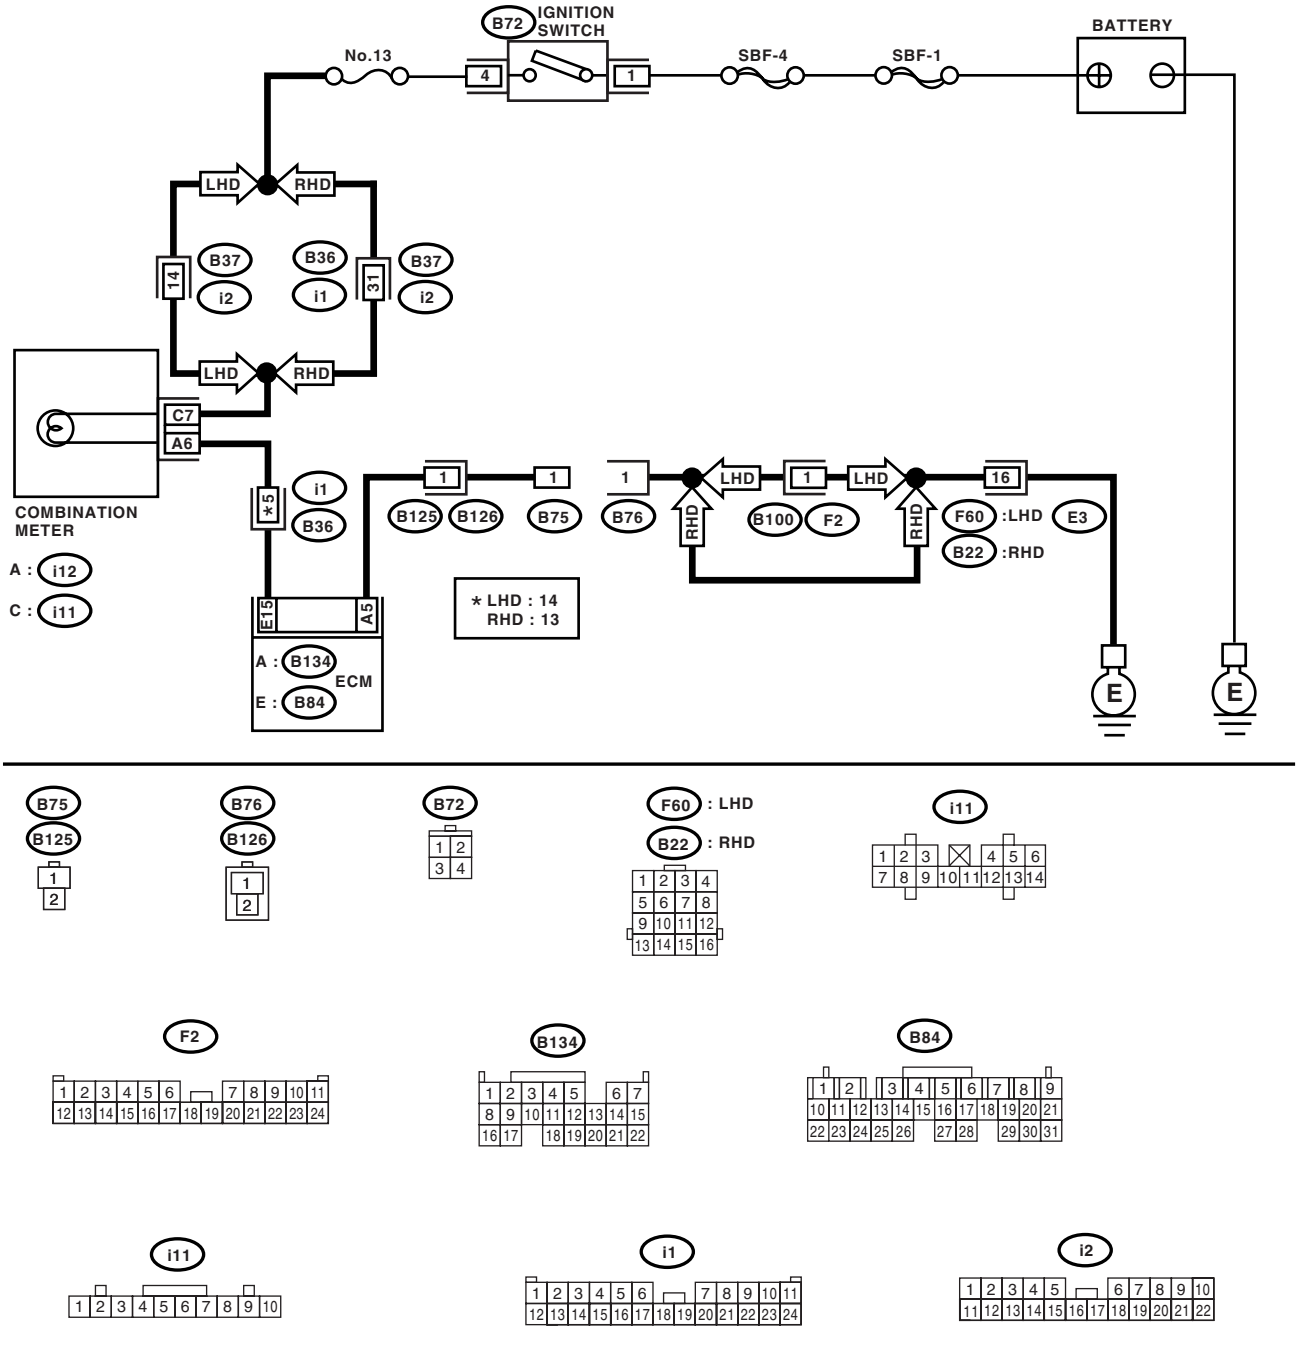

EN-01291

	Step	Check	Yes	No
1	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Disconnect the test mode connector. 3)Turn the ignition switch to ON. (engine OFF)	Does the malfunction indicator light come on?	Go to step **2.**	Repair the malfunction indicator light circuit. <Ref. to EN(H4DOTC)-53, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON., Malfunction Indicator Light.>
2	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Turn the ignition switch to ON.	Does the malfunction indicator light come on?	Repair the ground short circuit in harness between combination meter and ECM connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN TEST MODE CONNECTOR AND CHASSIS GROUND.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between test mode connector and chassis ground. ***Connector & terminal*** ***(B76) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between test mode connector and chassis ground
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Go to step **5.**
5	**CHECK HARNESS BETWEEN ECM AND TEST MODE CONNECTOR.** 1)Connect the test mode connector. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 5 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between ECM and test mode connector.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

F: MALFUNCTION INDICATOR LIGHT REMAINS BLINKING AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - Test mode connector circuit is shorted.
- **TROUBLE SYMPTOM:**
  - Malfunction indicator light blinks at a cycle of 3 Hz when ignition switch is turned to ON.
- **WIRING DIAGRAM:**

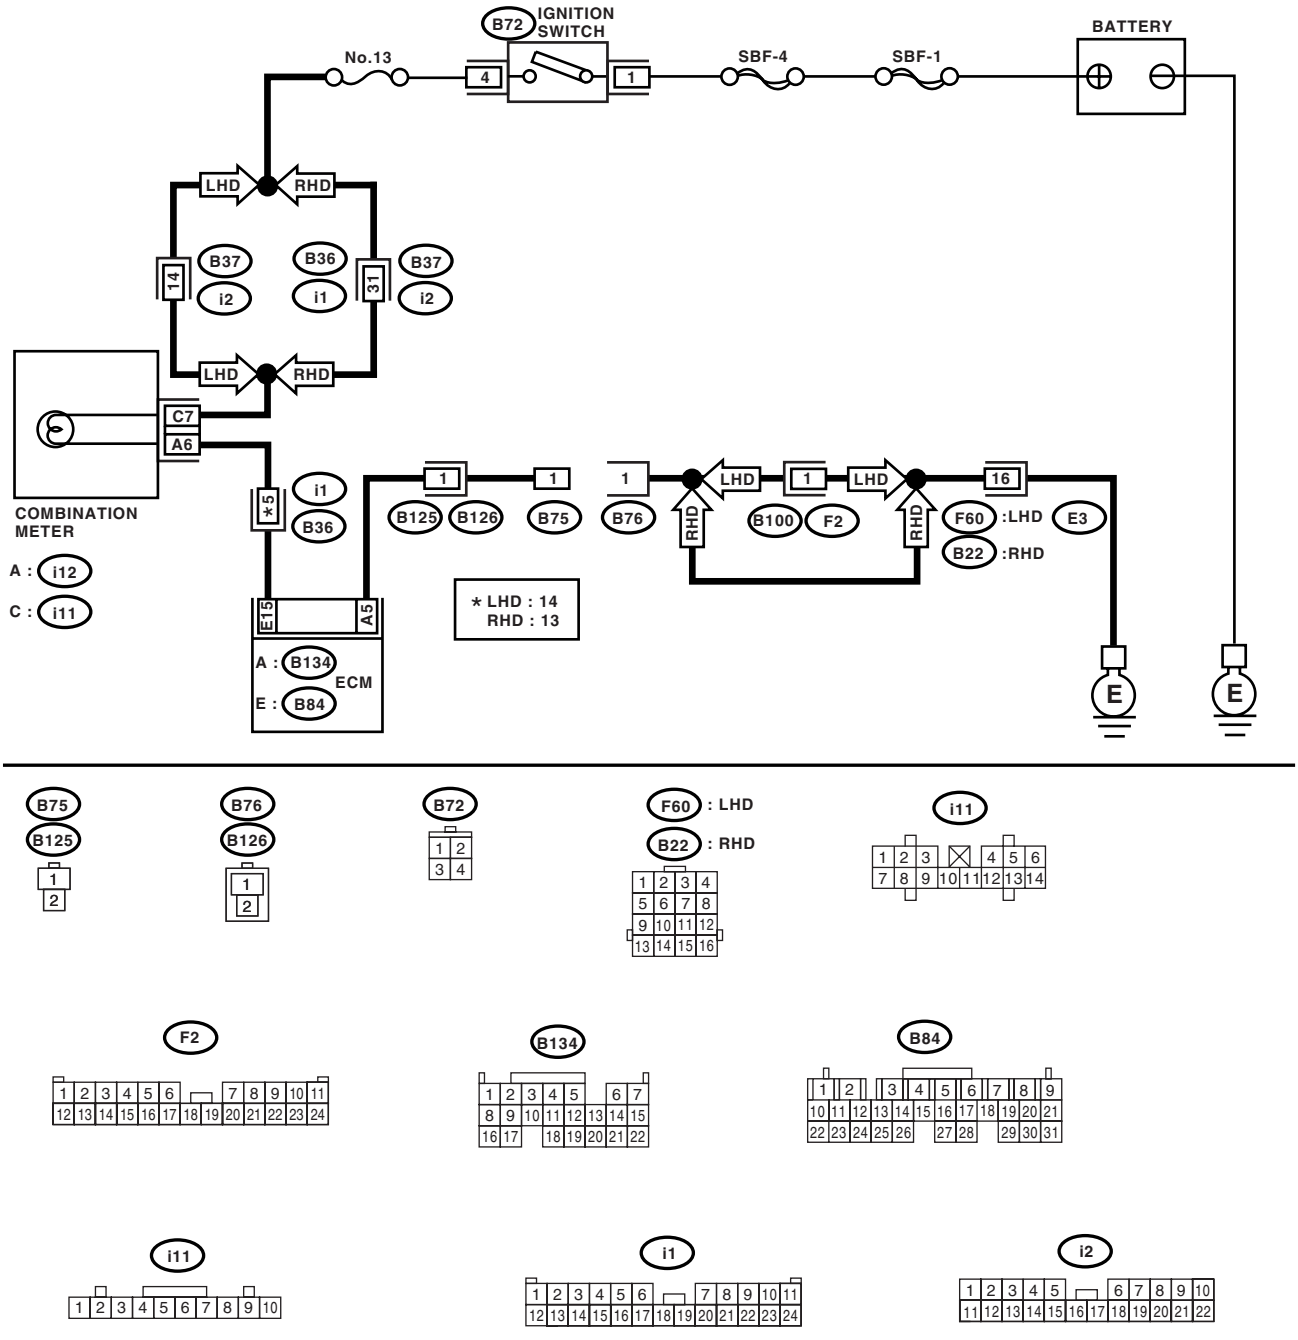

EN-01291

	Step	Check	Yes	No
1	**CHECK TEST MODE CONNECTOR.** 1)Disconnect the test mode connector. 2)Turn the ignition switch to ON.	Does the malfunction indicator light blink?	Go to step **2.**	System is in good order. NOTE: Malfunction indicator light blinks at a cycle of 3 Hz when test mode connector is connected.
2	**CHECK HARNESS BETWEEN ECM CONNECTOR AND ENGINE GROUNDING TERMINAL.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 5 — Chassis ground:***	Is the resistance less than 5 Ω?	Repair the short circuit in harness between ECM and test mode connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

17.Diagnostics for Engine Starting Failure

A: PROCEDURE

1. Inspection of starter motor circuit. <Ref. to EN(H4DOTC)-61, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
2. Inspection of ECM power supply and ground line. <Ref. to EN(H4DOTC)-63, CONTROL MODULE POWER SUPPLY AND GROUND LINE, Diagnostics for Engine Starting Failure.>
↓
3. Inspection of ignition control system. <Ref. to EN(H4DOTC)-67, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
↓
4. Inspection of fuel pump circuit. <Ref. to EN(H4DOTC)-70, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
5. Inspection of fuel injector circuit. <Ref. to EN(H4DOTC)-72, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

B: STARTER MOTOR CIRCUIT

CAUTION:
After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

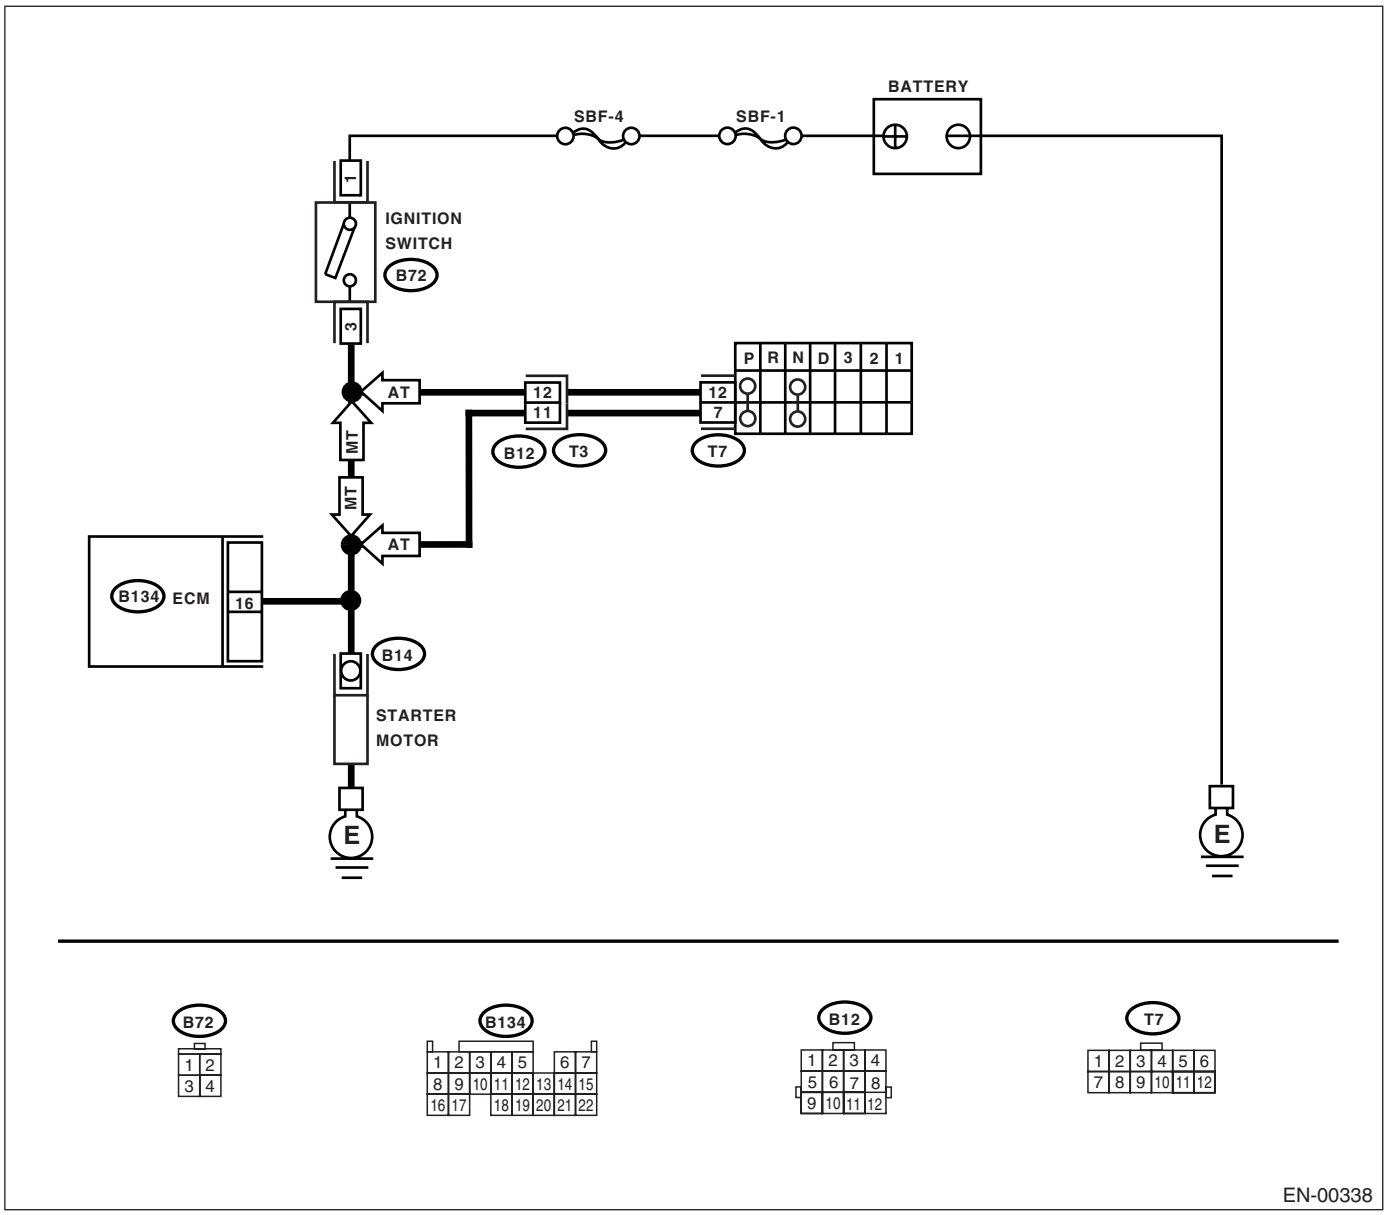

Step		Check	Yes	No
1	**CHECK OPERATION OF STARTER MOTOR.**	Does the starter motor operate?	Go to step **2.**	Go to step **3.**
2	**CHECK DTC.**	Is the DTC displayed? <Ref. to EN(H4DOTC)-39, OPERATION, Read Diagnostic Trouble Code (DTC).>	Using the List of Diagnostic Trouble Code (DTC), check the appropriate DTC. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK INPUT SIGNAL FOR STARTER MOTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from starter motor. 3)Turn the ignition switch to START. 4)Measure the power supply voltage between starter motor connector terminal and engine ground. ***Connector & terminal*** ***(B14) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Go to step **5.**
4	**CHECK GROUND CIRCUIT OF STARTER MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of ground cable between ground cable terminal and engine ground.	Is the resistance less than 5 Ω?	Check the starter motor. <Ref. to SC(H4SO)-7, Starter.>	Repair the open circuit of ground cable.
5	**CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.** 1)Ignition the switch to OFF. 2)Disconnect the connector from ignition switch. 3)Measure the power supply voltage between ignition switch connector and chassis ground. ***Connector & terminal*** ***(B72) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Check the following, repair if necessary. • Fuse is blown out. • Open circuit in harness between ignition switch and battery.
6	**CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.** 1)Connect the connector to ignition switch. 2)Turn the ignition switch to START. 3)Measure the voltage between ignition switch and chassis ground. ***Connector & terminal*** ***(B72) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the open circuit between ignition switch and starter motor circuit.	Go to step **7.**
7	**CHECK POOR CONTACT.** Check poor contact in ignition switch connector.	Is there poor contact in ignition switch connector?	Repair the poor contact in ignition switch connector.	Replace the ignition switch.

C: CONTROL MODULE POWER SUPPLY AND GROUND LINE

CAUTION:
After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

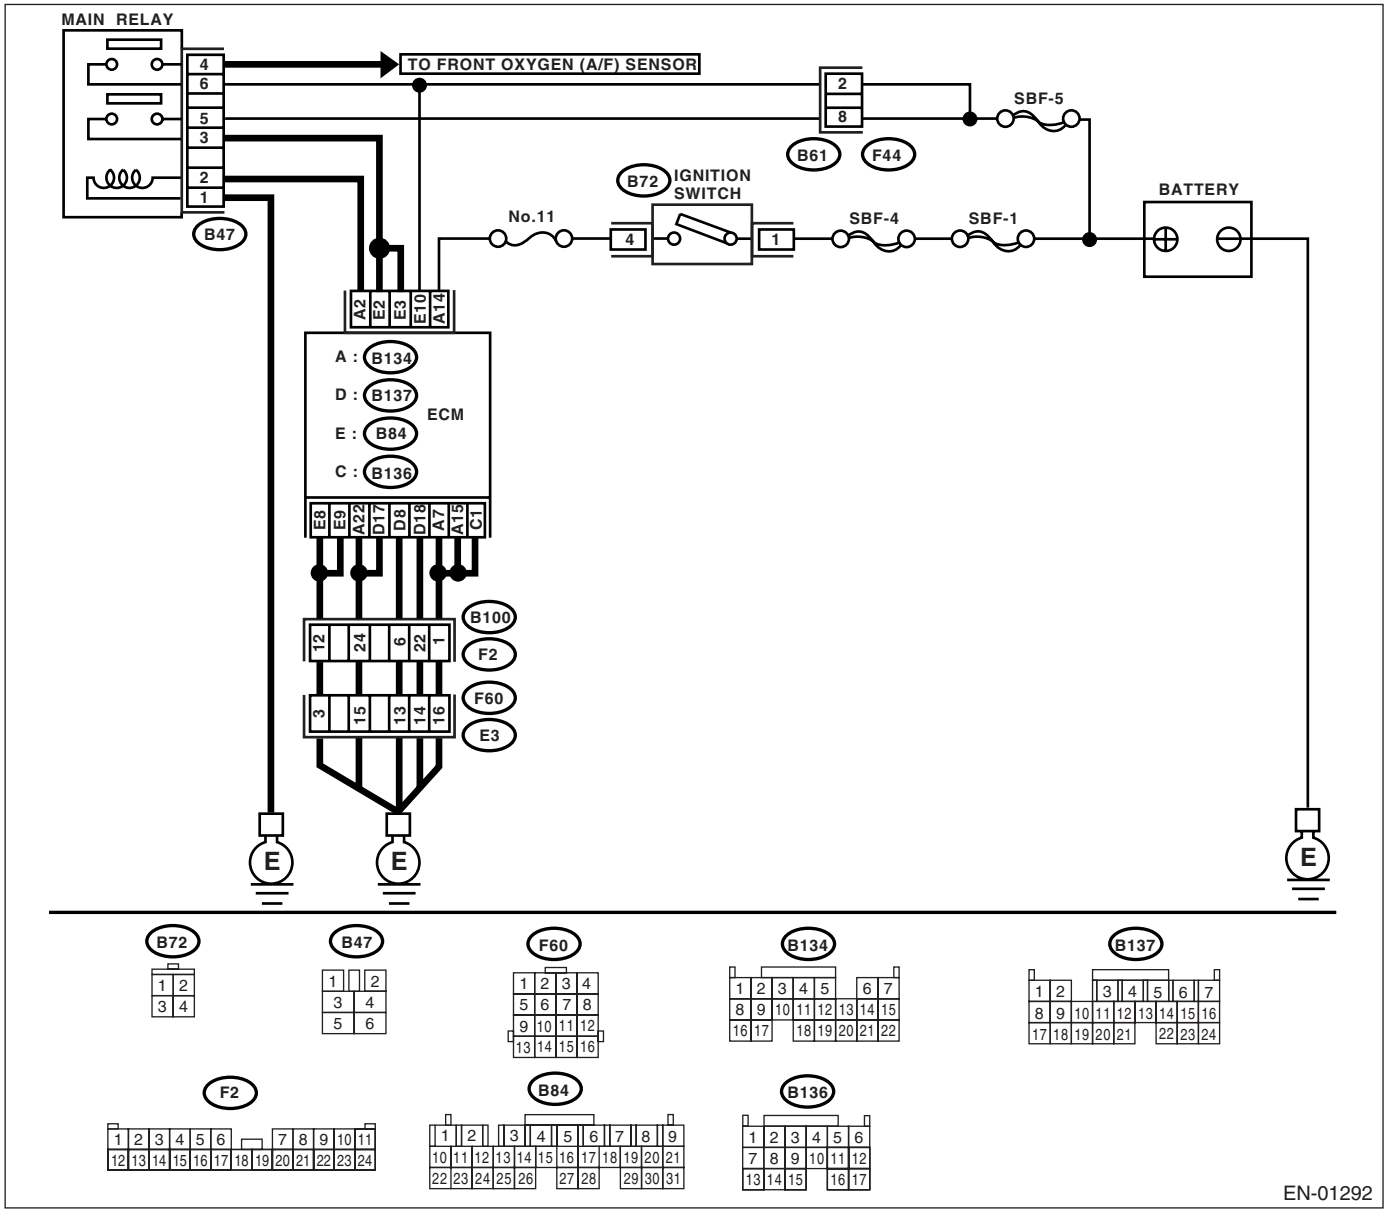

- **RHD model**

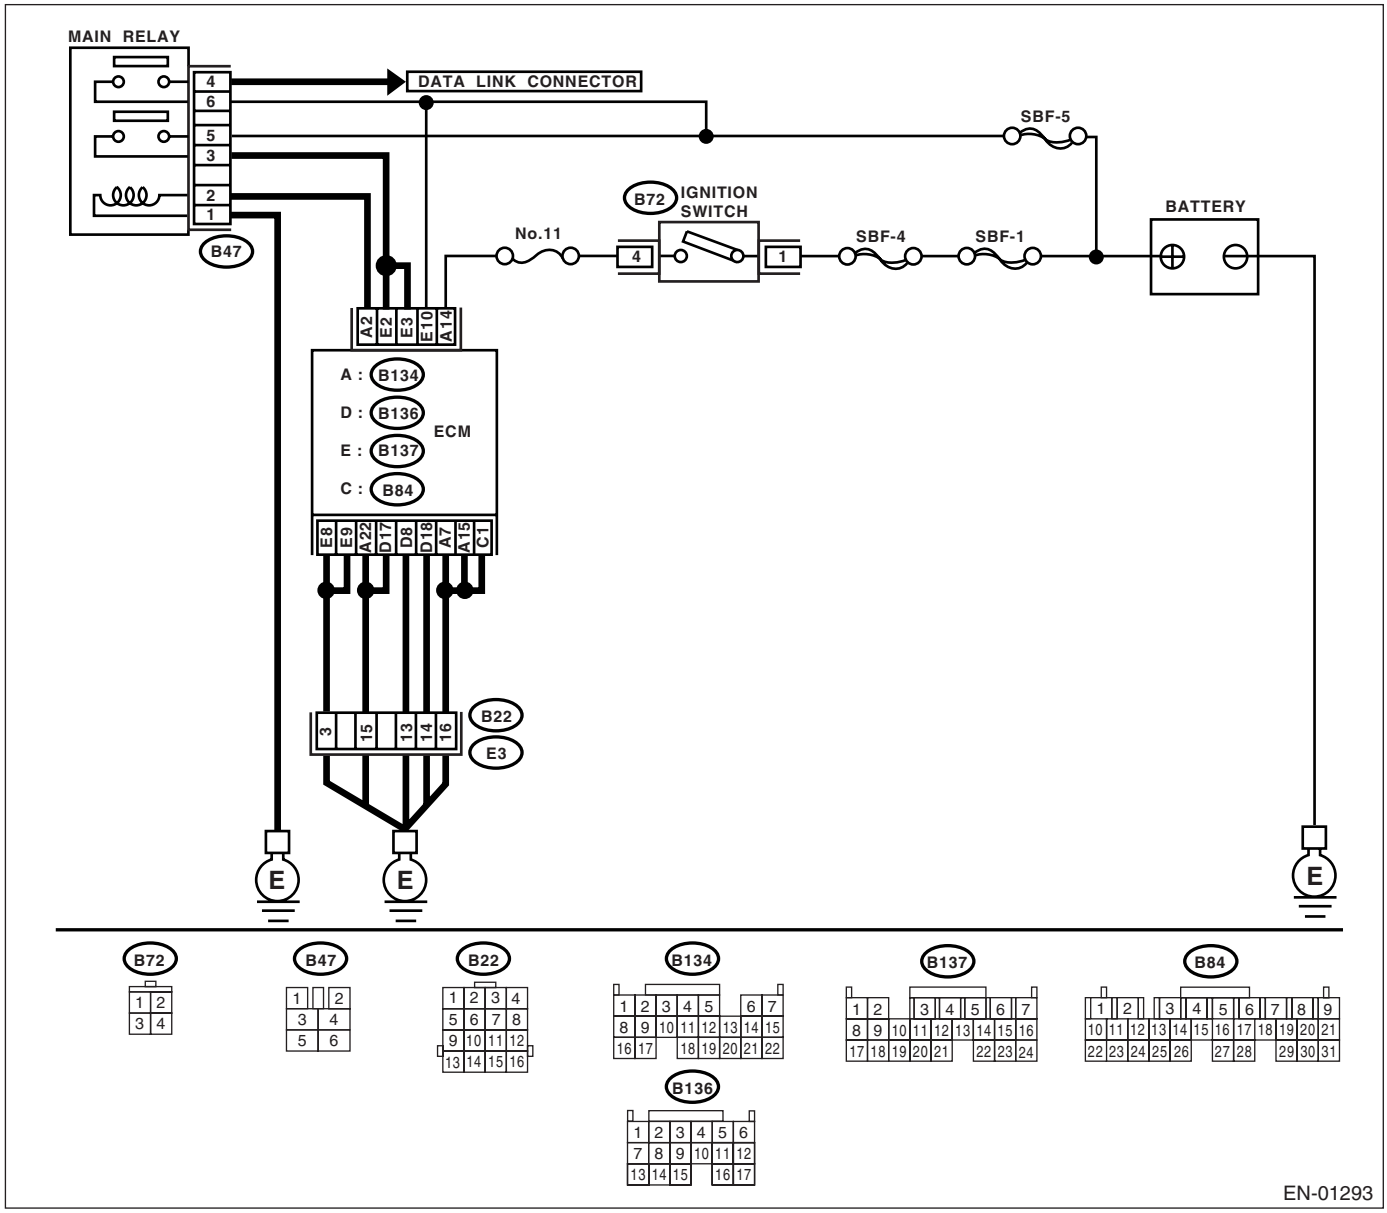

Step		Check	Yes	No
1	**CHECK MAIN RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the main relay. 3)Connect the battery to main relay terminals No. 1 and No. 2. 4)Measure the resistance between main relay terminals. ***Terminals*** ***No. 3 — No. 5:*** ***No. 4 — No. 6:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the main relay.

	Step	Check	Yes	No
2	**CHECK GROUND CIRCUIT OF ECM.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 7 — Chassis ground:*** ***(B134) No. 15 — Chassis ground:*** ***(B134) No. 22 — Chassis ground:*** ***(B136) No. 1 — Chassis ground:*** ***(B137) No. 8 — Chassis ground:*** ***(B137) No. 17 — Chassis ground:*** ***(B137) No. 18 — Chassis ground:*** ***(B84) No. 8 — Chassis ground:*** ***(B84) No. 9 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the open circuit in harness between ECM connector and engine grounding terminal.
3	**CHECK INPUT VOLTAGE OF ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 10 (+) — Chassis ground (–):*** ***(B134) No. 14 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the open or ground short circuit of power supply circuit.
4	**CHECK HARNESS BETWEEN ECM AND MAIN RELAY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the ground short circuit in harness between ECM connector and main relay connector, and then replace ECM.
5	**CHECK OUTPUT VOLTAGE FROM ECM.** 1)Connect the connector to ECM. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **6.**	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
6	**CHECK INPUT VOLTAGE OF MAIN RELAY.** Check the voltage between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Repair the open circuit in harness between ECM connector and main relay connector.
7	**CHECK GROUND CIRCUIT OF MAIN RELAY.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 1 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **8.**	Repair the open circuit between main relay and chassis ground.
8	**CHECK INPUT VOLTAGE OF MAIN RELAY.** Measure the voltage between main relay connector and chassis ground. ***Connector & terminal*** ***(B47) No. 5 (+) — Chassis ground (–):*** ***(B47) No. 6 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **9.**	Repair the open or ground short circuit in harness of power supply circuit.

	Step	Check	Yes	No
9	**CHECK INPUT VOLTAGE OF ECM.** 1)Connect the main relay connector. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 2 (+) — Chassis ground (–):*** ***(B84) No. 3 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Check the ignition control system. <Ref. to EN(H4DOTC)-67, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Repair the open or ground short circuit in harness between ECM connector and main relay connector.

D: IGNITION CONTROL SYSTEM

CAUTION:
After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

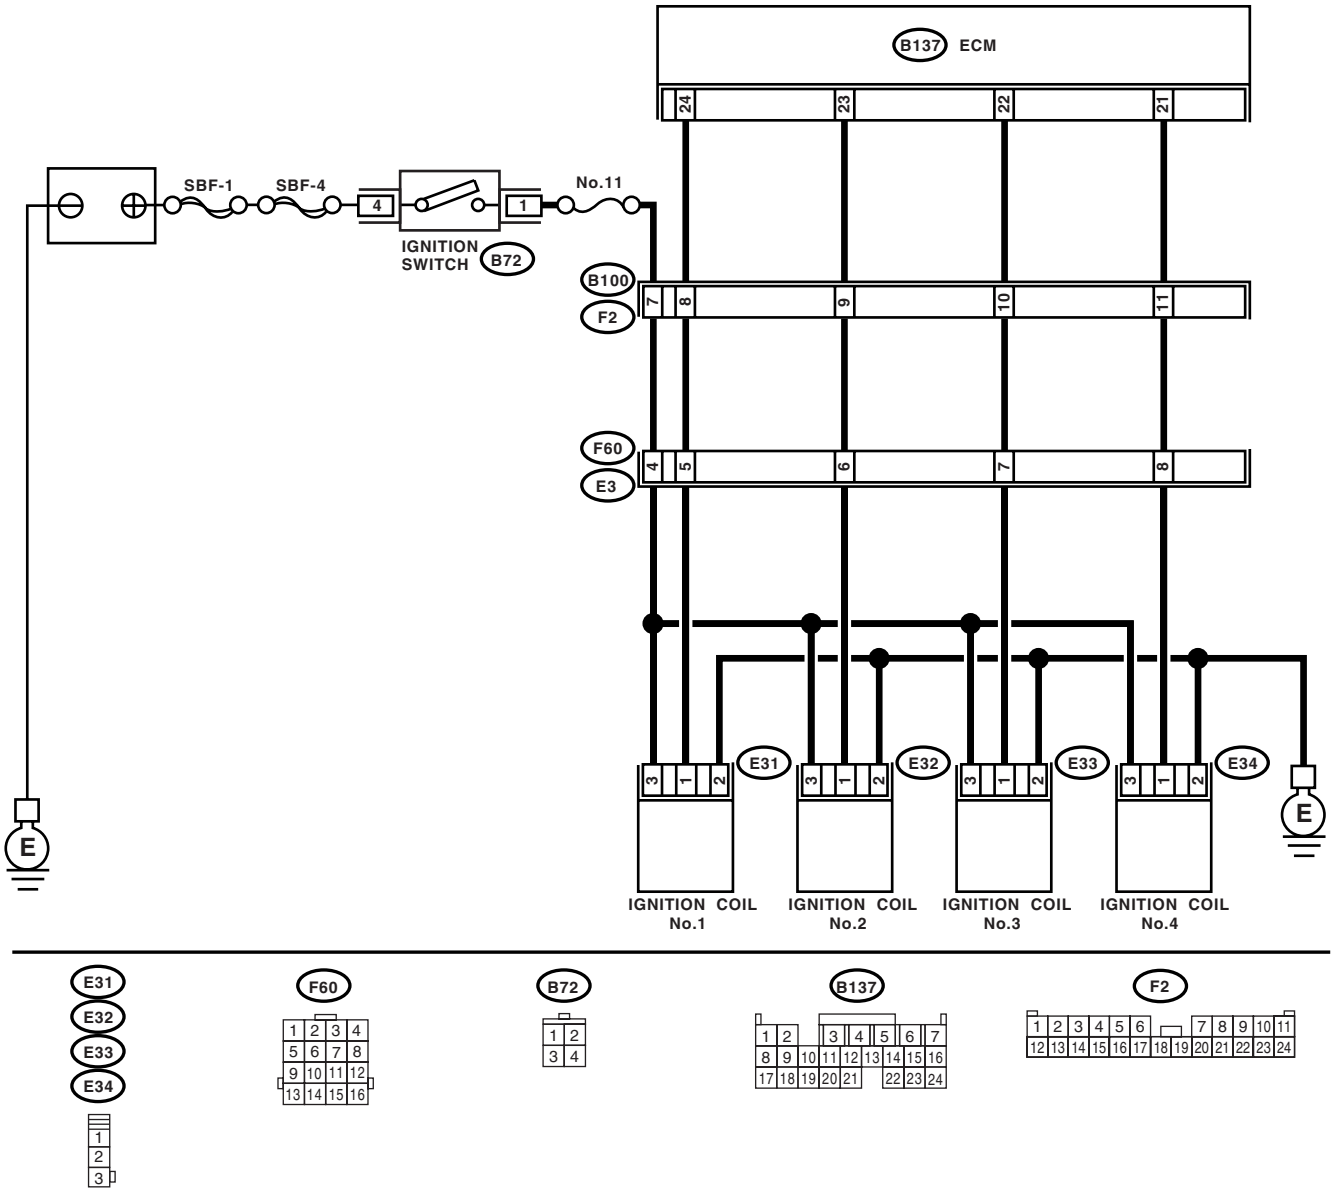

EN-01294

- **RHD model**

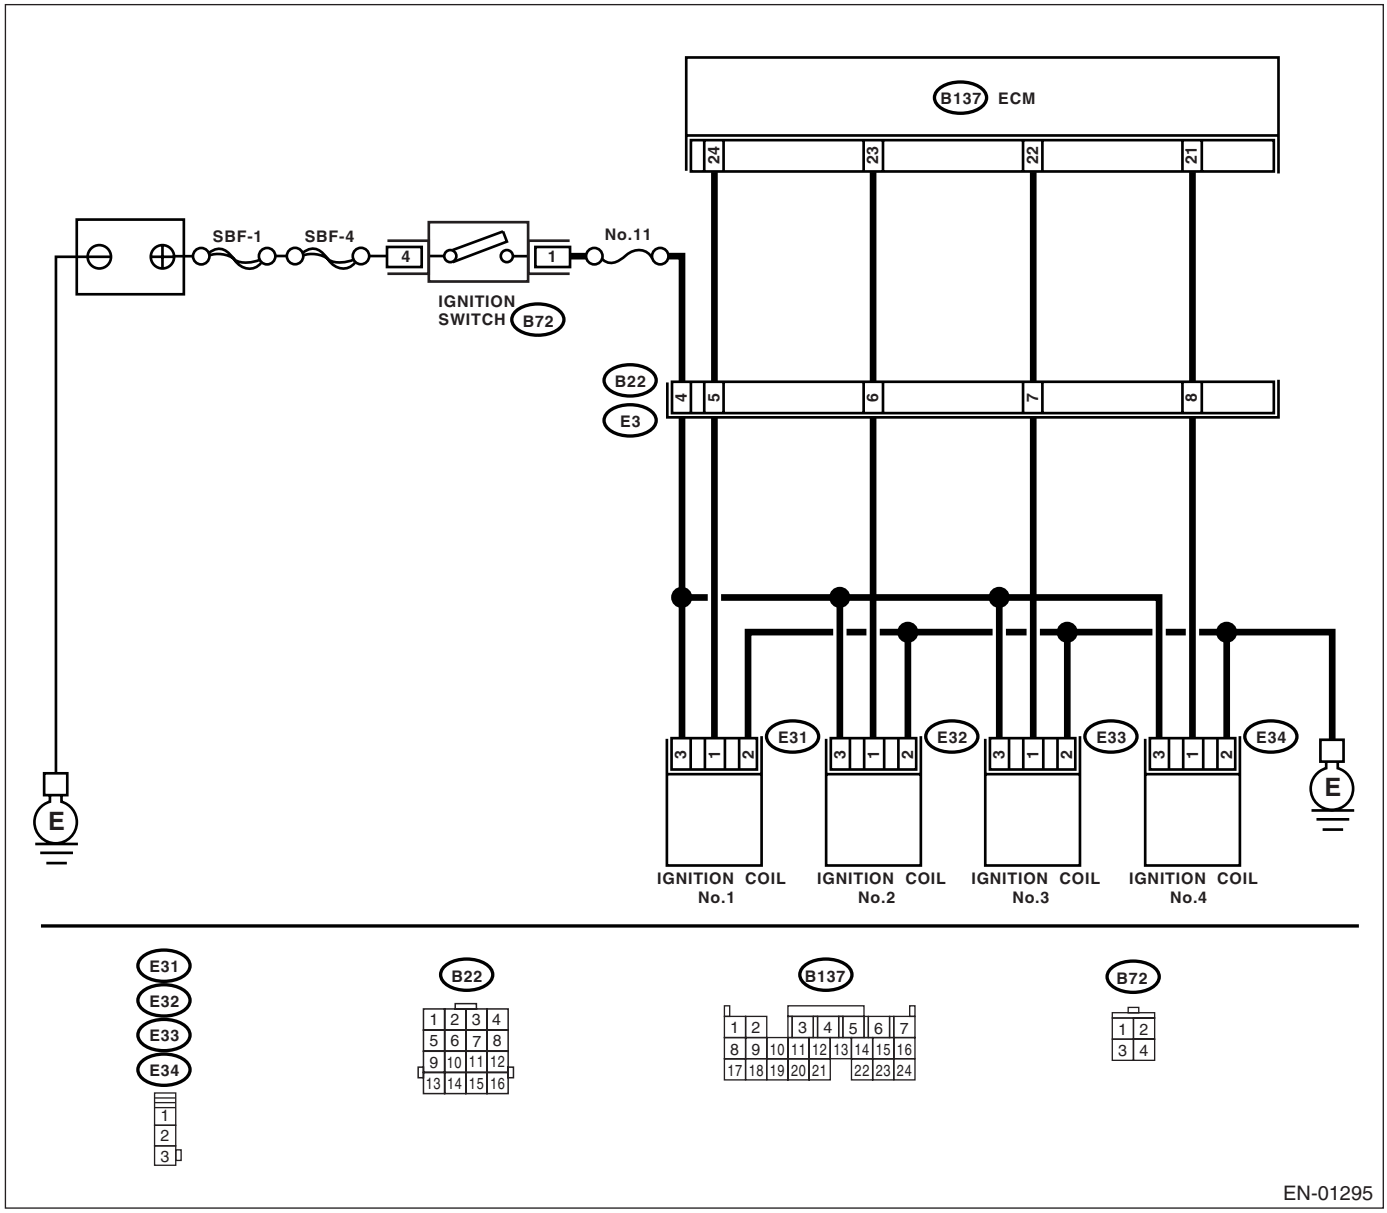

	Step	Check	Yes	No
1	**CHECK SPARK PLUG CONDITION.** 1)Remove the spark plug. <Ref. to IG(H4DOTC)-5, INSTALLATION, Spark Plug.> 2)Check the spark plug condition. <Ref. to IG(H4DOTC)-5, INSPECTION, Spark Plug.>	Is the spark plug's status OK?	Go to step **2.**	Replace the spark plug.
2	**CHECK IGNITION SYSTEM FOR SPARKS.** 1)Connect the spark plug to ignition coil. 2)Release the fuel pressure. <Ref. to FU(H4DOTC)-53, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.> 3)Contact the spark plug's thread portion on engine. 4)While opening the throttle valve fully, crank engine to check that spark occurs at each cylinder.	Does spark occur at each cylinder?	Check the fuel pump system. <Ref. to EN(H4DOTC)-70, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK POWER SUPPLY CIRCUIT FOR IGNITION COIL & IGNITOR ASSEMBLY.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ignition coil & ignitor assembly. 3)Turn the ignition switch to ON. 4)Measure the power supply voltage between ignition coil & ignitor assembly connector and engine ground. ***Connector & terminal*** ***(E31) No. 3 (+) — Engine ground (–):*** ***(E32) No. 3 (+) — Engine ground (–):*** ***(E33) No. 3 (+) — Engine ground (–):*** ***(E34) No. 3 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ignition coil & ignitor assembly, and ignition switch connector • Poor contact in coupling connectors
4	**CHECK HARNESS OF IGNITION COIL & IGNITOR ASSEMBLY GROUND CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ignition coil & ignitor assembly connector and engine ground. ***Connector & terminal*** ***(E31) No. 2 — Engine ground:*** ***(E32) No. 2 — Engine ground:*** ***(E33) No. 2 — Engine ground:*** ***(E34) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ignition coil & ignitor assembly connector and engine grounding terminal
5	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSEMBLY CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Disconnect the connector from ignition coil & ignitor assembly. 4)Measure the resistance of harness between ECM and ignition coil & ignitor assembly connector. ***Connector & terminal*** ***(B137) No. 21 — (E34) No. 1:*** ***(B137) No. 22 — (E33) No. 1:*** ***(B137) No. 23 — (E32) No. 1:*** ***(B137) No. 24 — (E31) No. 1:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and ignition coil & ignitor assembly connector • Poor contact in coupling connector
6	**CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSEMBLY CONNECTOR.** Measure the resistance of harness between ECM and engine ground. ***Connector & terminal:*** ***(B137) No. 21 — Engine ground:*** ***(B137) No. 22 — Engine ground:*** ***(B137) No. 23 — Engine ground:*** ***(B137) No. 24 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit in harness between ECM and ignition coil & ignitor assembly connector.
7	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ignition coil and ignitor assembly.

E: FUEL PUMP CIRCUIT

CAUTION:
After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

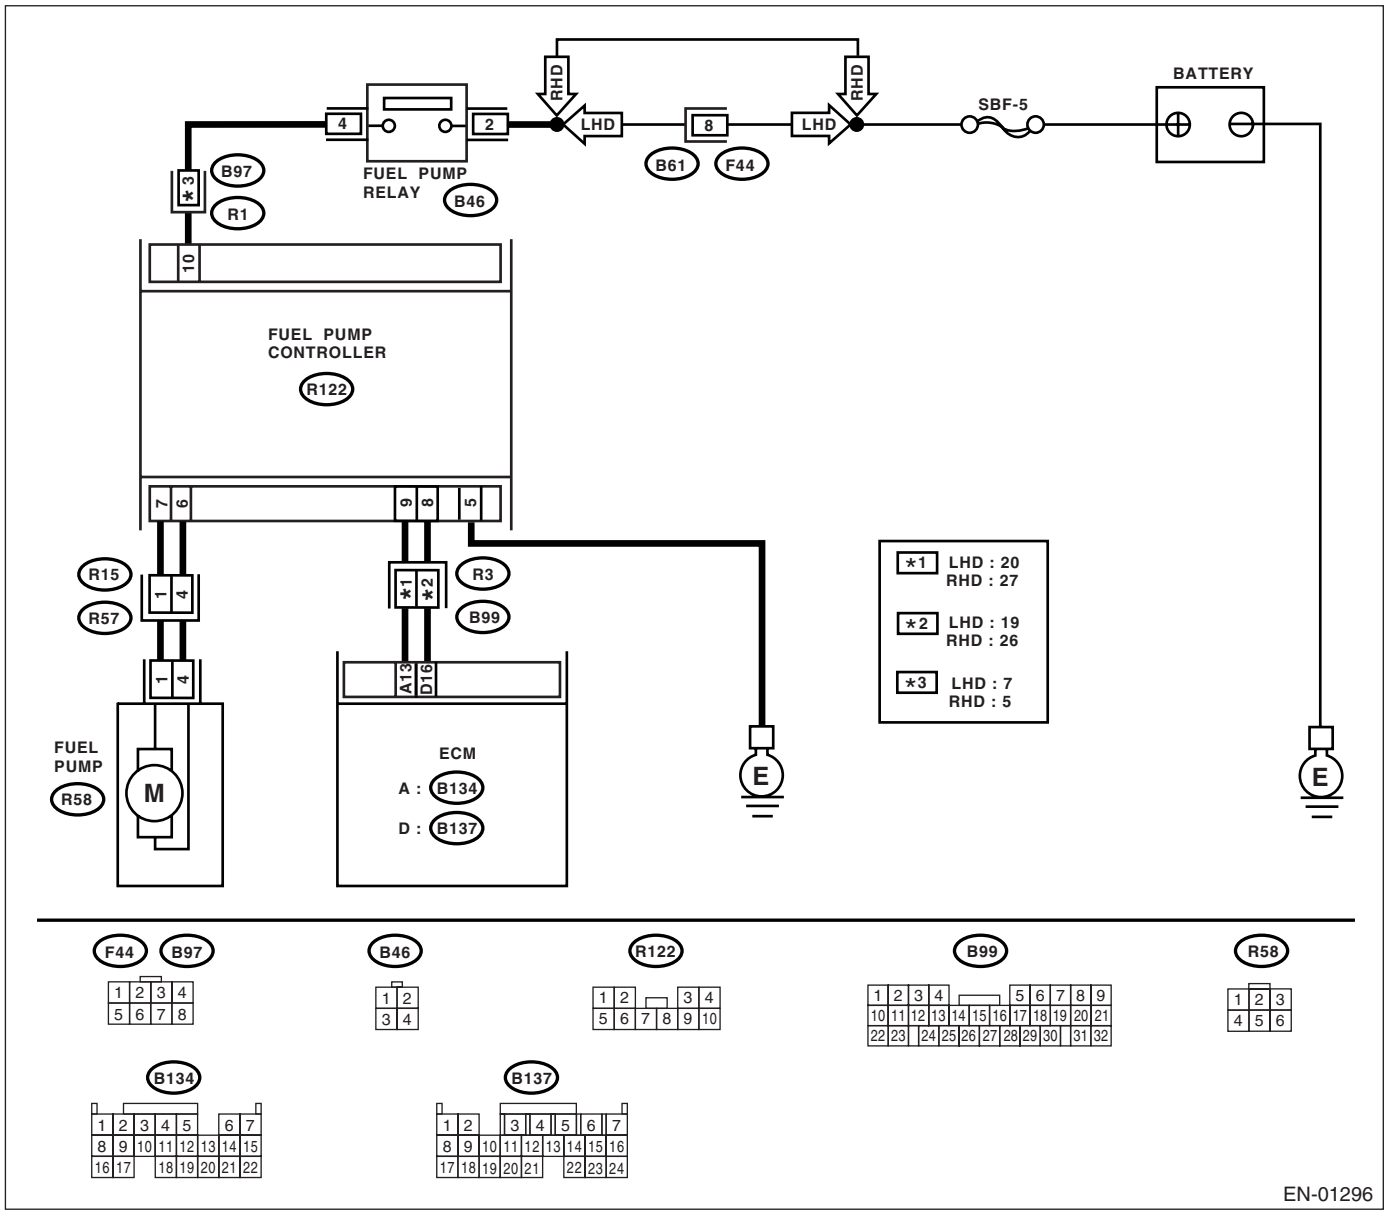

	Step	Check	Yes	No
1	**CHECK OPERATING SOUND OF FUEL PUMP.** Make sure that the fuel pump is in operation for 2 seconds when turning ignition switch to ON. NOTE: Fuel pump operation check can also be executed using the Subaru Select Monitor. For the procedure, refer to “Compulsory Valve Operation Check Mode”. <Ref. to EN(H4DOTC)-49, Compulsory Valve Operation Check Mode.>	Does the fuel pump produce “operating” sound?	Check the fuel injector circuit. <Ref. to EN(H4DOTC)-72, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>	Display the DTC. <Ref. to EN(H4DOTC)-39, OPERATION, Read Diagnostic Trouble Code (DTC).>

F: FUEL INJECTOR CIRCUIT

CAUTION:
- **Check or repair only faulty parts.**
- **After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(H4DOTC)-40, Inspection Mode.>.**
- **WIRING DIAGRAM:**
- **LHD model**

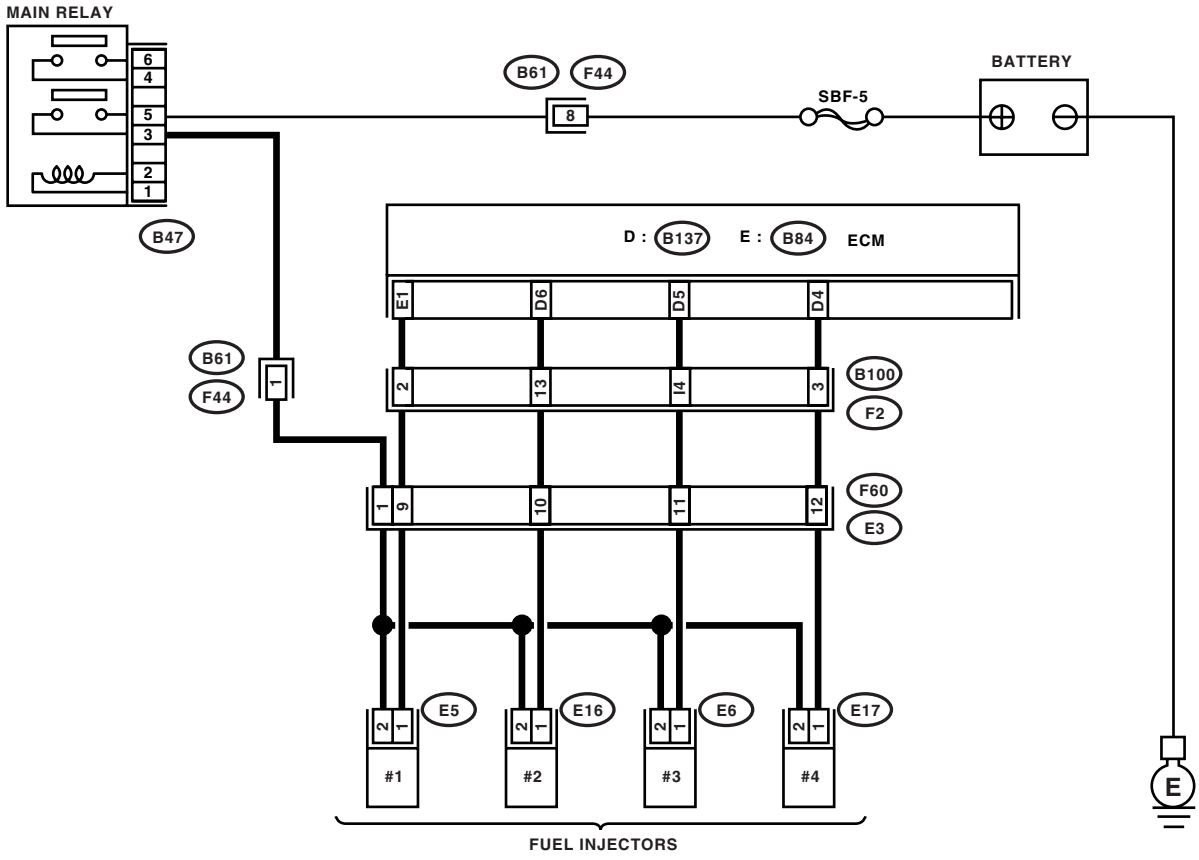

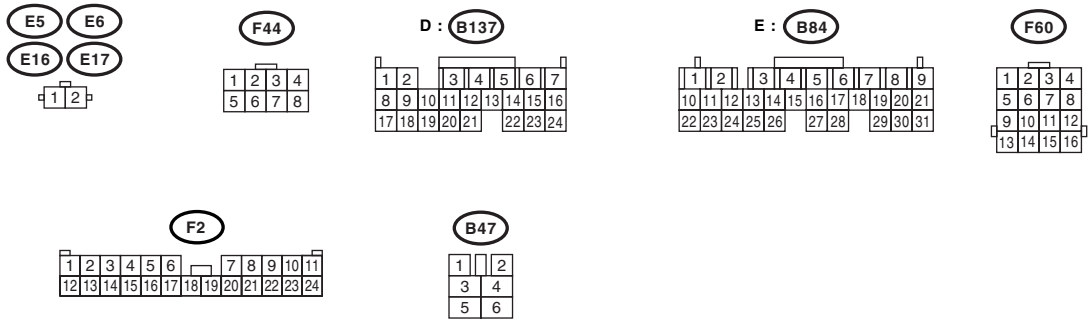

EN-01297

- **RHD model**

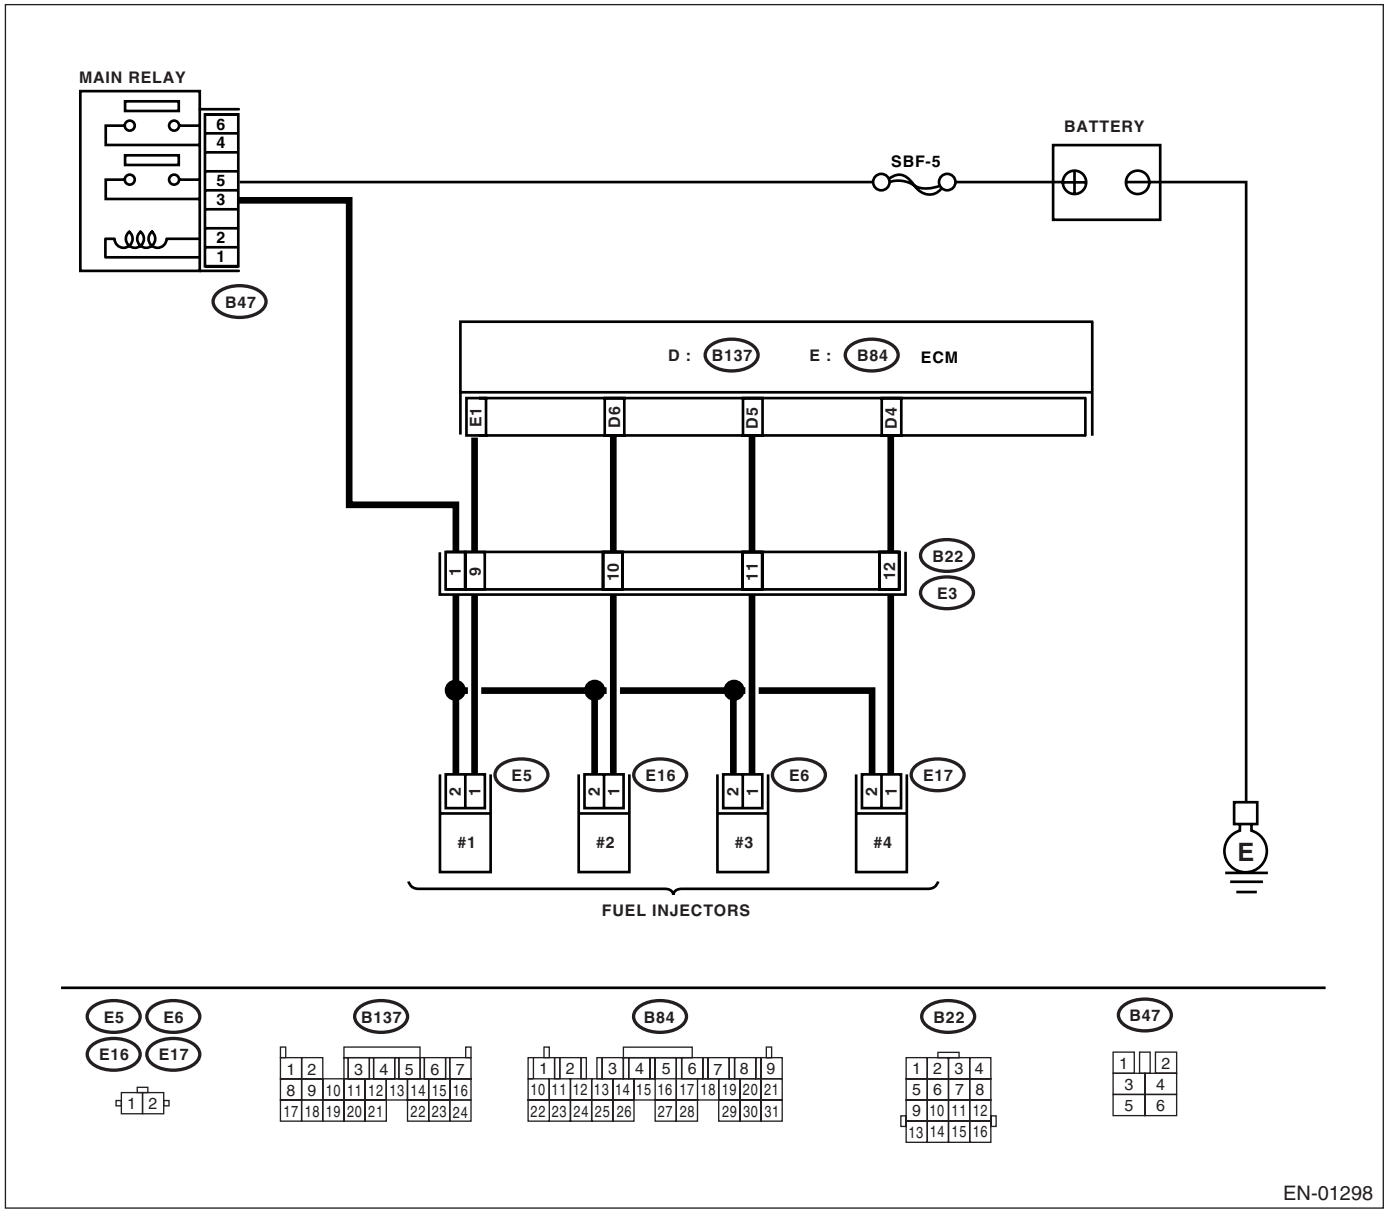

	Step	Check	Yes	No
1	**CHECK OPERATION OF EACH FUEL INJECTOR.** While cranking the engine, check that each fuel injector emits “operating” sound. Use a sound scope or attach a screwdriver to injector for this check.	Does the fuel injector emit “operating” sound?	Check the fuel pressure. <Ref. to ME(H4DOTC)-39, INSPECTION, Fuel Pressure.>	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK POWER SUPPLY TO EACH FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel injector. 3)Turn the ignition switch to ON. 4)Measure the power supply voltage between the fuel injector terminal and engine ground. ***Connector & terminal*** ***#1 (E5) No. 2 (+) — Engine ground (–):*** ***#2 (E16) No. 2 (+) — Engine ground (–):*** ***#3 (E6) No. 2 (+) — Engine ground (–):*** ***#4 (E17) No. 2 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and fuel injector connector • Poor contact in main relay connector • Poor contact in coupling connector • Poor contact in fuel injector connector
3	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B84) No. 1 — (E5) No. 1:*** ***(B137) No. 6 — (E16) No. 1:*** ***(B137) No. 5 — (E6) No. 1:*** ***(B137) No. 4 — (E6) No. 1:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector
4	**CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.** Measure the resistance of harness between ECM and fuel injector connector. ***Connector & terminal*** ***(B84) No. 1 — Chassis ground:*** ***(B137) No. 6 — Chassis ground:*** ***(B137) No. 5 — Chassis ground:*** ***(B137) No. 4 — Chassis ground:***	Is the resistance less than 1 Ω?	Repair the ground short circuit in harness between ECM and fuel injector connector.	Go to step **5.**
5	**CHECK EACH FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between each fuel injector terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **6.**	Replace the faulty fuel injector.
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Inspection using “General Diagnostic Table”. <Ref. to EN(H4DOTC)-314, INSPECTION, General Diagnostic Table.>

18.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Index
P0011	“A” Camshaft Position - Timing Over-Advanced or System Performance (Bank 1)	<Ref. to EN(H4DOTC)-82, DTC P0011 — “A” CAMSHAFT POSITION-TIMING OVER-ADVANCED OR SYSTEM PERFORMANCE (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0021	“A” Camshaft Position - Timing Over-Advanced or System Performance (Bank 2)	<Ref. to EN(H4DOTC)-83, DTC P0021 — “A” CAMSHAFT POSITION-TIMING OVER-ADVANCED OR SYSTEM PERFORMANCE (BANK 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0030	HO2S Heater Control Circuit (Bank 1 Sensor 1)	<Ref. to EN(H4DOTC)-84, DTC P0030 — HO2S HEATER CONTROL CIRCUIT (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	<Ref. to EN(H4DOTC)-86, DTC P0031 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	<Ref. to EN(H4DOTC)-89, DTC P0032 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	<Ref. to EN(H4DOTC)-91, DTC P0037 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	<Ref. to EN(H4DOTC)-94, DTC P0038 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0068	Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance	<Ref. to EN(H4DOTC)-96, DTC P0068 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0101	Mass or Volume Air Flow Circuit Range/Performance	<Ref. to EN(H4DOTC)-99, DTC P0101 — MASS OR VOLUME AIR FLOW CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0102	Mass or Volume Air Flow Circuit Low Input	<Ref. to EN(H4DOTC)-101, DTC P0102 — MASS OR VOLUME AIR FLOW CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0103	Mass or Volume Air Flow Circuit High Input	<Ref. to EN(H4DOTC)-104, DTC P0103 — MASS OR VOLUME AIR FLOW CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input	<Ref. to EN(H4DOTC)-106, DTC P0107 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input	<Ref. to EN(H4DOTC)-109, DTC P0108 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0111	Intake Air Temperature Circuit Range/Performance	<Ref. to EN(H4DOTC)-112, DTC P0111 — INTAKE AIR TEMPERATURE CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0112	Intake Air Temperature Circuit Low Input	<Ref. to EN(H4DOTC)-114, DTC P0112 — INTAKE AIR TEMPERATURE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0113	Intake Air Temperature Circuit High Input	<Ref. to EN(H4DOTC)-116, DTC P0113 — INTAKE AIR TEMPERATURE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0117	Engine Coolant Temperature Circuit Low Input	<Ref. to EN(H4DOTC)-119, DTC P0117 — ENGINE COOLANT TEMPERATURE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0118	Engine Coolant Temperature Circuit High Input	<Ref. to EN(H4DOTC)-121, DTC P0118 — ENGINE COOLANT TEMPERATURE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0121	Throttle/Pedal Position Sensor/ Switch “A” Circuit Range/Performance	<Ref. to EN(H4DOTC)-124, DTC P0121 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0122	Throttle/Pedal Position Sensor/ Switch “A” Circuit Low Input	<Ref. to EN(H4DOTC)-126, DTC P0122 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0123	Throttle/Pedal Position Sensor/ Switch “A” Circuit High Input	<Ref. to EN(H4DOTC)-130, DTC P0123 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0125	Insufficient Coolant Temperature for Closed Loop Fuel Control	<Ref. to EN(H4DOTC)-133, DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0129	Atmospheric Pressure Sensor Circuit Range/Performance	<Ref. to EN(H4DOTC)-134, DTC P0129 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0130	O_2 Sensor Circuit (Bank 1 Sensor 1)	<Ref. to EN(H4DOTC)-135, DTC P0130 — O2 SENSOR CIRCUIT (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0133	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	<Ref. to EN(H4DOTC)-137, DTC P0133 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0134	O_2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	<Ref. to EN(H4DOTC)-138, DTC P0134 — O2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0137	O_2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	<Ref. to EN(H4DOTC)-139, DTC P0137 — O2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0138	O_2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	<Ref. to EN(H4DOTC)-142, DTC P0138 — O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0139	O_2 Sensor Circuit Slow Response (Bank 1 Sensor 2)	<Ref. to EN(H4DOTC)-145, DTC P0139 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0171	System too Lean (Bank 1)	<Ref. to EN(H4DOTC)-146, DTC P0171 — SYSTEM TOO LEAN (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0172	System too Rich (Bank 1)	<Ref. to EN(H4DOTC)-147, DTC P0172 — SYSTEM TOO RICH (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0230	Fuel Pump Primary Circuit	<Ref. to EN(H4DOTC)-150, DTC P0230 — FUEL PUMP PRIMARY CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0244	Turbo/Super Charger Wastegate Solenoid “A” Range/Performance	<Ref. to EN(H4DOTC)-153, DTC P0244 — TURBO/SUPER CHARGER WASTEGATE SOLENOID “A” RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0245	Turbo/Super Charger Wastegate Solenoid “A” Low	<Ref. to EN(H4DOTC)-155, DTC P0245 — TURBO/SUPER CHARGER WASTEGATE SOLENOID “A” LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0246	Turbo/Super Charger Wastegate Solenoid “A” High	<Ref. to EN(H4DOTC)-157, DTC P0246 — TURBO/SUPER CHARGER WASTEGATE SOLENOID “A” HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0301	Cylinder 1 misfire detected	<Ref. to EN(H4DOTC)-159, DTC P0301 — CYLINDER 1 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0302	Cylinder 2 misfire detected	<Ref. to EN(H4DOTC)-159, DTC P0302 — CYLINDER 2 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0303	Cylinder 3 misfire detected	<Ref. to EN(H4DOTC)-159, DTC P0303 — CYLINDER 3 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0304	Cylinder 4 misfire detected	<Ref. to EN(H4DOTC)-160, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)	<Ref. to EN(H4DOTC)-166, DTC P0327 — KNOCK SENSOR 1 CIRCUIT LOW INPUT (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)	<Ref. to EN(H4DOTC)-168, DTC P0328 — KNOCK SENSOR 1 CIRCUIT HIGH INPUT (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0335	Crankshaft Position Sensor “A” Circuit	<Ref. to EN(H4DOTC)-170, DTC P0335 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0336	Crankshaft Position Sensor “A” Circuit Range/Performance	<Ref. to EN(H4DOTC)-172, DTC P0336 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0340	Camshaft Position Sensor “A” Circuit (Bank 1 or Single Sensor)	<Ref. to EN(H4DOTC)-174, DTC P0340 — CAMSHAFT POSITION SENSOR “A” CIRCUIT (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0341	Camshaft Position Sensor “A” Circuit Range/Performance (Bank 1 or Single Sensor)	<Ref. to EN(H4DOTC)-176, DTC P0341 — CAMSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE (BANK 1 OR SINGLE SENSOR) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0365	Camshaft Position Sensor “B” Circuit (Bank 1)	<Ref. to EN(H4DOTC)-179, DTC P0365 — CAMSHAFT POSITION SENSOR “B” CIRCUIT (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0390	Camshaft Position Sensor “B” Circuit (Bank 2)	<Ref. to EN(H4DOTC)-181, DTC P0390 — CAMSHAFT POSITION SENSOR “B” CIRCUIT (BANK 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0420	Catalyst System Efficiency Below Threshold (Bank 1)	<Ref. to EN(H4DOTC)-183, DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low	<Ref. to EN(H4DOTC)-185, DTC P0458 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0459	Evaporative Emission Control System Purge Control Valve Circuit High	<Ref. to EN(H4DOTC)-187, DTC P0459 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0461	Fuel Level Sensor Circuit Range/Performance	<Ref. to EN(H4DOTC)-189, DTC P0461 — FUEL LEVEL SENSOR CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0462	Fuel Level Sensor Circuit Low Input	<Ref. to EN(H4DOTC)-191, DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0463	Fuel Level Sensor Circuit High Input	<Ref. to EN(H4DOTC)-194, DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0464	Fuel Level Sensor Circuit Intermittent	<Ref. to EN(H4DOTC)-197, DTC P0464 — FUEL LEVEL SENSOR CIRCUIT INTERMITTENT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0483	Cooling Fan Rationality Check	<Ref. to EN(H4DOTC)-199, DTC P0483 — COOLING FAN RATIONALITY CHECK —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0502	Vehicle Speed Sensor Circuit Low Input	<Ref. to EN(H4DOTC)-202, DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0503	Vehicle Speed Sensor Intermittent/Erratic/High	<Ref. to EN(H4DOTC)-204, DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0506	Idle Control System RPM Lower Than Expected	<Ref. to EN(H4DOTC)-206, DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0507	Idle Control System RPM Higher Than Expected	<Ref. to EN(H4DOTC)-208, DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0508	Idle Control System Circuit Low	<Ref. to EN(H4DOTC)-210, DTC P0508 — IDLE CONTROL SYSTEM CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0509	Idle Control System Circuit High	<Ref. to EN(H4DOTC)-212, DTC P0509 — IDLE CONTROL SYSTEM CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0512	Starter Request Circuit	<Ref. to EN(H4DOTC)-214, DTC P0512 — STARTER REQUEST CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0513	Incorrect Immobilizer Key	<Ref. to IM-15, DTC P0513 INCORRECT IMMOBILIZER KEY, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P0519	Idle Control System Malfunction (Fail-Safe)	<Ref. to EN(H4DOTC)-216, DTC P0519 — IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0545	Exhaust Gas Temperature Sensor Circuit Low-Bank 1	<Ref. to EN(H4DOTC)-218, DTC P0545 — EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW-BANK 1 —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0546	Exhaust Gas Temperature Sensor Circuit High-Bank 1	<Ref. to EN(H4DOTC)-220, DTC P0546 — EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH-BANK 1 —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0558	Generator Circuit Low Input	<Ref. to EN(H4DOTC)-222, DTC P0558 — GENERATOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0559	Generator Circuit High Input	<Ref. to EN(H4DOTC)-223, DTC P0559 — GENERATOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0565	Cruise Control On Signal	<Ref. to EN(H4DOTC)-225, DTC P0565 — CRUISE CONTROL ON SIGNAL —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0604	Internal Control Module Random Access Memory (RAM) Error	<Ref. to EN(H4DOTC)-227, DTC P0604 — INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0691	Cooling Fan 1 Control Circuit Low	<Ref. to EN(H4DOTC)-229, DTC P0691 — COOLING FAN 1 CONTROL CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0692	Cooling Fan 1 Control Circuit High	<Ref. to EN(H4DOTC)-233, DTC P0692 — COOLING FAN 1 CONTROL CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0703	Torque Converter/Brake Switch “B” Circuit	<Ref. to EN(H4DOTC)-236, DTC P0703 — TORQUE CONVERTER/BRAKE SWITCH “B” CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0705	Transmission Range Sensor Circuit (PRNDL Input)	<Ref. to 4AT-109, CHECK INHIBITOR SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>
P0710	Transmission Fluid Temperature Sensor Circuit	<Ref. to 4AT-45, DTC 27 ATF TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0716	Torque Converter Turbine Speed Sensor	<Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0720	Output Speed Sensor Circuit	<Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0726	Engine Speed Input Circuit Range/ Performance	<Ref. to 4AT-41, DTC 11 ENGINE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0731	Gear 1 Incorrect Ratio	<Ref. to EN(H4DOTC)-238, DTC P0731 — GEAR 1 INCORRECT RATIO — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0732	Gear 2 Incorrect Ratio	<Ref. to EN(H4DOTC)-238, DTC P0732 — GEAR 2 INCORRECT RATIO — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0733	Gear 3 Incorrect Ratio	<Ref. to EN(H4DOTC)-238, DTC P0733 — GEAR 3 INCORRECT RATIO — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0734	Gear 4 Incorrect Ratio	<Ref. to EN(H4DOTC)-239, DTC P0734 — GEAR 4 INCORRECT RATIO — , Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P0741	Torque Converter Clutch Circuit Performance or Stuck Off	<Ref. to EN(H4DOTC)-240, DTC P0741 — TORQUE CONVERTER CLUTCH CIRCUIT PERFORMANCE OR STUCK OFF —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0743	Torque Converter Clutch Circuit Electrical	<Ref. to 4AT-82, DTC 77 LOCK-UP DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0748	Pressure Control Solenoid “A” Electrical	<Ref. to 4AT-76, DTC 75 LINE PRESSURE DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0753	Shift Solenoid “A” Electrical	<Ref. to 4AT-64, DTC 71 SHIFT SOLENOID 1, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0758	Shift Solenoid “B” Electrical	<Ref. to 4AT-67, DTC 72 SHIFT SOLENOID 2, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0771	Low Clutch Timing Solenoid	<Ref. to 4AT-70, DTC 73 LOW CLUTCH TIMING SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0778	Pressure Control Solenoid “B” Electrical	<Ref. to 4AT-79, DTC 76 2-4 BRAKE DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0785	Shift/Timing Solenoid	<Ref. to 4AT-73, DTC 74 2-4 BRAKE TIMING SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0851	Neutral Switch Input Circuit Low	<Ref. to EN(H4DOTC)-242, DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW (AT MODEL) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> or <Ref. to EN(H4DOTC)-244, DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW (MT MODEL) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0852	Neutral Switch Input Circuit High	<Ref. to EN(H4DOTC)-247, DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH (AT MODEL) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> or <Ref. to EN(H4DOTC)-250, DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH (MT MODEL) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0864	TCM Communication Circuit Range/Performance	<Ref. to EN(H4DOTC)-252, DTC P0864 — TCM COMMUNICATION CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0865	TCM Communication Circuit Low	<Ref. to EN(H4DOTC)-254, DTC P0865 — TCM COMMUNICATION CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0866	TCM Communication Circuit High	<Ref. to EN(H4DOTC)-256, DTC P0866 — TCM COMMUNICATION CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1086	Tumble Generated Valve Position Sensor 2 Circuit Low	<Ref. to EN(H4DOTC)-258, DTC P1086 — TUMBLE GENERATED VALVE POSITION SENSOR 2 CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1087	Tumble Generated Valve Position Sensor 2 Circuit High	<Ref. to EN(H4DOTC)-262, DTC P1087 — TUMBLE GENERATED VALVE POSITION SENSOR 2 CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1088	Tumble Generated Valve Position Sensor 1 Circuit Low	<Ref. to EN(H4DOTC)-265, DTC P1088 — TUMBLE GENERATED VALVE POSITION SENSOR 1 CIRCUIT LOW —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1089	Tumble Generated Valve Position Sensor 1 Circuit High	<Ref. to EN(H4DOTC)-269, DTC P1089 — TUMBLE GENERATED VALVE POSITION SENSOR 1 CIRCUIT HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1090	Tumble Generated Valve System 1 (Valve Open)	<Ref. to EN(H4DOTC)-272, DTC P1090 — TUMBLE GENERATED VALVE SYSTEM 1 (VALVE OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1091	Tumble Generated Valve System 1 (Valve Close)	<Ref. to EN(H4DOTC)-272, DTC P1091 — TUMBLE GENERATED VALVE SYSTEM 1 (VALVE CLOSE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1092	Tumble Generated Valve System 2 (Valve Open)	<Ref. to EN(H4DOTC)-273, DTC P1092 — TUMBLE GENERATED VALVE SYSTEM 2 (VALVE OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P1093	Tumble Generated Valve System 2 (Valve Close)	<Ref. to EN(H4DOTC)-273, DTC P1093 — TUMBLE GENERATED VALVE SYSTEM 2 (VALVE CLOSE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1094	Tumble Generated Valve Signal 1 Circuit Malfunction (Open)	<Ref. to EN(H4DOTC)-274, DTC P1094 — TUMBLE GENERATED VALVE SIGNAL 1 CIRCUIT MALFUNCTION (OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1095	Tumble Generated Valve Signal 1 Circuit Malfunction (Short)	<Ref. to EN(H4DOTC)-276, DTC P1095 — TUMBLE GENERATED VALVE SIGNAL 1 CIRCUIT MALFUNCTION (SHORT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1096	Tumble Generated Valve Signal 2 Circuit Malfunction (Open)	<Ref. to EN(H4DOTC)-278, DTC P1096 — TUMBLE GENERATED VALVE SIGNAL 2 CIRCUIT MALFUNCTION (OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1097	Tumble Generated Valve Signal 2 Circuit Malfunction (Short)	<Ref. to EN(H4DOTC)-280, DTC P1097 — TUMBLE GENERATED VALVE SIGNAL 2 CIRCUIT MALFUNCTION (SHORT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1110	Atmospheric Pressure Sensor Circuit Malfunction (Low Input)	<Ref. to EN(H4DOTC)-281, DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1111	Atmospheric Pressure Sensor Circuit Malfunction (High Input)	<Ref. to EN(H4DOTC)-281, DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1134	A/F Sensor Micro-Computer Problem	<Ref. to EN(H4DOTC)-282, DTC P1134 — A/F SENSOR MICRO-COMPUTER PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1152	O_2 Sensor Circuit Range/Performance (Low) (Bank1 Sensor1)	<Ref. to EN(H4DOTC)-283, DTC P1152 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (LOW) (BANK1 SENSOR1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1153	O_2 Sensor Circuit Range/Performance (High) (Bank1 Sensor1)	<Ref. to EN(H4DOTC)-285, DTC P1153 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (HIGH) (BANK1 SENSOR1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1301	Misfire Detected (High Temperature Exhaust Gas)	<Ref. to EN(H4DOTC)-287, DTC P1301 — MISFIRE DETECTED (HIGH TEMPERATURE EXHAUST GAS) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1306	OCV Solenoid Valve Signal 1 Circuit Malfunction (Open)	<Ref. to EN(H4DOTC)-289, DTC P1306 — OCV SOLENOID VALVE SIGNAL 1 CIRCUIT MALFUNCTION (OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1307	OCV Solenoid Valve Signal 1 Circuit Malfunction (Short)	<Ref. to EN(H4DOTC)-291, DTC P1307 — OCV SOLENOID VALVE SIGNAL 1 CIRCUIT MALFUNCTION (SHORT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1308	OCV Solenoid Valve Signal 2 Circuit Malfunction (Open)	<Ref. to EN(H4DOTC)-293, DTC P1308 — OCV SOLENOID VALVE SIGNAL 2 CIRCUIT MALFUNCTION (OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1309	OCV Solenoid Valve Signal 2 Circuit Malfunction (Short)	<Ref. to EN(H4DOTC)-295, DTC P1309 — OCV SOLENOID VALVE SIGNAL 2 CIRCUIT MALFUNCTION (SHORT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1312	Exhaust Gas Temperature Sensor Malfunction	<Ref. to EN(H4DOTC)-297, DTC P1312 — EXHAUST GAS TEMPERATURE SENSOR MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1518	Starter Switch Circuit Low Input	<Ref. to EN(H4DOTC)-299, DTC P1518 — STARTER SWITCH CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1544	Exhaust Gas Temperature Too High	<Ref. to EN(H4DOTC)-301, DTC P1544 — EXHAUST GAS TEMPERATURE TOO HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1560	Back-Up Voltage Circuit Malfunction	<Ref. to EN(H4DOTC)-303, DTC P1560 — BACK-UP VOLTAGE CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Index
P1570	Antenna	<Ref. to IM-16, DTC P1570 ANTENNA, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1571	Reference Code Incompatibility	<Ref. to IM-18, DTC P1571 REFERENCE CODE INCOMPATIBILITY, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1572	IMM Circuit Failure (Except Antenna Circuit)	<Ref. to IM-19, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1574	Key Communication Failure	<Ref. to IM-23, DTC P1574 KEY COMMUNICATION FAILURE, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1576	EGI Control Module EEPROM	<Ref. to IM-23, DTC P1576 EGI CONTROL MODULE EEPROM, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1577	IMM Control Module EEPROM	<Ref. to IM-23, DTC P1577 IMM CONTROL MODULE EEPROM, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
P1698	Engine Torque Control Cut Signal Circuit Low Input	<Ref. to EN(H4DOTC)-306, DTC P1698 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1699	Engine Torque Control Cut Signal Circuit High Input	<Ref. to EN(H4DOTC)-308, DTC P1699 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1700	Throttle Position Sensor	<Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1711	Engine Torque Control Signal 1 Circuit Malfunction	<Ref. to EN(H4DOTC)-310, DTC P1711 — ENGINE TORQUE CONTROL SIGNAL 1 CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1712	Engine Torque Control Signal 2 Circuit Malfunction	<Ref. to EN(H4DOTC)-312, DTC P1712 — ENGINE TORQUE CONTROL SIGNAL 2 CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

19.Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC P0011 — “A” CAMSHAFT POSITION-TIMING OVER-ADVANCED OR SYSTEM PERFORMANCE (BANK 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK CURRENT DATA.** 1)Start the engine and let it idle. 2)Inspect the AVCS operating angle and variable valve timing solenoid valve duty output using Subaru Select Monitor and OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the AVCS operating angle more than approx. 0°C and the variable valve timing solenoid valve duty output more than approx. 10%?	Inspect the following items and repair or replace if necessary. • Engine oil (amount, contamination) • Oil pipe (clog) • variable valve timing solenoid valve (clog or contamination in oil passage, settling at spring, stuck at valve) • Intake camshaft (sludge, damage at camshaft) • Timing belt (timing mark aligning)	A temporary malfunction. Conduct the following to clean the oil passage. Replace the engine oil and idle the engine for 5 minutes, then replace the oil filter and engine oil.

B: DTC P0021 — "A" CAMSHAFT POSITION-TIMING OVER-ADVANCED OR SYSTEM PERFORMANCE (BANK 2) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK CURRENT DATA.** 1)Start the engine and let it idle. 2)Inspect the AVCS operating angle and variable valve timing solenoid valve duty output using Subaru Select Monitor and OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the AVCS operating angle more than approx. 0°C and the variable valve timing solenoid valve duty output more than approx. 10%?	Inspect the following items and repair or replace if necessary. • Engine oil (amount, contamination) • Oil pipe (clog) • variable valve timing solenoid valve (clog or contamination in oil passage, settling at spring, stuck at valve) • Intake camshaft (sludge, damage at camshaft) • Timing belt (timing mark aligning)	A temporary malfunction. Conduct the following to clean the oil passage. Replace the engine oil and idle the engine for 5 minutes, then replace the oil filter and engine oil.

C: DTC P0030 — HO2S HEATER CONTROL CIRCUIT (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

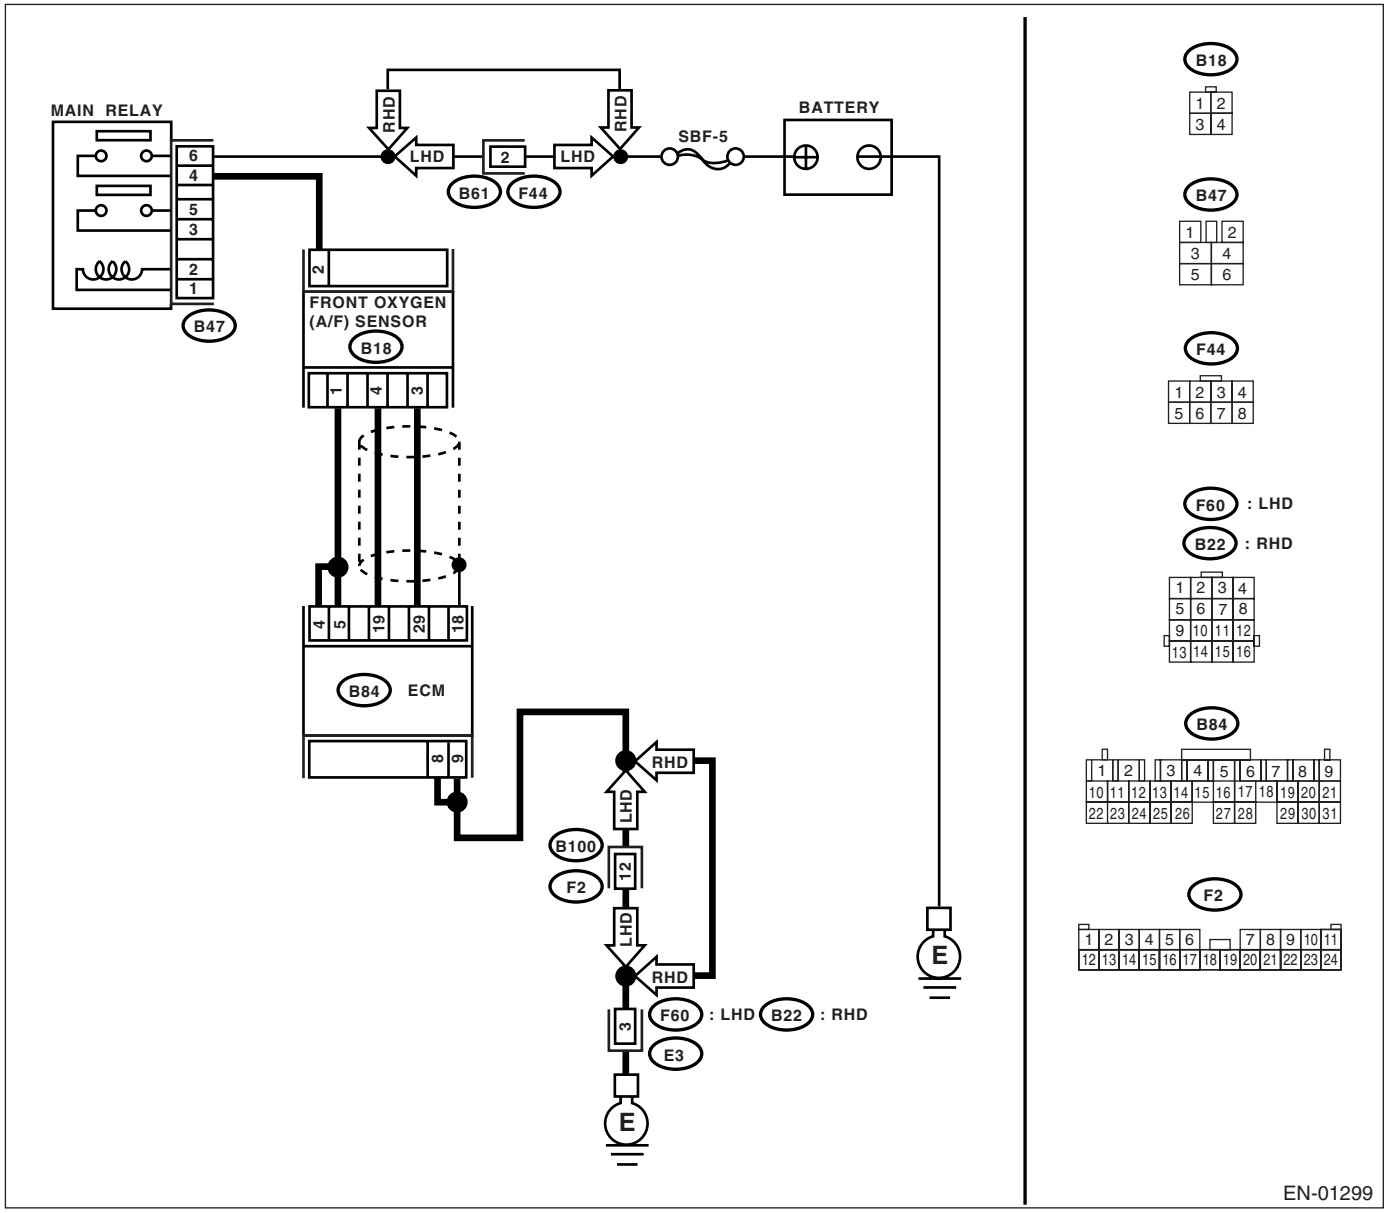

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Start the engine and warm-up engine. 2)Turn the ignition switch to OFF. 3)Disconnect the connectors from ECM and front oxygen (A/F) sensor. 4)Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B84) No. 5 — (B18) No. 1:*** ***(B84) No. 4 — (B18) No. 1:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.
2	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B84) No. 19 — (B18) No. 4:*** ***(B84) No. 29 — (B18) No. 3:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.
3	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** Measure the resistance of harness between main relay and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B47) No. 4 — (B18) No. 2:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.
4	**CHECK FRONT OXYGEN (A/F) SENSOR.** Measure the resistance between front oxygen (A/F) sensor connector terminals. ***Terminals*** ***No. 2 — No. 1:***	Is the resistance less than 5 Ω?	Go to step **5.**	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>
5	**CHECK POOR CONTACT.** Check the poor contact in ECM and front oxygen (A/F) sensor connector.	Is there poor contact in ECM or front oxygen (A/F) sensor connector?	Repair the poor contact in ECM or front oxygen (A/F) sensor connector.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>

D: DTC P0031 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

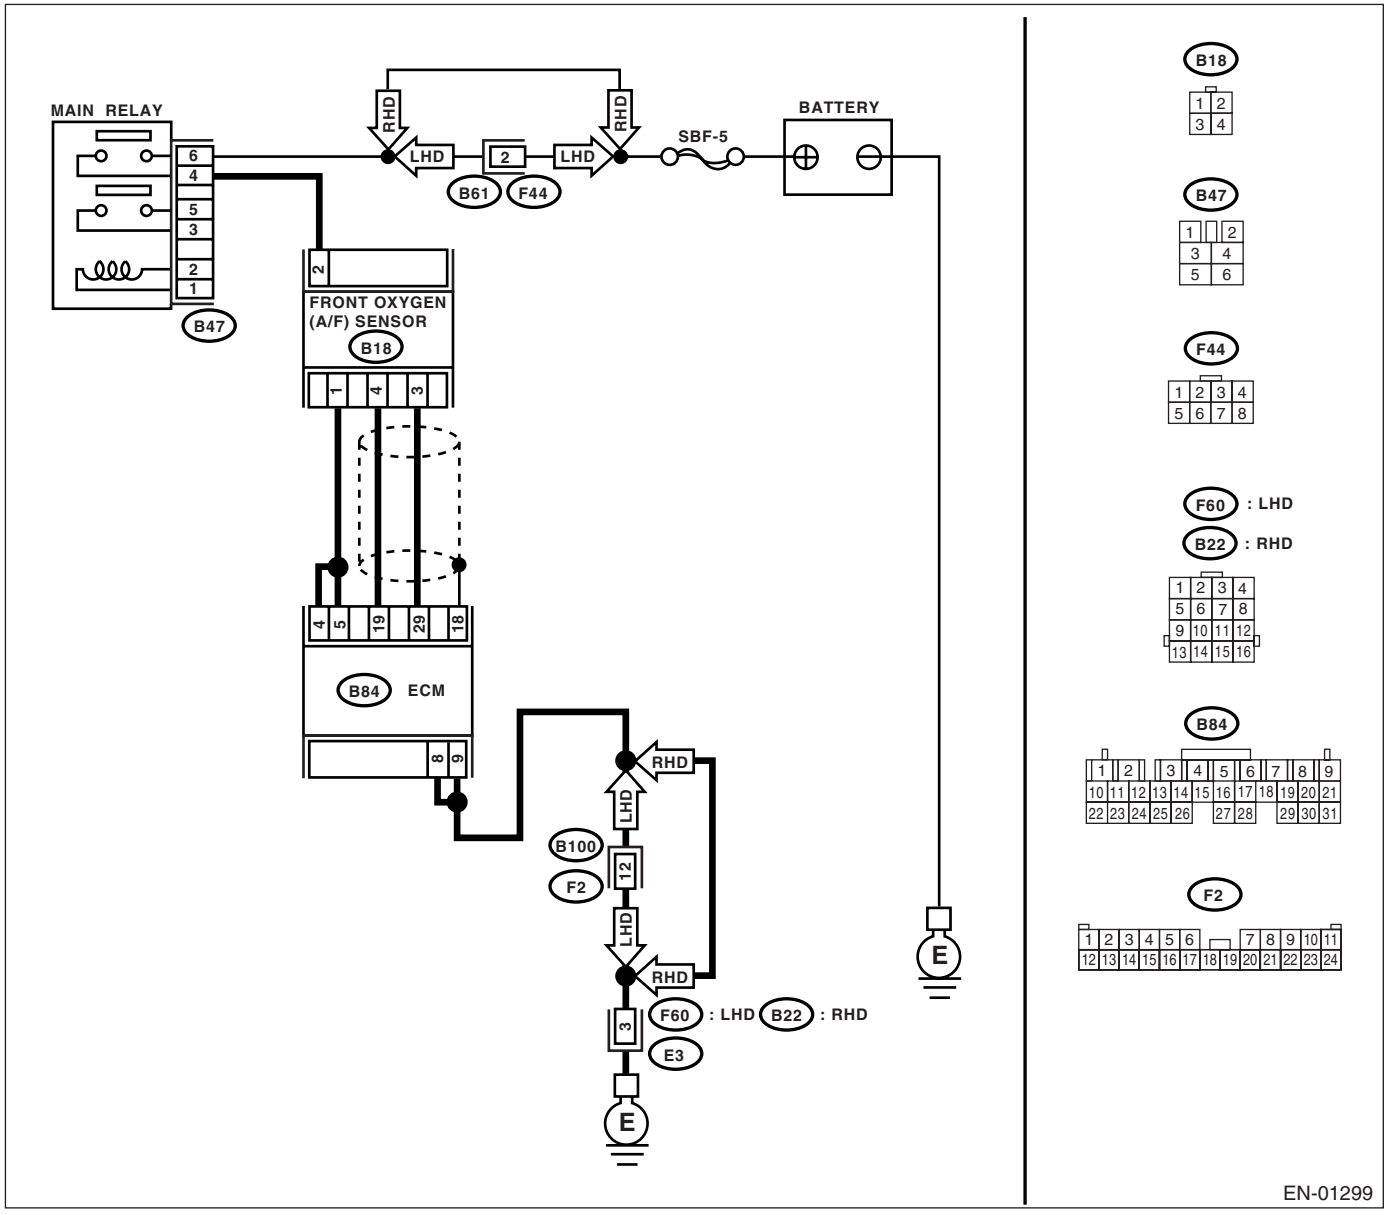

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY TO FRONT OXYGEN (A/F) SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from front oxygen (A/F) sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between front oxygen (A/F) sensor connector and engine ground. ***Connector & terminal*** ***(B18) No. 2 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Repair the power supply line. NOTE: In this case, repair the following: • Open circuit in harness between main relay and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in main relay connector
2	**CHECK GROUND CIRCUIT OF ECM.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 8 — Chassis ground:*** ***(B84) No. 9 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine ground cable • Poor contact in ECM connector • Poor contact in coupling connector
3	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 0.2 A?	Repair the poor contact in connector. NOTE: In this case, repair the following: • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector	Go to step **4.**
4	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start and idle the engine. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 4 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **6.**	Go to step **5.**
5	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 4 (+) — Chassis ground (–):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Go to step **6.**
6	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 5 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **8.**	Go to step **7.**

	Step	Check	Yes	No
7	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 5 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Go to step **8.**
8	**CHECK FRONT OXYGEN (A/F) SENSOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between front oxygen (A/F) sensor connector terminals. ***Terminals*** ***No. 2 — No. 1:***	Is the resistance less than 10 Ω?	Repair the harness and connector. NOTE: In this case, repair the following: • Open or ground short circuit in harness between front oxygen (A/F) sensor and ECM connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>

E: DTC P0032 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

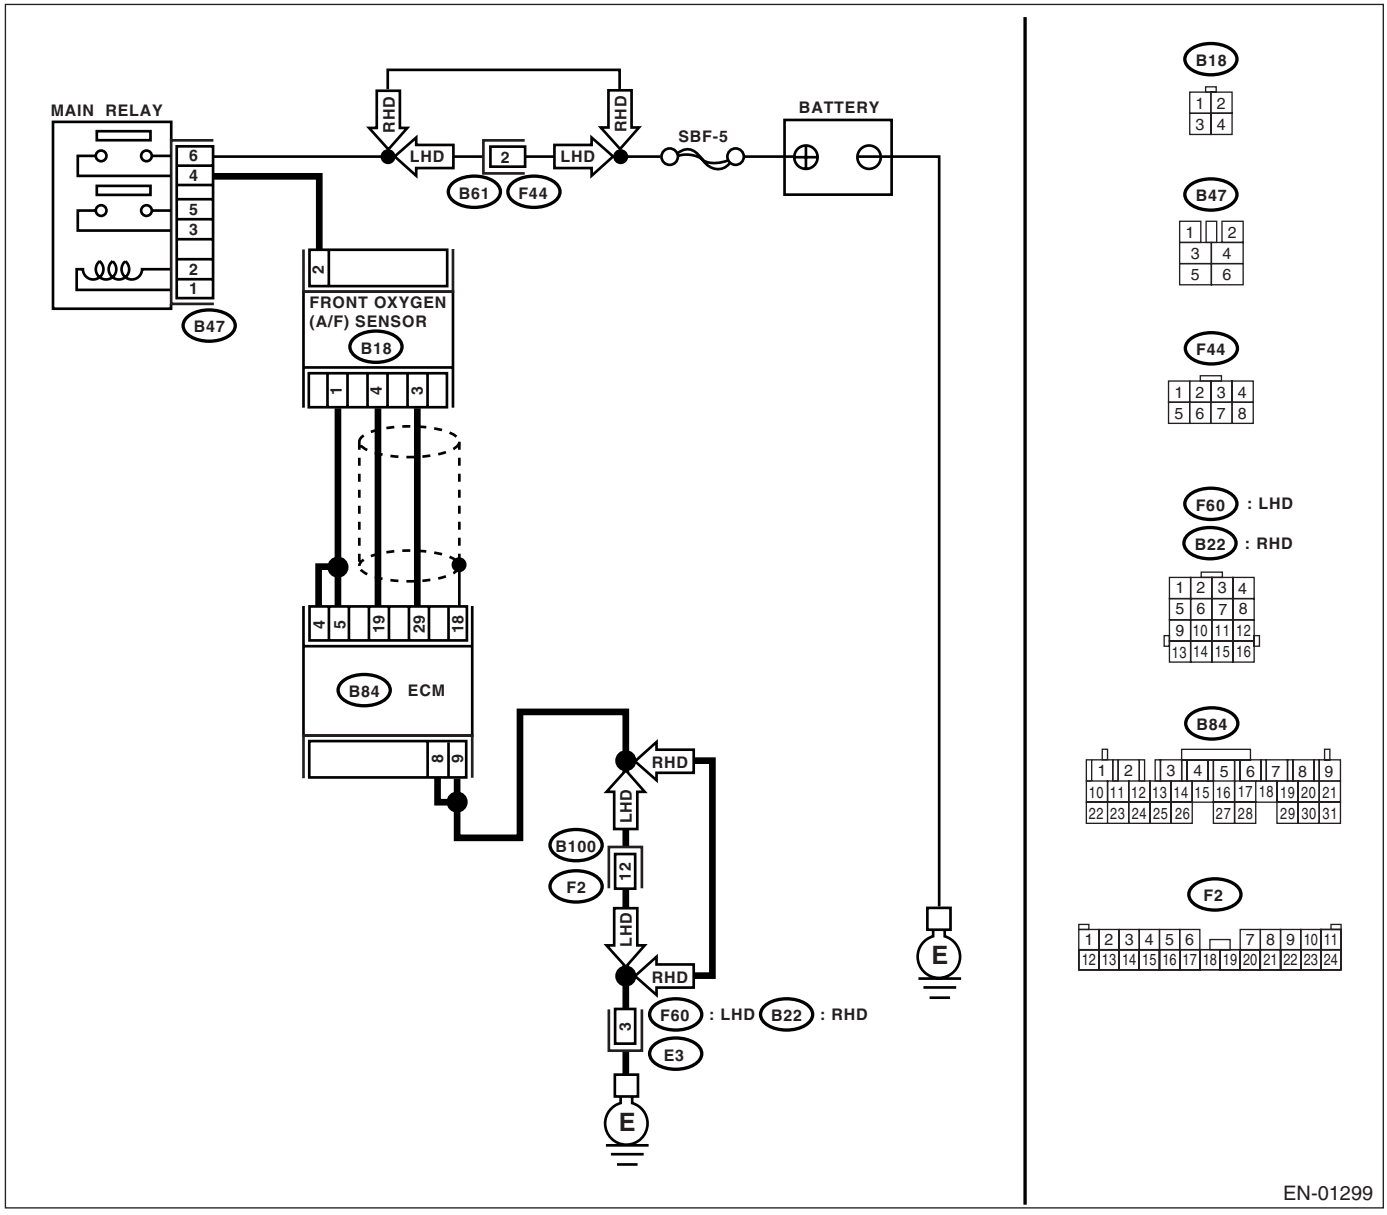

Step		Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 4 (+) — Chassis ground (–):*** ***(B84) No. 5 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **3.**	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK FRONT OXYGEN (A/F) SENSOR HEATER CURRENT.** 1)Turn the ignition switch to OFF. 2)Repair the battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. 3)Turn the ignition switch to ON. 4)Read the data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 2.3 A?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	END
3	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 4 (+) — Chassis ground (−):*** ***(B84) No. 5 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.	END

F: DTC P0037 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

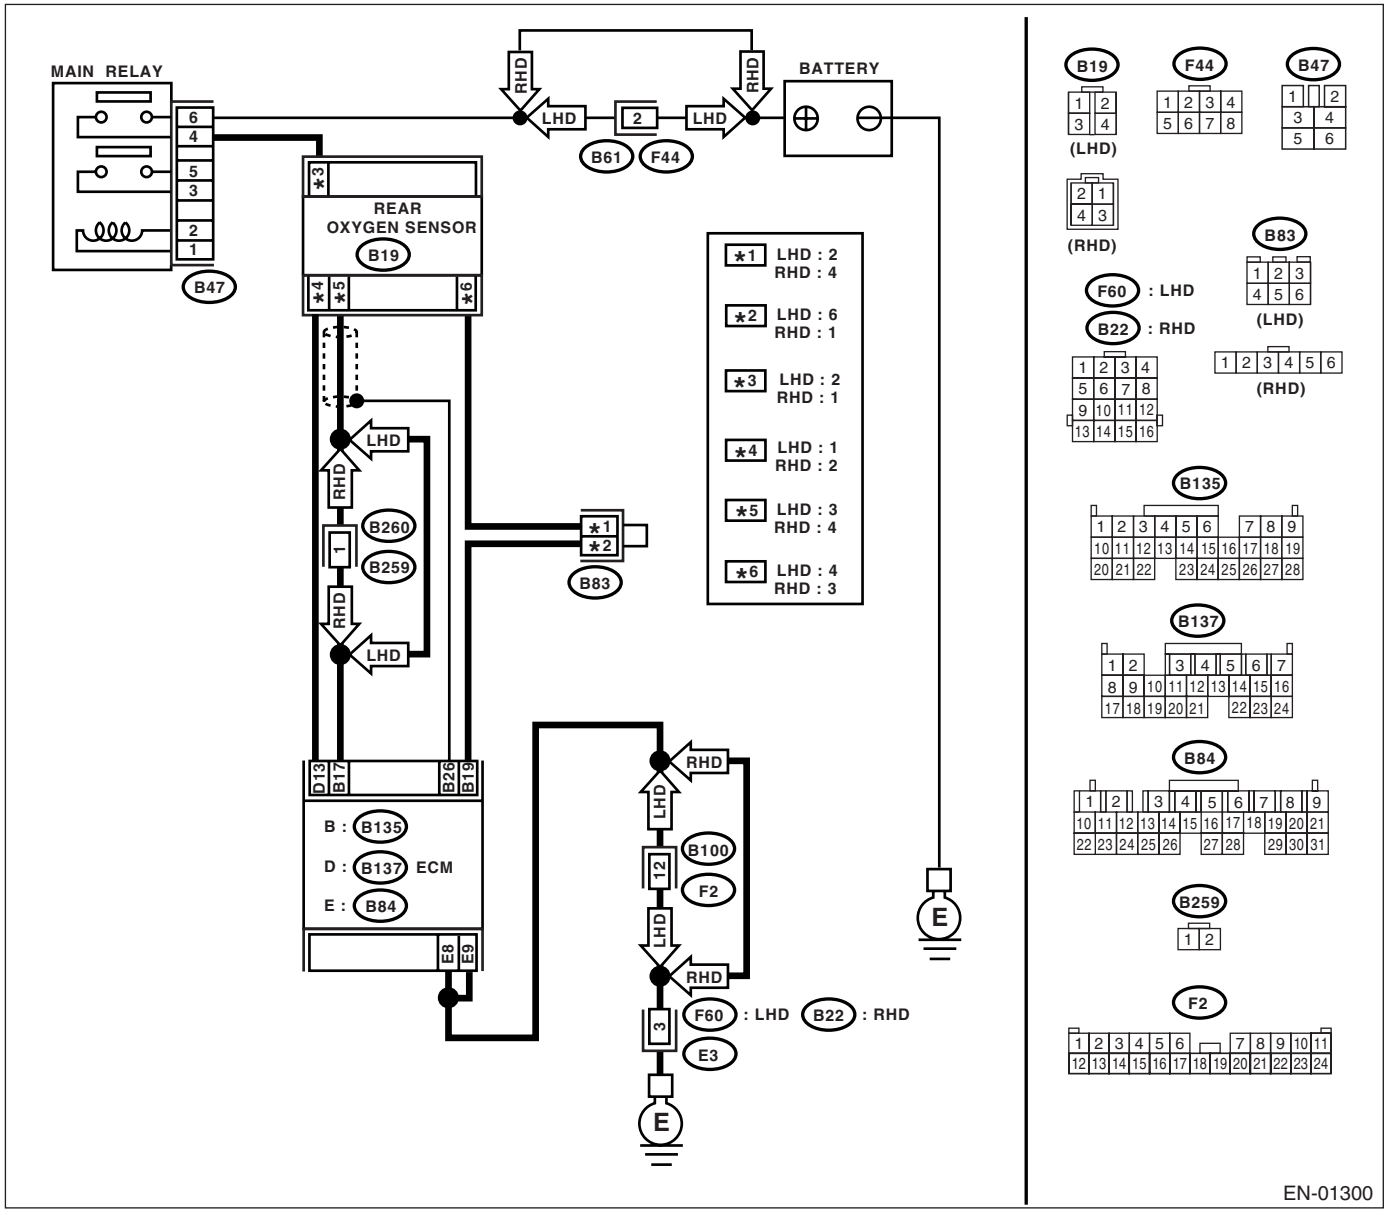

	Step	Check	Yes	No
1	**CHECK GROUND CIRCUIT OF ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 8 — Chassis ground:*** ***(B84) No. 9 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **2.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine ground cable • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of rear oxygen sensor heater current using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 0.2 A?	Repair the connector. NOTE: In this case, repair the following: • Poor contact in rear oxygen sensor connector • Poor contact in rear oxygen sensor connecting harness connector • Poor contact in ECM connector	Go to step **3.**
3	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start and idle the engine. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 13 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **6.**	Go to step **4.**
4	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 13 (+) — Chassis ground (–):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Go to step **5.**
5	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 13 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Repair the battery short circuit in harness between ECM and rear oxygen sensor connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

	Step	Check	Yes	No
6	**CHECK POWER SUPPLY TO REAR OXYGEN SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between rear oxygen sensor connector and engine ground or chassis ground. ***Connector & terminal*** ***LHD model*** ***(B19) No. 2 (+) — Chassis ground (–):*** ***RHD model*** ***(B19) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Repair the power supply line. NOTE: In this case, repair the following: • Open circuit in harness between main relay and rear oxygen sensor connector • Poor contact in rear oxygen sensor connector • Poor contact in coupling connector
7	**CHECK REAR OXYGEN SENSOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between rear oxygen sensor connector terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 30 Ω?	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector • Poor contact in coupling connector	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>

G: DTC P0038 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

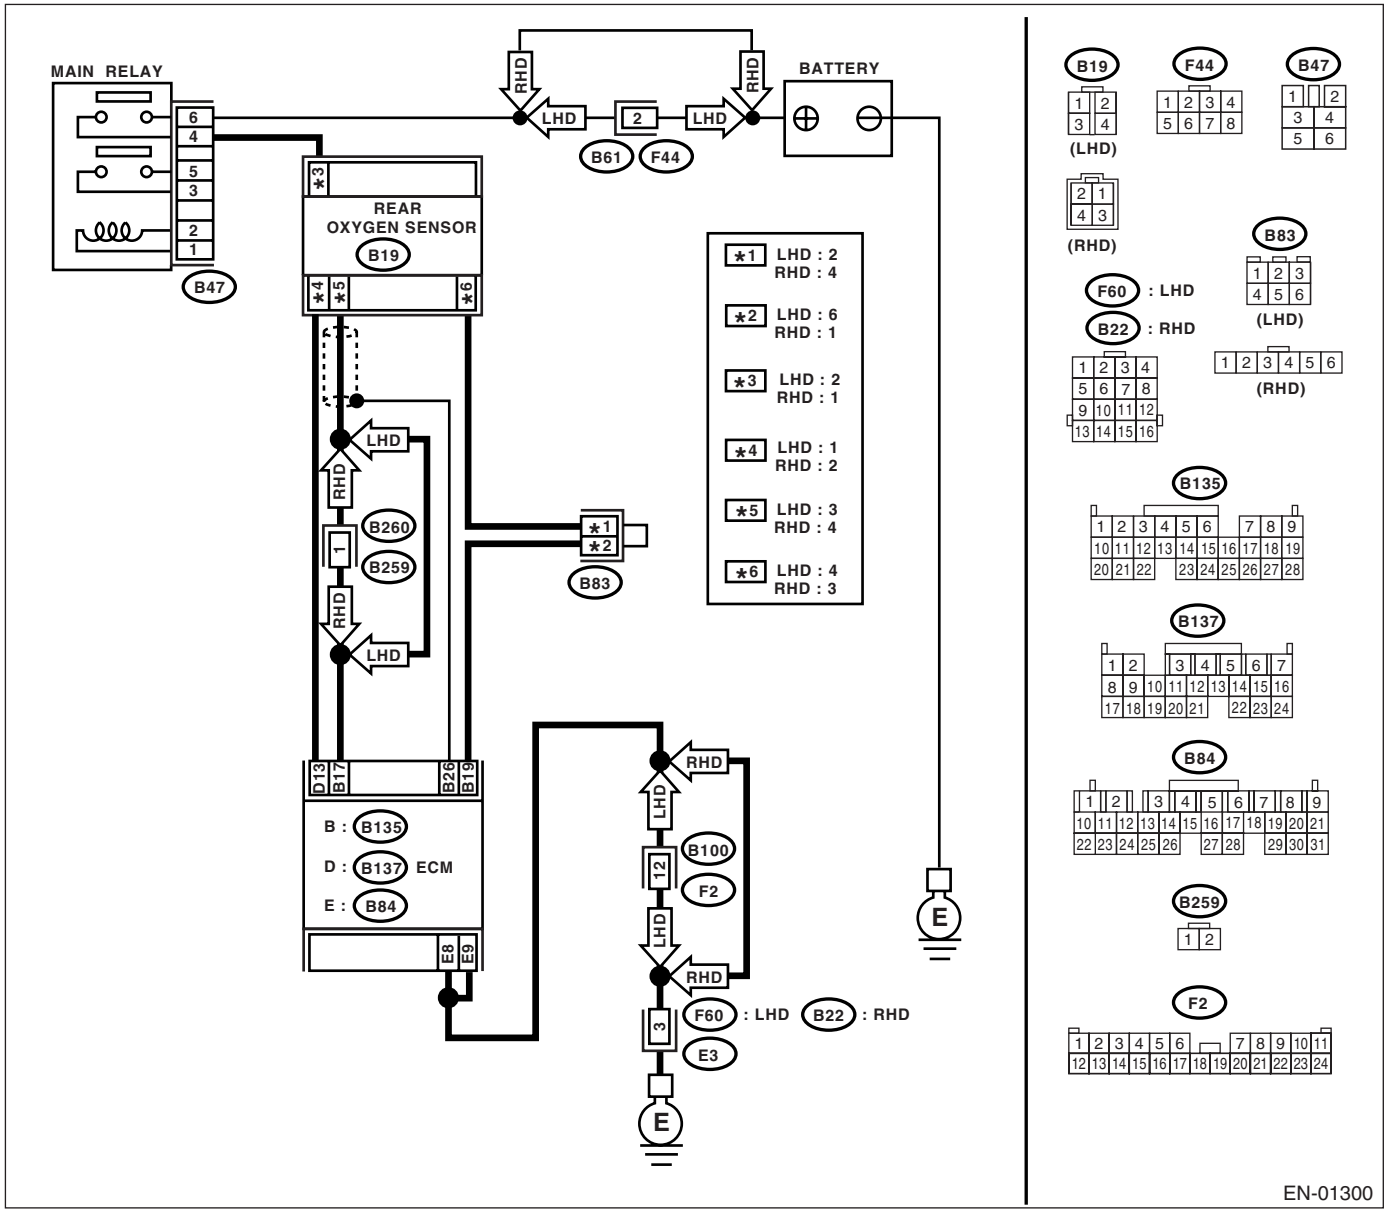

Step		Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 13 (+) — Chassis ground (−):***	Is the voltage more than 8 V?	Go to step **2.**	Go to step **3.**

	Step	Check	Yes	No
2	**CHECK CURRENT DATA.** 1)Repair the battery short circuit in harness between ECM and rear oxygen sensor connector. 2)Turn the ignition switch to ON. 3)Read the data of rear oxygen sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the current more than 7 A?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	END
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	END

H: DTC P0068 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

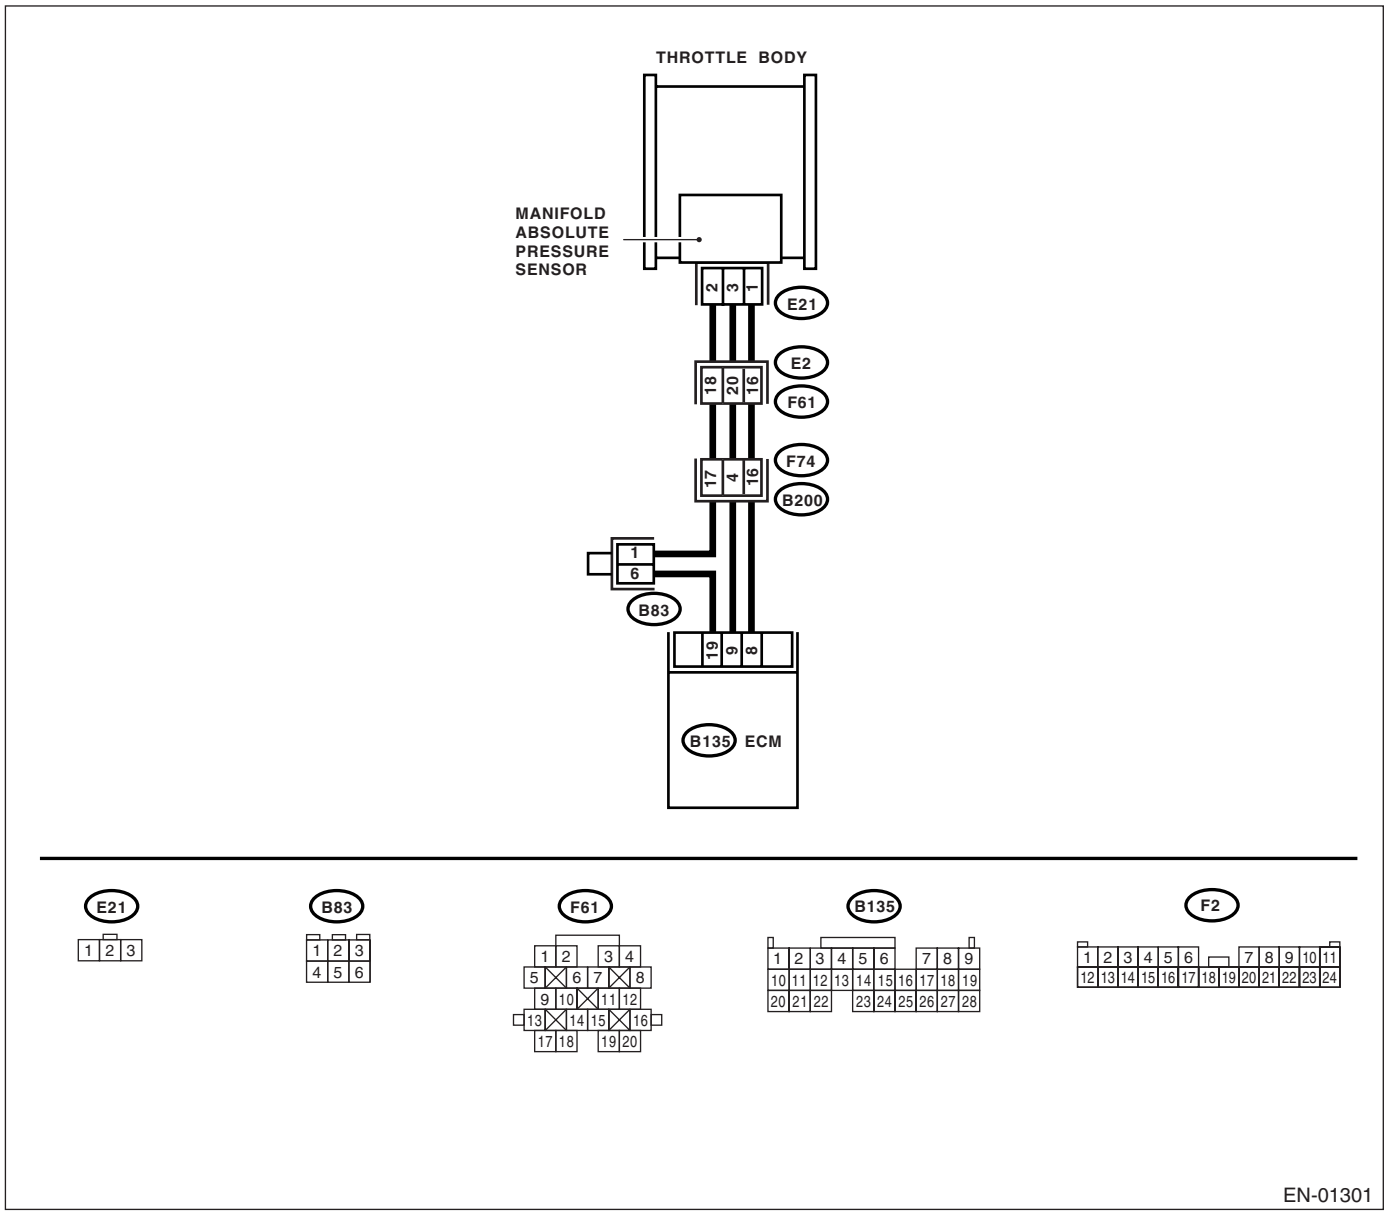

- **RHD model**

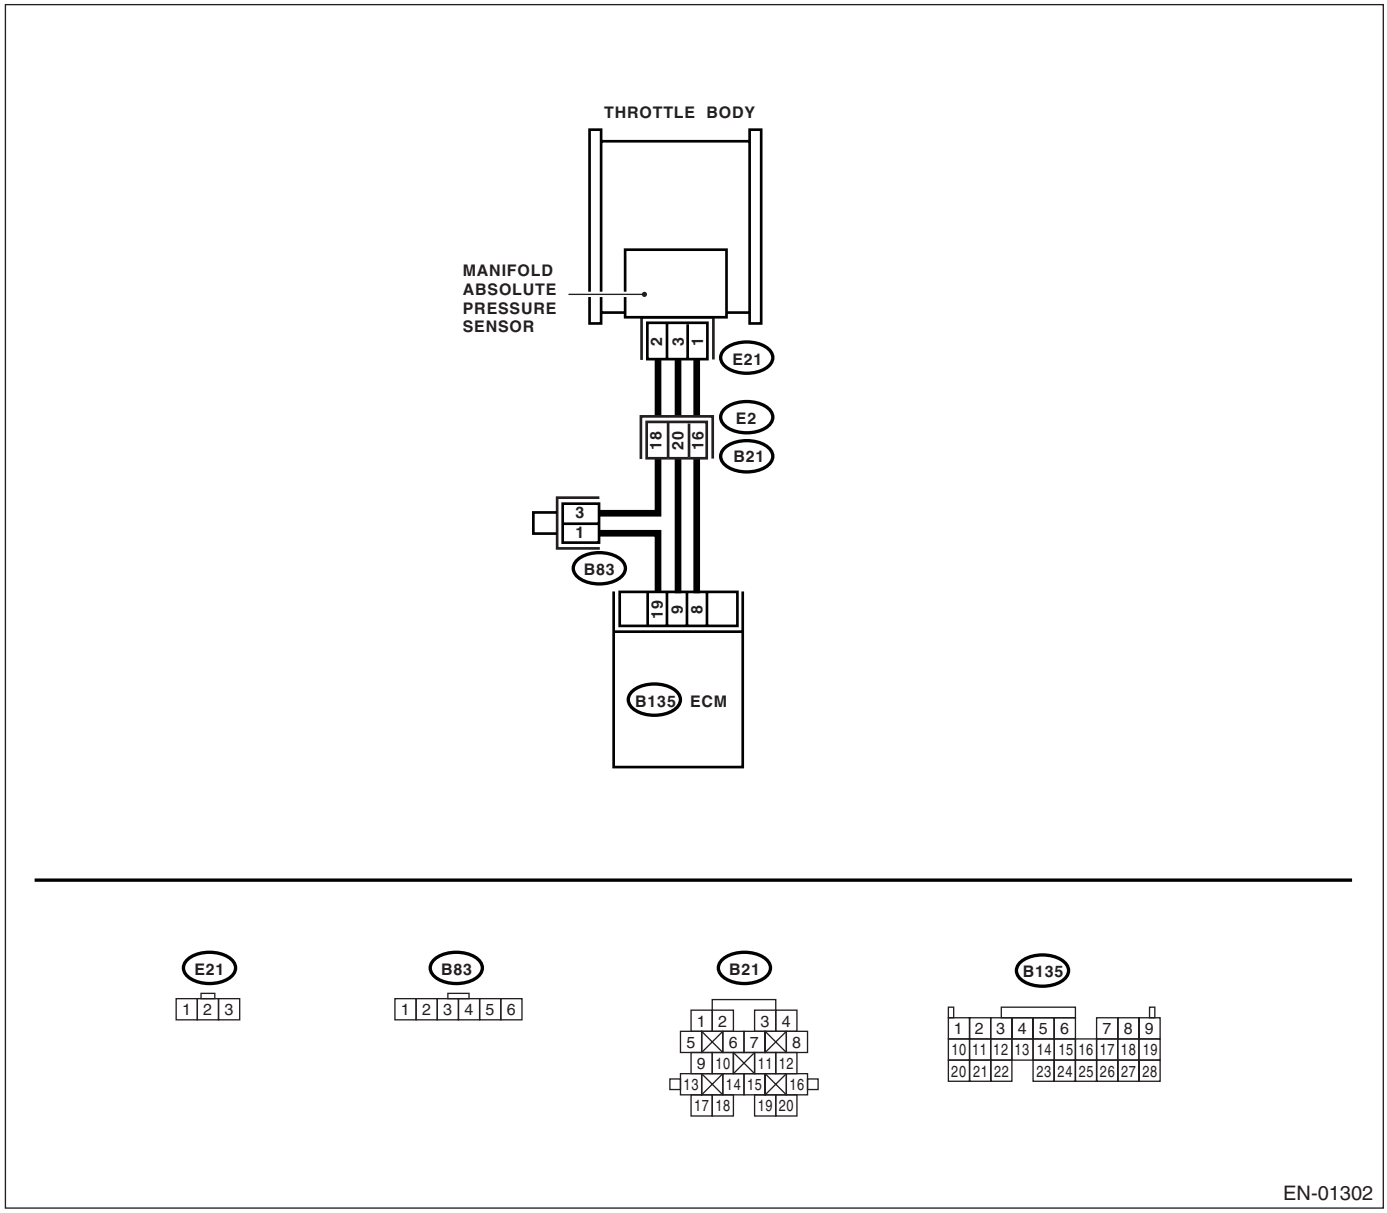
THROTTLE BODY
MANIFOLD ABSOLUTE PRESSURE SENSOR
2 3 1
E21
E2
18 20 16
B21
3 1
B83
19 9 8
B135 ECM
E21
1 2 3
B83
1 2 3 4 5 6
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01302

	Step	Check	Yes	No
1	**CHECK IDLE SWITCH SIGNAL.** 1)Turn the ignition switch to ON. 2)Operate the LED operation mode for engine using Subaru Select Monitor. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.>	Does the LED of {Idle Switch Signal} come on?	Go to step **2.**	Check the throttle position sensor circuit. <Ref. to EN(H4DOTC)-124, DTC P0121 — THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT RANGE/PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0106.
2	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC. "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0106.	Go to step **3.**
3	**CHECK CONDITION OF MANIFOLD ABSOLUTE PRESSURE SENSOR.**	Is the manifold absolute pressure sensor installation bolt tightened securely?	Go to step **4.**	Tighten the manifold absolute pressure sensor installation bolt securely.
4	**CHECK CONDITION OF THROTTLE BODY.**	Is the throttle body installation bolt tightened securely?	Replace the manifold absolute pressure sensor. <Ref. to FU(H4DOTC)-35, Manifold Absolute Pressure Sensor.>	Tighten the throttle body installation bolt securely.

I: DTC P0101 — MASS OR VOLUME AIR FLOW CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

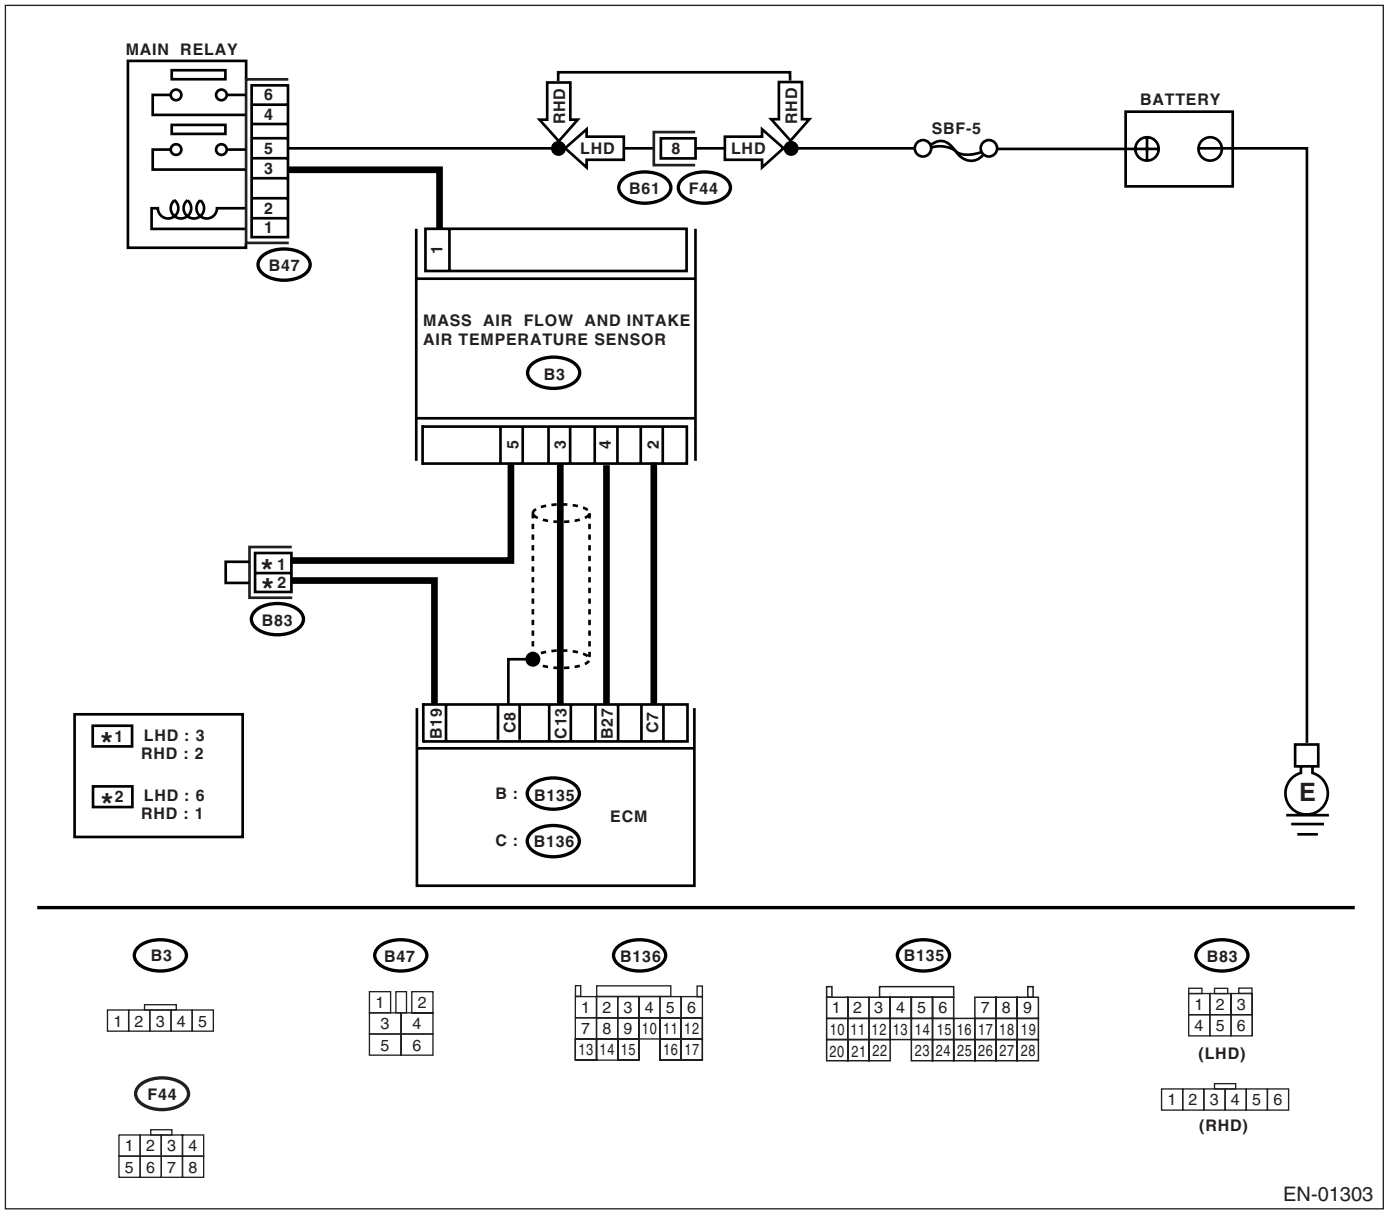

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0101.	Replace the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>

J: DTC P0102 — MASS OR VOLUME AIR FLOW CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance
- **WIRING DIAGRAM:**

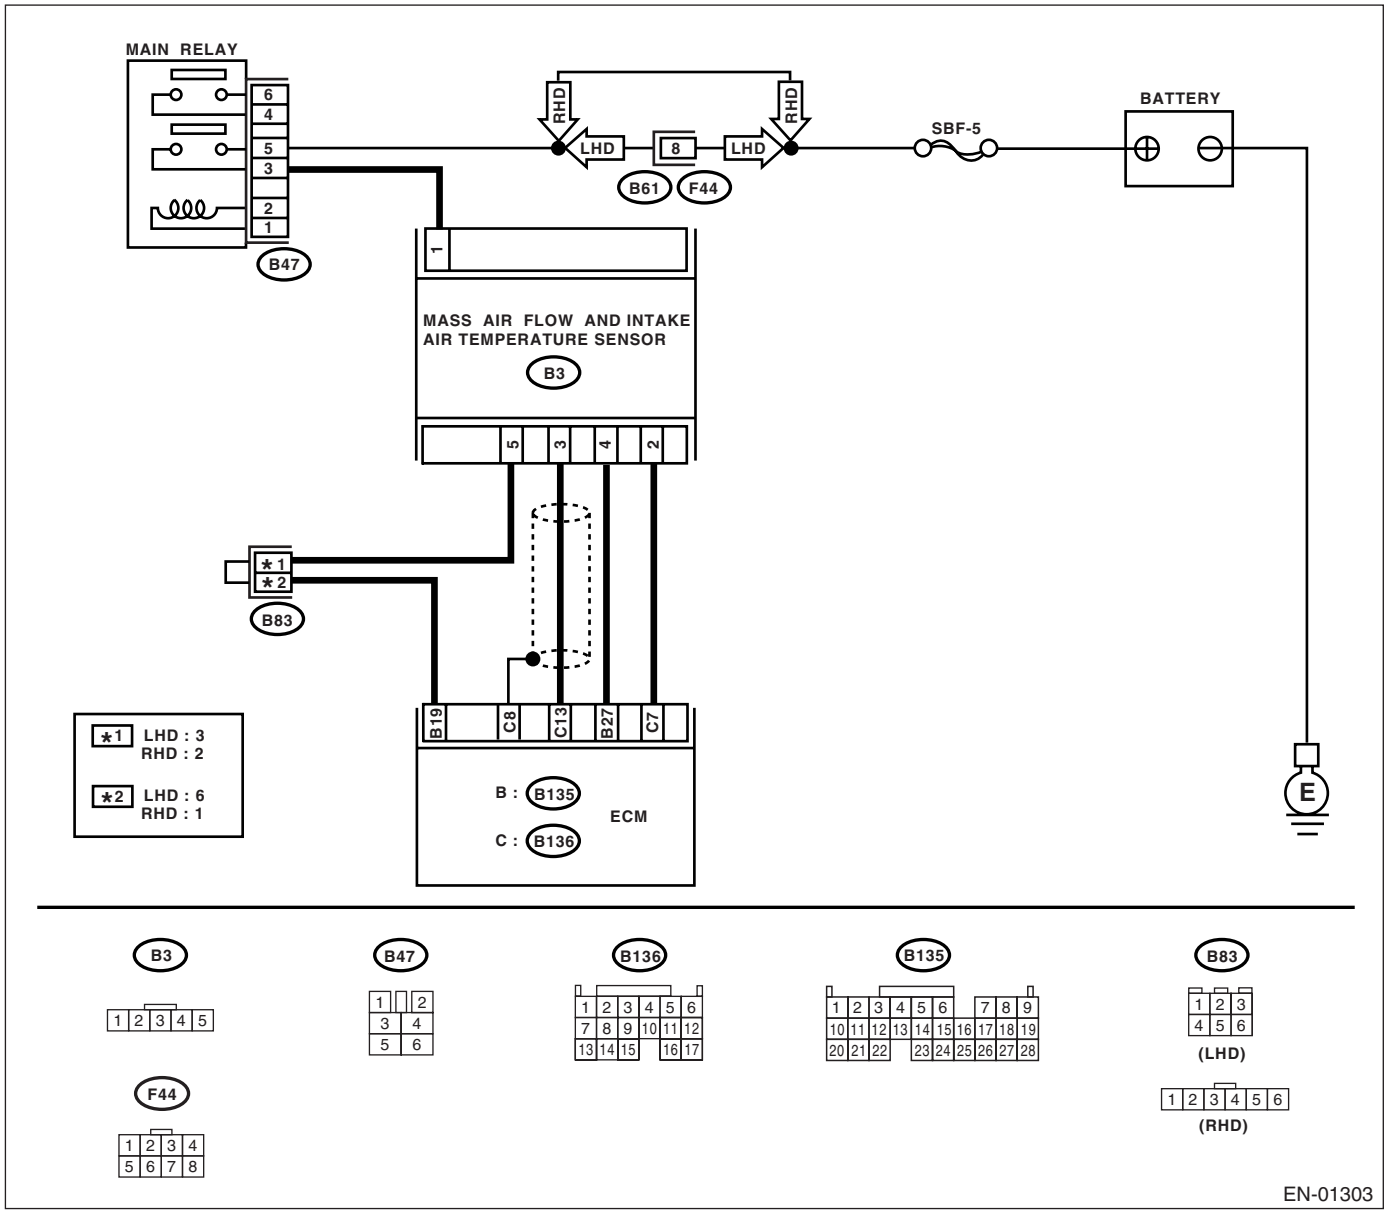

	Step	Check	Yes	No
1	**CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor or OBD-II general scan tool to data link connector. 3)Turn the ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON. 4)Start the engine. 5)Read the mass air flow sensor voltage using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage 0.2 — 4.7 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in the mass air flow sensor. NOTE: In this case, repair the following: • Open or ground short circuit in harness between mass air flow sensor and ECM connector • Poor contact in mass air flow sensor or ECM connector	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground while engine is idling. ***Connector & terminal*** ***(B136) No. 13 (+) — Chassis ground (−):***	Is the voltage less than 0.2 V?	Go to step **4.**	Go to step **3.**
3	**CHECK INPUT SIGNAL FOR ECM (USING SUBARU SELECT MONITOR).** Measure the voltage between ECM connector and chassis ground while engine is idling.	Shake the ECM harness and connector, while monitoring value of Subaru Select Monitor. Does the voltage change?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK POWER SUPPLY TO MASS AIR FLOW SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from mass air flow sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between mass air flow sensor connector and chassis ground. ***Connector & terminal*** ***(B3) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 5 V?	Go to step **5.**	Repair the open circuit between mass air flow sensor and main relay.

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and mass air flow sensor connector. ***Connector & terminal*** ***(B136) No. 13 — (B3) No. 3:*** ***(B136) No. 7 — (B3) No. 2:*** ***(B135) No. 19 — (B3) No. 5:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit between ECM and mass air flow sensor connector.
6	**CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B136) No. 13 — Chassis ground:*** ***(B136) No. 7 — Chassis ground:*** ***(B135) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit between ECM and mass air flow sensor connector.
7	**CHECK POOR CONTACT** Check poor contact in mass air flow sensor connector.	Is there poor contact in mass air flow sensor connector?	Repair the poor contact in mass air flow sensor connector.	Replace the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>

K: DTC P0103 — MASS OR VOLUME AIR FLOW CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

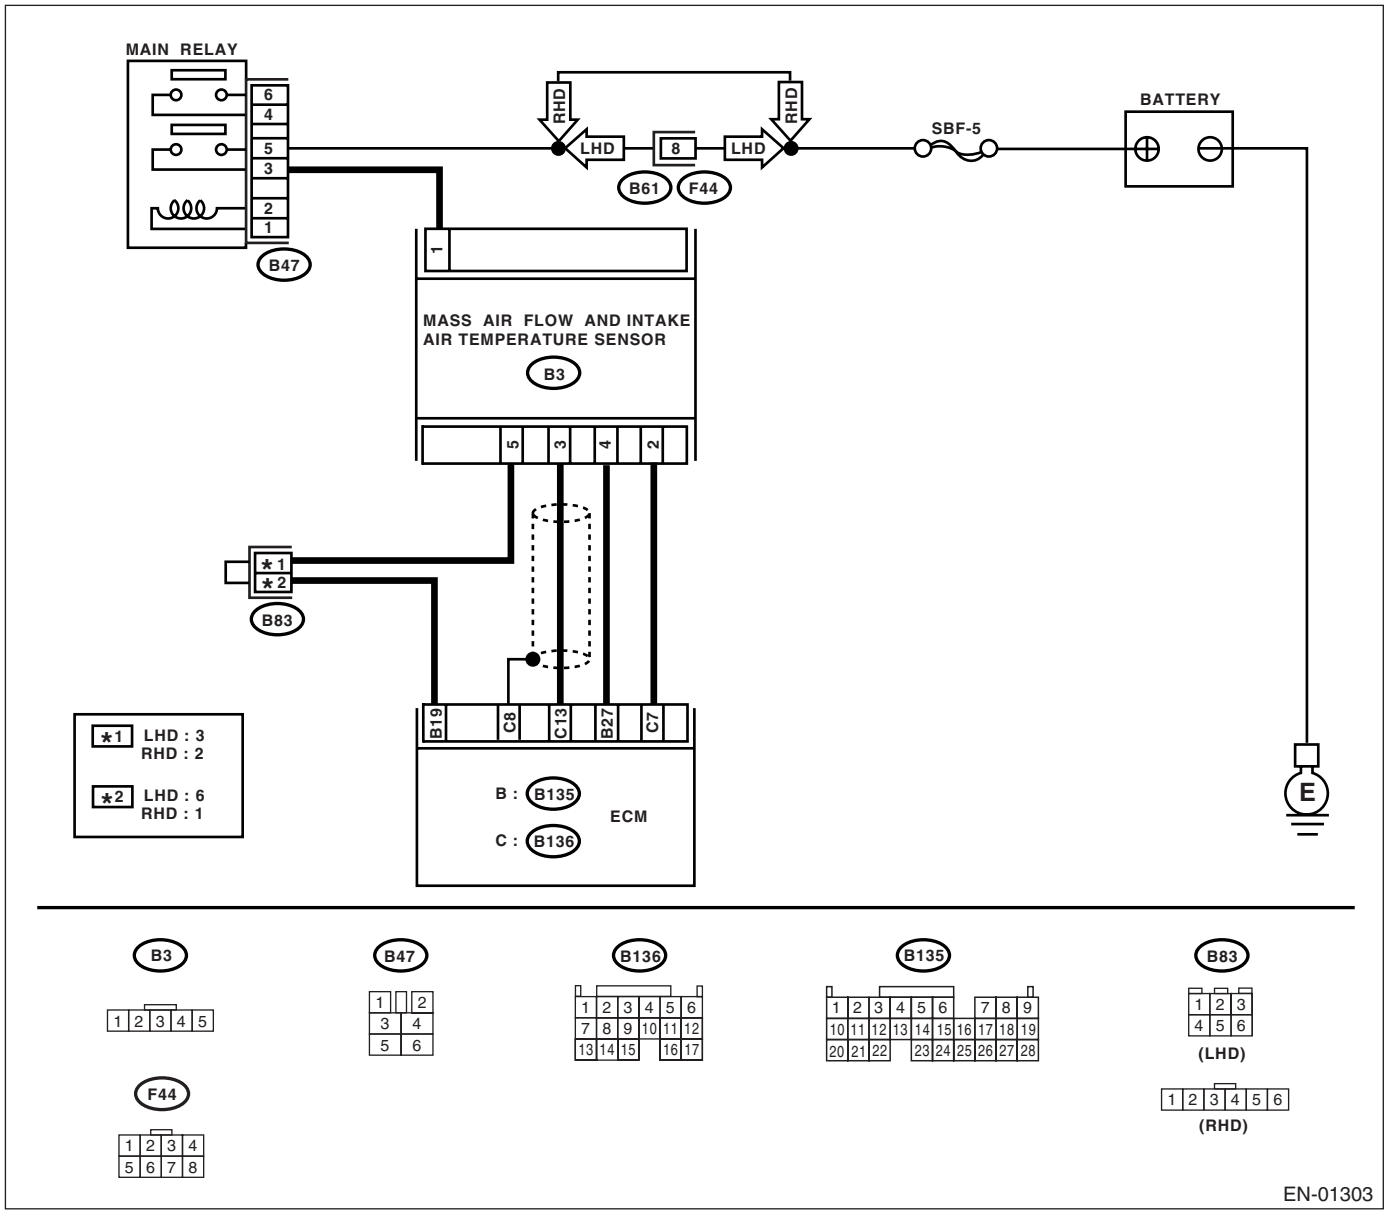

	Step	Check	Yes	No
1	**CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor or OBD-II general scan tool to data link connector. 3)Turn the ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON. 4)Start the engine. 5)Read the mass air flow sensor voltage using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage 0.2 — 4.7 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.	Go to step **2.**
2	**CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from mass air flow sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between mass air flow sensor connector and chassis ground. ***Connector & terminal*** ***(B3) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 5 V?	Repair the battery short of harness between mass air flow sensor connector and ECM connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance between ECM connector and mass air flow sensor connector. ***Connector & terminal*** ***(B3) No. 2 — (B136) No. 7:***	Is the resistance less than 1 Ω?	Replace the mass air flow sensor.<Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>	Repair the open harness between mass air flow sensor connector and ECM connector.

L: DTC P0107 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

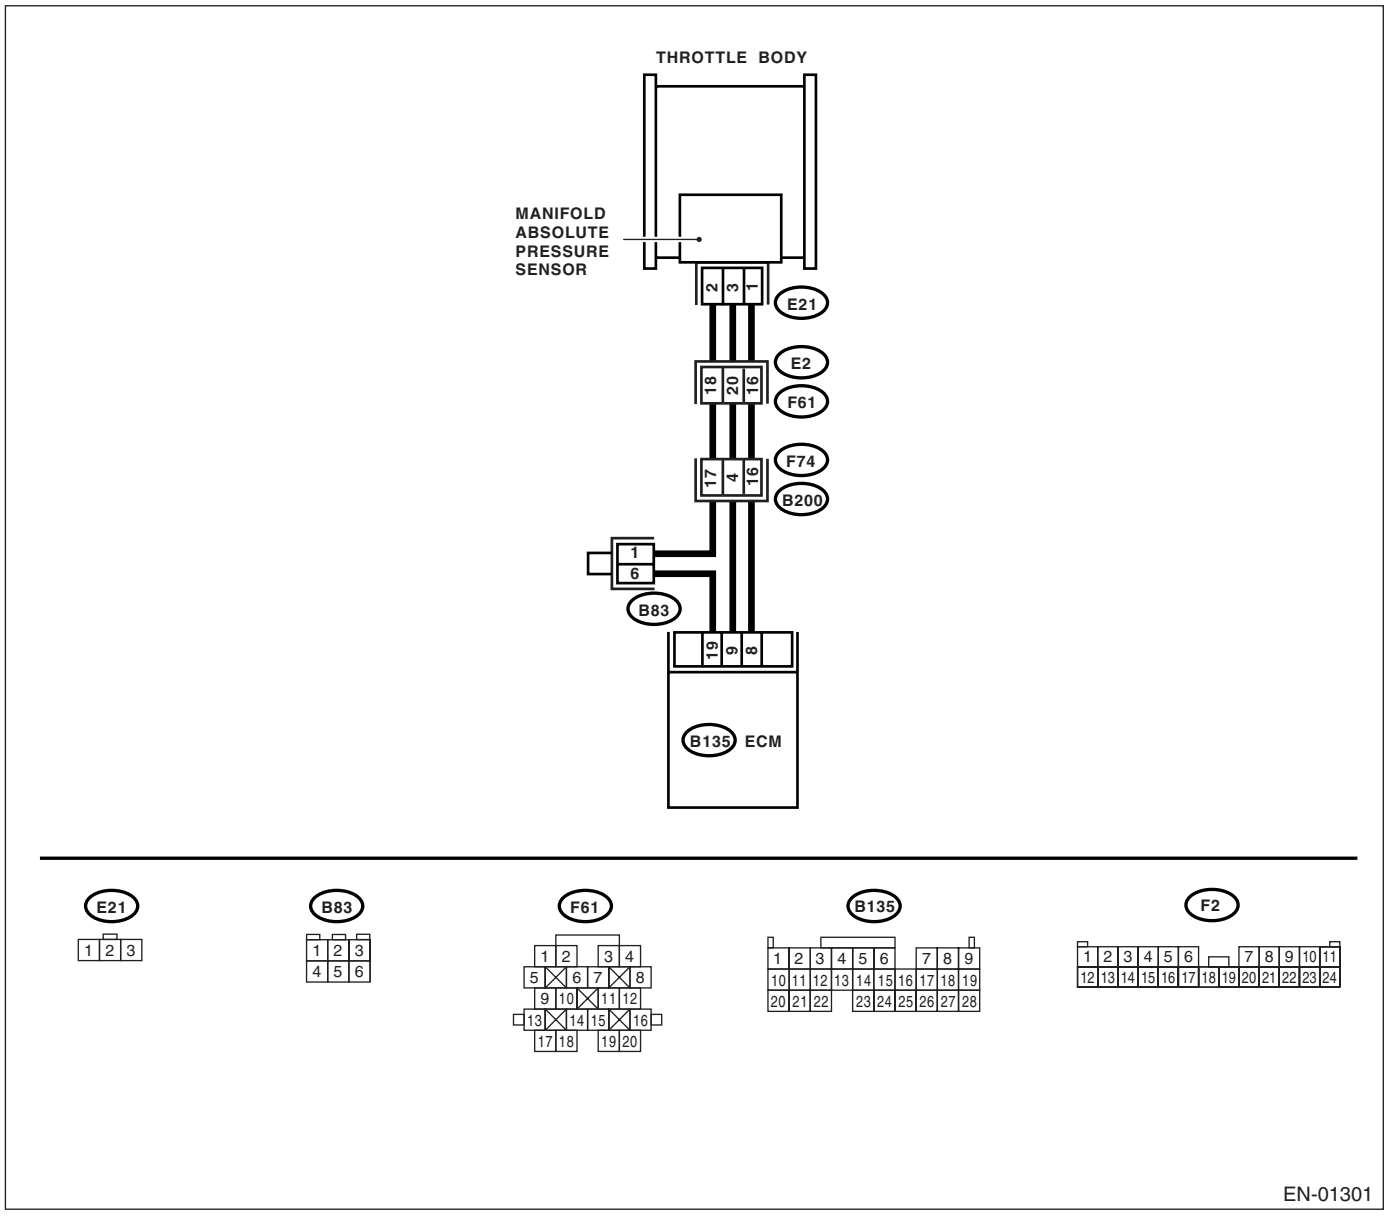

- **RHD model**

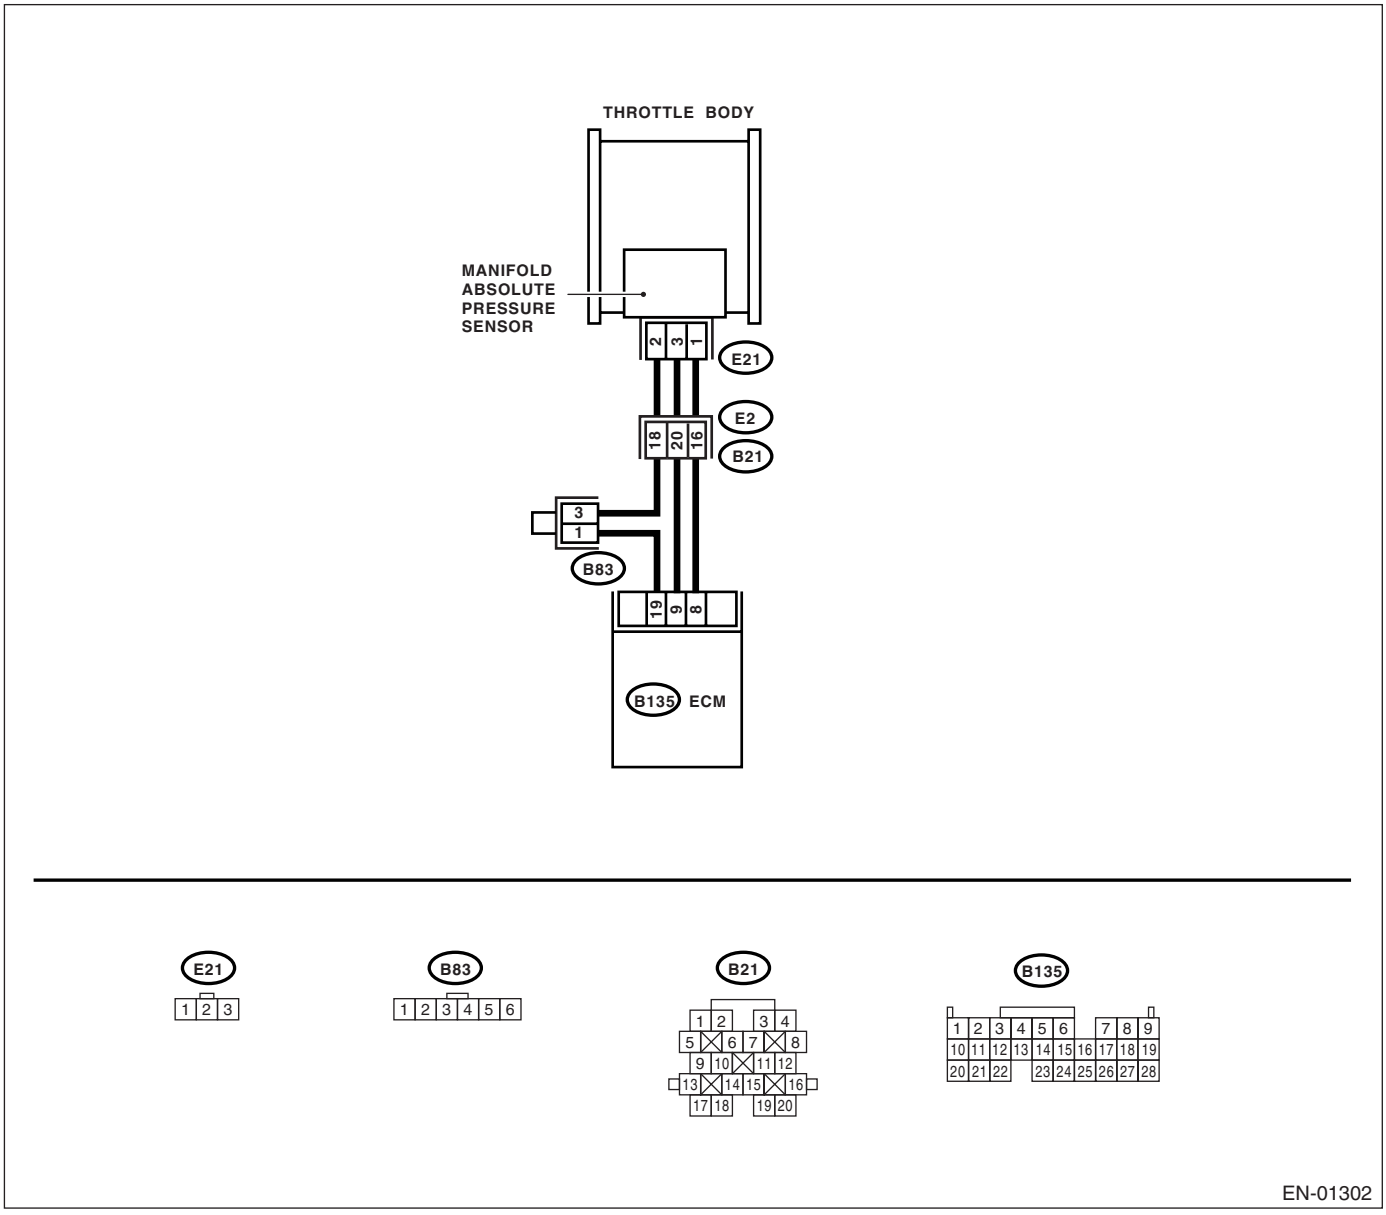

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **3.**	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

	Step	Check	Yes	No
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 8 (+) — Chassis ground (−):***	Is the voltage less than 0.7 V?	Go to step **4.**	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from manifold absolute pressure sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E21) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **5.**	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
5	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B135) No. 19 — (E21) No. 2:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
6	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** Measure the resistance of harness between manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E21) No. 1 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit in harness between ECM and manifold absolute pressure sensor connector.
7	**CHECK POOR CONTACT.** Check poor contact in manifold absolute pressure sensor connector.	Is there poor contact in manifold absolute pressure sensor connector?	Repair the poor contact in manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <Ref. to FU(H4DOTC)-35, Manifold Absolute Pressure Sensor.>

M: DTC P0108 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

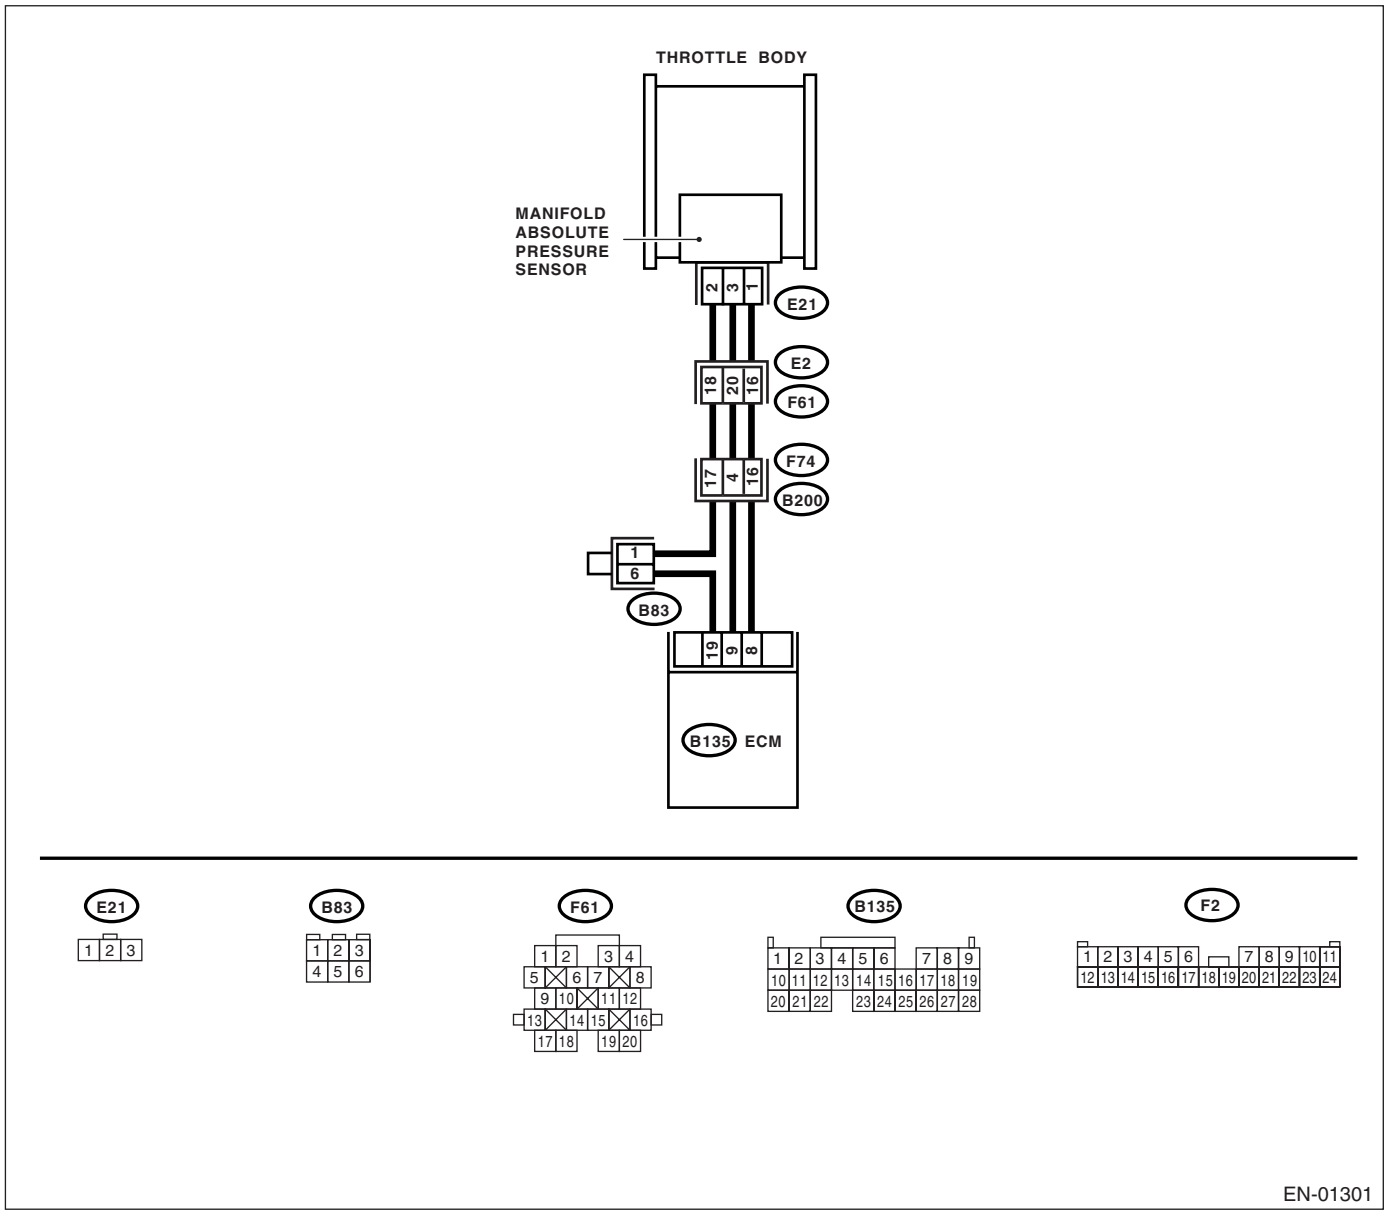

- **RHD model**

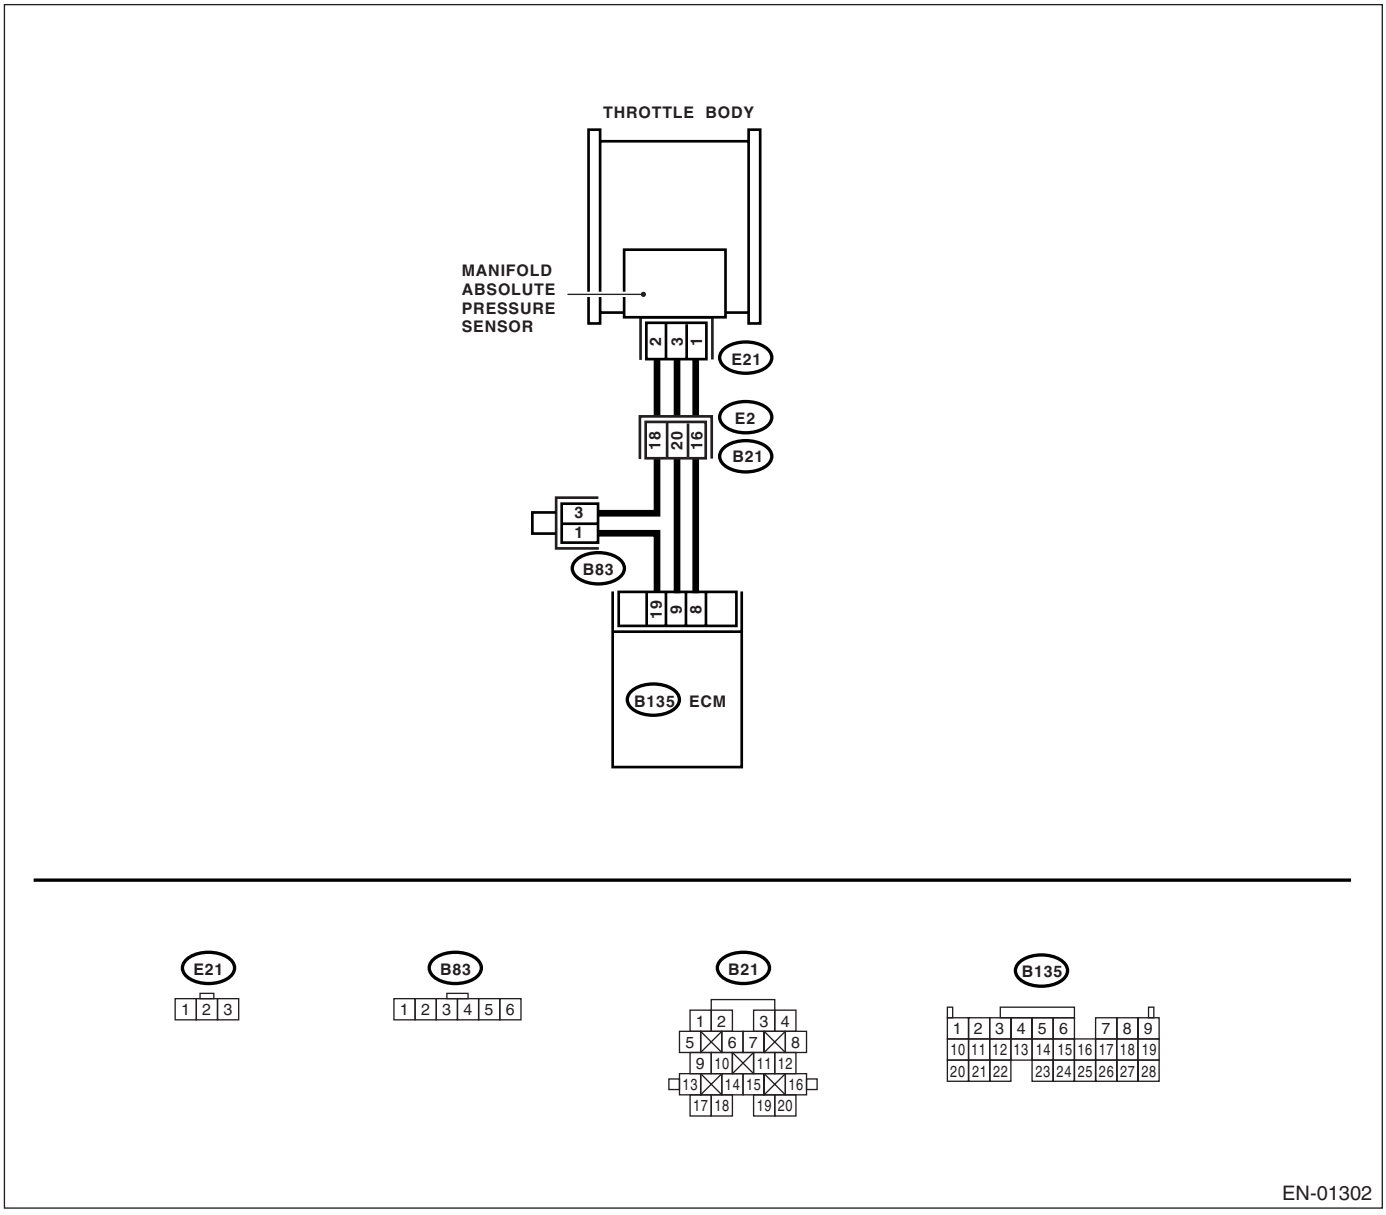

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **3.**	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

	Step	Check	Yes	No
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from manifold absolute pressure sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(E21) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **5.**	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
5	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B135) No. 8 — (E21) No. 1:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
6	**CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.** Measure the resistance of harness between ECM and manifold absolute pressure sensor connector. ***Connector & terminal*** ***(B135) No. 19 — (E21) No. 2:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
7	**CHECK POOR CONTACT.** Check poor contact in manifold absolute pressure sensor connector.	Is there poor contact in manifold absolute pressure sensor connector?	Repair the poor contact in manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <Ref. to FU(H4DOTC)-35, Manifold Absolute Pressure Sensor.>

N: DTC P0111 — INTAKE AIR TEMPERATURE CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

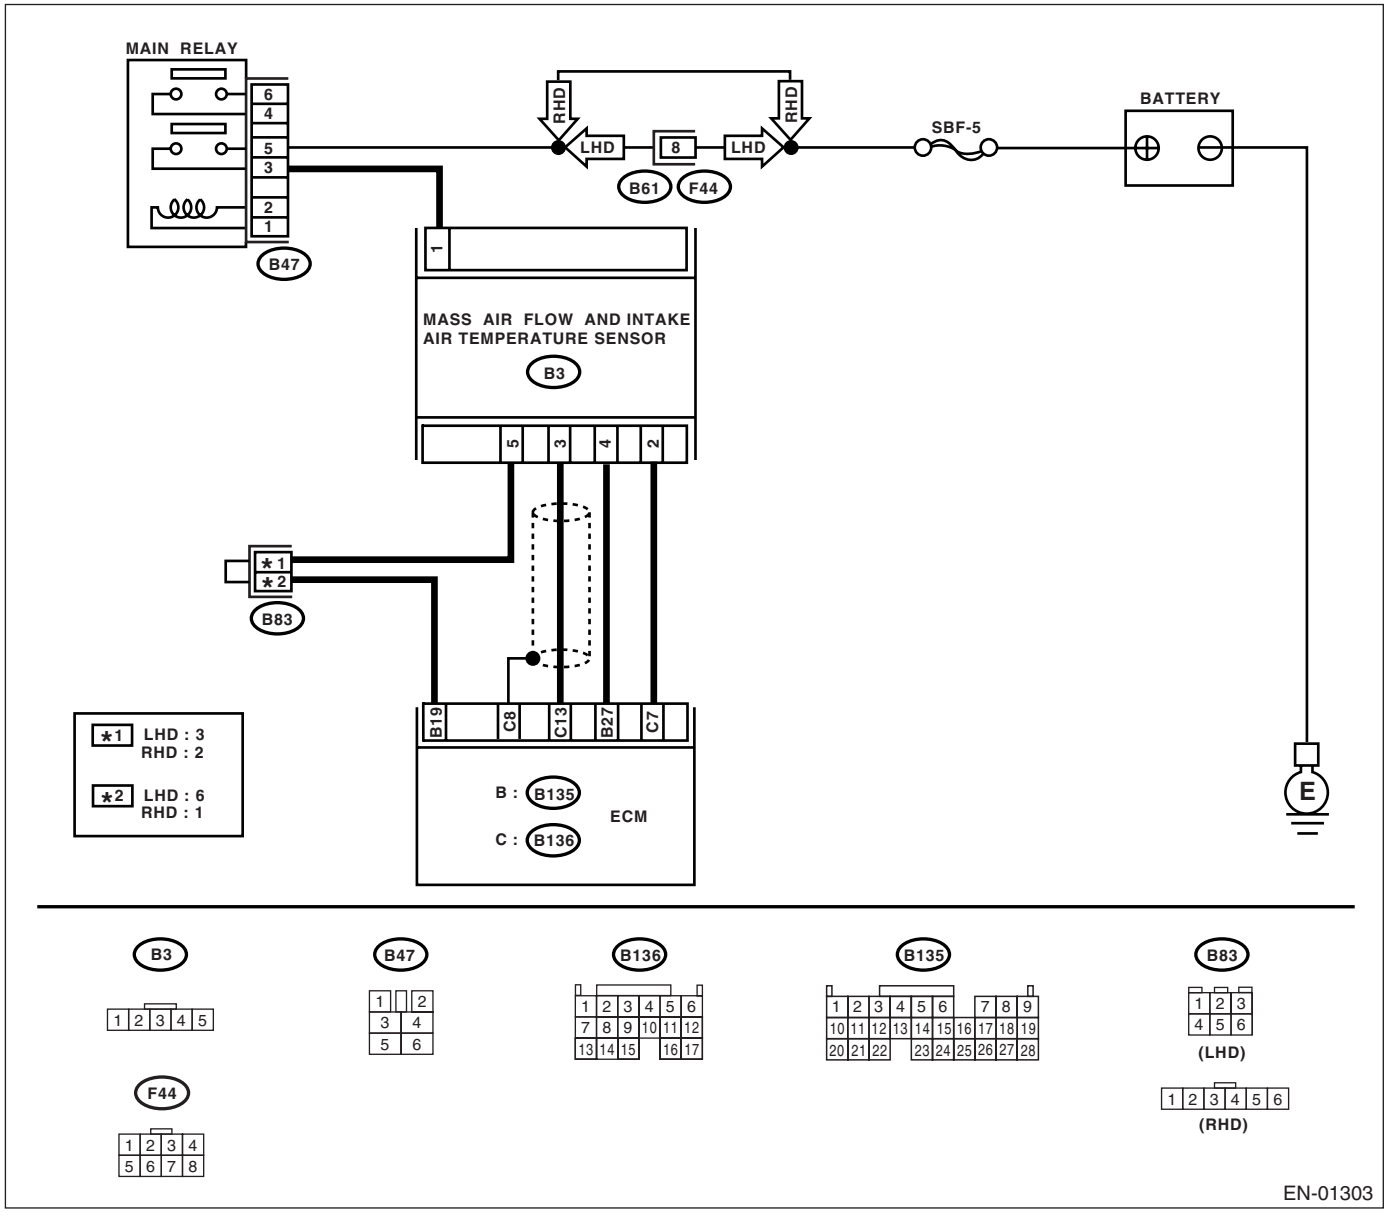

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0111.	Go to step **2.**
2	**CHECK ENGINE COOLANT TEMPERATURE.** 1)Start the engine and warm it up completely. 2)Measure the engine coolant temperature using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the engine coolant temperature 75°C (167°F) — 95°C (203°F)?	Replace the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>	Inspect the DTC P0125 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

O: DTC P0112 — INTAKE AIR TEMPERATURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

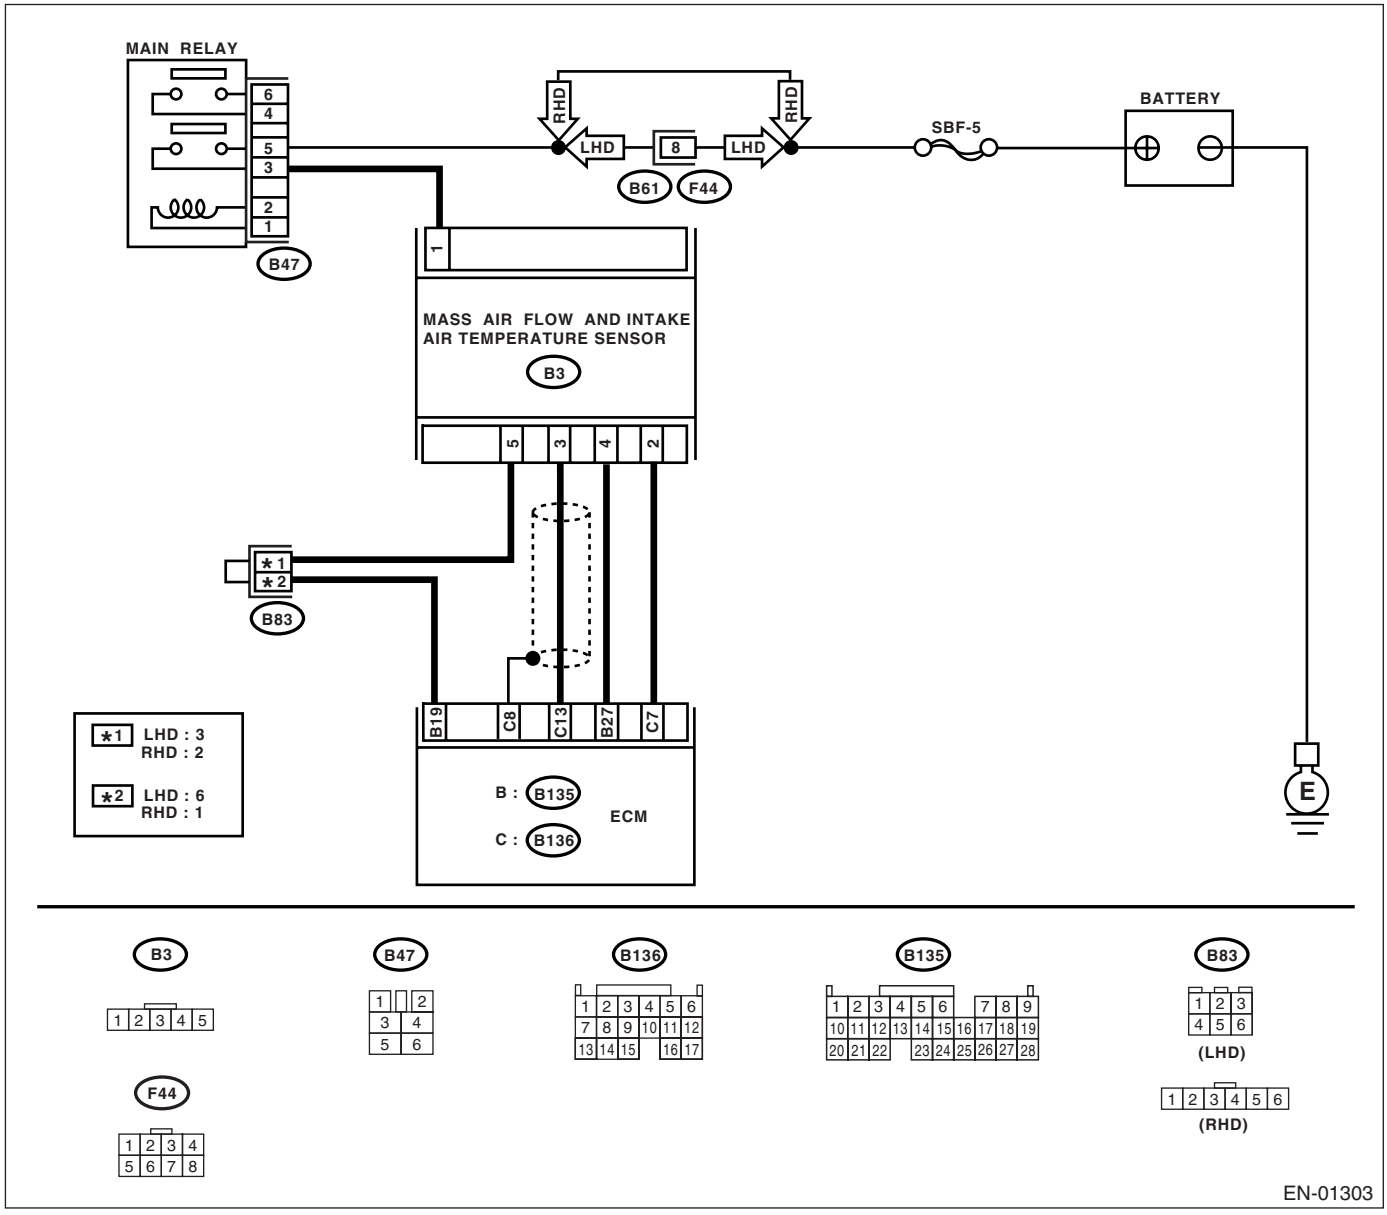

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature more than 55°C (131°F)?	Go to step **2.**	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact mass air flow and intake air temperature sensor • Poor contact in ECM • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from mass air flow and intake air temperature sensor. 3)Turn the ignition switch to ON. 4)Read the data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature less than −36°C (−33°F)?	Replace the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>	Repair the ground short circuit in harness between mass air flow and intake air temperature sensor and ECM connector.

P: DTC P0113 — INTAKE AIR TEMPERATURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

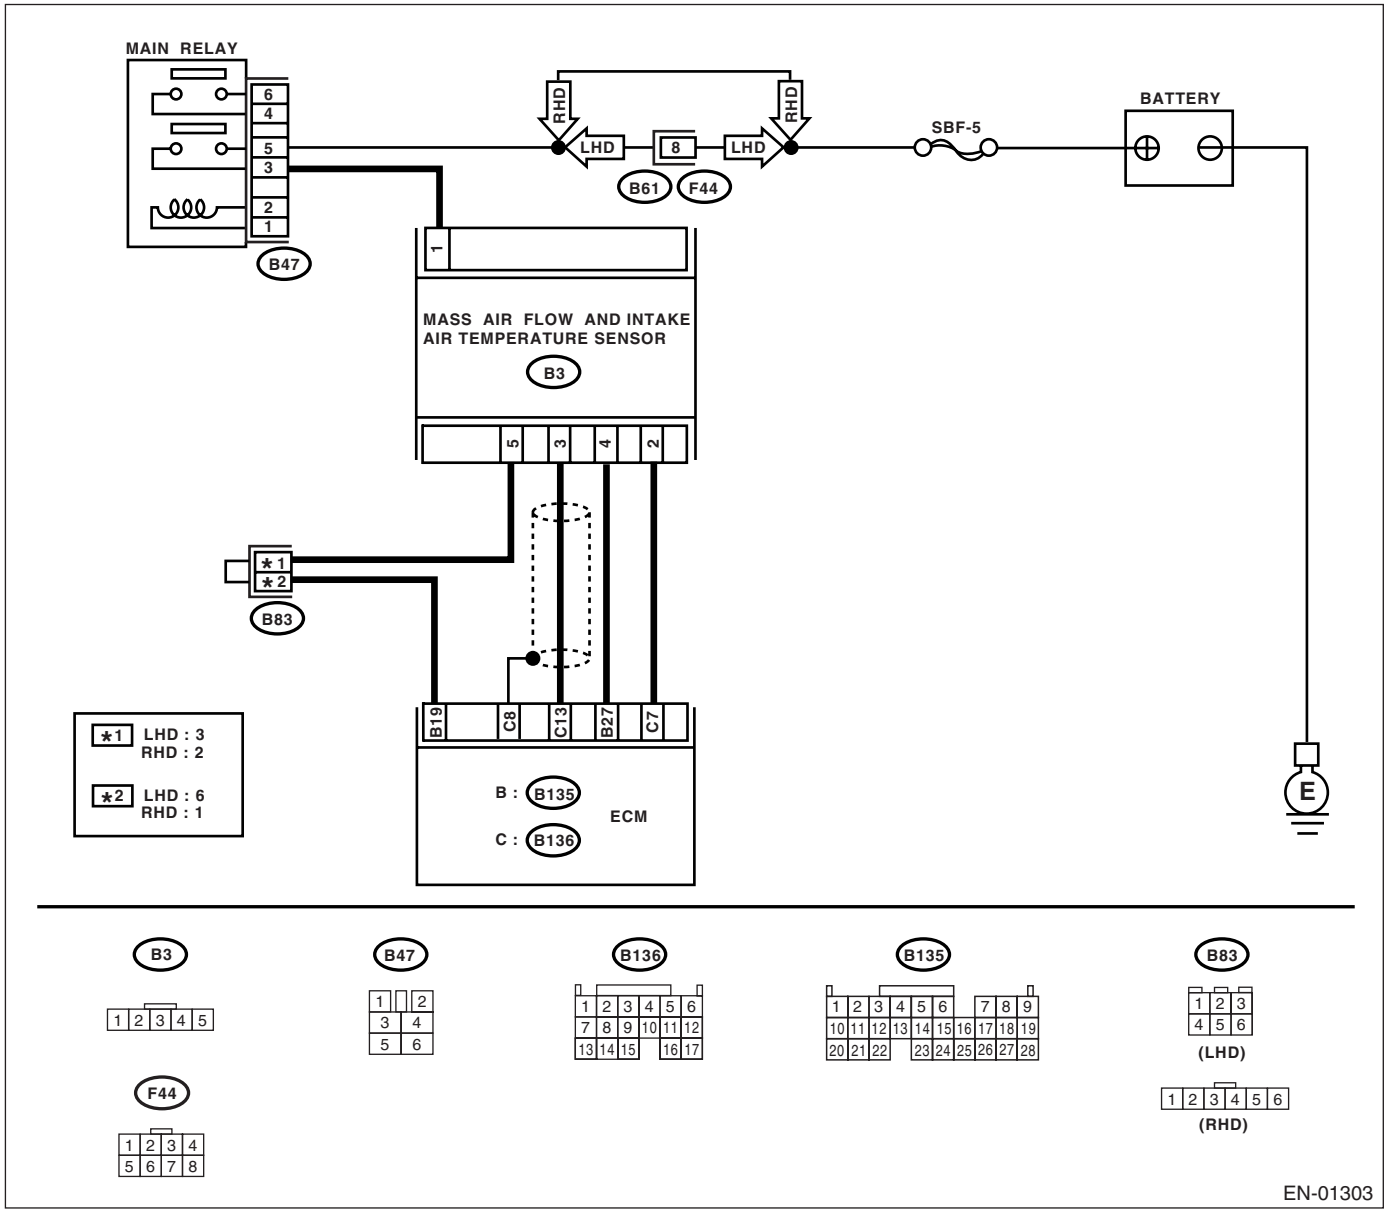

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature less than −36°C (−33°F)?	Go to step **2.**	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact in mass air flow and intake air temperature sensor • Poor contact in ECM • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from mass air flow and intake air temperature sensor. 3)Measure the voltage between mass air flow and intake air temperature sensor connector and engine ground. ***Connector & terminal*** ***(B3) No. 4 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between mass air flow and intake air temperature sensor and ECM connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between mass air flow and intake air temperature sensor connector and engine ground. ***Connector & terminal*** ***(B3) No. 4 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between mass air flow and intake air temperature sensor and ECM connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** Measure the voltage between mass air flow and intake air temperature sensor and manifold absolute pressure sensor connector and engine ground. ***Connector & terminal*** ***(B3) No. 4 (+) — Engine ground (−):***	Is the voltage more than 4 V?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between mass air flow and intake air temperature sensor and ECM connector • Poor contact in mass air flow and intake air temperature sensor • Poor contact in ECM • Poor contact in joint connector

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between mass air flow and intake air temperature sensor and engine ground. ***Connector & terminal*** ***(B3) No. 5 — Engine ground:***	Is the resistance less than 5 Ω?	Replace the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between mass air flow and intake air temperature sensor and ECM connector • Poor contact in mass air flow and intake air temperature sensor • Poor contact in ECM • Poor contact in joint connector

Q: DTC P0117 — ENGINE COOLANT TEMPERATURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

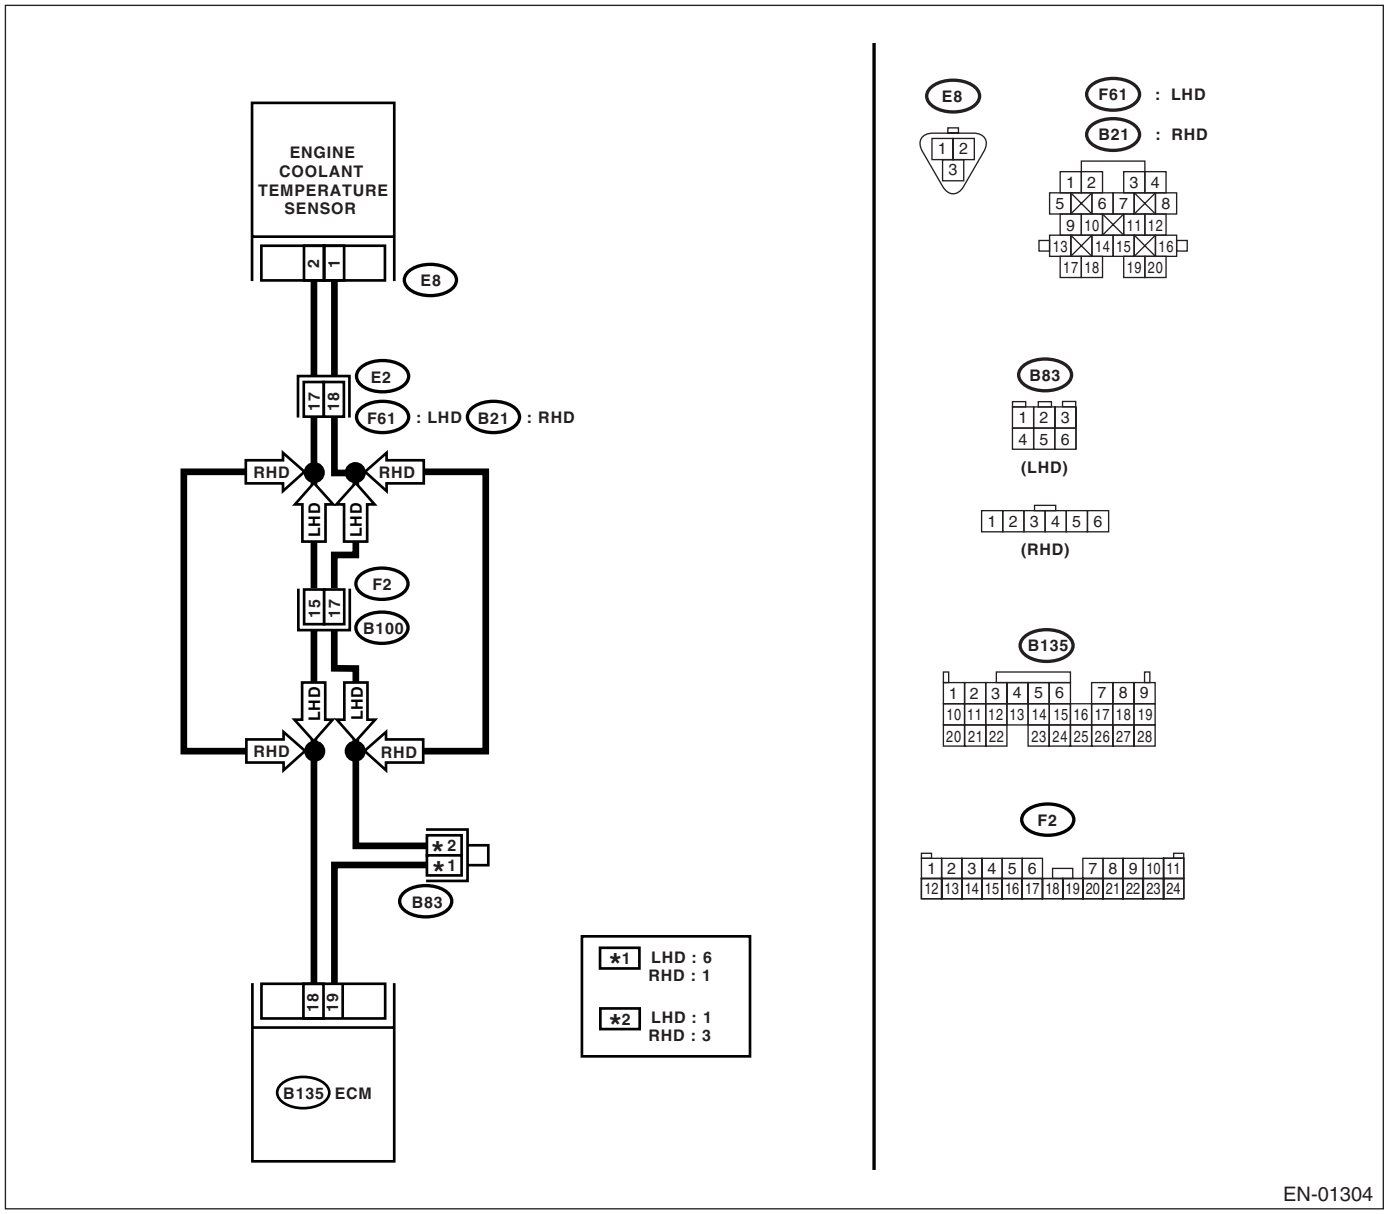

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature more than 120°C (248°F)?	Go to step **2.**	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact in engine coolant temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from engine coolant temperature sensor. 3)Turn the ignition switch to ON. 4)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature less than −40°C (−40°F)?	Replace the engine coolant temperature sensor. <Ref. to FU(H4DOTC)-28, Engine Coolant Temperature Sensor.>	Repair the ground short circuit in harness between engine coolant temperature sensor and ECM connector.

R: DTC P0118 — ENGINE COOLANT TEMPERATURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

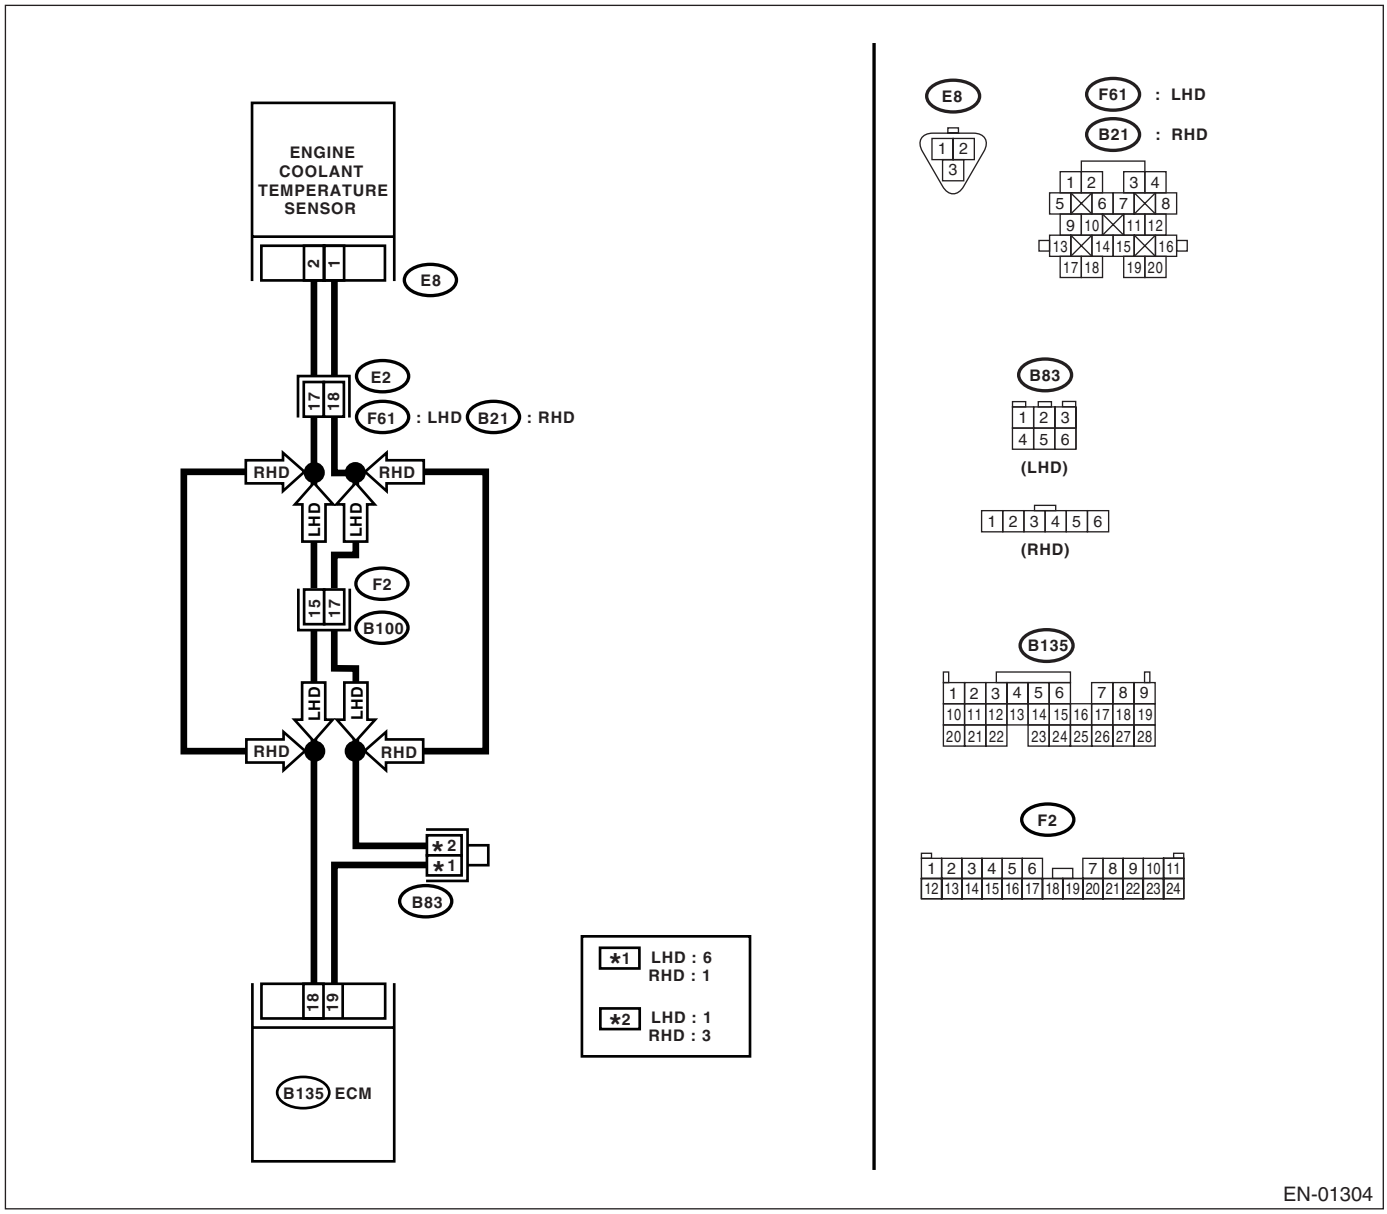

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature less than −40°C (−40°F)?	Go to step **2.**	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact in engine coolant temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from engine coolant temperature sensor. 3)Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** Measure the voltage between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 2 (+) — Engine ground (−):***	Is the voltage more than 4 V?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between engine coolant temperature sensor connector and engine ground. ***Connector & terminal*** ***(E8) No. 1 — Engine ground:***	Is the resistance less than 5 Ω?	Replace the engine coolant temperature sensor. <Ref. to FU(H4DOTC)-28, Engine Coolant Temperature Sensor.>	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector

S: DTC P0121 — THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance
  - Fuel is cut.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

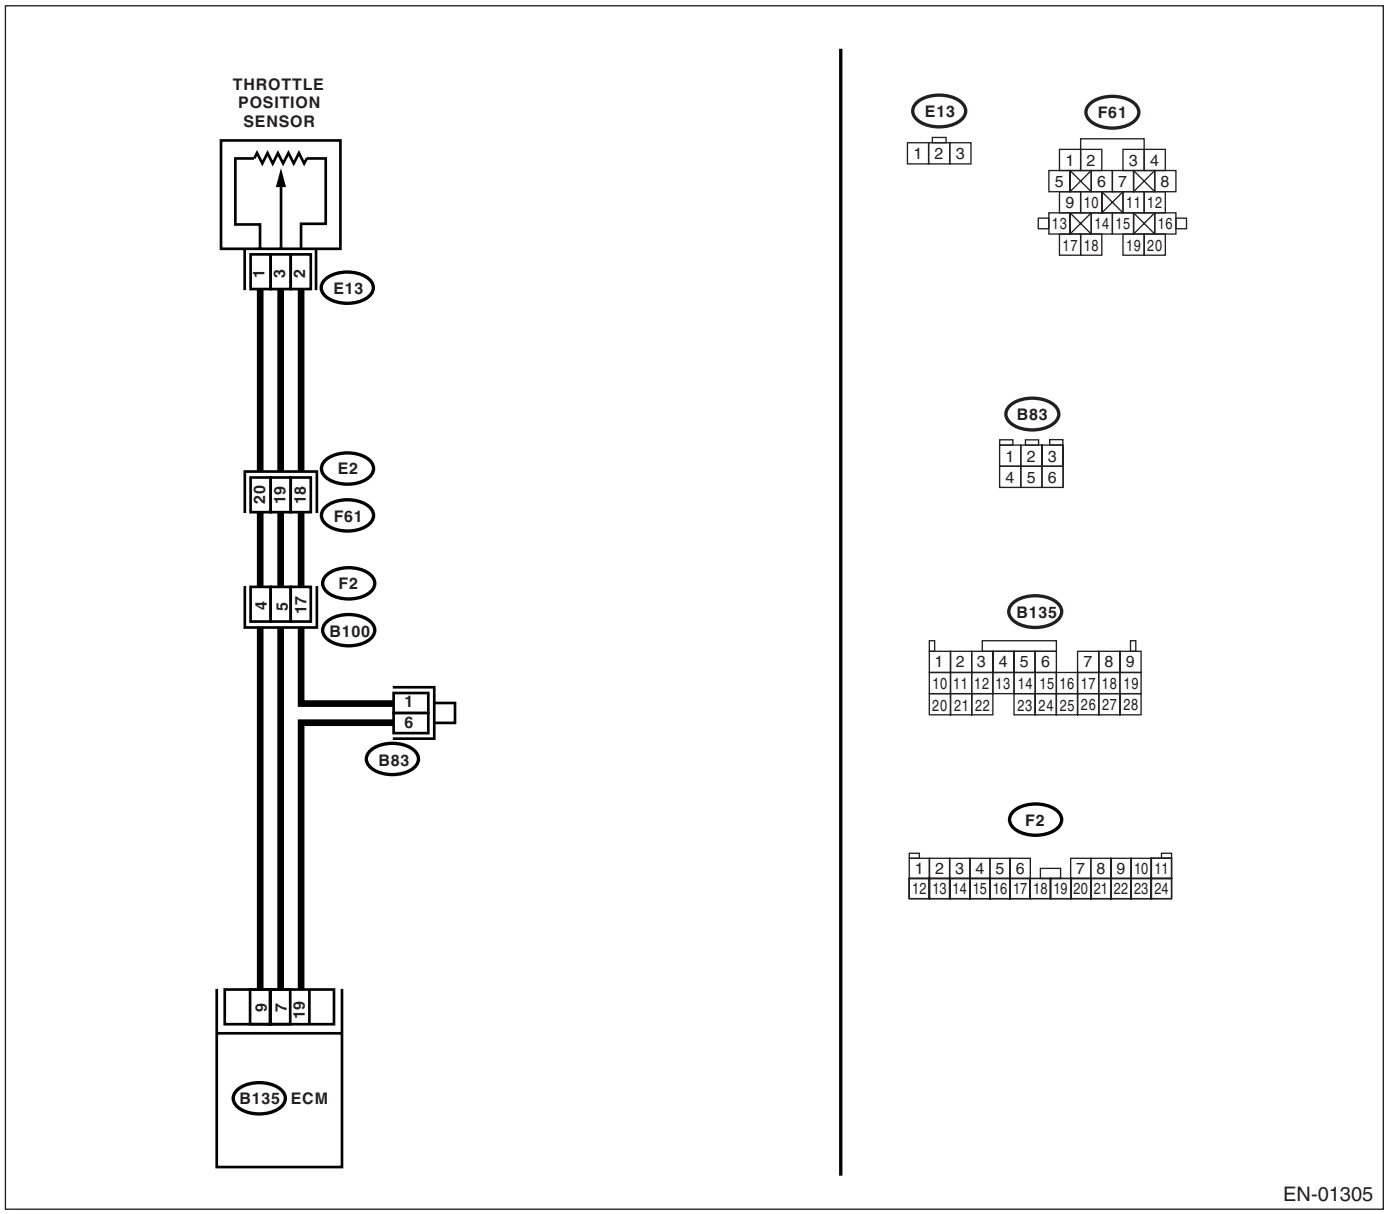

- **RHD model**

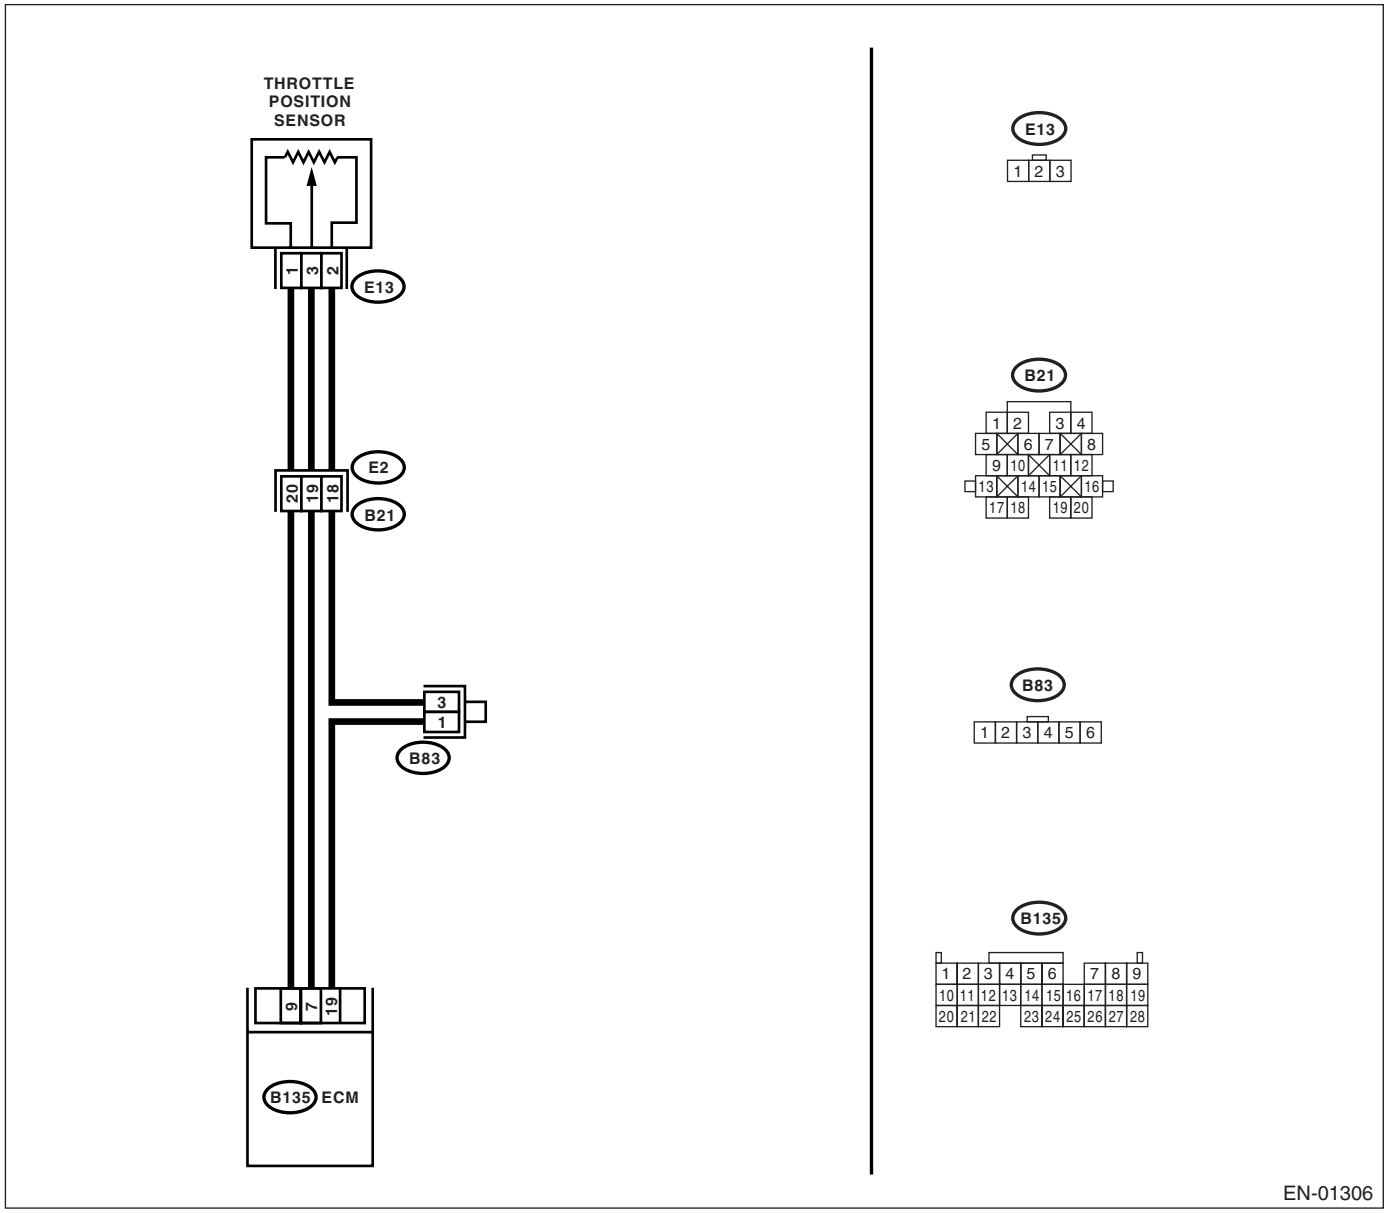

Step	Check	Yes	No
1 **CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0121.	Replace the throttle position sensor. <Ref. to FU(H4DOTC)-33, Throttle Position Sensor.>

T: DTC P0122 — THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

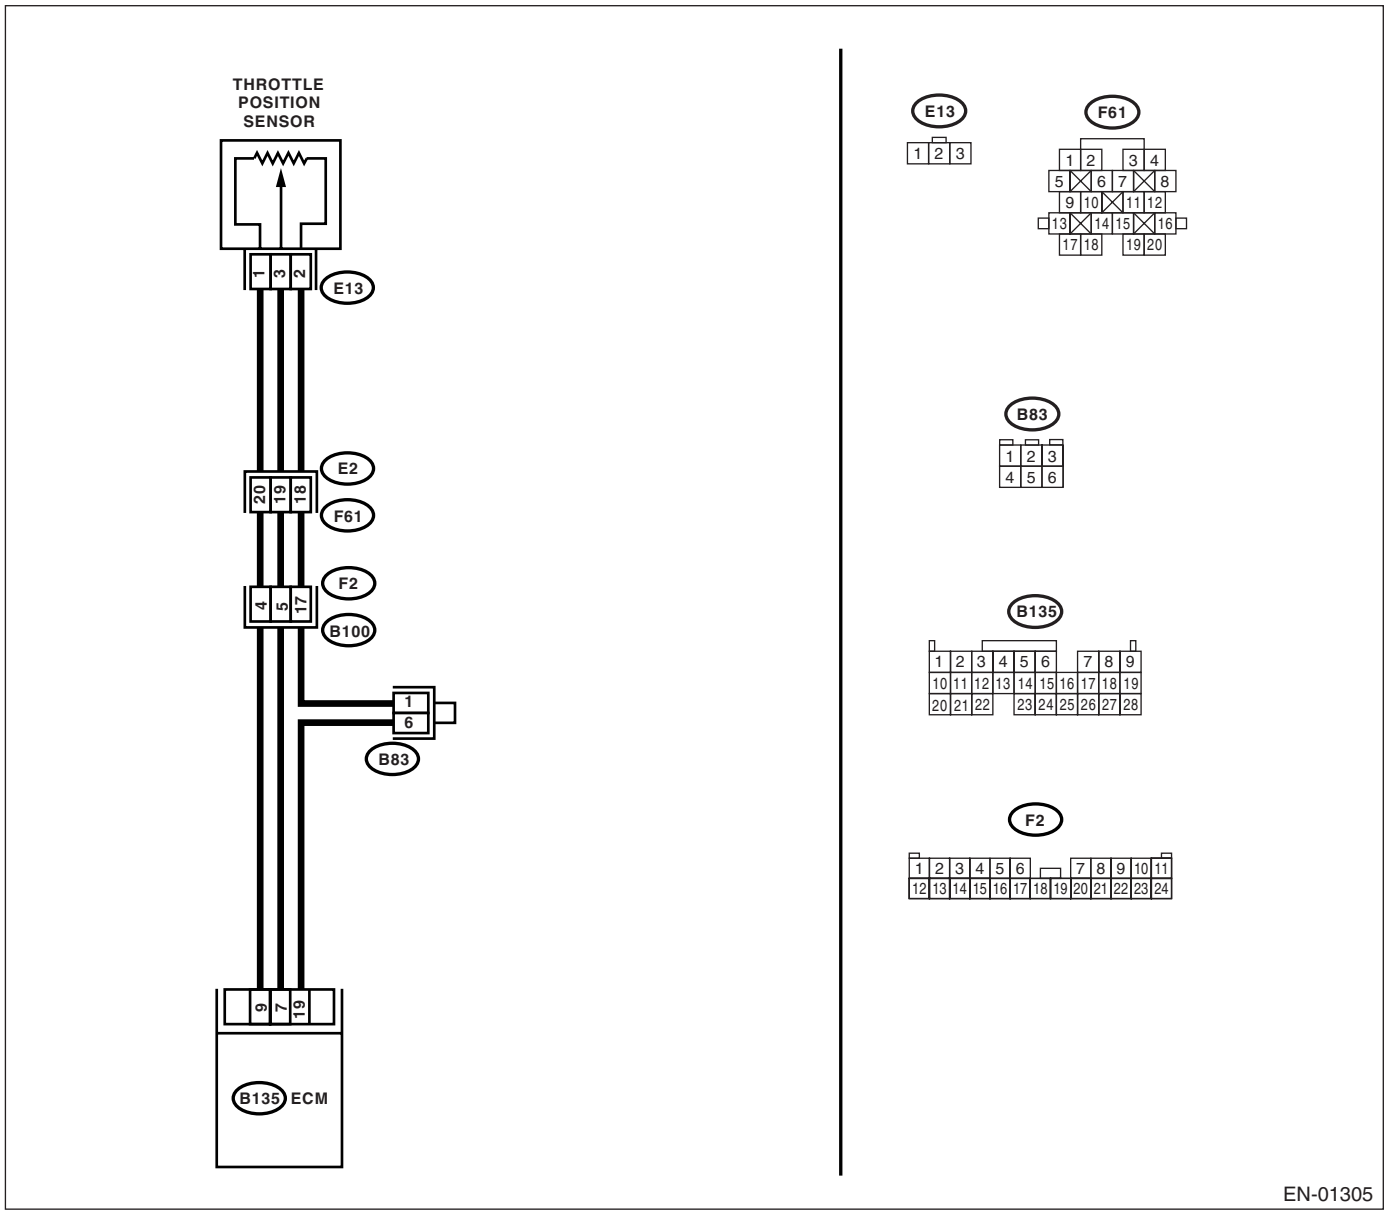

- **RHD model**

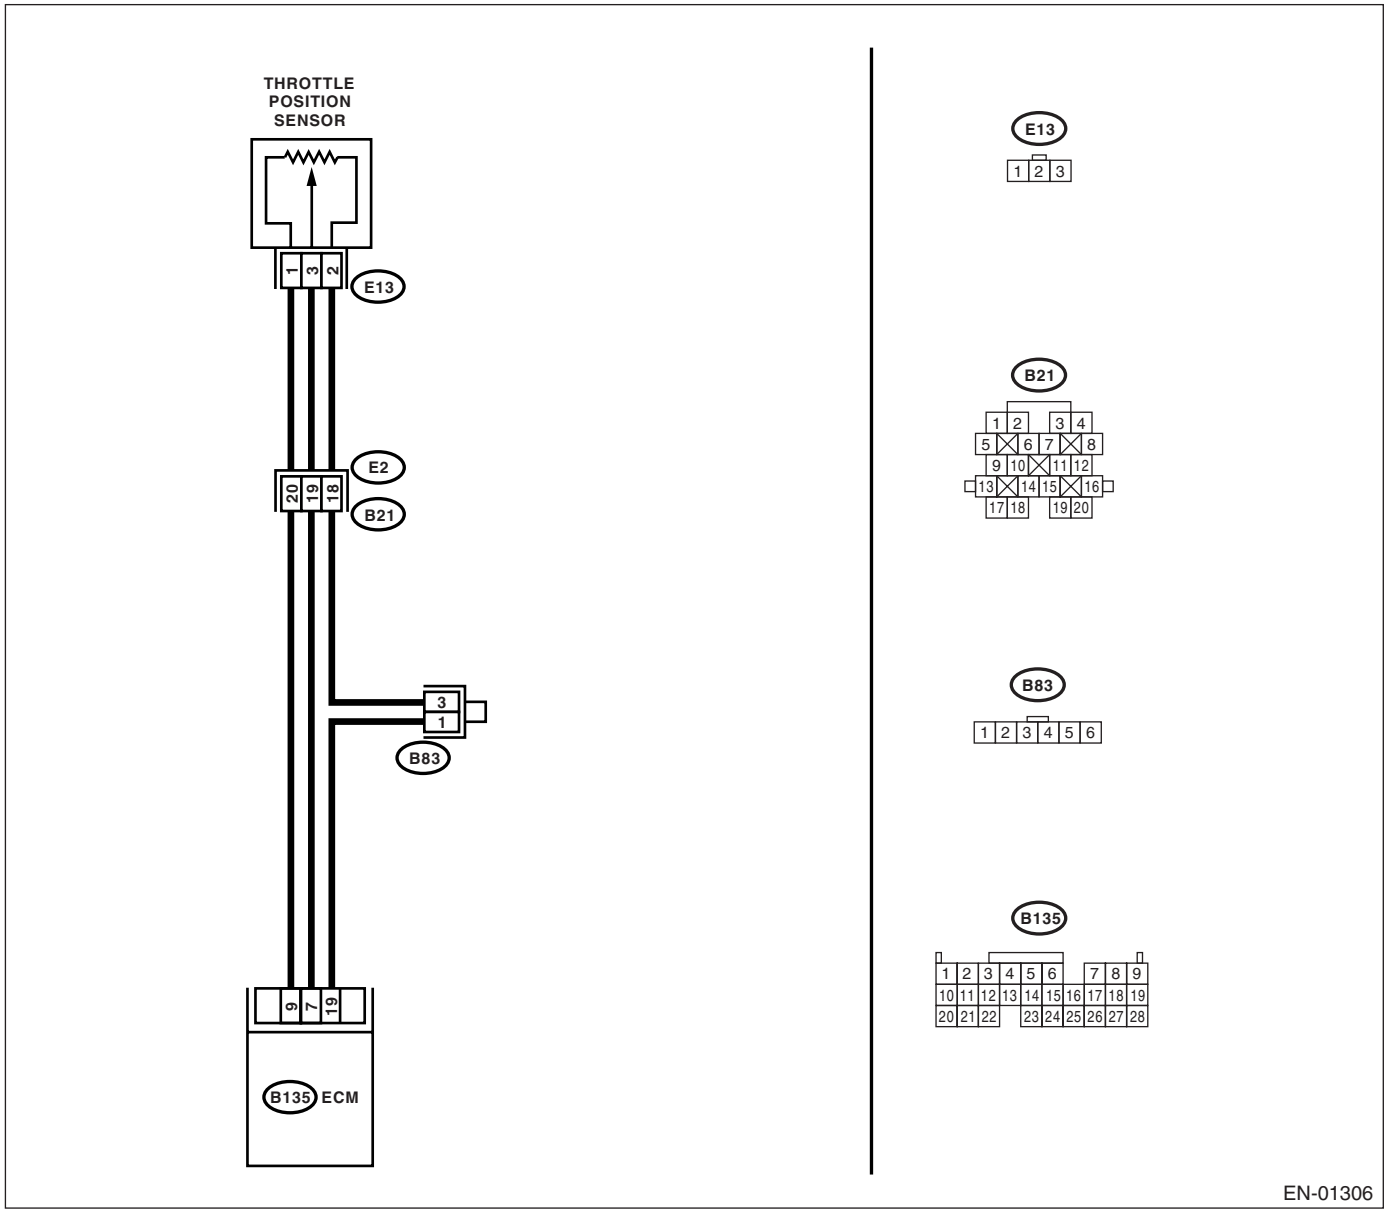
THROTTLE POSITION SENSOR
1 3 2
E13
E2
20 19 18
B21
3
1
B83
9 7 19
B135 ECM
E13
1 2 3
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B83
1 2 3 4 5 6
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01306

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage less than 0.15 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground while throttle valve is fully closed. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Go to step **3.**
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 7 (+) — Chassis ground (−):***	Is the voltage less than 0.15 V?	Go to step **6.**	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR)** Measure the voltage between ECM connector and chassis ground.	Shake the ECM harness and connector, while monitoring value of Subaru Select Monitor. Does the voltage change?	Repair the poor contact in ECM connector.	Go to step **6.**

	Step	Check	Yes	No
6	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from throttle position sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 1 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **7.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector
7	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between ECM connector and throttle position sensor connector. ***Connector & terminal*** ***(B135) No. 7 — (E13) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in ECM connector • Poor contact in throttle position sensor connector • Poor contact in coupling connector
8	**CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.** Measure the resistance of harness between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 3 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the ground short circuit in harness between throttle position sensor and ECM connector.
9	**CHECK POOR CONTACT.** Check poor contact in throttle position sensor connector.	Is there poor contact in throttle position sensor connector?	Repair the poor contact in throttle position sensor connector.	Replace the throttle position sensor. <Ref. to FU(H4DOTC)-33, Throttle Position Sensor.>

U: DTC P0123 — THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

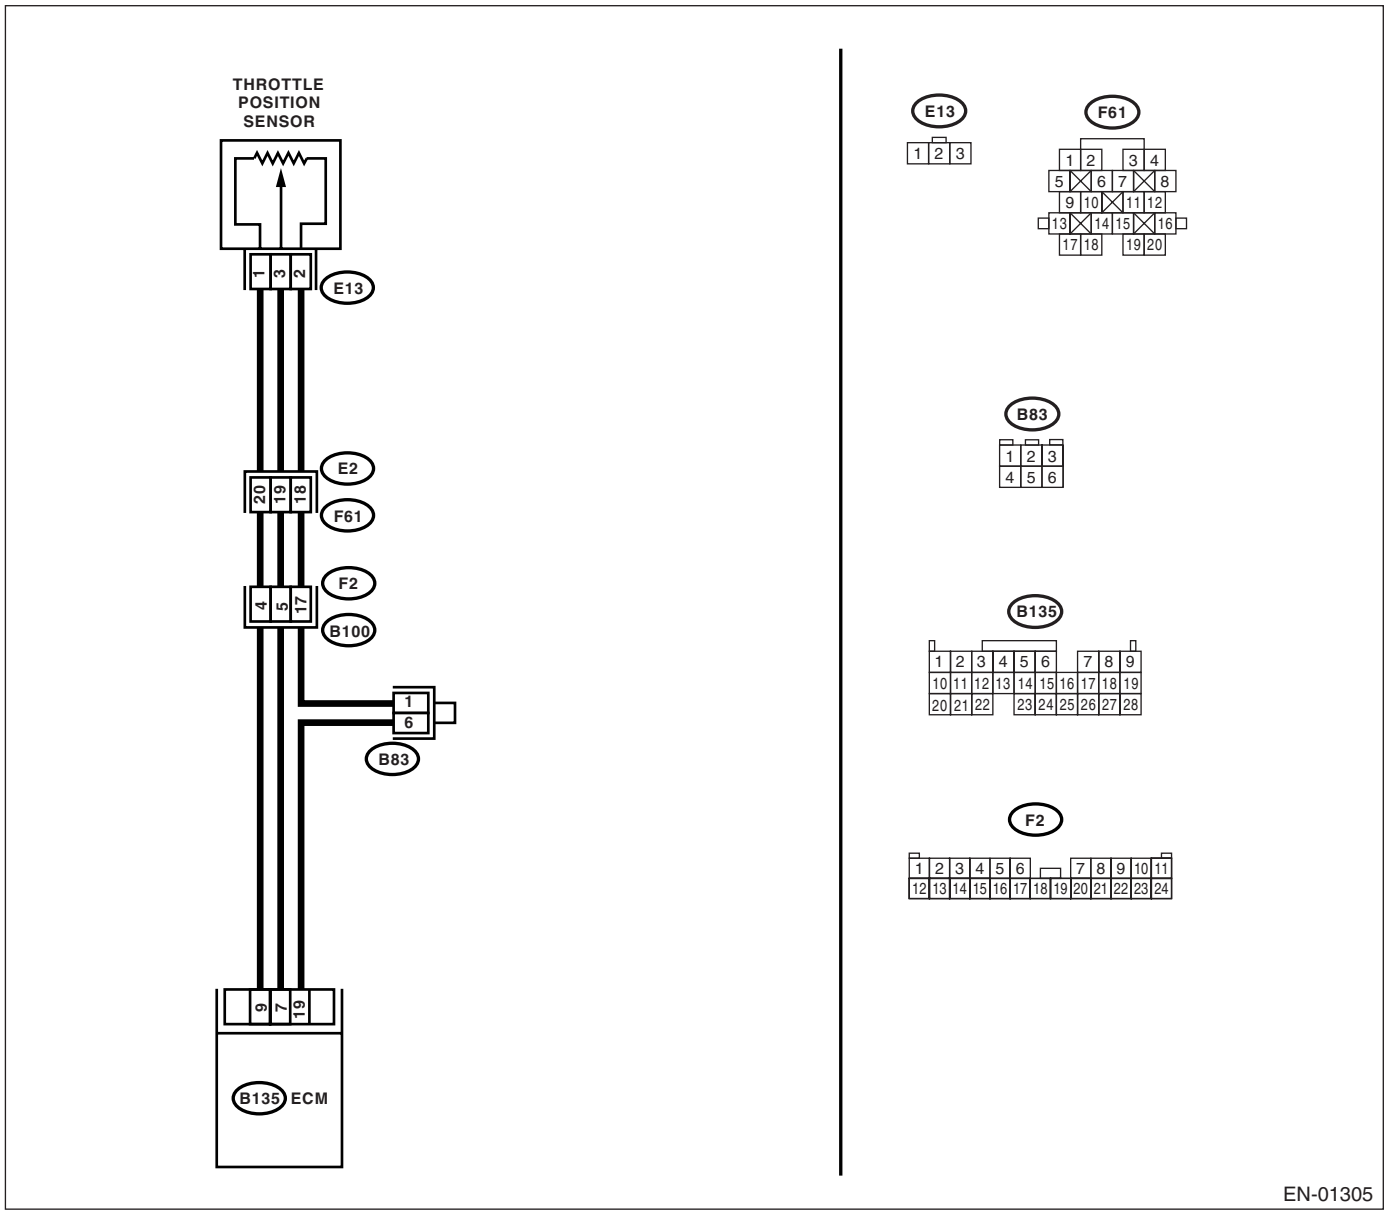

- **RHD model**

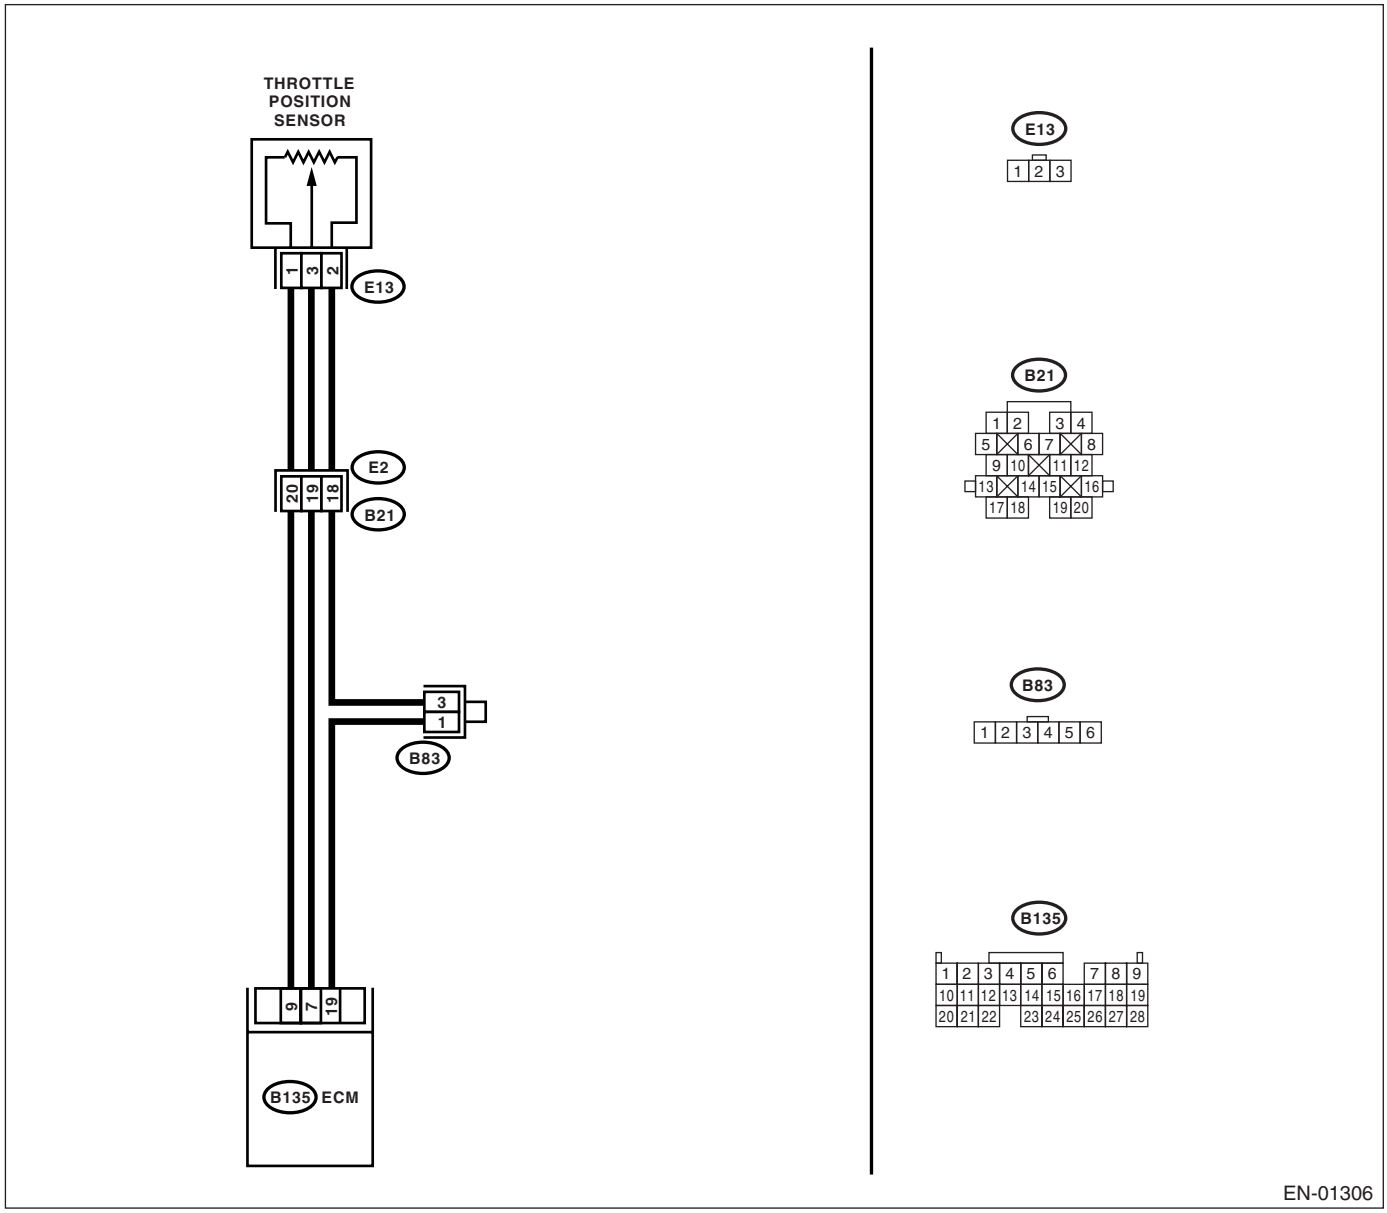
THROTTLE POSITION SENSOR
1 3 2
E13
E2
20 19 18
B21
3
1
B83
9 7 19
B135 ECM
E13
1 2 3
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B83
1 2 3 4 5 6
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01306

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage more than 4.7 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from throttle position sensor. 3)Measure the resistance of harness between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in coupling connector • Poor contact in joint connector
3	**CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between throttle position sensor connector and engine ground. ***Connector & terminal*** ***(E13) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.7 V?	Repair the battery short circuit in harness between throttle position sensor and ECM connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Replace the throttle position sensor. <Ref. to FU(H4DOTC)-33, Throttle Position Sensor.>

V: DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine will not return to idling.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

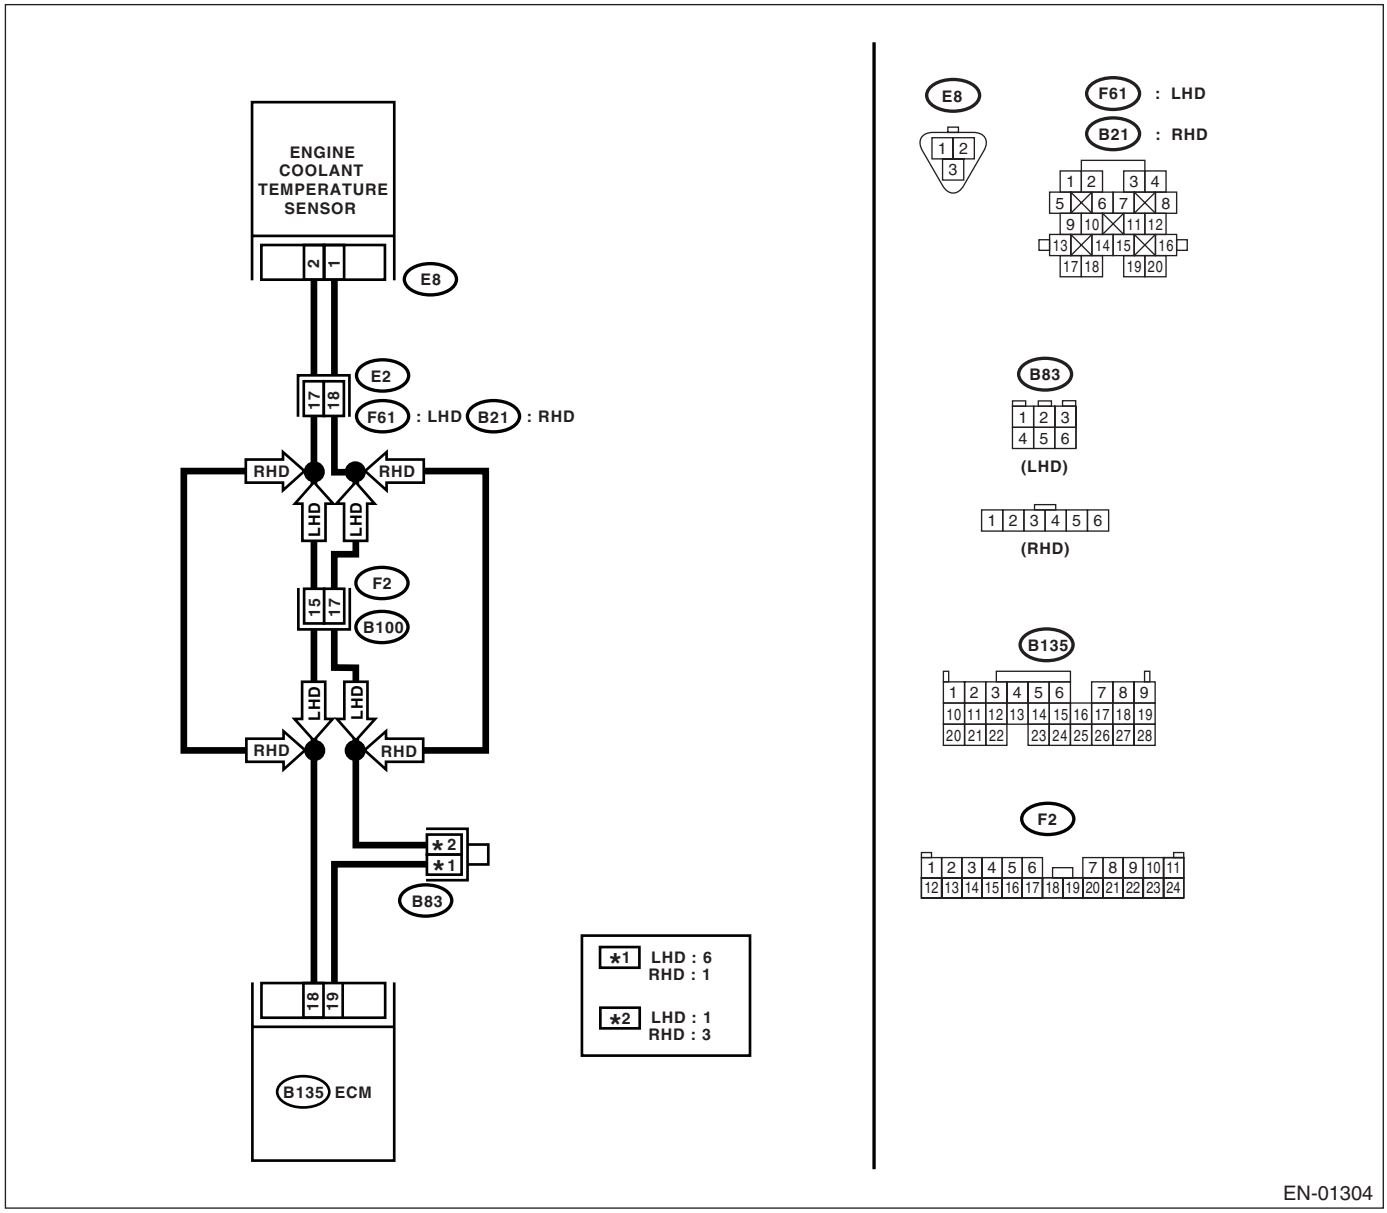

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0125.	Go to step **2.**
2	**CHECK ENGINE COOLING SYSTEM.** NOTE: Check the following items. •Thermostat open stuck •Coolant level •Coolant freeze •Tire diameter	Is there a fault in engine cooling system?	Replace the thermostat. <Ref. to CO(H4SO)-19, Thermostat.>	Replace the engine coolant temperature sensor. <Ref. to FU(H4DOTC)-28, Engine Coolant Temperature Sensor.>

W: DTC P0129 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: It is not necessary to inspect DTC P0129.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).> NOTE: Atmospheric pressure sensor is built into ECM.

X: DTC P0130 — O_2 SENSOR CIRCUIT (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

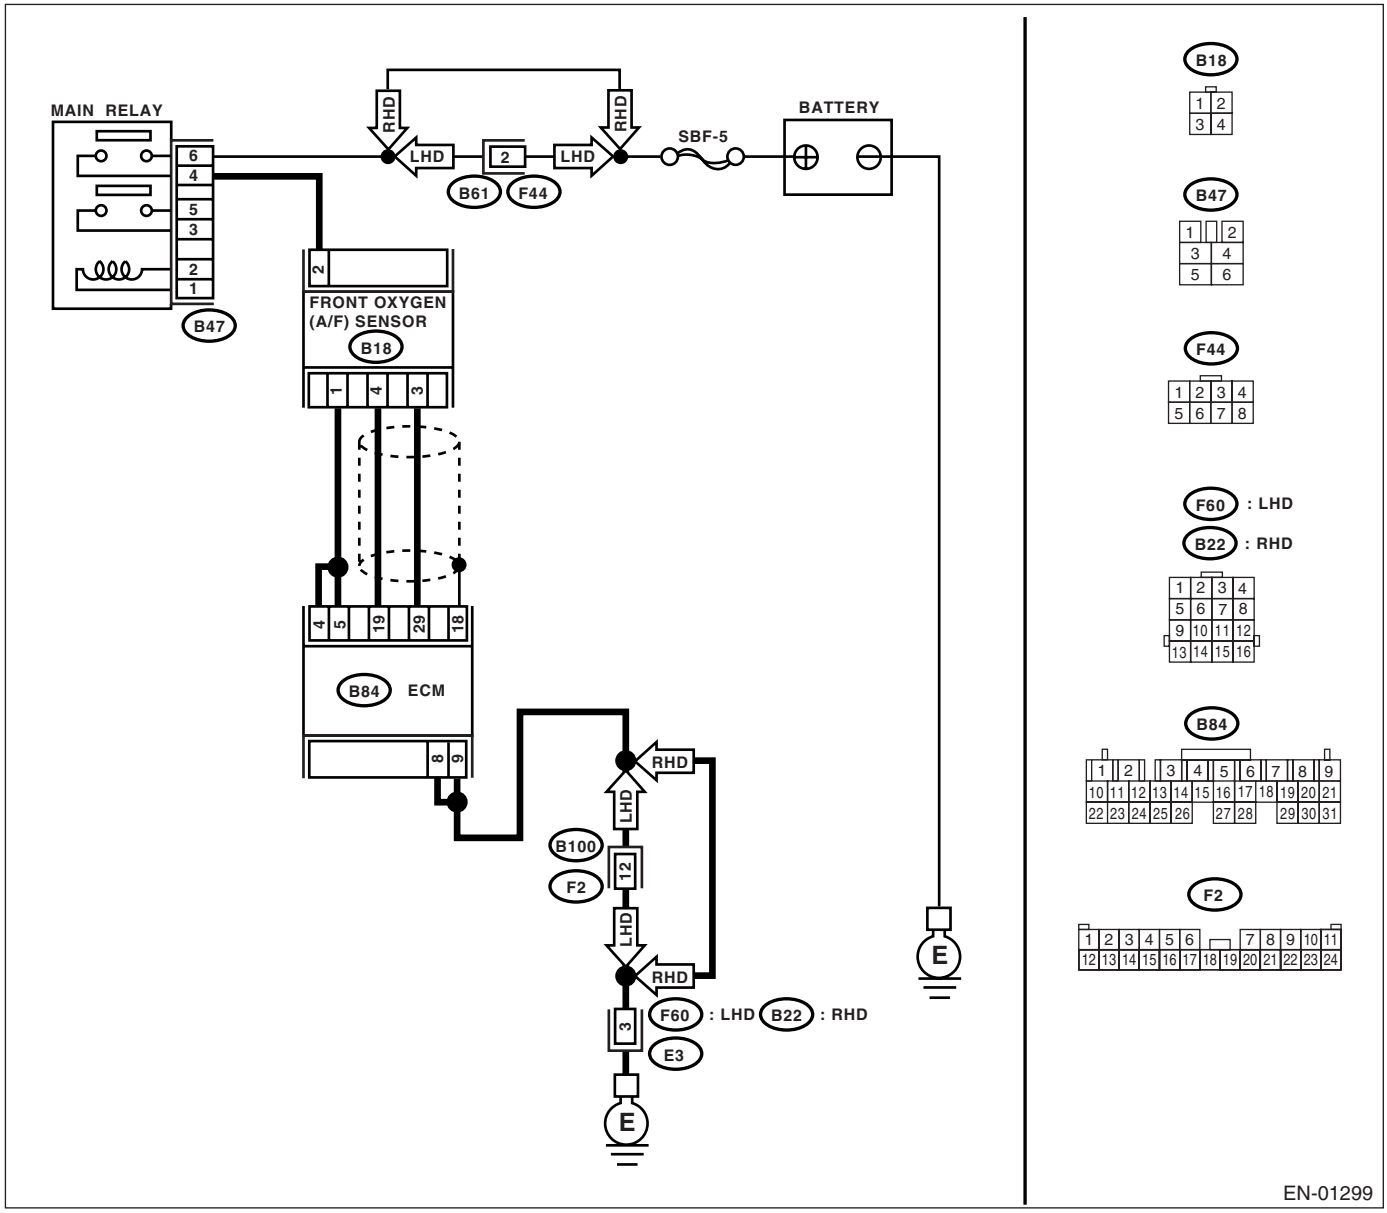

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK FRONT (A/F) OXYGEN SENSOR DATA.** 1)Start the engine. 2)While observing the Subaru Select Monitor or OBD-II general scan tool screen, warm-up the engine until coolant temperature is above 70°C (158°F). If the engine is already warmed-up, operate at idle speed for at least 1 minute. 3)Read the data of front oxygen (A/F) sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the measured value 0.85 — 1.15 (in idling)?	Go to step **3.**	Go to step **4.**
3	**CHECK REAR OXYGEN SENSOR SIGNAL.** 1)Race the engine at speeds from idling to 5,000 rpm for a total of 5 cycles. NOTE: To increase the engine speed to 5,000 rpm, slowly depress accelerator pedal, taking approx. 5 seconds, and quickly release accelerator pedal to decrease engine speed. 2)Operate the LED operation mode for engine. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.>	Does the LED of {Rear O_2 Rich Signal} blink?	Repair the poor contact in front oxygen (A/F) sensor and rear oxygen sensor connector.	Check the rear oxygen sensor circuit. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>
4	**CHECK EXHAUST SYSTEM.** Check the exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness of front oxygen (A/F) sensor •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace the faulty parts.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>

Y: DTC P0133 — O_2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

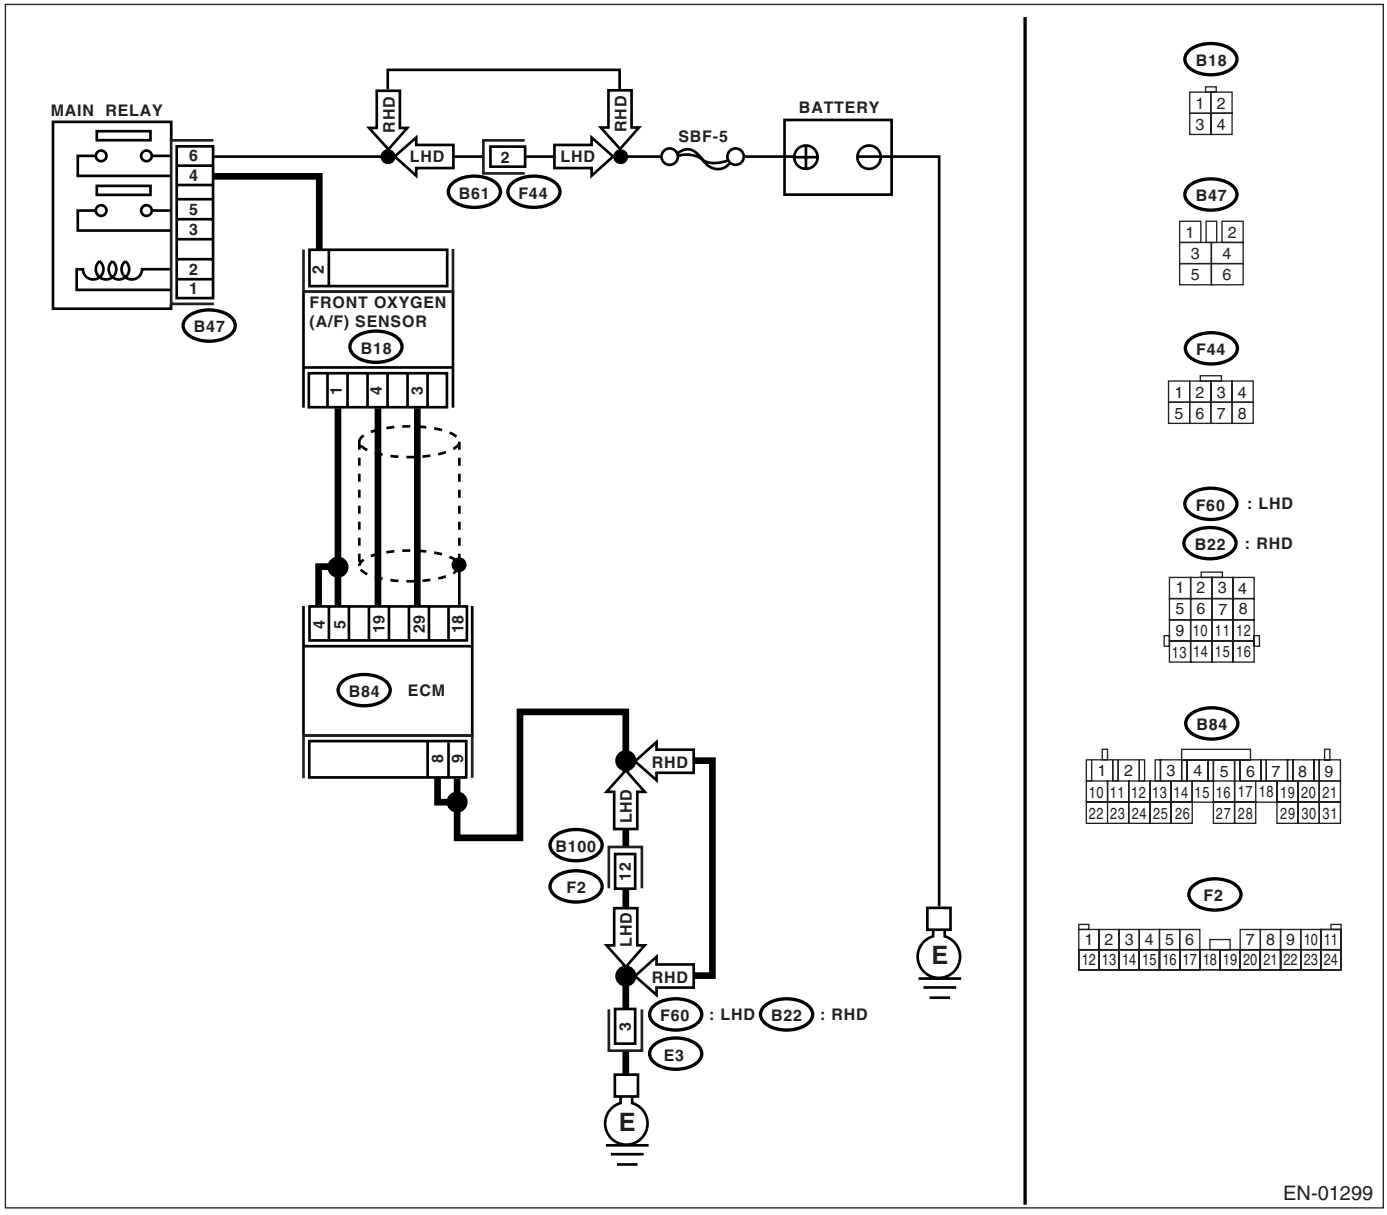

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0133.	Go to step **2.**
2	**CHECK EXHAUST SYSTEM.** NOTE: Check the following items. •Loose installation of front portion of exhaust pipe onto cylinder heads •Loose connection between front exhaust pipe and front catalytic converter •Damage of exhaust pipe resulting in a hole	Is there a fault in exhaust system?	Repair the exhaust system.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>

Z: DTC P0134 — O_2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 1 SENSOR 1) —

NOTE:
For the diagnostic procedure, refer to DTC P0130. <Ref. to EN(H4DOTC)-135, DTC P0130 — O2 SENSOR CIRCUIT (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AA:DTC P0137 — O_2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

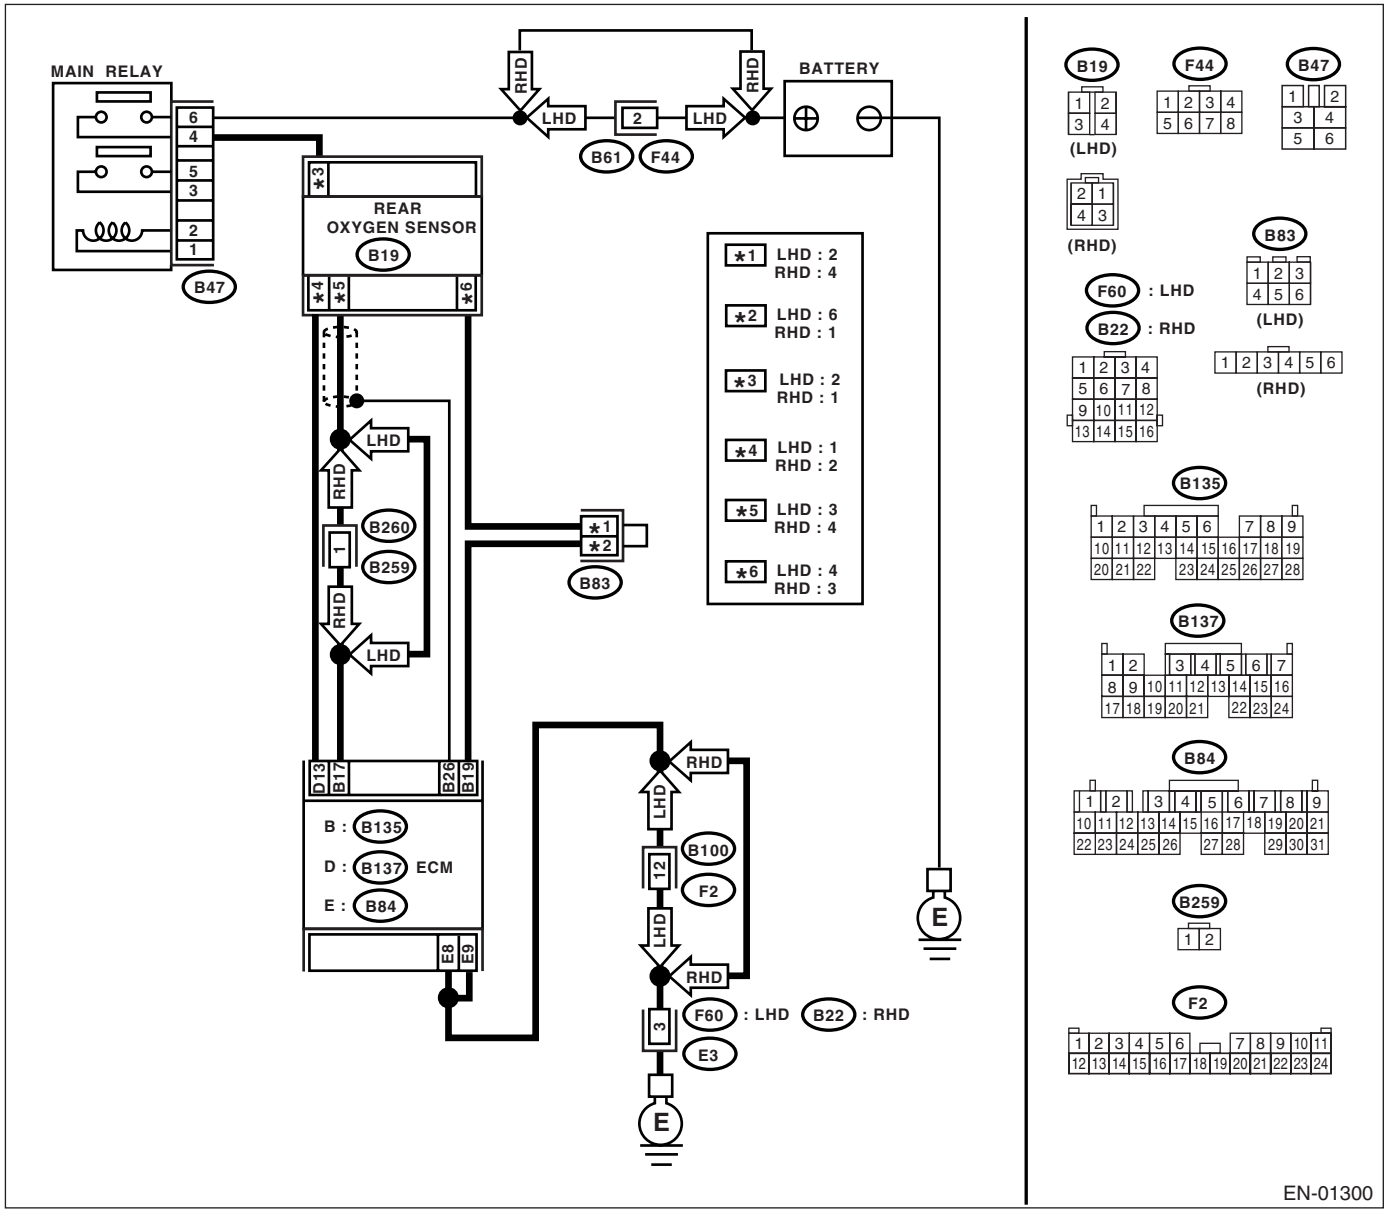

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Using the List of Diagnostic Trouble Code (DTC), check the appropriate DTC. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK REAR OXYGEN SENSOR DATA.** 1)Warm-up the engine until engine coolant temperature is above 70°C (158°F), and keep the engine speed at 2,000 rpm to 3,000 rpm for 2 minutes. 2)Read the data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Does the value fluctuate?	Go to step **6.**	Go to step **3.**
3	**CHECK REAR OXYGEN SENSOR DATA.** Read the data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool.	Is the voltage 0.2 — 0.4 V?	Go to step **4.**	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>
4	**CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and rear oxygen sensor. 3)Measure the resistance of harness between ECM and rear oxygen sensor connector. ***Connector & terminal*** ***LHD model*** ***(B135) No. 17 — (B19) No. 3:*** ***RHD model*** ***(B135) No. 17 — (B19) No. 4:***	Is the resistance more than 3 Ω?	Repair the open circuit in harness between ECM and rear oxygen sensor connector.	Go to step **5.**
5	**CHECK HARNESS BETWEEN REAR OXYGEN SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between rear oxygen sensor harness connector and engine ground or chassis ground. ***Connector & terminal*** ***LHD model*** ***(B19) No. 3 (+) — Engine ground (−):*** ***RHD model*** ***(B19) No. 4 (+) — Engine ground (−):***	Is the voltage more than 0.2 V?	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector

Step		Check	Yes	No
6	**CHECK EXHAUST SYSTEM.** Check the exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace the faulty parts.	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>

AB:DTC P0138 — O_2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

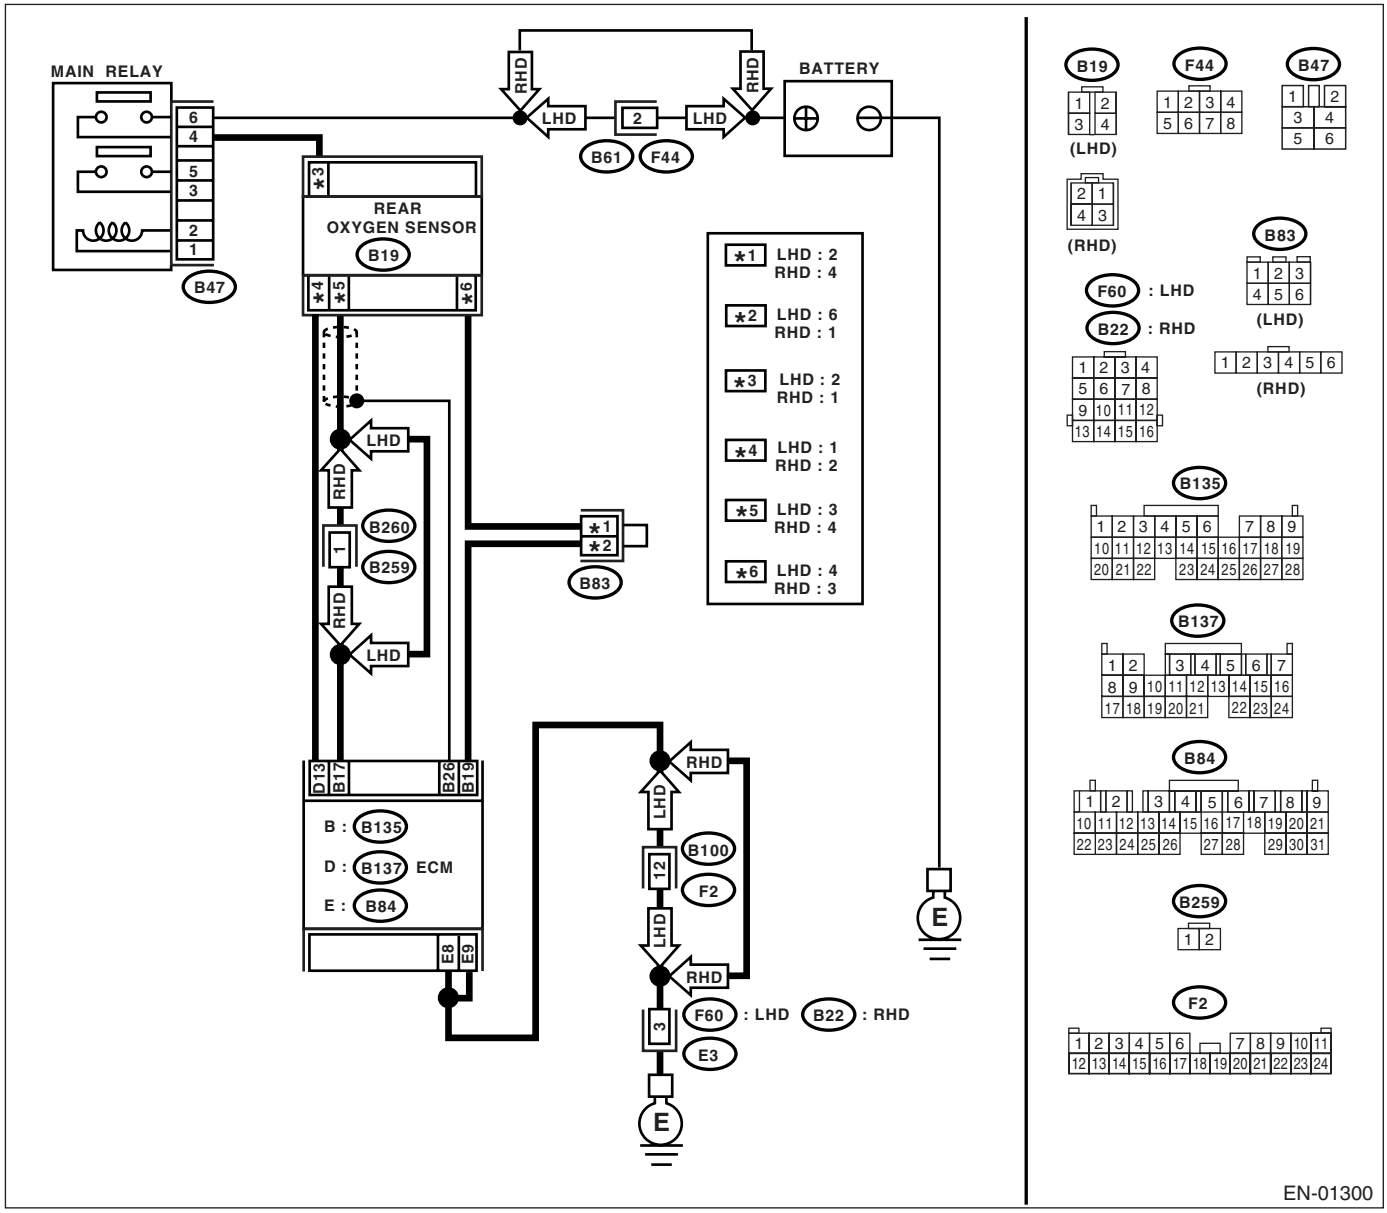

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Using the List of Diagnostic Trouble Code (DTC), check the appropriate DTC. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK REAR OXYGEN SENSOR DATA.** 1)Warm-up the engine until engine coolant temperature is above 70°C (158°F), and keep the engine speed at 2,000 rpm to 3,000 rpm for 2 minutes. 2)Read the data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Does the value fluctuate?	Go to step **6.**	Go to step **3.**
3	**CHECK REAR OXYGEN SENSOR DATA.** Read the data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool.	Is the voltage 0.2 — 0.4 V?	Go to step **4.**	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>
4	**CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and rear oxygen sensor. 3)Measure the resistance of harness between ECM and rear oxygen sensor connector. ***Connector & terminal*** ***LHD model*** ***(B135) No. 17 — (B19) No. 3:*** ***RHD model*** ***(B135) No. 17 — (B19) No. 4:***	Is the resistance more than 3 Ω?	Repair the open circuit in harness between ECM and rear oxygen sensor connector.	Go to step **5.**
5	**CHECK HARNESS BETWEEN REAR OXYGEN SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from rear oxygen sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between rear oxygen sensor harness connector and engine ground or chassis ground. ***Connector & terminal*** ***LHD model*** ***(B19) No. 3 (+) — Engine ground (−):*** ***RHD model*** ***(B19) No. 4 (+) — Engine ground (−):***	Is the voltage more than 0.2 V?	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector

	Step	Check	Yes	No
6	**CHECK EXHAUST SYSTEM.** Check the exhaust system parts. NOTE: Check the following items. •Loose installation of portions •Damage (crack, hole etc.) of parts •Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor	Is there a fault in exhaust system?	Repair or replace the faulty parts.	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>

AC:DTC P0139 — O_2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 2)

—

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

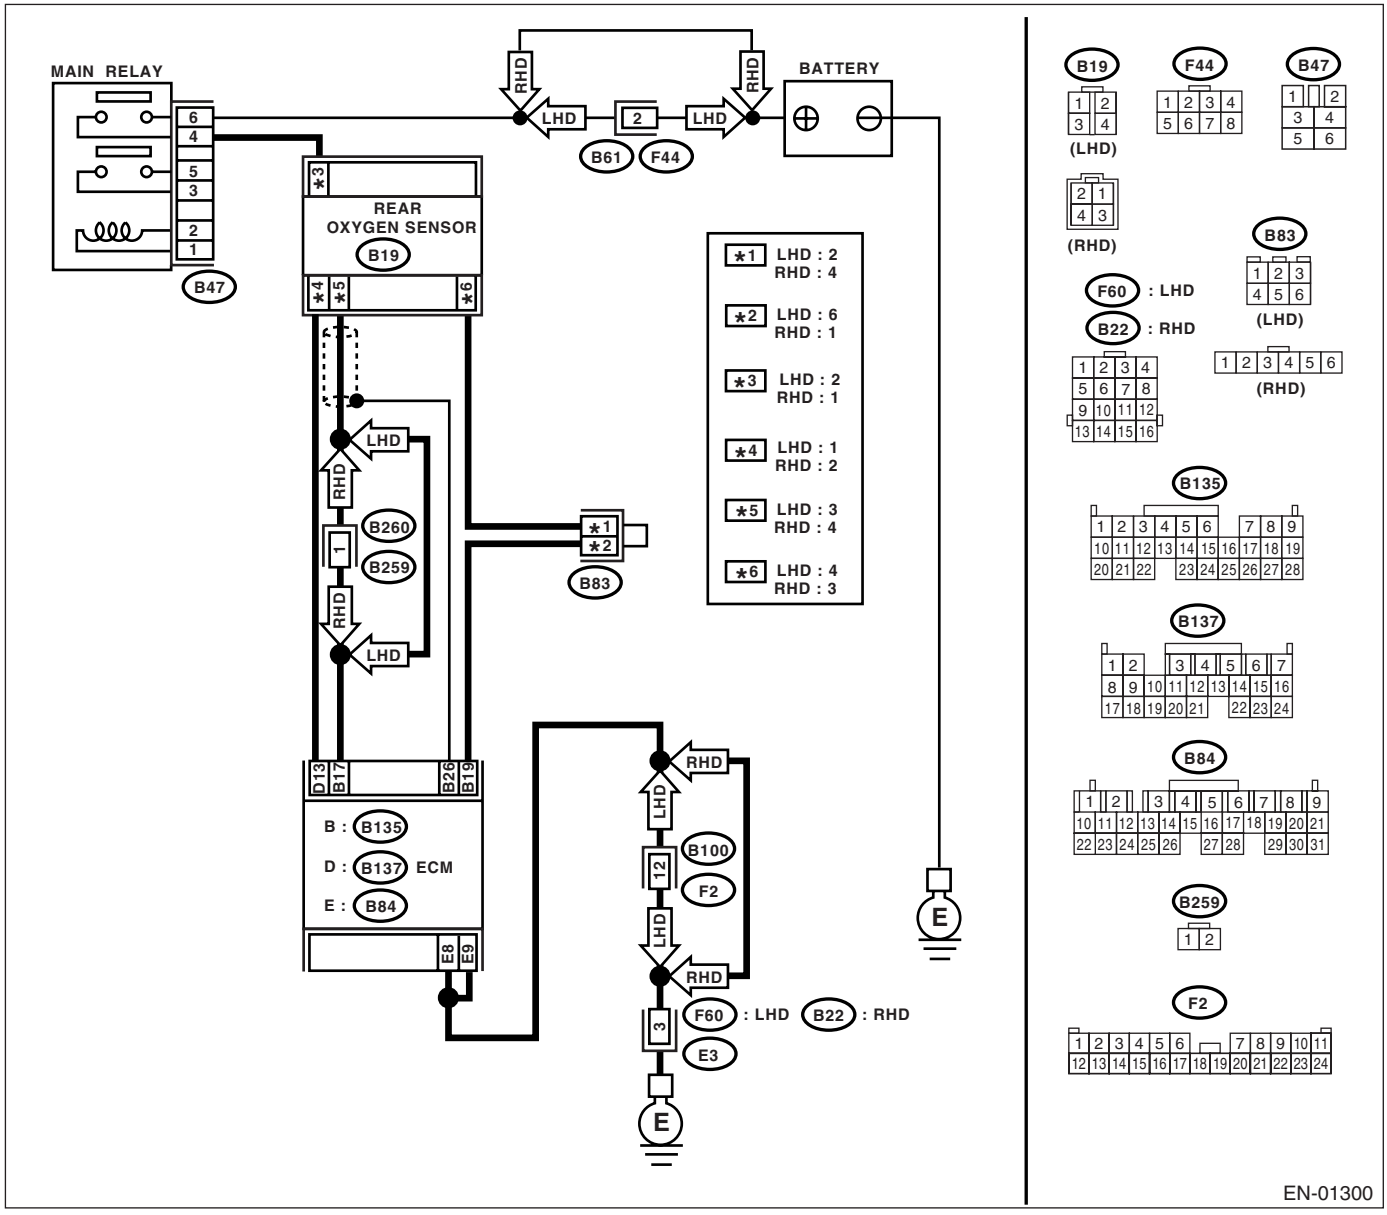

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0139.	Replace the rear oxygen sensor. <Ref. to FU(H4DOTC)-46, Rear Oxygen Sensor.>

AD:DTC P0171 — SYSTEM TOO LEAN (BANK 1) —

NOTE:
For the diagnostic procedure, refer to DTC P0172. <Ref. to EN(H4DOTC)-147, DTC P0172 — SYSTEM TOO RICH (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AE:DTC P0172 — SYSTEM TOO RICH (BANK 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK EXHAUST SYSTEM.**	Are there holes or loose bolts on exhaust system?	Repair the exhaust system.	Go to step **2.**
2	**CHECK AIR INTAKE SYSTEM.**	Are there holes, loose bolts or disconnection of hose on air intake system?	Repair the air intake system.	Go to step **3.**
3	**CHECK FUEL PRESSURE.** **Warning:** **•Place "NO FIRE" signs near the working area.** **•Be careful not to spill fuel on the floor.** 1)Release the fuel pressure. (1) Disconnect the connector from fuel pump relay. (2) Start the engine and run it until it stalls. (3) After the engine stalls, crank it for 5 more seconds. (4) Turn the ignition switch to OFF. 2)Connect the connector to fuel pump relay. 3)Disconnect the fuel delivery hose from fuel filter, and connect fuel pressure gauge. 4)Install the fuel filler cap. 5)Start the engine and idle while gear position is neutral. 6)Measure the fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold. **Warning:** **Before removing the fuel pressure gauge, release fuel pressure.** NOTE: If the fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.	Is the measured value 284 — 314 kPa (2.9 — 3.2 kg/cm^2, 41 — 46 psi)?	Go to step **4.**	Repair the following items. Fuel pressure too high: • Clogged fuel return line or bent hose Fuel pressure too low: • Improper fuel pump discharge • Clogged fuel supply line

	Step	Check	Yes	No
4	**CHECK FUEL PRESSURE.** After connecting the pressure regulator vacuum hose, measure fuel pressure. **Warning:** **Before removing the fuel pressure gauge, release fuel pressure.** NOTE: •If the fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again. •If out of specification as measured at this step, check or replace the pressure regulator and pressure regulator vacuum hose.	Is the measured value 206 — 235 kPa (2.1 — 2.4 kg/cm^2, 30 — 34 psi)?	Go to step **5.**	Repair the following items. Fuel pressure too high: • Faulty pressure regulator • Clogged fuel return line or bent hose Fuel pressure too low: • Faulty pressure regulator • Improper fuel pump discharge • Clogged fuel supply line
5	**CHECK ENGINE COOLANT TEMPERATURE SENSOR.** 1)Start the engine and warm-up completely. 2)Read the data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature more than 60°C (140°F)?	Go to step **6.**	Replace the engine coolant temperature sensor. <Ref. to FU(H4DOTC)-28, Engine Coolant Temperature Sensor.>
6	**CHECK MASS AIR FLOW AND INTAKE AIR TEMPERATURE.** 1)Start the engine and warm-up engine until coolant temperature is greater than 60°C (140°F). 2)Place the shift lever in neutral position. 3)Turn the A/C switch to OFF. 4)Turn all accessory switches to OFF. 5)Read the data of mass air flow and intake air temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the “READ CURRENT DATA FOR ENGINE”. <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Is the measured value within the followings? Ignition ON: 73.3 — 106.6 kPa (550 — 800 mmHg, 21.65 — 31.50 inHg) Idling: 24.0 — 41.3 kPa (180 — 310 mmHg, 7.09 — 12.20 inHg)	Go to step **7.**	Replace the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>

	Step	Check	Yes	No
7	**CHECK MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR.** 1)Start the engine and warm-up engine until coolant temperature is greater than 60°C (140°F). 2)Place the shift lever in neutral position. 3)Turn the A/C switch to OFF. 4)Turn all accessory switches to OFF. 5)Open the front hood. 6)Measure the ambient temperature. 7)Read the data of mass air flow and intake air temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	Subtract ambient temperature from intake air temperature. Is the obtained value −10°C — 50°C (14°F — 122°F)?	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.	Check the mass air flow and intake air temperature sensor. <Ref. to FU(H4DOTC)-34, Mass Air Flow and Intake Air Temperature Sensor.>

AF:DTC P0230 — FUEL PUMP PRIMARY CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

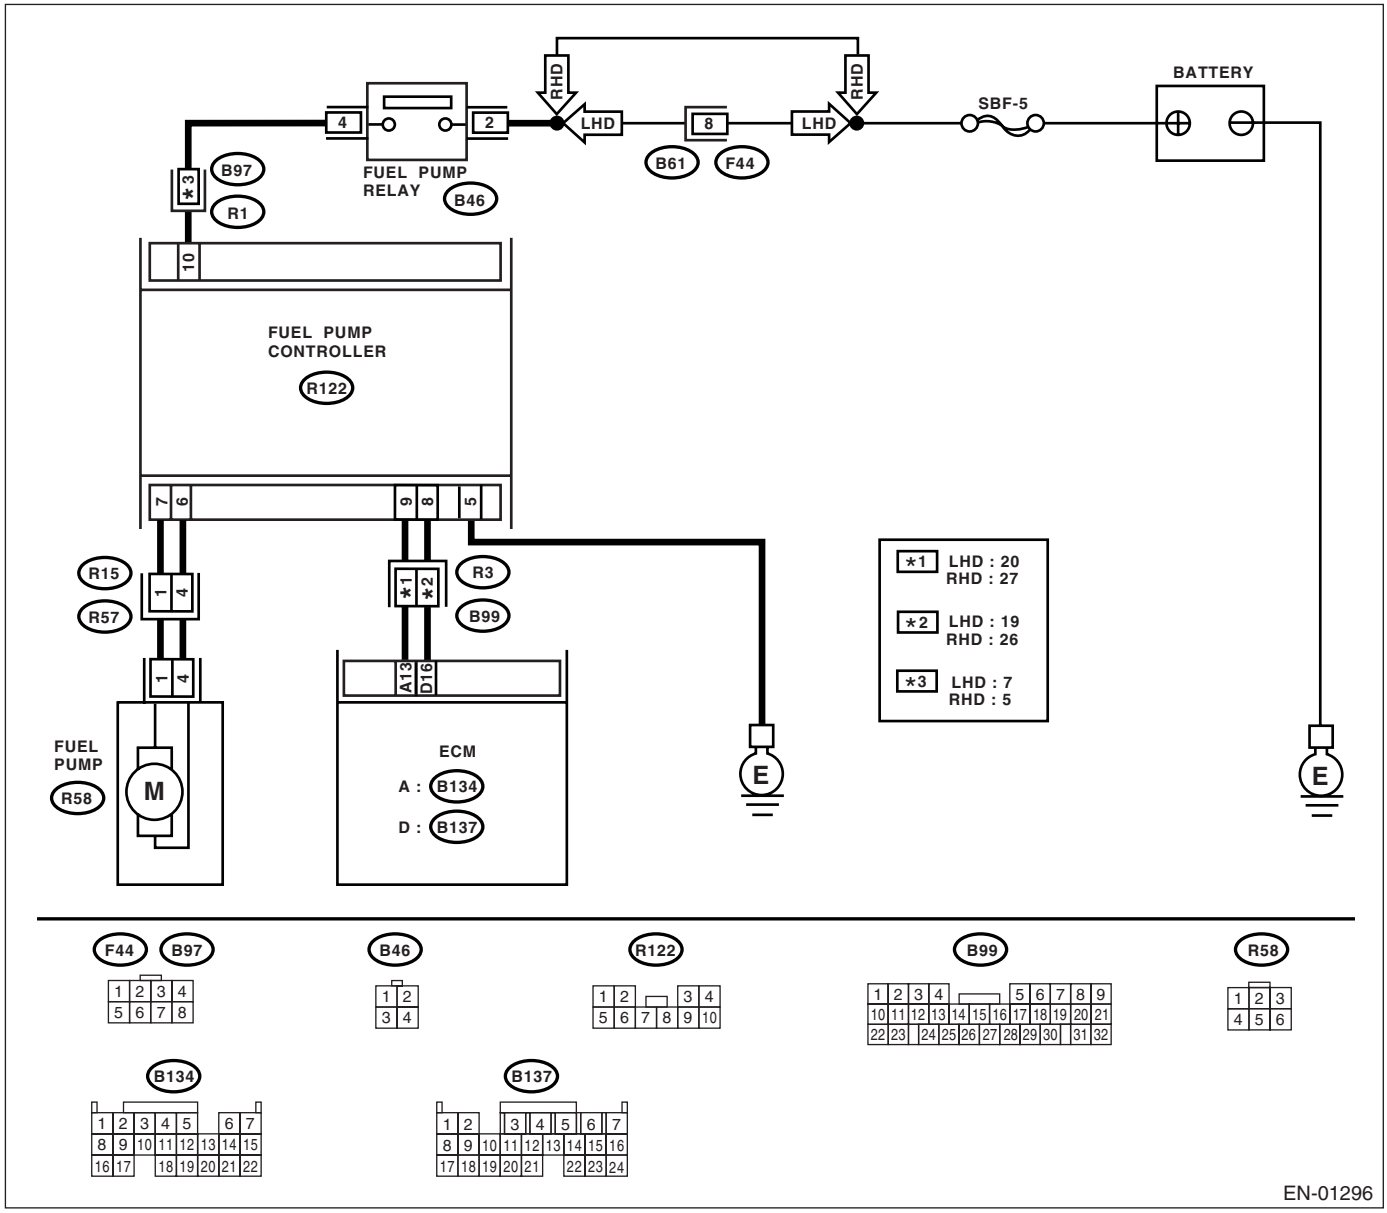

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY CIRCUIT TO FUEL PUMP CONTROL UNIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel pump control unit. 3)Turn the ignition switch to ON. 4)Measure the voltage between fuel pump control unit and chassis ground. ***Connector & terminal*** ***(R122) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Repair the power supply circuit. NOTE: In this case repair the following: • Open or ground short circuit in harness between fuel pump relay and fuel pump control unit • Poor contact in fuel pump control unit connector • Poor contact in fuel pump relay connector
2	**CHECK GROUND CIRCUIT OF FUEL PUMP CONTROL UNIT.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between fuel pump control unit and chassis ground. ***Connector & terminal*** ***(R122) No. 5 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit between fuel pump control unit and chassis ground • Poor contact in fuel pump control unit connector
3	**CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND FUEL PUMP CONNECTOR.** 1)Disconnect the connector from fuel pump. 2)Measure the resistance of harness between fuel pump control unit and fuel pump connector. ***Connector & terminal*** ***(R122) No. 7 — (R58) No. 1:*** ***(R122) No. 6 — (R58) No. 4:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit between fuel pump control unit and fuel pump.
4	**CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND FUEL PUMP CONNECTOR.** Measure the resistance of harness between fuel pump control unit and chassis ground. ***Connector & terminal*** ***(R122) No. 7 — Chassis ground:*** ***(R122) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the ground short circuit between fuel pump control unit and fuel pump.

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between fuel pump control unit and ECM connector. ***Connector & terminal*** ***(R122) No. 9 — (B134) No. 13:*** ***(R122) No. 8 — (B137) No. 16:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit between fuel pump control unit and ECM • Poor contact in fuel pump control unit and ECM connector
6	**CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND ECM CONNECTOR.** Measure the resistance of harness between fuel pump control unit and chassis ground. ***Connector & terminal*** ***(R122) No. 9 — Chassis ground:*** ***(R122) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit between fuel pump control unit and ECM.
7	**CHECK POOR CONTACT.** Check poor contact in ECM and fuel pump control unit connector.	Is there poor contact in ECM and fuel pump control unit connector?	Repair the poor contact in ECM and fuel pump control unit.	Replace the fuel pump control unit. <Ref. to FU(H4DOTC)-52, Fuel Pump Control Unit.>

AG:DTC P0244 — TURBO/SUPER CHARGER WASTEGATE SOLENOID "A" RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

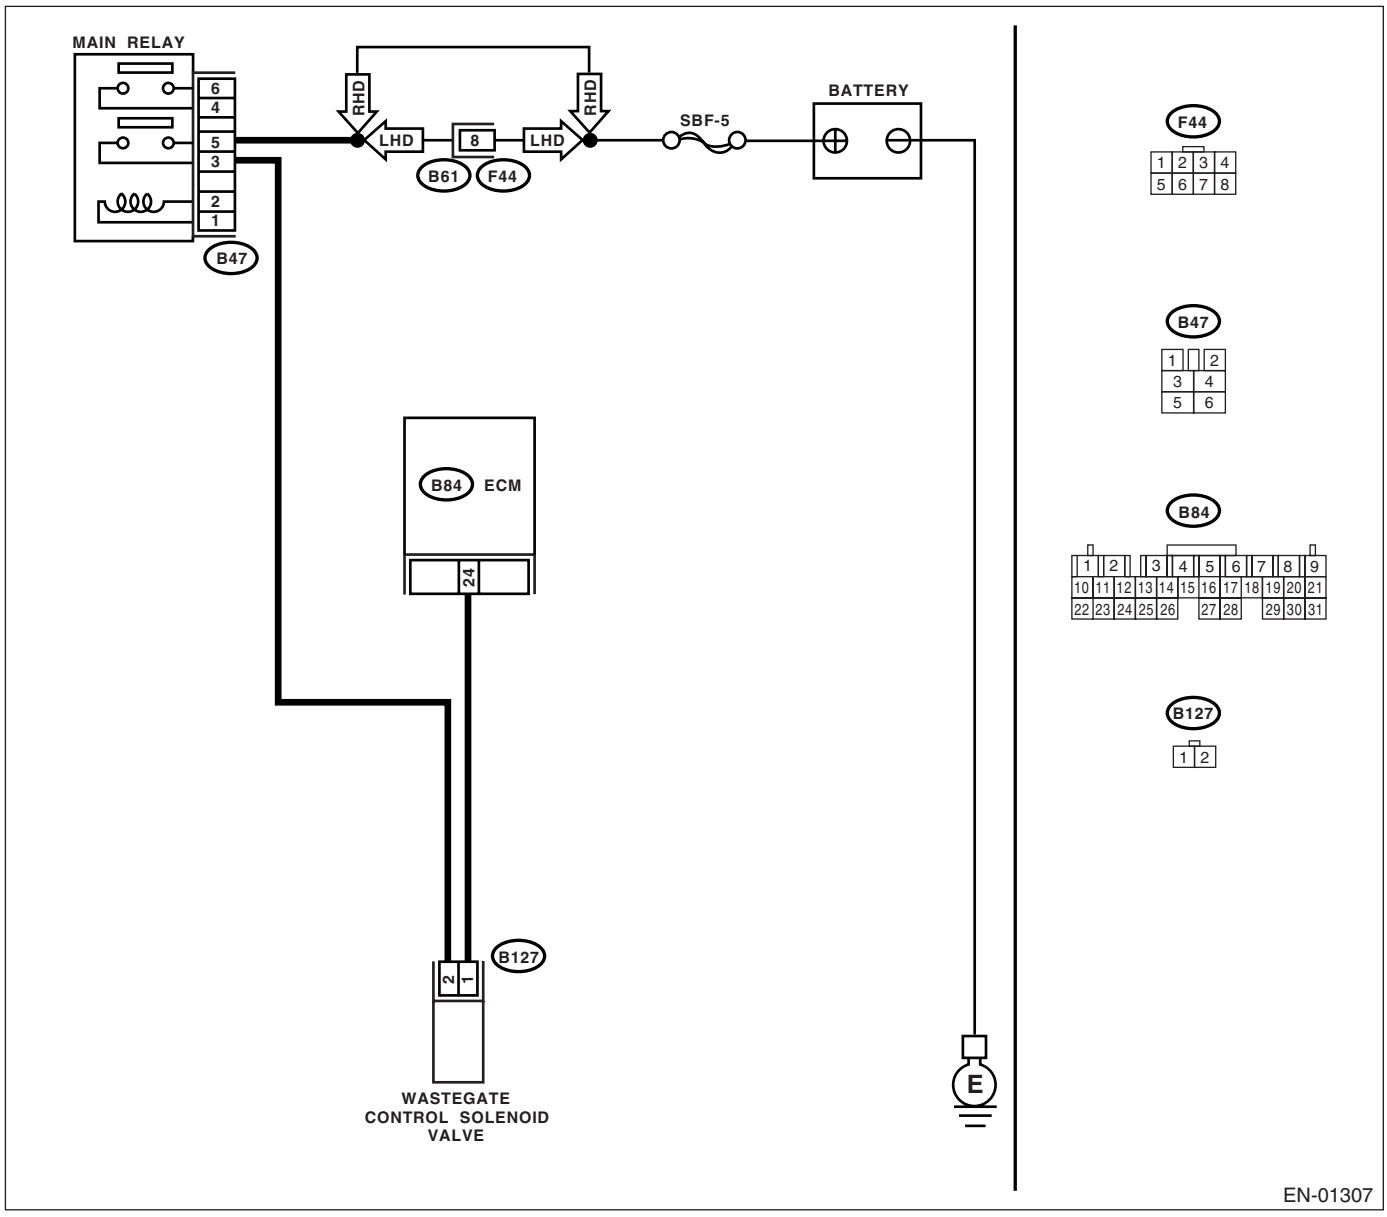

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0244.	Replace the wastegate control solenoid valve. <Ref. to FU(H4DOTC)-43, Wastegate Control Solenoid Valve.>

AH:DTC P0245 — TURBO/SUPER CHARGER WASTEGATE SOLENOID “A” LOW —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

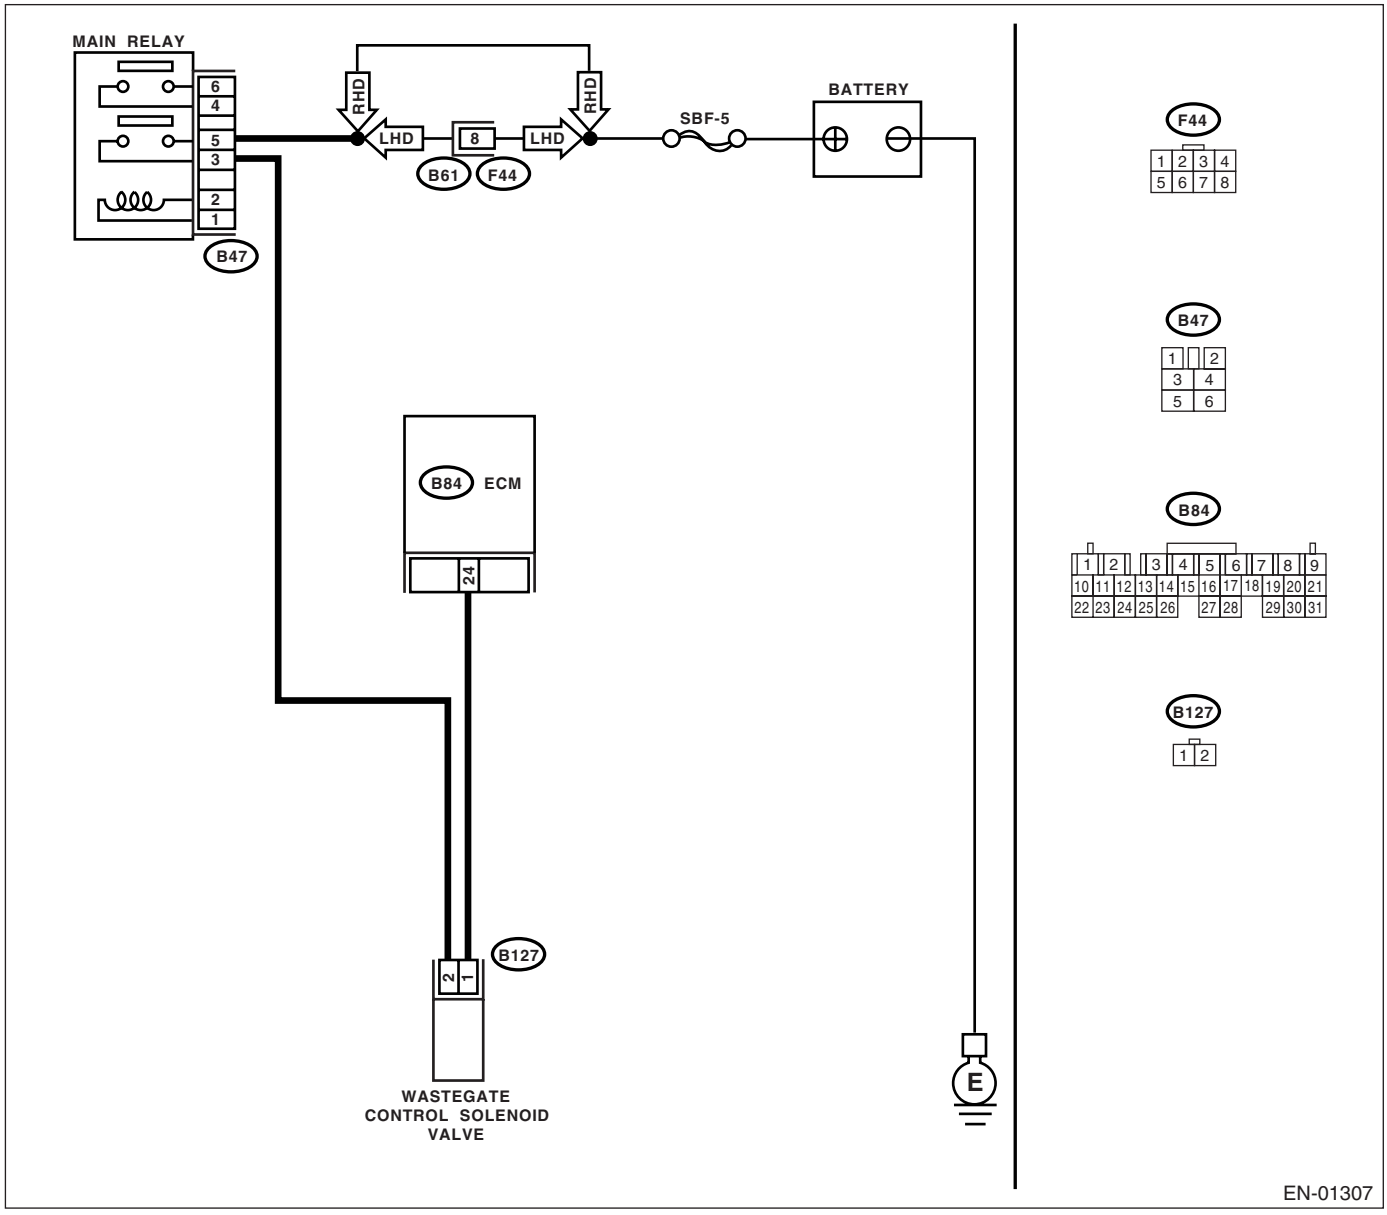

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 24 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.	Go to step **2.**
2	**CHECK HARNESS BETWEEN WASTEGATE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from wastegate control solenoid valve and ECM. 3)Measure the resistance of harness between wastegate control solenoid valve connector and engine ground. ***Connector & terminal*** ***(B127) No. 1 — Engine ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and wastegate control solenoid valve connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN WASTEGATE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** Measure the resistance of harness between ECM and wastegate control solenoid valve of harness connector. ***Connector & terminal*** ***(B84) No. 24 — (B127) No. 1:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between ECM and wastegate control solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and wastegate control solenoid valve connector
4	**CHECK WASTEGATE CONTROL SOLENOID VALVE.** 1)Remove the wastegate control solenoid valve. 2)Measure the resistance between wastegate control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 30 — 40 Ω?	Go to step **5.**	Replace the wastegate control solenoid valve. <Ref. to FU(H4DOTC)-43, Wastegate Control Solenoid Valve.>
5	**CHECK POWER SUPPLY TO WASTEGATE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to ON. 2)Measure the voltage between wastegate control solenoid valve and engine ground. ***Connector & terminal*** ***(B127) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Repair the open circuit in harness between main relay and wastegate control solenoid valve connector.
6	**CHECK POOR CONTACT.** Check poor contact in wastegate control solenoid valve connector.	Is there poor contact in wastegate control solenoid valve connector?	Repair the poor contact in wastegate control solenoid valve connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

AI: DTC P0246 — TURBO/SUPER CHARGER WASTEGATE SOLENOID "A" HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

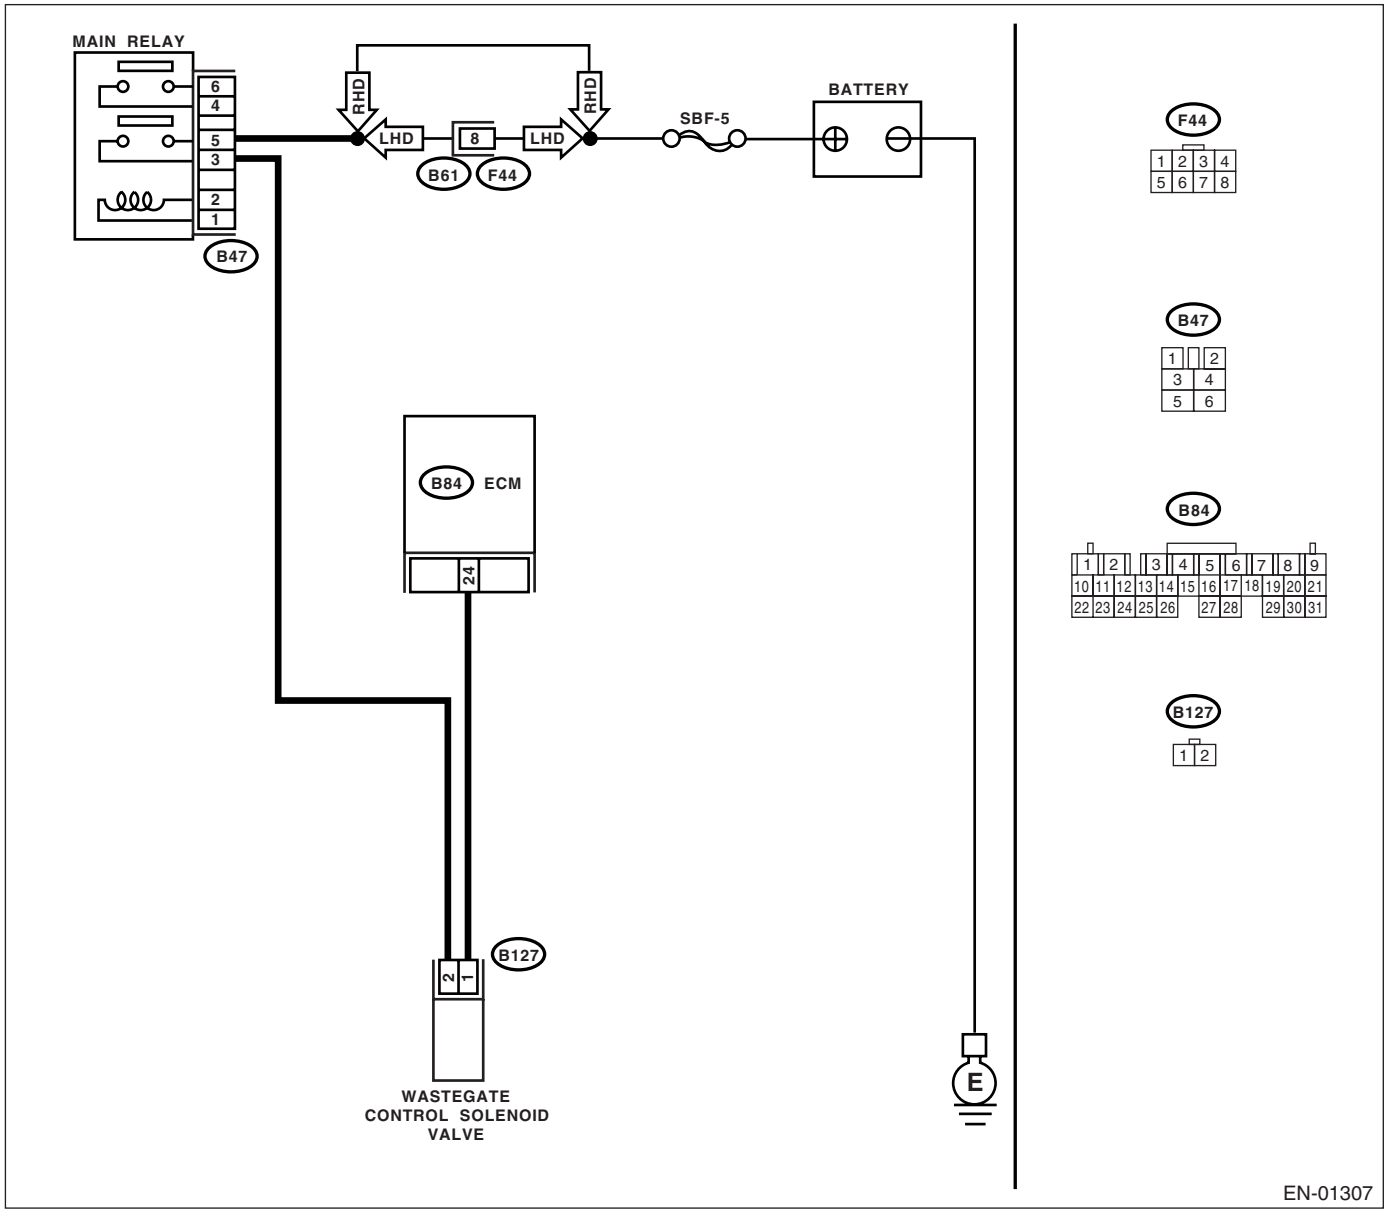

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 24 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Go to step **2.**
2	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
3	**CHECK HARNESS BETWEEN WASTEGATE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from wastegate control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 24 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and wastegate control solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **4.**
4	**CHECK WASTEGATE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between wastegate control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Replace the wastegate control solenoid valve <Ref. to FU(H4DOTC)-43, Wastegate Control Solenoid Valve.> and ECM <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **5.**
5	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

AJ:DTC P0301 — CYLINDER 1 MISFIRE DETECTED —

NOTE:
For the diagnostic procedure, refer to DTC P0304. <Ref. to EN(H4DOTC)-160, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AK:DTC P0302 — CYLINDER 2 MISFIRE DETECTED —

NOTE:
For the diagnostic procedure, refer to DTC P0304. <Ref. to EN(H4DOTC)-160, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AL:DTC P0303 — CYLINDER 3 MISFIRE DETECTED —

NOTE:
For the diagnostic procedure, refer to DTC P0304. <Ref. to EN(H4DOTC)-160, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AM:DTC P0304 — CYLINDER 4 MISFIRE DETECTED —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
  - Immediately at fault recognition (A misfire which could damage catalyst occurs.)
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Erroneous idling
  - Rough driving

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

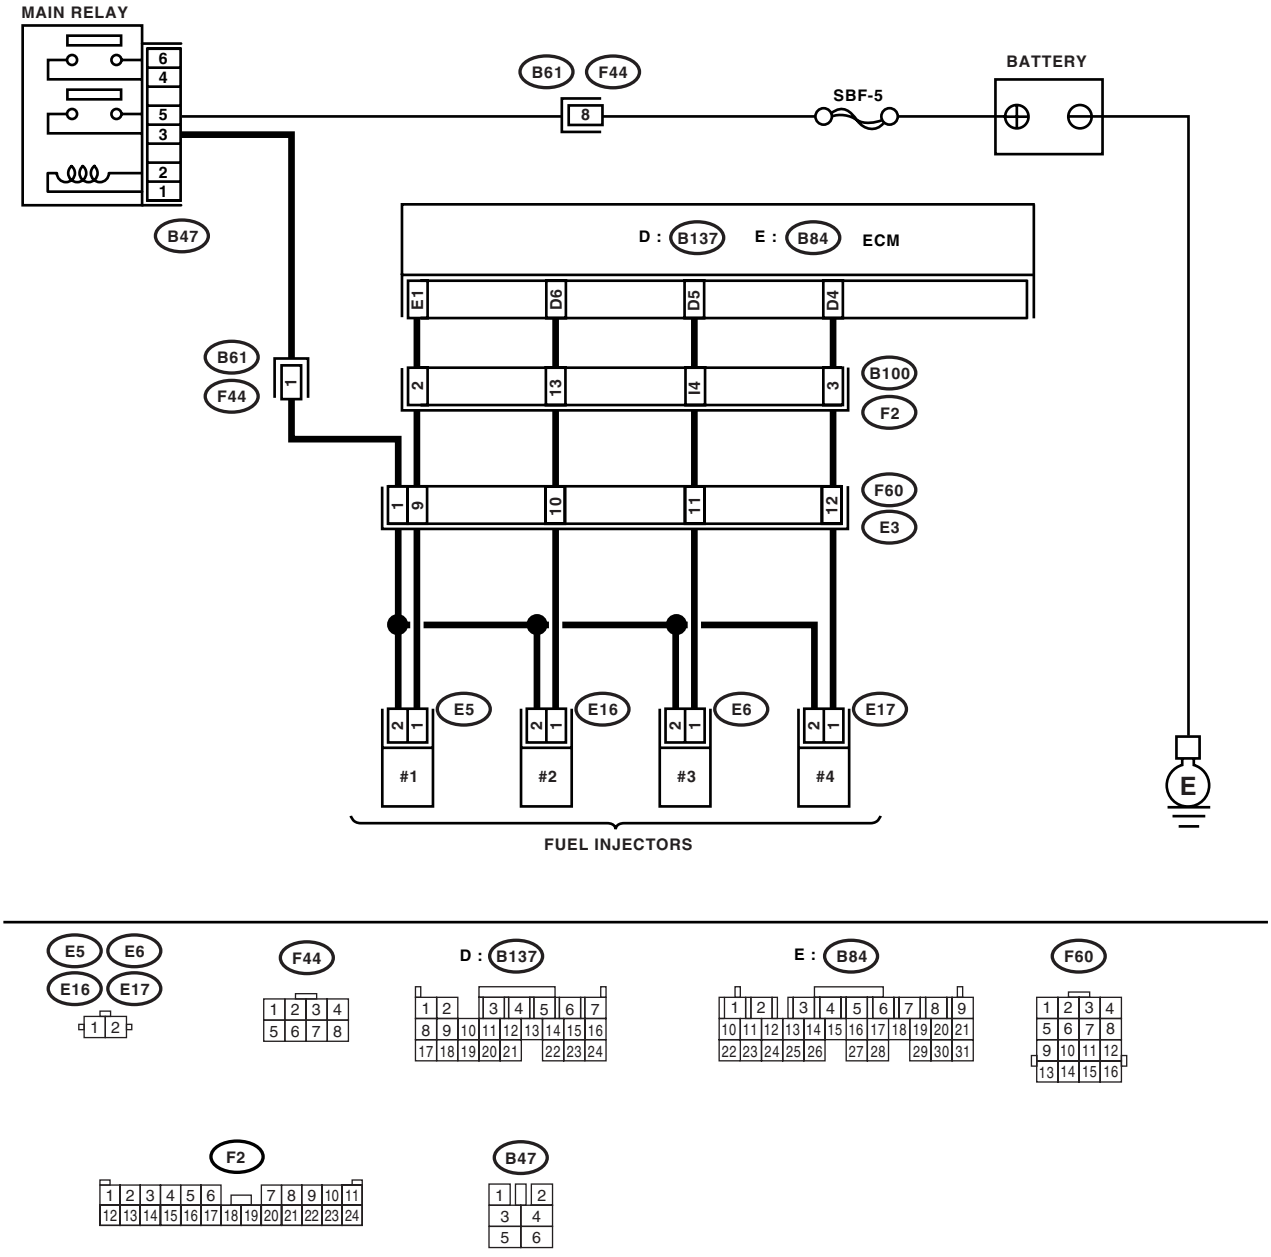

EN-01297

- **RHD model**

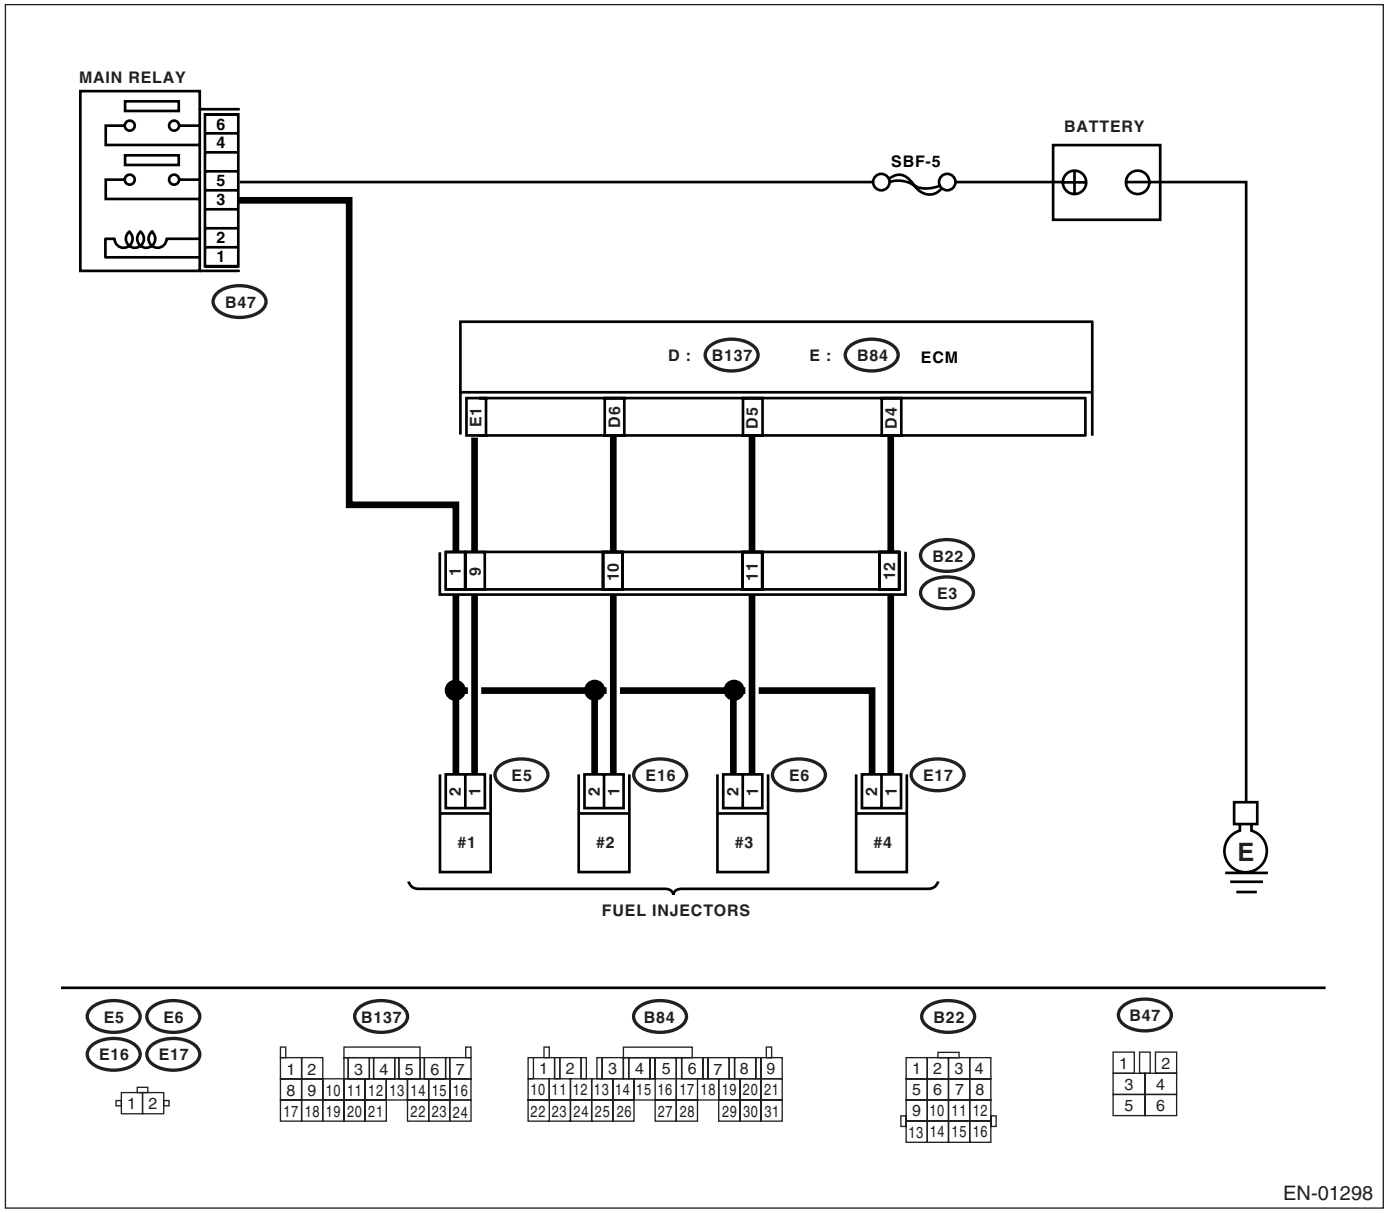

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM connector and chassis ground on faulty cylinders. ***Connector & terminal*** ***#1 (B84) No. 1 (+) — Chassis ground (–):*** ***#2 (B137) No. 6 (+) — Chassis ground (–):*** ***#3 (B137) No. 5 (+) — Chassis ground (–):*** ***#4 (B137) No. 4 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **7.**	Go to step **3.**
3	**CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel injector on faulty cylinders. 3)Disconnect the connector from ECM. 4)Measure the resistance between ECM connector and engine ground on faulty cylinders. ***Connector & terminal*** ***#1 (E5) No. 1 — Engine ground:*** ***#2 (E16) No. 1 — Engine ground:*** ***#3 (E6) No. 1 — Engine ground:*** ***#4 (E17) No. 1 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the ground short circuit in harness between fuel injector and ECM connector.
4	**CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.** Measure the resistance of harness connector between ECM connector and fuel injector on faulty cylinders. ***Connector & terminal*** ***#1 (B84) No. 1 — (E5) No. 1:*** ***#2 (B137) No. 6 — (E16) No. 1:*** ***#3 (B137) No. 5 — (E6) No. 1:*** ***#4 (B137) No. 4 — (E17) No. 1:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector
5	**CHECK FUEL INJECTOR.** Measure the resistance between fuel injector terminals on faulty cylinder. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 5 — 20 Ω?	Go to step **6.**	Replace the faulty fuel injector. <Ref. to FU(H4DOTC)-37, Fuel Injector.>

	Step	Check	Yes	No
6	**CHECK POWER SUPPLY LINE.** 1)Turn the ignition switch to ON. 2)Measure the voltage between fuel injector and engine ground on faulty cylinders. ***Connector & terminal*** ***#1 (E5) No. 2 (+) — Engine ground (–):*** ***#2 (E16) No. 2 (+) — Engine ground (–):*** ***#3 (E6) No. 2 (+) — Engine ground (–):*** ***#4 (E17) No. 2 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Repair the poor contact in all connectors in fuel injector circuit.	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and fuel injector connector on faulty cylinders • Poor contact in coupling connector • Poor contact in main relay connector • Poor contact in fuel injector connector on faulty cylinders
7	**CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel injector on faulty cylinder. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM connector and chassis ground on faulty cylinders. ***Connector & terminal*** ***#1 (B84) No. 1 (+) — Chassis ground (–):*** ***#2 (B137) No. 6 (+) — Chassis ground (–):*** ***#3 (B137) No. 5 (+) — Chassis ground (–):*** ***#4 (B137) No. 4 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and fuel injector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **8.**
8	**CHECK FUEL INJECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between fuel injector terminals on faulty cylinder. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Replace the faulty fuel injector <Ref. to FU(H4DOTC)-37, Fuel Injector.> and ECM <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **9.**
9	**CHECK INSTALLATION OF CAMSHAFT POSITION SENSOR/CRANKSHAFT POSITION SENSOR.**	Is the camshaft position sensor or crankshaft position sensor loosely installed?	Tighten the camshaft position sensor or crankshaft position sensor.	Go to step **10.**
10	**CHECK CRANKSHAFT SPROCKET.** Remove the timing belt cover.	Is the crankshaft sprocket rusted or does it have broken teeth?	Replace the crankshaft sprocket. <Ref. to ME(H4DOTC)-71, Crankshaft Sprocket.>	Go to step **11.**

	Step	Check	Yes	No
11	**CHECK INSTALLATION CONDITION OF TIMING BELT.** Turn the crankshaft, and align alignment mark on crankshaft sprocket with alignment mark on cylinder block.	Is the timing belt dislocated from its proper position?	Repair the installation condition of timing belt. <Ref. to ME(H4DOTC)-60, Timing Belt Assembly.>	Go to step **12.**
12	**CHECK FUEL LEVEL.**	Is the fuel meter indication higher than the “Lower” level?	Go to step **13.**	Replenish the fuel so fuel meter indication is higher than the “Lower” level. After replenishing fuel; Go to step **13.**
13	**CHECK STATUS OF MALFUNCTION INDICATOR LIGHT.** 1)Clear the memory using Subaru Select Monitor. <Ref. to EN(H4DOTC)-48, Clear Memory Mode.> 2)Start the engine, and drive the vehicle more than 10 minutes.	Is the malfunction indicator light coming on or blinking?	Go to step **15.**	Go to step **14.**
14	**CHECK CAUSE OF MISFIRE DIAGNOSED.**	Was the cause of misfire diagnosed when the engine is running?	Finish the diagnostics operation, if the engine has no abnormality.	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact in ignition coil connector • Poor contact in fuel injector connector on faulty cylinders • Poor contact in ECM connector • Poor contact in coupling connector
15	**CHECK AIR INTAKE SYSTEM.**	Is there a fault in air intake system?	Repair the air intake system. NOTE: Check the following items: • Are there air leaks or air suction caused by loose or dislocated nuts and bolts? • Are there cracks or any disconnection of hoses?	Go to step **16.**
16	**CHECK CYLINDER.**	Is there a fault in that cylinder?	Repair or replace the faulty parts. NOTE: Check the following items. • Spark plug • Fuel injector • Compression pressure	Go to DTC P0171 and P0172. <Ref. to EN(H4DOTC)-146, DTC P0171 — SYSTEM TOO LEAN (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AN:DTC P0327 — KNOCK SENSOR 1 CIRCUIT LOW INPUT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Poor driving performance
  - Knocking occurs.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

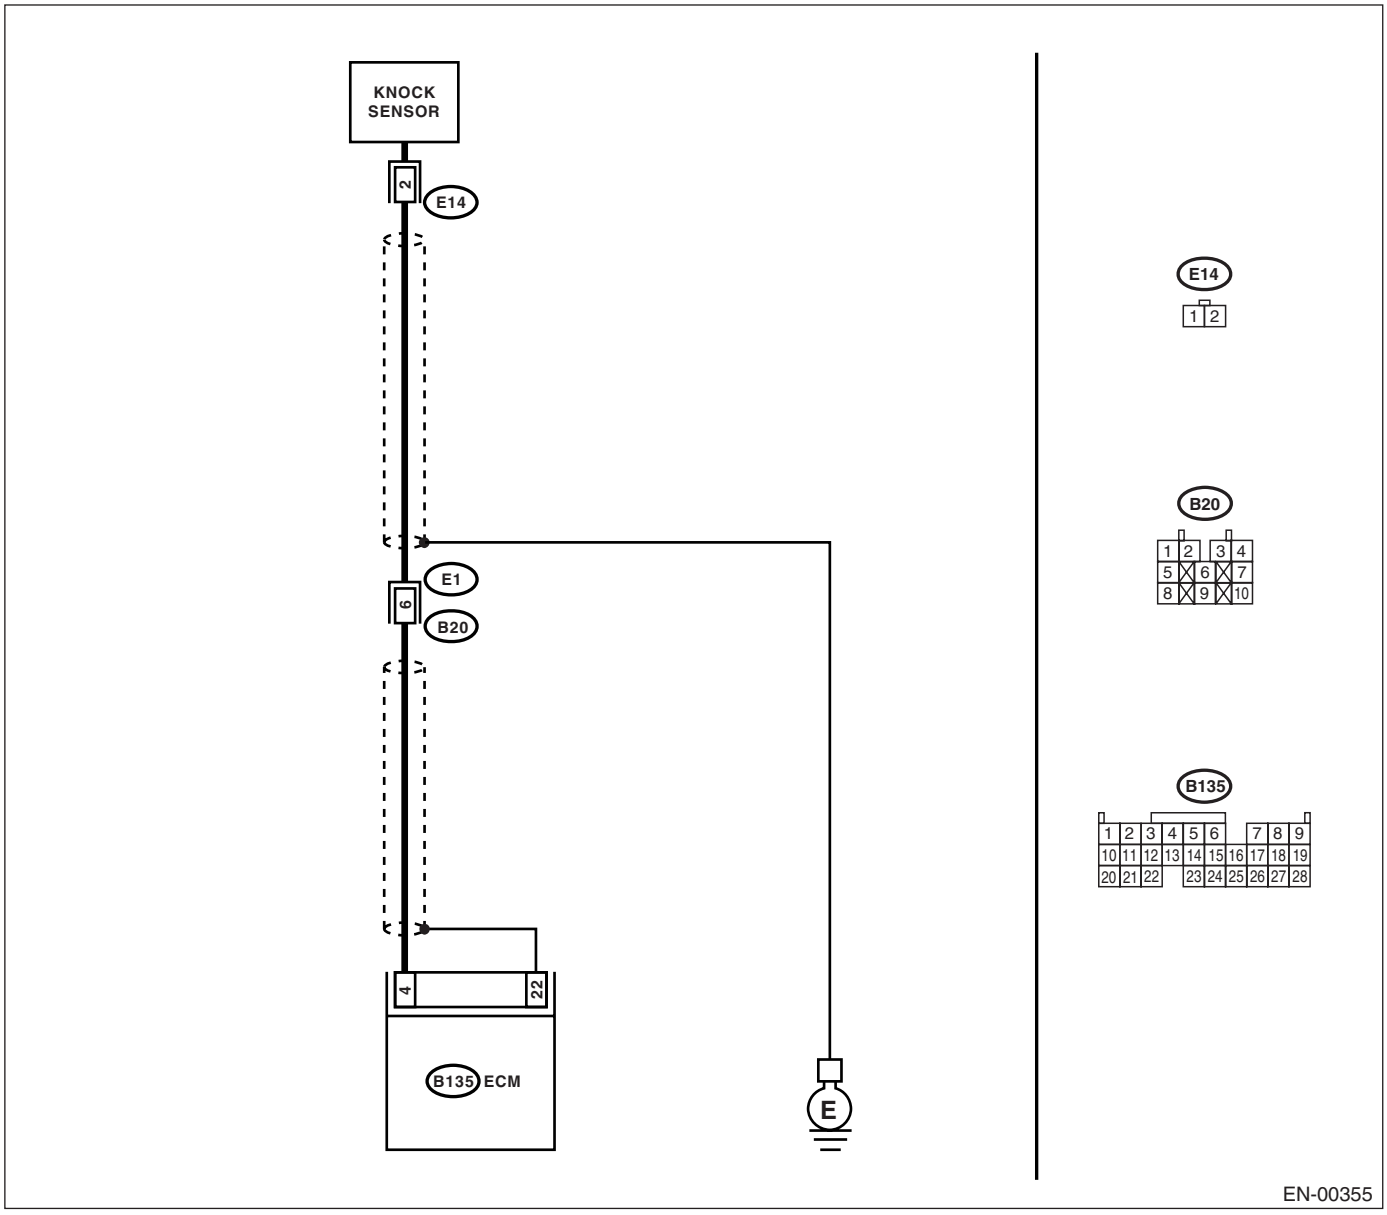

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance between ECM harness connector and chassis ground. ***Connector & terminal*** ***(B135) No. 4 — Chassis ground:***	Is the resistance more than 700 kΩ?	Go to step **2.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between knock sensor and ECM connector • Poor contact in knock sensor connector • Poor contact in coupling connector
2	**CHECK KNOCK SENSOR.** 1)Disconnect the connector from knock sensor. 2)Measure the resistance between knock sensor connector terminal and engine ground. ***Terminals*** ***No. 2 — Engine ground:***	Is the resistance more than 700 kΩ?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Poor contact in knock sensor connector • Poor contact in coupling connector
3	**CHECK CONDITION OF KNOCK SENSOR INSTALLATION.**	Is the knock sensor installation bolt tightened securely?	Replace the knock sensor. <Ref. to FU(H4DOTC)-32, Knock Sensor.>	Tighten the knock sensor installation bolt securely.

AO:DTC P0328 — KNOCK SENSOR 1 CIRCUIT HIGH INPUT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Poor driving performance
  - Knocking occurs.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

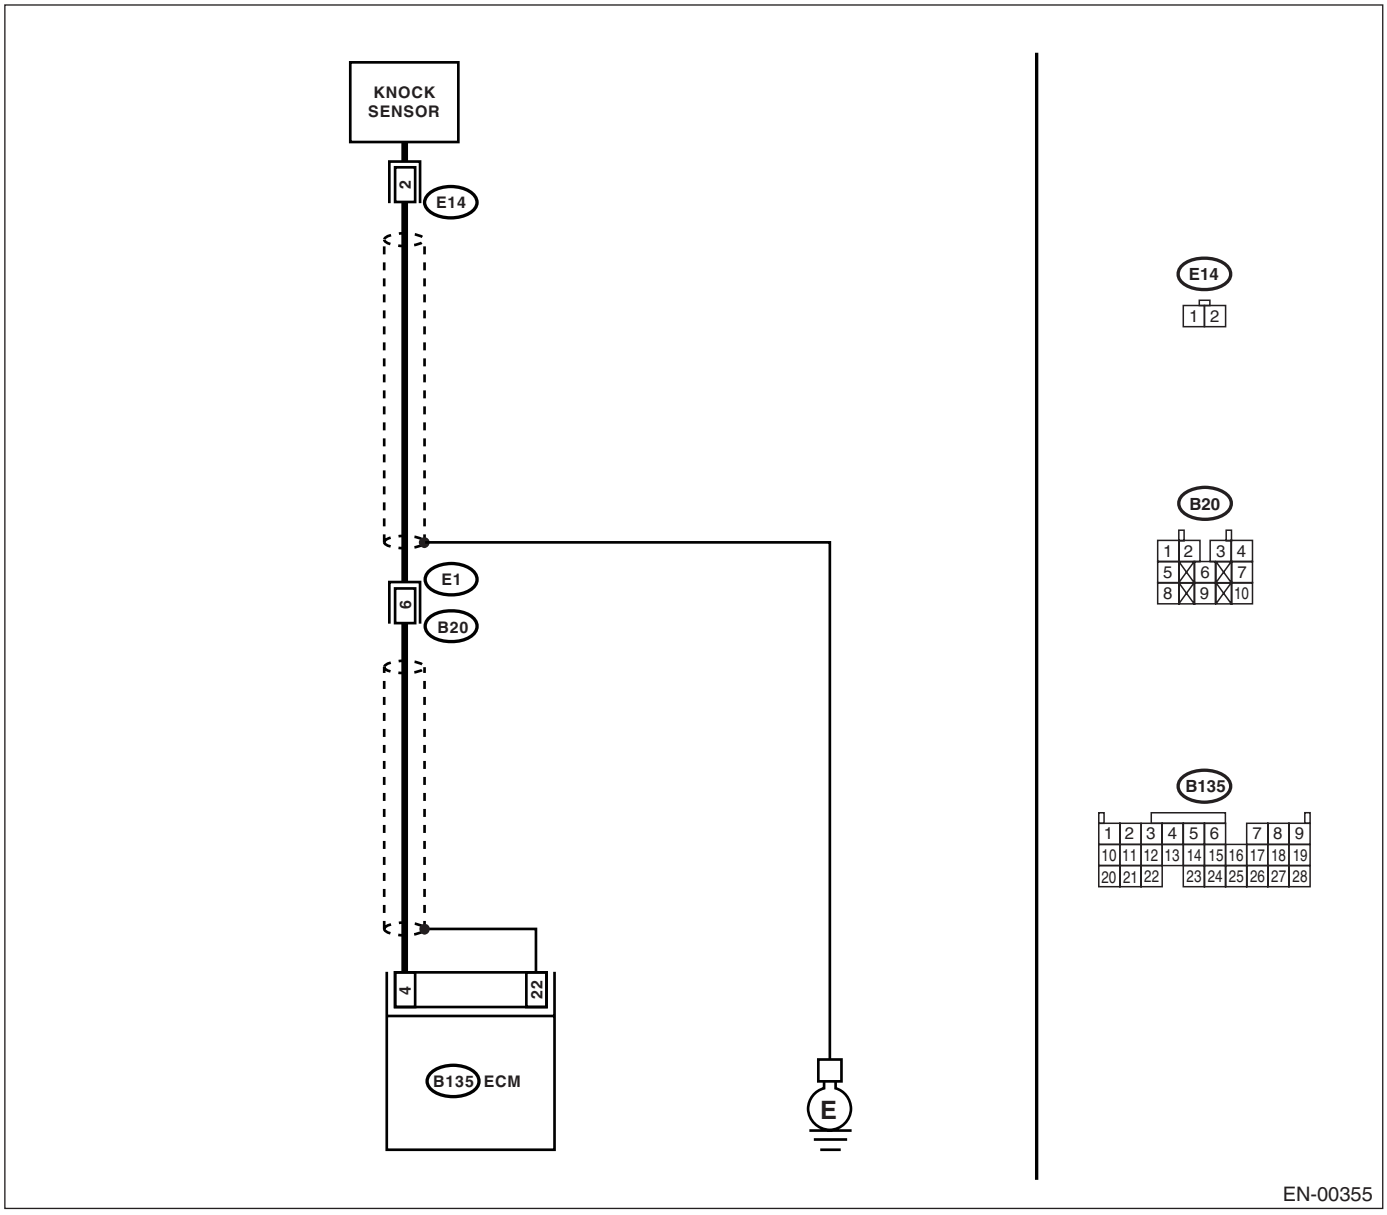

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 4 — Chassis ground:***	Is the resistance less than 400 kΩ?	Go to step **2.**	Go to step **3.**
2	**CHECK KNOCK SENSOR.** 1)Disconnect the connector from knock sensor. 2)Measure the resistance between knock sensor connector terminal and engine ground. ***Terminals*** ***No. 2 — Engine ground:***	Is the resistance less than 400 kΩ?	Replace the knock sensor. <Ref. to FU(H4DOTC)-32, Knock Sensor.>	Repair the ground short circuit in harness between knock sensor connector and ECM connector. NOTE: The harness between both connectors is shielded. Repair the short circuit of harness together with shield.
3	**CHECK INPUT SIGNAL FOR ECM.** 1)Connect the connectors to ECM and knock sensor. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 4 (+) — Chassis ground (−):***	Is the voltage more than 2 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.) NOTE: In this case, repair the following: • Poor contact in knock sensor connector • Poor contact in ECM connector • Poor contact in coupling connector	Repair the poor contact in ECM connector.

AP:DTC P0335 — CRANKSHAFT POSITION SENSOR "A" CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

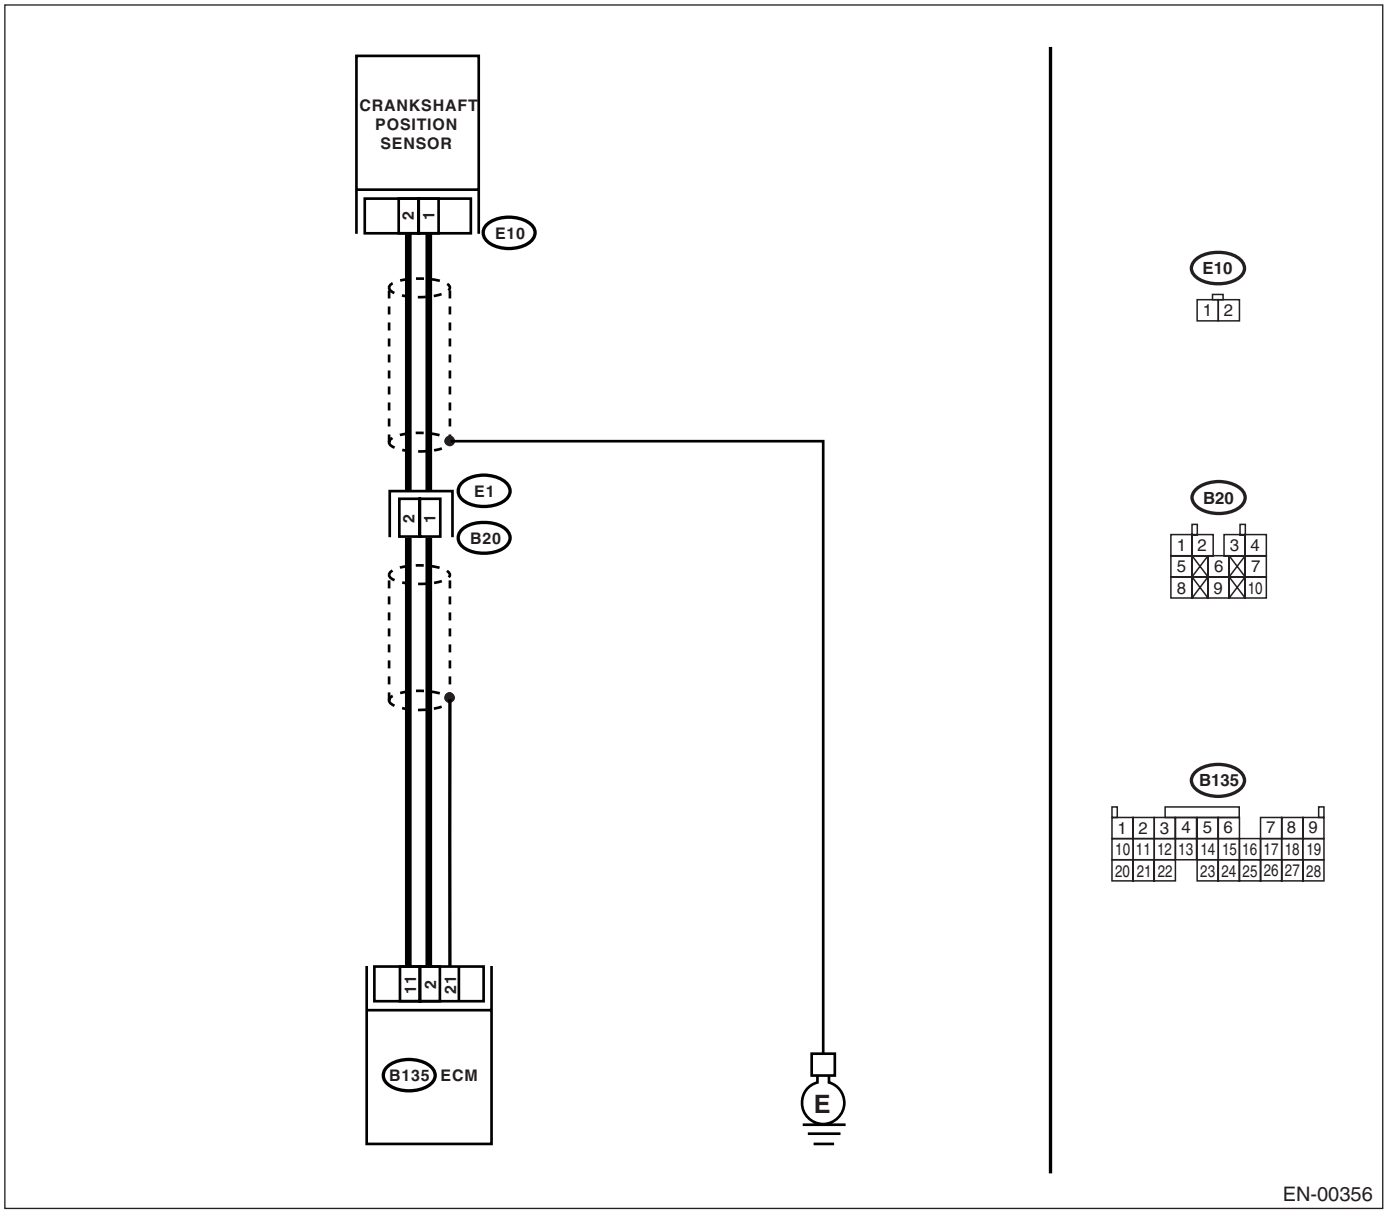

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from crankshaft position sensor. 3)Measure the resistance of harness between crankshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E10) No. 1 — Engine ground:***	Is the resistance more than 100 kΩ?	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between crankshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector	Go to step **2.**
2	**CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between crankshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E10) No. 1 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the ground short circuit in harness between crankshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.
3	**CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between crankshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E10) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between crankshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
4	**CHECK CONDITION OF CRANKSHAFT POSITION SENSOR.**	Is the crankshaft position sensor installation bolt tightened securely?	Go to step **5.**	Tighten the crankshaft position sensor installation bolt securely.
5	**CHECK CRANKSHAFT POSITION SENSOR.** 1)Remove the crankshaft position sensor. 2)Measure the resistance between connector terminals of crankshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Repair the poor contact in crankshaft position sensor connector.	Replace the crankshaft position sensor. <Ref. to FU(H4DOTC)-29, Crankshaft Position Sensor.>

AQ:DTC P0336 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT RANGE/ PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

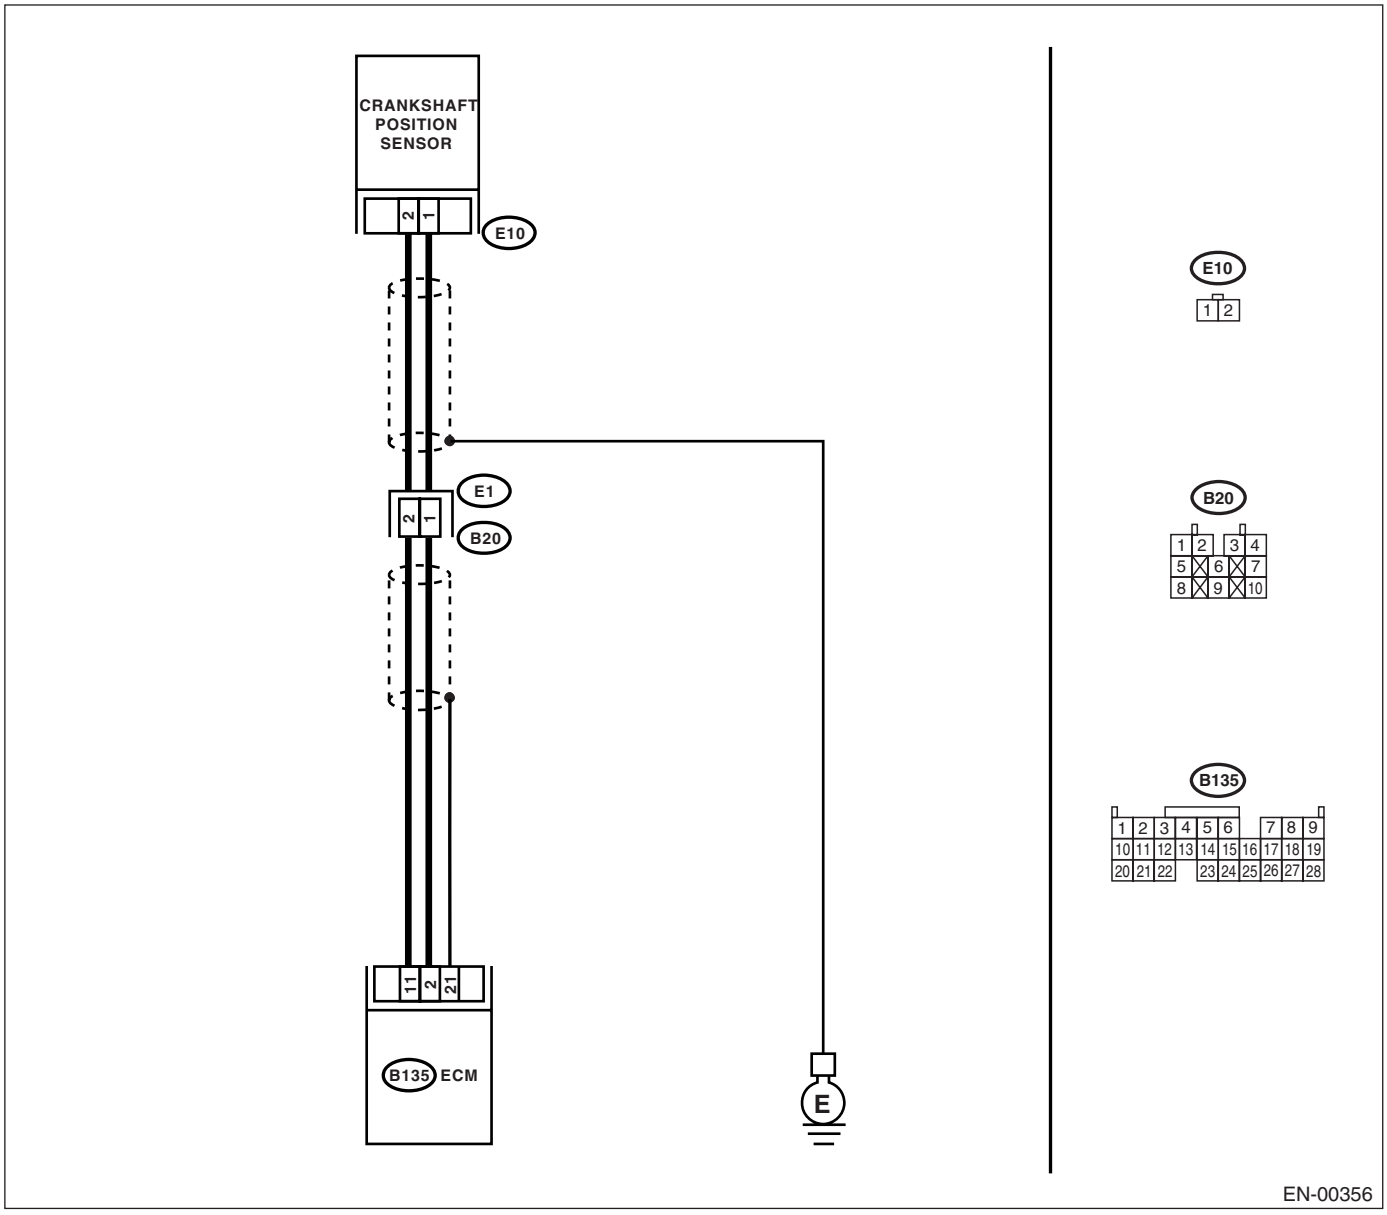

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK CONDITION OF CRANKSHAFT POSITION SENSOR.** Turn the ignition switch to OFF.	Is the crankshaft position sensor installation bolt tightened securely?	Go to step **3.**	Tighten the crankshaft position sensor installation bolt securely.
3	**CHECK CRANKSHAFT SPROCKET.** Remove the front belt cover.	Are the crankshaft sprocket teeth cracked or damaged?	Replace the crankshaft sprocket. <Ref. to FU(H4DOTC)-29, Crankshaft Position Sensor.>	Go to step **4.**
4	**CHECK INSTALLATION CONDITION OF TIMING BELT.** Turn the crankshaft, and align alignment mark on crankshaft sprocket with alignment mark on cylinder block.	Is the timing belt dislocated from its proper position?	Repair the installation condition of timing belt. <Ref. to ME(H4DOTC)-60, Timing Belt Assembly.>	Replace the crankshaft position sensor. <Ref. to FU(H4DOTC)-29, Crankshaft Position Sensor.>

AR:DTC P0340 — CAMSHAFT POSITION SENSOR “A” CIRCUIT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

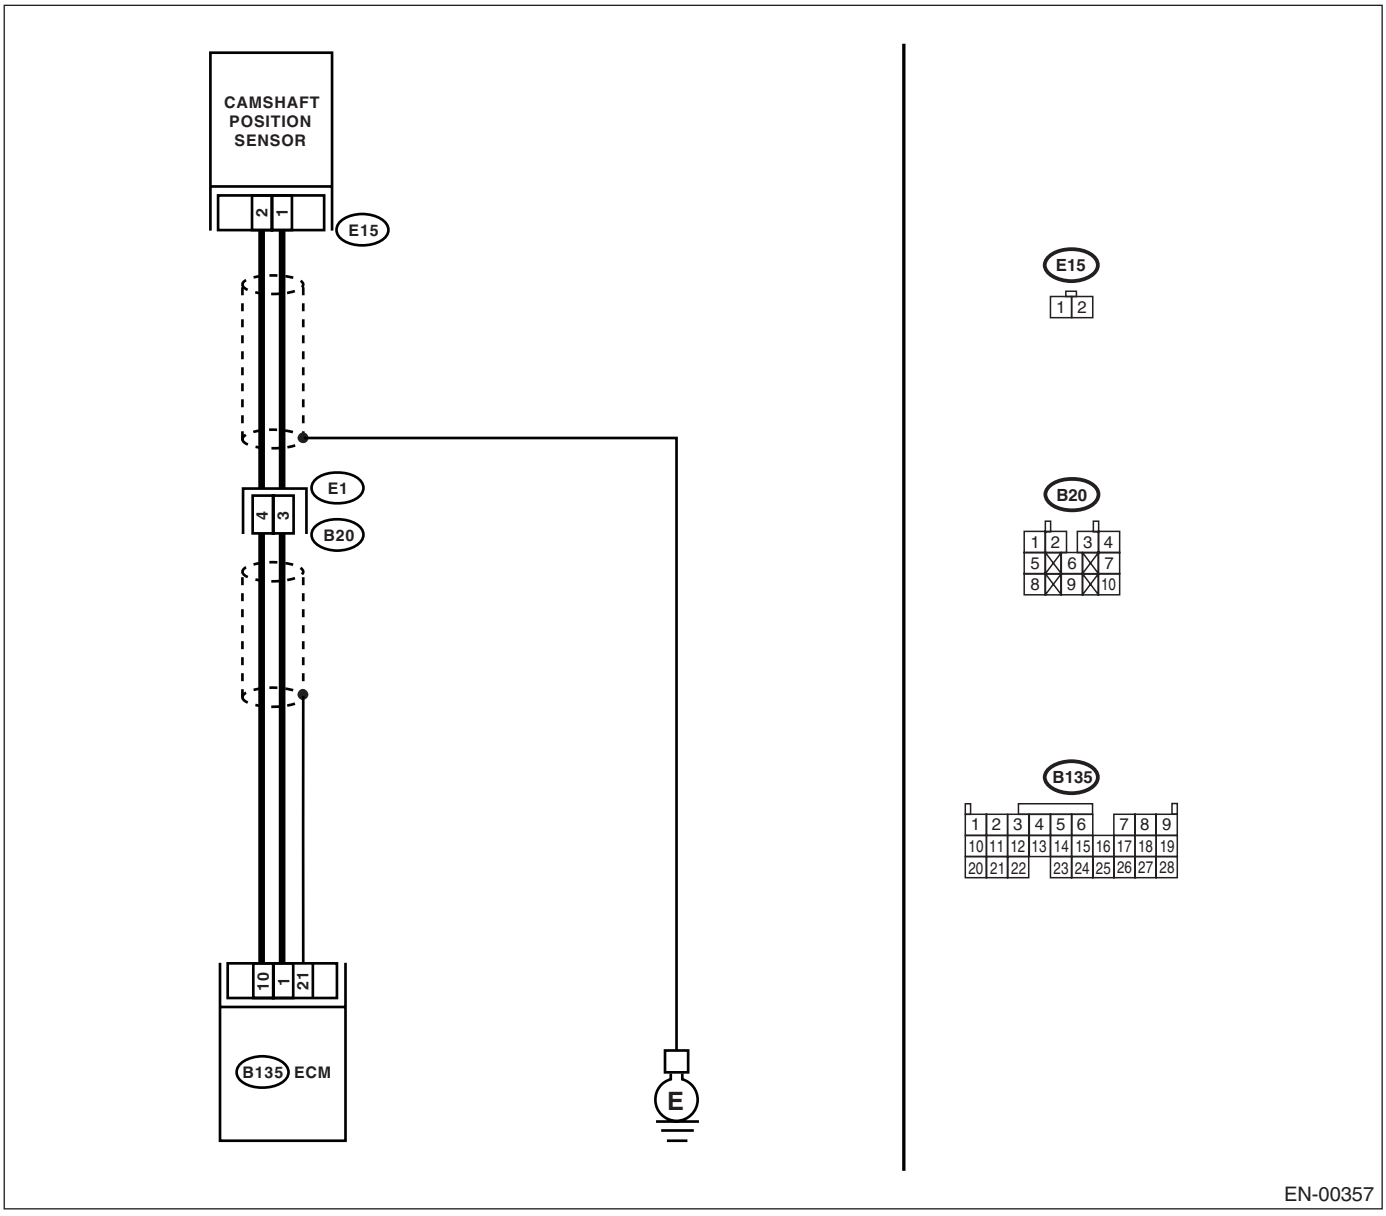

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from camshaft position sensor. 3)Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance more than 100 kΩ?	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector	Go to step **2.**
2	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between camshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair the ground short circuit in harness together with shield.	Go to step **3.**
3	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
4	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR.**	Is the camshaft position sensor installation bolt tightened securely?	Go to step **5.**	Tighten the camshaft position sensor installation bolt securely.
5	**CHECK CAMSHAFT POSITION SENSOR.** 1)Remove the camshaft position sensor. 2)Measure the resistance between connector terminals of camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Repair the poor contact in camshaft position sensor connector.	Replace the camshaft position sensor. <Ref. to FU(H4DOTC)-30, Camshaft Position Sensor.>

AS:DTC P0341 — CAMSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

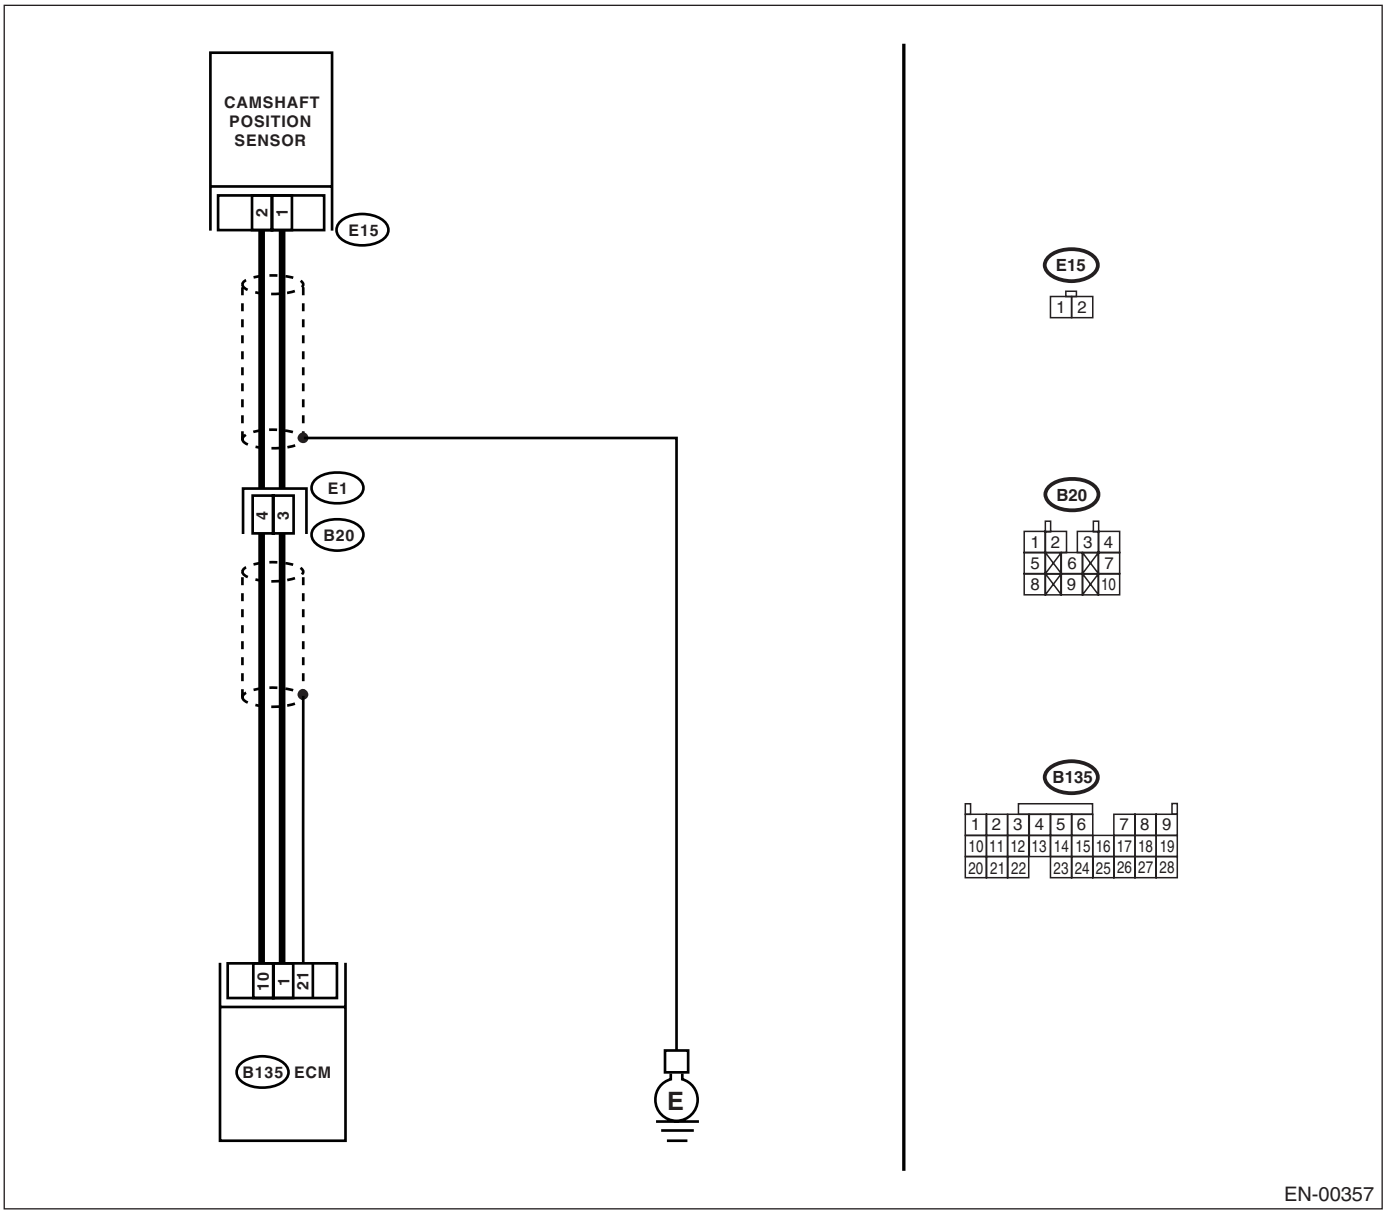

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from camshaft position sensor. 3)Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance more than 100 kΩ?	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector	Go to step **3.**
3	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 1 — Engine ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between camshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.	Go to step **4.**
4	**CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E15) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
5	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR.**	Is the camshaft position sensor installation bolt tightened securely?	Go to step **6.**	Tighten the camshaft position sensor installation bolt securely.

	Step	Check	Yes	No
6	**CHECK CAMSHAFT POSITION SENSOR.** 1)Remove the camshaft position sensor. 2)Measure the resistance between connector terminals of camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Go to step **7.**	Replace the camshaft position sensor. <Ref. to FU(H4DOTC)-30, Camshaft Position Sensor.>
7	**CHECK CONDITION OF CAMSHAFT POSITION SENSOR.** Turn the ignition switch to OFF.	Is the camshaft position sensor installation bolt tightened securely?	Go to step **8.**	Tighten the camshaft position sensor installation bolt securely.
8	**CHECK CAMSHAFT SPROCKET.** Remove the front belt cover. <Ref. to ME(H4DOTC)-59, Timing Belt Cover.>	Are the camshaft sprocket teeth cracked or damaged?	Replace the camshaft sprocket. <Ref. to ME(H4DOTC)-69, Camshaft Sprocket.>	Go to step **9.**
9	**CHECK INSTALLATION CONDITION OF TIMING BELT.** Turn the camshaft, and align alignment mark on camshaft sprocket with alignment mark on timing belt cover LH.	Is the timing belt dislocated from its proper position?	Repair the installation condition of timing belt. <Ref. to ME(H4DOTC)-60, Timing Belt Assembly.>	Replace the camshaft position sensor. <Ref. to FU(H4DOTC)-30, Camshaft Position Sensor.>

AT:DTC P0365 — CAMSHAFT POSITION SENSOR “B” CIRCUIT (BANK 1) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

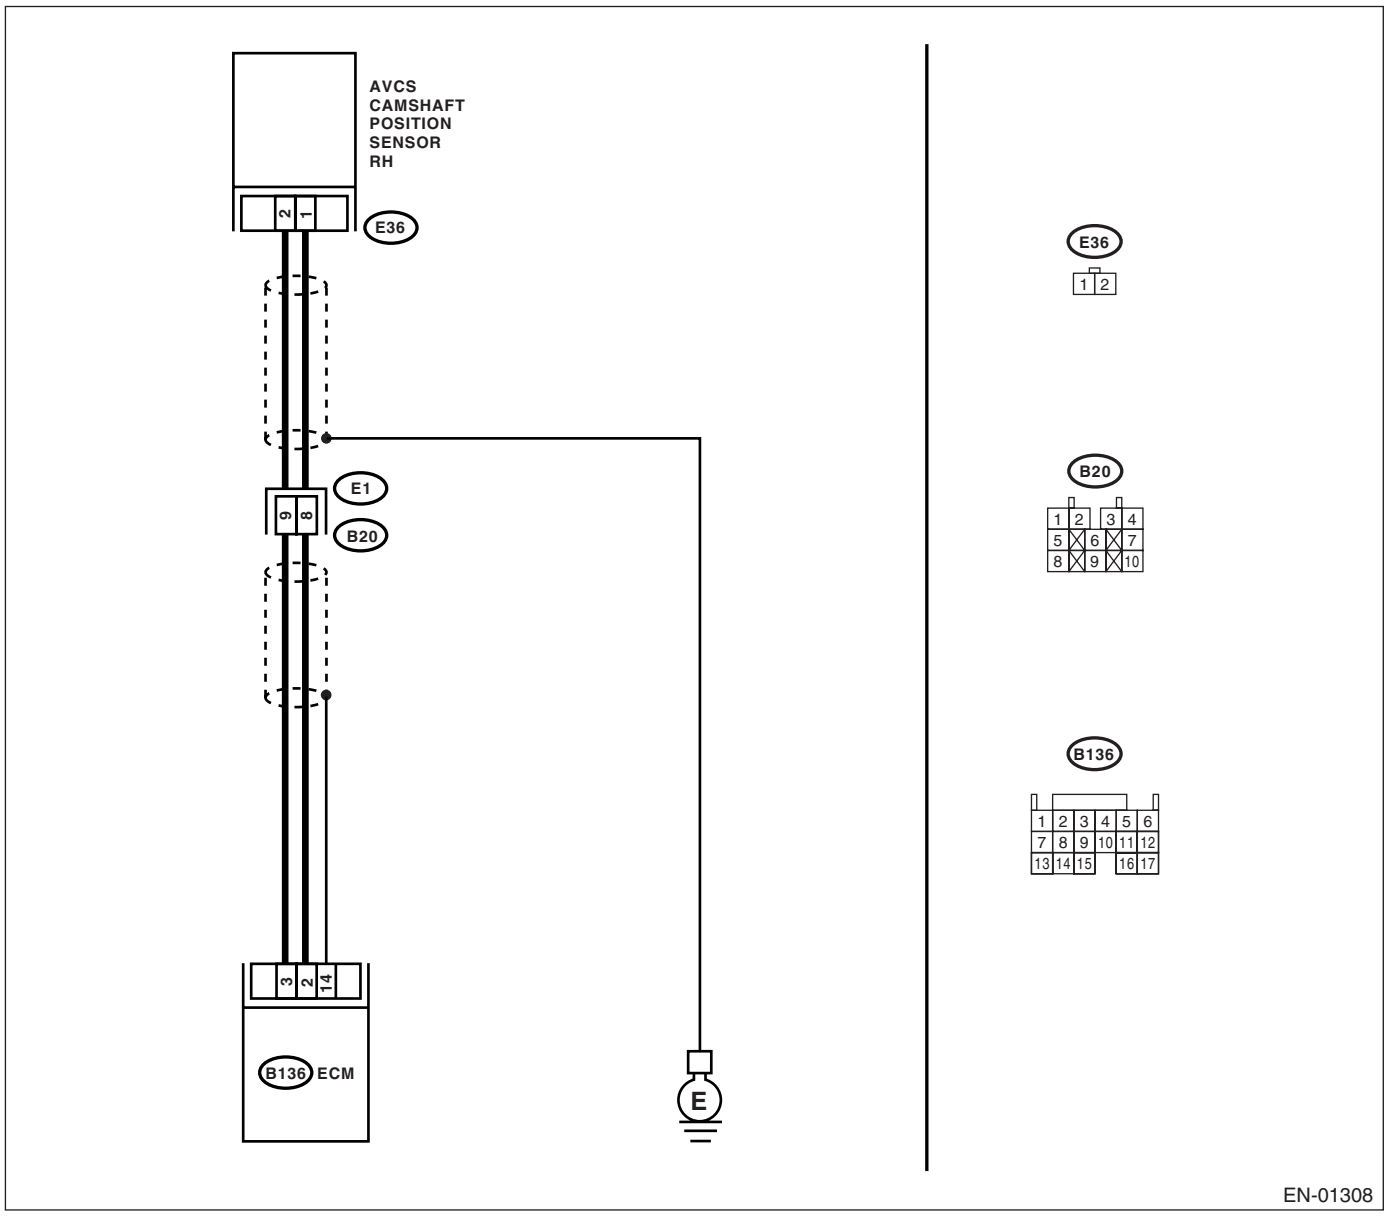

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Measure the ignition timing advance using Subaru Select Monitor or OBD-II general scan tool, while running the vehicle at approx. 30 km/h (19 MPH). NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Does the ignition timing advance smoothly change, according to engine output change? Idling: −2 — +2° Vehicle running: −2 — +50°	Repair the poor contact in connector. NOTE: In this case, repair the following: • Poor contact in AVCS camshaft position sensor • Poor contact in ECM connector	Go to step **2.**
2	**CHECK HARNESS BETWEEN AVCS CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from AVCS camshaft position sensor and ECM. 3)Measure the resistance of harness between AVCS camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E36) No. 1 — (B84) No. 2:*** ***(E36) No. 2 — (B84) No. 3:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between AVCS camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN AVCS CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between AVCS camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E36) No. 1 — Engine ground:*** ***(E36) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the ground short circuit in harness between AVCS camshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair the ground short circuit in harness together with shield.
4	**CHECK CONDITION OF AVCS CAMSHAFT POSITION SENSOR.**	Is the AVCS camshaft position sensor installation bolt tightened securely?	Go to step **5.**	Tighten the AVCS camshaft position sensor installation bolt securely.
5	**CHECK AVCS CAMSHAFT POSITION SENSOR.** 1)Remove the AVCS camshaft position sensor. 2)Measure the resistance between connector terminals of AVCS camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Check oil pressure passage and stuck of variable valve timing solenoid valve.	Replace the AVCS camshaft position sensor. <Ref. to FU(H4DOTC)-31, AVCS Camshaft Position Sensor.>

AU:DTC P0390 — CAMSHAFT POSITION SENSOR “B” CIRCUIT (BANK 2) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

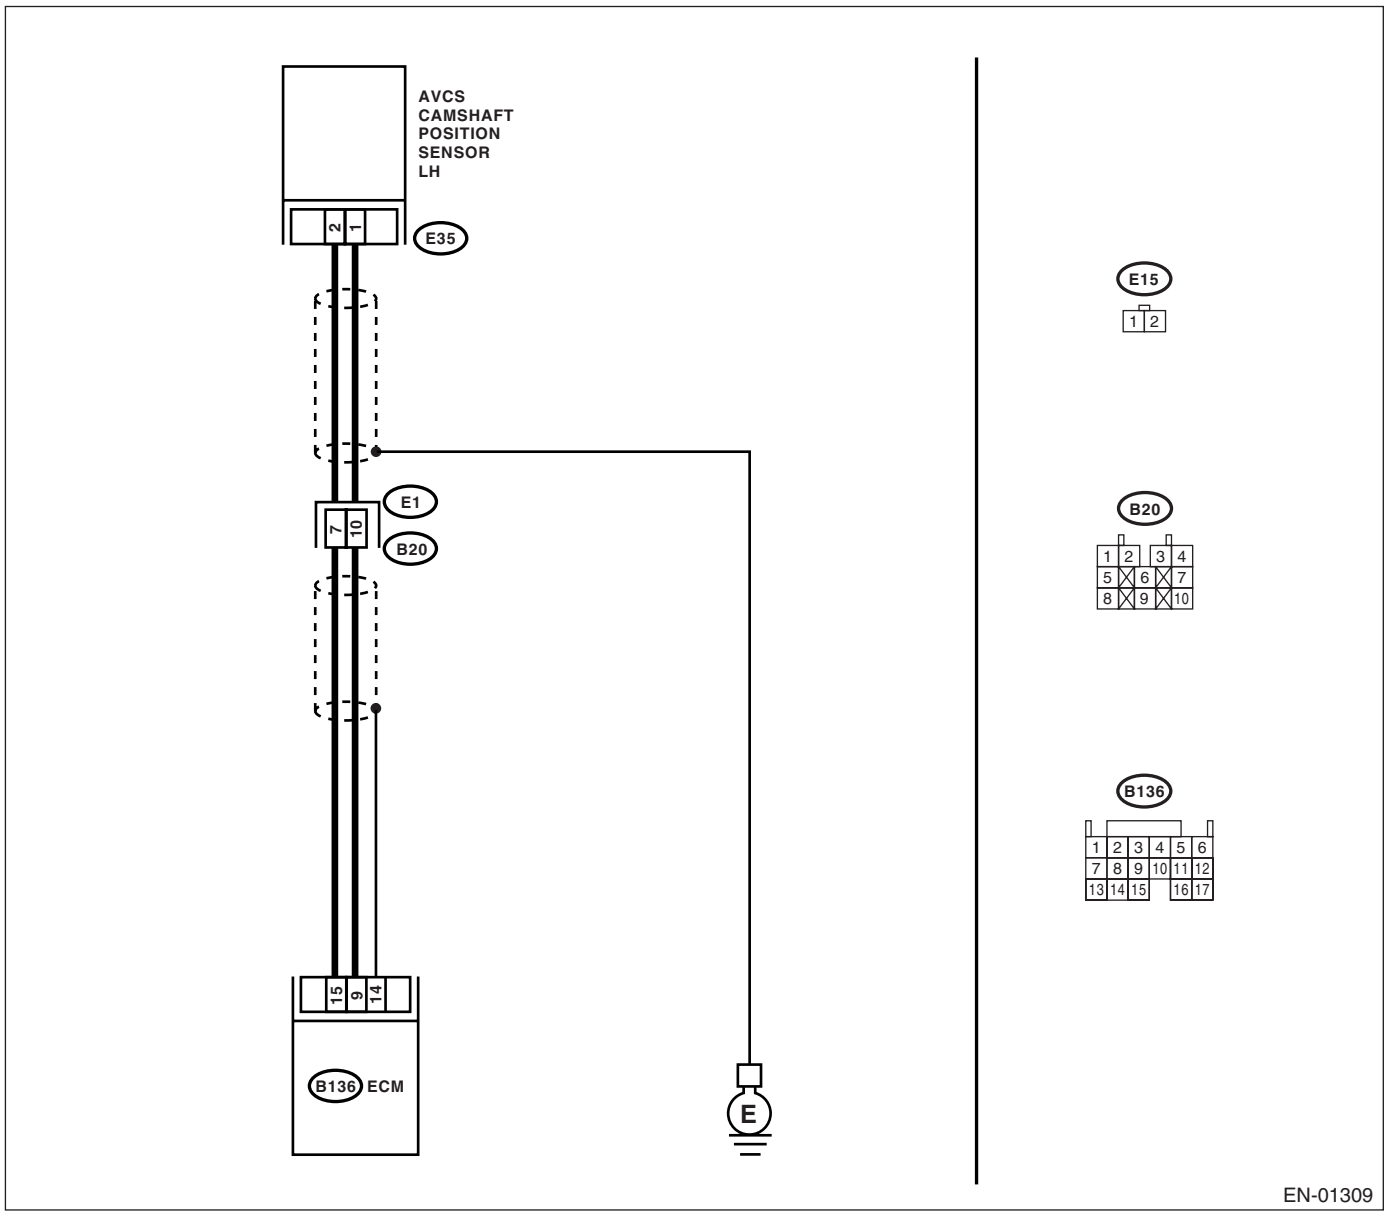

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Measure the ignition timing advance using Subaru Select Monitor or OBD-II general scan tool, while running the vehicle at approx. 30 km/h (19 MPH). NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Does the ignition timing advance smoothly change, according to engine output change? Idling: −2 — +2° Vehicle running: −2 — +50°	Repair the poor contact in connector. NOTE: In this case, repair the following: • Poor contact in AVCS camshaft position sensor • Poor contact in ECM connector	Go to step **2.**
2	**CHECK HARNESS BETWEEN AVCS CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from AVCS camshaft position sensor and ECM. 3)Measure the resistance of harness between AVCS camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E35) No. 1 — (B136) No. 9:*** ***(E35) No. 2 — (B136) No. 15:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between AVCS camshaft position sensor and ECM connector • Poor contact in ECM connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN AVCS CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.** Measure the resistance of harness between AVCS camshaft position sensor connector and engine ground. ***Connector & terminal*** ***(E35) No. 1 — Engine ground:*** ***(E35) No. 2 — Engine ground:***	Is the resistance more than 1M Ω?	Go to step **4.**	Repair the ground short circuit in harness between AVCS camshaft position sensor and ECM connector. NOTE: The harness between both connectors are shielded. Repair the ground short circuit in harness together with shield.
4	**CHECK CONDITION OF AVCS CAMSHAFT POSITION SENSOR.**	Is the AVCS camshaft position sensor installation bolt tightened securely?	Go to step **5.**	Tighten the AVCS camshaft position sensor installation bolt securely.
5	**CHECK AVCS CAMSHAFT POSITION SENSOR.** 1)Remove the AVCS camshaft position sensor. 2)Measure the resistance between connector terminals of AVCS camshaft position sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 1 — 4 kΩ?	Check oil pressure passage and stuck of variable valve timing solenoid valve.	Replace the AVCS camshaft position sensor. <Ref. to FU(H4DOTC)-31, AVCS Camshaft Position Sensor.>

AV:DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD (BANK 1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine stalls.
  - Idle mixture is out of specifications.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

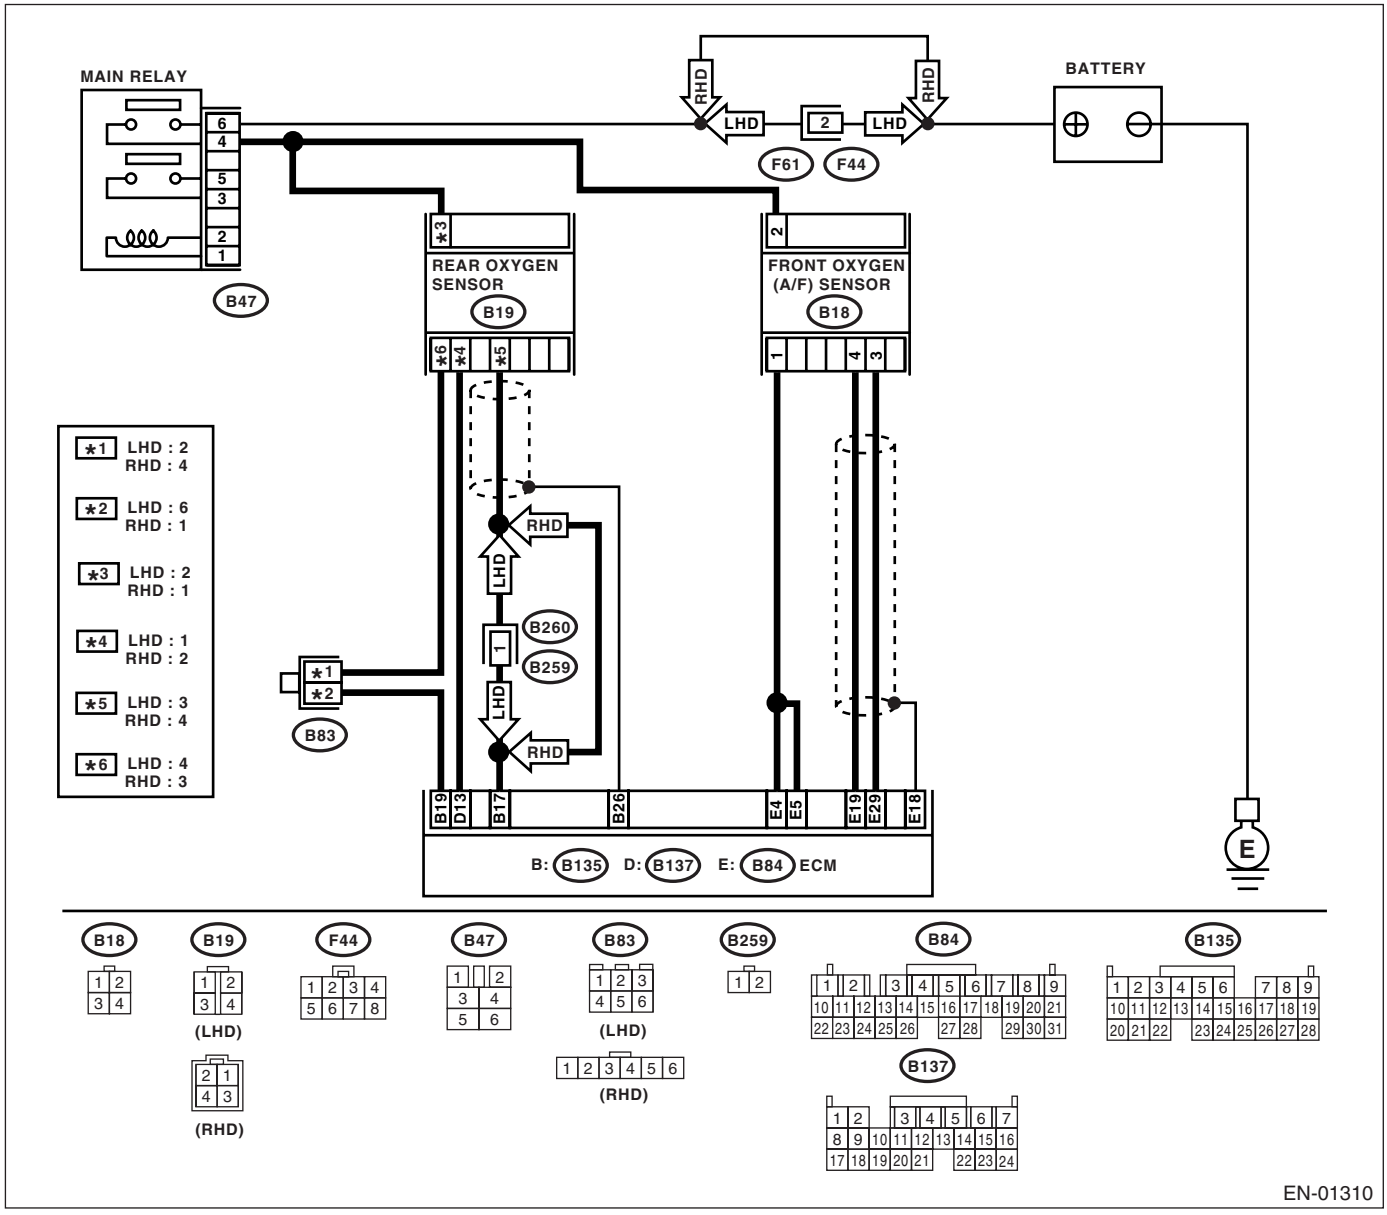

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0420.	Go to step **2.**
2	**CHECK EXHAUST SYSTEM.** Check for gas leaks or air suction caused by loose or dislocated nuts and bolts, and open hole at exhaust pipes. NOTE: Check the following positions. •Between cylinder head and front exhaust pipe •Between front exhaust pipe and front catalytic converter •Between front catalytic converter and rear catalytic converter	Is there a fault in exhaust system?	Repair or replace the exhaust system. <Ref. to EX(H4DOTC)-2, General Description.>	Go to step **3.**
3	**CHECK REAR CATALYTIC CONVERTER.** Separate the rear catalytic converter from rear exhaust pipe.	Is there damage at rear face of rear catalyst?	Replace the front catalytic converter. <Ref. to EC(H4DOTC)-3, Front Catalytic Converter.> and rear catalytic converter <Ref. to EC(H4DOTC)-4, Rear Catalytic Converter.>	Go to step **4.**
4	**CHECK FRONT CATALYTIC CONVERTER.** Remove the front catalytic converter.	Is there damage at rear face or front face of front catalyst?	Replace the front catalytic converter. <Ref. to EC(H4DOTC)-3, Front Catalytic Converter.>	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

AW:DTC P0458 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

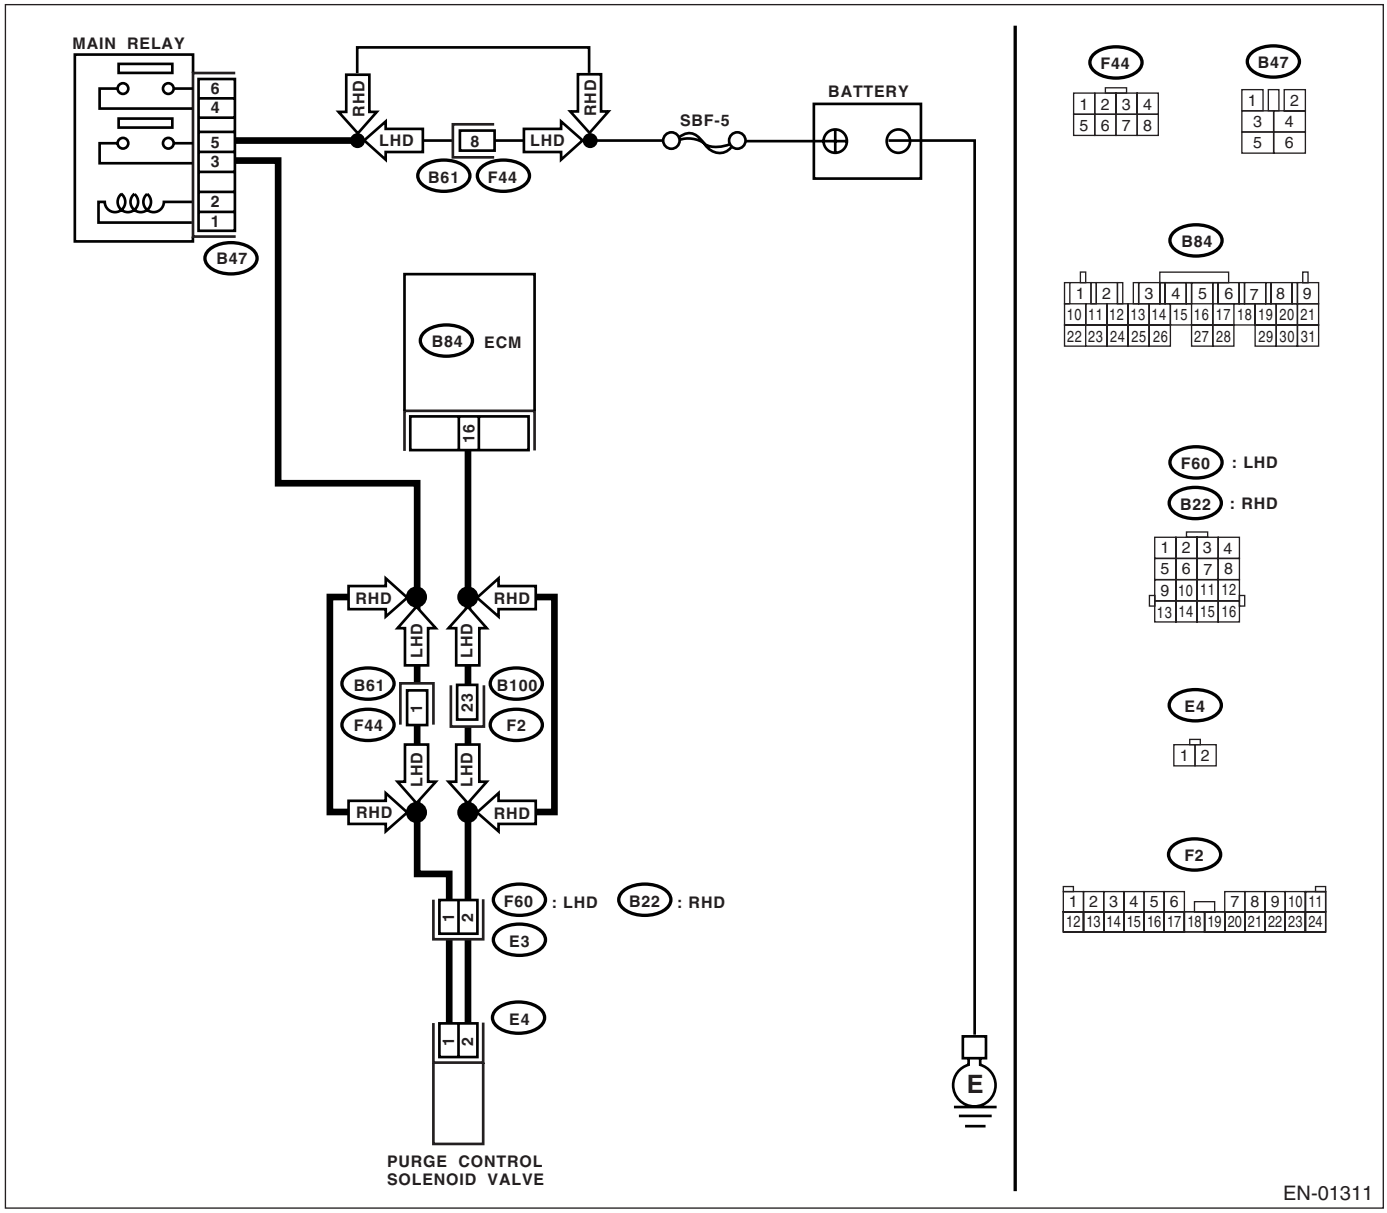

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 16 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.	Go to step **2.**
2	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from purge control solenoid valve and ECM. 3)Measure the resistance of harness between purge control solenoid valve connector and engine ground. ***Connector & terminal*** ***(E4) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the ground short circuit in harness between ECM and purge control solenoid valve connector.
3	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** Measure the resistance of harness between ECM and purge control solenoid valve of harness connector. ***Connector & terminal*** ***(B84) No. 16 — (E4) No. 2:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between ECM and purge control solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and purge control solenoid valve connector • Poor contact in coupling connector
4	**CHECK PURGE CONTROL SOLENOID VALVE.** 1)Remove the purge control solenoid valve. 2)Measure the resistance between purge control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 10 — 100 Ω?	Go to step **5.**	Replace the purge control solenoid valve. <Ref. to EC(H4DOTC)-7, Purge Control Solenoid Valve.>
5	**CHECK POWER SUPPLY TO PURGE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to ON. 2)Measure the voltage between purge control solenoid valve and engine ground. ***Connector & terminal*** ***(E4) No. 1 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Repair the open circuit in harness between main relay and purge control solenoid valve connector.
6	**CHECK POOR CONTACT.** Check poor contact in purge control solenoid valve connector.	Is there poor contact in purge control solenoid valve connector?	Repair the poor contact in purge control solenoid valve connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

AX:DTC P0459 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

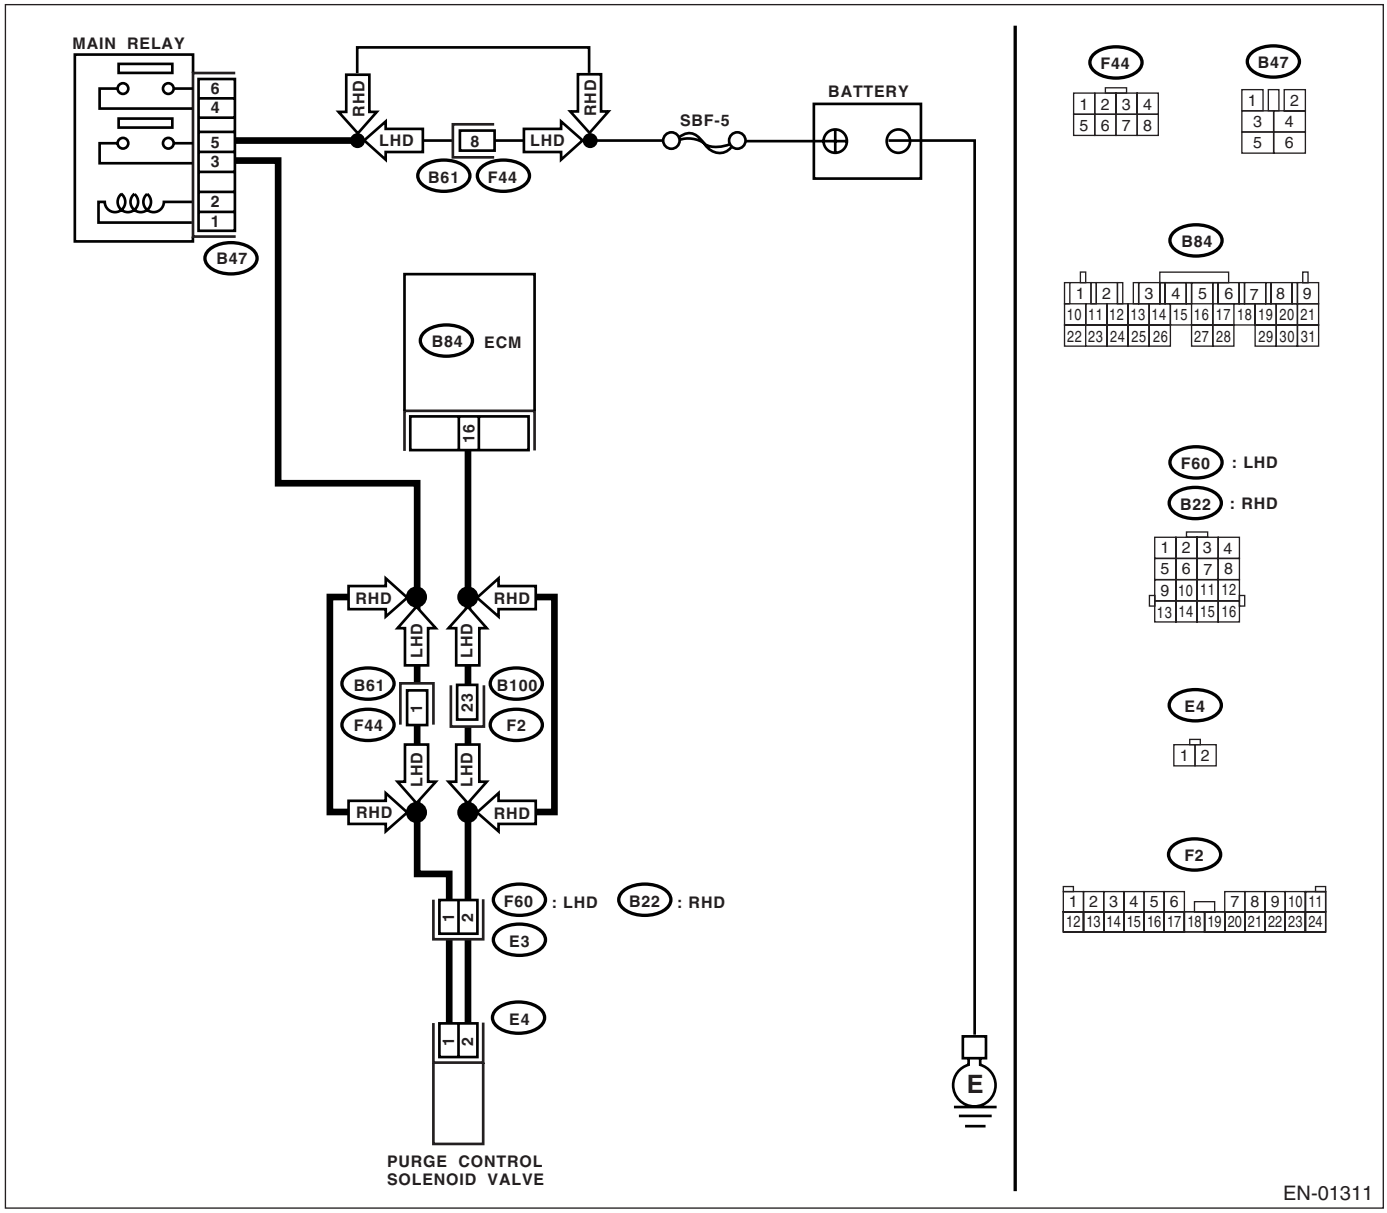

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector at the lower portion of instrument panel (on the driver's side). 3)Turn the ignition switch to ON. 4)While operating the purge control solenoid valve, measure the voltage between ECM and chassis ground. NOTE: Purge control solenoid valve operation can be executed using the Subaru Select Monitor. For procedure, refer to “Compulsory Valve Operation Check Mode”. <Ref. to EN(H4DOTC)-49, Compulsory Valve Operation Check Mode.> ***Connector & terminal*** ***(B84) No. 16 (+) — Chassis ground (–):***	Is the voltage 0 — 13 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. In this case, repair the poor contact in ECM connector.
2	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 16 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **4.**	Go to step **3.**
3	**CHECK POOR CONTACT.** Check the poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from purge control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 16 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and purge control solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **5.**
5	**CHECK PURGE CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between purge control solenoid valve terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Replace the purge control solenoid valve <Ref. to EC(H4DOTC)-7, Purge Control Solenoid Valve.> and ECM <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **6.**
6	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

AY:DTC P0461 — FUEL LEVEL SENSOR CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

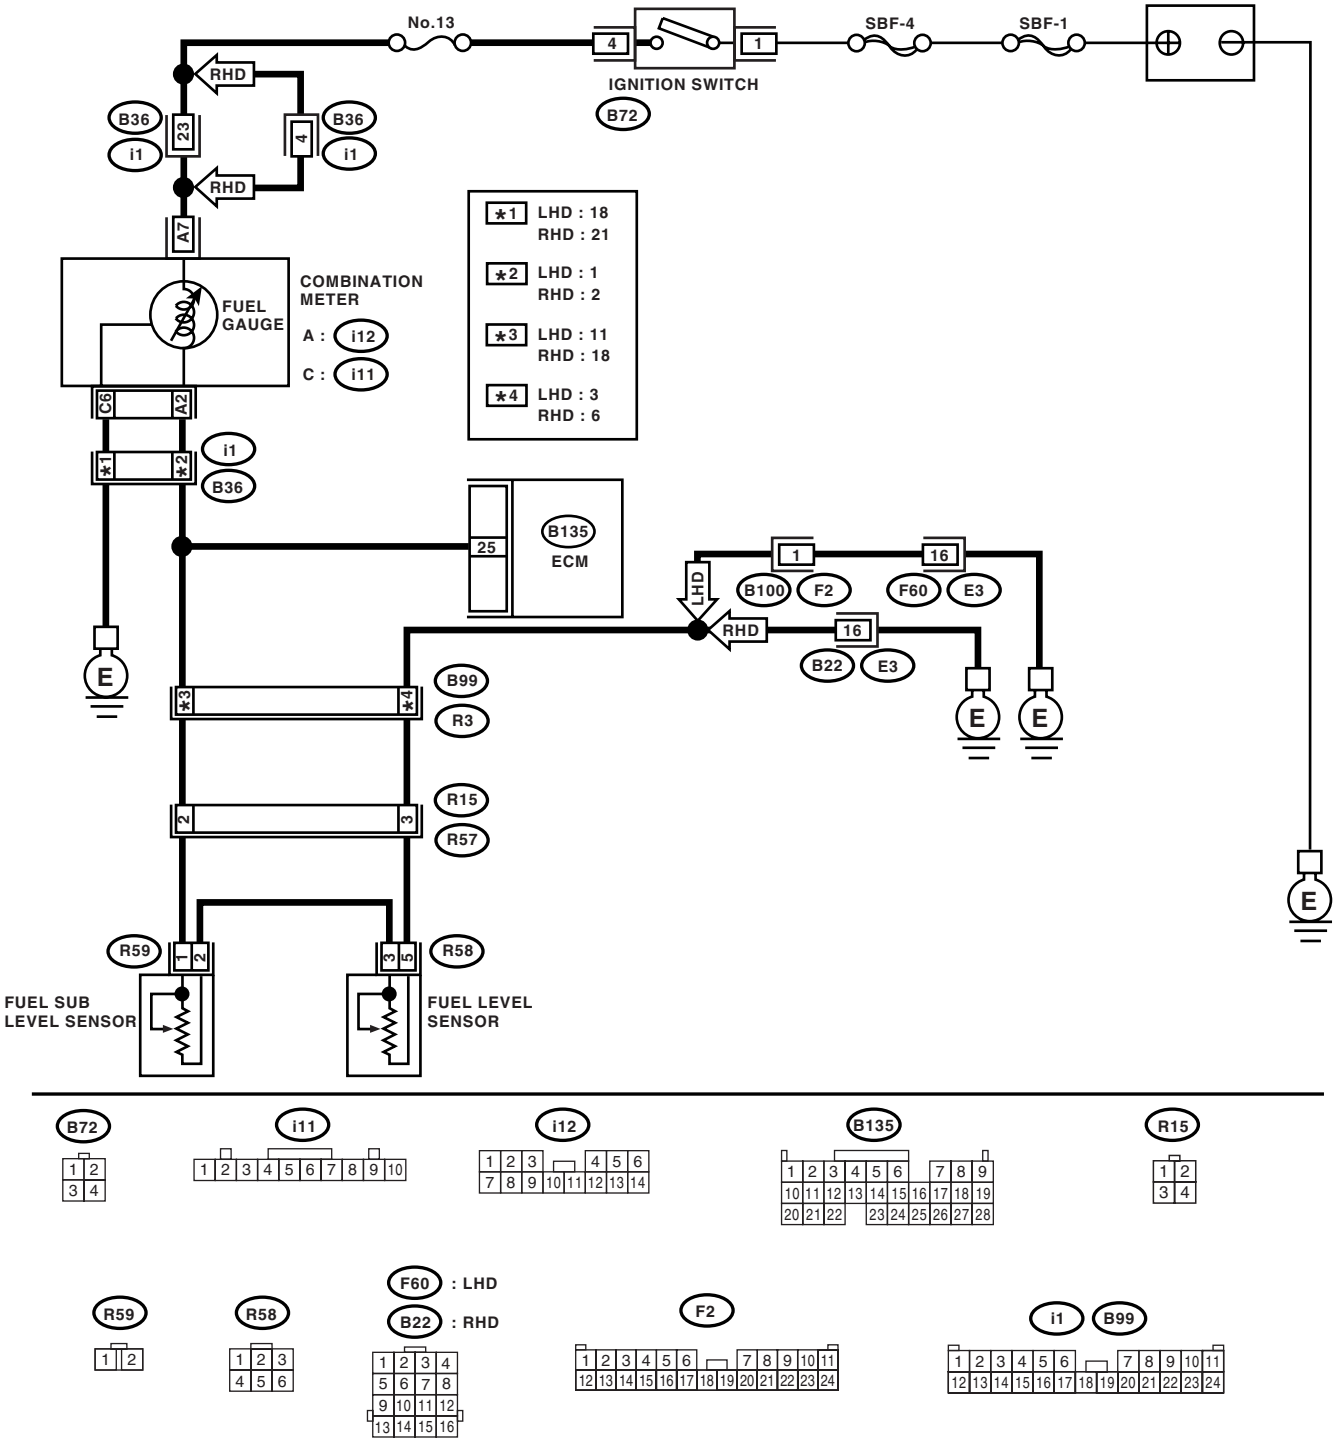

EN-01312

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0461.	Replace the fuel level sensor. <Ref. to FU(H4DOTC)-63, Fuel Level Sensor.> and fuel sub level sensor <Ref. to FU(H4DOTC)-64, Fuel Sub Level Sensor.>

AZ:DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

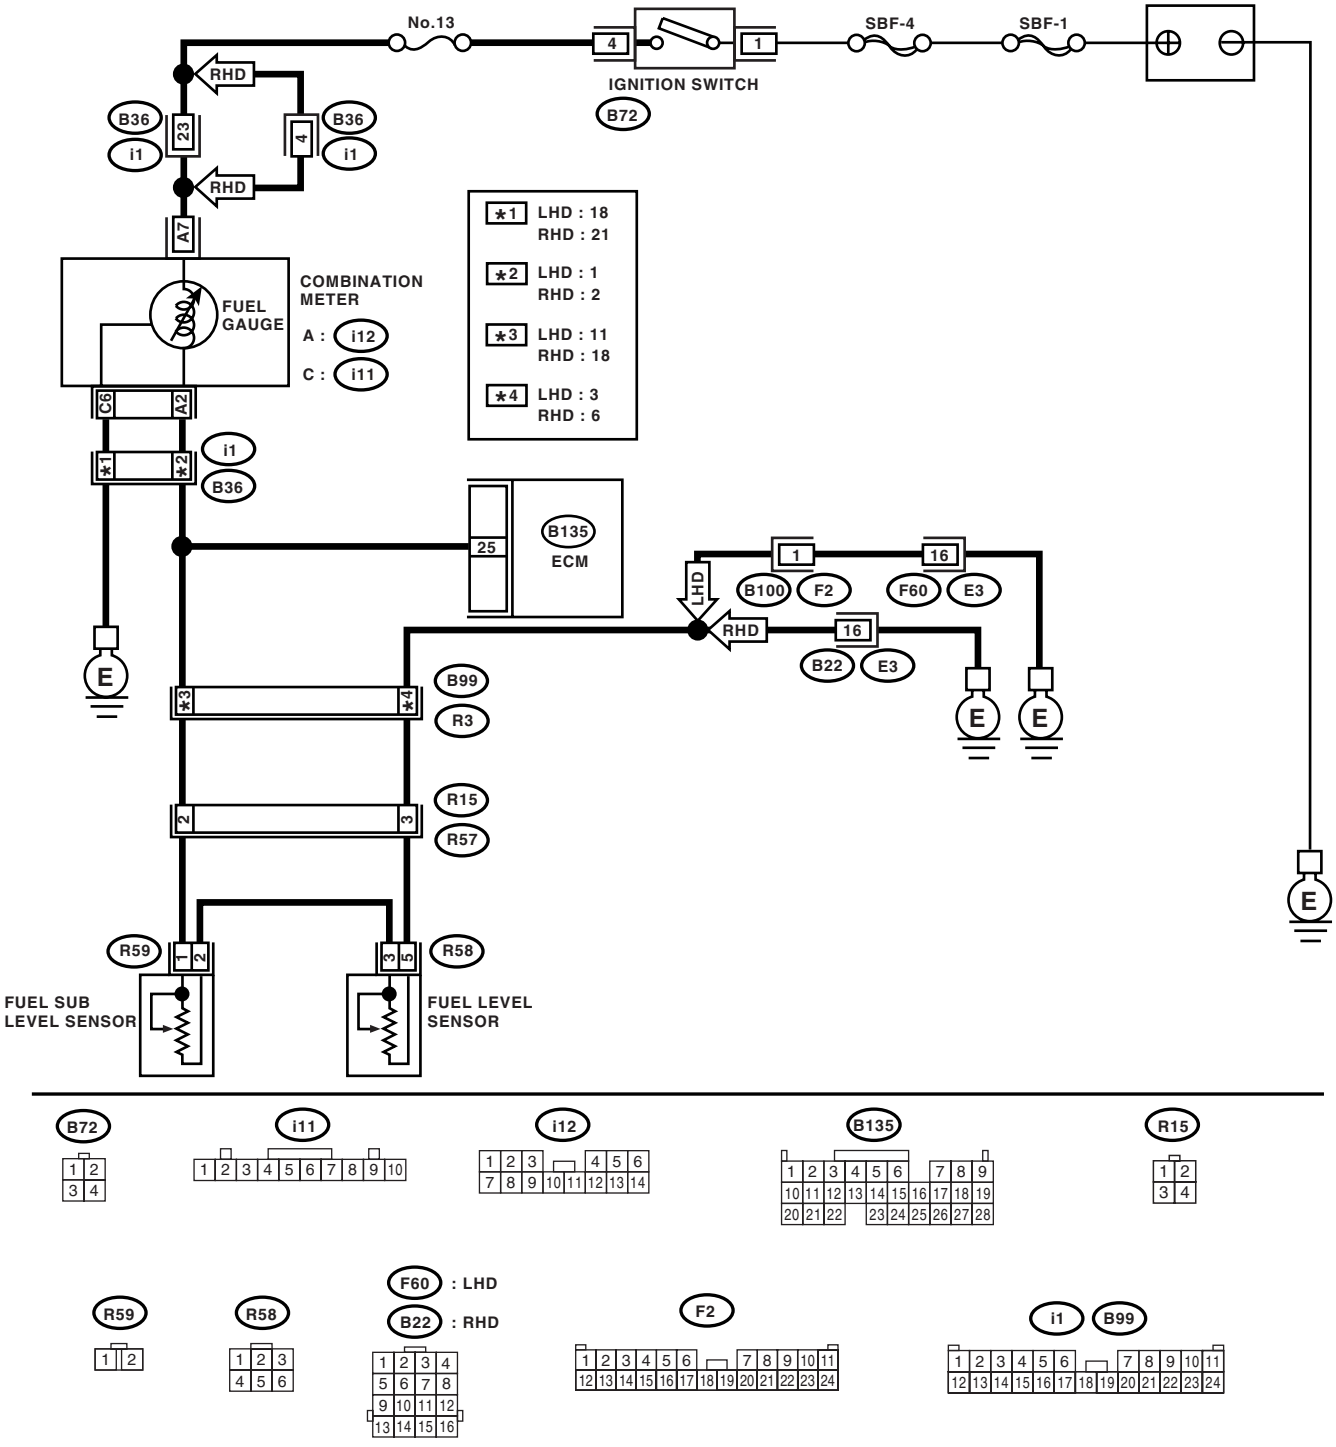

EN-01312

	Step	Check	Yes	No
1	**CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER.**	Does the speedometer and tachometer operate normally?	Go to step **2.**	Repair or replace the combination meter. <Ref. to IDI-3, Combination Meter System.>
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. (engine OFF) 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage less than 0.12 V?	Go to step **4.**	Go to step **3.**
3	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR)** Read the data of fuel level sensor signal using Subaru Select Monitor. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.>	Shake the ECM harness and connector, while monitoring value of Subaru Select Monitor. Does the voltage change?	Repair the poor contact in ECM connector.	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in combination meter connector • Poor contact in ECM connector • Poor contact in coupling connectors
4	**CHECK INPUT VOLTAGE OF ECM.** 1)Turn the ignition switch to OFF. 2)Separate the fuel tank cord connector (R57) and rear wiring harness connector (R15). 3)Turn the ignition switch to ON. 4)Measure the voltage of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage more than 0.12 V?	Go to step **5.**	Go to step **6.**
5	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from connector (i10), (i11) and ECM connector. 3)Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 25 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the ground short circuit in harness between ECM and combination meter connector.
6	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER.** Measure the resistance between ECM and combination meter connector. ***Connector & terminal*** ***(B135) No. 25 — (i12) No. 2:***	Is the resistance less than 10 Ω?	Repair or replace the combination meter. <Ref. to IDI-3, Combination Meter System.>	Repair the open circuit between ECM and combination meter connector. NOTE: In this case, repair the following: Poor contact in coupling connector

	Step	Check	Yes	No
7	**CHECK FUEL TANK CORD.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from fuel sub level sensor. 3)Measure the resistance between fuel sub level sensor and chassis ground. ***Connector & terminal*** ***(R59) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair the ground short circuit in fuel tank cord.
8	**CHECK FUEL TANK CORD.** 1)Disconnect the connector from fuel pump assembly. 2)Measure the resistance between fuel pump assembly and chassis ground. ***Connector & terminal*** ***(R59) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the ground short circuit in fuel tank cord.
9	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-61, Fuel Pump.> 2)Measure the resistance between fuel level sensor and terminals with its float set to the full position. ***Terminals*** ***No. 3 — No. 5:***	Is the resistance 0.5 — 2.5 Ω?	Go to step **10.**	Replace the fuel level sensor.
10	**CHECK FUEL SUB LEVEL SENSOR.** 1)Remove the fuel sub level sensor. <Ref. to FU(H4DOTC)-64, Fuel Sub Level Sensor.> 2)Measure the resistance between fuel sub level sensor and terminals with its float set to the full position. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 0.5 — 2.5 Ω?	Repair the poor contact in harness between ECM and combination meter connector.	Replace the fuel sub level sensor.

BA:DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

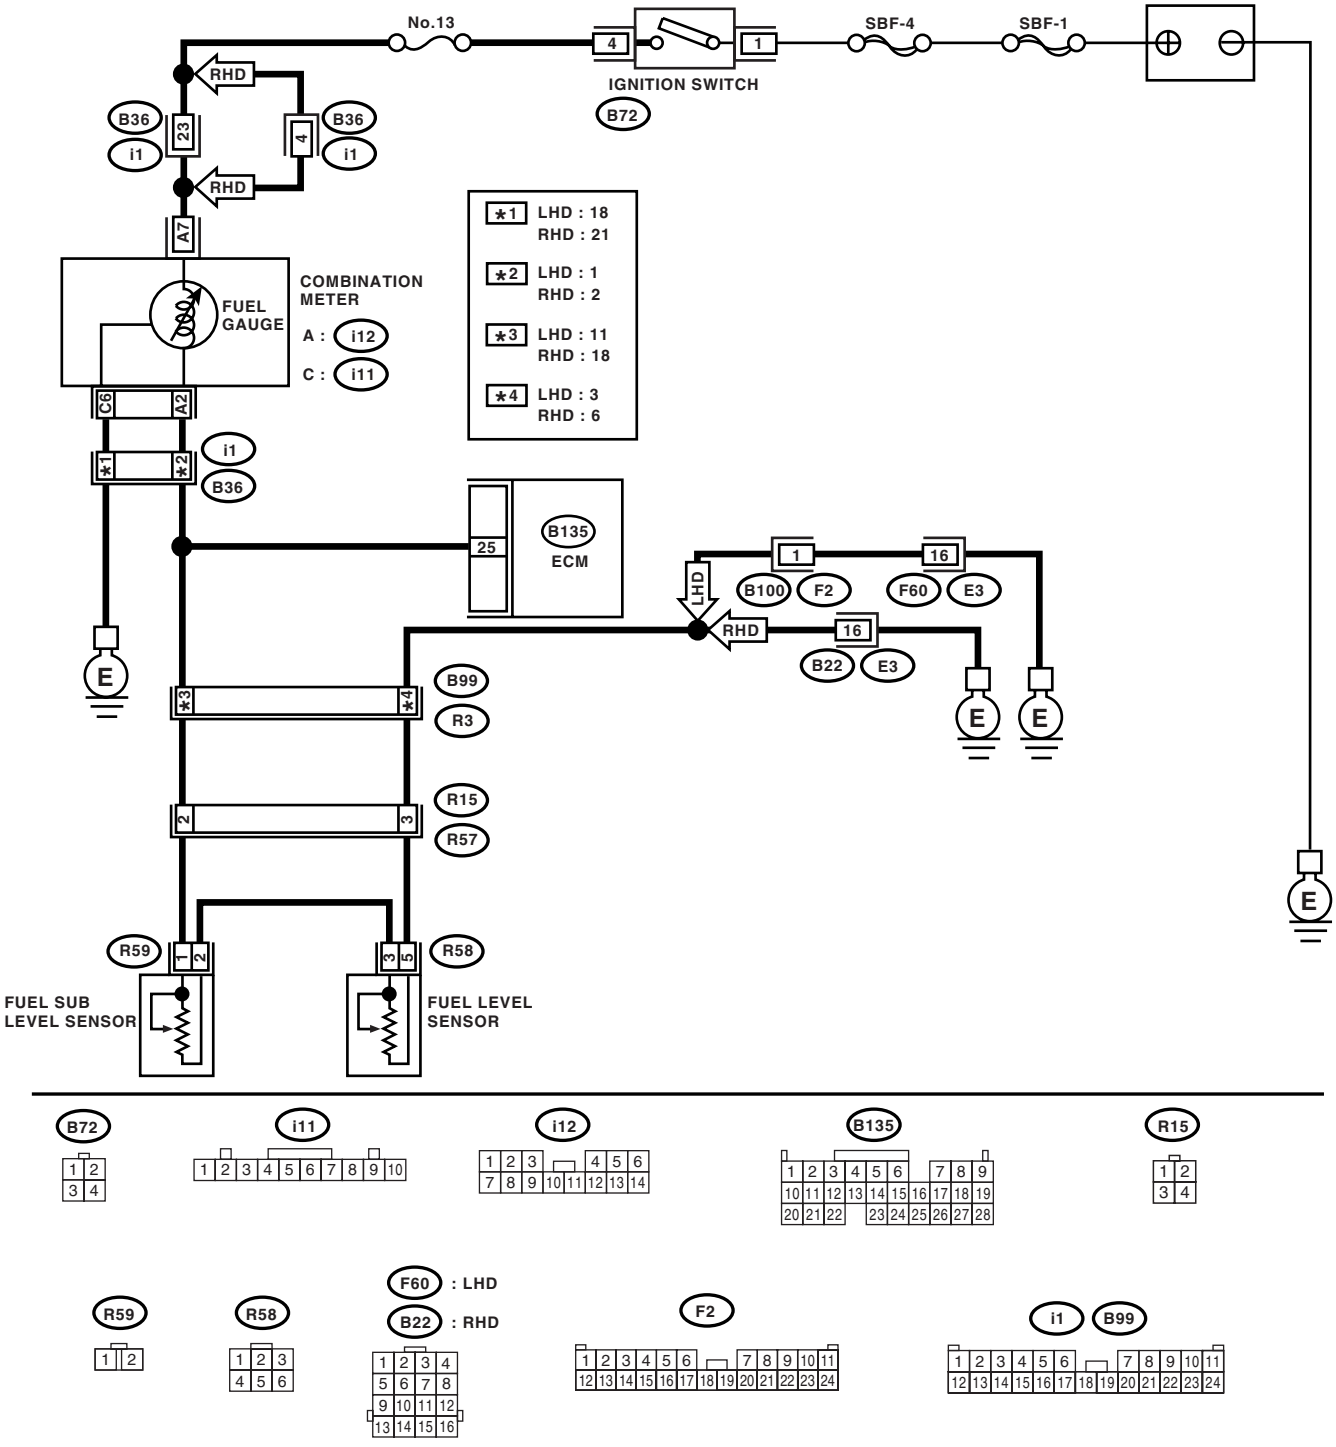

EN-01312

	Step	Check	Yes	No
1	**CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER.**	Does the speedometer and tachometer operate normally?	Go to step **2.**	Repair or replace the combination meter. <Ref. to IDI-3, Combination Meter System.>
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. (engine OFF) 2)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage more than 4.75 V?	Go to step **3.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in fuel pump connector • Poor contact in coupling connector
3	**CHECK INPUT VOLTAGE OF ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the combination meter connector (i11) and ECM connector. 3)Turn the ignition switch to ON. 4)Measure the voltage of harness between ECM and chassis ground. ***Connector & terminal*** ***(B135) No. 25 (+) — Chassis ground (−):***	Is the voltage more than 4.75 V?	Go to step **4.**	Repair the battery short circuit between ECM and combination meter connector.
4	**CHECK HARNESS BETWEEN ECM AND FUEL TANK CORD.** 1)Turn the ignition switch to OFF. 2)Separate the fuel tank cord connector (R57) and rear wiring harness connector (R15). 3)Measure the resistance between ECM and fuel tank cord. ***Connector & terminal*** ***(B135) No. 25 — (R15) No. 2:***	Is the resistance less than 5 Ω?	Go to step **5.**	Repair the open circuit between ECM and fuel tank cord.
5	**CHECK HARNESS BETWEEN FUEL TANK CORD AND CHASSIS GROUND.** Measure the resistance between fuel tank cord and chassis ground. ***Connector & terminal*** ***(R15) No. 6 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **6.**	Repair the open circuit between fuel tank cord and chassis ground. NOTE: In this case, repair the following: Poor contact in coupling connectors
6	**CHECK FUEL TANK CORD.** 1)Disconnect the connector from fuel level sensor. 2)Measure the resistance between fuel level sensor and coupling connector. ***Connector & terminal*** ***(R57) No. 6 — (R58) No. 5:***	Is the resistance less than 10 Ω?	Go to step **7.**	Repair the open circuit between coupling connector and fuel level sensor.

	Step	Check	Yes	No
7	**CHECK FUEL TANK CORD.** 1)Disconnect the connector from fuel sub level sensor. 2)Measure the resistance between fuel level sensor and fuel sub level sensor. ***Connector & terminal*** ***(R58) No. 3 — (R59) No. 2:***	Is the resistance less than 10 Ω	Go to step **8.**	Repair the open circuit between fuel level sensor and fuel sub level sensor.
8	**CHECK FUEL TANK CORD.** Measure the resistance between fuel sub level sensor and coupling connector. ***Connector & terminal*** ***(R57) No. 2 — (R59) No. 1:***	Is the resistance less than 10 Ω?	Go to step **9.**	Repair the open circuit between coupling connector and fuel sub level sensor.
9	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-61, Fuel Pump.> 2)While moving the fuel level sensor float up and down, measure the resistance between fuel level sensor terminals. ***Terminals*** ***No. 3 — No. 5:***	Is the resistance more than 53 Ω?	Replace the fuel level sensor. <Ref. to FU(H4DOTC)-63, Fuel Level Sensor.>	Go to step **10.**
10	**CHECK FUEL SUB LEVEL SENSOR.** 1)Remove the fuel sub level sensor. <Ref. to FU(H4DOTC)-64, Fuel Sub Level Sensor.> 2)While moving the fuel sub level sensor float up and down, measure the resistance between fuel sub level sensor terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance more than 45 Ω?	Replace the fuel sub level sensor. <Ref. to FU(H4DOTC)-64, Fuel Sub Level Sensor.>	Replace the combination meter. <Ref. to IDI-11, Combination Meter Assembly.>

BB:DTC P0464 — FUEL LEVEL SENSOR CIRCUIT INTERMITTENT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

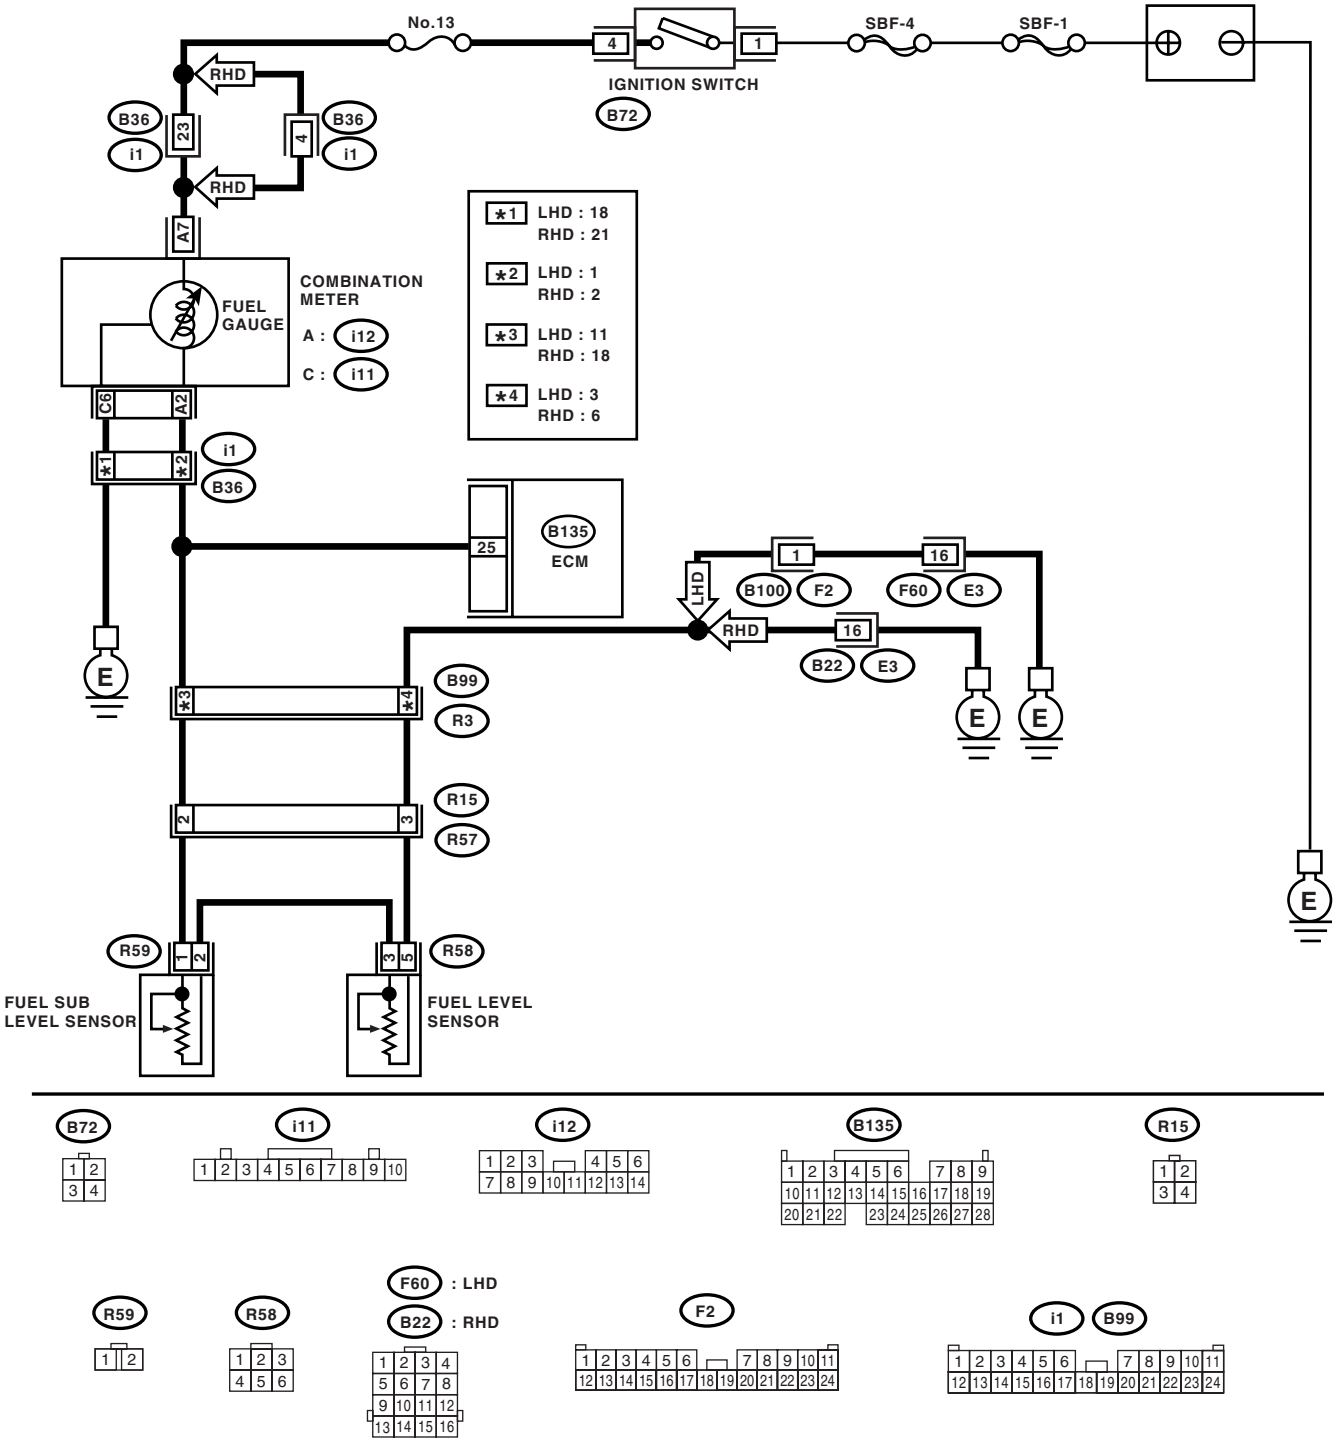

EN-01312

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-61, Fuel Pump.> 2)While moving the fuel level sensor float up and down, make sure that the resistance between fuel level sensor terminals changes smoothly. ***Terminals*** ***No. 3 — No. 5:***	Does the resistance change smoothly approx. 0.5 Ω — 52 Ω?	Go to step **3.**	Replace the fuel level sensor. <Ref. to FU(H4DOTC)-63, Fuel Level Sensor.>
3	**CHECK FUEL SUB LEVEL SENSOR.** 1)Remove the fuel sub level sensor. <Ref. to FU(H4DOTC)-64, Fuel Sub Level Sensor.> 2)While moving the fuel sub level sensor float up and down, make sure that the resistance between fuel level sensor terminals changes smoothly. ***Terminals*** ***No. 1 — No. 2:***	Does the resistance change smoothly approx. 0.5 Ω — 44 Ω?	Repair the poor contact in ECM, combination meter and coupling connectors.	Replace the fuel sub level sensor. <Ref. to FU(H4DOTC)-64, Fuel Sub Level Sensor.>

BC:DTC P0483 — COOLING FAN RATIONALITY CHECK —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Occurrence of noise
  - Overheating

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

NOTE:
If the vehicle, with the engine idling, is placed very close to a wall or another vehicle, preventing normal cooling function, the OBD system may detect malfunction.

- **WIRING DIAGRAM:**

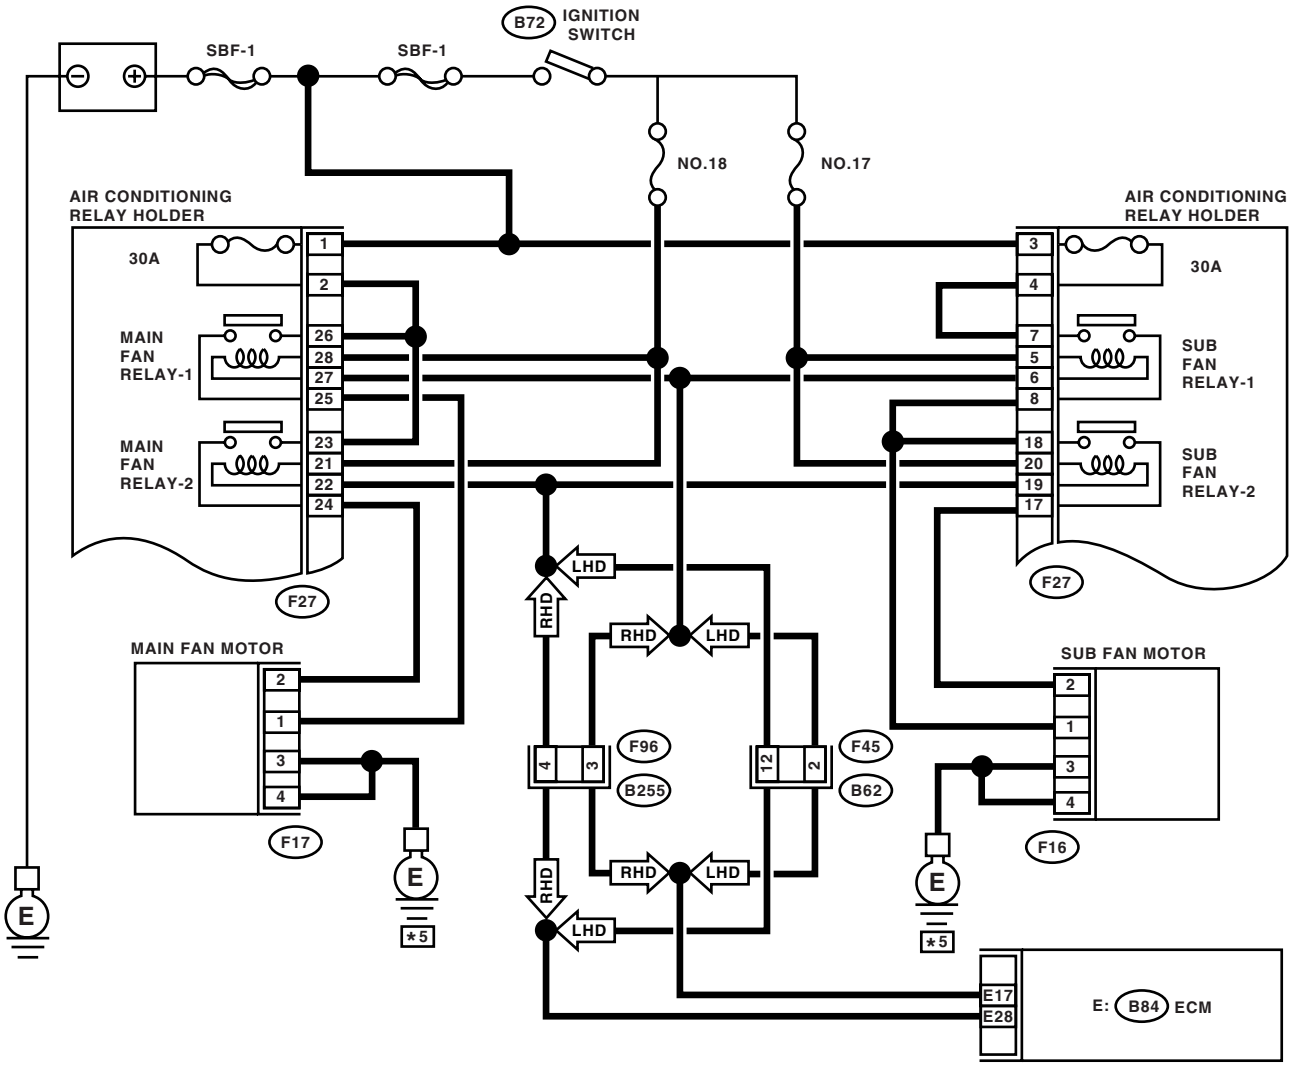

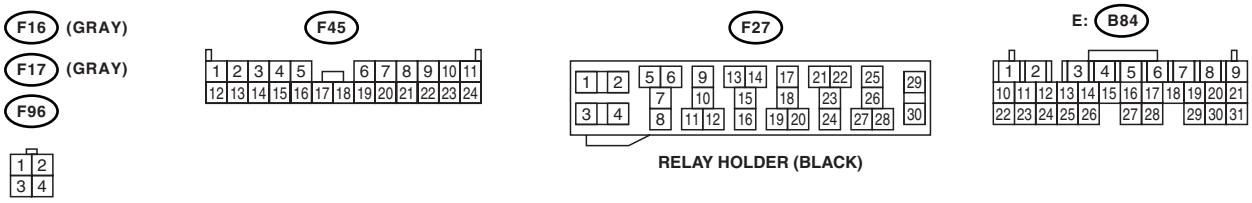

CO-00207

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Check the radiator fan, fan motor and thermostat. <Ref. to CO(H4SO)-25, Radiator Main Fan and Fan Motor.> and <Ref. to CO(H4SO)-26, Radiator Sub Fan and Fan Motor.> If thermostat is stuck, replace thermostat.

BD:DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

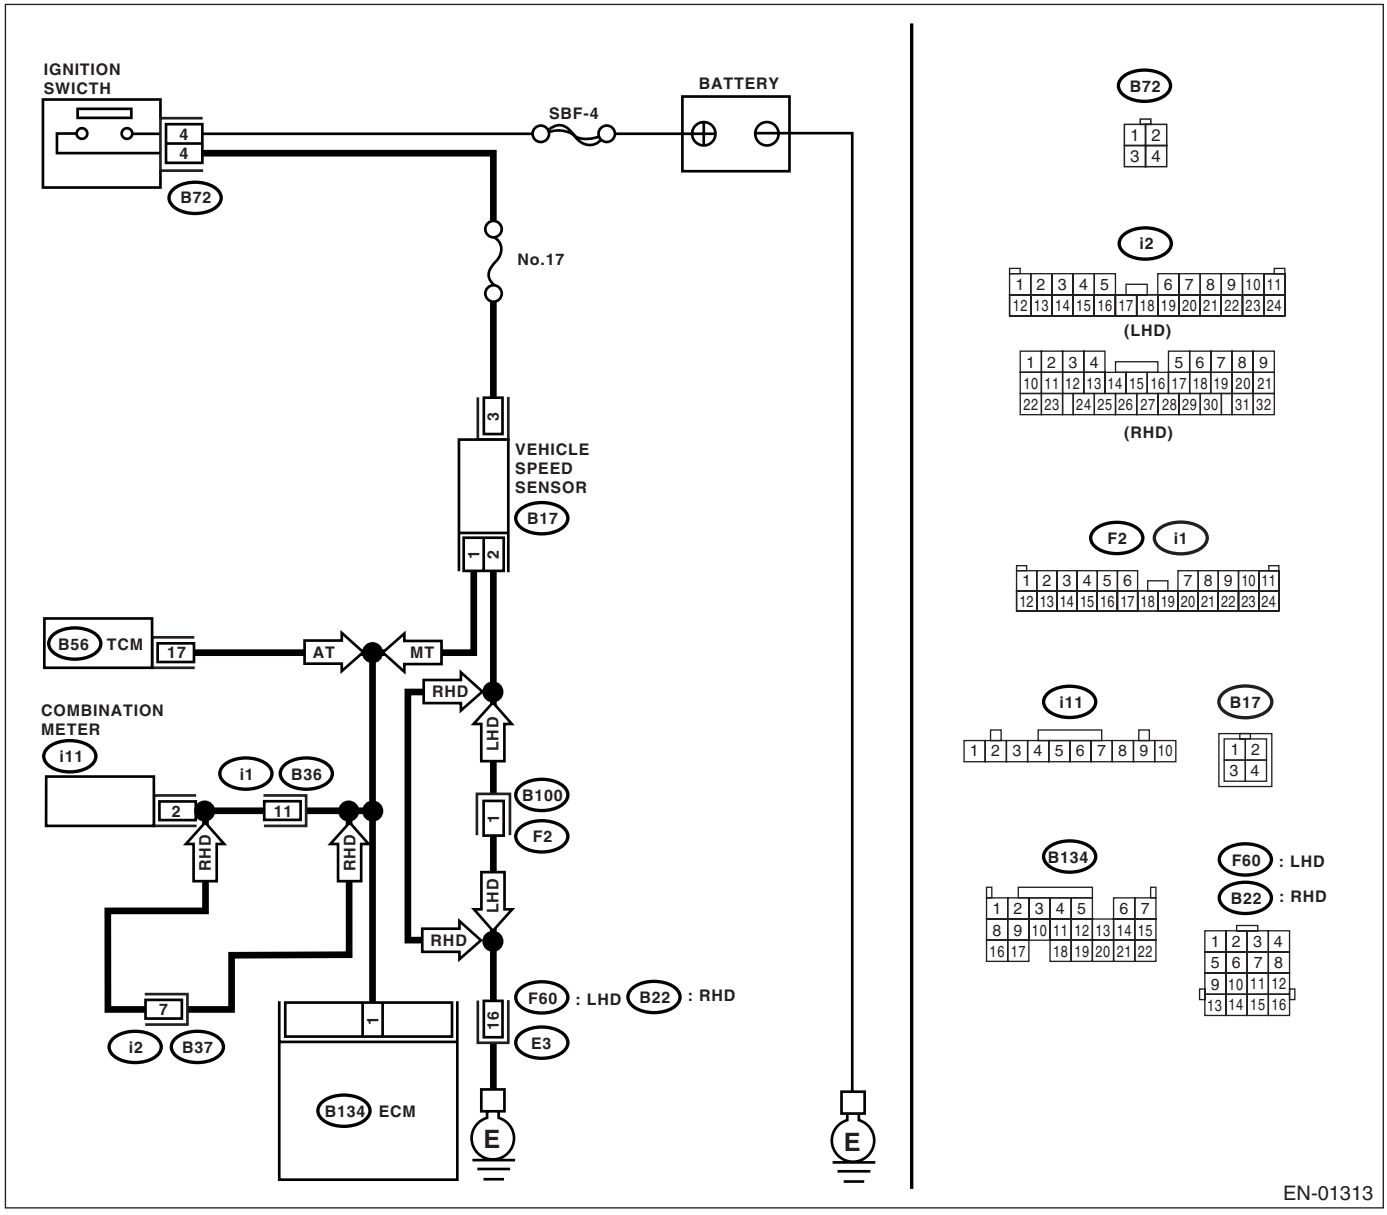

Step		Check	Yes	No
1	**CHECK TRANSMISSION TYPE.**	Is the transmission type AT?	Go to step **2.**	Go to step **4.**

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 17 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the ground short circuit in harness between ECM and TCM connector.
3	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair poor contact in TCM connector.	Contact your Subaru distributor service.
4	**CHECK HARENESS BETWEEN VEHICLE SPEED SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from vehicle speed sensor and ECM. 3)Measure the resistance of harness between vehicle speed sensor connector and chassis ground. ***Connector & terminal*** ***(B17) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the ground short circuit in harness between vehicle speed sensor and ECM connector.
5	**CHECK POOR CONTACT.** Check poor contact in the vehicle speed sensor connector.	Is there poor contact in the vehicle speed sensor connector?	Repair poor contact in the vehicle speed sensor connector.	Replace the vehicle speed sensor. <Ref. to 5MT-51, Vehicle Speed Sensor.>

BE:DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

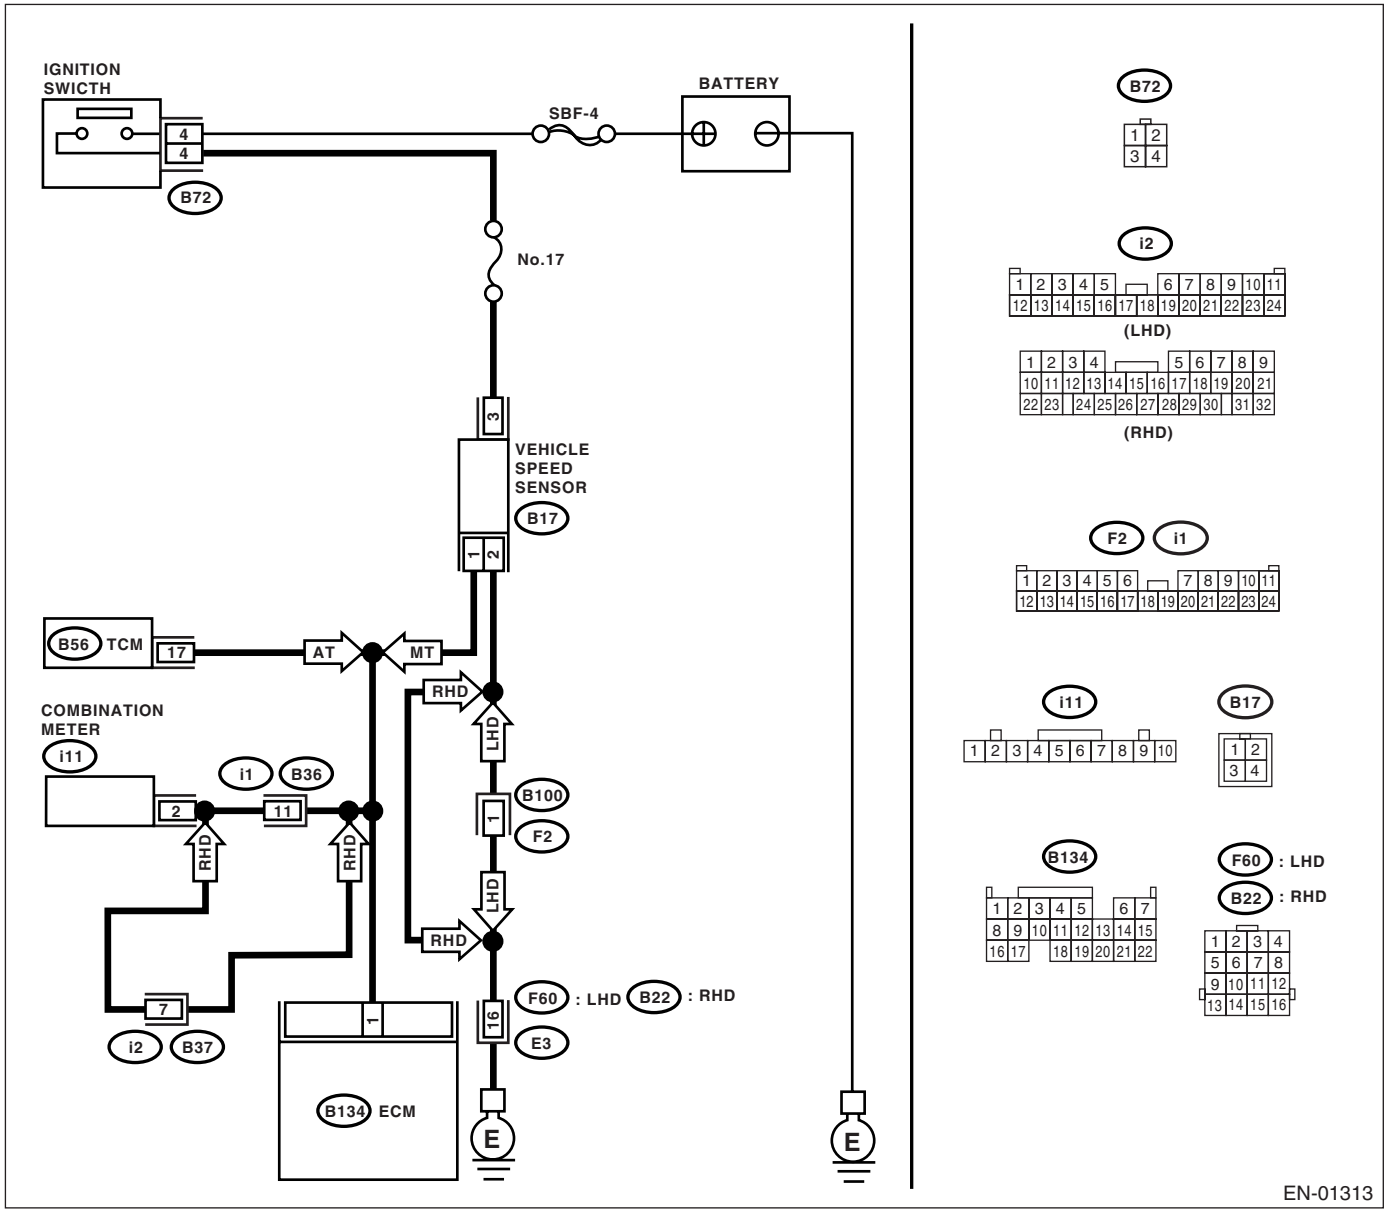

Step		Check	Yes	No
1	**CHECK TRANSMISSION TYPE.**	Is the transmission type AT?	Go to step **2.**	Go to step **3.**

	Step	Check	Yes	No
2	**CHECK DTC P0720 ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0720?	Check the front vehicle speed sensor signal circuit. <Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Go to step **3.**
3	**CHECK SPEEDOMETER OPERATION IN COMBINATION METER.**	Does the speedometer operate normally?	Go to step **4.**	Check the speedometer. <Ref. to IDI-14, Speedometer.>
4	**CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from combination meter. 3)Measure the resistance between ECM and combination meter. ***Connector & terminal*** ***(B134) No. 1 — (i11) No. 2:***	Is the resistance less than 10 Ω?	Repair the poor contact in ECM connector.	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and combination meter connector • Poor contact in ECM connector • Poor contact in combination meter connector • Poor contact in coupling connector

BF:DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine is difficult to start.
  - Engine does not start.
  - Erroneous idling
  - Engine stalls.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

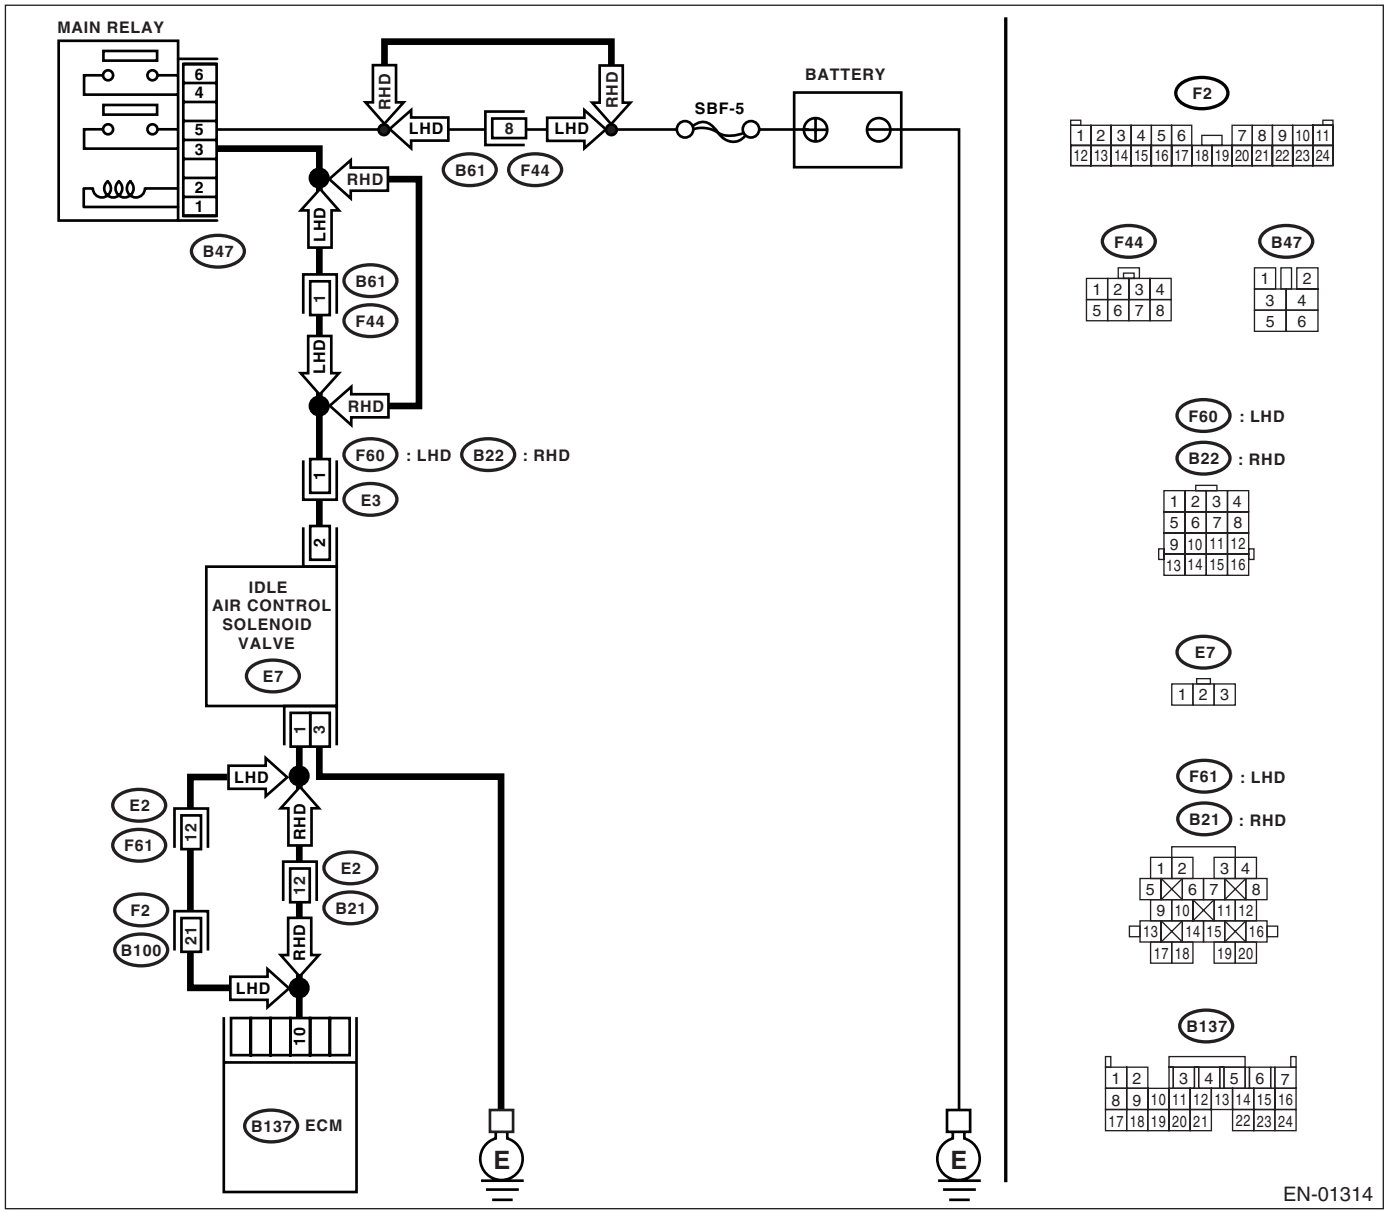

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0506.	Go to step **2.**
2	**CHECK IDLE AIR CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4DOTC)-36, REMOVAL, Idle Air Control Solenoid Valve.> 3)Using an air gun, force air into the idle air control solenoid valve by-pass air inlet. Confirm that forced air subsequently escapes from both main air passage and assist air passage.	Does air flow out?	Go to step **4.**	Replace the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.> After replace, Go to step **3.**
3	**CHECK IDLE AIR CONTROL SOLENOID VALVE DUTY RATIO.** 1)Turn the ignition switch to ON. 2)Start the engine, and warm-up the engine. 3)Turn all accessory switches to OFF. 4)Read the data of idle air control solenoid valve duty ratio using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedures, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the duty ratio more than 60 %?	Go to step **4.**	END.
4	**CHECK BY-PASS AIR LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4DOTC)-36, REMOVAL, Idle Air Control Solenoid Valve.> 3)Remove the throttle body to intake manifold. <Ref. to FU(H4DOTC)-13, REMOVAL, Throttle Body.> 4)Using an air gun, force air into the solenoid valve installation area and throttle valve interior. Confirm that forced air subsequently escapes from both these areas.	Does air flow out?	Replace the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.>	Replace the throttle body. <Ref. to FU(H4DOTC)-13, Throttle Body.>

BG:DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Engine keeps running at higher revolution than specified idling revolution.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

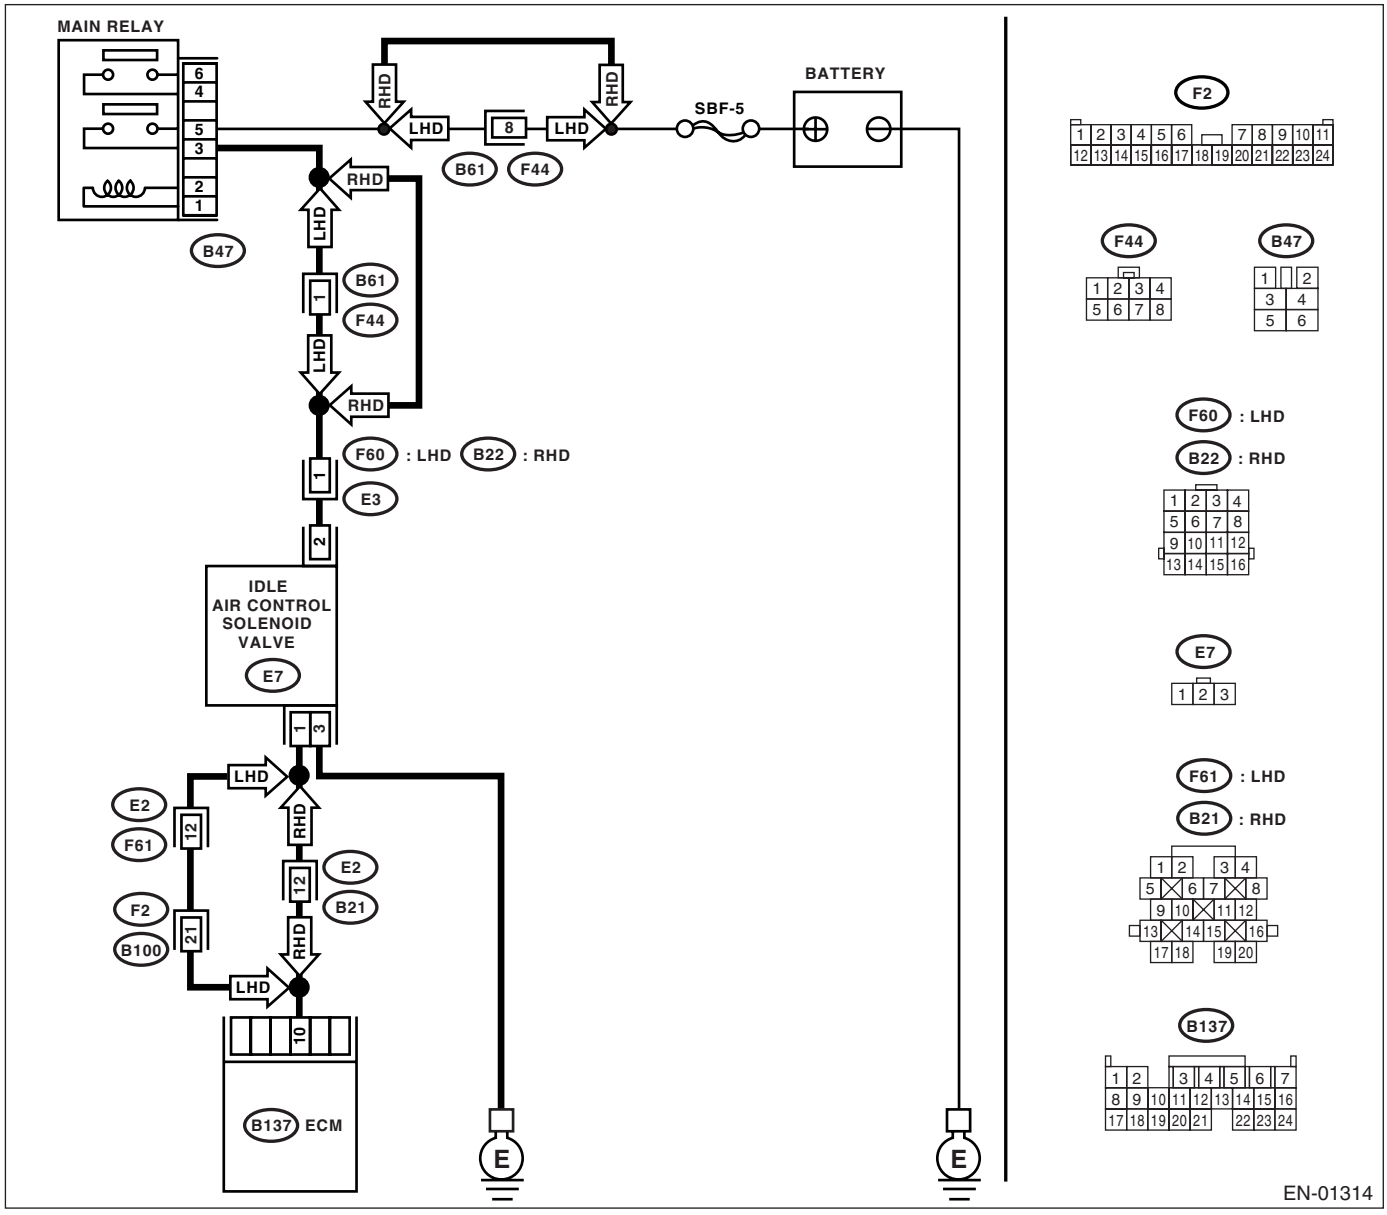

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0507.	Go to step **2.**
2	**CHECK THROTTLE CABLE.**	Does the throttle cable have play for adjustment?	Go to step **3.**	Adjust the throttle cable. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>
3	**CHECK AIR INTAKE SYSTEM.** 1)Turn the ignition switch to ON. 2)Start the engine, and idle it. 3)Check the following items. •Loose installation of intake manifold, idle air control solenoid valve and throttle body •Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket •Disconnections of vacuum hoses	Is there a fault in air intake system?	Repair the air suction and leaks.	Replace the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.>

BH:DTC P0508 — IDLE CONTROL SYSTEM CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Engine breathing

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

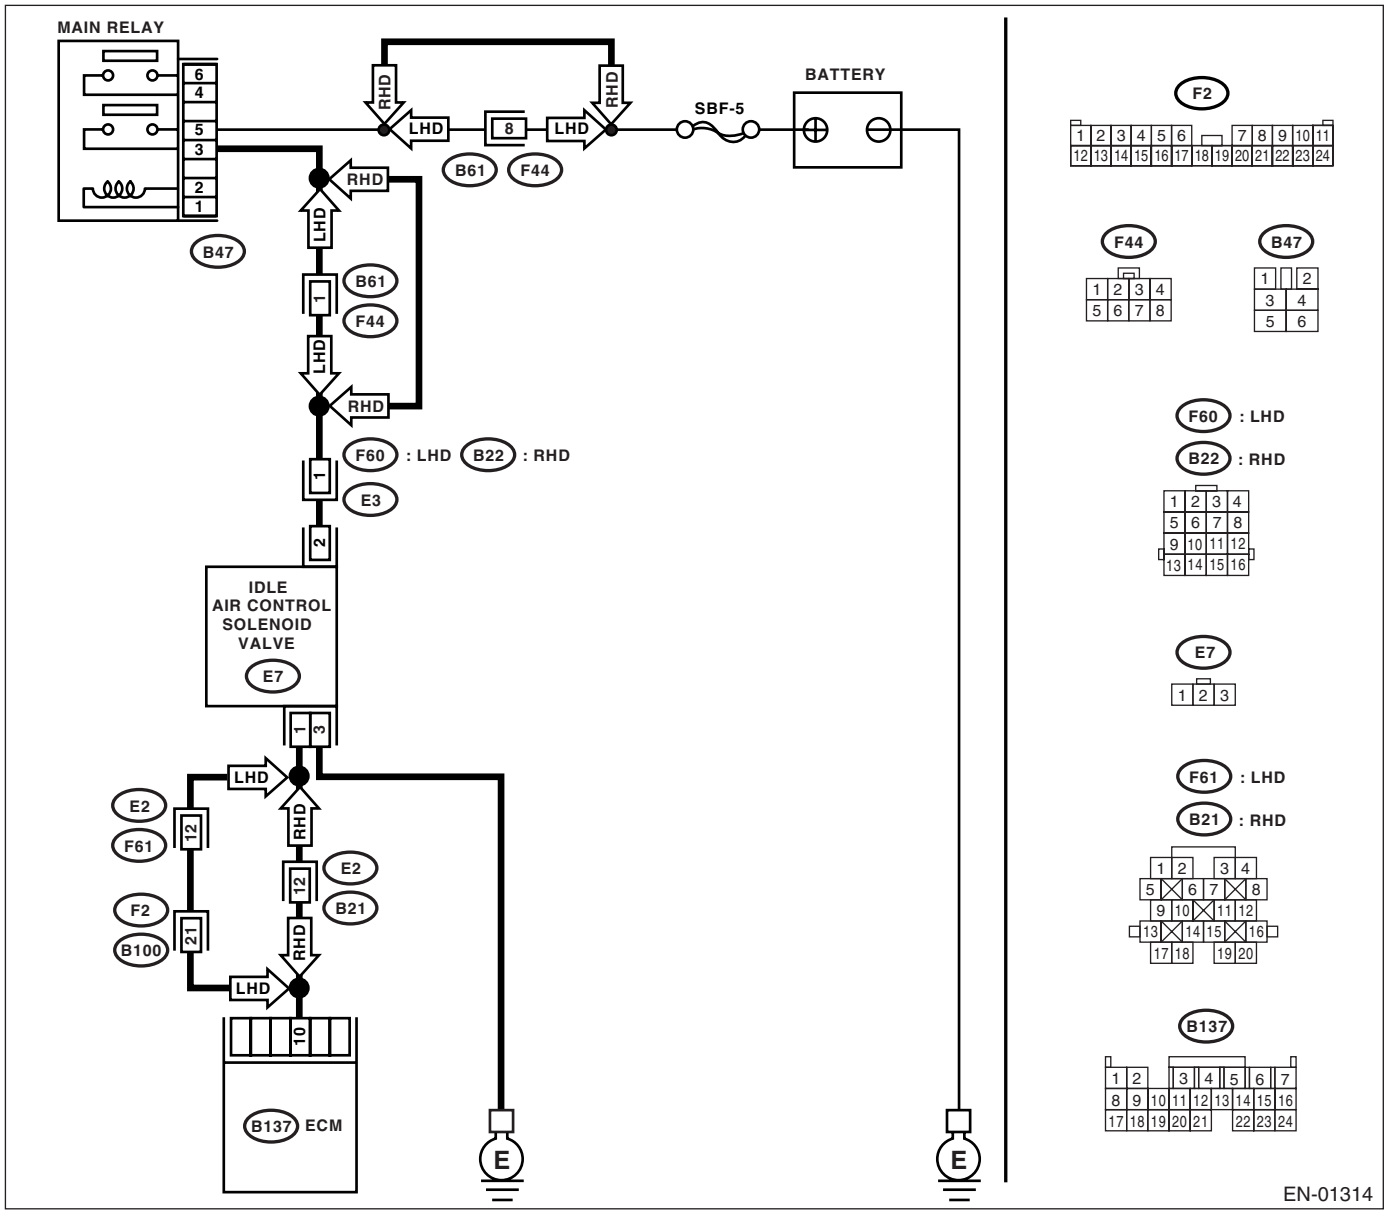

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 3 V?	Repair the poor contact in ECM connector.	Go to step **2.**
2	**CHECK POWER SUPPLY TO IDLE AIR CONTROL SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from idle air control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between idle air control solenoid valve and engine ground. ***Connector & terminal*** ***(E7) No. 2 (+) — Engine ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between idle air control solenoid valve and main relay connector • Poor contact in coupling connector
3	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and idle air control solenoid valve connector. ***Connector & terminal*** ***(B137) No. 10 — (E7) No. 1:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and idle air control solenoid valve connector • Poor contact in coupling connector
4	**CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the ground short circuit in harness between ECM and idle air control solenoid valve connector.
5	**CHECK GROUND CIRCUIT OF IDLE AIR CONTROL SOLENOID VALVE.** Measure the resistance of harness between idle air control solenoid valve connector and engine ground. ***Connector & terminal*** ***(E7) No. 3 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **6.**	Repair the open circuit in harness between idle air control solenoid valve connector and engine ground cable.
6	**CHECK POOR CONTACT.** Check poor contact in ECM and idle air control solenoid valve connectors.	Is there poor contact in ECM and idle air control solenoid valve connectors?	Repair the poor contact in ECM and idle air control solenoid valve connectors.	Replace the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.>

BI: DTC P0509 — IDLE CONTROL SYSTEM CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Engine breathing

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

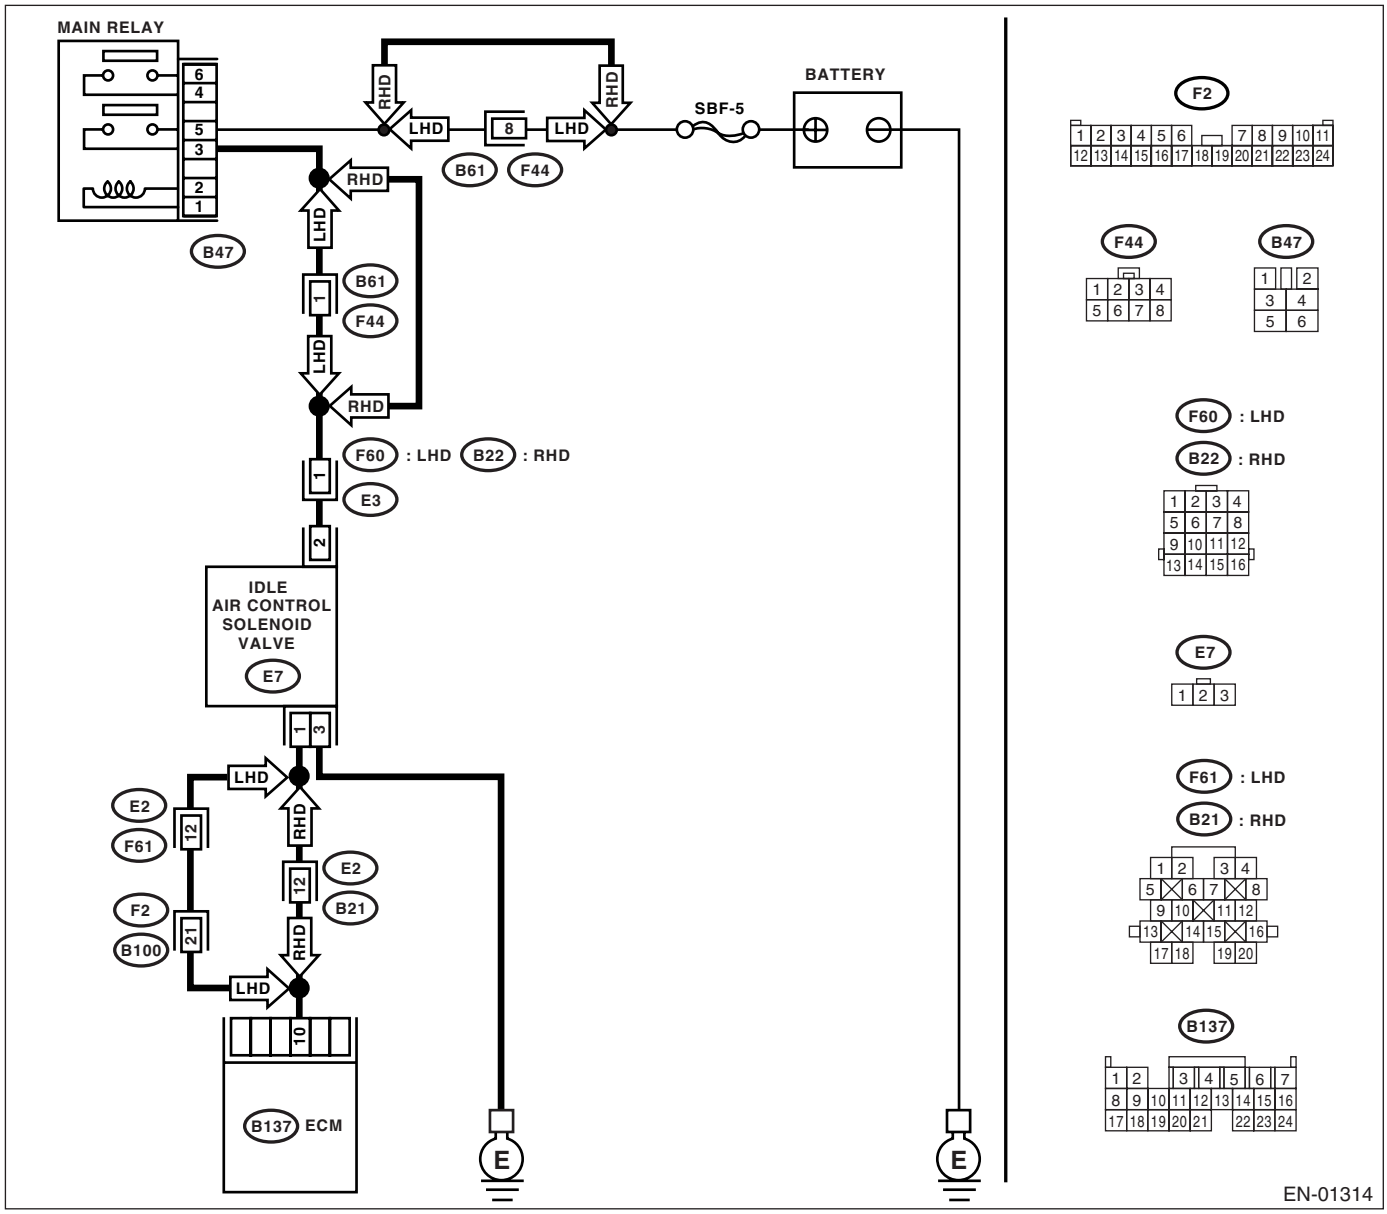

	Step	Check	Yes	No
1	**CHECK THROTTLE CABLE.**	Does the throttle cable have play for adjustment?	Go to step **2.**	Adjust the throttle cable. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>
2	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Go to step **4.**
3	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from idle air control solenoid valve. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Replace the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.> and ECM <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
4	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

BJ:DTC P0512 — STARTER REQUEST CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

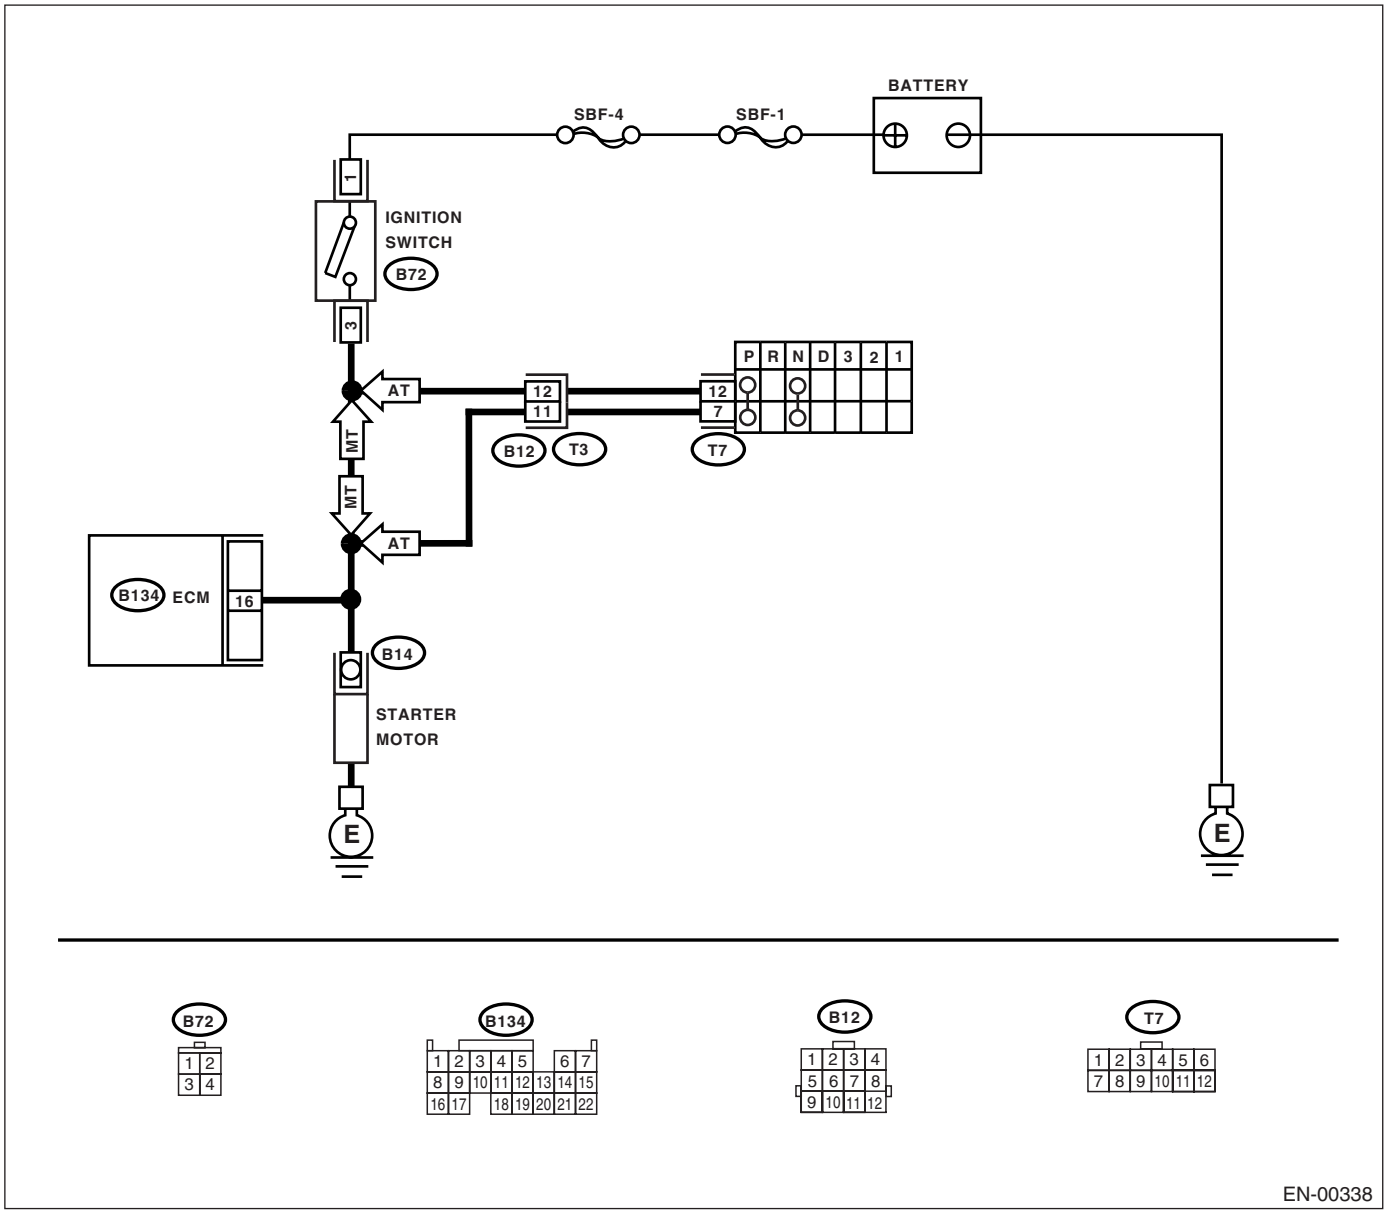

Step		Check	Yes	No
1	CHECK OPERATION OF STARTER MOTOR.	Does the starter motor operate when ignition switch is turned to ON?	Repair the battery short circuit in starter motor circuit. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Check the starter motor circuit. <Ref. to EN(H4DOTC)-61, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

BK:DTC P0519 — IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine keeps running at higher revolution than specified idling revolution.
  - Fuel is cut according to fail-safe function.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

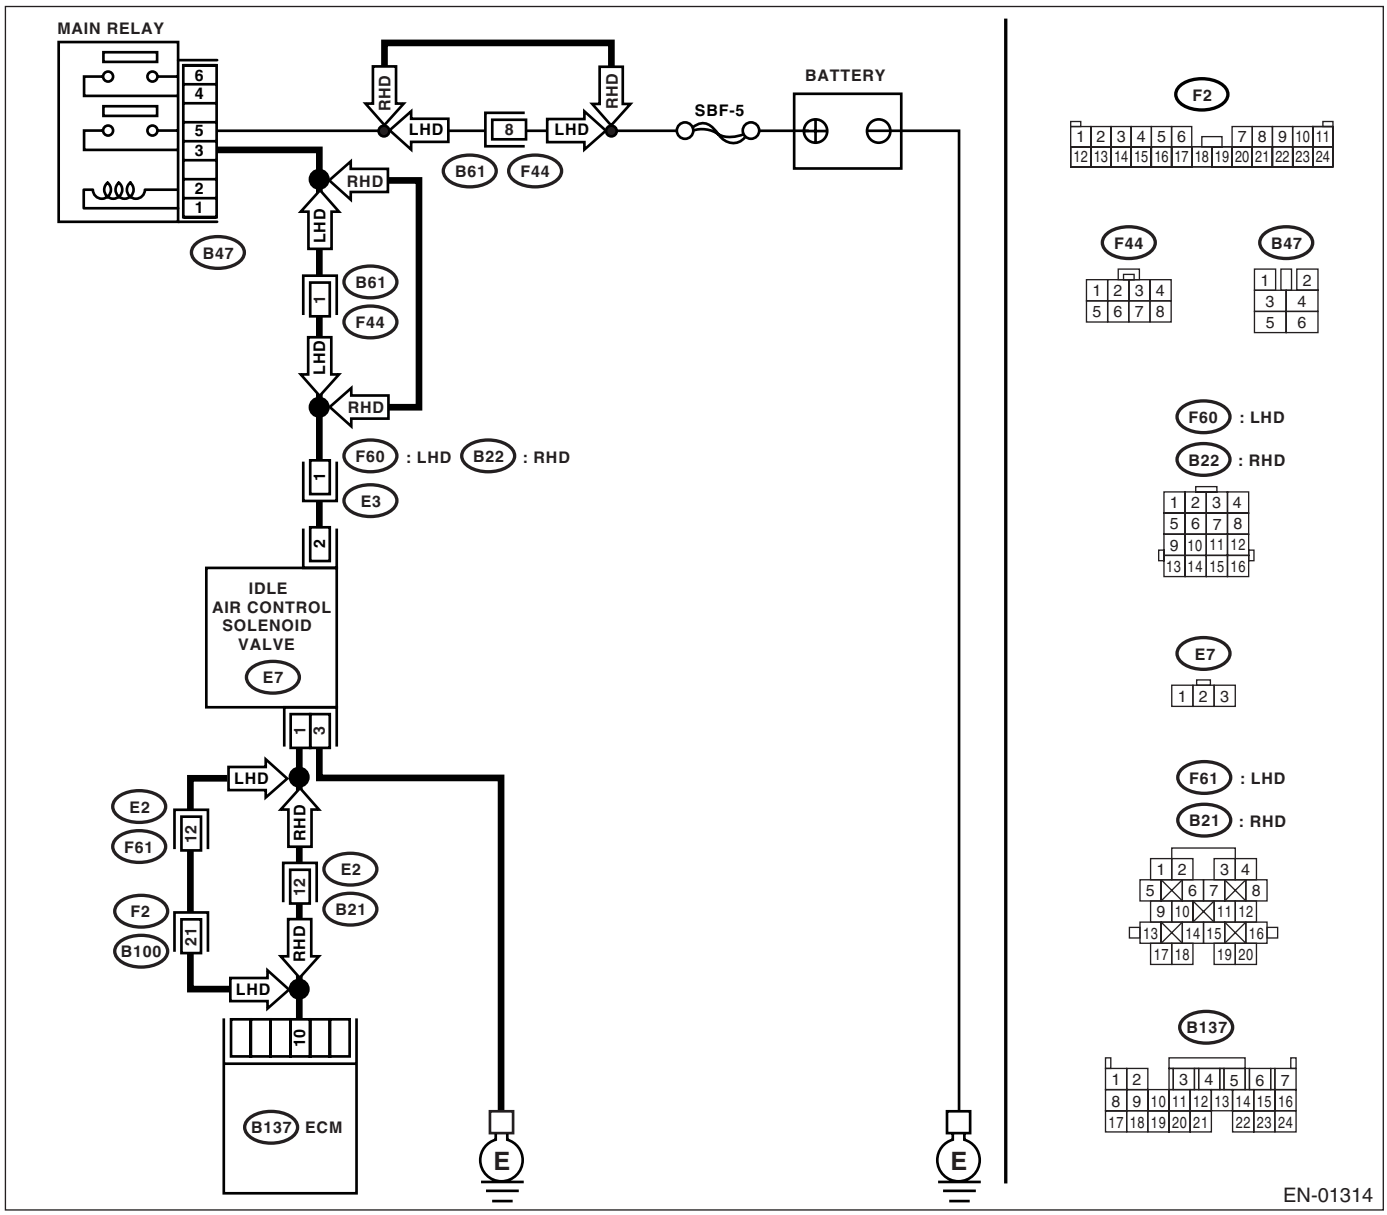

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0519.	Go to step **2.**
2	**CHECK AIR INTAKE SYSTEM.** 1)Turn the ignition switch to ON. 2)Start the engine, and idle it. 3)Check the following items. •Loose installation of intake manifold, idle air control solenoid valve and throttle body •Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket •Disconnections of vacuum hoses	Is there a fault in air intake system?	Repair the air suction and leaks.	Go to step **3.**
3	**CHECK THROTTLE CABLE.**	Does the throttle cable have play for adjustment?	Go to step **4.**	Adjust the throttle cable. <Ref. to SP(H4SO)-9, INSTALLATION, Accelerator Control Cable.>
4	**CHECK AIR BY-PASS LINE.** 1)Turn the ignition switch to OFF. 2)Remove the idle air control solenoid valve from throttle body. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.> 3)Confirm that there are no foreign particles in by-pass air line.	Are foreign particles in by-pass air line?	Remove the foreign particles from by-pass air line.	Replace the idle air control solenoid valve. <Ref. to FU(H4DOTC)-36, Idle Air Control Solenoid Valve.>

BL:DTC P0545 — EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW-BANK 1 —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

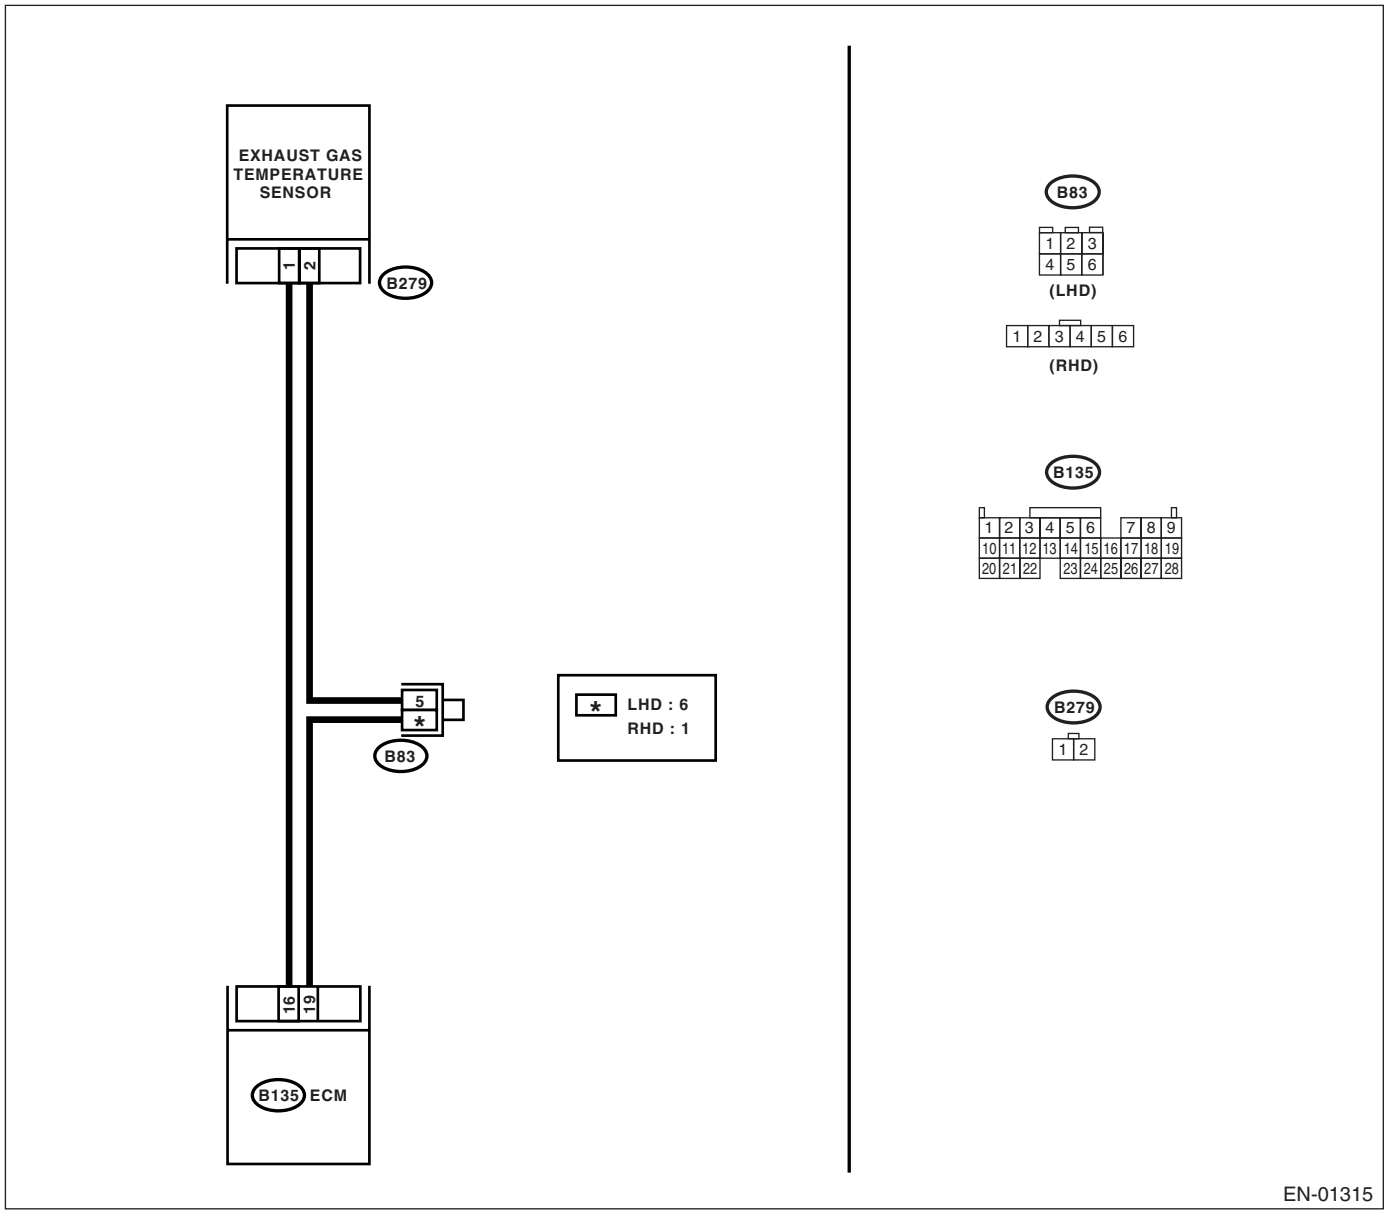

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of exhaust gas temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature more than 1200°C (2192°F)?	Go to step **2.**	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact in exhaust gas temperature sensor • Poor contact in ECM • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN EXHAUST GAS TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from exhaust gas temperature sensor. 3)Turn the ignition switch to ON. 4)Read the data of exhaust gas temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature less than 372°C (702°F)?	Replace the exhaust gas temperature sensor. <Ref. to FU(H4DOTC)-48, Exhaust Temperature Sensor.>	Repair the ground short circuit in harness between exhaust gas temperature sensor and ECM connector.

BM:DTC P0546 — EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH-BANK 1 —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Hard to start
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

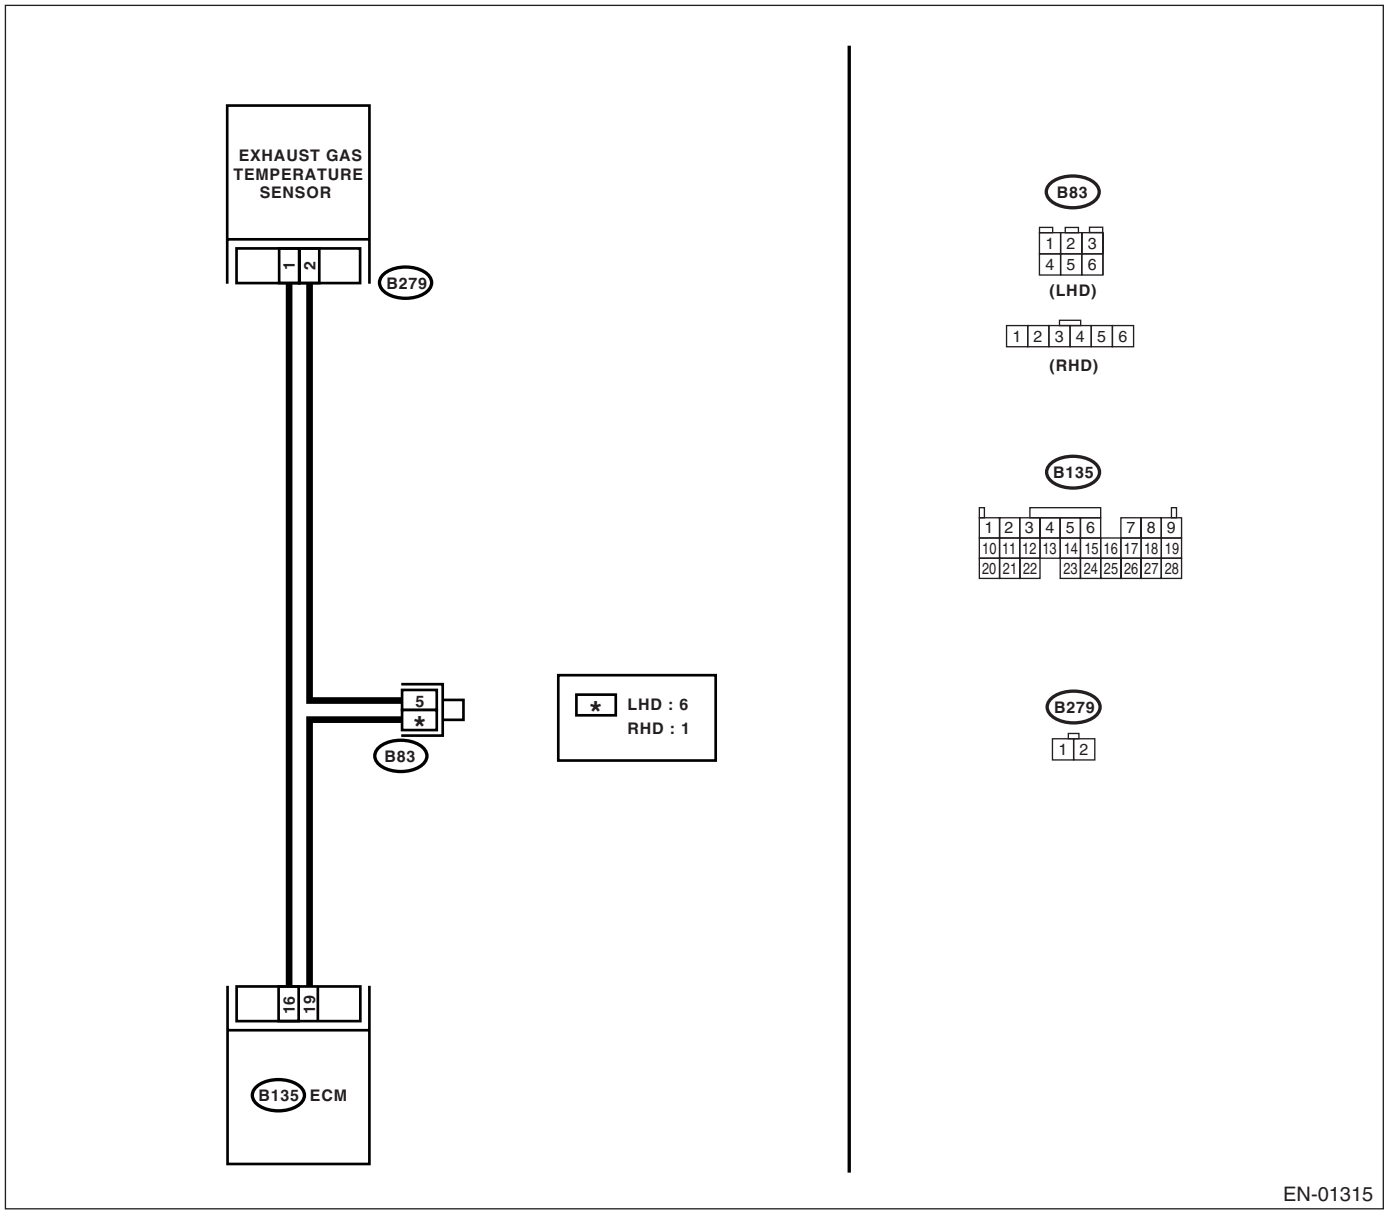

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of exhaust gas temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the temperature less than 372°C (702°F)?	Go to step **2.**	Repair the poor contact. NOTE: In this case, repair the following: • Poor contact in exhaust gas temperature sensor • Poor contact in ECM • Poor contact in joint connector
2	**CHECK HARNESS BETWEEN EXHAUST GAS TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from exhaust gas temperature sensor. 3)Measure the voltage between exhaust gas temperature sensor connector and engine ground. ***Connector & terminal*** ***(B279) No. 1 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and exhaust gas temperature sensor connector.	Go to step **3.**
3	**CHECK HARNESS BETWEEN EXHAUST GAS TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between exhaust gas temperature sensor connector and engine ground. ***Connector & terminal*** ***(B279) No. 1 (+) — Engine ground (–):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and exhaust gas temperature sensor connector.	Go to step **4.**
4	**CHECK HARNESS BETWEEN EXHAUST GAS TEMPERATURE SENSOR AND ECM CONNECTOR.** Measure the voltage between exhaust gas temperature sensor connector and engine ground. ***Connector & terminal*** ***(B279) No. 1 (+) — Engine ground (–):***	Is the voltage more than 4 V?	Go to step **5.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and exhaust gas temperature sensor connector • Poor contact in exhaust gas temperature sensor connector • Poor contact in ECM connector • Poor contact in joint connector

	Step	Check	Yes	No
5	**CHECK HARNESS BETWEEN EXHAUST GAS TEMPERATURE SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between exhaust gas temperature sensor connector and engine ground. ***Connector & terminal*** ***(B279) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Replace the exhaust gas temperature sensor. <Ref. to FU(H4DOTC)-48, Exhaust Temperature Sensor.>	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and exhaust gas temperature sensor connector • Poor contact in exhaust gas temperature sensor connector • Poor contact in ECM connector • Poor contact in joint connector

BN:DTC P0558 — GENERATOR CIRCUIT LOW INPUT —

CAUTION:
For diagnostic procedure, refer to DTC P0559. <Ref. to EN(H4DOTC)-223, DTC P0559 — GENERATOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>.

BO:DTC P0559 — GENERATOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

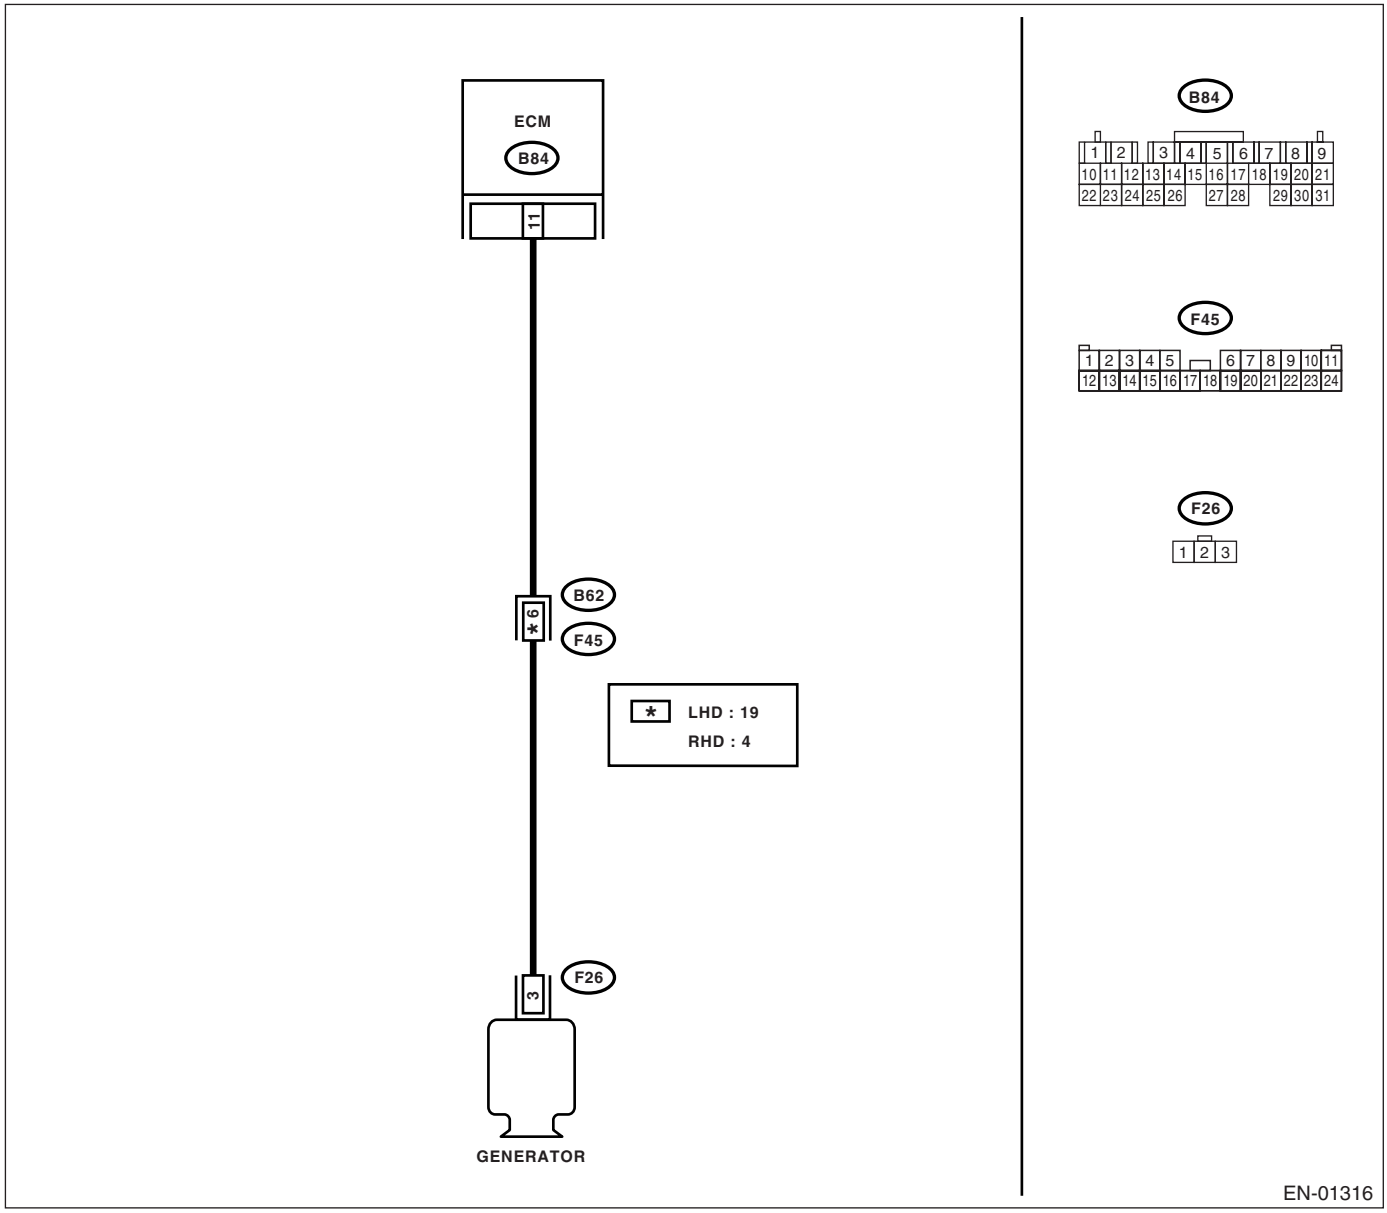

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN GENERATOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from generator and ECM. 3)Measure the resistance of harness between generator connector and engine ground. ***Connector & terminal*** ***(F26) No. 3 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **2.**	Repair the ground short circuit in harness between ECM and purge control solenoid valve connector.
2	**CHECK HARNESS BETWEEN GENERATOR AND ECM CONNECTOR.** Measure the resistance of harness between ECM and generator of harness connector. ***Connector & terminal*** ***(B84) No. 11 — (F26) No. 3:***	Is the resistance less than 1 Ω?	Repair poor contact in connector.	Repair the open circuit in harness between ECM and generator connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and generator connector • Poor contact in coupling connector

BP:DTC P0565 — CRUISE CONTROL ON SIGNAL —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

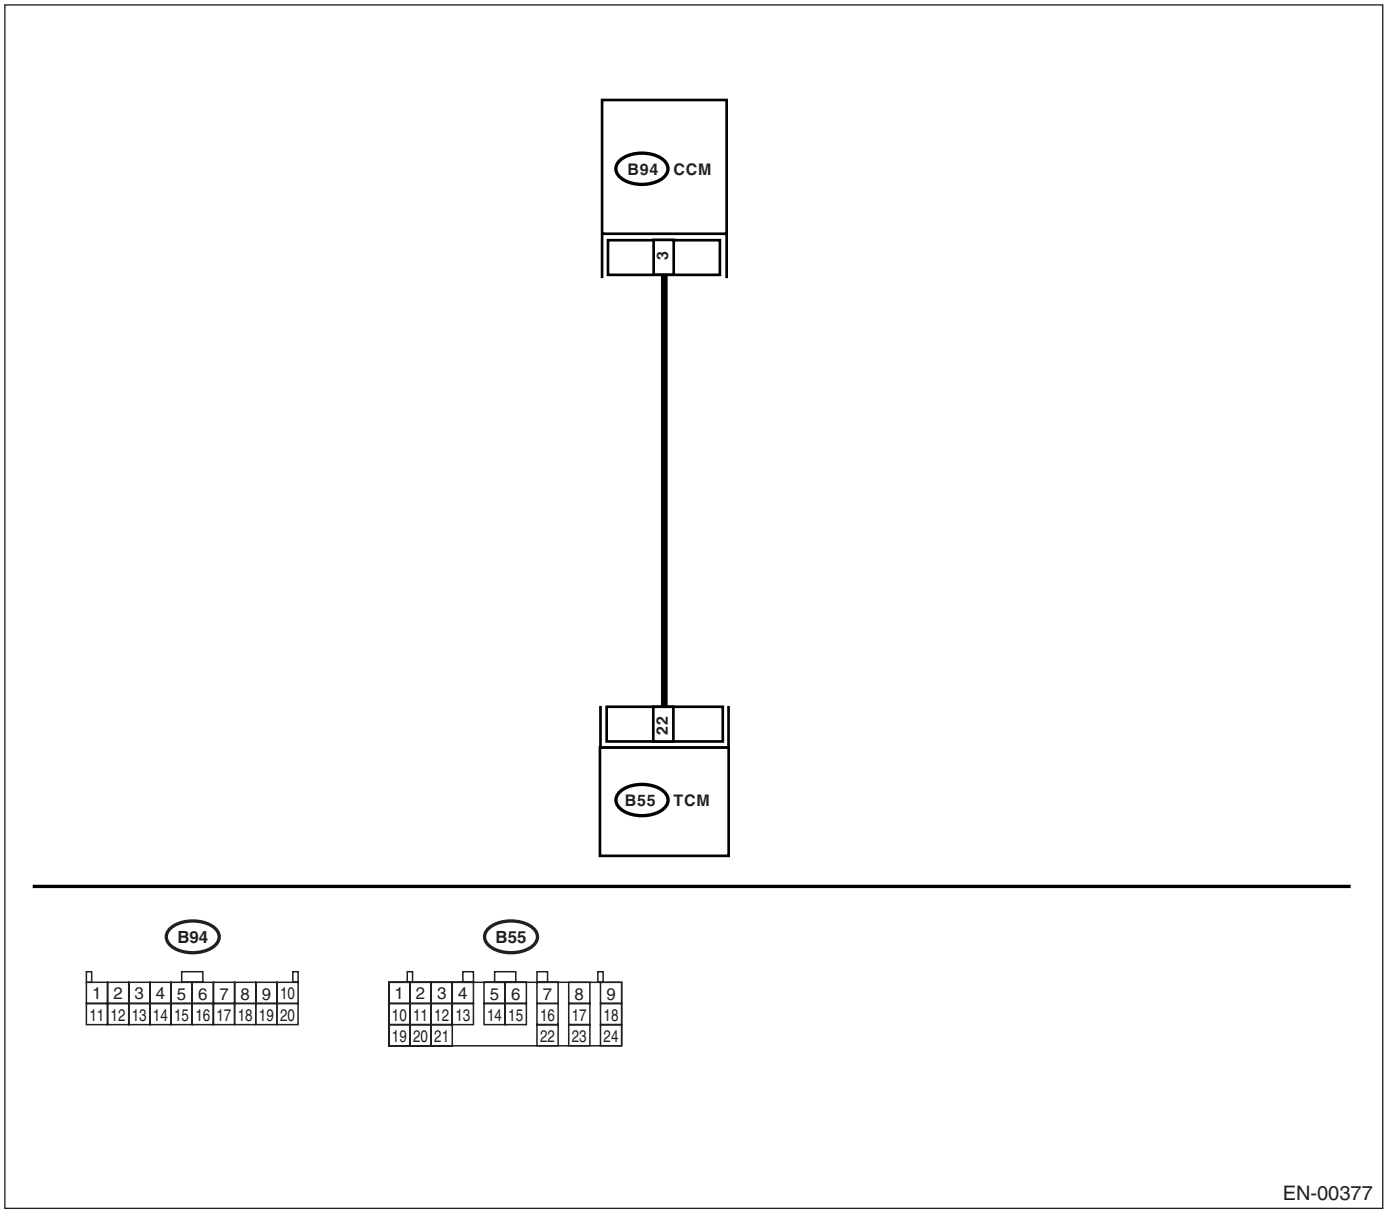

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and CCM. 3)Measure the resistance of harness between TCM and CCM connector. ***Connector & terminal*** ***(B55) No. 22 — (B94) No. 3:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and CCM connector.
2	**CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and CCM connector.
3	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connector to TCM and CCM. 2)Lift-up the vehicle or set the vehicle on free rollers. **CAUTION:** **Raise all wheels off ground.** 3)Start the engine. 4)Turn the cruise control main switch to ON. 5)Move the select lever to “D” range and slowly increase vehicle speed to 50 km/h (31 MPH). 6)Turn the cruise control command switch to ON. 7)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 22 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Check the cruise control command switch circuit. <Ref. to CC-8, INSPECTION, Cruise Control Command Switch.>
4	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BQ:DTC P0604 — INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Engine does not start.
  - Engine stalls.

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

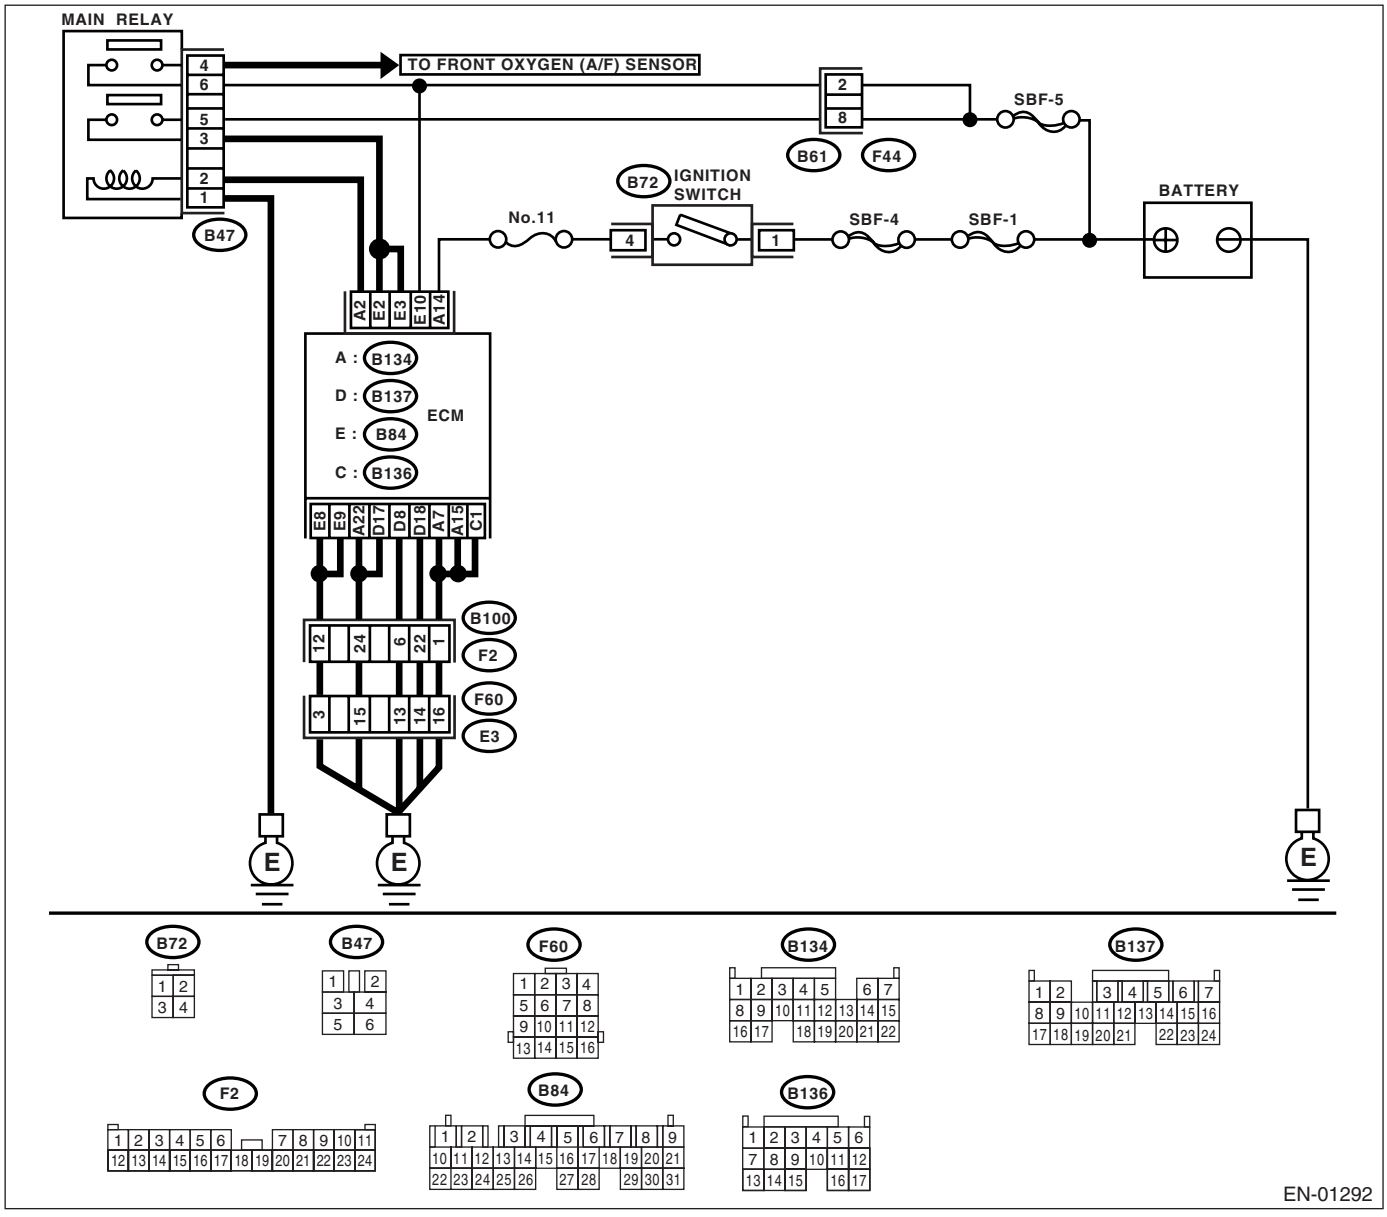

- **RHD model**

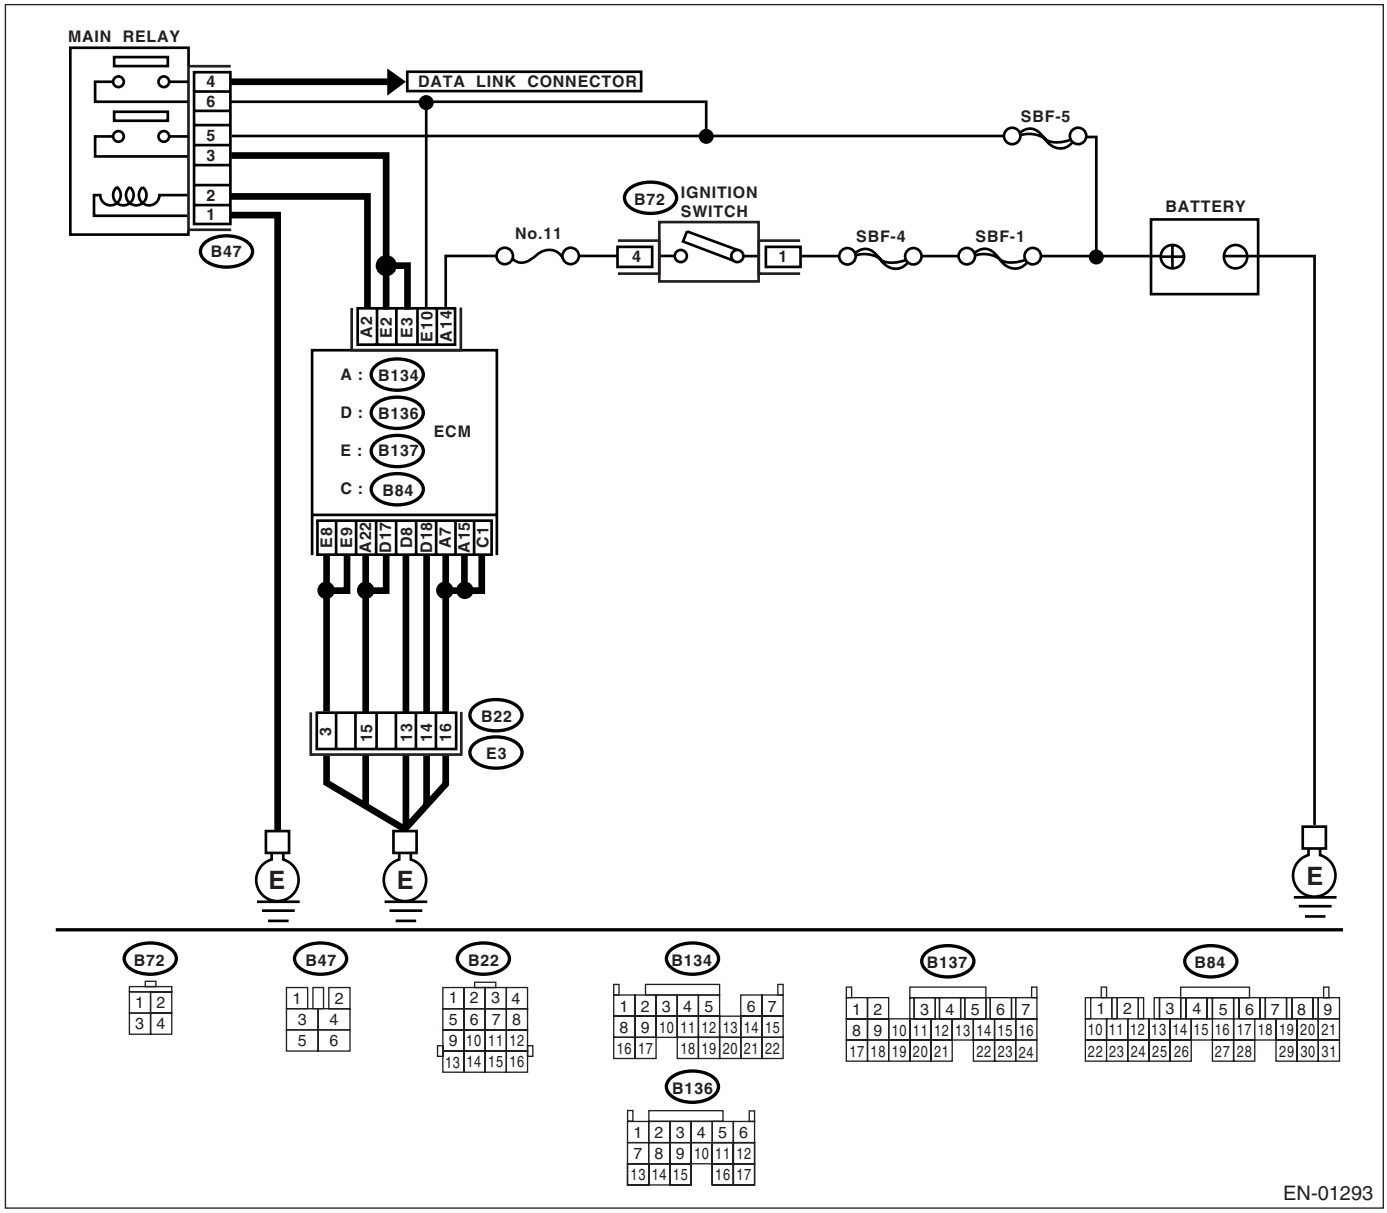

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0604?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	A temporary poor contact.

BR:DTC P0691 — COOLING FAN 1 CONTROL CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Radiator fan does not operate properly.
  - Overheating

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

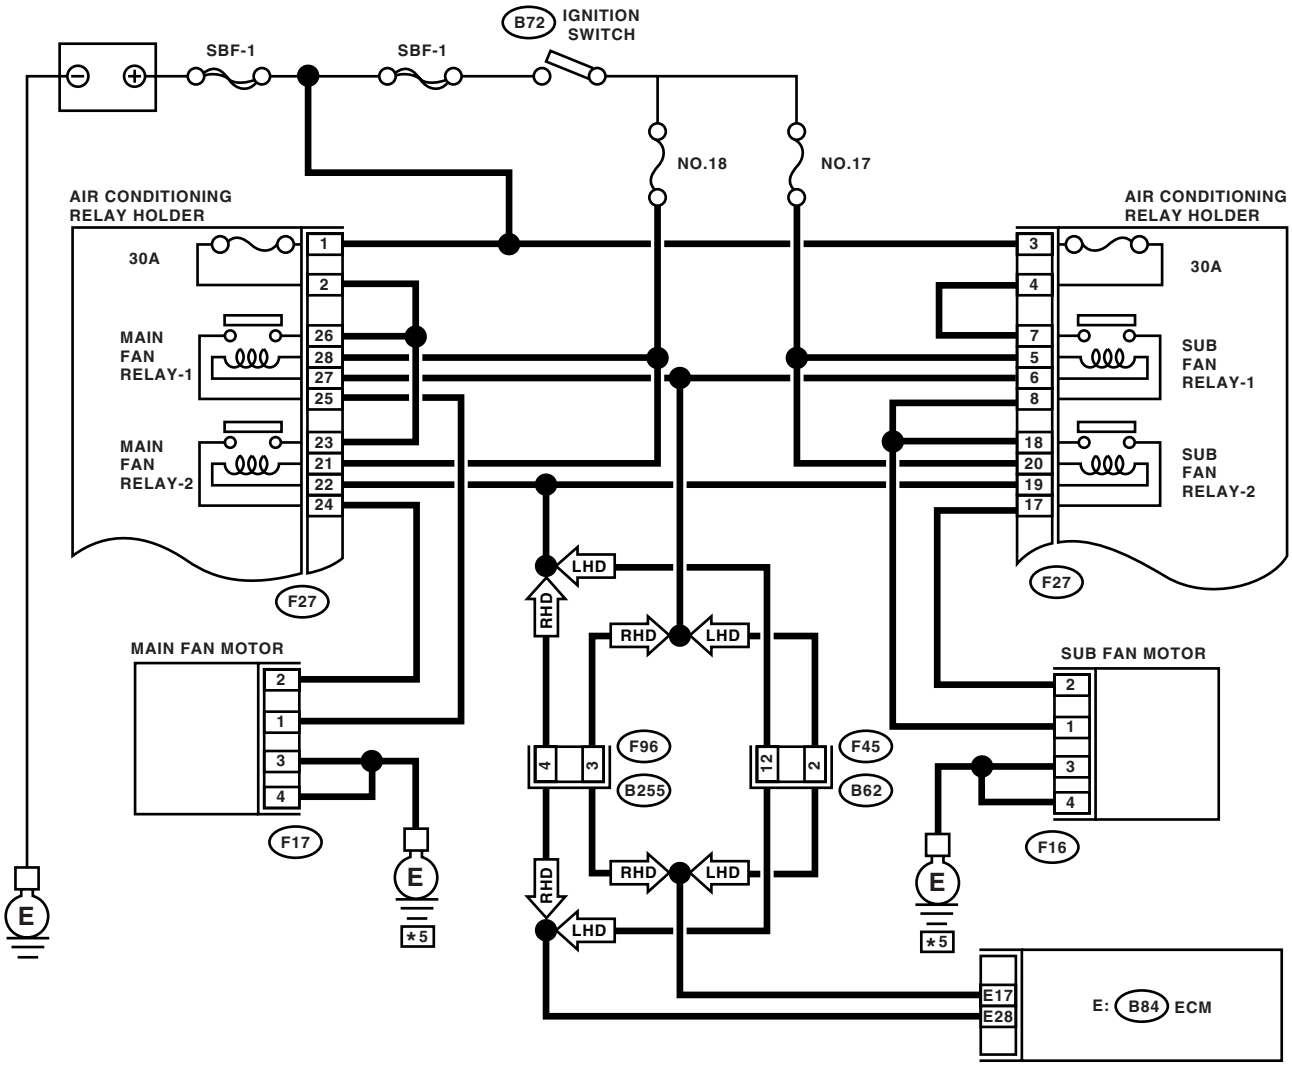

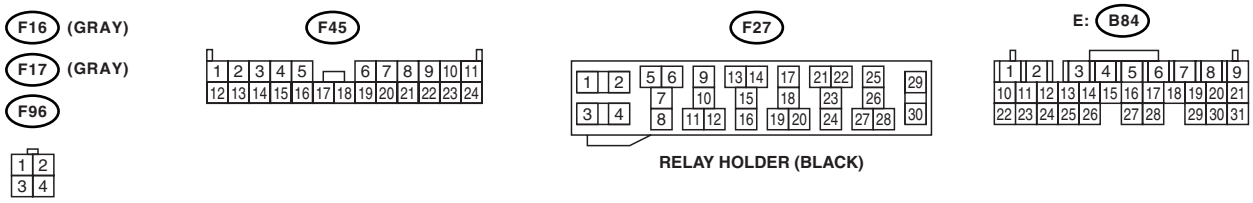

CO-00207

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector. 3)Turn the ignition switch to ON. 4)While operating the radiator fan relay, measure voltage between ECM terminal and ground. NOTE: Radiator fan relay operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> ***Connector & terminal*** ***(B84) No. 17 (+) — Chassis ground (−):*** ***(B84) No. 28 (+) — Chassis ground (−):***	Does the voltage change 0 — 10 V?	Repair poor contact in ECM connector.	Go to step **2.**
2	**CHECK GROUND SHORT CIRCUIT IN RADIATOR FAN RELAY CONTROL CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 17 — Chassis ground:*** ***(B84) No. 28 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair ground short circuit in radiator fan relay control circuit.
3	**CHECK POWER SUPPLY FOR RELAY.** 1)Remove the fan relay 1 and fan relay 2 from A/C relay holder. 2)Turn the ignition switch to ON. 3)Measure the voltage between fuse and relay box (F/B) connector and chassis ground. ***Connector & terminal*** ***(F27) No. 27 (+) — Chassis ground (−):*** ***(F27) No. 22 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Repair open circuit in harness between ignition switch and fuse and relay box (F/B) connector.
4	**CHECK FAN RELAY 1.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between fan relay 1 terminals. ***Terminals*** ***No. 27 — No. 28:***	Is the resistance 87 — 107 Ω?	Go to step **5.**	Replace the fan relay 1.
5	**CHECK FAN RELAY 2.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between fan relay 2 terminals. ***Terminals*** ***No. 22 — No. 21:***	Is the resistance 87 — 107 Ω?	Go to step **6.**	Replace the fan relay 2.
6	**CHECK OPEN CIRCUIT IN FAN RELAY CONTROL CIRCUIT.** Measure the resistance of harness between ECM and fan relay connector. ***Connector & terminal*** ***(B84) No. 17 — (F27) No. 28:*** ***(B84) No. 28 — (F27) No. 21:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fan relay connector • Poor contact in coupling connector

	Step	Check	Yes	No
7	**CHECK POOR CONTACT.** Check poor contact in ECM or fan relay connector.	Is there poor contact in ECM or fan relay connector?	Repair poor contact in ECM or fan relay connector.	Contact your Subaru distributor service.

BS:DTC P0692 — COOLING FAN 1 CONTROL CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Radiator fan does not operate properly.
  - Overheating

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

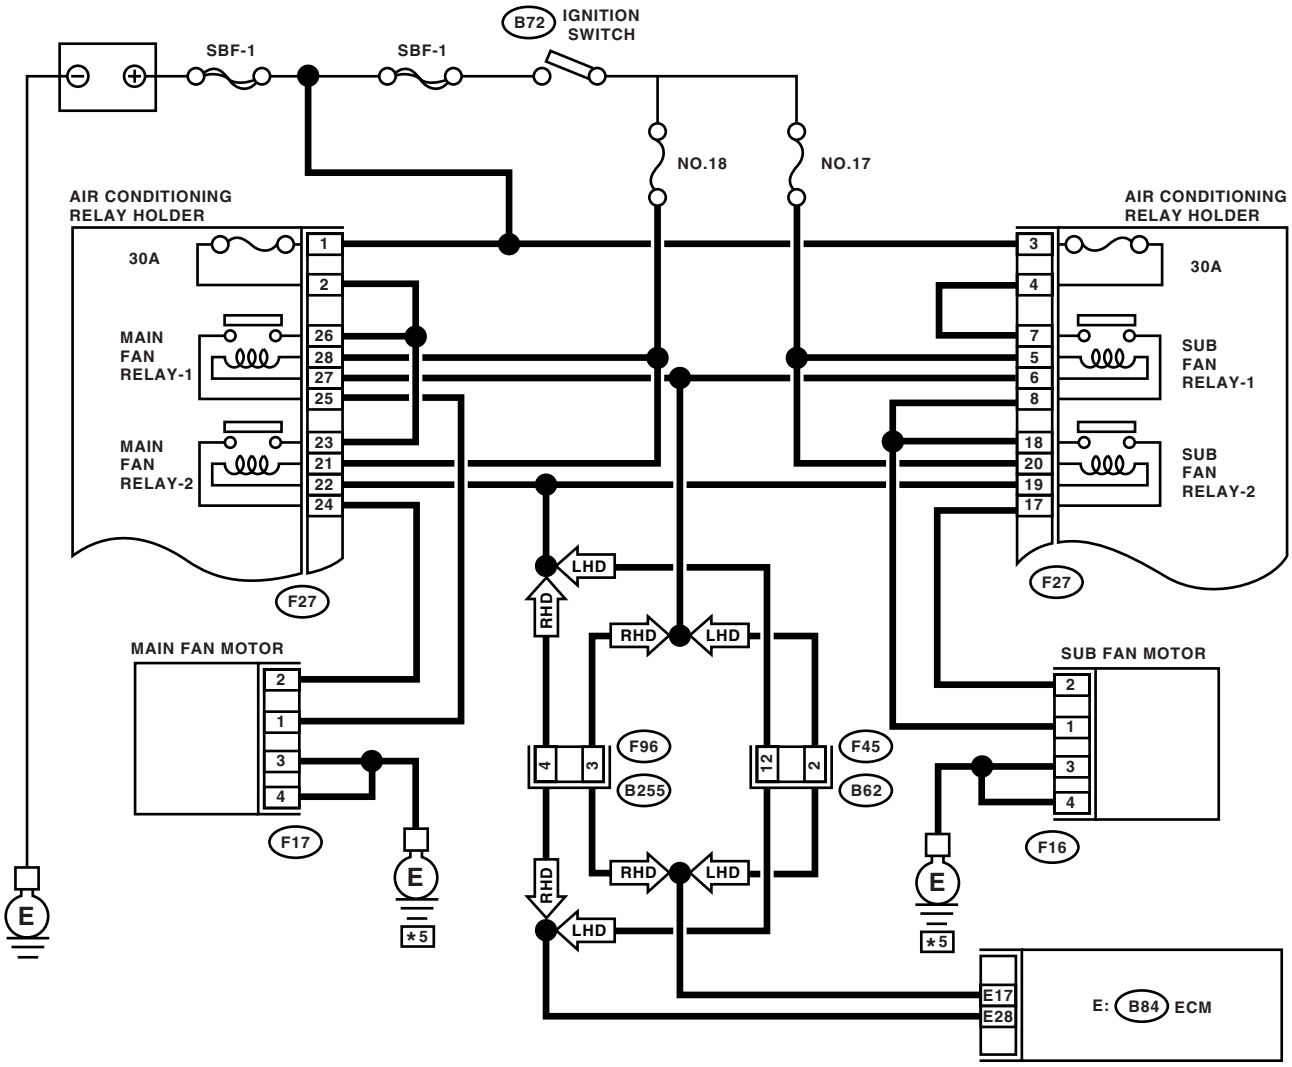

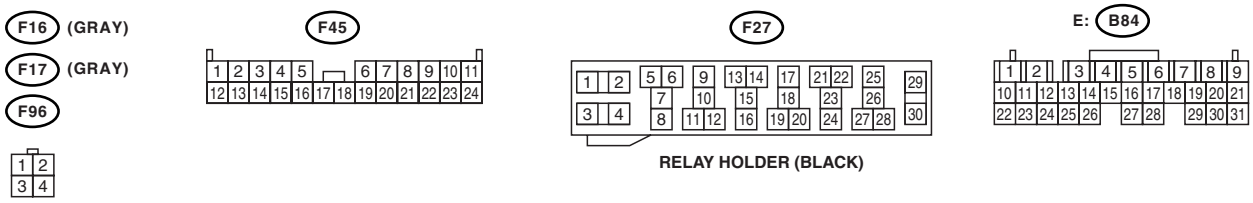

CO-00207

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Turn the ignition switch to OFF. 2)Connect the test mode connector. 3)Turn the ignition switch to ON. 4)While operating the radiator fan relay, measure the voltage between ECM and chassis ground. NOTE: Radiator fan relay operation can be executed using the Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H4DOTC)-49, Compulsory Valve Operation Check Mode.> ***Connector & terminal*** ***(B84) No. 17 (+) — Chassis ground (−):*** ***(B84) No. 28 (+) — Chassis ground (−):***	Does the voltage change 0 — 10 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. In this case, repair the poor contact in ECM connector.	Go to step **2.**
2	**CHECK SHORT CIRCUIT IN RADIATOR FAN RELAY CONTROL CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Remove the fan relay 1, fan relay 2 and fan mode relay. 3)Disconnect the test mode connector. 4)Turn the ignition switch to ON. 5)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B84) No. 17 (+) — Chassis ground (−):*** ***(B84) No. 28 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in radiator fan relay control circuit. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **3.**
3	**CHECK FAN RELAY 1.** 1)Turn the ignition switch to OFF. 2)Remove the fan relay 1. 3)Measure the resistance between fan relay 1 terminals. ***Terminals*** ***No. 25 — No. 26:***	Is the resistance less than 1 Ω?	Replace the fan relay 1 and ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **4.**
4	**CHECK FAN RELAY 2.** 1)Remove the fan relay 2. 2)Measure the resistance between fan relay 2 terminals. ***Terminals*** ***No. 23 — No. 24:***	Is the resistance less than 1 Ω?	Replace the fan relay 2 and ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **5.**
5	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>

BT:DTC P0703 — TORQUE CONVERTER/BRAKE SWITCH "B" CIRCUIT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

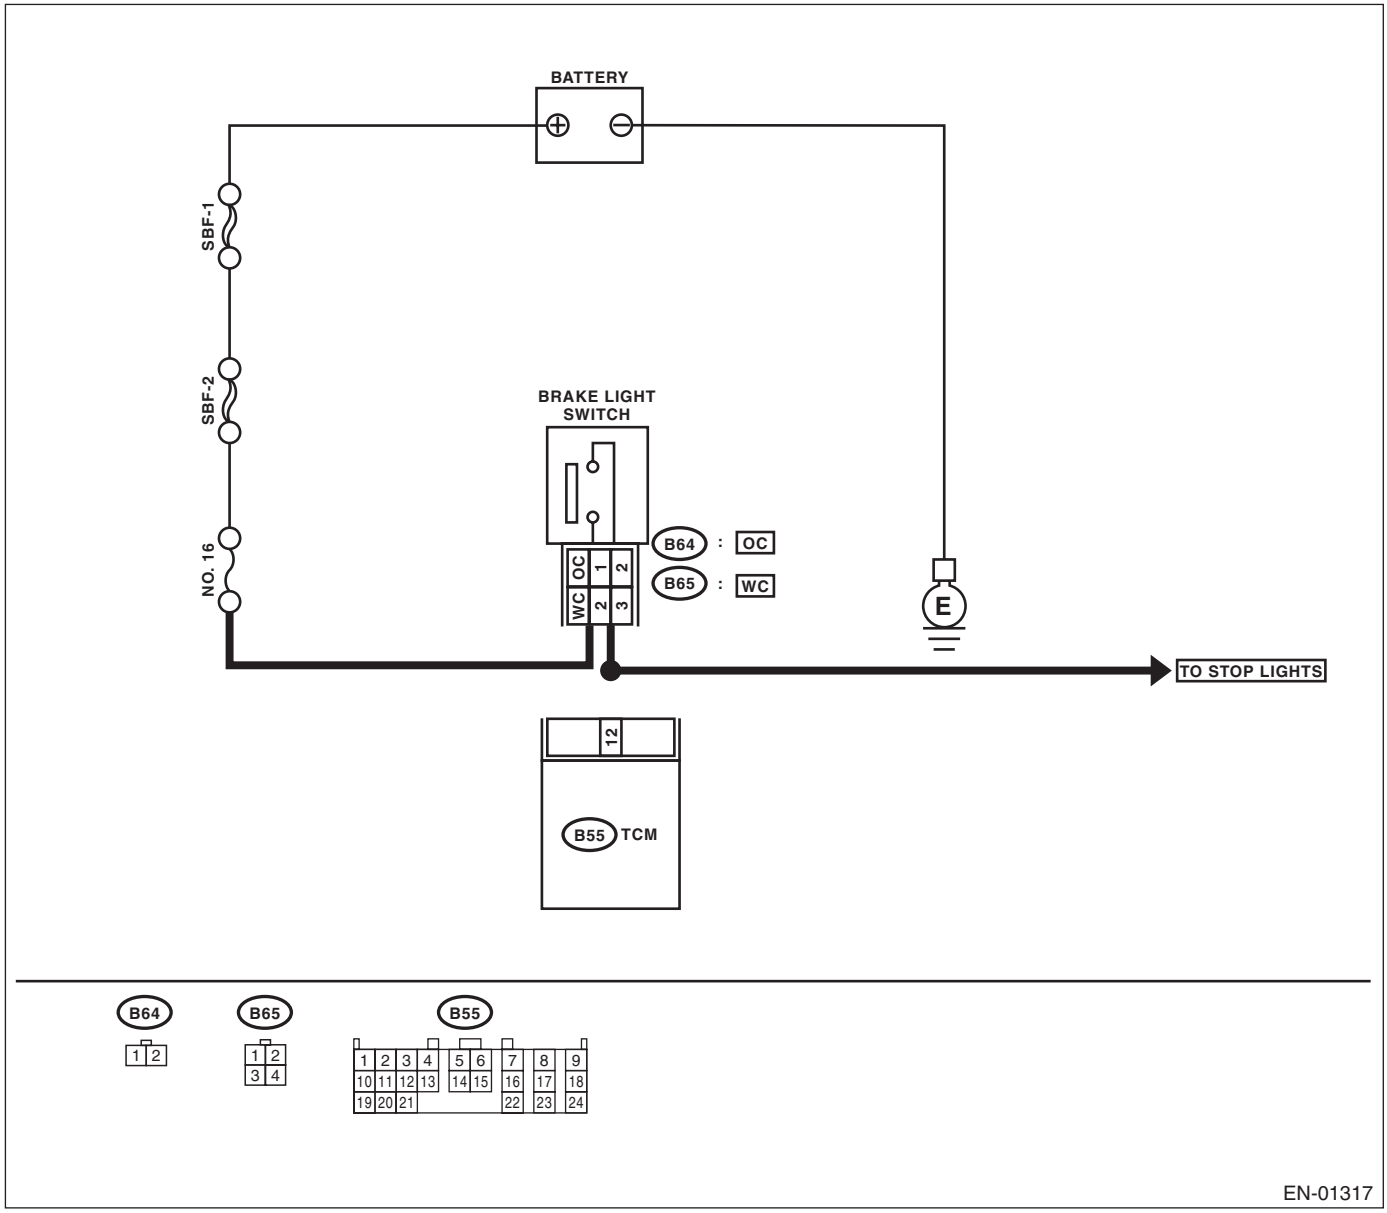

Step		Check	Yes	No
1	**CHECK OPERATION OF BRAKE LIGHT.**	Does the brake light come on when depressing the brake pedal?	Go to step **2.**	Repair or replace the brake light circuit.

	Step	Check	Yes	No
2	**CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR.** 1)Disconnect the connectors from TCM and brake light switch. 2)Measure the resistance of harness between TCM and brake light switch connector. ***Connector & terminal*** ***MODEL WITH CRUISE CONTROL*** ***(B55) No. 12 — (B65) No. 3:*** ***MODEL WITHOUT CRUISE CONTROL*** ***(B55) No. 12 — (B64) No. 2:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair or replace the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between TCM and brake light switch connector • Poor contact in TCM connector • Poor contact in brake light switch connector
3	**CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 12 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the ground short circuit in harness between TCM and brake light switch connector.
4	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and brake light switch. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 12 (+) — Chassis ground (−):***	Is the voltage less than 1 V when releasing the brake pedal?	Go to step **5.**	Adjust or replace the brake light switch. <Ref. to LI-8, STOP LIGHT SWITCH, INSPECTION, Stop Light System.>
5	**CHECK INPUT SIGNAL FOR TCM.** Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V when depressing the brake pedal?	Go to step **6.**	Adjust or replace the brake light switch. <Ref. to LI-8, STOP LIGHT SWITCH, INSPECTION, Stop Light System.>
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BU:DTC P0731 — GEAR 1 INCORRECT RATIO —

NOTE:
For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H4DOTC)-239, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BV:DTC P0732 — GEAR 2 INCORRECT RATIO —

NOTE:
For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H4DOTC)-239, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BW:DTC P0733 — GEAR 3 INCORRECT RATIO —

NOTE:
For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H4DOTC)-239, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

BX:DTC P0734 — GEAR 4 INCORRECT RATIO —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Shift point too high or too low; engine brake not effective in “3” range; excessive shift shock; excessive tight corner “braking”

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK THROTTLE POSITION SENSOR CIRCUIT.** Check the throttle position sensor circuit. <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in throttle position sensor circuit?	Repair or replace the throttle position sensor circuit.	Go to step **3.**
3	**CHECK FRONT VEHICLE SPEED SENSOR CIRCUIT.** Check the front vehicle speed sensor circuit. <Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in front vehicle speed sensor circuit?	Repair or replace the vehicle speed sensor 2 circuit.	Go to step **4.**
4	**CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT.** Check the torque converter turbine speed sensor circuit. <Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in torque converter turbine speed sensor circuit?	Repair or replace the torque converter turbine speed sensor circuit.	Go to step **5.**
5	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Go to step **6.**
6	**CHECK MECHANICAL TROUBLE.** Check mechanical trouble in automatic transmission.	Is there any mechanical trouble in automatic transmission?	Repair or replace the automatic transmission. <Ref. to 4AT-33, INSPECTION, Road Test.>	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BY:DTC P0741 — TORQUE CONVERTER CLUTCH CIRCUIT PERFORMANCE OR STUCK OFF —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - No lock-up (after engine warm-up)
  - No shift or excessive tight corner “braking”

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK LOCK-UP DUTY SOLENOID CIRCUIT.** Check the lock-up duty solenoid circuit. <Ref. to 4AT-82, DTC 77 LOCK-UP DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in lock-up duty solenoid circuit?	Repair or replace the lock-up duty solenoid circuit.	Go to step **3.**
3	**CHECK THROTTLE POSITION SENSOR CIRCUIT.** Check the throttle position sensor circuit. <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in throttle position sensor circuit?	Repair or replace the throttle position sensor circuit.	Go to step **4.**
4	**CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT.** Check the torque converter turbine speed sensor circuit. <Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in torque converter turbine speed sensor circuit?	Repair or replace the torque converter turbine speed sensor circuit.	Go to step **5.**
5	**CHECK ENGINE SPEED INPUT CIRCUIT.** Check the engine speed input circuit. <Ref. to 4AT-41, DTC 11 ENGINE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in engine speed input circuit?	Repair or replace the engine speed input circuit.	Go to step **6.**
6	**CHECK INHIBITOR SWITCH CIRCUIT.** Check the inhibitor switch circuit. <Ref. to 4AT-109, CHECK INHIBITOR SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Is there any trouble in inhibitor switch circuit?	Repair or replace the inhibitor switch circuit.	Go to step **7.**
7	**CHECK BRAKE LIGHT SWITCH CIRCUIT.** Check the brake light switch circuit. <Ref. to 4AT-101, CHECK BRAKE SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Is there any trouble in brake light switch circuit?	Repair or replace the brake light switch circuit.	Go to step **8.**

	Step	Check	Yes	No
8	**CHECK ATF TEMPERATURE SENSOR CIRCUIT.** Check the ATF temperature sensor circuit. <Ref. to 4AT-45, DTC 27 ATF TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble in ATF temperature sensor circuit?	Repair or replace the ATF temperature sensor circuit.	Go to step **9.**
9	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Go to step **10.**
10	**CHECK MECHANICAL TROUBLE.** Check mechanical trouble in automatic transmission.	Is there any mechanical trouble in automatic transmission?	Repair or replace the automatic transmission. <Ref. to 4AT-33, INSPECTION, Road Test.>	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

BZ:DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW (AT MODEL) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, OPERATION.>.

- **WIRING DIAGRAM:**

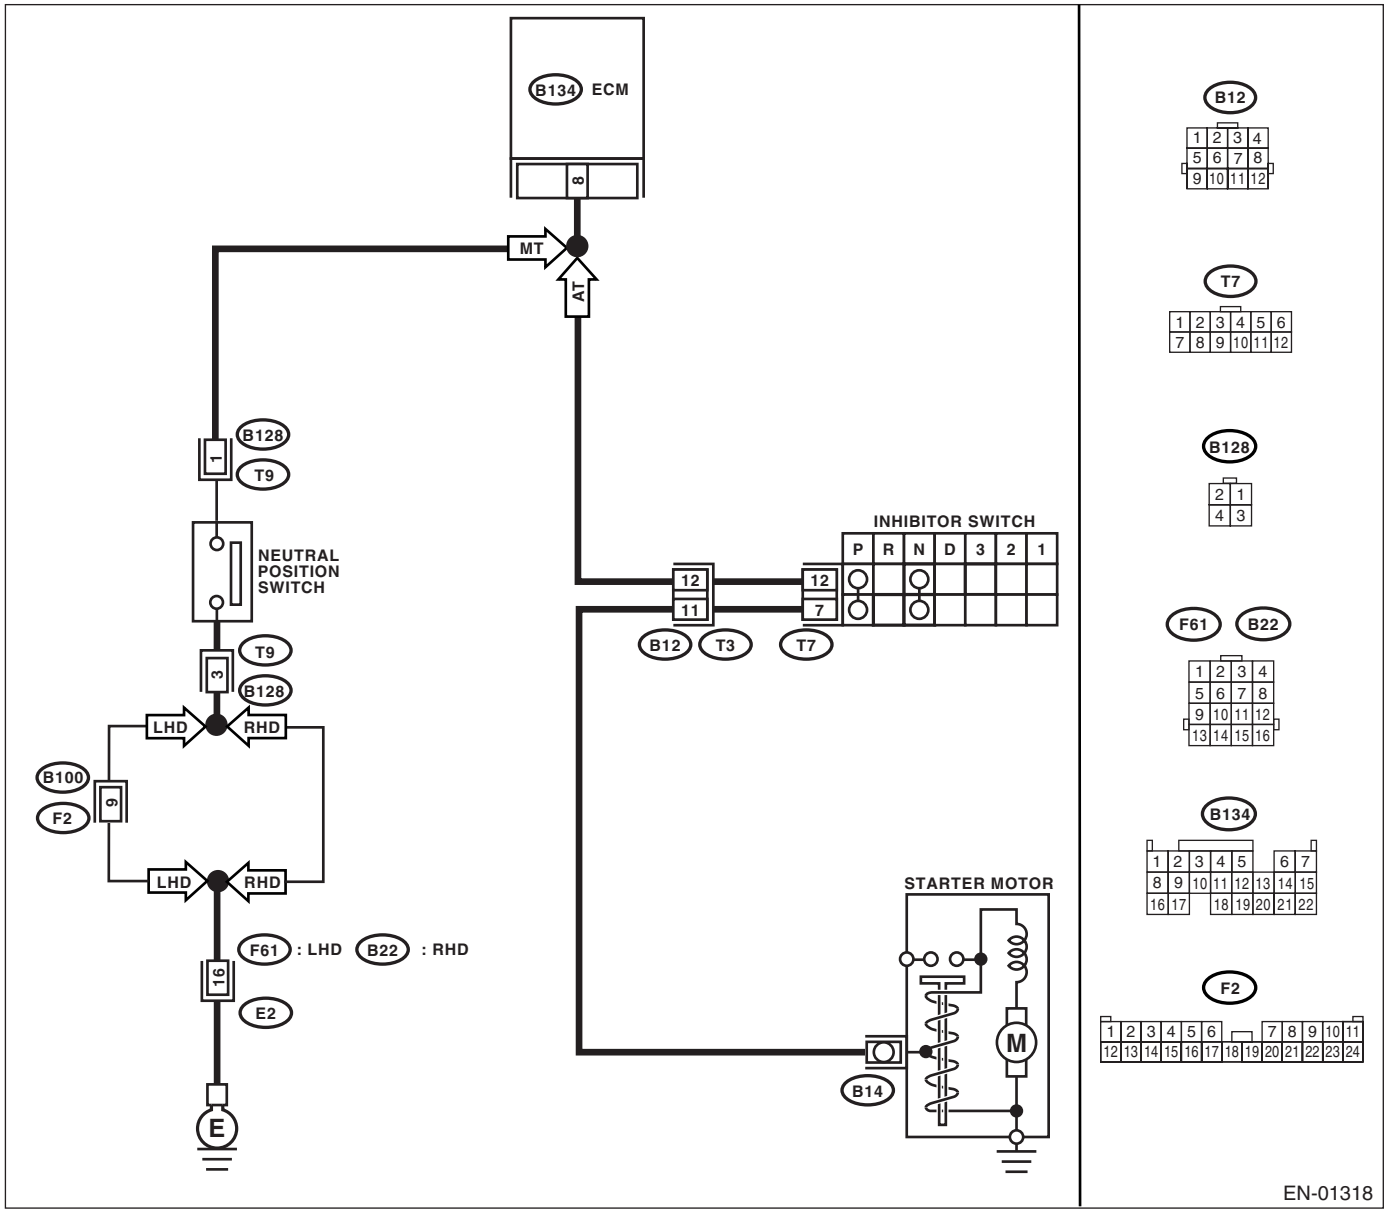

	Step	Check	Yes	No
1	**CHECK DTC P0705 ON DISPLAY.**	Is DTC P0705 indicated?	Inspect DTC P0705 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Place the select lever except for "N" and "P" positions. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage 4.5 — 5.5 V?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time.	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND TRANSMISSION HARNESS CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and transmission harness connector (T3). 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B134) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair ground short circuit in harness between ECM and transmission harness connector.
4	**CHECK TRANSMISSION HARNESS CONNECTOR.** 1)Disconnect the connector from inhibitor switch. 2)Measure the resistance of harness between transmission harness connector and engine ground. ***Connector & terminal*** ***(T3) No. 12 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair ground short circuit in harness between transmission harness and inhibitor switch connector.
5	**CHECK INHIBITOR SWITCH.** Measure the resistance between inhibitor switch connector the receptacle's terminals in selector lever except for "N" position. ***Terminals*** ***No. 7 — No. 12:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Replace the inhibitor switch. <Ref. to 4AT-48, Inhibitor Switch.>
6	**CHECK SELECTOR CABLE CONNECTION.**	Is there any fault in selector cable connection to inhibitor switch?	Repair selector cable connection. <Ref. to CS-14, INSPECTION, Select Cable.>	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

CA:DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW (MT MODEL) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

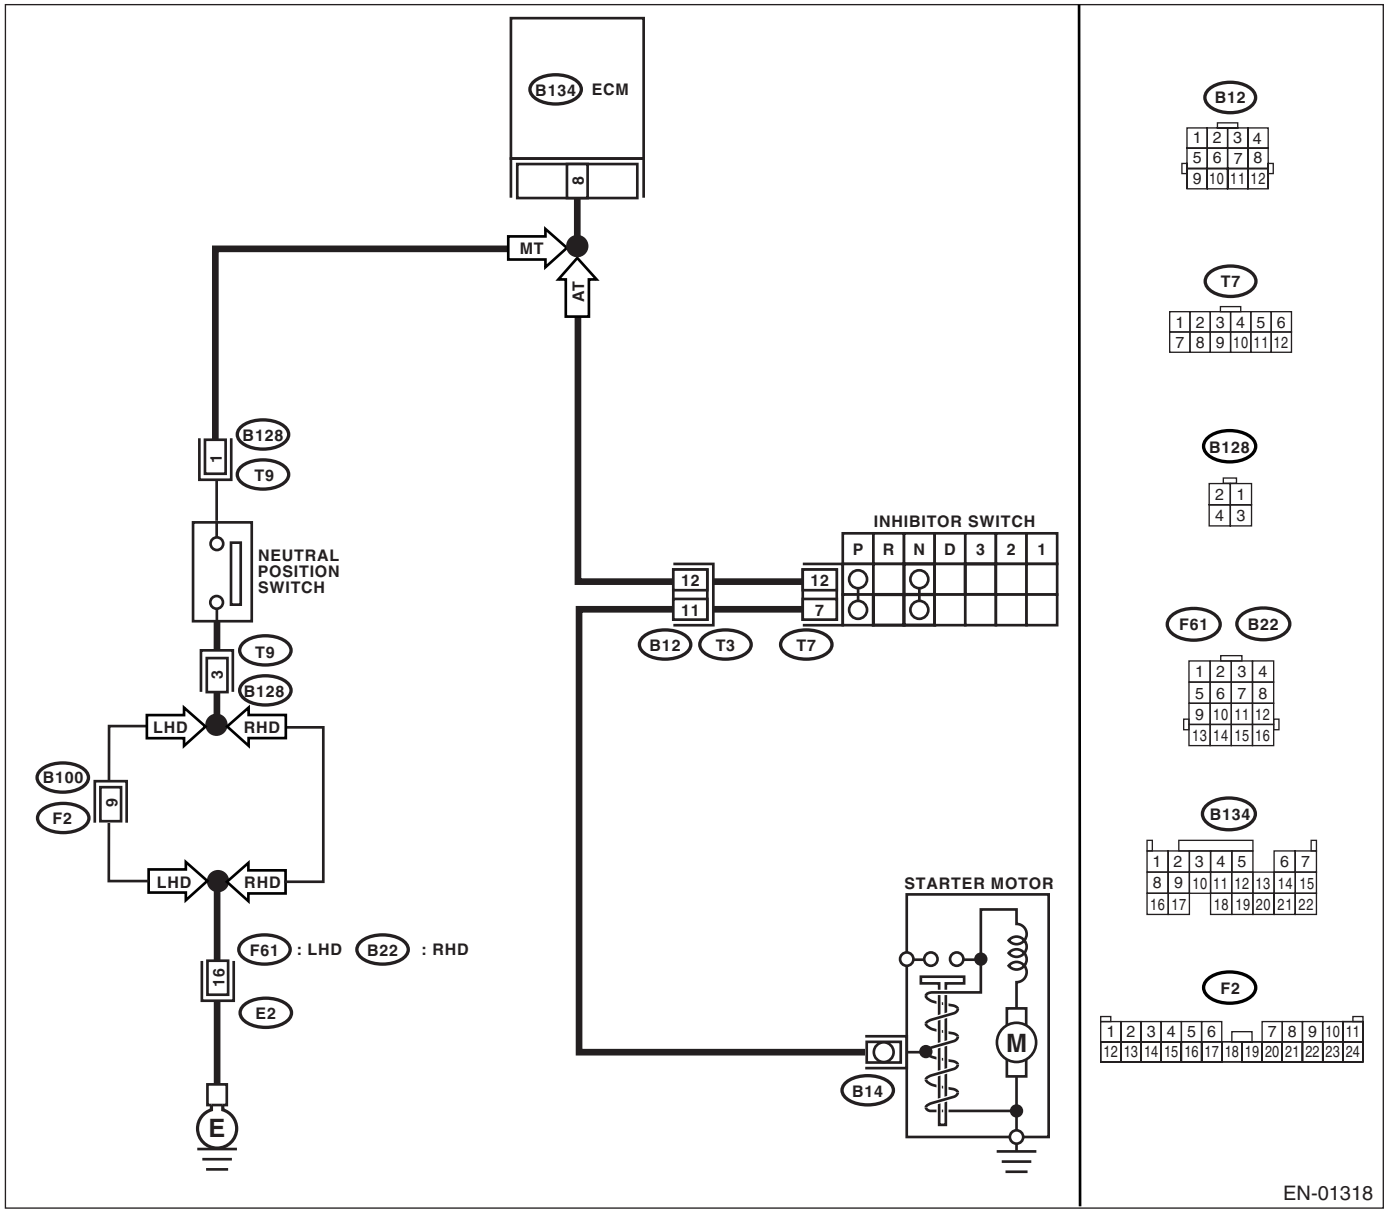

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Place the shift lever in neutral. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Place the shift lever in a position except for neutral. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Go to step **4.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Contact your Subaru distributor service.
4	**CHECK NEUTRAL POSITION SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission harness. 3)Place the shift lever in neutral. 4)Measure the resistance between transmission harness and connector terminals. ***Connector & terminal*** ***(T9) No. 1 — No. 3:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair short circuit in transmission harness or replace neutral position switch.
5	**CHECK NEUTRAL POSITION SWITCH.** 1)Place the shift lever in a position except for neutral. 2)Measure the resistance between transmission harness connector terminals. ***Terminals*** ***No. 1 — No. 3:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair short circuit in transmission harness or replace neutral position switch.
6	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** Measure the resistance between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair ground short circuit in harness between ECM and transmission harness connector.
7	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and transmission harness connector. ***Connector & terminal*** ***(B134) No. 8 — (B128) No. 1:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair open circuit in harness between ECM and transmission harness connector.
8	**CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.** Measure the resistance of harness between transmission harness connector and engine ground. ***Connector & terminal*** ***(B128) No. 1 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **9.**	Repair open circuit between transmission harness connector and engine ground terminal.

	Step	Check	Yes	No
9	**CHECK POOR CONTACT.** Check poor contact in transmission harness connector.	Is there poor contact in transmission harness connector?	Repair poor contact in transmission harness connector.	Contact your Subaru distributor service.

CB:DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH (AT MODEL) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

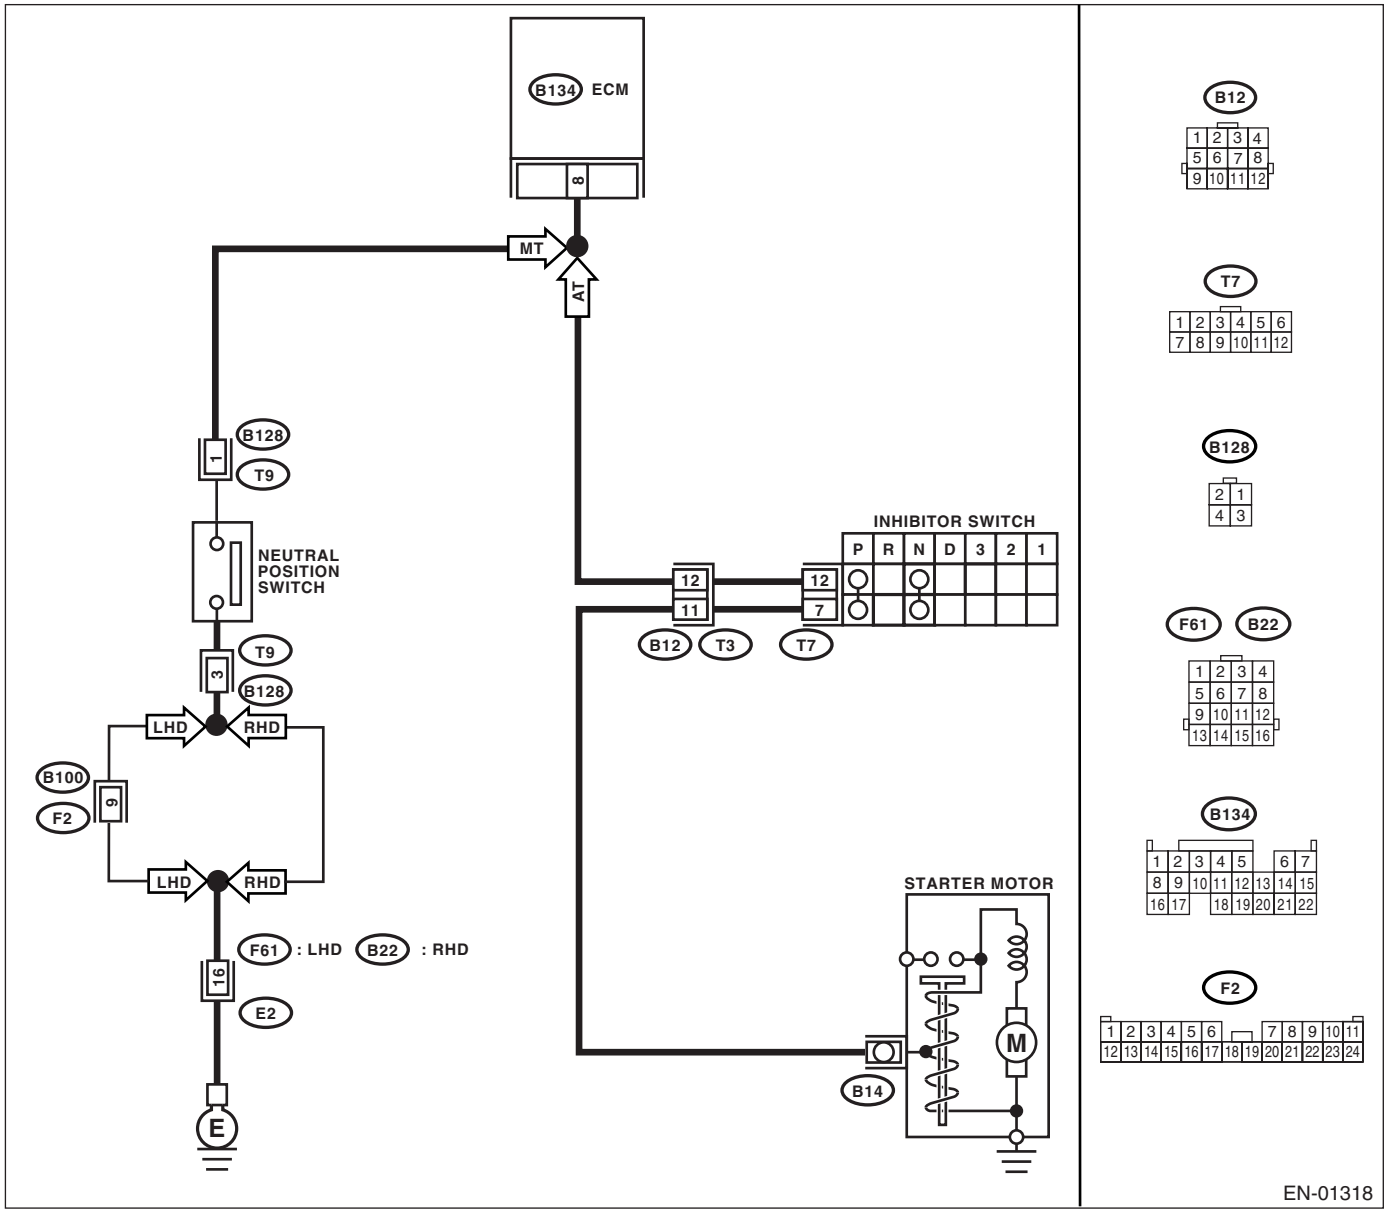

	Step	Check	Yes	No
1	**CHECK DTC P0705 ON DISPLAY.**	Is DTC P0705 indicated?	Inspect DTC P0705 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground in selector lever "N" and "P" positions. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Go to step **5.**
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground in selector lever except for "N" and "P" positions. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage 4.5 — 5.5 V?	Go to step **4.**	Go to step **5.**
4	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair battery short circuit in harness between ECM and inhibitor switch connector.	Go to step **6.**
6	**CHECK HARNESS BETWEEN ECM AND INHIBITOR SWITCH CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and inhibitor switch. 3)Measure the resistance of harness between ECM and inhibitor switch connector. ***Connector & terminal*** ***(B134) No. 8 — (T7) No. 12:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and inhibitor switch connector • Poor contact in coupling connector • Poor contact in inhibitor switch connector • Poor contact in ECM connector

	Step	Check	Yes	No
7	**CHECK INHIBITOR SWITCH GROUND LINE.** Measure the resistance of harness between inhibitor switch connector and engine ground. ***Connector & terminal*** ***(T7) No. 7 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **8.**	Repair open circuit in harness between inhibitor switch connector and starter motor ground line. NOTE: In this case, repair the following: • Open circuit in harness between inhibitor switch connector and starter motor ground line • Poor contact in starter motor connector • Poor contact in starter motor ground • Starter motor
8	**CHECK INHIBITOR SWITCH.** Measure the resistance between inhibitor switch connector receptacle's terminals in selector lever “N” and “P” positions. ***Terminals*** ***No. 7 — No. 12:***	Is the resistance less than 1 Ω?	Go to step **9.**	Replace the inhibitor switch. <Ref. to 4AT-48, Inhibitor Switch.>
9	**CHECK SELECTOR CABLE CONNECTION.**	Is there any fault in selector cable connection to inhibitor switch?	Repair selector cable connection. <Ref. to CS-14, INSPECTION, Select Cable.>	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

CC:DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH (MT MODEL) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

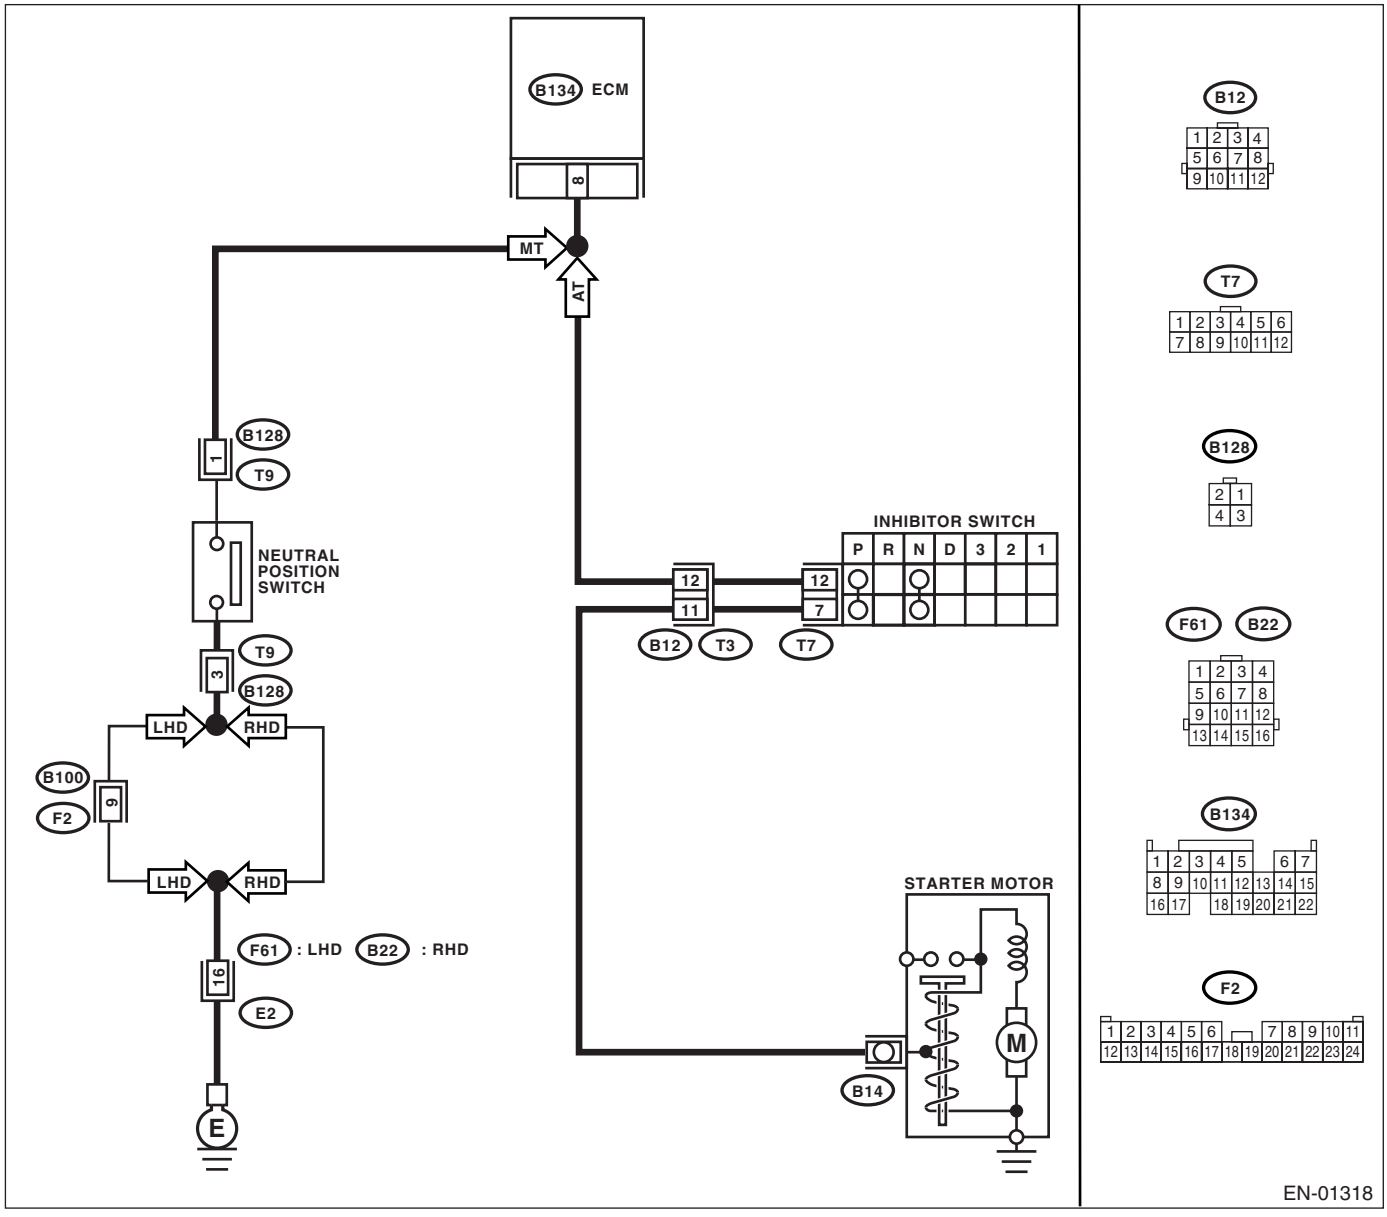

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Set the shift lever to except neutral position. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** 1)Set the shift lever to neutral position. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Go to step **4.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service.
4	**CHECK INPUT SIGNAL FOR ECM.** 1)Disconnect ECM connector from ECM. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and transmission connector.	Go to step **5.**
5	**CHECK HARNESS BETWEEN ECM AND TRANSMISSION HARNESS CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and transmission harness connector (T9). 3)Measure the resistance of harness between ECM and neutral switch connector. ***Connector & terminal*** ***(B134) No. 8 — (B128) No. 1:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and transmission harness • Poor contact in transmission harness connector • Poor contact in ECM connector
6	**CHECK NEUTRAL POSITION SWITCH GROUND LINE.** Measure the resistance of harness between transmission harness connector and engine ground. ***Connector & terminal*** ***(B128) No. 3 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **7.**	Repair the open circuit in harness of neutral position switch ground line.
7	**CHECK NEUTRAL POSITION SWITCH.** 1)Set the shift lever to except neutral position. 2)Measure the resistance between transmission harness connector receptacle's terminals. ***Terminals*** ***No. 1 — No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Replace the neutral position switch.
8	**CHECK POOR CONTACT.** Check poor contact in the transmission harness connector.	Is there poor contact in the transmission harness connector?	Repair poor contact in transmission harness connector.	Contact your Subaru distributor service.

CD:DTC P0864 — TCM COMMUNICATION CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

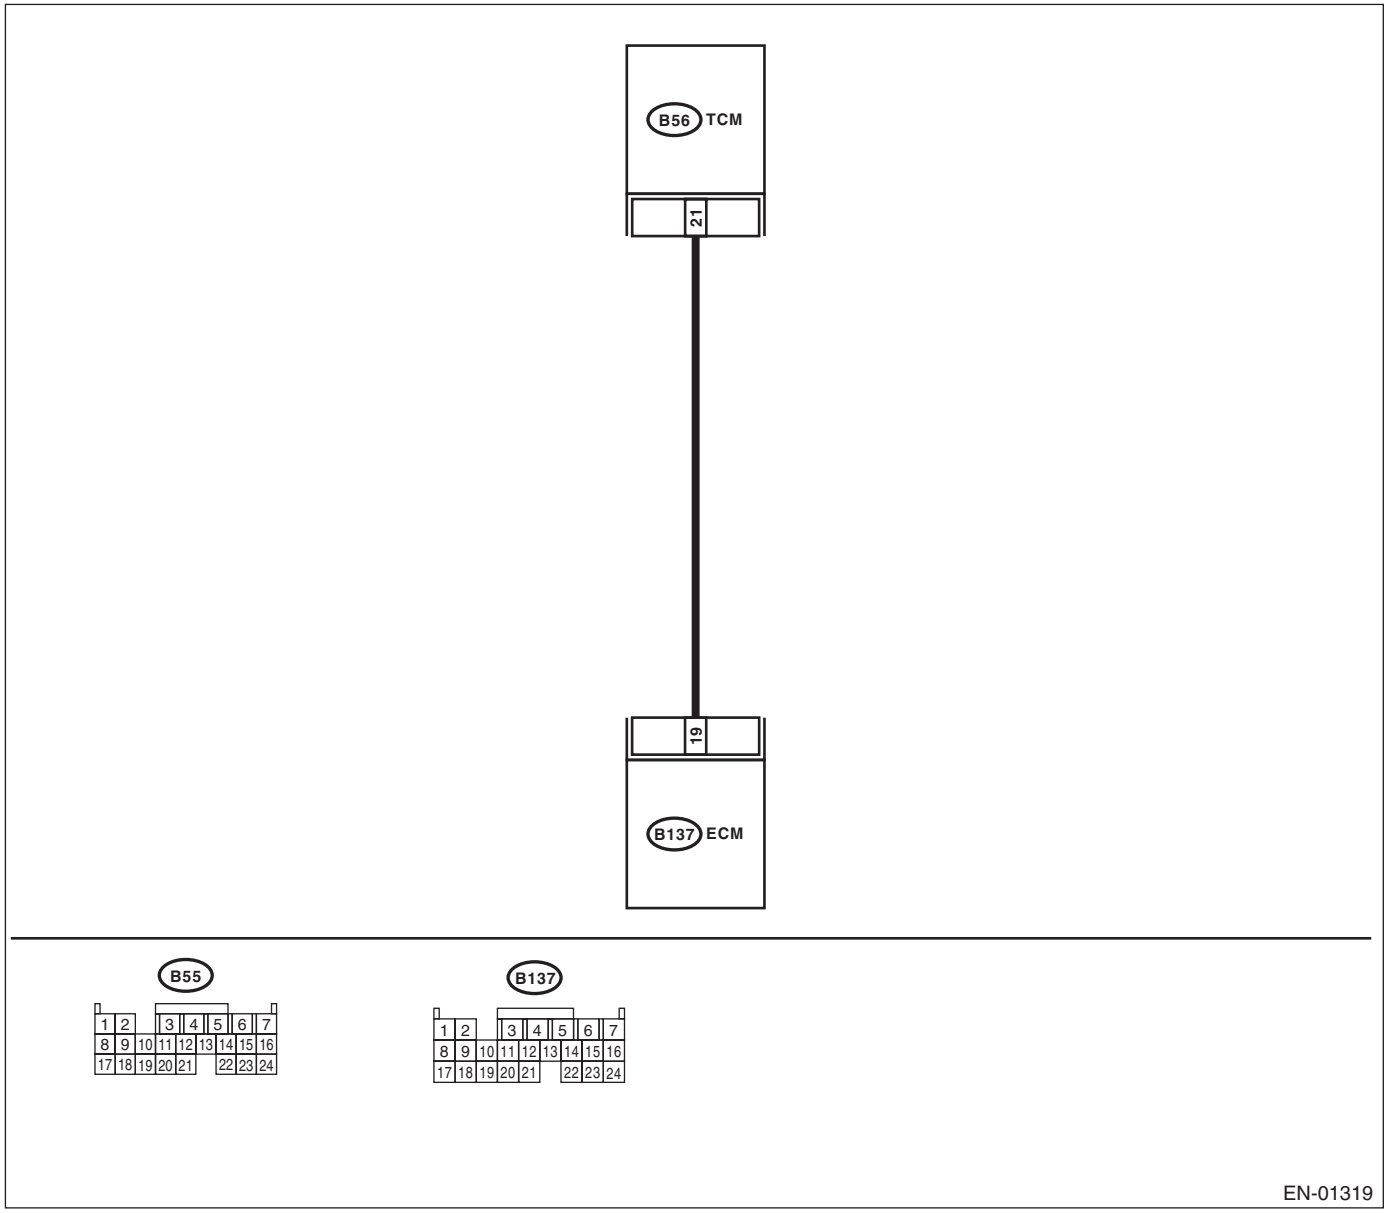

	Step	Check	Yes	No
1	**CHECK DRIVING CONDITION.** 1)Start and warm-up the engine until the radiator fan makes one complete rotation. 2)Drive the vehicle.	Is the AT shift control functioning properly?	Go to step **2.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

Step		Check	Yes	No
2	CHECK ACCESSORY.	Are car phone and/or CB installed on vehicle?	Repair the grounding line of car phone or CB system.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

CE:DTC P0865 — TCM COMMUNICATION CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

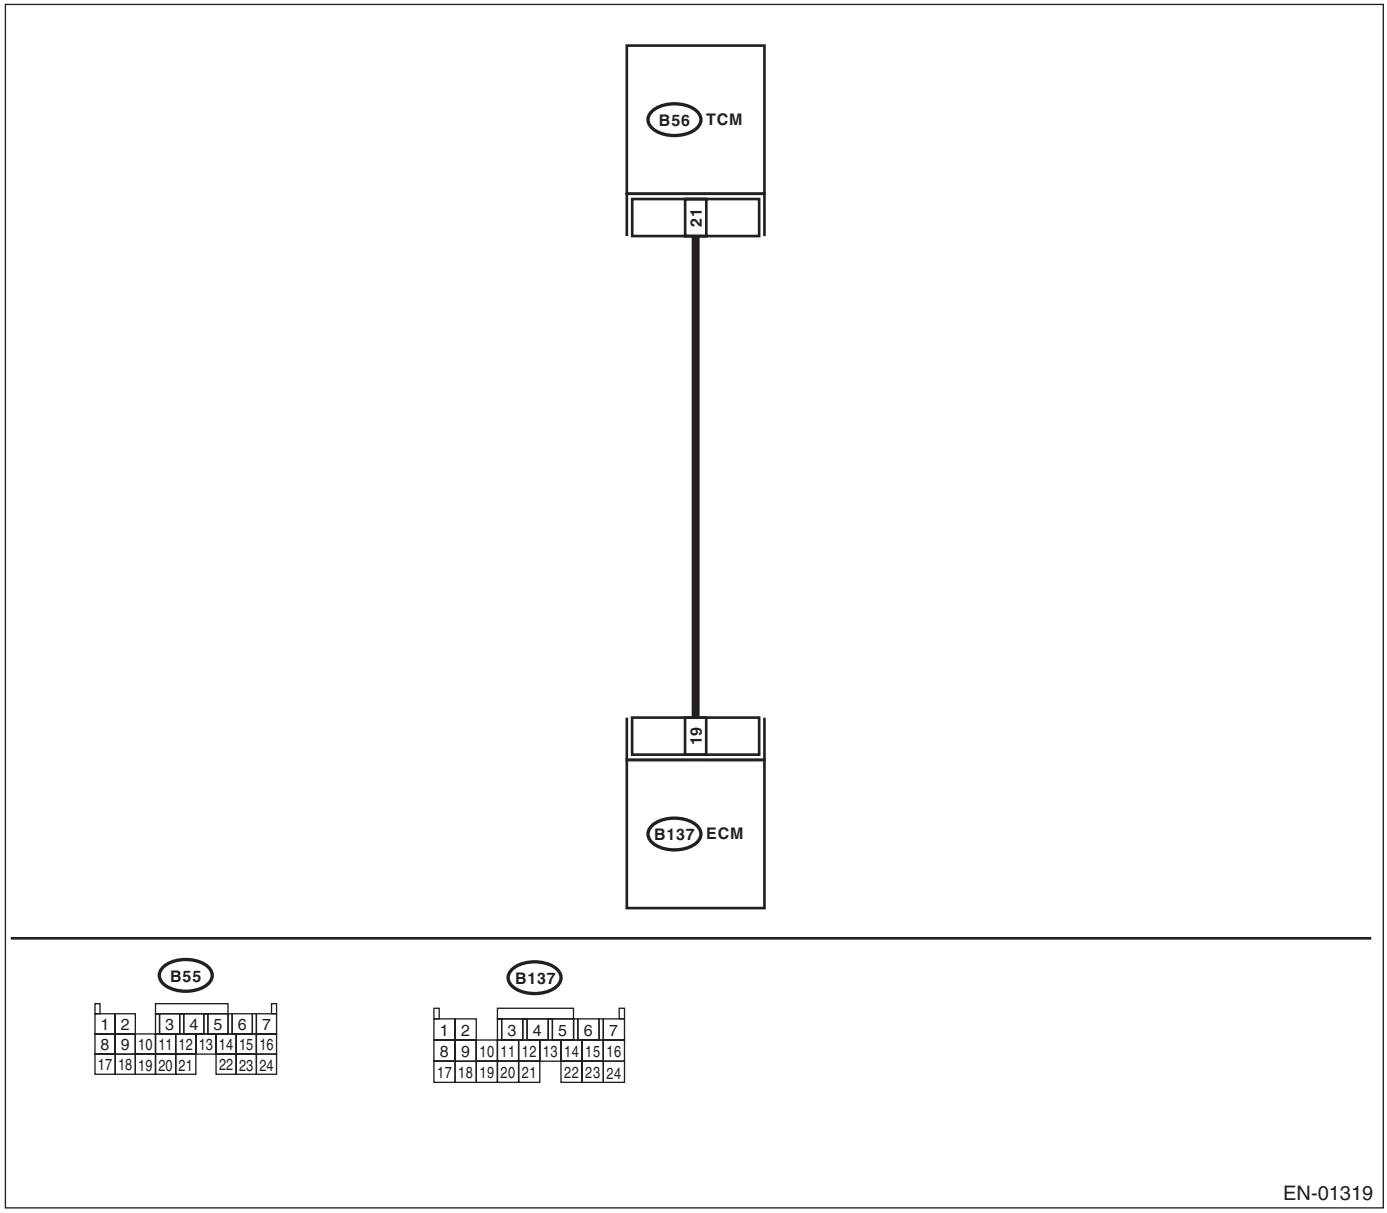

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. NOTE: In this case, repair the following: • Poor contact in ECM connector • Poor contact in TCM connector
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and TCM. 3)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM and TCM connector.	Go to step **3.**
3	**CHECK OUTPUT SIGNAL FOR ECM.** 1)Connect the connector to ECM. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 5 V?	Go to step **4.**	Repair the poor contact in ECM connector.
4	**CHECK DTC FOR AUTOMATIC TRANSMISSION.** Read the DTC for automatic transmission. <Ref. to 4AT-24, Read Diagnostic Trouble Code (DTC).>	Does the DTC appear for automatic transmission?	Inspect the DTC for automatic transmission. <Ref. to 4AT-41, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

CF:DTC P0866 — TCM COMMUNICATION CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

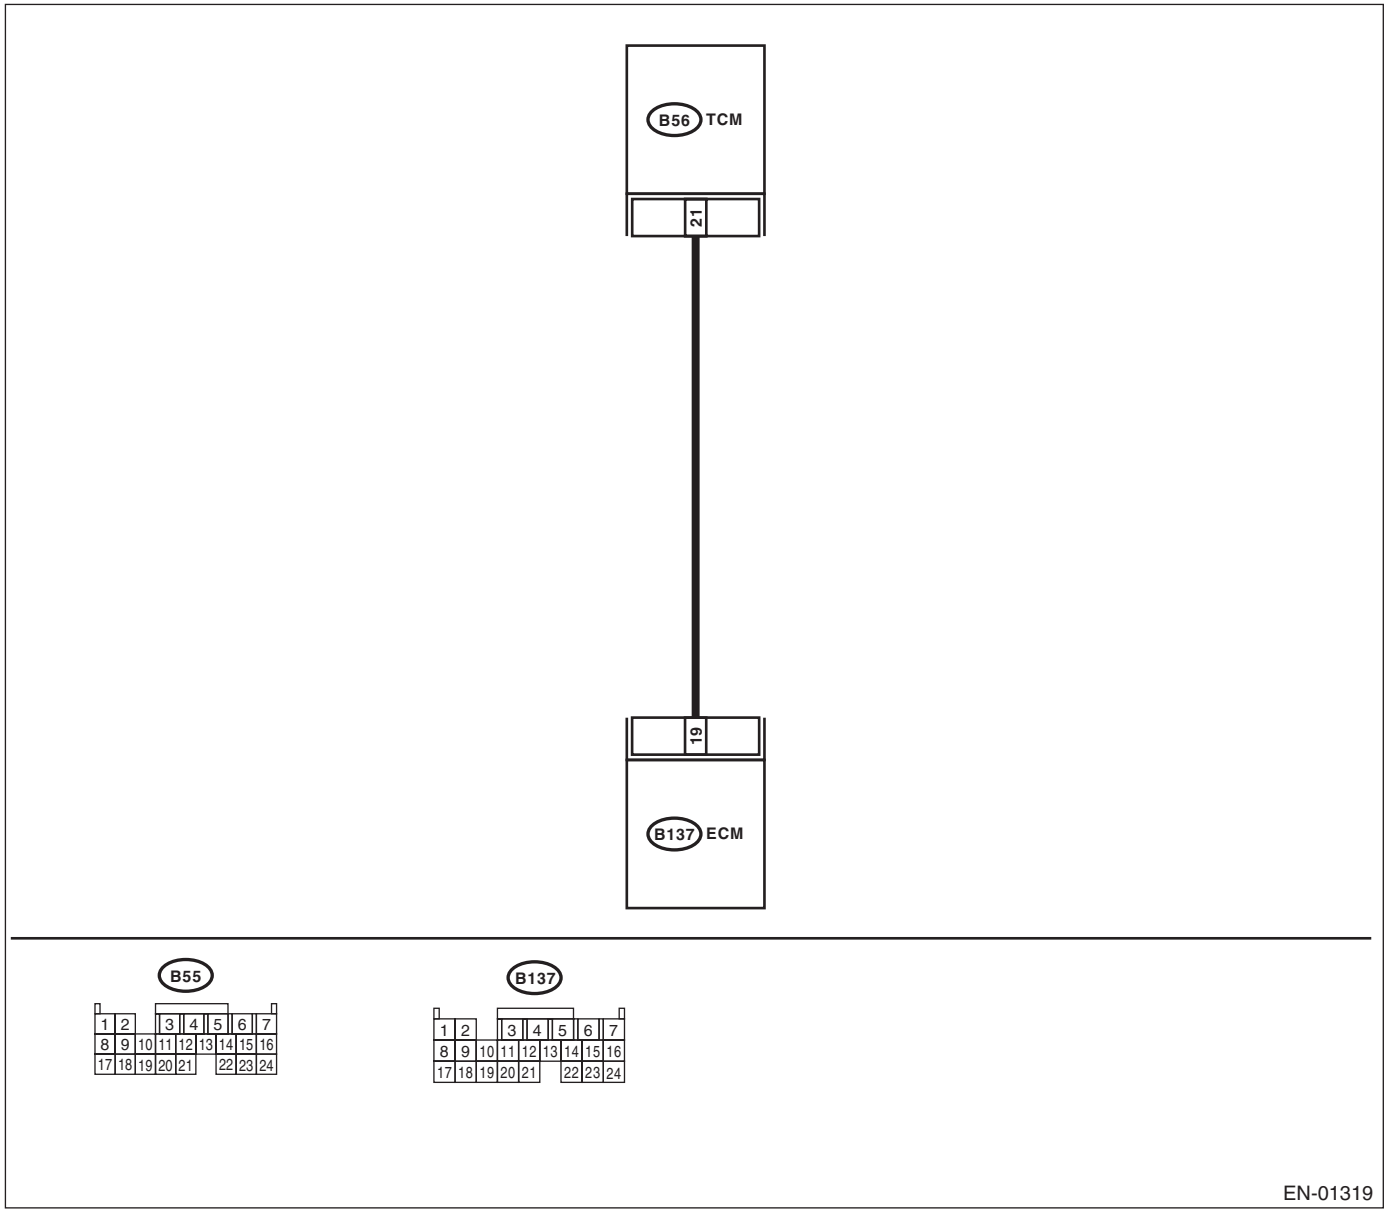

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and TCM connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Go to step **2.**
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 4 V?	Go to step **5.**	Go to step **3.**
3	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Repair the poor contact in ECM connector.	Go to step **4.**
4	**CHECK OUTPUT SIGNAL FROM ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 19 (+) — Chassis ground (−):***	Does the voltage change between 1 and 4 V while monitoring the value with voltage meter?	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. NOTE: In this case, repair the following: • Poor contact in ECM connector • Poor contact in TCM connector	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B56) No. 21 (+) — Chassis ground (−):***	Is the voltage more than 4 V?	Go to step **6.**	Repair the open circuit in harness between ECM and TCM connector.
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Check the TCM power supply line and grounding line.

CG: DTC P1086 — TUMBLE GENERATED VALVE POSITION SENSOR 2 CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

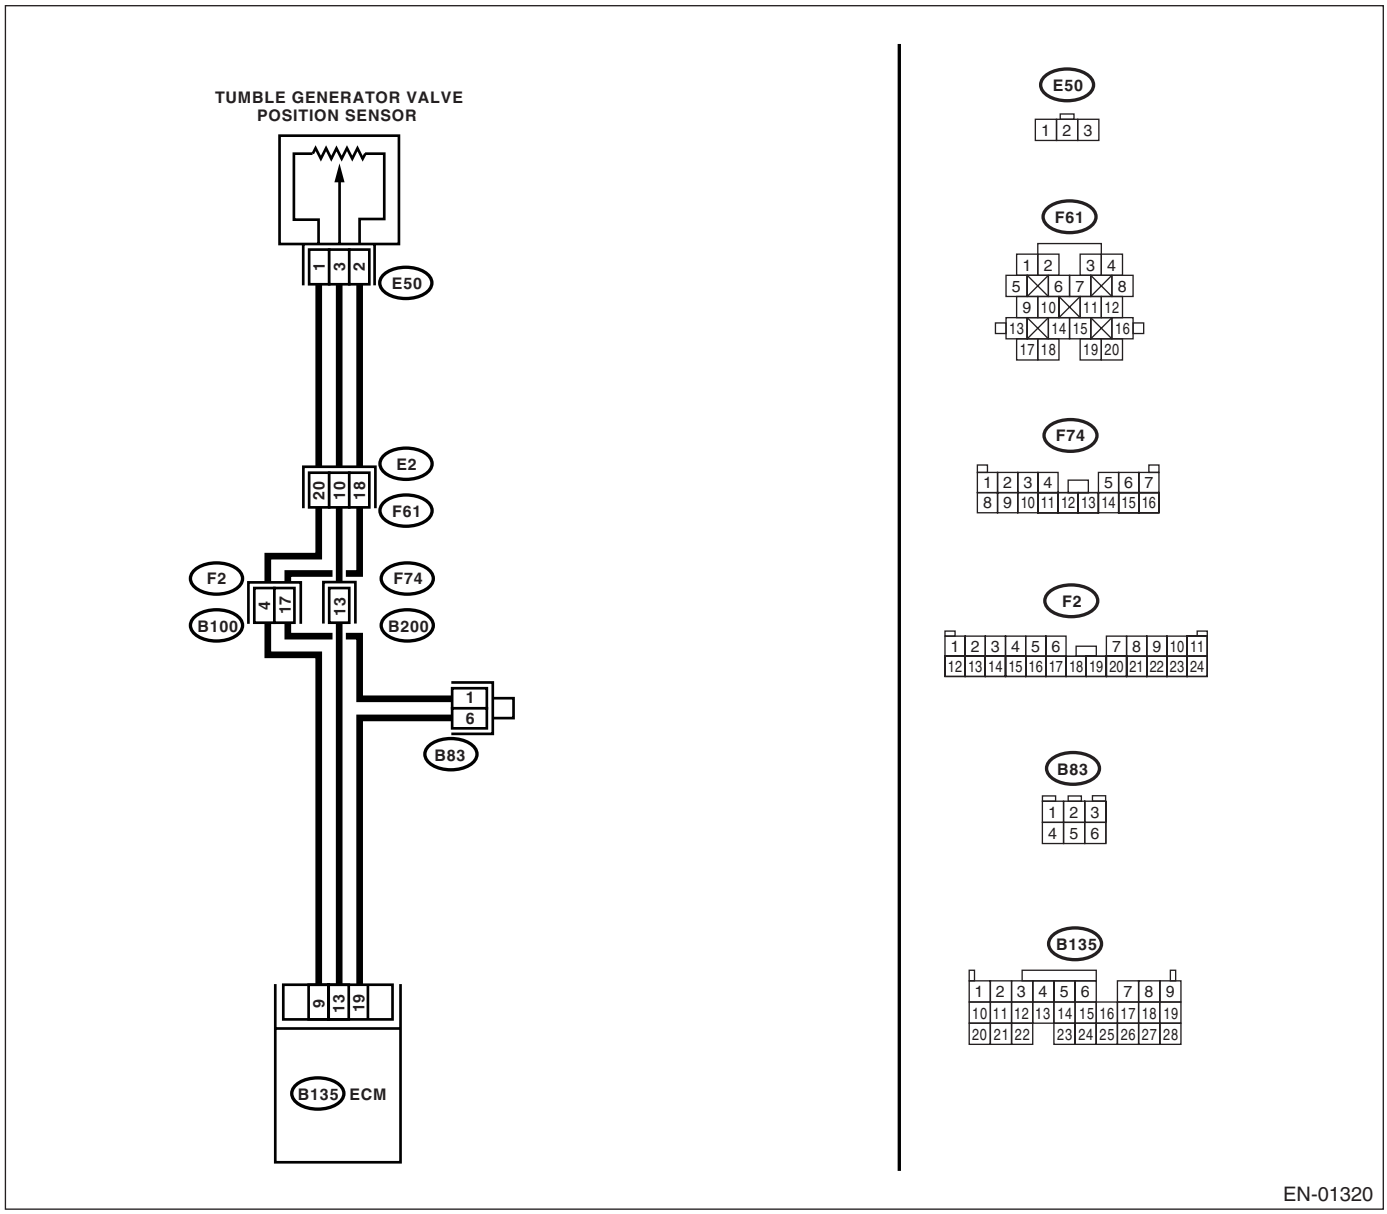

- **RHD model**

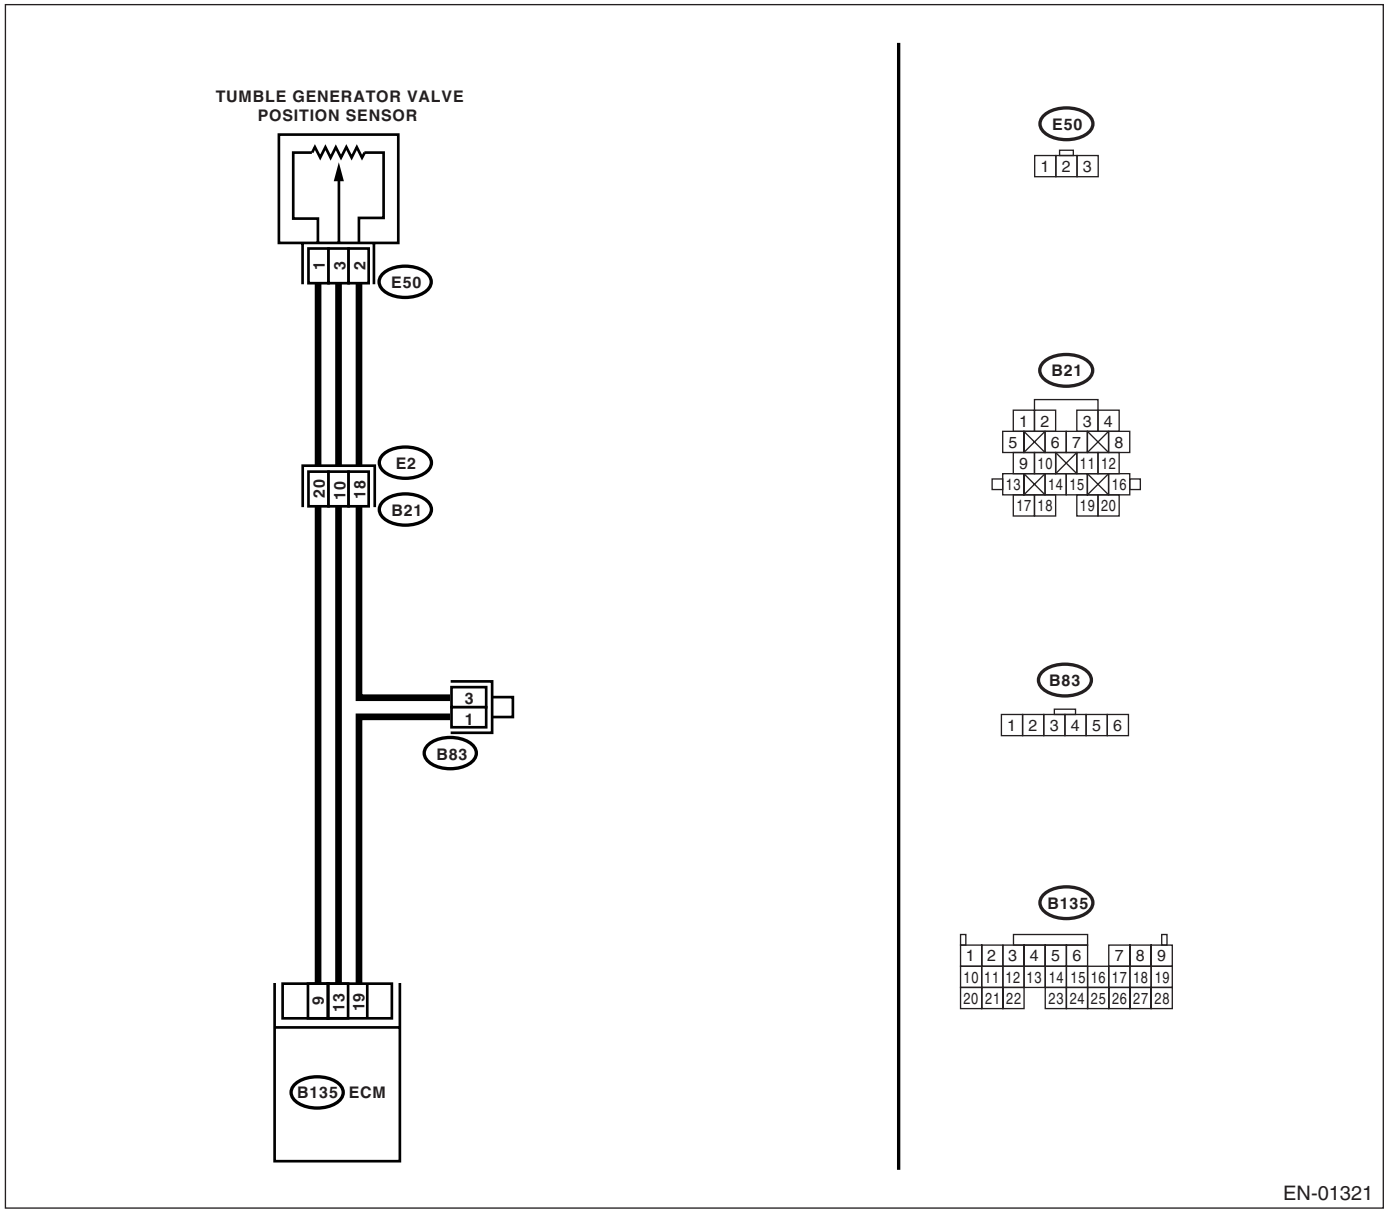
TUMBLE GENERATOR VALVE POSITION SENSOR
E50
1 3 2
E2
20 10 18
B21
3
1
B83
9 13 19
B135 ECM
E50
1 2 3
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B83
1 2 3 4 5 6
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01321

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of tumble generator valve position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage less than 0.1 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in tumble generator valve position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Go to step **3.**
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 13 (+) — Chassis ground (−):***	Is the voltage less than 0.1 V?	Go to step **6.**	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR)** Measure the voltage between ECM connector and chassis ground.	Shake the ECM harness and connector, while monitoring value of Subaru Select Monitor. Does the voltage change?	Repair the poor contact in ECM connector.	Go to step **6.**

	Step	Check	Yes	No
6	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from tumble generator valve position sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E50) No. 1 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **7.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between tumble generator valve position sensor and ECM connector • Poor contact in tumble generator valve position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector
7	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between ECM connector and tumble generator valve position sensor connector. ***Connector & terminal*** ***(B135) No. 13 — (E50) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between tumble generator valve position sensor and ECM connector • Poor contact in ECM connector • Poor contact in tumble generator valve position sensor connector • Poor contact in coupling connector
8	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE POSITION SENSOR CONNECTOR.** Measure the resistance of harness between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E50) No. 3 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the ground short circuit in harness between tumble generator valve position sensor and ECM connector.
9	**CHECK POOR CONTACT.** Check poor contact in tumble generator valve position sensor connector.	Is there poor contact in tumble generator valve position sensor connector?	Repair the poor contact in tumble generator valve position sensor connector.	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>

CH:DTC P1087 — TUMBLE GENERATED VALVE POSITION SENSOR 2 CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

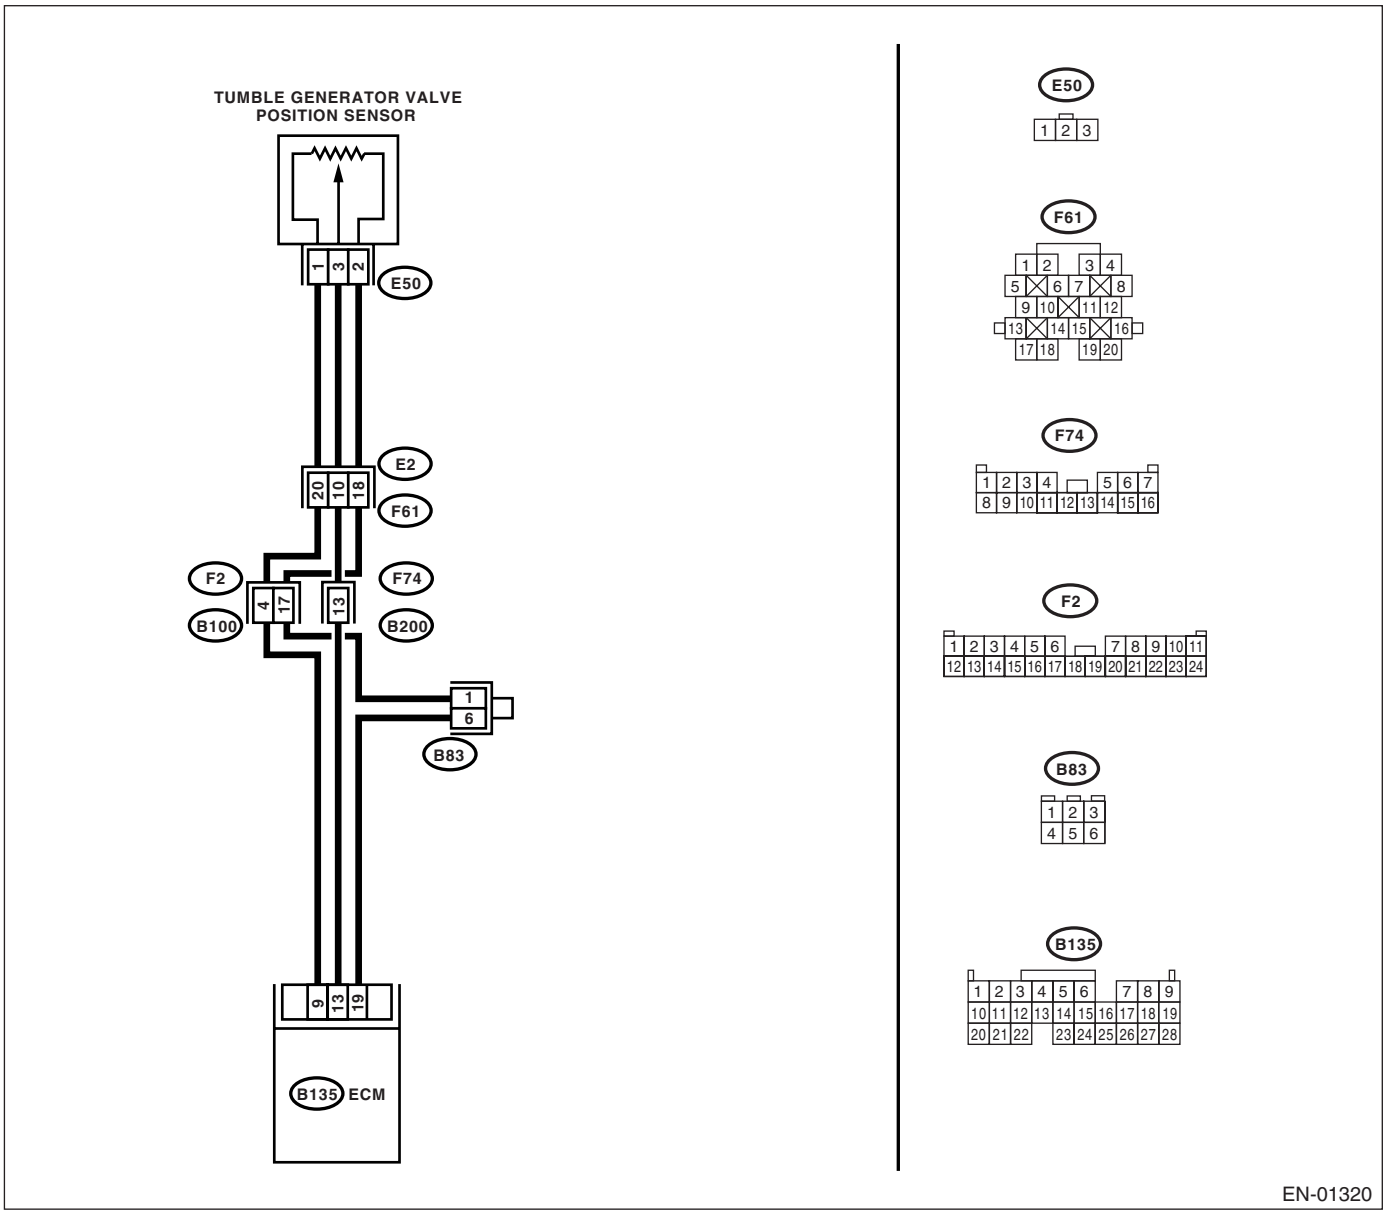

EN-01320

- **RHD model**

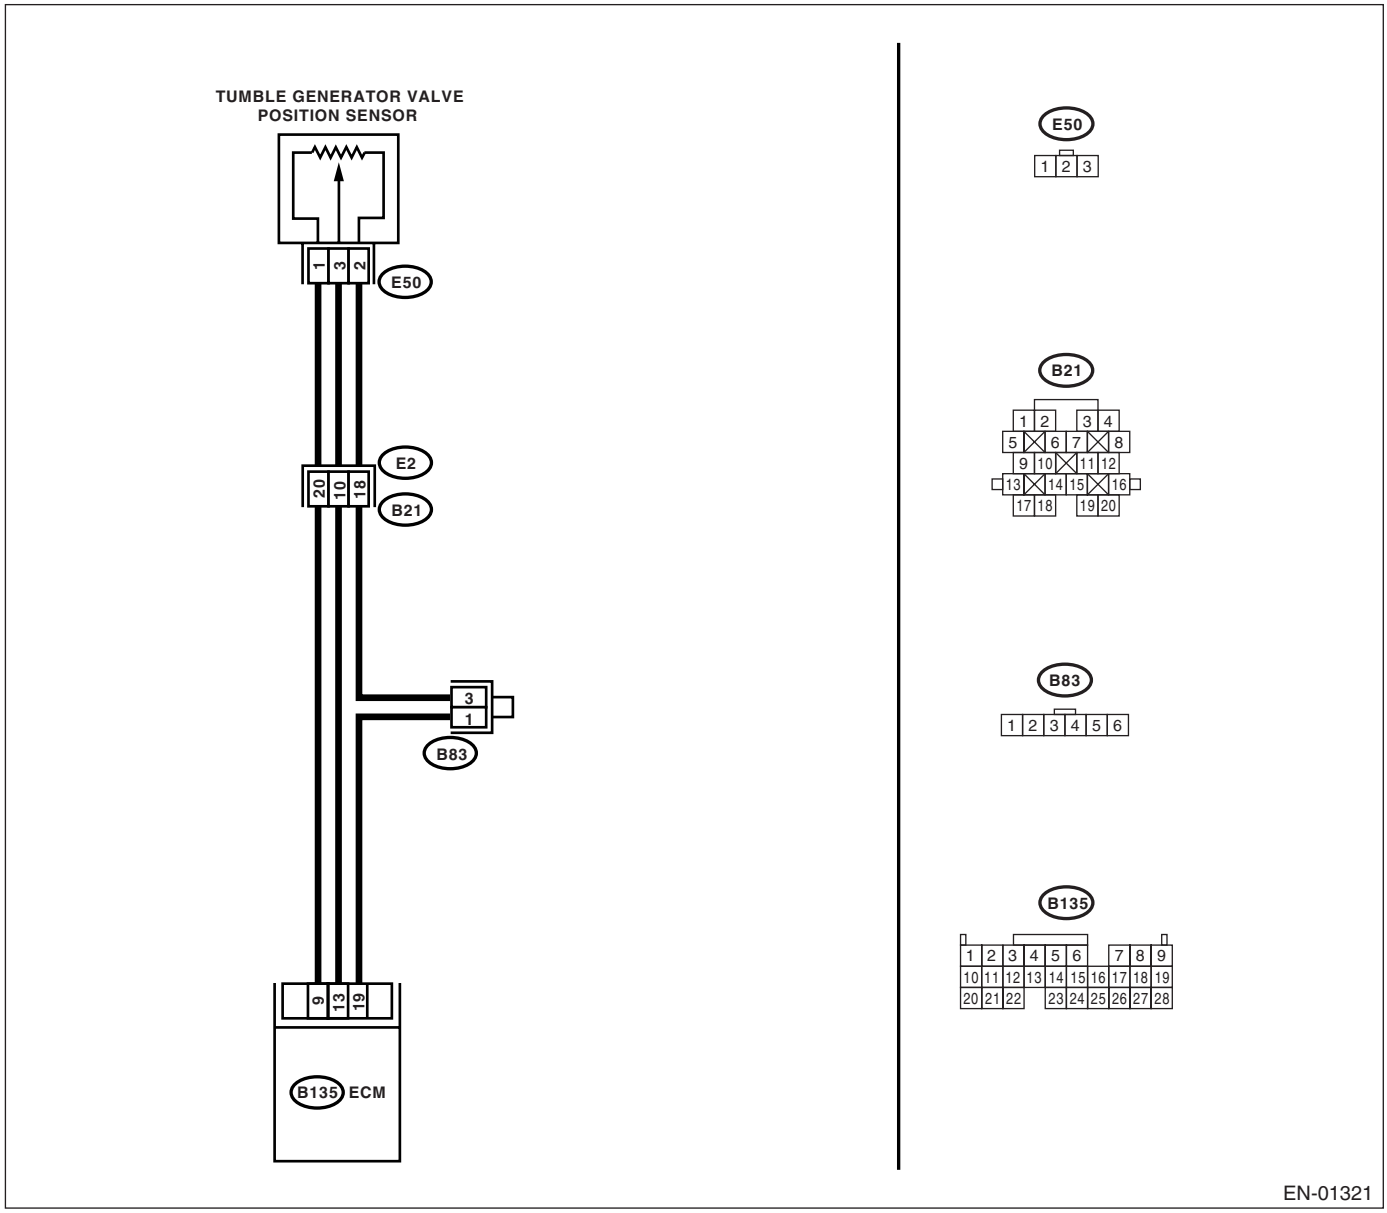
TUMBLE GENERATOR VALVE POSITION SENSOR
E50
1 3 2
E2
20 10 18
B21
3
1
B83
9 13 19
B135 ECM
E50
1 2 3
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B83
1 2 3 4 5 6
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01321

Step		Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of tumble generator valve position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage more than 4.9 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in tumble generator valve position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK HARNESS BETWEEN TUMBLE GENERATOR VALVE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from tumble generator valve position sensor. 3)Measure the resistance of harness between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E50) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between tumble generator valve position sensor and ECM connector • Poor contact in coupling connector • Poor contact in joint connector
3	**CHECK HARNESS BETWEEN TUMBLE GENERATOR VALVE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E50) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.9 V?	Repair the battery short circuit in harness between tumble generator valve position sensor and ECM connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>

CI: DTC P1088 — TUMBLE GENERATED VALVE POSITION SENSOR 1 CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

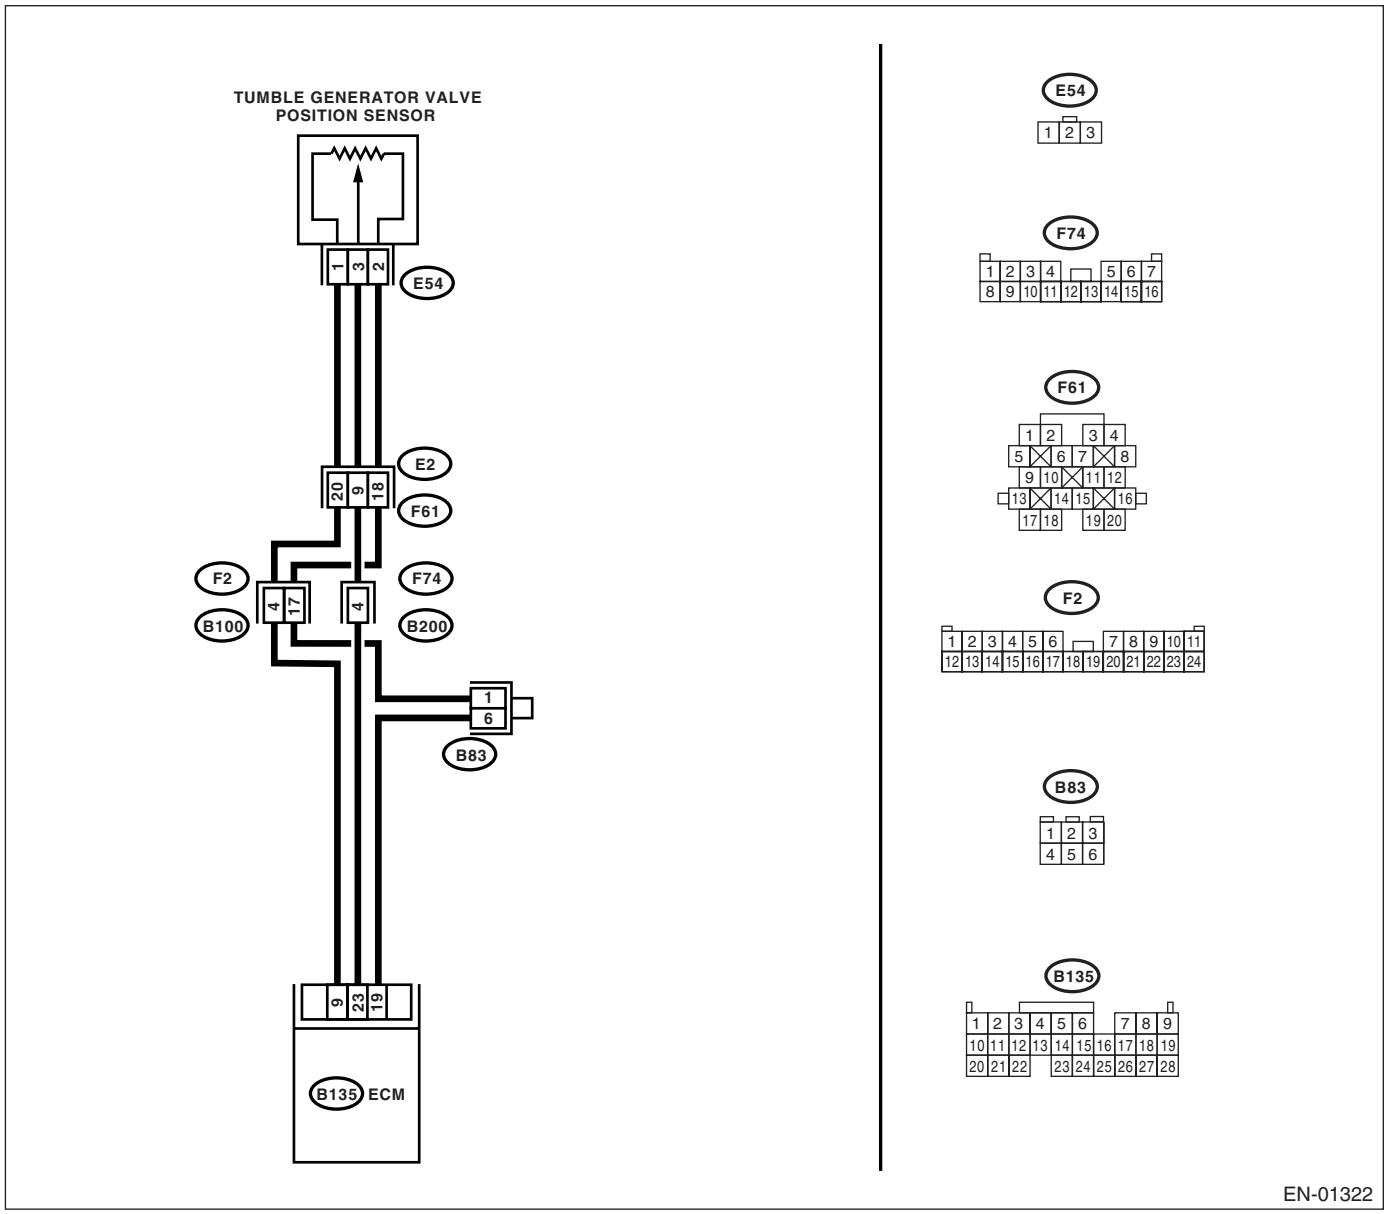

- **RHD model**

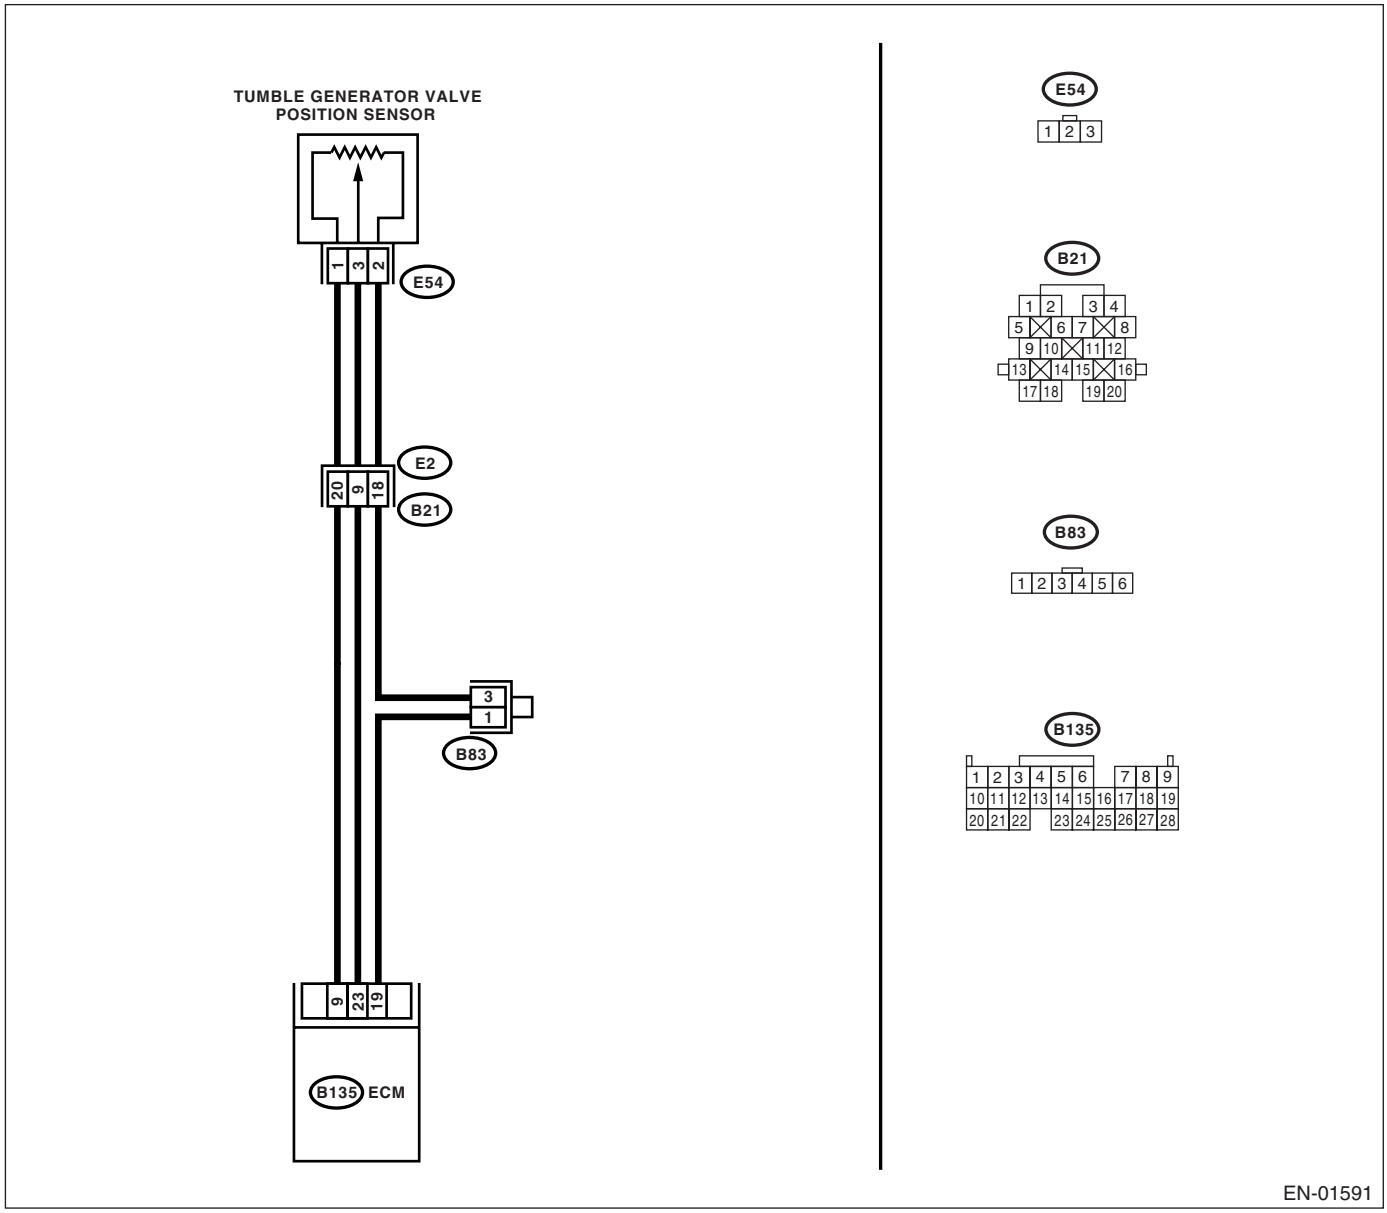
TUMBLE GENERATOR VALVE POSITION SENSOR
1 3 2
E54
E2
20 9 18
B21
3 1
B83
9 23 19
B135 ECM
E54
1 2 3
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B83
1 2 3 4 5 6
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01591

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of tumble generator valve position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage less than 0.1 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in tumble generator valve position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Go to step **3.**
3	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 9 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Does the voltage change?	Repair the poor contact in ECM connector.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B135) No. 23 (+) — Chassis ground (−):***	Is the voltage less than 0.1 V?	Go to step **6.**	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR)** Measure the voltage between ECM connector and chassis ground.	Shake the ECM harness and connector, while monitoring value of Subaru Select Monitor. Does the voltage change?	Repair the poor contact in ECM connector.	Go to step **6.**

	Step	Check	Yes	No
6	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from tumble generator valve position sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E54) No. 1 (+) — Engine ground (−):***	Is the voltage more than 4.5 V?	Go to step **7.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between tumble generator valve position sensor and ECM connector • Poor contact in tumble generator valve position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector
7	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE POSITION SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between ECM connector and tumble generator valve position sensor connector. ***Connector & terminal*** ***(B135) No. 23 — (E54) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between tumble generator valve position sensor and ECM connector • Poor contact in ECM connector • Poor contact in tumble generator valve position sensor connector • Poor contact in coupling connector
8	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE POSITION SENSOR CONNECTOR.** Measure the resistance of harness between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E54) No. 3 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the ground short circuit in harness between tumble generator valve position sensor and ECM connector.
9	**CHECK POOR CONTACT.** Check poor contact in tumble generator valve position sensor connector.	Is there poor contact in tumble generator valve position sensor connector?	Repair the poor contact in tumble generator valve position sensor connector.	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>

CJ:DTC P1089 — TUMBLE GENERATED VALVE POSITION SENSOR 1 CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

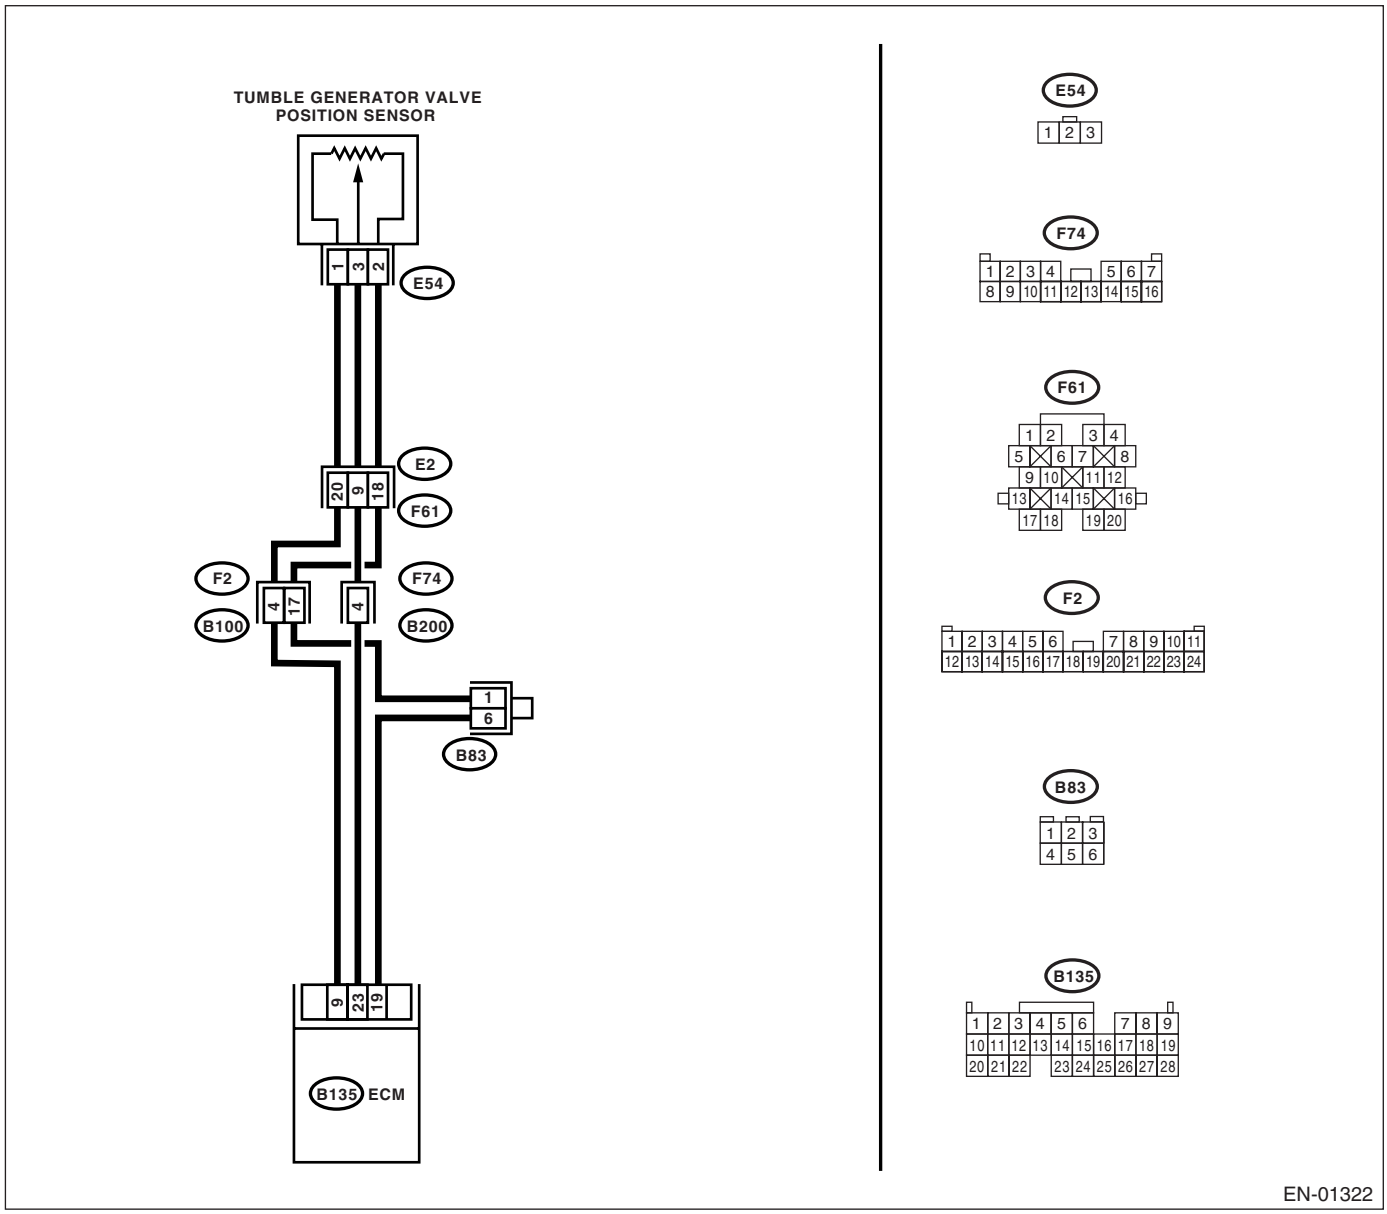

- **RHD model**

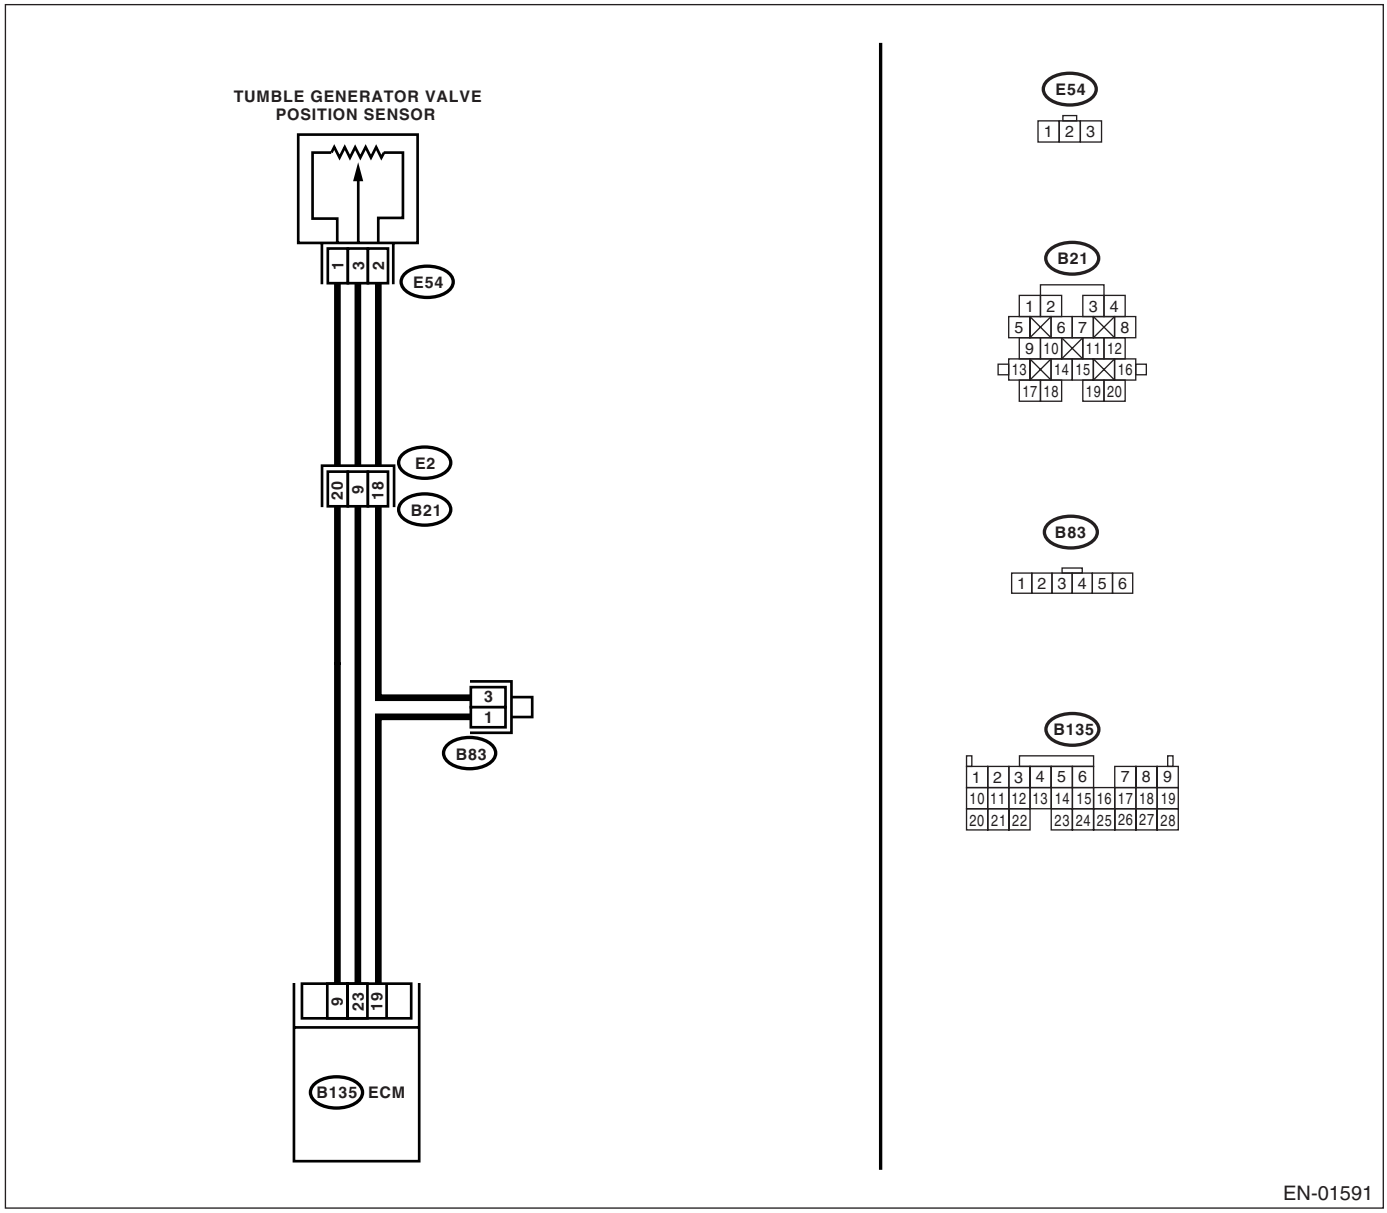
TUMBLE GENERATOR VALVE POSITION SENSOR
1 3 2
E54
E2
20 9 18
B21
3 1
B83
9 23 19
B135 ECM
E54
1 2 3
B21
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B83
1 2 3 4 5 6
B135
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
EN-01591

	Step	Check	Yes	No
1	**CHECK CURRENT DATA.** 1)Start the engine. 2)Read the data of tumble generator valve position sensor signal using Subaru Select Monitor or OBD-II general scan tool. NOTE: •Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H4DOTC)-32, Subaru Select Monitor.> •OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Is the voltage more than 4.9 V?	Go to step **2.**	Even if malfunction indicator light lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in tumble generator valve position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
2	**CHECK HARNESS BETWEEN TUMBLE GENERATOR VALVE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from tumble generator valve position sensor. 3)Measure the resistance of harness between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E54) No. 2 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between tumble generator valve position sensor and ECM connector • Poor contact in coupling connector • Poor contact in joint connector
3	**CHECK HARNESS BETWEEN TUMBLE GENERATOR VALVE POSITION SENSOR AND ECM CONNECTOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between tumble generator valve position sensor connector and engine ground. ***Connector & terminal*** ***(E54) No. 3 (+) — Engine ground (−):***	Is the voltage more than 4.9 V?	Repair the battery short circuit in harness between tumble generator valve position sensor and ECM connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>

CK:DTC P1090 — TUMBLE GENERATED VALVE SYSTEM 1 (VALVE OPEN) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK TUMBLE GENERATOR VALVE RH.** 1)Remove the tumble generator valve assembly. 2)Check the tumble generator valve body.	Does the tumble generator valve move smoothly? (No dirt or foreign materials clogged)	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>	Clean the tumble generator valve.

CL:DTC P1091 — TUMBLE GENERATED VALVE SYSTEM 1 (VALVE CLOSE) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)" <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK TUMBLE GENERATOR VALVE RH.** 1)Remove the tumble generator valve assembly. 2)Check the tumble generator valve body.	Does the tumble generator valve move smoothly? (No dirt or foreign materials clogged)	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>	Clean the tumble generator valve.

CM:DTC P1092 — TUMBLE GENERATED VALVE SYSTEM 2 (VALVE OPEN) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK TUMBLE GENERATOR VALVE LH.** 1)Remove the tumble generator valve assembly. 2)Check the tumble generator valve body.	Does the tumble generator valve move smoothly? (No dirt or foreign materials clogged)	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>	Clean the tumble generator valve.

CN:DTC P1093 — TUMBLE GENERATED VALVE SYSTEM 2 (VALVE CLOSE) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK TUMBLE GENERATOR VALVE LH.** 1)Remove the tumble generator valve assembly. 2)Check the tumble generator valve body.	Does the tumble generator valve move smoothly? (No dirt or foreign materials clogged)	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>	Clean the tumble generator valve.

CO:DTC P1094 — TUMBLE GENERATED VALVE SIGNAL 1 CIRCUIT MALFUNCTION (OPEN) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

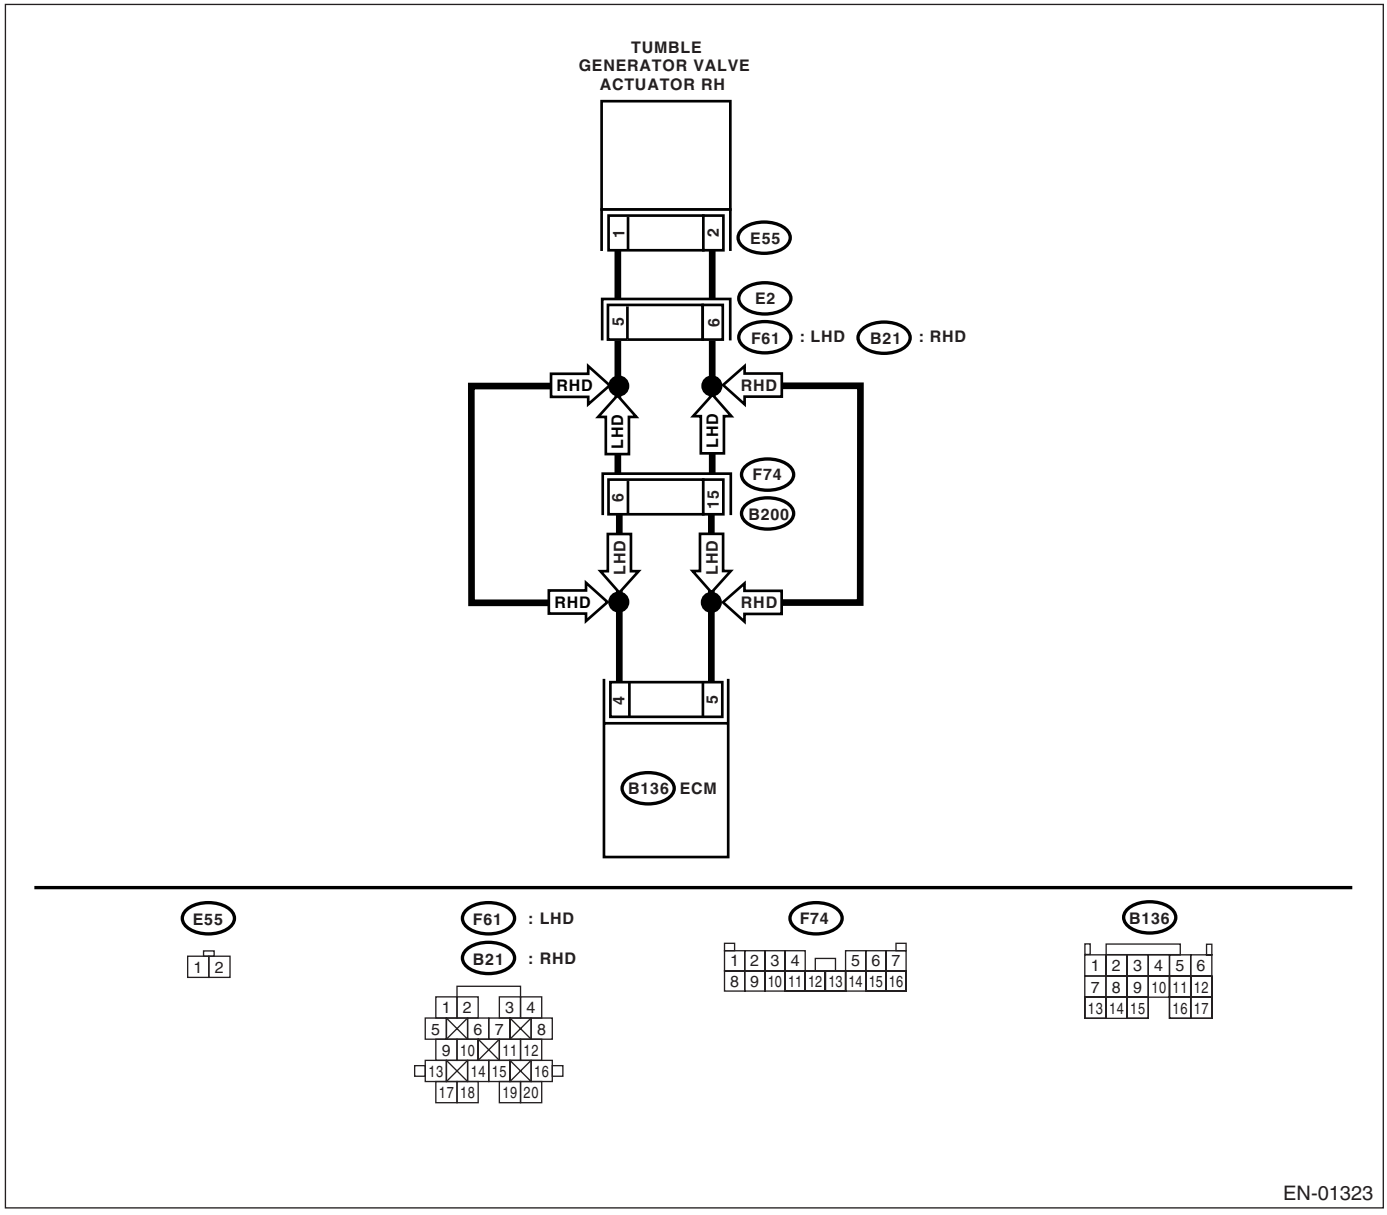

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE ACTUATOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from tumble generator valve and ECM connector. 3)Measure the resistance between tumble generator valve actuator and ECM connector. ***Connector & terminal*** ***(E55) No. 1 — (B136) No.4:*** ***(E55) No. 2 — (B136) No.5:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit between ECM and tumble generator valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and tumble generator valve actuator connector. • Poor contact in coupling connector.
2	**CHECK POOR CONTACT.** Check poor contact in tumble generator valve actuator connector.	Is there poor contact in tumble generator valve actuator connector?	Repair the poor contact in tumble generator valve actuator connector.	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>

CP:DTC P1095 — TUMBLE GENERATED VALVE SIGNAL 1 CIRCUIT MALFUNCTION (SHORT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

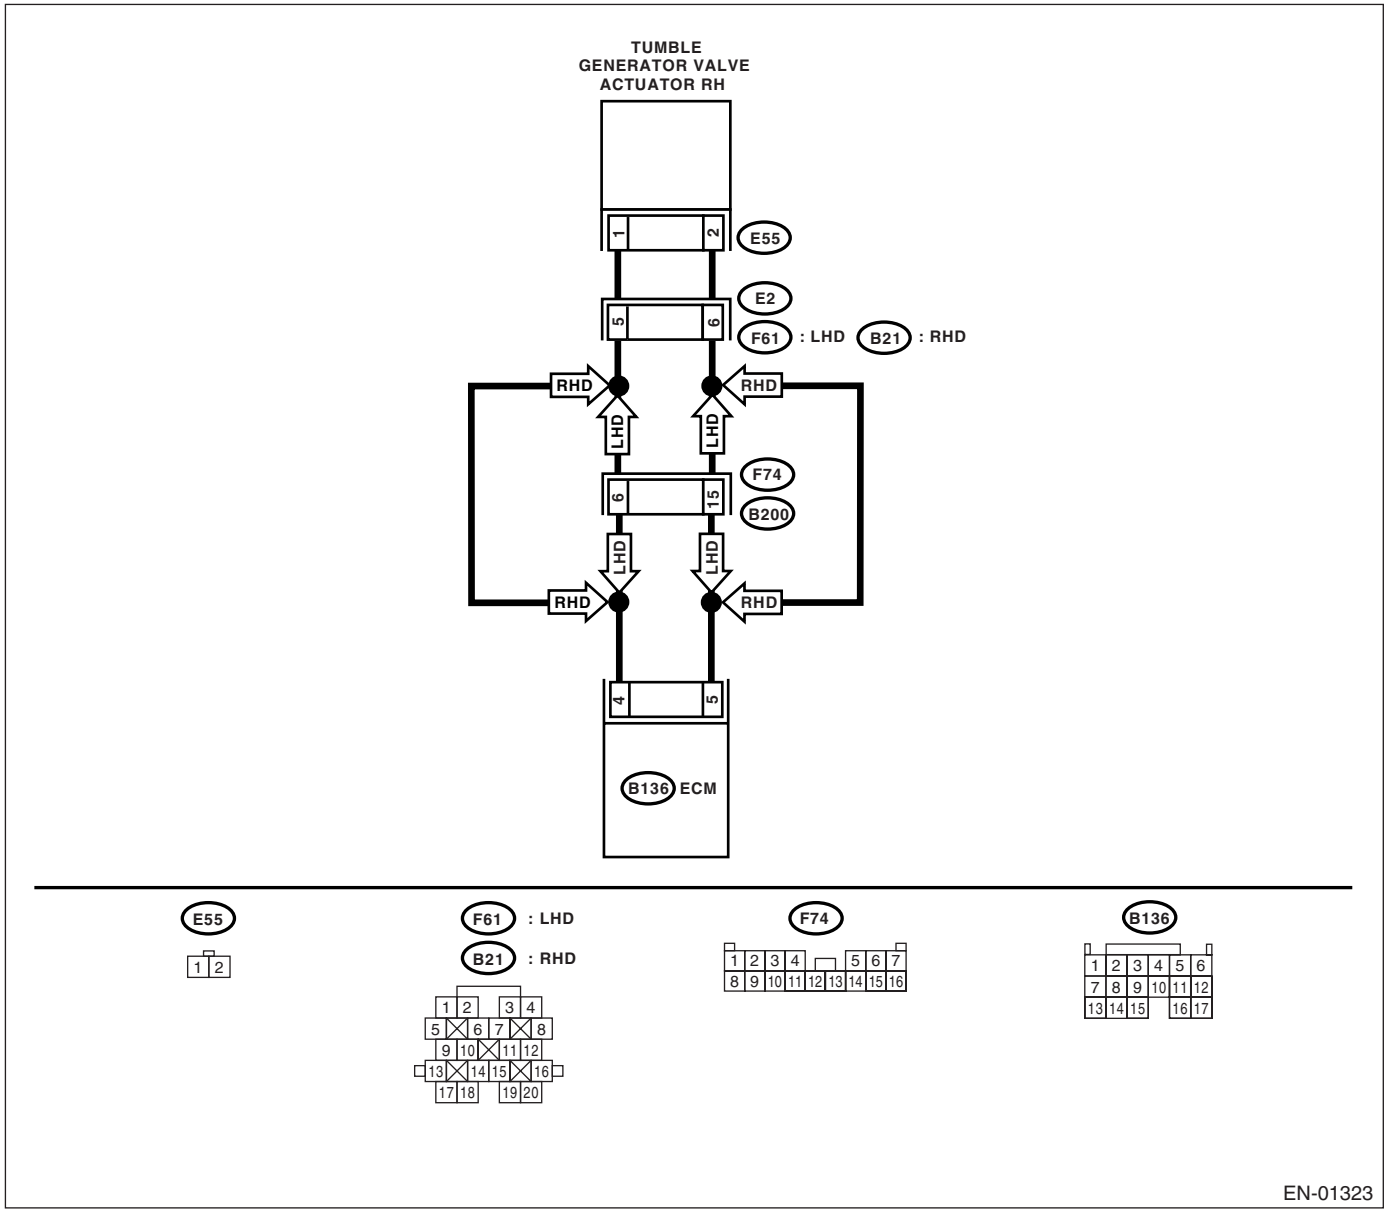

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE ACTUATOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from tumble generator valve connector. 3)Measure the voltage between tumble generator valve actuator and chassis ground. ***Connector & terminal*** ***(E55) No. 1 (+) — Chassis ground (−):*** ***(E55) No. 2 (+) — Chassis ground (−):***	Is the voltage less than 5 V?	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>	Repair the battery short circuit between ECM and tumble generator valve actuator.

CQ:DTC P1096 — TUMBLE GENERATED VALVE SIGNAL 2 CIRCUIT MALFUNCTION (OPEN) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

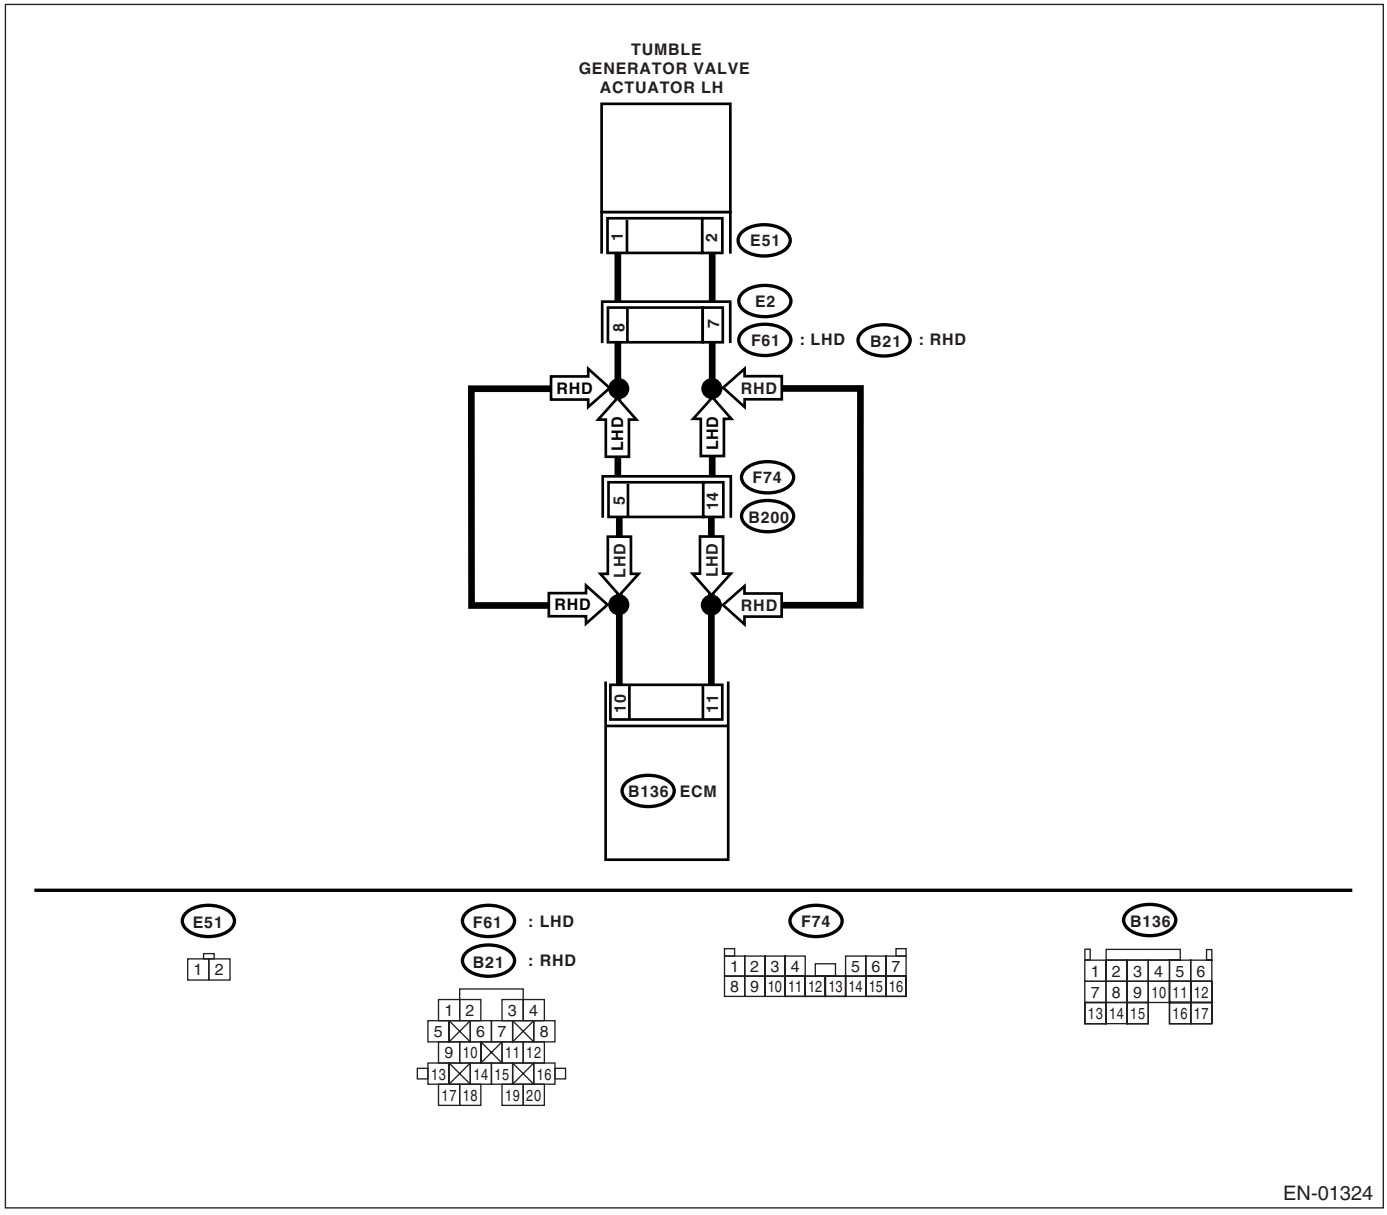

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE ACTUATOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from tumble generator valve and ECM connector. 3)Measure the resistance between tumble generator valve actuator and ECM connector. ***Connector & terminal*** ***(E51) No. 1 — (B136) No. 10:*** ***(E51) No. 2 — (B136) No. 11:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit between ECM and tumble generator valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and tumble generator valve actuator connector. • Poor contact in coupling connector.
2	**CHECK POOR CONTACT.** Check poor contact in tumble generator valve actuator connector.	Is there poor contact in tumble generator valve actuator connector?	Repair the poor contact in tumble generator valve actuator connector.	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>

CR:DTC P1097 — TUMBLE GENERATED VALVE SIGNAL 2 CIRCUIT MALFUNCTION (SHORT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

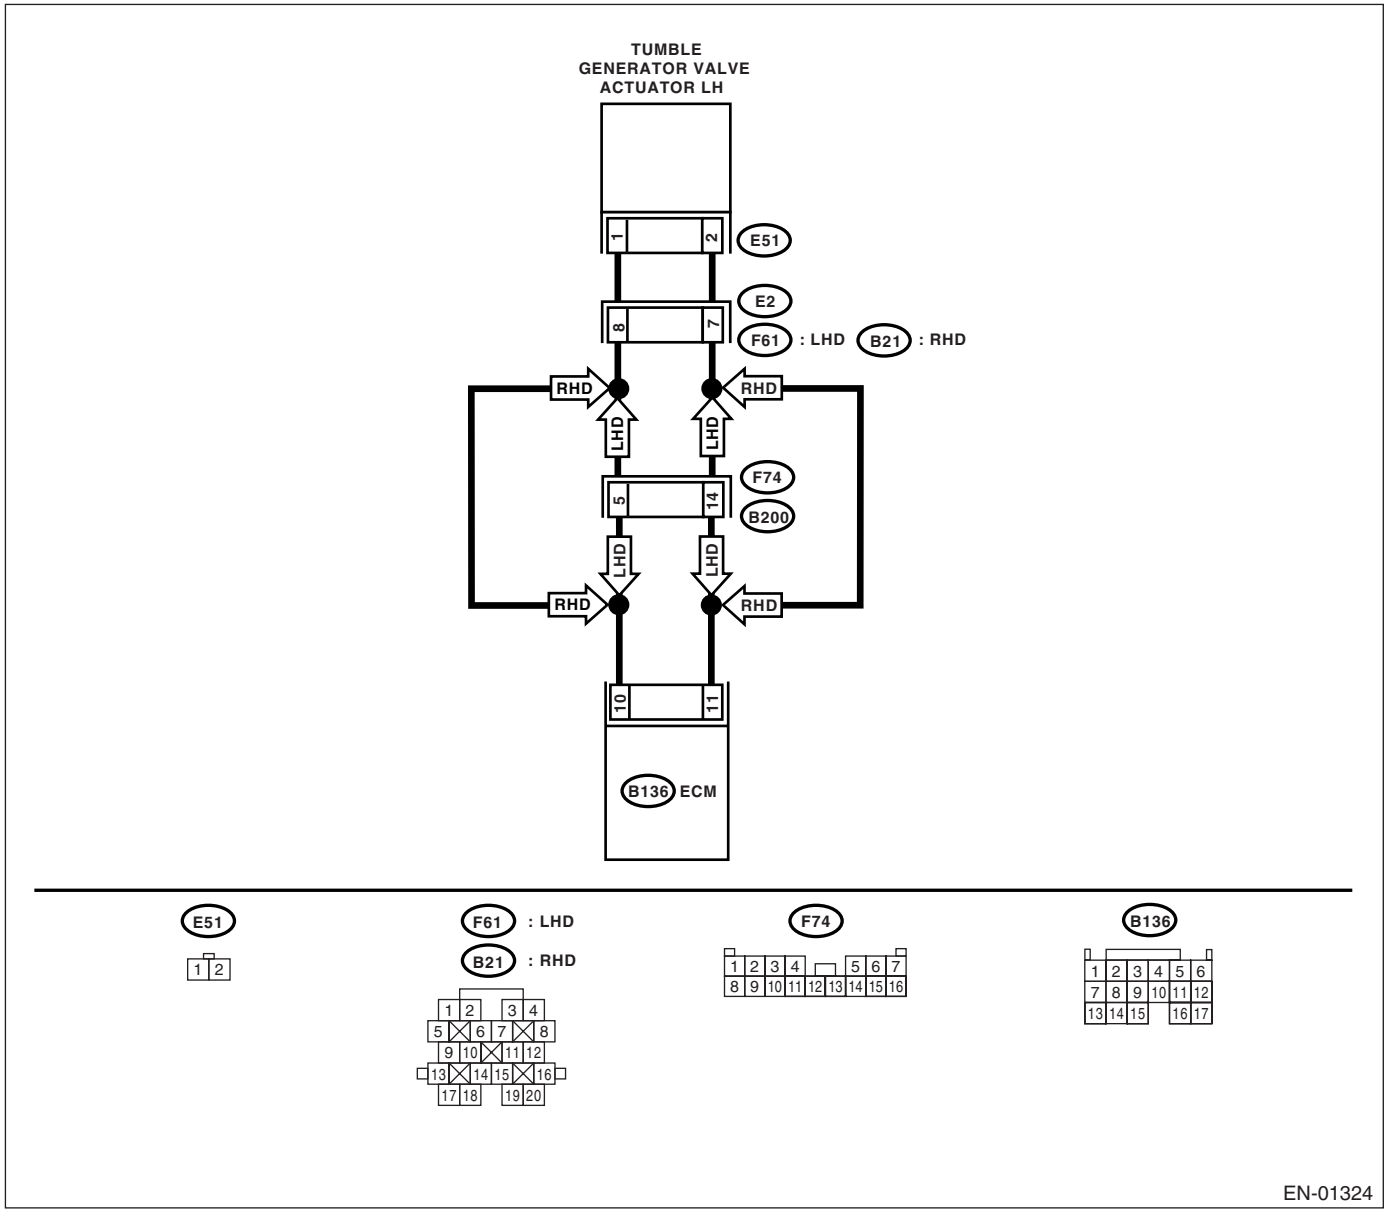

Step		Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND TUMBLE GENERATOR VALVE ACTUATOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from tumble generator valve connector. 3)Measure the voltage between tumble generator valve actuator and chassis ground. ***Connector & terminal*** ***(E51) No. 1 (+) — Chassis ground (−):*** ***(E51) No. 2 (+) — Chassis ground (−):***	Is the voltage less than 5 V?	Replace the tumble generator valve assembly. <Ref. to FU(H4DOTC)-41, Tumble Generator Valve Assembly.>	Repair the battery short circuit between ECM and tumble generator valve actuator.

CS:DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (LOW INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1110?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).> NOTE: Atmospheric pressure sensor is built into ECM.	A temporary poor contact.

CT:DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (HIGH INPUT) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1111?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).> NOTE: Atmospheric pressure sensor is built into ECM.	A temporary poor contact.

CU:DTC P1134 — A/F SENSOR MICRO-COMPUTER PROBLEM —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

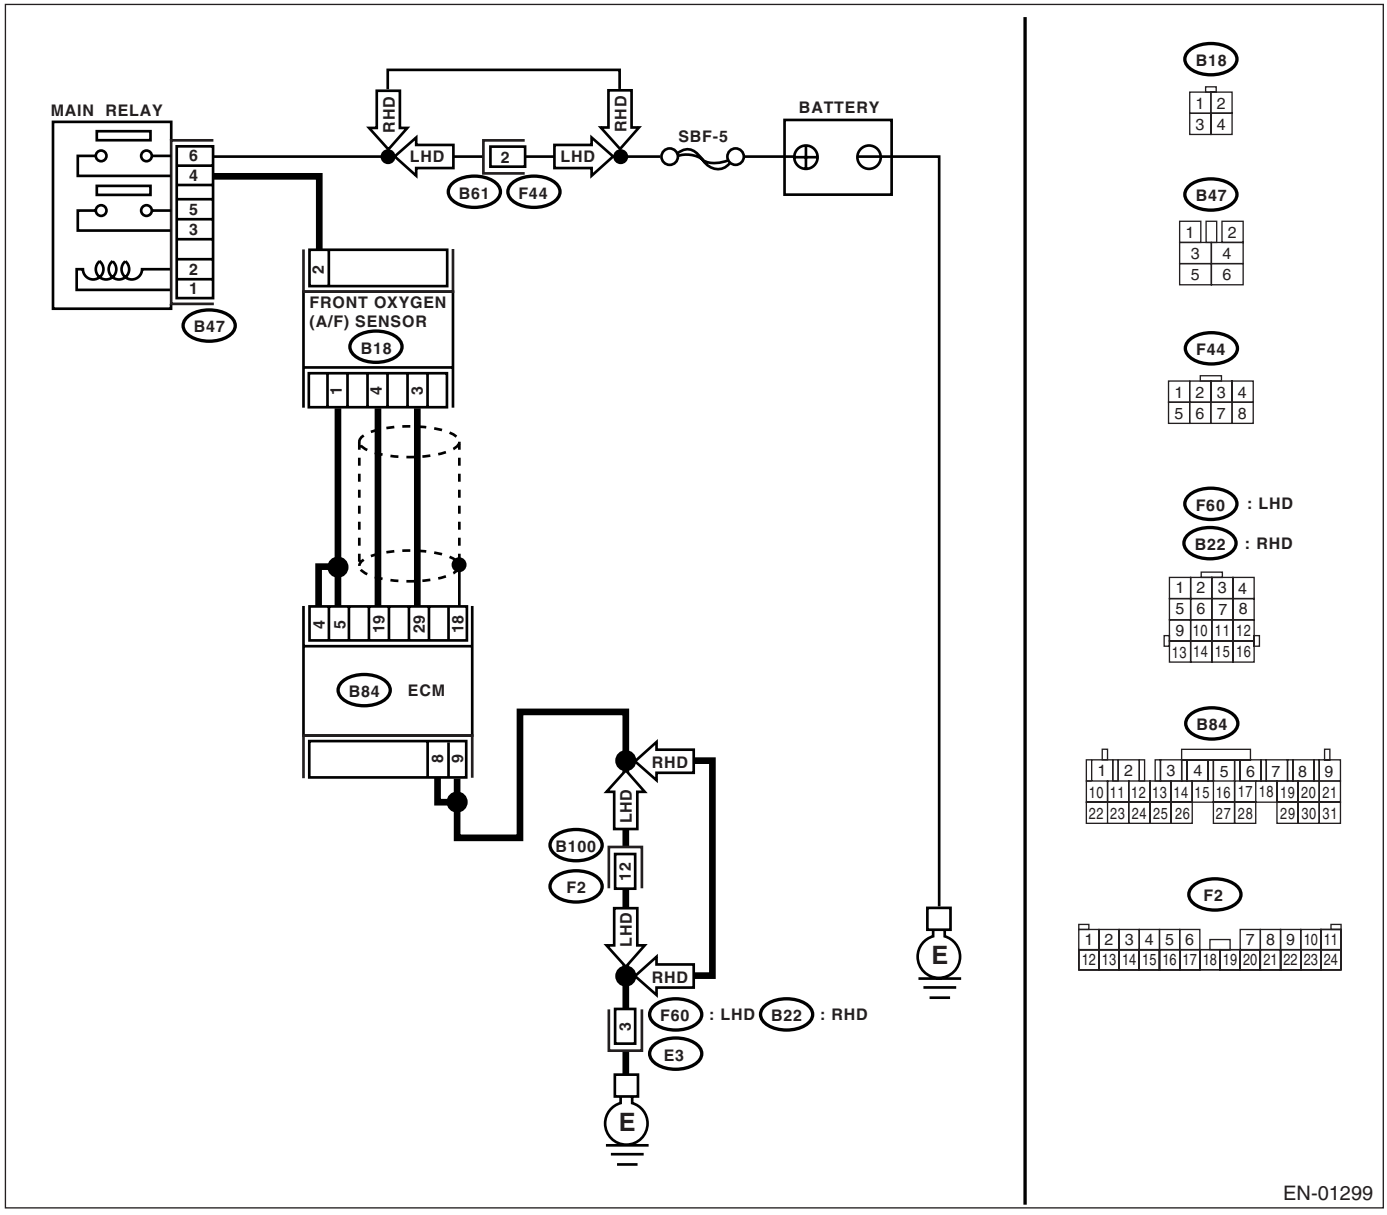

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1134?	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	A temporary poor contact.

CV: DTC P1152 — O_2 SENSOR CIRCUIT RANGE/PERFORMANCE (LOW) (BANK1 SENSOR1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

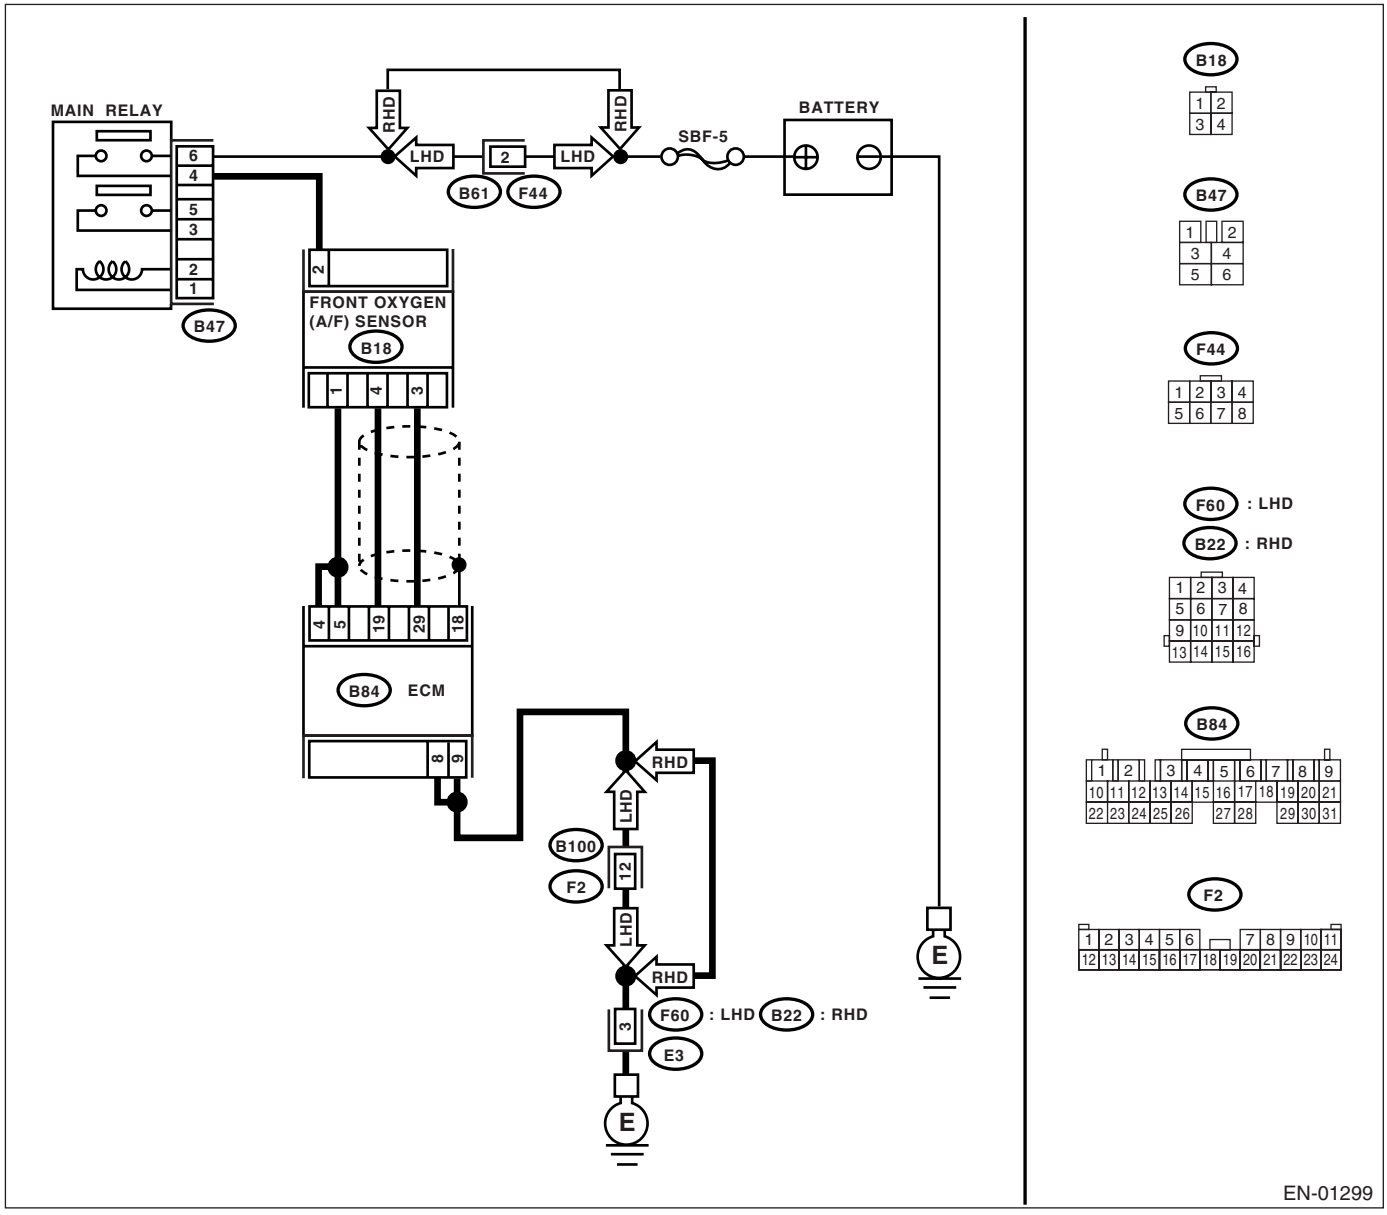

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and front oxygen (A/F) sensor connector. 3)Measure the resistance of harness between ECM and front oxygen (A/F) sensor connector. ***Connector & terminal*** ***(B84) No. 29 — (B18) No. 3:*** ***(B84) No. 19 — (B18) No. 4:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector
2	**CHECK POOR CONTACT.** Check poor contact in front oxygen (A/F) sensor connector.	Is there poor contact in front oxygen (A/F) sensor connector?	Repair the poor contact in front oxygen (A/F) sensor connector.	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>

CW: DTC P1153 — O_2 SENSOR CIRCUIT RANGE/PERFORMANCE (HIGH) (BANK1 SENSOR1) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

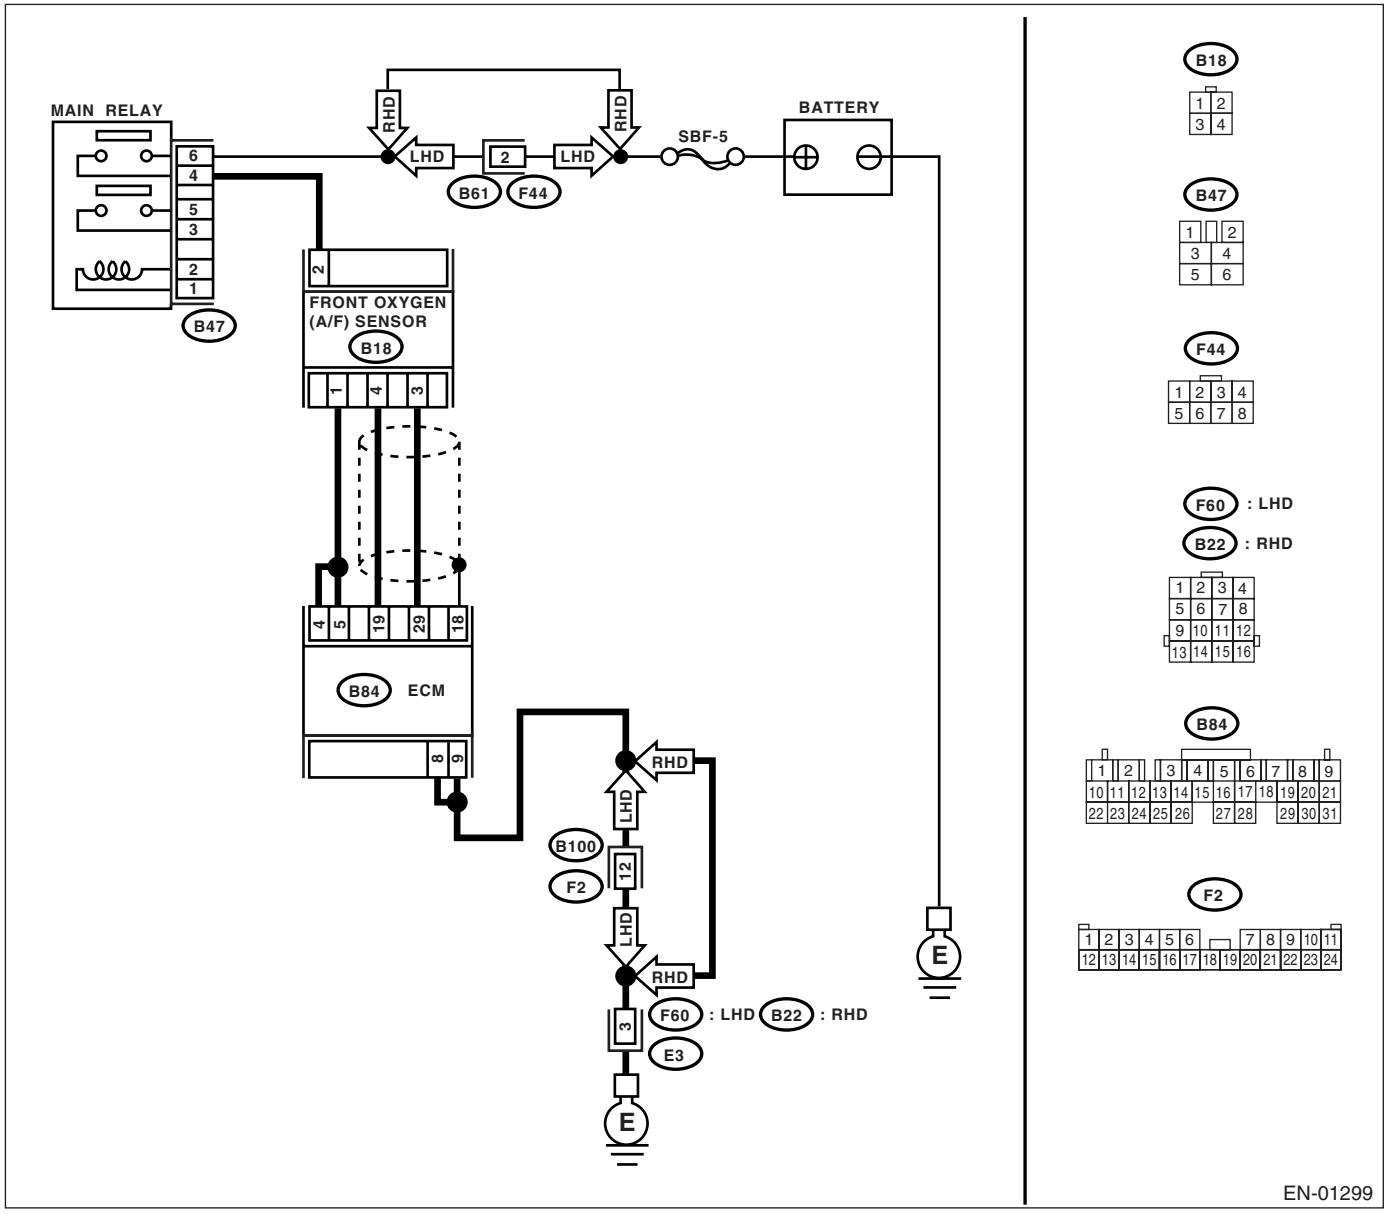

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and front oxygen (A/F) sensor. 3)Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **2.**	Repair the ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.
2	**CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.** Measure the resistance of harness between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 29 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.
3	**CHECK OUTPUT SIGNAL FOR ECM.** 1)Connect the connector to ECM and front oxygen (A/F) sensor. 2)Turn the ignition switch to ON. 3)Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **4.**	Go to step **5.**
4	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Repair the poor contact in ECM connector.
5	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 29 (+) — Chassis ground (−):***	Is the voltage more than 4.95 V?	Go to step **6.**	Replace the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-44, Front Oxygen (A/F) Sensor.>
6	**CHECK OUTPUT SIGNAL FOR ECM.** Measure the voltage between ECM connector and chassis ground. ***Connector & terminal*** ***(B84) No. 29 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Repair the poor contact in ECM connector.

CX:DTC P1301 — MISFIRE DETECTED (HIGH TEMPERATURE EXHAUST GAS) —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Engine stalls.
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

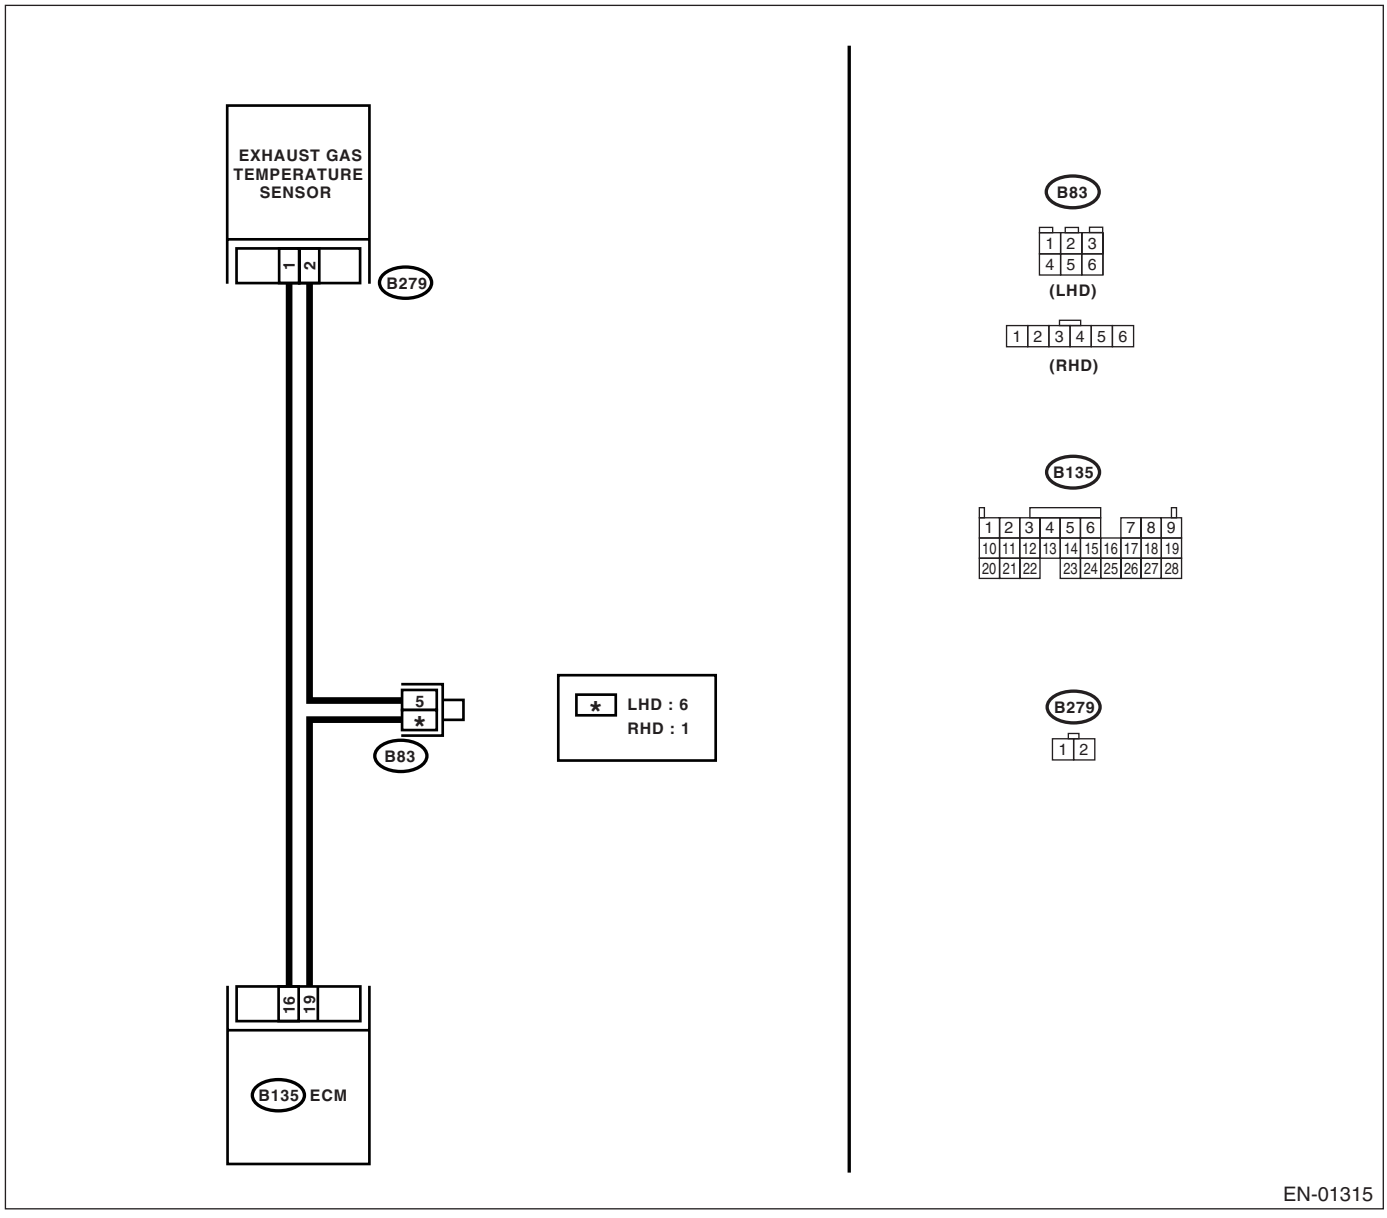

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC.** Conduct the troubleshooting for all DTC P0301, P0302, P0303 and P0304. <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>	Does failure for repair or replacement exist?	Repair or replace the failure, then replace precatalytic converter.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

CY:DTC P1306 — OCV SOLENOID VALVE SIGNAL 1 CIRCUIT MALFUNCTION (OPEN) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

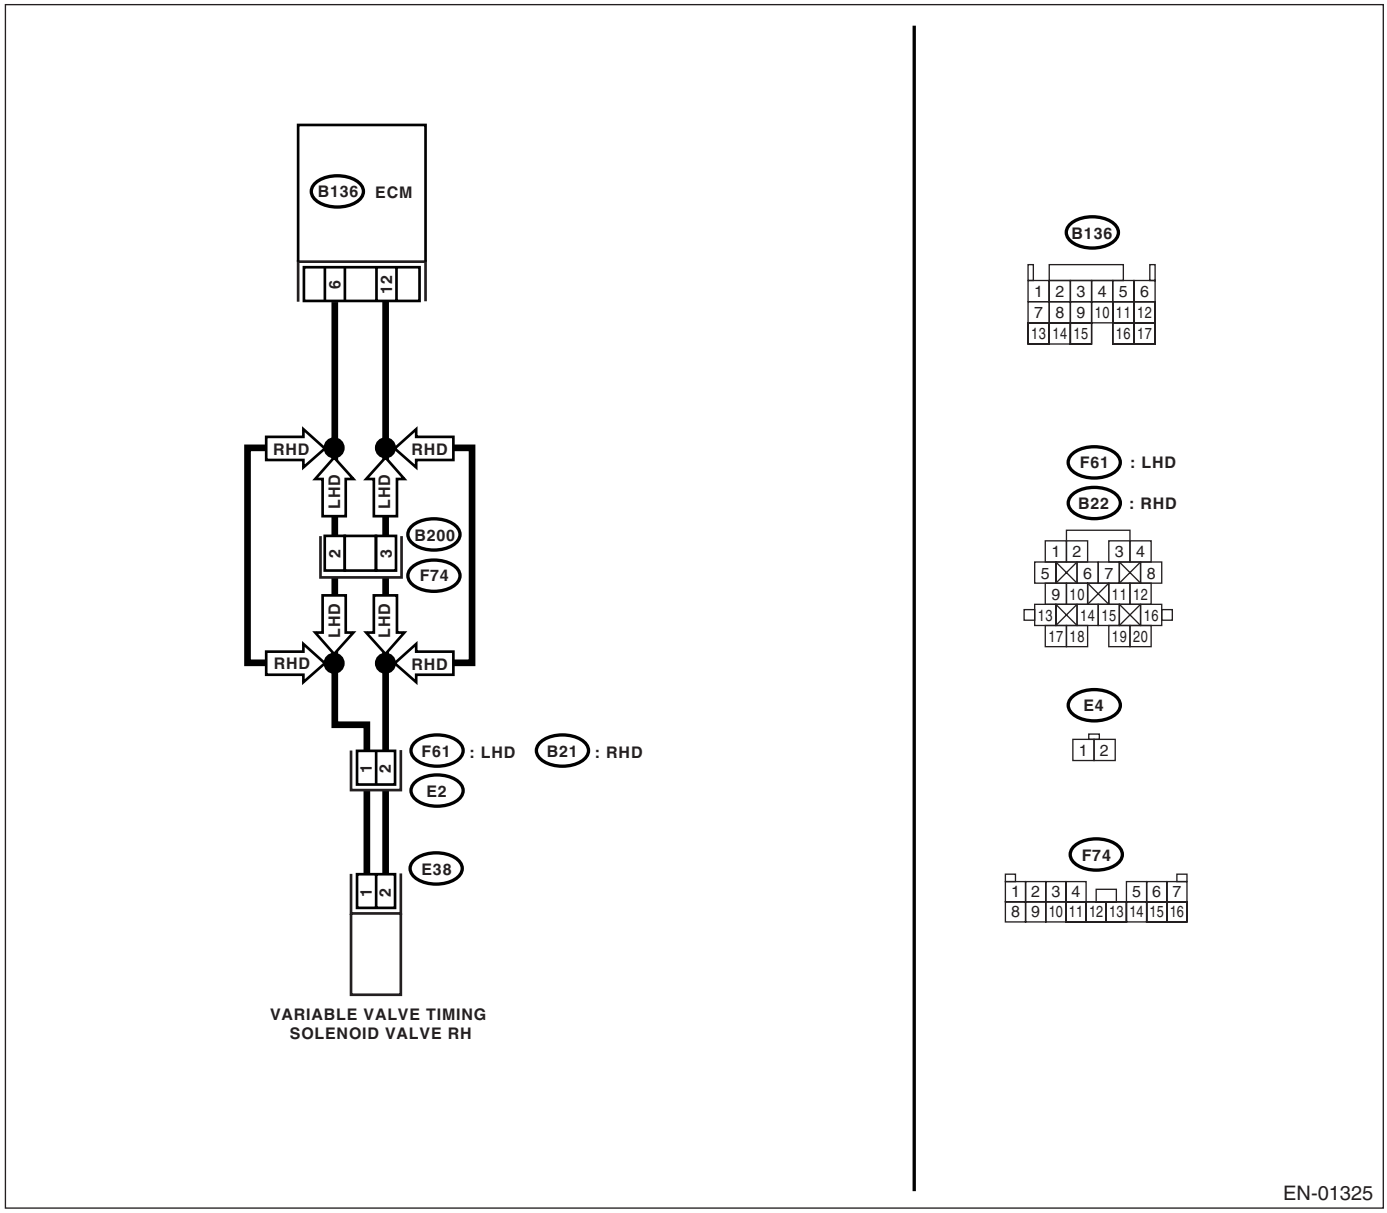

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and variable valve timing solenoid valve. 3)Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(B136) No. 6 — (E38) No. 1:*** ***(B136) No. 12 — (E38) No. 2:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between ECM and variable valve timing solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and variable valve timing solenoid valve connector • Poor contact in coupling connector.
2	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(E38) No. 1 — Engine ground:*** ***(E38) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit between ECM and variable valve timing solenoid valve connector.
3	**CHECK VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Remove the variable valve timing solenoid valve. 2)Measure the resistance between variable valve timing solenoid valve terminal. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 6 — 12 Ω?	Repair the poor contact in ECM and variable valve timing solenoid valve.	Replace the variable valve timing solenoid valve. <Ref. to ME(H4DOTC)-72, Camshaft.>

CZ:DTC P1307 — OCV SOLENOID VALVE SIGNAL 1 CIRCUIT MALFUNCTION (SHORT) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

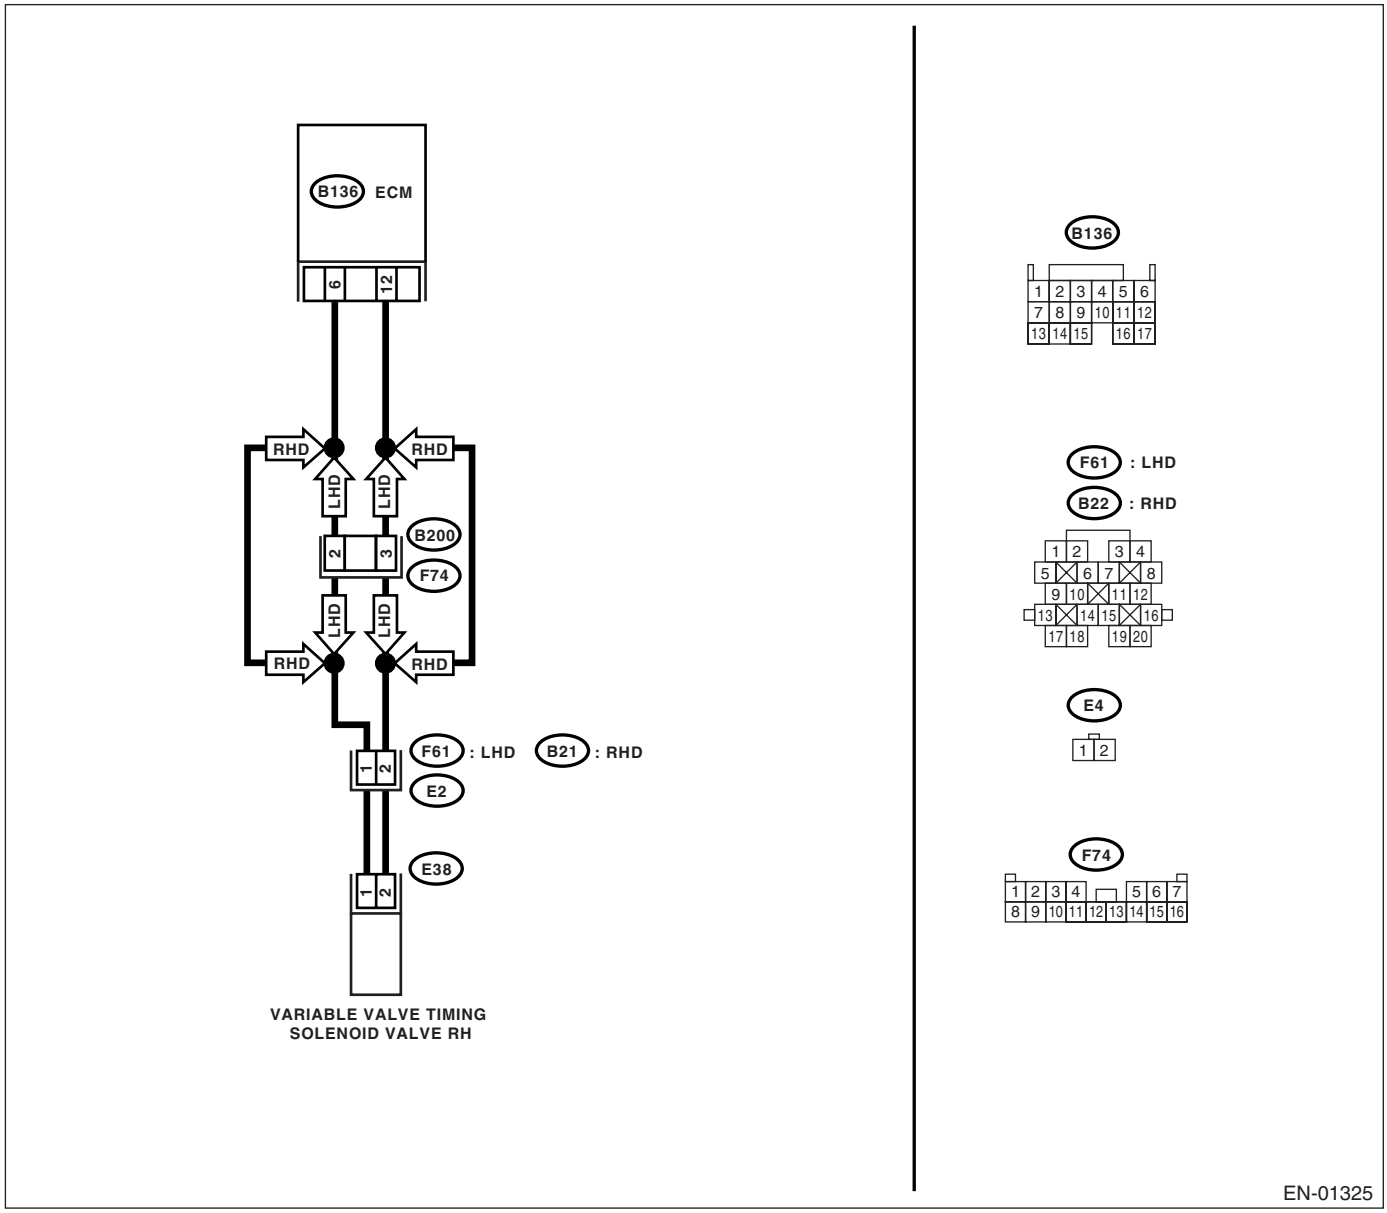

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and variable valve timing solenoid valve. 3)Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(B136) No. 6 — (E38) No. 1:*** ***(B136) No. 12 — (E38) No. 2:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between ECM and variable valve timing solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and variable valve timing solenoid valve connector • Poor contact in coupling connector.
2	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and variable valve timing solenoid valve. 3)Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(E38) No. 1 — Engine ground:*** ***(E38) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit between ECM and variable valve timing solenoid valve connector.
3	**CHECK VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Remove the variable valve timing solenoid valve. 2)Measure the resistance between variable valve timing solenoid valve terminal. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 6 — 12 Ω?	Repair the poor contact in ECM and variable valve timing solenoid valve.	Replace the variable valve timing solenoid valve. <Ref. to ME(H4DOTC)-72, Camshaft.>

DA:DTC P1308 — OCV SOLENOID VALVE SIGNAL 2 CIRCUIT MALFUNCTION (OPEN) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

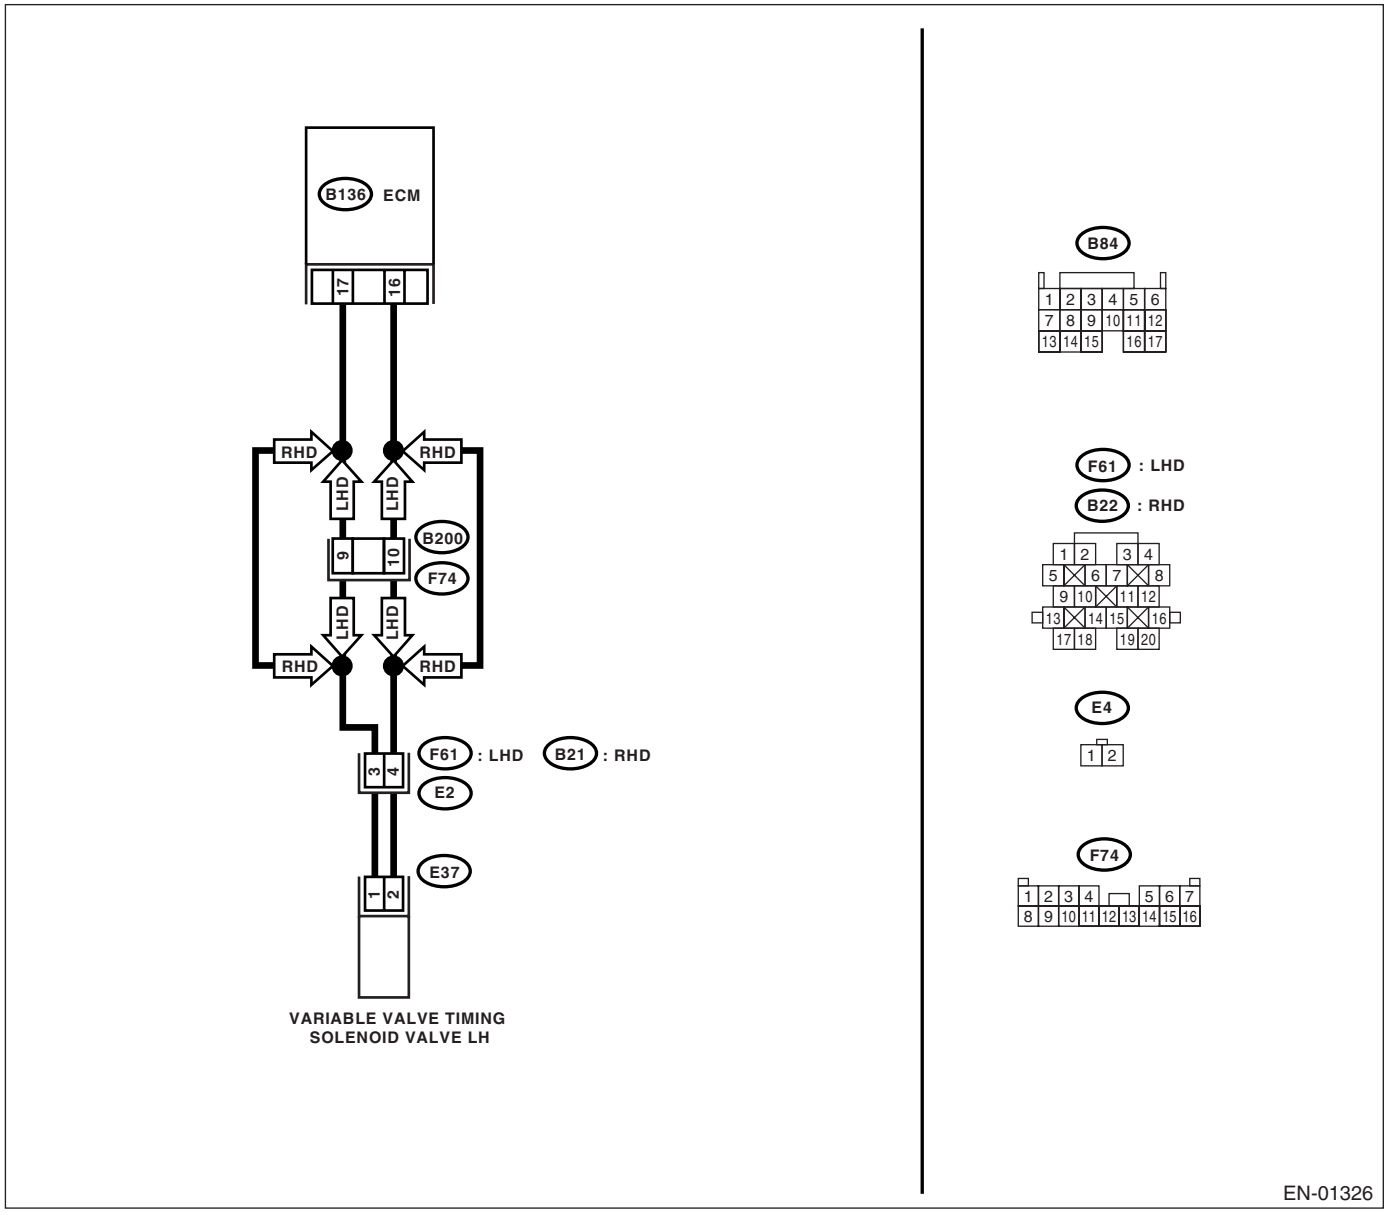

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and variable valve timing solenoid valve. 3)Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(B136) No. 17 — (E37) No. 1:*** ***(B136) No. 16 — (E37) No. 2:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between ECM and variable valve timing solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and variable valve timing solenoid valve connector • Poor contact in coupling connector.
2	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(E37) No. 1 — Engine ground:*** ***(E37) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit between ECM and variable valve timing solenoid valve connector.
3	**CHECK VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Remove the variable valve timing solenoid valve. 2)Measure the resistance between variable valve timing solenoid valve terminal. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 6 — 12 Ω?	Repair the poor contact in ECM and variable valve timing solenoid valve.	Replace the variable valve timing solenoid valve. <Ref. to ME(H4DOTC)-72, Camshaft.>

DB:DTC P1309 — OCV SOLENOID VALVE SIGNAL 2 CIRCUIT MALFUNCTION (SHORT) —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

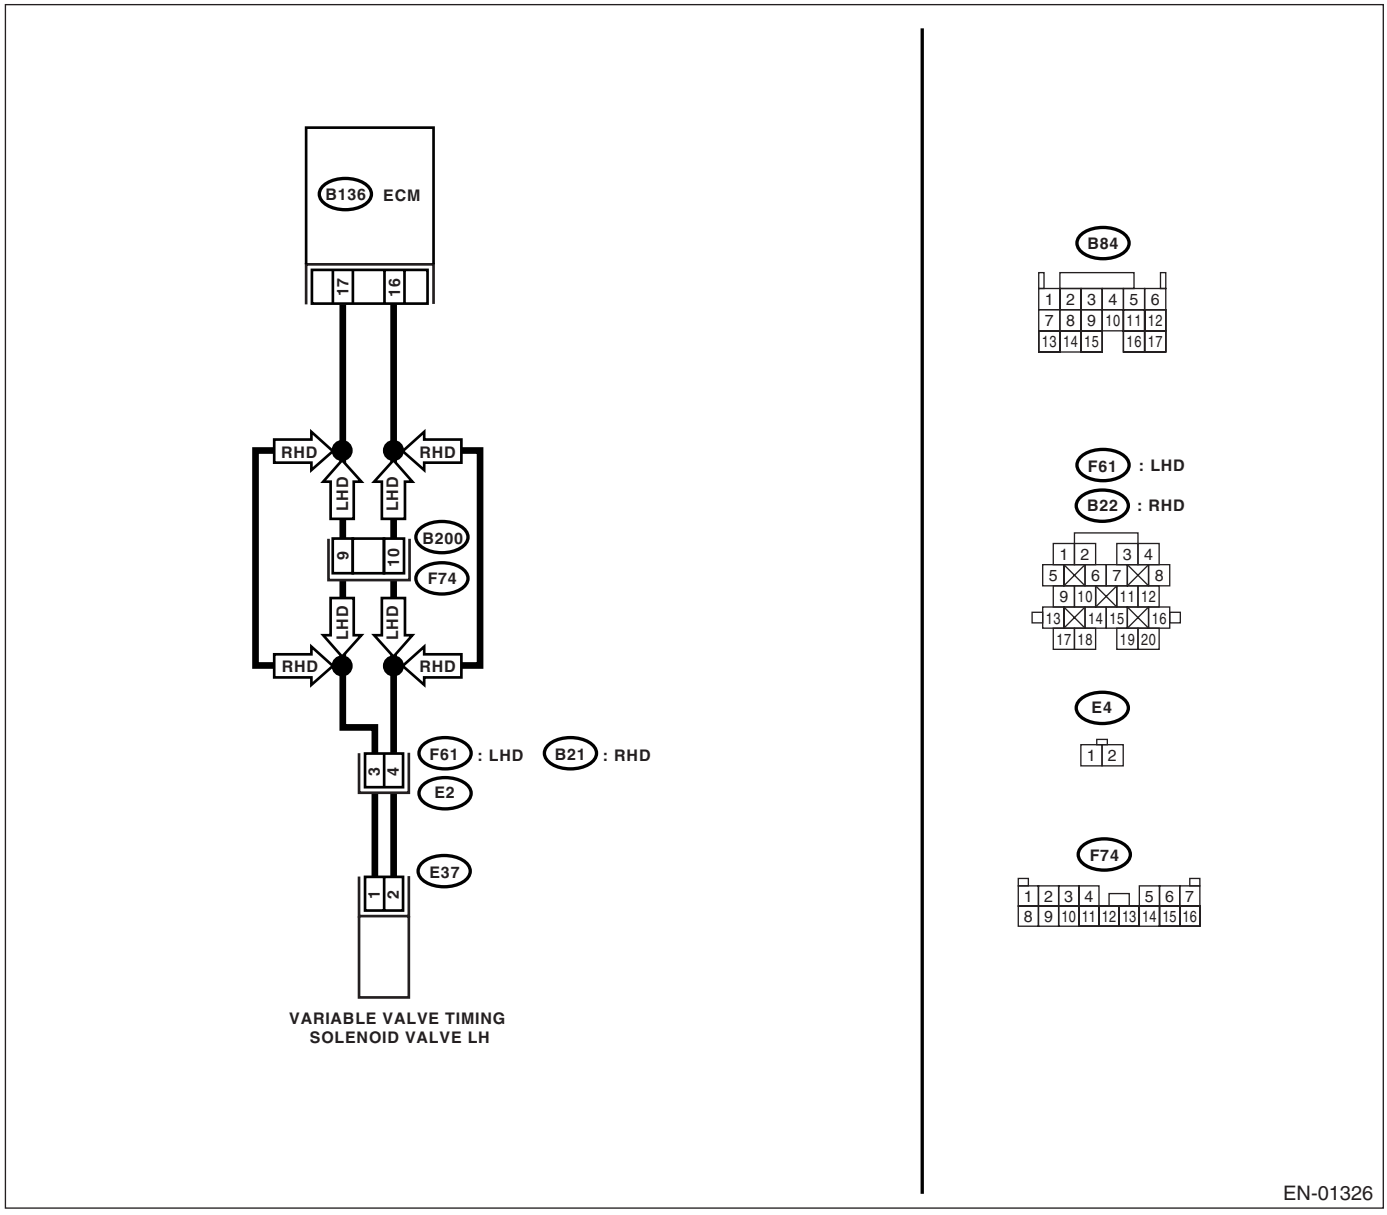

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and variable valve timing solenoid valve. 3)Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(B136) No. 17 — (E37) No. 1:*** ***(B136) No. 16 — (E37) No. 2:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between ECM and variable valve timing solenoid valve connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and variable valve timing solenoid valve connector • Poor contact in coupling connector.
2	**CHECK HARNESS BETWEEN ECM AND VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and variable valve timing solenoid valve. 3)Measure the resistance between ECM and variable valve timing solenoid valve. ***Connector & terminal*** ***(E37) No. 1 — Engine ground:*** ***(E37) No. 2 — Engine ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit between ECM and variable valve timing solenoid valve connector.
3	**CHECK VARIABLE VALVE TIMING SOLENOID VALVE.** 1)Remove the variable valve timing solenoid valve. 2)Measure the resistance between variable valve timing solenoid valve terminal. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 6 — 12 Ω?	Repair the poor contact in ECM and variable valve timing solenoid valve.	Replace the variable valve timing solenoid valve. <Ref. to ME(H4DOTC)-72, Camshaft.>

DC:DTC P1312 — EXHAUST GAS TEMPERATURE SENSOR MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

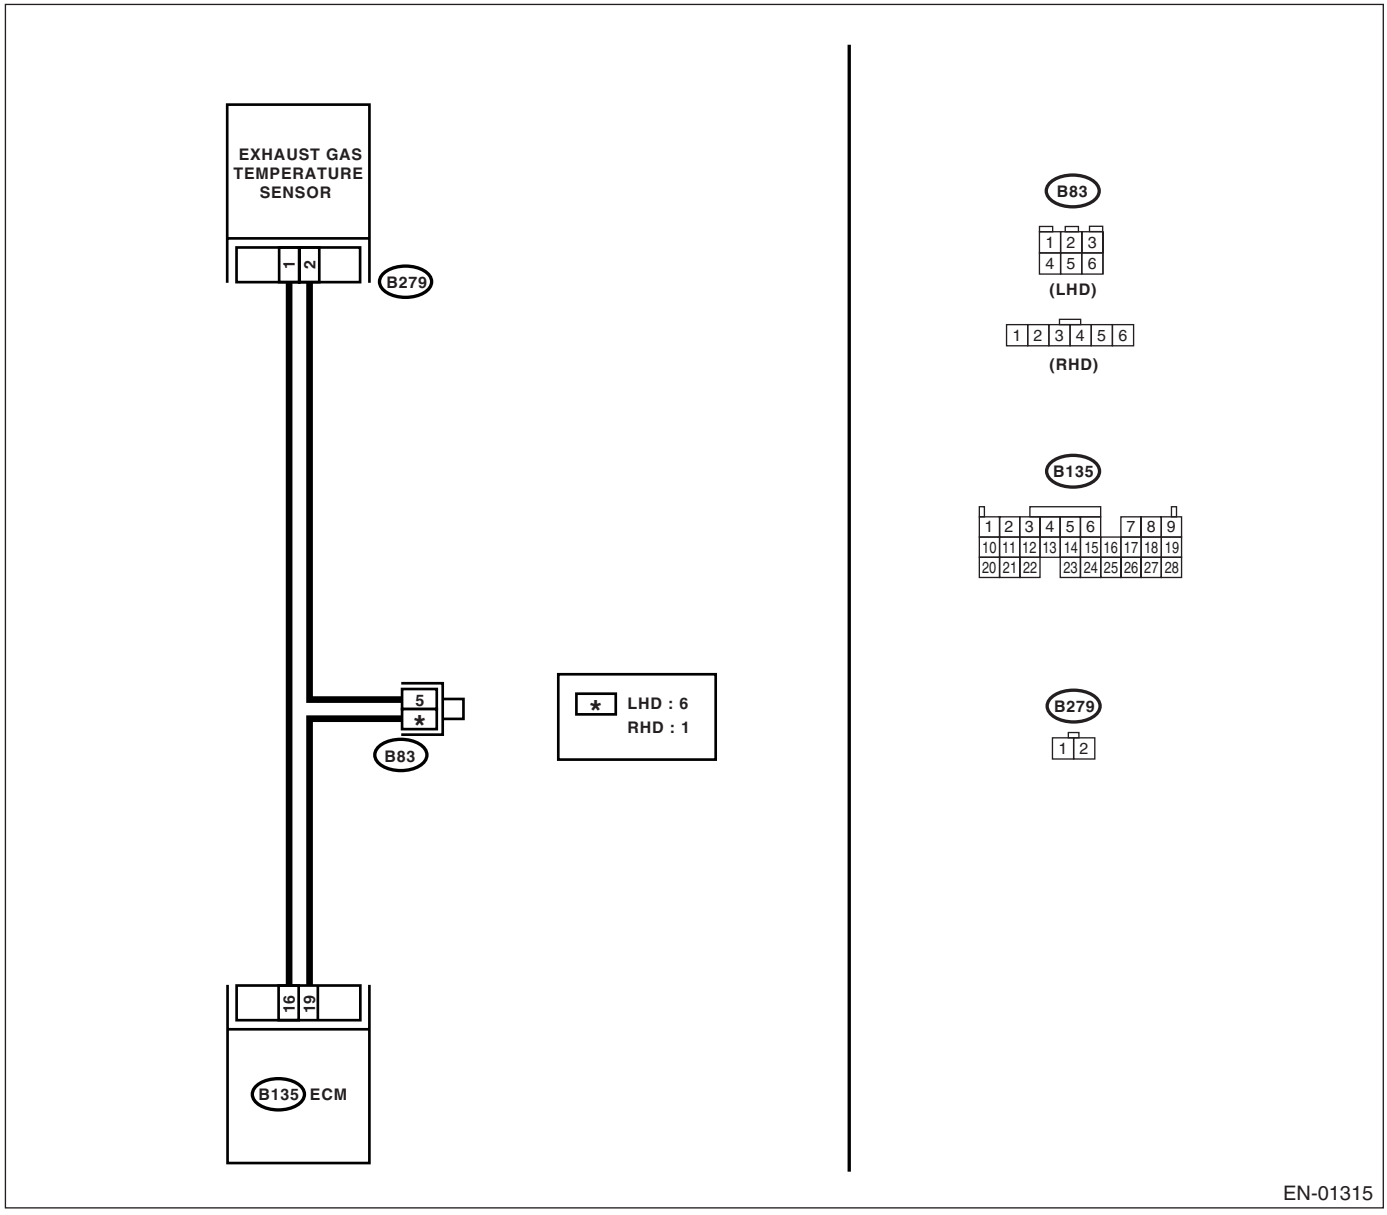

Step		Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P1312.	Replace the exhaust gas temperature sensor. <Ref. to FU(H4DOTC)-48, Exhaust Temperature Sensor.>

DD:DTC P1518 — STARTER SWITCH CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

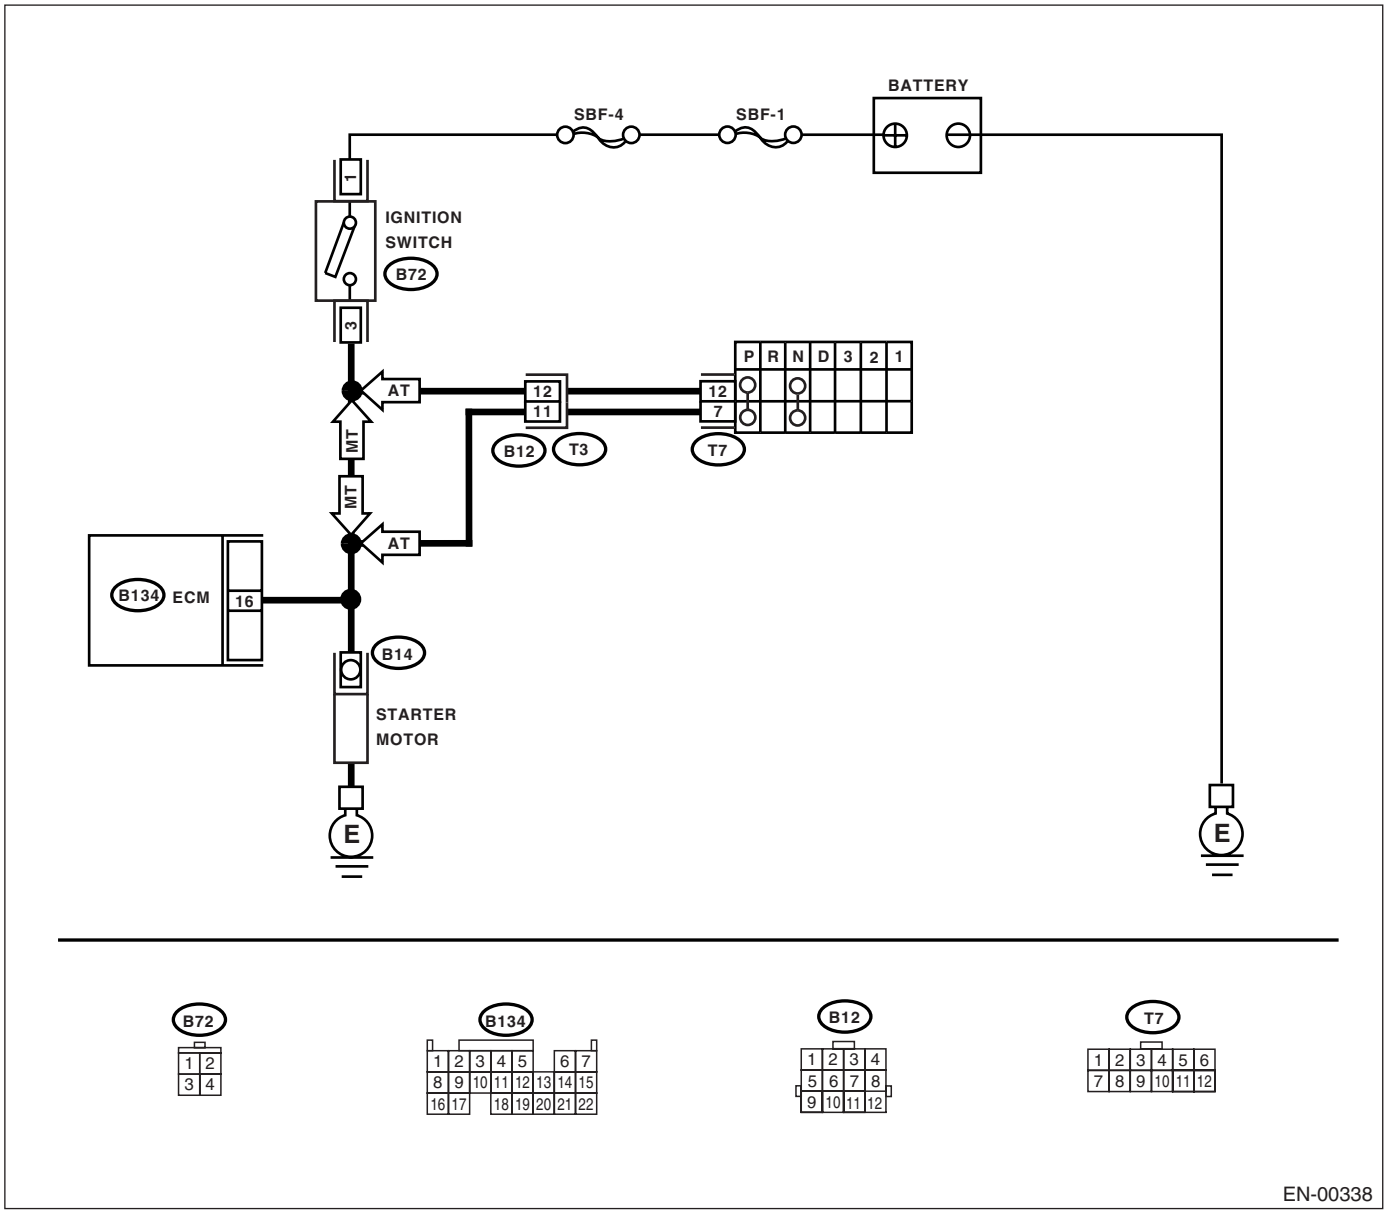

Step	Check	Yes	No
1 **CHECK OPERATION OF STARTER MOTOR.**	Does the starter motor operate when ignition switch is turned to START?	Repair the harness and connector. NOTE: In this case, repair the following: • Open or ground short circuit in harness between ECM and starter motor connector • Poor contact in ECM connector	Check the starter motor circuit. <Ref. to EN(H4DOTC)-61, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

DE:DTC P1544 — EXHAUST GAS TEMPERATURE TOO HIGH —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
  - Erroneous idling
  - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

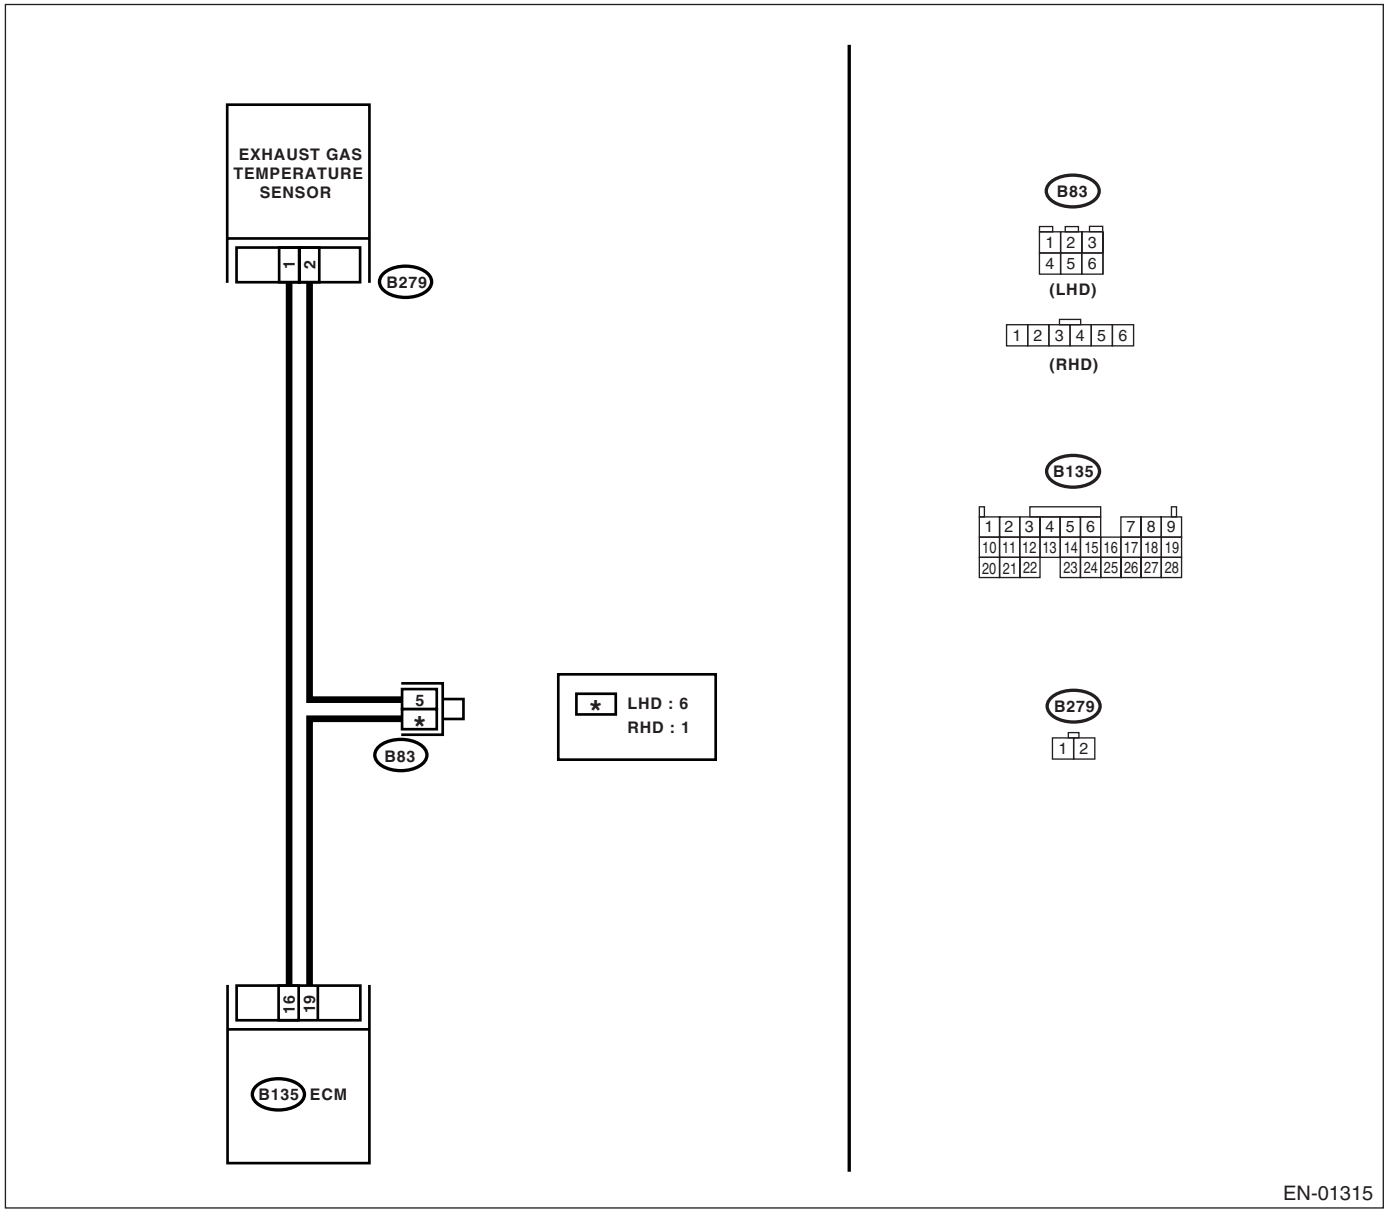

	Step	Check	Yes	No
1	**CHECK ANY OTHER DTC ON DISPLAY.**	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P1544.	Go to step **2.**
2	**CHECK EXHAUST SYSTEM.** Check the exhaust system parts. NOTE: Check the following items. •Loose installation of exhaust manifold •Cracks or hole of exhaust manifold •Loose installation of front oxygen (A/F) sensor	Is there a fault in exhaust system?	Repair or replace the failure, then replace precatalytic converter.	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DF:DTC P1560 — BACK-UP VOLTAGE CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Immediately at fault recognition

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**
- **LHD model**

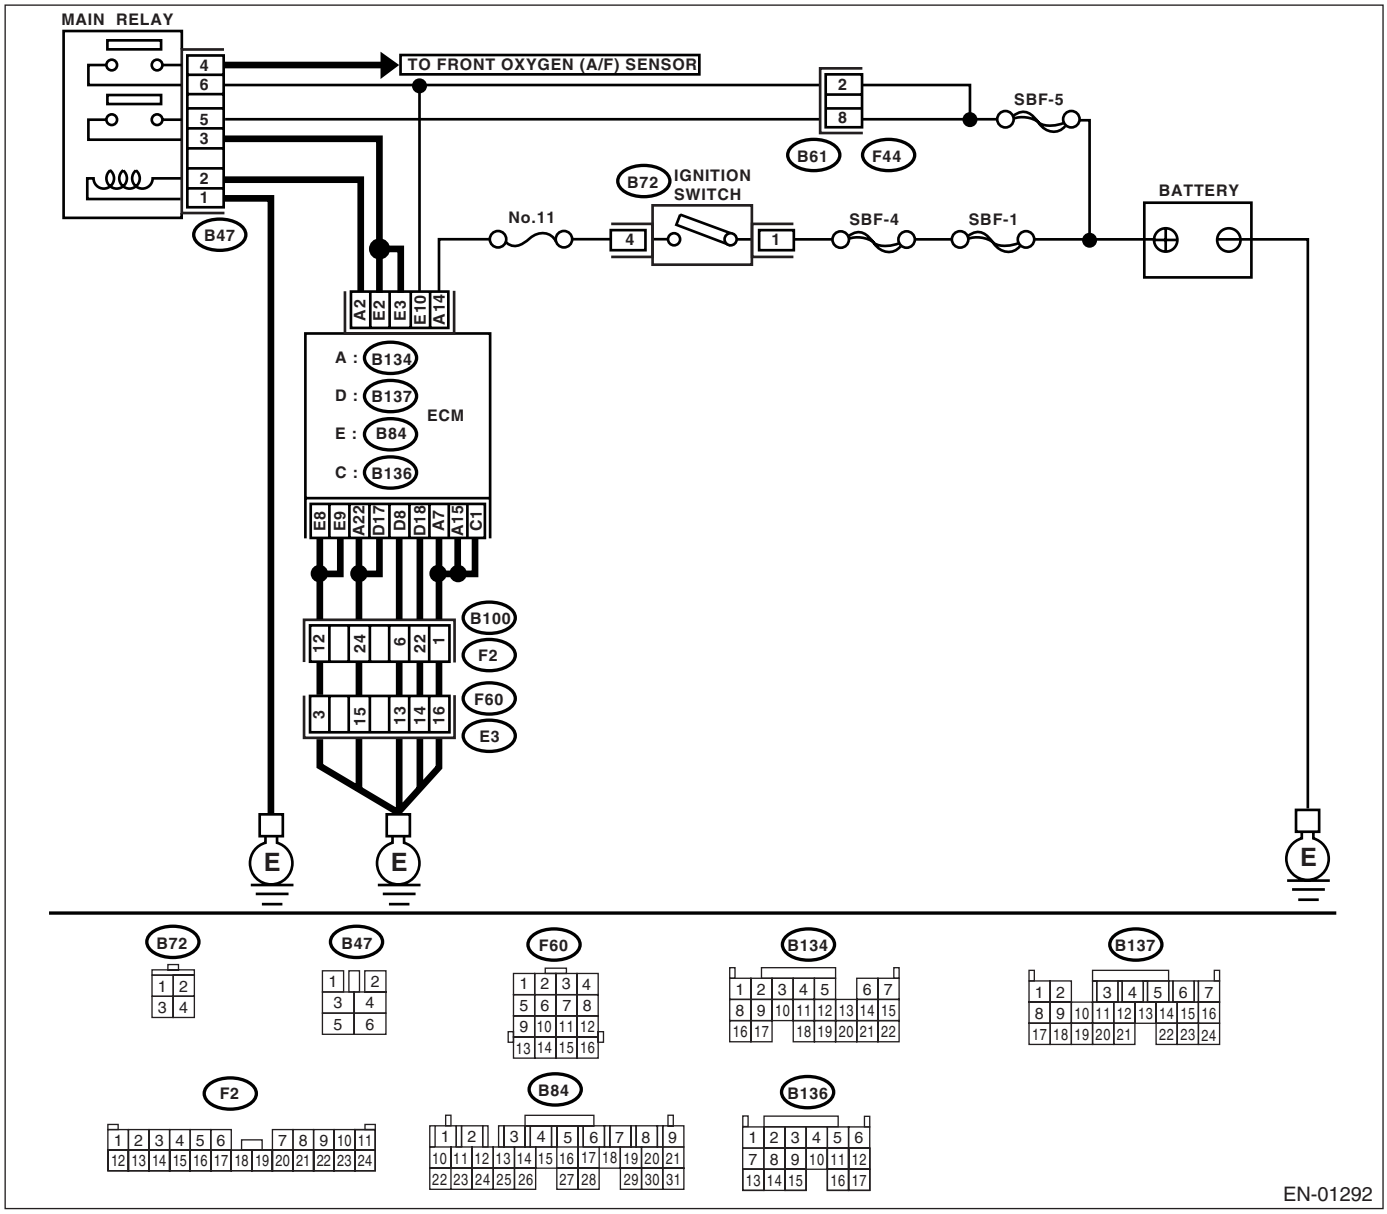

- **RHD model**

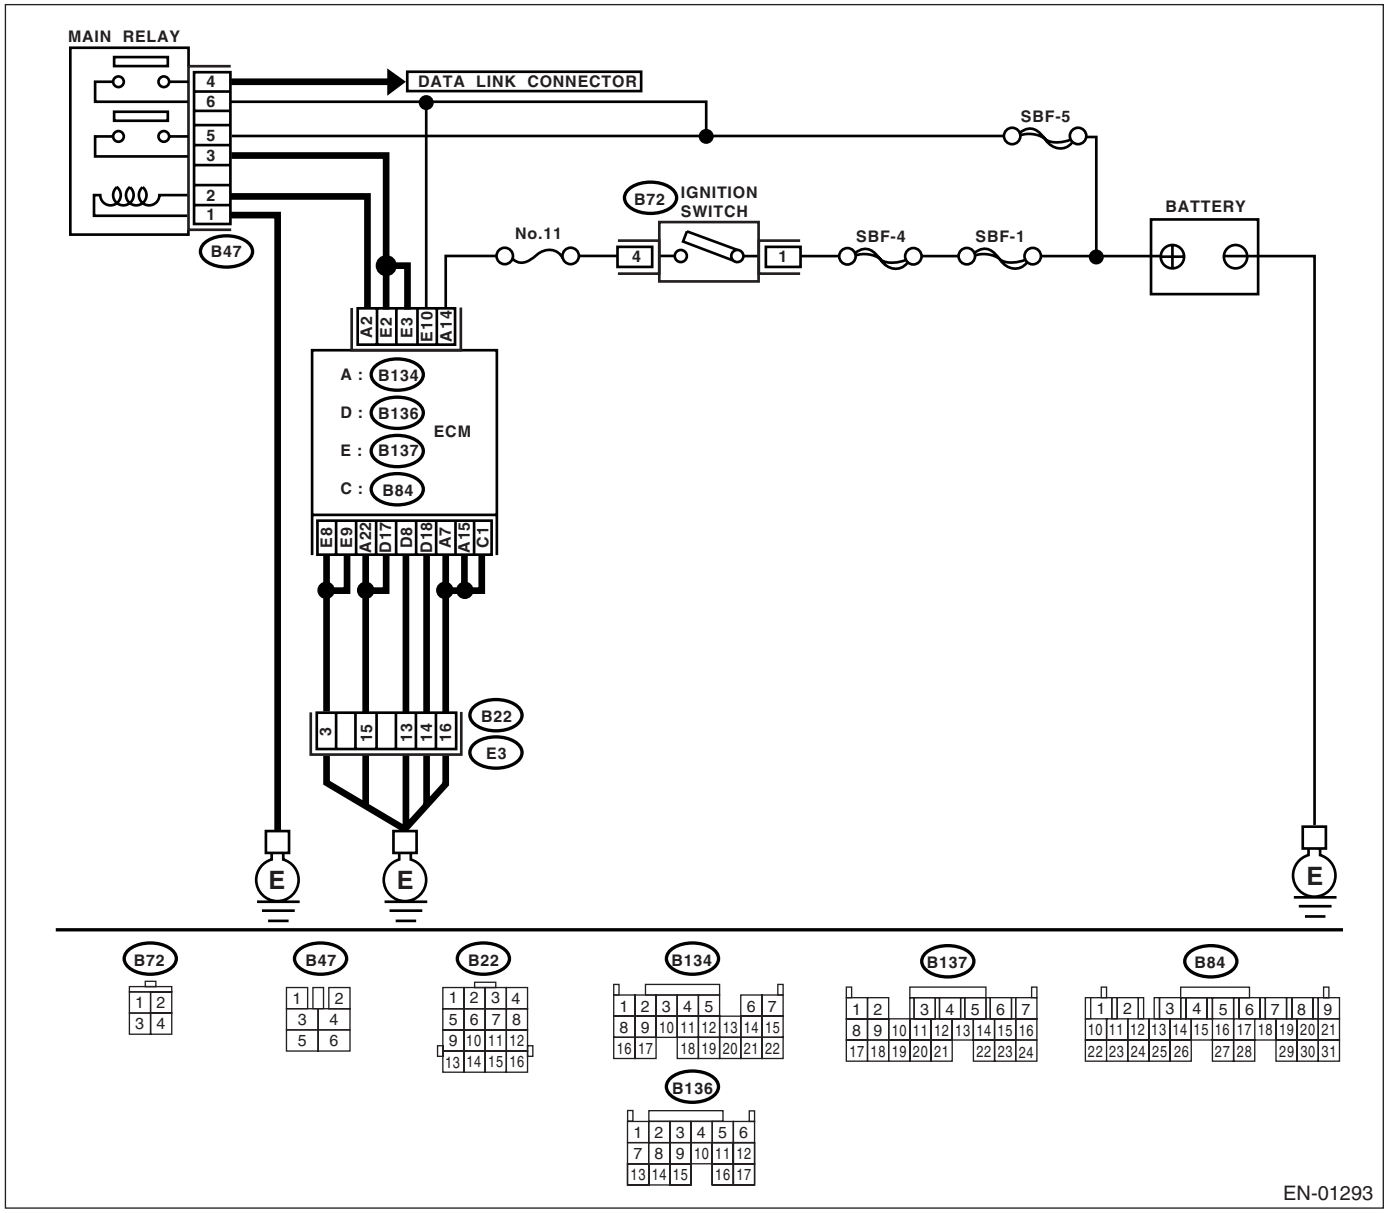

Step		Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the poor contact in ECM connector.	Go to step **2.**
2	**CHECK HARNESS BETWEEN ECM AND MAIN FUSE BOX CONNECTOR.** 1)Disconnect the connector from ECM. 2)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 10 — Chassis ground:***	Is the resistance less than 10 Ω?	Repair the ground short circuit in harness between ECM connector and battery terminal.	Go to step **3.**

Step	Check	Yes	No
3 **CHECK FUSE SBF-5.**	Is the fuse blown?	Replace the fuse.	Repair the harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and battery • Poor contact in ECM connector • Poor contact in battery terminal

DG:DTC P1698 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

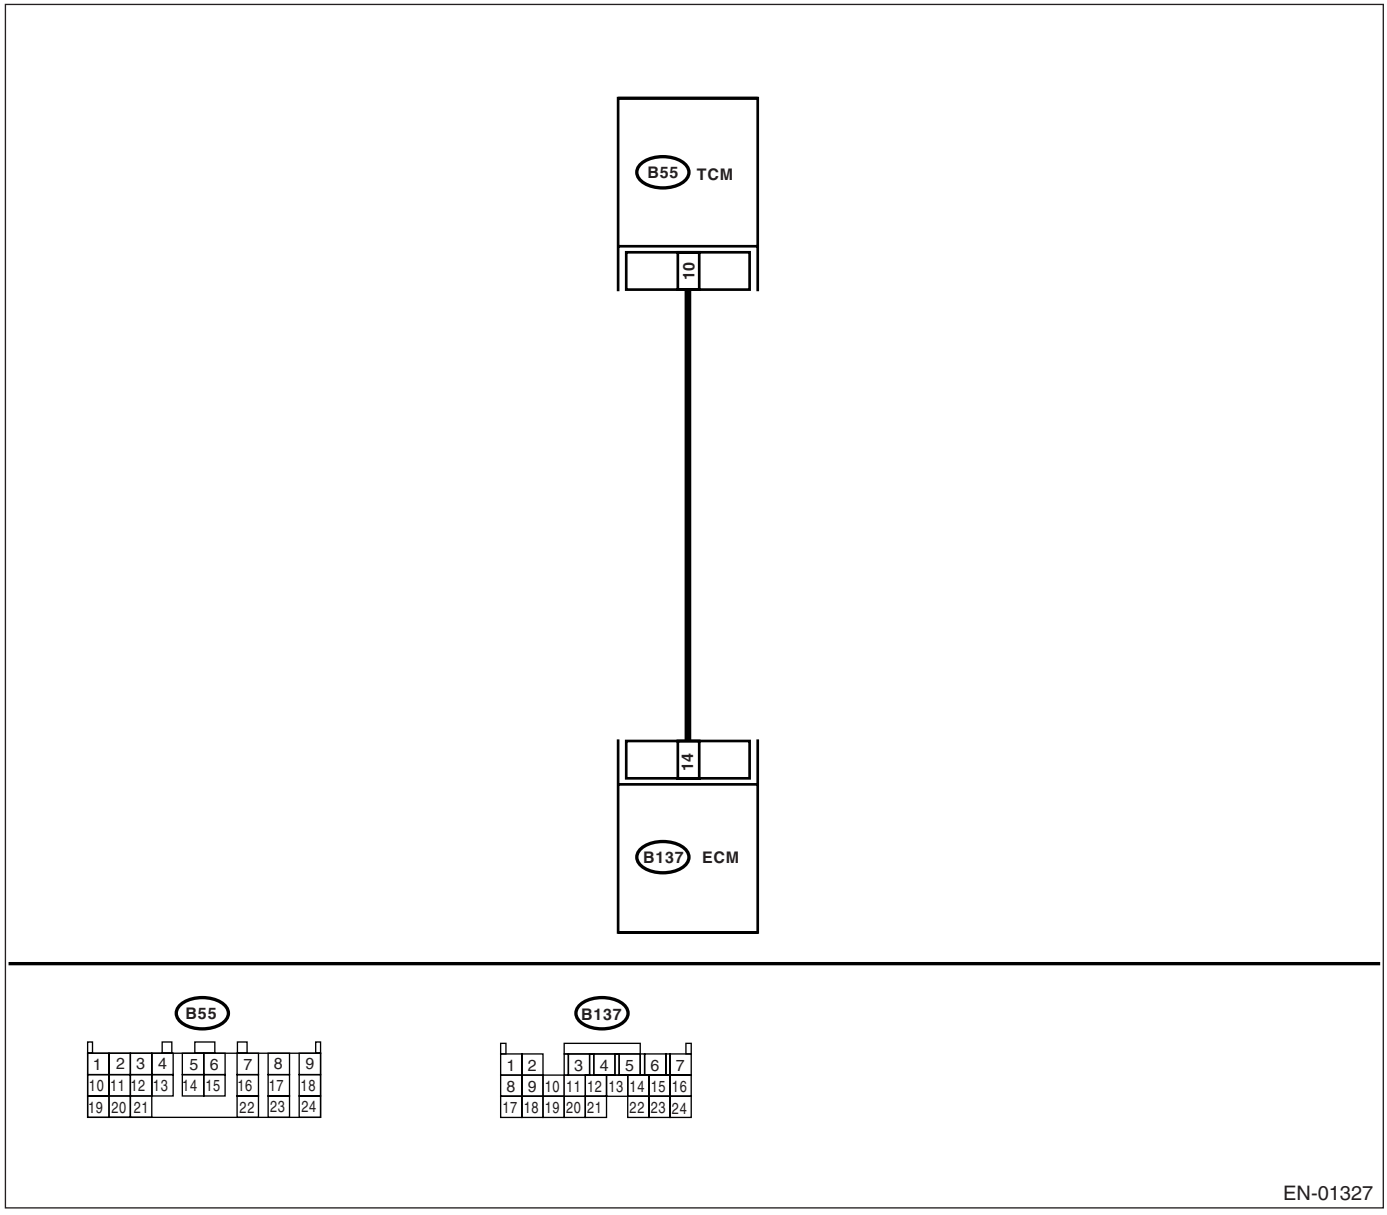

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start the engine and warm-up engine. 2)Turn the ignition switch to OFF. 3)Turn the ignition switch to ON. 4)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 14 (+) — Chassis ground (−):***	Is the voltage more than 3 V?	Repair the poor contact in ECM connector.	Go to step **2.**
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 14 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the ground short circuit in harness between ECM and TCM connector.
3	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and TCM connector. ***Connector & terminal*** ***(B137) No. 14 — (B55) No. 20:***	Is the resistance less than 1 Ω?	Repair the poor contact in ECM or TCM connector.	Repair the open circuit in harness between ECM and TCM connector.

DH:DTC P1699 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

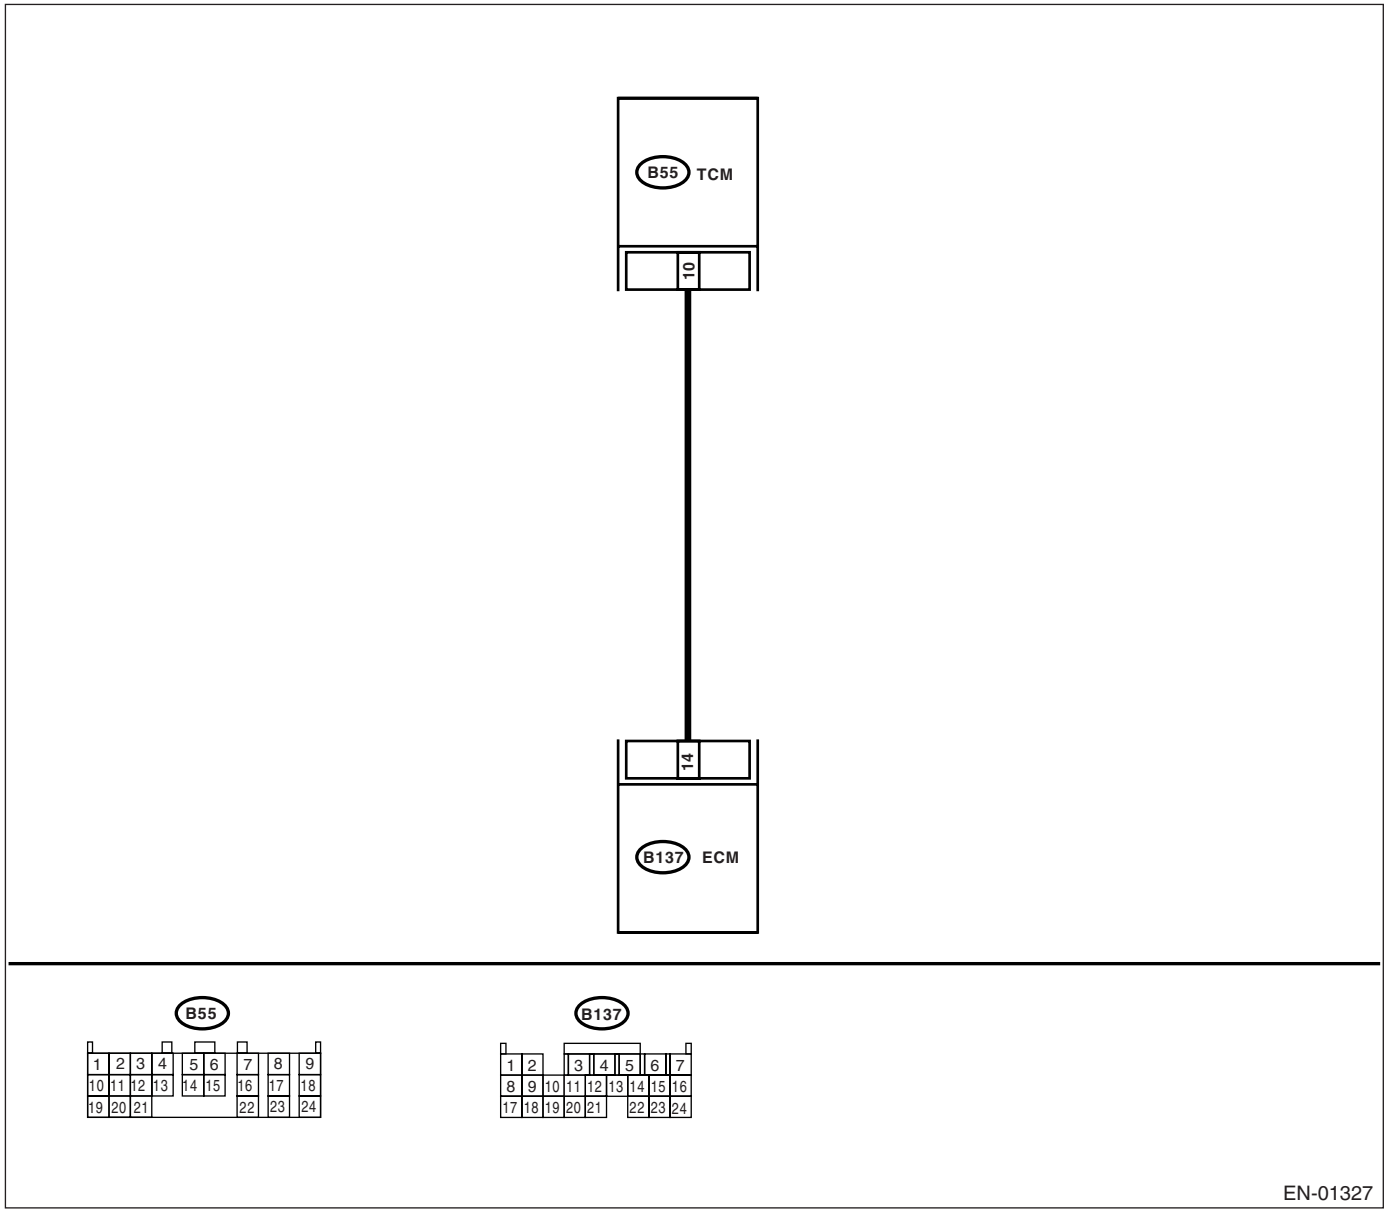

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL FROM ECM.** 1)Start the engine and warm-up engine. 2)Turn the ignition switch to OFF. 3)Disconnect the connector from TCM. 4)Turn the ignition switch to ON. 5)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 14 (+) — Chassis ground (−):***	Is the voltage less than 3 V?	Go to step **2.**	Repair the battery short circuit in harness between ECM and TCM connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
2	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B137) No. 14 (+) — Chassis ground (−):***	Shake the ECM harness and connector, while monitoring value of voltage meter. Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and TCM connector. After repair, replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>	Contact your Subaru distributor service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DI: DTC P1711 — ENGINE TORQUE CONTROL SIGNAL 1 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Excessive shift shock

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

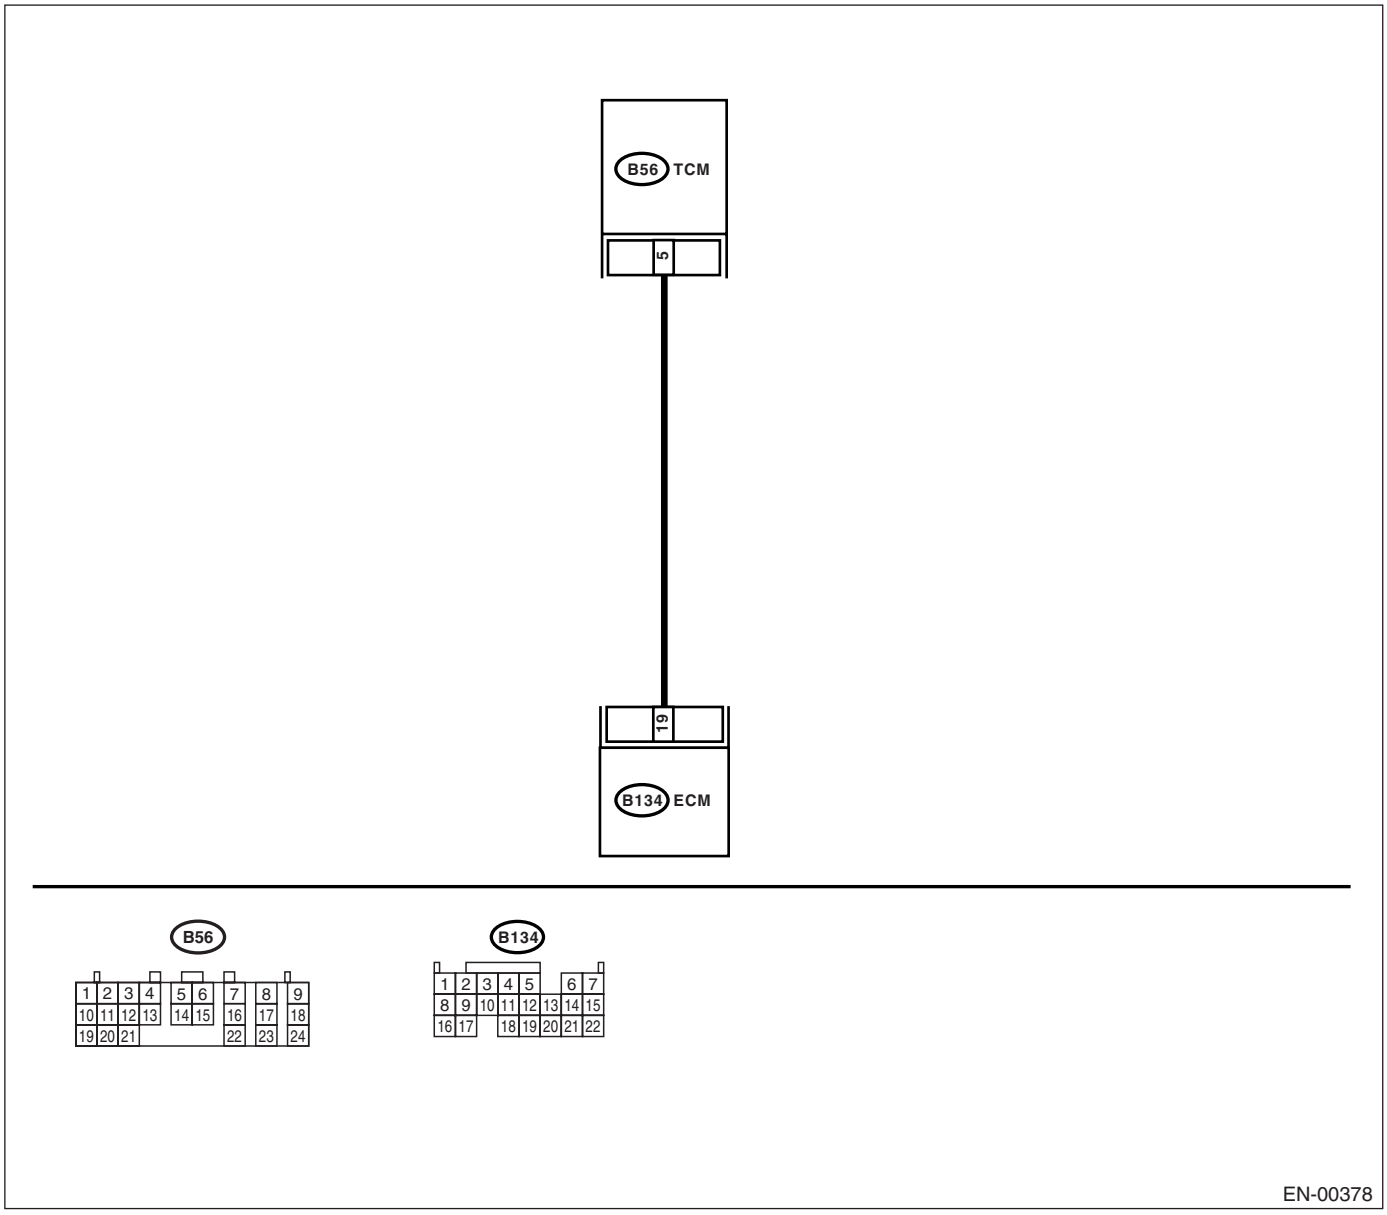

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 19 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and TCM connector.	Go to step **3.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between ECM and TCM connector. ***Connector & terminal*** ***(B134) No. 19 — (B56) No. 5:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between ECM and TCM connector.
5	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the ground short circuit in harness between ECM and TCM connector.
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

DJ:DTC P1712 — ENGINE TORQUE CONTROL SIGNAL 2 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
  - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
  - Excessive shift shock

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-48, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-40, Inspection Mode.>.

- **WIRING DIAGRAM:**

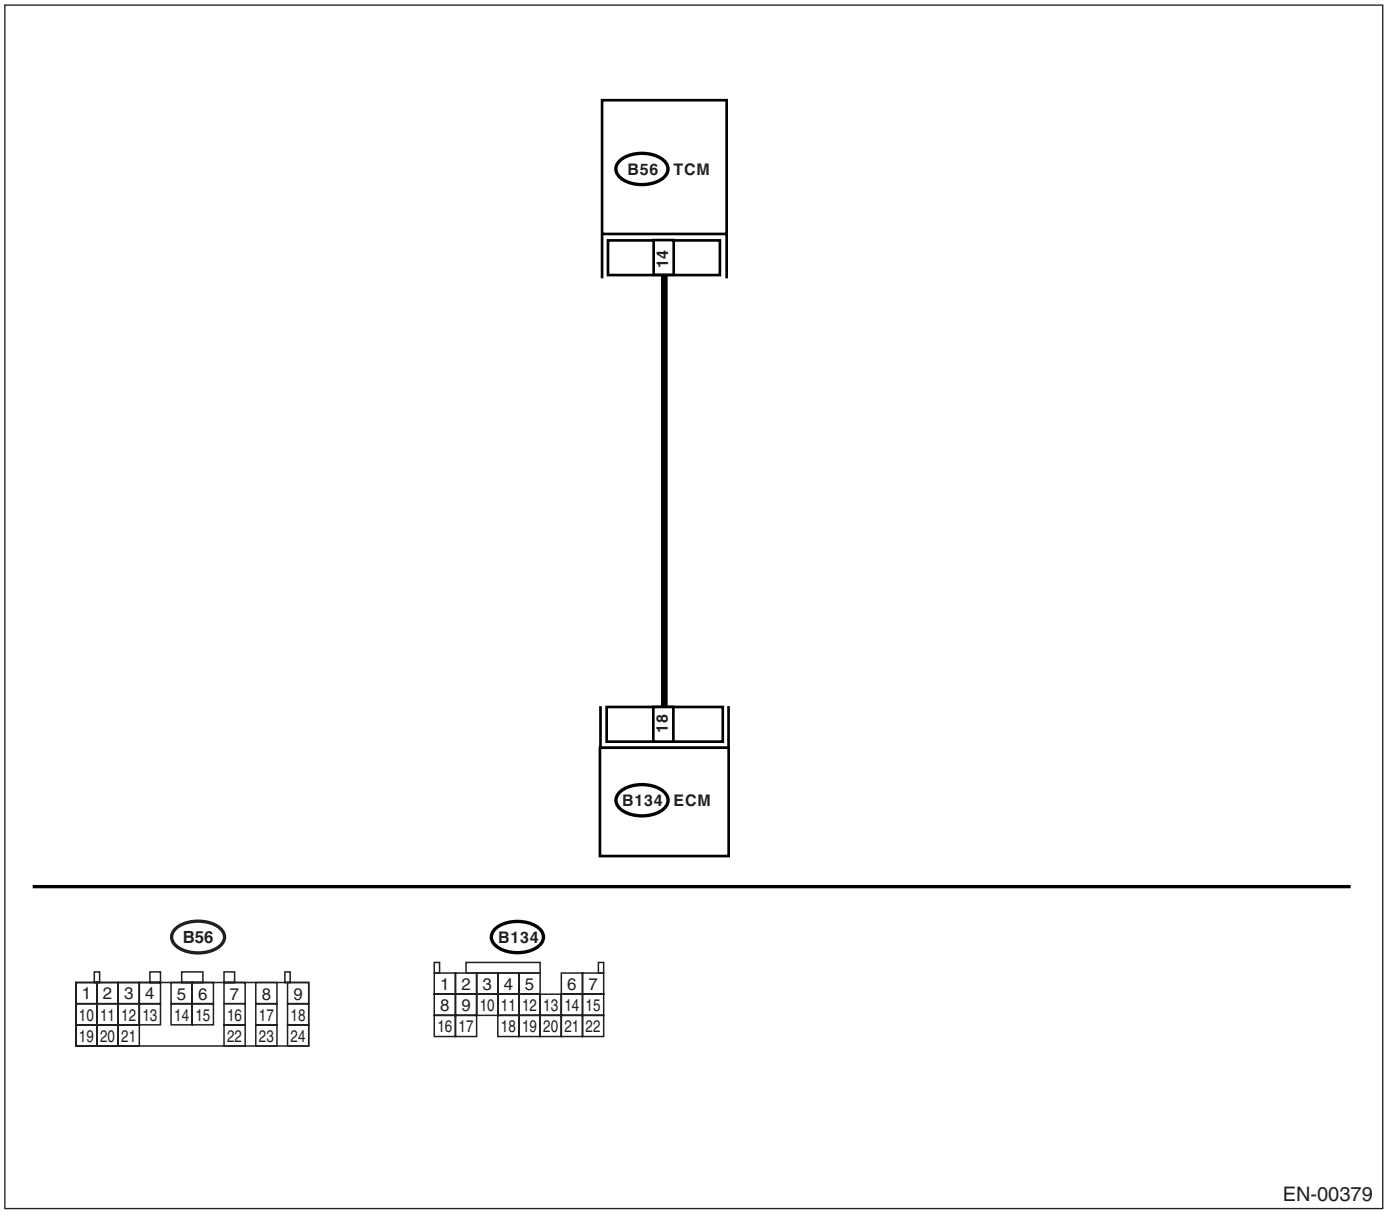

	Step	Check	Yes	No
1	**CHECK INPUT SIGNAL FOR ECM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 18 (+) — Chassis ground (−):***	Is the voltage more than 4.5 V?	Go to step **2.**	Go to step **4.**
2	**CHECK INPUT SIGNAL FOR ECM.** Measure the voltage between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 18 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and TCM connector.	Go to step **3.**
3	**CHECK POOR CONTACT.** Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
4	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from ECM and TCM. 3)Measure the resistance of harness between ECM and TCM connector. ***Connector & terminal*** ***(B134) No. 18 — (B56) No. 4:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between ECM and TCM connector.
5	**CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.** Measure the resistance of harness between ECM and chassis ground. ***Connector & terminal*** ***(B134) No. 18 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the ground short circuit in harness between ECM and TCM connector.
6	**CHECK POOR CONTACT.** Check poor contact in TCM connector.	Is there poor contact in TCM connector?	Repair the poor contact in TCM connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

20.General Diagnostic Table

A: INSPECTION

1. ENGINE

NOTE:
Malfunction of parts other than those listed is also possible. <Ref. to ME(H4DOTC)-113, Engine Trouble in General.>

Symptom	Problem parts
1. Engine stalls during idling.	1) Idle air control solenoid valve 2) Manifold absolute pressure sensor 3) Mass air flow and intake temperature sensor 4) Ignition parts (*1) 5) Engine coolant temperature sensor (*2) 6) Crankshaft position sensor (*3) 7) Camshaft position sensor (*3) 8) Fuel injection parts (*4)
2. Rough idling	1) Idle air control solenoid valve 2) Manifold absolute pressure sensor 3) Mass air flow and intake temperature sensor 4) Engine coolant temperature sensor (*2) 5) Ignition parts (*1) 6) Air intake system (*5) 7) Fuel injection parts (*4) 8) Throttle position sensor 9) Crankshaft position sensor (*3) 10) Camshaft position sensor (*3) 11) Oxygen sensor 12) Fuel pump and fuel pump relay
3. Engine does not return to idle.	1) Idle air control solenoid valve 2) Engine coolant temperature sensor 3) Accelerator cable (*6) 4) Throttle position sensor 5) Manifold absolute pressure sensor 6) Mass air flow sensor
4. Poor acceleration	1) Manifold absolute pressure sensor 2) Mass air flow and intake temperature sensor 3) Throttle position sensor 4) Fuel injection parts (*4) 5) Fuel pump and fuel pump relay 6) Engine coolant temperature sensor (*2) 7) Crankshaft position sensor (*3) 8) Camshaft position sensor (*3) 9) A/C switch and A/C cut relay 10) Engine torque control signal circuit 11) Ignition parts (*1)
5. Engine stalls or engine sags or hesitates at acceleration.	1) Manifold absolute pressure sensor 2) Mass air flow and intake temperature sensor 3) Engine coolant temperature sensor (*2) 4) Crankshaft position sensor (*3) 5) Camshaft position sensor (*3) 6) Purge control solenoid valve 7) Fuel injection parts (*4) 8) Throttle position sensor 9) Fuel pump and fuel pump relay

Symptom	Problem parts
6. Surge	1) Manifold absolute pressure sensor 2) Mass air flow and intake temperature sensor 3) Engine coolant temperature sensor (*2) 4) Crankshaft position sensor (*3) 5) Camshaft position sensor (*3) 6) Fuel injection parts (*4) 7) Throttle position sensor 8) Fuel pump and fuel pump relay
7. Spark knock	1) Manifold absolute pressure sensor 2) Mass air flow and intake temperature sensor 3) Engine coolant temperature sensor 4) Knock sensor 5) Fuel injection parts (*4) 6) Fuel pump and fuel pump relay
8. After-burning in exhaust system	1) Manifold absolute pressure sensor 2) Mass air flow and intake temperature sensor 3) Engine coolant temperature sensor (*2) 4) Fuel injection parts (*4) 5) Fuel pump and fuel pump relay

*1: Check ignition coil & ignitor assembly and spark plug.
*2: Indicate the symptom occurring only in cold temperatures.
*3: Ensure the secure installation.
*4: Check fuel injector, fuel pressure regulator and fuel filter.
*5: Inspect air leak in air intake system.
*6: Adjust accelerator cable.

TRANSMISSION SECTION

CONTROL SYSTEMS	CS
AUTOMATIC TRANSMISSION	4AT
AUTOMATIC TRANSMISSION (DIAGNOSTICS)	4AT
MANUAL TRANSMISSION AND DIFFERENTIAL	5MT
MANUAL TRANSMISSION AND DIFFERENTIAL	6MT
CLUTCH SYSTEM	CL

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD.

CONTROL SYSTEMS

CS

		Page
1.	General Description	2
2.	Select Lever	9
3.	Select Cable	13
4.	AT Steering Shift Switch	16
5.	MT Gear Shift Lever	18
6.	Reverse Check Cable	31
7.	MT Drive Select Lever	36
8.	Drive Select Cable	38
9.	General Diagnostic Table	39

1. General Description

A: SPECIFICATIONS

Item		Specification
Swing torque of rod against lever	N (kgf, lb)	3.7 (0.38, 0.84) or less

B: COMPONENT

1. AT SELECT LEVER

• EXCEPT SPORT SHIFT MODEL

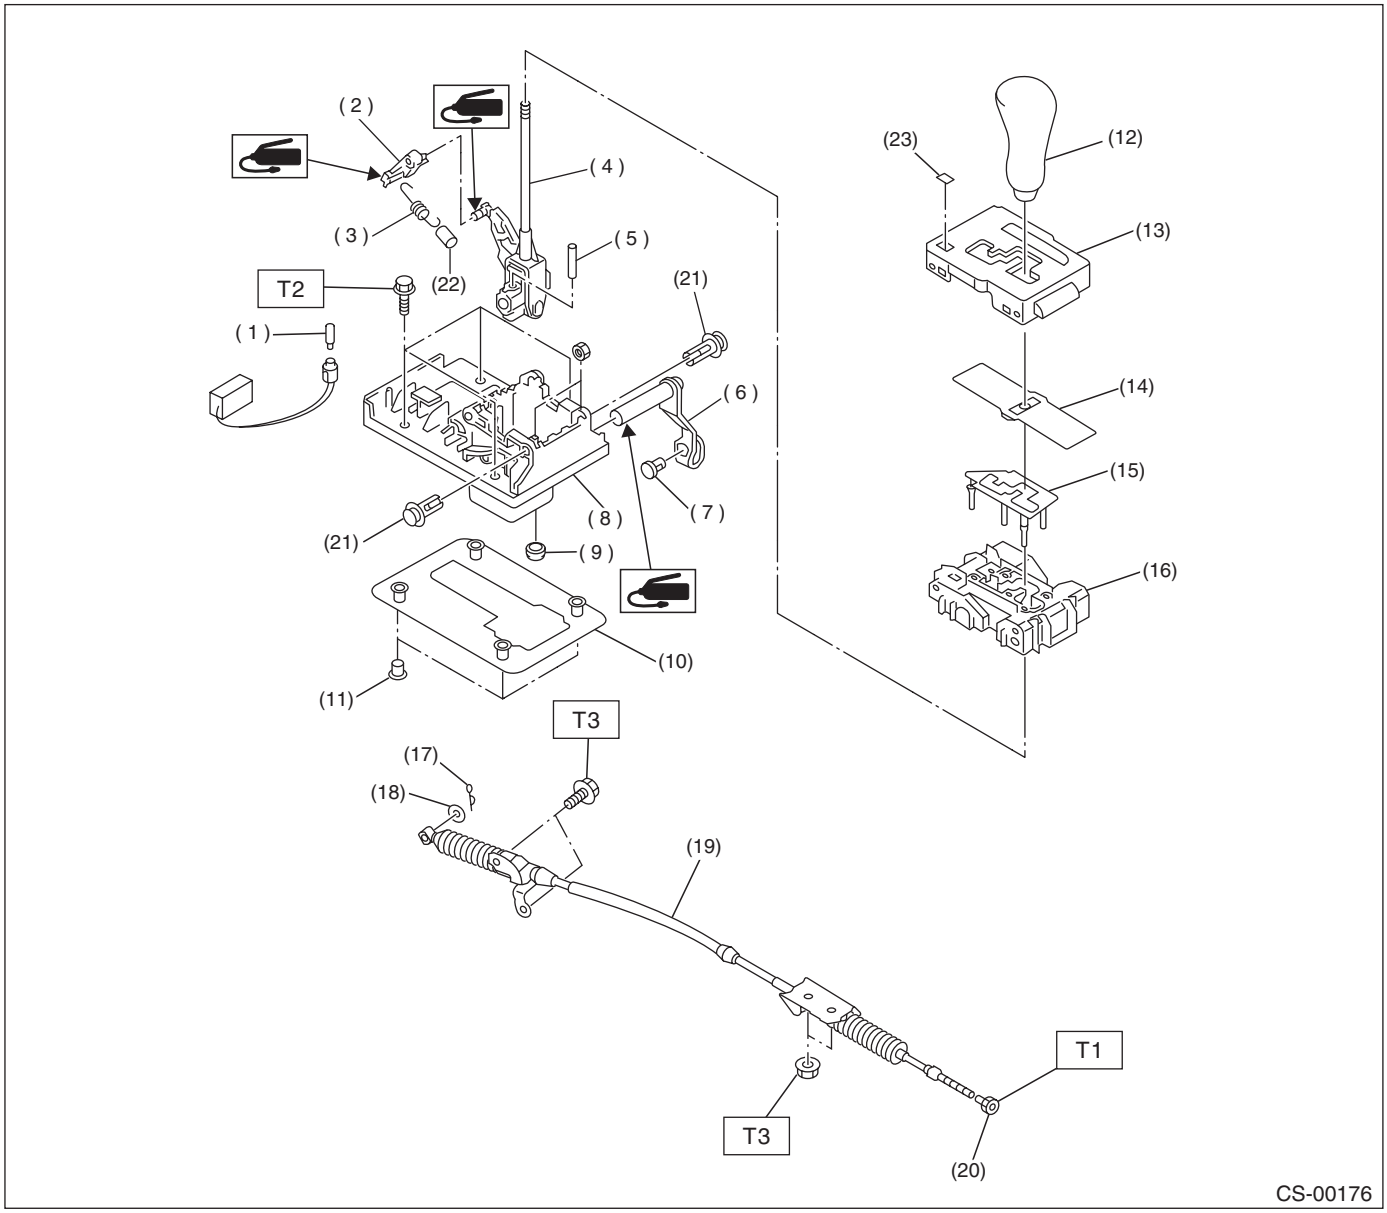

(1) Bulb
(2) Detent arm
(3) Detent spring
(4) Select lever ASSY
(5) Spring pin
(6) Arm ASSY
(7) Bushing
(8) Plate
(9) Grommet
(10) Packing
(11) Spacer
(12) Grip
(13) Indicator cover
(14) Blind
(15) Cushion plate
(16) Guide plate
(17) Snap pin
(18) Washer
(19) Selector cable
(20) Nut A
(21) Clip
(22) Tube
(23) Cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 13 (1.3, 9.4)
T3: 18 (1.8, 13.0)

• SPORT SHIFT MODEL

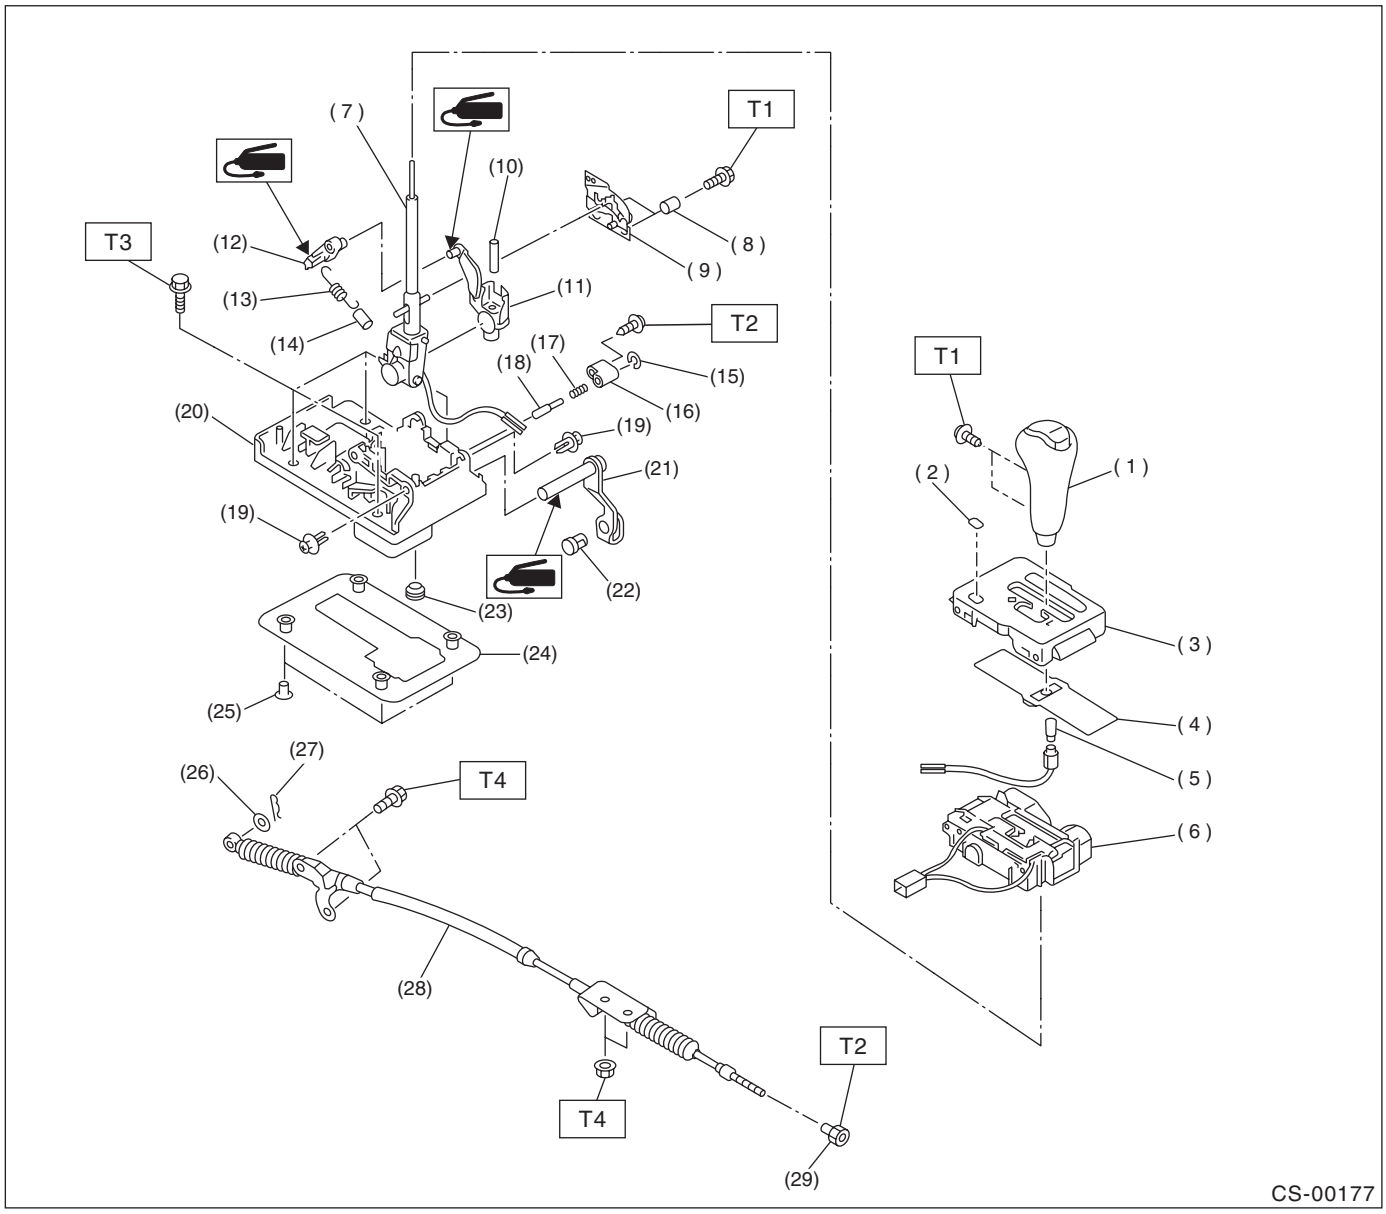

(1) Grip
(2) Cover
(3) Indicator cover
(4) Blind
(5) Bulb
(6) Guide plate
(7) Lever
(8) Spacer
(9) Bracket guide
(10) Spring pin
(11) Arm bracket
(12) Detent arm
(13) Detent spring
(14) Tube
(15) Clip
(16) Bushing
(17) Spring
(18) Rod
(19) Clip
(20) Base plate
(21) Arm
(22) Bushing
(23) Grommet
(24) Packing
(25) Spacer
(26) Washer
(27) Snap pin
(28) Select cable
(29) Nut A

Tightening torque: N·m (kgf-m, ft-lb)
T1: 2.0 (0.2, 1.4)
T2: 7.5 (0.76, 5.5)
T3: 13 (1.3, 9.4)
T4: 18 (1.8, 13.0)

2. 5MT GEAR SHIFT LEVER

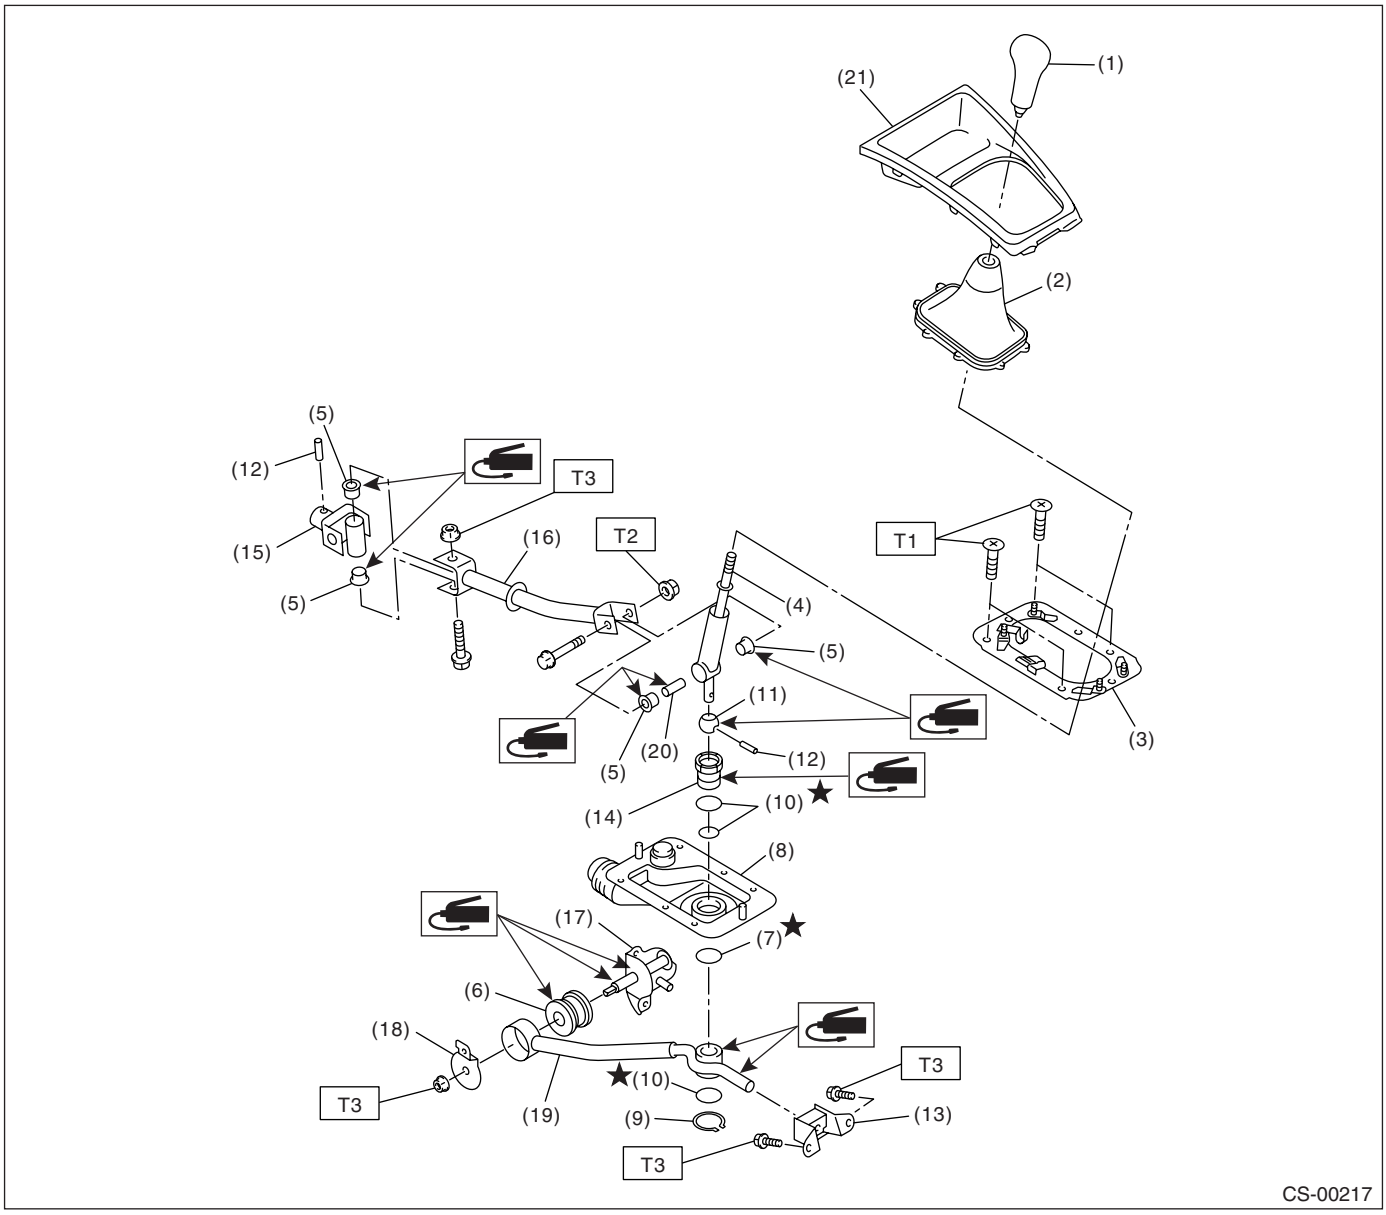

(1) Gear shift knob
(2) Console boot
(3) Plate ASSY
(4) Lever
(5) Bushing
(6) Bushing
(7) Lock wire
(8) Boot
(9) Snap ring
(10) O-ring
(11) Bushing A
(12) Spring pin
(13) Cushion rubber
(14) Bushing B
(15) Joint
(16) Rod
(17) Bracket
(18) Washer
(19) Stay
(20) Spacer
(21) Front cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 12 (1.2, 8.7)
T3: 18 (1.8, 13.0)

3. 6MT GEAR SHIFT LEVER

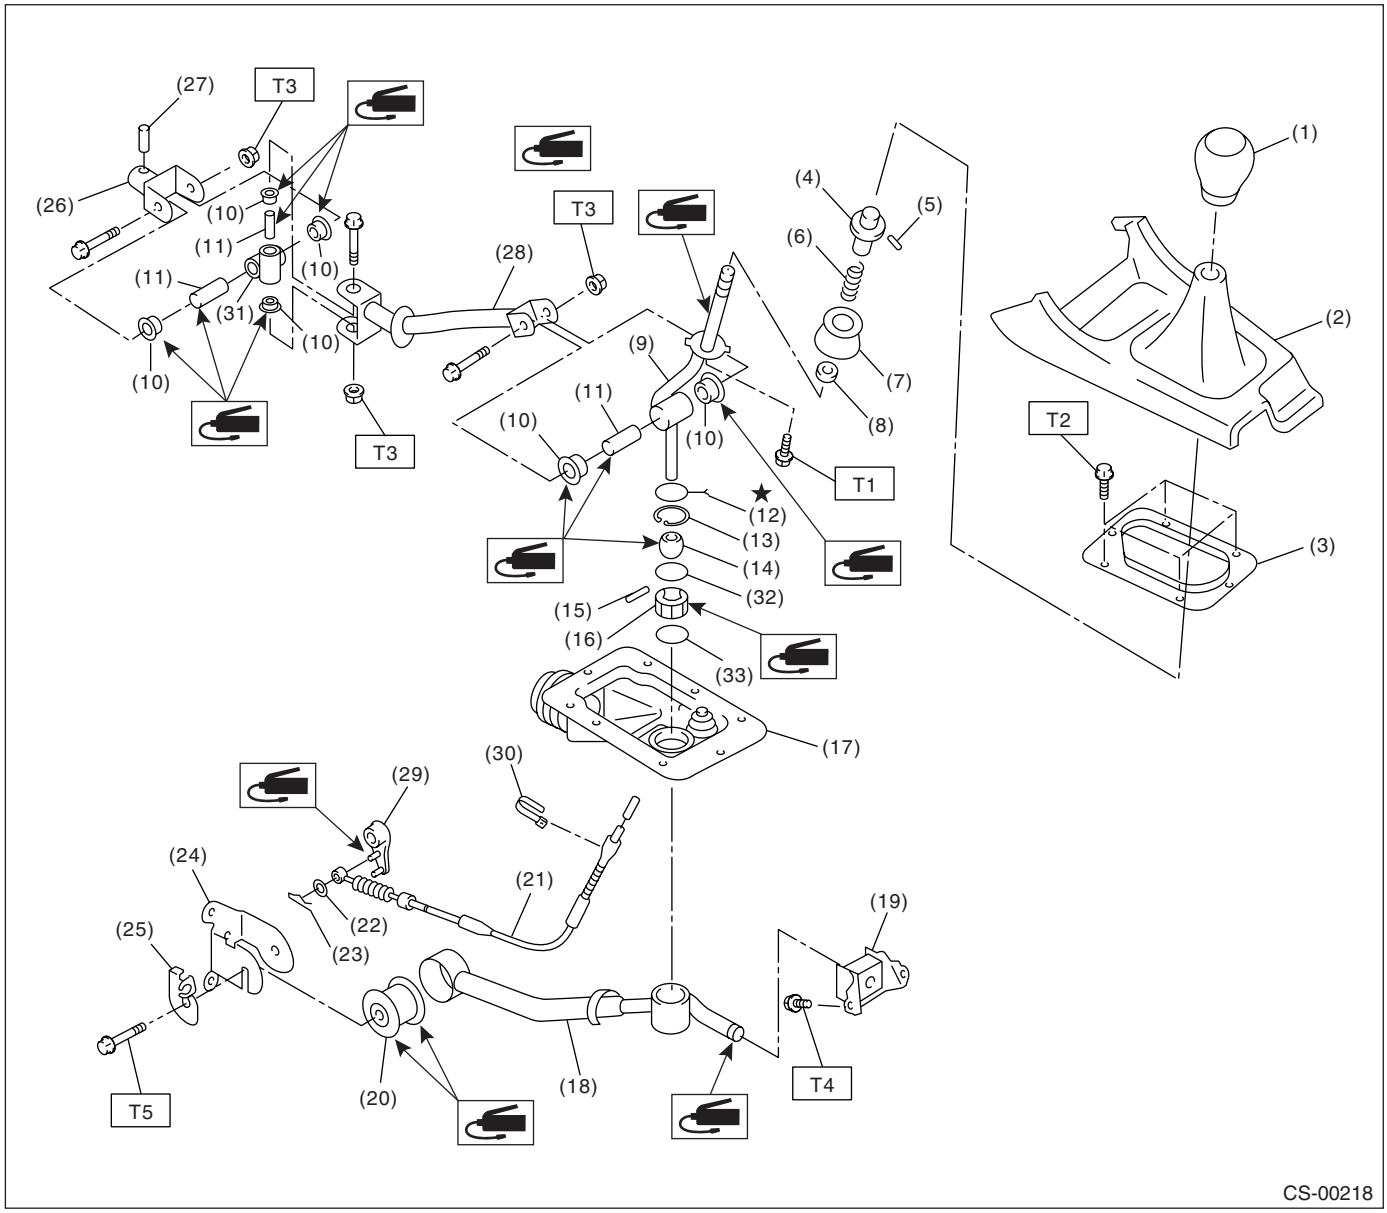

(1) Gear shift knob
(2) Console box front
(3) Plate
(4) Slider
(5) Spring pin
(6) Spring
(7) Holder
(8) Seat cushion
(9) Lever
(10) Bush
(11) Spacer
(12) Lock wire
(13) Snap ring
(14) Bush
(15) Spring pin
(16) Bush
(17) Boot
(18) Stay
(19) Cushion rubber
(20) Bush
(21) Reverse check cable
(22) Washer
(23) Snap pin
(24) Bracket
(25) Cable plate
(26) Joint
(27) Spring pin
(28) Rod
(29) Reverse check lever
(30) Band clip
(31) Boss
(32) O-ring
(33) O-ring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.3 (0.13, 0.96)
T2: 7.5 (0.76, 5.5)
T3: 11.8 (1.2, 8.7)
T4: 18 (1.8, 13.0)
T5: 32 (3.3, 23.6)

4. DRIVE SELECT LEVER

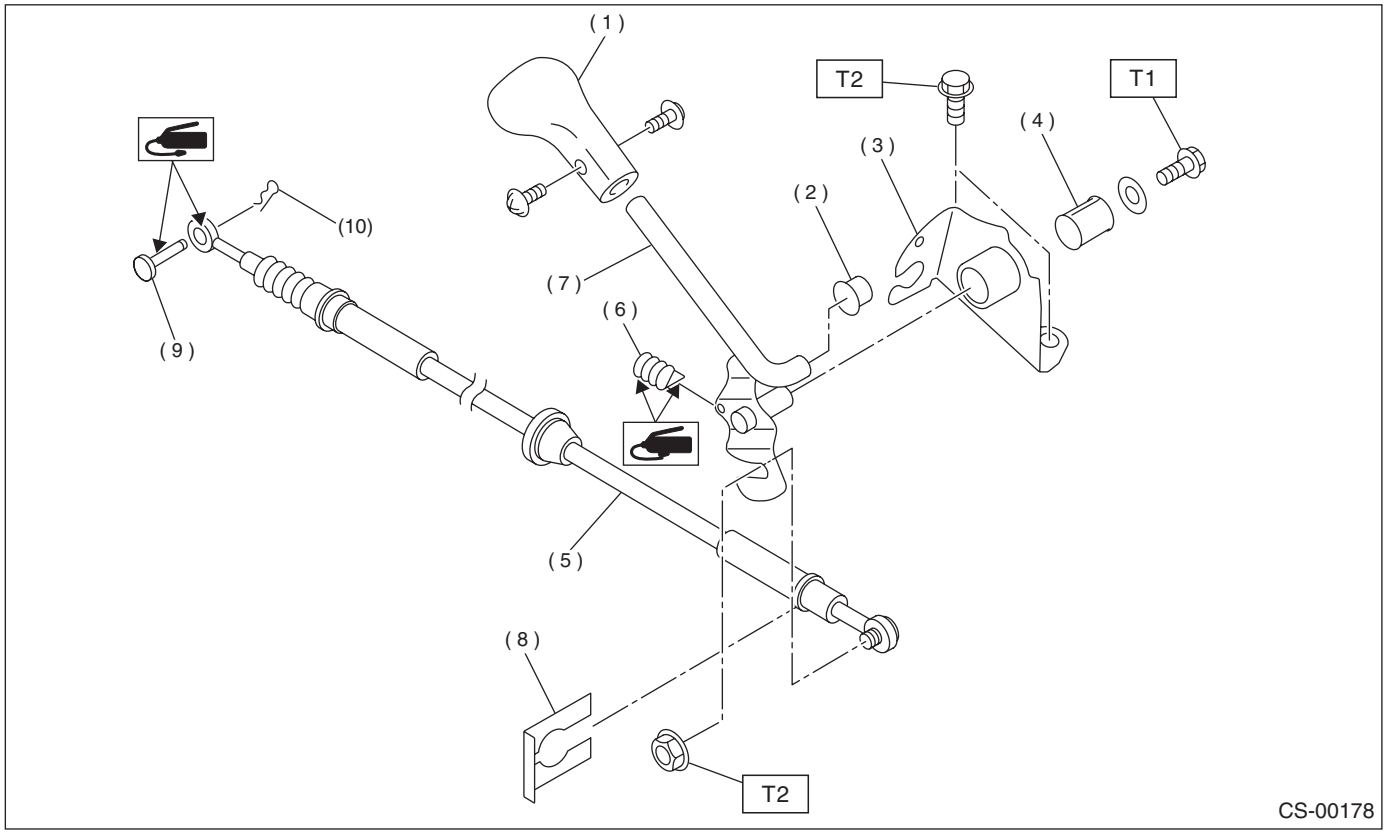

(1) Knob
(2) Cushion
(3) Plate ASSY
(4) Bushing
(5) Cable
(6) Spring
(7) Lever ASSY
(8) Clip
(9) Clevis pin
(10) Snap pin

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.6 (0.16, 1.2)
T2: 18 (1.8, 13.0)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Apply grease onto sliding or revolution surfaces before installation.
• Before installing O-rings or snap rings, apply sufficient amount of grease to avoid damage and deformation.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Before disconnecting electrical connectors, be sure to disconnect the ground cable from battery.

2. Select Lever

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect negative cable from battery.
3) Set the select lever to the “N” range.
4) Lift-up the vehicle.
5) Remove rear exhaust pipe and muffler.
SOHC model
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
DOHC turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
6) Remove heat shield cover. (If equipped)

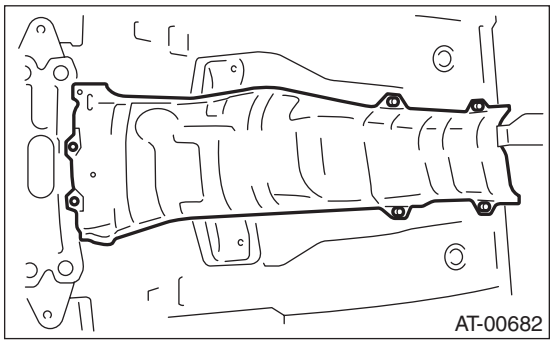

7) Disconnect cable from select lever, and then remove the cable bracket.

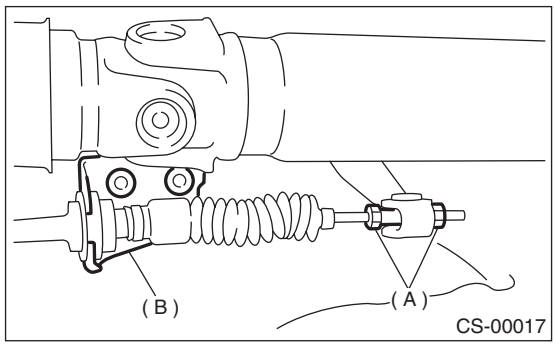

(A) Adjusting nuts
(B) Cable bracket

8) Lower the vehicle.
9) Remove console box. <Ref. to EI-42, REMOVAL, Console Box.>
10) Disconnect the connectors, then remove the four bolts to take out the select lever assembly from the body.

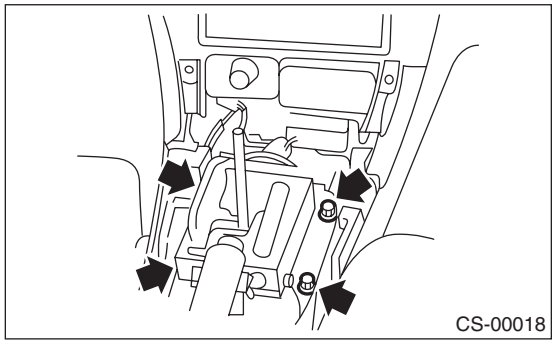

B: INSTALLATION

1) Mount the select lever onto the vehicle body.
2) Tighten the four bolts to install the select lever to the vehicle body, then connect connector.

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

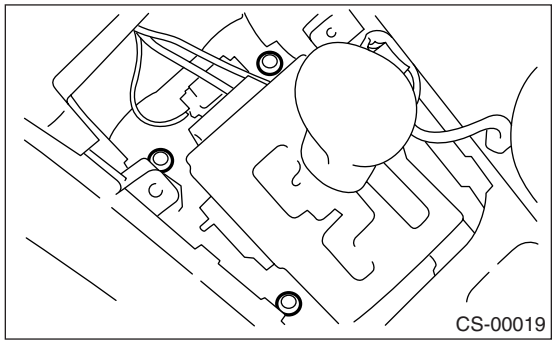

3) Install console box. <Ref. to EI-42, INSTALLATION, Console Box.>
4) Set location of select lever at “N” range.
5) Lift-up the vehicle.
6) Set location of range select lever to “N” range.
7) Insert the thread portion of the other inner cable and into the connector hole of the select lever, and fix the other outer cable end to the bracket.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

8) Adjust the select cable position. <Ref. to CS-15, ADJUSTMENT, Select Cable.>
9) After completion of fitting, make sure that the select lever operates smoothly all across the operating range.
10) Install the heat shield cover. (If equipped)

11) Install rear exhaust pipe and muffler.
SOHC model
<Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, INSTALLATION, Muffler.>
DOHC turbo model
<Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
12) Inspect the following items. If the following inspection reveals problems, adjust the select cable and inhibitor switch. <Ref. to CS-15, ADJUSTMENT, Select Cable.> and <Ref. to 4AT-49, ADJUSTMENT, Inhibitor Switch.>

(1) The engine starts operating when select lever is in range “P” and “N”, but not in other positions.
(2) The back-up light is lit when the select lever is in range “R”, but not in other ranges.
(3) Select lever and indicator ranges are matched.

C: DISASSEMBLY

1. EXCEPT SPORT SHIFT MODEL

1) Remove the grip.
2) Remove the bulb, and then remove the indicator cover.

NOTE:
Be careful not to break the bulb during removal.

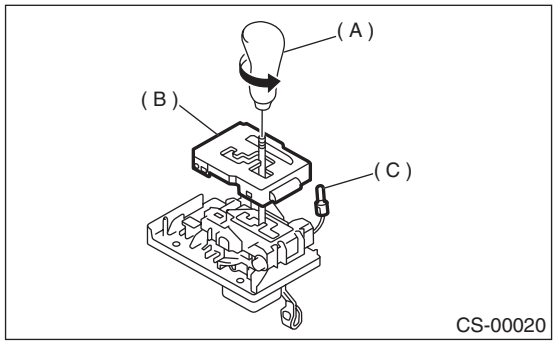

(A) Grip
(B) Indicator cover
(C) Bulb

3) Remove blind.

4) Remove the clips, and then remove the guide plate.

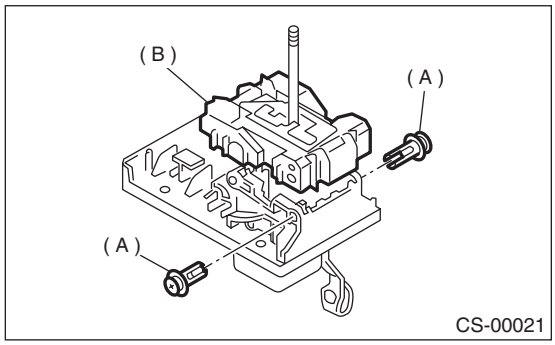

(A) Clips
(B) Guide plate

5) Remove the cap, and then the extract spring pin.

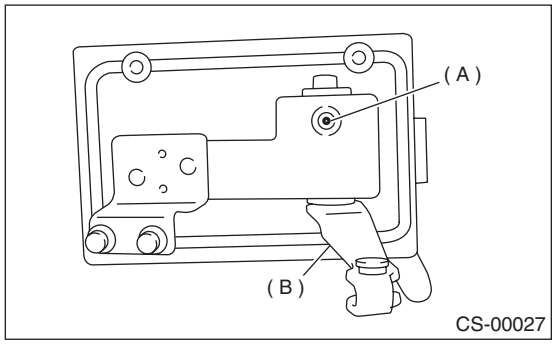

(A) Spring pin
(B) Arm ASSY

6) Remove the arm assembly, and then take away the lever from base plate.

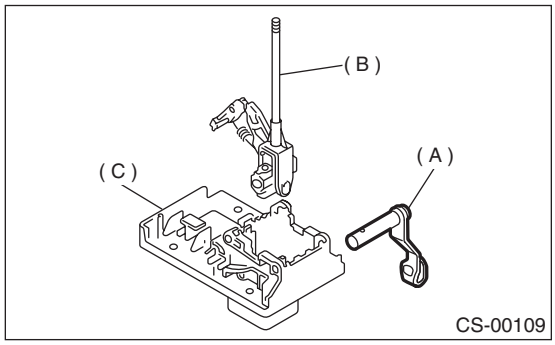

(A) Arm ASSY
(B) Lever
(C) Base plate

2. SPORT SHIFT MODEL

1) Remove the packing.
2) Remove the grip.

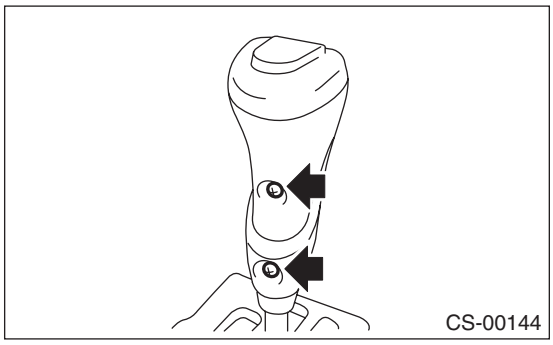

3) Remove the bulb, and then remove the indicator cover.

NOTE:
Be careful not to break the bulb during removal.

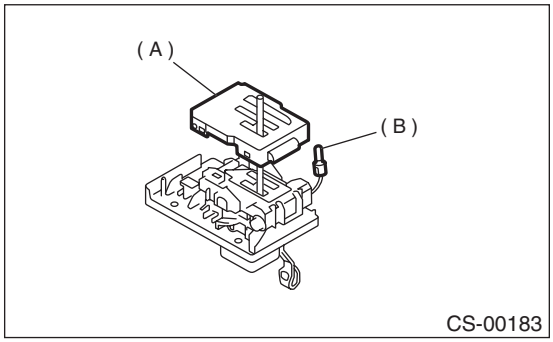

(A) Indicator cover
(B) Bulb

4) Remove the blind.
5) Remove the clips, and then remove the guide plate.

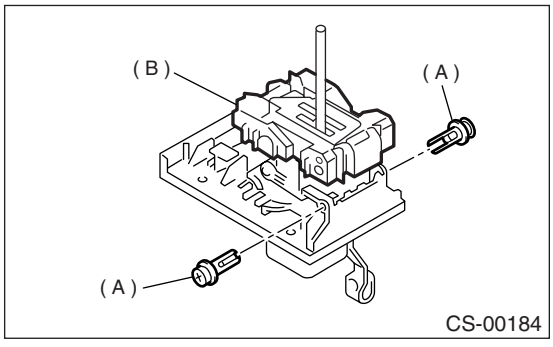

(A) Clips
(B) Guide plate

6) Remove the screw.

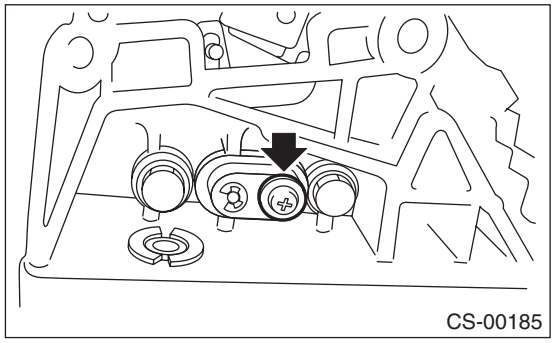

7) Remove the bushing.

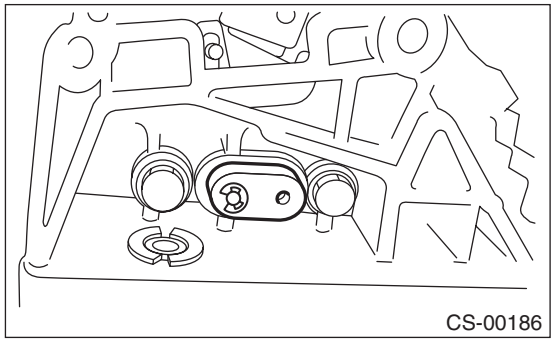

8) Remove the clip, and then remove the rod and the spring.

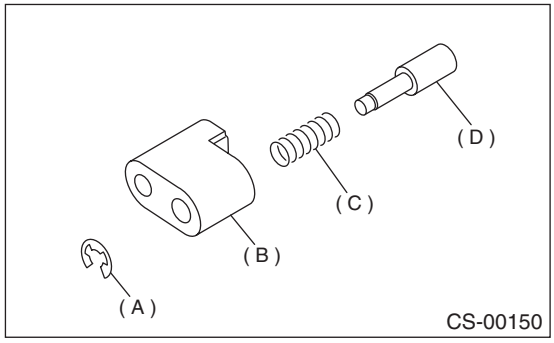

(A) Clip
(B) Bushing
(C) Spring
(D) Rod

9) Remove the bolt.

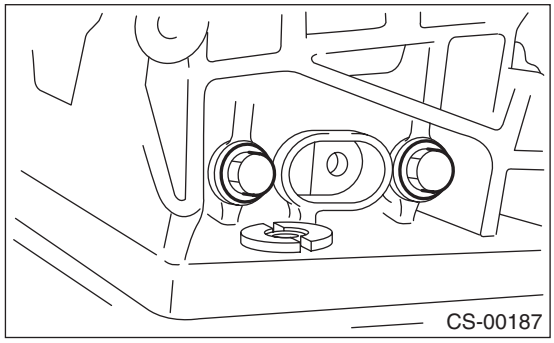

10) Remove the bracket guide assembly.

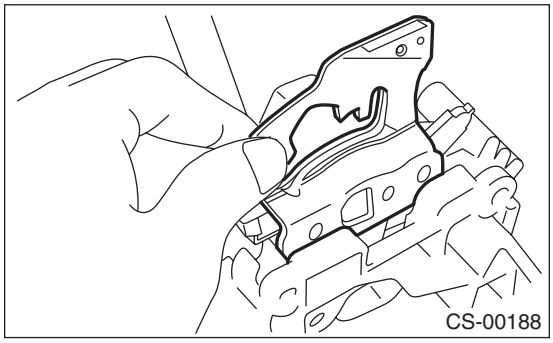

11) Remove the grommet, and then extract spring pin from the top.

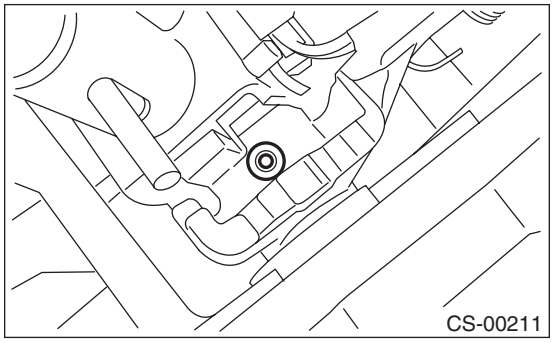

12) Remove the arm assembly and then take away the lever and arm bracket from base plate.

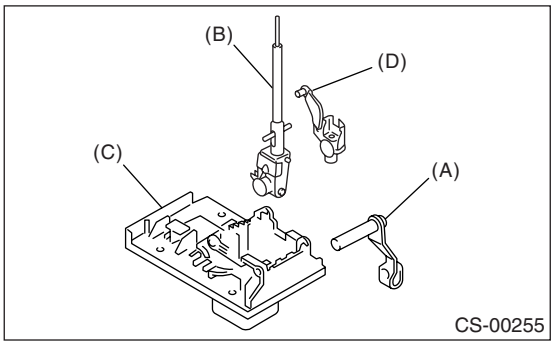

(A) Arm ASSY
(B) Lever
(C) Base plate
(D) Arm bracket

13) Remove the spring, and then remove the detent arm.

D: ASSEMBLY

1) Clean all parts before assembly.
2) Apply grease [KOPR-KOTE (Part No. 003603001) or equivalent] to each parts. <Ref. to CS-3, AT SELECT LEVER, COMPONENT, General Description.>
3) Assembly is in the reverse order of disassembly.
4) After completion of fitting, transfer the select lever to range “P” — “1”, then check whether the indicator and select lever agree, whether the pointer and position mark agree and what the operating force is.

E: INSPECTION

1) Inspect the removed parts by comparing with new ones for deformation, damage and wear. Correct or replace if defective.
2) Confirm the following parts for operating condition before assembly. Moving condition of the select lever assembly, it should move smoothly.

3. Select Cable

A: REMOVAL

1) Set the vehicle on a lift.
2) Set the select lever to “N” range.
3) Disconnect negative cable from battery.
4) Lift-up the vehicle.
5) Remove front, center, rear exhaust pipe and muffler. (Non-turbo model)
SOHC model
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-6, REMOVAL, Front Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
6) Remove the center and rear exhaust pipes and muffler. (DOHC turbo model)
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
7) Remove the heat shield cover. (If equipped)

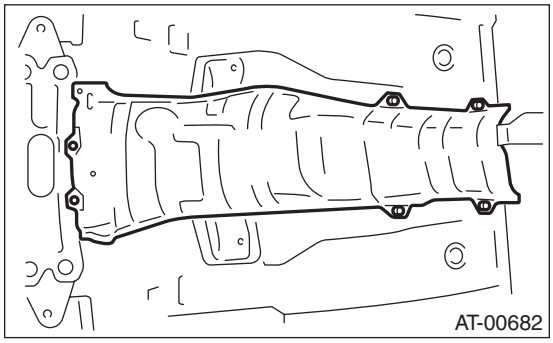

8) Remove the snap pin and washer from range select lever.

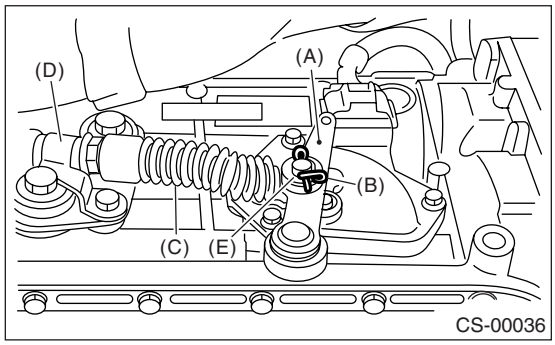

(A) Range select lever
(B) Snap pin
(C) Select cable
(D) Clamp
(E) Washer

9) Remove the plate assembly from transmission case.

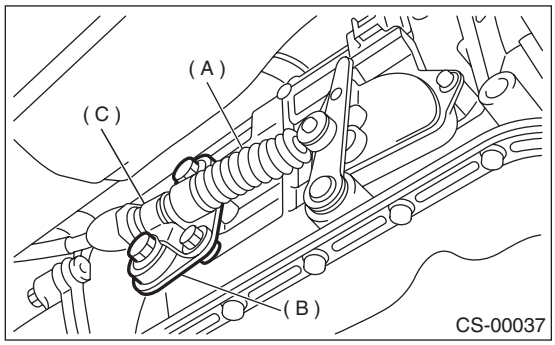

(A) Select cable
(B) Plate ASSY
(C) Clamp

10) Disconnect the cable from select lever, and then remove the cable bracket.

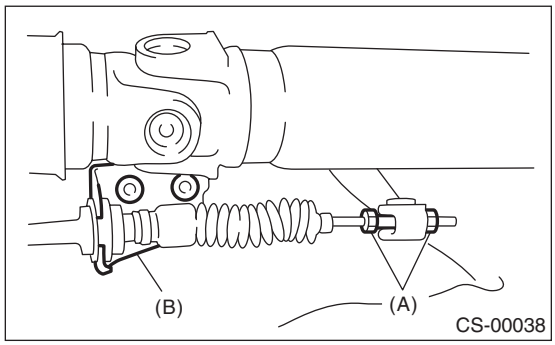

(A) Adjusting nuts
(B) Cable bracket

11) Remove the select cable from plate assembly.

B: INSTALLATION

1) Install the select cable to plate assembly.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

2) Install the select cable to range select lever.
3) Install the plate assembly to transmission.

Tightening torque:
T: 24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

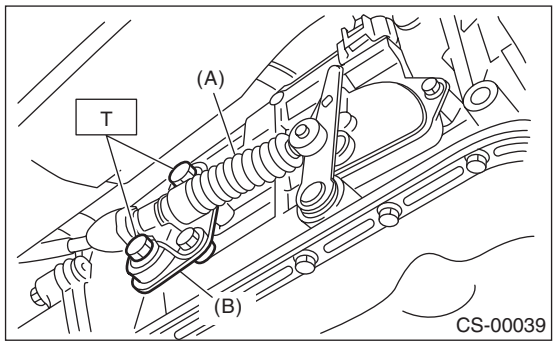

(A) Select cable
(B) Plate ASSY

4) Install the washer and snap pin to range select lever.

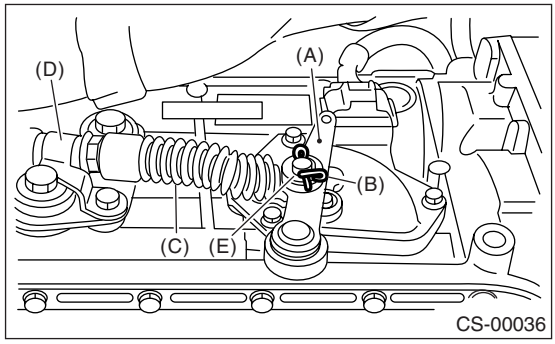

(A) Range select lever
(B) Snap pin
(C) Select cable
(D) Clamp
(E) Washer

5) Insert the thread portion of other inner cable and into connector hole of select lever, and fix the other outer cable end to the bracket.

Tightening torque:
18 N·m (1.8 kgf-m, 13 ft-lb)

6) Move the select lever to “N” range, and then adjust the select cable position. <Ref. to CS-15, ADJUSTMENT, Select Cable.>

7) Install the heat shield cover.

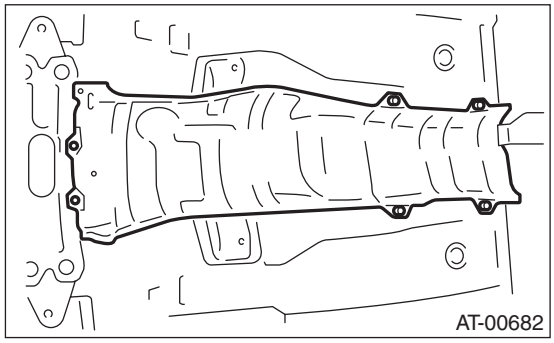

8) Install the front, center, rear exhaust pipe and muffler. (Non-turbo model)
SOHC model
<Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-9, INSTALLATION, Center Exhaust Pipe.>, <Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-9, INSTALLATION, Center Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, INSTALLATION, Muffler.>
9) Install center and rear exhaust pipes and muffler. (DOHC turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>

C: INSPECTION

Check the removed cable and replace if damaged, rusty, or malfunctioning.
1) Check for smooth operation of the cable.
2) Check the inner cable for damage and rust.
3) Check the outer cable for damage, bends, and cracks.
4) Check the boot for damage, cracks, and deterioration.
5) Move the select lever from “P” range to “1” range. You should be able to feel the detents in each position. If the detents cannot be felt or the position pointer is improperly aligned, adjust the cable.

D: ADJUSTMENT

1) Set the select lever to “N” range.
2) Remove rear exhaust pipe and muffler.
SOHC model
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
DOHC turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
3) Remove heat shield cover. (If equipped)

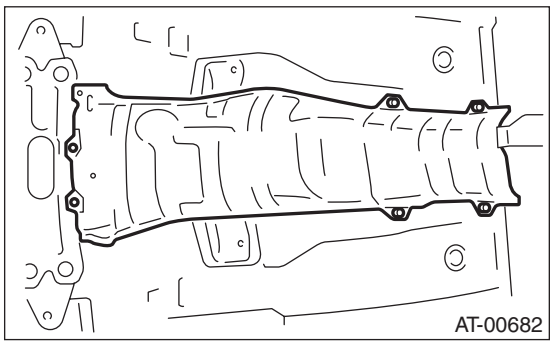

4) Loosen the adjusting nut on each side.

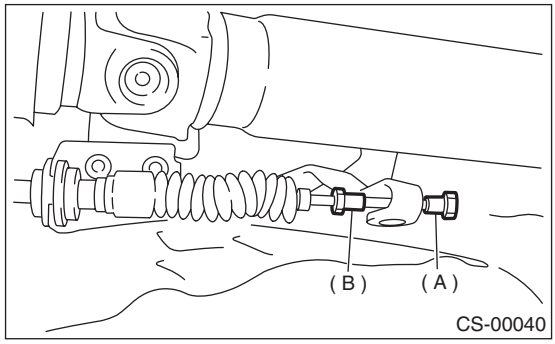

(A) Adjusting nut A
(B) Adjusting nut B

5) Turn the adjusting nut B until it lightly touches the connector.

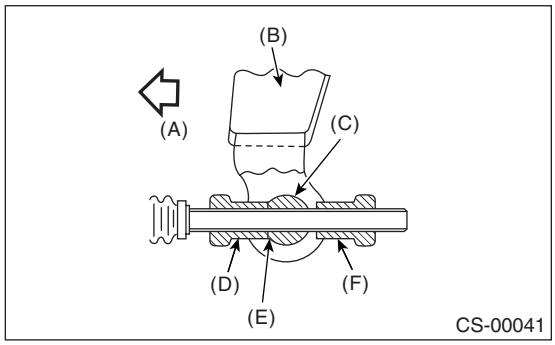

(A) Front side
(B) Select lever
(C) Connector
(D) Adjusting nut B
(E) Contact point
(F) Adjusting nut A

6) While preventing the adjusting nut B from moving with a wrench, tighten the adjusting nut A.

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

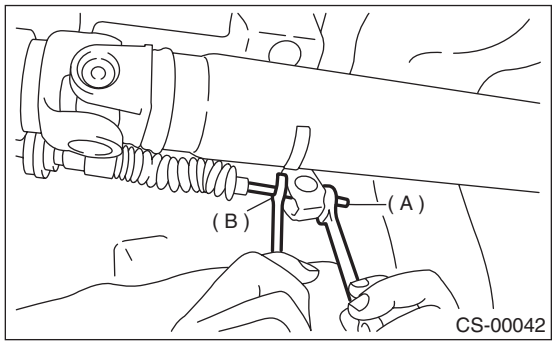

(A) Adjusting nut A
(B) Adjusting nut B

7) After completion of fitting, make sure that the select lever operates smoothly all across the operating range.
8) Install in the reverse order of removal.

4. AT Steering Shift Switch

A: REMOVAL

1) Remove the ground cable from battery.
2) Position the wheels in a straight-ahead position.
3) Remove the airbag module. <Ref. to AB-12, REMOVAL, Driver's Airbag Module.>

WARNING:
When the airbag is equipped, the airbag module should be repaired by referring to "Airbag System". <Ref. to AB-12, REMOVAL, Driver's Airbag Module.>

4) Remove the RH and LH screws retaining the AT steering shift switch.

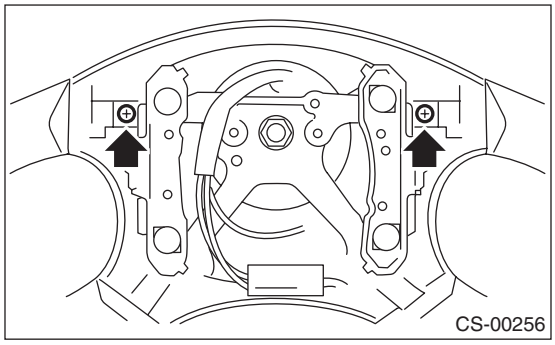

5) Remove the AT steering shift switch.

B: INSTALLATION

1) Clean all the parts before installation.
2) Install in the reverse order of removal.
3) Shift the select lever to the sport shift position after installation, and then check the sport shift mode "1" range illuminates in the combination meter.

C: INSPECTION

WIRING DIAGRAM:

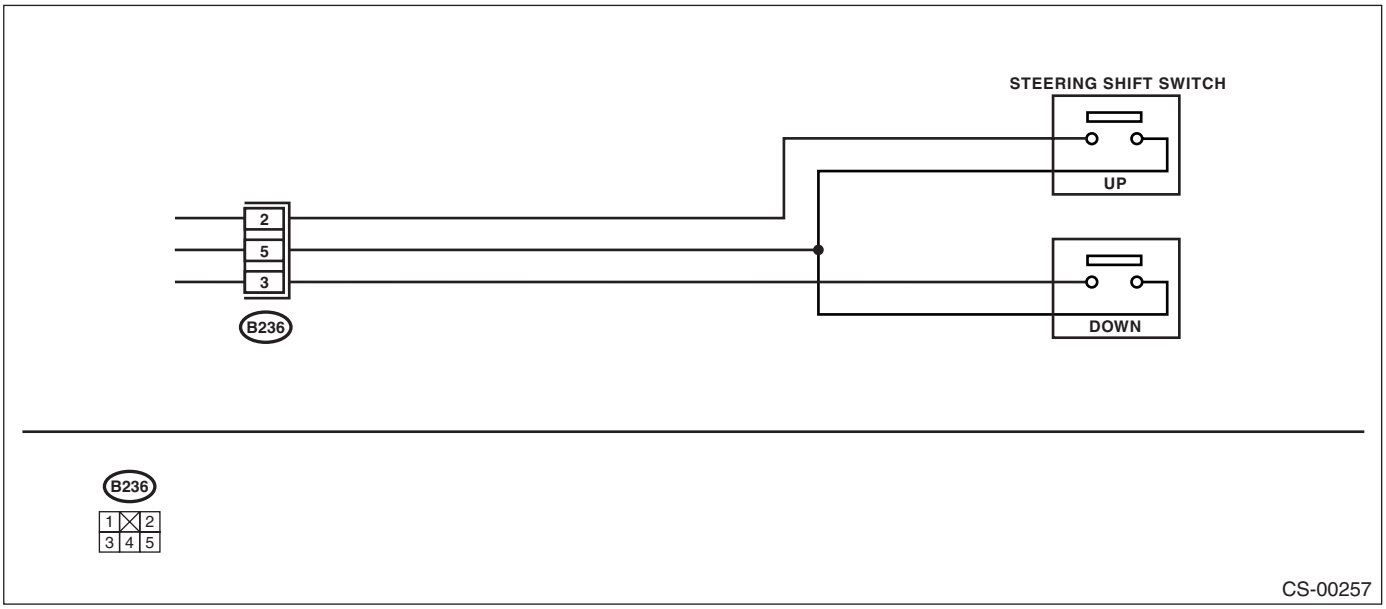

Step		Check	Yes	No
1	**CHECK CONTINUITY OF SHIFT-UP SWITCH.** 1)Press UPSHIFT of shift switch. 2)Measure the resistance between terminals of shift switch connector (B236). ***Connector & terminal*** ***(B236) No. 2 — No. 5:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the steering shift switch.
2	**CHECK CONTINUITY OF SHIFT-DOWN SWITCH.** 1)Press DOWNSHIFT of shift switch. 2) Measure the resistance between terminals of shift switch connector (B236). ***Connector & terminal*** ***(B236) No. 3 — No. 5:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the steering shift switch.
3	**CHECK DISCONTINUITY OF SHIFT SWITCH.** 1)Do not operate the shift switch. 2)Measure the resistance between terminals of shift switch connector (B236). ***Connector & terminal*** ***(B236) No. 2 — No. 5:*** ***(B236) No. 3 — No. 5:***	Is the resistance ∞ Ω?	Steering shift switch is normal.	Replace the steering shift switch.

5. MT Gear Shift Lever

A: REMOVAL

1. 5MT

1) Set the vehicle on a lift.
2) Disconnect the negative cable from battery.
3) Remove the gear shift knob.
4) Remove the console box. <Ref. to EI-42, REMOVAL, Console Box.>
5) Remove the drive select cable. (Dual-range model)
<Ref. to CS-38, REMOVAL, Drive Select Cable.>
6) Remove the plate assembly from body.

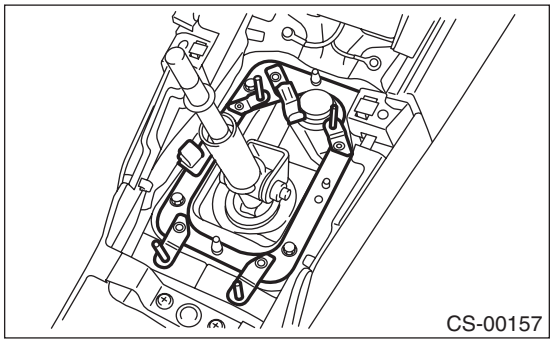
CS-00157

7) Lift-up the vehicle.
8) Remove the rear exhaust pipe and muffler.
SOHC model
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
DOHC turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
9) Remove the heat shield cover. (If equipped)

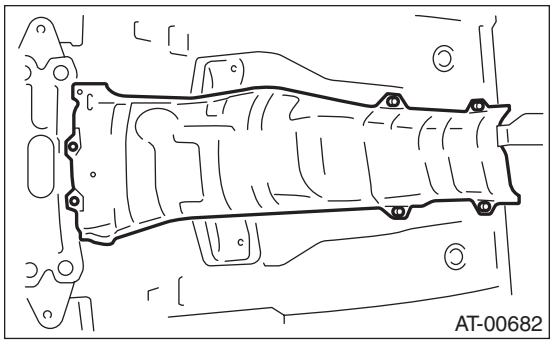
AT-00682

10) Remove the stay from transmission bracket.

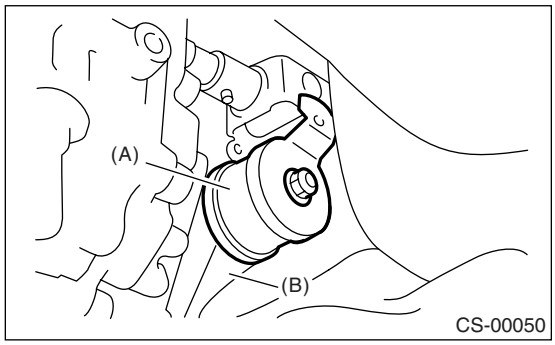

CS-00050

(A) Stay
(B) Transmission bracket

11) Remove the rod from joint.

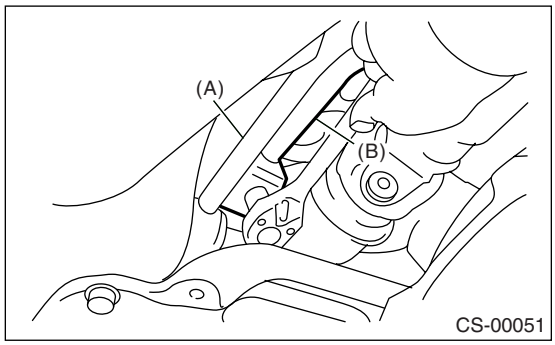

CS-00051

(A) Stay
(B) Rod

12) Remove the cushion rubber from body.

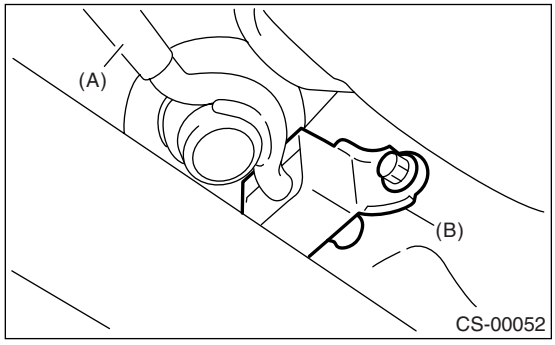

CS-00052

(A) Stay
(B) Cushion rubber

13) Remove the joint, and then extract the spring pin.

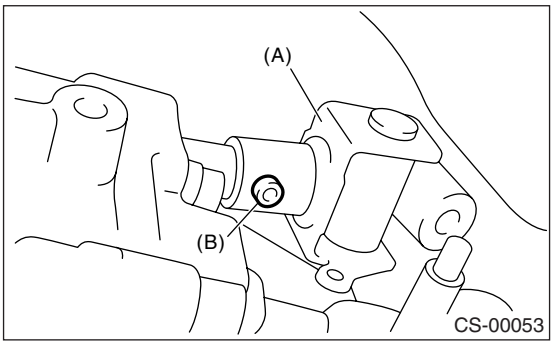

(A) Joint
(B) Spring pin

14) Lower the vehicle.
15) Remove the gear shift lever.

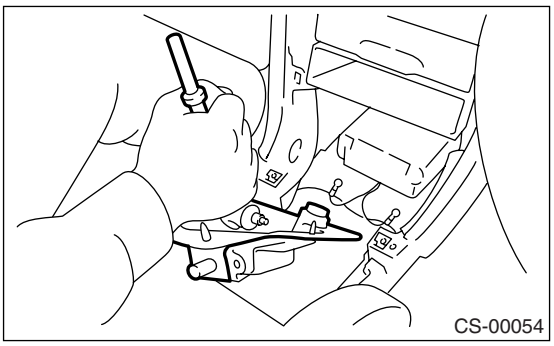

2. 6MT

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Remove the gear shift knob.
4) Remove the console box front. <Ref. to EI-42, REMOVAL, Console Box.>
5) Remove the boot plate from body.

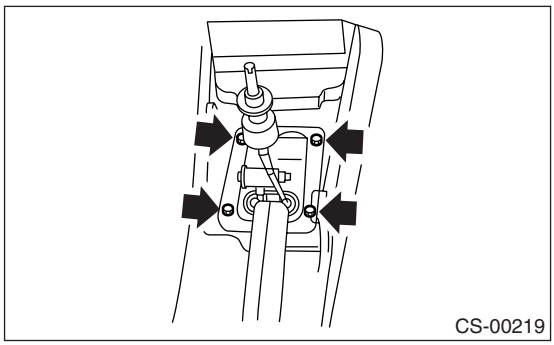

6) Lift-up the vehicle.
7) Remove the under cover.
8) Remove the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
9) Remove the crossmember. <Ref. to 6MT-35, REMOVAL, Transmission Mounting System.>
10) Remove the snap pin and washer, and then remove the reverse check cable from reverse check lever.

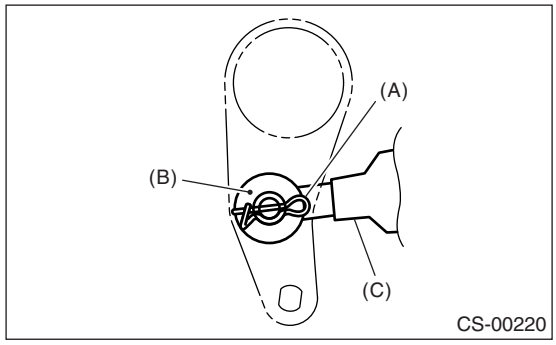

(A) Snap pin
(B) Washer
(C) Reverse check cable

11) Move the transmission to right side, and then remove the joint COMPL, stay bolt and reverse check cable.

NOTE:
If the transmission is not moved, the joint COMPL and stay bolt will contact body and damage may occur.

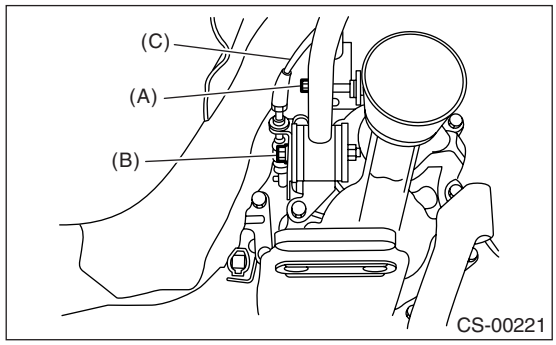

(A) Joint COMPL bolt
(B) Stay bolt
(C) Reverse check cable

12) Remove the cushion rubber from body.

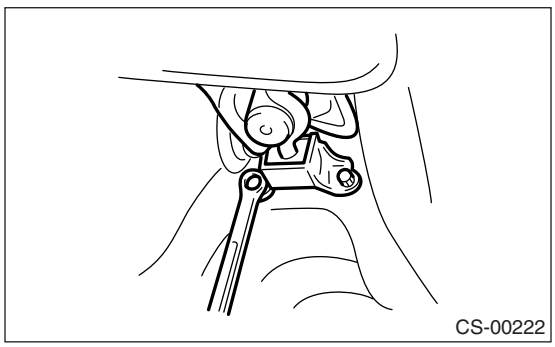

13) Lower the vehicle.
14) Remove the gear shift lever.

B: INSTALLATION

1. 5MT

1) Install the joint to the transmission and secure with the spring pin.
2) Insert gear shift lever from room side.

NOTE:
After inserting rod and stay, temporarily put them onto transmission mount.

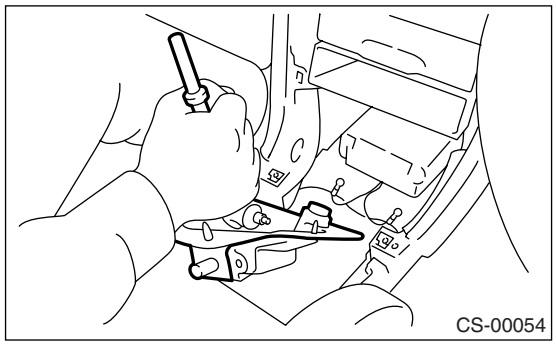

3) Lift-up the vehicle.
4) Mount the cushion rubber on body.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

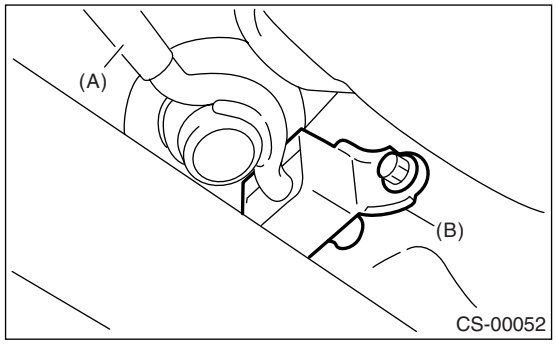

(A) Stay
(B) Cushion rubber

5) Connect the rod to the joint.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

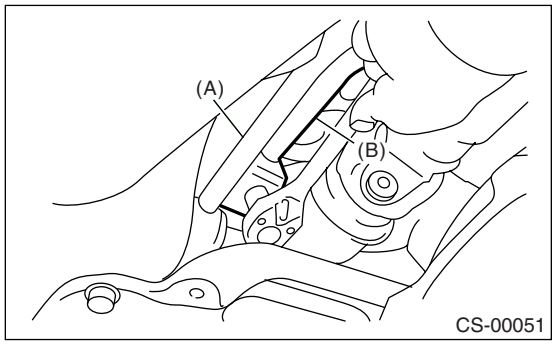

(A) Stay
(B) Rod

6) Connect the stay to transmission bracket.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

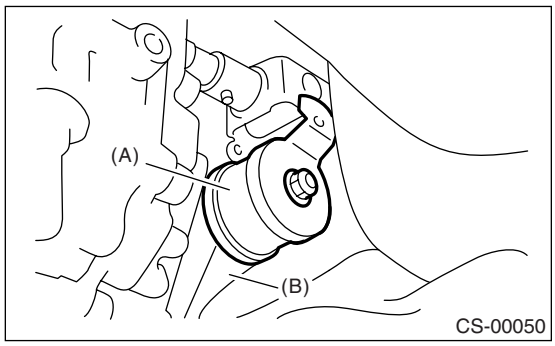

(A) Stay
(B) Transmission bracket

7) Install the heat shield cover. (If equipped)

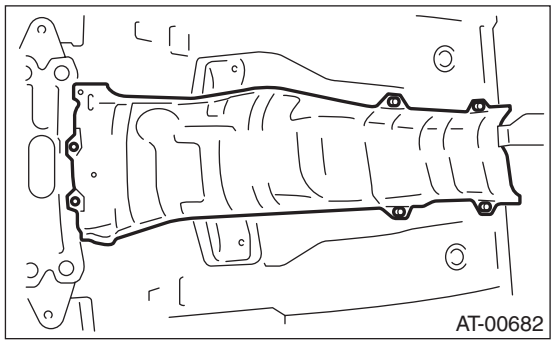

8) Install rear exhaust pipe and muffler.
SOHC model
<Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
SOHC without OBD model
<Ref. to EX(H4SOw/oOBD)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, INSTALLATION, Muffler.>
DOHC turbo model
<Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
9) Install the plate assembly to body.

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

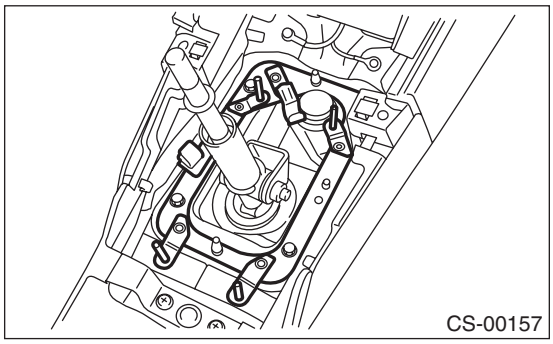
CS-00157

10) Install the drive select cable. (Dual-range model) <Ref. to CS-38, INSTALLATION, Drive Select Cable.>
11) Install console box. <Ref. to EI-42, INSTALLATION, Console Box.>

2. 6MT

1) Insert the gear shift lever from room side.

NOTE:
After inserting the rod and stay, temporarily put them onto transmission mount.

2) Mount the cushion rubber on body.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

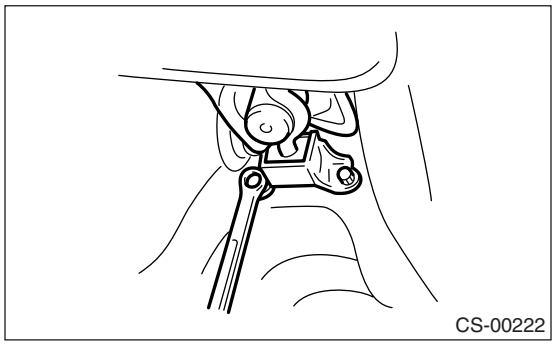
CS-00222

3) Move the transmission to right side, and then install the joint COMPL and stay.

Tightening torque:
T1: 11.8 N·m (1.2 kgf-m, 8.7 ft-lb)
T2: 32 N·m (3.3 kgf-m, 23.6 ft-lb)

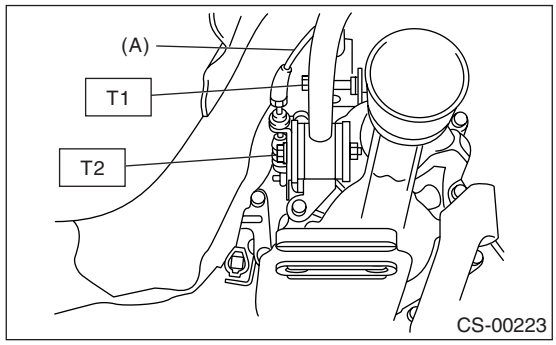

(A) Reverse check cable

4) Install the crossmember. <Ref. to 6MT-35, INSTALLATION, Transmission Mounting System.>
5) Install the reverse check cable end, washer and snap pin to reverse check lever.

NOTE:
• Take care to install the snap pin in proper direction.

• Conduct the adjustment of reverse check cable before installation. <Ref. to CS-34, ADJUSTMENT, Reverse Check Cable.>

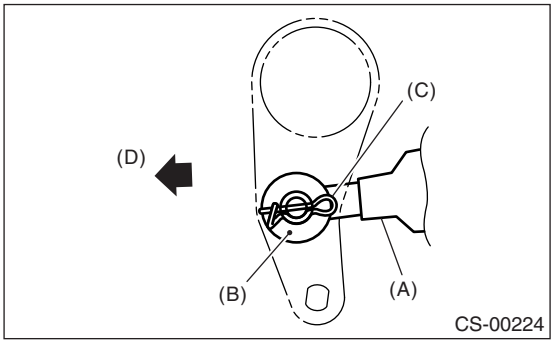

(A) Reverse check cable
(B) Washer
(C) Snap pin
(D) Front side

6) Install the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
7) Install the under cover.
8) Install the boot plate.

NOTE:
Install the inner boot without any twist.

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

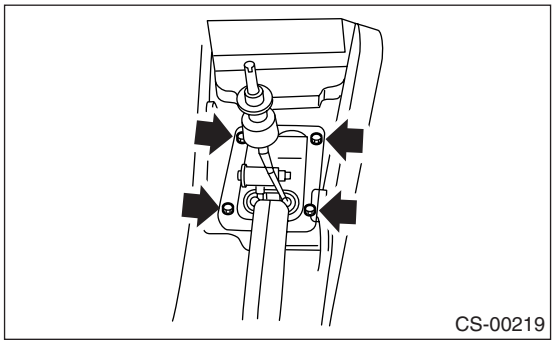

9) Install the console box. <Ref. to EI-42, INSTALLATION, Console Box.>
10) Check that the gear shift is correctly shifted to each gear.

C: DISASSEMBLY

1. 5MT

1) Disassemble the lock wire.

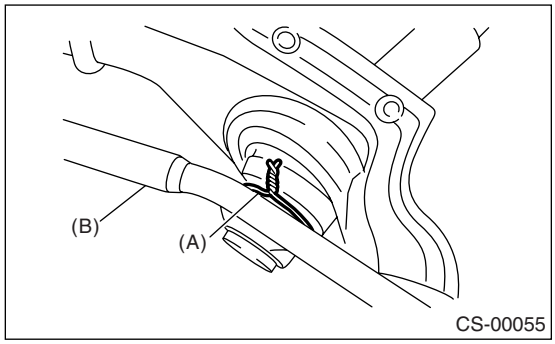

(A) Lock wire
(B) Stay

2) Remove the rod from lever.

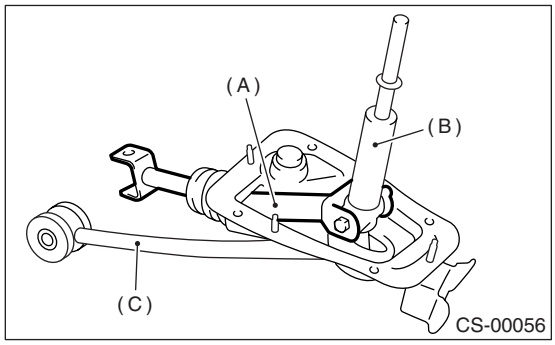

(A) Rod
(B) Lever
(C) Stay

3) Remove the snap ring from bushing B, and then disconnect the stay.

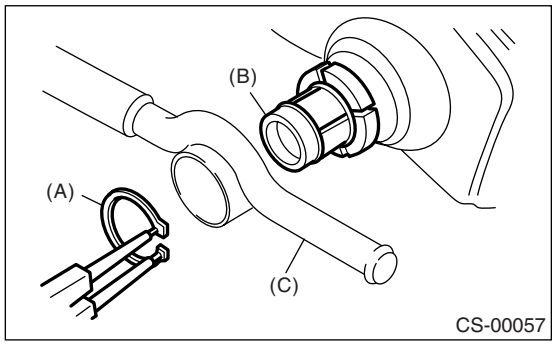

(A) Snap ring
(B) Bushing B
(C) Stay

4) Remove the boot from gear shift lever.

5) Remove the bushing and cushion rubber from stay.

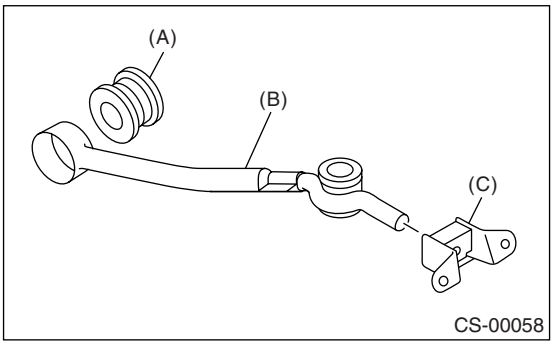

(A) Bushing
(B) Stay
(C) Cushion rubber

6) Remove O-ring, and then disconnect the bushing B.

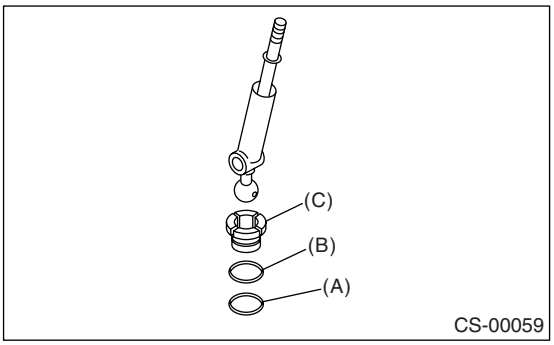

(A) O-ring
(B) O-ring
(C) Bushing B

7) Draw out the spring pin, and then remove the bushing A from gear shift lever.

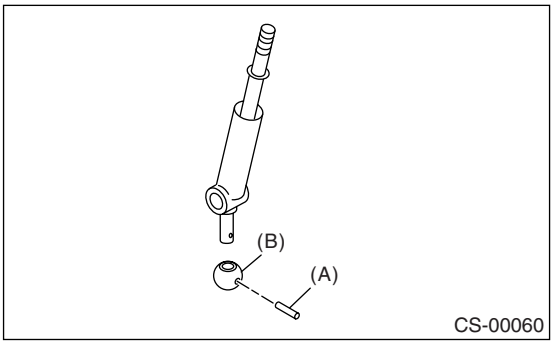

(A) Spring pin
(B) Bushing A

2. 6MT

1) Remove the spring pin from slider.

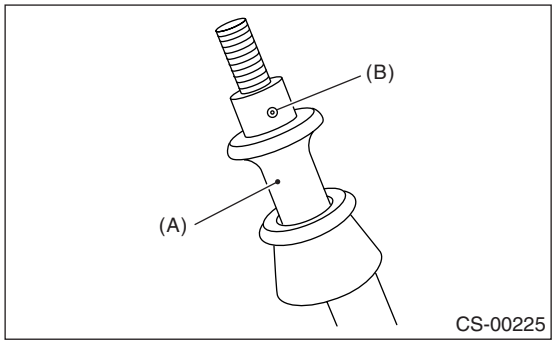

(A) Slider
(B) Spring pin

2) Remove the slider and spring.

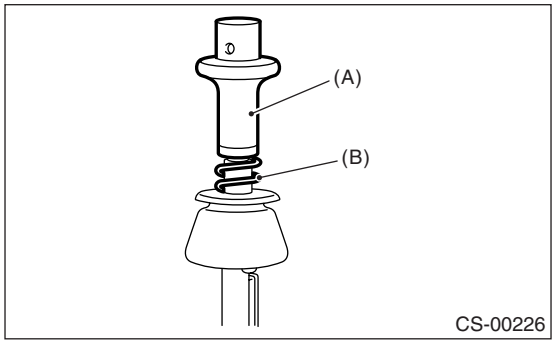

(A) Slider
(B) Spring

3) Cut the band clip.

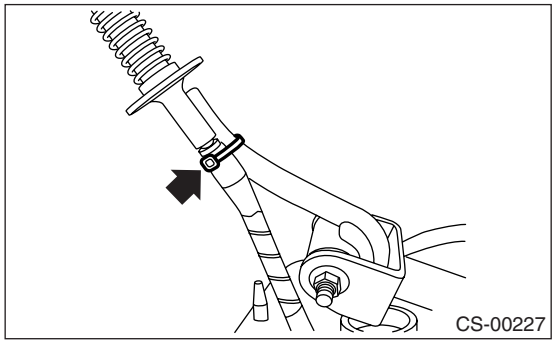

4) Remove the reverse check cable from cable plate.

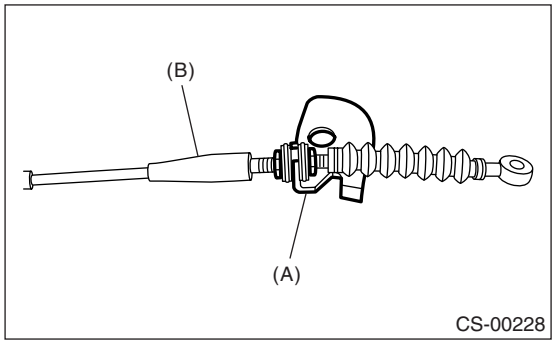

(A) Cable plate
(B) Reverse check cable

5) Remove the reverse check cable from gear shift assembly.

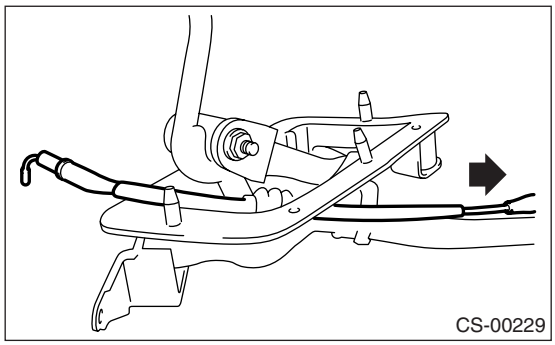

6) Remove the holder and spring seat.

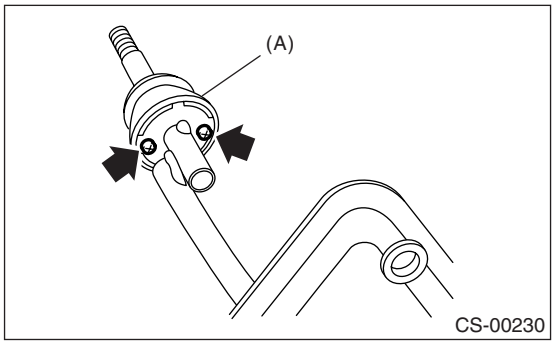

(A) Holder

7) Disassemble the lock wire.

NOTE:
Do not reuse the lock wire.

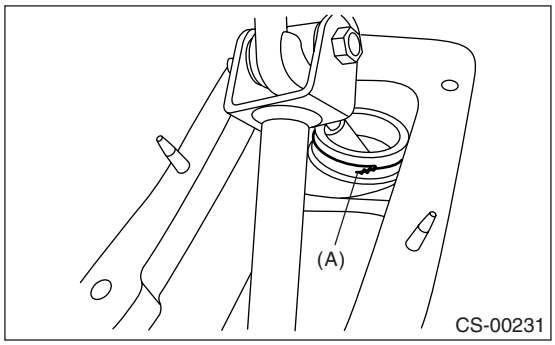

(A) Lock wire

8) Remove the boss from rod.

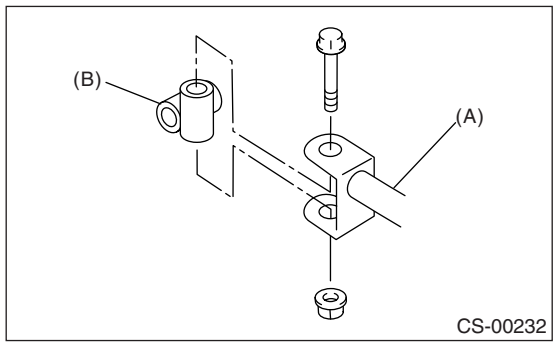

(A) Rod
(B) Boss

9) Remove the rod from lever.

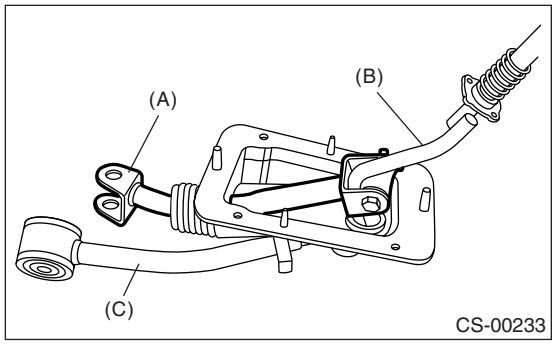

(A) Rod
(B) Lever
(C) Stay

10) Separate the rod and inner boot.

11) Remove the snap ring from stay.

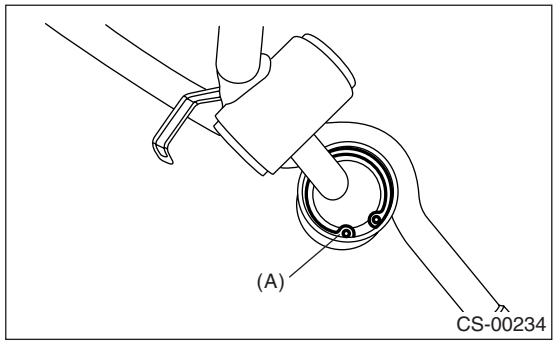

(A) Snap ring

12) Separate the gear shift lever and stay.

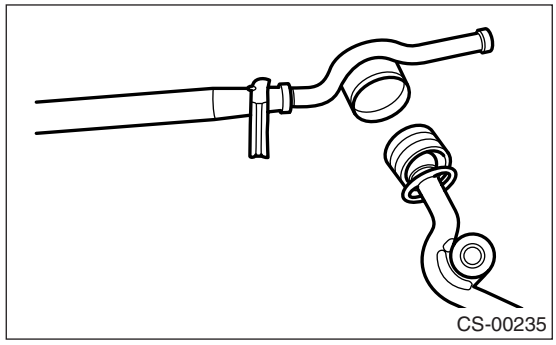

13) Remove the boot and bush from gear shift lever.

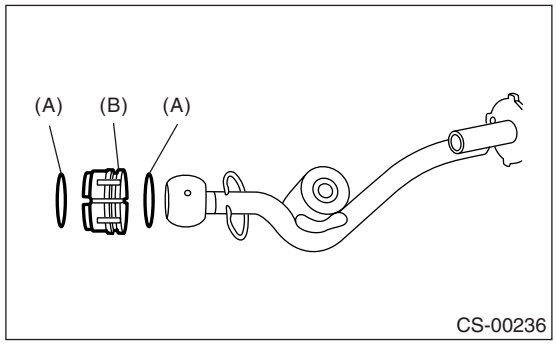

(A) O-ring
(B) Bush

14) Remove the spring pin, and then remove the bush and snap ring.

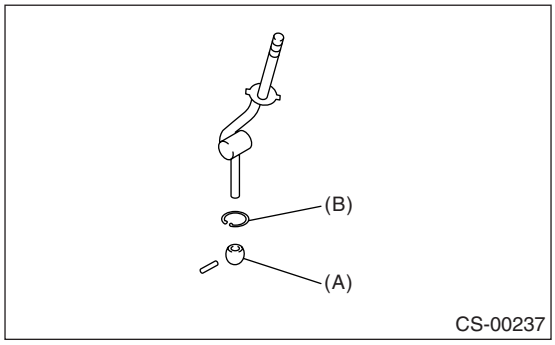

(A) Bush
(B) Snap ring

15) Remove the bush and spacer from boss.

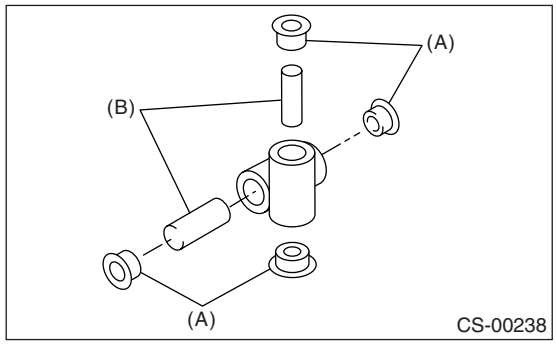

(A) Bush
(B) Spacer

16) Remove the bush and cushion rubber from stay.

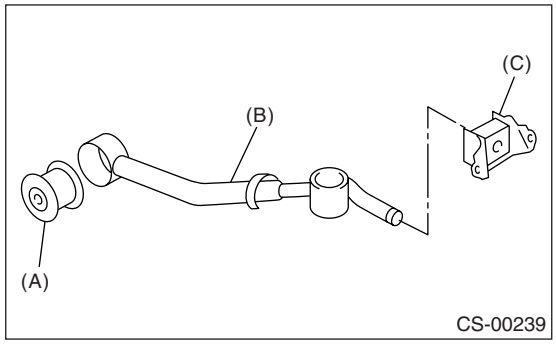

(A) Bush
(B) Stay
(C) Cushion rubber

D: ASSEMBLY

1. 5MT

1) Clean all parts before assembly.
2) Mount the bushing and cushion rubber on the stay.

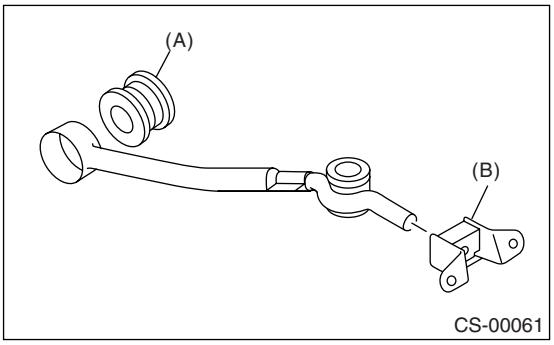

(A) Bushing
(B) Cushion rubber

3) Mount each part; boot, O-ring, bushing A, spacer, bushing B, bushing and spring pin on the gear shift lever.

NOTE:
• Always use new O-rings.
• Apply grease [KOPR-KOTE (Part No. 003603001) or equivalent] to the inner and side surfaces of the bushing when installing the spacer.

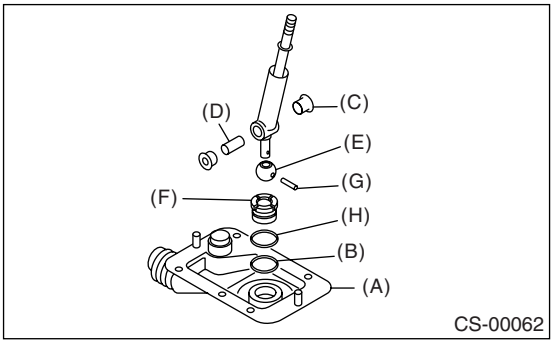

(A) Boot
(B) O-ring
(C) Bushing
(D) Spacer
(E) Bushing A
(F) Bushing B
(G) Spring pin
(H) O-ring

4) Insert the gear shift lever into the boot hole.

5) Install the snap ring and stay to bushing B.

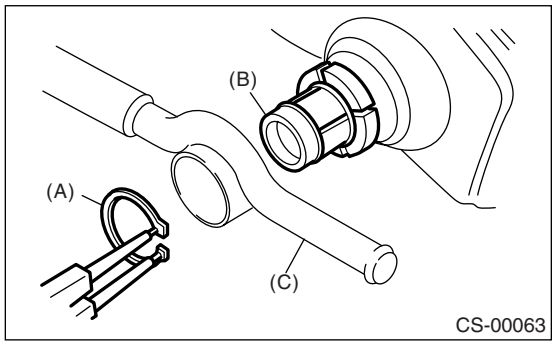

(A) Snap ring
(B) Bushing B
(C) Stay

6) Tighten with lock wire to the extent that the boot will not come off.

NOTE:
Always use new lock wire.

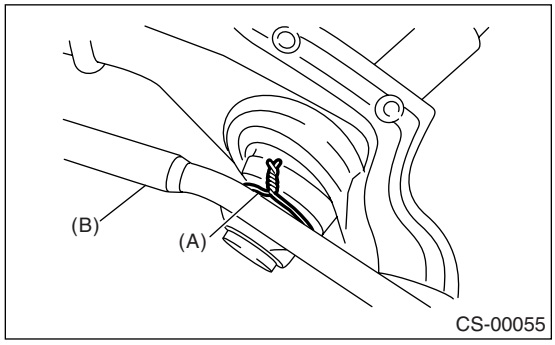

(A) Lock wire
(B) Stay

7) Insert the rod into the boot hole.
8) Connect rod to lever.

Tightening torque:
11.8 N·m (1.2 kgf-m, 8.7 ft-lb)

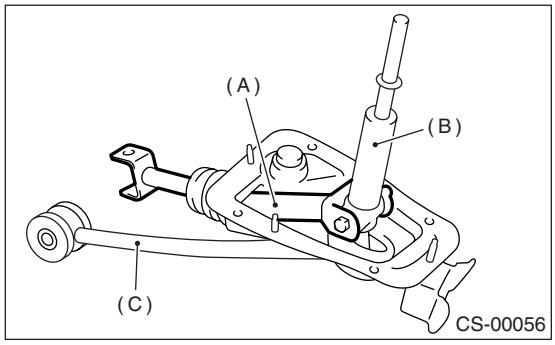

(A) Rod
(B) Lever
(C) Stay

9) Check the swing torque of rod in relation to the gear shift lever.
10) Check that there is no excessive play and that parts move smoothly.

2. 6MT

NOTE:
- Clean all parts before assembly.
- Apply NIGTIGHT LYW No.2 grease or equivalent to each parts.

1) Mount the bush and cushion rubber on the stay.

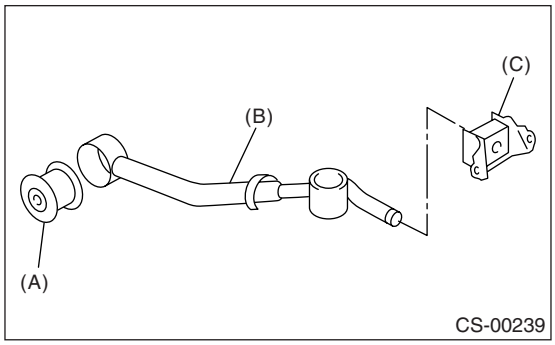

(A) Bush
(B) Stay
(C) Cushion rubber

2) Install the bush and spacer to boss.

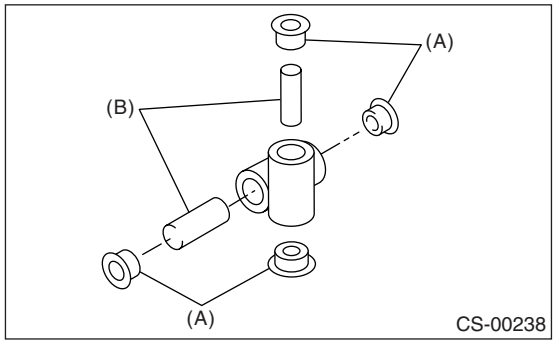

(A) Bush
(B) Spacer

3) Install the snap ring to gear shift lever, and then install the bush.

NOTE:
Apply grease to the bush.

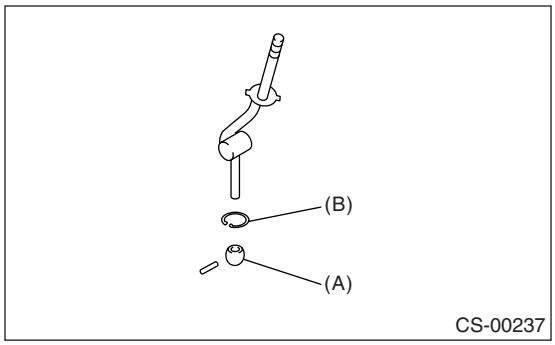

(A) Bush
(B) Snap ring

4) Apply grease to the bush and O-ring, and then install to the gear shift lever.

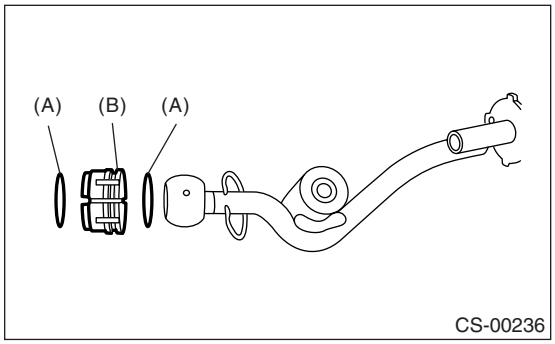

(A) O-ring
(B) Bush

5) Apply sufficient grease into the boss, and then install the gear shift lever to stay.

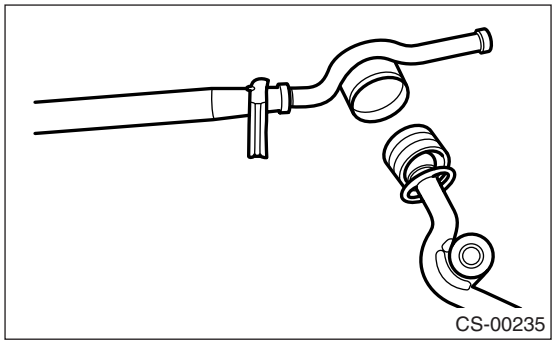

6) Install the washer and snap ring.

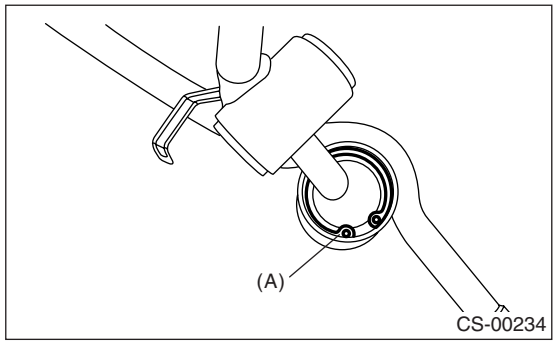

(A) Snap ring

7) Insert the gear shift lever and rod into boot hole.
8) Install the rod.

Tightening torque:
11.8 N·m (1.2 kgf-m, 8.7 ft-lb)

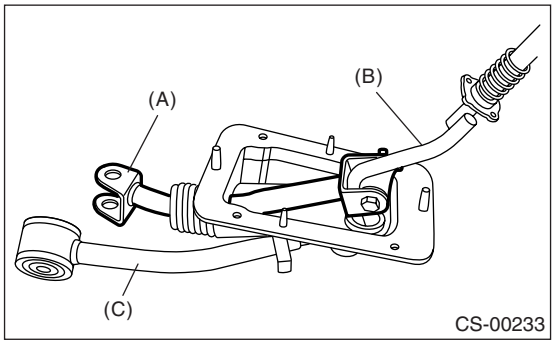

(A) Rod
(B) Lever
(C) Stay

9) Install the boss to rod.

Tightening torque:
11.8 N·m (1.2 kgf-m, 8.7 ft-lb)

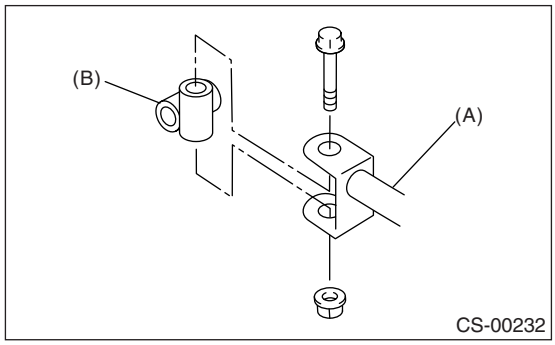

(A) Rod
(B) Boss

10) Install a new lock wire.

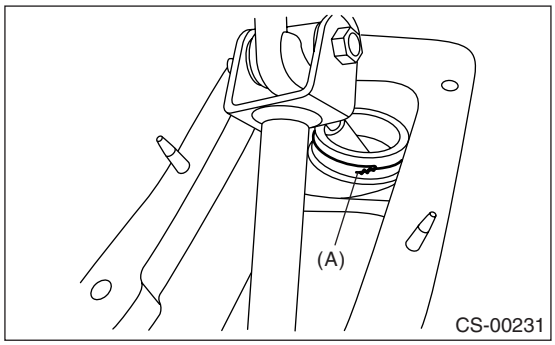

(A) Lock wire

NOTE:
- Install the lock wire to the stay groove.
- Bend the extra wire to same direction of lock wire winding.

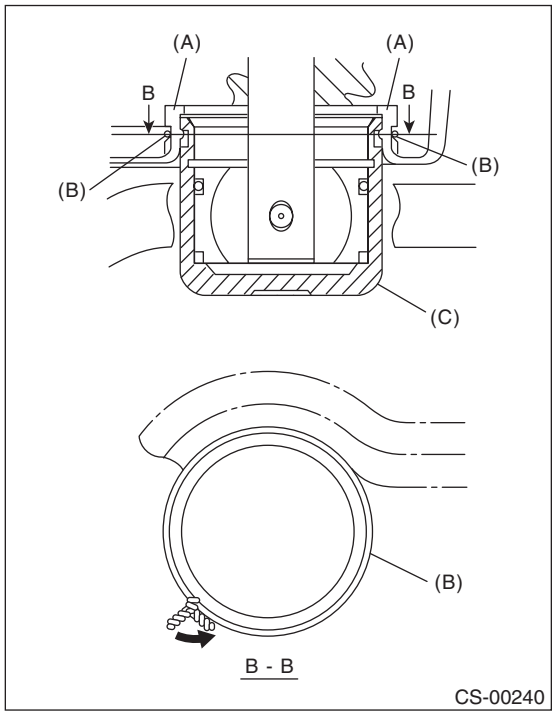

(A) Inner boot
(B) Lock wire
(C) Stay

11) Install the holder.

Tightening torque:
1.3 N·m (0.13 kgf-m, 0.96 ft-lb)

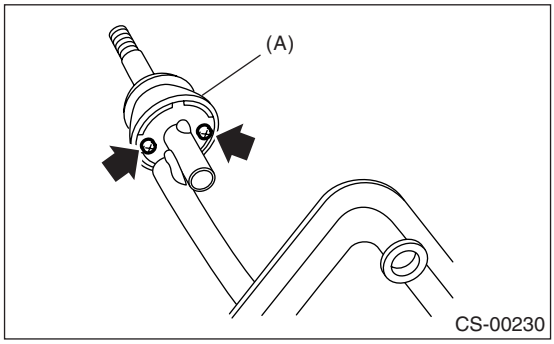

(A) Holder

12) Insert the reverse check cable into boot hole.
13) Insert the reverse check cable into gear shift assembly, and fix with band clip.

NOTE:
- Cut off the extra band clip.
- Make sure that the reverse check cable is inserted into gear shift lever assembly without any clearance.

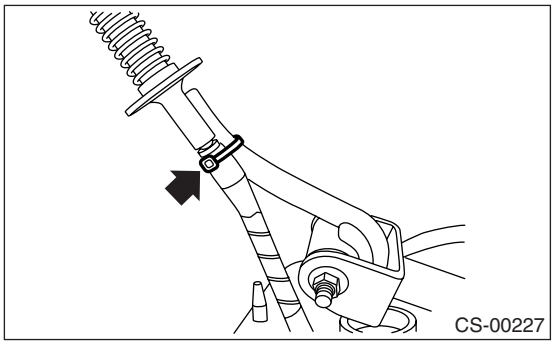

14) Install the seat cushion and spring.

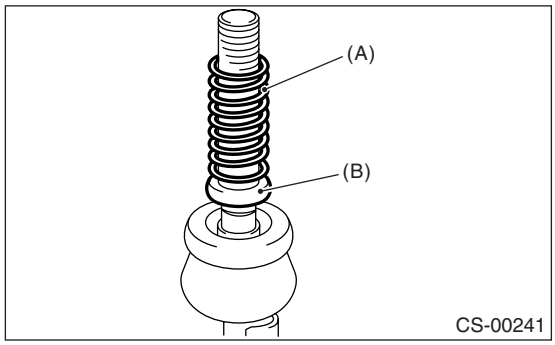

(A) Spring
(B) Seat cushion

15) Fix the slider and reverse check cable end with spring pin.

NOTE:
Apply grease to the sliding part of slider.

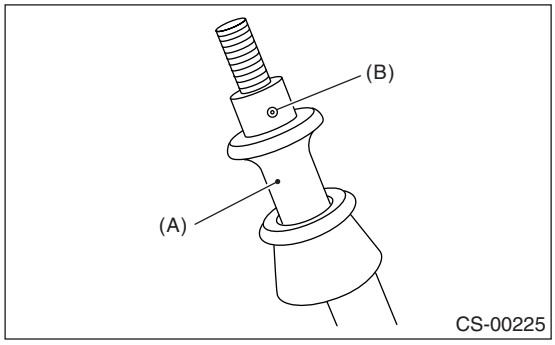

(A) Slider
(B) Spring pin

16) Adjust the length between end of cable plate and reverse check cable to 84 mm (3.31 in) with cable pulled (with slider lowered), and then tighten the lock nut.

Tightening torque:
6 N·m (0.6 kgf-m, 4.4 ft-lb)

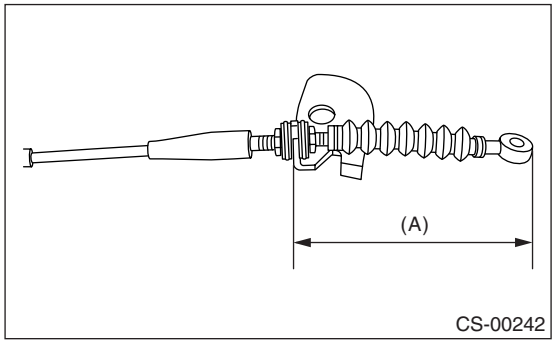

(A) 84 mm (3.31 in)

17) Fix the reverse check cable to clip of stay.

NOTE:
Install the reverse check cable to upper side of stay.

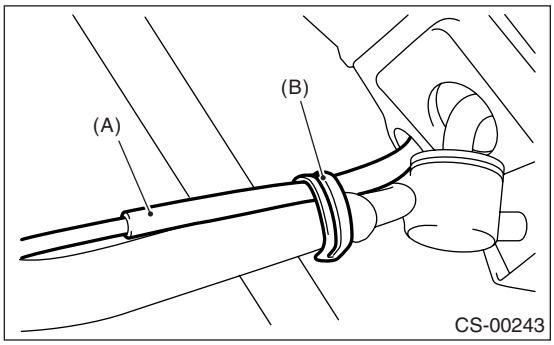

(A) Reverse check cable
(B) Clip

E: INSPECTION

1. 5MT

1) Check each part (bushing, cushion rubber, spacer, boot, stay and rod, etc.) for deformation, damage and wear. Repair or replace any defective part. Determine defective parts by comparing with new parts.

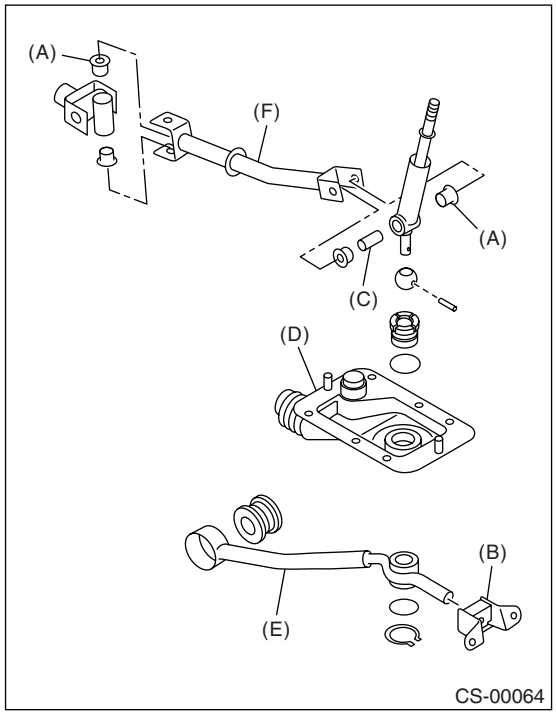

(A) Bushing
(B) Cushion rubber
(C) Spacer
(D) Boot
(E) Stay
(F) Rod

2) Check the swing torque of the rod in relation of the gear shift lever.
If the torque exceeds the specification, replace the bushing or retighten the nuts.

Swing torque:
3.7 N (0.38 kgf, 0.84 lb) or less

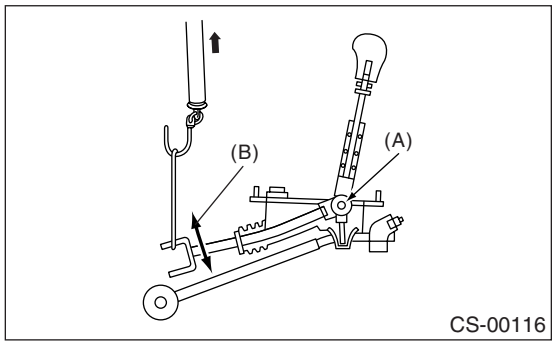

(A) Center of rotation
(B) Swing torque

2. 6MT

1) Check each part (bushing, cushion rubber, spacer, boot, stay and rod, etc.) for deformation, damage and wear. Repair or replace any defective part. Determine defective parts by comparing with new parts.

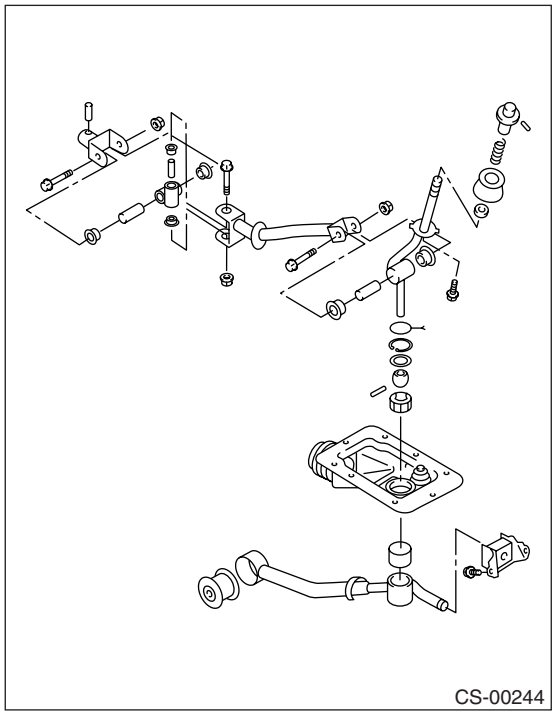

6. Reverse Check Cable

A: REMOVAL

1) Set the vehicle on a lift.
2) Remove the gear shift knob.
3) Remove the console box front. <Ref. to EI-42, REMOVAL, Console Box.>
4) Remove the spring pin from slider.

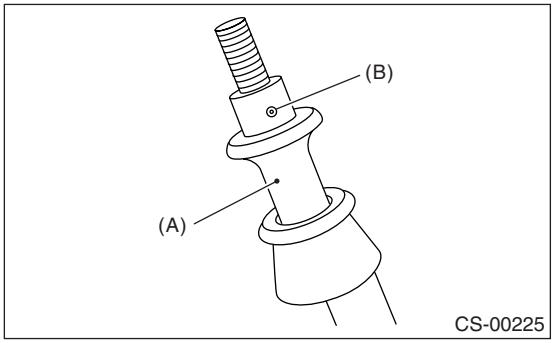

(A) Slider
(B) Spring pin

5) Remove the slider and spring.

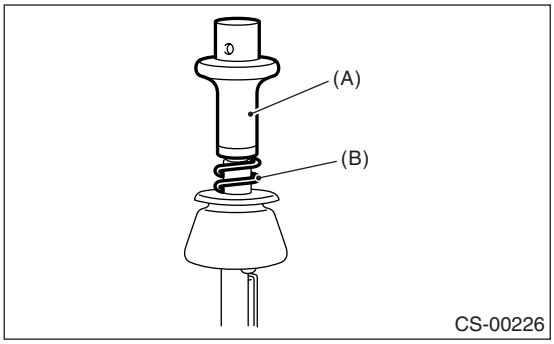

(A) Slider
(B) Spring

6) Cut the band clip, and then separate the reverse check cable from gear shift lever.

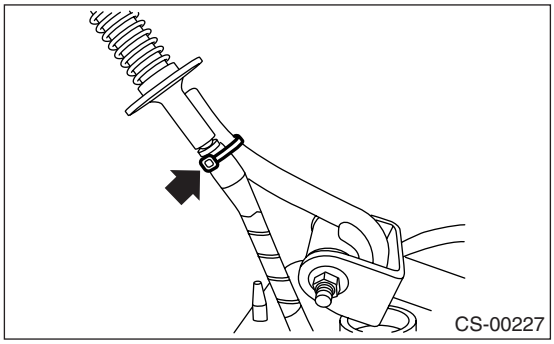

7) Lift-up the vehicle.
8) Remove the under cover.
9) Remove the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
10) Remove the crossmember. <Ref. to 6MT-35, REMOVAL, Transmission Mounting System.>
11) Remove the snap pin and washer, and then separate the reverse check cable from reverse check lever.

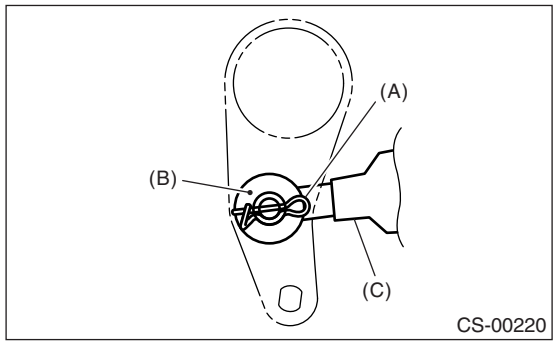

(A) Snap pin
(B) Washer
(C) Reverse check cable

12) Move the transmission to right side, and then remove the stay bolt and reverse check cable.

NOTE:
If the transmission is not moved, the stay bolt will contact body and damage may occur.

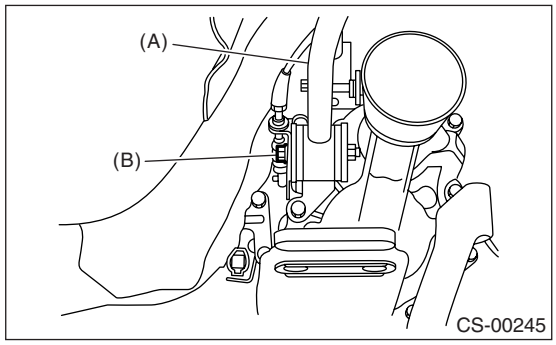

(A) Stay
(B) Stay bolt

13) Raise the clip of stay, and then separate the stay and reverse check cable.

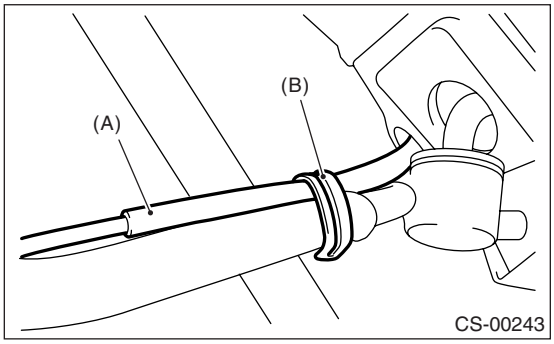

(A) Reverse check cable
(B) Clip

14) Remove the reverse check cable by pulling from underneath the vehicle.

NOTE:
Take care not to damage the inner boot.

15) Loosen the lock nut, then remove the reverse check cable from cable plate.

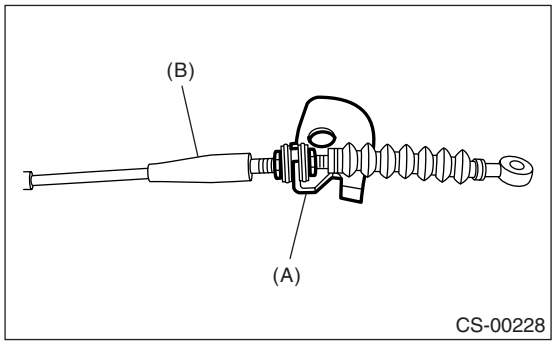

(A) Cable plate
(B) Reverse check cable

B: INSTALLATION

1) Insert the reverse check cable to the hole of inner boots from underneath the vehicle.
2) Insert the reverse check cable to the gear shift lever assembly, then fix with the band clip.

NOTE:
- Cut off the extra band clip.
- Make sure that the reverse check cable is inserted into gear shift lever assembly without any clearance.

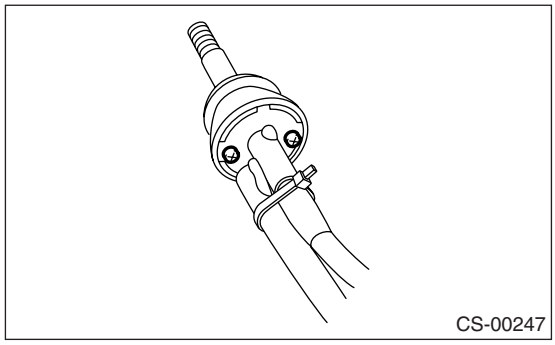

3) Fix the slider and reverse check cable end with spring pin.

NOTE:
Apply grease to the sliding part of slider.

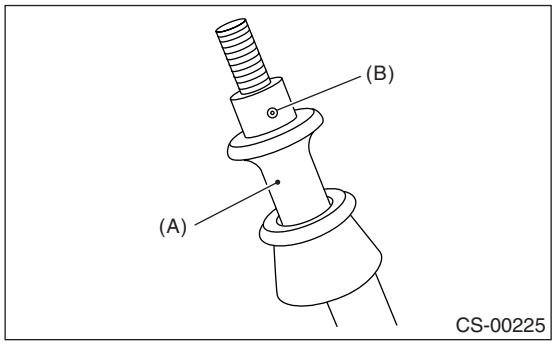

(A) Slider
(B) Spring pin

4) Lift-up the vehicle.

5) Adjust the length between end of cable plate and reverse check cable to 84 mm (3.31 in) with cable pulled (with slider lowered), and then tighten the lock nut.

Tightening torque:
6 N·m (0.6 kgf-m, 4.4 ft-lb)

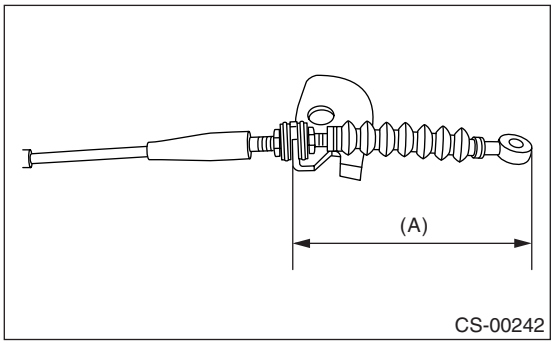

(A) 84 mm (3.31 in)

6) Move the transmission to right side, and then install the stay.

Tightening torque:
T: 32 N·m (3.3 kgf-m, 23.6 ft-lb)

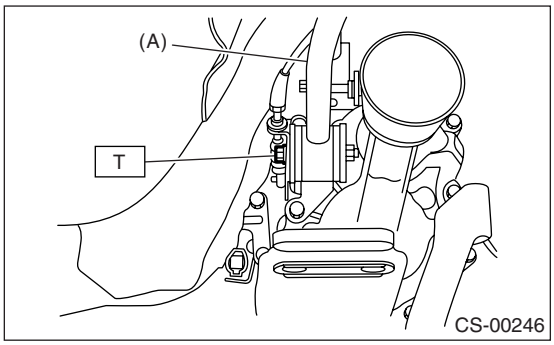

(A) Stay

7) Install the reverse check cable end, washer and snap pin to reverse check lever.

NOTE:
Take care to install the snap pin in proper direction.

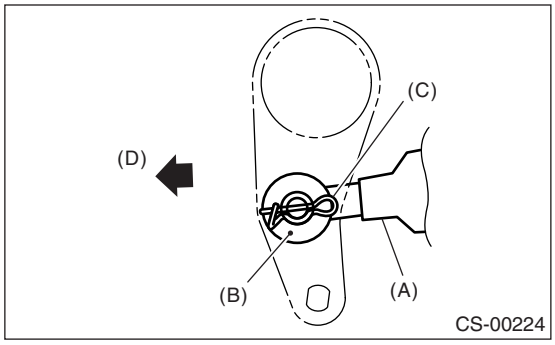

(A) Reverse check cable
(B) Washer
(C) Snap pin
(D) Front side

8) Fix the reverse check cable to clip of stay.

NOTE:
Install the reverse check cable to upper side of stay.

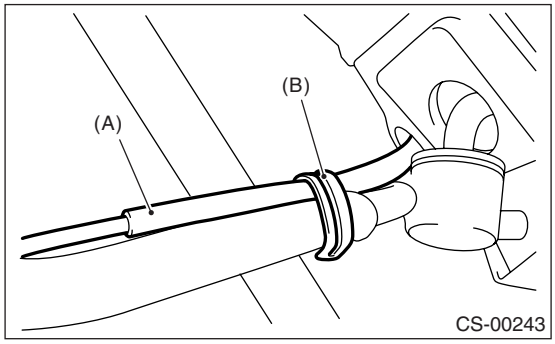

(A) Reverse check cable
(B) Clip

9) Install the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
10) Lower the vehicle.
11) Install the console box. <Ref. to EI-42, INSTALLATION, Console Box.>

C: INSPECTION

1) Verify whether the slider moves smoothly. If not, adjust the reverse check cable or check damage of slider. <Ref. to CS-34, ADJUSTMENT, Reverse Check Cable.>
2) Check that the gear can be shift to reverse, when the slider is pulled up. If the gear can not be shift to reverse, adjust the reverse check cable. <Ref. to CS-34, ADJUSTMENT, Reverse Check Cable.>
3) Check that the gear can not be shift to reverse, when the slider is not pulled up. If the gear can be shift to reverse, adjust or replace the reverse check cable. <Ref. to CS-34, ADJUSTMENT, Reverse Check Cable.>

D: ADJUSTMENT

1) Set the vehicle on a lift.
2) Remove the under cover.
3) Remove the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
4) Remove the crossmember. <Ref. to 6MT-35, REMOVAL, Transmission Mounting System.>
5) Remove the snap pin and washer, and then separate the reverse check cable from reverse check lever.

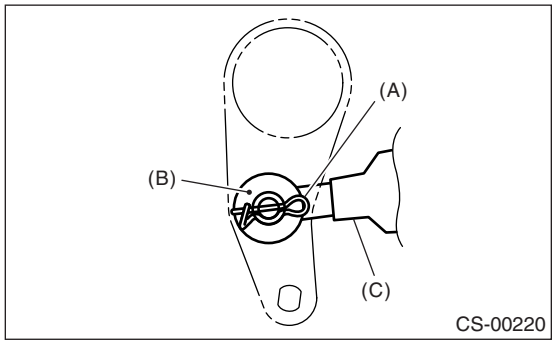

(A) Snap pin
(B) Washer
(C) Reverse check cable

6) Move the transmission to right side, and then remove the stay bolt and reverse check cable.

NOTE:
If the transmission is not moved, the stay bolt will contact body and damage may occur.

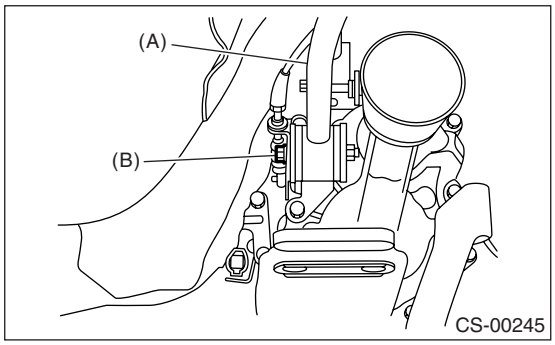

(A) Stay
(B) Stay bolt

7) Adjust the length between end of cable plate and reverse check cable to 84 mm (3.31 in) with cable pulled (with slider lowered), and then tighten the lock nut.

Tightening torque:
6 N·m (0.6 kgf-m, 4.4 ft-lb)

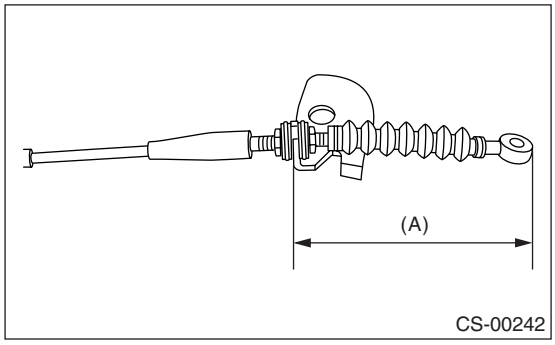

(A) 84 mm (3.31 in)

8) Move the transmission to right side, and then install the stay.

Tightening torque:
T: 32 N·m (3.3 kgf-m, 23.6 ft-lb)

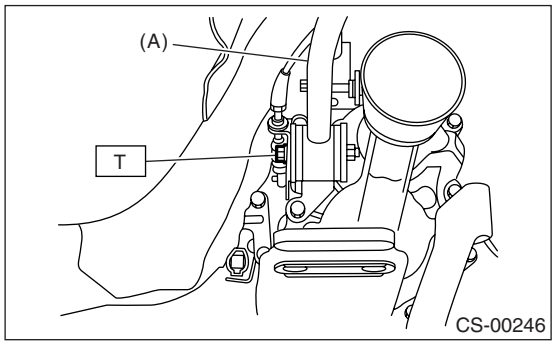

(A) Stay

9) Install the crossmember. <Ref. to 6MT-35, INSTALLATION, Transmission Mounting System.>
10) Install the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
11) Install the reverse check cable end, washer and snap pin to reverse check lever.

NOTE:
Take care to install the snap pin in proper direction.

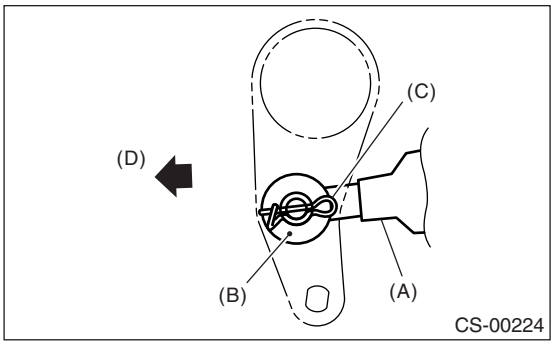

(A) Reverse check cable
(B) Washer
(C) Snap pin
(D) Front side

12) Install the under cover.

7. MT Drive Select Lever

A: REMOVAL

1) Set the drive select lever to HI position.
2) Remove the knob.

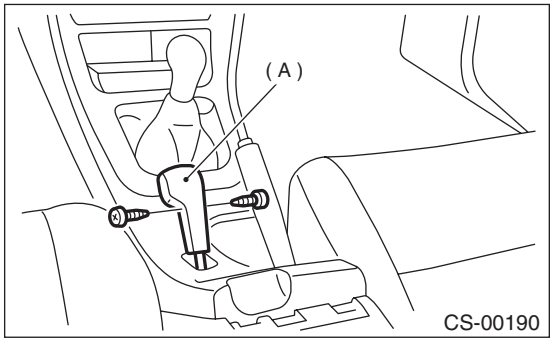

(A) Drive select lever knob

3) Remove the console box. <Ref. to EI-42, REMOVAL, Console Box.>
4) Remove the bolt installing drive select lever assembly on body.

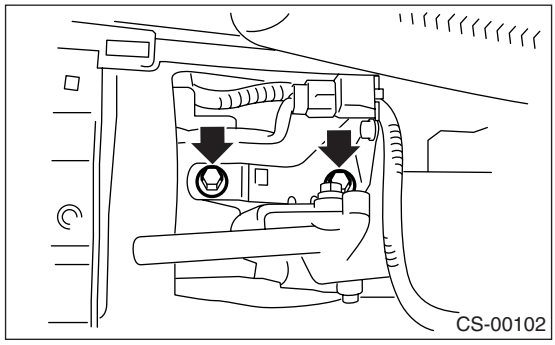

5) Remove the flange nut, clip and then disconnect the cable from lever assembly.

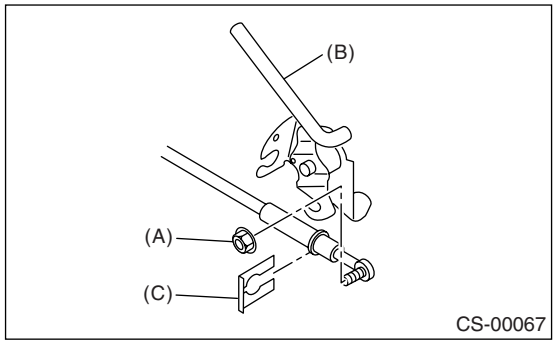

(A) Flange nut
(B) Lever ASSY
(C) Clip

B: INSTALLATION

1) Attach the drive select cable to the lever assembly and secure with the clamp.

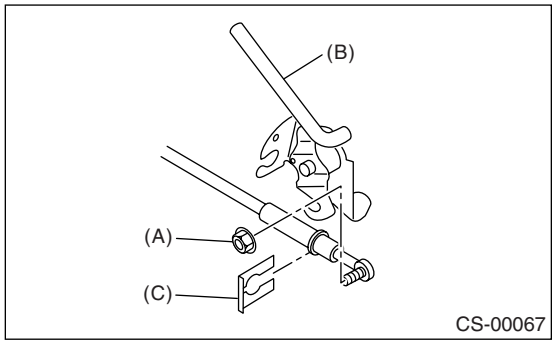

(A) Flange nut
(B) Lever ASSY
(C) Clip

2) Install the drive select lever.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

3) Set the drive select lever to HI position.

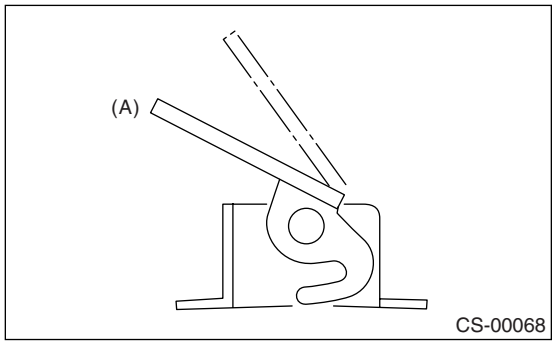

(A) HI position

4) Be sure to insert the cable end bolt into lever arm slit.

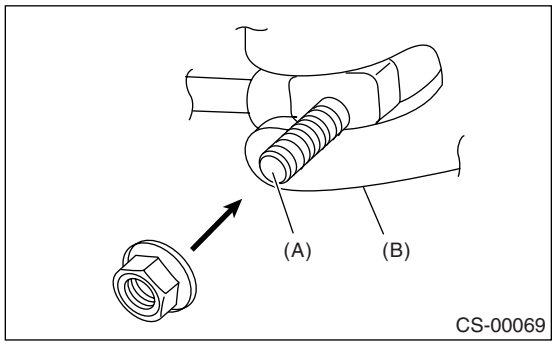

(A) Cable end bolt
(B) Lever arm

5) Tighten the nut where cable end bolt comes to a stop.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

6) Install in the reverse order of removal.

C: DISASSEMBLY

1) Remove the spring.

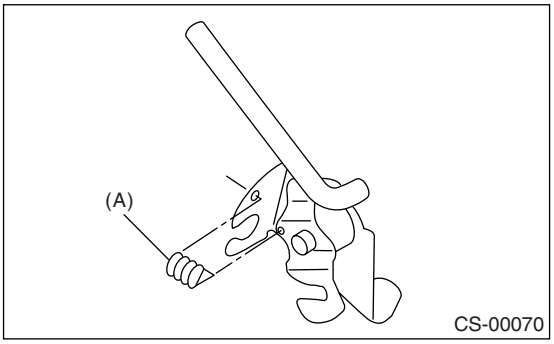

(A) Spring

2) Remove the lever, cap and bushing.

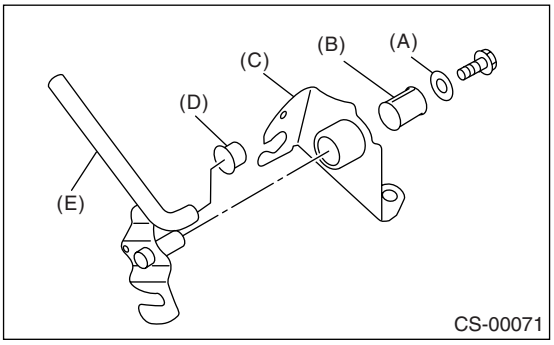

(A) Washer
(B) Bushing
(C) Plate ASSY
(D) Cushion
(E) Lever ASSY

D: ASSEMBLY

1) Assemble in the reverse order of disassembly.

Tightening torque:
1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

2) Make sure the select lever moves smoothly.

E: INSPECTION

1) Make sure the select lever moves smoothly. If it does not move smoothly, repair or replace it.
2) Make sure the drive select lever is not damaged. If it is damaged, repair or replace it.

8. Drive Select Cable

A: REMOVAL

1) Remove the drive select lever. <Ref. to CS-36, REMOVAL, MT Drive Select Lever.>
2) Remove the air cleaner case or air intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Remove the snap pin and clevis pin.

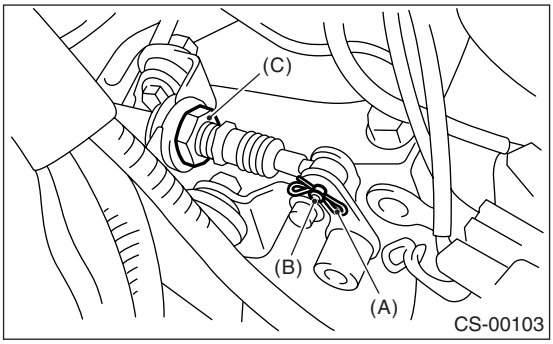

(A) Snap pin
(B) Clevis pin
(C) Nut

4) Loosen the nut, and then disconnect the cable from cable bracket.
5) Remove the cable from transmission clamp.
6) Remove the console box. <Ref. to EI-42, REMOVAL, Console Box.>
7) Remove cable from the under side of vehicle.

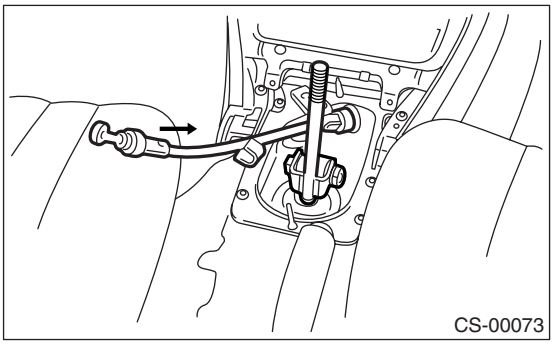

B: INSTALLATION

1) Install in the reverse order of removal.
2) Make sure the drive select lever operates properly.

C: INSPECTION

1) Make sure to move the transmission to HI or LO position by moving the drive select lever. If it doesn't, adjust the cable. <Ref. to CS-38, ADJUSTMENT, Drive Select Cable.>
2) Make sure the cable operates smoothly. If it catches or fails to work properly, repair or replace it.
3) Check the cable for damage.

D: ADJUSTMENT

1) Set the drive select lever to HI position.
2) Remove the knob.

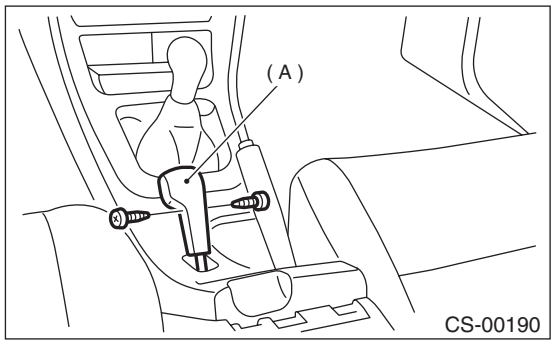

3) Remove the console box. <Ref. to EI-42, REMOVAL, Console Box.>
4) Loosen the nut.

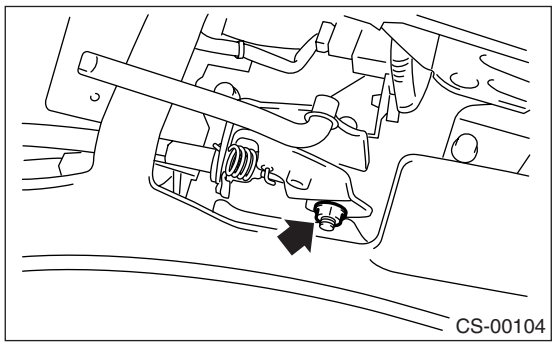

5) Make sure the transmission is in HI position. If isn't, pull on the cable to put transmission in HI position.
6) Tighten the nut in location where the cable end bolt stops naturally.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

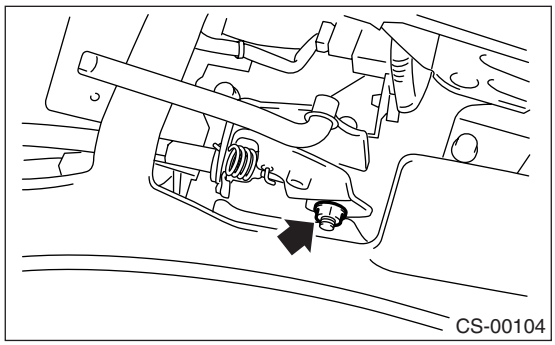

7) Make sure to move the transmission to HI or LO position by moving the drive select lever. If it doesn't, readjust cable.

9. General Diagnostic Table

A: INSPECTION

Symptom	Possible cause	Remedy
1. Select lever	Starter does not run.	Adjust select cable and inhibitor switch. Or inspect circuit.
	Back-up light does not light up.	Adjust select cable and inhibitor switch, or inspect circuit.
2. MT gear shift lever (6MT)	Shift into reverse is impossible.	Adjust reverse check cable.
	Shift into reverse is possible without pulling up slider.	Adjust or replace reverse check cable.
	Slider cannot be pulled up. Or slider is pulled up being stuck.	• Inspect reverse check system of transmission. • Adjust or replace reverse check cable.

AUTOMATIC TRANSMISSION

4AT

		Page
1.	General Description	2
2.	Automatic Transmission Fluid	31
3.	Differential Gear Oil	32
4.	Road Test	33
5.	Stall Test	34
6.	Time Lag Test	36
7.	Line Pressure Test	37
8.	Transfer Clutch Pressure Test	38
9.	Automatic Transmission Assembly	39
10.	Transmission Mounting System	45
11.	Extension Case Oil Seal	47
12.	Inhibitor Switch	48
13.	Front Vehicle Speed Sensor	52
14.	Rear Vehicle Speed Sensor	56
15.	Torque Converter Turbine Speed Sensor	57
16.	Control Valve Body	58
17.	Shift Solenoids, Duty Solenoids and ATF Temperature Sensor	64
18.	Transfer Duty Solenoid and Valve Body	66
19.	ATF Filter	69
20.	Transmission Control Module (TCM)	70
21.	ATF Cooler Pipe and Hose	71
22.	Air Breather Hose	73
23.	Oil Charger Pipe	74
24.	Torque Converter Clutch Assembly	75
25.	Transmission Cover	76
26.	Extension Case	77
27.	Transfer Clutch	81
28.	Multi-plate Clutch	87
29.	Rear Drive Shaft	88
30.	Reduction Driven Gear	90
31.	Reduction Drive Gear	93
32.	Center Differential Carrier	95
33.	Parking Pawl	97
34.	Torque Converter Clutch Case	98
35.	Oil Pump Housing	100
36.	Drive Pinion Shaft	106
37.	Front Differential	112
38.	AT Transmission Main Case	118
39.	Transmission Control Device	136

1. General Description

A: SPECIFICATIONS

1. TORQUE CONVERTER CLUTCH

Model	1.6 L	2.0 L Non-turbo	2.5 L	2.0 L Turbo
Type	Symmetric, 3 element, single stage, 2 phase torque converter			
Stall torque ratio	2.2 — 2.4	2.0 — 2.2	1.85 — 2.15	2.05 — 2.35
Nominal diameter	236 mm (9.29 in)		246 mm (9.69 in)	
Stall speed (at sea level)	2,400 — 3,000 rpm	2,200 — 2,700 rpm	2,100 — 2,600 rpm	2,900 — 3,500 rpm
One-way clutch	Sprague type one-way clutch			

2. OIL PUMP

Type	Pracoid constant-displacement pump	
Driving method	Driven by engine	
Number of teeth	Inner rotor	9
	Outer rotor	10

3. TRANSMISSION CONTROL ELEMENT

Type	4-forward, 1-reverse, double-row planetary gears
Multi-plate clutch	3 sets
Multi-plate brake	2 sets
One-way clutch (sprague type)	1 sets

4. TRANSMISSION GEAR RATIO

	Gear ratio
1st	2.785
2nd	1.545
3rd	1.000
4th	0.694
Rev	2.272

5. PLANETARY GEAR AND PLATE

Model	1.6 L	2.0 L Non-turbo	2.5 L	2.0 L Turbo
Tooth number of front sun gear	33			
Tooth number of front pinion	21			
Tooth number of front internal gear	75			
Tooth number of rear sun gear	42			
Tooth number of rear pinion	17			
Tooth number of rear internal gear	75			
Drive & driven plate number of high clutch	3	4		5
Drive & driven plate number of low clutch	4		6	7
Drive & driven plate number of reverse clutch	1	2		
Drive & driven plate number of 2-4 brake	2	3		4
Drive & driven plate number of low & reverse brake	4		6	7

6. SELECTOR POSITION

P (Park)	Transmission in neutral, output member immovable, and engine start possible
R (Reverse)	Transmission in reverse for backing
N (Neutral)	Transmission in neutral and engine start possible
D (Drive)	Automatic gear change 1st ←→ 2nd ←→ 3rd ←→ 4th
3 (3rd)	Automatic gear change 1st ←→ 2nd ←→ 3rd ← 4th
2 (2nd)	Automatic gear change 1st ←→ 2nd ← 3rd ← 4th
1 (1st)	1st gear locked (Deceleration possible 1st ← 2nd ← 3rd ← 4th)
Control method	Hydraulic remote control

7. HYDRAULIC CONTROL AND LUBRICATION

Type		Electronic/hydraulic control [Four forward speed changes by electrical signals of vehicle speed and accelerator (throttle) opening]
Fluid		Dexron III type
Fluid capacity	1.6 L FWD model	8.0 — 8.3 ℓ (8.5 — 8.8 US qt, 7.0 — 7.3 Imp qt)
	1.6 L AWD and 2.0 L Non-turbo model	8.4 — 8.7 ℓ (8.9 — 9.2 US qt, 7.4 — 7.7 Imp qt)
	2.5 L and 2.0 L Turbo model	9.3 — 9.6 ℓ (9.8 — 10.1 US qt, 8.2 — 8.4 Imp qt)
Lubrication system		Forced feed lubrication with oil pump
Oil		Automatic transmission fluid (above mentioned)

8. COOLING AND HARNESS

Cooling system	Liquid-cooled cooler incorporated in radiator
Inhibitor switch	12 poles
Transmission harness	20 poles

9. TRANSFER

Model	1.6 L and 2.0 L Non-turbo	2.5 L	2.0 L Turbo
Transfer type	Multi-plate transfer (MPT)		Variable torque distribution (VTD)
Drive & driven plate number of transfer clutch	4	5	3
Control method	Electronic, hydraulic type		
Lubricant	The same Automatic transmission fluid used in automatic transmission		
1st reduction gear ratio	1.000 (53/53)		

10.FINAL REDUCTION

Model	EXCEPT 1.6 L	1.6 L
Front final gear ratio	4.111 (37/9)	4.444 (40/9)
Lubrication oil	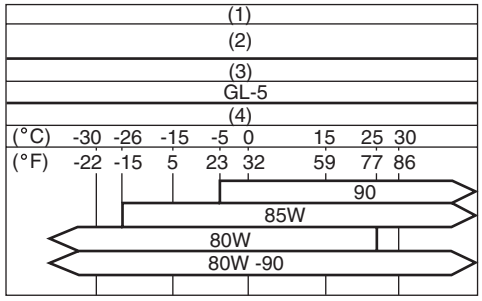 AT-00001 (1) Item (2) Front differential gear oil (3) API classification (4) SAE viscosity No. and applicable temperature	
Front differential oil capacity	1.1 — 1.3 ℓ (1.2 — 1.4 US qt, 1.0 — 1.1 Imp qt)	

B: COMPONENT

1. TORQUE CONVERTER CLUTCH AND CASE

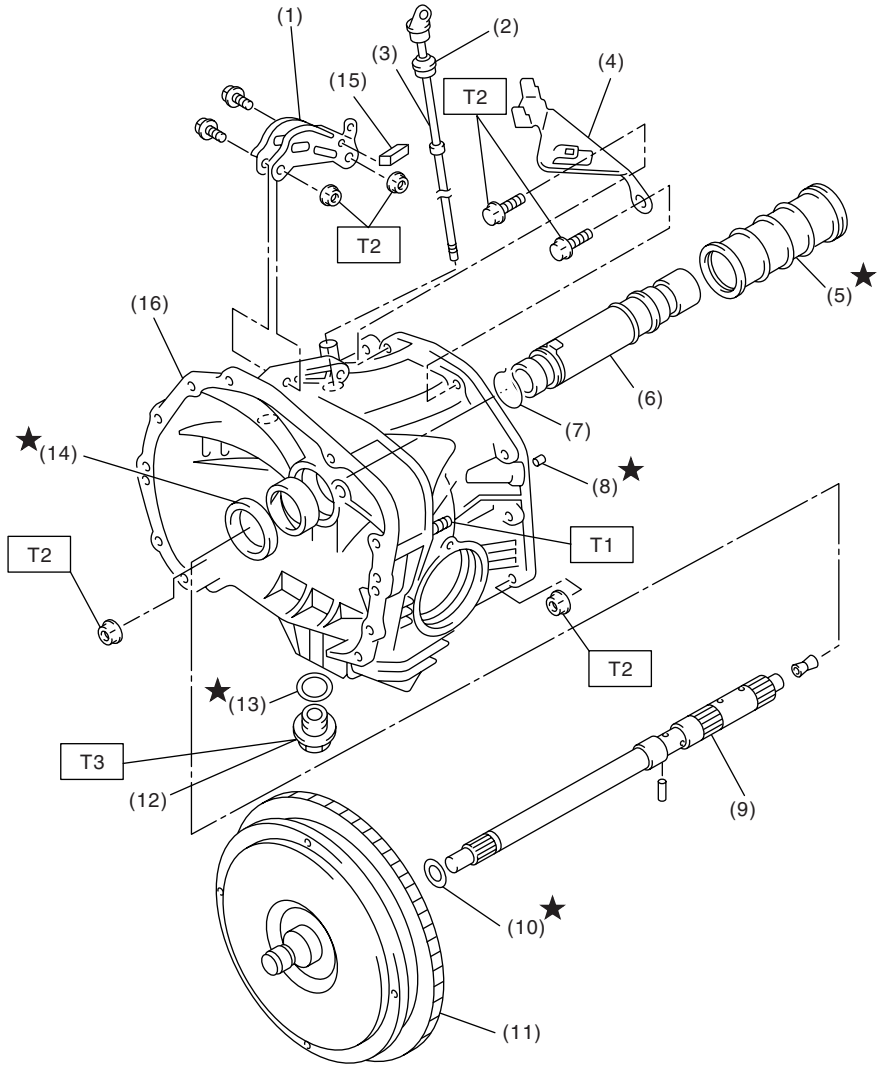

(1)	Pitching stopper bracket	(8)	Oil drain pipe	(15)	Clip (Turbo model)
(2)	O-ring	(9)	Input shaft	(16)	Torque converter clutch case
(3)	Differential oil level gauge	(10)	O-ring		
(4)	Stay	(11)	Torque converter clutch ASSY	***Tightening torque: N·m (kgf-m, ft-lb)***	
(5)	Seal pipe	(12)	Drain plug	***T1:***	***18 (1.8, 13.0)***
(6)	Oil pump shaft	(13)	Gasket	***T2:***	***41 (4.2, 30.4)***
(7)	Clip	(14)	Oil seal	***T3:***	***44 (4.5, 32.5)***

2. OIL PUMP

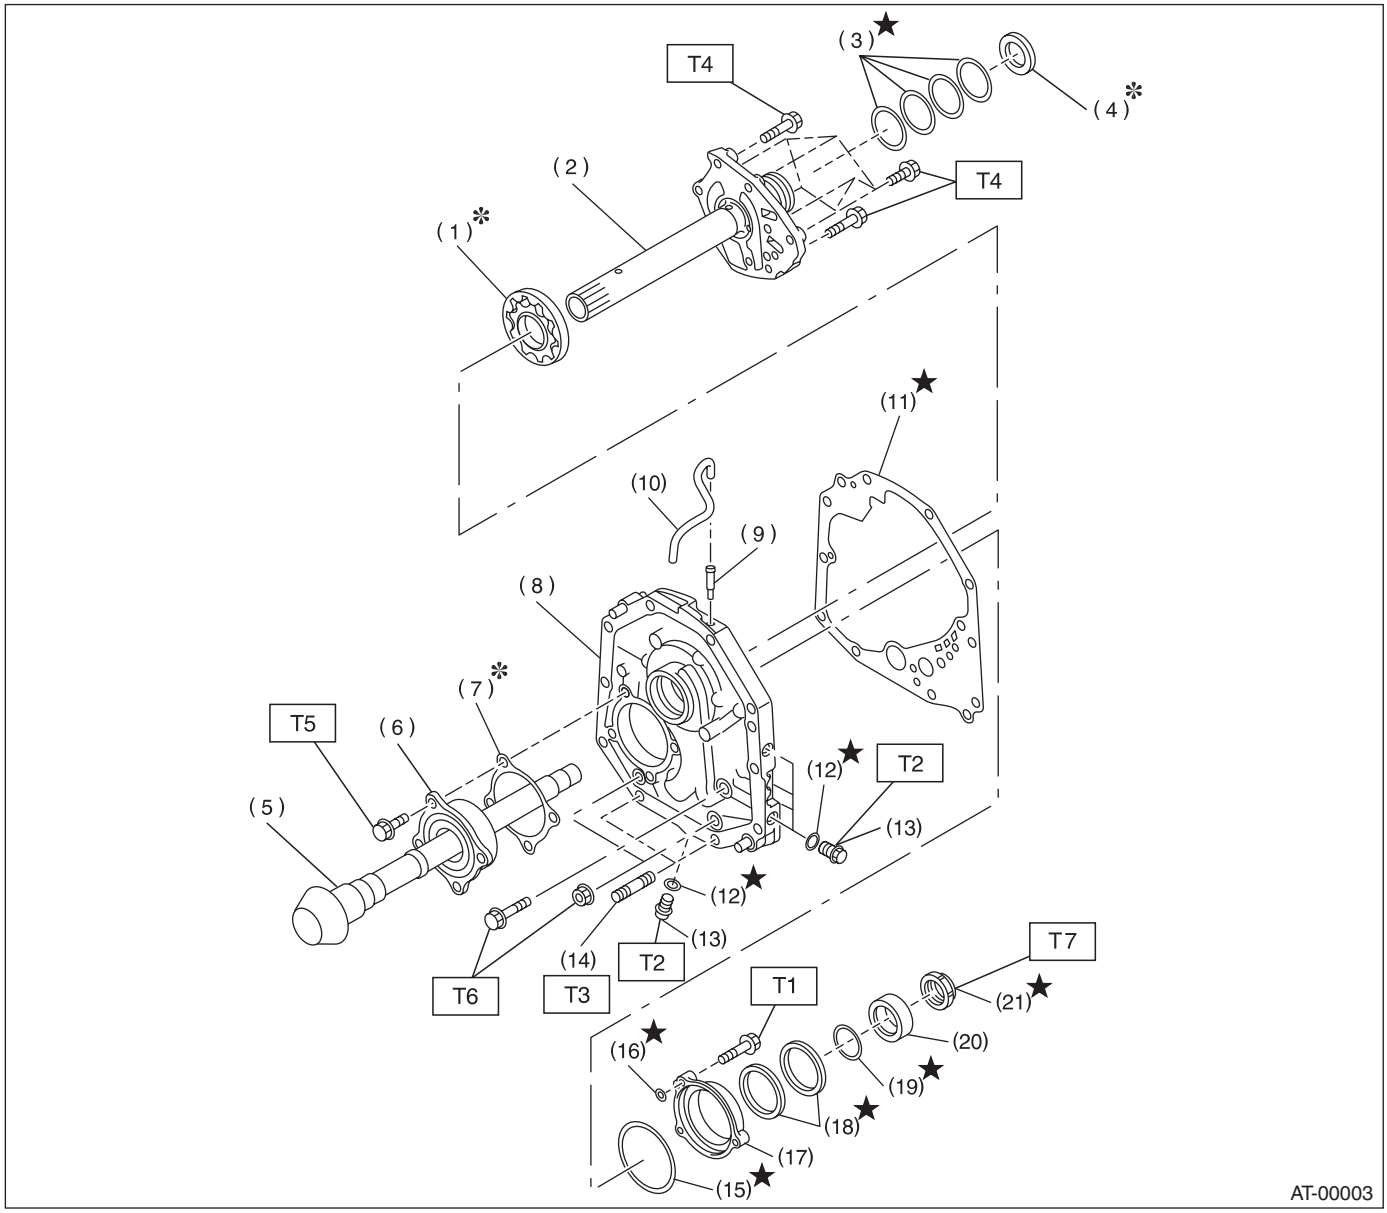

(1) Oil pump rotor
(2) Oil pump cover
(3) Seal ring
(4) Thrust needle bearing
(5) Drive pinion shaft
(6) Roller bearing
(7) Shim
(8) Oil pump housing
(9) Nipple
(10) Air breather hose
(11) Gasket
(12) O-ring
(13) Test plug
(14) Stud bolt
(15) O-ring
(16) O-ring
(17) Oil seal retainer
(18) Oil seal
(19) O-ring
(20) Drive pinion collar
(21) Lock nut

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7 (0.7, 5.1)
T2: 13 (1.3, 9.4)
T3: 18 (1.8, 13.0)
T4: 25 (2.5, 18.1)
T5: 40 (4.1, 30)
T6: 42 (4.3, 31)
T7: 116 (11.8, 85)

3. TRANSMISSION CASE AND CONTROL DEVICE

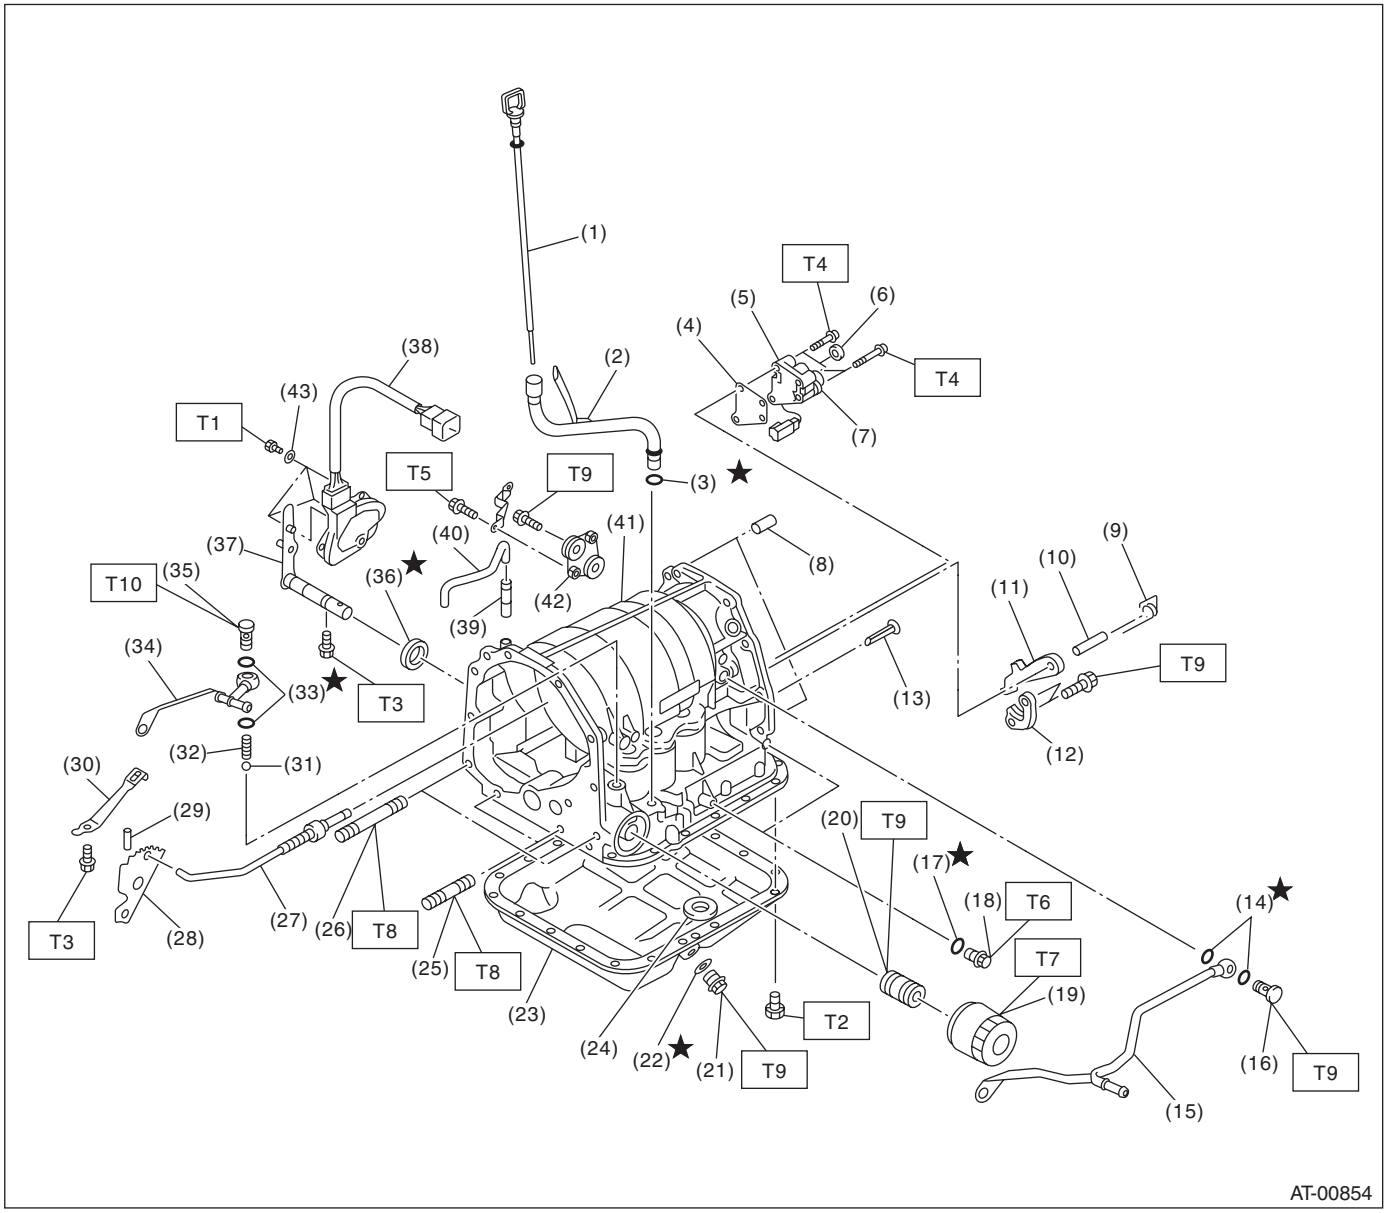

(1) ATF level gauge
(2) ATF charger pipe
(3) O-ring
(4) Transfer valve plate
(5) Transfer valve ASSY
(6) Transfer clutch seal
(7) Transfer duty solenoid
(8) Straight pin
(9) Return spring
(10) Shaft
(11) Parking pawl
(12) Parking support
(13) Inlet filter
(14) Gasket
(15) Inlet pipe
(16) Union screw
(17) O-ring
(18) Test plug
(19) Oil filter (Except for turbo model)
(20) Oil filter stud bolt
(21) Drain plug
(22) Gasket
(23) Oil pan
(24) Magnet
(25) Stud bolt (Short)
(26) Stud bolt (Long)
(27) Parking rod
(28) Manual plate
(29) Spring pin
(30) Detention spring
(31) Ball
(32) Spring
(33) Gasket
(34) Outlet pipe
(35) Union screw
(36) Oil seal
(37) Select lever
(38) Inhibitor switch ASSY
(39) Nipple
(40) Air breather hose
(41) Transmission case
(42) Plate ASSY
(43) Washer

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	***3.5 (0.36, 2.6)***
T2:	***5 (0.5, 3.6)***
T3:	***6 (0.6, 4)***
T4:	***8 (0.8, 6)***
T5:	***12 (1.2, 8.7)***
T6:	***13 (1.3, 10)***
T7:	***14 (1.4, 10)***
T8:	***18 (1.8, 13)***
T9:	***25 (2.6, 18)***
T10:	***45 (4.6, 33)***

4. CONTROL VALVE AND HARNESS ROUTING

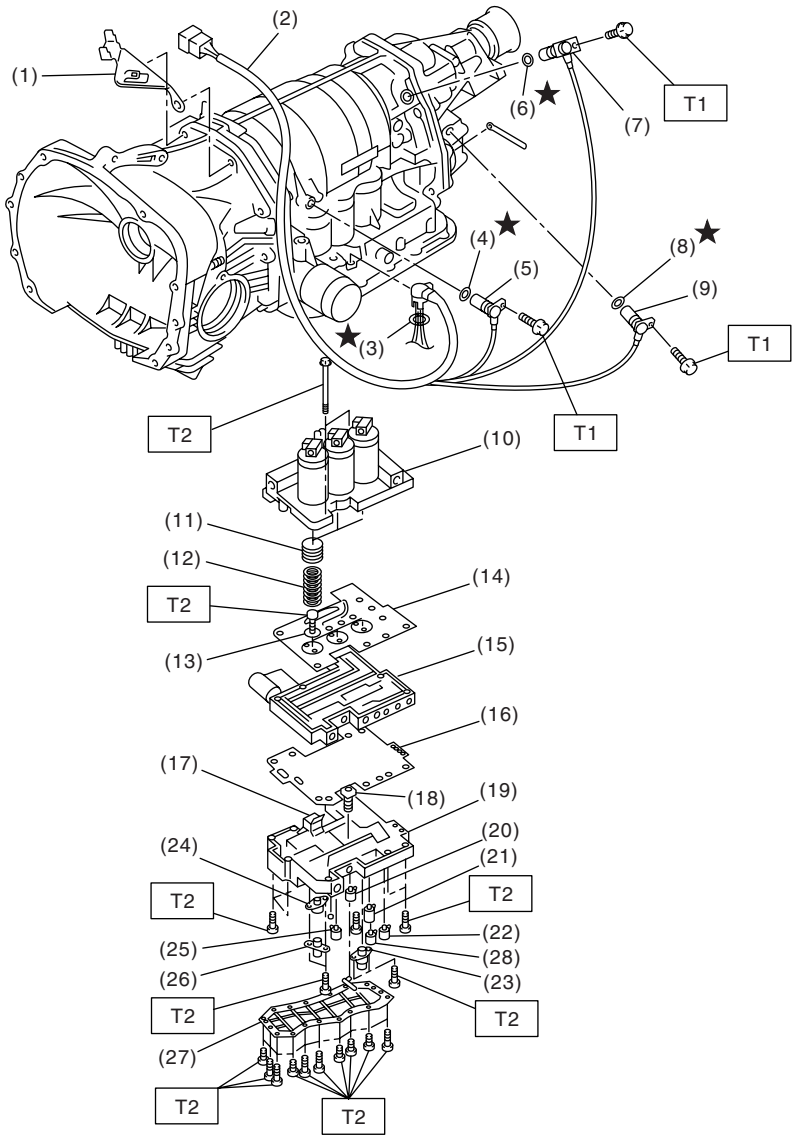

(1) Stay
(2) Transmission harness
(3) O-ring
(4) O-ring
(5) Torque converter turbine speed sensor
(6) O-ring
(7) Front vehicle speed sensor
(8) O-ring
(9) Rear vehicle speed sensor
(10) Upper valve body
(11) Accumulator piston
(12) Accumulator spring
(13) Side plate
(14) Separate plate
(15) Middle valve body
(16) Separate plate
(17) Fluid filter
(18) Fluid filter
(19) Lower valve body
(20) Shift solenoid 2
(21) Shift solenoid 1
(22) 2-4 brake timing solenoid
(23) 2-4 brake duty solenoid
(24) Line pressure duty solenoid
(25) Low clutch timing solenoid
(26) Lock-up duty solenoid
(27) Oil strainer
(28) SPORT shift solenoid (if equipped)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7 (0.7, 5.1)
T2: 8 (0.8, 5.8)

5. HIGH CLUTCH AND REVERSE CLUTCH

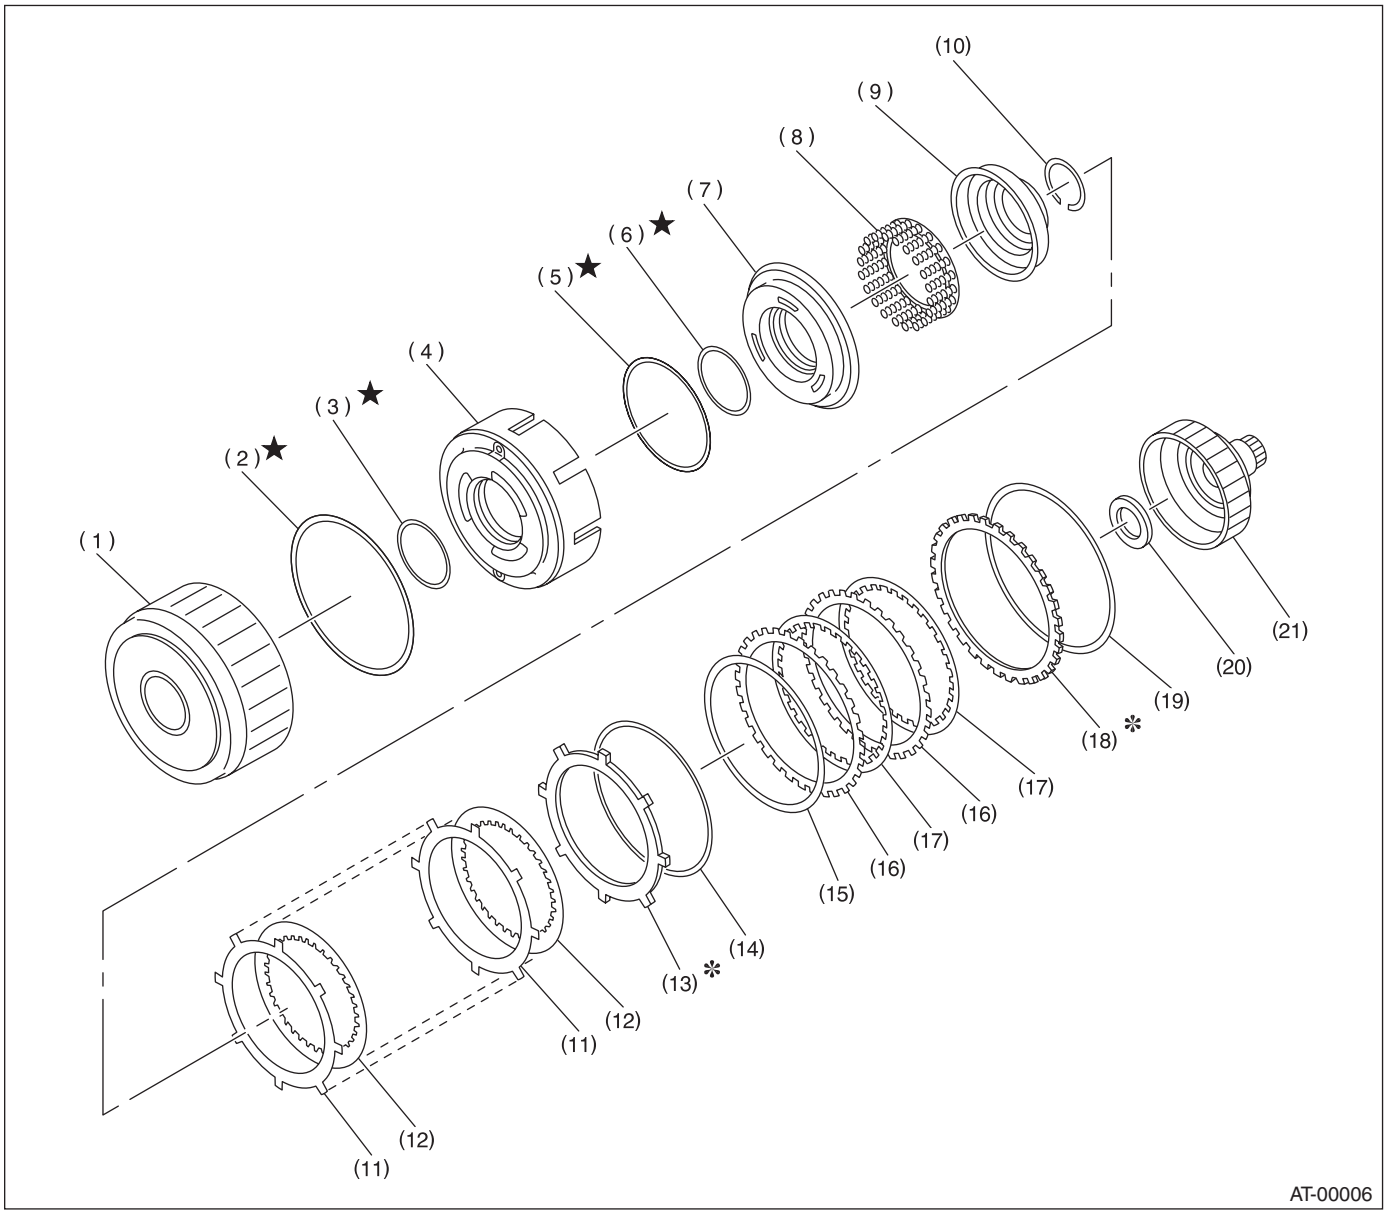

(1)	High clutch drum	(8)	Spring retainer	(15)	Dish plate
(2)	Lip seal	(9)	Cover	(16)	Driven plate
(3)	D-ring	(10)	Snap ring	(17)	Drive plate
(4)	Reverse clutch piston	(11)	Driven plate	(18)	Retaining plate
(5)	D-ring	(12)	Drive plate	(19)	Snap ring
(6)	D-ring	(13)	Retaining plate	(20)	Thrust needle bearing
(7)	High clutch piston	(14)	Snap ring	(21)	High clutch hub

6. PLANETARY GEAR AND 2-4 BRAKE

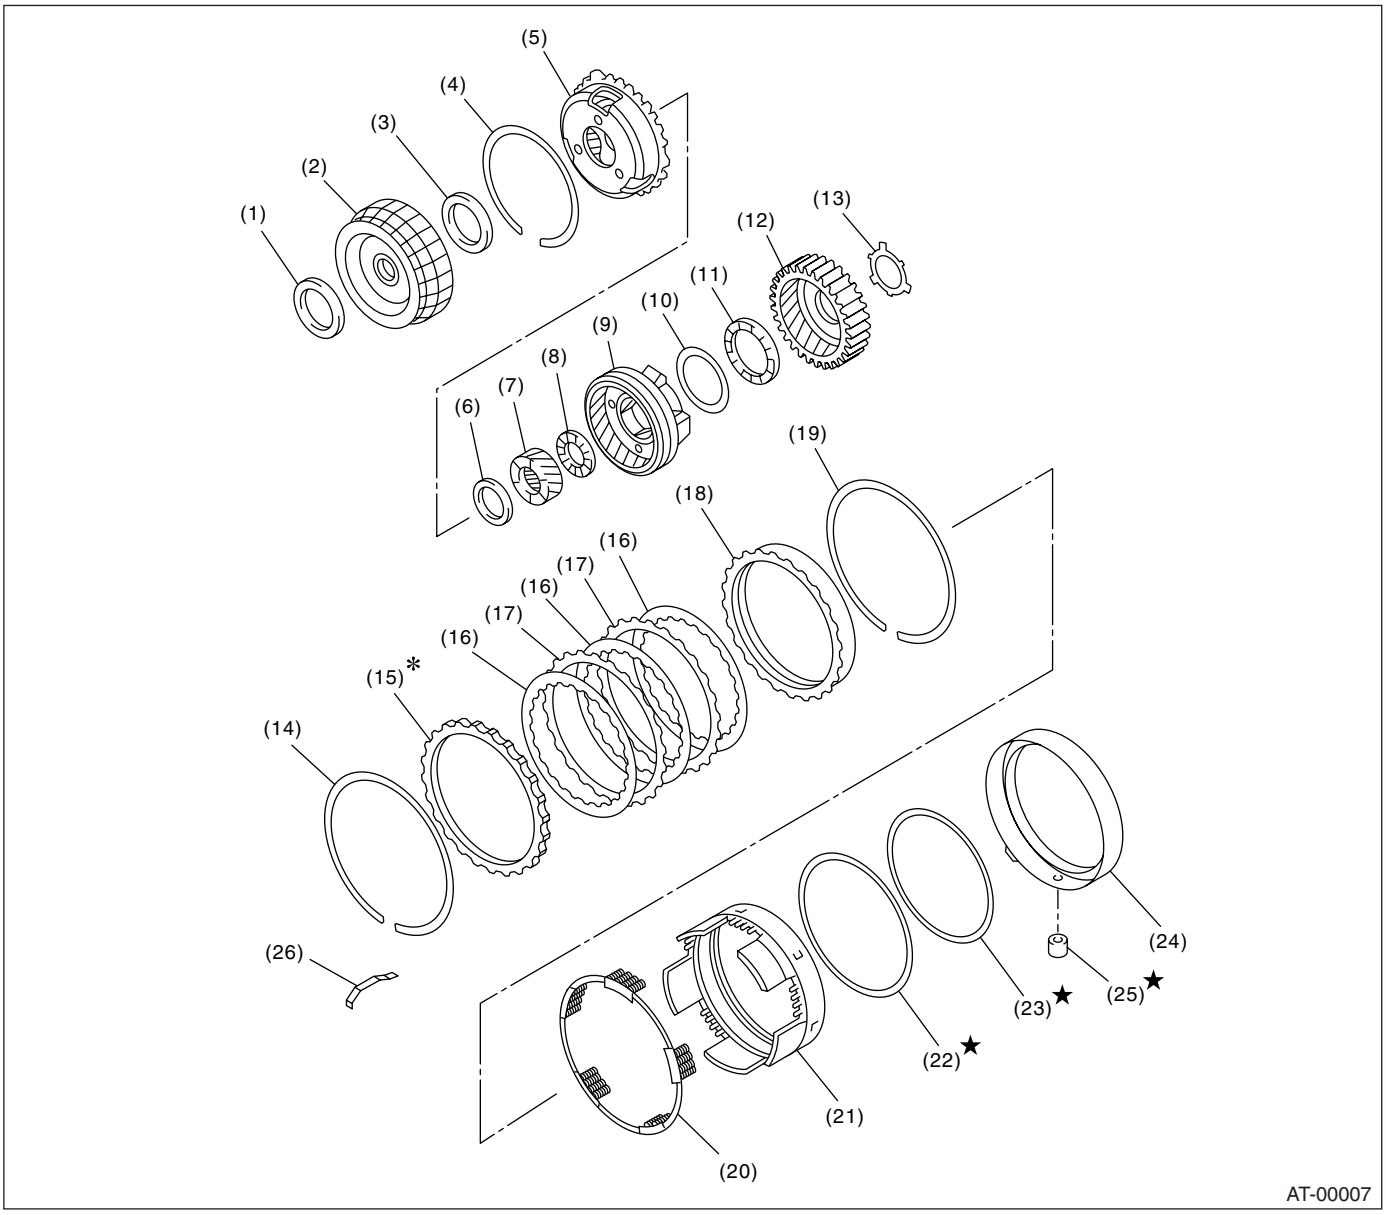

(1) Thrust needle bearing
(2) Front sun gear
(3) Thrust needle bearing
(4) Snap ring
(5) Front planetary carrier
(6) Thrust needle bearing
(7) Rear sun gear
(8) Thrust needle bearing
(9) Rear planetary carrier
(10) Washer
(11) Thrust needle bearing
(12) Rear internal gear
(13) Washer
(14) Snap ring
(15) Retaining plate
(16) Drive plate
(17) Driven plate
(18) Pressure rear plate
(19) Snap ring
(20) Spring retainer
(21) 2-4 brake piston
(22) D-ring
(23) D-ring
(24) 2-4 brake piston retainer
(25) 2-4 brake seal
(26) Leaf spring

7. LOW CLUTCH AND LOW & REVERSE BRAKE

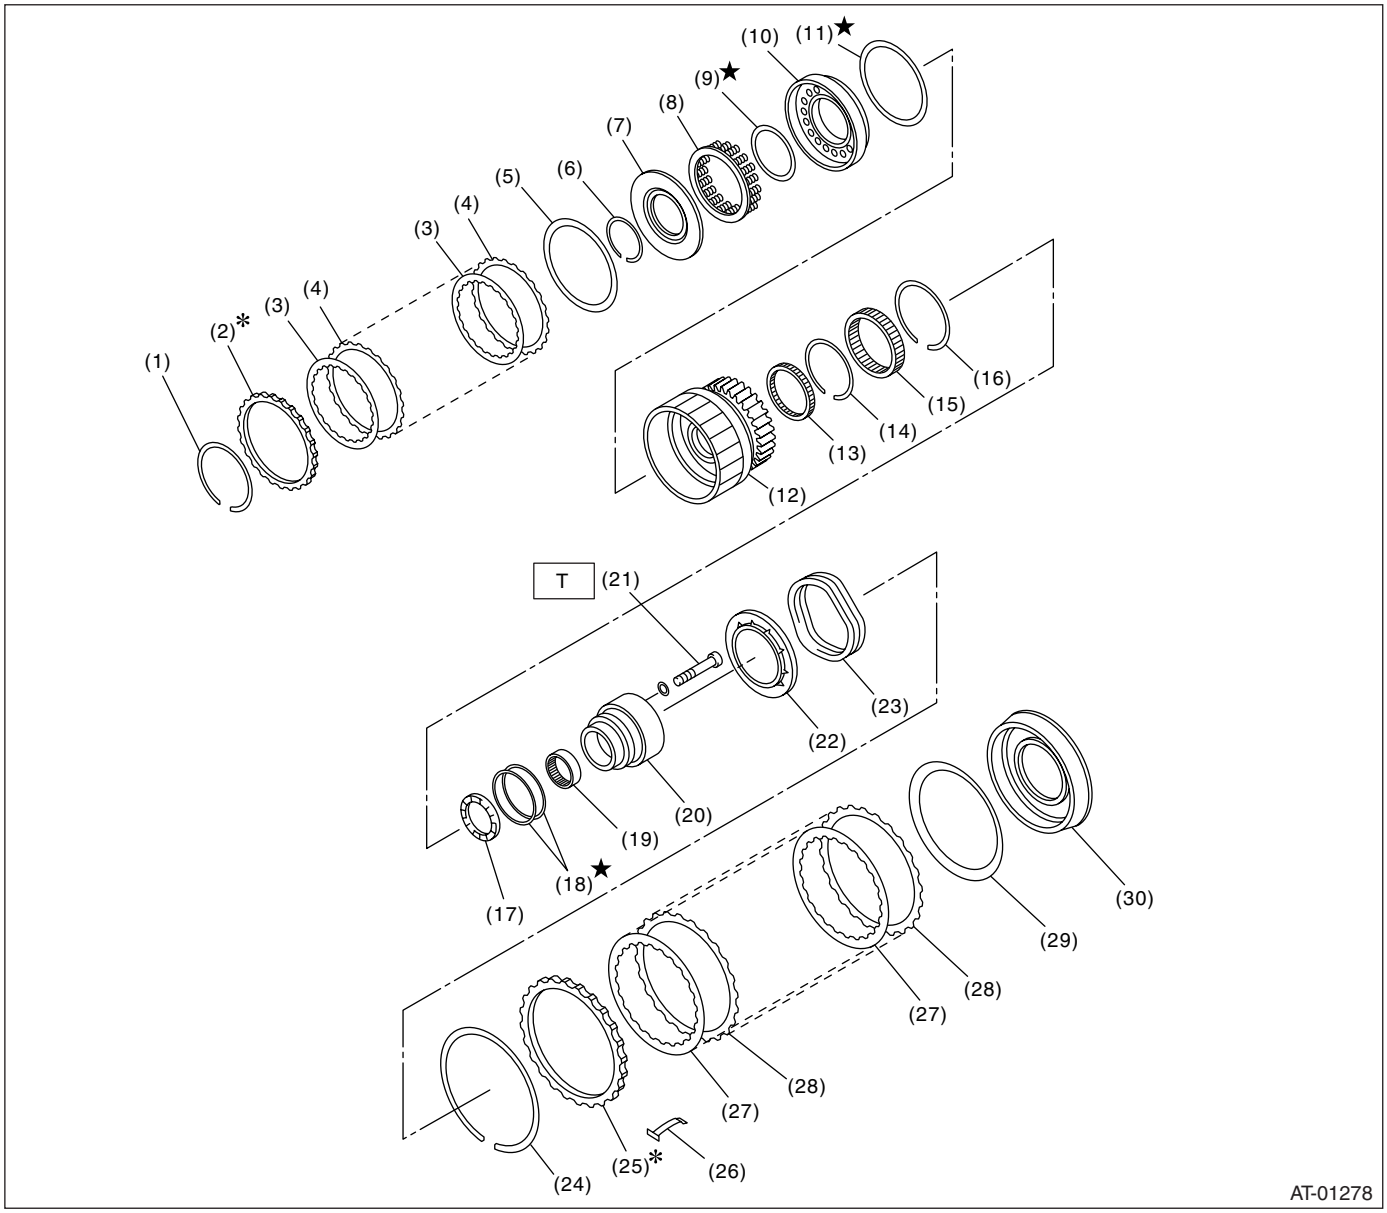

(1) Snap ring
(2) Retaining plate
(3) Drive plate
(4) Driven plate
(5) Dish plate
(6) Snap ring
(7) Cover
(8) Spring retainer
(9) D-ring
(10) Low clutch piston
(11) D-ring
(12) Low clutch drum
(13) Needle bearing
(14) Snap ring
(15) One-way clutch
(16) Snap ring
(17) Thrust needle bearing
(18) Seal ring
(19) Needle bearing
(20) One-way clutch inner race
(21) Socket bolt
(22) Spring retainer
(23) Return spring
(24) Snap ring
(25) Retaining plate
(26) Leaf spring
(27) Drive plate
(28) Driven plate
(29) Dish plate
(30) Low and reverse brake piston

Tightening torque: N·m (kgf-m, ft-lb)
T: 25 (2.5, 18.1)

8. REDUCTION GEAR WITH MPT

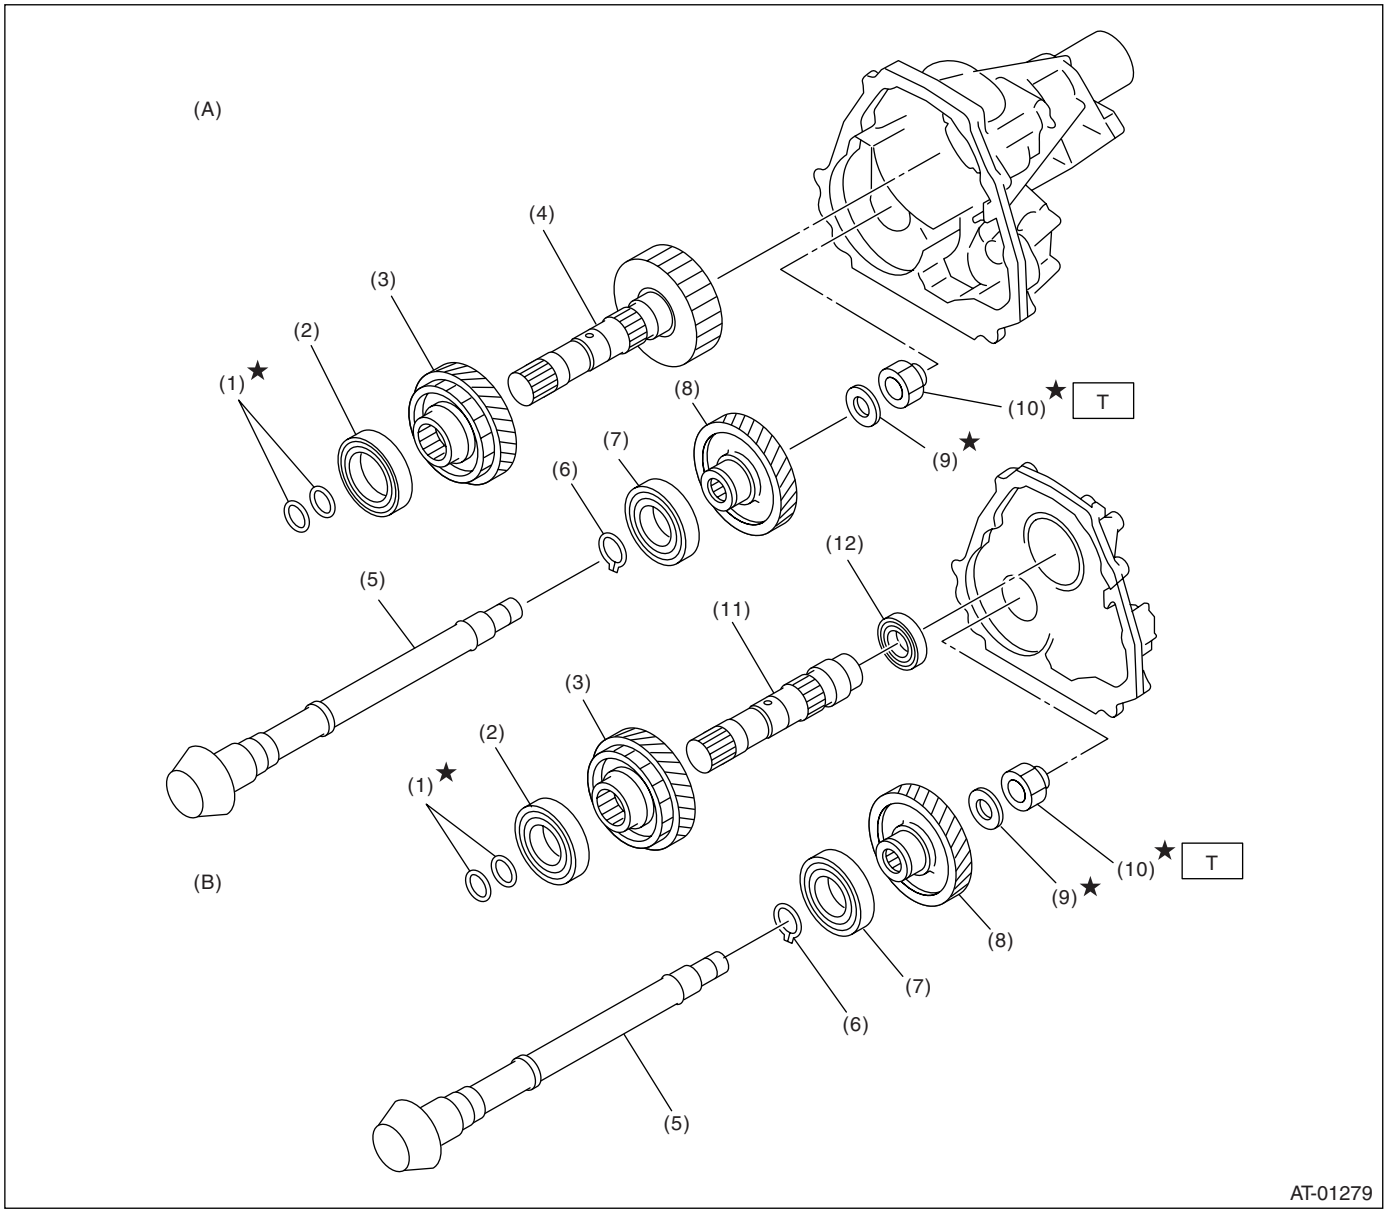

(A) AWD
(B) FWD

(1) Seal ring
(2) Ball bearing
(3) Reduction drive gear
(4) Reduction drive shaft
(5) Drive pinion shaft
(6) Snap ring
(7) Ball bearing
(8) Reduction driven gear
(9) Washer
(10) Lock nut
(11) Reduction drive shaft
(12) Ball bearing

Tightening torque: N·m (kgf-m, ft-lb)
T: 100 (10.2, 73.8)

9. REDUCTION GEAR WITH VTD

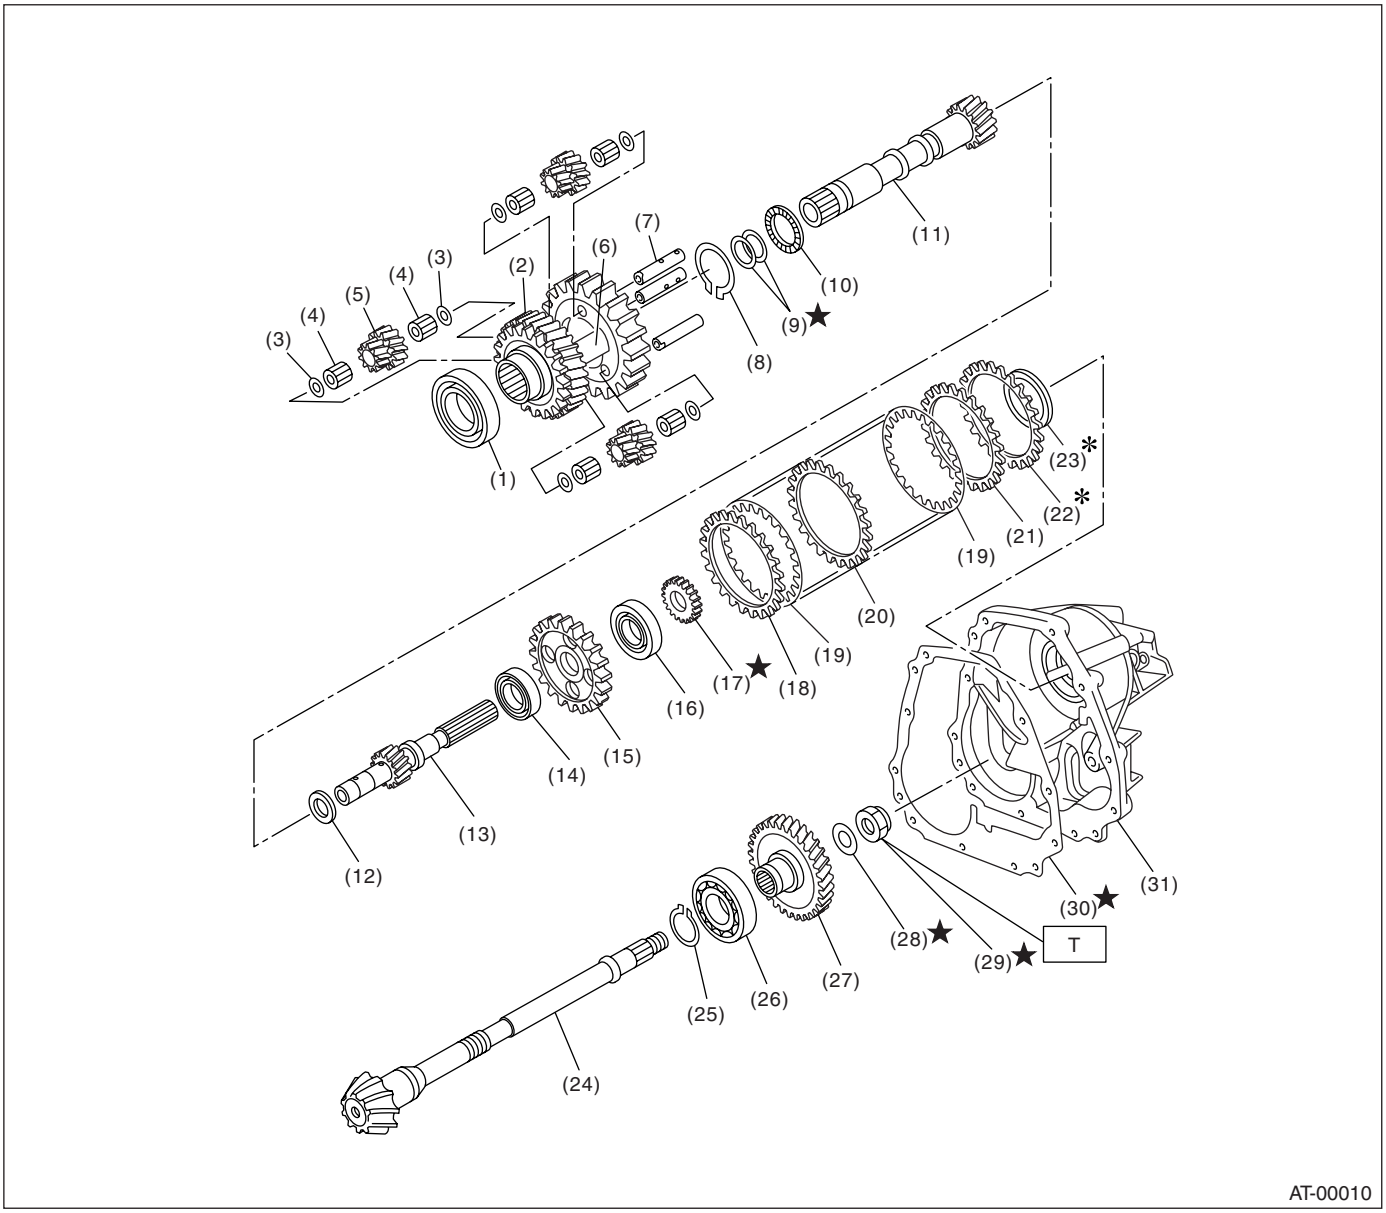

(1) Ball bearing
(2) Reduction drive gear
(3) Washer
(4) Needle bearing
(5) Pinion gear
(6) Carrier
(7) Planetary pinion shaft
(8) Snap ring
(9) Seal ring
(10) Thrust needle bearing
(11) Intermediate shaft
(12) Thrust washer
(13) Rear drive shaft
(14) Ball bearing
(15) Multi-plate clutch (LSD) hub
(16) Ball bearing
(17) Revolution gear
(18) Driven plate (Thick)
(19) Driven plate
(20) Driven plate (Thin)
(21) Driven plate (Thick)
(22) Pressure plate
(23) Rear drive shaft shim
(24) Drive pinion shaft
(25) Snap ring
(26) Ball bearing
(27) Reduction driven gear
(28) Lock washer
(29) Lock nut
(30) Gasket
(31) Extension case

Tightening torque: N·m (kgf-m, ft-lb)
T: 100 (10.2, 73.8)

10.DIFFERENTIAL GEAR

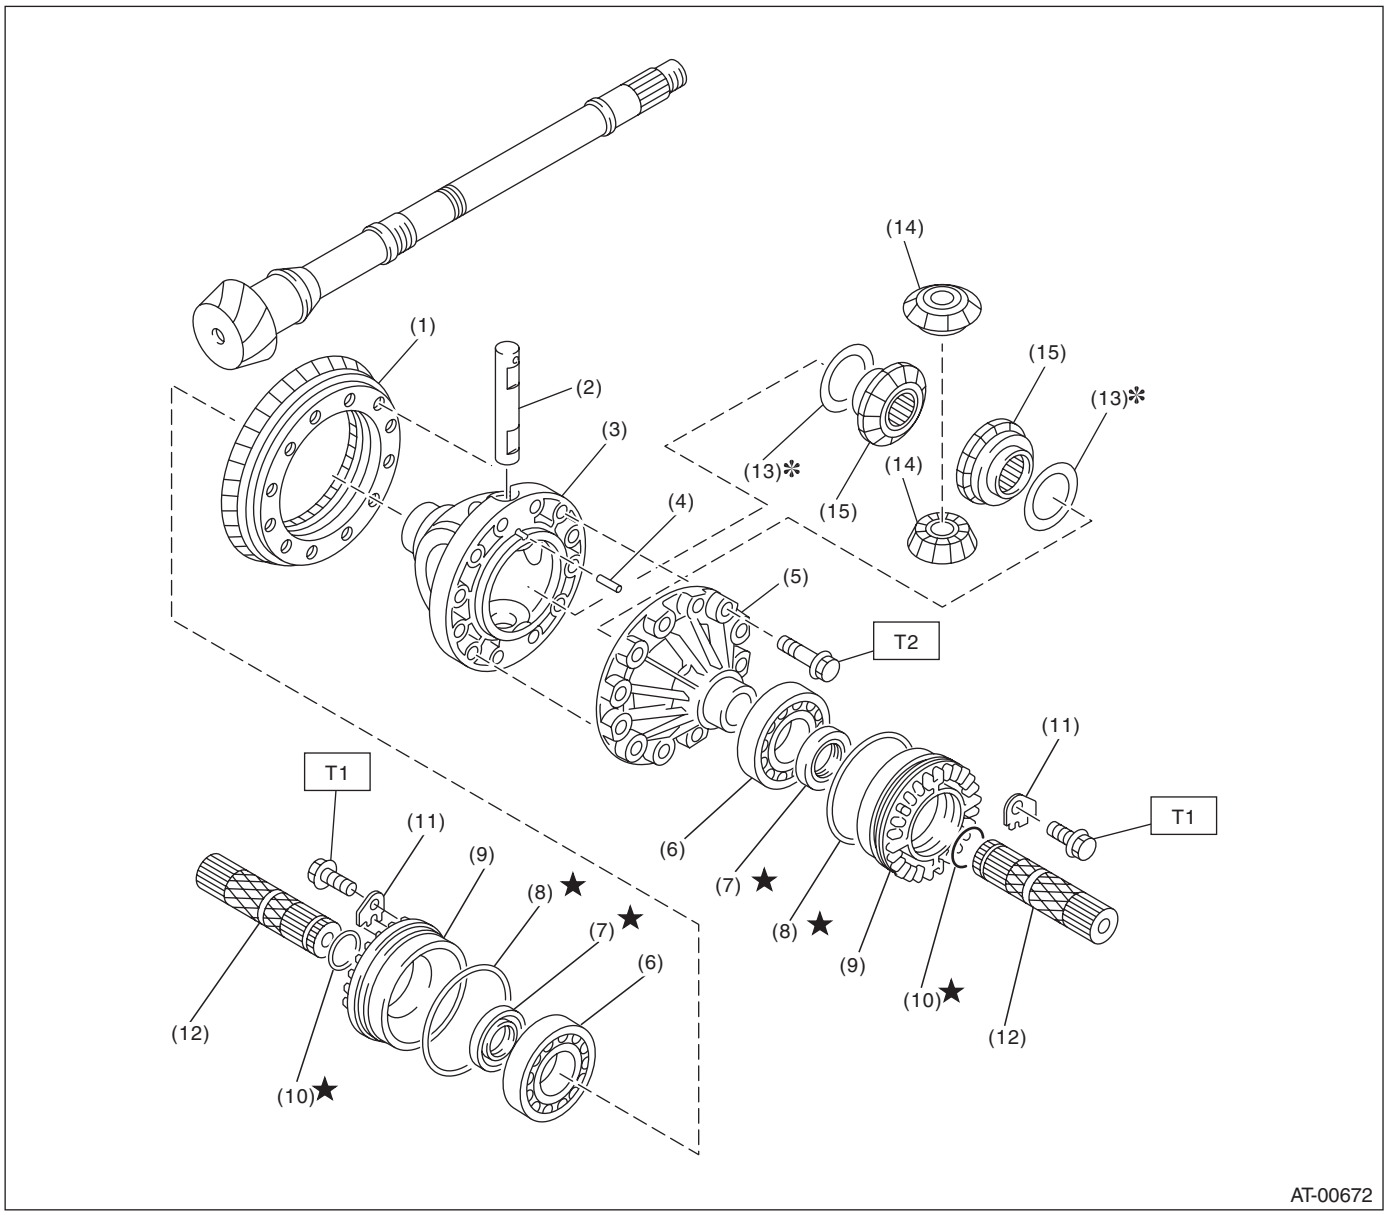

(1) Crown gear
(2) Pinion shaft
(3) Differential case (RH)
(4) Straight pin
(5) Differential case (LH)
(6) Taper roller bearing
(7) Oil seal
(8) O-ring
(9) Differential side retainer
(10) Circlip
(11) Lock plate
(12) Axle shaft
(13) Washer
(14) Differential bevel pinion
(15) Differential bevel gear

Tightening torque: N·m (kgf-m, ft-lb)
T1: 25 (2.5, 18.1)
T2: 62 (6.3, 45.6)

11.TRANSFER AND EXTENSION CASE WITH MPT

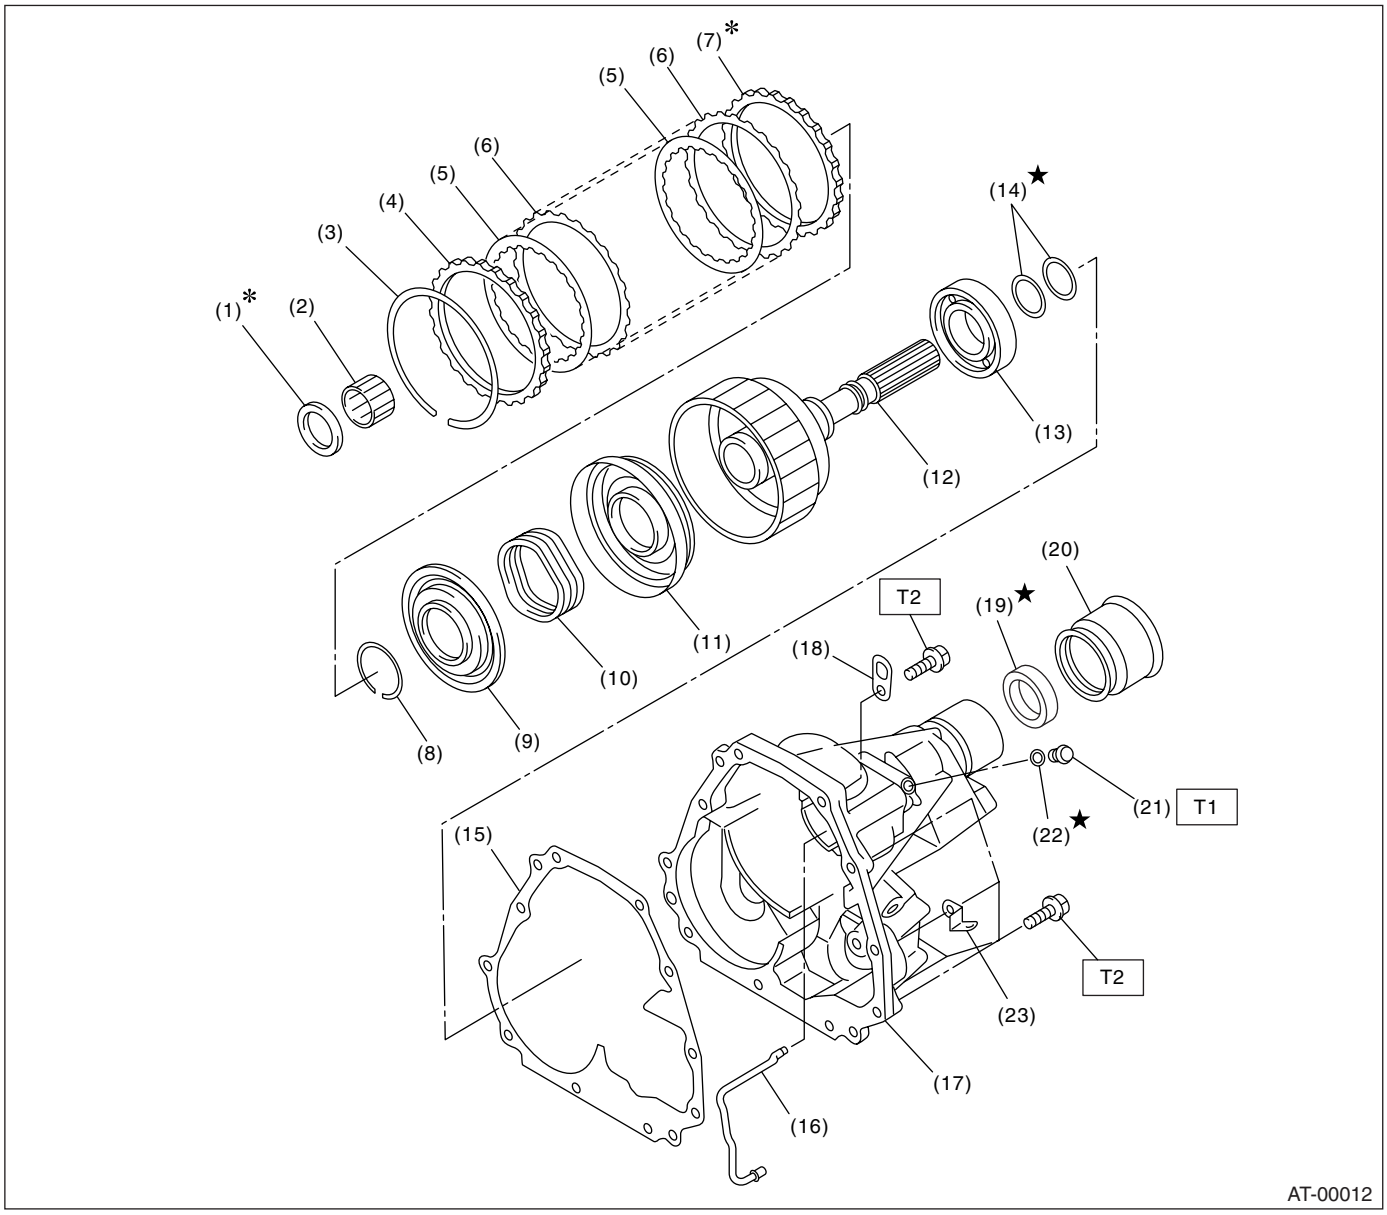

(1) Thrust needle bearing
(2) Needle bearing
(3) Snap ring
(4) Pressure plate
(5) Drive plate
(6) Driven plate
(7) Retaining plate
(8) Snap ring
(9) Transfer piston seal
(10) Return spring
(11) Transfer clutch piston
(12) Rear drive shaft
(13) Ball bearing
(14) Seal ring
(15) Gasket
(16) Transfer clutch pipe
(17) Extension case
(18) Transmission hanger
(19) Oil seal
(20) Dust cover
(21) Test plug
(22) O-ring
(23) Clip

Tightening torque: N·m (kgf-m, ft-lb)
T1: 13 (1.3, 9.4)
T2: 25 (2.5, 18.1)

12.TRANSFER AND EXTENSION CASE WITH VTD

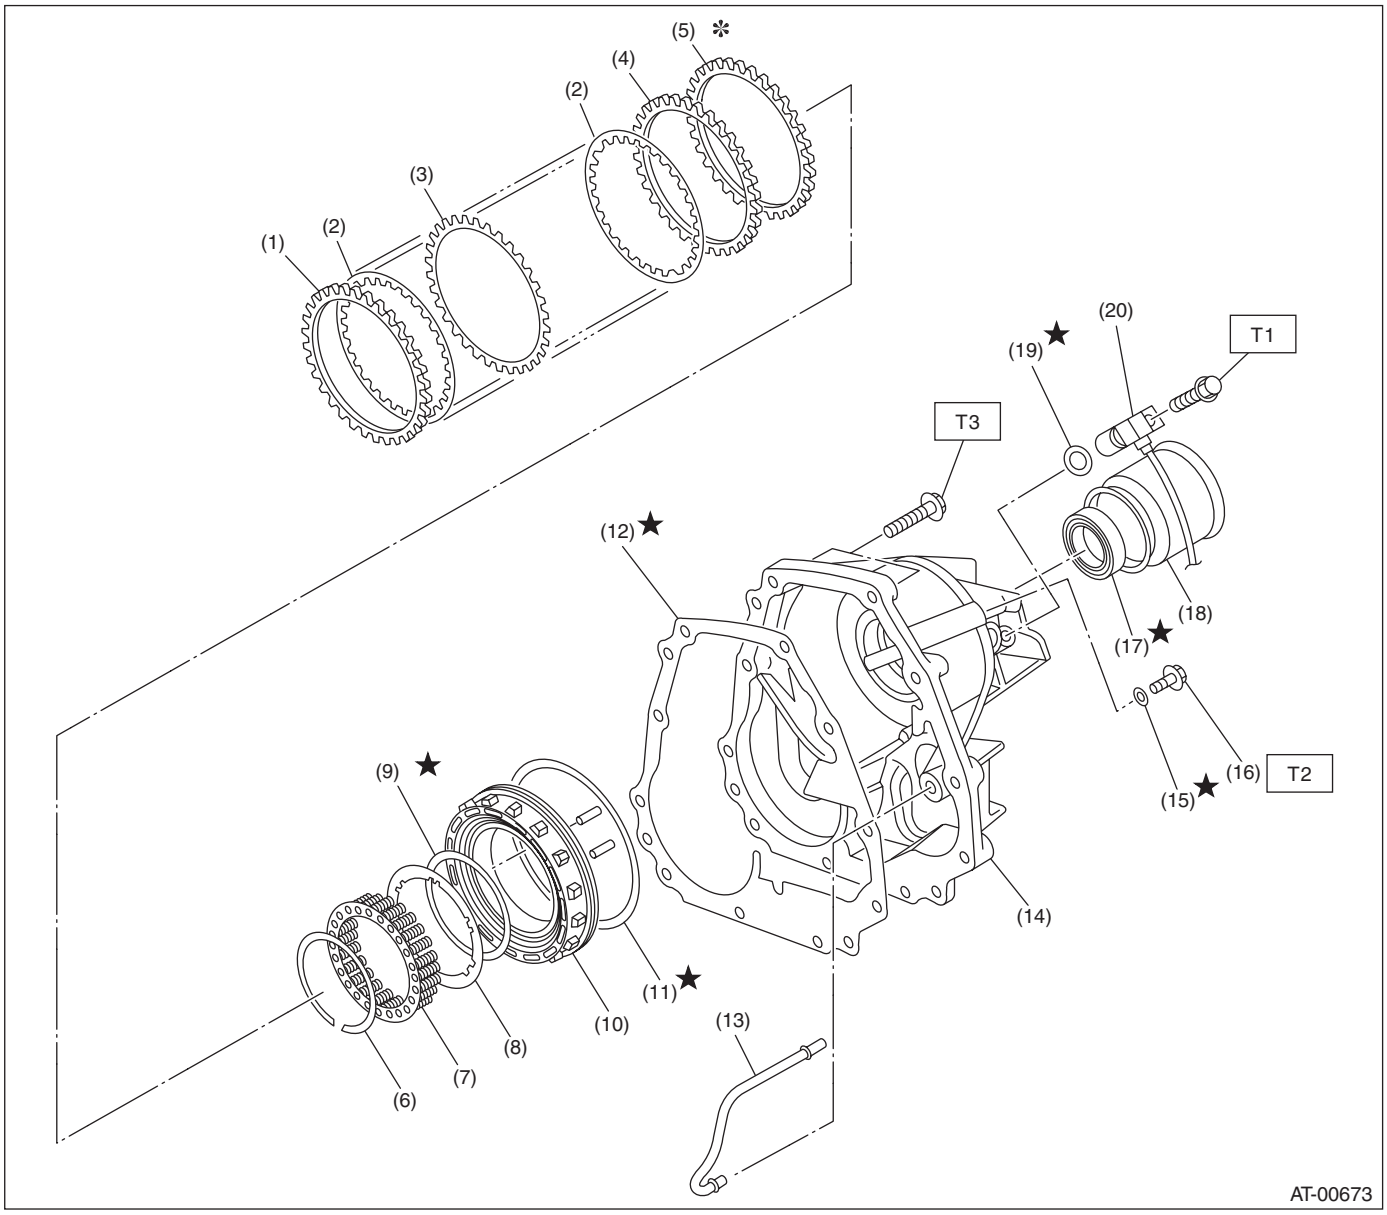

(1) Driven plate (Thick)
(2) Driven plate
(3) Driven plate (Thin)
(4) Driven plate (Thick)
(5) Retaining plate
(6) Snap ring
(7) Spring retainer
(8) Plate
(9) O-ring
(10) Multi-plate clutch (LSD) piston
(11) D-ring
(12) Gasket
(13) Multi-plate clutch (LSD) pipe
(14) Extension case
(15) O-ring
(16) Test plug
(17) Oil seal
(18) Dust cover
(19) O-ring
(20) Rear wheel sensor

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7 (0.7, 5.1)
T2: 13 (1.3, 9.4)
T3: 25 (2.5, 18.1)

13.TRANSMISSION MOUNTING

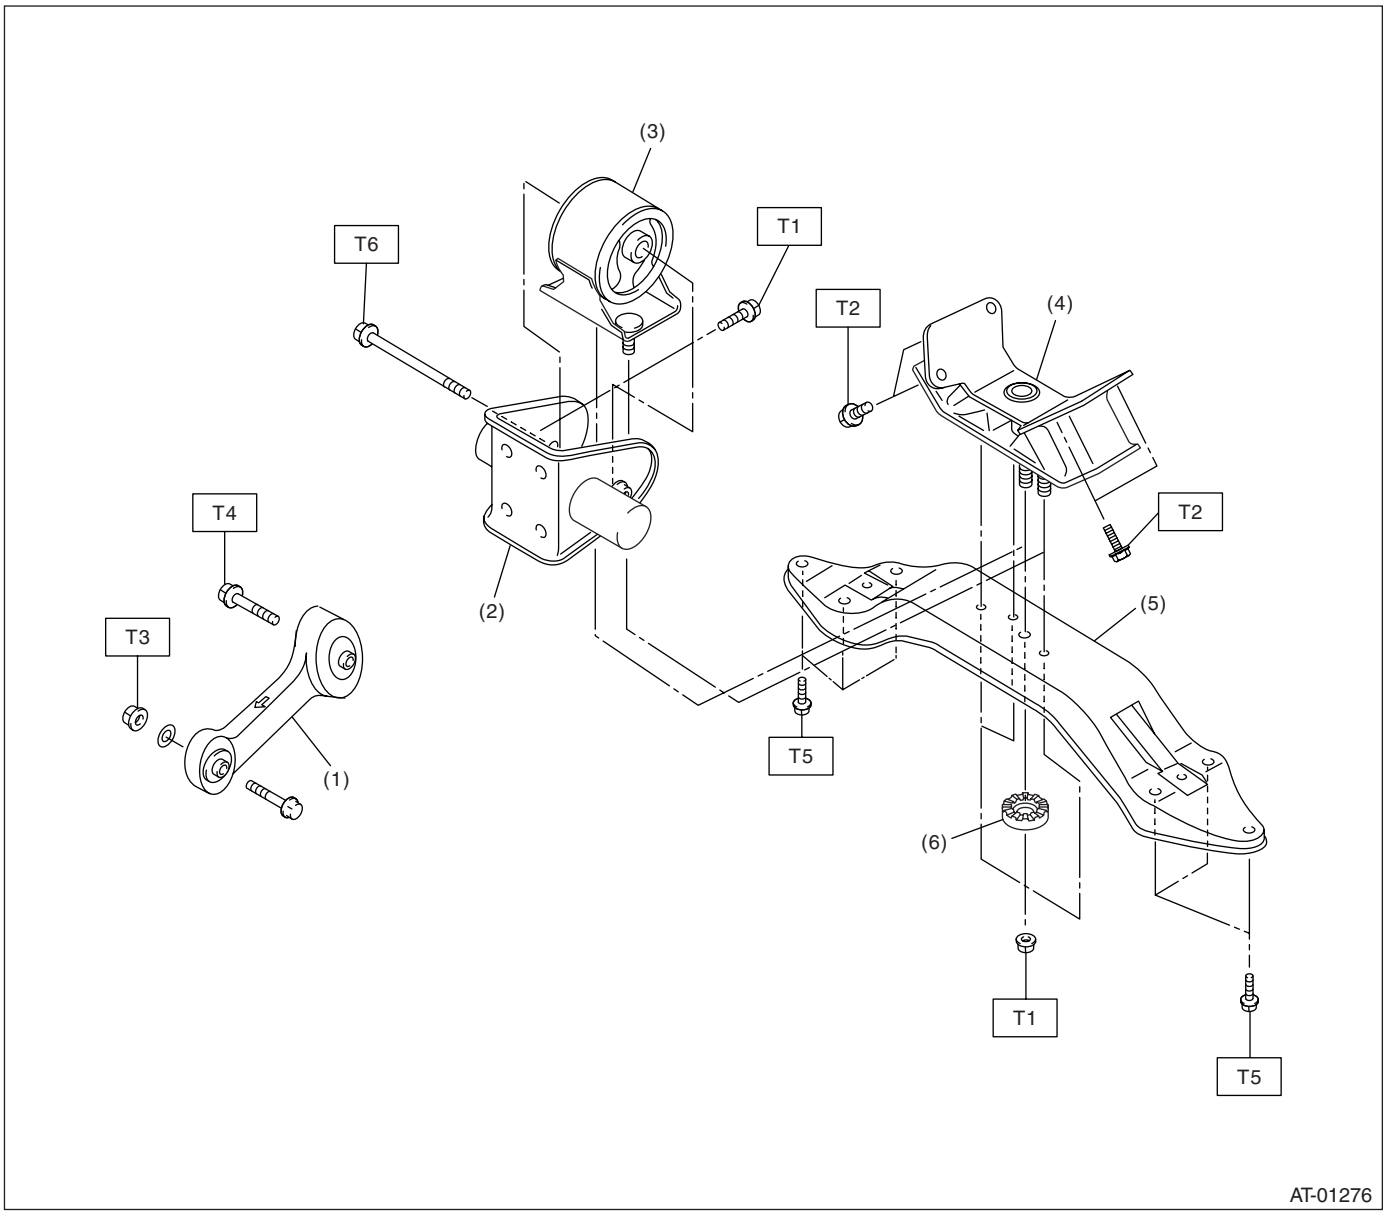

(1) Pitching stopper
(2) Rear bracket (FWD model)
(3) Rear cushion rubber (FWD model)
(4) Rear cushion rubber (AWD model)
(5) Crossmember
(6) Stopper

Tightening torque: N·m (kgf-m, ft-lb)
T1: 35 (3.6, 26)
T2: 39 (4.0, 29)
T3: 50 (5.1, 37)
T4: 58 (5.9, 43)
T5: 70 (7.1, 51)
T6: 123 (12.5, 90)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation, and disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Until the oil pan is removed, do not place with the oil pan side facing up to prevent foreign matter from entering the valve body.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
• When disassembling the case and other light alloy parts, use a plastic hammer to force it apart. Do not pry it apart with a screwdriver or other tool.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use SUBARU genuine gear oil, grease etc. or the equivalent. Do not mix gear oil, grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Apply gear oil onto sliding or revolution surfaces before installation.
• Replace deformed or otherwise damaged snap rings with new ones.
• Before installing O-rings or oil seals, apply sufficient amount of ATF fluid to avoid damage and deformation.
• Be careful not to incorrectly install or fail to install O-rings, snap rings and other such parts.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Avoid damaging the mating surface of the case.
• Before applying sealant, completely remove the old seal.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
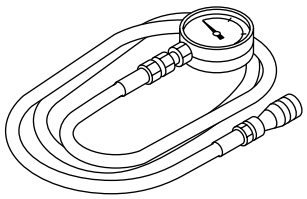 ST-498575400	498575400	OIL PRESSURE GAUGE ASSY	Used for measuring oil pressure.
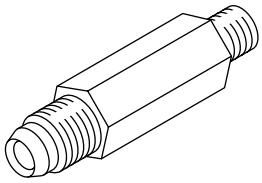 ST-498897200	498897200	ADAPTER	Used oil pump housing when measuring reverse clutch pressure and line pressure.
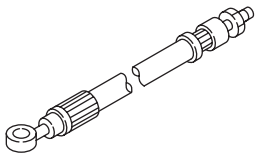 ST-498897700	498897700	ADAPTER SET	Used for measuring transfer clutch pressure.
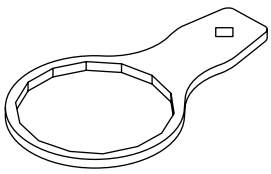 ST-498545400	498545400	FILTER WRENCH	Used for removing and installing ATF filter.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
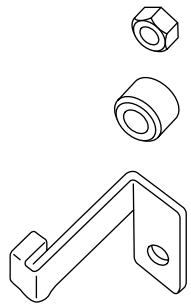 ST-498277200	498277200	STOPPER SET	Used for removing and installing automatic transmission assembly to engine.
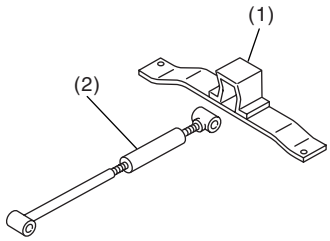 ST41099AA000	41099AA000	ENGINE SUPPORT ASSY	Used for supporting engine. (1) ENGINE SUPPORT BRACKET (41099AA010) (2) ENGINE SUPPORT (41099AA020)
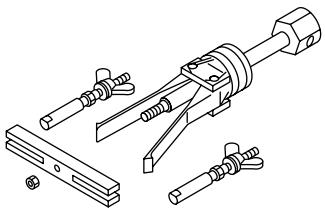 ST-398527700	398527700	PULLER ASSY	• Used for removing extension case roller bearing. • Used for removing extension oil seal. • Used for removing front differential side retainer bearing outer race. • Used for removing front differential side retainer bearing outer ball race.
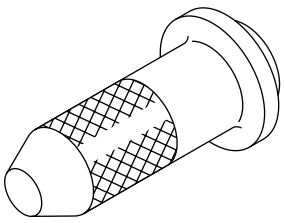 ST-498057300	498057300	INSTALLER	Used for installing extension oil seal.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
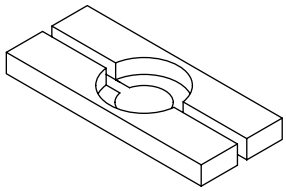 ST-498077000	498077000	REMOVER	Used for removing differential taper roller bearing.
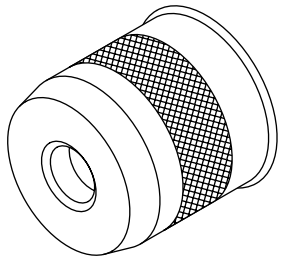 ST-499247400	499247400	INSTALLER	• Used for installing transfer outer snap ring. • Used with GUIDE (499257300).
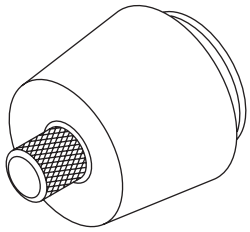 ST-499257300	499257300	SNAP RING OUTER GUIDE	• Used for installing transfer outer snap ring. • Used with INSTALLER (499247400).
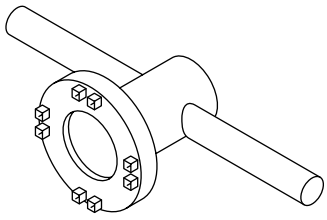 ST-499787000	499787000	WRENCH ASSY	Used for removing and installing differential side retainer.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
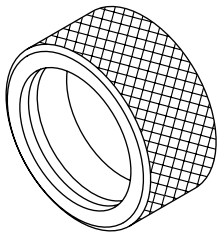 ST-398437700	398437700	DRIFT	Used for installing converter case oil seal.
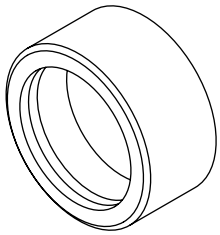 ST-398487700	398487700	INSTALLER	Used for installing taper roller bearing of front differential.
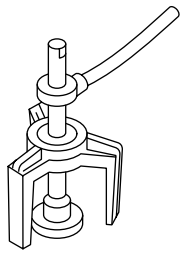 ST-398673600	398673600	COMPRESSOR	Used for removing and installing clutch spring.
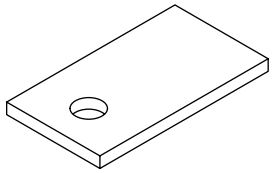 ST-498255400	498255400	PLATE	Used for measuring backlash of hypoid gear.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
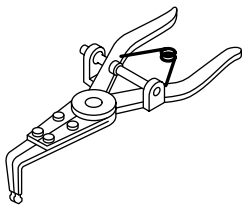 ST-399893600	399893600	PLIERS	Used for removing and installing clutch spring.
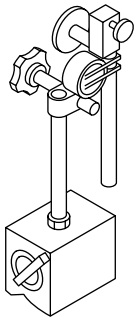 ST-498247001	498247001	MAGNET BASE	• Used for measuring gear backlash. • Used with DIAL GAUGE (498247100).
 ST-498247100	498247100	DIAL GAUGE	• Used for measuring gear backlash. • Used with MAGNET BASE (498247001).
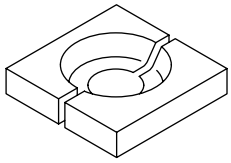 ST-498517000	498517000	REPLACER	Used for removing front roller bearing.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
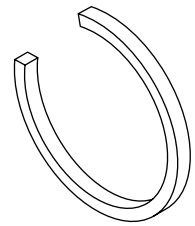 ST-398623600	398623600	SEAT	Used for removing spring of transfer clutch piston.
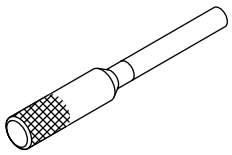 ST-499267300	499267300	STOPPER PIN	Used for installing inhibitor switch.
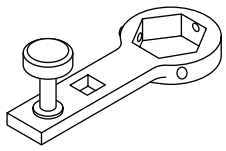 ST-499787700	499787700	WRENCH	Used for removing and installing drive pinion lock nut.
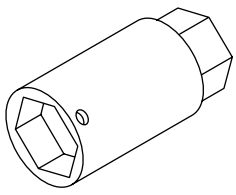 ST-499787500	499787500	ADAPTER	Used for removing and installing drive pinion lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
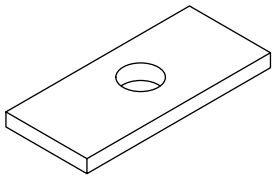 ST-398643600	398643600	GAUGE	Used for measuring total end play, extension end play and drive pinion height.
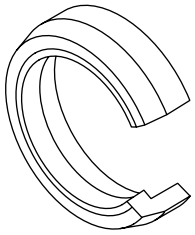 ST-498627100	498627100	SEAT	Used for holding low clutch piston retainer spring when installing snap ring.
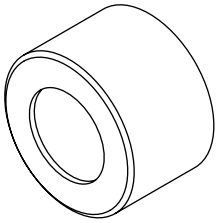 ST-499577000	499577000	GAUGE	• Used for measuring the transmission case mating surface to the reduction gear end surface. • For MPT model.
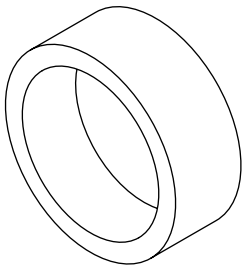 ST-398744300	398744300	GAUGE	• Use for measuring contact face between multi-plate clutch end and transmission. • For VTD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
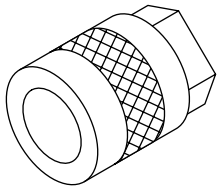 ST-499737000	499737000	PULLER	Used for removing reduction driven gear assembly.
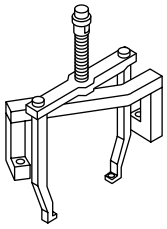 ST-499737100	499737100	PULLER SET	Used for removing reduction drive gear assembly.
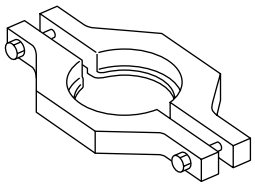 ST-498077600	498077600	REMOVER	Used for removing ball bearing.
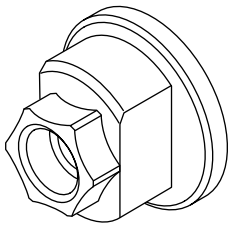 ST-498937110	498937110	HOLDER	Used for removing and installing drive pinion lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
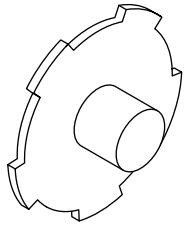 ST-498677100	498677100	COMPRESSOR	Used for installing 2-4 brake snap ring.
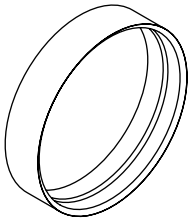 ST-498437000	498437000	HIGH CLUTCH PISTON GUIDE	Used for installing high clutch piston.
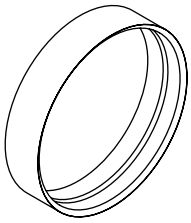 ST-498437100	498437100	LOW CLUTCH PISTON GUIDE	Used for installing low clutch piston.
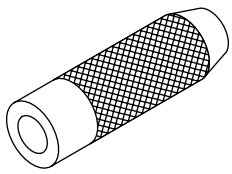 ST-899580100	899580100	INSTALLER	Used for press-fitting the ball bearing for transfer clutch.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
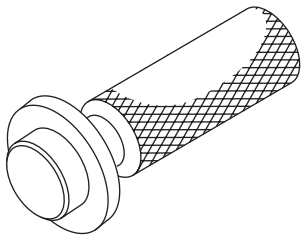 ST-499797000	499797000	DIFERENTIAL OIL SEAL INSTALLER	Used for installing differential side retainer oil seal.
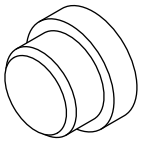 ST-398497701	398497701	SEAT	Used for installing needle bearing.
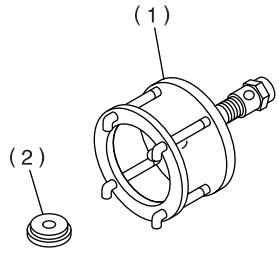 ST-899524100	899524100	PULLER SET	• Using the bolt only. (1) Bolt • Used with PULLER SET (499737100). • Used with PULLER (499737000). (1) Puller (2) Cap
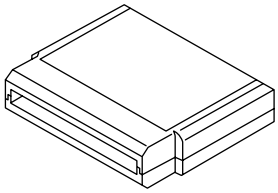 ST24082AA210	24082AA210 (Newly adapted tool)	CARTRIDGE	Troubleshooting for electrical systems.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Depth gauge	Used for measuring transmission end play.
Thickness gauge	Used for measuring clearances of clutch, brake and oil pump.
Micro meter	Used for measuring thickness of drive pinion.
Spring balance	Used for measuring starting torque of drive pinion.
Circuit tester	Used for measuring resistance and voltage.
TORX® T70	Used for removing and installing differential gear oil drain plug.

2. Automatic Transmission Fluid

A: INSPECTION

NOTE:
The level of ATF varies with fluid temperature. Pay attention to the fluid temperature when checking ATF level.

1) Raise the ATF temperature by driving a distance of 5 to 10 km (3 to 6 miles). Otherwise, idle the engine to raise ATF temperature to 70 — 80°C (158 — 176°F) on SUBARU Select Monitor. <Ref. to 4AT-21, READ CURRENT DATA, OPERATION, Subaru Select Monitor.>
2) Make sure the vehicle is level.
3) After selecting all positions (P, R, N, D, 3, 2, 1), set the select lever in "P" range. Measure the ATF level with the engine idling for one or two minutes.

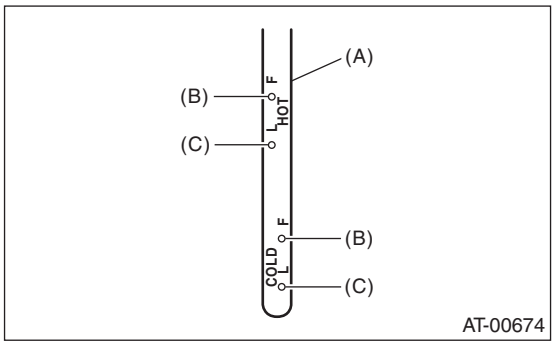

(A) ATF level gauge
(B) Upper level
(C) Lower level

4) Make sure that ATF level is above the center of upper and lower marks at HOT side.

NOTE:
When the transmission is hot, the level should be above the center of upper and lower marks, and when it is cold, the level should be found below the center of these two marks.

5) If the ATF level is below the center between upper and lower marks, add the recommended ATF until the ATF level is found above the center between upper and lower marks.

CAUTION:
- **Use care not to exceed the upper limit level.**
- **Remember that the addition of ATF to the upper limit mark when the transmission is cold will result in overfilling of ATF, causing a transmission failure.**

6) Check ATF level after raising ATF temperature to 70 — 80°C (158 — 176°F) by running the vehicle or by idling the engine again.
7) Check the ATF for leaks.
Check for leaks in the transmission. If there are leaks, it is necessary to repair or replace gasket, oil seals, plugs or other parts.

B: REPLACEMENT

1) Lift-up the vehicle.
2) Drain the ATF completely.

CAUTION:
Directly after the engine has been running, the ATF is hot. Be careful not to burn yourself.

3) Replace with a new gasket, and then tighten the ATF drain plug.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

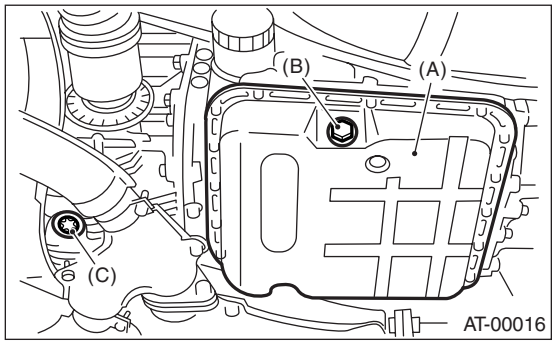

(A) Oil pan
(B) Drain plug (ATF)
(C) Differential oil drain plug

4) Lower the vehicle.
5) Pour ATF into the oil charge pipe.

Recommended fluid:
Dexron III type automatic transmission fluid

Capacity:
Fill the same amount of ATF drained from drain plug hole.

Capacity when transmission is overhauled:
1.6 L FWD model:
8.0 — 8.3 ℓ (8.5 — 8.8 US qt, 7.0 — 7.3 Imp qt)
1.6 L AWD and 2.0 L Non-turbo model:
8.4 — 8.7 ℓ (8.9 — 9.2 US qt, 7.4 — 7.7 Imp qt)
2.5 L and 2.0 L Turbo model:
9.3 — 9.6 ℓ (9.8 — 10.1 US qt, 8.2 — 8.4 Imp qt)

6) Check the level and leaks of ATF.
<Ref. to 4AT-31, INSPECTION, Automatic Transmission Fluid.>

3. Differential Gear Oil

A: INSPECTION

1) Park the vehicle on a level surface.
2) Remove the oil level gauge and wipe it clean.
3) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in the proper orientation.
4) Remove it again and note the reading. If the differential gear oil level is below the “L” line, add oil to bring the level up to the “F” line.
5) To prevent overfilling the differential gear oil, do not add oil above the “F” line.

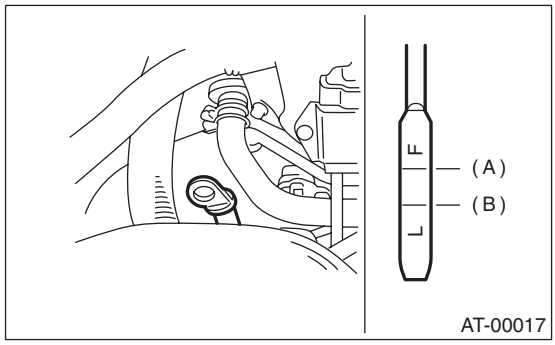

(A) Upper level
(B) Lower level

B: REPLACEMENT

1) Lift-up the vehicle.
2) Remove the differential gear oil drain plug using TORX® T70, and then drain the differential gear oil completely.

CAUTION:
• Directly after the engine has been running, the differential gear oil is hot. Be careful not to burn yourself.
• Be careful not to spill the differential gear oil on exhaust pipe to prevent it from emitting smoke or fire. When the differential gear oil is spilled on exhaust pipe, wipe it away completely.

3) Replace the gasket with a new one, and then tighten the differential gear oil drain plug using TORX® T70.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

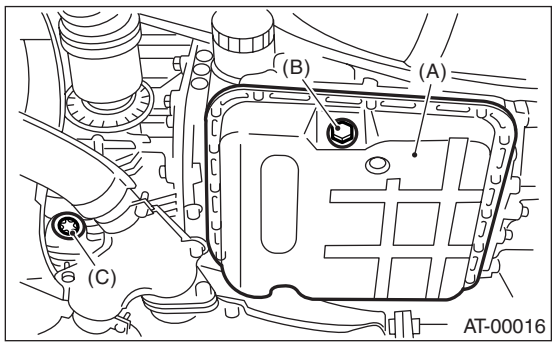

(A) Oil pan
(B) Drain plug
(C) Differential oil drain plug

4) Lower the vehicle.
5) Pour gear oil into the gauge hole.

Recommended fluid:
Use GL-5 (SAE: 80W — 90) or equivalent.

Gear oil capacity:
1.1 — 1.3 ℓ (1.2 — 1.4 US qt, 1.0 — 1.1 Imp qt)

6) Check the level of differential gear oil.
<Ref. to 4AT-32, INSPECTION, Differential Gear Oil.>

4. Road Test

A: INSPECTION

1. GENERAL PRECAUTION

Road tests should be conducted to properly diagnose the condition of the automatic transmission.

NOTE:
When performing the test, do not exceed posted speed limit.

2. D RANGE SHIFT FUNCTION

Check shifting between 1st ⇔ 2nd ⇔ 3rd ⇔ 4th while driving on normal city streets.

3. D RANGE SHIFT SHOCK

Check the shock level when shifting up during normal driving.

4. KICK-DOWN FUNCTION

Check kick-down for each gear. Also check the kick-down shock level.

5. ENGINE BRAKE OPERATION

- Check the 3rd gear engine brake when shifting between D ⇔ 3rd range while driving in 4th gear of D range [50 to 60 km/h (31 to 37 MPH)].
- Check the 2nd gear engine brake when shifting between 3 ⇔ 2 range while driving in the 3 range 3rd gear [40 to 50 km/h (25 to 31 MPH)].
- Check the 1st gear engine brake when shifting between 2 ⇔1 range while driving in the 2 range 2nd gear [20 to 30 km/h (12 to 19 MPH)].

6. LOCK-UP FUNCTION

Check that engine speed does not change sharply when the acclelerator pedal is lightly depressed when driving on flat roads at normal speed in the lock-up range.

7. P RANGE OPERATION

Stop the vehicle on an uphill grade of 5% or more and shift to “P” range. Check that the vehicle does not move when the parking brake is released.

8. UNUSUAL SOUNDS AND VIBRATION

Check for unusual sounds and vibration while driving and during shifting.

9. CLIMBING CONTROL FUNCTION

- Check that the gear remains in 3rd when going up a grade.
- Check that the gear remains in 3rd when applying the brakes while going down a grade.

10.TRANSFER CLUTCH

Check if the tight corner braking occurs when the vehicle is started with steering wheel held at fully turned position. (MPT model)

11.OIL LEAKS

After the driving test, inspect for oil leaks.

5. Stall Test

A: INSPECTION

NOTE:
The stall test is of extreme importance in diagnosing the condition of the automatic transmission and the engine. It should be conducted to measure the engine stall speeds in “R” and “2” ranges.

Purposes of the stall test:

- To check the operation of the automatic transmission clutch.
- To check the operation of the torque converter clutch.
- To check engine performance.

1) Check that throttle valve opens fully.
2) Check that engine oil level is correct.
3) Check that coolant level is correct.
4) Check that ATF level is correct.
5) Check that differential gear oil level is correct.
6) Increase ATF temperature to 70 to 80°C (158 to 176°F) by idling the engine for approx. 30 minutes (with select lever set to “N” or “P”).
7) Place the wheel chocks at the front and rear of all wheels and engage the parking brake.
8) Move the manual linkage to ensure it operates properly, and shift the select lever to the “2” range. Turn hold switch ON.
9) While forcibly depressing the foot brake pedal, gradually depress the accelerator pedal until the engine operates at full throttle.

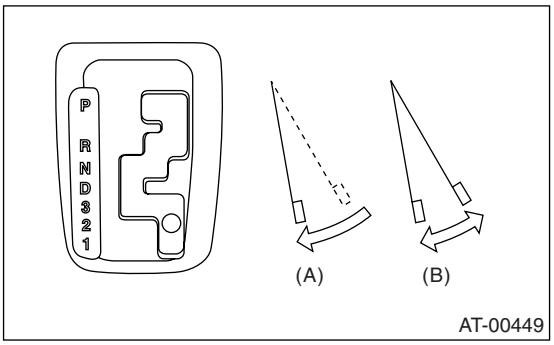

(A) Brake pedal
(B) Accelerator pedal

10) When the engine speed is stabilized, record that speed quickly and release the accelerator pedal.
11) Shift the select lever to “N” range, and cool down the engine by idling it for more than one minute.
12) If the stall speed in “2” range is higher than specifications, low clutch slipping and 2-4 brake slipping may occur. To identify it, conduct the same test as above in “R” range.
13) Perform the stall tests with the select lever in “D” range. Turn hold switch OFF.

NOTE:

- Do not continue the stall test for MORE THAN 5 SECONDS at a time (from closed throttle, fully open throttle to stall speed reading). Failure to follow this instruction causes the engine oil and ATF to deteriorate and the clutch and brake to be adversely affected.
- Be sure to cool down the engine for at least 1 minute after each stall test with the select lever set in the “P” or “N” range and with the idle speed lower than 1,200 rpm.
- If the stall speed is higher than the specified range, attempt to finish the stall test in as short a time as possible, in order to prevent the automatic transmission from sustaining damage.

Stall speed (at sea level):
1.6 L model: 2,400 — 3,000 rpm
2.0 L Non-turbo model: 2,200 — 2,700 rpm
2.0 L Turbo model: 2,900 — 3,500 rpm
2.5 L model: 2,100 — 2,600 rpm

Stall speed (at sea level)	Position	Cause
Less than specifications	2, R	• Throttle valve not fully open • Erroneous engine operation • Torque converter clutch's one-way clutch slipping
Greater than specifications	D	• Line pressure too low • Low clutch slipping • One-way clutch malfunction
	R	• Line pressure too low • Reverse clutch slipping • Low & reverse brake slipping
	2	• Line pressure too low • Low clutch slipping • 2-4 brake slipping

6. Time Lag Test

A: INSPECTION

NOTE:
If the select lever is shifted while the engine is idling, there will be a certain time elapse or lag before the shock can be felt. This is used for checking the condition of the low clutch, reverse clutch, low & reverse brake and one-way clutch.

- Perform the test at normal operating fluid temperature 70 to 80°C (158 to 176°F).
- Be sure to allow a 1 minute interval between tests.
- Make three measurements and take the average value.

1) Fully apply the parking brake.
2) Start the engine.
Check the idling speed (A/C OFF).
3) Shift the select lever from “N” to “D” range.
Using a stop watch, measure the time it takes from shifting the lever until the shock is felt.
Time lag: Less than 1.2 seconds
If “N” → “D” time lag is longer than specified:

- Line pressure too low
- Low clutch worn
- One-way clutch not operating properly

4) In the same manner, measure the time lag for “N” → “R”.
Time lag: Less than 1.5 seconds
If “N” → “R” time lag is longer than specified:

- Line pressure too low
- Reverse clutch worn
- Low & reverse brake worn

7. Line Pressure Test

A: MEASUREMENT

NOTE:
If the clutch or the brake shows a sign of slippage or shifting sensation is not correct, the line pressure should be checked.

• Excessive shocks during upshifting or shifting takes place at a higher point than under normal circumstances, may be due to the line pressure being too high.

• Slippage or inability to operate the vehicle may, in most cases, be due to loss of oil pressure for the operation of the clutch, brake or control valve.

1) Line pressure measurement (under no load)
   (1) Before measuring the line pressure, jack-up all wheels.
   (2) Maintain the temperature of ATF at approx. 70 — 80°C (158 — 176°F) during measurement. (ATF will reach the above temperature after idling the engine for approx. 30 minutes with select lever in “N” or “P”.)
2) Line pressure measurement (under heavy load)
   (1) Before measuring the line pressure, apply both foot and parking brakes with all wheels chocked (Same as for “stall” test conditions).
   (2) Measure the line pressure when select lever is in “R”, “2” with engine under stall conditions.
   (3) Measure the line pressure within 5 seconds after shifting the select lever to each position. (If line pressure needs to be measured again, allow the engine to idle, and then stop it to cool down for at least one minute.)
   (4) Maintain the temperature of ATF at approx. 70 — 80°C (158 — 176°F) during measurement (ATF will reach the above temperature after idling the engine for approx. 30 minutes with the select lever in “N” or “P”.)
3) Temporarily attach the ST to a suitable place in the driver's compartment, remove the blind plug located in front of the toe board and pass the hose of the ST to engine compartment.

ST 498575400 OIL PRESSURE GAUGE ASSY

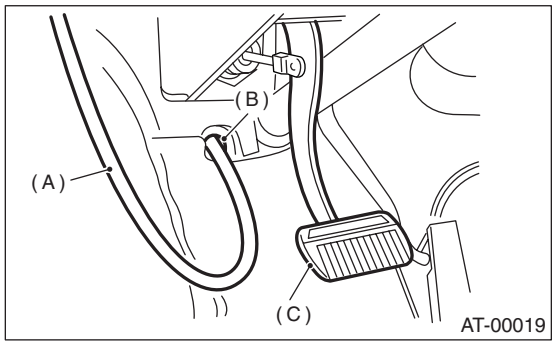

(A) Pressure gauge hose
(B) Hole in toe board (blank cap hole)
(C) Brake pedal

4) Remove the test plug and install the ST instead.
ST 498897200 OIL PRESSURE GAUGE ADAPTER

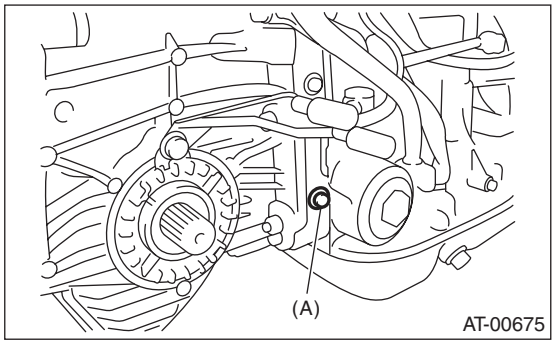

(A) Test plug

5) Connect the ST1 with ST2.
ST1 498897200 OIL PRESSURE GAUGE ADAPTER
ST2 498575400 OIL PRESSURE GAUGE ASSY

6) Check for duty ratio changes by opening and closing the throttle valve using SUBARU Select Monitor.

Standard line pressure			
Range position	Line pressure duty ratio (%)	Throttle position	Line pressure kPa (kg/cm^2, psi)
2	5	Full open	1,128 — 1,304 (11.5 — 13.3, 164 — 189)
R	5	Full open	1,520 — 1,716 (15.5 — 17.5, 220 — 249)
D	95	Full closed	304 — 412 (3.1 — 4.2, 44 — 60)

8. Transfer Clutch Pressure Test

A: INSPECTION

• MPT MODEL

Check the transfer clutch pressure in accordance with the following chart in the same manner as with line pressure. <Ref. to 4AT-37, Line Pressure Test.>

ST 498897700 OIL PRESSURE ADAPTER SET
ST 498575400 OIL PRESSURE GAUGE ASSY

AWD mode: “D” range
FWD mode: “P” range, engine speed 2,000 rpm

If oil pressure is not produced or if it does not change in the AWD mode, the transfer duty solenoid or transfer valve assembly may be malfunctioning. If oil pressure is produced in the FWD mode, the problem is similar to that in the AWD mode.

NOTE:
Before setting in FWD mode, install the spare fuse on FWD mode switch.

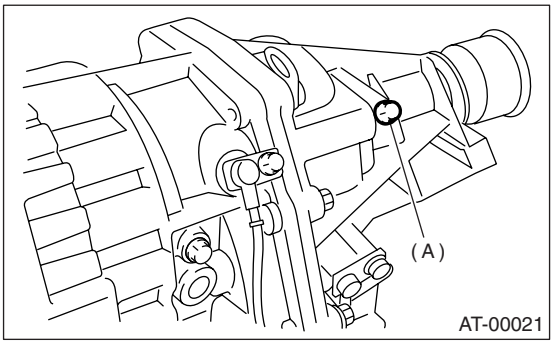

(A) Test plug

Standard transfer clutch pressure kPa (kg/cm^2, psi)			
ON Duty ratio (%)	Throttle position	AWD mode	FWD mode
5	Full open	932 — 1,089 (9.5 — 11.1, 135 — 158)	—
60	2/3 throttle	216 — 294 (2.2 — 3.0, 31 — 43)	—
95	Full closed	—	0 (0, 0)

• VTD MODEL

Check transfer clutch pressure using the following chart. <Ref. to 4AT-37, Line Pressure Test.>

ST 498897700 OIL PRESSURE ADAPTER SET
ST 498575400 OIL PRESSURE GAUGE ASSY

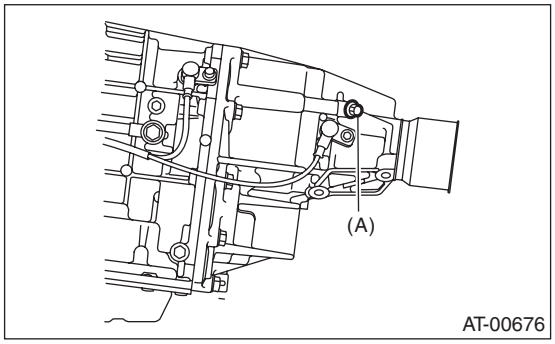

(A) Test plug

Duty ratio (%)	Throttle opening angle	Standard of transfer clutch pressure kPa (kg/cm^2, psi)
95	Fully open	932 — 1,089 (9.5 — 11.1, 135 — 158)
60	2/3 open	216 — 294 (2.2 — 3.0, 33 — 43)

9. Automatic Transmission Assembly

A: REMOVAL

1) Set the vehicle on a lift.
2) Open the front hood fully, and support it with stay.
3) Disconnect the battery ground cable.
4) Remove the air intake duct. (Non-turbo model)
<Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
5) Remove the air cleaner case or air intake chamber. (Non-turbo model)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
6) Remove the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
7) Remove the air cleaner case stay. (Non-turbo model)

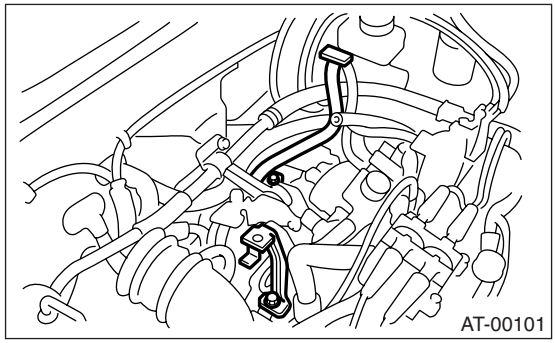

8) Disconnect the following connectors.
(1) Transmission harness connector

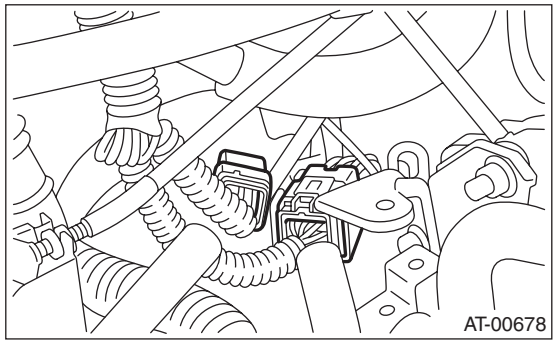

(2) Transmission ground terminal
9) Remove the starter.
2.0 L Non-turbo and 2.5 L models
<Ref. to SC(H4SO)-7, REMOVAL, Starter.>
2.0 L Turbo model
<Ref. to SC(H4SO)-7, REMOVAL, Starter.>
10) Remove the pitching stopper.

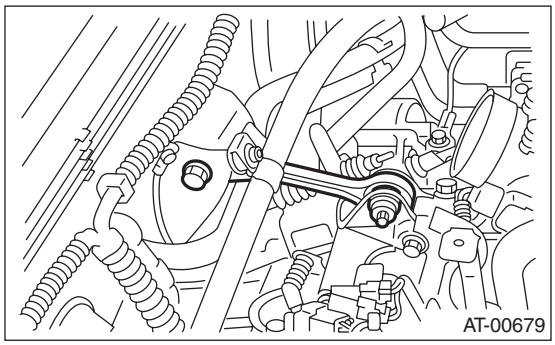

11) Separate the torque converter clutch from drive plate.
(1) Remove the service hole plug.
(2) Remove the bolts which hold torque converter clutch to drive plate.
(3) While rotating the engine, remove the other bolts using ST.

CAUTION:
Be careful not to drop the bolts into torque converter clutch housing.

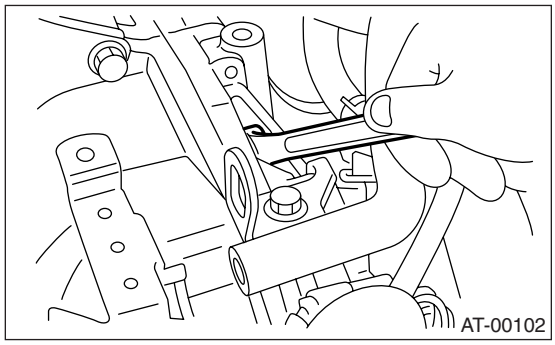

12) Install the ST to torque converter clutch case.
ST 498277200 STOPPER SET

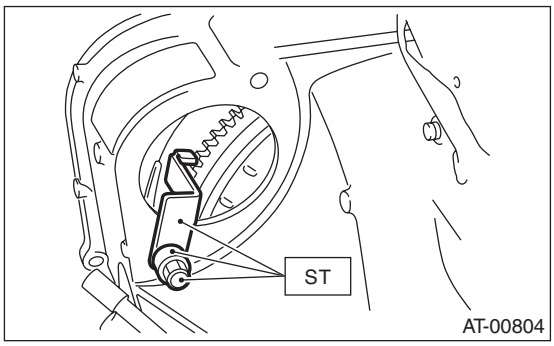

13) Remove the ATF level gauge.

NOTE:
Plug the opening to prevent an entry of foreign particles into transmission fluid.

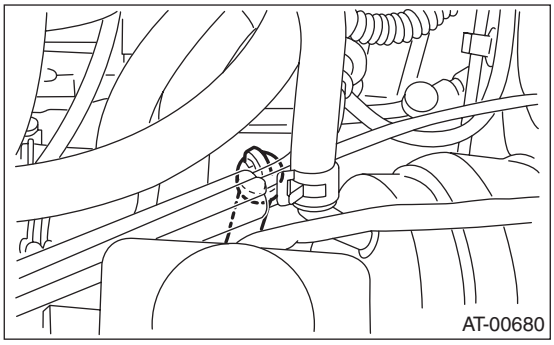

14) Set the ST.
ST 41099AA000 ENGINE SUPPORT ASSY

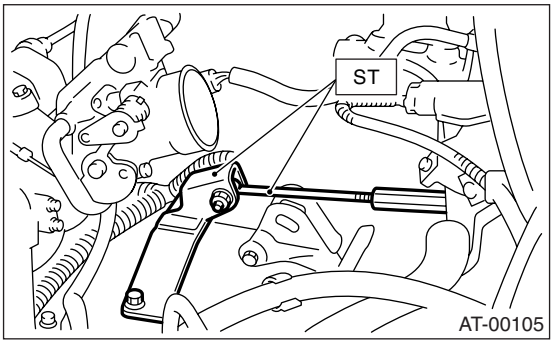

15) Remove the bolt which holds the right upper side of transmission to engine.

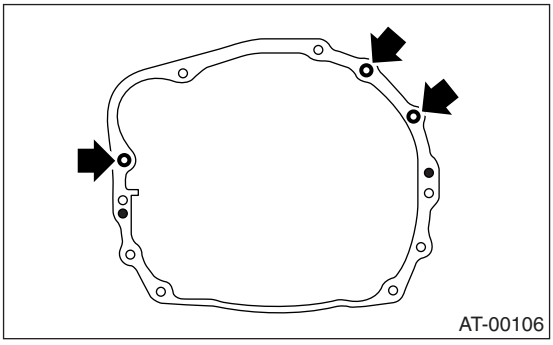

16) Lift-up the vehicle.
17) Remove the under cover.
18) Remove the front, center and rear exhaust pipe, and muffler. (Non-turbo model)
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
19) Remove the center and rear exhaust pipes, and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
20) Remove the heat shield cover. (If equipped)

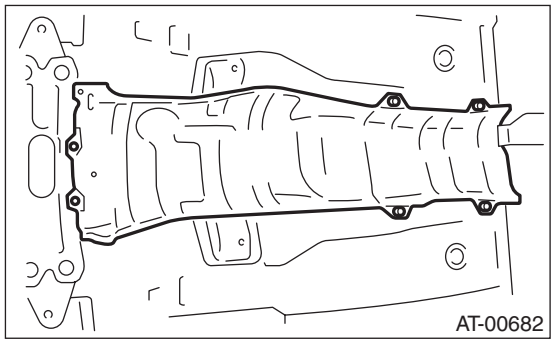

21) Drain ATF to remove the ATF drain plug.

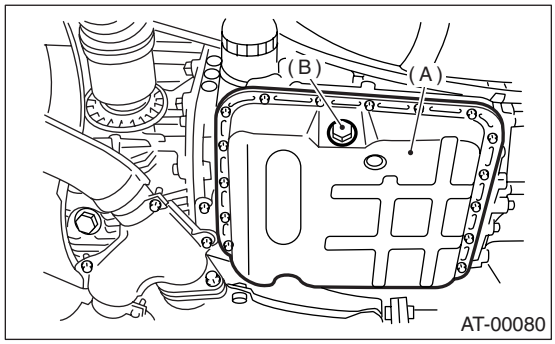

(A) Oil pan
(B) Drain plug

22) Disconnect the ATF cooler hoses from pipes of transmission side, and remove the ATF level gauge guide.

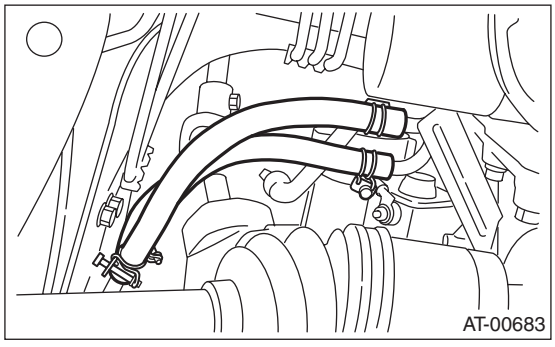

23) Remove the propeller shaft.
<Ref. to DS-15, REMOVAL, Propeller Shaft.>
24) Remove the shift select cable. <Ref. to CS-13, REMOVAL, Select Cable.>
25) Disconnect the stabilizer link from transverse link.

26) Remove the bolt securing ball joint of transverse link to housing.

- WAGON MODEL

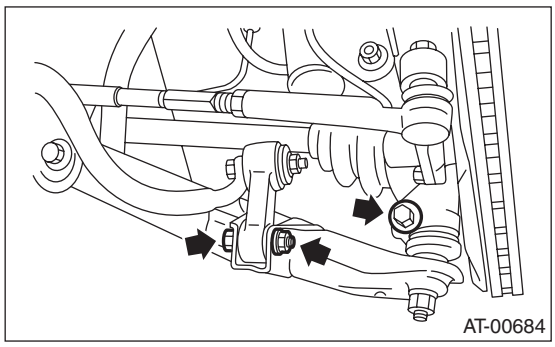

- SEDAN MODEL

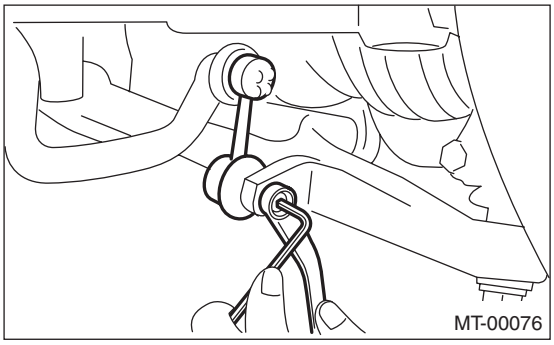

27) Remove the spring pins and separate the front drive shafts from each side of transmission.

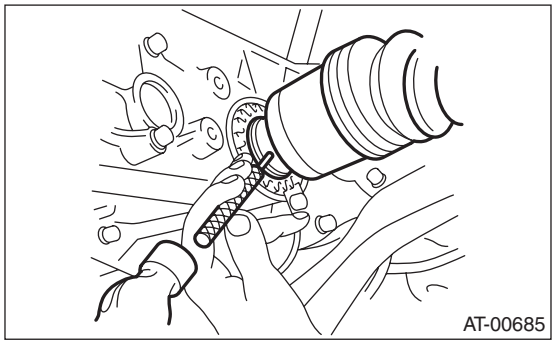

28) Remove the nuts which hold the lower side of transmission to engine.

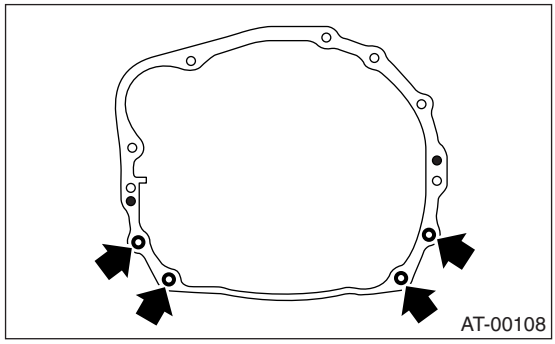

29) Place the transmission jack under transmission.

NOTE:
Make sure that the support plates of transmission jack don't touch the oil pan.

30) Remove the transmission rear crossmember from vehicle.

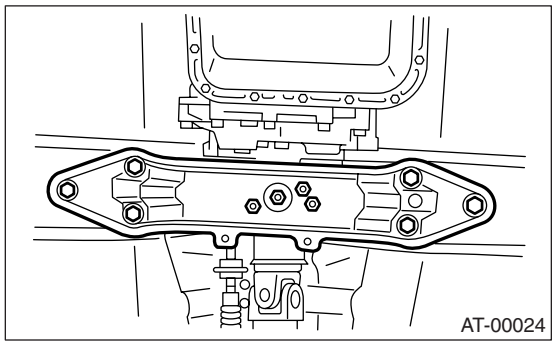

31) Remove the transmission.

CAUTION:
Move the transmission and torque converter as a unit away from engine.

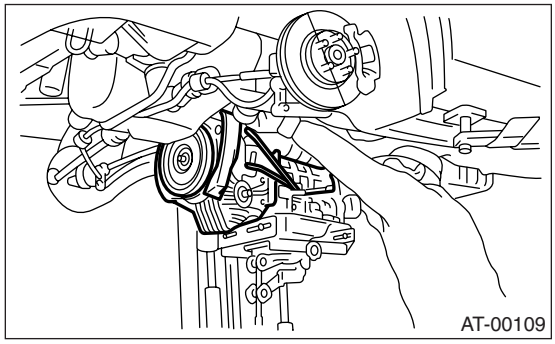

32) Separate the transmission assembly and rear cushion rubber.

B: INSTALLATION

1) Install the rear cushion rubber to transmission assembly.

Tightening torque:
39 N·m (4.0 kgf-m, 29 ft-lb)

2) Install the ST to torque converter clutch case.
ST 498277200 STOPPER SET

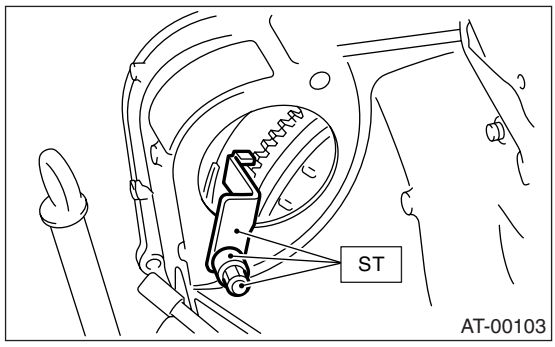

3) Install the transmission onto engine.
(1) Gradually raise the transmission with transmission jack.

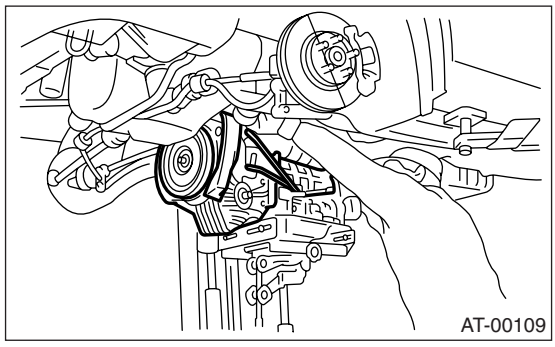

(2) Engage them at splines.

4) Install the transmission rear crossmember.

Tightening torque:
T1: 35 N·m (3.6 kgf-m, 26 ft-lb)
T2: 70 N·m (7.1 kgf-m, 51 ft-lb)

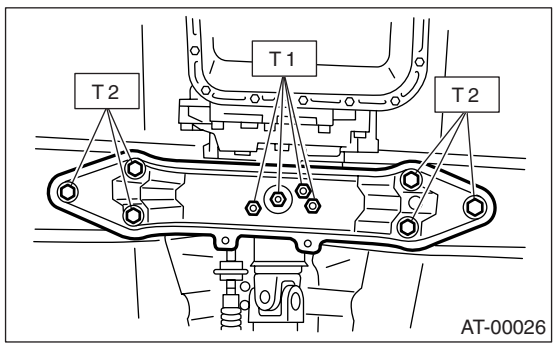

5) Take off the transmission jack.

6) Tighten the nuts and bolts which hold the lower side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

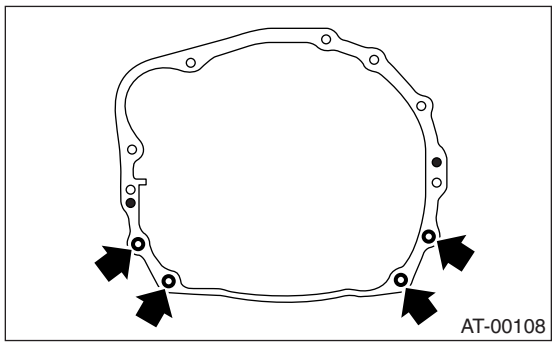

7) Lower the vehicle.

8) Connect the engine and transmission.
(1) Remove the ST from torque converter clutch case.

NOTE:
Be careful not to drop the ST into torque converter clutch case when removing ST.
ST 498277200 STOPPER SET

(2) Install the starter.
<Ref. to SC(H4SO)-7, INSTALLATION, Starter.>

(3) Tighten the bolt which holds the right upper side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

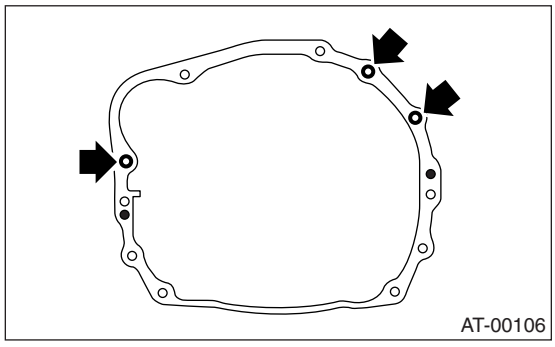

9) Install the torque converter clutch to drive plate.
(1) Tighten the bolts which hold the torque converter clutch to drive plate.
(2) Tighten the other bolts while rotating the engine by using ST.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

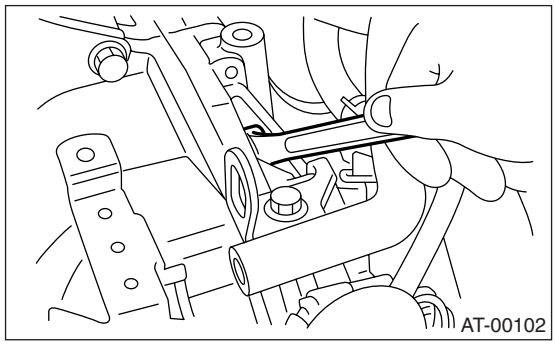

(3) Clog the plug onto service hole.
10) Remove the ST.

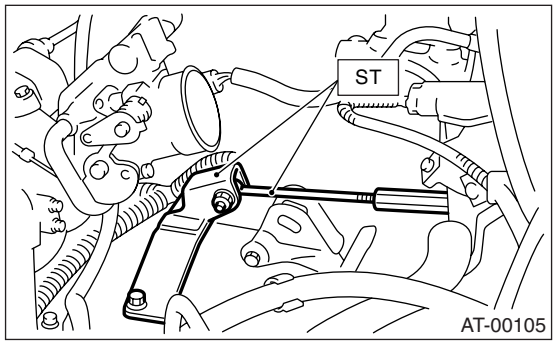

11) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

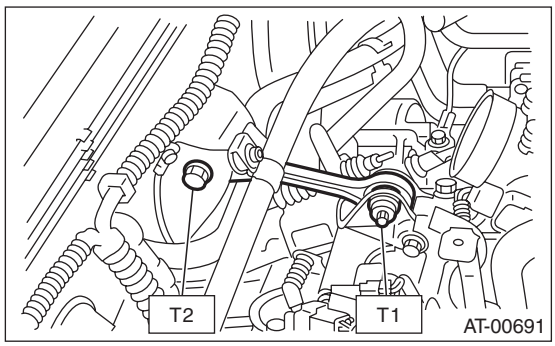

12) Lift-up the vehicle.
13) Install the front drive shafts into transmission.
(1) Lift-up the vehicle.
(2) Install the front drive shaft into transmission.
(3) Drive a new drive spring pin into chamfered hole of drive shaft.

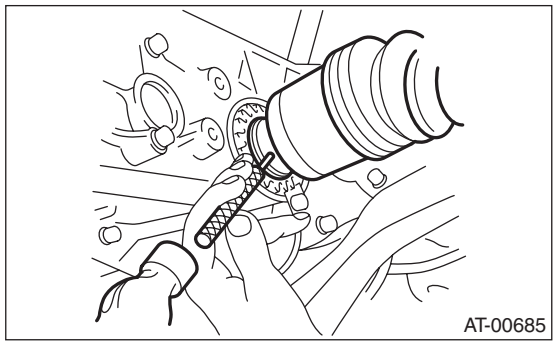

14) Install the ball joint into housing.
15) Connect the stabilizer link to transverse link, and tighten the bolts. (Wagon model)

NOTE:
Discard the loosened self-locking nut and replace with a new one.

Tightening torque:
T1: 30 N·m (3.1 kgf-m, 22.4 ft-lb)
T2: 50 N·m (5.1 kgf-m, 37 ft-lb)

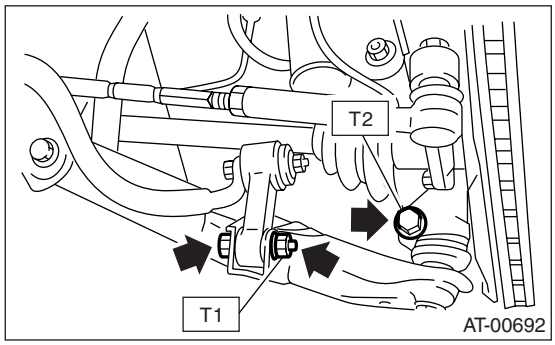

16) Tighten the installing bolts. (Wagon model)

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

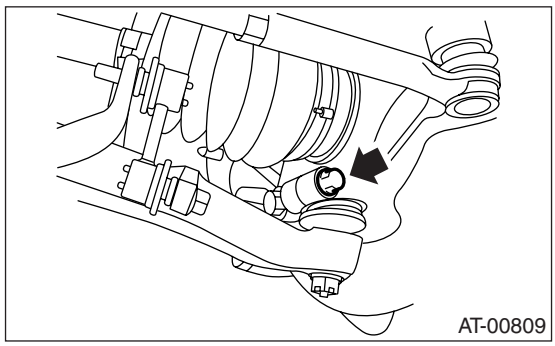

17) Install the stabilizer link to transverse link. (Sedan model)

Tightening torque:
45 N·m (4.6 kgf-m, 33.2 ft-lb)

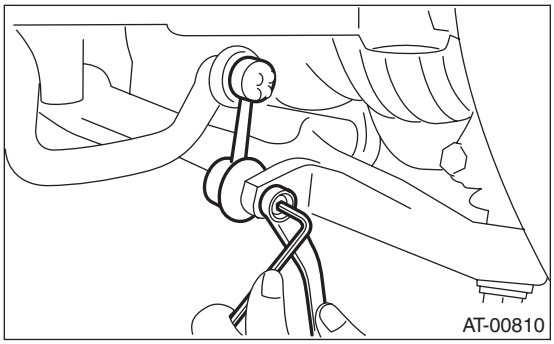

18) Install the shift select cable onto select lever.
<Ref. to CS-14, INSTALLATION, Select Cable.>
19) Install the ATF level gauge guide, and connect the ATF cooler hoses to pipe.

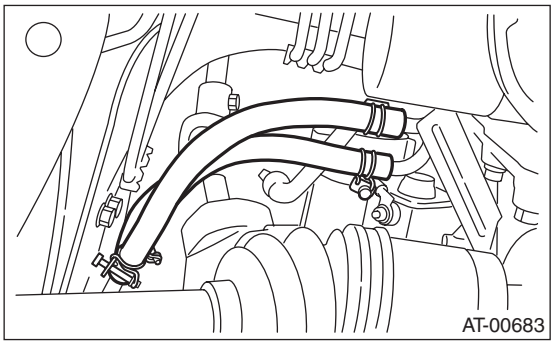

20) Install the propeller shaft.
<Ref. to DS-16, INSTALLATION, Propeller Shaft.>
21) Install the heat shield cover. (If equipped)

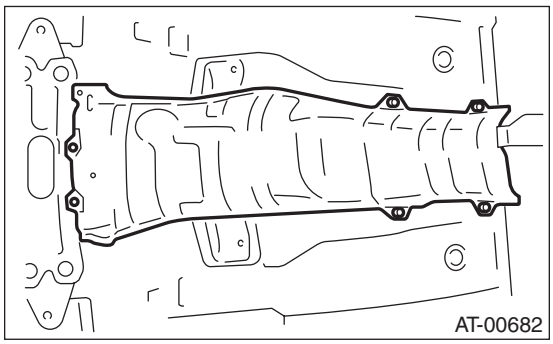

22) Install the rear exhaust pipe and muffler assembly.
Non-turbo model
<Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
2.0 L Turbo model
<Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
23) Install the front and center exhaust pipe. (Non-turbo model)
<Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>
24) Install the center exhaust pipe. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>
25) Install the under cover.
26) Lower the vehicle.
27) Install the ATF level gauge.

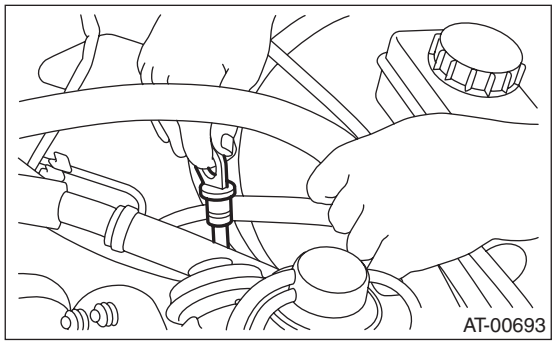

28) Connect the following connectors.
(1) Transmission harness connectors
(2) Transmission ground terminal
29) Connect the cruise control cable (With cruise control vehicles).
30) Install the air cleaner case stay.

Tightening torque:
16 N·m (1.6 kgf-m, 11.6 ft-lb)

31) Install the air cleaner case or air intake chamber. (Non-turbo model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
32) Install the air intake duct. (Non-turbo model)
<Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
33) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
34) Connect the battery ground cable.
35) Fill ATF up to the middle of the “COLD” side on level gauge by using the gauge hole. <Ref. to 4AT-31, Automatic Transmission Fluid.>
36) Take off the vehicle from lift arms.
37) Check select lever operation.
<Ref. to 4AT-48, INSPECTION, Inhibitor Switch.>
38) Check the ATF level. <Ref. to 4AT-31, Automatic Transmission Fluid.>
39) Check the road test.
<Ref. to 4AT-33, Road Test.>

10.Transmission Mounting System

A: REMOVAL

1. PITCHING STOPPER

1) Disconnect the ground cable from battery.
2) Remove the air cleaner case. (2.0 L Non-turbo model)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
3) Remove the intercooler. (2.0 L Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
4) Remove the pitching stopper.

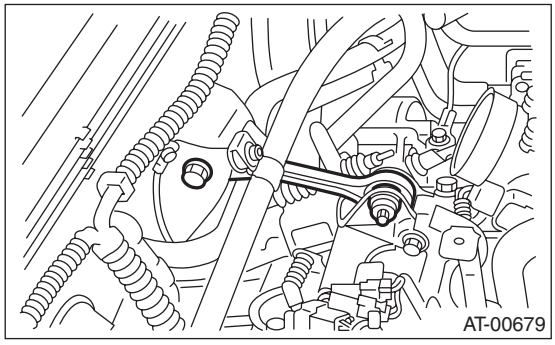

2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

1) Disconnect the ground cable from battery.
2) Jack-up the vehicle and support it with sturdy racks.
3) Remove the front, center, rear exhaust pipes and muffler. (Non-turbo model)
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
4) Remove the center and rear exhaust pipes, and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
5) Remove the heat shield cover. (If equipped)
6) Set the transmission jack under the transmission. Make sure that the support plates of transmission jack don't touch the oil pan.
7) Remove the transmission rear crossmember.

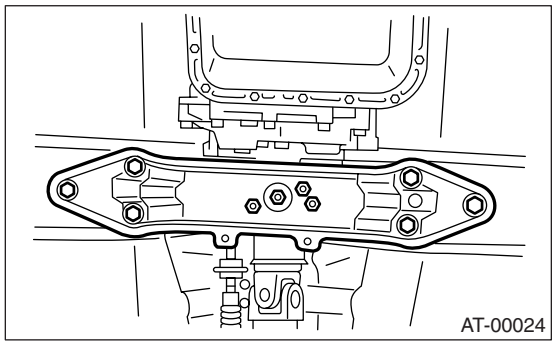

8) Remove the rear cushion rubber.

B: INSTALLATION

1. PITCHING STOPPER

1) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

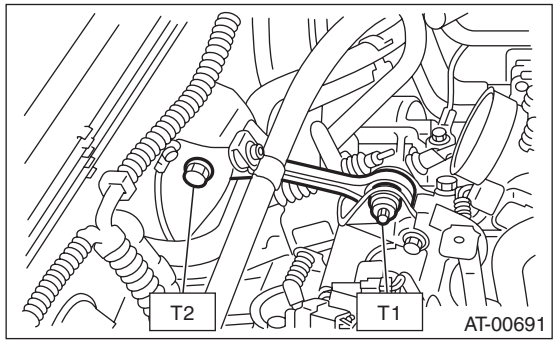

2) Install the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
3) Remove the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

1) Install the rear cushion rubber.

Tightening torque:
39 N·m (4.0 kgf-m, 29 ft-lb)

2) Install the crossmember.

Tightening torque:
T1: 35 N·m (3.6 kgf-m, 26 ft-lb)
T2: 70 N·m (7.1 kgf-m, 51 ft-lb)

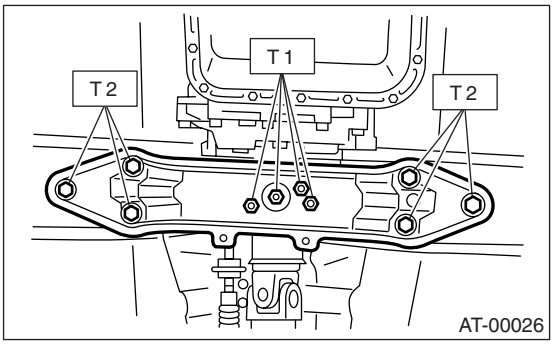

3) Remove the transmission jack.
4) Install the heat shield cover. (If equipped)
5) Install the front, center, rear exhaust pipes and the muffler. (Non-turbo model)
<Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, INSTALLATION, Muffler.>
6) Install center and rear exhaust pipes, and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>

C: INSPECTION

Repair or replace parts if the results of the inspection below are not satisfactory.

1. PITCHING STOPPER

Make sure that the pitching stopper is not bent or damaged. Make sure that the rubber is not stiff, cracked, or otherwise damaged.

2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

Make sure that the crossmember is not bent or damaged. Make sure that the cushion rubber is not stiff, cracked, or otherwise damaged.

11.Extension Case Oil Seal

A: INSPECTION

Make sure the ATF does not leak from the joint of transmission and propeller shaft. If so, replace the oil seal. <Ref. to 4AT-47, REPLACEMENT, Extension Case Oil Seal.>

B: REPLACEMENT

1) Clean the transmission exterior.
2) Drain the ATF completely.

NOTE:
Tighten the ATF drain plug after draining the ATF.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

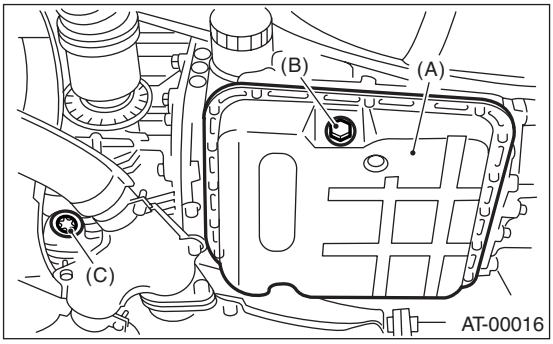

(A) Oil pan
(B) Drain plug
(C) Differential oil drain plug

3) Remove the rear exhaust pipe and muffler.
Non-turbo model
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.> or <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
Turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
4) Remove the heat shield cover. (If equipped)
5) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
6) Using the ST, remove the oil seal.
ST 398527700 PULLER ASSY
7) Using the ST, install the oil seal.
ST 498057300 INSTALLER
8) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
9) Install the heat shield cover. (If equipped)
10) Install the rear exhaust pipe and muffler.
Non-turbo model
<Ref. to EX(H4SOw/oOBD)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, INSTALLATION, Muffler.> or <Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
Turbo model
<Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
11) Pour ATF and check the ATF level. <Ref. to 4AT-31, Automatic Transmission Fluid.>

12.Inhibitor Switch

A: INSPECTION

When the driving condition or starter motor operation is erroneous, first check the shift linkage for improper operation. If the shift linkage is functioning properly, check the inhibitor switch.

1) Disconnect the inhibitor switch connector.

2) Check continuity in inhibitor switch circuits with the select lever moved to each position.

NOTE:

• Also check that continuity in ignition circuit does not exist when the select lever is in “R”, “D”, “3”, “2” and “1” ranges.

• If the inhibitor switch is inoperative, check for poor contact of connector on transmission side.

	Position	Pin No.
Signal sent to TCM	P	4 — 3
	R	4 — 2
	N	4 — 1
	D	4 — 8
	3	4 — 7
	2	4 — 6
	1	4 — 5
Ignition circuit	P/N	12 — 11
Back-up light circuit	R	10 — 9

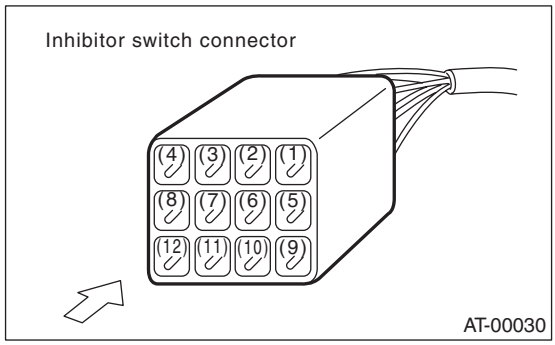

3) Check if there is continuity at equal points when the select lever is turned 1.5° in both directions from “N” range.

If there is continuity in one direction and the continuity in the other or if there is continuity at unequal points, adjust the inhibitor switch. <Ref. to 4AT-49, ADJUSTMENT, Inhibitor Switch.>

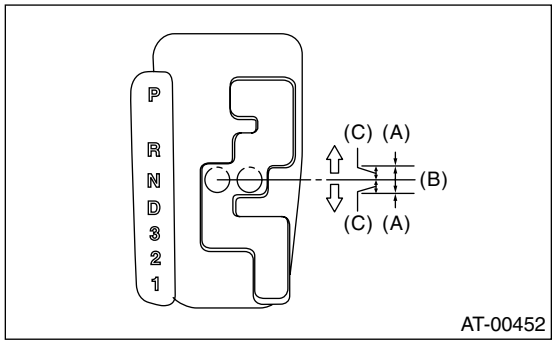

(A) Continuity does not exist.
(B) Continuity exists.
(C) 1.5°

• MODEL WITH SPORT SHIFT

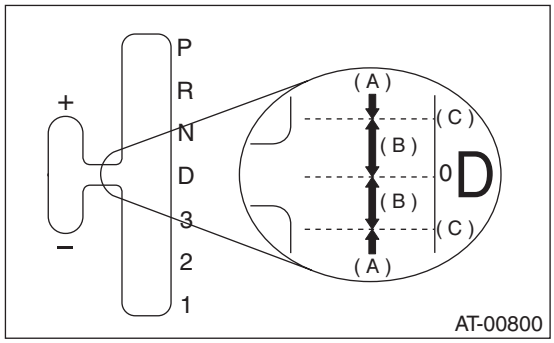

(A) Continuity does not exist.
(B) Continuity exists.
(C) 1.5°

4) Repeat the above checks. If there are abnormalities, adjust the select cable. <Ref. to CS-15, ADJUSTMENT, Select Cable.>

B: ADJUSTMENT

1) Shift the select lever to “N” range.
2) Loosen the three inhibitor switch securing bolts.
3) Insert the ST as vertical as possible into the holes in inhibitor switch lever and switch body.
ST 499267300 STOPPER PIN

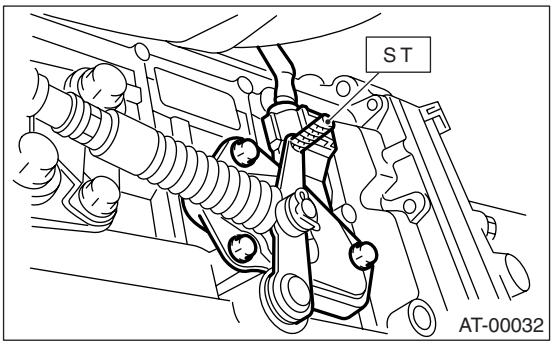

4) Tighten the three inhibitor switch bolts.

Tightening torque:
3.5 N·m (0.35 kgf-m, 2.5 ft-lb)

5) Repeat the above checks. If the inhibitor switch is determined to be “faulty”, replace it.

C: REMOVAL

1) Set up the vehicle on a lift.
2) Move the select lever to “N” range.
3) Remove the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
4) Remove the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
5) Disconnect the inhibitor switch connector.

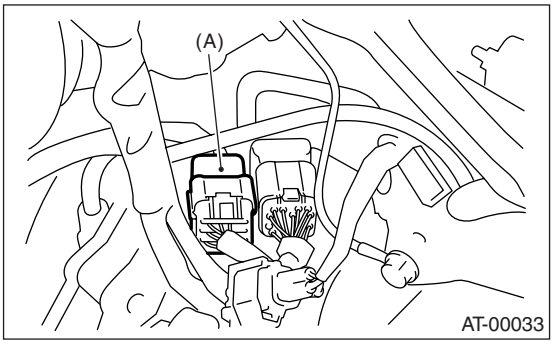

(A) Inhibitor switch

6) Remove the inhibitor switch connector from stay.
7) Lift-up the vehicle.
8) Remove the front and center exhaust pipes.
<Ref. to EX(H4SOw/oOBD)-6, REMOVAL, Front Exhaust Pipe.> or <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
9) Remove the snap pin and washer from range select lever.

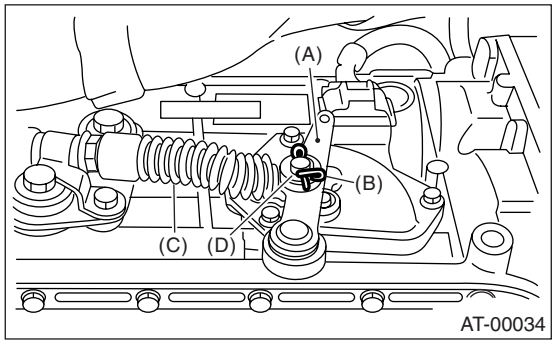

(A) Snap pin
(B) Select cable
(C) Range select lever
(D) Washer

10) Remove the plate assembly from transmission case.

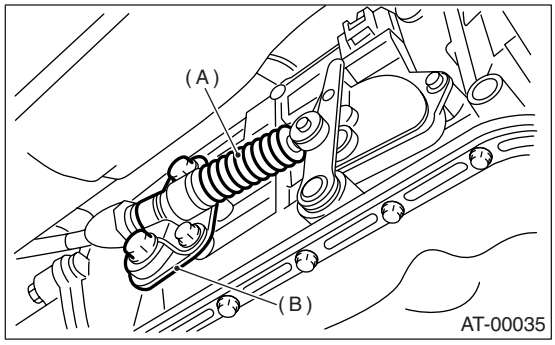

(A) Select cable
(B) Plate ASSY

11) Remove the bolts.

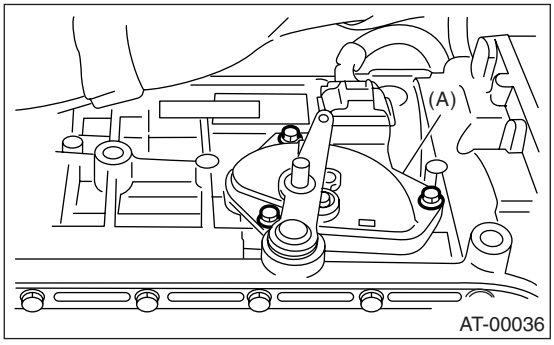

(A) Inhibitor switch

12) Move the range select lever to parking position (left side).

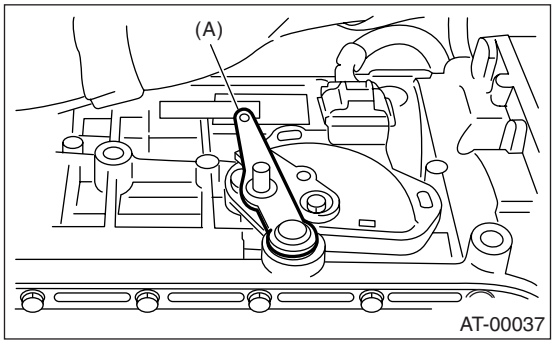

(A) Range select lever

13) Remove the inhibitor switch from transmission.

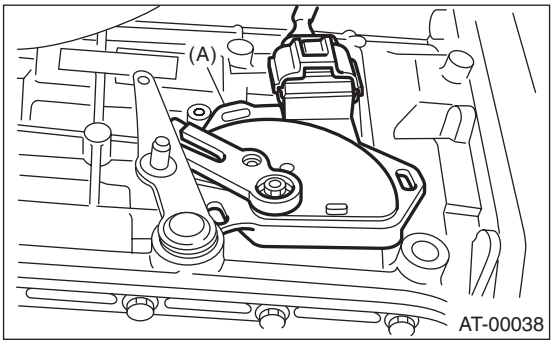

(A) Inhibitor switch

14) Disconnect the inhibitor switch harness connector from inhibitor switch.

D: INSTALLATION

1) Connect the inhibitor switch harness connector to inhibitor switch.
2) Install the inhibitor switch to transmission case.

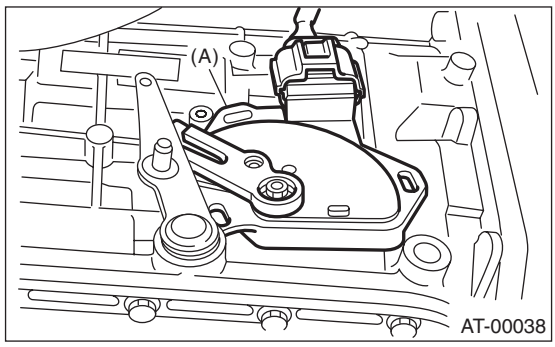

(A) Inhibitor switch

3) Move the range select lever to neutral position.

4) Using the ST, tighten the bolts of inhibitor switch.
ST 499267300STOPPER PIN

Tightening torque:
3.5 N·m (0.36 kgf-m, 2.6 ft-lb)

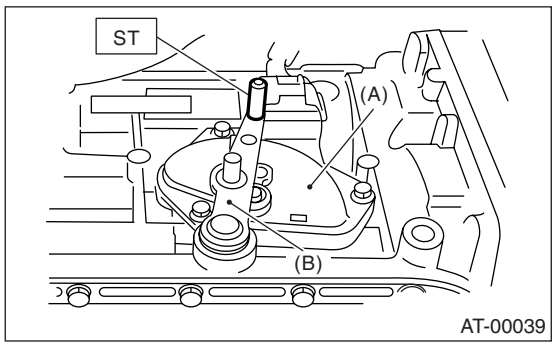

(A) Inhibitor switch
(B) Range select lever

5) Install the select cable to range select lever.
6) Install the plate assembly to transmission.

Tightening torque:
T: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

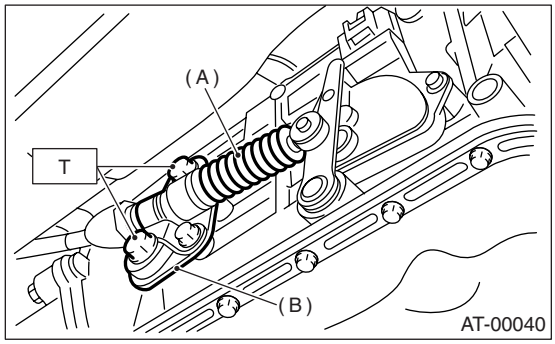

(A) Select cable
(B) Plate ASSY

7) Install the washer and snap pin to range select lever.

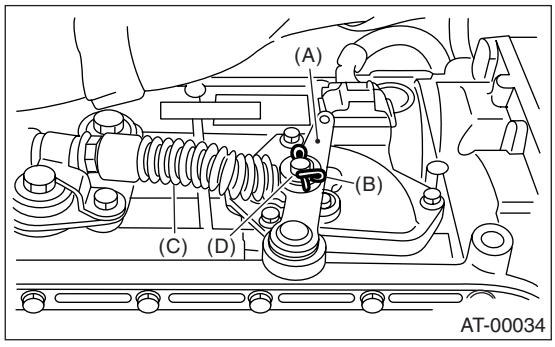

(A) Snap ring
(B) Select cable
(C) Range select lever
(D) Washer

8) Install the front and center exhaust pipes. (Non-turbo model)
<Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.> or <Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>
9) Install the center exhaust pipe. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>
10) Lower the vehicle.
11) Install the inhibitor switch connector from stay.
12) Connect the inhibitor switch connector.

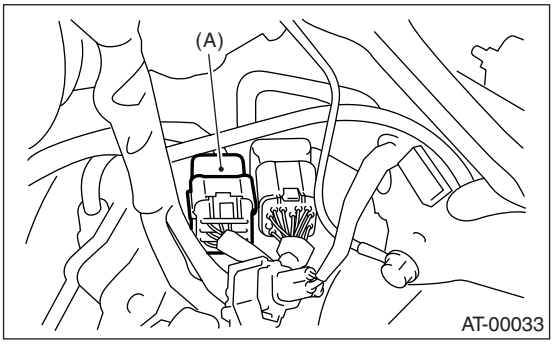

(A) Inhibitor switch

13) Install the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
14) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
15) Inspect the inhibitor switch. <Ref. to 4AT-48, INSPECTION, Inhibitor Switch.>

13.Front Vehicle Speed Sensor

A: REMOVAL

1) Set up the vehicle on a lift.
2) Disconnect the ground cable from battery.

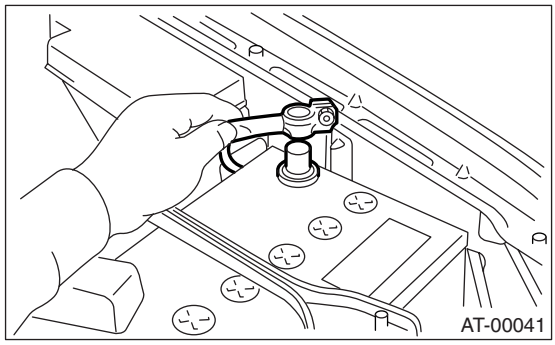

3) Remove the air cleaner case. (Non-turbo model) <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
4) Remove the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
5) Disconnect the transmission connector.

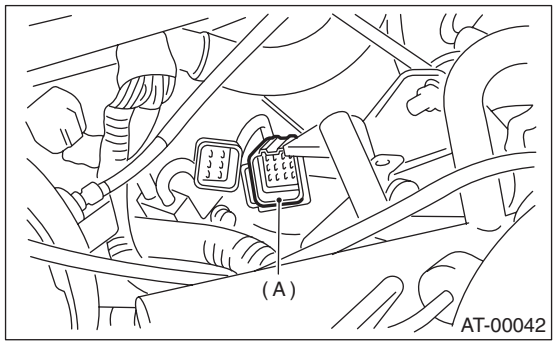

(A) Transmission connector

6) Remove the pitching stopper. <Ref. to 4AT-45, REMOVAL, Transmission Mounting System.>
7) Remove the transmission connector from stay.
8) Lift-up the vehicle.
9) Clean the transmission exterior.
10) Drain the ATF completely.

NOTE:
Tighten the ATF drain plug after draining the ATF.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

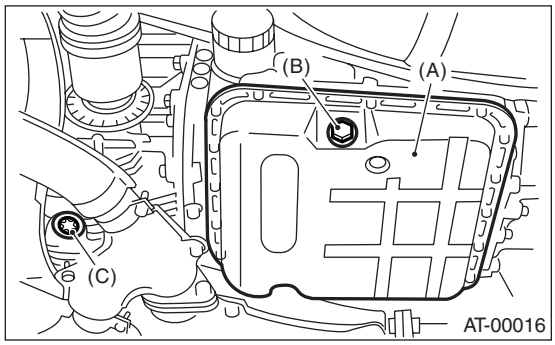

(A) Oil pan
(B) Drain plug
(C) Differential oil drain plug

11) Remove the front, center, exhaust pipes and muffler. (Non-turbo model)
<Ref. to EX(H4SOw/oOBD)-6, REMOVAL, Front Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.> or <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
12) Remove the center, rear exhaust pipe and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
13) Remove the shield cover. (If equipped)
14) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
15) Place the transmission jack under transmission.

NOTE:
Make sure that the support plates of transmission jack don't touch the crossmember.

16) Remove the transmission rear crossmember bolts.

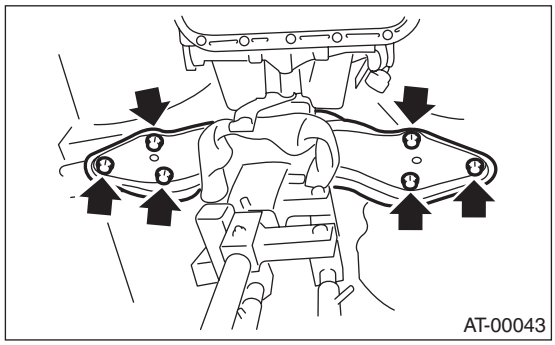

17) Lower the AT jack.

NOTE:
Do not separate the AT jack and transmission.

18) Remove the oil cooler inlet and outlet pipe.

NOTE:
When removing the outlet pipe, be careful not to lose balls and springs used with retaining screws.

19) Remove the front and rear vehicle speed sensor and torque converter turbine speed sensor.

• Front vehicle speed sensor and torque converter turbine speed sensor

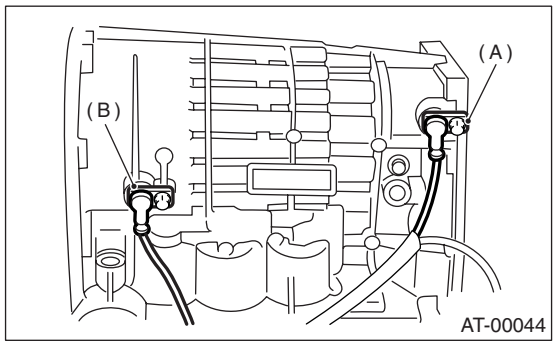

(A) Front vehicle speed sensor
(B) Torque converter turbine speed sensor

• Rear vehicle speed sensor

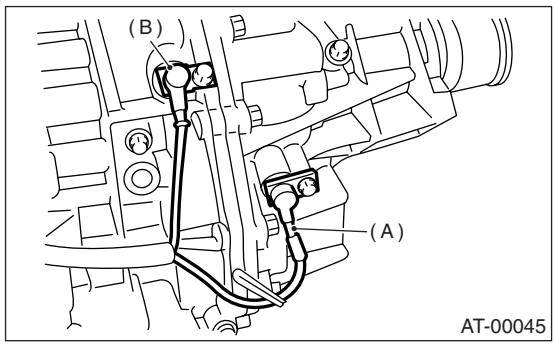

(A) Rear vehicle speed sensor
(B) Front vehicle speed sensor

20) Remove the oil pan.

21) Remove the duty solenoid connectors and ATF temperature sensor. Remove the connectors from clip and disconnect the connectors.

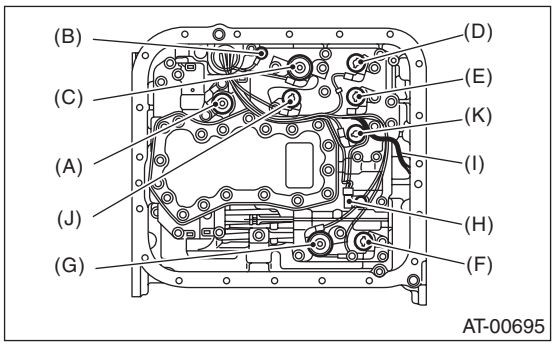

(A) Lock-up duty solenoid (Blue)
(B) Transmission ground
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) ATF temperature sensor
(I) Transfer duty solenoid (Brown)
(J) Low clutch timing solenoid (Gray)

22) Remove the harness assembly.

B: INSTALLATION

1) Pass the harness assembly through the hole in the transmission case.

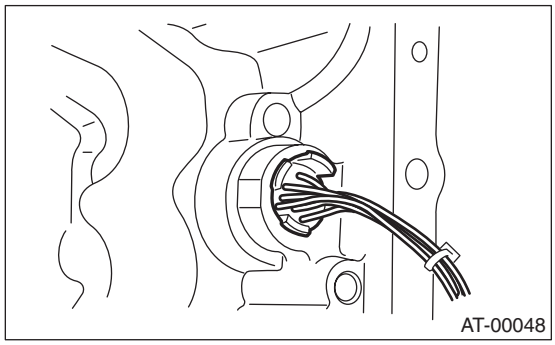

2) Connect the harness connectors.
Connect the connectors of same color, and secure the connectors to valve body using clips.

Tightening torque (Transmission ground cable)
8 N·m (0.8 kgf-m, 5.8 ft-lb)

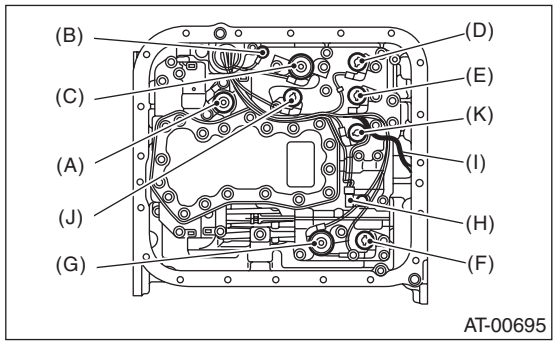

(A) Lock-up duty solenoid (Blue)
(B) Transmission ground
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) ATF temperature sensor
(I) Transfer duty solenoid (Brown)
(J) Low clutch timing solenoid (Gray)

3) Apply proper amount of liquid gasket to the entire oil pan mating surface.

Fluid packing:
THREE BOND 1217B (Part No. K0877YA020)

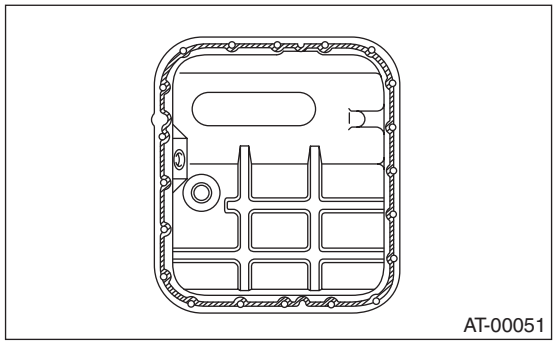

4) Apply liquid gasket fully to three holes other than screw holes on transmission case.

Fluid packing:
THREE BOND 1217B (Part No. K0877YA020)

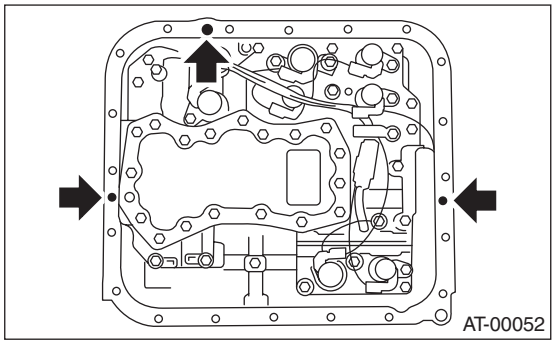

5) Install the oil pan.

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

6) Install the front and rear vehicle speed sensor, and also the torque converter turbine speed sensor, and then fasten the harness.

Tightening torque:
7 N·m (0.7 kgf-m, 5.1 ft-lb)

7) Install the oil cooler pipes.

NOTE:
Be sure to use a new copper washer.

Tightening torque:
T1: 44 N·m (4.5 kgf-m, 32.5 ft-lb)
T2: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

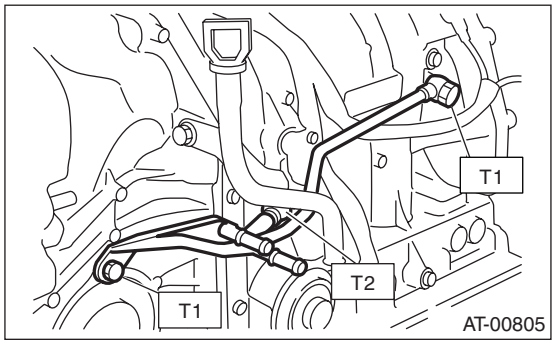

8) Install the transmission rear crossmember bolts.

Tightening torque:
70 N·m (7.1 kgf-m, 51 ft-lb)

9) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
10) Install the shield cover. (If equipped)

11) Install the front, center, rear exhaust pipes and muffler. (Non-turbo model)
<Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>, <Ref. to EX(H4SOw/oOBD)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, INSTALLATION, Muffler.> or <Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
12) Install the center, rear exhaust pipes and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
13) Lower the vehicle.
14) Install the transmission connector to the stay.
15) Install the pitching stopper. <Ref. to 4AT-45, INSTALLATION, Transmission Mounting System.>
16) Install the air cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
17) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

14.Rear Vehicle Speed Sensor

A: REMOVAL

When removing the rear vehicle speed sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-52, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

When installing the rear vehicle speed sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-53, INSTALLATION, Front Vehicle Speed Sensor.>

15. Torque Converter Turbine Speed Sensor

A: REMOVAL

When removing the torque converter turbine speed sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-52, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

When installing the torque converter turbine speed sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-53, INSTALLATION, Front Vehicle Speed Sensor.>

16.Control Valve Body

A: REMOVAL

1) Lift-up the vehicle.
2) Clean the transmission exterior.
3) Drain the ATF completely.

NOTE:
• Tighten the ATF drain plug after draining the ATF.
• Replace the gasket with a new one.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

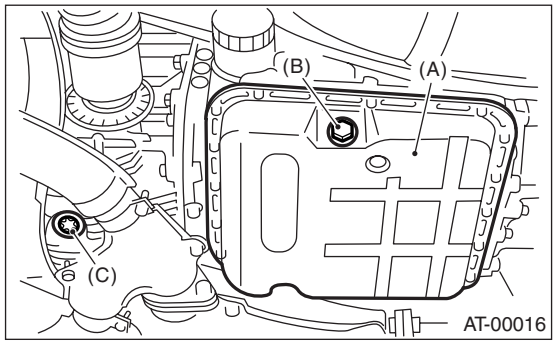

(A) Oil pan
(B) Drain plug
(C) Differential oil drain plug

4) Remove the oil pan.
5) Remove and clean the magnet.
6) Remove the old gasket on the oil pan and transmission case completely.
7) Remove the pipe. (Turbo model)

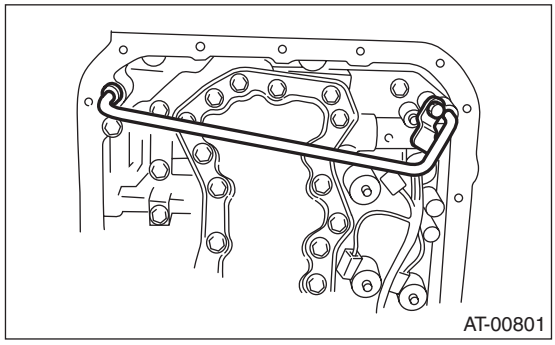

8) Disconnect each solenoid connector and remove ATF temperature sensor from control valve.

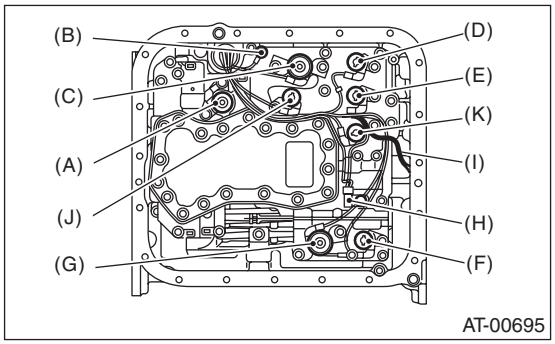

(A) Lock-up duty solenoid (Blue)
(B) Transmission ground
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) ATF temperature sensor
(I) Transfer duty solenoid (Brown)
(J) Low clutch timing solenoid (Gray)
(K) Sport shift solenoid (Beige) (if equipped)

9) Remove the control valve.

NOTE:
When removing the control valve body, be careful not to interfere with transfer duty solenoid wiring.

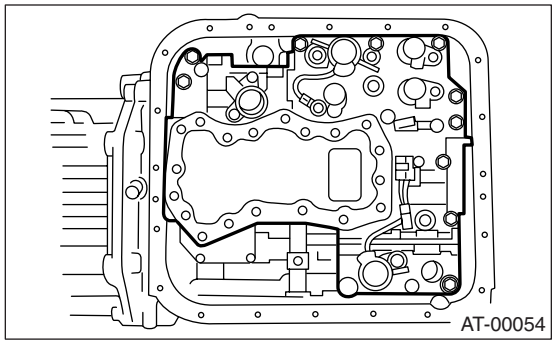

B: INSTALLATION

1) Set the range select lever in “N” range.
2) Install the control valve, ATF temperature sensor and ground connectors.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

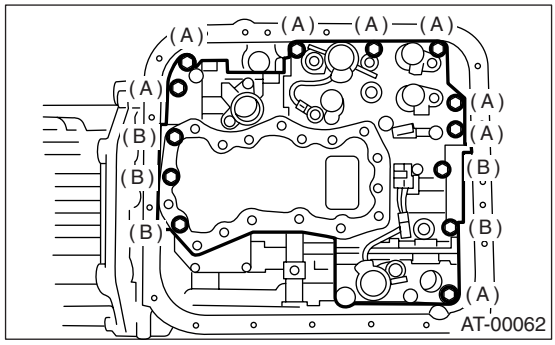

Bolt length mm (in)
(A) 30 (1.18)
(B) 55 (2.17)

3) Connect all connectors.

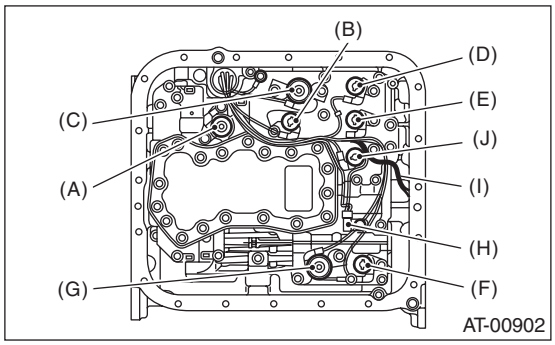

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) ATF temperature sensor
(I) Transfer duty solenoid (Brown)
(J) Sport shift solenoid (Beige) (if equipped)

4) Install the pipe. (Turbo model)

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

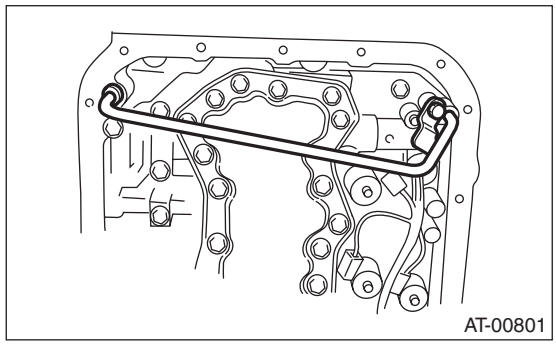

5) Attach the magnet at specified position.

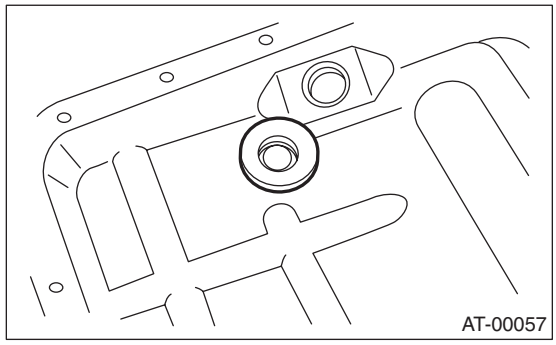

6) Apply proper amount of liquid gasket to the entire oil pan mating surface.

Liquid gasket:
THREE BOND 1217B (Part No. K0877YA020)

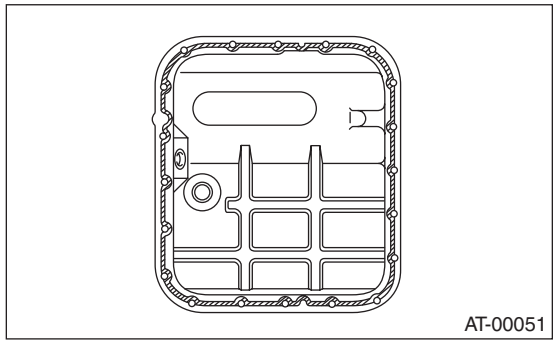

7) Apply liquid gasket fully to three holes other than screw holes on transmission case.

Liquid gasket:
THREE BOND 1217B (Part No. K0877YA020)

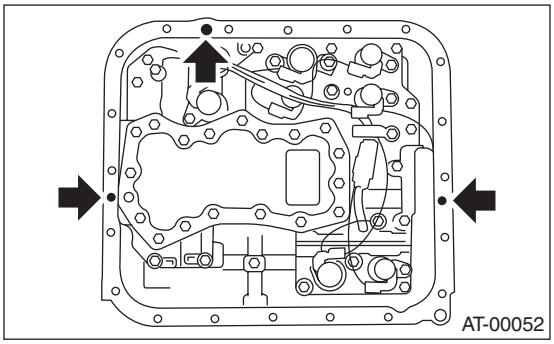

8) Install the oil pan.

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

9) Pour ATF into the oil charge pipe.

Recommended fluid:
SUBARU ATF

Fluid capacity:
Fill the same amount of fluid drained from drain plug hole.

10) Check the level of ATF.
<Ref. to 4AT-31, Automatic Transmission Fluid.>

C: DISASSEMBLY

1) Remove oil strainer from lower control valve body.

NOTE:
Arrange the removed bolts in good order to assemble in the same place as disassembly, because the bolts length are different.

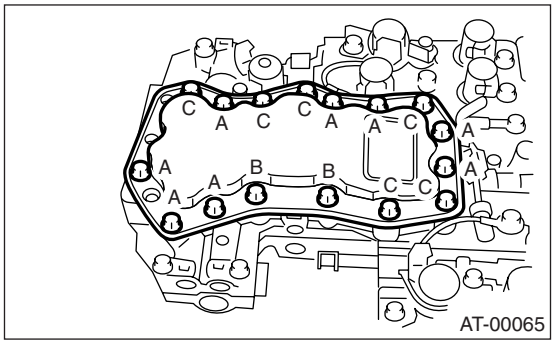

(A) Short bolt
(B) Middle bolt
(C) Long bolt

2) Remove the duty solenoids, solenoids and sensor from the lower valve body.

NOTE:
Arrange the removed bolts in good order to assemble in the same place as disassembly, because the bolts length are different.

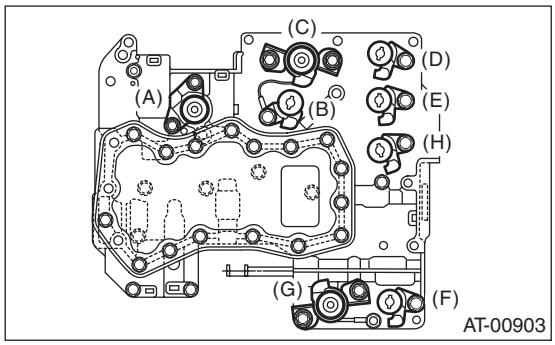

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 1 (Yellow)
(E) Shift solenoid 2 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) Sport shift solenoid (Beige) (if equipped)

3) Remove the upper-lower valve body tightening bolts.

NOTE:
Arrange the removed bolts in good order to assemble in the same place as disassembly, because the bolts length are different.

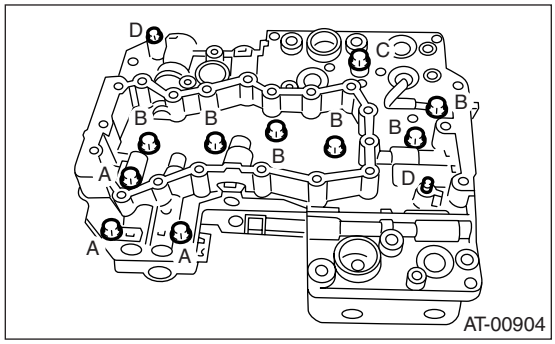

4) Remove the lower valve body.

5) Remove the oil filter and plate.

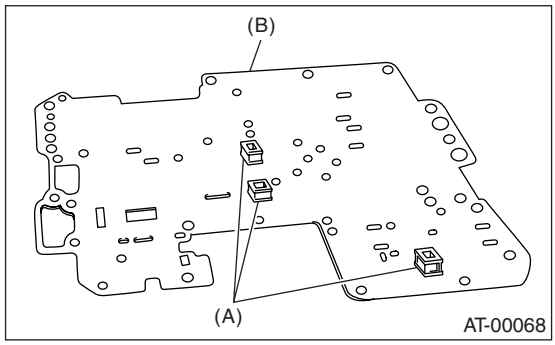

(A) Oil filter
(B) Plate

6) Remove six steel balls from middle valve body.

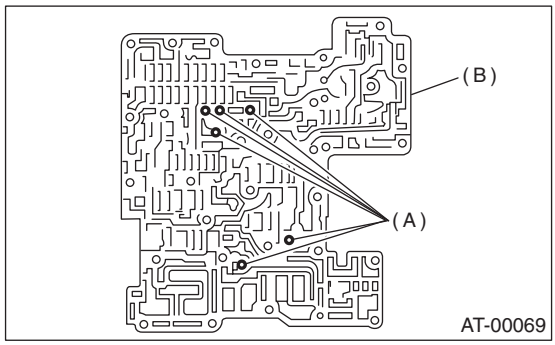

(A) Steel ball
(B) Middle valve body

7) Remove the middle valve body.
8) Remove upper separator plate from middle valve body.

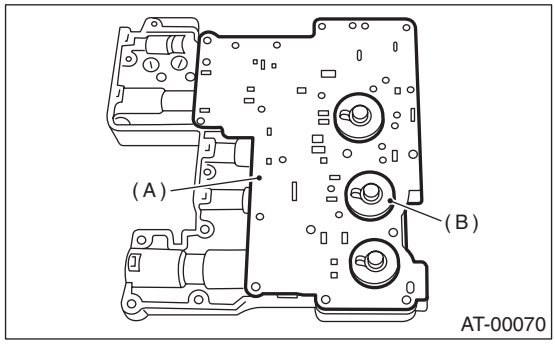

(A) Upper separator plate
(B) Side plate

9) Remove valve springs and four steel balls from upper valve body.
10) Place a shop cloth to the piston removal hole.
11) Using an air compressor, apply air slowly to each piston hole and remove the pistons.

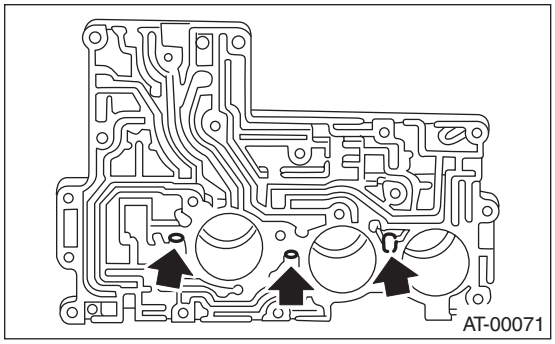

12) Remove the seal ring from piston.

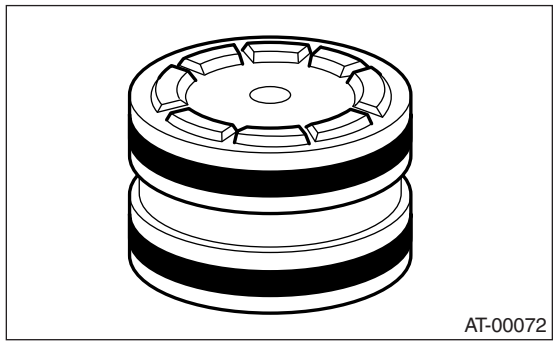

D: ASSEMBLY

1) Install a new seal ring to piston.

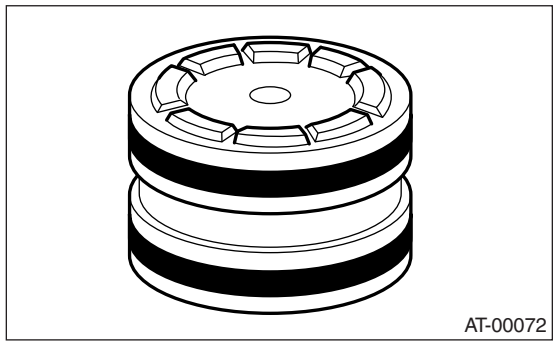

2) Apply ATF to the seal ring.
3) Insert the piston fully into upper valve body.

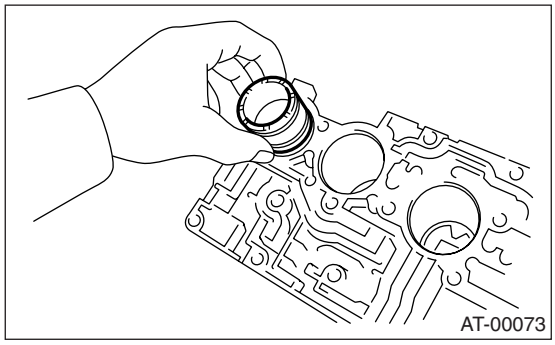

4) Install the spring and four steel balls to specified positions of upper valve body.

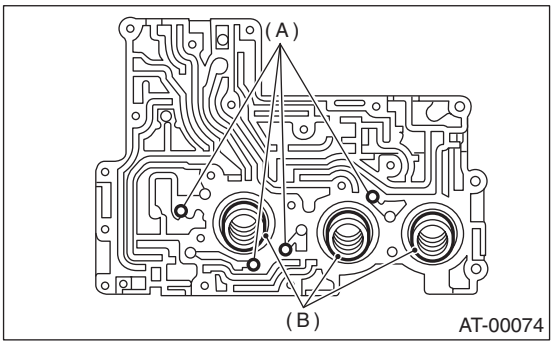

(A) Steel ball
(B) Spring

5) Align the hole in side plate with the hole in separator plate, and then install support plate and upper separator plate to middle valve body.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

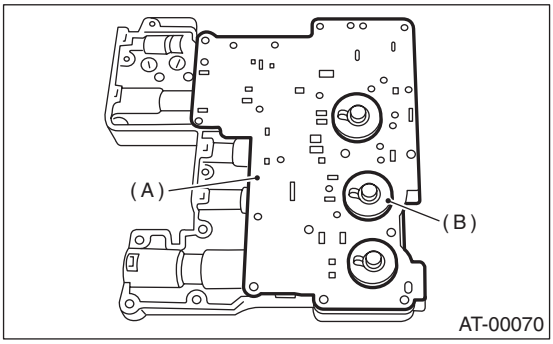

(A) Upper separator plate
(B) Side plate

6) Insert six steel balls in their proper positions to middle valve body.

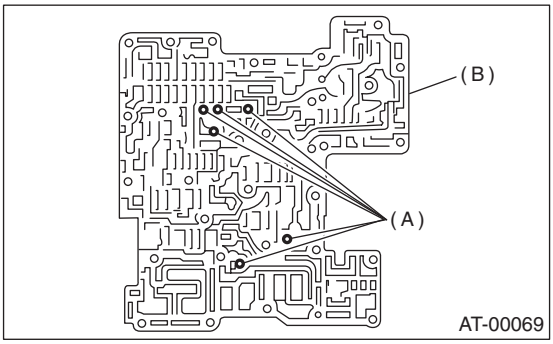

(A) Steel ball
(B) Middle valve body

7) Install three filters to lower valve body.

NOTE:
Pay attention to the location of filters.

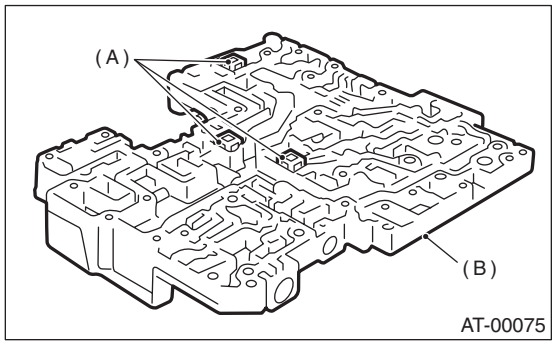

(A) Strainer
(B) Lower valve body

8) Install lower separate plate to lower valve body.

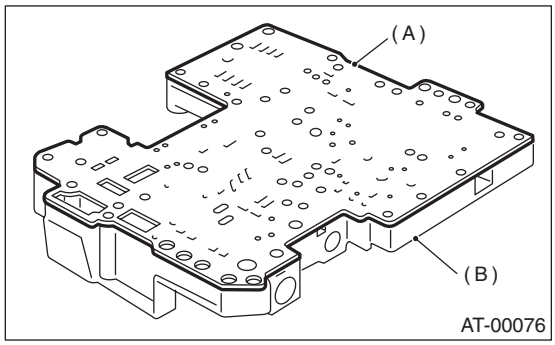

(A) Lower separator plate
(B) Lower valve body

9) Temporarily assemble valve body.

NOTE:
Be careful not to drop the middle valve body and upper body interior steel ball, or the lower body filter.

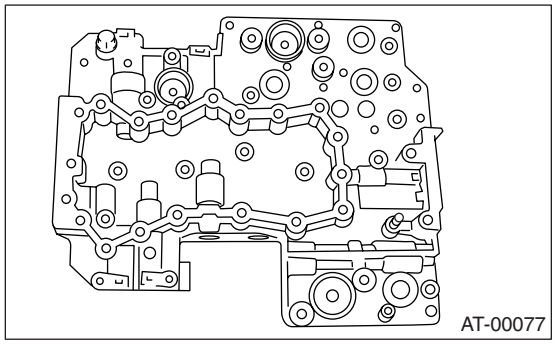

10) Tighten bolts.

NOTE:
Install the bolts (D) from upper valve body side.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

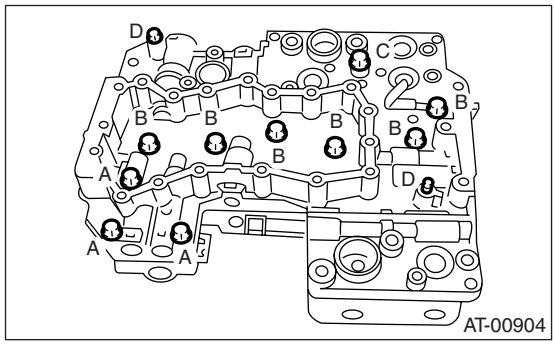

Bolt length mm (in)
(A) 40 (1.57)
(B) 62 (2.44)
(C) 73 (2.87)
(D) 79 (3.11)

11) Install the sensor, solenoids and duty solenoids to specified positions.

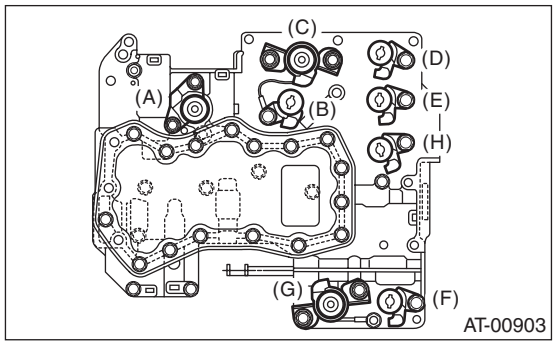

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 1 (Yellow)
(E) Shift solenoid 2 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) SPORT shift solenoid (Beige) (if equipped)

12) Tighten the bolts and nuts.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

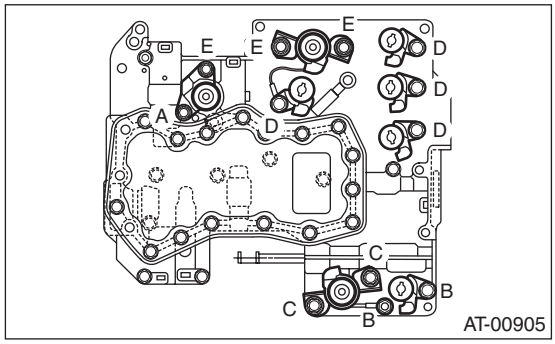

Bolt length mm (in)
(A) 12 (0.47)
(B) 40 (1.57)
(C) 45 (1.77)
(D) 62 (2.44)
(E) 73 (2.87)

13) Install oil strainer to lower valve body.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

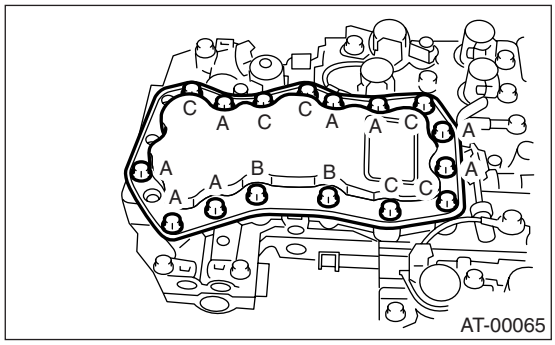

Bolt length mm (in)
(A) 12 (0.47)
(B) 62 (2.44)
(C) 81 (3.19)

E: INSPECTION

Make sure that each component is free of harmful gouges, cuts, or dust.

17.Shift Solenoids, Duty Solenoids and ATF Temperature Sensor

A: REMOVAL

1. SHIFT SOLENOIDS AND DUTY SOLENOIDS

1) Lift-up the vehicle.
2) Clean the transmission exterior.
3) Replace the gasket with a new one, and tighten the drain plug.
4) Drain the ATF completely.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

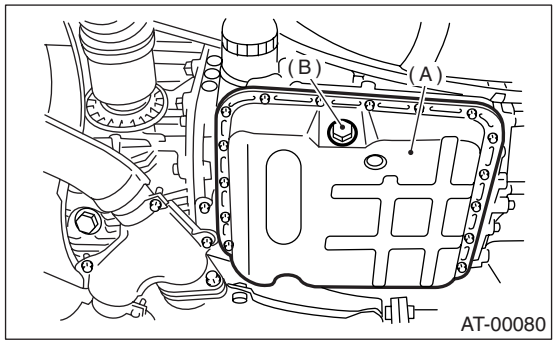

(A) Oil pan
(B) Drain plug

5) Remove the oil pan.
6) Disconnect the solenoid and duty solenoid connectors.

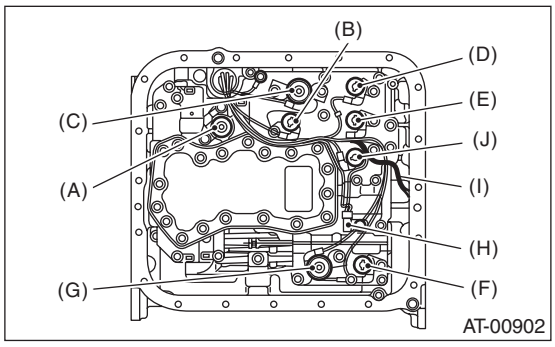

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) Sport shift solenoid (Beige) (if equipped)

7) Remove the solenoids and duty solenoids.

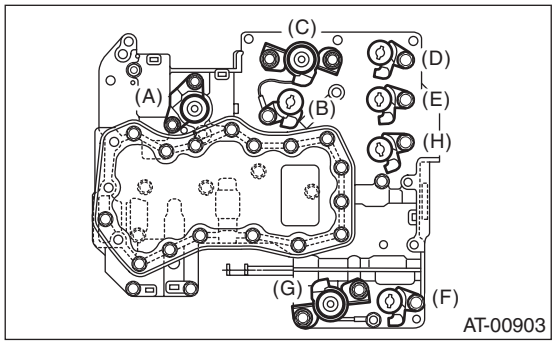

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) SPORT shift solenoid (Beige) (if equipped)

2. ATF TEMPERATURE SENSOR

For removal of ATF temperature sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-52, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

1. SHIFT SOLENOIDS AND DUTY SOLENOIDS

1) Insert solenoid and duty solenoid to specified position.

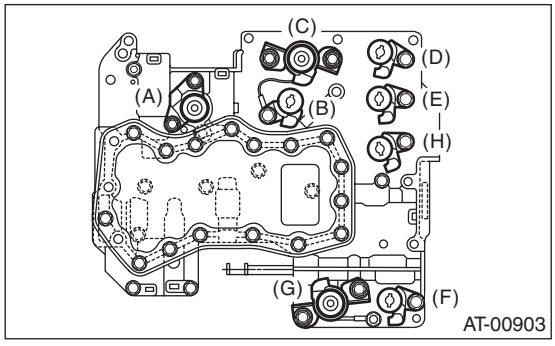

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) SPORT shift solenoid (Beige) (if equipped)

2) Tighten the bolts and nuts.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

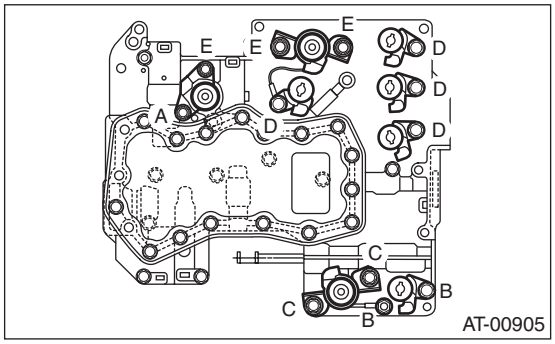

Bolt length mm (in)
(A) 12 (0.47)
(B) 40 (1.57)
(C) 45 (1.77)
(D) 62 (2.44)
(E) 73 (2.87)

3) Connect the harness connectors.
Connect the connectors of same color, and secure the connectors to valve body using clips.

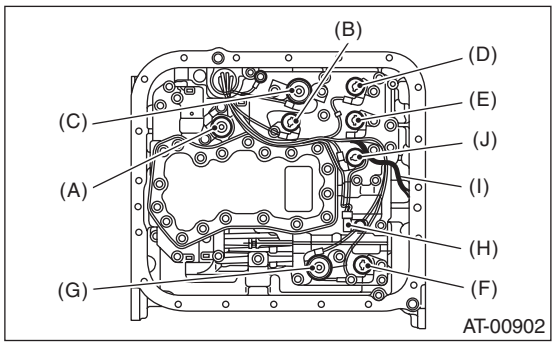

(A) Lock-up duty solenoid (Blue)
(B) Low clutch timing solenoid (Gray)
(C) Line pressure duty solenoid (Red)
(D) Shift solenoid 2 (Yellow)
(E) Shift solenoid 1 (Green)
(F) 2-4 brake timing solenoid (Black)
(G) 2-4 brake duty solenoid (Red)
(H) ATF temperature sensor
(I) Transfer duty solenoid (Brown)
(J) SPORT shift solenoid (Beige) (if equipped)

4) Apply proper amount of liquid gasket to the entire oil pan mating surface.

Fluid packing:
THREE BOND 1217B (Part No. K0877YA020)

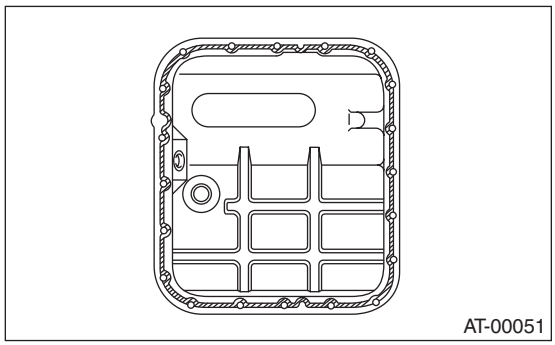

5) Apply liquid gasket fully to three holes other than screw holes on transmission case.

Fluid packing:
THREE BOND 1217B (Part No. K0877YA020)

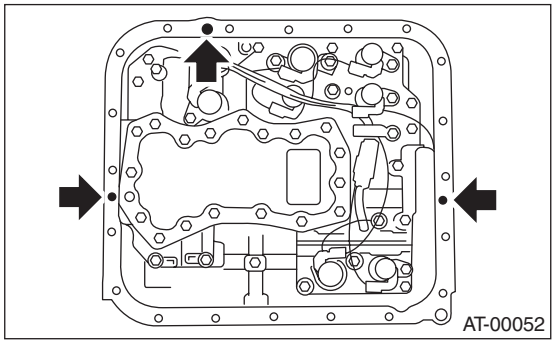

6) Install the oil pan.

Tightening torque:
5 N·m (0.5 kgf-m, 3.6 ft-lb)

7) Fill ATF up to the middle of the “COLD” side on level gauge by using the gauge hole. <Ref. to 4AT-31, Automatic Transmission Fluid.>
8) Check the ATF level. <Ref. to 4AT-31, Automatic Transmission Fluid.>

2. ATF TEMPERATURE SENSOR

For installation of ATF temperature sensor, refer to “Front Vehicle Speed Sensor.” <Ref. to 4AT-53, INSTALLATION, Front Vehicle Speed Sensor.>

18. Transfer Duty Solenoid and Valve Body

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Remove the air cleaner case. (2.0 L Non-turbo and 2.5 L models)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
4) Remove intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
5) Remove the pitching stopper.

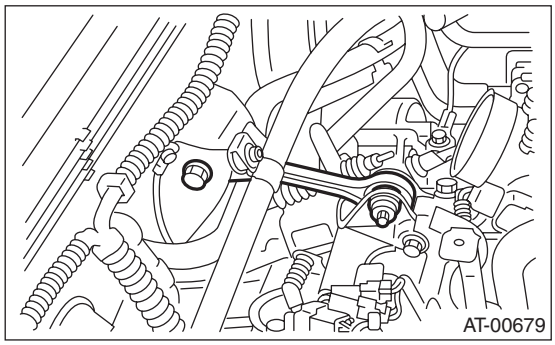

6) Remove the front exhaust pipe with center exhaust pipe. (Non-turbo model)
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
7) Remove center exhaust pipe. (Turbo model)
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
8) Remove the rear exhaust pipe and muffler. (Non-turbo model)
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
(Turbo model)
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
9) Raise the vehicle and drain the ATF.

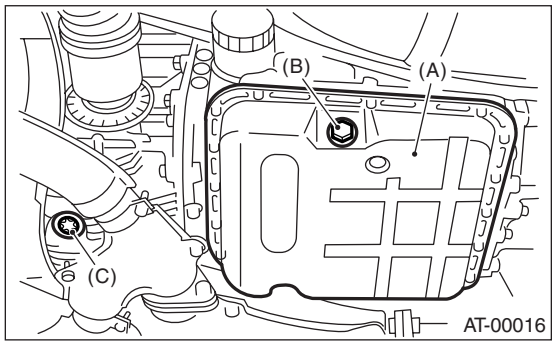

(A) Oil pan
(B) Drain plug
(C) Deferential oil drain plug

10) Remove the heat shield cover. (If equipped)
11) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
12) Remove the transmission rear crossmember.
(1) Support the transmission using a transmission jack and raise slightly.
(2) Remove the bolts and nuts as shown in the figure.

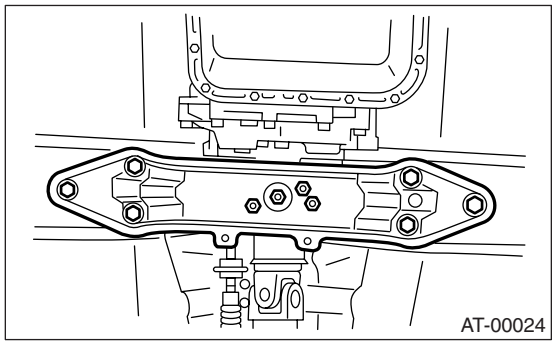

13) Remove the rear vehicle speed sensor.

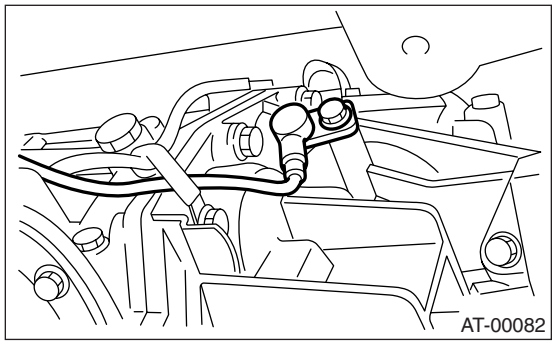

14) Remove the select cable nut.

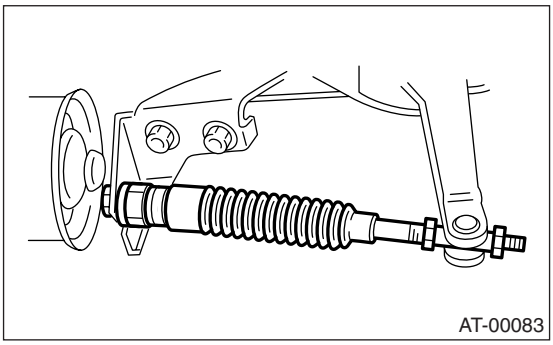

15) Move the gear select cable so that extension bolts can be removed.
16) Remove the bolts.
17) Remove the extension case.

NOTE:
Use a container to catch oil flowing from extension.

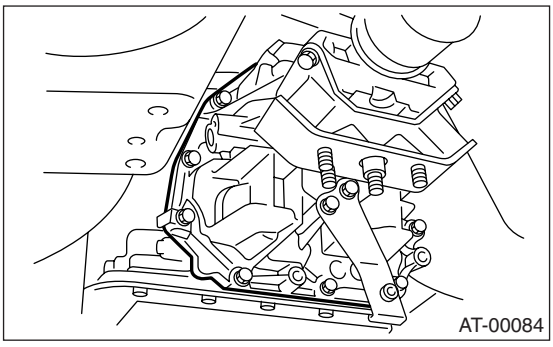

18) Disconnect the transfer duty solenoid connector.
19) Remove the transfer duty solenoid and transfer valve body.

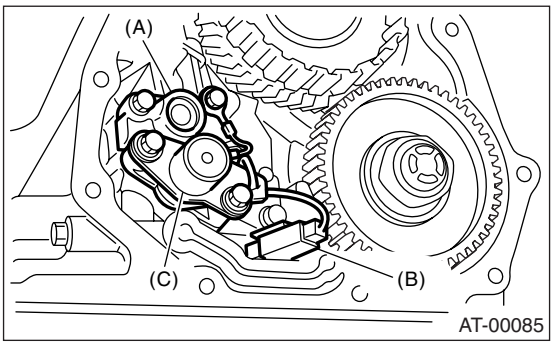

(A) Transfer valve body
(B) Transfer duty solenoid connector
(C) Transfer duty solenoid

B: INSTALLATION

1) Install the transfer duty solenoid and transfer valve body.
(1) Install the transfer duty solenoid and transfer valve body.

Tightening torque:
T: 8 N·m (0.8 kgf-m, 5.8 ft-lb)

(2) Connect the transfer duty solenoid connector.

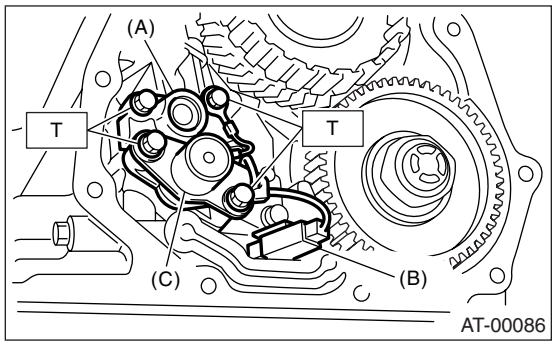

(A) Transfer valve body
(B) Transfer duty solenoid connector
(C) Transfer duty solenoid

2) Install a new gasket and the extension case to transmission case.
(1) Tighten eleven bolts.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

(2) Adjust the select cable. <Ref. to CS-15, ADJUSTMENT, Select Cable.>
3) Install the rear vehicle speed sensor.

Tightening torque:
T: 7 N·m (0.7 kgf-m, 5.1 ft-lb)

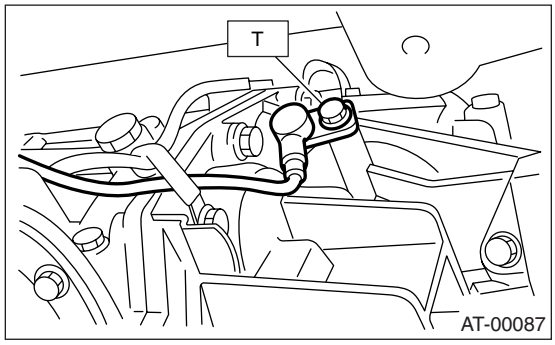

4) Install the transmission rear crossmember.
(1) Tighten the bolts.

Tightening torque:
T1: 35 N·m (3.6 kgf-m, 26 ft-lb)
T2: 70 N·m (7.1 kgf-m, 51 ft-lb)

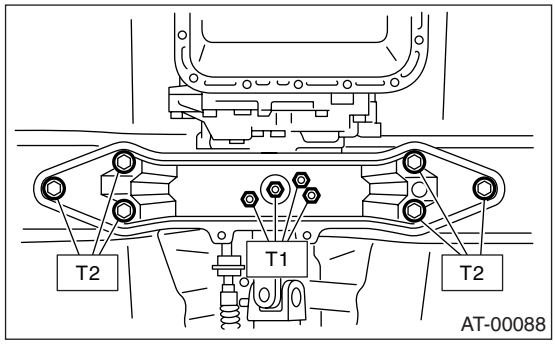

(2) Remove the transmission jack.
5) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
6) Install the front, center rear exhaust pipe and muffler. (Non-turbo model)
<Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>, <Ref. to EX(H4SO)-10, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, INSTALLATION, Muffler.>
7) Install center and rear exhaust pipes, and muffler. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, INSTALLATION, Muffler.>
8) Connect the transmission harness connector.

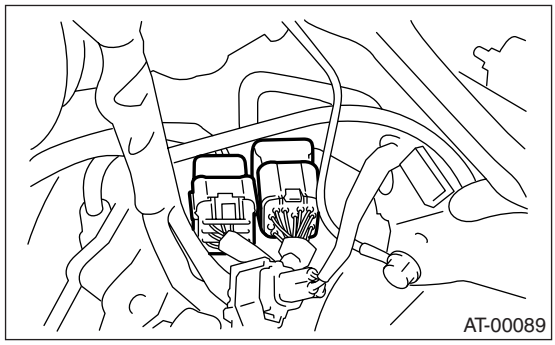

9) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

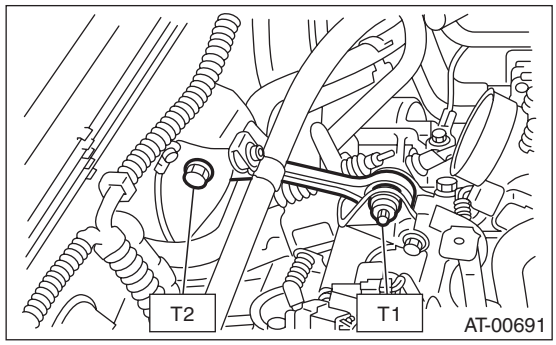

10) Install the air cleaner case. (2.0 L Non-turbo and 2.5 L models)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
11) Install intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
12) Fill ATF up to the middle of the “COLD” side on level gauge by using the gauge hole. <Ref. to 4AT-31, Automatic Transmission Fluid.>
13) Check the ATF level. <Ref. to 4AT-31, Automatic Transmission Fluid.>

19.ATF Filter

A: REMOVAL

NOTE:
The ATF filter is maintenance free.

1) Lift-up the vehicle.
2) Using ST, remove ATF filter.
ST 498545400 OIL FILTER WRENCH

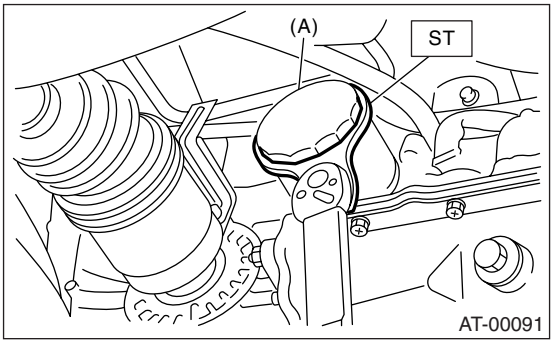

(A) ATF filter

B: INSTALLATION

1) Get new ATF filter and apply a thin coat of ATF to the oil seal.
2) Install ATF filter. Turn it by hand, being careful not to damage oil seal.
3) Using ST, tighten ATF filter.
Calculate ATF filter torque specifications using the following formula.
$T2 = L2/(L1 + L2) \times T1$
T1: 14 N·m (1.4 kgf-m, 10.1 ft-lb)
[Required torque setting]
T2: Tightening torque
L1: ST length 0.078 m (3.07 in)
L2: Torque wrench length
Example:

Torque wrench length mm (in)	Tightening torque N·m (kgf-m, ft-lb)
100 (3.94)	7.7 (0.79, 5.7)
150 (5.91)	9.0 (0.92, 6.7)
200 (7.87)	10 (1.0, 7.2)

NOTE:
Align ST with torque wrench while tightening ATF filter.
ST 498545400 OIL FILTER WRENCH
4) Add ATF.
5) Inspect level of ATF. <Ref. to 4AT-31, Automatic Transmission Fluid.>

C: INSPECTION

Replace the part if any defect is found from the inspection.
Check for rust, hole, ATF leaks, and other damage.

20.Transmission Control Module (TCM)

A: REMOVAL

1) Disconnect the ground cable from battery.

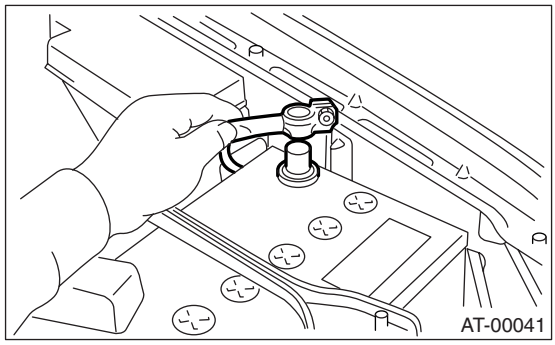

2) Remove the lower cover and then disconnect the connector.
3) Disconnect the connectors from TCM.
LHD model

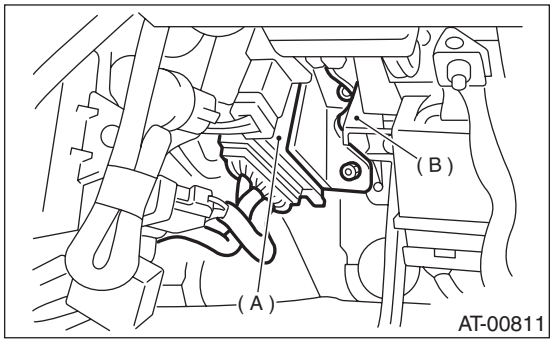

(A) Transmission control module (TCM)
(B) Brake pedal

RHD model

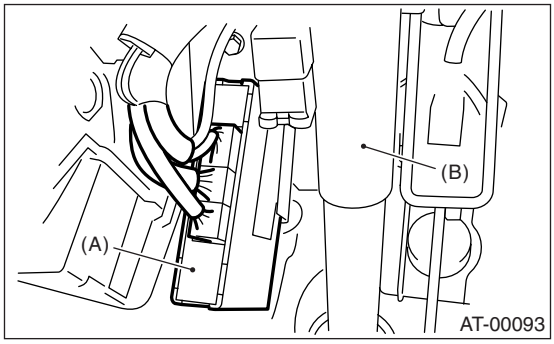

(A) Transmission control module (TCM)
(B) Column shaft

4) Remove the TCM.

B: INSTALLATION

1) Install the TCM.
LHD model

Tightening torque:
7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

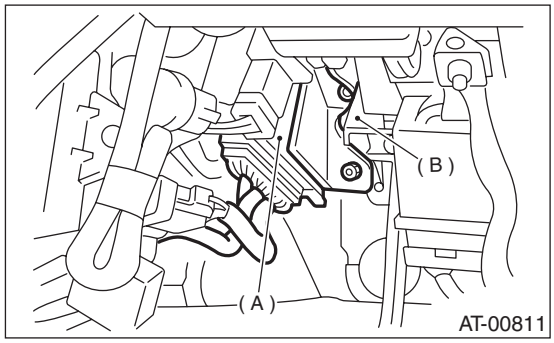

(A) Transmission control module (TCM)
(B) Brake pedal

RHD model

Tightening torque:
18 N·m (1.8 kgf-m, 13 ft-lb)

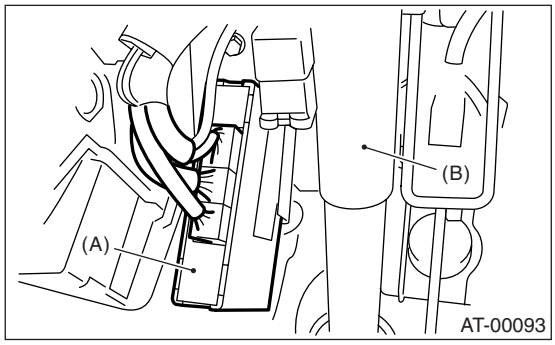

(A) Transmission control module (TCM)
(B) Column shaft

2) Connect the connectors to TCM.
3) Install in the reverse order of removal.

21.ATF Cooler Pipe and Hose

A: REMOVAL

1) Set the vehicle on a lift.
2) Remove battery and washer tank.
3) Lift-up the vehicle.
4) Remove the under cover.
5) Disconnect ATF cooler hose from radiator.

NOTE:
• Do not remove with a screwdriver or other pointed tools.
• When the hose is difficult to remove, wrap a shop cloth around the hose to protect it. Turn it with pliers, and then pull directly out with your hand.

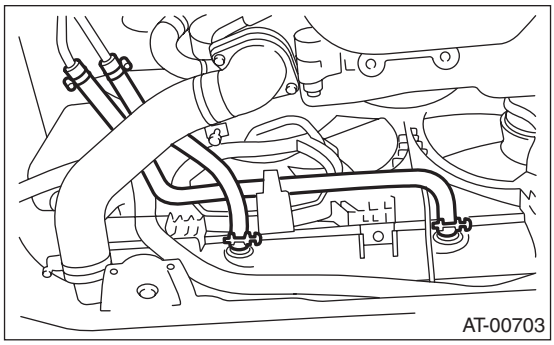

6) Disconnect ATF cooler hoses from pipes.

NOTE:
• Do not remove with a screwdriver or other pointed tools.
• When the hose is difficult to remove, wrap a shop cloth around the hose to protect it. Turn it with pliers, and then pull directly out with your hand.

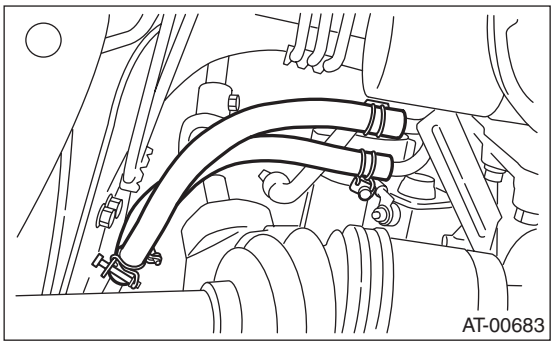

7) Remove ATF cooler pipe from frame.

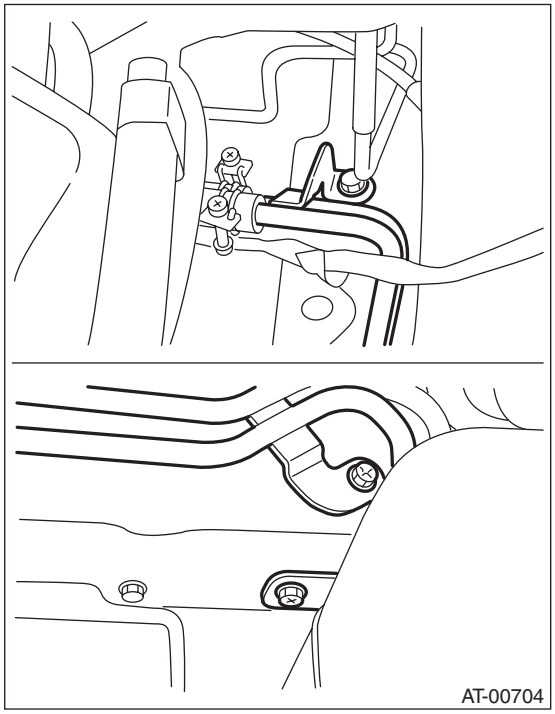

8) Remove the oil cooler inlet and outlet pipes.

NOTE:
When removing outlet pipe, be careful not to lose ball and spring used with retaining screw.

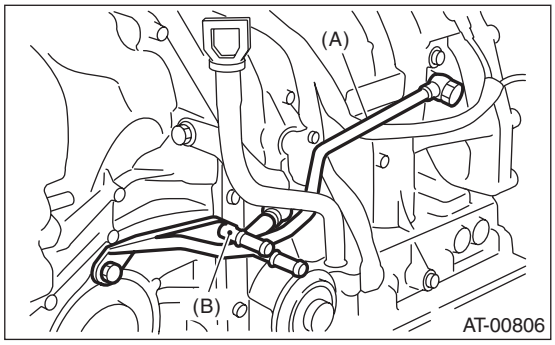

(A) Inlet pipe
(B) Outlet pipe

B: INSTALLATION

1) Install the oil cooler outlet and inlet pipes using a new aluminum washer.

Tightening torque:
T1: 44 N·m (4.5 kgf-m, 32.5 ft-lb)
T2: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

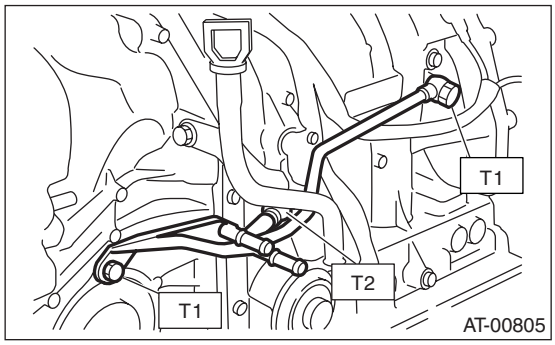

2) Install ATF cooler pipe to frame.

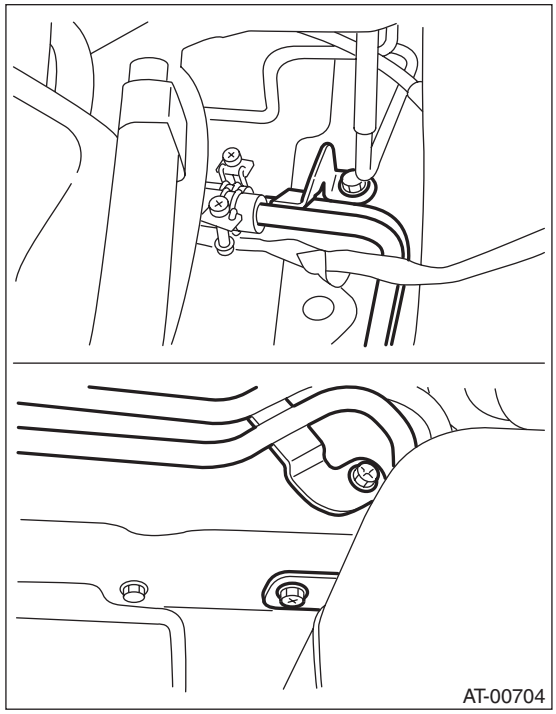

3) Connect ATF cooler hose to pipe transmission side.

NOTE:
• Install so that the hose is not folded over, excessively bent, or twisted.
• Be careful to insert the hose to the specified position.

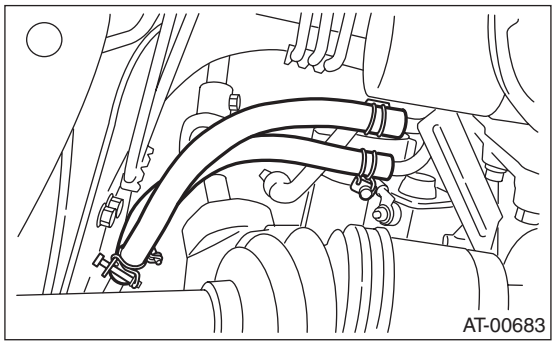

4) Connect ATF cooler hose to pipe of radiator side.

NOTE:
• Install so that the hose is not folded over, excessively bent, or twisted.
• Be careful to insert the hose to the specified position.

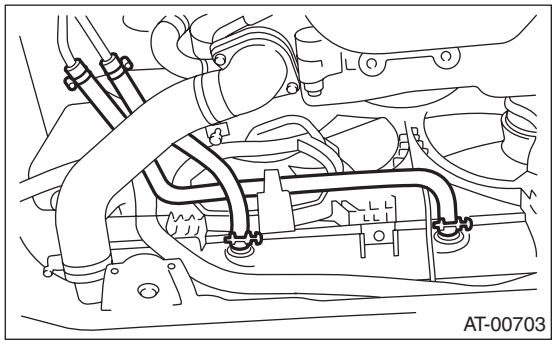

5) Install the under cover.
6) Install battery and washer tank.
7) Fill ATF. <Ref. to 4AT-31, Automatic Transmission Fluid.>

NOTE:
Make sure there are no ATF leaks in joints between the transmission, radiator, pipes, and hoses.

C: INSPECTION

Repair or replace any defective hoses, pipes, clamps, and washers found from the inspection below.
1) Check for ATF leaks in joints between the transmission, radiator, pipes, and hoses.
2) Check for deformed clamps.
3) Lightly bend the hose and check for cracks in the surface and other damage.
4) Pinch the hose with your fingers and check for poor elasticity. Also check for poor elasticity in the parts where the clamp was by pressing with your fingernail.
5) Check for peeling, cracks, and deformation at the tip of the hose.

22.Air Breather Hose

A: REMOVAL

1) Remove the air cleaner case. (2.0 L Non-turbo and 2.5 L models)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
2) Remove intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Disconnect the air breather hoses.
• NON-TURBO MODEL

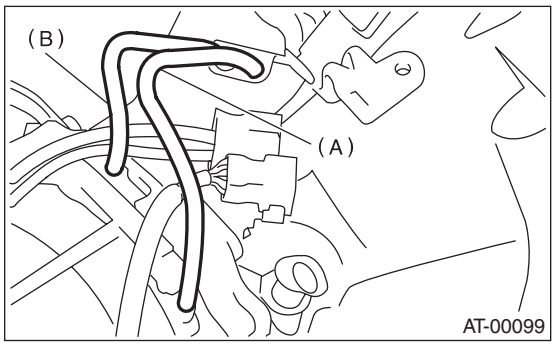

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

• TURBO MODEL

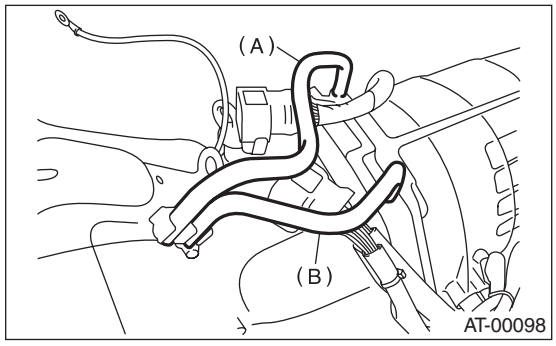

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

B: INSTALLATION

1) Install air breather hoses.
• NON-TURBO MODEL

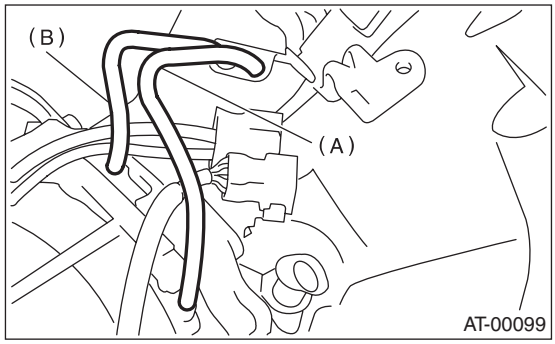

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

• TURBO MODEL

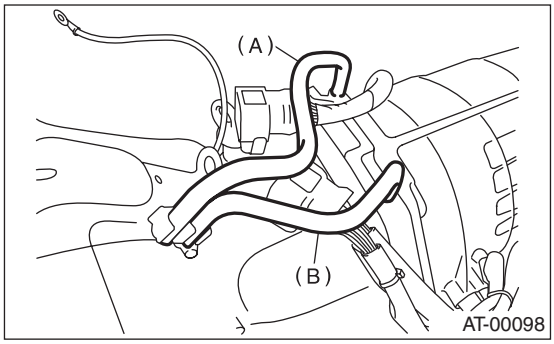

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

2) Install the air cleaner case. (2.0 L Non-turbo and 2.5 L models)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
3) Install intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the hose is not cracked or clogged.

23.Oil Charger Pipe

A: REMOVAL

1) Remove the air cleaner case. (2.0 L Non-turbo and 2.5 L models)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
2) Remove intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Remove the oil charger pipe, and remove the O-ring from the flange face.

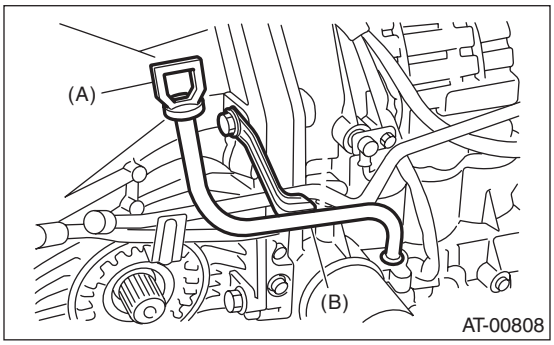

(A) Oil level gauge
(B) Oil charger pipe

B: INSTALLATION

1) Install the oil charger pipe with new O-ring.

Tightening torque:
41 N·m (4.2 kgf-m, 30.4 ft-lb)

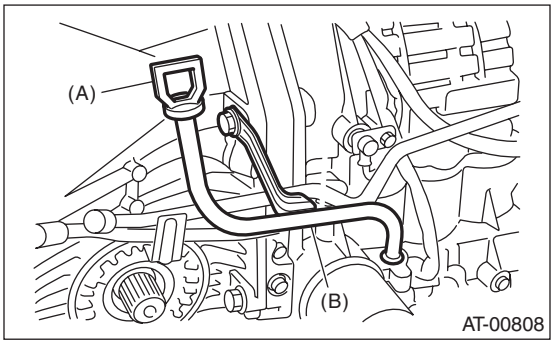

(A) Oil level gauge
(B) Oil charger pipe

2) Install the air cleaner case. (2.0 L Non-turbo and 2.5 L models)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
3) Install intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the oil charger pipe is not deformed or otherwise damaged.

24. Torque Converter Clutch Assembly

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch and oil pump shaft horizontally.

NOTE:
Be careful not to scratch the bushing inside the oil pump shaft.

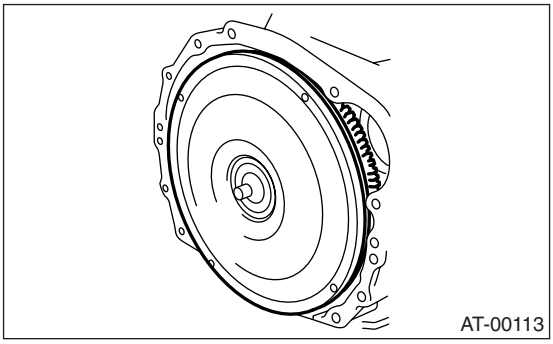

3) Remove the input shaft.

NOTE:
When the torque converter clutch assembly is removed, the input shaft will come out.

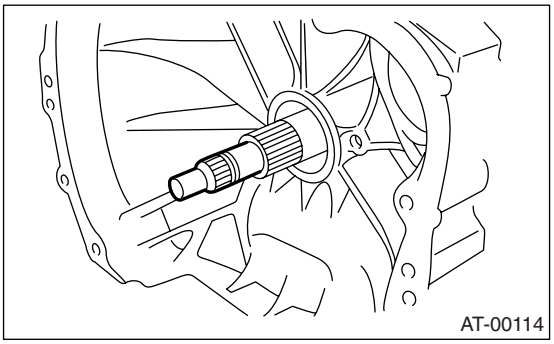

4) Remove the clip from torque converter clutch.

B: INSTALLATION

1) Install the clip to torque converter clutch.
2) Install the oil pump shaft to the torque converter clutch, and then check the clip fits securely in its groove.
3) Insert the input shaft while turning lightly by hand.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

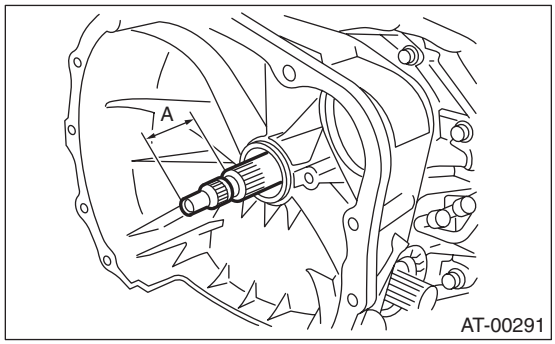

4) Holding the torque converter clutch assembly by hand, carefully install it to the torque converter clutch case. Be careful not to damage the bushing. Also avoid undue contact between the oil pump shaft bushing and stator shaft portion of the oil pump cover.
5) Rotate the shaft lightly by hand to engage the splines securely.

Dimension A:
1.6 L and 2.0 L Non-turbo model
−1.3 — −1.1 mm (−0.051 — −0.043 in)
2.5 L and 2.0 L Turbo model
2.7 — 2.9 mm (0.106 — 0.114 in)

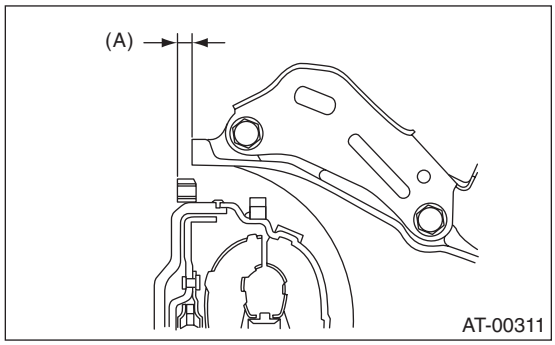

(A) Dimension A

6) Install the transmission assembly to vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Make sure the ring gear is not damaged and that the protrusion on the edge of the torque converter clutch is not deformed or otherwise damaged.

25.Transmission Cover

A: REMOVAL

1) Remove transmission cover.

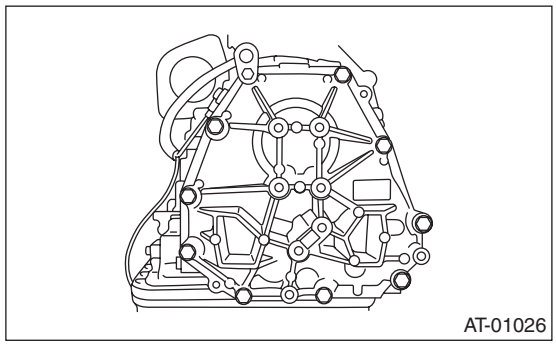

2) Take out shim from transmission cover.

B: INSTALLATION

1) Measure distance “A” from end of transmission cover point at bearing location with ST.
ST 398643600 GAUGE

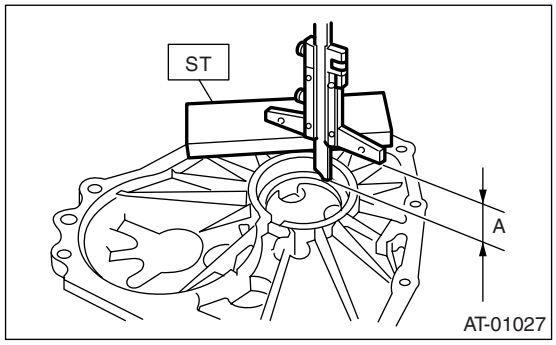

2) Measure the distance “B” from the transmission case mating surface to end of bearing with ST.
ST 398643600 GAUGE

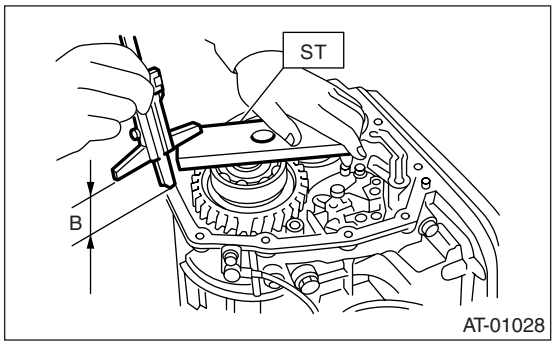

3) Calculation equation:
T = A − B + 0.40 mm (0.015 in)
T: Shim clearance
A: Distance from end of extension case to end of rear drive shaft.
B: Height from end of transmission case to end of reduction drive gear.

Adjusting shim	
Part No.	Thickness mm (in)
31288AA020	0.15 (0.0059)

4) Attach the selected adjusting shim to transmission cover.
5) Install the transmission cover to the transmission case.

CAUTION:
Be sure to use a new gasket.

6) Tighten bolts to secure the case.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

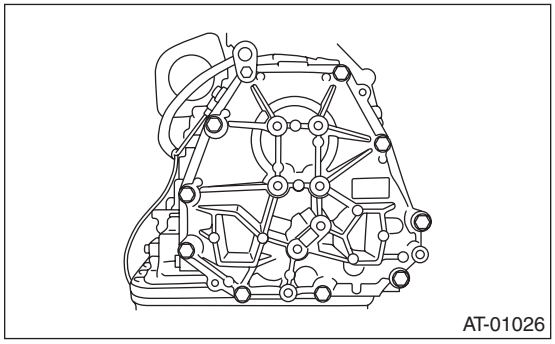

C: INSPECTION

Make sure that the transmission cover has no cracks.

26.Extension Case

A: REMOVAL

1) Remove the transmission assembly. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove rear vehicle speed sensor.
• MPT MODEL

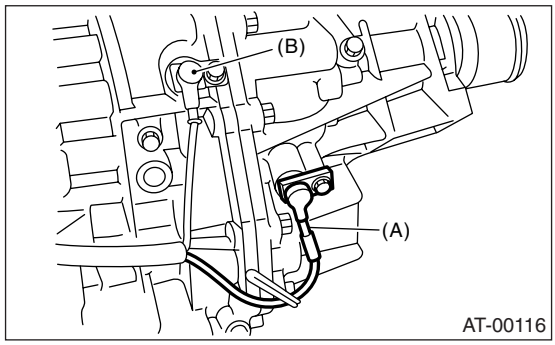

(A) Rear vehicle speed sensor
(B) Front vehicle speed sensor

• VTD MODEL

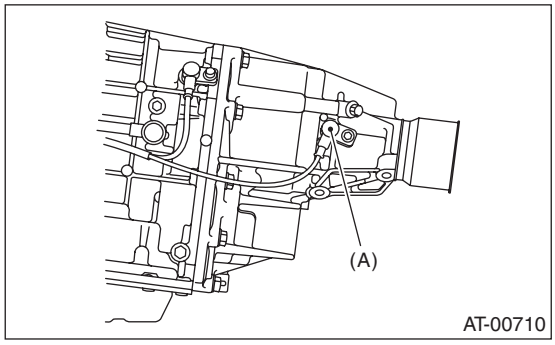

(A) Rear vehicle speed sensor

3) Separate transmission case and extension case sections.

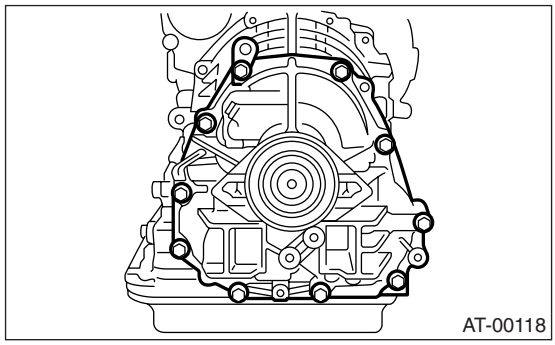

B: INSTALLATION

1) Attach the selected thrust needle bearing to the end surface of reduction drive gear with vaseline.

NOTE:
Install thrust needle bearing in the correct direction.

2) Install new gasket.
3) Install the extension case to the transmission case.
4) Tighten bolts to secure the case.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

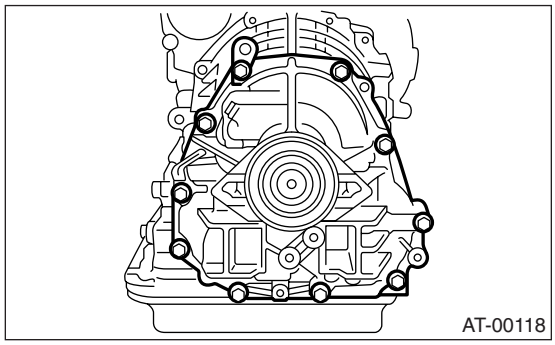

5) Install the rear vehicle speed sensor.

Tightening torque:
7 N·m (0.7 kgf-m, 5.1 ft-lb)

• MPT MODEL

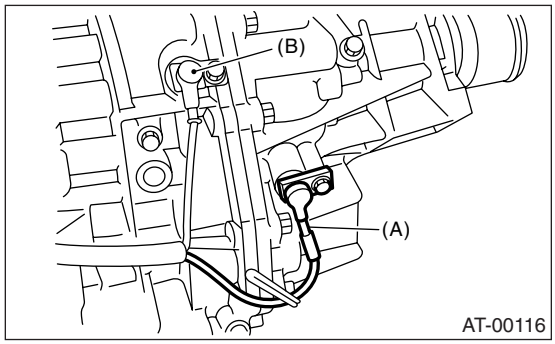

(A) Rear vehicle speed sensor
(B) Front vehicle speed sensor

• VTD MODEL

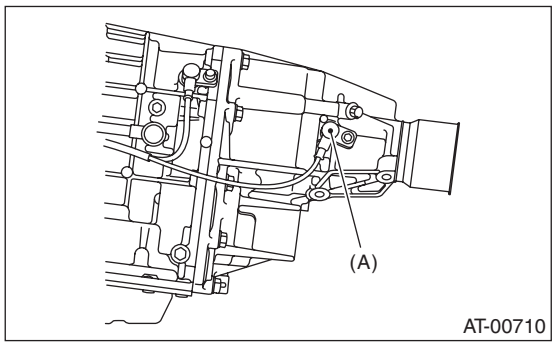

(A) Rear vehicle speed sensor

6) Install the transmission assembly. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1. MPT MODEL

1) Take out the transfer clutch by lightly tapping the end of the rear drive shaft.

NOTE:
Be careful not to damage the oil seal in the extension.

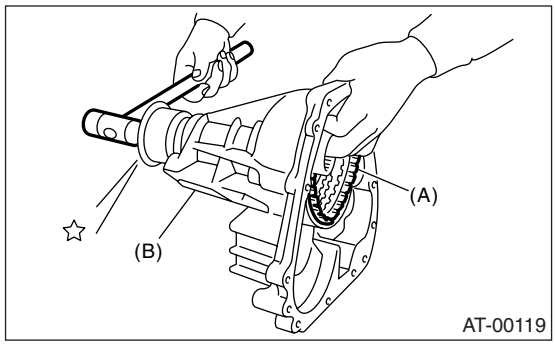

(A) Extension case
(B) Transfer clutch

2) Remove the transmission clutch pipe without bending pipe.

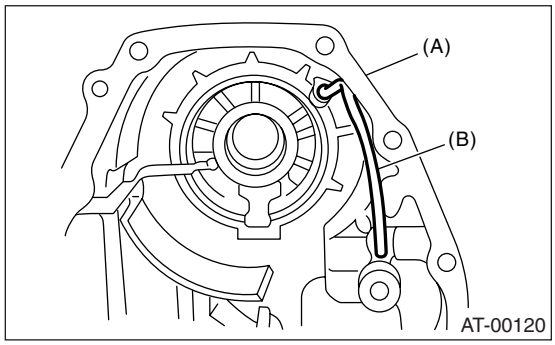

(A) Extension case
(B) Transfer clutch pipe

2. VTD MODEL

1) Remove snap ring using ST1, ST2, ST3 and a press.

ST1	398673600	COMPRESSOR
ST2	498627100	SHEAT
ST3	398663600	PLYER

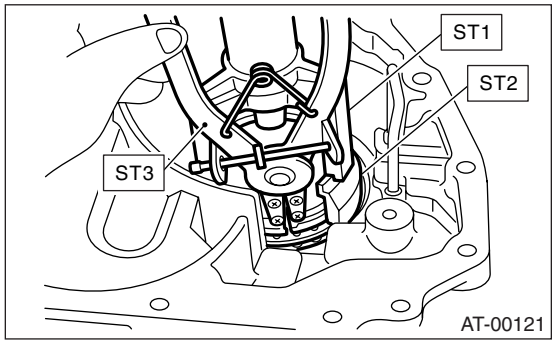

2) Remove test plug.

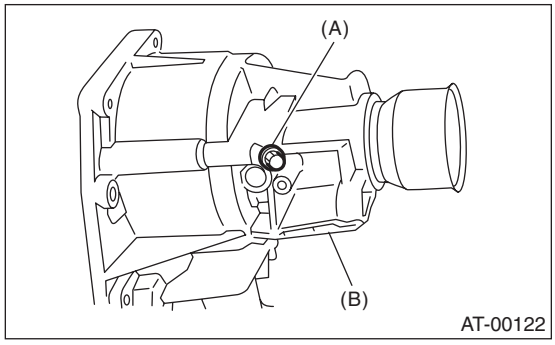

(A) Extension case
(B) Test plug

3) Remove clutch piston using compressed air.

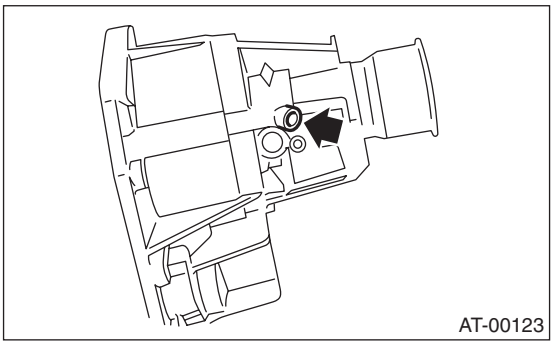

4) Pay attention, not to bend pipe, and remove transfer clutch pipe.

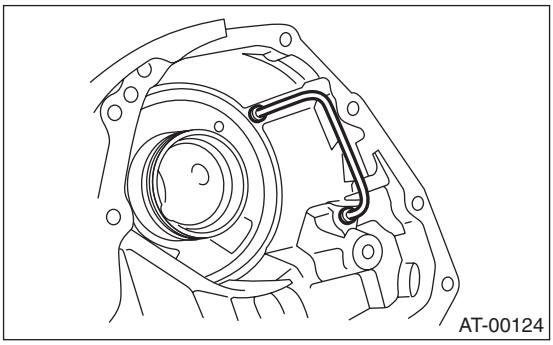

5) Remove the dust cover from the extension case.
6) Remove the oil seal from the extension case.

D: ASSEMBLY

1. MPT MODEL

1) Using the ST and a press, press in a new oil seal.
ST 498057300 INSTALLER
2) Press in the dust cover.
3) Install the transfer clutch pipe to extension case without bending pipe.

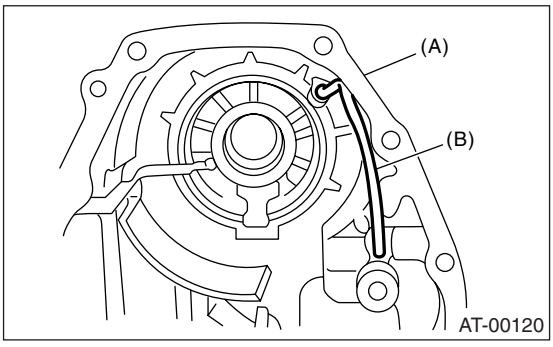

(A) Extension case
(B) Transfer clutch pipe

4) Install the transfer clutch assembly to the case.

NOTE:
- Be careful not to damage the seal rings.
- Insert the clutch assembly fully into position until the bearing shoulder bottoms.

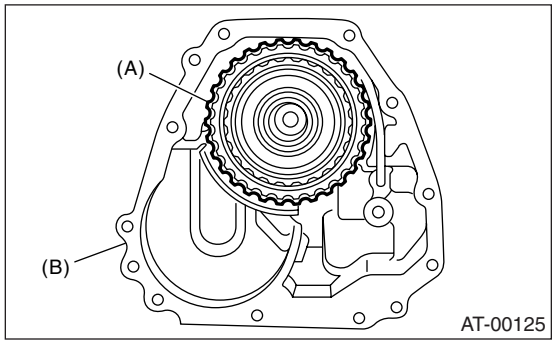

(A) Transfer clutch
(B) Extension case

2. VTD MODEL

1) Press new oil seal using ST and a press.
ST 498057300 INSTALLER
2) Press dust cover.
3) Install the transfer clutch pipe onto the extension case, taking care not to bend the pipe.

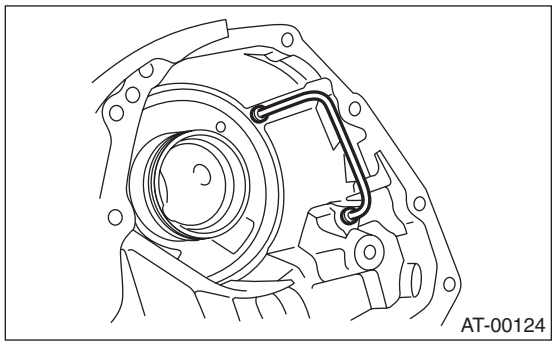

4) Install the test plug.

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

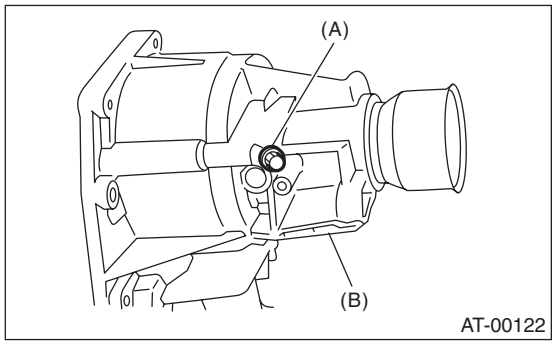

(A) Test plug
(B) Extension case

5) Insert the multi-plate clutch, drive plates, driven plates, and spring retainer.

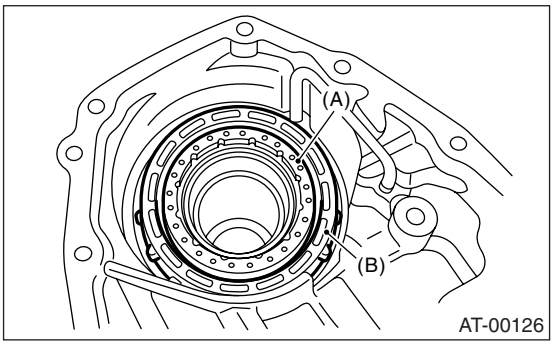

(A) Spring retainer
(B) Multi-plate clutch (LSD) piston assembly

6) Install the snap ring using special tools 1, 2, and 3.

ST1 398673600 COMPRESSOR
ST2 498627100 SEAT
ST3 398663600 PLIERS

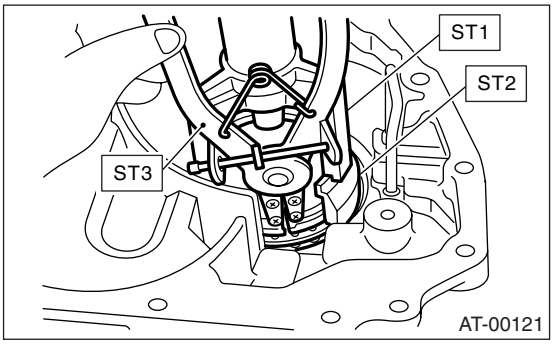

E: INSPECTION

• Use forced air to make sure the transfer pipe and extension case routes are not clogged and do not leak.
• Measure the extension end play and adjust it to within specifications.

MPT model
<Ref. to 4AT-84, MPT MODEL, ADJUSTMENT, Transfer Clutch.>
VTD model
<Ref. to 4AT-85, VTD MODEL, ADJUSTMENT, Transfer Clutch.>

27.Transfer Clutch

A: REMOVAL

1) Remove the transmission assembly from vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove the extension case and remove the transfer clutch. <Ref. to 4AT-77, REMOVAL, Extension Case.> and <Ref. to 4AT-78, DISASSEMBLY, Extension Case.>

B: INSTALLATION

1) Select the thrust needle bearing. <Ref. to 4AT-84, ADJUSTMENT, Transfer Clutch.>
2) Install the transfer clutch assembly to the case.

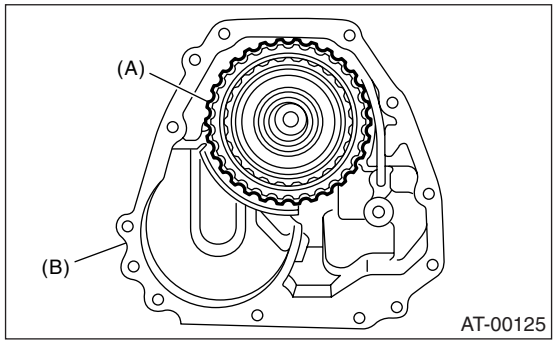

(A) Transfer clutch
(B) Extension case

3) Tighten bolts to secure the case.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

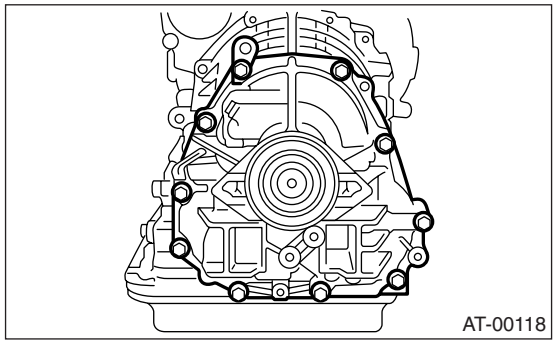

4) Install the transmission assembly to vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1) Remove the seal ring.

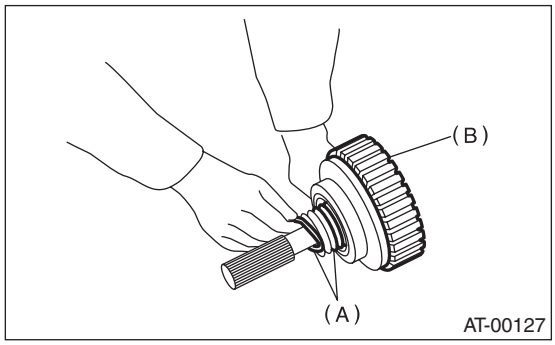

(A) Seal ring
(B) Transfer clutch

2) Using a press and ST, remove the ball bearing.
ST 498077600 REMOVER

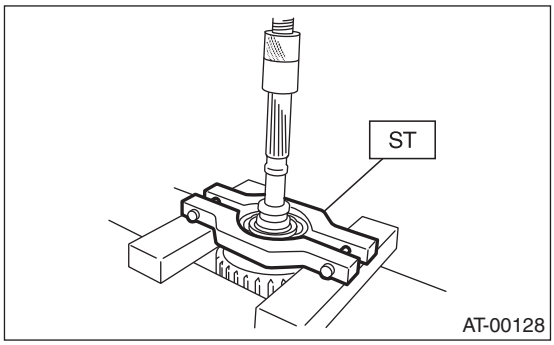

3) Remove the snap ring, and take out the pressure plate, drive plates, and driven plates.

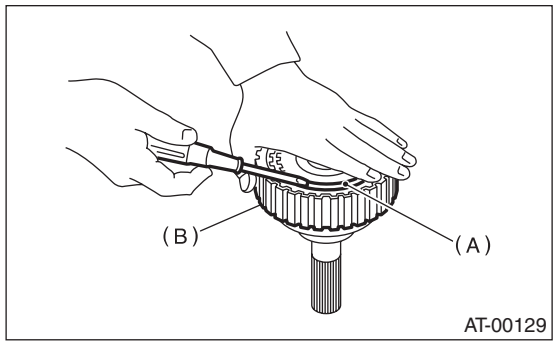

(A) Snap ring
(B) Transfer clutch

4) Remove the snap ring with ST1, ST2 and ST3, and take out the return spring and transfer clutch piston seal.
ST1 399893600 PLIERS
ST2 398673600 COMPRESSOR
ST3 398623600 SEAT

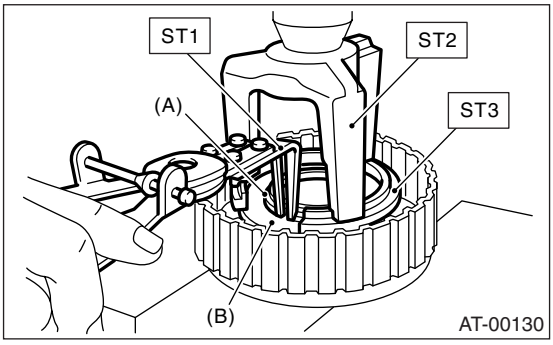

(A) Snap ring
(B) Transfer piston seal

5) Apply compressed air to the rear drive shaft to remove the piston.

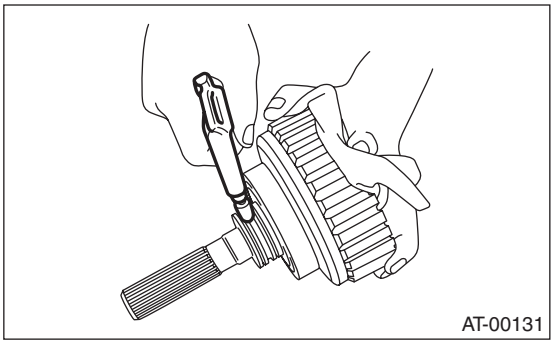

D: ASSEMBLY

1) Install the transfer clutch piston.

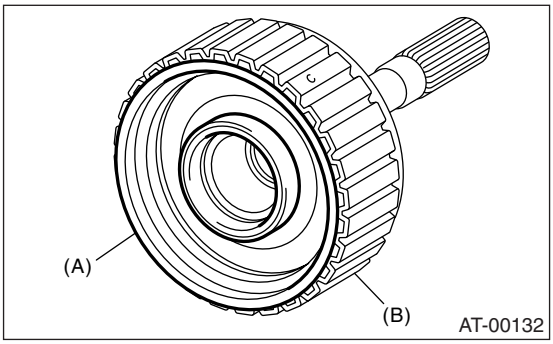

(A) Transfer clutch piston
(B) Rear drive shaft

2) Install return spring to transfer piston.

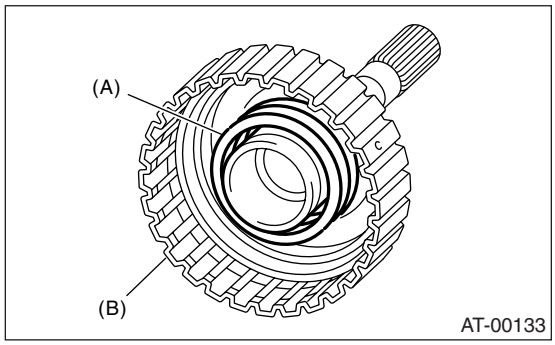

(A) Return spring
(B) Rear drive shaft

3) Install transfer clutch piston seal.

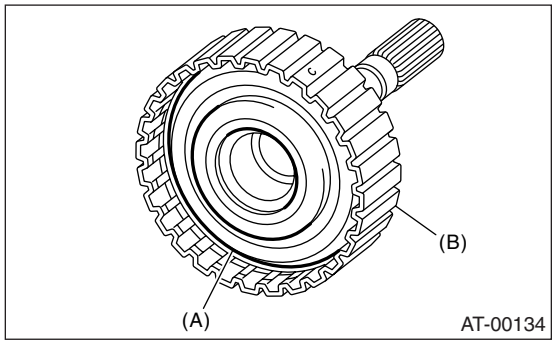

(A) Transfer clutch piston seal
(B) Rear drive shaft

4) Install ST to rear drive shaft.
ST 499257300 SNAP RING OUTER GUIDE

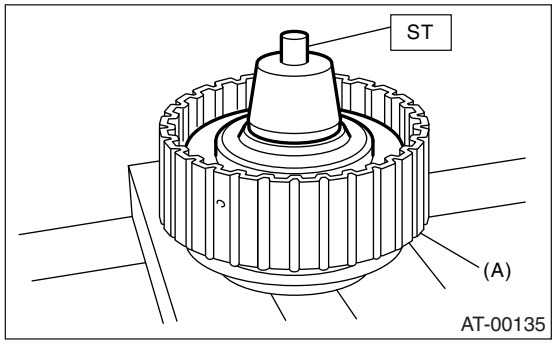

(A) Transfer clutch

5) Install snap ring to ST.
ST 499257300 SNAP RING OUTER GUIDE

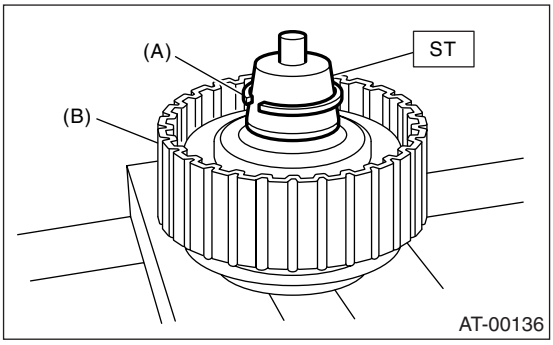

(A) Snap ring
(B) Transfer clutch

6) Using ST1 and ST2, install snap ring to rear drive shaft.
ST1 499257300 SNAP RING OUTER GUIDE
ST2 499247400 INSTALLER

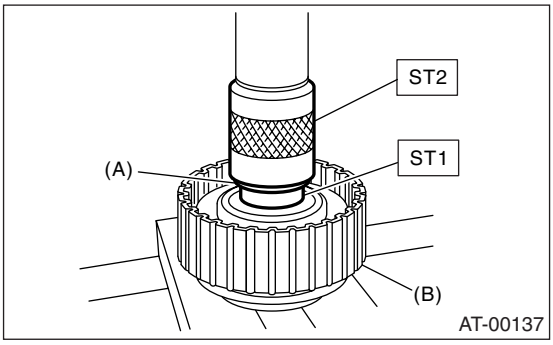

(A) Snap ring
(B) Transfer clutch

7) Install the driven plates, drive plates, pressure plate and snap ring.

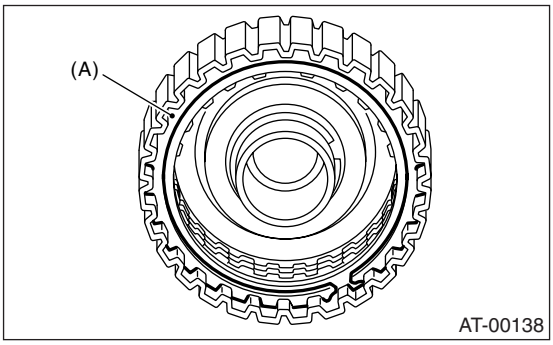

(A) Snap ring

8) Apply compressed air to see if the assembled parts move smoothly.

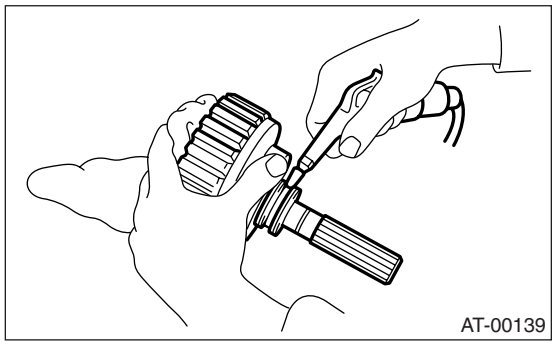

9) Check clearance between snap ring and pressure plate. <Ref. to 4AT-84, INSPECTION, Transfer Clutch.>
10) Press-fit a new ball bearing with ST.
ST 899580100 INSTALLER

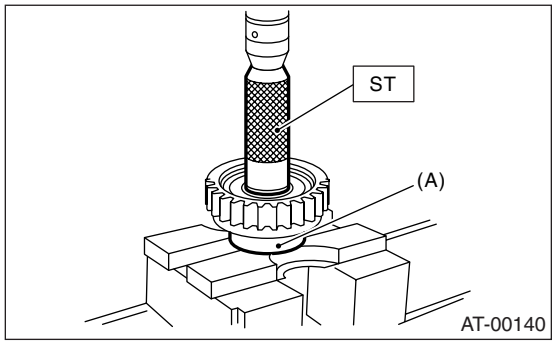

(A) Ball bearing

11) Coat a new seal ring with vaseline, and install it in the seal ring groove of the shaft.

NOTE:
Do not expand the seal ring excessively when installing.

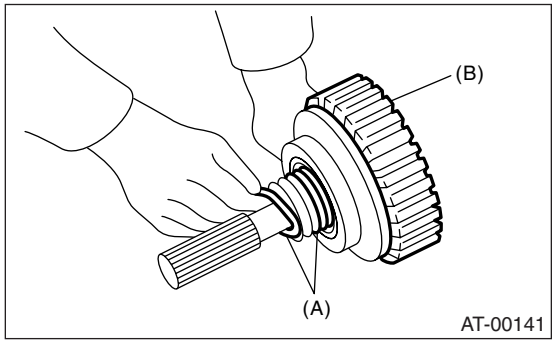

(A) Snap ring
(B) Transfer clutch

12) Install the transfer clutch assembly without damaging seal ring.

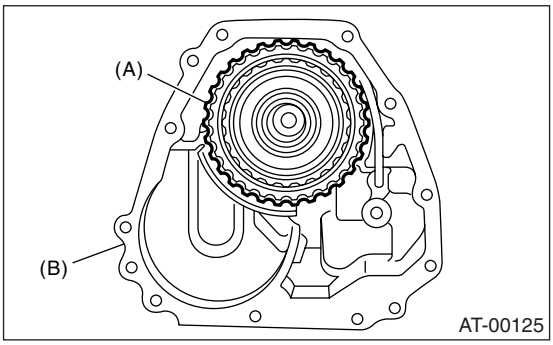

(A) Transfer clutch
(B) Extension case

E: INSPECTION

• Check the drive plate facing for wear and damage.
• Check the snap ring for wear, return spring for permanent set and breakage, and return spring for deformation.
• Check the lathe cut seal ring for damage.
• Measure the extension end play and adjust it to within specifications.
<Ref. to 4AT-84, ADJUSTMENT, Transfer Clutch.>
1) Inspect clearance between snap ring and pressure plate.
2) Before measuring clearance, place the same thickness of shim on both sides to prevent pressure plate from tilting.
3) If the clearance is not within specification, adjust it by selecting a suitable pressure plate on the transfer clutch piston side.

Standard value:
0.7 — 1.1 mm (0.028 — 0.043 in)

Allowable limit:
1.6 mm (0.063 in)

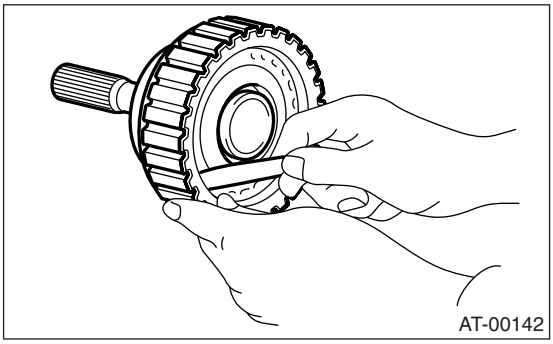

Pressure plates	
Part No.	Thickness mm (in)
31593AA151	3.3 (0.130)
31593AA161	3.7 (0.146)
31593AA171	4.1 (0.161)
31593AA181	4.5 (0.177)

4) Check if the tight corner braking does not occur when the vehicle is started with steering wheel held at fully turned position. If tight corner braking occurs, perform the following procedures.
(1) With the steering wheel held at fully turned position, drive the vehicle in “D” range and with vehicle speed at approx. 5 km/h (3 MPH) in both clockwise and counterclockwise directions for approx. ten times each, while repeating acceleration and braking intermittently.
(2) If the tight corner braking still persists, drive the vehicle again in a circle for several laps.

F: ADJUSTMENT

1. MPT MODEL

1) Measure distance “A” from end of extension case and rear drive shaft with ST.
ST 398643600 GAUGE

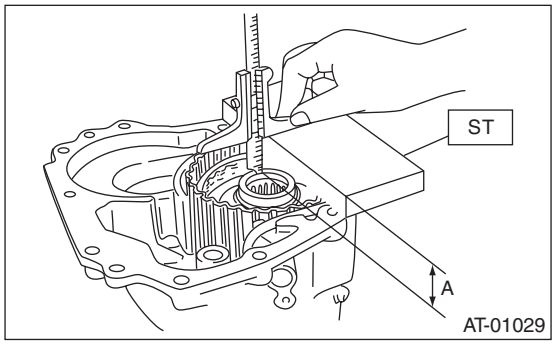

A: Measured value

2) Measure the distance “B” from the transmission case mating surface to the reduction drive gear end surface with ST1 and ST2.
ST1 398643600 GAUGE
ST2 499577000 GAUGE

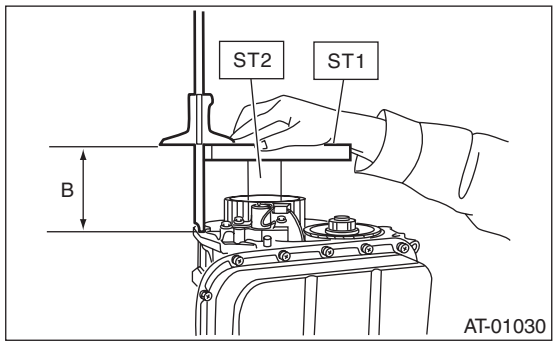

B: Measured value

3) Calculation formula:

NOTE:
• Calculate “T”:
T = A − B + 35.4 mm
[T = A − B + 1.3937 in]
T: Thrust needle bearing thickness
A: Distance from end of extension case to end of rear drive shaft
B: Distance from end of transmission case to end of reduction drive gear
Example:
When, A = 33.6 mm (1.3228 in), B = 65.05 mm (2.5610 in)
T = 33.6 − 65.05 + 35.4 = 3.95
[T = 1.3228 − 2.5610 + 1.3937 = 0.1555]
After calculation, the value of “H” becomes 3.95, therefore select bearing thickness of 3.8.
• Calculation formula for “T” is applied when measuring using ST (398643600 GUAGE, 499577000 GUAGE). When not using ST, apply
T = (A − α + 0.45 mm) − (B − β) − H
[T = (A − α + 0.0177 in) − (B − β) − H].
T: Thrust needle bearing thickness
A: Distance from end of extension case to end of reduction drive shaft
B: Distance from end of transmission case to end of rear drive shaft
α: Collar thickness used when measuring “A”
β: Collar thickness used when measuring “B”
0.45: Gasket thickness (mm)
H: Shim clearance

Thrust needle bearing	
Part No.	Thickness mm (in)
806536020	3.8 (0.150)
806535030	4.0 (0.157)
806535040	4.2 (0.165)
806535050	4.4 (0.173)
806535060	4.6 (0.181)
806535070	4.8 (0.189)
806535090	5.0 (0.197)

2. VTD MODEL

1) Insert the rear driveshaft into the reduction drive gear and center differential assembly.

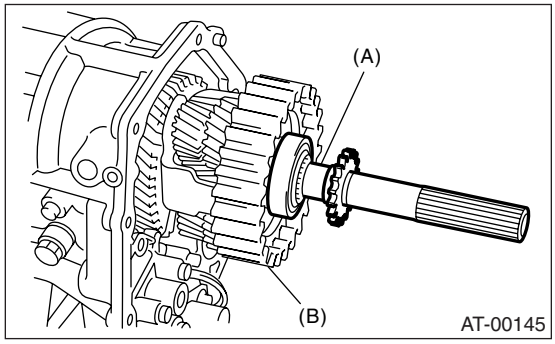

(A) Rear drive plate
(B) Center differential carrier

2) Using the special tool, measure the distance “A” between the mating surface of extension case and multi-plate clutch (LSD) piston.
ST 398643600 GAUGE

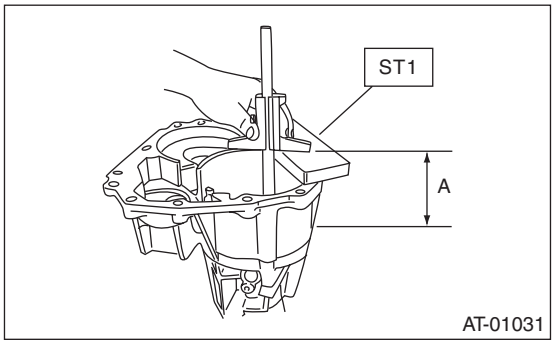

A: Measured value

3) Using the special tool, measure the distance “B” between the mating surface of transmission case and reduction drive gear edge.
ST 398643600 GAUGE

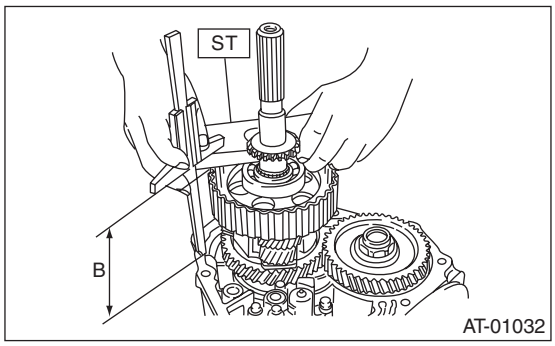

B: Measured value

4) Formula:

NOTE:
• Calculation of “T”:
When clearances are 0.05 mm (0.0020 in), select up to four adjusting shims from the table, suitable for clearance value.
When clearances are 0.05 mm (0.0020 in)
$T = A - B + 0.40$ mm
[$T = A - B + 0.0157$ in]
When clearances are 0.25 mm (0.0098 in)
$T = A - B + 0.20$ mm
[$T = A - B + 0.0079$ in]
T: Shim clearance
A: Distance between extension case edge and rear driveshaft edge
B: Distance between transmission case edge and reduction drive gear edge
T: Shim thickness
0.05 — 0.25 mm (0.0020 — 0.0098 in)
Example:
When, A = 90.50 mm (3.5630 in), B = 90.35 mm (3.5571 in)
Calculation for 0.05 mm (0.0020 in) of clearance
$T = 90.50 - 90.35 + 0.4 = 0.55$
[$T = 3.5630 - 3.5571 + 0.0157 = 0.0216$]
Calculation when clearance is 0.25 mm (0.0098 in)
$T = 90.50 - 90.35 + 0.2 = 0.35$
[$T = 3.5630 - 3.5571 + 0.0079 = 0.0138$]
• Calculation formula for “T” is applied when measuring using ST (398643600 GUAGE). When not using ST, apply
$T = (A - \alpha + 0.45\text{ mm}) - (B - \beta) - H$
[$T = (A - \alpha + 0.0177\text{ in}) - (B - \beta) - H$].
T: Thrust needle bearing thickness
A: Distance from end of extension case to end of reduction drive shaft
B: Distance from end of transmission case to end of rear drive shaft
α: Collar thickness used when measuring “A”
β: Collar thickness used when measuring “B”
0.45: Gasket thickness (mm)
H: Shim clearance
After calculation, the value of “T” becomes between 0.35 mm (0.0138 in) and 0.55 mm (0.0216 in), therefore select two shims with thickness of 0.2 mm (0.010 in) or one shim with thickness of 0.5 mm (0.020 in).

Adjusting shim	
Part No.	Thickness mm (in)
33281AA001	0.2 (0.008)
33281AA011	0.5 (0.020)

28.Multi-plate Clutch

A: REMOVAL

Remove multi-plate clutch following the same instructions as for the extension case. <Ref. to 4AT-77, REMOVAL, Extension Case.>

B: INSTALLATION

Install multi-plate clutch following the same instructions as for the extension case. <Ref. to 4AT-77, INSTALLATION, Extension Case.>

C: INSPECTION

- Inspect drive plate facing for wear and damage.
- Make sure snap ring is not worn and return spring has no permanent distortion, damage, or deformation.
- Inspect lathe cut seal ring for damage.
- Measure multi-plate clutch clearance and adjust it to within the specification range. <Ref. to 4AT-87, ADJUSTMENT, Multi-plate Clutch.>

D: ADJUSTMENT

1) Remove drive plate and driven plate from center differential carrier.
2) Using the special tool, measure distance “A” from extension case joining surface to multi-plate clutch (LSD) piston.
ST 398643600 GAUGE

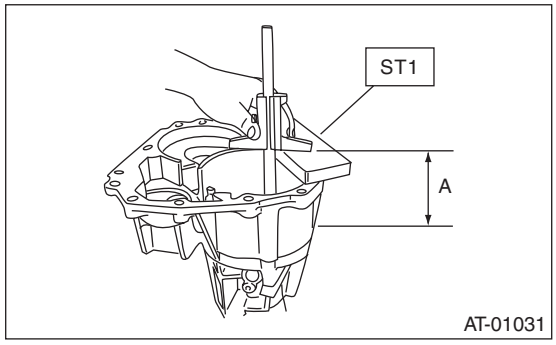

A: Measured value

3) Using ST, measure height “B” from transmission case joining edge to center differential clutch drum edge.
ST 398744300 GAUGE

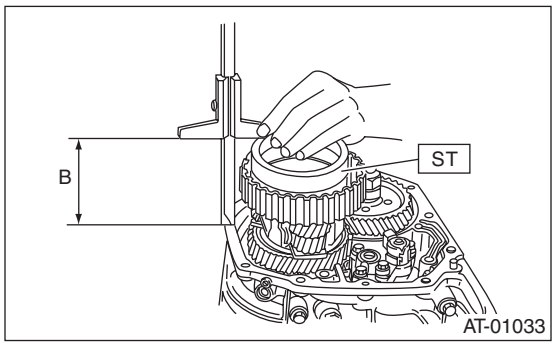

B: Measured value

4) Calculation formula
$T = A - B + 0.45$ mm
[$T = A - B + 0.0177$ in]

NOTE:
- Calculation formula for “T” is applied when measuring using ST (398643600 GUAGE, 398744300 GAUGE). When not using ST, apply
$T = (A - \alpha + 0.45\text{ mm}) - (B - \beta)$
[$T = (A - \alpha + 0.0177\text{ in}) - (B - \beta)$].

T: Thrust needle bearing thickness
A: Distance from end of extension case to end of reduction drive shaft
B: Distance from end of transmission case to end of rear drive shaft
α: Collar thickness used when measuring “A”
β: Collar thickness used when measuring “B”
0.45: Gasket thickness (mm)
- Measure multi-plate clutch (LSD) driven and drive plate thickness to find the clearance between measurement value and “T”.

Standard value:
0.2 — 0.6 mm (0.008 — 0.024 in)

Limit value:
1.6 mm (0.063 in)

If outside the standard value, replace the plate set (drive and driven plate). Select a multi-plate clutch (LSD) piston side adjustment plate that will bring clearance within the standard value.

Obtainable driven plates	
Part No.	Thickness mm (in)
31589AA041	1.6 (0.063)
31589AA050	2.0 (0.079)
31589AA060	2.4 (0.094)
31589AA070	2.8 (0.110)

29.Rear Drive Shaft

A: REMOVAL

1) Remove transmission assembly. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove rear wheel speed sensor and separate extension case from transmission case. <Ref. to 4AT-77, REMOVAL, Extension Case.>
3) Pull out the rear driveshaft from the center differential assembly.

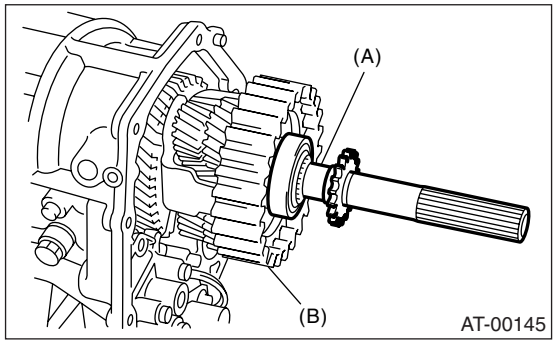

(A) Rear driveshaft
(B) Center differential carrier

4) Remove drive plate and driven plate.

B: INSTALLATION

1) Select the appropriate shim. <Ref. to 4AT-85, VTD MODEL, ADJUSTMENT, Transfer Clutch.>
2) Install drive plate and driven plate.
3) Insert rear driveshaft into the center differential assembly.
4) Join transmission case and extension case. Install rear wheel speed sensor. <Ref. to 4AT-77, INSTALLATION, Extension Case.>
5) Install transmission assembly. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1) Using a press, remove revolution gear.

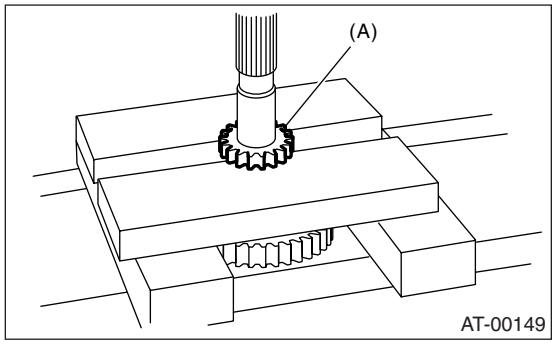

(A) Revolution gear

2) Using a press, remove the front and rear side ball bearings and clutch hub.

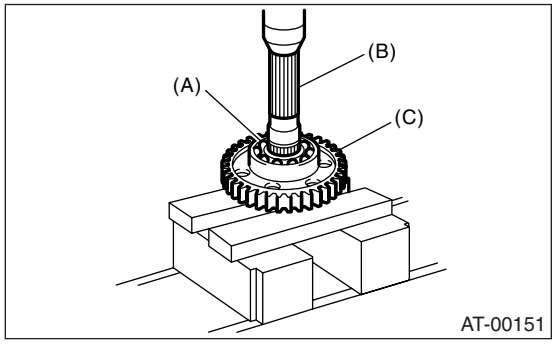

(A) Rear ball bearing
(B) Rear driveshaft
(C) Clutch hub

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:
- Use a new revolution gear and ball bearings.
- Make sure the clutch hub is oriented in the correct direction.

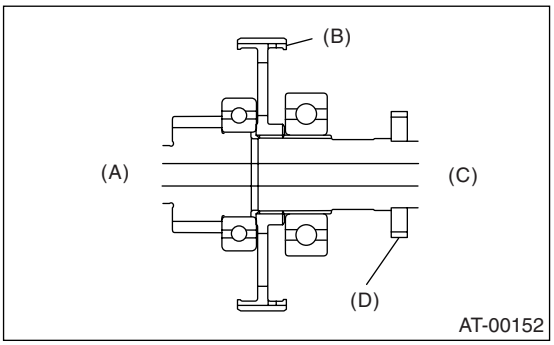

(A) Front side
(B) Clutch hub
(C) Rear side
(D) Revolution gear

E: INSPECTION

- Inspect parts to make sure there are no holes, cuts, and that they are not dusty.
- Inspect extension end play and adjust it to within the standard value. <Ref. to 4AT-85, VTD MODEL, ADJUSTMENT, Transfer Clutch.>

30.Reduction Driven Gear

A: REMOVAL

1. MPT MODEL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove rear vehicle speed sensor, and separate the transmission case and extension case. <Ref. to 4AT-77, REMOVAL, Extension Case.>
3) Set the range select lever to “P”.
4) Straighten the staked portion, and remove the lock nut.

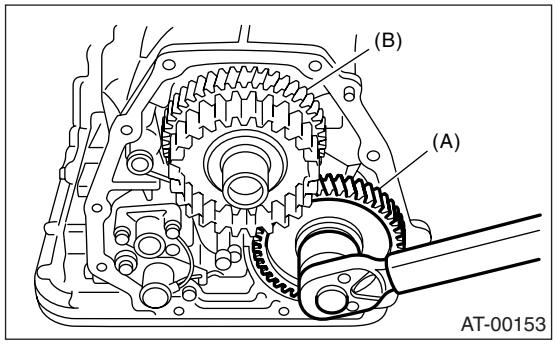

(A) Reduction driven gear
(B) Reduction drive gear

5) Using the ST1 and ST2, extract the reduction driven gear.
ST1 499737000 PULLER
ST2 899524100 PULLER SET

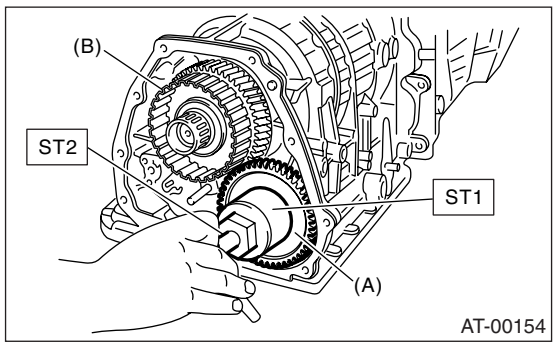

(A) Reduction driven gear
(B) Reduction drive gear

2. VTD MODEL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove rear vehicle speed sensor, and separate the transmission case and extension case. <Ref. to 4AT-77, REMOVAL, Extension Case.>
3) Remove the rear drive shaft. <Ref. to 4AT-88, REMOVAL, Rear Drive Shaft.>
4) Set the range select lever to “P”.
5) Straighten the staked portion, and remove the lock nut.

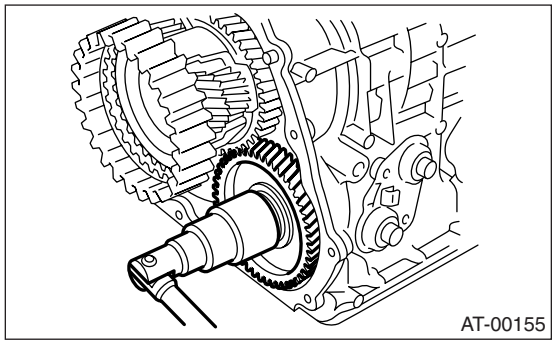

6) Using the ST1 and ST2, extract the reduction driven gear.
ST1 499737000 PULLER
ST2 899524100 PULLER SET
7) Pull out the center differential assembly. <Ref. to 4AT-95, REMOVAL, Center Differential Carrier.>

B: INSTALLATION

1. MPT MODEL

1) Set the select lever to “P” range.
2) Using a plastic hammer, install reduction driven gear assembly and new washer, and tighten new drive pinion lock nut.

Tightening torque:
100 N·m (10.2 kgf-m, 73.8 ft-lb)

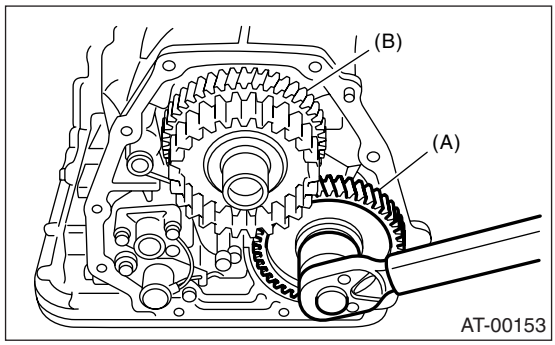

(A) Reduction driven gear
(B) Reduction drive gear

3) After tightening, stake the lock nut securely.
4) Combine the transmission case with the extension case, and install rear vehicle speed sensor. <Ref. to 4AT-77, INSTALLATION, Extension Case.>
5) Install the transmission assembly to vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

2. VTD MODEL

1) Set the select lever to “P” range.
2) Using a plastic hammer, install reduction driven gear assembly.
3) Using a plastic hammer, install the center differential assembly.
4) Install a new self-lock nut and a washer.

Tightening torque:
100 N·m (10.2 kgf-m, 73.8 ft-lb)

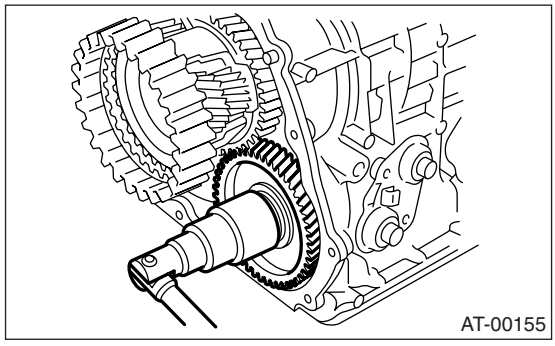

5) After tightening, stake the lock nut securely.
6) Insert the rear drive shaft assembly. <Ref. to 4AT-88, INSTALLATION, Rear Drive Shaft.>
7) Combine the transmission case with the extension case, and install rear vehicle speed sensor. <Ref. to 4AT-77, INSTALLATION, Extension Case.>
8) Install the transmission assembly to vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1) Remove snap ring from reduction driven gear.

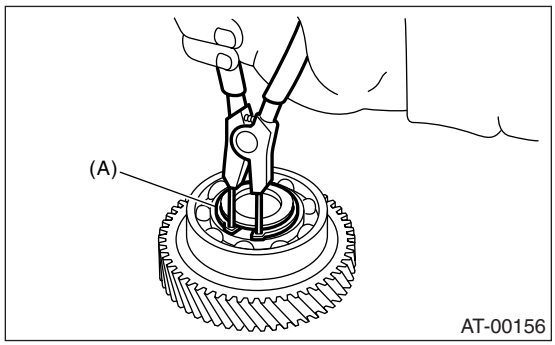

(A) Snap ring

2) Using ST, remove ball bearing from reduction driven gear.
ST 498077600 REMOVER

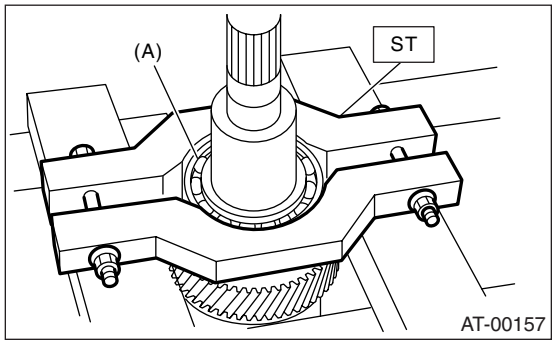

(A) Ball bearing

3) Remove snap ring reduction driven gear.

D: ASSEMBLY

1) Install snap ring to reduction driven gear.
2) Using a press, install a new ball bearing to reduction driven gear.

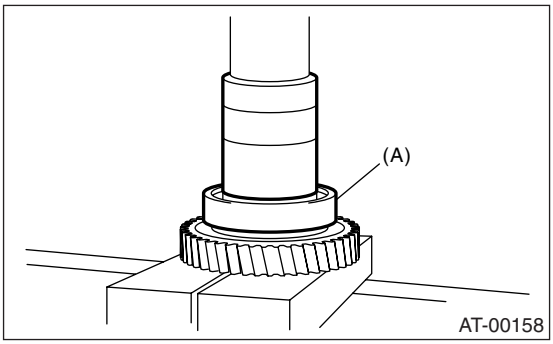

(A) Ball bearing

3) Install snap ring to reduction driven gear.

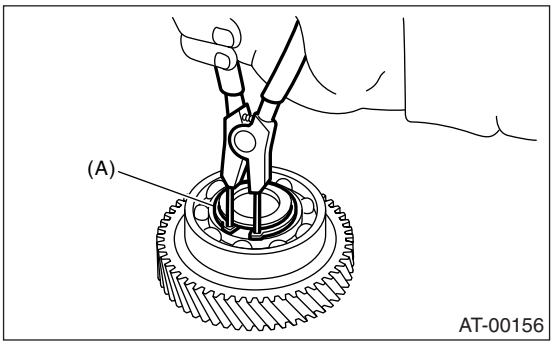

(A) Snap ring

E: INSPECTION

Check ball bearing and gear for dents or damage.

31.Reduction Drive Gear

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove rear vehicle speed sensor, and separate the transmission case and extension case. <Ref. to 4AT-77, REMOVAL, Extension Case.>
3) Remove the reduction driven gear. <Ref. to 4AT-90, REMOVAL, Reduction Driven Gear.>
4) Using ST, extract the reduction drive gear.
ST1 499737100 PULLER
ST2 899524100 PULLER SET

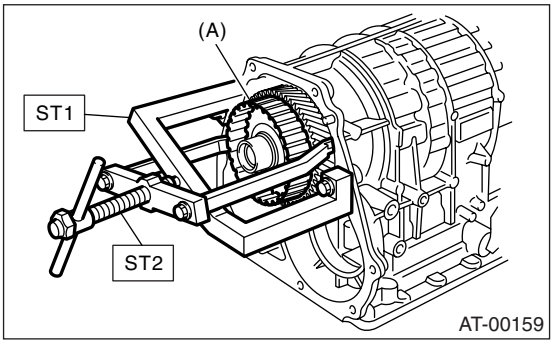

(A) Reduction drive gear

B: INSTALLATION

1) Install the reduction drive gear assembly.

NOTE:
Insert it fully into position until the bearing shoulder bottoms.

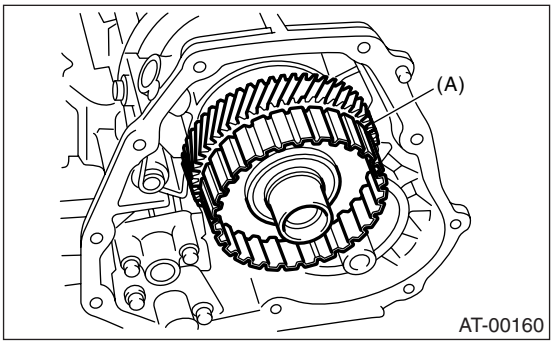

(A) Reduction drive gear

2) Install the reduction driven gear. <Ref. to 4AT-91, INSTALLATION, Reduction Driven Gear.>
3) Combine the transmission case with the extension case, and install rear vehicle speed sensor. <Ref. to 4AT-77, INSTALLATION, Extension Case.>
4) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1) Take out the seal rings.

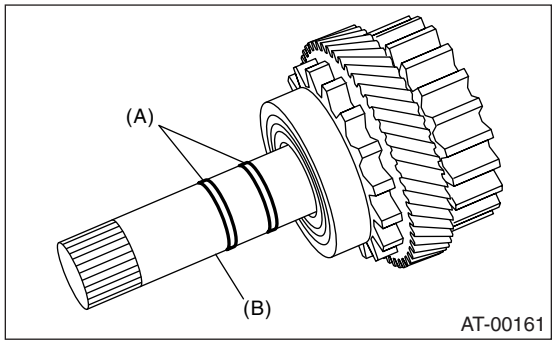

(A) Seal rings
(B) Reduction drive shaft

2) Using ST, remove the ball bearing.
ST 498077600 REMOVER

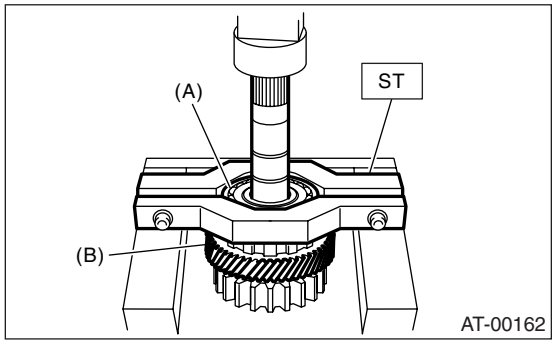

(A) Ball bearing
(B) Reduction drive gear

3) Using a press, remove the reduction drive gear.

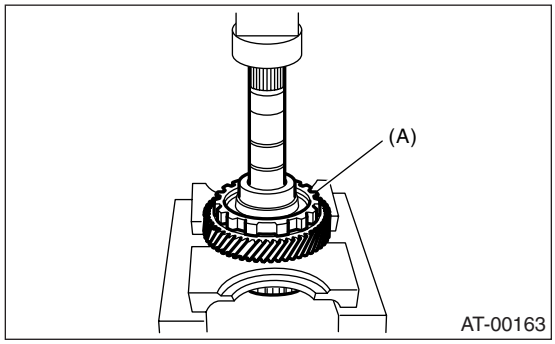

(A) Reduction drive gear

D: ASSEMBLY

1) Press-fit the reduction drive gear to the shaft.
2) Press-fit the a new ball bearing to the reduction drive gear.
3) Apply vaseline to outer surface of seal ring and shaft groove.
4) Attach new seal rings.

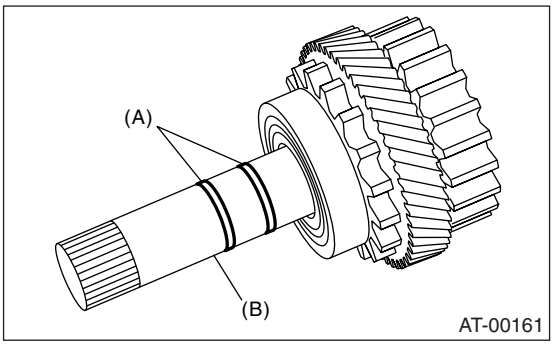

(A) Seal rings
(B) Reduction drive shaft

E: INSPECTION

• Rotate bearing by hand, make sure it rotates smoothly.
• Make sure that each component is free of harmful gouges, cuts, or dust.
• Measure the extension end play and adjust it to within specifications.<Ref. to 4AT-84, ADJUSTMENT, Transfer Clutch.>

32.Center Differential Carrier

A: REMOVAL

1) Remove the transmission assembly from vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove the rear wheel speed sensor, and separate the extension case from the transmission case. <Ref. to 4AT-77, REMOVAL, Extension Case.>
3) Pull out the rear driveshaft. <Ref. to 4AT-88, REMOVAL, Rear Drive Shaft.>
4) Using the special tools, pull out the center differential carrier assembly.
ST1 499737100 PULLER
ST2 899524100 PULLER SET

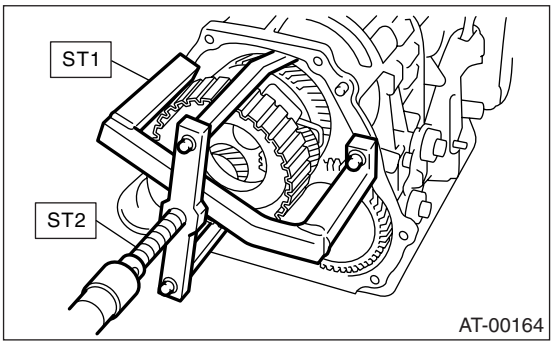

5) Pull out the shim(s) from transmission case.

B: INSTALLATION

1) Install the center differential assembly with the shim(s).

NOTE:
Insert the center differential assembly and shim(s) completely into the bearing shoulder bottom.

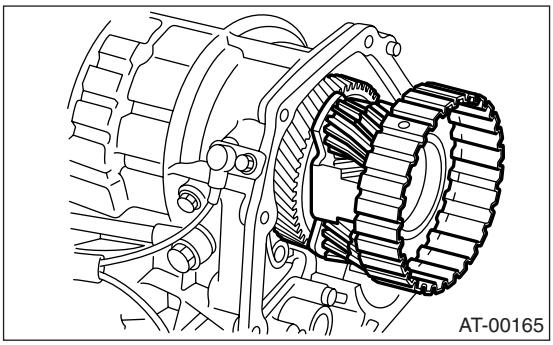

2) Insert the rear driveshaft. <Ref. to 4AT-88, INSTALLATION, Rear Drive Shaft.>
3) Connect the transmission case and extension case, and install the rear wheel speed sensor. <Ref. to 4AT-77, INSTALLATION, Extension Case.>
4) Install the transmission assembly onto vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1) Remove the seal rings.

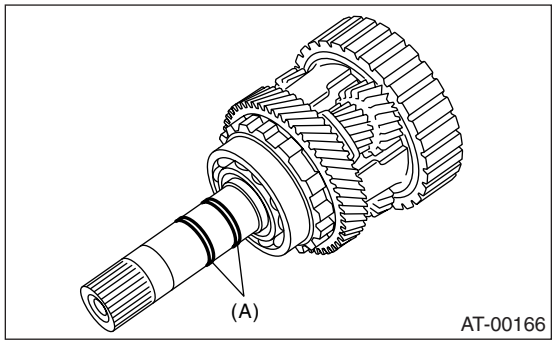

(A) Seal ring

2) Using a press and the special tool, remove the ball bearing.
ST 498077600 REMOVER

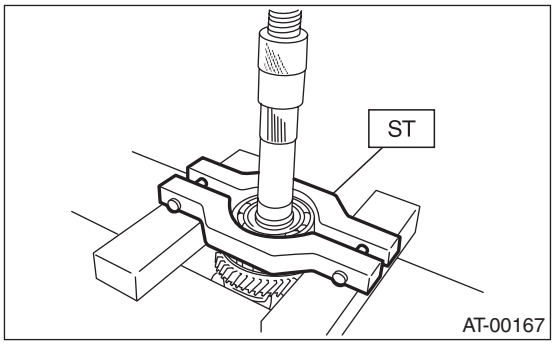

3) Remove the snap ring, and pull out the shaft from the center differential assembly.

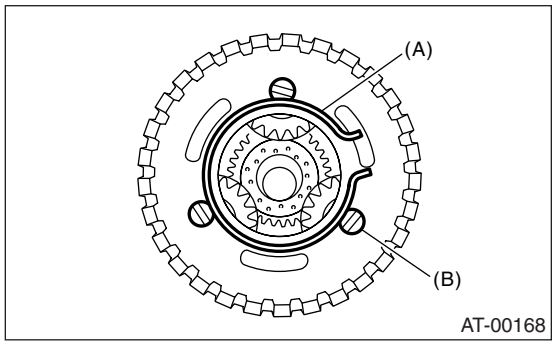

(A) Snap ring
(B) Shaft

4) Remove the thrust washers, pinion gears, and washers from the center differential assembly.

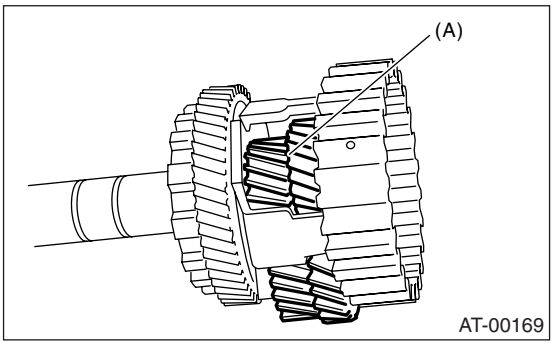

(A) Pinion gear

5) Pull out the intermediate shaft and thrust bearing.

D: ASSEMBLY

1) Install the thrust washer onto the intermediate shaft.
2) Install thrust bearing onto the intermediate shaft.
3) Install the pinion gears and washers.
4) Insert the shaft into the center differential assembly.
5) Install the snap ring.
6) Using a press, install a new ball bearing into the center differential assembly.
ST 498077000 REMOVER

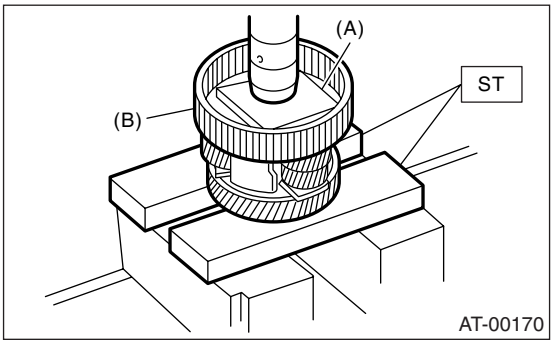

(A) Plate
(B) Center differential carrier

7) Apply Vaseline onto the seal ring outer surface and shaft grooves.
8) Install new seal rings.

E: INSPECTION

- Check all parts for hole, score, or dirt.
- Check the play of the extension end, and if necessary, adjust it. <Ref. to 4AT-85, VTD MODEL, ADJUSTMENT, Transfer Clutch.>

33.Parking Pawl

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Remove rear vehicle speed sensor and separate transmission case and extension case sections. <Ref. to 4AT-77, REMOVAL, Extension Case.>
3) Remove the reduction drive gear. (MPT model) <Ref. to 4AT-93, REMOVAL, Reduction Drive Gear.>
4) Remove the center differential carrier. (VTD model) <Ref. to 4AT-95, REMOVAL, Center Differential Carrier.>
5) Remove the parking pawl, return spring and shaft.

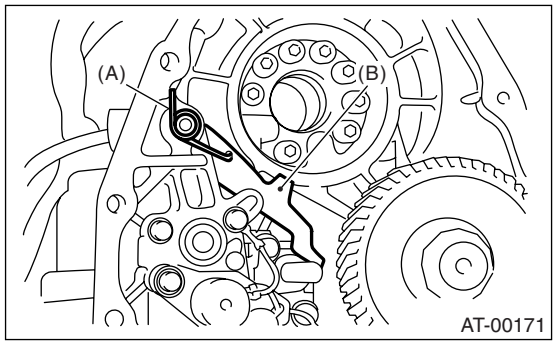

(A) Return spring
(B) Parking pawl

B: INSTALLATION

1) Install the parking pawl, shaft and return spring.

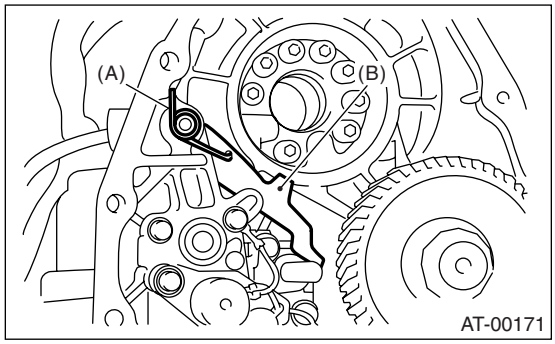

(A) Return spring
(B) Parking pawl

2) Install the reduction drive gear. <Ref. to 4AT-93, INSTALLATION, Reduction Drive Gear.>
3) Install the center differential carrier. (VTD model) <Ref. to 4AT-95, INSTALLATION, Center Differential Carrier.>
4) Install the rear vehicle speed sensor and extension case. <Ref. to 4AT-77, INSTALLATION, Extension Case.>
5) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Make sure that the tab of the packing pole on the reduction gear is not worn or otherwise damaged.

34. Torque Converter Clutch Case

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch assembly. <Ref. to 4AT-75, REMOVAL, Torque Converter Clutch Assembly.>
3) Remove the input shaft.

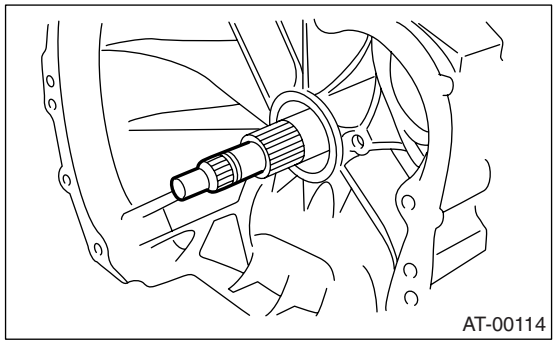

4) Lift-up lever behind the connector and disconnect it from stay.
5) Disconnect inhibitor switch connector from stay.

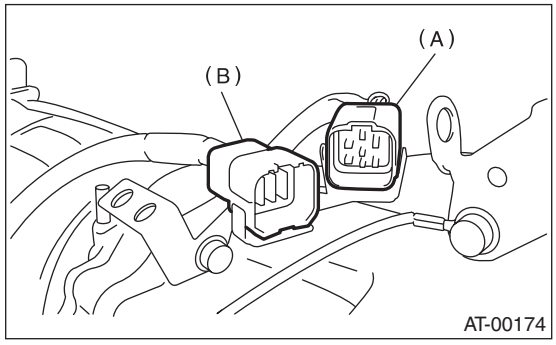

(A) Transmission harness
(B) Inhibitor switch harness

6) Remove the oil charger pipe. <Ref. to 4AT-74, REMOVAL, Oil Charger Pipe.>
7) Remove the oil cooler inlet and outlet pipes. <Ref. to 4AT-71, REMOVAL, ATF Cooler Pipe and Hose.>
8) Lightly tapping the torque converter clutch case with plastic hammer, separate the transmission case and torque converter clutch case.

NOTE:
• Be careful not to damage the oil seal and bushing inside the torque converter clutch case by the oil pump cover.
• Be careful not to lose the rubber seal.

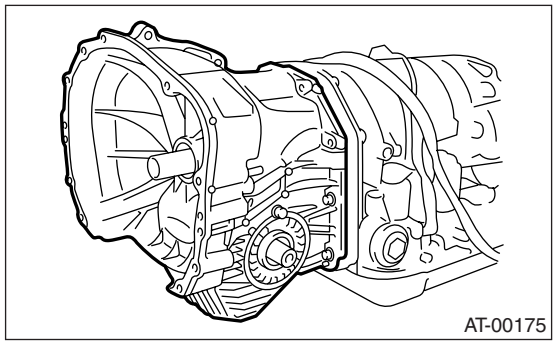

9) Remove the seal pipe if it is attached. (Reusing is not allowed.)

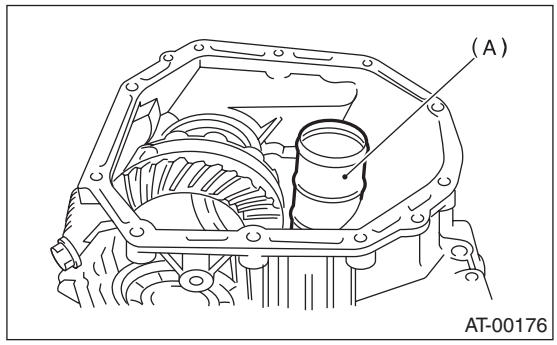

(A) Seal pipe

10) Remove the differential assembly. <Ref. to 4AT-112, REMOVAL, Front Differential.>
11) Remove the oil seal from torque converter clutch case.

B: INSTALLATION

1) Check the appearance of each component and clean.
2) Force-fit the oil seal to the torque converter clutch case with ST.
ST 398437700 DRIFT

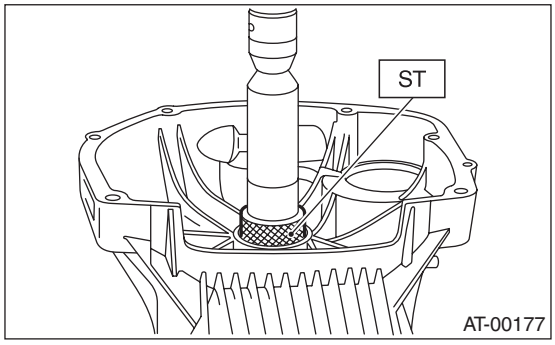

3) Install the differential assembly to the case. <Ref. to 4AT-112, INSTALLATION, Front Differential.>
4) Install the left and right side retainers. <Ref. to 4AT-116, ADJUSTMENT, Front Differential.>

5) Install the new seal pipe to the torque converter clutch case.

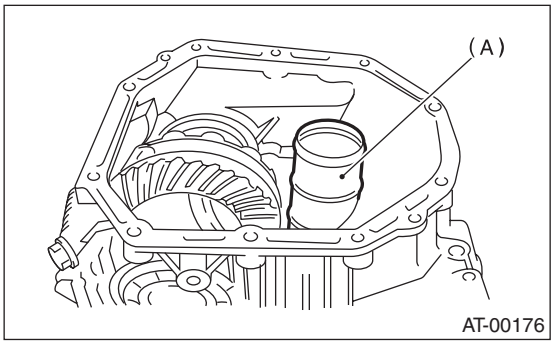

(A) Seal pipe

6) Install the rubber seal to the torque converter clutch case.

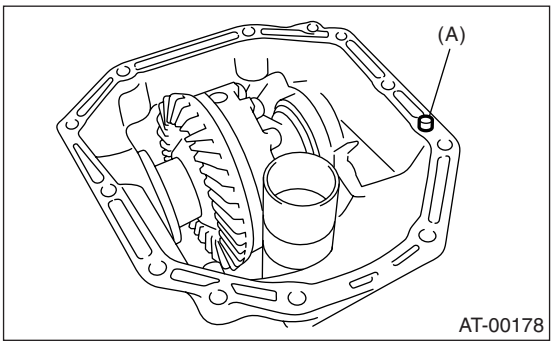

(A) Rubber seal

7) Apply proper amount of liquid gasket to the entire torque converter clutch case mating surface.

Liquid gasket:
THREE BOND 1215 (Part No. 004403007)

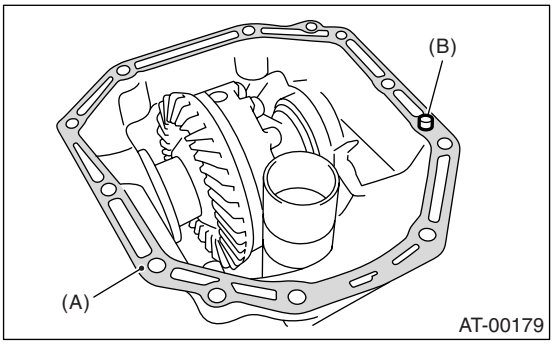

(A) THREE BOND 1215
(B) Rubber seal

8) Install the torque converter clutch case assembly without damaging bush and oil seal and secure with six bolts and four nuts.

Tightening torque:
41 N·m (4.2 kgf-m, 30.4 ft-lb)

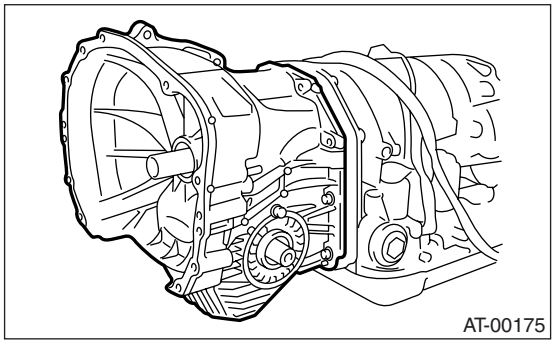

9) Insert inhibitor switch and transmission connector into stay.
10) Install air breather hose. <Ref. to 4AT-73, INSTALLATION, Air Breather Hose.>
11) Install the oil cooler pipes. <Ref. to 4AT-72, INSTALLATION, ATF Cooler Pipe and Hose.>
12) Install the oil charger pipe with O-ring. <Ref. to 4AT-74, INSTALLATION, Oil Charger Pipe.>
13) Insert the input shaft while turning lightly by hand and verify the protrusion amount.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

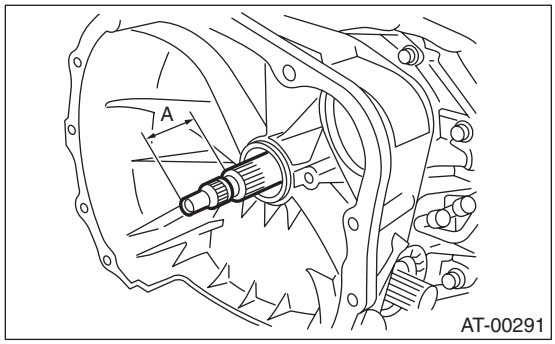

14) Install the torque converter clutch assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
15) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Measure the backlash and adjust to within specifications. <Ref. to 4AT-109, ADJUSTMENT, Drive Pinion Shaft.>

35.Oil Pump Housing

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch assembly. <Ref. to 4AT-75, REMOVAL, Torque Converter Clutch Assembly.>
3) Remove the input shaft.

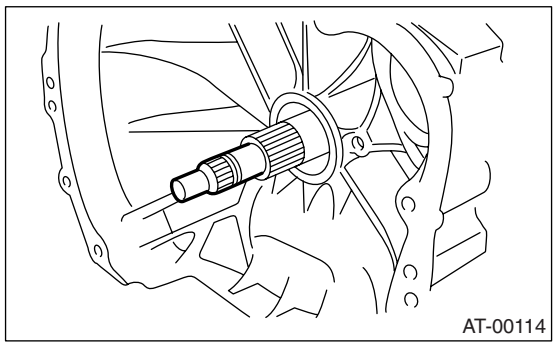

4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
5) Disconnect inhibitor switch connector from stay.
6) Remove the oil charger pipe. <Ref. to 4AT-74, REMOVAL, Oil Charger Pipe.>
7) Remove the oil cooler inlet and outlet pipes. <Ref. to 4AT-71, REMOVAL, ATF Cooler Pipe and Hose.>
8) Separation of torque converter clutch case and transmission case sections <Ref. to 4AT-98, REMOVAL, Torque Converter Clutch Case.>
9) Separate transmission case and extension case sections. <Ref. to 4AT-77, REMOVAL, Extension Case.>
10) Remove the reduction drive gear. (MPT model) <Ref. to 4AT-93, REMOVAL, Reduction Drive Gear.>
11) Remove the center differential carrier. (VTD model) <Ref. to 4AT-95, REMOVAL, Center Differential Carrier.>
12) Remove the reduction driven gear. <Ref. to 4AT-90, REMOVAL, REMOVAL, Reduction Driven Gear.>
13) Loosen the oil pump housing mounting bolts.

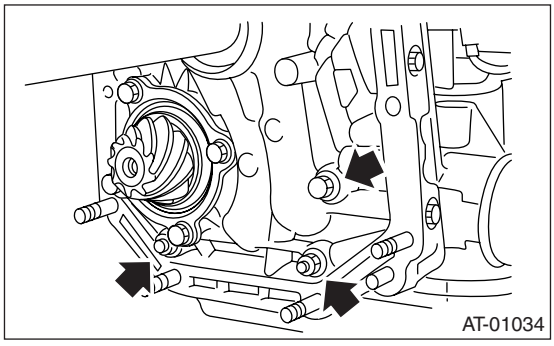

14) Place two wooden blocks on the workbench, and stand the transmission case with its rear end facing down.

NOTE:
• Be careful not to scratch the rear mating surface of the transmission case.
• Note that the parking rod and drive pinion protrude from the mating surface.

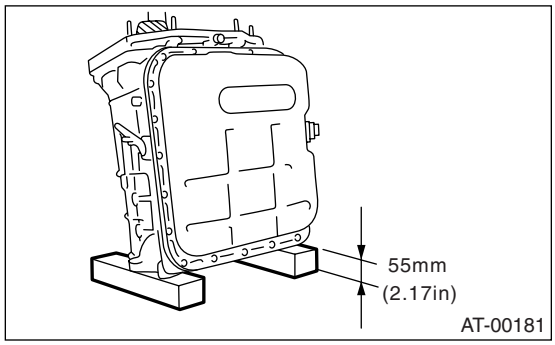

15) Remove the oil pump housing and adjusting thrust washer.

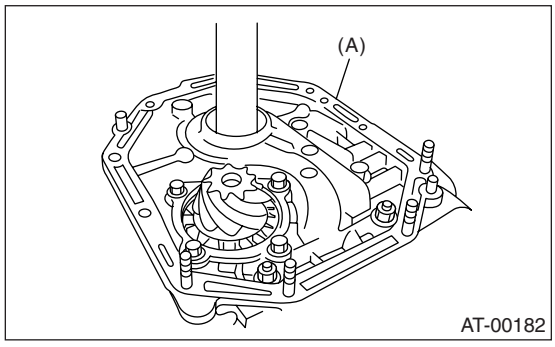

(A) Oil pump housing

B: INSTALLATION

1) Secure the oil pump housing with two nuts and the bolt.

Tightening torque:
42 N·m (4.3 kgf-m, 31 ft-lb)

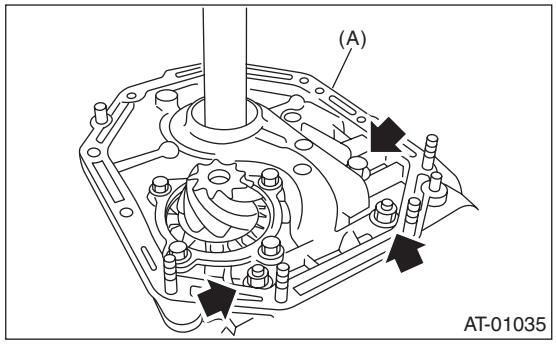

(A) Oil pump housing

2) Install the torque converter clutch case assembly to the transmission case assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
3) Install reduction driven gear. <Ref. to 4AT-91, INSTALLATION, Reduction Driven Gear.>
4) Install the reduction drive gear. (MPT model) <Ref. to 4AT-93, INSTALLATION, Reduction Drive Gear.>
5) Install the center differential carrier. (VTD model) <Ref. to 4AT-95, INSTALLATION, Center Differential Carrier.>
6) Combine the extension case with the transmission case, and install vehicle speed sensor 1 (rear). <Ref. to 4AT-77, INSTALLATION, Extension Case.>
7) Insert inhibitor switch and transmission connector into stay.

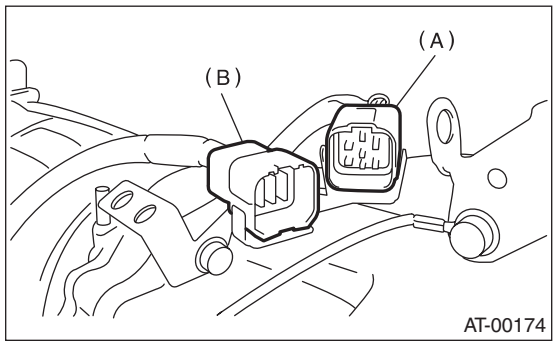

(A) Transmission harness
(B) Inhibitor switch harness

8) Install the oil cooler pipe. <Ref. to 4AT-72, INSTALLATION, ATF Cooler Pipe and Hose.>
9) Install the oil charger pipe with O-ring. <Ref. to 4AT-74, INSTALLATION, Oil Charger Pipe.>
10) Insert the input shaft while turning lightly by hand and verify the protrusion amount.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

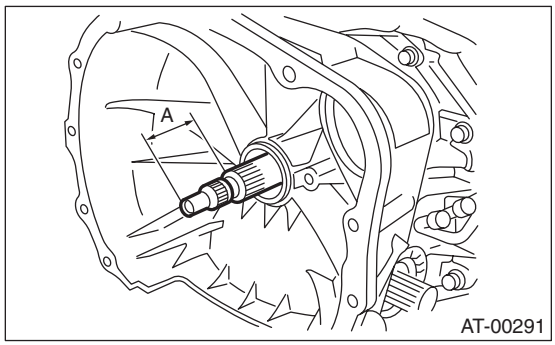

11) Install the torque converter clutch assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
12) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1. OIL PUMP COVER

1) Remove four seal rings.

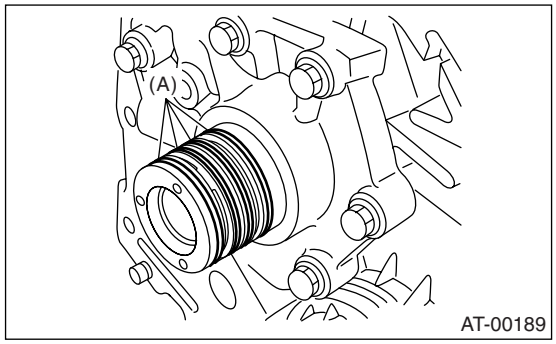

(A) Seal rings

2) Lightly tap the end of the stator shaft to remove the cover.

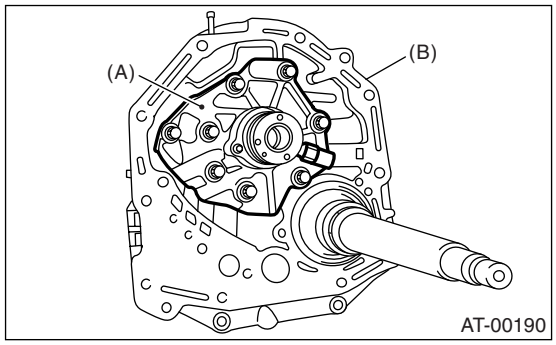

(A) Oil pump cover
(B) Oil pump housing

3) Remove the inner and outer rotor.

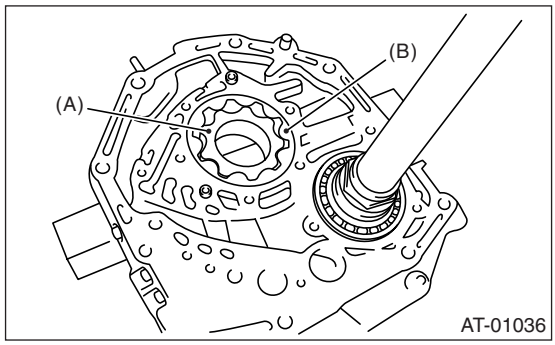

(A) Inner rotor
(B) Outer rotor

2. OIL SEAL RETAINER

1) Remove the oil seal retainer.

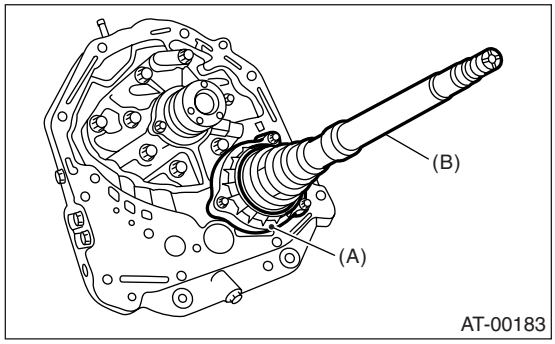

(A) Oil seal retainer
(B) Drive pinion shaft

2) Remove the O-ring.

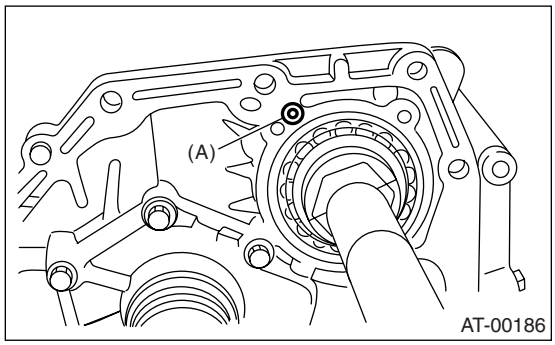

(A) O-ring

3) Remove the oil seal from oil seal retainer.

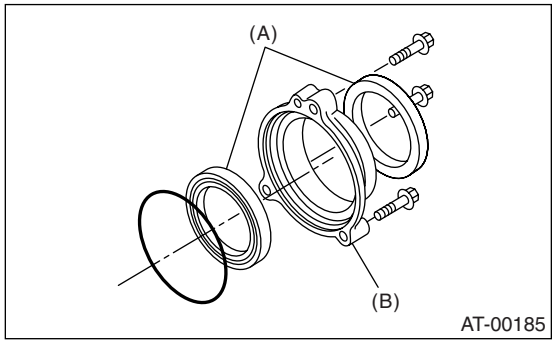

(A) Oil seal
(B) Oil seal retainer

D: ASSEMBLY

1. OIL PUMP COVER

1) Install oil pump rotor assembly to oil pump housing.

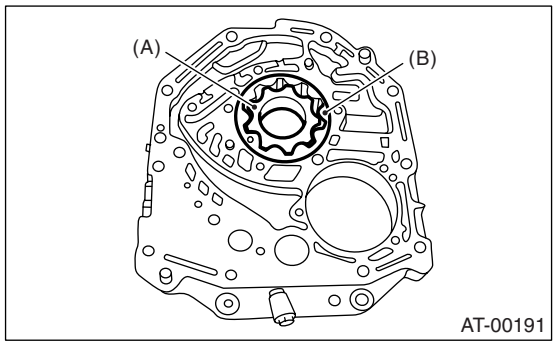

(A) Inner rotor
(B) Outer rotor

2) Align both pivots with the pivot holes of the cover, and install the oil pump cover being careful not to apply undue force to the pivots.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

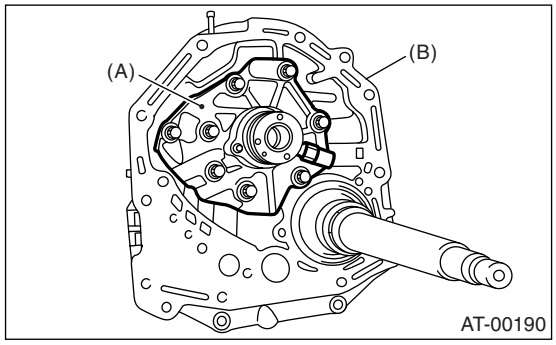

(A) Oil pump cover
(B) Oil pump housing

3) After assembling, turn the oil pump shaft to check for smooth rotation of the rotor.

4) Install the oil seal retainer and new seal rings. After adjusting the drive pinion backlash and tooth contact. <Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>

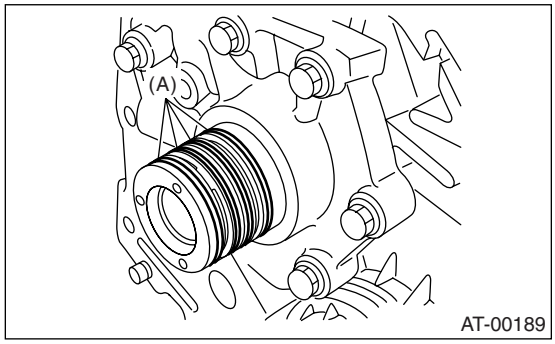

(A) Seal rings

2. OIL SEAL RETAINER

1) Install two new oil seals to the oil seal retainer in proper position using ST.

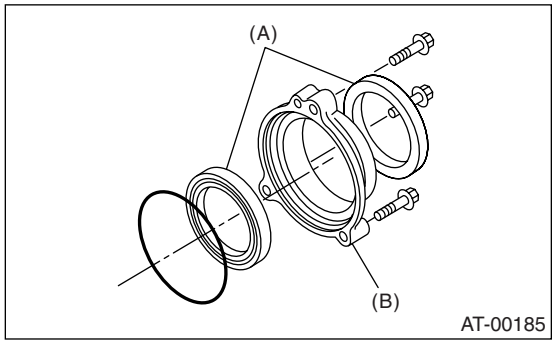

(A) Oil seal
(B) Oil seal retainer

2) Install a new O-ring to the oil seal retainer using vaseline. Install the seal to oil pump housing bore.

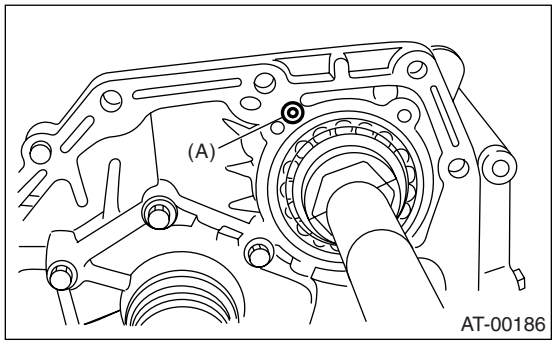

(A) O-ring

3) Install the oil seal and secure it using three bolts being careful not to damage oil seal lip.

Tightening torque:
7 N·m (0.7 kgf-m, 5.1 ft-lb)

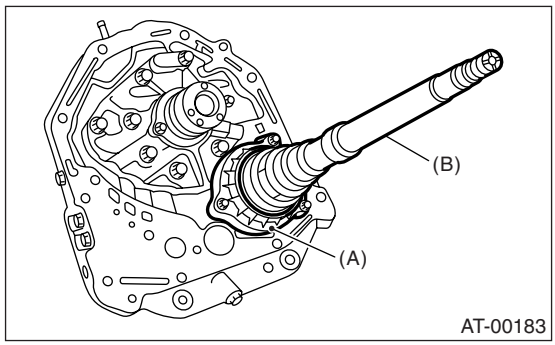

(A) Oil seal retainer
(B) Drive pinion shaft

E: INSPECTION

1) Check seal ring and O-ring oil seal for breaks or damage.
2) Check other parts for dents or abnormalities.
3) Selection of oil pump rotor assembly
(1) Tip clearance
Install inner rotor and outer rotor to oil pump. With rotor gears facing each other, measure crest-to-crest clearance.

Tip clearance:
0.02 — 0.15 mm (0.0008 — 0.0059 in)

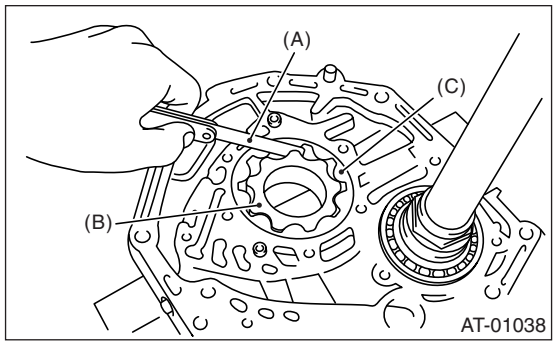

(A) Thickness gauge
(B) Inner rotor
(C) Outer rotor

(2) Side clearance
Set a depth gauge to oil pump housing, then measure oil pump housing-to-rotor clearances.

Side clearance:
0.02 — 0.04 mm (0.0008 — 0.0016 in)

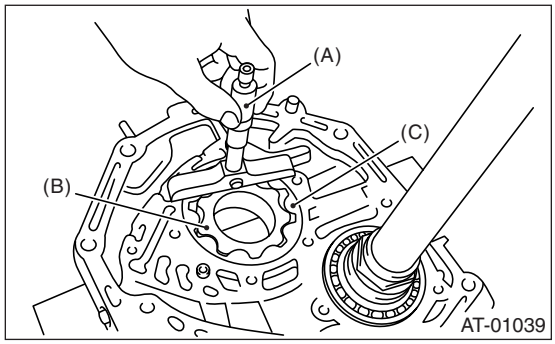

(A) Depth gauge
(B) Inner rotor
(C) Outer rotor

(3) If depth and/or side clearances are outside specifications, replace rotor assembly.

Non-turbo model:

Oil pump rotor assembly	
Part No.	Thickness mm (in)
15008AA060	11.37 — 11.38 (0.4476 — 0.4480)
15008AA070	11.38 — 11.39 (0.4480 — 0.4484)
15008AA080	11.39 — 11.40 (0.4484 — 0.4488)

Turbo model:

Oil pump rotor assembly	
Part No.	Thickness mm (in)
15008AA100	14.87 — 14.88 (0.5067 — 0.5071)
15008AA110	14.88 — 14.89 (0.5071 — 0.5075)
15008AA120	14.89 — 14.90 (0.5075 — 0.5079)

Measure the total end play and adjust to within specifications. <Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>

F: ADJUSTMENT

1) Using ST, measure the distance from the transmission case mating surface to the recessed portion of the high clutch drum “L”.
ST 398643600 GAUGE

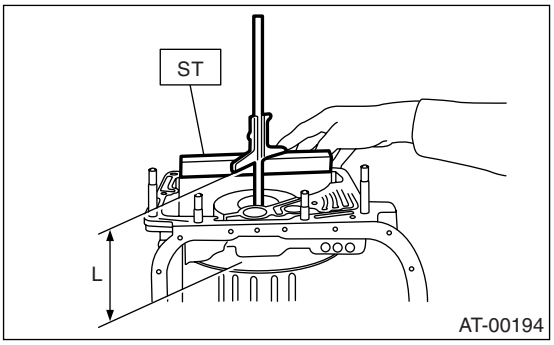

2) Using ST, measure the distance from the oil pump housing mating surface to the top surface of the oil pump cover with thrust needle bearing.
ST 398643600 GAUGE

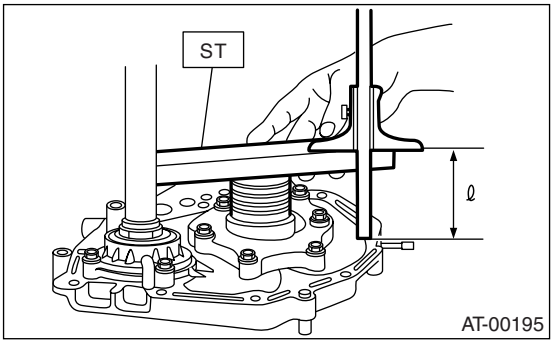

3) Calculation of total end play
Select suitable bearing race from among those listed in this table so that clearance C is in the 0.25 to 0.55 mm (0.0098 to 0.0217 in) range.
C = (L + G) − ℓ

C	Clearance between concave portion of high clutch and end of clutch drum support
L	Length from case mating surface to concave portion of high clutch
G	Gasket thickness [0.28 mm (0.0110 in)]
ℓ	Height from housing mating surface to upper surface of clutch drum support

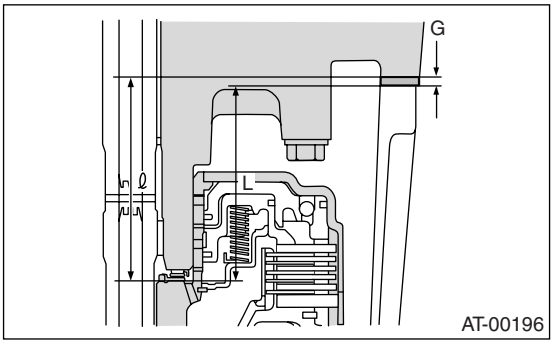

Thrust needle bearing	
Part No.	Thickness mm (in)
806528050	4.1 (0.161)
806528060	4.3 (0.169)
806528070	4.5 (0.177)
806528080	4.7 (0.185)
806528090	4.9 (0.193)
806528100	5.1 (0.201)

4) After completing end play adjustment, insert the bearing race in the recess of the high clutch. Attach the thrust needle bearing to the oil pump cover with vaseline.
5) After correctly installing the new gasket to the case mating surface, carefully install the oil pump housing assembly. Be careful to avoid hitting the drive pinion against the inside of the case.
6) Install both parts with dowel pins aligned. Make sure no clearance exists at the mating surface.

36.Drive Pinion Shaft

A: REMOVAL

1) Remove the transmission assembly from vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch assembly. <Ref. to 4AT-75, REMOVAL, Torque Converter Clutch Assembly.>
3) Remove the input shaft.

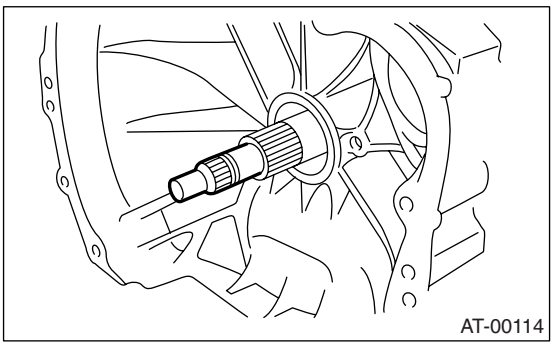

4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
5) Disconnect inhibitor switch connector from stay.
6) Disconnect the air breather hose. <Ref. to 4AT-73, REMOVAL, Air Breather Hose.>
7) Remove the oil charger pipe. <Ref. to 4AT-74, REMOVAL, Oil Charger Pipe.>
8) Remove the oil cooler inlet and outlet pipes. <Ref. to 4AT-71, REMOVAL, ATF Cooler Pipe and Hose.>
9) Separation of torque converter clutch case and transmission case sections <Ref. to 4AT-98, REMOVAL, Torque Converter Clutch Case.>
10) Separate transmission case and extension case sections. <Ref. to 4AT-77, REMOVAL, Extension Case.>
11) Remove the reduction drive gear. (MPT model) <Ref. to 4AT-93, REMOVAL, Reduction Drive Gear.>
12) Remove the center differential carrier. (VTD model) <Ref. to 4AT-95, REMOVAL, Center Differential Carrier.>
13) Remove the reduction driven gear.
<Ref. to 4AT-90, REMOVAL, Reduction Driven Gear.>
14) Remove the drive pinion shaft mounting bolt and remove the drive shaft assembly from oil pump housing.

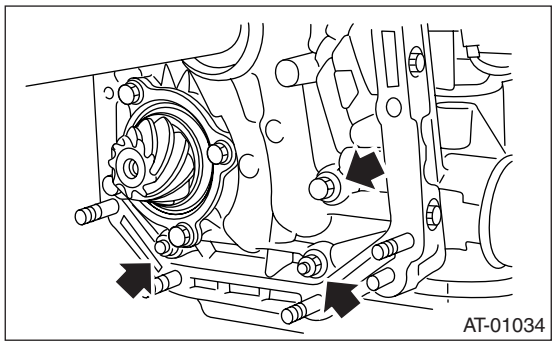

B: INSTALLATION

1) Assemble the drive pinion assembly to the oil pump housing.

NOTE:
- Pay attention not to bend the shim.
- Pay attention not to press the pinion into housing bore.

Tightening torque:
40 N·m (4.0 kgf-m, 30 ft-lb)

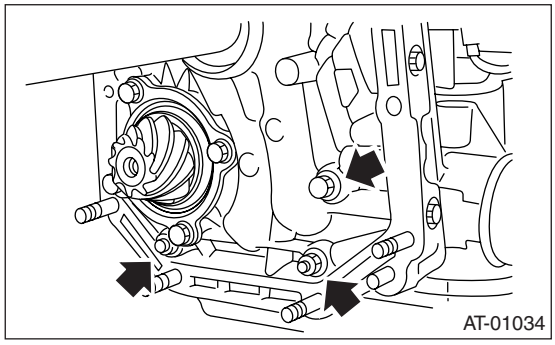

2) Combine the torque converter case with the transmission case. <Ref. to 4AT-98, INSTALLATION, Torque Converter Clutch Case.>
3) Install the reduction driven gear.
<Ref. to 4AT-91, INSTALLATION, Reduction Driven Gear.>
4) Install the reduction drive gear. (MPT model) <Ref. to 4AT-93, INSTALLATION, Reduction Drive Gear.>
5) Install the center differential carrier. (VTD model) <Ref. to 4AT-95, INSTALLATION, Center Differential Carrier.>
6) Combine the extension case with the transmission case, and install vehicle speed sensor 1 (rear). <Ref. to 4AT-77, INSTALLATION, Extension Case.>
7) Insert inhibitor switch and transmission connector into stay.

8) Install the oil cooler inlet and outlet pipes. <Ref. to 4AT-72, INSTALLATION, ATF Cooler Pipe and Hose.>
9) Install the oil charger pipe with O-ring.
10) Insert the input shaft while turning lightly by hand and verify the protrusion amount.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

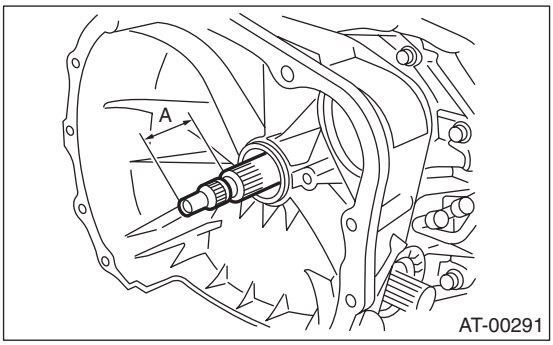

11) Install the torque converter clutch assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
12) Install the transmission assembly to vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1) Straighten the staked portion of the lock nut, and remove the lock nut while locking the rear spline portion of the shaft with ST1 and ST2. Then pull off the drive pinion collar.
ST1 498937110 HOLDER
ST2 499787700 WRENCH
ST3 499787500 ADAPTER

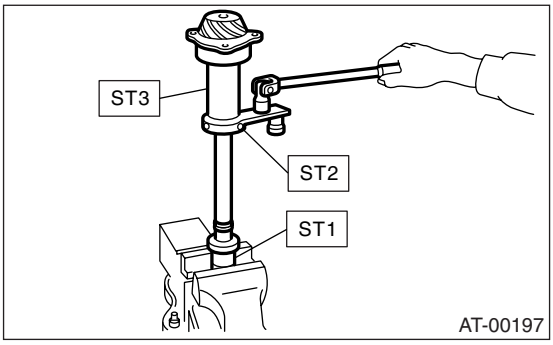

2) Remove the O-ring.

3) Using a press, separate the rear roller bearing and outer race from the shaft.

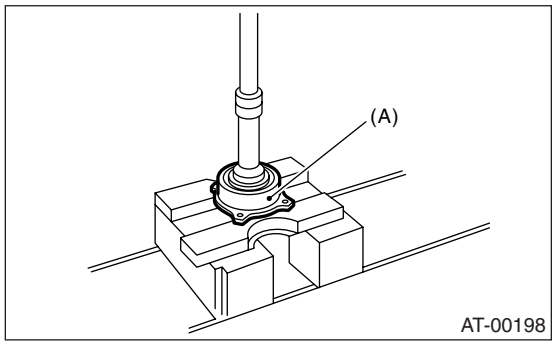

(A) Outer race

4) Using a press and ST, separate the front roller bearing from the shaft.
ST 498517000 REPLACER

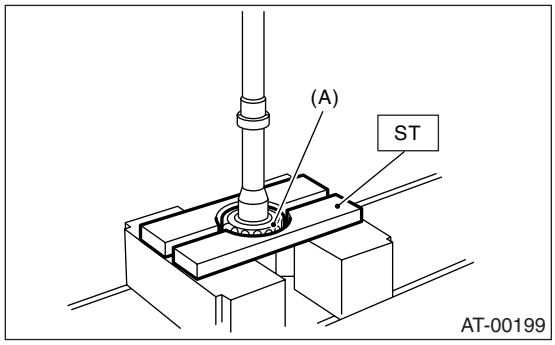

(A) Front roller bearing

D: ASSEMBLY

1) Measure dimension “A” of the drive pinion shaft.
ST 398643600 GAUGE

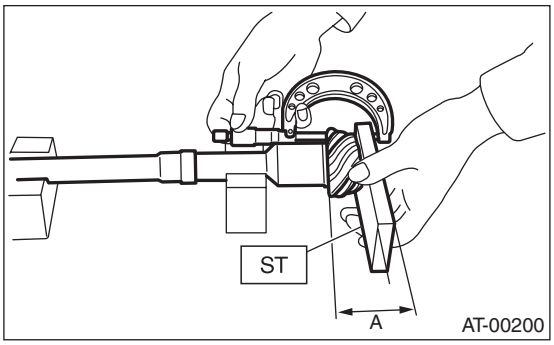

2) Using a press, force-fit a new roller bearing in position.

NOTE:
If too much pressure is applied, the roller bearing will not turn easily.

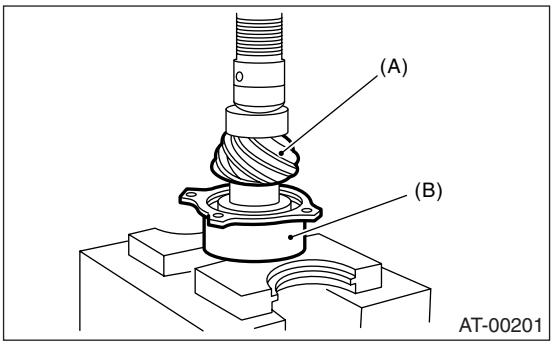

(A) Drive pinion shaft
(B) Roller bearing

3) After fitting a new O-ring to the shaft, attach the drive pinion collar to the shaft.
4) Install the lock washer to drive pinion shaft in proper direction.
5) Tighten a new lock nut with ST1, ST2 and ST3.
Calculate lock washer and lock nut specifications using the following formula.
$T2 = L2/(L1 + L2) \times T1$
T1: 116 N·m (11.8 kgf-m, 85.3 ft-lb)
[Required torque setting]
T2: Tightening torque
L1: ST2 length 0.072 m (2.83 in)
L2: Torque wrench length
Example:

Torque wrench length m (in)	Tightening torque N·m (kgf-m, ft-lb)
0.4 (15.75)	98 (10.0, 72)
0.45 (17.72)	100 (10.2, 73.8)
0.5 (19.69)	101 (10.3, 74.5)
0.55 (21.65)	102 (10.4, 75)

ST1 498937110 HOLDER
ST2 499787700 WRENCH
ST3 499787500 ADAPTER

NOTE:
Install ST2 to torque wrench as straight as possible.

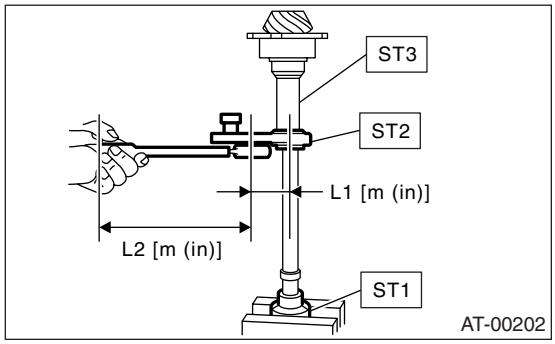

6) Measure the starting torque of the bearing. Make sure the starting torque is within the specified range. If out of the allowable range, replace the roller bearing.

Starting torque:
7.6 — 38.1 N (0.776 — 3.88 kgf, 1.7 — 8.6 lb)

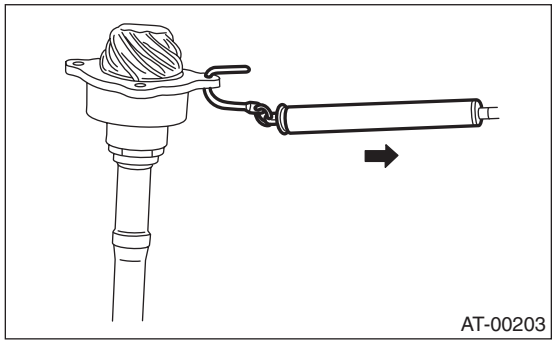

7) Stake the lock nut securely at two places.
8) Measure dimension “B” of the drive pinion shaft.
ST 398643600 GAUGE

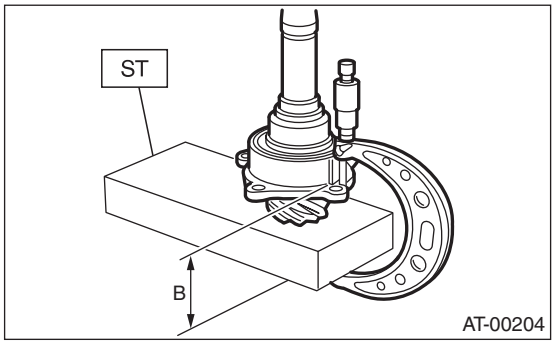

9) The thickness “t” (mm) of the drive pinion shim.
$t = 6.5 \pm 0.0625 - (B - A)$

10) Select three or less shims from following table.

Available drive pinion shims	
Part No.	Thickness mm (in)
31451AA050	0.150 (0.0059)
31451AA060	0.175 (0.0069)
31451AA070	0.200 (0.0079)
31451AA080	0.225 (0.0089)
31451AA090	0.250 (0.0098)
31451AA100	0.275 (0.0108)

E: INSPECTION

• Make sure that all component parts are free of harmful cuts, gouges, and other faults.
• Adjust the teeth alignment. <Ref. to 4AT-109, ADJUSTMENT, Drive Pinion Shaft.>

F: ADJUSTMENT

1) Thoroughly remove the liquid gasket from the case mating surface beforehand.
2) Install the oil pump housing assembly to the torque converter clutch case, and secure evenly by tightening four bolts.

NOTE:
Use an old gasket or an aluminum washer so as not to damage the mating surface of the housing.

Tightening torque:
41 N·m (4.2 kgf-m, 30.4 ft-lb)

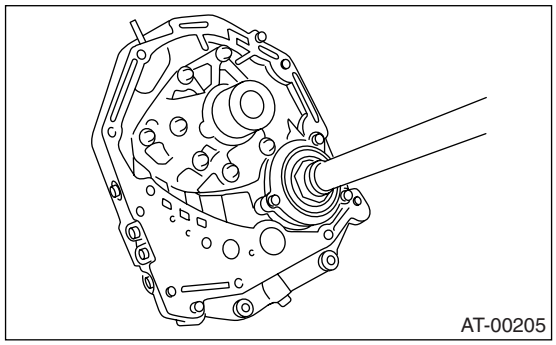
AT-00205

3) Rotate the drive pinion several times with ST1 and ST2.
ST1 498937110 HOLDER
ST2 499787700 WRENCH

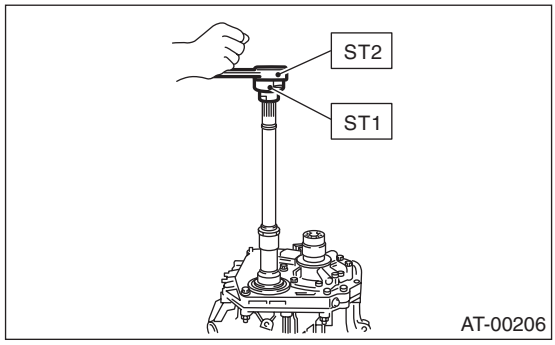

AT-00206

4) Adjust the backlash between drive pinion and crown gear. <Ref. to 4AT-116, ADJUSTMENT, Front Differential.>
5) Apply red lead evenly to the surfaces of three or four teeth of the crown gear. Rotate the drive pinion in the forward and reverse directions several times. Then remove the oil pump housing, and check the tooth contact pattern.
If tooth contact is improper, readjust the backlash or shim thickness.<Ref. to 4AT-116, ADJUSTMENT, Front Differential.>
• Tooth contact
Checking item:Tooth contact pattern is slightly shifted toward to toe side under no-load rotation. [When loaded, contact pattern moves toward heel.]

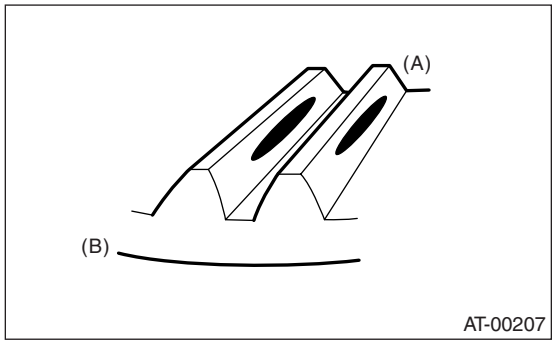

AT-00207

(A) Toe side
(B) Heel side

• Face contact
Checking item: Backlash is too large.
Contact pattern

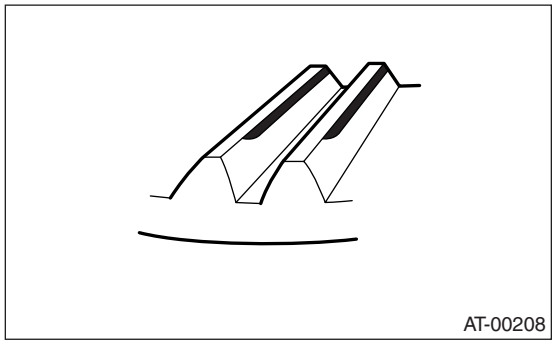
AT-00208

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

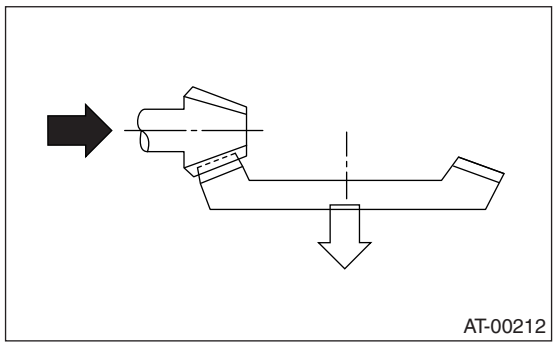

- Flank contact

Checking item: Backlash is too small.
Contact pattern

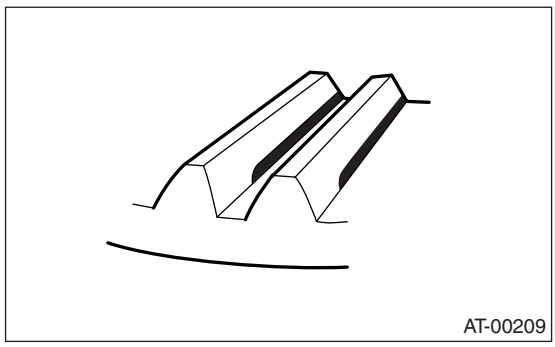

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

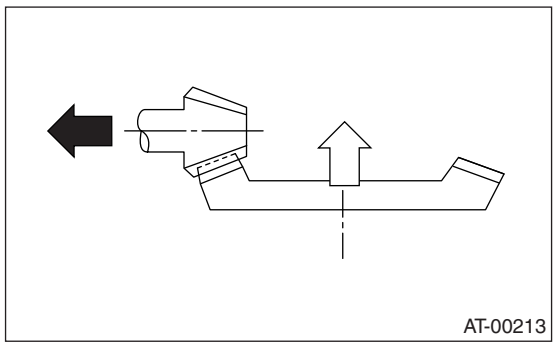

- Toe contact (Inside end contact)

Checking item: Contact areas is small.
Contact pattern

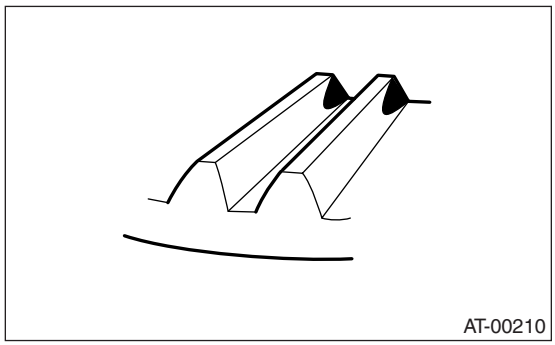

Corrective action: Decrease thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

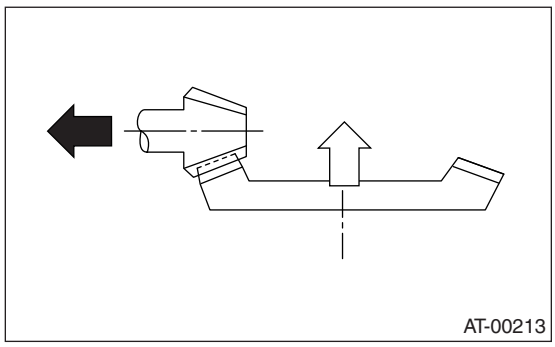

- Heel contact (Outside end contact)

Checking item: Contact areas is small.
Contact pattern

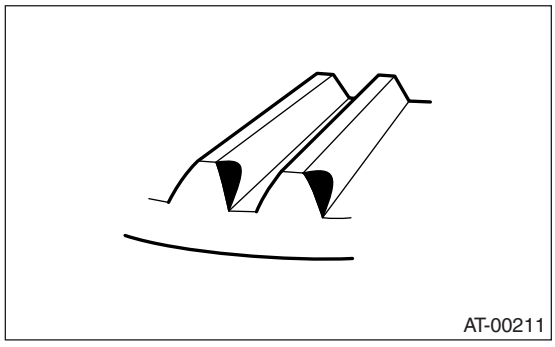

Corrective action: Increase thickness of drive pinion height adjusting shim in order to move drive pinion close to crown gear.

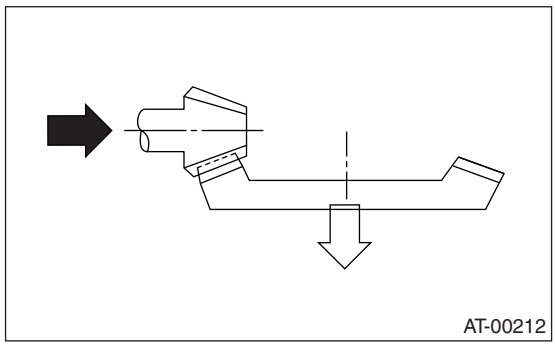

6) If tooth contact is correct, mark the retainer position and loosen it. After fitting a new O-ring and oil seal, screw in the retainer to the marked position. Then tighten the lock plate to the specified torque.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

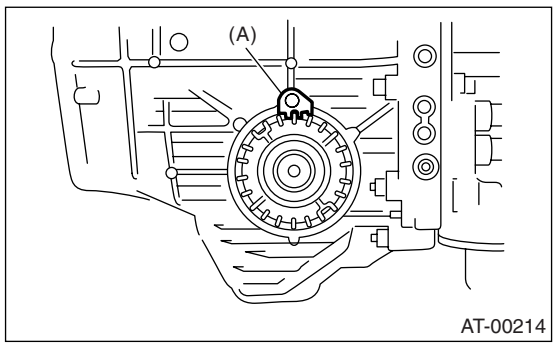

(A) Lock plate

37.Front Differential

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch assembly. <Ref. to 4AT-75, REMOVAL, Torque Converter Clutch Assembly.>
3) Remove the input shaft.

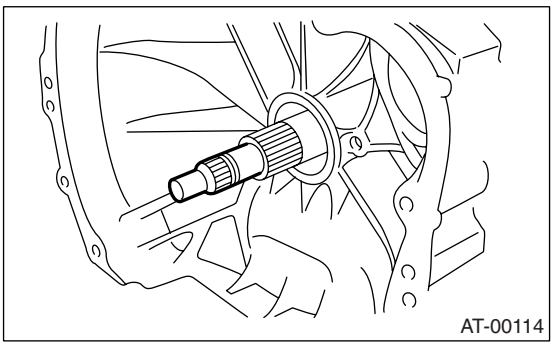

4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
5) Disconnect inhibitor switch from stay.
6) Remove the oil charger pipe. <Ref. to 4AT-74, REMOVAL, Oil Charger Pipe.>
7) Remove the oil cooler inlet and outlet pipes. <Ref. to 4AT-71, REMOVAL, ATF Cooler Pipe and Hose.>
8) Separation of torque converter clutch case and transmission case.<Ref. to 4AT-98, REMOVAL, Torque Converter Clutch Case.>
9) Remove the seal pipe.
10) Remove the differential side retainer with ST.

NOTE:
Hold the differential case assembly by hand to avoid damaging retainer mounting hole of the torque converter clutch case.

ST 499787000 WRENCH ASSY

11) Remove the differential assembly without damaging installation part of retainer.

B: INSTALLATION

1) Install the differential assembly to the case, paying special attention not to damage the inside of the case (particularly, the differential side retainer contact surface).

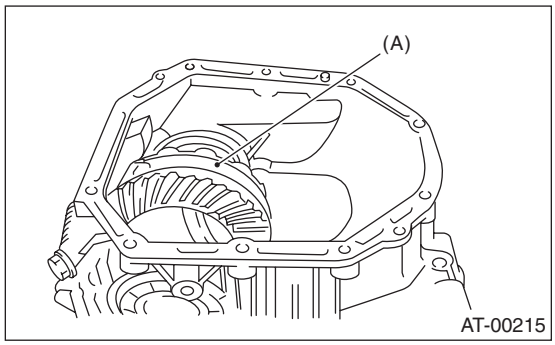

(A) Differential assembly

2) Install the O-rings from left and right side retainer.
3) Using ST, install the side retainers. <Ref. to 4AT-112, REMOVAL, Front Differential.>

ST 499787000 WRENCH ASSY

4) Adjust the front differential backlash. <Ref. to 4AT-116, ADJUSTMENT, Front Differential.>
5) Install the lock plate.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

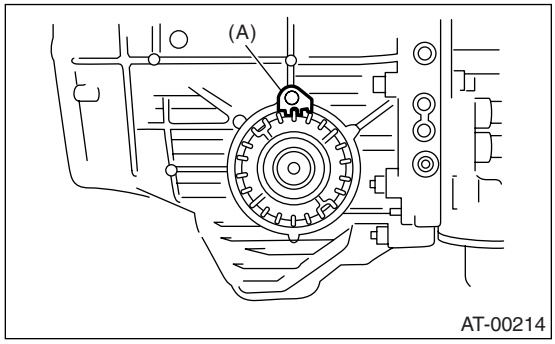

(A) Lock plate

6) Install the new seal pipe to the torque converter clutch case.

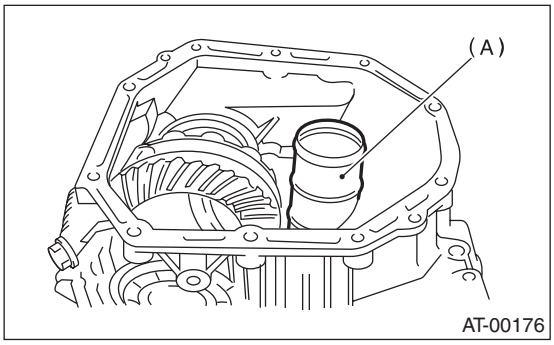

(A) Seal pipe

7) Install the torque converter clutch case to transmission case. <Ref. to 4AT-98, INSTALLATION, Torque Converter Clutch Case.>
8) Insert inhibitor switch and transmission connector into stay.

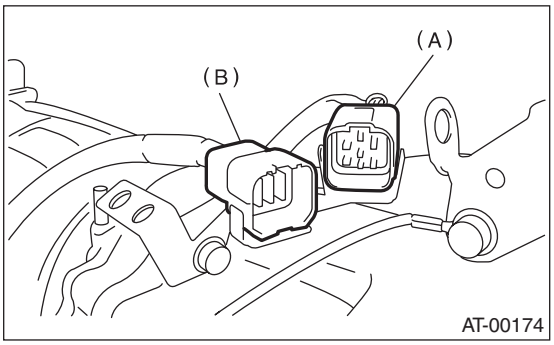

(A) Transmission harness
(B) Inhibitor switch harness

9) Install oil cooler pipes. <Ref. to 4AT-72, INSTALLATION, ATF Cooler Pipe and Hose.>
10) Install the oil charger pipe with O-ring <Ref. to 4AT-74, INSTALLATION, Oil Charger Pipe.>
11) Insert the input shaft while turning lightly by hand and verify the protrusion amount.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

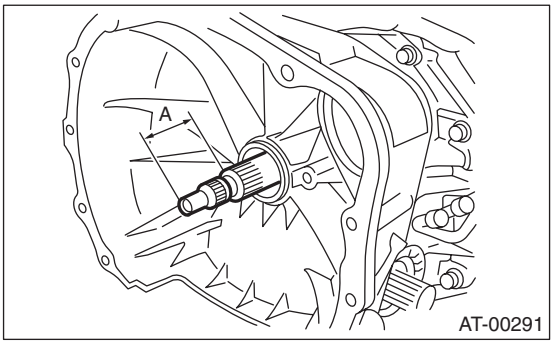

12) Install the torque converter clutch assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
13) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1. DIFFERENTIAL CASE ASSEMBLY

1) Using a press and ST, remove the taper roller bearing.
ST 498077000 REMOVER

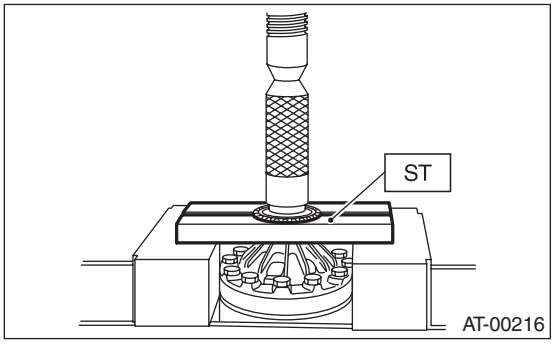

2) Secure the case in a vise and remove the crown gear tightening bolts, then separate the crown gear, case (RH) and case (LH).

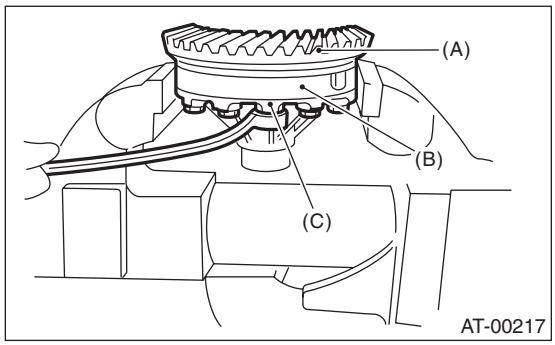

(A) Crown gear
(B) Differential case (RH)
(C) Differential case (LH)

3) Pull out the straight pin and shaft, and remove the differential bevel gear, washer, and differential bevel pinion.

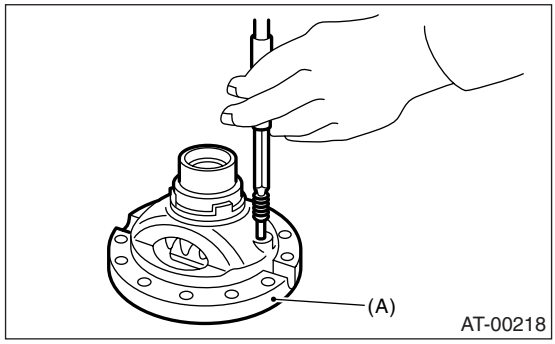

(A) Differential case (RH)

2. SIDE RETAINER

NOTE:
After adjusting the drive pinion backlash and tooth contact, remove and install the oil seal and O-ring.

1) Remove O-ring.

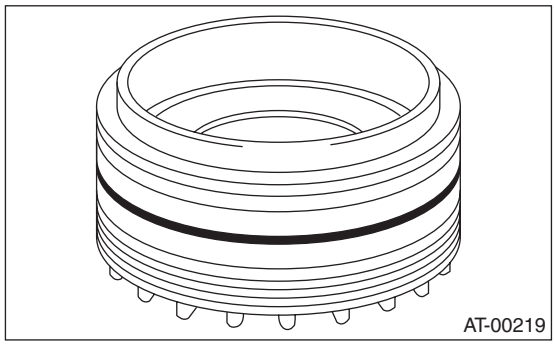

2) Remove oil seal.

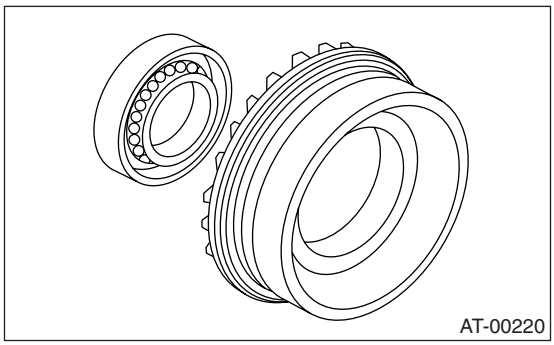

3) Take out either split pin, remove claw.
ST 398527700 PULLER ASSY

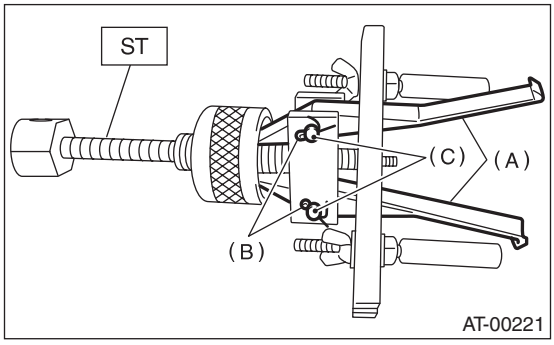

(A) Claw
(B) Split pin
(C) Pin

4) Securely attach two claws to outer race, set ST to side retainer.
ST 398527700 PULLER ASSY

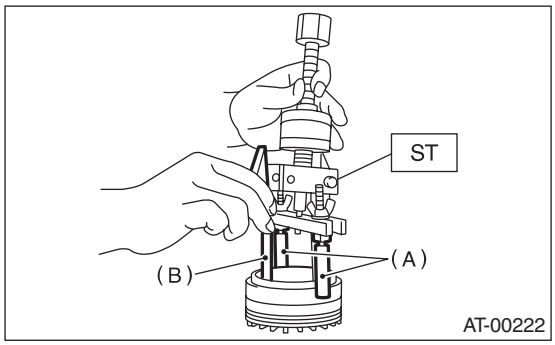

(A) Shaft
(B) Claw

5) Return removed claw to the original position, and install pin and split pin.

6) Hold the shaft of ST to avoid removing from side retainer, and then remove the bearing outer race.
ST 398527700 PULLER ASSY

NOTE:
Replace bearing inner and outer races as a single unit.

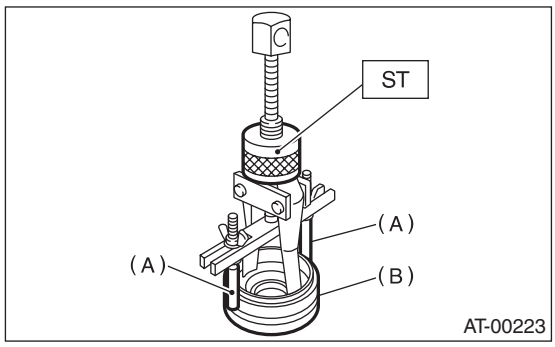

(A) Shaft
(B) Side retainer

D: ASSEMBLY

1. DIFFERENTIAL CASE ASSEMBLY

1) Install the washer, differential bevel gear and differential bevel pinion in the differential case (RH). Insert the pinion shaft.
2) Install straight pin from reverse direction.

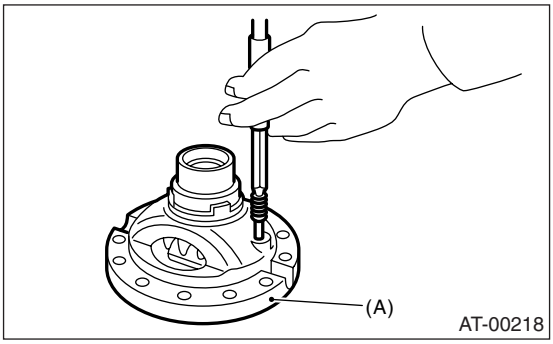

(A) Differential case (RH)

3) Install the washer and differential bevel gear to the differential case (LH). Then put the case over the differential case (RH), and connect both cases.

4) Install the crown gear and secure by tightening the bolt.

Standard tightening torque:
62 N·m (6.3 kgf-m, 45.6 ft-lb)

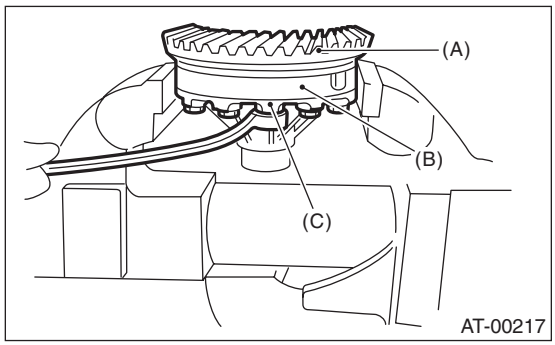

(A) Crown gear
(B) Differential case (RH)
(C) Differential case (LH)

5) Measurement of backlash (Selection of washer)
(1) Measure the gear backlash with ST1 and ST2, and insert ST2 through the access window of the case.
ST1 498247001 MAGNET BASE
ST2 498247100 DIAL GAUGE

NOTE:
• Measure the backlash by applying a pinion tooth between two bevel gear teeth.
• Fix bevel pinion gear in place with a screwdriver or similar tool when measuring.

Standard value:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

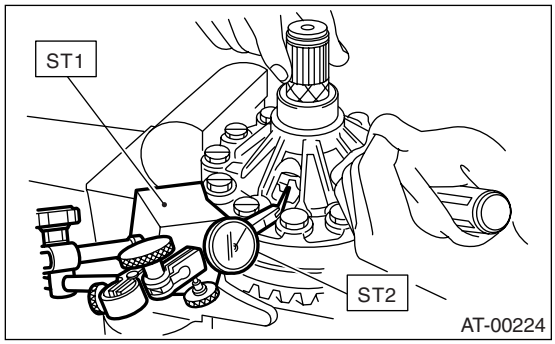

(2) If backlash is not as specified, select a washer from the table below.

Washer	
Part No.	Thickness mm (in)
803038021	0.95 (0.037)
803038022	1.00 (0.039)
803038023	1.05 (0.041)

6) Using ST, install taper roller bearing.
ST 398437700 DRIFT

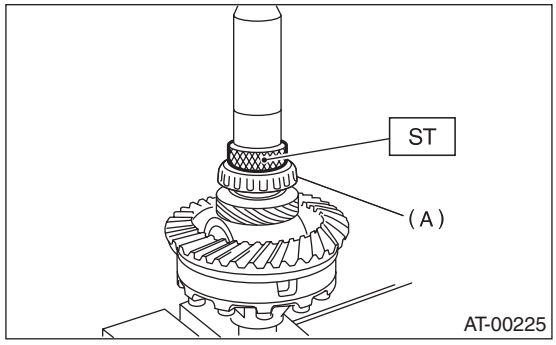

(A) Taper roller bearing

2. SIDE RETAINER

1) Install bearing outer race to side retainer.
2) Install a new oil seal using the ST and hammer.
ST 499797000 INSTALLER

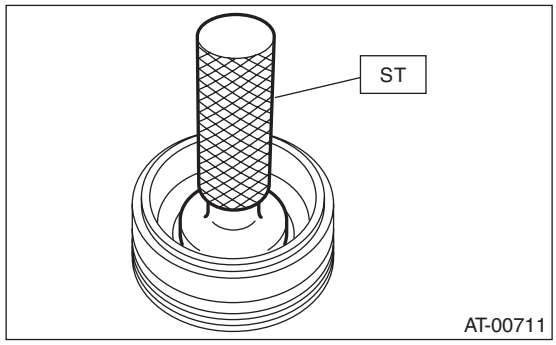

3) Install new O-ring.

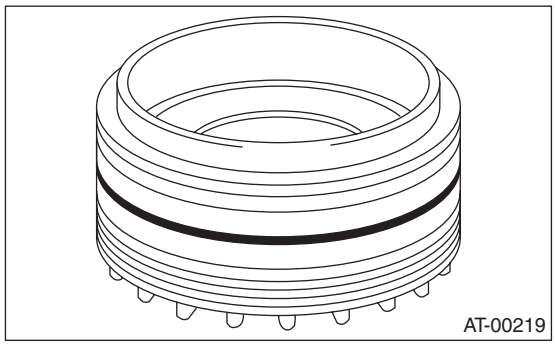

E: INSPECTION

- Check each component for harmful cuts, damage and other faults.
- Measure the backlash and adjust to within specifications.

<Ref. to 4AT-116, ADJUSTMENT, Front Differential.>

F: ADJUSTMENT

1) Using ST, screw in the retainer until light contact is felt.

NOTE:
Screw in the RH side slightly deeper than the LH side.
ST 499787000 WRENCH ASSY

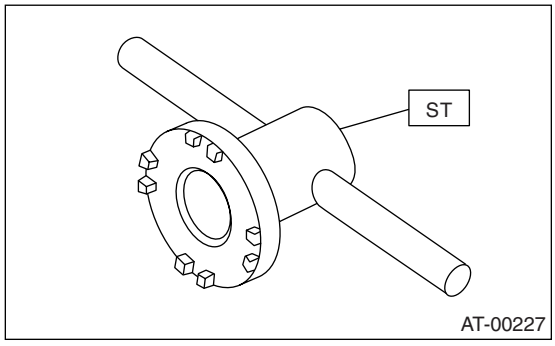

2) Remove the oil pump housing.
3) Thoroughly remove the liquid gasket from the case mating surface beforehand.
4) Install the oil pump housing assembly to the torque converter clutch case, and secure evenly by tightening four bolts.

NOTE:
Use an old gasket or an aluminum washer so as not to damage the mating surface of the housing.

Tightening torque:
41 N·m (4.2 kgf-m, 30.4 ft-lb)

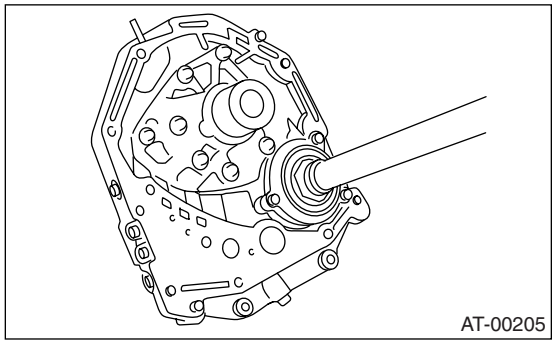

5) Rotate the drive pinion several times with ST1 and ST2.
ST1 498937110 HOLDER

ST2 499787700 WRENCH

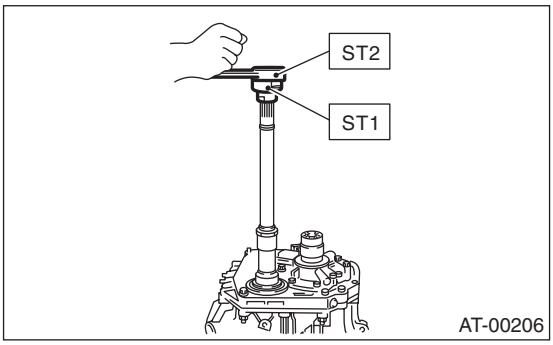

6) Tighten the LH retainer until contact is felt while rotating the shaft. Then loosen the RH retainer. Keep tightening the LH retainer and loosening the RH retainer until the pinion shaft can no longer be turned. This is the “zero” state.

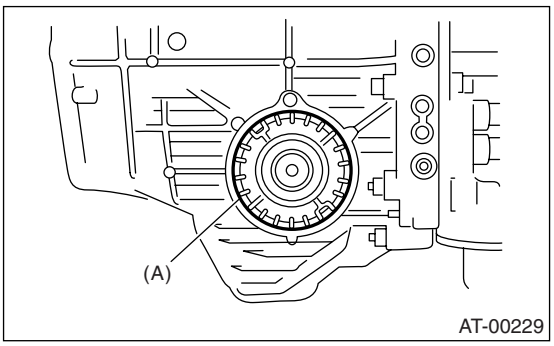

(A) Retainer

7) After the “zero” state is established, back off the LH retainer 3 notches and secure it with the lock plate. Then back off the RH retainer and retighten until it stops. Rotate drive pinion a few times. Tighten the RH retainer 1-3/4 notches further. This sets the preload. Finally, secure the retainer with its lock plate.

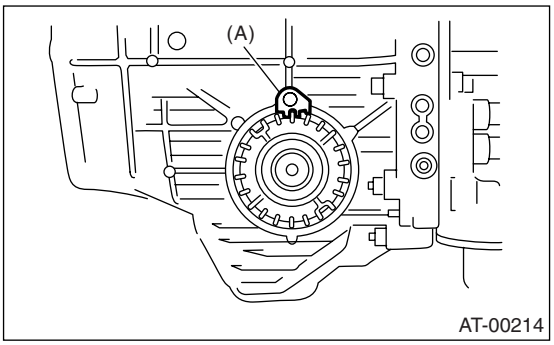

(A) Lock plate

NOTE:
Turning the retainer by one tooth changes the backlash about 0.05 mm (0.0020 in).

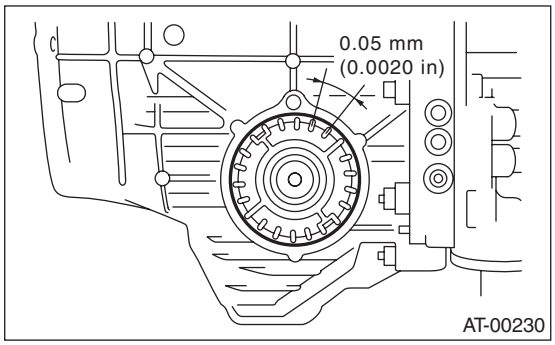

8) Turn the drive pinion several rotations with ST1 and check to see if the backlash is within the standard value with ST2, ST3, ST4 and ST5.

ST1	499787700	WRENCH
ST2	498247001	MAGNET BASE
ST3	498247100	DIAL GAUGE
ST4	499787500	ADAPTER
ST5	498255400	PLATE

Backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

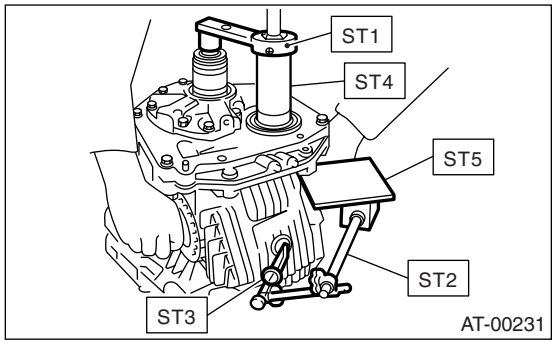

9) Adjust the tooth contact between front differential and drive shaft. <Ref. to 4AT-109, ADJUSTMENT, Drive Pinion Shaft.>

38.AT Transmission Main Case

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch assembly. <Ref. to 4AT-75, REMOVAL, Torque Converter Clutch Assembly.>
3) Remove the input shaft.

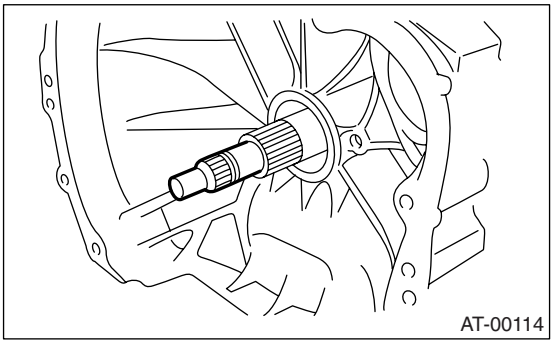

4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
5) Disconnect inhibitor switch connector from stay.
6) Disconnect the air breather hose.
7) Remove the oil charger pipe. <Ref. to 4AT-74, REMOVAL, Oil Charger Pipe.>
8) Remove the oil cooler inlet and outlet pipes. <Ref. to 4AT-71, REMOVAL, ATF Cooler Pipe and Hose.>
9) Separation of torque converter clutch case and transmission case.<Ref. to 4AT-98, REMOVAL, Torque Converter Clutch Case.>
10) Remove the oil pump housing.
<Ref. to 4AT-100, REMOVAL, Oil Pump Housing.>
11) Take out the high clutch, thrust needle bearing and reverse clutch assembly.

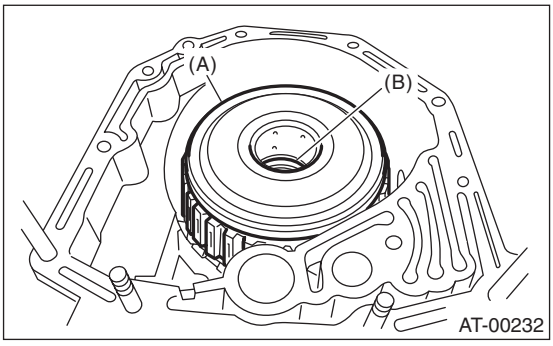

(A) High clutch and reverse clutch assembly
(B) Thrust needle bearing

12) Take out the high clutch hub and the thrust bearing.

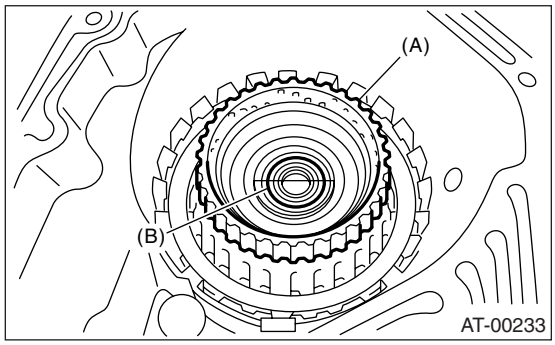

(A) High clutch hub
(B) Thrust needle bearing

13) Take out the front sun gear and the thrust bearing.

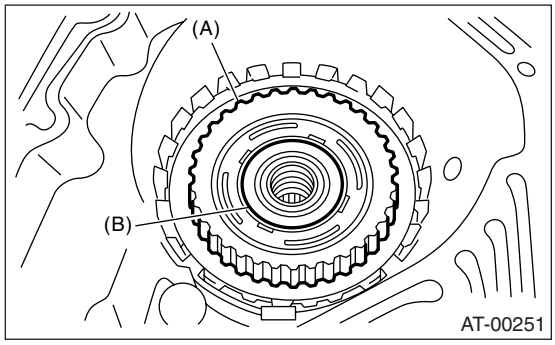

(A) Front sun gear
(B) Thrust needle bearing

14) Pull out leaf spring without folding.

NOTE:
Remove it while pressing down on lower leaf spring.

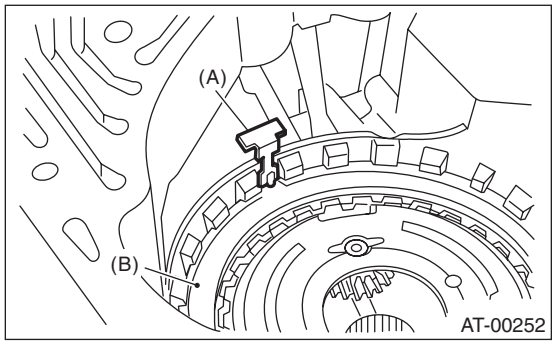

(A) Leaf spring
(B) Retaining plate

15) Remove snap ring and thrust needle bearing.

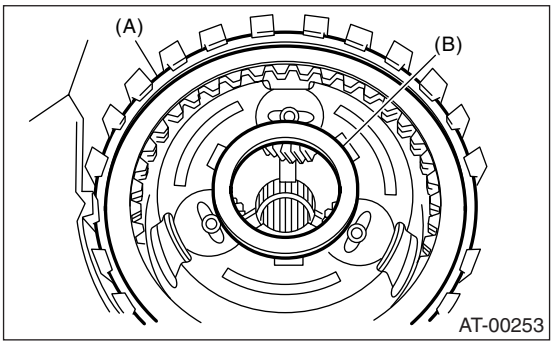

(A) Snap ring
(B) Thrust needle bearing

16) Take out retaining plate, drive plate and driven plate of 2-4 brake.

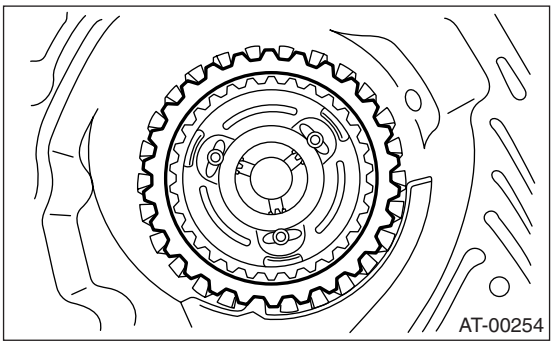

17) Take out the thrust needle bearing, planetary gear assembly and the low clutch assembly.

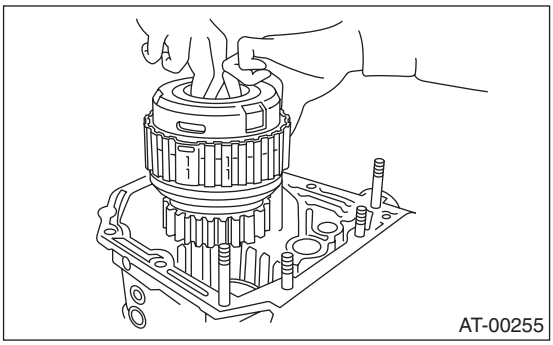

18) Remove 2-4 brake seal.

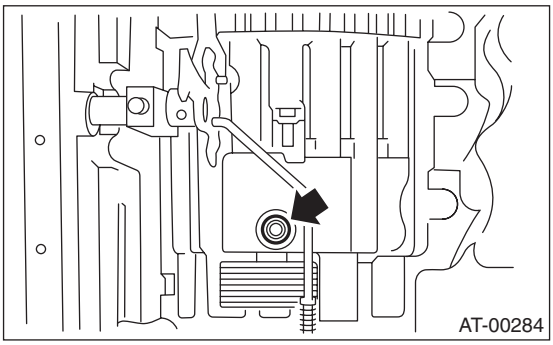

19) Remove snap ring.

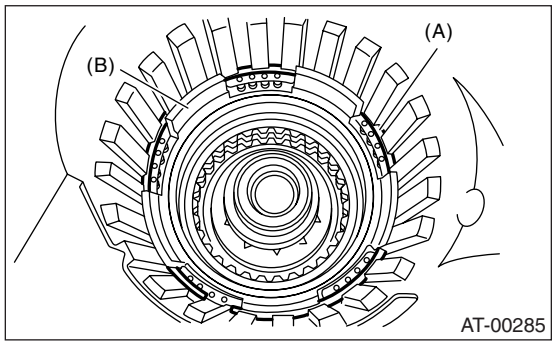

(A) Snap ring
(B) 2-4 brake piston

20) Take out 2-4 brake return spring.

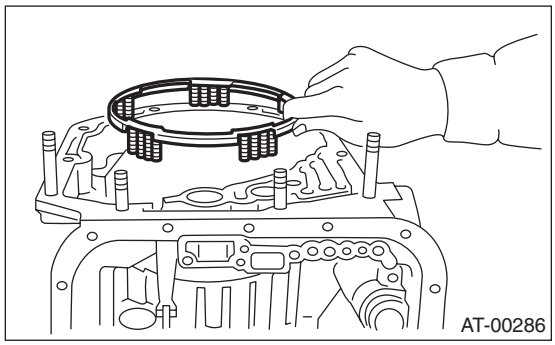

21) Remove the 2-4 brake piston and piston retainer without damaging.

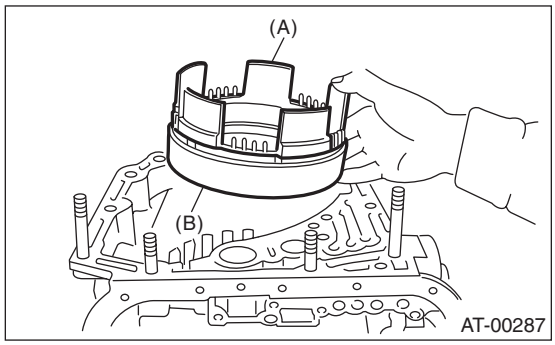

(A) 2-4 brake piston
(B) 2-4 brake piston retainer

22) Pull out the leaf spring without folding.

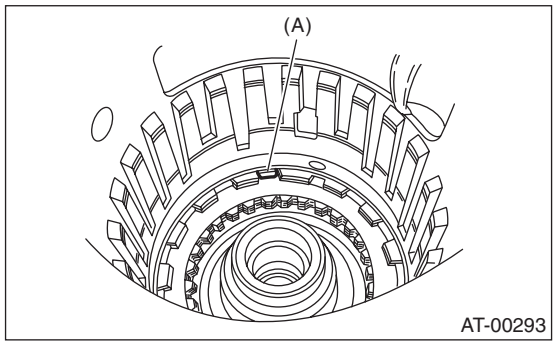

(A) Leaf spring

23) Remove snap ring.

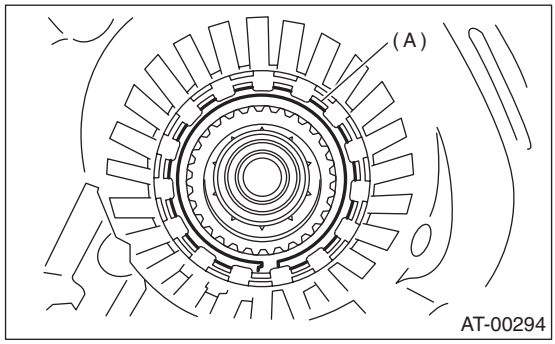

(A) Snap ring

24) Take out retaining plate, drive plate, driven plate and dish plate.

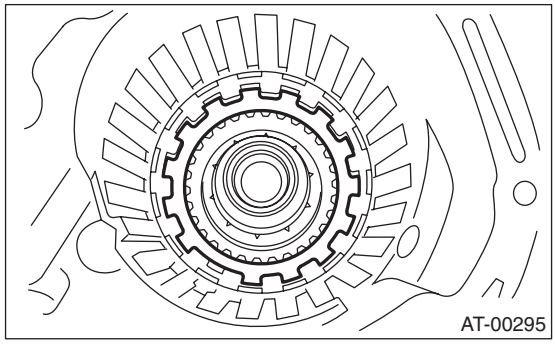

25) Turn the transmission case upside down, and then take out the socket bolts while holding the one-way clutch inner race with hand.

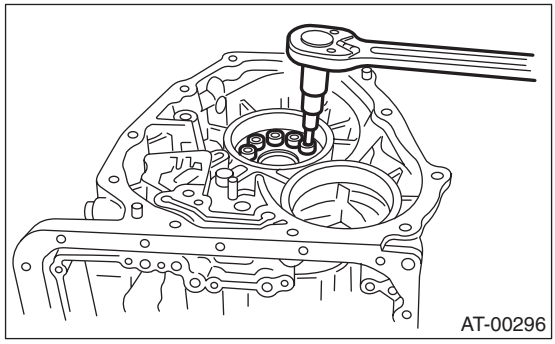

26) Take out the spring retainer.

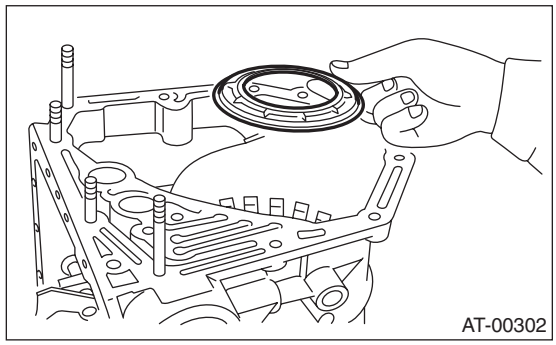

27) Take out the return spring.

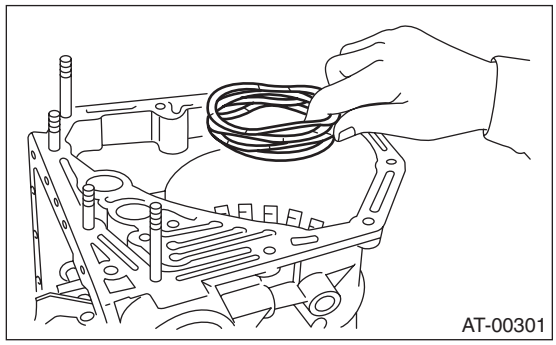

28) Apply compressed air.

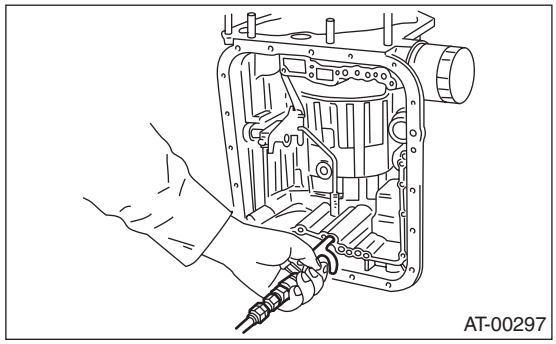

29) Take out the low & reverse piston.

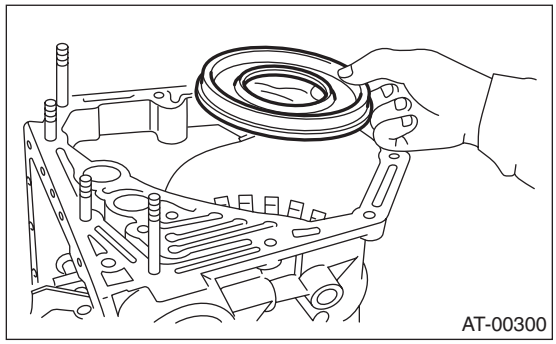

B: INSTALLATION

1) Install the low and reverse piston without tilting.

NOTE:
Be careful not to damage the lip seal.

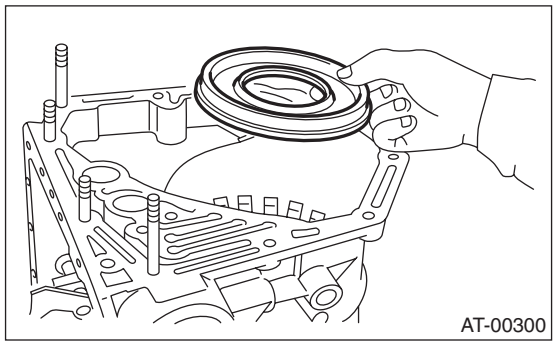

2) Install return spring.

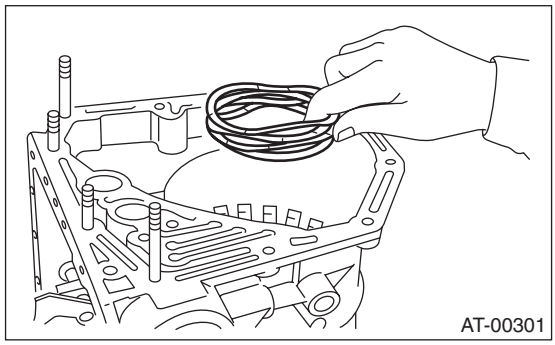

3) Install spring retainer.

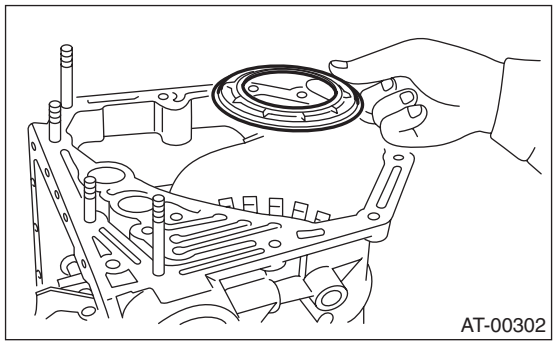

4) Install the one-way clutch inner race, spring retainer and return spring.

5) Tighten socket head bolts evenly from the rear side of the transmission case.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

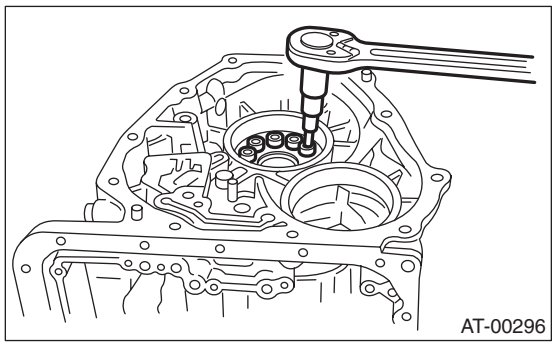

6) Place the front side of transmission body up.
7) Install thrust needle bearing.
8) Installation of the low & reverse brake:
Install dish plate, driven plates, drive plates, and a retaining plate, and secure with a snap ring.

NOTE:
Pay attention to the orientation of the dish plate.

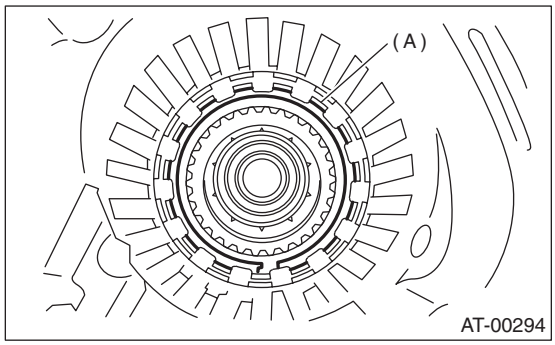

(A) Snap ring

9) Apply compressed air intermittently to check for operation.

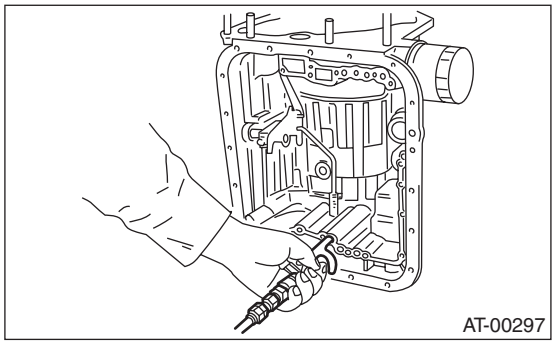

10) Check the clearance and select retaining plate. Place the same thickness of shim on both sides to prevent retaining plate from tilting.

Standard value:
0.7 — 1.2 mm (0.028 — 0.047 in)

Allowable limit:
2.2 mm (0.087 in)

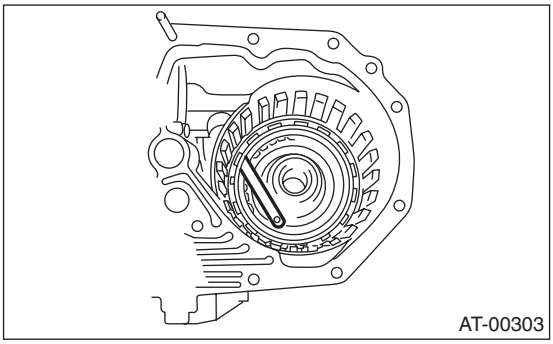

Retaining plates	
Part No.	Thickness mm (in)
31667AA320	4.1 (0.161)
31667AA330	4.4 (0.173)
31667AA340	4.7 (0.185)
31667AA350	5.0 (0.197)
31667AA360	5.3 (0.209)
31667AA370	5.6 (0.220)
31667AA380	5.9 (0.232)

11) Install the low & reverse brake leaf spring.

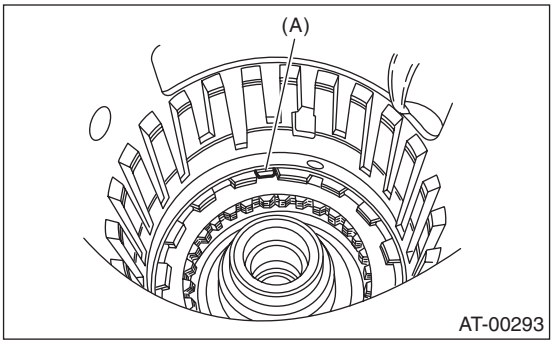

12) Install the 2-4 brake piston and 2-4 brake retainer by aligning hole of 2-4 brake retainer and hole of transmission case.

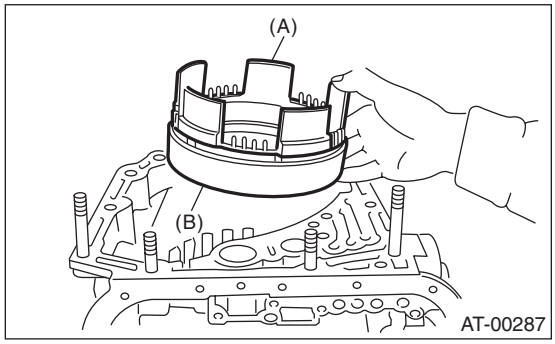

(A) 2-4 brake piston
(B) 2-4 brake piston retainer

13) Install 2-4 brake piston return spring to transmission case.

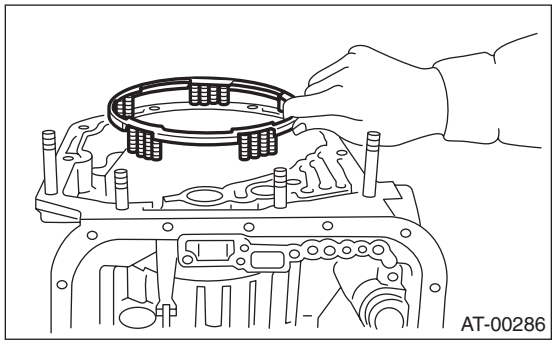

14) Position snap ring in transmission. Using ST, press the snap ring into place.
ST 498677100 COMPRESSOR

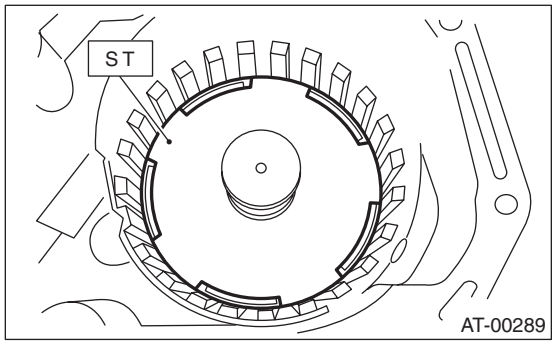

15) Install planetary gear and low clutch assembly to transmission case.
Install carefully while rotating the low clutch and planetary gear assembly slowly paying special attention not to damage the seal ring.

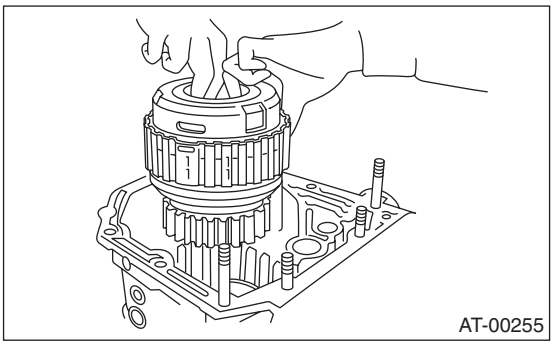

16) Install pressure plate, drive plate, driven plate, retaining plate and snap ring.

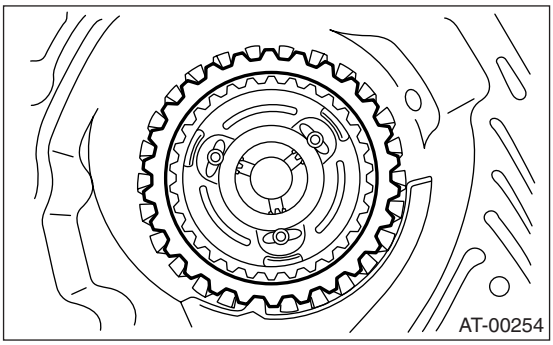

17) Install a new 2-4 brake oil seal to transmission case.

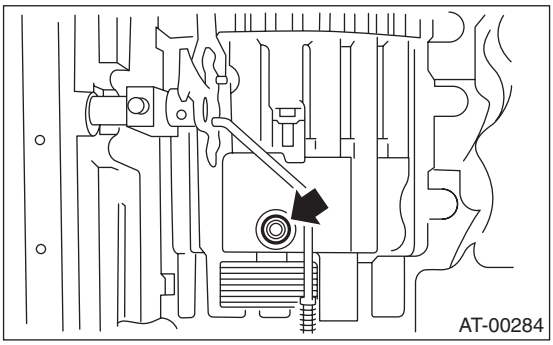

18) After all 2-4 brake component parts have been installed, blow in air intermittently and confirm the operation of the brake.

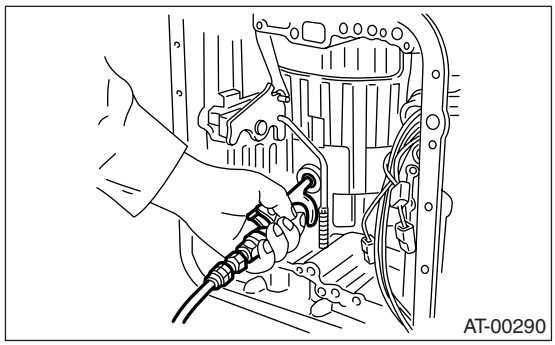

19) Check the clearance between the retaining plate and the snap ring.

NOTE:
Select a retaining plate with a suitable value from the following table, so that the clearance becomes the standard value.

Standard value:
0.8 — 1.2 mm (0.031 — 0.047 in)

Allowable limit:
1.5 mm (0.059 in)

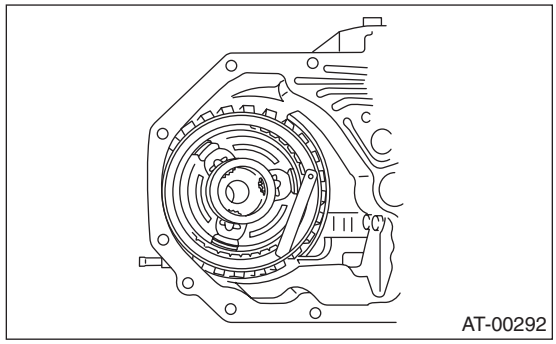

Retaining plates	
Part No.	Thickness mm (in)
31567AA612	5.6 (0.220)
31567AA622	5.8 (0.228)
31567AA632	6.0 (0.236)
31567AA642	6.2 (0.244)
31567AA652	6.4 (0.252)
31567AA662	6.6 (0.260)

20) Be careful not to mistake the location of the leaf spring to be inserted.

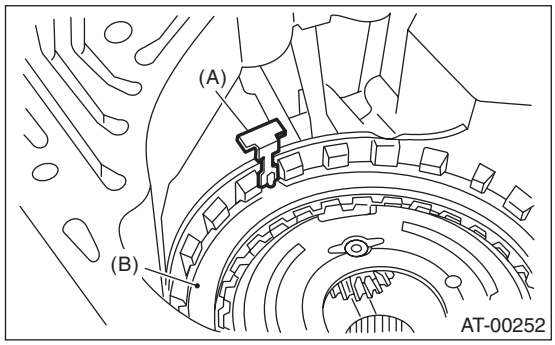

(A) Leaf spring
(B) Retaining plate

21) Install thrust needle bearing in the correct direction.

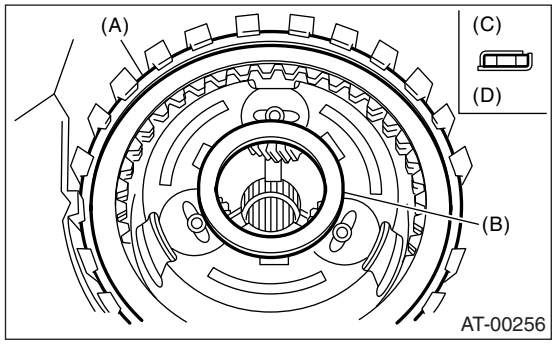

(A) Snap ring
(B) Thrust needle bearing
(C) Upside
(D) Downside

22) Install front sun gear and thrust needle bearing.

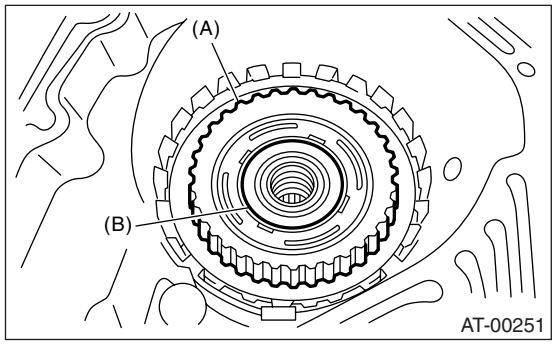

(A) Front sun gear
(B) Thrust needle bearing

23) Install the high clutch hub.
Attach the thrust needle bearing to the hub with vaseline and install the hub by correctly engaging the splines of the front planetary carrier.

24) Install the thrust needle bearing in proper direction.

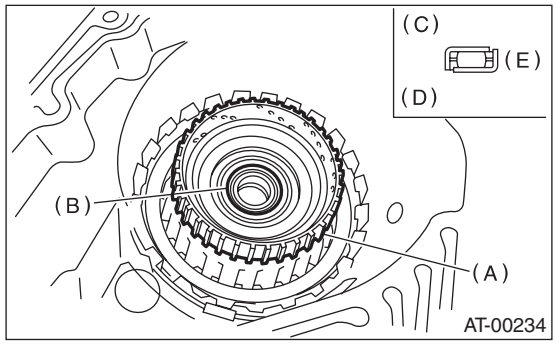

(A) High clutch hub
(B) Thrust needle bearing
(C) Upside
(D) Downside
(E) Outside

25) Install the high clutch assembly.

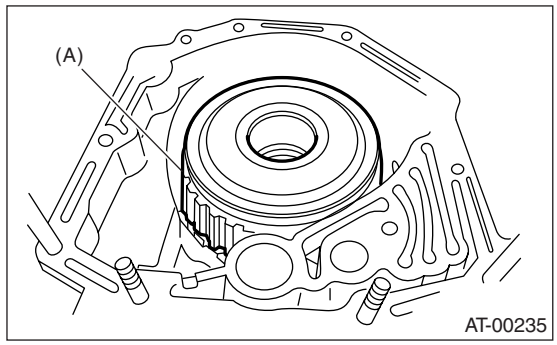

(A) High clutch and reverse clutch assembly

26) Adjust total end play. <Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>
27) Install the thrust needle bearing in proper direction.

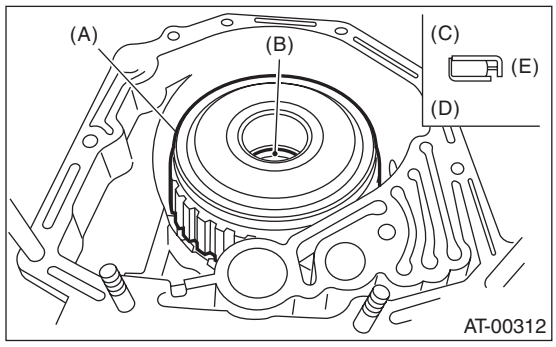

(A) High clutch and reverse clutch ASSY
(B) Thrust needle bearing
(C) Upside
(D) Downside
(E) Outside

28) Install the oil pump housing assembly.
29) Install the torque converter clutch case assembly to the transmission case assembly. <Ref. to 4AT-98, INSTALLATION, Torque Converter Clutch Case.>
30) Insert inhibitor switch and transmission connector into stay.
31) Install air breather hose. <Ref. to 4AT-73, INSTALLATION, Air Breather Hose.>

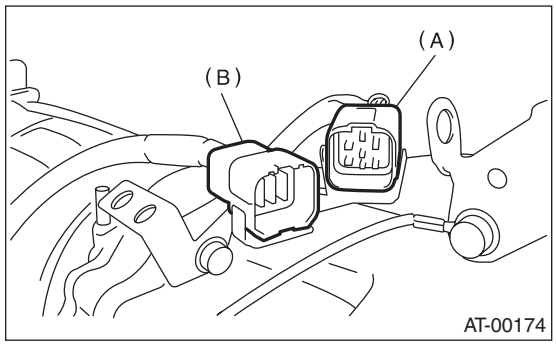

(A) Transmission harness
(B) Inhibitor switch harness

32) Install oil cooler pipes. <Ref. to 4AT-72, INSTALLATION, ATF Cooler Pipe and Hose.>
33) Install the oil charger pipe with O-ring. <Ref. to 4AT-74, INSTALLATION, Oil Charger Pipe.>
34) Insert the input shaft while turning lightly by hand. At this time, not to damage the bushing.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

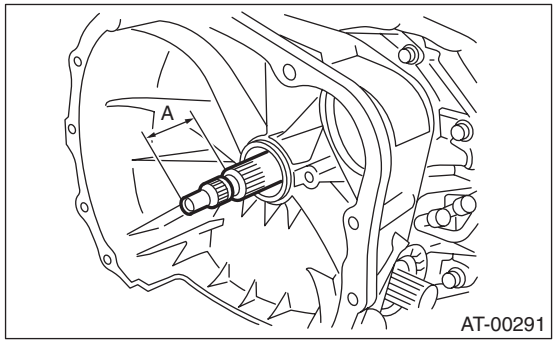

35) Install the torque converter clutch assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
36) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: DISASSEMBLY

1. HIGH CLUTCH, REVERSE CLUTCH

1) Remove the snap ring, and take out the retaining plate, drive plates, driven plates.

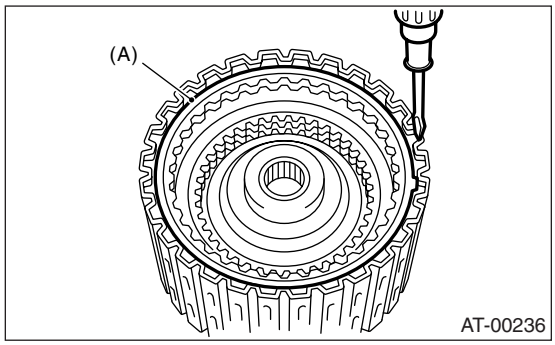

(A) Snap ring

2) Remove snap ring, and take out the retaining plate, drive plates and driven plates.

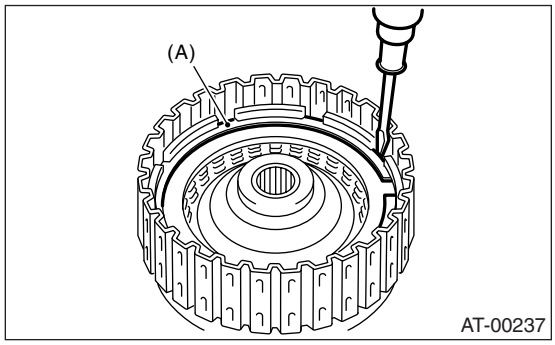

(A) Snap ring

3) Using ST1 and ST2, remove snap ring.
ST1 398673600 COMPRESSOR
ST2 498627100 SEAT

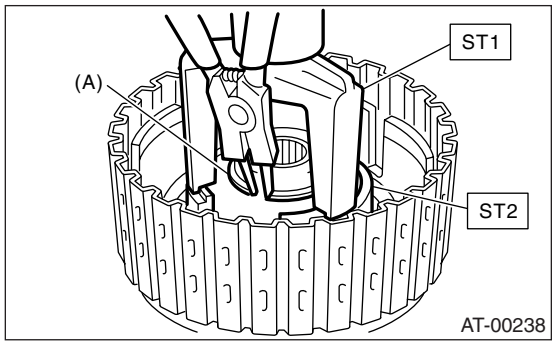

(A) Snap ring

4) Take out clutch cover, spring retainer, high clutch piston and reverse clutch piston.

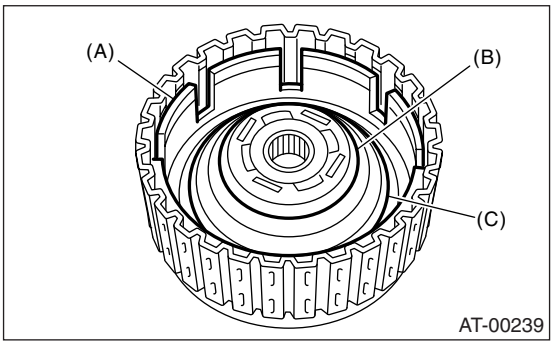

(A) Reverse clutch piston
(B) Cover
(C) Return spring

5) Remove seal rings and lip seal from high clutch piston and reverse clutch piston.

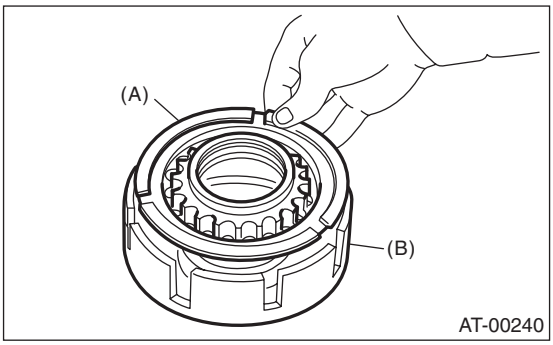

(A) High clutch piston
(B) Reverse clutch piston

2. PLANETARY GEAR, LOW CLUTCH

1) Remove snap ring from the low clutch drum.

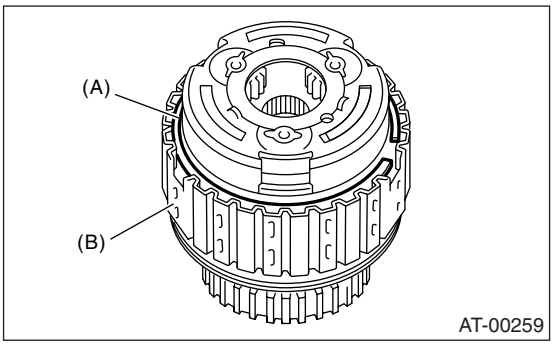

(A) Snap ring
(B) Low clutch drum

2) Take out front planetary carrier.

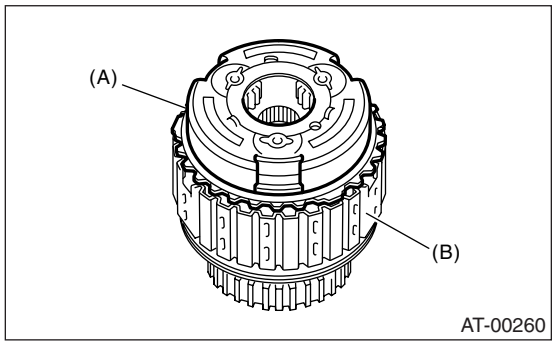

(A) Front planetary carrier
(B) Low clutch drum

3) Take out rear sun gear.

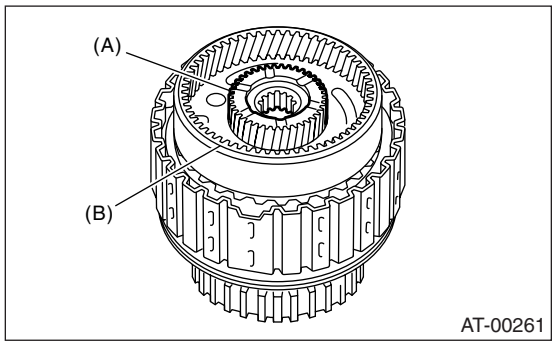

(A) Rear sun gear
(B) Rear planetary carrier

4) Take out rear planetary carrier, washer and thrust needle bearing.

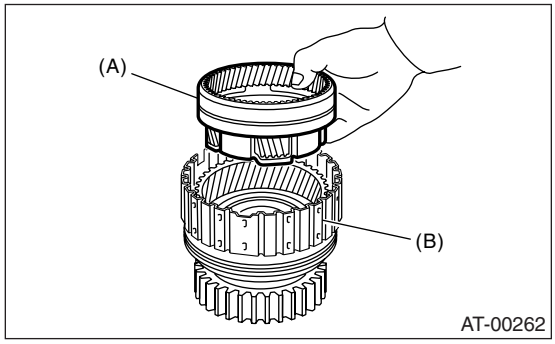

(A) Rear planetary carrier
(B) Low clutch drum

5) Take out rear internal gear.

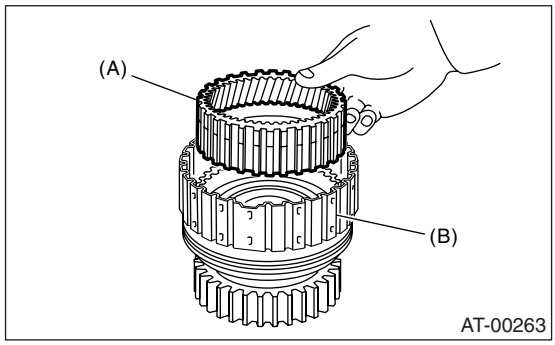

(A) Rear internal gear
(B) Low clutch drum

6) Remove the snap ring from the low clutch drum.

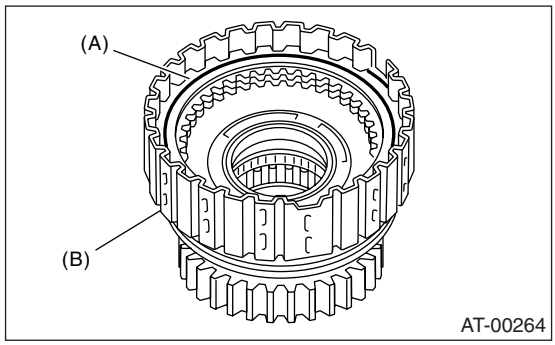

(A) Snap ring
(B) Low clutch drum

7) Compress the spring retainer, and remove the snap ring from the low clutch drum, by using ST1 and ST2.
ST1 498627100 SEAT
ST2 398673600 COMPRESSOR

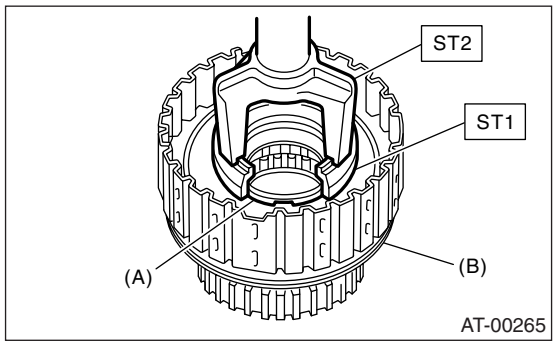

(A) Snap ring
(B) Low clutch drum

8) Remove one-way clutch. <Ref. to 4AT-118, REMOVAL, AT Transmission Main Case.>

9) Install the one-way clutch inner race to the low clutch drum, and apply compressed air to remove the low clutch piston.

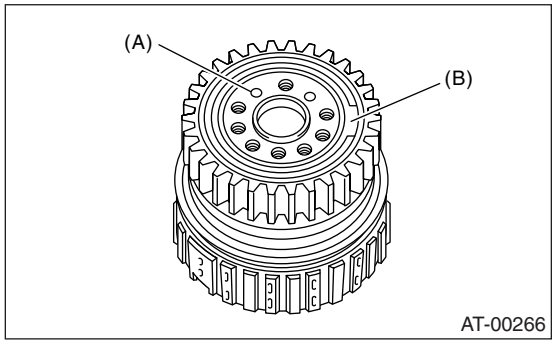

(A) Apply compressed air
(B) One-way clutch inner race

10) Remove the one-way clutch inner race.
11) Remove the one-way clutch after taking out the snap ring.

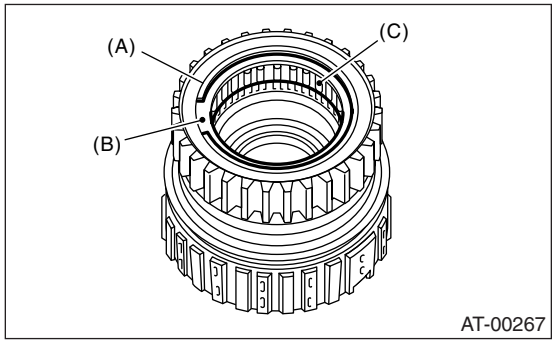

(A) Snap ring
(B) Plate
(C) One-way clutch

12) Remove the needle bearing after taking out the snap ring.

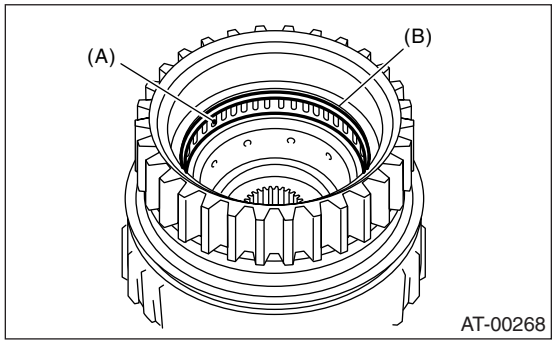

(A) Needle bearing
(B) Snap ring

3. 2-4 BRAKE

1) Separate 2-4 brake piston and piston retainer.

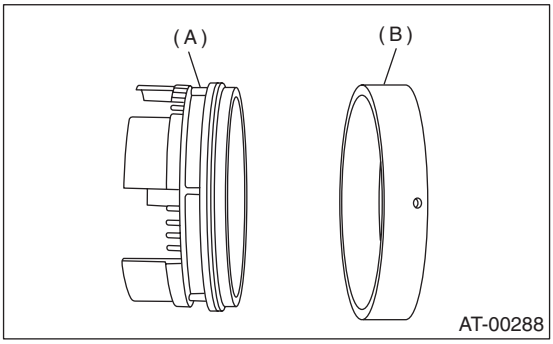

(A) 2-4 brake piston
(B) 2-4 brake piston retainer

4. ONE-WAY CLUTCH INNER RACE

1) Remove seal rings.

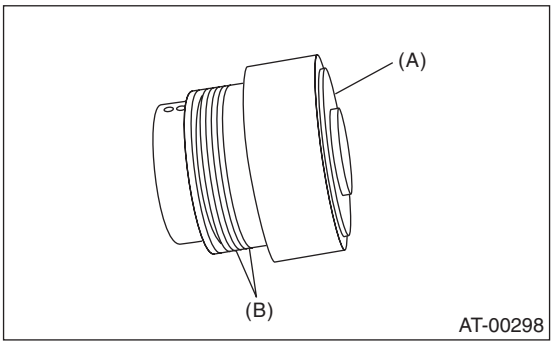

(A) One way clutch inner race
(B) Seal rings

2) Using ST, remove needle bearing.
ST 398527700 PULLER ASSY

5. ONE-WAY CLUTCH OUTER RACE

1) Remove the one-way clutch after taking out the snap ring.

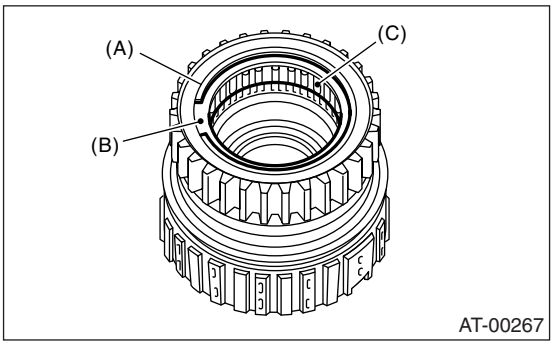

(A) Snap ring
(B) Plate
(C) One-way clutch

2) Remove the needle bearing after taking out the snap ring.

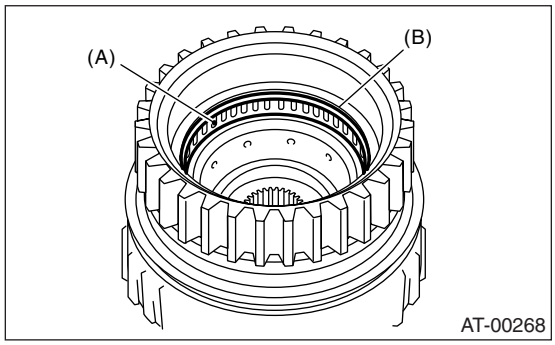

(A) Needle bearing
(B) Snap ring

D: ASSEMBLY

1. HIGH CLUTCH, REVERSE CLUTCH

1) Install seal rings and lip seal to high clutch piston and reverse clutch piston.
2) Install high clutch piston to reverse clutch piston.

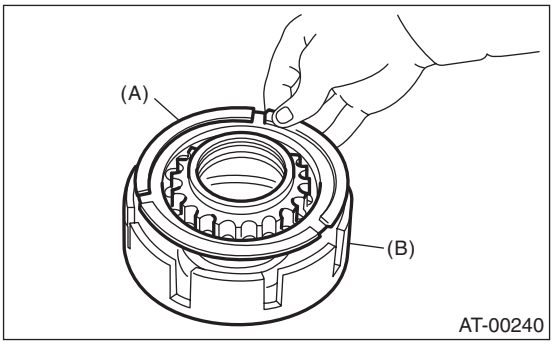

(A) High clutch piston
(B) Reverse clutch piston

3) Install reverse clutch to high clutch drum.
Align the groove on the reverse clutch piston with the groove on the high clutch drum during installation.

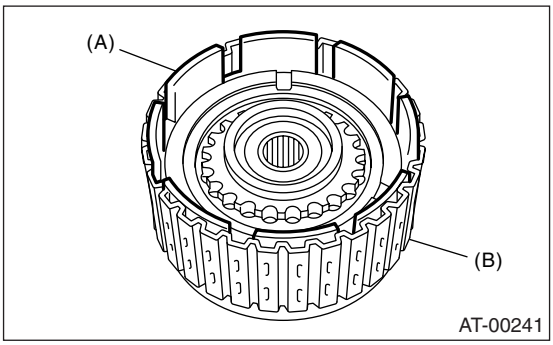

(A) Reverse clutch piston
(B) High clutch drum

4) Install spring retainer to high clutch piston.

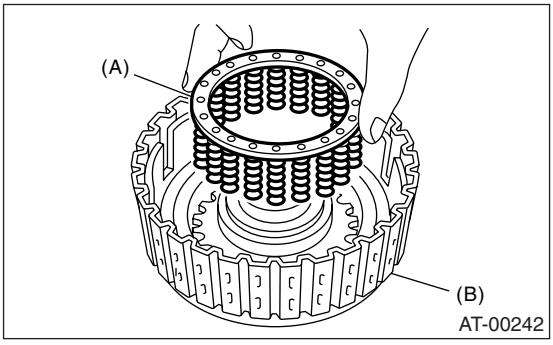

(A) Return spring
(B) High clutch drum

5) Install ST to high clutch piston.

ST	498437000	HIGH CLUTCH PISTON GAUGE

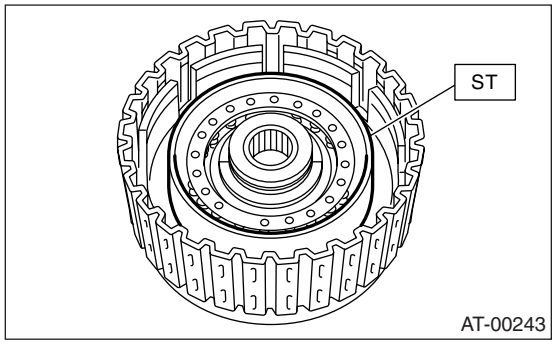

6) Avoid folding the high clutch piston seal, when installing the cover to high clutch piston.
7) Using ST1 and ST2, install snap ring.

ST1	398673600	COMPRESSOR
ST2	498627100	SEAT
ST3	498437000	HIGH CLUTCH PISTON GAUGE

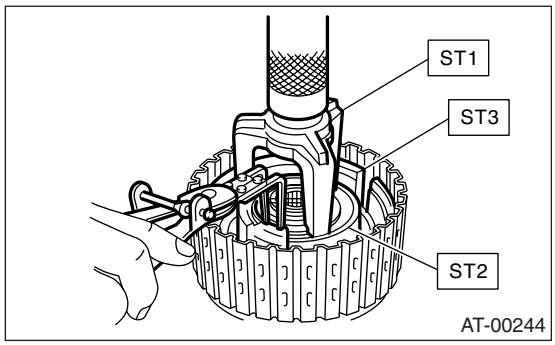

8) Install the thickest driven plate to piston side, and then install the driven plate, drive plate, retaining plate to high clutch drum.

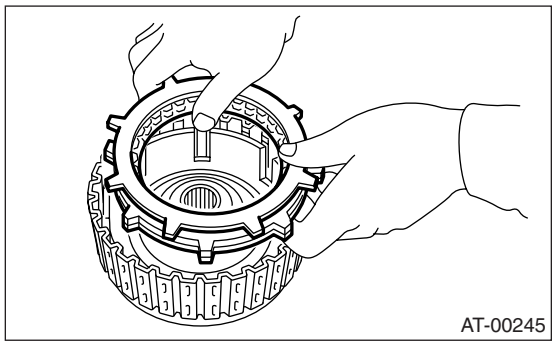

9) Install snap ring to high clutch drum.

10) Apply compressed air intermittently to check for operation.

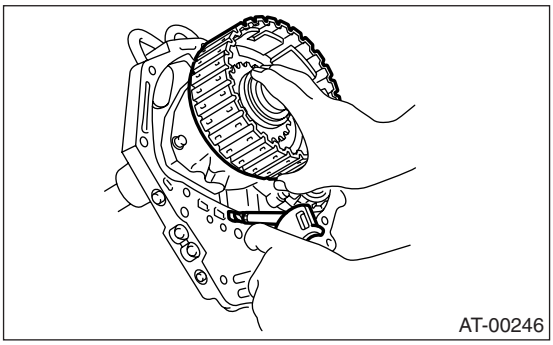

11) Measure the clearance between the retaining plate and snap ring (High clutch). At this time, do not press down retaining plate.

Standard value:
0.8 — 1.1 mm (0.031 — 0.043 in)

Allowable limit:
1.5 mm (0.059 in)

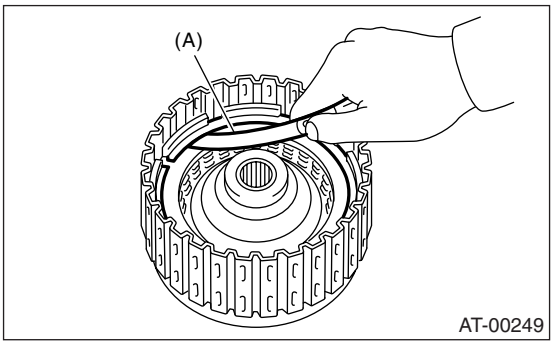

(A) Thickness gauge

If specified tolerance limits are exceeded, select a suitable high clutch retaining plate.

High clutch retaining plate	
Part No.	Thickness mm (in)
31567AA710	4.7 (0.185)
31567AA720	4.8 (0.189)
31567AA730	4.9 (0.193)
31567AA740	5.0 (0.197)
31567AA670	5.1 (0.201)
31567AA680	5.2 (0.205)
31567AA690	5.3 (0.209)
31567AA700	5.4 (0.213)

12) Install driven plate, drive plate, retaining plate and snap ring.

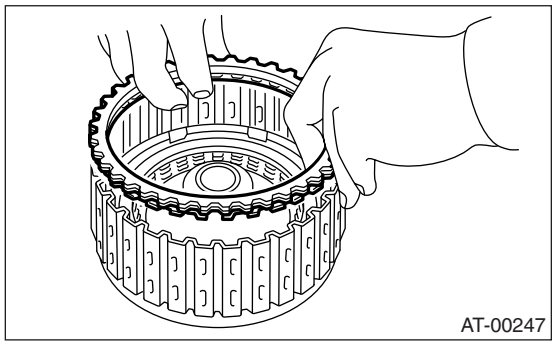

13) Apply compressed air intermittently to check for operation.

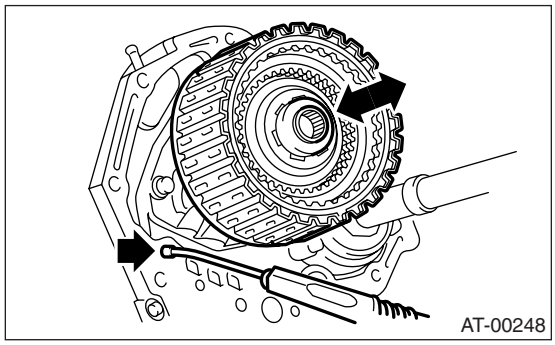

14) Measure the clearance between the retaining plate and snap ring (Reverse clutch). At this time, do not press down retaining plate.

Standard value:
0.5 — 0.8 mm (0.020 — 0.031 in)

Allowable limit:
1.2 mm (0.047 in)

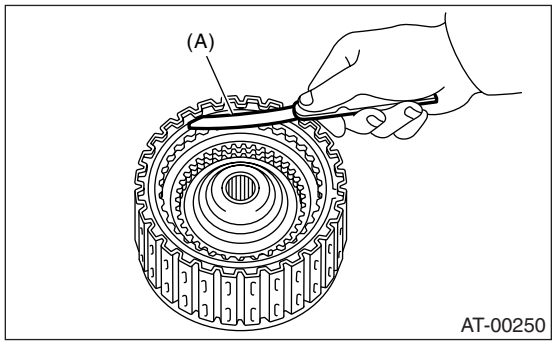

(A) Thickness gauge

If specified tolerance limits are exceeded, select a suitable high clutch retaining plate.

Reverse clutch retaining plates	
Part No.	Thickness mm (in)
31567AA910	4.0 (0.157)
31567AA920	4.2 (0.165)
31567AA930	4.4 (0.173)
31567AA940	4.6 (0.181)
31567AA950	4.8 (0.189)
31567AA960	5.0 (0.197)
31567AA970	5.2 (0.205)
31567AA980	5.4 (0.213)

2. PLANETARY GEAR, LOW CLUTCH

1) Install lathe cut seal ring to low clutch piston.
2) Fit the low clutch piston to the low clutch drum.

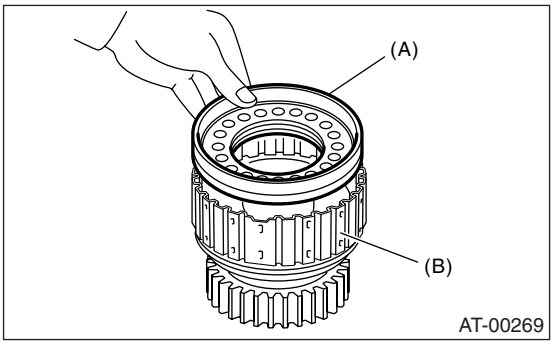

(A) Low clutch piston
(B) Low clutch drum

3) Install spring retainer to low clutch piston.

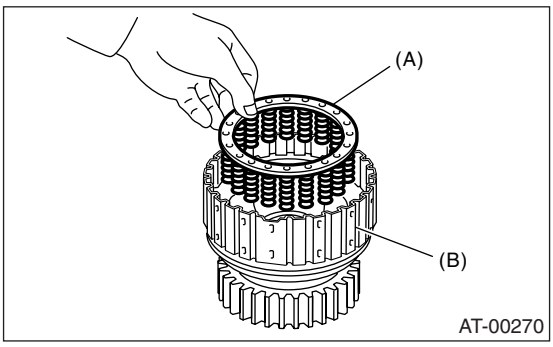

(A) Spring retainer
(B) Low clutch drum

4) Install ST to low clutch drum.
ST 498437100 LOW CLUTCH PISTON GUIDE

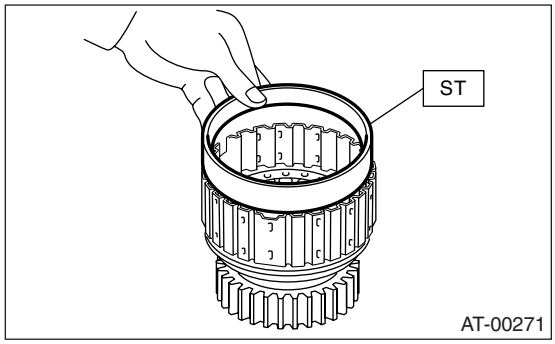

5) Set the cover on the piston with a press using ST1 and ST2, and attach the snap ring. At this time, be careful not to fold cover seal during installation.
ST1 498627100 SEAT
ST2 398673600 COMPRESSOR
ST3 498437100 LOW CLUTCH PISTON GUIDE

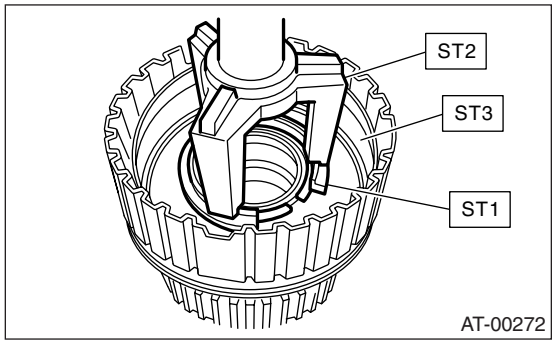

6) Install the dish plate, driven plates, drive plates, and retaining plate, and secure with the snap ring.

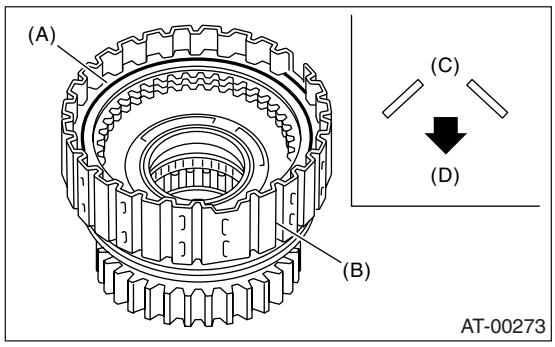

(A) Snap ring
(B) Low clutch drum
(C) Dish plate
(D) Low clutch piston side

7) Check the low clutch for operation.
(1) Remove one-way clutch. <Ref. to 4AT-118, REMOVAL, AT Transmission Main Case.>
(2) Set the one-way clutch inner race, and apply compressed air for checking.

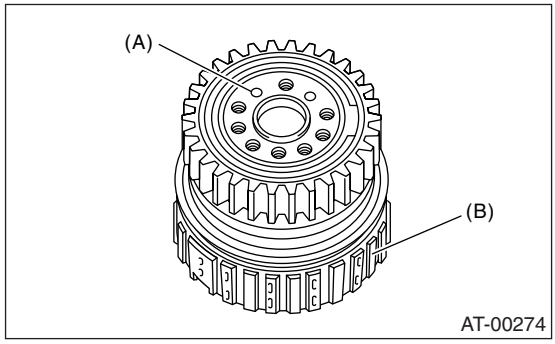

(A) Apply compressed air
(B) Low clutch drum

8) Checking low clutch clearance.
(1) Place the same thickness of shim on both sides to prevent retaining plate from tilting.
(2) Inspect clearance between retaining plate and operation of the low clutch.

Standard value:
0.7 — 1.1 mm (0.028 — 0.043 in)

Allowable limit:
1.6 mm (0.063 in)

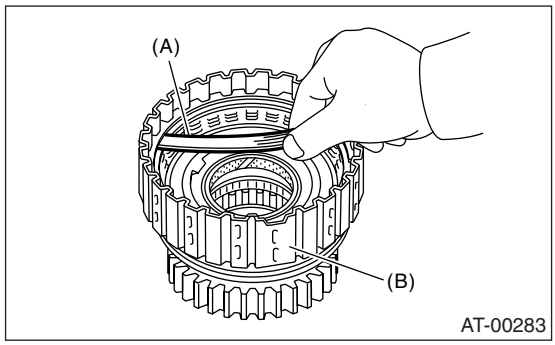

(A) Thickness gauge
(B) Low clutch drum

If the clearance is out of the specified range, select a proper retaining plate so that the standard clearance can be obtained.

Available retaining plates	
Part No.	Thickness mm (in)
31567AA830	3.8 (0.150)
31567AA840	4.0 (0.157)
31567AA850	4.2 (0.165)
31567AA860	4.4 (0.173)
31567AA870	4.6 (0.181)

9) Install washer to rear internal gear.

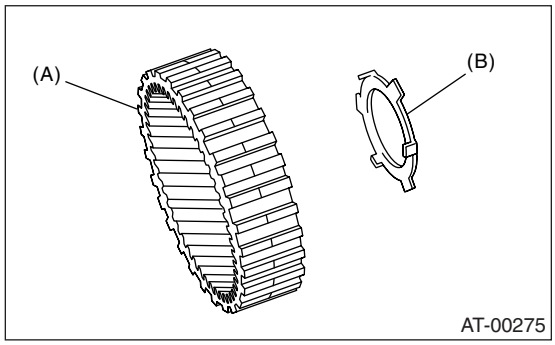

(A) Rear internal gear
(B) Washer

10) Install rear internal gear.

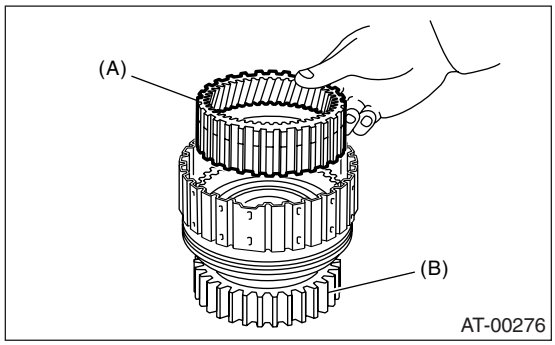

(A) Rear internal gear
(B) Low clutch drum

11) Install thrust needle bearing in the correct direction.

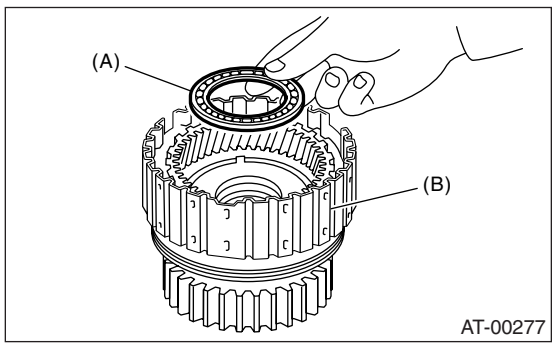

(A) Thrust needle bearing
(B) Low clutch drum

12) Install the washer by aligning protrusion of washer and hole of rear planetary carrier.

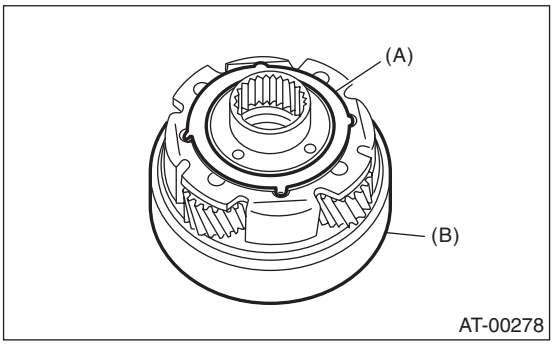

(A) Washer
(B) Rear planetary carrier

13) Install rear planetary carrier to low clutch drum.

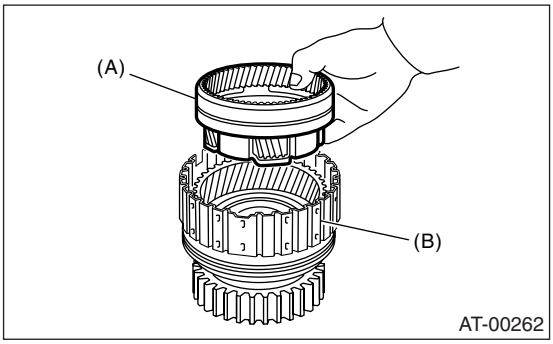

(A) Rear planetary carrier
(B) Low clutch drum

14) Install thrust needle bearing in the correct direction.

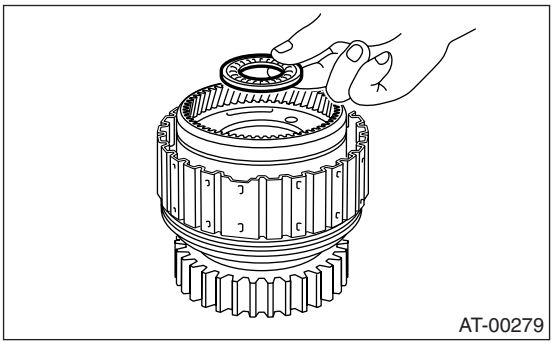

15) Install the rear sun gear in proper direction.

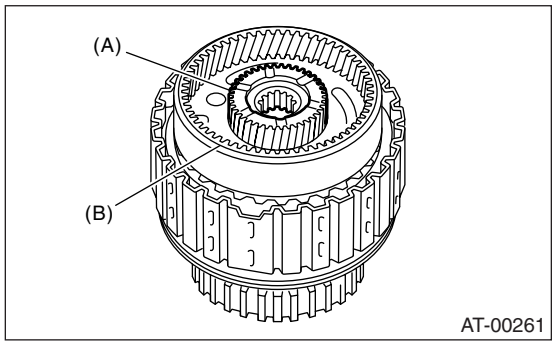

(A) Rear sun gear
(B) Rear planetary carrier

16) Install the thrust needle bearing in proper direction.

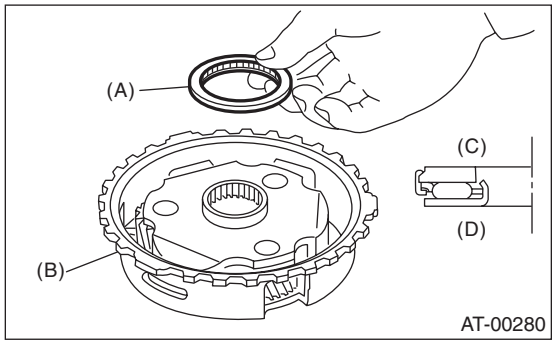

(A) Thrust needle bearing
(B) Front planetary carrier
(C) Rear sun gear side
(D) Front planetary carrier side

17) Install front planetary carrier to low clutch drum.

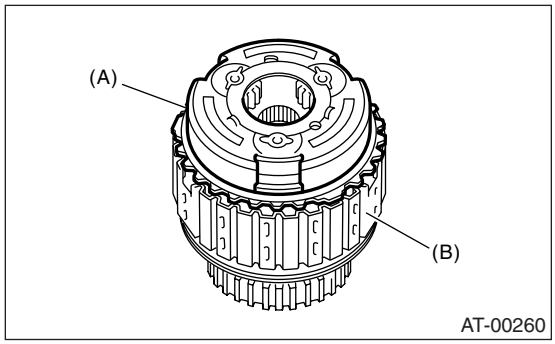

(A) Front planetary carrier
(B) Low clutch drum

18) Install snap ring to low clutch drum.

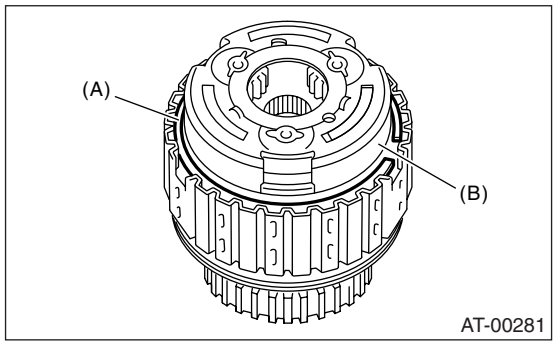

(A) Snap ring
(B) Front planetary carrier

19) Install the needle bearing, and secure with the snap ring.

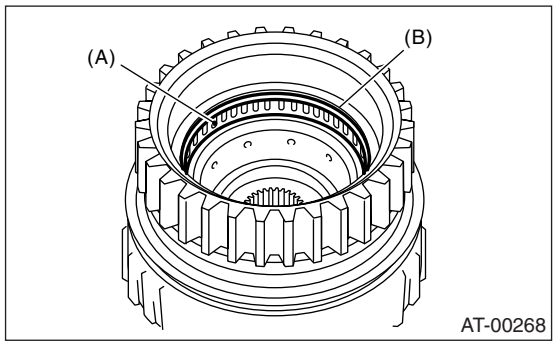

(A) Needle bearing
(B) Snap ring

20) Install the one-way clutch, one-way clutch inner race and plate, and secure with the snap ring.
21) Set the inner race. Make sure that the forward clutch is free in the clockwise direction and locked in the counterclockwise direction, as viewed from the front of the vehicle.

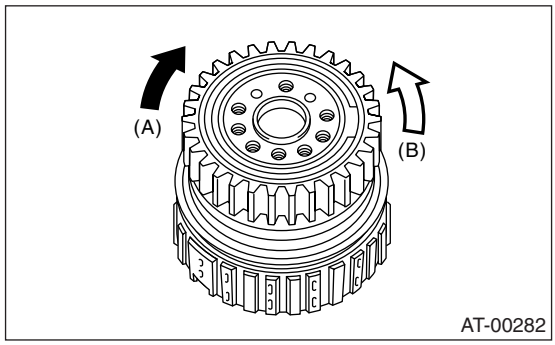

(A) Locked
(B) Free

3. 2-4 BRAKE

1) Install 2-4 brake piston to 2-4 brake piston retainer.

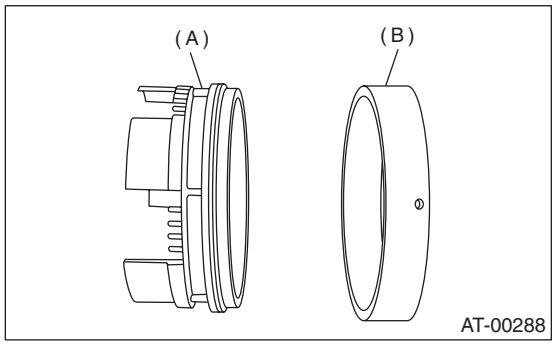

(A) 2-4 brake piston
(B) 2-4 brake piston retainer

4. ONE-WAY CLUTCH INNER RACE

1) Using a press and ST, install the needle bearing to the inner race.
ST 398497701 INSTALLER

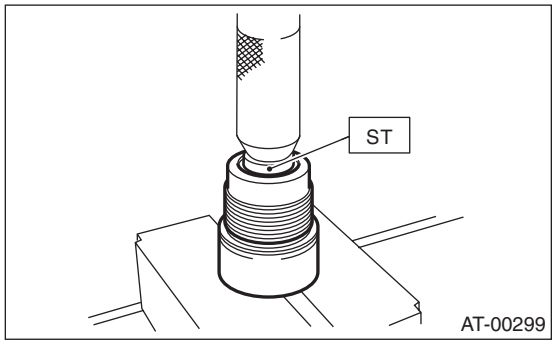

2) Apply vaseline to the groove of the inner race and to the seal ring.
3) Install two seal rings to one-way clutch inner race.

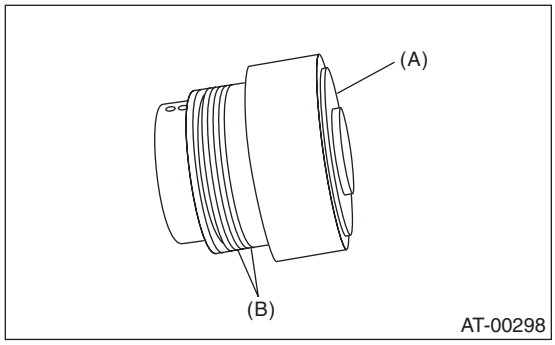

(A) One way clutch inner race
(B) Seal rings

5. ONE-WAY CLUTCH OUTER RACE

1) Install the needle bearing, and secure with the snap ring.

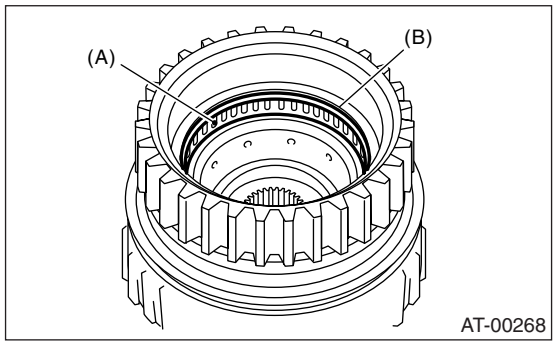

(A) Needle bearing
(B) Snap ring

2) Install the one-way clutch, one-way clutch inner race and plate, and secure with the snap ring.
3) Set the inner race. Make sure that the forward clutch is free in the clockwise direction and locked in the counterclockwise direction, as viewed from the front of the vehicle.

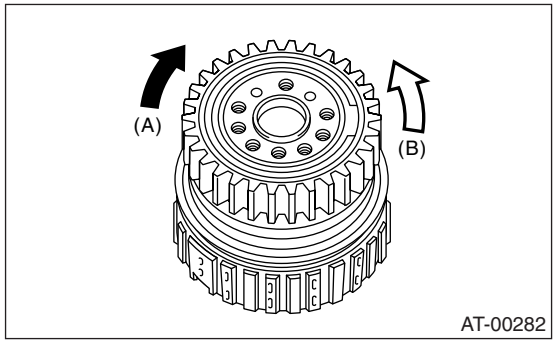

(A) Locked
(B) Free

E: INSPECTION

1. HIGH CLUTCH AND REVERSE CLUTCH

Inspect the following items.
- Drive plate facing for wear and damage
- Snap ring for wear, return spring for setting and breakage, and snap ring retainer for deformation
- Lip seal and lathe cut seal ring for damage
- Piston and drum check ball for operation
- Adjust total end play. <Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>

2. PLANETARY GEAR AND LOW CLUTCH

Inspect the following items.
- Drive plate facing for wear and damage
- Snap ring for wear, return spring for breakage or setting, and spring retainer for deformation
- Lip seal and lathe cut seal ring for damage
- Piston check ball for operation
- Measure the total end play and adjust to within specifications.

<Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>

3. 2-4 BRAKE

Inspect the following items.
- Drive plate facing for wear and damage
- Snap ring for wear and spring retainer for deformation
- Lip seal and lathe cut seal ring for damage
- Measure the total end play and adjust to within specifications.<Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>

4. ONE-WAY CLUTCH

- Make sure the snap ring is not worn and the seal rings are not damaged.
- Measure the total end play and adjust to within specifications. <Ref. to 4AT-105, ADJUSTMENT, Oil Pump Housing.>

5. LOW AND REVERSE BRAKE

Check for the following.
- Drive plate facing for wear or damage
- Snap ring for wear and spring retainer for deformation

39.Transmission Control Device

A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 4AT-39, REMOVAL, Automatic Transmission Assembly.>
2) Extract the torque converter clutch assembly. <Ref. to 4AT-75, REMOVAL, Torque Converter Clutch Assembly.>
3) Remove the input shaft.
4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
5) Disconnect the air breather hoses. <Ref. to 4AT-73, REMOVAL, Air Breather Hose.>
6) Disconnect inhibitor switch connector from stay.
7) Wrap vinyl tape around the nipple attached to the air breather hose.
8) Remove pitching stopper bracket.
9) Remove the inhibitor switch.

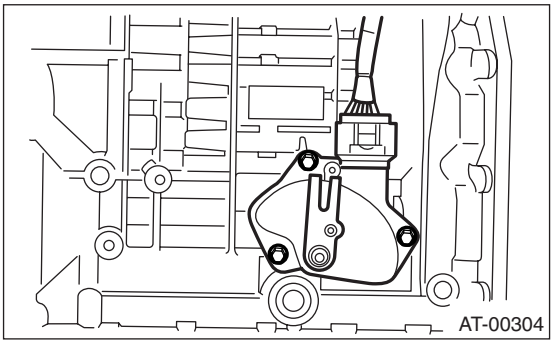
AT-00304

10) Remove control valve body assembly. <Ref. to 4AT-58, REMOVAL, Control Valve Body.>
11) Pull off the straight pin of manual plate.

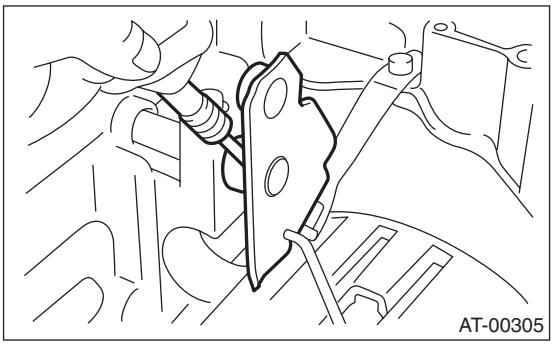
AT-00305

12) Remove bolts securing select lever, then remove select lever, manual plate and parking rod.

NOTE:
Be careful not to damage the lips of the press-fitted oil seal in the case.

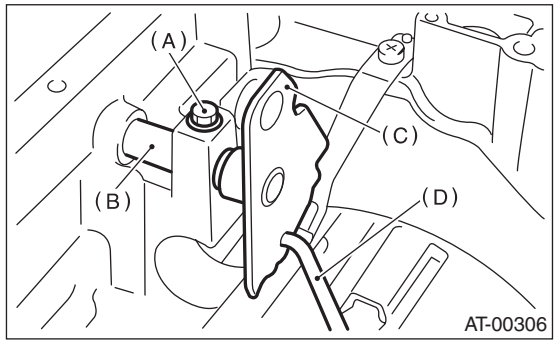

AT-00306

(A) Bolt
(B) Range select lever
(C) Manual plate
(D) Parking rod

13) Remove the detention spring.

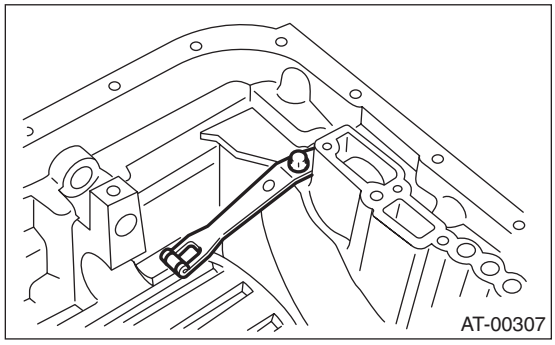
AT-00307

B: INSTALLATION

1) Install detention spring to transmission case.

Tightening torque:
6 N·m (0.6 kgf-m, 4.3 ft-lb)

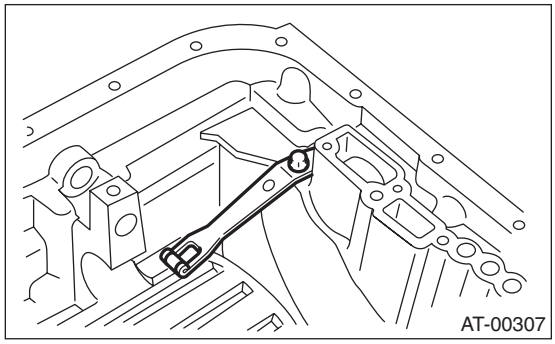
AT-00307

2) Insert range select lever, and tighten bolt.

Tightening torque:
6 N·m (0.6 kgf-m, 4.3 ft-lb)

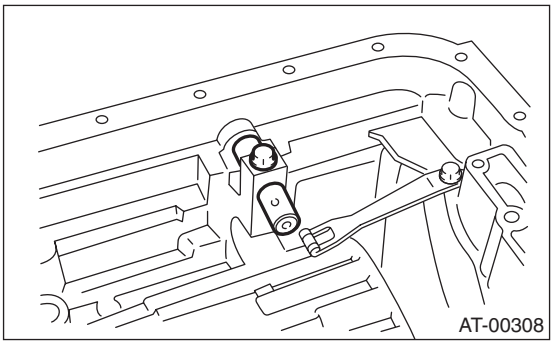

3) Insert manual plate and parking rod.

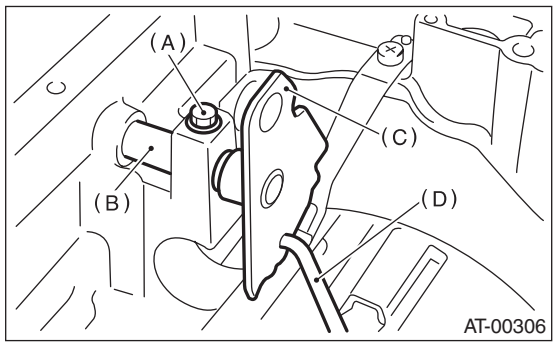

(A) Bolt
(B) Range select lever
(C) Manual plate
(D) Parking rod

4) Insert spring pin to manual plate.

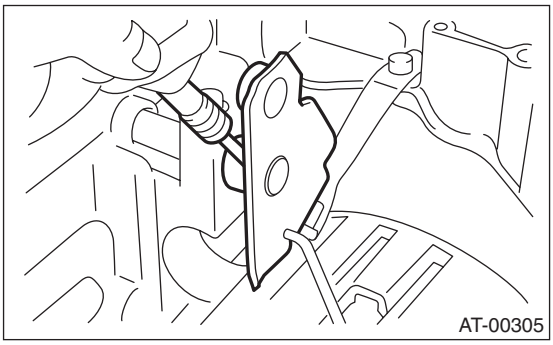

5) Install control valve assembly and oil pan. <Ref. to 4AT-59, INSTALLATION, Control Valve Body.>
6) Turn over the transmission case to its original position.
7) Install pitching stopper bracket.

Tightening torque:
41 N·m (4.2 kgf-m, 30.4 ft-lb)

8) Install inhibitor switch and adjust the inhibitor switch. <Ref. to 4AT-48, Inhibitor Switch.>

9) Insert inhibitor switch and transmission connector into stay.

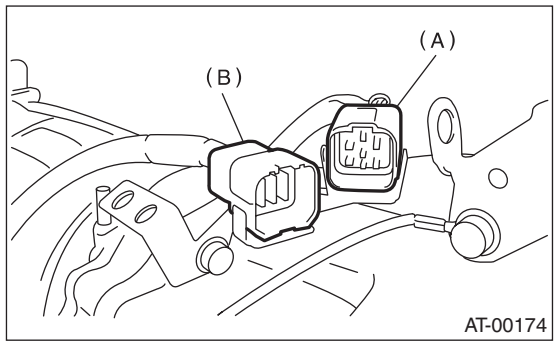

(A) Transmission harness
(B) Inhibitor switch harness

10) Install air breather hose. <Ref. to 4AT-73, INSTALLATION, Air Breather Hose.>
11) Insert the input shaft while turning lightly by hand and verify the protrusion amount.

Normal protrusion A:
50 — 55 mm (1.97 — 2.17 in)

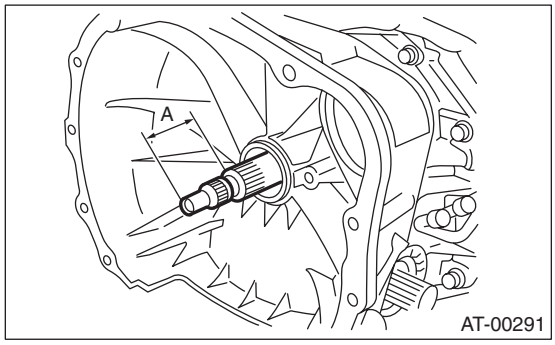

12) Install the torque converter clutch assembly. <Ref. to 4AT-75, INSTALLATION, Torque Converter Clutch Assembly.>
13) Install the transmission assembly to the vehicle. <Ref. to 4AT-42, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

Make sure the manual lever and detention spring are not worn or otherwise damaged.

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

4AT

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	4
3.	General Description	5
4.	Electrical Components Location	8
5.	Transmission Control Module (TCM) I/O Signal	13
6.	Subaru Select Monitor	21
7.	Read Diagnostic Trouble Code (DTC)	24
8.	Inspection Mode	26
9.	Clear Memory Mode	27
10.	POWER Indicator Light Display	28
11.	List of Diagnostic Trouble Code (DTC)	29
12.	Diagnostic Procedure for POWER Indicator Light	31
13.	Diagnostic Procedure for Select Monitor Communication	38
14.	Diagnostic Procedure with Diagnostic Trouble Code (DTC)	41
15.	Diagnostic Procedure without Diagnostic Trouble Code (DTC)	97
16.	Symptom Related Diagnostic	133

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	**CHECK PRE-INSPECTION.** 1)Ask the customer when and how trouble occurred using interview checklist. <Ref. to 4AT-4, Check List for Interview.> 2)Before performing the diagnosis, inspect following items which might influence the AT problems. •General inspection <Ref. to 4AT-5, INSPECTION, General Description.> •Oil leak •Stall speed test <Ref. to 4AT-34, Stall Test.> •Line pressure test <Ref. to 4AT-37, Line Pressure Test.> •Transfer clutch pressure test <Ref. to 4AT-38, Transfer Clutch Pressure Test.> •Time lag test <Ref. to 4AT-36, Time Lag Test.> •Road test <Ref. to 4AT-33, Road Test.> •Inhibitor switch <Ref. to 4AT-48, Inhibitor Switch.>	Is the unit that might influence AT problem normal?	Go to step **2.**	Repair or replace each item.
2	**CHECK POWER INDICATOR LIGHT.** Turn the ignition switch to ON.	Does the POWER indicator light illuminate?	Go to step **4.**	Go to step **3.**
3	**CHECK POWER INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Repair the POWER indicator light circuit or power supply and ground line circuit. <Ref. to 4AT-31, Diagnostic Procedure for POWER Indicator Light.> 3)Turn the ignition switch to ON.	Is the POWER indicator light illuminate?	Go to step **4.**	Go to step **5.**
4	**CHECK INDICATION OF DTC.** Calling up the DTC. Without Subaru Select Monitor <Ref. to 4AT-24, WITHOUT SUBARU SELECT MONITOR, Read Diagnostic Trouble Code (DTC).> With Subaru Select Monitor <Ref. to 4AT-25, WITH SUBARU SELECT MONITOR, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of select monitor cannot be executed normally, check the communication circuit. <Ref. to 4AT-38, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostic Procedure for Select Monitor Communication.>	Is the DTC displayed?	Go to step **6.** NOTE: Record all DTC.	Go to step **5.**

	Step	Check	Yes	No
5	**PERFORM THE GENERAL DIAGNOSTICS.** 1)Inspect using “Diagnostic Procedure without DTC”.<Ref. to 4AT-97, Diagnostic Procedure without Diagnostic Trouble Code (DTC).> 2)Inspect using “Symptom Related Diagnostic”. <Ref. to 4AT-133, Symptom Related Diagnostic.> 3)Perform the clear memory mode. Without Subaru Select Monitor <Ref. to 4AT-27, WITH SUBARU SELECT MONITOR, Clear Memory Mode.> With Subaru Select Monitor <Ref. to 4AT-27, WITHOUT SUBARU SELECT MONITOR, Clear Memory Mode.> 4)Perform the inspection mode. <Ref. to 4AT-26, Inspection Mode.> 5)Calling up the DTC. Without Subaru Select Monitor <Ref. to 4AT-24, WITHOUT SUBARU SELECT MONITOR, Read Diagnostic Trouble Code (DTC).> With Subaru Select Monitor <Ref. to 4AT-25, WITH SUBARU SELECT MONITOR, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is the DTC displayed?	Complete the diagnosis.	Go to step **6.**
6	**PERFORM THE DIAGNOSIS.** 1)Inspect using “Diagnostics Chart with DTC”. <Ref. to 4AT-41, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> NOTE: For DTC table, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to 4AT-29, List of Diagnostic Trouble Code (DTC).> 2)Repair the trouble cause. 3)Perform the clear memory mode. Without Subaru Select Monitor <Ref. to 4AT-27, WITH SUBARU SELECT MONITOR, OPERATION, Clear Memory Mode.> With Subaru Select Monitor <Ref. to 4AT-27, WITHOUT SUBARU SELECT MONITOR, Clear Memory Mode.> 4)Perform the inspection mode. <Ref. to 4AT-26, Inspection Mode.> 5)Calling up the DTC. Without Subaru Select Monitor <Ref. to 4AT-24, WITHOUT SUBARU SELECT MONITOR, OPERATION, Read Diagnostic Trouble Code (DTC).> With Subaru Select Monitor <Ref. to 4AT-25, WITH SUBARU SELECT MONITOR, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is the DTC displayed?	Complete the diagnosis.	Inspect using “Diagnostics Chart with Diagnostic Connector”. <Ref. to 4AT-41, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

2. Check List for Interview

A: CHECK

Check the following items when problem has occurred.

NOTE:
Use copies of this page for interviewing customers.

Customer's name			
Date of purchase			
Date of repair			
Trans. model	TRANSMISSION	VIN	
Odometer reading		km/h or miles	
Frequency	❑ Continuous ❑ Intermittent (times a day)		
Weather	❑ Fine ❑ Cloudy ❑ Rainy ❑ Snowy ❑ Various/Others ( )		
Place	❑ High ❑ Suburbs ❑ Inner city ❑ Uphill ❑ Rough road ❑ Others ( )		
Outdoor temperature	❑ Hot ❑ Warm ❑ Cool ❑ Cold		
Vehicle speed		km/h (MPH)	
AT diagnostic indicator light (POWER indicator light)	❑ Continuously lit	❑ Not lit	
Select lever position	❑ P ❑ R ❑ N ❑ D ❑ 3 ❑ 2 ❑ 1		
Driving condition	❑ Not affected ❑ At racing ❑ While decelerating	❑ At starting ❑ While accelerating ❑ While turning (❑ RH/❑ LH)	❑ While idling ❑ While cruising
POWER switch	❑ ON ❑ OFF		
HOLD switch	❑ ON ❑ OFF		
Symptoms	❑ No up-shift		
	❑ No down-shift		
	❑ No kick down		
	❑ Vehicle does not move (❑ Any position ❑ Particular position)		
	❑ Lock-up malfunction		
	❑ Noise or vibration		
	❑ Shift shock or slip		
	❑ Select lever does not move		
	❑ Others ( )		

3. General Description

A: CAUTION

• Supplemental Restraint System "Airbag"

The airbag system wiring harness is routed near the transmission control module (TCM).

CAUTION:

• All airbag system wiring harness and connectors are colored yellow. Do not use an electrical test equipment on these circuit.

• Be careful not to damage the airbag system wiring harness when performing diagnostics and servicing the TCM.

• Measurement

When measuring the voltage and resistance of ECM, TCM or each sensor, use a tapered pin with diameter of less than 0.64 mm (0.025 in) in order to avoid poor contact. Do not insert the pin more than 0.65 mm (0.256 in).

B: INSPECTION

1. BATTERY

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V or more

Specific gravity: Above 1.260

2. TRANSMISSION GROUND

Make sure that the ground terminal bolt is tightened securely.

• Chassis side

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

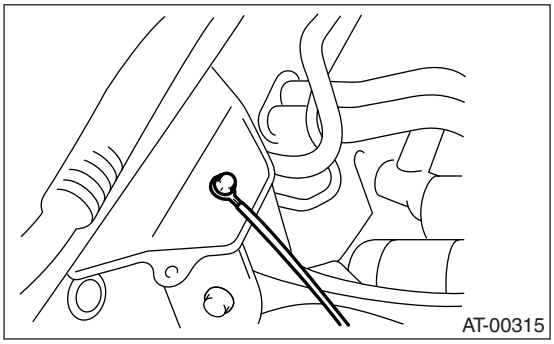

3. ATF LEVEL

Make sure that ATF level is in the specification. <Ref. to 4AT-31, INSPECTION, Automatic Transmission Fluid.>

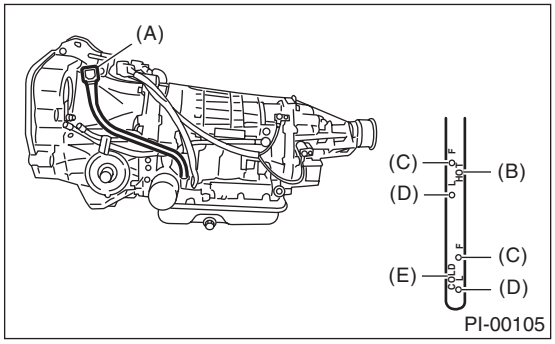

(A) Level gauge
(B) "HOT" side
(C) Upper level
(D) Lower level
(E) "COLD" side

4. FRONT DIFFERENTIAL OIL LEVEL

Make sure that the front differential oil level is in specification. <Ref. to 4AT-32, INSPECTION, Differential Gear Oil.>

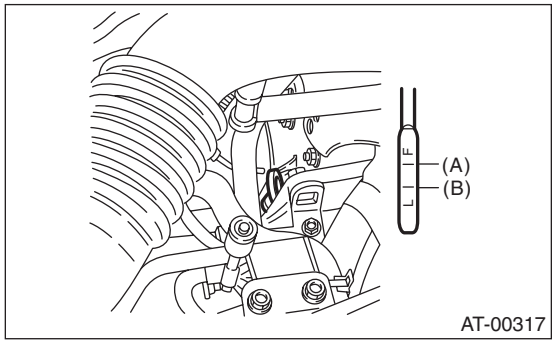

(A) Upper level
(B) Lower level

5. OPERATION OF SHIFT SELECT LEVER

Make sure there is no abnormal noise, dragging or contact pattern in each select lever range.

WARNING:
Stop the engine while checking operation of selector lever.

- Without SPORT shift

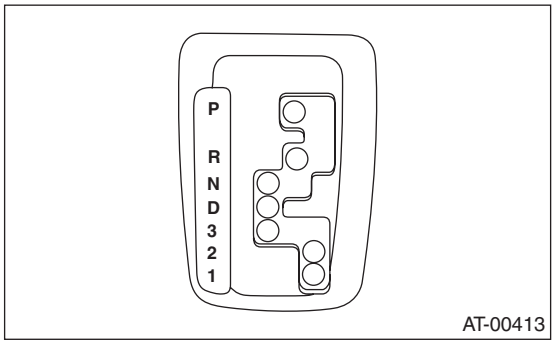

- With SPORT shift

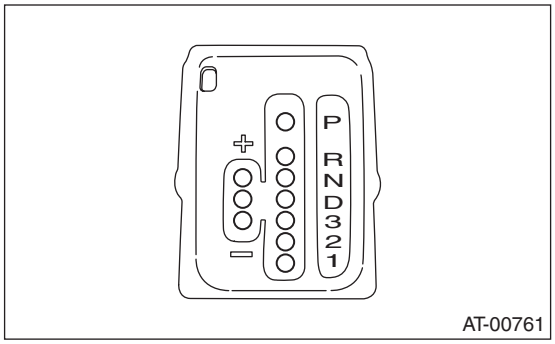

6. POWER SWITCH

Make sure that the POWER indicator light in combination meter comes ON, when turning the POWER switch to ON.

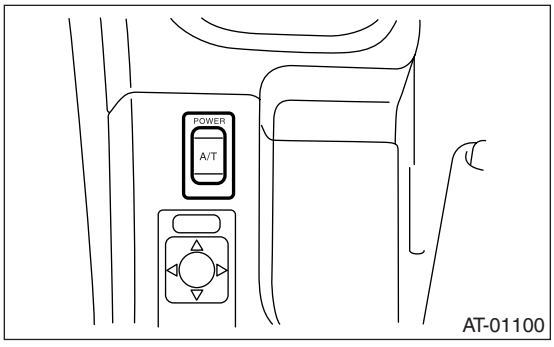

7. HOLD SWITCH

Make sure that the HOLD indicator light in combination meter comes ON, when turning the HOLD switch to ON.

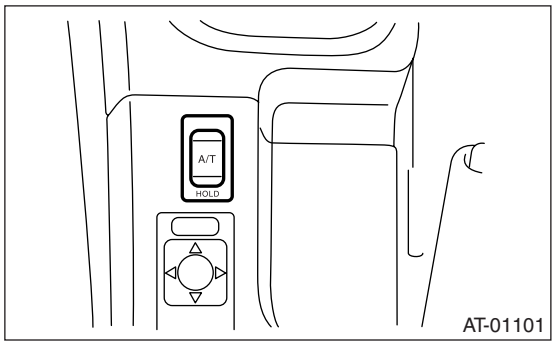

C: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
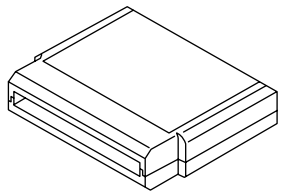 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.
Oscilloscope	Used for measuring sensor.

4. Electrical Components Location

A: LOCATION

1. CONTROL MODULE

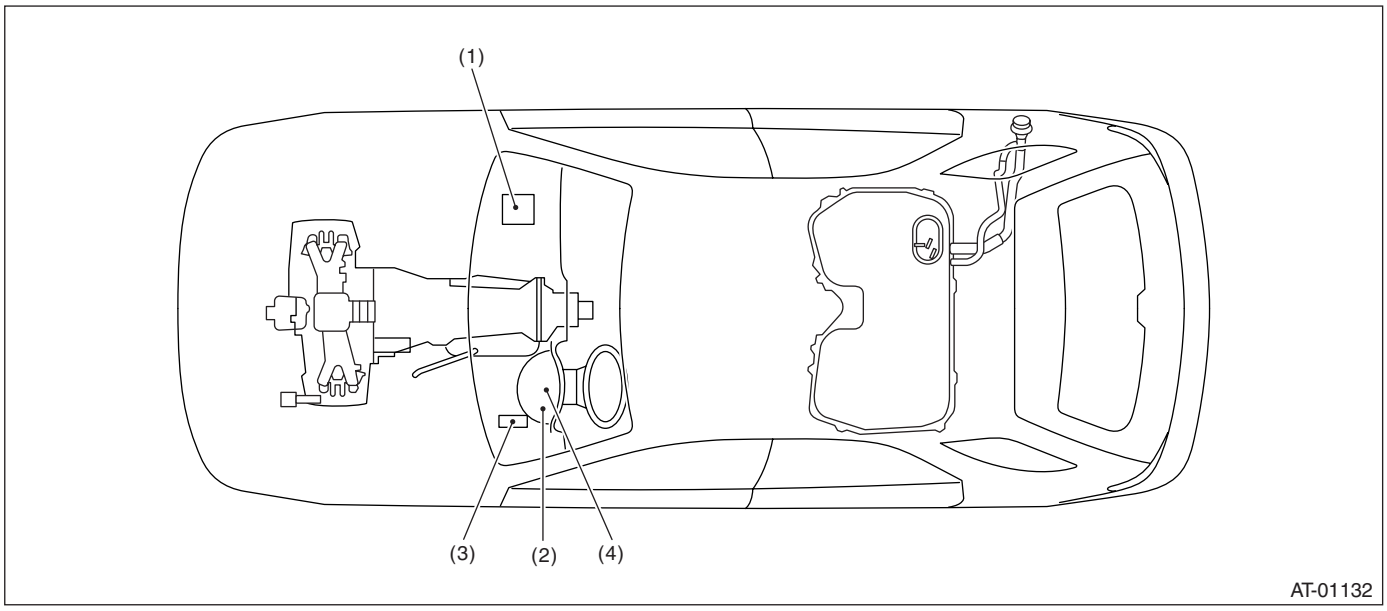

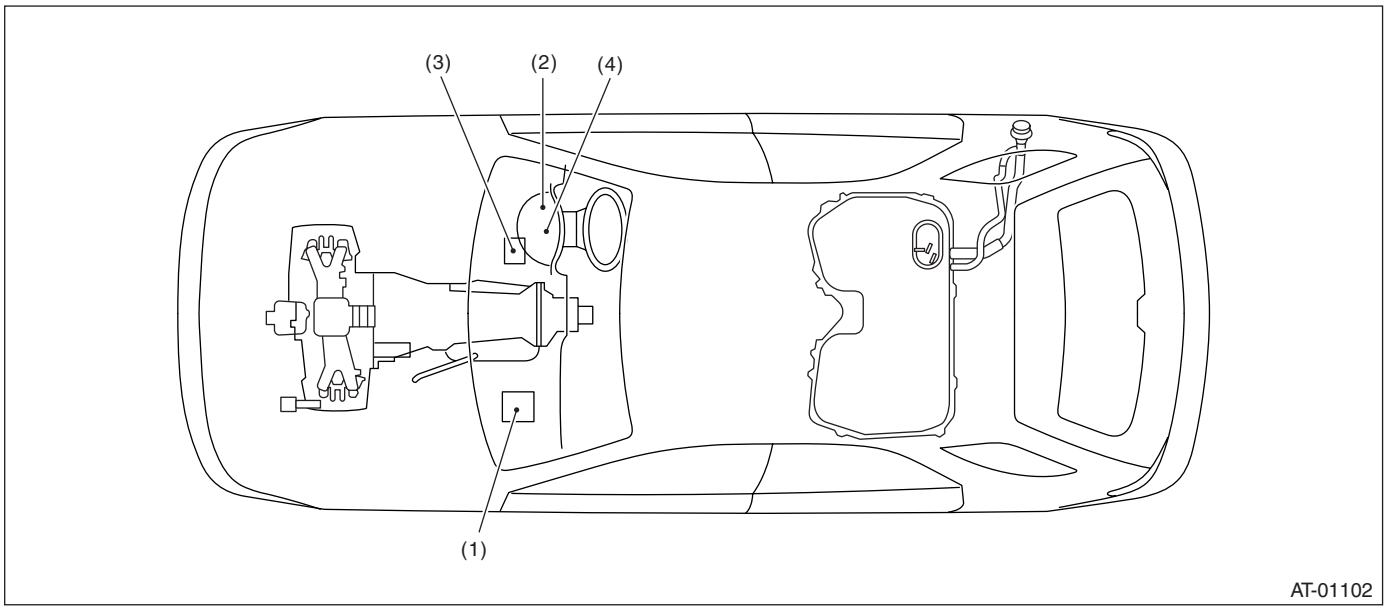

(1) Engine control module (ECM)
(2) POWER indicator light (AT diagnostic indicator light)
(3) Transmission control module (TCM)
(4) Data link connector

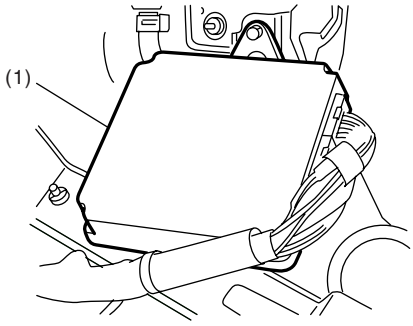

AT-00323

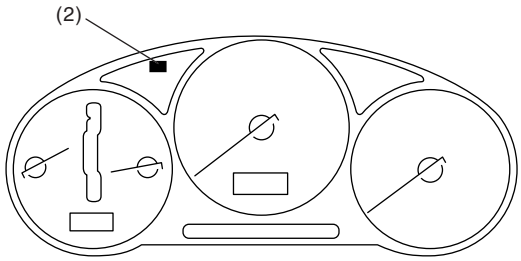

AT-01103

LHD

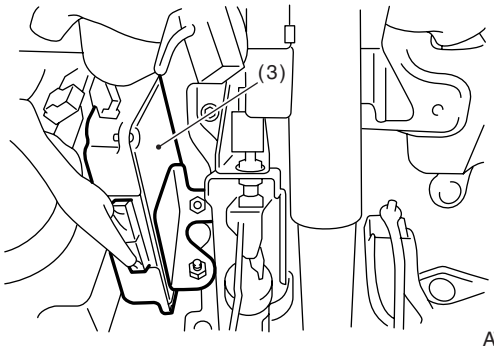

AT-00416

RHD

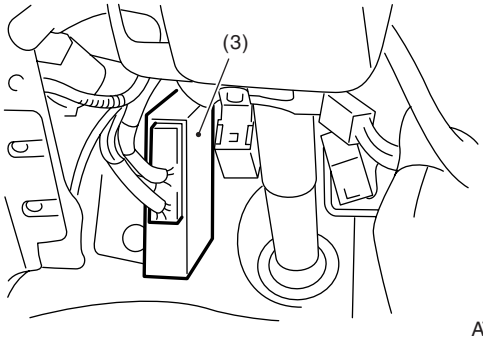

AT-00372

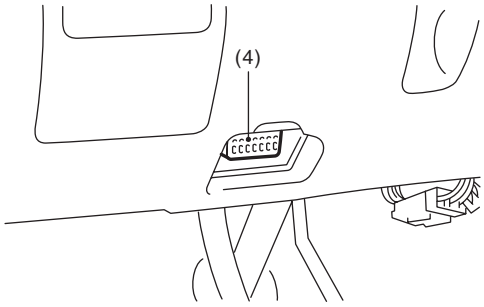

AT-00417

2. SENSOR

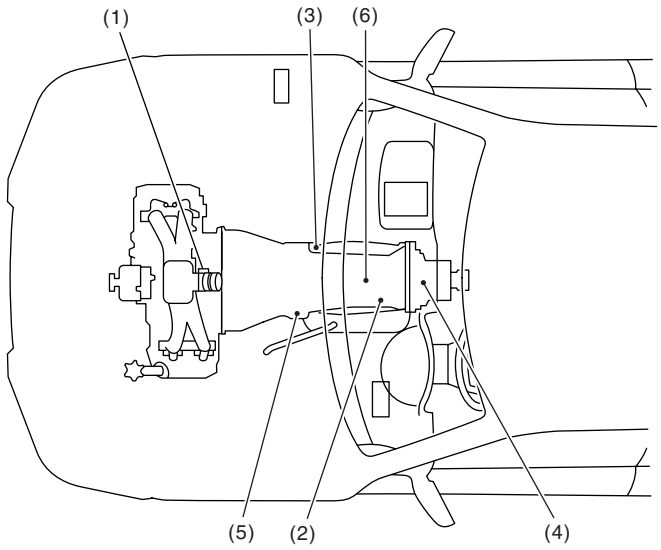

AT-00744

(1) Throttle position sensor
(2) Front vehicle speed sensor
(3) Inhibitor switch
(4) Rear vehicle speed sensor
(5) Torque converter turbine speed sensor
(6) ATF temperature sensor

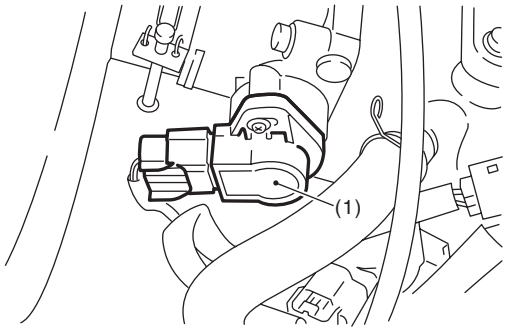

AT-00328

SOHC model

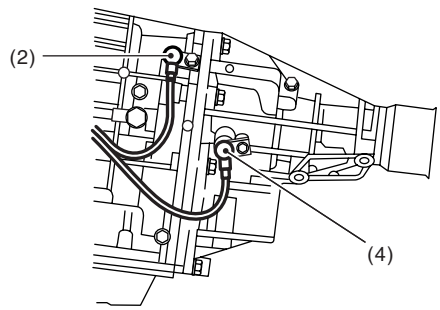

AT-00329

DOHC turbo model

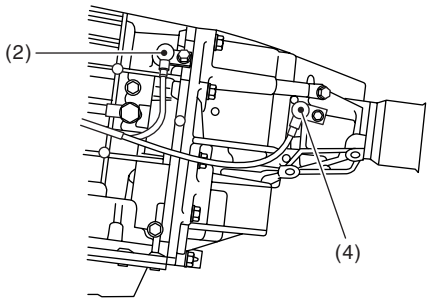

AT-01133

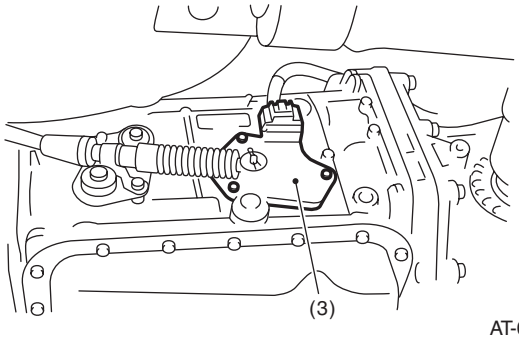

AT-00330

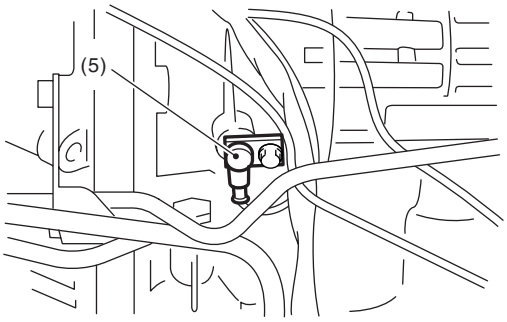

AT-00331

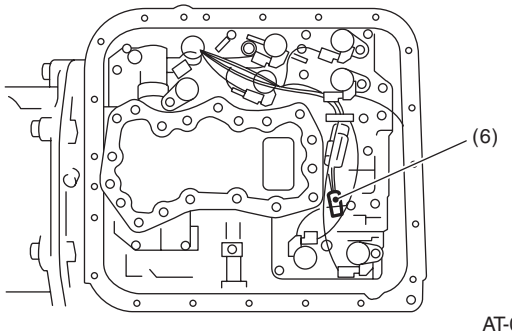

AT-00332

3. SOLENOID

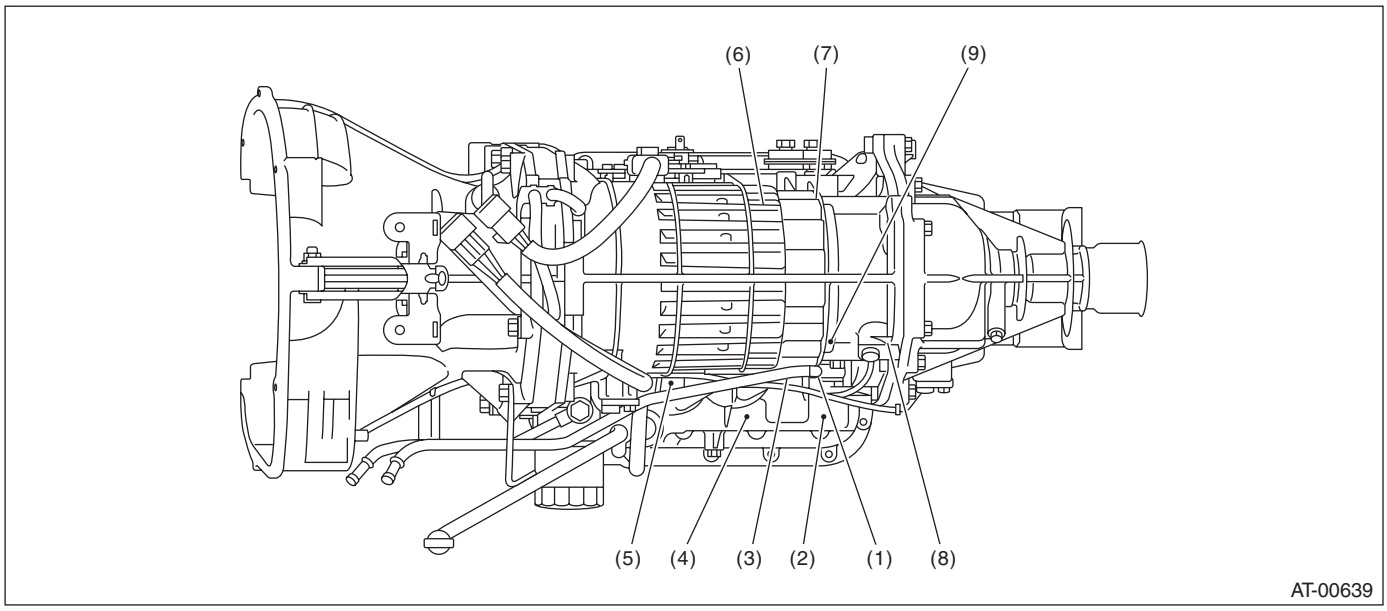

(1) Solenoid 1
(2) Solenoid 2
(3) Line pressure duty solenoid
(4) Low clutch timing solenoid
(5) Lock-up duty solenoid
(6) 2-4 brake duty solenoid
(7) 2-4 brake timing solenoid
(8) Transfer duty solenoid
(9) Sport shift solenoid (with SPORT shift)

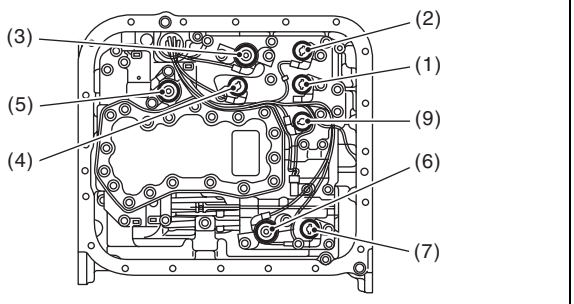

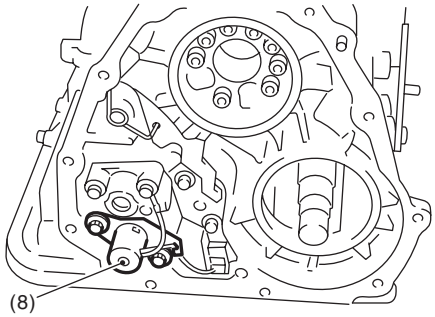

5. Transmission Control Module (TCM) I/O Signal

A: ELECTRICAL SPECIFICATION

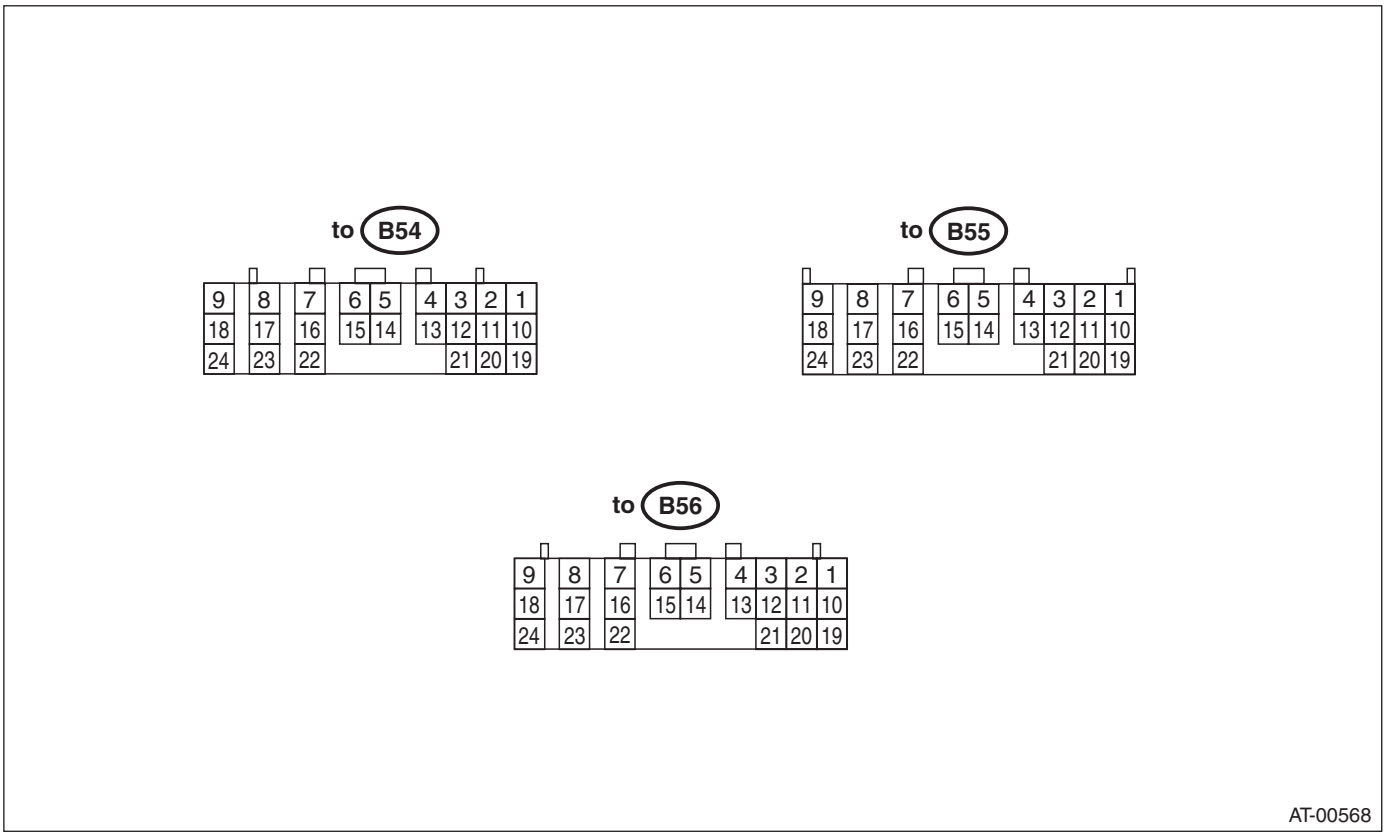

Check with ignition switch ON.						
Content		Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Back-up power supply		B56	1	Ignition switch OFF	10 — 13	—
Ignition power supply		B54	23	Ignition switch ON (with engine OFF)	10 — 13	—
		B54	24			
Inhibitor switch	"P" range switch	B55	1	Select lever in "P" range	Less than 1	—
				Select lever in any other than "P" range (except "N" range)	More than 8	
	"N" range switch	B55	14	Select lever in "N" range	Less than 1	—
				Select lever in any other than "N" range (except "P" range)	More than 8	
	"R" range switch	B55	3	Select lever in "R" range	Less than 1	—
				Select lever in any other than "R" range	More than 8	
	"D" range switch	B55	4	Select lever in "D" range	Less than 1	—
				Select lever in any other than "D" range	More than 8	
	"3" range switch	B55	5	Select lever in "3" range	Less than 1	—
				Select lever in any other than "3" range	More than 8	

Check with ignition switch ON.						
Content		Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Inhibitor switch	"2" range switch	B55	6	Select lever in "2" range	Less than 1	—
				Select lever in any other than "2" range	More than 8	
	"1" range switch	B55	7	Select lever in "1" range	Less than 1	—
				Select lever in any other than "1" range	More than 8	
Brake switch		B55	12	Brake pedal depressed.	More than 10.5	—
				Brake pedal released.	Less than 1	
Kick-down switch		B55	11	Throttle fully opened.	Less than 1	—
				Throttle fully closed.	More than 6.5	
AT OIL TEMP warning light		B56	10	Light ON	Less than 1	—
				Light OFF	More than 9	
Throttle position sensor		B54	3	Throttle fully closed.	0.2 — 1.0	—
				Throttle fully open.	4.2 — 4.7	
Throttle position sensor power supply		B54	2	Ignition switch ON (with engine OFF)	4.8 — 5.3	—
ATF temperature sensor		B54	11	ATF temperature 20°C (68°F)	1.6 — 2.0	2.1 k — 2.9 k
				ATF temperature 80°C (176°F)	0.4 — 0.9	275 — 375
Rear vehicle speed sensor		B55	24	Vehicle stopped.	0	450 — 650
				Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Front vehicle speed sensor		B55	18	Vehicle stopped.	0	450 — 650
				Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Torque converter turbine speed sensor		B55	8	Engine idling after warm-up. (D range)	0	450 — 650
				Engine idling after warm-up. (N range)	More than 1 (AC range)	
Vehicle speed output signal		B56	17	Vehicle speed at most 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Engine speed signal		B55	17	Ignition switch ON (with engine OFF)	More than 10.5	—
				Ignition switch ON (with engine ON)	8 — 11	
Cruise set signal		B55	22	When cruise control is set. (SET lamp ON)	Less than 1	—
				When cruise control is not set. (SET lamp OFF)	More than 6.5	
Torque control signal 1		B56	5	Ignition switch ON (with engine ON)	More than 4	—
Torque control signal 2		B56	14	Ignition switch ON (with engine ON)	More than 4	—
Torque control cut signal		B55	10	Ignition switch ON	8	—
Intake manifold pressure signal (SOHC model)		B54	1	Engine idling after warm-up.	0.4 — 1.6	—
Mass air flow signal (DOHC turbo model)		B54	1	Engine idling after warm-up.	0.9 — 1.4	—
Shift solenoid 1		B54	22	1st or 4th gear	More than 9	10 — 16
				2nd or 3rd gear	Less than 1	

Check with ignition switch ON.					
Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Shift solenoid 2	B54	5	1st or 2nd gear	More than 9	10 — 16
			3rd or 4th gear	Less than 1	
Line pressure duty solenoid	B54	9	Ignition switch ON (with engine OFF) Throttle fully closed after warm-up.	1.5 — 4.0	2.0 — 4.5
			Ignition switch ON (with engine OFF) Throttle fully open after warm-up.	Less than 0.5	
Lock-up duty solenoid	B54	7	When lock up occurs.	More than 8.5	10 — 17
			When lock up is released.	Less than 0.5	
Transfer duty solenoid (SOHC model)	B54	6	Fuse on FWD switch	More than 8.5	10 — 17
			Fuse removed from FWD switch (with throttle fully open and with select lever in 1st gear).	Less than 0.5	
Transfer duty solenoid (DOHC turbo model)	B56	6	Throttle fully closed.	More than 8.5	10 — 17
			Throttle fully open.	Less than 0.5	
2-4 brake duty solenoid	B54	18	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 5.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake timing solenoid	B54	16	1st gear	Less than 1	10 — 16
			3rd gear	More than 9	
Low clutch timing solenoid	B54	15	2nd gear	Less than 1	10 — 16
			4th gear	More than 9	
HOLD switch	B55	16	HOLD switch ON	Less than 1	—
			HOLD switch OFF	More than 8	—
POWER switch	B55	23	POWER switch ON	Less than 1	—
			POWER switch OFF	More than 10	—
POWER indicator light	B56	11	Light ON	Less than 1	—
			Light OFF	More than 9	—
FWD switch	B55	20	Fuse removed.	6 — 9.1	—
			Fuse installed.	Less than 1	—
FWD indicator light	B56	2	Fused ON FWD switch	Less than 1	—
			Fuse removed from FWD switch.	More than 9	—
ABS signal	B55	21	ABS switch ON	Less than 1	—
			ABS switch OFF	6.5 — 15	—
Sensor ground line 1	B54	20	—	0	Less than 1
Sensor ground line 2	B55	9	—	0	Less than 1
System ground line	B56	19	—	0	Less than 1
	B54	21			
Sensor ground line 3	B54	10	—	0	Less than 1
Sensor ground line 4	B54	19	—	0	Less than 1
AT diagnosis signal	B56	21	Ignition switch ON	Less than 1 ← → More than 4	—

Check with ignition switch ON.					
Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Data link signal (Subaru Select Monitor)	B56	15	—	—	—
SPORT shift solenoid (with SPORT shift)	B54	14	SPORT shift activated	More than 8	10 — 16
			SPORT shift deactivated	Less than 1	
SPORT shift mode switch (with SPORT shift)	B55	15	SPORT shift mode switch ON	Less than 1	—
			SPORT shift mode switch OFF	More than 8	
Shift up switch (with SPORT shift)	B55	13	Shift up switch ON	Less than 1	—
			Shift up switch OFF	More than 8	
Shift down switch (with SPORT shift)	B55	12	Shift down switch ON	Less than 1	—
			Shift down switch OFF	More than 8	
Buzzer (with SPORT shift)	B56	2	ON	Less than 1	—
			OFF	More than 8	
SPORT shift indicator (with SPORT shift)	B56	12	SPORT shift mode OFF	More than 4	—
			Shift down indicator ON	Less than 1	
SPORT shift indicator (with SPORT shift)	B56	13	SPORT shift mode OFF	More than 4	—
			SPORT shift mode with 4th gear	Less than 1	
SPORT shift indicator (with SPORT shift)	B56	3	SPORT shift mode OFF	More than 4	—
			SPORT shift mode with 2nd and 3rd gear	Less than 1	
SPORT shift indicator (with SPORT shift)	B56	4	SPORT shift mode OFF	More than 4	—
			SPORT shift mode with 1st and 3rd gear	Less than 1	

B: SCHEMATIC

1. WITHOUT SPORT SHIFT

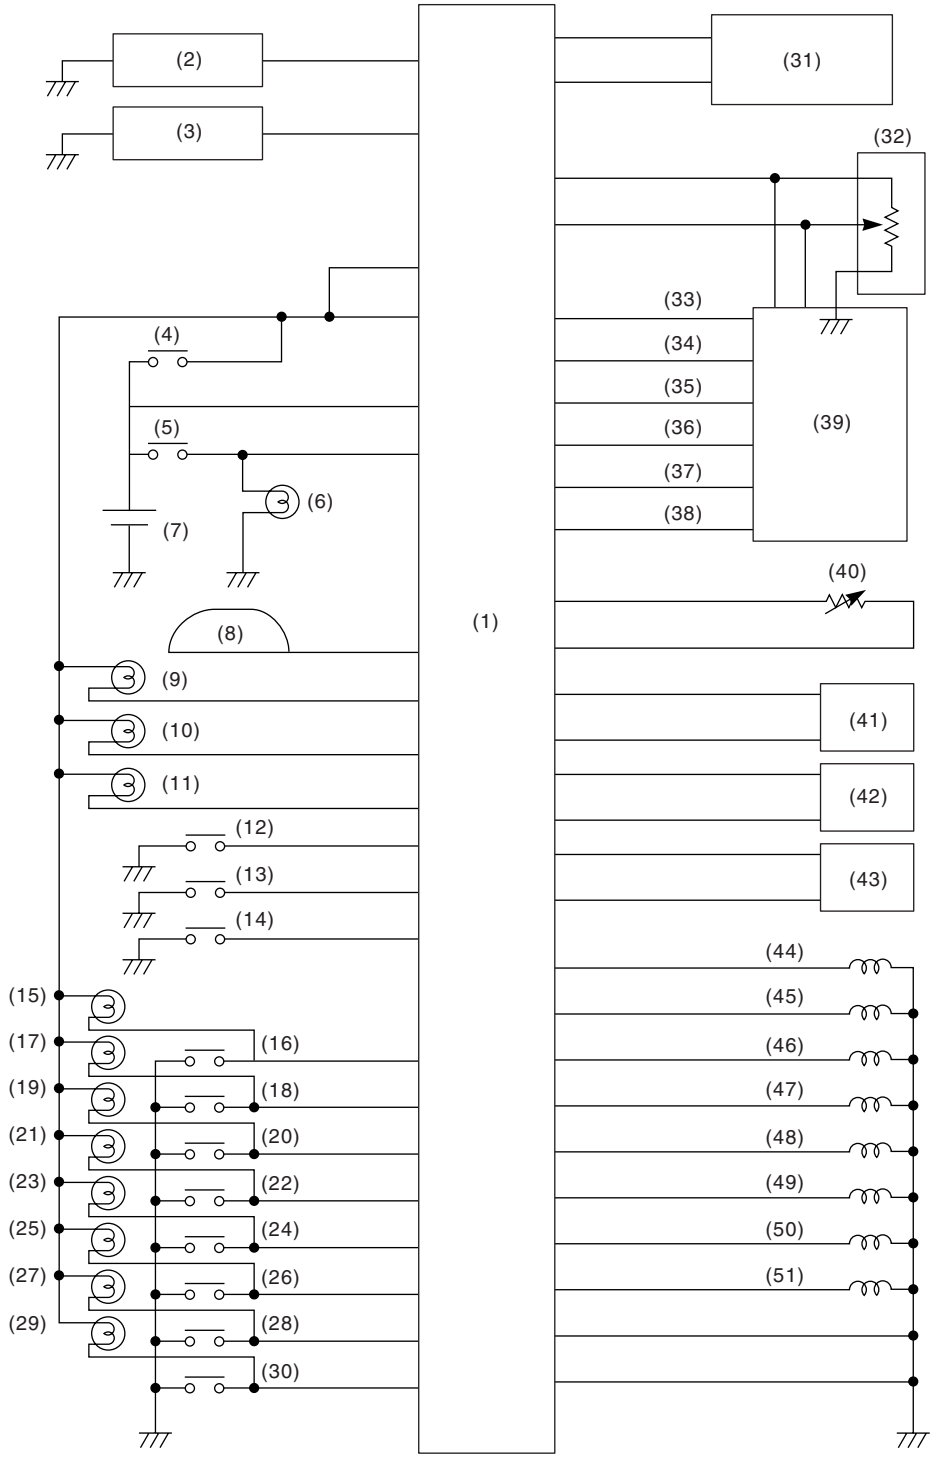

AT-01134

(1) Transmission control module
(2) Cruise control module
(3) ABS control module
(4) Ignition switch
(5) Brake switch
(6) Brake light
(7) Battery
(8) Combination meter (Speedometer circuit)
(9) AT OIL TEMP light
(10) FWD indicator light
(11) POWER indicator light
(12) FWD switch
(13) POWER switch
(14) Kick-down switch
(15) Hold indicator light
(16) HOLD switch
(17) “P” range indicator light
(18) “P” range switch
(19) “R” range indicator light
(20) “R” range switch
(21) “N” range indicator light
(22) “N” range switch
(23) “D” range indicator light
(24) “D” range switch
(25) “3” range indicator light
(26) “3” range switch
(27) “2” range indicator light
(28) “2” range switch
(29) “1” range indicator light
(30) “1” range switch
(31) Data link connector
(32) Throttle position sensor
(33) Engine speed signal
(34) Torque control cut signal
(35) Torque control signal 2
(36) Torque control signal 1
(37) Intake manifold pressure signal
(38) AT diagnostics signal
(39) Engine control module
(40) ATF temperature sensor
(41) Torque converter turbine speed sensor
(42) Rear vehicle speed sensor
(43) Front vehicle speed sensor
(44) Shift solenoid 1
(45) Shift solenoid 2
(46) 2-4 brake timing solenoid
(47) Line pressure duty solenoid
(48) 2-4 brake duty solenoid
(49) Lock-up duty solenoid
(50) Low clutch timing solenoid
(51) Transfer duty solenoid

2. WITH SPORT SHIFT

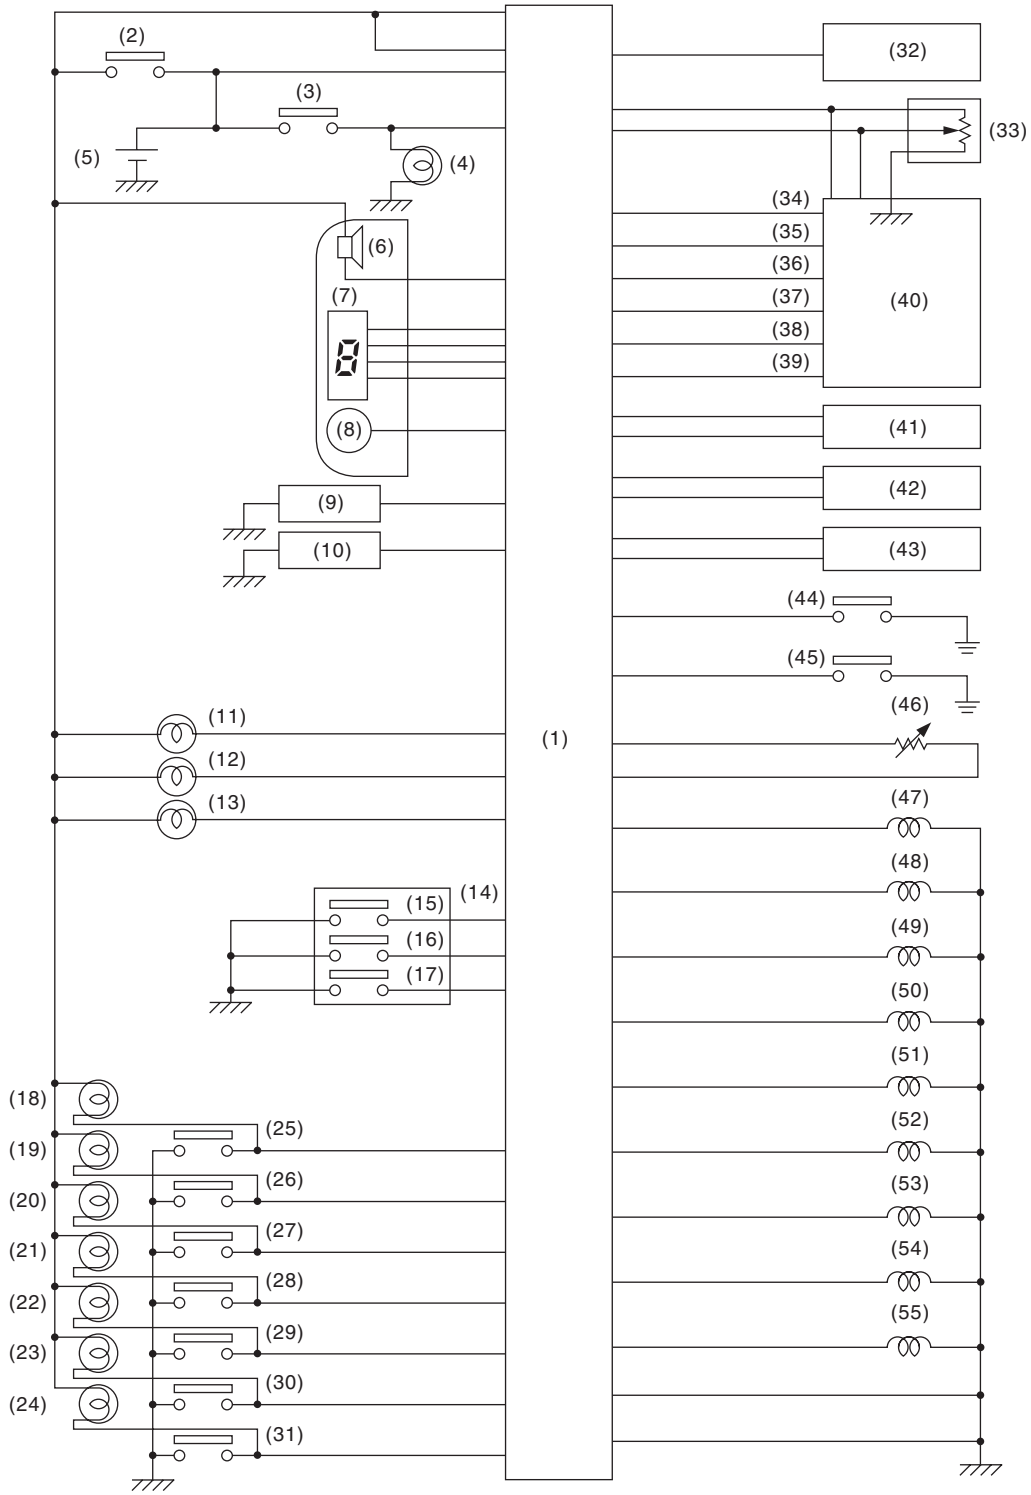

AT-01135

(1) Transmission control module
(2) Ignition switch
(3) Brake switch
(4) Brake light
(5) Battery
(6) Buzzer
(7) SPORT shift indicator
(8) Speedometer
(9) Cruise control module
(10) ABS control module
(11) “AT OIL TEMP” warning light
(12) POWER indicator light
(13) HOLD indicator light
(14) SPORT shift
(15) SPORT shift mode switch
(16) Up switch
(17) Down switch
(18) “P” range indicator light
(19) “R” range indicator light
(20) “N” range indicator light
(21) “D” range indicator light
(22) “3” range indicator light
(23) “2” range indicator light
(24) “1” range indicator light
(25) “P” range switch
(26) “R” range switch
(27) “N” range switch
(28) “D” range switch
(29) “3” range switch
(30) “2” range switch
(31) “1” range switch
(32) Data link connector
(33) Throttle position sensor
(34) Engine speed signal
(35) Torque control cut signal
(36) Torque control signal 2
(37) Torque control signal 1
(38) Intake manifold pressure signal
(39) AT diagnosis signal
(40) Engine control module
(41) Front vehicle speed sensor
(42) Rear vehicle speed sensor
(43) Torque converter turbine speed sensor
(44) POWER switch
(45) HOLD switch
(46) ATF temperature sensor
(47) Shift solenoid 1
(48) Shift solenoid 2
(49) 2-4 brake timing solenoid
(50) 2-4 brake duty solenoid
(51) Line pressure duty solenoid
(52) Lock-up duty solenoid
(53) Low clutch timing solenoid
(54) Transfer duty solenoid
(55) SPORT shift solenoid

6. Subaru Select Monitor

A: OPERATION

1. READ DTC

1) Prepare the Subaru Select Monitor kit.

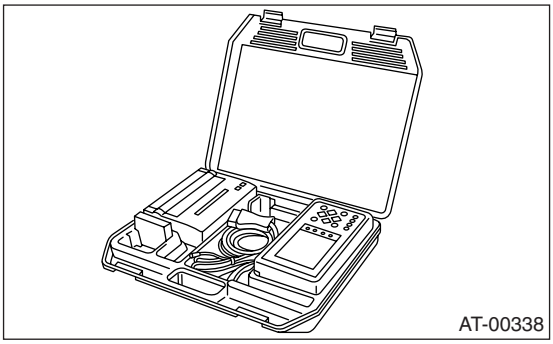

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor. <Ref. to 4AT-7, PREPARATION TOOL, General Description.>

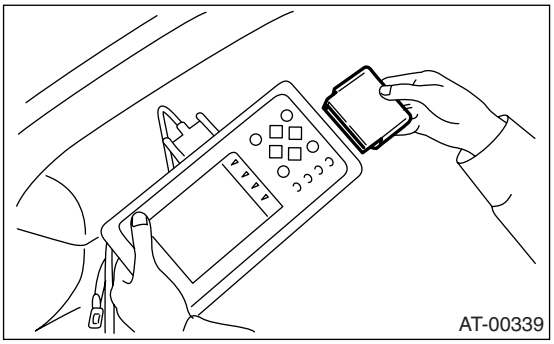

4) Connect the Subaru Select Monitor to data link connector.
   (1) Data link connector located in the lower portion of instrument panel (on driver's side).

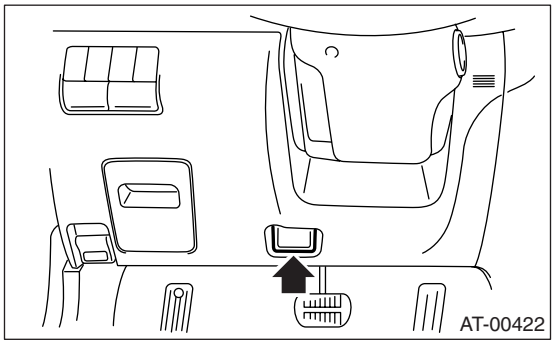

   (2) Connect the diagnosis cable to data link connector.

NOTE:
Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.

5) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

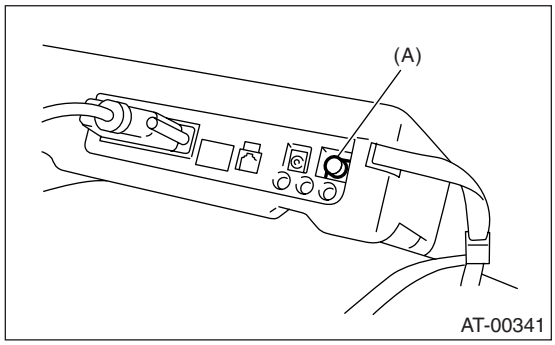

(A) POWER switch

6) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
7) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
8) Press the [YES] key after the information of transmission type is displayed.
9) On the «Transmission Diagnosis» display screen, select the {DTC Display} and press the [YES] key.
10) On the «DTC Display» display screen, select the {Memorized DTC} and press the [YES] key.

NOTE:
• For detailed operation procedure, refer to the Subaru Select Monitor OPERATION MANUAL.
• For details concerning the DTC, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to 4AT-29, List of Diagnostic Trouble Code (DTC).>

2. READ CURRENT DATA

1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
3) Press the [YES] key after the information of transmission type is displayed.
4) On the «Transmission Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
5) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
6) Using the scroll key, move the display screen up or down until desired data is shown.

- A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Rear vehicle speed sensor signal	Rear Wheel Speed	km/h or MPH
Front vehicle speed sensor signal	Front Wheel Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Automatic transmission fluid temperature signal	ATF Temp.	°C or °F
Throttle position signal	Throttle Sensor Voltage	V
Gear position	Gear Position	—
Line pressure control duty ratio	Line Pressure Duty Ratio	%
Lock up clutch control duty ratio	Lock Up Duty Ratio	%
Transfer clutch control duty ratio (AWD model)	Transfer Duty Ratio	%
Power supply for throttle position sensor	Throttle Sensor Power	V
Torque converter turbine speed signal	Turbine Revolution Speed	rpm
2-4 brake timing pressure control duty ratio	Brake Clutch Duty Ratio	%
Mass air flow sensor signal (DOHC turbo model)	Air Flow Sensor Voltage	V
Intake manifold pressure sensor voltage (SOHC model)	Mani. Pressure Voltage	V
2 wheel drive switch signal (SOHC model)	FWD Switch	ON or OFF
Stop lamp switch signal	Stop Light Switch	ON or OFF
Shift up signal (with SPORT shift)	Up Switch	ON or OFF
Shift down signal (with SPORT shift)	Down Switch	ON or OFF
SPORT shift mode signal (with SPORT shift)	Tip Mode Switch	ON or OFF
Anti lock brake system signal	ABS Signal	ON or OFF
Cruise control system signal	Cruise Control Signal	ON or OFF
Parking range signal	P Range Signal	ON or OFF
Neutral range signal	N Range Signal	ON or OFF
Reverse range signal	R Range Signal	ON or OFF
Drive range signal	D Range Signal	ON or OFF
3rd range signal	3rd Range Signal	ON or OFF
2nd range signal	2nd Range Signal	ON or OFF
1st range signal	1st Range Signal	ON or OFF
Shift control solenoid A	Shift Solenoid #1	ON or OFF
Shift control solenoid B	Shift Solenoid #2	ON or OFF
Torque control output signal #1	Torque Control Signal 1	ON or OFF
Torque control output signal #2	Torque Control Signal 2	ON or OFF
Torque control cut signal	Torque Control Cut Sig.	ON or OFF
2-4 brake timing control solenoid valve	2-4 Brake Timing Sol.	ON or OFF
Low clutch timing control solenoid valve	Low Clutch Timing Sol.	ON or OFF
SPORT shift solenoid valve (with SPORT shift)	Tip Solenoid	ON or OFF
Automatic transmission diagnosis indicator lamp	Diagnosis Lamp	ON or OFF
Power mode switch signal	Power Mode Switch	ON or OFF
Hold mode switch signal	Hold Mode Switch	ON or OFF
Kick down switch signal	Kick Down Switch	ON or OFF
Automatic transmission fluid temperature lamp	ATF Temperature Lamp	ON or OFF

NOTE:
For detailed operation procedure, refer to the Subaru Select Monitor OPERATION MANUAL.

3. CLEAR MEMORY MODE

1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
3) Press the [YES] key after the information of transmission type is displayed.
4) On the «Transmission Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
5) When the “Done” and “Turn Ignition Switch OFF” are shown on display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:
For detailed operation procedure, refer to the Subaru Select Monitor OPERATION MANUAL.

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. WITHOUT SUBARU SELECT MONITOR

	Step	Check	Yes	No
1	**PERFORM READ DTC.** 1)Warm-up the engine. 2)Turn the ignition switch to OFF. 3)Turn the ignition switch to ON. 4)Start the engine. 5)Drive the vehicle at speeds greater than 20 km/h (12 MPH). 6)Stop the vehicle. 7)The brake pedal depressed and move select lever to 1 range. 8)Turn the ignition switch to OFF. 9)Turn the ignition switch to ON. 10)Move the select lever “2” range. 11)Move the select lever “1” range. 12)Move the select lever “2” range. 13)Move the select lever “3” range. 14)Move the select lever “D” range.	Does the POWER indicator light blink at 4 Hz intervals? NOTE: Blinks every 0.125 (1/8) seconds (until the ignition switch is turned OFF).	Repair the power supply and ground circuit. <Ref. to 4AT-36, CHECK POWER SUPPLY AND GROUND LINE, Diagnostic Procedure for POWER Indicator Light.>	Go to step **2.**
2	**CHECK POWER INDICATOR LIGHT.**	Does the POWER indicator light blink at 2 Hz intervals? NOTE: Blinks every 0.25 (1/4) seconds (until ignition switch is turned to OFF).	The AT system is normal.	Go to step **3.**
3	**CHECK POWER INDICATOR LIGHT.**	Is the DTC outputted by the blink of POWER indicator light?	Inspect the problem corresponding with DTC. NOTE: Record all DTCs.	Go to step **4.**
4	**CHECK POWER INDICATOR LIGHT.**	Does the POWER indicator light remain illuminated?	Repair the POWER indicator light circuit <Ref. to 4AT-31, Diagnostic Procedure for POWER Indicator Light.>, or Inspect inhibitor switch, wiring, TCM, etc.	Calling up the DTC again.

The POWER indicator light flashes the code corresponding to faulty part.
The long segment (1.2 sec on) indicates a “ten”, and the short segment (0.2 sec on) signifies a “one”.

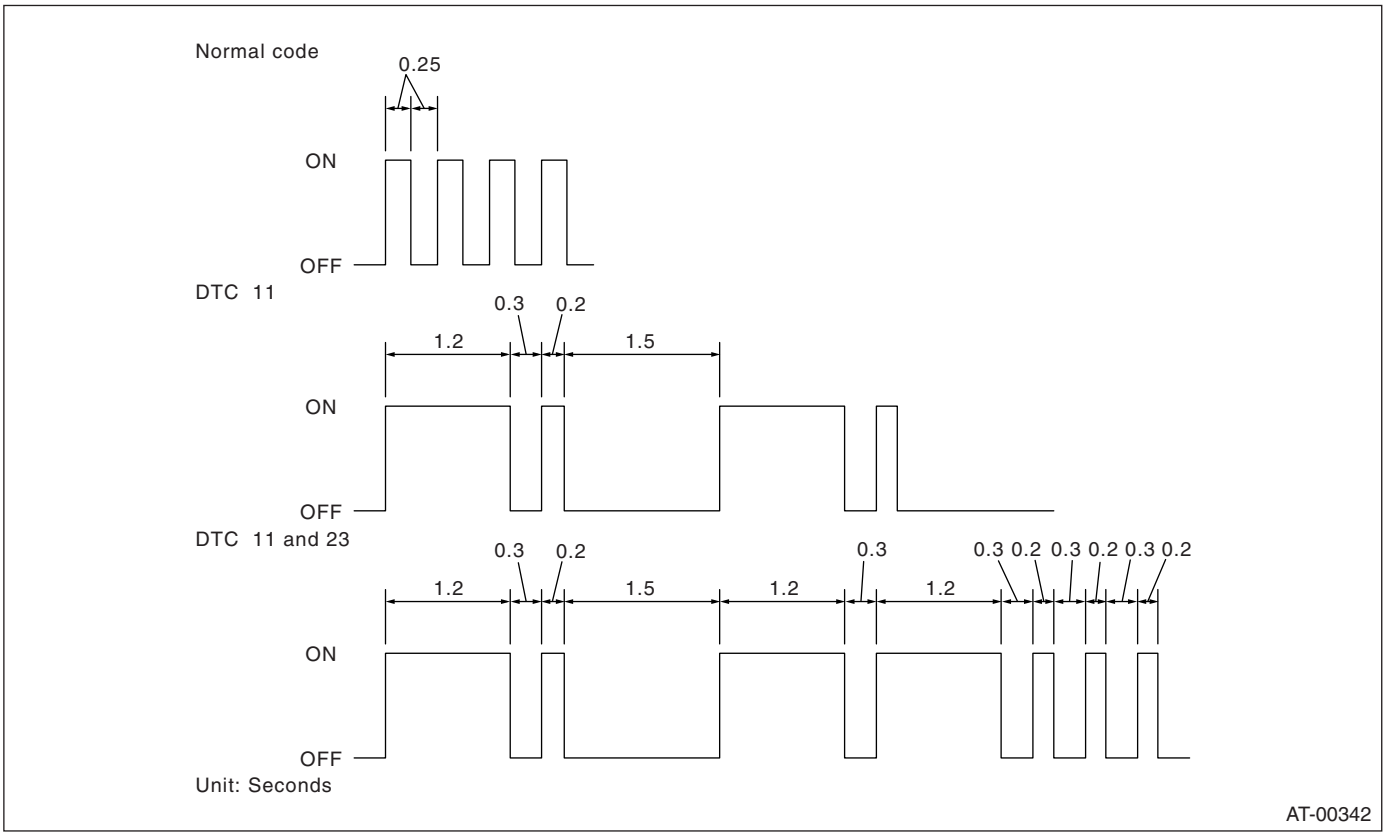

2. WITH SUBARU SELECT MONITOR

Refer to Subaru Select Monitor for information about how to obtain and understand DTC. <Ref. to 4AT-21, OPERATION, Subaru Select Monitor.>

8. Inspection Mode

A: OPERATION

Shift the select lever to D range, and drive continuously for 10 seconds or more at 60 km/h (37 MPH).

WARNING:
Observe the road traffic law.

9. Clear Memory Mode

A: OPERATION

1. WITHOUT SUBARU SELECT MONITOR

Current DTC shown on display are cleared by turning the ignition switch to OFF after conducting on-board diagnostics operation. Previous DTC, however, cannot be cleared since they are stored in the TCM memory which is operating on back-up power supply. These DTC can be cleared by removing the specified TCM connector for at least two minutes.

CLEAR MEMORY:

Remove the TCM connector (B56) for at least two minutes.

• TCM connector (B56) is located in the line to memory back-up power supply of TCM. Removal of this connector clears the previous DTC stored in TCM memory.
• Be sure to remove TCM connector (B56) for at least the specified length of time. Otherwise, the DTC may not be cleared.

2. WITH SUBARU SELECT MONITOR

Refer to Subaru Select Monitor for information about how to clear DTC.
<Ref. to 4AT-23, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>

10.POWER Indicator Light Display

A: INSPECTION

When any on-board diagnostics item is malfunctioning, the display on POWER indicator light blinks from the time malfunction is detected after starting the engine until ignition switch is turned to OFF. The malfunctioning part or unit can be determined by a DTC during on-board diagnostics operation. Problems which occurred previously can also be identified through the memory function. If the POWER indicator does not show a problem (although a problem is occurring), the problem can be determined by checking the performance characteristics of each sensor using select monitor. The indicator signal is as shown in the figure.

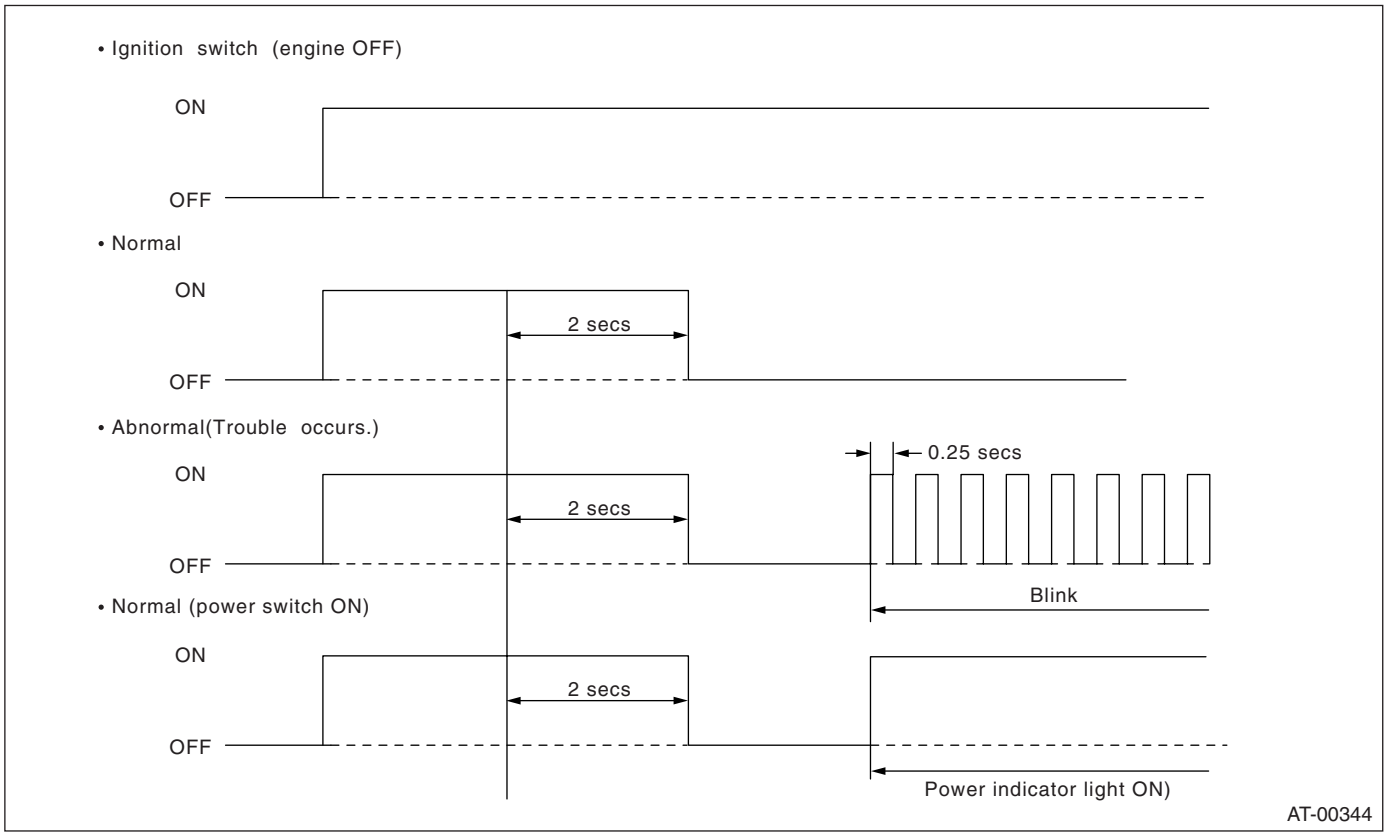

11.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Content of diagnosis	Index
11	Engine speed signal	Detects open or shorted input signal circuit.	<Ref. to 4AT-41, DTC 11 ENGINE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
23	Mass air flow signal (DOHC turbo model)	Detects open or shorted input signal circuit.	<Ref. to 4AT-43, DTC 23 MASS AIR FLOW SIGNAL (TURBO MODEL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
27	ATF temperature sensor	Detects open or shorted input signal circuit.	<Ref. to 4AT-45, DTC 27 ATF TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
31	Throttle position sensor	Detects open or shorted input signal circuit.	<Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
33	Front vehicle speed sensor	Detects open or shorted input signal circuit.	<Ref. to 4AT-53, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
36	Torque converter turbine speed sensor	Detects open or shorted input signal circuit.	<Ref. to 4AT-57, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
38	Torque control signal	Detects open or shorted input signal circuit.	<Ref. to 4AT-60, DTC 38 TORQUE CONTROL SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
45	Intake manifold pressure signal (SOHC model)	Detects open or shorted input signal circuit.	<Ref. to 4AT-62, DTC 45 INTAKE MANIFOLD PRESSURE SIGNAL (NON-TURBO MODEL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
71	Shift solenoid 1	Detects open or shorted output signal circuit.	<Ref. to 4AT-64, DTC 71 SHIFT SOLENOID 1, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
72	Shift solenoid 2	Detects open or shorted output signal circuit.	<Ref. to 4AT-67, DTC 72 SHIFT SOLENOID 2, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
73	Low clutch timing solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-70, DTC 73 LOW CLUTCH TIMING SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
74	2-4 brake timing solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-73, DTC 74 2-4 BRAKE TIMING SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
75	Line pressure duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-76, DTC 75 LINE PRESSURE DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
76	2-4 brake duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-79, DTC 76 2-4 BRAKE DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
77	Lock-up duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-82, DTC 77 LOCK-UP DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
78	SPORT shift solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-86, DTC 78 SPORT SHIFT SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Item	Content of diagnosis	Index
79	Transfer duty solenoid	Detects open or shorted output signal circuit.	<Ref. to 4AT-90, DTC 79 TRANSFER DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
93	Rear vehicle speed sensor	Detects open or shorted input signal circuit.	<Ref. to 4AT-94, DTC 93 REAR VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

12.Diagnostic Procedure for POWER Indicator Light

A: POWER INDICATOR LIGHT DOES NOT COME ON OR GO OFF

DIAGNOSIS:

The POWER Indicator light circuit is open or shorted.

TROUBLE SYMPTOM:

- When the ignition switch is turned to ON (engine OFF), POWER indicator light does not illuminate.
- When the on-board diagnostics is performed, POWER indicator light remains illuminated.

WIRING DIAGRAM:
LHD MODEL

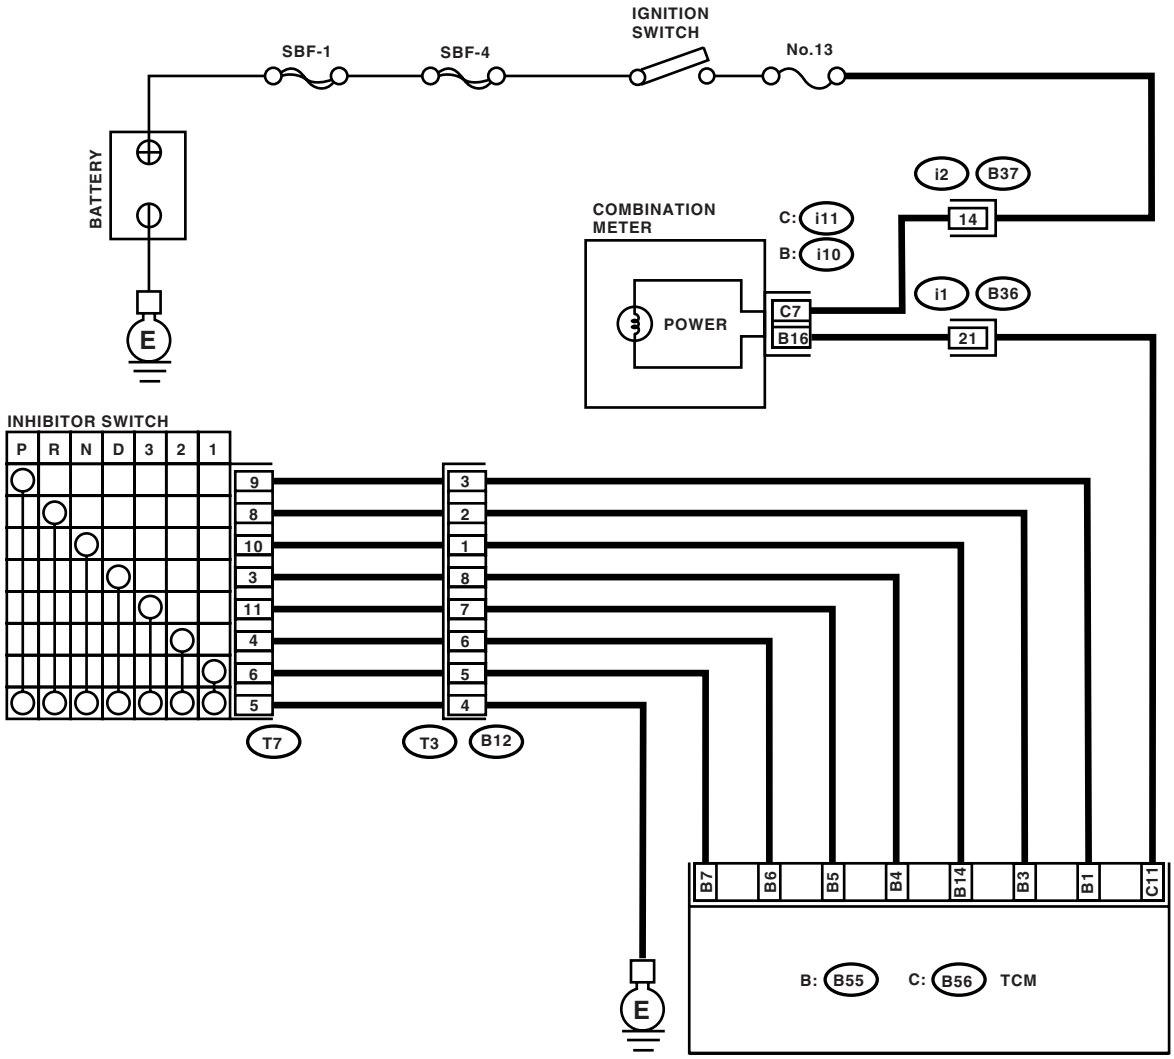

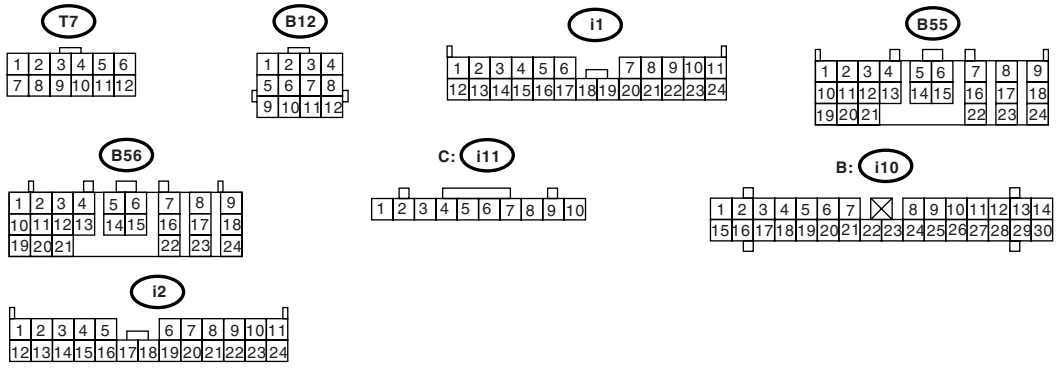

AT-01136

RHD MODEL

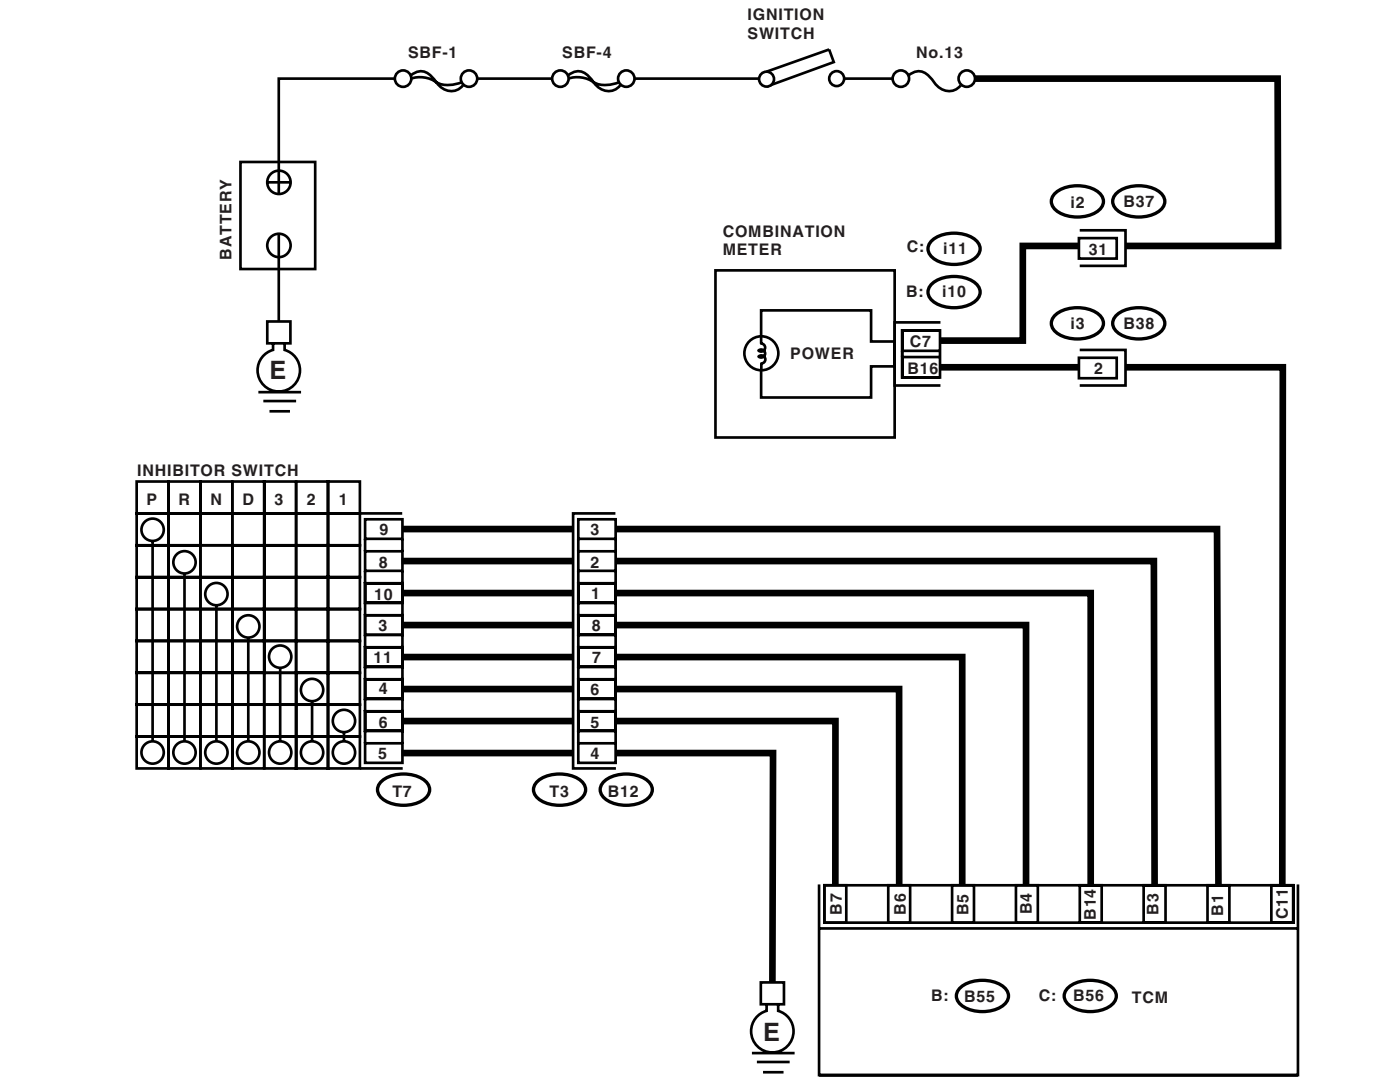

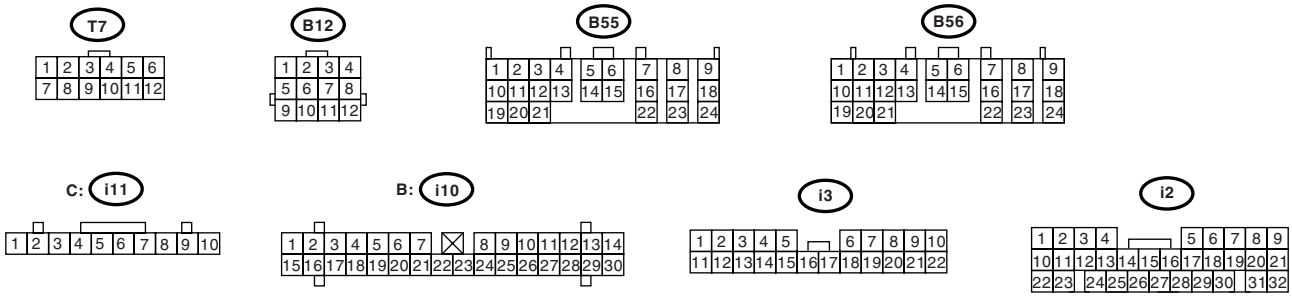

AT-01137

DIAGNOSTIC PROCEDURE FOR POWER INDICATOR LIGHT

	Step	Check	Yes	No
1	**CHECK POWER INDICATOR LIGHT.** Turn the ignition switch to ON (engine OFF).	Does the POWER indicator light illuminate?	Go to step **3.**	Go to step **2.**
2	**CHECK POWER INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the POWER indicator light bulb from combination meter.	Is the POWER indicator light bulb OK?	Go to step **4.**	Replace the POWER indicator light bulb.
3	**CHECK POWER INDICATOR LIGHT.** Perform “Read Diagnostic Trouble Code (DTC)”. <Ref. to 4AT-24, Read Diagnostic Trouble Code (DTC).>	Does the POWER indicator light blink?	A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM, inhibitor switch and combination meter.	Go to step **9.**
4	**CHECK FUSE (No. 13).** Remove the fuse (No. 13).	Is the fuse (No. 13) blown out?	Replace the fuse (No. 13). If replaced fuse (No. 13) is blown out easily, repair short circuit in harness between fuse (No. 13) and combination meter.	Go to step **5.**
5	**CHECK HARNESS CONNECTOR BETWEEN COMBINATION METER AND IGNITION SWITCH.** 1)Turn the ignition switch to ON (engine OFF). 2)Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 7 (+) — Chassis ground (−):***	Is the voltage more than 9 V?	Go to step **6.**	Repair the open circuit in harness between combination meter and battery.
6	**CHECK COMBINATION METER.** Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i10) No. 16 (+) — Chassis ground (−):***	Is the voltage less than 9 V?	Repair the combination meter. <Ref. to IDI-11, Combination Meter Assembly.>	Go to step **7.**
7	**CHECK OPEN CIRCUIT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from combination meter connector. 3)Measure the resistance of harness between combination meter. ***Connector & terminal*** ***(B56) No. 11 — (i10) No. 16:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between TCM and combination meter, and poor contact in coupling connector.
8	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connector to TCM and combination meter. 2)Turn the ignition switch to ON (engine OFF). 3)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 11 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

	Step	Check	Yes	No
9	**CHECK INHIBITOR SWITCH.** 1)Connect the Subaru Select Monitor to data link connector. 2)Turn the ignition switch to ON. 3)Turn the Subaru Select Monitor to ON. 4)Read the data of range switch using Subaru Select Monitor. •Range switch is indicated in ON ⇔ OFF.	When each range is selected, does the LED of Subaru Select Monitor light up?	Go to step **10.**	Check the inhibitor switch circuit. <Ref. to 4AT-109, CHECK INHIBITOR SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>
10	**CHECK SHORT CIRCUIT OF HARNESS.** 1)Disconnect the connector from TCM. 2)Remove the combination meter. 3)Disconnect the connector from combination meter. 4)Measure the resistance of harness connector between TCM and chassis ground. ***Connector & terminal*** ***(B56) No. 11 — Chassis ground:***	Is the resistance less than 1 MΩ?	Check the TCM power supply and ground line. <Ref. to 4AT-36, CHECK POWER SUPPLY AND GROUND LINE, Diagnostic Procedure for POWER Indicator Light.>	Repair the short circuit in harness between combination meter connector and TCM connector.

B: CHECK POWER SUPPLY AND GROUND LINE

WIRING DIAGRAM:

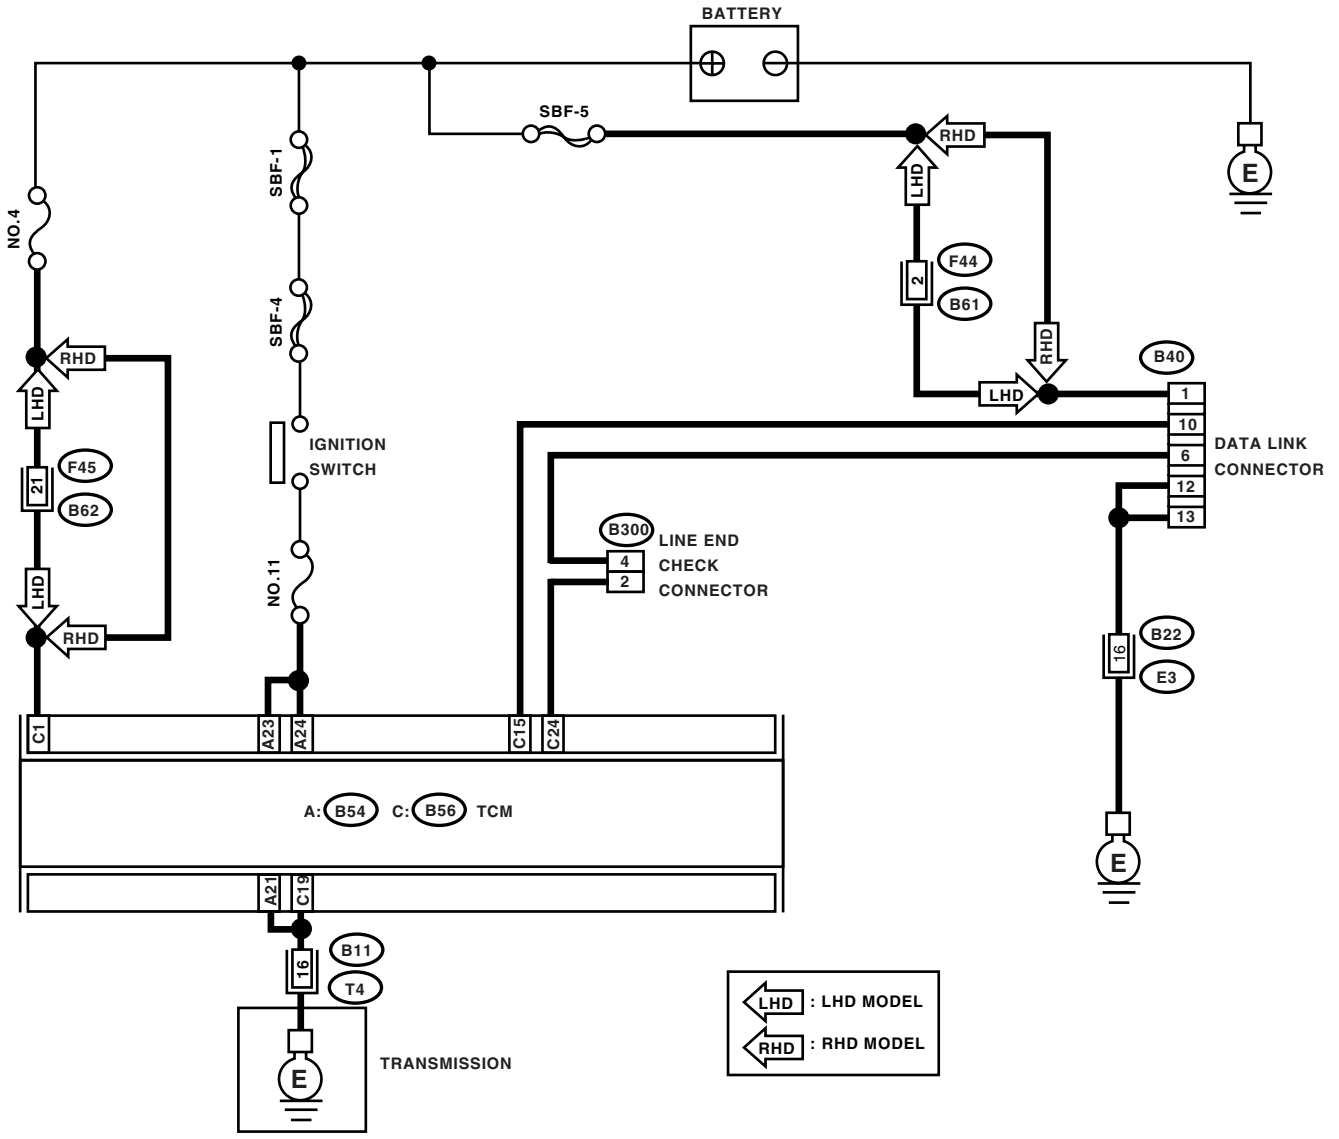

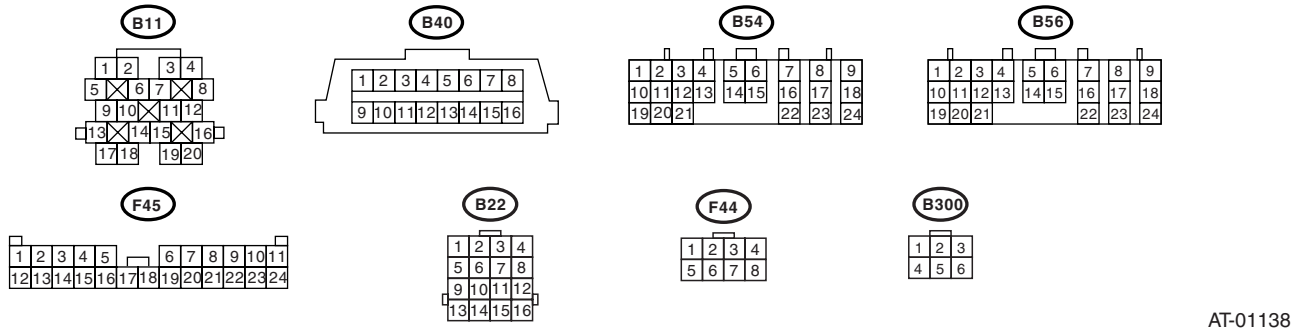

AT-01138

	Step	Check	Yes	No
1	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Is there poor contact at battery terminal?	Repair or tighten the battery terminal.	Go to step **2.**
2	**CHECK POWER SUPPLY OF TCM.** 1)Disconnect the connector from TCM. 2)Turn the ignition switch to ON. 3)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 13 V?	Go to step **4.**	Go to step **3.**
3	**CHECK FUSE (NO. 4).** Remove the fuse (No. 4).	Is the fuse (No. 4) blown out?	Replace the fuse (No. 4). If replaced fuse (No. 4) has blown out easily, repair short circuit in harness between fuse (No. 4) and TCM.	Repair the open circuit in harness between fuse (No. 4) and TCM, or fuse (No. 4) and battery, and poor contact in coupling connector.
4	**CHECK IGNITION POWER SUPPLY CIRCUIT.** 1)Turn the ignition switch to ON (engine OFF). 2)Measure the ignition power supply voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 23 (+) — Chassis ground (–):*** ***(B54) No. 24 (+) — Chassis ground (–):***	Is the voltage 10 — 13 V?	Go to step **6.**	Go to step **5.**
5	**CHECK FUSE (NO. 11).** Remove the fuse (No. 11).	Is the fuse (No. 11) blown out?	Replace the fuse (No. 11). If replaced fuse (No. 11) has blown out easily, repair short circuit in harness between fuse (No. 11) and TCM.	Repair the open circuit in harness between fuse (No. 4) and TCM, or fuse (No. 4) and battery, and poor contact in coupling connector.
6	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B56) No. 19 — (B11) No. 16:*** ***(B54) No. 21 — (B11) No. 16:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair the open circuit in harness between TCM, transmission harness connector, and poor contact in coupling connector.
7	**CHECK HARNESS CONNECTOR BETWEEN TRANSMISSION AND TRANSMISSION GROUND.** Measure the resistance of harness between transmission and transmission ground. ***Connector & terminal*** ***(T4) No. 16 — Transmission ground:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between transmission and transmission ground.
8	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in control module power supply, ground line and data link connector?	Repair the connector.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

13.Diagnostic Procedure for Select Monitor Communication

A: COMMUNICATION FOR INITIALIZING IMPOSSIBLE

DIAGNOSIS:

- Faulty harness connector

TROUBLE SYMPTOM:

- Select monitor communication failure

WIRING DIAGRAM:

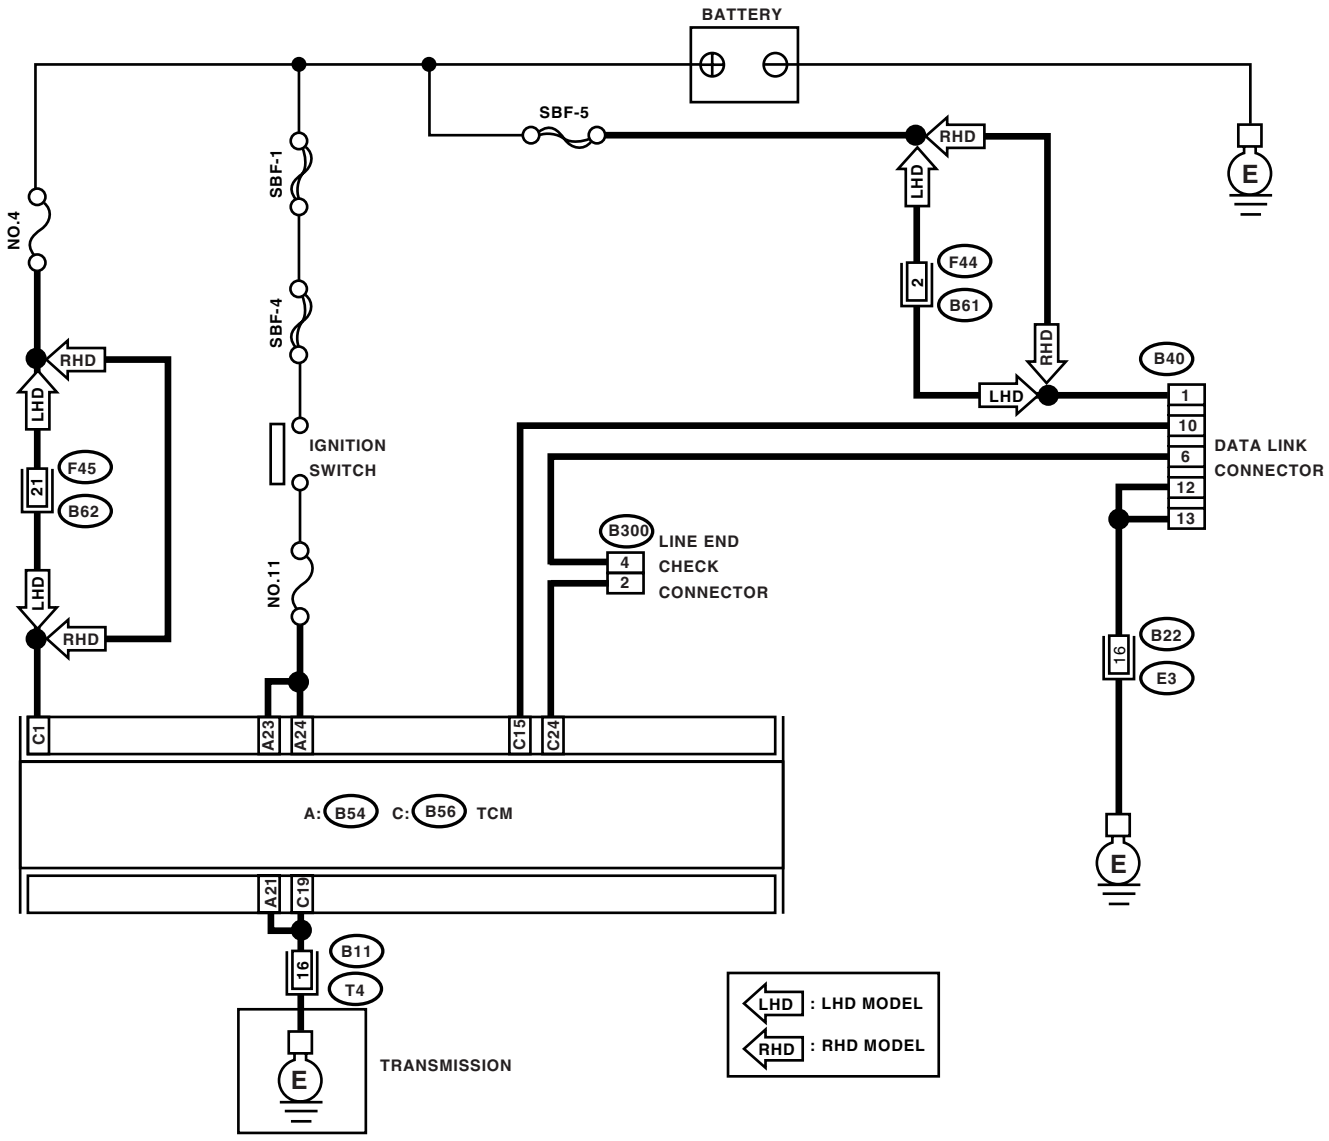

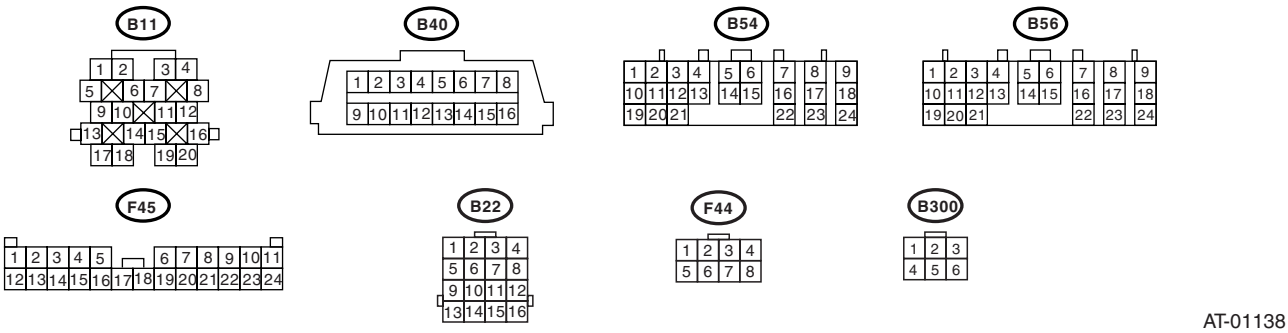

AT-01138

	Step	Check	Yes	No
1	**CHECK SUBARU SELECT MONITOR POWER SUPPLY CIRCUIT.** Measure the voltage between data link connector and chassis ground. ***Connector & terminal*** ***(B40) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Repair the harness and connector between battery and data link connector, and poor contact in coupling connector.
2	**CHECK SUBARU SELECT MONITOR GROUND CIRCUIT.** Measure the resistance of harness between data link connector and chassis ground. ***Connector & terminal*** ***(B40) No. 12 — Chassis ground:*** ***(B40) No. 13 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between data link connector and ground terminal, and poor contact in coupling connector.
3	**CHECK COMMUNICATION OF SELECT MONITOR.** 1)Turn the ignition switch to ON. 2)Using the Subaru Select Monitor, check whether communication to engine systems can be executed normally.	Are the name and year of system displayed on Subaru Select Monitor?	Go to step **8.**	Go to step **4.**
4	**CHECK COMMUNICATION OF SELECT MONITOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the TCM connector. 3)Check whether communication to engine systems can be executed normally.	Are the name and year of system displayed on Subaru Select Monitor?	Go to step **6.**	Go to step **5.**
5	**CHECK COMMUNICATION OF SELECT MONITOR.** 1)Turn the ignition switch to OFF. 2)Connect the TCM connector. 3)Disconnect the ECM connector. 4)Check whether communication to transmission systems can be executed normally.	Are the name and year of system displayed on Subaru Select Monitor?	Inspect the ECM.	Go to step **6.**
6	**CHECK HARNESS CONNECTOR BETWEEN EACH CONTROL MODULE AND DATA LINK CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the TCM, ECM, ABSCM&H/U, cruise control module and immobilizer control module connectors. 3)Measure the resistance between TCM connector and chassis ground. ***Connector & terminal*** ***(B40) No. 10 — Chassis ground:*** ***(B40) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the harness and connector between each control module and data link connector.
7	**CHECK OUTPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to ON. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B40) No. 10 (+) — Chassis ground (−):*** ***(B40) No. 6 (+) — Chassis ground (−):***	Is the voltage more than 1 V?	Repair the harness and connector between each control module and data link connector.	Go to step **8.**
8	**CHECK HARNESS/CONNECTOR BETWEEN TCM AND DATA LINK CONNECTOR.** Measure the resistance between TCM connector and data link connector. ***Connector & terminal*** ***(B56) No. 15 — (B40) No. 10:***	Is the resistance less than 0.5 Ω?	Go to step **9.**	Repair the harness and connector between TCM and data link connector.

	Step	Check	Yes	No
9	**CHECK HARNESS/CONNECTOR BETWEEN TCM AND DATA LINK CONNECTOR.** Measure the resistance between TCM and data link connector. ***Connector & terminal*** ***(B56) No. 24 — (B40) No. 6:***	Is the resistance more than 1 MΩ?	Go to step **10.**	Repair the harness and connector between TCM and data link connector.
10	**CHECK INSTALLATION OF TCM CONNECTOR.** Turn the ignition switch to OFF.	Is the TCM connector inserted into TCM?	Go to step **11.**	Insert the TCM connector into TCM.
11	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in control module and data link connector?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

14.Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC 11 ENGINE SPEED SIGNAL

DIAGNOSIS:

The engine speed input signal circuit is open or shorted.

TROUBLE SYMPTOM:

- No lock-up (after engine warm-up).
- The POWER indicator light remains on when vehicle speed is “0”.

WIRING DIAGRAM:

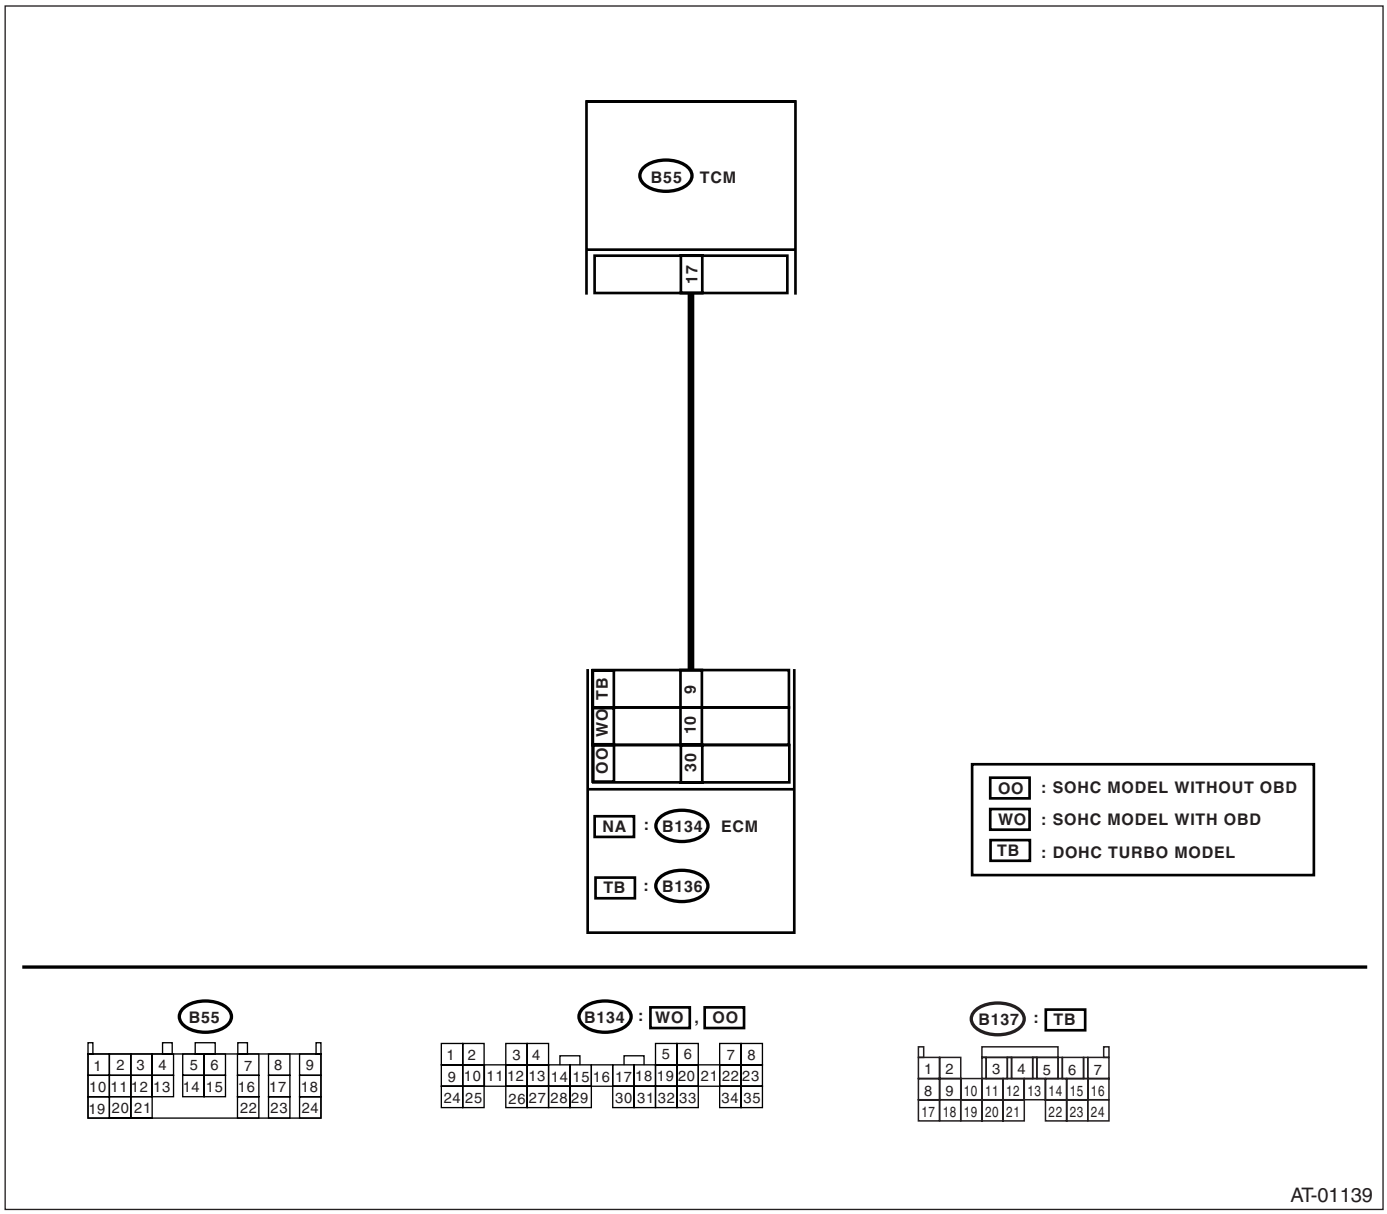

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and ECM. 3)Measure the resistance of harness between TCM and ECM connector. ***Connector & terminal*** ***SOHC MODEL WITHOUT OBD*** ***(B55) No. 17 — (B134) No. 30:*** ***SOHC MODEL WITH OBD*** ***(B55) No. 17 — (B134) No. 10:*** ***DOHC TURBO MODEL*** ***(B55) No. 17 — (B136) No. 9:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and ECM connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B55) No. 17 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and ECM connector.
3	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **5.**	Go to step **4.**
4	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and ECM. 2)Turn the ignition switch to ON (engine OFF). 3)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B55) No. 17 (+) — Chassis ground (−):***	Is the voltage more than 10.5 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and ECM.	Go to step **6.**
5	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and ECM. 2)Connect the Subaru Select Monitor to data link connector. 3)Start the engine and turn Subaru Select Monitor switch to ON. 4)Warm-up the engine until engine coolant temperature is above 80°C (176°F). 5)Idle the engine. 6)Read the data of engine speed using Subaru Select Monitor. •Display shows the engine speed signal value sent from ECM.	Is the revolution value same as tachometer reading shown on combination meter?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and ECM.	Go to step **6.**
6	**CHECK POOR CONTACT.**	Is there poor contact in engine speed signal circuit?	Repair the poor contact.	Go to step **7.**
7	**CONFIRM DTC 11.**	Replace the ECM with a new one. Does the DTC appear again, after memory has been cleared?	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>	Replace the ECM.

B: DTC 23 MASS AIR FLOW SIGNAL (TURBO MODEL)

DIAGNOSIS:
The input signal circuit of TCM from ECM is open or shorted.
TROUBLE SYMPTOM:
Excessive shift shock.
WIRING DIAGRAM:

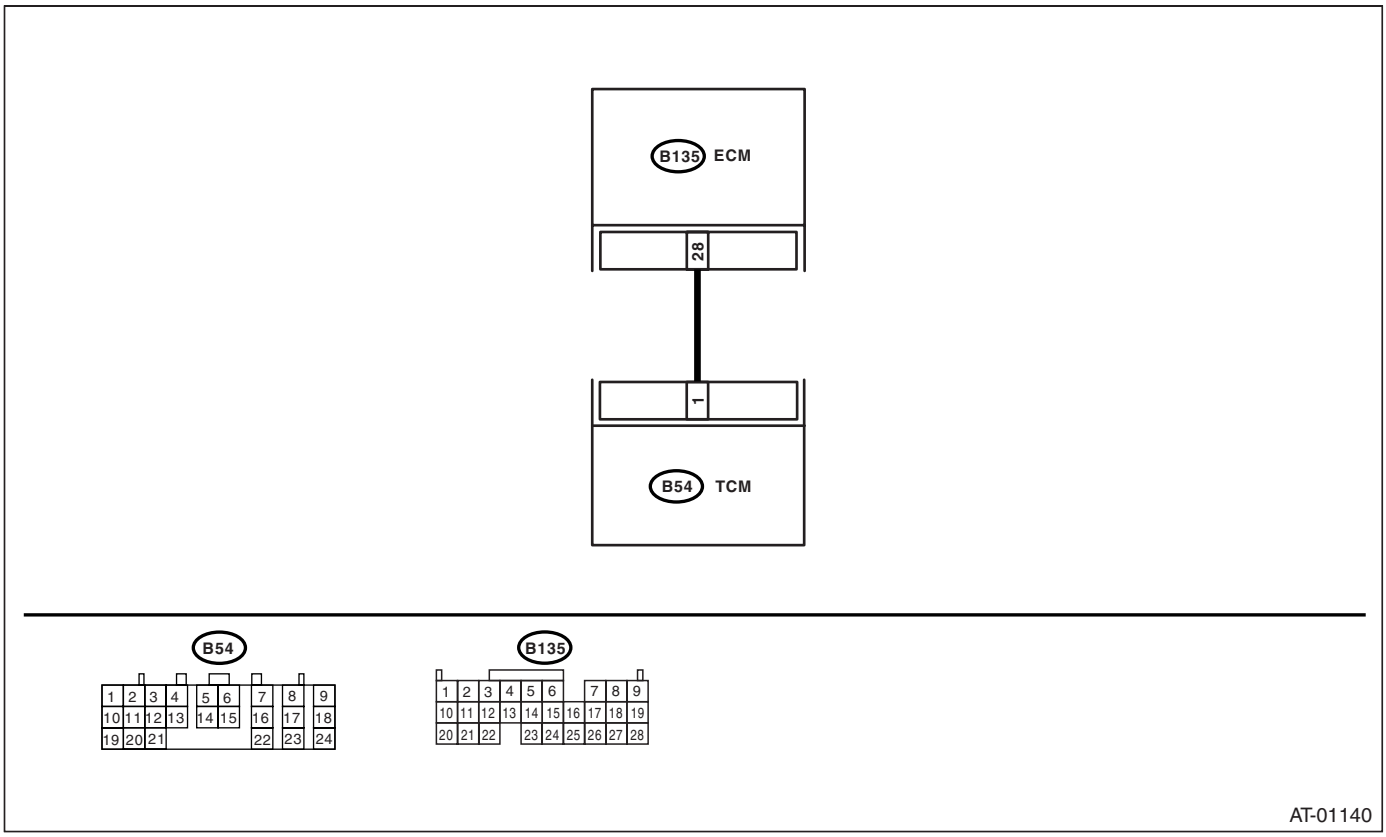

	Step	Check	Yes	No
1	**CHECK ENGINE GROUND TERMINALS AND GROUND CIRCUIT OF ECM.** <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble?	Repair the ground terminal and/or ground circuit of ECM.	Go to step **2.**
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and ECM. 3)Measure the resistance of harness between TCM and ECM connector. ***Connector & terminal*** ***(B54) No. 1 — (B135) No. 28:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and ECM connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the short circuit in harness between TCM and ECM connector.
4	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **6.**	Go to step **5.**

	Step	Check	Yes	No
5	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and ECM. 2)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 3)Idle the engine. 4)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 1 (+) — Chassis ground (−):***	Is the voltage 0.9 — 1.4 V?	Even if the POWER indicator light up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair harness or connector in the TCM and ECM.	Go to step **7.**
6	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and ECM. 2)Connect the Subaru Select Monitor to data link connector. 3)Start the engine and turn the Subaru Select Monitor switch to ON. 4)Warm-up the engine until engine coolant temperature is above 80°C (176°F). 5)Idle the engine. 6)Read the data of mass air flow sensor signal using Subaru Select Monitor. •Display shows the mass air flow sensor signal value sent from ECM.	Is the value voltage 0.9 — 1.4 V?	Even if the POWER indicator light up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair harness or connector in the TCM and ECM.	Go to step **7.**
7	**CHECK POOR CONTACT.**	Is there poor contact in intake manifold pressure signal circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

C: DTC 27 ATF TEMPERATURE SENSOR

DIAGNOSIS:

The input signal circuit of TCM to ATF temperature sensor is open or shorted.

TROUBLE SYMPTOM:

Excessive shift shock.

WIRING DIAGRAM:

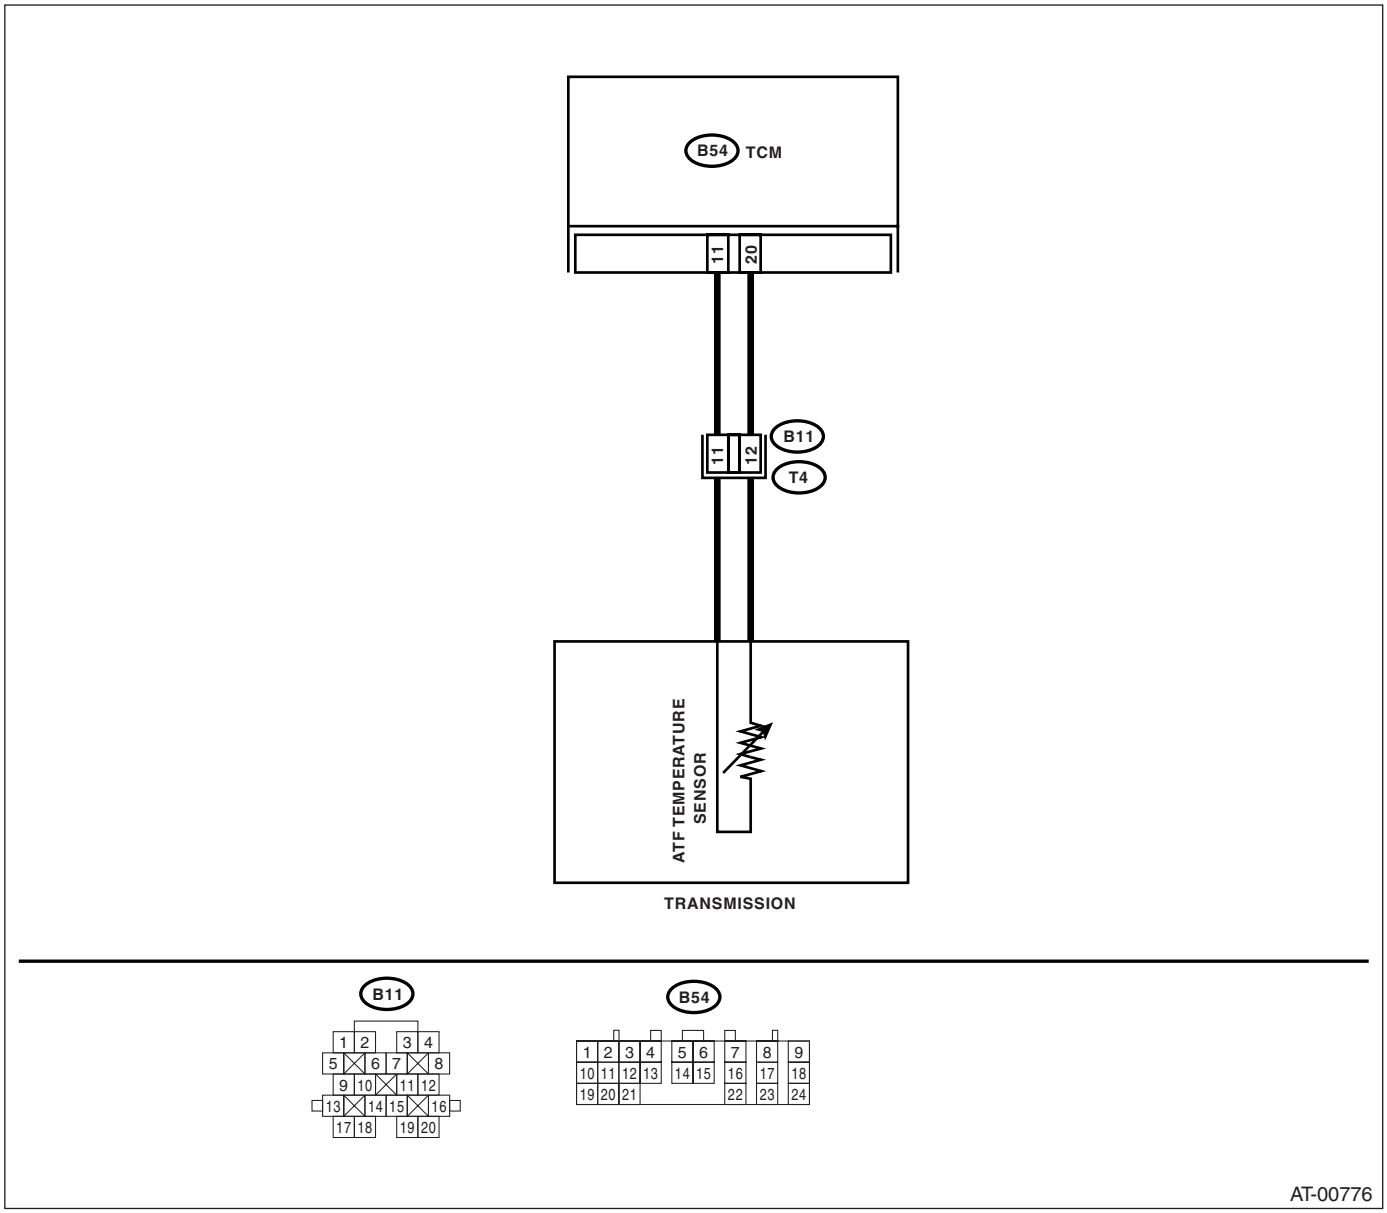

Step		Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ATF TEMPERATURE SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission and TCM. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 20 — (B11) No. 12:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ATF TEMPERATURE SENSOR.** Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 11 — (B11) No. 11:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and transmission connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ATF TEMPERATURE SENSOR.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 20 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the short circuit in harness between TCM and transmission connector.
4	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ATF TEMPERATURE SENSOR.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 11 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the short circuit in harness between TCM and transmission connector.
5	**CHECK ATF TEMPERATURE SENSOR.** 1)Turn the ignition switch to OFF. 2)Connect the connectors to transmission and TCM. 3)Turn the ignition switch to ON and start engine. 4)Warm-up the transmission until ATF temperature reaches to 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 5)Disconnect the connector from transmission. 6)Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 11 — No. 12:***	Is the resistance 275 — 375 Ω?	Go to step **6.**	Replace the ATF temperature sensor. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>
6	**CHECK ATF TEMPERATURE SENSOR.** 1)Turn the ignition switch to ON (engine OFF). 2)Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 11 — No. 12:***	Does the resistance value increase while ATF temperature decreases?	Go to step **7.**	Replace the ATF temperature sensor. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>
7	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **9.**	Go to step **8.**

	Step	Check	Yes	No
8	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connector to transmission. 2)Warm-up the transmission until ATF temperature is about 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 3)Measure the voltage between TCM connector terminal. ***Connector & terminal*** ***(B54) No. 11 (+) — No. 20 (–):***	Is the voltage 0.4 — 0.9 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. Temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in ATF temperature sensor and transmission connector.	Go to step **10.**
9	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connector to transmission. 2)Turn the ignition switch to ON (engine OFF).	Does the ATF temperature gradually decrease?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. Temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in ATF temperature sensor and transmission connector.	Go to step **10.**
10	**CHECK POOR CONTACT.**	Is there poor contact in ATF temperature sensor circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

D: DTC 31 THROTTLE POSITION SENSOR

DIAGNOSIS:

The input signal circuit of throttle position sensor is open or shorted.

TROUBLE SYMPTOM:

Shift point too high or too low; excessive shift shock; excessive tight corner “braking”.

WIRING DIAGRAM:

SOHC MODEL

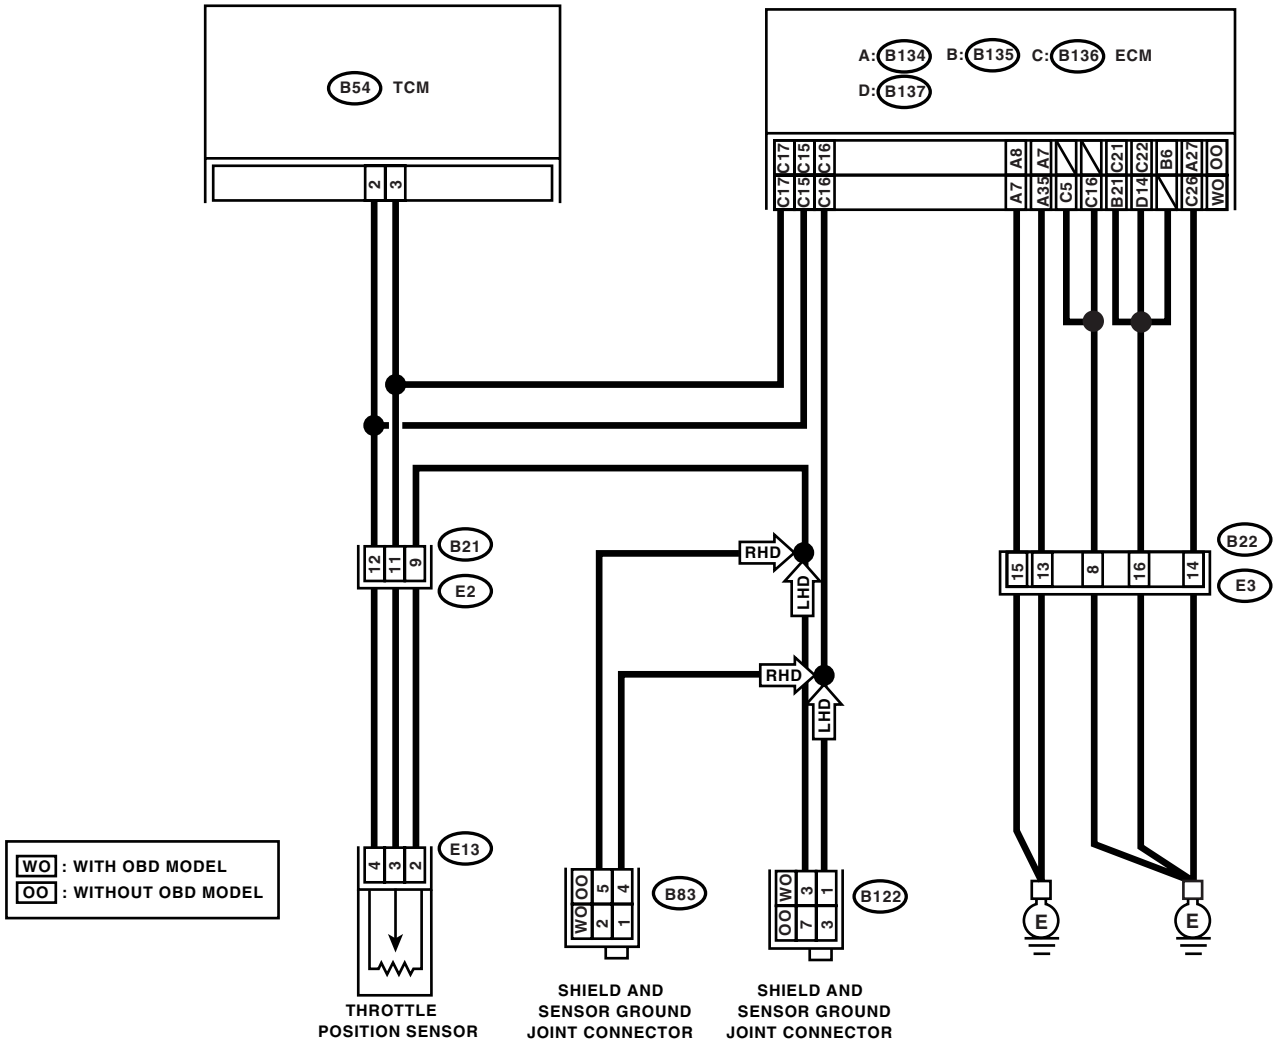

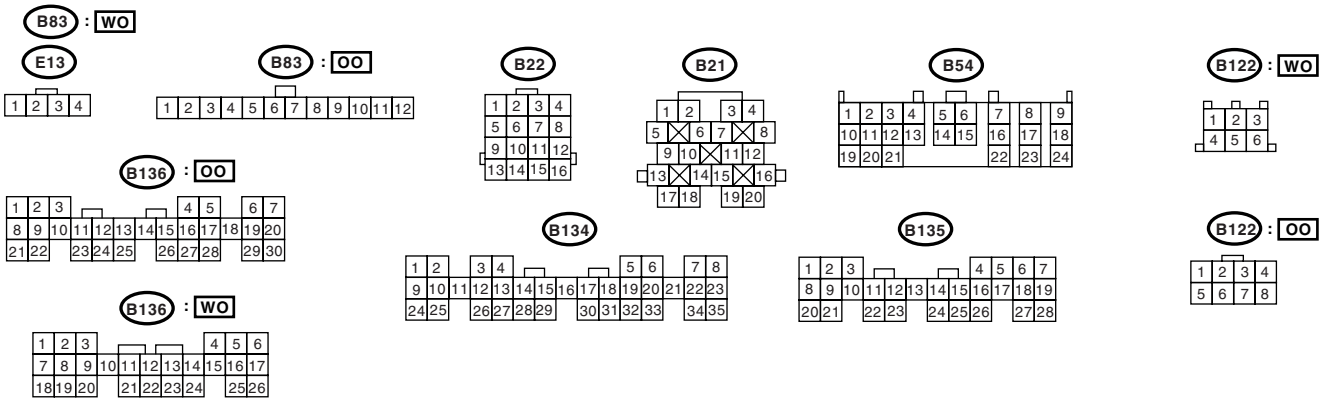

AT-01142

DOHC TURBO MODEL

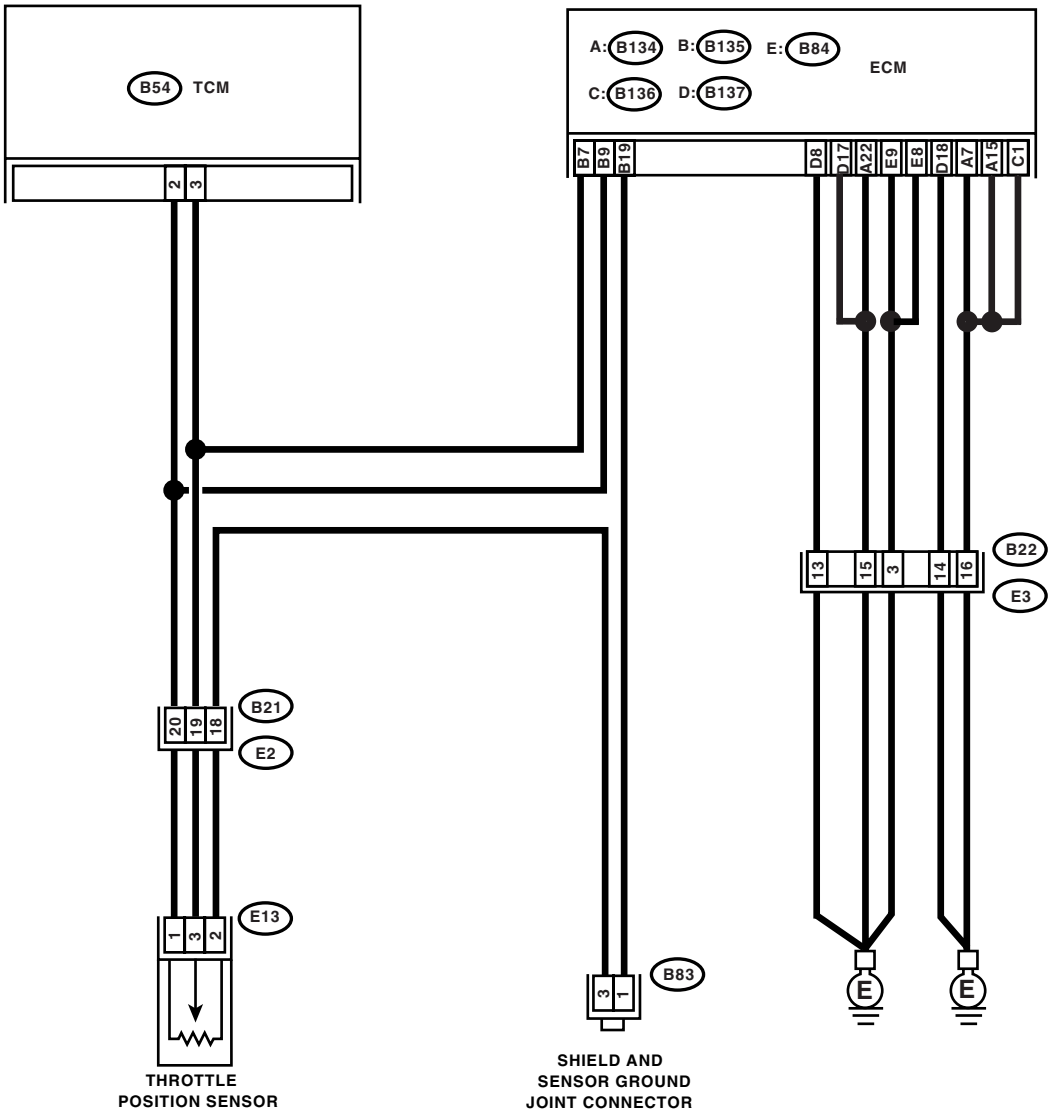

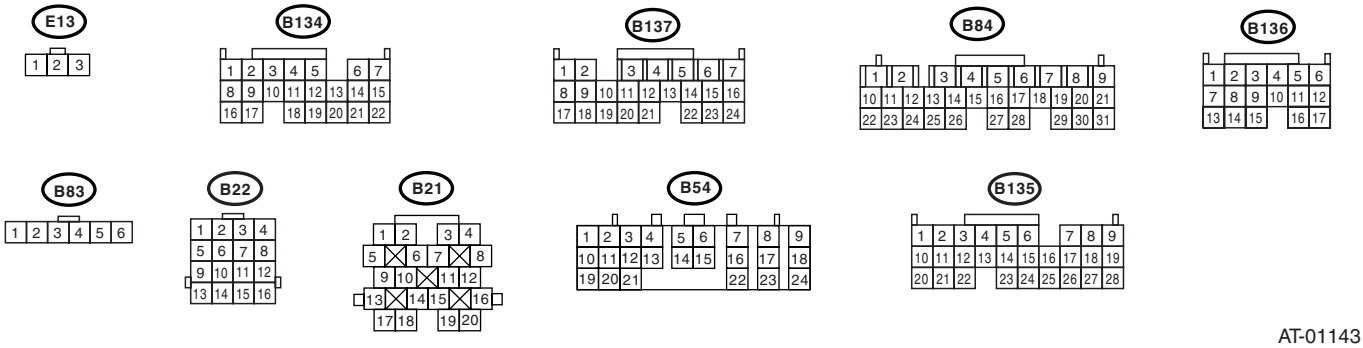

AT-01143

	Step	Check	Yes	No
1	**CHECK ENGINE GROUND TERMINALS.**	Have engine ground terminals been tightened?	Go to step **2.**	Tighten the engine ground terminals.
2	**CHECK GROUND CIRCUIT OF ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM. 3)Measure the resistance of harness between ECM and engine ground. ***Connector & terminal*** ***SOHC MODEL WITH OBD*** ***(B134) No. 7 — Engine ground:*** ***(B134) No. 35 — Engine ground:*** ***(B134) No. 7 — Engine ground:*** ***(B135) No. 21 — Engine ground:*** ***(B136) No. 5 — Engine ground:*** ***(B136) No. 16 — Engine ground:*** ***(B137) No. 14 — Engine ground:*** ***SOHC MODEL WITHOUT OBD*** ***(B134) No. 27 — Engine ground:*** ***(B134) No. 8 — Engine ground:*** ***(B134) No. 7 — Engine ground:*** ***(B136) No. 21 — Engine ground:*** ***(B136) No. 22 — Engine ground:*** ***(B135) No. 6 — Engine ground: (RHD MODEL)*** ***DOHC TURBO MODEL*** ***(B134) No. 7 — Engine ground:*** ***(B134) No. 15 — Engine ground:*** ***(B134) No. 22 — Engine ground:*** ***(B137) No. 8 — Engine ground:*** ***(B137) No. 17 — Engine ground:*** ***(B137) No. 18 — Engine ground:*** ***(B84) No. 8 — Engine ground:*** ***(B84) No. 9 — Engine ground:*** ***(B136) No. 1 — Engine ground:***	Is the resistance less than 5 Ω?	Go to step **3.**	Repair the open circuit in harness between ECM connector and engine grounding terminal.
3	**CHECK THROTTLE POSITION SENSOR.** 1)Disconnect the connector from throttle position sensor. 2)Measure the resistance between throttle position sensor connector receptacle's terminals. ***Terminals*** ***SOHC MODEL*** ***No. 4 — No. 2:*** ***DOHC TURBO MODEL*** ***No. 1 — No. 2:***	Is the resistance 3.0 — 4.2 kΩ?	Go to step **4.**	Replace the throttle position sensor.
4	**CHECK THROTTLE POSITION SENSOR.** Measure the resistance between throttle position sensor connector receptacle's terminals. ***Terminals*** ***No. 2 — No. 3:***	Is the resistance 0.35 — 0.5 kΩ?	Go to step **5.**	Replace the throttle position sensor.
5	**CHECK HARNESS CONNECTOR BETWEEN TCM AND THROTTLE POSITION SENSOR.** 1)Disconnect the connector from TCM. 2)Measure the resistance of harness between TCM and throttle position sensor connector. ***Connector & terminal*** ***(B55) No. 3 — (E13) No. 3:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between TCM and throttle position sensor connector, and poor contact in coupling connector.

	Step	Check	Yes	No
6	**CHECK HARNESS CONNECTOR BETWEEN TCM AND THROTTLE POSITION SENSOR.** Measure the resistance of harness between TCM and throttle position sensor connector. ***Connector & terminal*** ***SOHC MODEL*** ***(B54) No. 2 — (E13) No. 4:*** ***DOHC TURBO MODEL*** ***(B54) No. 2 — (E13) No. 1:***	Is the resistance less than 1 Ω?	Go to step **7.**	Repair the open circuit in harness between TCM and throttle position sensor connector, and poor contact in coupling connector.
7	**CHECK HARNESS CONNECTOR BETWEEN TCM AND THROTTLE POSITION SENSOR.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 3 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair the short circuit in harness between TCM and throttle position sensor connector.
8	**CHECK HARNESS CONNECTOR BETWEEN TCM AND THROTTLE POSITION SENSOR.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the short circuit in harness between TCM and throttle position sensor connector.
9	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** Measure the resistance of harness between TCM and ECM connector. ***Connector & terminal*** ***SOHC MODEL*** ***(B54) No. 3 — (B136) No. 17:*** ***DOHC TURBO MODEL*** ***(B54) No. 3 — (B135) No. 7:***	Is the resistance less than 1 Ω?	Go to step **10.**	Repair the open circuit in harness between TCM and ECM connector.
10	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** Measure the resistance of harness between TCM and ECM connector. ***Connector & terminal*** ***SOHC MODEL*** ***(B54) No. 2 — (B136) No. 15:*** ***DOHC TURBO MODEL*** ***(B54) No. 2 — (B135) No. 9:***	Is the resistance less than 1 Ω?	Go to step **11.**	Repair the open circuit in harness between TCM and ECM connector.
11	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **14.**	Go to step **12.**
12	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM, throttle position sensor and ECM. 2)Turn the ignition switch to ON (engine OFF). 3)Close the throttle completely. 4)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 3 (+) — Chassis ground (–):***	Is the voltage 0.2 — 1.0 V?	Go to step **13.**	Go to step **18.**
13	**CHECK INPUT SIGNAL FOR TCM.** 1)Open the throttle completely and hold it. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 3 (+) — Chassis ground (–):***	Is the voltage 4.2 — 4.7 V?	Go to step **16.**	Go to step **18.**

	Step	Check	Yes	No
14	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM, throttle position sensor and ECM. 2)Connect the Subaru Select Monitor to data link connector. 3)Turn the ignition switch to ON (engine OFF). 4)Turn the Subaru Select Monitor switch to ON. 5)Throttle fully closed. 6)Read the data of throttle position sensor using Subaru Select Monitor. •Throttle position sensor input signal is indicated.	Is the value voltage 0.2 — 1.0 V?	Go to step **15.**	Go to step **18.**
15	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** Throttle fully open. NOTE: Must be changed correspondingly with the accelerator pedal operation (from “released” to “depressed” position).	Is the value voltage 4.2 — 4.7 V?	Go to step **18.**	Go to step **17.**
16	**CHECK INPUT SIGNAL FOR TCM (THROTTLE POSITION SENSOR POWER SUPPLY).** Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 2 (+) — Chassis ground (−):***	Is the voltage 4.8 — 5.3 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in throttle position sensor circuit.	Go to step **18.**
17	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR (THROTTLE POSITION SENSOR POWER SUPPLY).** Read the data of throttle position sensor power supply using Subaru Select Monitor. •Throttle position sensor power supply voltage is indicated.	Is the value voltage 4.8 — 5.3 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in throttle position sensor circuit.	Go to step **18.**
18	**CHECK POOR CONTACT.**	Is there poor contact in throttle position sensor circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

E: DTC 33 FRONT VEHICLE SPEED SENSOR

DIAGNOSIS:

- The vehicle speed signal is abnormal.
- The circuit in combination meter is faulty.
- The harness connector between TCM and vehicle speed sensor is in short or open.

TROUBLE SYMPTOM:

- Erroneous idling.
- Engine stalls.
- Poor driving performance.

WIRING DIAGRAM:

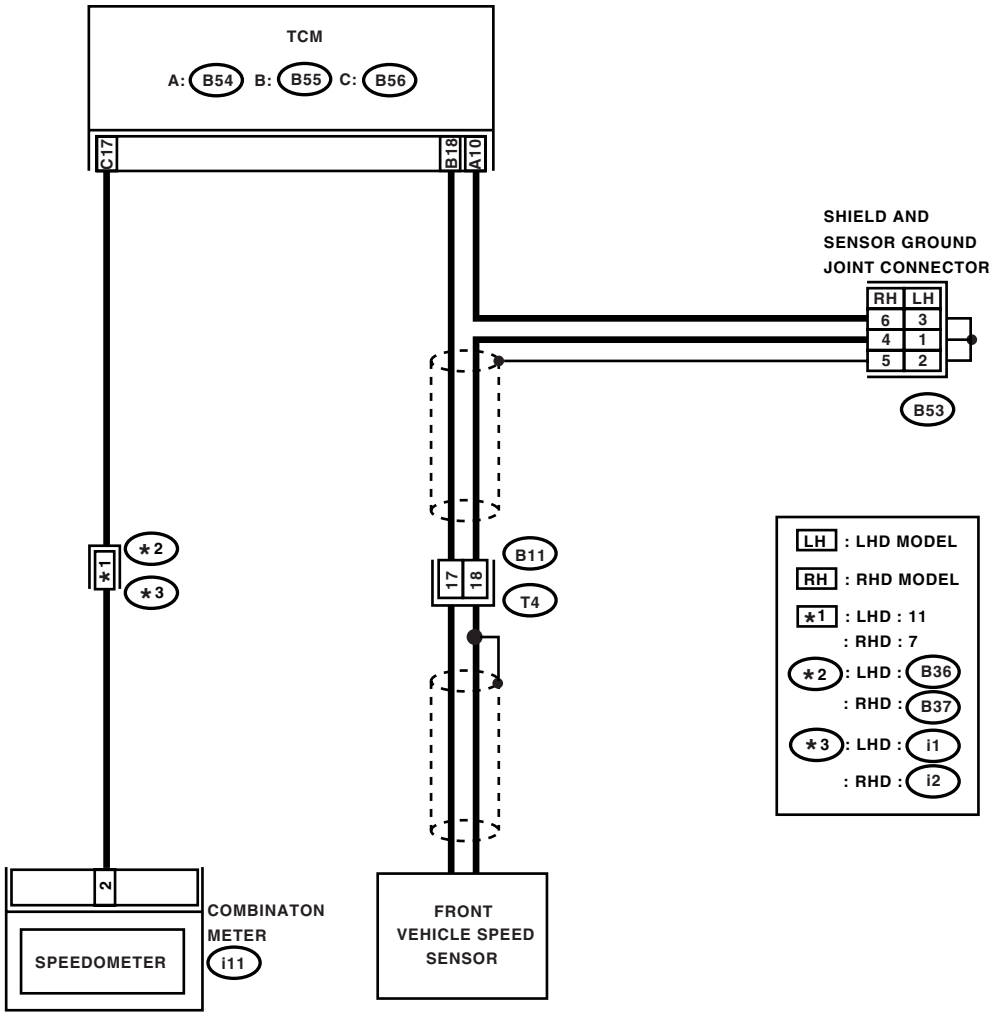

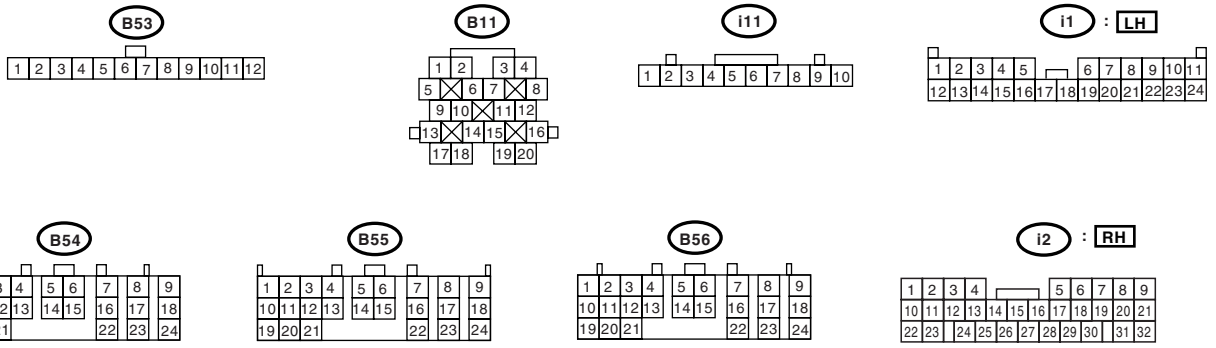

AT-01144

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B55) No. 18 — (B11) No. 17:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 10 — (B11) No. 18:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and transmission connector, and poor contact in coupling connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 10 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the short circuit in harness between TCM and transmission connector.
4	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B55) No. 18 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the short circuit in harness between TCM and transmission connector, and poor contact in coupling connector.
5	**CHECK FRONT VEHICLE SPEED SENSOR.** Measure the resistance between transmission connector receptacle's terminals. ***Connector & terminal*** ***(T4) No. 17 — No. 18:***	Is the resistance 450 — 650 Ω?	Go to step **6.**	Replace the front vehicle speed sensor. <Ref. to 4AT-52, Front Vehicle Speed Sensor.>
6	**PREPARE OSCILLOSCOPE.**	Do you have an oscilloscope?	Go to step **9.**	Go to step **7.**
7	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **10.**	Go to step **8.**
8	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect all connectors. 2)Lift-up or raise the vehicle and place safety stands. NOTE: On AWD models, raise all wheels off floor. 3)Start the engine and set vehicle in 20 km/h (12 MPH) condition. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 4)Measure the voltage between TCM connector terminals. ***Connector & terminal*** ***(B55) No. 18 (+) — (B54) No. 10 (−):***	Is the voltage more than AC 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact or harness may be the cause. Repair the harness or connector in the front vehicle speed sensor circuit.	Go to step **11.**

	Step	Check	Yes	No
9	**CHECK FRONT VEHICLE SPEED SENSOR USING OSCILLOSCOPE.** 1)Connect all connectors. 2)Lift-up the vehicle and place safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Set the oscilloscope to TCM connector terminals. ***Connector & terminal*** ***Positive probe; (B55) No. 18*** ***Earth lead; (B54) No. 10*** 4)Start the engine, and drive the wheels slowly. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunctions. When AT control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system. <Ref. to ABS-22, Clear Memory Mode.> 5)Measure the signal voltage indicated on oscilloscope.	Is the voltage more than AC 4 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact or harness may be the cause. Repair the harness or connector in front vehicle speed sensor circuit.	Go to step **11.**
10	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect all connectors. 2)Connect the Subaru Select Monitor to data link connector. 3)Lift-up or raise the vehicle and place safety stands. NOTE: On AWD models, raise all wheels off floor. 4)Turn the ignition switch to ON and turn Subaru Select Monitor switch to ON. 5)Start the engine. 6)Read the data of vehicle speed using Subaru Select Monitor. •Compare the speedometer with Subaru Select Monitor indications. •Vehicle speed is indicated in “km/h” or “MPH”. 7)Slowly increase the vehicle speed to 60 km/h or 37 MPH. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.>	Does the speedometer indication increase as Subaru Select Monitor data increases?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor connector or harness may be the cause. Repair the harness or connector in front vehicle speed sensor circuit.	Go to step **11.**
11	**CHECK POOR CONTACT.**	Is there poor contact in front vehicle speed sensor circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

F: DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR

DIAGNOSIS:

The input signal circuit of TCM is open or shorted.

TROUBLE SYMPTOM:

Excessive shift shock.

WIRING DIAGRAM:

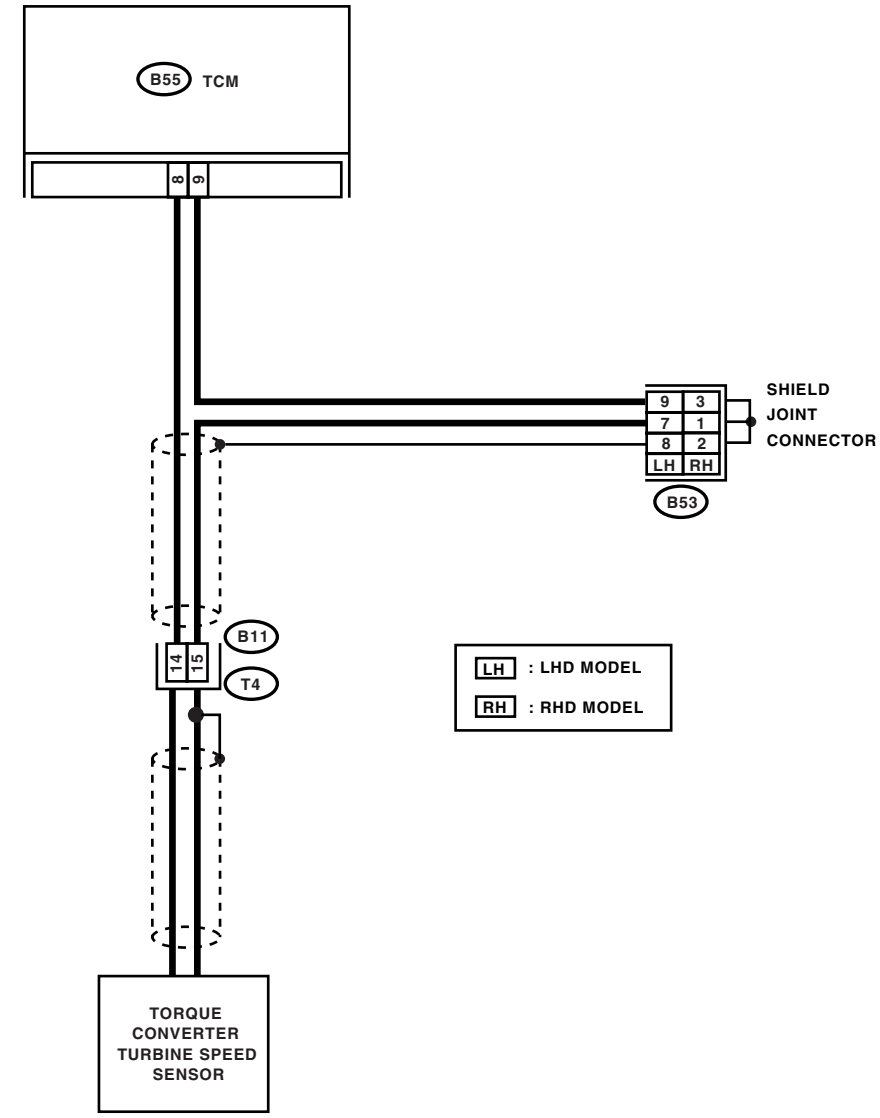

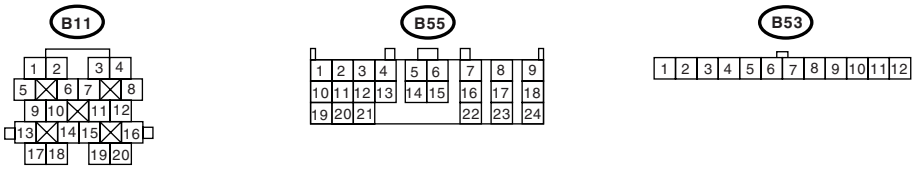

AT-01145

	Step	Check	Yes	No
1	**CHECK TORQUE CONVERTER TURBINE SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission. 3)Measure the resistance between transmission connector receptacle's terminals. ***Connector & terminal*** ***(T4) No. 14 — No. 15:***	Is the resistance 450 — 650 Ω?	Go to step **2.**	Replace the turbine speed sensor. <Ref. to 4AT-57, Torque Converter Turbine Speed Sensor.>
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Disconnect the connector from TCM. 2)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B55) No. 8 — (B11) No. 14:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and transmission connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B55) No. 9 — (B11) No. 15:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between TCM and transmission connector, and poor contact in coupling connector.
4	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 9 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the short circuit in harness between TCM and transmission connector.
5	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the short circuit in harness between TCM and transmission connector, and poor contact in coupling connector.
6	**PREPARE OSCILLOSCOPE.**	Do you have an oscilloscope?	Go to step **10.**	Go to step **7.**
7	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **9.**	Go to step **8.**
8	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and transmission. 2)Start the engine and move select lever to “P” or “N” range. 3)Measure the voltage between TCM connector terminals. ***Connector & terminal*** ***(B55) No. 8 (+) — No. 9 (−):***	Is the voltage more than AC 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **11.**

	Step	Check	Yes	No
9	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and transmission. 2)Connect the Subaru Select Monitor to data link connector. 3)Turn the ignition switch to ON and turn Subaru Select Monitor switch to ON. 4)Start the engine. 5)Move the select lever to “P” or “N” range. 6)Read the data of turbine speed using Subaru Select Monitor. •Compare the tachometer with Subaru Select Monitor indications.	Is the revolution value same as the tachometer reading shown on the combination meter?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **11.**
10	**CHECK INPUT SIGNAL FOR TCM USING OSCILLOSCOPE.** 1)Connect the connectors to TCM and transmission. 2)Set the oscilloscope to TCM connector terminals. ***Connector & terminal*** ***Positive probe; (B55) No. 8*** ***Earth lead; (B55) No. 9*** 3)Start the engine and move select lever to “P” or “N” range.	Is the signal voltage more than AC 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **11.**
11	**CHECK POOR CONTACT.**	Is there poor contact in torque converter turbine speed sensor circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

G: DTC 38 TORQUE CONTROL SIGNAL

DIAGNOSIS:

- The signal circuit is open or shorted.

TROUBLE SYMPTOM:

Excessive shift shock.

WIRING DIAGRAM:

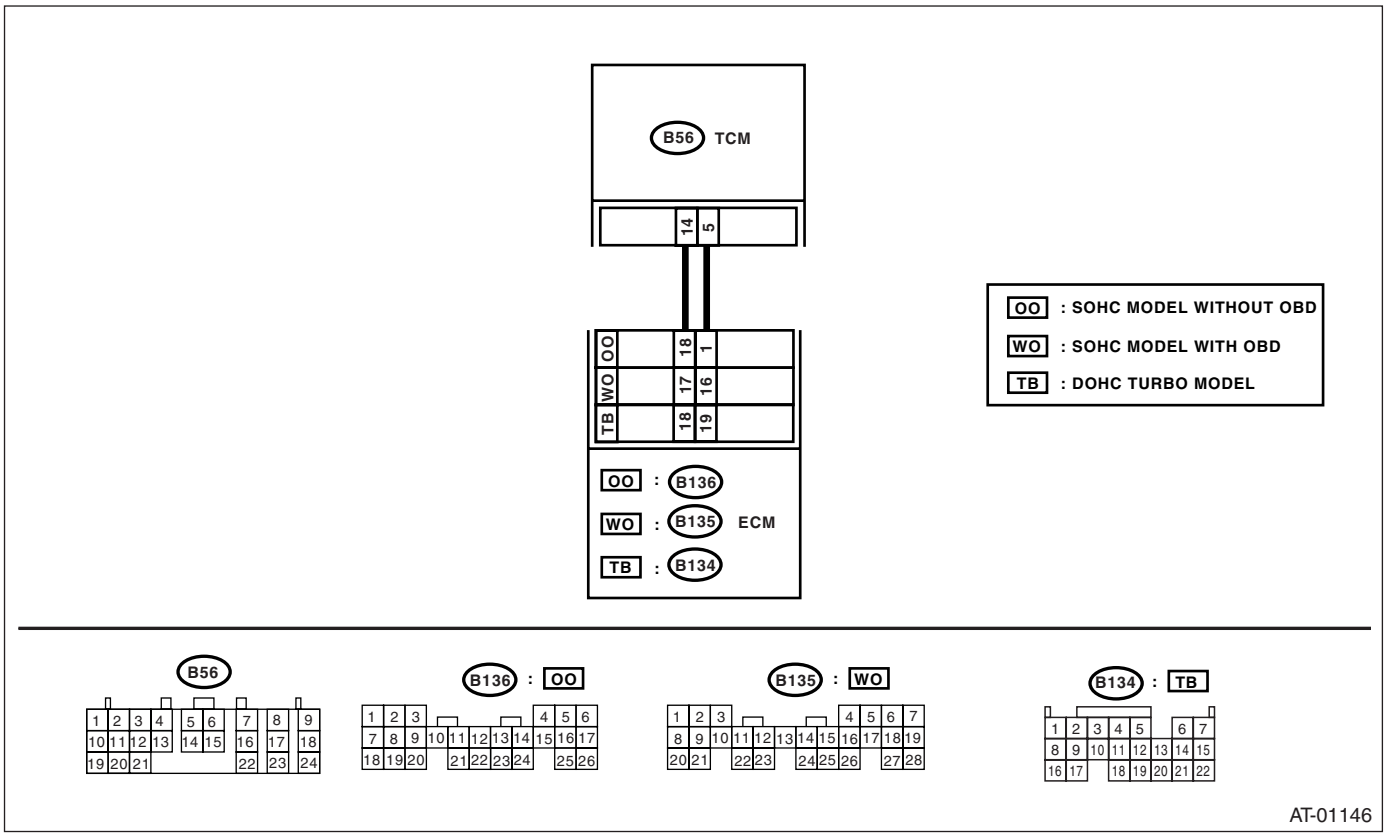

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and ECM. 3)Measure the resistance of harness between TCM and ECM connector. ***Connector & terminal*** ***SOHC MODEL WITH OBD*** ***(B56) No. 14 — (B136) No. 18:*** ***(B56) No. 5 — (B136) No. 1:*** ***SOHC MODEL WITHOUT OBD*** ***(B56) No. 14 — (B135) No. 17:*** ***(B56) No. 5 — (B135) No. 16:*** ***DOHC TURBO MODEL*** ***(B56) No. 14 — (B134) No. 18:*** ***(B56) No. 5 — (B134) No. 19:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and ECM connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 14 — Chassis ground:*** ***(B56) No. 5 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and ECM connector.

	Step	Check	Yes	No
3	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and ECM. 2)Turn the ignition switch to ON (engine OFF). 3)Measure the voltage between TCM connector terminals. ***Connector & terminal*** ***(B56) No. 14 (+) — Chassis ground (−):*** ***(B56) No. 5 (+) — Chassis ground (−):***	Is the voltage more than 4.8 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and ECM.	Go to step **4.**
4	**CHECK POOR CONTACT.**	Is there poor contact in torque control signal circuit?	Repair the poor contact.	Go to step **5.**
5	**CHECK GROUND LINE BETWEEN TRANSMISSION AND BODY.** Check installing condition of the ground line in transmission and body.	Is there any dirt or rust at the ground line installing point?	Remove dirt and rust.	Go to step **6.**
6	**CHECK GROUND LINE BETWEEN TRANSMISSION AND BODY.** Check installing condition of the ground line in transmission and body. ***Tightening torque:*** ***10 — 16 N·m (1.0 — 1.6 kgf-m, 7.2 — 11.6 ft-lb)***	Is the tightening torque value within specification?	Go to step **7.**	Tighten to the specified torque.
7	**CHECK GROUND LINE INSIDE TRANSMISSION.** 1)Drain the ATF and remove oil pan. 2)Check the tightening torque value of ground line installing bolt. ***Tightening torque:*** ***7 — 9 N·m (0.7 — 0.9 kgf-m, 5.1 — 6.5 ft-lb)***	Is the tightening torque value within specification?	Go to step **9.**	Tighten to the specified torque.
8	**CHECK GROUND CIRCUIT OF ECM.** <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble?	Repair the ground terminal and/or ground circuit of ECM.	Go to step **9.**
9	**RECHECK OUTPUT SIGNAL EMITTED FROM TCM.** Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 14 (+) — Chassis ground (−):*** ***(B56) No. 5 (+) — Chassis ground (−):***	Is each voltage more than 4 V?	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>	Replace the ECM.

H: DTC 45 INTAKE MANIFOLD PRESSURE SIGNAL (NON-TURBO MODEL)

DIAGNOSIS:
The input signal circuit of TCM from ECM is open or shorted.
TROUBLE SYMPTOM:
Excessive shift shock.
WIRING DIAGRAM:

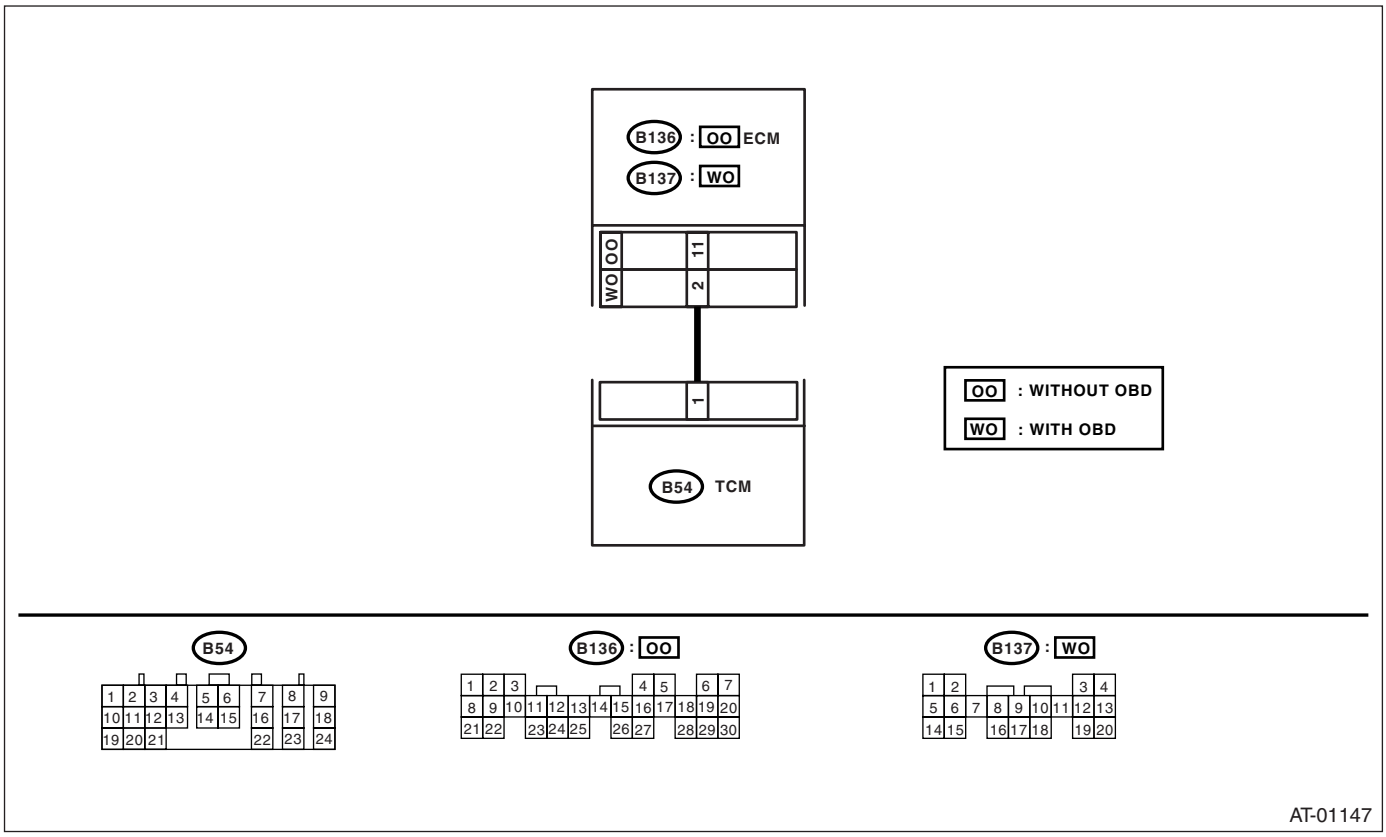

Step		Check	Yes	No
1	**CHECK ENGINE GROUND TERMINALS AND GROUND CIRCUIT OF ECM** <Ref. to 4AT-48, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Is there any trouble?	Repair the ground terminal and/or ground circuit of ECM.	Go to step **2.**
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and ECM. 3)Measure the resistance of harness between TCM and ECM connector. ***Connector & terminal*** ***SOHC WITHOUT OBD MODEL*** ***(B54) No. 1 — (B136) No. 11:*** ***SOHC WITH OBD MODEL*** ***(B54) No. 1 — (B137) No. 2:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and ECM connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND ECM.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the short circuit in harness between TCM and ECM connector.

	Step	Check	Yes	No
4	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **6.**	Go to step **5.**
5	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and ECM. 2)Start the engine, and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 3)Idle the engine. 4)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 1 (+) — Chassis ground (−):***	Is the voltage 0.4 — 1.6 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and ECM.	Go to step **7.**
6	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and ECM. 2)Connect the Subaru Select Monitor to data link connector. 3)Start the engine, and turn Subaru Select Monitor switch to ON. 4)Warm-up the engine until engine coolant temperature is above 80°C (176°F). 5)Idle the engine. 6)Read the data of intake manifold pressure signal using Subaru Select Monitor. •Display shows the intake manifold pressure signal value sent from ECM.	Is the value voltage 0.4 — 1.6 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and ECM.	Go to step **7.**
7	**CHECK POOR CONTACT.**	Is there poor contact in intake manifold pressure signal circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

I: DTC 71 SHIFT SOLENOID 1

DIAGNOSIS:
The output signal circuit of shift solenoid 1 is open or shorted.
TROUBLE SYMPTOM:
Does not shift.
WIRING DIAGRAM:

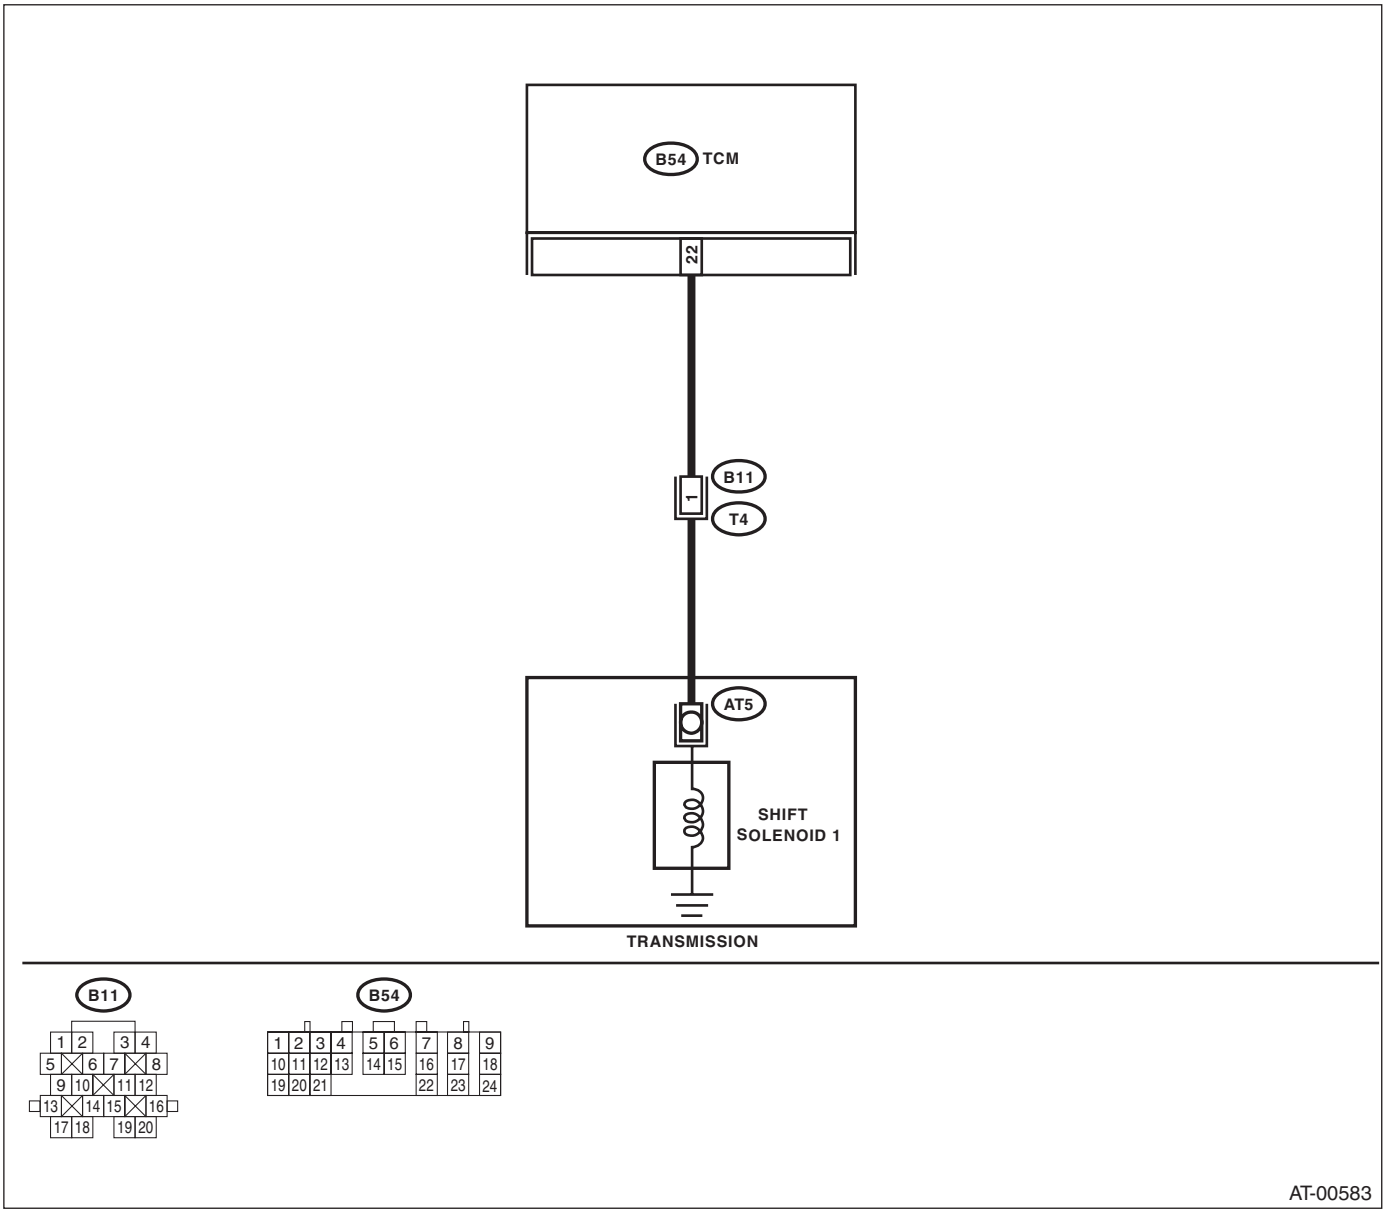

Step		Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and shift solenoid 1 connector. ***Connector & terminal*** ***(B54) No. 22 — (B11) No. 1:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK SHIFT SOLENOID 1.** Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 1 — No. 16:***	Is the resistance 10 — 16 Ω?	Go to step **4.**	Go to step **7.**
4	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Turn the ignition switch to ON (engine OFF). 3)Move the select lever to “D” range. 4)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 22 (+) — Chassis ground (−):***	Is the voltage more than 9 V?	Go to step **5.**	Go to step **6.**
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Turn the HOLD mode switch to ON. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 22 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in TCM.	Go to step **6.**
6	**CHECK POOR CONTACT.**	Is there poor contact in shift solenoid 1 circuit?	Repair poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
7	**CHECK SHIFT SOLENOID 1 (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Lift-up or raise the vehicle and support with safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 4)Remove the oil pan, and disconnect connector from shift solenoid 1. 5)Measure the resistance between shift solenoid 1 connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 10 — 16 Ω?	Go to step **8.**	Replace the shift solenoid 1. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>

Step		Check	Yes	No
8	**CHECK HARNESS CONNECTOR BETWEEN SHIFT SOLENOID 1 AND TRANSMISSION.** Measure the resistance of harness between shift solenoid 1 and transmission connector. ***Connector & terminal*** ***(T4) No. 1 — (AT5) No. 1:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the open circuit in harness between shift solenoid 1 and transmission connector.
9	**CHECK HARNESS CONNECTOR BETWEEN SHIFT SOLENOID 1 AND TRANSMISSION.** Measure the resistance of harness between shift solenoid 1 connector and transmission ground. ***Connector & terminal*** ***(T4) No. 1 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in shift solenoid 1 and transmission.	Repair the short circuit harness between shift solenoid 1 and transmission connector.

J: DTC 72 SHIFT SOLENOID 2

DIAGNOSIS:

The output signal circuit of shift solenoid 2 is open or shorted.

TROUBLE SYMPTOM:

Does not shift.

WIRING DIAGRAM:

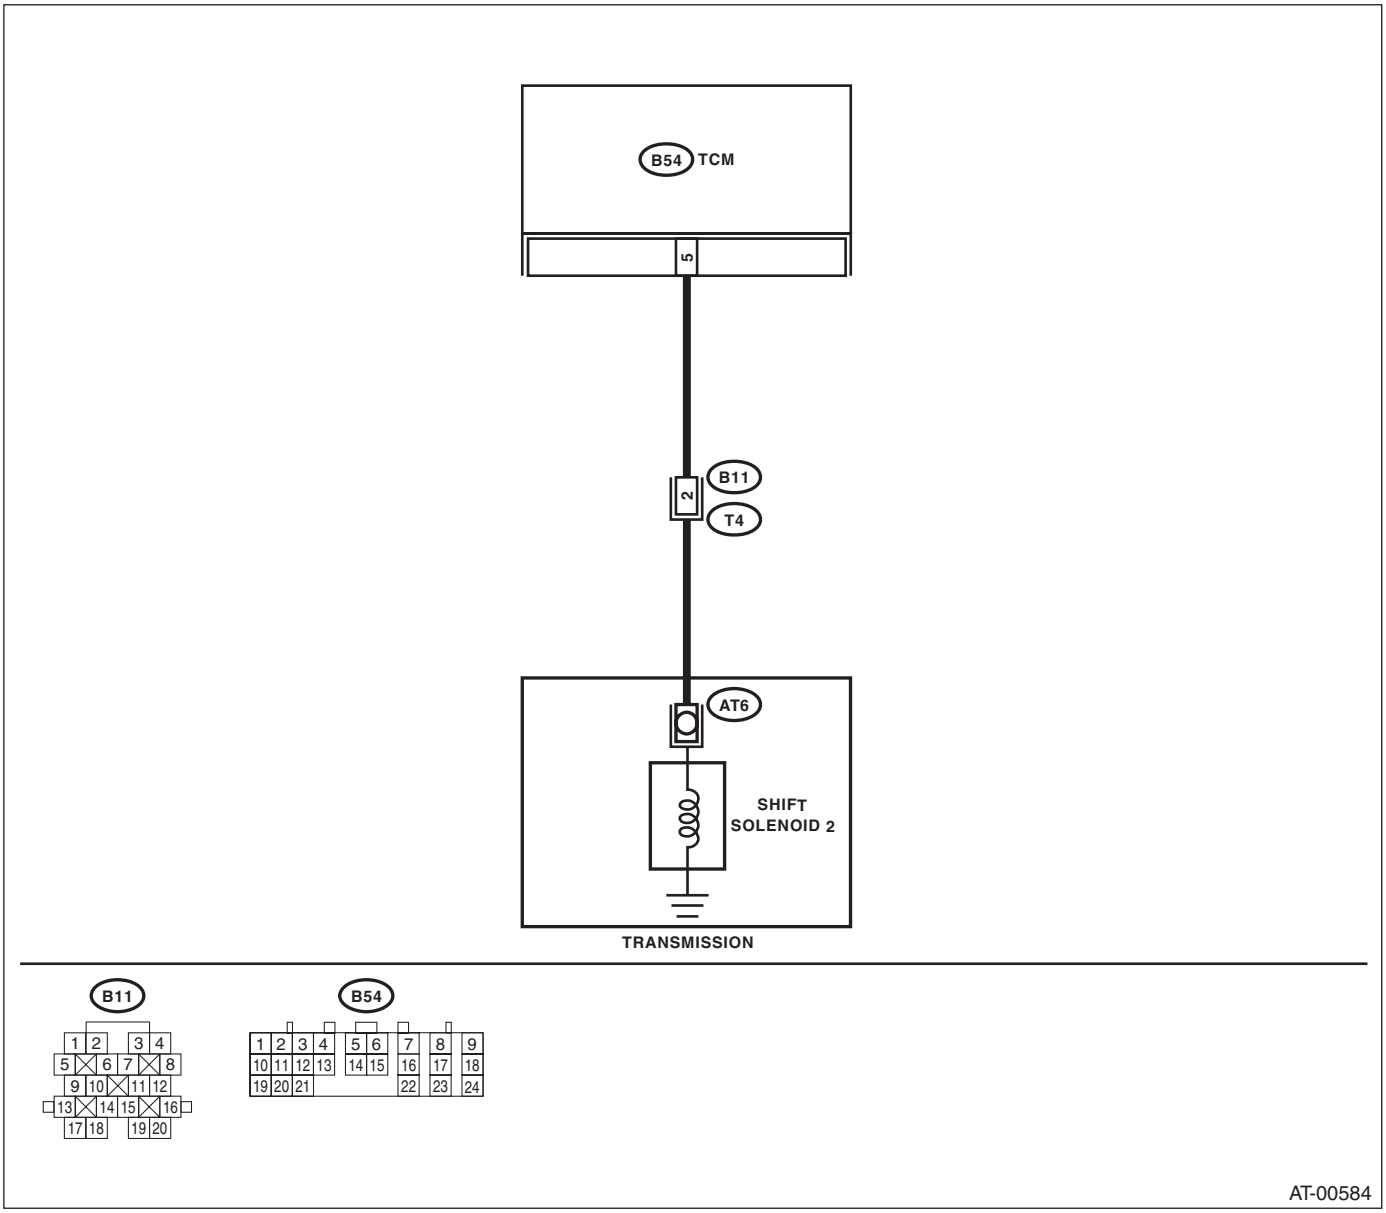

Step		Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and shift solenoid 2 connector. ***Connector & terminal*** ***(B54) No. 5 — (B11) No. 2:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM connector and transmission ground. ***Connector & terminal*** ***(B54) No. 5 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK SHIFT SOLENOID 2.** Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 2 — No. 16:***	Is the resistance 10 — 16 Ω?	Go to step **4.**	Go to step **6.**
4	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Lift-up or raise the vehicle and support with safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 4)Move the selector lever to "D" range, and slowly increase vehicle speed to 50 km/h (31 MPH). NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 5)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 5 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **5.**
5	**CHECK POOR CONTACT.**	Is there poor contact in shift solenoid 2 circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
6	**CHECK SHIFT SOLENOID 2 (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 3)Remove the oil pan, and disconnect connector from shift solenoid 2. 4)Measure the resistance between shift solenoid 2 connector and transmission ground. ***Connector & terminal*** ***No. 1 — Transmission ground:***	Is the resistance 10 — 16 Ω?	Go to step **7.**	Replace the shift solenoid 2. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>

	Step	Check	Yes	No
7	**CHECK HARNESS CONNECTOR BETWEEN SHIFT SOLENOID 2 AND TRANSMISSION.** Measure the resistance of harness between shift solenoid 2 and transmission connector. ***Connector & terminal*** ***(AT6) No. 1 — (T4) No. 2:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between shift solenoid 2 and transmission connector.
8	**CHECK HARNESS CONNECTOR BETWEEN SHIFT SOLENOID 2 AND TRANSMISSION.** Measure the resistance of harness between shift solenoid 2 connector and transmission ground. ***Connector & terminal*** ***(T4) No. 2 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in shift solenoid 2 and transmission.	Repair the short circuit harness between shift solenoid 2 and transmission connector.

K: DTC 73 LOW CLUTCH TIMING SOLENOID

DIAGNOSIS:

The output signal circuit of low clutch timing solenoid is open or shorted.

TROUBLE SYMPTOM:

Excessive shift shock.

WIRING DIAGRAM:

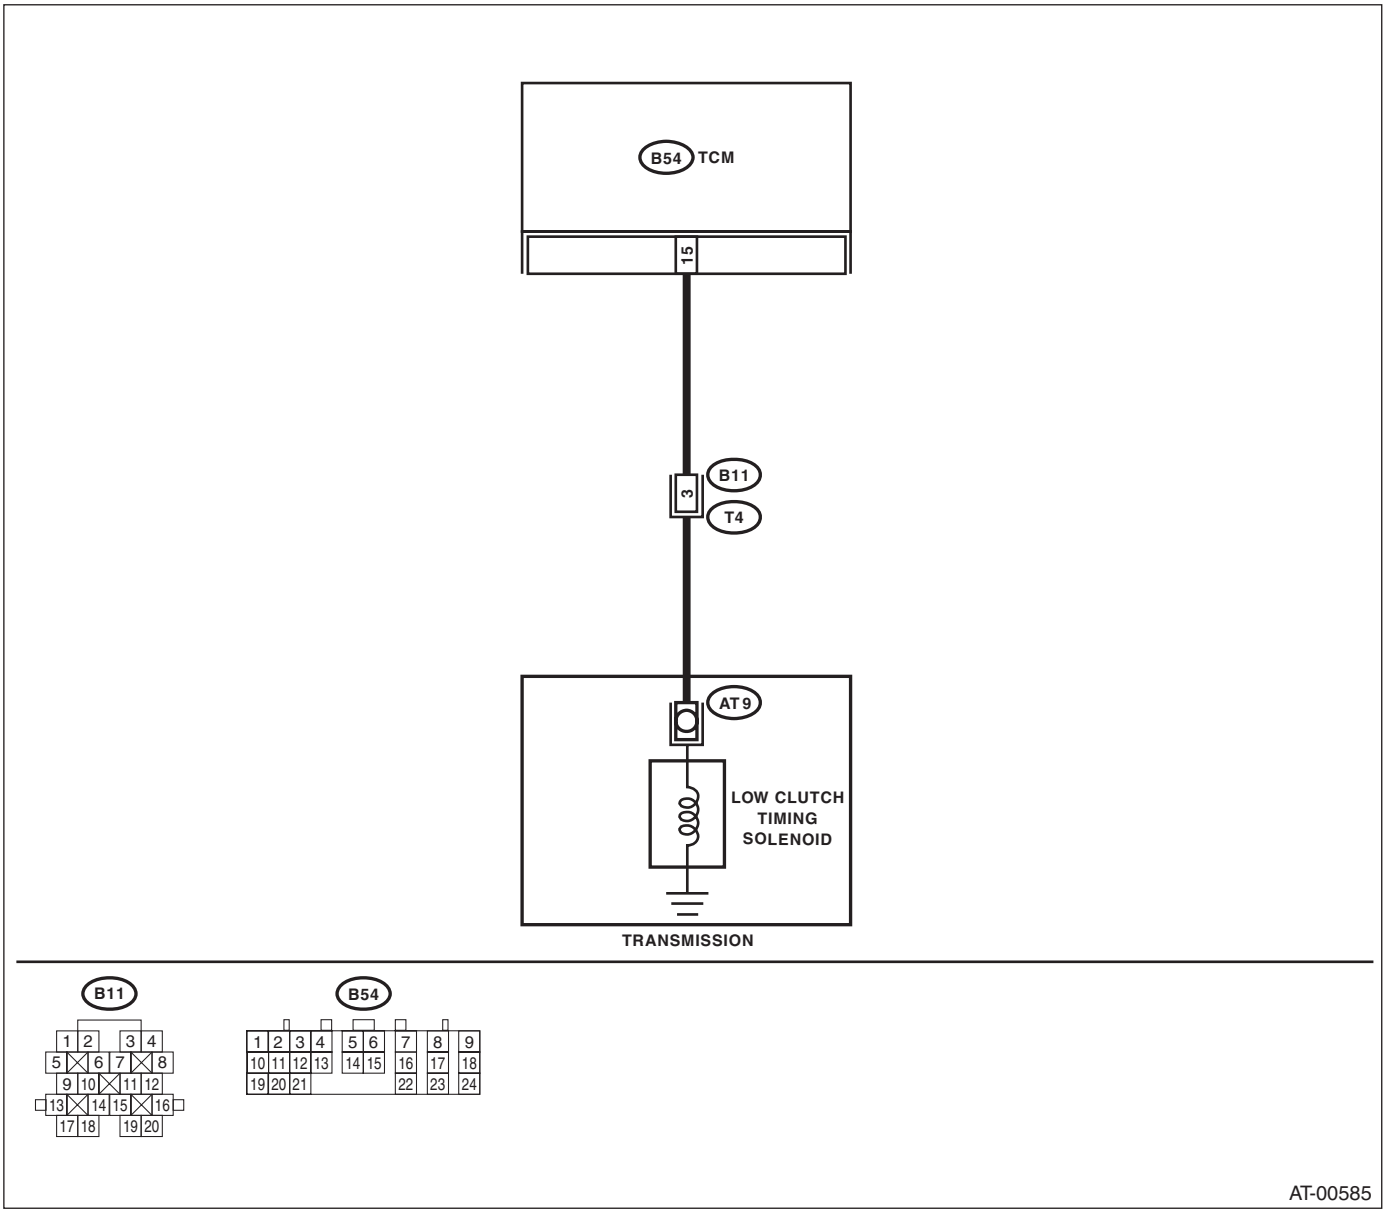

Step		Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 15 — (B11) No. 3:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM connector and transmission ground. ***Connector & terminal*** ***(B54) No. 15 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK LOW CLUTCH TIMING SOLENOID.** Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 3 — No. 16:***	Is the resistance 10 — 16 Ω?	Go to step **4.**	Go to step **7.**
4	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Turn the ignition switch to ON (engine OFF). 3)Move the select lever to "D" range. 4)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 15 (+) — Chassis ground (−):***	Is the voltage more than 9 V?	Go to step **5.**	Go to step **6.**
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Turn the HOLD mode switch to ON. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 15 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in TCM and transmission.	Go to step **6.**
6	**CHECK POOR CONTACT.**	Is there poor contact in low clutch timing solenoid circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
7	**CHECK LOW CLUTCH TIMING SOLENOID (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Lift-up or raise the vehicle and support with safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 4)Remove the oil pan, and disconnect connector from low clutch timing solenoid. 5)Measure the resistance between low clutch timing solenoid connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 10 — 16 Ω?	Go to step **8.**	Replace the low clutch timing solenoid. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>

Step		Check	Yes	No
8	**CHECK HARNESS CONNECTOR BETWEEN LOW CLUTCH TIMING SOLENOID AND TRANSMISSION.** Measure the resistance of harness between low clutch timing solenoid and transmission connector. ***Connector & terminal*** ***(AT9) No. 1 — (T4) No. 3:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the open circuit in harness between low clutch timing solenoid and transmission connector.
9	**CHECK HARNESS CONNECTOR BETWEEN LOW CLUTCH TIMING SOLENOID AND TRANSMISSION.** Measure the resistance of harness between low clutch timing solenoid connector and transmission ground. ***Connector & terminal*** ***(T4) No. 3 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in low clutch timing solenoid and transmission.	Repair the short circuit harness between low clutch timing solenoid and transmission connector.

L: DTC 74 2-4 BRAKE TIMING SOLENOID

DIAGNOSIS:
The output signal circuit of 2-4 brake timing solenoid is open or shorted.
TROUBLE SYMPTOM:
Excessive shift shock.
WIRING DIAGRAM:

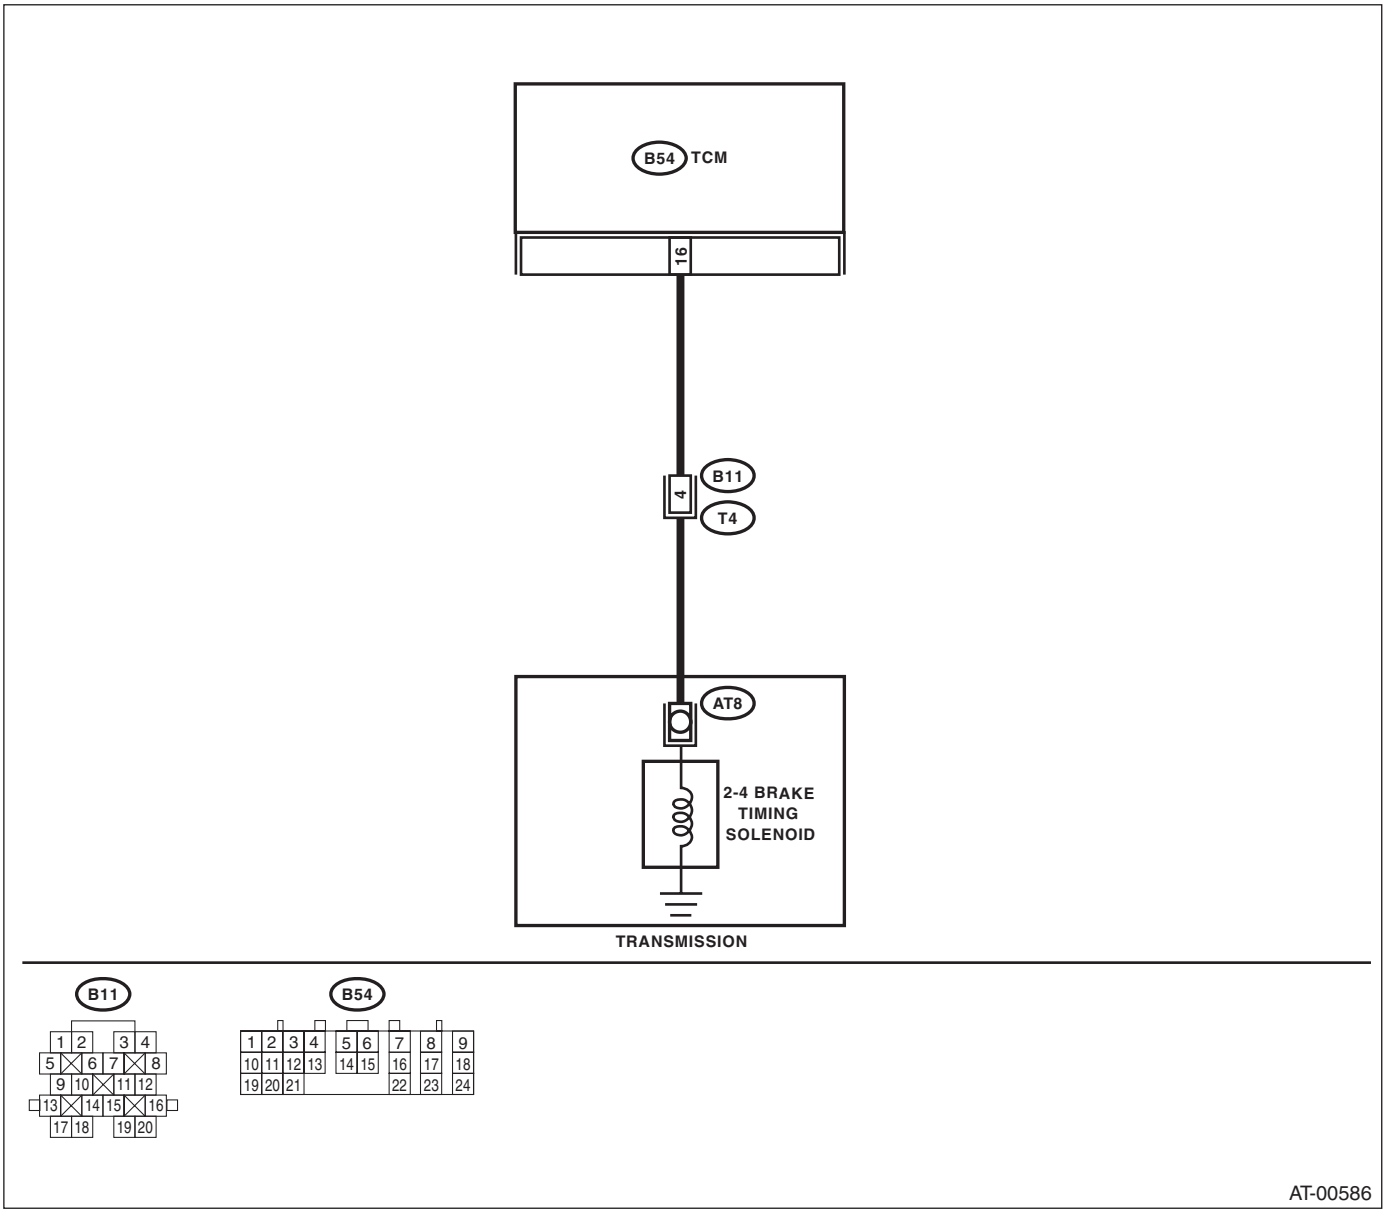

Step		Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 16 — (B11) No. 4:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM connector and transmission ground. ***Connector & terminal*** ***(B54) No. 16 — Transmission ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK 2-4 BRAKE TIMING SOLENOID.** Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 4 — No. 16:***	Is the resistance 10 — 16 Ω?	Go to step **4.**	Go to step **7.**
4	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Lift-up or raise the vehicle and support with safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 4)Move the selector lever to "1" range, and slowly increase vehicle speed to 10 km/h (6 MPH). NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 5)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 16 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **5.**	Go to step **6.**
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Move the selector lever to "D" range, and slowly increase vehicle speed to 65 km/h (40 MPH). NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 16 (+) — Chassis ground (−):***	Is the voltage more than 9 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in transmission.	Go to step **6.**

	Step	Check	Yes	No
6	**CHECK POOR CONTACT.**	Is there poor contact in 2-4 brake timing solenoid circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
7	**CHECK 2-4 BRAKE TIMING SOLENOID (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Lift-up or raise the vehicle and support with safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 4)Remove the oil pan, and disconnect connector from 2-4 brake timing solenoid. 5)Measure the resistance between 2-4 brake timing solenoid connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 10 — 16 Ω?	Go to step **8.**	Replace the 2-4 brake timing solenoid. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>
8	**CHECK HARNESS CONNECTOR BETWEEN 2-4 BRAKE TIMING SOLENOID AND TRANSMISSION.** Measure the resistance of harness between 2-4 brake timing solenoid and transmission connector. ***Connector & terminal*** ***(AT8) No. 1 — (T4) No. 4:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the open circuit in harness between 2-4 brake timing solenoid and transmission connector.
9	**CHECK HARNESS CONNECTOR BETWEEN 2-4 BRAKE TIMING SOLENOID AND TRANSMISSION.** Measure the resistance of harness between 2-4 brake timing solenoid connector and transmission ground. ***Connector & terminal*** ***(T4) No. 4 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in 2-4 brake timing solenoid and transmission.	Repair the short circuit harness between 2-4 brake timing solenoid and transmission connector.

M: DTC 75 LINE PRESSURE DUTY SOLENOID

DIAGNOSIS:
The output signal circuit of line pressure duty solenoid is open or shorted.
TROUBLE SYMPTOM:
Excessive shift shock.
WIRING DIAGRAM:

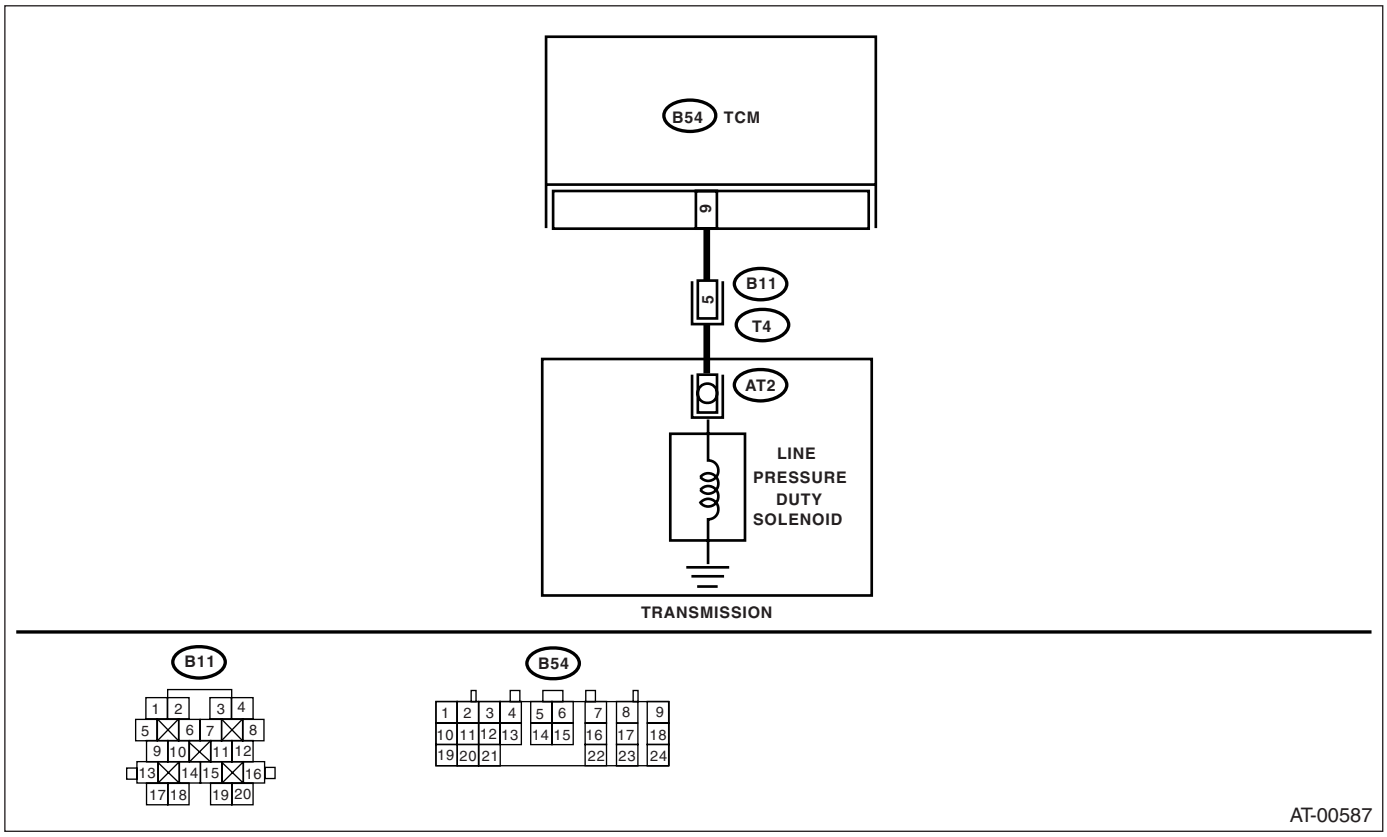

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission and TCM. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 9 — (B11) No. 5:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND CHASSIS GROUND.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B54) No. 9 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK LINE PRESSURE DUTY SOLENOID.** Measure the resistance between transmission connector receptacle's terminals. ***Terminals*** ***(T4) No. 5 — No. 16:***	Is the resistance between 2.0 and 4.5 Ω?	Go to step **4.**	Go to step **10.**
4	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **7.**	Go to step **5.**

	Step	Check	Yes	No
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect all connectors. 2)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 3)Turn the ignition switch to ON (engine OFF). 4)Move the select lever to "N" range. 5)Throttle fully closed. 6)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 9 (+) — Chassis ground (–):***	Is the voltage 1.5 — 5.0 V?	Go to step **6.**	Go to step **9.**
6	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Throttle fully open and hold it. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 9 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in transmission.	Go to step **9.**
7	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and transmission. 2)Connect the Subaru Select Monitor to data link connector. 3)Start the engine and turn Subaru Select Monitor switch to ON. 4)Warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 5)Stop the engine and turn ignition switch to ON (engine OFF). 6)Move the select lever to "N" range. 7)Throttle is fully closed. •Line pressure duty solenoid is indicated in "%". 8)Read the data of line pressure duty solenoid using Subaru Select Monitor.	Is the value 100 %?	Go to step **8.**	Go to step **9.**

	Step	Check	Yes	No
8	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Turn the ignition switch to ON (engine OFF). 2)Throttle is fully open.	Is the value less than 25 %?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in transmission.	Go to step **9.**
9	**CHECK POOR CONTACT.**	Is there poor contact in line pressure duty solenoid circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
10	**CHECK LINE PRESSURE DUTY SOLENOID (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 3)Remove the oil pan, and disconnect connector from line pressure duty solenoid. 4)Measure the resistance between line pressure duty solenoid connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 2.0 — 4.5 Ω?	Go to step **11.**	Replace the line pressure duty solenoid. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>
11	**CHECK HARNESS CONNECTOR BETWEEN TRANSMISSION AND LINE PRESSURE DUTY SOLENOID.** Measure the resistance of harness between line pressure duty solenoid and transmission connector. ***Connector & terminal*** ***(T4) No. 5 — (AT2) No. 1:***	Is the resistance less than 1 Ω?	Go to step **12.**	Repair the open circuit in harness between line pressure duty solenoid and transmission connector.
12	**CHECK HARNESS CONNECTOR BETWEEN TRANSMISSION AND LINE PRESSURE DUTY SOLENOID.** Measure the resistance of harness between transmission connector and transmission ground. ***Connector & terminal*** ***(T4) No. 5 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in line pressure duty solenoid and transmission.	Repair the short circuit in harness between line pressure duty solenoid and transmission connector.

N: DTC 76 2-4 BRAKE DUTY SOLENOID

DIAGNOSIS:

The output signal circuit of 2-4 brake duty solenoid is open or shorted.

TROUBLE SYMPTOM:

Excessive shift shock.

WIRING DIAGRAM:

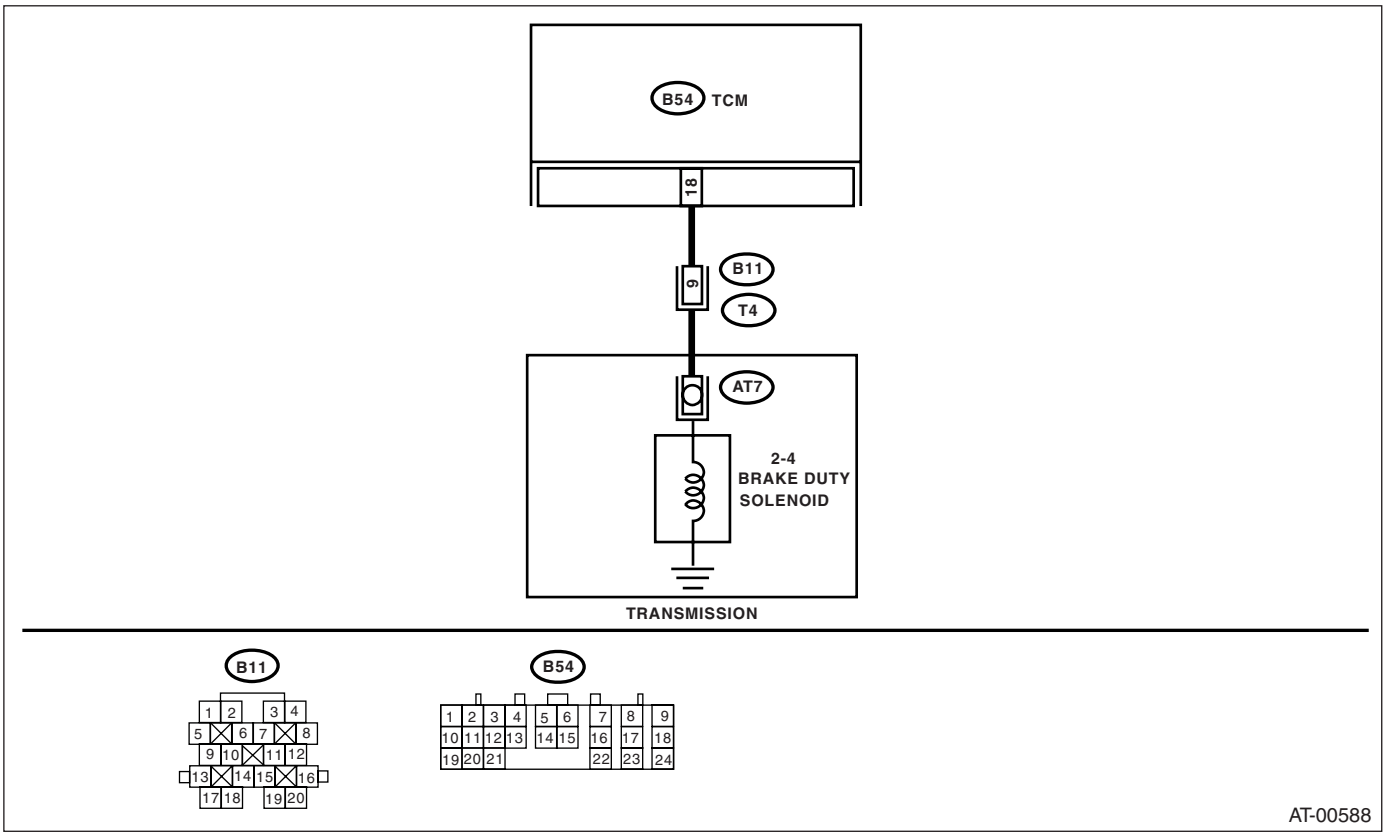

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from transmission and TCM. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 18 — (B11) No. 9:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND CHASSIS GROUND.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B54) No. 18 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK 2-4 BRAKE DUTY SOLENOID.** Measure the resistance between transmission connector receptacle's terminals. ***Terminals*** ***(T4) No. 16 — No. 9:***	Is the resistance 2.0 — 4.5 Ω?	Go to step **4.**	Go to step **10.**
4	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **7.**	Go to step **5.**

	Step	Check	Yes	No
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect all connectors. 2)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 3)Turn the ignition switch to ON (engine OFF). 4)Move the select lever to "N" range. 5)Throttle fully closed. 6)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 18 (+) — Chassis ground (−):***	Is the voltage 1.5 — 5.0 V?	Go to step **6.**	Go to step **9.**
6	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Throttle fully open and hold it. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 18 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **9.**
7	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Connect all connectors. 2)Connect the Subaru Select Monitor to data link connector. 3)Start the engine and turn Subaru Select Monitor switch to ON. 4)Warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 5)Stop the engine and turn ignition switch to ON (engine OFF). 6)Move the select lever to "N" range. 7)Throttle is fully closed. •2-4 brake duty solenoid is indicated in "%". 8)Read the data of 2-4 brake duty solenoid using Subaru Select Monitor.	Is the value 100 %?	Go to step **8.**	Go to step **9.**

	Step	Check	Yes	No
8	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Turn the ignition switch to ON (engine OFF). 2)Throttle is fully open.	Is the value less than 25 %?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **9.**
9	**CHECK POOR CONTACT.**	Is there poor contact in 2-4 brake duty solenoid circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
10	**CHECK 2-4 BRAKE DUTY SOLENOID (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 3)Remove the oil pan, and disconnect connector from 2-4 brake duty solenoid. 4)Measure the resistance between 2-4 brake duty solenoid connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 2.0 — 4.5 Ω?	Go to step **11.**	Replace the 2-4 brake duty solenoid. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>
11	**CHECK HARNESS CONNECTOR BETWEEN TRANSMISSION AND 2-4 BRAKE DUTY SOLENOID.** Measure the resistance of harness between 2-4 brake duty solenoid and transmission connector. ***Connector & terminal*** ***(T4) No. 9 — (AT7) No. 1:***	Is the resistance less than 1 Ω?	Go to step **12.**	Repair the open circuit in harness between 2-4 brake duty solenoid and transmission connector.
12	**CHECK HARNESS CONNECTOR BETWEEN TRANSMISSION AND 2-4 BRAKE DUTY SOLENOID.** Measure the resistance of harness between transmission connector and transmission ground. ***Connector & terminal*** ***(T4) No. 9 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in line pressure duty solenoid and transmission.	Repair the short circuit in harness between 2-4 brake duty solenoid and transmission connector.

O: DTC 77 LOCK-UP DUTY SOLENOID

DIAGNOSIS:

The output signal circuit of lock-up duty solenoid is open or shorted.

TROUBLE SYMPTOM:

No “lock-up” (after engine warm-up).

WIRING DIAGRAM:

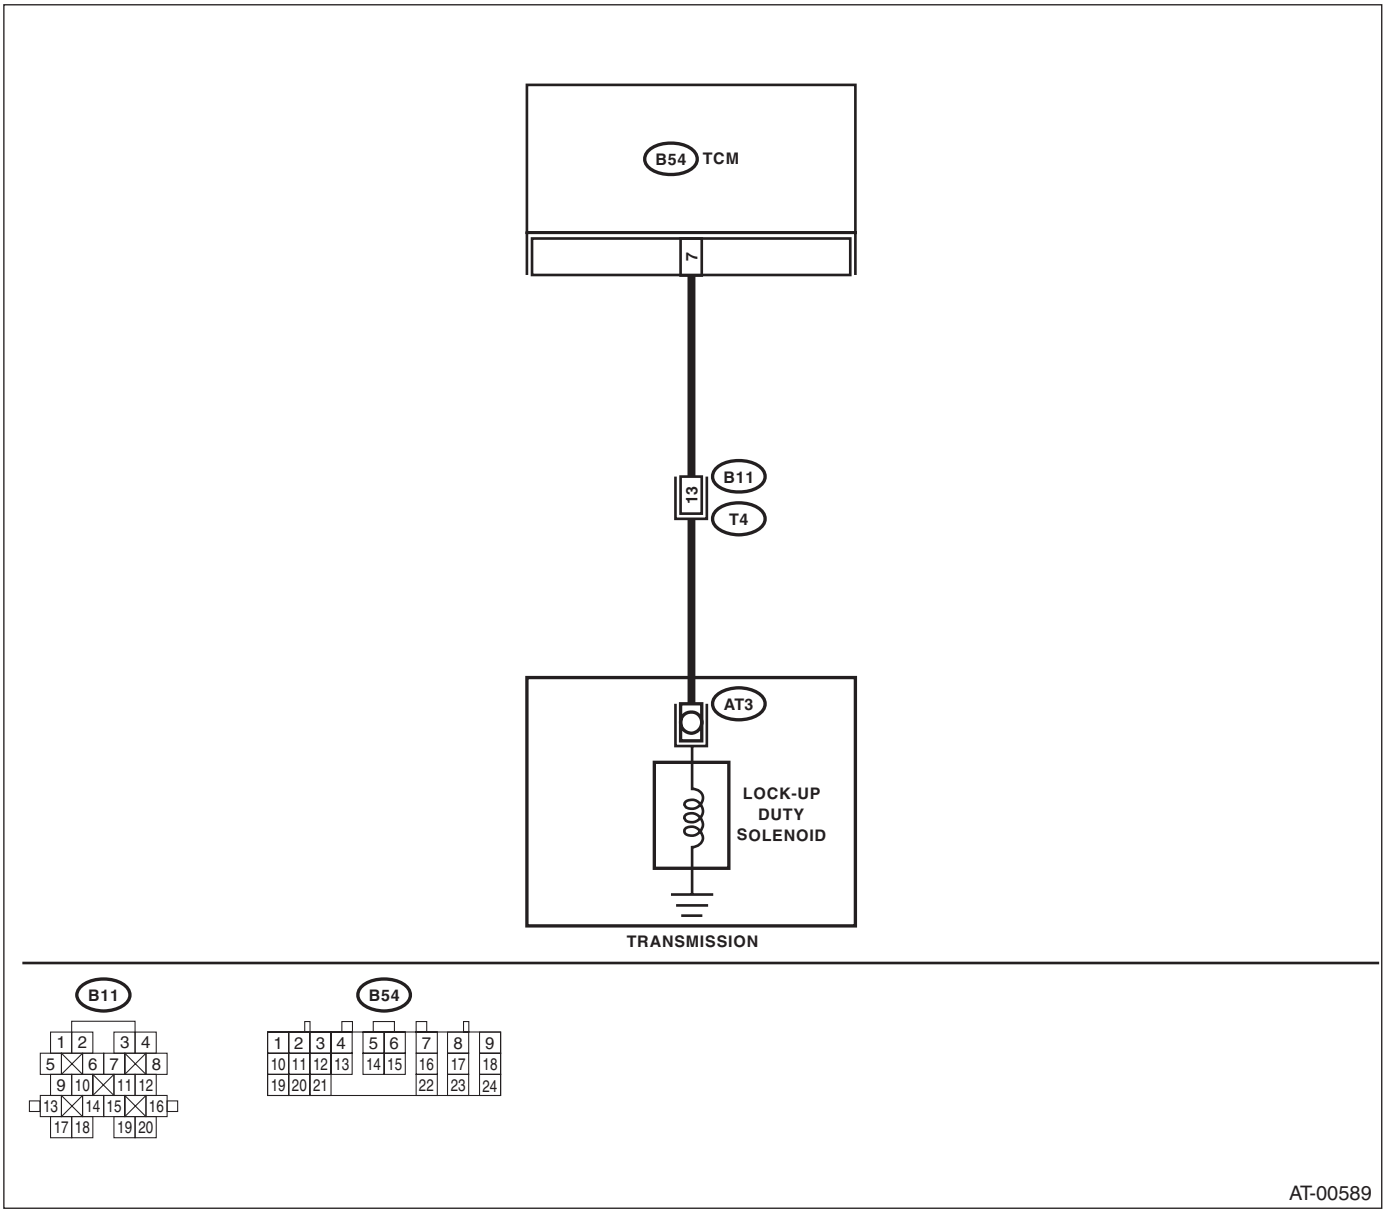

Step	Check	Yes	No
1 CHECK DTC.	Do multiple DTCs appear in the on-board diagnostics test mode?	Go to another DTC.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 7 — (B11) No. 13:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and transmission connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness connector between TCM and chassis ground. ***Connector & terminal*** ***(B54) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the short circuit in harness between TCM and transmission connector.
4	**CHECK LOCK-UP DUTY SOLENOID.** Measure the resistance between transmission connector receptacle's terminals. ***Connector & terminal*** ***(T4) No. 13 — No. 16:***	Is the resistance 10 — 17 Ω?	Go to step **5.**	Go to step **11.**
5	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **8.**	Go to step **6.**
6	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Lift-up the vehicle and place safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 4)Move the selector lever to “D” range and slowly increase vehicle speed to 75 km/h (47 MPH). Wheels will lock-up. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 5)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 7 (+) — Chassis ground (−):***	Is the voltage more than 8.5 V?	Go to step **7.**	Go to step **10.**

	Step	Check	Yes	No
7	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Return the engine to idling speed and move select lever to “N” range. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 7 (+) — Chassis ground (−):***	Is the voltage less than 0.5 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **10.**
8	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and transmission. 2)Lift-up the vehicle and place safety stand. NOTE: On AWD models, raise all wheels off ground. 3)Connect the Subaru Select Monitor to data link connector. 4)Start the engine and turn Subaru Select Monitor switch to ON. 5)Start the engine and warm-up the transmission until ATF temperature is above 80°C (176°F). NOTE: If ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 6)Read the data of lock-up duty solenoid using Subaru Select Monitor. •Lock-up duty solenoid is indicated in “%”. 7)Move the selector lever to “D” range and slowly increase vehicle speed to 75 km/h (47 MPH). Wheels will lock-up. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.>	Is the value 95 %?	Go to step **9.**	Go to step **10.**
9	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** Return the engine to idling speed and move selector lever to “N” range. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.>	Is the value 5 %?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **10.**

	Step	Check	Yes	No
10	**CHECK POOR CONTACT.**	Is there poor contact in lock-up duty solenoid circuit?	Repair poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
11	**CHECK LOCK-UP DUTY SOLENOID (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Drain the ATF. **CAUTION:** **Do not drain the ATF until it cools down.** 3)Remove the oil pan and disconnect connector from lock-up duty solenoid. 4)Measure the resistance between lock-up duty solenoid connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 10 — 17 Ω?	Go to step **12.**	Replace the lock-up duty solenoid. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>
12	**CHECK HARNESS CONNECTOR BETWEEN LOCK-UP DUTY SOLENOID AND TRANSMISSION.** Measure the resistance of harness between lock-up duty solenoid and transmission connector. ***Connector & terminal*** ***(T4) No. 13 — (AT3) No. 1:***	Is the resistance less than 1 Ω?	Go to step **13.**	Repair the open circuit in harness between TCM and transmission connector.
13	**CHECK HARNESS CONNECTOR BETWEEN LOCK-UP DUTY SOLENOID AND TRANSMISSION.** Measure the resistance of harness between transmission connector and transmission ground. ***Connector & terminal*** ***(T4) No. 13 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in lock-up duty solenoid and transmission.	Repair the short circuit in harness between lock-up duty solenoid and transmission connector.

P: DTC 78 SPORT SHIFT SOLENOID

DIAGNOSIS:

Output signal circuit of SPORT shift solenoid is open or shorted.

TROUBLE SYMPTOM:

Engine brake is effective at “D”, “3”, “2”, ranges.

WIRING DIAGRAM:

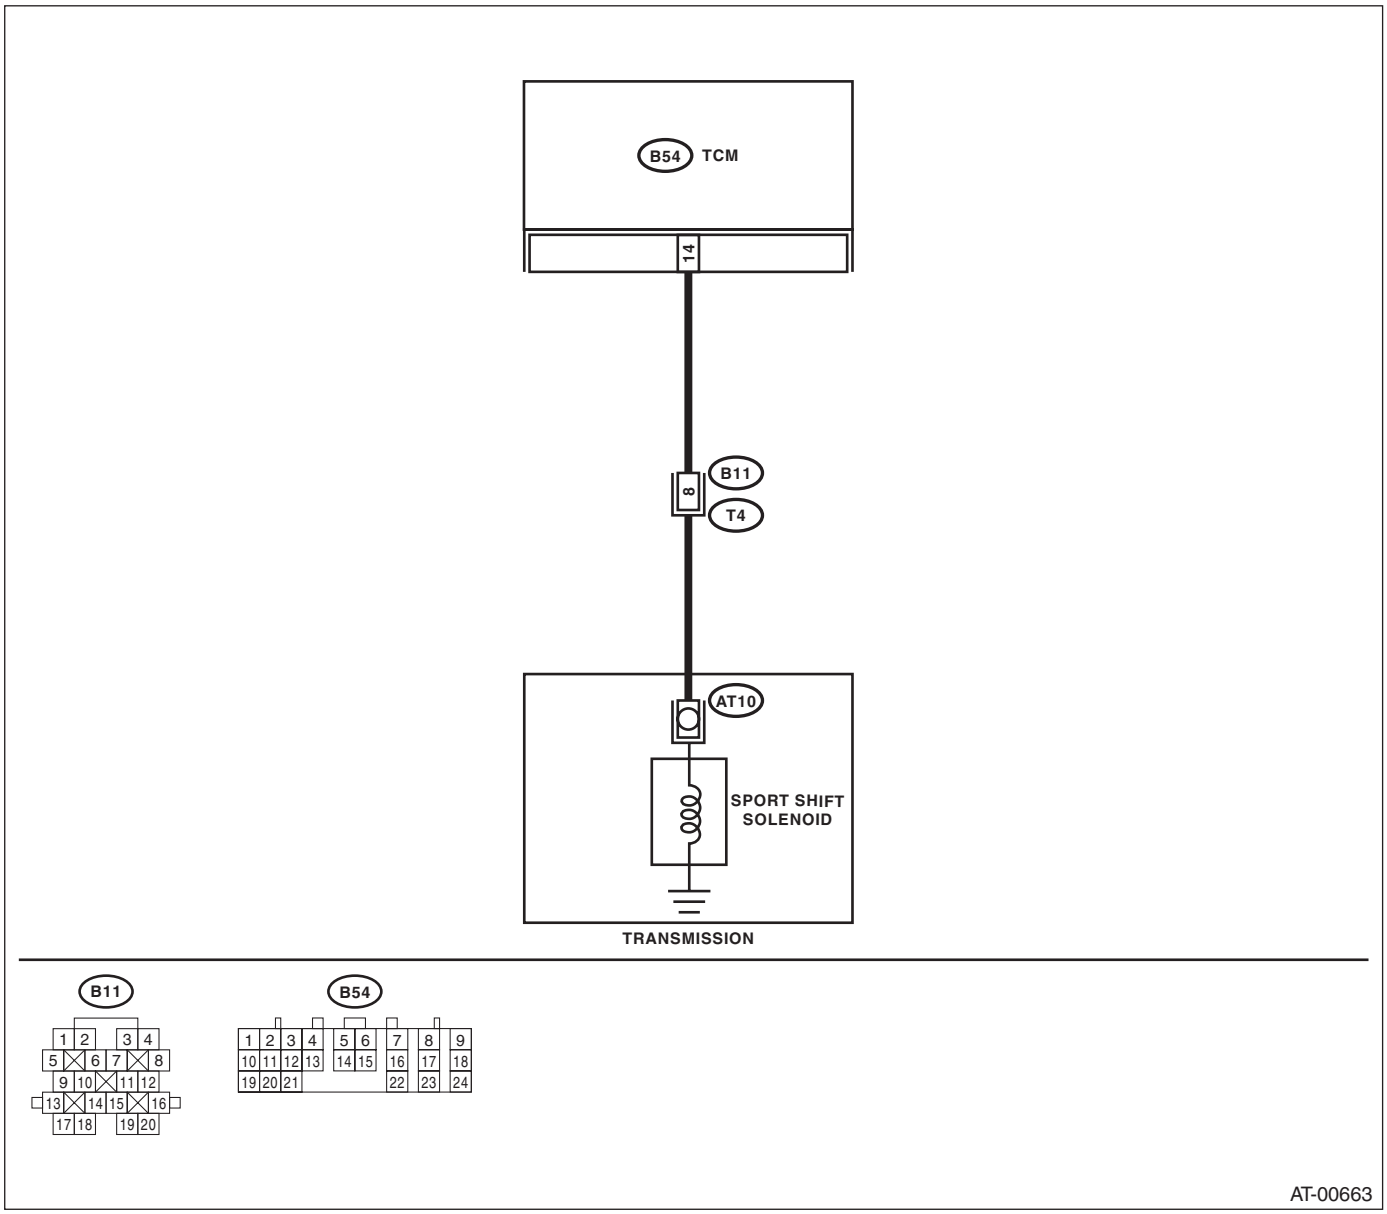

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and SPORT shift solenoid connector. ***Connector & terminal*** ***(B54) No. 14 — (B11) No. 8:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 14 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK SPORT SHIFT SOLENOID.** Measure the resistance between transmission connector terminals. ***Connector & terminal*** ***(T4) No. 8 — No. 16:***	Is the resistance 10 — 16 Ω?	Go to step **4.**	Go to step **7.**
4	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Turn the ignition switch to ON (engine OFF). 3)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 14 (+) — Chassis ground (−):***	Is the voltage more than 9 V?	Go to step **5.**	Go to step **6.**

	Step	Check	Yes	No
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Turn the ignition switch OFF. 2)Lift-up the vehicle and place safety stand. NOTE: Raise all wheels off ground. 3)Start the engine, and warm transmission until ATF temperature becomes 80°C (176°F) or more. NOTE: It ambient temperature is below 0°C (32°F), drive the vehicle until ATF reaches its operating temperature. 4)Move the select lever to SPORT shift mode. 5)Increase the speed up to 25 km/h (16 MPH) at 2nd. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 6)Shift down to 1st speed, and effectively use engine brake. 7)Measure the voltage between TCM connector and body ground when engine brake is effective. ***Connector & terminal*** ***(B54) No. 14 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Even if "POWER" indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in the TCM.	Go to step **6.**
6	**CHECK POOR CONTACT.**	Is there poor contact in SPORT shift solenoid circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
7	**CHECK SHIFT SOLENOID 1 (IN TRANSMISSION).** 1)Remove the transmission connector from bracket. 2)Lift-up or raise the vehicle and support with safety stand. 3)Drain the automatic transmission fluid. **CAUTION:** **Do not drain the automatic transmission fluid until it cools down.** 4)Remove the oil pan, and disconnect the connector from SPORT shift solenoid. 5)Measure the resistance between SPORT shift solenoid connector and transmission ground. ***Terminals*** ***No. 1 — Transmission ground:***	Is the resistance 10 — 16 Ω?	Go to step **8.**	Replace the SPORT shift solenoid. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>

	Step	Check	Yes	No
8	**CHECK HARNESS CONNECTOR BETWEEN SPORT SHIFT SOLENOID AND TRANSMISSION.** Measure the resistance of harness between shift solenoid 1 and transmission connector. ***Connector & terminal*** ***(AT10) No. 1 — (T4) No. 8:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the open circuit in harness between SPORT shift solenoid and transmission connector.
9	**CHECK HARNESS CONNECTOR BETWEEN SPORT SHIFT SOLENOID AND TRANSMISSION.** Measure the resistance of harness between SPORT shift solenoid connector and transmission ground. ***Connector & terminal*** ***(T4) No. 8 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if “POWER” indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in SPORT shift solenoid and transmission.	Repair the short circuit harness between SPORT shift solenoid and transmission connector.

Q: DTC 79 TRANSFER DUTY SOLENOID

DIAGNOSIS:
The output signal circuit of transfer duty solenoid is open or shorted.
TROUBLE SYMPTOM:
Excessive “braking” in tight corners.
WIRING DIAGRAM:

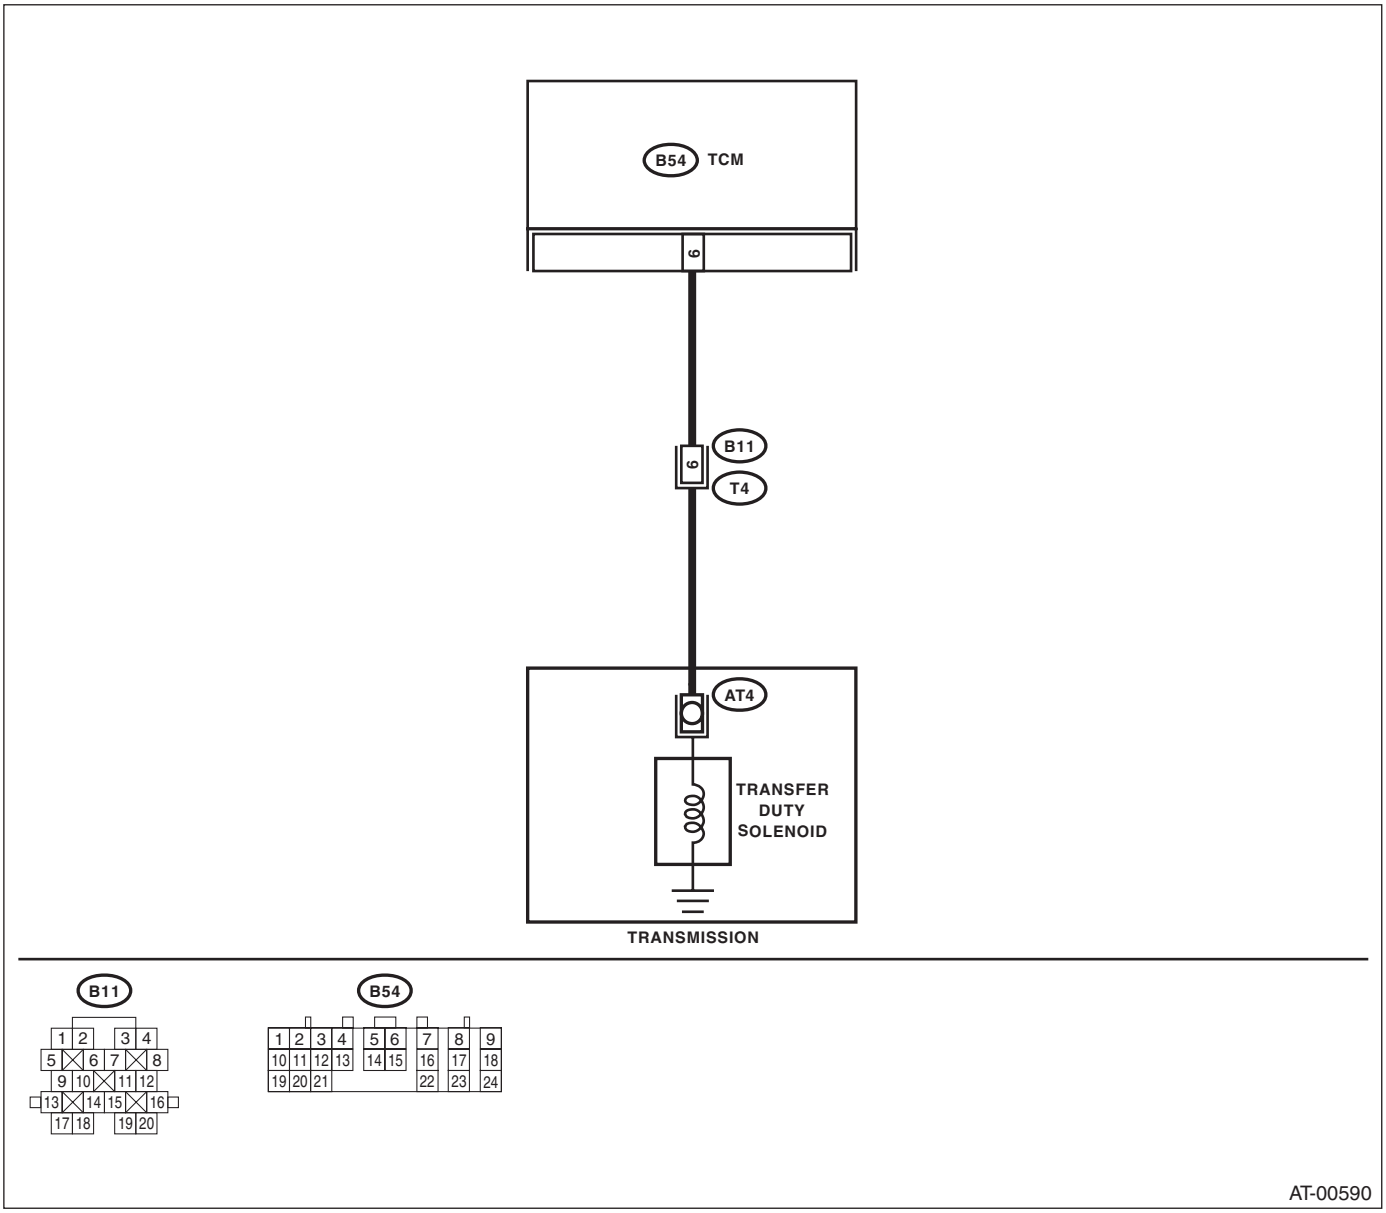

Step		Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 6 — (B11) No. 6:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.

	Step	Check	Yes	No
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance harness connector between TCM and chassis ground. ***Connector & terminal*** ***(B54) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the short circuit in harness between TCM and transmission connector.
3	**CHECK TRANSFER DUTY SOLENOID.** Measure the resistance between transmission connector and transmission terminals. ***Connector & terminal*** ***(T4) No. 6 — No. 16:***	Is the resistance 10 — 17 Ω?	Go to step **4.**	Go to step **13.**
4	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **8.**	Go to step **5.**
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connectors to TCM and transmission. 2)Turn the ignition switch to ON (engine OFF). 3)Throttle is fully closed. 4)Move the select lever to “P” range. 5)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 6 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **6.**	Go to step **12.**
6	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Move the select lever to “D” range. 2)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B54) No. 6 (+) — Chassis ground (−):***	Is the voltage more than 8.5 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **12.**
7	**CHECK VEHICLE**	Is the target SOHC model?	Go to step **8.**	Go to step **10.**
8	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and transmission. 2)Connect the Subaru Select Monitor to data link connector. 3)Turn the ignition switch to ON (engine OFF) and turn Subaru Select Monitor switch to ON. 4)Move the select lever to “D” range with throttle fully open (vehicle speed 0 km/h or 0 MPH). 5)Read data of transfer duty solenoid using Subaru Select Monitor. •Transfer duty solenoid is indicated in “%”.	Is the value 5 — 10 %?	Go to step **9.**	Go to step **12.**

	Step	Check	Yes	No
9	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Move the select lever to “N” range with throttle fully closed (vehicle speed 0 km/h or 0 MPH). 2)Read the data of transfer duty solenoid using Subaru Select Monitor. •Transfer duty solenoid is indicated in “%”.	Is the value approx. 60 — 70 %?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **12.**
10	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and transmission. 2)Connect the Subaru Select Monitor to data link connector. 3)Turn the ignition switch to ON (engine OFF) and turn Subaru Select Monitor switch to ON. 4)Move the select lever to “D” range with throttle fully open (vehicle speed 0 km/h or 0 MPH). 5)Read the data of transfer duty solenoid using Subaru Select Monitor. •Transfer duty solenoid is indicated in “%”.	Is the value 80 — 95 %?	Go to step **11.**	Go to step **12.**
11	**CHECK OUTPUT SIGNAL EMITTED FROM TCM USING SUBARU SELECT MONITOR.** 1)Move the select lever to “N” range with throttle fully close (vehicle speed 0 km/h or 0 MPH). 2)Read the data of transfer duty solenoid using Subaru Select Monitor. •Transfer duty solenoid is indicated in “%”.	Is the value approx. 40 %?	Even if the POWER indicator light up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in transfer duty solenoid and TCM connector.	Go to step **12.**
12	**CHECK POOR CONTACT.**	Is there poor contact in transfer duty solenoid circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

	Step	Check	Yes	No
13	**CHECK TRANSFER DUTY SOLENOID (IN TRANSMISSION).** 1)Lift-up the vehicle and place safety stand. NOTE: On AWD models, raise all wheels off ground. 2)Drain the automatic transmission fluid. **CAUTION:** **Do not drain the automatic transmission fluid until it cools down.** 3)Remove the extension case and disconnect connector from transfer duty solenoid. 4)Measure the resistance between transfer duty solenoid connector and transmission ground. ***Connector & terminal*** ***(AT4) No. 1 — Transmission ground:***	Is the resistance 10 — 17 Ω?	Go to step **14.**	Replace the transfer duty solenoid.
14	**CHECK HARNESS CONNECTOR BETWEEN TRANSFER DUTY SOLENOID AND TRANSMISSION.** Measure the resistance of harness between transfer duty solenoid and transmission connector. ***Connector & terminal*** ***(T4) No. 6 — (AT4) No. 1:***	Is the resistance less than 1 Ω?	Go to step **15.**	Repair the open circuit in harness between transfer duty solenoid and transmission connector.
15	**CHECK HARNESS CONNECTOR BETWEEN TRANSFER DUTY SOLENOID AND TRANSMISSION.** Measure the resistance of harness between transmission connector and transmission ground. ***Connector & terminal*** ***(T4) No. 6 — Transmission ground:***	Is the resistance more than 1 MΩ?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or contact in transfer duty solenoid and transmission.	Repair the short circuit in harness between transfer duty solenoid and transmission connector.

R: DTC 93 REAR VEHICLE SPEED SENSOR

DIAGNOSIS:

The input signal circuit of TCM is open or shorted.

TROUBLE SYMPTOM:

No lock-up or excessive tight corner “braking”.

WIRING DIAGRAM:

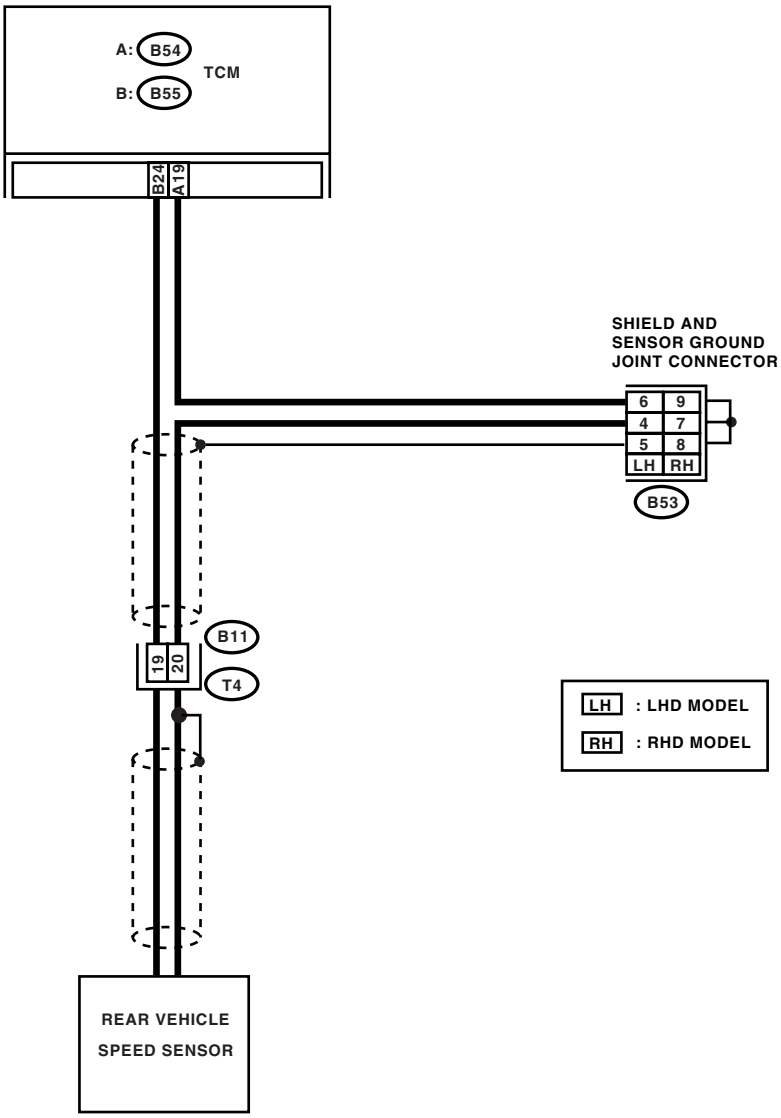

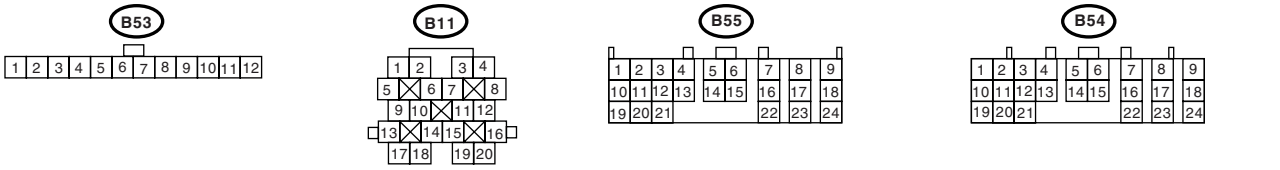

AT-01148

	Step	Check	Yes	No
1	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and transmission. 3)Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B55) No. 24 — (B11) No. 19:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit in harness between TCM and transmission connector.
2	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and transmission connector. ***Connector & terminal*** ***(B54) No. 19 — (B11) No. 20:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between TCM and transmission, and poor contact in coupling connector.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 24 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Repair the short circuit in harness between TCM and transmission connector.
4	**CHECK HARNESS CONNECTOR BETWEEN TCM AND TRANSMISSION.** Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B54) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the short circuit in harness between TCM and transmission connector.
5	**CHECK REAR VEHICLE SPEED SENSOR.** Measure the resistance between transmission connector receptacle's terminals. ***Connector & terminal*** ***(T4) No. 19 — No. 20:***	Is the resistance 450 — 650 Ω?	Go to step **6.**	Replace the rear vehicle speed sensor. <Ref. to 4AT-56, Rear Vehicle Speed Sensor.>
6	**PREPARE OSCILLOSCOPE.**	Do you have an oscilloscope?	Go to step **10.**	Go to step **7.**
7	**PREPARE SUBARU SELECT MONITOR.**	Do you have a Subaru Select Monitor?	Go to step **9.**	Go to step **8.**
8	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and transmission. 2)Lift-up or raise the vehicle and place safety stands. NOTE: Raise all wheels off floor. 3)Start the engine and set vehicle in 20 km/h (12 MPH) condition. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 4)Measure the voltage between TCM connector terminals. ***Connector & terminal*** ***(B55) No. 24 (+) — (B54) No. 19 (−):***	Is the voltage more than AC 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **11.**

	Step	Check	Yes	No
9	**CHECK INPUT SIGNAL FOR TCM USING SUBARU SELECT MONITOR.** 1)Connect the connectors to TCM and transmission. 2)Connect the Subaru Select Monitor to data link connector. 3)Lift-up or raise the vehicle and place safety stands. NOTE: Raise all wheels off floor. 4)Turn the ignition switch to ON and turn Subaru Select Monitor switch to ON. 5)Start the engine. 6)Read the data of vehicle speed using Subaru Select Monitor. •Compare the speedometer with Subaru Select Monitor indications. •Vehicle speed is indicated in “km/h” or “MPH”. 7)Slowly increase the vehicle speed to 60 km/h or 37 MPH. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.>	Does the speedometer indication increase as the Subaru Select Monitor data increases?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **11.**
10	**CHECK INPUT SIGNAL FOR TCM USING OSCILLOSCOPE.** 1)Connect the connectors to TCM and transmission. 2)Lift-up or raise the vehicle and place safety stands. NOTE: Raise all wheels off floor. 3)Set the oscilloscope to TCM connector terminals. ***Connector & terminal*** ***Positive probe; (B55) No. 24*** ***Earth lead; (B54) No. 19*** 4)Start the engine and set vehicle in 20 km/h (12 MPH) condition. NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to ABS-22, Clear Memory Mode.> 5)Measure the signal voltage indicated on oscilloscope.	Is the signal voltage more than AC 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in TCM and transmission.	Go to step **11.**
11	**CHECK POOR CONTACT.**	Is there poor contact in rear vehicle speed sensor circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

15.Diagnostic Procedure without Diagnostic Trouble Code (DTC)

A: CHECK FWD SWITCH

DIAGNOSIS:

- The LED does not come on even if FWD switch is ON.
- The FWD switch circuit is open or short.

WIRING DIAGRAM:

LHD MODEL

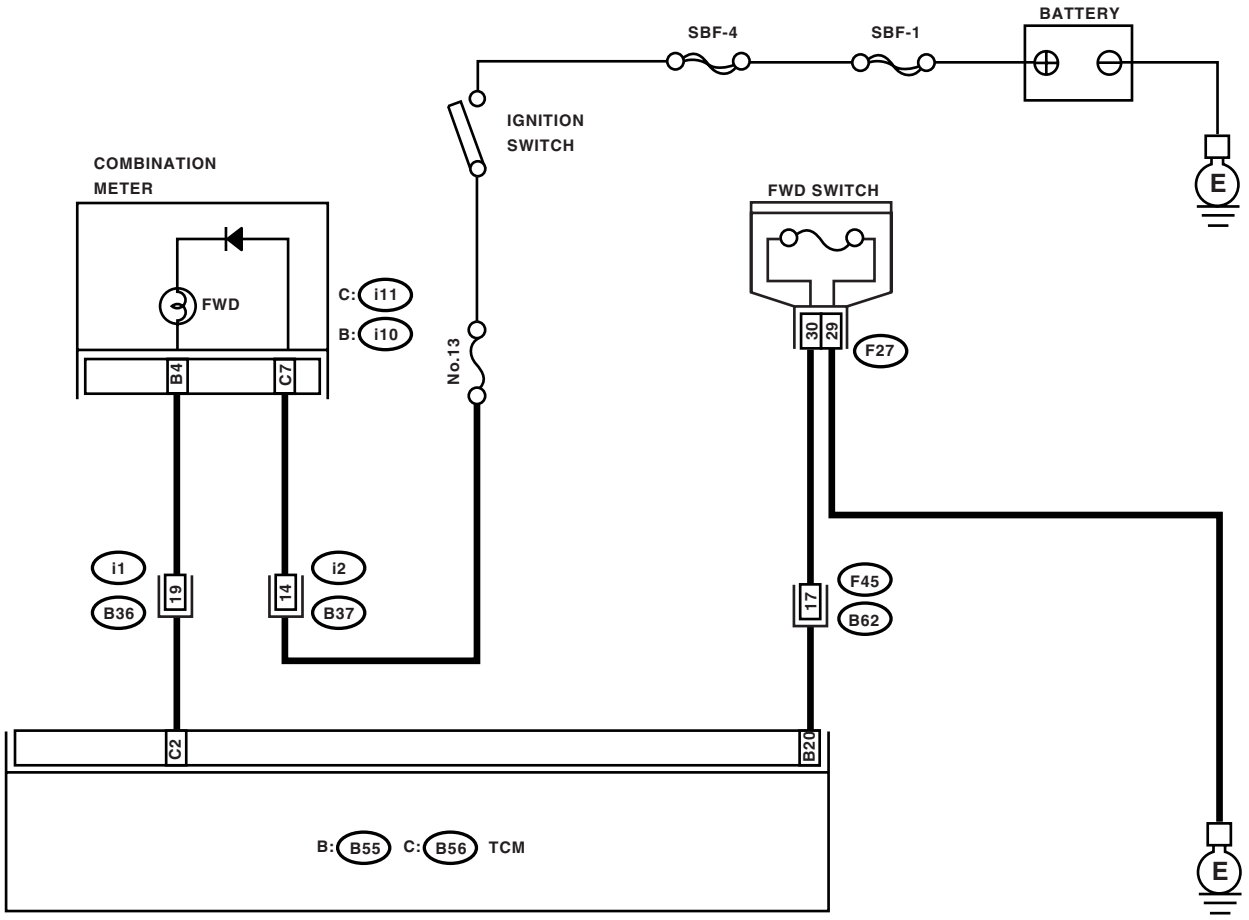

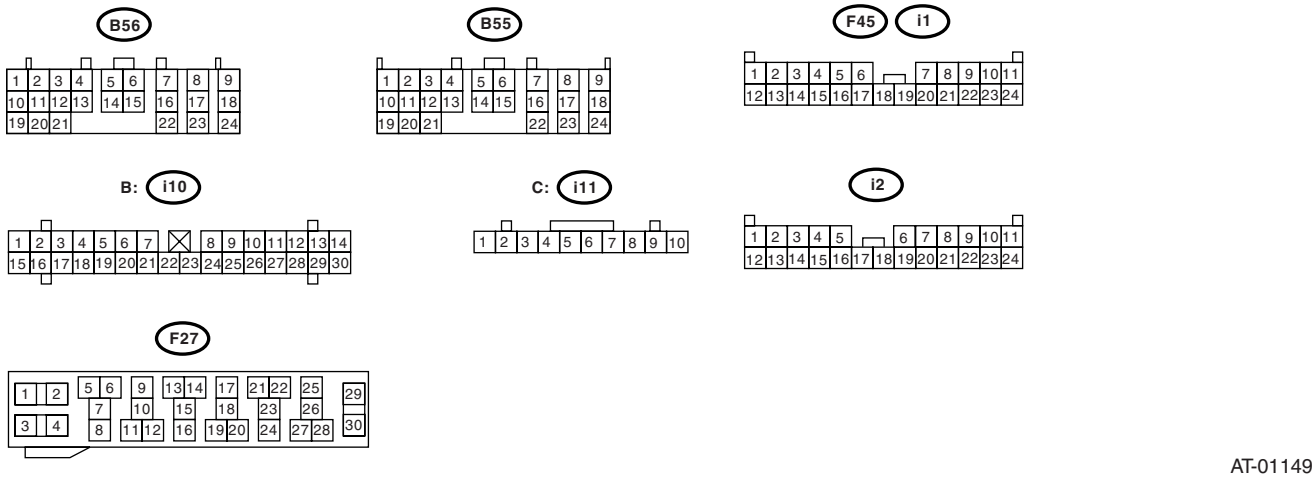

AT-01149

RHD MODEL

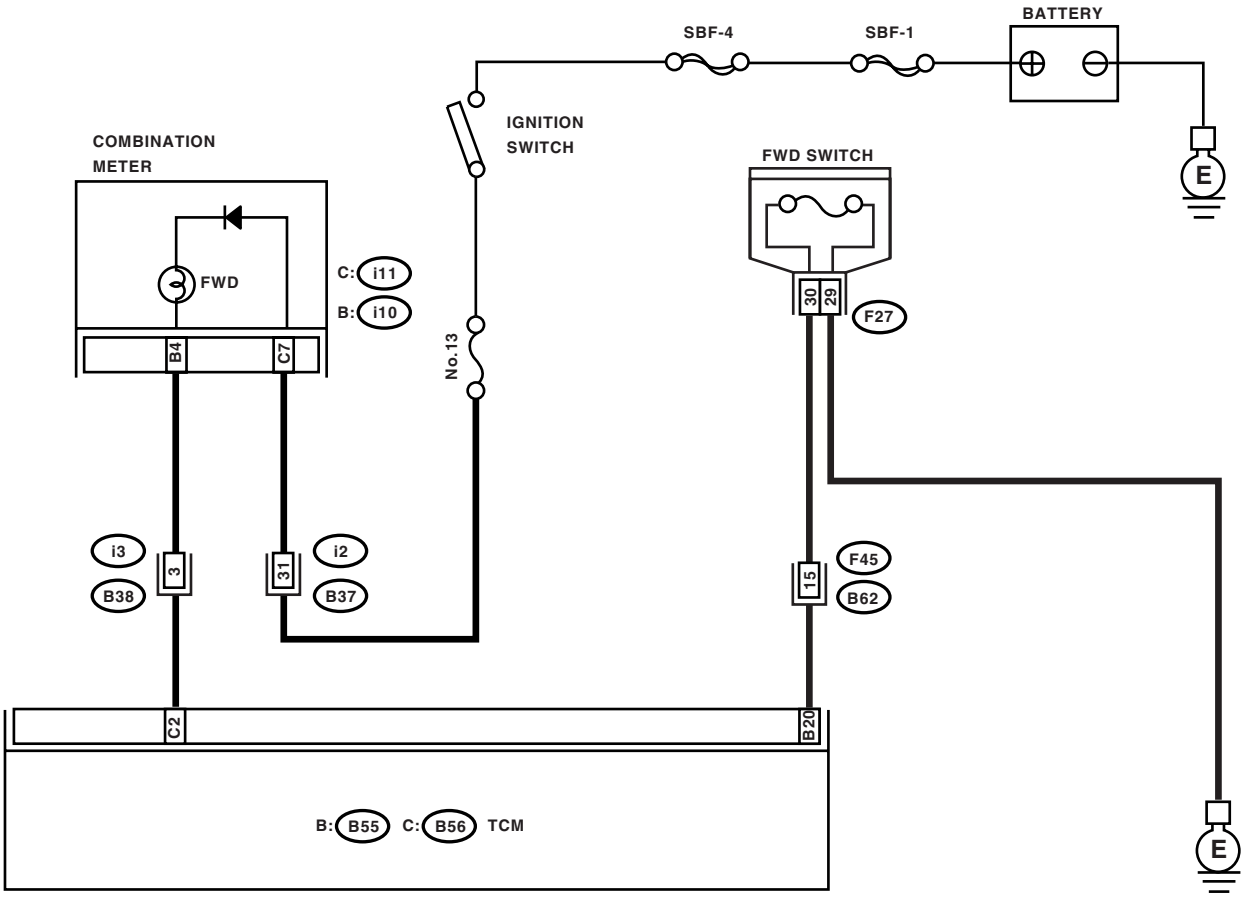

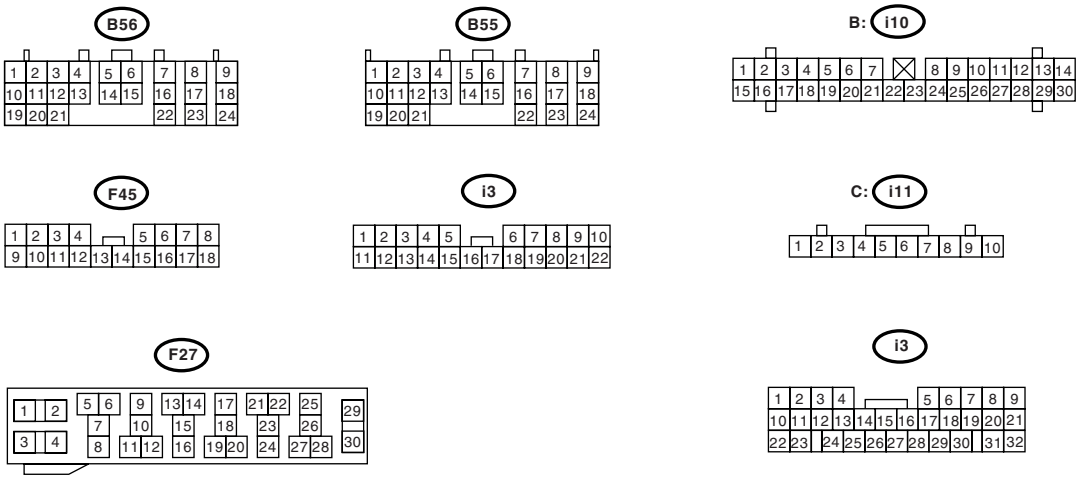

AT-01150

	Step	Check	Yes	No
1	**CHECK VEHICLE.**	Is the target AWD SOHC model?	Go to step **2.**	Go to step CHECK BRAKE SWITCH. <Ref. to 4AT-101, CHECK BRAKE SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>
2	**CHECK FWD SWITCH.**	When the fuse is inserted to FWD switch, does LED light up?	Go to step CHECK BRAKE SWITCH.<Ref. to 4AT-101, CHECK BRAKE SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Go to step **3.**
3	**CHECK FWD INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the FWD indicator light bulb from combination meter.	Is the FWD indicator light bulb OK?	Go to step **4.**	Replace the FWD indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
4	**CHECK HARNESS CONNECTOR BETWEEN TCM AND FWD SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM. 3)Measure the resistance of harness between TCM and FWD switch connector. ***Connector & terminal*** ***(B55) No. 20 — (F27) No. 30:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between TCM and FWD switch connector.
5	**CHECK HARNESS CONNECTOR BETWEEN FWD SWITCH AND CHASSIS GROUND.** Measure the resistance of harness between FWD switch and chassis ground. ***Connector & terminal*** ***(F27) No. 29 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between FWD switch connector and chassis ground.
6	**CHECK HARNESS CONNECTOR BETWEEN TCM AND FWD SWITCH.** Measure the resistance of harness connector between TCM and body to make sure that circuit does not short. ***Connector & terminal*** ***(B55) No. 20 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the short circuit in harness between TCM and FWD switch connector.
7	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM. 3)Turn the ignition switch to ON. 4)Measure the signal voltage for TCM while installing the fuse to FWD switch connector. ***Connector & terminal*** ***(B55) No. 20 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **8.**	Go to step **12.**
8	**CHECK INPUT SIGNAL FOR TCM.** Measure the signal voltage for TCM while removing the fuse from FWD switch connector. ***Connector & terminal*** ***(B55) No. 20 (+) — Chassis ground (−):***	Is the voltage 6 — 9.1 V?	Go to step **9.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

	Step	Check	Yes	No
9	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and combination meter. 3)Measure the resistance of harness between TCM and diagnosis connector. ***Connector & terminal*** ***(B56) No. 2 — (i10) No. 4:***	Is the resistance less than 1 Ω?	Go to step **10.**	Repair the open circuit in harness between TCM and combination meter and poor contact in coupling connector.
10	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** Measure the resistance of harness connector between TCM and chassis ground to make sure that circuit does not short. ***Connector & terminal*** ***(B56) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **11.**	Repair the short circuit in harness between TCM and combination meter connector.
11	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and combination meter. 3)Turn the ignition switch to ON. 4)Measure the signal voltage for TCM while installing the fuse to FWD switch connector. ***Connector & terminal*** ***(B56) No. 2 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **12.**	Go to step **13.**
12	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** Measure the signal voltage for TCM while removing the fuse from FWD switch connector. ***Connector & terminal*** ***(B56) No. 2 (+) — Chassis ground (−):***	Is the voltage 6 — 9.1 V?	Go to step **13.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
13	**CHECK POOR CONTACT.**	Is there poor contact in FWD switch circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

B: CHECK BRAKE SWITCH

Step		Check	Yes	No
1	**CHECK BRAKE SWITCH.**	When the brake pedal is depressed, does LED light up?	Go to step CHECK CRUISE CONTROL SWITCH. <Ref. to 4AT-101, CHECK CRUISE CONTROL SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Check the brake switch circuit. <Ref. to EN(H4SO)-211, DTC P0703 — TORQUE CONVERTER/BRAKE SWITCH “B” CIRCUIT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

C: CHECK CRUISE CONTROL SWITCH

Step		Check	Yes	No
1	**CHECK CRUISE CONTROL SWITCH.**	When the cruise control is set, does LED light up?	Go to step CHECK KICK-DOWN SWITCH. <Ref. to 4AT-102, CHECK KICK–DOWN SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Check the cruise control. <Ref. to CC-25, Diagnostic Procedure with DTC.>

D: CHECK KICK–DOWN SWITCH

DIAGNOSIS:

- The kick-down switch is OFF when the throttle is partially open or fully closed, but it is not ON when the throttle is fully opened.
- The kick-down switch circuit is open or shorted.

TROUBLE SYMPTOM:

No kick-down occurs (when the throttle is fully opened).

WIRING DIAGRAM:

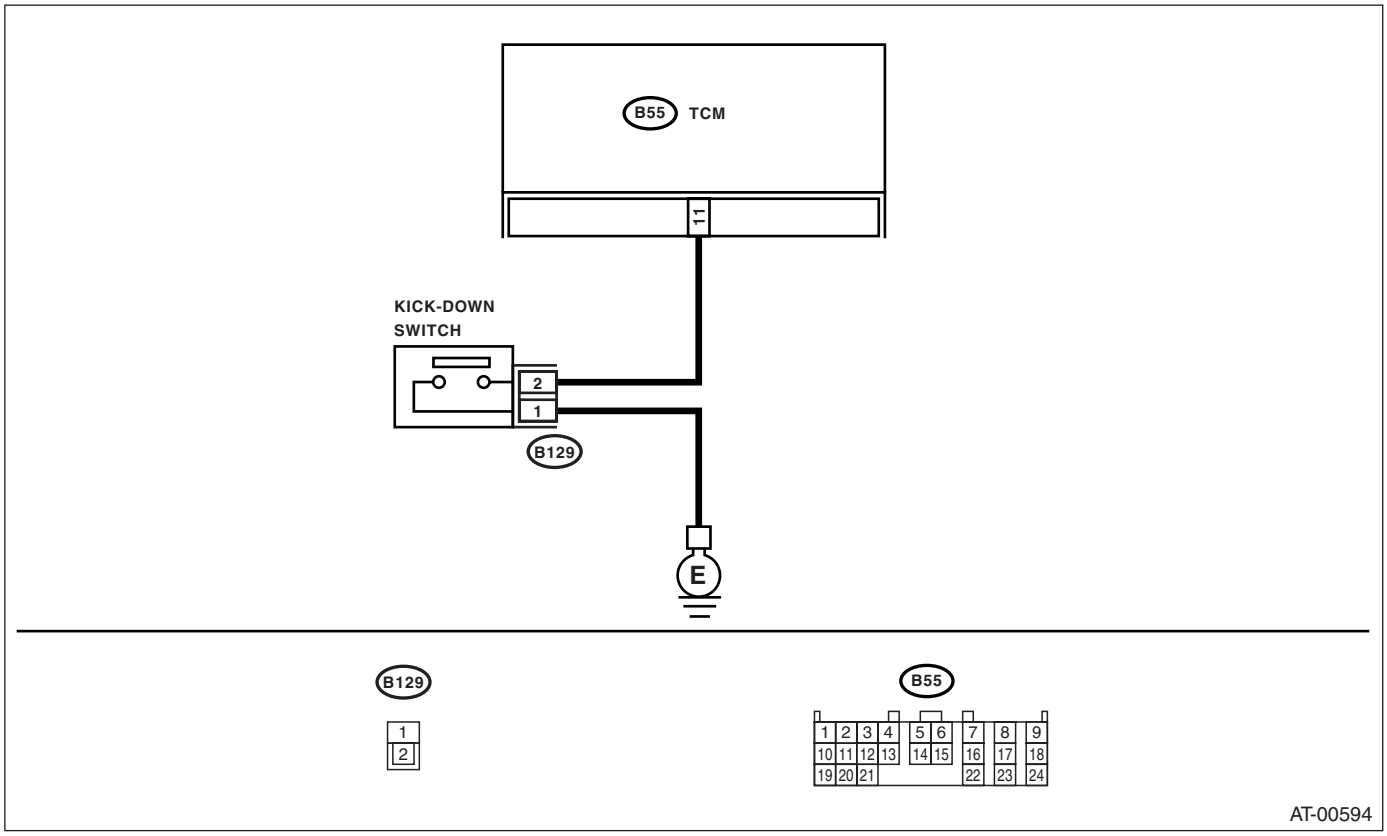

	Step	Check	Yes	No
1	**CHECK KICK-DOWN SWITCH OPERATION.**	When the accelerator pedal is depressed, does “ON” displayed?	Go to step CHECK POWER MODE SWITCH. <Ref. to 4AT-105, CHECK POWER MODE SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK KICK-DOWN SWITCH GROUND LINE.** 1)Disconnect the connector from kick-down switch. 2)Measure the resistance of harness connector between kick-down switch and chassis ground. ***Connector & terminal*** ***(B129) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the open circuit in harness between kick-down switch and TCM.
3	**CHECK KICK-DOWN SWITCH.** Measure the resistance for kick-down switch when depressing the accelerator pedal. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Go to step **4.**	Replace the kick-down switch. <Ref. to SP(H4SO)-4, Accelerator Pedal.>
4	**CHECK KICK-DOWN SWITCH.** Measure the resistance for kick-down switch when pressing the accelerator pedal. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Replace the kick-down switch.
5	**CHECK HARNESS CONNECTOR BETWEEN TCM AND KICK-DOWN SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from kick-down switch. 3)Measure the resistance of harness connector between TCM and kick-down switch. ***Connector & terminal*** ***(B55) No. 11 — (B129) No. 2:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between TCM and kick-down switch.
6	**CHECK HARNESS CONNECTOR BETWEEN TCM AND KICK-DOWN SWITCH.** Measure the resistance of harness connector between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 11 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the short circuit in harness between TCM and chassis ground.
7	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to kick-down switch. 3)Turn the ignition switch to ON (engine OFF). 4)Measure the signal voltage for TCM when depressing the accelerator pedal. ***Connector & terminal*** ***(B55) No. 11 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **8.**	Go to step **9.**
8	**CHECK INPUT SIGNAL FOR TCM.** Measure the signal voltage for TCM when pressing the accelerator pedal. ***Connector & terminal*** ***(B55) No. 11 (+) — Chassis ground (−):***	Is the voltage more than 6.5 V?	A temporary poor contact of the connector and harness may be the cause. Repair the harness and connector in TCM.	Go to step **9.**

Step		Check	Yes	No
9	**CHECK POOR CONTACT.**	Is there poor contact?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

E: CHECK POWER MODE SWITCH

DIAGNOSIS:

- The LED does not come on when POWER switch is ON.
- The POWER switch circuit is open or shorted.

TROUBLE SYMPTOM:

No power mode occurs.

WIRING DIAGRAM:

LHD MODEL

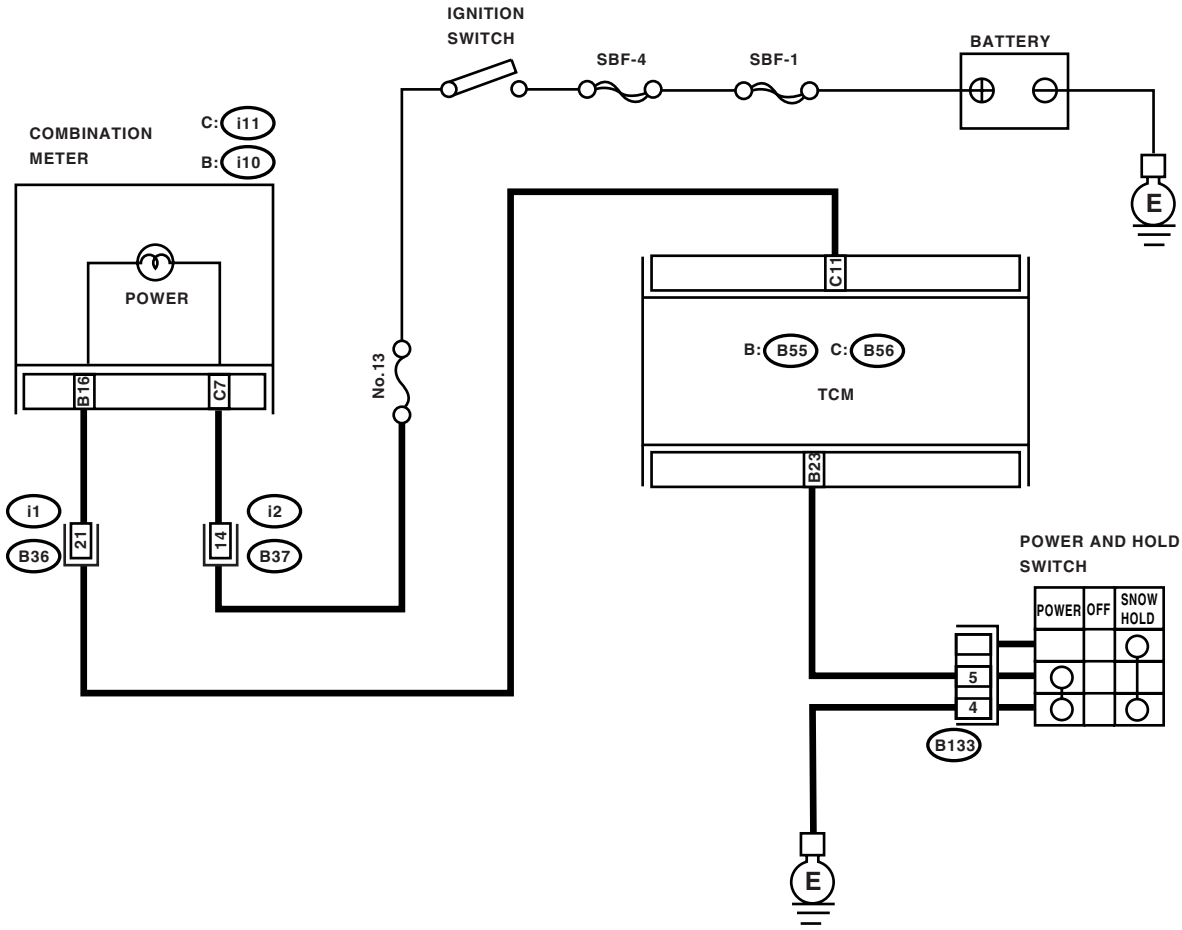

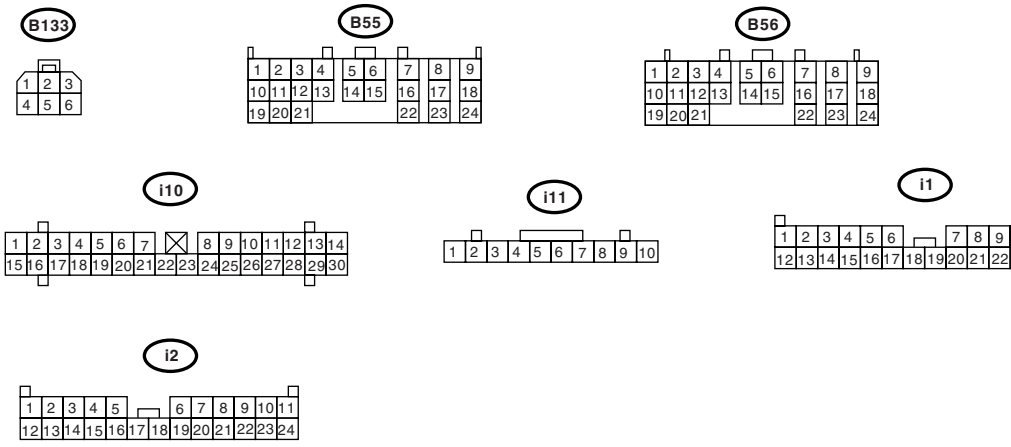

AT-01151

RHD MODEL

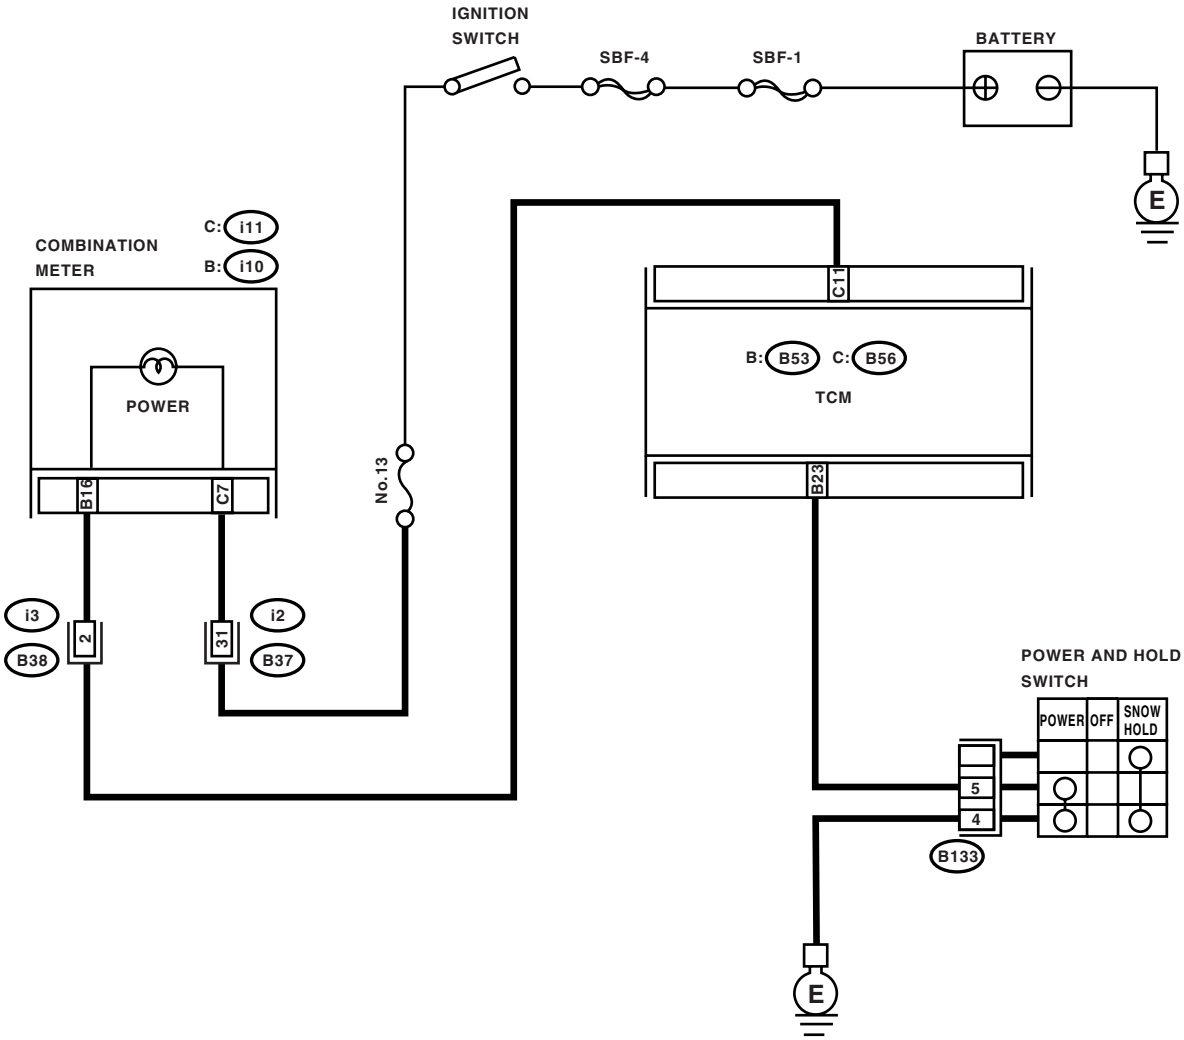

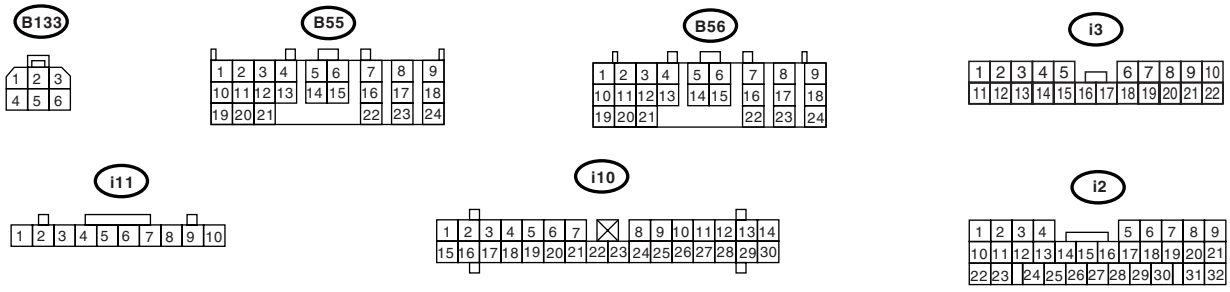

AT-01153

	Step	Check	Yes	No
1	**CHECK POWER SWITCH OPERATION.**	When the POWER switch is turned to OFF, does LED light up?	Go to step **5.**	Go to step **2.**
2	**CHECK POWER SWITCH OPERATION.**	When the POWER switch is turned to ON, does LED light up?	Go to step CHECK INHIBITOR SWITCH. <Ref. to 4AT-109, CHECK INHIBITOR SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Go to step **3.**
3	**CHECK POWER INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the POWER indicator light bulb from combination meter.	Is the POWER indicator light bulb OK?	Go to step **4.**	Replace the POWER indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
4	**CHECK POWER SWITCH GROUND LINE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from POWER switch. 3)Measure the resistance of harness connector between POWER switch and chassis ground. ***Connector & terminal*** ***(B133) No. 4 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between POWER switch and chassis ground.
5	**CHECK POWER SWITCH.** 1)Turn the POWER switch to ON. 2)Measure the resistance between terminals of POWER switch. ***Terminals*** ***No. 5 — No. 4:***	Is the resistance less than 1 Ω?	Go to step **6.**	Replace the POWER switch.
6	**CHECK POWER SWITCH.** 1)Turn the POWER switch to OFF. 2)Measure the resistance between terminals of POWER switch. ***Terminals*** ***No. 5 — No. 4:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Replace the POWER switch.
7	**CHECK HARNESS CONNECTOR BETWEEN TCM AND POWER SWITCH.** Measure the resistance of harness connector between TCM and POWER switch. ***Connector & terminal*** ***(B55) No. 23 — (B133) No. 3:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between TCM and POWER switch connector.
8	**CHECK HARNESS CONNECTOR BETWEEN TCM AND POWER SWITCH.** Measure the resistance of harness connector between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 23 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the short circuit in harness between TCM and POWER switch connector.

	Step	Check	Yes	No
9	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and POWER switch. 2)Turn the ignition switch to ON (engine OFF). 3)Measure the signal voltage for TCM while turning POWER switch to OFF. ***Connector & terminal*** ***(B55) No. 23 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **10.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
10	**CHECK INPUT SIGNAL FOR TCM.** Measure the signal voltage for TCM while turning POWER switch to ON. ***Connector & terminal*** ***(B55) No. 23 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **11.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
11	**CHECK POOR CONTACT.**	Is there poor contact?	Repair the poor contact.	A temporary poor contact of the connector or harness or connector in POWER switch circuit.

F: CHECK INHIBITOR SWITCH

DIAGNOSIS:

The input signal circuit of inhibitor switch is open or shorted.

TROUBLE SYMPTOM:

- Shift characteristics are erroneous.
- Engine brake is not effected when selector lever is in “3” range.
- Engine brake is not effected when selector lever is in “2” range.
- Engine brake is not effected when selector lever is in “1” range.

WIRING DIAGRAM:
LHD MODEL

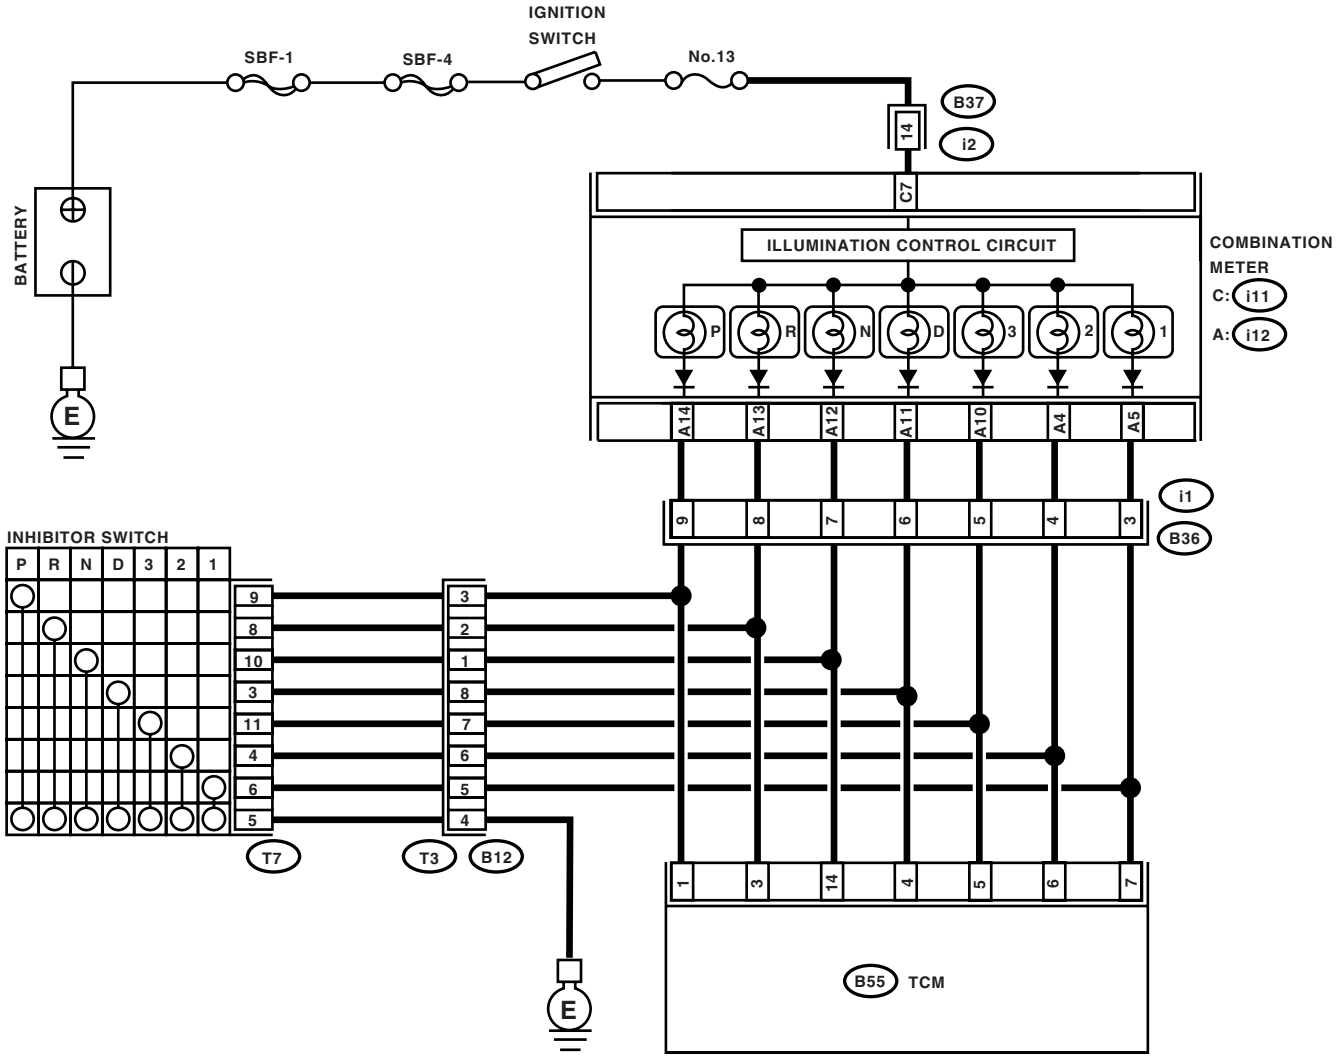

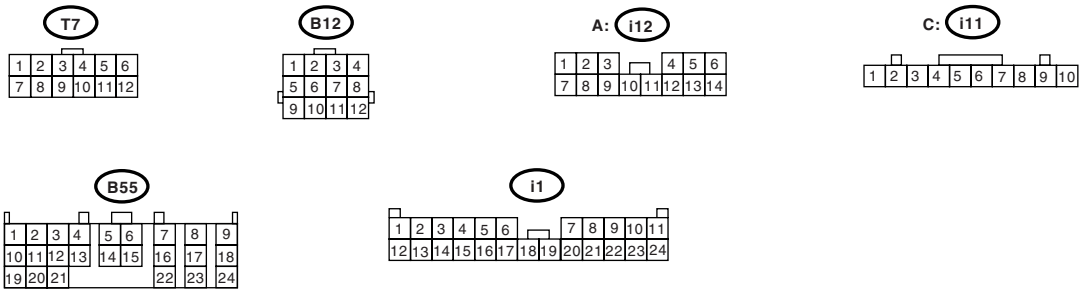

AT-01154

RHD MODEL

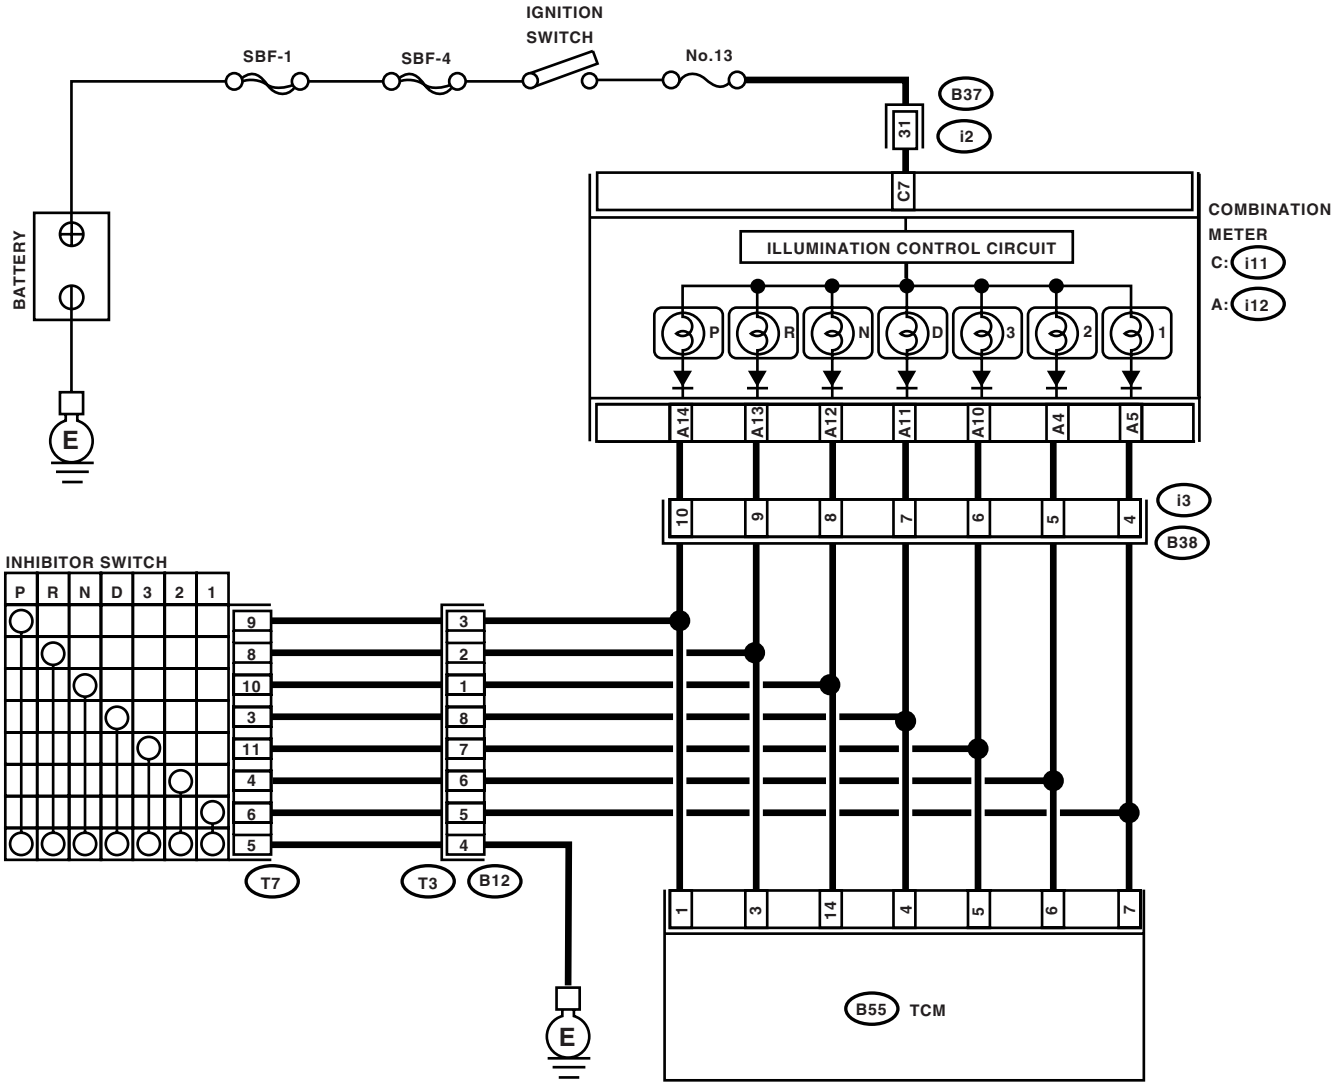

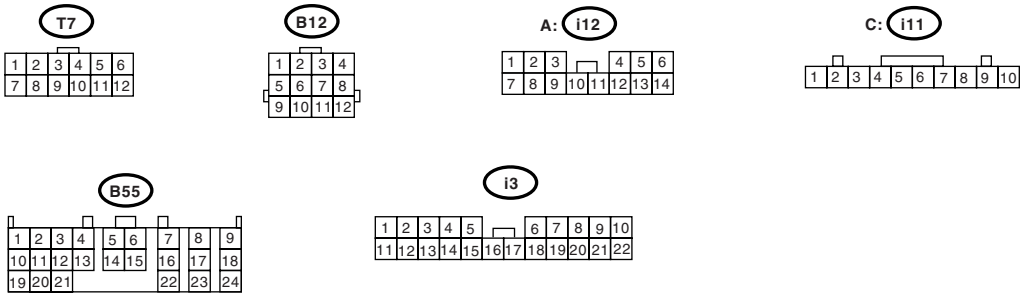

AT-01155

Step		Check	Yes	No
1	**CHECK "P" RANGE SWITCH.**	When the "P" range is selected, does LED light up?	Go to step **2.**	Go to step **22.**
2	**CHECK INDICATOR LIGHT.**	Does the combination meter "P" range indicator illuminate?	Go to step **3.**	Go to step **26.**
3	**CHECK "P" RANGE SWITCH.**	When the "R" range is selected, does "P" range LED light up?	Go to step **28.**	Go to step **4.**
4	**CHECK "R" RANGE SWITCH.**	When the "R" range is selected, does LED light up?	Go to step **5.**	Go to step **29.**
5	**CHECK INDICATOR LIGHT.**	Does the combination meter "R" range indicator illuminate?	Go to step **6.**	Go to step **32.**
6	**CHECK "R" RANGE SWITCH.**	When the "N" range is selected, does "R" range LED light up?	Go to step **34.**	Go to step **7.**
7	**CHECK "N" RANGE SWITCH.**	When the "N" range is selected, does LED light up?	Go to step **8.**	Go to step **35.**
8	**CHECK INDICATOR LIGHT.**	Does the combination meter "N" range indicator illuminate?	Go to step **9.**	Go to step **38.**
9	**CHECK "N" RANGE SWITCH.**	When the "D" range is selected, does "N" range LED light up?	Go to step **40.**	Go to step **10.**
10	**CHECK "D" RANGE SWITCH.**	When the "D" range is selected, does LED light up?	Go to step **11.**	Go to step **41.**
11	**CHECK INDICATOR LIGHT.**	Does the combination meter "D" range indicator illuminate?	Go to step **12.**	Go to step **44.**
12	**CHECK "D" RANGE SWITCH.**	When the "3" range is selected, does "D" range LED light up?	Go to step **46.**	Go to step **13.**
13	**CHECK "3" RANGE SWITCH.**	When the "3" range is selected, does LED light up?	Go to step **14.**	Go to step **47.**
14	**CHECK INDICATOR LIGHT.**	Does the combination meter "3" range indicator illuminate?	Go to step **15.**	Go to step **50.**
15	**CHECK "3" RANGE SWITCH.**	When the "2" range is selected, does "3" range LED light up?	Go to step **52.**	Go to step **16.**
16	**CHECK "2" RANGE SWITCH.**	When the "2" range is selected, does LED light up?	Go to step **17.**	Go to step **53.**
17	**CHECK INDICATOR LIGHT.**	Does the combination meter "2" range indicator illuminate?	Go to step **18.**	Go to step **56.**
18	**CHECK "2" RANGE SWITCH.**	When the "1" range is selected, does "2" range LED light up?	Go to step **58.**	Go to step **19.**
19	**CHECK "1" RANGE SWITCH.**	When the "1" range is selected, does LED light up?	Go to step **20.**	Go to step **59.**
20	**CHECK INDICATOR LIGHT.**	Does the combination meter "1" range indicator illuminate?	Go to step **21.**	Go to step **62.**
21	**CHECK "1" RANGE SWITCH.**	When the "2" range is selected, does "1" range LED light UP?	Go to step **64.**	Go to step CHECK HOLD SWITCH. <Ref. to 4AT-120, CHECK HOLD SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>

	Step	Check	Yes	No
22	**CHECK HARNESS CONNECTOR BETWEEN INHIBITOR SWITCH AND CHASSIS GROUND.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from inhibitor switch. 3)Measure the resistance of harness between inhibitor switch and chassis ground. ***Connector & terminal*** ***(T7) No. 5 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **23.**	Repair the open circuit in harness between inhibitor switch connector and chassis ground, and poor contact in coupling connector.
23	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 1 — (T7) No. 9:***	Is the resistance less than 1 Ω?	Go to step **24.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.
24	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to “P” range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 1 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **25.**	Go to step **65.**
25	**CHECK INPUT SIGNAL FOR TCM.** 1)Position the select lever to any other than “P” range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
26	**CHECK “P” RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the “P” range indicator light bulb from combination meter.	Is the “P” range indicator light bulb OK?	Go to step **27.**	Replace the “P” range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
27	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 1 — (i12) No. 14:***	Is the resistance more than 1 Ω?	Go to step **65.**	Repair the open circuit in harness between TCM connector and combination meter, and poor contact in coupling connector.
28	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 1 — Chassis ground:***	Is the resistance less than 1 MΩ?	Go to step **29.**	Repair the ground short circuit in “P” range circuit.

	Step	Check	Yes	No
29	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 3 — (T7) No. 8:***	Is the resistance less than 1 Ω?	Go to step **30.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.
30	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to “R” range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 3 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **31.**	Go to step **65.**
31	**CHECK INPUT SIGNAL FOR TCM.** 1)Position the select lever to any other than “R” range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 3 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
32	**CHECK “R” RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the “R” range indicator light bulb from combination meter.	Is “R” range indicator light bulb OK?	Go to step **33.**	Replace the “R” range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
33	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 3 — (i12) No. 13:***	Is the resistance less than 1 Ω?	Go to step **65.**	Repair the open circuit in harness between TCM connector and combination meter, and poor contact in TCM connector.
34	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 3 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **35.**	Repair the ground short circuit in “R” range circuit.
35	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 14 — (T7) No. 10:***	Is the resistance less than 1 Ω?	Go to step **36.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

	Step	Check	Yes	No
36	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to “N” range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 14 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **37.**	Go to step **65.**
37	**CHECK INPUT SIGNAL FOR TCM.** 1)Position the select lever to any other than “N” range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 14 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
38	**CHECK “N” RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the “N” range indicator light bulb from combination meter.	Is the “N” range indicator light bulb OK?	Go to step **39.**	Replace the “N” range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
39	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 14 — (i12) No. 12:***	Is the resistance less than 1 Ω?	Go to step **65.**	Repair the open circuit in harness between TCM connector and combination meter, and poor contact in TCM connector.
40	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 14 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **41.**	Repair the ground short circuit in “N” range circuit.
41	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 4 — (T7) No. 3:***	Is the resistance less than 1 Ω?	Go to step **42.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.
42	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to “D” range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 4 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **43.**	Go to step **65.**

	Step	Check	Yes	No
43	**CHECK INPUT SIGNAL FOR TCM.** 1)Position select lever to any other than "D" range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 4 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
44	**CHECK "D" RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the "D" range indicator light bulb from combination meter.	Is the "D" range indicator light bulb OK?	Go to step **45.**	Replace the "D" range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
45	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 4 — (i12) No. 11:***	Is the resistance less than 1 Ω?	Go to step **65.**	Repair the open circuit in harness between TCM connector and combination meter, and TCM connector.
46	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **47.**	Repair the ground short circuit in "D" range circuit.
47	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 5 — (T7) No. 11:***	Is the resistance less than 1 Ω?	Go to step **48.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.
48	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to "3" range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 5 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **49.**	Go to step **65.**
49	**CHECK INPUT SIGNAL FOR TCM.** 1)Position the select lever to any other than "3" range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 5 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

Step		Check	Yes	No
50	**CHECK "3" RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the "3" range indicator light bulb from combination meter.	Is the "3" range indicator light bulb OK?	Go to step **51.**	Replace the "3" range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
51	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 5 — (i12) No. 10:***	Is the resistance more than 1 Ω?	Go to step **65.**	Repair the open circuit in harness between TCM connector and combination meter, and poor contact in TCM connector.
52	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 5 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **53.**	Repair the ground short circuit in "3" range circuit.
53	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 6 — (T7) No. 4:***	Is the resistance less than 1 Ω?	Go to step **54.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.
54	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to "2" range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 6 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **55.**	Go to step **65.**
55	**CHECK INPUT SIGNAL FOR TCM.** 1)Position the select lever to any other than "2" range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 6 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
56	**CHECK "2" RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the "2" range indicator light bulb from combination meter.	Is the "2" range indicator light bulb OK?	Go to step **57.**	Replace the "2" range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>

	Step	Check	Yes	No
57	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 6 — (i12) No. 4:***	Is the resistance less than 1 Ω?	Go to step **65.**	Repair the open circuit in harness between TCM and combination meter, and poor contact in TCM connector.
58	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **59.**	Repair the ground short circuit in "2" range circuit.
59	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM and inhibitor switch. 3)Measure the resistance of harness between TCM and inhibitor switch connector. ***Connector & terminal*** ***(B55) No. 7 — (T7) No. 6:***	Is the resistance less than 1 Ω?	Go to step **60.**	Repair the open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.
60	**CHECK INPUT SIGNAL FOR TCM.** 1)Turn the ignition switch to OFF. 2)Connect the connector to TCM and inhibitor switch. 3)Turn the ignition switch to ON. 4)Move the select lever to "1" range. 5)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 7 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **61.**	Go to step **65.**
61	**CHECK INPUT SIGNAL FOR TCM.** 1)Position the select lever to any other than "1" range. 2)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 7 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **65.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
62	**CHECK "1" RANGE INDICATOR LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the "1" range indicator light bulb from combination meter.	Is the "1" range indicator light bulb OK?	Go to step **63.**	Replace the "1" range indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
63	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Disconnect the connectors from TCM and combination meter. 2)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B55) No. 7 — (i12) No. 5:***	Is the resistance less than 1Ω?	Go to step **65.**	Repair the open circuit in harness between TCM and combination meter, poor contact in TCM connector.

	Step	Check	Yes	No
64	**CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from TCM, inhibitor switch and combination meter. 3)Measure the resistance of harness between TCM and chassis ground. ***Connector & terminal*** ***(B55) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **65.**	Repair the ground short circuit in "1" range circuit.
65	**CHECK POOR CONTACT.**	Is there poor contact in inhibitor switch circuit?	Repair the poor contact.	Adjust the inhibitor switch and select cable. <Ref. to 4AT-49, ADJUSTMENT, Inhibitor Switch.> and <Ref. to CS-13, Select Cable.>

G: CHECK HOLD SWITCH

DIAGNOSIS:

- The LED does not come on when HOLD switch is ON.
- The HOLD switch circuit is open or shorted.

TROUBLE SYMPTOM:

- The 2nd gear is not held.
- Failure of vehicle to start in 2nd gear at “2”, “3”, “D” ranges.

WIRING DIAGRAM:

LHD MODEL

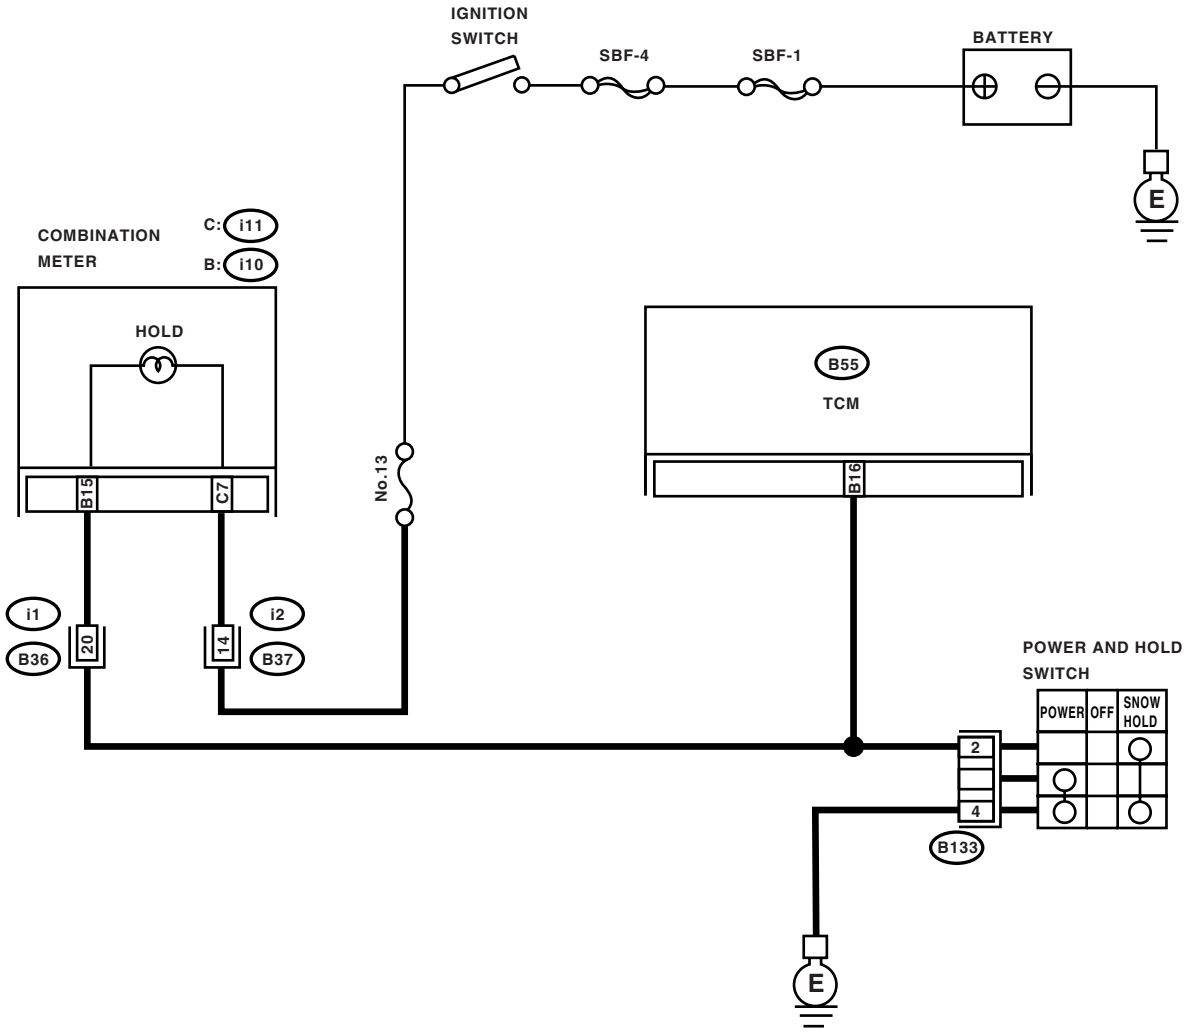

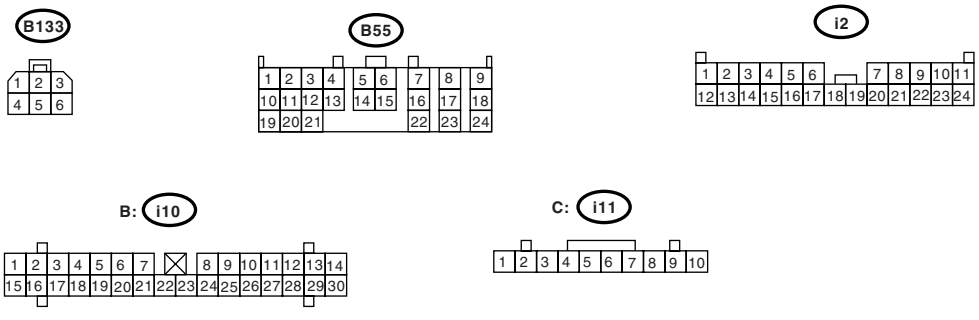

AT-01156

RHD MODEL

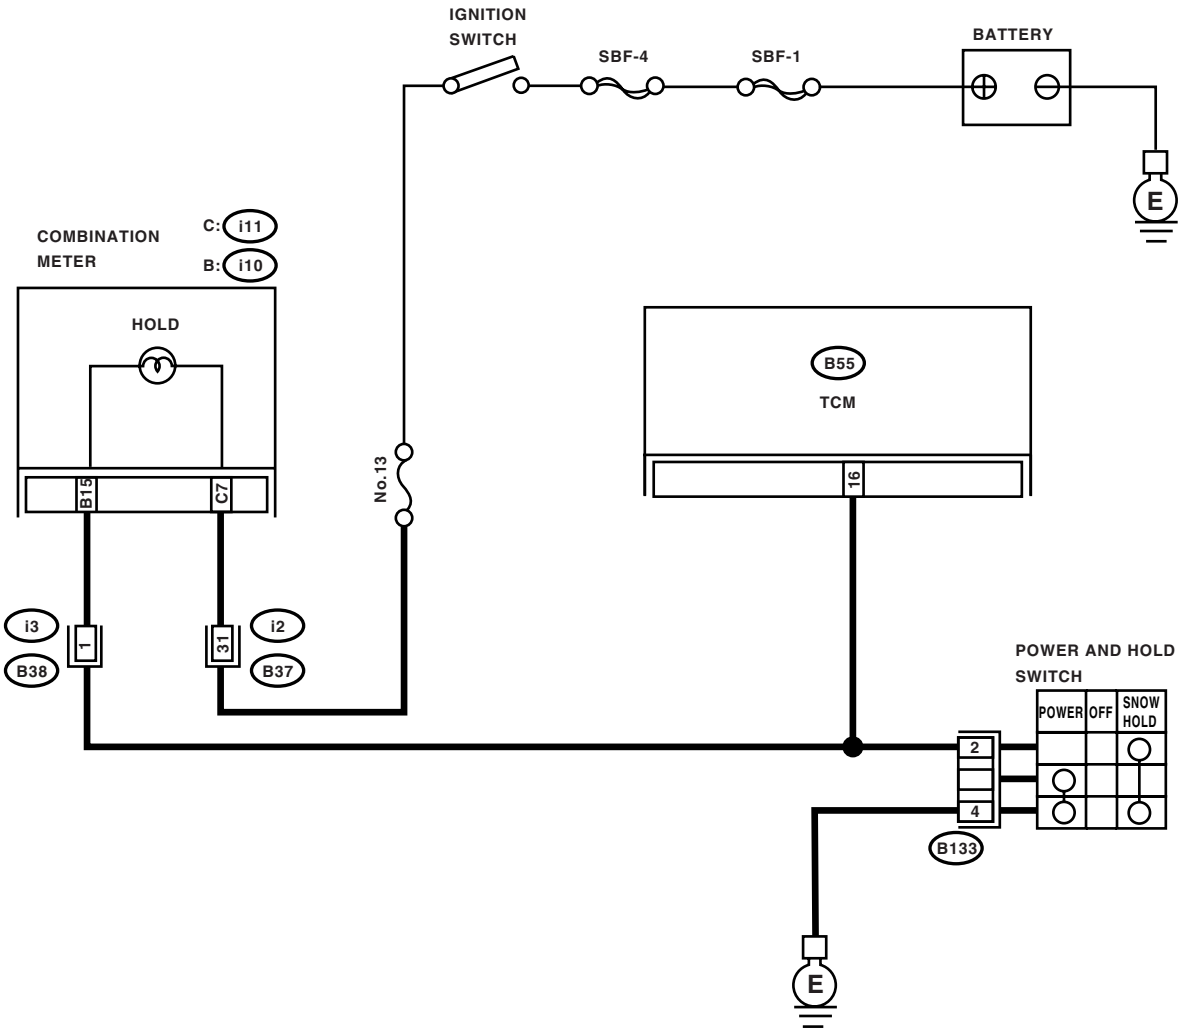

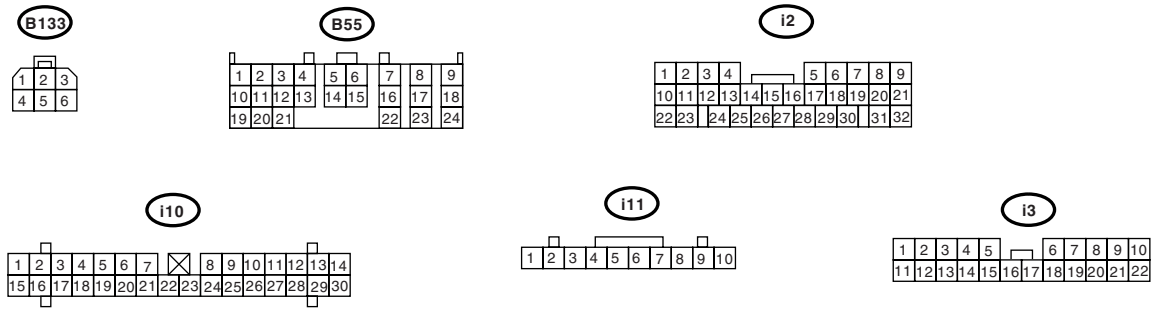

AT-01157

Step		Check	Yes	No
1	**CHECK HOLD SWITCH OPERATION.**	When the HOLD switch is turned to OFF, does LED light up?	Go to step **5.**	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK HOLD SWITCH OPERATION.**	When the HOLD switch is turned to ON, does LED light up?	Go to step CHECK SPORT SHIFT SWITCH. <Ref. to 4AT-124, CHECK SPORT SHIFT SWITCH, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Go to step **3.**
3	**CHECK HOLD INDICATOR LIGHT.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the HOLD indicator light bulb from combination meter.	Is the HOLD indicator light bulb OK?	Go to step **4.**	Replace the HOLD indicator light bulb. <Ref. to IDI-11, Combination Meter Assembly.>
4	**CHECK HOLD SWITCH GROUND LINE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from HOLD switch. 3)Measure the resistance of harness connector between HOLD switch and chassis ground. ***Connector & terminal*** ***(B133) No. 4 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between HOLD switch and chassis ground.
5	**CHECK HOLD SWITCH.** 1)Turn the HOLD switch to ON. 2)Measure the resistance between terminals of HOLD switch. ***Terminals*** ***No. 4 — No. 2:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the HOLD switch.
6	**CHECK HOLD SWITCH.** 1)Turn the HOLD switch to OFF. 2)Measure the resistance between terminals of HOLD switch. ***Terminals*** ***No. 4 — No. 2:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the HOLD switch.
7	**CHECK HARNESS CONNECTOR BETWEEN TCM AND HOLD SWITCH.** 1)Disconnect the connector TCM and combination meter. 2)Measure the resistance of harness connector between TCM and HOLD switch. ***Connector & terminal*** ***(B55) No. 16 — (B133) No. 2:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between TCM and HOLD switch connector and poor contact in coupling connector.
8	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** Measure the resistance of harness connector TCM and combination meter. ***Connector & terminal*** ***(B55) No. 16 — (i10) No. 15:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the open circuit in harness between TCM and combination meter, and poor contact in coupling connector.
9	**CHECK HARNESS CONNECTOR BETWEEN TCM AND HOLD SWITCH.** Measure the resistance of harness connector between TCM and chassis ground to make sure that circuit does not short. ***Connector & terminal*** ***(B55) No. 16 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **10.**	Repair the short circuit in harness between TCM and HOLD switch connector.

	Step	Check	Yes	No
10	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connectors to TCM and HOLD switch. 2)Turn the ignition switch to ON (engine OFF). 3)Measure the signal voltage for TCM while turning HOLD switch to OFF. ***Connector & terminal*** ***(B55) No. 16 (+) — Chassis ground (–):***	Is the voltage more than 8 V?	Go to step **11.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
11	**CHECK INPUT SIGNAL FOR TCM.** Measure the signal voltage for TCM while turning HOLD switch to ON. ***Connector & terminal*** ***(B55) No. 16 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **12.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
12	**CHECK POOR CONTACT.**	Is there poor contact?	Repair the poor contact.	A temporary poor contact of the connector or harness or connector in HOLD switch circuit.

H: CHECK SPORT SHIFT SWITCH

DIAGNOSIS:

The SPORT shift switch input signal circuit is open or shorted.

TROUBLE SYMPTOM:

- No SPORT shift mode occurs.
- Does not shift gears in SPORT shift mode.

WIRING DIAGRAM:

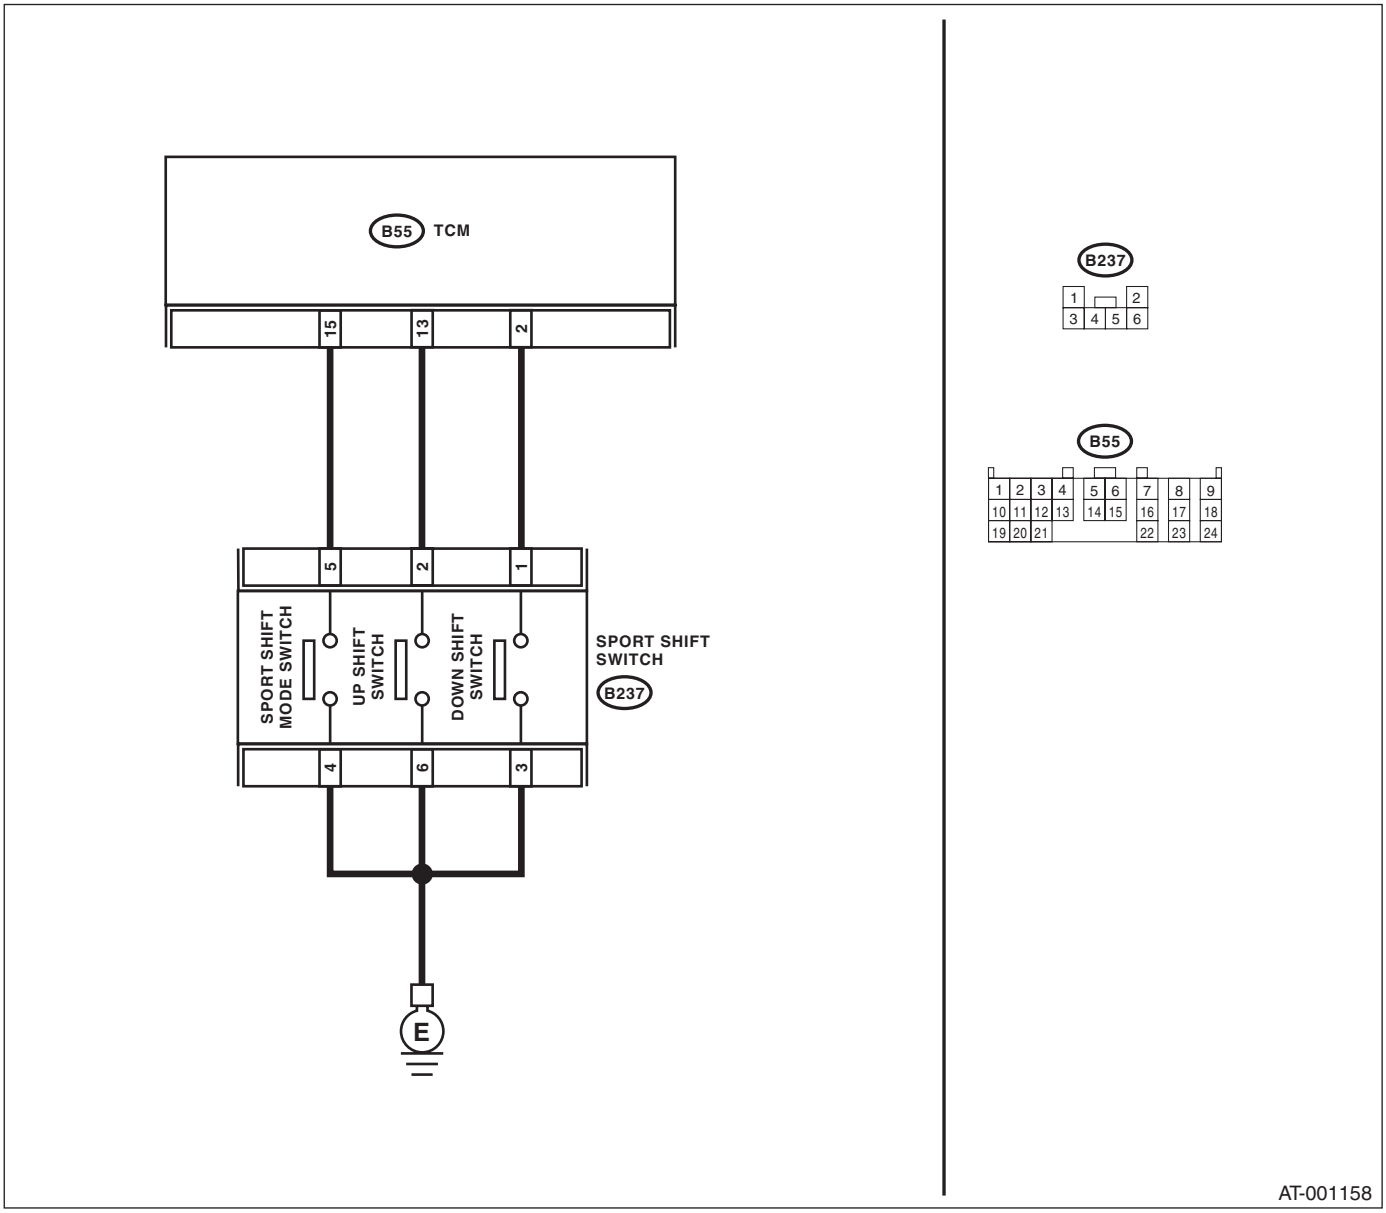

	Step	Check	Yes	No
1	**CHECK VEHICLE.**	Is the target model equipped with SPORT shift?	Go to step **2.**	Go to step SYMPTOM RELATED DIAGNOSTIC. <Ref. to 4AT-133, Symptom Related Diagnostic.>
2	**CHECK SPORT SHIFT SWITCH.**	Does the LED light up when select lever is moved to SPORT shift mode?	Go to step **3.**	Go to step **5.**
3	**CHECK SPORT SHIFT SWITCH.**	Does the LED light up when select lever is moved to shift up side?	Go to step **4.**	Go to step **12.**
4	**CHECK SPORT SHIFT SWITCH.**	Does the LED light up when select lever is moved to shift down side?	Go to "Inspection of SPORT shift indicator" procedures. <Ref. to 4AT-129, CHECK SPORT SHIFT INDICATOR, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Go to step **19.**
5	**CHECK SPORT SHIFT SWITCH GROUND LINE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from SPORT shift switch. 3)Measure the resistance of harness between SPORT shift switch connector and chassis ground. ***Connector & terminal*** ***(B237) No. 4 —- Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between SPORT shift switch and chassis ground.
6	**CHECK SPORT SHIFT SWITCH.** Measure the resistance between SPORT shift switch terminals. ***Terminals*** ***No. 4 —- No. 5:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Replace the lever plate assembly.
7	**CHECK SPORT SHIFT SWITCH.** 1)Move the select lever to SPORT shift mode. 2)Measure the resistance between SPORT shift switch terminals. ***Terminals*** ***No. 4 — No. 5:***	Is the resistance less than 1 Ω?	Go to step **8.**	Replace the lever plate assembly.
8	**CHECK HARNESS CONNECTOR BETWEEN TCM AND SPORT SHIFT SWITCH.** 1)Disconnect the connector from TCM. 2)Measure the resistance of harness between TCM connector and SPORT shift switch connector. ***Connector & terminal*** ***(B237) No. 5 — (B55) No. 15:***	Is the resistance less than 1 Ω?	Go to step **9.**	Repair the open circuit in harness between SPORT shift switch connector and TCM connector and poor contact in coupling connector.

	Step	Check	Yes	No
9	**CHECK HARNESS CONNECTOR BETWEEN TCM AND SPORT SHIFT SWITCH.** 1)Disconnect the connector from TCM. 2)Measure the resistance of harness between SPORT shift switch connector and chassis ground. ***Connector & terminal*** ***(B237) No. 5 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **10.**	Repair the short circuit in harness between SPORT shift switch connector and TCM connector.
10	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the connector to TCM and SPORT shift switch. 2)Turn the ignition switch to ON. (Engine is stopped.) 3)Move the select lever to normal mode. 4)Measure the signal voltage for TCM. ***Connector & terminal*** ***(B55) No. 15 (+) — Chassis ground (–):***	Is the voltage more than 9 V?	Go to step **11.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
11	**CHECK INPUT SIGNAL FOR TCM.** 1)Move the select lever to SPORT shift mode. 2)Measure the signal voltage for TCM. ***Connector & terminal*** ***(B55) No. 15 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in sport shift switch circuit.	Go to step **26.**
12	**CHECK SPORT SHIFT SWITCH GROUND LINE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from SPORT shift switch. 3)Measure the resistance of harness between SPORT shift switch connector and chassis ground. ***Connector & terminal*** ***(B237) No. 6 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **13.**	Repair the open circuit in harness between SPORT shift switch and chassis ground.
13	**CHECK SPORT SHIFT SWITCH.** 1)Measure the resistance between SPORT shift switch terminals. ***Terminals*** ***No. 6 — No. 2:***	Is the resistance more than 1 MΩ?	Go to step **14.**	Replace the guide plate assembly.
14	**CHECK SPORT SHIFT SWITCH.** 1)Move the select lever to SPORT shift mode. 2)Measure the resistance between SPORT shift switch terminals. ***Terminals*** ***No. 6 — No. 2:***	Is the resistance less than 1 Ω?	Go to step **15.**	Replace the guide plate assembly.

	Step	Check	Yes	No
15	**CHECK HARNESS CONNECTOR BETWEEN TCM AND SPORT SHIFT SWITCH.** 1)Disconnect the connector from TCM. 2)Measure the resistance of harness between TCM connector and SPORT shift switch connector. ***Connector & terminal*** ***(B237) No. 2 — (B55) No. 13:***	Is the resistance less than 1 Ω?	Go to step **16.**	Repair the open circuit in harness between SPORT shift switch connector and TCM connector and poor contact in coupling connector.
16	**CHECK HARNESS CONNECTOR BETWEEN TCM AND SPORT SHIFT SWITCH.** 1)Disconnect the connector from steering roll connector. 2)Measure the resistance of harness between SPORT shift switch connector and chassis ground. ***Connector & terminal*** ***(B237) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **17.**	Repair the short circuit in harness between SPORT shift switch connector and TCM connector.
17	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the all connectors. 2)Turn the ignition switch to ON. (Engine is stopped.) 3)Measure signal voltage for TCM. ***Connector & terminal*** ***(B55) No. 13 (+) — Chassis ground (–):***	Is the voltage more than 9 V?	Go to step **18.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
18	**CHECK INPUT SIGNAL FOR TCM.** 1)Move the select lever to shift up side. 2)Measure the signal voltage for TCM. ***Connector & terminal*** ***(B55) No. 13 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in sport shift switch circuit.	Go to step **26.**
19	**CHECK SPORT SHIFT SWITCH GROUND LINE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from SPORT shift switch. 3)Measure the resistance of harness between SPORT shift switch connector and chassis ground. ***Connector & terminal*** ***(B237) No. 3 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **20.**	Repair the open circuit in harness between SPORT shift switch and chassis ground.
20	**CHECK SPORT SHIFT SWITCH.** Measure the resistance between SPORT shift switch terminals. ***Terminals*** ***No. 3 — No. 1:***	Is the resistance more than 1 MΩ?	Go to step **21.**	Replace the guide plate assembly.
21	**CHECK SPORT SHIFT SWITCH.** 1)Move the select lever to SPORT shift mode. 2)Measure the resistance between SPORT shift switch terminals. ***Terminals*** ***No. 3 — No. 1:***	Is the resistance less than 1 Ω?	Go to step **22.**	Replace the guide plate assembly.

	Step	Check	Yes	No
22	**CHECK HARNESS CONNECTOR BETWEEN TCM AND SPORT SHIFT SWITCH.** 1)Disconnect the connector from TCM. 2)Measure the resistance of harness between TCM connector and SPORT shift switch connector. ***Connector & terminal*** ***(B237) No. 1 — (B55) No. 2:***	Is the resistance less than 1 Ω?	Go to step **23.**	Repair the open circuit in harness between SPORT shift switch connector and TCM connector and poor contact in coupling connector.
23	**CHECK HARNESS CONNECTOR BETWEEN TCM AND SPORT SHIFT SWITCH.** 1)Disconnect the steering roll connector. 2)Measure the resistance of harness between SPORT shift switch connector and chassis ground. ***Connector & terminal*** ***(B237) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **24.**	Repair the short circuit in harness between SPORT shift switch connector and TCM connector.
24	**CHECK INPUT SIGNAL FOR TCM.** 1)Connect the all connectors. 2)Turn the ignition switch to ON. (Engine is stopped.) 3)Measure the signal voltage for TCM. ***Connector & terminal*** ***(B55) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 9 V?	Go to step **25.**	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>
25	**CHECK INPUT SIGNAL FOR TCM.** 1)Move the select lever to shift up side. 2)Measure the signal voltage for TCM. ***Connector & terminal*** ***(B55) No. 2 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Even if the POWER indicator lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair the harness or connector in sport shift switch circuit.	Go to step **26.**
26	**CHECK POOR CONTACT.**	Is there poor contact in SPORT shift switch circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

I: CHECK SPORT SHIFT INDICATOR

DIAGNOSIS:

The SPORT shift indicator output signal circuit is open or shorted.

TROUBLE SYMPTOM:

- The SPORT shift indicator does not illuminate or remains illuminated.
- The SPORT shift indicator display does not change.

WIRING DIAGRAM:

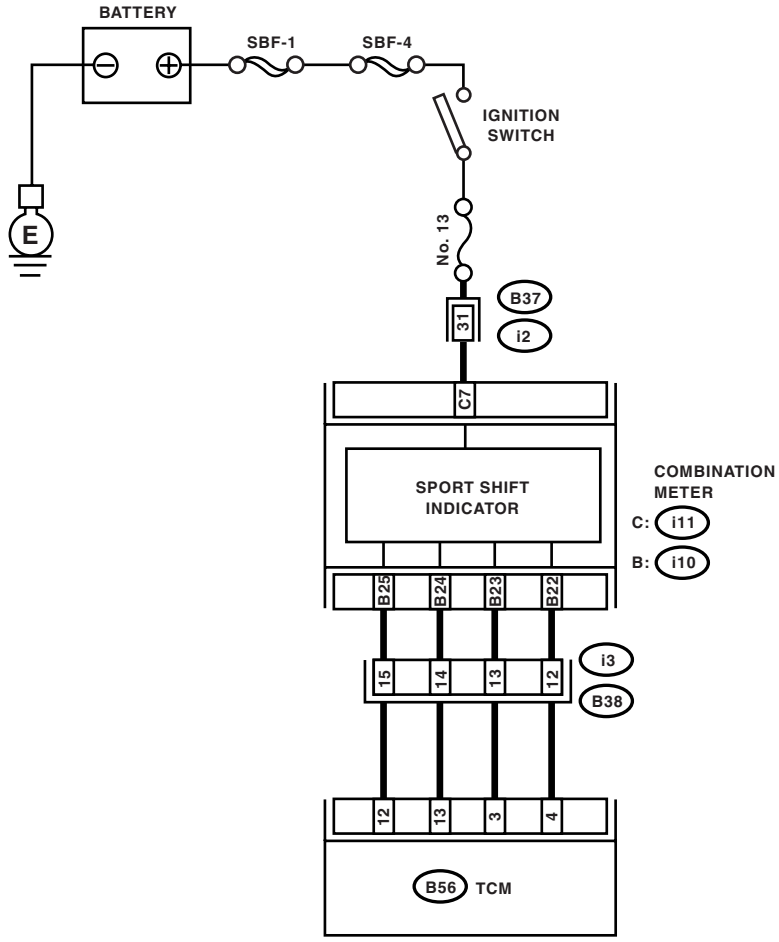

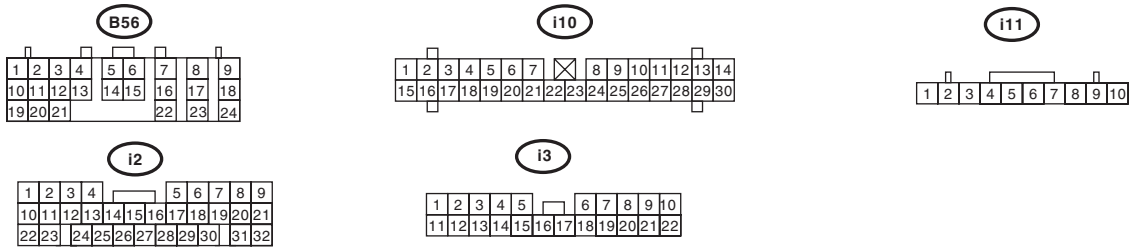

AT-01159

	Step	Check	Yes	No
1	**CHECK SPORT SHIFT INDICATOR.**	Does the SPORT shift indicator operate normally when driving in SPORT shift mode?	<Ref. to 4AT-131, CHECK BUZZER, Diagnostic Procedure without Diagnostic Trouble Code (DTC).>	Go to step **2.**
2	**CHECK COMBINATION METER.**	Do the meters and indicators other than SPORT shift indicator operate normally?	Go to step **3.**	Check the combination meter.
3	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and combination meter. 3)Measure the resistance of harness between TCM and combination meter. ***Connector & terminal*** ***(B56) No. 3 — (i10) No. 23:*** ***(B56) No. 4 — (i10) No. 22:*** ***(B56) No. 12 — (i10) No. 25:*** ***(B56) No. 13 — (i10) No. 24:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the open circuit in harness between TCM and combination meter connector and poor contact in coupling connector.
4	**CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.** Measure the resistance between TCM and chassis ground. ***Connector & terminal*** ***(B56) No. 3 — Chassis ground:*** ***(B56) No. 4 — Chassis ground:*** ***(B56) No. 12 — Chassis ground:*** ***(B56) No. 13 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Repair the short circuit in harness between TCM and combination meter connector.
5	**CHECK OUTPUT SIGNAL EMITTED FROM TCM.** 1)Connect the connector to TCM and combination meter. 2)Turn the ignition switch to ON. (Engine is stopped.) 3)Measure the voltage between TCM and chassis ground. ***Connector & terminal*** ***(B56) No. 3 (+) — Chassis ground (–):*** ***(B56) No. 4 (+) — Chassis ground (–):*** ***(B56) No. 12 (+) — Chassis ground (–):*** ***(B56) No. 13 (+) — Chassis ground (–):***	Is the voltage more than 4 V?	Go to step **6.**	Replace the combination meter.
6	**CHECK POOR CONTACT.**	Is there poor contact in SPORT shift indicator circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

J: CHECK BUZZER

DIAGNOSIS:

The Buzzer output signal circuit is open or shorted.

TROUBLE SYMPTOM:

The Buzzer remains sounded.

WIRING DIAGRAM:

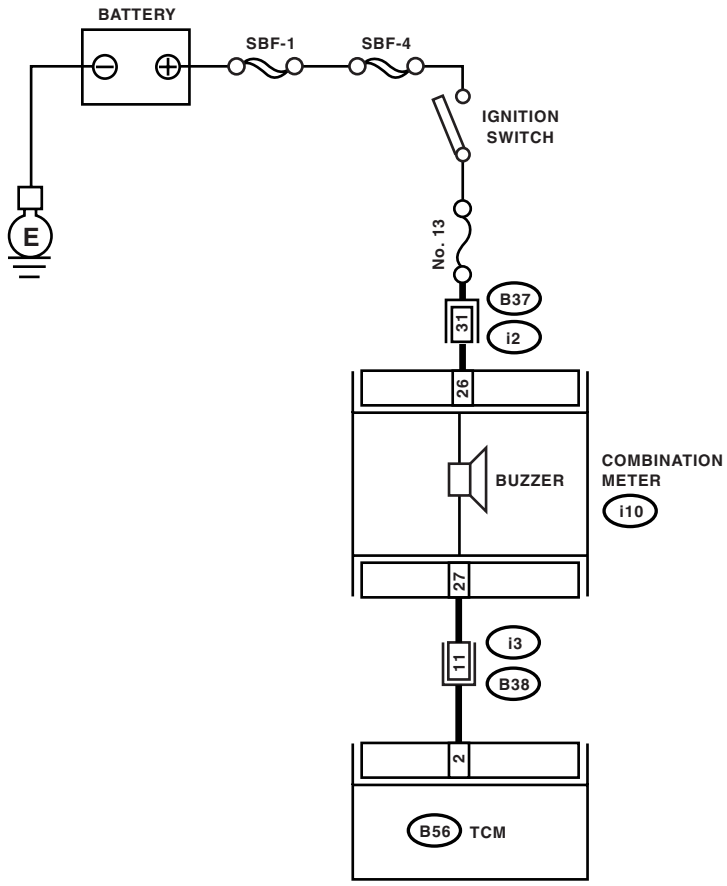

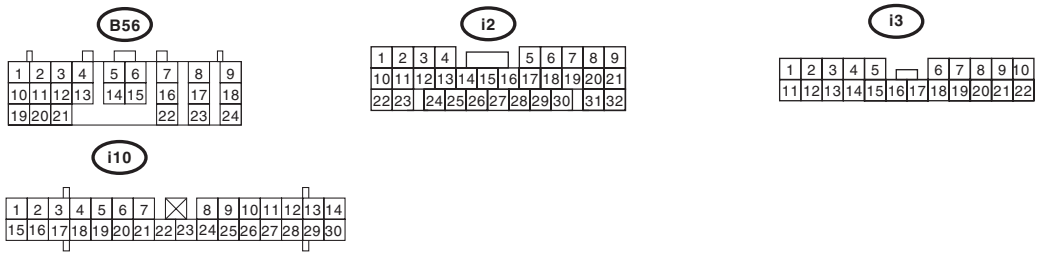

AT-01160

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN TCM AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from combination meter and TCM. 3) Measure the resistance between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 21 — Chassis ground:***	Is the resistance more than1 MΩ?	Go to step **2.**	Repair the short circuit in harness between TCM and combination meter connector.
2	**CHECK COMBINATION METER.** 1)Connect the connector to combination meter. 2)Turn the ignition switch to ON. (Engine is stopped.)	Does the buzzer sound?	Replace the combination meter.	Go to step **3.**
3	**CHECK POOR CONTACT.**	Is there poor contact in buzzer circuit?	Repair the poor contact.	Replace the TCM. <Ref. to 4AT-70, Transmission Control Module (TCM).>

16.Symptom Related Diagnostic

A: INSPECTION

Symptom	Problem parts
Starter does not rotate when select lever is in “P” or “N” range; starter rotates when select lever is in “R”, “D”, “3” or “2” range.	• Inhibitor switch • Select cable • Select lever • Starter motor and harness
Abnormal noise when select lever is in “P” or “N” range.	• Strainer • Transfer duty solenoid • Oil pump • Drive plate • ATF level too high or too low
Hissing noise occurs during standing start.	• Strainer • ATF level too high or too low
Noise occurs while driving in “D1”.	• Final gear • Planetary gear • Reduction gear • Differential gear oil level too high or too low
Noise occurs while driving in “D2”.	
Noise occurs while driving in “D3”.	• Final gear • Low & reverse brake • Reduction gear • Differential gear oil level too high or too low
Noise occurs while driving in “D4”.	• Final gear • Low & reverse brake • Planetary gear • Reduction gear • Differential gear oil level too high or too low
Engine stalls while shifting from one range to another.	• Control valve • Lock-up damper • Engine performance • Input shaft
Vehicle moves when select lever is in “N” range.	• TCM • Low clutch
Shock occurs when select lever is moved from “N” to “D” range.	• TCM • Harness • Control valve • ATF deterioration
Excessive time lag occurs when select lever is moved from “N” to “D” range.	• Control valve • Low clutch • Line pressure duty solenoid • Seal ring • Front gasket transmission case
Shock occurs when select lever is moved from “N” to “R” range.	• TCM • Harness • Control valve • ATF deterioration
Excessive time lag occurs when select lever is moved from “N” to “R” range.	• Control valve • Low & reverse clutch • Reverse clutch • Line pressure duty solenoid • Seal ring • Front gasket transmission case
Vehicle does not start in any shift range (engine stalls).	• Parking brake mechanism • Planetary gear

Symptom	Problem parts
Vehicle does not start in any shift range (engine revving up).	• Strainer • Line pressure duty solenoid • Control valve • Drive pinion • Hypoid gear • Axle shaft • Differential gear • Oil pump • Input shaft • Output shaft • Planetary gear • Drive plate • ATF level too low • Front gasket transmission case
Vehicle does not start in “R” range only (engine revving up).	• Select cable • Select lever • Control valve • Low & reverse clutch • Reverse clutch
Vehicle does not start in “R” range only (engine stalls).	• Low clutch • 2-4 brake • Planetary gear • Parking brake mechanism
Vehicle does not start in “D”, “3” range only (engine revving up).	• Low clutch • One-way clutch
Vehicle does not start in “D”, “3” or “2” range only (engine revving up).	• Low clutch
Vehicle does not start in “D”, “3” or “2” range only (engine stalls).	• Reverse clutch
Vehicle starts in “R” range only (engine revving up).	• Control valve
Acceleration during standing starts is poor (high stall rpm).	• Control valve • Low clutch • Reverse clutch • ATF level too low • Front gasket transmission case • Differential gear oil level too high or too low
Acceleration during standing starts is poor (low stall rpm).	• Oil pump • Torque converter one-way clutch • Engine performance
Acceleration is poor when select lever is in “D”, “3” or “2” range (normal stall rpm).	• TCM • Control valve • High clutch • 2-4 brake • Planetary gear
Acceleration is poor when select lever is in “R” (normal stall rpm).	• Control valve • High clutch • 2-4 brake • Planetary gear
No shift occurs from 1st to 2nd gear.	• TCM • Rear vehicle speed sensor • Front vehicle speed sensor • Throttle position sensor • Shift solenoid 1 • Control valve • 2-4 brake
No shift occurs from 2nd to 3rd gear.	• TCM • Control valve • High clutch • Shift solenoid 2

Symptom	Problem parts
No shift occurs from 3rd to 4th gear.	• TCM • Shift solenoid 1 • ATF temperature sensor • Control valve • 2-4 brake
Engine brake is not effected when select lever is in “3” range.	• Inhibitor switch • TCM • Throttle position sensor • Control valve
Engine brake is not effected when select lever is in “3” or “2” range.	• Control valve
Engine brake is not effected when select lever is in “1” range.	• Control valve • Low & reverse brake
Shift characteristics are erroneous.	• Inhibitor switch • TCM • Front vehicle speed sensor • Rear vehicle speed sensor • Throttle position sensor • Control valve • Ground earth
No lock-up occurs.	• TCM • Throttle position sensor • ATF temperature sensor • Control valve • Lock-up facing • Engine speed signal
Parking brake is not effected.	• Select cable • Select lever • Parking mechanism
Shift lever cannot be moved or is hard to move from “P” range.	
ATF spurts out.	• ATF level too high
Differential oil spurts out.	• Differential gear oil too high
Differential oil level changes excessively.	• Seal pipe • Double oil seal
Odor is produced from ATF supply pipe.	• High clutch • 2-4 brake • Low & reverse clutch • Reverse clutch • Lock-up facing • ATF deterioration
Shock occurs from 1st to 2nd gear.	• TCM • Throttle position sensor • 2-4 brake duty solenoid • ATF temperature sensor • Line pressure duty solenoid • Control valve • 2-4 brake • ATF deterioration • Engine performance • 2-4 brake timing solenoid
Slippage occurs from 1st to 2nd gear.	• TCM • Throttle position sensor • 2-4 brake duty solenoid • ATF temperature sensor • Line pressure duty solenoid • Control valve • 2-4 brake • 2-4 brake timing solenoid • High clutch

Symptom	Problem parts
Shock occurs from 2nd to 3rd gear.	• TCM • Throttle position sensor • 2-4 brake duty solenoid • ATF temperature sensor • Line pressure duty solenoid • Control valve • High clutch • 2-4 brake • ATF deterioration • Engine performance • 2-4 brake timing solenoid
Slippage occurs from 2nd to 3rd gear.	• TCM • Throttle position sensor • 2-4 brake duty solenoid • ATF temperature sensor • Line pressure duty solenoid • Control valve • High clutch • 2-4 brake • 2-4 brake timing solenoid
Shock occurs from 3rd to 4th gear.	• TCM • Throttle position sensor • 2-4 brake duty solenoid • ATF temperature sensor • Line pressure duty solenoid • Control valve • 2-4 brake timing solenoid • 2-4 brake • ATF deterioration • Engine performance • Low clutch timing solenoid • Low clutch
Slippage occurs from 3rd to 4th gear.	• TCM • Throttle position sensor • 2-4 brake duty solenoid • ATF temperature sensor • Line pressure duty solenoid • Control valve • 2-4 brake • 2-4 brake timing solenoid
Shock occurs when select lever is moved from “3” to “2” range.	• TCM • Throttle position sensor • ATF temperature sensor • Line pressure duty solenoid • Control valve • 2-4 brake duty solenoid • 2-4 brake • ATF deterioration • 2-4 brake timing solenoid
Shock occurs when select lever is moved from “D” to “1” range.	• TCM • Throttle position sensor • ATF temperature sensor • Line pressure duty solenoid • Control valve • ATF deterioration • 2-4 brake duty solenoid • 2-4 brake timing solenoid • Low clutch timing solenoid

Symptom	Problem parts
Shock occurs when select lever is moved from “2” to “1” range.	• TCM • Throttle position sensor • ATF temperature sensor • Line pressure duty solenoid • Control valve • Low & reverse clutch • ATF deterioration • 2-4 brake duty solenoid • 2-4 brake timing solenoid • Low clutch timing solenoid
Shock occurs when accelerator pedal is released at medium speeds.	• TCM • Throttle position sensor • ATF temperature sensor • Line pressure duty solenoid • Control valve • Lock-up damper • Engine performance • 2-4 brake duty solenoid • 2-4 brake timing solenoid • Low clutch timing solenoid
Vibration occurs during straight-forward operation.	• TCM • Lock-up duty solenoid • Lock-up facing • Lock-up damper • HOLD switch
Vibration occurs during turns (tight corner “braking” phenomenon).	• TCM • Front vehicle speed sensor • Rear vehicle speed sensor • Throttle position sensor • ATF temperature sensor • Transfer clutch • Transfer valve • Transfer duty solenoid • ATF deterioration • Harness • HOLD switch
Front wheel slippage occurs during standing starts.	• TCM • Front vehicle speed sensor • FWD switch • Throttle position sensor • ATF temperature sensor • Control valve • Transfer clutch • Transfer valve • Transfer pipe • Transfer duty solenoid
Vehicle is not set in FWD mode.	• TCM • FWD switch • Transfer clutch • Transfer valve • Transfer duty solenoid
Select lever is hard to move.	• Select cable • Select lever • Detente spring • Manual plate

Symptom	Problem parts
Select lever is too high to move (unreasonable resistance).	• Detente spring • Manual plate
Select lever slips out of operation during acceleration or while driving on rough terrain.	• Select cable • Select lever • Detente spring • Manual plate

MANUAL TRANSMISSION AND DIFFERENTIAL

5MT

		Page
1.	General Description	2
2.	Transmission Gear Oil	37
3.	Manual Transmission Assembly	38
4.	Transmission Mounting System	45
5.	Oil Seal	47
6.	Switches and Harness	48
7.	Vehicle Speed Sensor	51
8.	Preparation for Overhaul	52
9.	Transfer Case and Extension Case Assembly	53
10.	Rear Case	57
11.	Transfer Drive Gear	58
12.	Transfer Driven Gear	60
13.	Center Differential	62
14.	Reverse Check Sleeve	63
15.	Transmission Case	66
16.	Main Shaft Assembly for Single-Range	73
17.	Main Shaft Assembly for Dual-Range	83
18.	Input Shaft Assembly	89
19.	Drive Pinion Shaft Assembly	93
20.	Front Differential Assembly	104
21.	Speedometer Gear	111
22.	Reverse Idler Gear	112
23.	Shifter Fork and Rod	114
24.	Counter Gear	118
25.	General Diagnostic	120

1. General Description

A: SPECIFICATIONS

1. MANUAL TRANSMISSION AND DIFFERENTIAL

Model			1.6 L		2.0 L Non-turbo	2.0 L Turbo		2.5 L Non-turbo
			FWD	AWD		Except Australia	Australia	
Type			5-forward speeds with synchromesh and 1-reverse 5×2-forward speeds with synchromesh and 2-reverse*					
Transmission gear ratio		1st	3.454			3.454	3.166	3.454
		2nd	2.062			1.947	1.882	2.062
		3rd	1.448			1.366	1.296	1.448
		4th	1.088			0.972		1.088
		5th	0.825			0.738		0.780
		Reverse	3.333					
Auxiliary transmission gear ratio*		High	—	1.000		—		
		Low	—	1.447		—		
Front reduction gear	Final	Type of gear	Hypoid					
		Gear ratio	4.111		3.900	3.900	4.444	4.111
Rear reduction gear	Transfer	Type of gear	—	Helical				
		Gear ratio	—	1.000		1.100	1.000	
	Final	Type of gear	—	Hypoid				
		Gear ratio	—	4.111	3.900	3.545	4.444	4.111
Front differential	Type and number of gear		Straight bevel gear (Bevel pinion: 2, Bevel gear: 2)					
Center differential	Type and number of gear		—	Straight bevel gear (Bevel pinion: 2, Bevel gear: 2 and viscous coupling)				
Transmission gear oil			GL-5					
Transmission oil capacity			3.3 ℓ (3.5 US qt, 2.9 Imp qt)	3.5 ℓ (3.7 US qt, 3.1 Imp qt) 4.0 ℓ (4.2 US qt, 3.5 Imp qt)*				

*: Dual-range model only

2. TRANSMISSION GEAR OIL

Recommended oil

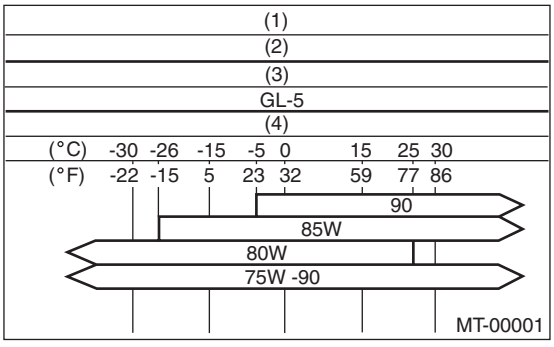

(1) Item
(2) Transmission gear oil
(3) API classification
(4) SAE viscosity No. and applicable temperature

3. TRANSMISSION CASE ASSEMBLY

Drive pinion shim adjustment
Hypoid gear backlash
0.13 — 0.18 mm (0.0051 — 0.0071 in)

Drive pinion shim			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
32295AA031	0.150 (0.0059)	32295AA071	0.250 (0.0098)
32295AA041	0.175 (0.0069)	32295AA081	0.275 (0.0108)
32295AA051	0.200 (0.0079)	32295AA091	0.300 (0.0118)
32295AA061	0.225 (0.0089)	32295AA101	0.500 (0.0197)

Selection of main shaft rear plate

Main shaft rear plate		
Dimension “A” mm (in)	Part No.	Mark
4.00 — 4.13 (0.1575 — 0.1626)	32294AA041	1
3.87 — 3.99 (0.1524 — 0.1571)	32294AA051	2

Snap ring to counter washer clearance
0.05 — 0.35 mm (0.0020 — 0.0138 in)

Snap ring (Outer-19)	
Part No.	Thickness mm (in)
031319000	1.50 (0.0591)
805019010	1.72 (0.0677)

Input shaft holder adjustment

Dimension “D” mm (in)	Number of shim
52.50 — 53.11 (2.0669 — 2.0909)	—
52.00 — 52.49 (2.0472 — 2.0665)	1
51.26 — 51.99 (2.0181 — 2.0468)	2

4. DRIVE PINION ASSEMBLY

• AWD model

Preload adjustment of thrust bearing
Starting torque
0.3 — 0.8 N·m (0.03 — 0.08 kgf-m, 0.2 — 0.6 ft-lb)

Adjusting washer No. 1	
Part No.	Thickness mm (in)
803025051	3.925 (0.1545)
803025052	3.950 (0.1555)
803025053	3.975 (0.1565)
803025054	4.000 (0.1575)
803025055	4.025 (0.1585)
803025056	4.050 (0.1594)
803025057	4.075 (0.1604)

Adjusting washer No. 2	
Part No.	Thickness mm (in)
803025059	3.850 (0.1516)
803025054	4.000 (0.1575)
803025058	4.150 (0.1634)

• FWD model

Selection of 1st driven gear

1st driven gear	
Part No.	Outer diameter of bushing mm (in)
32231AA840	42.019 — 42.033 (1.6543 — 1.6548)
32231AA850	42.005 — 42.018 (1.6537 — 1.6543)
32231AA860	41.990 — 42.004 (1.6531 — 1.6537)

5. INPUT SHAFT ASSEMBLY

Snap ring (Outer-28) to ball bearing clearance
0 — 0.12 mm (0 — 0.0047 in)

Snap ring (Outer-28)	
Part No.	Thickness mm (in)
805028050	2.48 (0.0976)
805028060	2.56 (0.1008)
805028070	2.64 (0.1039)

Snap ring (Inner-68) to bearing clearance
0 — 0.12 mm (0 — 0.0047 in)

Snap ring (Inner-68)	
Part No.	Thickness mm (in)
805168020	1.84 (0.0724)
805168030	1.92 (0.0756)
805168040	2.00 (0.0787)

6. MAIN SHAFT

Snap ring (Outer-25) to synchronizer hub clearance
0.060 — 0.100 mm (0.0024 — 0.0039 in)

Snap ring (Outer-25)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
805025051	2.42 (0.0953)	805025055	2.62 (0.1031)
805025052	2.47 (0.0972)	805025056	2.67 (0.1051)
805025053	2.52 (0.0992)	805025057	2.72 (0.1071)
805025054	2.57 (0.1012)	805025058	2.37 (0.0933)

7. REVERSE IDLER GEAR

Adjustment of reverse idler gear position
Reverse idler gear to transmission case (LH) wall clearance
6.0 — 7.5 mm (0.236 — 0.295 in)

Reverse shifter lever		
Part No.	Mark	Remarks
32820AA070	7	Further from case wall
32820AA080	8	Standard
32820AA090	9	Closer to the case wall

After installing a suitable reverse shifter lever, adjust the reverse idler gear to transmission case wall clearance to within 0 to 0.5 mm (0 to 0.020 in) using washers.

Washer (20.5 × 26 × t)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
803020151	0.4 (0.016)	803020154	1.9 (0.075)
803020152	1.1 (0.043)	803020155	2.3 (0.091)
803020153	1.5 (0.059)	—	—

8. SHIFTER FORK AND ROD

Select the suitable shifter forks so that both coupling sleeve and reverse driven gear are positioned in the center of their synchromesh mechanisms.
Rod end clearance
A: 1st-2nd — 3rd-4th
0.4 — 1.4 mm (0.016 — 0.055 in)
B: 3rd-4th — 5th
0.5 — 1.3 mm (0.020 — 0.051 in)

1st-2nd shifter fork		
Part No.	Mark	Remarks
32804AA060	1	Approach to 1st gear by 0.2 mm (0.008 in)
32804AA070	No mark	Standard
32804AA080	3	Approach to 2nd gear by 0.2 mm (0.008 in)

3rd-4th shifter fork		
Part No.	Mark	Remarks
32810AA061	1	Approach to 4th gear by 0.2 mm (0.008 in)
32810AA071	No mark	Standard
32810AA101	3	Approach to 3rd gear by 0.2 mm (0.008 in)

5th shifter fork (Non-turbo model)		
Part No.	Mark	Remarks
32812AA201	4	Approach to 5th gear by 0.2 mm (0.008 in)
32812AA211	5	Standard
32812AA221	6	Become distant from 5th gear by 0.2 mm (0.008 in)

5th shifter fork (Turbo model)		
Part No.	Mark	Remarks
32812AA231	7	Approach to 5th gear by 0.2 mm (0.008 in)
32812AA241	No mark	Standard
32812AA251	9	Become distant from 5th gear by 0.2 mm (0.008 in)

9. TRANSFER CASE OR REAR CASE

Neutral position adjustment

Adjustment shim	
Part No.	Thickness mm (in)
32190AA000	0.15 (0.0059)
32190AA010	0.30 (0.0118)

Reverse accent shaft		
Part No.	Mark	Remarks
32188AA090	3	Neutral position is closer to 1st.
32188AA100	0	Standard
32188AA110	1	Neutral position is closer to reverse gear.

Reverse check plate adjustment

Reverse check plate			
Part No.	Mark	Angle θ	Remarks
32189AA000	0	28°	Arm stops closer to 5th gear.
32189AA010	1	31°	Arm stops closer to 5th gear.
33189AA020	2	34°	Arm stops in the center.
32189AA030	3	37°	Arm stops closer to reverse gear.
32189AA040	4	40°	Arm stops closer to reverse gear.

10.EXTENSION ASSEMBLY

Thrust washer (50 × 61 × t) to taper roller bearing table outer race side clearance
0.2 — 0.3 mm T (0.0008 — 0.012 in T)

NOTE:
T: Tight

Thrust washer (50 × 61 × t)	
Part No.	Thickness mm (in)
803050060	0.50 (0.0197)
803050061	0.55 (0.0217)
803050062	0.60 (0.0236)
803050063	0.65 (0.0256)
803050064	0.70 (0.0276)
803050065	0.75 (0.0295)
803050066	0.80 (0.0315)
803050067	0.85 (0.0335)
803050068	0.90 (0.0354)
803050069	0.95 (0.0374)
803050070	1.00 (0.0394)
803050071	1.05 (0.0413)
803050072	1.10 (0.0433)
803050073	1.15 (0.0453)
803050074	1.20 (0.0472)
803050075	1.25 (0.0492)
803050076	1.30 (0.0512)
803050077	1.35 (0.0531)
803050078	1.40 (0.0551)
803050079	1.45 (0.0571)

Thrust washer to center differential side clearance
0.15 — 0.35 mm (0.0059 — 0.0138 in)

Thrust washer	
Part No.	Thickness mm (in)
803036050	0.9 (0.035)
803036054	1.0 (0.039)
803036051	1.1 (0.043)
803036055	1.2 (0.047)
803036052	1.3 (0.051)
803036056	1.4 (0.055)
803036053	1.5 (0.059)
803036057	1.6 (0.063)
803036058	1.7 (0.067)

11.FRONT DIFFERENTIAL

Bevel gear to pinion backlash
0.13 — 0.18 mm (0.0051 — 0.0071 in)

Washer (38.1 × 50 × t)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
803038021	0.925 — 0.950 (0.0364 — 0.0374)	803038023	1.025 — 1.050 (0.0404 — 0.0413)
803038022	0.975 — 1.000 (0.0384 — 0.0394)	—	—

Pinion shaft to axle drive shaft clearance
0 — 0.2 mm (0 — 0.008 in)

Snap ring (Outer-28)			
Part No.	Thickness mm (in)	Part No.	Thickness mm (in)
805028011	1.05 (0.0413)	805028012	1.20 (0.0472)

12.TRANSFER DRIVE GEAR

Snap ring (Outer-30) to ball bearing clearance
0.01 — 0.15 mm (0.0004 — 0.0059 in)

Snap ring (Outer-30)	
Part No.	Thickness mm (in)
805030041	1.53 (0.0602)
805030042	1.65 (0.0650)
805030043	1.77 (0.0697)

B: COMPONENT

1. TRANSMISSION CASE

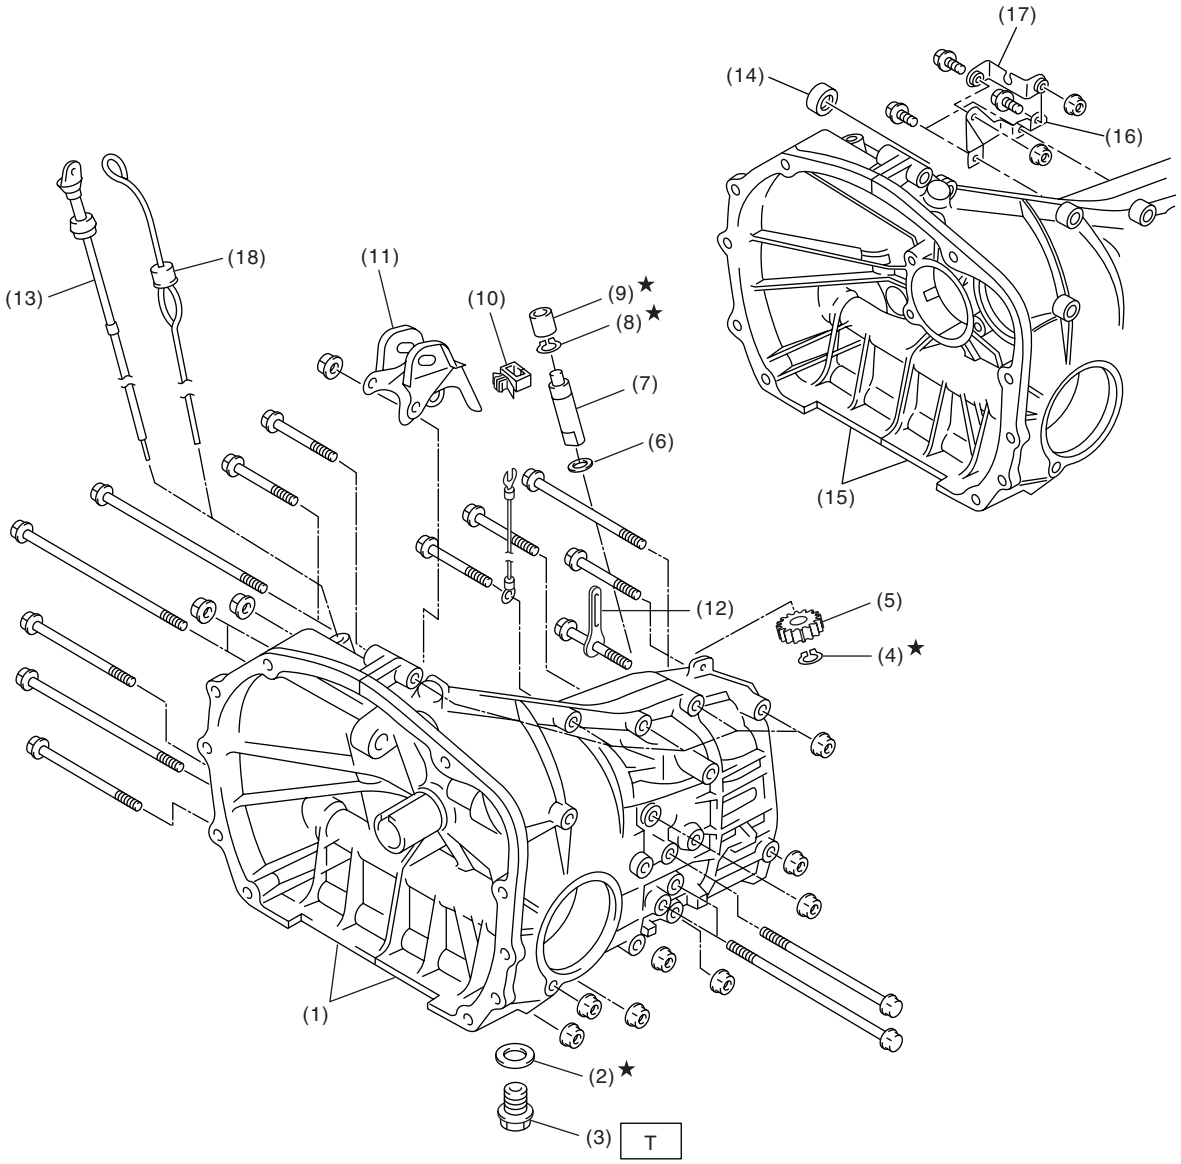

MT-00002

(1) Transmission case ASSY
(2) Gasket
(3) Drain plug
(4) Snap ring (Outer)
(5) Speedometer driven gear
(6) Washer
(7) Speedometer shaft
(8) Snap ring (Outer)
(9) Oil seal
(10) Clamp
(11) Pitching stopper bracket
(12) Clip
(13) Oil level gauge (Non-turbo model)
(14) Oil seal (Dual-range)
(15) Transmission case ASSY (Dual-range)
(16) High-low cable bracket A (Dual-range)
(17) High-low cable bracket B (Dual-range)
(18) Oil level gauge (Turbo model)

Tightening torque: N·m (kgf-m, ft-lb)
T: 69 (7.0, 50.6)

• Transmission case tightening torque

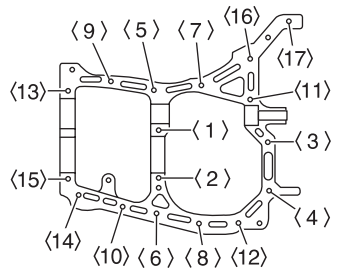

MT-00003

Bolt No.	Bolt size	Tightening torque: N·m (kgf-m, ft-lb)
<5> to <15>	8 mm	25 (2.5, 18.1)
<1> to <4> <16>, <17>	10 mm	39 (4.0, 28.9)

2. DRIVE PINION ASSEMBLY

• AWD MODEL

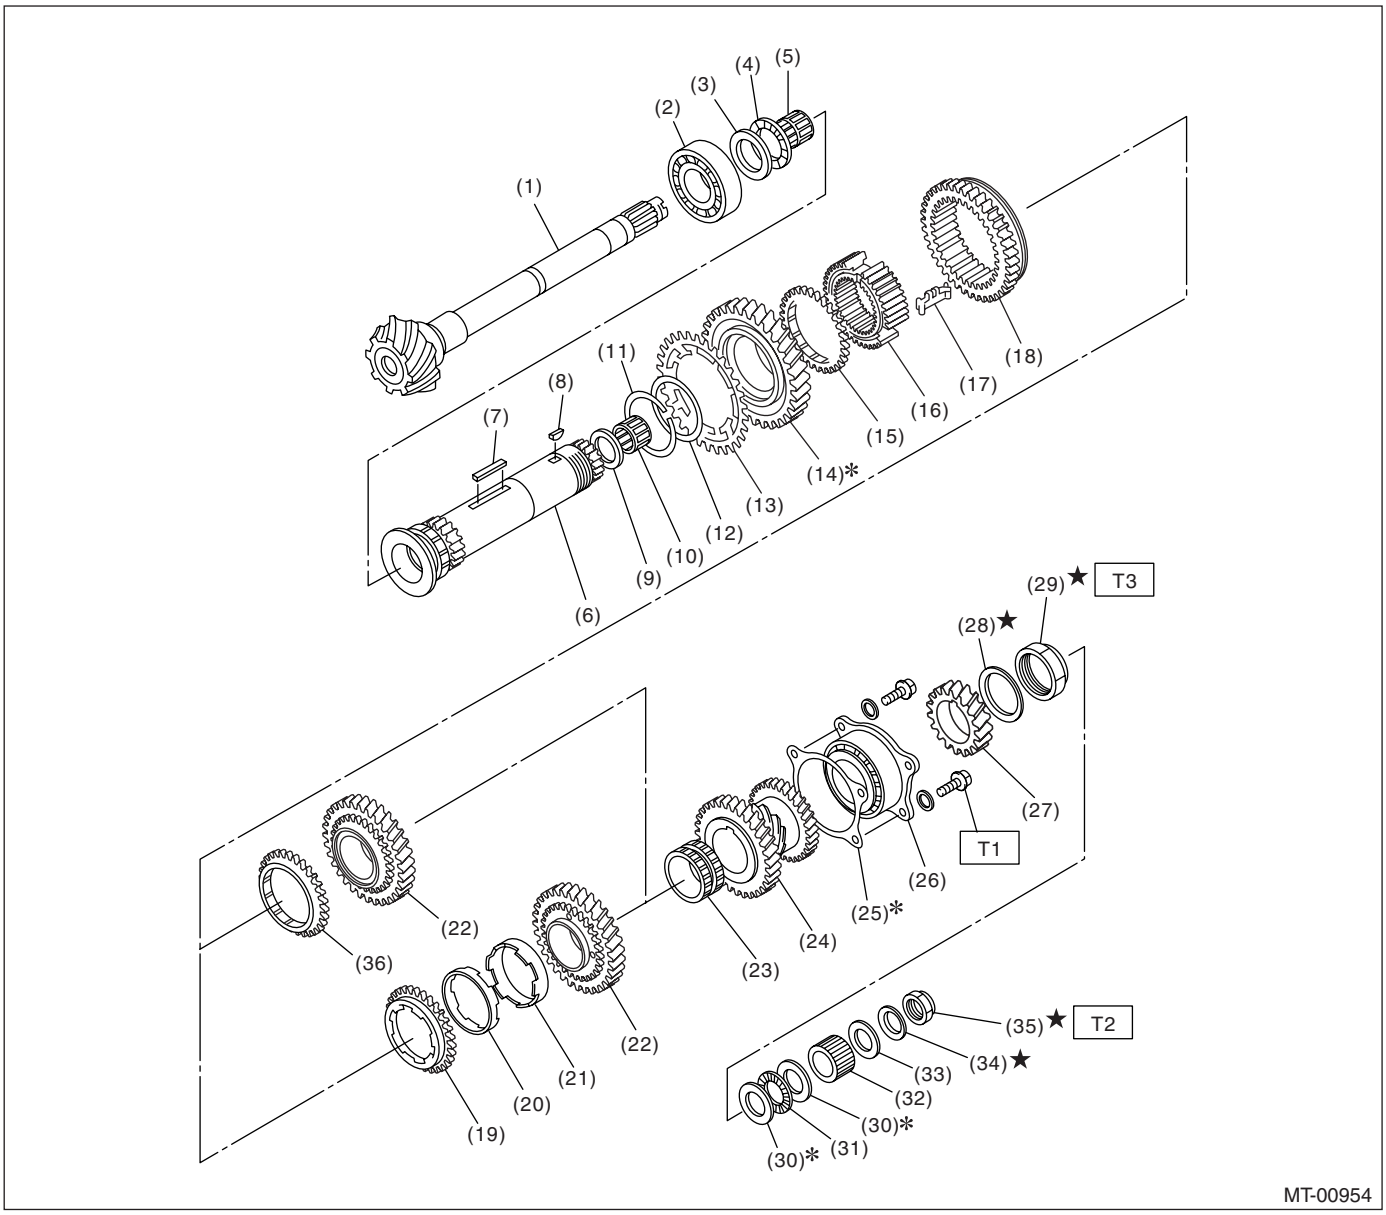

(1) Drive pinion shaft
(2) Roller bearing
(3) Washer
(4) Thrust bearing
(5) Needle bearing
(6) Driven shaft
(7) Key
(8) Woodruff key
(9) Drive pinion collar
(10) Needle bearing
(11) Snap ring (Outer)
(12) Washer
(13) Sub gear
(14) 1st driven gear
(15) Baulk ring
(16) 1st-2nd synchronizer hub
(17) Insert key
(18) Reverse driven gear
(19) Outer baulk ring (Except 1.6 L model)
(20) Synchro cone (Except 1.6 L model)
(21) Inner baulk ring (Except 1.6 L model)
(22) 2nd driven gear
(23) 2nd driven gear bush
(24) 3rd-4th driven gear
(25) Driven pinion shim
(26) Roller bearing
(27) 5th driven gear
(28) Lock washer
(29) Lock nut
(30) Washer
(31) Thrust bearing
(32) Differential bevel gear sleeve
(33) Washer
(34) Lock washer
(35) Lock nut
(36) 2nd baulk ring (1.6 L model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 30 (3.1, 22.1)
T2: 120 (12.2, 88.5)
T3: 260 (26.5, 191.7)

• FWD MODEL

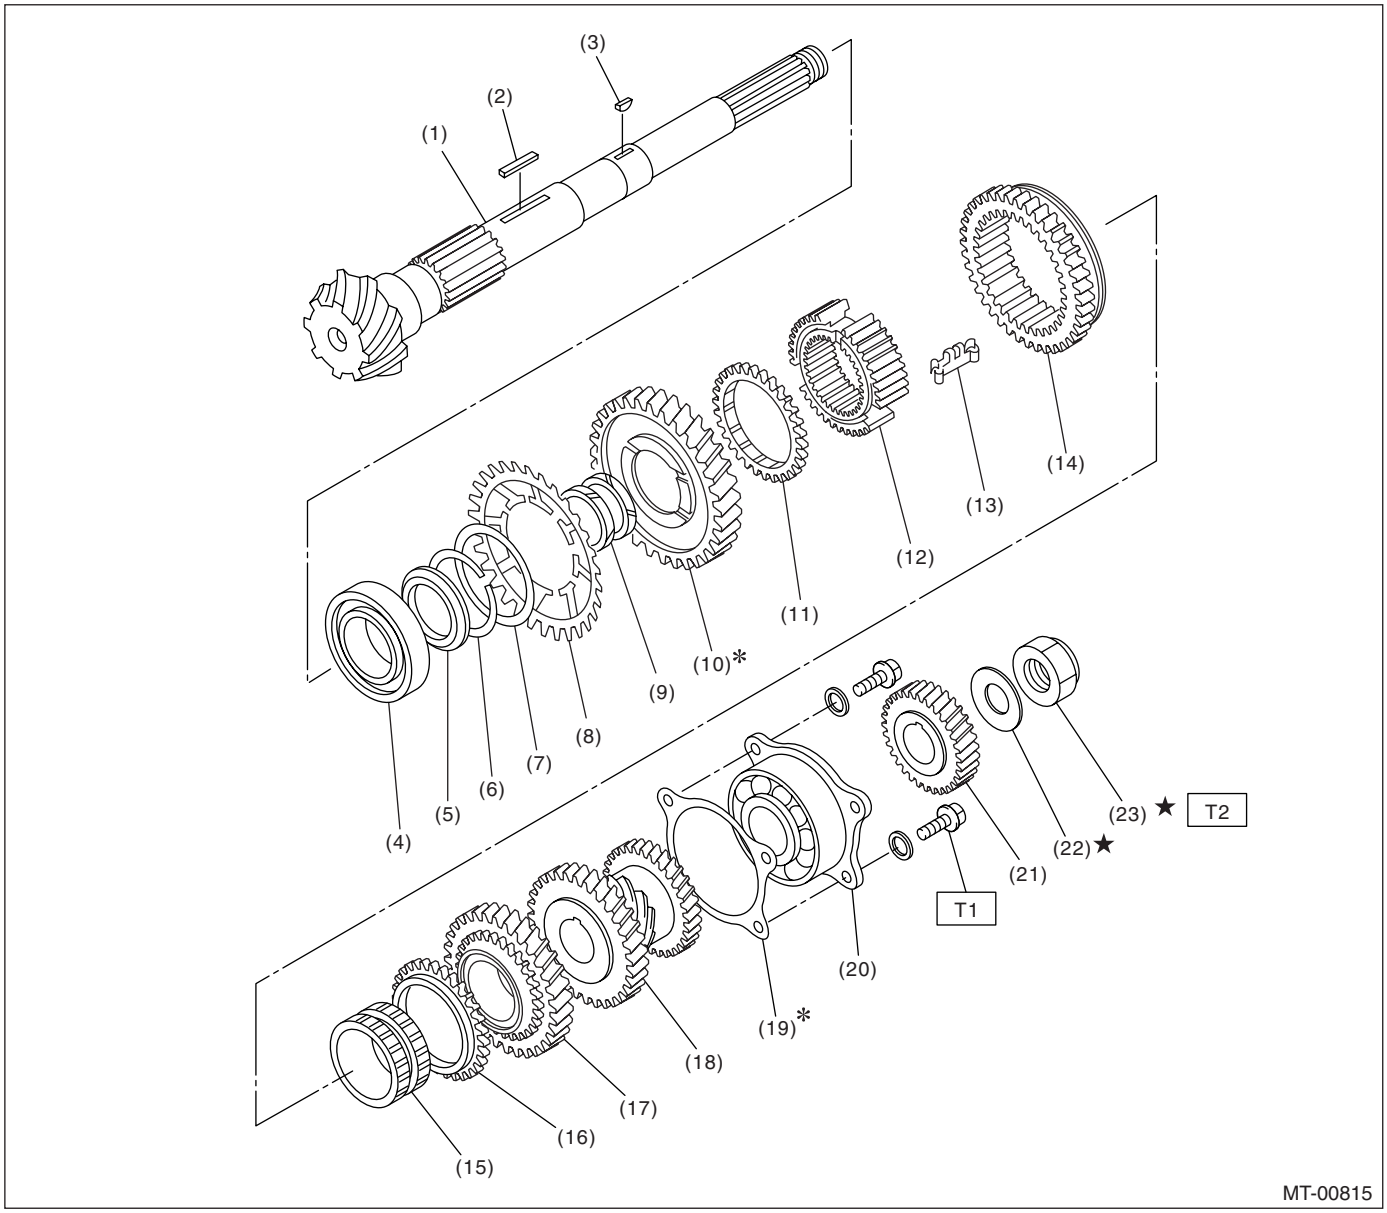

(1) Drive pinion shaft
(2) Key
(3) Woodruff key
(4) Roller bearing
(5) 1st gear trust plate
(6) Outer snap ring
(7) Washer
(8) 1st sub gear
(9) 1st gear bushing
(10) 1st driven gear
(11) 1st baulk ring
(12) 1st-2nd synchronizer hub
(13) Insert key
(14) Reverse driven gear
(15) 2nd baulk ring
(16) 2nd driven gear
(17) 2nd gear bushing
(18) 3rd-4th driven gear
(19) Driven pinion shim
(20) Ball bearing
(21) 5th driven gear
(22) Lock washer
(23) Lock nut

Tightening torque: N·m (kgf-m, ft-lb)
T1: 29.4 (3.0, 21.7)
T2: 120 (12.2, 88.5)

3. MAIN SHAFT ASSEMBLY

• SINGLE RANGE AWD MODEL

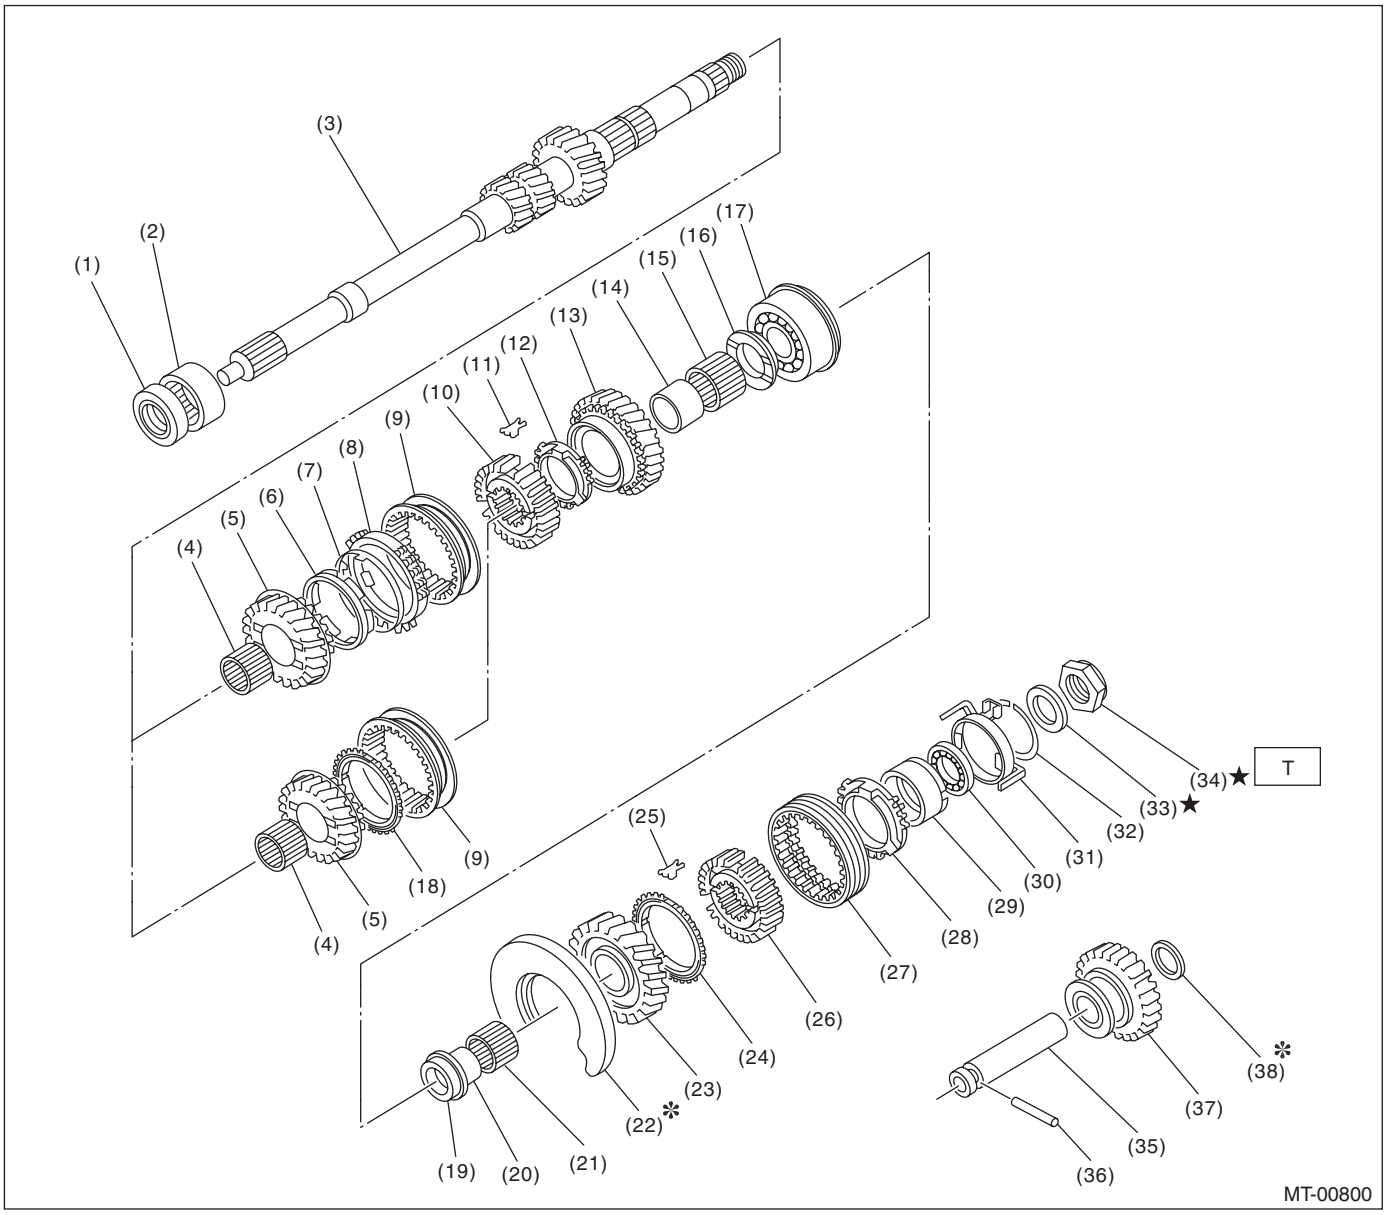

(1) Oil seal
(2) Needle bearing
(3) Transmission main shaft
(4) Needle bearing
(5) 3rd drive gear
(6) Inner baulk ring (Turbo and 2.5 L model)
(7) 3rd synchro cone (Turbo and 2.5 L model)
(8) Outer baulk ring (Turbo and 2.5 L model)
(9) 3rd-4th coupling sleeve
(10) 3rd-4th synchronizer hub
(11) 3rd-4th shifting insert key
(12) 4th baulk ring
(13) 4th drive gear
(14) 4th needle bearing race
(15) Needle bearing
(16) 4th gear thrust washer
(17) Ball bearing
(18) Baulk ring (Except turbo and 2.5 L model)
(19) 5th gear thrust washer
(20) 5th needle bearing race
(21) Needle bearing
(22) Main shaft rear plate
(23) 5th drive gear
(24) 5th baulk ring
(25) 5th-Rev shifting insert key
(26) 5th-Rev synchronizer hub
(27) 5th-Rev coupling sleeve
(28) Rev baulk ring
(29) Rev synchro cone
(30) Ball bearing
(31) Synchro cone stopper
(32) Snap ring
(33) Lock washer
(34) Lock nut
(35) Reverse idler gear shaft
(36) Straight pin
(37) Reverse idler gear
(38) Washer

Tightening torque: N·m (kgf-m, ft-lb)
T: 120 (12.2, 88.5)

• FWD MODEL

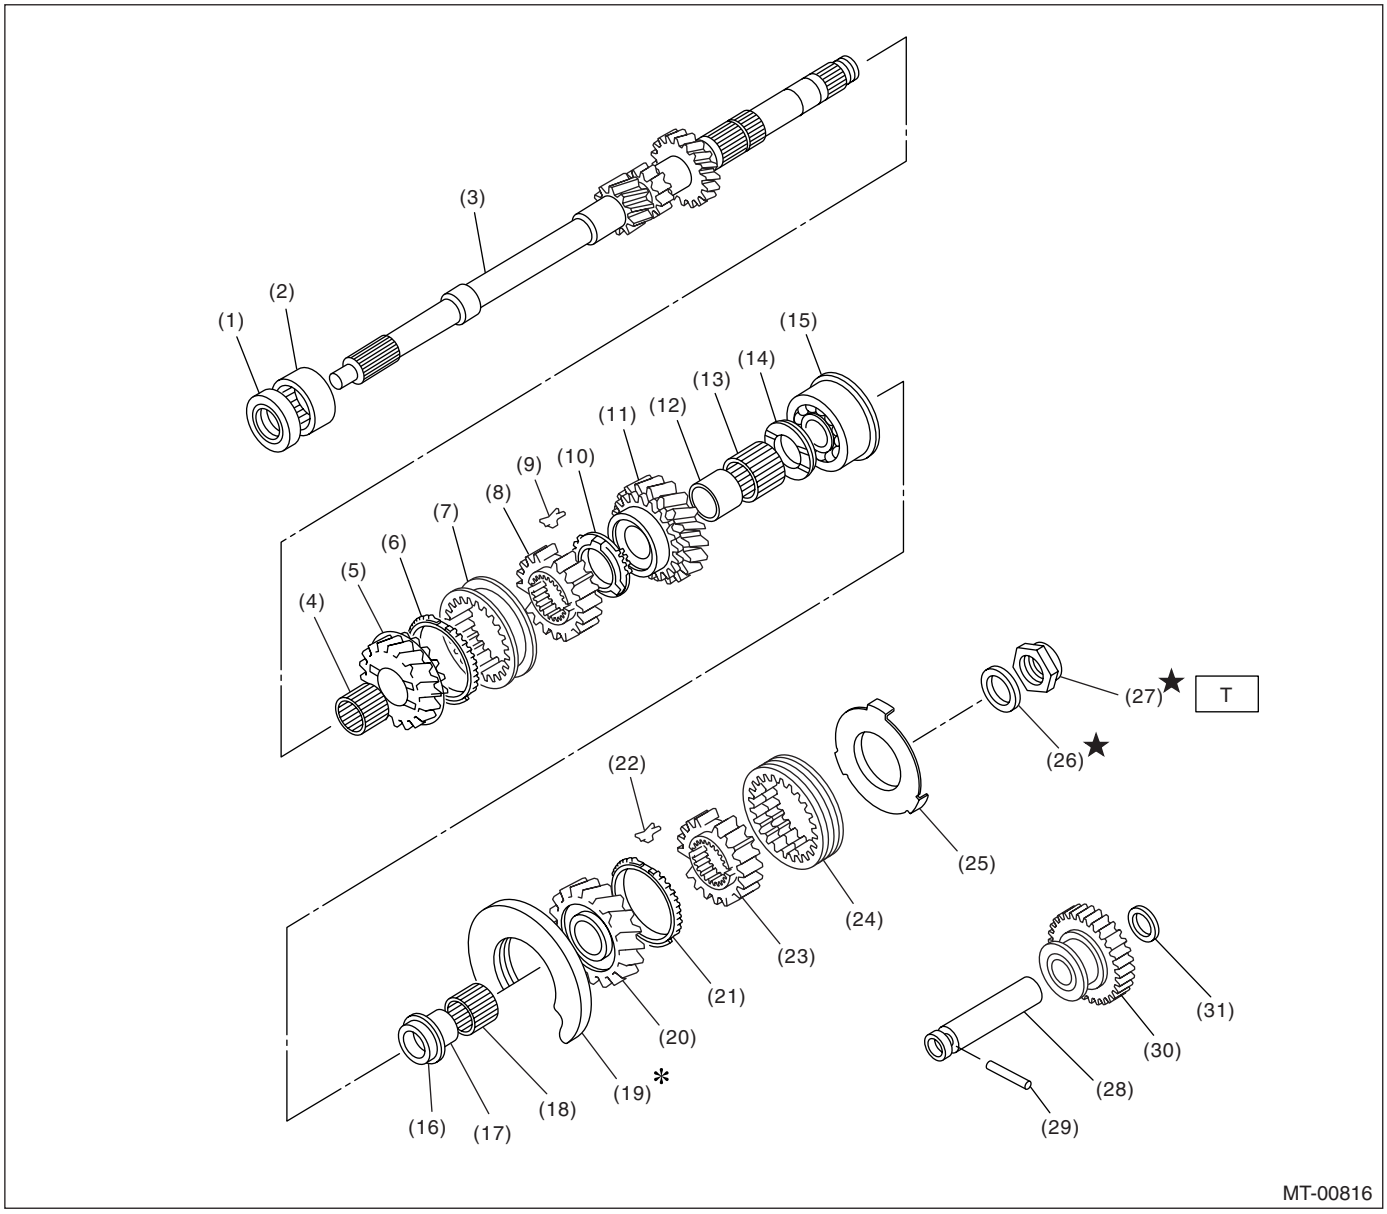

(1) Oil seal
(2) Needle bearing
(3) Transmission main shaft
(4) Needle bearing
(5) 3rd drive gear
(6) 3rd baulk ring
(7) Coupling sleeve
(8) Synchronizer hub
(9) Shifting insert key
(10) 4th baulk ring
(11) 4th drive gear
(12) 4th needle bearing race
(13) Needle bearing
(14) 4th gear thrust washer
(15) Ball bearing
(16) 5th gear thrust washer
(17) 5th needle bearing race
(18) Needle bearing
(19) Main shaft rear plate
(20) 5th drive gear
(21) 5th baulk ring
(22) 5th-Rev shifting insert key
(23) 5th-Rev synchronizer hub
(24) 5th-Rev coupling sleeve
(25) Insert stopper plate
(26) Lock washer
(27) Lock nut
(28) Straight pin
(29) Reverse idler gear shaft
(30) Reverse idler gear
(31) Washer

Tightening torque: N·m (kgf-m, ft-lb)
T: 120 (12.2, 88.5)

• DUAL RANGE AWD MODEL

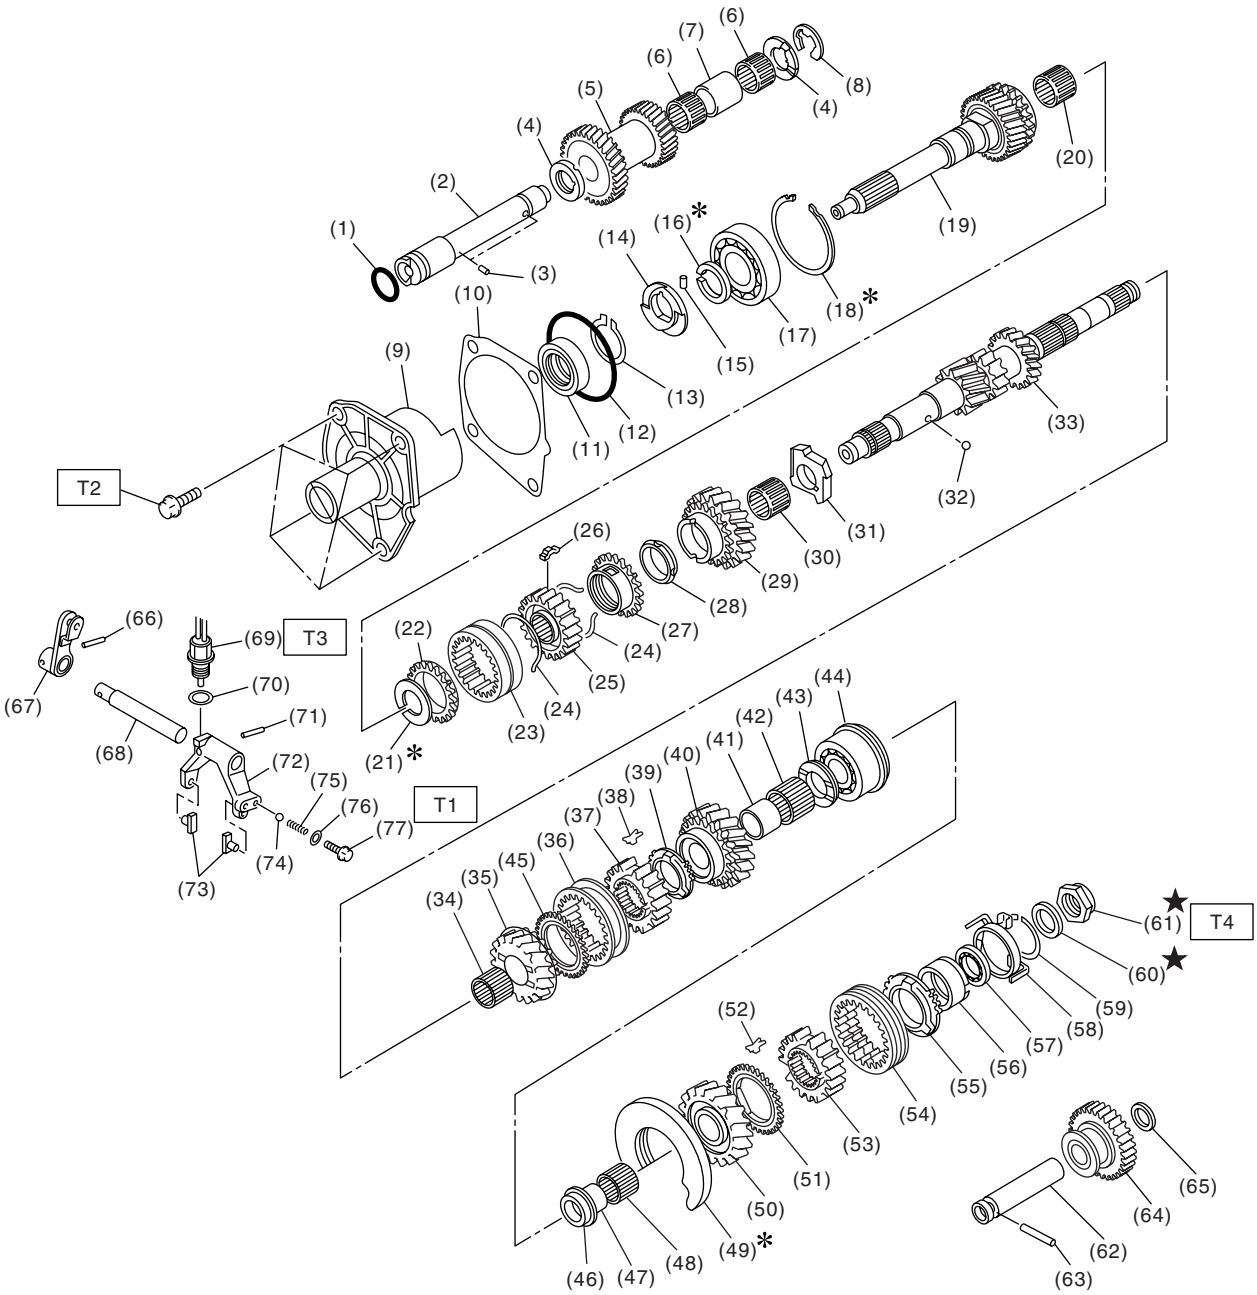

MT-00006

(1) O-ring
(2) High-low counter shaft
(3) Knock pin
(4) High-low counter washer
(5) Counter gear
(6) Needle bearing
(7) Counter gear collar
(8) Snap ring (Outer-19)
(9) Input shaft holder
(10) Input shaft shim
(11) Oil seal
(12) O-ring
(13) Snap ring (Outer-28)
(14) Oil squeeze
(15) Straight pin
(16) Snap ring (Outer-28)
(17) Ball bearing
(18) Snap ring (Inner-68)
(19) Input shaft
(20) Needle bearing
(21) Snap ring (Outer-25)
(22) High-low baulk ring
(23) High-low coupling sleeve
(24) High-low synchronizer spring
(25) High-low synchronizer hub
(26) Shifting insert key
(27) High-low baulk ring
(28) Friction damper
(29) Input low gear
(30) Needle bearing
(31) Input low gear spacer
(32) Ball
(33) Main shaft
(34) Needle bearing
(35) 3rd drive gear
(36) 3rd-4th coupling sleeve
(37) 3rd-4th synchronizer hub
(38) 3rd-4th shifting insert key
(39) 4th baulk ring
(40) 4th drive gear
(41) 4th needle bearing race
(42) Needle bearing
(43) 4th gear thrust washer
(44) Ball bearing
(45) Baulk ring
(46) 5th gear thrust washer
(47) 5th needle bearing race
(48) Needle bearing
(49) Main shaft rear plate
(50) 5th drive gear
(51) 5th baulk ring
(52) 5th-Rev shifting insert key
(53) 5th-Rev synchronizer hub
(54) 5th-Rev coupling sleeve
(55) Rev baulk ring
(56) Rev synchro cone
(57) Ball bearing
(58) Synchro cone stopper
(59) Snap ring
(60) Lock washer
(61) Lock nut
(62) Reverse idler gear shaft
(63) Straight pin
(64) Reverse idler gear
(65) Washer
(66) Straight pin
(67) High-low shifter lever
(68) High-low shifter shaft
(69) Low switch
(70) Gasket
(71) Straight pin
(72) High-low shifter fork
(73) High-low shifter piece
(74) Ball
(75) Spring
(76) Gasket
(77) Plug

Tightening torque: N·m (kgf-m, ft-lb)
T1: 9.75 (1.0, 7.2)
T2: 20 (2.0, 14.5)
T3: 25 (2.5, 18.1)
T4: 120 (12.2, 88.5)

4. SHIFTER FORK AND SHIFTER ROD

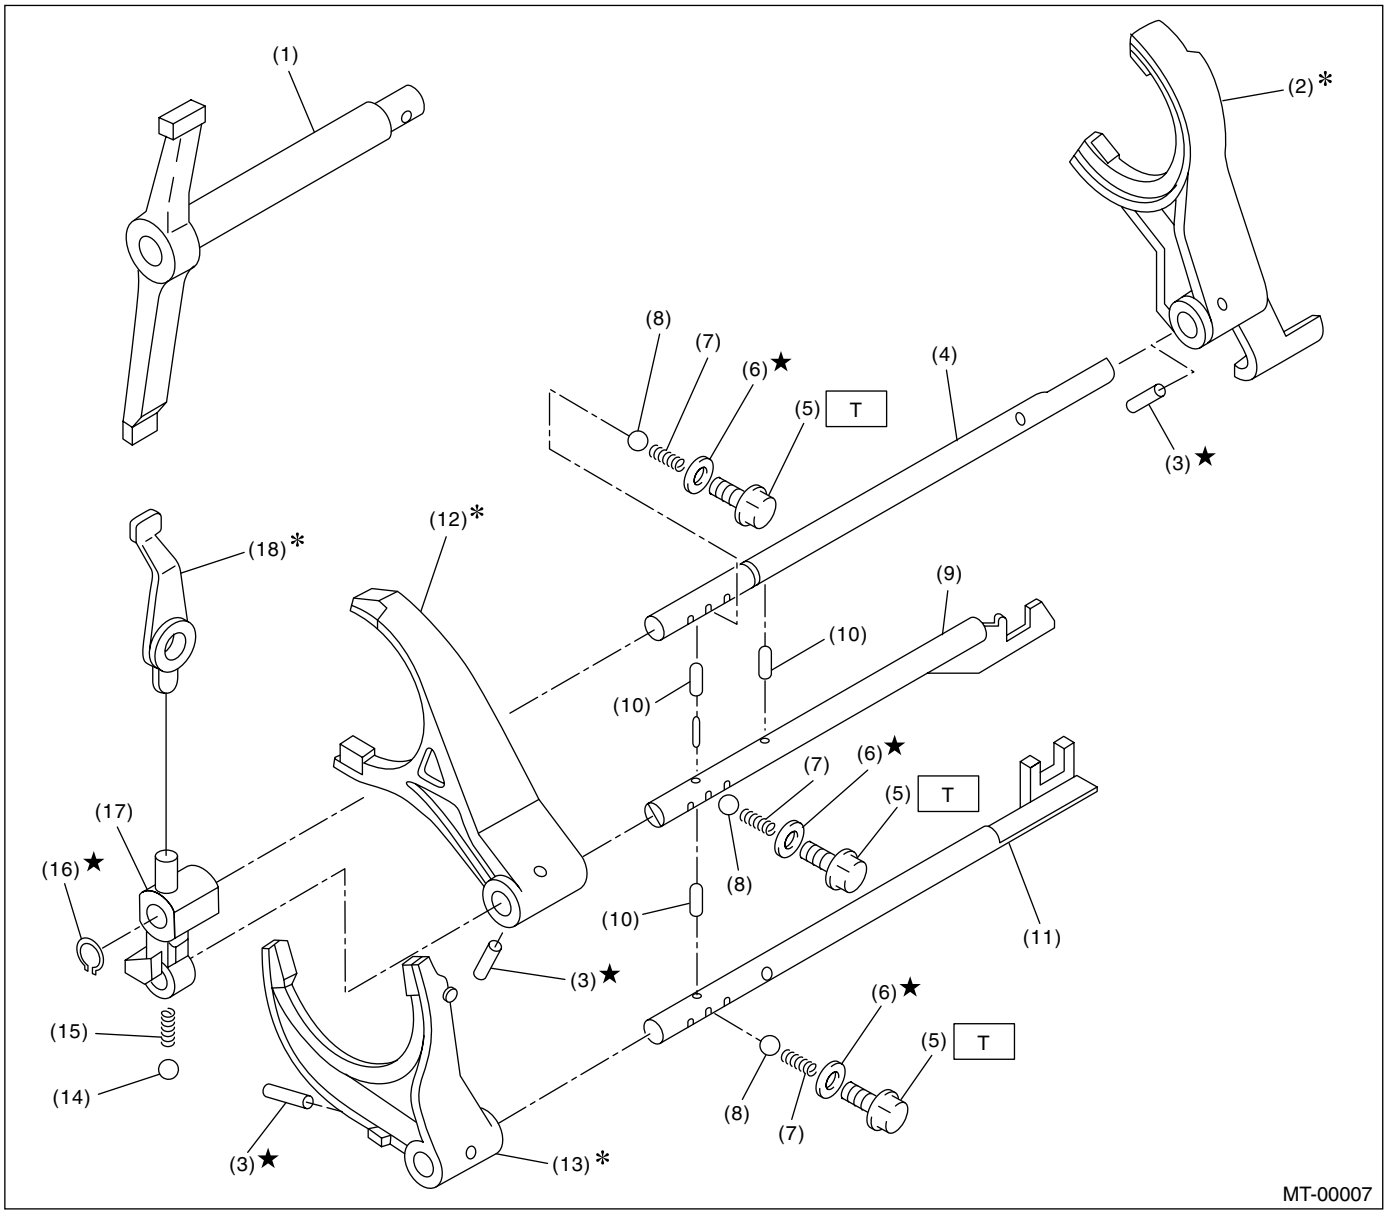

(1) Shifter arm
(2) 5th shifter fork
(3) Straight pin
(4) Reverse fork rod
(5) Checking ball plug
(6) Gasket
(7) Checking ball spring
(8) Ball
(9) 3rd-4th fork rod
(10) Interlock plunger
(11) 1st-2nd fork rod
(12) 3rd-4th shifter fork
(13) 1st-2nd shifter fork
(14) Ball
(15) Spring
(16) Snap ring (Outer)
(17) Reverse fork rod arm
(18) Reverse shifter lever

Tightening torque: N·m (kgf-m, ft-lb)
T: 20 (2.0, 14.5)

5. TRANSFER CASE AND EXTENSION

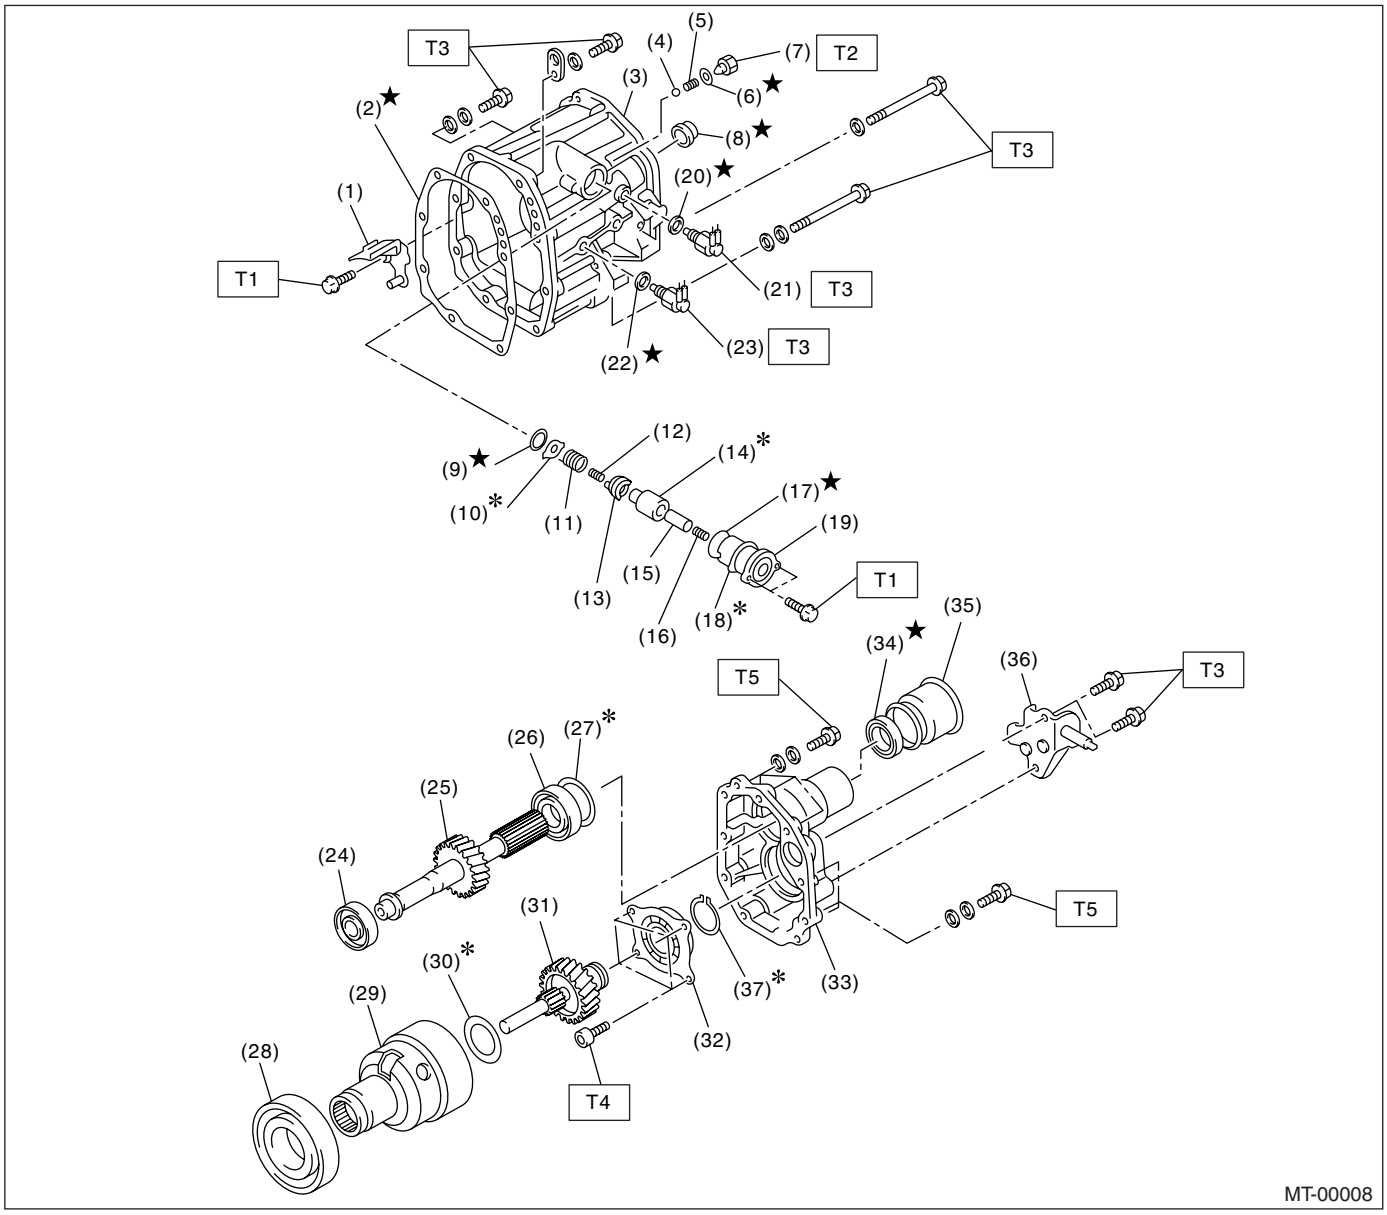

(1) Oil guide
(2) Gasket
(3) Transfer case
(4) Ball
(5) Reverse accent spring
(6) Gasket
(7) Plug
(8) Oil seal
(9) Snap ring (Inner)
(10) Reverse check plate
(11) Reverse check spring
(12) Reverse return spring
(13) Reverse check cam
(14) Reverse accent shaft
(15) Return spring cap
(16) Return spring
(17) O-ring
(18) Adjusting select shim
(19) Reverse check sleeve
(20) Gasket
(21) Neutral switch
(22) Gasket
(23) Back-up light switch
(24) Roller bearing
(25) Transfer driven gear
(26) Roller bearing
(27) Adjusting washer
(28) Ball bearing
(29) Center differential
(30) Adjusting washer
(31) Transfer drive gear
(32) Ball bearing
(33) Extension case
(34) Oil seal
(35) Dust cover
(36) Shift bracket
(37) Snap ring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 10 (1.0, 7.2)
T3: 25 (2.5, 18.1)
T4: 26 (2.7, 20)
T5: 40 (4.1, 29.7)

6. REAR CASE

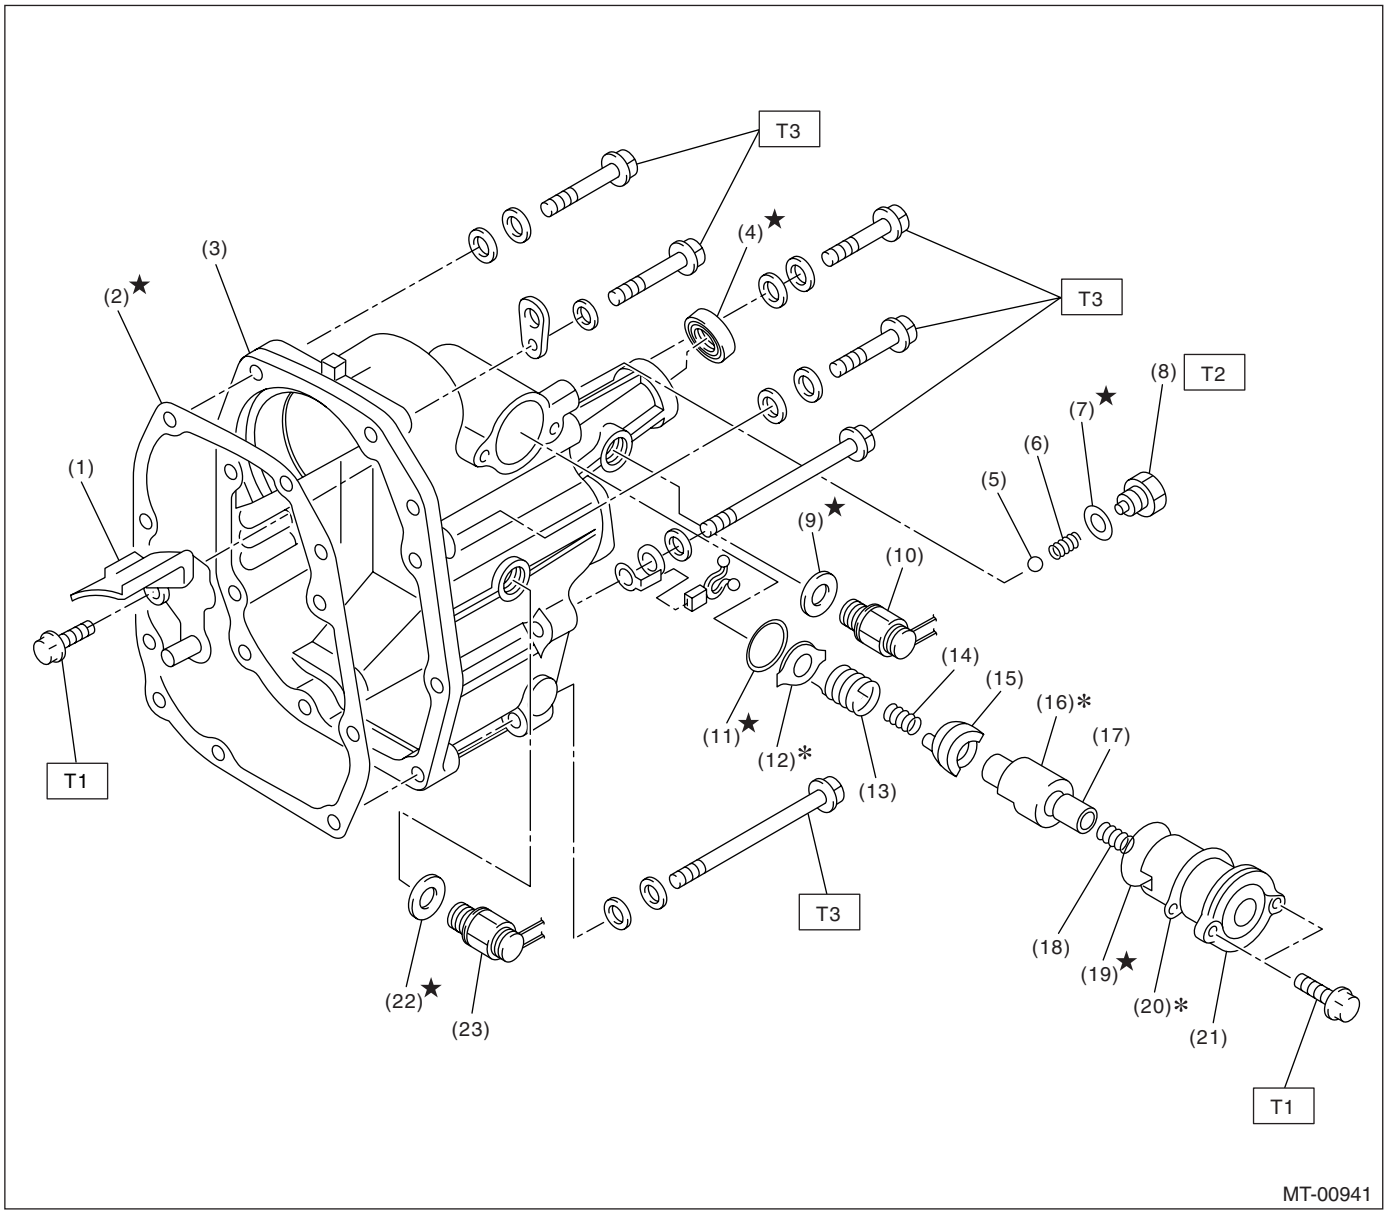

(1) Oil guide
(2) Case gasket
(3) Rear case
(4) Oil seal
(5) Ball
(6) Reverse accent spring
(7) Washer
(8) Plug
(9) Gasket
(10) Neutral switch
(11) Snap ring
(12) Reverse check plate
(13) Reverse check spring
(14) Reverse return spring
(15) Reverse check cam
(16) Reverse accent shaft
(17) Return spring cap
(18) Return spring
(19) O-ring
(20) Adjusting select shim
(21) Reverse check sleeve
(22) Gasket
(23) Back-up light switch

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 10 (1.0, 7.2)
T3: 24.5 (2.5, 18.1)

7. FRONT DIFFERENTIAL

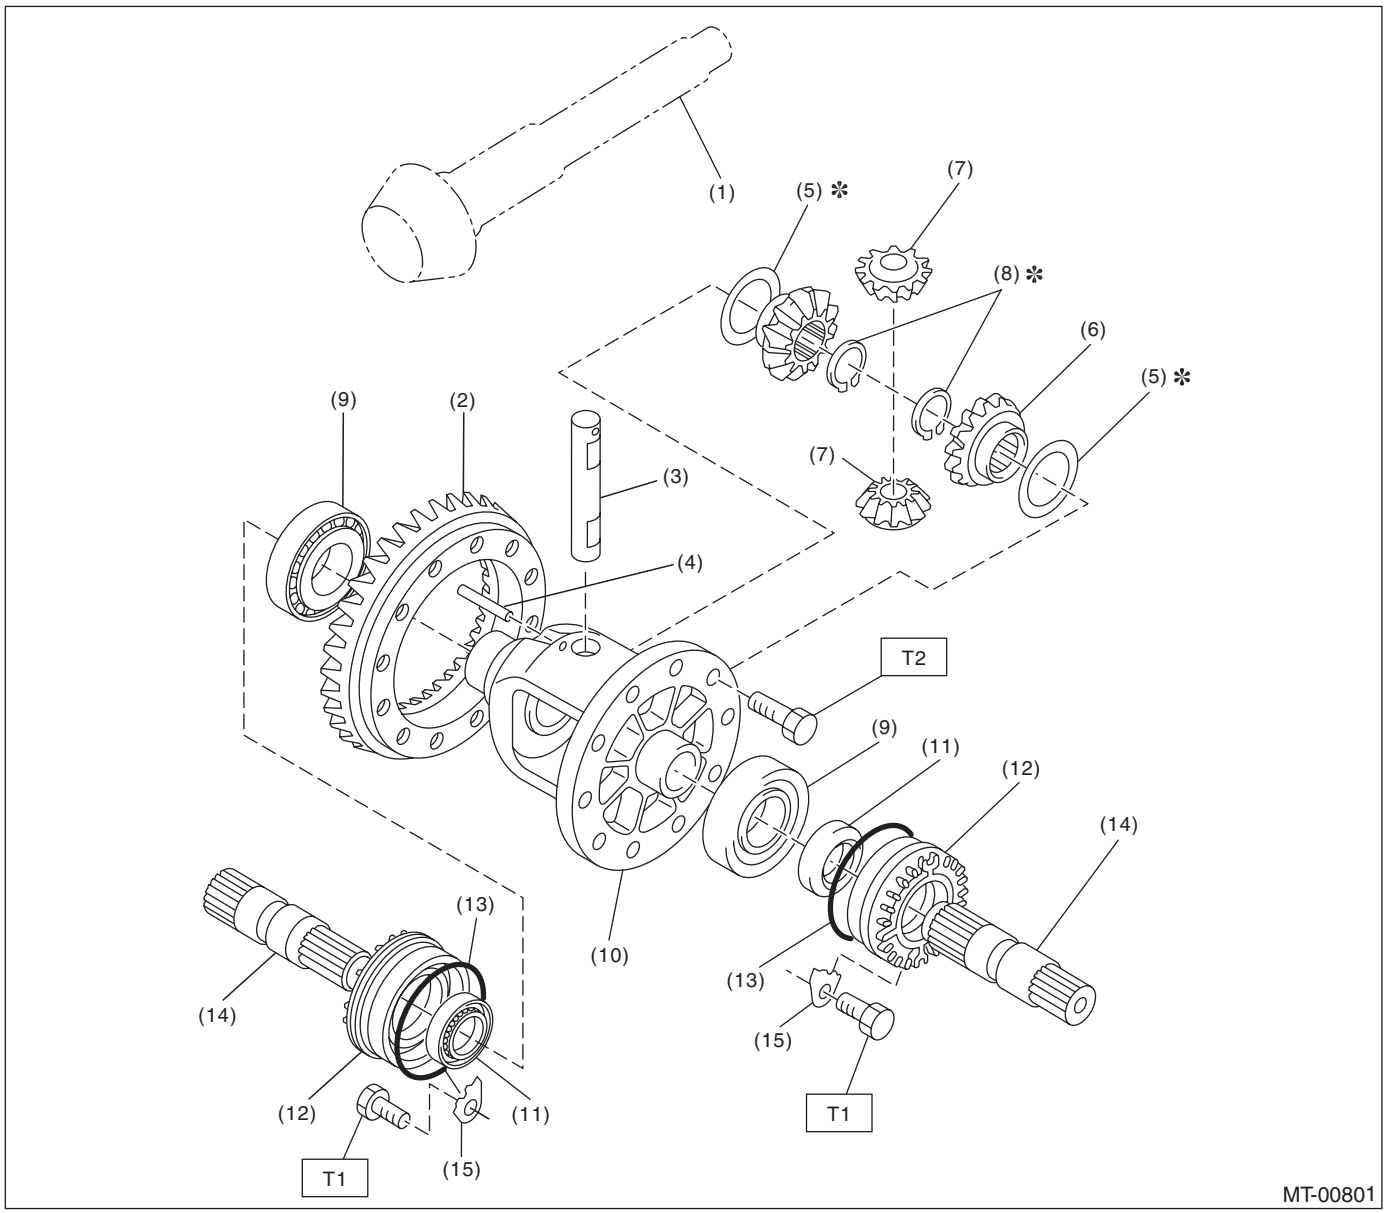

(1) Drive pinion shaft
(2) Hypoid driven gear
(3) Pinion shaft
(4) Straight pin
(5) Washer
(6) Differential bevel gear
(7) Differential bevel pinion
(8) Snap ring (Outer)
(9) Roller bearing
(10) Differential case
(11) Oil seal
(12) Differential side retainer
(13) O-ring
(14) Axle drive shaft
(15) Retainer lock plate

Tightening torque: N·m (kgf-m, ft-lb)
T1: 25 (2.5, 18.1)
T2: 62 (6.3, 45.6)

8. TRANSMISSION MOUNTING

• Except 1.6 L FWD MODEL

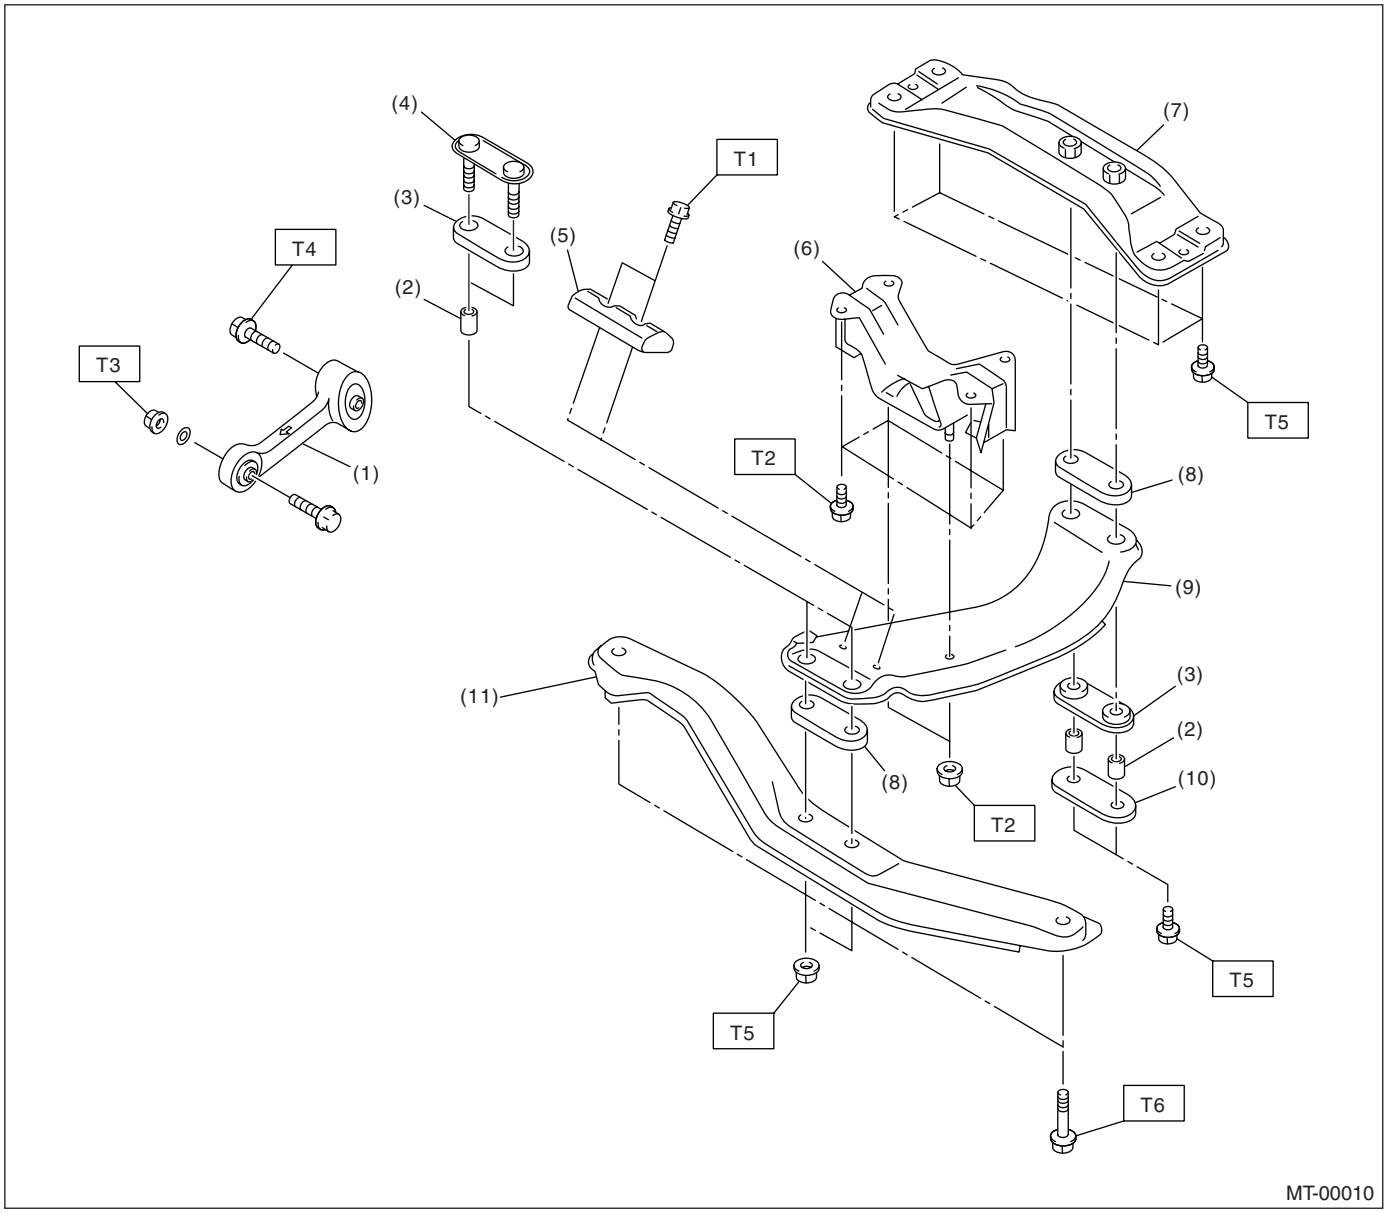

(1)	Pitching stopper	(7)	Rear crossmember
(2)	Spacer	(8)	Cushion D
(3)	Cushion C	(9)	Center crossmember
(4)	Front plate	(10)	Rear plate
(5)	Dynamic damper (Except 1.6 L model)	(11)	Front crossmember
(6)	Rear cushion rubber		

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 35 (3.6, 26)
T3: 50 (5.1, 37)
T4: 58 (5.9, 43)
T5: 70 (7.1, 51)
T6: 140 (14.3, 103)

• 1.6 L FWD MODEL

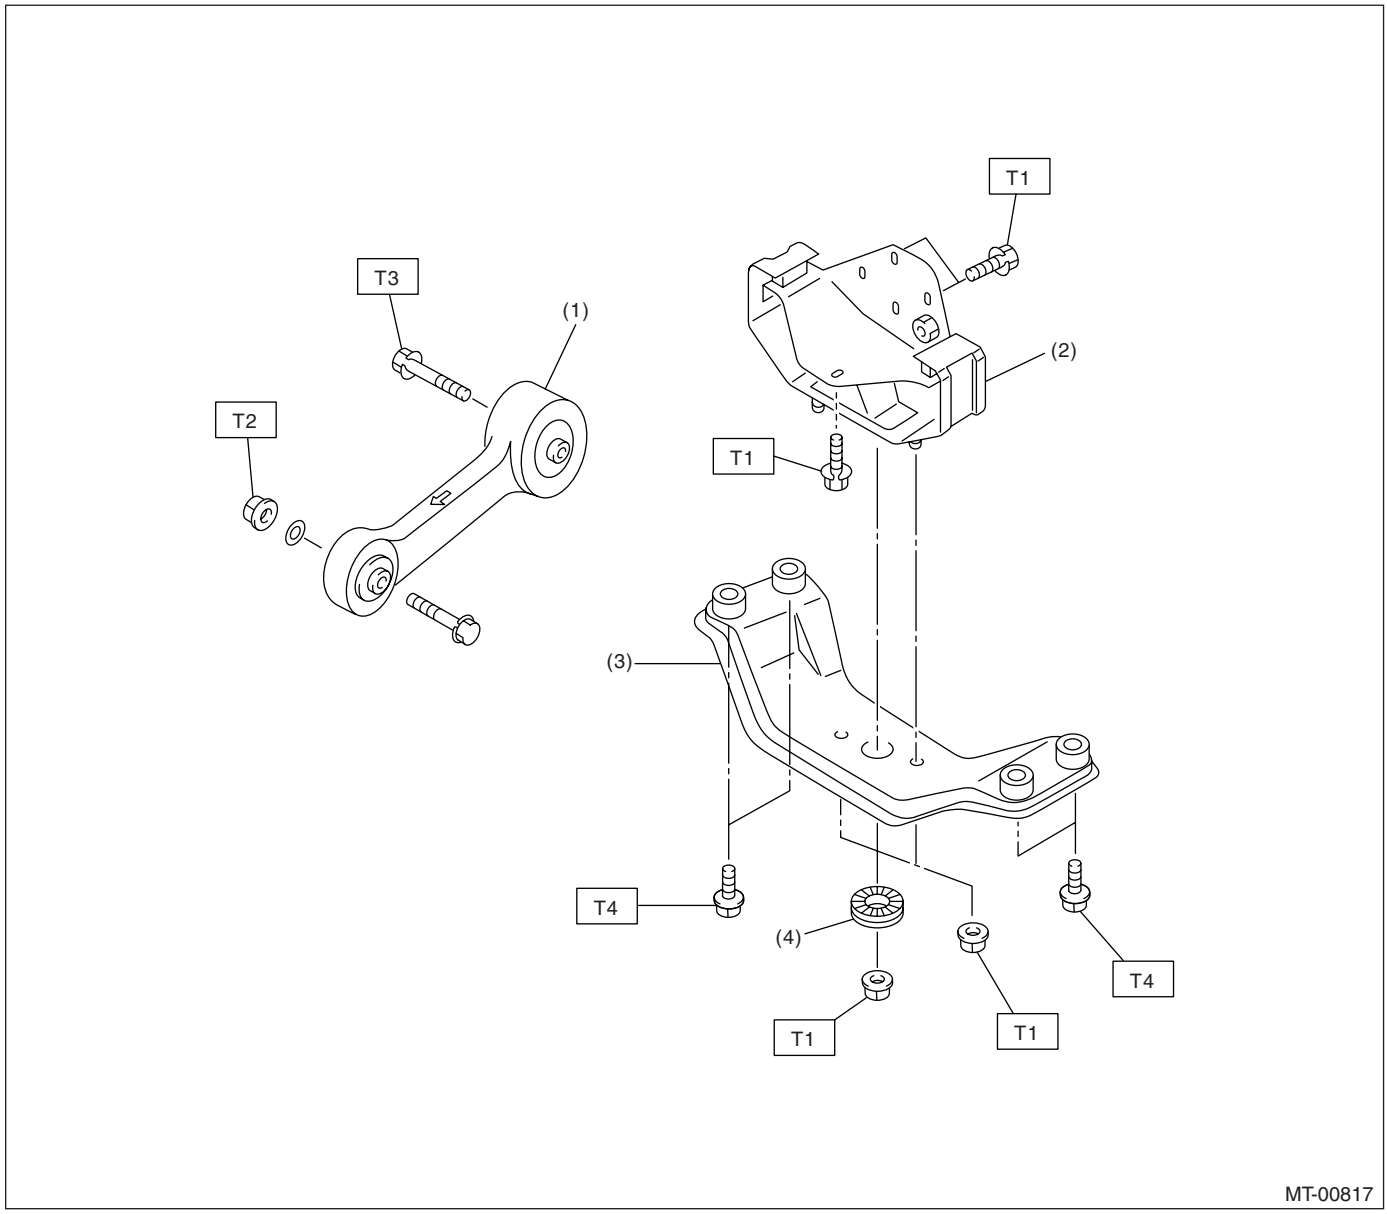

(1) Pitching stopper
(2) Rear cushion rubber
(3) Rear crossmember
(4) Rubber cushion

Tightening torque: N·m (kgf-m, ft-lb)
T1: 35 (3.57, 25.8)
T2: 50 (5.1, 36.9)
T3: 58 (5.9, 42.8)
T4: 70 (7.1, 51.6)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation, and disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
• When disassembling the case and other light alloy parts, use a plastic hammer to force it apart. Do not pry it apart with a screwdriver or other tool.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use SUBARU genuine gear oil, grease etc. or the equivalent. Do not mix gear oil, grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Apply gear oil onto sliding or revolution surfaces before installation.
• Replace deformed or otherwise damaged snap rings with new ones.
• Before installing O-rings or oil seals, apply sufficient amount of gear oil to avoid damage and deformation.
• Be careful not to incorrectly install or fail to install O-rings, snap rings and other such parts.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Avoid damaging the mating surface of the case.
• Before applying sealant, completely remove the old seal.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
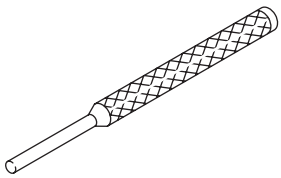 ST-398791700	398791700	REMOVER	Used for removing and installing spring pin (6 mm).
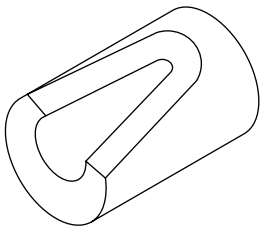 ST-399411700	399411700	ACCENT BALL INSTALLER	Used for installing reverse shifter rail arm.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
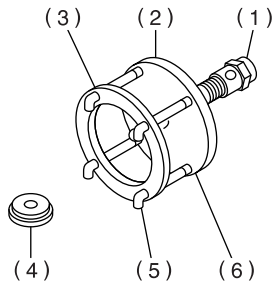 ST-399527700	399527700	PULLER SET	Used for removing and installing roller bearing (Differential). (1) BOLT (899521412) (2) PULLER (399527702) (3) HOLDER (399527703) (4) ADAPTER (398497701) (5) BOLT (899520107) (6) NUT (021008000)
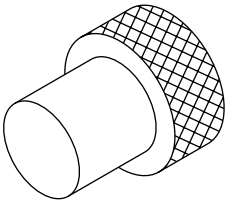 ST-399780104	399780104	WEIGHT	Used for measuring preload on roller bearing.
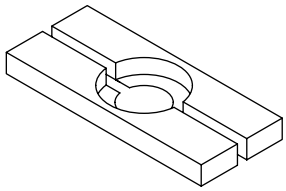 ST-498077000	498077000	REMOVER	Used for removing roller bearing of drive pinion shaft.
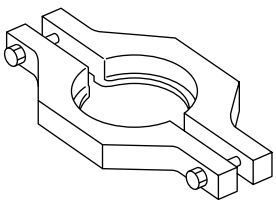 ST-498077300	498077300	CENTER DIFFERENTIAL BEARING REMOVER	Used for removing the center differential cover ball bearing.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
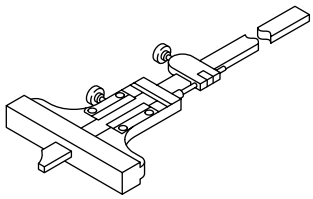 ST-498147000	498147000	DEPTH GAUGE	Used for adjusting main shaft axial end play.
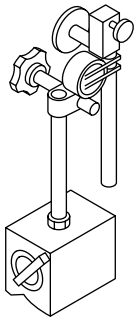 ST-498247001	498247001	MAGNET BASE	• Used for measuring backlash between side gear and pinion, and hypoid gear. • Used with DIAL GAUGE (498247100).
 ST-498247100	498247100	DIAL GAUGE	• Used for measuring backlash between side gear and pinion, and hypoid gear. • Used with MAGNET BASE (498247001).
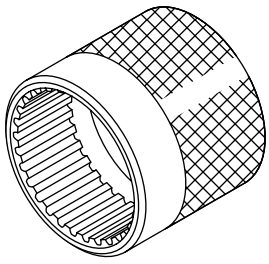 ST-498427100	498427100	STOPPER	Used for securing the drive pinion shaft assembly and driven gear assembly when removing the drive pinion shaft assembly lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
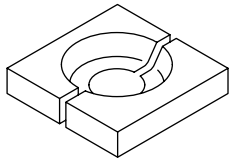 ST-498517000	498517000	REPLACER	• Used for removing drive pinion thrust plate and roller bearing race. • For FWD.
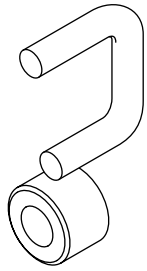 ST-498787100	498787100	MAIN SHAFT STOPPER	Used for removing and installing transmission main shaft lock nut.
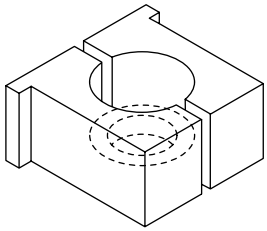 ST-498937000	498937000	TRANSMISSION HOLDER	Used for removing and installing transmission main shaft lock nut.
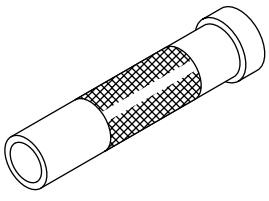 ST-499277100	499277100	BUSH 1-2 INSTALLER	• Used for installing 1st driven gear thrust plate and 1st-2nd driven gear bush. • Used for installing roller bearing outer races to differential case.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
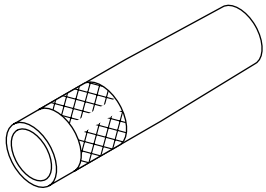 ST-499277200	499277200	INSTALLER	Used for press-fitting the 2nd driven gear, roller bearings and 5th driven gear onto the driven shaft.
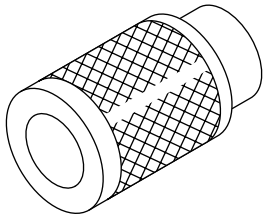 ST-499757002	499757002	INSTALLER	• Used for installing snap ring (OUT 25) and ball bearing (25 × 26 × 17). • Used for installing bearing cone of transfer driven gear (extension core side).
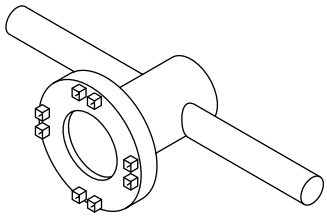 ST-499787000	499787000	WRENCH ASSY	Used for removing and installing differential side retainer.
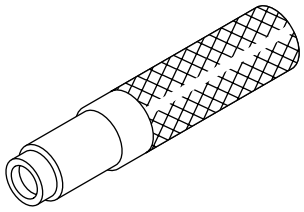 ST-499827000	499827000	PRESS	Used for installing speedometer oil seal when installing speedometer cable to transmission.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
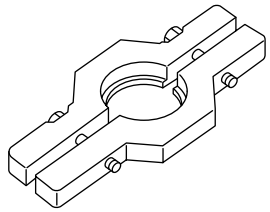 ST-499857000	499857000	5TH DRIVEN GEAR REMOVER	Used for removing 5th driven gear.
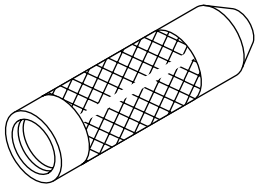 ST-499877000	499877000	RACE 4-5 INSTALLER	• Used for installing 4th needle bearing race and ball bearing onto transmission main shaft. • Used with REMOVER (899714110).
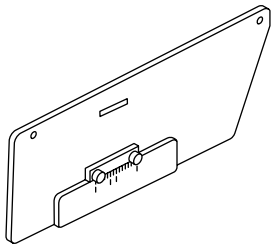 ST-499917500	499917500	DRIVE PINION GAUGE ASSY	Used for adjusting drive pinion shim.
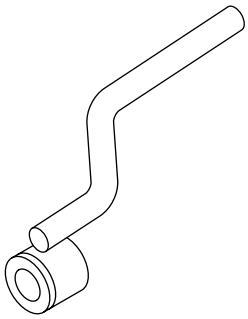 ST-499927100	499927100	HANDLE	Used for fitting transmission main shaft.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
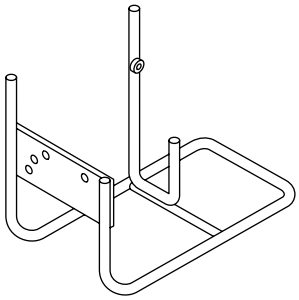 ST-499937100	499937100	TRANSMISSION STAND SET	Stand used for transmission disassembly and assembly.
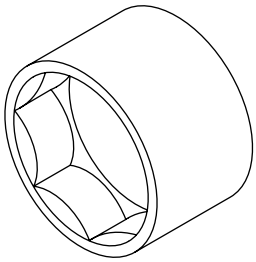 ST-499987003	499987003	SOCKET WRENCH (35)	Used for removing and installing driven pinion lock nut and main shaft lock nut.
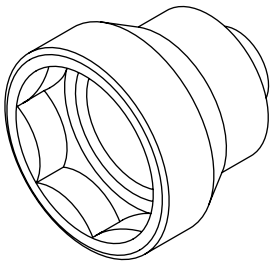 ST-499987300	499987300	SOCKET WRENCH (50)	Used for removing and installing driven gear assembly lock nut.
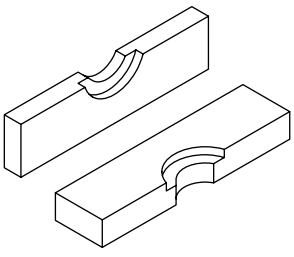 ST-899714110	899714110	REMOVER	Used for fixing transmission main shaft, drive pinion and rear drive shaft.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
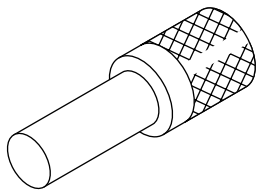 ST-899864100	899864100	REMOVER	Used for removing parts on transmission main shaft and drive pinion.
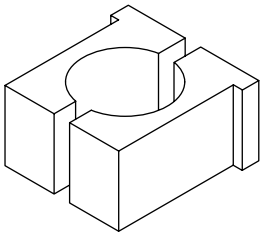 ST-899884100	899884100	HOLDER	Used for tightening lock nut on sleeve.
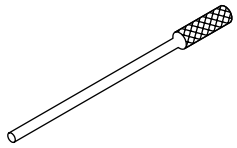 ST-899904100	899904100	REMOVER	Used for removing and installing straight pin.
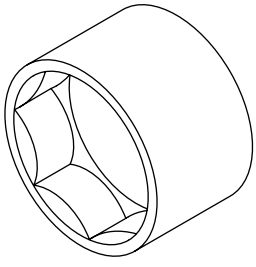 ST-899988608	899988608	SOCKET WRENCH (27)	Used for removing and installing drive pinion lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
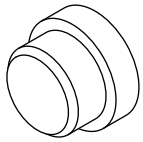 ST-398497701	398497701	ADAPTER	• Used for installing roller bearing onto differential case. • Used with INSTALLER (499277100).
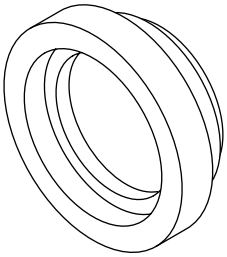 ST-499587000	499587000	INSTALLER	Used for installing driven gears to driven shaft.
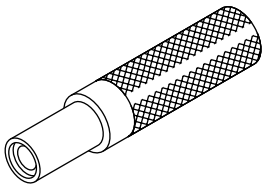 ST-899824100	899824100	PRESS	Used for installing speedometer shaft oil seal.
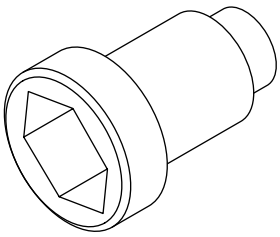 ST-499987100	499987100	SOCKET WRENCH (35)	Used for removing and installing drive pinion lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
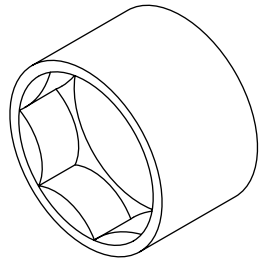 ST-899984103	899984103	SOCKET WRENCH (35)	Used for removing and installing drive pinion lock nut.
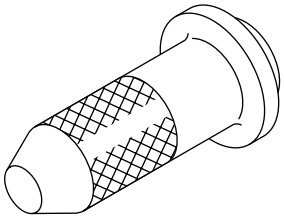 ST-498057300	498057300	INSTALLER	Used for installing extension oil seal.
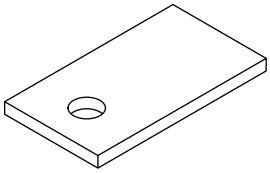 ST-498255400	498255400	PLATE	Used for measuring backlash.
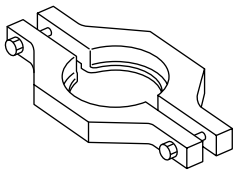 ST-498077400	498077400	SYNCHRONIZER CONE REMOVER	• Used for removing synchronizer cone of main shaft. • Used for removing 5th driven gear of drive pinion shaft.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
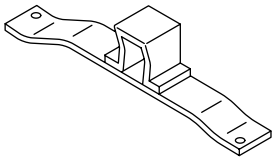 ST41099AA010	41099AA010	ENGINE SUPPORT BRACKET	Used for supporting engine.
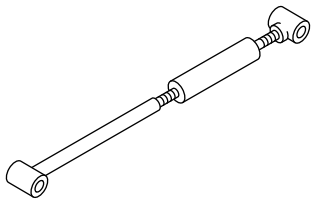 ST41099AA020	41099AA020	ENGINE SUPPORT	Used for supporting engine.
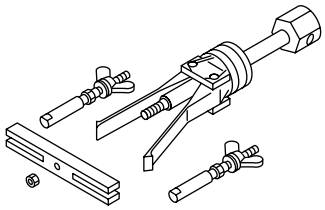 ST-398527700	398527700	PULLER ASSY	Used for removing extension case roller bearing.
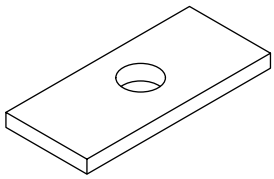 ST-398643600	398643600	GAUGE	Used for measuring total end play, extension end play and drive pinion height.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
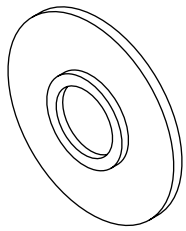 ST-398177700	38177700	INSTALLER	• Used for installing bearing cone of transfer driven gear (transfer case side). • Used for installing ball bearing of transfer drive gear.
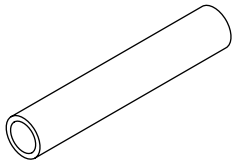 ST-398507703	398507703	DUMMY COLLAR	• Used for installing input shaft holder oil seal. • For dual-range model.
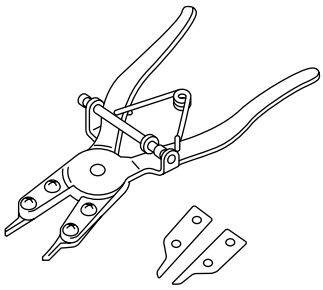 ST-398663600	398663600	PLIERS	• Used for removing and installing input shaft snap ring. • For dual-range model.
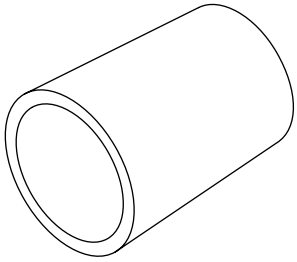 ST-499757001	499757001	SNAP RING GUIDE	• Used for installing snap ring (OUT 25). • For dual-range model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
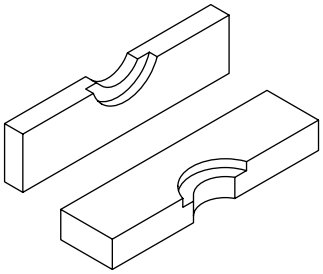 ST-899858600	899858600	RETAINER	• Used for removing ball bearing. • For dual-range model.
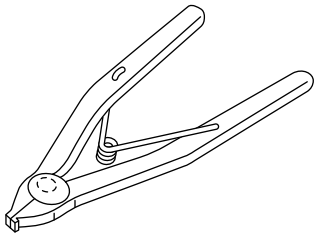 ST-899474100	899474100	EXPANDER	• Used for removing and installing snap ring. • For dual-range model.
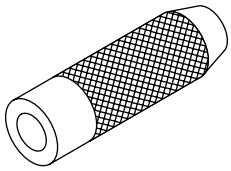 ST-899580100	899580100	INSTALLER	• Used when pressing ball bearings into input shaft. • For dual-range model.
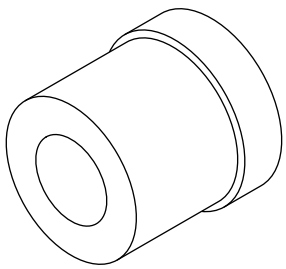 ST-399513600	399513600	INSTALLER	• Used when pressing ball bearings into input shaft. • For dual-range model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
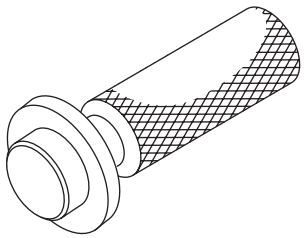 ST-499797000	499797000	INSTALLER	Used for installing differential side retainer oil seal.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.

2. Transmission Gear Oil

A: INSPECTION

1) Park the vehicle on a level surface.
2) Turn the ignition switch to OFF, and then wait until the engine cools.
3) Remove the oil level gauge and wipe it clean.
4) Reinsert the level gauge all the way. Be sure the level gauge is correctly inserted and in the proper direction.
5) Pull out the oil level gauge again and check the oil level on it. If it is below the lower level, add oil through the oil level gauge hole to bring the level up to the upper level.

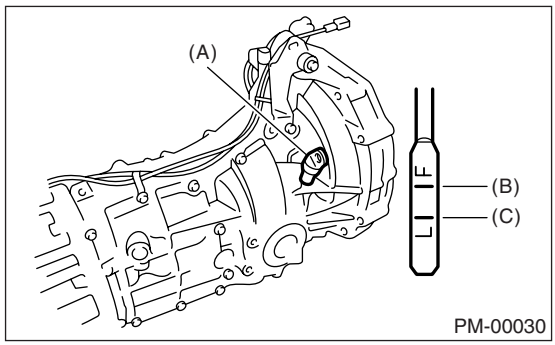

(A) Oil level gauge
(B) Upper level
(C) Lower level

B: REPLACEMENT

1) Pull out the oil level gauge.
2) Lift-up the vehicle.
3) Drain the transmission gear oil completely.

CAUTION:
Directly after the engine has been running, the transmission gear oil is hot. Be careful not to burn yourself.

NOTE:
Tighten the transmission gear oil drain plug after draining the transmission gear oil.

Tightening torque:
69 N·m (7.0 kgf-m, 50.6 ft-lb)

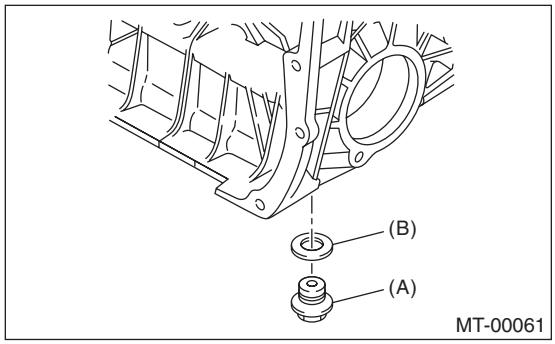

(A) Drain plug
(B) Gasket

4) Lower the vehicle.
5) Pour gear oil into the gauge hole.

Recommended gear oil:
Use GL-5 or equivalent.

Gear oil capacity:
FWD model
3.3 ℓ (3.5 US qt, 2.9 Imp qt)
AWD model
Single-range model;
3.5 ℓ (3.7 US qt, 3.1 Imp qt)
Dual-range model;
4.0 ℓ (4.2 US qt, 3.5 Imp qt)

6) Check the level of the transmission gear oil.

CAUTION:
When inserting the level gauge into transmission gear, align the protrusion on the side of the top part of level gauge with the notch in the gauge hole.

NOTE:
The level should be within the specified range marked on the gauge.

3. Manual Transmission Assembly

A: REMOVAL

1) Open the front hood fully, and support with stay.
2) Disconnect the ground cable from battery.
3) Remove the air intake duct and cleaner case. (Non-turbo model) <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.> and <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
4) Remove the air cleaner case stay. (Non-turbo model)

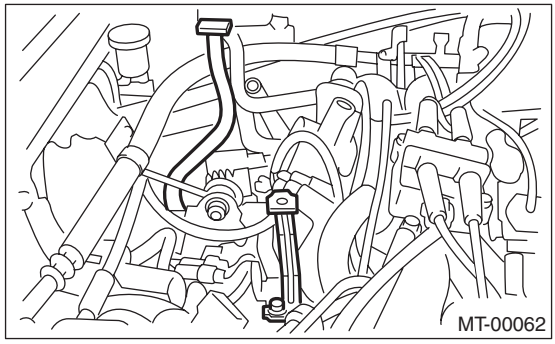

5) Remove the intercooler (Turbo model) <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
6) Disconnect the following connectors:
   (1) Neutral position switch connector
   (2) Back-up light switch connector
   (3) High-low switch connector (Dual-range model)

- NON-TURBO MODEL

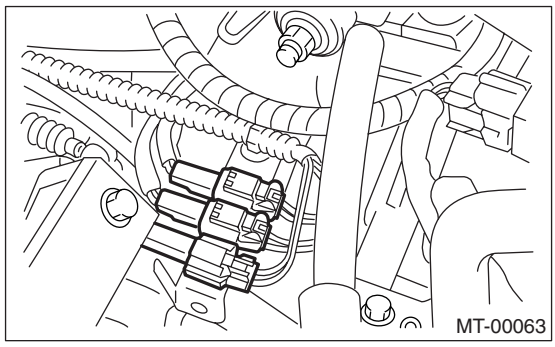

- TURBO MODEL

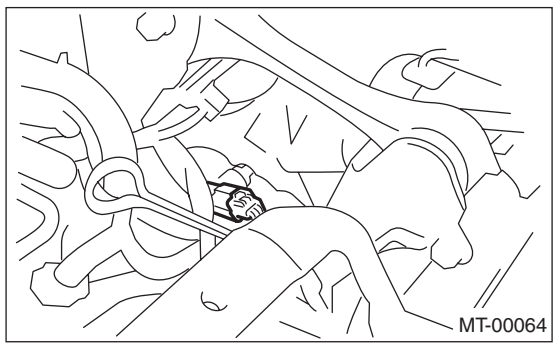

(4) Vehicle speed sensor

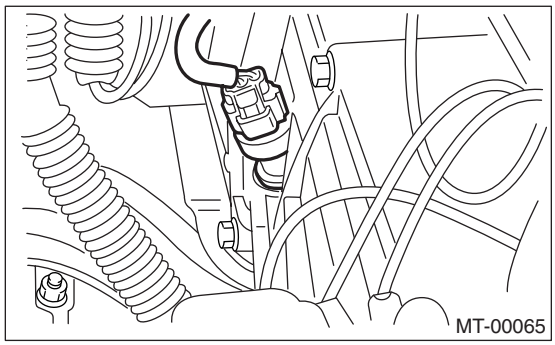

7) Remove the snap pin and clevis pin from drive select cable.
8) Remove the drive select cable on transmission. (Dual-range model)

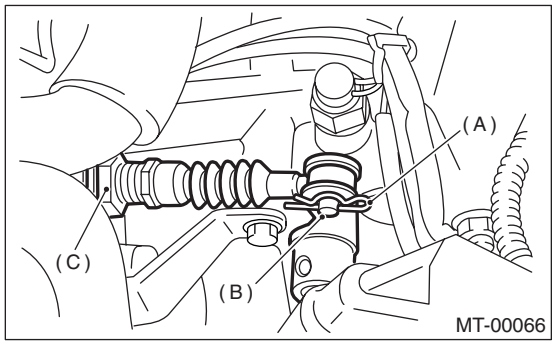

(A) Snap pin
(B) Clevis pin
(C) Drive select cable

9) Remove the starter. <Ref. to SC(H4SO)-7, REMOVAL, Starter.>
10) Remove the operating cylinder from transmission. (2.0 L and 2.5 L model)

- Non-turbo MODEL

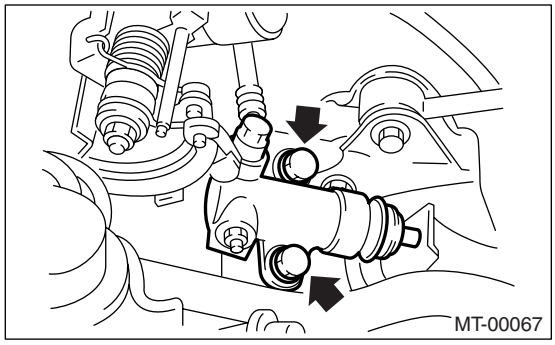

• Turbo MODEL

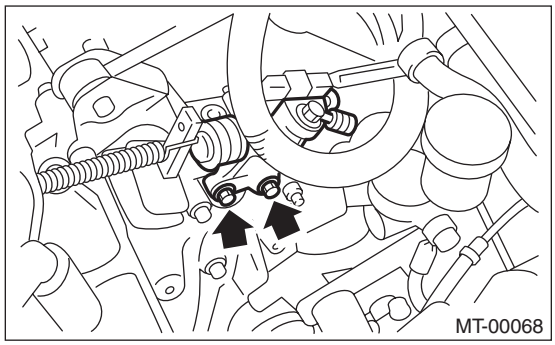

11) Disconnect the return spring and clutch cable. (1.6 L model)

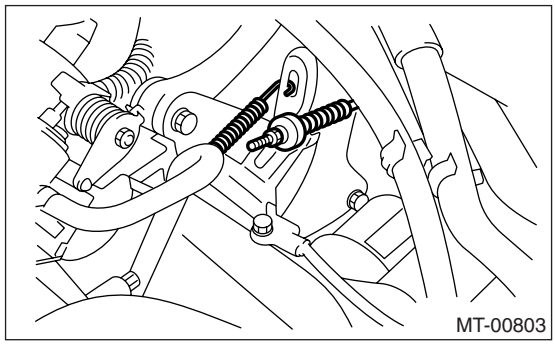

12) Remove the pitching stopper.

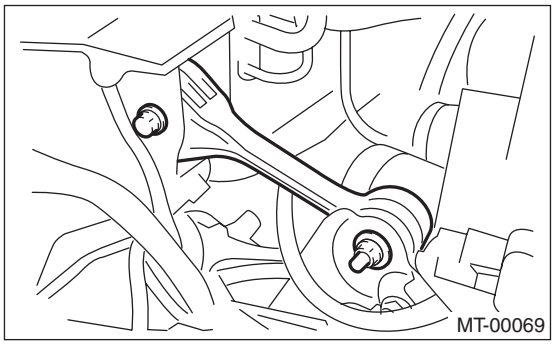

13) Set the ST.

NOTE:
Also is available Part No. 41099AA010.

ST 41099AA020 ENGINE SUPPORT ASSY

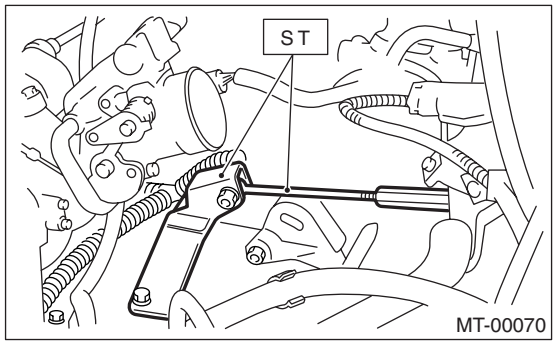

14) Separate the clutch release fork from release bearing. (Turbo model)

(1) Remove the clutch operating cylinder from transmission.

(2) Remove the plug using 10 mm hexagon wrench.

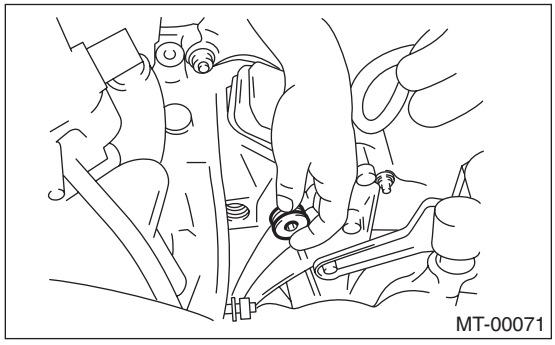

(3) Screw the 6 mm dia. bolt into release fork shaft, and then remove it.

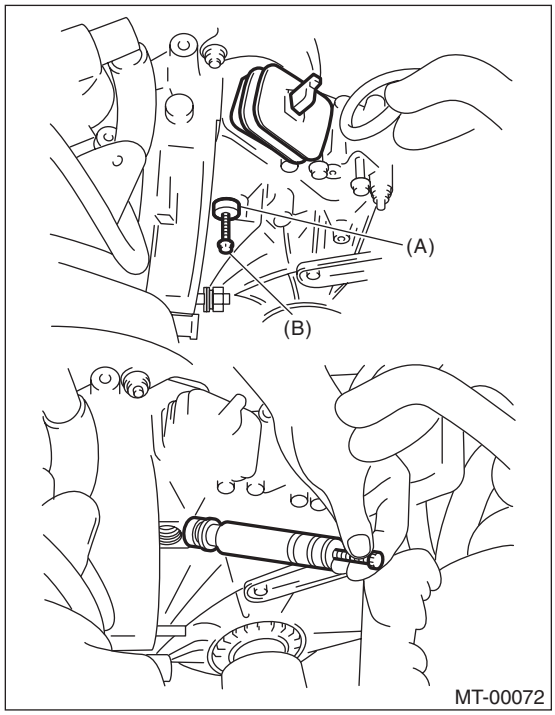

(A) Shaft
(B) Bolt

(4) Raise the release fork and unfasten the release bearing tabs to free release fork.

NOTE:
Step (4) is required to prevent interference with engine when removing the engine from transmission.

15) Remove the bolt which holds the right upper side of transmission to engine.

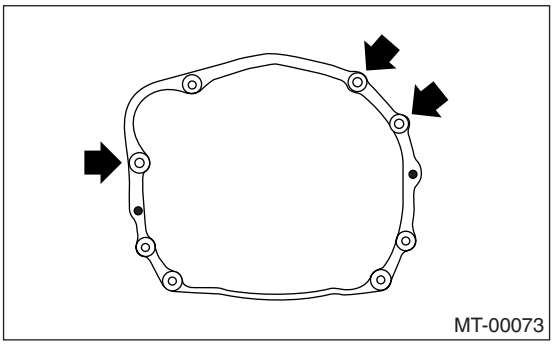

16) Remove the front and center exhaust pipes. (Non-turbo model) <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
17) Remove the center exhaust pipe. (Turbo model). <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
18) Remove the rear exhaust pipe and muffler.

CAUTION:
When removing the exhaust pipes, be careful each exhaust pipe does not drop out.

19) Remove the heat shield cover. (If equipped)
20) Remove the hanger bracket from right side of transmission.

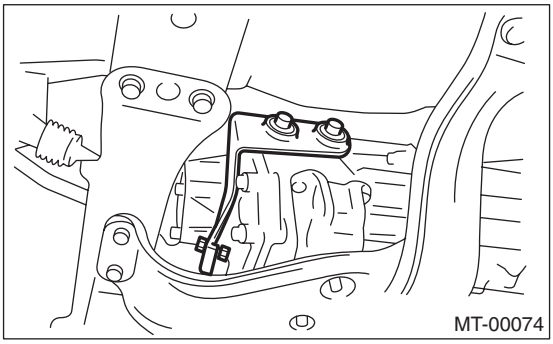

21) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>

22) Remove the gear shift rod and stay from transmission.
(1) Disconnect the stay from transmission.
(2) Disconnect the rod from transmission.

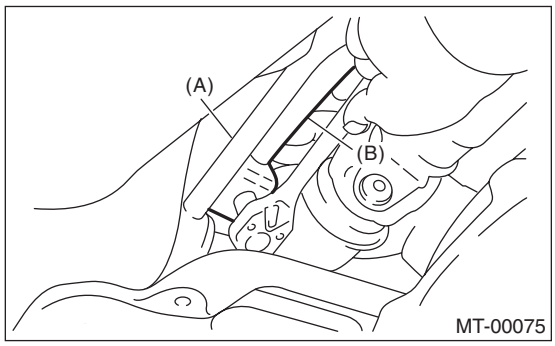

(A) Stay
(B) Rod

23) Disconnect the stabilizer link from transverse link.
24) Remove the bolt securing ball joint of transverse link to housing.
• WAGON MODEL

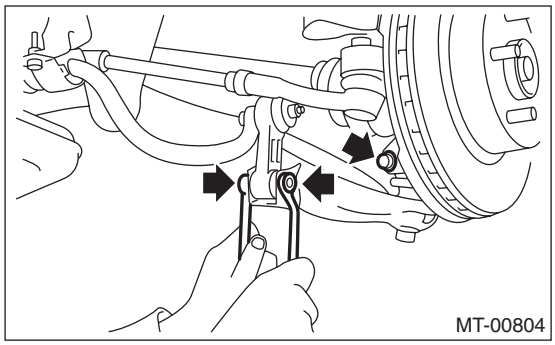

• SEDAN MODEL

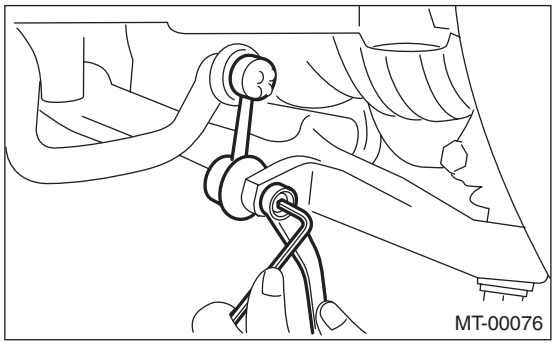

25) Remove the spring pins and separate the front drive shafts from each side of transmission.

NOTE:
Discard the removing spring pin. Replace with a new one.

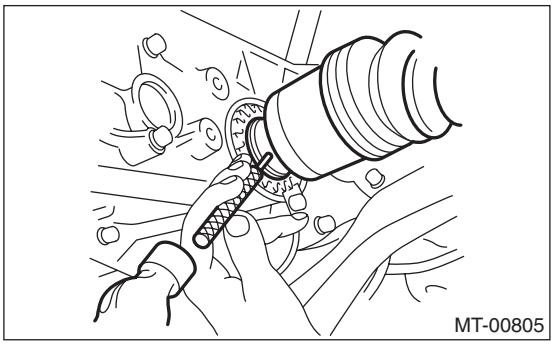

26) Remove the nuts which hold the lower side of transmission to engine.

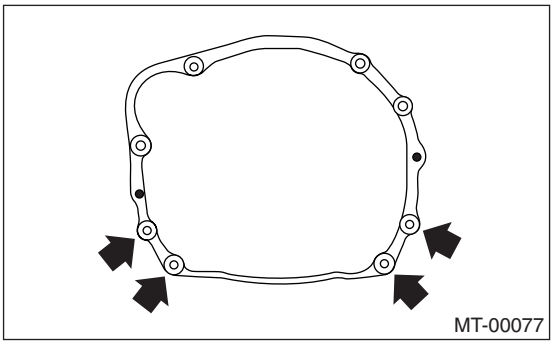

27) Place the transmission jack under transmission.

CAUTION:
Always support the transmission case with a transmission jack.

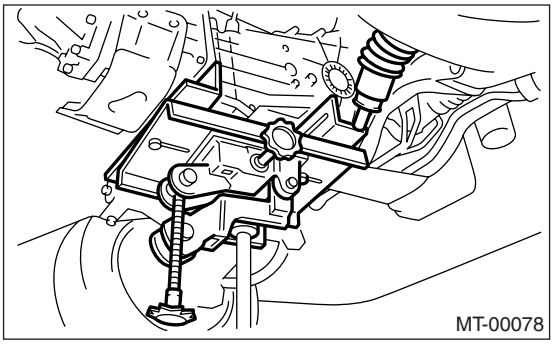

28) Remove the transmission rear crossmember from vehicle.

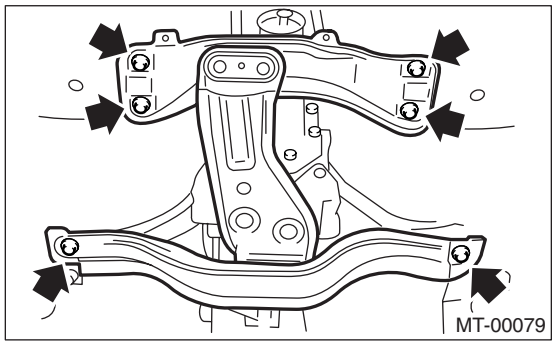

29) Remove the transmission.

NOTE:
Move the transmission jack toward rear until main shaft is withdrawn from clutch cover.

30) Separate the transmission assembly and rear cushion rubber.

B: INSTALLATION

1) Install the rear cushion rubber to transmission assembly.

Tightening torque:
35 N·m (3.57 kgf-m, 25.8 ft-lb)

2) Install the clutch release lever and bearing onto transmission. (Turbo model) <Ref. to CL-26, INSTALLATION, Release Bearing and Lever.>

3) Install the transmission onto engine.
   (1) Gradually raise the transmission with transmission jack.
   (2) Engage them at splines.

NOTE:
Be careful not to strike the main shaft against clutch cover.

4) Install the transmission rear crossmember.

Tightening torque:
T1: 70 N·m (7.1 kgf-m, 51 ft-lb)
T2: 140 N·m (14.3 kgf-m, 103 ft-lb)

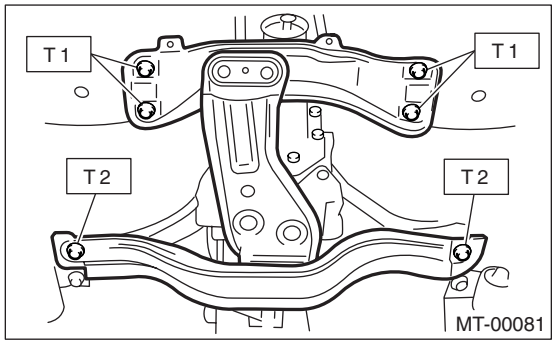

5) Take off the transmission jack.

6) Tighten the nuts which hold the lower side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

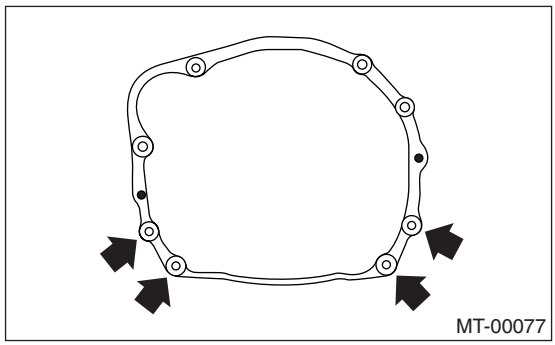

7) Connect the engine and transmission.
(1) Install the starter.
<Ref. to SC(H4SO)-7, INSTALLATION, Starter.>
(2) Tighten the bolt which holds right upper side of transmission to engine.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

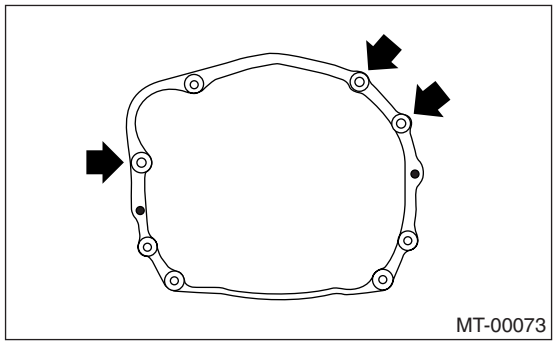

8) Remove the ST.

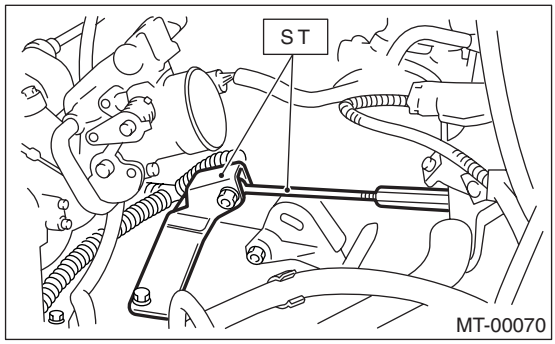

9) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

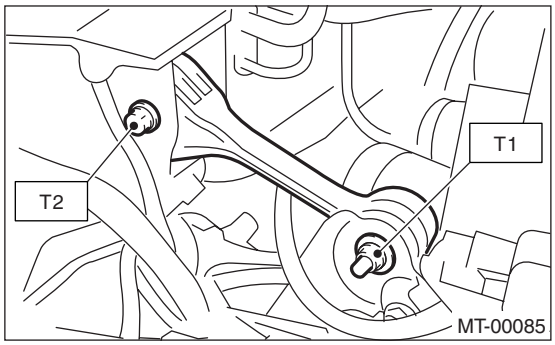

10) Lift-up the vehicle.
11) Install the front drive shaft into transmission.
12) Drive the spring pin into chamfered hole of drive shaft.

NOTE:
Always use a new spring pin.

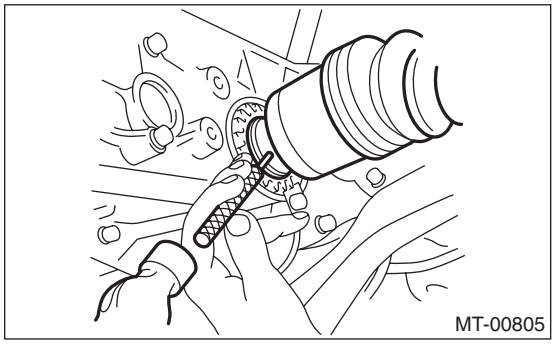

13) Install the ball joints of lower arm into knuckle arm of housing, and tighten the installing bolts.

Tightening torque:
49 N·m (5.0 kgf-m, 36 ft-lb)

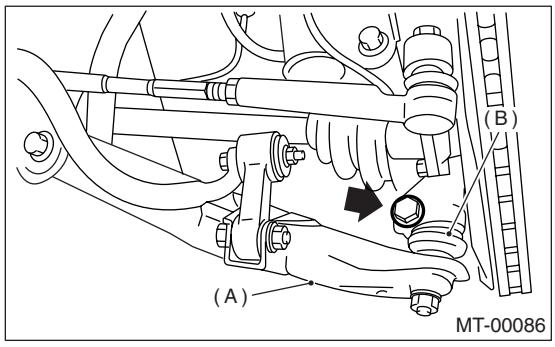

(A) Transverse link
(B) Ball joint

14) Install the stabilizer link from transverse link.
- WAGON MODEL

Tightening torque:
30 N·m (3.1 kgf-m, 22.1 ft-lb)

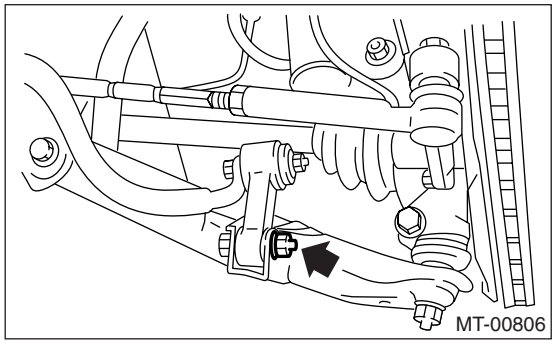

- SEDAN MODEL

Tightening torque:
45 N·m (4.6 kgf-m, 33.2 ft-lb)

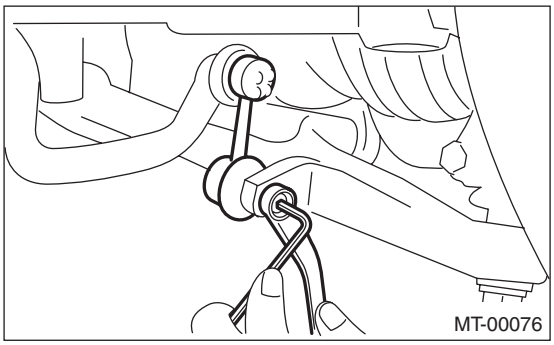

15) Install the gear shift rod and stay.
(1) Install the gear shift rod onto transmission.

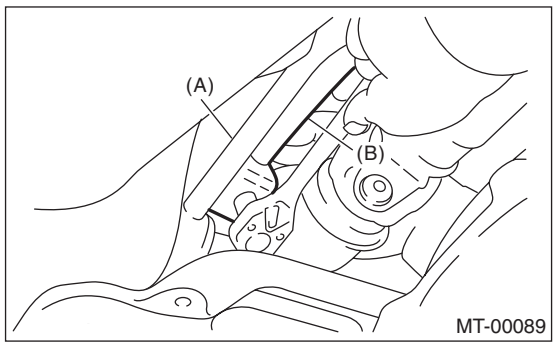

(A) Stay
(B) Rod

(2) Install the stay onto transmission.
16) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
17) Install the heat shield cover. (If equipped)
18) Install the hanger bracket on right side of transmission.

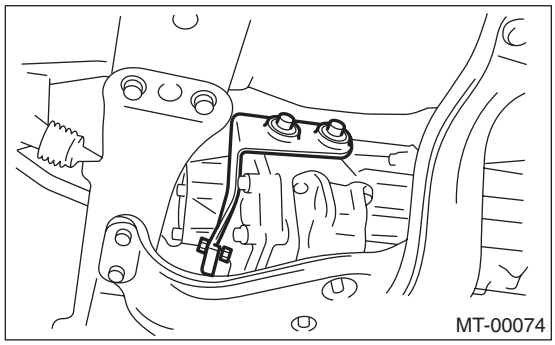

19) Install the rear exhaust pipe and muffler.
20) Install the front exhaust pipe and center exhaust pipe. (Non-turbo model)
<Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>
21) Install the center exhaust pipe. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>
22) Install the under cover.
23) Install the operating cylinder. (2.0 L and 2.5 L model)

Tightening torque:
37 N·m (3.8 kgf-m, 27.5 ft-lb)
- NON-TURBO MODEL

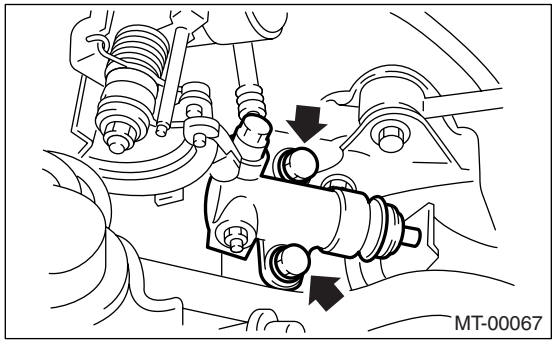

- TURBO MODEL

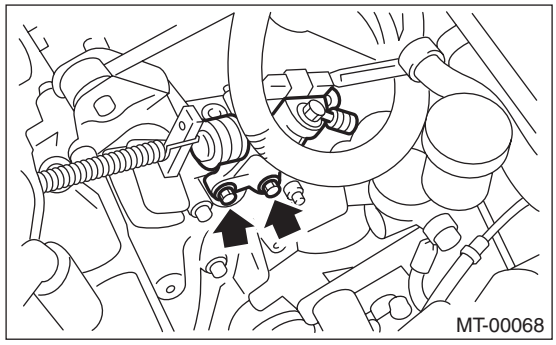

24) Connect the return spring and clutch cable.
(1.6 L model)

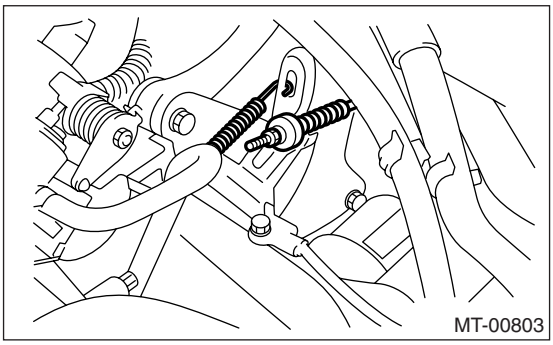

25) Install the drive select cable on transmission.
(Dual-range model)

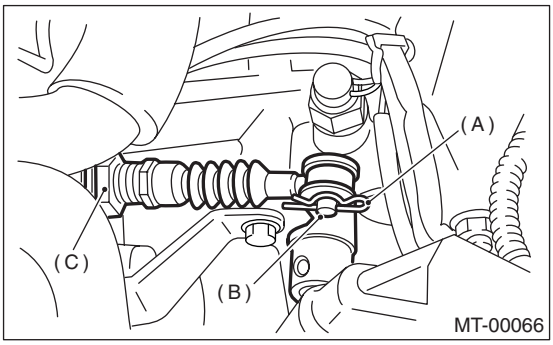

(A) Snap pin
(B) Clevis pin
(C) Drive select cable

26) Connect the following connectors:
(1) Transmission ground cable

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

(2) Vehicle speed sensor connector
(3) Neutral position switch connector
(4) Back-up light switch connector
(5) High-low switch connector (Dual-range model)

27) Install the air cleaner case stay.

Tightening torque:
16 N·m (1.6 kgf-m, 11.6 ft-lb)

28) Install the air cleaner case and duct.
29) Connect the battery ground cable to battery.
30) Take off the vehicle from lift arms.

4. Transmission Mounting System

A: REMOVAL

1. PITCHING STOPPER

1) Disconnect the ground cable from battery.
2) Remove the air intake duct (Non-turbo model). <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Remove the air cleaner case (Non-turbo model). <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
4) Remove the intercooler (Turbo model). <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
5) Remove the pitching stopper.

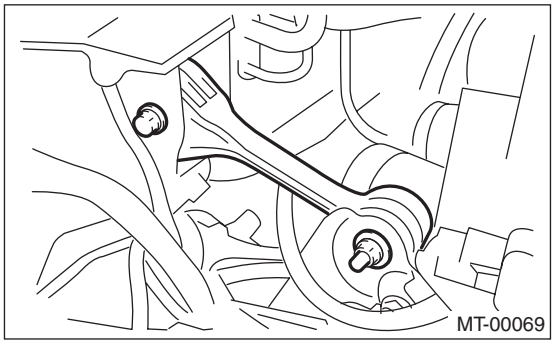

2. CROSSMEMBER AND CUSHION RUBBER

1) Disconnect the ground cable from battery.
2) Jack-up the vehicle and support it with sturdy racks.
3) Remove the front and center exhaust pipes. (Non-turbo model)
Without OBD
<Ref. to EX(H4SOw/oOBD)-6, REMOVAL, Front Exhaust Pipe.>
With OBD
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
4) Remove the center exhaust pipe. (Turbo model)
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
5) Remove the rear exhaust pipe and muffler.
6) Remove the heat shield cover. (If equipped)
7) Set the transmission jack under the transmission body.

CAUTION:
Always support the transmission case with a transmission jack.

8) Remove the rear crossmember.

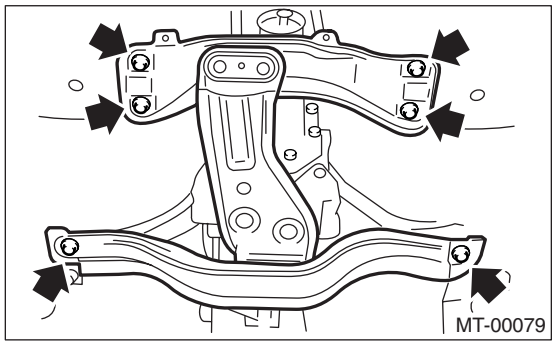

9) Remove the rear cushion rubber.

B: INSTALLATION

1. PITCHING STOPPER

1) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 37 ft-lb)
T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

2) Install the air intake duct and cleaner case. (Non-turbo model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
3) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
4) Connect the battery ground cable to battery.

2. CROSSMEMBER AND CUSHION RUBBER

1) Install the rear cushion rubber.

Tightening torque:
35 N·m (3.6 kgf-m, 26 ft-lb)

2) Install the rear crossmember.

Tightening torque:
T1: 70 N·m (7.1 kgf-m, 51 ft-lb)
T2: 140 N·m (14.3 kgf-m, 103 ft-lb)

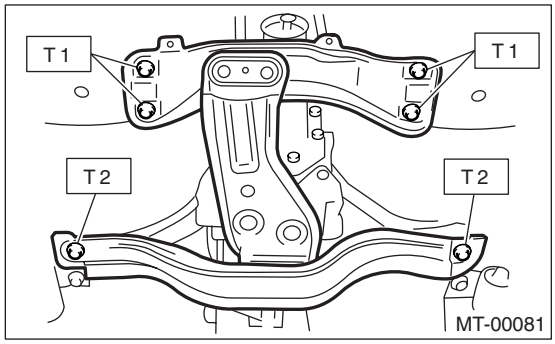

3) Remove the transmission jack.
4) Install the heat shield cover. (If equipped)

5) Install the front and center exhaust pipes. (Non-turbo model)
Without OBD
<Ref. to EX(H4SOw/oOBD)-7, INSTALLATION, Front Exhaust Pipe.>
With OBD
<Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>
6) Install the center exhaust pipe. (Turbo model)
<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>
7) Install the rear exhaust pipe and muffler.

C: INSPECTION

Repair or replace parts if the results of the inspection below are not satisfactory.

1. PITCHING STOPPER

Make sure the pitching stopper is not bent or damaged. Make sure the rubber is not stiff, cracked, or otherwise damaged.

2. CROSSMEMBER AND CUSHION RUBBER

Make sure the crossmember is not bent or damaged. Make sure the cushion rubber is not stiff, cracked, or otherwise damaged.

5. Oil Seal

A: INSPECTION

Check the oil seal portion for leakage. If leakage is found, replace the oil seal with a new one.

B: REPLACEMENT

1) Clean the transmission exterior.
2) Drain the gear oil completely.

NOTE:
Tighten the drain plug after draining gear oil.

Tightening torque:
69 N·m (7.0 kgf-m, 50.6 ft-lb)

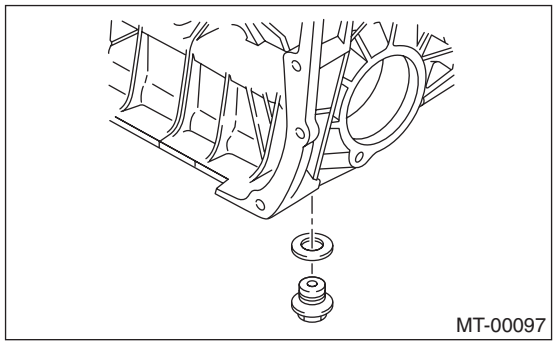

3) Remove the rear exhaust pipe and muffler.
4) Remove the heat shield cover. (If equipped)
5) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
6) Using the ST, remove the oil seal.
ST 398527700 PULLER ASSY

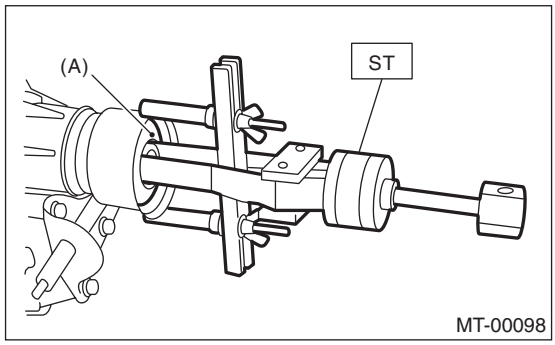

(A) Oil seal

7) Using the ST, install the oil seal.
ST 498057300 INSTALLER

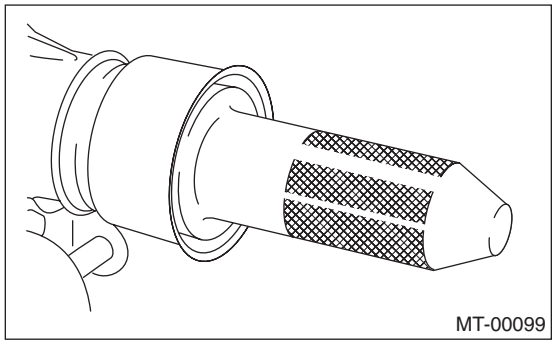

8) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
9) Install the heat shield cover.
10) Install the rear exhaust pipe and muffler.
11) Pour gear oil and check the oil level. <Ref. to 5MT-37, REPLACEMENT, Transmission Gear Oil.>

6. Switches and Harness

A: REMOVAL

1. BACK-UP LIGHT AND NEUTRAL POSITION SWITCH

1) Disconnect the ground cable from battery.
2) Remove the air intake duct and cleaner case. (Non-turbo model) <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Remove the intercooler (Turbo model). <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
4) Disconnect the connector of back-up light switch and neutral position switch.

- Non-turbo MODEL

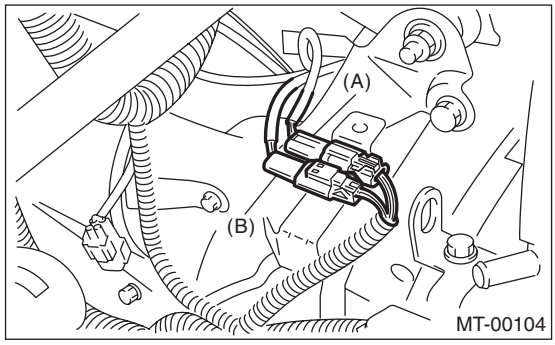

(A) Neutral switch (Brown)
(B) Back-up light switch (Gray)

- Turbo MODEL

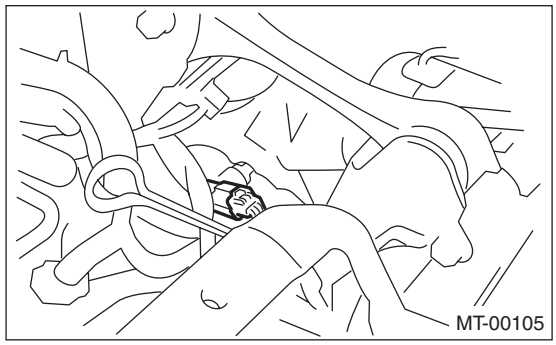

5) Lift-up the vehicle.
6) Remove the back-up light switch and neutral position switch with harness.

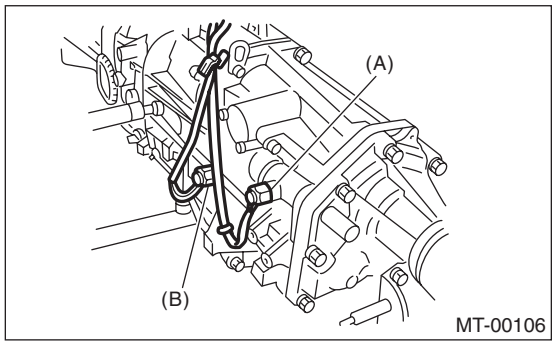

(A) Neutral switch (Brown)
(B) Back-up light switch (Gray)

2. HIGH-LOW SWITCH

1) Disconnect the ground cable from battery.
2) Remove the air intake duct and cleaner case. (Non-turbo model) <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Disconnect the connector of high-low switch.

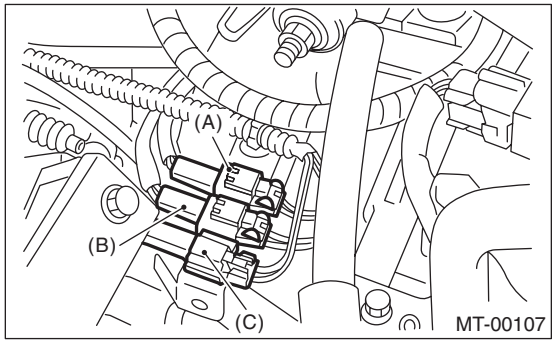

(A) Neutral switch (Brown)
(B) Back-up light switch (Gray)
(C) High-low switch (Black)

4) Remove the high-low switch cable from clamp.
5) Remove the high-low switch.

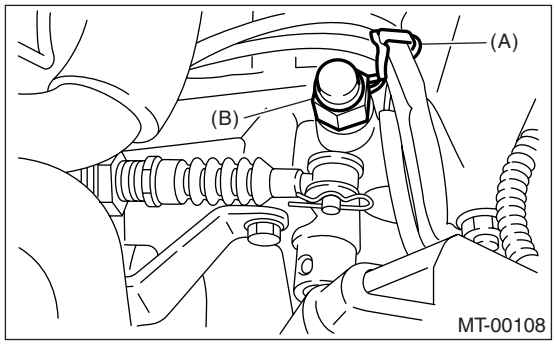

(A) Clamp
(B) High-low switch

B: INSTALLATION

1. BACK-UP LIGHT SWITCH AND NEUTRAL POSITION SWITCH

1) Install the back-up light switch and neutral position switch with harness.

Tightening torque:
24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

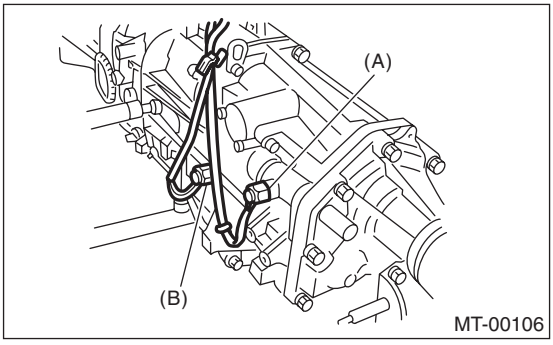

(A) Neutral switch
(B) Back-up light switch

2) Connect the connector of back-up light switch and neutral position switch.
3) Install the air intake duct and cleaner case. (Non-turbo model) <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
4) Install the intercooler. (Turbo model)
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
5) Connect the battery ground cable to battery.

2. HIGH-LOW SWITCH

1) Install the high-low switch.

Tightening torque:
24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

2) Install the high-low switch cable to clamp.
3) Connect the connector of high-low switch.
4) Install the air intake duct and cleaner case. <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
5) Connect the battery ground cable to battery.

C: INSPECTION

1. BACK-UP LIGHT SWITCH

Inspect the back-up light switch. <Ref. to LI-7, INSPECTION, Back-up Light System.>

2. NEUTRAL POSITION SWITCH

1) Turn the ignition switch to OFF.
2) Disconnect the connector of neutral position switch.
3) Measure the resistance between neutral position switch terminals.

Non-turbo model:

Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 2	Less than 1 Ω
Other positions		More than 1 MΩ

Turbo model:

Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 3	Less than 1 Ω
Other positions		More than 1 MΩ

- NON-TURBO MODEL

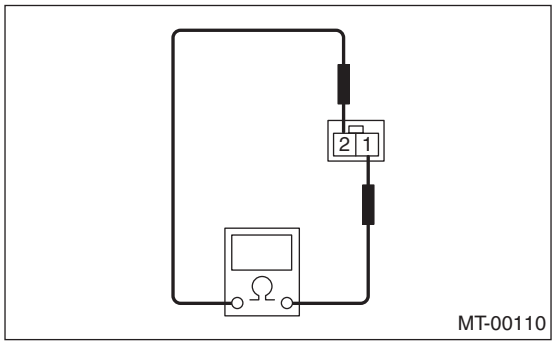

- TURBO MODEL

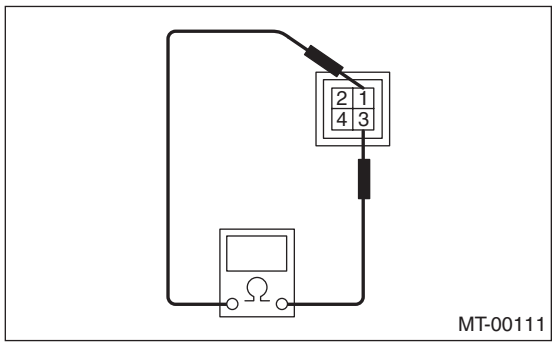

4) Replace defective parts.

3. HIGH-LOW SWITCH

1) Turn ignition switch to OFF.
2) Disconnect connector high-low switch.
3) Measure the resistance between high-low switch terminals.

Gear shift position	Terminal No.	Specified resistance
LO position	1 and 2	Less than 1 Ω
HIGH position		More than 1 MΩ

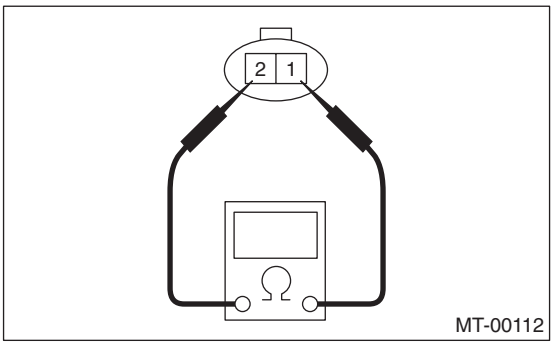

4) Replace defective parts.

7. Vehicle Speed Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle.
3) Remove the front, center rear exhaust pipes and muffler.
4) Disconnect the connector from vehicle speed sensor.
5) Turn and remove the vehicle speed sensor.

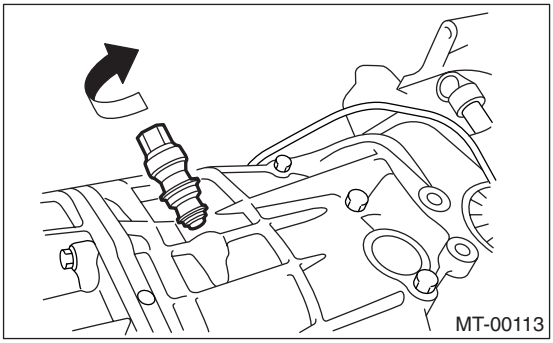

B: INSTALLATION

NOTE:
• Discard the vehicle speed sensor and after removal, replace with a new one.
• Ensure the sensor mounting hole is clean and free of foreign matter.
• Align the tip end of key with key groove on end of speedometer shaft during installation.

1) Hand tighten the vehicle speed sensor.
2) Tighten the vehicle speed sensor using suitable tool.

Tightening torque:
5.9 N·m (0.6 kgf-m, 4.3 ft-lb)

3) Connect the connector to vehicle speed sensor.
4) Install the front, center exhaust pipes and muffler.
5) Lower the vehicle.
6) Connect the battery ground cable to battery.

C: INSPECTION

Inspect the vehicle speed sensor.
Without OBD
<Ref. to EN(H4SOw/oOBD)-79, DTC 33 VEHICLE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
With OBD Non-turbo model
<Ref. to EN(H4SO)-182, DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>, <Ref. to EN(H4SO)-183, DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
Turbo model
<Ref. to EN(H4DOTC)-202, DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>, <Ref. to EN(H4DOTC)-204, DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

8. Preparation for Overhaul

A: PROCEDURE

1) Clean oil, grease, dirt and dust from transmission.
2) Remove the drain plug to drain oil. After draining, retighten it as before.

NOTE:
Replace the gasket with a new one.

Tightening torque:
69 N·m (7.0 kgf-m, 50.6 ft-lb)

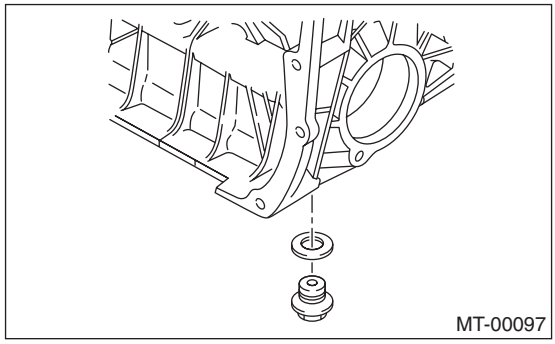

3) Attach the transmission to ST.
ST 499937100 TRANSMISSION STAND

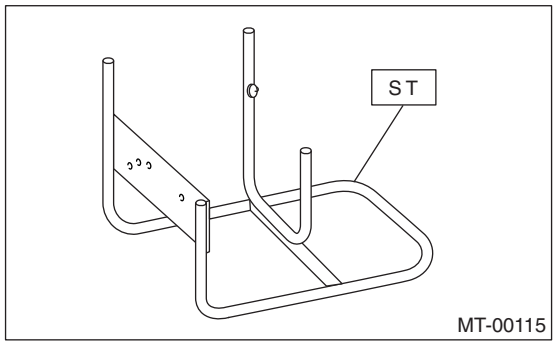

4) Rotating parts should be coated with oil prior to assembly.
5) All disassembled parts, if to be reused, should be reinstalled in the original positions and directions.
6) Gaskets, lock washers and lock nut must be replaced with new ones.
7) Liquid gasket should be used where specified to prevent leakage.

9. Transfer Case and Extension Case Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove the transfer case with extension case assembly.

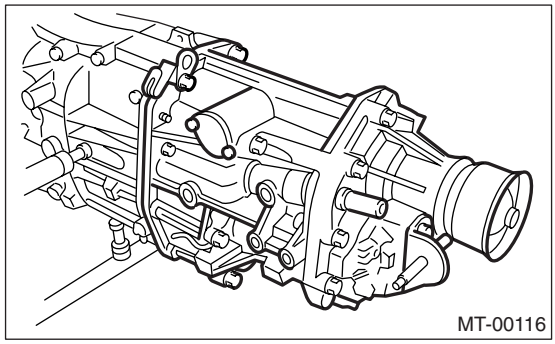
MT-00116

4) Remove the shifter arm.
5) Remove the extension case assembly.

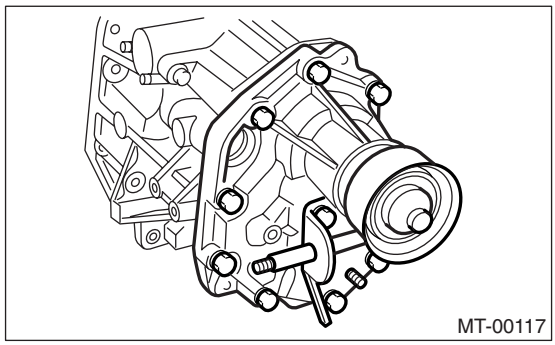
MT-00117

B: INSTALLATION

1) Install the center differential and transfer driven gear into transfer case.

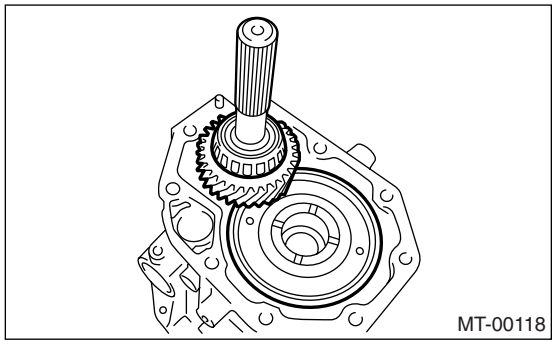
MT-00118

2) Remove the bearing outer race from extension case.

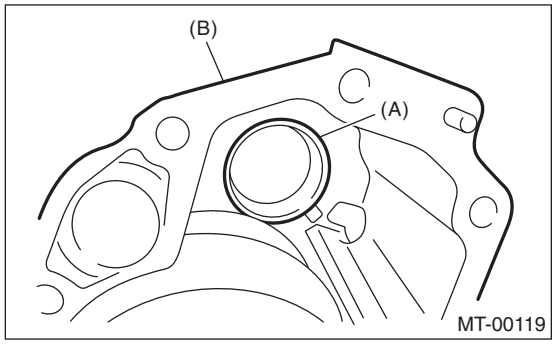

MT-00119

(A) Bearing outer race
(B) Extension case

3) While pressing the bearing outer race horizontally, turn the driven shaft ten rotations.
4) Measure the height “W” between transfer case and taper roller bearing on the transfer driven gear.

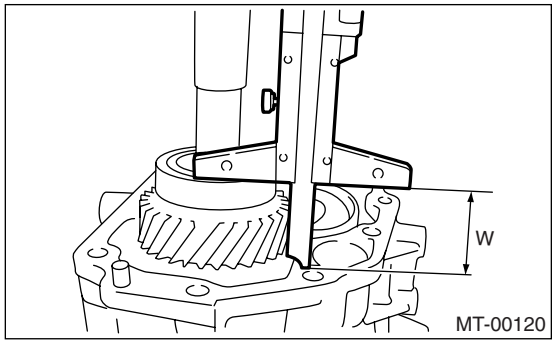

MT-00120

5) Measure the depth “X”.

NOTE:
Measure with bearing cone and thrust washer removed.

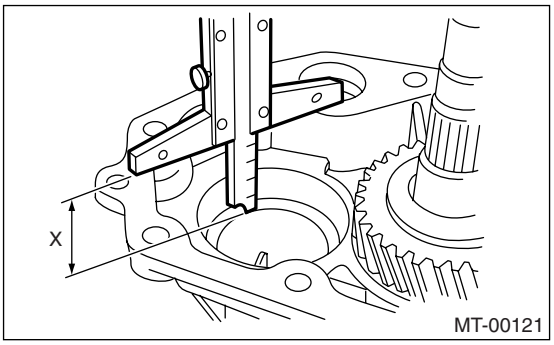

6) Calculate the space “t” using the following equation: t = X − W + 0.2 to 0.3 mm (0.008 to 0.012 in)
7) Select the nearest washer in the following table:

Standard clearance between thrust washer and taper roller bearing:
0.2 — 0.3 mm T (0.008 — 0.012 in T)

NOTE:
T: Tight

Thrust washer (50 × 61 × t)	
Part No.	Thickness mm (in)
803050060	0.50 (0.0197)
803050061	0.55 (0.0217)
803050062	0.60 (0.0236)
803050063	0.65 (0.0256)
803050064	0.70 (0.0276)
803050065	0.75 (0.0295)
803050066	0.80 (0.0315)
803050067	0.85 (0.0335)
803050068	0.90 (0.0354)
803050069	0.95 (0.0374)
803050070	1.00 (0.0394)
803050071	1.05 (0.0413)
803050072	1.10 (0.0433)
803050073	1.15 (0.0453)
803050074	1.20 (0.0472)
803050075	1.25 (0.0492)
803050076	1.30 (0.0512)
803050077	1.35 (0.0531)
803050078	1.40 (0.0551)
803050079	1.45 (0.0571)

8) Fit the thrust washers on transfer drive shaft.
9) Install the bearing cone into extension case.

10) Measure the depth “S” between transfer case and center differential.
ST 398643600 GAUGE

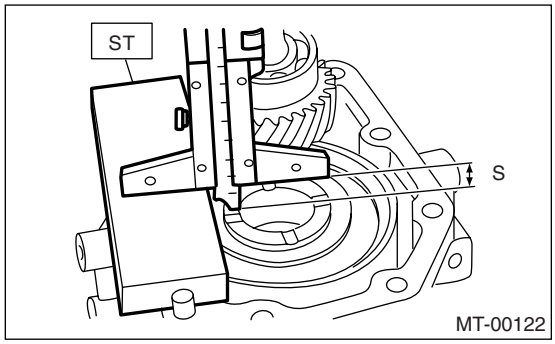

11) Measure the depth “T” between extension case and transfer drive gear.
ST 398643600 GAUGE

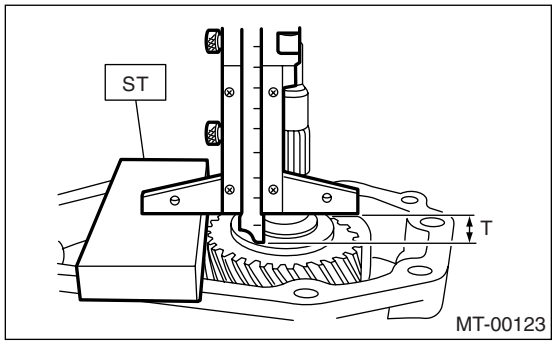

12) Calculate the space “U” using the following equation: U = S + T − 30 mm (1.18 in) [Thickness of ST]
13) Select the suitable washer in the following table:

Standard clearance:
0.15 — 0.35 mm (0.0059 — 0.0138 in)

Thrust washer	
Part No.	Thickness mm (in)
803036050	0.9 (0.035)
803036054	1.0 (0.039)
803036051	1.1 (0.043)
803036055	1.2 (0.047)
803036052	1.3 (0.051)
803036056	1.4 (0.055)
803036053	1.5 (0.059)
803036057	1.6 (0.063)
803036058	1.7 (0.067)

14) Fit the thrust washer on center differential.

15) Apply proper amount of liquid gasket to the transfer case mating surface.

Liquid gasket:
THREE BOND 1215

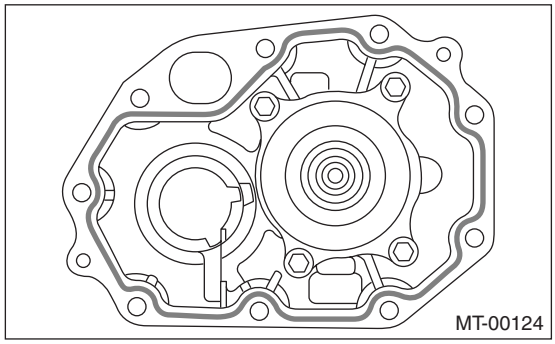

16) Install the extension assembly into transfer case.

Tightening torque:
40 N·m (4.1 kgf-m, 29.7 ft-lb)

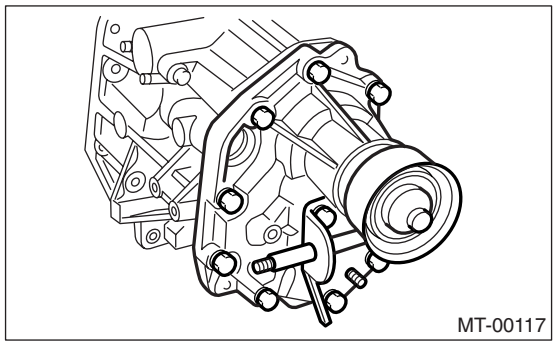

17) Install the shifter arm to transfer case.

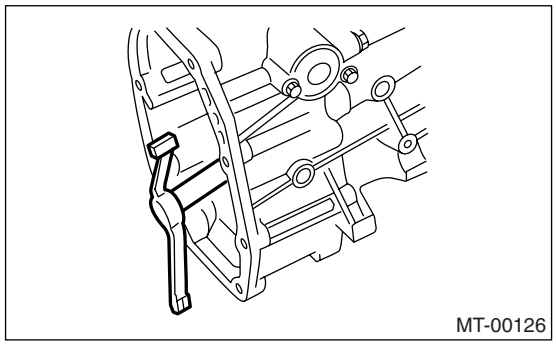

18) Hang the shifter arm on 3rd-4th fork rod.

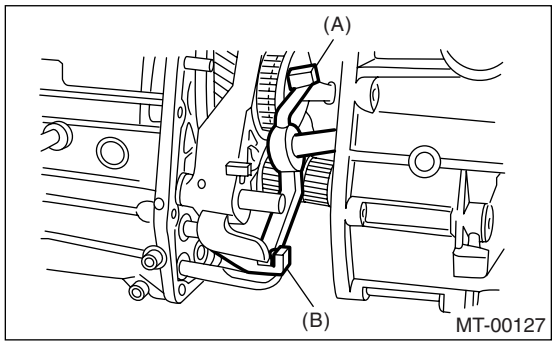

(A) Shifter arm
(B) 3rd-4th fork rod

19) Install the transfer case with extension case assembly to transmission case.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

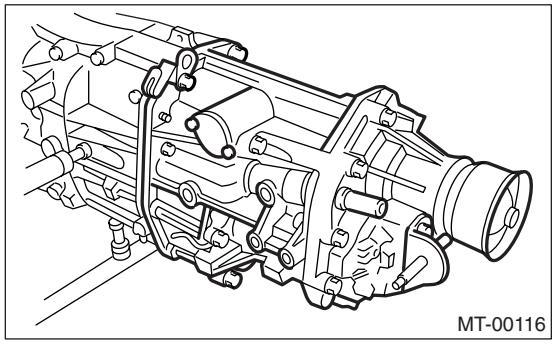

C: DISASSEMBLY

1. TRANSFER CASE

1) Remove the reverse check assembly. <Ref. to 5MT-63, REMOVAL, Reverse Check Sleeve.>
2) Remove the oil guide.

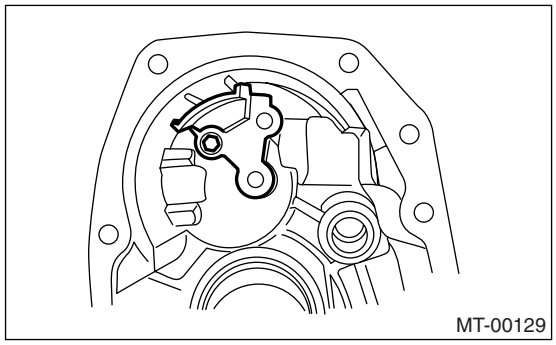

2. EXTENSION CASE

1) Remove the transfer drive gear assembly. <Ref. to 5MT-58, REMOVAL, Transfer Drive Gear.>
2) Remove the shift bracket.

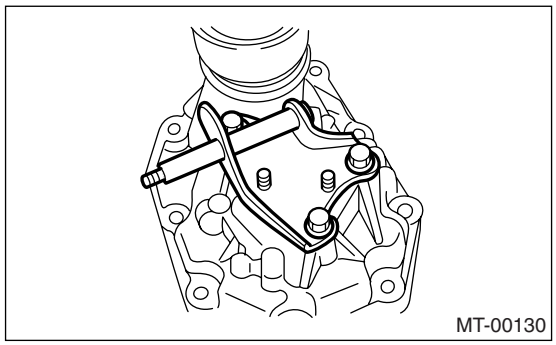

3) Remove the oil seal from extension case. <Ref. to 5MT-47, Oil Seal.>

D: ASSEMBLY

1. EXTENSION CASE

1) Using the ST, install the oil seal to extension case. <Ref. to 5MT-47, Oil Seal.>

NOTE:
Use a new oil seal.

2) Install the shift bracket to extension case.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

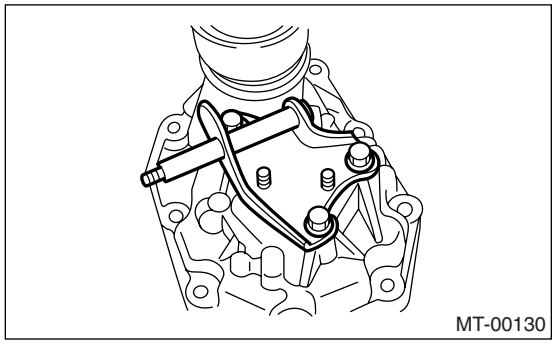

3) Install the transfer drive gear to extension case. <Ref. to 5MT-58, INSTALLATION, Transfer Drive Gear.>

2. TRANSFER CASE

1) Install the oil guide to transfer case.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

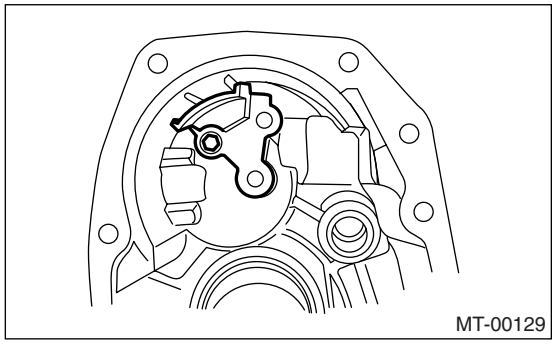

2) Install the reverse check sleeve assembly to transfer case. <Ref. to 5MT-63, INSTALLATION, Reverse Check Sleeve.>

10.Rear Case

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove rear case.

B: INSTALLATION

1) Install rear case.

Tightening torque:
24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

2) Install back-up light switch and neutral position switch. <Ref. to 5MT-49, INSTALLATION, Switches and Harness.>
3) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the reverse check assembly. <Ref. to 5MT-63, REMOVAL, Reverse Check Sleeve.>
2) Remove oil guide.

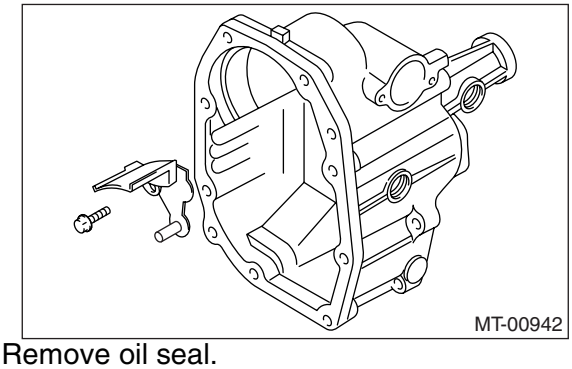
MT-00942

3) Remove oil seal.

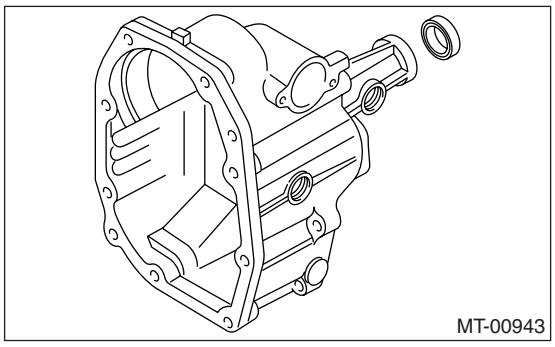
MT-00943

D: ASSEMBLY

1) Install oil seal.
2) Install oil guide.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

Install the reverse check assembly. <Ref. to 5MT-63, INSTALLATION, Reverse Check Sleeve.>

11.Transfer Drive Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the extension case assembly.
5) Remove the transfer driven gear.
6) Remove the transfer drive gear.

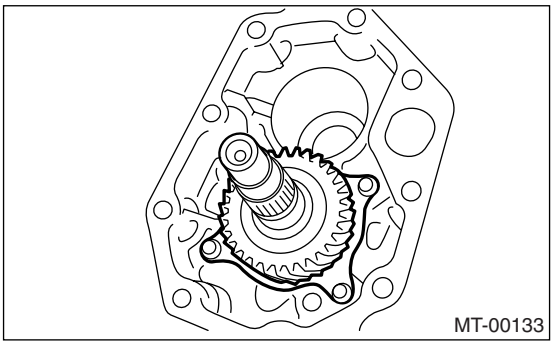

B: INSTALLATION

1) Install the transfer drive gear.

Tightening torque:
26 N·m (2.7 kgf-m, 20 ft-lb)

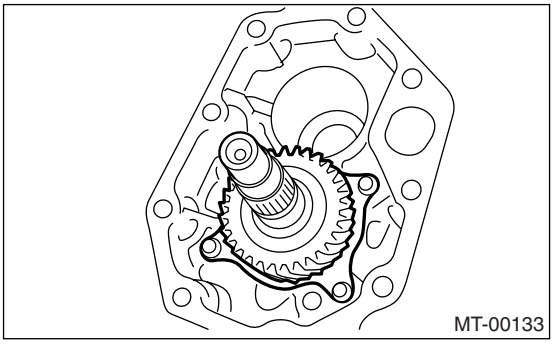

2) Install the transfer driven gear.
3) Install the extension case assembly.
4) Install the transfer case and extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
5) Install the back-up light switch and neutral position switch. <Ref. to 5MT-49, INSTALLATION, Switches and Harness.>
6) Install the manual transmission assembly from vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the snap ring.

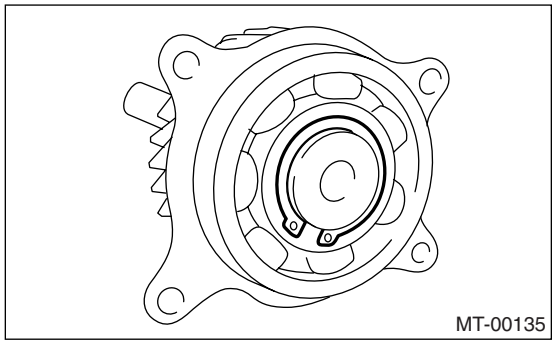

2) Remove the ball bearing.

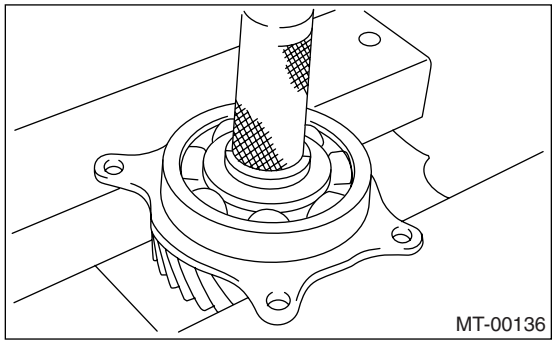

D: ASSEMBLY

1) Set the ST applying to inner race of bearing and install to drive shaft.
ST 398177700 INSTALLER

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton)

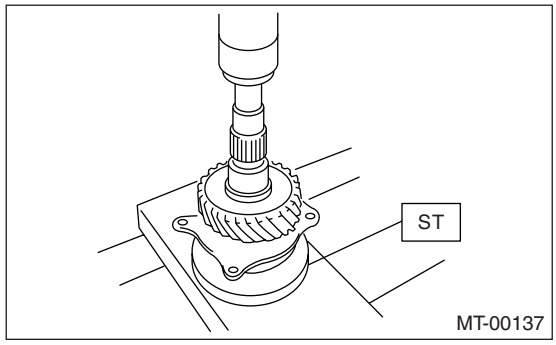

2) Install the snap ring on transfer drive shaft.
3) Check the clearance between snap ring and ball bearing. <Ref. to 5MT-59, INSPECTION, Transfer Drive Gear.>

E: INSPECTION

1) Bearings
Replace the bearings in the following cases:
- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.

2) Drive gear
Replace the drive gear in the following cases:
- If their tooth surfaces and shaft are excessively broken or damaged.

3) Measure the clearance between snap ring and inner race of ball bearing with a thickness gauge.

Clearance:
0.01 — 0.15 mm (0.0004 — 0.0059 in)

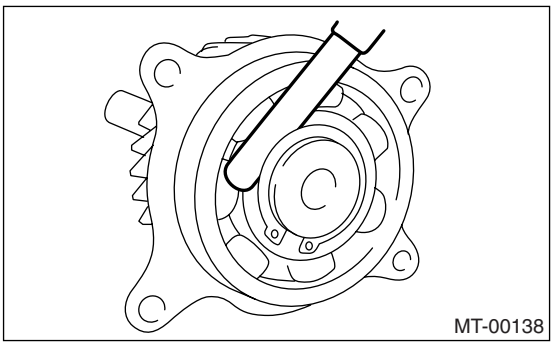

If the measurement is not within specification, select a suitable snap ring.

Snap ring (Outer-30)	
Part No.	Thickness mm (in)
805030041	1.53 (0.0602)
805030042	1.65 (0.0650)
805030043	1.77 (0.0697)

12.Transfer Driven Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the extension case assembly.
5) Remove the transfer driven gear.

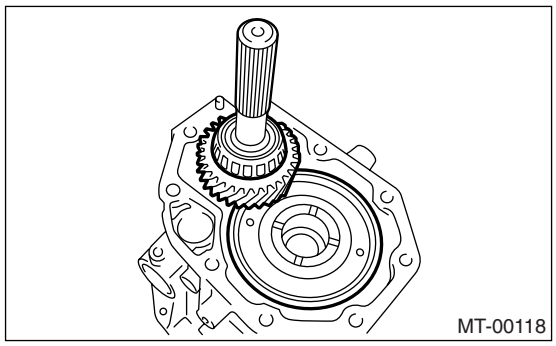

6) Remove the bearing outer race from extension case and transfer case.

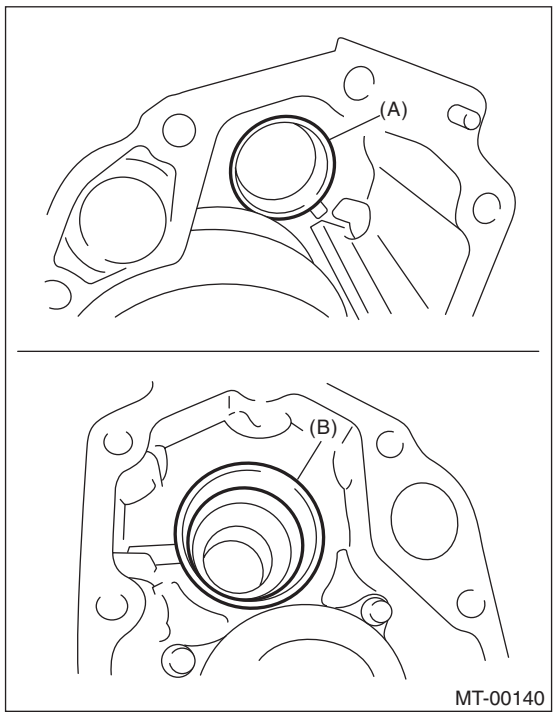

(A) Bearing outer race (transfer case)
(B) Bearing outer race (extension case)

B: INSTALLATION

1) Install the bearing outer race to extension case and transfer case.

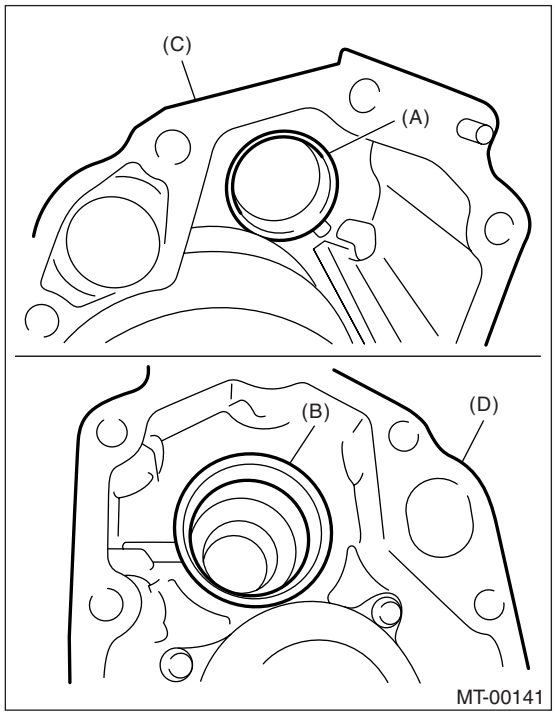

(A) Bearing outer race
(B) Bearing outer race
(C) Transfer case
(D) Extension case

2) Install the transfer driven gear.

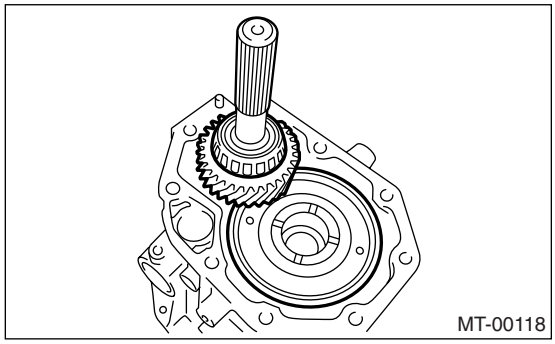

3) Install the transfer case and extension case assembly.<Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
4) Install the back-up light switch and neutral position switch. <Ref. to 5MT-49, INSTALLATION, Switches and Harness.>
5) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Using the ST, remove the roller bearing (extension case side).
ST 498077000 REMOVER

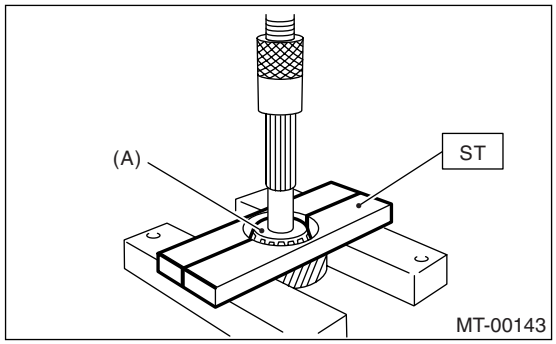

(A) Roller bearing

2) Using the ST1 and ST2, remove the roller bearing (transfer case side).
ST1 498077000 REMOVER
ST2 899864100 REMOVER

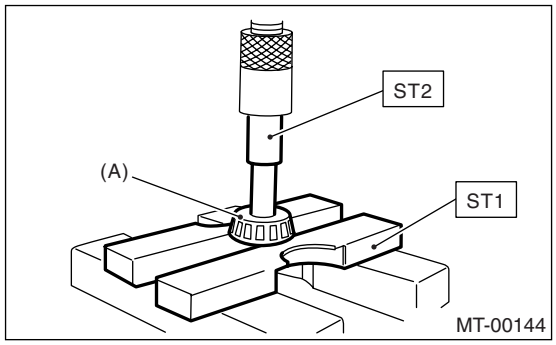

(A) Roller bearing

D: ASSEMBLY

1) Using the ST, install the roller bearing (extension case side).
ST1 398177700 INSTALLER
ST2 899864100 REMOVER

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton)

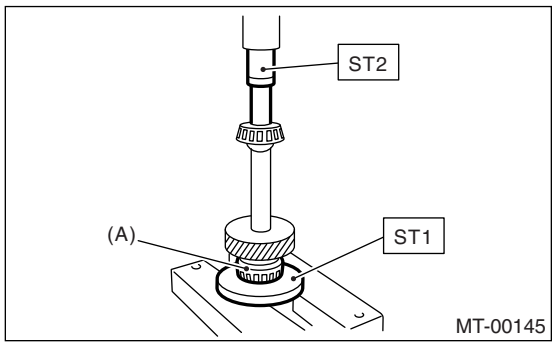

(A) Roller bearing

2) Using the ST, install the roller bearing (transfer case side).
ST 499757002 INSTALLER

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton)

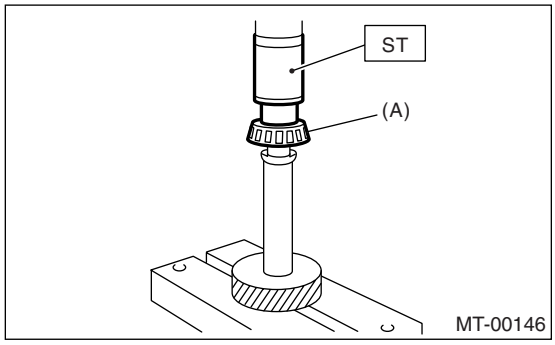

(A) Roller bearing

E: INSPECTION

1) Bearings
Replace the bearings in the following cases:
- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.

2) Driven gear
Replace the drive gear in the following cases:
- If their tooth surfaces and shaft are excessively broken or damaged.

13.Center Differential

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly.<Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the transfer driven gear. <Ref. to 5MT-60, REMOVAL, Transfer Driven Gear.>
5) Remove the center differential.

B: INSTALLATION

1) Install the center differential into transfer case.
2) Install the transfer driven gear. <Ref. to 5MT-60, INSTALLATION, Transfer Driven Gear.>
3) Install the extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
4) Install the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
5) Install the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
6) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:
Do not disassemble the center differential because it is a non-disassemble part.

Remove the ball bearing using ST.

NOTE:
Do not reuse the ball bearing.

ST 498077300 CENTER DIFFERENTIAL BEARING REMOVER

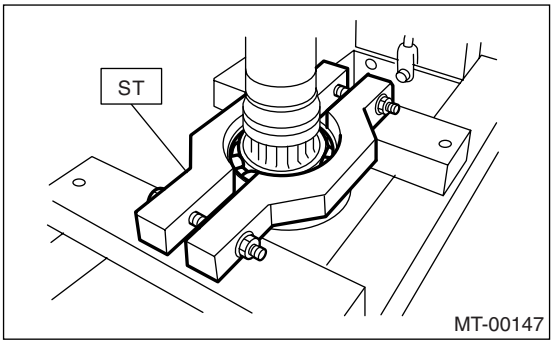

D: ASSEMBLY

Install the ball bearing to center differential assembly.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

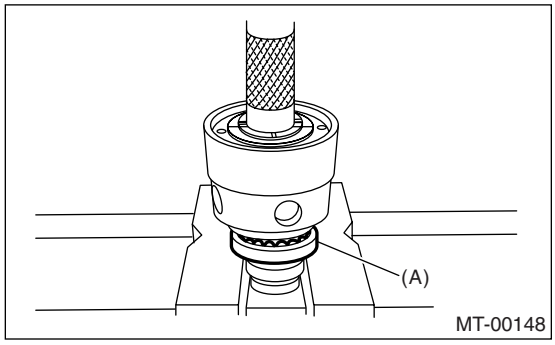

(A) Ball bearing

E: INSPECTION

1) Bearings
Replace the bearings in the following cases:
- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.
- Bearings having other defects

2) Center differential
Replace the center differential assembly in the following case:
- Worn or damaged

14.Reverse Check Sleeve

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the shifter arm.
4) Remove the plug, spring, washer and reverse check ball.

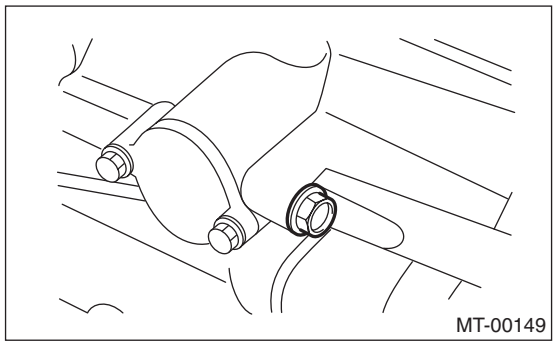
MT-00149

5) Remove the reverse check sleeve.

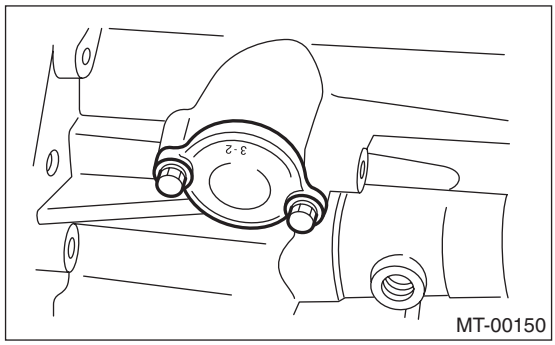

MT-00150

B: INSTALLATION

1) Install the reverse check sleeve.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

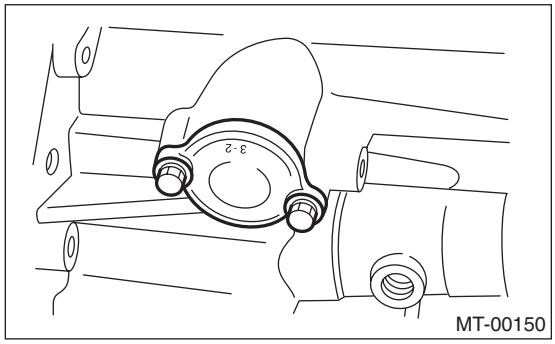

MT-00150

2) Install the ball, spring, washer and plug to transfer case.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

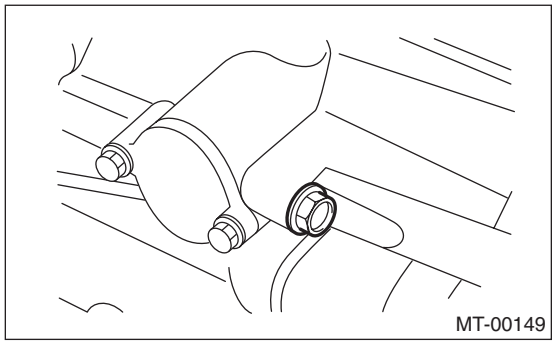
MT-00149

3) Install the shifter arm to transfer case assembly.
4) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
5) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Cover the reverse check sleeve with a rag, and remove the snap ring using a screwdriver.

NOTE:
Replace the snap ring with a new one if deformed or weakened.

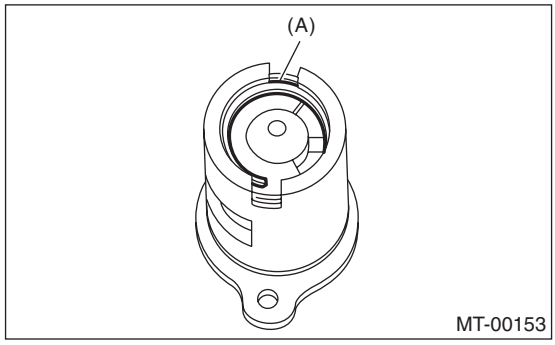

(A) Snap ring

2) Remove the reverse check plate, reverse check spring, reverse check cam, return spring (5th-Rev), reverse accent shaft, return spring cap and return spring (1st-2nd).

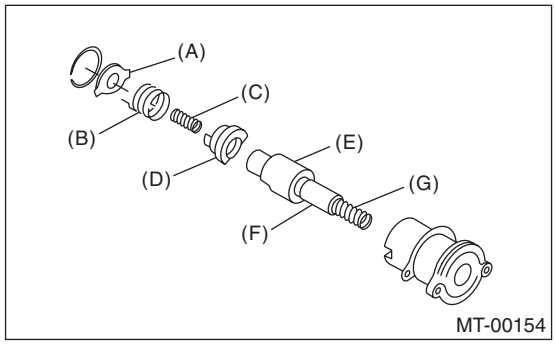

(A) Reverse check plate
(B) Reverse check spring
(C) Return spring (5th-Rev)
(D) Reverse check cam
(E) Reverse accent shaft
(F) Return spring cap
(G) Return spring (1st-2nd)

3) Remove the O-ring.

NOTE:
• Reverse check sleeve assembly uses an O-ring which should not be scratched.
• Be careful not to break the adjustment shim placed between reverse check sleeve assembly and case.

D: ASSEMBLY

1) Install the return spring (1st-2nd), return spring cap, reverse accent shaft, check cam, return spring and check spring onto reverse check sleeve.

NOTE:
Be sure the bent section of reverse check spring is positioned in the groove in check cam.

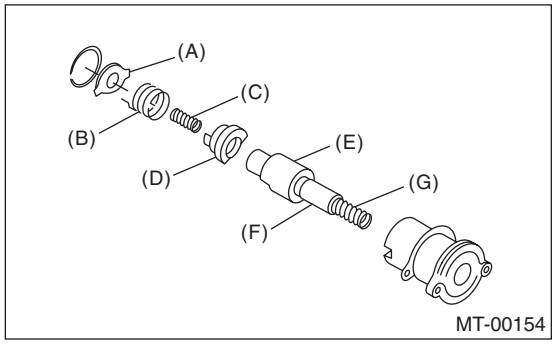

(A) Reverse check plate
(B) Reverse check spring
(C) Return spring (5th-Rev)
(D) Reverse check cam
(E) Reverse accent shaft
(F) Return spring cap
(G) Return spring (1st-2nd)

2) Hook the bent section of reverse check spring over reverse check plate.
3) Rotate the cam so that the protrusion of reverse check cam is at the opening in plate.
4) With the cam held in that position, install the plate onto reverse check sleeve and hold with snap ring.
5) Position the O-ring in groove in sleeve.

E: INSPECTION

• Make sure the cutout section of reverse accent shaft is aligned with the opening in reverse check sleeve.
• Spin the cam by hand for smooth rotation.
• Move the cam and shaft all the way toward plate and release.
If the cam does not return properly, replace the reverse check spring; if shaft does not, check for scratches on the inner surface of sleeve. If sleeve is in good order, replace the spring.

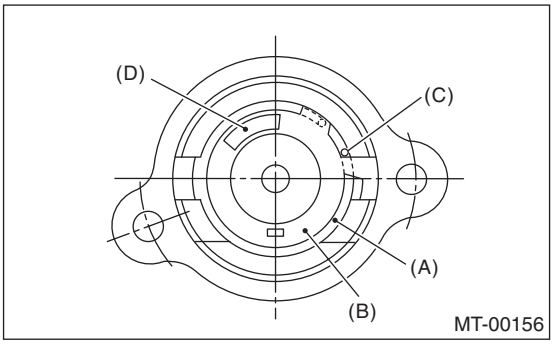

(A) Snap ring
(B) Reverse check plate
(C) Check spring
(D) Check cam

• Select a suitable reverse accent shaft and reverse check plate.<Ref. to 5MT-65, ADJUSTMENT, Reverse Check Sleeve.>

F: ADJUSTMENT

1. NEUTRAL POSITION ADJUSTMENT

1) Shift the gear into 3rd gear position.
2) Shifter arm turns lightly toward the 1st/2nd gear side but heavily toward the reverse gear side because of the function of return spring, until arm contacts the stopper.
3) Make adjustment so that the heavy stroke (reverse side) is a little more than the light stroke (1st/2nd side).
4) To adjust, remove the bolts holding reverse check sleeve assembly to the case, move the sleeve assembly outward, and place adjustment shim (0 to 1 ea.) between sleeve assembly and case to adjust the clearance.

CAUTION:
Be careful not to break the O-ring when placing shim(s).

NOTE:
• When the shim is removed, the neutral position will move closer to reverse; when shim is added, the neutral position will move closer to 1st gear.
• If the shims alone cannot adjust clearance, replace the reverse accent shaft and re-adjust.

Adjustment shim	
Part No.	Thickness mm (in)
32190AA000	0.15 (0.0059)
32190AA010	0.30 (0.0118)

Reverse accent shaft		
Part No.	Mark	Remarks
32188AA090	3	Neutral position is closer to 1st gear.
32188AA100	0	Standard
32188AA110	1	Neutral position is closer to reverse gear.

2. REVERSE CHECK PLATE ADJUSTMENT

1) Shift the shifter arm to “5th” and then to reverse to see if reverse check mechanism operates properly.
2) Also check to see if the arm returns to neutral when released from reverse position. If the arm does not return properly, replace the reverse check plate.

Reverse check plate			
Part No.	(A): No.	Angle θ	Remarks
32189AA000	0	28°	Arm stops closer to 5th gear.
32189AA010	1	31°	Arm stops closer to 5th gear.
32189AA020	2	34°	Arm stops in the center.
32189AA030	3	37°	Arm stops closer to reverse gear.
32189AA040	4	40°	Arm stops closer to reverse gear.

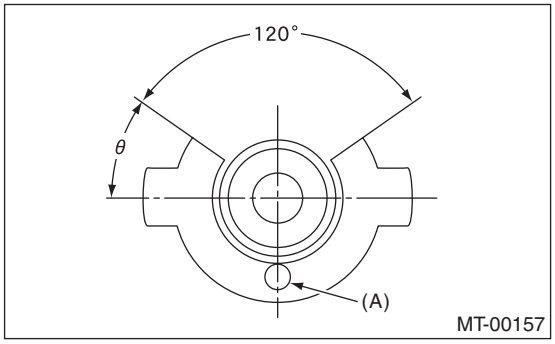

15.Transmission Case

A: REMOVAL

1. SINGLE-RANGE

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the clutch release lever. <Ref. to CL-26, REMOVAL, Release Bearing and Lever.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the bearing mounting bolts.

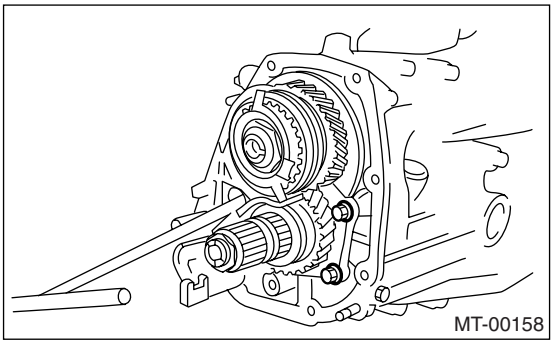
MT-00158

5) Remove the main shaft rear plate.

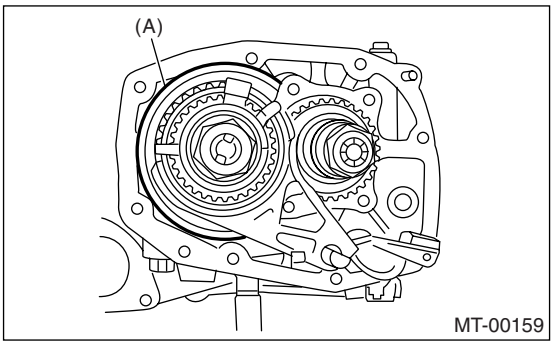

MT-00159

(A) Main shaft rear plate

6) Put vinyl tape around the splines of right and left axle drive shafts to prevent damage to oil seal.

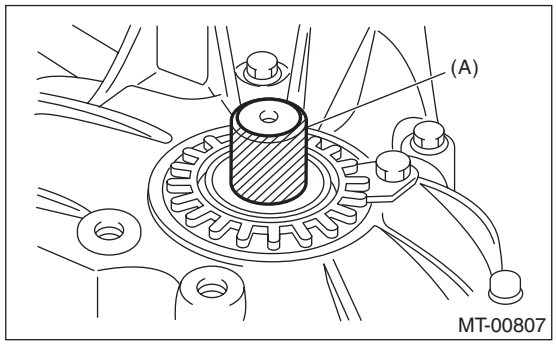

MT-00807

(A) Vinyl tape

7) Separate the transmission case into right and left cases by loosening the coupling bolts and nuts.

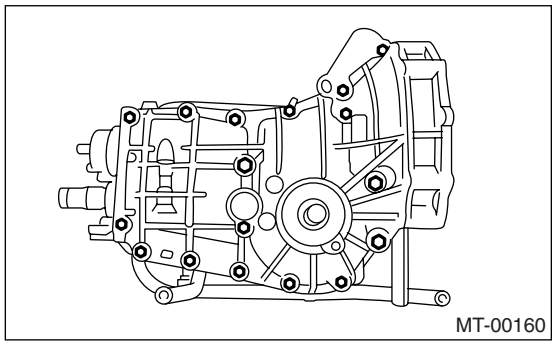
MT-00160

8) Remove the drive pinion shaft assembly from left side transmission case.

NOTE:
Use a hammer handle, etc. to remove if too tight.

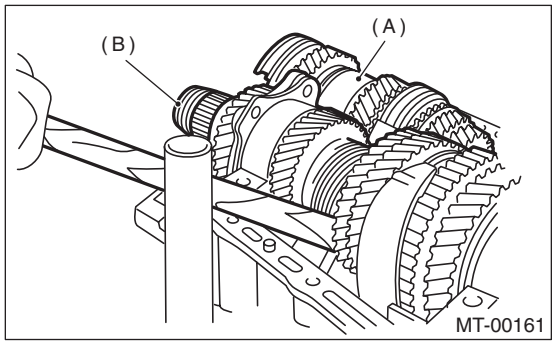

MT-00161

(A) Main shaft assembly
(B) Drive pinion shaft assembly

9) Remove the main shaft assembly.
10) Remove the differential assembly.

NOTE:
• Be careful not to confuse the right and left roller bearing outer races.
• Be careful not to damage the retainer oil seal.

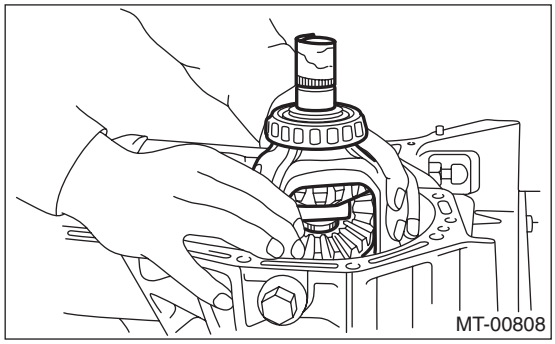
MT-00808

2. DUAL-RANGE

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the clutch release lever. <Ref. to CL-26, REMOVAL, Release Bearing and Lever.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the input shaft holder.

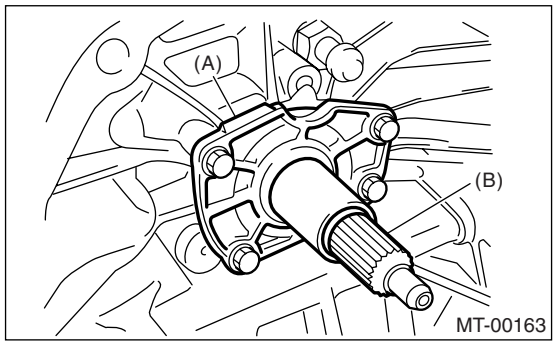

(A) Input shaft holder
(B) Input shaft

5) Remove the high-low switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
6) Using the ST, drive out the straight pin, and remove high-low shifter lever.
ST 398791700 STRAIGHT PIN REMOVER 2

NOTE:
When driving out the straight pin, remove it in the direction that it does not butt against transmission case.

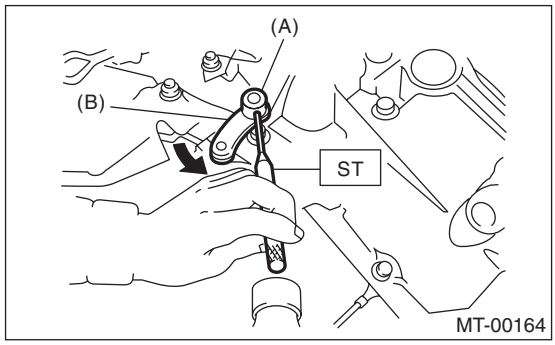

(A) Straight pin
(B) High-low shifter lever

7) Remove the main shaft rear plate.

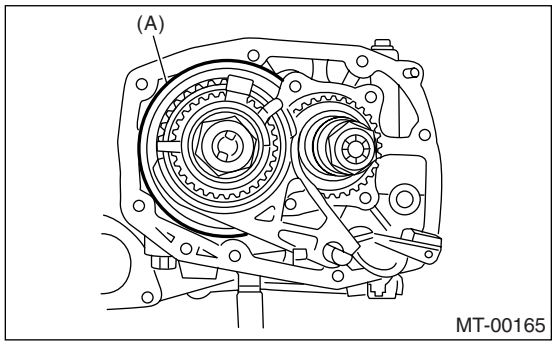

(A) Main shaft rear plate

8) Put vinyl tape around the splines of right and left axle drive shafts to prevent damage to oil seals.

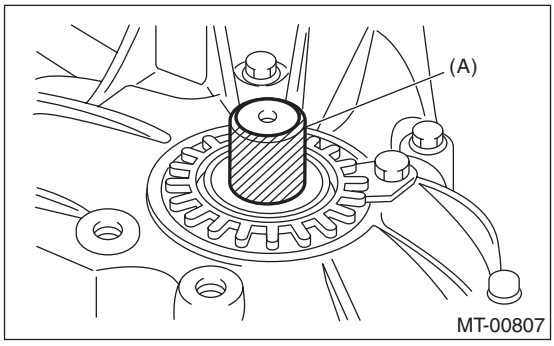

(A) Vinyl tape

9) Separate the transmission case into right and left cases by loosening the seventeen coupling bolts and nuts.

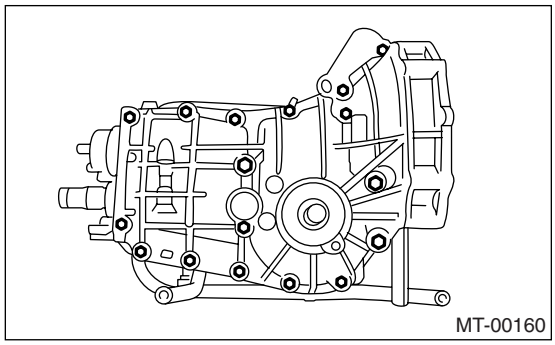

10) Remove the drive pinion shaft assembly from left side transmission case.

NOTE:
Use a hammer handle, etc. to remove if too tight.

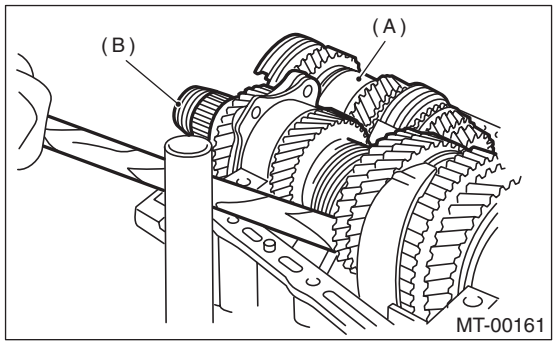

(A) Main shaft assembly
(B) Drive pinion shaft assembly

11) Removing high-low shifter fork:
Raise the main shaft assembly slightly, and remove the high-low shifter fork together with high-low shifter shaft and washer.

NOTE:
Be careful not to drop the two high-low shifter pieces.

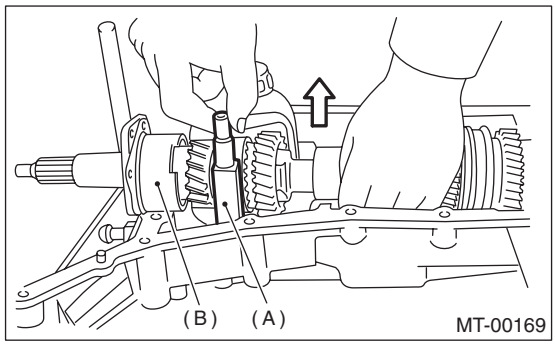

(A) High-low shifter fork
(B) Input shaft ASSY

12) Remove the main shaft assembly and input shaft assembly.

CAUTION:
Be careful not to drop the input shaft and main shaft as they are separable.

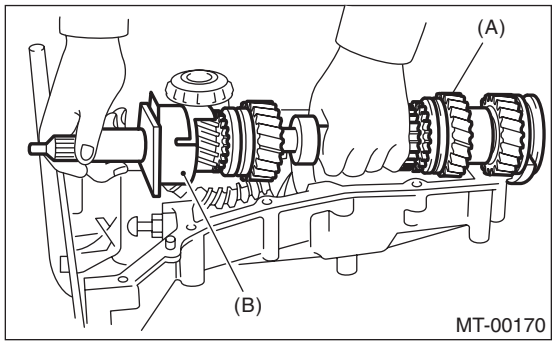

(A) Main shaft ASSY
(B) Input shaft ASSY

13) Remove the differential assembly.

NOTE:
• Be careful not to confuse the right and left roller bearing outer races.
• Be careful not to damage the retainer oil seal.

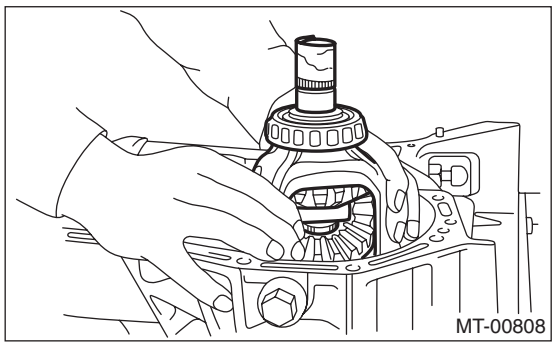

B: INSTALLATION

1. SINGLE-RANGE

1) Wipe off grease, oil and dust on the mating surfaces of transmission cases with white gasoline.
2) Install the front differential assembly.
3) Install the main shaft assembly.
Install the transmission case knock pin into needle bearing knock pin hole.
4) Install the drive pinion shaft assembly.
Install the transmission case knock pin into roller bearing knock pin hole.
5) Apply liquid gasket, and then put the case right side and left side together.

Liquid gasket:
THREE BOND 1215 or equivalent

6) Tighten the seventeen bolts with bracket, clip, etc. as shown in the figure.

NOTE:
• Insert the bolts from bottom and tighten the nuts at top.
• Put the cases together so that drive pinion shim and input shaft holder shim are not caught up in between.
• Confirm that the speedometer gear is meshed.

Tightening torque:
8 mm bolt
25 N·m (2.5 kgf-m, 18.1 ft-lb)
★ 10 mm bolt
39 N·m (4.0 kgf-m, 28.9 ft-lb)

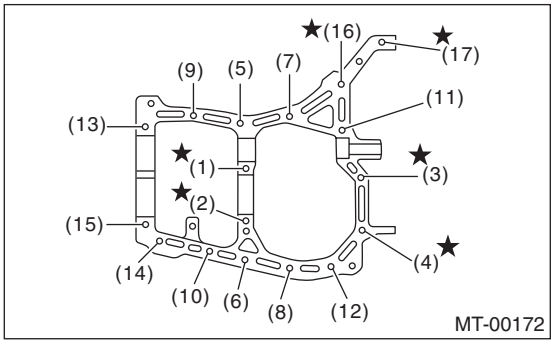

7) Tighten the ball bearing attachment bolts.

Tightening torque:
29 N·m (3.0 kgf-m, 21.7 ft-lb)

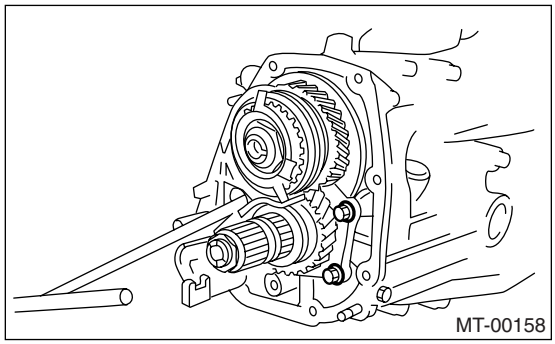

8) Backlash adjustment of hypoid gear and preload adjustment of roller bearing:

NOTE:
Support the drive pinion assembly with ST.
ST 498427100 STOPPER

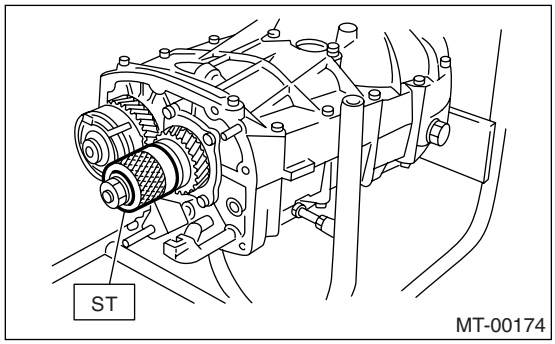

9) Place the transmission with case left side facing downward and put ST1 on bearing cup.
10) Screw the retainer assembly into left case from the bottom using ST2. Fit the ST3 on transmission main shaft. Shift the gear into 4th or 5th and turn the shaft several times. Screw in the retainer while turning ST3 until a slight resistance is felt on ST2. This is the contact point of hypoid gear and drive pinion shaft. Repeat the above sequence several times to ensure the contact point.
ST1 399780104 WEIGHT
ST2 499787000 WRENCH ASSY
ST3 499927100 HANDLE

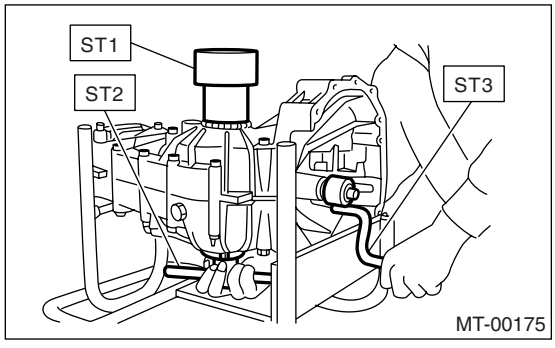

11) Remove the weight and screw in the retainer without O-ring on upper side and stop at the point where slight resistance is felt.

NOTE:
At this point, the backlash between hypoid gear and drive pinion shaft is zero.

ST 499787000 WRENCH ASSY

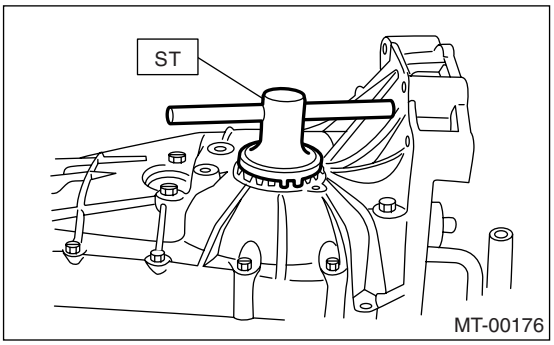

12) Loosen the retainer on the lower side by 3 notches and turn in the retainer on the upper side by the same amount in order to obtain the backlash.
13) Turn in the retainer on the upper side additionally by 1 notch in order to apply preload on taper roller bearing.
14) Install temporarily both the upper and lower lock plates and mark both holder and lock plate for later readjustment.

NOTE:
Install the lock plate upside down if it is hard to install.

15) Turn the transmission main shaft several times while tapping around the retainer lightly with plastic hammer.
16) Inspect and adjust the backlash and tooth contact of hypoid gear. <Ref. to 5MT-107, INSPECTION, Front Differential Assembly.>
17) After checking the tooth contact of hypoid gears, remove the lock plate. Then loosen the retainer until the O-ring groove appears. Fit O-ring into the groove and tighten the retainer to the original position.
Install the lock plate.

NOTE:
• Record how many times the retainer is turned while loosening.
• Carry out this job on both upper and lower retainers.

Tightening torque:
T: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

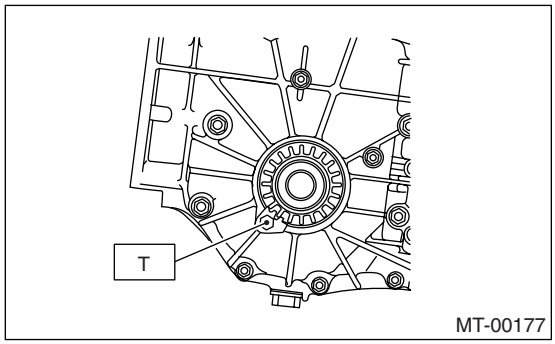

18) Selecting of main shaft rear plate. <Ref. to 5MT-82, ADJUSTMENT, Main Shaft Assembly for Single-Range.>
19) Install the clutch release lever and bearing. <Ref. to CL-26, INSTALLATION, Release Bearing and Lever.>
20) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
21) Install the manual transmission assembly into the vehicle.<Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

2. DUAL-RANGE

1) Wipe off grease, oil and dust on the mating surfaces of transmission cases with white gasoline.
2) Install the front differential assembly.
3) Install the main shaft assembly and input shaft assembly.
Connect the main shaft assembly and input the shaft assembly, and install needle bearing knock pin hole into transmission case knock pin.
4) Install the drive pinion shaft assembly.
Install the roller bearing knock pin hole into transmission case knock pin.
5) Apply liquid gasket, and then put the case right side and left side together.

Liquid gasket:
THREE BOND 1215 or equivalent

6) Tighten the seventeen bolts with bracket, clip, etc. as shown in the figure.

NOTE:
• Insert the bolts from bottom and tighten the nuts at top.
• Put the cases together so that the drive pinion shim and input shaft holder shim are not caught up in between.
• Confirm that the speedometer gear is meshed.

Tightening torque:
8 mm bolt
25 N·m (2.5 kgf-m, 18.1 ft-lb)
★ 10 mm bolt
39 N·m (4.0 kgf-m, 28.9 ft-lb)

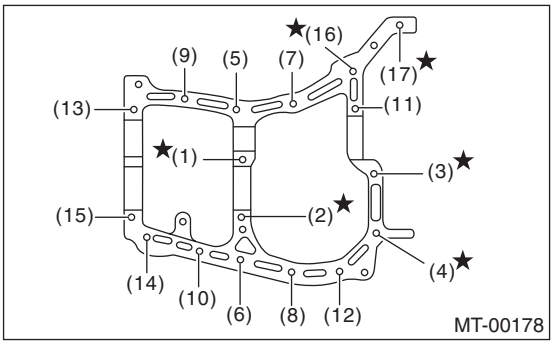

7) Tighten the ball bearing attachment bolts.

Tightening torque:
29 N·m (3.0 kgf-m, 21.7 ft-lb)

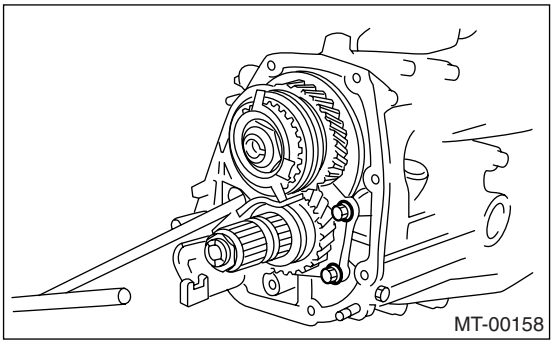

8) Tighten the input shaft holder attaching bolts.

Tightening torque:
20 N·m (2.0 kgf-m, 14.5 ft-lb)

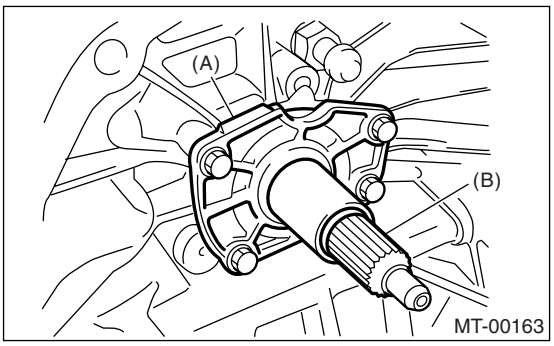

(A) Input shaft holder
(B) Input shaft

9) Backlash adjustment of hypoid gear and preload adjustment of roller bearing

NOTE:
Support the drive pinion assembly with ST.
ST 498427100 STOPPER

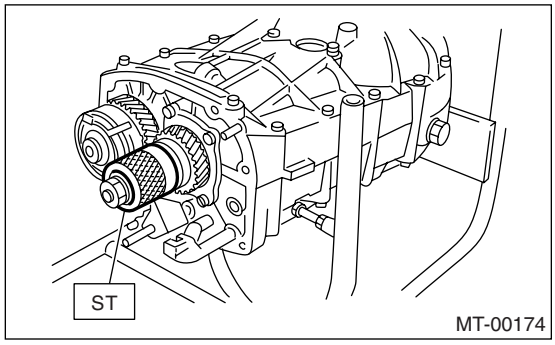

10) Place the transmission with case left side facing downward and put ST1 on bearing cup.
11) Screw the retainer assembly into left case from the bottom using ST2. Fit the ST3 on transmission main shaft. Shift the gear into 4th or 5th and turn the shaft several times. Screw in the retainer while turning ST3 until a slight resistance is felt on ST2. This is the contact point of hypoid gear and drive pinion shaft. Repeat the above sequence several times to ensure the contact point.
ST1 399780104 WEIGHT
ST2 499787000 WRENCH ASSY
ST3 499927100 HANDLE

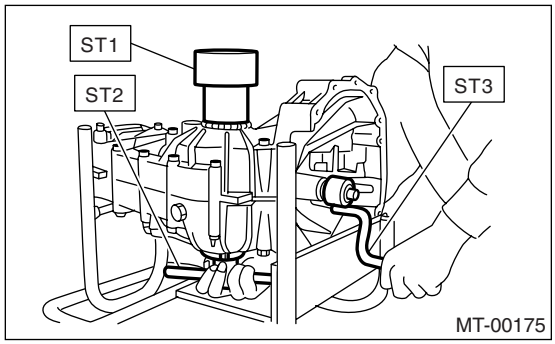

12) Remove the weight and screw in the retainer without O-ring on upper side and stop at the point where slight resistance is felt.

NOTE:
At this point, the backlash between hypoid gear and drive pinion shaft is zero.

ST 499787000 WRENCH ASSY

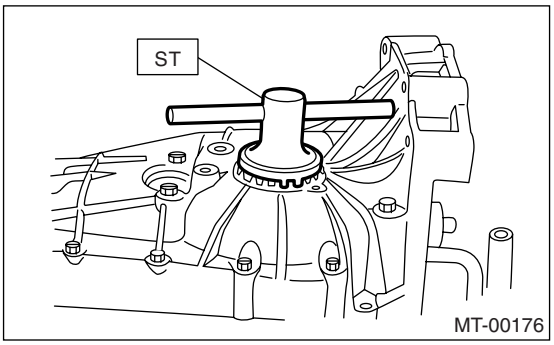

13) Loosen the retainer on the lower side by 3 notches and turn in the retainer on the upper side by the same amount in order to obtain the backlash.

14) Turn in the retainer on the upper side additionally by 1 notch in order to apply preload on taper roller bearing.

15) Install temporarily both the upper and lower lock plates and mark both holder and lock plate for later readjustment.

NOTE:
Install the lock plate upside down if it is hard to install.

16) Turn the transmission main shaft several times while tapping around the retainer lightly with plastic hammer.

17) Inspect and adjust the backlash and tooth contact of hypoid gear. <Ref. to 5MT-107, INSPECTION, Front Differential Assembly.>

18) After checking the tooth contact of hypoid gears, remove the lock plate. Then loosen the retainer until the O-ring groove appears. Fit O-ring into the groove and tighten the retainer to the original position.
Install the lock plate.

NOTE:
• Record how many times the retainer is turned while loosening.
• Carry out this job on both upper and lower retainers.

Tightening torque:
T: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

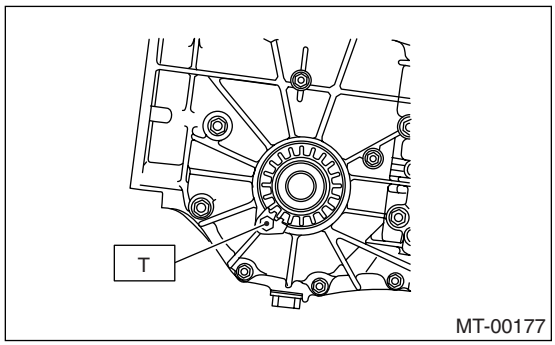

19) Selection of main shaft rear plate <Ref. to 5MT-82, ADJUSTMENT, Main Shaft Assembly for Single-Range.>

20) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>

21) Install the clutch release lever and bearing. <Ref. to CL-26, INSTALLATION, Release Bearing and Lever.>

22) Install the manual transmission assembly into the vehicle.<Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

Check the transmission case for cracks, damage, and oil leaks.

16.Main Shaft Assembly for Single-Range

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the transmission case. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the drive pinion shaft assembly. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
5) Remove the main shaft assembly.

B: INSTALLATION

1) Install the needle bearing and oil seal onto the front of transmission main shaft assembly.

NOTE:
• Wrap the clutch splined section with vinyl tape to prevent damage to oil seal.
• Apply grease (Unilube #2 or equivalent) to the sealing lip of oil seal.
• Use a new one.

2) Install the needle bearing outer race knock pin hole into transmission case knock pin.

NOTE:
Align the end face of seal with surface (A) when installing oil seal.

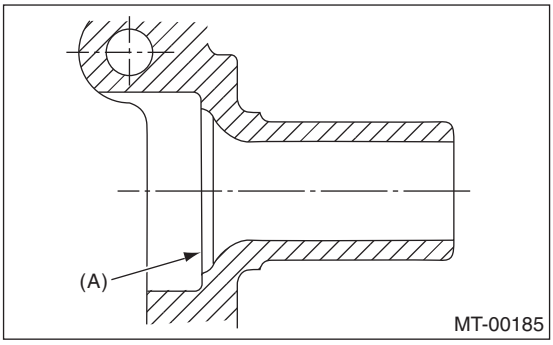

3) Install the drive pinion assembly. <Ref. to 5MT-93, INSTALLATION, Drive Pinion Shaft Assembly.>
4) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
5) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
6) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1. AWD MODEL

1) Put vinyl tape around the main shaft splines to protect oil seal from damage. Then pull out the oil seal and needle bearing by hand.
2) Remove the lock nut from transmission main shaft assembly.

NOTE:
Remove the caulking before removing lock nut.

ST1 499987000 TRANSMISSION HOLDER
ST2 498937003 SOCKET WRENCH (35)

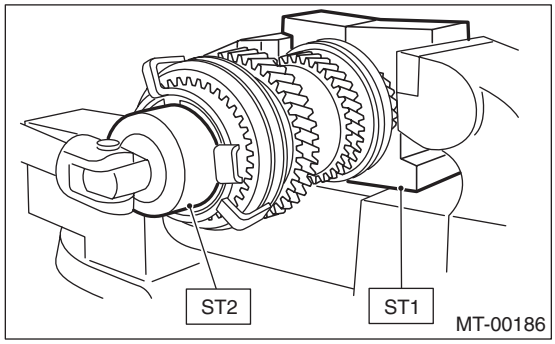

3) Remove the 5th-Rev sleeve and hub assembly, baulk ring, 5th drive gear and needle bearing.

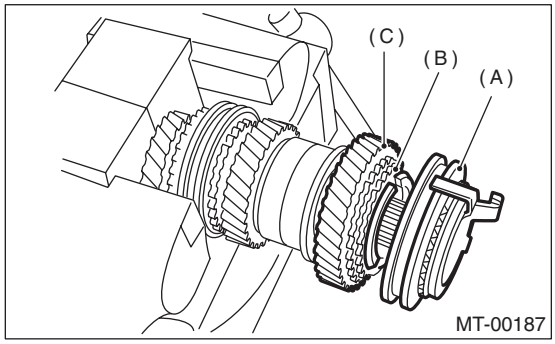

(A) 5th-Rev sleeve and hub ASSY
(B) Baulk ring
(C) 5th drive gear

4) Remove the snap ring and synchro cone stopper from 5th-Rev sleeve and hub assembly.

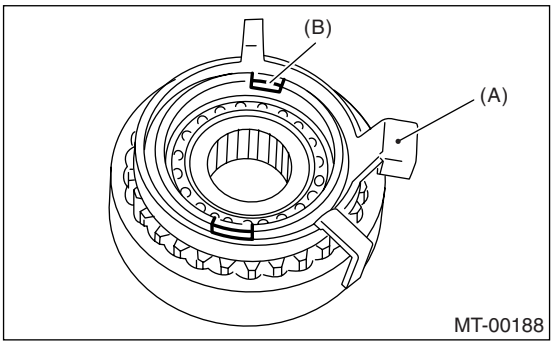

(A) Synchro cone stopper
(B) Snap ring

5) Using the ST1, ST2 and a press, remove the ball bearing, synchro cone and baulk ring (Rev).

NOTE:
• Replace the sleeve and hub with new ones. Do not attempt to disassemble because they must engage at a specified point. If they should be disassembled, mark engagement point on splines beforehand.
• Do not reuse the ball bearing.

ST1 499757002 INSTALLER
ST2 498077400 SYNCHRO CONE REMOVER

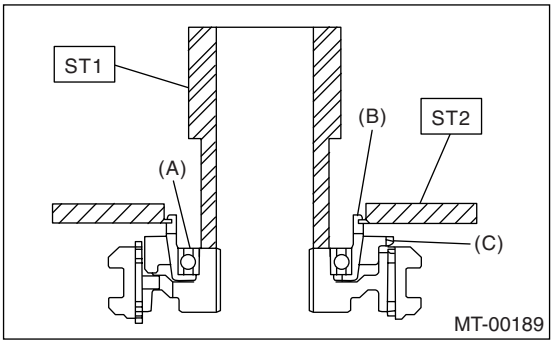

(A) Ball bearing
(B) Synchro cone
(C) Baulk ring

6) Using the ST1 and ST2, remove rest of the parts.

NOTE:
Replace the sleeve and hub with new ones. Do not attempt to disassemble because they must engage at a specified point. If they should be disassembled, mark engagement point on splines beforehand.

ST1 899864100 REMOVER
ST2 899714110 REMOVER

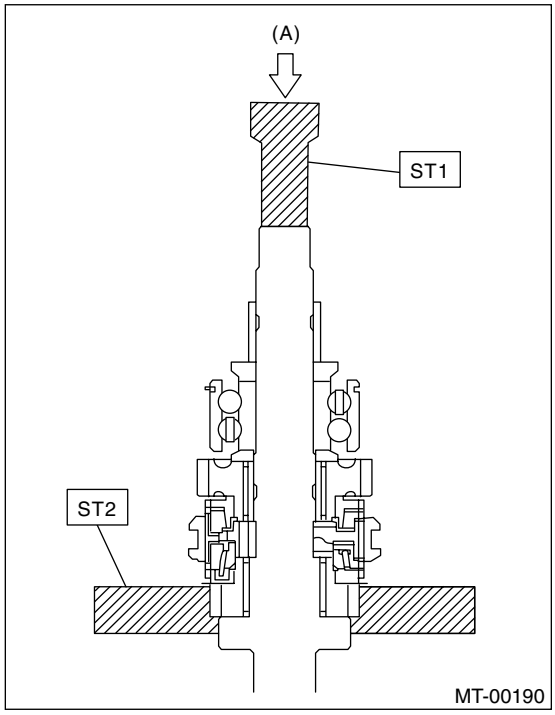

(A) Press

2. FWD MODEL

1) Put vinyl tape around main shaft splines to protect oil seal from damage. Then pull out oil seal and needle bearing by hand.
2) Remove lock nut.

NOTE:
Remove caulking before taking off lock nut.

ST1 498937000 TRANSMISSION HOLDER
ST2 499987003 SOCKET WRENCH (35)

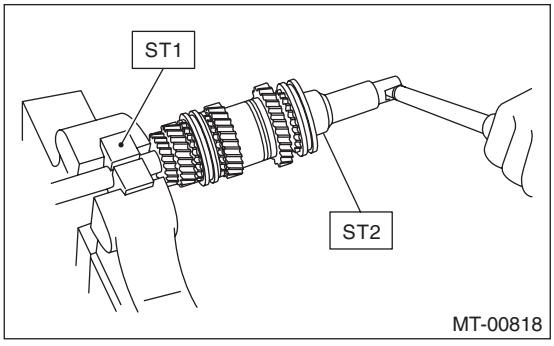

3) Remove the insert stopper plate, sleeve and hub assembly No. 2, baulk ring, 5th drive gear and needle bearing.

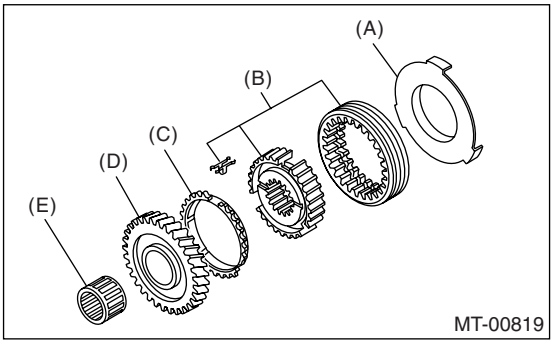

(A) Insert stopper plate
(B) Sleeve and hub ASSY No. 2
(C) Baulk ring
(D) 5th drive gear
(E) Needle bearing

4) Using ST1, ST2 and a press, remove the rest of parts.

NOTE:
Replace sleeve and hub with ones. Do not attempt to disassemble because they must engage at a specified point. If they should be disassembled, mark engagement point on splines before hand.

ST1 899864100 REMOVER
ST2 899714110 REMOVER

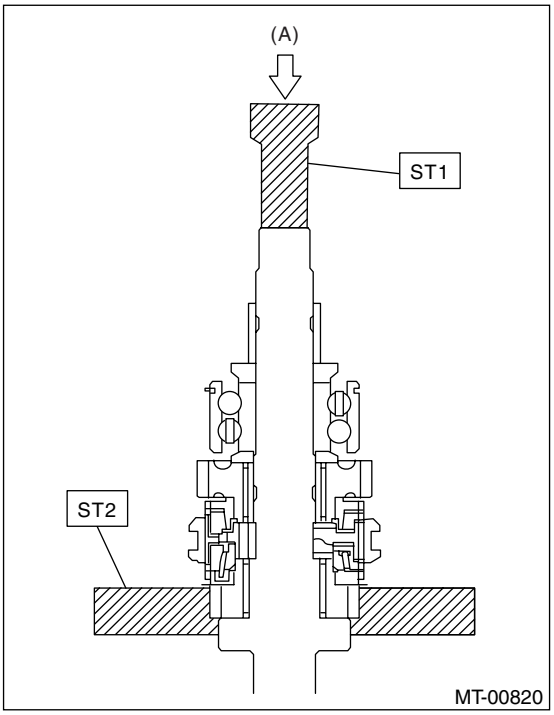

(A) Press

D: ASSEMBLY

1. AWD NON-TURBO MODEL

1) Assemble when each sleeve and hub assembly are disassembled.

NOTE:
Position the open ends of spring 120° apart.

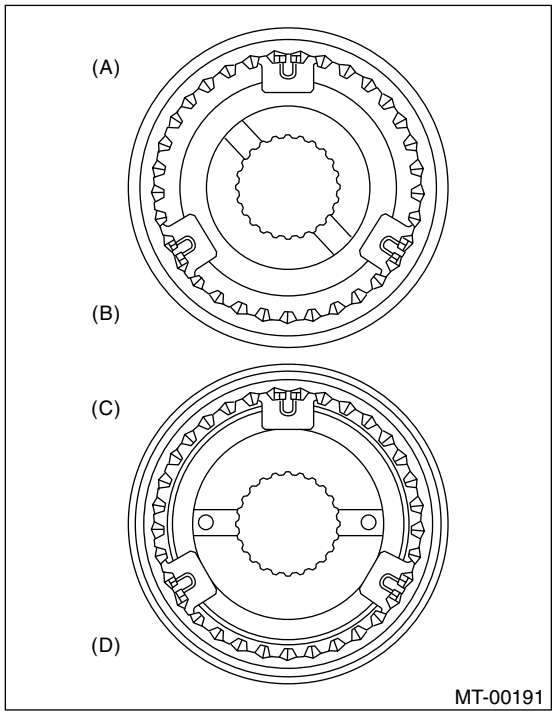

(A) 3rd-4th hub ASSY
(B) 3rd gear side
(C) 5th-Rev hub ASSY
(D) 5th gear side

2) Install the 3rd drive gear, baulk ring, sleeve and hub assembly for 3rd needle bearing on transmission main shaft.

NOTE:
Align the groove in baulk ring with shifting insert.

3) Install the 4th needle bearing race onto transmission main shaft using ST1, ST2 and a press.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

ST1 899714110 REMOVER

ST2 499877000 RACE 4-5 INSTALLER

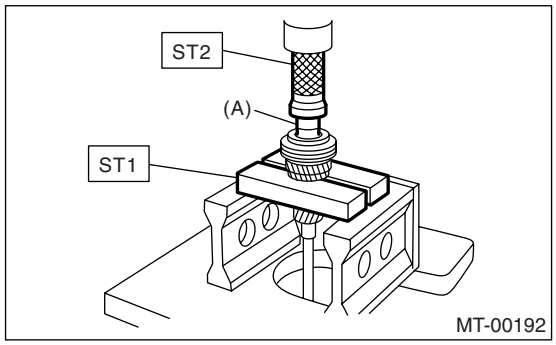

(A) 4th needle bearing race

4) Install the baulk ring, needle bearing, 4th drive gear and 4th gear thrust washer to transmission main shaft.

NOTE:
Align the baulk ring and gear & hub assembly with key groove.

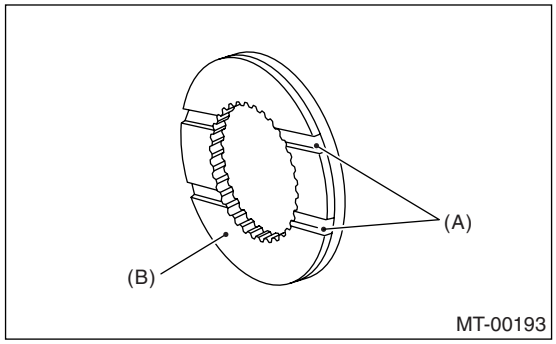

(A) Groove
(B) 4th gear side

5) Drive the ball bearing onto the rear section of transmission main shaft using ST1, ST2 and a press.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

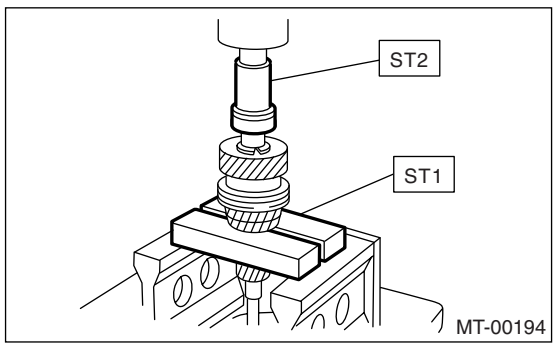

6) Using the ST1 and ST2, install the 5th gear thrust washer and 5th needle bearing race onto the rear section of transmission main shaft.

NOTE:
- Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
- Face the thrust washer in correct direction.

ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

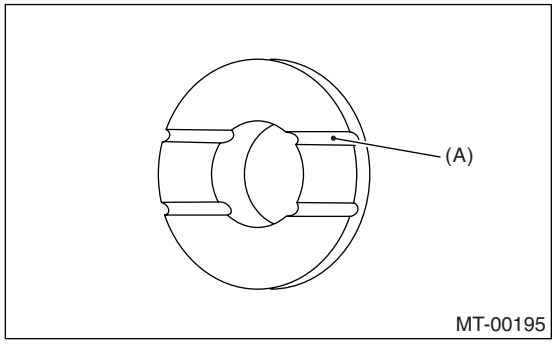

(A) Face this surface to 5th gear side.

7) Install the bearing onto synchro cone.
8) Install the baulk ring and synchro cone onto 5th-Rev sleeve and hub assembly using ST and a press.

NOTE:
- Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
- Use a new ball bearing.
- After press fitting, make sure the synchro cone rotates freely.

ST 499757002 INSTALLER

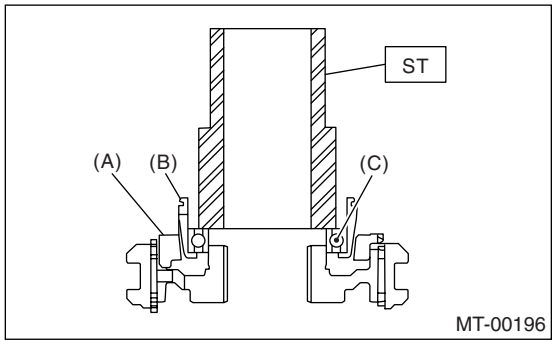

(A) Baulk ring
(B) Synchro cone
(C) Ball bearing

9) Install the synchro cone stopper and snap ring to 5th-Rev sleeve and hub assembly.

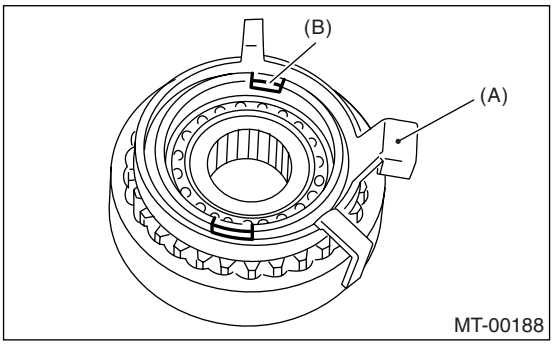

(A) Synchro cone stopper
(B) Snap ring

10) Install rest of the parts to the rear section of transmission main shaft.

NOTE:
Align the groove in baulk ring with shifting insert.

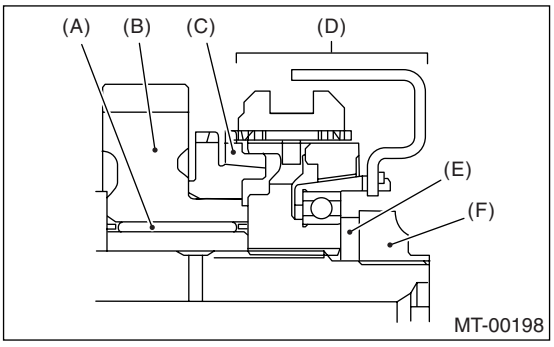

(A) Needle bearing
(B) 5th drive gear
(C) Baulk ring
(D) 5th-Rev sleeve and hub ASSY
(E) Lock washer
(F) Lock nuts

11) Tighten the lock nuts to the specified torque using ST1 and ST2.

NOTE:
Secure the lock nuts in two places after tightening.

ST1 499987003 SOCKET WRENCH
ST2 498937000 TRANSMISSION HOLDER

Tightening torque:
120 N·m (12.2 kgf-m, 88.5 ft-lb)

2. AWD TURBO MODEL

1) Assemble each sleeve and hub assembly.

NOTE:
Position the open ends of spring 120° apart.

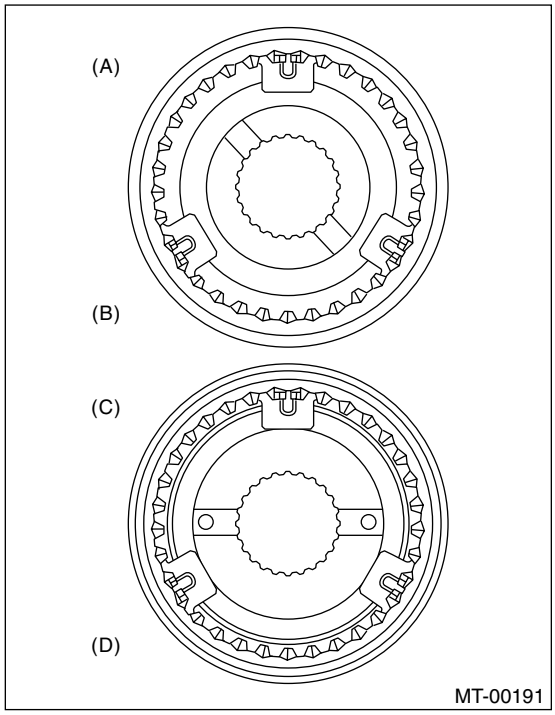

(A) 3rd-4th hub ASSY
(B) 3rd gear side
(C) 5th-Rev hub ASSY
(D) 5th gear side

2) Install the 3rd drive gear, outer baulk ring, synchro cone, inner baulk ring, sleeve and hub assembly for 3rd needle bearing on transmission main shaft.

NOTE:
Align the groove in baulk ring with shifting insert.

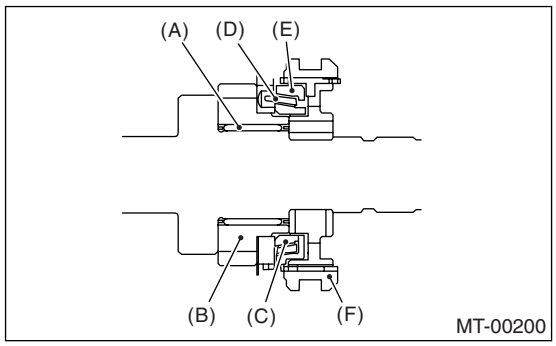

(A) 3rd needle bearing
(B) 3rd drive gear
(C) Inner baulk ring
(D) Synchro cone
(E) Outer baulk ring
(F) Sleeve and hub ASSY

3) Install the 4th needle bearing race onto transmission main shaft using ST1, ST2 and a press.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

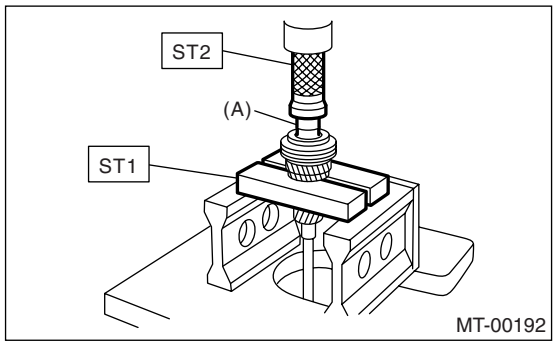

(A) 4th needle bearing race

4) Install the baulk ring, needle bearing, 4th drive gear and 4th gear thrust washer to transmission main shaft.

NOTE:
Align the baulk ring and gear & hub assembly with key groove.

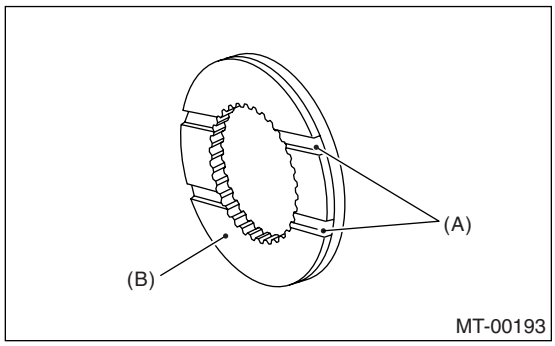

(A) Groove
(B) 4th gear side

5) Drive the ball bearing onto the rear section of transmission main shaft using ST1, ST2 and a press.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

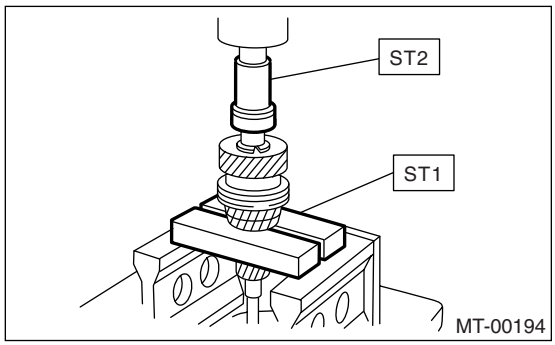

6) Using the ST1 and ST2, install the 5th gear thrust washer and 5th needle bearing race onto the rear section of transmission main shaft.

NOTE:
• Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
• Face the thrust washer in correct direction.

ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

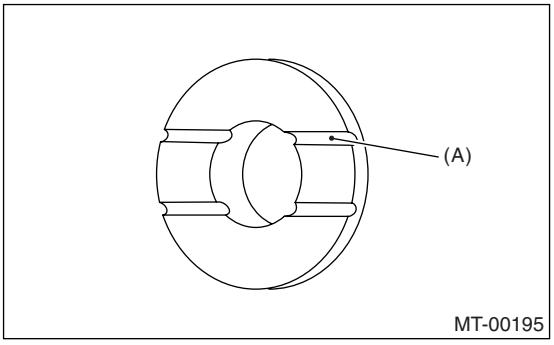

(A) Face this surface to 5th gear side.

7) Install the bearing onto synchro cone.
8) Install the baulk ring and synchro cone onto 5th-Rev sleeve and hub assembly using ST and a press.

NOTE:
• Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
• Use a new ball bearing.
• After press fitting, make sure the synchro cone rotates freely.

ST 499757002 INSTALLER

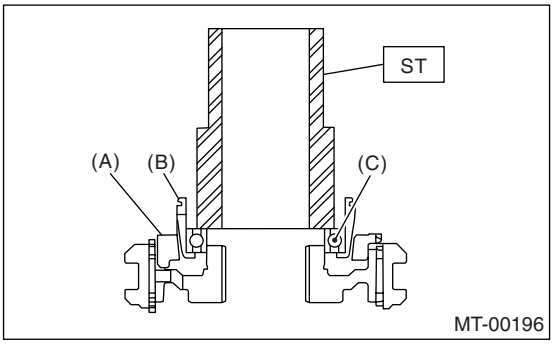

(A) Baulk ring
(B) Synchro cone
(C) Ball bearing

9) Install the synchro cone stopper and snap ring to 5th-Rev sleeve and hub assembly.

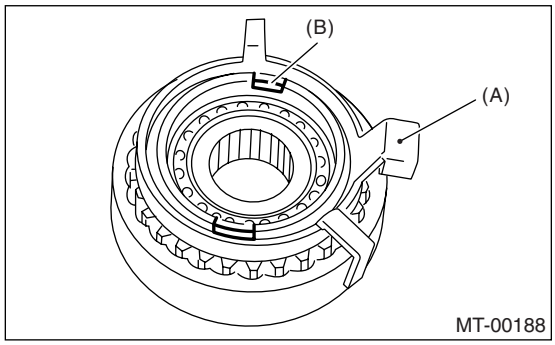

(A) Synchro cone stopper
(B) Snap ring

10) Install the rest parts to the rear section of transmission main shaft.

NOTE:
Align the groove in baulk ring with shifting insert.

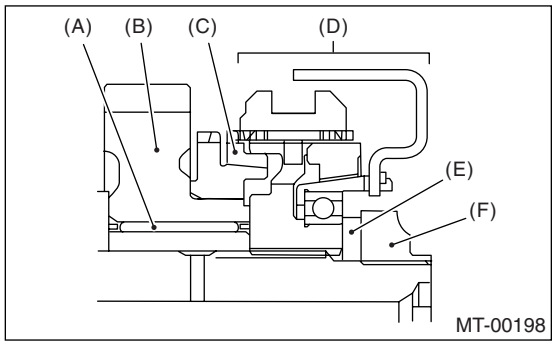

(A) Needle bearing
(B) 5th drive gear
(C) Baulk ring
(D) 5th-Rev sleeve and hub ASSY
(E) Lock washer
(F) Lock nuts

11) Tighten the lock nuts to the specified torque using ST1 and ST2.

NOTE:
Secure the lock nuts in two places after tightening.

ST1 499987003 SOCKET WRENCH
ST2 498937000 TRANSMISSION HOLDER

Tightening torque:
120 N·m (12.2 kgf-m, 88.5 ft-lb)

3. FWD MODEL

1) Assemble sleeve and hub assembly for 3rd-4th and 5th-Rev.

NOTE:
Position open ends of spring 120° apart.

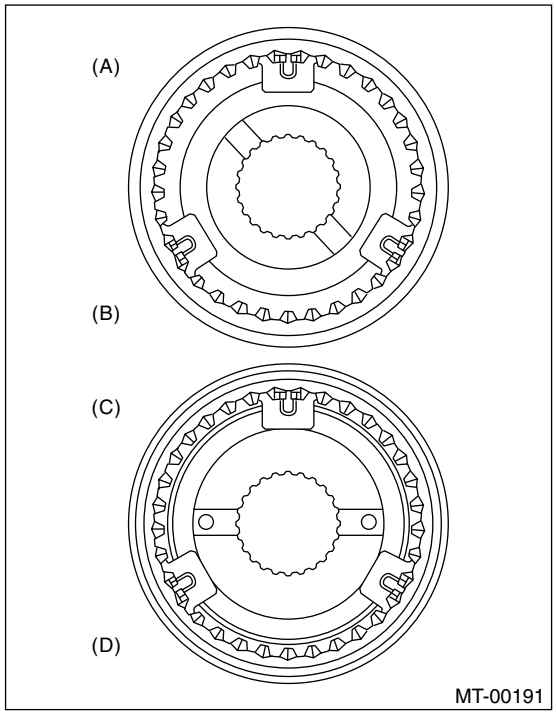

(A) 3rd-4th hub ASSY
(B) 3rd gear side
(C) 5th-Rev hub ASSY
(D) 5th gear side

2) Install 3rd drive gear, baulk ring and sleeve and hub assembly for 3rd-4th needle bearing (32 × 36 × 25.7) on transmission main shaft.

NOTE:
Align groove in baulk ring with shifting insert.

3) Install 4th needle bearing race onto transmission main shaft using ST1, ST2 and a press.
ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

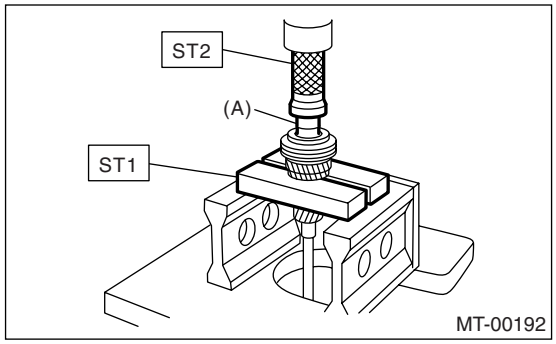

(A) 4th needle bearing

4) Install baulk ring, needle bearing (32 × 30 × 25.7), 4th drive gear and 4th gear thrust washer to transmission main shaft.

NOTE:
Face thrust washer in the correct direction.

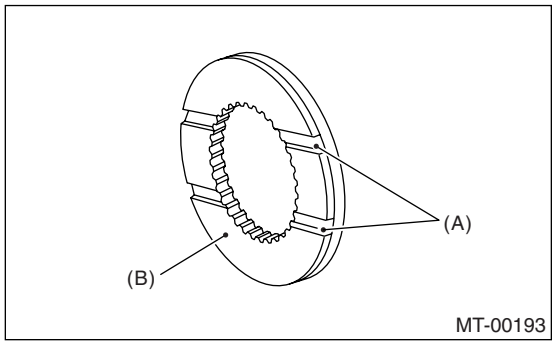

(A) Groove
(B) 4th gear side

5) Drive ball bearing onto the rear section of transmission main shaft using ST1, ST2 and a press.
ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

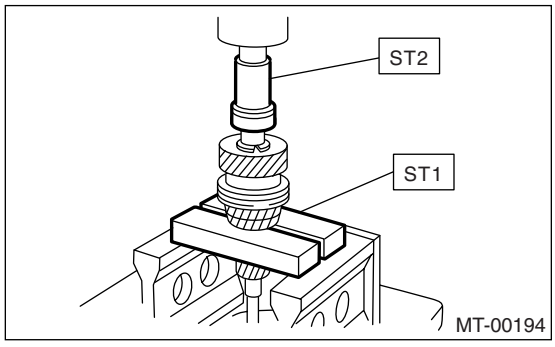

6) Using the same tools as in step 5) above, install the following parts onto the rear section of transmission main shaft.

NOTE:
Face thrust washer in the correct direction.
ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

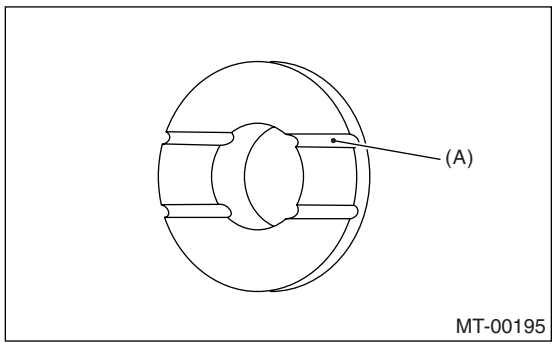

(A) Face this surface to 5th gear side.

7) Install the following parts to the rear section transmission main shaft.
ST1 499987003 SOCKET WRENCH
ST2 498937000 TRANSMISSION HOLDER

NOTE:
• Align groove in baulk ring with shifting insert.
• Be sure to fit pawl of insert stopper plate into 4 mm (0.16 in) dia. hole in the boss section of synchronizer hub.

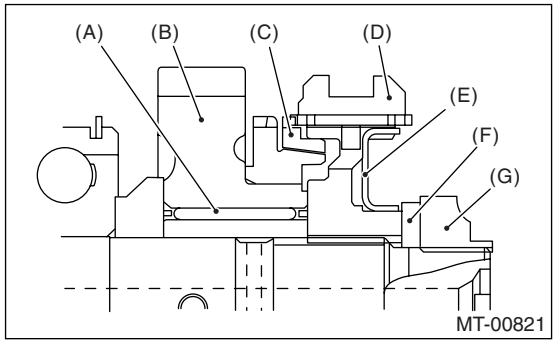

(A) Needle bearing
(B) 5th drive gear
(C) Baulk ring
(D) Sleeve and hub ASSY
(E) Insert stopper plate
(F) Lock washer
(G) Lock nut

8) Tighten lock nuts (22 × 13) to the specified torque using ST1 and ST2.

NOTE:
Secure lock nuts in two places after tightening.

Tightening torque:
120 N·m (12.2 kgf-m, 88.5 ft-lb)

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.
1) Bearings
Replace the bearings in the following cases:
• Bearings whose balls, outer races and inner races are broken or rusty.
• Worn bearings
• Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.
• Bearings having other defects
2) Bushing (each gear)
Replace the bushing in the following cases:
• When the sliding surface is damaged or abnormally worn.
• When the inner wall is abnormally worn.
3) Gears
• Replace the gears with new ones if their tooth surfaces are broken, damaged, or excessively worn.
• Correct or replace if the cone that contacts the baulk ring is rough or damaged.
• Correct or replace if the inner surface or end face is damaged.
4) Baulk ring
Replace the ring in the following cases:
• When the inner surface and end face are damaged.
• When the ring inner surface is abnormally or partially worn down.
• When the contact surface of the synchronizer ring insert is scored or abnormally worn down.
5) Shifting insert key
Replace the insert if deformed, excessively worn, or defective in any way.

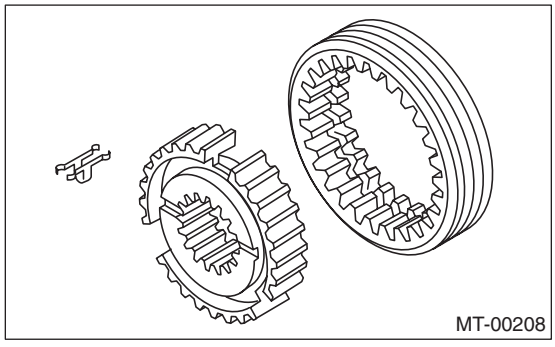

6) Oil seal
Replace the oil seal if the lip is deformed, hardened, damaged, worn, or defective in any way.
7) O-ring
Replace the O-ring if the sealing face is deformed, hardened, damaged, worn, or defective in any way.
8) Gearshift mechanism
Repair or replace the gearshift mechanism if excessively worn, bent, or defective in any way.

F: ADJUSTMENT

Selection of main shaft rear plate:
Using the ST, measure the amount (A) of ball bearing protrusion from transmission main case surface and select the proper plate in the following table:

NOTE:
Before measuring, tap the end of main shaft with a plastic hammer lightly in order to make the clearance zero between the main case surface and the moving flange of bearing.

ST 498147000 DEPTH GAUGE

Dimension (A) mm (in)	Part No.	Mark
4.00 — 4.13 (0.1575 — 0.1626)	32294AA041	1
3.87 — 3.99 (0.1524 — 0.1571)	32294AA051	2

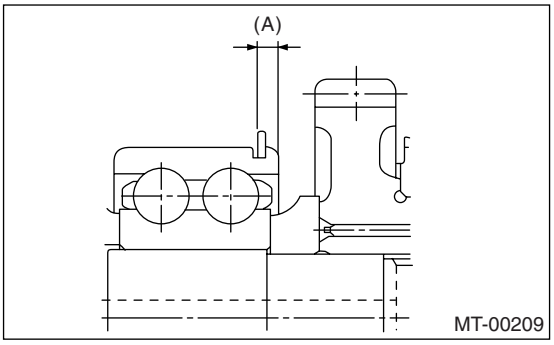

17.Main Shaft Assembly for Dual-Range

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
4) Remove the drive pinion shaft assembly. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
5) Remove the main shaft assembly and input shaft assembly.

B: INSTALLATION

1) Install the needle bearing onto the front of transmission main shaft assembly.
2) Connect the main shaft assembly and input shaft assembly.
3) Install the needle bearing outer race knock pin hole into transmission case knock pin.
4) Install the drive pinion assembly. <Ref. to 5MT-93, INSTALLATION, Drive Pinion Shaft Assembly.>
5) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
6) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
7) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Put vinyl tape around the main shaft splines to protect oil seal from damage. Then pull out the oil seal and needle bearing by hand.
2) Remove the lock nut from transmission main shaft assembly.

NOTE:
Remove the caulking before taking off lock nut.

ST1 498937000 TRANSMISSION HOLDER
ST2 499987003 SOCKET WRENCH (35)

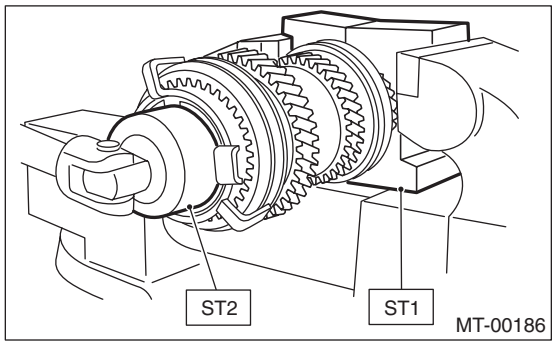

3) Remove the 5th-Rev sleeve and hub assembly, baulk ring, 5th drive gear and needle bearing.

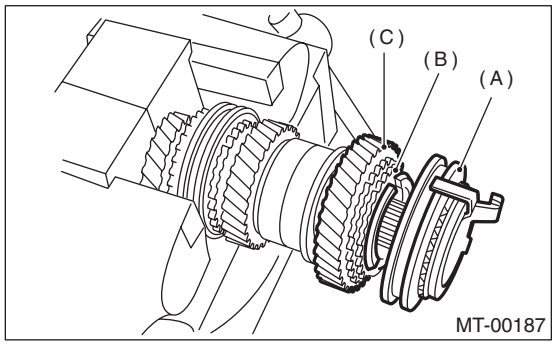

(A) 5th-Rev sleeve and hub ASSY
(B) Baulk ring
(C) 5th drive gear

4) Remove the snap ring and synchro cone stopper from 5th-Rev sleeve and hub assembly.

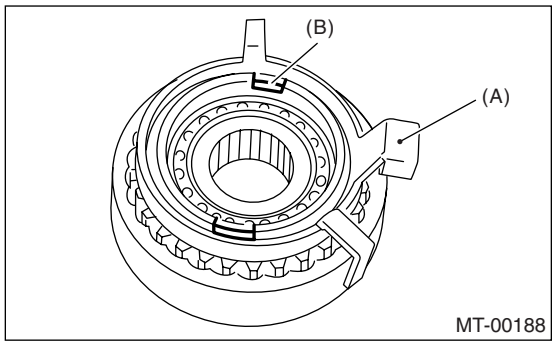

(A) Synchro cone stopper
(B) Snap ring

5) Using the ST1, ST2 and a press, remove the ball bearing, synchro cone and baulk ring (Rev).

NOTE:
• Replace the sleeve and hub with new ones. Do not attempt to disassemble because they must engage at a specified point. If they should be disassembled, mark engagement point on splines beforehand.
• Do not reuse the ball bearing.

ST1 499757002 INSTALLER
ST2 498077400 SYNCHRO CONE REMOVER

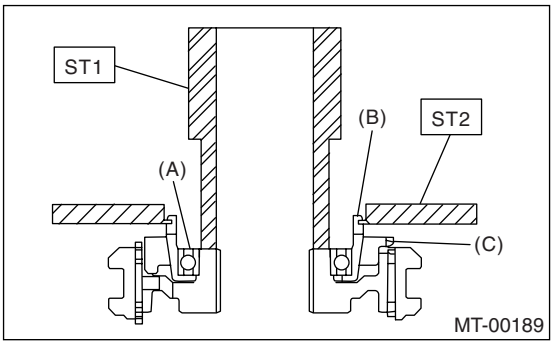

(A) Ball bearing
(B) Synchro cone
(C) Baulk ring

6) Using the ST1 and ST2, remove rest of the parts.

NOTE:
Replace the sleeve and hub with new ones. Do not attempt to disassemble because they must engage at a specified point. If they should be disassembled, marking engagement point on splines beforehand.

ST1 899864100REMOVER
ST2 899714110 REMOVER

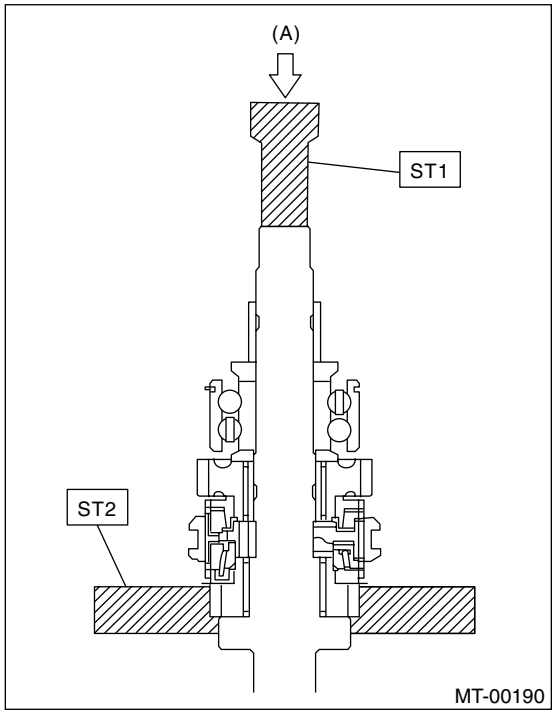

(A) Press

7) Remove the snap ring from main shaft.

ST 899474100 EXPANDER

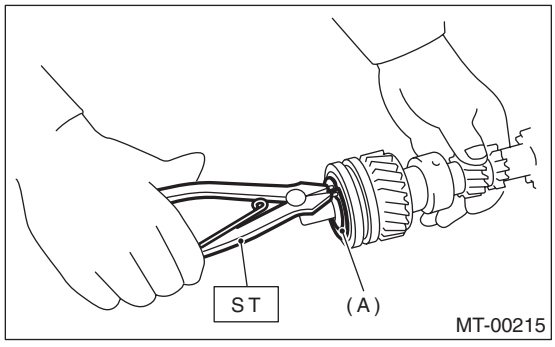

(A) Snap ring

8) Remove rest of the parts.

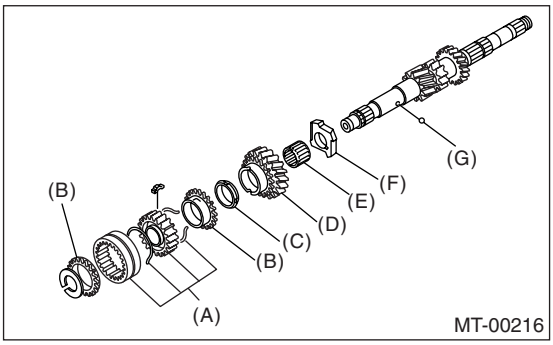

(A) Sleeve and hub ASSY
(B) High-low baulk ring
(C) Friction damper
(D) Low input gear
(E) Needle bearing
(F) Input low gear spacer
(G) Ball

D: ASSEMBLY

1) Assemble when each sleeve and hub assembly are disassembled.

NOTE:
Position the open ends of spring 120° apart.

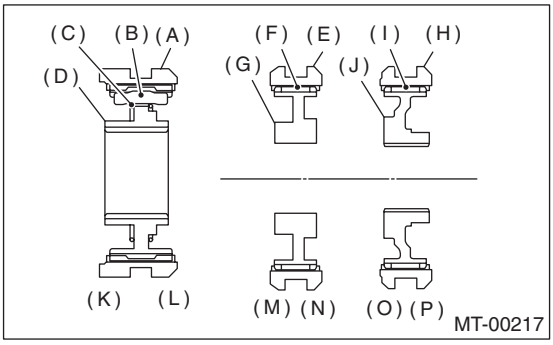

(A) High-low coupling sleeve
(B) Shifting insert
(C) High-low synchronizer spring
(D) High-low synchronizer hub
(E) Sleeve
(F) Insert key
(G) 3rd-4th synchronizer hub
(H) Sleeve
(I) Insert key
(J) 5th-Rev synchronizer hub
(K) High side
(L) Low side
(M) 3rd side
(N) 4th side
(O) 5th side
(P) Rev side

2) Install the 3rd drive gear, baulk ring, sleeve and hub assembly for 3rd-4th needle bearing on transmission main shaft.

NOTE:
Align the groove in baulk ring with shifting insert.

3) Install the 4th needle bearing race onto transmission main shaft using ST1, ST2 and a press.
ST1 899714110REMOVER
ST2 499877000 RACE 4-5 INSTALLER

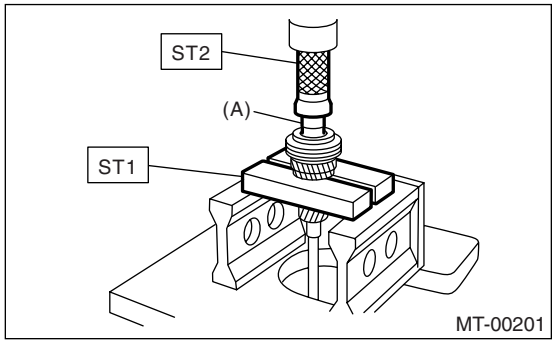

(A) 4th needle bearing race

4) Install the baulk ring, needle bearing, 4th drive gear and 4th gear thrust washer to transmission main shaft.

NOTE:
Face the thrust washer in correct direction.

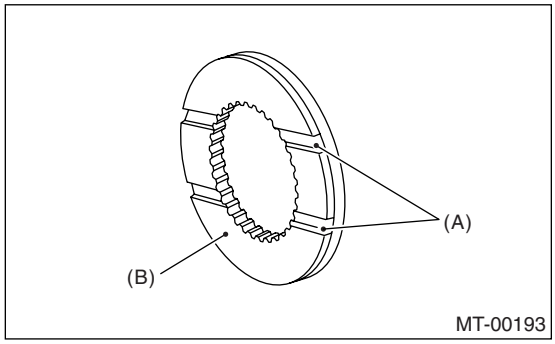

(A) Groove
(B) 4th gear side

5) Drive the ball bearing onto the rear section of transmission main shaft using ST1, ST2 and a press.
ST1 899714110REMOVER
ST2 499877000 RACE 4-5 INSTALLER

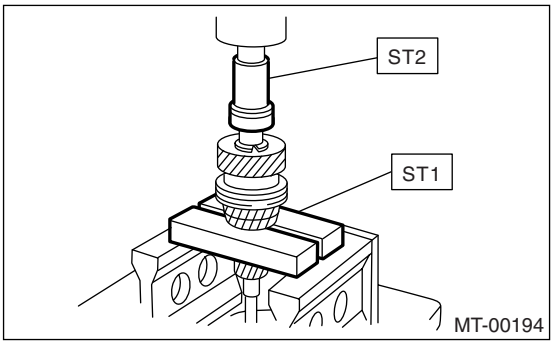

6) Using the ST1 and ST2, install the 5th gear thrust washer and 5th needle bearing race onto the rear section of transmission main shaft.

NOTE:
Face the thrust washer in correct direction.
ST1 899714110 REMOVER
ST2 499877000 RACE 4-5 INSTALLER

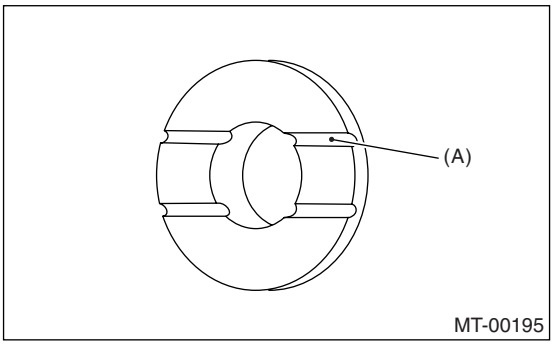

(A) Face this surface to 5th gear side.

7) Install the bearing onto synchro cone.
8) Install the baulk ring and synchro cone onto 5th-Rev sleeve and hub assembly using ST and a press.

NOTE:
• Use a new ball bearing.
• After press fitting, make sure the synchro cone rotates freely.

ST 499757002 INSTALLER

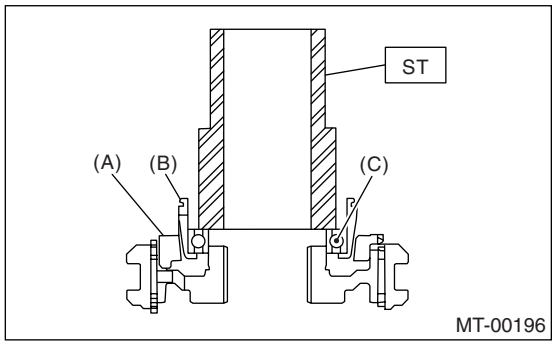

(A) Baulk ring
(B) Synchro cone
(C) Ball bearing

9) Install the synchro cone stopper and snap ring to 5th-Rev sleeve and hub assembly.

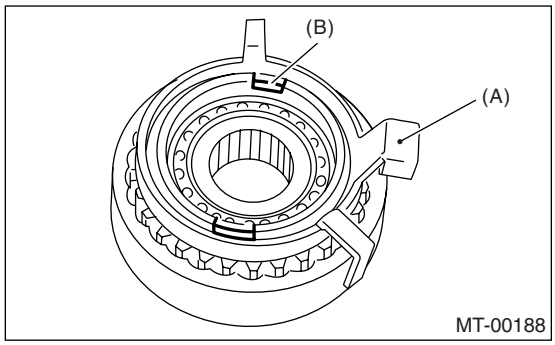

(A) Synchro cone stopper
(B) Snap ring

10) Install rest of the parts to the rear section of transmission main shaft.

NOTE:
Align the groove in baulk ring with shifting insert.

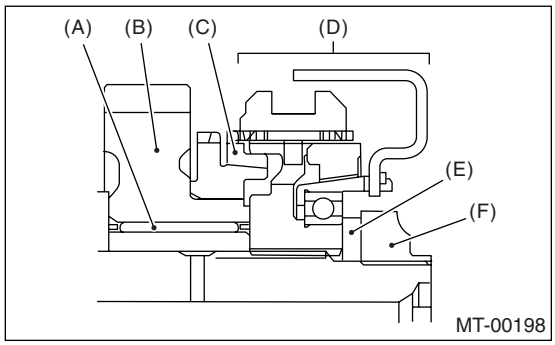

(A) Needle bearing
(B) 5th drive gear
(C) Baulk ring
(D) 5th-Rev sleeve and hub ASSY
(E) Lock washer
(F) Lock nuts

11) Tighten the lock nuts to the specified torque using ST1 and ST2.

NOTE:
Secure the lock nuts in two places after tightening.

ST1 499987003 SOCKET WRENCH
ST2 498937000 TRANSMISSION HOLDER

Tightening torque:
120 N·m (12.2 kgf-m, 88.5 ft-lb)

12) Install the needle bearing on main shaft.
13) Install rest of the parts to the front section of transmission main shaft.

NOTE:
Be careful not to damage the graded section of transmission main shaft when installing the needle bearing.

NOTE:
- Face the grooved side toward input gear.
- Align the high-low baulk ring's groove with shifting insert.

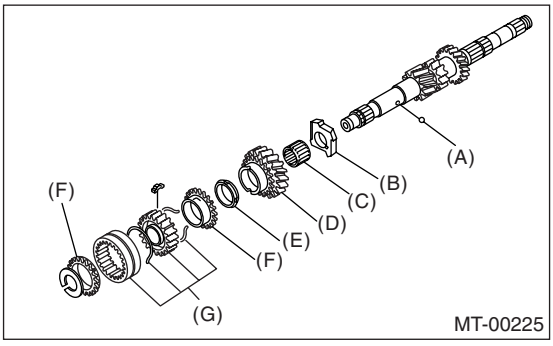

(A) Ball
(B) Input low gear spacer
(C) Needle bearing
(D) Low input gear
(E) Friction damper
(F) High-low baulk ring
(G) Sleeve and hub ASSY

14) Install a new snap ring to the rod section of transmission main shaft using ST1 and ST2.

NOTE:
Select a suitable outer snap ring so that axial clearance between snap ring and hub is held within 0.060 to 0.100 mm (0.0024 to 0.0039 in).

ST1 499757002 INSTALLER
ST2 499757001 SNAP RING GUIDE

Snap ring	
Part No.	Thickness mm (in)
805025051	2.42 (0.0953)
805025052	2.47 (0.0972)
805025053	2.52 (0.0992)
805025054	2.57 (0.1012)
805025055	2.62 (0.1031)
805025056	2.67 (0.1051)
805025057	2.72 (0.1071)
805025058	2.37 (0.0933)

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.
1) Bearings
Replace the bearings in the following cases:
- Bearings whose balls, outer races and inner races are broken or rusty.
- Worn bearings
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.
- Bearings having other defects

2) Bushing (each gear)
Replace the bushing in the following cases:
- When the sliding surface is damaged or abnormally worn.
- When the inner wall is abnormally worn.

3) Gears
- Replace the gears with new ones if their tooth surfaces are broken, damaged, or excessively worn.
- Correct or replace if the cone that contacts the baulk ring is rough or damaged.
- Correct or replace if the inner surface or end face is damaged.

4) Baulk ring
Replace the ring in the following cases:
- When the inner surface and end face are damaged.
- When the ring inner surface is abnormally or partially worn down.
- When the contact surface of the synchronizer ring insert is scored or abnormally worn down.

5) Shifting insert key
Replace the insert if deformed, excessively worn, or defective in any way.
6) Oil seal
Replace the oil seal if the lip is deformed, hardened, damaged, worn, or defective in any way.
7) O-ring
Replace the O-ring if the sealing face is deformed, hardened, damaged, worn, or defective in any way.
8) Gearshift mechanism
Repair or replace the gearshift mechanism if excessively worn, bent, or defective in any way.

F: ADJUSTMENT

Choose the main shaft rear plate. <Ref. to 5MT-82, ADJUSTMENT, Main Shaft Assembly for Single-Range.>

18.Input Shaft Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
4) Remove the drive pinion shaft assembly. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
5) Remove the main shaft assembly and input shaft assembly.

B: INSTALLATION

1) Install the needle bearing onto the front of transmission main shaft assembly.
2) Connect the main shaft assembly and input shaft assembly.
3) Install the needle bearing outer race knock pin hole into transmission case knock pin.
4) Install the drive pinion assembly. <Ref. to 5MT-93, INSTALLATION, Drive Pinion Shaft Assembly.>
5) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
6) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
7) Install the manual transmission assembly on vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the O-ring from input shaft holder. Also, remove the input shaft holder shim.

NOTE:
- Use a new O-ring.
- Number of shims used varies from zero to two.

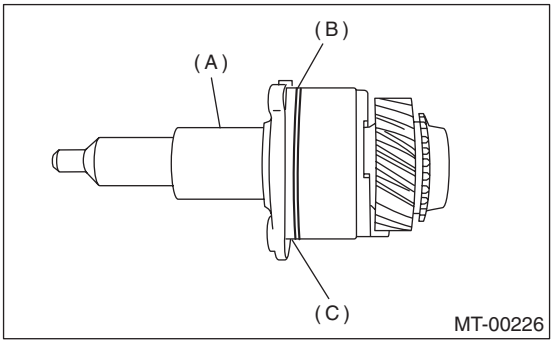

(A) Input shaft holder
(B) O-ring
(C) Input shaft holder shim

2) Put vinyl tape around the input shaft splines to protect oil seal from damage.
3) Remove the inner snap ring.
ST 398663600 PLIERS

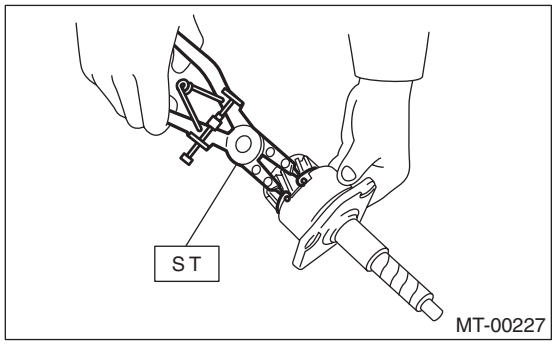

4) Hold the input shaft holder stationary and remove the input shaft by tapping its end with a plastic hammer.

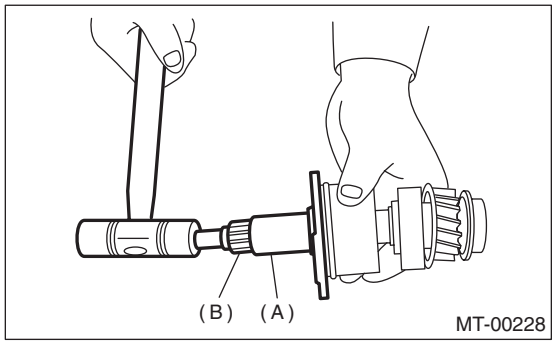

(A) Input shaft holder
(B) Input shaft

5) Remove the outer snap ring. Then remove the oil squeeze plate and straight pin.

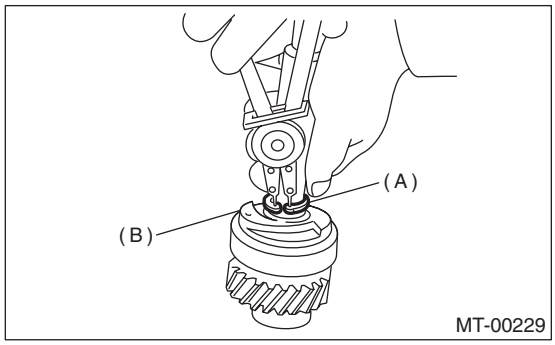

(A) Snap ring
(B) Oil squeeze plate

6) Remove the snap ring.

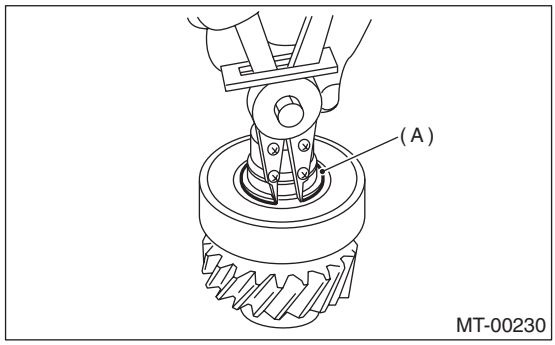

(A) Snap ring

7) Using a press and ST, remove the ball bearing.

NOTE:
Remove the inner snap ring before pressing.

ST 498077000 REMOVER

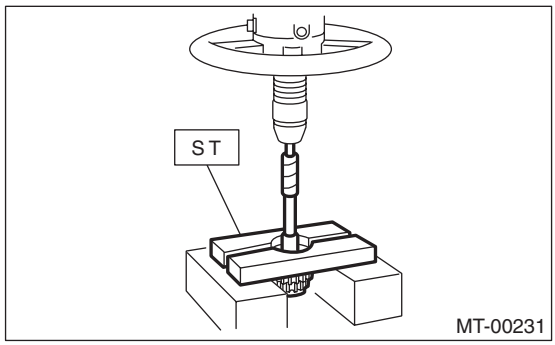

8) Remove the oil seal from input shaft holder.

D: ASSEMBLY

1) Install the ball bearing onto input shaft.

NOTE:
Place the snap ring between input shaft gear and ball bearing beforehand. Use the table at 8) as a guide in selecting a suitable snap ring.

ST1 899580100 INSTALLER
ST2 399513600 INSTALLER

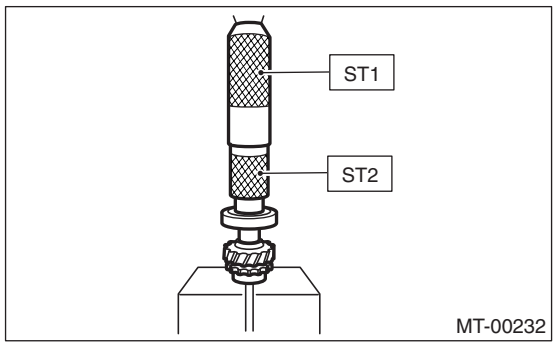

2) Install the snap ring on input shaft.

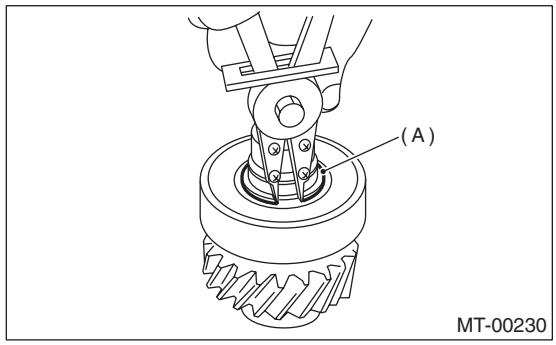

(A) Snap ring

3) Inspect the clearance between ball bearing and snap ring. <Ref. to 5MT-91, INSPECTION, Input Shaft Assembly.>

4) Install the straight pin and oil squeeze plate to input shaft.

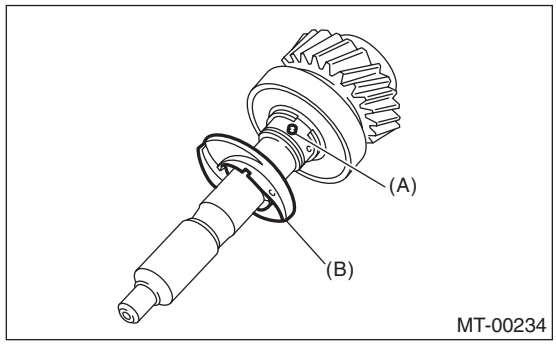

(A) Straight pin
(B) Oil squeeze plate

5) Install the snap ring.

6) Drive the oil seal into input shaft holder.

NOTE:
Apply a coat of grease to sealing lips before installing oil seal.

ST 398507703 DUMMY COLLAR

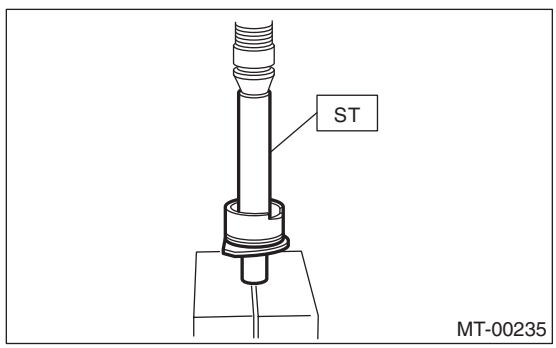

7) Wind vinyl tape around the shaft splines and insert input shaft into holder by lightly tapping it by hand.

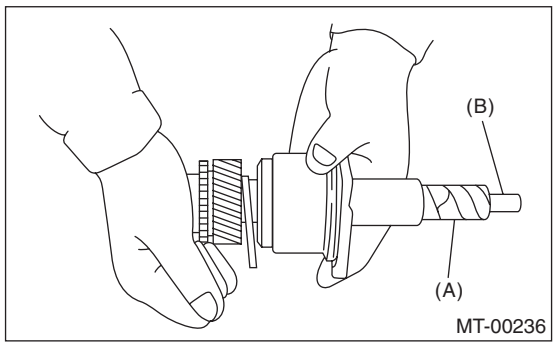

(A) Vinyl tape
(B) Input shaft

8) Install the snap ring to input shaft holder.

NOTE:
Select a suitable snap ring so that clearance between snap ring and bearing is held within 0 to 0.12 mm (0 to 0.0047 in).

ST 398663600 PLIERS

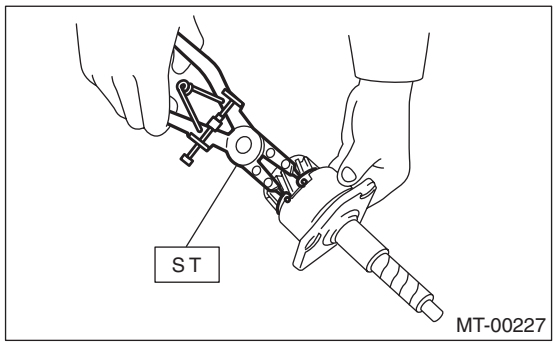

Snap ring	
Part No.	Thickness mm (in)
805168020	1.84 (0.0724)
805168030	1.92 (0.0756)
805168040	2.00 (0.0787)

9) Install the O-ring to input shaft holder.

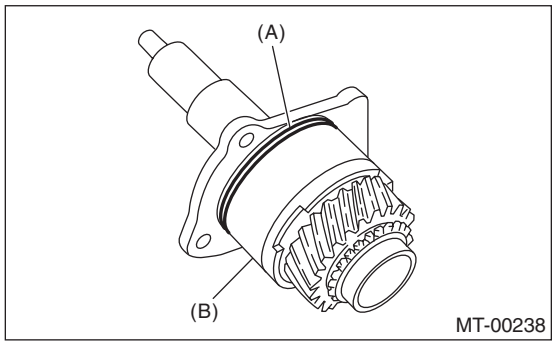

(A) O-ring
(B) Input shaft holder

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.

1) Bearings

Replace the bearings in the following cases:

- Bearings whose balls, outer races and inner races are broken or rusty.
- Worn bearings
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.
- Bearings having other defects

2) Bushing (each gear)

Replace the bushing in the following cases:

- When the sliding surface is damaged or abnormally worn.
- When the inner wall is abnormally worn.

3) Gears

- Replace the gears with new ones if their tooth surfaces are broken, damaged, or excessively worn.
- Correct or replace if the cone that contacts the baulk ring is rough or damaged.
- Correct or replace if the inner surface or end face is damaged.

4) Baulk ring

Replace the ring in the following cases:

- When the inner surface and end face are damaged.
- When the ring inner surface is abnormally or partially worn down.
- When the contact surface of the synchronizer ring insert is scored or abnormally worn down.

5) Shifting insert key

Replace the insert if deformed, excessively worn, or defective in any way.

6) Oil seal

Replace the oil seal if the lip is deformed, hardened, damaged, worn, or defective in any way.

7) O-ring
Replace the O-ring if the sealing face is deformed, hardened, damaged, worn, or defective in any way.
8) Gearshift mechanism
Repair or replace the gearshift mechanism if excessively worn, bent, or defective in any way.
9) Measure the clearance between snap ring and ball bearing using thickness gauge.

Clearance:
0 — 0.12 mm (0 — 0.0047 in)

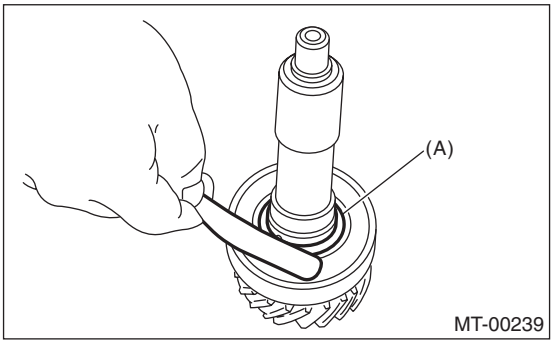

(A) Snap ring

If the measurement is not within specification, select a suitable snap ring.

Snap ring	
Part No.	Thickness mm (in)
805028050	2.48 (0.0976)
805028060	2.56 (0.1008)
805028070	2.64 (0.1039)

19.Drive Pinion Shaft Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
4) Remove the drive pinion shaft assembly.

NOTE:
Use a hammer handle, etc. to remove if too tight.

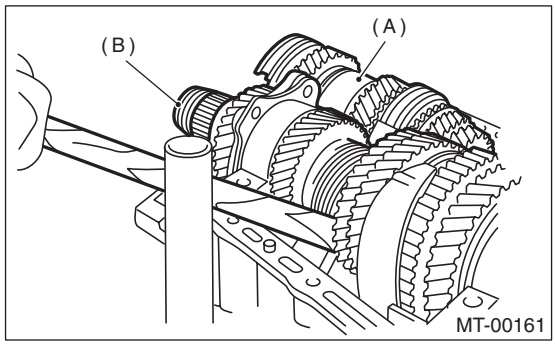

(A) Main shaft assembly
(B) Drive pinion shaft assembly

B: INSTALLATION

1) Remove the differential assembly.
2) Alignment marks/numbers on hypoid gear set:
The upper number on drive pinion is the match number for combining it with hypoid driven gear. The lower number is for shim adjustment. If no lower number is shown, the value is zero. The number on hypoid driven gear indicates a number for combination with drive pinion.

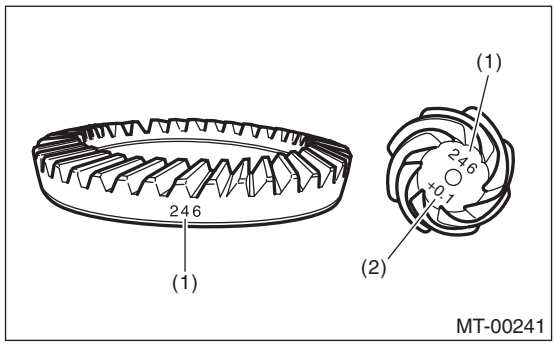

(A) Drive pinion
(B) Hypoid driven gear

3) Place the drive pinion shaft assembly on right hand transmission main case without shim and tighten the bearing mounting bolts.
4) Inspection and adjustment of ST:

NOTE:
• Loosen the two bolts and adjust so that the scale indicates 0.5 correctly when the plate end and the scale end are on the same level.
• Tighten the two bolts.

ST 499917500 DRIVE PINION GAUGE ASSY

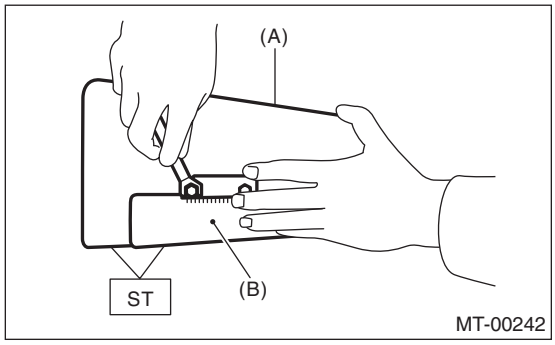

(A) Plate
(B) Scale

5) Position the ST by inserting the knock pin of ST into the knock hole in transmission case.

ST 499917500 DRIVE PINION GAUGE ASSY

6) Slide the drive pinion gauge scale with finger tip and read the value at the point where it matches with the end face of drive pinion.

ST 499917500 DRIVE PINION GAUGE ASSY

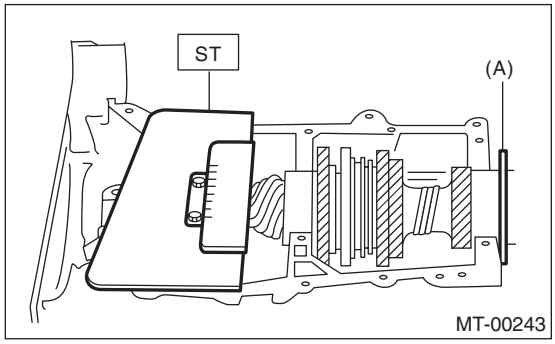

(A) Adjust clearance to zero without shim.

7) The thickness of shim shall be determined by adding the value indicated on drive pinion to the value indicated on ST. (Add if the number on drive pinion is prefixed by + and subtract if the number is prefixed by −.)

ST 499917500 DRIVE PINION GAUGE ASSY

8) Select one to three shims from the next table for the value determined as described above and take a shim thickness which is closest to the indicated value.

Drive pinion shim	
Part No.	Thickness mm (in)
32295AA031	0.150 (0.0059)
32295AA041	0.175 (0.0069)
32295AA051	0.200 (0.0079)
32295AA061	0.225 (0.0089)
32295AA071	0.250 (0.0098)
32295AA081	0.275 (0.0108)
32295AA091	0.300 (0.0118)
32295AA101	0.500 (0.0197)

9) Install the differential assembly. <Ref. to 5MT-104, INSTALLATION, Front Differential Assembly.>
10) Set the transmission main shaft assembly and drive pinion assembly in position. (So there is no clearance between the two when moved all the way to the front). Inspect the suitable 1st-2nd, 3rd-4th and 5th shifter fork so that coupling sleeve and reverse driven gear are positioned in the center of their synchronizing mechanisms. <Ref. to 5MT-101, INSPECTION, Drive Pinion Shaft Assembly.>
11) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
12) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
13) Install the manual transmission assembly to vehicle.<Ref. to 5MT-38, Manual Transmission Assembly.>

C: DISASSEMBLY

1. AWD MODEL

NOTE:
Attach a cloth to the end of driven shaft (on the frictional side of thrust needle bearing) to prevent damage during disassembly or reassembly.

1) Straighten the lock nut at staked portion. Remove the lock nut using ST1, ST2 and ST3.
ST1 899884100 HOLDER
ST2 498427100 STOPPER
ST3 899988608 SOCKET WRENCH (27)

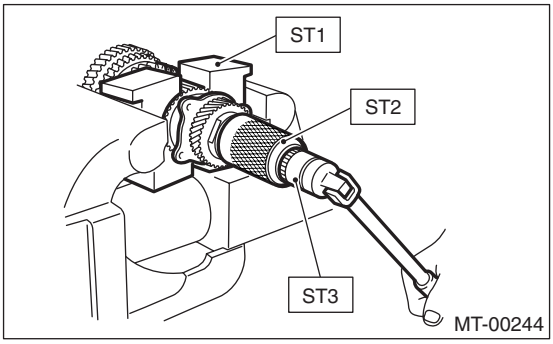

2) Withdraw the drive pinion from driven shaft.
Remove the differential bevel gear sleeve, adjusting washer No. 1, adjusting washer No. 2, thrust bearing, needle bearing, drive pinion collar, needle bearing and thrust bearing.

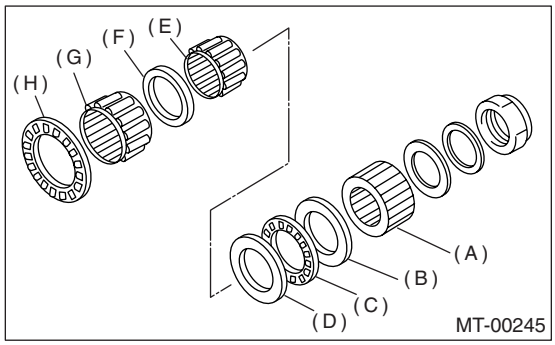

(A) Differential bevel gear sleeve
(B) Washer No. 1 (25 × 37.5 × t)
(C) Thrust bearing (25 × 37.5 × 3)
(D) Washer No. 2 (25 × 37.5 × 4)
(E) Needle bearing (25 × 30 × 20)
(F) Drive pinion collar
(G) Needle bearing (30 × 37 × 23)
(H) Thrust bearing (33 × 50 × 3)

3) Remove the roller bearing and washer using ST and press.

NOTE:
Do not reuse the roller bearing.
ST 498077000 REMOVER

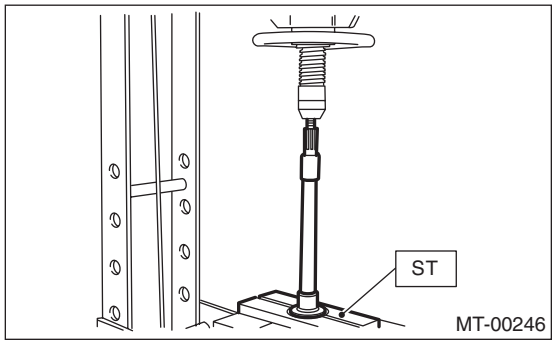

4) Straighten the lock nut at staked portion. Remove the lock nut using ST1 and ST2.
ST1 499987300SOCKET WRENCH (50)
ST2 899884100 HOLDER

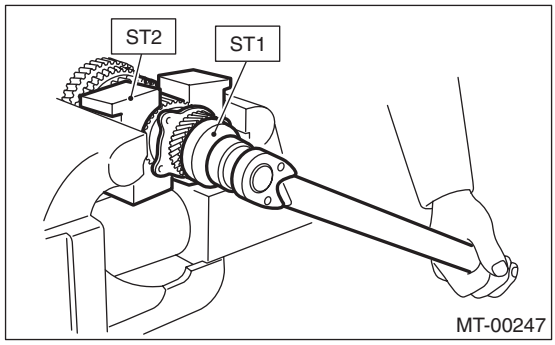

5) Remove the 5th driven gear using ST.
ST 499857000 5TH DRIVEN GEAR REMOVER

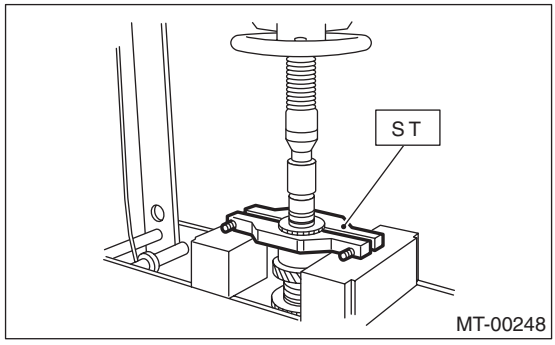

6) Remove the woodruff key.
7) Remove the roller bearing, 3rd-4th driven gear using ST1 and ST2.
ST1 499757002 INSTALLER
ST2 899714110 REMOVER

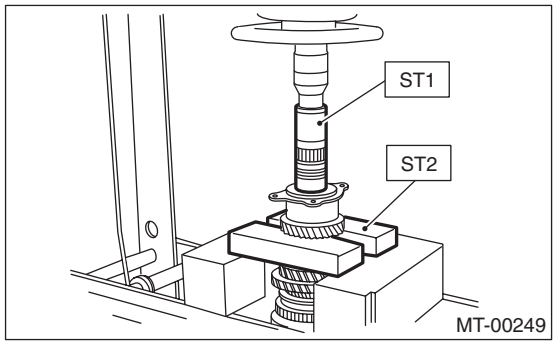

8) Remove the key.

9) Remove the 2nd driven gear, inner baulk ring, synchro cone and outer baulk ring. (Except 1.6 L model)

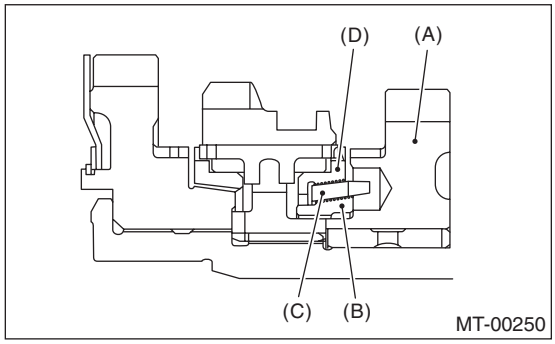

(A) 2nd driven gear
(B) Inner baulk ring
(C) Synchro cone
(D) Outer baulk ring

10) Remove the 2nd driven gear assembly. (1.6 L model)
11) Remove the 1st driven gear, 2nd gear bushing, gear and hub using ST1 and ST2.

NOTE:
Replace the gear and hub if necessary. Do not attempt to disassemble if at all possible because they must engage at a specified point. If they should be disassembled, mark engagement point beforehand.

ST1 499757002 INSTALLER
ST2 899714110 REMOVER

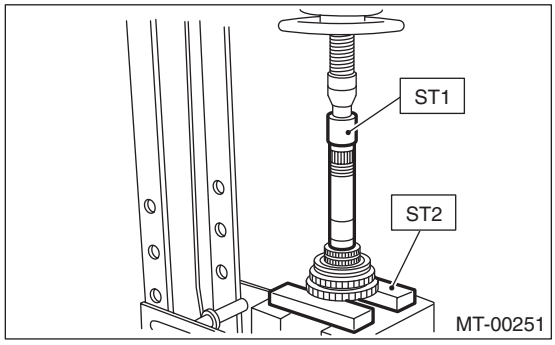

12) Remove the sub gear for 1st driven gear.

2. FWD MODEL

1) Loosen lock nut using ST1 and ST2.
ST1 49987100 or 499987003 or 899984103 SOCKETWRENCH (35)
ST2 899884100 HOLDER

NOTE:
Remove caulking before taking off lock nut.

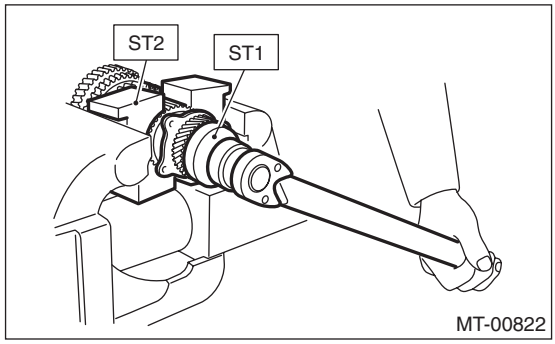

2) Remove 5th driven gear using ST and press.
ST 498077000 5TH DRIVEN GEAR REMOVER

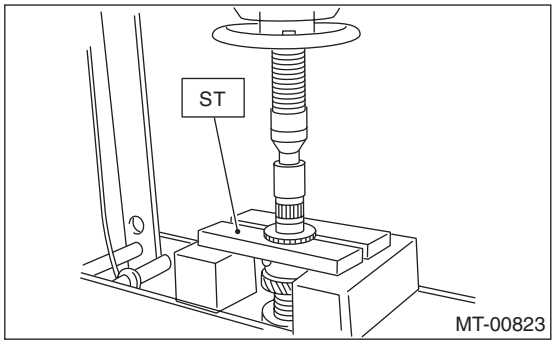

3) Remove woodruff key.
4) Remove roller bearing and 3rd-4th driven gear using ST1 and ST2.
ST1 499757002 SNAP RING GUIDE
ST2 899714110 REMOVER

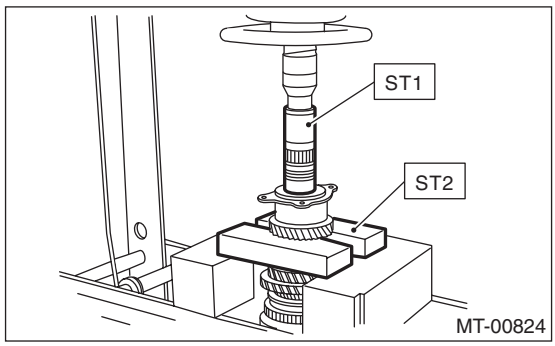

5) Remove 2nd driven gear assembly.
6) Remove 3rd-4th driven gear key.
7) Remove 1st driven gear, 2nd gear bushing and gear & hub assembly using ST1 and ST2.
Replace gear and hub if necessary. Do not attempt to disassemble if at all possible because they must engage at a specified point. If they have to be disassembled, mark the engaging point beforehand.
ST1 499757002 SNAP RING GUIDE
ST2 899714110 REMOVER

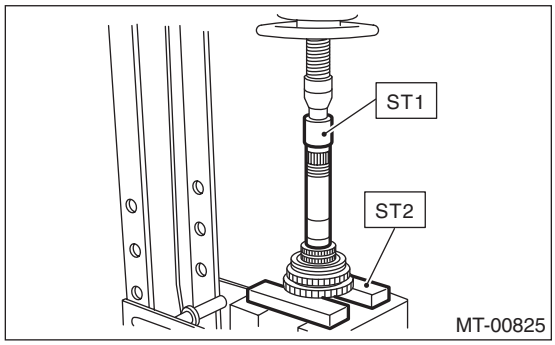

8) Remove 1st gear bushing, 1st driven gear thrust plate and roller bearing using ST and press.
ST 498517000 REPLACER

CAUTION:
Replace roller bearing (41 × 71 × 23) with a new one if this disassembly is performed.

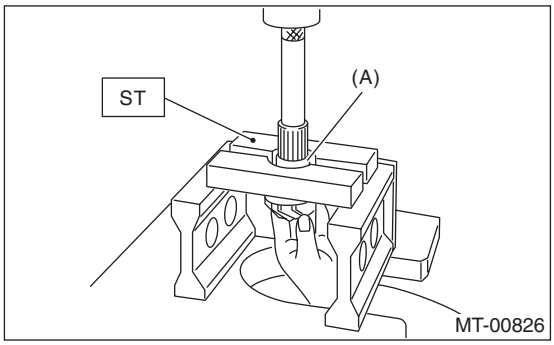

(A) 1st gear bushing

D: ASSEMBLY

1. AWD MODEL

1) Install the sleeve and hub assembly by matching alignment marks.

NOTE:
Use a new gear and hub assembly, if gear or hub have been replaced.

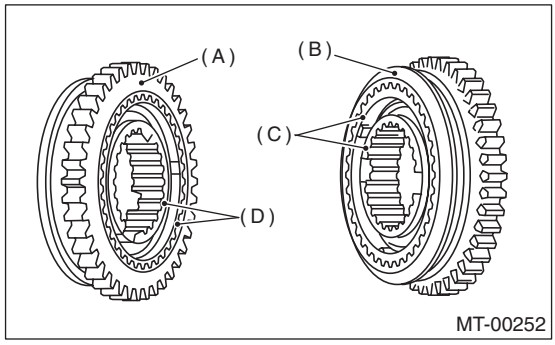

(A) 1st gear side
(B) 2nd gear side
(C) Flush surface
(D) Stepped surface

2) Install the washer, snap ring and sub gear to 1st driven gear.
3) Install the 1st driven gear, 1st baulk ring, gear and hub assembly onto driven shaft.

NOTE:
• Take care to install the gear and hub assembly in proper direction.
• Align the baulk ring and gear & hub assembly with key groove.

4) Install the 2nd driven gear bushing onto driven shaft using ST1, ST2 and press.

NOTE:
• Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
• Attach a cloth to the end of driven shaft to prevent damage.
• When press fitting, align the oil holes of shaft and bush.

ST1 499277200 INSTALLER
ST2 499587000 INSTALLER

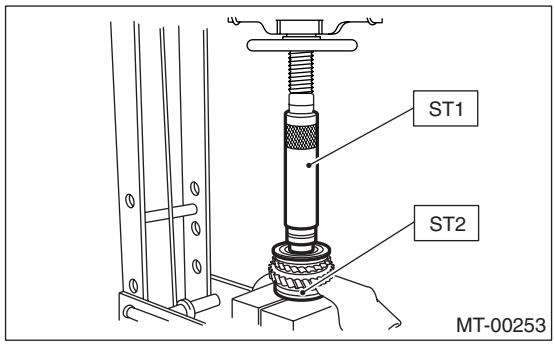

5) Install the 2nd driven gear, inner baulk ring, synchro cone, outer baulk ring and insert onto driven shaft. (Except 1.6 L model)

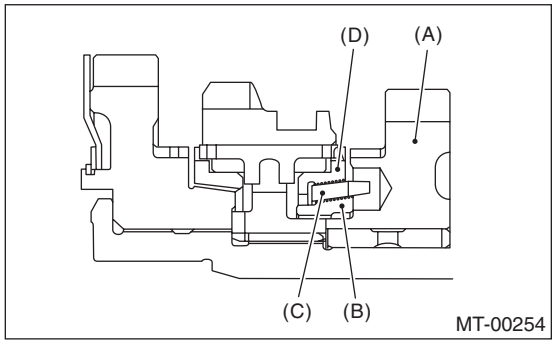

(A) 2nd driven gear
(B) Inner baulk ring
(C) Synchro cone
(D) Outer baulk ring

6) Install the 2nd driven gear, 1st-2nd bulk ring and insert onto driven shaft. (1.6 L model)
7) After installing the key on driven shaft, install the 3rd-4th driven gear using ST and press.

NOTE:
• Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
• Align the groove in baulk ring with insert.

ST 499277200 INSTALLER

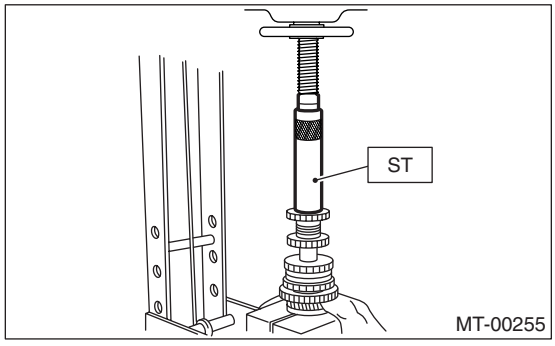

8) Install a set of roller bearings onto the driven shaft using ST and press.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

ST 499277200 INSTALLER

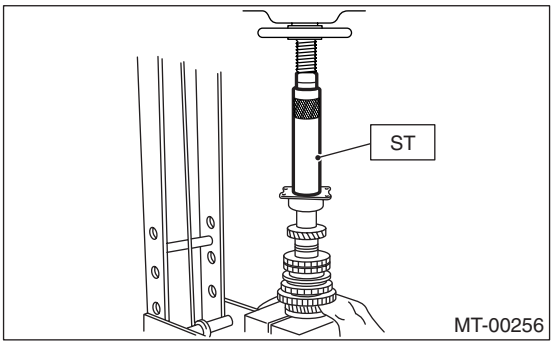

9) Position the woodruff key in groove on the rear of driven shaft. Install the 5th driven gear onto driven shaft using ST and press.

NOTE:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
ST 499277200 INSTALLER

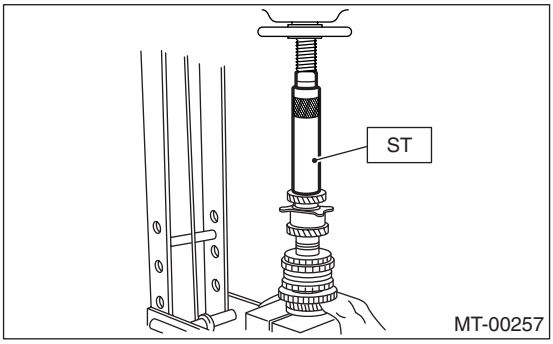

10) Install the lock washer. Install the lock nut and tighten to the specified torque using ST.
ST 499987300 SOCKET WRENCH (50)

Tightening torque:
260 N·m (26.5 kgf-m, 191.7 ft-lb)

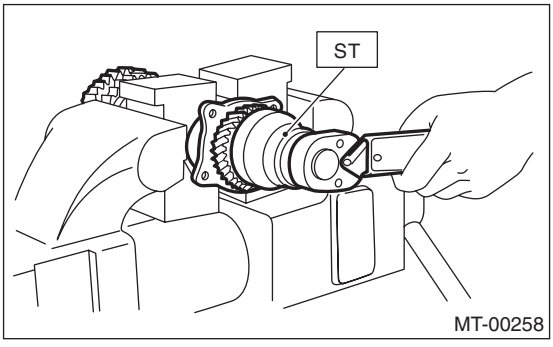

NOTE:
- Stake the lock nut at two points.

- Using the spring balancer, check that starting torque of roller bearing is 0.1 to 1.5 N (0.01 to 0.15 kgf, 0.02 to 0.33 ft).

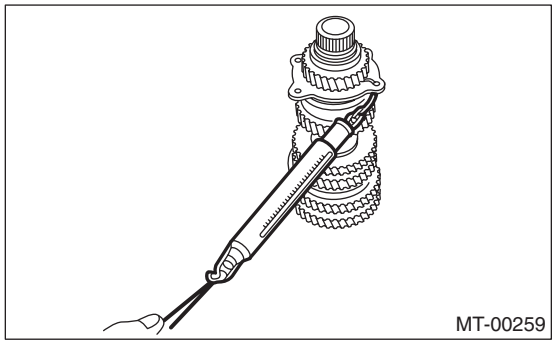

11) Install the roller bearing onto drive pinion.

NOTE:
When installing the roller bearing, note its directions (front and rear) because the knock pin hole in outer race is offset.

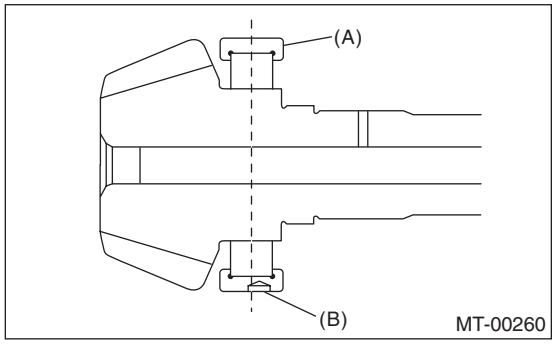

(A) Roller bearing
(B) Knock pin hole

12) Install the washer using ST1, ST2 and press.

NOTE:
- Discard the old lock nuts, replace with new ones.
- Secure the lock nut in four places.

ST1 499277100 BUSH 1-2 INSTALLER
ST2 499277200 INSTALLER

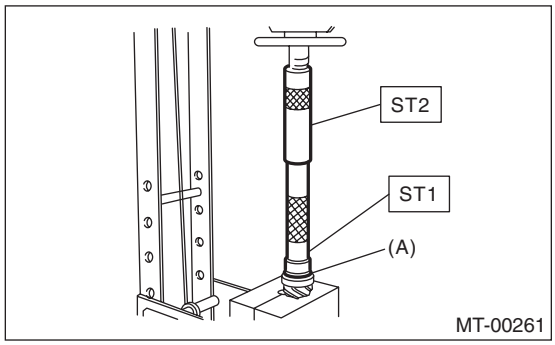

(A) Washer

13) Install the thrust bearing and needle bearing. Install the driven shaft assembly.

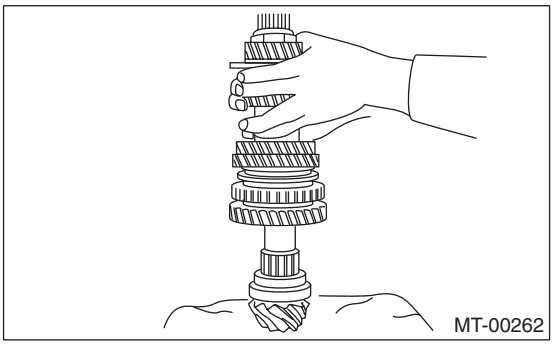

14) Install the drive pinion collar, needle bearing, adjusting washer No. 2, thrust bearing, adjusting washer No. 1 and differential bevel gear sleeve in that order.

NOTE:
Be careful because the spacer must be installed in proper direction.

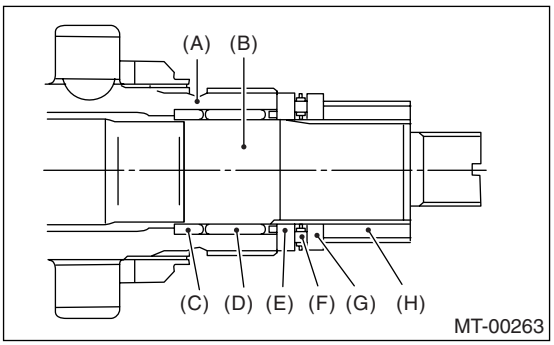

(A) Driven shaft
(B) Drive shaft
(C) Drive pinion collar
(D) Needle bearing (25 × 30 × 20)
(E) Washer No. 2 (25 × 36 × 4)
(F) Thrust bearing (25 × 37.5 × 3)
(G) Washer No. 1 (25 × 36 × t)
(H) Differential bevel gear sleeve

2. FWD MODEL

1) Assemble gear and hub assembly.

NOTE:
• Use new gear and hub assembly, if gear or hub have been replaced.
• Be sure the insert keys are correctly located in the insert key grooves inside the reverse driven gear.

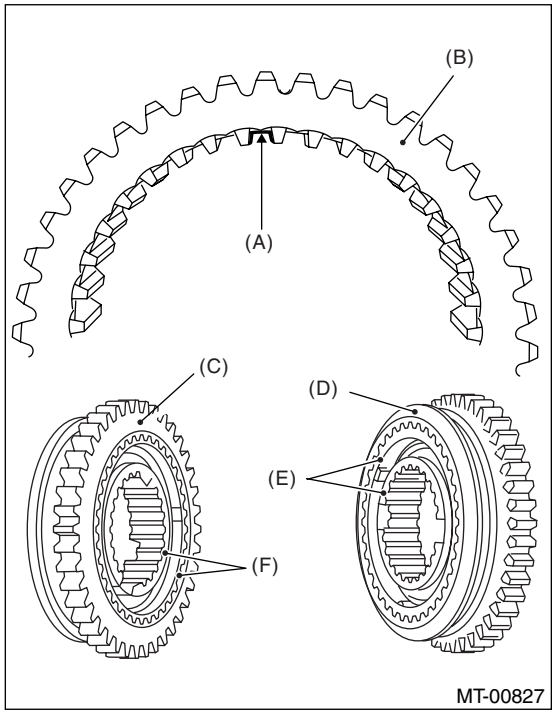

(A) Key grooves
(B) Reverse driven gear
(C) 1st driven gear side
(D) 2nd driven gear side
(E) Flush surface
(F) Stepped surface

2) Drive roller bearing onto drive pinion shaft and 1st driven gear thrust washer using ST1 and ST2.
ST1 499277000RACE 4-5 INSTALLER
ST2 499277100BUSH 1-2 INSTALLER

CAUTION:
Use new roller bearing, 1st gear thrust washer.

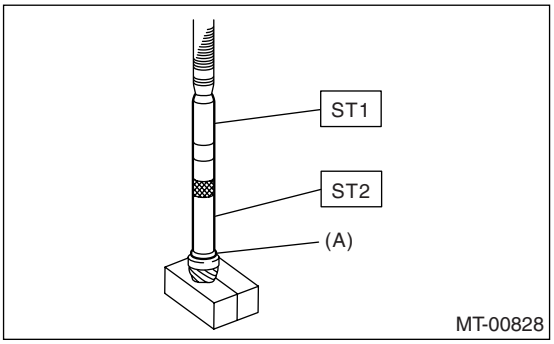

(A) Thrust washer

3) Install 1st-2nd driven gear bushing onto drive pinion shaft.

NOTE:
Bushing may be installed with either side up.
ST1 499877000 RACE 4-5 INSTALLER
ST2 499277100 BUSH 1-2 INSTALLER

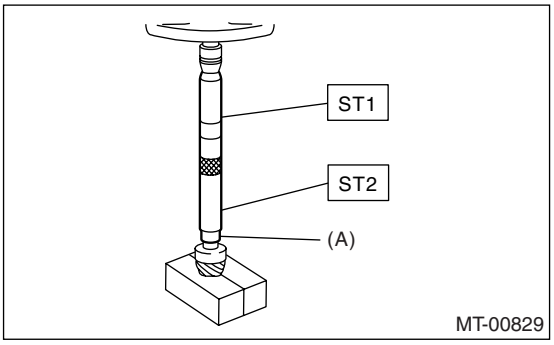

(A) 1st-2nd driven gear bush

4) Measure outside diameter of 1st driven gear bushing to determine suitable 1st driven gear.

1st driven gear	
Part number	Outer diameter of bushing mm (in)
32231AA840	42.019 — 42.033 (1.6543 — 1.6548)
32231AA850	42.005 — 42.018 (1.6537 — 1.6543)
32231AA860	41.990 — 42.004 (1.6531 — 1.6537)

5) Install 1st driven gear, 1st-2nd balk ring and gear and hub assembly (already assembled in previous step) to drive pinion shaft by hand.

NOTE:
Align ring groove with insert.

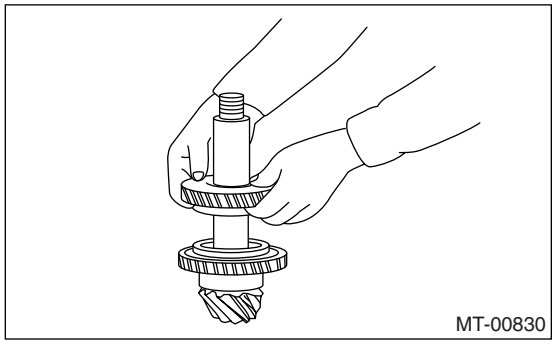

6) Install 1st-2nd driven gear bushing to drive pinion shaft using ST1 and ST2.
ST1 499877000 RACE 4-5 INSTALLER
ST2 499277100 BUSH 1-2 INSTALLER

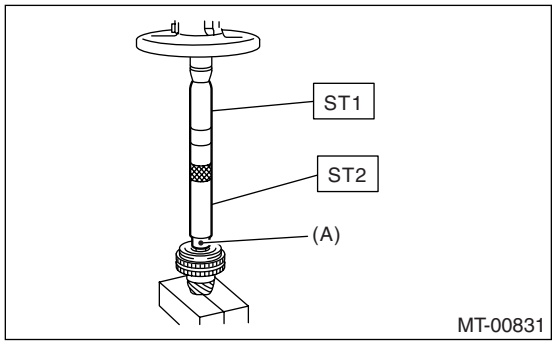

(A) 1st-2nd driven gear bushing

7) Install 2nd driven gear and 1st-2nd balk ring to drive pinion shaft by hand.
8) Install key into the groove on drive pinion shaft and install 3rd-4th driven gear.

NOTE:
Ball bearing may be installed without using the tool. There should be no problem.
ST 499877000 RACE 4-5 INSTALLER

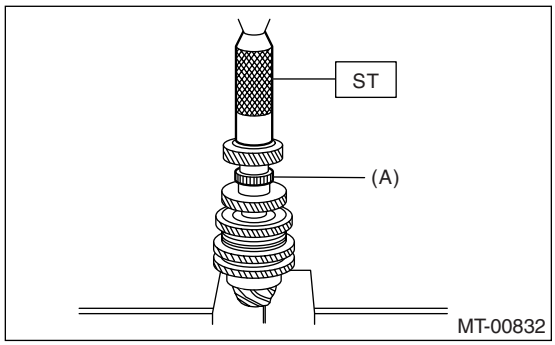

(A) 3rd-4th driven gear

9) Install ball bearing (29 × 74 × 38) on drive pinion shaft with ST.
ST 499277100 BUSH 1-2 INSTALLER

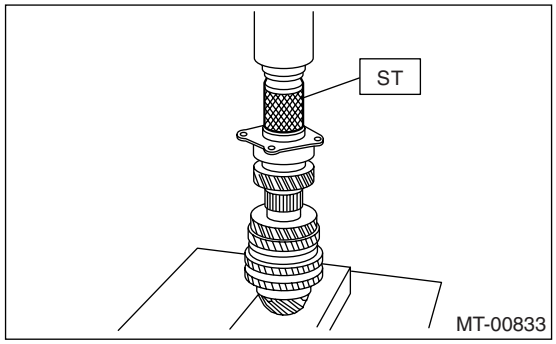

10) Position woodruff key in groove on the rear of drive pinion shaft. Install 5th driven gear onto drive shaft using ST and press.
ST 499277100 INSTALLER

CAUTION:
- **Face 5th driven gear in the correct direction.**
- **Be careful not to dislocate woodruff key while installing 5th driven gear.**

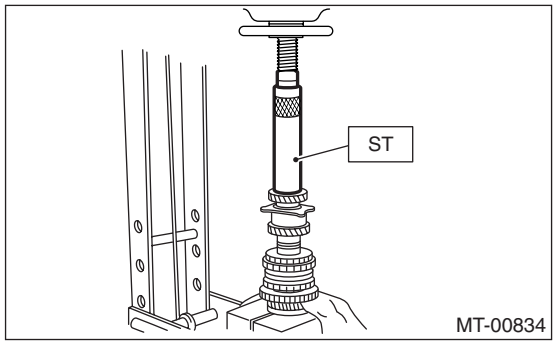

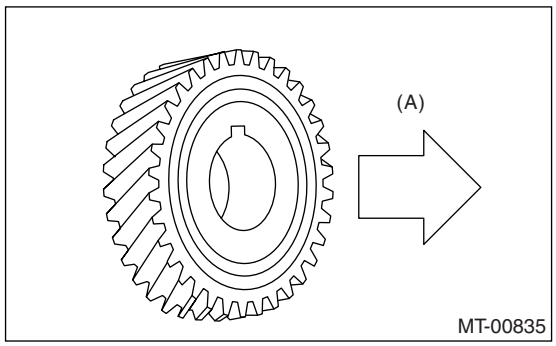

(A) Rear

11) Install lock washer and tighten lock nut to the specified torque using ST1 and ST2.
ST1 49987100 or 499987003 or 899984103 SOCKETWRENCH (35)
ST2 899884100HOLDER

CAUTION:
- **Discard old lock nuts, replace with new ones.**
- **Secure lock nut in four places.**

Tightening torque:
120 N·m (12.2 kgf-m, 88.5 ft-lb)

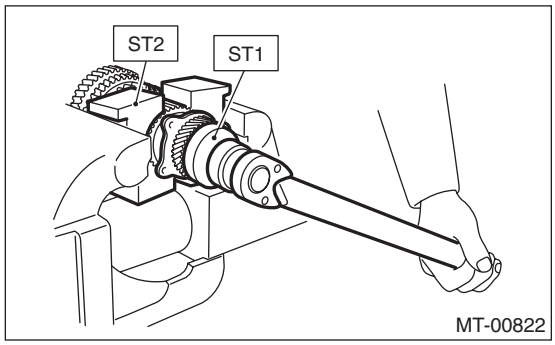

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.
1) Bearings
Replace the bearings in the following cases:
- Bearings whose balls, outer races and inner races are broken or rusty.
- Worn bearings
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.
- The ball bearing on the rear side of the drive pinion shaft should be checked for smooth rotation before the drive pinion assembly is disassembled. In this case, because a preload is working on the bearing, its rotation feels like it is slightly dragging unlike the other bearings.

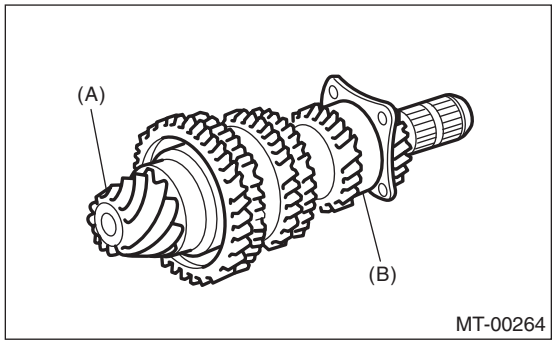

(A) Drive pinion shaft
(B) Ball bearing

- Bearings having other defects

2) Bushing (each gear)
Replace the bushing in the following cases:
• When the sliding surface is damaged or abnormally worn.
• When the inner wall is abnormally worn.
3) Gears
• Replace the gears with new ones if their tooth surfaces are broken, damaged, or excessively worn.
• Correct or replace if the cone that contacts the baulk ring is rough or damaged.
• Correct or replace if the inner surface or end face is damaged.
4) Baulk ring
Replace the ring in the following cases:
• When the inner surface and end face are damaged.
• When the ring inner surface is abnormally or partially worn down.
• If the gap between the end faces of the ring and the gear splined part is excessively small when the ring is pressed against the cone.

Clearance (A):
0.5 — 1.0 mm (0.020 — 0.040 in)

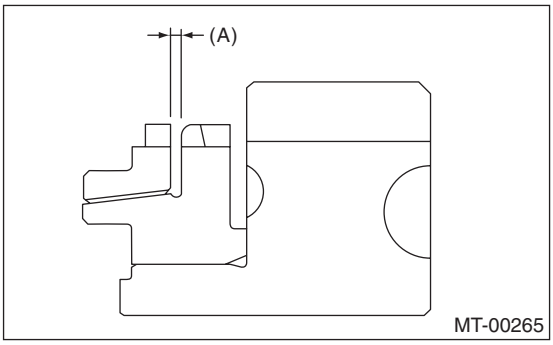

• When the contact surface of the synchronizer ring insert is scored or abnormally worn down.
5) Shifting insert key
Replace the insert if deformed, excessively worn, or defective in any way.

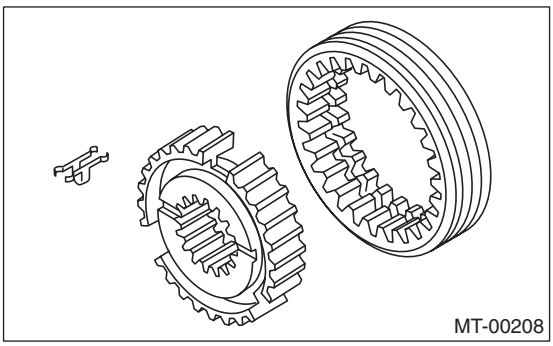

6) Oil seal
Replace the oil seal if the lip is deformed, hardened, damaged, worn, or defective in any way.

7) O-ring
Replace the O-ring if the sealing face is deformed, hardened, damaged, worn, or defective in any way.

F: ADJUSTMENT

1. THRUST BEARING PRELOAD

1) After completing the preceding steps 1) through 3), select the adjusting washer No. 1 so that dimension (H) is zero through visual check. Position the washer (18.3 × 30 × 4) and lock washer (18 × 30 × 2) and install the lock nut (18 × 13.5).

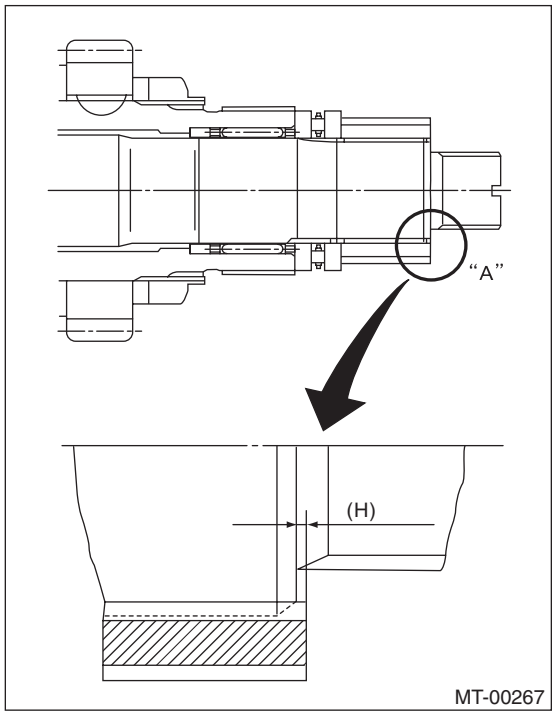

2) Using the ST1, ST2 and ST3, tighten the lock nut to specified torque.

ST1	899884100	HOLDER
ST2	498427100	STOPPER
ST3	899988608	SOCKET WRENCH (27)

Tightening torque:
120 N·m (12.2 kgf-m, 88.5 ft-lb)

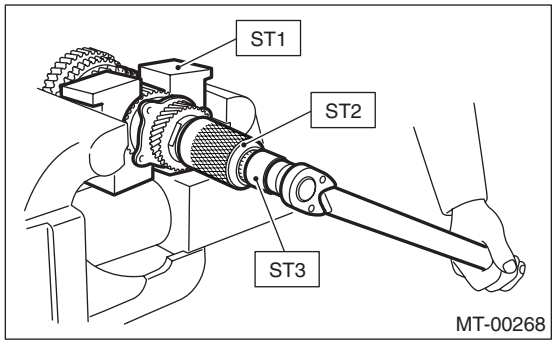

3) After removing the ST2, measure the starting torque using torque driver.
ST1 899884100HOLDER
ST3 899988608 SOCKET WRENCH (27)

Starting torque:
0.3 — 0.8 N·m
(0.03 — 0.08 kgf-m, 0.2 — 0.6 ft-lb)

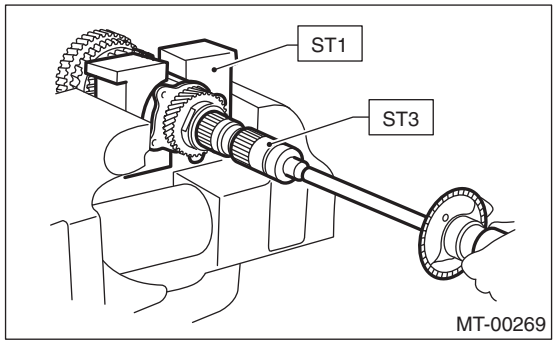

4) If the starting torque is not within specified limit, select a new adjusting washer No. 1 and recheck starting torque.

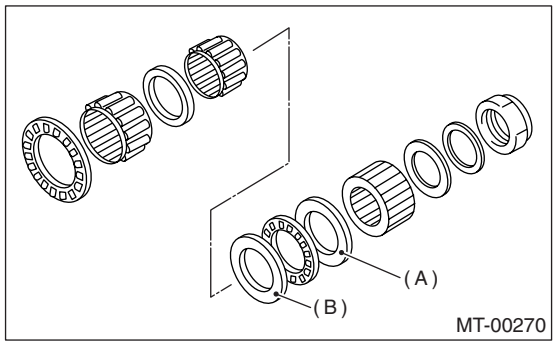

(A) Adjusting washer No.1
(B) Adjusting washer No.2

Adjusting washer No. 1	
Part No.	Thickness mm (in)
803025051	3.925 (0.1545)
803025052	3.950 (0.1555)
803025053	3.975 (0.1565)
803025054	4.000 (0.1575)
803025055	4.025 (0.1585)
803025056	4.050 (0.1594)
803025057	4.075 (0.1604)

5) If the specified starting torque range cannot be obtained when a No. 1 adjusting washer is used, then select a suitable No. 2 adjusting washer from those listed in the following table. Repeat steps 1) through 4) to adjust starting torque.

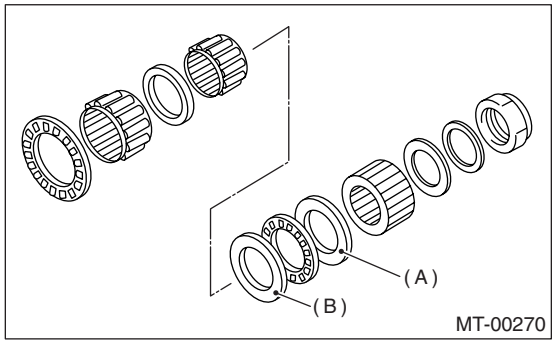

(A) Adjusting washer No. 1
(B) Adjusting washer No. 2

Starting torque	Dimension H	Washer No. 2
Low	Small	Select thicker one.
High	Large	Select thinner one.

Adjusting washer No. 2	
Part No.	Thickness mm (in)
803025059	3.850 (0.1516)
803025054	4.000 (0.1575)
803025058	4.150 (0.1634)

6) Recheck that the starting torque is within specified range, then clinch the lock nut at four positions.

20.Front Differential Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
4) Remove the drive pinion shaft assembly. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
5) Remove the main shaft assembly.
Single-range model
<Ref. to 5MT-73, REMOVAL, Main Shaft Assembly for Single-Range.>
Dual-range model
<Ref. to 5MT-83, REMOVAL, Main Shaft Assembly for Dual-Range.>
6) Remove the differential assembly.

NOTE:
• Be careful not to confuse the right and left roller bearing outer races.
• Be careful not to damage the retainer oil seal.

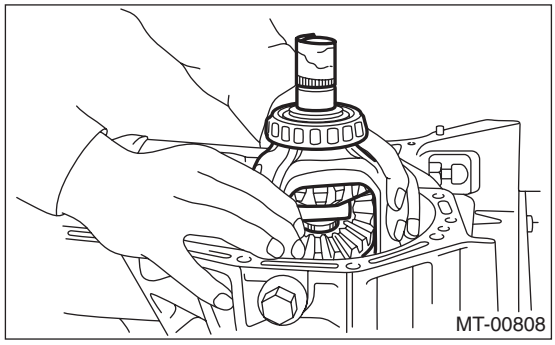

7) Remove the differential side retainers using ST.
ST 499787000 WRENCH ASSY

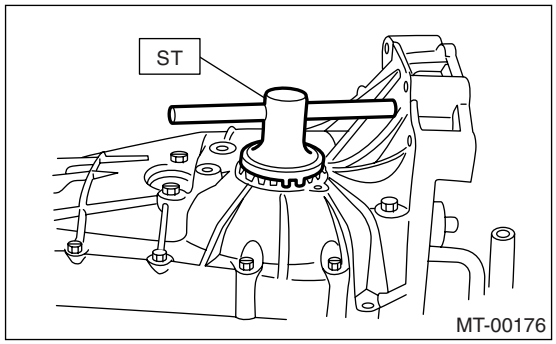

B: INSTALLATION

1) Install the differential side retainers using ST.
ST 499787000 WRENCH ASSY
2) Install the bearing outer race to transmission case.
3) Install the differential assembly.

NOTE:
• Be careful not to fold the sealing lip of oil seal.
• Wrap the right and left spline sections of axle shaft with vinyl tape to prevent scratches.

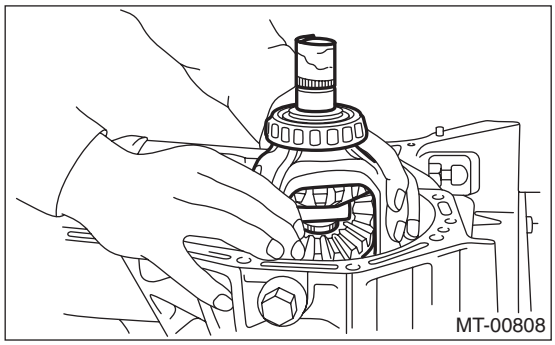

4) Install the main shaft assembly.
Single-range model
<Ref. to 5MT-73, INSTALLATION, Main Shaft Assembly for Single-Range.>
Dual-range model
<Ref. to 5MT-83, INSTALLATION, Main Shaft Assembly for Dual-Range.>
5) Install the drive pinion assembly. <Ref. to 5MT-93, INSTALLATION, Drive Pinion Shaft Assembly.>
6) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
7) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
8) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1. DIFFERENTIAL CASE ASSEMBLY

1) Remove the right and left snap rings from differential, and then remove the two axle drive shafts.

NOTE:
During reassembly, reinstall each axle drive shaft in the same place from which it was removed.

2) Loosen the twelve bolts and remove the hypoid driven gear.

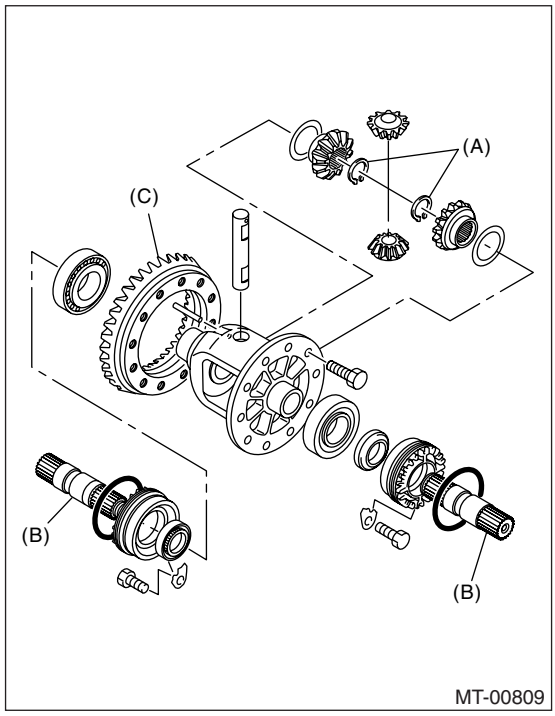

(A) Snap ring
(B) Axle drive shaft
(C) Hypoid driven gear

3) Drive out the straight pin from differential assembly toward hypoid driven gear.
ST 899904100 REMOVER

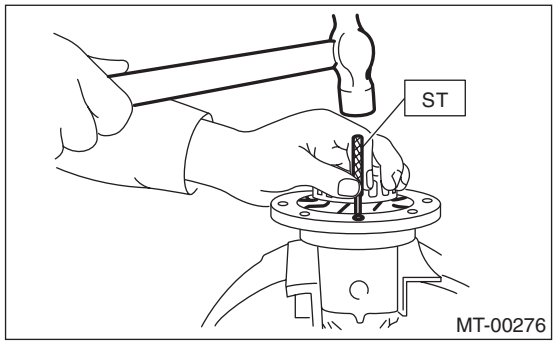

4) Pull out the pinion shaft, and remove the differential bevel pinion and gear and washer.

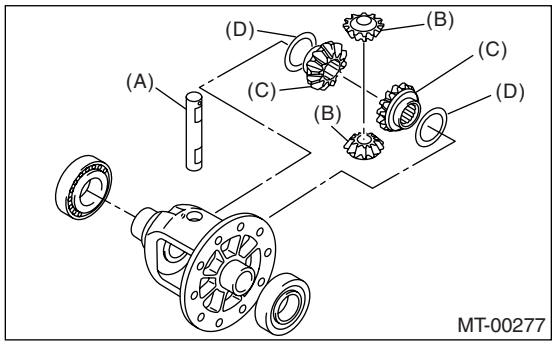

(A) Pinion shaft
(B) Bevel pinion
(C) Bevel gear
(D) Washer

5) Remove the roller bearing using ST.
ST 399527700 PULLER SET

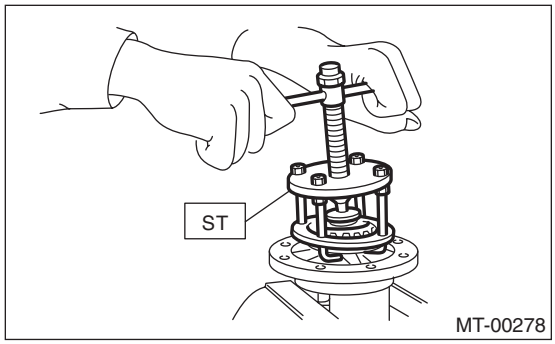

2. SIDE RETAINER

1) Remove the O-ring.

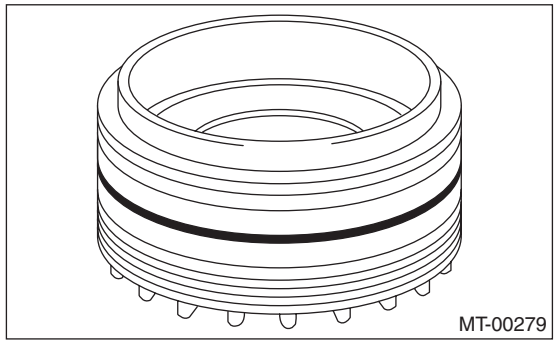

2) Remove the oil seal.

NOTE:
Do not reuse the oil seal. Prepare a new oil seal.

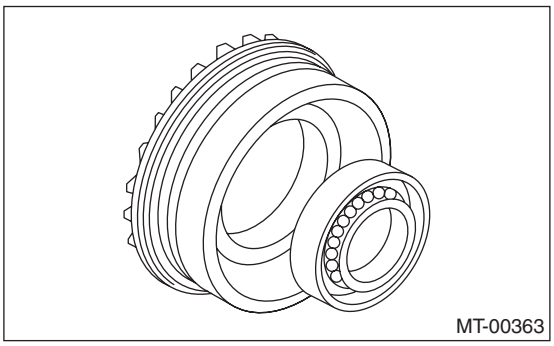

D: ASSEMBLY

1. DIFFERENTIAL CASE ASSEMBLY

1) Install the bevel gear and bevel pinion together with washers, and insert pinion shaft.

NOTE:
Face the chamfered side of washer toward gear.

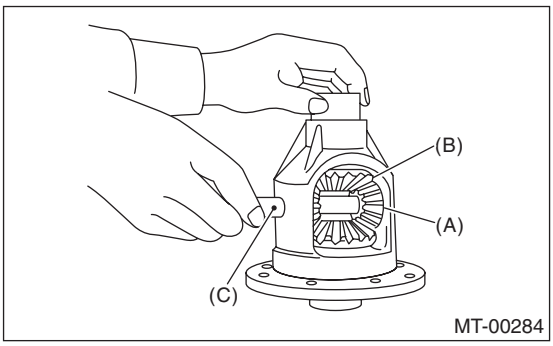

(A) Bevel pinion
(B) Bevel gear
(C) Pinion shaft

2) Measure the backlash between bevel gear and pinion. If it is not within specifications, install a suitable washer to adjust it. <Ref. to 5MT-108, ADJUSTMENT, Front Differential Assembly.>

NOTE:
Be sure the pinion gear tooth contacts adjacent gear teeth during measurement.

ST1 498247001 MAGNET BASE
ST2 498247100 DIAL GAUGE

Standard backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

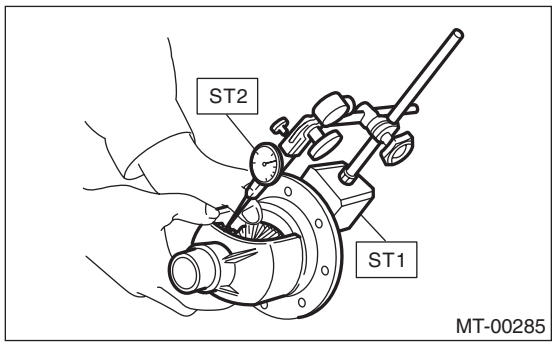

3) Align the pinion shaft and differential case at their holes, and drive the straight pin into holes from the hypoid driven gear side, using ST.

NOTE:
Lock the straight pin after installing.

ST 899904100 REMOVER

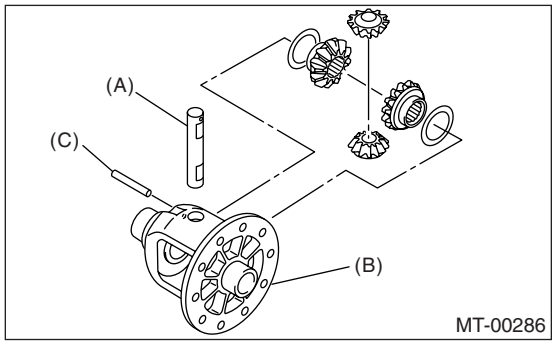

(A) Pinion shaft
(B) Differential case
(C) Straight pin

4) Install the roller bearing to differential case.

NOTE:
• Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).
• Be careful because the roller bearing outer races are used as a set.

ST1 499277100 BUSH 1-2 INSTALLER
ST2 398497701 ADAPTER

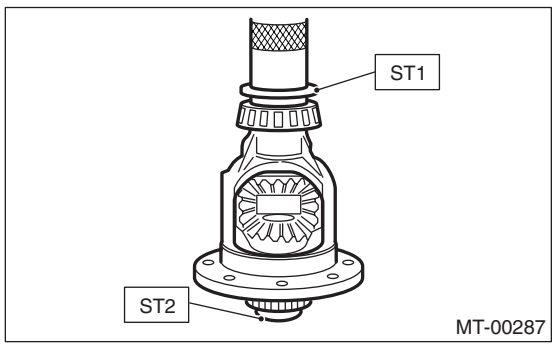

5) Install the hypoid driven gear to differential case using twelve bolts.

Tightening torque:
T: 62 N·m (6.3 kgf-m, 45.6 ft-lb)

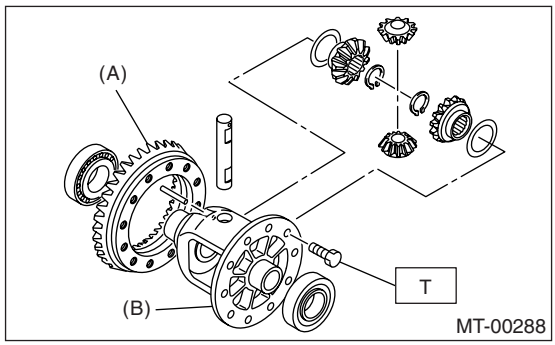

(A) Hypoid driven gear
(B) Differential case

2. SIDE RETAINER

1) Install a new oil seal.
ST 49979700 INSTALLER

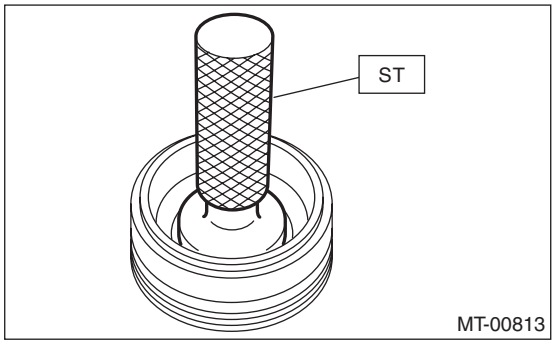

2) Install a new O-ring.

NOTE:
Do not stretch or damage the O-ring.

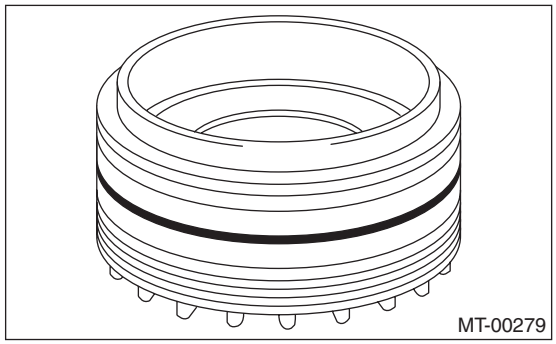

E: INSPECTION

Repair or replace the differential gear in the following cases:
• The hypoid drive gear and drive pinion shaft tooth surface are damaged, excessively worn, or seized.
• The roller bearing on the drive pinion shaft has a worn or damaged roller path.
• There is damage, wear, or seizure of the differential bevel pinion, differential bevel gear, washer, pinion shaft, and straight pin.
• The differential case has worn or damaged sliding surfaces.

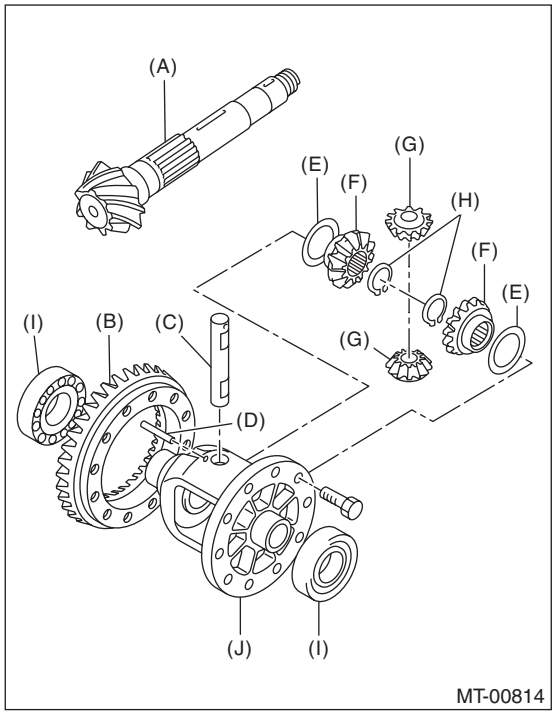

(A) Drive pinion shaft
(B) Hypoid driven gear
(C) Pinion shaft
(D) Straight pin
(E) Washer
(F) Differential bevel gear
(G) Differential bevel pinion
(H) Snap ring
(I) Roller bearing
(J) Differential case

1. BEVEL PINION GEAR BACKLASH

Measure the backlash between bevel gear and pinion. If it is not within specifications, install a suitable washer to adjust it.

NOTE:
Be sure the pinion gear tooth contacts adjacent gear teeth during measurement.

ST1 498247001 MAGNET BASE
ST2 498247100 DIAL GAUGE

Standard backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

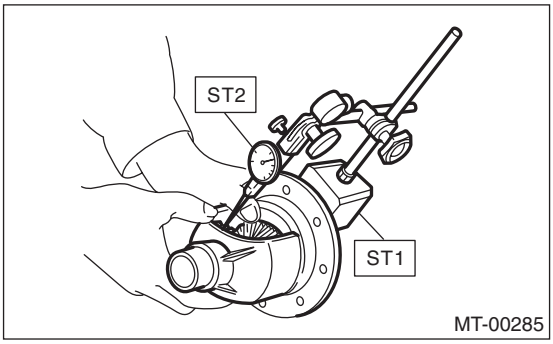

2. HYPOID GEAR BACKLASH

Set the ST1, ST2 and ST3. Insert the needle through transmission oil drain plug hole so that the needle comes in contact with the tooth surface at a right angle and check the backlash.

ST1 498247001 MAGNET BASE
ST2 498247100 DIAL GAUGE
ST3 498255400 PLATE

Backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

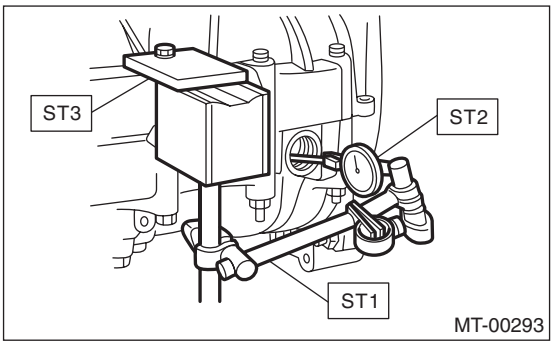

NOTE:
If the backlash is outside specified range, adjust it by turning the holder in right side case.

3. TOOTH CONTACT OF HYPOID GEAR

Check the tooth contact of hypoid gear as follows: Apply a uniform thin coat of red lead on both tooth surfaces of 3 or 4 teeth of the hypoid gear. Move the hypoid gear back and forth by turning the transmission main shaft until a definite contact pattern is developed on hypoid gear, and judge whether face contact is correct. If it is inaccurate, make adjustment. <Ref. to 5MT-108, ADJUSTMENT, Front Differential Assembly.>

- Tooth contact is correct.

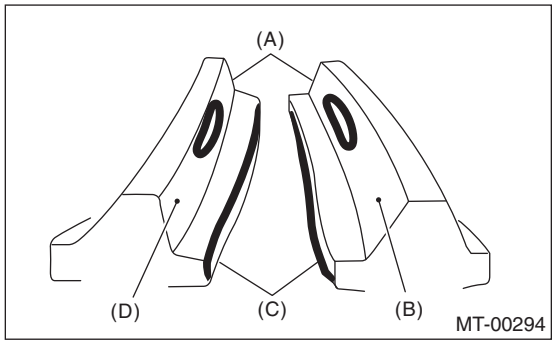

(A) Toe
(B) Coast side
(C) Heel
(D) Drive side

F: ADJUSTMENT

1. BEVEL PINION GEAR BACKLASH

1) Disassemble the front differential. <Ref. to 5MT-104, REMOVAL, Front Differential Assembly.>
2) Select a differential washer from the table and install.

Washer	
Part No.	Thickness mm (in)
803038021	0.925 — 0.950 (0.0364 — 0.0374)
803038022	0.975 — 1.000 (0.0384 — 0.0394)
803038023	1.025 — 1.050 (0.0404 — 0.0413)

3) Adjust until the specified value is obtained.

Standard backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

2. HYPOID GEAR BACKLASH

Adjust backlash by turning the holder in right side case.
ST 499787000 WRENCH ASSY

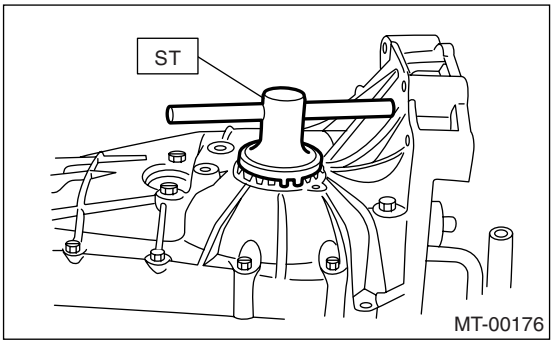

NOTE:
Each time holder rotates one tooth, backlash changes by 0.05 mm (0.020 in).

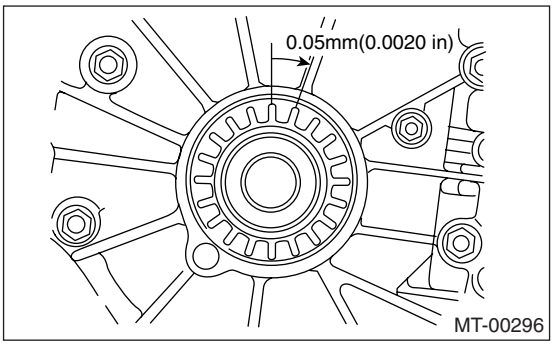

3. TOOTH CONTACT OF HYPOID GEAR

1) Adjust until the tooth contact is correct.
2) Check and adjust the tooth contact with following.
• Tooth contact
Checking item:Tooth contact pattern is slightly shifted toward to toe side under no-load rotation. [When loaded, contact pattern moves toward heel.]

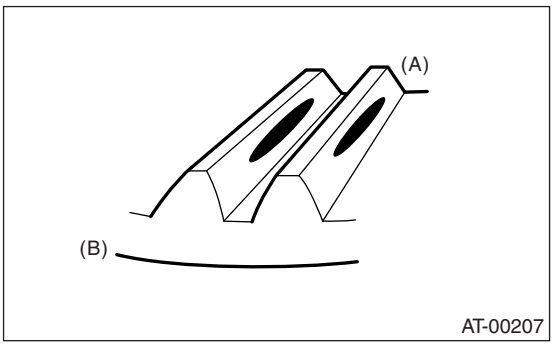

(A) Toe side
(B) Heel side

• Face contact
Checking item: Backlash is too large.
Contact pattern

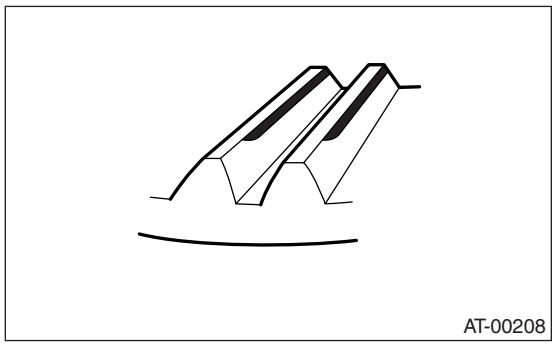

Corrective action: Reduce thickness of drive pinion shim in order to bring drive pinion close to driven gear.

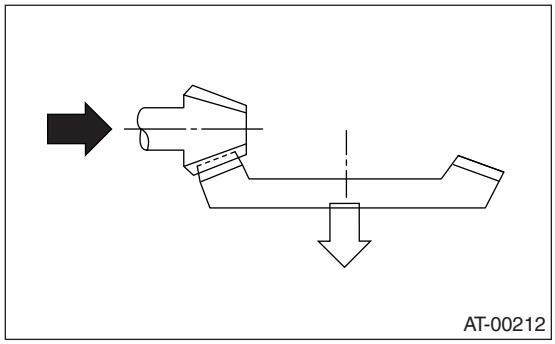

• Flank contact
Checking item: Backlash is too small.
Contact pattern

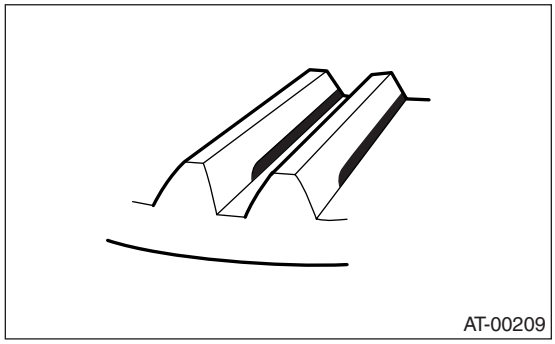

Corrective action: Increase thickness of drive pinion shim in order to move drive pinion away from driven gear.

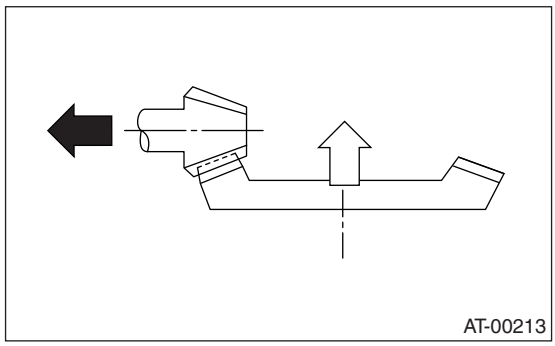

- Toe contact (Inside end contact)

Checking item: Contact areas is small.
Contact pattern

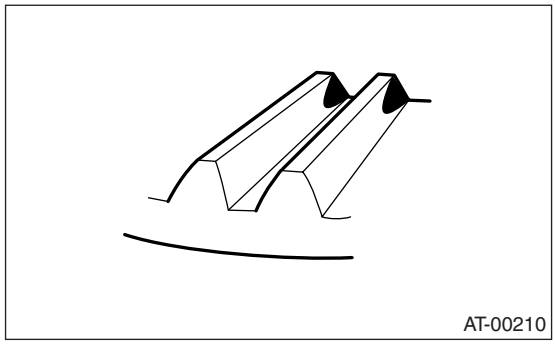

Corrective action: Increase thickness of drive pinion shim in order to bring drive pinion close to driven gear.

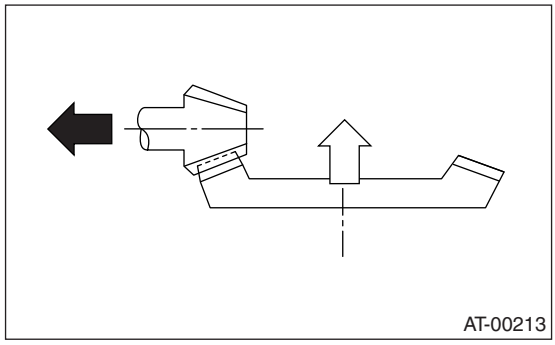

- Heel contact (Outside end contact)

Checking item: Contact areas is small.
Contact pattern

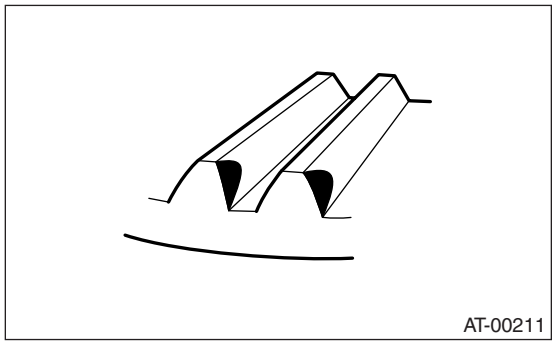

Corrective action: Reduce thickness of drive pinion shim in order to move drive pinion away from driven gear.

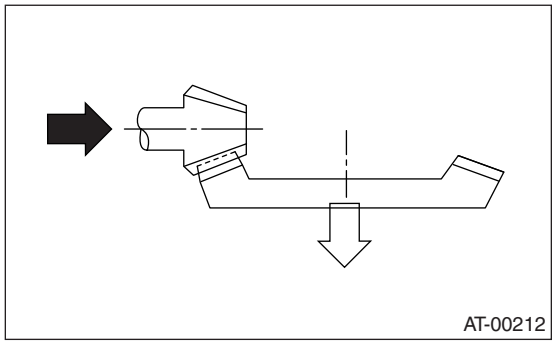

21.Speedometer Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
5) Remove the vehicle speed sensor. <Ref. to 5MT-51, REMOVAL, Vehicle Speed Sensor.>
6) Remove the outer snap ring and pull out speedometer driven gear. Next, remove the oil seal, speedometer shaft and washer.

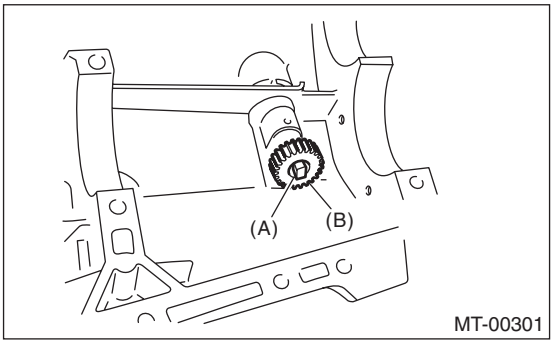

(A) Outer snap ring
(B) Speedometer driven gear

B: INSTALLATION

1) Install the washer and speedometer shaft, and press fit the oil seal with ST.

NOTE:
Use a new oil seal, if it has been removed.

ST 899824100 or 499827000PRESS

2) Install the vehicle speed sensor. <Ref. to 5MT-51, INSTALLATION, Vehicle Speed Sensor.>
3) Install the speedometer driven gear and snap ring.

NOTE:
Use a new snap ring, if it has been removed.

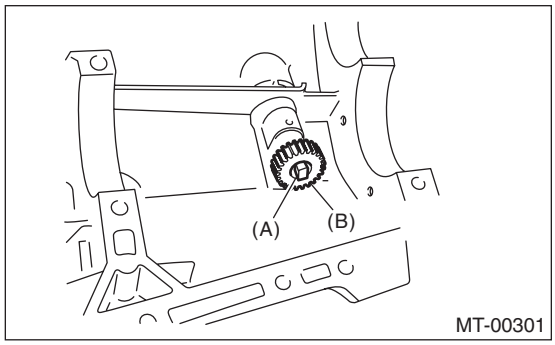

(A) Outer snap ring
(B) Speedometer driven gear

4) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
5) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
6) Install the back-up light switch and neutral position switch. <Ref. to 5MT-49, INSTALLATION, Switches and Harness.>
7) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

Check the speedometer gear, oil seal and speedometer shaft for damage. Replace if damaged.

22.Reverse Idler Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the transmission case. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
5) Remove the drive pinion shaft assembly. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
6) Remove the main shaft assembly.
Single-range model
<Ref. to 5MT-73, REMOVAL, Main Shaft Assembly for Single-Range.>
Dual-range model
<Ref. to 5MT-83, REMOVAL, Main Shaft Assembly for Dual-Range.>
7) Remove the differential assembly. <Ref. to 5MT-104, REMOVAL, Front Differential Assembly.>
8) Remove the shifter forks and rods. <Ref. to 5MT-114, REMOVAL, Shifter Fork and Rod.>
9) Pull out the straight pin, and remove the idler gear shaft, reverse idler gear and washer.

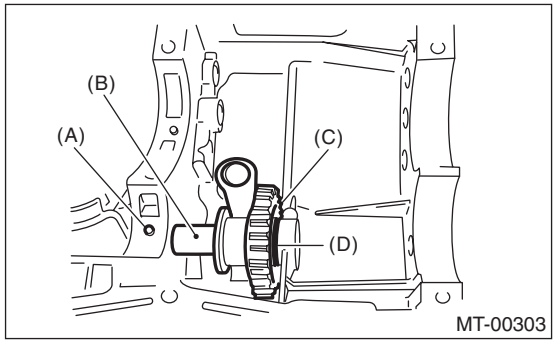

(A) Straight pin
(B) Idler gear shaft
(C) Idler gear
(D) Washer

10) Remove the reverse shifter lever.

B: INSTALLATION

1) Install the reverse shifter lever, reverse idler gear and reverse idler gear shaft, and secure with straight pin.

NOTE:
Be sure to install the reverse idler shaft from rear side.

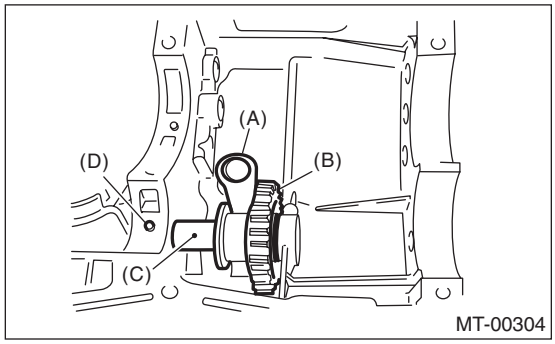

(A) Reverse shifter lever
(B) Reverse idler gear
(C) Reverse idler gear shaft
(D) Straight pin

2) Inspect and adjust the clearance between reverse idler gear and transmission case wall. <Ref. to 5MT-112, INSTALLATION, Reverse Idler Gear.> and <Ref. to 5MT-113, ADJUSTMENT, Reverse Idler Gear.>
3) Install the shifter forks and rods. <Ref. to 5MT-115, INSTALLATION, Shifter Fork and Rod.>
4) Install the differential assembly. <Ref. to 5MT-104, INSTALLATION, Front Differential Assembly.>
5) Install the main shaft assembly.
Single-range model
<Ref. to 5MT-73, INSTALLATION, Main Shaft Assembly for Single-Range.>
Dual-range model
<Ref. to 5MT-83, INSTALLATION, Main Shaft Assembly for Dual-Range.>
6) Install the drive pinion shaft assembly. <Ref. to 5MT-93, INSTALLATION, Drive Pinion Shaft Assembly.>
7) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
8) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
9) Install the back-up light switch and neutral position switch. <Ref. to 5MT-49, INSTALLATION, Switches and Harness.>
10) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1) Move the reverse shifter rod toward the reverse side. Inspect the clearance between reverse idler gear and transmission case wall.
If out of specification, select the appropriate reverse shifter lever and adjust.

Clearance A:
6.0 — 7.5 mm (0.236 — 0.295 in)

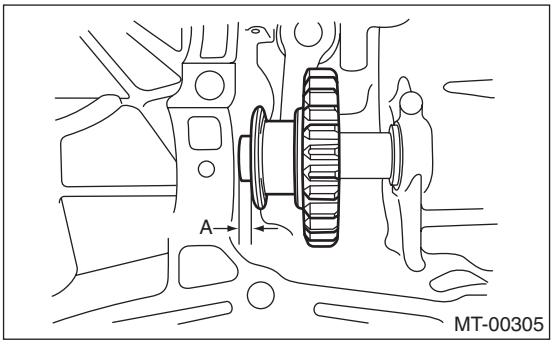

2) After installing a suitable reverse shifter lever, shift into neutral. Inspect the clearance between reverse idler gear and transmission case wall.
If out of specification, select the appropriate washer and adjust.

Clearance:
0 — 0.5 mm (0 — 0.020 in)

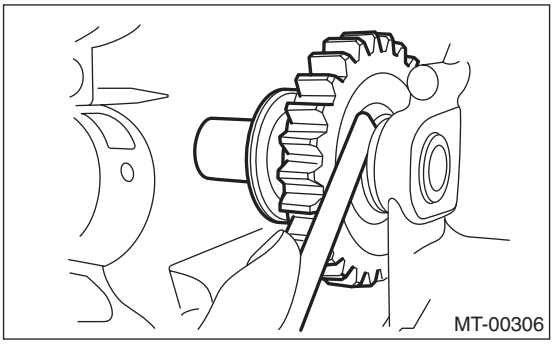

3) Check the reverse idler gear and shaft for damage. Replace if damaged.

D: ADJUSTMENT

1) Select the appropriate reverse shifter lever from the table below, and adjust until the gap between the reverse idler gear and transmission case wall is within specification.

Clearance A:
6.0 — 7.5 mm (0.236 — 0.295 in)

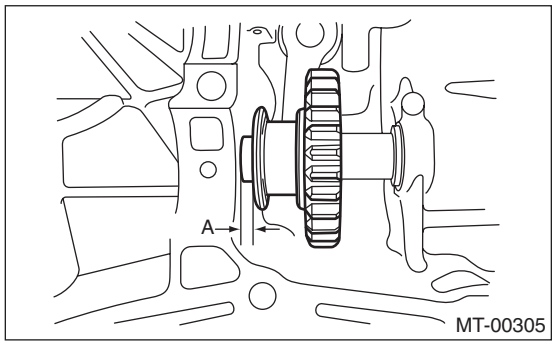

Reverse shifter lever		
Part No.	Mark	Remarks
32820AA070	7	Further from case wall
32820AA080	8	Standard
32820AA090	9	Closer to case wall

2) Select the appropriate washer from the table below, and adjust until the gap between the reverse idler gear and transmission case wall is within specification.

Clearance:
0 — 0.5 mm (0 — 0.020 in)

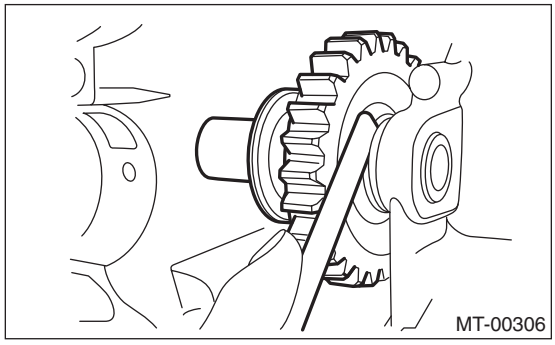

Washer	
Part No.	Thickness mm (in)
803020151	0.4 (0.016)
803020152	1.1 (0.043)
803020153	1.5 (0.059)
803020154	1.9 (0.075)
803020155	2.3 (0.091)

23.Shifter Fork and Rod

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the back-up light switch and neutral position switch. <Ref. to 5MT-48, REMOVAL, Switches and Harness.>
3) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
4) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
5) Remove the drive pinion shaft assembly. <Ref. to 5MT-93, REMOVAL, Drive Pinion Shaft Assembly.>
6) Remove the main shaft assembly.
Single-range model
<Ref. to 5MT-73, REMOVAL, Main Shaft Assembly for Single-Range.>
Dual-range model
<Ref. to 5MT-83, REMOVAL, Main Shaft Assembly for Dual-Range.>
7) Remove the differential assembly. <Ref. to 5MT-104, REMOVAL, Front Differential Assembly.>
8) Drive out the straight pin with ST, and 5th shifter fork.
ST 398791700 STRAIGHT PIN REMOVER

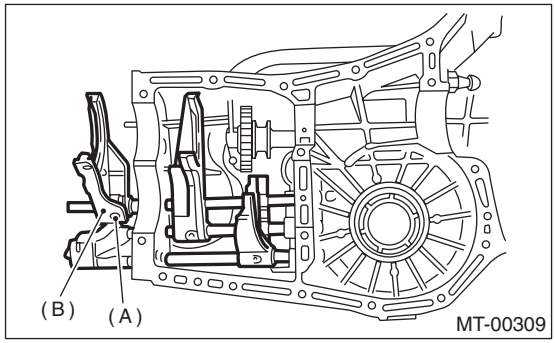

(A) Straight pin
(B) 5th shifter fork

9) Remove the plugs, springs and checking balls.
10) Drive out the straight pin, and pull out 3-4 fork rod and shifter fork.

NOTE:
When removing the rod, keep other rods in neutral. Also, when pulling out the straight pin, remove it toward the inside of case so that it does not hit against the case.

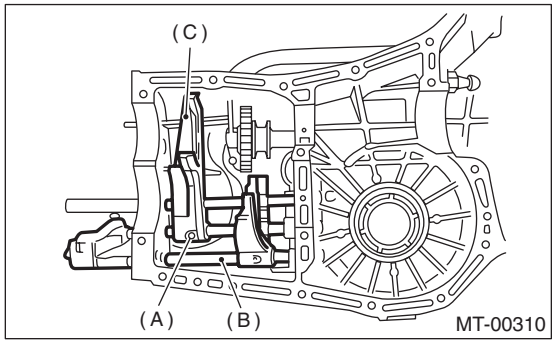

(A) Straight pin
(B) 3-4 fork rod
(C) Shifter fork

11) Drive out the straight pin, and pull out 1-2 fork rod and shifter fork.
12) Remove the outer snap ring, and pull out the reverse shifter rod arm from reverse fork rod. Then take out the ball, spring and interlock plunger from rod.
And then remove the rod.

NOTE:
When pulling out the reverse shifter rod arm, be careful not to let the ball pop out of arm.

13) Remove the reverse shifter lever.

B: INSTALLATION

1) Install the reverse arm fork spring, ball and interlock plunger to reverse fork rod arm. Insert the reverse fork rod into hole in reverse fork rod arm, and hold it with outer snap ring using ST.

NOTE:
Apply grease to plunger to prevent it from falling.

ST 399411700 ACCENT BALL INSTALLER

2) Position the ball, spring and new gasket in reverse shifter rod hole, on left side transmission case, and tighten the checking ball plug.

3) Install the 1-2 fork rod into 1-2 shifter fork via the hole on the rear of transmission case.

4) Align the holes in rod and fork, and new drive straight pin into these holes using ST.

NOTE:
- Set other rods to neutral.
- Make sure the interlock plunger is on the 3-4 fork rod side.

ST 398791700 STRAIGHT PIN REMOVER

5) Install the interlock plunger onto 3-4 fork rod.

NOTE:
Apply a coat of grease to plunger to prevent it from falling.

6) Install the 3-4 fork rod into 3-4 shifter fork via the hole on the rear of transmission case.

7) Align the holes in rod and fork, and new drive straight pin into these holes.

NOTE:
- Set the reverse fork rod to neutral.
- Make sure the interlock plunger (installing before) is on the reverse fork rod side.

ST 398791700 STRAIGHT PIN REMOVER

8) Install the 5th shifter fork onto the rear of reverse fork rod. Align holes in the two parts and new drive straight pin into place.

ST 398791700 STRAIGHT PIN REMOVER

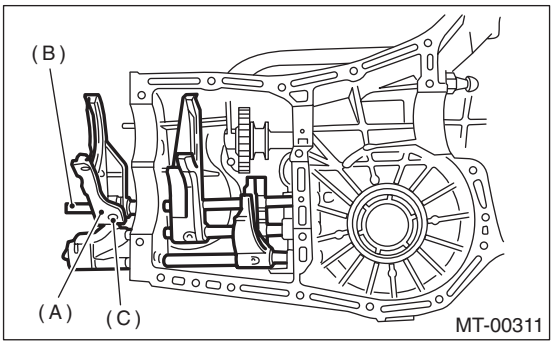

(A) 5th shifter fork
(B) Reverse fork rod
(C) Straight pin

9) Position the balls, checking ball springs and new gaskets into 3-4 and 1-2 rod holes, and install plugs.

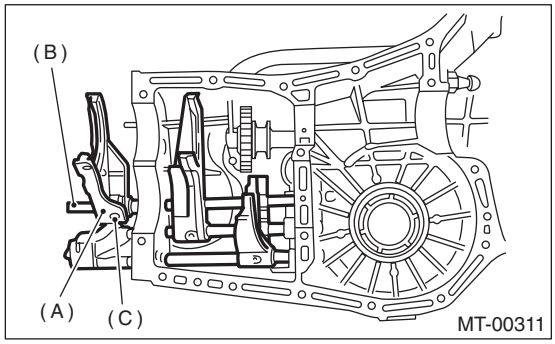

(A) 5th shifter fork
(B) Reverse fork rod
(C) Straight pin

10) Install the differential assembly. <Ref. to 5MT-104, INSTALLATION, Front Differential Assembly.>

11) Install the main shaft assembly.
Single-range model
<Ref. to 5MT-73, INSTALLATION, Main Shaft Assembly for Single-Range.>
Dual-range model
<Ref. to 5MT-83, INSTALLATION, Main Shaft Assembly for Dual-Range.>

12) Install the drive pinion shaft assembly. <Ref. to 5MT-93, INSTALLATION, Drive Pinion Shaft Assembly.>

13) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>

14) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>

15) Install the back-up light switch and neutral position switch. <Ref. to 5MT-49, INSTALLATION, Switches and Harness.>

16) Install the manual transmission assembly to vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1) Check the shift shaft and shift rod for damage. Replace if damaged.
2) Gearshift mechanism:
Repair or replace the gearshift mechanism if excessively worn, bent, or defective in any way.
3) Inspect the clearance between 1st, 2nd driven gear and reverse driven gear. If any clearance is not within specifications, replace the shifter fork as required.

Clearance (a) and (b):
9.5 mm (0.374 in)

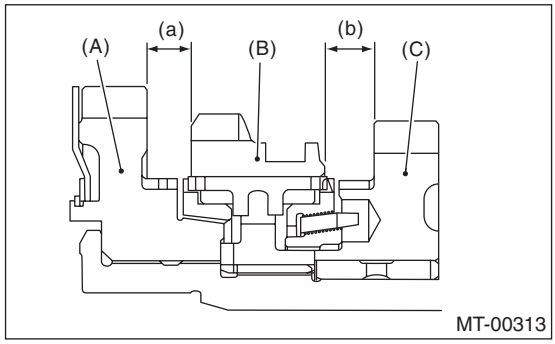

(A) 1st driven gear
(B) Reverse driven gear
(C) 2nd driven gear

1st-2nd shifter fork		
Part No.	Mark	Remarks
32804AA060	1	Approach to 1st gear by 0.2 mm (0.008 in).
32804AA070	—	Standard
32804AA080	3	Become distant from 2nd gear by 0.2 mm (0.008 in).

4) Inspect the clearance between 3rd, 4th drive gear and coupling sleeve. If any clearance is not within specifications, replace the shifter fork as required.

Clearance (a) and (b):
7.3 mm (0.287 in)

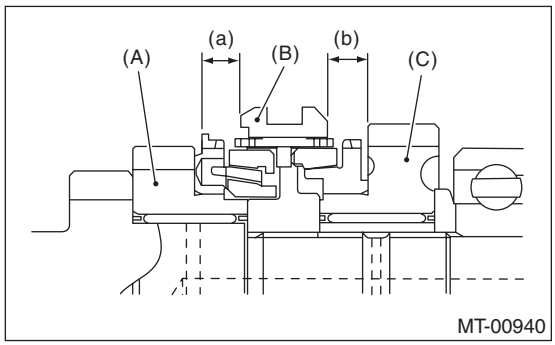

(A) 3rd drive gear
(B) Coupling sleeve
(C) 4th drive gear

3rd-4th shifter fork		
Part No.	Mark	Remarks
32810AA061	1	Approach to 4th gear by 0.2 mm (0.008 in).
32810AA071	—	Standard
32810AA101	3	Become distant from 3rd gear by 0.2 mm (0.008 in).

5) Inspect the clearance between 5th drive gear and coupling sleeve. If any clearance is not within specifications, replace the shifter fork as required.

Clearance (a):
9.3 mm (0.366 in)

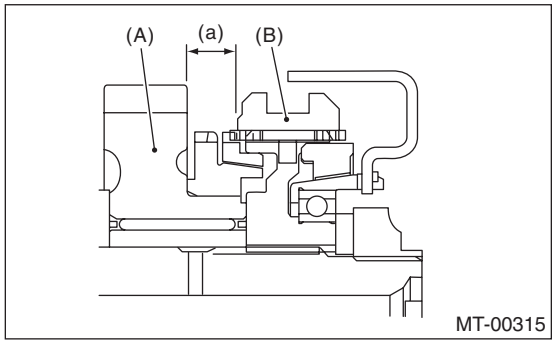

(A) 5th drive gear
(B) Coupling sleeve

5th shifter fork (Non-turbo)		
Part No.	Mark	Remarks
32812AA201	4	Approach to 5th gear by 0.2 mm (0.008 in).
32812AA211	5	Standard
32812AA221	6	Become distant from 5th gear by 0.2 mm (0.008 in).

5th shifter fork (Turbo)		
Part No.	Mark	Remarks
32812AA231	7	Approach to 5th gear by 0.2 mm (0.008 in).
32812AA241	—	Standard
32812AA251	9	Become distant from 5th gear by 0.2 mm (0.008 in).

6) Inspect the rod end clearances (A) and (B). If any clearance is not within specifications, replace the rod or fork as required.

Clearance (A):
1st-2nd to 3rd-4th:
0.4 — 1.4 mm (0.016 — 0.055 in)

Clearance (B):
3rd-4th to 5th:
0.5 — 1.3 mm (0.020 — 0.051 in)

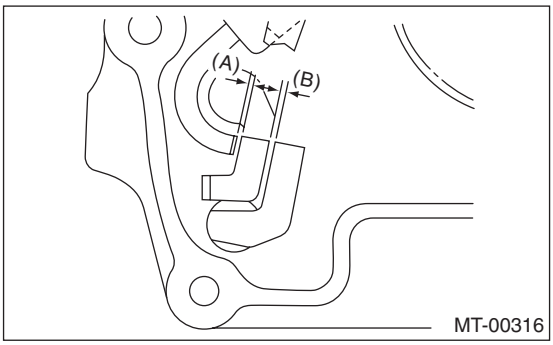

24.Counter Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the transfer case with extension case assembly. <Ref. to 5MT-53, REMOVAL, Transfer Case and Extension Case Assembly.>
3) Remove the transmission case. <Ref. to 5MT-66, REMOVAL, Transmission Case.>
4) Move the counter gear shaft until it touches transmission case, and remove the snap ring with a suitable tool.

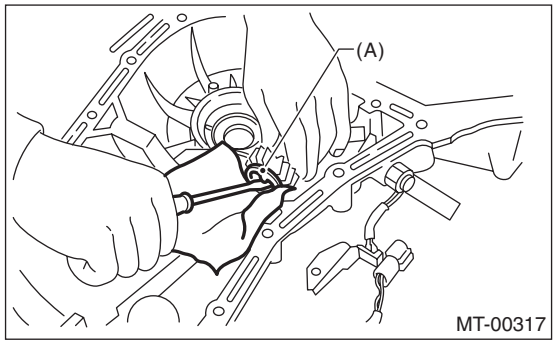

(A) Snap ring

5) Slide the washer at rear of high-low counter shaft, and remove the straight pin from counter shaft.

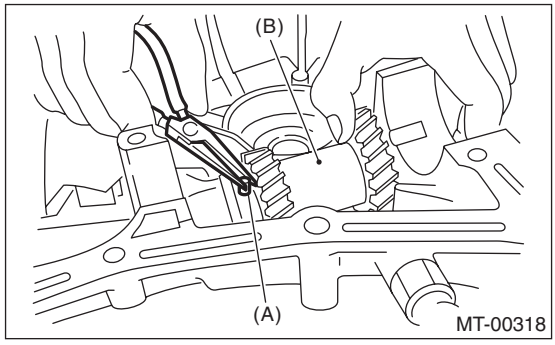

(A) Straight pin
(B) Counter gear

6) Remove the counter shaft from transmission case, taking care not to drop the counter gear and two washers.

NOTE:
• Be careful not to damage the O-ring.
• Be careful not to drop the straight pin on front side.
• Be careful not to drop the two needle bearings and collar contained in counter gear.

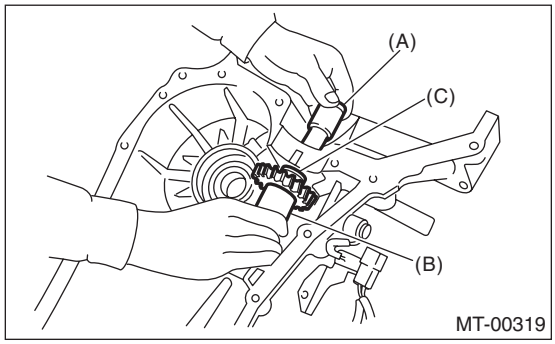

(A) Counter shaft
(B) Counter gear
(C) Washers

B: INSTALLATION

1) Install the O-ring and straight pin onto counter gear shaft.
2) Install the following parts in main case (Right-side), and push the shaft perfectly into case.
• Counter gear shaft
• Two counter gear washers
• Two needle bearings
• Counter gear collar
• Counter gear
• Straight pin
• Snap ring
3) Install the transmission case. <Ref. to 5MT-69, INSTALLATION, Transmission Case.>
4) Install the transfer case with extension case assembly. <Ref. to 5MT-53, INSTALLATION, Transfer Case and Extension Case Assembly.>
5) Install the manual transmission assembly on vehicle. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

NOTE:
• Make sure that the cut-out end surface of counter gear shaft does not protrude above the end surface of the case.
• Position the cut-out portion of counter gear shaft.

C: INSPECTION

1) After installing the snap ring, measure the clearance between snap ring and counter washer.

Clearance:
0.05 — 0.35 mm (0.0020 — 0.0138 in)

2) If the clearance is out of measured value, select a snap ring and install to put clearance within measured value. <Ref. to 5MT-119, ADJUSTMENT, Counter Gear.>

D: ADJUSTMENT

Selection of snap ring:
If the measurement is not within specification, select suitable snap ring.

Snap ring	
Part No.	Thickness mm (in)
031319000	1.50 (0.0591)
805019010	1.72 (0.0677)

25.General Diagnostic

A: INSPECTION

1. MANUAL TRANSMISSION

Symptom	Possible cause	Remedy
1. Gears are difficult to intermesh. NOTE: The cause for difficulty in shifting gears can be classified into two kinds: one is malfunction of the gear shift system and the other is malfunction of the transmission. However, if the operation is heavy and engagement of the gears is difficult, defective clutch disengagement may also be responsible. Check whether the clutch is correctly functioning, before checking the gear shift system and transmission.	(a) Worn, damaged or burred chamfer of internal spline of sleeve and reverse driven gear	Replace.
	(b) Worn, damaged or burred chamfer of spline of gears	Replace.
	(c) Worn or scratched bushings	Replace.
	(d) Incorrect contact between synchronizer ring and gear cone or wear	Correct or replace.
2. Gear slips out. • Gear slips out when coasting on rough road. • Gear slips out during acceleration.	(a) Defective pitching stopper adjustment	Adjust.
	(b) Loose engine mounting bolts	Tighten or replace.
	(c) Worn fork shifter, broken shifter fork rail spring	Replace.
	(d) Worn or damaged ball bearing	Replace.
	(e) Excessive clearance between splines of synchronizer hub and synchronizer sleeve	Replace.
	(f) Worn tooth step of synchronizer hub (responsible for slip-out of 3rd gear)	Replace.
	(g) Worn 1st driven gear and driven shaft	Replace.
	(h) Worn 2nd driven gear and bushing	Replace.
	(i) Worn 3rd drive gear and needle bearing	Replace.
	(j) Worn 4th drive gear and needle bearing	Replace.
	(k) Worn reverse idler gear and bushing	Replace.
3. Unusual noise comes from transmission. NOTE: If an unusual noise is heard when the vehicle is parked with its engine idling and if the noise ceases when the clutch is disengaged, it may be considered that the noise comes from the transmission.	(a) Insufficient or improper lubrication	Lubricate or replace with specified oil.
	(b) Worn or damaged gears and bearings NOTE: If the trouble is only wear of the tooth surfaces, merely a high roaring noise will occur at high speeds, but if any part is broken, rhythmical knocking sound will be heard even at low speeds.	Replace.

2. DIFFERENTIAL

Symptom	Possible cause	Remedy
1. Broken differential (case, gear, bearing, etc.) NOTE: Abnormal noise will develop and finally it will become impossible to continue to run due to broken pieces obstructing the gear revolution.	(a) Insufficient or improper oil	Disassemble the differential and replace broken components and at the same time check other components for any trouble, and replace if necessary.
	(b) Use of vehicle under severe conditions such as excessive load and improper use of clutch	Readjust the bearing preload and backlash and face contact of gears.
	(c) Improper adjustment of taper roller bearing	Adjust.
	(d) Improper adjustment of drive pinion and hypoid driven gear	Adjust.
	(e) Excessive backlash due to worn differential side gear, washer or differential pinion vehicle under severe operating conditions.	Add recommended oil to specified level. Do not use the vehicle under severe operating conditions.
	(f) Loose hypoid driven gear clamping bolts	Tighten.
2. Differential and hypoid gear noises Troubles of the differential and hypoid gear always appear as noise problems. Therefore noise is the first indication of the trouble. However noises from the engine, muffler, tire, exhaust gas, bearing, body, etc. are easily mistaken for the differential noise. Pay special attention to the hypoid gear noise because it is easily confused with other gear noises. There are the following four kinds of noises. • Gear noise when driving: If noise increases as vehicle speed increases it may be due to insufficient gear oil, incorrect gear engagement, damaged gears, etc. • Gear noise when coasting: Damaged gears due to maladjusted bearings and incorrect shim adjustment • Bearing noise when driving or when coasting: Cracked, broken or damaged bearings • Noise which mainly occurs when turning: Unusual noise from differential side gear, differential pinion, differential pinion shaft, etc.	(a) Insufficient oil	Lubricate.
	(b) Improper adjustment of hypoid driven gear and drive pinion	Check tooth contact.
	(c) Worn teeth of hypoid driven gear and drive pinion	Replace as a set. Readjust the bearing preload.
	(d) Loose roller bearing	Readjust the hypoid driven gear to drive pinion backlash and check tooth contact.
	(e) Distorted hypoid driven gear or differential case	Replace.
	(f) Worn washer and differential pinion shaft	Replace.

MANUAL TRANSMISSION AND DIFFERENTIAL

6MT

		Page
1.	General Description	2
2.	Transmission Gear Oil	32
3.	Oil Seal	33
4.	Vehicle Speed Sensor	34
5.	Transmission Mounting System	35
6.	Manual Transmission Assembly	37
7.	Preparation for Overhaul	42
8.	Air Breather Hose	43
9.	Oil Pipe	44
10.	Back-up Light Switch	45
11.	Neutral Position Switch	47
12.	Extension Case	49
13.	Reverse Checking System	55
14.	Transfer Drive Gear	58
15.	Transfer Driven Gear	60
16.	Center Differential	62
17.	Oil Pump	63
18.	Transmission Case	67
19.	Main Shaft Assembly	72
20.	Driven Gear Assembly	86
21.	Reverse Idler Gear Assembly	94
22.	Drive Pinion Shaft Assembly	99
23.	Front Differential Assembly	105
24.	Speedometer Gear	113
25.	Shifter Fork and Rod	115
26.	Clutch Housing	128
27.	General Diagnostic Table	130

1. General Description

A: SPECIFICATION

1. MANUAL TRANSMISSION AND FRONT DIFFERENTIAL

Item			STD	OP
Type			6-forward speeds and 1-reverse	
Transmission gear ratio		1st	3.636	
		2nd	2.375	
		3rd	1.761	
		4th	1.346	
		5th	0.971 [1.062]	
		6th	0.756 [0.842]	
		Reverse	3.545	
Front reduction gear	Final	Type of gear	Hypoid	
		Gear ratio	3.900	
Rear reduction gear	Transfer	Type of gear	Helical	
		Gear ratio	1.100 [1.000]	
	Final	Type of gear	Hypoid	
		Gear ratio	3.545 [3.900]	
Front differential	Type and number of gear		Straight bevel gear (Bevel pinion: 2, Bevel gear: 2)	SURETRAC®
Center differential	Type and number of gear		Straight bevel gear (Bevel pinion: 2, Bevel gear: 2 and viscous coupling)	
Transmission gear oil			GL-5	
Transmission gear oil capacity			4.1 ℓ (4.3 US qt, 3.6 Imp qt)	

[ ]: Australia model

2. TRANSMISSION GEAR OIL

Recommended oil

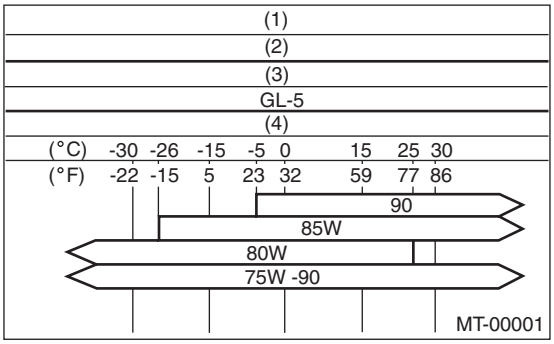

(1) Item
(2) Transmission gear oil
(3) API classification
(4) SAE viscosity No. and applicable temperature

B: COMPONENT

1. CLUTCH HOUSING

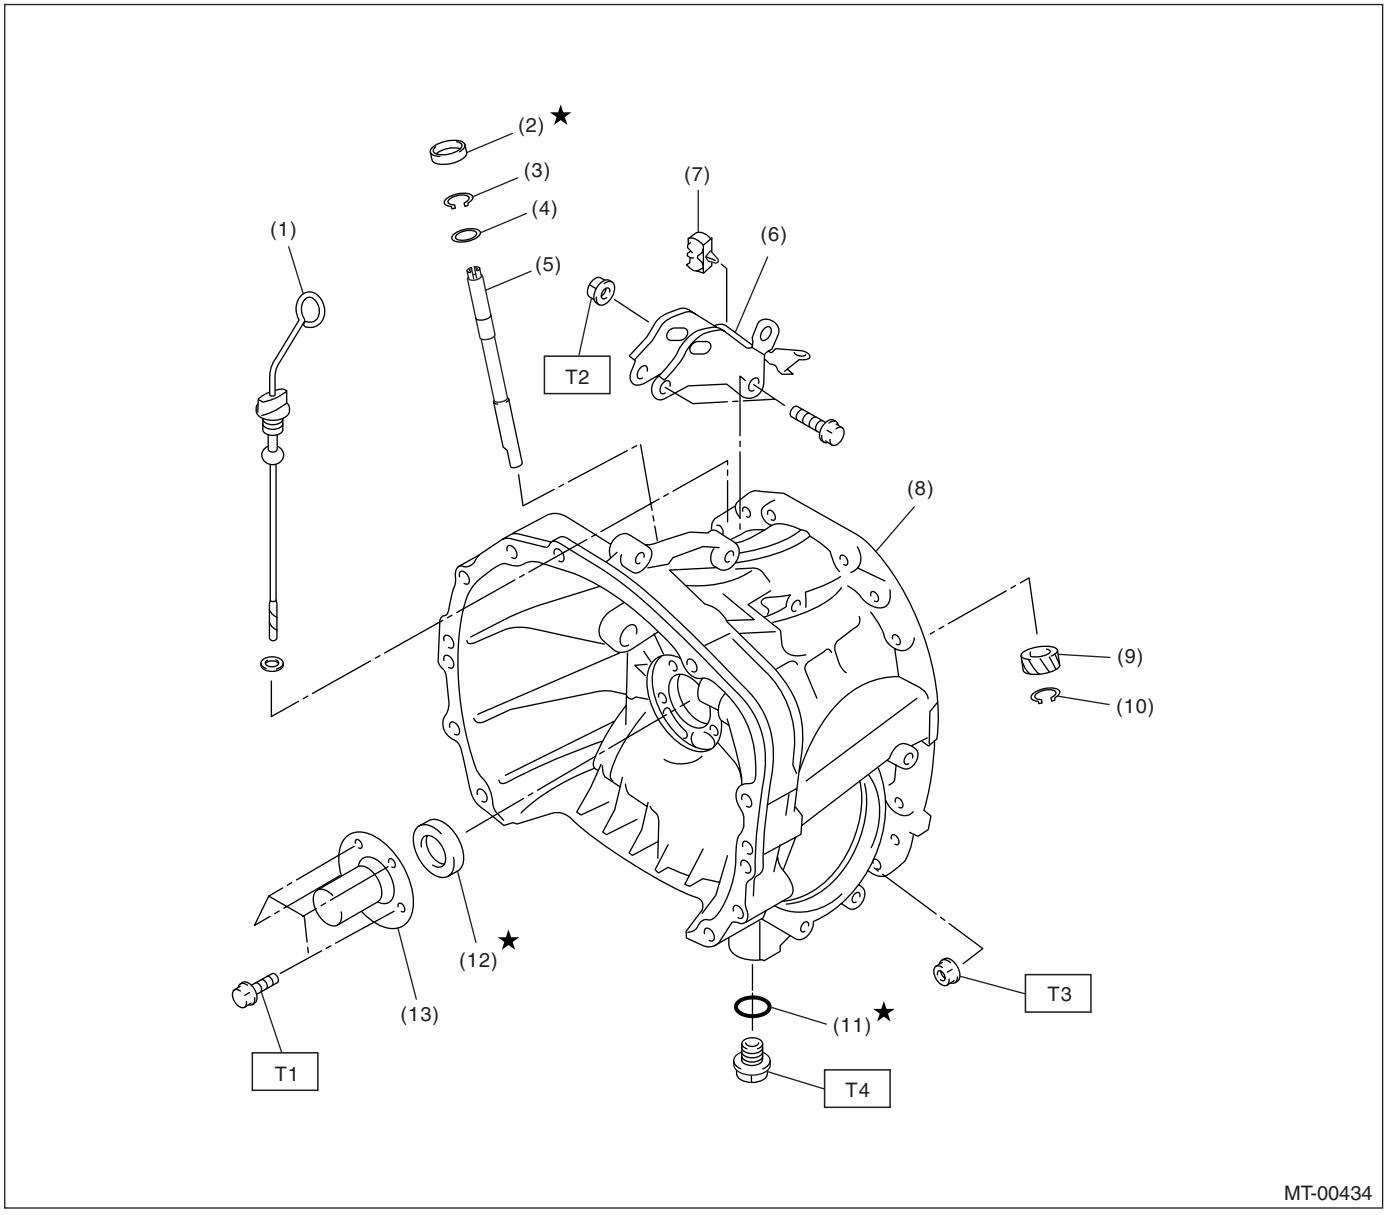

(1)	Oil level gauge	(8)	Clutch housing
(2)	Oil seal	(9)	Speedometer driven gear
(3)	Snap ring	(10)	Snap ring
(4)	Washer	(11)	Gasket
(5)	Speedometer gear shaft	(12)	Oil seal
(6)	Pitching stopper bracket	(13)	Clutch release bearing guide
(7)	Clip		

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 41 (4.2, 30.2)
T3: 50 (5.1, 36.9)
T4: 70 (7.1, 51.6)

2. ADAPTER PLATE

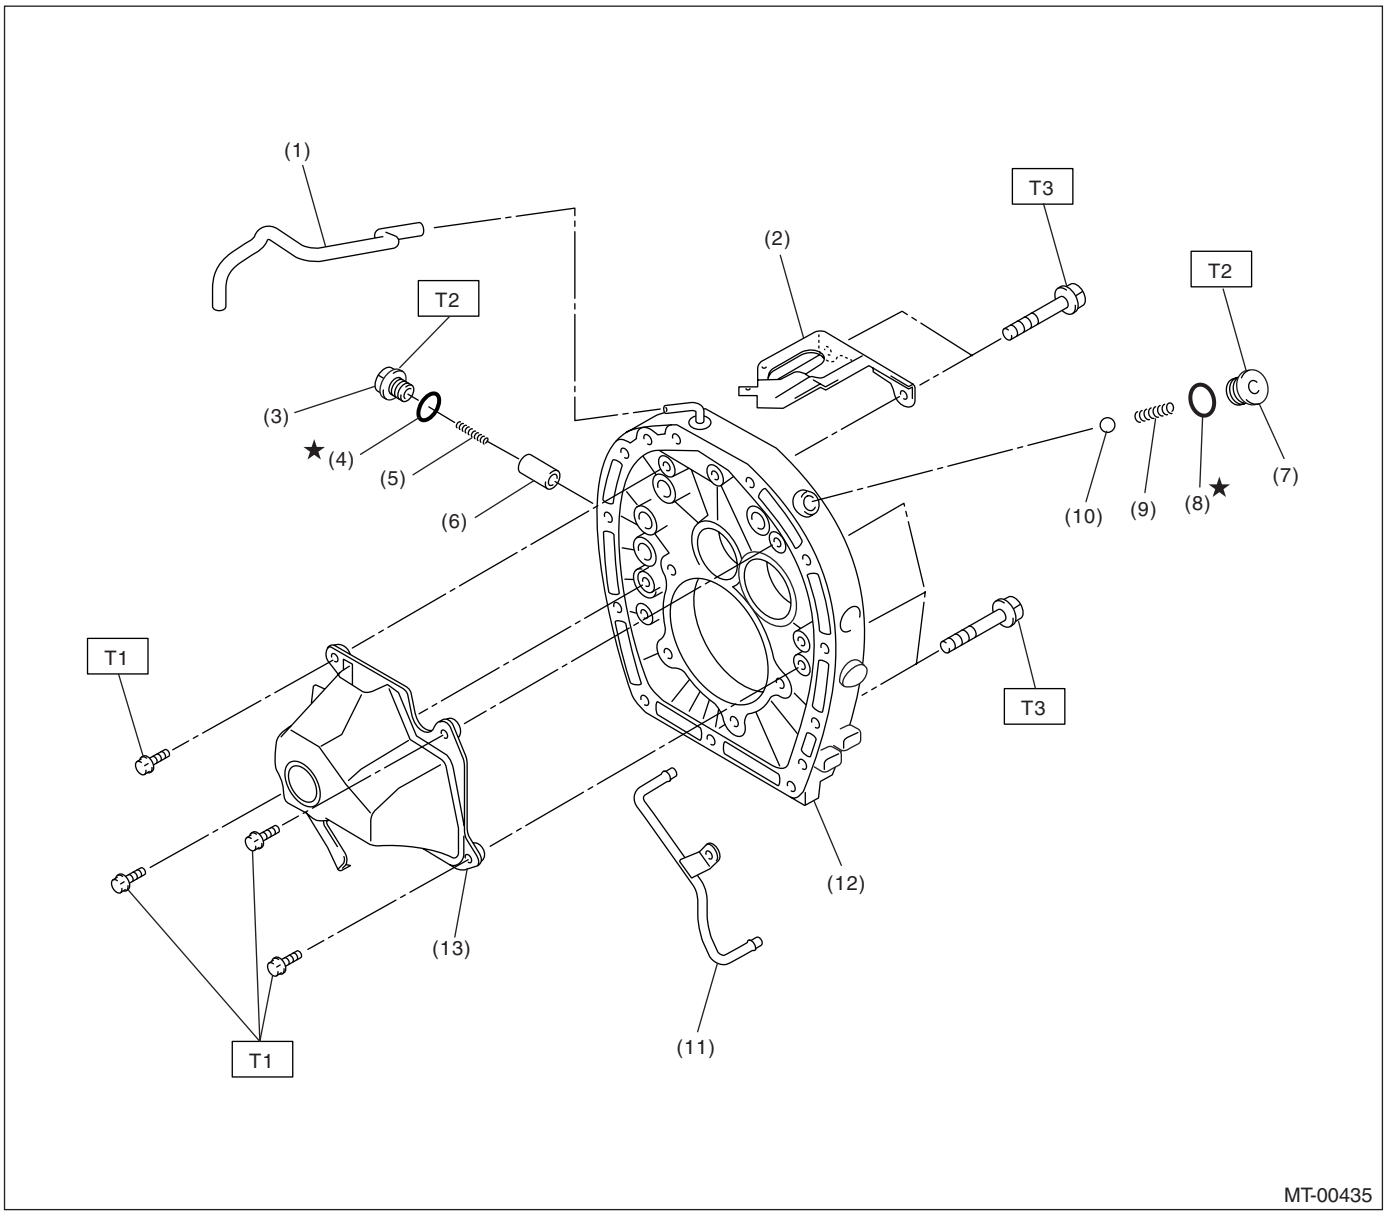

(1)	Breather hose	(7)	Plug	(13)	Oil chamber
(2)	Transmission harness stay	(8)	Gasket		
(3)	Plug	(9)	Spring	***Tightening torque: N·m (kgf-m, ft-lb)***	
(4)	Gasket	(10)	Ball	***T1:***	***6.4 (0.65, 4.7)***
(5)	Spring	(11)	Lubrication pipe	***T2:***	***37 (3.8, 27.3)***
(6)	Plunger	(12)	Adapter plate	***T3:***	***50 (5.1, 36.9)***

3. TRANSMISSION CASE

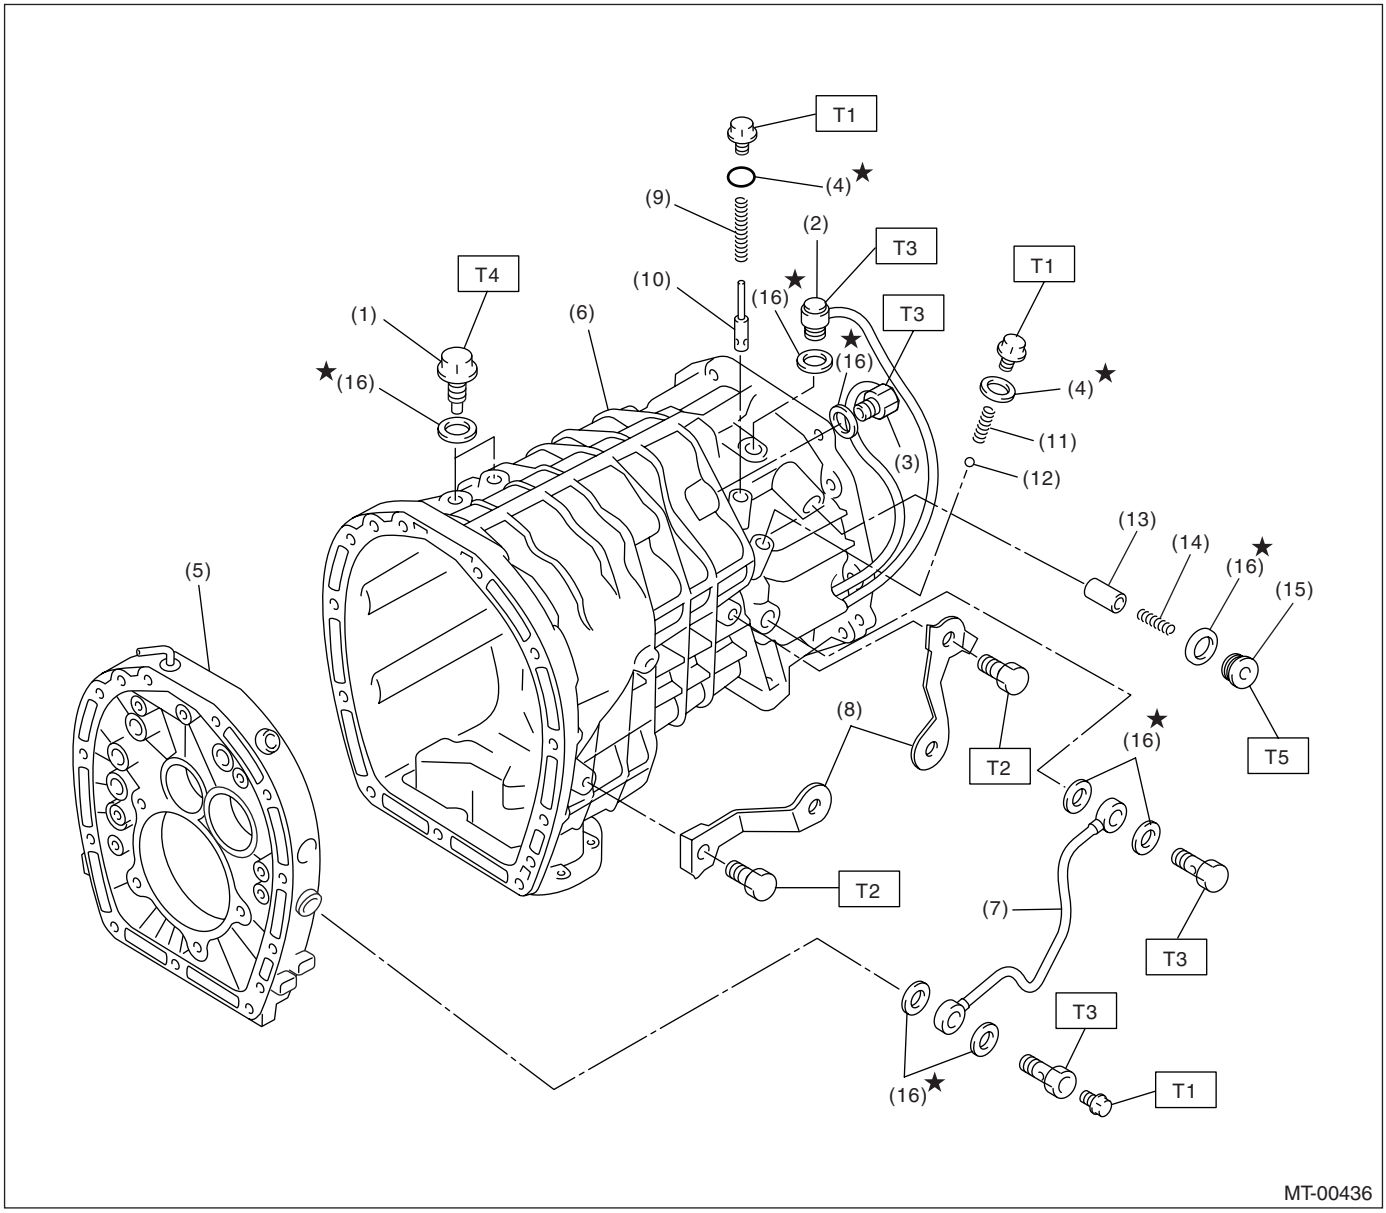

(1) Pilot bolt
(2) Neutral switch
(3) Back-up light switch
(4) O-ring
(5) Adapter plate
(6) Transmission case
(7) Oil pipe
(8) Harness bracket
(9) Return spring
(10) Pressure relief valve
(11) Return spring
(12) Ball
(13) Plunger
(14) Spring
(15) Plug
(16) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 13 (1.3, 9.6)
T2: 16 (1.6, 11.8)
T3: 32 (3.3, 23.6)
T4: 34 (3.5, 25.1)
T5: 41 (4.2, 30.2)

4. OIL PAN AND OIL PUMP

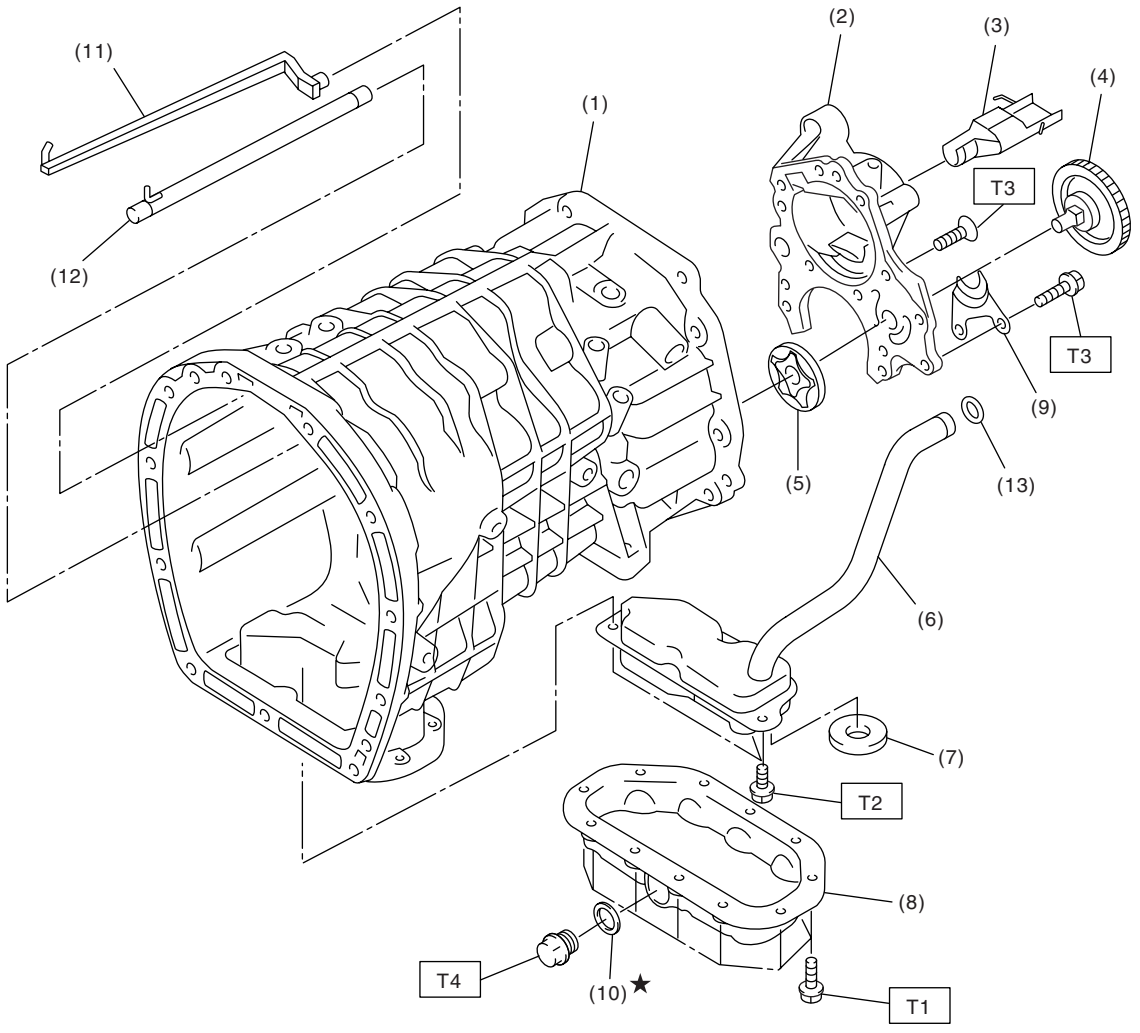

(1)	Main case	(8)	Oil pan
(2)	Oil pump cover	(9)	Plate
(3)	Oil guide	(10)	Gasket
(4)	Oil pump driven gear ASSY	(11)	Oil guide
(5)	Oil pump rotor ASSY	(12)	Oil pipe
(6)	Strainer ASSY	(13)	O-ring
(7)	Magnet		

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 10 (1.0, 7.4)
T3: 25 (2.5, 18.1)
T4: 44 (4.5, 32.5)

5. EXTENSION CASE AND CENTER DIFFERENTIAL

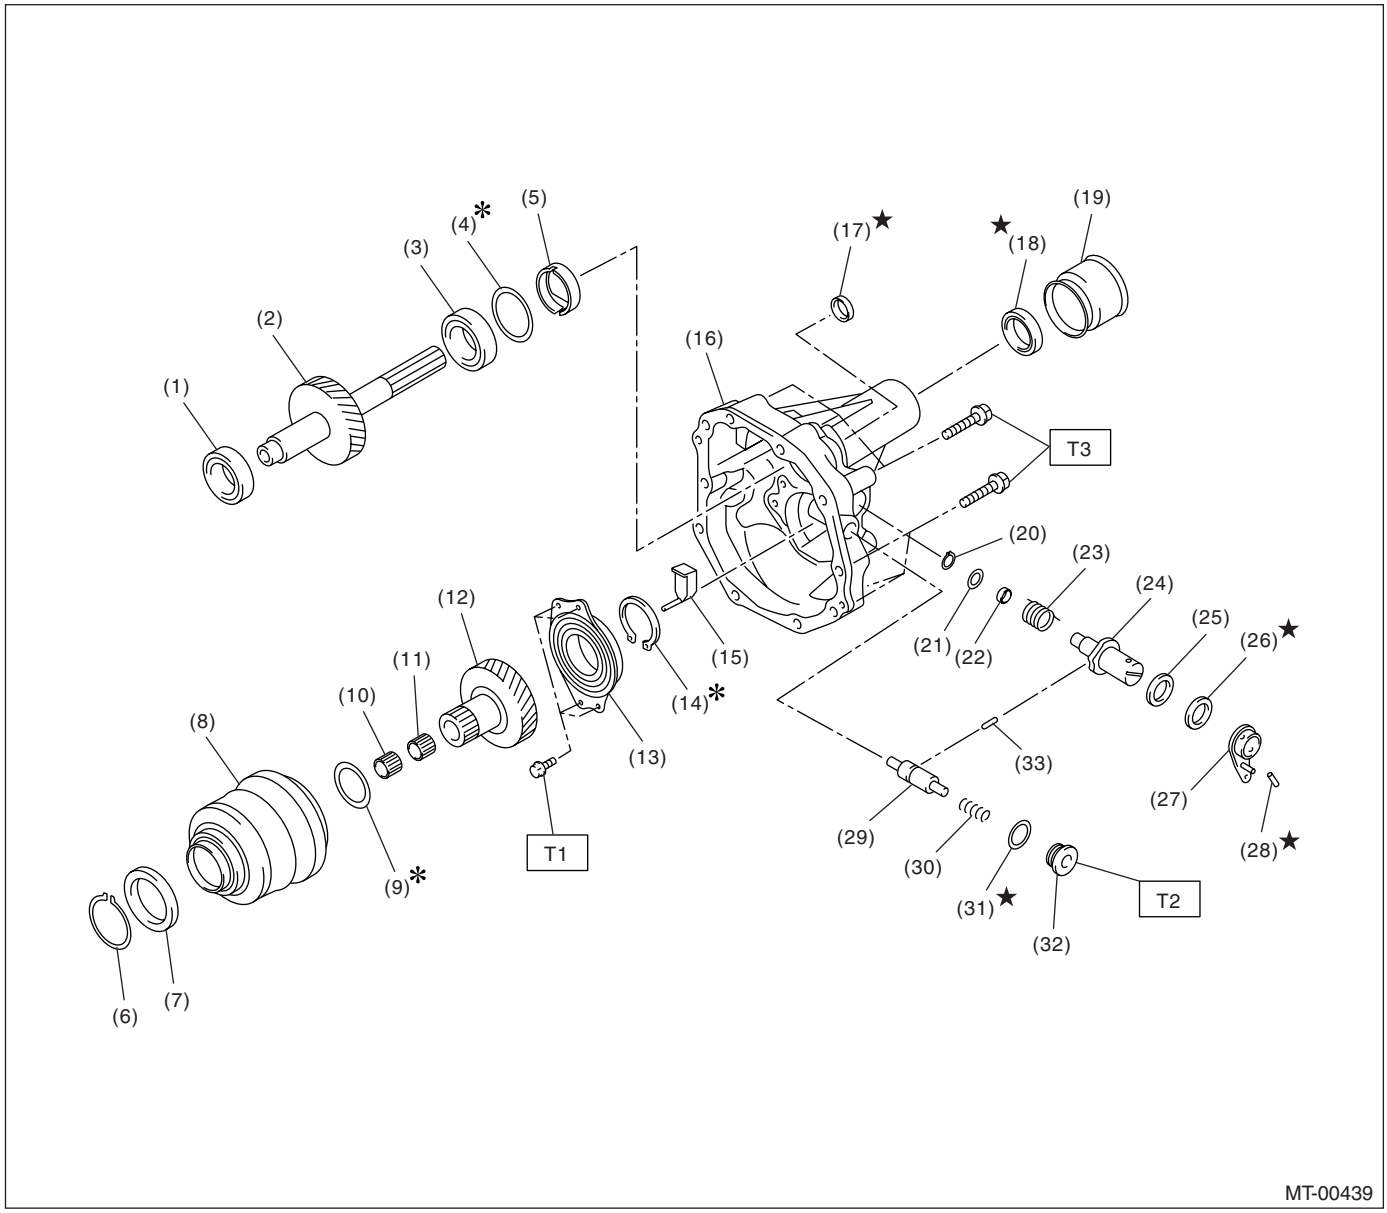

(1) Taper roller bearing
(2) Transfer driven gear
(3) Taper roller bearing
(4) Shim
(5) Oil plate
(6) Snap ring
(7) Oil pump drive gear
(8) Center differential
(9) Shim
(10) Needle bearing
(11) Needle bearing
(12) Transfer drive gear
(13) Ball bearing (with flange)
(14) Snap ring
(15) Extension guide
(16) Extension case
(17) Oil seal
(18) Oil seal
(19) Dust cover
(20) Snap ring
(21) Washer
(22) Bush
(23) Spring
(24) Reverse check shaft
(25) Ball bearing
(26) Oil seal
(27) Reverse check lever COMPL
(28) Straight pin
(29) Reverse check plug
(30) Spring
(31) Gasket
(32) Plug
(33) Plunger

Tightening torque: N·m (kgf-m, ft-lb)
T1: 25 (2.5, 18.1)
T2: 41 (4.2, 30.2)
T3: 48 (4.9, 35.4)

6. SHIFTER FORK AND FORK ROD

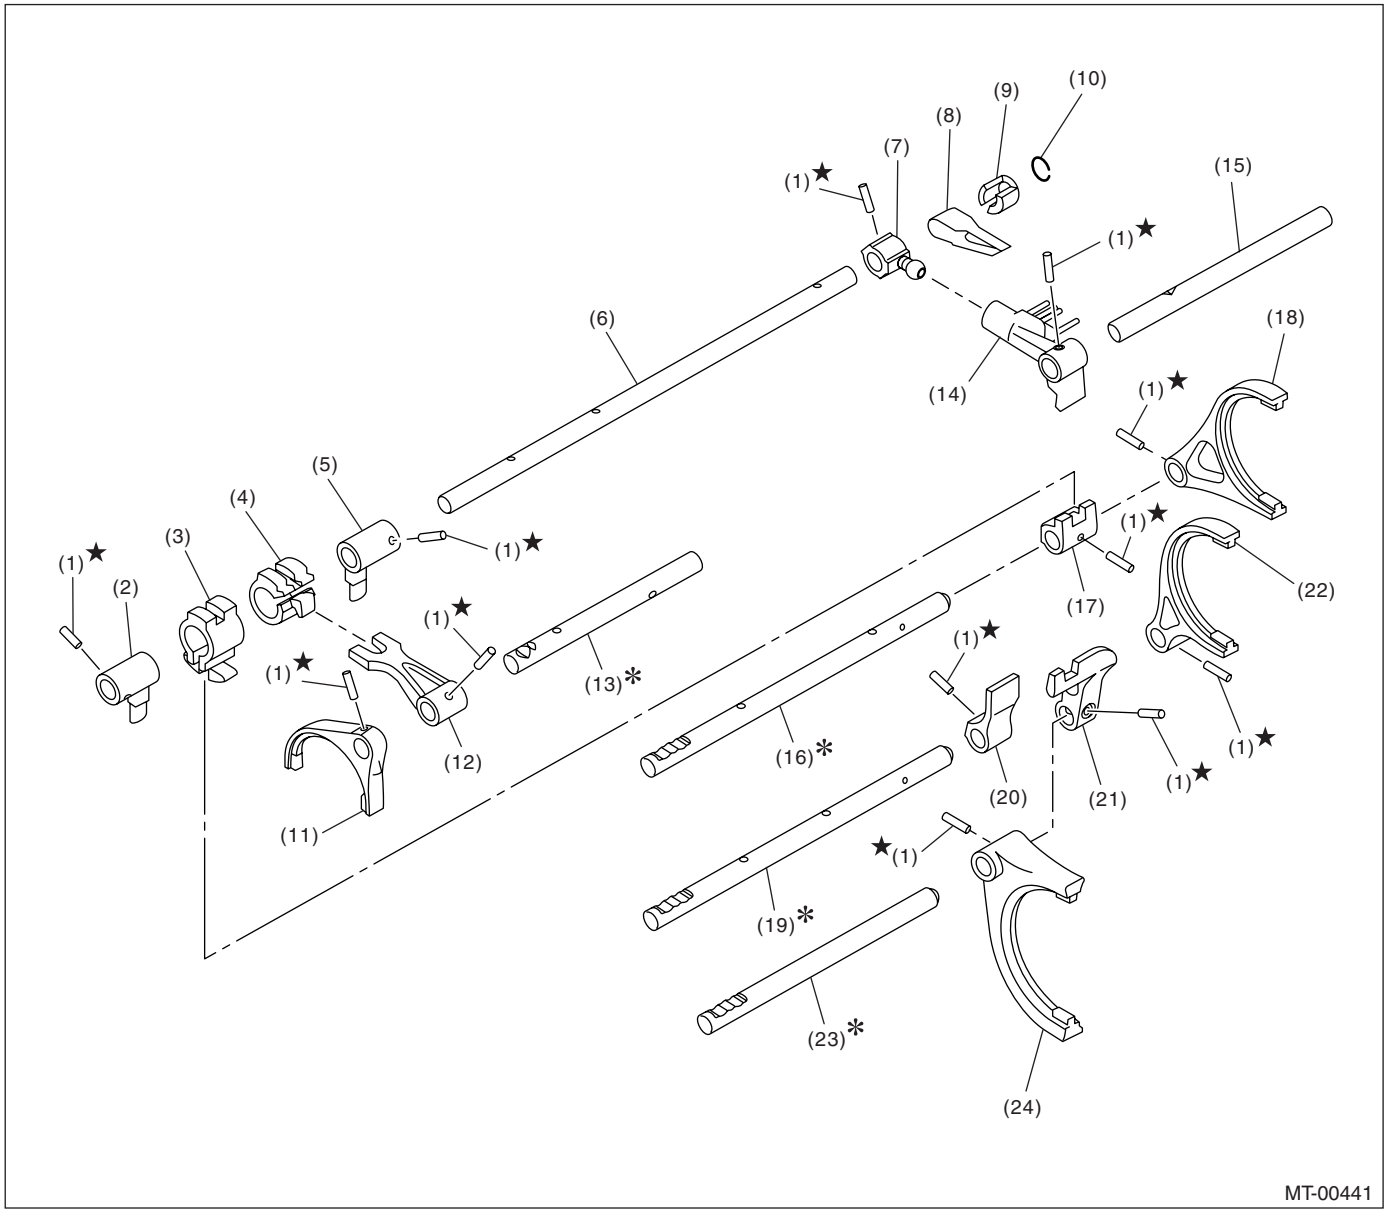

(1)	Spring pin	(9)	Support	(17)	5th-6th shifter arm
(2)	Interlock arm	(10)	Snap ring	(18)	5th-6th fork COMPL
(3)	Interlock block	(11)	Reverse fork COMPL	(19)	3rd-4th fork rod
(4)	Reverse interlock block	(12)	Reverse shifter arm	(20)	3rd-4th shifter arm
(5)	Interlock arm	(13)	Reverse fork rod	(21)	1st-2nd shifter arm
(6)	Striking rod	(14)	Selector arm COMPL	(22)	3rd-4th fork COMPL
(7)	Selector arm No.2	(15)	Shifter arm shaft	(23)	1st-2nd fork rod
(8)	Neutral set spring	(16)	5th-6th fork rod	(24)	1st-2nd fork COMPL

7. MAIN SHAFT ASSY

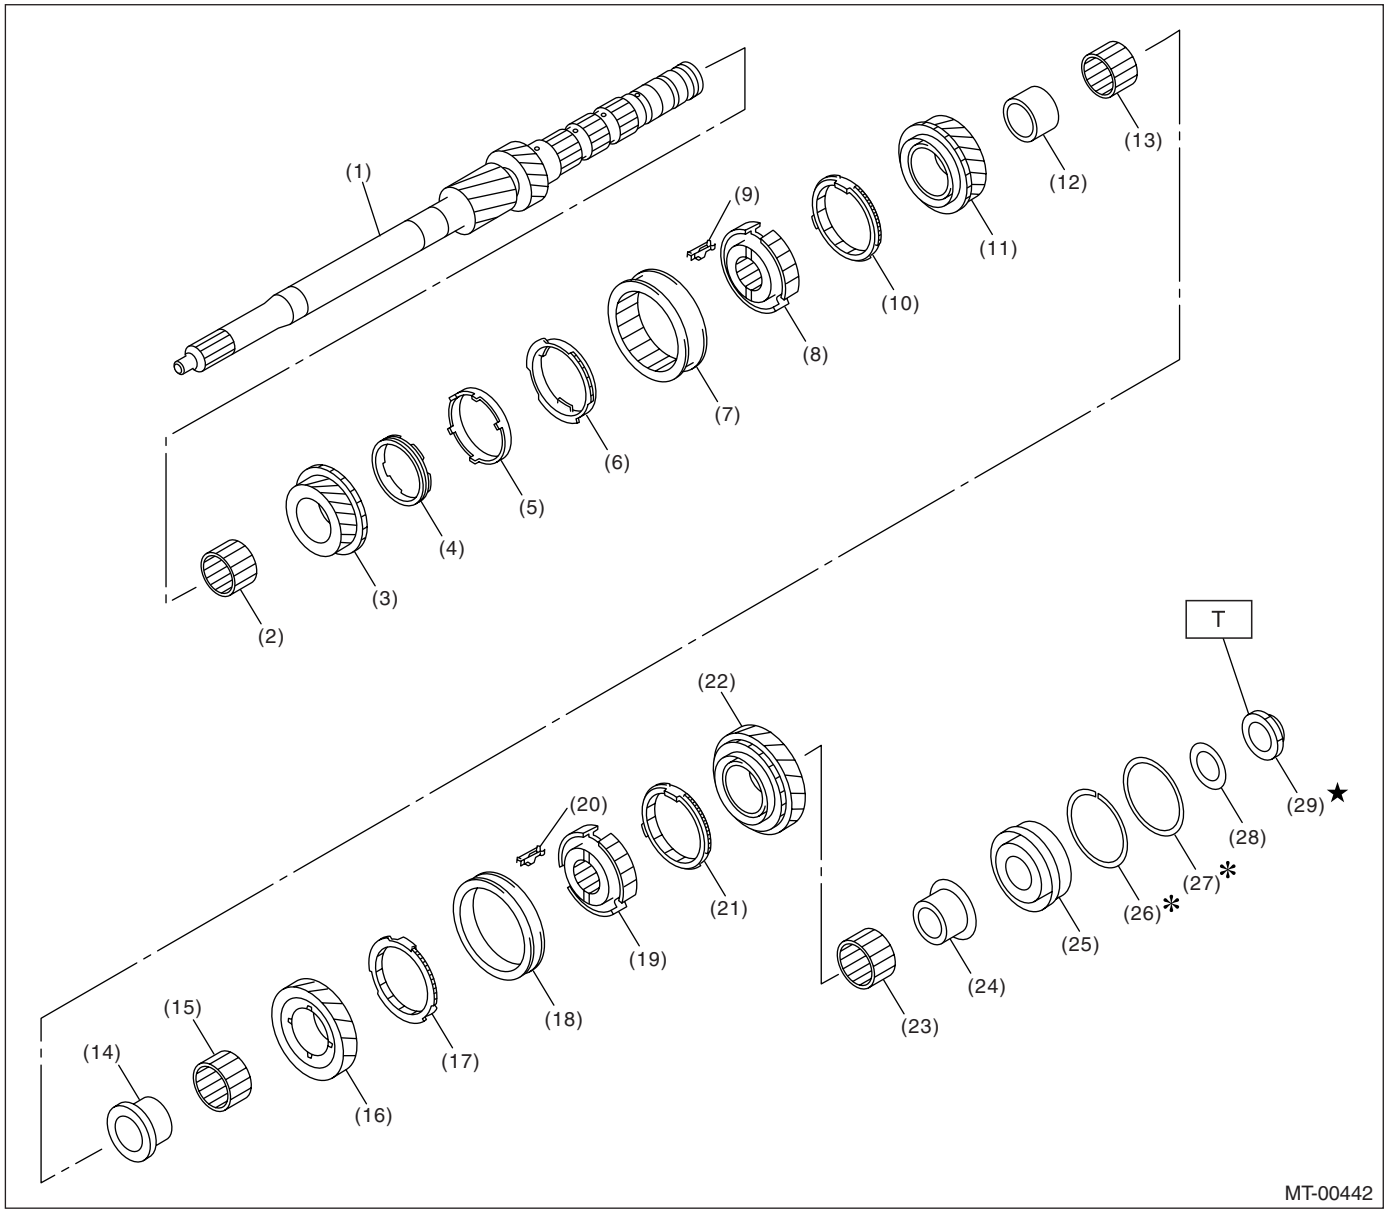

(1) Main shaft
(2) Needle bearing
(3) 3rd drive gear
(4) Inner baulk ring
(5) Synchro cone
(6) Outer baulk ring
(7) 3rd-4th sleeve
(8) 3rd-4th hub
(9) Shifting insert
(10) 4th baulk ring
(11) 4th gear
(12) 4th bush
(13) Needle bearing
(14) 5th bush
(15) Needle bearing
(16) 5th drive gear
(17) 5th baulk ring
(18) 5th-6th sleeve
(19) 5th-6th hub
(20) Shifting sleeve
(21) 6th baulk ring
(22) 6th drive gear
(23) Needle bearing
(24) 6th bush
(25) Taper roller bearing
(26) Snap ring
(27) Washer
(28) Washer
(29) Lock nut

Tightening torque: N·m (kgf-m, ft-lb)
T: 392 (40.0, 289)

8. DRIVE PINION AND DRIVEN SHAFT ASSY

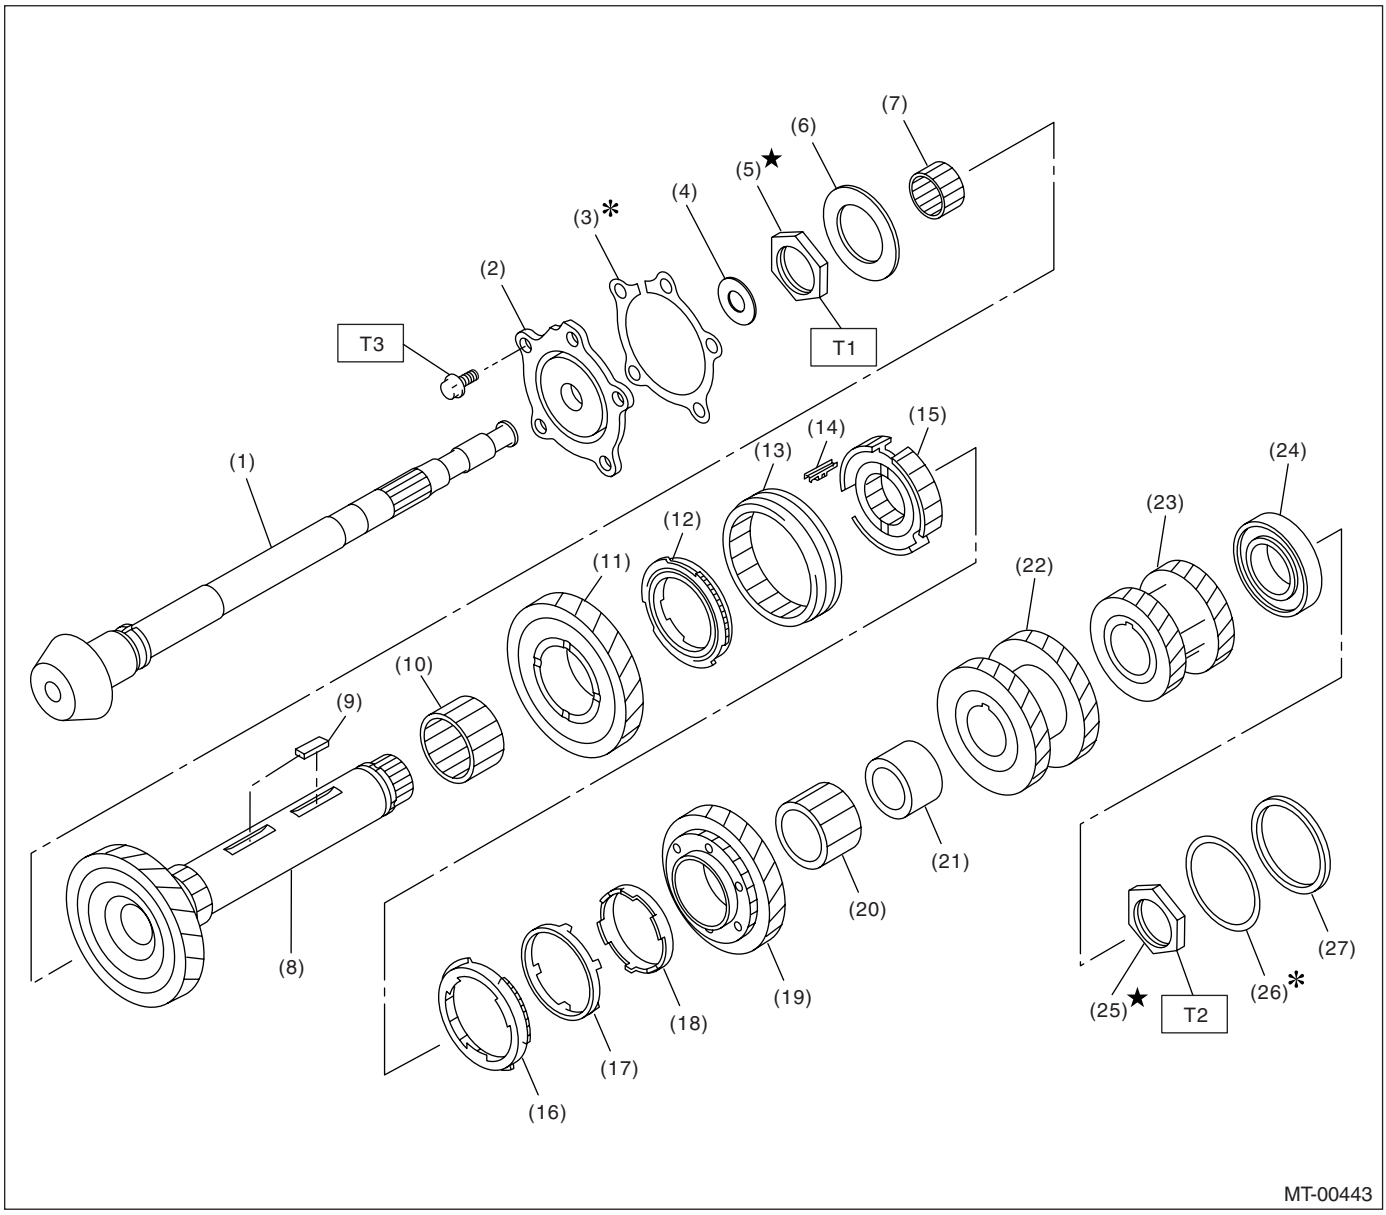

(1) Drive pinion shaft
(2) Taper roller bearing
(3) Shim
(4) Washer
(5) Lock nut
(6) Thrust bearing
(7) Needle bearing
(8) Driven shaft
(9) Key
(10) Needle bearing
(11) 1st driven gear
(12) 1st synchro ring ASSY
(13) 1st-2nd sleeve
(14) Shifting insert
(15) 1st-2nd hub
(16) Outer baulk ring
(17) Synchro cone
(18) Inner baulk ring
(19) 2nd driven gear
(20) Needle bearing
(21) 2nd bush
(22) 3rd-4th driven gear
(23) 5th-6th driven gear
(24) Ball bearing
(25) Lock nut
(26) Shim
(27) Collar

Tightening torque: N·m (kgf-m, ft-lb)

T1: 285 (29.1, 210)
**** 265 (27.0, 195)***

T2: 570 (58.1, 420)
**** 530 (54.0, 391)***

T3: 50 (5.0, 36.9)

* Tightening torque when ST used.

9. REVERSE IDLER GEAR ASSY

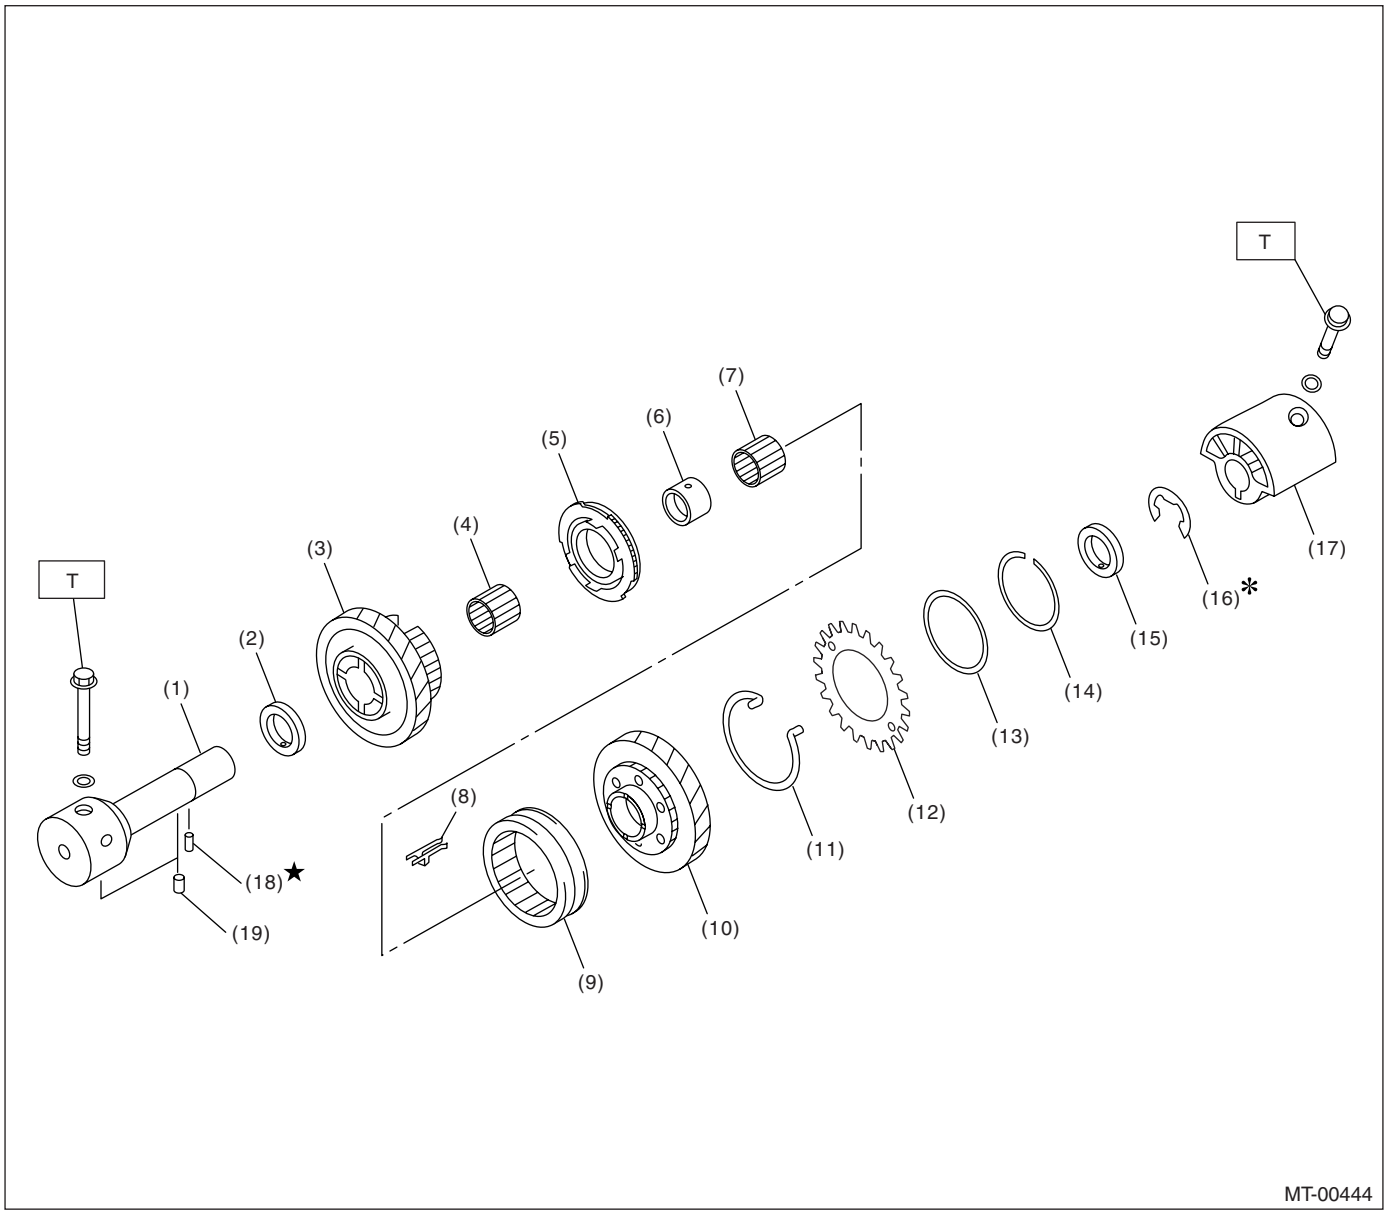

(1) Base COMPL
(2) Washer
(3) Reverse idler gear No.2
(4) Needle bearing
(5) Reverse idler synchro set
(6) Reverse idler gear bush
(7) Needle bearing
(8) Shifting insert
(9) Reverse coupling sleeve
(10) Reverse idler gear
(11) Spring
(12) Sub gear
(13) Friction plate
(14) Snap ring
(15) Washer
(16) Snap ring
(17) Reverse idler holder
(18) Spring pin
(19) Knock pin

Tightening torque: N·m (kgf-m, ft-lb)
T: 25 (2.5, 18.1)

10.FRONT DIFFERENTIAL WITHOUT LSD

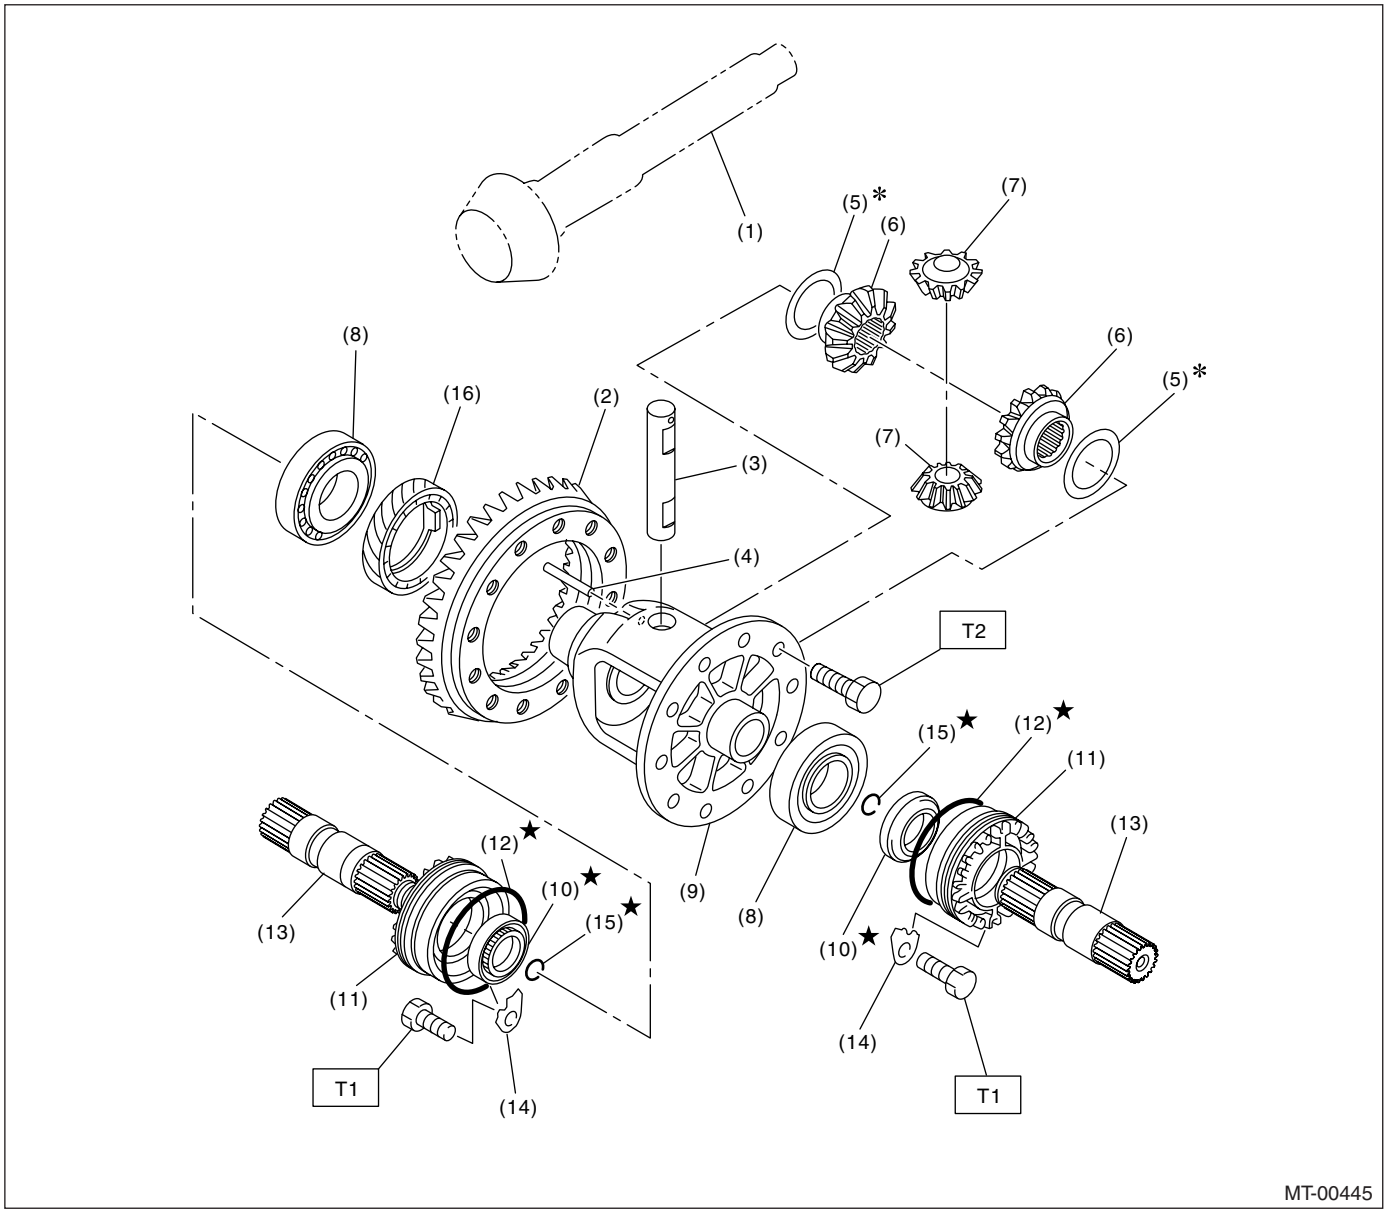

(1) Drive pinion shaft
(2) Hypoid driven gear
(3) Pinion shaft
(4) Straight pin
(5) Washer
(6) Differential bevel gear
(7) Differential bevel pinion
(8) Roller bearing
(9) Differential case
(10) Oil seal
(11) Differential side retainer
(12) O-ring
(13) Axle drive shaft
(14) Retainer lock plate
(15) Circlip
(16) Speedometer drive gear

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	*25 (2.5, 18.1)*
T2:	*69 (7.0, 50.9)*

11.FRONT DIFFERENTIAL WITH LSD

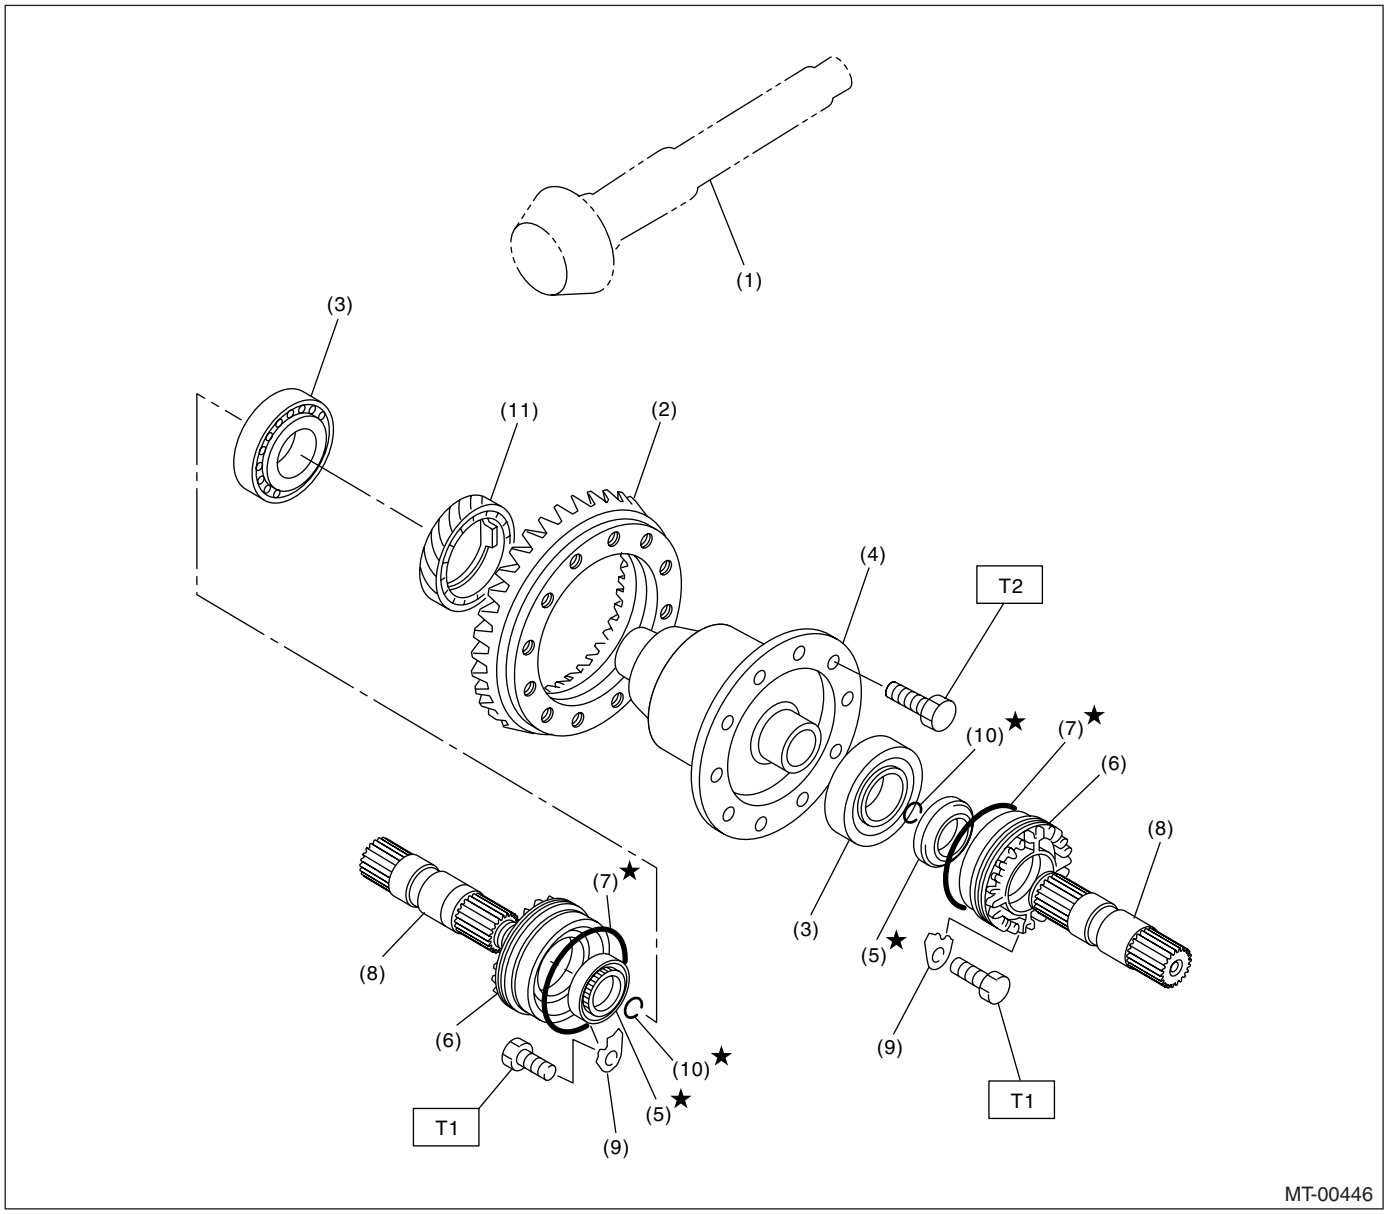

(1) Drive pinion shaft
(2) Hypoid driven gear
(3) Roller bearing
(4) Differential case ASSY
(5) Oil seal
(6) Differential side retainer
(7) O-ring
(8) Axle drive shaft
(9) Retainer lock plate
(10) Circlip
(11) Speedometer drive gear

Tightening torque: N·m (kgf-m, ft-lb)
T1: 25 (2.5, 18.1)
T2: 69 (7.0, 50.9)

12.TRANSMISSION MOUNTING

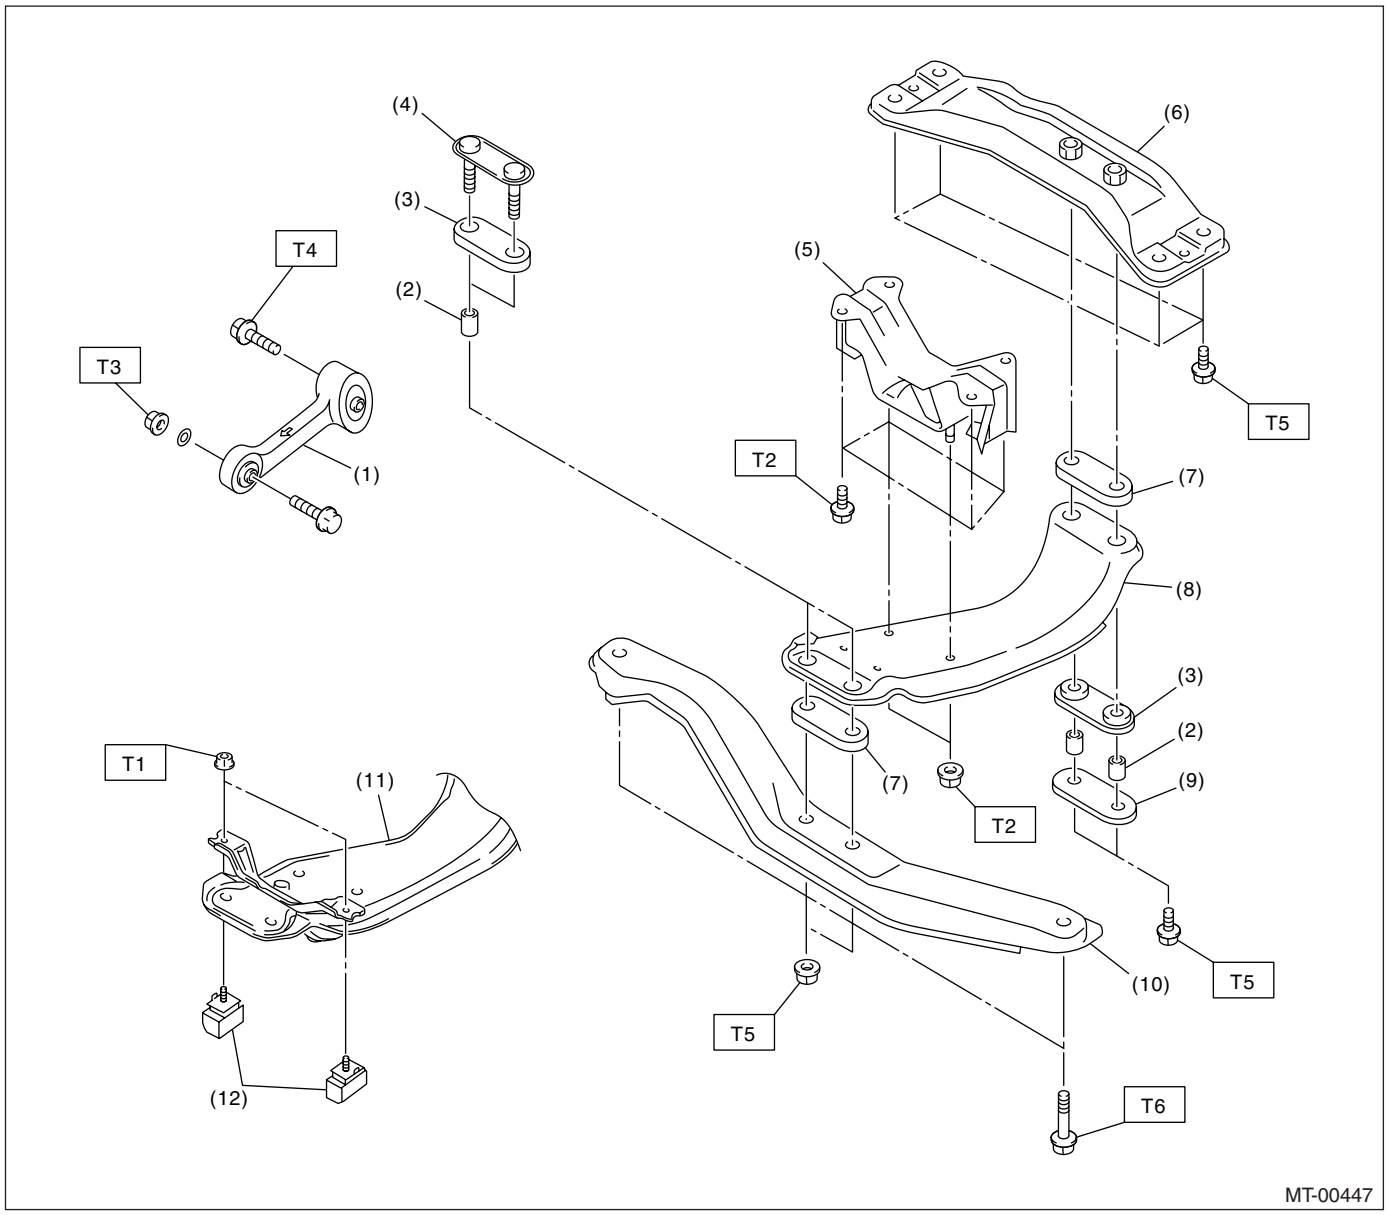

(1)	Pitching stopper	(8)	Center crossmember (Except EUROPE model)
(2)	Spacer		
(3)	Cushion C	(9)	Rear plate
(4)	Front plate	(10)	Front crossmember
(5)	Rear cushion rubber	(11)	Center crossmember (EUROPE model)
(6)	Rear crossmember		
(7)	Cushion D	(12)	Dynamic damper (EUROPE model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 35 (3.6, 25.8)
T3: 50 (5.1, 36.9)
T4: 58 (5.9, 42.8)
T5: 70 (7.1, 51.6)
T6: 140 (14.3, 103)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation, and disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
• When disassembling the case and other light alloy parts, use a plastic hammer to force it apart. Do not pry it apart with a screwdriver or other tool.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use SUBARU genuine gear oil, grease etc. or the equivalent. Do not mix gear oil, grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Apply gear oil onto sliding or revolution surfaces before installation.
• Replace deformed or otherwise damaged snap rings with new ones.
• Before installing O-rings or oil seals, apply sufficient amount of gear oil to avoid damage and deformation.
• Be careful not to incorrectly install or fail to install O-rings, snap rings and other such parts.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Avoid damaging the mating surface of the case.
• Before applying sealant, completely remove the old seal.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
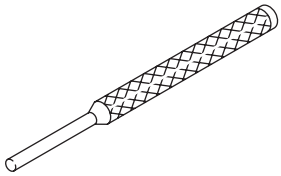 ST-398791700	398791700	REMOVER	Used for removing and installing spring pin (6 mm).
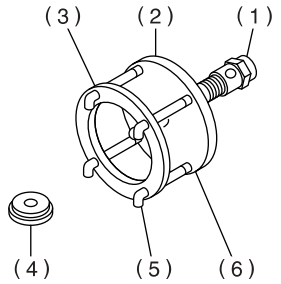 ST-399527700	399527700	PULLER SET	Used for removing and installing roller bearing (Differential). (1) BOLT (899521412) (2) PULLER (399527702) (3) HOLDER (399527703) (4) ADAPTER (398497701) (5) BOLT (899520107) (6) NUT (021008000)

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
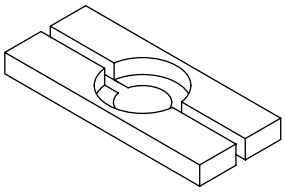 ST-498515700	498515700	REMOVER	Used for removing roller bearing of drive pinion shaft.
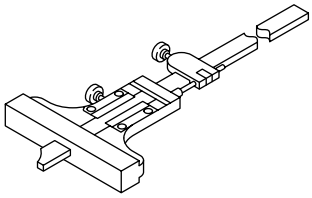 ST-49814700	498147000	DEPTH GAUGE	Used for adjusting main shaft axial end play.
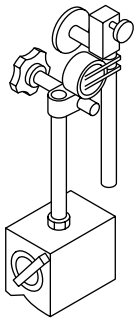 ST-498247001	498247001	MAGNET BASE	• Used for measuring backlash between side gear and pinion, and hypoid gear. • Used with DIAL GAUGE (498247100).
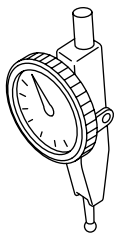 ST-498247100	498247100	DIAL GAUGE	• Used for measuring backlash between side gear and pinion, and hypoid gear. • Used with MAGNET BASE (498247001).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
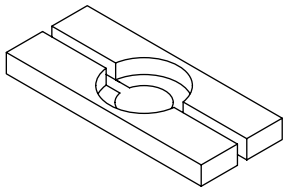 ST-498077000	498077000	REMOVER	Used for removing differential taper roller bearing.
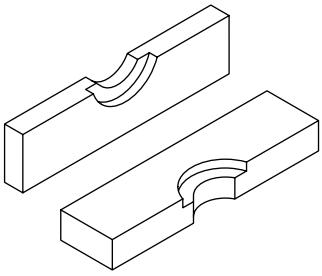 ST-899858600	899858600	REMOVER	Used for removing roller bearing.
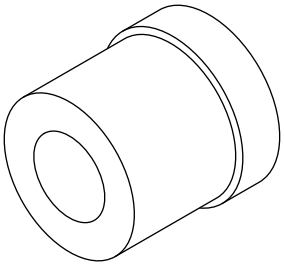 ST-399513600	399513600	INSTALLER	Used for installing oil seal.
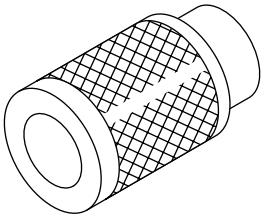 ST-499757002	499757002	INSTALLER	Used for installing bearing cone of transfer driven gear (extension core side).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
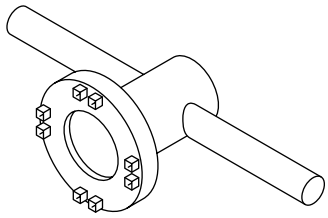 ST-499787000	499787000	WRENCH ASSY	Used for removing and installing differential side retainer (right side).
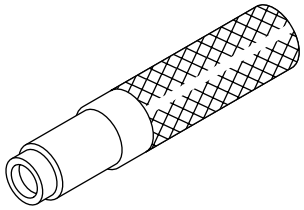 ST-499827000	499827000	PRESS	Used for installing speedometer oil seal when installing speedometer cable to transmission.
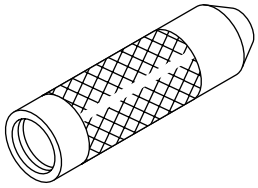 ST-499877000	499877000	RACE 4-5 INSTALLER	Used for disassembling driven shaft and transfer driven gear.
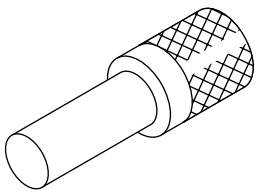 ST-899864100	899864100	REMOVER	Used for removing parts on transmission main shaft and drive pinion.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
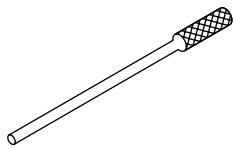 ST-899904100	899904100	REMOVER	Used for removing and installing straight pin.
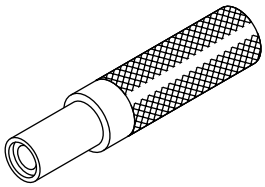 ST-899824100	899824100	PRESS	Used for installing speedometer shaft oil seal.
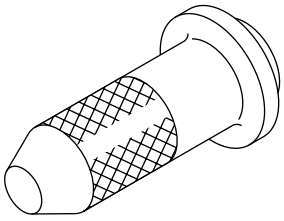 ST-498057300	498057300	INSTALLER	Used for installing extension oil seal.
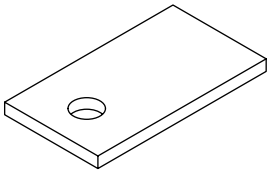 ST-498255400	498255400	PLATE	Used for measuring backlash.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
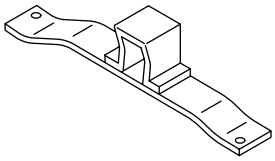 ST41099AA010	41099AA010	ENGINE SUPPORT BRACKET	Used for supporting engine.
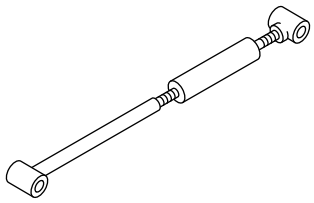 ST41099AA020	41099AA020	ENGINE SUPPORT	Used for supporting engine.
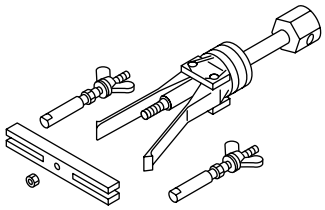 ST-398527700	398527700	PULLER ASSY	Used for removing extension case oil seal and clutch housing oil seal.
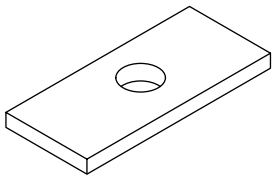 ST-398643600	398643600	GAUGE	Used for measuring total end play, extension end play and drive pinion height.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
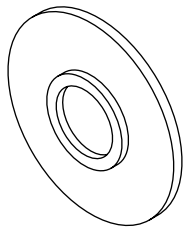 ST-398177700	398177700	INSTALLER	Used for assembling main shaft.
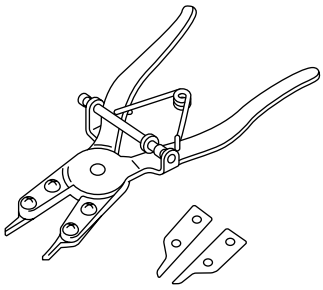 ST-398663600	398663600	PLIERS	• Used for removing and installing neutral set spring. • Used with CLAW (18756AA000).
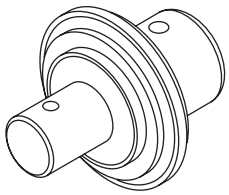 ST-499247300	499247300	INSTALLER	• Used for removing axle shaft. • Used with REMOVER ASSY (499095500).
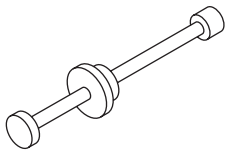 ST-499095500	499095500	REMOVER ASSY	• Used for removing axle shaft. • Used with INSTALLER (499247300).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
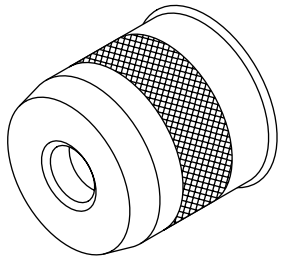 ST-499247400	499247400	INSTALLER	Used for installing transfer drive gear ball bearing.
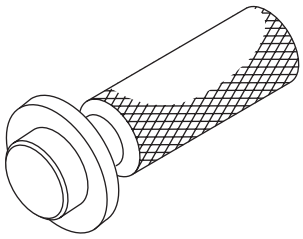 ST-499797000	499797000	OIL SEAL INSTALLER	Used for installing differential side retainer oil seal.
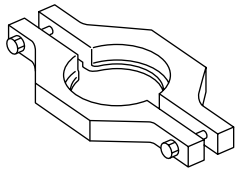 ST-498077610	498077610	REMOVER	Used for removing speedometer drive gear.
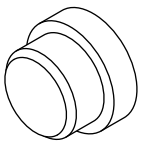 ST-398497701	398497701	SEAT	Used for installing transfer drive gear ball bearing.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
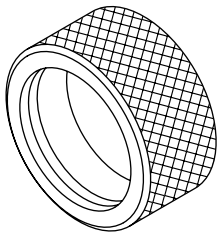 ST-398437700	398437700	INSTALLER	Used for installing front differential side bearing.
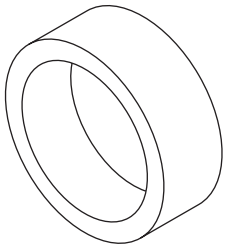 ST-498745600	498745600	INSTALLER	Used for installing oil pump drive gear.
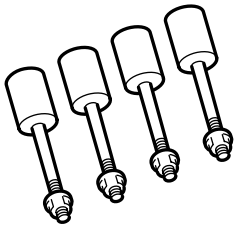 ST18632AA000	18632AA000	STAND ASSY	Used for disassembling and assembling transmission.
ST18671AA000	18671AA000	OIL SEAL GUIDE	• Used for installing oil seal to reverse check. • Used with INSTALLER (18657AA010).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18657AA010	18657AA010	INSTALLER	• Used for installing oil seal to reverse check. • Used with OIL SEAL GUIDE (18671AA000).
 ST18657AA000	18657AA000	INSTALLER	Used for installing oil seal to shift rod.
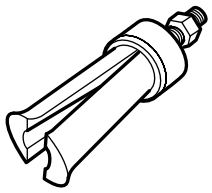 ST18758AA000	18758AA000	PULLER	Used for removing extension taper roller bearing outer race.
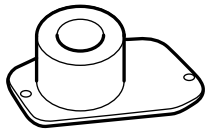 ST18831AA000	18831AA000	GAUGE	Used for measuring extension taper roller bearing.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18631AA000	18631AA000	HANDLE	Used for measuring front differential backlash.
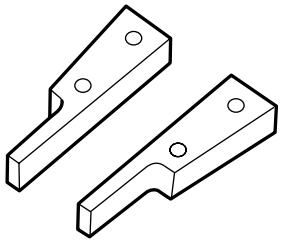 ST18756AA000	18756AA000	CLAW	• Used for installing and removing neutral set spring. • Used with INSTALLER (399893600).
 ST18754AA000	18754AA000	REMOVER	Used for removing each parts of driven gear.
ST18757AA000	18757AA000	STRAIGHT PIN REMOVER	Used for installing reverse idler gear.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
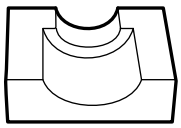 ST18665AA000	18665AA000	HOLDER	• Used for installing and removing main shaft lock nut. • Used with BASE (18664AA000).
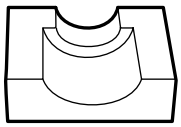 ST18666AA000	18666AA000	HOLDER	• Used for installing and removing driven shaft lock nut. • Used with BASE (18664AA000).
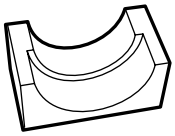 ST18667AA000	18667AA000	HOLDER	• Used for installing and removing drive pinion shaft lock nut. • Used with BASE (18664AA000).
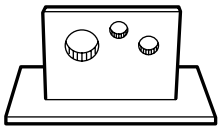 ST18664AA000	18664AA000	BASE	• Used for installing and removing main shaft lock nut. • Used for installing and removing drive pinion shaft lock nut. • Used for installing and removing driven shaft lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
ST18722AA000	18722AA000	REMOVER	Used for disassembling main shaft. (TY856WX···model)
 ST18722AA010	18722AA010	REMOVER	Used for disassembling main shaft. (TY856WN···model)
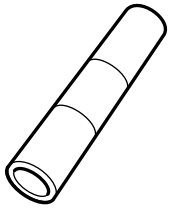 ST18651AA000	18651AA000	INSTALLER	Used for assembling main shaft.
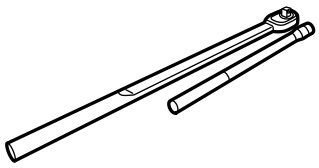 ST18852AA000	18852AA000	TORQUE WRENCH	• Used for tightening main shaft lock nut. • Used for tightening drive pinion shaft lock nut. • Used for tightening driven shaft lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
ST18668AA000	18668AA000	PUNCH	Used for caulking main shaft lock nut.
ST18669AA000	18669AA000	PUNCH	Used for caulking driven shaft lock nut.
ST18670AA000	18670AA000	PUNCH	Used for caulking drive pinion shaft lock nut.
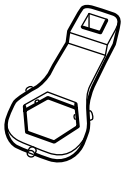 ST18620AA000	18620AA000	ADAPTER WRENCH	Used for installing and removing driven gear shaft lock nut.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
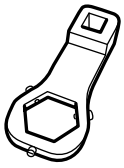 ST18621AA000	18621AA000	ADAPTER WRENCH	Used for installing and removing drive pinion shaft lock nut.
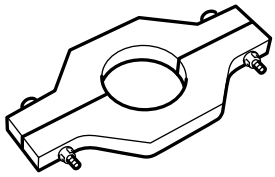 ST18723AA000	18723AA000	REMOVER	Used for disassembling the driven shaft.
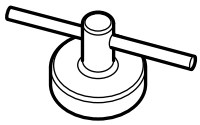 ST18630AA000	18630AA000	WRENCH ASSY	Used for removing and installing differential side retainer (left side).
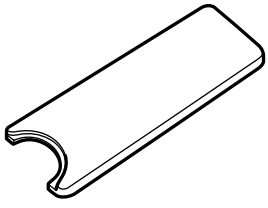 ST18672AA000	18672AA000	GUIDE CLIP	Used for installing reverse idler gear snap ring.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18720AA000	18720AA000	REMOVER	Used for disassembling main shaft.
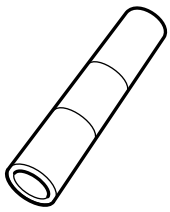 ST18654AA000	18654AA000	INSTALLER	Used for assembling driven shaft.
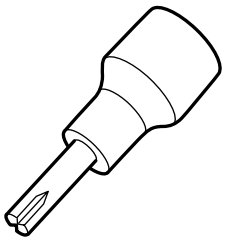 ST18663AA000	18663AA000	SOCKET	Used for installing and removing oil pump cover.
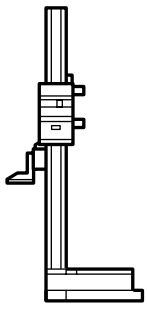 ST18853AA000	18853AA000	HEIGHT GAUGE	Used for selecting shift rod.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
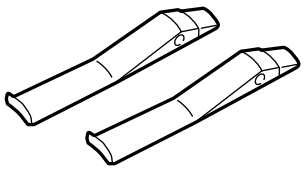 ST18760AA000	18760AA000	CLAW	• Used for removing front side retainer bearing outer race. • Used with PULLER ASSEMBLY (398527705).

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.

2. Transmission Gear Oil

A: INSPECTION

1) Park the vehicle on a level surface.
2) Turn the ignition switch to OFF, and wait until the engine cools.
3) Remove the oil level gauge and wipe it clean.
4) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in the proper direction.
5) Pull out the oil level gauge again and check the oil level on it. If it is below the lower level, add oil through the oil level gauge hole to bring the level up to the upper level.

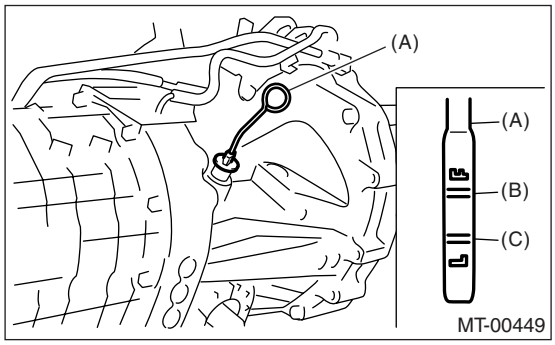

(A) Oil level gauge
(B) Upper level
(C) Lower level

B: REPLACEMENT

1) Pull out the oil level gauge.
2) Lift-up the vehicle.
3) Remove the transmission under cover.
4) Drain the transmission gear oil completely.

CAUTION:
Directly after the engine has been running, the transmission gear oil is hot. Be careful not to burn yourself.

NOTE:
• Tighten the transmission gear oil drain plug after draining transmission gear oil.
• Always use a new gasket.

Tightening torque:
Oil pan side
44 N·m (4.5 kgf-m, 32.5 ft-lb)
Clutch housing side
70 N·m (7.1 kgf-m, 51.6 ft-lb)

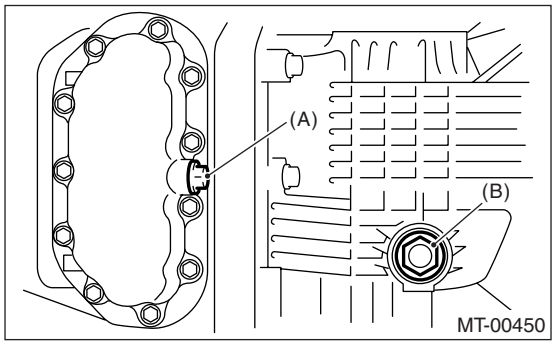

(A) Drain plug (Oil pan side)
(B) Drain plug (Clutch housing side)

5) Lower the vehicle.
6) Pour gear oil into the gauge hole.

Recommended gear oil:
Use GL-5 or equivalent.

Gear oil capacity:
4.1 ℓ (4.3 US qt, 3.6 Imp qt)

7) Check the level of the transmission gear oil.

NOTE:
• When inserting the level gauge into transmission gear, align the protrusion on the side of the top part of the level gauge with the notch in the gauge hole.
• The gear oil level should be within the specified range marked on the level gauge.

3. Oil Seal

A: INSPECTION

Inspect for oil leakage from the oil seal. Replace the oil seal if the lips is deformed, hardened, damaged, worn or defective if any.

B: REPLACEMENT

1) Clean the transmission exterior.
2) Drain the gear oil completely.

NOTE:
- Tighten the drain plug after draining gear oil.
- Always use a new gasket.

Tightening torque:
Oil pan side
44 N·m (4.5 kgf-m, 32.5 ft-lb)
Clutch housing side
70 N·m (7.1 kgf-m, 51.6 ft-lb)

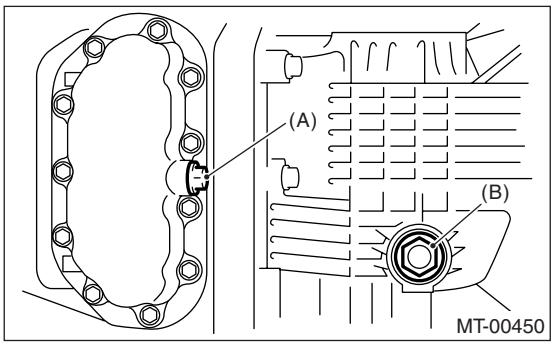

(A) Drain plug (Oil pan side)
(B) Drain plug (Clutch housing side)

3) Remove the rear exhaust pipe and muffler.
4) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
5) Using the ST, remove the oil seal.
ST 398527700 PULLER ASSY

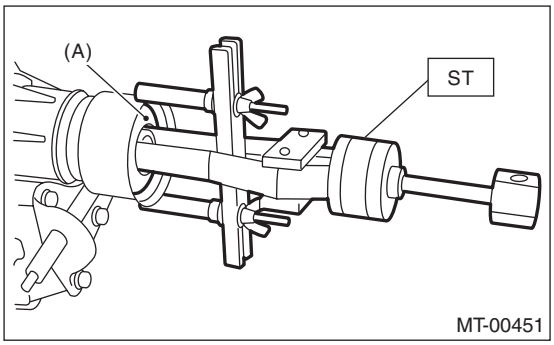

(A) Oil seal

6) Using the ST, install the oil seal.
ST 498057300 INSTALLER

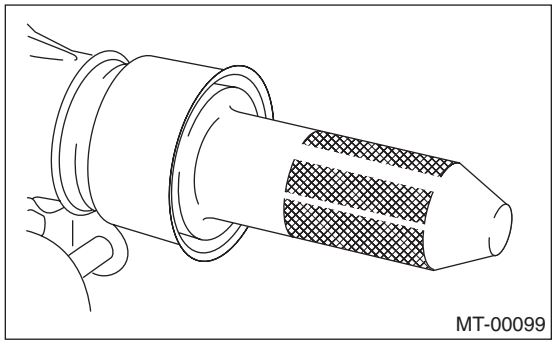

7) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>
8) Install the rear exhaust pipe and muffler.
9) Pour gear oil and check the oil level. <Ref. to 6MT-32, REPLACEMENT, Transmission Gear Oil.>

4. Vehicle Speed Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Disconnect the vehicle speed sensor connector.

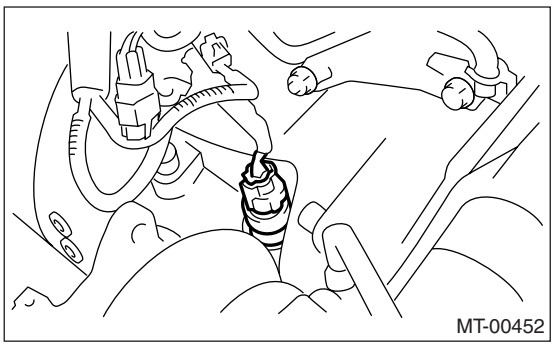

4) Remove the vehicle speed sensor.

B: INSTALLATION

1) Align the tip end of vehicle speed sensor key with key groove on the end of speedometer shaft, and then install it.

Tightening torque:
5.9 N·m (0.6 kgf-m, 4.4 ft-lb)

NOTE:
• Ensure the sensor mounting hole is clean and free of foreign matter.
• Discard the vehicle speed sensor and after removal, replace with a new one.

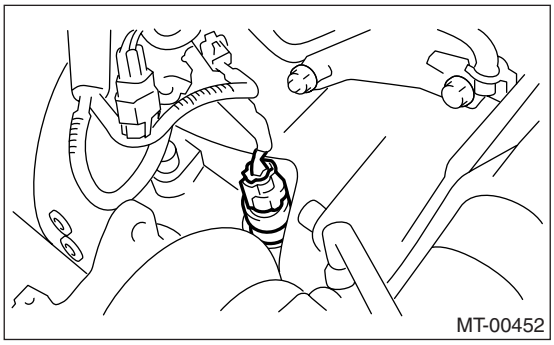

2) Connect the connector to vehicle speed sensor.
3) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

C: INSPECTION

Inspect that the speedometer is normally operated, because vehicle speed sensor cannot be inspected as single part. If it is not normally operated, inspect the combination meter system. <Ref. to IDI-3, INSPECTION, Combination Meter System.>

5. Transmission Mounting System

A: REMOVAL

1. PITCHING STOPPER

1) Disconnect the ground cable from battery.
2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Remove the pitching stopper.

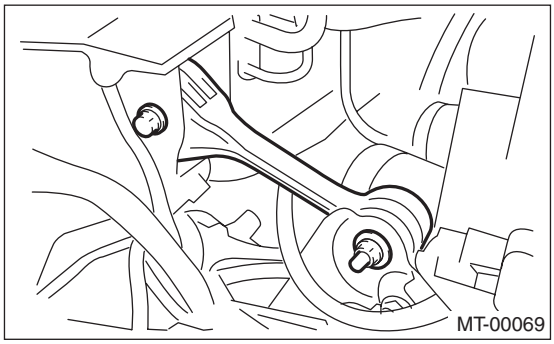

2. CROSSMEMBER AND CUSHION RUBBER

1) Disconnect the ground cable from battery.
2) Jack-up the vehicle and support it with sturdy racks.
3) Remove the center exhaust pipe. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
4) Remove the rear exhaust pipe and muffler.
5) Remove the heat shield cover.
6) Set the transmission jack under the transmission body.

CAUTION:
Always support the transmission case with a transmission jack.

7) Remove the rear crossmember.

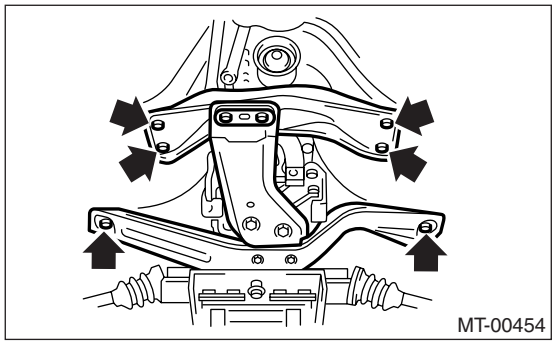

8) Remove the rear cushion rubber.

B: INSTALLATION

1. PITCHING STOPPER

1) Install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 36.9 ft-lb)
T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)

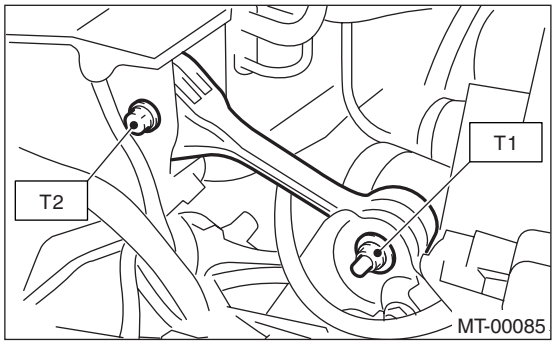

2) Install the intercooler.
<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
3) Connect the battery ground cable to battery.

2. CROSSMEMBER AND CUSHION RUBBER

1) Install the rear cushion rubber.

Tightening torque:
35 N·m (3.6 kgf-m, 25.8 ft-lb)

2) Install the crossmember.

Tightening torque:
T1: 70 N·m (7.1 kgf-m, 51.6 ft-lb)
T2: 140 N·m (14.3 kgf-m, 103 ft-lb)

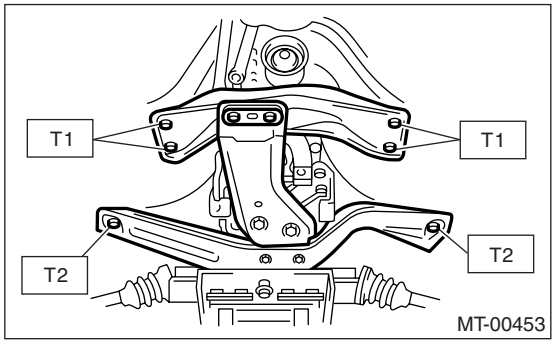

3) Remove the transmission jack.
4) Install the center exhaust pipe. <Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>
5) Install the rear exhaust pipe and muffler.

C: INSPECTION

Repair or replace parts if the results of the inspection below are not satisfactory.

1. PITCHING STOPPER

Make sure that the pitching stopper is not bent or damaged. Make sure that the rubber is not stiff, cracked, or otherwise damaged.

2. CROSSMEMBER AND CUSHION RUBBER

Make sure that the crossmember is not bent or damaged. Make sure that the cushion rubber is not stiff, cracked, or otherwise damaged.

6. Manual Transmission Assembly

A: REMOVAL

1) Set the vehicle on a lift, and then open the front hood and support with hood stay.

NOTE:
Set the hood stay to its specified hole.

2) Remove the front wheel.
3) Disconnect the ground cable from battery.
4) Remove the intercooler assembly. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
5) Lift-up the vehicle, and then remove the under cover.
6) Remove the steering universal joint. <Ref. to PS-24, REMOVAL, Universal Joint.>
7) Lower the vehicle and disconnect the connector located on upper side of transmission.

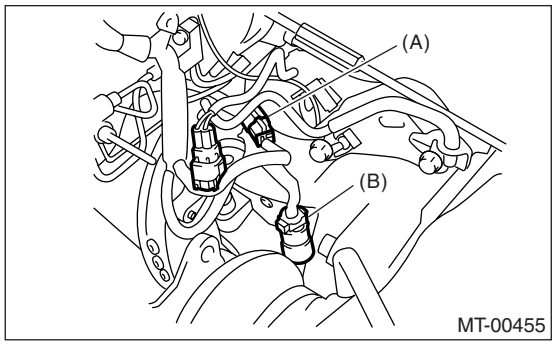

(A) Transmission connector
(B) Vehicle speed sensor connector

8) Disconnect the ground cable at upper side of transmission case and body.

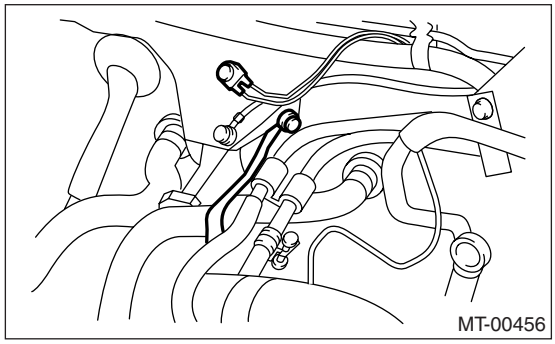

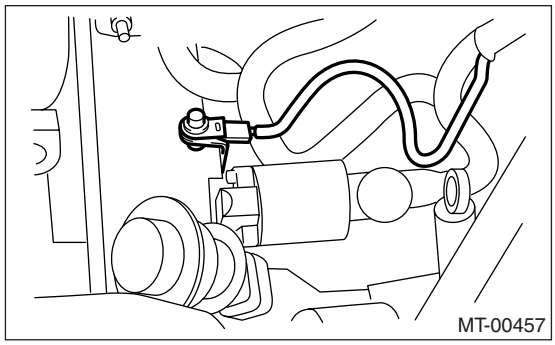

9) Remove the starter assembly. <Ref. to SC(H4SO)-7, REMOVAL, Starter.>
10) Remove the clutch operating cylinder.

NOTE:
Hang the removed operating cylinder with wire.

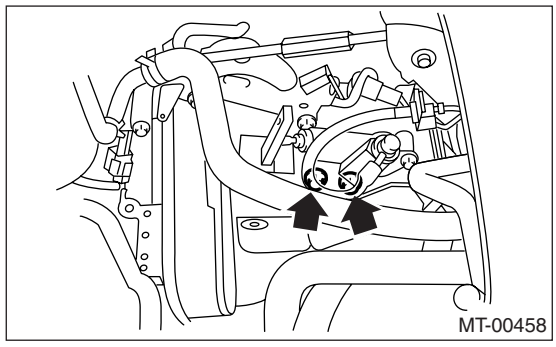

11) Remove the clutch release shaft.
(1) Remove the plug with hexagon wrench.
(2) Install a 6 mm (0.24 in) bolt to the release shaft, then pull out the release shaft.
(3) Lift up the release fork, and then remove it from the release bearing claw. Pull it to the engine side and set it free.
12) Remove the pitching stopper, and then remove the pitching stopper bracket.

13) Set the ST.

NOTE:
Also Part No. 41099AA010 can be used.
ST 41099AA020 ENGINE SUPPORT

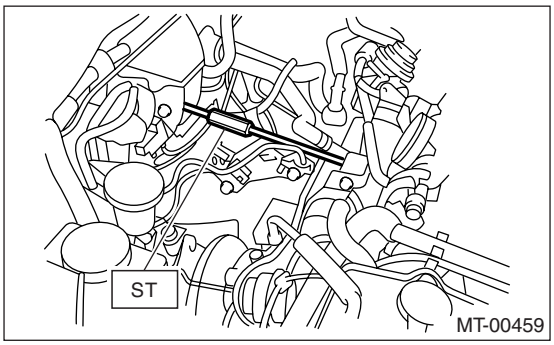

14) Remove the center and rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>, <Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-13, REMOVAL, Joint Pipe.>
15) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
16) Remove the front stabilizer bolt.

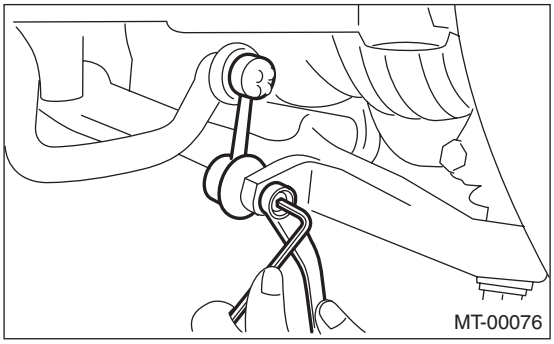

17) Remove the ball joint of transverse link from housing.

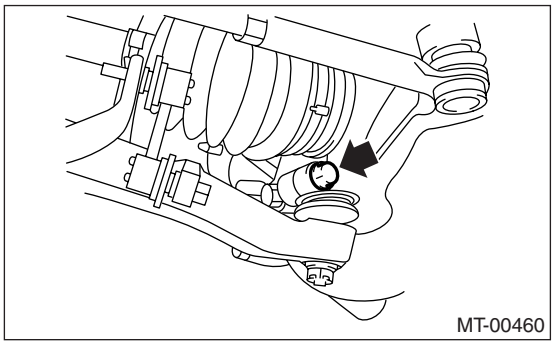

18) Using the ST, remove the spring pin of front drive shaft.
ST 398791700REMOVER

NOTE:
Do not reuse the spring pin.

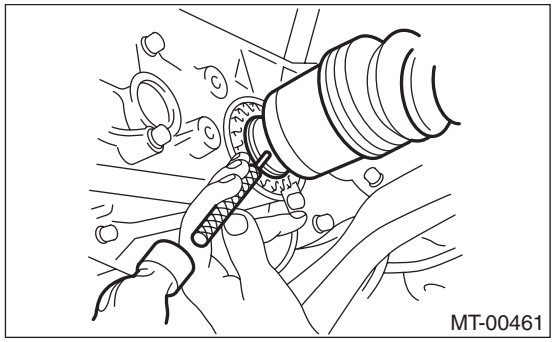

19) Remove the front drive shaft.
20) Set the transmission jack under the transmission, then remove the front crossmember and rear crossmember.

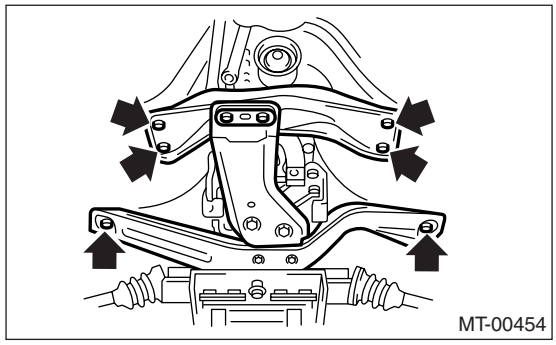

21) Move the transmission to right side, then remove the joint COMPL, stay bolt and reverse check cable.

NOTE:
If the transmission is not moved, the joint COMPL and stay bolt will contact body and damage may occur.

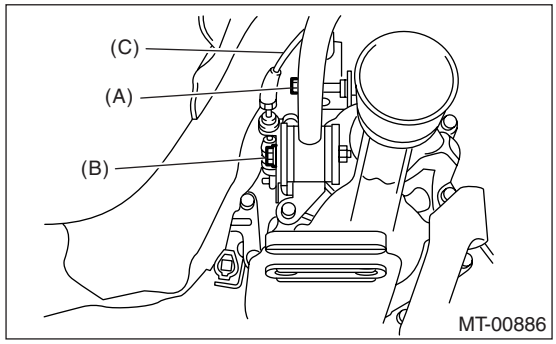

(A) Joint COMPL bolt
(B) Stay bolt
(C) Reverse check cable

22) Remove the fixing bolt of engine and transmission, then remove the transmission from vehicle.

NOTE:
• Rotate the ST (ENGINE SUPPORT ASSY) counterclockwise (to shorter the ST) and lower the rear side of engine to facilitate removal.
• Take care not to contact the transmission with body when pulling backward to remove.
• Remove carefully. The clutch pipe and breather pipe may interfere each other.

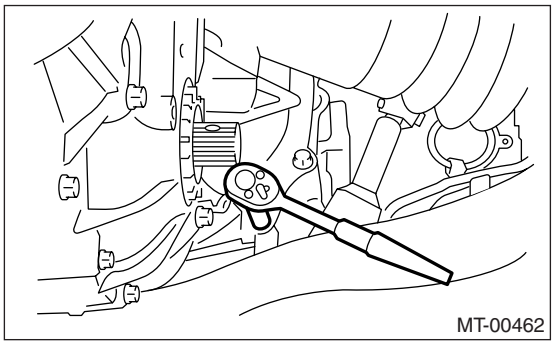
MT-00462

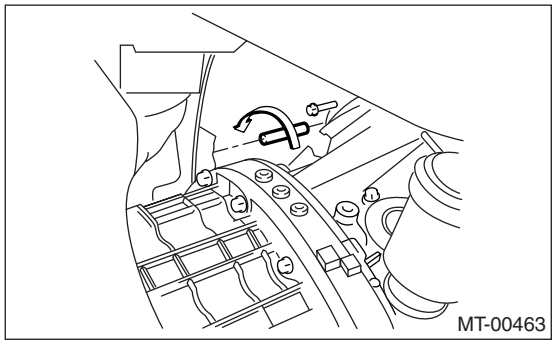
MT-00463

B: INSTALLATION

1) Set the release fork, release bearing and release shaft to transmission. <Ref. to CL-26, INSTALLATION, Release Bearing and Lever.>
2) Install the transmission.

NOTE:
• Make sure the main shaft spline part is inserted completely.
• Make sure the rear side of engine is lowered.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

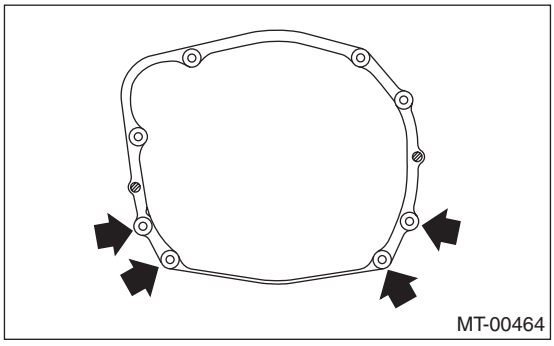
MT-00464

3) Move the transmission to the right side, then install the joint COMPL bolt, stay bolt and reverse check cable.

Tightening torque:
T1: 11.8 N·m (1.2 kgf-m, 8.7 ft-lb)
T2: 32 N·m (3.3 kgf-m, 23.6 ft-lb)

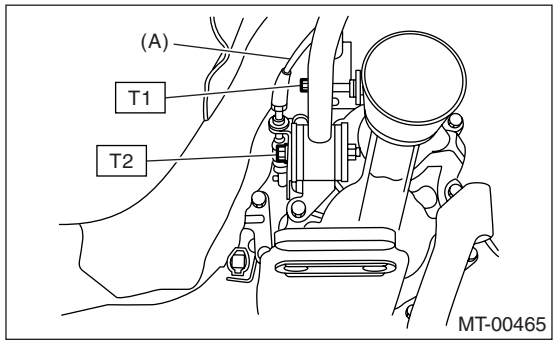

MT-00465

(A) Reverse check cable

4) Install the front crossmember and rear crossmember.

NOTE:
Rotate the ST (ENGINE SUPPORT ASSY) turn buckle clockwise (make longer the ST) and lift up the rear side of engine to facilitate installation.

Tightening torque:
T1: 70 N·m (7.1 kgf-m, 51.6 ft-lb)
T2: 140 N·m (14.3 kgf-m, 103 ft-lb)

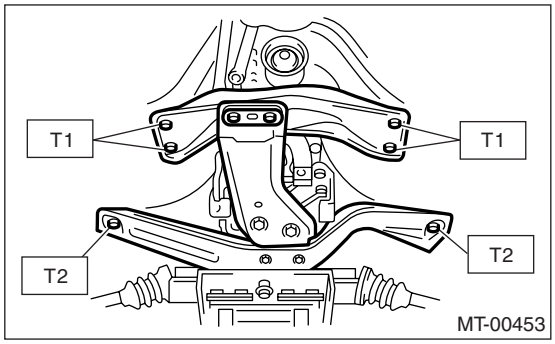

MT-00453

5) Lower the vehicle and install the fixing bolt.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

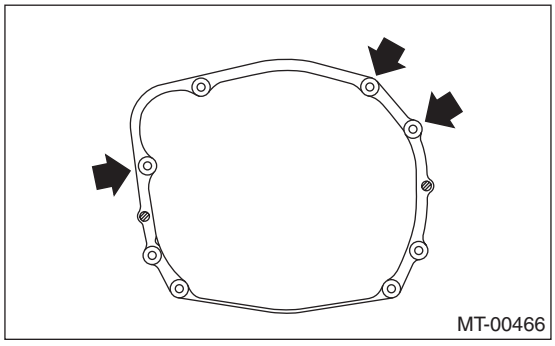
MT-00466

6) Make sure the release bearing is installed completely.

NOTE:
• Push the release fork to operating cylinder side until you hear a “click” sound. Pull the release fork to engine side. Setting is completed if the release fork does not contact case.
• Make sure the boot cover is firmly set.

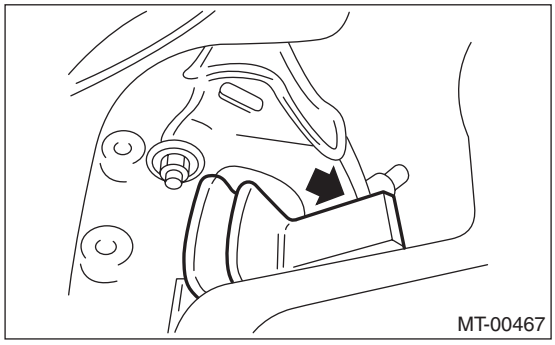

7) Install the pitching stopper bracket, and then install the pitching stopper.

Tightening torque:
T1: 50 N·m (5.1 kgf-m, 36.9 ft-lb)
T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)

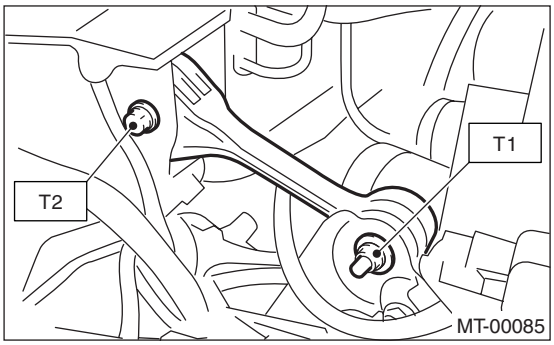

8) Install the clutch operating cylinder.

Tightening torque:
41 N·m (4.2 kgf-m, 30.2 ft-lb)

NOTE:
Check that the clutch hose is routed properly.

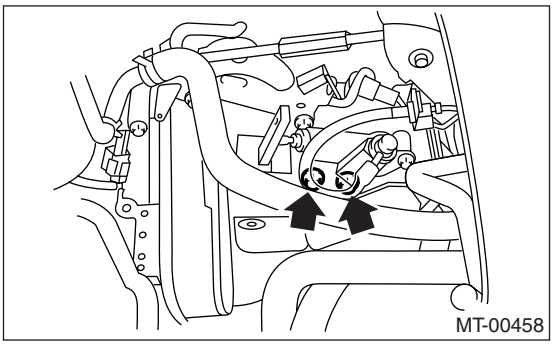

9) Install the starter assembly.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

10) Install the transmission and body ground cable.

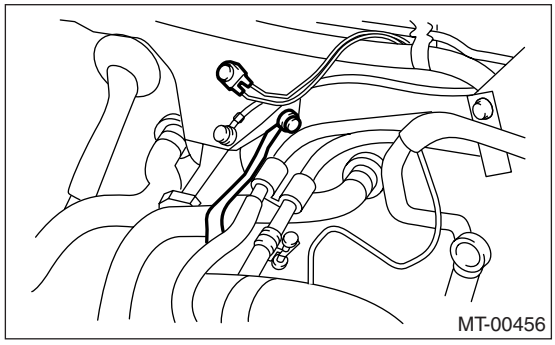

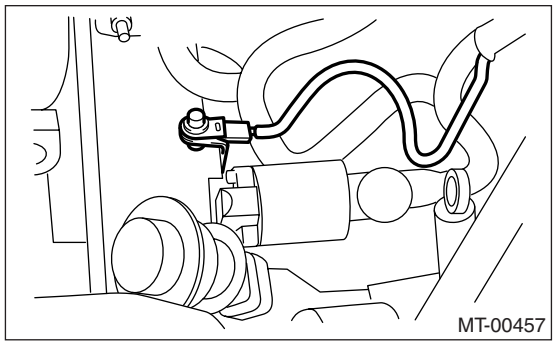

11) Connect the connector located on the upper side of transmission.

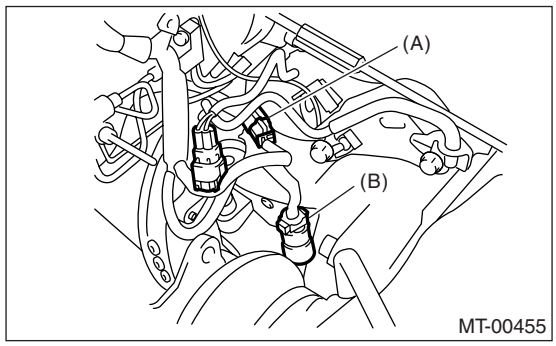

(A) Vehicle speed sensor connector
(B) Transmission connector

12) Lift-up the vehicle, and then install the drive shaft.

13) Using the ST, install the spring pin of front drive shaft.
ST 398791700REMOVER

NOTE:
Align each chamfered part of front drive shaft and axle drive shaft spring pin hole, and assemble them. Then insert the spring pin.

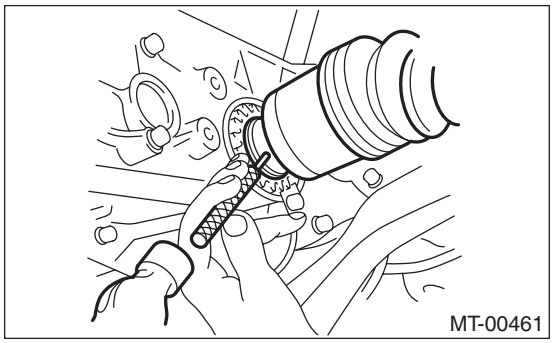
MT-00461

14) Install the ball joint of transverse link to housing.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

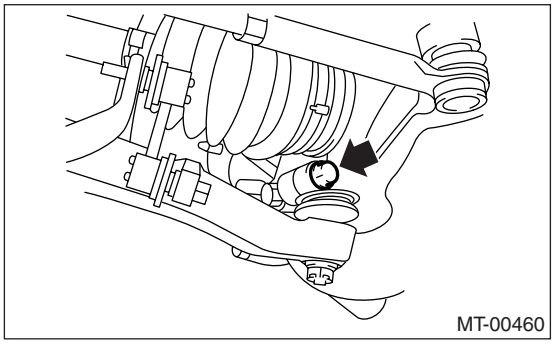
MT-00460

15) Install the stabilizer nut.

Tightening torque:
45 N·m (4.6 kgf-m, 33.2 ft-lb)

NOTE:
Discard the loosened self-locking nut and replace with a new one.

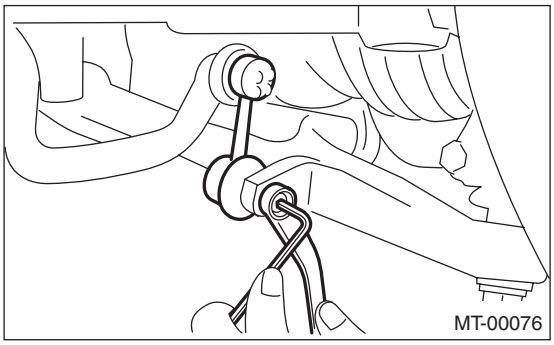
MT-00076

16) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>

17) Install the center exhaust pipe. <Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>
18) Install the rear exhaust pipe and muffler. <Ref. to EX(H4DOTC)-14, INSTALLATION, Rear Exhaust Pipe.>, <Ref. to EX(H4DOTC)-13, INSTALLATION, Joint Pipe.>
19) Install the universal joint. <Ref. to PS-24, INSTALLATION, Universal Joint.>
20) Install the under cover.
21) Install the intercooler assembly. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>
22) Connect the battery ground cable to battery.

7. Preparation for Overhaul

A: PROCEDURE

1) Clean oil, grease, dirt and dust from transmission.
2) Remove the drain plug to drain oil. After draining, retighten it as before.

NOTE:
Replace the gasket with a new one.

Tightening torque:
Oil pan side
44 N·m (4.5 kgf-m, 32.5 ft-lb)
Clutch housing
70 N·m (7.1 kgf-m, 51.6 ft-lb)

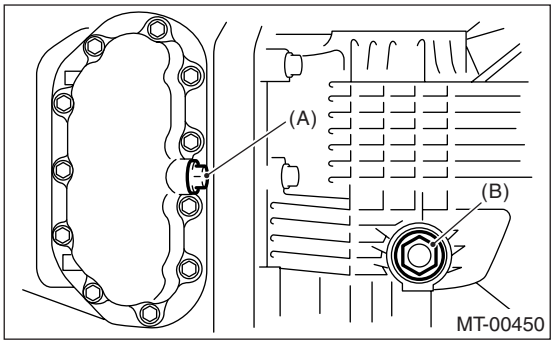

(A) Drain plug (Oil pan side)
(B) Drain plug (Clutch housing side)

3) Attach the transmission to ST.
ST 18632AA000 STAND ASSY

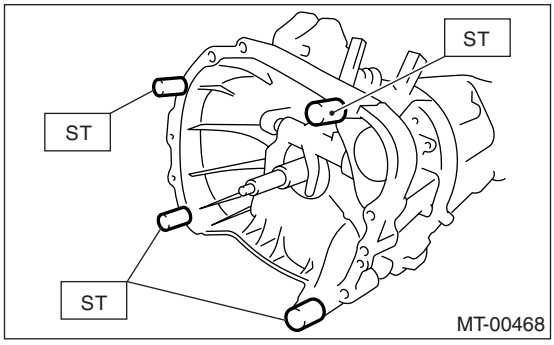

4) Rotating parts should be coated with oil prior to assembly.
5) All disassembled parts, if to be reused, should be reinstalled in the original positions and directions.
6) Gaskets, lock washers and lock nut must be replaced with new ones.
7) Liquid gasket should be used where specified to prevent leakage.

8. Air Breather Hose

A: REMOVAL

Disconnect the air breather hose.

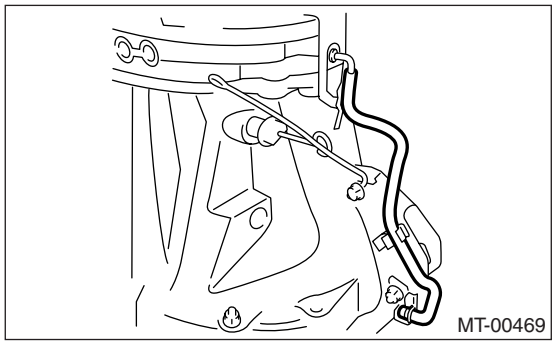

B: INSTALLATION

Install the air breather hose.

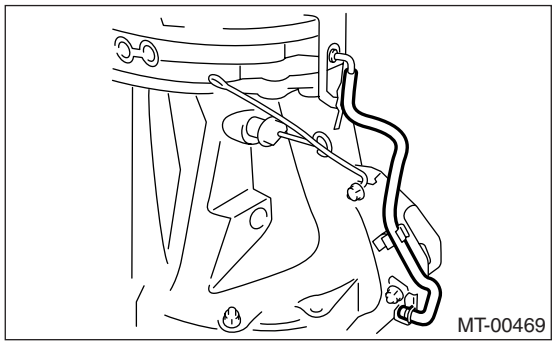

C: INSPECTION

Make sure the hose is not cracked or clogged.

9. Oil Pipe

A: REMOVAL

Remove the oil pipe.

NOTE:
Do not reuse the gasket.

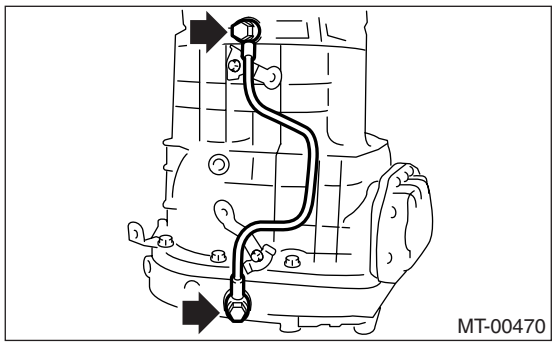

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Always use a new gasket.

Tightening torque:
32 N·m (3.3 kgf-m, 23.6 ft-lb)

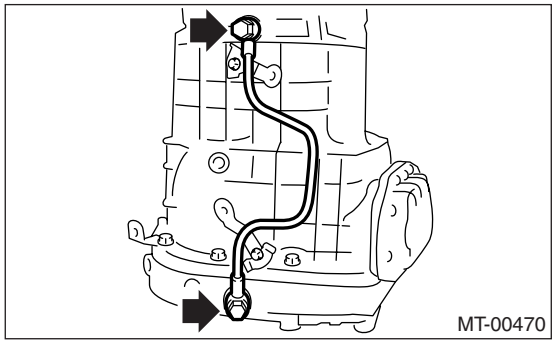

C: INSPECTION

1) Make sure there is no damage on pipe. If there is damage, replace the pipe.
2) Check the joint parts of pipe for oil leakage. If there is oil leakage, replace the gasket.

10.Back-up Light Switch

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Disconnect the back-up light switch connector.

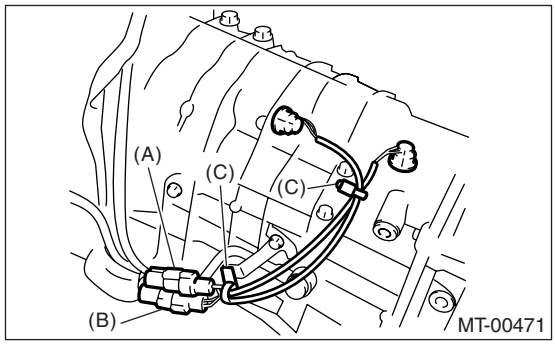

(A) Back-up light switch connector (White)
(B) Neutral position switch connector (Black)
(C) Clip

3) Remove the back-up light switch.

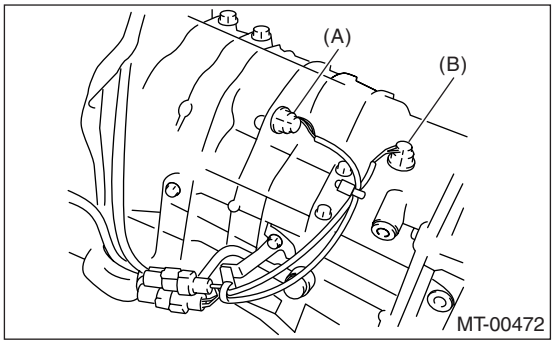

(A) Back-up light switch
(B) Neutral position switch

B: INSTALLATION

1) Install the back-up light switch.

Tightening torque:
32 N·m (3.3 kgf-m, 23.6 ft-lb)

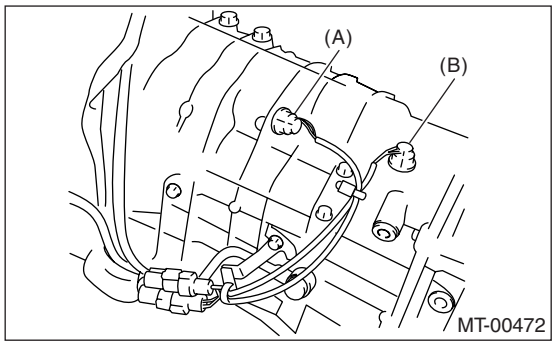

(A) Back-up light switch
(B) Neutral position switch

2) Connect the back-up light switch connector.

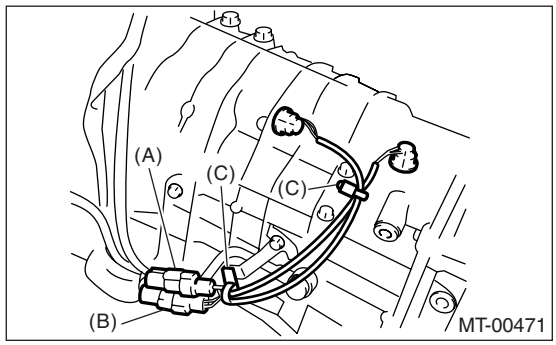

(A) Back-up light switch connector (White)
(B) Neutral position switch connector (Black)
(C) Clip

3) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1) Disconnect the ground cable from battery.
2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Disconnect the transmission harness and chassis harness.

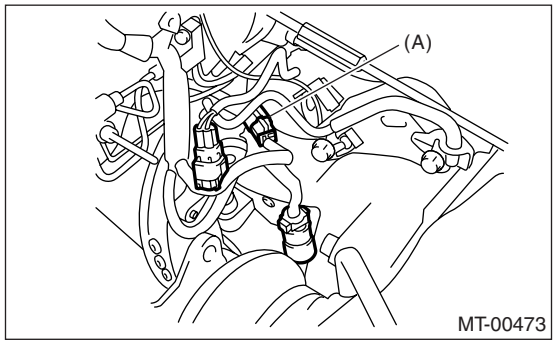

(A) Transmission connector

4) Measure the resistance between back-up light switch terminals. If it is not within specifications, replace the back-up light switch.

Gear shift position	Terminal No.	Specified resistance
Back-up position	2 and 4	Less than 1 Ω
Other positions		More than 1 MΩ

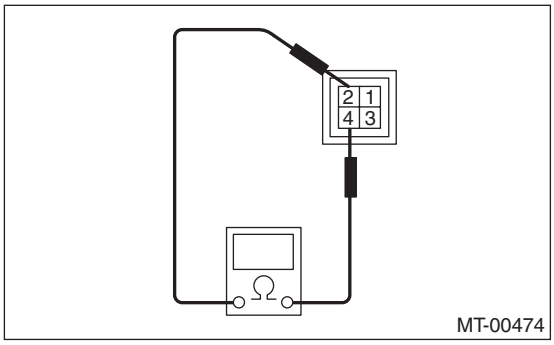

11.Neutral Position Switch

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Disconnect the neutral position switch connector and clip.

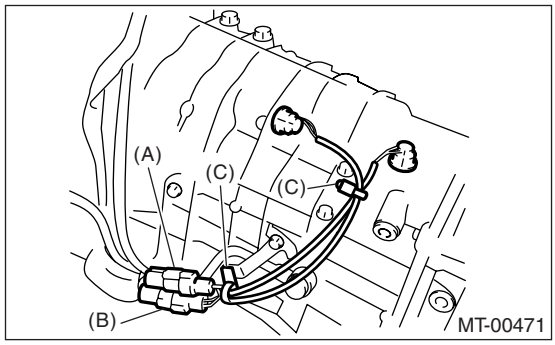

(A) Back-up light switch connector (White)
(B) Neutral position switch connector (Black)
(C) Clip

3) Remove the neutral position switch.

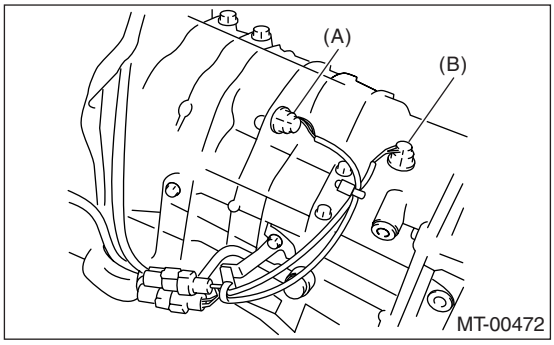

(A) Back-up light switch
(B) Neutral position switch

B: INSTALLATION

1) Install the neutral position switch.

Tightening torque:
32 N·m (3.3 kgf-m, 23.6 ft-lb)

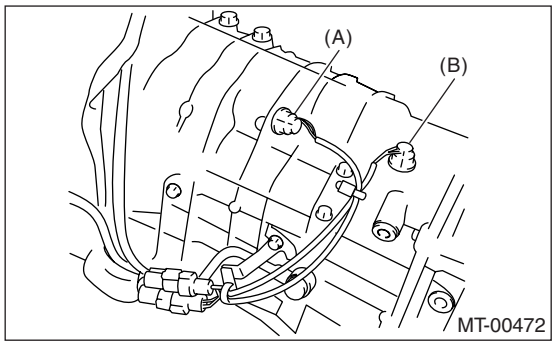

(A) Back-up light switch
(B) Neutral position switch

2) Connect the neutral position switch connector and clip.

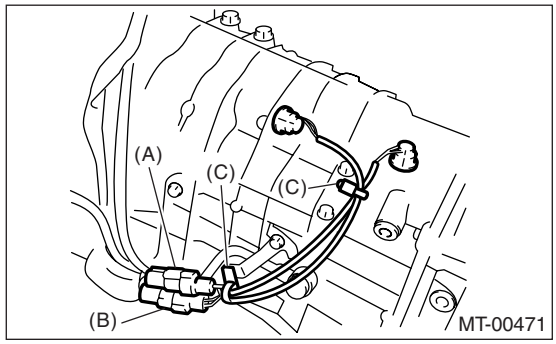

(A) Back-up light switch connector (White)
(B) Neutral position switch connector (Black)
(C) Clip

3) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1) Disconnect the ground cable from battery.
2) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Disconnect the transmission harness and chassis harness.

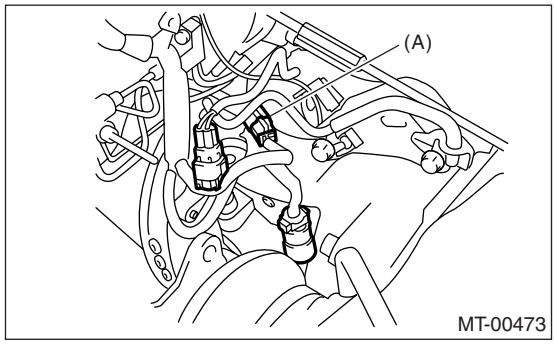

(A) Transmission connector

4) Measure the resistance between neutral position switch terminals. If it is not within specifications, replace the neutral position switch.

Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 3	Less than 1 Ω
Other positions		More than 1 MΩ

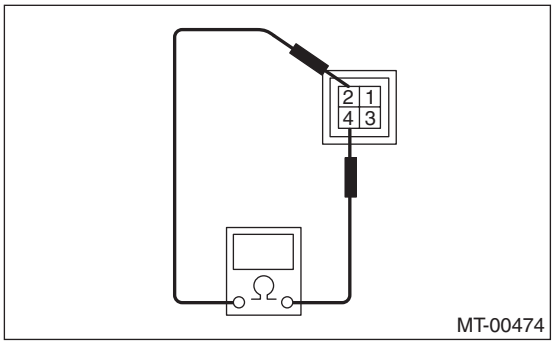

12.Extension Case

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the extension case.

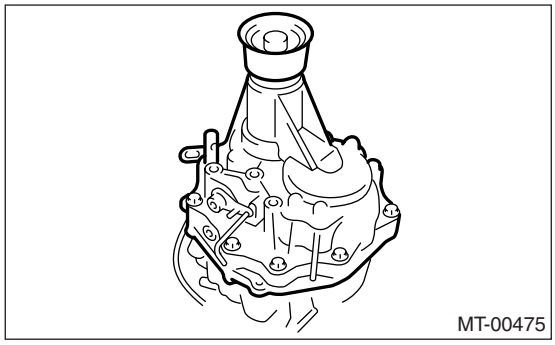

4) Completely remove the remaining liquid gasket from the extension case and transmission case.

B: INSTALLATION

1) Select the transfer driven gear thrust washer, and then install it to extension case. <Ref. to 6MT-51, ADJUSTMENT, Extension Case.>
2) Apply oil lightly to the outer periphery of bearing cone, and then install it to extension case.
3) Select the thrust washer of transfer drive gear, and then install it to center differential.
4) Apply liquid gasket to the transmission case.

Liquid gasket:
THREE BOND 1215

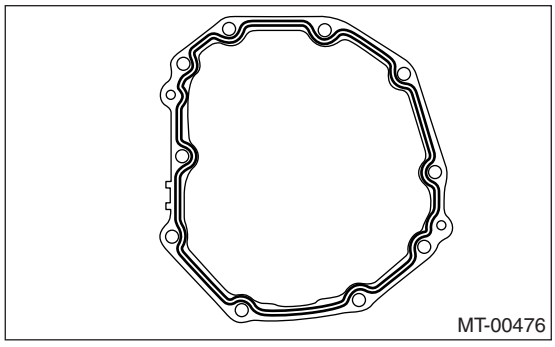

5) Install the extension case.

Tightening torque:
48 N·m (4.9 kgf-m, 35.4 ft-lb)

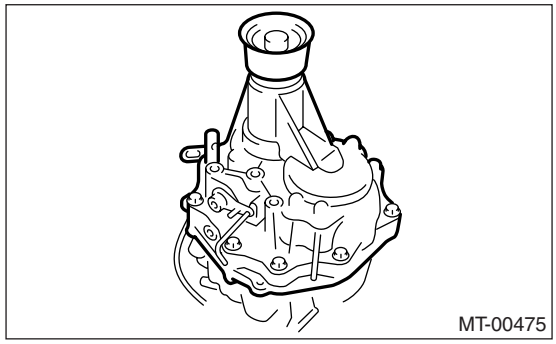

6) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the transfer drive gear. <Ref. to 6MT-58, REMOVAL, Transfer Drive Gear.>
2) Remove the extension guide.

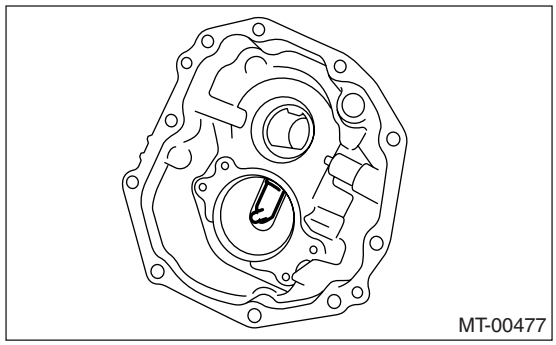

3) Remove the shift bracket.

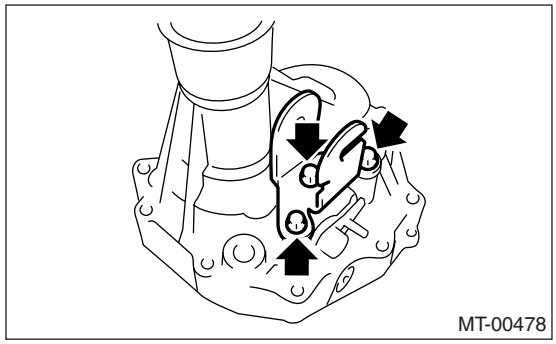

4) Using the ST, remove the bearing cone.
ST 18758AA000 PULLER

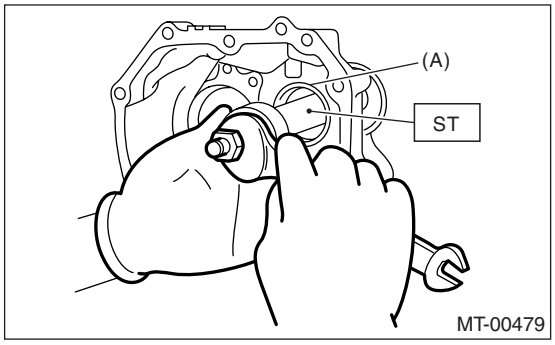

(A) Bearing cone

5) Remove the thrust washer and oil plate.

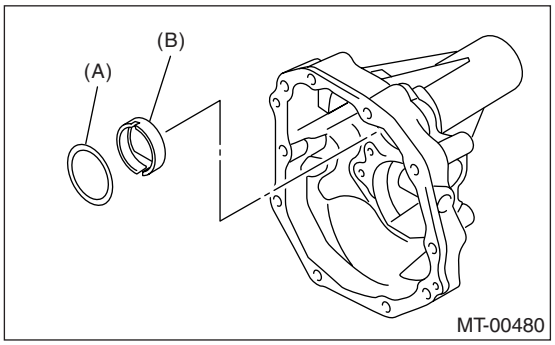

(A) Thrust washer
(B) Oil plate

6) Remove the shifter arm oil seal.

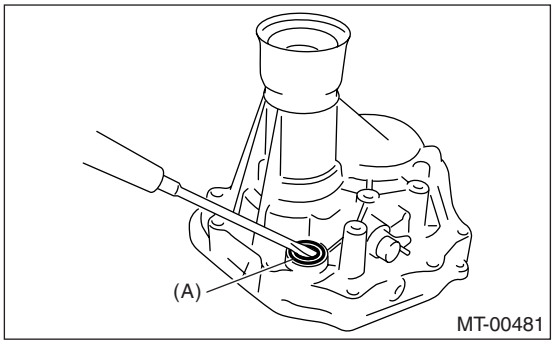

(A) Oil seal

7) Remove the reverse checking system. <Ref. to 6MT-55, REMOVAL, Reverse Checking System.>
8) Remove the extension oil seal. <Ref. to 6MT-33, REPLACEMENT, Oil Seal.>

D: ASSEMBLY

1) Install the reverse checking system. <Ref. to 6MT-56, INSTALLATION, Reverse Checking System.>
2) Install the extension case oil seal. <Ref. to 6MT-33, REPLACEMENT, Oil Seal.>
3) Using the ST, install the shifter arm oil seal.
ST1 18657AA000 INSTALLER
ST2 18671AA000 OIL SEAL GUIDE

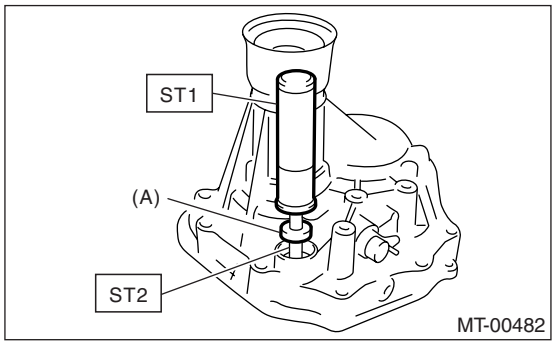

(A) Oil seal

4) Install the oil plate.

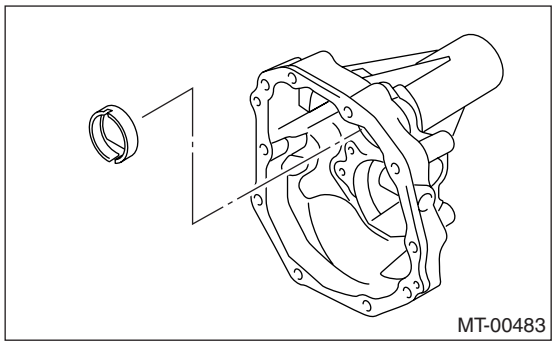

5) Select the bearing thrust washer, and then install it to extension case. <Ref. to 6MT-51, ADJUSTMENT, Extension Case.>
6) Apply oil lightly to the outer periphery of bearing cone, and then install it to extension case.
7) Install the shift bracket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

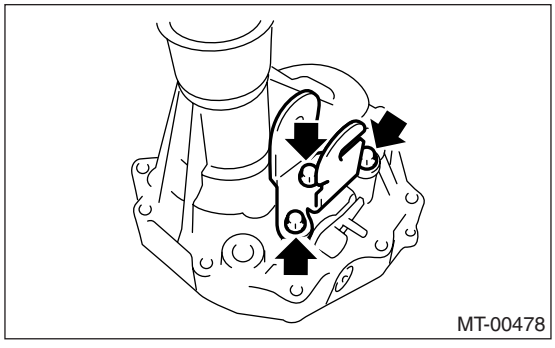

8) Install the extension guide, and then install the transfer driven gear. <Ref. to 6MT-58, INSTALLATION, Transfer Drive Gear.>

E: INSPECTION

1) Make sure there is no damage or crack on extension case. If there is damage or crack, replace the extension case.
2) Check each oil seal and joint part of extension case and transmission case for oil leakage. If there is oil leakage, replace the oil seal and liquid gasket.

F: ADJUSTMENT

1. TRANSFER DRIVEN GEAR BEARING THRUST WASHER ADJUSTMENT

1) Using the ST, remove the bearing cone from extension case.
ST 18758AA000 PULLER

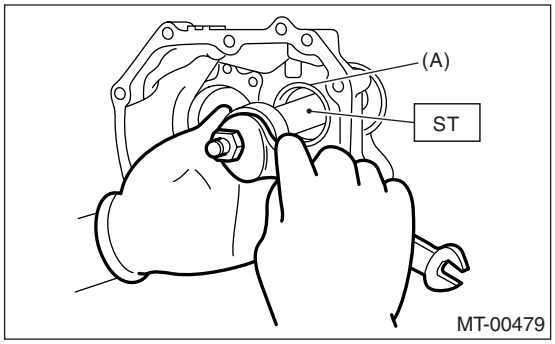

(A) Bearing cone

2) Remove the thrust washer.
3) Measure the depth “Z” between end of extension case and contact point of bearing cone.
ST 398643600 GAUGE

NOTE:
To measure the depth “Z”, subtract the thickness of ST [15 mm (0.59 in)] from the measured value.

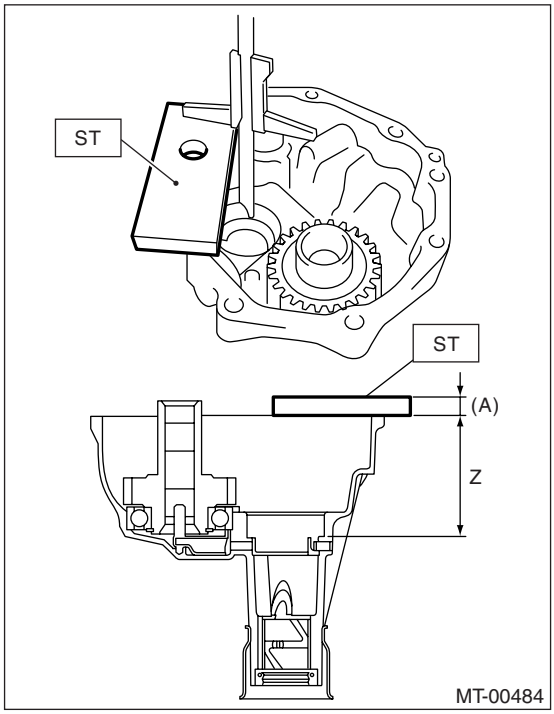

(A) 15 mm (0.59 in)

4) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
5) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
6) Remove the snap ring and support from selector arm part.

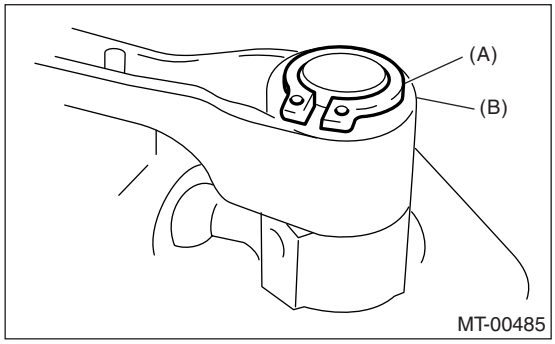

(A) Snap ring
(B) Support

7) Using the ST, remove the neutral set spring and support.
ST1 18756AA000CLAW
ST2 398663600 PLIERS

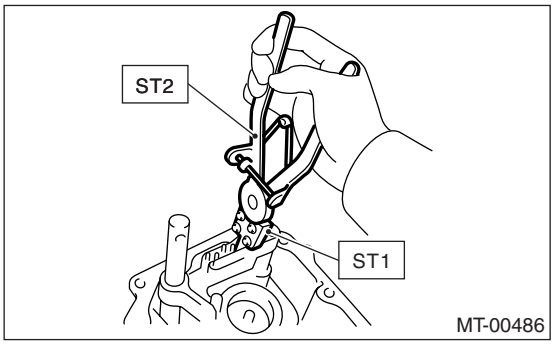

8) Lift-up the striking rod and remove spring pin.

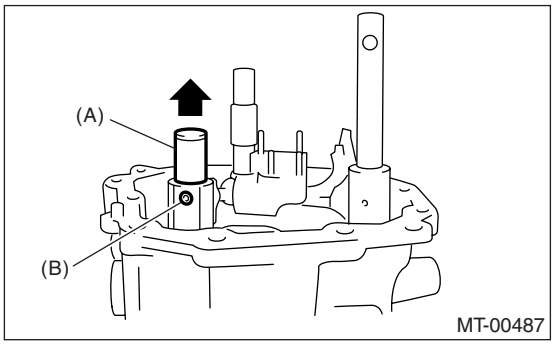

(A) Striking rod
(B) Spring pin

9) Remove the selector arm No.2 and shifter arm.

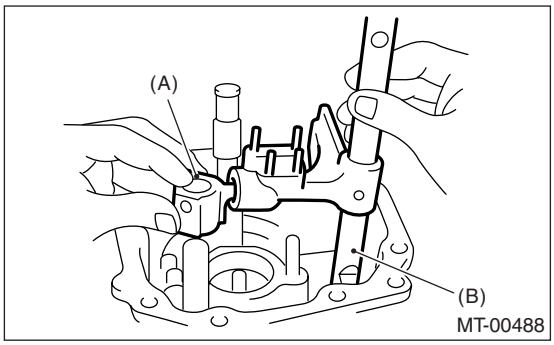

(A) Selector arm No.2
(B) Shifter arm

10) Install the bearing cone to transfer driven gear.

11) Set the ST.
ST 18831AA000 GAUGE

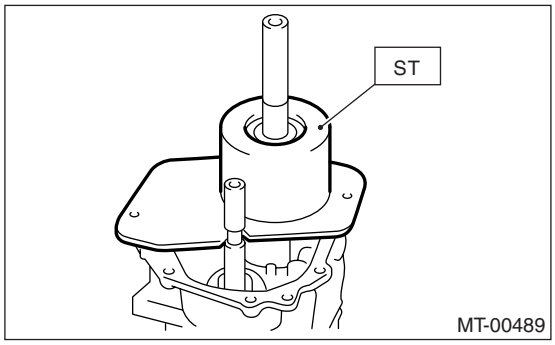

12) Rotate the transfer driven gear approx. ten times to get the bearing accustomed.
13) Measure the depth “Y” between end of ST and bearing cone.
ST 18831AA000 GAUGE

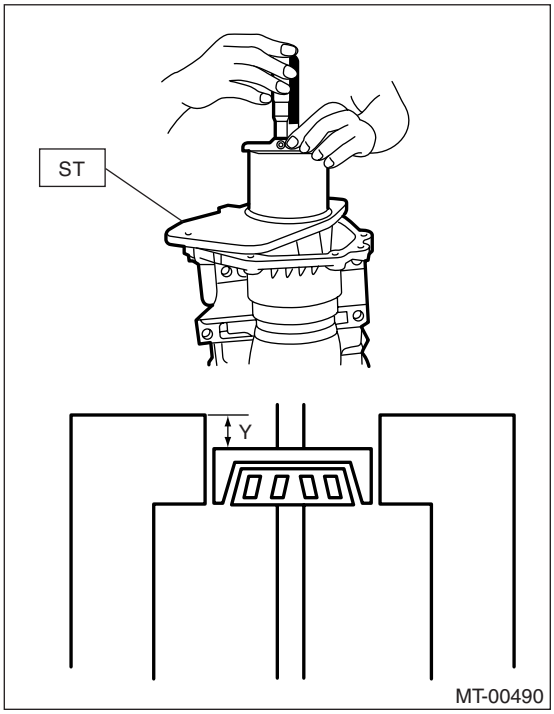

14) Calculate the value “t” of transfer driven gear bearing thrust washer using the following equation.
t = Z − (100 − Y) − { −0.04 to 0.11 mm (−0.0016 to 0.0043 in)}

t mm (in)	Thickness of transfer driven gear bearing thrust washer.
Y mm (in)	Depth from end of ST to bearing cone.
Z mm (in)	Depth from end of extension case to contact point of bearing cone.
−0.04 — 0.11 mm (−0.0016 — 0.0043 in)	Standard clearance between thrust washer and taper roller bearing.
100 mm (3.94 in)	Height of ST.

15) Select the nearest thrust washer from the following table, according to the calculated value “t”.

Standard clearance between thrust washer and taper roller bearing:
−0.04 — 0.11 mm T (−0.0016 — 0.0043 in T)

NOTE:
T: Tight

Thrust washer (50 × 61 × t)	
Part No.	Thickness t mm (in)
803050060	0.50 (0.0197)
803050062	0.60 (0.0236)
803050064	0.70 (0.0276)
803050066	0.80 (0.0315)
803050068	0.90 (0.0354)
803050070	1.00 (0.0394)
803050072	1.10 (0.0433)
803050074	1.20 (0.0472)
803050076	1.30 (0.0512)
803050078	1.40 (0.0551)

16) Install the selector arm No.2 and shifter arm.

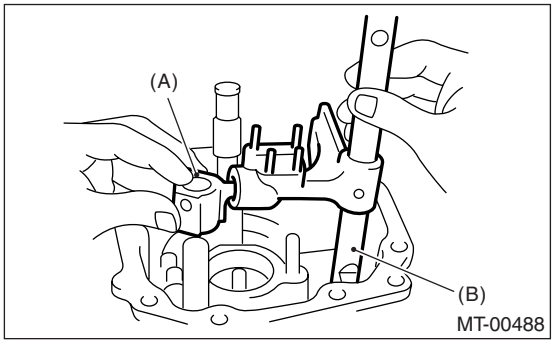

(A) Selector arm No. 2
(B) Shifter arm

17) Install a new spring pin.
18) Install the support to neutral set spring.

NOTE:
Make sure to install the support in proper direction.

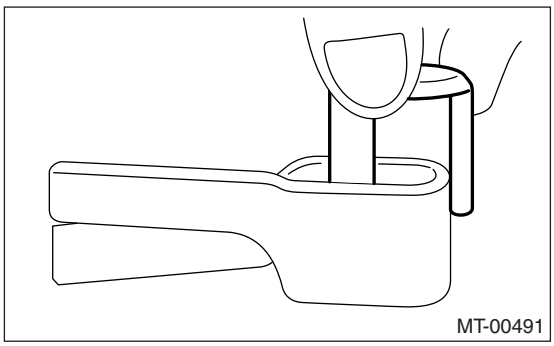

19) Using the ST, install the neutral set spring and support.
ST1 18756AA000CLAW
ST2 398663600 PLIERS

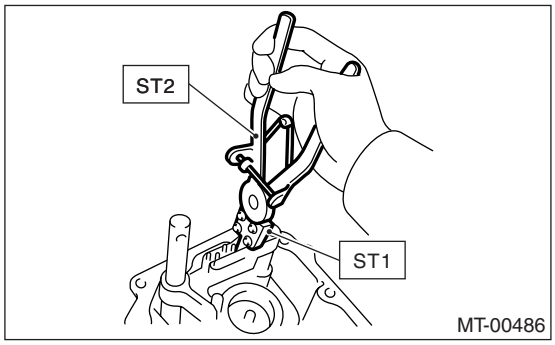

20) Install the snap ring.
21) Install the center differential.

2. SELECTING THE TRANSFER DRIVE GEAR THRUST WASHER

1) Measure the height “Z” between end of transmission case and end of ST.
ST 398643600 GAUGE

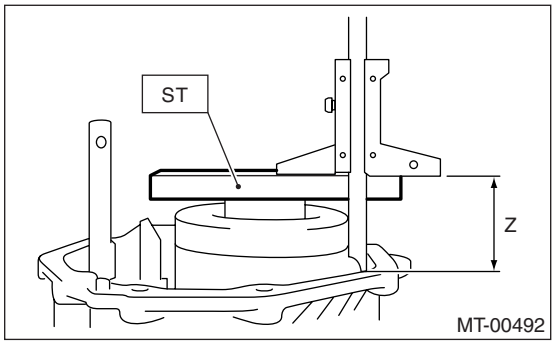

2) Measure the depth “Y” between end of ST and transfer drive gear.
ST 398643600 GAUGE

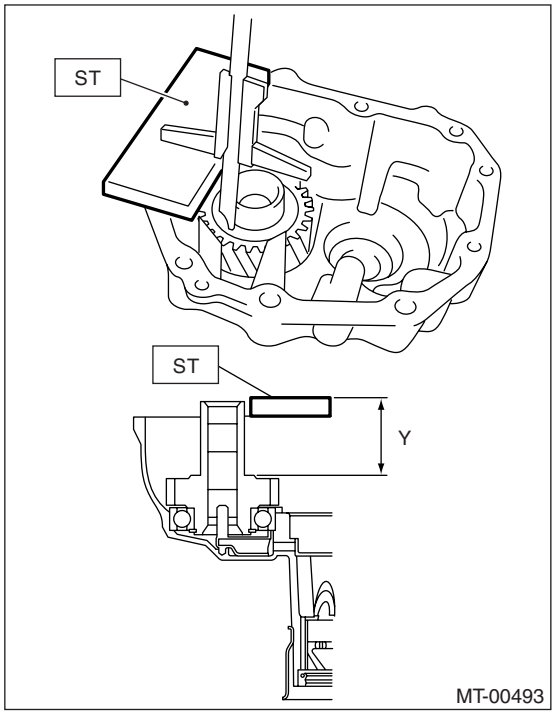

3) Calculate the value “t” of transfer drive gear thrust washer using the following equation.
t = {Y − 15 mm (1.18 in)} − {Z − 15 mm (1.18 in)} − 0.45 to 0.65 mm (0.018 to 0.026 in)

t mm (in)	Thickness of transfer drive gear thrust washer
Y mm (in)	Depth from end of ST to transfer drive gear
Z mm (in)	Height from end of transmission case to the end of ST
0.45 — 0.65 mm (0.018 — 0.026 in)	Standard clearance between thrust washer and transfer drive gear.
15 mm (1.18 in)	Thickness of ST

4) Select the nearest thrust washer from the following table, according to the calculated value “t”.

Standard clearance between thrust washer and transfer drive gear:
0.45 — 0.65 mm (0.018 — 0.026 in)

Thrust washer (36.3 × 52 × t)	
Part No.	Thickness mm (in)
803036070	0.80 (0.0315)
803036071	0.95 (0.0374)
803036072	1.10 (0.0433)
803036073	1.25 (0.0492)
803036074	1.40 (0.0551)
803036075	0.65 (0.0256)

5) Install the selected thrust washer.

13.Reverse Checking System

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
4) Remove the snap ring and washer from reverse check shaft.

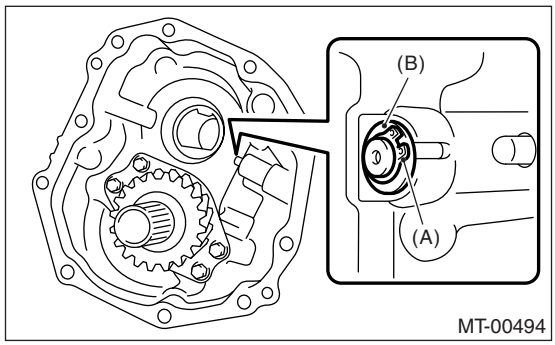

(A) Snap ring
(B) Washer

5) Remove the reverse check shaft and spring from extension case.

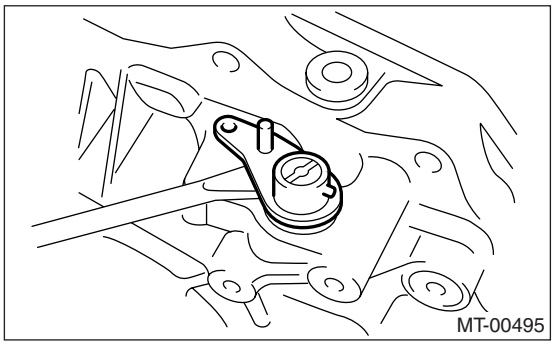

6) Remove the spring pin, and then remove the reverse check lever and oil seal from reverse check shaft.

NOTE:
Do not reuse the oil seal.

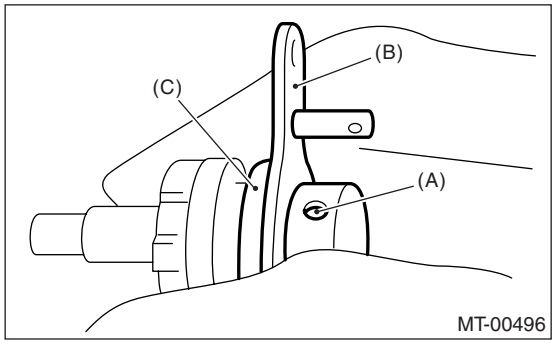

(A) Spring pin
(B) Reverse check lever
(C) Oil seal

7) Remove the plug from extension case, then remove the gasket, spring and plunger.

NOTE:
Do not reuse the gasket.

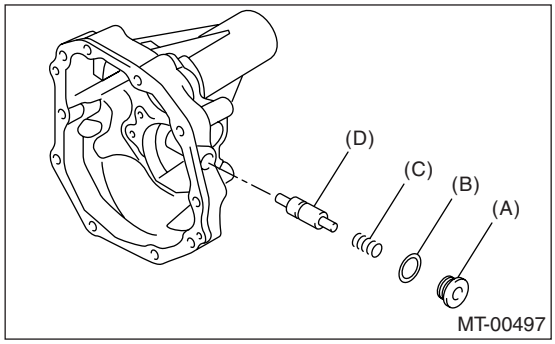

(A) Plug
(B) Gasket
(C) Spring
(D) Plunger

8) Remove the reverse lock plunger.

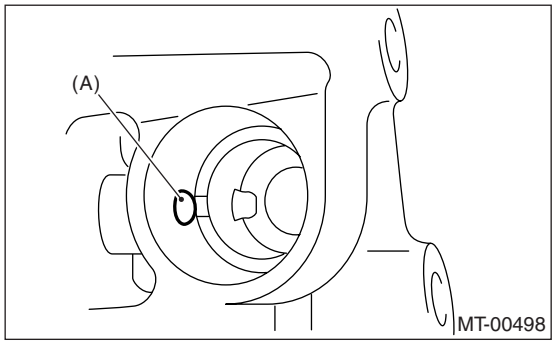

(A) Reverse lock plunger

B: INSTALLATION

1) Insert the reverse lock plunger.
2) Install in the order of reverse check plug, spring, gasket and plug.

Tightening torque:
41 N·m (4.2 kgf-m, 30.2 ft-lb)

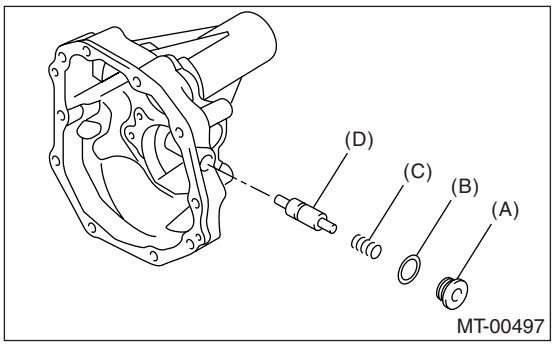

(A) Plug
(B) Gasket
(C) Spring
(D) Reverse check plug

3) Install the spring and reverse check shaft to extension case.

NOTE:
Be sure the spring end aligns with the hole of reverse check shaft and cutout portion of extension case.

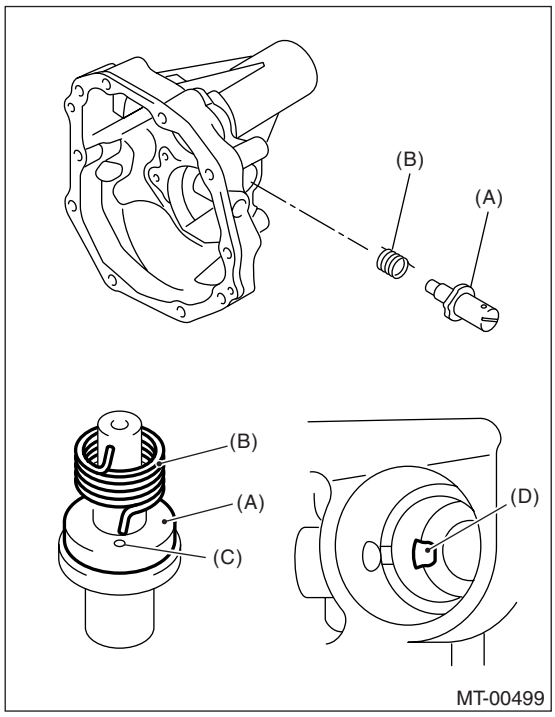

(A) Reverse check shaft
(B) Spring
(C) Hole
(D) Cutout portion

4) Install the washer and snap ring.

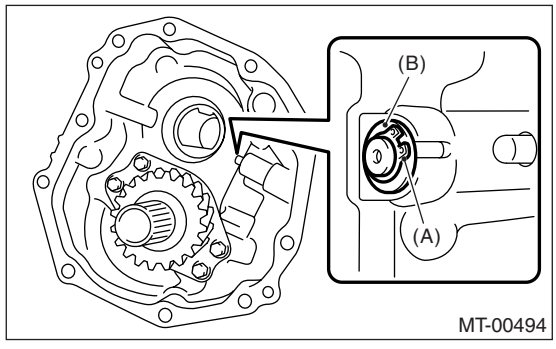

(A) Snap ring
(B) Washer

5) Set the ST1 to reverse check shaft. Install a new oil seal, then press with ST2.
ST1 18671AA000OIL SEAL GUIDE
ST2 18657AA010 INSTALLER

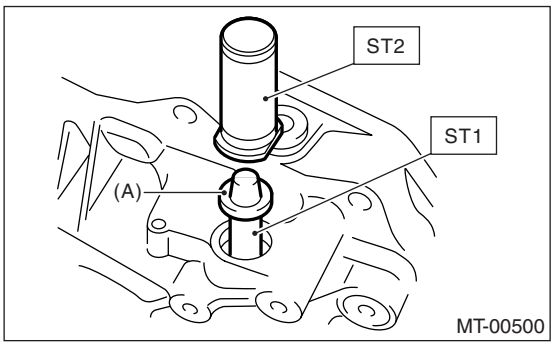

(A) Oil seal

6) Insert the reverse check lever, then rotate the reverse check shaft until the plunger can be pushed in first.

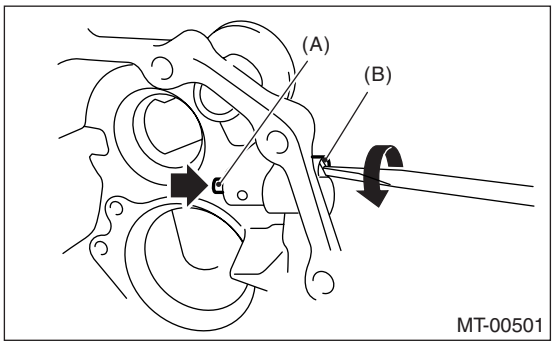

(A) Plunger
(B) Reverse check shaft

7) Align the hole of reverse check lever and reverse check shaft, then install the spring pin.

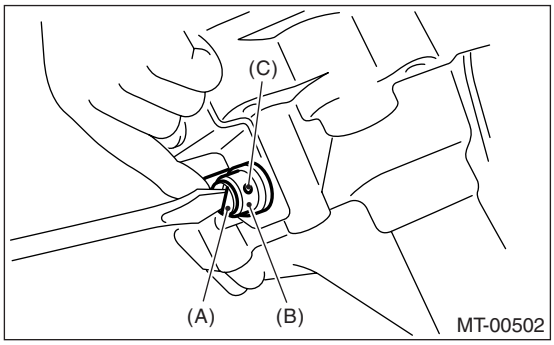

(A) Reverse check shaft
(B) Reverse check lever
(C) Hole

8) Make sure the reverse check operates correctly. <Ref. to 6MT-57, INSPECTION, Reverse Checking System.>

9) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
10) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1) Make sure there is no damage on each parts.
2) Make sure the reverse check lever operates smoothly.
3) Make sure there is no oil leakage on oil seal part of reverse check shaft. If there is oil leakage, replace the oil seal.
4) Inspect the reverse check operation.
(1) The plunger can be pushed or the gear can be shifted to reverse, when reverse check lever is in the following position.

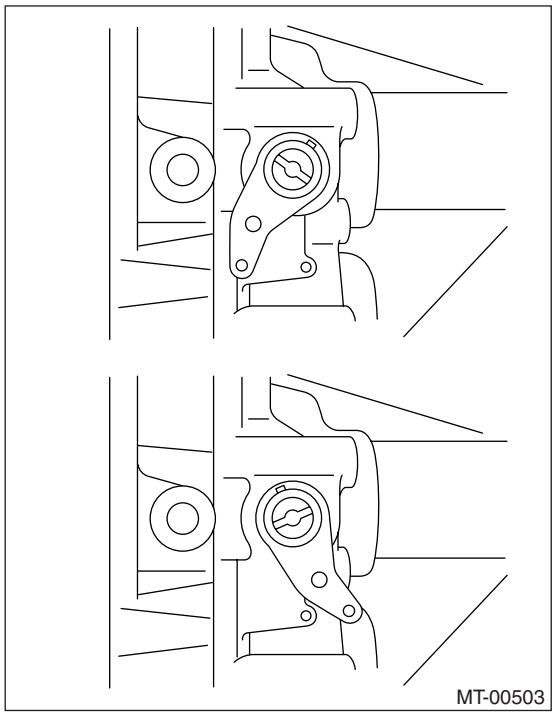

(2) The plunger cannot be pushed or the gear cannot be shifted to reverse, when reverse check lever is in the following position.

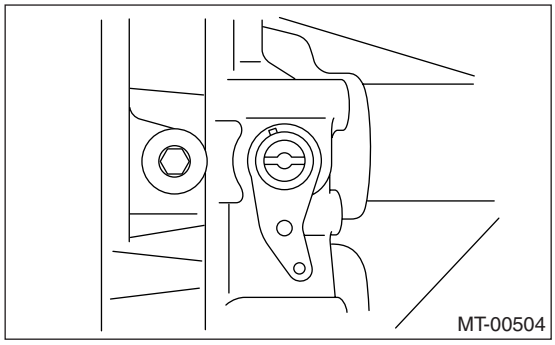

5) If not as specified, reassemble the reverse check system.

14.Transfer Drive Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
4) Remove the transfer drive gear.

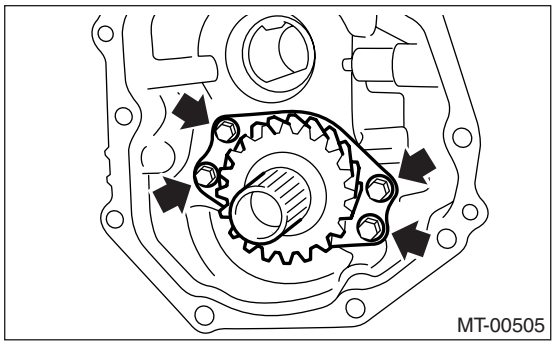

B: INSTALLATION

1) Install the transfer drive gear.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

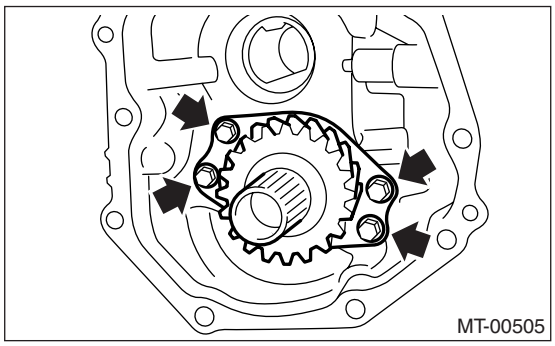

2) If the ball bearing, transfer drive gear or snap ring is replaced, select the transfer drive gear thrust washer. <Ref. to 6MT-50, ASSEMBLY, Extension Case.>
3) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
4) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the snap ring.

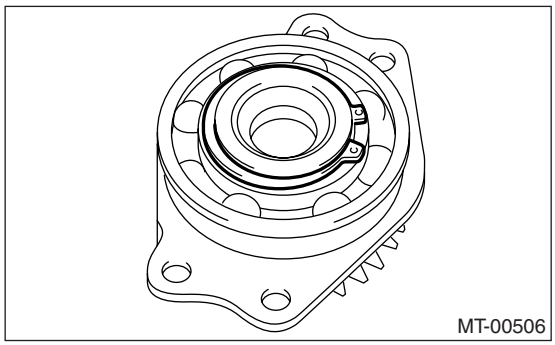

2) Using the ST, remove the ball bearing.
ST 499877000 RACE 4-5 INSTALLER

NOTE:
Do not reuse the ball bearing.

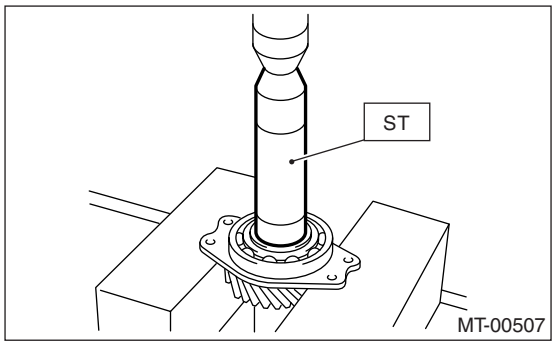

D: ASSEMBLY

1) Using the ST, install the ball bearing.
ST1 499247400 INSTALLER
ST2 398497701 SEAT

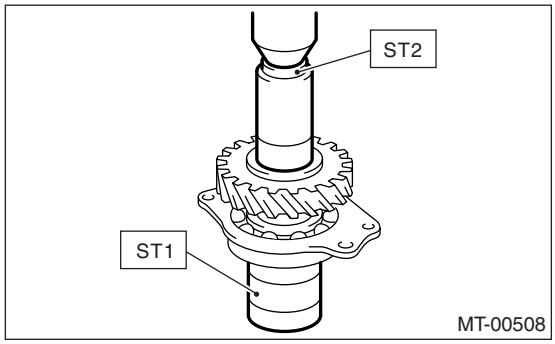

2) Install the snap ring.

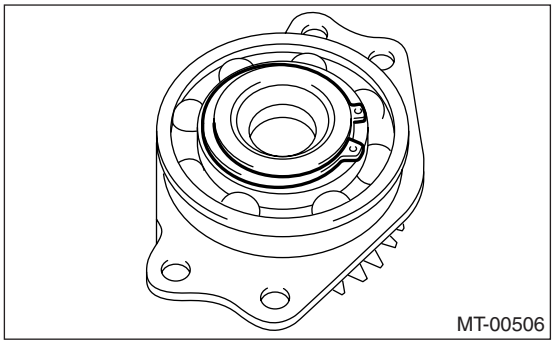

3) Inspect the clearance between snap ring and ball bearing. <Ref. to 6MT-59, INSPECTION, Transfer Drive Gear.>

E: INSPECTION

1) Bearings
Replace the bearings in the following cases.
- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make abnormal noise.

2) Drive gear
Replace the drive gear in the following cases.
- If their tooth surface and shaft are excessively broken or damaged.

3) Measure the clearance between snap ring and inner race of ball bearing with a thickness gauge.

Standard clearance between snap ring and inner race:
0 — 0.15 mm (0 — 0.0059 in)

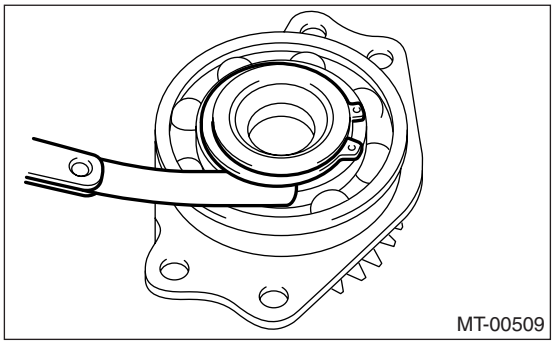

4) If the measurement is not within specifications, select suitable snap ring.

Thrust washer	
Part No.	Thickness mm (in)
805045050	1.76 (0.069)
805045060	1.88 (0.074)
805045070	2.00 (0.079)

After replacement of the snap ring, inspect the clearance again.

15.Transfer Driven Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
4) Remove the transfer driven gear.

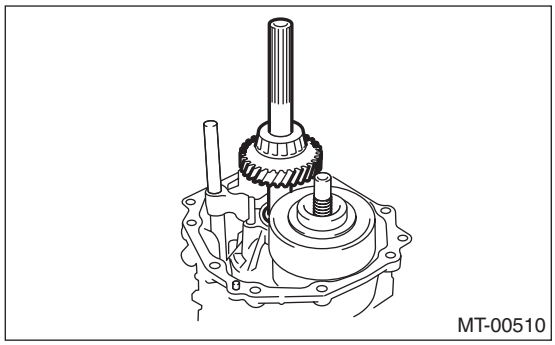

B: INSTALLATION

1) Install the transfer driven gear.

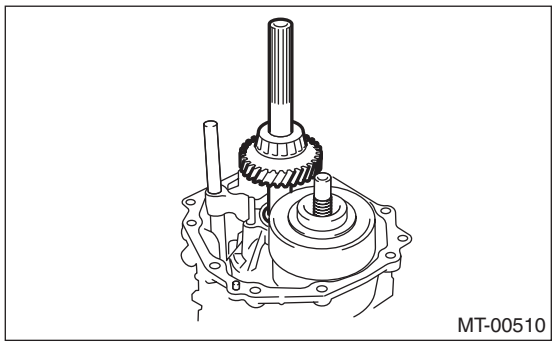

2) If the bearing or transfer driven gear is replaced, select the transfer driven thrust washer. <Ref. to 6MT-51, ADJUSTMENT, Extension Case.>
3) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
4) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Using the ST, remove the roller bearing of extension case side.
ST 498515700 REMOVER

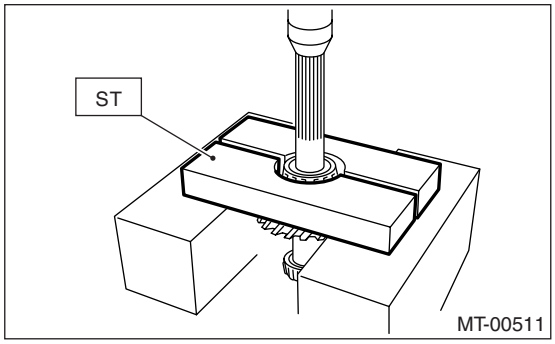

2) Using the ST, remove the roller bearing of transmission case side.
ST1 899858600 REMOVER
ST2 899864100 REMOVER

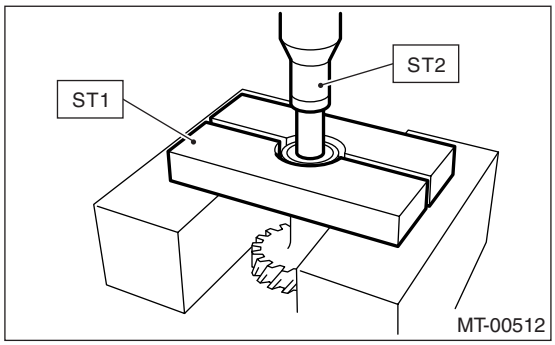

D: ASSEMBLY

1) Using the ST, install the roller bearing of extension case side.
ST1 398177700 INSTALLER
ST2 899864100 REMOVER

CAUTION:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

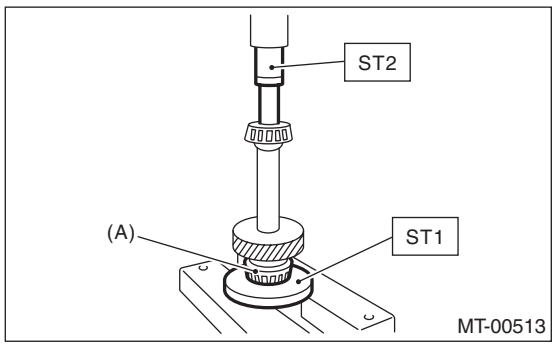

(A) Roller bearing

2) Using the ST, install the roller bearing of transmission case side.
ST 499757002INSTALLER

CAUTION:
Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

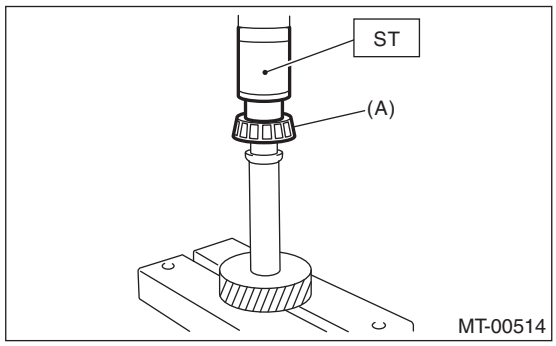

(A) Roller bearing

E: INSPECTION

1) Bearings
Replace the bearing in following cases.
- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.

2) Driven gear
Replace the driven gear in following case.
- If their tooth surfaces and shaft are excessively broken or damaged.

16.Center Differential

A: REMOVAL

1) Remove the manual transmission case assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
4) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
5) Remove the thrust washer and center differential.

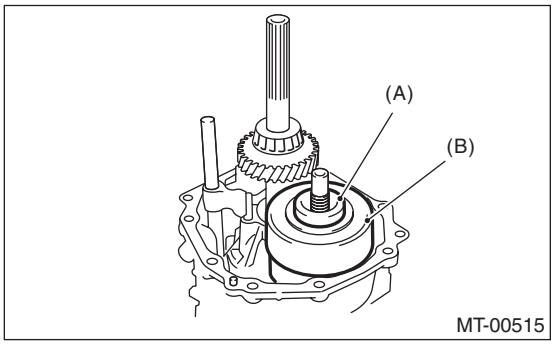

(A) Thrust washer
(B) Center differential

6) Remove the needle bearing.

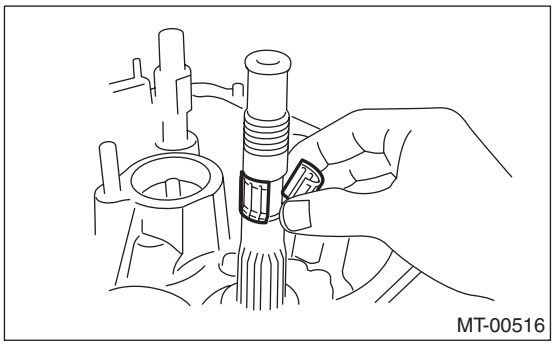

B: INSTALLATION

1) Install the needle bearing.

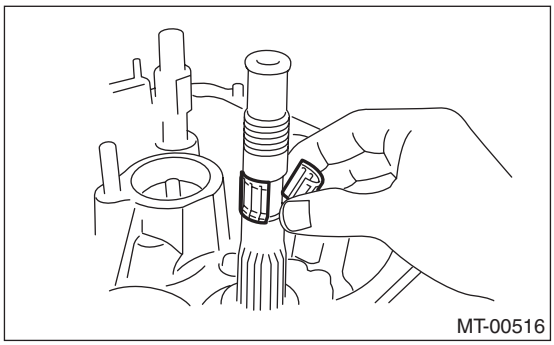

2) Install the thrust washer and center differential.

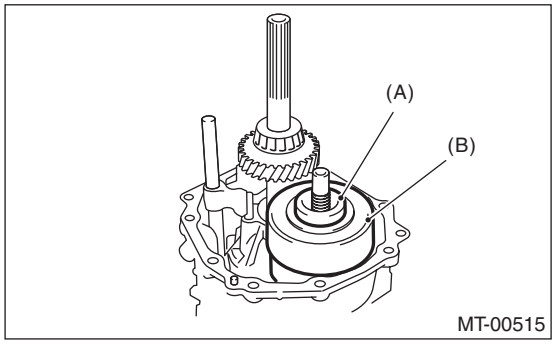

(A) Thrust washer
(B) Center differential

3) If replacing the center differential, select the transfer drive gear and thrust washer and install. <Ref. to 6MT-51, ADJUSTMENT, Extension Case.>
4) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
5) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
6) Install the manual transmission case assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

Make sure there is no damage on the center differential. Replace if damaged.

17.Oil Pump

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
4) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
5) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
6) Remove the oil guide.

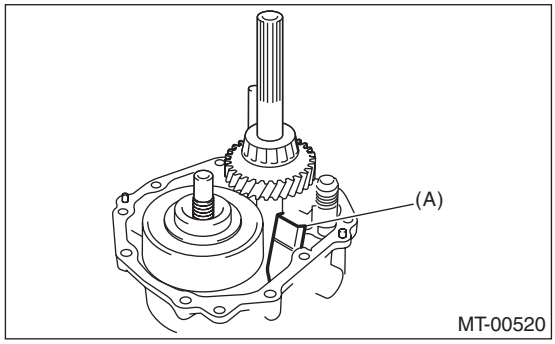

(A) Oil guide

7) Remove the snap ring.

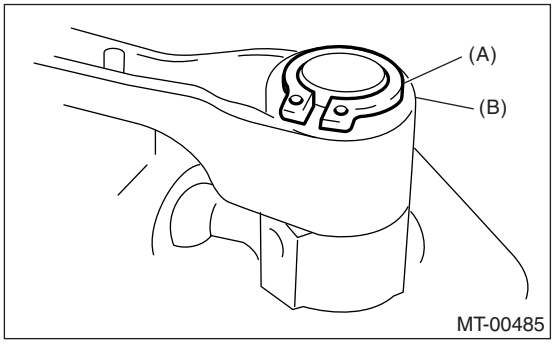

(A) Snap ring
(B) Support

8) Using the ST, remove the neutral set spring and support.
ST1 18756AA000 CLAW
ST2 398663600 PLIERS

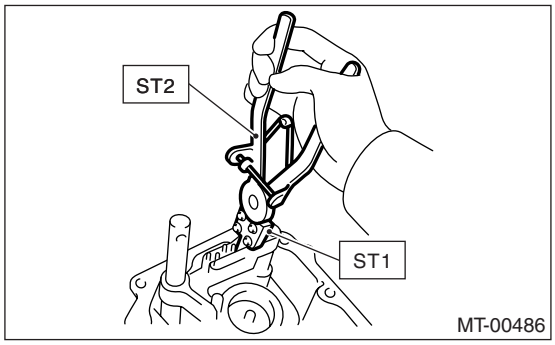

9) Raise the striking rod up, and then remove the spring pin.

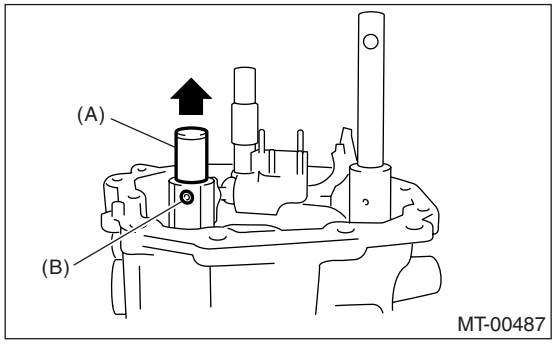

(A) Striking rod
(B) Spring pin

10) Remove the selector arm No.2 and shifter arm.

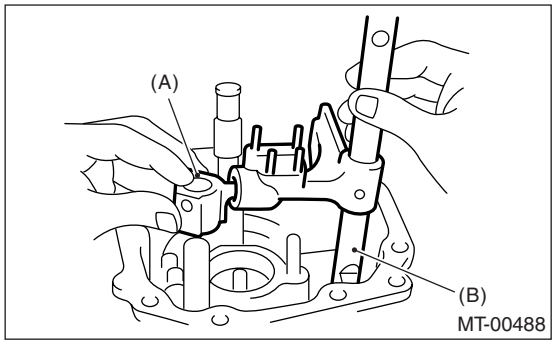

(A) Selector arm No. 2
(B) Shifter arm

11) Remove the oil pump shaft assembly and plate.

NOTE:
Remove the bolts using ST, because tool may break if general tool is used.
ST 18663AA000 SOCKET

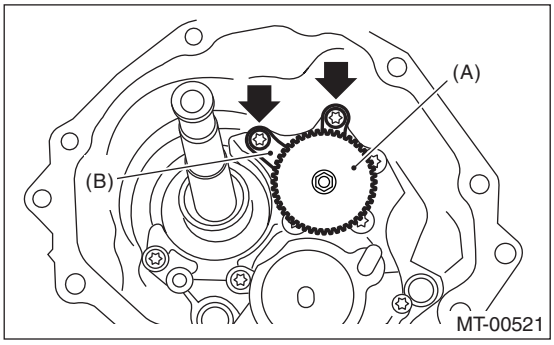

(A) Oil pump shaft assembly
(B) Plate

12) Remove the oil pump cover assembly.

NOTE:
Remove the bolts using ST, because tool may break if general tool is used.
ST 18663AA000 SOCKET

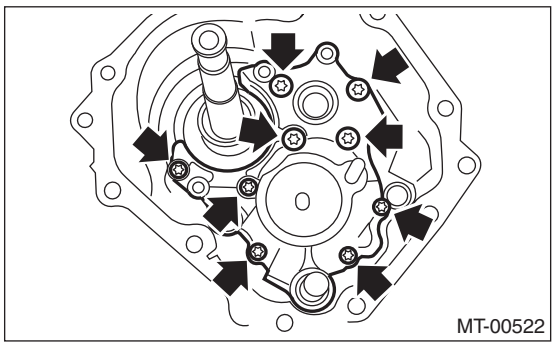

13) Remove the thrust washer on main shaft part.
14) Remove the oil pump rotor.

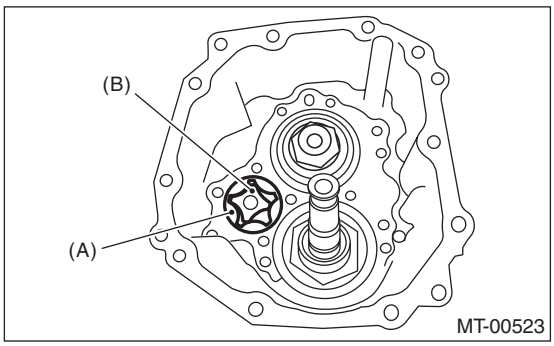

(A) Outer rotor
(B) Inner rotor

B: INSTALLATION

1) Apply oil to the outer periphery of outer rotor, then install to transmission case.

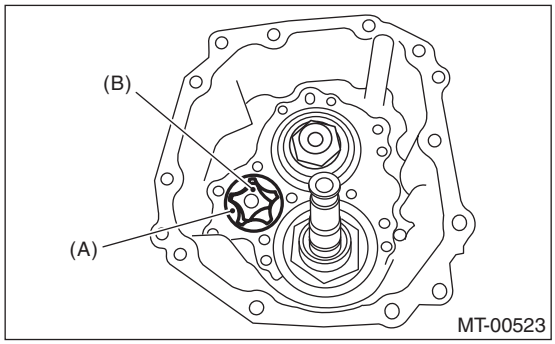

(A) Outer rotor
(B) Inner rotor

2) Install the thrust washer to main shaft part.
3) Install the oil pump cover assembly.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

ST 18663AA000 SOCKET

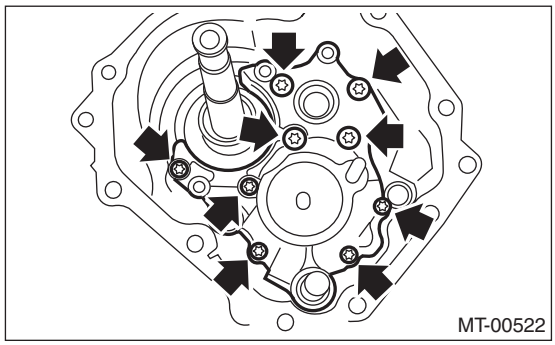

4) Install the oil pump shaft assembly and plate.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

ST 18663AA000 SOCKET

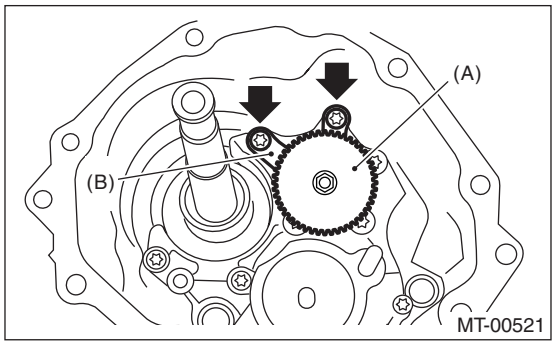

(A) Oil pump shaft assembly
(B) Plate

5) If replacing the oil pump cover assembly, select the transfer driven gear and thrust washer, then install them to the extension case. <Ref. to 6MT-51, ADJUSTMENT, Extension Case.>
6) Install the selector arm No.2 and shifter arm.

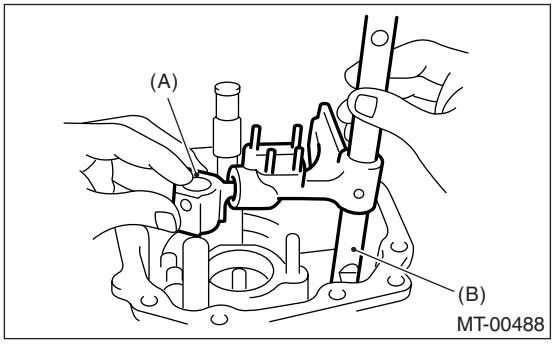

(A) Selector arm No. 2
(B) Shift arm

7) Install a new spring pin.
8) Install the support to neutral set spring.

NOTE:
Make sure to install the support in proper direction.

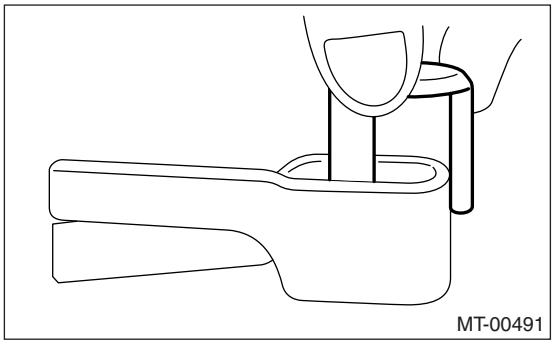

9) Using the ST, install the neutral set spring and support.
ST1 18756AA000 CLAW
ST2 398663600 PLIERS

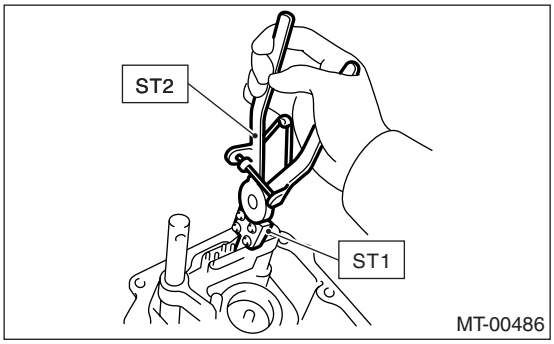

10) Install the snap ring.
11) Install the oil guide.

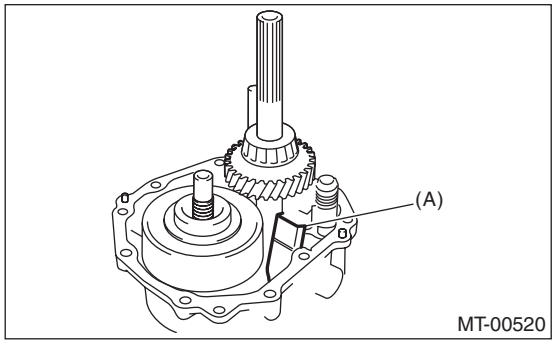

(A) Oil guide

12) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
13) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
14) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
15) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1) Make sure there is no damage on the inner rotor and outer rotor. Replace the inner rotor and outer rotor as assembly if damaged.
2) Clearance at tip
Install the inner rotor and outer rotor to transmission case. Align tip of the inner rotor and outer rotor, then measure the clearance. Replace the inner rotor and outer rotor as a set if clearance exceeds specification.

Specification of clearance at tip:
Less than 0.15 mm (0.0059 in)

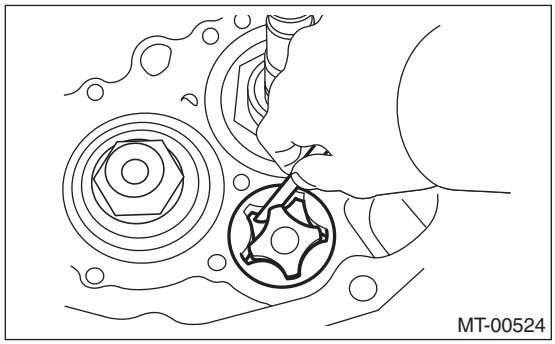

3) Side clearance
Measure to the transmission case and rotor. Replace the inner rotor and outer rotor as a set if clearance exceeds specification.

Specification of side clearance:
0.03 — 0.10 mm (0.0012 — 0.0039 in)

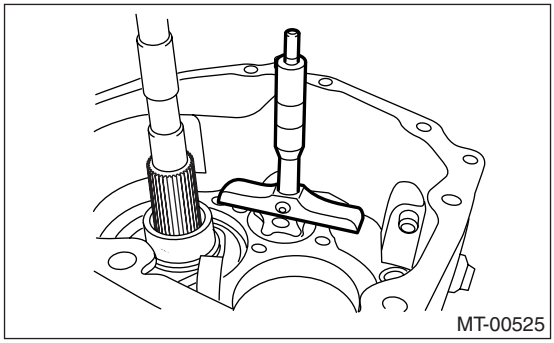

18.Transmission Case

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the shim and spacer of driven gear assembly.

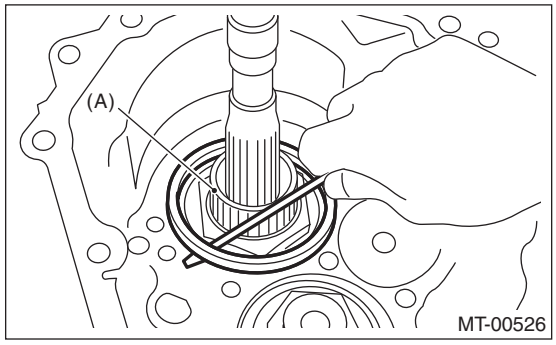

(A) Driven gear assembly

9) Remove the snap ring.

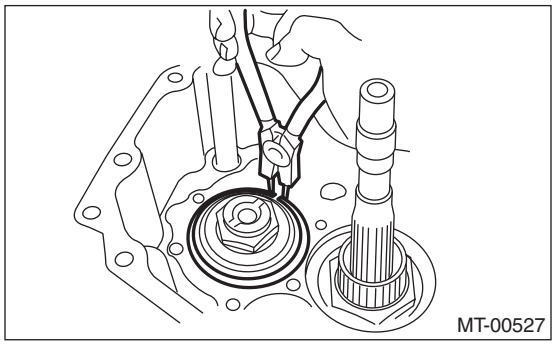

10) Remove the pilot bolt.

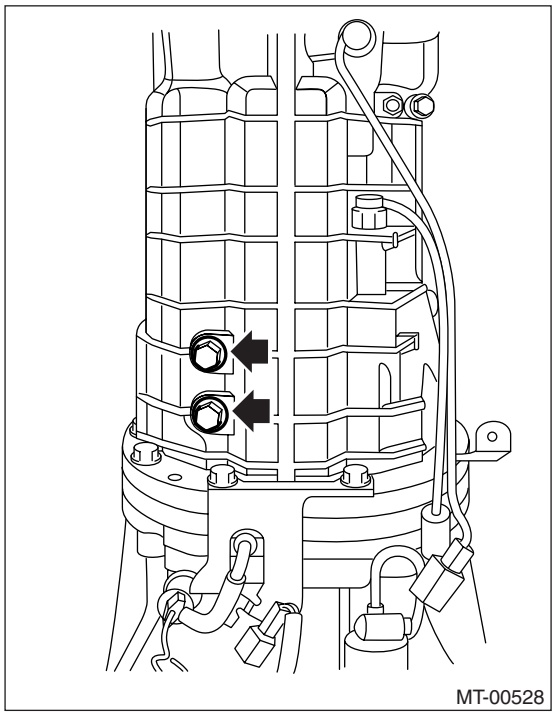

11) Remove the holder reverse bolt.

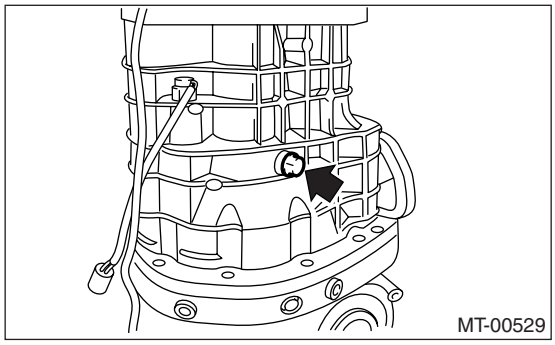

12) Remove the transmission case.

NOTE:
If the oil guide catches on shift fork, the transmission case may be difficult to be removed. Move the oil guide right and left to remove. Do not pull the transmission case by force.

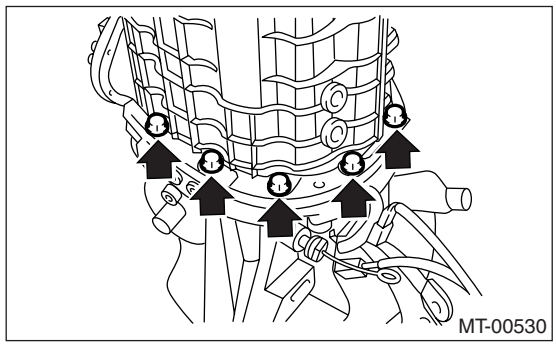

13) Completely remove the remaining liquid gasket on transmission case and adapter plate.

B: INSTALLATION

1) Make sure that each shifter fork and interlock block is shifted to neutral position. If not, shift to neutral position.

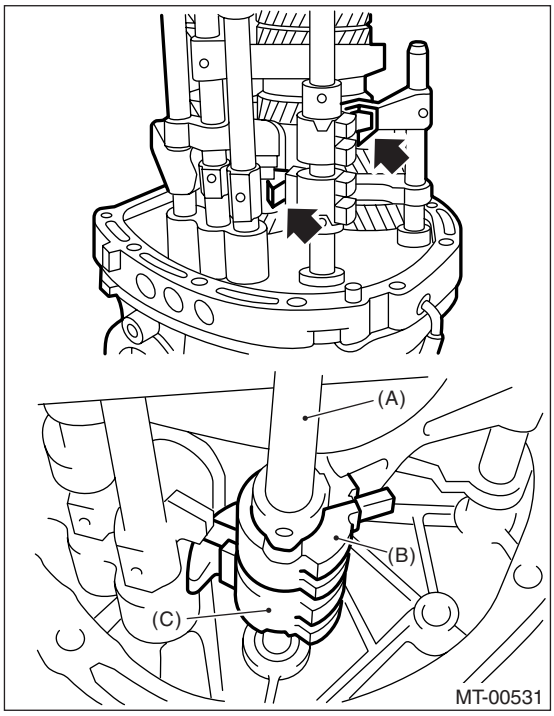

(A) Striking rod
(B) Reverse interlock block
(C) Interlock block

2) Apply liquid gasket to the adapter plate.

Liquid gasket:
THREE BOND 1215

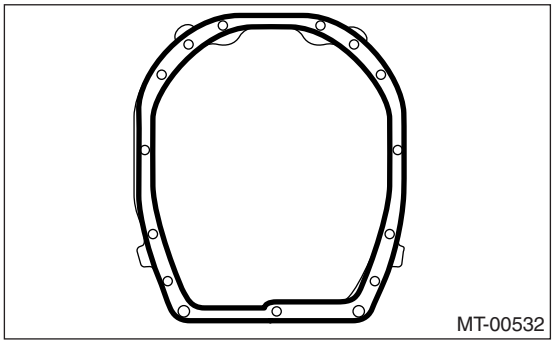

3) Install the transmission case.

4) Make sure the interlock block and reverse interlock block are aligned in neutral position by inspecting through the pilot bolt installation hole. If not aligned, remove the transmission case, then shift each shifter fork and interlock block to neutral position.

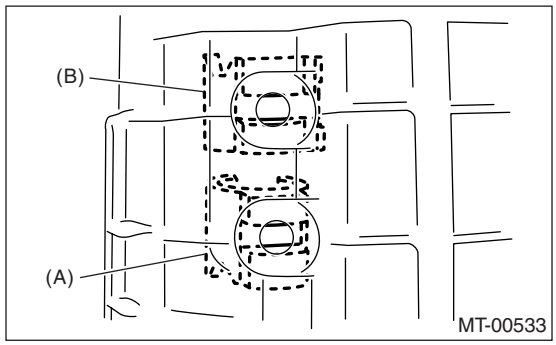

(A) Interlock block
(B) Reverse interlock block

5) Using a new gasket, install the pilot bolts temporarily.
6) Tighten the transmission case with bolts and nuts.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

7) Tighten the pilot bolts.

Tightening torque:
34 N·m (3.5 kgf-m, 25.1 ft-lb)

8) Tighten the holder reverse bolt.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

9) Install the snap ring, washer and collar of driven gear assembly.

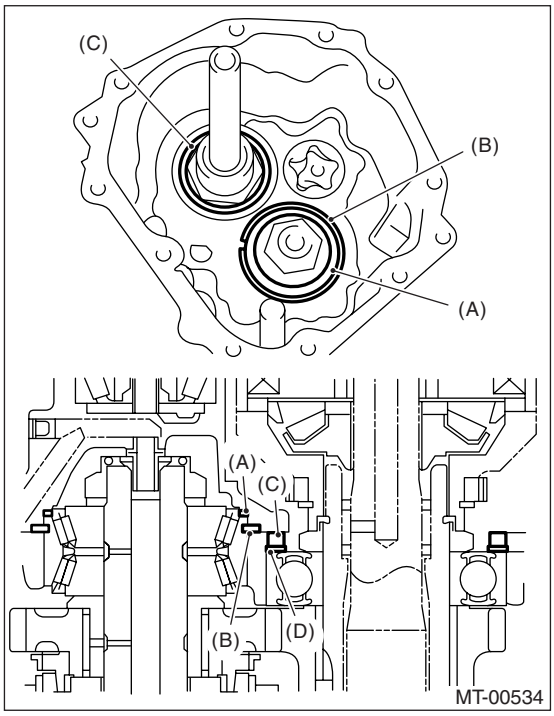

(A) Washer
(B) Snap ring
(C) Collar
(D) Washer

10) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
11) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
12) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
13) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
14) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
15) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the oil pipe and oil guide.

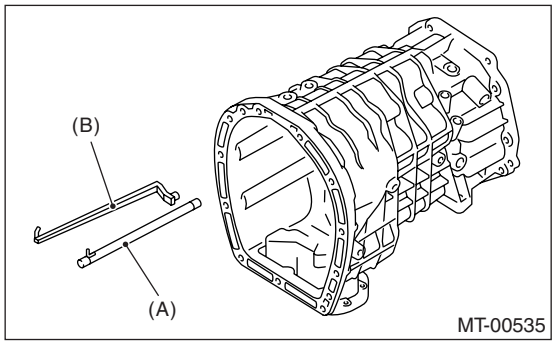

(A) Oil pipe
(B) Oil guide

2) Remove the bolt, and then remove the O-ring, relief spring and relief valve.

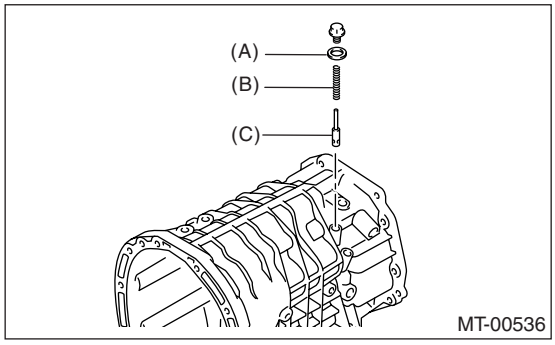

(A) O-ring
(B) Relief valve spring
(C) Relief valve

3) Remove the bolt, and then remove the O-ring, valve spring and ball.

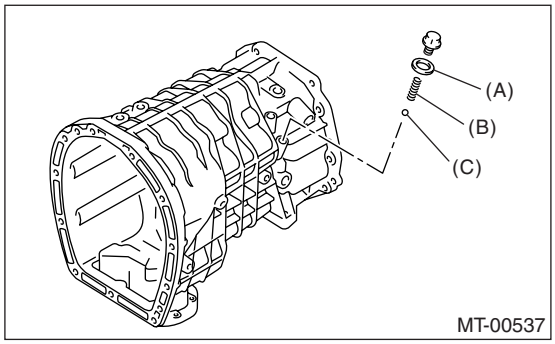

(A) O-ring
(B) Valve spring
(C) Ball

4) Remove the harness bracket.

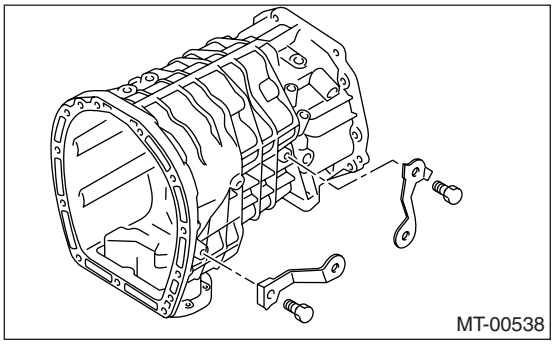

5) Remove the oil pan.

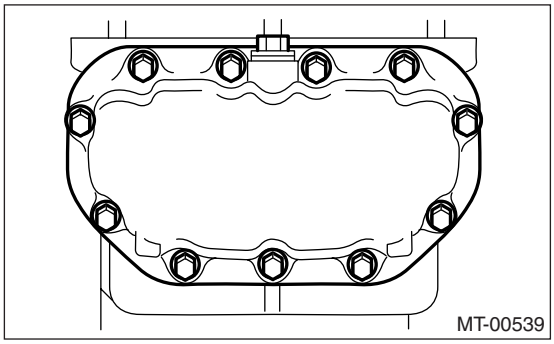

6) Completely remove the remaining liquid gasket on transmission case and oil pan.
7) Remove the oil pan magnet, and then remove the oil strainer.

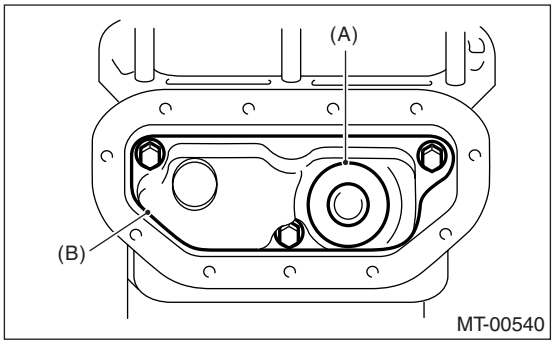

(A) Oil pan magnet
(B) Oil strainer

D: ASSEMBLY

1) Install the oil strainer and magnet.

Tightening torque:
10 N·m (1.0 kgf-m, 7.4 ft-lb)

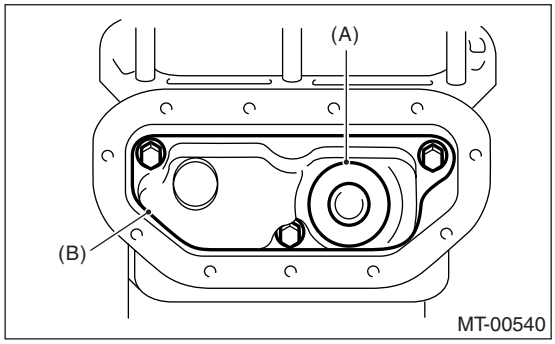

(A) Oil pan magnet
(B) Oil strainer

2) Apply liquid gasket to the oil pan.

Liquid gasket:
THREE BOND 1215

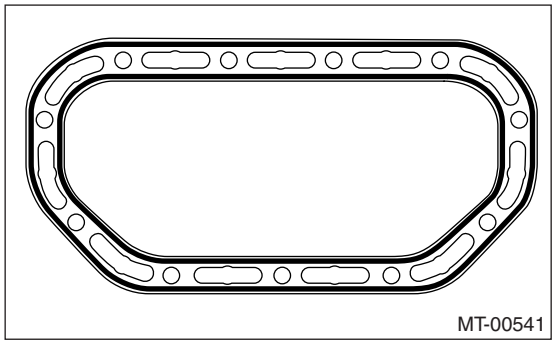

3) Install the oil pan.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

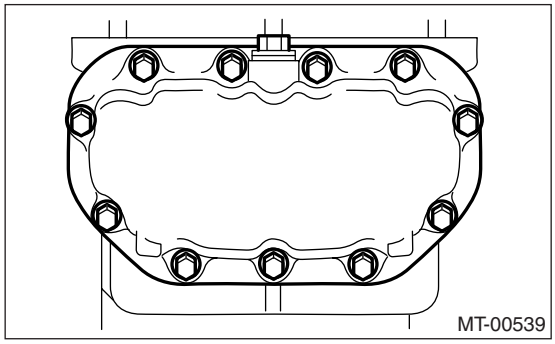

4) Install the relief valve, relief valve spring and new O-ring.

5) Install the ball, valve spring and new O-ring.

Tightening torque:
T1: 13 N·m (1.3 kgf-m, 9.6 ft-lb)
T2: 16 N·m (1.6 kgf-m, 11.8 ft-lb)

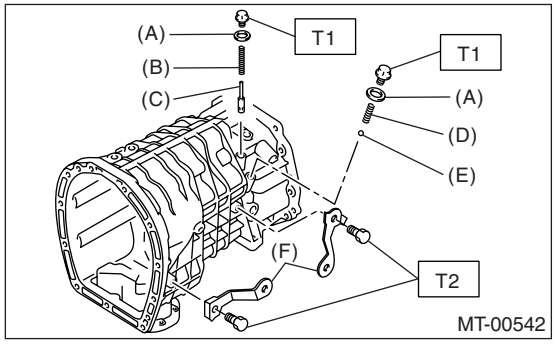

(A) O-ring
(B) Relief valve spring
(C) Relief valve
(D) Valve spring
(E) Ball
(F) Harness bracket

E: INSPECTION

1) Completely remove with shop cloth if sludge is adhered to the oil pan magnet.
2) Make sure there is no clog on the oil strainer. If clogged, remove clog or replace the oil strainer.
3) Make sure there is no damage on each parts. Replace damaged parts with new parts.

19.Main Shaft Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove the striking rod.
10) Using a screwdriver, shift to 4th gear position.

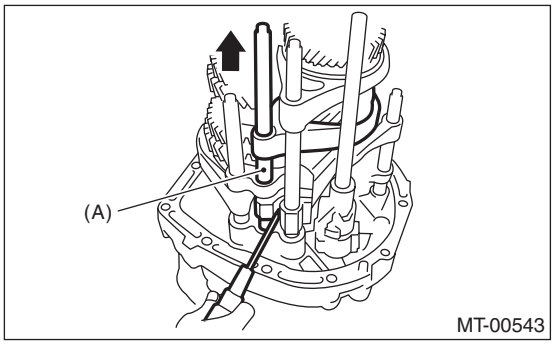

(A) 3rd-4th shift rod

11) Remove the reverse idler holder.

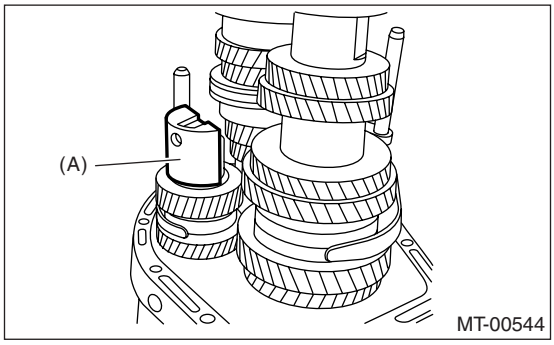

(A) Reverse idler holder

12) Remove all checking plug, gasket, checking spring, plunger and checking ball from adapter plate.

NOTE:
Do not reuse the gasket.

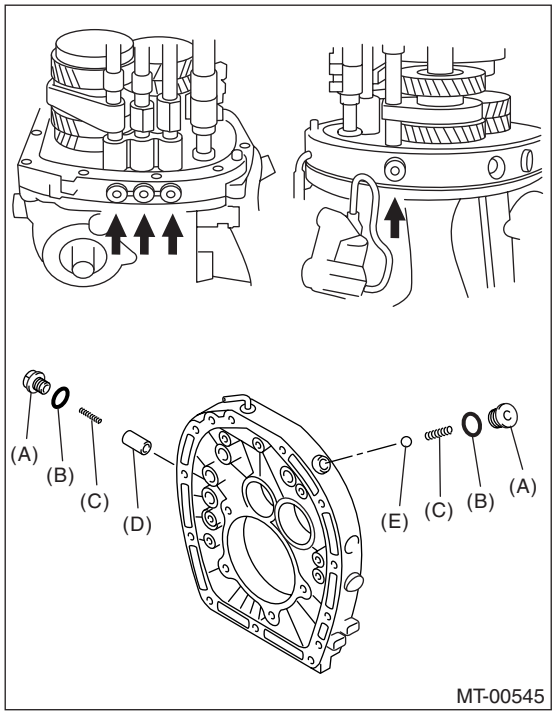

(A) Checking plug
(B) Gasket
(C) Checking spring
(D) Plunger
(E) Checking ball

13) Remove the bolt and gasket installing reverse idler shaft.

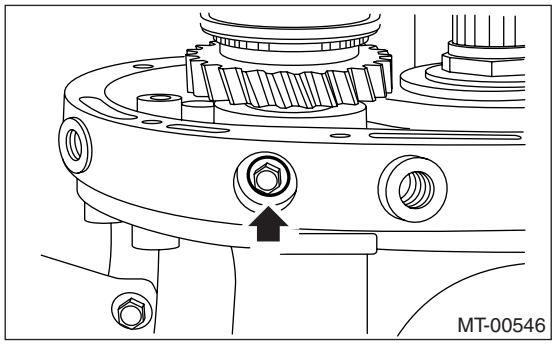

14) Press the main shaft assembly, driven gear assembly, reverse idler gear and each shifter fork, then remove from the adapter plate at once.

NOTE:
Two people should do the work.

B: INSTALLATION

1) Adjust the 3rd-4th, and 5th-6th shifter fork rod. <Ref. to 6MT-119, ADJUSTMENT, Shifter Fork and Rod.>
2) Turn the sub gear counterclockwise for approx. three teeth. Align the sub gear and reverse idler gear hole, then insert the ST.
ST 18757AA000 STRAIGHT PIN

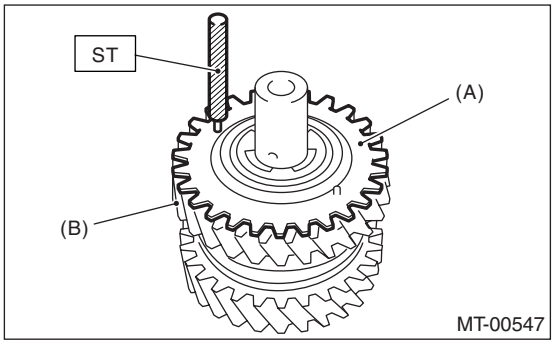

(A) Sub gear
(B) Reverse idler gear

3) Install the driven gear assembly to 1st-2nd shifter fork assembly.

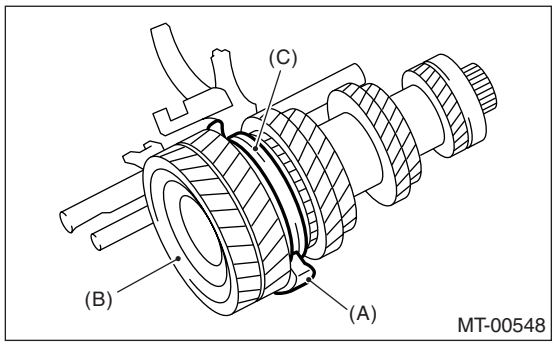

(A) 1st-2nd shifter fork
(B) Driven gear assembly
(C) 1st-2nd sleeve

4) Install the main shaft assembly to 3rd-4th shifter fork, and then assemble to driven gear assembly.

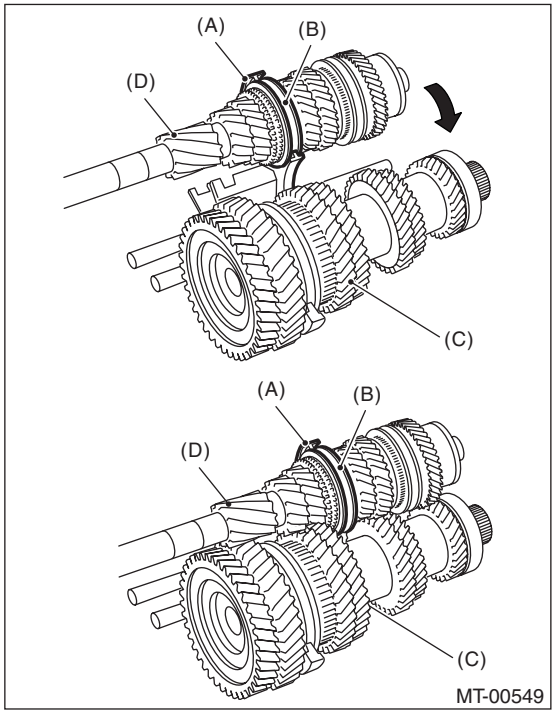

(A) 3rd-4th shifter fork
(B) 3rd-4th sleeve
(C) Driven gear assembly
(D) Main shaft assembly

5) Install the 5th-6th shifter fork assembly to main shaft assembly.

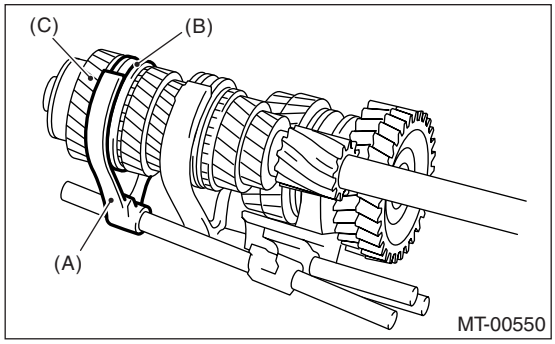

(A) 5th-6th shifter fork
(B) 5th-6th sleeve
(C) Main shaft assembly

6) Install the reverse shifter fork assembly to reverse idler gear assembly.

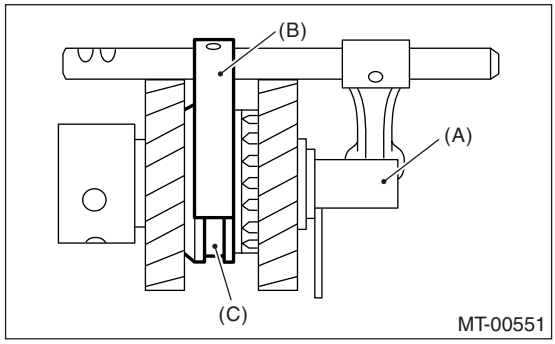

(A) Reverse idler gear assembly
(B) Reverse shifter fork
(C) Reverse sleeve

7) Install the reverse idler gear assembly.

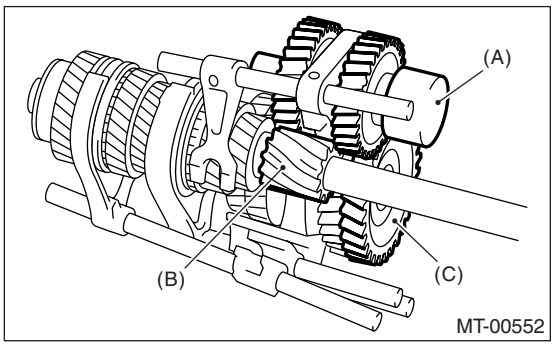

(A) Reverse idler gear assembly
(B) 1st drive gear
(C) Reverse gear

8) Install the thrust bearing of driven gear assembly.
9) Press each shifter fork, main shaft assembly, driven gear assembly and reverse idler gear assembly, then install to the adapter plate at once.

NOTE:
Two people should do the work.

10) Install the plunger, checking spring, new gasket and checking plug.

Tightening torque:
37 N·m (3.8 kgf-m, 27.3 ft-lb)

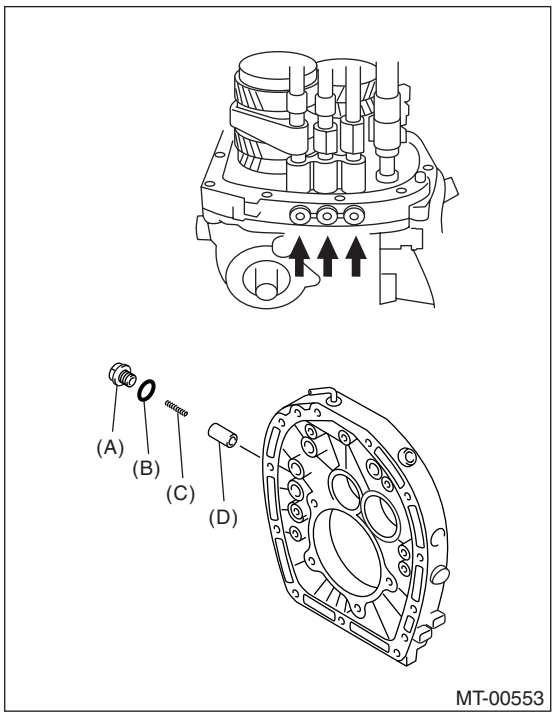

(A) Checking plug
(B) Gasket
(C) Checking spring
(D) Plunger

11) Install the checking ball, checking spring, new gasket and checking plug.

Tightening torque:
37 N·m (3.8 kgf-m, 27.3 ft-lb)

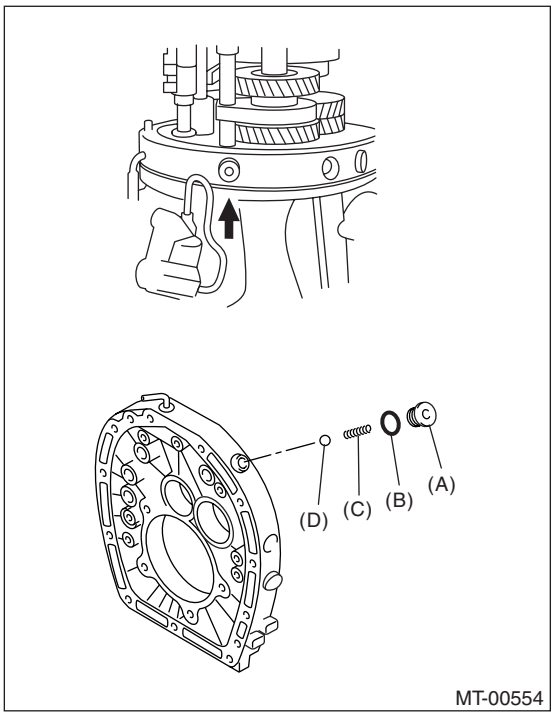

(A) Checking plug
(B) Gasket
(C) Checking spring
(D) Checking ball

12) Install the bolt and new gasket.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

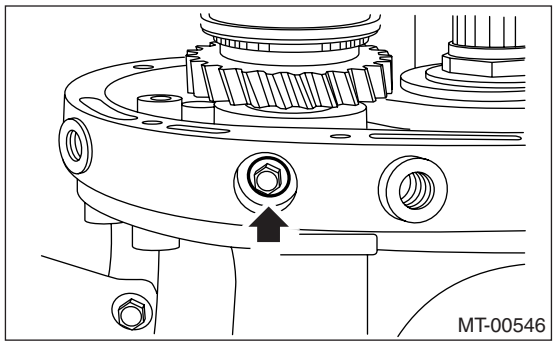

13) Using a screwdriver, shift to 4th gear position.

14) Install the reverse idler holder

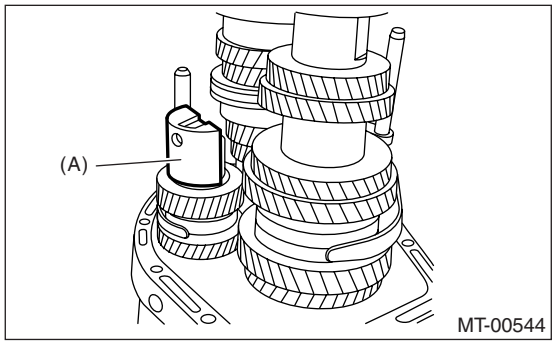

(A) Reverse idler holder

15) Install the striking rod.
16) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
17) Install the selected main shaft snap ring and washer.
18) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
19) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
20) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
21) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
22) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
23) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:
Each sleeve and hub engage at a specified point. Mark an engagement point on the sleeve and hub before disassembly.

1) Secure the ST on workbench.
ST 18664AA000 BASE
2) Lift the caulking of lock nut.
3) Set the main shaft assembly on ST, then remove the lock nut and washer.
ST1 18665AA000 HOLDER
ST2 18664AA000 BASE

NOTE:
Use a 38 mm (1.50 in) socket wrench.

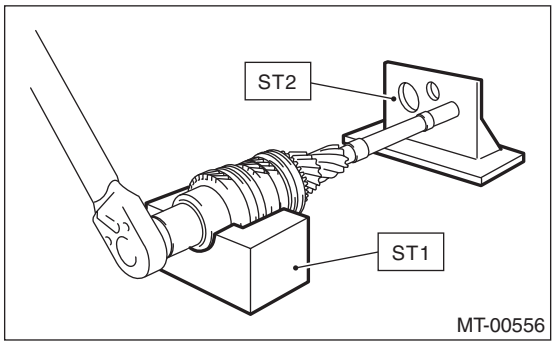

4) Remove the main shaft assembly from ST.
5) Set the ST1 on 6th drive gear, then remove the taper roller bearing, bush and 6th drive gear using press.
ST1 (TY856WX···model) 18722AA000 REMOVER
ST1 (TY856WN···model) 18722AA010 REMOVER
ST2 899864100 REMOVER

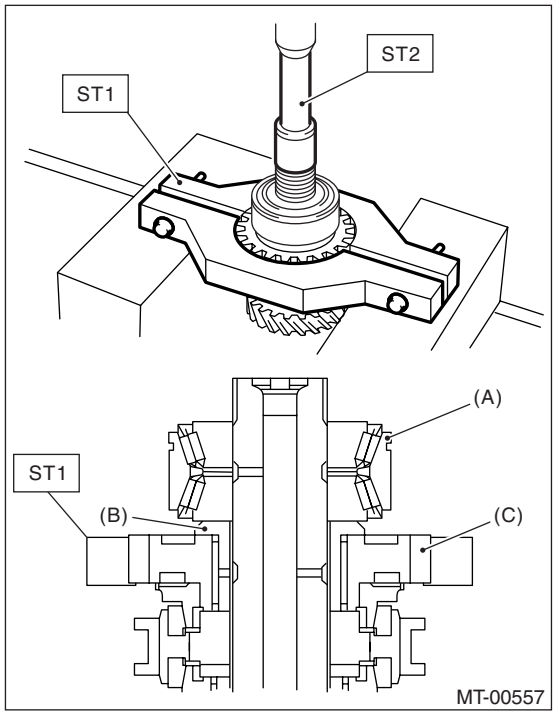

(A) Taper roller bearing
(B) Bush
(C) 6th drive gear

6) Remove the 5th-6th sleeve, 6th needle bearing and 6th baulk ring.

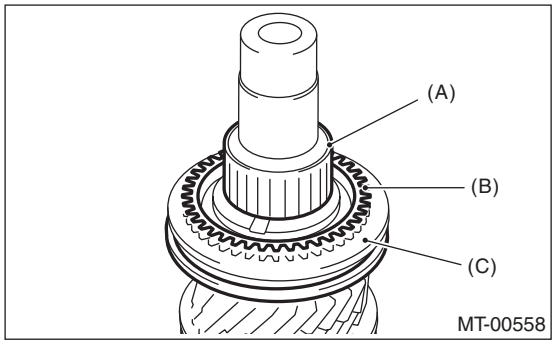

(A) Needle bearing
(B) 6th baulk ring
(C) 5th-6th sleeve

7) Set the ST on 3rd drive gear, then remove each part using press.
ST 18720AA000 REMOVER

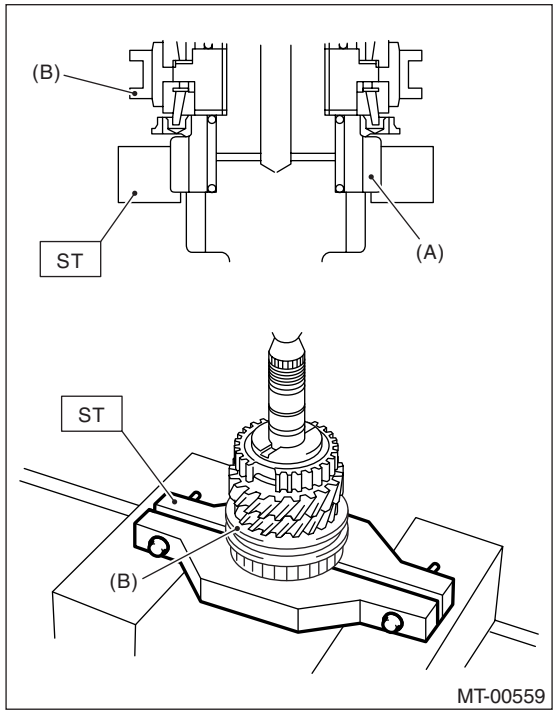

(A) 3rd drive gear
(B) 3rd-4th sleeve

D: ASSEMBLY

NOTE:
Replace the following parts as a set.
- Sleeve and hub
- Outer baulk ring, 3rd synchro cone and inner baulk ring
- Taper roller bearing

1) Sufficiently apply gear oil to the main shaft, 3rd needle bearing and inner periphery of 3rd drive gear.
2) Install the 3rd needle bearing and 3rd drive gear to main shaft.

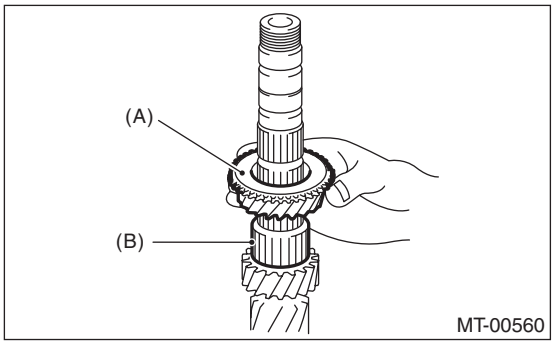

(A) 3rd needle bearing
(B) 3rd drive gear

3) Install the inner baulk ring, 3rd synchro cone and outer baulk ring.

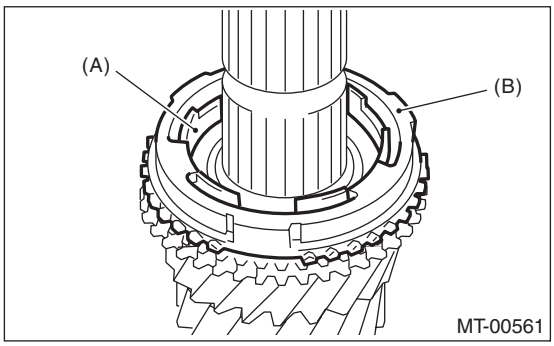

(A) Inner baulk ring
(B) Outer baulk ring

NOTE:
Install the 3rd synchro cone, by aligning protrusion portions of the 3rd synchro cone with 3rd drive gear hole portion.

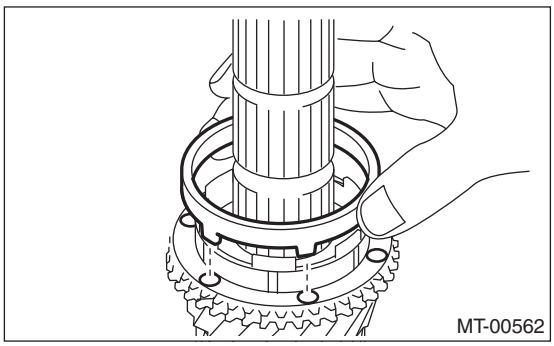

4) Install the 3rd-4th hub and 4th bush.

(1) Set to the main shaft, taking care of 3rd-4th hub installing direction.

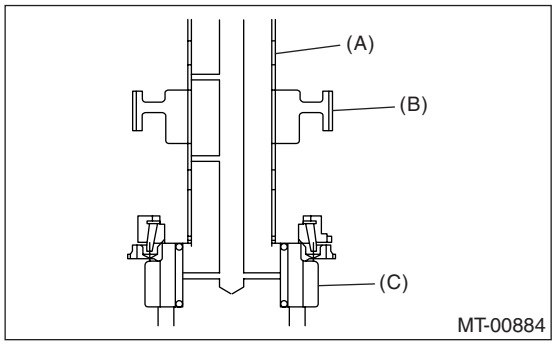

(A) Main shaft
(B) 3rd-4th hub
(C) 3rd drive gear

(2) Set to the main shaft, taking care not to overlap the main shaft oil hole and 4th bush oil hole.

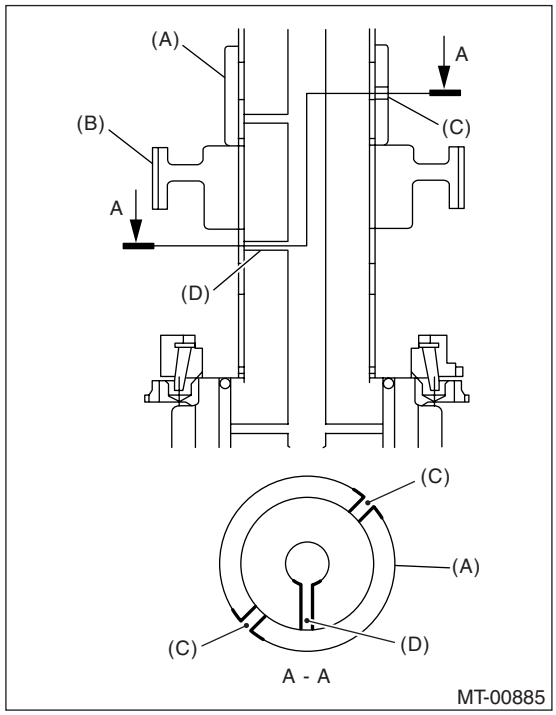

(A) 4th bush
(B) 3rd-4th hub
(C) 4th bush oil hole
(D) Main shaft oil hole

(3) Using the ST, press in the 3rd-4th hub and 4th bush at once.

ST1 18651AA000 INSTALLER
ST2 398177700 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

NOTE:
When pressing in 3rd-4th hub and 4th bush, align the protrusion portion of outer baulk ring and cutout portion of 3rd-4th bush by moving the outer baulk ring.

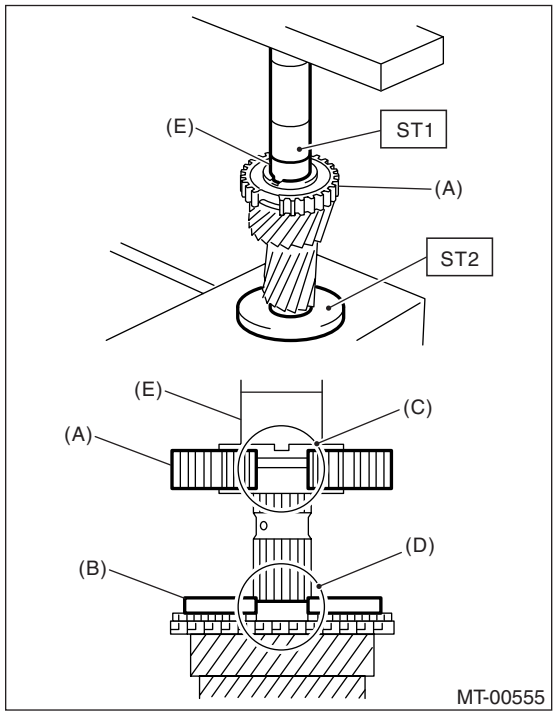

(A) 3rd-4th hub
(B) Outer baulk ring
(C) Cutout portion of 3rd-4th hub
(D) Protrusion portion of outer baulk ring
(E) 4th bush

5) Make sure the 3rd drive gear is smoothly turned by hand. If not, reassemble.
6) Install the 3rd-4th shifting insert key in proper place of 3rd-4th sleeve.

NOTE:
Angle of each shifting insert key is 120° apart.

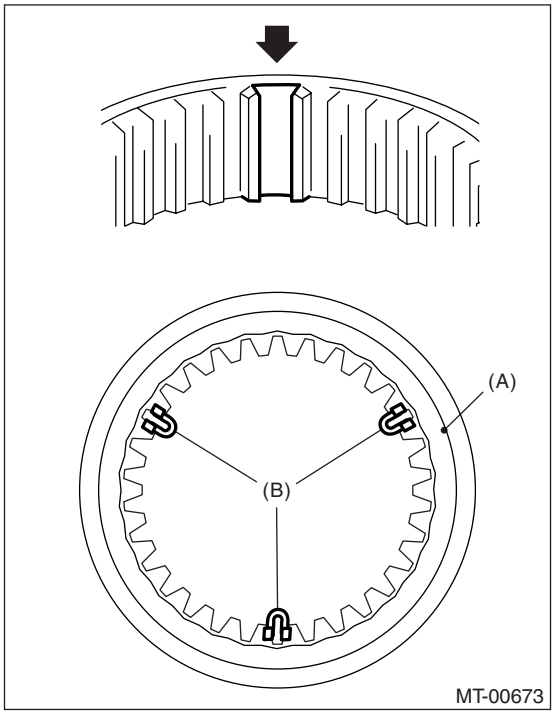

(A) 3rd-4th sleeve
(B) 3rd-4th shifting insert key

7) Install the 3rd-4th sleeve to 3rd-4th hub.

NOTE:
• 3rd-4th sleeve has a groove for identification.
• Install the 3rd-4th sleeve with groove facing to 3rd drive gear side.

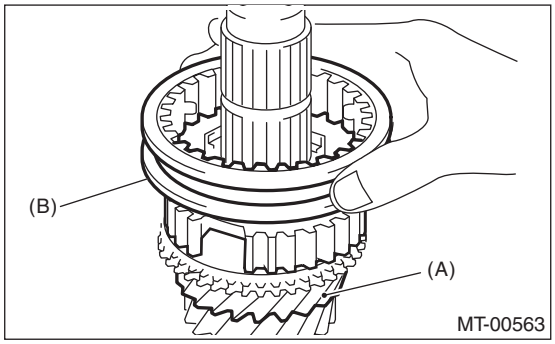

(A) 3rd drive gear
(B) Groove (1) for identification of 3rd-4th sleeve

8) Install the 4th baulk ring.

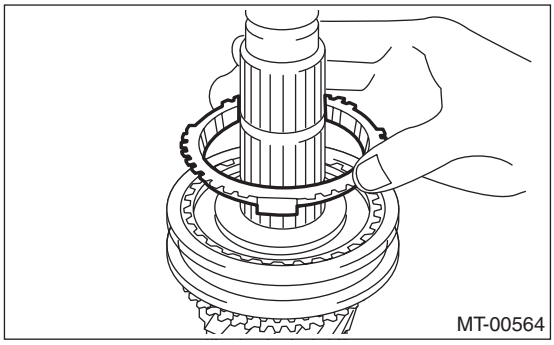

9) Sufficiently apply gear oil to the main shaft, 4th needle bearing and inner periphery of 4th drive gear.
10) Install the 4th needle bearing and 4th drive gear.

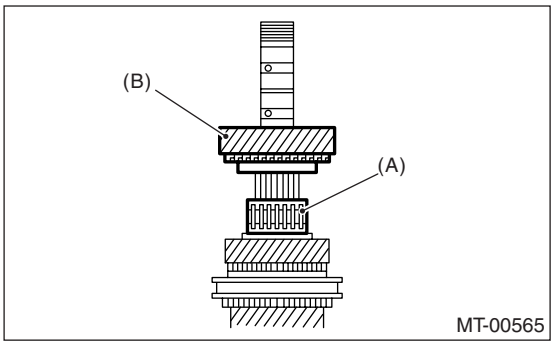

(A) 4th needle bearing
(B) 4th drive gear

11) Install the 5th bush.

(1) Set to the main shaft, taking care not to overlap the main shaft oil hole and 5th bush oil hole.

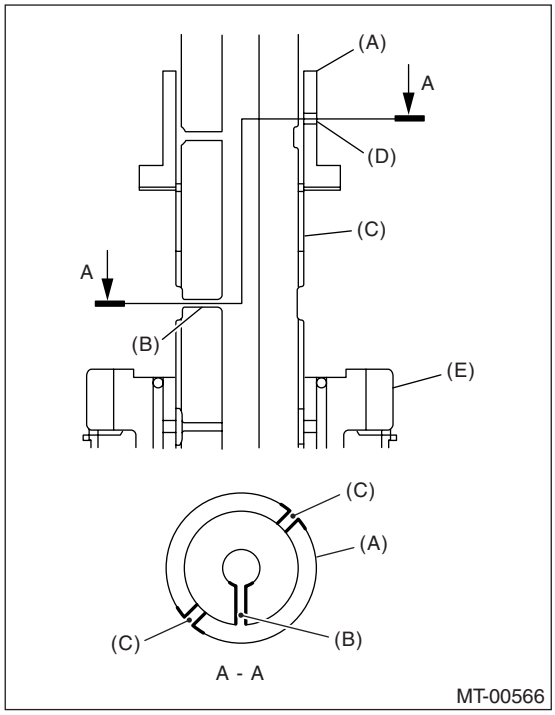

(A) 5th bush
(B) Main shaft oil hole
(C) Main shaft
(D) 5th bush oil hole
(E) 4th drive gear

(2) Using the ST, press in the 5th bush.

ST1 18651AA000 INSTALLER
ST2 398177700 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

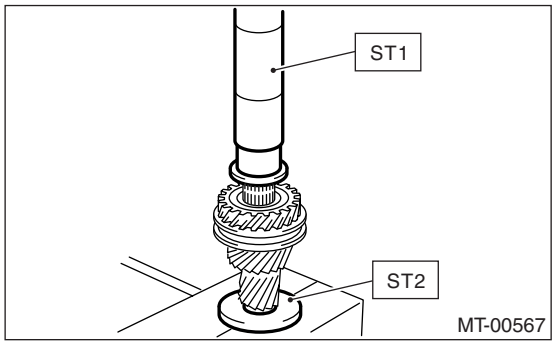

12) Make sure the 4th drive gear is smoothly turned by hand. If not, reassemble.
13) Sufficiently apply gear oil to the main shaft, 5th needle bearing and inner periphery of 5th drive gear.

14) Install the 5th needle bearing and 5th drive gear.

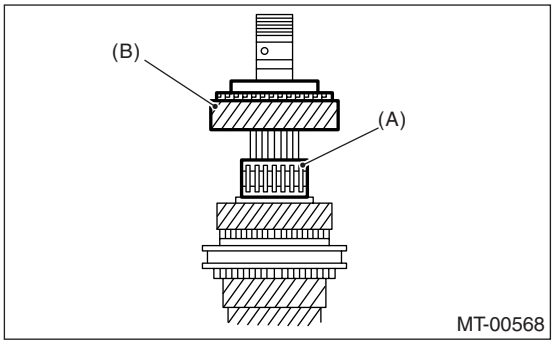

(A) 5th needle bearing
(B) 5th drive gear

15) Install the 5th baulk ring.

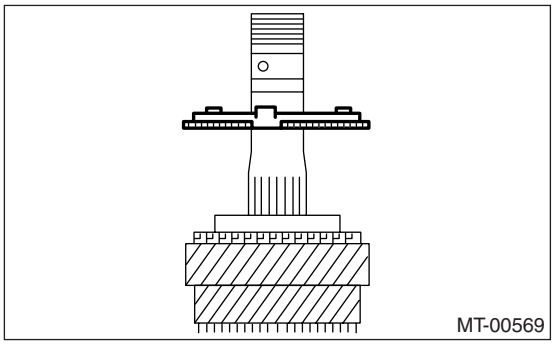

16) Install the 5th-6th hub.
(1) Set to the main shaft, taking care of 5th-6th hub installing direction.

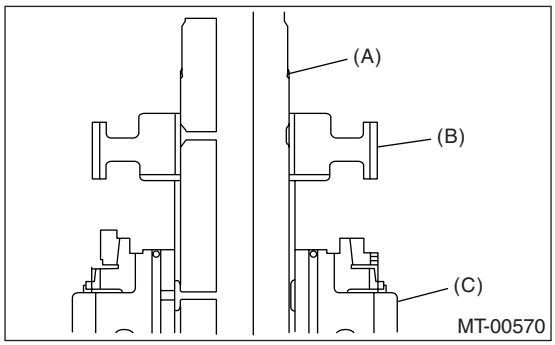

(A) Main shaft
(B) 5th-6th hub
(C) 5th drive gear

(2) Using the ST, press in the 5th-6th hub.
ST1 18651AA000 INSTALLER
ST2 398177700 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

NOTE:
When pressing in 5th-6th hub, align the protrusion portion of outer baulk ring and cutout portion of 5th-6th bush by moving the outer baulk ring.

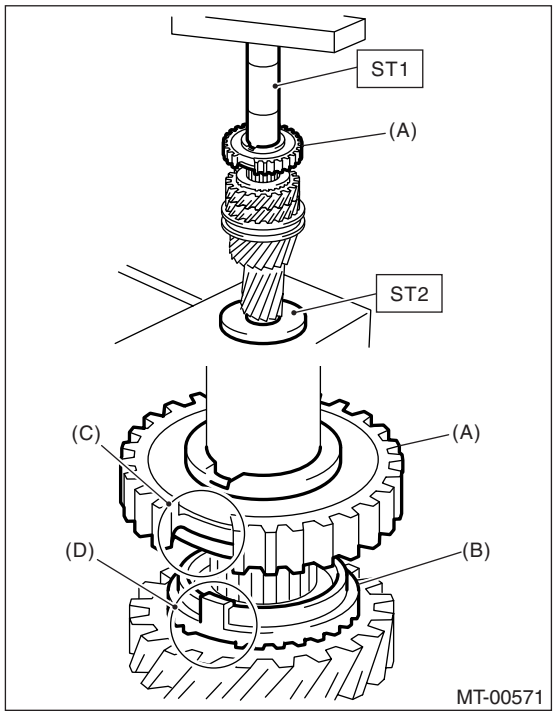

(A) 5th-6th hub
(B) Outer baulk ring
(C) Cutout portion of 5th-6th hub
(D) Protrusion portion of outer baulk ring

17) Make sure the 5th drive gear is smoothly turned by hand. If not, reassemble.

18) Install the 5th-6th shifting insert key in proper place of 5th-6th sleeve.

NOTE:
Angle of each shifting insert key is 120° apart.

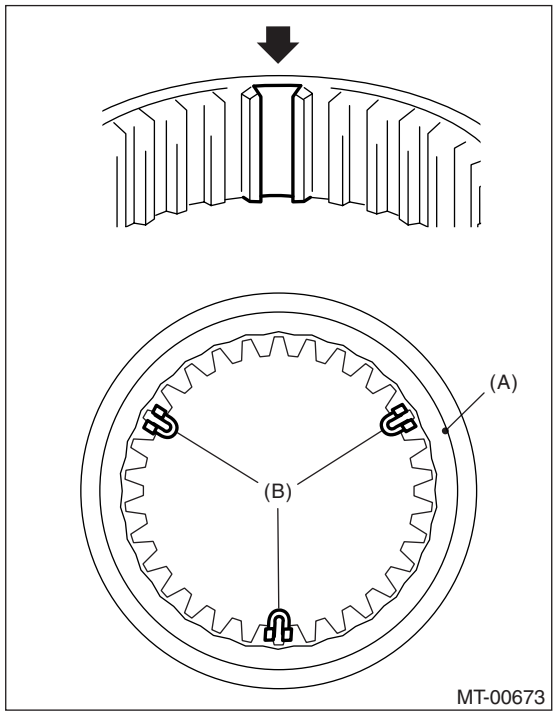

(A) 5th-6th sleeve
(B) Shifting insert key

19) Install the 5th-6th sleeve to 5th-6th hub.

NOTE:
• 5th-6th sleeve has two grooves for identification.
• Install the 5th-6th sleeve with the groove facing to 5th drive gear side.

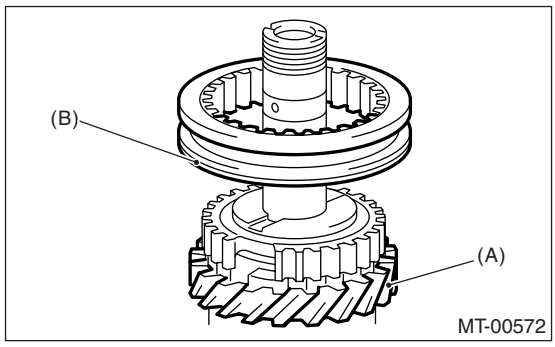

(A) 5th drive gear
(B) Groove (2) for identification of 5th-6th sleeve

20) Install the 6th baulk ring.

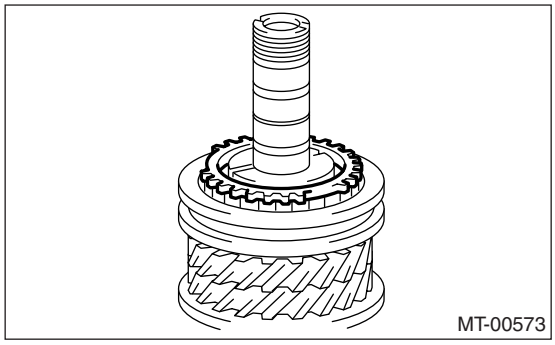

21) Sufficiently apply gear oil to the main shaft, 6th needle bearing and inner periphery of 6th drive gear.
22) Install the 6th drive gear.

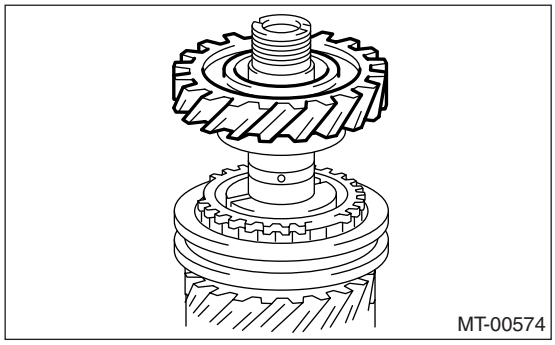

23) Install the 6th needle bearing.

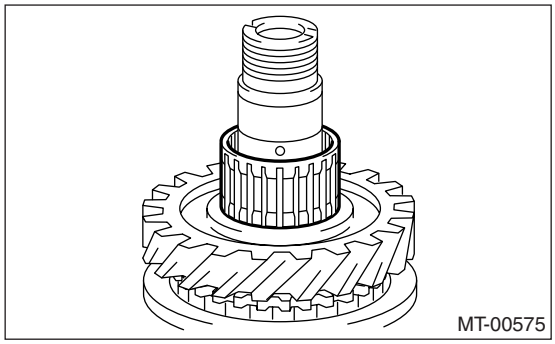

24) Set the 6th bush to main shaft, taking care not to overlap the 6th bush oil hole and main shaft oil hole.

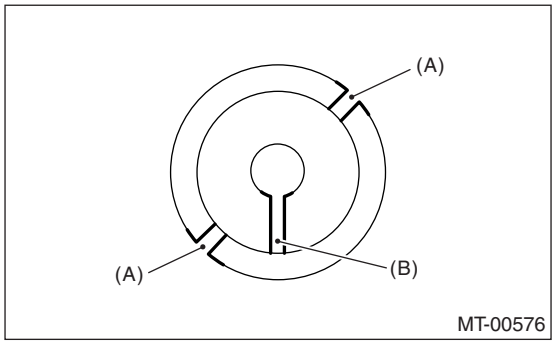

(A) 6th bush oil hole
(B) Main shaft oil hole

25) Using the ST, install the 6th bush.
ST1 18651AA000 INSTALLER
ST2 398177700 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

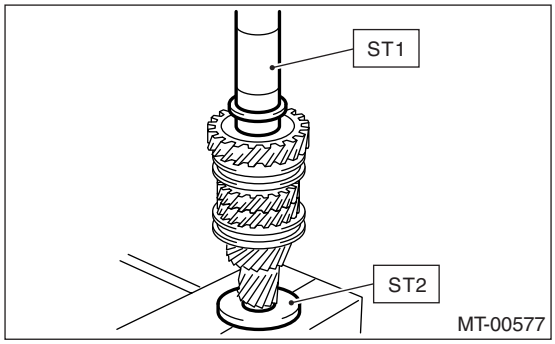

26) Make sure the 6th drive gear is smoothly turned by hand. If not, reassemble.
27) Using the ST, install the inner bearing inner race.
ST1 18651AA000 INSTALLER
ST2 398177700 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

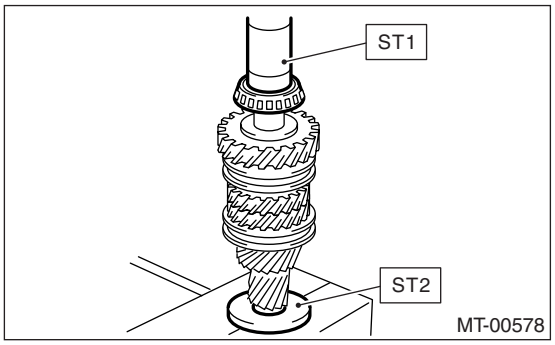

28) Using the ST, install the retainer and outer bearing inner race.
ST1 18651AA000 INSTALLER
ST2 398177700 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

NOTE:
• Make sure to install the retainer in proper direction.
• Press in until there is no backlash in retainer and where bearing is smoothly turned by hand.

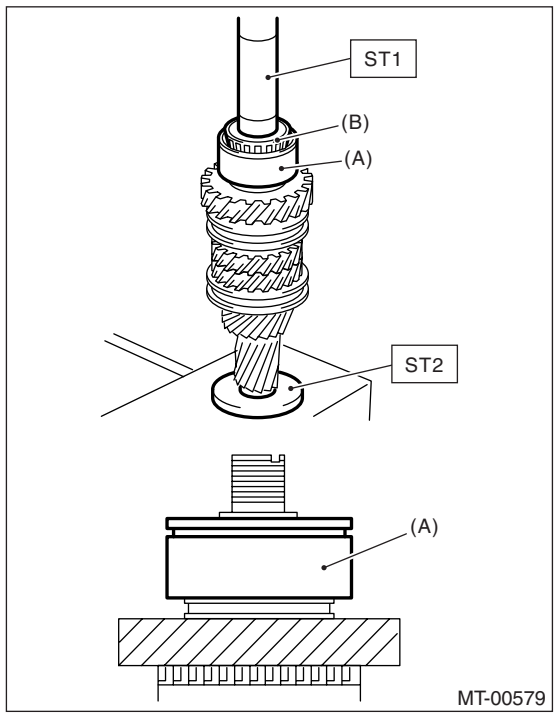

(A) Retainer
(B) Outer bearing inner race

29) Make sure the taper roller bearing is smoothly turned by hand. If not, replace the taper roller bearing as a set and reassemble.
30) Install the lock washer and new lock nut.

31) Set the main shaft assembly to ST, then tighten the lock nut.
ST1 18665AA000 HOLDER
ST2 18664AA000 BASE

Tightening torque:
392 N·m (40.0 kgf-m, 289 ft-lb)

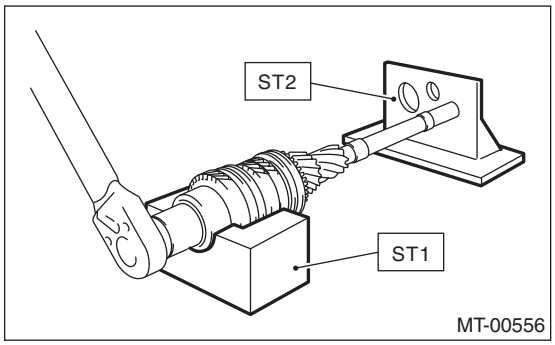

32) Using the ST, caulk four portions on the lock nut to obtain dimension A 27±0.3 mm (1.06±0.01 in).
ST 18668AA000 PUNCH

NOTE:
Do not crack the caulking part of lock nut.

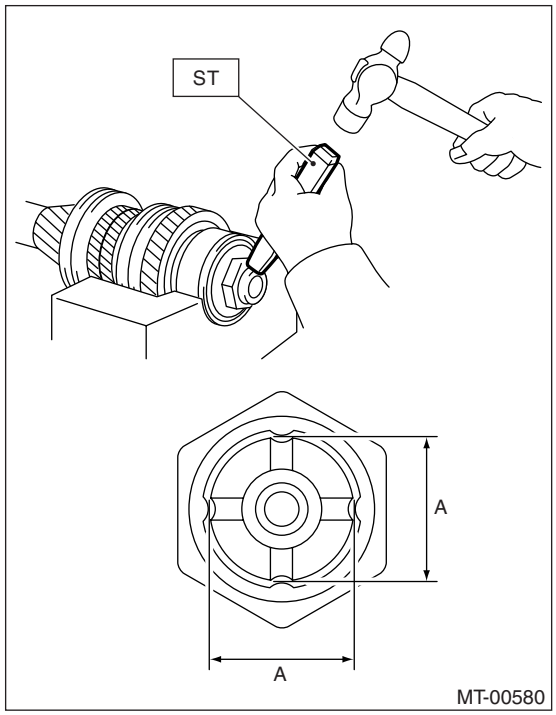

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.
1) Bearing
Replace the bearings in the following cases.
• Worn, rusted and damaged bearing
• Bearings that fail to turn smoothly or make abnormal noise when turned
• Bearings having other defects
2) Bushing (each gear)
Replace the bushings in the following case.
• When the sliding surface is damaged or abnormally worn.
3) Gears
Replace the gears in the following cases.
• Gear teeth surfaces are broken or excessively worn.
• Parts that contact the baulk ring is damaged.
• The inner surface of gear is damaged.
4) Baulk ring, synchro cone
Replace the baulk ring and synchro cone in the following case.
• Worn, rusted and damaged baulk ring
5) Shifting insert key
Replace the shifting insert key if deformed, excessively worn or defective in any way.

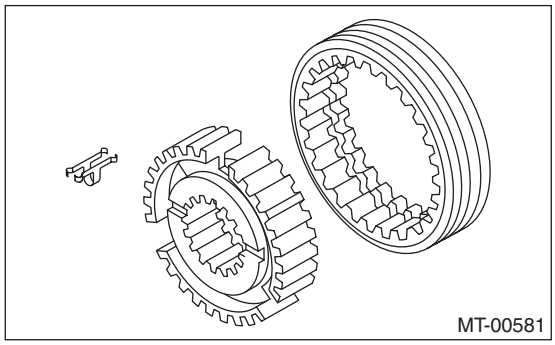

F: ADJUSTMENT

1. SELECTION OF MAIN SHAFT SNAP RING AND WASHER

NOTE:
Perform the following procedures when.
• Replacing the 1st to 6th driven gear.
• Replacing the 1st and 2nd synchro ring assembly.
• Replacing the ball bearing.
• Replacing the adapter plate.
• Replacing the driven shaft.

1) Insert the drive pinion assembly in adapter plate.

NOTE:
Make sure the thrust bearing outer race is not removed and drive pinion is not lift-up.

2) Set the height gauge to adapter plate. Lower the indicator of height gauge to mating surface of adapter plate and case, then set to zero point.
ST 18853AA000 HEIGHT GAUGE

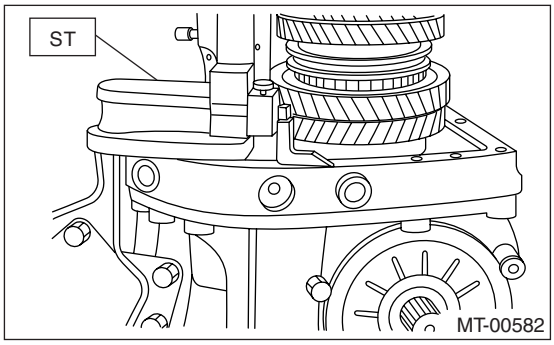

NOTE:
• Remove the remaining gasket on edge surface with scraper, since the adapter plate is base point of measurement.
• Do not place the height gauge on shaded area in the figure during measurement.

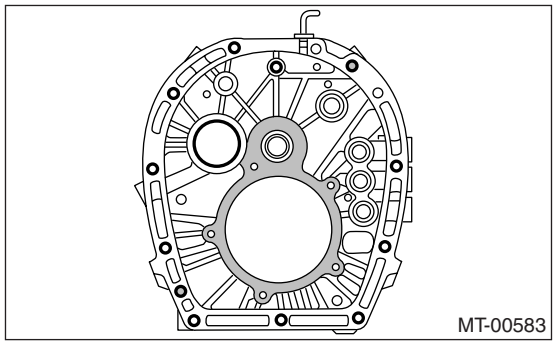

3) Measure the height to edge surface of ball bearing (height A1).

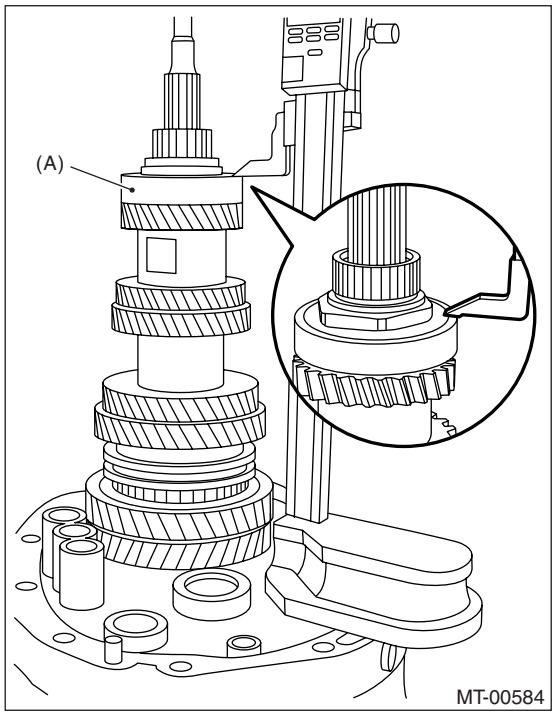

(A) Ball bearing

NOTE:
Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of bearing.

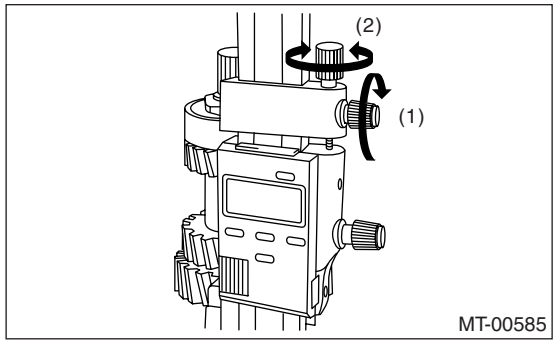

Measure five points of the ball bearing turning every approx. 120°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

4) According to measurement value, select the snap ring and washer from the following table.

Snap ring

A1: mm (in)	Part No.	Thickness: mm (in)
270.83 — 271.40 (10.66 — 10.69)	805072010	1.65 (0.065)
271.41 — 271.98 (10.69 — 10.71)	805072011	1.95 (0.077)
271.99 — 272.56 (10.71 — 10.73)	805072012	2.25 (0.089)

Washer

A1: mm (in)	Part No.	Thickness: mm (in)
270.83 — 271.40 (10.66 — 10.69)	803067012	1.6 (0.063)
271.41 — 271.98 (10.69 — 10.71)	803067011	1.3 (0.051)
271.99 — 272.56 (10.71 — 10.73)	803067010	1.0 (0.039)

20.Driven Gear Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove the driven gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>
10) Remove the 1st needle bearing.

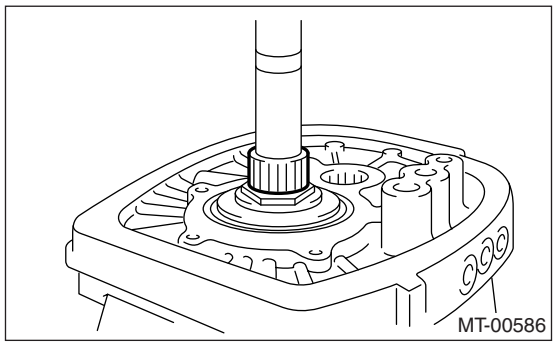

11) Remove the thrust needle bearing.

B: INSTALLATION

1) Adjust the main shaft snap ring. <Ref. to 6MT-83, ADJUSTMENT, Main Shaft Assembly.>
2) Adjust the 1st-2nd shifter rod. <Ref. to 6MT-119, ADJUSTMENT, Shifter Fork and Rod.>
3) Install the thrust needle bearing

NOTE:
Make sure to install the thrust needle bearing in proper direction.

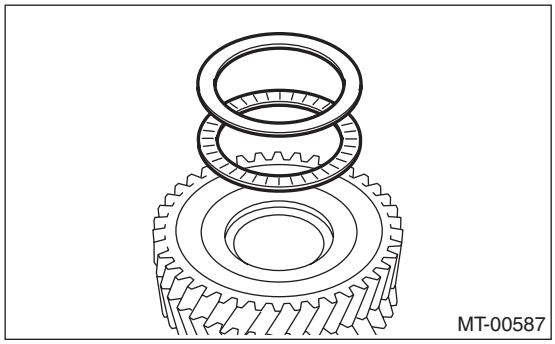

4) Install the 1st needle bearing.
5) Install the driven gear assembly. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
6) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
7) Adjust backlash at axial direction of driven gear assembly. <Ref. to 6MT-93, ADJUSTMENT, Driven Gear Assembly.>
8) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
9) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
10) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
11) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
12) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
13) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:
Each sleeve and hub engage at a specified point. Mark an engagement point on the sleeve and hub before disassembly.

1) Secure the ST on workbench.
ST 18664AA000 BASE
2) Lift the caulking of lock nut.

3) Install the ST3 to lock nut, set the driven gear assembly on ST, then remove the lock nut and washer.
ST1 18666AA000 HOLDER
ST2 18664AA000 BASE
ST3 18620AA000 ADAPTER WRENCH

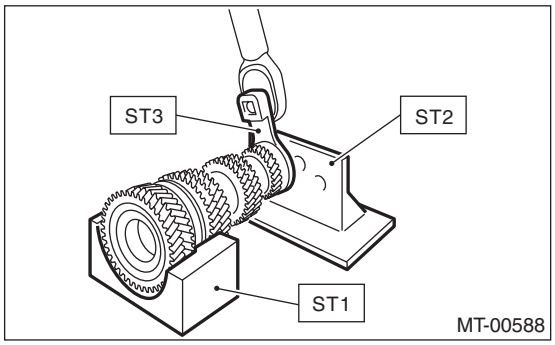

4) Install the ST1 to 4th gear, then remove the ball bearing, 5th-6th driven gear and 3rd-4th driven gear.
ST1 18723AA000 REMOVER
ST2 499877000 REMOVER

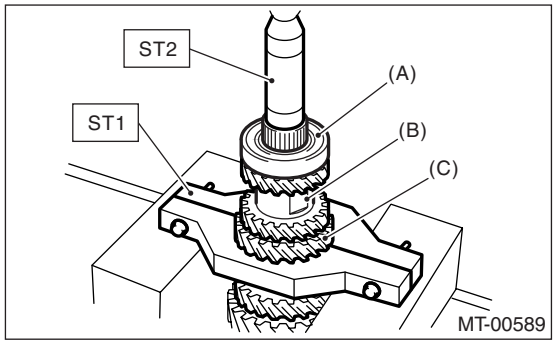

(A) Ball bearing
(B) 5th-6th driven gear
(C) 3rd-4th driven gear

5) Remove the driven gear key.

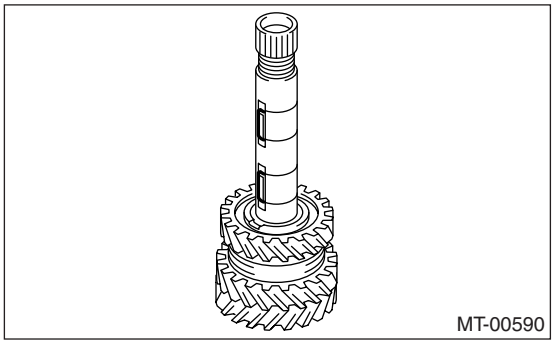

6) Remove the 2nd gear.

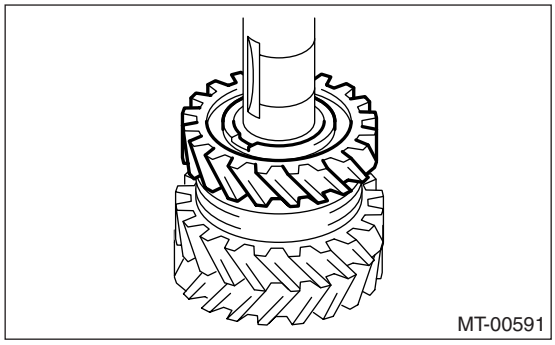

7) Remove the needle bearing and 1st-2nd sleeve.

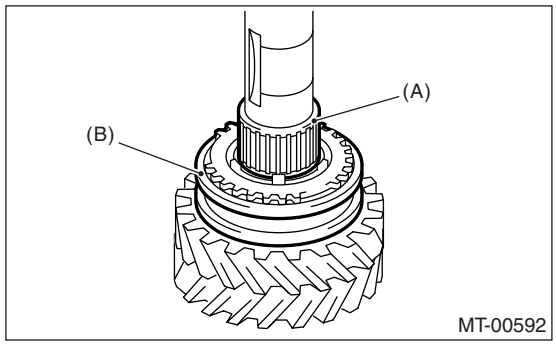

(A) Needle bearing
(B) 1st-2nd sleeve

8) Remove the outer baulk ring, 2nd synchro cone and inner baulk ring.

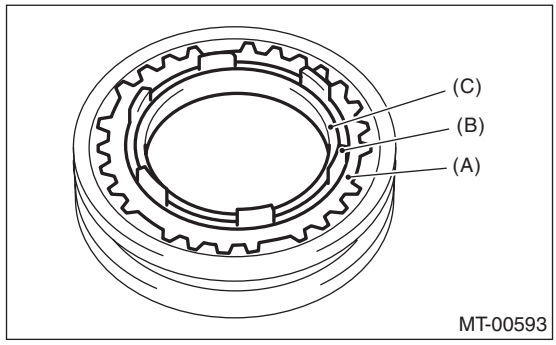

(A) Outer baulk ring
(B) 2nd synchro cone
(C) Inner baulk ring

9) Using the ST, remove each parts.
ST 18754AA000 REMOVER

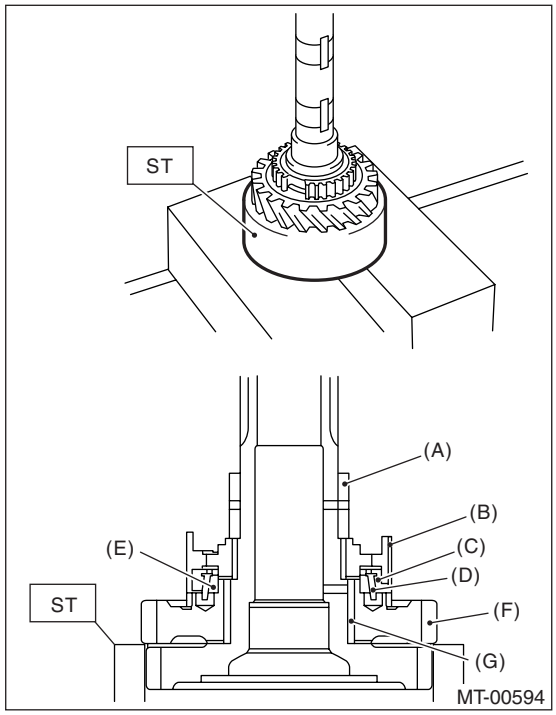

(A) 2nd bush
(B) 1st-2nd hub
(C) Outer baulk ring
(D) 1st synchro cone
(E) Inner baulk ring
(F) 1st driven gear
(G) 1st needle bearing

D: ASSEMBLY

NOTE:
Replace the following parts as a set.
- Sleeve and hub
- Outer baulk ring, 1st synchro cone, inner baulk ring
- Outer baulk ring, 2nd synchro cone, inner baulk ring

1) Sufficiently apply gear oil to the drive shaft, 1st needle bearing and inner periphery of 1st driven gear.
2) Install the 1st needle bearing.

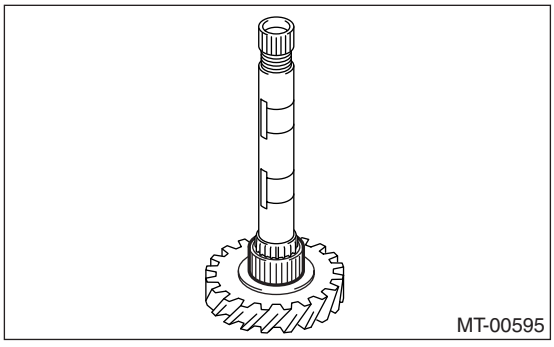

3) Install the 1st driven gear to driven shaft.

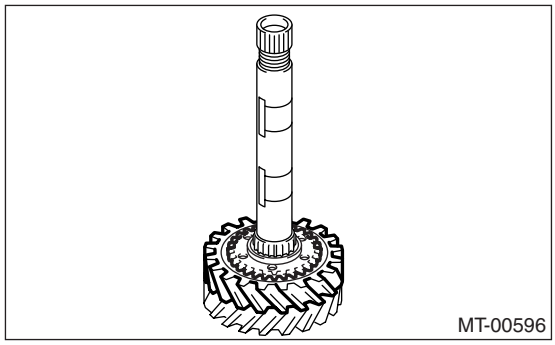

4) Install the inner baulk ring.

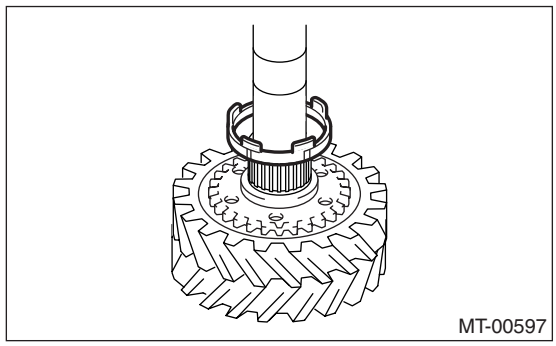

5) Align protrusion portions of the 1st synchro cone to the holes of 1st drive gear to install.

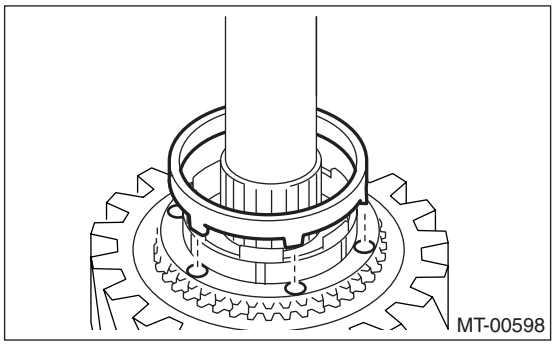

6) Install the outer baulk ring.

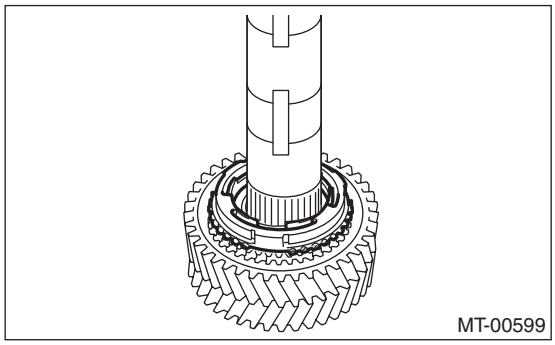

7) Install the 1st-2nd hub.

NOTE:
• Align the protrusion portion of outer baulk ring and cutout portion of 1st-2nd hub, then install.

• Make sure to install the 1st-2nd hub in proper direction.

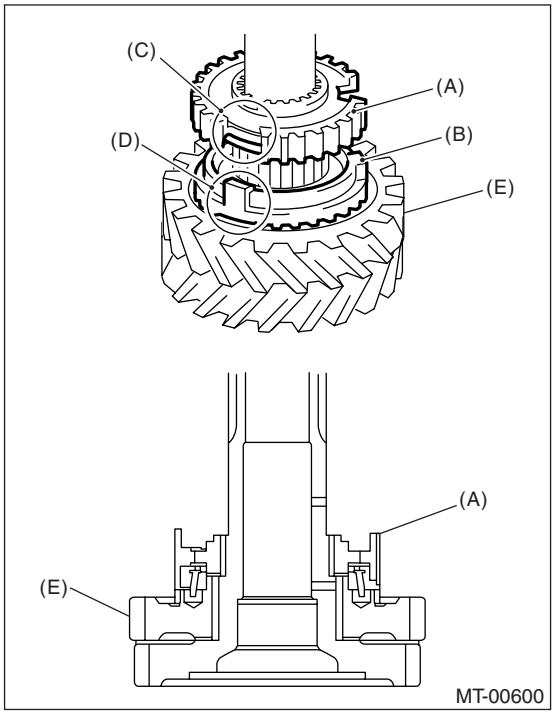

(A) 1st-2nd hub
(B) Outer baulk ring
(C) Cutout portion of 1st-2nd hub
(D) Protrusion portion of outer baulk ring
(E) 1st driven gear

8) Using the ST, install the 2nd hub.
ST 18654AA000 INSTALLER

CAUTION:
• Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

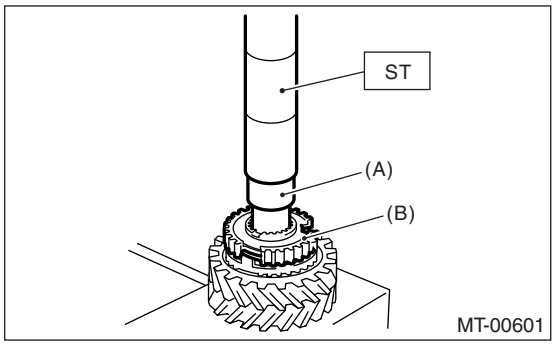

(A) 2nd bush
(B) 1st-2nd hub

9) Make sure the 1st drive gear is smoothly turned by hand. If not, reassemble.
10) Install the shifting insert key in proper place of 1st-2nd sleeve.

NOTE:
Angle of each shifting insert key is 120° apart.

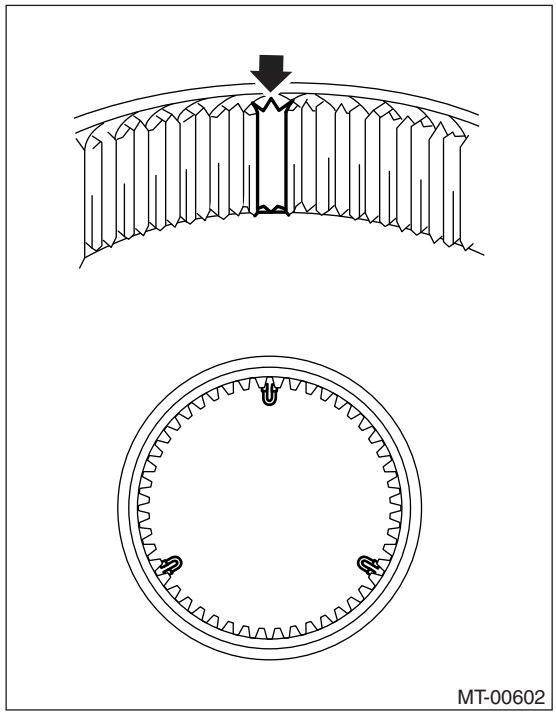

11) Install the 1st-2nd sleeve to 1st-2nd hub.

NOTE:
Make sure to install the 1st-2nd sleeve in proper direction.

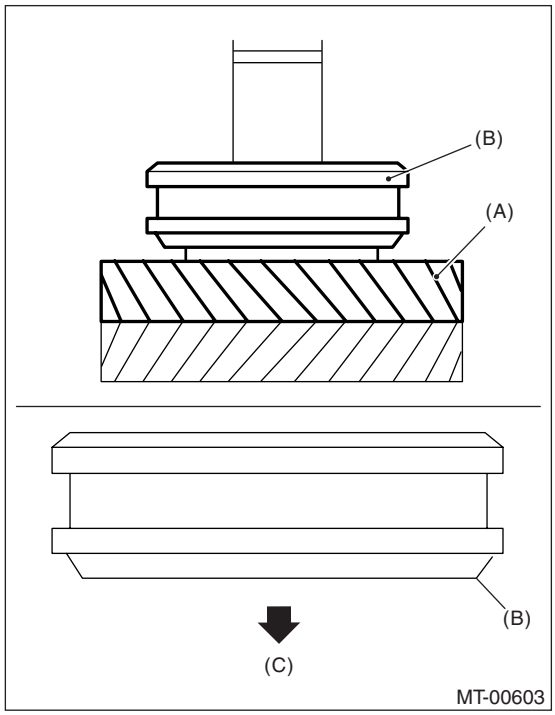

(A) 1st driven gear
(B) 1st-2nd sleeve
(C) 1st driven gear side

12) Install the outer baulk ring.

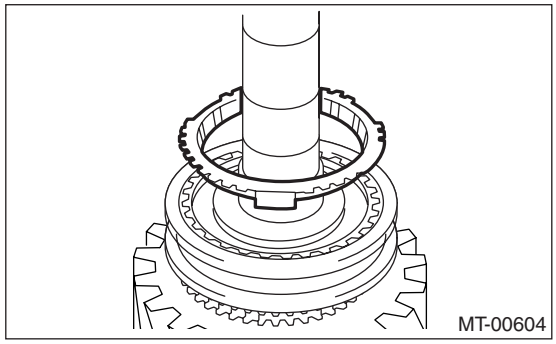

13) Install the 2nd synchro cone.

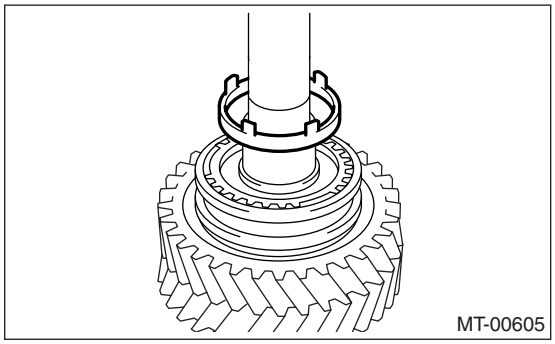

14) Install the inner baulk ring.

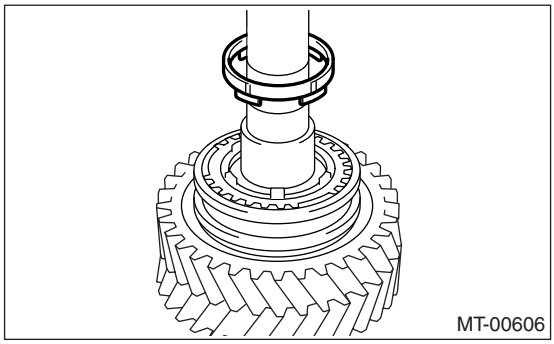

15) Sufficiently apply gear oil to the bush, 2nd needle bearing and inner periphery of 2nd drive gear.
16) Install the 2nd needle bearing and 2nd driven gear.

NOTE:
Align the protrusion portion of 2nd synchro cone with 2nd driven gear hole, then install.

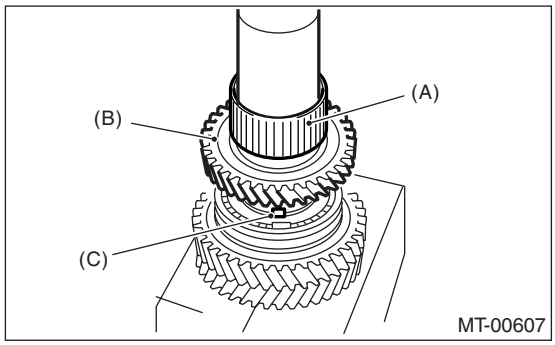

(A) 2nd needle bearing
(B) 2nd driven gear
(C) Protrusion portion of 2nd synchro cone

17) Install the key.

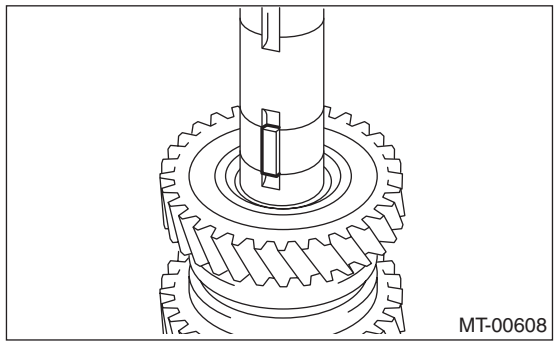

18) Using the ST, install the 3rd-4th driven gear.
ST 18654AA000 INSTALLER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

NOTE:
• Make sure to install the 3rd-4th driven gear in proper direction.
• Align the groove of 3rd-4th driven gear with key.

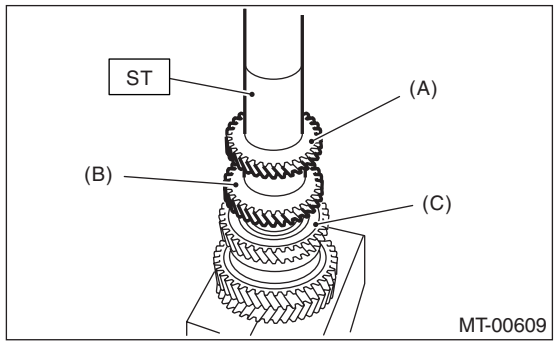

(A) 4th gear
(B) 3rd gear
(C) 2nd gear

19) Make sure the 2nd driven gear is smoothly turned by hand. If not, reassemble.
20) Install the key.

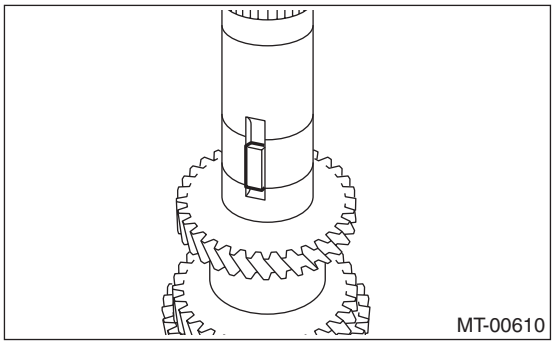

21) Using the ST, install the 5th-6th driven gear.
ST 18654AA000 INSTALLER

CAUTION:
• Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

NOTE:
• Make sure to install the 5th-6th driven gear in proper direction.
• Align the groove of 5th-6th driven gear with key.

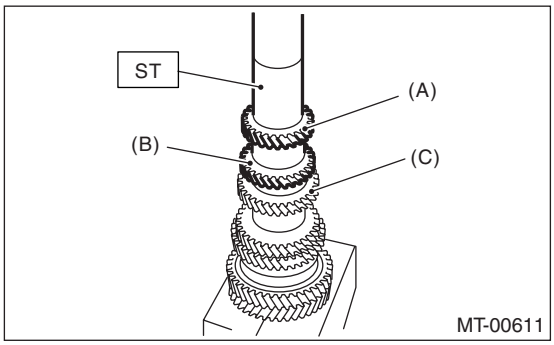

(A) 6th gear
(B) 5th gear
(C) 4th gear

22) Using the ST, install the ball bearing.
ST 18654AA000INSTALLER

CAUTION:
• Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

NOTE:
Make sure to install the ball bearing in proper direction.

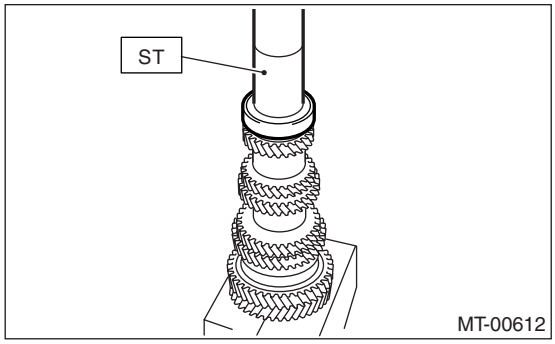

23) Make sure the ball bearing is smoothly turned by hand. If not, reassemble.
24) Install a new lock nut.
25) Install the ST3 to lock nut, then install the ST to driven gear assembly and tighten lock nut.
ST1 18666AA000 HOLDER
ST2 18664AA000 BASE
ST3 18620AA000 ADAPTER WRENCH
ST4 18852AA000 TORQUE WRENCH

Tightening torque:
530 N·m (54.0 kgf-m, 391 ft-lb)

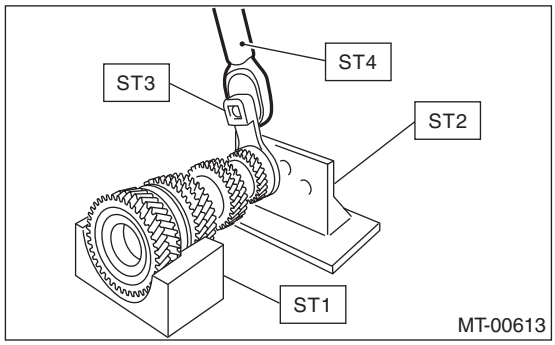

NOTE:
If torque wrench except ST4 is used, calculate the following equation, then tighten the lock nut.
T=L1/(0.1 + L1)×570

T N·m (kgf-m, ft-lb)	Setting value of torque wrench
L1 m (in)	Torque wrench length
0.1 m (3.94 in)	ST length
570 N·m (58.1 kgf-m, 420 ft-lb)	Tightening torque of lock nut

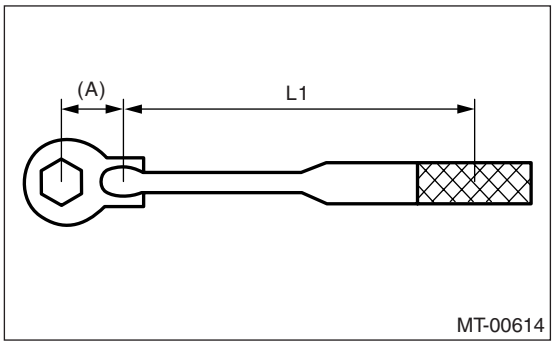

(A) 0.1 m (3.94 in)

26) Using the ST, caulk four portions on the lock nut to obtain dimension A 44±0.5 mm (1.73±0.02 in).
ST1 18669AA000 PUNCH DRIVEN SHAFT

NOTE:
Do not crack the caulking part of lock nut.

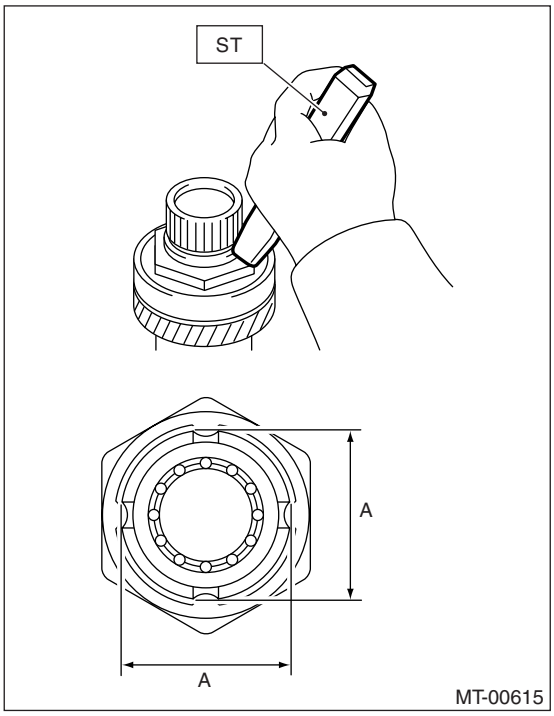

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.
1) Bearing
Replace the bearings in the following cases.
• Worn, rusted and damaged bearing
• Bearings that fail to turn smoothly or make abnormal noise when turned
• Bearings having other defects
2) Bushing (each gear)
Replace the bushings in the following case.
• When the sliding surface is damaged or abnormally worn.
3) Gears
Replace the gears in the following cases.
• Gear teeth surfaces are broken or excessively worn.
• Parts that contact the baulk ring is damaged.
• The inner surface of gear is damaged.
4) Baulk ring, synchro cone
Replace the baulk ring and synchro cone in the following case:
• Worn, rusted and damaged baulk ring
5) Shifting insert key
Replace the shifting insert key if deformed, excessively worn or defective in any way.

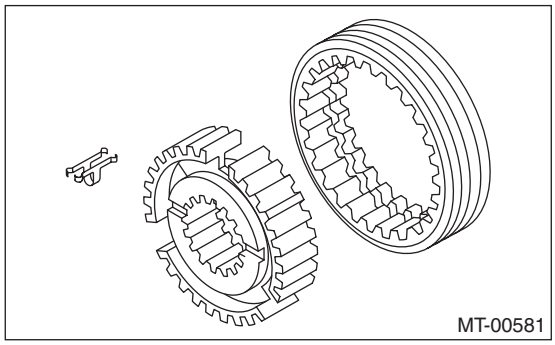

F: ADJUSTMENT

1) Measure length “H”, which is from transmission case and oil pump cover mating surface to ball bearing edge.

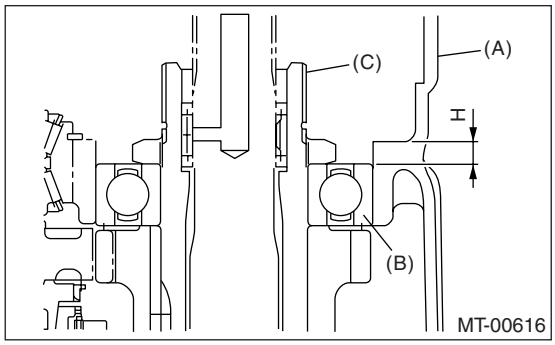

(A) Transmission case
(B) Ball bearing
(C) Driven gear assembly

2) Using the following equation, calculate the washer thickness of driven gear assembly.
T=H – {5.8±0.05 mm (0.23±0.002 in)} – {0.1 to 0.3 mm (0.0039 to 0.0118 in)}

t	Thickness of washer
H	Length from transmission case and oil pump cover mating surface to ball bearing edge
5.8±0.05 mm (0.23±0.002 in)	Thickness of collar
0.1 to 0.3 mm (0.0039 to 0.0118 in)	Backlash specification at axial direction of driven gear assembly

3) Select 0 to 3 washers from the following table to adjust backlash closest to specification.

Backlash specification at axial direction of driven gear assembly:
0.1 — 0.3 mm (0.0039 — 0.0118 in)

Washer	
Part No.	Thickness t mm (in)
803072030	0.15 (0.0059)
803072031	0.30 (0.0118)
803072032	0.45 (0.0177)
803072033	0.60 (0.0236)

21.Reverse Idler Gear Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove the reverse idler gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>

B: INSTALLATION

1) Select the reverse fork rod. <Ref. to 6MT-119, ADJUSTMENT, Shifter Fork and Rod.>
2) Install the reverse idler gear assembly. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
3) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
4) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
5) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
6) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
7) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
8) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
9) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:
The sleeve and reverse gear engage at a specified point. Mark an engagement point on the sleeve and hub before disassembly.

1) Remove the spring pin.

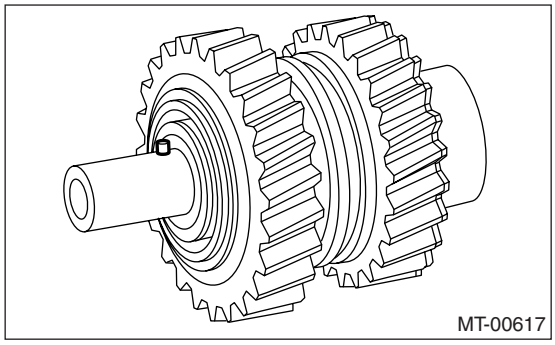

2) Remove the snap ring.

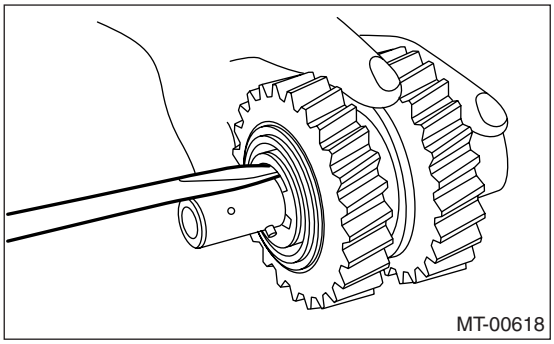

3) Remove the washer and reverse idler gear.

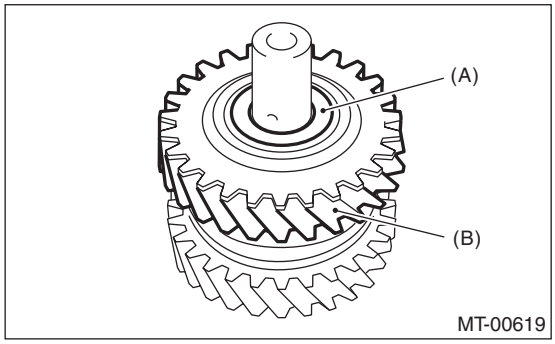

(A) Washer
(B) Reverse idler gear

4) Remove the knock pin and reverse idler gear needle bearing.

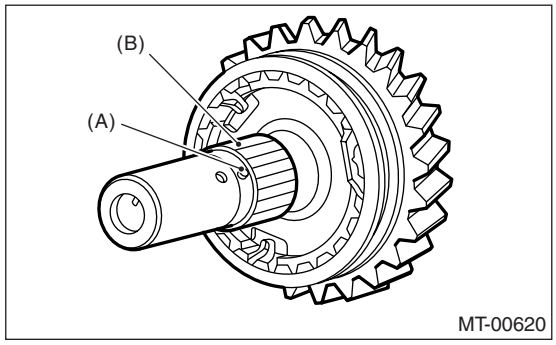

(A) Knock pin
(B) Reverse idler gear needle bearing

5) Remove the collar.
6) Remove the reverse sleeve.

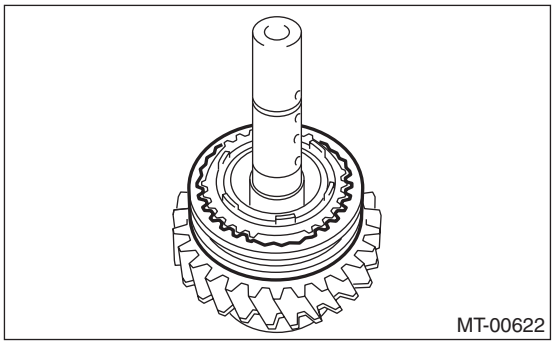

7) Remove the outer baulk ring, reverse synchro cone and inner baulk ring from reverse sleeve.

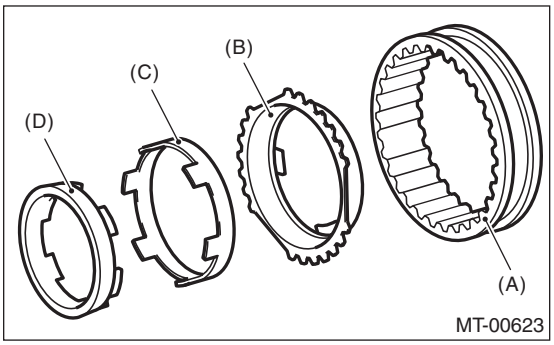

(A) Reverse sleeve
(B) Outer baulk ring
(C) Reverse synchro cone
(D) Inner baulk ring

8) Remove the reverse idler gear No.2.

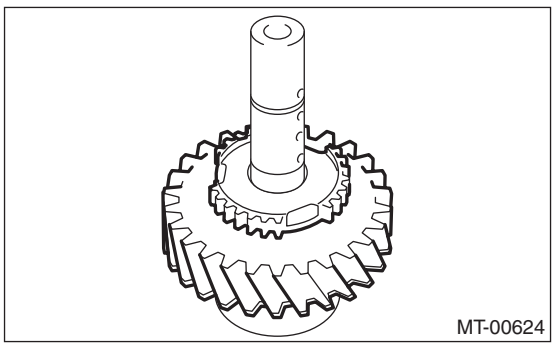

9) Remove the washer and needle bearing.

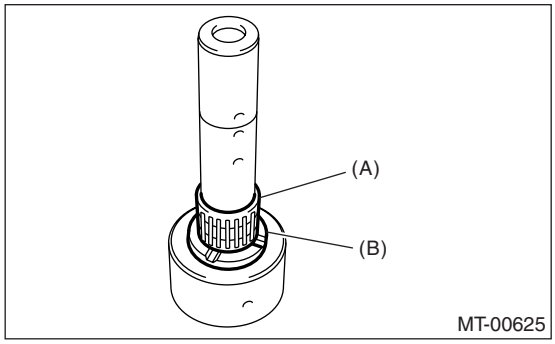

(A) Needle bearing
(B) Washer

10) Remove the knock pin.

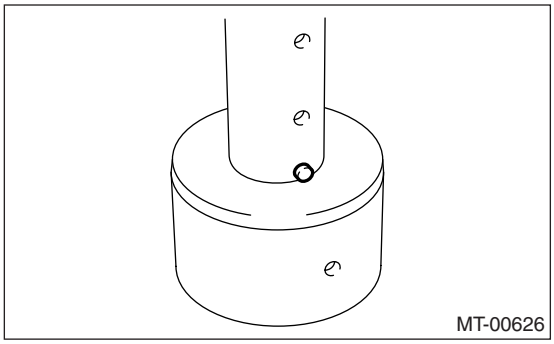

11) Remove the snap ring and friction plate from reverse gear.

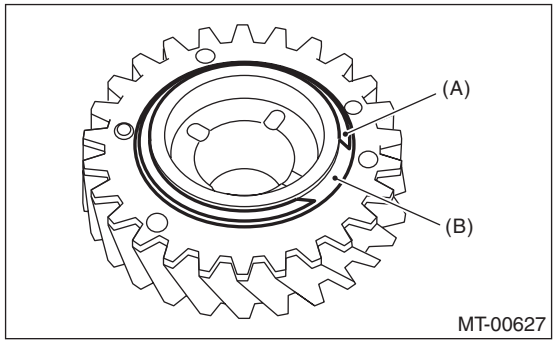

(A) Snap ring
(B) Friction plate

12) Remove the sub gear and spring.

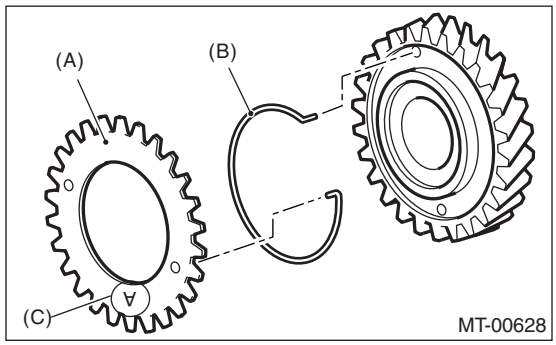

(A) Sub gear
(B) Spring
(C) Punch mark (mark A)

D: ASSEMBLY

1) Install the sub gear and spring.

NOTE:
• Install the spring with white marking on hook part facing to sub gear side.
• Install the sub gear with punch mark (mark A) facing outside.

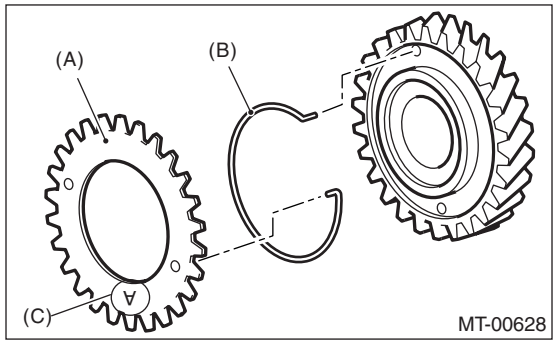

(A) Sub gear
(B) Spring
(C) Punch mark (mark A)

• Install the spring and sub gear, taking care to install the sub gear installation hole in proper direction.

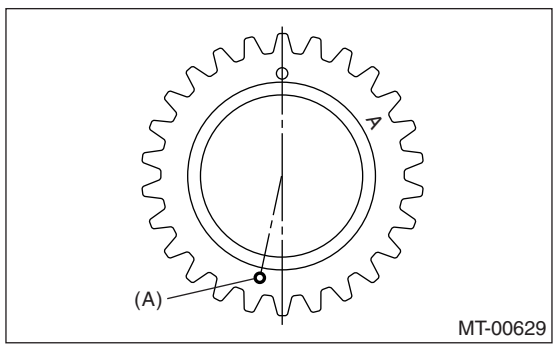

(A) Installation hole

2) Install the friction plate and snap ring.

NOTE:
Make sure to install the friction plate in proper direction.

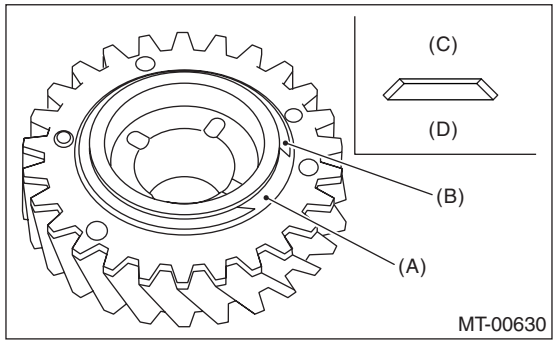

(A) Friction plate
(B) Snap ring
(C) Snap ring side
(D) Sub gear side

3) Sufficiently apply gear oil to the shaft, needle bearing and inner periphery of reverse drive gear.
4) Install the knock pin.

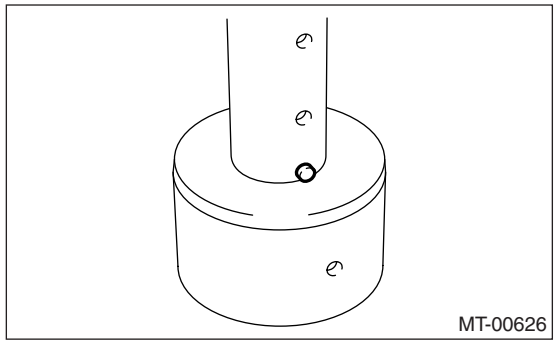

5) Install the washer and needle bearing.

NOTE:
Install the washer with groove facing to reverse idler gear.

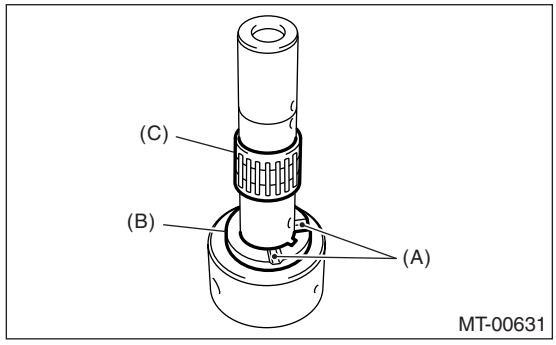

(A) Groove
(B) Washer
(C) Needle bearing

6) Install the reverse idler gear No.2.

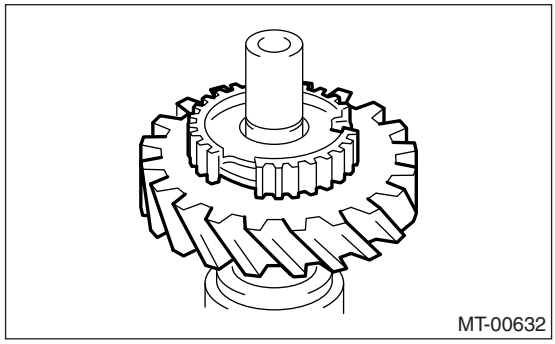

7) Install the shifting insert key in proper place of reverse sleeve.

NOTE:
Angle of each shifting insert key is 120° apart.

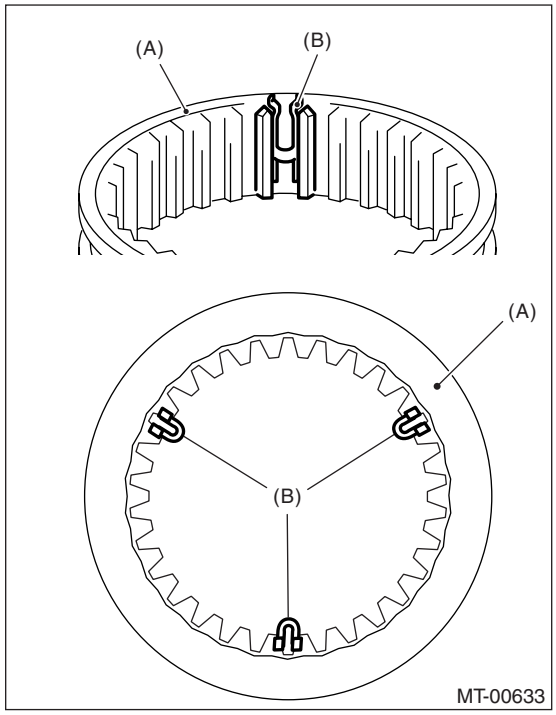

(A) Reverse sleeve
(B) Shifting insert key

8) Install the reverse sleeve to reverse idler gear No.2.

NOTE:
Make sure to install the reverse sleeve in proper direction.

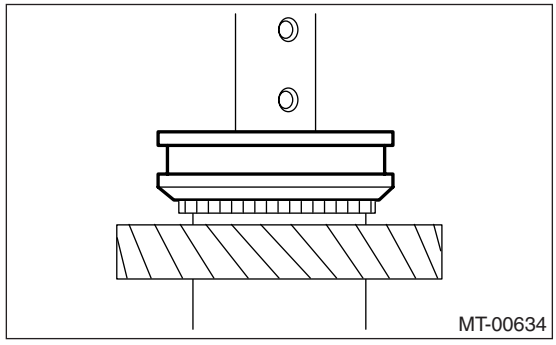

9) Sufficiently apply gear oil to the collar, needle bearing and inner periphery of reverse drive gear.
10) Install the outer baulk ring, reverse synchro cone and inner baulk ring.

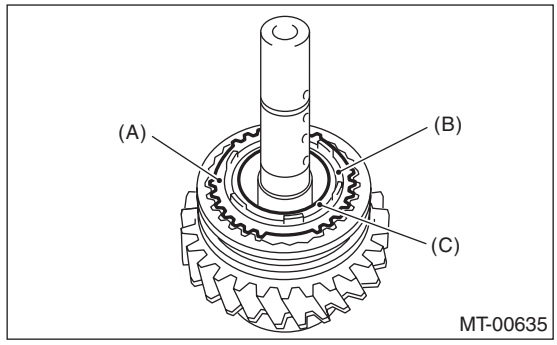

(A) Outer baulk ring
(B) Reverse synchro cone
(C) Inner baulk ring

11) Install the collar and needle bearing, then install the knock pin.

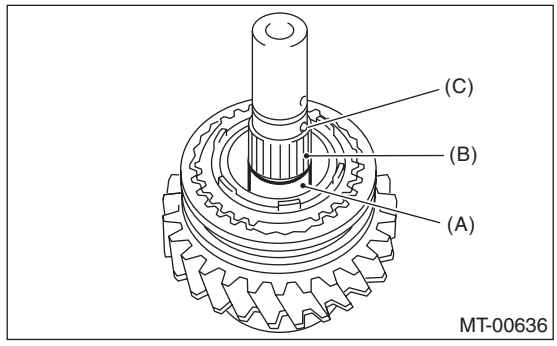

(A) Collar
(B) Needle bearing
(C) Knock pin

12) Align the protrusion portion of reverse synchro cone with reverse idler gear hole, then install the reverse idler gear.

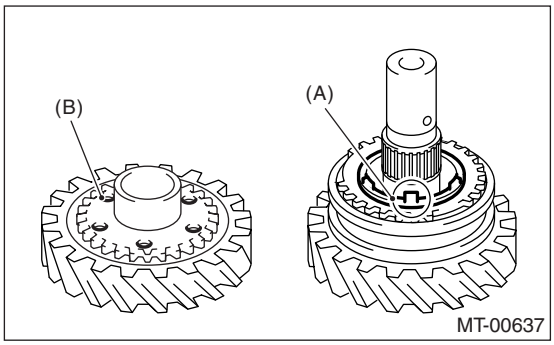

(A) Protrusion portion of reverse synchro cone
(B) Reverse idler gear hole

13) Install the washer with groove facing to reverse idler gear.
14) Using the ST, install the snap ring.
ST 18672AA000 GUIDE CLIP

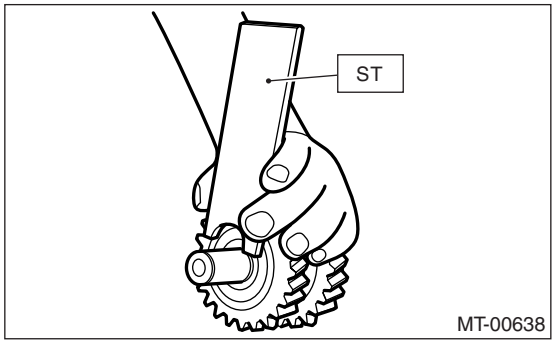

15) Inspect and adjust the clearance between snap ring and washer. <Ref. to 6MT-98, INSPECTION, Reverse Idler Gear Assembly.>
16) Install a new spring pin.

E: INSPECTION

Disassembled parts should be washed clean first and then inspected carefully.
1) Bearings
Replace the bearings in the following cases.
• Worn, rusted and damaged bearing
• Bearings that fail to turn smoothly or make abnormal noise when turned
• Bearings having other defects
2) Bushing (each gear)
Replace the bushings in the following case:
• When the sliding surface is damaged or abnormally worn.
3) Gears
Replace the gears in the following cases:
• The gear teeth surfaces are broken or excessively worn.
• The parts that contact the baulk ring is damaged.
• The inner surface of gear is damaged.
4) Baulk ring, synchro cone
Replace the baulk ring and synchro cone in the following case:
• Worn, rusted and damaged baulk ring
5) Shifting insert key
Replace the shifting insert key if deformed, excessively worn or defective in any way.

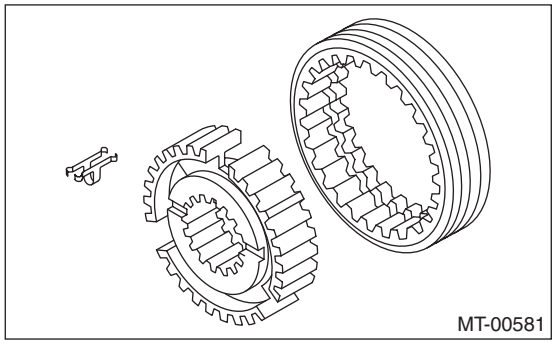

6) Inspect the clearance between snap ring and washer.

Specification of clearance:
0.1 — 0.3 mm (0.0039 — 0.0118 in)

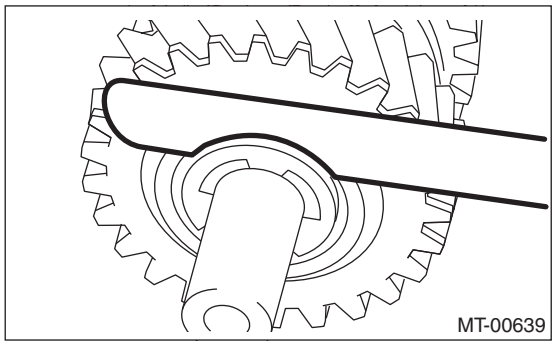

Select and replace the snap ring from the following table if clearance is out of specification.

Snap ring	
Parts No.	Thickness mm (in)
031319000	1.50 (0.059)
805019030	1.60 (0.062)
805019010	1.72 (0.068)

Inspect the clearance again after replacing snap ring.

22.Drive Pinion Shaft Assembly

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove each gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>
10) Remove the drive pinion shaft assembly.

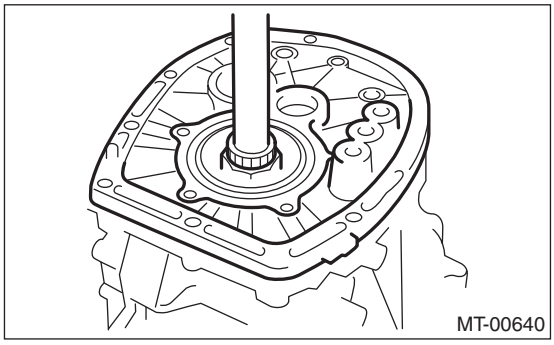
MT-00640

B: INSTALLATION

1) Completely remove the remaining gasket on drive plate and clutch housing.
2) Apply liquid gasket to the clutch housing.

Liquid gasket:
THREE BOND 1215

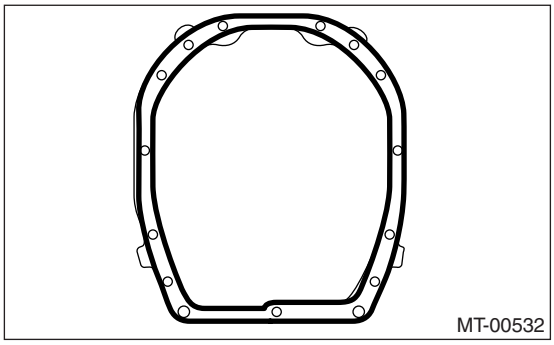
MT-00532

3) Install each gear assembly. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
4) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
5) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
6) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
7) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
8) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
9) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
10) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:
Replace the drive pinion shaft as a set with hypoid driven gear.

1) Remove the pipe and oil chamber.

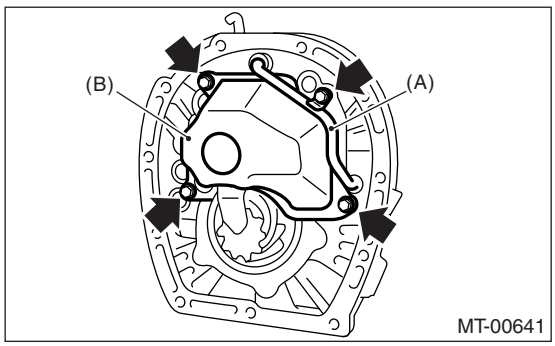

MT-00641

(A) Pipe
(B) Oil chamber

2) Remove the drive pinion shaft and shim from adapter plate.

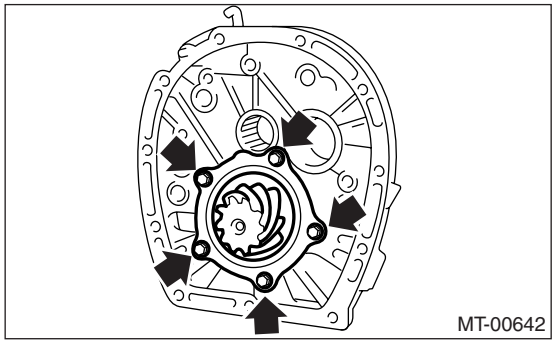
MT-00642

3) Secure the ST on workbench.
ST 18664AA000 BASE

4) Lift the caulking of lock nut.
5) Install the ST3 to lock nut, then set drive pinion shaft to ST. Remove the lock nut and washer.
ST1 18667AA000 HOLDER
ST2 18664AA000 BASE
ST3 18621AA000 ADAPTER WRENCH

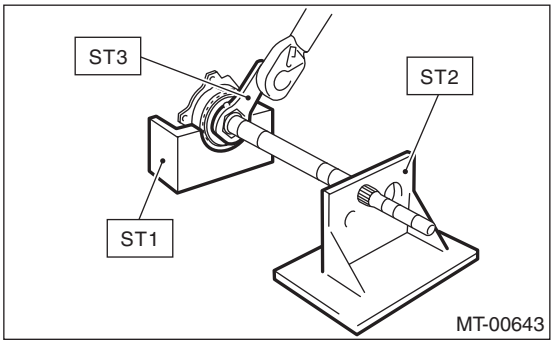

6) Using the ST, remove the taper roller bearing assembly.
ST 18723AA000 REMOVER

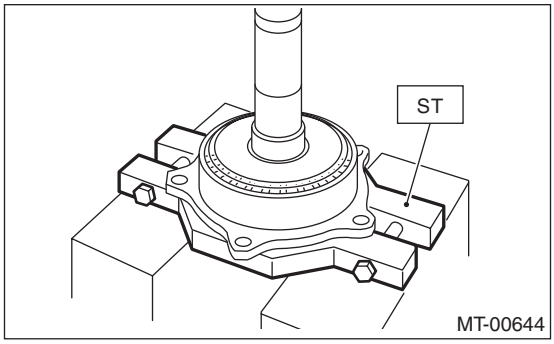

D: ASSEMBLY

1) Using the ST, measure dimension A of drive pinion.

NOTE:
Note dimension A for selection of drive pinion shim.
ST 398643600 GAUGE

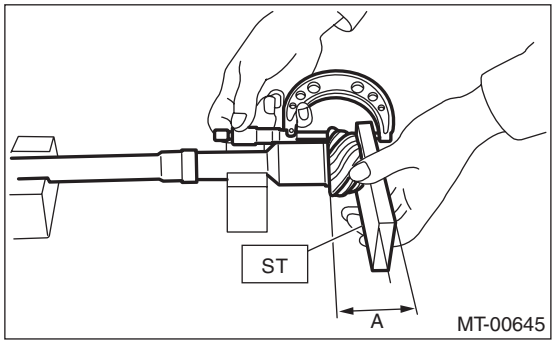

2) Install the inner bearing inner race to drive pinion shaft using ST and press.
ST 18723AA000 REMOVER

CAUTION:
Do not apply pressure in excess of 40 kN (4.0 ton, 4.4 US ton, 3.9 Imp ton).

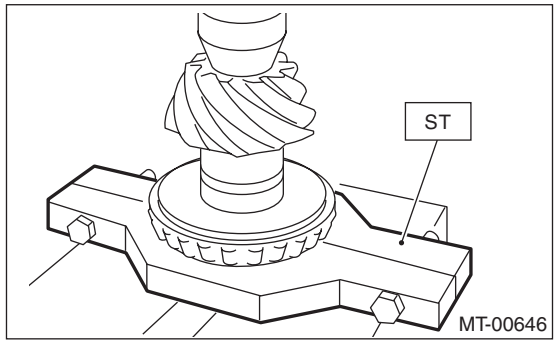

3) Install the retainer and outer bearing inner race to drive pinion shaft using ST and press.
ST 18723AA000 REMOVER

NOTE:
Press to the point where bearing is turned smoothly without slack.

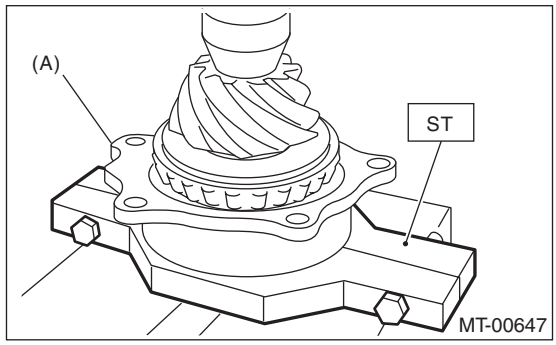

(A) Retainer

4) Install the washer and new lock nut.

5) Set the ST to drive pinion, then tighten the lock nut.
ST1 18667AA000HOLDER
ST2 18664AA000BASE
ST3 18621AA000ADAPTER WRENCH
ST4 18852AA000TORQUE WRENCH

NOTE:
Tighten with the ST and torque wrench straight-lined.

Tightening torque:
265 N·m (27.0 kgf-m, 195 ft-lb)

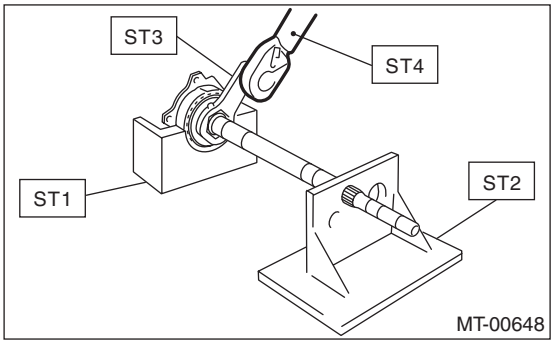

NOTE:
• If torque wrench except ST4 is used, calculate the following equation, then tighten the lock nut.
Tighten with the ST and torque wrench straight-lined.
T=L1/(0.1 + L1)×285

T N·m (kgf-m, ft-lb)	Setting value of torque wrench
L1 m (in)	Torque wrench length
0.1 m (3.94 in)	ST length
285 N·m (29.0 kgf-m, 210 ft-lb)	Tightening torque of lock nut

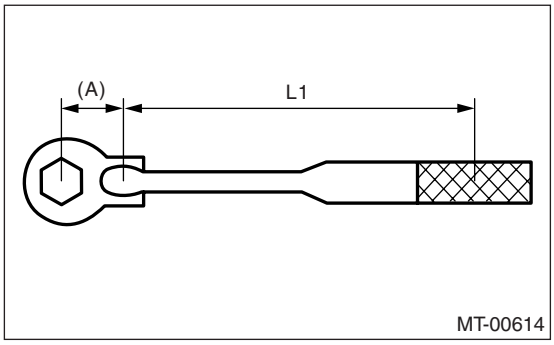

(A) 0.1 m (3.94 in)

6) Measure the starting torque. <Ref. to 6MT-102, INSPECTION, Drive Pinion Shaft Assembly.>
7) Using the ST, caulk two portions on the lock nut to obtain dimension A 37±0.5 mm (1.46±0.02 in).
ST 18670AA000 PUNCH

NOTE:
Do not crack the caulking part of lock nut.

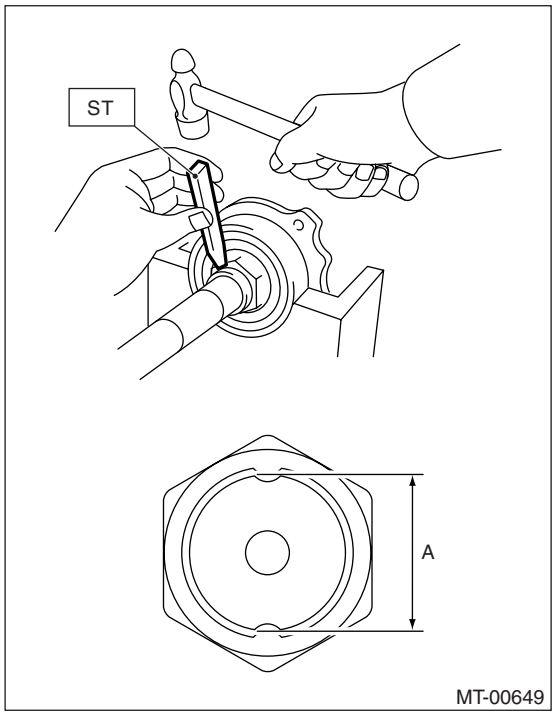

8) Using the ST, measure dimension B of the drive pinion.
ST 398643600 GAUGE

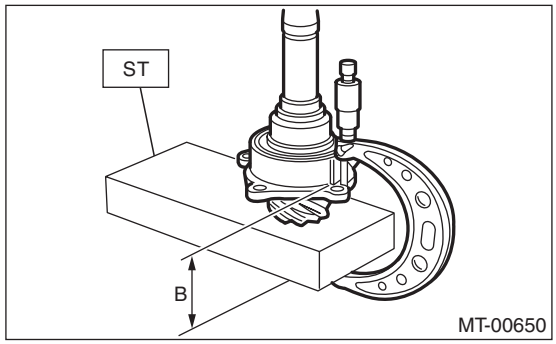

9) Calculate the following equation, then select one or two pieces of drive pinion shim from the table below.
6.5±0.0625 mm — (B—A) [0.26±0.0025 in — (B—A)]

NOTE:
A: Measured value from step 1).
B: Measured value from step 8).

Drive pinion shim	
Part No.	Thickness mm (in)
32295AA270	0.15 (0.0059)
32295AA280	0.175 (0.0069)
32295AA290	0.20 (0.0079)
32295AA300	0.225 (0.0089)
32295AA310	0.25 (0.0098)
32295AA320	0.275 (0.0108)

10) Apply gear oil to the side face of taper roller bearing, then install the drive pinion shaft and selected shim to adapter plate.

Tightening torque:
54 N·m (5.5 kgf-m, 40 ft-lb)

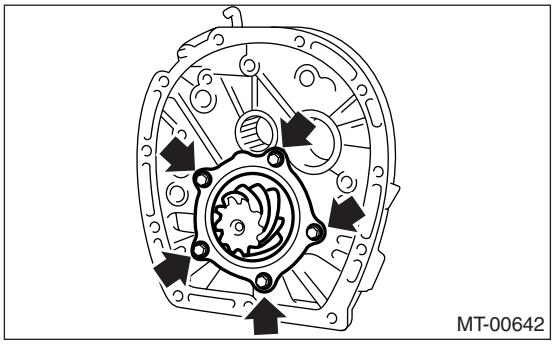

11) Install the oil chamber and pipe.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

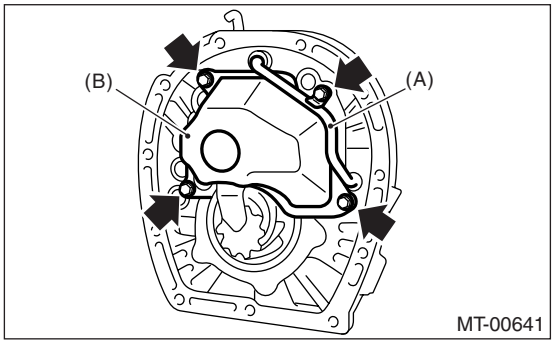

(A) Pipe
(B) Oil chamber

E: INSPECTION

1) Using the spring balancer, measure the starting torque. If the starting torque is out of specification, replace the taper roller bearing.

Starting torque:
0 — 0.95 N (0 — 0.097 kgf, 0 — 0.21 lb)

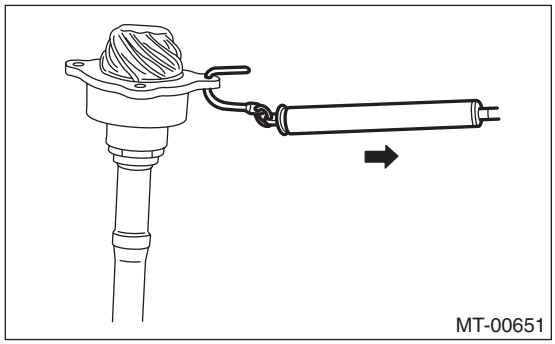

2) Gears
Replace the gears in the following case.
• Gear teeth surfaces are broken or excessively worn.
3) Bearings
Replace the bearings in the following cases.
• Worn, rusted and damaged bearing
• Bearings that fail to turn smoothly or make abnormal noise when turned
4) Adapter plate
Replace the adapter plate in the following cases.
• Worn, rusted and damaged bearing
• Damaged adapter plate
5) Make sure the pipe and pipe chamber is not damaged or clogged. Repair or replace if damaged or clogged.

F: ADJUSTMENT

1) Inspect and adjust the backlash between hypoid driven gear and drive pinion. <Ref. to 6MT-111, HYPOID GEAR BACKLASH, ADJUSTMENT, Front Differential Assembly.>
2) Apply a uniform thin coat of red lead on both teeth surfaces of three or four teeth of the hypoid driven gear.

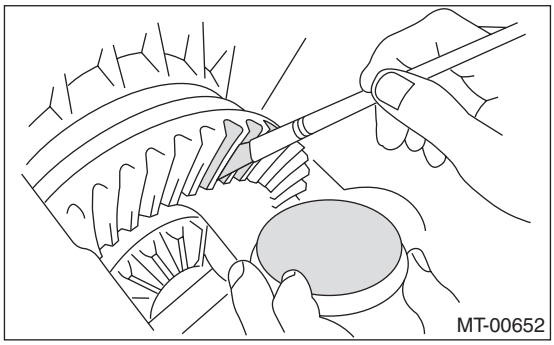

3) Install the drive pinion shaft assembly to clutch housing, then tighten at least four bolts.

NOTE:
Install with the liquid gasket remaining to prevent the mating surface of clutch housing and adapter plate from damaging.

Tightening torque:
50 N·m (5.1 kgf-m, 36.9 ft-lb)

4) Using the ST, rotate several times.
ST 18631AA000 HANDLE

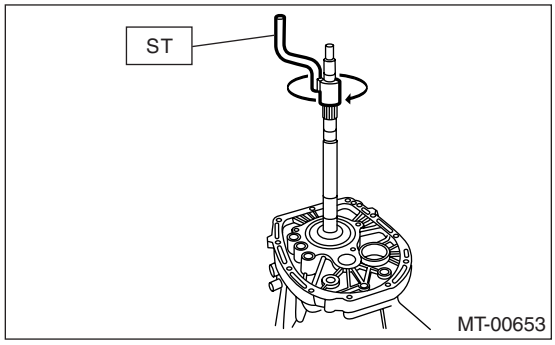

5) Remove the drive pinion shaft assembly, and then check tooth contact. If it is inaccurate, adjust the backlash or thickness of shim.

- Tooth contact

Checking item:Tooth contact pattern is slightly shifted toward to toe side under no-load rotation. [When loaded, contact pattern moves toward heel.]

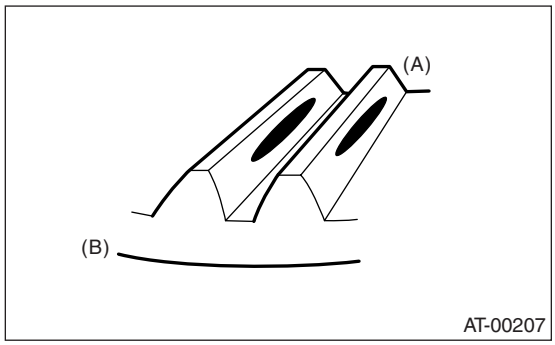

(A) Toe side
(B) Heel side

- Face contact

Checking item: Backlash is too large.
Contact pattern

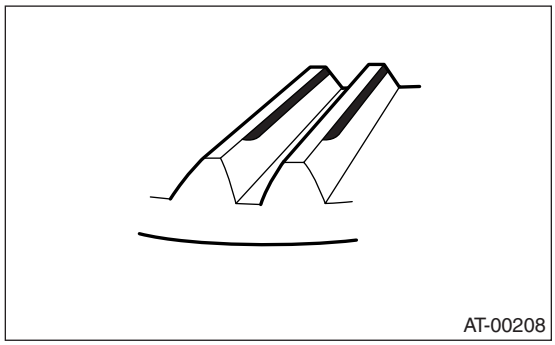

Corrective action: Verify the backlash again, and then adjust it.

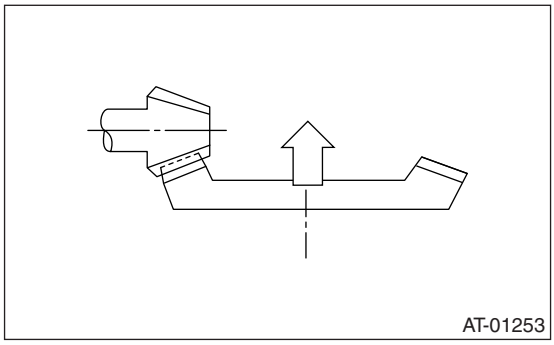

• Flank contact
Checking item: Backlash is too small.
Contact pattern

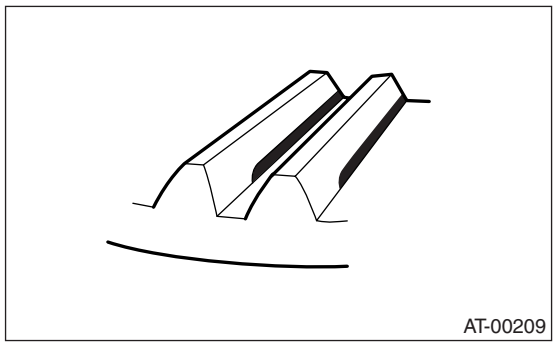

Corrective action: Verify the backlash again, and then adjust it.

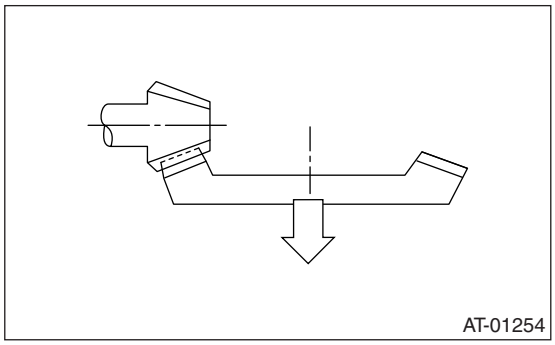

• Toe contact (Inside end contact)
Checking item: Contact areas is small.
Contact pattern

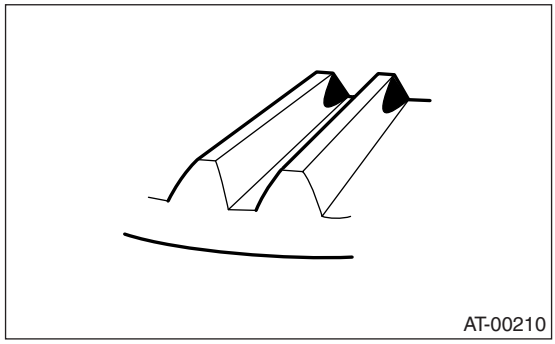

Corrective action: Reduce thickness of drive pinion shim in order to move drive pinion away from crown gear.

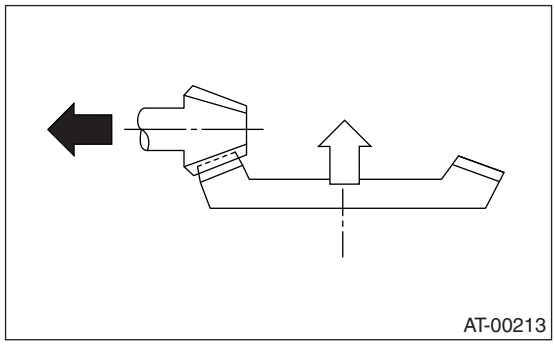

• Heel contact (Outside end contact)
Checking item: Contact areas is small.
Contact pattern

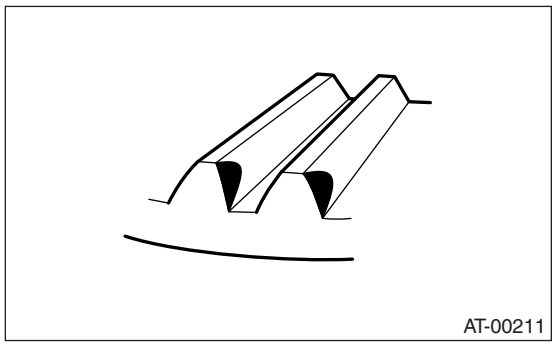

Corrective action: Increase thickness of drive pinion shim in order to bring drive pinion close to crown gear.

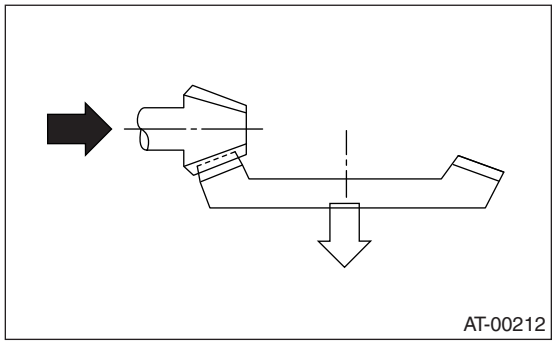

23.Front Differential Assembly

A: REMOVAL

1) Remove the manual transmission assembly. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove each gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>
10) Remove the drive pinion shaft assembly. <Ref. to 6MT-99, REMOVAL, Drive Pinion Shaft Assembly.>
11) Remove the lock plates on both side.

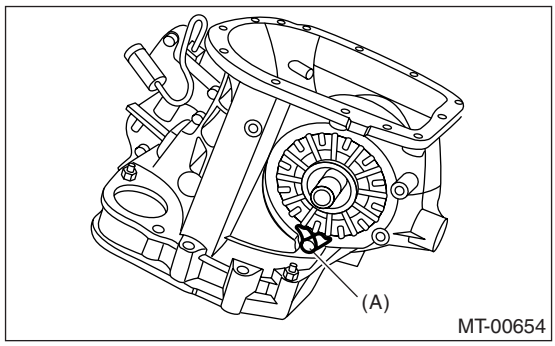

(A) Lock plate

12) Wrap vinyl tape around the spline part of axle shaft.

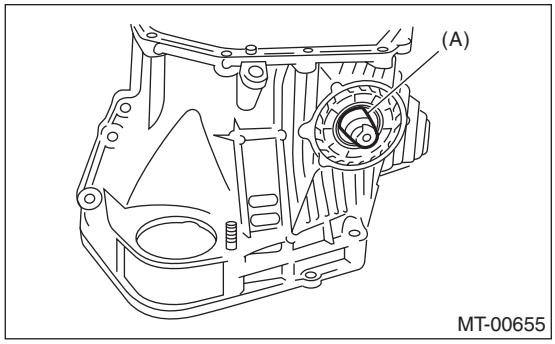

(A) Vinyl tape

13) Using the ST, remove the axle shaft.
ST1 499247300 INSTALLER
ST2 499095500 REMOVER ASSY

NOTE:
- Do not reuse the circlip.
- Mark to identify the right and left axle shaft.

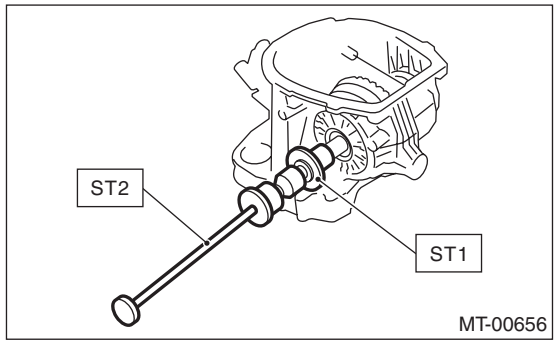

14) Using the ST, remove the differential side retainer on both side.

ST1	499787000	WRENCH ASSY (RIGHT SIDE)
ST2	18630AA000	WRENCH ASSY (LEFT SIDE)

NOTE:
Be careful not to damage the part of clutch case where the retainer is to be installed.

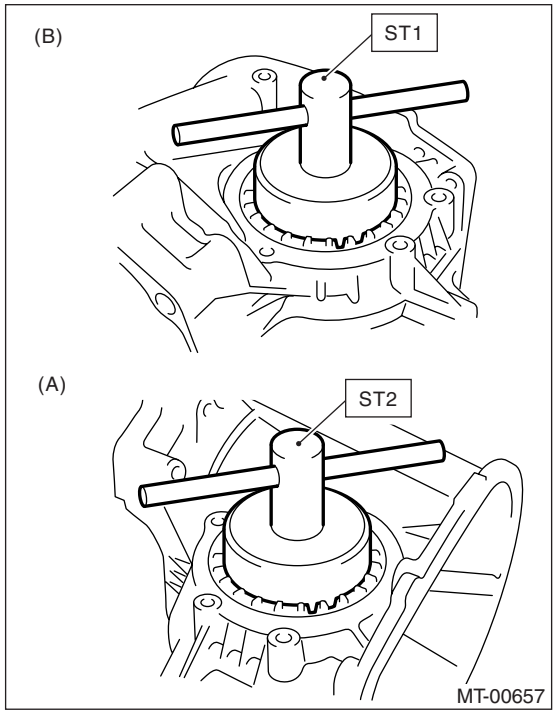

(A) Left side
(B) Right side

15) Remove the front differential.

B: INSTALLATION

1) Install the differential assembly into clutch housing.
2) Apply oil to the threaded portion part of side retainer.
3) Remove the O-ring from side retainer of both side.
4) Using the ST, install the differential side retainer to both side.

ST1	499787000	WRENCH ASSY (RIGHT SIDE)
ST2	18630AA000	WRENCH ASSY (LEFT SIDE)

NOTE:
Be careful not to damage the oil seal.

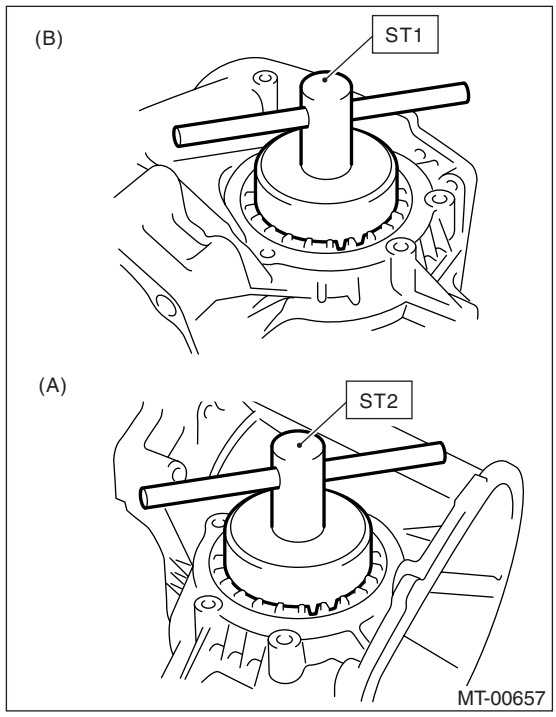

(A) Left side
(B) Right side

5) Install the axle shaft.

NOTE:
- Replace the circlip with a new one.
- Be careful not to confuse right and left axle shaft.
- Wrap vinyl tape around the spline part of axle shaft.

6) Check and adjust the hypoid gear backlash. <Ref. to 6MT-110, HYPOID GEAR BACKLASH, INSPECTION, Front Differential Assembly.>
7) Check and adjust the tooth contact. <Ref. to 6MT-103, ADJUSTMENT, Drive Pinion Shaft Assembly.>
8) Mark an engagement point on the right and left side retainer and clutch housing.

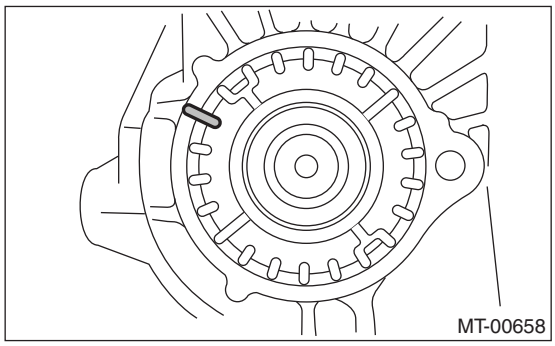

9) Remove the differential side retainer from both side.

NOTE:
Note the rotating number of time till removal, when removing the side retainer.

10) Install a new O-ring to side retainer of both side.
11) Install the differential side retainer to both side.

NOTE:
Install the side retainer by screwing in the same rotating number of time till removal, and then align the mark.

12) Install the lock plate.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

NOTE:
Be careful not to confuse right and left lock plate.

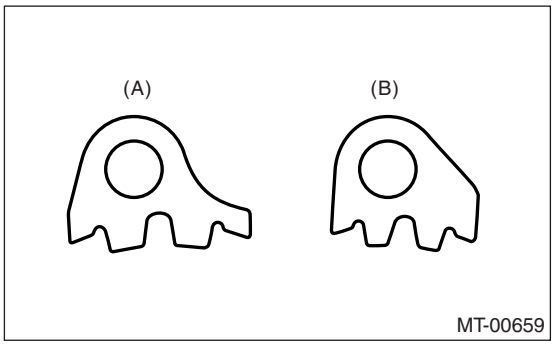

(A) Left
(B) Right

13) Completely remove the remaining gasket from the clutch housing and adapter plate.
14) Apply liquid gasket to the clutch housing.

Liquid gasket:
THREE BOND 1215

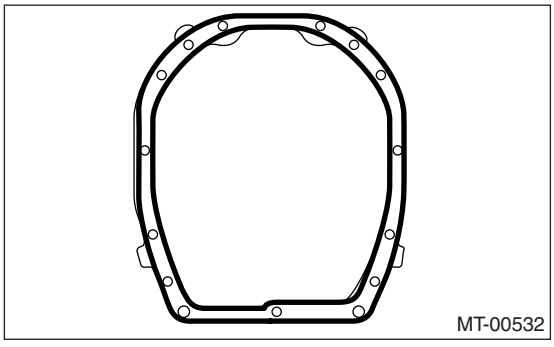

15) Install the drive pinion shaft assembly. <Ref. to 6MT-99, INSTALLATION, Drive Pinion Shaft Assembly.>
16) Install each gear assembly at once. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
17) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
18) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
19) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
20) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
21) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
22) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
23) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1. DIFFERENTIAL CASE

1) Secure the differential assembly on a vise, and then remove the hypoid driven gear.

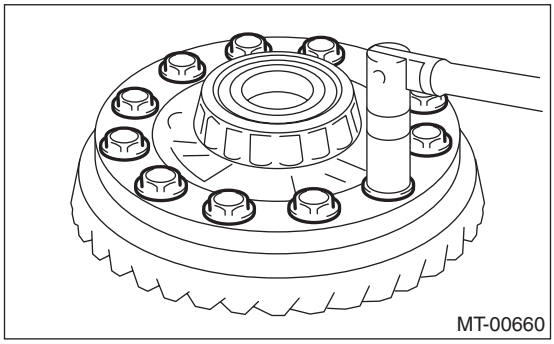

2) Drive out straight pin from the differential assembly toward hypoid driven gear. (Without LSD)
ST 899904100 REMOVER

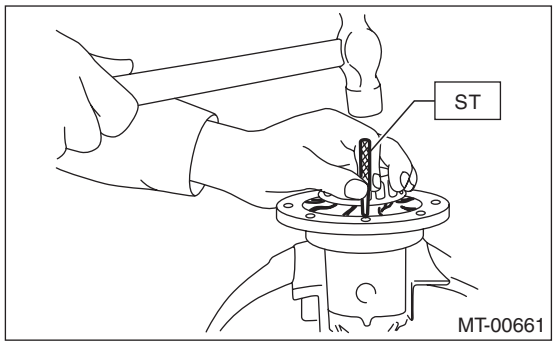

3) Pull out the pinion shaft, and then remove the bevel pinion gear and bevel gear and washer. (Without LSD)

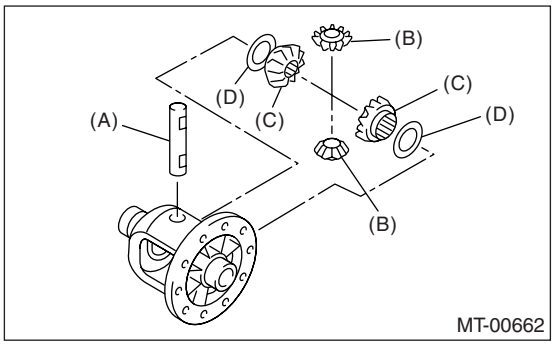

(A) Pinion shaft
(B) Bevel pinion gear
(C) Bevel gear
(D) Washer

4) Using the ST, remove the hypoid driven gear side bearing.
ST 399527700 PULLER SET

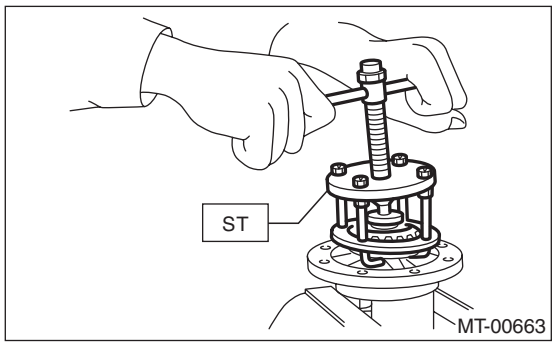

5) Using a screw driver, make clearance of 2 — 3 mm (0.079 — 0.118 in) between the speedometer drive gear and roller bearing.

NOTE:
Be careful not to damage the differential case.

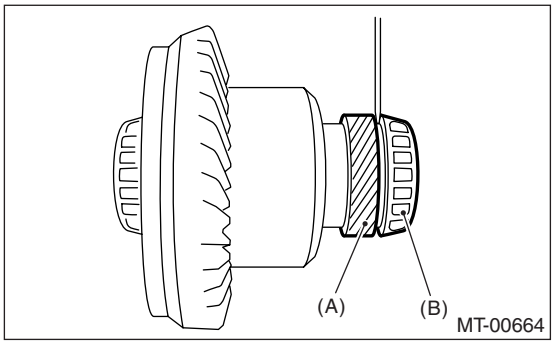

(A) Speedometer drive gear
(B) Roller bearing

6) Using the ST, remove the roller bearing.
ST 498077000 REMOVER

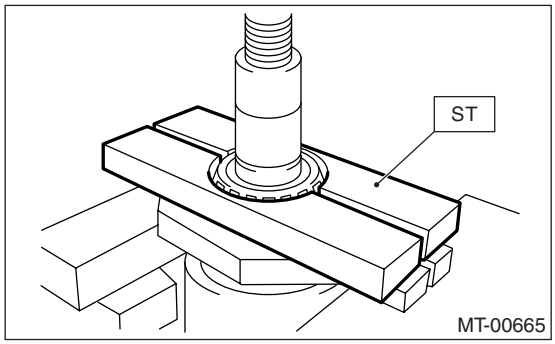

2. SIDE RETAINER

1) Remove the O-ring from side retainer.

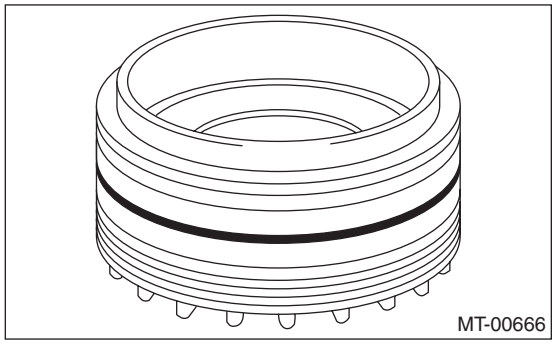

2) Remove the oil seal from side retainer.

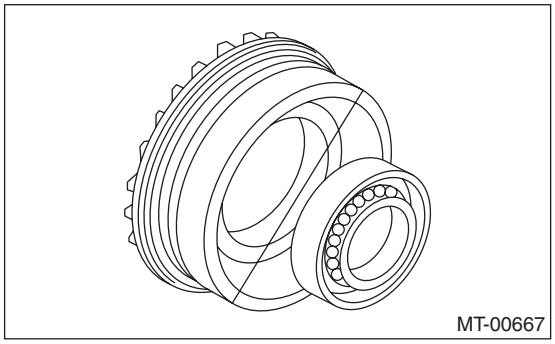

3) Remove the claw of ST1, and then install the claw of ST2.
ST1 398527700PULLER ASSY
ST2 18760AA000 CLAW

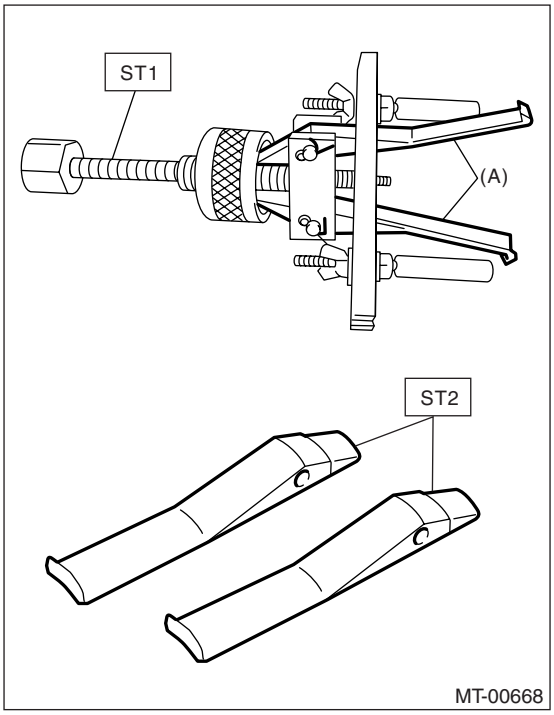

(A) Claw

4) Remove the bearing outer race from side retainer.
ST1 398527700 PULLER ASSY
ST2 398527705 CLAW

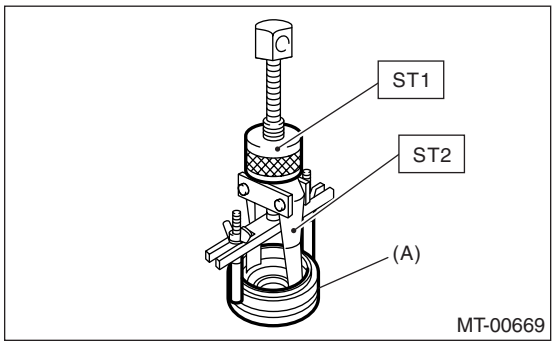

(A) Side retainer

D: ASSEMBLY

1. DIFFERENTIAL CASE

1) Install the washer to bevel gear.

NOTE:
Face the chamfered side of washer toward gear.

2) Install the bevel gear and bevel pinion gear washer to differential case, and then insert the pinion shaft.

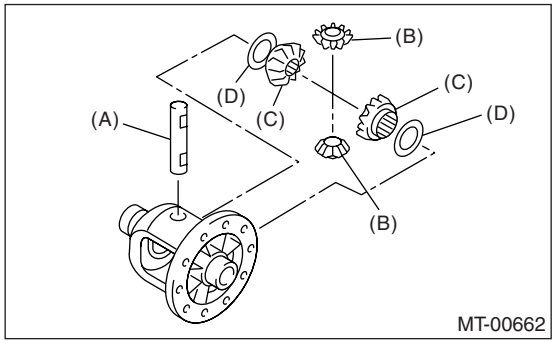

(A) Pinion shaft
(B) Bevel pinion gear
(C) Bevel gear
(D) Washer

3) Check the bevel pinion gear backlash. <Ref. to 6MT-110, BEVEL PINION GEAR BACKLASH, INSPECTION, Front Differential Assembly.>
4) Using the ST, align the pinion shaft and differential case at their holes, and then drive the straight pin into holes.
ST 899904100 REMOVER

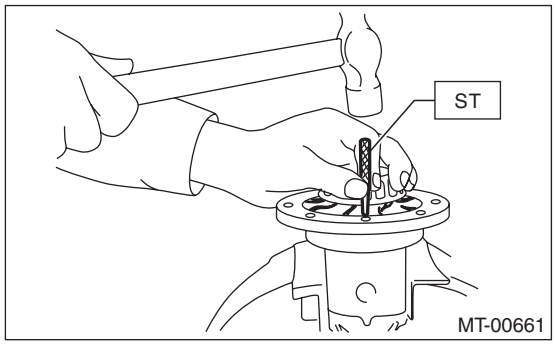

5) Stake around the hole, and then verify that the straight pin is secured.
6) Using the ST, install a new speedometer drive gear and right and left side bearing inner race to differential case.
ST1 398437700 INSTALLER
ST2 398497701 SEAT

CAUTION:
Do not apply pressure in excess of 20 kN (2.0 ton, 2.2 US ton, 2.0 Imp ton).

NOTE:
Always replace the inner race and outer race as a set.

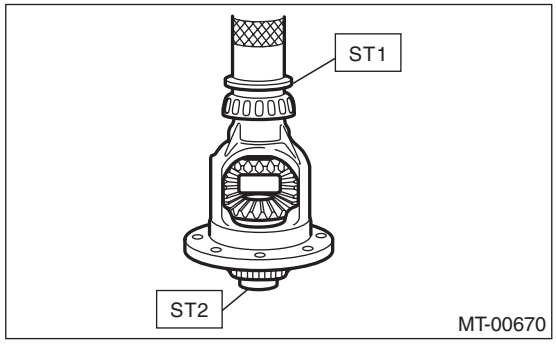

7) Install the hypoid driven gear to differential case.

Tightening torque:
69 N·m (7.0 kgf-m, 50.9 ft-lb)

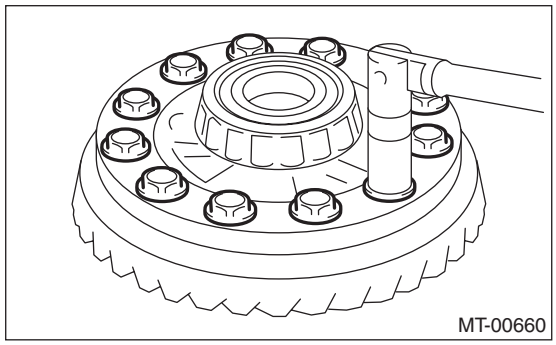

2. SIDE RETAINER

1) Using the ST, install the oil seal.
ST 499797000 OIL SEAL INSTALLER

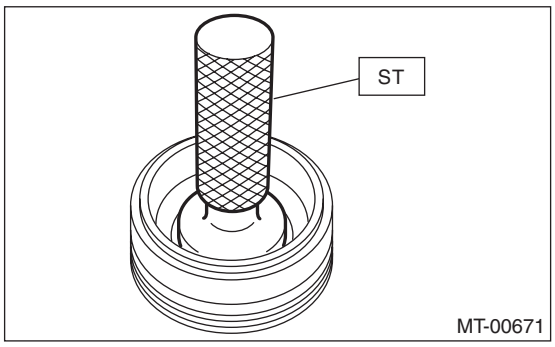

2) Install the bearing outer race to retainer on both side.
3) Install the O-ring to retainer on both side.

NOTE:
Be careful not to damage the O-ring.

E: INSPECTION

Repair or replace the front differential in following cases.
- Each gear is damaged, seized, or excessively worn.
- Sliding surfaces of the differential case is damaged, seized or excessively worn.
- Bearings and bearings part is damaged, rusted or worn.
- Bearings that fail to turn smoothly or make abnormal noise when turned.

1. BEVEL PINION GEAR BACKLASH

Measure the bevel pinion gear backlash. If it is not within specifications, install a suitable washer to adjust it. <Ref. to 6MT-111, ADJUSTMENT, Front Differential Assembly.>

NOTE:
- Be sure the pinion gear teeth contacts adjacent gear teeth during measurement.
- Before measuring the backlash, rotate each gear to get each part accustomed.

ST1 498247001 MAGNET BASE
ST2 498247100 DIAL GAUGE

Standard backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

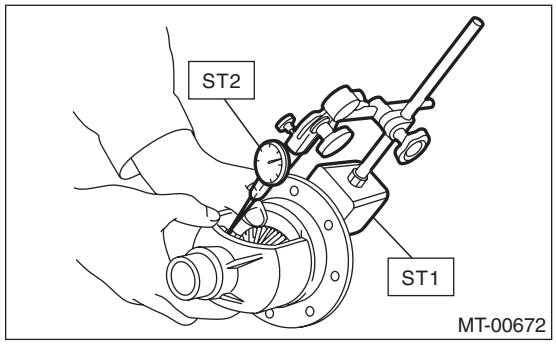

2. HYPOID GEAR BACKLASH

Check the hypoid gear backlash. If it is not within specifications, adjust it. <Ref. to 6MT-111, HYPOID GEAR BACKLASH, Front Differential Assembly.>

3. TOOTH CONTACT OF HYPOID GEAR

1) Be sure the hypoid gear backlash is within specifications. If it is not within specifications, adjust it. <Ref. to 6MT-111, HYPOID GEAR BACKLASH, Front Differential Assembly.>

2) Apply a uniform thin coat of red lead on both tooth surfaces of three or four teeth of the hypoid driven gear.

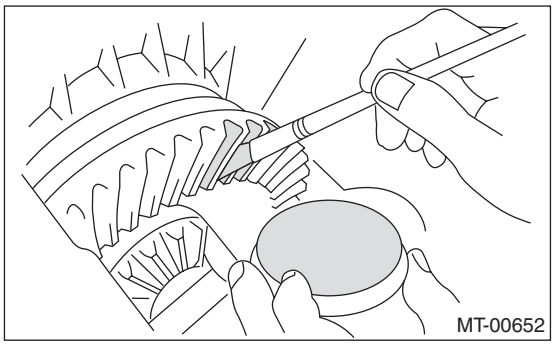

3) Install the drive pinion shaft assembly, and then secure with four bolts.

NOTE:
Use the old gasket and washer to prevent the mating surface of housing from damaging.

Tightening torque:
50 N·m (5.0 kgf-m, 36.9 ft-lb)

4) Rotate the drive pinion shaft to right and left for several times.
5) Remove the drive pinion shaft assembly, and then check tooth contact. If tooth contact is inaccurate, adjust it. <Ref. to 6MT-103, ADJUSTMENT, Drive Pinion Shaft Assembly.>
- Correct tooth contact.

NOTE:
Under no load, tooth contacts 50—60% from center to toe side (tooth contact shifts to heel side when driving).

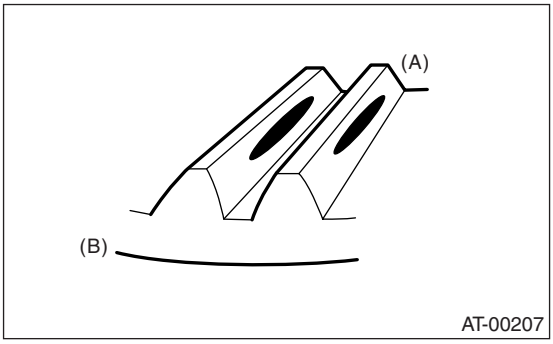

(A) Toe side
(B) Heel side

F: ADJUSTMENT

1. BEVEL PINION GEAR BACKLASH

1) Measure the bevel pinion gear backlash. <Ref. to 6MT-110, BEVEL PINION GEAR BACKLASH, INSPECTION, Front Differential Assembly.>
2) Disassemble the differential case. <Ref. to 6MT-107, DIFFERENTIAL CASE, DISASSEMBLY, Front Differential Assembly.>
3) Select a washer from the following table, and then assemble the differential case. <Ref. to 6MT-109, DIFFERENTIAL CASE, ASSEMBLY, Front Differential Assembly.>

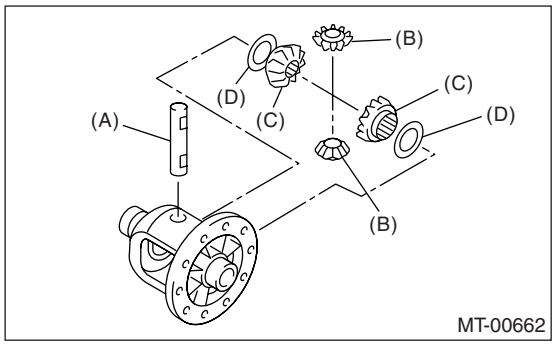

(A) Pinion shaft
(B) Bevel pinion gear
(C) Bevel gear
(D) Washer

NOTE:
If the backlash is excessive, select a thicker shim. If the backlash is insufficient, select a thinner new shim.

Washer	
Part No.	Thickness mm (in)
803038021	0.925 — 0.950 (0.0364 — 0.0374)
803038022	0.975 — 1.000 (0.0384 — 0.0394)
803038023	1.025 — 1.050 (0.0404 — 0.0413)

2. HYPOID GEAR BACKLASH

1) Install the right and left side retainer.
ST1 499787000 WRENCH ASSY (RIGHT SIDE)
ST2 18630AA000 WRENCH ASSY (LEFT SIDE)

NOTE:
Screw in the right side retainer a bit further than left side.

2) Install the drive pinion shaft assembly, and then secure with four bolts.

NOTE:
Use the old gasket and washer to prevent the mating surface of housing from damaging.

Tightening torque:
50 N·m (5.0 kgf-m, 36.9 ft-lb)

3) Using the ST, screw in the left side retainer until the drive pinion and hypoid driven gear contacts lightly. Then loosen the right side retainer.
ST1 499787000 WRENCH ASSY (RIGHT SIDE)
ST2 18630AA000 WRENCH ASSY (LEFT SIDE)
4) Using the ST, rotate the drive pinion shaft several times.
ST 18631AA000 HANDLE

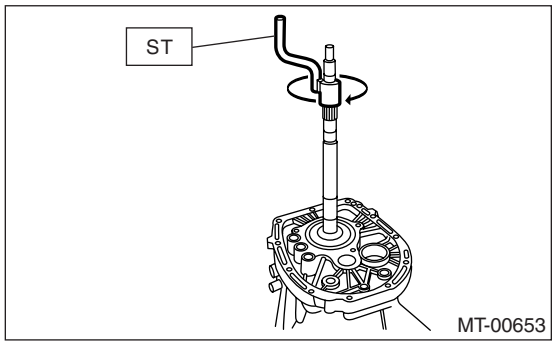

5) Repeat step 3) and 4) until the left side retainer can not be rotated. For the right side retainer, screw in until the inner race and outer race contacts lightly. This condition is “0” backlash.
6) Mark an engagement point on the right and left side retainer and clutch housing.

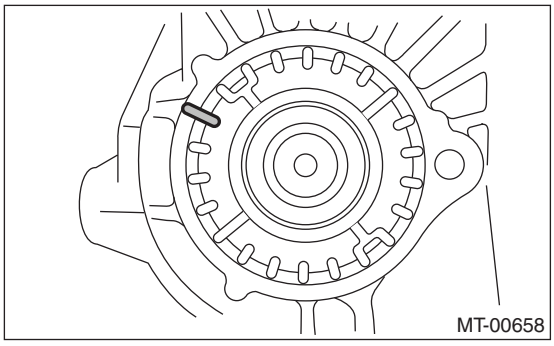

7) Return the left side retainer for three teeth, and screw in the right side retainer for three teeth.
8) Using the ST, secure the drive pinion shaft.
ST 18621AA000 ADAPTER WRENCH

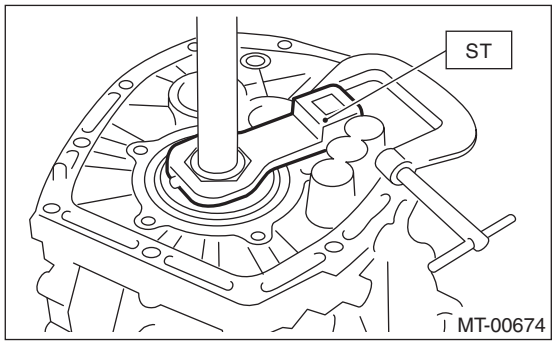

9) After rotating the drive pinion shaft several times, measure the hypoid gear backlash using the ST.
ST1 498255400 PLATE
ST2 498247001 MAGNET BASE
ST3 498247100 DIAL GAUGE

Hypoid gear backlash:
0.13 — 0.18 mm (0.0051 — 0.0071 in)

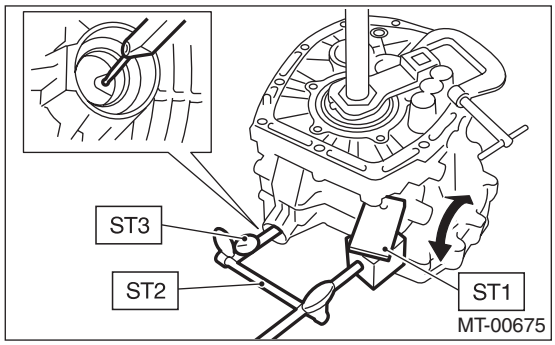

10) If the backlash is out of specification, adjust it by turning the right and left side retainers.
11) Screw in the right side retainer for further 1.75 teeth.

3. TOOTH CONTACT OF HYPOID GEAR

Refer to the section of drive pinion shaft for checking of tooth contact. <Ref. to 6MT-110, TOOTH CONTACT OF HYPOID GEAR, INSPECTION, Front Differential Assembly.>

24.Speedometer Gear

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove each gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>
10) Remove the drive pinion shaft assembly. <Ref. to 6MT-99, REMOVAL, Drive Pinion Shaft Assembly.>
11) Remove the front differential assembly. <Ref. to 6MT-105, REMOVAL, Front Differential Assembly.>
12) Remove the vehicle speed sensor. <Ref. to 6MT-34, REMOVAL, Vehicle Speed Sensor.>
13) Remove the snap ring, and then remove the speedometer driven gear.

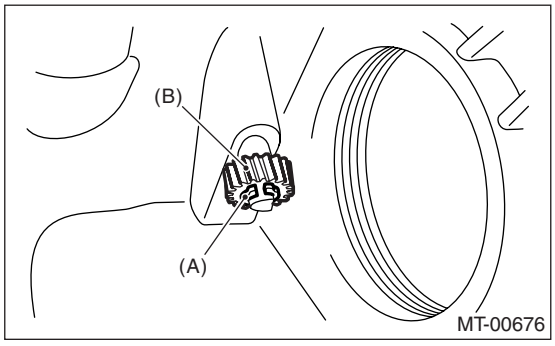

(A) Snap ring
(B) Speedometer driven gear

14) Remove the speedometer shaft from clutch housing.
15) Remove the oil seal, speedometer shaft and washer.

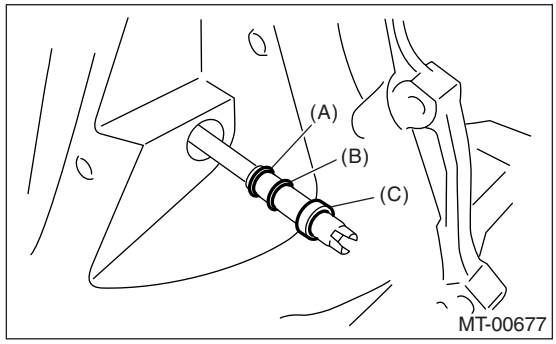

(A) Washer
(B) Snap ring
(C) Oil seal

16) Remove the snap ring from speedometer shaft.

B: INSTALLATION

1) Install the oil seal, washer and snap ring to speedometer shaft.
2) Insert the speedometer shaft. Using the ST, press the oil seal.
ST 899824100 or 499827000 PRESS

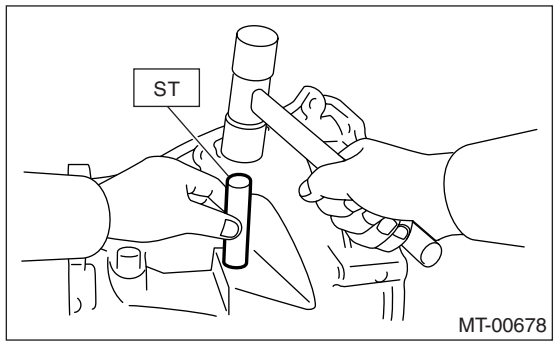

NOTE:
• Replace the oil seal with a new one.
• Insert the oil seal approx. 24 mm (0.94 in) from the edge of clutch case.

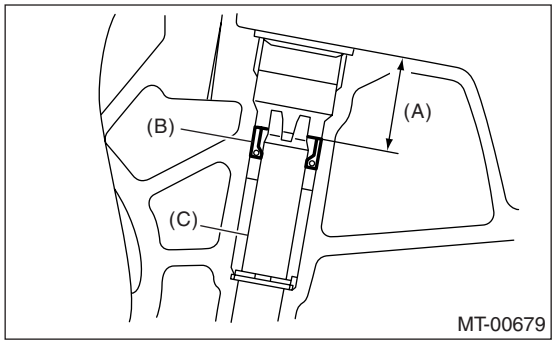

(A) Approx. 24 mm (0.94 in)
(B) Oil seal
(C) Speedometer shaft

3) Install the speedometer driven gear and snap ring.

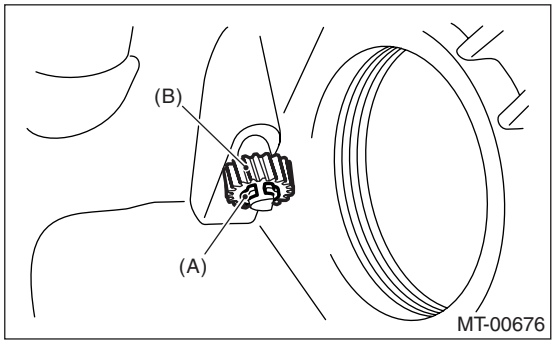

(A) Snap ring
(B) Speedometer driven gear

4) Install the vehicle speed sensor. <Ref. to 6MT-34, INSTALLATION, Vehicle Speed Sensor.>
5) Install the front differential assembly. <Ref. to 6MT-106, INSTALLATION, Front Differential Assembly.>
6) Install the drive pinion shaft assembly. <Ref. to 6MT-99, INSTALLATION, Drive Pinion Shaft Assembly.>
7) Install each gear assembly at once. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
8) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
9) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
10) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
11) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
12) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
13) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
14) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

25.Shifter Fork and Rod

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove each gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>

B: INSTALLATION

1) Install each gear assembly at once. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
2) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
3) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
4) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
5) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
6) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
7) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
8) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:
Discard the removed spring pin and replace with a new one.

1. REVERSE SHIFTER FORK

1) Using the ST, remove the reverse fork.
ST 398791700 REMOVER

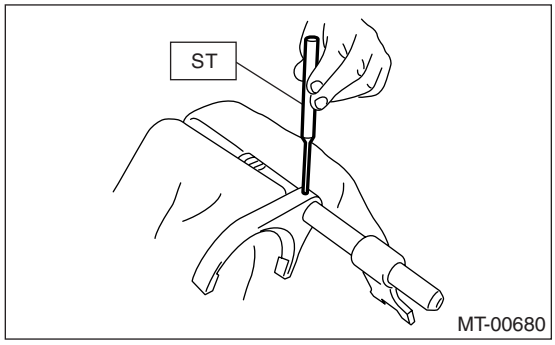

2) Using the ST, remove the reverse shifter arm.
ST 398791700 REMOVER

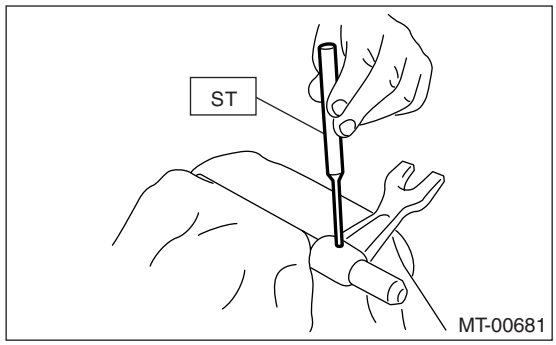

2. 1st-2nd, 3rd-4th SHIFTER FORK

1) Using the ST, remove the 3rd-4th shifter fork.
ST 398791700 REMOVER

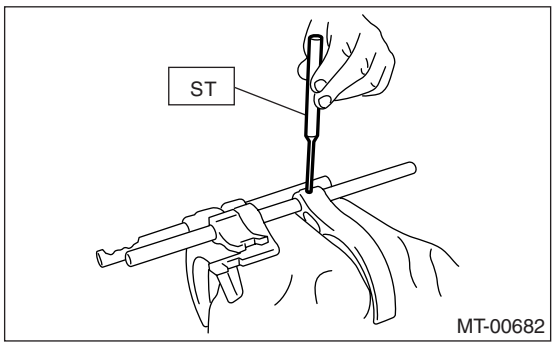

2) Using the ST, remove the 3rd-4th shifter arm.
ST 398791700 REMOVER

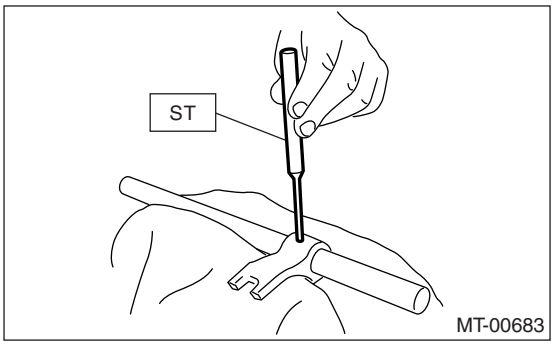

3) Using the ST, remove the 1st-2nd shifter arm and 1st-2nd shifter fork.
ST 398791700 REMOVER

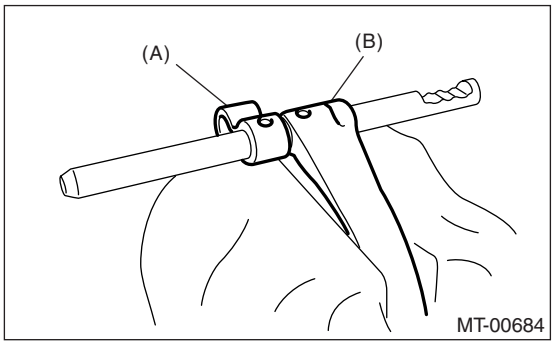

(A) 1st-2nd shifter arm
(B) 1st-2nd shifter fork

3. 5th-6th SHIFTER FORK

1) Using the ST, remove the 5th-6th shifter fork.
ST 398791700 REMOVER

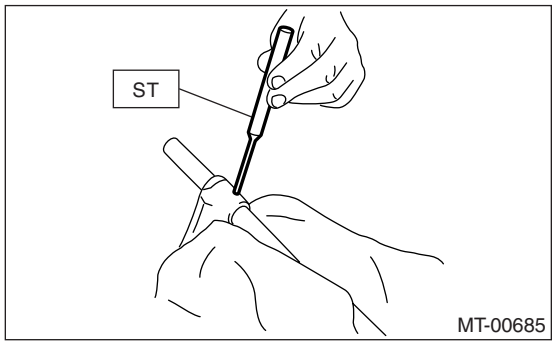

2) Using the ST, remove the 5th-6th shifter arm.
ST 398791700 REMOVER

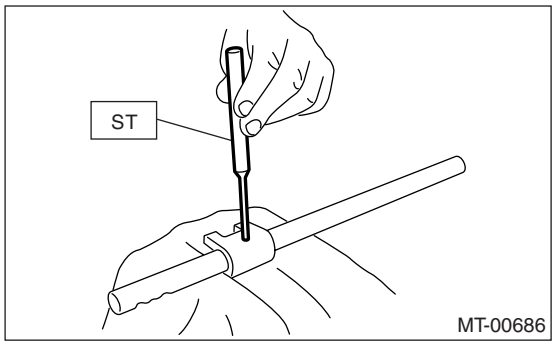

4. SHIFT ARM SHAFT

Using the ST, remove the selector arm.
ST 398791700 REMOVER

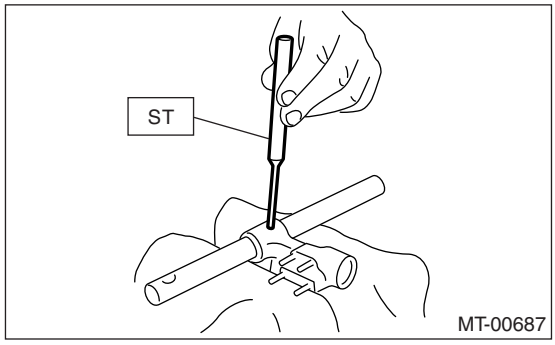

5. STRIKING ROD

1) Remove the reverse interlock block and interlock block from striking rod.

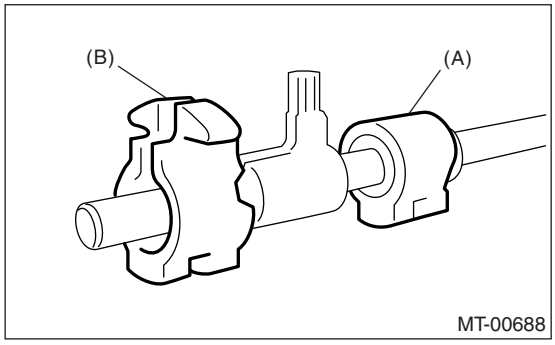

(A) Reverse interlock block
(B) Interlock block

2) Using the ST, remove the reverse interlock arm.
ST 398791700 REMOVER

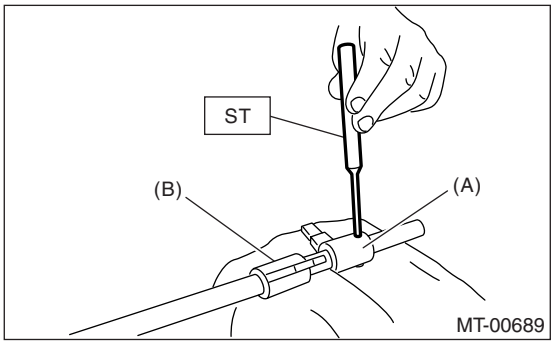

(A) Reverse interlock arm
(B) Interlock arm

3) Using the ST, remove the interlock arm.
ST 398791700 REMOVER

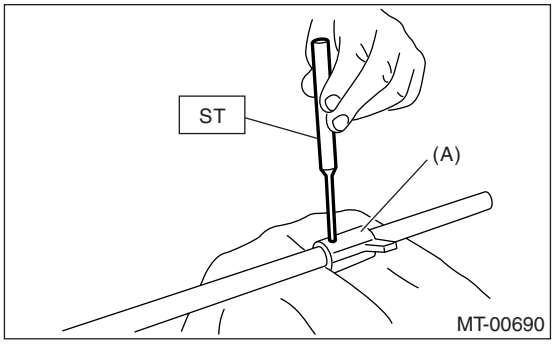

(A) Interlock arm

D: ASSEMBLY

1. REVERSE SHIFTER FORK

1) Using the ST, install the reverse fork.
ST 398791700 REMOVER

NOTE:
Make sure to install the reverse fork and rod in proper direction.

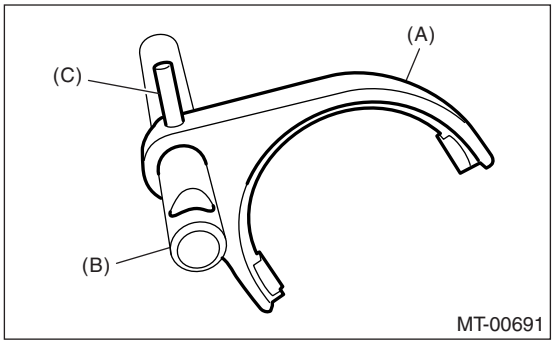

(A) Reverse fork
(B) Reverse rod
(C) Spring pin

2) Using the ST, install the reverse arm.
ST 398791700 REMOVER

NOTE:
Make sure to install the reverse arm and rod in proper direction.

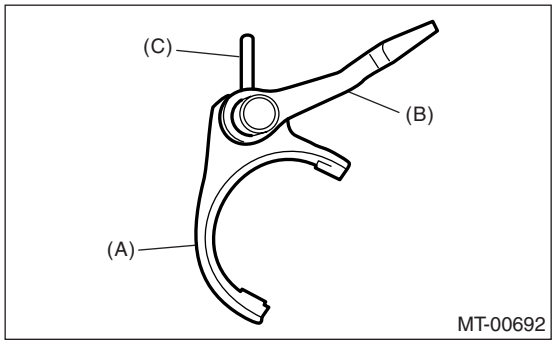

(A) Reverse arm
(B) Reverse rod
(C) Spring pin

2. 1st-2nd, 3rd-4th SHIFTER FORK

1) Using the ST, install the 1st-2nd shifter fork.
ST 398791700 REMOVER

NOTE:
Make sure to install the 1st-2nd shifter fork and rod in proper direction.

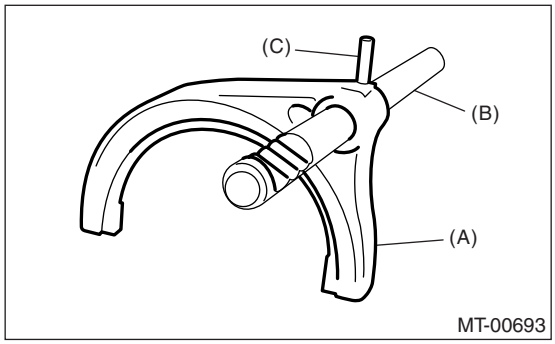

(A) 1st-2nd shifter fork
(B) 1st-2nd shifter rod
(C) Spring pin

2) Using the ST, install the 1st-2nd shifter arm.
ST 398791700REMOVER

NOTE:
Make sure to install the 1st-2nd shifter arm and fork in proper direction.

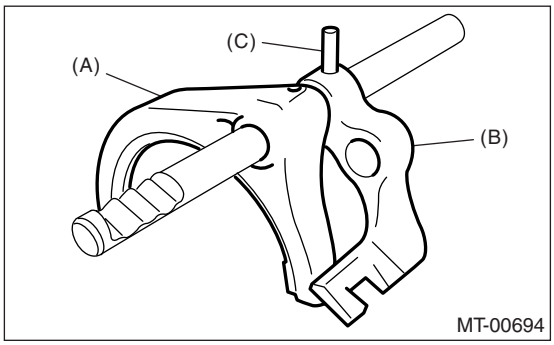

(A) 1st-2nd shifter fork
(B) 1st-2nd shifter arm
(C) Spring pin

3) Using the ST, install the 3rd-4th shifter arm.
ST 398791700 REMOVER

NOTE:
Make sure to install the 3rd-4th shifter arm and rod in proper direction.

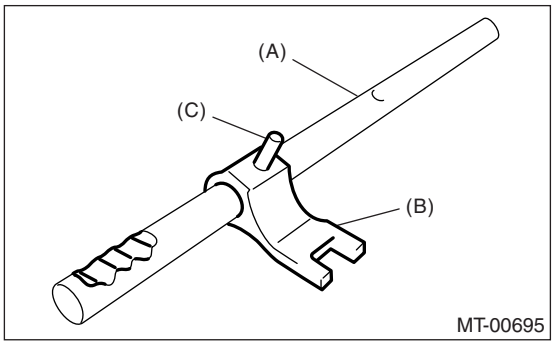

(A) 3rd-4th shifter rod
(B) 3rd-4th shifter arm
(C) Spring pin

4) Install the 3rd-4th fork rod into 1st-2nd shifter arm.

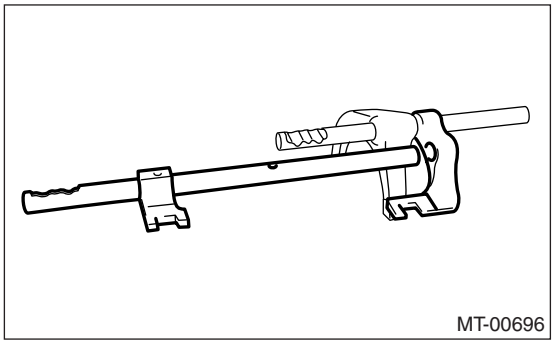

5) Using the ST, install the 3rd-4th shifter fork.
ST 398791700 REMOVER

NOTE:
Make sure to install the 3rd-4th shifter fork in proper direction.

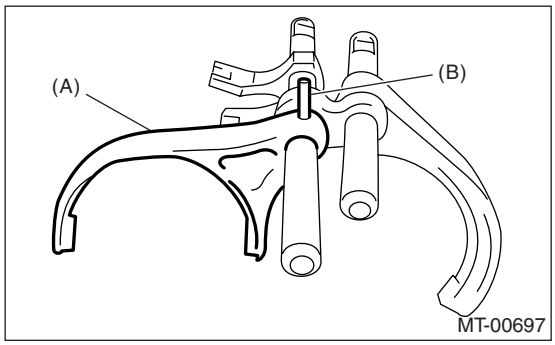

(A) 3rd-4th shifter fork
(B) Spring pin

3. 5th-6th SHIFTER FORK

1) Using ST, install the 5th-6th shifter arm.
ST 398791700 REMOVER

NOTE:
Make sure to install the 5th-6th shifter arm and rod in proper direction.

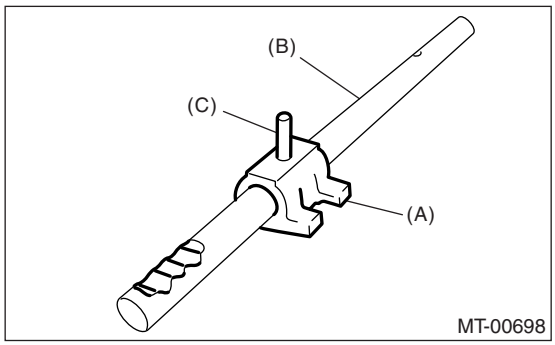

(A) 5th-6th shifter arm
(B) 5th-6th shifter rod
(C) Spring pin

2) Using the ST, install the 5th-6th shifter fork.
ST 398791700REMOVER

NOTE:
Make sure to install the 5th-6th shifter fork and arm in proper direction.

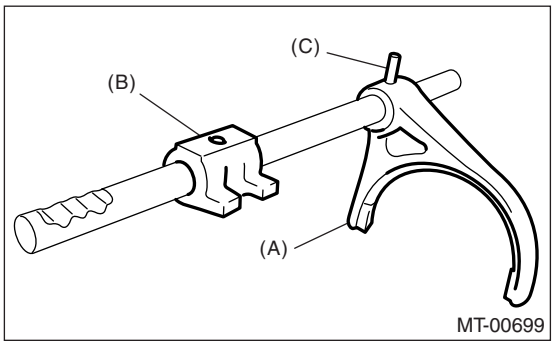

(A) 5th-6th shifter fork
(B) 5th-6th shifter arm
(C) Spring pin

4. SHIFT ARM SHAFT

Using the ST, install the selector arm.
ST 398791700 REMOVER

NOTE:
Make sure to install the selector arm and rod in proper direction.

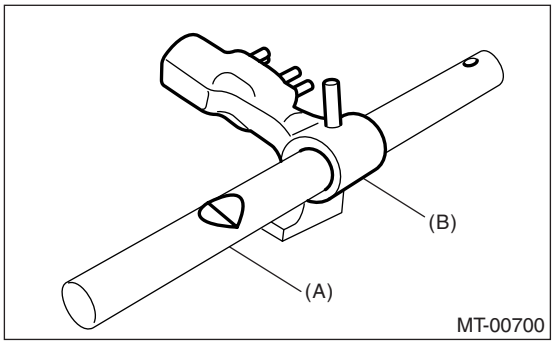

(A) Selector rod
(B) Selector arm

5. STRIKING ROD

1) Using the ST, install the reverse interlock arm and interlock arm.
ST 398791700 REMOVER

NOTE:
• Make sure to install the reverse interlock arm and rod in proper direction.

• Make sure to install the interlock arm and rod in proper direction.

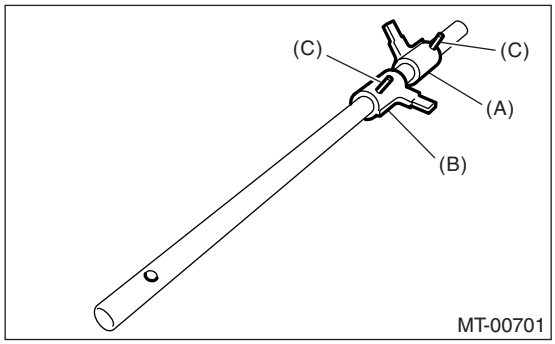

(A) Reverse interlock arm
(B) Interlock arm
(C) Spring pin

2) Install the reverse interlock block and interlock block to striking rod.

NOTE:
Make sure to install the reverse interlock block and interlock block in proper direction.

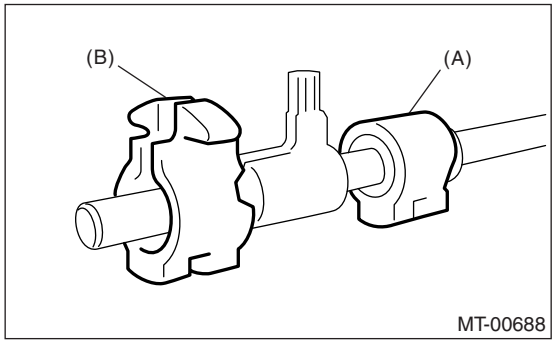

(A) Reverse interlock block
(B) Interlock block

E: INSPECTION

1) Check the shift shaft and shift rod for damage. Replace if damaged.
2) Repair or replace the gearshift mechanism if excessively worn, bent, or defective in any way.

F: ADJUSTMENT

1. SELECTION OF 1st-2nd FORK ROD

NOTE:
• Perform the following procedures when.
Replacing the 1st, 2nd driven gear.
• Replacing the 1st, 2nd synchro ring assembly.
• Replacing the adapter plate.
• Replacing the driven shaft.
• Replacing the 1st-2nd hub, sleeve assembly.

1) Insert the drive pinion assembly in adapter plate.

NOTE:
Make sure the thrust bearing outer race is not removed and drive pinion is not lift-up.

2) Set the height gauge to adapter plate. Lower the indicator of height gauge to mating surface of adapter plate and case, then set to zero point.
ST 18853AA000 HEIGHT GAUGE

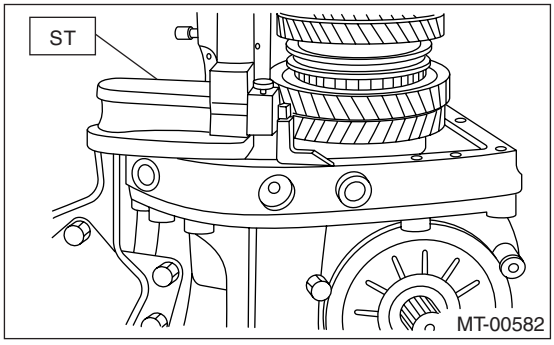

NOTE:
• Remove the remaining gasket on edge surface with scraper, since the adapter plate is base point of measurement.
• Do not place the height gauge on shaded area in the figure during measurement.

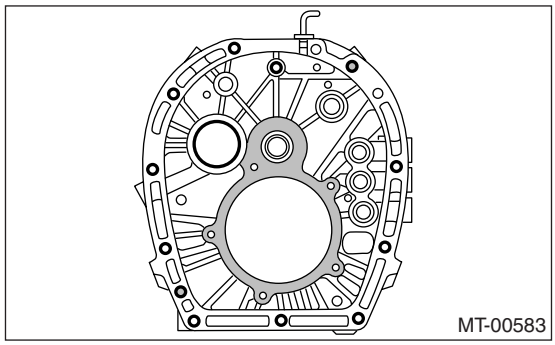

3) Select the main shaft snap ring. <Ref. to 6MT-83, ADJUSTMENT, Main Shaft Assembly.>
4) Shift the 1st-2nd sleeve to 1st driven gear side, then press down to the stopper and measure “B1”.

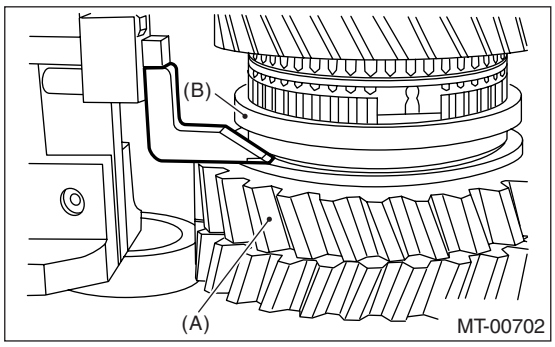

(A) 1st driven gear
(B) 1st-2nd sleeve

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of sleeve 1st side.
• Measure five points of the sleeve turning every approx. 72°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

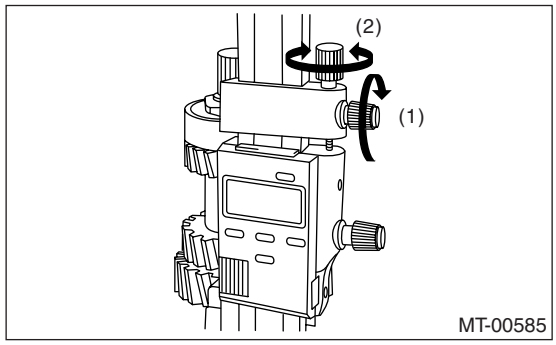

5) Set the height gauge indicator upside down.

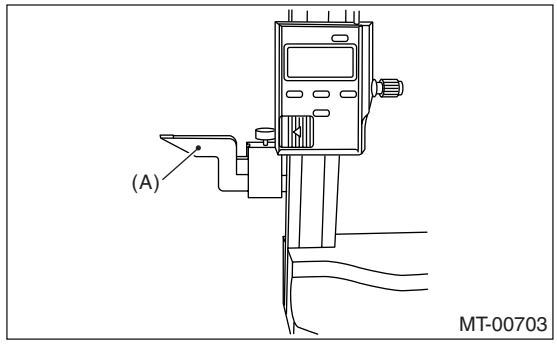

(A) Indicator

6) Shift the 1st-2nd sleeve to 2nd driven gear side, then press up to the stopper and measure “B2”.

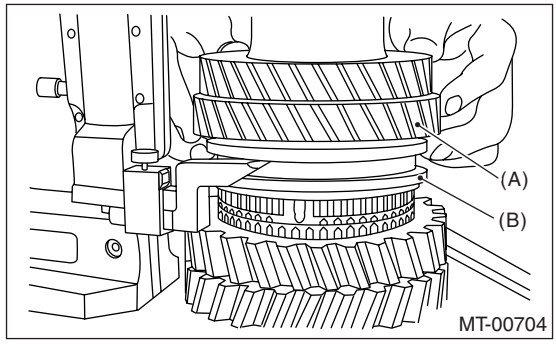

(A) 2nd driven gear
(B) 1st-2nd sleeve

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of sleeve 2nd side.
• Perform the measuring procedure with two people, and measure the sleeve lifted up straight.
• Measure five points of the sleeve turning every approx. 72° apart. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

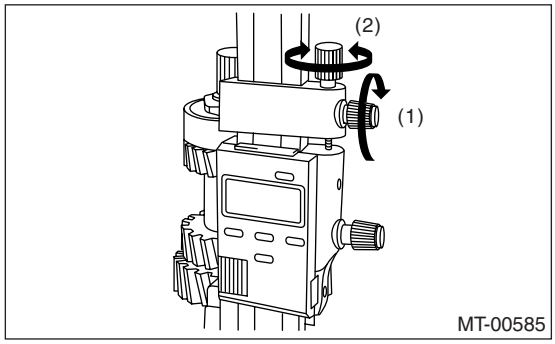

7) According to both measurements, calculate the 1st-2nd sleeve neutral position. Select the fork rod which applies to the calculated value from following equation.

Equation: T = (B1 + B2) / 2

T: 1st-2nd sleeve center position
B1: Height from adapter plate edge to sleeve edge when shifted to 1st gear.
B2: Height from adapter plate edge to sleeve edge when shifted to 2nd gear. [measurement value + 55 mm (2.17 in)]

NOTE:
The indicator is installed upside down compared to the setting procedure of zero point. Add d1 [fixing value: 55 mm (2.17 in)] from the following figure to “B2”, to obtain measurement value of “B2”.

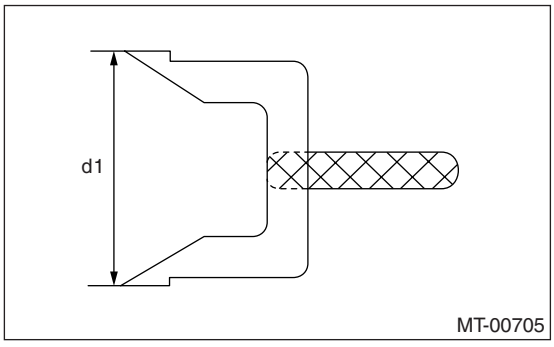

T mm (in)	Lot No. (Mark)
62.93 — 63.23 (2.4776 — 2.4894)	32801AA111 (1)
63.23 — 63.53 (2.4894 — 2.5012)	32801AA131 (None)
63.53 — 63.83 (2.5012 — 2.5130)	32801AA141 (2)

2. SELECTION OF 3rd-4th FORK ROD

NOTE:
Perform the following procedures when.
• Replacing the main shaft.
• Replacing the 3rd, 3rd to 6th drive gear and bush.
• Replacing the 3rd, 3rd to 6th synchro assembly.
• Replacing the 3rd-4th hub, sleeve assembly.

1) Insert the main shaft assembly in adapter plate.
2) Set the height gauge to adapter plate. Lower the indicator of height gauge to upper surface of snap ring groove, on the upper side of main rear bearing, then set to zero point.
ST 18853AA000 HEIGHT GAUGE

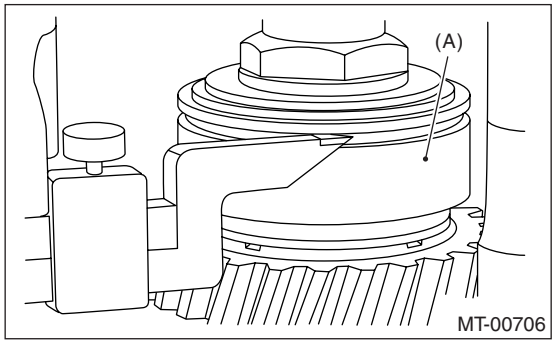

(A) Ball bearing

NOTE:
• Remove the remaining gasket on edge surface with scraper, since the height gauge is set on adapter plate during measurement.
• Do not put the height gauge on shaded area in the figure during the measurement.

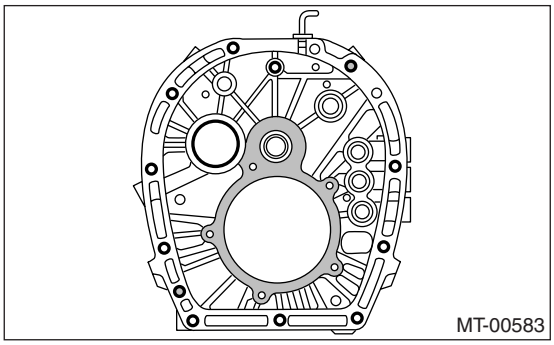

3) Using the height gauge, measure “C1” and “C2” shown in the figure.

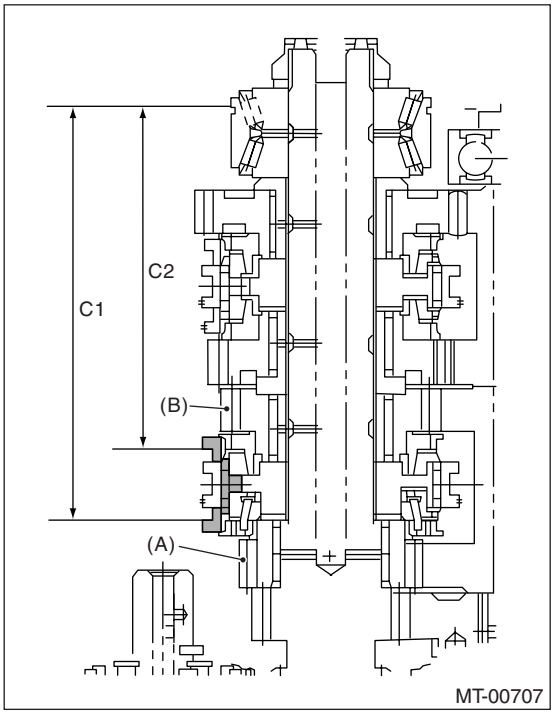

(A) 3rd drive gear
(B) 4th drive gear

(1) Shift the 3rd-4th sleeve to 4th gear side, then press up to the stopper and measure “C2”.

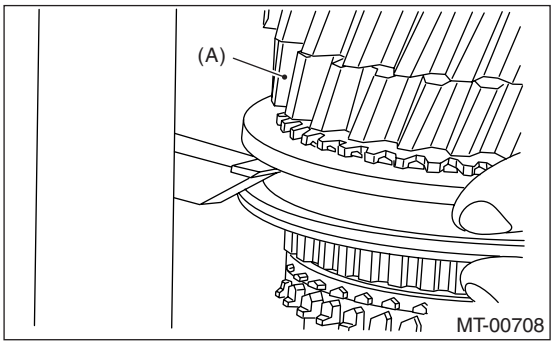

(A) 4th drive gear

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure.
• Turn dial (2) to set the indicator to edge surface of sleeve 4th side.
• Perform the measuring procedure with two people, and measure the sleeve lifted up straight.
• Measure five points of the sleeve turning every approx. 72°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

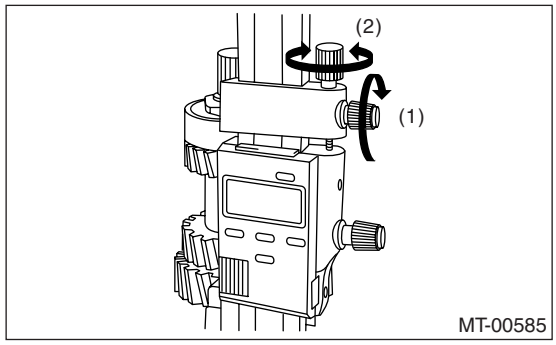

(2) Set the height gauge indicator upside down.

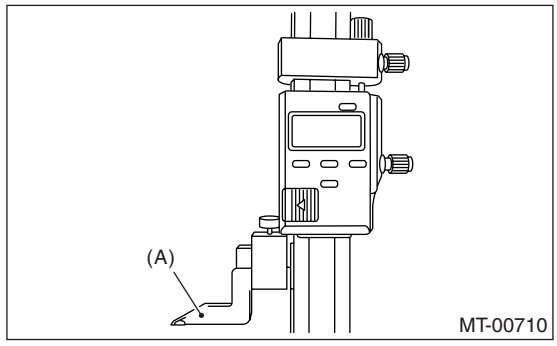

(A) Indicator

(3) Shift the 3rd-4th sleeve to 3rd drive gear side, then press down to the stopper and measure “C1”.

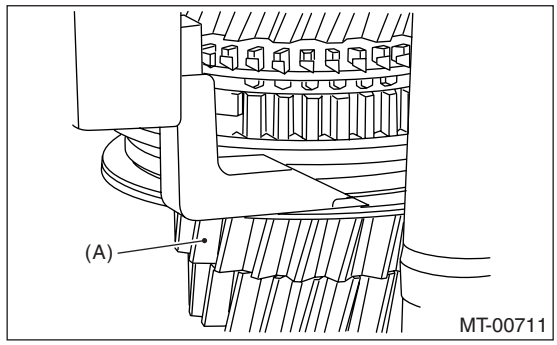

(A) 3rd drive gear

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of sleeve 3rd side.

• Measure five points of the sleeve turning every approx. 72°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

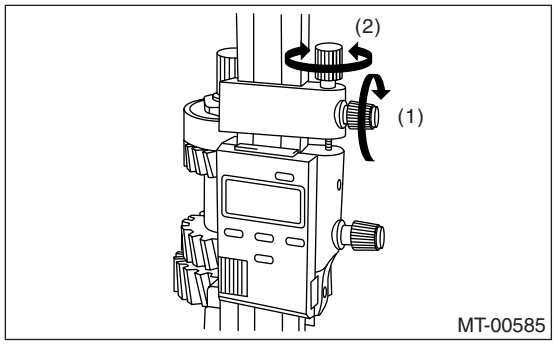

4) According to both measurements, calculate the 3rd-4th sleeve neutral position. Select the fork rod which applies to the calculated value from following equation.

Equation: T = (C1 + C2) / 2

T: 3rd-4th sleeve center position
C1: Length from main shaft rear bearing snap ring groove to sleeve edge when shifted to 3rd gear. [measurement value +55 mm (2.17 in)]
C2: Length from main shaft rear bearing snap ring groove to sleeve edge when shifted to 4th gear.

NOTE:
The indicator is installed upside down compared to the setting procedure of zero point. Add d1 [fixing value: 55 mm (2.17 in)] from the following figure to “C1”, to obtain measurement value of “C1”.

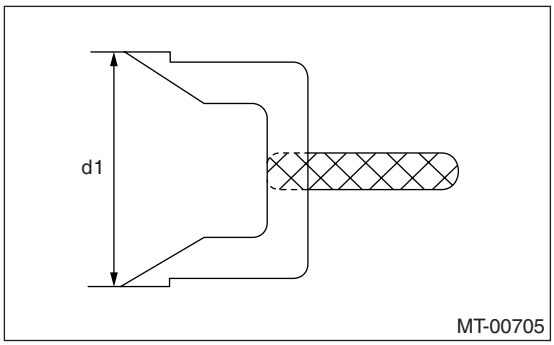

T mm (in)	Lot No. (Mark)		
	M.SFT Snap ring 805072010 [t=1.65 mm (0.065 in)]	M.SFT Snap ring 805072011 [t=1.95 mm (0.077 in)]	M.SFT Snap ring 805072012 [t=2.25 mm (0.089 in)]
137.22 — 137.52 (5.4024 — 5.4142)	32809AA171 (None)	32809AA181 (2)	32809AA191 (4)
137.52 — 137.82 (5.4142 — 5.4260)	32809AA161 (1)	32809AA171 (None)	32809AA181 (2)
137.82 — 138.12 (5.4260 — 5.4379)	32809AA141 (3)	32809AA161 (1)	32809AA171 (None)

T = Thickness

3. SELECTION OF 5th-6th FORK ROD

NOTE:
Perform the following procedures when.
• Replacing the main shaft.
• Replacing the 3rd to 6th drive gear and bush.
• Replacing the 3rd to 6th synchro ring assembly.
• Replacing the 3rd-4th hub, sleeve assembly.
• Replacing the 5th-6th hub, sleeve assembly.

1) Insert the main shaft assembly in adapter plate.
2) Set the height gauge to adapter plate. Lower the indicator of height gauge to upper surface of snap ring groove, or the upper side of main rear bearing. Then set to zero point.
ST 18853AA000 HEIGHT GAUGE

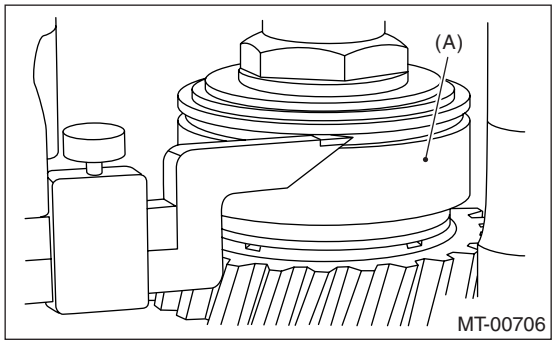

(A) Ball bearing

NOTE:
• Remove the remaining gasket on edge surface with scraper, since the height gauge is set on adapter plate during measurement.

• Do not place the height gauge on shaded area in the figure during the measurement.

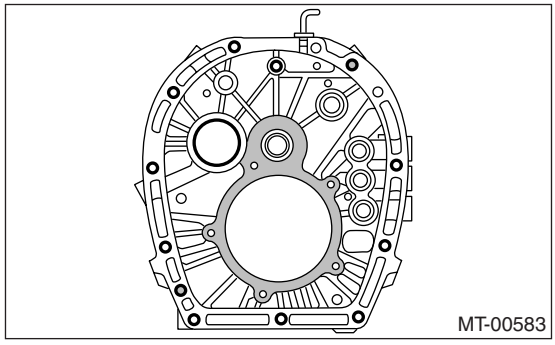

3) Using the height gauge, measure “D1” and “D2” shown in the figure.

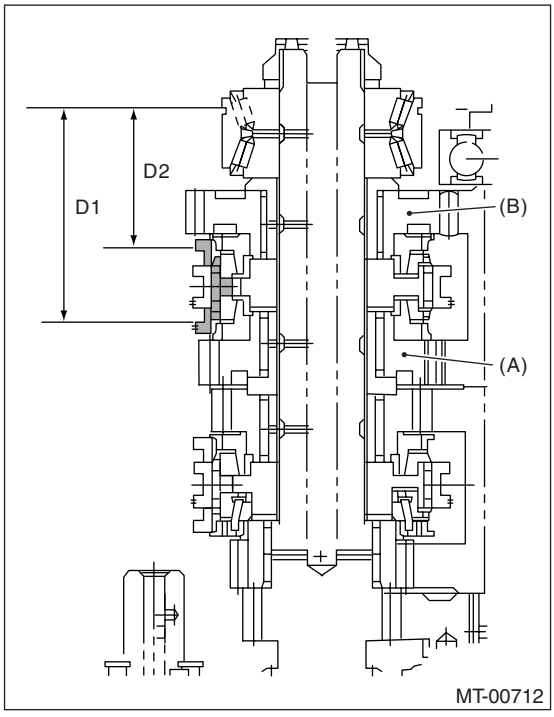

(A) 5th main gear
(B) 6th main gear

(1) Shift the 5th-6th sleeve to 6th main gear side, then press up to the stopper and measure “D2”.

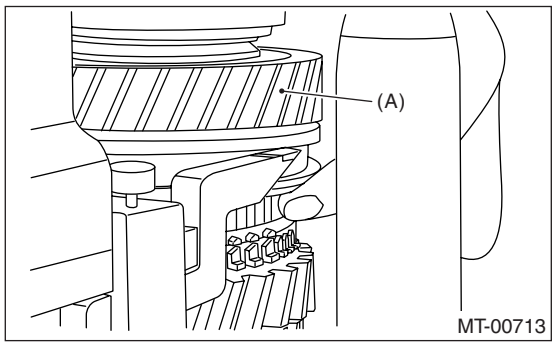

(A) 6th main gear

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of sleeve 6th side.
• Perform the measuring procedure with two people, and measure the sleeve lifted up straight.
• Measure five points of the sleeve turning every approx. 72°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

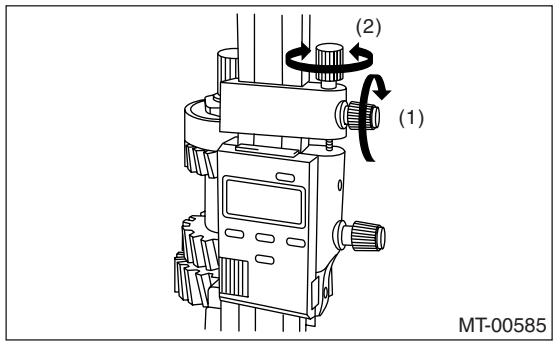

(2) Set the height gauge indicator upside down.

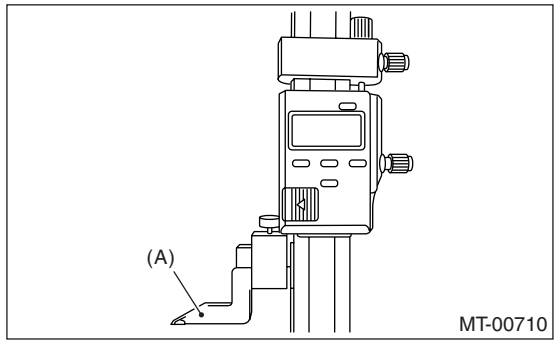

(A) Indicator

(3) Shift the 5th-6th sleeve to 5th main gear side, then press down to the stopper and measure “D1”.

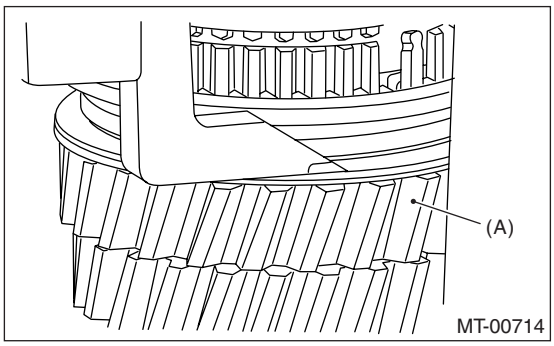

(A) 5th main gear

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of sleeve 5th side.
• Measure five points of the sleeve turning every approx. 72°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

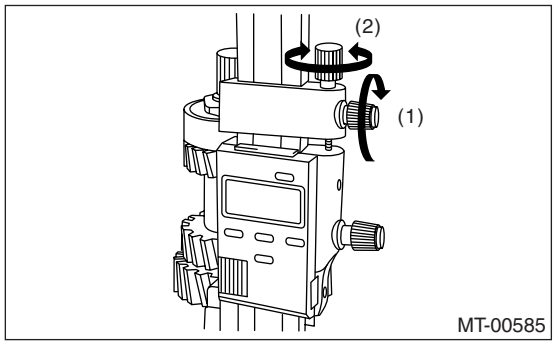

4) According to both measurements, calculate the 5th-6th sleeve neutral position. Select the fork rod, which applies to the calculated value from following equation.

Equation: T = (D1 + D2) / 2

T: 5th-6th sleeve center position
D1: Length from the shaft rear bearing snap ring groove to sleeve groove edge when shifted to 5th gear. [measurement value + 55 mm (2.17 in)]
D2: Length from main shaft rear bearing snap ring groove to sleeve groove edge when shifted to 6th gear.

NOTE:
The indicator is installed upside down compared to the setting procedure of zero point. Add d1 [fixing value: 55 mm (2.17 in)] from the following figure to “D1”, to obtain measurement value of “D1”.

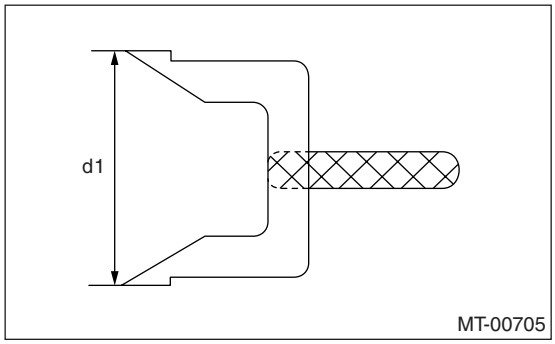

T mm (in)	Lot No. (Mark)		
	M.SFT Snap ring 805072010 [t=1.65 mm (0.065 in)]	M.SFT Snap ring 805072011 [t=1.95 mm (0.077 in)]	M.SFT Snap ring 805072012 [t=2.25 mm (0.089 in)]
64.12 — 64.42 (2.5244 — 2.5362)	32945AA021 (None)	32945AA031 (2)	32945AA041 (4)
64.42 — 64.72 (2.5362 — 2.5480)	32945AA011 (1)	32945AA021 (None)	32945AA031 (2)
64.72 — 65.02 (2.5480 — 2.5598)	32945AA001 (3)	32945AA011 (1)	32945AA021 (None)

T = Thickness

4. SELECTION OF REVERSE FORK ROD

NOTE:
Perform the following procedures when.
• Replacing the reverse idler gear.
• Replacing the reverse idler gear No.2.
• Replacing the adapter plate.
• Replacing the base.

1) Insert the reverse idler gear assembly in adapter plate.

2) Tighten the base COMPL fixing bolt.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

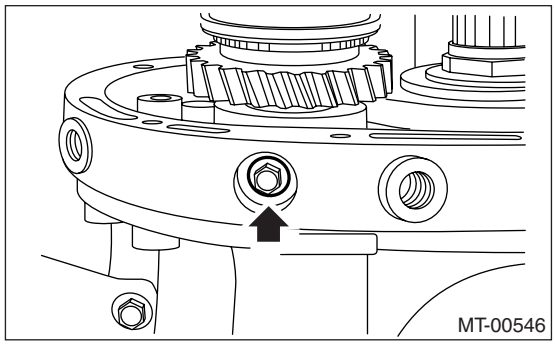

3) Set the height gauge to adapter plate. Lower the indicator of height gauge to mating surface of adapter plate and case, then set to zero point.
ST 18853AA000 HEIGHT GAUGE

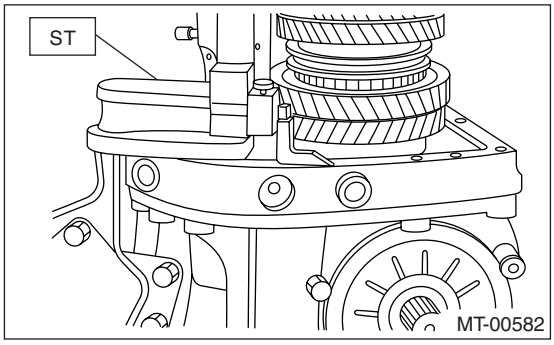

NOTE:
• Remove the remaining gasket on edge surface with scraper, since the adapter plate is base point of measurement.
• Do not place the height gauge on shaded area in the figure during measurement.

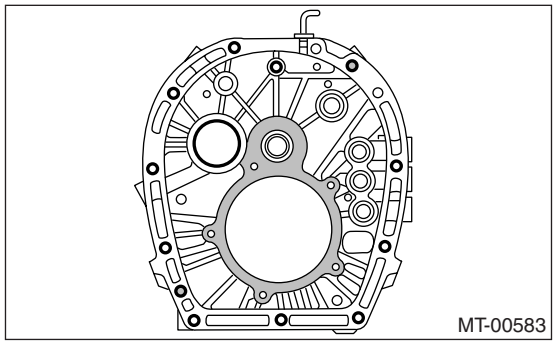

4) Press the reverse sleeve to reverse side idler gear No.2, then measure “T”.

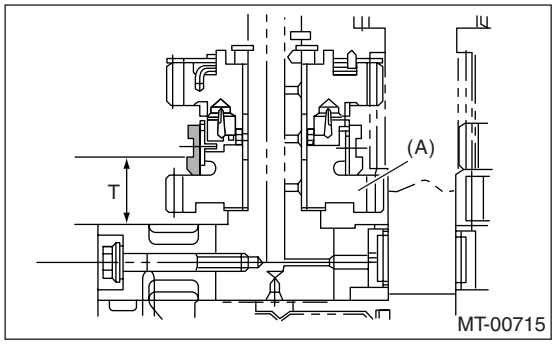

(A) Reverse idler gear No.2

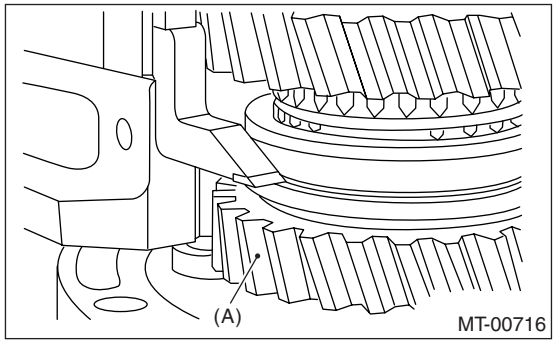

(A) Reverse idler gear No.2

NOTE:
• Set the indicator of height gauge near measuring object, then lock the dial (1) as shown in the figure. Turn dial (2) to set the indicator to edge surface of reverse sleeve side.
• Measure five points of the sleeve turning every approx. 72°. Round off each two upper and lower measurement value. Use the remaining center value as measurement value.

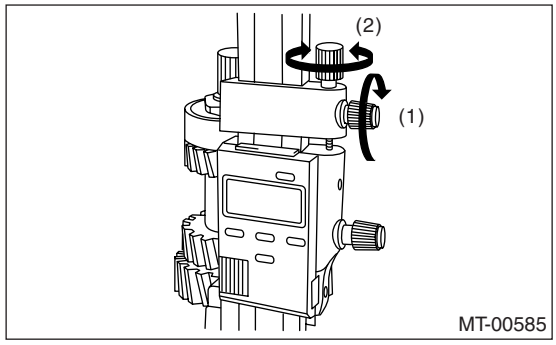

5) According to measurement, calculate the reverse sleeve neutral position. Select the fork rod which applies to the calculated value from following equation.

Equation: T + 4.8 mm (0.189 in)

T + 4.8 mm (0.189 in) mm (in)	Lot No. (Mark)
33.50 — 33.80 (1.3189 — 1.3307)	32816AA110 (1)
33.80 — 34.10 (1.3307 — 1.3425)	32816AA130 (None)
34.10 — 34.40 (1.3425 — 1.3543)	32816AA140 (2)

T = Thickness

26.Clutch Housing

A: REMOVAL

1) Remove the manual transmission assembly from vehicle. <Ref. to 6MT-37, REMOVAL, Manual Transmission Assembly.>
2) Prepare the transmission for overhaul. <Ref. to 6MT-42, Preparation for Overhaul.>
3) Remove the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, REMOVAL, Oil Pipe.>, <Ref. to 6MT-47, REMOVAL, Neutral Position Switch.>, <Ref. to 6MT-45, REMOVAL, Back-up Light Switch.>
4) Remove the extension case. <Ref. to 6MT-49, REMOVAL, Extension Case.>
5) Remove the transfer driven gear. <Ref. to 6MT-60, REMOVAL, Transfer Driven Gear.>
6) Remove the center differential. <Ref. to 6MT-62, REMOVAL, Center Differential.>
7) Remove the oil pump. <Ref. to 6MT-63, REMOVAL, Oil Pump.>
8) Remove the transmission case. <Ref. to 6MT-67, REMOVAL, Transmission Case.>
9) Remove each gear assembly. <Ref. to 6MT-72, REMOVAL, Main Shaft Assembly.>
10) Remove the drive pinion shaft assembly. <Ref. to 6MT-99, REMOVAL, Drive Pinion Shaft Assembly.>
11) Remove the front differential assembly. <Ref. to 6MT-105, REMOVAL, Front Differential Assembly.>
12) Remove the vehicle speed sensor. <Ref. to 6MT-34, REMOVAL, Vehicle Speed Sensor.>
13) Remove the speedometer gear. <Ref. to 6MT-113, REMOVAL, Speedometer Gear.>

B: INSTALLATION

1) Install the pitching stopper bracket.

Tightening torque:
41 N·m (4.2 kgf-m, 30.2 ft-lb)

2) Install the speedometer gear. <Ref. to 6MT-113, INSTALLATION, Speedometer Gear.>
3) Install the vehicle speed sensor. <Ref. to 6MT-34, INSTALLATION, Vehicle Speed Sensor.>
4) Install the front differential assembly. <Ref. to 6MT-106, INSTALLATION, Front Differential Assembly.>
5) Install the drive pinion shaft assembly. <Ref. to 6MT-99, INSTALLATION, Drive Pinion Shaft Assembly.>
6) Install each gear assembly at once. <Ref. to 6MT-73, INSTALLATION, Main Shaft Assembly.>
7) Install the transmission case. <Ref. to 6MT-68, INSTALLATION, Transmission Case.>
8) Install the oil pump. <Ref. to 6MT-64, INSTALLATION, Oil Pump.>
9) Install the center differential. <Ref. to 6MT-62, INSTALLATION, Center Differential.>
10) Install the transfer driven gear. <Ref. to 6MT-60, INSTALLATION, Transfer Driven Gear.>
11) Install the extension case. <Ref. to 6MT-49, INSTALLATION, Extension Case.>
12) Install the oil pipe, neutral position switch, back-up light switch and harness. <Ref. to 6MT-44, INSTALLATION, Oil Pipe.>, <Ref. to 6MT-47, INSTALLATION, Neutral Position Switch.>, <Ref. to 6MT-45, INSTALLATION, Back-up Light Switch.>
13) Install the manual transmission assembly to vehicle. <Ref. to 6MT-39, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

1) Remove the clutch release bearing guide.

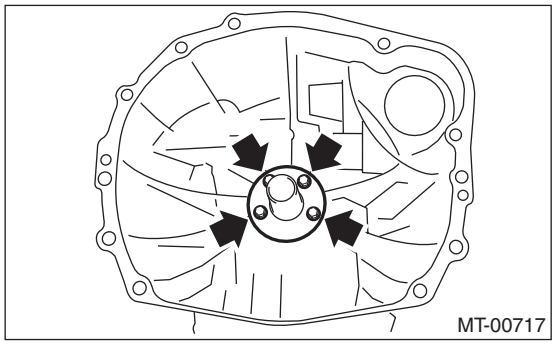

2) Remove the oil seal.
ST 398527700 PULLER ASSY

NOTE:
Do not reuse the oil seal.

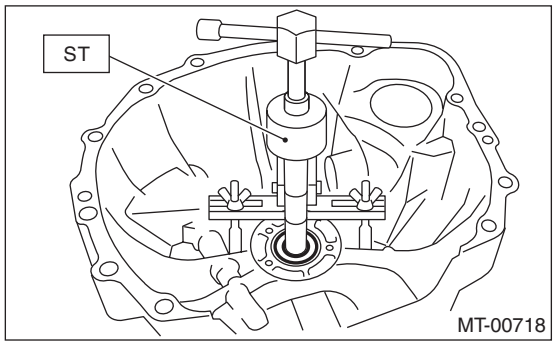

D: ASSEMBLY

1) Install the oil seal into clutch housing without damaging.
ST 399513600 INSTALLER

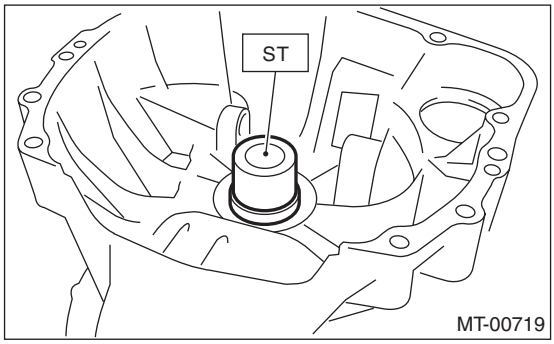

2) Install the clutch release bearing guide.

Tightening torque:
6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

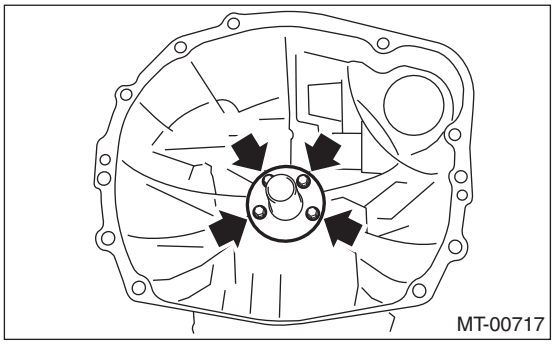

E: INSPECTION

1) Make sure there is no damage or crack on the clutch housing. Replace the clutch housing with a new one if there is excessive damage.
2) Check the clutch housing for gear oil leakage. If there is oil leakage, repair or replace the leakage part.

27.General Diagnostic Table

A: INSPECTION

1. MANUAL TRANSMISSION

Symptom	Possible cause	Remedy
1. Gears are difficult to intermesh. NOTE: The cause for difficulty in shifting gears can be classified into two kinds: one is malfunction of the gear shift system and the other is malfunction of the transmission. However, if the operation is heavy and engagement of the gears is difficult, defective clutch disengagement may also be responsible. Check whether the clutch is correctly functioning, before checking the gear shift system and transmission.	(a) Worn, damaged or burred chamfer of internal spline of sleeve and reverse driven gear	Replace.
	(b) Worn, damaged or burred chamfer of spline of gears	Replace.
	(c) Worn or scratched bushings	Replace.
	(d) Incorrect contact between synchronizer ring and gear cone or wear	Correct or replace.
2. Gear slips out. • Gear slips out when coasting on rough road. • Gear slips out during acceleration.	(a) Defective pitching stopper adjustment	Adjust.
	(b) Loose engine mounting bolts	Tighten or replace.
	(c) Worn fork shifter, broken shifter fork rail spring	Replace.
	(d) Worn or damaged ball bearing	Replace.
	(e) Excessive clearance between splines of synchronizer hub and synchronizer sleeve	Replace.
	(f) Worn tooth step of synchronizer hub (responsible for slip-out of 3rd gear)	Replace.
	(g) Worn 1st driven gear, needle bearing and race	Replace.
	(h) Worn 2nd driven gear, needle bearing and race	Replace.
	(i) Worn 3rd drive gear and bushing	Replace.
	(j) Worn 4th drive gear and bushing	Replace.
	(k) Worn 5th drive gear and bushing	Replace.
	(l) Worn 6th drive gear and bushing	Replace.
	(m) Worn reverse idler gear and bushing	Replace.
3. Unusual noise comes from transmission. NOTE: If an unusual noise is heard when the vehicle is parked with its engine idling and if the noise ceases when the clutch is disengaged, it may be considered that the noise comes from the transmission.	(a) Insufficient or improper lubrication	Lubricate or replace with specified oil.
	(b) Worn or damaged gears and bearings NOTE: If the trouble is only wear of the tooth surfaces, merely a high roaring noise will occur at high speeds, but if any part is broken, rhythmical knocking sound will be heard even at low speeds.	Replace.

2. DIFFERENTIAL

Symptom	Possible cause	Remedy
1. Broken differential (case, gear, bearing, etc.) NOTE: Abnormal noise will develop and finally it will become impossible to continue to run due to broken pieces obstructing the gear revolution.	(a) Insufficient or improper oil	Disassemble differential and replace broken components and at the same time check other components for any trouble, and replace if necessary.
	(b) Use of vehicle under severe conditions such as excessive load and improper use of clutch	Readjust bearing preload and backlash and face contact of gears.
	(c) Improper adjustment of taper roller bearing	Adjust.
	(d) Improper adjustment of drive pinion and hypoid driven gear	Adjust.
	(e) Excessive backlash due to worn differential side gear, washer or differential pinion vehicle under severe operating conditions.	Add recommended oil to specified level. Do not use vehicle under severe operating conditions.
	(f) Loose hypoid driven gear clamping bolts	Tighten.
2. Differential and hypoid gear noises Troubles of the differential and hypoid gear always appear as noise problems. Therefore noise is the first indication of the trouble. However noises from the engine, muffler, tire, exhaust gas, bearing, body, etc. are easily mistaken for the differential noise. Pay special attention to the hypoid gear noise because it is easily confused with other gear noises. There are the following four kinds of noises. • Gear noise when driving: If noise increases as the vehicle speed increases it may be due to insufficient gear oil, incorrect gear engagement, damaged gears, etc. • Gear noise when coasting: Damaged gears due to maladjusted bearings and incorrect shim adjustment • Bearing noise when driving or when coasting: Cracked, broken or damaged bearings • Noise which mainly occurs when turning: Unusual noise from the differential side gear, differential pinion, differential pinion shaft, etc.	(a) Insufficient oil	Lubricate.
	(b) Improper adjustment of hypoid driven gear and drive pinion	Check tooth contact.
	(c) Worn teeth of hypoid driven gear and drive pinion	Replace as a set. Readjust bearing preload.
	(d) Loose roller bearing	Readjust hypoid driven gear to drive pinion backlash and check tooth contact.
	(e) Distorted hypoid driven gear or differential case	Replace.
	(f) Worn washer and differential pinion shaft	Replace.

CLUTCH SYSTEM

CL

		Page
1.	General Description	2
2.	Clutch Disc and Cover	20
3.	Flywheel	24
4.	Release Bearing and Lever	26
5.	Operating Cylinder	29
6.	Master Cylinder	31
7.	Clutch Pipe and Hose	35
8.	Clutch Fluid	37
9.	Clutch Fluid Air Bleeding	38
10.	Clutch Pedal	40
11.	Clutch Cable	48
12.	Clutch Switch	49
13.	General Diagnostic Table	50

1. General Description

A: SPECIFICATIONS

Model			1.6 L	2.0 L NON-TURBO	2.0 L TURBO	2.5 L
Clutch cover	Type		Push type		Pull type	Push type
	Diaphragm set load	kgf (lb)	450 (992)		800 (1,764)	550 (1,213)
Clutch disc	Facing material		Woven (Non asbestos)			
	O.D. × I.D. × thickness	mm (in)	225 × 150 × 3.5 (8.86 × 5.91 × 0.138)		230 × 150 × 3.5 (9.06 × 5.91 × 0.138)	228.6 × 155 × 6.6 (9.00 × 6.10 × 0.260)
	Spline O.D.	mm (in)	25.2 (0.992), (No. of teeth: 24)			
Clutch release lever ratio			3.0	1.6	1.7	1.6
Release bearing			Grease-packed self-aligning			
Clutch pedal	Full stroke	mm (in)	130 — 135 (5.12 — 5.31)			
	Free play	mm (in)	10 — 20 (0.39 — 0.79)	4 — 11 (0.16 — 0.43)		
Release lever	Stroke	mm (in)	24 — 26 (0.94 — 1.02)		13.3 — 14.7 (0.524 — 0.579)	24 — 26 (0.94 — 1.02)
	Play at release lever center	mm (in)	3 — 4 (0.12 — 0.16)		—	3 — 4 (0.12 — 0.16)
Clutch disc	Depth of rivet head mm (in)	Standard	1.3 — 1.9 (0.051 — 0.075)			
		Limit of sinking	0.3 (0.012)			
	Limit for deflection	mm (in)	0.8 (0.031) at R = 107 (4.21)	0.8 (0.031) at R = 110 (4.33)		1.0 (0.039) at R = 110 (4.33)

Model			2.0 L TURBO STi
Clutch cover	Type		Pull type
	Diaphragm set load	kgf (lb)	930 (2,050)
Clutch disc	Facing material		Woven (Non asbestos)
	O.D. × I.D. × thickness	mm (in)	Flywheel side: 240 × 160 × 3.2 (9.45 × 6.30 × 0.126) Clutch cover side: 240 × 160 × 3.5 (9.45 × 6.30 × 0.138)
	Spline O.D.	mm (in)	25.2 (0.992), (No. of teeth: 24)
Clutch release lever ratio			1.7
Release bearing			Grease-packed self-aligning
Clutch pedal	Full stroke	mm (in)	130 — 135 (5.12 — 5.31)
	Free play	mm (in)	3 — 13 (0.12 — 0.51)
Release lever	Stroke	mm (in)	13.3 — 14.7 (0.524 — 0.579)
	Play at release lever center	mm (in)	—
Clutch disc	Depth of rivet head mm (in)	Standard	Flywheel side: 1.35 — 1.95 (0.053 — 0.077) Clutch cover side: 1.65 — 2.25 (0.065 — 0.089)
		Limit of sinking	0.3 (0.012)
	Limit for deflection	mm (in)	0.8 (0.031) at R = 110 (4.33)

I.D.: Inner diameter O.D.: Outer diameter

B: COMPONENT

1. CLUTCH ASSEMBLY

• 1.6 L SOHC MODEL

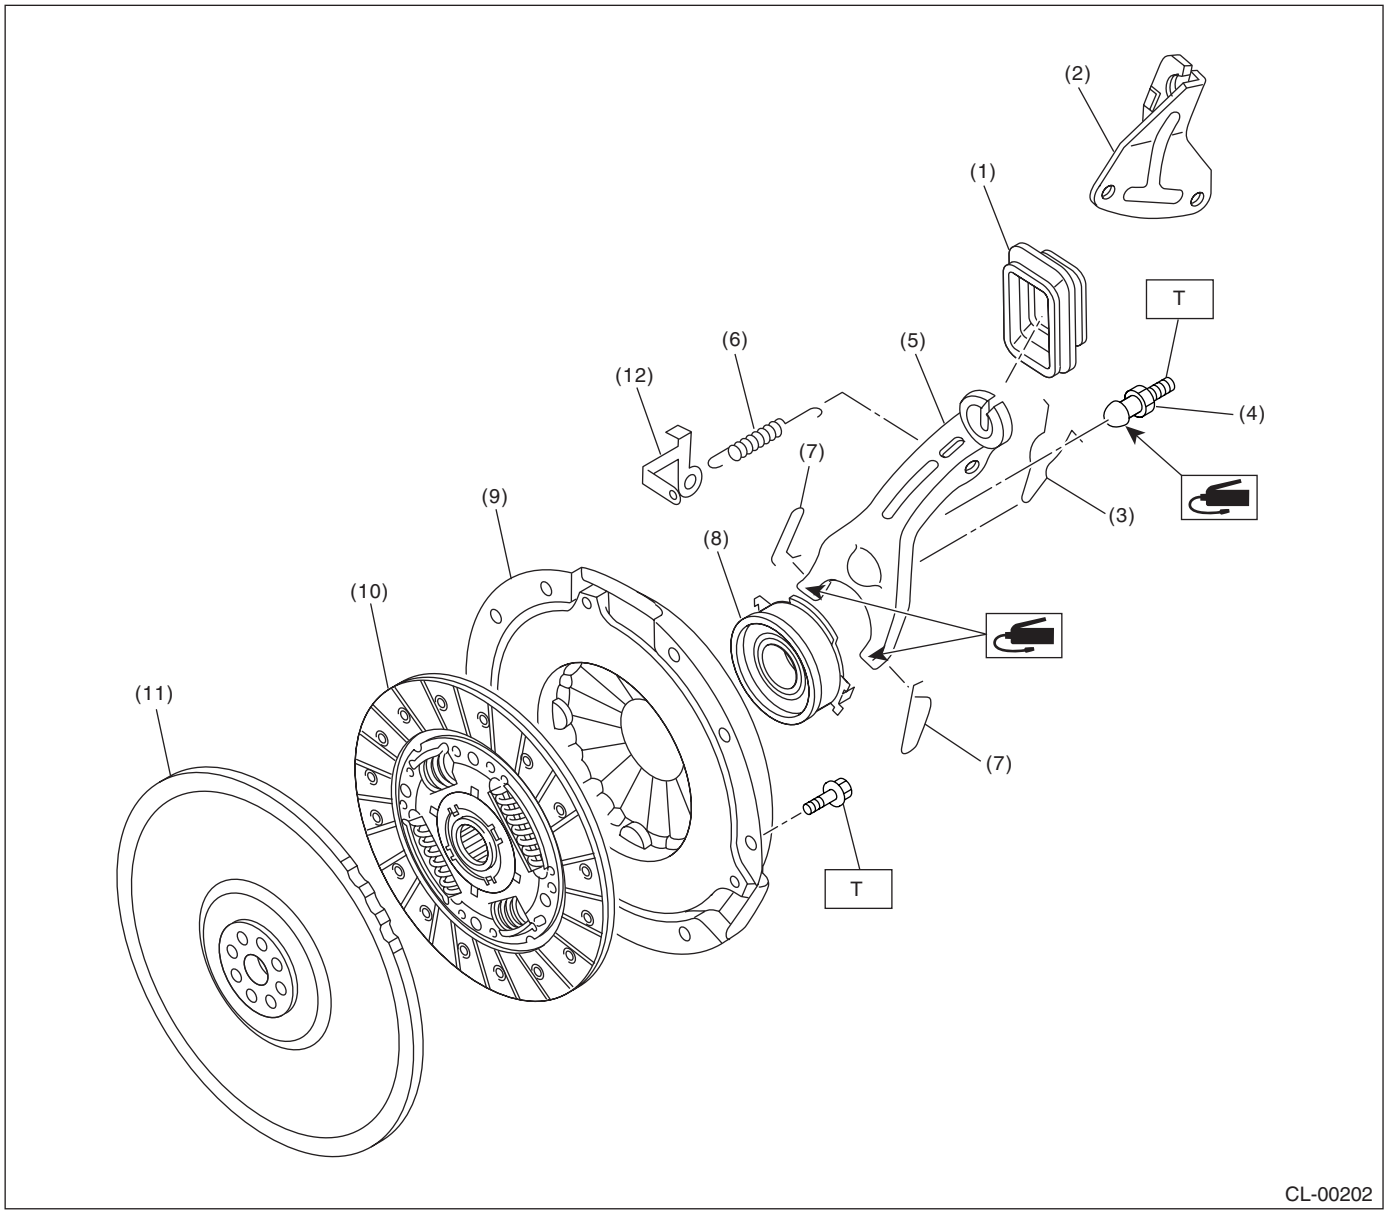

(1) Clutch release lever sealing
(2) Clutch cable bracket
(3) Retainer spring
(4) Pivot
(5) Clutch release lever
(6) Return spring
(7) Clip
(8) Clutch release bearing
(9) Clutch cover
(10) Clutch disk
(11) Flywheel
(12) Clutch return spring bracket

Tightening torque: N·m (kgf-m, ft-lb)
T: 16 (1.6, 11.8)

• 2.0 L SOHC MODEL

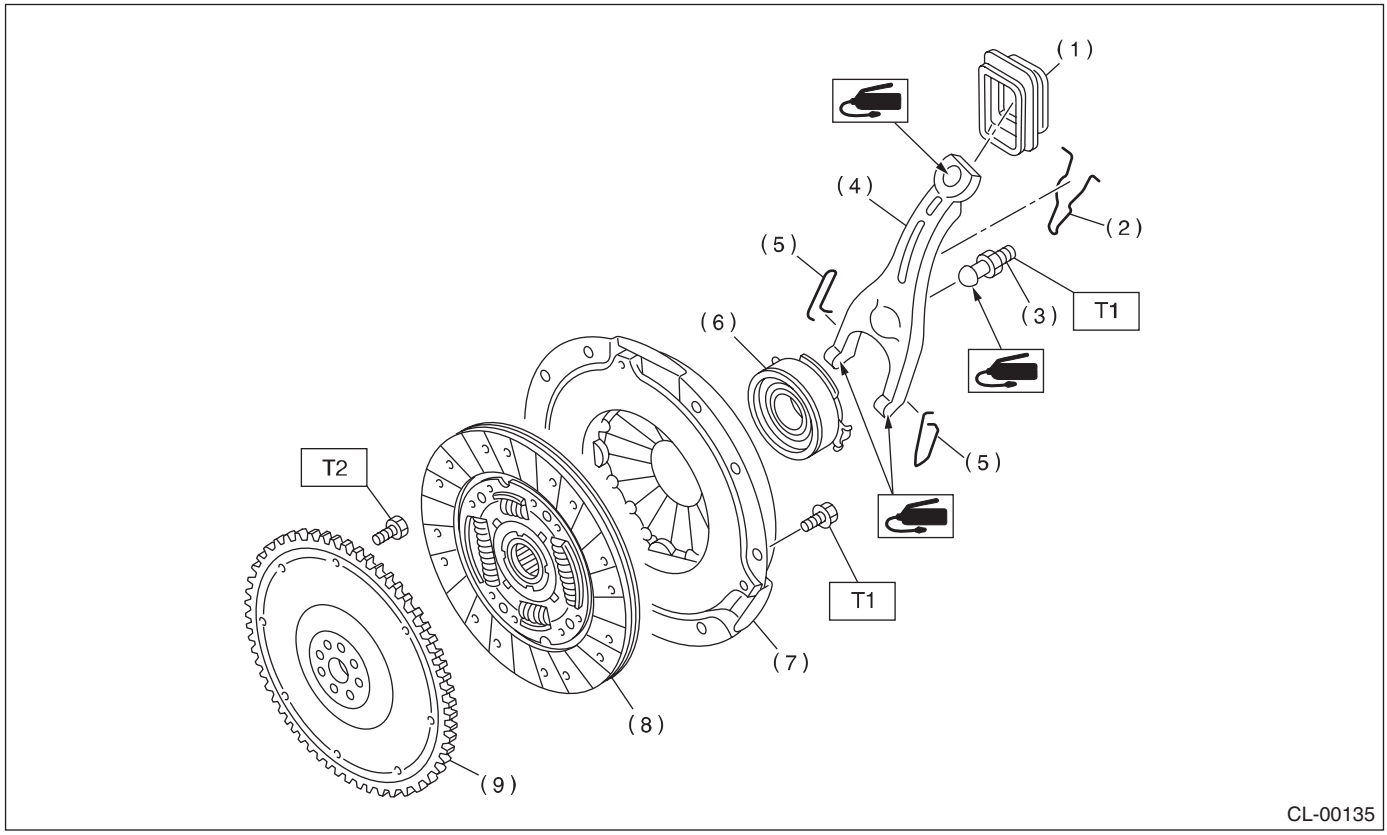

(1) Clutch release lever sealing
(2) Retainer spring
(3) Pivot
(4) Clutch release lever
(5) Clip
(6) Clutch release bearing
(7) Clutch cover
(8) Clutch disc
(9) Flywheel

Tightening torque: N·m (kgf-m, ft-lb)
T1: 16 (1.6, 11.8)
T2: 72 (7.3, 52.8)

• 2.5 L SOHC MODEL

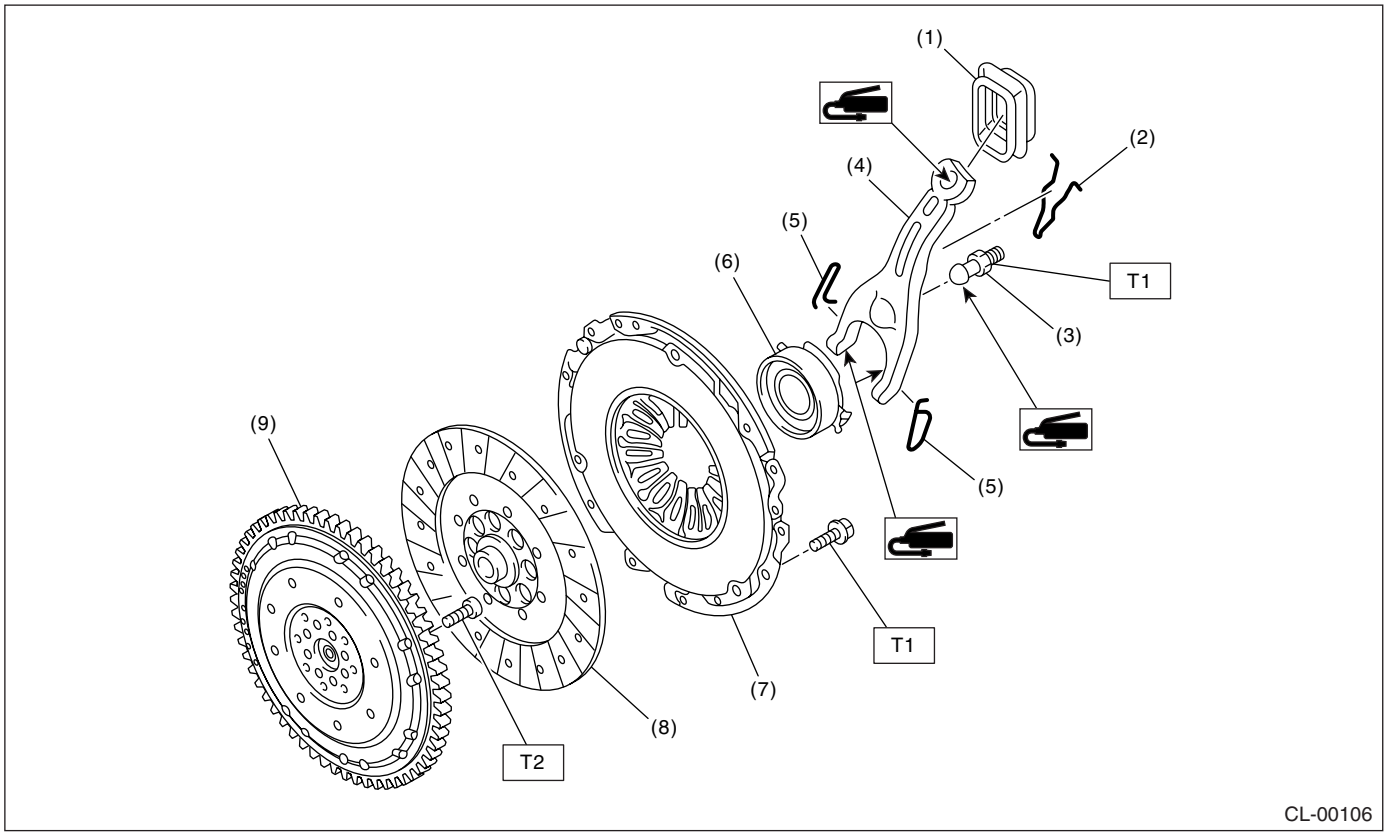

(1) Clutch release lever seal
(2) Retainer spring
(3) Pivot
(4) Release lever
(5) Clip
(6) Release bearing
(7) Clutch cover
(8) Clutch disc
(9) Double mass flywheel

Tightening torque: N·m (kgf-m, ft-lb)
T1: 16 (1.6, 11.8)
T2: 72 (7.3, 52.8)

• DOHC TURBO MODEL

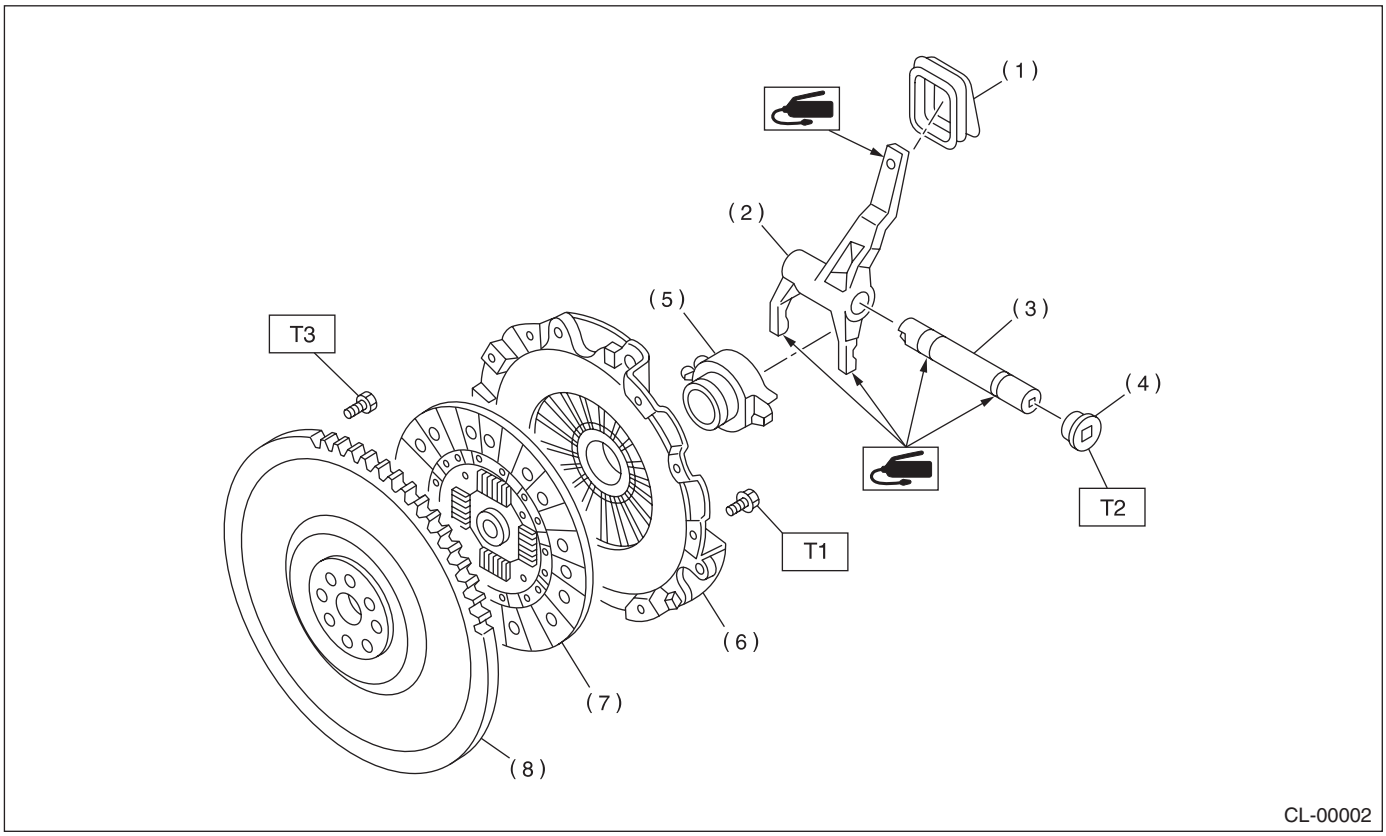

(1)	Clutch release lever sealing	(5)	Clutch release bearing
(2)	Clutch release lever	(6)	Clutch cover
(3)	Clutch release lever shaft	(7)	Clutch disc
(4)	Plug	(8)	Flywheel

Tightening torque: N·m (kgf-m, ft-lb)
T1: 16 (1.6, 11.8)
T2: 44 (4.5, 32.5)
T3: 72 (7.3, 52.8)

2. CLUTCH PIPE AND HOSE

• LHD SOHC MODEL

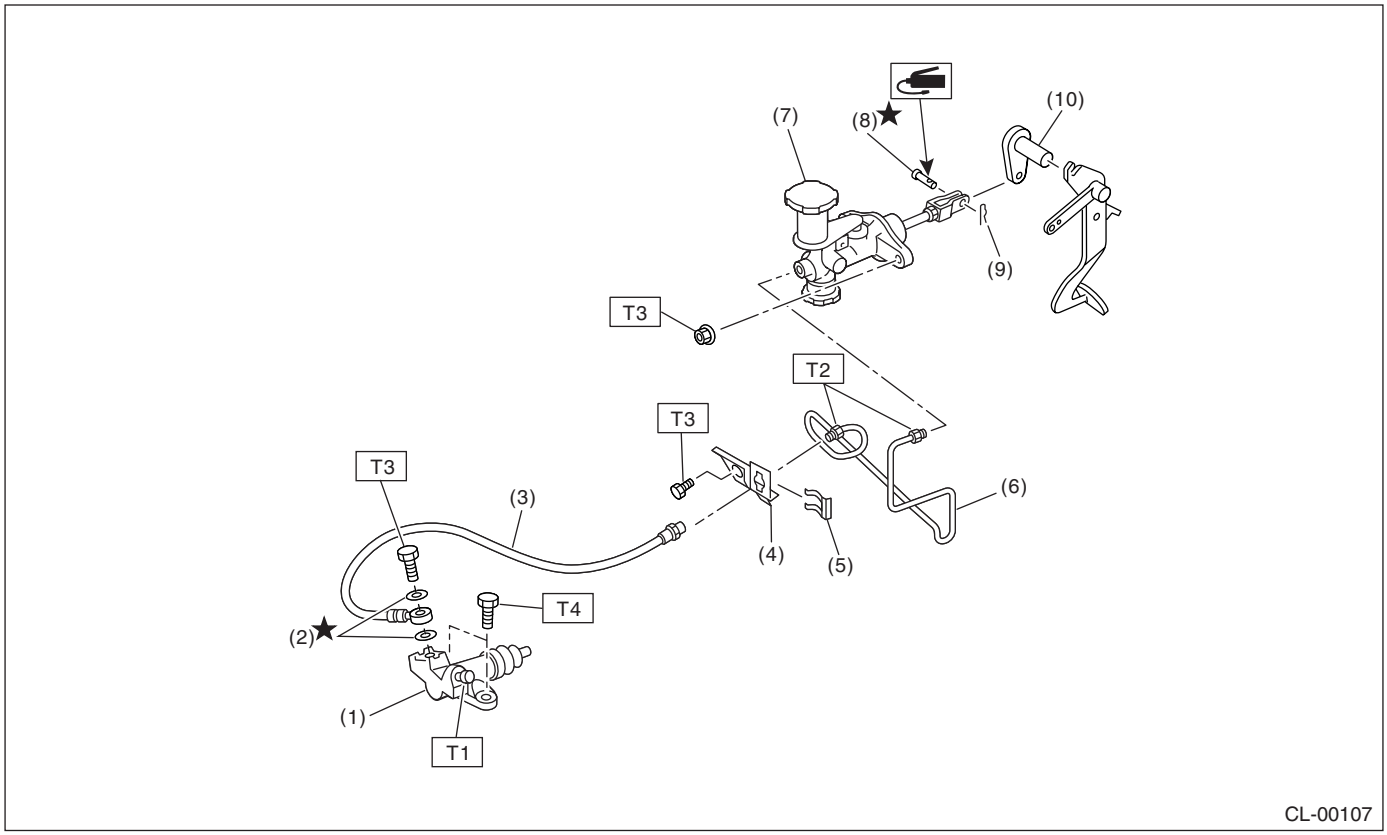

(1)	Operating cylinder	(6)	Pipe	***Tightening torque: N·m (kgf-m, ft-lb)***
(2)	Washer	(7)	Master cylinder ASSY	***T1: 8 (0.8, 5.8)***
(3)	Clutch hose	(8)	Clevis pin	***T2: 15 (1.5, 10.8)***
(4)	Bracket	(9)	Snap pin	***T3: 18 (1.8, 13.0)***
(5)	Clip	(10)	Lever	***T4: 37 (3.8, 27.5)***

• RHD SOHC MODEL

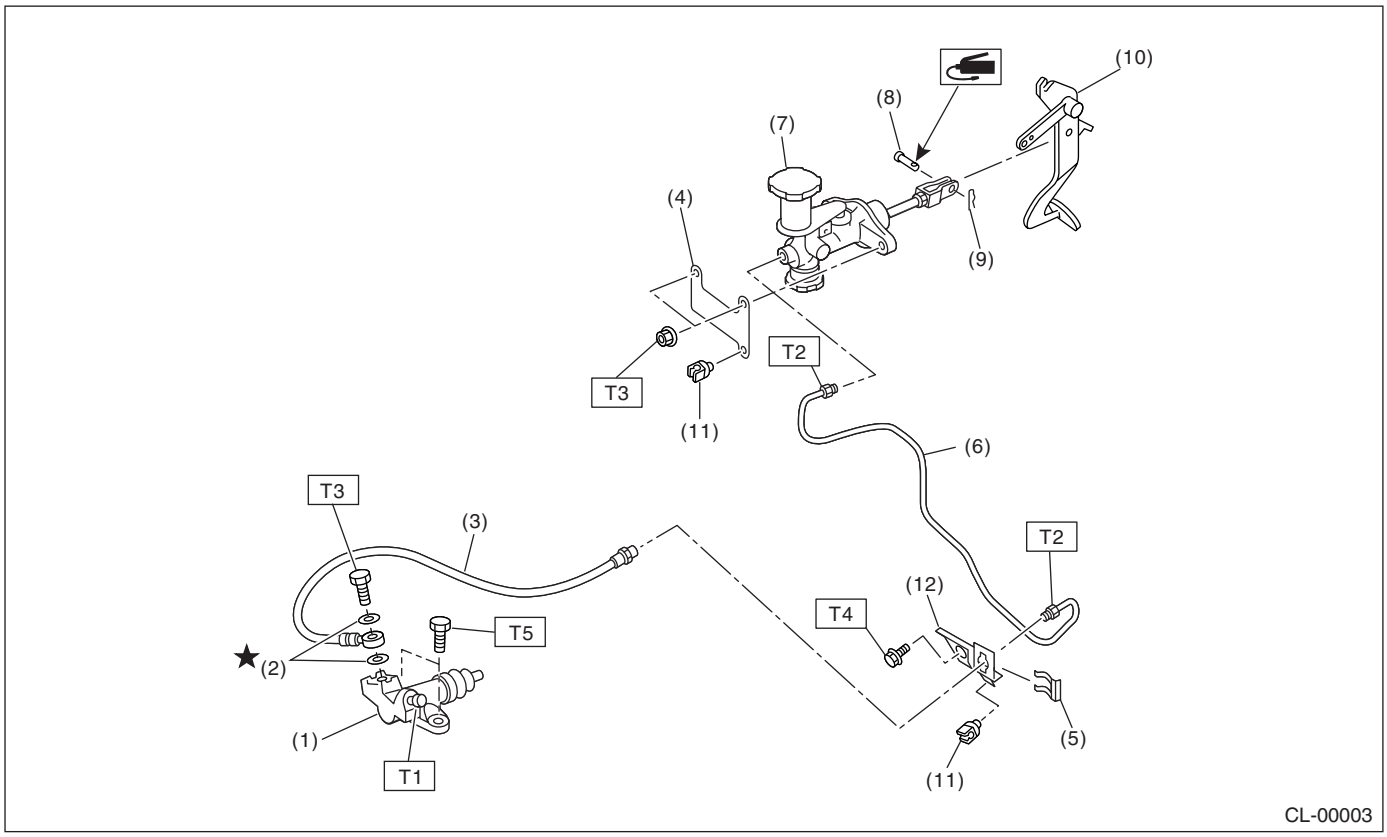

(1)	Operating cylinder	(7)	Master cylinder ASSY	***Tightening torque: N·m (kgf-m, ft-lb)***
(2)	Washer	(8)	Clevis pin	***T1: 8 (0.8, 5.8)***
(3)	Clutch hose	(9)	Snap pin	***T2: 15 (1.5, 10.8)***
(4)	Bracket	(10)	Pedal	***T3: 18 (1.8, 13.0)***
(5)	Clip	(11)	Clamp	***T4: 25 (2.5, 18.1)***
(6)	Clutch pipe	(12)	Bracket	***T5: 37 (3.8, 27.5)***

• LHD DOHC TURBO MODEL

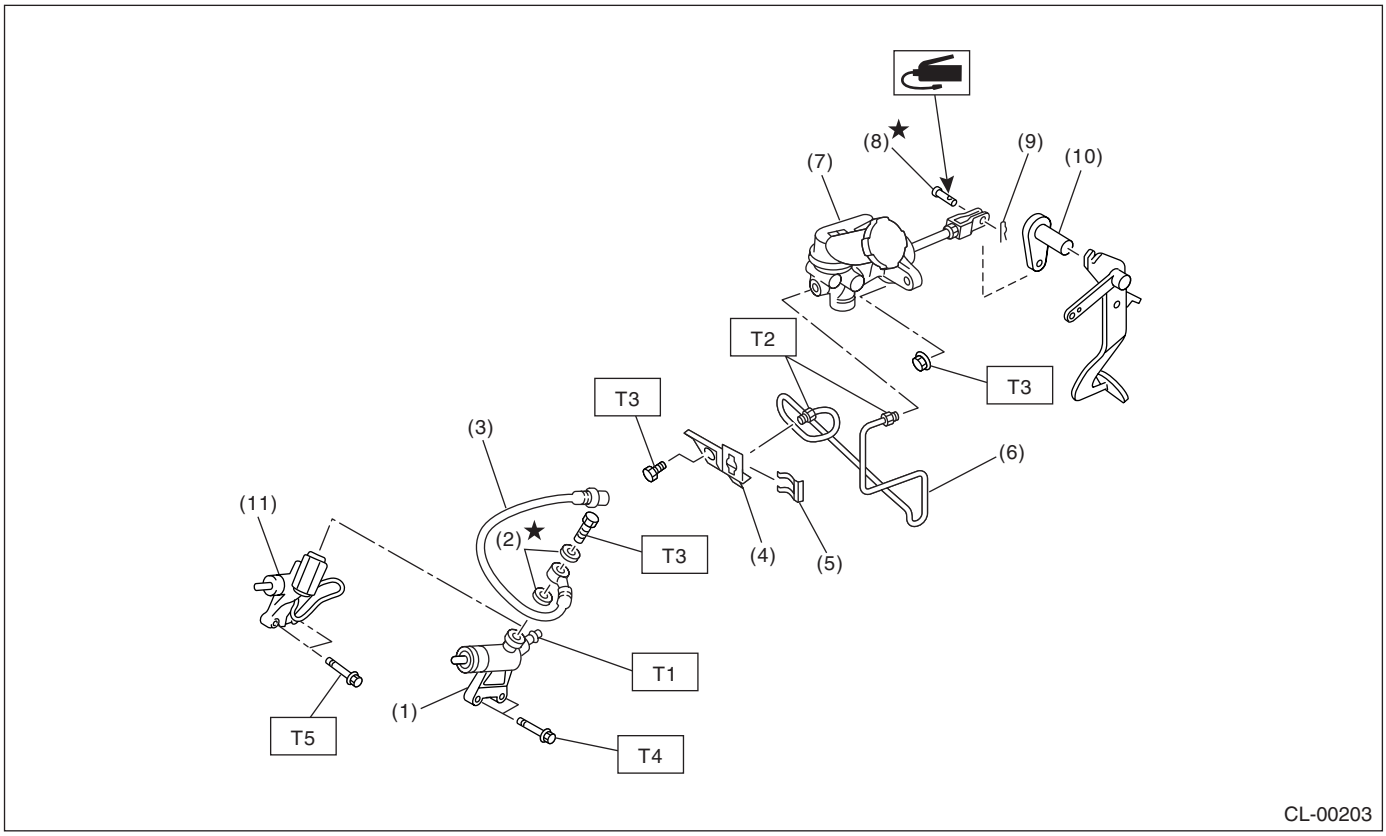

(1)	Operating cylinder (Except STi model)	(6)	Pipe
(2)	Washer	(7)	Master cylinder ASSY
(3)	Clutch hose	(8)	Clevis pin
(4)	Bracket	(9)	Snap pin
(5)	Clip	(10)	Lever
		(11)	Operating cylinder (STi model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 15 (1.5, 10.8)
T3: 18 (1.8, 13.0)
T4: 37 (3.8, 27.5)
T5: 41 (4.2, 30.2)

• RHD DOHC TURBO MODEL

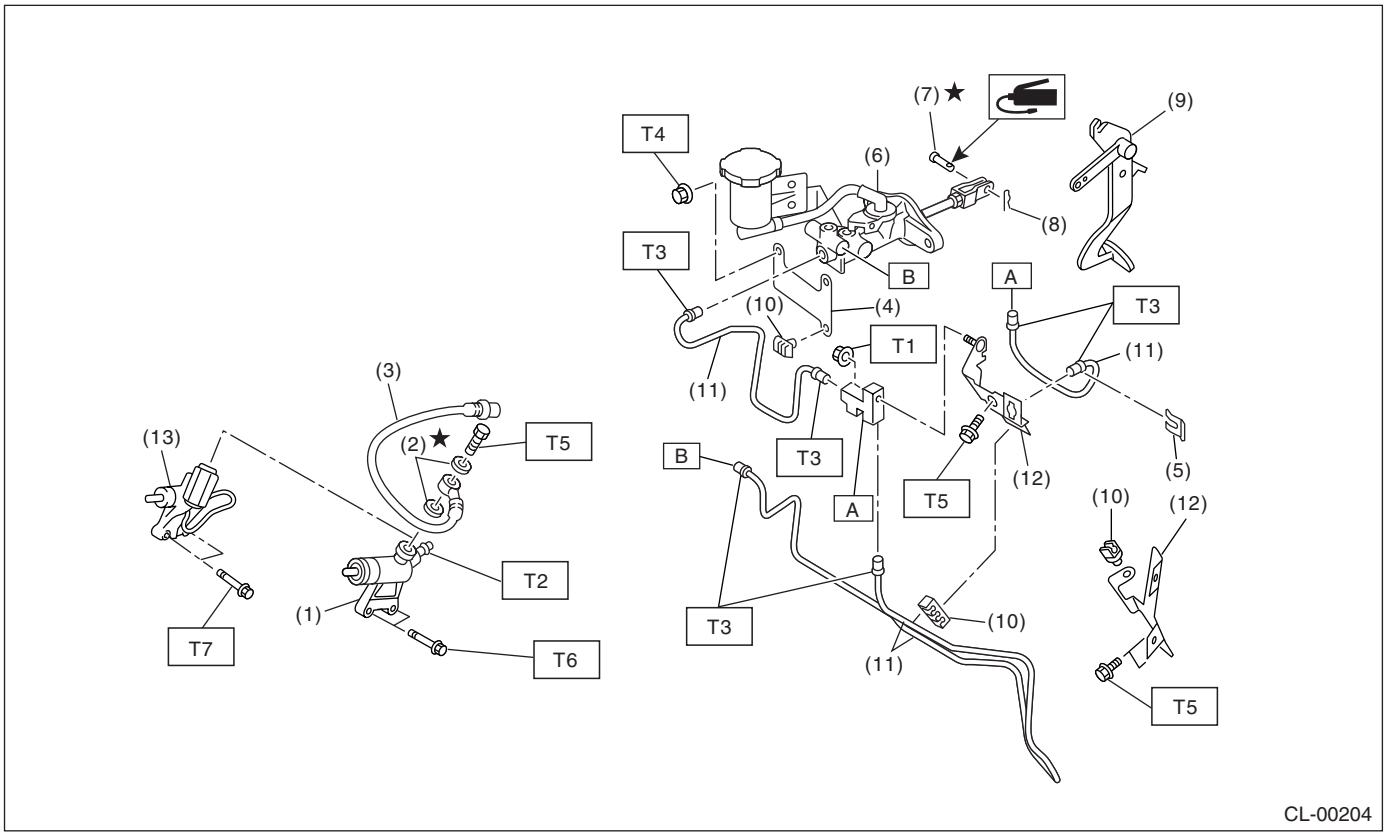

(1)	Operating cylinder (Except STi model)	(8)	Snap pin
(2)	Washer	(9)	Pedal
(3)	Clutch hose	(10)	Clamp
(4)	Bracket	(11)	Clutch pipe
(5)	Clip	(12)	Bracket
(6)	Master cylinder ASSY	(13)	Operating cylinder (STi model)
(7)	Clevis pin		

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.53)
T2: 8 (0.8, 5.8)
T3: 15 (1.5, 10.8)
T4: 18 (1.8, 13.0)
T5: 25 (2.5, 18.1)
T6: 37 (3.8, 27.5)
T7: 41 (4.2, 30.2)

3. MASTER CYLINDER

• SOHC MODEL

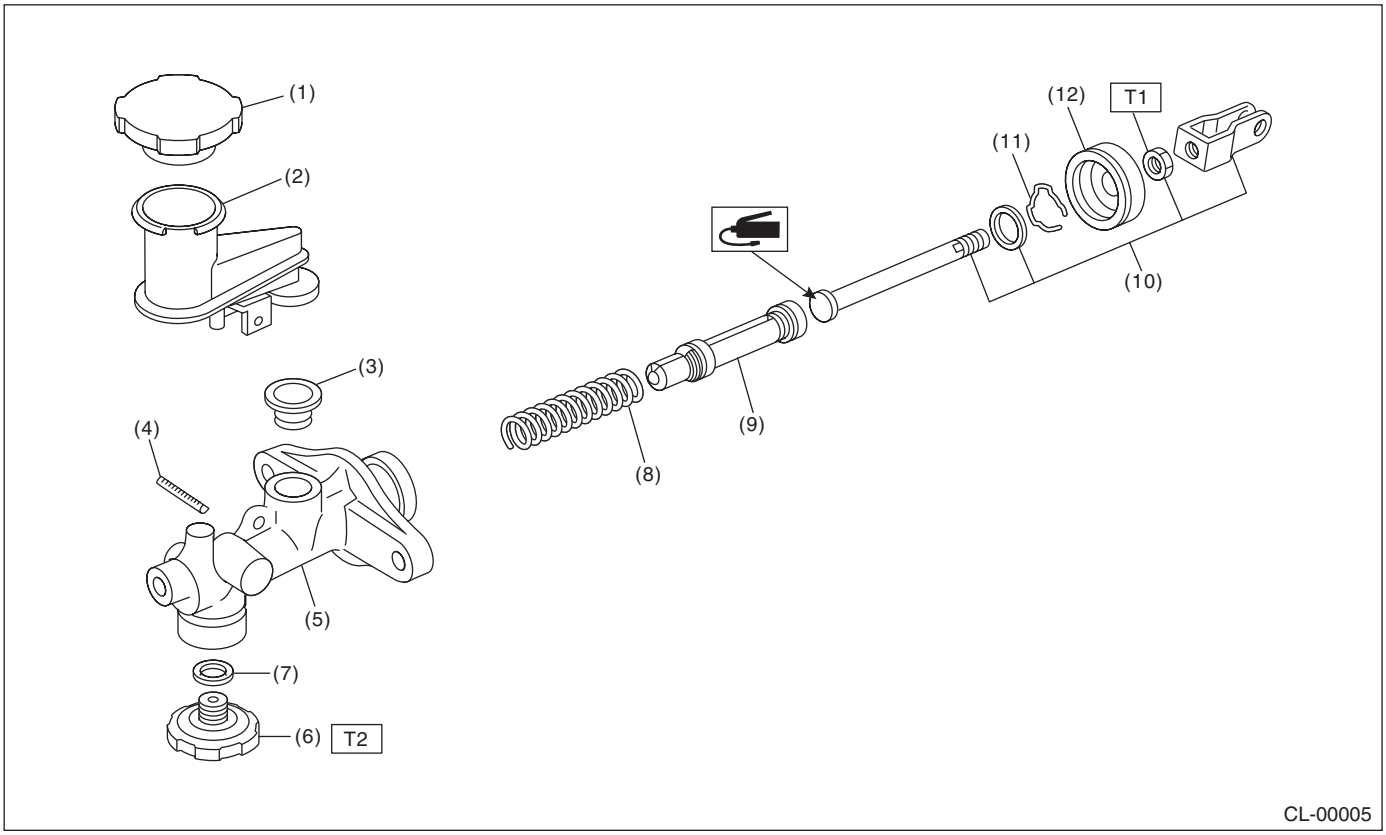

(1) Reservoir cap
(2) Reservoir tank
(3) Oil seal
(4) Straight pin
(5) Master cylinder
(6) Clutch damper
(7) Gasket
(8) Return spring
(9) Piston
(10) Push rod
(11) Piston stop ring
(12) Cylinder boot

Tightening torque: N·m (kgf-m, ft-lb)
T1: 10 (1.0, 7)
T2: 46.6 (4.75, 34.4)

• LHD DOHC TURBO MODEL

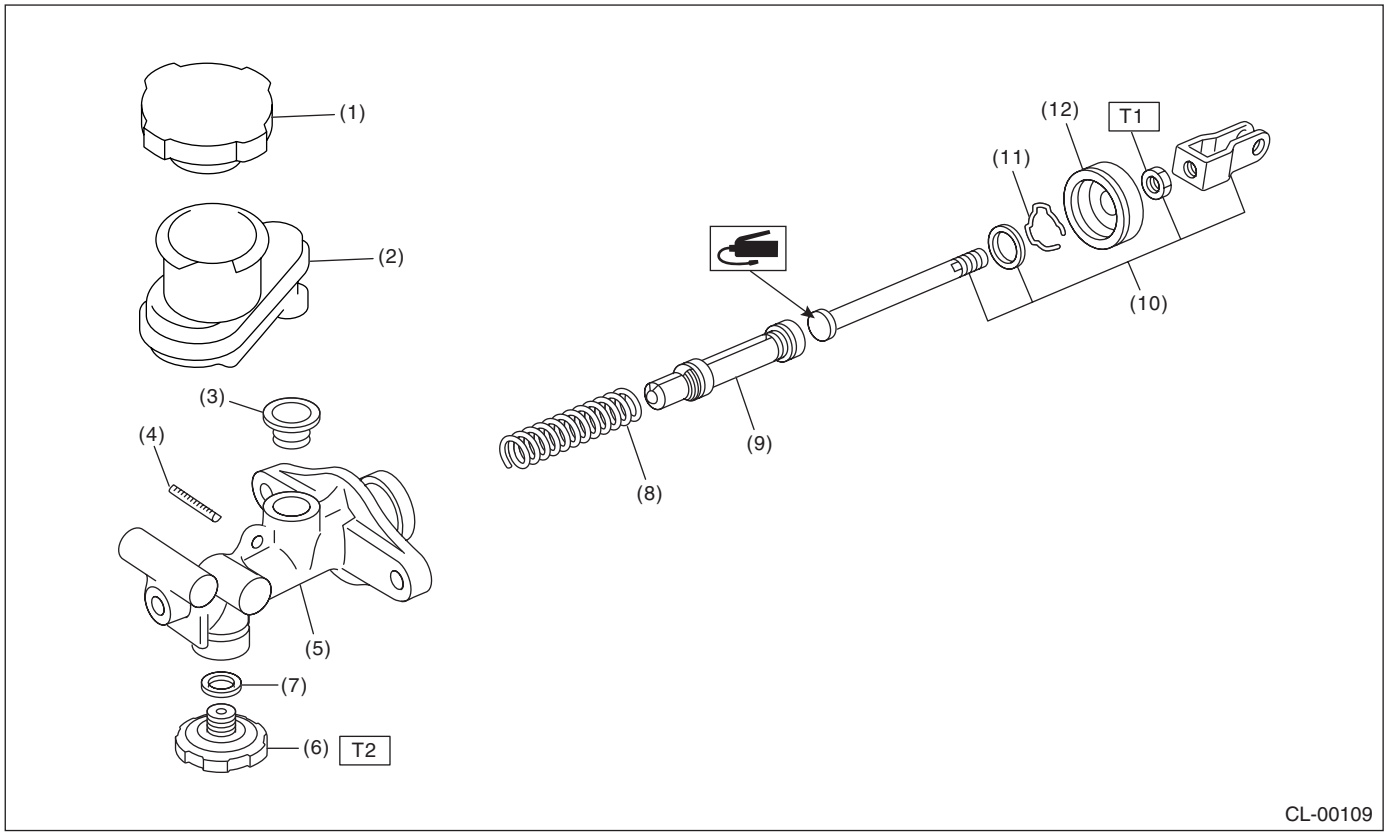

(1) Reservoir cap
(2) Reservoir tank
(3) Oil seal
(4) Straight pin
(5) Master cylinder
(6) Clutch damper
(7) Gasket
(8) Return spring
(9) Piston
(10) Push rod
(11) Piston stop ring
(12) Cylinder boot

Tightening torque: N·m (kgf-m, ft-lb)
T1: 10 (1.0, 7)
T2: 46.6 (4.75, 34.4)

• RHD DOHC TURBO MODEL

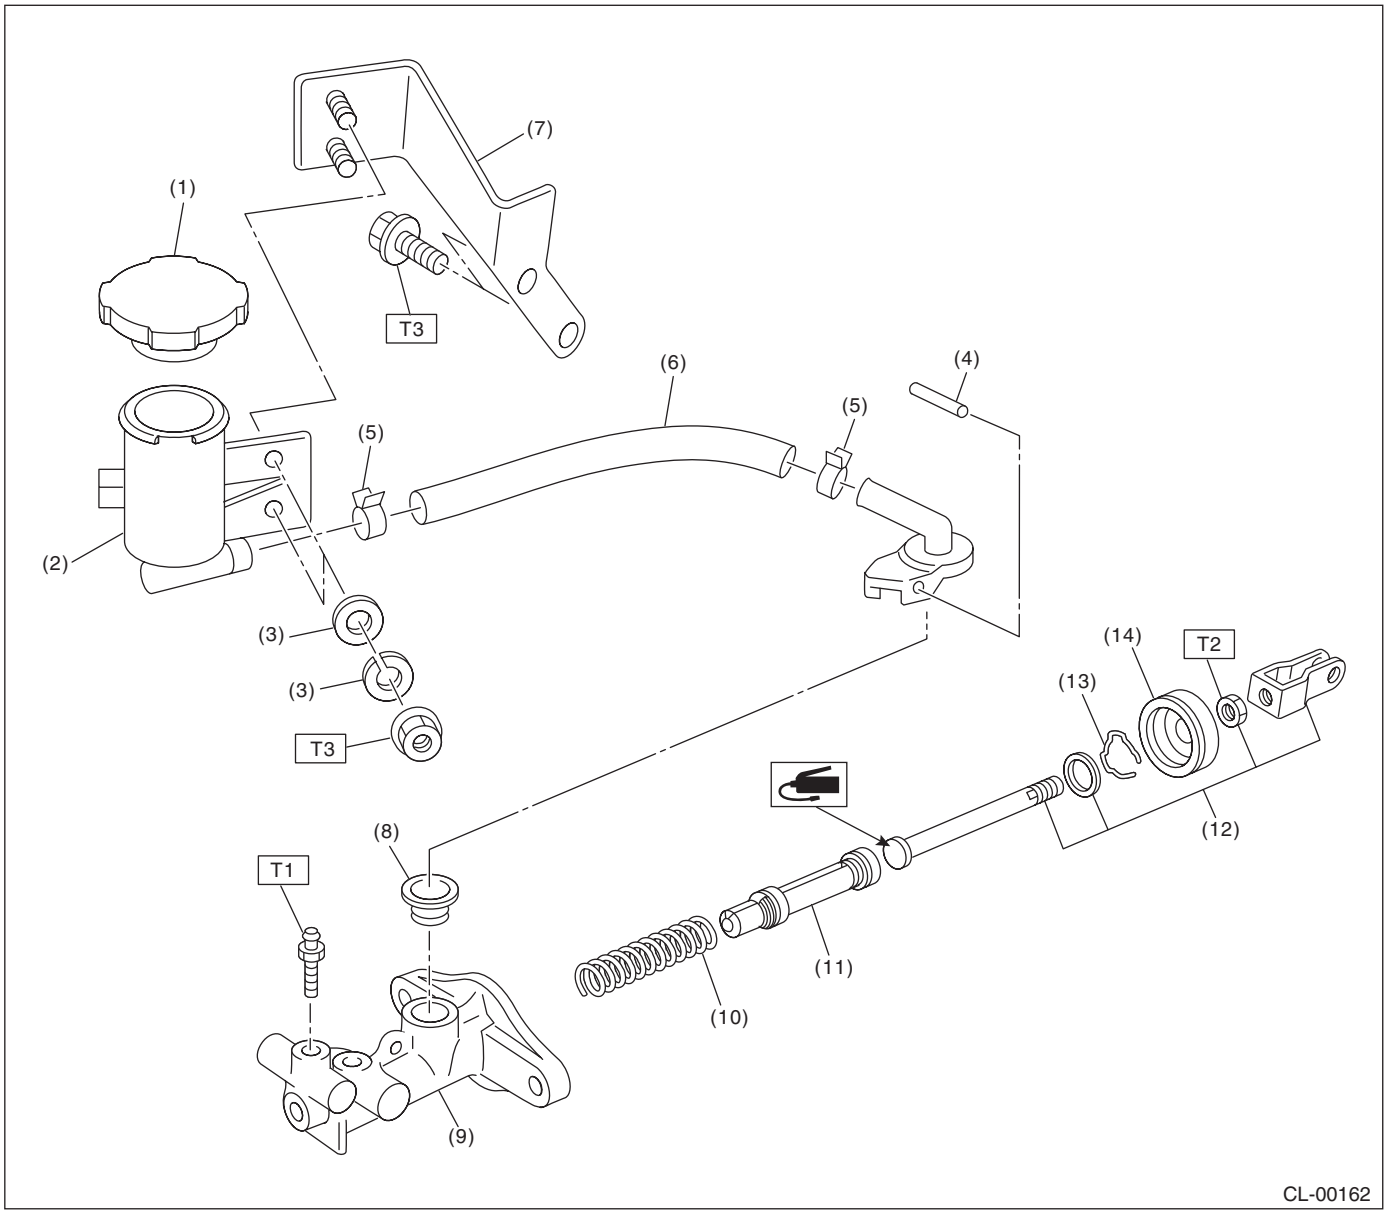

(1) Reservoir cap
(2) Reservoir tank
(3) Washer
(4) Straight pin
(5) Clip
(6) Hose
(7) Reservoir tank bracket
(8) Oil seal
(9) Master cylinder
(10) Return spring
(11) Piston
(12) Push rod
(13) Piston stop ring
(14) Cylinder boot

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 10 (1.0, 7)
T3: 18 (1.8, 13.3)

4. CLUTCH PEDAL

• LHD 2.0 L MODEL

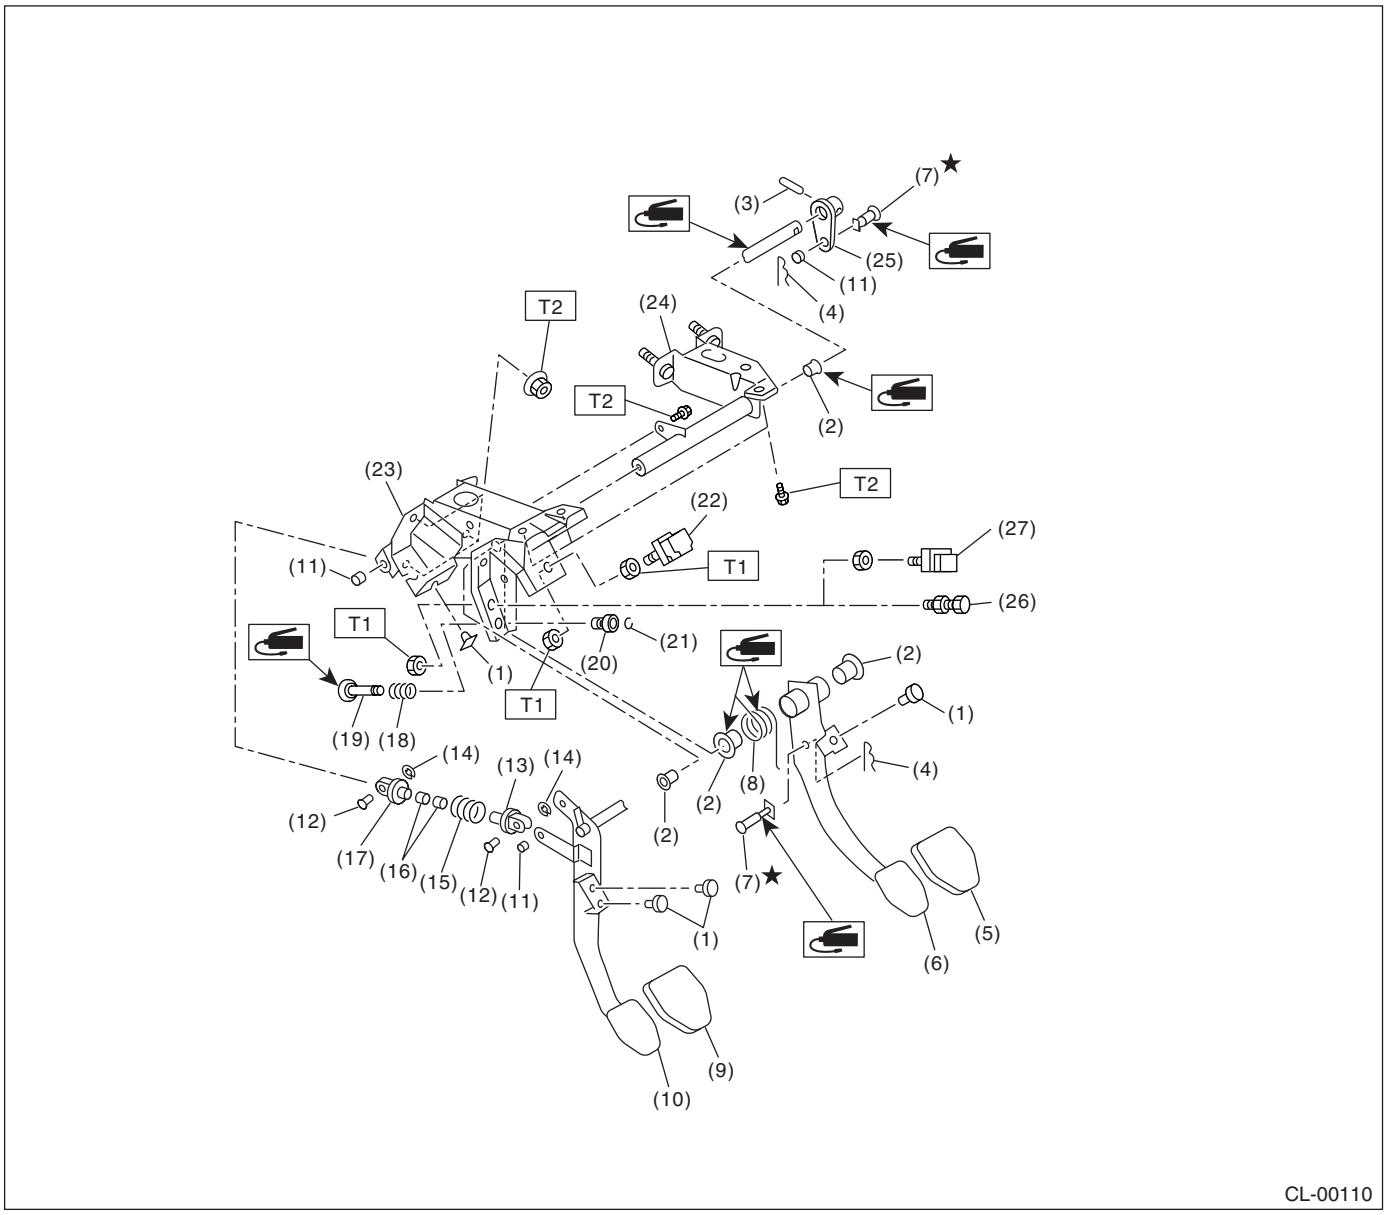

(1) Stopper
(2) Bushing
(3) Spring pin
(4) Snap pin
(5) Brake pedal pad
(6) Brake pedal
(7) Clevis pin
(8) Brake pedal spring
(9) Clutch pedal pad
(10) Clutch pedal
(11) Bushing C
(12) Clutch clevis pin
(13) Assist rod A
(14) Clip
(15) Assist spring
(16) Assist bushing
(17) Assist rod B
(18) Spring A
(19) Rod
(20) Bushing B
(21) Clip
(22) Stop light switch
(23) Pedal bracket
(24) Clutch master cylinder bracket
(25) Lever
(26) Adjust bolt
(27) Clutch switch (With cruise control)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 18 (1.8, 13.0)

• LHD 1.6 L MODEL

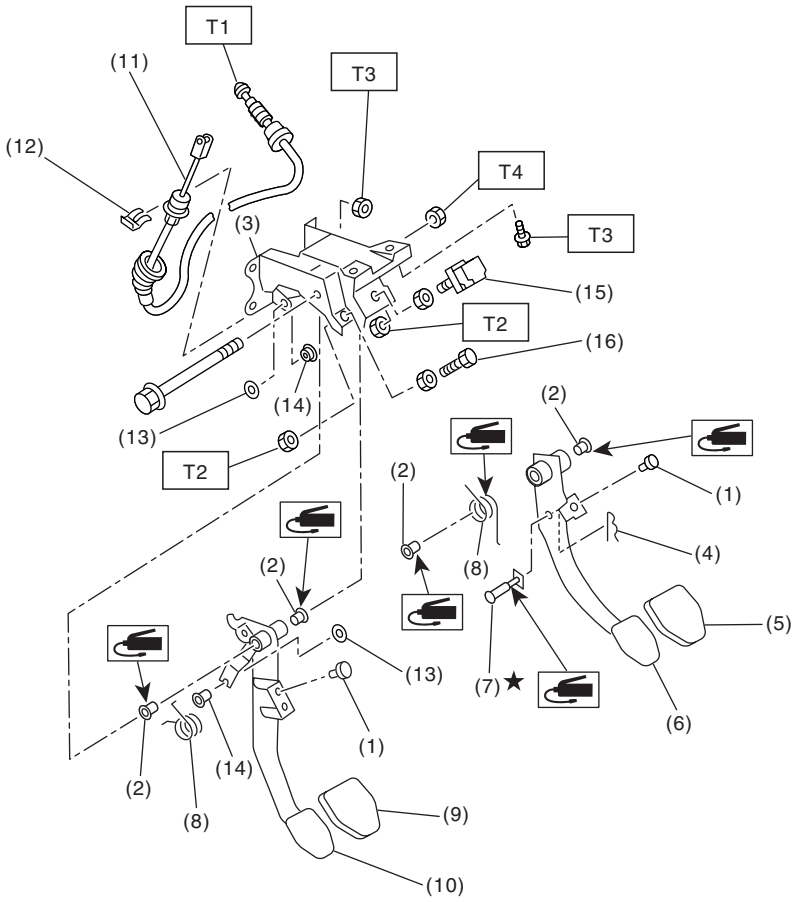

CL-00205

(1)	Stopper	(9)	Clutch pedal pad
(2)	Bushing	(10)	Clutch pedal
(3)	Clutch pedal bracket	(11)	Clutch cable
(4)	Snap pin	(12)	Clutch cable clamp
(5)	Brake pedal pad	(13)	Clip
(6)	Brake pedal	(14)	Spring assist
(7)	Clevis pin	(15)	Stop light switch
(8)	Spring	(16)	Adjust bolt

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5.9 (0.60, 4.3)
T2: 8 (0.8, 5.8)
T3: 18 (1.8, 13.0)
T4: 29 (3.0, 21.7)

• RHD 2.0 L AND 2.5 L MODEL

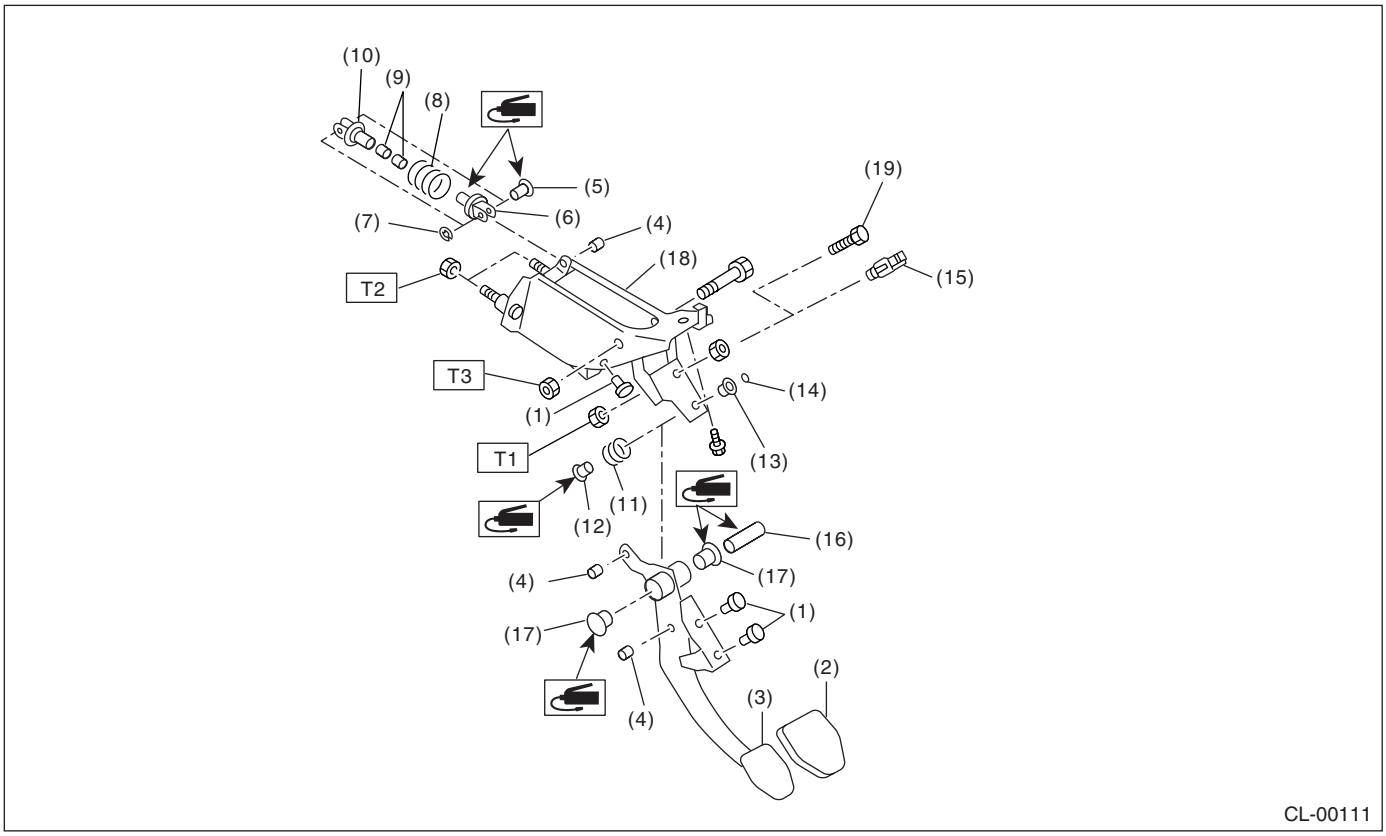

(1) Stopper
(2) Clutch pedal pad
(3) Clutch pedal
(4) Bushing
(5) Clutch clevis pin
(6) Assist rod A
(7) Clip
(8) Assist spring
(9) Assist bushing
(10) Assist rod B
(11) Spring A
(12) Rod S
(13) Bushing B
(14) O-ring
(15) Clip
(16) Clutch switch (With cruise control)
(17) Spacer
(18) Bushing
(19) Clutch pedal bracket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 18 (1.8, 13.0)
T3: 30 (3.1, 22.4)

• RHD 1.6 L MODEL

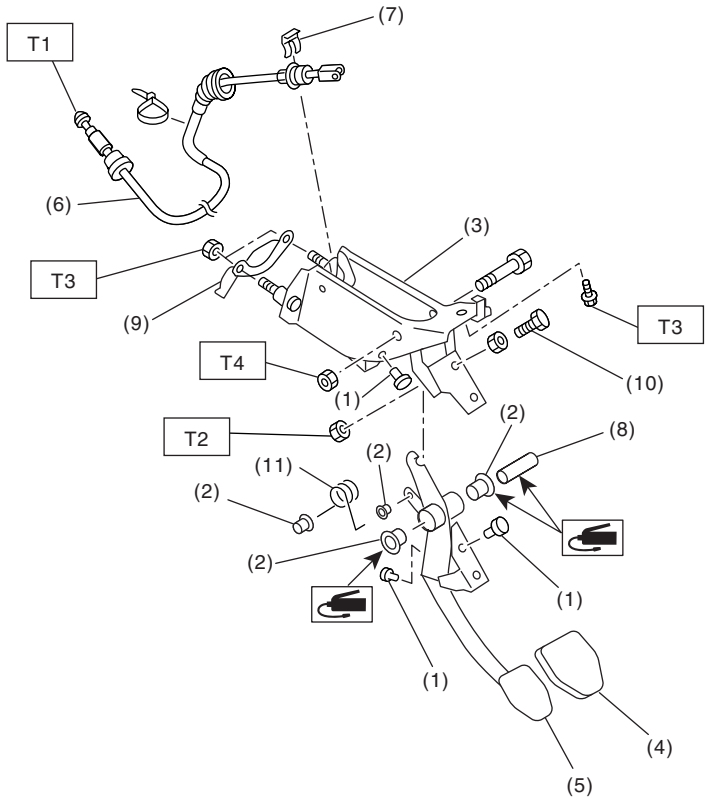

CL-00206

(1) Stopper
(2) Bushing
(3) Clutch pedal bracket
(4) Clutch pedal pad
(5) Clutch pedal
(6) Clutch cable
(7) Clutch cable clamp
(8) Spacer
(9) Bracket
(10) Adjust bolt
(11) Spring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5.9 (0.6, 4.3)
T2: 8 (0.8, 5.8)
T3: 18 (1.8, 13.0)
T4: 29 (3.0, 21.7)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use Subaru genuine fluid, grease etc. or the equivalent. Do not mix fluid, grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Apply grease onto sliding or revolution surfaces before installation.
• Before installing O-rings or snap rings, apply sufficient amount of fluid to avoid damage and deformation.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Keep fluid away from the vehicle body. If any fluid contacts the vehicle body, immediately flush the area with water.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
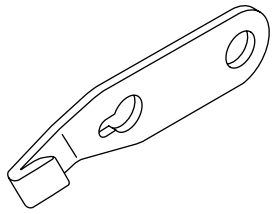 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of flywheel when loosening tightening bolt, etc.
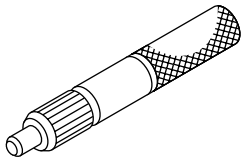 ST-499747100	499747100	CLUTCH DISC GUIDE	Used when installing clutch disc to flywheel.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
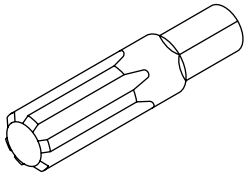 ST-499057000	499057000	TORX® PLUS	• Used for removing flywheel (Dual mass flywheel type). • For 2.5 L model.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.
Dial Gauge	Used for measuring clutch disk run-out.

2. Clutch Disc and Cover

A: REMOVAL

1. 2.5 L MODEL

1) Remove the transmission assembly from vehicle body. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Insert the ST on flywheel.
ST 499747100 CLUTCH DISC GUIDE

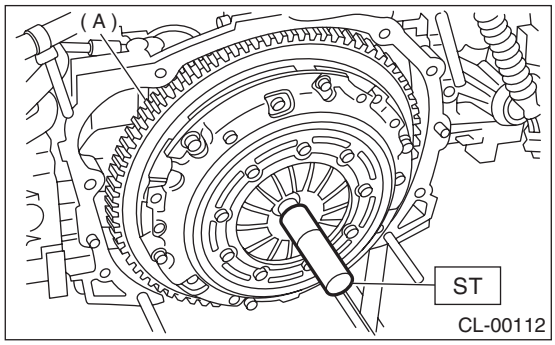

(A) Double mass flywheel

3) Remove the clutch cover and clutch disc.

NOTE:
• Take care not to allow oil on the clutch disc facing.
• Do not disassemble either the clutch cover or clutch disc.
• Put matching marks to the flywheel and clutch cover before removing the clutch cover.

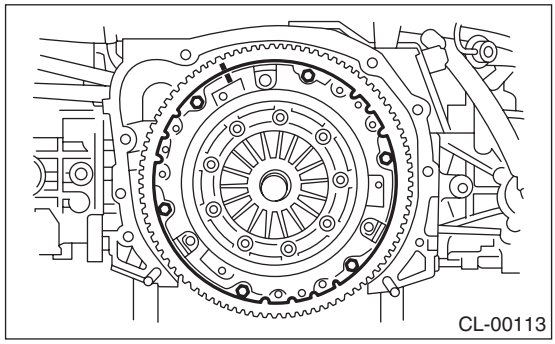

2. EXCEPT 2.5 L MODEL

1) Remove the transmission assembly from vehicle body. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Install the ST on flywheel.
ST 499747100 CRANKSHAFT STOPPER

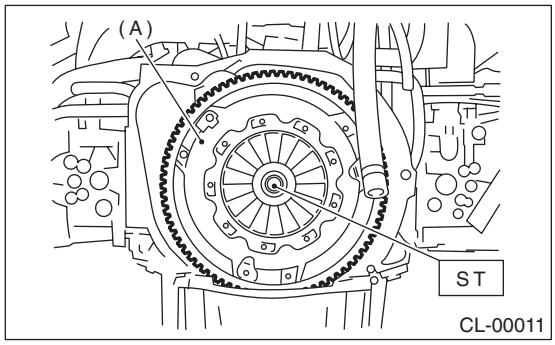

(A) Clutch cover

3) Remove the clutch cover and clutch disc.

NOTE:
• Take care not to allow oil on the clutch disc facing.
• Do not disassemble either the clutch cover or clutch disc.

B: INSTALLATION

1. 2.5 L MODEL

1) Insert the ST into clutch disc and install them on the flywheel by inserting the ST end into pilot bearing.

NOTE:
When installing the clutch disc, be careful to its direction.
ST 499747100 CLUTCH DISC GUIDE

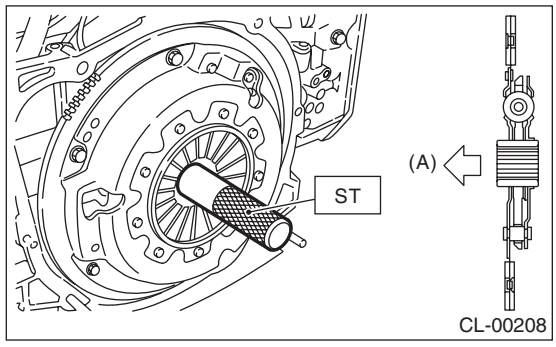

(A) Flywheel side

2) Install the clutch cover on flywheel and tighten the bolts to specified torque.

NOTE:
• Align matching marks.
• Note the front and rear of the clutch disc when installing.
• Tighten the clutch cover installing bolts gradually. Each bolt should be tightened to the specified torque in a crisscross fashion.

Tightening torque:
16 N·m (1.6 kgf-m, 11.8 ft-lb)

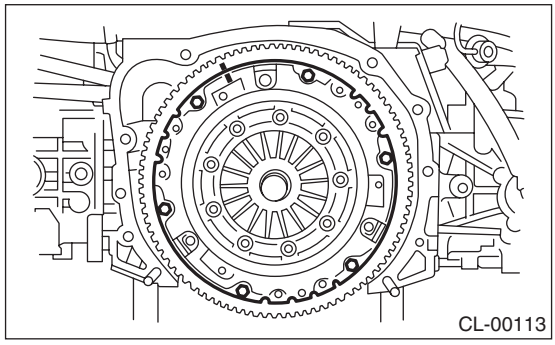

3) Remove the ST.
ST 499747100 CLUTCH DISC GUIDE

2. EXCEPT 2.5 L MODEL

1) Insert the ST into clutch disc and install them on the flywheel by inserting the ST end into pilot bearing.

NOTE:
When installing the clutch disc, be careful to its direction.
ST 499747100 CLUTCH DISC GUIDE

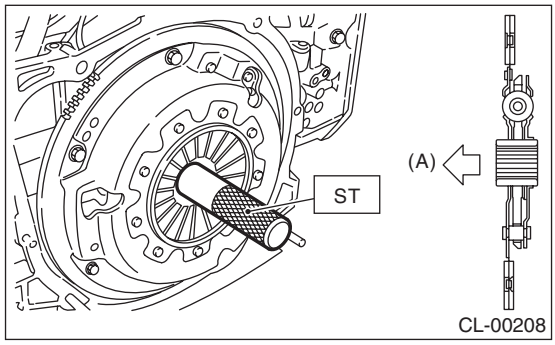

(A) Flywheel side

2) Install the clutch cover on flywheel and tighten the bolts to specified torque.

NOTE:
• When installing the clutch cover on flywheel, position the clutch cover so that there is a gap of 120° or more between "0" marks on the flywheel and clutch cover. ("0" marks indicate the directions of residual unbalance.)
• Note the front and rear of the clutch disc when installing.
• Temporarily tighten the bolts by hand. Each bolt should be tightened to the specified torque in a crisscross fashion.

Tightening torque:
16 N·m (1.6 kgf-m, 11.8 ft-lb)

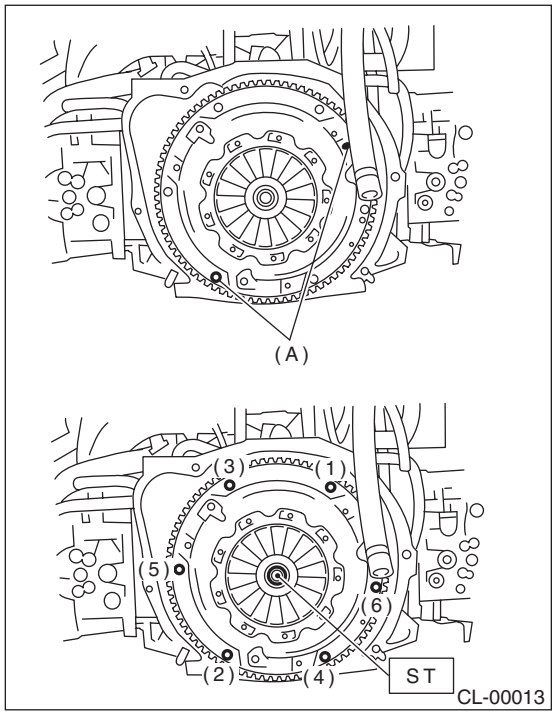

(A) "0" marks

3) Remove the ST.
ST 499747100 CLUTCH DISC GUIDE
4) Install the transmission assembly. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1. CLUTCH DISC

1) Facing wear
Measure the depth of rivet head from the surface of facing. Replace if facings are worn locally or worn down to less than the specified value.

Depth of rivet head:
Limit of sinking
0.3 mm (0.012 in)

NOTE:
Do not wash the clutch disc with any cleaning fluid.

• 2.5 L MODEL

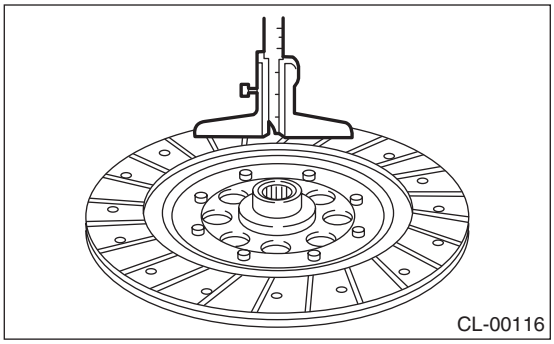

• Except 2.5 L MODEL

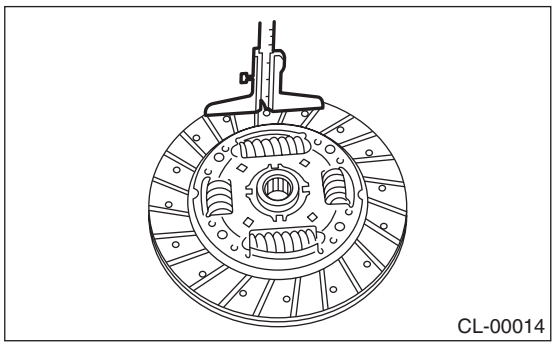

2) Hardened facing
Correct by using emery paper or replace.
3) Oil soakage on facing
Replace the clutch disc and inspect the transmission front oil seal, transmission case mating surface, engine rear oil seal and other points for oil leakage.

• 2.5 L MODEL

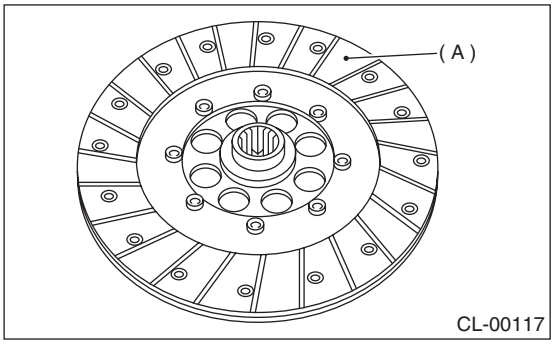

(A) Clutch facing

• Except 2.5 L MODEL

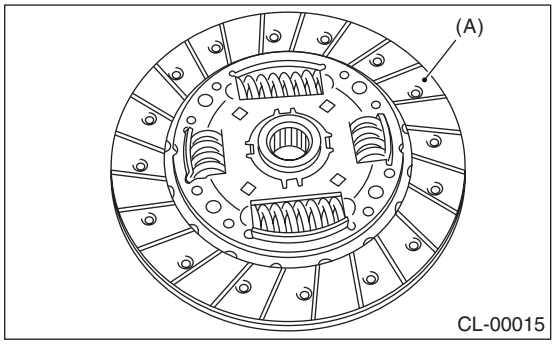

(A) Clutch facing

4) Deflection on facing
If deflection exceeds the specified value at the outer circumference of facing, repair or replace.
ST 499747100 CLUTCH DISC GUIDE

Limit for deflection:
1.6 L model
0.8 mm (0.031 in) at R = 107 mm (4.21 in)
2.0 L model
0.8 mm (0.031 in) at R = 110 mm (4.33 in)
2.5 L model
1.0 mm (0.039 in) at R = 110 mm (4.33 in)

• 2.5 L MODEL

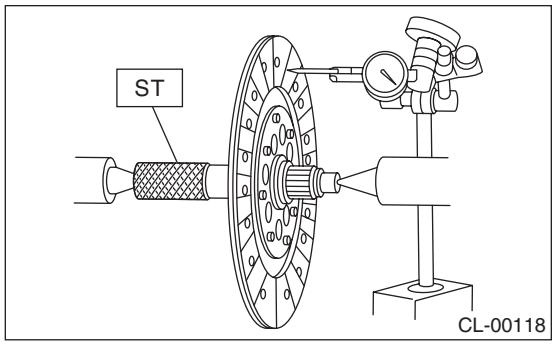

• Except 2.5 L MODEL

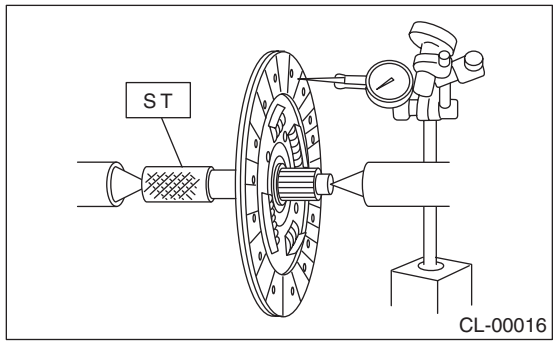

5) Worn spline, loose rivets and torsion spring failure
Replace defective parts.

• 2.5 L MODEL

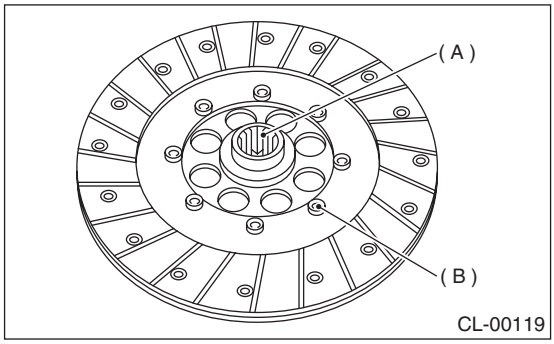

• Except 2.5 L MODEL

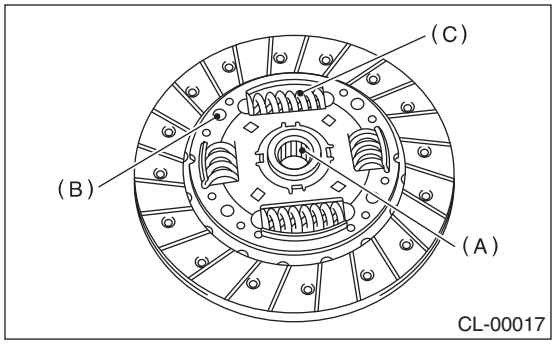

(A) Spline
(B) Rivet
(C) Torsion spring

2. CLUTCH COVER

NOTE:
Visually check for the following items without disassembling, and replace or repair if defective.

1) Loose thrust rivet.
2) Damaged or worn bearing contact area at center of diaphragm spring.

• 2.5 L MODEL

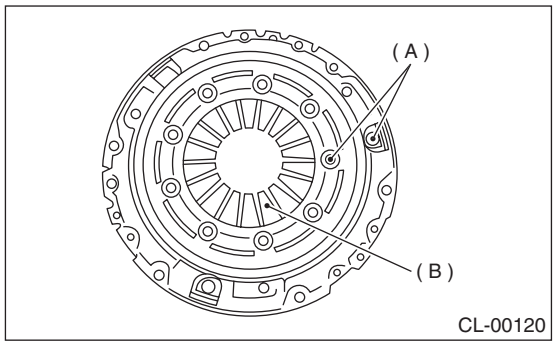

• Except 2.5 L MODEL

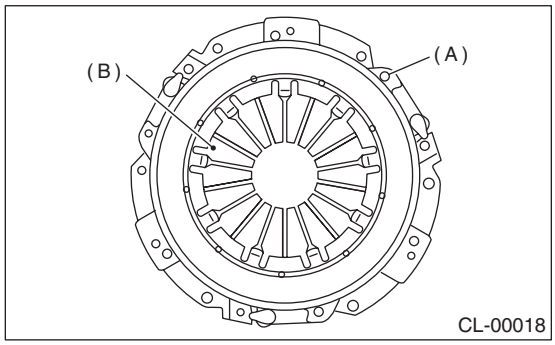

(A) Thrust rivet
(B) Diaphragm spring

3. Flywheel

A: REMOVAL

1. 2.5 L MODEL

1) Remove the transmission assembly. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the clutch cover and clutch disc. <Ref. to CL-20, REMOVAL, Clutch Disc and Cover.>
3) Remove the flywheel using ST1 and ST2.
ST1 498497100 CRANKSHAFT STOPPER
ST2 499057000 TORX PLUS

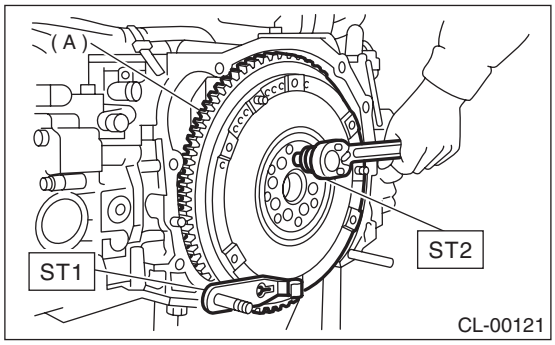

(A) Flywheel

2. EXCEPT 2.5 L MODEL

1) Remove the transmission assembly. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the clutch cover and clutch disc. <Ref. to CL-20, REMOVAL, Clutch Disc and Cover.>
3) Using the ST, remove the flywheel.
ST 498497100 CRANKSHAFT STOPPER

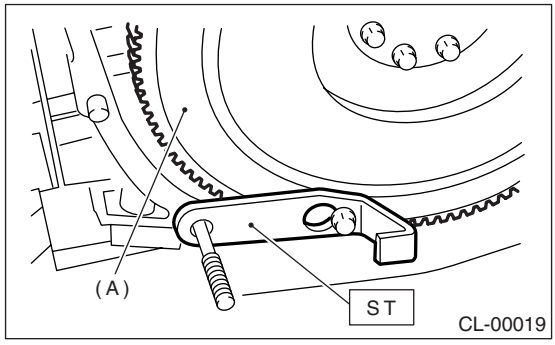

(A) Flywheel

B: INSTALLATION

1. 2.5 L MODEL

1) Install the flywheel and ST.
ST 498497100 CRANKSHAFT STOPPER

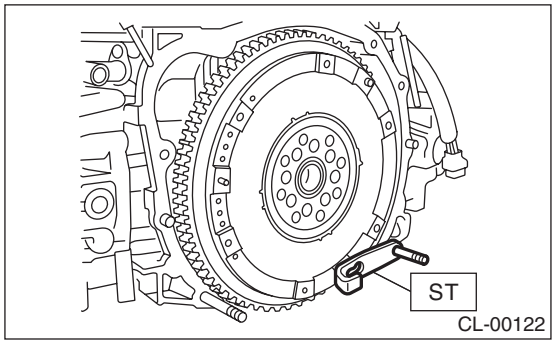

2) Tighten the flywheel attaching bolts to the specified torque.
ST 499057000 TORX PLUS

NOTE:
Tighten the flywheel installing bolts gradually. Each bolt should be tightened to the specified torque in a crisscross fashion.

Tightening torque:
72 N·m (7.3 kgf-m, 52.8 ft-lb)

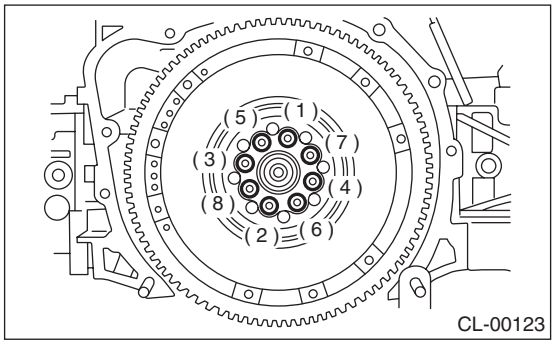

3) Install the clutch disc and cover. <Ref. to CL-20, 2.5 L MODEL, INSTALLATION, Clutch Disc and Cover.>
4) Install the transmission assembly. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

2. EXCEPT 2.5 L MODEL

1) Install the flywheel and ST.
ST 498497100 CRANKSHAFT STOPPER

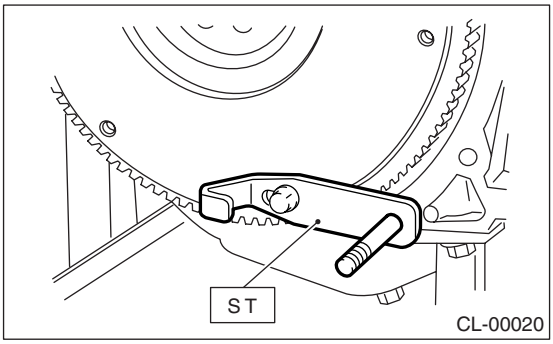

2) Tighten the flywheel attaching bolts to the specified torque.

NOTE:
Tighten the flywheel installing bolts gradually. Each bolt should be tightened to the specified torque in a crisscross fashion.

Tightening torque:
72 N·m (7.3 kgf-m, 52.8 ft-lb)

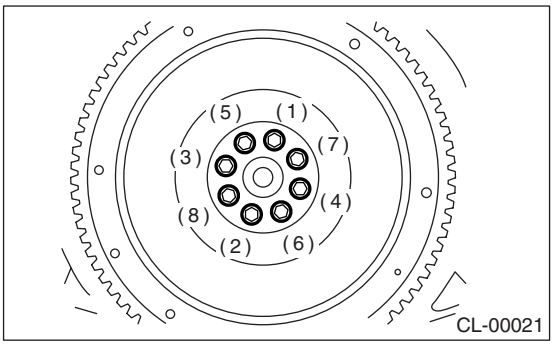

3) Install the clutch disc and cover. <Ref. to CL-21, EXCEPT 2.5 L MODEL, INSTALLATION, Clutch Disc and Cover.>
4) Install the transmission assembly. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

CAUTION:
Since this bearing is grease sealed and is of a non-lubrication type, do not wash with gasoline or any solvent.

1) Damage of facing and ring gear
If defective, replace the flywheel.

- 2.5 L MODEL

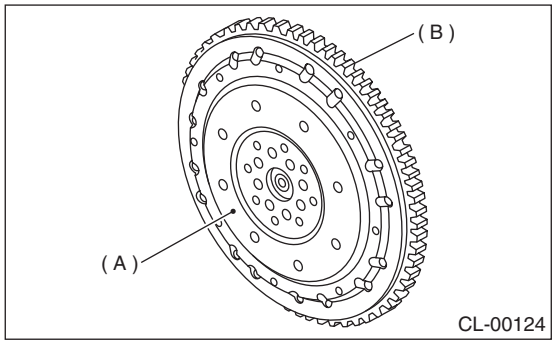

(A) Flywheel
(B) Ring gear

- Except 2.5 L MODEL

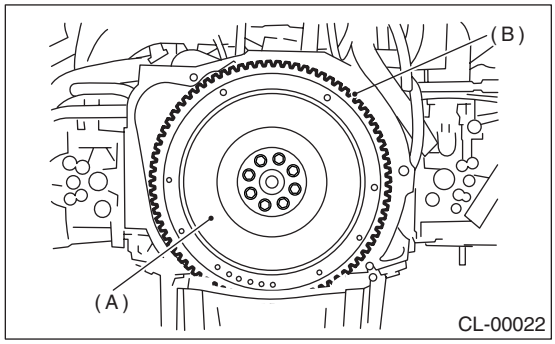

(A) Flywheel
(B) Ring gear

2) Smoothness of rotation
Rotate the ball bearing applying pressure in thrust direction.
3) If noise or excessive play is noted, replace the flywheel.

4. Release Bearing and Lever

A: REMOVAL

1. EXCEPT DOHC TURBO MODEL

1) Remove the transmission assembly from vehicle body.
<Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the two clips from clutch release lever and remove the release bearing.

CAUTION:
Be careful not to deform clips.

3) Remove the release lever seal.

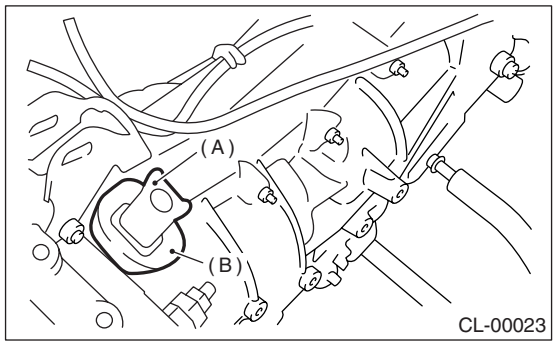

(A) Clutch release lever
(B) Release lever seal

4) Remove the release lever retainer spring from release lever pivot with a screwdriver by accessing it through clutch housing release lever hole. Then remove the release lever.

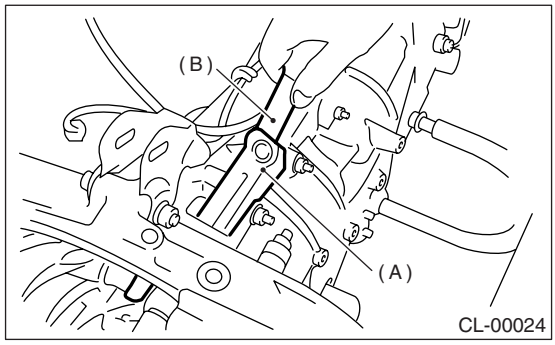

(A) Clutch release lever
(B) Screwdriver

2. DOTC TURBO MODEL

1) Remove the transmission assembly from vehicle body. <Ref. to 5MT-38, REMOVAL, Manual Transmission Assembly.>
2) Remove the clutch release lever from transmission.
3) Put the clutch release bearing in engine side.
4) Remove the clutch release bearing from the clutch cover using flat-type screwdriver.

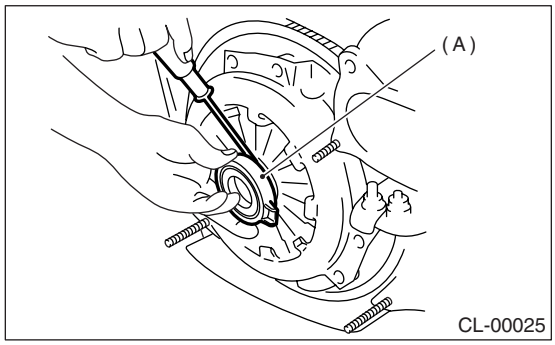

(A) Clutch release bearing

B: INSTALLATION

1. EXCEPT DOHC TURBO MODEL

NOTE:
Before or during assembling, lubricate the following points with a light coat of grease.
- Contact surface of lever and pivot
- Contact surface of lever and bearing
- Transmission main shaft spline (Use grease containing molybdenum disulphide.)

1) While pushing the release lever to pivot and twisting it to both sides, fit the retainer spring onto the constricted portion of pivot.

NOTE:
- Apply grease (KOPR-KOTE: Part No. 003603001) to the contact point of release lever and operating cylinder.
- Confirm that the retainer spring is securely fitted by observing it through the main case hole.

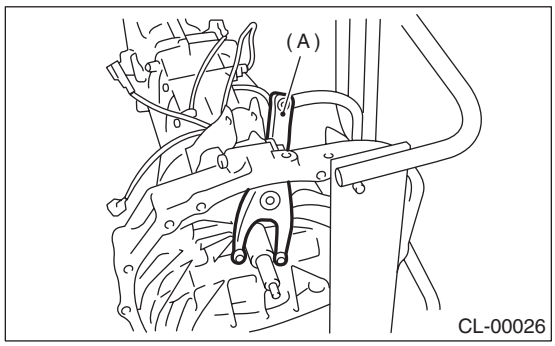

(A) Release lever

2) Install the release bearing and fasten it with two clips.

3) Install the release lever seal.

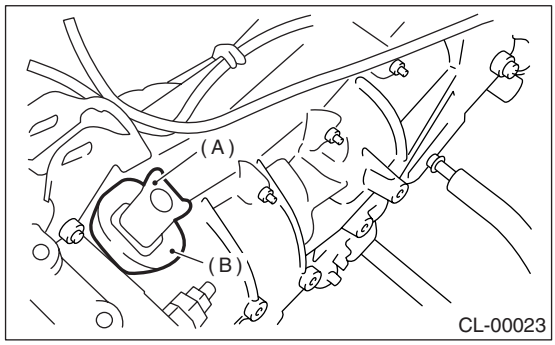

(A) Release lever
(B) Release lever seal

4) Install the transmission assembly.
<Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

2. DOHC TURBO MODEL

1) Install the release bearing on transmission.
2) Insert the release fork into release bearing tab.

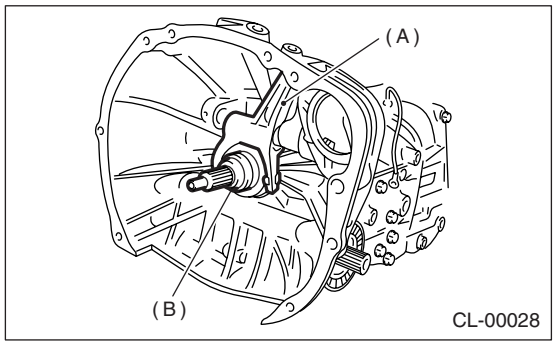

(A) Release fork
(B) Release bearing

3) Apply grease to the specified points.

Grease:
NICHIMOLY N-130

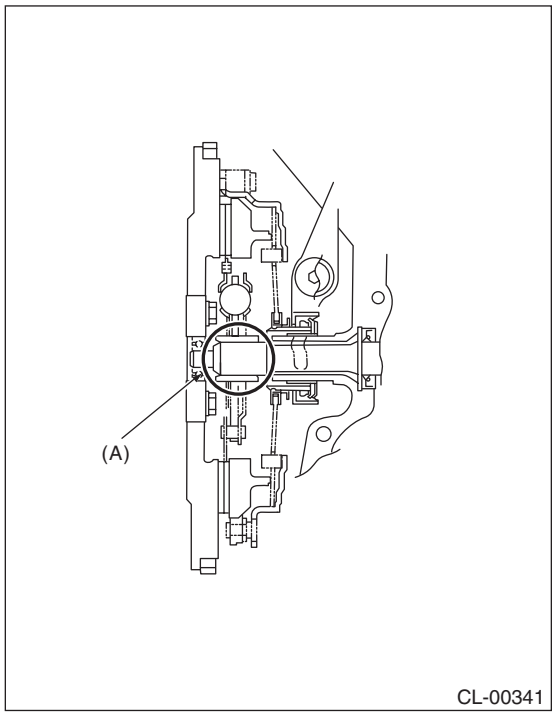

(A) Spline

4) Insert the release fork shaft into release fork.

NOTE:
Make sure the cutout portion of release fork shaft contacts spring pin.

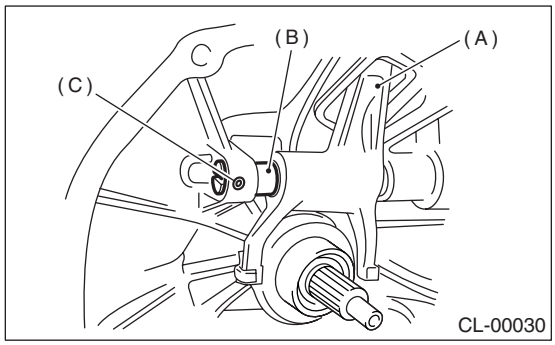

(A) Release fork
(B) Release shaft
(C) Spring pin

5) Tighten the plug.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

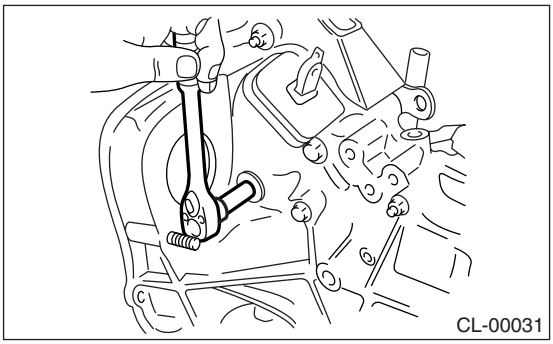

6) Install the transmission assembly. <Ref. to 5MT-41, INSTALLATION, Manual Transmission Assembly.>

C: INSPECTION

1. RELEASE BEARING

NOTE:
Since this bearing is grease sealed and is of a non-lubrication type, do not wash with gasoline or any solvent when servicing the clutch.

1) Check the bearing for smooth movement by applying force in the radial direction.

Radial direction stroke:
1.4 mm (0.055 in)

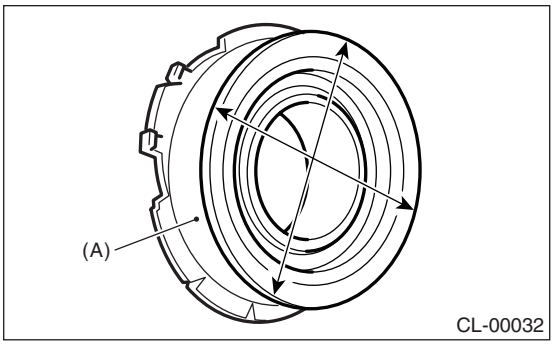

(A) Bearing case

2) Check the bearing for smooth rotation by applying pressure in the thrust direction.

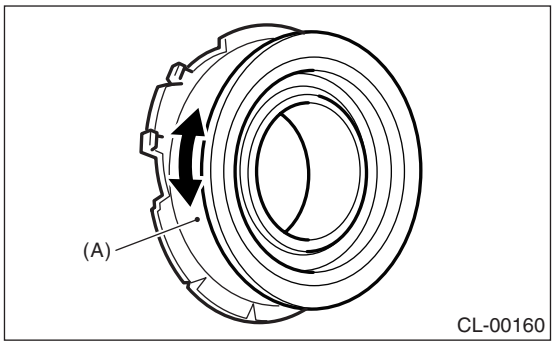

(A) Bearing case

3) Check wear and damage of the bearing case surface contacting with lever.

2. RELEASE LEVER

1) Check the lever pivot portion and the point of contact with release bearing case for wear.

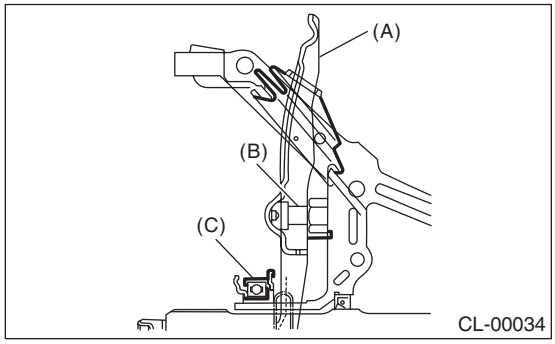

(A) Clutch release lever
(B) Pivot
(C) Clutch release bearing

5. Operating Cylinder

A: REMOVAL

1) Remove the air cleaner case and air intake duct (Non-turbo model). <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
2) Remove the intercooler (Turbo model). <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
3) Remove the clutch hose from operating cylinder.

CAUTION:
Cover the hose joint to prevent clutch fluid from flowing out.

- NON-TURBO MODEL

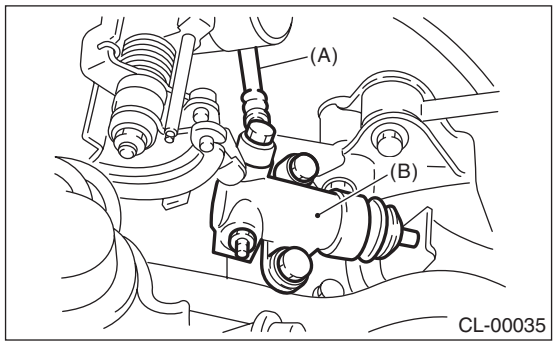

(A) Clutch hose
(B) Operating cylinder

- DOHC TURBO MODEL (5MT)

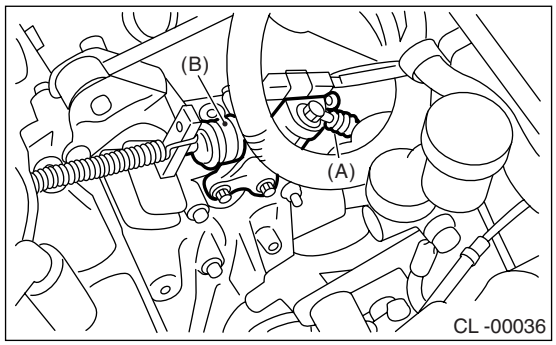

(A) Clutch hose
(B) Operating cylinder

- DOHC TURBO MODEL (6MT)

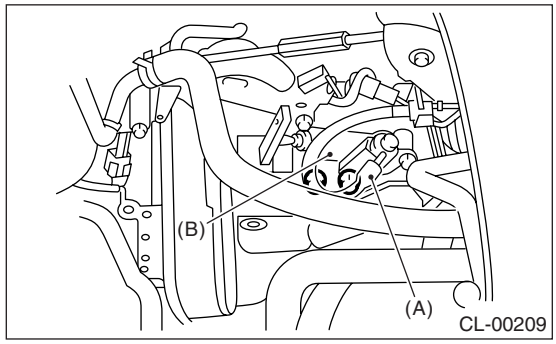

(A) Clutch hose
(B) Operating cylinder

4) Remove the operating cylinder from transmission.

- NON-TURBO MODEL

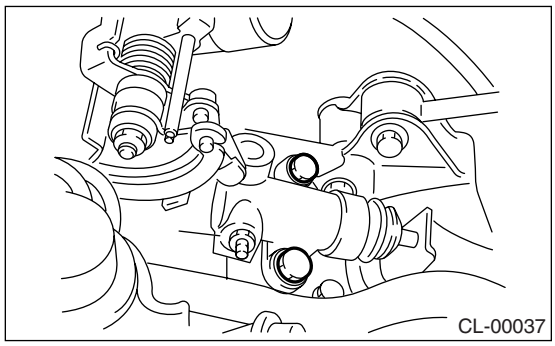

- DOHC TURBO MODEL (5MT)

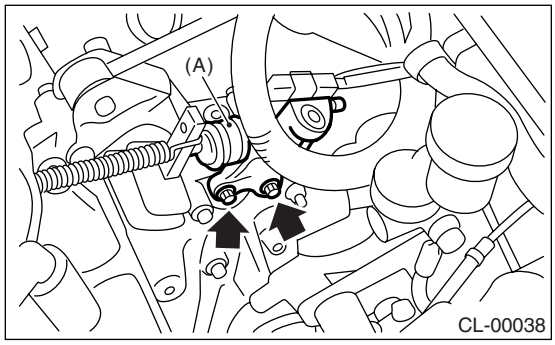

(A) Operating cylinder

• DOHC TURBO MODEL (6MT)

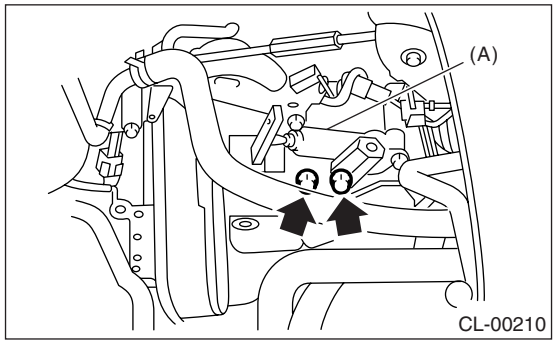

(A) Operating cylinder

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
Before installing the operating cylinder, apply grease (KOPR-KOTE: Part No. 003603001) to contact point of the release lever and operating cylinder.

• NON-TURBO MODEL

Tightening torque:
T1: 18 N·m (1.8 kgf-m, 13.0 ft-lb)
T2: 37 N·m (3.8 kgf-m, 27.5 ft-lb)

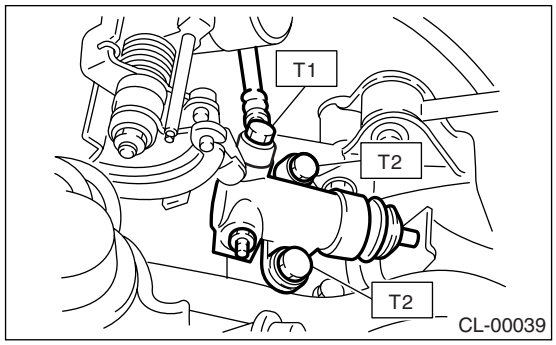

• DOHC TURBO MODEL (5MT)

Tightening torque:
T1: 18 N·m (1.8 kgf-m, 13.0 ft-lb)
T2: 37 N·m (3.8 kgf-m, 27.5 ft-lb)

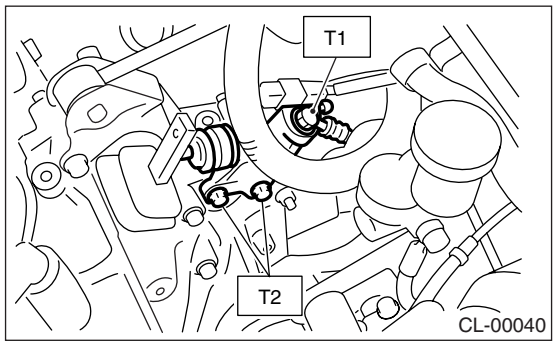

• DOHC TURBO MODEL (6MT)

Tightening torque:
T1: 18 N·m (1.8 kgf-m, 13.0 ft-lb)
T2: 41 N·m (4.2 kgf-m, 30.2 ft-lb)

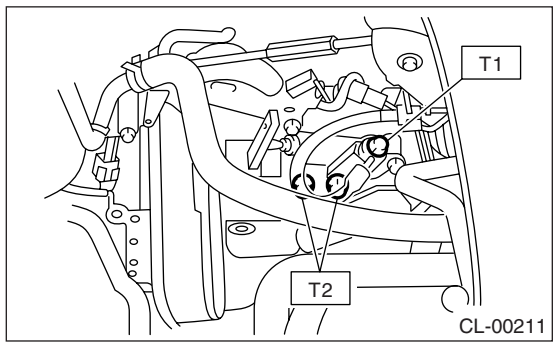

NOTE:
• Be sure to install the clutch hose with the mark side facing upward.
• Be careful not to twist the clutch hose during installation.

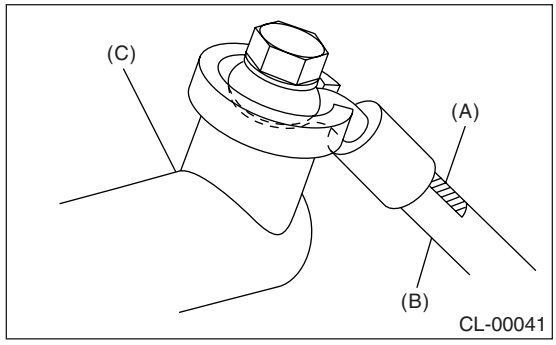

(A) Marking
(B) Clutch hose
(C) Operating cylinder

2) After bleeding air from the operating cylinder, ensure that clutch operates properly.
<Ref. to CL-38, Clutch Fluid Air Bleeding.>

C: INSPECTION

1) Check the operating cylinder for damage. If operating cylinder is damaged, replace it.
2) Check the operating cylinder for fluid leakage or damage on boot. If any leakage or damage is found, replace the operating cylinder.

6. Master Cylinder

A: REMOVAL

1) Thoroughly drain the brake fluid from reservoir tank.
2) Remove the snap pin, clevis pin and separate the push rod of master cylinder from clutch pedal.

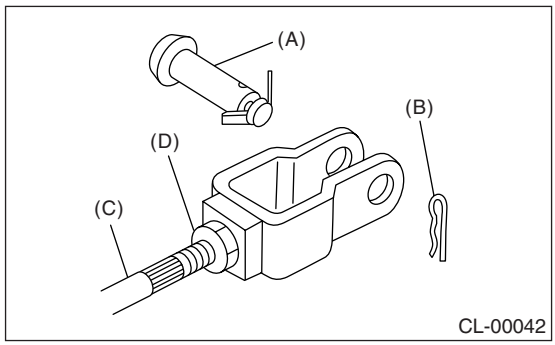

(A) Clevis pin
(B) Snap pin
(C) Push rod
(D) Lock nut

3) Remove the air cleaner case and air intake duct (Non-turbo model). <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
4) Remove the intercooler (Turbo model). <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
5) Remove the clutch pipe from master cylinder.
6) Remove the master cylinder with reservoir tank.

CAUTION:
Be extremely careful not to spill brake fluid. Brake fluid spilt on the vehicle body will harm the paint surface; wipe it off quickly if spilt.

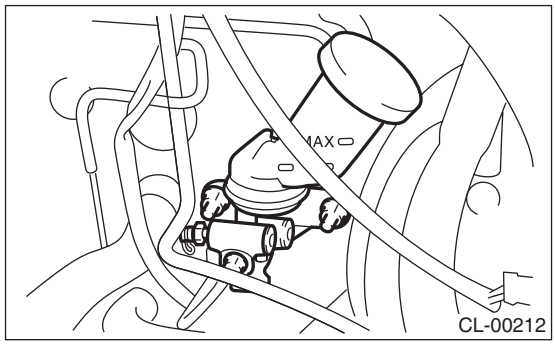

B: INSTALLATION

1) Install the master cylinder to body, and install the clutch pipe to master cylinder.

CAUTION:
Check that the pipe is routed properly.

Tightening torque:
T1: 15 N·m (1.5 kgf-m, 10.8 ft-lb)
T2: 18 N·m (1.8 kgf-m, 13.0 ft-lb)

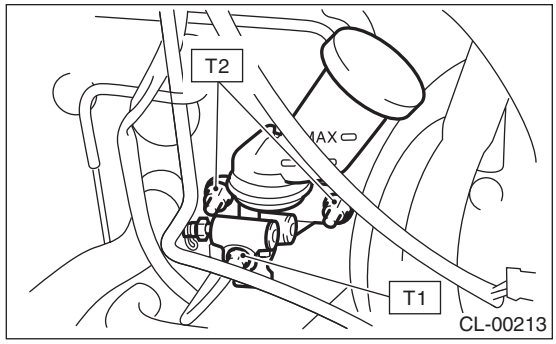

2) Connect the push rod of master cylinder to clutch pedal, and install the clevis pin and snap pin.

NOTE:
Apply grease to the clevis pin.

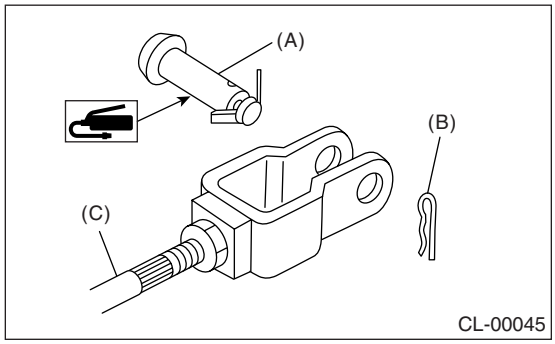

(A) Clevis pin
(B) Snap pin
(C) Push rod

3) After bleeding air from the system, ensure that clutch operates properly.
<Ref. to CL-38, Clutch Fluid Air Bleeding.>
4) Install the air cleaner case and air intake duct (Non-turbo model). <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
5) Install the intercooler (Turbo model). <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

C: DISASSEMBLY

1. EXCEPT RHD DOHC TURBO MODEL

1) Remove the straight pin and reservoir tank.

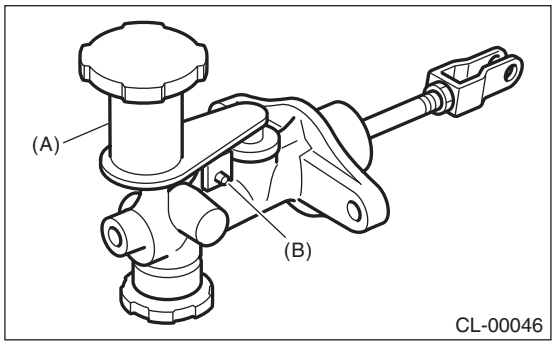

(A) Reservoir tank
(B) Straight pin

2) Remove the oil seal.

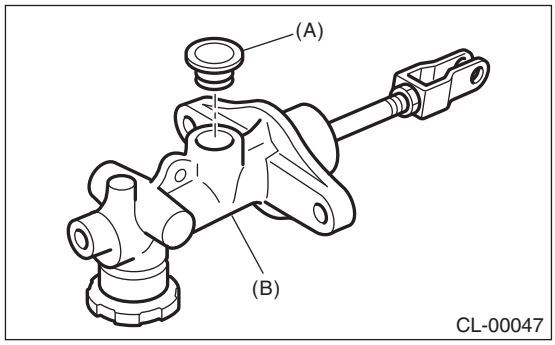

(A) Oil seal
(B) Master cylinder

3) Move the cylinder boot backward.

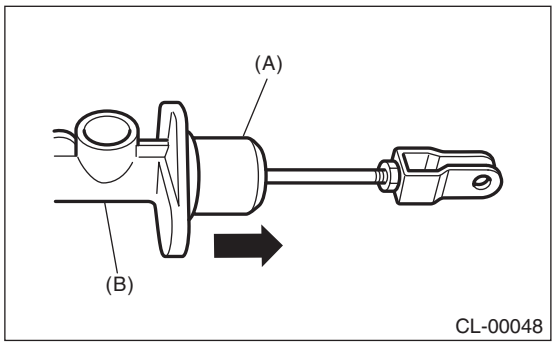

(A) Cylinder boot
(B) Master cylinder

4) Remove the stop ring.

CAUTION:
Be careful when removing the snap ring to prevent the rod, washer, piston and return spring from flying out.

5) Remove the clutch damper.

2. RHD DOHC TURBO MODEL

1) Remove the hose.

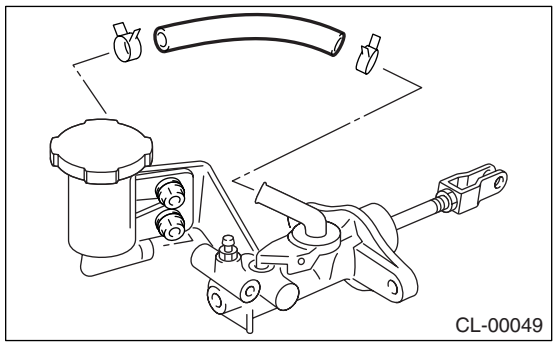

2) Remove the reservoir tank and bracket.

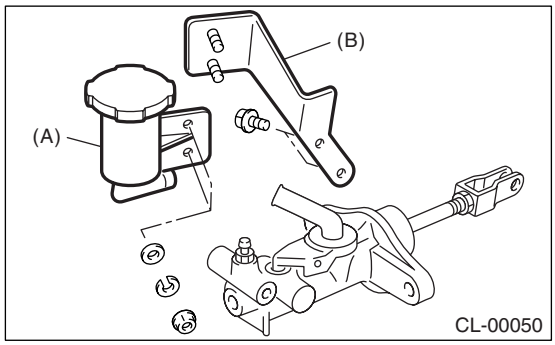

(A) Reservoir tank
(B) Bracket

3) Remove the straight pin and adapter.

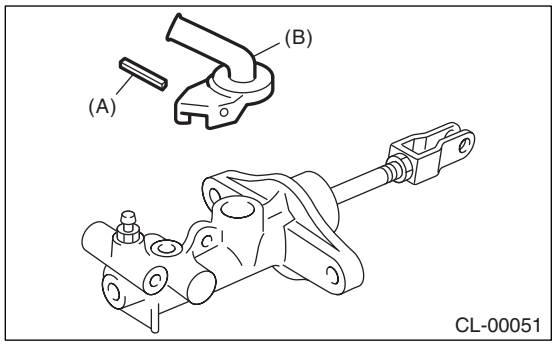

(A) Straight pin
(B) Adapter

4) Remove the oil seal.

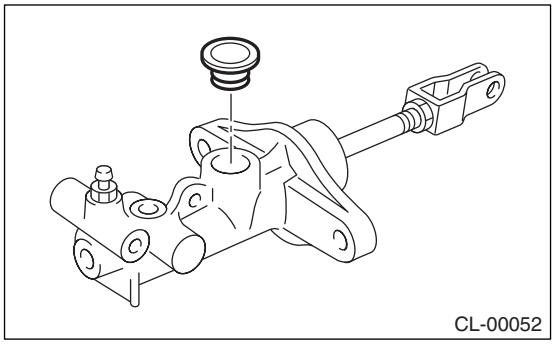

5) Move the cylinder boot backward.

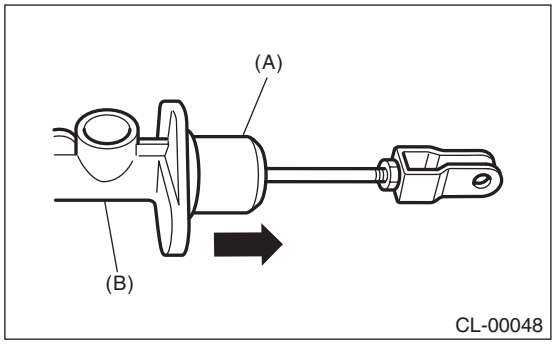

(A) Cylinder boot
(B) Master cylinder

6) Remove the stop ring.

CAUTION:
Be careful when removing the snap ring to prevent the rod, washer, piston and return spring from flying out.

7) Remove the air bleeder.

D: ASSEMBLY

1. EXCEPT RHD DOHC TURBO MODEL

1) Install the clutch damper.

Tightening torque:
46.6 N·m (4.75 kgf-m, 34.4 ft-lb)

2) Apply a coat of grease to the contacting surfaces of the push rod and piston before installation.

Grease:
SILICONE GREASE G40M (Part No. 004404003)

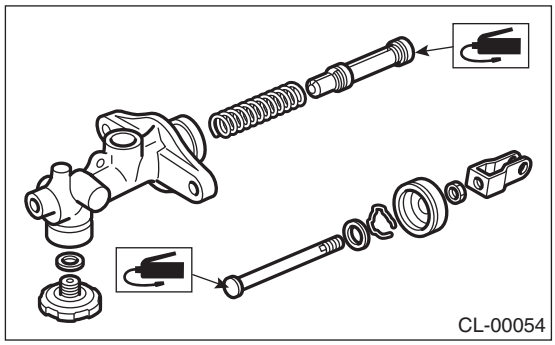

3) To assemble the master cylinder, reverse the sequence of disassembly procedure.

Tightening torque:
10 N·m (1.0 kgf-m, 7 ft-lb)

2. RHD DOHC TURBO MODEL

1) Apply a coat of grease to the contacting surfaces of the push rod and piston before installation.

Grease:
SILICONE GREASE G40M (Part No. 004404003)

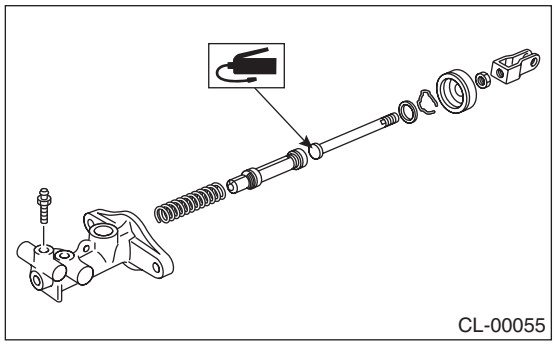

2) Assemble in the reverse order of disassemble.

E: INSPECTION

If any damage, deformation, wear, swelling, rust or other faults are found on the cylinder, piston, push rod, fluid reservoir, return spring, gasket, clutch damper, cylinder boot and hose replace the faulty part.

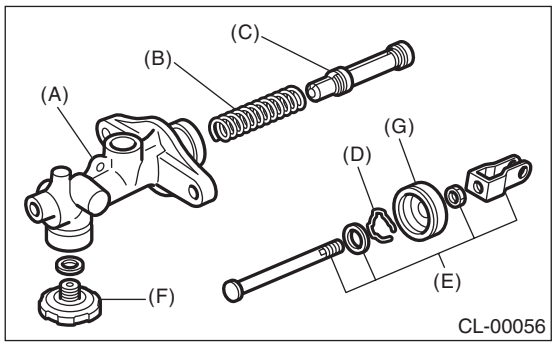

(A) Master cylinder body
(B) Return spring
(C) Piston
(D) Stop ring
(E) Rod ASSY
(F) Clutch damper
(G) Cylinder boot

7. Clutch Pipe and Hose

A: REMOVAL

1. EXCEPT RHD DOHC TURBO MODEL

1) Remove the air cleaner case and air intake duct.
2) Drain the clutch fluid. <Ref. to CL-37, Clutch Fluid.>
3) Remove the clutch pipe from the clutch hose and master cylinder.
4) Pull out the clamp, then remove the clutch hose from bracket.

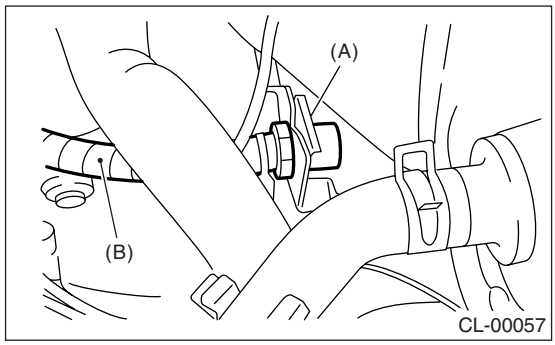

(A) Clamp
(B) Clutch hose

5) Remove the hose from operating cylinder.
6) Remove the bracket.

2. RHD DOHC TURBO MODEL

1) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
2) Drain the clutch fluid. <Ref. to CL-37, Clutch Fluid.>
3) Remove the clutch pipe from the master cylinder, connector and clutch hose.

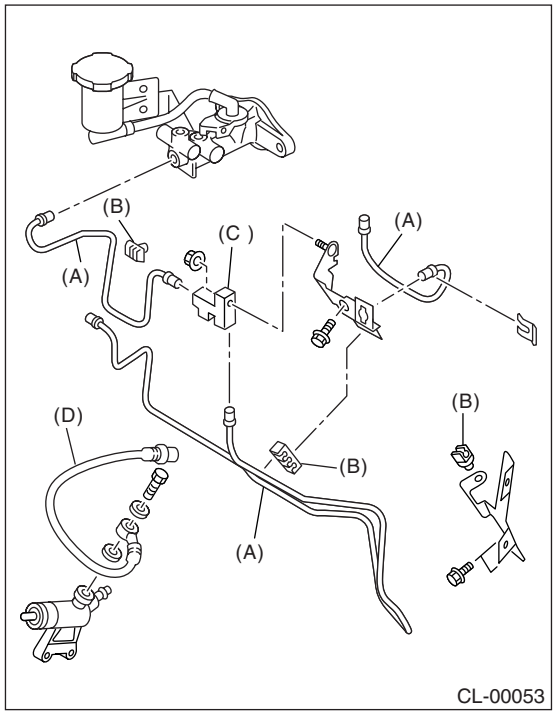

(A) Clutch pipe
(B) Clip
(C) Connector
(D) Clutch hose

4) Pull out the clamp, then remove the clutch hose from bracket.

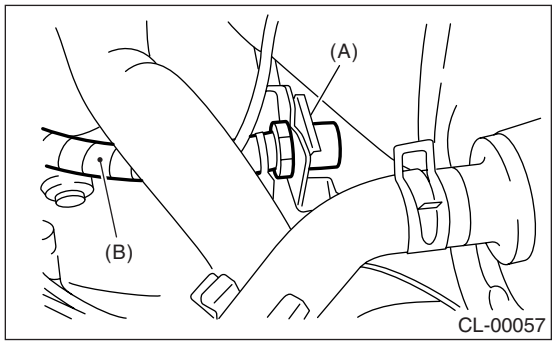

(A) Clamp
(B) Clutch hose

5) Remove the connector.
6) Remove the bracket.

B: INSTALLATION

1. EXCEPT RHD DOHC TURBO MODEL

Install in the reverse order of removal.

NOTE:
Bleed the clutch fluid. <Ref. to CL-38, Clutch Fluid Air Bleeding.>

Tightening torque:
T1: 15 N·m (1.5 kgf-m, 10.8 ft-lb)
T2: 18 N·m (1.8 kgf-m, 13.0 ft-lb)
T3: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

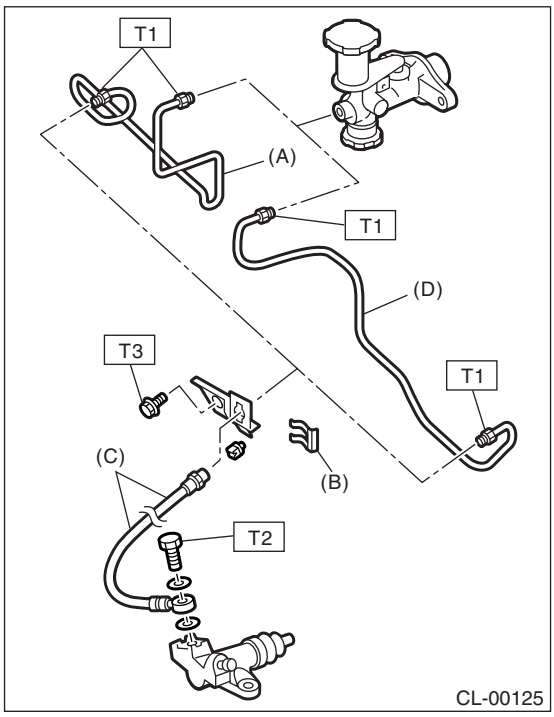

(A) Clutch pipe (LHD model)
(B) Clip
(C) Clutch hose
(D) Clutch pipe (RHD model)

2. RHD DOHC TURBO MODEL

Install in the reverse order of removal.

NOTE:
Bleed the clutch fluid. <Ref. to CL-38, Clutch Fluid Air Bleeding.>

Tightening torque:
T1: 7.5 N·m (0.76 kgf-m, 5.53 ft-lb)
T2: 8 N·m (0.8 kgf-m, 5.8 ft-lb)
T3: 15 N·m (1.5 kgf-m, 10.8 ft-lb)
T4: 18 N·m (1.8 kgf-m, 13.0 ft-lb)
T5: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

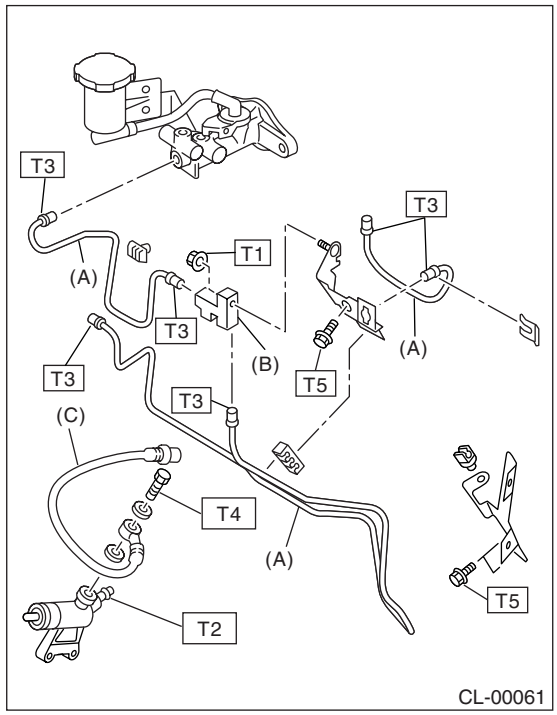

(A) Clutch pipe
(B) Connector
(C) Clutch hose

C: INSPECTION

Check the pipes and hoses for cracks, breakage, or damage. Check the joints for fluid leakage. If any cracks, breakage, damage, or leakage is found, repair or replace the applicable pipe or hose.

8. Clutch Fluid

A: INSPECTION

1) Park the vehicle on a level surface.
2) Inspect the fluid level using scale on the outside of the reservoir tank. If the level is below “MIN”, add fluid to bring it up to “MAX”, and also inspect for leakage.

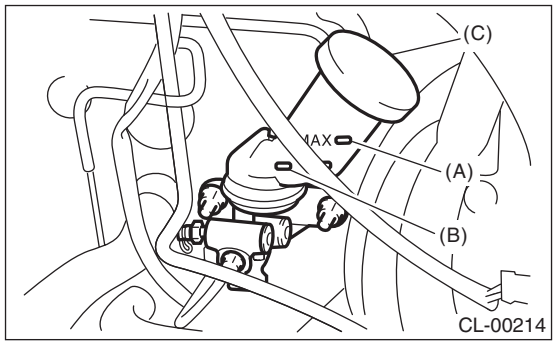

(A) Max. level
(B) Min. level
(C) Reservoir tank

B: REPLACEMENT

CAUTION:
• The FMVSS No. 116, fresh DOT3 or 4 brake fluid must be used.
• Cover the bleeder with waste cloth, when loosening it, to prevent brake fluid from being splashed over surrounding parts.
• Avoid mixing different brands of brake fluid to prevent degrading the quality of the fluid.
• Be careful not to allow dirt or dust to get into the reservoir tank.

NOTE:
• During bleeding operation, keep the clutch reservoir tank filled with brake fluid to eliminate entry of air.
• Clutch pedal operating must be very slow.
• For convenience and safety, it is advisable to have two men working.
• The amount of brake fluid required is approx. 70 m ℓ (2.4 US fl oz, 2.5 Imp fl oz) for total clutch system.

1) Remove the air cleaner case and air duct.
2) Either jack-up the vehicle and place a safety stand under it, or lift-up the vehicle.
3) Draw out the brake fluid from reservoir tank with syringe.
4) Refill the reservoir tank with recommended brake fluid.

Recommended brake fluid:
FMVSS No. 116, fresh DOT3 or 4 brake fluid

5) Drain fluid in the same method as air bleeding.
6) Refill the brake fluid before reservoir tank becomes empty, and drain contaminated fluid again.
7) Repeat the above procedure until the contaminated fluid is completely drained.

9. Clutch Fluid Air Bleeding

A: PROCEDURE

1. NON-TURBO MODEL

NOTE:
Bleed air from the oil line with help of a co-worker.

1) Remove the air cleaner case and air intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
2) Fit one end of a vinyl tube into the air bleeder of operating cylinder and put the other end into a brake fluid container.

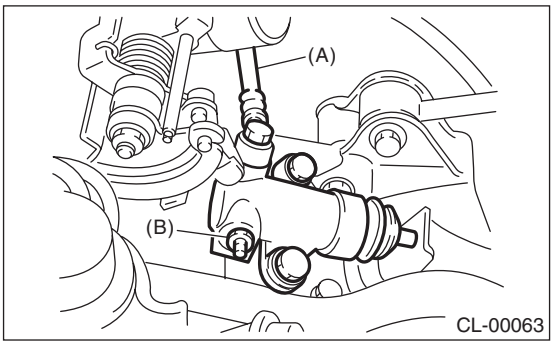

(A) Clutch hose
(B) Air bleeder

3) Slowly depress the clutch pedal and keep it depressed. Then open the air bleeder to discharge air together with the fluid.
Release the air bleeder for 1 or 2 seconds. Next, with the bleeder closed, slowly release the clutch pedal.

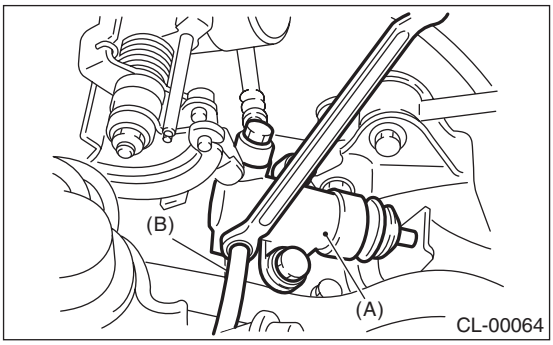

(A) Operating cylinder
(B) Vinyl tube

4) Repeat these steps until there are no more air bubbles in the vinyl tube.

CAUTION:
Cover the bleeder with waste cloth when loosening it, to prevent brake fluid from being splashed over surrounding parts.

5) Tighten the air bleeder.

Tightening torque:
T: 8 N·m (0.8 kgf-m, 5.8 ft-lb)

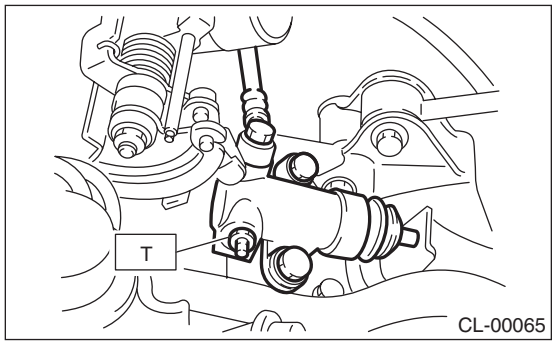

6) After depressing the clutch pedal, make sure that there are no leaks evident in the entire system.
7) After bleeding air from the system, ensure that clutch operates properly.

2. TURBO MODEL

NOTE:
Bleed air from the oil line with help of a co-worker.

1) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
2) Fit one end of a vinyl tube into the air bleeder of master cylinder and put the air bleeder of other end into a brake fluid container. (RHD DOHC turbo model)
3) Slowly depress the clutch pedal and keep it depressed. Then open the air bleeder to discharge air together with the fluid. Release the air bleeder for 1 or 2 seconds. Next, with the bleeder closed, slowly release the clutch pedal. (RHD DOHC turbo model)

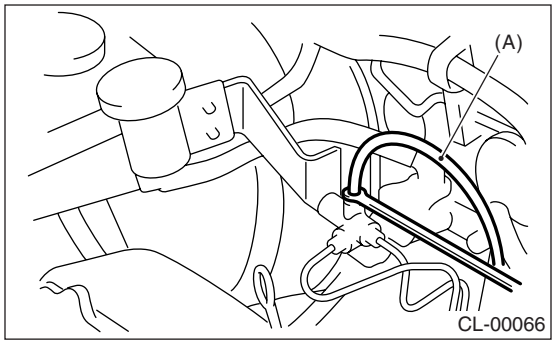

(A) Vinyl tube

4) Repeat these steps until there are no more air bubbles in the vinyl tube. (RHD DOHC turbo model)

CAUTION:
Cover the bleeder with waste cloth when loosening to prevent brake fluid from being splashed over surrounding parts.

5) Tighten the air bleeder. (RHD DOHC turbo model)

Tightening torque:
T: 8 N·m (0.8 kgf-m, 5.8 ft-lb)

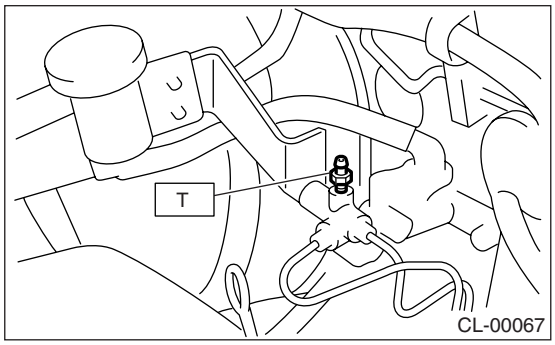

6) Remove the operating cylinder.

NOTE:
Do not remove the clutch hose.

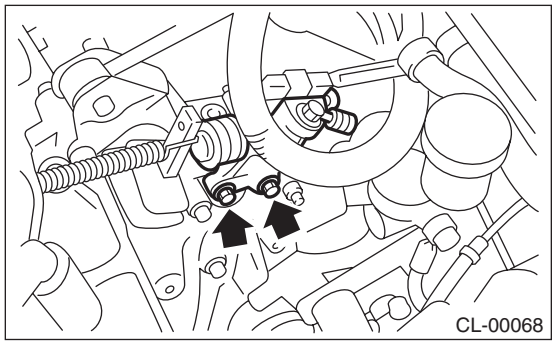

7) Fix the piston with clamp to avoid the piston from jumping out.

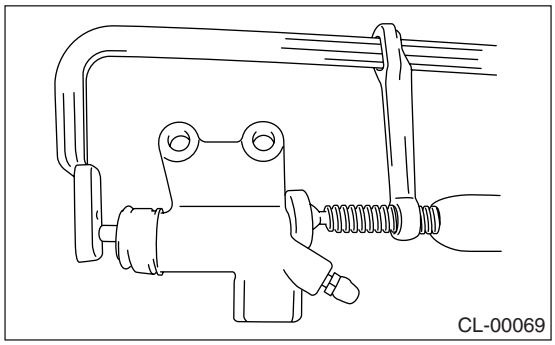

8) Fit one end of a vinyl tube into the air bleeder of operating cylinder and put the other end into a brake fluid container.
9) Slowly depress the clutch pedal and keep it depressed. Then open the air bleeder to discharge air together with the fluid.
Release the air bleeder for 1 or 2 seconds. Next, with the bleeder closed, slowly release the clutch pedal.

NOTE:
Set the air breather screw part higher than tip of operating cylinder when performing this procedure.

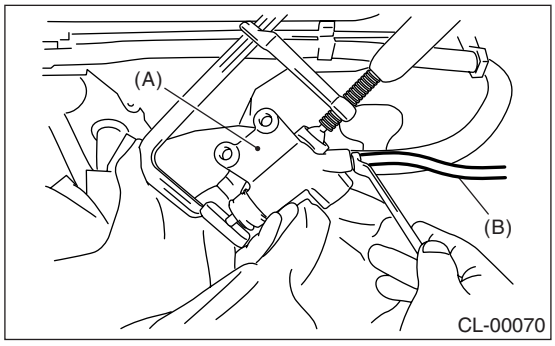

(A) Operating cylinder
(B) Vinyl tube

10) Repeat these steps until there are no more air bubbles in the vinyl tube.

CAUTION:
Cover the bleeder with waste cloth when loosening it, to prevent brake fluid from being splashed over surrounding parts.

11) Tighten the air bleeder.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

12) Install the operating cylinder.

Tightening torque:
37 N·m (3.8 kgf-m, 27.5 ft-lb)

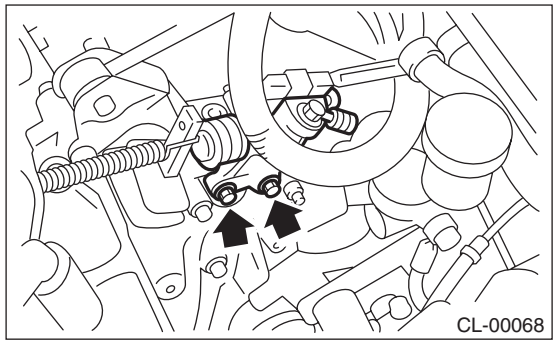

13) After depressing the clutch pedal, make sure that there are no leaks evident in the entire system.
14) After bleeding air from the system, ensure that clutch operates properly.
15) Install the intercooler. <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

10.Clutch Pedal

A: REMOVAL

1. LHD MODEL

• Except 1.6 L MODEL

1) Remove the steering column. <Ref. to PS-26, REMOVAL, Tilt Steering Column.>
2) Disconnect the connectors from stop light and clutch switches.
3) Remove the snap pins which secure lever to push rod and operating rod.
4) Remove the clevis pins which secure lever to push rod and operating rod.

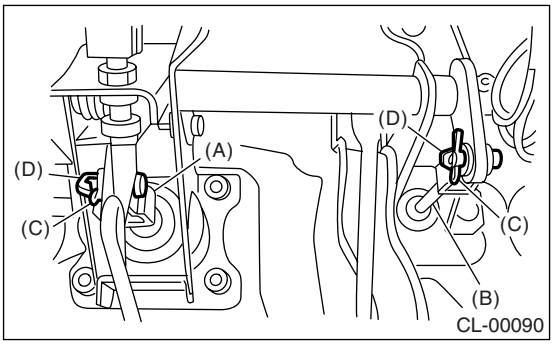

(A) Operating rod
(B) Push rod
(C) Snap pin
(D) Clevis pin

5) Remove the air cleaner case and intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
6) Remove the PHV adjusting nut and lock nut. (Model with hill holder)

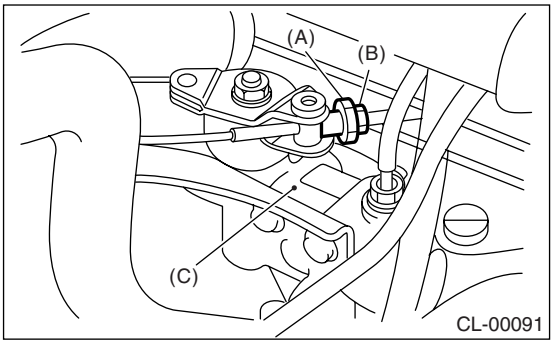

(A) Adjusting nut
(B) Lock nut
(C) PHV

7) Remove the cable clamp, and disconnect the PHV cable from PHV. (Model with hill holder)

CAUTION:
Carefully protect the boot and inner cable from damage when disconnecting the PHV cable.

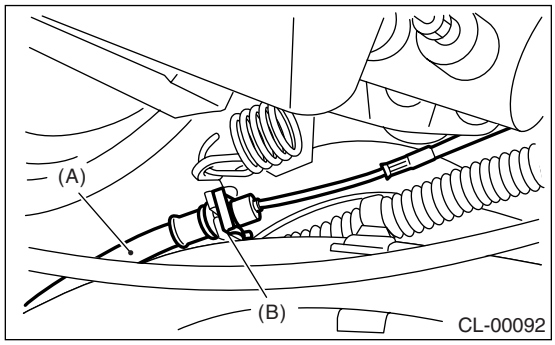

(A) PHV cable
(B) Clamp

8) Remove the nut which secures clutch master cylinder.

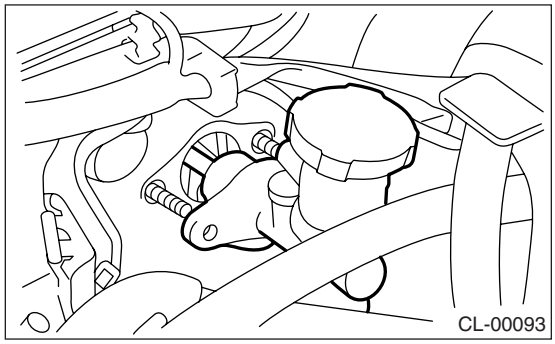

9) Remove the bolts and nuts which secure brake and clutch pedals, and remove the pedal assembly.

• 1.6 L MODEL

1) Disconnect the ground cable from battery.
2) Remove the air cleaner case and intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Disconnect the clutch cable from release lever.
4) Remove the instrument panel lower cover.
5) Disconnect the operating rod of brake pedal.
6) Remove the electrical connectors (for stop light switch, etc.)

7) Remove the bolts and nuts which secure brake and clutch pedals, and remove pedal bracket and clutch cable as a unit.

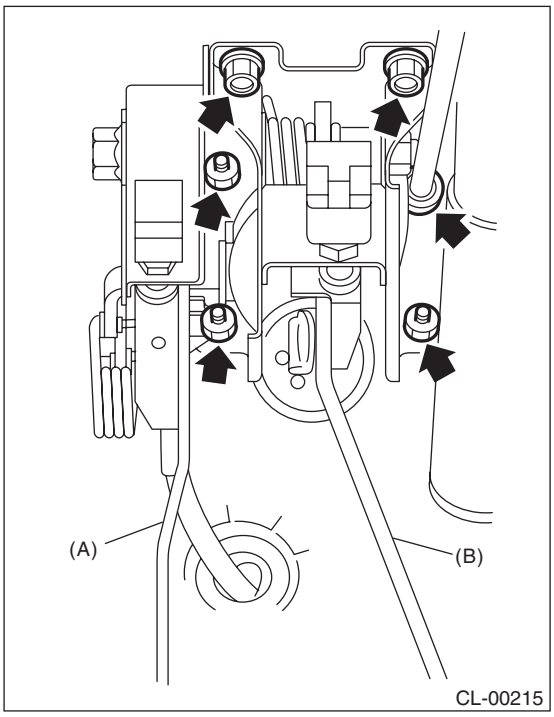

(A) Clutch pedal
(B) Brake pedal

8) Depress the clutch pedal, then disconnect the clutch cable from clutch pedal.

2. RHD MODEL

1) Disconnect the ground cable from battery.
2) Disconnect the connector from clutch. (Model with cruise control)
3) Remove the instrument panel lower cover.
4) Remove the snap pin and clevis pin that join push rod and clutch pedal. (Except 1.6 L model)
5) Remove the master cylinder mounting nuts. (Except 1.6 L model)

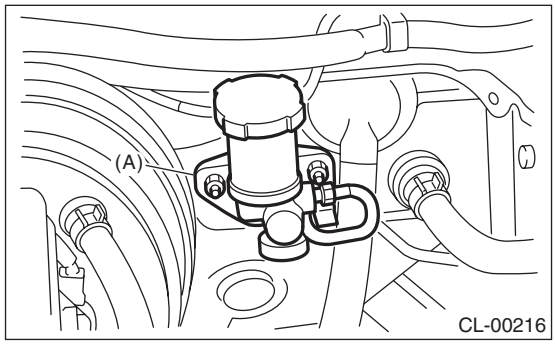

(A) Master cylinder

6) Remove the PHV adjusting nut and lock nut. (Model with hill holder)

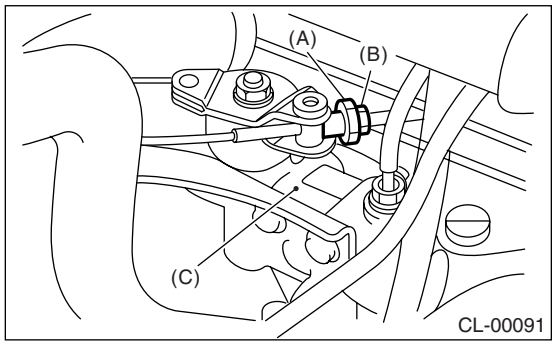

(A) Adjusting nut
(B) Lock nut
(C) PHV

7) Remove the cable clamp and disconnect the PHV cable from PHV. (Model with hill holder)

CAUTION:
Carefully protect the boot and inner cable from damage when disconnecting the PHV cable.

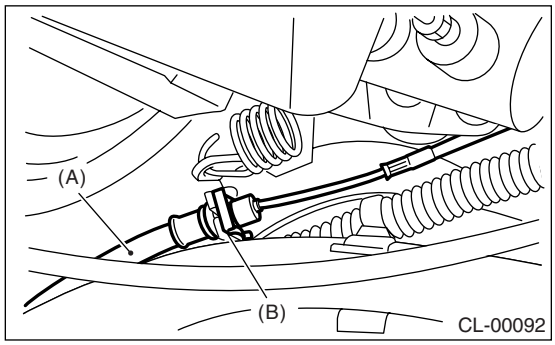

(A) PHV cable
(B) Clamp

8) Disconnect the clutch cable from release lever. (1.6 L model)
9) Remove the clutch pedal and bracket as a unit.

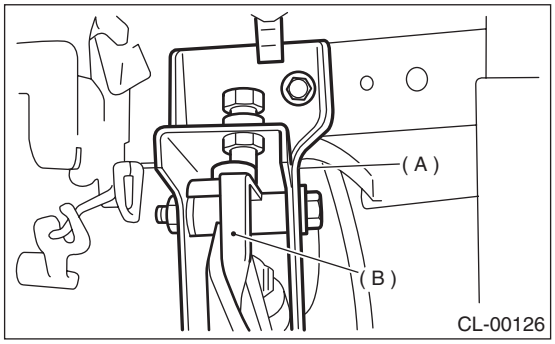

(A) Clutch pedal bracket
(B) Clutch pedal

10) Depress the clutch pedal, then disconnect the clutch cable from clutch pedal. (1.6 L model)

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:
• If the cable clamp is damaged, replace it with a new one.
• Never fail to cover the outer cable end with boot.
• Be careful not to kink the accelerator cable.
• Always use new clevis pins.

2) Adjust the clutch pedal after installation. <Ref. to CL-45, ADJUSTMENT, Clutch Pedal.>

C: DISASSEMBLY

1. LHD MODEL

• Except 1.6 L MODEL

1) Remove the clips, assist spring, rod and bushing.

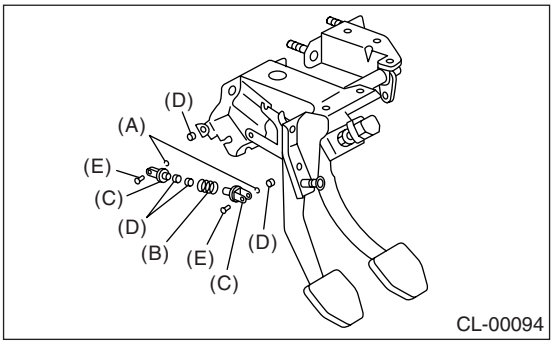

(A) Clip
(B) Assist spring
(C) Assist rod
(D) Bushing
(E) Clevis pin

2) Remove the spring pin and lever.

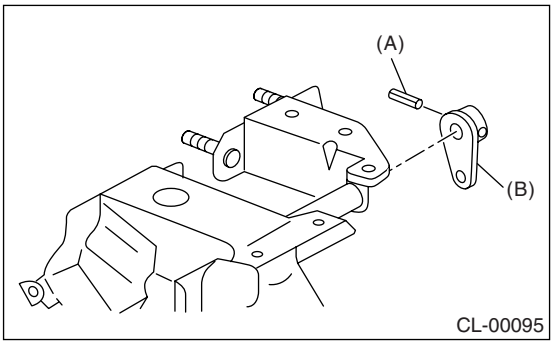

(A) Pin
(B) Lever

3) Remove the clutch pedal and bushings.

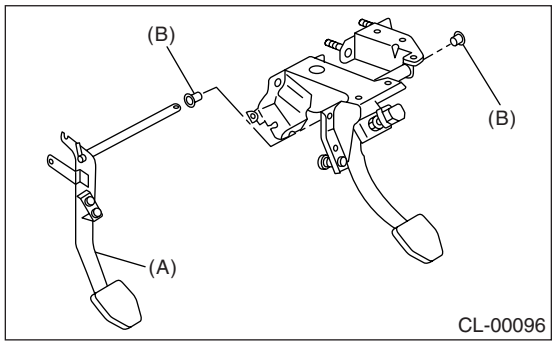

(A) Clutch pedal
(B) Bushing

4) Remove the stopper, clip, O-ring, rod S, and then remove the spring and bushing S.

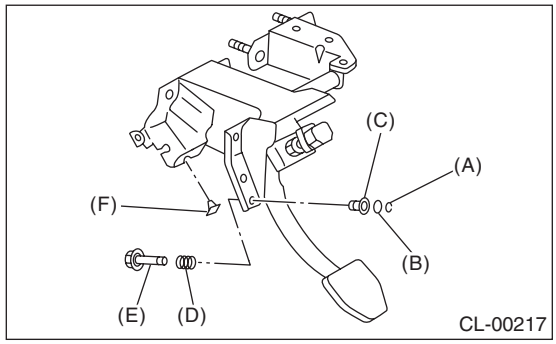

(A) Clip
(B) O-ring
(C) Bushing S
(D) Spring S
(E) Rod S
(F) Stopper

5) Remove the stoppers from clutch pedal.
6) Remove the clutch pedal pad. (Non-turbo model)

• 1.6 L MODEL

1) Remove the clip, and then remove the spring assist and spring.

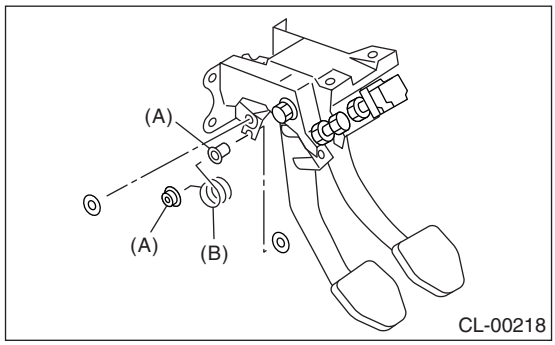

(A) Spring assist
(B) Spring

2) Remove the clutch pedal and brake pedal.

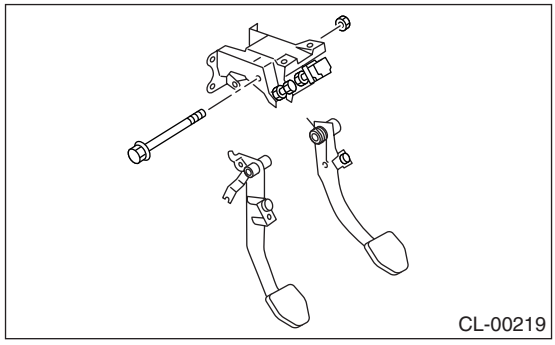

3) Remove the bushing, stopper and clutch pedal pad.

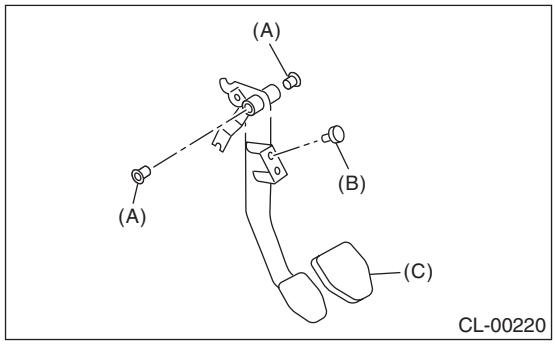

(A) Bushing
(B) Stopper
(C) Clutch pedal pad

4) Remove the adjuster bolt.

2. RHD MODEL

• Except 1.6 L MODEL

1) Remove the clutch switch. (Model with cruise control)

2) Remove the clip, then pull out the clevis pin.

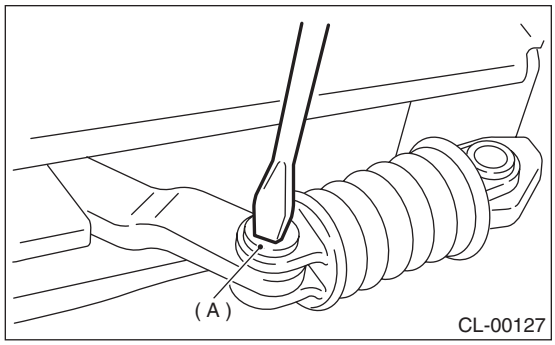

(A) Clevis pin

3) Remove the assist rod, spring and bushing.
4) Remove the clutch pedal from clutch pedal bracket.

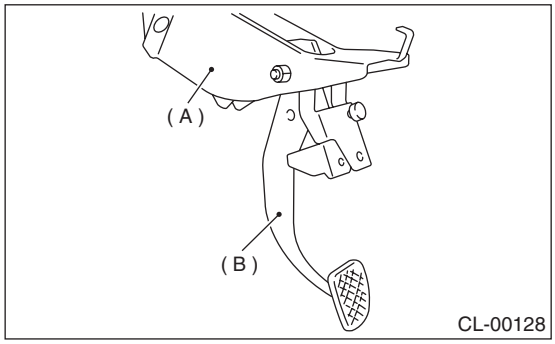

(A) Clutch pedal bracket
(B) Clutch pedal

5) Remove the following parts (B to H) from clutch pedal bracket (A) as shown in the figure.

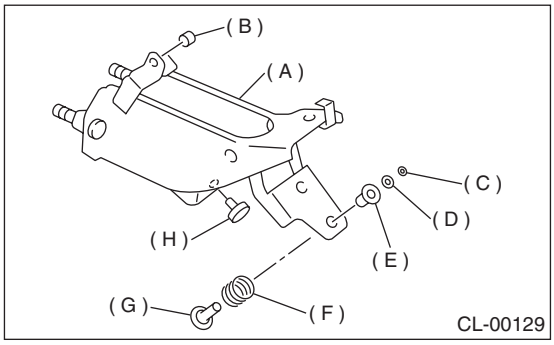

(A) Clutch pedal bracket
(B) Bushing C
(C) Clip
(D) O-ring
(E) Bushing S
(F) Spring S
(G) Rod S
(H) Bushing

6) Remove the spacer, bushing and pedal pad from clutch pedal.

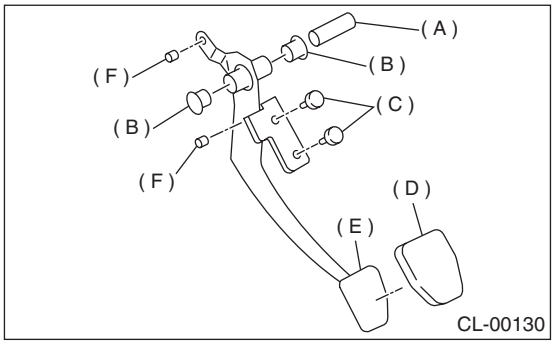

(A) Spacer
(B) Bushing
(C) Bushing
(D) Pedal pad
(E) Clutch pedal
(F) Bushing C

• 1.6 L MODEL

1) Remove the spring and bushing.

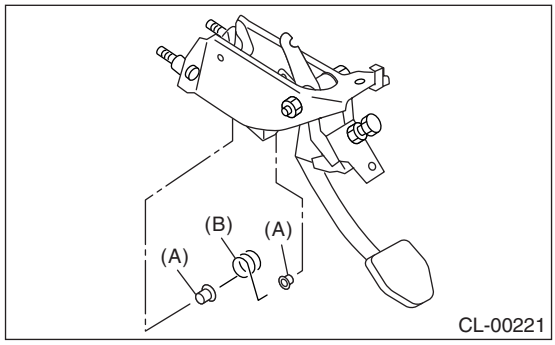

(A) Bushing
(B) Spring

2) Remove the clutch pedal.

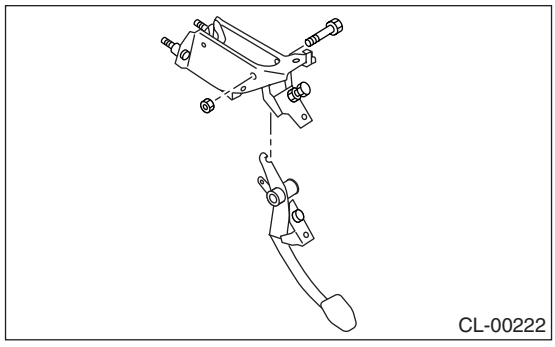

3) Remove the spacer, bushing, stopper and clutch pedal pad.

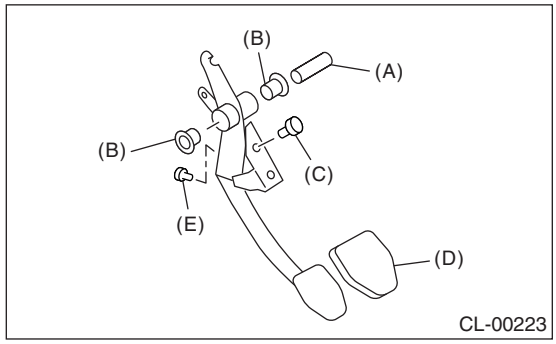

(A) Spacer
(B) Bushing
(C) Stopper
(D) Clutch pedal pad
(E) Stopper

4) Remove the adjust bolt and stopper.

D: ASSEMBLY

1. LHD MODEL

1) Attach the stopper, etc. to pedal bracket temporarily.
2) Clean inside of bores of clutch pedal and brake pedal, apply grease, and set bushings into bores.
3) Align bores of pedal bracket, clutch pedal and brake pedal, attach the brake pedal return spring, assist rods, spring, and bushing. (Except 1.6 L model)

NOTE:
Clean up inside of bushings and apply grease before installing the spacer.

4) Align the bores of pedal bracket, clutch pedal and brake pedal, then attach the brake pedal, bushings, spring and clutch cable. (1.6 L model)
5) Install the hill holder cable to clutch pedal. (Model with hill holder)

2. RHD MODEL

1) Clean and apply grease to the hole of sliding portion between clutch pedal and bushing.
2) Install the pad, stopper, spacer and bushings to clutch pedal.

NOTE:
Clean up inside of bushings and apply grease before installing the spacer.

3) Install the rod S, spring S, bushing S, O-ring, clip, bushing, clutch switch and bushing C to clutch pedal bracket. (Except 1.6 L model)
4) Install the pedal assembly, stopper, adjust rod, clutch cable, bushings and spring to clutch pedal bracket.

5) Install the clutch pedal to pedal bracket.

Tightening torque:
T: 29 N·m (3.0 kgf-m, 21.7 ft-lb)

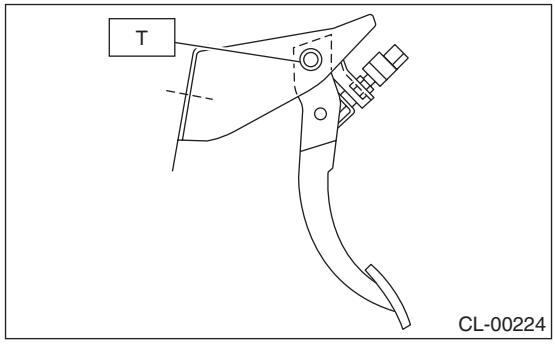

6) Install the assist rod, bushing and assist spring to clutch pedal and pedal bracket.
7) Install the PHV cable to clutch pedal. (Model with hill holder).

E: INSPECTION

1. CLUTCH PEDAL

Move the clutch pedal pads in the lateral direction with a force of approximately 10 N (1 kgf, 2 lb) to ensure pedal play is in specified range.

CAUTION:
If excessive movement is noted, replace the bushings with new ones.

Play of clutch pedal:
Service limit
5.0 mm (0.197 in) or less

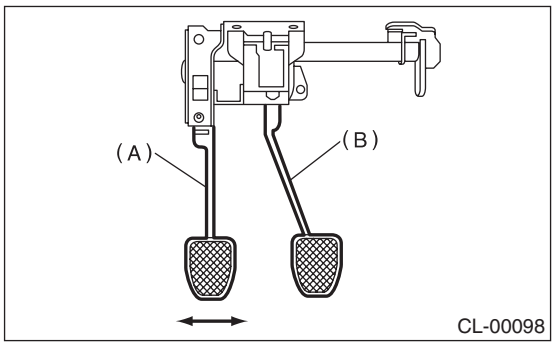

(A) Clutch pedal
(B) Brake pedal

F: ADJUSTMENT

1. CLUTCH PEDAL

• Except 1.6 L MODEL

1) Turn the lock nuts until clutch pedal full stroke length is within specifications.

CAUTION:
Do not attempt to turn the clutch switch to adjust clutch pedal full stroke length.

NOTE:
If lock nuts cannot adjust the clutch pedal full stroke length to specifications, turn the master cylinder push rod to adjust it.

Specified clutch pedal full stroke: A
130 — 135 mm (5.12 — 5.31 in)

Tightening torque (Clutch switch lock nut):
T: 8 N·m (0.8 kgf-m, 5.8 ft-lb)

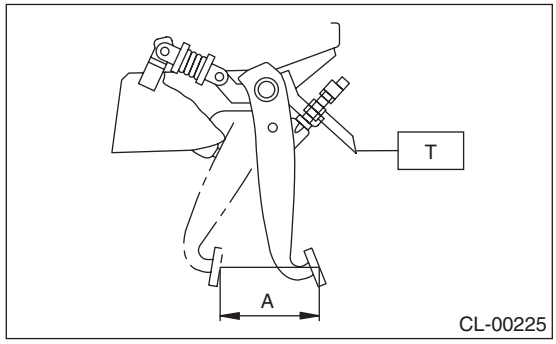

2) Turn the master cylinder push rod so that clevis pin moves to the left and then to the right. Clevis pin must move without resistance while it is rattling.

Tightening torque (Push rod lock nut):
T: 10 N·m (1.0 kgf-m, 7 ft-lb)

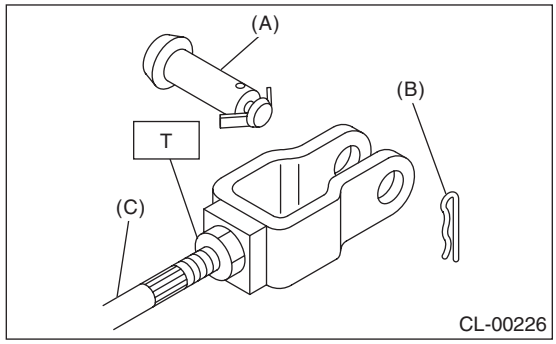

(A) Clevis pin
(B) Snap pin
(C) Push rod

3) Depress and release the clutch pedal two to three times to ensure that clutch pedal and release fork operates smoothly. If the clutch pedal and release fork do not operate smoothly, bleed air from the clutch hydraulic system. <Ref. to CL-38, Clutch Fluid Air Bleeding.>
4) Measure the clutch pedal full stroke length again to ensure that it is within specifications. If it is not, repeat adjustment procedures again from the beginning.

Specified clutch pedal full stroke:
130 — 135 mm (5.12 — 5.31 in)

5) Move the clevis pin to the left and then to the right. It should move without resistance while it is rattling. If resistance is felt, repeat adjustment procedures again from the beginning.
6) Push the release lever until operating cylinder push rod retracts. Ensure that clutch fluid level in reservoir tank increases. If the clutch fluid level increases, hydraulic the clutch is properly adjusted; if fluid level does not increase or push rod does not retract, replace the master cylinder with a new one.<Ref. to CL-31, Master Cylinder.>

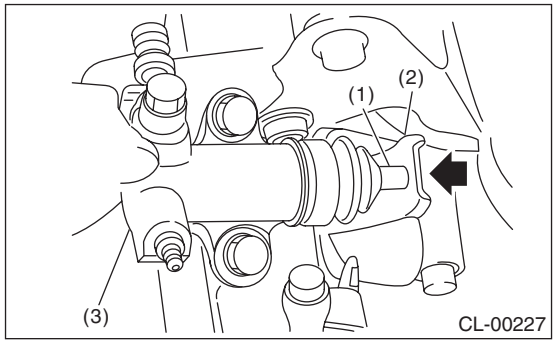

(1) Push rod
(2) Release lever
(3) Operating cylinder

7) Push the release lever until operating cylinder push rod retracts. Check that the clutch fluid level in reservoir tank increases.

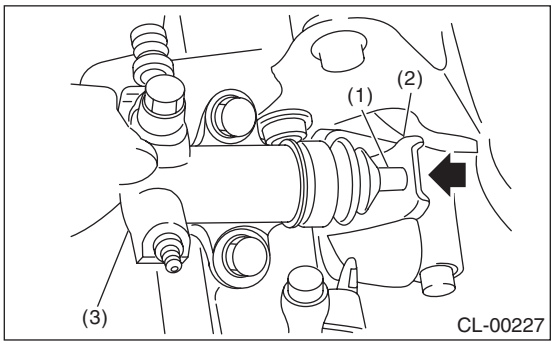

(1) Push rod
(2) Release lever
(3) Operating cylinder

8) If the clutch fluid level increases, hydraulic clutch play is correct.
9) If the clutch fluid level does not increase or push rod does not retract, clutch pedal must be readjusted.
10) Check the fluid level on the outside of the reservoir tank. If the level is below “MIN”, add clutch fluid to bring it up to “MAX”.

Recommended clutch fluid:
FMVSS No. 116, fresh DOT 3 or DOT 4 brake fluid

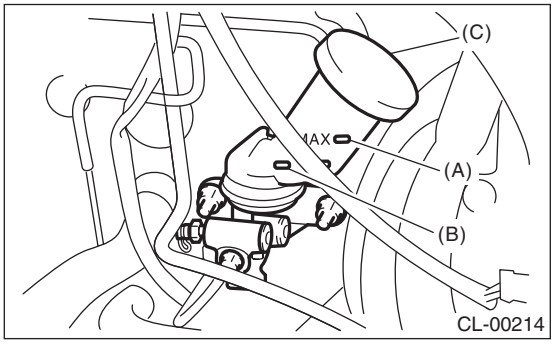

(A) Max. level
(B) Min. level
(C) Reservoir tank

• 1.6 L MODEL

1) Disconnect the ground cable from battery.
2) Remove the air cleaner case and intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Remove the release lever return spring from lever.
4) Loosen the lock nut.
5) Adjust the spherical nut of the lever end so that the play and full stroke is within the specified value, (center of spherical nut).

CAUTION:
Take care not to twist the cable during adjustment.
Play: 3 — 4 mm (0.12 — 0.16 in)
Full stroke: 24 — 26 mm (0.94 — 1.02 in)

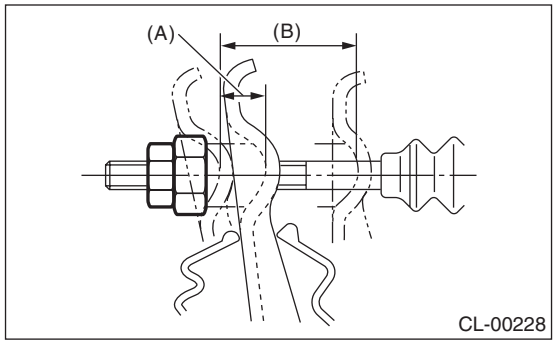

(A) Play
(B) Full stroke

6) Upon completion of adjustment, securely lock the spherical nut with lock nut.

Tightening torque:
5.9 N·m (0.60 kgf-m, 4.3 ft-lb)

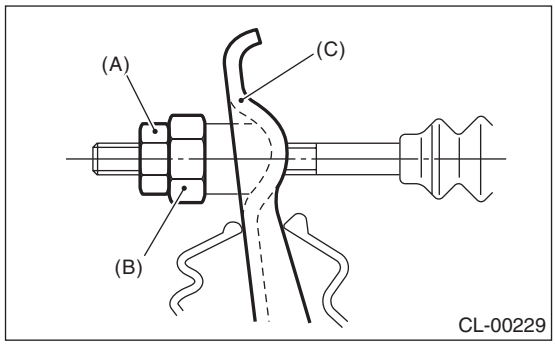

(A) Lock nut
(B) Spherical nut
(C) Clutch release lever

7) Install the return spring on lever.

NOTE:
Hook the long hook side of the return spring with the lever.

8) Depress the clutch pedal to assure there is no abnormality in the clutch system.
9) Install the air cleaner case and intake duct. <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>

11.Clutch Cable

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the air cleaner case and intake duct. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
3) Disconnect the clutch cable from release lever.
4) Depress the clutch pedal to the floor.
5) Remove the clutch cable clamp from pedal bracket.

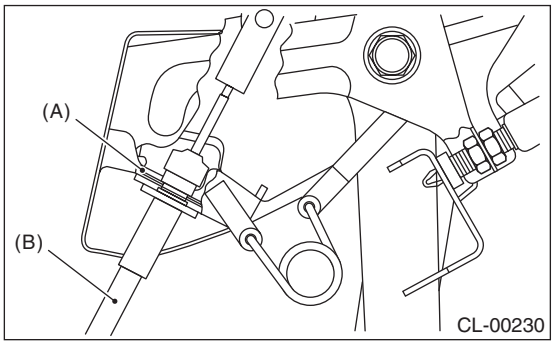

(A) Clamp
(B) Clutch cable

6) Remove the clutch cable from body.

B: INSTALLATION

1) Clean the clutch pedal fitting hole, and apply grease. Connect the clutch cable to body.
2) Fit the clutch pedal to pedal bolt, and connect the clutch cable to bracket with clamp.
3) Connect the clutch cable end to pedal end.
4) Connect the clutch cable to release lever.
5) Install the grommet to toe board.
6) Adjust the cable after installation. <Ref. to CL-45, ADJUSTMENT, Clutch Pedal.>
7) Install the air cleaner case and intake duct. <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>

C: INSPECTION

Check the removed cable and replace if damaged, rusty, or malfunctioning.
1) Check for smooth operation of the cable.
2) Check the inner cable for damage and rust.
3) Check the outer cable for damage, bends, and cracks.
4) Check the boot for damage, cracks, and deterioration.

12.Clutch Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the connector from clutch switch.
3) Remove the clutch switch.

B: INSTALLATION

1) Move the clevis pin of the push rod right and left and hold where it moves smoothly, then measure stroke of clutch pedal.

Specified clutch pedal full stroke: A
130 — 135 mm (5.12 — 5.31 in)

Tightening torque:
T: 8 N·m (0.8 kgf-m, 5.8 ft-lb)

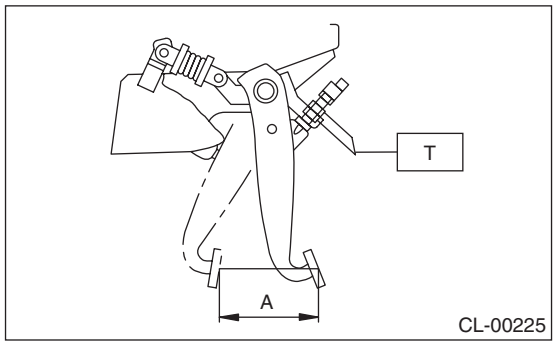

2) If the clutch pedal stroke is out of specification, adjust the stroke. <Ref. to CL-45, ADJUSTMENT, Clutch Pedal.>
3) Connect clutch switch connector.

C: INSPECTION

1) If the clutch switch does not operate properly (or if it does not stop at the specified position), replace with a new one.

Specified position: L
$2^{+1.5}_{0}$ mm ($0.079^{+0.059}_{0}$ in)

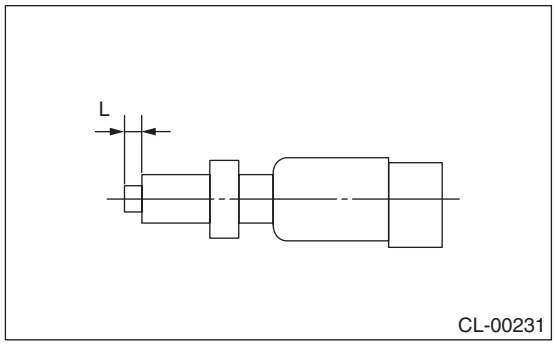

2) Check the clutch switch continuity. If continuity is not as specified, replace the switch.
(1) Disconnect the clutch switch connector.
(2) Measure the resistance between 1 and 2 of switch terminal.

Terminals/Specified resistance
When clutch pedal depressed:
1 — 2/Less than 1 Ω

Terminals/Specified resistance
When clutch pedal not depressed:
1 — 2/More than 1 MΩ

Clutch switch

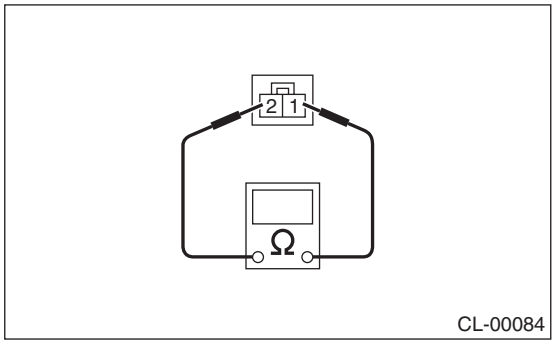

13.General Diagnostic Table

A: INSPECTION

1. CLUTCH

Symptom	Possible cause	Corrective
1. Clutch slippage. It is hard to perceive clutch slippage in the early stage, but pay attention to the following symptoms • Engine speed up when shifting. • High speed driving is impossible; especially rapid acceleration impossible and vehicle speed does not increase in proportion to an increase in engine speed. • Power falls, particularly when ascending a slope, and there is a smell of burning of the clutch facing. • Method of testing: Put the vehicle in stationary condition with parking brake fully applied. Disengage the clutch and shift the transmission gear into the first. Gradually allow the clutch to engage while gradually increasing the engine speed. The clutch function is satisfactory if the engine stalls. However, the clutch is slipping if the vehicle does not start off and the engine does not stall.	(a) Clutch facing smeared by oil	Replace.
	(b) Worn clutch facing	Replace.
	(c) Deteriorated diaphragm spring	Replace.
	(d) Distorted pressure plate or flywheel	Correct or replace.
	(e) Defective release bearing holder	Correct or replace.
2. Clutch drags. As a symptom of this trouble, a harsh scratching noise develops and control becomes quite difficult when shifting gears. The symptom becomes more apparent when shifting into the first gear. However, because much trouble of this sort is due to defective synchronization mechanism, carry out the test as described after. • Method of testing: <Ref. to CL-50, CLUTCH, INSPECTION, General Diagnostic Table.> It may be judged as insufficient disengagement of clutch if any noise occurs during this test.	(a) Worn or rusty clutch disc hub spline	Replace the clutch disc.
	(b) Excessive deflection of clutch disc facing	Correct or replace.
	(c) Seized crankshaft pilot needle bearing	Replace.
	(d) Cracked clutch disc facing	Replace.
	(e) Stuck clutch disc (smeared by oil or water)	Replace.
3. Clutch chatters. Clutch chattering is an unpleasant vibration to the whole body when the vehicle is just started with clutch partially engaged.	(a) Adhesion of oil on the facing	Replace the clutch disc.
	(b) Weak or broken torsion spring	Replace the clutch disc.
	(c) Defective facing contact or excessive disc wear	Replace the defective clutch disc.
	(d) Warped pressure plate or flywheel	Correct or replace.
	(e) Loose disc rivets	Replace the clutch disc.
	(f) Loose engine mounting	Retighten or replace the mounting.
	(g) Improper adjustment of pitching stopper	Adjustment.
4. Noisy clutch Examine whether the noise is generated when the clutch is disengaged, engaged, or partially engaged.	(a) Broken, worn or unlubricated release bearing	Replace the release bearing.
	(b) Insufficient lubrication of pilot bearing	Apply grease.
	(c) Loose clutch disc hub	Replace the clutch disc.
	(d) Loose torsion spring retainer	Replace the clutch disc.
	(e) Deteriorated or broken torsion spring	Replace the clutch disc.

Symptom	Possible cause	Corrective
5. Clutch grabs. When starting the vehicle with the clutch partially engaged, the clutch engages suddenly and the vehicle jumps instead of making a smooth start.	(a) Grease or oil on facing	Replace the clutch disc.
	(b) Deteriorated cushioning spring	Replace the clutch disc.
	(c) Worn or rusted spline of clutch disc or main shaft	Take off rust, apply grease or replace the clutch disc or main shaft.
	(d) Deteriorated or broken torsion spring	Replace the clutch disc.
	(e) Loose engine mounting	Retighten or replace the mounting.
	(f) Deteriorated diaphragm spring	Replace.

2. CLUTCH PEDAL

Trouble	Corrective action
Insufficient pedal play	Adjust pedal play.
Clutch pedal free play insufficient	Adjust pedal free play.
Excessively worn and damaged pedal shaft and/or bushing	Replace the bushing and/or shaft with a new one.

3. DIAGNOSTIC DIAGRAM OF CLUTCH DRAG

	Step	Check	Yes	No
1	**CHECK GEAR NOISE.** 1)Start the engine. 2)Disengage the clutch and shift quickly from neutral to reverse in idling condition.	Is there any abnormal noise from the transmission gear?	Go to step **2.**	Clutch is normal.
2	**CHECK GEAR NOISE.** Disengage the clutch at idle and shift from neutral to reverse within 0.5 — 1.0 seconds.	Is there any abnormal noise from the transmission gear?	Go to step **3.**	Defective transmission or excessive clutch drag torque. Inspect the pilot bearing, clutch disc, transmission and clutch disc hub spline.
3	**CHECK GEAR NOISE.** 1)Disengage the clutch at idle and shift from neutral to reverse within 0.5 — 1.0 seconds. 2)With the clutch disengaged, shift from N to R, R to N several times.	Is there any abnormal noise from the transmission gear?	Defect in clutch disengaging. Inspect the clutch disc, clutch cover, clutch release, and clutch pedal free play.	Clutch and flywheel seizure. Inspect the clutch disc, spline of clutch disc hub.

CHASSIS SECTION

FRONT SUSPENSION	FS
REAR SUSPENSION	RS
WHEEL AND TIRE SYSTEM	WT
DIFFERENTIALS	DI
TRANSFER CASE	TC
DRIVE SHAFT SYSTEM	DS
ABS	ABS
ABS (DIAGNOSTICS)	ABS
BRAKE	BR
PARKING BRAKE	PB
POWER ASSISTED SYSTEM (POWER STEERING)	PS

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD. G1860GE5

FRONT SUSPENSION

FS

		Page
1.	General Description	2
2.	Wheel Alignment	7
3.	Front Transverse Link	16
4.	Front Ball Joint	19
5.	Front Strut	20
6.	Front Stabilizer	24
7.	Front Crossmember	25
8.	Sub Frame	26
9.	Front Support Arm	28
10.	General Diagnostic Table	29

1. General Description

A: SPECIFICATIONS

	Model	Sedan		Wagon		OUTBACK
		Non-turbo	Turbo	Non-turbo	Turbo	
Front	Camber (tolerance: ±0°45′)	−0°15′	−0°25′	−0°10′	−0°20′	−0°05′
	Caster (common difference: ±0°45′)	3°25′	3°35′	3°25′	3°35′	3°25′
	Toe-in	0±3 mm (0±0.12 in) Each toe angle: ±0°07′30″				
	Kingpin angle (tolerance: ±0°45′)	14°20′	14°35′	13°30′	13°45′	13°20′
	Wheel arch height [tolerance: ±12 mm (±0.47 in)]	406 mm (15.98 in)	396 mm (15.59 in)	397 mm (15.28 in)	387 mm (15.24 in)	402 mm (15.83 in)
	Diameter of stabilizer	20 mm (0.79 in)	20 mm (0.79 in)	20 mm (0.79 in)	20 mm (0.79 in)	20 mm (0.79 in)
Rear	Camber (tolerance: ±0°45′)	−1°25′	−1°30′	−1°15′	−1°20′	−1°10′
	Toe-in	0±3 mm (0±0.12 in) Each toe angle: ±0°09′				
	Thrust angle	0°±30′				
	Wheel arch height [tolerance: ±12 mm (±0.47 in)]	381 mm (15.0 in)	376 mm (14.80 in)	381 mm (15.0 in)	376 mm (14.80 in)	386 mm (15.20 in)
	Diameter of stabilizer	17 mm (0.67 in)	20 mm (0.79 in)	—	17 mm (0.67 in)	—

NOTE:
• Front and rear toe-ins and front camber can be adjusted. If toe-in or camber tolerance exceeds specifications, adjust toe-in and camber to the middle value of specification.
• The other items indicated in the specification table cannot be adjusted. If the other items exceeds specifications, check suspension parts and connections for deformities; replace with new ones as required.

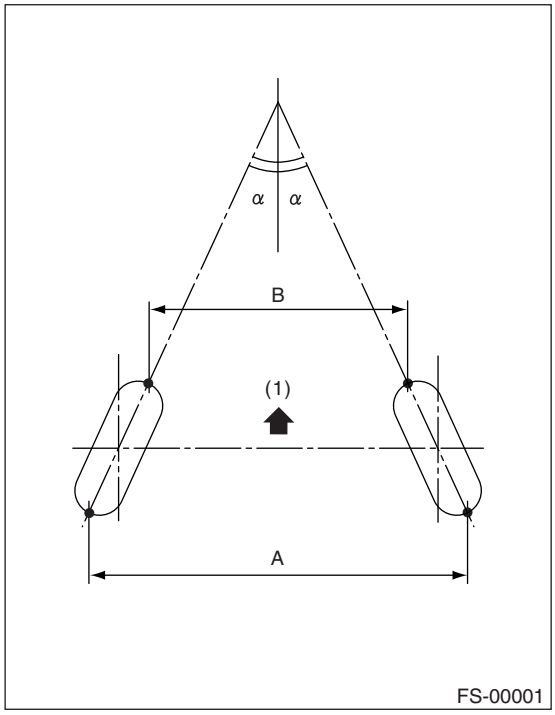

(1) Front
A − B = Positive: Toe-in, Negative: Toe-out
α = Each toe angle

B: COMPONENT

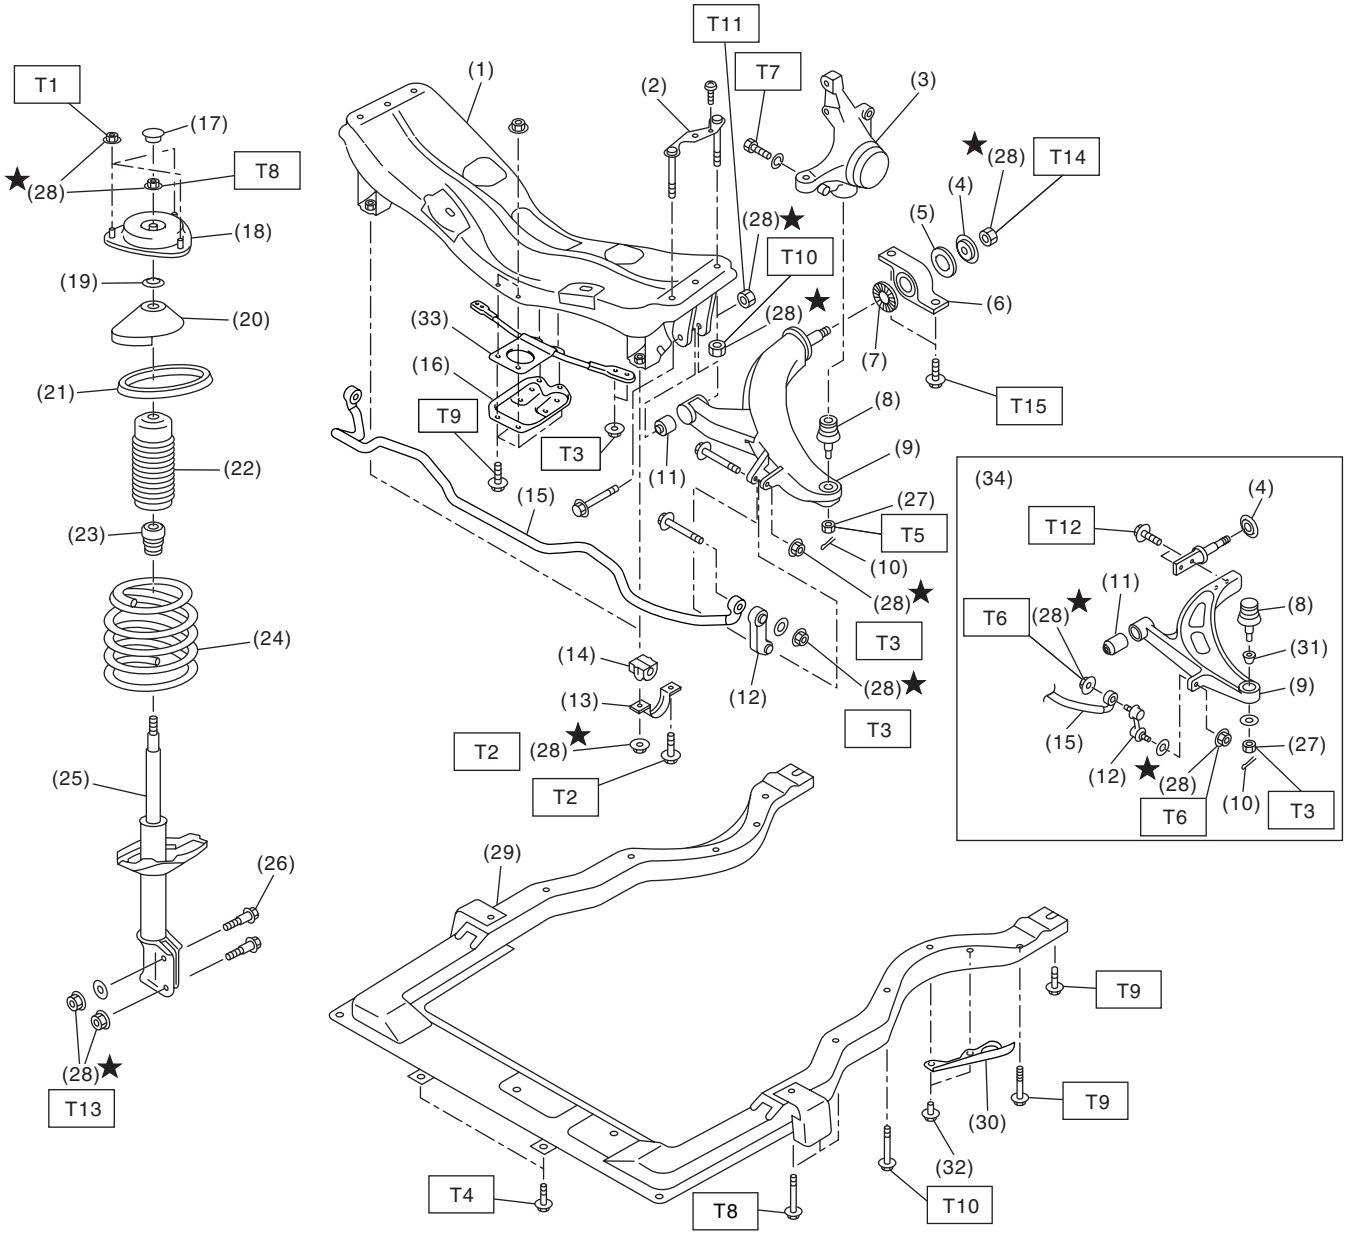

FS-00093

(1) Front crossmember
(2) Bolt ASSY
(3) Housing
(4) Washer
(5) Stopper rubber (Rear)
(6) Rear bushing
(7) Stopper rubber (Front)
(8) Ball joint
(9) Transverse link
(10) Cotter pin
(11) Front bushing
(12) Stabilizer link
(13) Clamp
(14) Bushing
(15) Stabilizer
(16) Jack-up plate
(17) Dust seal
(18) Strut mount
(19) Spacer
(20) Upper spring seat
(21) Rubber seat
(22) Dust cover
(23) Helper
(24) Coil spring
(25) Damper strut
(26) Adjusting bolt
(27) Castle nut
(28) Self-locking nut
(29) Sub frame
(30) Cover
(31) Boss
(32) Clip
(33) Front support arm
(34) Sedan turbo model

Tightening torque: N·m (kgf-m, ft-lb)
T1: 20 (2.0, 14.5)
T2: 25 (2.5, 18.1)
T3: 30 (3.1, 22)
T4: 34 (3.5, 25)
T5: 40 (4.1, 30)
T6: 45 (4.6, 33)
T7: 50 (5.1, 37)
T8: 55 (5.6, 41)
T9: 70 (7.1, 52)
T10: 105 (10.7, 77)
T11: 125 (12.7, 92)
T12: 155 (15.8, 114)
T13: 175 (17.8, 129)
T14: 190 (19.4, 140)
T15: 250 (25.5, 184)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
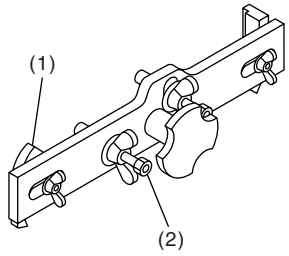 ST-927380002	927380002	ADAPTER	Used as an adapter for camber & caster gauge when measuring camber and caster. (1) 28199AC000 PLATE (2) 28199AC010 BOLT
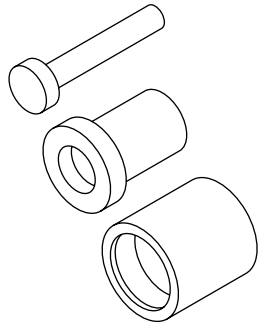 ST-927680000	927680000	INSTALLER & REMOVER SET	Used for replacing transverse link bushing.
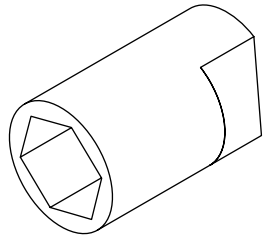 ST-927760000	927760000	STRUT MOUNT SOCKET	Used for disassembling and assembling strut and shock mount.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Alignment gauge	Used for wheel alignment measurement.
Turning radius gauge	Used for wheel alignment measurement.
Toe-in gauge	Used for toe-in measurement.
Dial gauge	Used for damper strut measurement.
Coil spring compressor	Used for strut disassembly/assembly.

2. Wheel Alignment

A: INSPECTION

Check the following items before taking wheel alignment measurement.
Check items before taking wheel alignment measurement:

- tire air pressure
- unbalanced right and left tire wear, size difference
- tire run-out
- ball joint excessive play, wear
- tie rod end excessive play, wear
- wheel bearing excessive play
- right and left wheel base imbalance
- steering link part deformed, excessive play
- suspension part deformed, excessive play

Check, adjust and/or measure the wheel alignment in accordance with procedures indicated in the figure:

Wheel arch height (Front and rear) <Ref. to FS-8, WHEEL ARCH HEIGHT, INSPECTION, Wheel Alignment.>
↓
Camber (Front and rear) <Ref. to FS-9, CAMBER, INSPECTION, Wheel Alignment.>
↓
Caster (Front) <Ref. to FS-10, CASTER, INSPECTION, Wheel Alignment.>
↓
Steering angle <Ref. to FS-11, STEERING ANGLE, INSPECTION, Wheel Alignment.>
↓
Front wheel toe-in <Ref. to FS-11, FRONT WHEEL TOE-IN, INSPECTION, Wheel Alignment.>
↓
Rear wheel toe-in <Ref. to FS-12, REAR WHEEL TOE-IN, INSPECTION, Wheel Alignment.>
↓
Thrust angle <Ref. to FS-14, THRUST ANGLE, INSPECTION, Wheel Alignment.>

1. WHEEL ARCH HEIGHT

1) Set the vehicle on a level surface.
2) Set the vehicle to “curb weight” conditions. (Empty luggage compartment, install spare tire, jack, service tools, and top up fuel tank.)
3) Set the steering wheel in a straight line, then remove the vehicle straight ahead more than 5 m (16 ft) to settle the suspension.
4) Suspend the thread from wheel arch (point “A” in figure below) to determine a point directly above center of wheel.
5) Measure the distance between measuring point “A” and center of wheel.

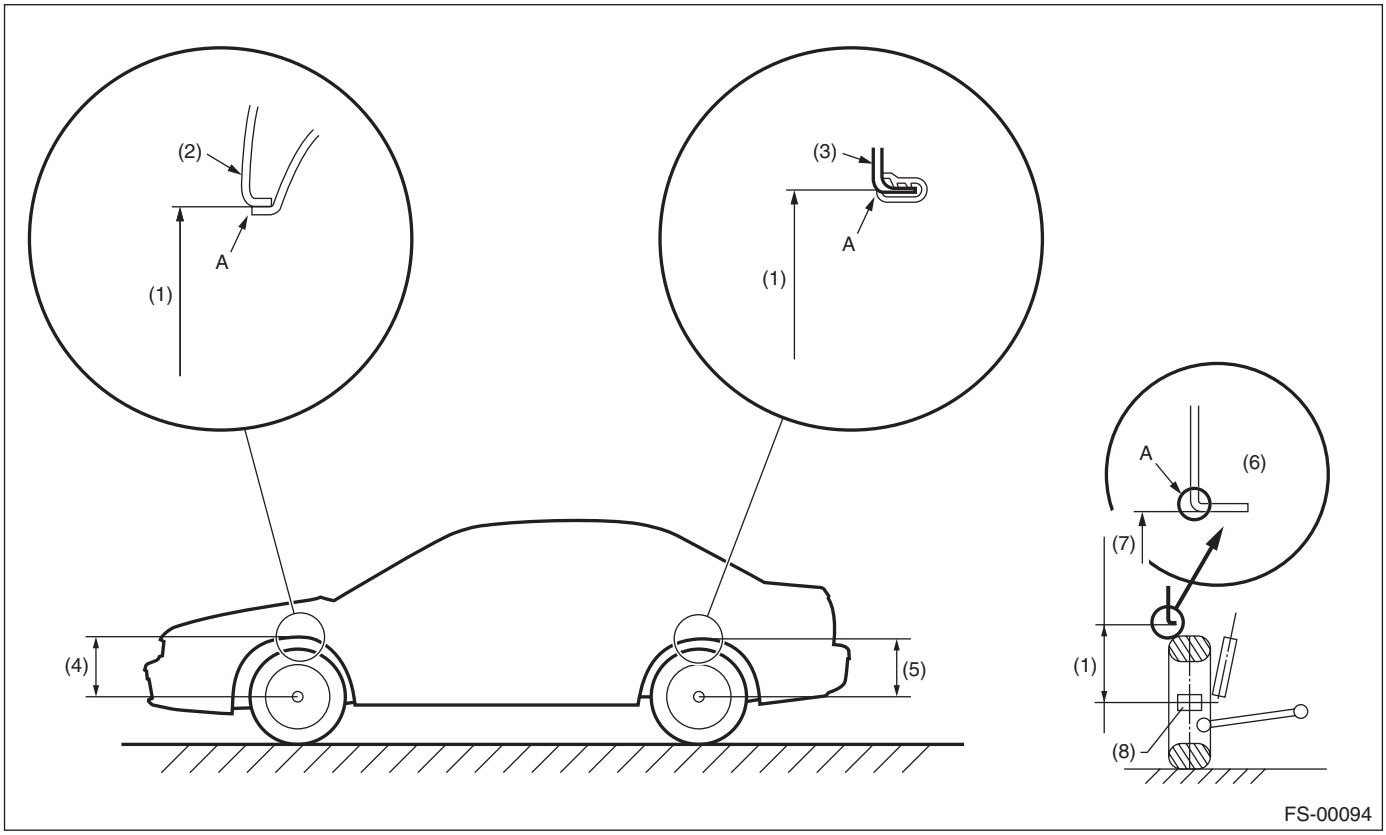

(1) Wheel arch height
(2) Front fender
(3) Rear quarter
(4) Front wheel arch height
(5) Rear wheel arch height
(6) Flange bend line
(7) Measuring point
(8) End of spindle

Model		Specified wheel arch height	
		Non-turbo	Turbo
Sedan	Front	406±12 mm (15.98±0.47 in)	396±12 mm (15.59±0.47 in)
	Rear	381±12 mm (15.0±0.47 in)	376±12 mm (14.80±0.47 in)
Wagon	Front	397±12 mm (15.63±0.47 in)	387±12 mm (15.24±0.47 in)
	Rear	381±12 mm (15.0±0.47 in)	376±12 mm (14.80±0.47 in)
OUTBACK	Front	402±12 mm (15.83±0.47 in)	—
	Rear	386±12 mm (15.20±0.47 in)	—

2. CAMBER

• Inspection

1) Place the front wheel on turning radius gauge. Make sure ground contacting surfaces of front and rear wheels are set at the same height.
2) Set the ST into the center of wheel, and then install the wheel alignment gauge.
ST 927380002 ADAPTER

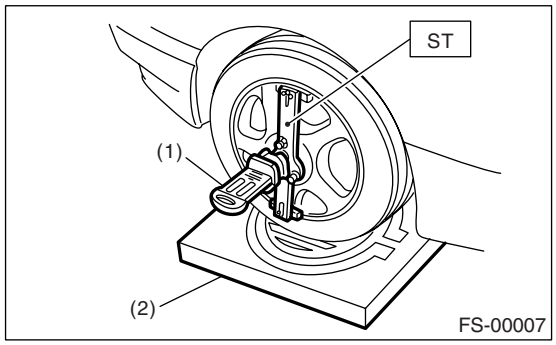

(1) Alignment gauge
(2) Turning radius gauge

3) Follow the wheel alignment gauge operation manual to measure camber angle.

NOTE:
Refer to the “SPECIFICATIONS” for camber values.
Front: <Ref. to FS-2, SPECIFICATIONS, General Description.>
Rear: <Ref. to RS-2, SPECIFICATIONS, General Description.>

• Front Camber Adjustment

1) Loosen the two self-locking nuts located at lower front portion of strut.

NOTE:
When adjusting bolt needs to be loosened or tightened, hold its head with a wrench and turn self-locking nut.

2) Turn the camber adjusting bolt so that camber is set at the specification.

NOTE:
Moving the adjusting bolt by one scale graduation changes camber by approx. 0°10′.

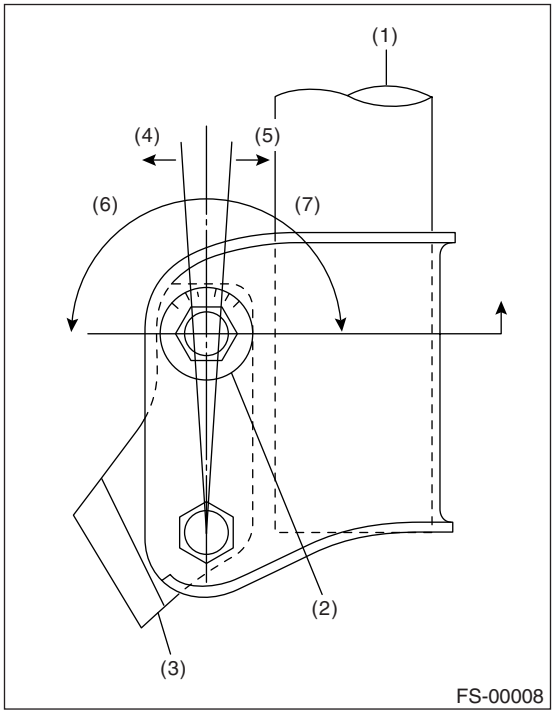

(1) Strut
(2) Adjusting bolt
(3) Housing
(4) Outer
(5) Inner
(6) Camber is increased.
(7) Camber is decreased.

Camber is increased.	
Rotate camber adjusting bolt LH counterclockwise.	Rotate camber adjusting bolt RH clockwise.
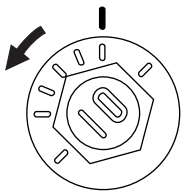 FS-00009	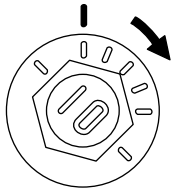 FS-00010

Camber is decreased.	
Rotate camber adjusting bolt LH clockwise.	Rotate camber adjusting bolt RH counterclockwise.
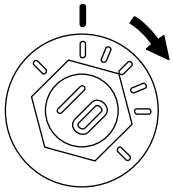 FS-00010	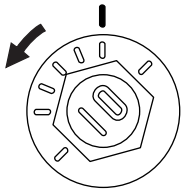 FS-00009

3) Tighten the new two self-locking nuts.

Tightening torque:
175 N·m (17.8 kgf-m, 129 ft-lb)

3. CASTER

• Inspection

1) Place the front wheel on turning radius gauge. Make sure ground contacting surfaces of front and rear wheels are set at the same height.
2) Set the ST into center of wheel, and then install the wheel alignment gauge.

ST 927380002 ADAPTER

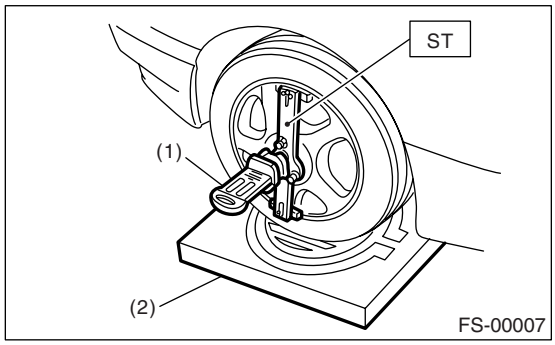

(1) Alignment gauge
(2) Turning radius gauge

3) Follow the wheel alignment gauge operation manual to measure caster angle.

NOTE:
Refer to the “SPECIFICATIONS” for caster values. <Ref. to FS-2, SPECIFICATIONS, General Description.>

4. STEERING ANGLE

• Inspection

1) Place the vehicle on a turning radius gauge.
2) While depressing the brake pedal, turn the steering wheel fully to the right and left. With the steering wheel held at each fully turned position, measure both the inner and outer wheel steering angle.

Steering angle:

Model	*Turbo and OUTBACK*	*Others*
Inner wheel	*34.5°±1.5°*	*37.3°±1.5°*
Outer wheel	*30.3°±1.5°*	*32.4°±1.5°*

• Adjustment

1) Turn the tie-rod to adjust steering angle of both inner and outer wheels.
2) Check the toe-in.

NOTE:
Correct the boot if it is twisted.

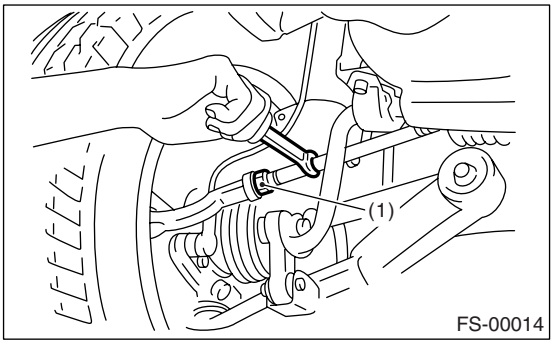

(1) Lock nut

5. FRONT WHEEL TOE-IN

• Inspection

Toe-in:
0±3 mm (0±0.12 in)

1) Set the toe-in gauge to rear sides of right and left front tires at height corresponding to center of spindle.
2) Mark each right and left tires at height corresponding to center of spindle and measure the distance “A” between marks.
3) Move the vehicle forward to rotate wheels 180°.

NOTE:
Whenever rotating the wheels, drive the vehicle forward.

4) Measure the distance “B” between right and left marks. Toe-in can then be obtained by the following equation:

A − B = Toe-in

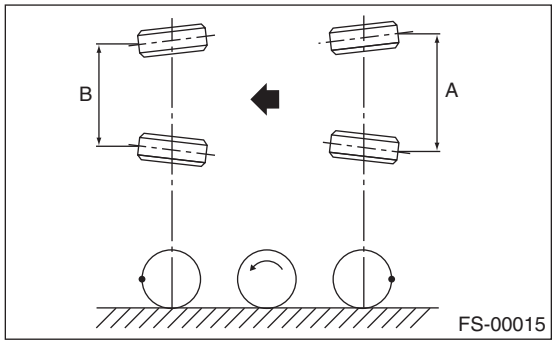

• Adjustment

1) Make sure that the right and left steering angles are within specified value.
2) Loosen the right and left side steering tie-rods lock nuts.
3) Turn the right and left tie rods equal amounts until the toe-in is at the specification.
Both the right and left tie-rods are right-hand threaded. To increase toe-in, turn both tie-rods clockwise equal amounts (as viewed from inside of the vehicle).

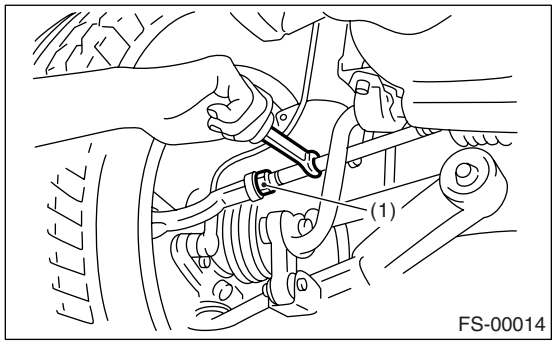

(1) Lock nut

4) Tighten the tie-rod lock nut.

Tightening torque:
83 N·m (8.5 kgf-m, 61.5 ft-lb)

NOTE:
Correct the tie-rod boot, if it is twisted.

6. REAR WHEEL TOE-IN

• Inspection

Toe-in:
0±3 mm (0±0.12 in)

For rear toe-in inspection procedure, refer to FRONT WHEEL TOE-IN procedure.
<Ref. to FS-11, FRONT WHEEL TOE-IN, INSPECTION, Wheel Alignment.>

• Adjustment

1) Loosen the self-locking nut on inner side of link rear.

NOTE:
When loosening or tightening the adjusting bolt, hold the bolt head and turn self-locking nut.

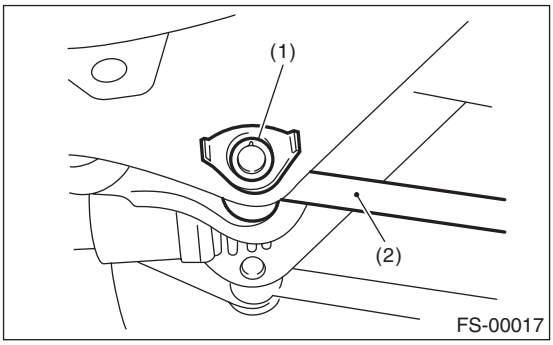

(1) Adjusting bolt
(2) Link rear

2) Turn the adjusting bolt head until toe-in is at the specification.

NOTE:
When the right and left wheels are adjusted for toe-in at the same time, the movement of one scale graduation changes toe-in by approx. 1.5 mm (0.6 in).

Toe-in is increased.	
Rotate camber adjusting bolt LH clockwise.	Rotate camber adjusting bolt RH counterclockwise.
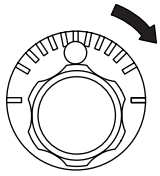 FS-00018	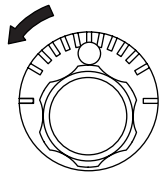 FS-00019

Toe-in is decreased.	
Rotate camber adjusting bolt LH counterclockwise.	Rotate camber adjusting bolt RH clockwise.
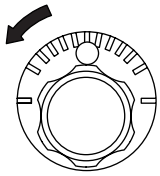 FS-00019	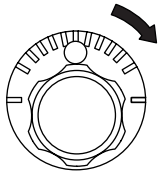 FS-00018

3) Tighten a new self-locking nut.

Tightening torque:
100 N·m (10.2 kgf-m, 74 ft-lb)

7. THRUST ANGLE

• Inspection

1) Position the vehicle on a level surface.
2) Move the vehicle 3 to 4 m (10 to 13 ft) directly forward.
3) Determine the center lines of loci of both front and rear axles.
4) Measure the distance “L” between center lines of loci of the axles.

Thrust angle:
Less than 30′ when “L” is less than 22 mm (0.9 in).

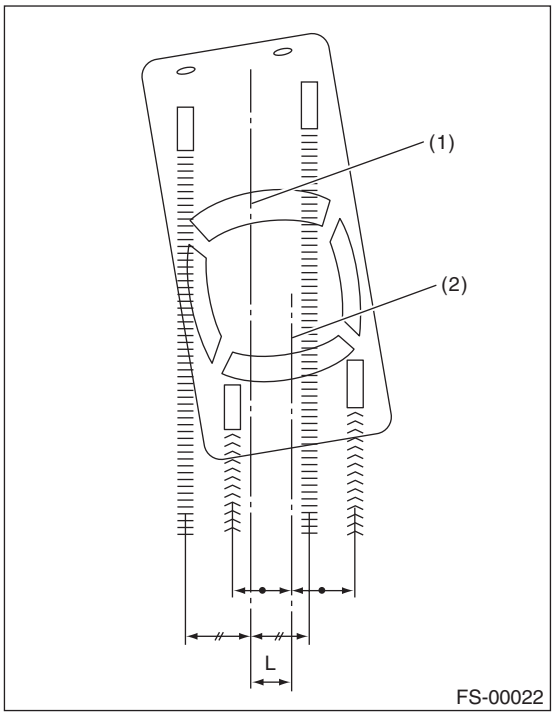

(1) Center line of loci (front axle)
(2) Center line of loci (rear axle)

• Adjustment

1) Make the thrust angle adjustments by turning toe-in adjusting bolts of rear suspension equally in the same direction.
2) When one rear wheel is adjusted in a toe-in direction, adjust the other rear wheel equally in toe-out direction, in order to make thrust angle adjustment.
3) When the right and left adjusting bolts are turned incrementally by one graduation in the same direction, the thrust angle will change approx. 16′ [“L” is almost equal to 12 mm (0.472 in)].

Thrust angle:
0°±30′

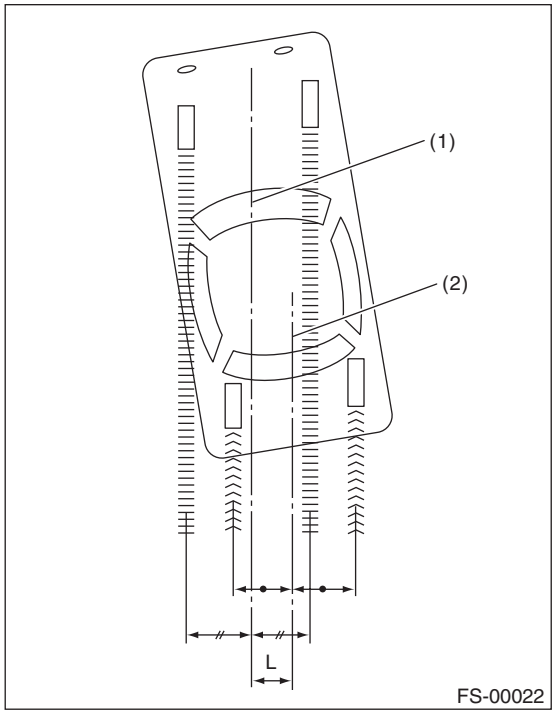

(1) Center line of loci (front axle)
(2) Center line of loci (rear axle)

NOTE:
Thrust angle refers to a mean value of right and left rear wheel toe angles in relation to the vehicle body center line. Vehicle is driven straight in the thrust angle direction while swinging in the oblique direction depending on the degree of the mean thrust angle.

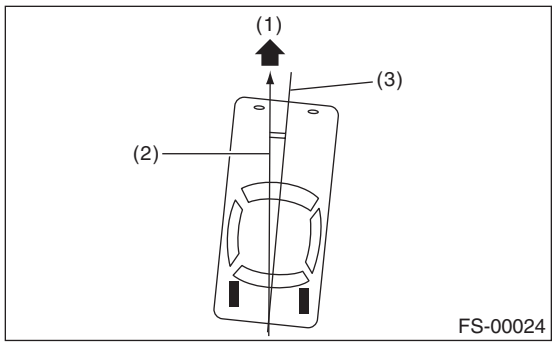

(1) Front
(2) Thrust angle
(3) Body center line

Thrust angle: r = (α − β)/2

α: Right rear wheel toe-in angle
β: Left rear wheel toe-in angle
Here, use only positive toe-in values from each wheel to substitute for α and β in the equation.

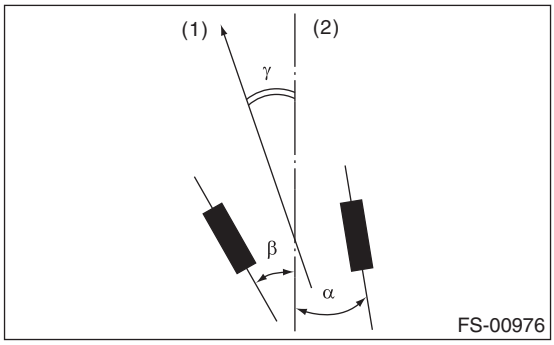

(1) Front
(2) Body center line

3. Front Transverse Link

A: REMOVAL

1) Set the vehicle on a lift.
2) Lift-up the vehicle and remove the wheel.
3) Remove the sub frame.
4) Disconnect the stabilizer link from transverse link.
5) Remove the bolt securing ball joint of transverse link to housing.

SEDAN MODEL:

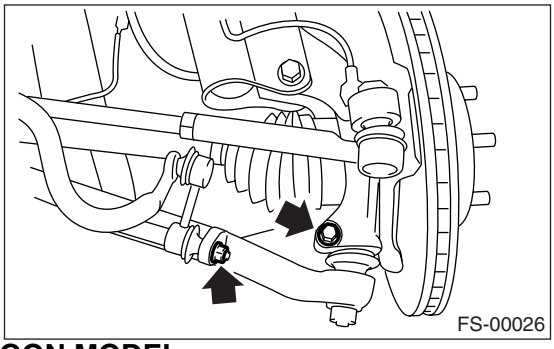

WAGON MODEL:

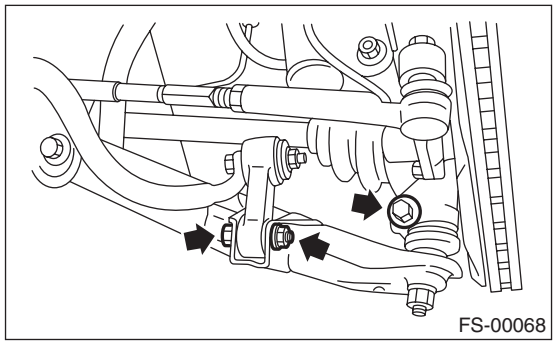

6) Remove the nut (do not remove bolt) securing transverse link to crossmember.
7) Remove the two bolts securing bushing bracket of transverse link to the vehicle body at rear bushing location.

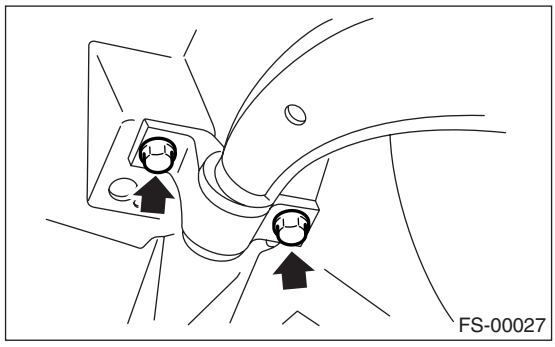

8) Extract the ball joint from housing.
9) Remove the bolt securing transverse link to crossmember, and then extract the transverse link from crossmember.

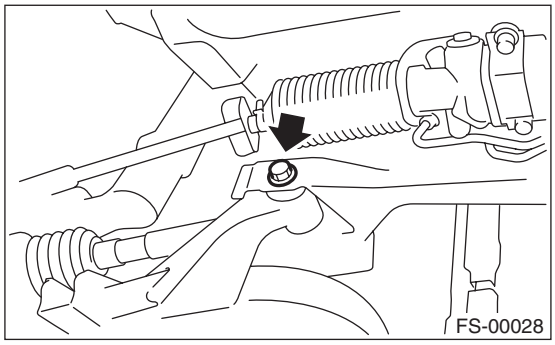

B: INSTALLATION

1) Temporarily tighten the two bolts used to secure rear bushing of transverse link to body.

NOTE:
These bolts should be tightened to such an extent that they can still move back and forth in the oblong shaped hole in the bracket (which holds the bushing).

2) Install the bolts used to connect transverse link to crossmember and temporarily tighten with a new self-locking nut.

CAUTION:
Discard the loosened self-locking nut and replace with a new one.

3) Insert the ball joint into housing.
4) Connect the stabilizer link to transverse link, and then temporarily tighten a new self-locking nut.

SEDAN MODEL:

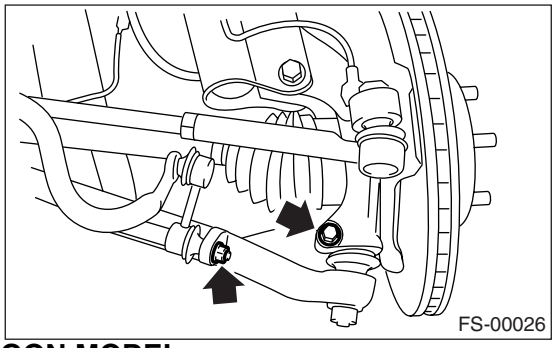

WAGON MODEL:

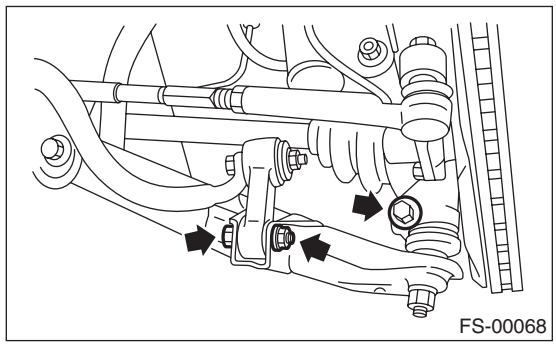

5) Tighten the following points in the order shown below when tires are in full contact with the ground and vehicle is curb weight.

(1) Transverse link and stabilizer

Tightening torque:
Sedan model:
45 N·m (4.6 kgf-m, 33 ft-lb)
Wagon model:
30 N·m (3.1 kgf-m, 22 ft-lb)

(2) Transverse link and crossmember

Tightening torque:
125 N·m (12.7 kgf-m, 92 ft-lb)

(3) Transverse link rear bushing and body

Tightening torque:
250 N·m (25.5 kgf-m, 184 ft-lb)

NOTE:
Move the rear bushing back and forth until transverse link-to-rear bushing clearance is established (as indicated in the figure) before tightening.

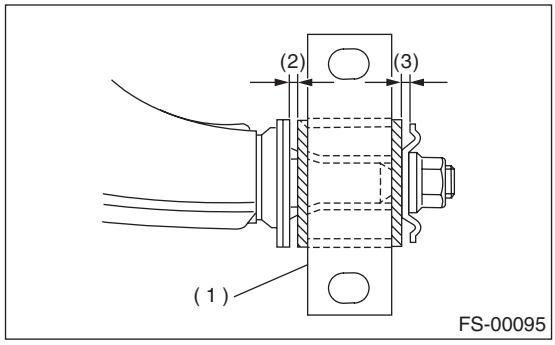

(1) Rear bushing
(2) 1 mm (0.04 in)
(3) 1.5 mm (0.059 in)

6) Check the wheel alignment and adjust if necessary.

C: DISASSEMBLY

1. FRONT BUSHING

Using the ST, press the front bushing out of place.
ST 927680000 INSTALLER & REMOVER SET

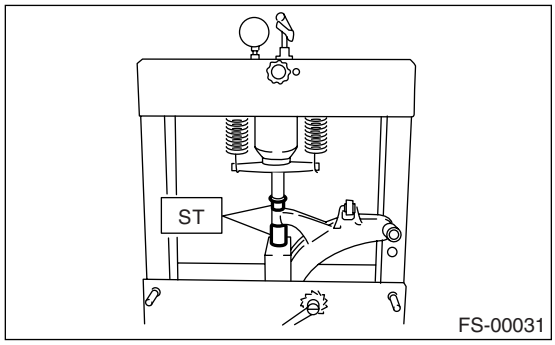

2. REAR BUSHING

1) Scribe an aligning mark on the transverse link and rear bushing.
2) Loosen the nut, and then remove the rear bushing.

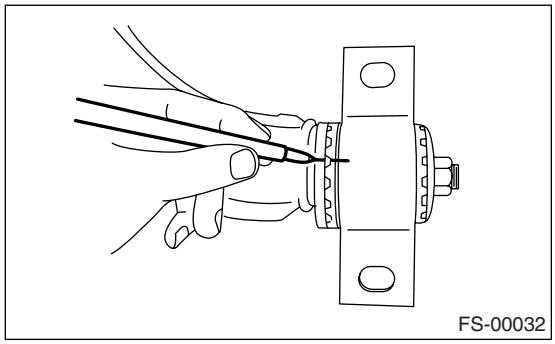

D: ASSEMBLY

1. FRONT BUSHING

Assemble in the reverse order of disassembly.

CAUTION:
Install the front bushing in correct direction, as shown in the figure.

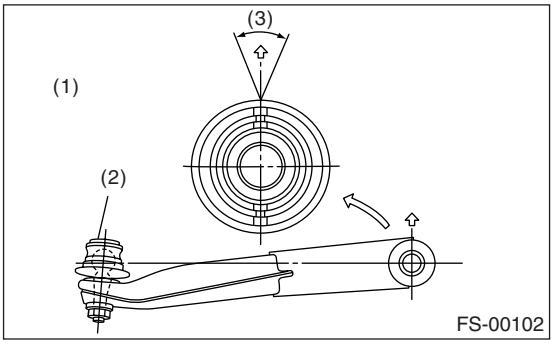

(1) Face bushing toward center of ball joint
(2) Ball joint
(3) ±3°

2. REAR BUSHING

1) Install the rear bushing to transverse link, and then align the aligning marks scribed on the two.
2) Tighten the new self-locking nut.

NOTE:
While holding the rear bushing so as not to change position of aligning marks, tighten the self-locking nut.

Tightening torque:
190 N·m (19.4 kgf-m, 140 ft-lb)

E: INSPECTION

1) Check the transverse link for wear, damage and cracks, and correct or replace if defective.
2) Check the bushings for cracks, fatigue or damage.
3) Check the rear bushing for oil leaks.

4. Front Ball Joint

A: REMOVAL

1) Remove the wheel.
2) Pull out the cotter pin from ball stud, remove the castle nut, and extract the ball stud from transverse link.
3) Remove the bolt securing ball joint to housing.

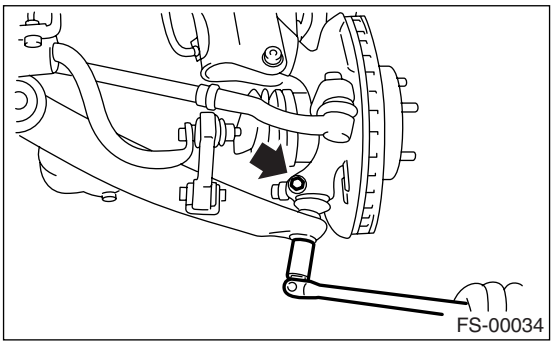

4) Extract the ball joint from housing.

B: INSTALLATION

1) Install the ball joint onto housing.

Tightening torque (Bolt):
50 N·m (5.1 kgf-m, 37 ft-lb)

CAUTION:
Do not apply grease to tapered portion of ball stud.

2) Connect the ball joint to transverse link.

Tightening torque (Castle nut):
Sedan turbo model:
30 N·m (3.1 kgf-m, 22 ft-lb)
Except sedan turbo model:
40 N·m (4.1 kgf-m, 30 ft-lb)

3) Retighten the castle nut further within 60° until a slot in castle nut is aligned with the hole in ball stud end, then insert a new cotter pin and bend it around castle nut.
4) Install the front wheel.

C: INSPECTION

1) Measure the play of ball joint by the following procedures. Replace with a new one when the play exceeds specified value.
(1) With 686 N (70 kgf, 154 lb) loaded in direction shown in the figure, measure the dimension ℓ_1.

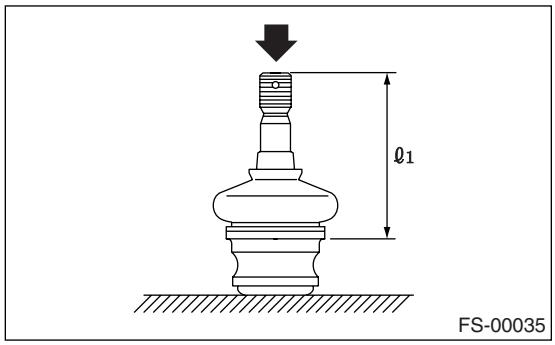

(2) With 686 N (70 kgf, 154 lb) loaded in opposite direction shown in the figure, measure the dimension ℓ_2.

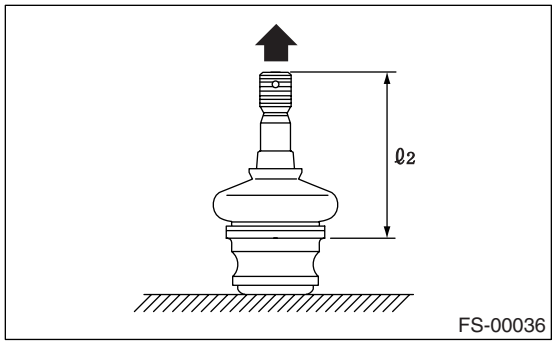

(3) Calculate plays from the following formula. $S = \ell_2 - \ell_1$
(4) When plays are larger than the following value, replace with a new one.

FRONT BALL JOINT
Specified play for replacement: S
Less than 0.3 mm (0.012 in)

2) When the play is smaller than specified value, visually inspect the dust cover.
3) The ball joint and cover that have been removed must be checked for wear, damage or cracks, and any defective part must be replaced.
4) If the dust cover is damaged, replace with a new ball joint.

5. Front Strut

A: REMOVAL

1) Remove the wheel.
2) Remove the bolt securing the brake hose from strut.

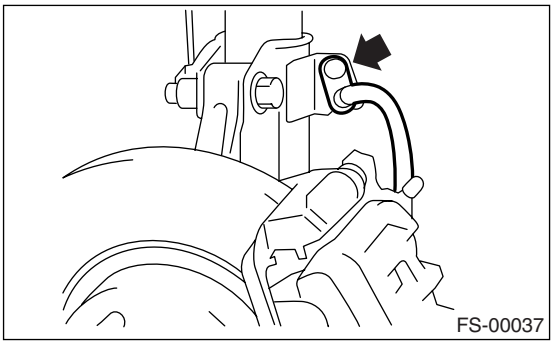

3) Scribe an alignment mark on the camber adjusting bolt which secures the strut to housing.
4) Remove the bolt securing ABS wheel speed sensor harness.

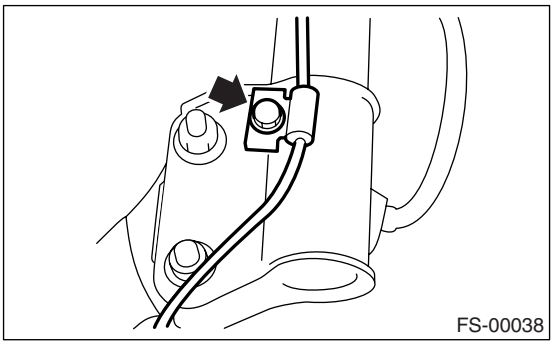

5) Remove the two bolts securing housing to strut.

NOTE:
While holding the head of adjusting bolt, loosen self-locking nut.

6) Remove the three nuts securing the strut mount to body.

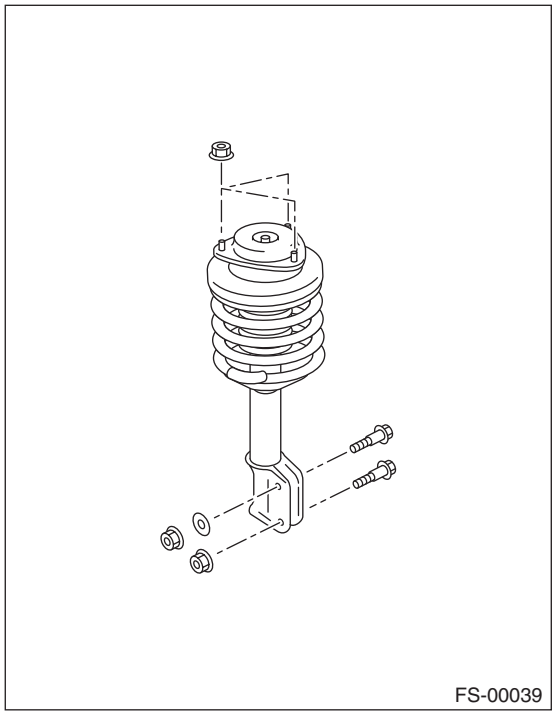

B: INSTALLATION

1) Install the strut mount at upper side of strut to body, and then tighten with the nuts.

Tightening torque:
20 N·m (2.0 kgf-m, 14.5 ft-lb)

2) Position the aligning mark on camber adjustment bolt with aligning mark on lower side of strut. Install the strut to housing with a new self-locking nut.

NOTE:
While holding the head of adjusting bolt, tighten the self-locking nut.

Tightening torque:
175 N·m (17.8 kgf-m, 129 ft-lb)

3) Install the ABS wheel speed sensor harness to strut.

Tightening torque:
33 N·m (3.4 kgf-m, 24.3 ft-lb)

4) Install the bolts which secure the brake hose to strut.

Tightening torque:
32 N·m (3.3 kgf-m, 23.6 ft-lb)

5) Install the wheels.

NOTE:
Check the wheel alignment and adjust if necessary.

C: DISASSEMBLY

1) Using a coil spring compressor, compress the coil spring.

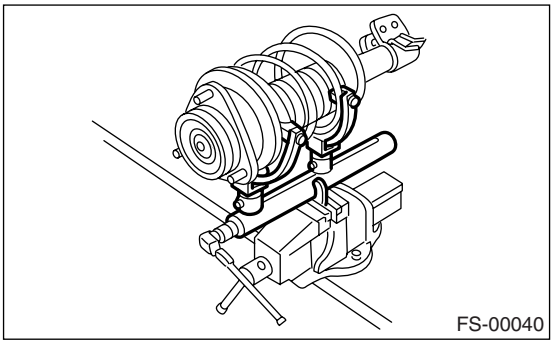

2) Using the ST, remove the self-locking nut.
ST 927760000 STRUT MOUNT SOCKET

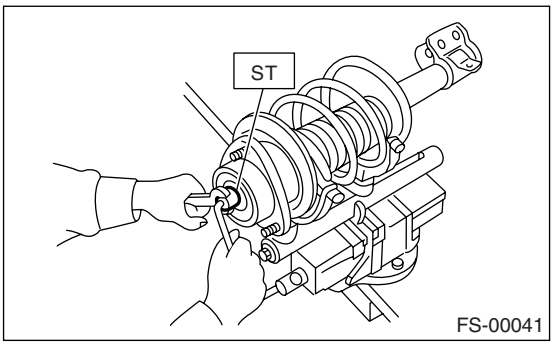

3) Remove the strut mount, upper spring seat and rubber seat from strut.
4) Gradually decreasing the compression force of compressor, and then remove the coil spring.
5) Remove the dust cover and helper spring.

D: ASSEMBLY

1) Before installing the coil spring, strut mount, etc., on strut, check for the presence of air in the damping force generating mechanism of strut since air prevents proper damping force from being produced.
2) Checking for the presence of air
   (1) Place the strut vertically with piston rod facing up.
   (2) Move the piston rod to center of its entire stroke.
   (3) While holding the piston rod end with fingertips, move the rod up and down.
   (4) If the piston rod moves at least 10 mm (0.39 in) in the former step, purge air from the strut.
3) Air purging procedure
   (1) Place the strut vertically with piston rod facing up.
   (2) Fully extend the piston rod.
   (3) With the piston rod fully extended, place the piston rod side down. The strut must stand vertically.
   (4) Fully contract the piston rod.
   (5) Repeat three or four times from first step.

NOTE:
After completely purging air from strut, be sure to place the strut with piston rod facing up. If it is laid down, check for entry of air in the strut as outlined under “Checking for the presence of air”.

4) Using a coil spring compressor, compress the coil spring.

NOTE:
Make sure that the installing direction of coil spring is as shown in the figure.

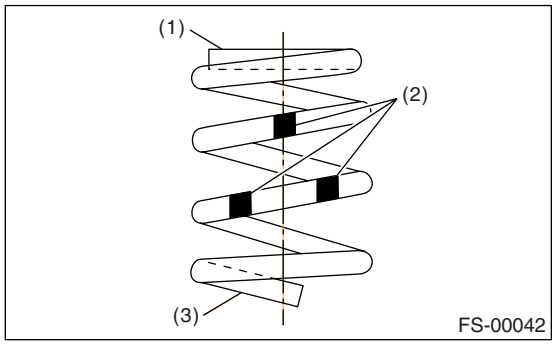

(1) Flat (top side)
(2) Identification paint
(3) Inclined (bottom side)

5) Set the coil spring correctly so that its end face fits well into the spring seat as shown in the figure.

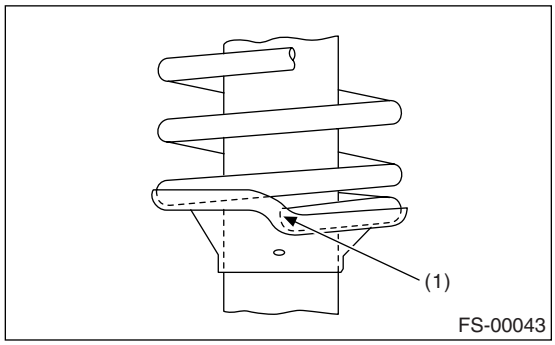

(1) Coil spring end face

6) Install the helper and dust cover to the piston rod.

7) Pull the piston rod fully upward, and install the rubber seat and spring seat.

NOTE:
Ensure that the upper spring seat is positioned as shown in the figure.

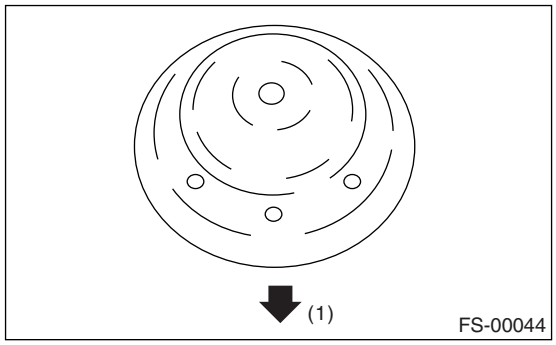

(1) Outside of body

8) Install the strut mount to the piston rod, and then tighten a new self-locking nut temporarily.
9) Using a hexagon wrench to prevent strut rod from turning, tighten the self-locking nut with ST.
ST 927760000 STRUT MOUNT SOCKET

Tightening torque:
55 N·m (5.6 kgf-m, 41 ft-lb)

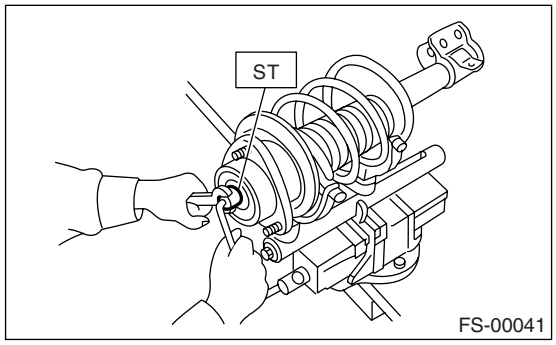

10) Loosen the coil spring carefully.

E: INSPECTION

Check the disassembled parts for cracks, damage and wear, and replace with new parts if defective.

1. DAMPER STRUT

1) Check for oil leakage.
2) Move the piston rod up and down to check that it operates smoothly without any binding.
3) Play of piston rod
- Measure the play as follows:

Fix outer shell and fully extend the rod. Set a dial gauge at the end of rod: L [10 mm (0.39 in)], then apply a force of W [20 N (2 kgf, 4 lb)] to threaded portion. With the force of 20 N (2 kgf, 4 lb) applied, read dial gauge indication: P_1. Apply a force of 20 N (2 kgf, 4 lb) in the opposite direction of “W”, then read dial gauge indication: P_2.

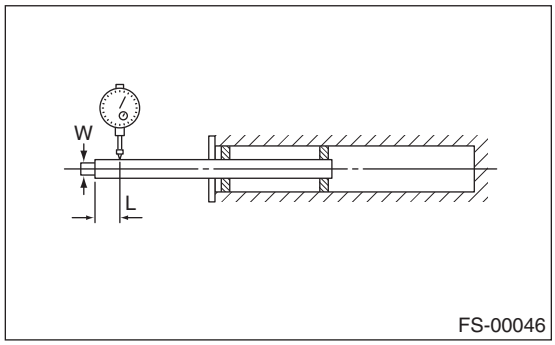

Limit of play ($P_1 + P_2$):
0.8 mm (0.031 in)

If the play is greater than limit, replace the strut.

2. STRUT MOUNT

Check the rubber part for creep, cracks and deterioration, and replace it with a new one if defective.

3. DUST COVER

If any cracks or damage are found, replace it with a new one.

4. COIL SPRING

One having permanent strain should be replaced with a new one. When the vehicle posture is uneven, although there are no considerable reasons like tire puncture, uneven loading, etc., check the coil spring for its free length referring to specifications, cracks, etc., and replace it with a new one if defective.

5. HELPER

Replace it with a new one if cracked or damaged.

F: DISPOSAL

1. EXCEPT STi MODEL

CAUTION:
• Before handling gas filled struts, be sure to wear goggles to protect eyes from gas, oil and filings.
• Do not disassemble the strut damper or place into a fire.
• Drill holes before disposing of gas filled struts.

1) Place the gas filled strut on a flat and level surface with piston rod fully extended.
2) Using a 2 to 3 mm (0.08 to 0.12 in) dia. drill, make holes in areas shown in the figure.

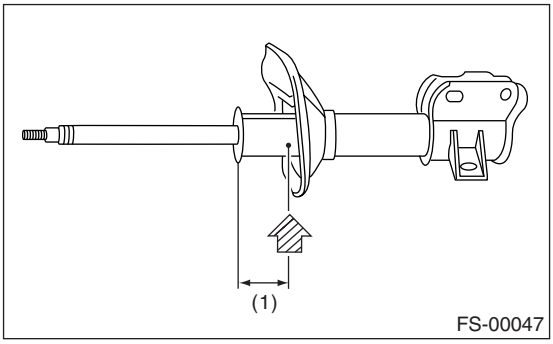

(1) 40 mm (1.57 in)

2. STi MODEL

CAUTION:
• Before handling gas filled struts, be sure to wear goggles to protect eyes from gas, oil and filings.
• Do not disassemble the strut damper or place into a fire.
• Drill holes before disposing of gas filled struts.

1) Place the gas filled strut on a flat and level surface with damping tube fully extended.
2) Using a 2 to 3 mm (0.08 to 0.12 in) dia. drill, make holes in (1), and then make a hole in (2).

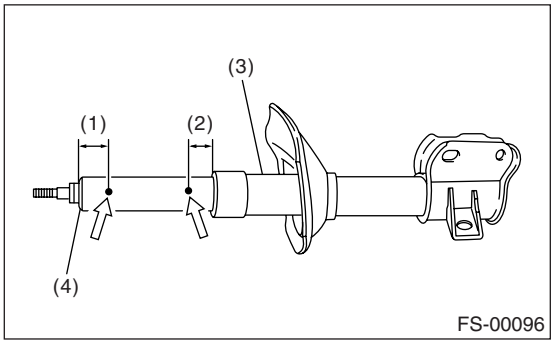

(1) 20 mm (0.78 in)
(2) 10 mm (0.39 in)
(3) Strut
(4) Damping tube

6. Front Stabilizer

A: REMOVAL

1) Jack-up the front part of the vehicle and support it with rigid racks.
2) Remove the jack-up plate from lower part of crossmember.
3) Remove the sub frame.
4) Remove the nut which secures stabilizer link to front transverse link.

SEDAN MODEL:

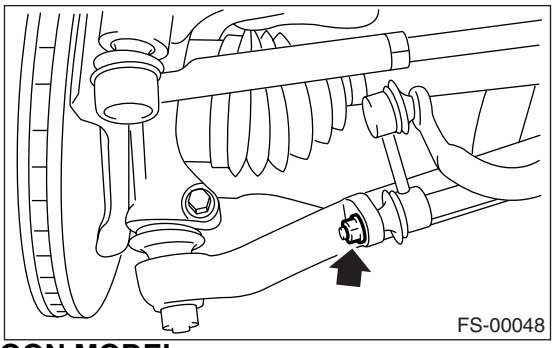

WAGON MODEL:

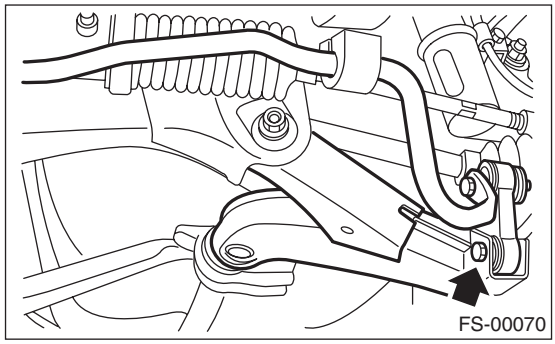

5) Remove the bolts which secure stabilizer to crossmember.

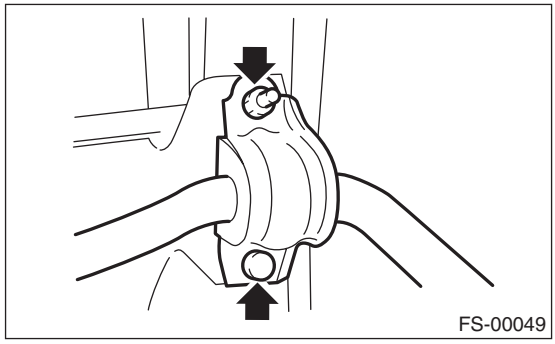

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
• Install the bushing (on front crossmember side) while aligning it with paint mark on stabilizer.
• Ensure that bushing and stabilizer have the same identification colors when installing.

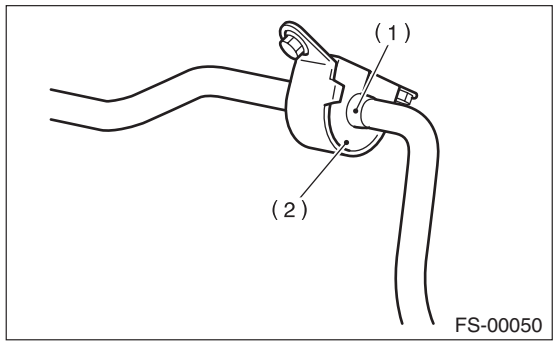

(1) Mark stamped on stabilizer
(2) Bushing identification color

2) Always tighten the bushing location when tires are in full contact with the ground and vehicle is curb weight.

Tightening torque:
Jack-up plate to crossmember (Except STi model):
20 N·m (2.0 kgf-m, 14.5 ft-lb)
Jack-up plate to crossmember (STi model):
70 N·m (7.1 kgf-m, 52 ft-lb)
Stabilizer link to front transverse link (Sedan model):
45 N·m (4.6 kgf-m, 33 ft-lb)
Stabilizer link to front transverse link (Wagon model):
30 N·m (3.1 kgf-m, 22 ft-lb)
Stabilizer to crossmember:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

C: INSPECTION

1) Check the bushing for cracks, fatigue or damage.
2) Check the stabilizer link for deformities, cracks, or damage, and bushing for protrusions from the hole of stabilizer link.

7. Front Crossmember

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle, and then remove the front wheels.
3) Remove the sub frame.
4) Remove both the stabilizer and jack-up plate.

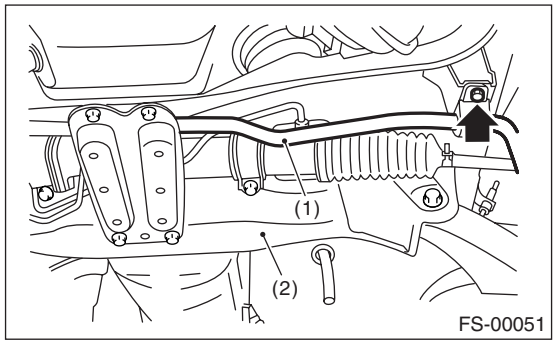

(1) Front stabilizer
(2) Front crossmember

5) Disconnect the tie-rod end from housing.
6) Remove the front exhaust pipe.
7) Remove the front transverse link from front crossmember and body.

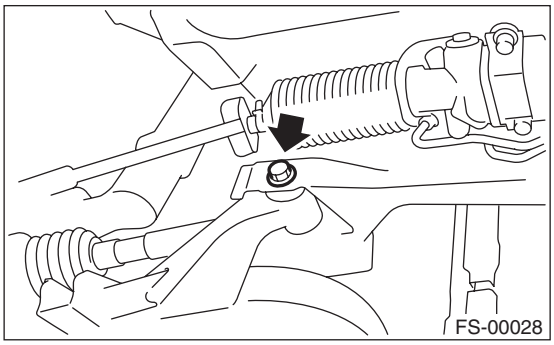

8) Remove the nuts attaching engine mount cushion rubber to crossmember.
9) Remove the steering universal joint.
10) Disconnect the power steering pipe from steering gear box.
11) Lift the engine by approx. 10 mm (0.39 in) by using chain block.
12) Support the crossmember with a jack, remove nuts securing crossmember to body and lower the crossmember gradually along with steering gearbox.

CAUTION:
When removing the crossmember downward, be careful that tie-rod end does not interfere with SFJ boot.

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
Always tighten the bushing when tires are in full contact with the ground and vehicle is curb weight.

Tightening torque:
Transverse link bushing to crossmember:
125 N·m (12.7 kgf-m, 92 ft-lb)
Stabilizer to bushing:
25 N·m (2.5 kgf-m, 18.1 ft-lb)
Tie-rod end to housing:
27.0 N·m (2.75 kgf-m, 19.9 ft-lb)
Front cushion rubber to crossmember:
85 N·m (8.7 kgf-m, 62.7 ft-lb)
Universal joint to pinion shaft:
24 N·m (2.4 kgf-m, 17.4 ft-lb)
Crossmember to body:
105 N·m (10.7 kgf-m, 77 ft-lb)

2) Purge air from the power steering system.
3) Check the wheel alignment and adjust if necessary.

C: INSPECTION

Check the crossmember for wear, damage and cracks, and correct or replace if defective.

8. Sub Frame

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the under cover.
3) Remove the bolt cover.

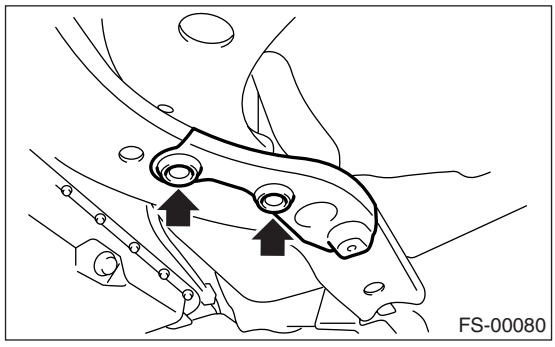

4) Remove the clip.

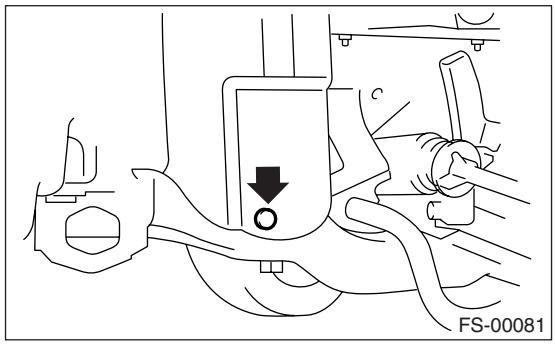

5) Remove the sub frame.

NOTE:
Loosen bolt (1) and leave a few threads caught, then remove the bolts in the order of (2), (3), (4), (5), and (6).

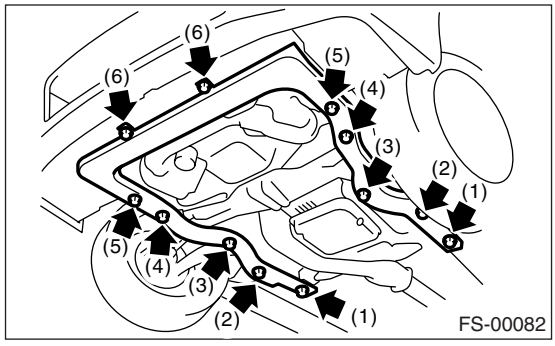

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Replace the M12 bolt with a new one.

Tightening torque:
T1: 34 N·m (3.5 kgf-m, 25 ft-lb)
T2: 55 N·m (5.6 kgf-m, 41 ft-lb)
T3: 71 N·m (7.2 kgf-m, 52 ft-lb)
T4: 105 N·m (10.7 kgf-m, 77 ft-lb)

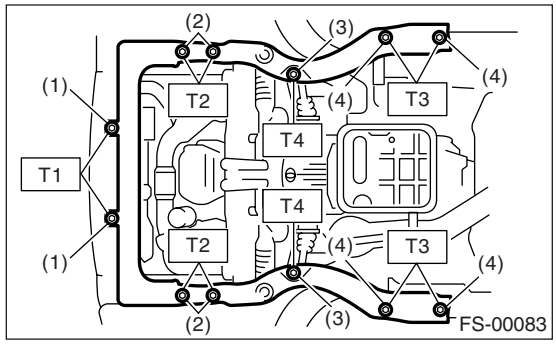

(1) M8 bolt
(2) M12 bolt (with wax)
(3) M12 bolt (with oil)
(4) M10 bolt

C: INSPECTION

1) Check that there is no damage and distortion at the sub frame.
2) Check that the bolts are tightened with the specified torque. If there is looseness, tighten to the specified torque.

NOTE:
The tightening torque differs by the color for bolt (3). Always verify the bolt color before checking tightening torque.

Tightening torque:
T1: 34 N·m (3.5 kgf-m, 25 ft-lb)
T2: 55 N·m (5.6 kgf-m, 41 ft-lb)
T3: 71 N·m (7.2 kgf-m, 52 ft-lb)
T4: Dark green bolt
105 N·m (10.7 kgf-m, 77 ft-lb)
T4: Except dark green bolt
55 N·m (5.6 kgf-m, 41 ft-lb)

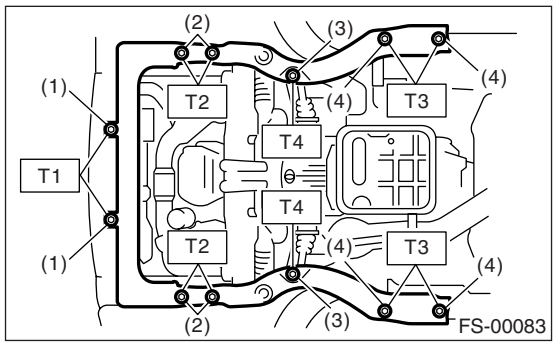

(1) M8 bolt
(2) M12 bolt
(3) M12 bolt
(4) M10 bolt

9. Front Support Arm

A: REMOVAL

1) Set the vehicle on a lift.
2) Lift-up the vehicle.
3) Remove the under cover.
4) Remove the four bolts and jack-up plate.

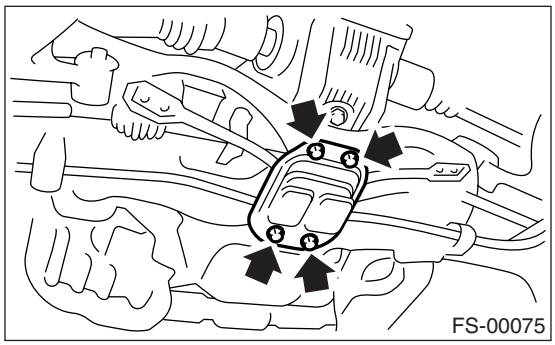

5) Remove the two nuts at both ends of arm respectively.

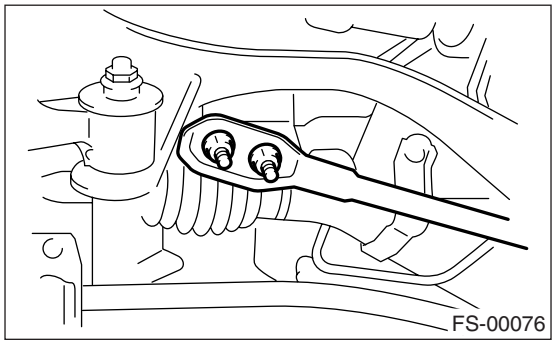

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Front support arm to crossmember:
30 N·m (3.1 kgf-m, 22 ft-lb)
Jack-up plate to crossmember:
70 N·m (7.1 kgf-m, 52 ft-lb)

C: INSPECTION

Check the front support arm for wear, damage and cracks, and correct or replace if defective.

10.General Diagnostic Table

A: INSPECTION

1. IMPROPER VEHICLE POSTURE OR IMPROPER WHEEL ARCH HEIGHT

Possible causes	Countermeasures
(1) Permanent distortion or breakage of coil spring	Replace.
(2) Unsmooth operation of damper strut and/or shock absorber	Replace.
(3) Installation of wrong strut and/or shock absorber	Replace with proper parts.
(4) Installation of wrong coil spring	Replace with proper parts.

2. POOR RIDE COMFORT

1) Large rebound shock
2) Rocking of the vehicle continues too long after running over bump and/or hump.
3) Large shock in bumping

Possible causes	Countermeasures
(1) Breakage of coil spring	Replace.
(2) Overinflating pressure of tire	Adjust.
(3) Improper wheel arch height	Adjust or replace the coil springs with new ones.
(4) Fault in operation of damper strut and/or shock absorber	Replace.
(5) Damage or deformation of strut mount and/or shock absorber mount	Replace.
(6) Unsuitability of maximum and/or minimum length of damper strut and/or shock absorber	Replace with proper parts.
(7) Deformation or loss of bushing	Replace.
(8) Deformation or damage of helper in strut assembly and/or shock absorber	Replace.
(9) Oil leakage of damper strut and/or shock absorber	Replace.

3. NOISE

Possible causes	Countermeasures
(1) Wear or damage of damper strut and/or shock absorber component parts	Replace.
(2) Loosening of suspension link installing bolt	Retighten to the specified torque.
(3) Deformation or loss of bushing	Replace.
(4) Unsuitability of maximum and/or minimum length of damper strut and/or shock absorber	Replace with proper parts.
(5) Breakage of coil spring	Replace.
(6) Wear or damage of ball joint	Replace.
(7) Deformation of stabilizer clamp	Replace.

REAR SUSPENSION

RS

Page

1. General Description 2
2. Wheel Alignment 10
3. Rear Stabilizer 11
4. Rear Trailing Link 12
5. Rear Strut 16
6. Lateral link 17
7. Rear Crossmember 21
8. General Diagnostic Table 22

1. General Description

A: SPECIFICATIONS

Model	Sedan		Wagon		OUTBACK
	Non-turbo	Turbo	Non-turbo	Turbo	
Camber (tolerance: ±0°45′)	−1°25′	−1°30′	−1°15′	−1°20′	−1°10′
Toe-in	0±3 mm (0±0.12 in) Each toe angle: ±0°09′				
Thrust angle	0°±30′				
Wheel arch height [tolerance: ±12 mm (±0.47 in)]	381 mm (15.0 in)	376 mm (14.80 in)	381 mm (15.0 in)	376 mm (14.80 in)	386 mm (15.20 in)
Diameter of stabilizer	17 mm (0.67 in)	20 mm (0.79 in)	—	17 mm (0.67 in)	—

NOTE:
• Front and rear toe-ins and front camber can be adjusted. If toe-in or camber tolerance exceeds specifications, adjust toe-in and camber to the middle value of specification.
• The other items indicated in the specification table cannot be adjusted. If the other items exceeds specifications, check suspension parts and connections for deformities; replace with new ones as required.

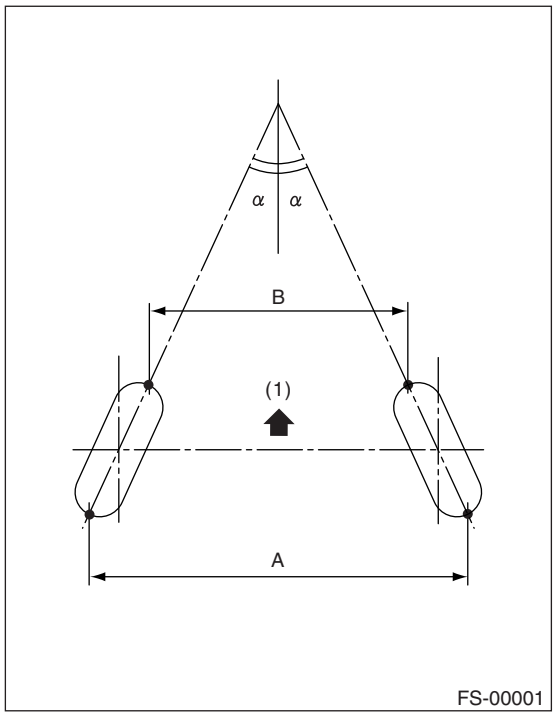

(1) Front
A − B = Positive: Toe-in, Negative: Toe-out
α = Each toe angle

B: COMPONENT

1. REAR SUSPENSION

• AWD MODEL

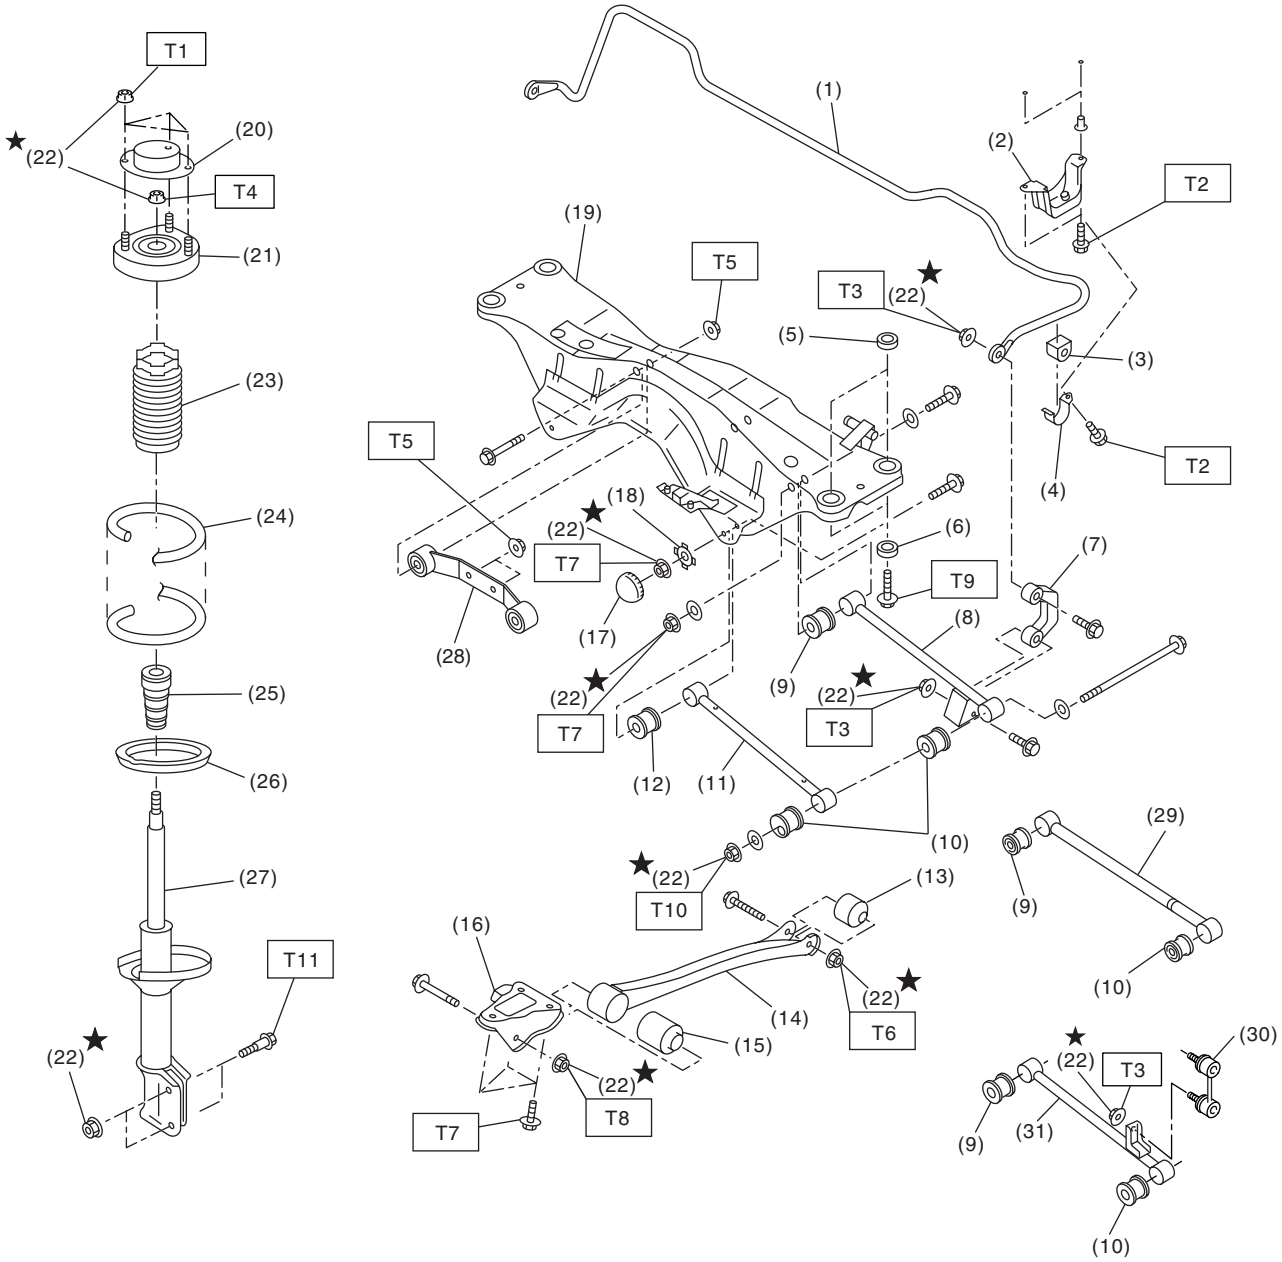

RS-00098

(1) Stabilizer
(2) Stabilizer bracket
(3) Stabilizer bushing
(4) Clamp
(5) Floating bushing
(6) Stopper
(7) Stabilizer link (except STi model)
(8) Rear lateral link (with stabilizer, except STi model)
(9) Bushing (C)
(10) Bushing (A)
(11) Front lateral link
(12) Bushing (B)
(13) Trailing link rear bushing
(14) Trailing link
(15) Trailing link front bushing
(16) Trailing link bracket
(17) Cap (Protection)
(18) Washer
(19) Rear crossmember
(20) Strut mount cap
(21) Strut mount
(22) Self-locking nut
(23) Dust cover
(24) Coil spring
(25) Helper
(26) Lower rubber seat
(27) Damper strut
(28) Rear differential member rear
(29) Rear lateral link (without stabilizer)
(30) Stabilizer link (STi model)
(31) Rear lateral link (STi model)

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	***20 (2.0, 14.5)***
T2:	***25 (2.5, 18.1)***
T3:	***45 (4.6, 33.2)***
T4:	***55 (5.6, 41)***
T5:	***70 (7.1, 52)***
T6:	***90 (9.2, 66)***
T7:	***100 (10.2, 74)***
T8:	***115 (11.7, 85)***
T9:	***130 (13.3, 96)***
T10:	***140 (14.3, 103)***
T11:	***200 (20.0, 145)***

• FWD model

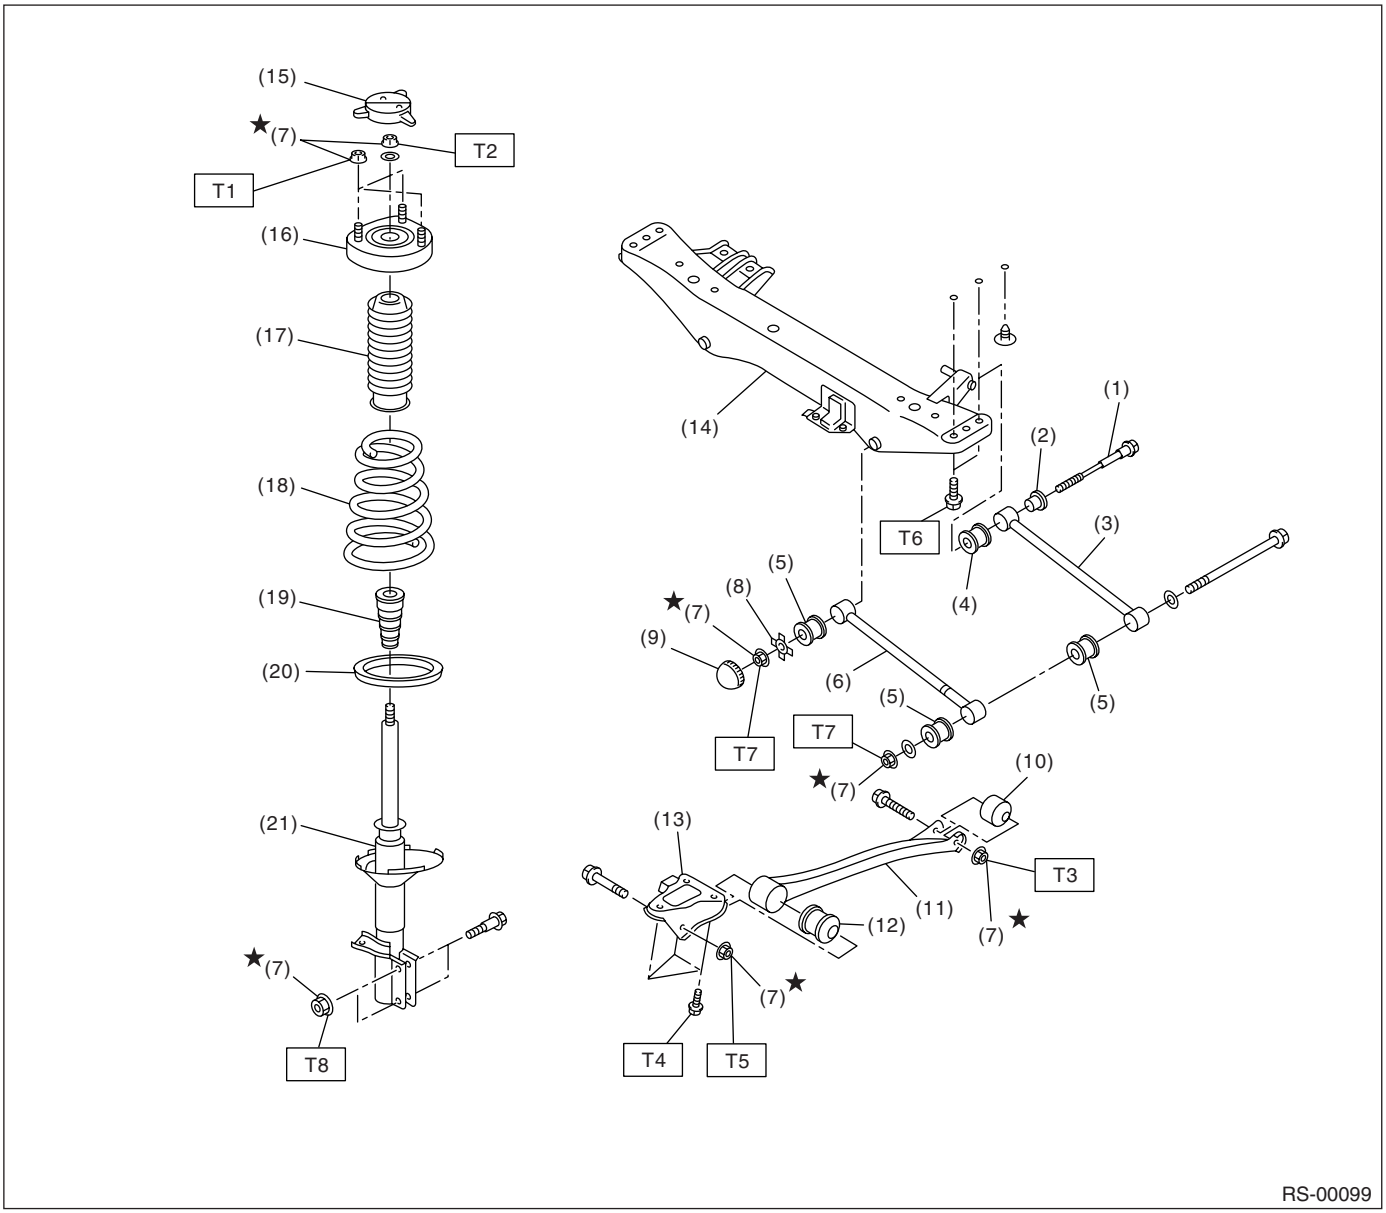

(1) Adjusting bolt
(2) Adjusting wheel
(3) Rear lateral link
(4) Bushing (D)
(5) Bushing (A)
(6) Front lateral link
(7) Self-locking nut
(8) Washer
(9) Cap (Protection)
(10) Trailing link rear bushing
(11) Trailing link
(12) Trailing link front bushing
(13) Trailing link bracket
(14) Rear crossmember
(15) Strut mount cap
(16) Strut mount
(17) Dust cover
(18) Coil spring
(19) Helper
(20) Lower rubber seat
(21) Damper strut

Tightening torque: N·m (kgf-m, ft-lb)
T1: 20 (2.0, 14.5)
T2: 55 (5.6, 41)
T3: 90 (9.2, 66)
T4: 100 (10.2, 74)
T5: 115 (11.7, 85)
T6: 130 (13.3, 96)
T7: 135 (13.8, 100)
T8: 220 (22.4, 162)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Before disposing shock absorbers, be sure to bleed gas completely. Also, do not throw away in fire.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
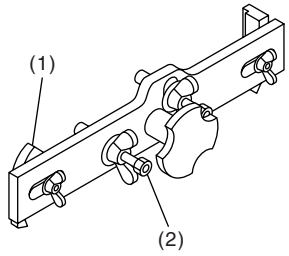 ST-927380002	927380002	ADAPTER	Used as an adapter for camber & caster gauge when measuring camber and caster. (1) 28199AC000 PLATE (2) 28199AC010 BOLT
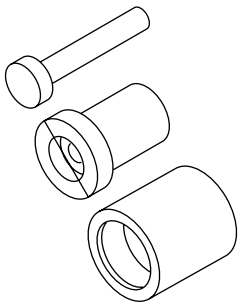 ST-927720000	927720000	INSTALLER & REMOVER	Used for replacing front bushing.
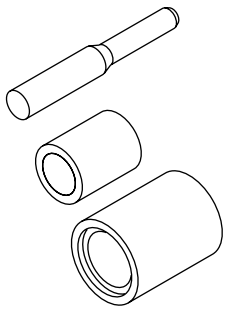 ST-927730000	927730000	INSTALLER & REMOVER	Used for replacing rear bushing.
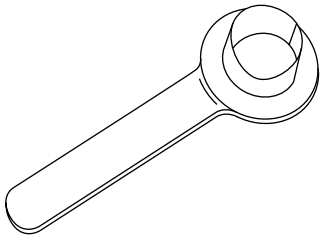 ST28099PA090	28099PA090	OIL SEAL PROTECTOR	• Used for installing rear drive shaft to rear differential. • For protecting oil seal.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
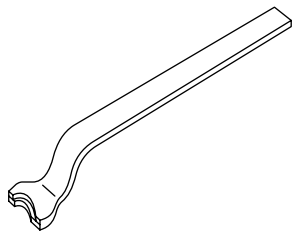 ST28099PA100	28099PA100	REMOVER	Used for removing DOJ.
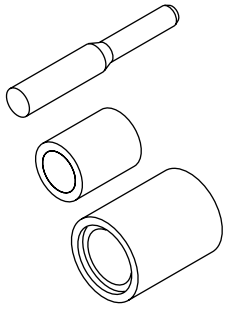 ST-927710000	927710000	INSTALLER & REMOVER	Used for replacing lateral link bushing.
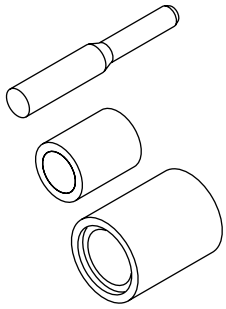 ST-927700000	927700000	INSTALLER & REMOVER	Used for replacing lateral link bushing.
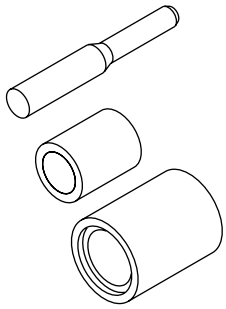 ST-927690000	927690000	INSTALLER & REMOVER	Used for replacing lateral link bushing.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Alignment gauge	Used for wheel alignment measurement.
Turning radius gauge	Used for wheel alignment measurement.
Toe-in gauge	Used for toe-in measurement.
Transmission jack	Used for suspension assembly/disassembly.
Bearing puller	Used for removing bushings.
Coil spring compressor	Used for strut assembly/disassembly.

2. Wheel Alignment

A: INSPECTION

NOTE:
Front and rear wheel alignment must be simultaneously measured and/or adjusted. Follow the procedure in “FS” section “Wheel Alignment” for measurement and/or adjustment of wheel alignment. <Ref. to FS-7, INSPECTION, Wheel Alignment.>

3. Rear Stabilizer

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the stabilizer link.
• Except STi MODEL

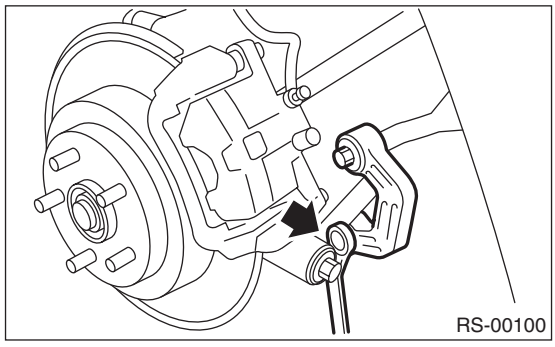

• STi MODEL

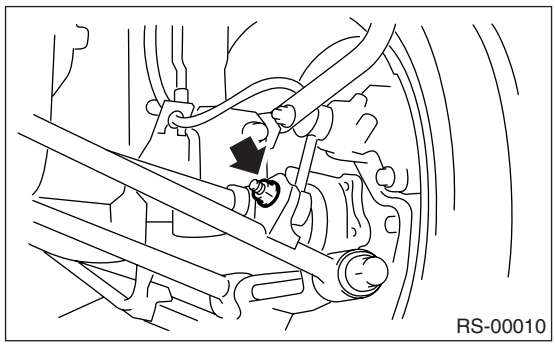

3) Remove the bolt and nut which secure the stabilizer to stabilizer bracket.

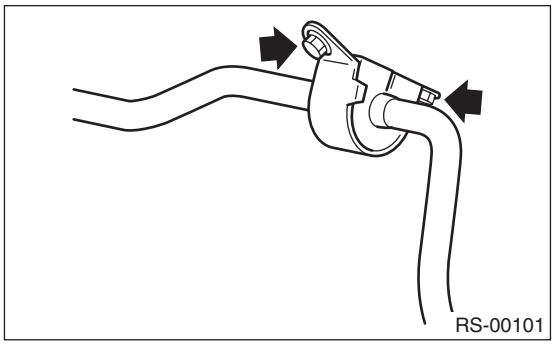

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
• Install the stabilizer bushing while aligning it with paint mark on stabilizer.
• Ensure the stabilizer bushing and stabilizer have the same identification colors when installing.

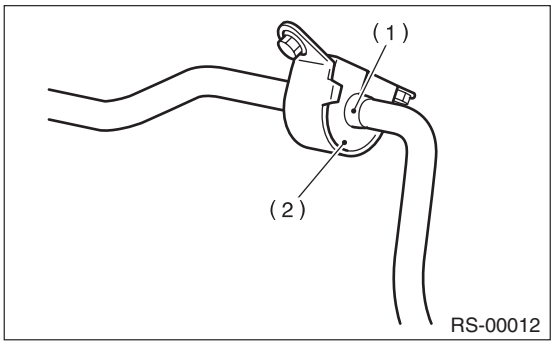

(1) Mark painted on stabilizer
(2) Bushing identification color

2) Always tighten the stabilizer bushing location when tires are in full contact with the ground and the vehicle is curb weight.

Tightening torque:
Stabilizer link to rear lateral link
45 N·m (4.6 kgf-m, 33.2 ft-lb)
Stabilizer to stabilizer bracket
25 N·m (2.5 kgf-m, 18.1 ft-lb)

C: INSPECTION

1) Check the bushing for cracks, fatigue or damage.
2) Check the stabilizer links for deformities, cracks, or damage, and bushing for protrusions from the hole of stabilizer link.

4. Rear Trailing Link

A: REMOVAL

1) Loosen the rear wheel nuts.
2) Lift-up the vehicle, and then remove the rear wheels.
3) Remove both the rear parking brake clamp and ABS wheel speed sensor harness.
4) Remove the bolt which secures the trailing link to trailing link bracket.

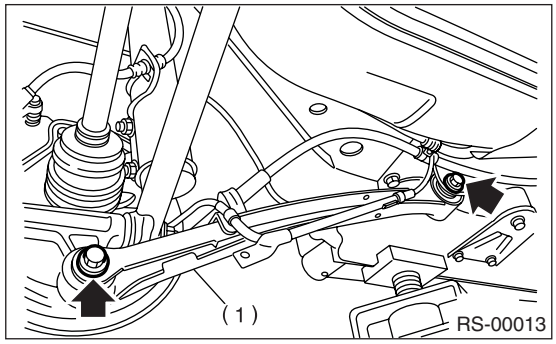

(1) Trailing link

5) Remove the bolt which secures the trailing link to rear housing.

B: INSTALLATION

1) Install in the reverse order of removal.
2) Always tighten the bushing location when tires are in full contact with the ground and the vehicle is at curb weight condition.

NOTE:
Check the wheel alignment and adjust if necessary.

C: DISASSEMBLY

1. FRONT BUSHING

Using the ST, press the front bushing out of place.
ST 927720000 INSTALLER & REMOVER SET

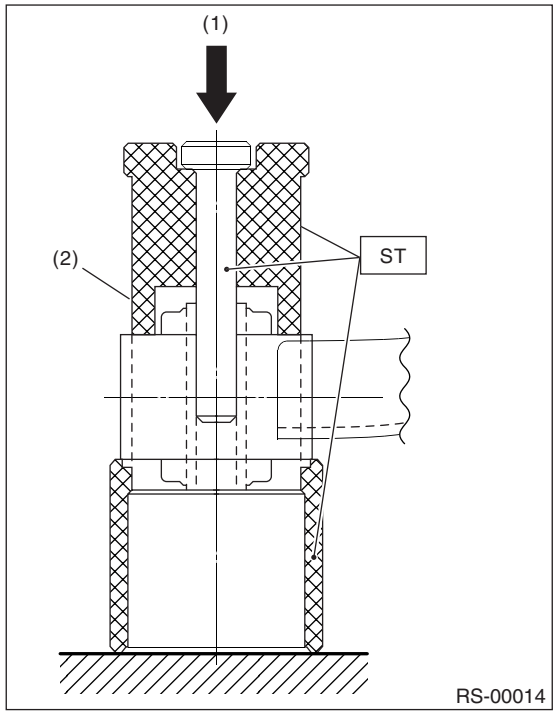

(1) Press
(2) Trailing link

2. REAR BUSHING

1) Remove the housing. <Ref. to DS-24, REMOVAL, Rear Axle.>
2) Using the ST, press the rear bushing out of place.
ST 927730000 INSTALLER & REMOVER SET

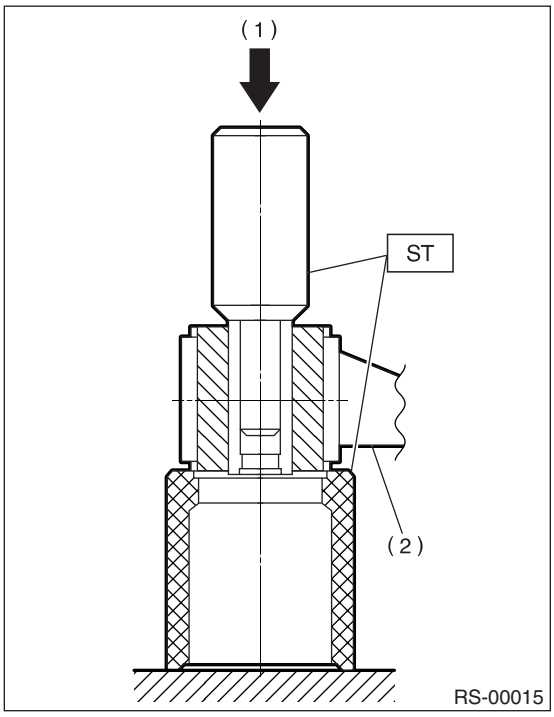

(1) Press
(2) Housing

D: ASSEMBLY

1. FRONT BUSHING

Using the ST, press the bushing into trailing link.
ST 927720000INSTALLER & REMOVER SET

CAUTION:
Turn the ST plunger upside down and press it until the plunger end surface contacts the trailing link end surface.

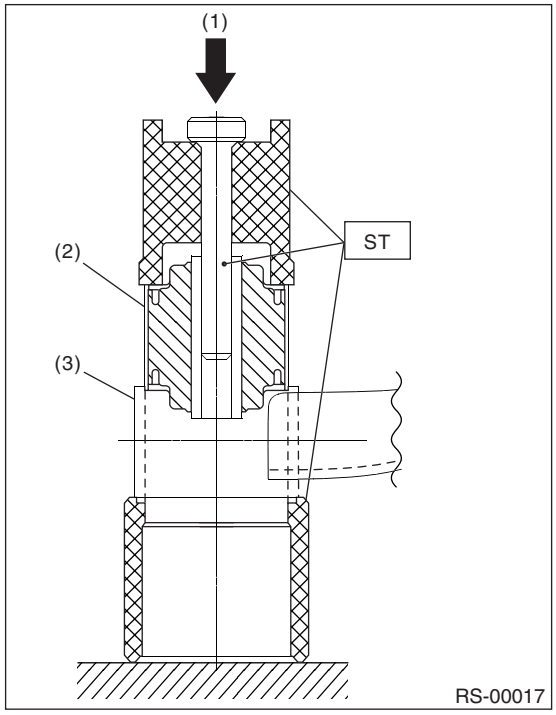

(1) Press
(2) Front bushing
(3) Trailing link

CAUTION:
Install the front bushing in the proper direction, as shown in the figure.

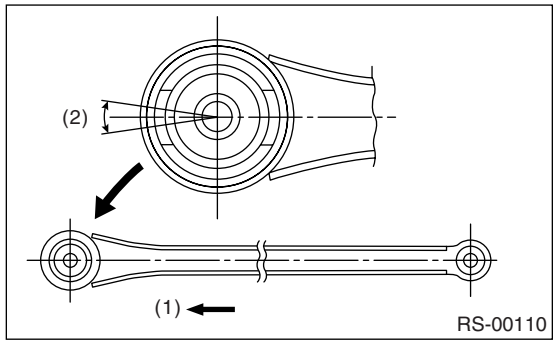

(1) Front
(2) ±5°

2. REAR BUSHING

1) Using the ST, press the bushing into trailing link.
ST 927730000 INSTALLER & REMOVER SET

NOTE:
If it is difficult to press the bushing into trailing link, apply water-diluted TIRE LUBE to the inner surface of ST as a lubricant.

SPECIFOED lubricant:
TIRE LUBE: water = 1 : 3

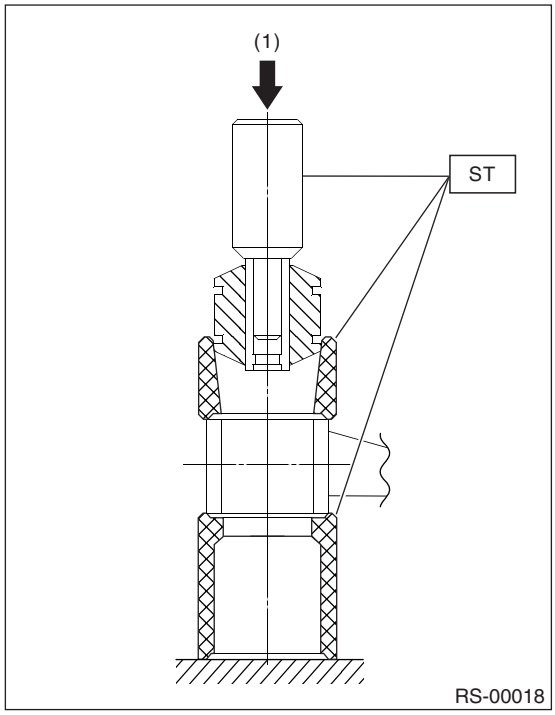

(1) Press

2) Press the ST plunger until the bushing flange protrudes beyond trailing link.
ST 927730000 INSTALLER & REMOVER SET

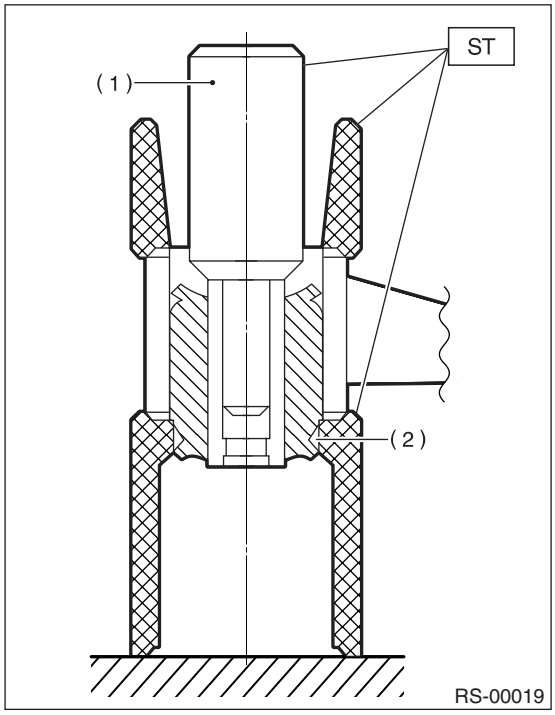

(1) Plunger
(2) Flange

3) Turn the trailing link upside down. Press the ST plunger in the opposite direction that outlines in the former procedure until bushing is correctly positioned in trailing link.

ST 927730000 INSTALLER & REMOVER SET

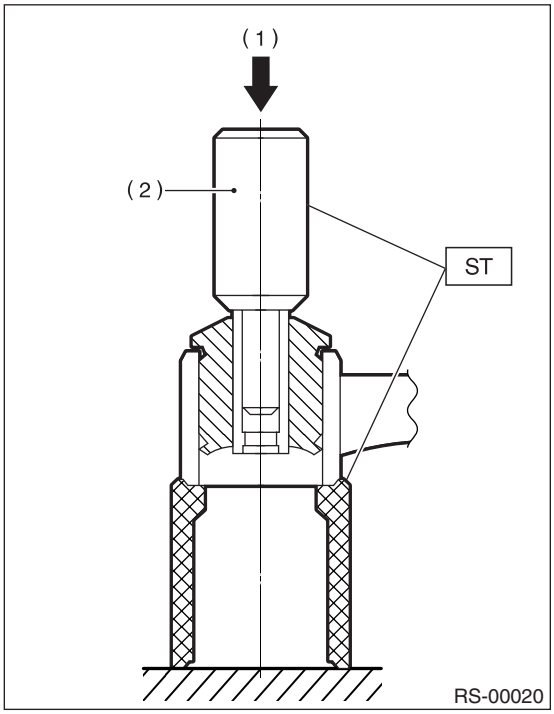

(1) Press
(2) Plunger

4) Install the housing. <Ref. to DS-27, INSTALLATION, Rear Axle.>

E: INSPECTION

Check the trailing links for bends, corrosion or damage.

5. Rear Strut

A: REMOVAL

1) Remove the rear seat cushion and backrest. (Sedan model)
2) Remove the strut cap of quarter trim. (Wagon model)
3) Loosen the rear wheel nuts.
4) Lift-up the vehicle, and remove rear wheels.
5) Remove the brake hose clip, and then remove the brake hose from rear strut.

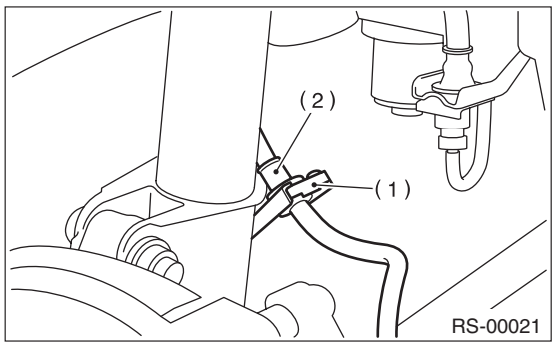

(1) Brake hose clip
(2) Brake hose

6) Remove the bolts which secure the rear strut to housing.

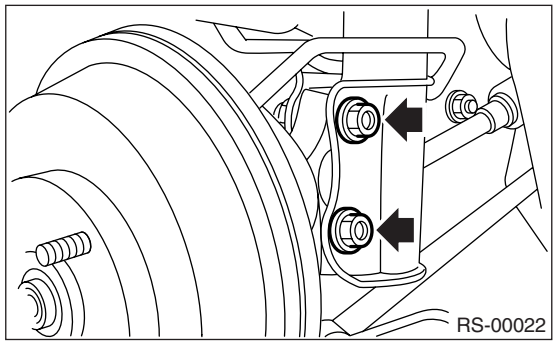

7) Remove the nuts securing strut mount to body.

B: INSTALLATION

1) Secure the strut mount to vehicle body using a new self-locking nut.

Tightening torque:
20 N·m (2.0 kgf-m, 14.5 ft-lb)

2) Secure the rear strut to housing using a new self-locking nut.

Tightening torque:
200 N·m (20.0 kgf-m, 145 ft-lb)

3) Install the brake hose to lower side of strut, then insert the brake hose clip.

CAUTION:
• Check the hose clip is positioned properly.
• Check the brake hose for twisting, or excessive tension.
• Do not subject the ABS wheel speed sensor harness to excessive tension.

4) Lower the vehicle and tighten wheel nut.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

5) Install the rear seat backrest and rear seat cushion. (Sedan model)
6) Install the strut cap to rear quarter trim. (Wagon model)

NOTE:
Check the wheel alignment and adjust if necessary.

C: DISASSEMBLY

For disassembly of rear strut, refer to procedures outlined under front strut as a guide. <Ref. to FS-21, DISASSEMBLY, Front Strut.>

D: ASSEMBLY

Refer to Front Strut as a guide for assembly procedures. <Ref. to FS-21, ASSEMBLY, Front Strut.>

E: INSPECTION

Refer to Front Strut as a guide for inspection procedures. <Ref. to FS-22, INSPECTION, Front Strut.>

F: DISPOSAL

Refer to Front Strut as a guide for disposal procedures. <Ref. to FS-23, DISPOSAL, Front Strut.>

6. Lateral link

A: REMOVAL

1) Loosen the wheel nuts. Lift-up the vehicle and remove wheel.
2) Remove the stabilizers.
3) Remove the ABS wheel speed sensor harness from trailing link.
4) Remove the bolt securing trailing link to rear housing.

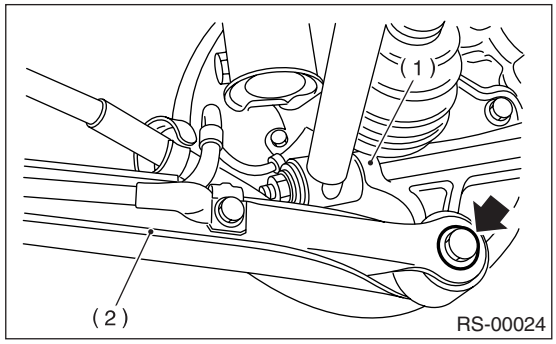

(1) Rear housing
(2) Trailing link

5) Remove the bolts which secure the lateral link assembly to rear housing.
6) Remove the DOJ from rear differential using ST. (T-type)
ST 28099PA100 DRIVE SHAFT REMOVER

NOTE:
The side spline shaft circlip comes out together with the shaft.

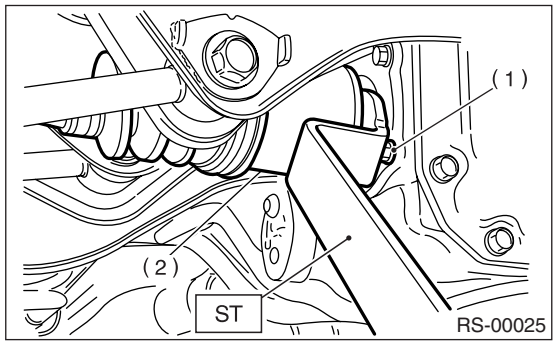

(1) Bolt
(2) DOJ

CAUTION:
Be careful not to damage the side bearing retainer. Always use bolt shown in the figure, as supporting point for ST during removal.

7) Remove the DOJ from rear differential using tire lever. (VA-type)

NOTE:
The side spline shaft circlip comes out together with the shaft.

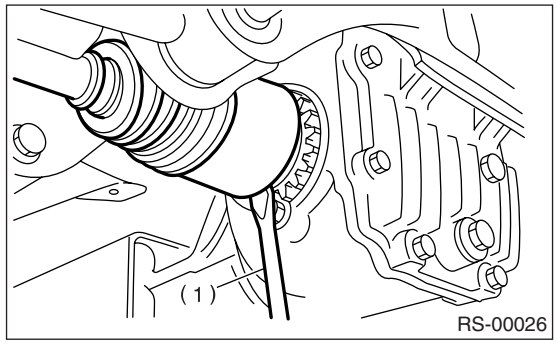

(1) Tire lever

CAUTION:
When removing the DOJ from rear differential, fit tire lever to the bolt as shown in the figure so as not to damage axle shaft holder.

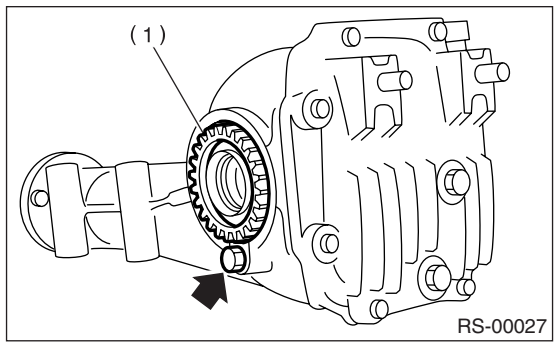

(1) Axle shaft holder

8) Scribe an alignment mark on the rear lateral link adjusting bolt and crossmember.
9) Remove the bolts securing front and rear lateral links to crossmember, detach lateral links.

CAUTION:
To loosen the adjusting bolt, always loosen the nut while holding head of adjusting bolt.

B: INSTALLATION

Install in the reverse order of removal. Observe the following instructions.

• Installation of DOJ to differential: <Ref. to DS-38, INSTALLATION, Rear Drive Shaft.>

CAUTION:

• Replace the self-locking nut and DOJ circlip with new ones.

• Always use the special tool not to allow the DOJ splines to damage the side oil seal.

ST 28099PA090 OIL SEAL PROTECTOR

• Always tighten the bushing location when tires are in full contact with the ground and vehicle is curb weight.

• Secure the bolt head and tighten the nut when installing the adjusting bolt.

NOTE:

Check the wheel alignment and adjust if necessary.

C: DISASSEMBLY

1) Using the following table as a guide, verify the type of bushings.

2) Select the ST according to type of bushings used.

Bushing	ST: INSTALLER & REMOVER SET
Bushing A	927700000
Bushing B	927690000
Bushing C	927700000
Bushing D	927710000

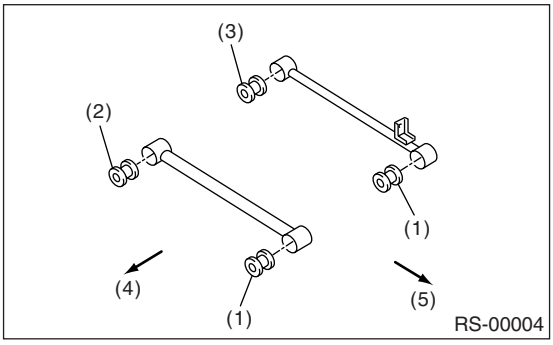

(1) Bushing A
(2) FWD: Bushing A, AWD: Bushing B
(3) FWD: Bushing D, AWD: Bushing C
(4) Front
(5) Outside of body

3) Using the ST, press the bushing out of place.

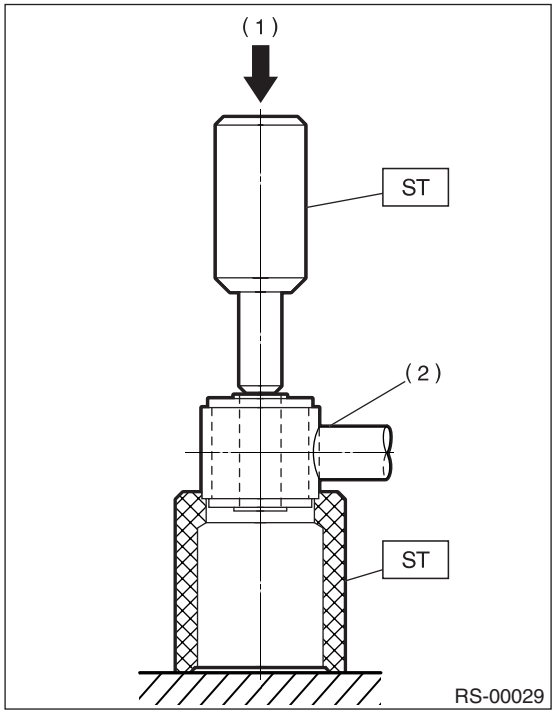

(1) Press
(2) Lateral link

D: ASSEMBLY

1) Use the same ST that was used during disassembly.

2) If it is difficult to press the bushing into trailing link, apply water-diluted TIRE LUBE to the inner surface of ST as a lubricant.

Specified lubricant:
TIRE LUBE: water = 1 : 3

3) Using the ST, press the bushing into place.

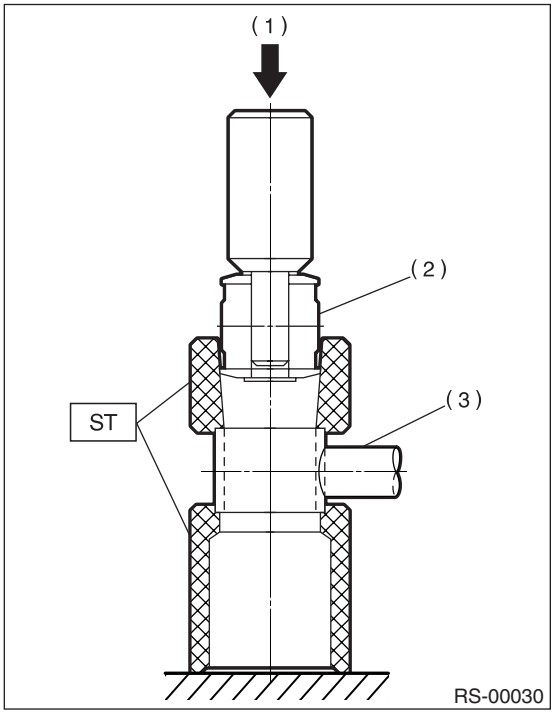

(1) Press
(2) Bushing
(3) Lateral link

4) Press the ST plunger until bushing flange protrudes beyond lateral link.

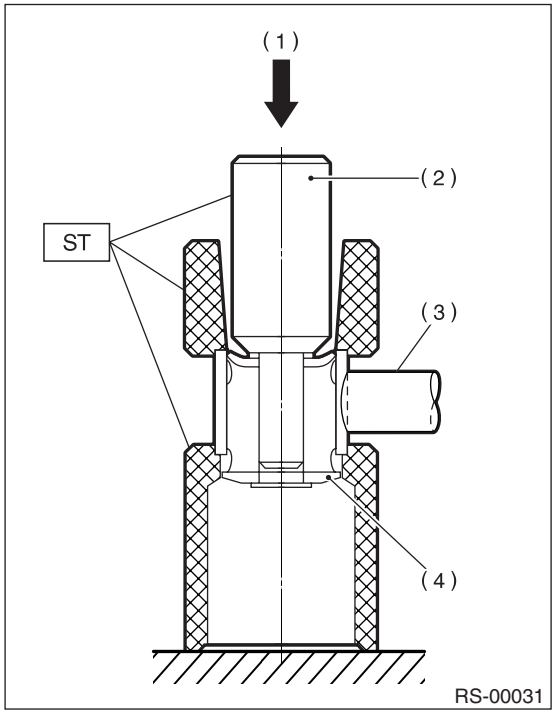

(1) Press
(2) Plunger
(3) Lateral link
(4) Flange

5) Turn the lateral link upside down. Press the ST plunger in opposite direction that outlined in the former procedure until bushing is correctly positioned in trailing link.

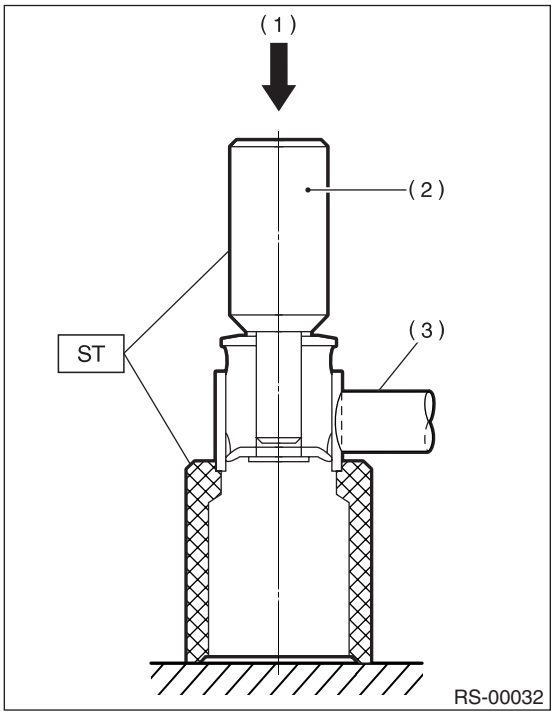

(1) Press
(2) Plunger
(3) Lateral link

E: INSPECTION

Visually check the lateral links for damage or bends.

7. Rear Crossmember

A: REMOVAL

1. AWD MODEL

CAUTION:
Do not subject the ABS wheel speed sensor harness to excessive tension. (Models equipped with ABS)

1) Separate the front exhaust pipe and rear exhaust pipe.
2) Remove the rear exhaust pipe and muffler.
3) Remove the rear differential.
T-type
<Ref. to DI-27, REMOVAL, Rear Differential for T-type.>
VA-type
<Ref. to DI-53, REMOVAL, Rear Differential for VA-type.>
4) Place the transmission jack under rear crossmember.

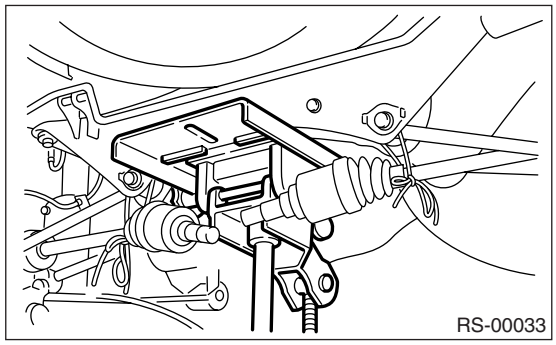
RS-00033

5) Remove the bolts securing crossmember to vehicle body, and then remove the crossmember.

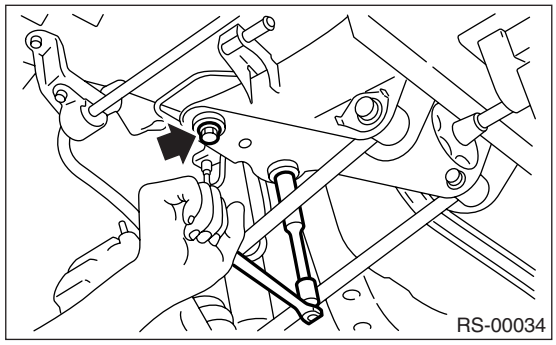
RS-00034

6) Scribe an alignment mark on the rear lateral link cam bolt and crossmember.
7) Remove the front and rear lateral links by loosening nuts.

2. FWD MODEL

1) Remove the bolts which secure the lateral link assembly to rear housing.
2) Remove the rear exhaust pipe and muffler.
3) Remove the heat shield cover.
4) Remove the bolt securing crossmember to body, and then remove the crossmember.

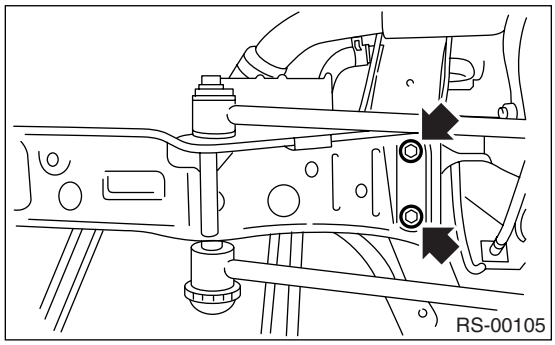
RS-00105

B: INSTALLATION

1. AWD MODEL

NOTE:
• Discard the loosened self-locking nut and replace it with a new one.
• Always secure the bolt head and tighten the nut when tightening the adjusting bolt.

1) Install in the reverse order of removal.
2) For installation and tightening torque of rear differential;
T-type
<Ref. to DI-28, INSTALLATION, Rear Differential for T-type.>
VA-type
<Ref. to DI-55, INSTALLATION, Rear Differential for VA-type.>
3) Always tighten the rubber bushing when tires are in full contact with the ground and vehicle is curb weight.
4) Check the wheel alignment and adjust if necessary.

2. FWD MODEL

NOTE:
• Discard the loosened self-locking nut and replace it with a new one.
• Always secure the bolt head and tighten the nut when tightening adjusting bolt.

1) Install in the reverse order of removal.
2) Always tighten the rubber bushing when tires are in full contact with the ground and vehicle is curb weight.
3) Check the wheel alignment and adjust if necessary.

C: INSPECTION

Check the removed parts for wear, damage and cracks, and correct or replace if defective.

8. General Diagnostic Table

A: INSPECTION

1. IMPROPER VEHICLE POSTURE OR IMPROPER WHEEL ARCH HEIGHT

Possible causes	Countermeasures
(1) Permanent distortion or breakage of coil spring	Replace.
(2) Unsmooth operation of damper strut or shock absorber	Replace.
(3) Installation of wrong strut or shock absorber	Replace with proper parts.
(4) Installation of wrong coil spring	Replace with proper parts.

2. POOR RIDE COMFORT

1) Large rebound shock
2) Rocking of the vehicle continues too long after running over bump and/or hump
3) Large shock in bumping

Possible causes	Countermeasures
(1) Breakage of coil spring	Replace.
(2) Overinflating pressure of tire	Adjust.
(3) Improper wheel arch height	Adjust or replace the coil springs with new ones.
(4) Fault in operation of damper strut or shock absorber	Replace.
(5) Damage or deformation of strut mount or shock absorber mount	Replace.
(6) Unsuitability of maximum or minimum length of damper strut or shock absorber	Replace with proper parts.
(7) Deformation or loss of bushing	Replace.
(8) Deformation or damage of helper in strut assembly or shock absorber	Replace.
(9) Oil leakage of damper strut or shock absorber	Replace.

3. NOISE

Possible causes	Countermeasures
(1) Wear or damage of damper strut or shock absorber component parts	Replace.
(2) Loosening of suspension link installing bolt	Retighten to the specified torque.
(3) Deformation or loss of bushing	Replace.
(4) Unsuitability of maximum or minimum length of damper strut or shock absorber	Replace with proper parts.
(5) Breakage of coil spring	Replace.
(6) Wear or damage of ball joint	Replace.
(7) Deformation of stabilizer clamp	Replace.

WHEEL AND TIRE SYSTEM

WT

		Page
1.	General Description	2
2.	Tire	4
3.	Steel Wheel	5
4.	Aluminum Wheel	6
5.	Wheel Balancing	7
6.	“T-type” Tire	8
7.	Full Wheel Cap	9
8.	General Diagnostics Table	10

1. General Description

A: SPECIFICATIONS

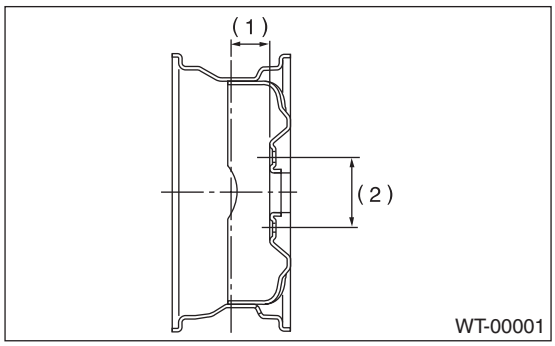

(1) Offset
(2) P.C.D.

Specifications		Tire size	Rim size	Rim offset mm (in)	P.C.D. mm (in)
Front and rear	BASE, TS	185/70R14 88H	14 × 5 1/2JJ	55 (2.17)	100 (3.94)
	GX	195/60R15 88H	15 × 6JJ		
	RS	205/50R16 87V	16 × 6 1/2JJ		
	WRX	215/45R17 87W	17 × 7JJ		
	STi	225/45R17 90W	17 × 7 1/2JJ	53 (2.09)	
T-type tire		T125/70D15 95M	15 × 4T	53 (2.09)	
		T135/70D16 100M	16 × 4T	50 (1.97)	
		T135/70D17 102M	17 × 4T	40 (1.57)	

Specifications		Tire size	Tire air pressure kPa (kgf/cm^2, psi)	
			Light load	Full load
Front and rear	BASE, TS	185/70R14 88H	Fr : 220 (2.2, 32) Rr : 200 (2.0, 29)	Fr : 220 (2.2, 32) Rr : 220 (2.2, 32)
	GX	195/60R15 88H		
	RS	205/50R16 87V	Fr : 220 (2.2, 32) Rr : 200 (2.0, 29)	
	WRX	215/45R17 87W	Fr : 230 (2.3, 33) Rr : 220 (2.2, 32)	
	STi	225/45R17 90W	Fr : 230 (2.3, 33) Rr : 190 (1.9, 28)	
T-type tire		T125/70D15 95M	420 (4.2, 60)	
		T135/70D16 100M		
		T135/70D17 102M		

NOTE:
- “T-type” tire for temporary use is supplied as a spare tire.
- At trailer towing, rear inflation pressure is 250 kPa (2.5 kgf/cm^2, 36 psi).

1. SERVICE DATA

Item	Axial runout	Radial runout
Steel wheel	1.5 mm (0.059 in)	
Aluminum wheel	1.0 mm (0.039 in)	

2. ADJUSTING PARTS

Wheel balance	Standard	Service limit
Dynamic unbalance	Less than 5 g (0.18 oz)	

Balance weight part number (For steel wheel)	Weight
28101TC000	5 g (0.18 oz)
28101SA060	10 g (0.35 oz)
28101SA070	15 g (0.53 oz)
28101SA080	20 g (0.71 oz)
28101SA090	25 g (0.88 oz)
723141340	30 g (1.06 oz)
723141350	35 g (1.23 oz)
723141360	40 g (1.41 oz)
723141370	45 g (1.59 oz)
723241380	50 g (1.76 oz)
723241580	55 g (1.94 oz)
723241590	60 g (2.12 oz)

Balance weight part number (For aluminum wheel)	Weight
28101SA000	5 g (0.18 oz)
28101SA010	10 g (0.35 oz)
28101SA020	15 g (0.53 oz)
28101SA030	20 g (0.71 oz)
28101SA040	25 g (0.88 oz)
23141GA512	30 g (1.06 oz)
23141GA522	35 g (1.23 oz)
23141GA532	40 g (1.41 oz)
23141GA542	45 g (1.59 oz)
23141GA552	50 g (1.76 oz)
—	55 g (1.94 oz)
23141GA572	60 g (2.12 oz)

B: PREPARATION TOOL

1. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Air pressure gauge	Used for measuring tire air pressure.
Dial gauge	Used for measuring wheel runout.

2. Tire

A: INSPECTION

1) Take stone, glass, nail etc. off from tread groove.
2) Replace the tire if as follows.

CAUTION:
When replacing a tire, make sure to use only the same size, construction and load range tire as originally installed.

(1) When a large crack on the side wall, damage or a crack on tread are found.
(2) When the “tread wear indicator” appears as a solid band across the tread.

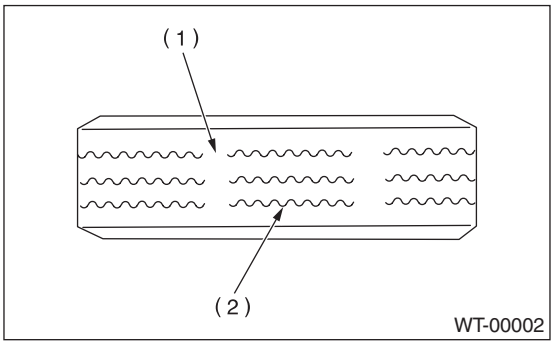

(1) Tread wear indicator
(2) Tire tread

3) When a crack on tire valve is found, replace the tire valve.

1. TIRE ROTATION

Rotate tires periodically (10,000 km/6,200 miles) as shown in the figure, in order to prevent them from uneven wear and to prolong their life.

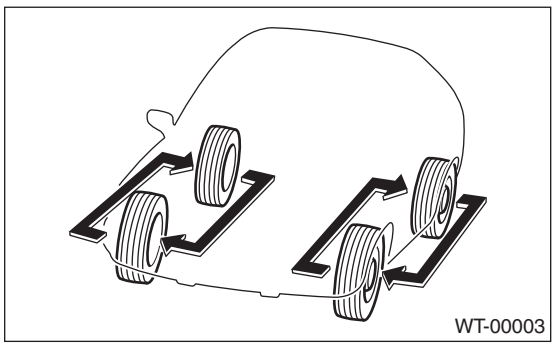

3. Steel Wheel

A: REMOVAL

1) Apply parking brake, and position the select lever to “P” or “LOW”.
2) Set jacks or a lift to the specified point, and support the vehicle with its wheels slightly contacting the floor.
3) Loosen the wheel nuts.
4) Raise the vehicle until its wheels take off the ground using a jack or a lift.
5) Remove the wheel nuts and wheels.

NOTE:
• While removing the wheels, prevent the hub bolts from damage.
• Place the wheels with their outer sides facing upward to prevent the wheels from damage.

B: INSTALLATION

1) Remove dirt from the mating surface of wheel and brake rotor.
2) Attach the wheel to hub by aligning the wheel bolt hole with hub bolt.
3) Temporarily attach the wheel nuts to hub bolts. (In the case of aluminum wheel, use SUBARU genuine wheel nut for aluminum wheel.)
4) Manually tighten the nuts making sure the wheel hub hole is aligned correctly to guide portion of hub.
5) Tighten the wheel nuts in a diagonal selection to specified torque. Use a wheel nut wrench.

Wheel nut tightening torque:
90 N·m (9.1 kgf-m, 65.7 ft-lb)

CAUTION:
• Tighten the wheel nuts in two or three steps by gradually increasing the torque and working diagonally, until the specified torque is reached. For drum brake models, excess tightening of wheel nuts may cause wheels to “judder”.
• Do not depress the wrench with foot; Always use both hands when tightening.
• Make sure the bolt, nut and nut seating surface of the wheel are free from oils.

6) If a wheel is removed for replacement or for repair of a puncture, retighten the wheel nuts to the specified torque after running 1,000 km (600 miles).

C: INSPECTION

1) Deformation or damage on the rim can cause air leakage. Check the rim flange for deformation, crack or damage, and repair or replace as necessary.
2) Jack-up the vehicle until wheels clear the floor.
3) Slowly rotate the wheel to check the rim “runout” using a dial gauge.

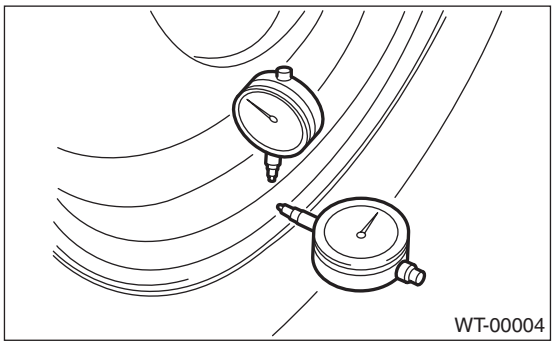

Axial runout limit	Radial runout limit
1.5 mm (0.059 in)	

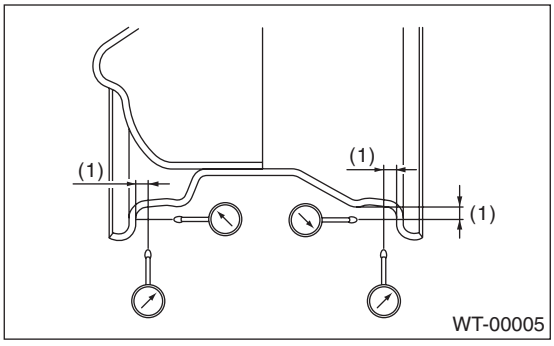

(1) Approx. 7 mm (0.28 in)

4) If the rim runout exceeds specifications, remove the tire from rim and check runout while attaching the dial gauge to positions shown in the figure.
5) If the measured runout still exceeds specifications, replace the wheel.

4. Aluminum Wheel

A: REMOVAL

Refer to Steel Wheel for removal procedure of aluminum wheels. <Ref. to WT-5, REMOVAL, Steel Wheel.>

B: INSTALLATION

Refer to Steel Wheel for installation procedure of aluminum wheels.<Ref. to WT-5, INSTALLATION, Steel Wheel.>

C: INSPECTION

Refer to Steel Wheel for inspection procedure of aluminum wheels. <Ref. to WT-5, INSPECTION, Steel Wheel.>

Rim runout:

Axial runout limit	Radial runout limit
1.0 mm (0.039 in)	

D: CAUTION

Aluminum wheels are easily scratched. To maintain their appearance and safety, do the following:
1) Do not damage the aluminum wheels during removal, installation, wheel balancing, etc. After removing the aluminum wheels, place them on a rubber mat, etc.
2) While the vehicle is being driven, be careful not to ride over sharp obstacles or allow the aluminum wheels to contact the shoulder of road.
3) When installing a tire chain, be sure to install it properly not to have slack; otherwise it may hit the wheel while driving.
4) When washing the aluminum wheel, use neutral synthetic detergent and water. Avoid using the cleanser including abrasive, hard brushes or an automatic car washer.

5. Wheel Balancing

A: REPLACEMENT

1) Remove the balance weights.
2) Using wheel balancer, measure the wheel balance.
3) Select a weight close to the value measured by wheel balancer.

Balance weight part number (For steel wheel)	Weight
28101TC000	5 g (0.18 oz)
28101SA060	10 g (0.35 oz)
28101SA070	15 g (0.53 oz)
28101SA080	20 g (0.71 oz)
28101SA090	25 g (0.88 oz)
723141340	30 g (1.06 oz)
723141350	35 g (1.23 oz)
723141360	40 g (1.41 oz)
723141370	45 g (1.59 oz)
723241380	50 g (1.76 oz)
723241580	55 g (1.94 oz)
723241590	60 g (2.12 oz)

Balance weight part number (For aluminum wheel)	Weight
28101SA000	5 g (0.18 oz)
28101SA010	10 g (0.35 oz)
28101SA020	15 g (0.53 oz)
28101SA030	20 g (0.71 oz)
28101SA040	25 g (0.88 oz)
23141GA512	30 g (1.06 oz)
23141GA522	35 g (1.23 oz)
23141GA532	40 g (1.41 oz)
23141GA542	45 g (1.59 oz)
23141GA552	50 g (1.76 oz)
—	55 g (1.94 oz)
23141GA572	60 g (2.12 oz)

4) Install the selected weight to the point designated by wheel balancer.
5) Using wheel balancer, measure the wheel balance again. Check the wheel balance is correctly adjusted.

B: INSPECTION

1) Proper wheel balance may be lost if the tire is repaired or if it wears. Check the tire for dynamic balance, and repair as necessary.
2) To check for dynamic balance, use a wheel balancer. Drive in the balance weight on both the top and rear sides of rim.
3) Some types of balancer can cause damage to the wheel. Use an appropriate balancer when adjusting the wheel balance.
4) Use genuine balance weights.

NOTE:
• 55 g (1.94 oz) weight used with the aluminum wheel is not available.
• Balance weights are available for use with any of 14- to 16-inch wheels.

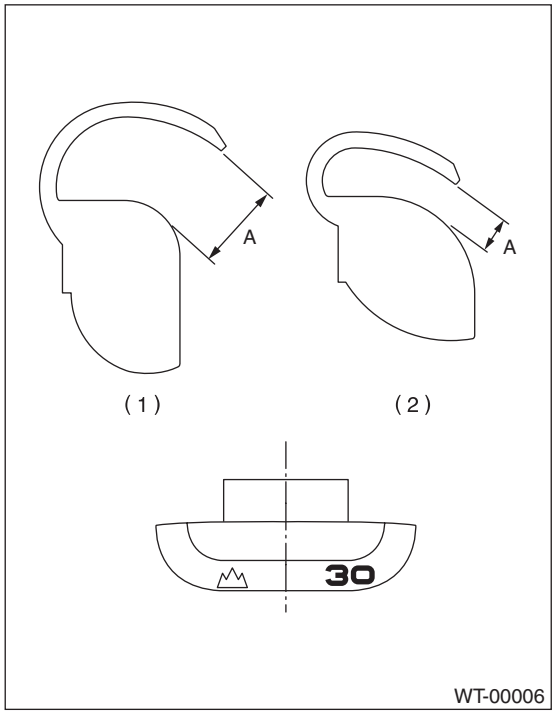

(1) Weight for aluminum wheel
(2) Weight for steel wheel

Service limit: A
Weight for steel wheel;
5 g (0.18 oz) — 25 g (0.88 oz) 2.0 mm (0.08 in)
30 g (1.06 oz) or more 1.8 mm (0.07)
Weight for aluminum wheel;
5 g (0.18 oz) — 25 g (0.88 oz) 5.0 mm (0.20 in)
30 g (1.06 oz) or more 4.5 mm (0.177 in)

6. "T-type" Tire

A: NOTE

"T-type" tire for temporary use is prepared as a spare tire.

CAUTION:
• Do not use a tire chain with the "T-type" tire. Because of the smaller tire size, a tire chain will not fit properly and will result in damage to the vehicle and the tire.
• Do not drive at a speed greater than 80 km/h (50 MPH).
• Drive as slowly as possible and avoid passing over bumps.

B: REPLACEMENT

Refer to Removal and Installation of Steel Wheel for removal/installation of "T-type" tires. <Ref. to WT-5, Steel Wheel.>

CAUTION:
Replace with a conventional tire as soon as possible since the "T-type" tire is only for temporary use.

C: INSPECTION

1) Check the tire inflation pressure.

Specification:
420 kPa (4.2 kg/cm^2, 60 psi)

2) Take stones, glass, nails, etc. out of the tread groove.
3) Check the tires for deformation, cracks, partial or over limit wear.

CAUTION:
Replace the tire with a new one.

7. Full Wheel Cap

A: REMOVAL

Pry off the full wheel cap with a wheel cap remover inserted between openings on cap.

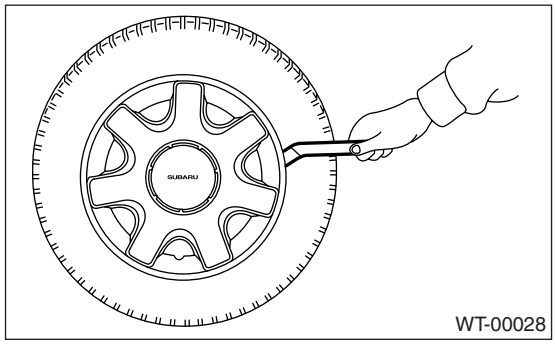

B: INSTALLATION

Align the valve hole in wheel cap with the valve on wheel and secure the wheel cap by tapping four points by hand.

C: INSPECTION

1) Check the wheels for missing wheel caps.
2) Check the pawls of wheel caps for damage or bend.
3) Check the wheel caps for cracks.

8. General Diagnostics Table

A: INSPECTION

Symptom	Possible cause	Remedy
Front wheel shimmy	Worn or improperly inflated tire.	In case of worn tire, replace the tire. In case of improperly inflated tire, adjust the tire air pressure properly.
	Wheel is out of balance.	Adjustment
Abnormal tire wear	Improperly inflated tire.	Replace
Sways/pitches	Worn or improperly inflated tire.	In case of worn tire, replace the tire. In case of improperly inflated tire, adjust the tire air pressure properly.
Wander/pulls	Worn or improperly inflated tire.	In case of worn tire, replace the tire. In case of improperly inflated tire, adjust the tire air pressure properly.

DIFFERENTIALS

DI

		Page
1.	General Description	2
2.	Differential Gear Oil	25
3.	Front Differential	26
4.	Rear Differential for T-type	27
5.	Rear Differential for VA-type	53
6.	Rear Differential Front Oil Seal	69
7.	Rear Differential Side Oil Seal	71
8.	Rear Differential Member	76
9.	General Diagnostic Table	77

1. General Description

A: SPECIFICATIONS

When replacing a rear differential assembly, select the correct one according to the following table.

NOTE:
Using the different rear differential assembly causes the drive line and tires to “drag” or emit abnormal noise when AWD is selected.

MODEL	1.6 L		2.0 L	
	AT	MT	AT	MT
Rear differential type	VA-type model without LSD			T-type model without LSD
Identification	XP	XN		EG
Type of gear	Hypoid gear			
Gear ratio (Number of gear teeth)	4.444 (40/9)	4.111 (37/9)		3.900 (39/10)
Oil capacity	0.8 ℓ (0.8 US qt, 0.7 Imp qt)			
Rear differential gear oil	GL-5			

MODEL	2.5 L			2.0 L Turbo	
	AT	MT		AT	MT
		Except Australia	Australia		Except Australia / Australia
Rear differential type	T-type model with LSD				
LSD type	Viscous coupling				SURETRAC®
Identification	EJ	ER	EJ	EF	EM
Type of gear	Hypoid gear				
Gear ratio (Number of gear teeth)	4.111 (37/9)	3.700 (37/10)	4.111 (37/9)	3.545 (39/11)	4.444 (40/9)
Oil capacity	0.8 ℓ (0.8 US qt, 0.7 Imp qt)				
Rear differential gear oil	GL-5				

MODEL	2.0 L Turbo STi	
	6MT (Viscous LSD)	
	Except Australia	Australia
Rear differential type	T-type model with LSD	
LSD type	SURETRAC®	
Identification	HJ	HG
Type of gear	Hypoid gear	
Gear ratio (Number of gear teeth)	3.545 (39/11)	3.900 (39/10)
Oil capacity	0.9 — 1.1 ℓ (1.0 — 1.2 US qt, 0.8 — 1.0 Imp qt)	
Rear differential gear oil	GL-5	

- **Identification**

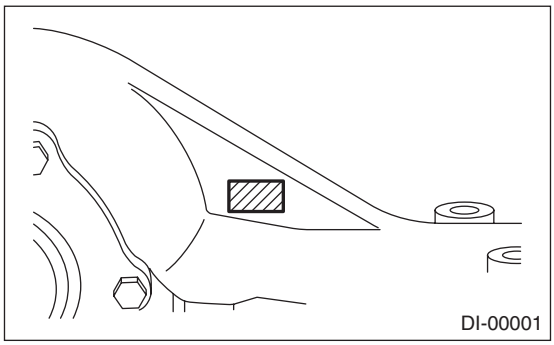

- **Rear differential gear oil**

Recommended oil

CAUTION:
Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

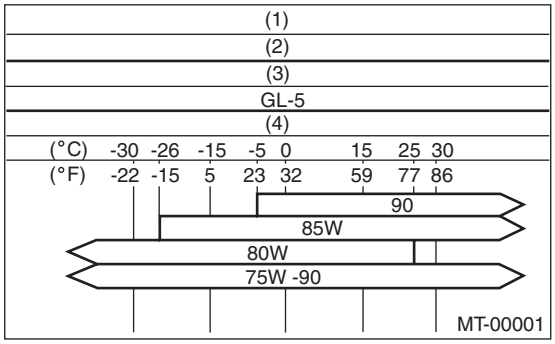

(1) Item
(2) Differential gear oil
(3) API Classification
(4) SAE Viscosity NO. and Application Temperature

1. SERVICE DATA

Front and rear bearing preload at companion flange bolt hole N (kgf, lb)	New bearing	T-type	Except STi model	18.1 — 38.8 (1.8 — 4.0, 4.1 — 8.7)
			STi model	25.9 — 41.5 (2.6 — 4.2, 5.8 — 9.3)
		VA-type		12.7 — 32.4 (1.3 — 3.3, 2.9 — 7.3)
Side gear backlash mm (in)		T-type		0.10 — 0.20 (0.0039 — 0.0079)
		VA-type		0.05 — 0.15 (0.0020 — 0.0059)
Side bearing standard width mm (in)				20.00 (0.7874)
Crown gear to drive pinion backlash mm (in)		T-type		0.10 — 0.20 (0.0039 — 0.0079)
		VA-type		0.10 — 0.15 (0.0039 — 0.0059)
Crown gear runout on its back surface mm (in)				Less than 0.05 (0.0020)

2. ADJUSTING PARTS

• VA-type

Front and rear bearing preload at companion flange bolt hole N (kgf, lb)	New bearing	12.7 — 32.4 (1.3 — 3.3, 2.9 — 7.3)
Preload adjusting spacer	Part No.	Length mm (in)
	32288AA040	52.3 (2.059)
	32288AA050	52.5 (2.067)
	31454AA100	52.6 (2.071)
	32288AA060	52.7 (2.075)
	31454AA110	52.8 (2.079)
	32288AA070	52.9 (2.083)
	31454AA120	53.0 (2.087)
	32288AA080	53.1 (2.091)
	32288AA090	53.3 (2.098)
Preload adjusting washer	Part No.	Thickness mm (in)
	38336AA000	1.500 (0.0591)
	38336AA120	1.513 (0.0596)
	38336AA010	1.525 (0.0600)
	38336AA130	1.538 (0.0606)
	38336AA020	1.550 (0.0610)
	38336AA140	1.563 (0.0615)
	38336AA030	1.575 (0.0620)
	38336AA150	1.588 (0.0625)
	38336AA040	1.600 (0.0630)
	38336AA160	1.613 (0.0635)
	38336AA050	1.625 (0.0640)
	38336AA170	1.638 (0.0645)
	38336AA060	1.650 (0.0650)
	38336AA180	1.663 (0.0655)
	38336AA070	1.675 (0.0659)
	38336AA190	1.688 (0.0665)
	38336AA080	1.700 (0.0669)
	38336AA200	1.713 (0.0674)
	38336AA090	1.725 (0.0679)
	38336AA210	1.738 (0.0684)
	38336AA100	1.750 (0.0689)
	38336AA220	1.763 (0.0694)
	38336AA110	1.775 (0.0699)
Pinion height adjusting shim	Part No.	Thickness mm (in)
	32295AA200	0.150 (0.0059)
	32295AA210	0.175 (0.0069)
	32295AA220	0.200 (0.0079)
	32295AA230	0.225 (0.0089)
	32295AA240	0.250 (0.0098)
	32295AA250	0.275 (0.0108)
Side gear backlash mm (in)	0.05 — 0.15 (0.0020 — 0.0059)	

Side gear thrust washer	803135011	0.925 — 0.950 (0.0364 — 0.0374)
	803135012	0.950 — 0.975 (0.0374 — 0.0384)
	803135013	0.975 — 1.000 (0.0384 — 0.0394)
	803135014	1.000 — 1.025 (0.0394 — 0.0404)
	803135015	1.025 — 1.050 (0.0404 — 0.0413)
Crown gear to drive pinion backlash mm (in)	Limit	0.10 — 0.15 (0.0039 — 0.0059)
Crown gear runout on its back surface mm (in)		0.05 (0.0020)

• T-type

Front and rear bearing preload at companion flange bolt hole N (kgf, lb)	New bearing	18.1 — 38.8 (1.8 — 4.0, 4.1 — 8.7)
Preload adjusting spacer	Part No.	Length mm (in)
	383695201	56.2 (2.213)
	383695202	56.4 (2.220)
	383695203	56.6 (2.228)
	383695204	56.8 (2.236)
	383695205	57.0 (2.244)
	383695206	57.2 (2.252)
Preload adjusting washer	Part No.	Length mm (in)
	383705200	2.59 (0.1020)
	383715200	2.57 (0.1012)
	383725200	2.55 (0.1004)
	383735200	2.53 (0.0996)
	383745200	2.51 (0.0988)
	383755200	2.49 (0.0980)
	383765200	2.47 (0.0972)
	383775200	2.45 (0.0965)
	383785200	2.43 (0.0957)
	383795200	2.41 (0.0949)
	383805200	2.39 (0.0941)
	383815200	2.37 (0.0933)
	383825200	2.35 (0.0925)
	383835200	2.33 (0.0917)
	383845200	2.31 (0.0909)

Pinion height adjusting shim	Part No.	Thickness mm (in)
	383495200	3.09 (0.1217)
	383505200	3.12 (0.1228)
	383515200	3.15 (0.1240)
	383525200	3.18 (0.1252)
	383535200	3.21 (0.1264)
	383545200	3.24 (0.1276)
	383555200	3.27 (0.1287)
	383565200	3.30 (0.1299)
	383575200	3.33 (0.1311)
	383585200	3.36 (0.1323)
	383595200	3.39 (0.1335)
	383605200	3.42 (0.1346)
	383615200	3.45 (0.1358)
	383625200	3.48 (0.1370)
	383635200	3.51 (0.1382)
	383645200	3.54 (0.1394)
	383655200	3.57 (0.1406)
	383665200	3.60 (0.1417)
	383675200	3.63 (0.1429)
	383685200	3.66 (0.1441)
Side gear backlash mm (in)	0.1 — 0.2 (0.0039 — 0.0079)	
Side gear thrust washer (Model without LSD)	Part No.	Thickness mm (in)
	383445201	0.75 — 0.80 (0.0295 — 0.0315)
	383445202	0.80 — 0.85 (0.0315 — 0.0335)
	383445203	0.85 — 0.90 (0.0335 — 0.0354)
Side bearing standard width mm (in)	—	20.00 (0.7874)
Side bearing retainer shim	Part No.	Thickness mm (in)
	383475201	0.20 (0.0079)
	383475202	0.25 (0.0098)
	383475203	0.30 (0.0118)
	383475204	0.40 (0.0157)
	383475205	0.50 (0.0197)
Crown gear to drive pinion backlash mm (in)	Limit	0.10 — 0.20 (0.0039 — 0.0079)
Crown gear runout on its back surface mm (in)		0.05 (0.0020)

• STi model

Front and rear bearing preload at companion flange bolt hole N (kgf, lb)	25.9 — 41.5 (2.6 — 4.2, 5.8 — 9.3)	
Preload adjusting spacer	Part No.	Length mm (in)
	31454AA130	52.2 (2.055)
	31454AA140	52.4 (2.063)
	31454AA150	52.6 (2.071)
	31454AA160	52.8 (2.079)
	31454AA170	53.0 (2.087)
	31454AA180	53.2 (2.094)

Preload adjusting washer	Part No.	Length mm (in)
	383705200	2.59 (0.1020)
	383715200	2.57 (0.1012)
	383725200	2.55 (0.1004)
	383735200	2.53 (0.0996)
	383745200	2.51 (0.0988)
	383755200	2.49 (0.0980)
	383765200	2.47 (0.0972)
	383775200	2.45 (0.0965)
	383785200	2.43 (0.0957)
	383795200	2.41 (0.0949)
	383805200	2.39 (0.0941)
	383815200	2.37 (0.0933)
	383825200	2.35 (0.0925)
	383835200	2.33 (0.0917)
	383845200	2.31 (0.0909)
Pinion height adjusting shim	Part No.	Length mm (in)
	38336AA230	3.09 (0.1217)
	38336AA240	3.12 (0.1228)
	38336AA250	3.15 (0.1240)
	38336AA260	3.18 (0.1252)
	38336AA270	3.21 (0.1264)
	38336AA280	3.24 (0.1276)
	38336AA290	3.27 (0.1287)
	38336AA300	3.30 (0.1299)
	38336AA310	3.33 (0.1311)
	38336AA320	3.36 (0.1323)
	38336AA330	3.39 (0.1335)
	38336AA340	3.42 (0.1346)
	38336AA350	3.45 (0.1358)
	38336AA360	3.48 (0.1370)
	38336AA370	3.51 (0.1382)
	38336AA380	3.54 (0.1394)
	38336AA390	3.57 (0.1406)
	38336AA400	3.60 (0.1417)
	38336AA410	3.63 (0.1429)
	38336AA420	3.66 (0.1441)
Side bearing standard width mm (in)	20.00 (0.7874)	
Side bearing retainer shim	Part No.	Thickness mm (in)
	383475201	0.20 (0.0079)
	383475202	0.25 (0.0098)
	383475203	0.30 (0.0118)
	383475204	0.40 (0.0157)
	383475205	0.50 (0.0197)
Crown gear to drive pinion backlash mm (in)	Limit	0.10 — 0.20 (0.0039 — 0.0079)
Crown gear runout on its back surface mm (in)		0.05 (0.0020)

B: COMPONENT

1. REAR DIFFERENTIAL FOR T-TYPE WITHOUT LSD

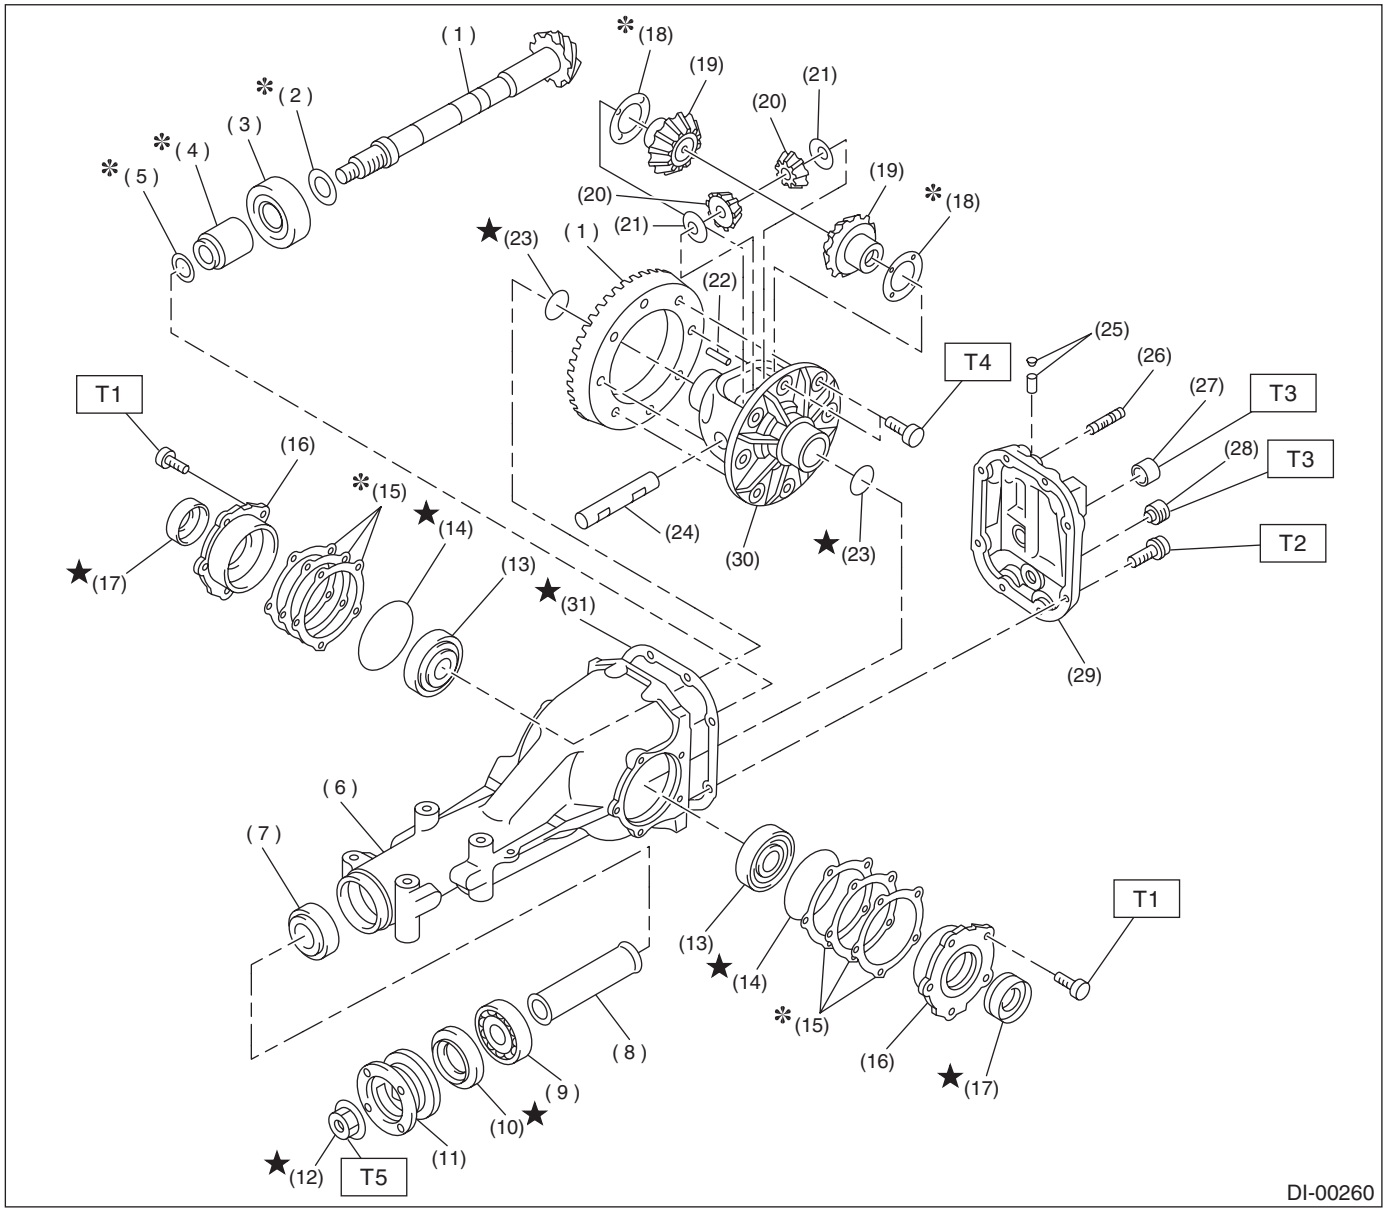

(1) Pinion crown gear and drive pinion set
(2) Pinion height adjusting shim
(3) Rear bearing
(4) Bearing preload adjusting spacer
(5) Bearing preload adjusting washer
(6) Differential carrier
(7) Front bearing
(8) Spacer
(9) Pilot bearing
(10) Front oil seal
(11) Companion flange
(12) Self-locking nut
(13) Side bearing
(14) O-ring
(15) Side bearing retainer shim
(16) Side bearing retainer
(17) Side oil seal
(18) Side gear thrust washer
(19) Side gear
(20) Pinion mate gear
(21) Pinion mate gear washer
(22) Pinion shaft lock pin
(23) Circlip
(24) Pinion mate shaft
(25) Air breather cap
(26) Stud bolt
(27) Oil filler plug
(28) Oil drain plug
(29) Rear cover
(30) Differential case
(31) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 10.3 (1.05, 7.6)
T2: 29 (3.0, 21.7)
T3: 49 (5.0, 36.2)
T4: 105 (10.7, 77.4)
T5: 181 (18.5, 134)

2. REAR DIFFERENTIAL FOR T-TYPE WITH LSD

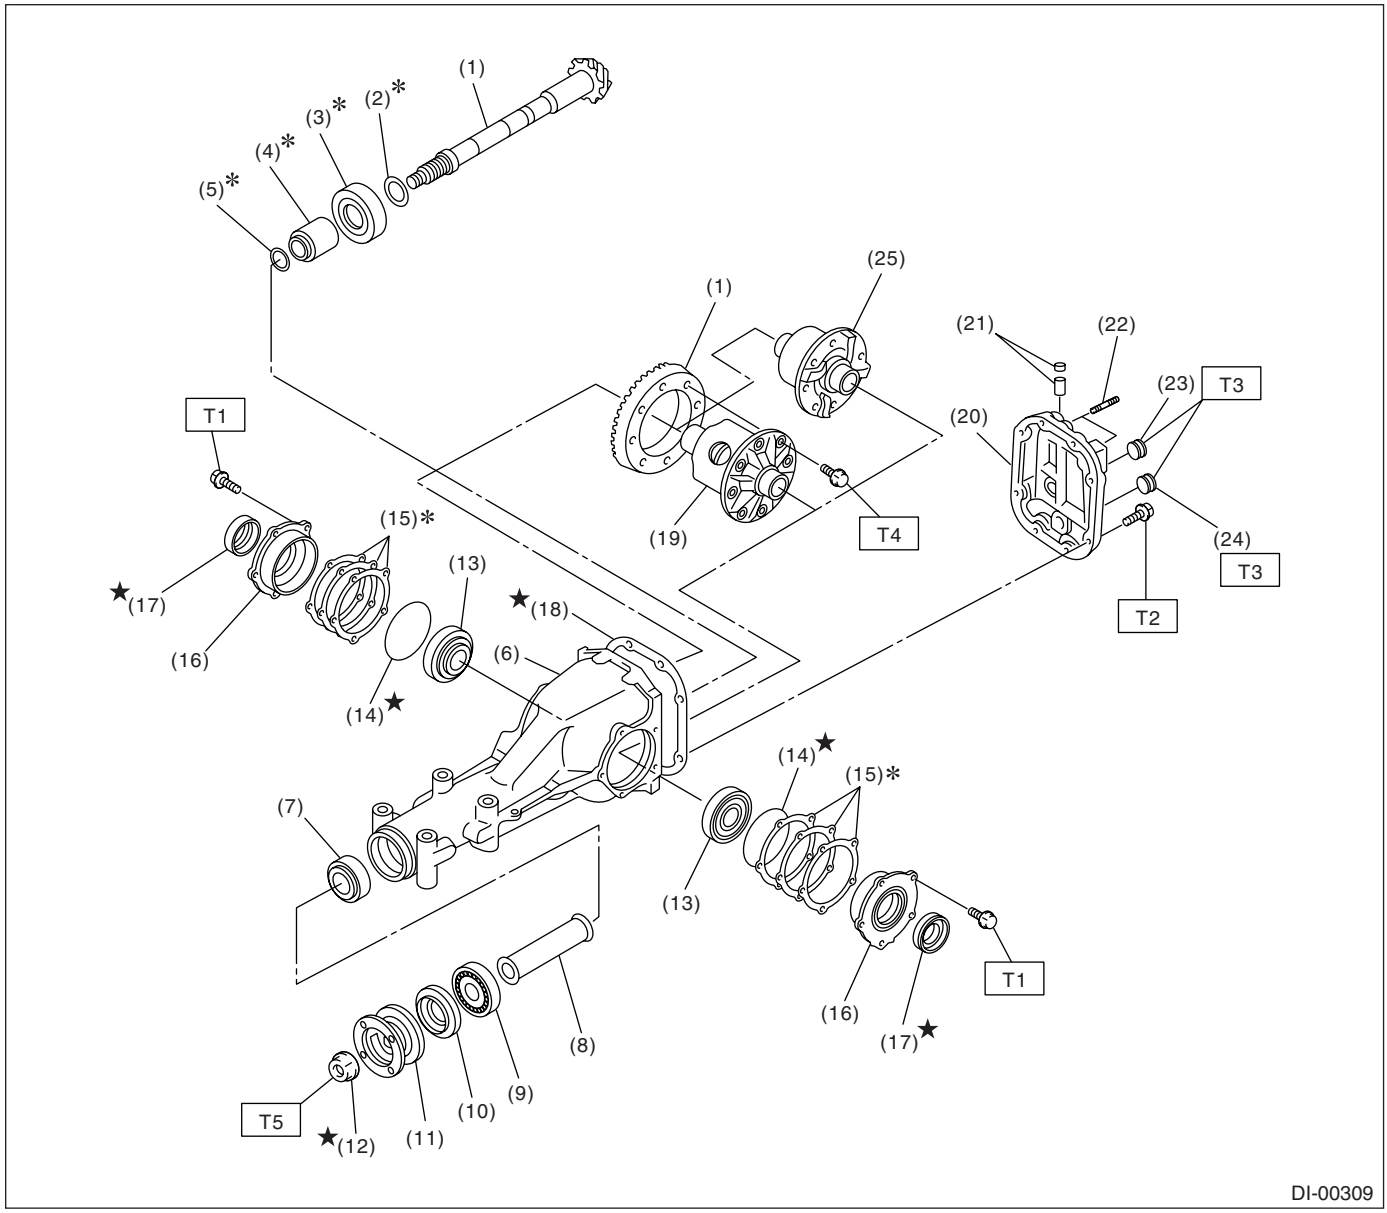

(1) Pinion crown gear and drive pinion set
(2) Pinion height adjusting shim
(3) Rear bearing
(4) Bearing preload adjusting spacer
(5) Bearing preload adjusting washer
(6) Differential carrier
(7) Front bearing
(8) Collar
(9) Pilot bearing
(10) Front oil seal
(11) Companion flange
(12) Self-locking nut
(13) Side bearing
(14) O-ring
(15) Side bearing retainer shim
(16) Side bearing retainer
(17) Side oil seal
(18) Gasket
(19) Differential case (Viscous coupling type)
(20) Rear cover
(21) Air breather cap
(22) Stud bolt
(23) Oil filler plug
(24) Oil drain plug
(25) Differential case (SURETRAC® type)

Tightening torque: N·m (kgf-m, ft-lb)

T1: 10.3 (1.05, 7.6)
T2: 29 (3.0, 21.7) (Except for STi model)
44 (4.5, 32.5) (STi model)
T3: 49 (5.0, 36.2)
T4: 105 (10.7, 77.4)
T5: 181 (18.5, 134)

3. REAR DIFFERENTIAL FOR VA-TYPE

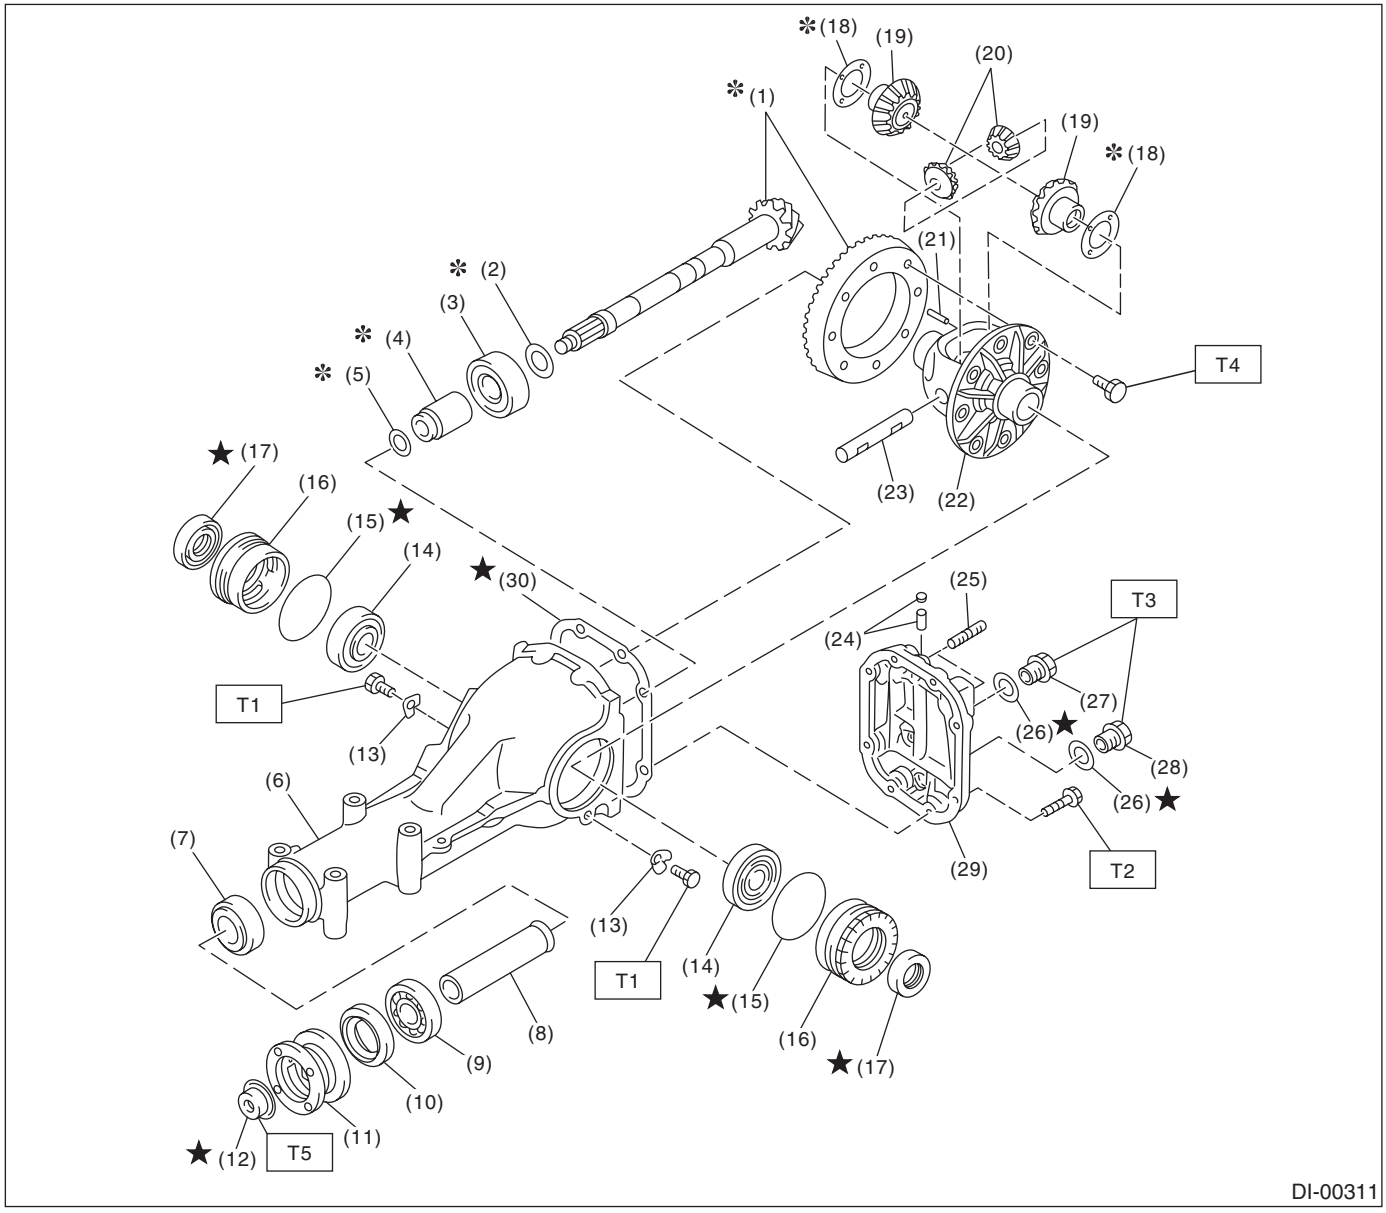

(1) Pinion crown gear and drive pinion set
(2) Pinion height adjusting shim
(3) Rear bearing
(4) Bearing preload adjusting spacer
(5) Bearing preload adjusting washer
(6) Differential carrier
(7) Front bearing
(8) Collar
(9) Pilot bearing
(10) Front oil seal
(11) Companion flange
(12) Self-locking nut
(13) Lock plate
(14) Side bearing
(15) O-ring
(16) Axle shaft holder
(17) Side oil seal
(18) Side gear thrust washer
(19) Side gear
(20) Pinion mate gear
(21) Pinion shaft lock pin
(22) Differential case
(23) Pinion mate shaft
(24) Air breather cap
(25) Stud bolt
(26) Gasket
(27) Oil filler plug
(28) Oil drain plug
(29) Rear cover
(30) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 25 (2.5, 18.1)
T2: 25 (2.5, 18.1)
T3: 34 (3.5, 25.3)
T4: 62 (6.3, 45.6)
T5: 191 (19.5, 141)

4. REAR DIFFERENTIAL MOUNTING SYSTEM

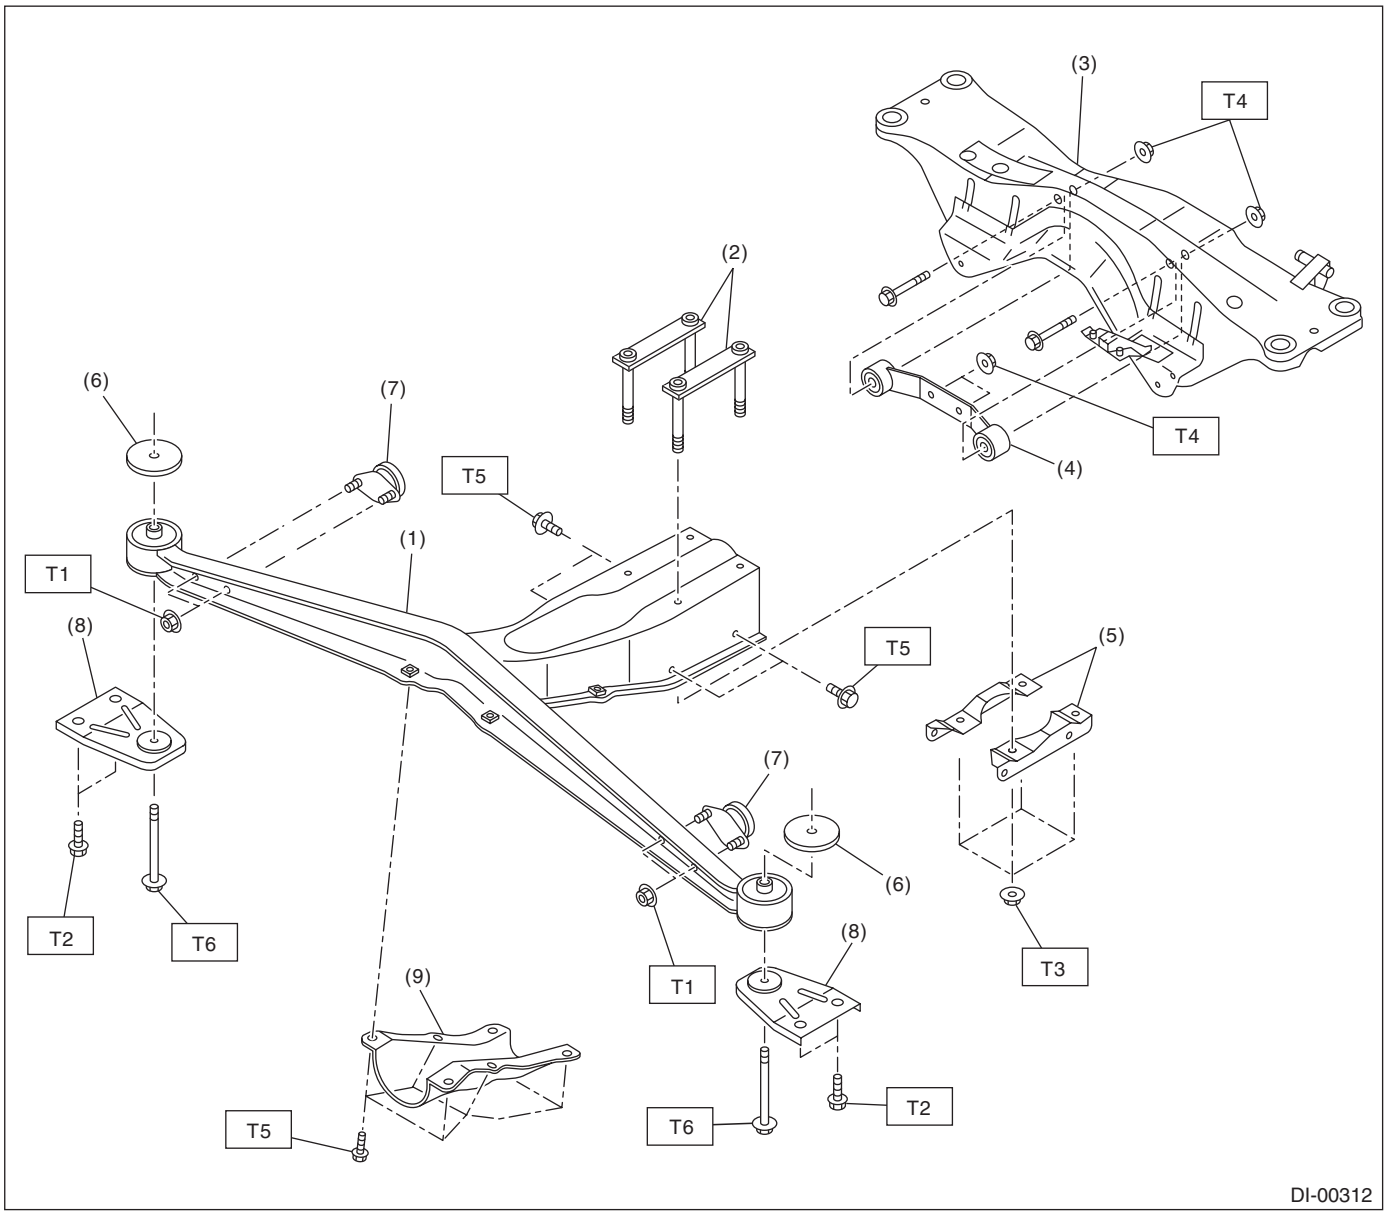

(1) Differential front member
(2) Plate
(3) Crossmember
(4) Differential rear member
(5) Differential mount lower bracket
(6) Stopper
(7) Dynamic damper
(8) Differential mount bracket
(9) Differential mount front cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 20 (2.0, 14.5)
T2: 33 (3.4, 24.3)
T3: 65 (6.6, 47.9)
T4: 70 (7.1, 51.6)
T5: 90 (9.2, 66.4)
T6: 100 (10.2, 73.8)

C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Use SUBARU genuine gear oil, grease etc. or the equivalent. Do not mix gear oil, grease etc. with that of another grade or from other manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Apply gear oil onto sliding or revolution surfaces before installation.
- Before installing O-rings or snap rings, apply sufficient amount of gear oil to avoid damage and deformation.
- Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
- Avoid damaging the mating face of the case.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
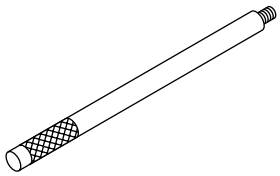 ST-398477701	398477701	HANDLE	Used for installing front and rear bearing cone.
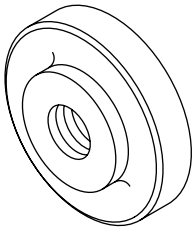 ST-398477702	398477702	DRIFT	Used press-fitting the bearing cone of differential carrier (rear).
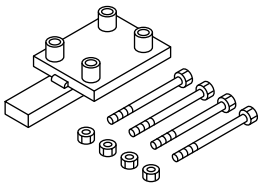 ST-398217700	398217700	ATTACHMENT SET	Stand for rear differential carrier disassembly and assembly.
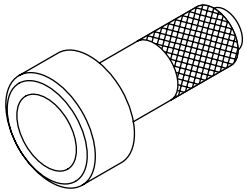 ST-498447120	498447120	INSTALLER	Used for installing front oil seal.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
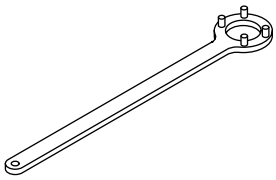 ST-498427200	498427200	FLANGE WRENCH	Used for stopping rotation of companion flange when loosening and tightening self-lock nut.
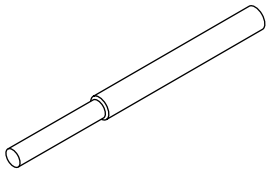 ST-398467700	398467700	DRIFT	Used for removing pinion, pilot bearing and front bearing cone.
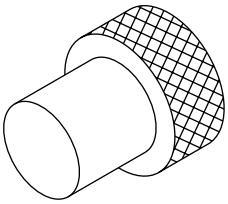 ST-399780104	399780104	WEIGHT	Used for installing front bearing cone, pilot bearing companion flange.
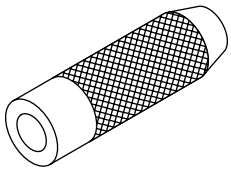 ST-899580100	899580100	INSTALLER	Used for press-fitting the front bearing cone, pilot bearing.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
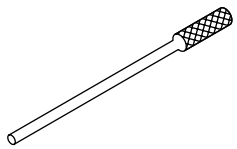 ST-899904100	899904100	STRAIGHT PIN REMOVER	Used for driving out differential pinion shaft lock pin.
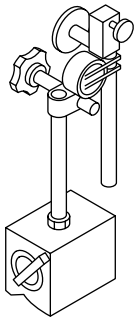 ST-498247001	498247001	MAGNET BASE	• Used for measuring backlash between side gear and pinion, and hypoid gear. • Used with DIAL GAUGE (498247100).
 ST-498247100	498247100	DIAL GAUGE	• Used measuring backlash between side gear and pinion, hypoid gear. • Used with MAGNET BASE (498247001).
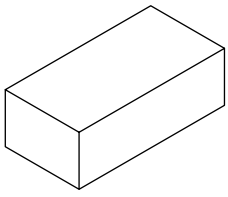 ST-398507704	398507704	BLOCK	Used for adjusting pinion height and preload.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
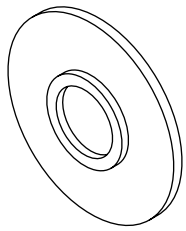 ST-398177700	398177700	INSTALLER	• Used for installing rear bearing cone. • For T-type.
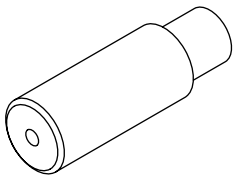 ST-398457700	398457700	ATTACHMENT	• Used for removing side bearing retainer. • For T-type.
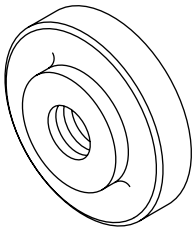 ST-398477703	398477703	DRIFT2	• Used for press-fitting the bearing race (rear) of differential carrier. • For T-type.
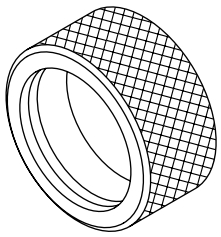 ST-398437700	398437700	DRIFT	• Used for installing side oil seal. • For T-type.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
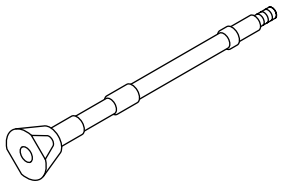 ST-398507702	398507702	DUMMY SHAFT	• Used for adjusting pinion height and preload. • For T-type.
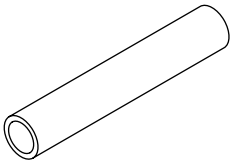 ST-398507703	398507703	DUMMY COLLAR	• Used for adjusting pinion height and preload. • For T-type.
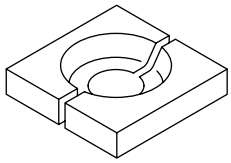 ST-398517700	398517700	REPLACER	• Used for removing rear bearing cone. • For T-type.
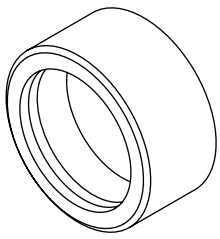 ST-398487700	398487700	DRIFT	• Used for press-fitting the side bearing cone. • For T-type.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
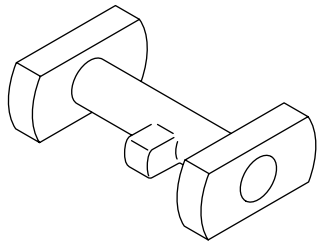 ST-398507701	398507701	DIFFERENTIAL CARRIER GAUGE	• Used for adjusting pinion height. • For T-type.
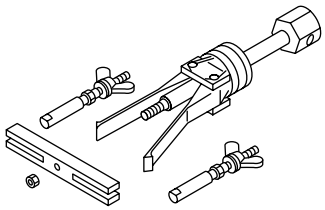 ST-398527700	398527700	PULLER ASSY	• Used for removing front oil seal. • Used for removing side bearing cup. • For T-type.
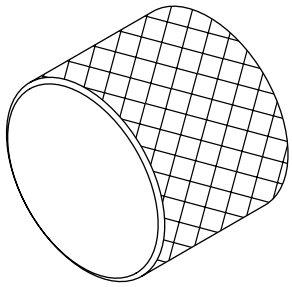 ST-398227700	398227700	WEIGHT	• Used for installing side bearing. • For T-type.
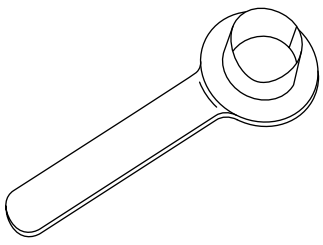 ST28099PA090	28099PA090	OIL SEAL PROTECTOR	• Used for installing rear drive shaft into rear differential. • For protecting oil seal.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
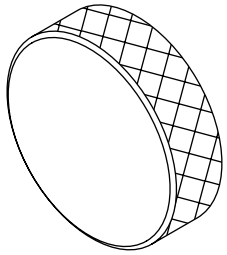 ST-398237700	398237700	GAUGE	• Used for installing side bearing. • For T-type.
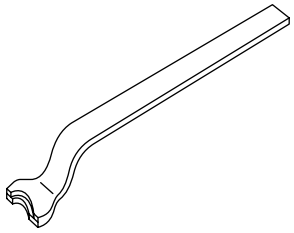 ST28099PA100	28099PA100	DRIVE SHAFT REMOVER	• Used for removing rear drive shaft from rear differential. • For T-type.
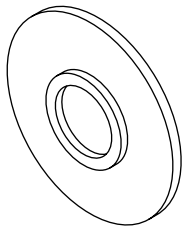 ST-498175500	498175500	INSTALLER	• Used for installing rear bearing cone. • For VA-type.
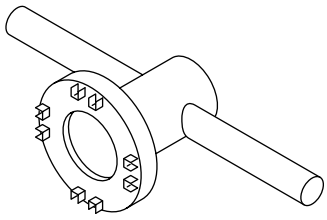 ST-499785500	499785500	WRENCH ASSY	• Used for removing and installing side oil seal holder. • For VA-type.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
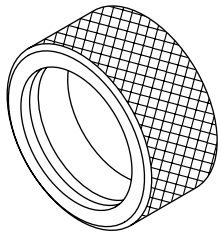 ST-498447100	498447100	INSTALLER	• Used for installing oil seal. • For VA-type.
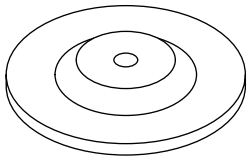 ST-399520105	399520105	SEAT	• Used for removing side bearing cone. • Used with PULLER SET (899524100). • For VA-type.
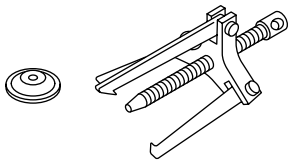 ST-399703600	399703600	PULLER ASSY	• Used for removing companion flange.
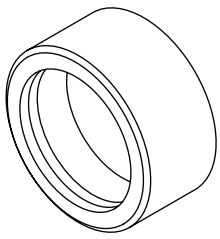 ST-498485400	498485400	DRIFT	• Used for installing side bearing cone. • For VA-type.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
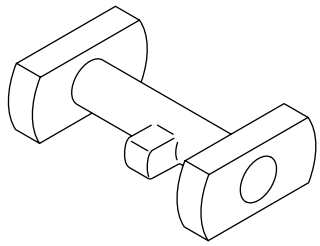 ST-498505501	498505501	DIFFERENTIAL CARRIER GAUGE	• Used for adjusting pinion height. • For VA-type.
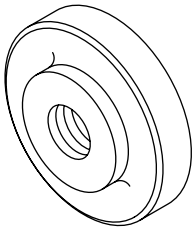 ST-498447110	498447110	DRIFT	• Used for press-fitting the bearing race (front) of differential carrier. • For VA-type.
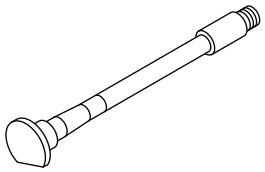 ST-498447150	498447150	DUMMY SHAFT	• Used for adjusting pinion height and Pre-load. • For VA-type.
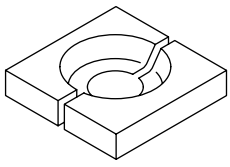 ST-498515500	498515500	REPLACER	• Used for removing rear bearing cone. • For VA-type.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
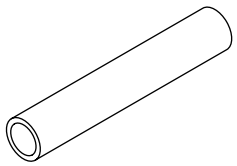 ST32285AA000	32285AA000	DUMMY COLLAR	• Used for adjusting pinion height and Pre-load. • For VA-type.
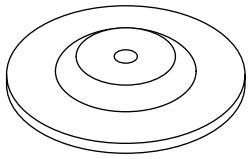 ST-499705404	499705404	SEAT	• Used for removing side bearing race. • Used with PULLER ASSY (499705401). • For VA-type.
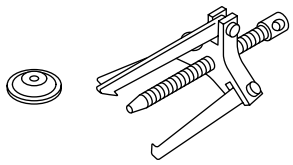 ST-499705401	499705401	PULLER ASSY	• Used for removing side bearing race. • Used with SEAT (499705404). • For VA-type.
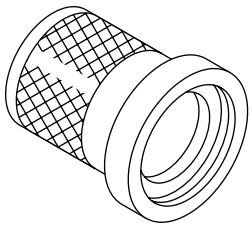 ST-899874100	899874100	INSTALLER	• Used for installing companion flange.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
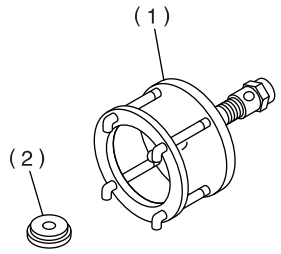 ST-899524100	899524100	PULLER SET	• Used for removing side bearing cone of differential. • For VA-type. (1) Puller (2) Cap
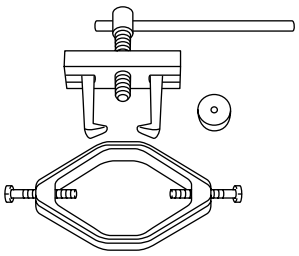 ST18759AA000	18759AA000	PULLER ASSY	• Used for removing side bearing cone of differential. • For T-type. (STi model)
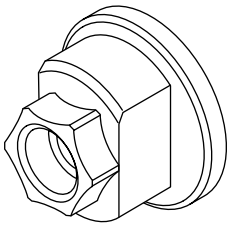 ST-498937110	498937110	HOLDER DRIVE PINION (This special tool is used for current automatic transmission.)	• Used for installing pilot bearing. • For T-type. (STi model)
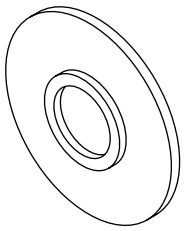 ST18674AA000	18674AA000	INSTALLER	• Used for installing rear bearing cone. • For T-type. (STi model)

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
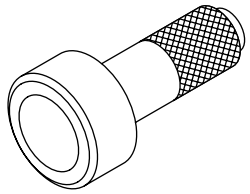 ST-398417700	398417700	DRIFT (This special tool was prepared for the vehicles of 92MY and before.)	• Used for installing side bearing race. (STi model)

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Transmission jack	Used for assembly/disassembly of rear differential.
Puller	Used for removal of side bearing retainer.
Thickness gauge	Used for measuring clearance.
Tire lever	Used for removal of rear drive shaft. (VA-type)

2. Differential Gear Oil

A: INSPECTION

1) Remove the filler plug and then check the gear oil. If it is contaminated or deteriorated, replace the gear oil. <Ref. to DI-25, REPLACEMENT, Differential Gear Oil.>
2) Check the gear oil level is up to the bottom part of filler bolt. If the level is low, refill up to the bottom of filler bolt.

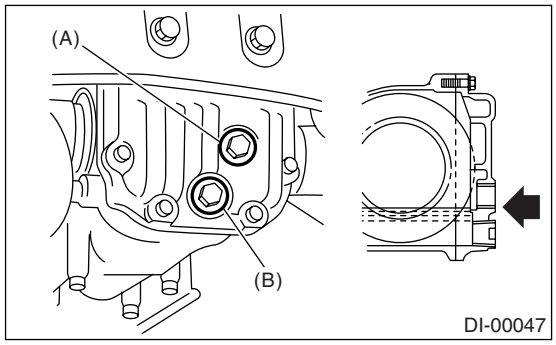

(A) Filler plug
(B) Drain plug

B: REPLACEMENT

1) Jack-up the vehicle and support it with sturdy racks.
2) Remove the oil drain plug and filler plug, and drain the gear oil.

CAUTION:
Be careful not to burn your hands, because gear oil becomes extremely hot after running.

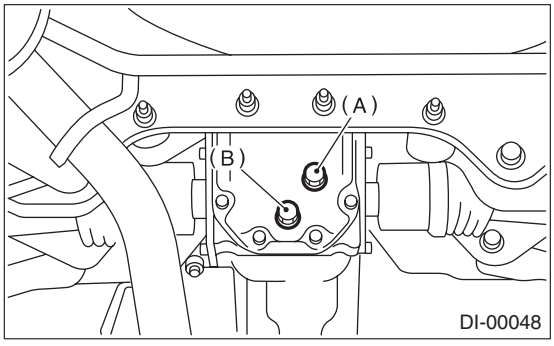

(A) Filler plug
(B) Drain plug

3) Tighten the oil drain plug.

NOTE:
- Apply fluid packing to the drain plug for T-type.
- Use a new aluminum gasket for VA-type.

Fluid packing:
THREE BOND 1105 (Part No. 004403010) or equivalent

Tightening torque:
T-type
49 N·m (5.0 kgf-m, 36.2 ft-lb)
VA-type
34 N·m (3.5 kgf-m, 25.3 ft-lb)

4) Fill the differential carrier with gear oil to the upper plug level.

NOTE:
Carefully refill oil while watching the level. Excess or insufficient oil must be avoided.

Oil capacity:
Except STi model:
0.8 ℓ (0.8 US qt, 0.7 Imp qt)
STi model:
0.9 ℓ — 1.1 ℓ (1.0 — 1.2 US qt, 0.8 — 1.0 Imp qt)

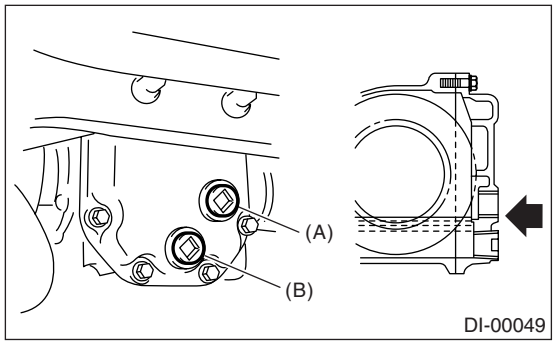

(A) Filler plug
(B) Drain plug

5) Install the filler plug.

NOTE:
- Apply fluid packing to the filler plug for T-type.
- Use a new aluminum gasket for VA-type.

Fluid packing:
THREE BOND 1105 (Part No. 004403010) or equivalent

Tightening torque:
T-type
49 N·m (5.0 kgf-m, 36.2 ft-lb)
VA-type
34 N·m (3.5 kgf-m, 25.3 ft-lb)

3. Front Differential

A: NOTE

1. AT MODEL

For front differential of AUTOMATIC TRANSMISSION, refer to “AT” section. <Ref. to 4AT-112, Front Differential.>

2. MT MODEL

For front differential of manual transmission, refer to “5MT” or “6MT” section. <Ref. to 5MT-104, Front Differential Assembly.> or <Ref. to 6MT-105, Front Differential Assembly.>

4. Rear Differential for T-type

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Move the select lever or gear shift lever to “N”.
4) Release the parking brake.
5) Loosen the wheel nuts.
6) Jack-up the vehicle and support it with sturdy racks.
7) Remove the wheels.
8) Remove the rear exhaust pipe and muffler.
Non-turbo model without OBD
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
Non-turbo model with OBD
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
Turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
9) Remove the heat shield cover. (If equipped)
10) Remove the front cover of rear differential mount.

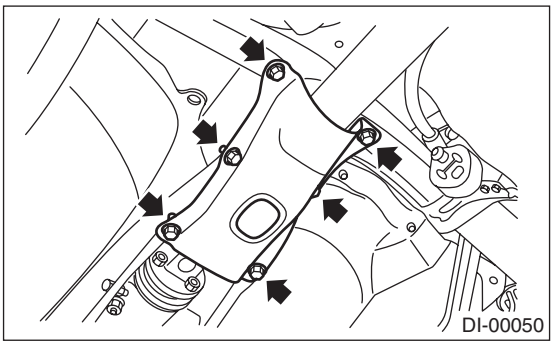

11) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
12) Remove the clamps and bracket of parking brake cable.

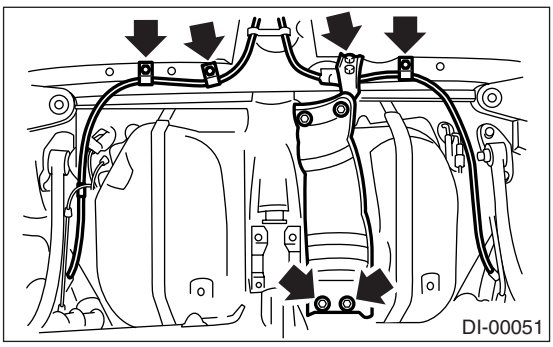

13) Remove the DOJ of rear drive shaft from rear differential using ST. <Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>
ST 28099PA100 DRIVE SHAFT REMOVER

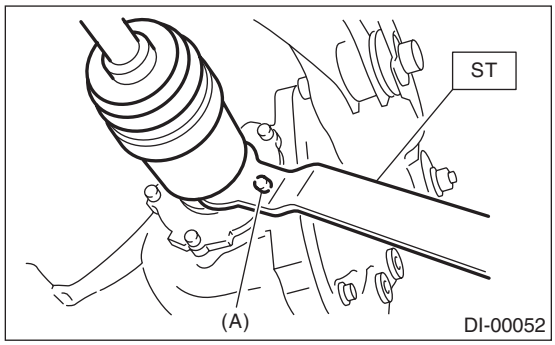

(A) Bolt

14) Secure the rear drive shaft to rear crossmember using wire.

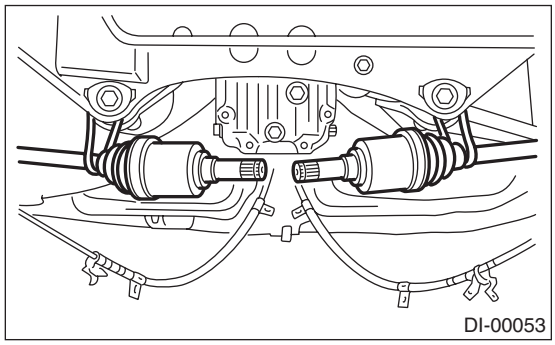

15) Remove the lower bracket.

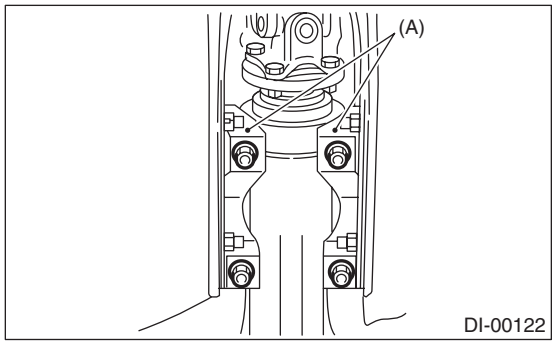

(A) Lower bracket

16) Support the rear differential with transmission jack.

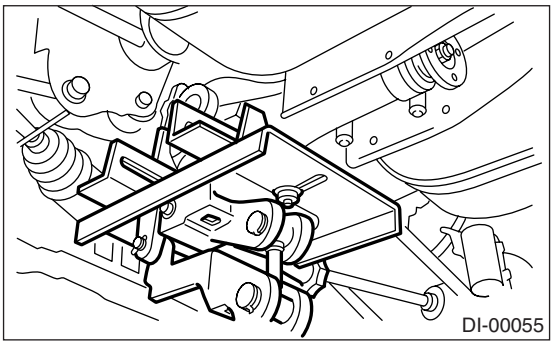

17) Remove the self-locking nuts and bolts.

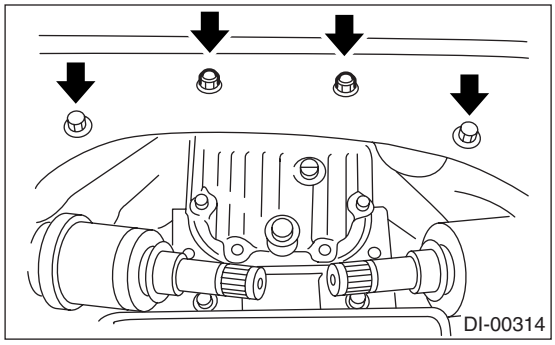

18) Remove the bolts which secure the rear differential front member to body.
Loosen the bolt A first, then remove the bolts B.

NOTE:
Support the front member with use of a helper to prevent it from dropping.

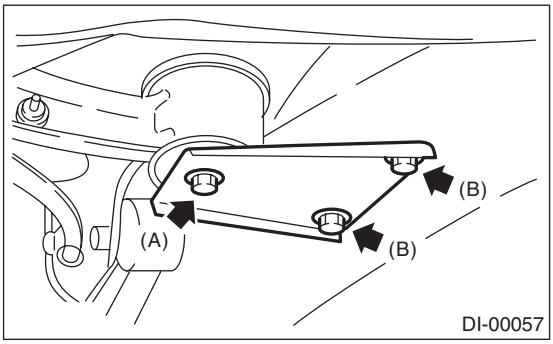

(A) Bolt A
(B) Bolt B

19) Remove the bolt A.

20) While slowly lowering the transmission jack, move the rear differential forward and remove front member and rear differential from vehicle.

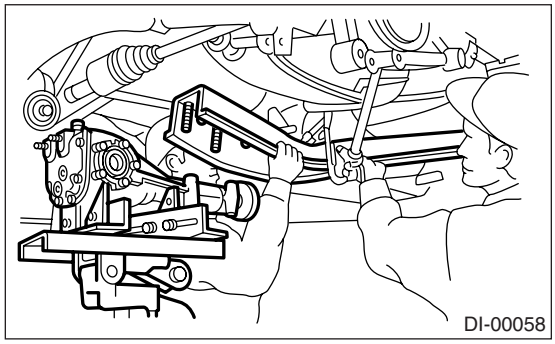

21) Remove the rear differential from vehicle.

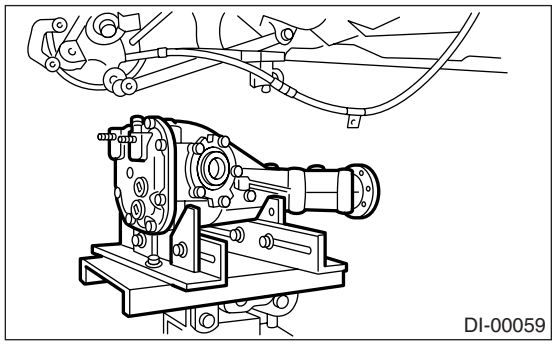

B: INSTALLATION

Install in the reverse order of removal.
1) Install the air breather cap tapping with a plastic hammer.

NOTE:
Be sure to install a new air breather cap.

2) Position the front member on body by passing it under the parking brake cable and securing to rear differential.

NOTE:
When installing the rear differential front member, do not confuse the installation sequence of the upper and lower stoppers.

3) Install the DOJ of drive shaft into rear differential. <Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>

ST 28099PA090 SIDE OIL SEAL PROTECTOR

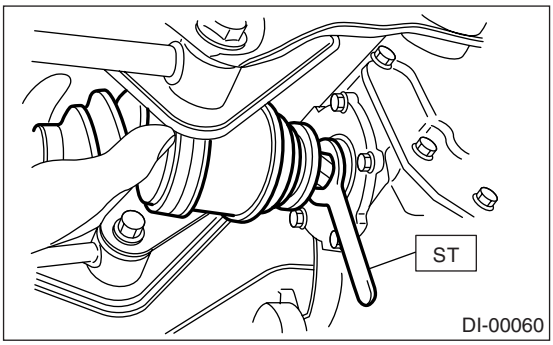

4) Installing procedure hereafter is in the reverse order of removal.

5) After installation, fill the differential carrier with gear oil to the filler plug level. <Ref. to DI-25, Differential Gear Oil.>

C: DISASSEMBLY

1. EXCEPT STi MODEL

To detect the real cause of trouble, inspect the following items before disassembling.

- Tooth contact of crown gear and pinion, and backlash
- Runout of crown gear at its back surface
- Turning resistance of drive pinion

1) Set the ST on vise and install the differential assembly to ST.

ST 398217700 ATTACHMENT

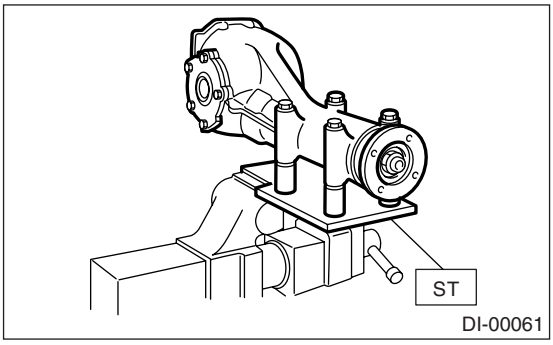

2) Drain the gear oil by removing the plug.

3) Remove the air breather cap.

NOTE:

- Do not attempt to remove the air breather cap unless necessary.
- When removing the air breather cap, replace the air breather cap with a new one.

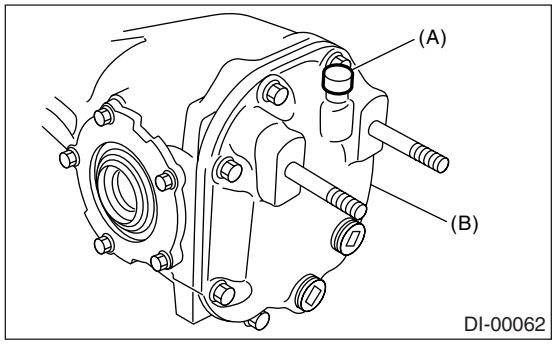

(A) Air breather cap
(B) Rear cover

4) Remove the bolts, and then remove the rear cover.

NOTE:
Remove it by tapping with plastic hammer.

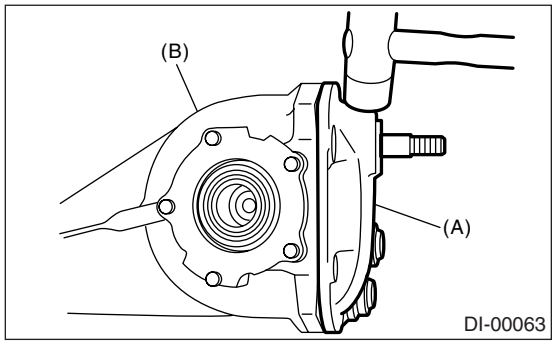

(A) Rear cover
(B) Differential carrier

5) Make right and left side bearing retainers in order to identify them at reassembly. Remove the side bearing retainer attaching bolts, set the ST to differential case, and extract right and left side bearing retainers with a puller.

NOTE:
Each shim, which is installed to adjust the side bearing preload, should be kept together with its mating retainer.

ST 398457700 ATTACHMENT

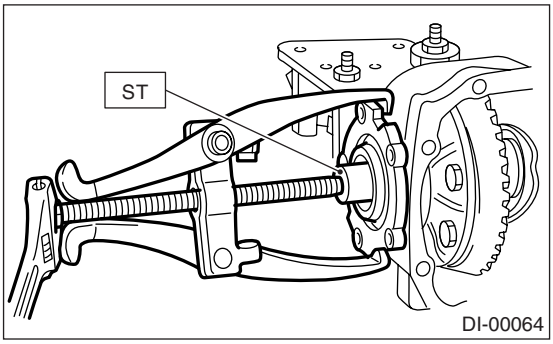

6) Pull out the differential case assembly from differential carrier.

NOTE:
Be careful not to hit the teeth against the case.

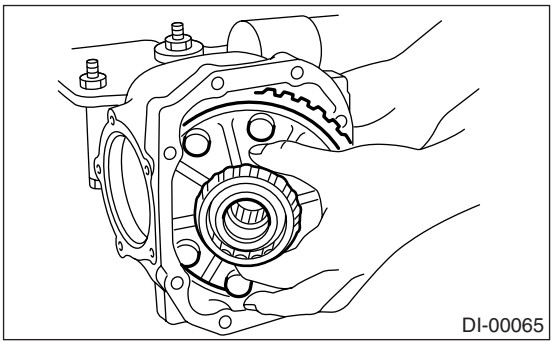

7) When replacing the side bearing, pull the bearing cup from side bearing retainer using ST.

ST 398527700 PULLER ASSY

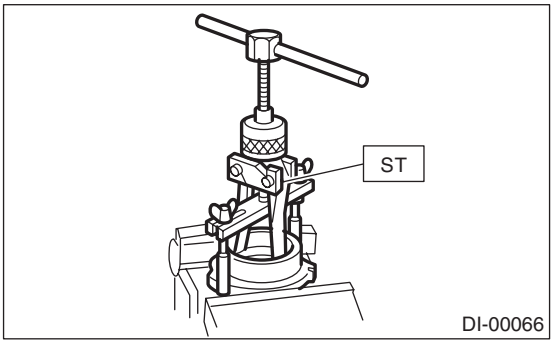

8) Extract the bearing cone with ST.

NOTE:
• Do not attempt to disassemble the parts unless necessary.
• Set the puller so that its claws catch the edge of bearing cone.
• Never mix up the right and left hand bearing races and cones.

ST 18759AA000PULLER ASSY

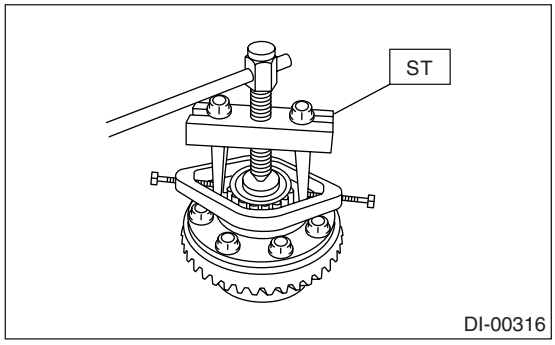

9) Remove the crown gear by loosening the crown gear bolts.

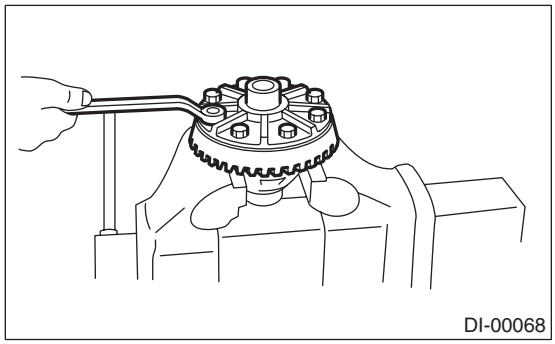

10) Drive out the pinion shaft lock pin from crown gear side. (Model without LSD)

NOTE:
The lock pin is staked at the pin hole end on the differential carrier; do not drive it out forcibly before unstaking it.

ST 899904100 STRAIGHT PIN REMOVER

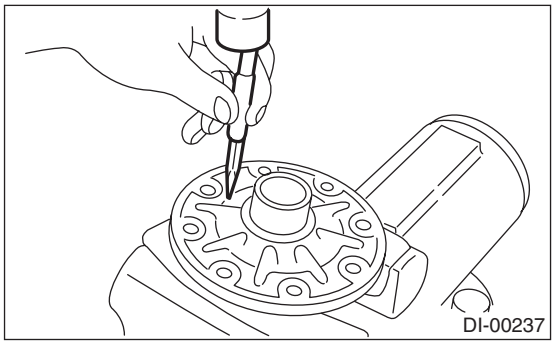

11) Draw out the pinion mate shaft and remove the pinion mate gears, side gears and thrust washers. (Model without LSD)

NOTE:
The gears as well as thrust washers should be marked or kept separated right and left, front and rear.

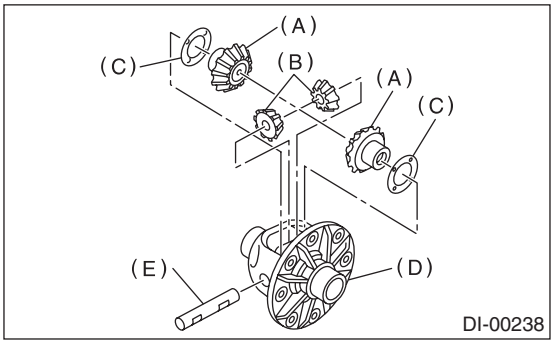

(A) Side gear
(B) Pinion mate gear
(C) Thrust washer
(D) Differential case
(E) Pinion mate shaft

12) Hold the companion flange with ST and remove the drive pinion nut.
ST 498427200 FLANGE WRENCH

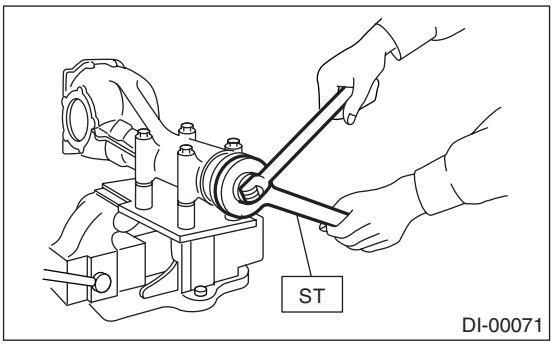

13) Extract the companion flange with a puller.

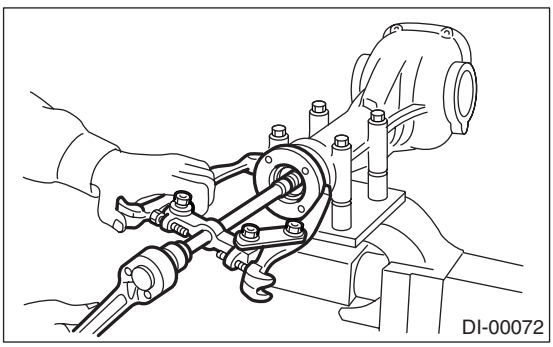

14) Press the end of drive pinion shaft and extract it together with the rear bearing cone, preload adjusting spacer and washer.

NOTE:
Hold the drive pinion so as not to drop it.
ST 398467700 DRIFT

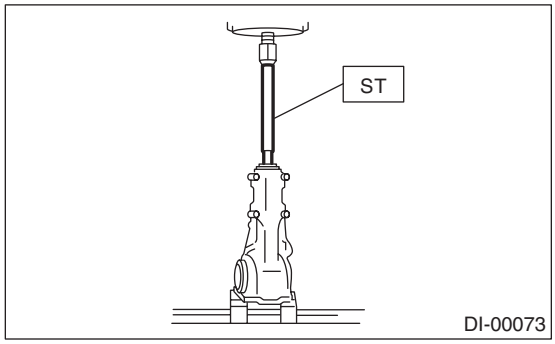

15) Remove the rear bearing cone from drive pinion by supporting the cone with ST.

NOTE:
Place the replacer so that its center-recessed side faces the pinion gear.
ST 398517700 REPLACER

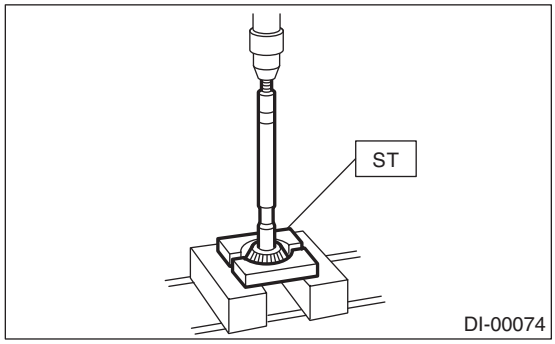

16) Remove the front oil seal from differential carrier using ST.
ST 398527700 PULLER ASSY

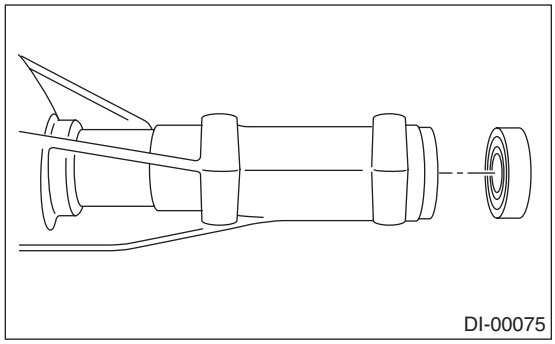

17) Remove the pilot bearing together with front bearing cone using ST.
ST 398467700 DRIFT

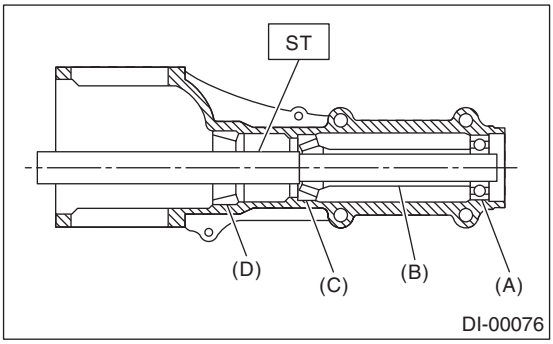

(A) Pilot bearing
(B) Spacer
(C) Front bearing
(D) Rear bearing cup

18) When replacing the bearings, hit out the front bearing cup and rear bearing cup in this order out of case by using a brass bar.

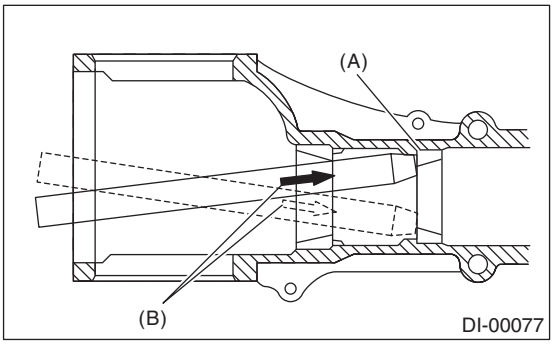

(A) 2 cutouts along diagonal lines
(B) Hit out alternately with brass bar.

2. STi MODEL

To detect the real cause of trouble, inspect the following items before disassembling.
• Tooth contact of crown gear and pinion, and backlash
• Runout of crown gear at its back surface
• Turning resistance of drive pinion
1) Set the ST on vise and install the differential assembly to ST.

ST 398217700 ATTACHMENT

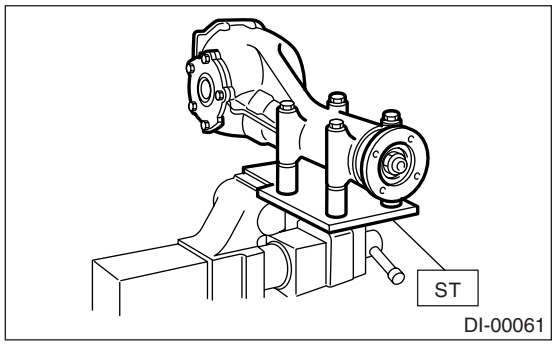

2) Drain the gear oil by removing the plug.
3) Remove the air breather cap.

NOTE:
• Do not attempt to remove the air breather cap unless necessary.
• When removing the air breather cap, replace the air breather cap with a new one.

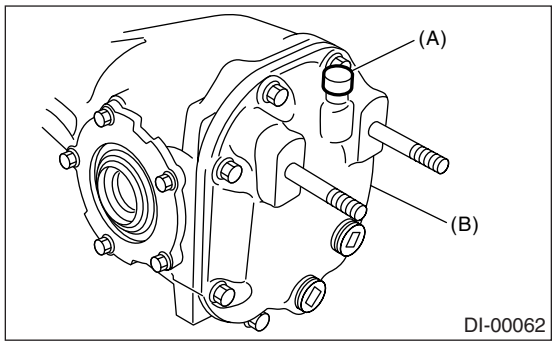

(A) Air breather cap
(B) Rear cover

4) Remove the bolts, and then remove the rear cover.

NOTE:
Remove it by tapping with plastic hammer.

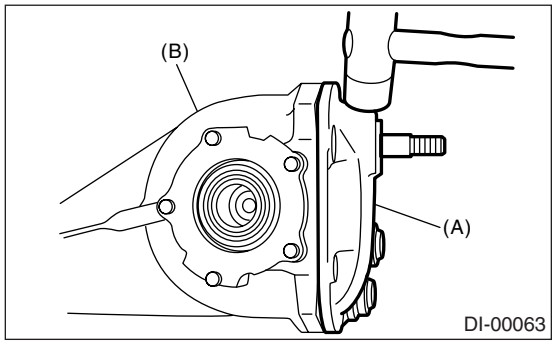

(A) Rear cover
(B) Differential carrier

5) Make right and left side bearing retainers in order to identify them at reassembly. Remove the side bearing retainer attaching bolts, set the ST to differential case, and extract right and left side bearing retainers with a puller.

NOTE:
Each shim, which is installed to adjust the side bearing preload, should be kept together with its mating retainer.

ST 398457700 ATTACHMENT

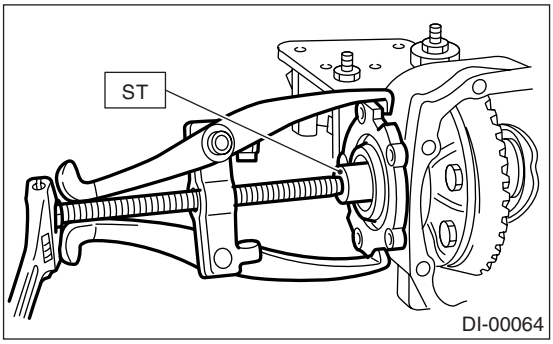

6) Pull out the differential case assembly from differential carrier.

NOTE:
Be careful not to hit the teeth against the case.

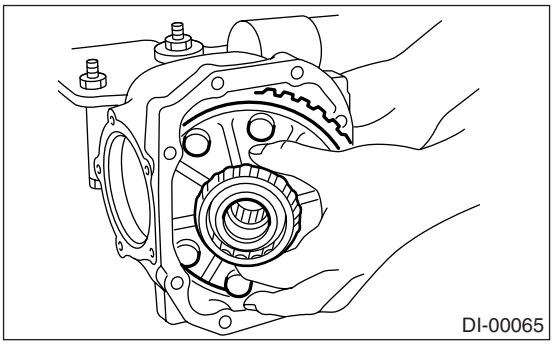

7) When replacing the side bearing, pull the bearing cup from side bearing retainer using ST.

ST 398527700 PULLER ASSY

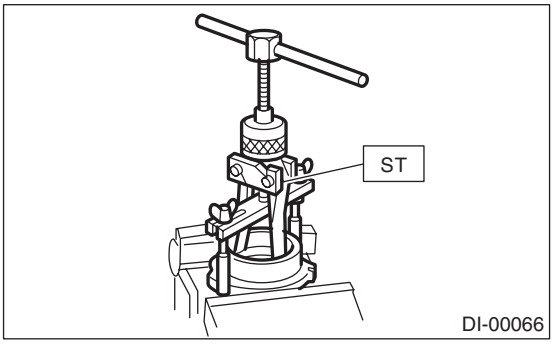

8) Extract the bearing cone with ST.

NOTE:
- Do not attempt to disassemble the parts unless necessary.
- Set the puller so that its claws catch the edge of bearing cone.
- Never mix up the right and left hand bearing races and cones.

ST 18759AA000PULLER ASSY

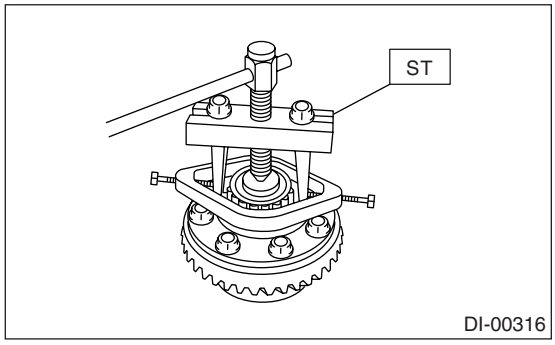

9) Remove the crown gear by loosening the crown gear bolts.

NOTE:
Further disassembling is not allowed.

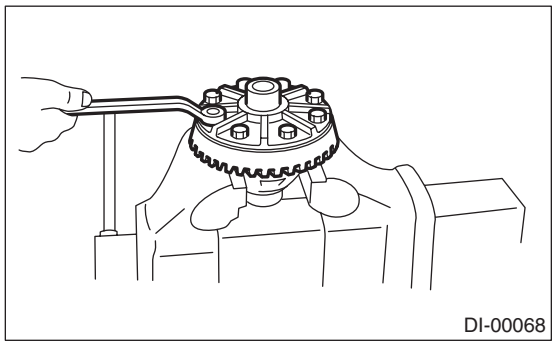

10) Hold the companion flange with ST and remove the drive pinion nut.

ST 498427200 FLANGE WRENCH

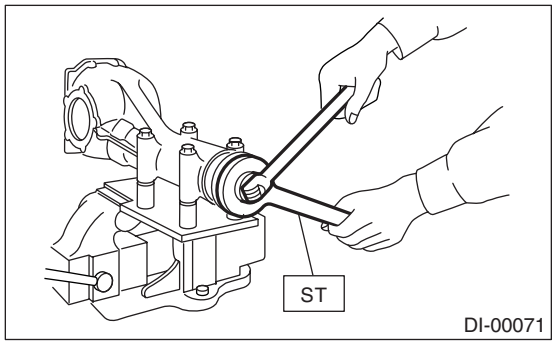

11) Extract the companion flange with a puller.

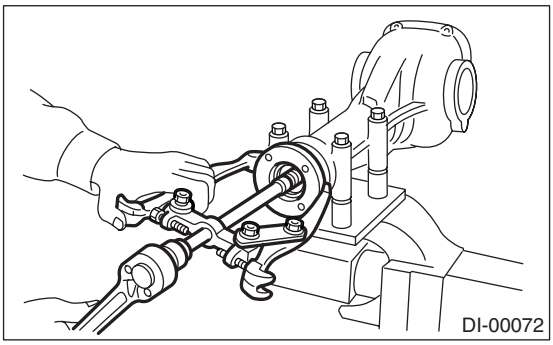

12) Press the end of drive pinion shaft and extract it together with the rear bearing cone, preload adjusting spacer and washer.

NOTE:
Hold the drive pinion so as not to drop it.
ST 398467700 DRIFT

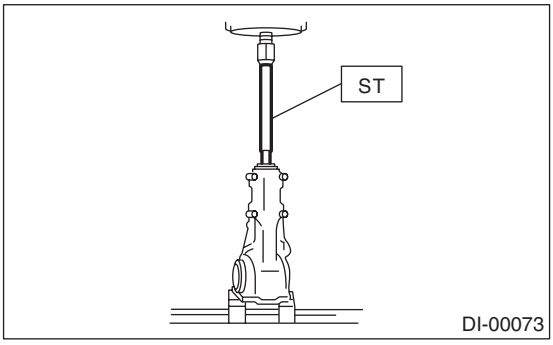

13) Remove the rear bearing cone from drive pinion.

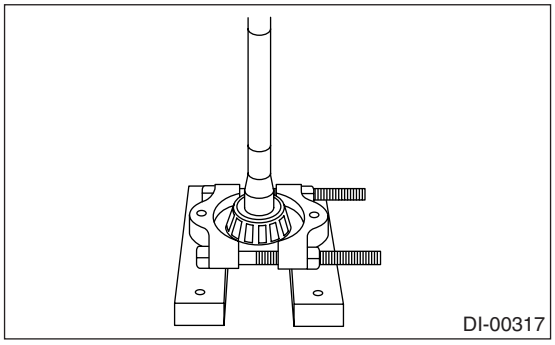

14) Remove the front oil seal from differential carrier using ST.
ST 398527700 PULLER ASSY

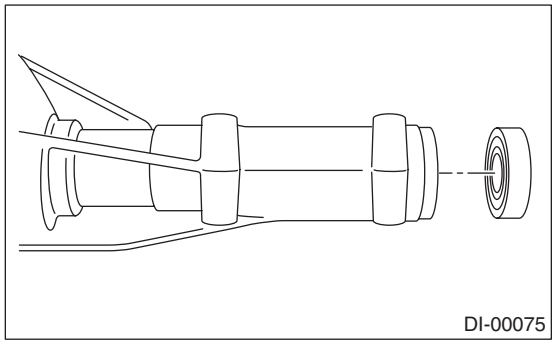

15) Remove the pilot bearing together with front bearing cone using ST.
ST 398467700 DRIFT

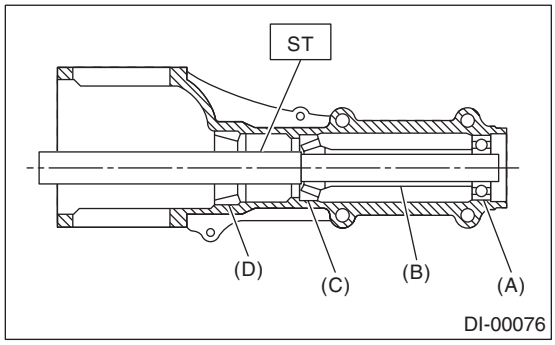

(A) Pilot bearing
(B) Spacer
(C) Front bearing
(D) Rear bearing cup

16) When replacing the bearings, tap the front bearing cup and rear bearing cup in this order out of case by using a brass bar.

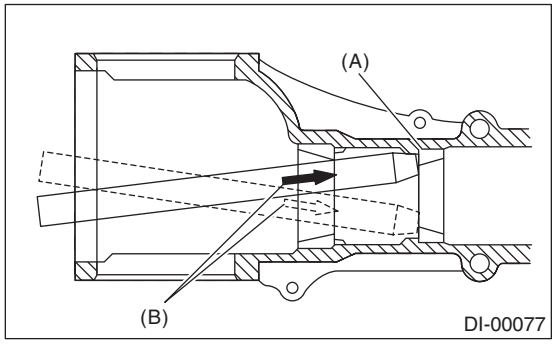

(A) 2 cutouts along diagonal lines
(B) Hit out alternately with brass bar.

D: ASSEMBLY

1. EXCEPT STi MODEL

NOTE:
• Assemble in the reverse order of disassembling.
• Check and adjust each part during assembly.
• Keep the shims and washers in order, so that they are not improperly installed.
• Thoroughly clean the surfaces on which the shims, washers and bearings are to be installed.
• Apply gear oil when installing the bearings and thrust washers.
• Be careful not to mix up the right and left hand races of the bearings.
• Use a new O-ring and gasket.
• Replace the oil seal with a new one at every disassembly. Apply chassis grease between the lips when installing the oil seal.

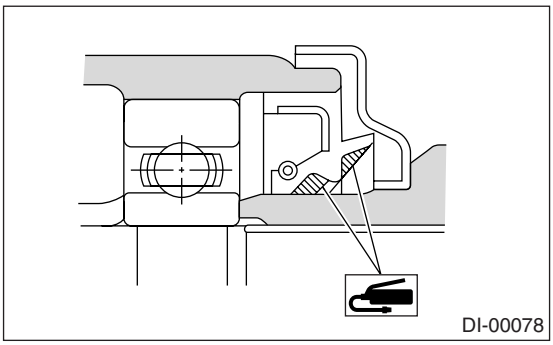
DI-00078

1) Adjusting preload for front and rear bearings
Adjust the bearing preload with spacer and washer between front and rear bearings. Pinion height adjusting washer are not affected by this adjustment. The adjustment must be carried out without oil seal inserted.

(1) Press the rear bearing race into differential carrier using ST1 and ST2.

ST1 398477701 HANDLE
ST2 398477703 DRIFT 2

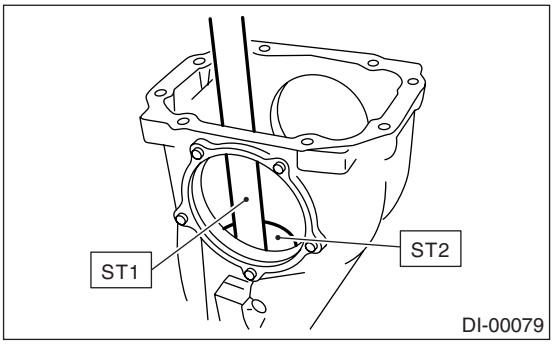

DI-00079

(2) Install the front bearing race to differential carrier using ST1 and ST2.

ST1 398477701 HANDLE
ST2 398477703 DRIFT 2

(3) Insert the ST1 into carrier with pinion height adjusting washer and rear bearing cone fitted onto it.

NOTE:
• If tooth contact (Drive pinion, Crown gear) is normal in the inspection before disassembling, verify that the washer is not deformed, and then re-use the used washer.
• Use a new rear bearing cone.

(4) Then install the preload adjusting spacer and washer, front bearing cone, ST2, companion flange, and washer and drive pinion nut.

ST1 398507702 DUMMY SHAFT
ST2 398507703 DUMMY COLLAR

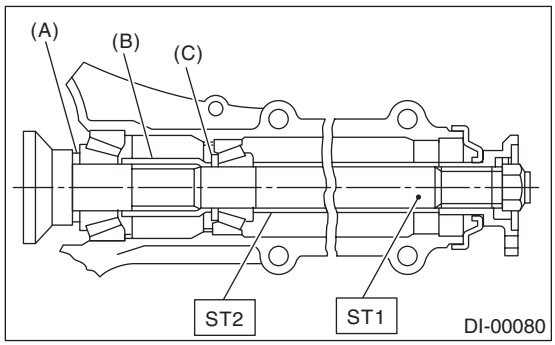

DI-00080

(A) Pinion height adjusting shim
(B) Preload adjusting spacer
(C) Preload adjusting washer

(5) Turn the ST1 with hand to make it seated, and tighten the drive pinion nut while measuring the preload with spring balance. Select the preload adjusting washer and spacer so that the specified preload is obtained when nut is tightened to the specified torque.

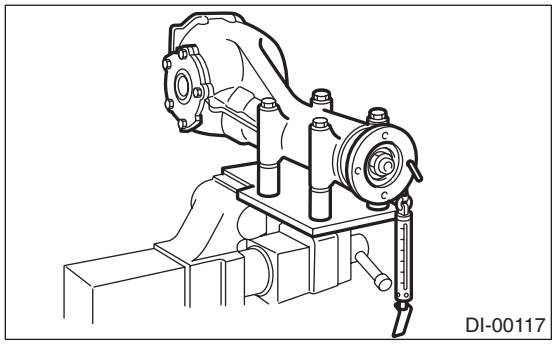
DI-00117

NOTE:
• Use a new lock nut.
• Be careful not to give excessive preload.
• When tightening the drive pinion nut, lock ST1 with ST2 as shown in the figure.
• Measure the preload in direction of tangent to flange.

ST1 398507702 DUMMY SHAFT
ST2 398507704 BLOCK

Tightening torque:
181 N·m (18.5 kgf-m, 134 ft-lb)

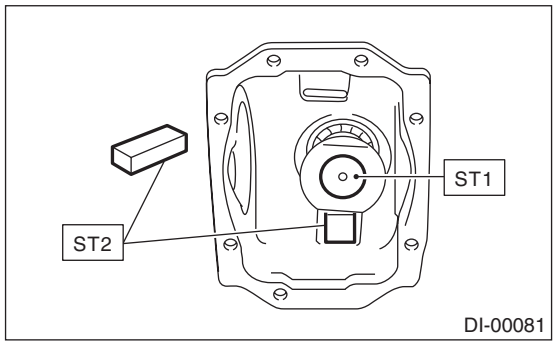

Front and rear bearing preload
For new bearing: 18.1 — 38.8 N (1.8 — 4.0 kgf, 4.1 — 8.7 lb) at companion flange bolt hole

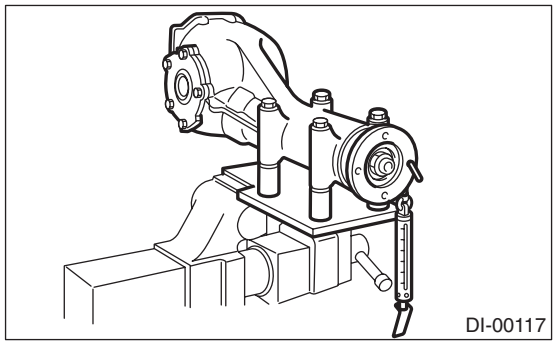

	Part No.	Thickness mm (in)
Preload adjusting washer	383705200	2.59 (0.1020)
	383715200	2.57 (0.1012)
	383725200	2.55 (0.1004)
	383735200	2.53 (0.0996)
	383745200	2.51 (0.0988)
	383755200	2.49 (0.0980)
	383765200	2.47 (0.0972)
	383775200	2.45 (0.0965)
	383785200	2.43 (0.0957)
	383795200	2.41 (0.0949)
	383805200	2.39 (0.0941)
	383815200	2.37 (0.0933)
	383825200	2.35 (0.0925)
	383835200	2.33 (0.0917)
	383845200	2.31 (0.0909)

	Part No.	Length mm (in)
Preload adjusting spacer	383695201	56.2 (2.213)
	383695202	56.4 (2.220)
	383695203	56.6 (2.228)
	383695204	56.8 (2.236)
	383695205	57.0 (2.244)
	383695206	57.2 (2.252)

2) Adjusting drive pinion height
Adjust the drive pinion height with shim installed between the rear bearing cone and back of pinion gear.
(1) Install the ST2.

Front and rear bearing preload
For new bearing: 18.1 — 38.8 N (1.8 — 4.0 kgf, 4.1 — 8.7 lb) at companion flange bolt hole

NOTE:
At this time, install a pinion height adjusting shim which is temporarily selected or the same as that used before. Measure and record the thickness.
ST1 398507702 DUMMY SHAFT
ST2 398507701 DIFFERENTIAL CARRIER GAUGE
ST3 398507703 DUMMY COLLAR

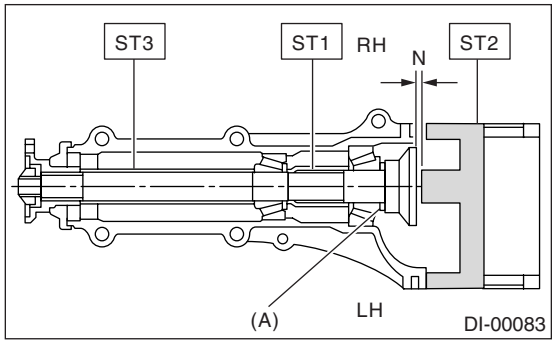

(A) Pinion height adjusting shim

(2) Measure the clearance N between the end of ST2 and end surface of ST1 by using a thickness gauge.

NOTE:
Make sure there is no clearance between the case and ST2.

ST1 398507702 DUMMY SHAFT
ST2 398507701 DIFFERENTIAL CARRIER GAUGE

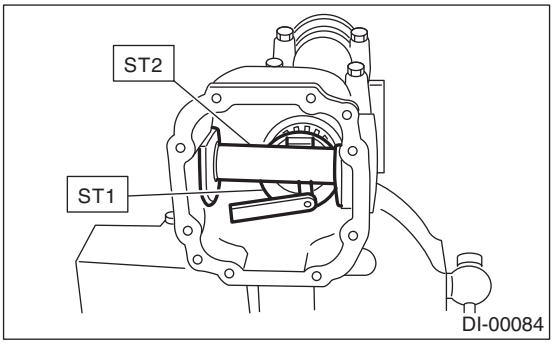

(3) Obtain the thickness of pinion height adjusting shim to be inserted from the following formula, and replace the temporarily installed shim with this one.

$T = To + N - (H \times 0.01) - 0.20$ mm (0.0079 in)

NOTE:
Use copies of this page.

T	Thickness of pinion height adjusting shim mm (in)	
To	Thickness of shim temporarily inserted mm (in)	
N	Reading of thickness gauge mm (in)	
H	Figure marked on drive pinion head	
Memo:		

(Example of calculation)
To = 2.20 + 1.20 = 3.40 mm
N = 0.23 mm H = + 1
T = 3.40 + 0.23 − 0.01 − 0.20 = 3.42
Result: Thickness = 3.42 mm
Therefore use the shim 383605200.

Pinion height adjusting shim	
Part No.	Thickness mm (in)
383495200	3.09 (0.1217)
383505200	3.12 (0.1228)
383515200	3.15 (0.1240)
383525200	3.18 (0.1252)
383535200	3.21 (0.1264)
383545200	3.24 (0.1276)
383555200	3.27 (0.1287)
383565200	3.30 (0.1299)
383575200	3.33 (0.1311)
383585200	3.36 (0.1323)
383595200	3.39 (0.1335)
383605200	3.42 (0.1346)
383615200	3.45 (0.1358)
383625200	3.48 (0.1370)

Pinion height adjusting shim	
Part No.	Thickness mm (in)
383635200	3.51 (0.1382)
383645200	3.54 (0.1394)
383655200	3.57 (0.1406)
383665200	3.60 (0.1417)
383675200	3.63 (0.1429)
383685200	3.66 (0.1441)

3) Install the selected pinion height adjusting shim on drive pinion, and press the rear bearing cone into position with ST.
ST 398177700 INSTALLER

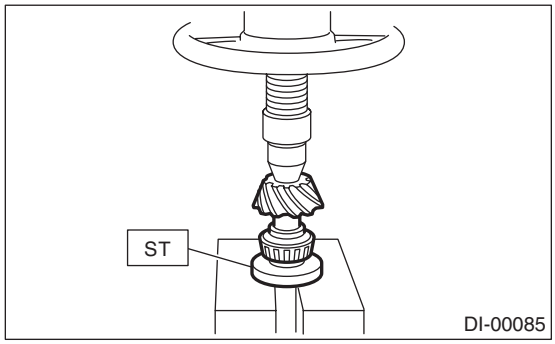

4) Insert the drive pinion into differential carrier, install the previously selected bearing preload adjusting spacer and washer.

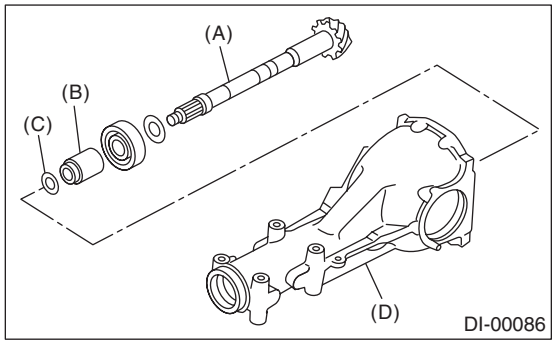

(A) Drive pinion
(B) Bearing adjusting spacer
(C) Washer
(D) Differential carrier

5) Press-fit the front bearing cone into case with ST1, ST2 and ST3.
ST1 398507703DUMMY COLLAR
ST2 399780104WEIGHT
ST3 899580100 INSTALLER

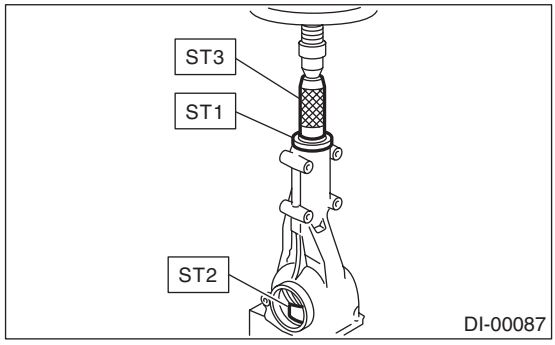

6) Insert the spacer, then press-fit the pilot bearing with ST1 and ST2.
ST1 399780104 WEIGHT
ST2 899580100 INSTALLER

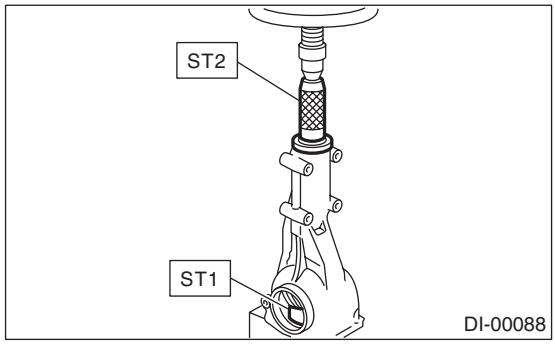

7) Fit a new oil seal with ST.

NOTE:
• Press-fit until the end of oil seal is 1 mm (0.04 in) inward from end of carrier.
• Apply grease between the oil seal lips.

ST 498447120 INSTALLER

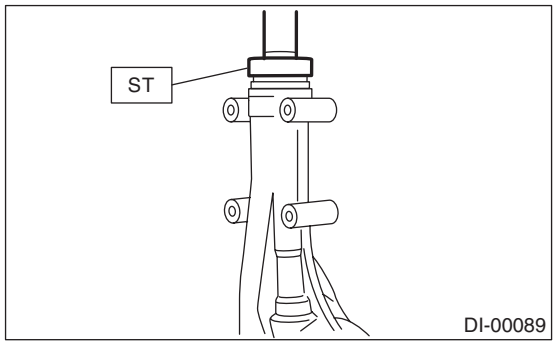

8) Press-fit the companion flange with ST1 and ST2.

NOTE:
Be careful not to damage the bearing.

ST1 899874100 INSTALLER
ST2 399780104 WEIGHT

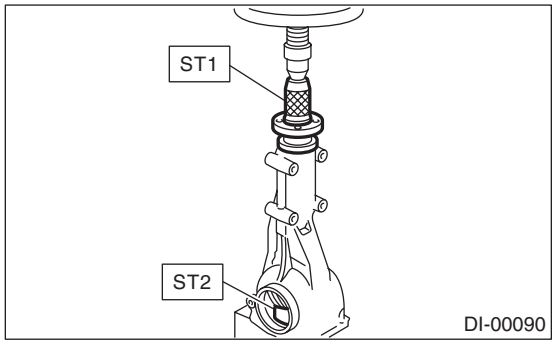

9) Install a new self-locking nut. Then tighten it with the ST.
ST 498427200 FLANGE WRENCH

Tightening torque:
181 N·m (18.5 kgf-m, 134 ft-lb)

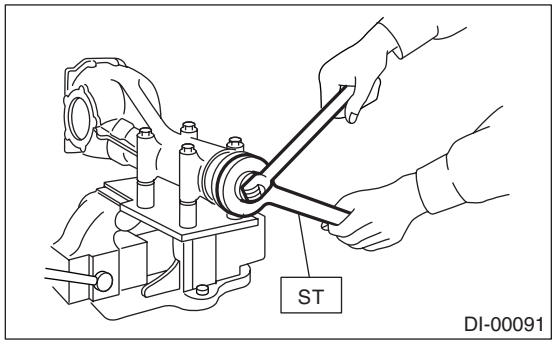

10) Assembling differential case
Install the side gears and pinion mate gears, with their thrust washers and pinion mate shaft, into differential case. (Model without LSD)

NOTE:
• Apply gear oil on both sides of the washer and on the side gear shaft before installing.

• Insert the pinion mate shaft into the differential case by aligning the lock pin holes.

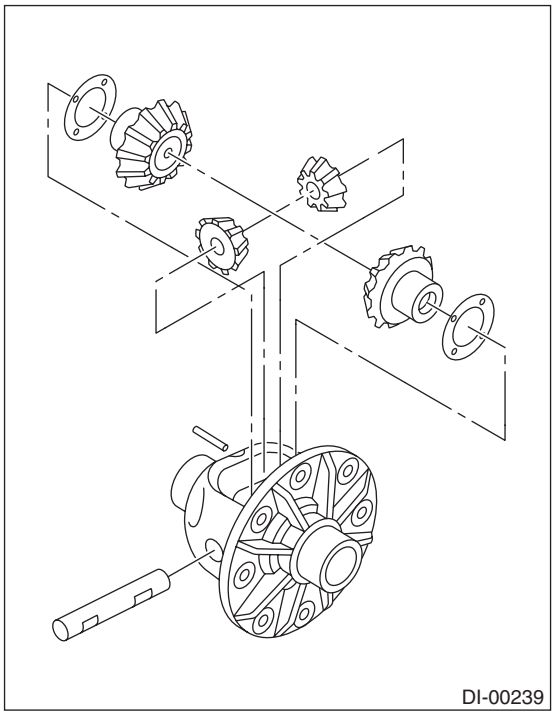
DI-00239

(1) Measure the side gear backlash.

Side gear backlash:
0.10 — 0.20 mm (0.0039 — 0.0079 in)

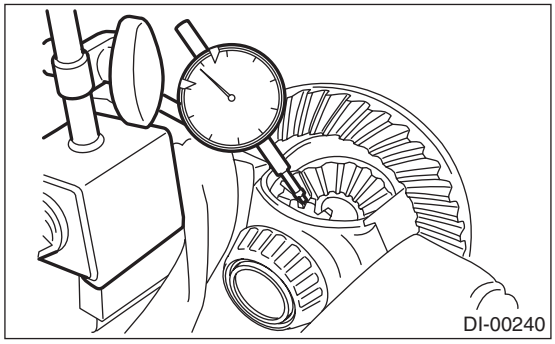
DI-00240

(2) Adjust the backlash as specified by selecting the side gear thrust washer.

Side gear thrust washer	
Part No.	Thickness mm (in)
383445201	0.75 — 0.80 (0.0295 — 0.0315)
383445202	0.80 — 0.85 (0.0315 — 0.0335)
383445203	0.85 — 0.90 (0.0335 — 0.0354)

(3) Check the condition of rotation after applying oil to the gear tooth surfaces and thrust surfaces.
(4) After inserting the pinion shaft lock pin into differential case, stake both sides of the hole to prevent pin from falling off.

11) Install the crown gear on differential case.

NOTE:
Before installing the bolts, apply Lock Tite to bolt threads.

Lock Tite:
THREE BOND 1324 (Part No. 004403042) or equivalent

NOTE:
Tighten diagonally while tapping the bolt heads.

Tightening torque:
105 N·m (10.7 kgf-m, 77.4 ft-lb)

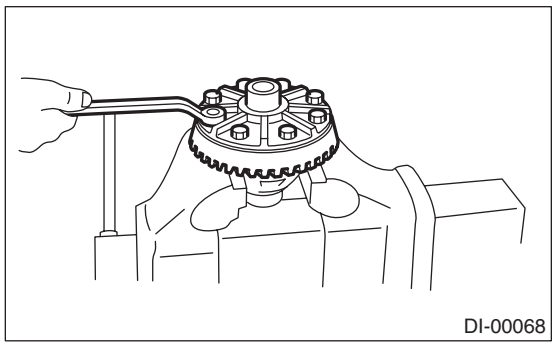
DI-00068

12) Press the side bearing into differential case using ST.
ST 398237700 DRIFT

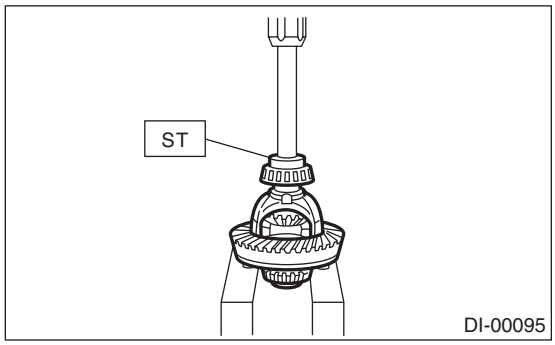

DI-00095

13) Adjusting side bearing retainer shims
(1) The driven gear backlash and side bearing preload can be determined by the side bearing retainer shim thickness.
(2) Install the differential case assembly into differential carrier in the reverse order of disassembly.

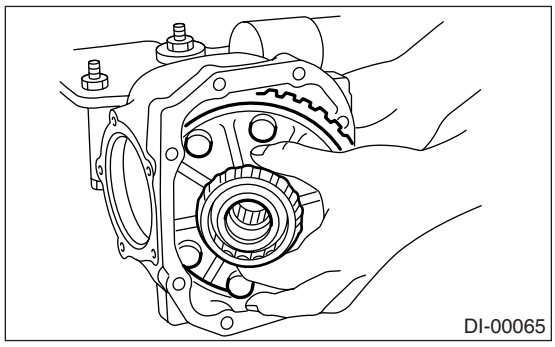
DI-00065

(3) Install the side retainer shims and O-rings to the right and left retainers from which they were removed.

NOTE:
• Replace the broken or cracked O-ring with new one.
• Replace the broken or corroded side retainer shim with a new one of same thickness.

Side bearing retainer shim	
Part No.	Thickness mm (in)
383475201	0.20 (0.0079)
383475202	0.25 (0.0098)
383475203	0.30 (0.0118)
383475204	0.40 (0.0157)
383475205	0.50 (0.0197)

(4) Align the arrow mark on differential carrier with the mark on side retainer during installation.

NOTE:
Be careful that side bearing outer race is not damaged by bearing roller.

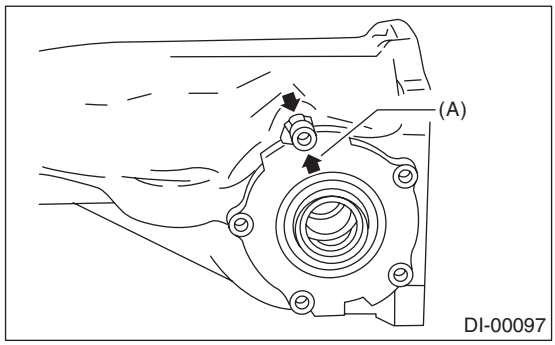

(A) Arrow mark

(5) Tighten the side bearing retainer bolts.

NOTE:
Before tightening the two side bearing retainer bolts, apply Lock Tite to bolt threads.

Lock Tite:
THREE BOND 1105 (Part No.004403010) or equivalent

Tightening torque:
10.3 N·m (1.05 kgf-m, 7.6 ft-lb)

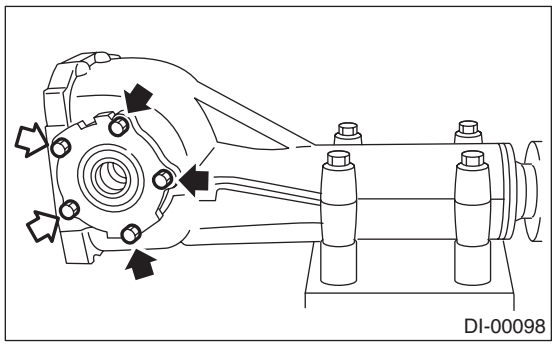

(6) Measure the crown gear-to-drive pinion backlash. Set the magnet base on differential carrier. Align the contact point of dial gauge with tooth face of crown gear, and move the crown gear while holding drive pinion still. Read the value indicated on dial gauge.

Backlash:
0.10 — 0.20 mm (0.0039 — 0.0079 in)

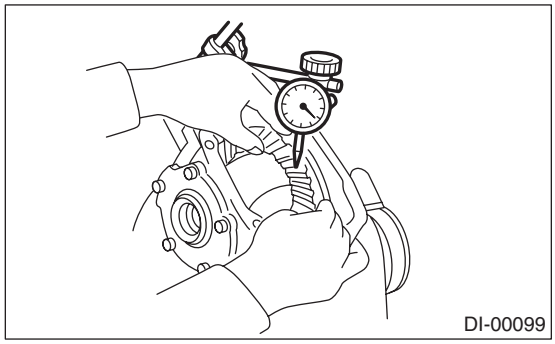

(7) At the same time, measure the total preload of drive pinion. Compared with the resistance when differential case is not installed, if the total preload is not within specification, adjust the thickness of side bearing retainer shims, increasing/reducing by an even amount at a time.

Total preload:
20.7 — 54.4 N (2.1 — 5.5 kgf, 4.7 — 12.2 lb)

14) Re-check the crown gear-to-pinion backlash.

Backlash:
0.10 — 0.20 mm (0.0039 — 0.0079 in)

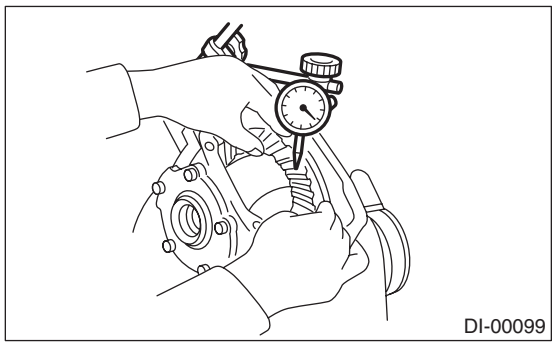

15) Check the crown gear runout on its back surface, and make sure that pinion and crown gear rotate smoothly.

Limit of runout:
Less than 0.05 mm (0.0020 in)

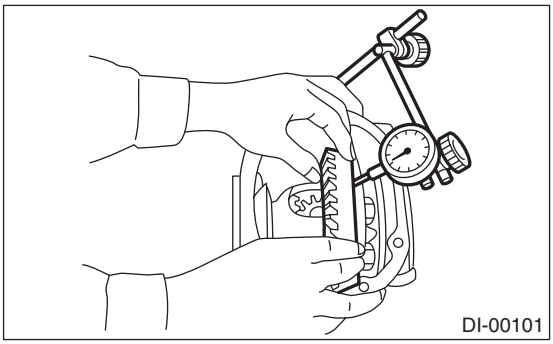

16) Checking and adjusting tooth contact of crown gear

(1) Apply an even coat of red lead on both sides of three or four teeth on the crown gear. Check the contact pattern after rotating the crown gear several revolutions back and forth until a definite contact pattern appears on the crown gear.

(2) When the contact pattern is incorrect, readjust according to the instructions given in "TOOTH CONTACT PATTERN".

NOTE:
Be sure to wipe off red lead completely after adjustment is completed.

- Correct tooth contact

Checking item: Tooth contact pattern is slightly shifted toward to toe side under no-load rotation. (When loaded, contact pattern moves toward heel)

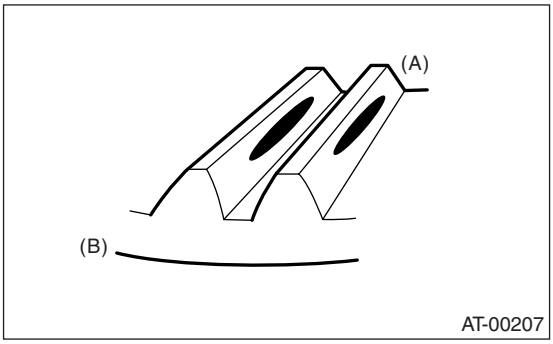

(A) Toe side
(B) Heel side

- Face contact

Checking item: Backlash is too large.
Contact pattern

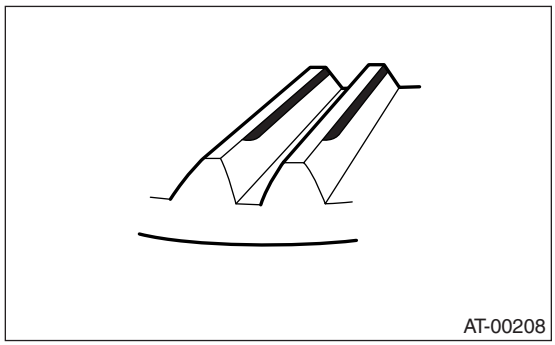

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

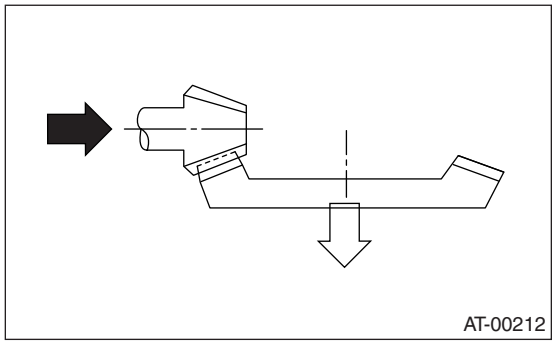

- Flank contact

Checking item: Backlash is too small.
Contact pattern

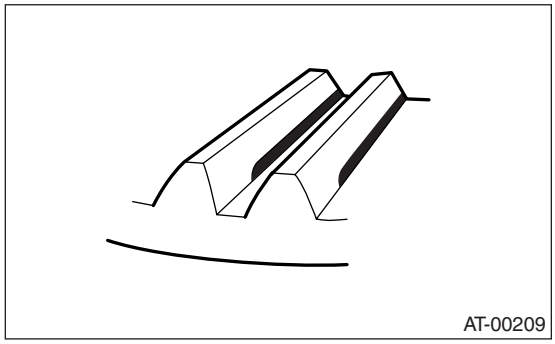

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

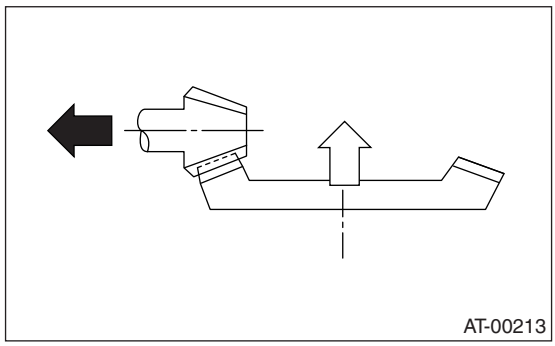

- Toe contact (Inside end contact)

Checking item: Contact area is small.
Contact pattern

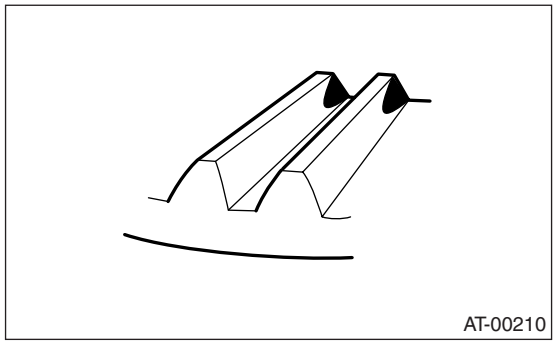

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

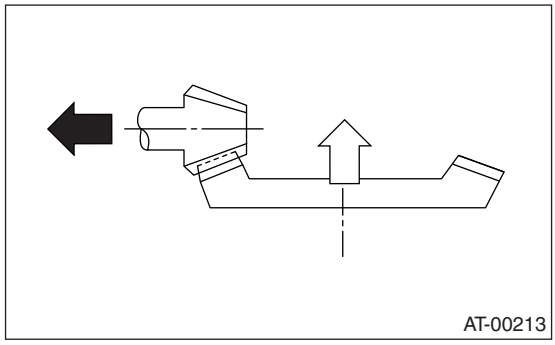

- Heel contact (Outside end contact)

Checking item: Contact area is small.
Contact pattern

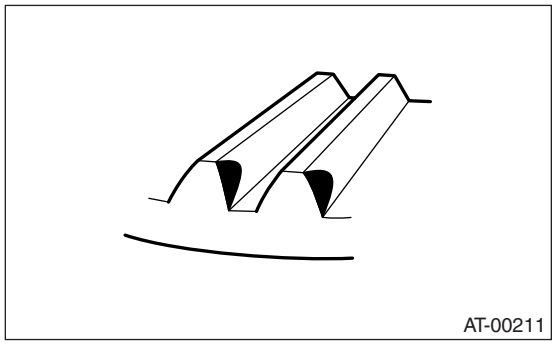

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

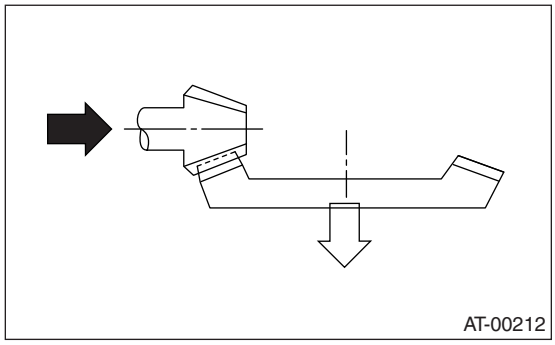

17) If proper tooth contact is not obtained, once again adjust the drive pinion height by changing RH and LH side bearing retainer shims and the hypoid gear backlash.
18) Install the oil seals to the right and left side bearing retainers.
19) Align the arrow mark on differential carrier with the mark on side retainer during installation.

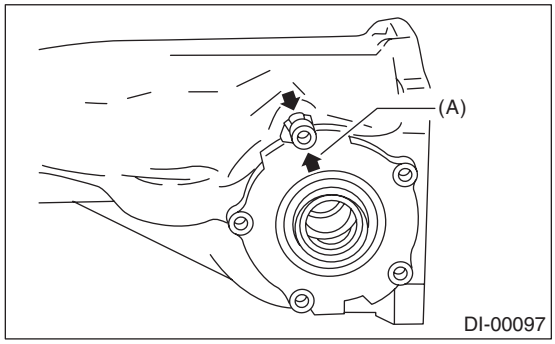

(A) Arrow mark

20) Tighten the side bearing retainer bolts.

Lock Tite:
THREE BOND 1105 (Part No. 004403010) or equivalent

Tightening torque:
10.3 N·m (1.05 kgf-m, 7.6 ft-lb)

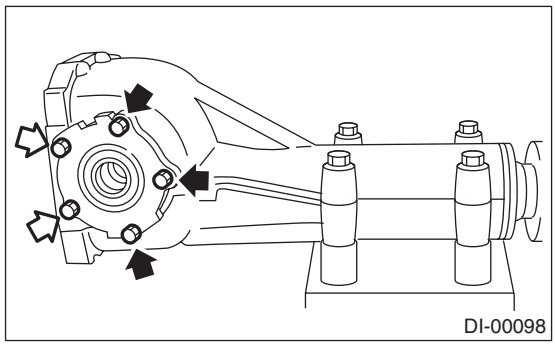

21) Install the new gasket and rear cover and tighten the bolts to specified torque.

Tightening torque:
29 N·m (3.0 kgf-m, 21.7 ft-lb)

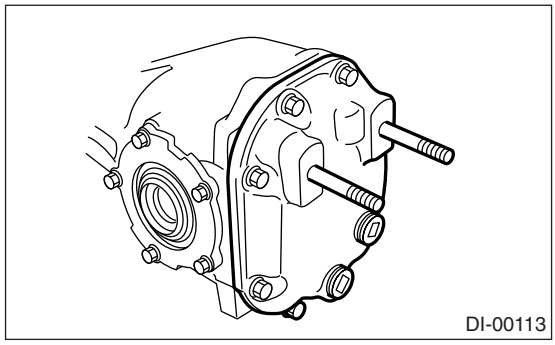

22) Install the breather cap.
23) Install the drain plug and filler plug.

Tightening torque:
49 N·m (5.0 kgf-m, 36.2 ft-lb)

2. STi MODEL

1) Precautions for assembling
- Assemble in the reverse order of disassembling.
- Check and adjust each part during assembly.
- Keep the shims and washers in order, so that they are not improperly installed.
- Thoroughly clean the surfaces on which the shims, washers and bearings are to be installed.
- Apply gear oil when installing the bearings and thrust washers.
- Be careful not to mix up the right and left hand races of the bearings.
- Replace the oil seal with a new one at every disassembly. Apply chassis grease between the lips when installing the oil seal.

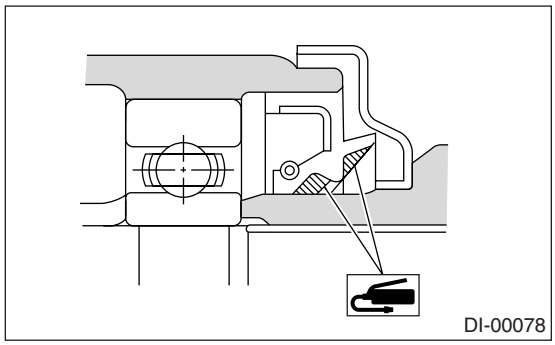

- Adjust the bearing preload with spacer and washer between front and rear bearings. Pinion height adjusting shim are not affected by this adjustment. The adjustment must be carried out without oil seal inserted.

2) Press-fit the rear bearing race into differential carrier using ST.
ST 398417700 DRIFT

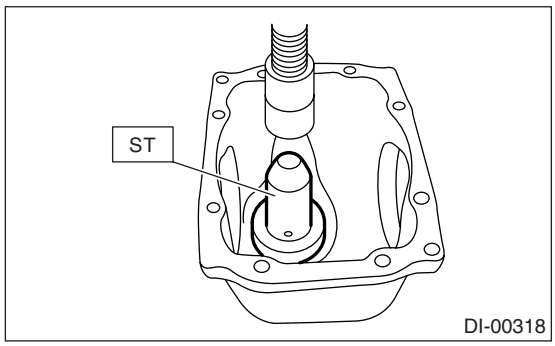

3) Press-fit the front bearing race into differential carrier using ST.
ST 398477702 DRIFT

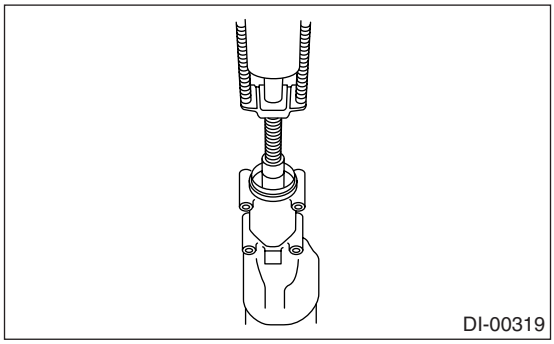

4) Pinion height adjusting shim selection.
(1) Measure the thickness of inserted pinion height adjusting shim.

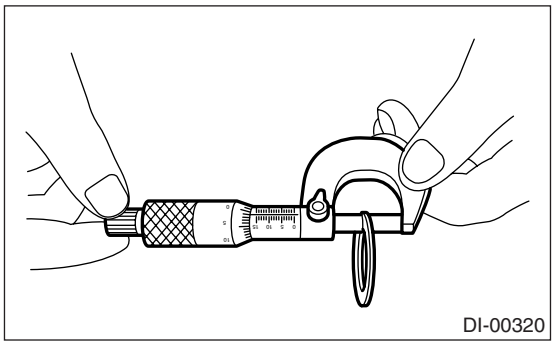

(2) Read the punch mark of installed drive pinion gear and new one.

NOTE:
If there is no punch mark, it means 0 (zero).

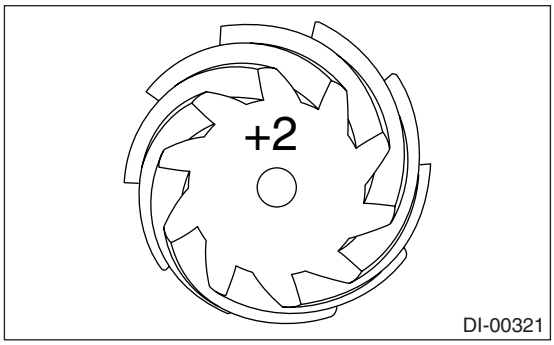

(3) Obtain the thickness of pinion height adjust shim to be inserted from the following formula, and replace the inserted shim with this one.
T = T1 + (T2 x 0.01 − T3 x 0.01)

T mm	Thickness of selected pinion height adjusting shim.
T1 mm	Thickness of inserted pinion height adjusting shim.
T2 mm	Punch mark number on installed drive pinion gear.
T3 mm	Punch mark number on new drive pinion gear.

(Example of calculation)
T1 = 3.30, T2 = +2, T3 = −1
T = 3.30 + {(2 x 0.01) − (−1 x 0.01)} = 3.33
Result: Thickness = 3.33 mm
Therefore use the shim 38336AA310.

Pinion height adjusting shim	
Part No.	Thickness T mm (in)
38336AA230	3.09 (0.1217)
38336AA240	3.12 (0.1228)
38336AA250	3.15 (0.1240)
38336AA260	3.18 (0.1252)
38336AA270	3.21 (0.1264)
38336AA280	3.24 (0.1276)
38336AA290	3.27 (0.1287)
38336AA300	3.30 (0.1299)
38336AA310	3.33 (0.1311)
38336AA320	3.36 (0.1323)
38336AA330	3.39 (0.1335)
38336AA340	3.42 (0.1346)
38336AA350	3.45 (0.1358)
38336AA360	3.48 (0.1370)
38336AA370	3.51 (0.1382)
38336AA380	3.54 (0.1394)
38336AA390	3.57 (0.1406)
38336AA400	3.60 (0.1417)
38336AA410	3.63 (0.1429)
38336AA420	3.66 (0.1441)

5) Install the selected pinion height adjusting shim on drive pinion, and press-fit the rear bearing cone into position with ST.
ST 18674AA000 INSTALLER

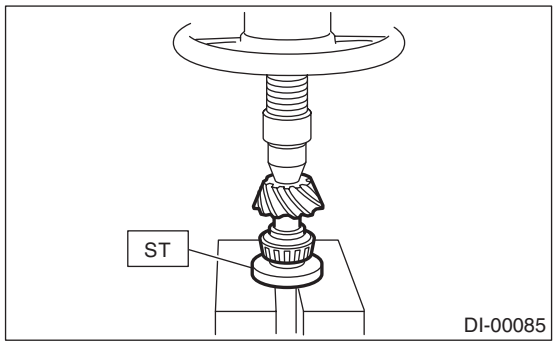

6) Insert the drive pinion into differential carrier, install the previously selected bearing preload adjusting spacer and washer.

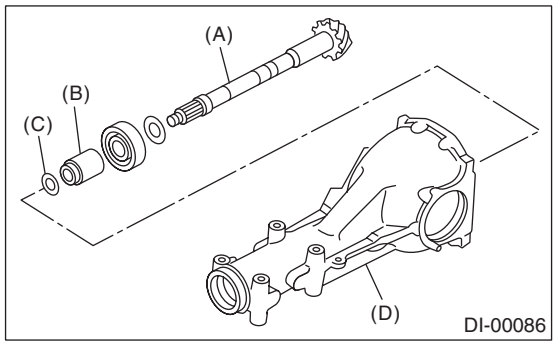

(A) Drive pinion
(B) Bearing preload adjusting spacer
(C) Bearing preload adjusting washer
(D) Differential carrier

7) Insert the spacer, then press-fit the pilot bearing with STs.
ST1 399780104 WEIGHT
ST2 899580100 INSTALLER
ST3 398507703 DUMMY COLLER
ST4 498937110 HOLDER DRIVE PINION

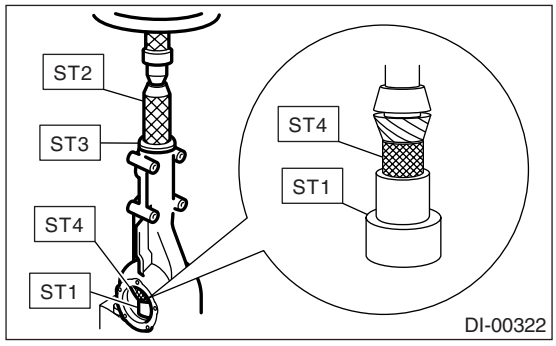

8) Press-fit the companion flange with ST1, ST2 and ST3.

NOTE:
Be careful not to damage the bearing.
ST1 899874100 INSTALLER
ST2 399780104 WEIGHT
ST3 498937110 HOLDER DRIVE PINION

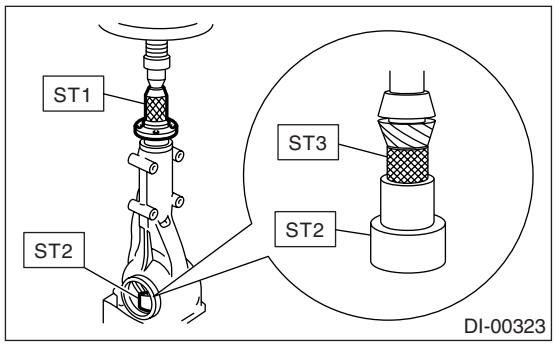

9) Install the self-locking nut. Then tighten it with the ST.
ST 498427200 FLANGE WRENCH

Tightening torque:
181 N·m (18.5 kgf-m, 134 ft-lb)

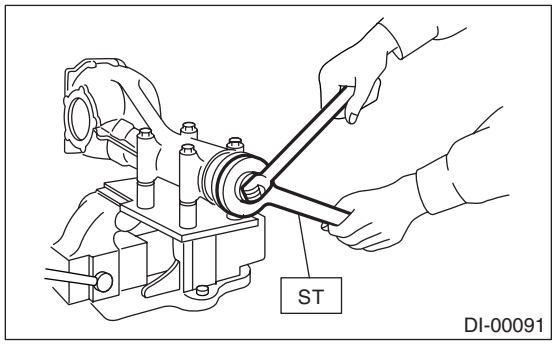

10) Rotate the drive pinion shaft more than ten times to accustom each taper roller bearing, and then measure the preload.

Bearing preload:
25.9 — 41.5 N (2.64 — 4.23 kgf, 5.8 — 9.3 lb)

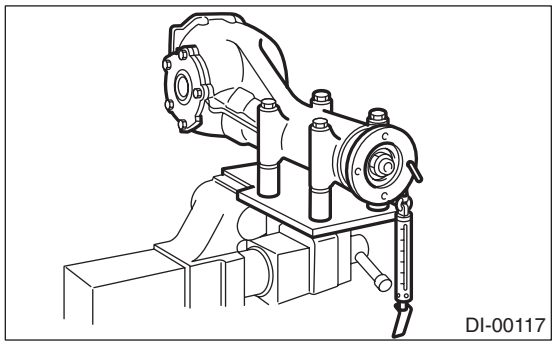

11) If bearing preload is out of specification, adjust to specification by selecting preload adjusting washer and spacer from the following table.

	Part No.	Thickness mm (in)
Preload adjusting washer	383705200	2.59 (0.1020)
	383715200	2.57 (0.1012)
	383725200	2.55 (0.1004)
	383735200	2.53 (0.0996)
	383745200	2.51 (0.0988)
	383755200	2.49 (0.0980)
	383765200	2.47 (0.0972)
	383775200	2.45 (0.0965)
	383785200	2.43 (0.0957)
	383795200	2.41 (0.0949)
	383805200	2.39 (0.0941)
	383815200	2.37 (0.0933)
	383825200	2.35 (0.0925)
	383835200	2.33 (0.0917)
	383845200	2.31 (0.0909)
	Part No.	Length mm (in)
Preload adjusting spacer	31454AA130	52.2 (2.055)
	31454AA140	52.4 (2.063)
	31454AA150	52.6 (2.071)
	31454AA160	52.8 (2.079)
	31454AA170	53.0 (2.087)
	31454AA180	53.2 (2.094)

12) Hold the companion flange with ST and remove the self-lock nut.
ST 498427200 FRANGE WRENCH

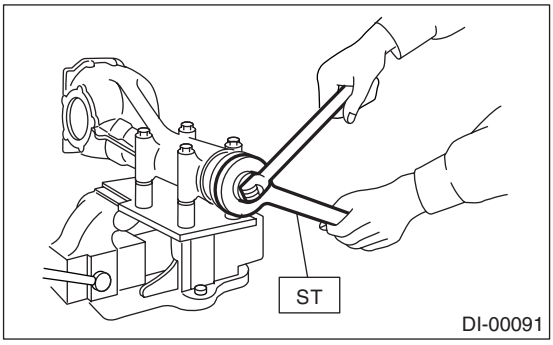

13) Extract the companion flange with a puller.

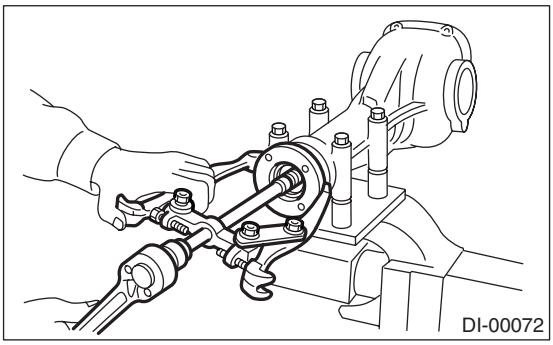

14) Fit a new oil seal with ST.

NOTE:
- Press-fit until the end of oil seal is 1 mm (0.04 in) inward from end of carrier.
- Apply grease between the oil seal lips.

ST 498447120 INSTALLER

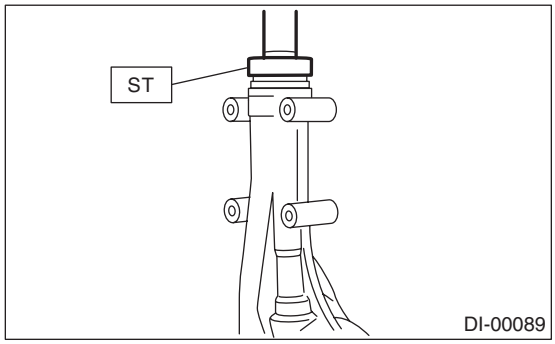

15) Press-fit the companion flange with ST1, ST2 and ST3.
ST1 899874100 INSTALLER
ST2 399780104 WEIGHT
ST3 498937110 HOLDER DRIVE PINION

NOTE:
Be careful not to damage the bearing.

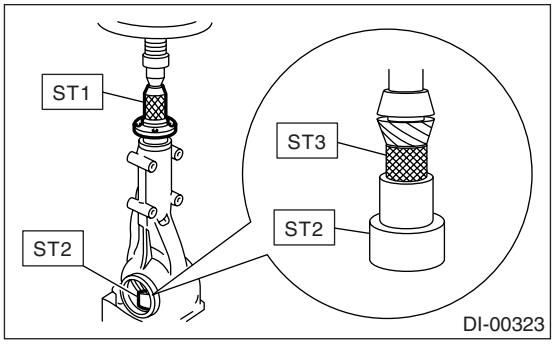

16) Install the self-lock nut. Then tighten it with the ST.
ST 498427200 FRANGE WRENCH

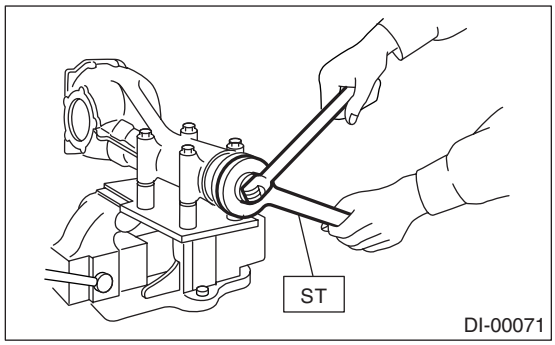

17) Install the crown gear on differential case.

NOTE:
Before installing the bolts, apply Lock Tite to bolt threads.

Lock Tite:
THREE BOND 1324 (Part No.004403042) or equivalent

NOTE:
Tighten diagonally while tapping the bolt heads.

Tightening torque:
105 N·m (10.7 kgf-m, 77.4 ft-lb)

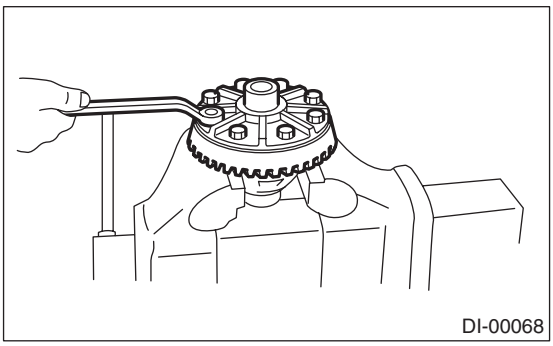
DI-00068

18) Press-fit the side bearing onto differential case with ST.
ST 398487700 DRIFT

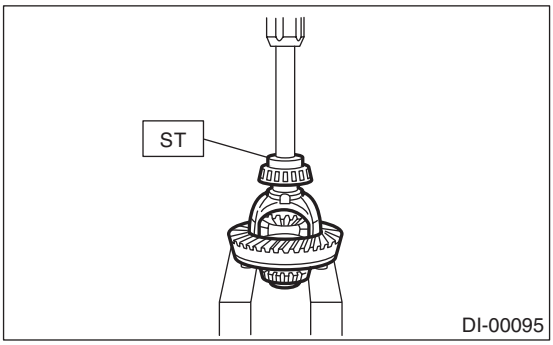

DI-00095

19) Assembling side retainer.
(1) Press-fit the side bearing outer race with press and ST.
ST 398417700 DRIFT

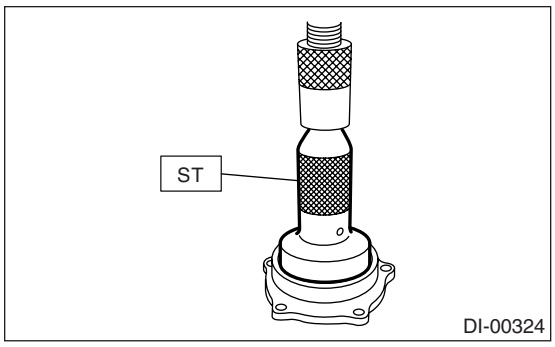

DI-00324

(2) Install the oil seal. <Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>

20) Adjusting side bearing retainer shims
(1) The driven gear backlash and side bearing preload can be determined by the side bearing retainer shim thickness.
(2) Install the differential case assembly into differential carrier in the reverse order of disassembly.

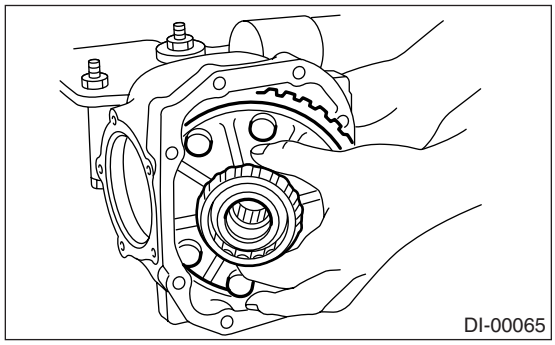
DI-00065

(3) Install the side retainer shims and O-rings to the right and left retainers from which they were removed.

NOTE:
• Replace the broken or cracked O-ring with new one.
• Replace the broken or corroded side retainer shim with a new one of same thickness.

Side bearing retainer shim	
Part No.	Thickness mm (in)
383475201	0.20 (0.0079)
383475202	0.25 (0.0098)
383475203	0.30 (0.0118)
383475204	0.40 (0.0157)
383475205	0.50 (0.0197)

(4) Align the arrow mark on differential carrier with the mark on side retainer during installation.

NOTE:
Be careful that side bearing outer race is not damaged by bearing roller.

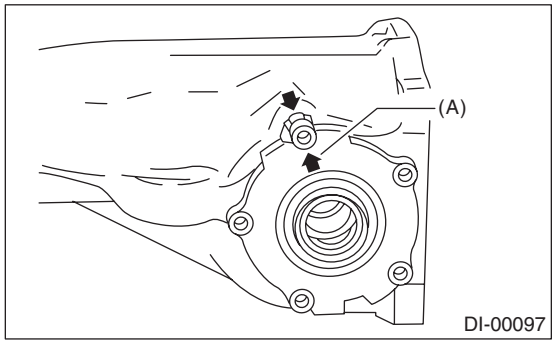

DI-00097

(A) Arrow mark

(5) Tighten the side bearing retainer bolts.

Tightening torque:
10.3 N·m (1.05 kgf-m, 7.6 ft-lb)

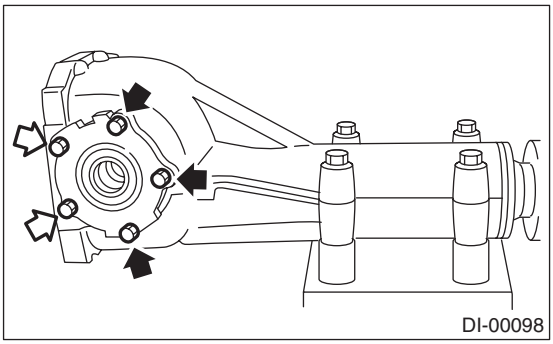

(6) Measure the crown gear-to-drive pinion backlash. Set the magnet base on differential carrier. Align the contact point of dial gauge with tooth face of crown gear, and move the crown gear while holding drive pinion still. Read the value indicated on dial gauge.

Backlash:
0.10 — 0.20 mm (0.0039 — 0.0079 in)

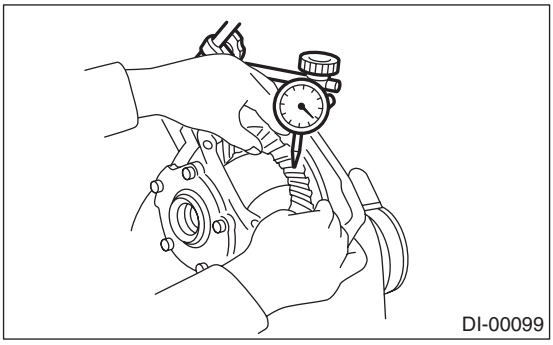

(7) At the same time, measure the total preload of drive pinion. Compared with the resistance when differential case is not installed, if the total preload is not within the specified range, readjust side bearing retainer shims, increasing/reducing by an even amount at a time.

Total preload:
28.5 — 57.0 N (2.91 — 5.81 kgf, 6.4 — 12.8 lb)

21) Re-check the crown gear-to-pinion backlash.

Backlash:
0.10 — 0.20 mm (0.0039 — 0.0079 in)

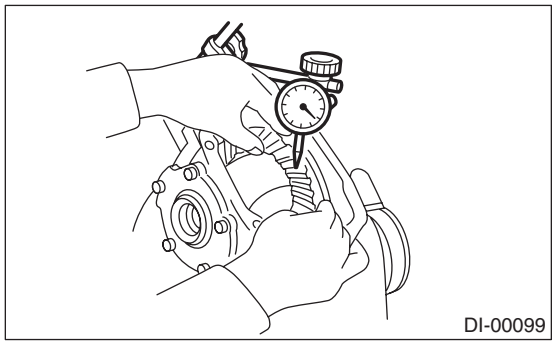

22) Check the crown gear runout on its back surface, and make sure that pinion and crown gear rotate smoothly.

Limit of runout:
Less than 0.05 mm (0.0020 in)

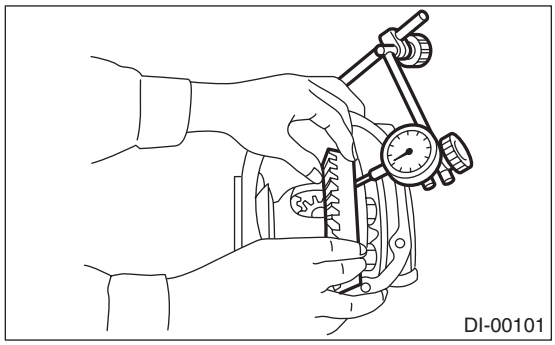

23) Checking and adjusting tooth contact of crown gear

(1) Apply an even coat of red lead on both sides of three or four teeth on the crown gear. Check the contact pattern after rotating the crown gear several revolutions back and forth until a definite contact pattern appears on the crown gear.

(2) When the contact pattern is incorrect, readjust according to the instructions given in “TOOTH CONTACT PATTERN”.

NOTE:
Be sure to wipe off red lead completely after adjustment is completed.

• Correct tooth contact

Checking item: Tooth contact pattern is slightly shifted toward to toe side under no-load rotation. (When loaded, contact pattern moves toward heel)

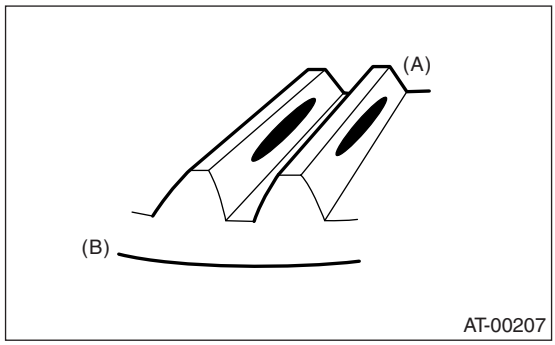

(A) Toe side
(B) Heel side

• Face contact

Checking item: Backlash is too large.

Contact pattern

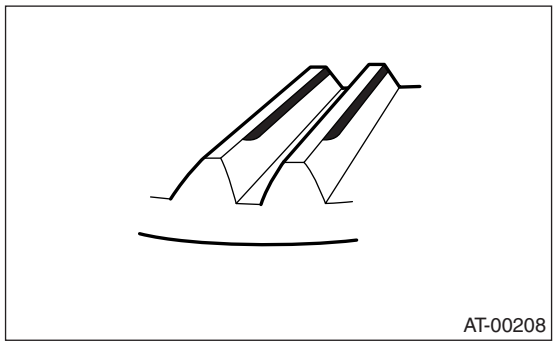

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

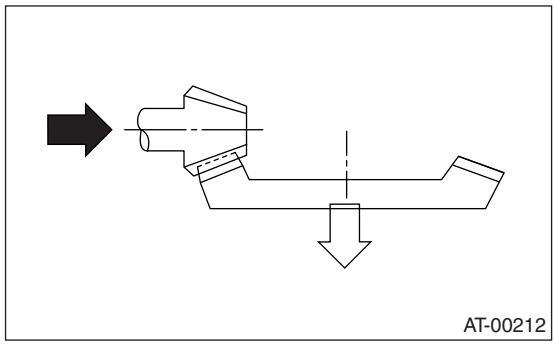

• Flank contact

Checking item: Backlash is too small.

Contact pattern

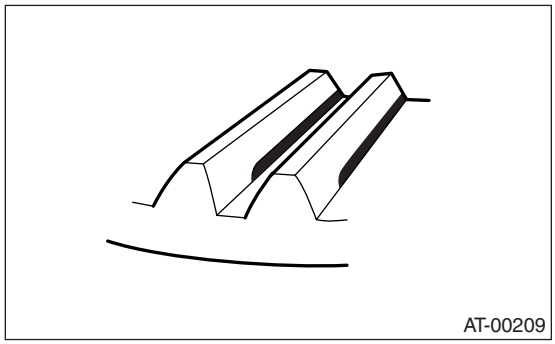

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

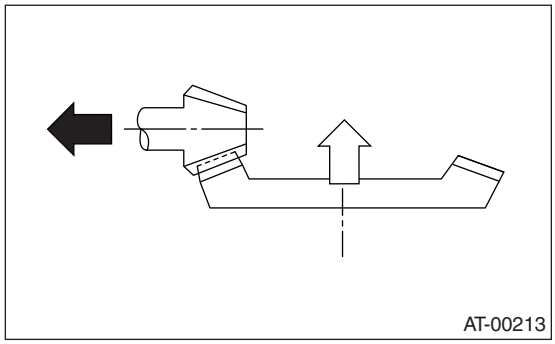

• Toe contact (Inside end contact)

Checking item: Contact area is small.

Contact pattern

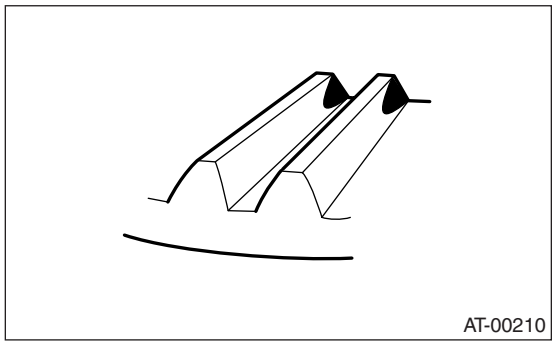

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

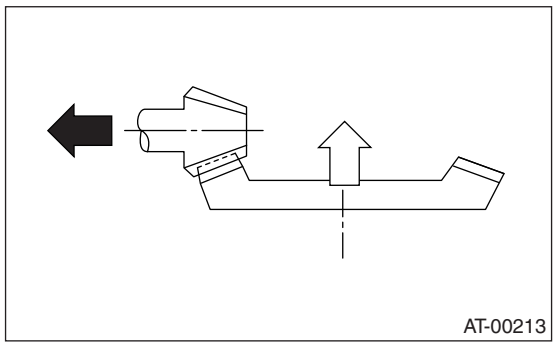

- Heel contact (Outside end contact)

Checking item: Contact area is small.
Contact pattern

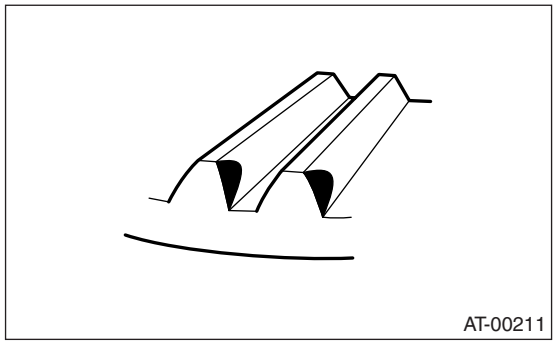

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

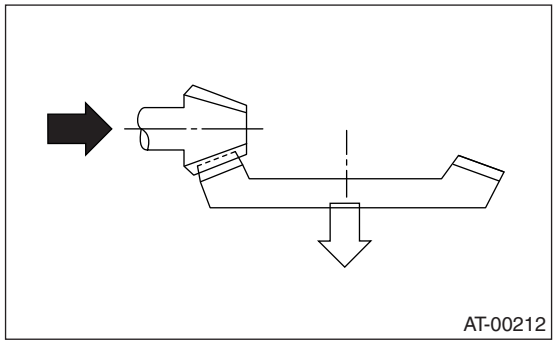

24) If proper tooth contact is not obtained, once again adjust the drive pinion height by changing RH and LH side bearing retainer shims and the hypoid gear backlash.
25) Install the oil seals to the right and left side bearing retainers. <Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>
26) Align the arrow mark on differential carrier with the mark on side retainer during installation.

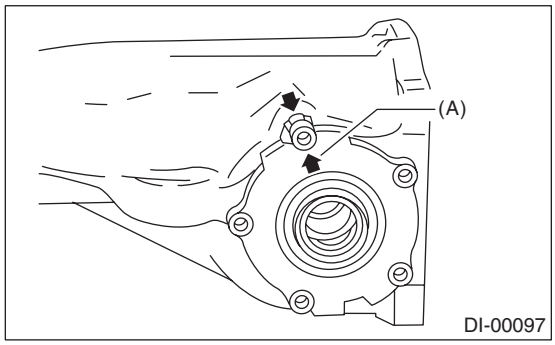

(A) Arrow mark

27) Tighten the side bearing retainer bolts.

Lock Tite:
THREE BOND 1105 (Part No. 004403010) or equivalent

Tightening torque:
10.3 N·m (1.05 kgf-m, 7.6 ft-lb)

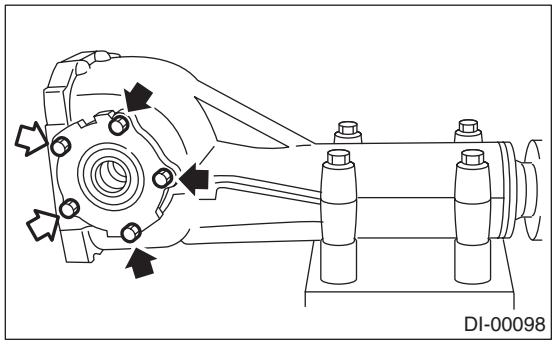

28) Install the new gasket and rear cover and tighten the bolts to specified torque.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

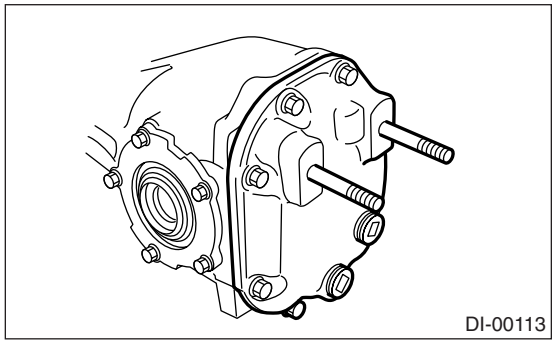

29) Install the breather cap.
30) Install the drain plug and filler plug or oil temperature sensor.

Tightening torque:
49 N·m (5.0 kgf-m, 36.2 ft-lb)

E: INSPECTION

Wash all the disassembled parts clean, and examine them for wear, damage, or other defects. Repair or replace defective parts as necessary.

1) Crown gear and drive pinion

• If abnormal tooth contact is evident, find out the cause and adjust to give correct tooth contact at assembly. Replace the gear if excessively worn or incapable of adjustment.

• If crack, score, or seizure is evident, replace as a set. Slight damage of tooth can be corrected by oil stone or the like.

2) Side gear and pinion mate gear

• Replace if crack, score, or other defects are evident on tooth surface.

• Replace if thrust washer contacting surface is worn or seized. Slight damage of the surface can be corrected by oil stone or the like.

3) Bearing

Replace if seizure, peeling, wear, rust, dragging during rotation, abnormal noise or other defect is evident.

4) Thrust washers of side gear and pinion mate gear

Replace if seizure, flaw, abnormal wear or other defect is evident.

5) Oil seal

Replace if deformed or damaged, and at every disassembling.

6) Differential carrier

Replace if the bearing bores are worn or damaged.

7) Differential case

Replace if its sliding surfaces are worn or cracked.

8) Companion flange

Replace if the oil seal lip contacting surfaces have flaws.

1. SIDE GEAR BACKLASH

Using a dial gauge, check the backlash of the side gear.

Side gear backlash:
0.1 — 0.2 mm (0.004 — 0.008 in)

If the side gear backlash is not within the specification, adjust clearance as specified by selecting the side gear thrust washer.

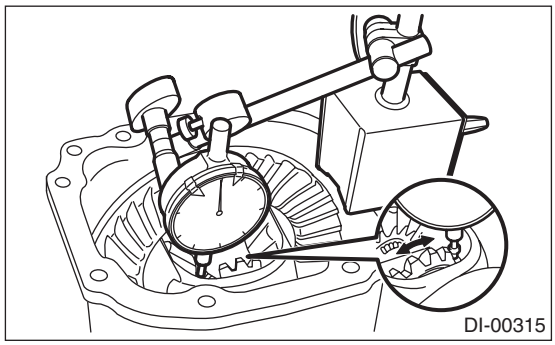
DI-00315

2. CROWN GEAR BACKLASH

Using a dial gauge, check the backlash of the crown gear.

Crown gear backlash:
0.1 — 0.2 mm (0.004 — 0.008 in)

If the crown gear backlash is not within the specification, adjust the side bearing preload or repair if necessary.

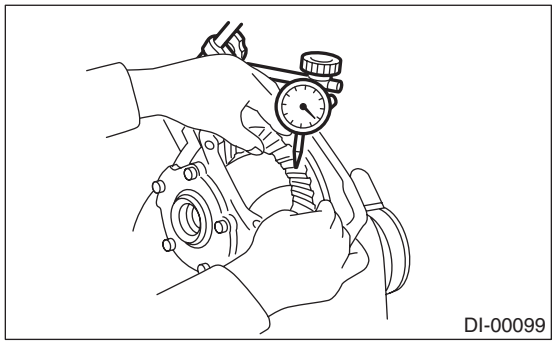
DI-00099

3. CROWN GEAR RUNOUT

Using a dial gauge, check the crown gear runout.

Crown gear runout:
Less than 0.05 mm (0.0020 in)

If the crown gear runout exceeds 0.05 mm (0.0020 in), replace the crown gear.

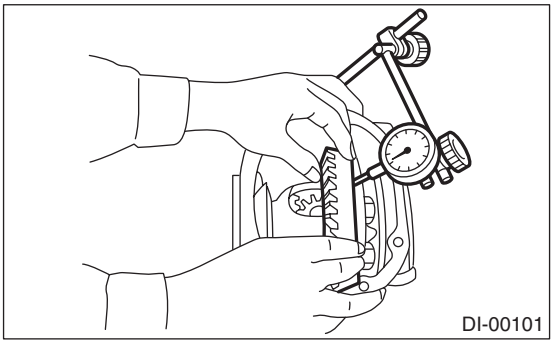

4. TOOTH CONTACT BETWEEN CROWN GEAR AND DRIVE PINION

Inspect the tooth contact between crown gear and driven pinion. <Ref. to DI-35, ASSEMBLY, Rear Differential for T-type.>

5. TOTAL PRELOAD

Using a gauge, check the turning resistance increase.

Total preload:
Except for STi model:
20.7 — 54.4 N (2.1 — 5.5 kgf, 4.7 — 12.2 lb)
STi model:
28.5 — 57.0 N (2.9 — 5.8 kgf, 6.4 — 12.8 lb)

If the total preload is not within the specification, adjust the side bearing retainer shims.

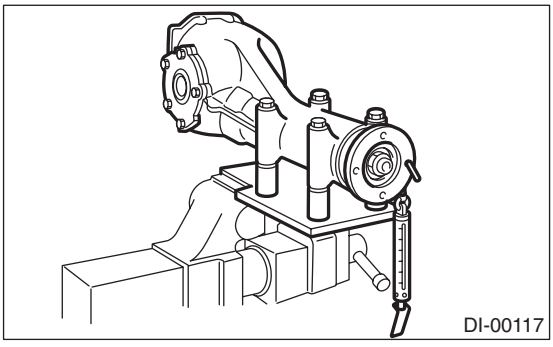

F: ADJUSTMENT

1. SIDE GEAR BACKLASH

Adjust the side gear backlash. <Ref. to DI-35, ASSEMBLY, Rear Differential for T-type.>

2. CROWN GEAR BACKLASH

Adjust the crown gear backlash. <Ref. to DI-35, ASSEMBLY, Rear Differential for T-type.>

3. TOOTH CONTACT BETWEEN CROWN GEAR AND DRIVE PINION

Adjust the tooth contact between crown gear and drive pinion gear. <Ref. to DI-35, ASSEMBLY, Rear Differential for T-type.>

4. TOTAL PRELOAD

Adjust the side bearing shim. <Ref. to DI-35, ASSEMBLY, Rear Differential for T-type.>

5. Rear Differential for VA-type

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Move the select lever or gear shift lever to “N”.
4) Release the parking brake.
5) Loosen the wheel nuts.
6) Lift-up the vehicle.
7) Remove the wheels.
8) Remove the rear exhaust pipe and muffler.
Non-turbo model without OBD
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
Non-turbo model with OBD
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
9) Remove the heat shield cover.

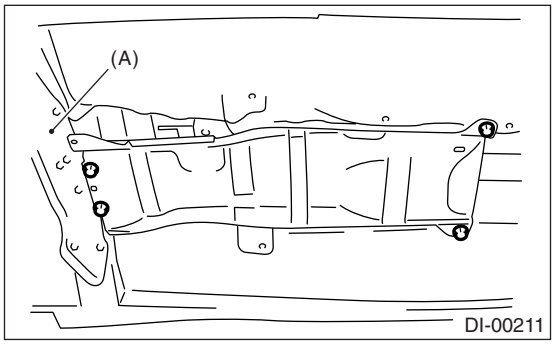

(A) Transmission mounting

10) Remove the front cover of rear differential mount.

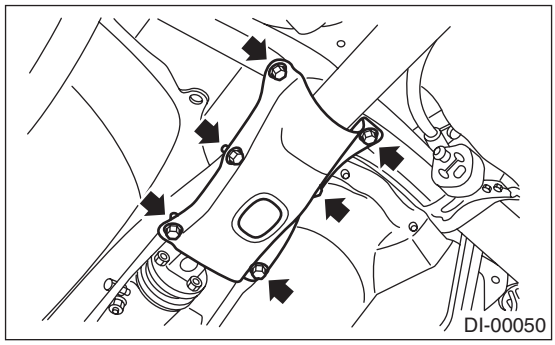

11) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>

12) Remove the clamps and bracket of parking brake cable.

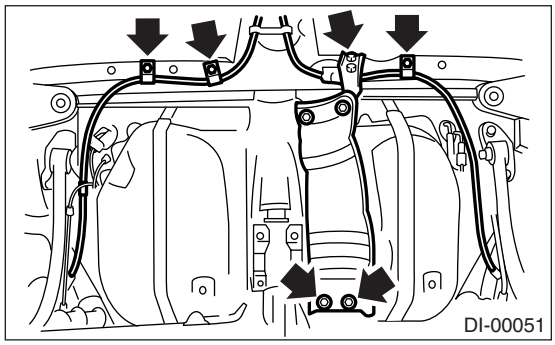

13) Remove the DOJ of rear drive shaft from rear differential.<Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>

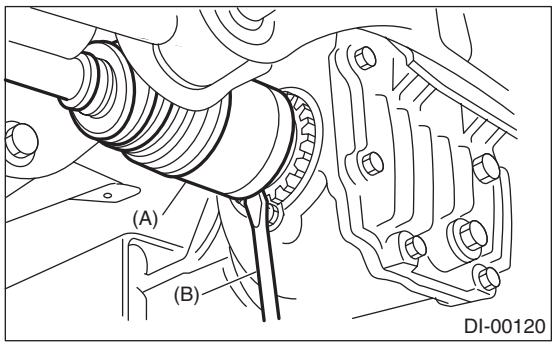

(A) DOJ
(B) Tire lever

14) Secure the rear drive shaft to rear crossmember using wire.

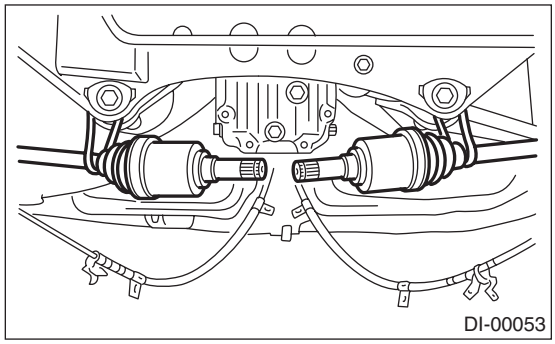

15) Remove the lower bracket.

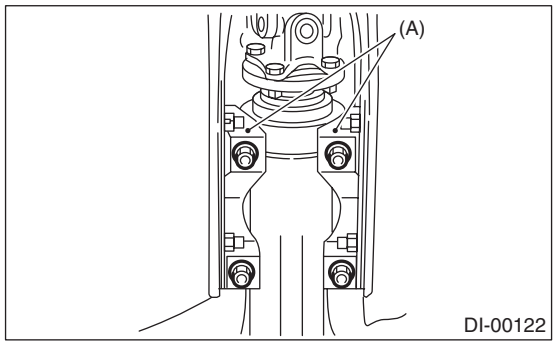

(A) Lower bracket

16) Support the rear differential with transmission jack.

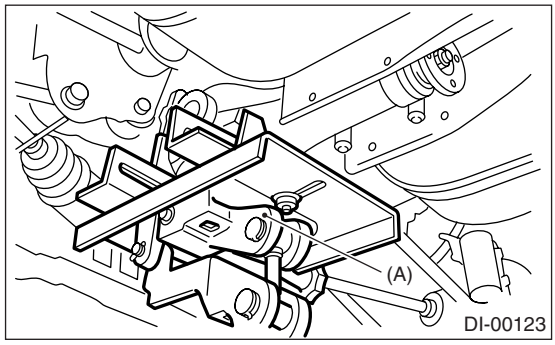

(A) Transmission jack

17) Remove the self-locking nuts and bolts.

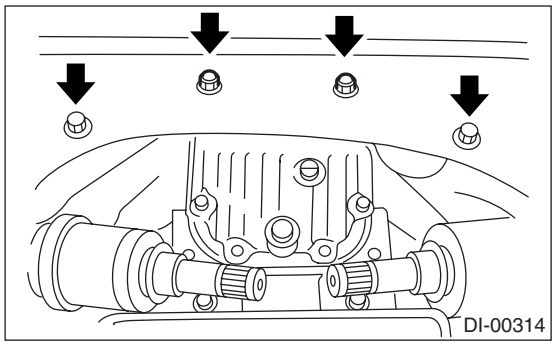

18) Remove the bolts which secure the rear differential front member to bolts B.

NOTE:
Support the front member with use of a helper to prevent it from dropping.

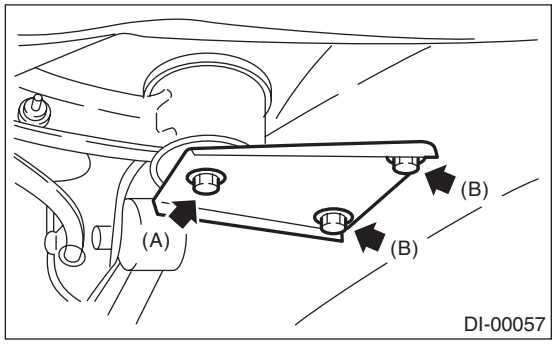

(A) Bolt A
(B) Bolt B

19) Remove the bolt A.
20) While slowly lowering the transmission jack, move the rear differential forward, and then remove the bolts from rear crossmember.
21) Remove the front member from vehicle.

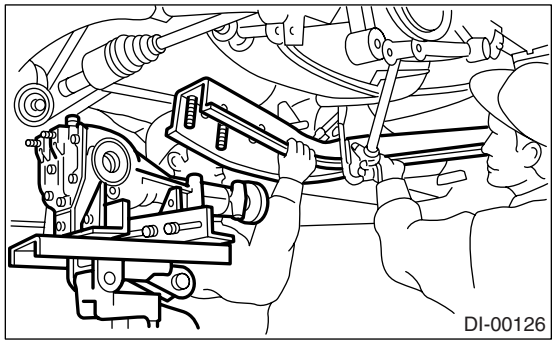

22) Remove the rear differential from vehicle.

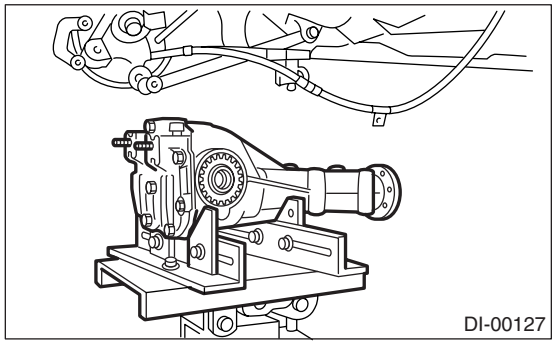

B: INSTALLATION

Install in the reverse order of removal.

1) Position the front member on body by passing it under the parking brake cable and securing to rear differential.

NOTE:
When installing the rear differential front member, do not confuse the installation sequence of the upper and lower stoppers.

2) Install the DOJ of rear drive shaft into rear differential. <Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>

ST 28099PA090 SIDE OIL SEAL PROTECTOR

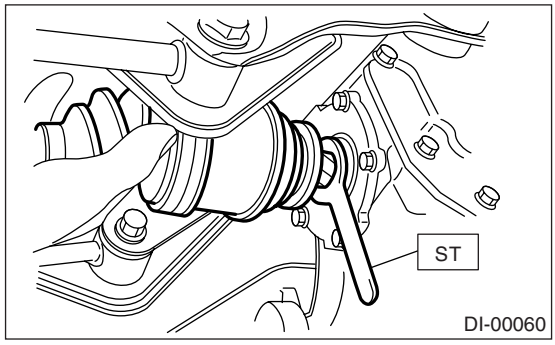

3) Install in the reverse order of removal.

4) After installation, fill the differential carrier with gear oil to the upper plug level. <Ref. to DI-26, Front Differential.>

C: DISASSEMBLY

To detect the real cause of trouble, inspect the following items before disassembling.

- Tooth contact of crown gear and pinion, and backlash
- Runout of crown gear at its back surface
- Total preload of drive pinion

1) Set the ST on vise and install the differential assembly to ST.

ST 398217700 ATTACHMENT

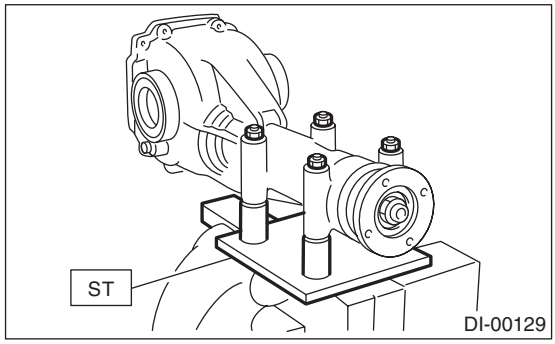

2) Drain the gear oil by removing the plug.

3) Remove the rear cover by loosening the retaining bolts.

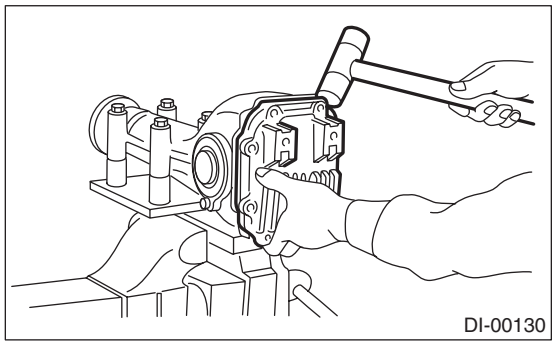

4) Replace the air breather cap.

NOTE:
Do not attempt to replace the air breather cap unless necessary.

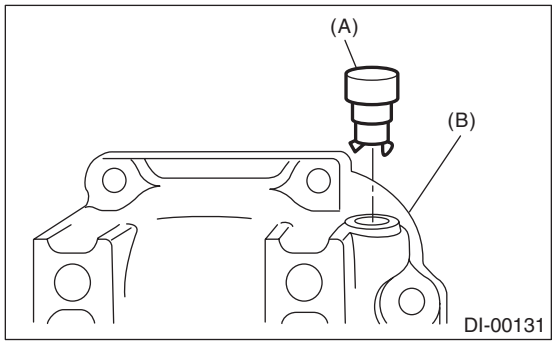

(A) Air breather cap
(B) Rear cover

5) Remove the right and left lock plates.

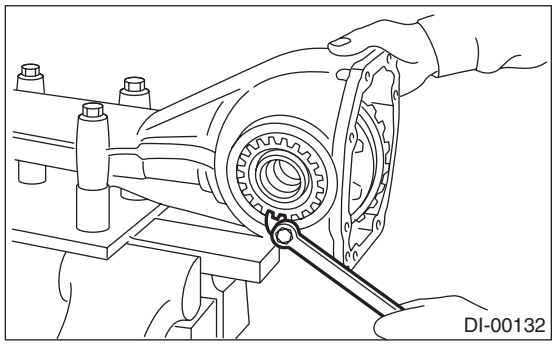

6) Remove the right and left holders with ST.
ST 499785500 WRENCH

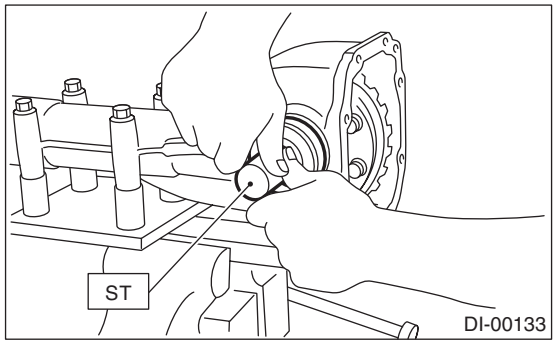

7) Pull out the differential assembly from differential case.

NOTE:
Be careful not to hit the teeth against the case.

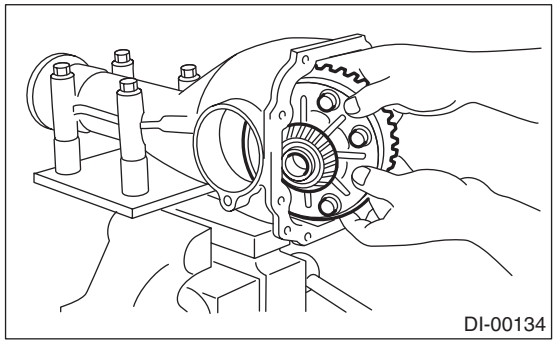

8) Remove the bearing race from right and left holders with ST1 and ST2.
ST1 499705401 PULLER ASSY
ST2 499705404 SEAT

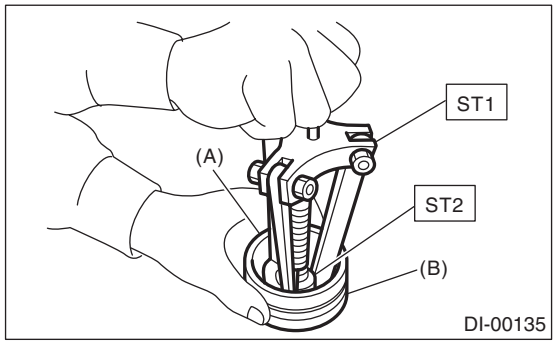

(A) Bearing race
(B) Holder

9) Remove the oil seal from right and left holders using screwdriver.

NOTE:
Perform this operation only when changing oil seal.

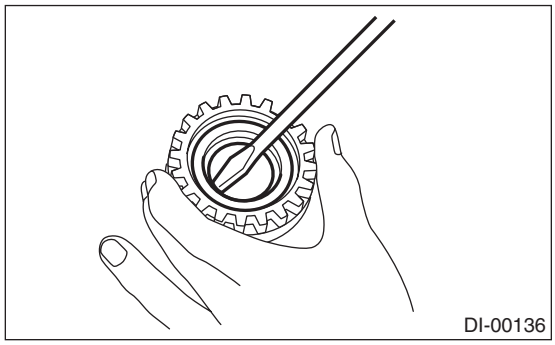

10) Extract the bearing cone with ST1 and ST2.

NOTE:
• Do not attempt to disassemble the parts unless necessary.
• Set the Puller so that its claws catch the edge of bearing cone.
• Never mix up the right and left hand bearing races and cones.

ST1 899524100 PULLER SET
ST2 399520105 SEAT

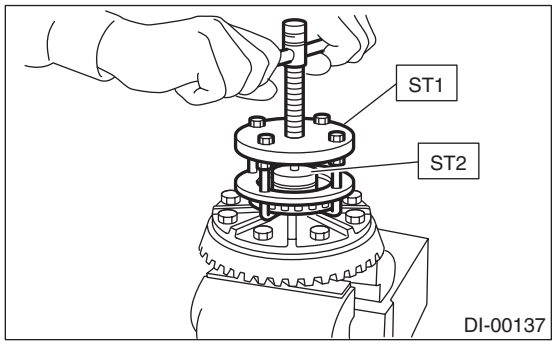

11) Remove the crown gear by loosening the crown gear bolts.

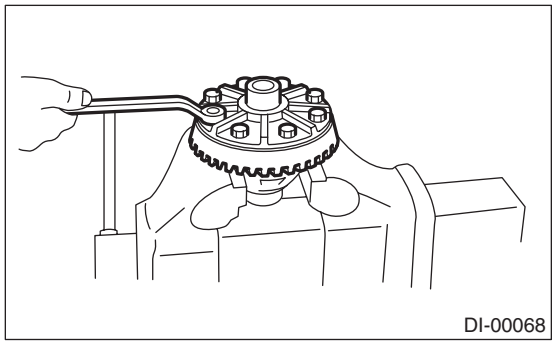

12) Drive out the pinion shaft lock pin from crown gear side.

NOTE:
The lock pin is staked at the pin hole end on the differential case; do not drive it out forcibly before unstaking it.
ST 899904100 STRAIGHT PIN REMOVER

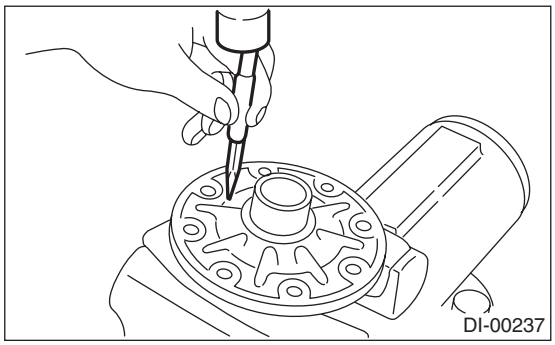

13) Draw out the pinion mate shaft and remove the pinion mate gears, side gears and thrust washers.

NOTE:
The gears as well as thrust washers should be marked or kept separated right and left, front and rear.

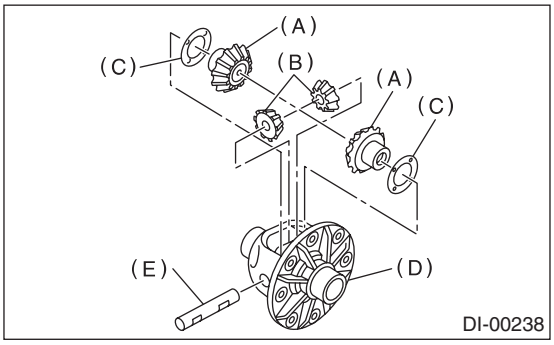

(A) Side gear
(B) Pinion mate gear
(C) Thrust washer
(D) Differential case
(E) Pinion mate shaft

14) Hold the companion flange with ST and remove the self-locking nut.
ST 498427200 FLANGE WRENCH

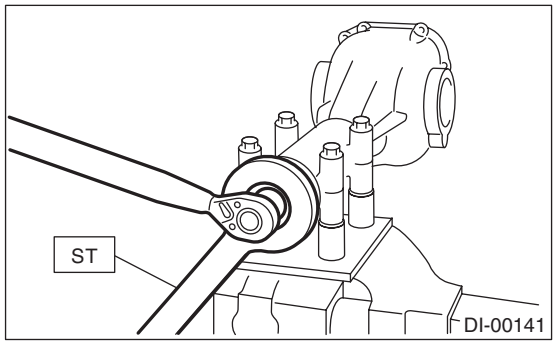

15) Extract the companion flange with a puller.

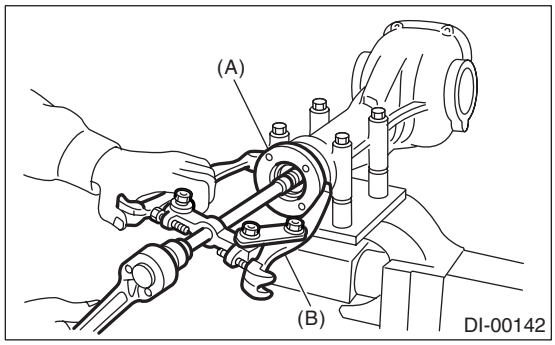

(A) Companion flange
(B) Puller

16) Press the end of drive pinion shaft and extract it together with the rear bearing cone, pinion height adjusting shim and washer.

NOTE:
Hold the drive pinion so as not to drop it.
ST 398467700 DRIFT

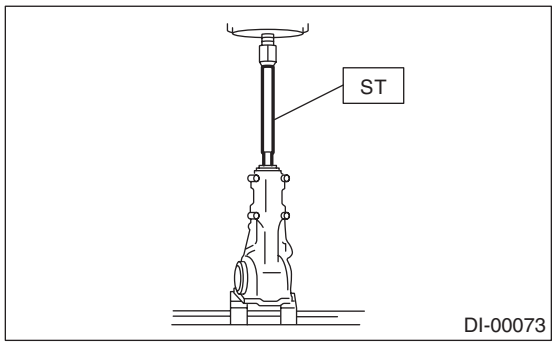

17) Remove the rear bearing cone from drive pinion by supporting the cone with ST.

NOTE:
Place the replacer so that its center-recessed side faces the pinion gear.
ST 498515500 REPLACER

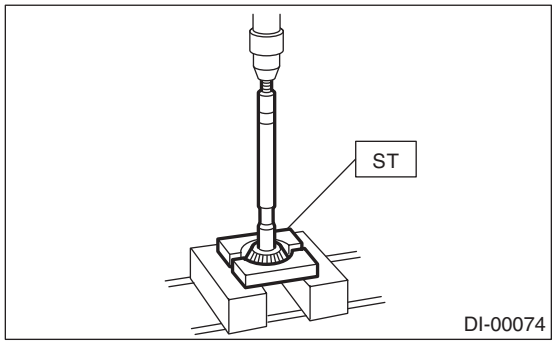

18) Remove the front oil seal from differential carrier using ST.

ST 398527700 PULLER SET

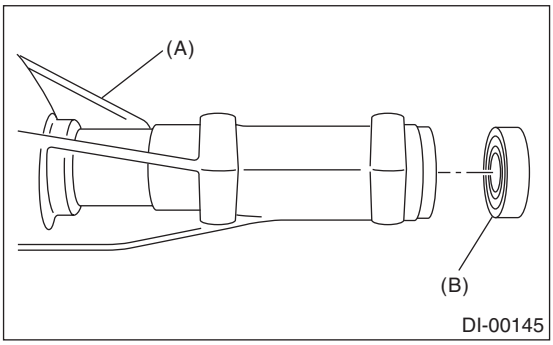

(A) Differential carrier
(B) Front oil seal

19) Remove the pilot bearing together with front bearing cone and spacer using ST.
ST 398467700 DRIFT

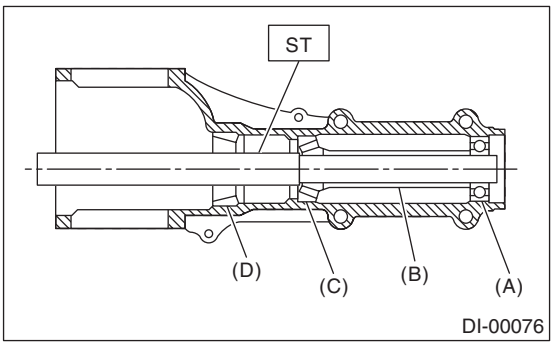

(A) Pilot bearing
(B) Spacer
(C) Front bearing
(D) Rear bearing cup

20) When replacing the bearings, tap the front bearing cup and rear bearing cup in this order out of case by using a brass bar.

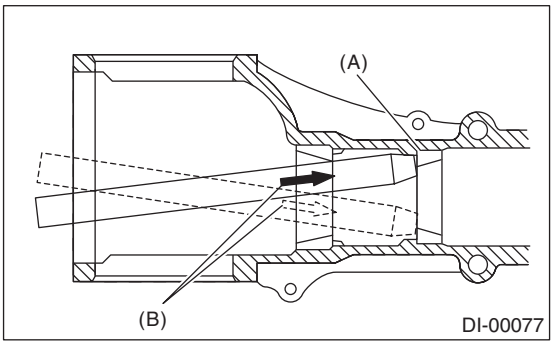

(A) 2 cutouts along diagonal lines
(B) Tap alternately with brass bar.

D: ASSEMBLY

NOTE:
Precautions for assembling
- Assemble in the reverse order of disassembling.
- Check and adjust each part during assembly.
- Keep the shims and washers in order, so that they are not improperly installed.
- Thoroughly clean the surfaces on which the shims, washers and bearings are to be installed.
- Apply gear oil when installing the bearings and thrust washers.
- Be careful not to mix up the right and left hand races of the bearings.
- Replace the oil seal with a new one at every disassembly. Apply chassis grease between the lips when installing the oil seal.

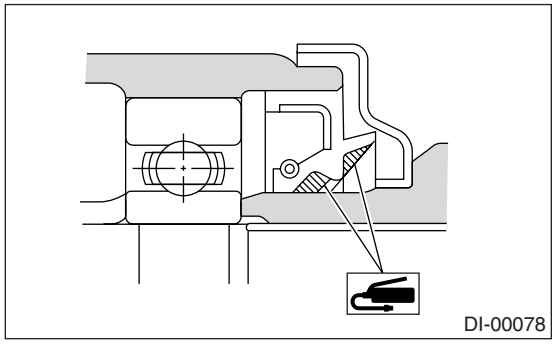

1) Adjust the preload for front and rear bearings.
Adjust the bearing preload with spacer and washer between front and rear bearings. Pinion height adjusting washer are not affected by this adjustment. The adjustment must be carried out without oil seal inserted.
(1) Press the rear bearing race into differential carrier using ST1 and ST2.
ST1 398477701 HANDLE
ST2 398477702 DRIFT
(2) Press the rear bearing race into differential carrier using ST1 and ST2.
ST1 398477701 HANDLE
ST2 498447110 DRIFT

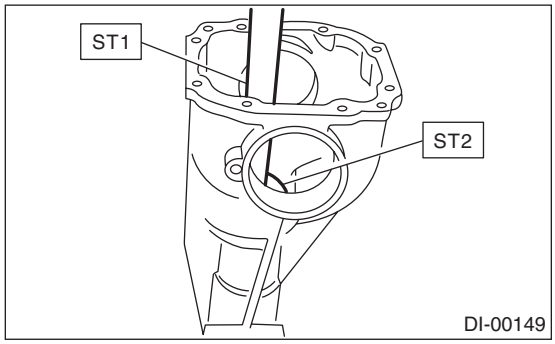

(3) Install the front bearing race to differential carrier using ST1 and ST2.

ST1 398477701 HANDLE
ST2 398447110 DRIFT

(4) Insert the front bearing cone.

NOTE:
Use a new front bearing cone.

(5) Insert the ST1 into case with pinion height adjusting shim and rear bearing cone fitted onto it.

NOTE:
- Re-use the used washer if not deformed.
- Use a new rear bearing cone.

(6) Then install the preload adjusting spacer and washer, front bearing cone, ST2, companion flange, and washer and self-locking nut.

ST1 498447150 DUMMY SHAFT
ST2 32285AA000 DUMMY COLLAR

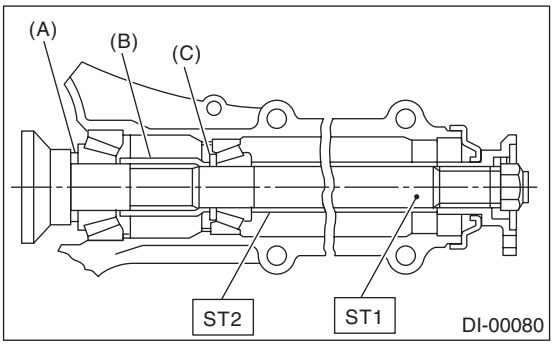

(A) Pinion height adjusting shim
(B) Preload adjusting spacer
(C) Preload adjusting washer

(7) Turn the ST1 with hand to make it seated, and tighten the self locking nut while measuring the preload with spring balance. Select the preload adjusting washer and spacer so that the specified preload is obtained when nut is tightened to the specified torque.

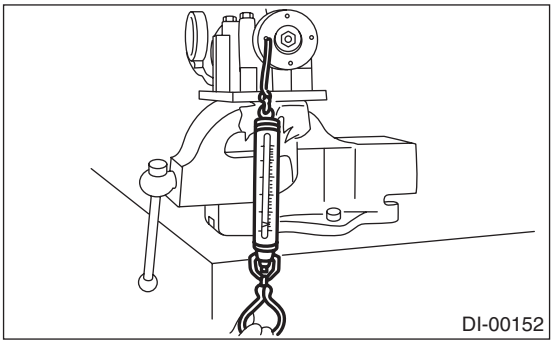

NOTE:
- Use a new self-locking nut.
- Measure the preload in direction of tangent to flange.
- Be careful not to give excessive preload.
- When tightening the self locking nut, lock ST1 with ST2 as shown in the figure.

ST1 498447150 DUMMY SHAFT
ST2 398507704 BLOCK

Tightening torque:
191 N·m (19.5 kgf-m, 141 ft-lb)

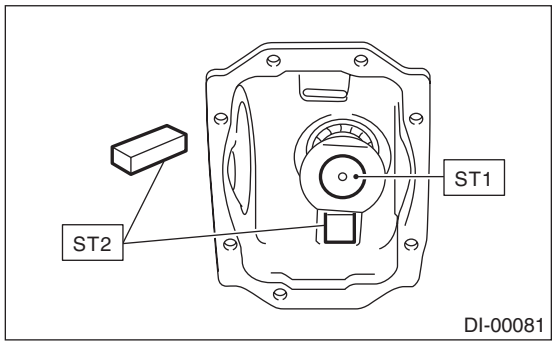

Front and rear bearing preload
For new bearing: 12.7 — 32.4 N (1.3 — 3.3 kgf, 2.9 — 7.3 lb) at companion flange bolt hole

	Part No.	Thickness mm (in)
Preload adjusting washer	38336AA000	1.500 (0.0591)
	38336AA120	1.513 (0.0596)
	38336AA010	1.525 (0.0600)
	38336AA130	1.538 (0.0606)
	38336AA020	1.550 (0.0610)
	38336AA140	1.563 (0.0615)
	38336AA030	1.575 (0.0620)
	38336AA150	1.588 (0.0625)
	38336AA040	1.600 (0.0630)
	38336AA160	1.613 (0.0635)
	38336AA050	1.625 (0.0640)
	38336AA170	1.638 (0.0645)
	38336AA060	1.650 (0.0650)
	38336AA180	1.663 (0.0655)
	38336AA070	1.675 (0.0659)
	38336AA190	1.688 (0.0665)
	38336AA080	1.700 (0.0669)
	38336AA200	1.713 (0.0674)
	38336AA090	1.725 (0.0679)
	38336AA210	1.738 (0.0684)
	38336AA100	1.750 (0.0689)
	38336AA220	1.763 (0.0694)
	38336AA110	1.775 (0.0699)

	Part No.	Length mm (in)
Preload adjusting spacer	32288AA040	52.3 (2.059)
	32288AA050	52.5 (2.067)
	31454AA100	52.6 (2.071)
	32288AA060	52.7 (2.075)
	31454AA110	52.8 (2.079)
	32288AA070	52.9 (2.083)
	31454AA120	53.0 (2.087)
	32288AA080	53.1 (2.091)
	32288AA090	53.3 (2.098)

2) Adjusting drive pinion height

Adjust the drive pinion height with shim installed between the rear bearing cone and back of pinion gear.

(1) Install the ST3.

Front and rear bearing preload
For new bearing: 12.7 — 32.4 N (1.3 — 3.3 kgf, 2.9 — 7.3 lb) at companion flange bolt hole

NOTE:

At this time, install the pinion height adjusting shim which is temporarily selected or same as that used before.

ST1 498447150 DUMMY SHAFT
ST2 32285AA000 DUMMY COLLAR
ST3 498505501 DIFFERENTIAL CARRIER GAUGE

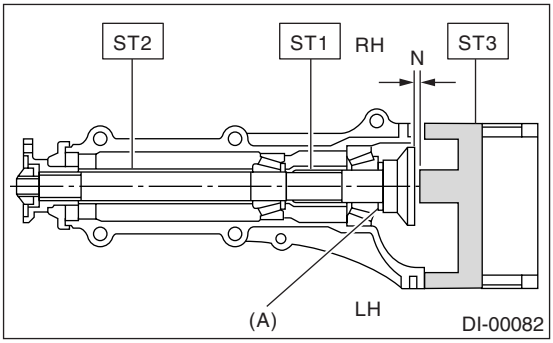

(A) Pinion height adjusting shim

(2) Measure the clearance N between the end of ST3 and end surface of ST1 by using a thickness gauge.

NOTE:

Make sure there is no clearance between the case and ST3.

ST1 498447150 DUMMY SHAFT
ST2 498505501 DIFFERENTIAL CARRIER GAUGE

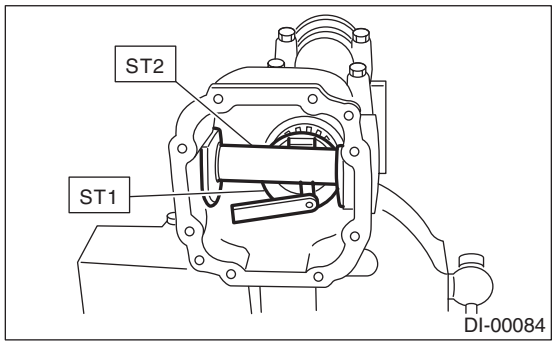

(3) Obtain the thickness of pinion height adjusting shim to be inserted from the following formula, and replace the temporarily installed shim with this one.

NOTE:

Use 1 to 3 shims as required for adjustment.

T = To + N − 0.05 (mm)

where

T = Thickness of pinion height adjusting shim (mm)

To = Thickness of shim originally installed (mm)

N = Reading of thickness gauge (mm)

H = Figure marked on drive pinion head

(Example of calculation)

To = 0.15 mm

N = 0.1 mm

T = 0.15 + 0.1 − 0.05 = 0.2 mm

Result: Thickness = 0.2 mm

Therefore use the 32295AA220.

Pinion height adjusting shim	
Part No.	Thickness mm (in)
32295AA200	0.150 (0.0059)
32295AA210	0.175 (0.0069)
32295AA220	0.200 (0.0079)
32295AA230	0.225 (0.0089)
32295AA240	0.250 (0.0098)
32295AA250	0.275 (0.0108)

3) Install the selected pinion height adjusting shim on drive pinion, and press the rear bearing cone into position with ST.
ST 498175500 INSTALLER

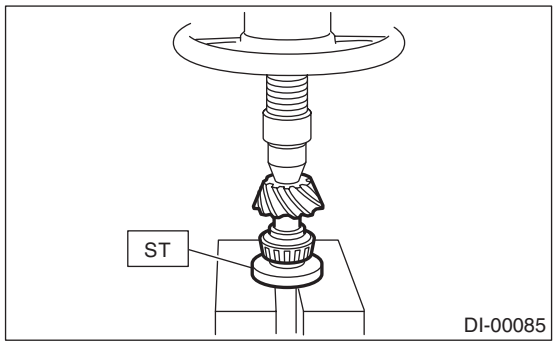

4) Insert the drive pinion into differential carrier, install the previously selected bearing preload adjusting spacer and washer.

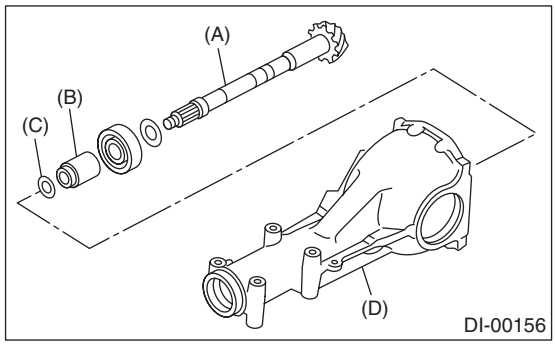

(A) Drive pinion
(B) Bearing preload adjusting spacer
(C) Bearing preload adjusting washer
(D) Differential carrier

5) Press-fit the front bearing cone into carrier with ST1, ST2 and ST3.
ST1 32285AA000 DUMMY COLLAR
ST2 399780104 WEIGHT
ST3 899580100 INSTALLER

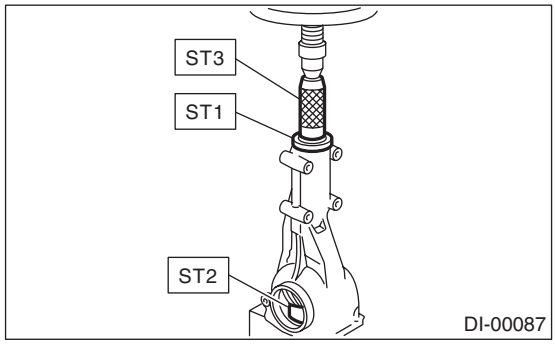

6) Insert the spacer, then press-fit the pilot bearing with ST1 and ST2.
ST1 399780104 WEIGHT
ST2 899580100 INSTALLER

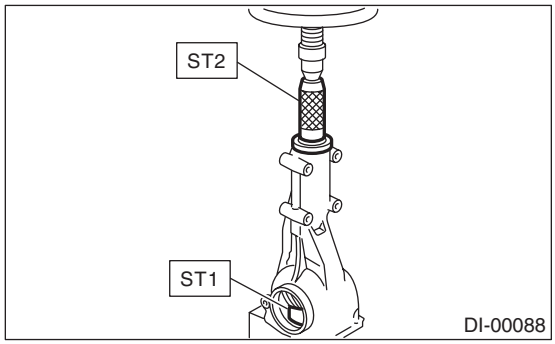

7) Fit a new oil seal with ST.

NOTE:
• Press-fit until the end of oil seal is 1 mm (0.04 in) inward from end of carrier.
• Apply grease between the oil seal lips.

ST 498447120 INSTALLER

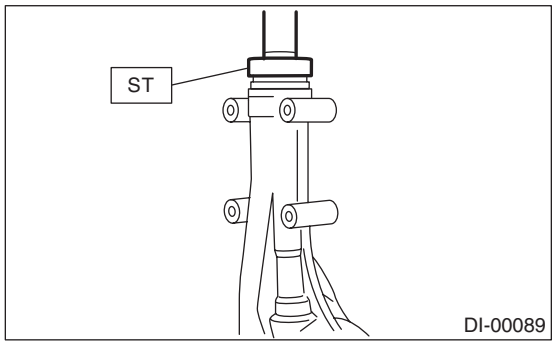

8) Press-fit the companion flange with ST1 and ST2.

NOTE:
Be careful not to damage the bearing.
ST1 899874100 INSTALLER
ST2 399780104 WEIGHT

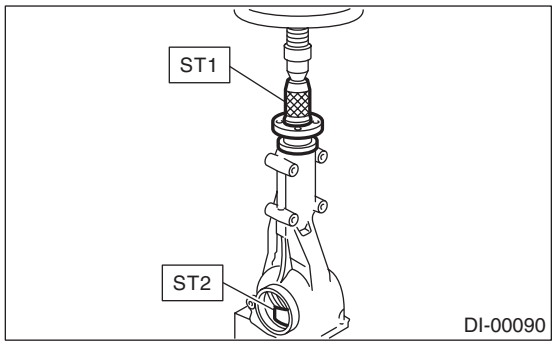

9) Install the self-locking nut. Then tighten it with the ST.
ST 498427200 FLANGE WRENCH

Tightening torque:
191 N·m (19.5 kgf-m, 141 ft-lb)

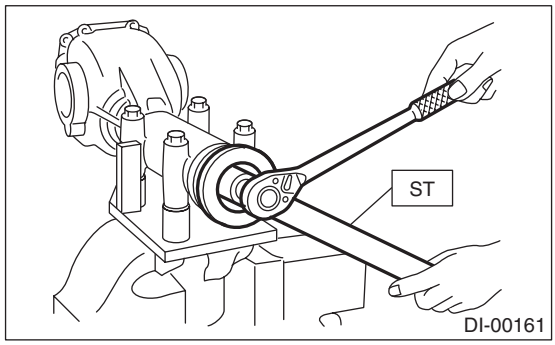

10) Assembling differential case
Install the side gears and pinion mate gears, with their thrust washers and pinion mate shaft, into differential case.

NOTE:
• Apply gear oil on both sides of the washer and on the side gear shaft before installing.
• Insert the pinion mate shaft into the differential case by aligning the lock pin holes.

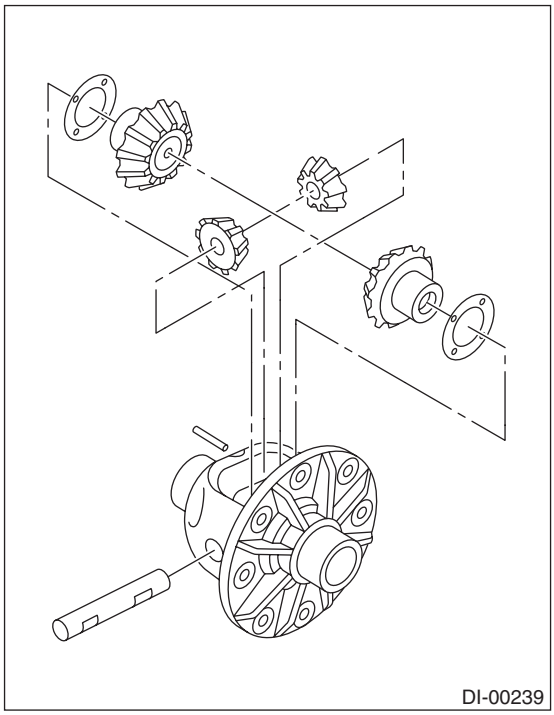

(1) Measure the side gear backlash.

Side gear backlash:
0.05 — 0.15 mm (0.0020 — 0.0059 in)

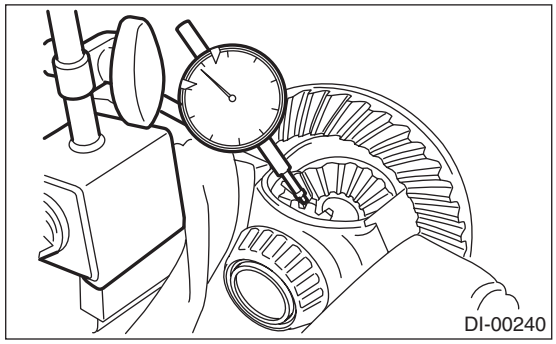

(2) Adjust the side gear backlash as specified by selecting the side gear thrust washer.

Side gear thrust washer	
Part No.	Thickness mm (in)
803135011	0.925 — 0.950 (0.0364 — 0.0374)
803135012	0.950 — 0.975 (0.0374 — 0.0384)
803135013	0.975 — 1.000 (0.0384 — 0.0394)
803135014	1.000 — 1.025 (0.0394 — 0.0404)
803135015	1.025 — 1.050 (0.0404 — 0.0413)

(3) Check the condition of rotation after applying oil to the gear tooth surfaces and thrust surfaces.
(4) After driving in the pinion shaft lock pin, stake both sides of the hole to prevent pin from falling off.

11) Install the crown gear on differential case.

NOTE:
Before installing the bolts, apply Lock Tite to bolt threads.

Lock Tite:
THREE BOND 1324 (Part No.004403042) or equivalent

NOTE:
Tighten diagonally while tapping the bolt heads.

Tightening torque:
62 N·m (6.3 kgf-m, 45.6 ft-lb)

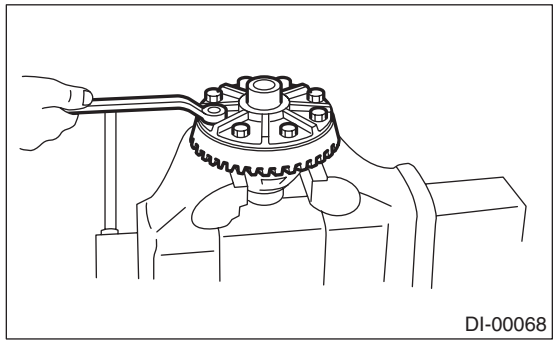

12) Press the side bearing cone onto differential case with ST.
ST 498485400 DRIFT

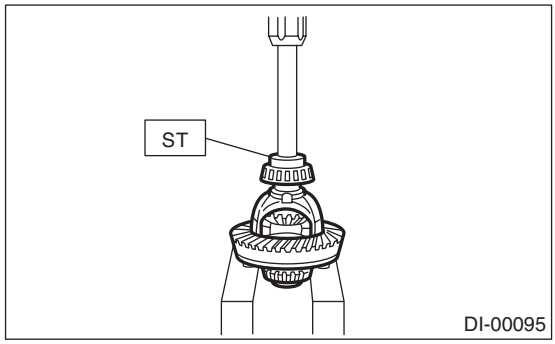

13) Assemble holders.
(1) Install the oil seal into right and left holders.
ST 498447100 INSTALLER

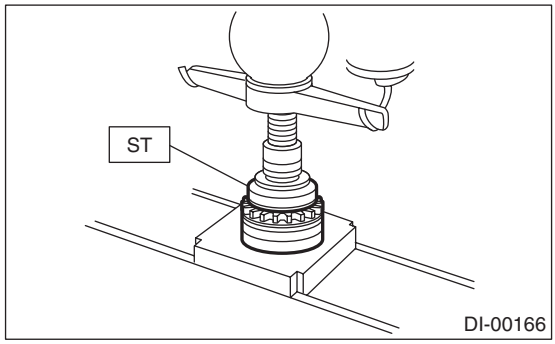

(2) Install the bearing race into right and left holders.
ST 398477702 BEARING OUTER RACE DRIFT

CAUTION:
Make sure that the oil seal, bearing outer race and cone are properly assembled.

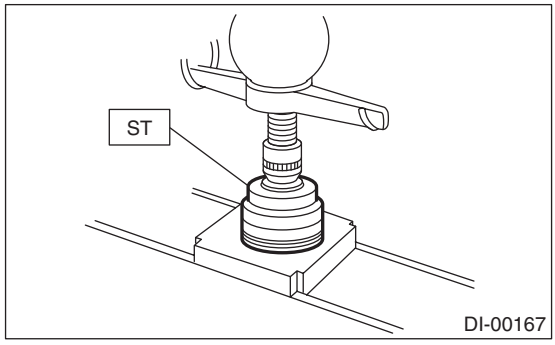

(3) Install the differential case assembly into differential carrier in the reverse order of disassembly.

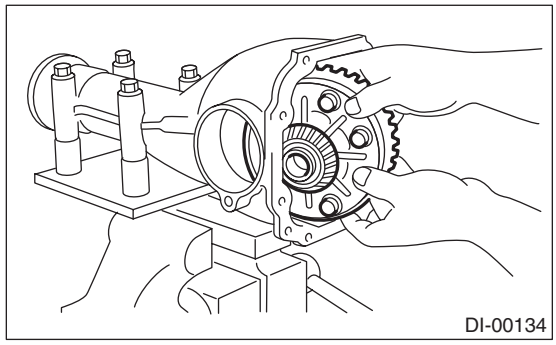

(4) Temporally tighten the side holder RH and LH in differential carrier, to install.

14) Perform the backlash adjustment of pinion crown gear set and preload adjustment of differential side bearing.
(1) Turn the drive pinion with ST for better fitting of differential side bearing.
ST 498427200 FLANGE WRENCH

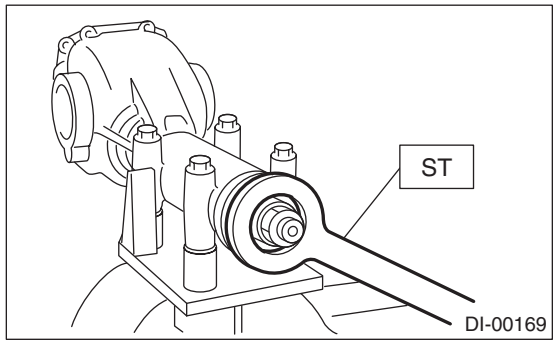

(2) Screw in the side (left-side) holder until light contact is made with ST.
ST 499785500 WRENCH

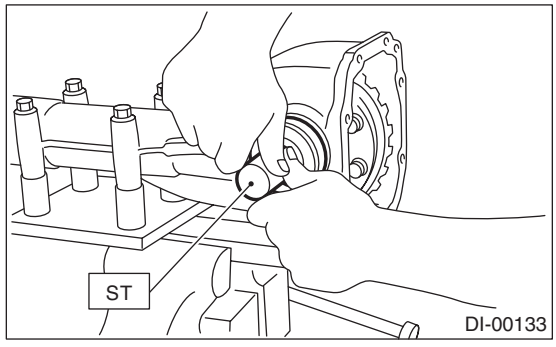

(3) Back off the side (left-side) holder approx. 1 1/2 teeth of holder, and tighten the left-side holder by approx. 2 teeth (approx. 1 1/2 + 1/2 teeth). [Back off amount of side (left-side) holder + 1/2 tooth.]
This + 1/2 tooth gives preload.

(4) Temporarily tighten the lock plate.

NOTE:
Turn over the lock plate to displace the holder 1/2 tooth.

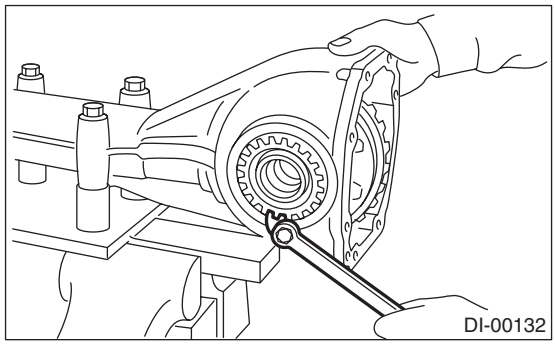

(5) Measure the crown gear-to-drive pinion backlash. Set the magnet base on differential carrier. Align the contact point of dial gauge with tooth face of crown gear, and move the crown gear while holding drive pinion still. Read the value indicated on dial gauge.

NOTE:
If measured backlash is not within specified range, repeat the procedures for pinion crown gear set backlash adjustment and differential side bearing preload adjustment.

Backlash:
0.10 — 0.15 mm (0.0039 — 0.0059 in)

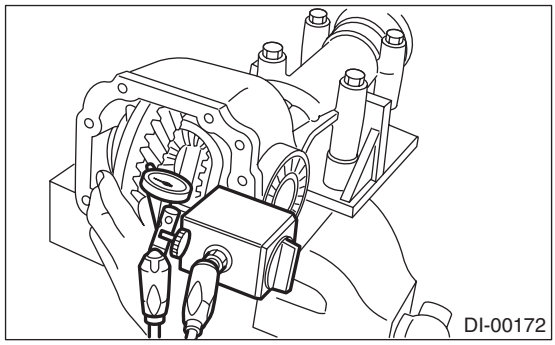

15) Draw a matching mark on both differential carrier and holder. Remove the holder one side at a time.
Replace in the original position after inserting an O-ring and applying grease to threaded portion.

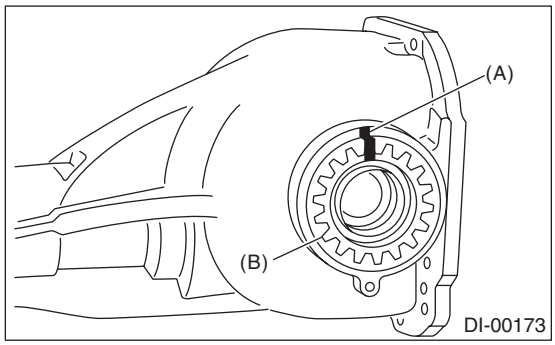

(A) Matching mark
(B) Holder

16) Tighten the bolt of lock plate to specified torque.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

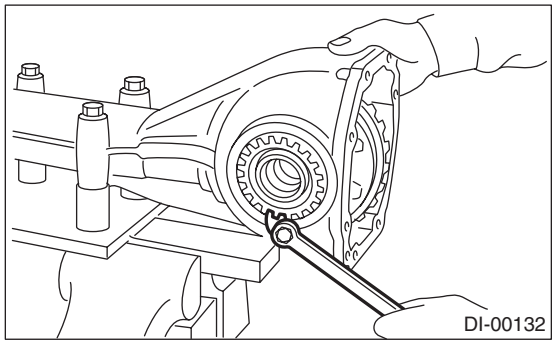

17) Re-check the crown gear-to-pinion backlash.

Backlash:
0.10 — 0.15 mm (0.0039 — 0.0059 in)

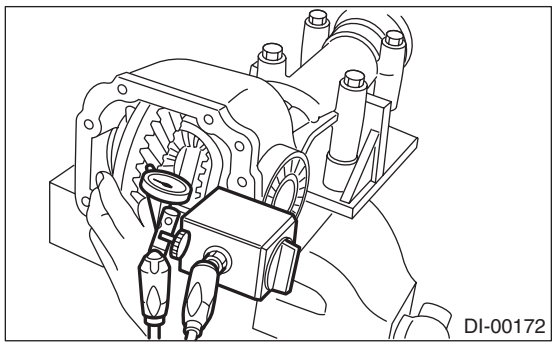

18) Check the crown gear runout on its back surface, and make sure that pinion and crown gear rotate smoothly.

Limit of runout:
0.05 mm (0.0020 in)

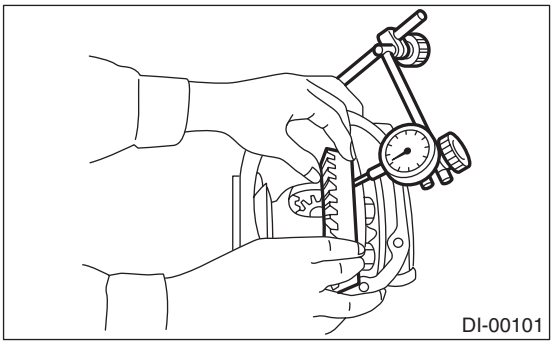

19) Checking and adjusting tooth contact of crown gear.
(1) Apply an even coat of red lead on both sides of three or four teeth on the crown gear. Check the contact pattern after rotating the crown gear several revolutions back and forth until a definite contact pattern appears on the crown gear.
(2) When the contact pattern is incorrect, readjust according to the instructions given in "TOOTH CONTACT PATTERN".

NOTE:
Be sure to wipe off red lead completely after adjustment is completed.

- Correct tooth contact

Checking item: Tooth contact pattern is slightly shifted toward to toe side under no-load rotation. (When loaded, contact pattern moves toward heel)

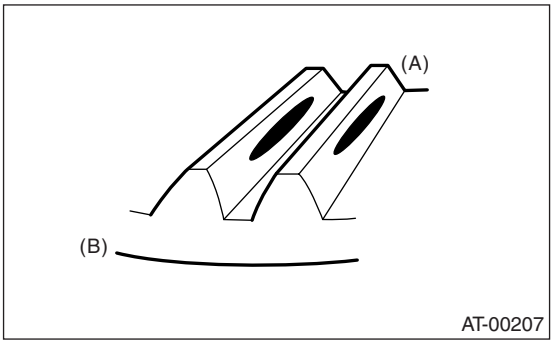

(A) Toe side
(B) Heel side

- Face contact

Checking item: Backlash is too large.
Contact pattern

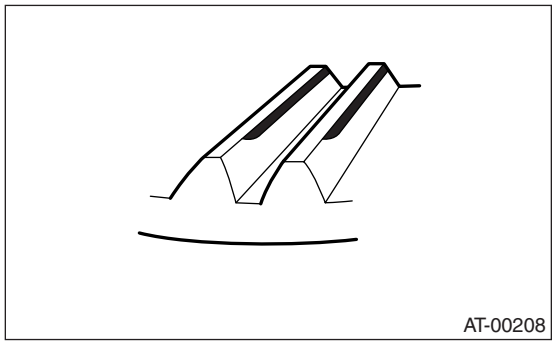

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

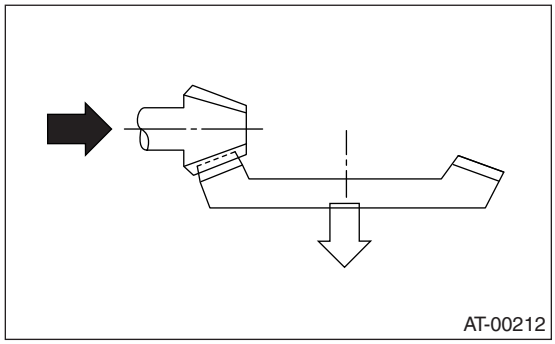

- Flank contact

Checking item: Backlash is too small.
Contact pattern

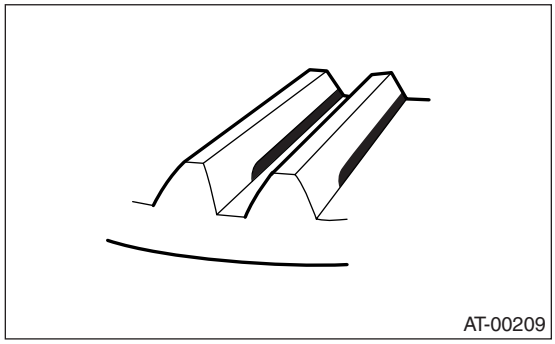

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

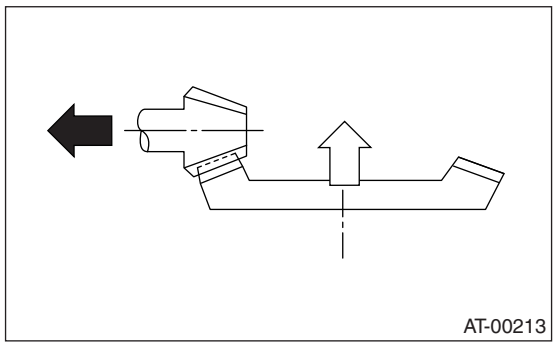

- Toe contact (Inside end contact)

Checking item: Contact area is small.
Contact pattern

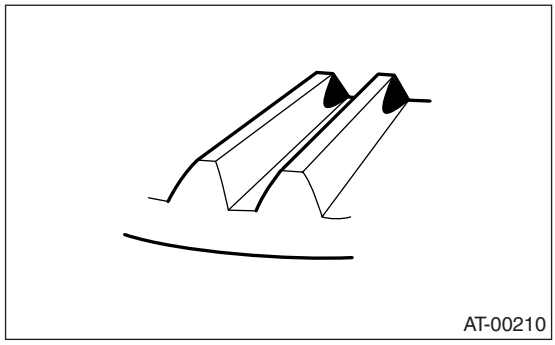

Corrective action: Reduce thickness of drive pinion height adjusting shim in order to move drive pinion away from crown gear.

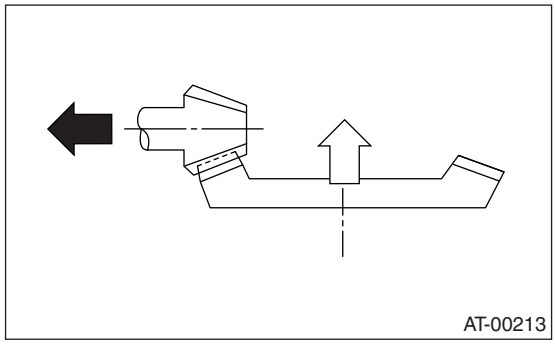

- Heel contact (Outside end contact)

Checking item: Contact area is small.
Contact pattern

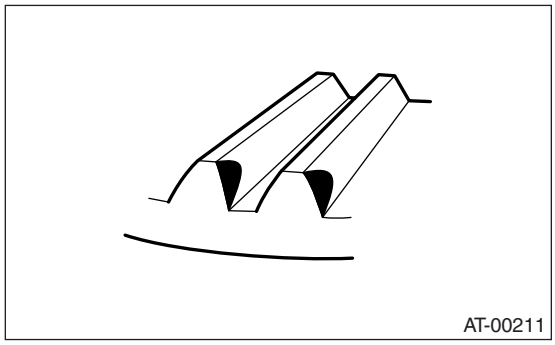

Corrective action: Increase thickness of drive pinion height adjusting shim in order to bring drive pinion close to crown gear.

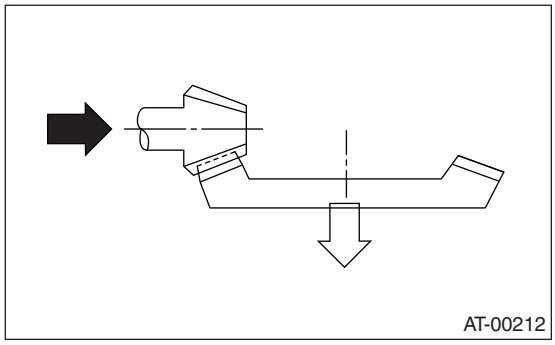

20) If proper tooth contact is not obtained, once again adjust the drive pinion height and the differential side bearing preload (already mentioned) and the hypoid gear backlash.
21) Install the rear cover and tighten the bolts to specified torque.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

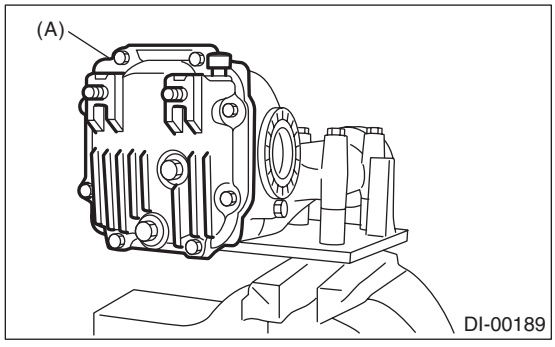

(A) Rear cover

E: INSPECTION

Wash all the disassembled parts clean, and examine them for wear, damage, or other defects. Repair or replace defective parts as necessary.

1) Crown gear and drive pinion

• If abnormal tooth contact is evident, find out the cause and adjust to give correct tooth contact at assembly. Replace the gear if excessively worn or incapable of adjustment.

• If crack, score, or seizure is evident, replace as a set. Slight damage of tooth can be corrected by oil stone or the like.

2) Side gear and pinion mate gear

• Replace if crack, score, or other defects are evident on tooth surface.

• Replace if thrust washer contacting surface is worn or seized. Slight damage of the surface can be corrected by oil stone or the like.

3) Bearing

Replace if seizure, peeling, wear, rust, dragging during rotation, abnormal noise or other defect is evident.

4) Thrust washers of side gear and pinion mate gear

Replace if seizure, flaw, abnormal wear or other defect is evident.

5) Oil seal

Replace if deformed or damaged, and at every disassembling.

6) Differential carrier

Replace if the bearing bores are worn or damaged.

7) Differential case

Replace if its sliding surfaces are worn or cracked.

8) Companion flange

Replace if the oil seal lip contacting surfaces have flaws.

1. SIDE GEAR BACKLASH

Using a dial gauge, check the backlash of the side gear.

Side gear backlash:
0.05 — 0.15 mm (0.0020 — 0.0059 in)

If the side gear backlash is not within the specification, adjust the side gear backlash as specified by selecting the side gear thrust washer.

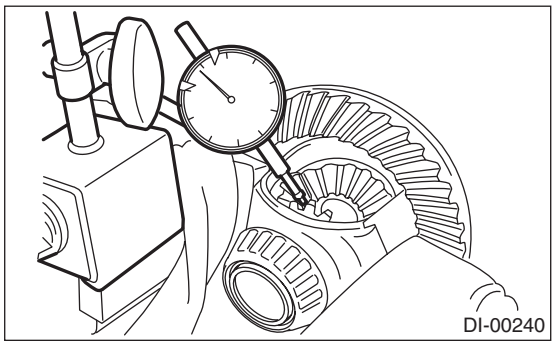
DI-00240

2. CROWN GEAR BACKLASH

Using a dial gauge, check the backlash of the crown gear.

Crown gear backlash:
0.10 — 0.15 mm (0.0039 — 0.0059 in)

If the crown gear backlash is not within the specification, adjust the side bearing preload or repair if necessary.

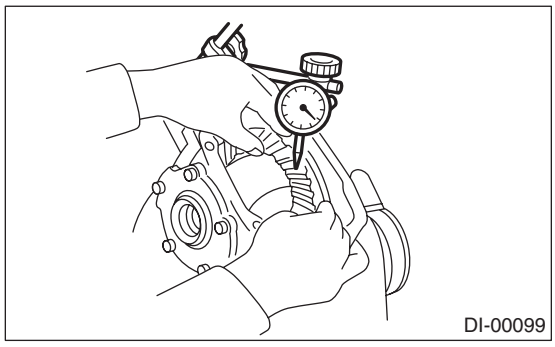
DI-00099

3. CROWN GEAR RUNOUT

Using a dial gauge, check the crown gear runout.

Crown gear runout:
Less than 0.05 mm (0.0020 in)

If the crown gear runout exceeds 0.05 mm (0.0020 in), replace the crown gear.

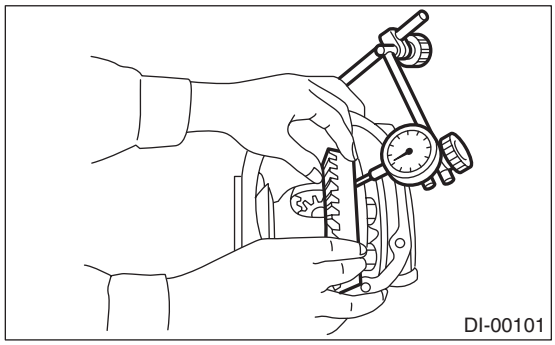
DI-00101

4. TOOTH CONTACT BETWEEN CROWN GEAR AND DRIVE PINION

Inspect the tooth contact between crown gear and drive pinion.
<Ref. to DI-58, ASSEMBLY, Rear Differential for VA-type.>

F: ADJUSTMENT

1. SIDE GEAR BACKLASH

Adjust the side gear backlash.
<Ref. to DI-58, ASSEMBLY, Rear Differential for VA-type.>

2. CROWN GEAR BACKLASH

Adjust the crown gear backlash.
<Ref. to DI-58, ASSEMBLY, Rear Differential for VA-type.>

3. TOOTH CONTACT BETWEEN CROWN GEAR AND DRIVE PINION

Adjust the tooth contact between crown gear and drive pinion gear.
<Ref. to DI-58, ASSEMBLY, Rear Differential for VA-type.>

6. Rear Differential Front Oil Seal

A: REPLACEMENT

1) Disconnect the ground cable from battery.
2) Move the select lever or gear shift lever to “N”.
3) Release the parking brake.
4) Remove the oil drain plug, and drain the gear oil.

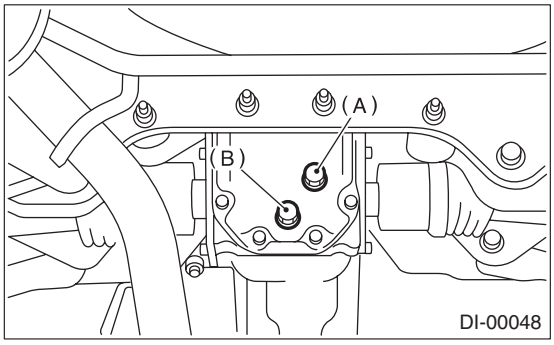

(A) Filler plug
(B) Drain plug

5) Install the oil drain plug.

NOTE:
- Apply liquid gasket to the drain plug for T-type.

Liquid gasket:
THREE BOND 1105 (Part No.004403010) or equivalent.

- Use a new aluminum gasket for VA-type.

Tightening torque:
T-type;
49 N·m (5.0 kgf-m, 36.2 ft-lb)
VA-type;
34 N·m (3.5 kgf-m, 25.3 ft-lb)

6) Jack-up the vehicle and support with sturdy racks.
7) Remove the rear exhaust pipe and muffler.
8) Remove the propeller shaft from body. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
9) Remove the self-locking nut while holding the companion flange with ST.
ST 498427200 FLANGE WRENCH

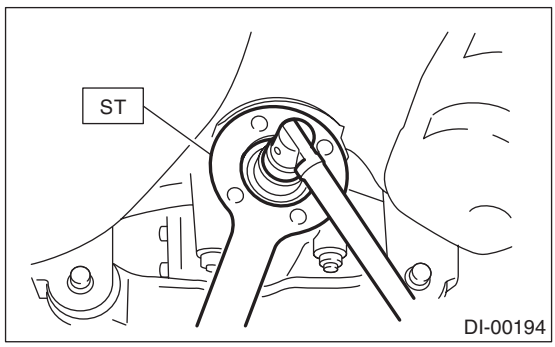

10) Remove the tank cover.

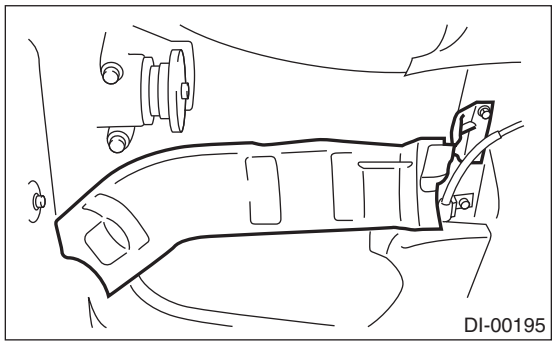

11) Extract the companion flange using ST.
ST 399703600 PULLER ASSY

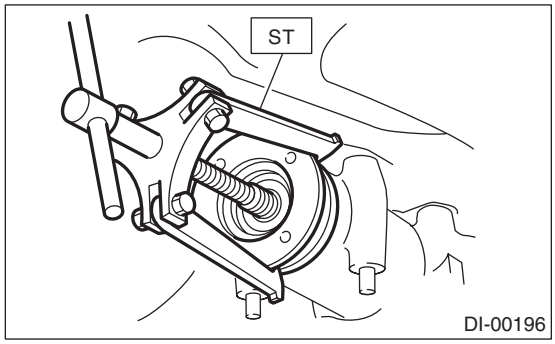

12) Remove the oil seal using ST.
ST 398527700 PULLER ASSY

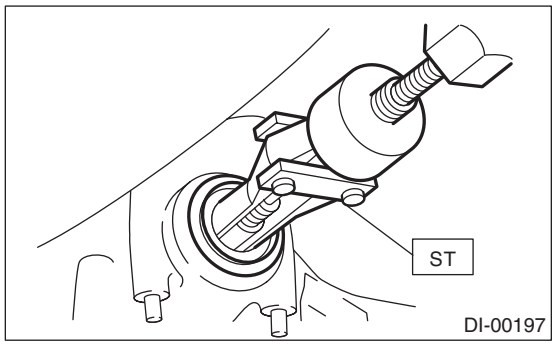

13) Fit a new oil seal using ST.
ST 498447120 INSTALLER

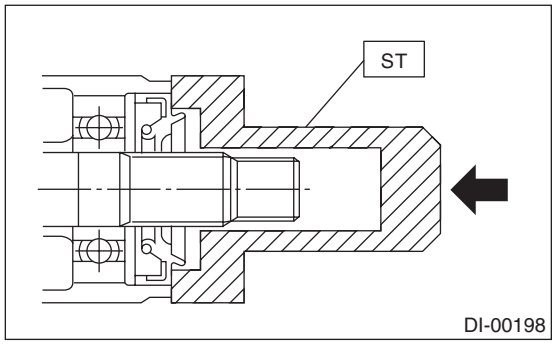

14) Install the companion flange.

NOTE:
Use a plastic hammer to install the companion flange.

15) Tighten the self-locking nut within the specified torque range so that the preload of companion flange becomes the same as that before replacing oil seal.
ST 498427200 FLANGE WRENCH

NOTE:
Use a new self-locking nut.

Tightening torque:
T-type:
181 N·m (18.5 kgf-m, 134 ft-lb)
VA-type:
191 N·m (19.5 kgf-m, 141 ft-lb)

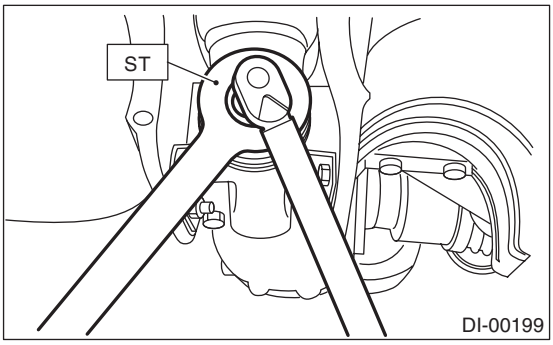

16) Hereafter, reassemble in the reverse order of disassembly.

7. Rear Differential Side Oil Seal

A: INSPECTION

Make sure that there is no oil leakage from side oil seal.
If there is any oil leakage, replace the oil seal.

B: REPLACEMENT

1. T-TYPE

1) Disconnect the ground cable from battery.
2) Move the select lever or gear shift lever to “N”.
3) Release the parking brake.
4) Loosen both wheel nuts.
5) Jack-up the vehicle and support it with rigid racks.
6) Remove the wheels.
7) Remove the rear exhaust pipe and muffler.
Non-turbo model without OBD
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
Non-turbo model with OBD
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
Turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
8) Remove the DOJ of rear drive shaft from rear differential.

(1) Remove the ABS wheel speed sensor cable clamp and parking brake cable clamp from bracket.

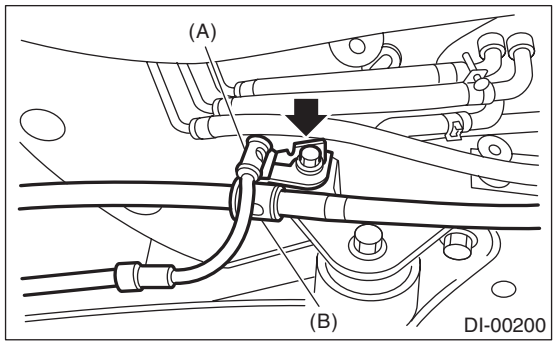

(A) ABS wheel speed sensor cable clamp
(B) Parking brake cable clamp

(2) Remove the ABS wheel speed sensor cable clamp from trailing link.

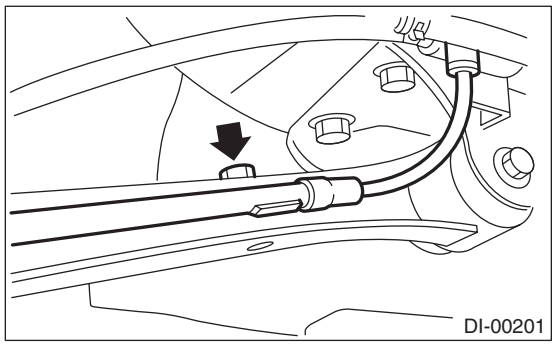

(3) Remove the ABS wheel speed sensor cable clamp and parking brake cable guide from trailing link.

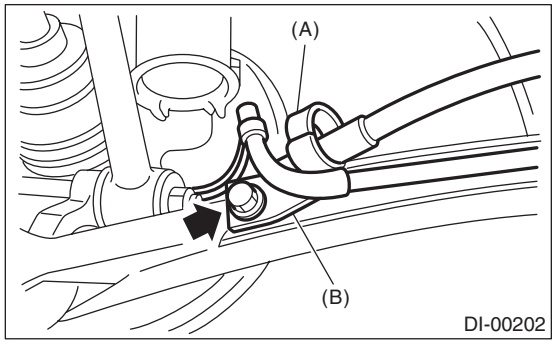

(A) Parking brake cable guide
(B) ABS wheel speed sensor cable clamp

(4) Remove the rear stabilizer link.

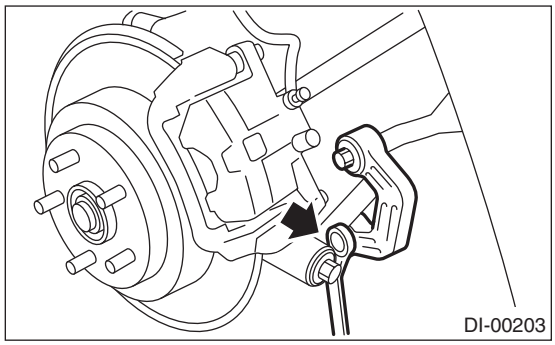

(5) Remove the bolts which secure trailing link to housing.

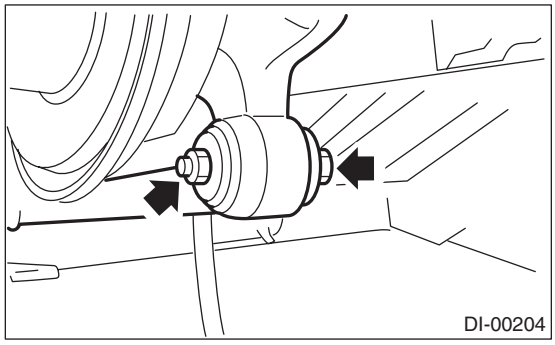

(6) Remove the bolts which secure the front and rear lateral link to rear housing.

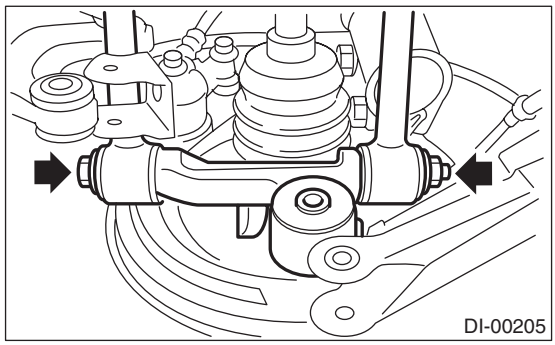

(7) Remove the DOJ from the rear differential by using ST.

NOTE:
When removing the DOJ from rear differential, fit ST to the bolts as shown in the figure so as not to damage the side bearing retainer.

ST 208099PA100 DRIVE SHAFT REMOVER

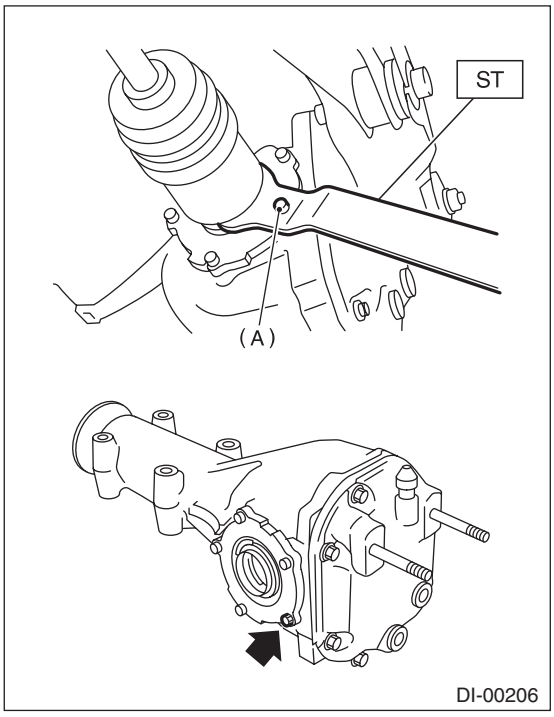

(A) Bolt

9) Suspend the rear drive shaft to the rear crossmember using wire.

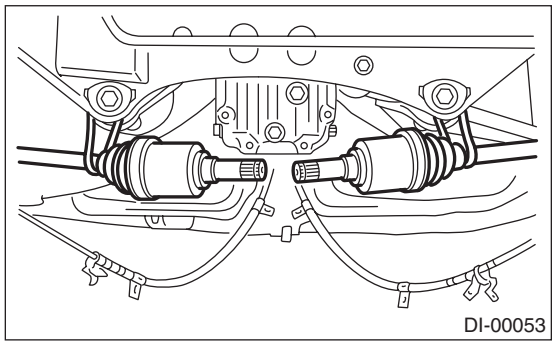

10) Remove the oil seal using ST.

ST 398527700 PULLER ASSY

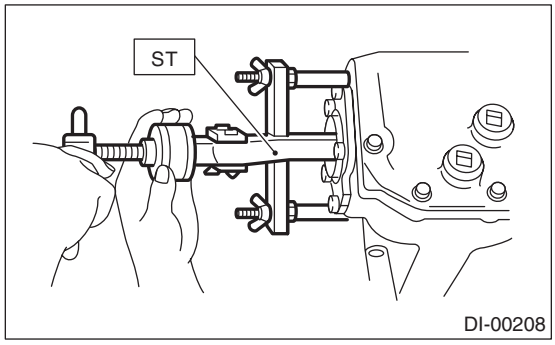

11) Drive in a new side oil seal using ST.

NOTE:
Apply chassis grease between the oil seal lips.

ST 398437700 DRIFT

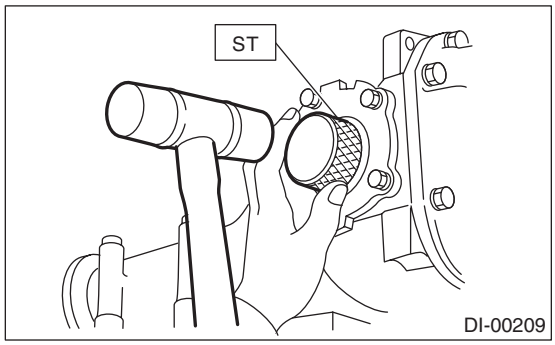

12) Insert the DOJ into rear differential.
(1) Install the ST to rear differential.
ST 28099PA090 SIDE OIL SEAL PROTECTOR

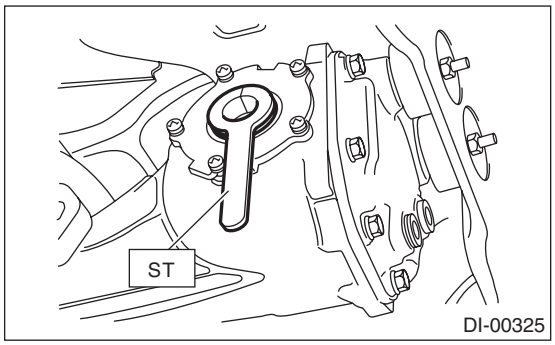

(2) Install the spline shaft until the spline portion is inside the side oil seal using ST.
ST 28099PA090 SIDE OIL SEAL PROTECTOR

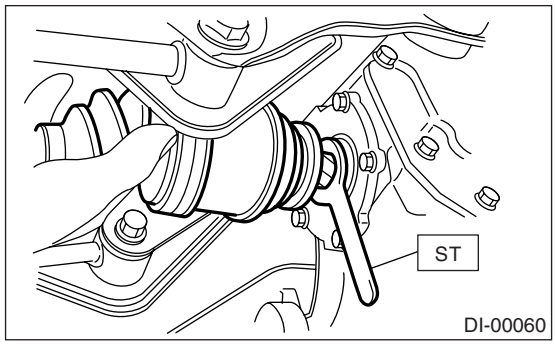

(3) Remove the ST.
ST 28099PA090 SIDE OIL SEAL PROTECTOR

13) Hereafter, reassemble in the reverse order of disassembly.

2. VA-TYPE

1) Disconnect the ground cable from battery.
2) Move the select lever or gear shift lever to “N”.
3) Release the parking brake.
4) Loosen both wheel nuts.
5) Jack-up the vehicle and support it with rigid racks.
6) Remove the wheels.
7) Remove the rear exhaust pipe and muffler.
Non-turbo model without OBD
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
Non-turbo model with OBD
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
8) Remove the DOJ of rear drive shaft from rear differential.

(1) Remove the ABS wheel speed sensor cable clamp and parking brake cable clamp from bracket.

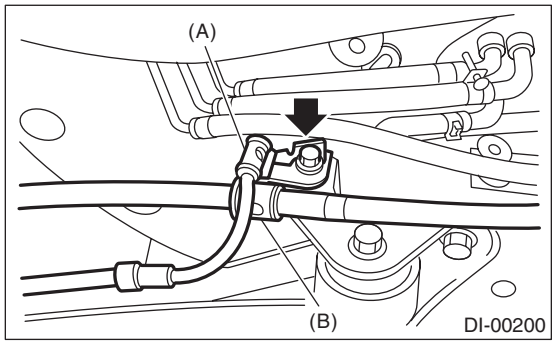

(A) ABS wheel speed sensor cable clamp
(B) Parking brake cable clamp

(2) Remove the ABS wheel speed sensor cable clamp from trailing link.

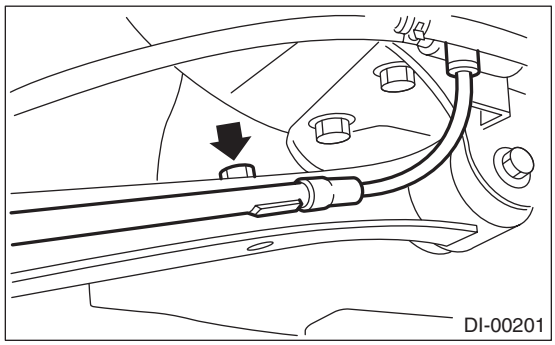

(3) Remove the ABS wheel speed sensor cable clamp and parking brake cable guide from trailing link.

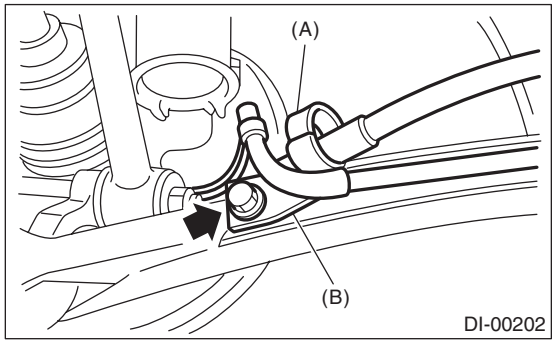

(A) Parking brake cable guide
(B) ABS wheel speed sensor cable clamp

(4) Remove the rear stabilizer link.

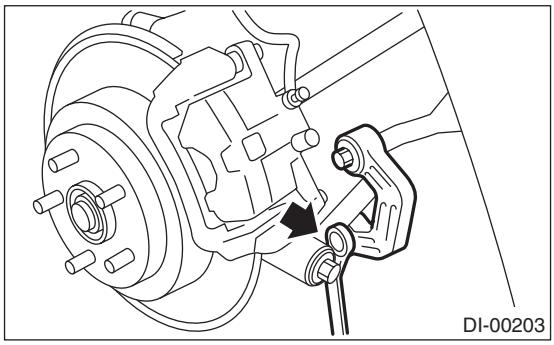

(5) Remove the bolts which secure the trailing link to housing.

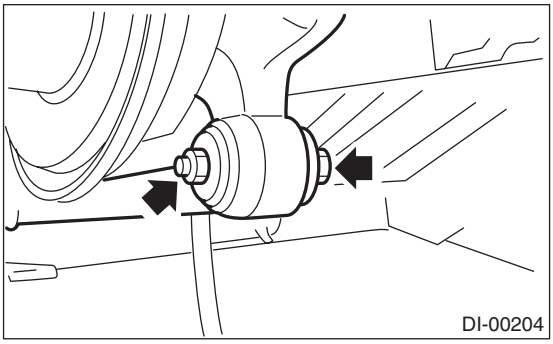

(6) Remove the bolts which secure the front and rear lateral link to rear housing.

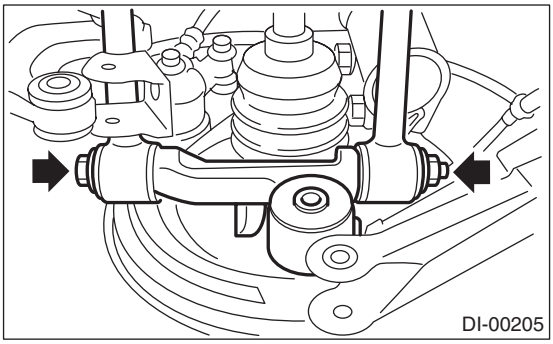

(7) Remove the DOJ from the rear differential using tire lever.

NOTE:
• When removing the DOJ from rear differential, fit tire lever to the bolt as shown in the figure so as not to damage the axle shaft holder.

• The side spline shaft circlip comes out together with the shaft.

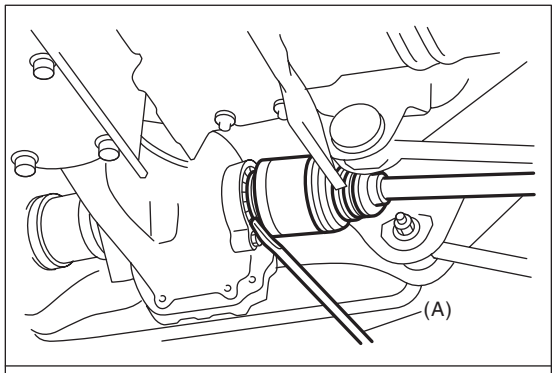

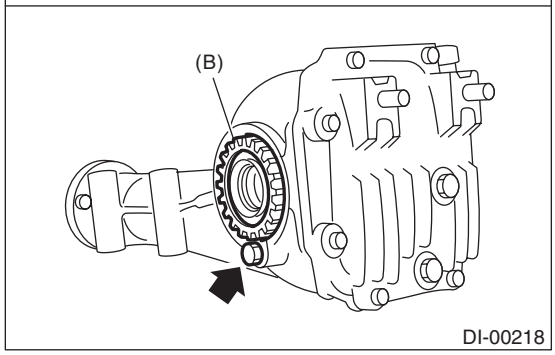

(A) Tire lever
(B) Axle shaft holder

9) Suspend the rear drive shaft to rear crossmember using wire.

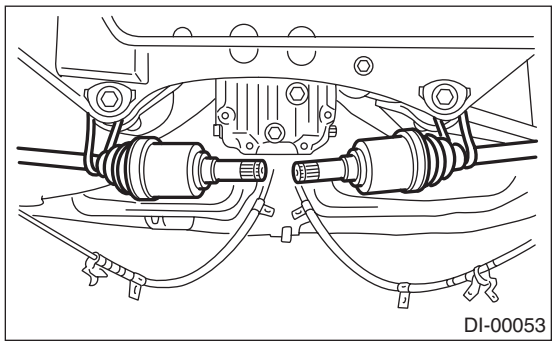

10) Remove the oil seal with screwdriver.

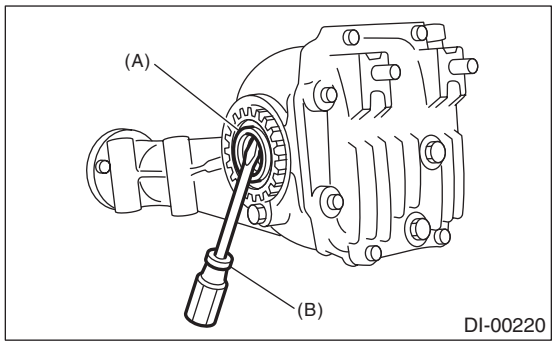

(A) Side oil seal
(B) Screwdriver

11) Drive in a new side oil seal using ST.

NOTE:
Apply chassis grease between the oil seal lips.

ST 498447100 OIL SEAL INSTALLER

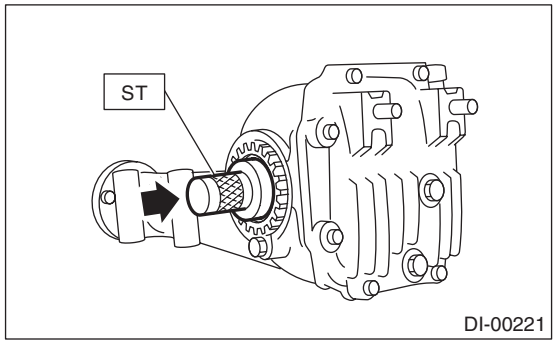

12) Insert the DOJ into rear differential.

NOTE:
Before inserting, replace the circlip at the end of spline shaft with a new one.

(1) Install the ST to rear differential.

ST 28099PA090 SIDE OIL SEAL PROTECTOR

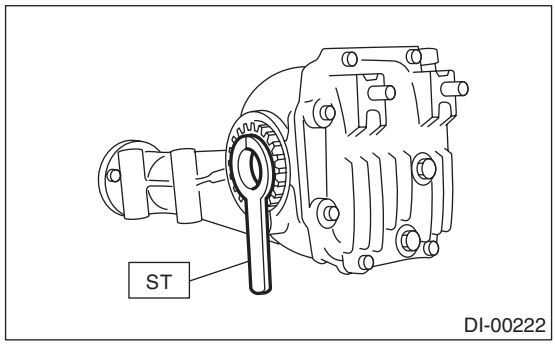

(2) Install the spline shaft until the spline portion is inside the side oil seal.

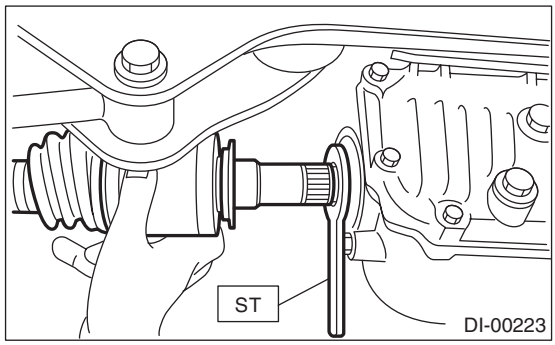

(3) Remove the ST.

ST 28099PA090 SIDE OIL SEAL PROTECTOR

(4) Completely insert the DOJ into rear differential by pressing rear housing.

NOTE:
Make sure that the oil seal lip is not folded over inward.

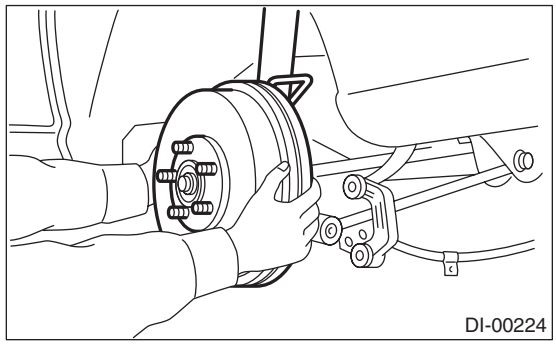

13) Hereafter, reassemble in the reverse order of disassembly.

8. Rear Differential Member

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Move the selector lever or gear shift lever to “N”.
4) Release the parking brake.
5) Loosen the wheel nuts.
6) Jack-up the vehicle and support it with study racks.
7) Remove the wheels.
8) Remove the rear exhaust pipe and muffler.
Non-turbo model without OBD
<Ref. to EX(H4SOw/oOBD)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>
Non-turbo model with OBD
<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
Turbo model
<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
9) Remove the rear differential front member.

NOTE:
When removing the rear differential front member, work the removal procedure as rear differential.
T-type
<Ref. to DI-27, REMOVAL, Rear Differential for T-type.>
VA-type
<Ref. to DI-53, REMOVAL, Rear Differential for VA-type.>

10) Remove the differential rear member.

B: INSTALLATION

Install in the reverse order of removal.
1) Position the front member on body by passing it under the parking brake cable and securing to rear differential.

NOTE:
When installing the rear differential front member, do not confuse the installation sequence of the stopper.

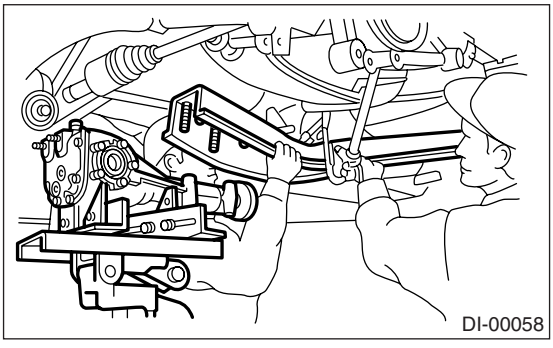
DI-00058

2) Insert the DOJ of rear drive shaft into rear differential.<Ref. to DI-71, REPLACEMENT, Rear Differential Side Oil Seal.>

NOTE:
Before inserting, replace the differential side oil seal with a new one.

ST 28099PA090 SIDE OIL SEAL PROTEXTOR

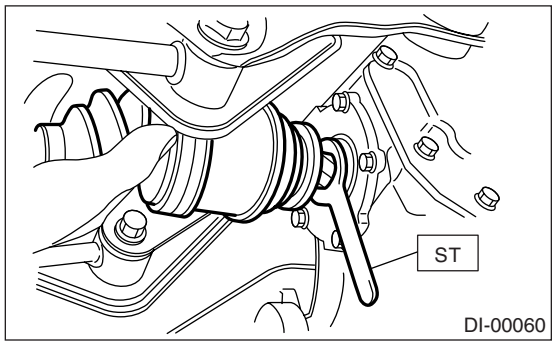

DI-00060

3) Hereafter, install in the reverse order of removal.

C: INSPECTION

1) Check the rear differential member for damage, bend, or corrosion.
If damage, bend, or corrosion is excessive, replace the rear differential member.
2) Check the bushings of rear differential member for cracking, hardening, or damage.
If cracking, hardening, or damage is excessive, replace the rear differential member.

9. General Diagnostic Table

A: INSPECTION

Symptom or trouble	Possible cause	Remedy
1. Oil leakage	(1) Worn, scratched, or incorrectly seated front or side oil seal. Scored, battered, or excessively worn sliding surface of companion flange.	Repair or replace.
	(2) Clogged or damaged air breather.	Clean, repair or replace.
	(3) Loose bolts on differential spindle or side retainer, or incorrectly fitted O-ring.	Tighten the bolts to specified torque. Replace the O-ring.
	(4) Loose rear cover attaching bolts or damaged gasket.	Tighten the bolts to specified torque. Replace the gasket and apply liquid packing.
	(5) Loose oil filler or drain plug.	Retighten and apply liquid packing.
	(6) Wear, damage or incorrectly fitting for spindle, side retainer and oil seal.	Repair or replace.
2. Seizure NOTE: Seized or damaged parts should be replaced, and also other parts should be thoroughly checked for any defect and should be repaired or replaced as required.	(1) Insufficient backlash for hypoid gear.	Readjust or replace.
	(2) Excessive preload for side, rear, or front bearing.	Readjust or replace.
	(3) Insufficient or improper oil used.	Replace the seized part and fill with specified oil to specified level.
3. Damage NOTE: Damaged parts should be replaced, and also other parts should be thoroughly checked for any defect and should be repaired or replaced as required.	(1) Improper backlash for hypoid gear.	Replace.
	(2) Insufficient or excessive preload for side, rear, or front bearing.	Readjust or replace.
	(3) Excessive backlash for differential gear.	Replace the gear or thrust washer.
	(4) Loose bolts and nuts such as crown gear bolt.	Retighten.
	(5) Damage due to overloading.	Replace.
4. Noises when starting or shifting gears NOTE: Noises may be caused by differential assembly, universal joint, wheel bearing, etc. Find out what is actually making noise before disassembly.	(1) Excessive backlash for hypoid gear.	Readjust.
	(2) Excessive backlash for differential gear.	Replace the gear or thrust washer.
	(3) Insufficient preload for front or rear bearing.	Readjust.
	(4) Loose drive pinion nut.	Tighten to specified torque.
	(5) Loose bolts and nuts such as side bearing retainer attaching bolt.	Tighten to specified torque.
5. Noises when cornering	(1) Damaged differential gear.	Replace.
	(2) Excessive wear or damage of thrust washer.	Replace.
	(3) Broken pinion mate shaft.	Replace.
	(4) Seized or damaged side bearing.	Replace.

Symptom or trouble	Possible cause	Remedy
6. Gear noises NOTE: Since noises from engine, muffler, transmission, propeller shaft, wheel bearings, tires, and body are sometimes mistaken for noises from differential assembly, be careful in checking them. Inspection methods to locate noises include coasting, accelerating, cruising, and jacking-up all four wheels. Perform these inspections according to condition of trouble. When listening to noises, shift gears into four wheel drive and fourth speed position, trying to pick up only differential noise.	(1) Improper tooth contact of hypoid gear.	Readjust or replace the hypoid gear set.
	(2) Improper backlash for hypoid gear.	Readjust.
	(3) Scored or chipped teeth of hypoid gear.	Replace the hypoid gear set.
	(4) Seized hypoid gear.	Replace the hypoid gear set.
	(5) Improper preload for front or rear bearings.	Readjust.
	(6) Seized, scored, or chipped front or rear bearing.	Replace.
	(7) Seized, scored, or chipped side bearing.	Replace.
	(8) Vibrating differential carrier.	Replace.

TRANSFER CASE

TC

		Page
1.	General Description	2
2.	Transfer Case and Extension (MT)	3
3.	Transfer Clutch and Extension (4AT)	4
4.	Oil Seal	5
5.	Transfer Drive Gear (MT)	6
6.	Transfer Driven Gear (MT)	7
7.	Reduction Drive Gear (4AT without VTD)	8
8.	Reduction Drive Gear (4AT with VTD)	9
9.	Reduction Driven Gear (4AT without VTD)	10
10.	Reduction Driven Gear (4AT with VTD)	11
11.	Center Differential	12
12.	Transfer Clutch Pressure Test	13
13.	Transfer Duty Solenoid and Valve Body	14

1. General Description

A: NOTE

For general description, refer to “4AT”, “5MT” or “6MT” section.
4AT model:
<Ref. to 4AT-2, General Description.>
5MT model:
<Ref. to 5MT-2, General Description.>
6MT model:
<Ref. to 6MT-2, General Description.>

2. Transfer Case and Extension (MT)

A: NOTE

For removal, installation and inspection work, refer to “5MT” or “6MT” section.
5MT model:
<Ref. to 5MT-53, Transfer Case and Extension Case Assembly.>
6MT model:
<Ref. to 6MT-49, Extension Case.>

3. Transfer Clutch and Extension (4AT)

A: NOTE

For removal, installation and inspection work, refer to “4AT” section. <Ref. to 4AT-81, Transfer Clutch.>, <Ref. to 4AT-77, Extension Case.>

4. Oil Seal

A: NOTE

For removal, installation and inspection work, refer to “4AT”, “5MT” or “6MT” section.
4AT model:
<Ref. to 4AT-47, Extension Case Oil Seal.>
5MT model:
<Ref. to 5MT-47, Oil Seal.>
6MT model:
<Ref. to 6MT-33, Oil Seal.>

5. Transfer Drive Gear (MT)

A: NOTE

For removal, installation and inspection work, refer to “5MT” or “6MT” section.
5MT model:
<Ref. to 5MT-58, Transfer Drive Gear.>
6MT model:
<Ref. to 6MT-58, Transfer Drive Gear.>

6. Transfer Driven Gear (MT)

A: NOTE

For removal, installation and inspection work, refer to “5MT” or “6MT” section.
5MT model:
<Ref. to 5MT-60, Transfer Driven Gear.>
6MT model:
<Ref. to 6MT-60, Transfer Driven Gear.>

7. Reduction Drive Gear (4AT without VTD)

A: NOTE

For removal, installation and inspection work, refer to “4AT” section. <Ref. to 4AT-93, Reduction Drive Gear.>

8. Reduction Drive Gear (4AT with VTD)

A: NOTE

For removal, installation and inspection work, refer to “4AT” section. <Ref. to 4AT-93, Reduction Drive Gear.>

9. Reduction Driven Gear (4AT without VTD)

A: NOTE

For removal, installation and inspection work, refer to “4AT” section. <Ref. to 4AT-90, Reduction Driven Gear.>

10.Reduction Driven Gear (4AT with VTD)

A: NOTE

For removal, installation and inspection work, refer to “4AT” section. <Ref. to 4AT-90, Reduction Driven Gear.>

11.Center Differential

A: NOTE

For removal, installation and inspection work, refer to “5MT” or “6MT” section.
5MT model:
<Ref. to 5MT-62, Center Differential.>
6MT model:
<Ref. to 6MT-62, Center Differential.>

12. Transfer Clutch Pressure Test

A: NOTE

For inspection work, refer to “4AT” section. <Ref. to 4AT-38, Transfer Clutch Pressure Test.>

13. Transfer Duty Solenoid and Valve Body

A: NOTE

For removal, installation and inspection work, refer to “4AT” section. <Ref. to 4AT-64, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>

DRIVE SHAFT SYSTEM

DS

		Page
1.	General Description	2
2.	Propeller Shaft	15
3.	Front Axle	18
4.	Rear Axle	24
5.	Front Drive Shaft	32
6.	Rear Drive Shaft	37
7.	General Diagnostic Table	43

1. General Description

A: SPECIFICATIONS

1. PROPELLER SHAFT

Model		Non-turbo	Turbo (except STi)	STi
Propeller shaft type		UJ	DOJ	UJ
Front propeller shaft Joint-to-joint length: L_1 mm (in)	AT	584 (22.99)	579 (22.79)	—
	MT	643 (25.32)	638 (25.12)	584 (22.99)
Rear propeller shaft Joint-to-joint length: L_2 mm (in)		708 (27.87)	713 (28.07)	708 (27.87)
Outer diameter of tube: mm (in)	D_1	63.5 (2.500)		
	D_2	57.0 (2.244)		

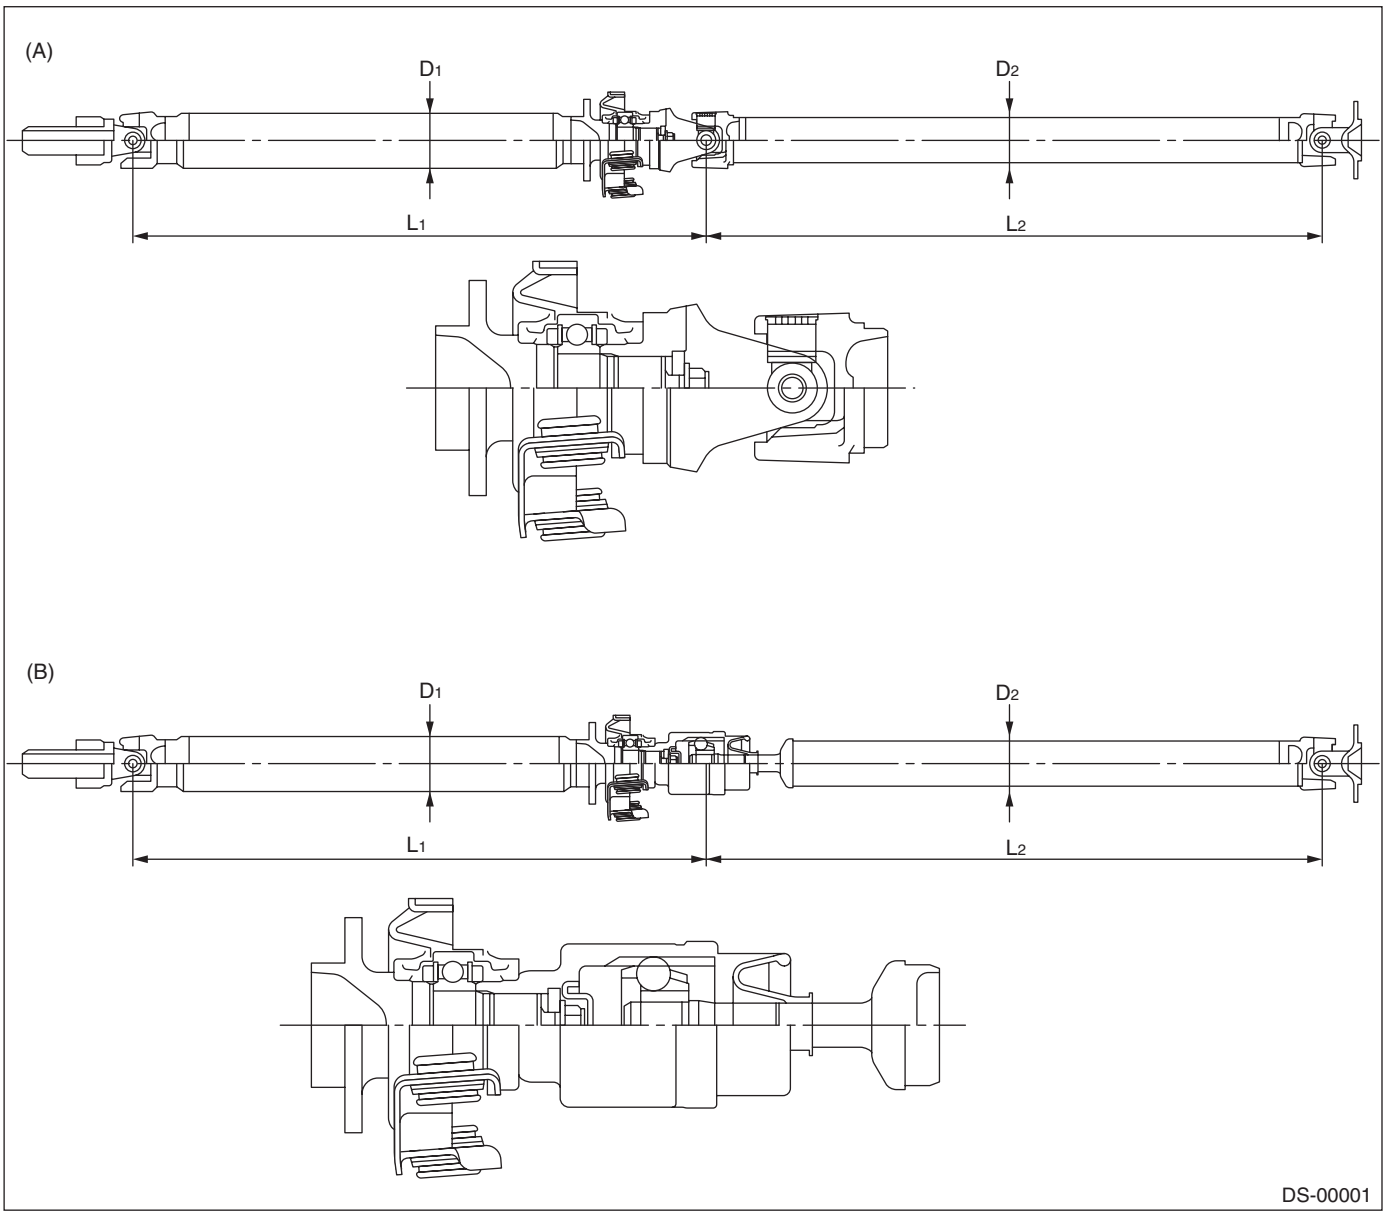

(A) UJ type (B) DOJ type

2. FRONT DRIVE SHAFT ASSEMBLY

Model		Type of drive shaft	Axle diameter ϕ D (mm)	Axle length L (mm)
Sedan	Non-turbo, Turbo AT	EBJ87+SFJ82	26 (1.02)	325
	Turbo MT (except STi)	EBJ87+SFJ82	28 (1.10)	325
	Turbo MT (STi)	BJ92+DOJ87	28 (1.10)	250
Wagon	Non-turbo, Turbo AT	EBJ87+SFJ82	26 (1.02)	314
	Turbo MT	EBJ87+SFJ82	28 (1.10)	314

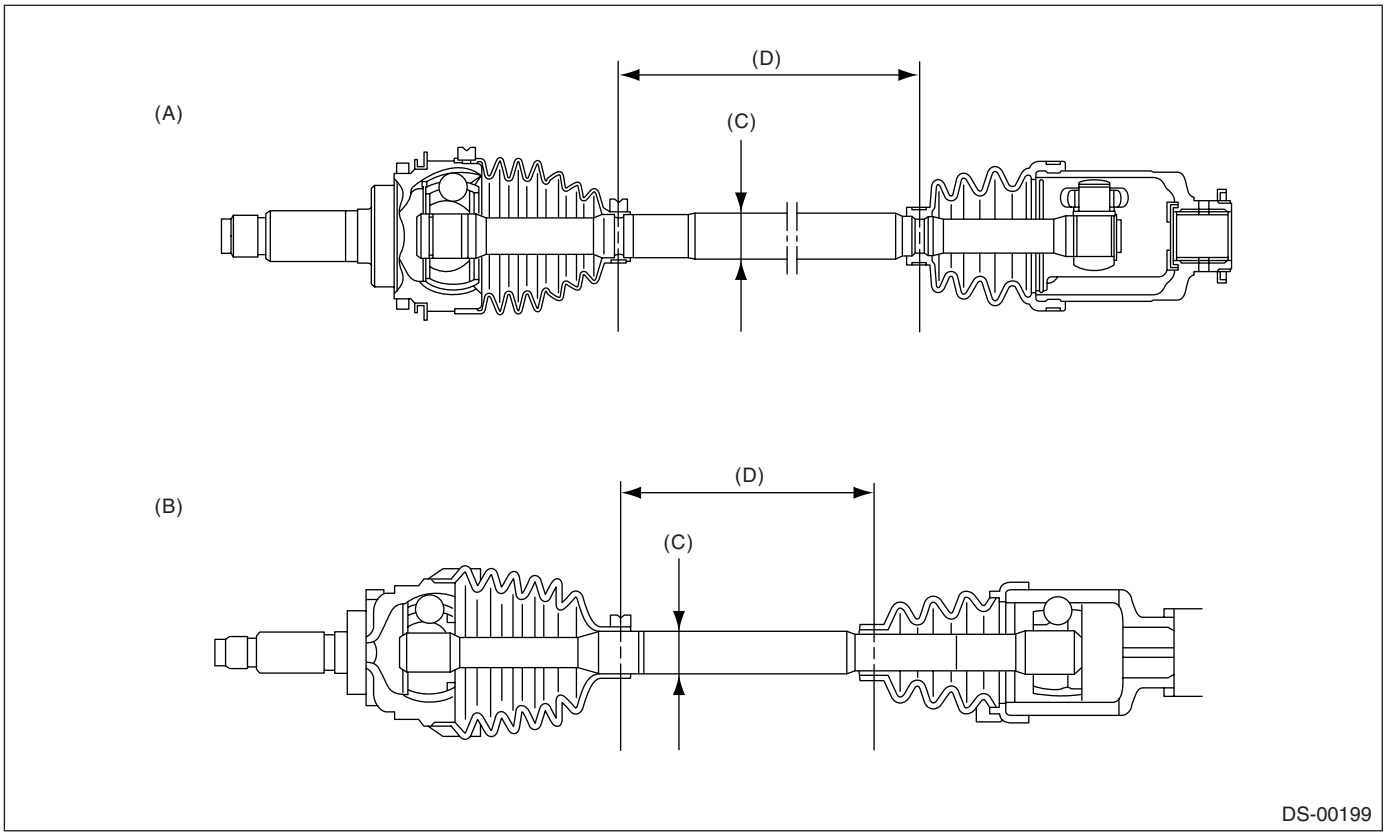

(A) EBJ87+SFJ82
(B) BJ92+DOJ87
(C) Axle diameter
(D) Axle length

3. REAR DRIVE SHAFT ASSEMBLY

Size		Model	No. of identification protrusion on shaft	L1 (mm)	ϕ D (mm)
A	EBJ82+DOJ82	Sedan turbo (except STi)	2	363	24
B	EBJ82+DOJ82		1	353	24
C	BJ79+DOJ79	Sedan 2.0 L Non-turbo MT	2	368	23
D	BJ79+DOJ79		1	358	23
E	BJ79+DOJ79	Sedan 1.6 L, 2.0 L Non-turbo AT	3	363	24
F	BJ79+DOJ79	Wagon 1.6 L, 2.0 L Non-turbo AT	None	355	24
G	EBJ82+DOJ82	Wagon turbo	2	353	24
H	EBJ82+DOJ82		1	343	24
I	BJ79+DOJ79	Wagon 2.0 L Non-turbo MT	2	358	23
J	BJ79+DOJ79		1	348	23
L	BJ87+DOJ87	STi	1	295.2	25

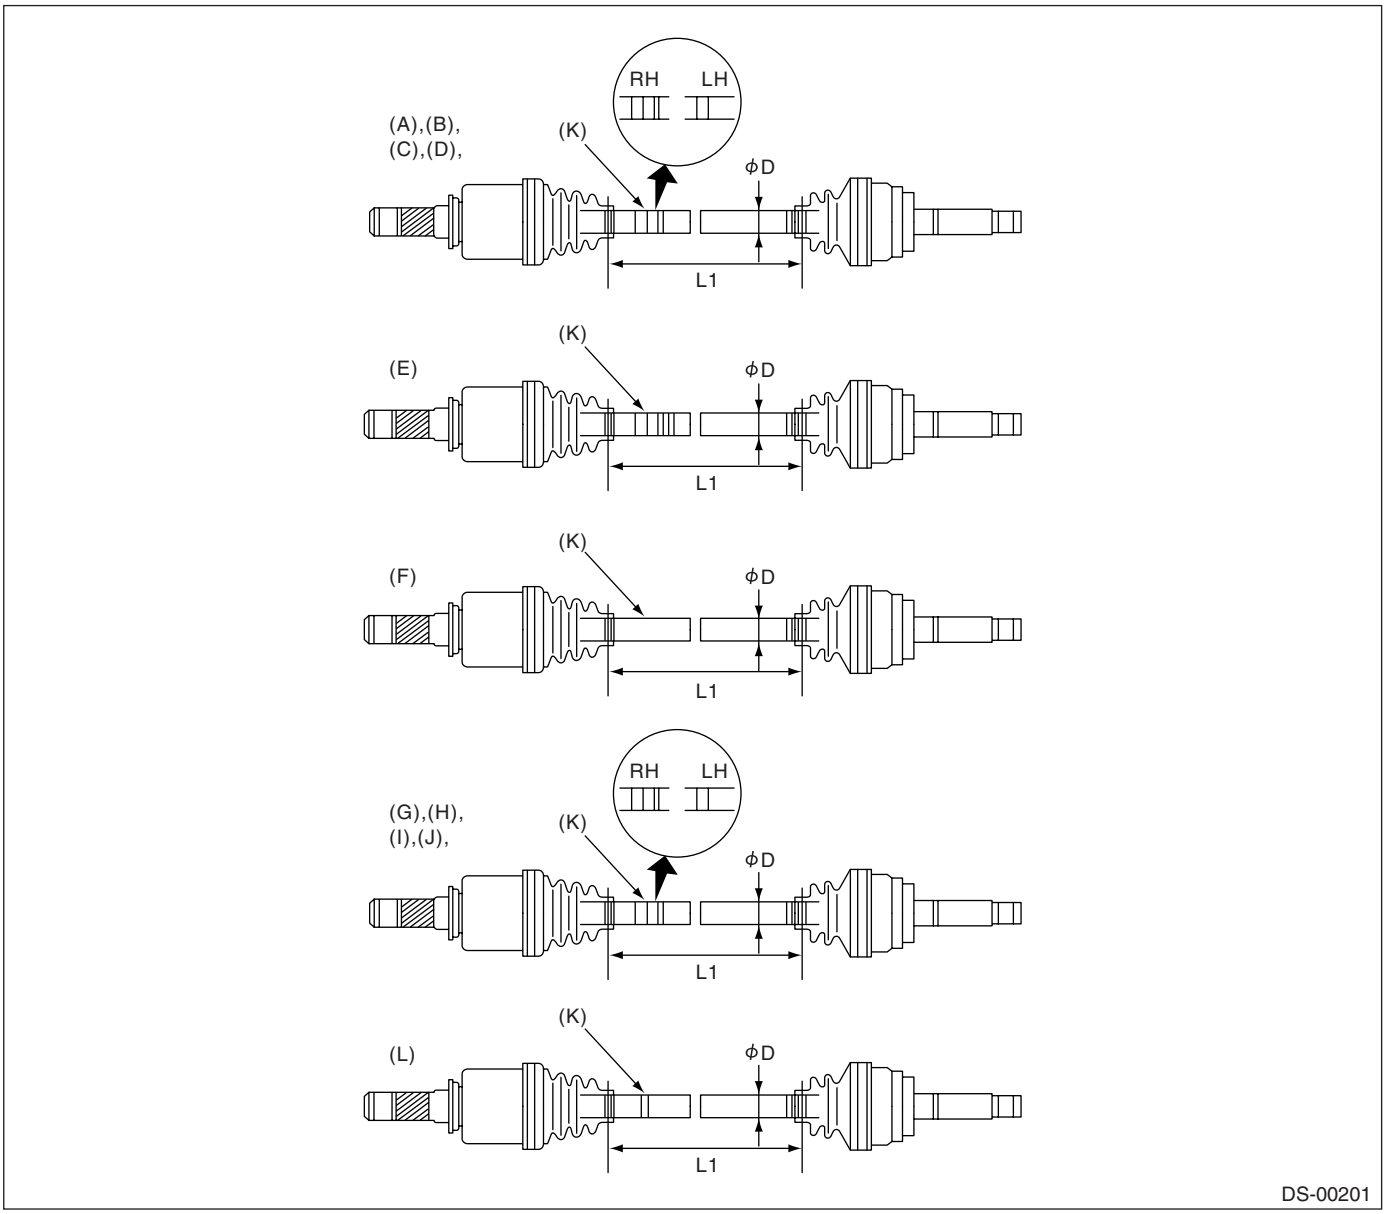

(A) EBJ82+DOJ82 sedan RH
(B) EBJ82+DOJ82 sedan LH
(C) BJ79+DOJ79 sedan R160RH
(D) BJ79+DOJ79 sedan R160LH
(E) BJ79+DOJ79 sedan R152R/L
(F) BJ79+DOJ79 wagon R152R/L
(G) EBJ82+DOJ82 wagon RH
(H) EBJ82+DOJ82 wagon LH
(I) BJ79+DOJ79 wagon R160RH
(J) BJ79+DOJ79 wagon R160LH
(K) Identification protrusion
(L) BJ87+DOJ87 R180 RH/LH

B: COMPONENT

1. PROPELLER SHAFT

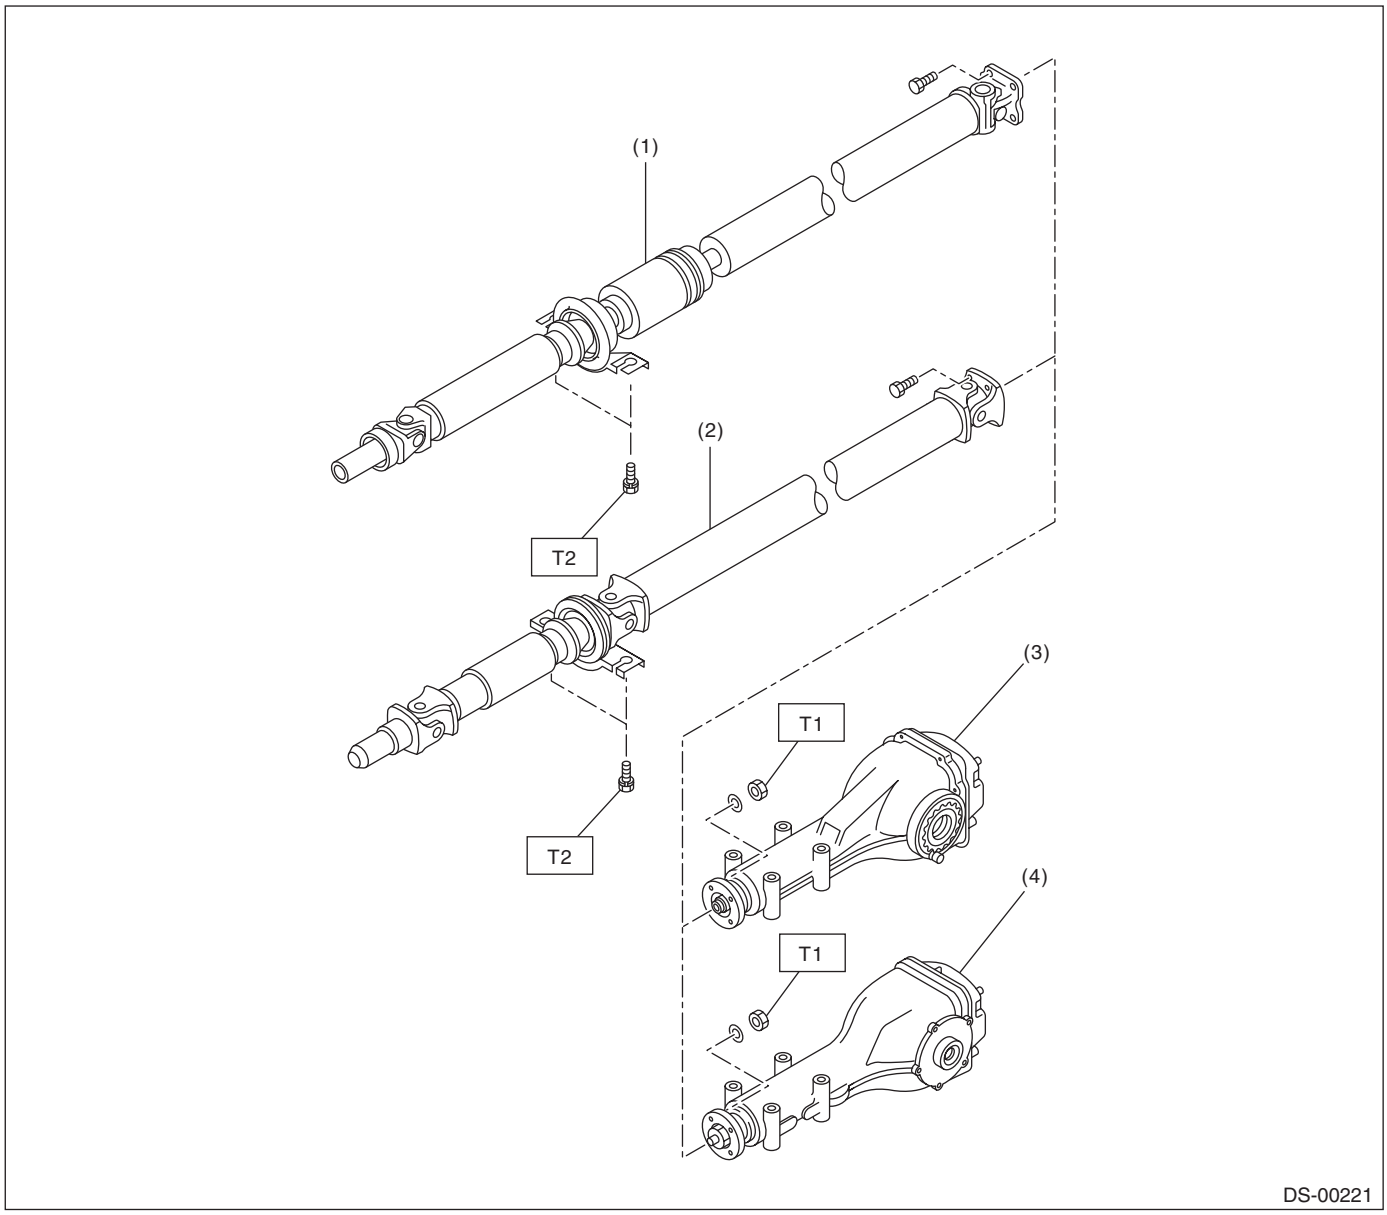

(1) Propeller shaft (DOJ type)
(2) Propeller shaft (3UJ type)
(3) Rear differential (VA-type)
(4) Rear differential (T-type)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 38 (3.9, 28.3)
T2: 52 (5.3, 38.3)

2. FRONT AXLE

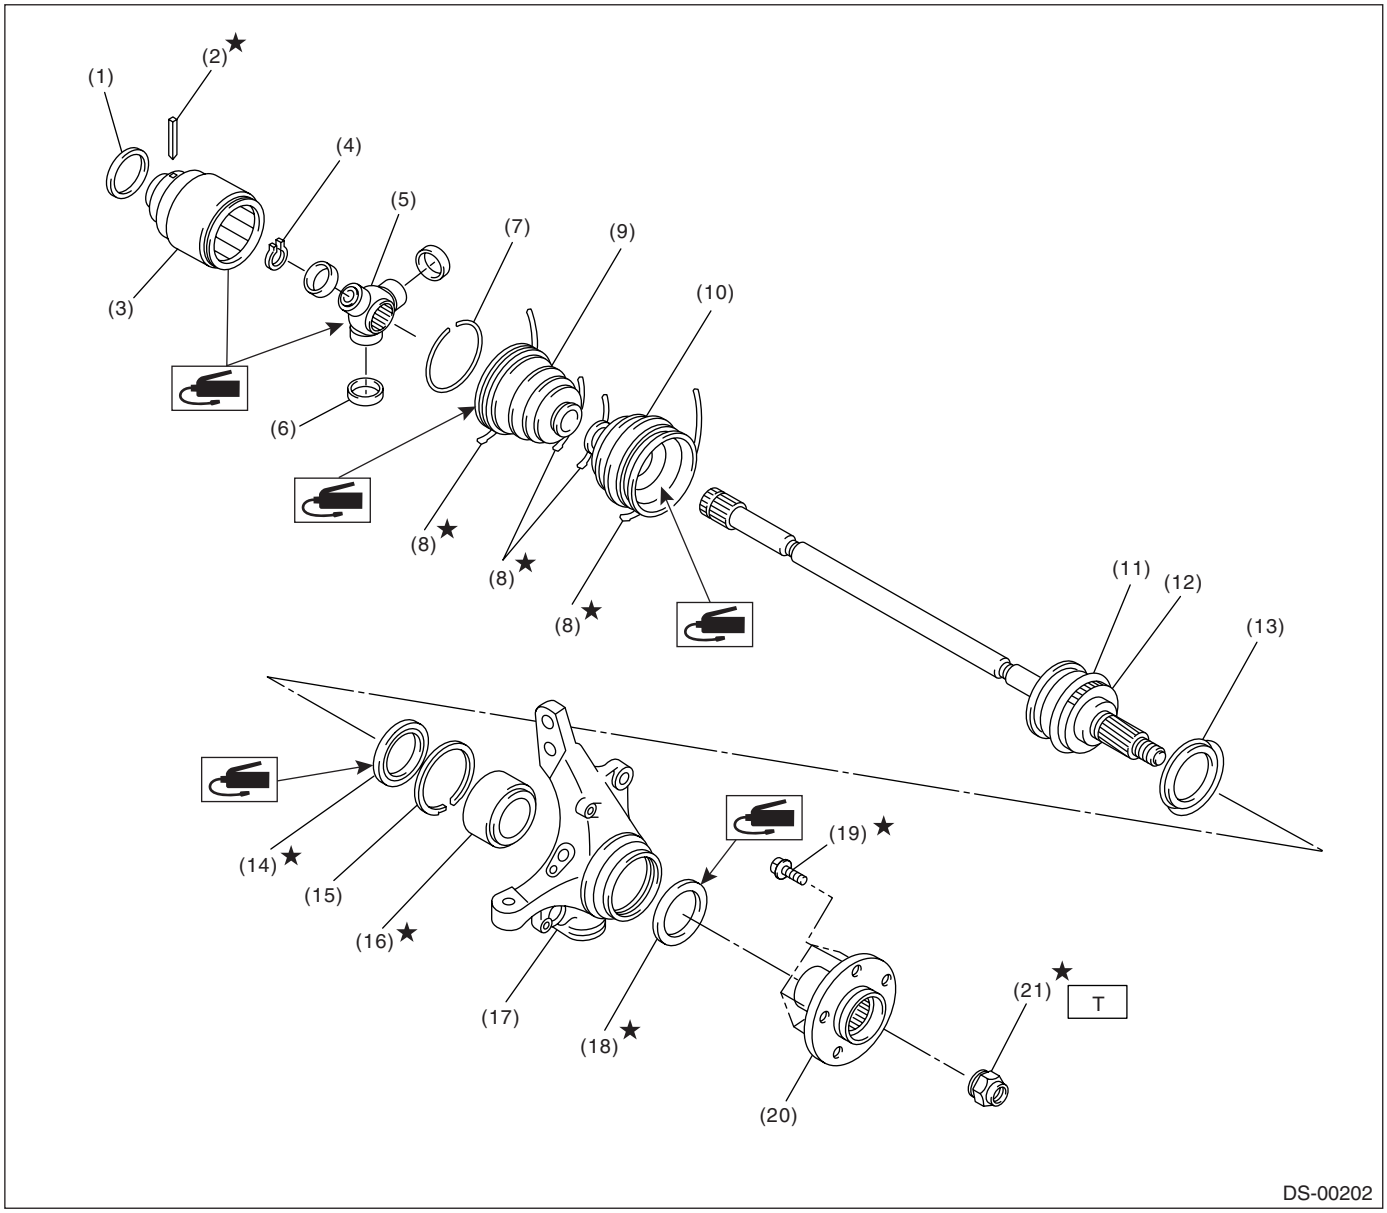

(1) Baffle plate (SFJ)
(2) Spring pin
(3) Outer race (SFJ)
(4) Snap ring
(5) Trunnion
(6) Free ring
(7) Circlip
(8) Boot band
(9) Boot (SFJ)
(10) Boot (EBJ)
(11) EBJ ASSY
(12) Tone wheel (with ABS)
(13) Baffle plate
(14) Oil seal (IN)
(15) Snap ring
(16) Bearing
(17) Housing
(18) Oil seal (OUT)
(19) Hub bolt
(20) Hub
(21) Axle nut

Tightening torque: N·m (kgf-m, ft-lb)
T: 220 (22.4, 162)

3. REAR AXLE

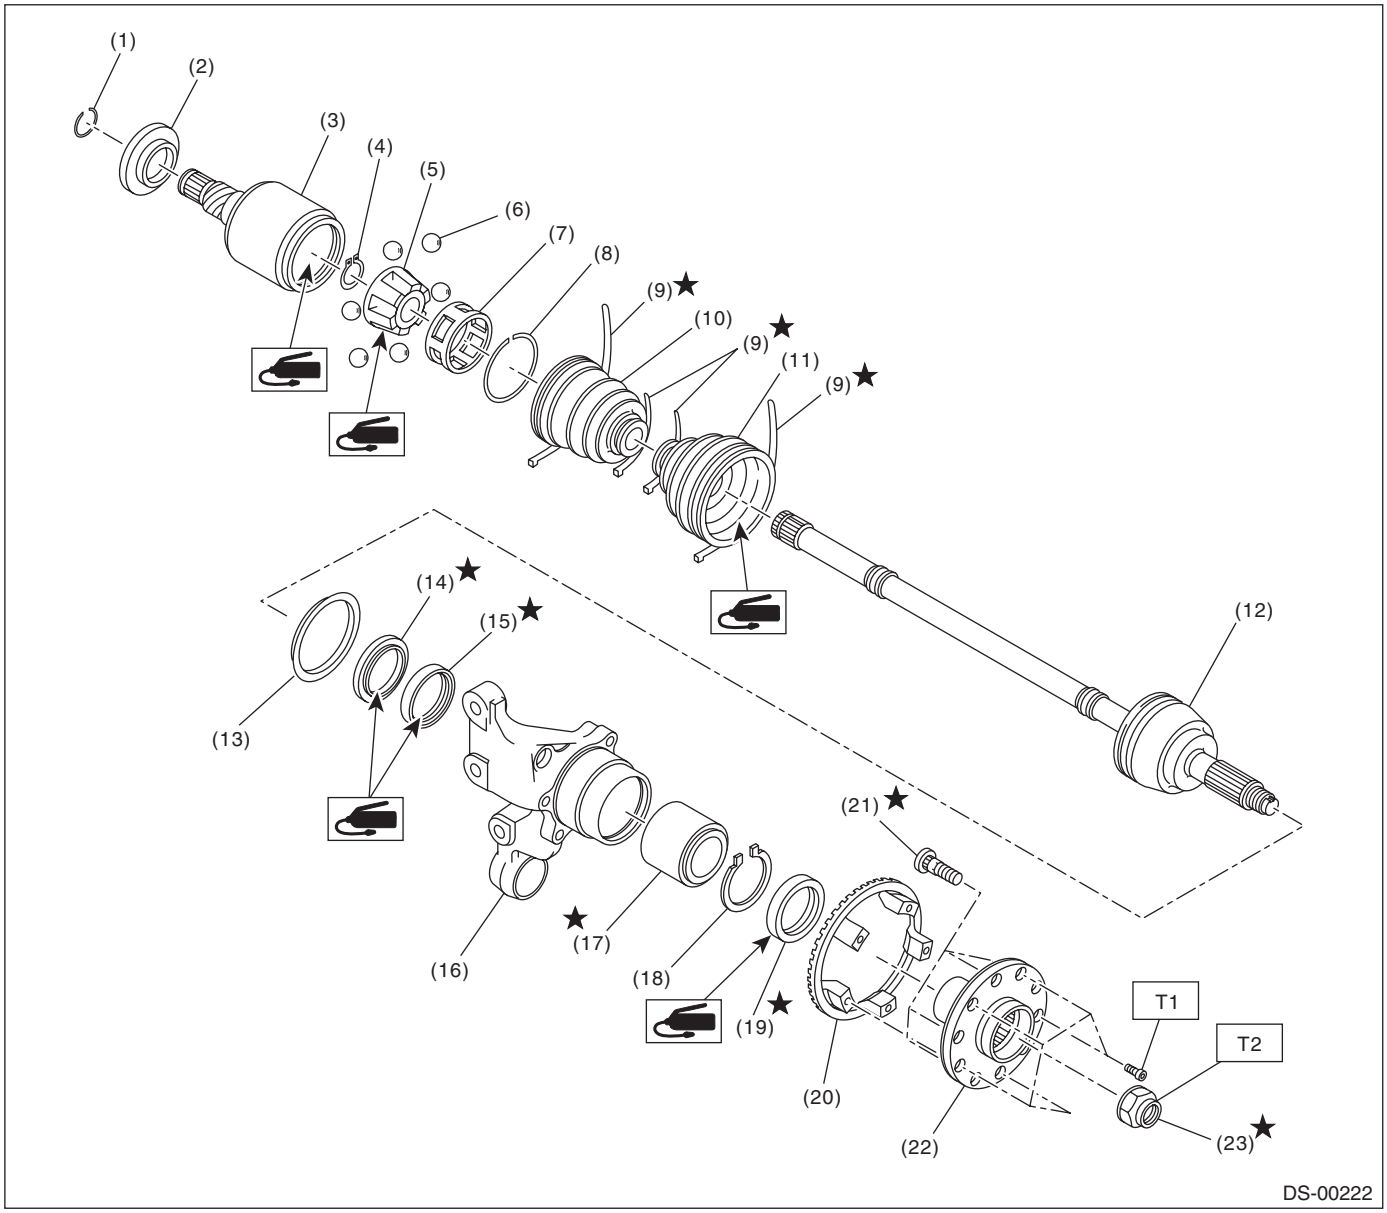

(1) Circlip
(2) Baffle plate (DOJ)
(3) Outer race (DOJ)
(4) Snap ring
(5) Inner race
(6) Ball
(7) Cage
(8) Circlip
(9) Boot band
(10) Boot (DOJ)
(11) Boot
(12) Non-turbo: BJ ASSY
Turbo: EBJ ASSY
(13) Baffle plate
(14) Oil seal (IN. No. 2)
(15) Oil seal (IN.)
(16) Housing
(17) Bearing
(18) Snap ring
(19) Oil seal (OUT)
(20) Tone wheel
(21) Hub bolt
(22) Hub
(23) Axle nut

Tightening torque: N·m (kgf-m, ft-lb)
T1: 13 (1.3, 9.4)
T2: 190 (19.4, 140)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Remove contamination including dirt and corrosion before removal, installation or disassembly.
• Keep the disassembled parts in order and protect them from dust or dirt.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Apply grease onto sliding or revolution surfaces before installation.
• Before installing snap rings, apply sufficient amount of grease to avoid damage and deformation.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
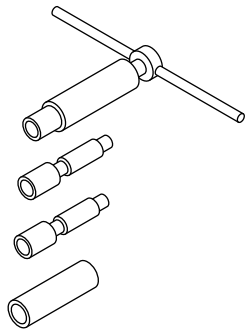 ST-922431000	922431000	AXLE SHAFT INSTALLER	• Used for installing axle shaft into housing. • Used with ADAPTER (927390000).
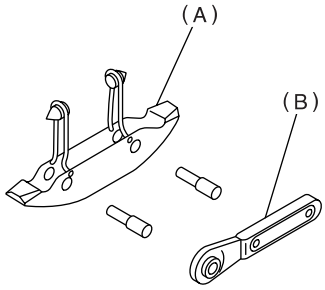 ST-925091000	925091000	BAND TIGHTENING TOOL	Used for tightening boot band. (A) Jig for band (B) Ratchet wrench

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
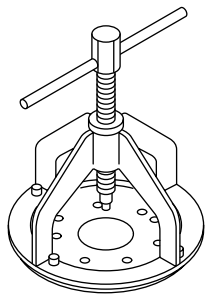 ST-926470000	926470000	AXLE SHAFT PULLER	Used for removing axle shaft.
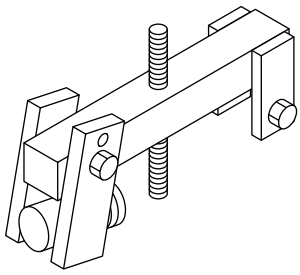 ST-927060000	927060000	HUB REMOVER	• Used for removing front hub. • Used with HUB STAND (927080000).
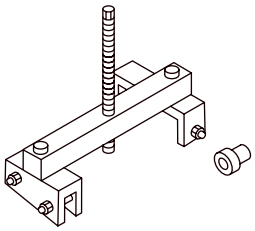 ST-927420000	927420000	HUB REMOVER	• Used for removing rear hub. • Used with HUB STAND (927080000).
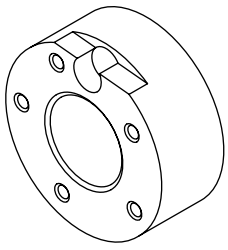 ST-927080000	927080000	HUB STAND	Used for disassembling and assembling hub bolt in hub.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
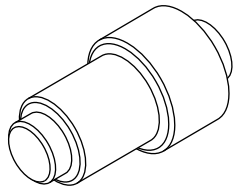 ST-927100000	927100000	BEARING PULLER	• Used for disassembling and assembling front housing bearing. • Used with HOUSING STAND (927400000).
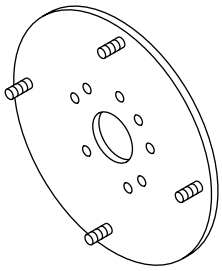 ST-927140000	927140000	AXLE SHAFT PULLER PLATE	Same as plate 2 included in AXLE SHAFT PULLER (926470000).
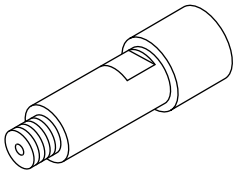 ST-927390000	927390000	ADAPTER	Used as an adapter for AXLE SHAFT INSTALLER (922431000).
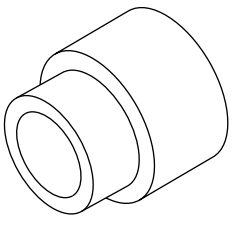 ST-927400000	927400000	HOUSING STAND	• Used for disassembling and assembling front housing bearing. • Used with BEARING PULLER (927100000).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
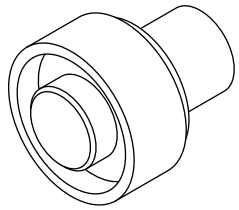 ST-927410000	927410000	OIL SEAL INSTALLER	• Used for installing oil seal into front housing. • Used with HOUSING STAND (927400000).
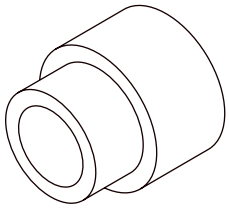 ST-927430000	927430000	HOUSING STAND	• Used for disassembling and assembling rear housing bearing. • Used with BEARING PULLER (927440000).
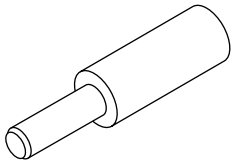 ST-927120000	927120000	HUB INSTALLER	Used for installing hub.
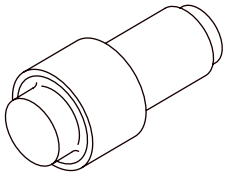 ST-927440000	927440000	BEARING REMOVER	• Used for disassembling and assembling rear wheel bearing. • Used with HOUSING STAND (927430000).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
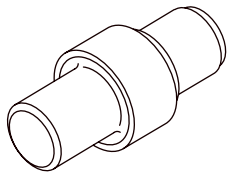 ST-927460000	927460000	OIL SEAL INSTALLER	• Used for installing outer oil seal. • Used with HOUSING STAND (927430000).
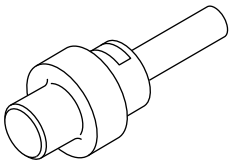 ST-927450000	927450000	HUB INSTALLER	• Used for pressing hub bearing into hub. • Used with HUB STAND (927080000).
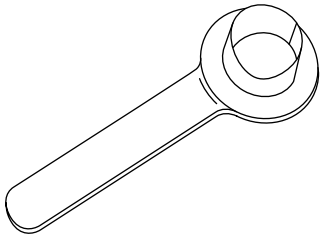 ST28099PA090	28099PA090	OIL SEAL PROTECTOR	• Used for installing rear drive shaft into rear differential. • For protecting oil seal.
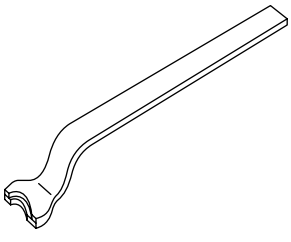 ST28099PA100	28099PA100	DRIVE SHAFT REMOVER	Used for removing rear drive shaft from rear differential.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
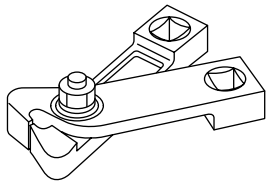 ST28099AC000	28099AC000	BOOT BAND PLIERS	Used for tightening front BJ boot band.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMERKS
Puller	Used for removing ball joint from knuckle arm.
Dial gauge	Used for inspecting propeller shaft run-out.
Snap ring pliers	Used for installing and removing snap ring.

2. Propeller Shaft

A: REMOVAL

NOTE:
• Before removing the propeller shaft, wrap the metal parts with a cloth or rubber material.
• In case of DOJ type, before removing the propeller shaft, wrap the metal parts (installed at the rubber boot of center DOJ) with a cloth or rubber material, as shown in the figure. Rubber boot may be damaged due to interference with adjacent metal parts while bending the DOJ during removal.

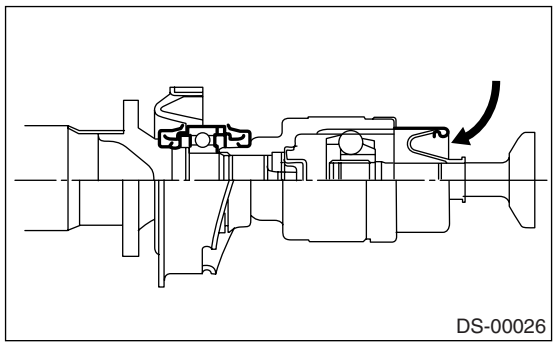
DS-00026

1) Disconnect the ground cable from battery.
2) Move the select lever or gear shift lever to “N”.
3) Release the parking brake.
4) Jack-up the vehicle and support it with sturdy racks.
5) Remove the center exhaust pipes.
6) Remove the rear exhaust pipe and muffler.
7) Remove the differential mount front cover.

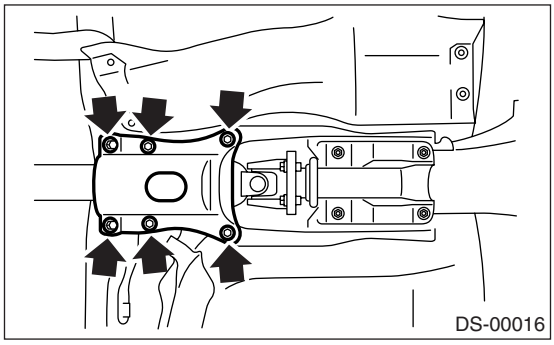
DS-00016

8) Make matching marks on affected parts before removal.

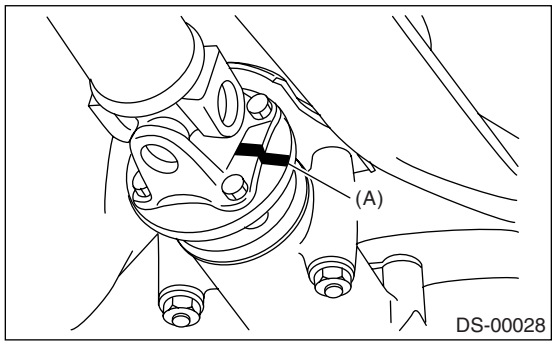

DS-00028

(A) Matching mark

9) Remove the three bolts which hold the propeller shaft to rear differential.
10) Remove the remaining bolt.
11) Remove the two bolts which hold the center bearing to vehicle body.

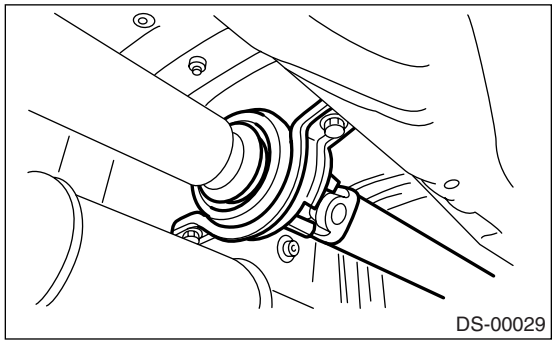
DS-00029

12) Remove the propeller shaft from transmission.

CAUTION:
• Be careful not to damage the oil seals and frictional surface of sleeve yoke.
• Cover the center exhaust pipe with a cloth to keep off any ATF or oil spilled from transmission when removing the propeller shaft.

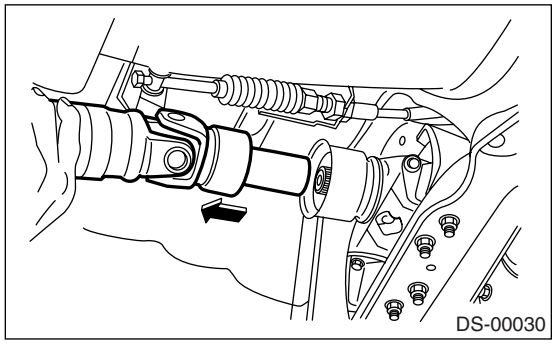
DS-00030

13) Install the extension cap to transmission.

NOTE:
If the extension cap is not available, place a vinyl bag over opening and fasten it with string to prevent gear oil or ATF from leaking.

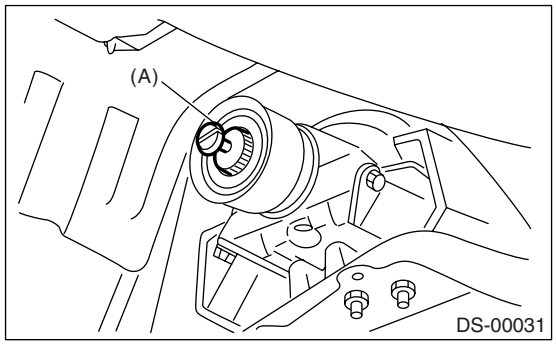

(A) Extension cap

B: INSTALLATION

1) Insert the sleeve yoke into transmission, and then attach the center bearing to body.

Tightening torque:
52 N·m (5.3 kgf-m, 38.3 ft-lb)

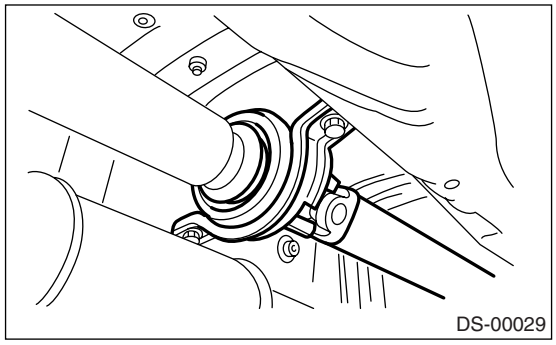

2) Align the matching marks, and then connect the flange yoke and rear differential.

Tightening torque:
38 N·m (3.9 kgf-m, 28.3 ft-lb)

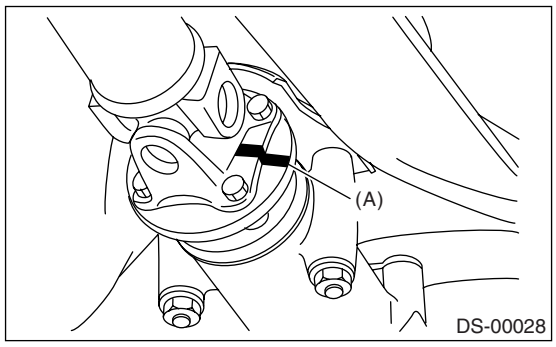

(A) Matching mark

3) Using new bolts, install the differential mount front cover.
(1) Temporarily tighten the bolt (A) while pushing cover forward.
(2) Tighten the bolt (B) to specified torque.
(3) Tighten the bolt (A) to specified torque.
(4) Tighten the remaining bolts to specified torque.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

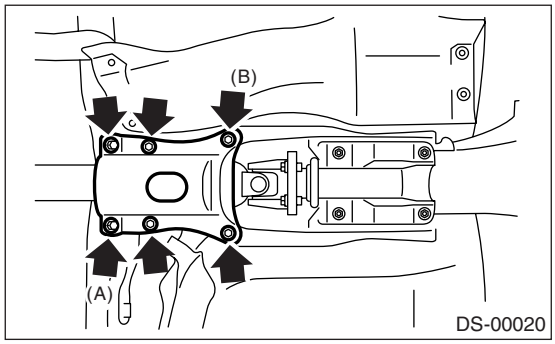

4) Install the center exhaust pipes.
5) Install the rear exhaust pipe and muffler.

C: INSPECTION

NOTE:
Do not disassemble the propeller shaft. Check the following and replace if necessary.

1) Tube surfaces for dents or cracks
2) Splines for deformation or abnormal wear
3) Joints for non-smooth operation or abnormal noise
4) Center bearing for free play, noise or non-smooth operation
5) Oil seals for abnormal wear or damage
6) Center bearing for breakage

Check the following points with propeller shaft installed in vehicle.

1. JOINTS AND CONNECTIONS

1) Remove the center exhaust pipes.
2) Remove the heat shield cover.
3) Check for any looseness of the yoke flange mounting bolts which connect to rear differential and center bearing bracket mounting bolts.

2. SPLINES AND BEARING LOCATIONS

1) Remove the center exhaust pipes.
2) Remove the rear exhaust pipe and muffler.
3) Remove the heat shield cover.
4) Turn the propeller shaft by hand to see if abnormal free play exists at splines. Also move the yokes to see if abnormal free play exists at spiders and bearings.

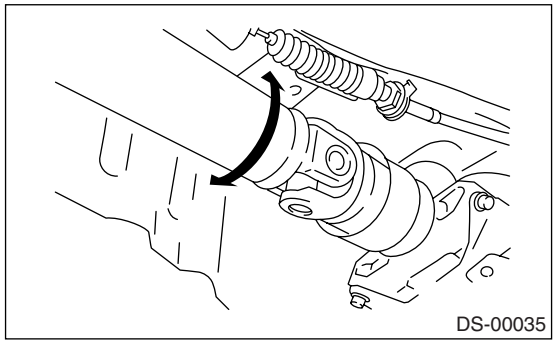

3. RUNOUT OF PROPELLER SHAFT

1) Remove the center exhaust pipes.
2) Remove the rear exhaust pipe and muffler.
3) Remove the heat shield cover.
4) Set the dial gauge with its indicator stem at center of propeller shaft tube.
5) Turn the propeller shaft slowly by hands to check for “runout” of propeller shaft.

Runout:
Limit 0.6 mm (0.024 in)

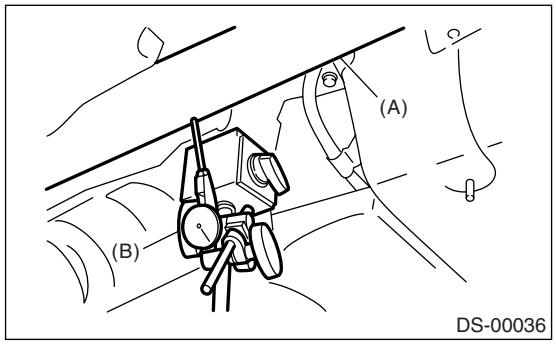

(A) Propeller shaft
(B) Dial gauge

4. CENTER BEARING FREE PLAY

1) Remove the front and center exhaust pipes.
2) Remove the rear exhaust pipe and muffler.
3) Remove the heat shield cover.
4) Move the propeller shaft near center bearing up and down, and left and right with your hand to check for any abnormal bearing free play.

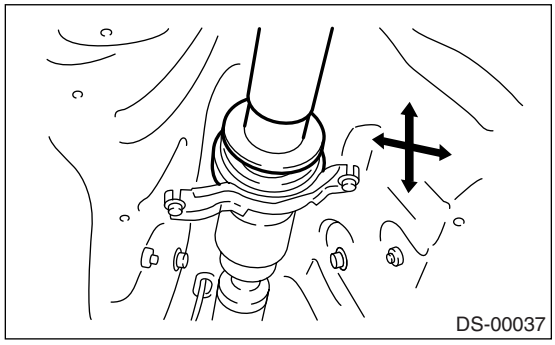

3. Front Axle

A: REMOVAL

1) Lift-up the vehicle and remove the front wheels.
2) Unlock the axle nut.

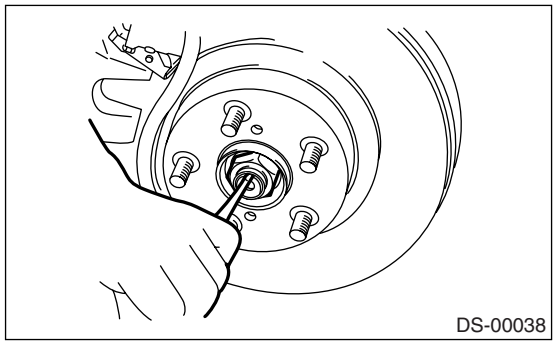

3) Remove the axle nut using a socket wrench while depressing the brake pedal.

CAUTION:
Remove the axle nut with vehicle weight not applied on axle. Failure to follow this rule may damage the wheel bearings.

4) Remove the stabilizer link.

SEDAN:

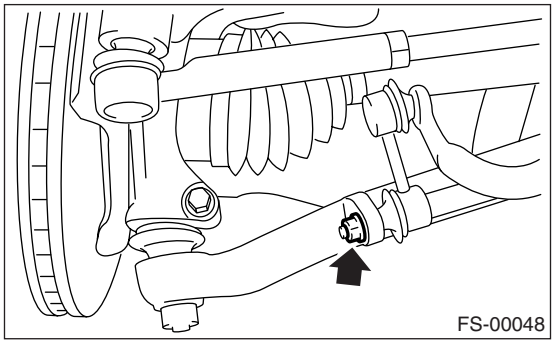

WAGON:

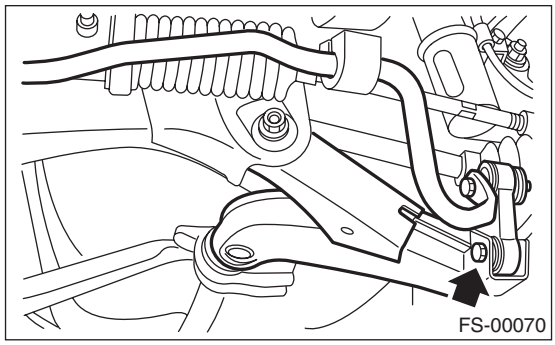

5) Remove the disc brake caliper from housing, and suspend it from strut using a wire.

6) Remove the disc rotor from hub.

NOTE:
If the disc rotor seizes up within hub, drive disc rotor out by installing an 8-mm bolt in screw hole on rotor.

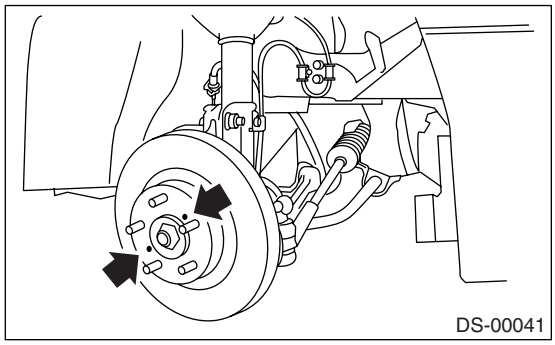

7) Remove the cotter pin and castle nut which secure tie-rod end to housing knuckle arm.

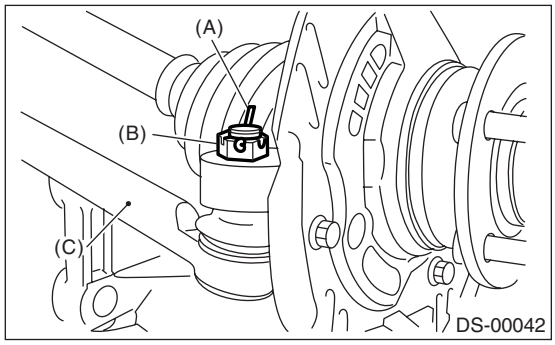

(A) Cotter pin
(B) Castle nut
(C) Tie-rod

8) Using a puller, remove the tie-rod ball joint from knuckle arm.

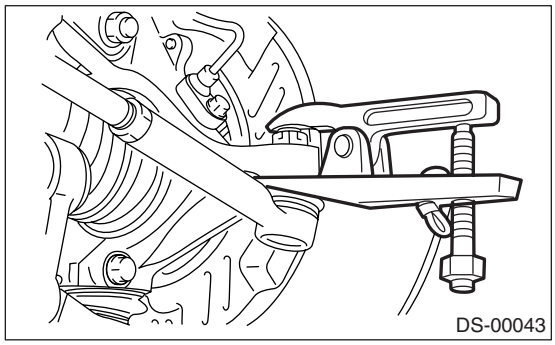

9) Remove the ABS wheel speed sensor assembly and harness.

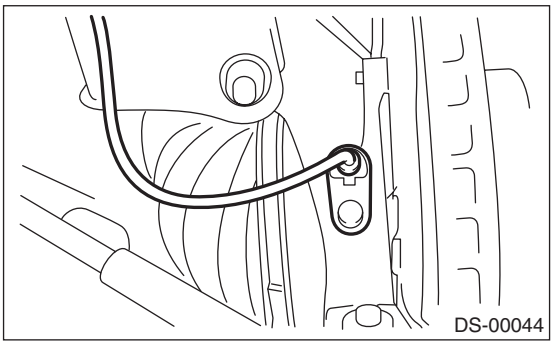

10) Remove the transverse link ball joint from housing.

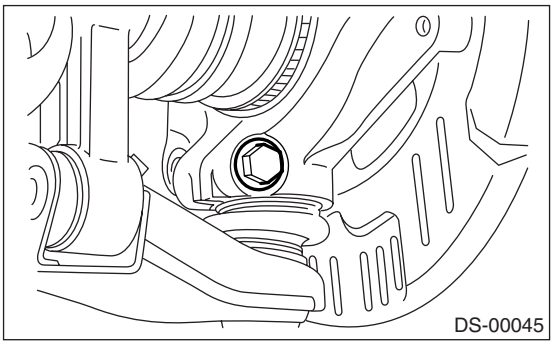

11) Remove the front drive shaft assembly from hub. If it is hard to remove, use the STs.

ST1	926470000	AXLE SHAFT PULLER
ST2	927140000	AXLE SHAFT PULLER PLATE

CAUTION:
• Be sure to replace the differential side retainer oil seal at transmission side with a new one when removing the front drive shaft.
• Suspend the front drive shaft to vehicle body using a wire.

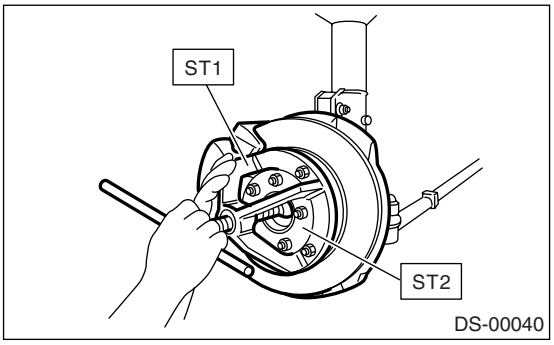

12) After scribing an alignment mark on the camber adjusting bolt head, remove the bolts which connect the housing and strut, and disconnect the housing from strut.

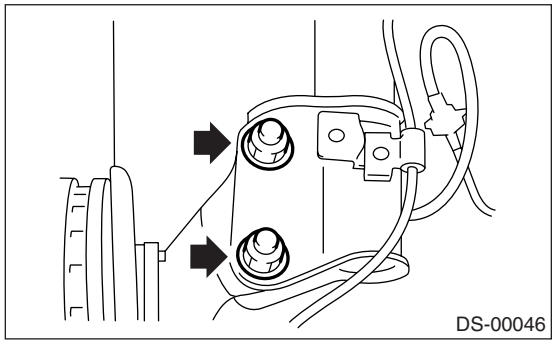

B: INSTALLATION

1) Temporarily tighten the front axle to front strut.
2) Insert the front drive shaft into front axle.
3) Temporarily tighten the axle nut.
4) Install the transverse link ball joint to housing.

Tightening torque:
50 N·m (5.1 kgf-m, 37 ft-lb)

5) While aligning the alignment mark on the camber adjusting bolt head, tighten the housing and strut using a new self-locking nut.

Tightening torque:
175 N·m (17.8 kgf-m, 129 ft-lb)

6) Connect the tie-rod end ball joint to the knuckle arm with a castle nut.

Tightening torque:
27.0 N·m (2.75 kgf-m, 19.9 ft-lb)

CAUTION:
When connecting, do not hit the cap at bottom of tie-rod with hammer.

7) Tighten the castle nut to specified torque and tighten further within 60° until the pin hole is aligned with the slot in nut. Bend the cotter pin to lock.

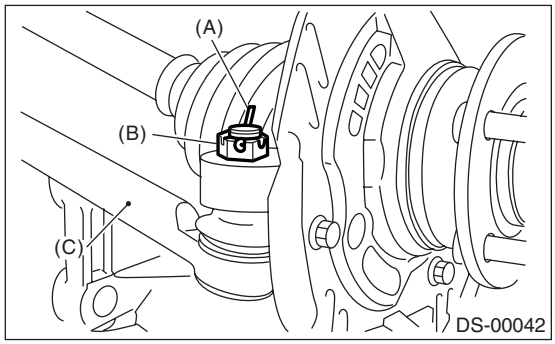

(A) Cotter pin
(B) Castle nut
(C) Tie-rod

8) Install the disc rotor on hub.

9) Install the disc brake caliper on housing.

Tightening torque:
80 N·m (8.2 kgf-m, 59 ft-lb)

10) Connect the stabilizer link.

Tightening torque:
45 N·m (4.6 kgf-m, 33 ft-lb)

CAUTION:
Use a new self-locking nut.

11) Using the ST1 and ST2, pull the front drive shaft into place.
ST1 922431000 AXLE SHAFT INSTALLER
ST2 927390000 ADAPTER

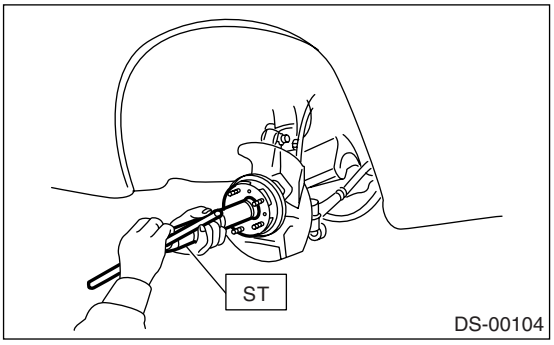

12) While depressing the brake pedal, tighten a new axle nut to specified torque and lock it securely.

Tightening torque:
220 N·m (22.4 kgf-m, 162 ft-lb)

CAUTION:
Be sure to tighten the axle nut to specified torque. Do not overtighten it as this may damage the wheel bearing.

13) After tightening the axle nut, lock it securely.

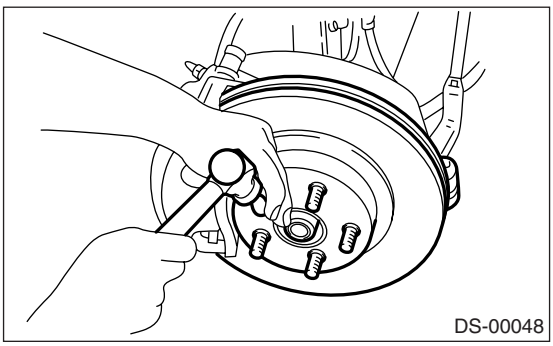

14) Install the ABS wheel speed sensor on housing.

Tightening torque:
32 N·m (3.3 kgf-m, 23.9 ft-lb)

15) Install the wheel and tighten the wheel nuts to specified torque.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

C: DISASSEMBLY

1) Using the ST1, support the housing and hub securely.
2) Attach the ST2 to housing and drive the hub out.
ST1 927060000 HUB REMOVER
ST2 927080000 HUB STAND

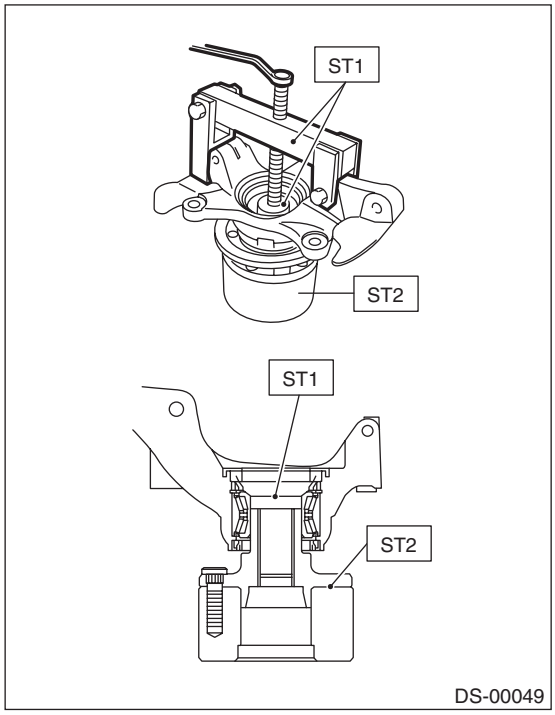

If the inner bearing race remains in hub, remove it with a suitable tool (commercially available).

NOTE:
Be careful not to scratch the polished area of hub.

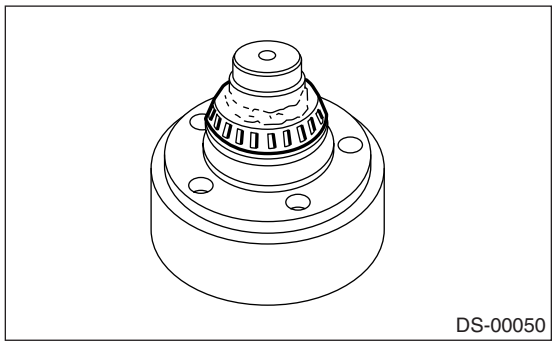

CAUTION:
Do not reuse the bearing if the hub was removed.

3) Remove the disc cover from housing.

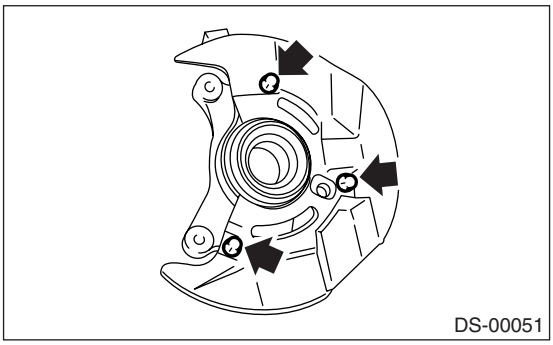

4) Using a standard screwdriver, remove the outer and inner oil seals.
5) Using a flat tip screwdriver, remove the snap ring.

NOTE:
Be careful not to damage the housing at removal.

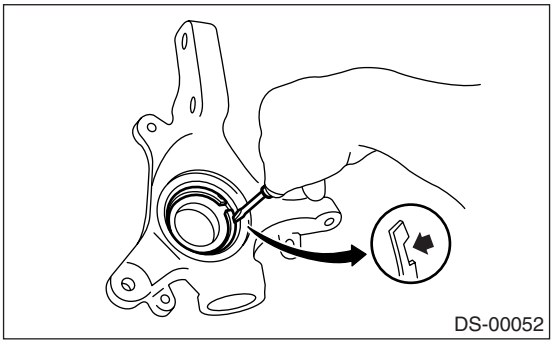

6) Using the ST1, support the housing securely.
7) Using the ST2, hold the inner race to drive out the outer race of bearing.
ST1 927400000 HOUSING STAND
ST2 927100000 BEARING PULLER

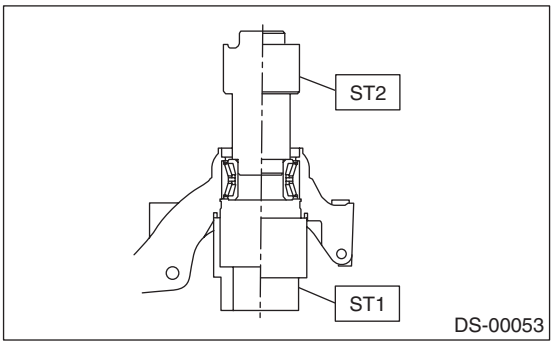

8) Using the ST and a hydraulic press, drive the hub bolts out.
ST 927080000 HUB STAND

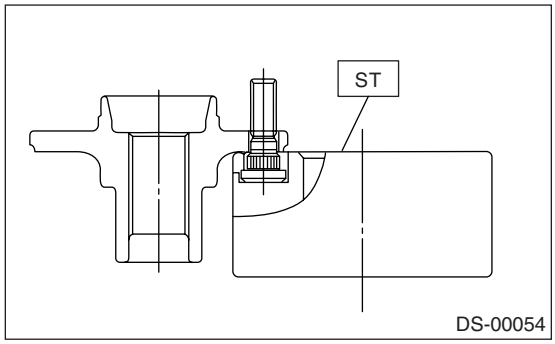

D: ASSEMBLY

NOTE:
When the hub is to be removed from housing, replace the bearing set and oil seal with new ones.

1) Attach the hub to ST securely.
ST 927080000 HUB STAND

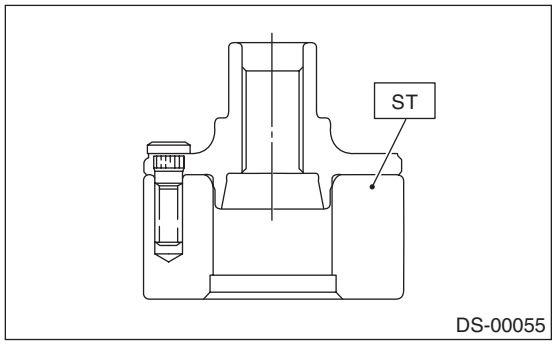

2) Using a hydraulic press, press new hub bolts until their seating surfaces contact the hub.

NOTE:
Use 12 mm (0.47 in) dia. holes in HUB STAND to prevent bolts from tilting.

3) Clean dust or foreign particles from inside of housing.
4) Using the ST1 and ST2, press a new bearing into place.
ST1 927400000 HOUSING STAND
ST2 927100000 BEARING PULLER

NOTE:
• Always press the outer race when installing the bearing.

• Be careful not to remove the plastic lock from inner race when installing the bearing.

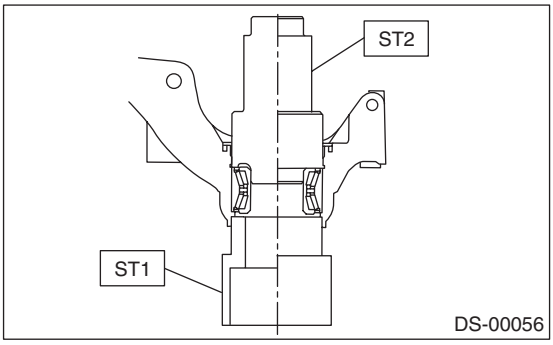

5) Using pliers, install the snap ring firmly.

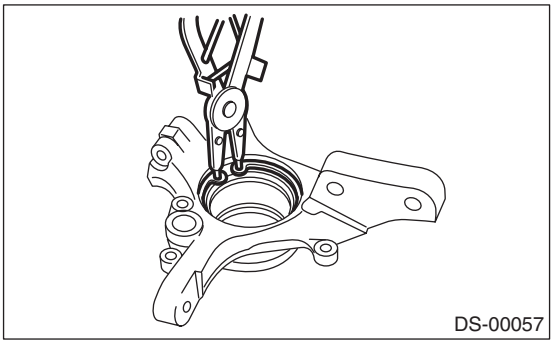

6) Using the ST1 and ST2, press the outer oil seal until it contacts the bottom of housing.
ST1 927410000 OIL SEAL INSTALLER
ST2 927400000 HOUSING STAND

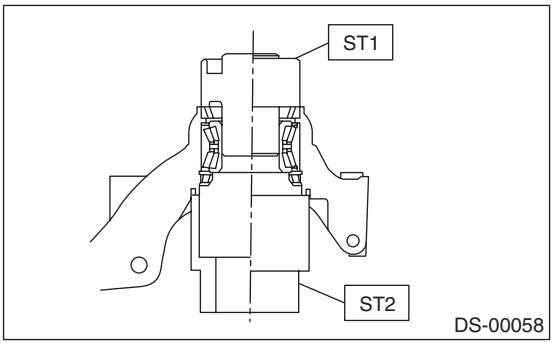

7) Using the ST1 and ST2, press the inner oil seal until it contacts the circlip.
ST1 927410000 OIL SEAL INSTALLER
ST2 927400000 HOUSING STAND

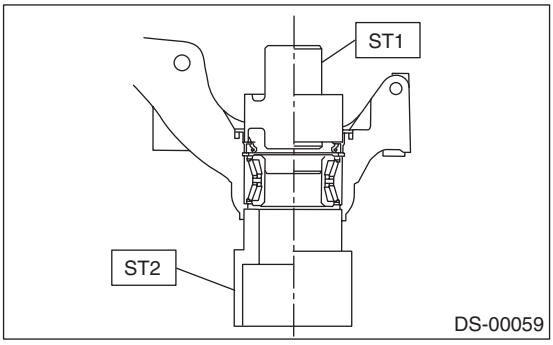

8) Invert the ST and housing.
ST 927400000 HOUSING STAND
9) Apply sufficient grease to the oil seal lip.

Specified grease:
SHELL 6459N

NOTE:
• If specified grease is not available, remove the bearing grease and apply Auto Rex A instead.
• Do not mix different types of grease.

10) Install the disc cover to housing with three bolts.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

11) Attach the hub to ST1 securely.
12) Clean dust or foreign particles from the polished surface of hub.
13) Using the ST2, press the bearing into hub by driving the inner race.
ST1 927080000 HUB STAND
ST2 927120000 HUB INSTALLER

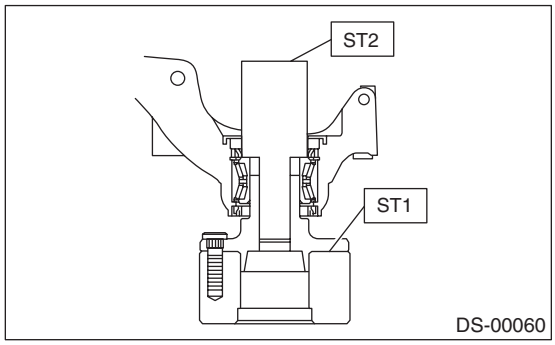

E: INSPECTION

1) Moving the front tire up and down by hand, check there is no backlash in bearing, and check the wheel rotates smoothly.

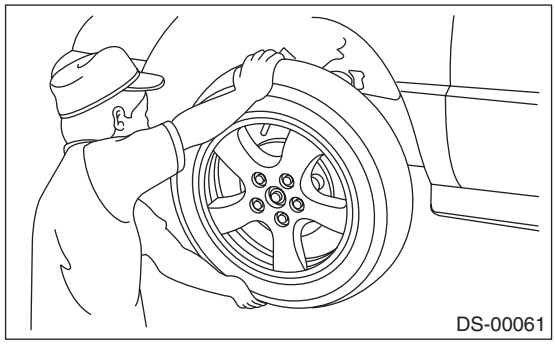

2) Inspect the lean of axis direction using a dial gauge. Replace the hub bearing if the load range exceeds the limitation.

Limit:

Maximum: 0.05mm (0.0020 in)

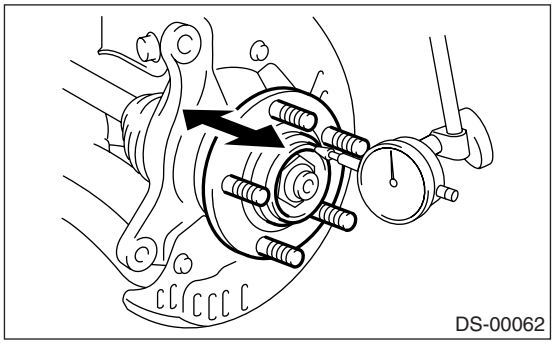

4. Rear Axle

A: REMOVAL

1. DISC BRAKE

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle, and remove the rear wheel.
3) Unlock the axle nut.
4) Remove the axle nut using a socket wrench with parking brake applied.

CAUTION:
Remove the axle nut with vehicle weight not applied on axle. Failure to follow this rule may damage the wheel bearings.

5) Return the parking brake lever and loosen the adjusting nut.

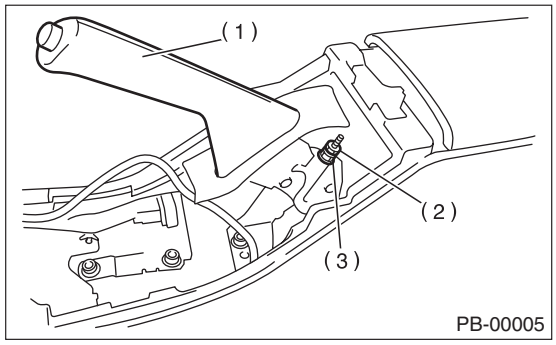

(1) Parking brake lever
(2) Lock nut
(3) Adjusting nut

6) Remove the disc brake caliper from back plate, and suspend it from strut using a piece of wire.

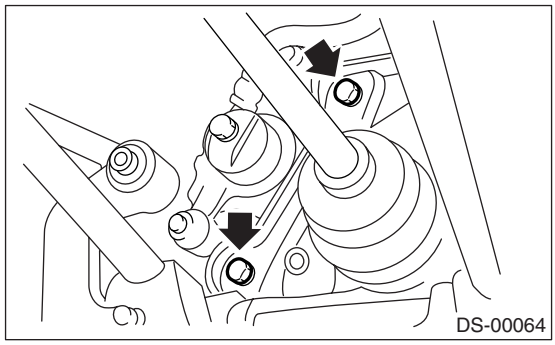

7) Remove the disc rotor from hub.

NOTE:
If the disc rotor seizes up within hub, drive it out by installing an 8-mm bolt into bolt hole in disc rotor.

8) Disconnect the parking brake cable end.

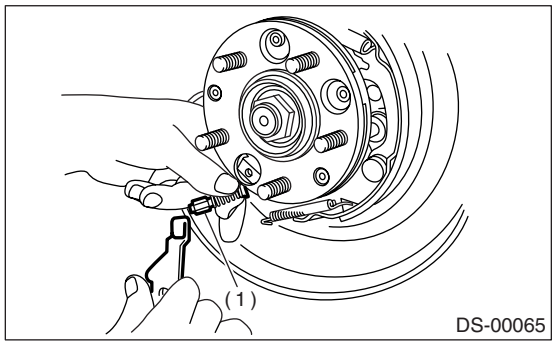

(1) Cable end

9) Disconnect the rear stabilizer from rear lateral link.
10) Remove the bolts which secure the trailing link assembly to rear housing.

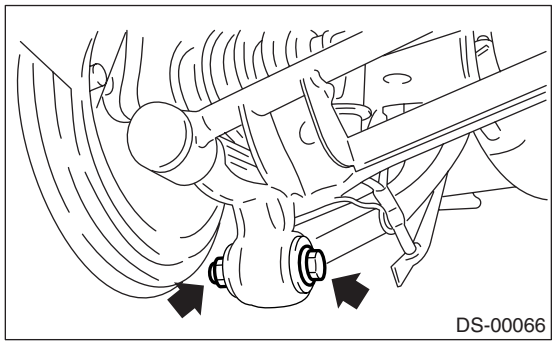

11) Remove the bolts which secure the lateral assembly to rear housing.

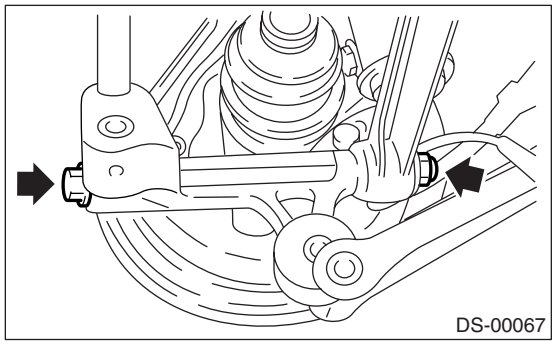

12) Remove the rear ABS wheel speed sensor from back plate.

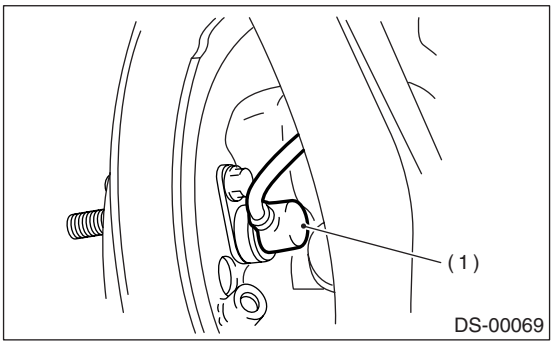

(1) ABS wheel speed sensor

13) Disengage the BJ from housing splines, and then remove the rear drive shaft assembly.
If it is hard to remove, use the STs.

ST1	926470000	AXLE SHAFT PULLER
ST2	927140000	AXLE SHAFT PULLER PLATE

NOTE:
• Be careful not to damage the oil seal lip when removing the rear drive shaft.
• When the rear drive shaft is to be replaced, also replace the inner oil seal with a new one.

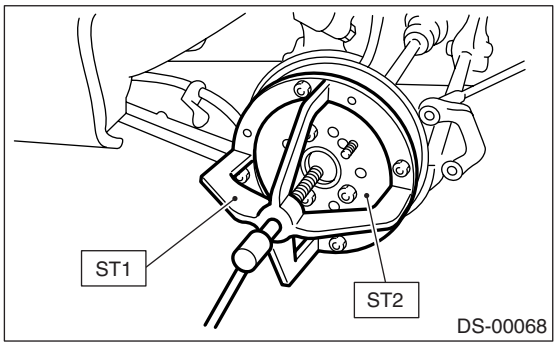

14) Remove the bolts which secure the rear housing to strut, and separate the two.

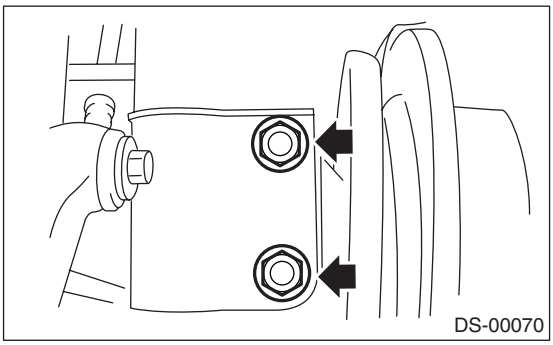

2. DRUM BRAKE

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle, and remove the rear wheel cap and wheels.
3) Unlock the axle nut.
4) Remove the axle nut using a socket wrench.

CAUTION:
Be sure to loosen and retighten the axle nut after removing the wheel from vehicle. Failure to follow this rule may damage the wheel bearings.

5) Return the parking brake lever and loosen the adjusting nut.

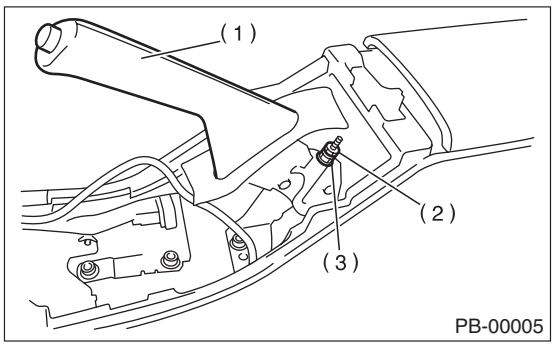

(1) Parking brake lever
(2) Lock nut
(3) Adjusting nut

6) Remove the brake drum from hub.
7) If it is difficult to remove the brake drum, remove the adjusting hole cover from back plate, and then turn the adjusting screw using a flat tip screwdriver until the brake shoe separates from drum.

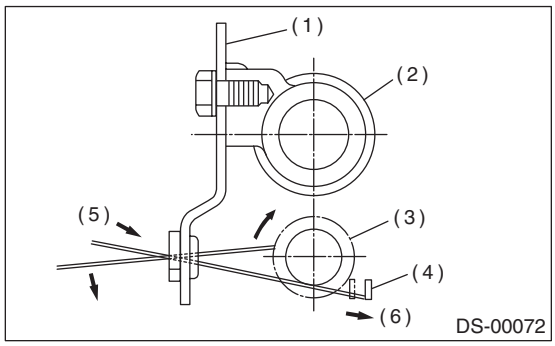

(1) Back plate
(2) Wheel cylinder
(3) Adjuster ASSY pawls
(4) Adjusting lever
(5) Tightening direction
(6) Push

NOTE:
If the brake drum is difficult to remove, drive it out by installing two 8-mm bolts into bolt hole in brake drum.

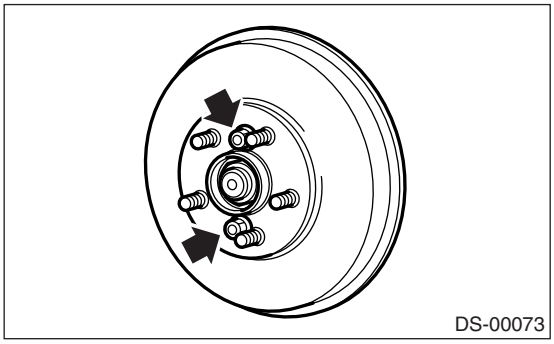

8) Remove the brake hose clamp from the rear strut portion, and separate the brake hose.

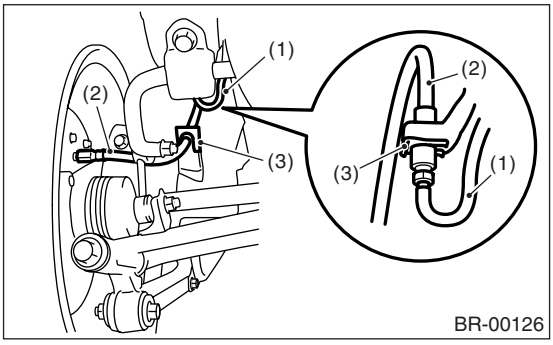

(1) Brake pipe
(2) Brake hose
(3) Brake hose clamp

9) Cover the open end of brake pipe with vinyl sheet or equivalent to prevent brake fluid from spilling.
10) Disconnect the parking brake cable end.

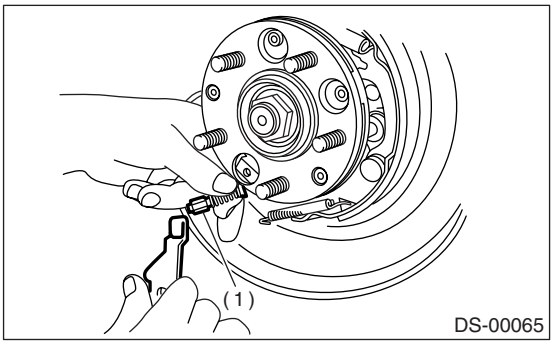

(1) Cable end

11) Disconnect the rear stabilizer from rear lateral link. Remove the bolts which secure the trailing link assembly to rear housing.

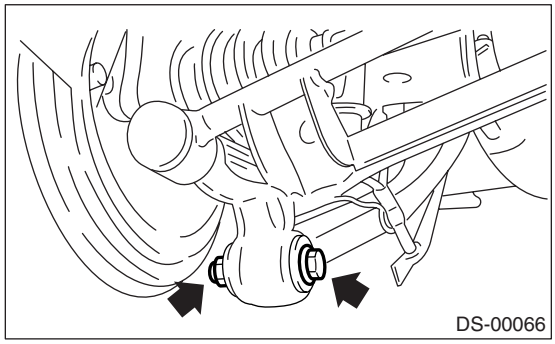

12) Remove the bolts which secure the lateral link assembly to rear housing.

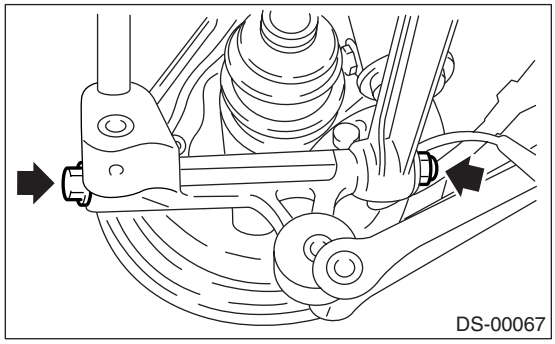

13) Remove the rear ABS wheel speed sensor from back plate.

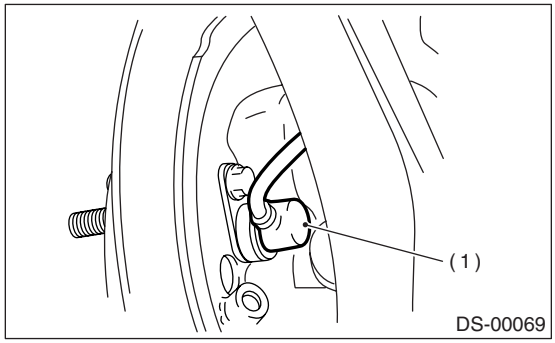

(1) ABS wheel speed sensor

14) Disengage the BJ from housing splines, and remove the rear drive shaft assembly.
If it is hard to remove, use the STs.
ST1 926470000AXLE SHAFT PULLER
ST2 927140000AXLE SHAFT PULLER PLATE

CAUTION:
• Be careful not to damage the oil seal lip when removing the rear drive shaft.
• When the rear drive shaft is to be replaced, also replace the inner oil seal with a new one.

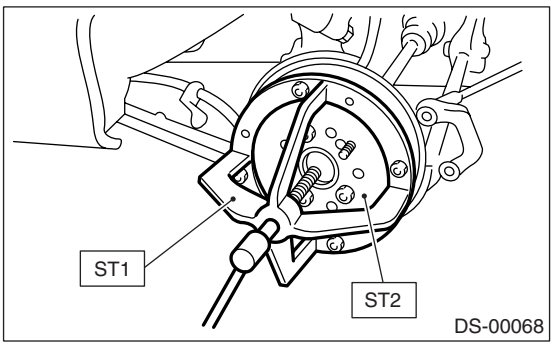

15) Remove the bolts which secure the rear housing to strut, and separate the two.

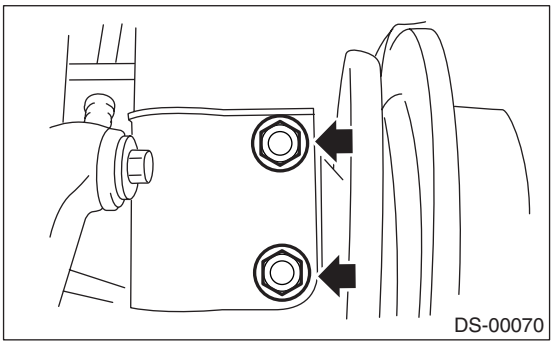

B: INSTALLATION

1. DISC BRAKE

1) Temporarily tighten the rear axle to strut.
2) Insert the rear drive shaft into rear axle.

NOTE:
Be careful not to damage the inner oil seal lip.

3) Temporarily tighten the axle nut.
4) Using a new self-locking nut, temporarily tighten the rear housing assembly and lateral link assembly.

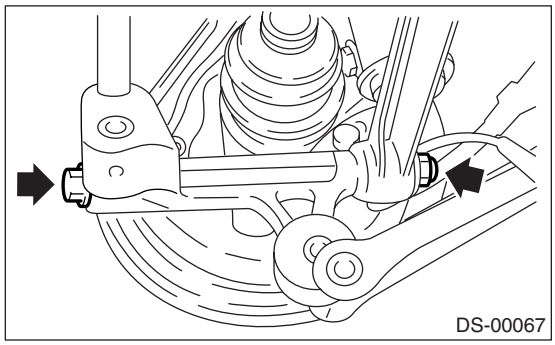

5) Using a new self-locking nut, temporarily tighten the rear housing assembly and trailing link assembly.

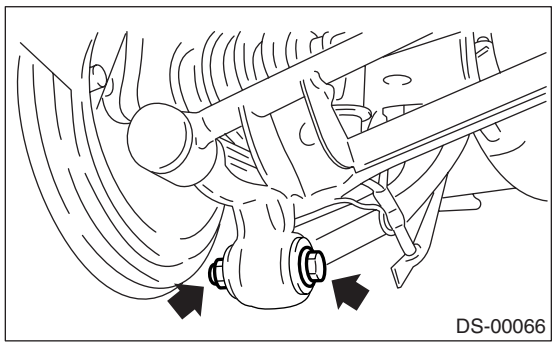

6) Tighten the rear housing assembly and strut assembly using a new self-locking nut.

Tightening torque:
196 N·m (20 kgf-m, 145 ft-lb)

7) Using a new self-locking nut, install the rear stabilizer and rear lateral link.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

8) Connect the parking brake cable to parking brake.
9) Install the disc rotor on rear housing assembly.

10) Install the disc brake caliper on back plate.

Tightening torque:
52 N·m (5.3 kgf-m, 38.3 ft-lb)

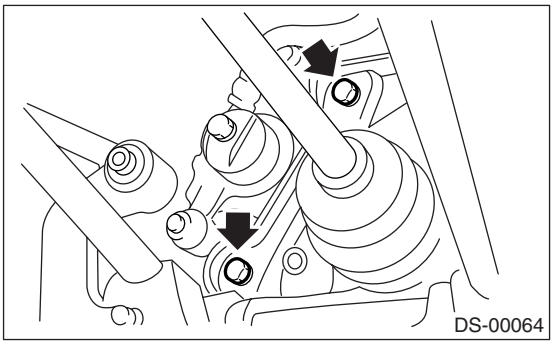

11) Adjust the parking brake lever stroke by turning the adjuster.
12) While applying the parking brake, tighten a new axle nut using a socket wrench. Lock the axle nut after tightening.

Tightening torque:
186 N·m (19 kgf-m, 137 ft-lb)

CAUTION:
Do not overtighten it as this may damage the wheel bearing.

13) Install rear ABS wheel speed sensor.

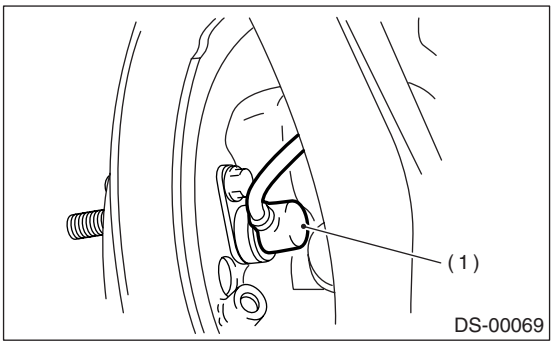

(1) ABS wheel speed sensor

14) Install the wheel and tighten the wheel nuts to specified torque.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

15) Make the tires contact the ground fully.

CAUTION:
Make the tires contact the ground fully and the vehicle be in curb weight whenever carrying out the tightening of bush portions.

16) Tighten the installation bolt of rear housing assembly and lateral link assembly.

Tightening torque:
137 N·m (14 kgf-m, 101 ft-lb)

17) Tighten the installation bolt of rear housing assembly and trailing link assembly.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

2. DRUM BRAKE

1) Temporarily tighten the rear axle to strut.
2) Insert the rear drive shaft to rear axle.

NOTE:
Be careful not to damage the inner oil seal lip.

3) Temporarily tighten the axle nut.
4) Using a new self-locking nut, temporarily tighten the rear housing assembly and lateral link assembly.

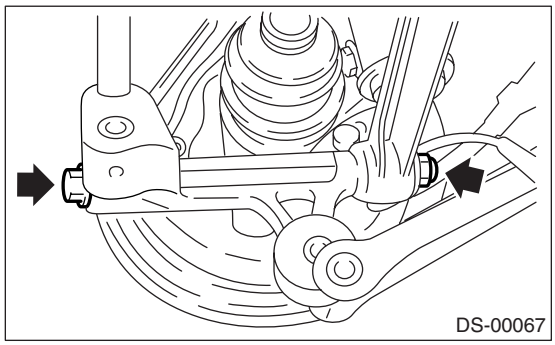

5) Using a new self-locking nut, temporarily tighten the rear housing assembly and trailing link assembly.

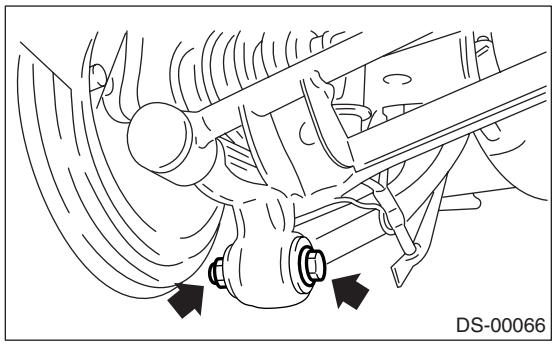

6) Tighten the rear housing assembly and strut assembly using a new self-locking nut.

Tightening torque:
196 N·m (20 kgf-m, 145 ft-lb)

7) Using a new self-locking nut, install the rear stabilizer and rear lateral link.

Tightening torque:
44 N·m (4.5 kgf-m, 32.5 ft-lb)

8) Connect the parking brake cable to parking brake.
9) Clean the brake pipe connection. Using a flare-nut wrench, connect the brake pipe to wheel cylinder.
10) Connect the parking brake cable to lever.

11) Install the brake drum on rear housing assembly.
12) Bleed the air from brake system. <Ref. to BR-61, REPLACEMENT, Brake Fluid.>
13) Adjust the parking brake lever stroke by turning the adjuster.
14) Move the brake lever back to apply brakes. While depressing the brake pedal, tighten the axle nut using a socket wrench. Lock the axle nut after tightening.

Tightening torque:
186 N·m (19 kgf-m, 137 ft-lb)

CAUTION:
Do not overtighten it as this may damage the wheel bearing.

15) Connect the rear ABS wheel speed sensor to back plate.

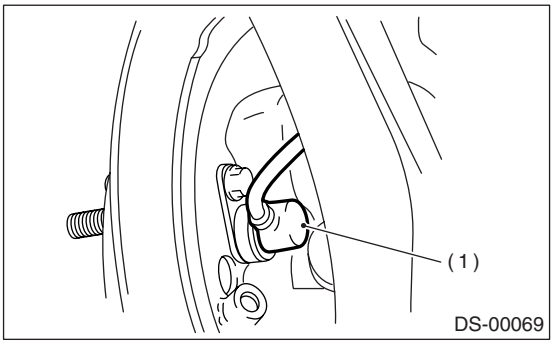

(1) ABS wheel speed sensor

16) Install the wheel and tighten the wheel nuts to specified torque.

Tightening torque:
88 N·m (9.0 kgf-m, 65 ft-lb)

17) Make the tires contact the ground fully.

CAUTION:
Make the tires contact the ground fully and the vehicle be in curb weight whenever carrying out the tightening of bush portions.

18) Tighten the installation bolt of rear housing assembly and lateral link assembly.

Tightening torque:
137 N·m (14 kgf-m, 101 ft-lb)

19) Tighten the installation bolt of rear housing assembly and trailing link assembly.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

C: DISASSEMBLY

1) Using the ST1 and ST2, remove the hub from rear housing.
ST1 927080000 HUB STAND
ST2 927420000 HUB REMOVER

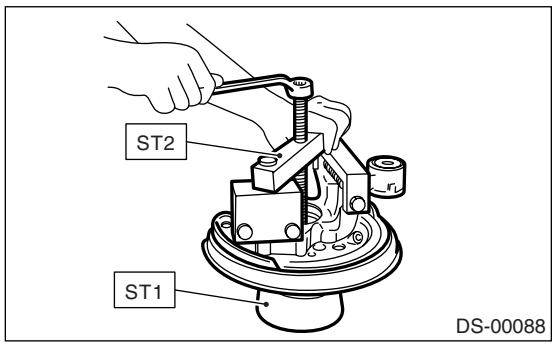

2) Remove the back plate from rear housing.
3) Using a standard screwdriver, remove the outer and inner oil seals.
4) Using a flat tip screwdriver, remove the snap ring.

NOTE:
Be careful not to damage the housing at removal.

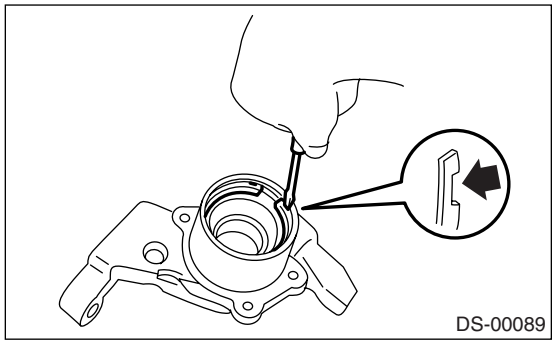

5) Using the ST1 and ST2, remove the bearing by pressing the inner race.
ST1 927430000 HOUSING STAND
ST2 927440000 BEARING REMOVER

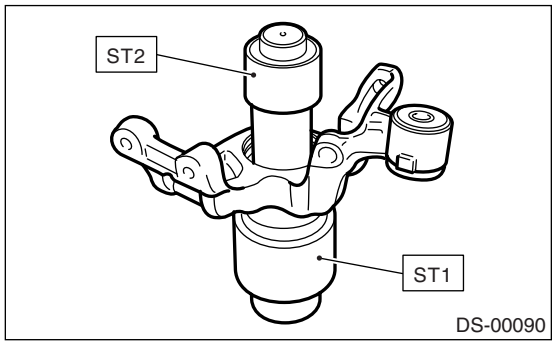

6) Remove the tone wheel bolts, and then remove the tone wheel from hub (Model with ABS).

7) Using the ST, press the hub bolt out.
ST 927080000 HUB STAND

CAUTION:
Be careful not to hammer the hub bolts. This may deform the hub.

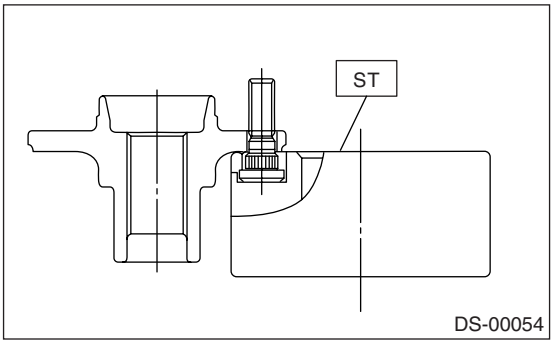

D: ASSEMBLY

NOTE:
When the hub is to be removed from housing, replace the bearing set and oil seal with new ones.

1) Using the ST, press the new hub bolt into place.

NOTE:
- Ensure the hub bolt closely contacts the hub.
- Use a 12 mm (0.47 in) hole in the ST to prevent the hub bolt from tilting during installation.

ST 927080000 HUB STAND

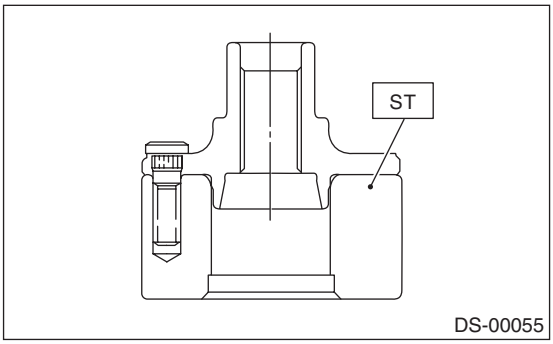

2) Remove foreign particles (dust, rust, etc.) from mating surfaces of the hub tone wheel, and then install the tone wheel to hub (Model with ABS).

NOTE:
- Ensure the tone wheel closely contacts the hub.
- Be careful not to damage the tone wheel teeth.

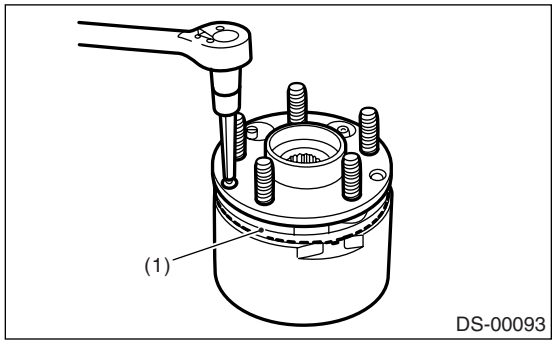

(1) Tone wheel

3) Clean the housing interior completely. Using the ST1 and ST2, press the bearing into housing.
ST1 927430000 HOUSING STAND
ST2 927440000 BEARING REMOVER

NOTE:
- Always press the outer race when installing the bearing.
- Be careful not to remove the plastic lock from inner race when installing the bearing.

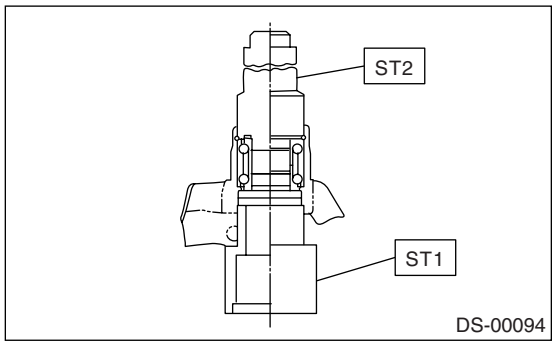

4) Using pliers, install the snap ring firmly.

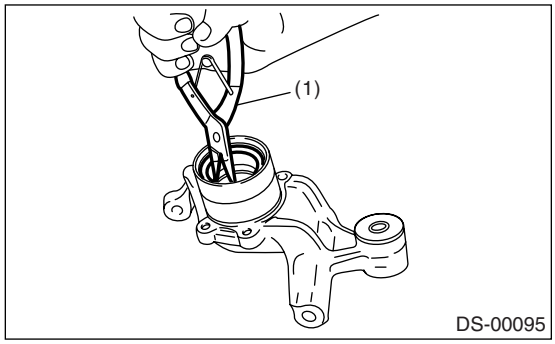

(1) Pliers

5) Using the ST1 and ST2, press the outer oil seal until it comes in contact with snap ring.
ST1 927430000 HOUSING STAND
ST2 927460000 OIL SEAL INSTALLER

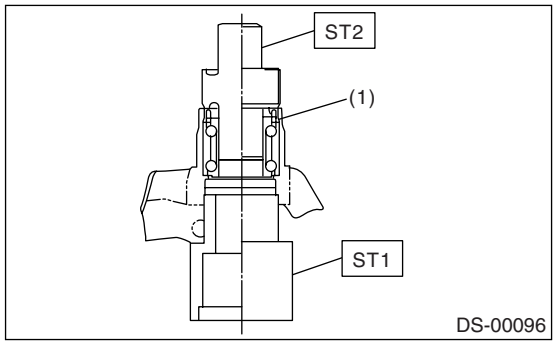

(1) Snap ring

6) Invert both ST1 and housing.
7) Using the ST2, press the inner oil seal into housing until it touches the bottom.
ST1 927430000 HOUSING STAND
ST2 927460000 OIL SEAL INSTALLER

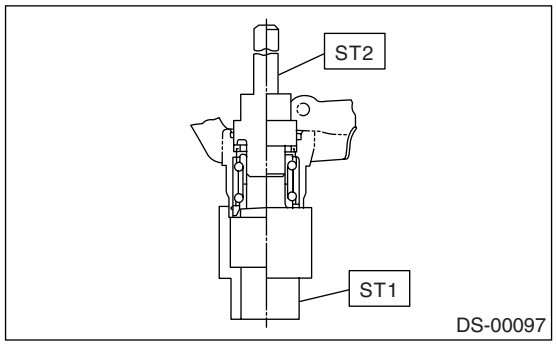

8) Using the ST1 and ST2, press the sub seal into place.
ST1 927430000 HOUSING STAND
ST2 927460000 OIL SEAL INSTALLER

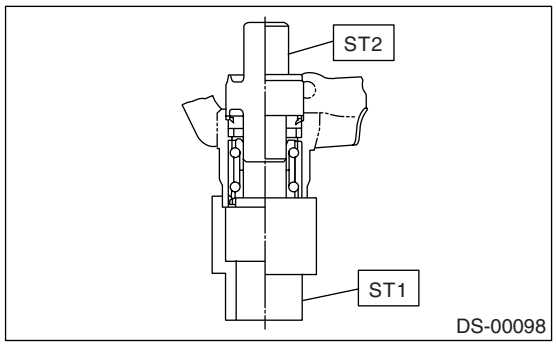

9) Apply sufficient grease to oil seal lip.

Specified grease:
SHELL 6459N

NOTE:
• If specified grease is not available, remove the bearing grease and apply Auto Rex A instead.
• Do not mix different types of grease.

10) Install the back plate to rear housing.

Tightening torque:
52 N·m (5.3 kgf-m, 38.3 ft-lb)

11) Using the ST1 and ST2, press the bearing into hub.
ST1 927080000 HUB STAND
ST2 927450000 HUB INSTALLER

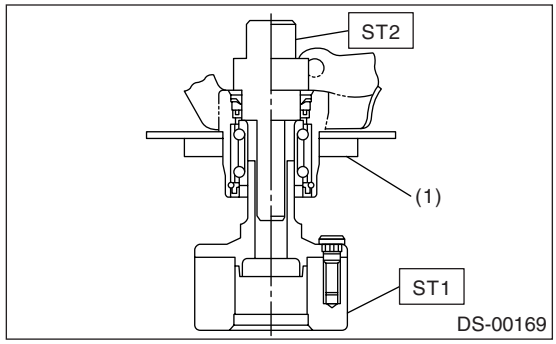

(1) Back plate

E: INSPECTION

1) Moving the front tire up and down by hand, check there is no backlash in bearing, and check the wheel rotates smoothly.

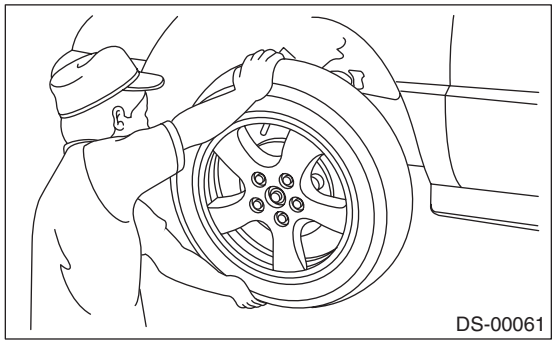

2) Inspect the lean of axis direction using a dial gauge. Replace the hub bearing if the load range exceeds the limitation.

Limit:
Maximum: 0.05mm (0.0020 in)

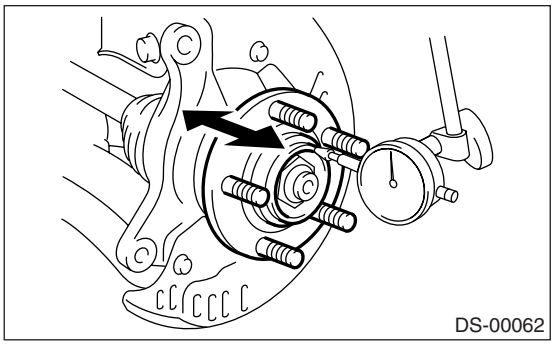

5. Front Drive Shaft

A: REMOVAL

1) Jack-up the vehicle, support it with rigid racks, and then remove the front wheel cap and wheels.
2) Raise the caulking portion of axle nut.
3) Depress the brake pedal and remove the axle nut using a socket wrench.

CAUTION:
Be sure to loosen the axle nut after removing the wheel from vehicle. Failure to follow this rule may damage the wheel bearings.

4) Remove the stabilizer link from transverse link.
5) Disconnect the transverse link from housing.
6) Remove the spring pin which secures the transmission spindle to SFJ.

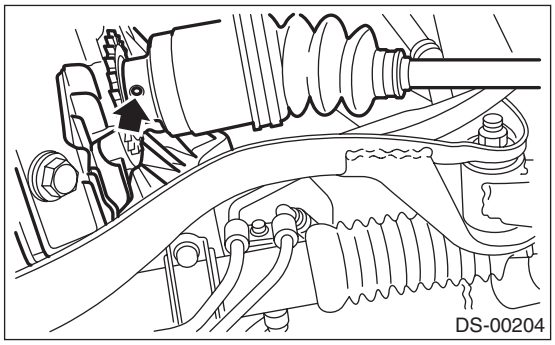

7) Remove the front drive shaft assembly. If it is hard to remove, use the ST1 and ST2.

ST1	926470000	AXLE SHAFT PULLER
ST2	927140000	AXLE SHAFT PULLER PLATE

CAUTION:
• Be careful not to damage the oil seal lip and tone wheel when removing the front drive shaft.
• When the front drive shaft is to be replaced, also replace the inner oil seal.

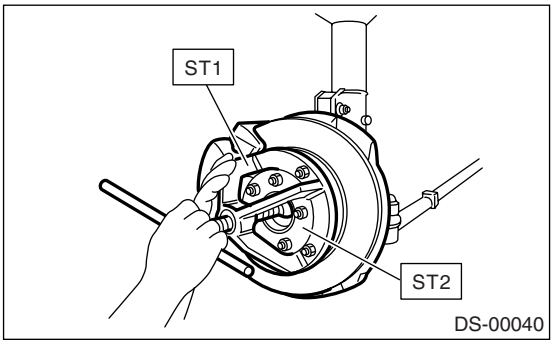

B: INSTALLATION

1) Insert the BJ into hub splines.

CAUTION:
Be careful not to damage the inner oil seal lip and tone wheel.

2) Using the ST1 and ST2, pull the drive shaft into place.

ST1	922431000	AXLE SHAFT INSTALLER
ST2	927390000	ADAPTER

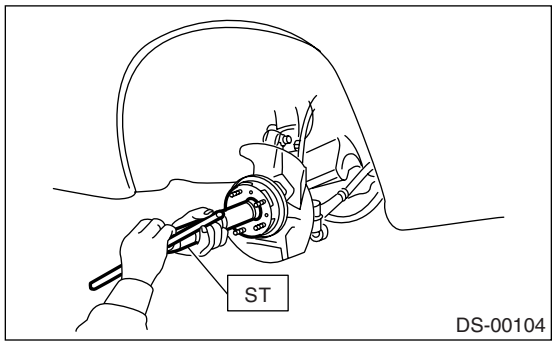

3) Tighten the axle nut temporarily.
4) Install the SFJ on transmission spindle and drive a new spring pin into place.

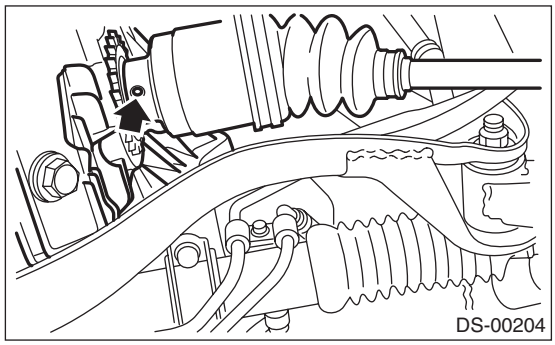

5) Connect the transverse link to housing.

Tightening torque:
49 N·m (5.0 kgf-m, 36 ft-lb)

6) Install the stabilizer bracket.
7) While depressing the brake pedal, tighten the axle nut to specified torque.

Tightening torque:
186 N·m (19 kgf-m, 137 ft-lb)

CAUTION:
• Always tighten the axle nut before installing wheel on vehicle. If the tire is installed and comes in contact with ground when axle nut is loose, wheel bearings may be damaged.
• Be sure to tighten the axle nut to specified torque. Do not overtighten it as this may damage the wheel bearing.

8) After tightening the axle nut, caulk and lock it.

C: DISASSEMBLY

1) Place alignment marks on shaft and outer race.

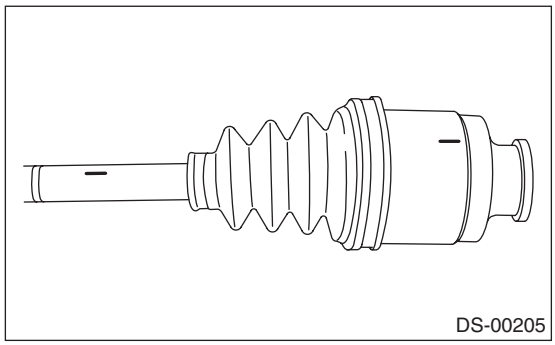

2) Remove the SFJ boot band and boot.

CAUTION:
Be careful not to damage the boot.

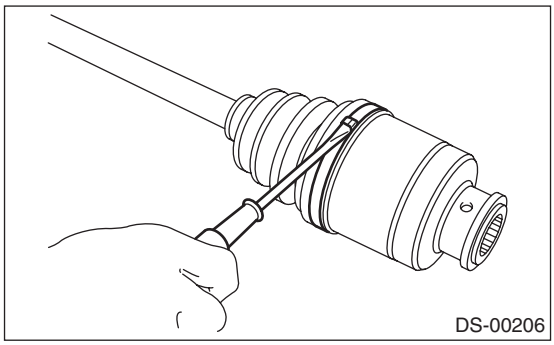

3) Remove the circlip from SFJ outer race using a screwdriver.

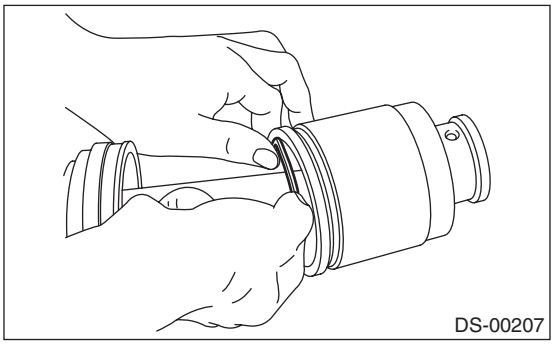

4) Remove the SFJ outer race from shaft assembly.
5) Wipe off the grease.

CAUTION:
The grease is a special grease. Do not confuse with other greases.

6) Place alignment marks on free ring and trunnion.

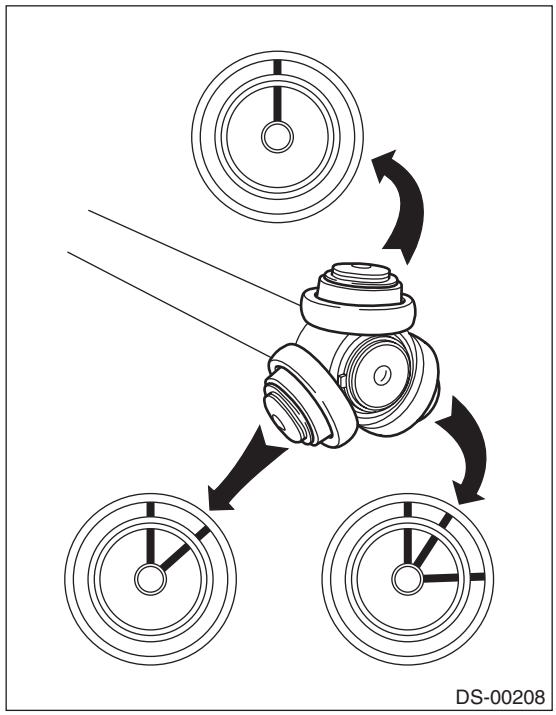

7) Remove the free ring from trunnion.

CAUTION:
Be careful with the free ring position.

8) Place an alignment mark on trunnion and shaft.

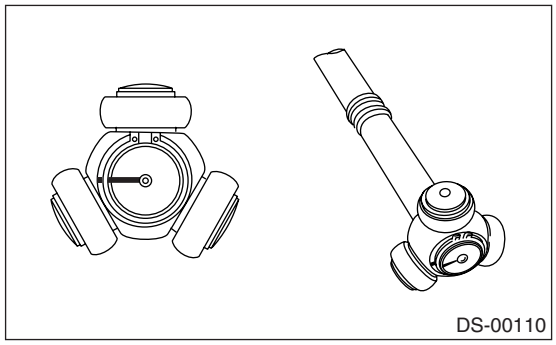

9) Remove the snap ring and trunnion.

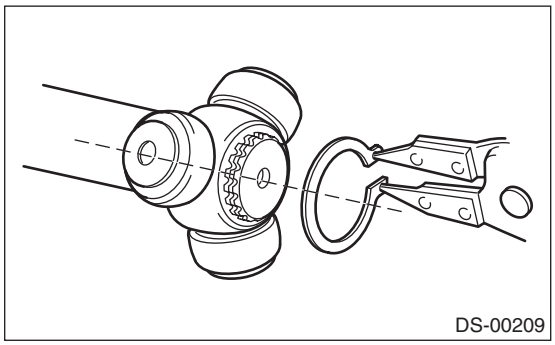

CAUTION:
Be sure to wrap the shaft splines with vinyl tape to prevent the boot from scratches.

10) Remove the SFJ boot.

11) Place the drive shaft in a vise between wooden blocks.

CAUTION:
Do not place the drive shaft directly in a vise; use wooden block.

12) Raise the boot band claws by means of screwdriver and hammer.

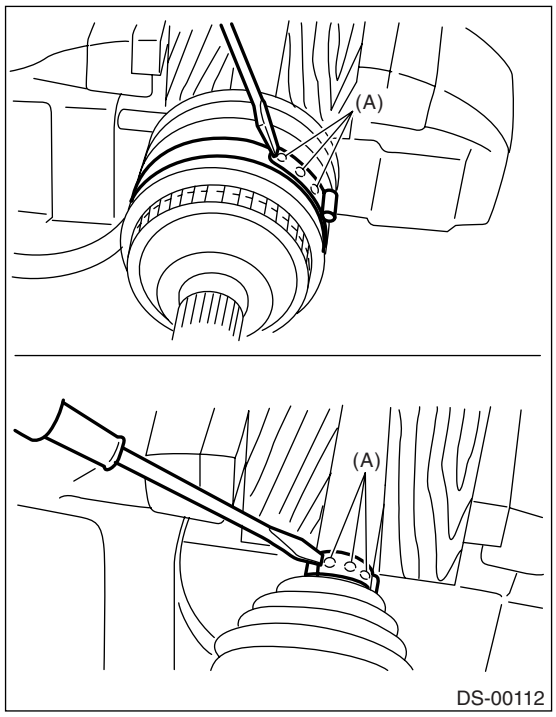

(A) Boot band claws

13) Cut and remove the boot.

CAUTION:
The boot must be replaced with a new one whenever it is removed.

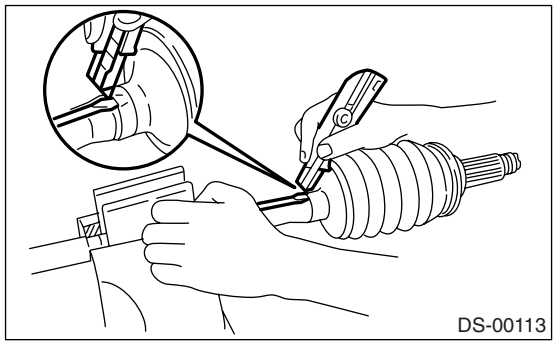

NOTE:
Further disassembly of axle is impossible because the BJ cannot be disassembled.

D: ASSEMBLY

NOTE:
Use specified grease.

BJ side:
NTG2218 (Part No. 28093AA000)

SFJ side:
SSG6003 (Part No. 28093TA000)

1) Place the BJ boot and small boot band on BJ side of shaft.

CAUTION:
Be sure to wrap the shaft splines with vinyl tape to prevent the boot from scratches.

2) Place the drive shaft in a vise.

CAUTION:
Do not place the drive shaft directly in a vise; use wooden blocks.

3) Apply a coat of specified grease [60 to 70 g (2.12 to 2.47 oz)] to BJ.

4) Apply an even coat of specified grease [20 to 30 g (0.71 to 1.06 oz)] to entire inner surface of boot. Also apply grease to shaft.

NOTE:
BJ installation surface of BJ boot shall be cleaned so as to be free from grease and other substances.

5) Install the boot projecting portion to BJ groove.

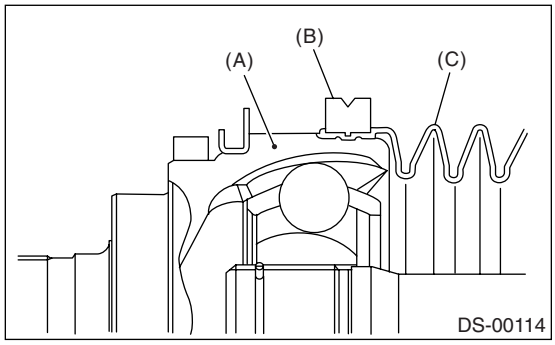

(A) BJ
(B) Large boot band
(C) Boot

6) Set the large boot band in place.

7) Install the boot projecting portion to shaft groove.

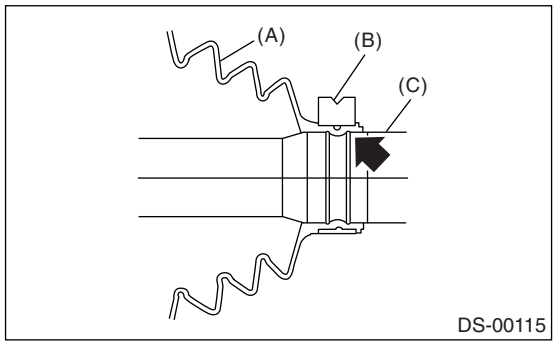

(A) Boot
(B) Small boot band
(C) Shaft

8) Tighten the boot bands using the ST, torque wrench and socket flex handle.
ST 28099AC000 BOOT BAND PLIER

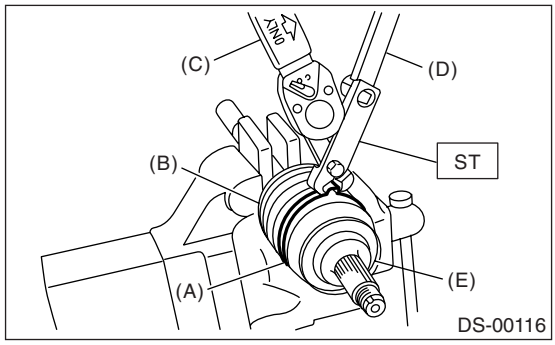

(A) Large boot band
(B) Boot
(C) Torque wrench
(D) Socket flex handle
(E) BJ

Tightening torque:
Large boot band
157 N·m (16.0 kgf-m, 116 ft-lb) or more
Small boot band
133 N·m (13.6 kgf-m, 98 ft-lb) or more

9) Place the SFJ boot at the center of shaft.
10) Align the alignment marks, and then install the trunnion on shaft.

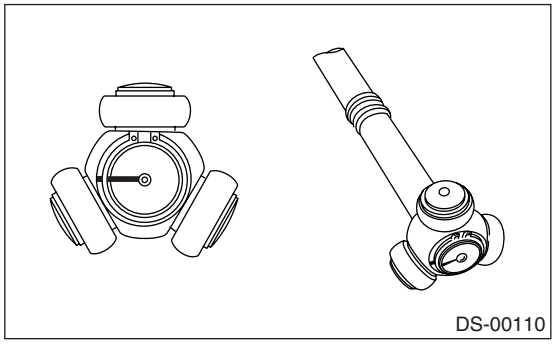

11) Install the snap ring to shaft.

CAUTION:
Confirm that the snap ring is completely fitted in shaft groove.

12) Fill 100 to 110 g (3.53 to 3.88 oz) of specified grease into the interior of SFJ outer race.
13) Apply a coat of specified grease to free ring and trunnion.
14) Align the alignment marks on free ring and trunnion, and then install the free ring.

CAUTION:
Be careful with the free ring position.

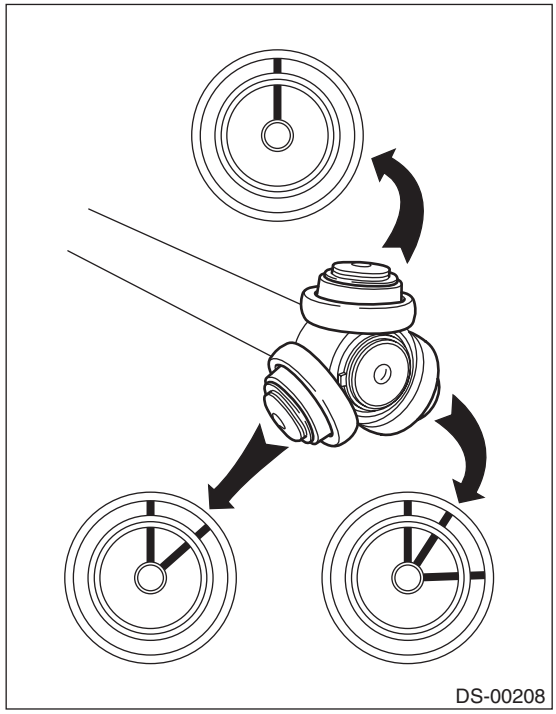

15) Align the alignment marks on shaft and outer race, and then install the outer race.

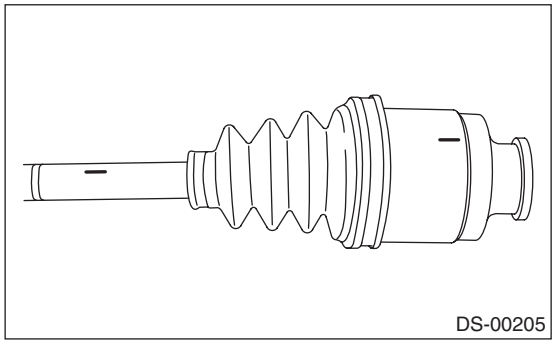

16) Install the circlip in the groove on SFJ outer race.

CAUTION:
Pull the shaft lightly and assure the circlip is completely fitted in groove.

17) Apply an even coat of the specified grease 30 to 40 g (1.06 to 1.41 oz) to the entire inner surface of boot.
18) Install the SFJ boot taking care not to twist it.

CAUTION:
• SFJ installation surface of SFJ boot shall be cleaned so as to be free from grease and other substances.
• When installing the SFJ boot, position the outer race of SFJ at center of its travel.

19) Put a new band through the clip and wind twice in alignment with band groove of boot.
20) Tighten the band by using the ST.
ST 925091000 BAND TIGHTENING TOOL

NOTE:
Tighten the band until it cannot be moved by hand.

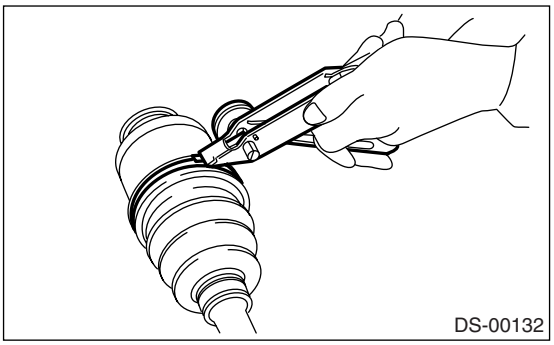
DS-00132

21) Tap on the clip with punch provided at the end of ST.
ST 925091000 BAND TIGHTENING TOOL

CAUTION:
Tap to an extent that the boot underneath is not damaged.

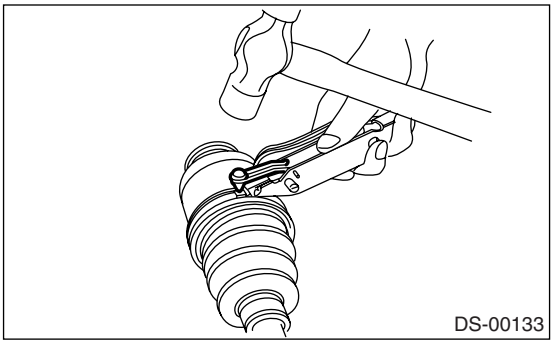
DS-00133

22) Cut off the band with an allowance of about 10 mm (0.39 in) left from clip, and bend this allowance over clip.

CAUTION:
Be careful so that the end of band is in close contact with clip.

23) Extend and retract the SFJ to provide equal grease coating.

E: INSPECTION

Check the removed parts for damage, wear, corrosion etc. If faulty, repair or replace.
1) DOJ (Double Offset Joint)
Check seizure, corrosion, damage, wear and excessive play.
2) SFJ (Shudder-less Freering tripod Joint)
Check seizure, corrosion, damage and excessive play.
3) Shaft
Check excessive bending, twisting, damage and wear.
4) BJ (Bell Joint)
Check seizure, corrosion, damage and excessive play.
5) Boot
Check for wear, warping, breakage or scratches.
6) Grease
Check for discoloration or fluidity.

6. Rear Drive Shaft

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle, and remove the rear wheel.
3) Unlock the axle nut.

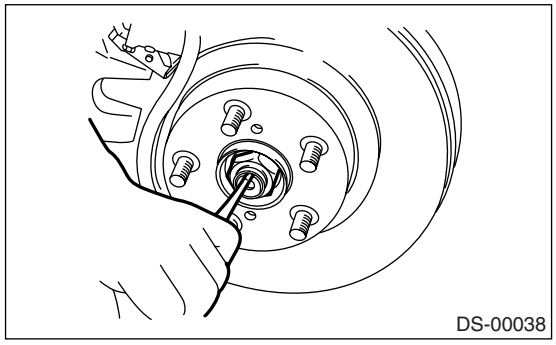

4) Remove the axle nut using a socket wrench with parking brake applied.

CAUTION:
Remove the axle nut with vehicle weight not applied on axle.

5) Disconnect the stabilizer link.

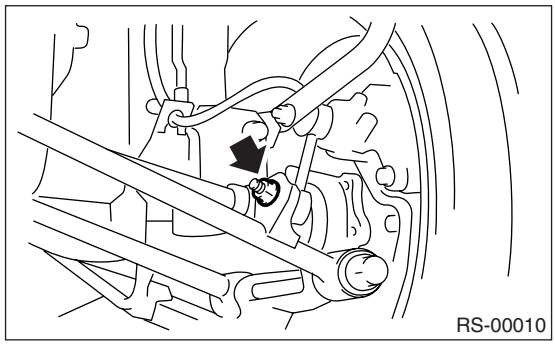

6) Remove the bolt which secures the trailing link to housing.

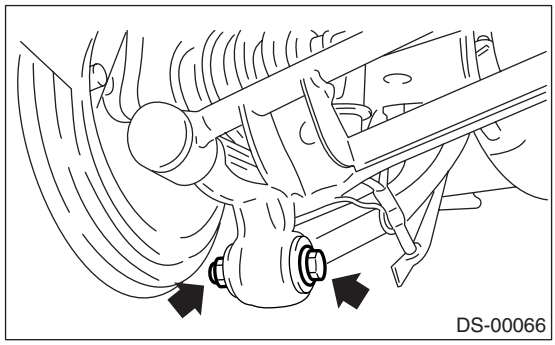

7) Remove the bolts which secure the front lateral link and rear lateral link to housing.

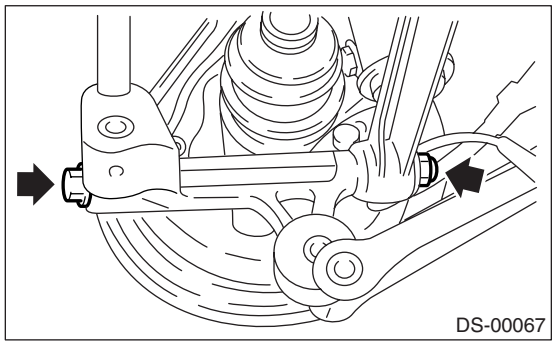

8) Remove the rear ABS wheel speed sensor from back plate.

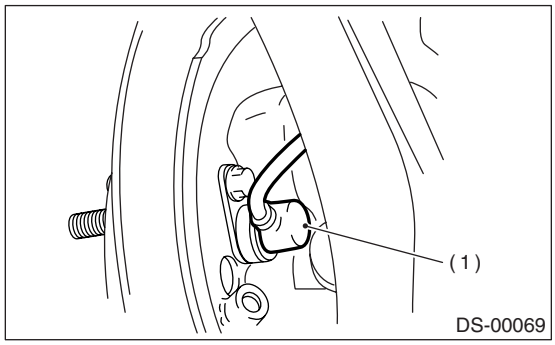

(1) ABS wheel speed sensor

9) Remove the rear drive shaft from rear axle. If it is hard to remove, remove the brake disk rotor using the ST1 and ST2.

ST1	926470000	AXLE SHAFT PULLER
ST2	927140000	AXLE SHAFT PULLER PLATE

CAUTION:
- **Do not hammer the drive shaft when removing.**
- **Do not damage the oil seal and tone wheel.**

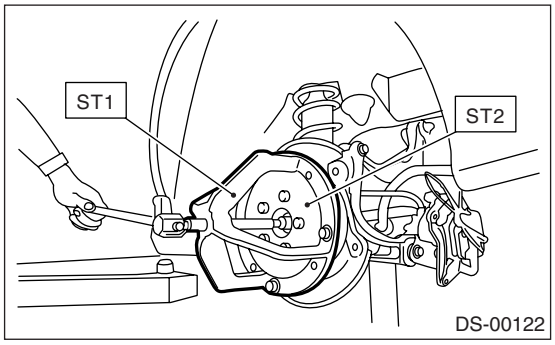

10) Remove the rear drive shaft from rear differential using the ST.
ST 208099PA100DRIVE SHAFT REMOVER

NOTE:
Fit the ST to the bolt (A) as shown in the figure to avoid damage on the side bearing retainer.

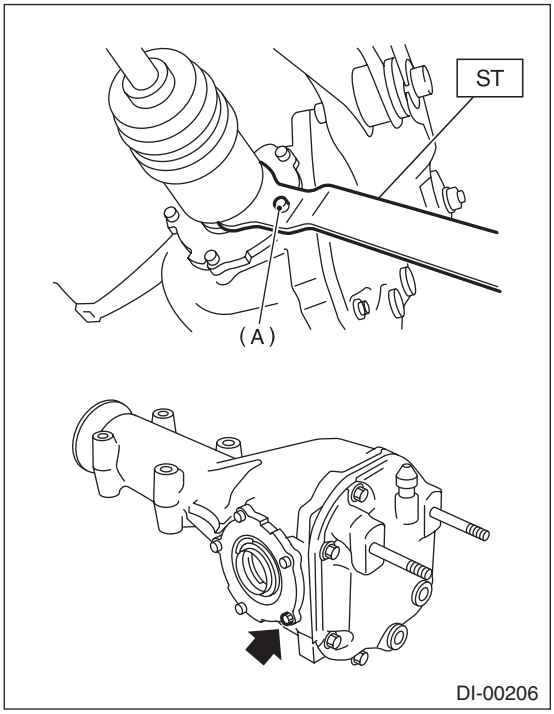

(A) Bolt

B: INSTALLATION

1) Insert the rear drive shaft into rear axle.
2) Temporarily tighten the axle nut.
3) Install the rear drive shaft to rear differential using the ST.
ST 28099PA090 OIL SEAL PROTECTOR

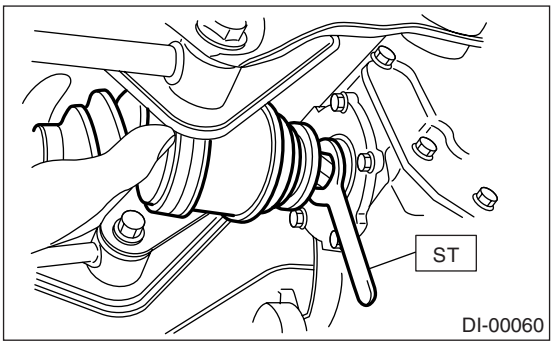

4) Temporarily tighten the front lateral link and rear lateral link to housing using a new self-locking nuts.

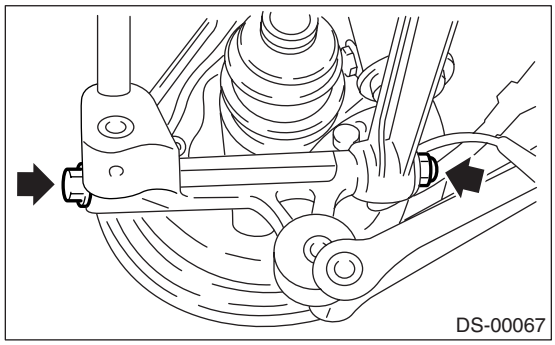

5) Temporarily tighten the trailing link to housing using a new self-locking nut.

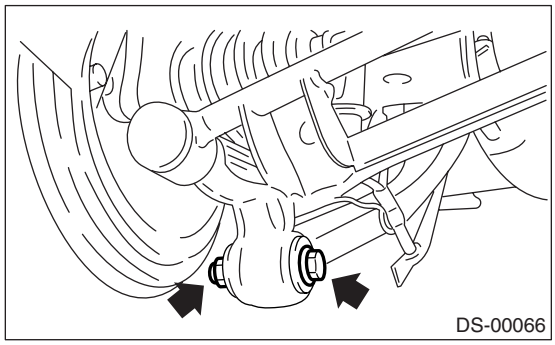

6) Install the stabilizer link.

Tightening torque:
45 N·m (4.6 kgf-m, 33 ft-lb)

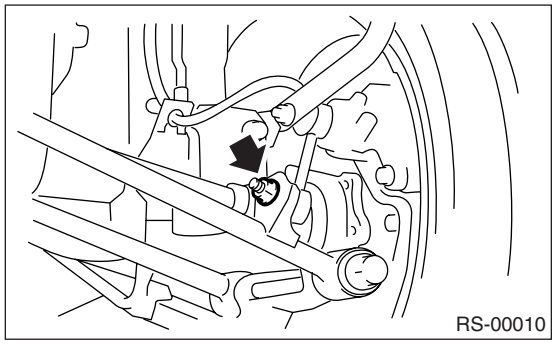

7) Install the ABS wheel speed sensor.

Tightening torque:
32 N·m (3.3 kgf-m, 24 ft-lb)

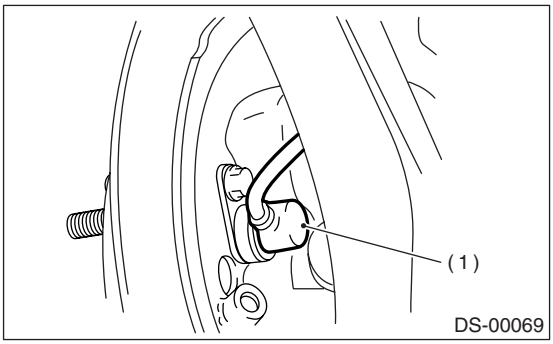

(1) ABS wheel speed sensor

8) Using the ST1 and ST2, pull the rear drive shaft into place.
ST1 922431000 AXLE SHAFT INSTALLER
ST2 927390000 ADAPTER

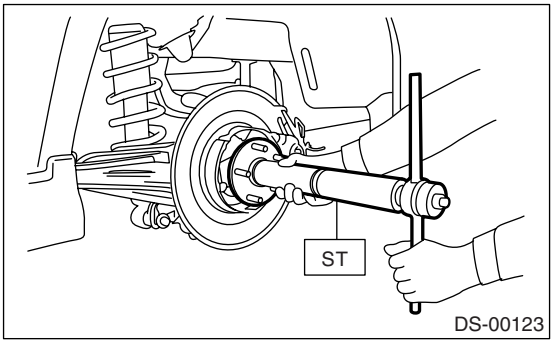

9) Tighten a new axle nut to the specified torque with parking brake applied.

Tightening torque:
186 N·m (19 kgf-m, 137 ft-lb)

10) Lock the axle nut.

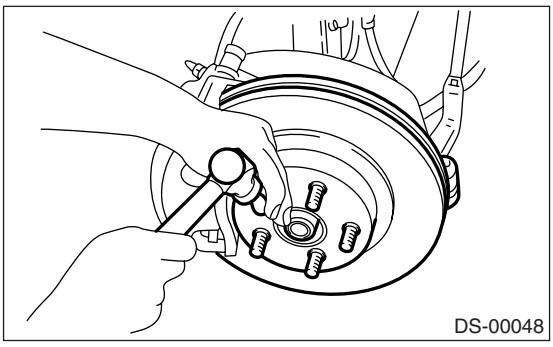

11) Install the wheel.

Tightening torque:
88 N·m (9.0 kgf-m, 65 ft-lb)

12) Make the tires contact the ground fully.

CAUTION:
Make the tires contact the ground fully and the vehicle be in curb weight whenever carrying out the tightening of bush portions.

13) Tighten the installation bolt of rear housing assembly and lateral link assembly.

Tightening torque:
137 N·m (14 kgf-m, 101 ft-lb)

14) Tighten the installation bolt of rear housing assembly and trailing link assembly.

Tightening torque:
90 N·m (9.2 kgf-m, 66 ft-lb)

C: DISASSEMBLY

1) Straighten the bent claw of larger end of DOJ boot.
2) Loosen the band by means of screwdriver or pliers with care of not damaging boot.

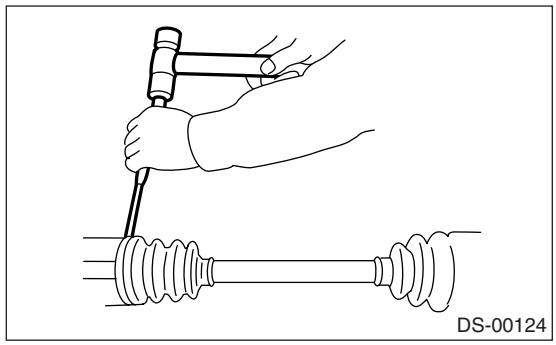

3) Remove the boot band on the small end of DOJ boot in the same manner.
4) Remove the larger end of DOJ boot from DOJ outer race.
5) Pry and remove the round circlip located at neck of DOJ outer race with a screwdriver.

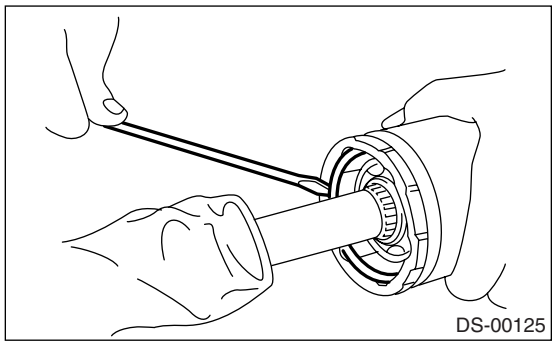

6) Take out the DOJ outer race from shaft assembly.
7) Wipe off the grease, and then take out the balls.

NOTE:
• The grease is a special grease (grease for constant velocity joint). Do not confuse with other greases.

• Disassemble with exercising care not to lose balls (6 pcs).

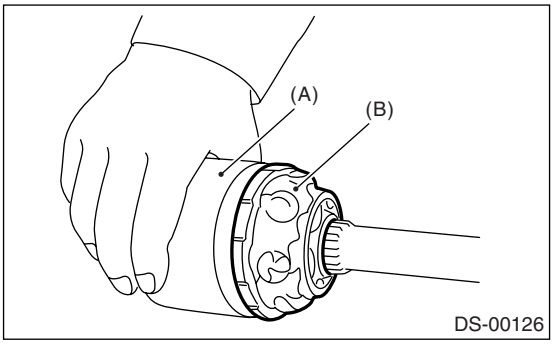

(A) Outer race
(B) Grease

8) To remove the cage from inner race, turn the cage by a half pitch to the track groove of inner race, and shift the cage.
9) Remove the snap ring, which fixes the inner race to shaft, by using pliers.
10) Take out the DOJ inner race.
11) Take off the DOJ cage from shaft and remove the DOJ boot.
12) Wrap the shaft splines with vinyl tape.
13) Remove the BJ boot in the same procedure as DOJ boot.

NOTE:
Further disassembly of axle is impossible because the BJ cannot be disassembled.

D: ASSEMBLY

NOTE:
Use specified grease.

BJ side:
Except STi model:
Molylex No. 2 (Part No. 723223010)
STi model:
NTG2218-M (Part No. 28395FE010)

DOJ side:
VU-3A702 (Yellow) (Part No. 23223GA050)

1) Install the BJ boot in specified position, and fill it with 60 to 70 g (2.12 to 2.47 oz) of specified grease.
2) Place the DOJ boot at the center of shaft.
3) Wrap the shaft splines with vinyl tape.
4) Insert the DOJ cage onto shaft.

NOTE:
Insert the cage with cut-out portion facing the shaft end, since the cage has an orientation.

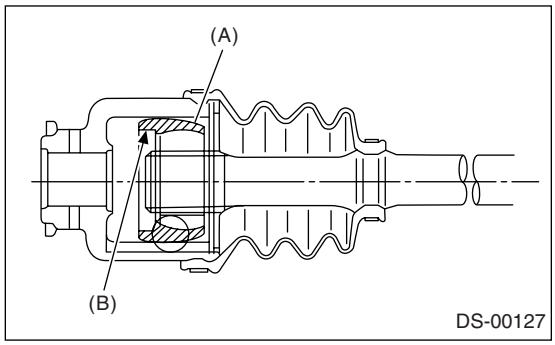

(A) Cage
(B) Cut-out portion

5) Install the DOJ inner race on shaft, and fit the snap ring with pliers.

NOTE:
Confirm the snap ring is completely fitted in shaft groove.

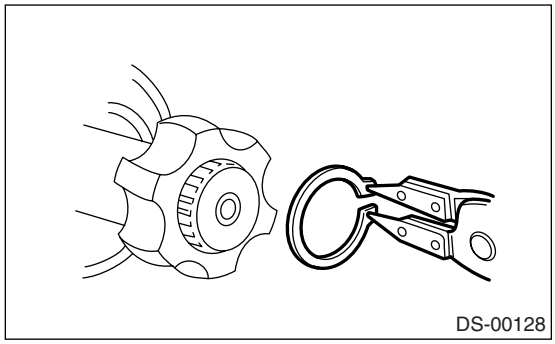

6) Install the cage, which was previously fitted, to inner race fixed upon shaft.

NOTE:
Fit the cage with protruded part aligned with the track on inner race, and then turn by a half pitch.

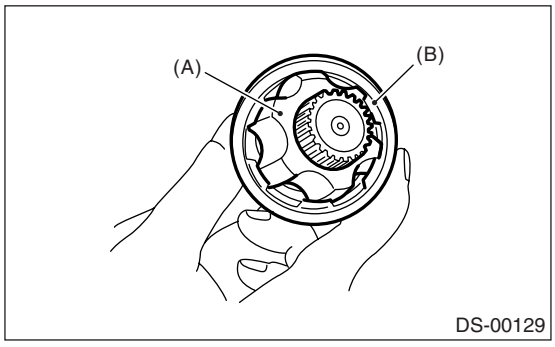

(A) Inner race
(B) Cage

7) Fill 80 to 90 g (2.82 to 3.17 oz) of specified grease into the interior of DOJ outer race.
8) Apply a coat of specified grease to cage pocket and six balls.
9) Insert six balls into cage pocket.
10) Align the outer race track and ball positions and place in the part where shaft, inner race, cage and balls are previously installed, and then fit the outer race.

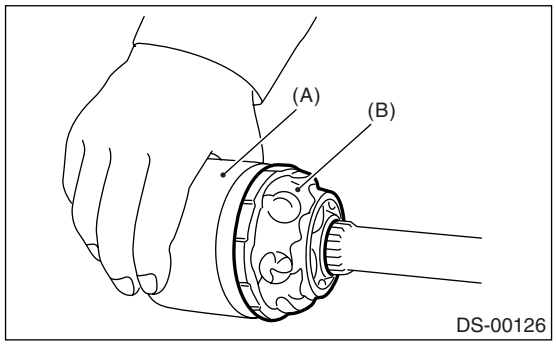

(A) Outer race
(B) Grease

11) Install the circlip in the groove on DOJ outer race.

NOTE:
• Assure the balls, cage and inner race are completely fitted in the outer race of DOJ.
• Exercise care not to place the matched position of circlip in ball groove of outer race.
• Pull the shaft lightly and assure that the circlip is completely fitted in groove.

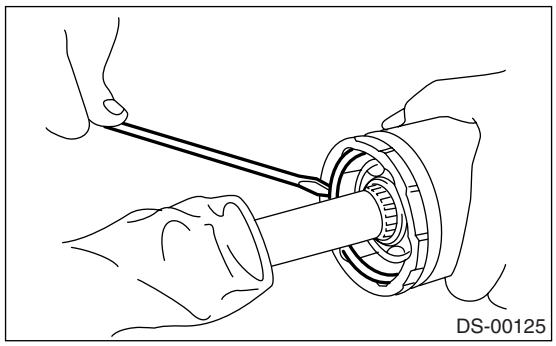

12) Apply an even coat of the specified grease [20 to 30 g (0.71 to 1.06 oz)] to the entire inner surface of boot. Also apply grease to shaft.
13) Install the DOJ boot taking care not to twist it.

NOTE:
• Inside of the larger end of DOJ boot and boot groove shall be cleaned so as to be free from grease and other substances.
• When installing the DOJ boot, position the outer race of DOJ at center of its travel.

14) Put a new band through the clip and wind twice in alignment with band groove of boot.

NOTE:
When tightening the boot, exercise care so that air within boot is appropriate.

15) Tighten the band using the ST.
ST 925091000 BAND TIGHTENING TOOL

NOTE:
Tighten the band until it cannot be moved by hand.

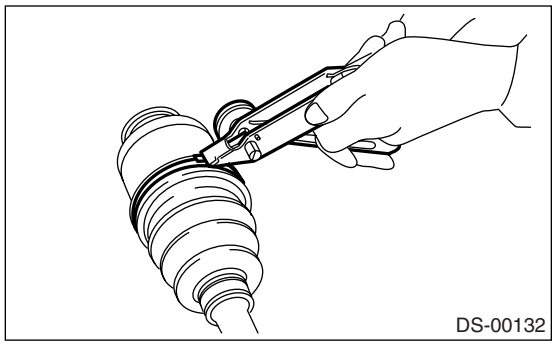

16) Tap on the clip with the punch provided at the end of ST.
ST 925091000 BAND TIGHTENING TOOL

NOTE:
Tap to an extent that the boot underneath is not damaged.

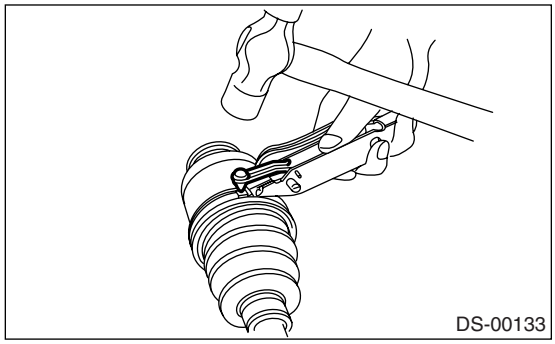

17) Cut off the band with an allowance of about 10 mm (0.39 in) left from clip, and bend this allowance over the clip.

NOTE:
Be careful so that the end of band is in close contact with clip.

18) Fix up the boot on BJ in the same manner.
19) Extend and retract the DOJ to provide equal grease coating.

E: INSPECTION

Check the removed parts for damage, wear, corrosion, etc. If faulty, repair or replace.
1) DOJ (Double Offset Joint)
Check seizure, corrosion, damage, wear and excessive play.
2) Shaft
Check excessive bending, twisting, damage and wear.
3) BJ (Bell Joint)
Check seizure, corrosion, damage and excessive play.
4) Boot
Check for wear, warping, breakage or scratches.
5) Grease
Check for discoloration or fluidity.

7. General Diagnostic Table

A: INSPECTION

NOTE:
Vibration while cruising may be caused by an unbalanced tire, improper tire inflation pressure, improper wheel alignment, etc.

Symptom	Possible cause	Remedy
1. Vibration of propeller shaft NOTE: Vibration is caused by propeller shaft during operation and is transferred to vehicle body. Generally vibration increase in proportion to vehicle speed.	(1) Worn or damaged universal joint.	Replace.
	(2) Unbalanced propeller shaft due to bend or dent.	Replace.
	(3) Loose installation of propeller shaft.	Retighten.
	(4) Worn or damaged center bearing and damaged center mounting rubber.	Replace.
2. Tapping when starting and noise while cruising, caused by propeller shaft	(1) Worn or damaged universal joint.	Replace.
	(2) Worn spline of sleeve yoke.	Replace.
	(3) Loose installation of propeller shaft.	Retighten.
	(4) Loose installation of joint.	Replace.
	(5) Worn or damaged center bearing and damaged center mounting rubber.	Replace.

ABS

Page

1. General Description 2
2. ABS Control Module and Hydraulic Control Unit (ABSCM&H/U) 7
3. ABS Sequence Control 10
4. Front ABS Wheel Speed Sensor 13
5. Rear ABS Wheel Speed Sensor 16
6. Front Tone Wheel 19
7. Rear Tone Wheel 20
8. G Sensor 21
9. Lateral G Sensor 23

1. General Description

A: SPECIFICATIONS

Item				Specification or remarks
ABS wheel speed sensor	ABS wheel speed sensor gap		Front	0.3 — 0.8 mm (0.012 — 0.031 in)
			Rear	0.7 — 1.2 mm (0.028 — 0.047 in)
	ABS wheel speed sensor resistance		Front	1.25±0.25 kΩ
			Rear	1.15±0.115 kΩ
	Marks of harness	Front	RH	White
			LH	Yellow
		Rear	RH	Light blue
			LH	Brown
G sensor	G sensor voltage			2.3±0.2 V
Lateral G sensor (STi model)	Lateral G sensor voltage			2.5±0.2 V
ABSCM&H/U marks	FWD	AT model		CK
		MT model		CL
	AWD	AT model		CU
		MT model (Except Sedan STi model)		CV
		MT model (Sedan STi model)		CX

B: COMPONENT

1. SENSOR

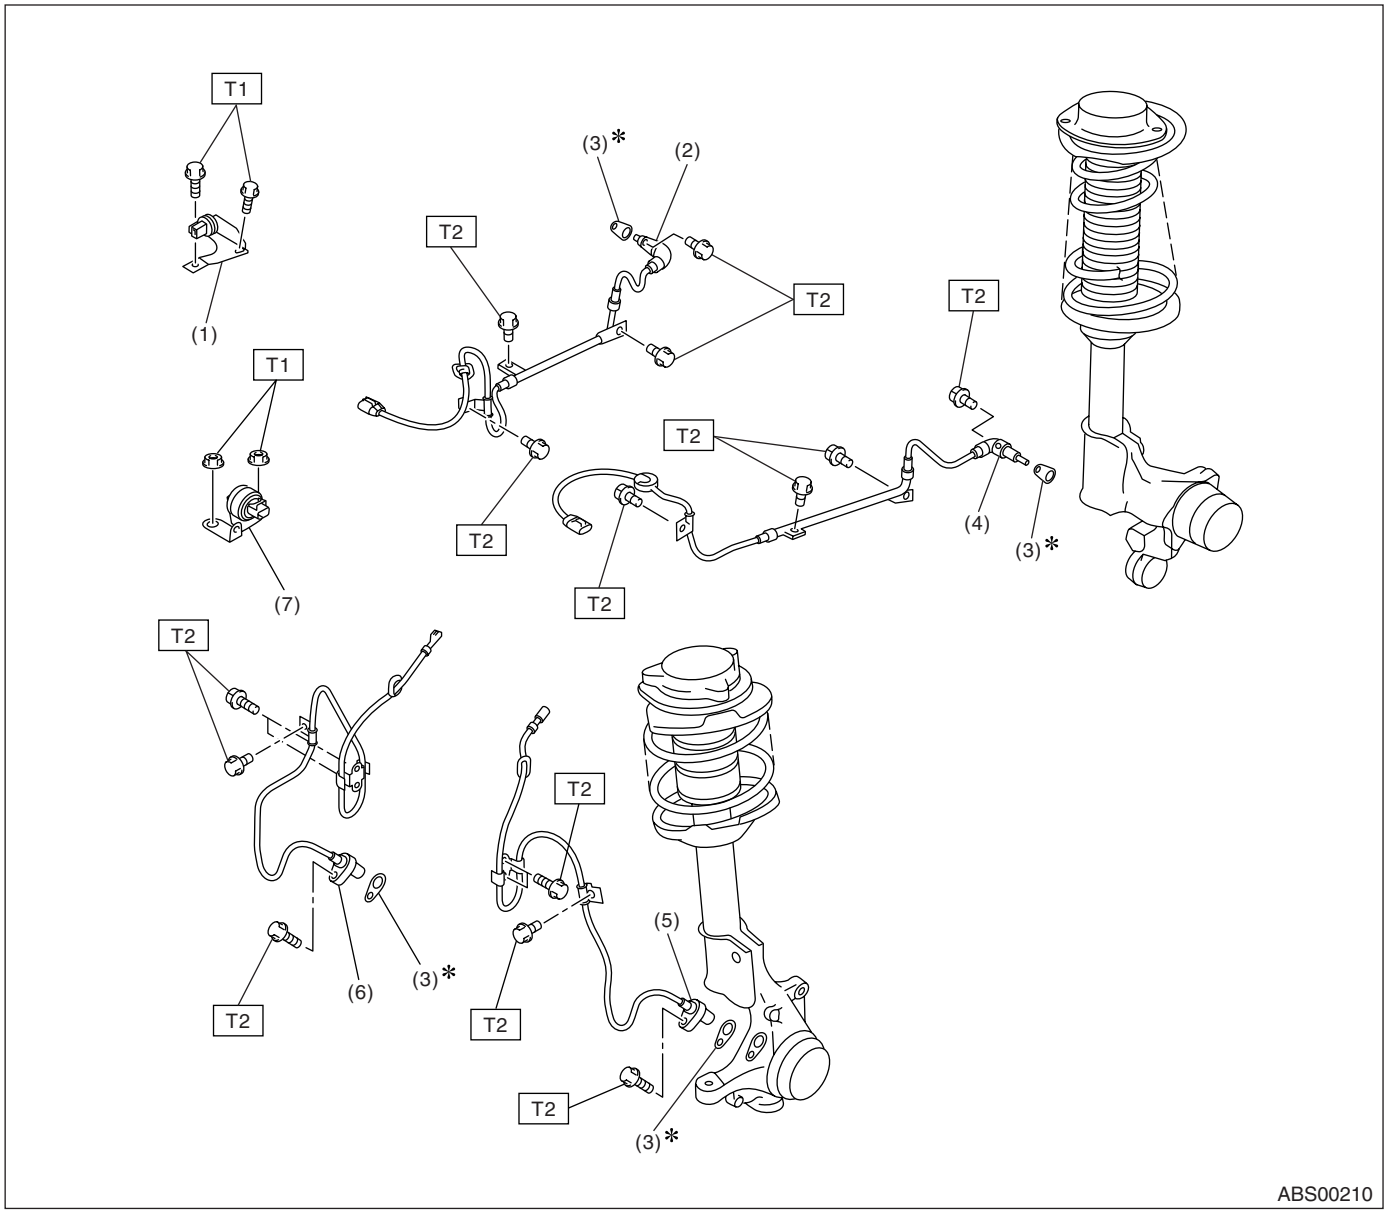

(1) G sensor
(2) Rear ABS wheel speed sensor RH
(3) Adjusting spacer
(4) Rear ABS wheel speed sensor LH
(5) Front ABS wheel speed sensor LH
(6) Front ABS wheel speed sensor RH
(7) Lateral G sensor (STi model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 18 (1.8, 13.0)
T2: 33 (3.3, 24)

2. ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U)

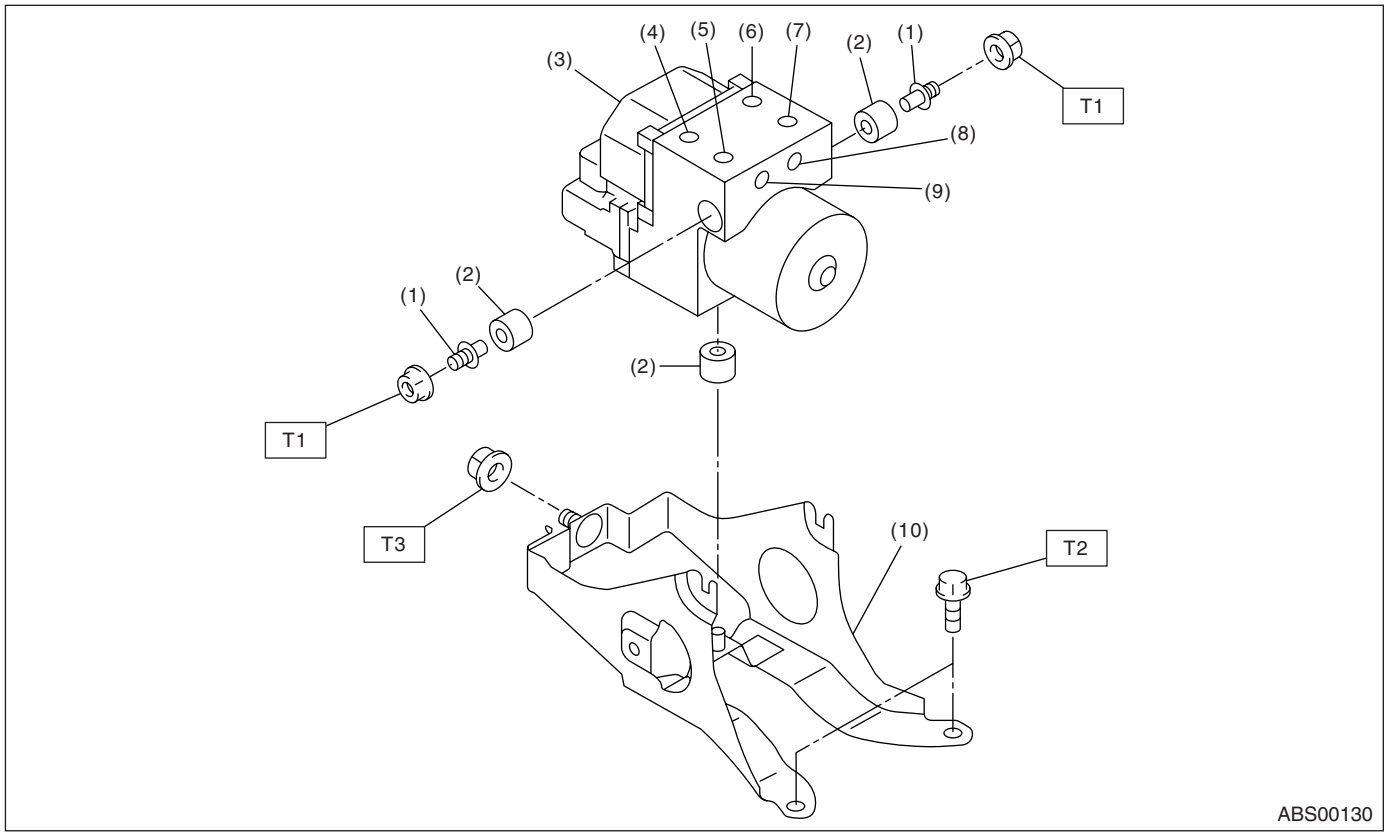

(1) Stud bolt
(2) Damper
(3) ABS control module and hydraulic control unit (ABSCM&H/U)
(4) Front-LH outlet
(5) Secondary inlet
(6) Front-RH outlet
(7) Primary inlet
(8) Rear-LH outlet
(9) Rear-RH outlet
(10) Bracket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 18 (1.8, 13.0)
T2: 33 (3.3, 24)
T3: 38 (3.8, 27.5)

C: CAUTION

- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
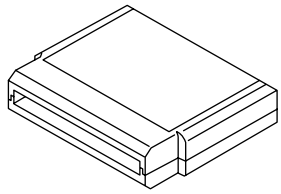 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and ampere.
Pressure gauge	Used for measuring oil pressure.
Oscilloscope	Used for measuring sensor.

2. ABS Control Module and Hydraulic Control Unit (ABSCM&H/U)

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the air intake duct from engine compartment to facilitate removal of ABSCM&H/U.
3) Use an air gun to get rid of water around the ABSCM&H/U.

NOTE:
Contact will be insufficient if the terminal gets wet.

4) Remove the ground cable from ABSCM&H/U.
5) Pull off the lock of ABSCM&H/U connector to remove it.

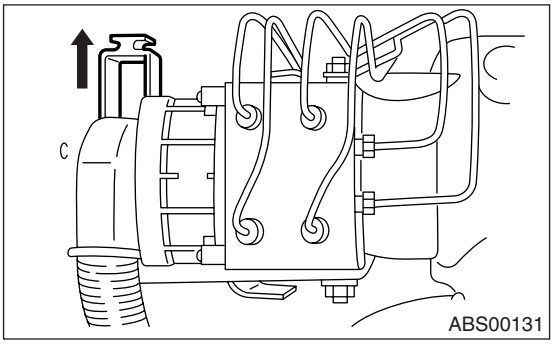

6) Disconnect the connector from ABSCM&H/U.

CAUTION:
Do not pull the harness when disconnecting the connector.

7) Unlock the cable clip.
8) Disconnect the brake pipes from ABSCM&H/U.
9) Wrap the brake pipes with vinyl bag to avoid spilling brake fluid on vehicle body.

CAUTION:
Brake fluid spilt on the vehicle body will harm the painted surface; wash away quickly with water if spilt.

10) Remove the ABSCM&H/U from engine compartment.

CAUTION:
• ABSCM&H/U cannot be disassembled. Do not attempt to loosen bolts and nuts.
• Do not drop or bump the ABSCM&H/U.
• Do not turn the ABSCM&H/U upside down or place it on its side.
• Be careful to prevent foreign particles from getting into ABSCM&H/U.
• Do not let water get into the connector.

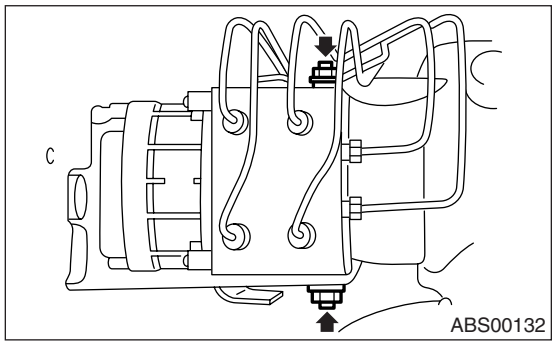

B: INSTALLATION

1) Install the ABSCM&H/U bracket.

Tightening torque:
33 N·m (3.3 kgf-m, 24 ft-lb)

2) Apply a coat of grease (Nippeco LT or GB) to the bracket attaching bolt.
3) Align the width across flat portion of ABSCM&H/U side stud bolt with the bolt hole groove on bracket, and then install the ABSCM&H/U.

NOTE:
Confirm the specification mark of ABSCM&H/U.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

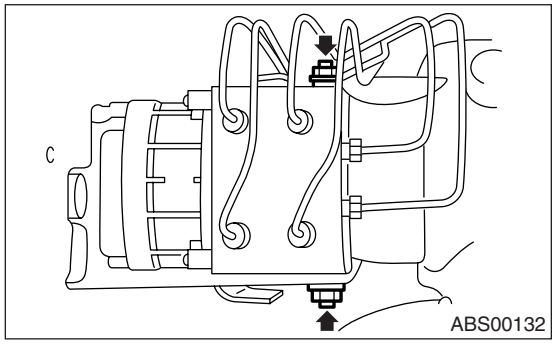

4) Connect the brake pipes to their correct ABSCM&H/U connections.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

5) Using the cable clip, secure the ABSCM&H/U harness to bracket.
6) Connect the connector to ABSCM&H/U.

NOTE:
• Be sure to remove all foreign matter from inside of the connector before connecting.
• Ensure the ABSCM&H/U connector is securely locked.

7) Connect the ground cable to ABSCM&H/U, and then apply grease.
8) Install the air intake duct.
9) Bleed air from the brake system.

C: INSPECTION

1) Check the connected and fixed condition of connector.
2) Check specifications of the mark with ABSCM&H/U.

Mark	Model
CK	FWD AT model
CL	FWD MT model
CU	AWD AT model
CV	AWD MT model (Except Sedan STi model)
CX	Sedan STi model

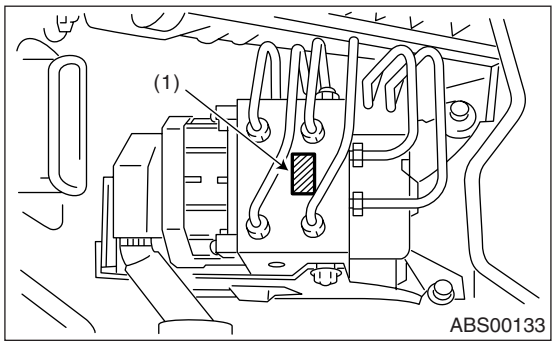

(1) Mark

1. CHECKING THE HYDRAULIC UNIT ABS OPERATION BY PRESSURE GAUGE

1) Lift-up the vehicle and remove the wheels.
2) Disconnect the air bleeder screws from the FL and FR caliper bodies.
3) Connect two pressure gauges to the FL and FR caliper bodies.

CAUTION:
• Pressure gauges used exclusively for brake fluid must be used.
• Do not employ pressure gauge previously used for transmission since the piston seal is expanded which may lead to malfunction of the brake.

NOTE:
Wrap sealing tape around the pressure gauge.

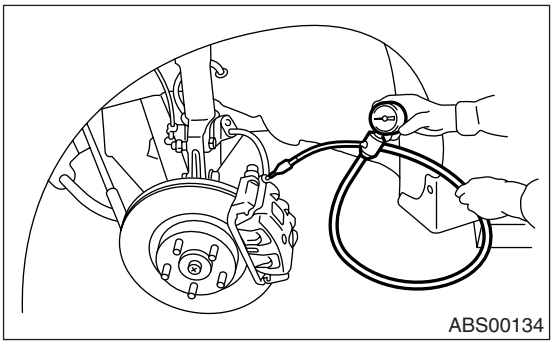

4) Bleed air from the pressure gauges.
5) Perform the ABS sequence control.
<Ref. to ABS-10, ABS Sequence Control.>
6) When the hydraulic unit begins to work, and first the FL side performs decompression, holding, and compression, and then the FR side performs decompression, holding, and compression.
7) Read values indicated on the pressure gauge and check if the fluctuation of the values between decompression and compression meets the standard values. Also check if any irregular brake pedal tightness is felt.

	Front wheel	Rear wheel
Initial value	3,500 kPa (36 kgf/cm^2, 511 psi)	3,500 kPa (36 kgf/cm^2, 511 psi)
Decompressed	500 kPa (5 kgf/cm^2, 73 psi) or less	500 kPa (5 kgf/cm^2, 73 psi) or less
Compressed	3,500 kPa (36 kgf/cm^2, 511 psi) or more	3,500 kPa (36 kgf/cm^2, 511 psi) or more

8) Remove the pressure gauges from the FL and FR caliper bodies.
9) Remove the air bleeder screws from the RL and RR caliper bodies.
10) Connect the air bleeder screws to the FL and FR caliper bodies.
11) Connect two pressure gauges to the RL and RR caliper bodies.
12) Bleed air from the pressure gauges and the FL and FR caliper bodies.
13) Perform the ABS sequence control.
<Ref. to ABS-10, ABS Sequence Control.>
14) When the hydraulic unit begins to work, at first the RR side performs decompression, holding, and compression, and then the RL side performs decompression, holding, and compression.
15) Read values indicated on the pressure gauges and check if they meet the standard value.
16) After checking, remove the pressure gauges from caliper bodies.
17) Connect the air bleeder screws to RL and RR caliper bodies.
18) Bleed air from the brake line.

2. CHECKING THE HYDRAULIC UNIT ABS OPERATION WITH BRAKE TESTER

1) In the case of AWD AT models, install a spare fuse with the FWD connector in the main fuse box to simulate FWD models.

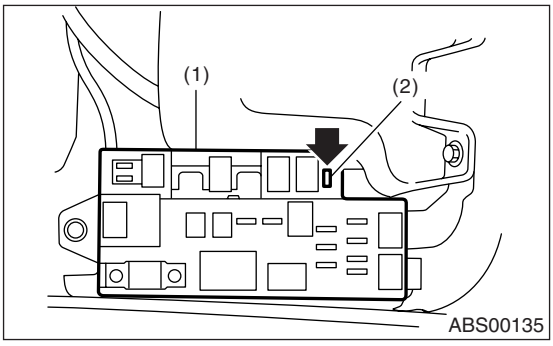

(1) Main fuse box
(2) FWD connector

NOTE:
AWD circuit of MT models can not be disabled because viscous coupling is used inside center differential.

2) Prepare for operating the ABS sequence control.
<Ref. to ABS-10, ABS Sequence Control.>
3) Set the front wheels or rear wheels on the brake tester and set the select lever's position at "N" range.

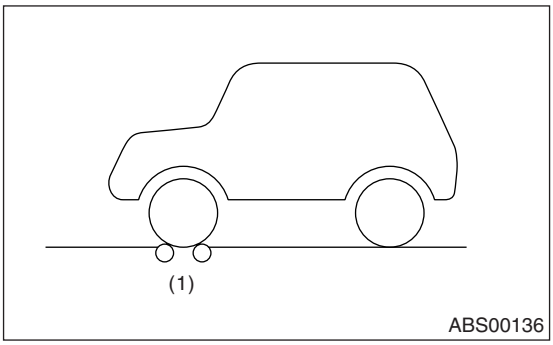

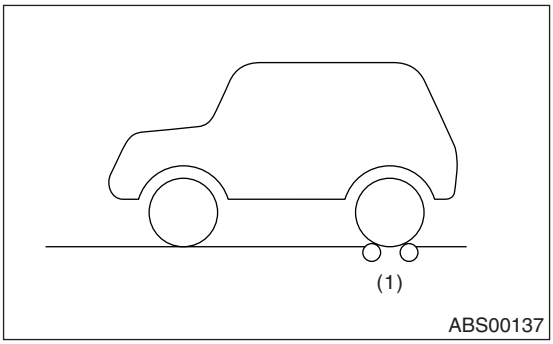

(1) Brake tester

4) Operate the brake tester.
5) Perform the ABS sequence control.
<Ref. to ABS-10, ABS Sequence Control.>
6) Hydraulic unit begins to work; and check the following working sequence.
(1) The FL wheel performs decompression, holding, and compression in sequence, and subsequently the FR wheel repeats the cycle.
(2) The RR wheel performs decompression, holding, and compression in sequence, and subsequently the RL wheel repeats the cycle.
7) Read values indicated on the brake tester and check if the fluctuation of values, when decompressed and compressed, meets the standard values.

	Front wheel	Rear wheel
Initial value	1,000 N (102 kgf, 225 lb)	1,000 N (102 kgf, 225 lb)
Decompressed	500 N (51 kgf, 112 lb) or less	500 N (51 kgf, 112 lb) or less
Compressed	1,000 N (102 kgf, 225 lb) or more	1,000 N (102 kgf, 225 lb) or more

8) After checking, also check if any irregular brake pedal tightness is felt.

3. ABS Sequence Control

A: OPERATION

1) Under the ABS sequence control, after the hydraulic unit solenoid valve is driven, the operation of the hydraulic unit can be checked by means of the brake tester or pressure gauge.
2) ABS sequence control can be started by diagnosis connector or Subaru Select Monitor.

1. ABS SEQUENCE CONTROL WITH DIAGNOSIS CONNECTOR

1) Turn the ignition switch to OFF.
2) Connect the diagnosis terminal to terminal No. 6 of the diagnosis connector beside driver's seat.

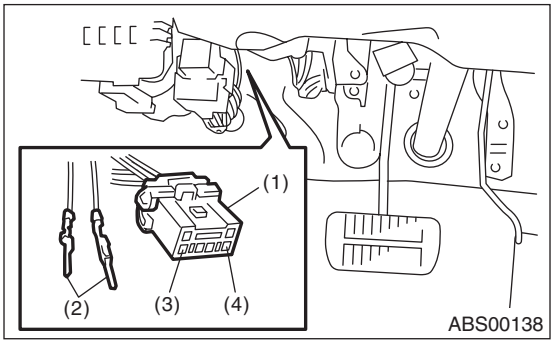

(1) Diagnosis connector
(2) Diagnosis terminals
(3) Terminal No. 3
(4) Terminal No. 6

3) Turn the ignition switch to ON.
4) Confirm that start code (code 11) is only displayed.
5) Turn the ignition switch to OFF.
6) Connect the diagnosis terminals to terminals No. 6 and No. 3 of diagnosis connector.
7) Set the speed of all wheels at 4 km/h (2 MPH) or less.
8) Turn the ignition switch to ON.
9) Within 0.5 seconds after the ABS warning light goes out, depress the brake pedal and hold it depressed.

NOTE:
Engine must not operate.

CAUTION:
Do not depress the clutch pedal in case of vehicle with hill holder.

10) After completion of ABS sequence control, turn the ignition switch to OFF.

2. ABS SEQUENCE CONTROL WITH SUBARU SELECT MONITOR

NOTE:
• In the event of any trouble, the sequence control may not be operative. In such a case, activate the sequence control, referring to “ABS SEQUENCE CONTROL WITH DIAGNOSIS CONNECTOR”.
<Ref. to ABS-10, ABS SEQUENCE CONTROL WITH DIAGNOSIS CONNECTOR, ABS Sequence Control.>
• When the diagnosis terminal is connected to the diagnosis connector, the sequence control will not operate.

1) Connect the Subaru Select Monitor to data link connector under driver’s seat instrument panel lower cover.
2) Turn the ignition switch to ON.
3) Turn the Subaru Select Monitor switch to ON.
4) Put the Subaru Select Monitor to “BRAKE CONTROL” mode.
5) When “Function check sequence” is selected, ‘ABS sequence control’ will start.
6) When the message “Press Brake Pedal Firmly” is displayed, perform the followings.
(1) When using the brake tester, depress the brake pedal with braking force of 1,000 N (102 kgf, 225 lb).
(2) When using the pressure gauge, depress the brake pedal so as to make the pressure gauge indicate 3,500 kPa (36 kg/cm^2, 511 psi).

CAUTION:
Do not depress the clutch pedal in case of vehicle with hill holder.

7) When the message “Press YES” is displayed, press the YES key.
8) The braking system in operation is displayed on Subaru Select Monitor.

3. CONDITIONS FOR ABS SEQUENCE CONTROL

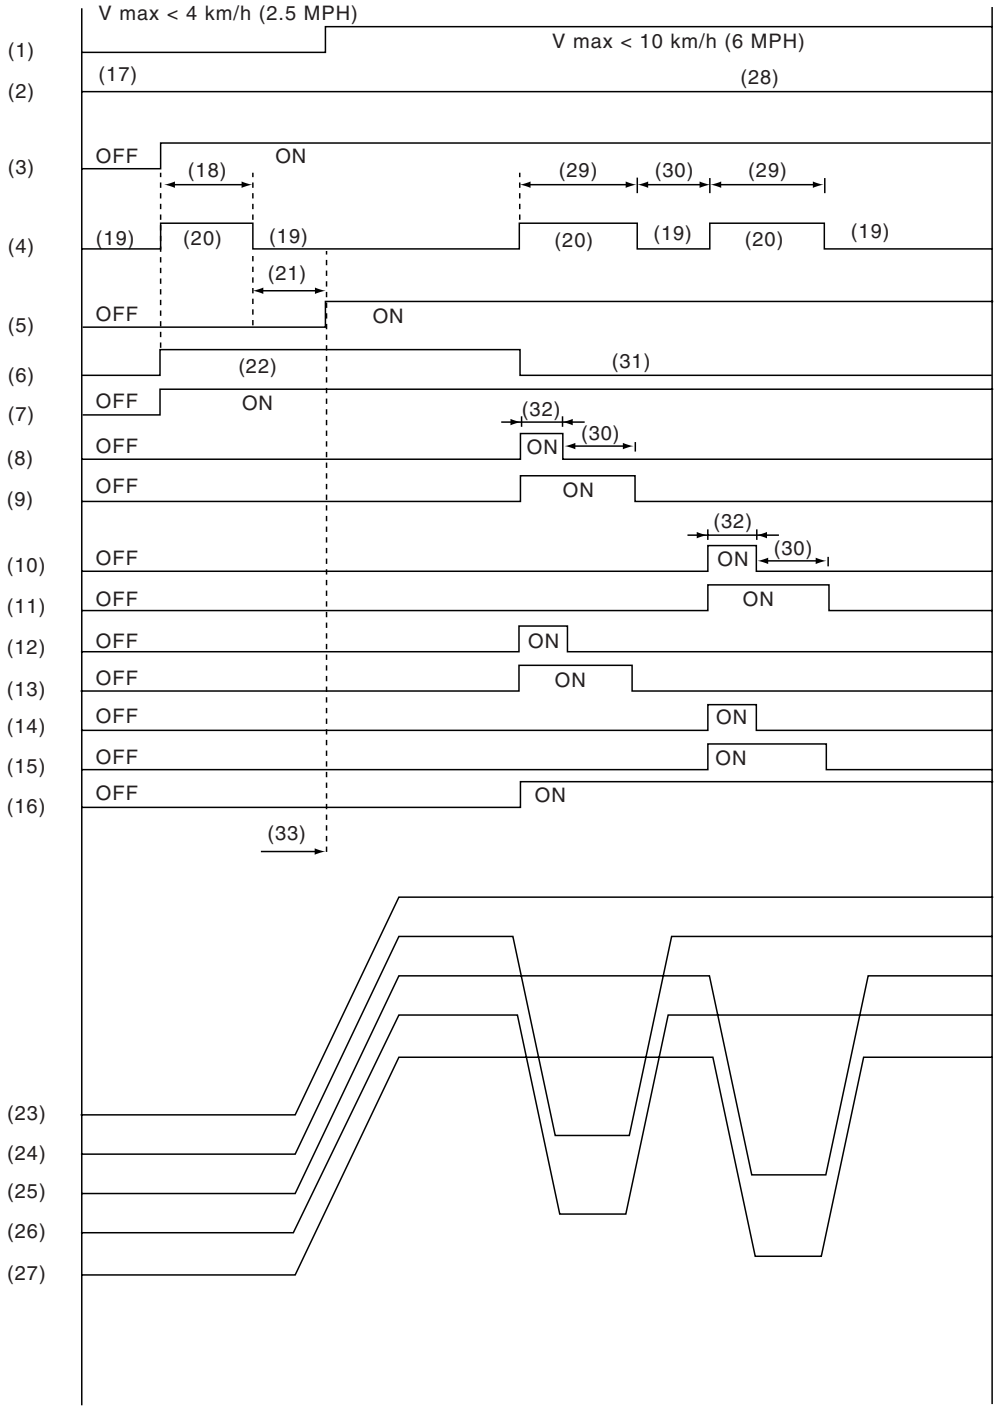

ABS00014

(1) Speed of wheels
(2) Terminal DK and DL
(3) Ignition key
(4) ABS warning light
(5) Stop light switch
(6) Signal to Transmission control module (TCM)
(7) Valve relay
(8) FL outlet valve
(9) FL inlet valve
(10) FR outlet valve
(11) FR inlet valve
(12) RR outlet valve
(13) RR inlet valve
(14) RL outlet valve
(15) RL inlet valve
(16) Pump motor
(17) Connection to ground terminal
(18) 1.5 seconds
(19) Not illuminated
(20) Illuminated
(21) Within 0.5 second
(22) ABS not working
(23) Pressure of master cylinder
(24) Pressure of FL wheel cylinder
(25) Pressure of FR wheel cylinder
(26) Pressure of RR wheel cylinder
(27) Pressure of RL wheel cylinder
(28) Either HI or LO possible, if using Subaru Select Monitor
(29) 1.4 second
(30) 1.0 second
(31) ABS working
(32) 0.4 second
(33) Point A

NOTE:
When the Subaru Select Monitor is used, control operation starts at point A. The patterns from IGN key ON to the point A show that operation is started by diagnosis connector. (However, the brake light switch must be ON before point A.)

B: SPECIFICATION

1. CONDITIONS FOR COMPLETION OF ABS SEQUENCE CONTROL

When the following conditions develop, the ABS sequence control stops and ABS operation is returned to the normal control mode.
1) When the speed of at least one wheel reaches 10 km/h (6 MPH).
2) When terminal No. 3 or No. 6 are separated from diagnosis terminals. (When the Subaru Select Monitor is not used.)
3) When the brake pedal is released during sequence control and the braking lamp switch is set to off.
4) When the brake pedal is depressed after ignition key is turned to ON, and before ABS warning light goes out. (When the Subaru Select Monitor is not used.)
5) When the brake pedal is not depressed after ignition key is turned to ON, and within 0.5 seconds after ABS warning light goes out. (When the Subaru Select Monitor is not used.)
6) After completion of the sequence control.
7) When malfunction is detected. (When the Subaru Select Monitor is used.)

4. Front ABS Wheel Speed Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the front ABS wheel speed sensor connector located next to the front strut mounting house in engine compartment. Pull the connector out from grommet hole to tire side.
3) Remove the bolts which secure the sensor harness to strut.

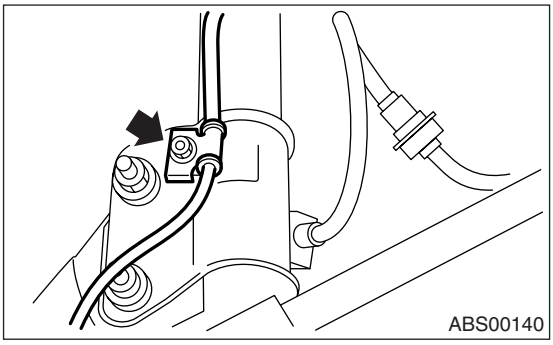

4) Remove the bolts which secure the sensor harness to body.

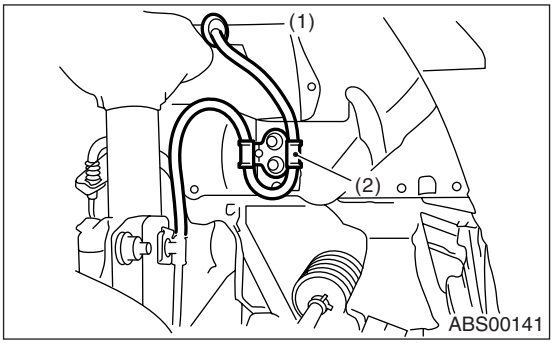

(1) To front ABS wheel speed sensor connector
(2) Bracket

5) Remove the bolts which secure the front ABS wheel speed sensor to housing, and remove the front ABS wheel speed sensor.

CAUTION:
• Be careful not to damage the pole piece located at tip of the sensor and teeth faces during removal.
• Do not pull the sensor harness during removal.

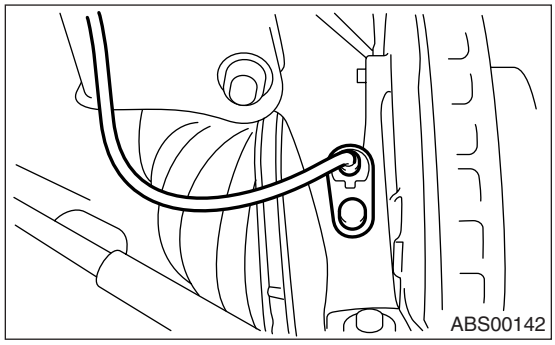

B: INSTALLATION

1) Temporarily install the front ABS wheel speed sensor on housing.

CAUTION:
Be careful not to strike the ABS wheel speed sensor's pole piece against tone wheel and adjacent metal parts during installation.

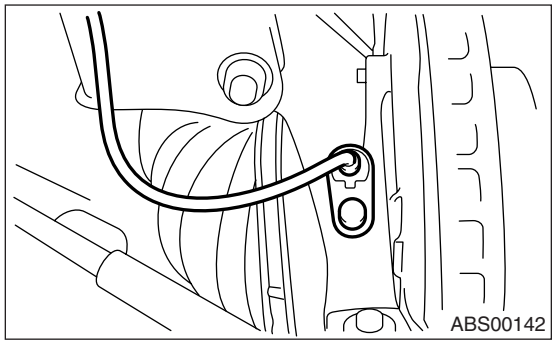

2) Install the front ABS wheel speed sensor on strut and wheel apron bracket.

Tightening torque:
33 N·m (3.3 kgf-m, 24 ft-lb)

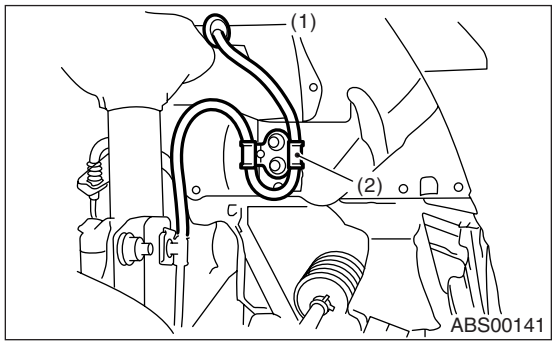

(1) To front ABS wheel speed sensor connector
(2) Bracket

3) Check the ABS wheel speed sensor gap. <Ref. to ABS-14, SENSOR GAP, INSPECTION, Front ABS Wheel Speed Sensor.> After standard clearance is obtained, tighten the ABS wheel speed sensor on housing to specified torque.
If the clearance is outside specification, readjust using spacer (Part No. 26755AA000).

ABS wheel speed sensor standard clearance:
0.3 — 0.8 mm (0.012 — 0.031 in)

Tightening torque:
33 N·m (3.3 kgf-m, 24 ft-lb)

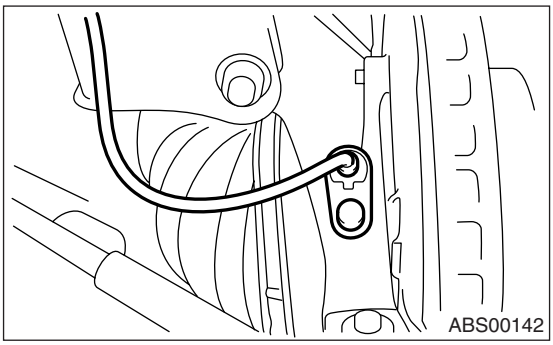

NOTE:
• Check the marks on the harness and make sure that no kink exists. (RH: White, LH: Yellow)
• Make sure the harness is not pulled and does not contact to suspension or body when steering wheel is turned.

4) After confirmation of the ABS wheel speed sensor clearance, connect the connector to ABS wheel speed sensor.
5) Connect the battery ground cable to battery.

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

1) Check the pole piece of ABS wheel speed sensor for foreign particles or damage. If necessary, clean the pole piece or replace ABS wheel speed sensor.
2) Measure the ABS wheel speed sensor resistance.
If the resistance is outside standard value, replace the ABS wheel speed sensor with a new one.

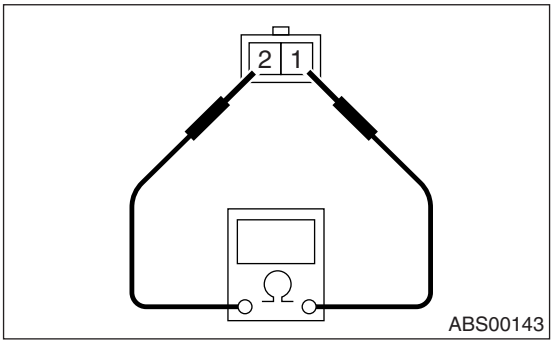

Terminal No.	Standard
1 and 2	1.25±0.25 kΩ

NOTE:
Check the ABS wheel speed sensor cable for discontinuity. If necessary, replace with a new one.

2. SENSOR GAP

1) Measure the distance “A” between ABS wheel speed sensor surface and sensor pole face.

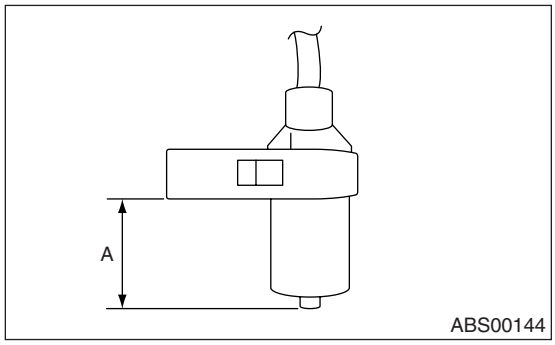

2) Measure the distance “B” between surface where the front axle housing meets the ABS wheel speed sensor, and the tone wheel.

NOTE:
Measure so that the gauge touches the tone wheel teeth top.

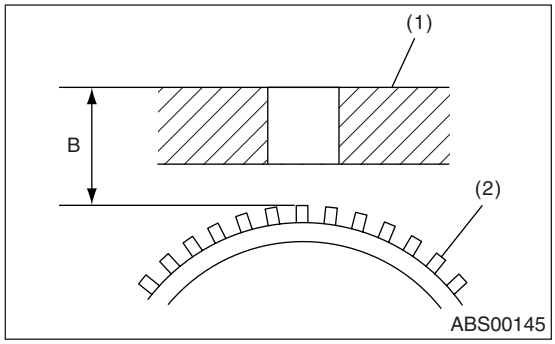

(1) Axle housing
(2) Tone wheel

3) Find the gap between the ABS wheel speed sensor pole face and the surface of the tone wheel teeth by putting the measured values in the formula below and calculating.
ABS wheel speed sensor clearance = B − A

ABS wheel speed sensor standard clearance:
0.3 — 0.8 mm (0.012 — 0.031 in)

NOTE:
If the clearance is out of specification, readjust using spacer (Part No. 26755AA000).

3. OUTPUT VOLTAGE

Output voltage can be checked by the following method. Install the resistor and condenser, then rotate the wheel about 2.75 km/h (2 MPH) or equivalent.

Output voltage specification:
0.12 to 1 V (at 20 Hz)

NOTE:
Regarding terminal No., please refer to item 1. ABS WHEEL SPEED SENSOR. <Ref. to ABS-14, ABS WHEEL SPEED SENSOR, INSPECTION, Front ABS Wheel Speed Sensor.>

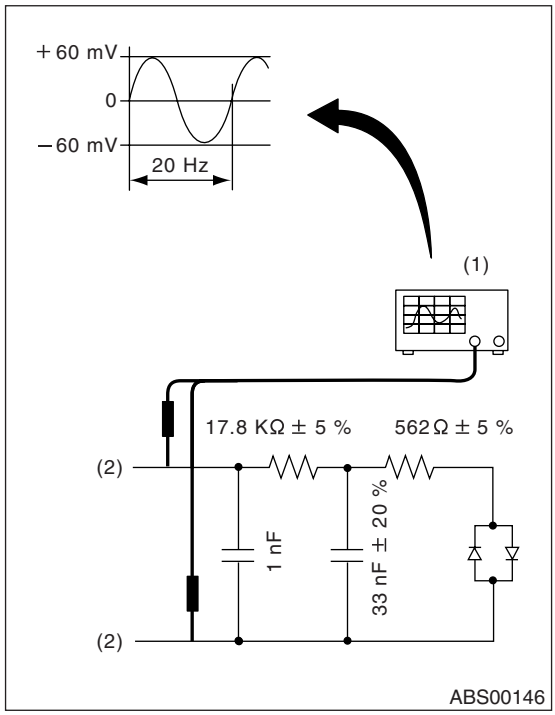

(1) Oscilloscope
(2) Terminal

D: ADJUSTMENT

Adjust the gap using spacer (Part No. 26755A000).

5. Rear ABS Wheel Speed Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle.
3) Remove the rear seat and disconnect the rear ABS wheel speed sensor connector. Pull the connector out from grommet hole to under floor.
4) Remove the rear sensor harness bracket from the rear trailing link and bracket.
5) Remove the rear ABS wheel speed sensor from back plate.

CAUTION:
• Be careful not to damage the pole piece located at tip of the sensor and teeth faces during removal.
• Do not pull the sensor harness during removal.

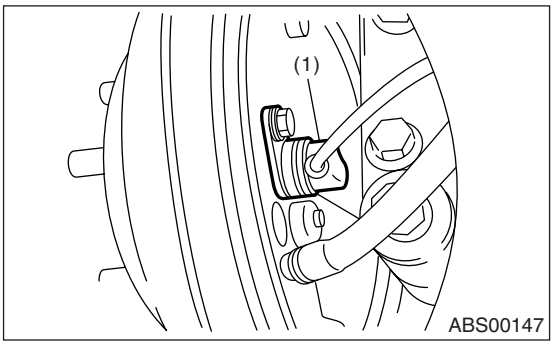

(1) Rear ABS wheel speed sensor

6) Remove the rear tone wheel while removing the hub from housing and hub assembly. <Ref. to DS-24, REMOVAL, Rear Axle.>

B: INSTALLATION

1) Install the rear tone wheel on hub, then rear housing on hub. <Ref. to DS-30, ASSEMBLY, Rear Axle.>
2) Temporarily install the rear ABS wheel speed sensor on back plate.

CAUTION:
Be careful not to strike the ABS wheel speed sensor's pole piece against tone wheel and adjacent metal parts during installation.

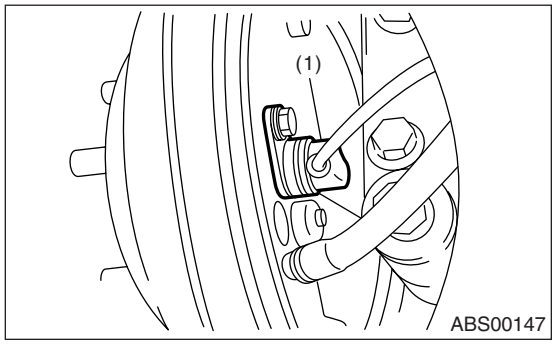

(1) Rear ABS wheel speed sensor

3) Install the rear drive shaft to rear housing and rear differential spindle. <Ref. to DS-27, INSTALLATION, Rear Axle.>
4) Install the rear sensor harness on rear trailing link.

Tightening torque:
33 N·m (3.3 kgf-m, 24 ft-lb)

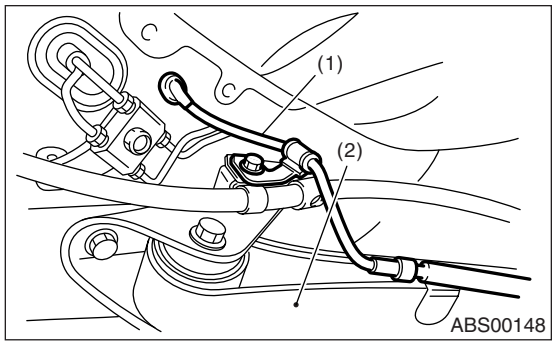

(1) Rear sensor harness
(2) Trailing link

5) Check the ABS wheel speed sensor gap. <Ref. to ABS-17, SENSOR GAP, INSPECTION, Rear ABS Wheel Speed Sensor.> After standard clearance is obtained, tighten the ABS wheel speed sensor on back plate to specified torque.
If the clearance is outside specification, readjust using spacer (Part No. 26755AA000).

ABS wheel speed sensor standard clearance:
0.7 — 1.2 mm (0.028 — 0.047 in)

Tightening torque:
33 N·m (3.3 kgf-m, 24 ft-lb)

NOTE:
Check the marks on the harness and make sure no kink exists. (RH: Light blue, LH: Brown)

6) After confirmation of the ABS wheel speed sensor clearance, connect the connector to ABS wheel speed sensor.
7) Connect the battery ground cable to battery.

C: INSPECTION

1. ABS WHEEL SPEED SENSOR

1) Check the pole piece of ABS wheel speed sensor for foreign particles or damage. If necessary, clean the pole piece or replace ABS wheel speed sensor.
2) Measure the ABS wheel speed sensor resistance.
If resistance is out of standard value, replace the ABS wheel speed sensor with a new one.

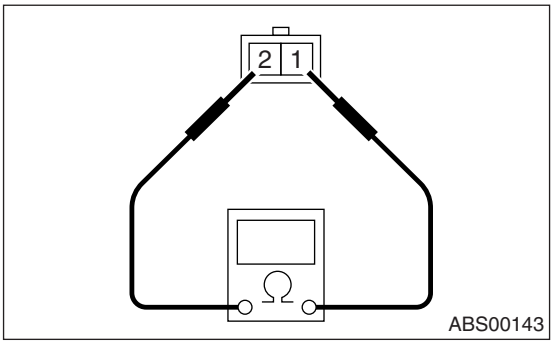

Terminal No.	Standard
1 and 2	1.15±0.115 kΩ

NOTE:
Check the ABS wheel speed sensor cable for discontinuity. If necessary, replace with a new one.

2. SENSOR GAP

1) Measure the clearance between tone wheel and ABS wheel speed sensor at whole periphery.

NOTE:
If clearance is narrow, adjust by using spacer (Part No. 26755AA000).
If clearance is wide, check the outputted voltage then replace the ABS wheel speed sensor or tone wheel if the outputted voltage is outside specification.

ABS wheel speed sensor clearance:
0.7 — 1.2 mm (0.028 — 0.047 in)

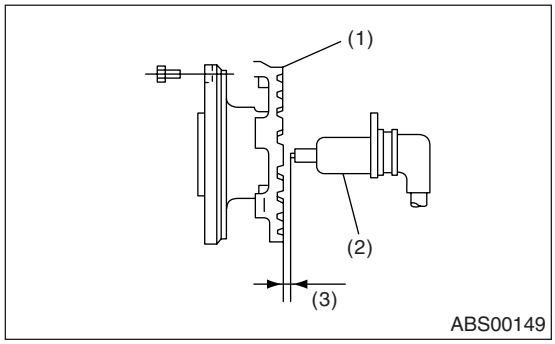

(1) Tone wheel
(2) ABS wheel speed sensor
(3) Sensor gap

3. OUTPUT VOLTAGE

Output voltage can be checked by the following method. Install the resistor and condenser, then rotate the wheel about 2.75 km/h (2 MPH) or equivalent.

Output voltage specification:
0.12 — 1 V (at 20 Hz)

NOTE:
Regarding terminal No., please refer to item 1. ABS WHEEL SPEED SENSOR. <Ref. to ABS-17, ABS WHEEL SPEED SENSOR, INSPECTION, Rear ABS Wheel Speed Sensor.>

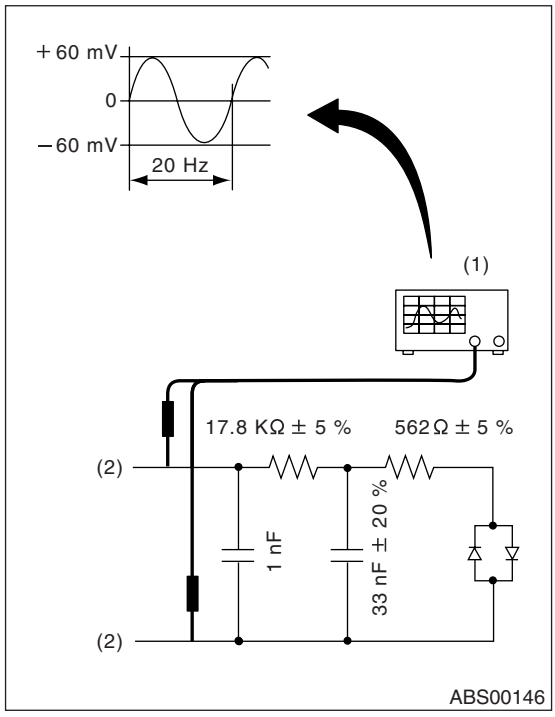

(1) Oscilloscope
(2) Terminal

D: ADJUSTMENT

Adjust the gap using spacer (Part No. 26755AA000).

6. Front Tone Wheel

A: REMOVAL

Refer to Front Drive Shaft, because front tone wheel is integrated with front drive shaft.
<Ref. to DS-32, REMOVAL, Front Drive Shaft.>

B: INSTALLATION

Refer to Front Drive Shaft, because front tone wheel is integrated with front drive shaft.
<Ref. to DS-32, INSTALLATION, Front Drive Shaft.>

C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace the tone wheel with a new one.

NOTE:
Replace the BJ assembly with a new one as a single unit if there are any defects found on tone wheel is unitized with BJ assembly of drive shaft.

7. Rear Tone Wheel

A: REMOVAL

Refer to Rear Axle, because the rear tone wheel is installed to rear hub.
<Ref. to DS-24, REMOVAL, Rear Axle.>

B: INSTALLATION

Refer to Rear Axle, because the rear tone wheel is installed to rear hub.
<Ref. to DS-27, INSTALLATION, Rear Axle.>

C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace the tone wheel with a new one.

8. G Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the console cover.
<Ref. to EI-42, REMOVAL, Console Box.>
3) Disconnect the connector from G sensor.
4) Remove the G sensor from body.

CAUTION:
- **Do not drop or bump the G sensor.**
- **G sensor and the bracket are integrated into one unit. Therefore, do not disassemble it.**

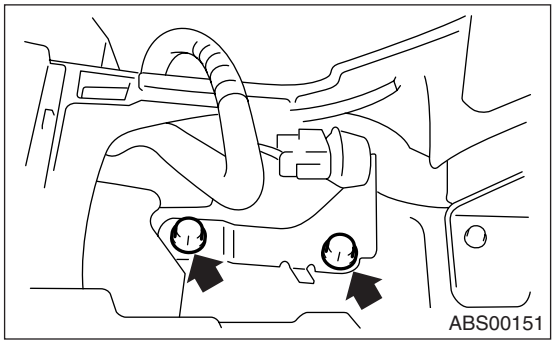

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Do not drop or bump the G sensor.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

C: INSPECTION

	Step	Check	Yes	No
1	**CHECK SUBARU SELECT MONITOR.**	Do you have a SUBARU SELECT MONITOR?	Go to step **5.**	Go to step **2.**
2	**CHECK G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the G sensor from vehicle. 3)Connect the connector to G sensor. 4)Turn the ignition switch to ON. 5)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 2.3±0.2 V when G sensor is horizontal?	Go to step **3.**	Replace the G sensor.
3	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 3.9±0.2 V when G sensor is inclined forwards to 90°?	Go to step **4.**	Replace the G sensor.
4	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 0.7±0.2 V when G sensor is inclined backwards to 90°?	G sensor is normal.	Replace the G sensor.
5	**CHECK G SENSOR.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor to data link connector. 3)Turn the Subaru Select Monitor into {BRAKE CONTROL} mode. 4)Set the display in the {Current Data Display & Save} mode. 5)Read the G sensor output voltage.	Is the indicated reading 2.3±0.2 V when the vehicle is in horizontal position?	Go to step **6.**	Replace the G sensor.
6	**CHECK G SENSOR.** 1)Remove the console box. 2)Remove the G sensor from vehicle. (Do not disconnect the connector.) 3)Read the Subaru Select Monitor display.	Is the indicated reading 3.9±0.2 V when G sensor is inclined forwards to 90°?	Go to step **7.**	Replace the G sensor.
7	**CHECK G SENSOR.** Read the Subaru Select Monitor display.	Is the indicated reading 0.7±0.2 V when G sensor is inclined backwards to 90°?	G sensor is normal.	Replace the G sensor.

9. Lateral G Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.

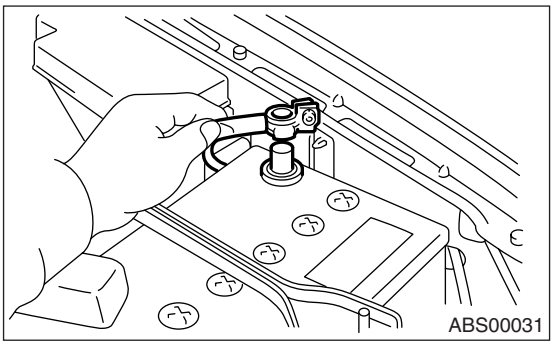

2) Remove the console cover.
<Ref. to EI-42, REMOVAL, Console Box.>
3) Disconnect the connector from lateral G sensor.
4) Remove the lateral G sensor from vehicle.

CAUTION:
Do not drop or bump the lateral G sensor.

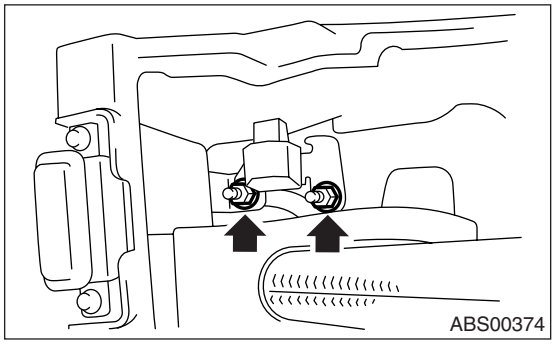

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Do not drop or bump the lateral G sensor.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

C: INSPECTION

	Step	Check	Yes	No
1	**CHECK SUBARU SELECT MONITOR.**	Do you have a SUBARU SELECT MONITOR?	Go to step **5.**	Go to step **2.**
2	**CHECK LATERAL G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the lateral G sensor from vehicle. 3)Connect the connector to lateral G sensor. 4)Turn the ignition switch to ON. 5)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 2.5±0.2 V when lateral G sensor is horizontal?	Go to step **3.**	Replace the lateral G sensor.
3	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 3.5±0.2 V when lateral G sensor is inclined forwards to 90°?	Go to step **4.**	Replace the lateral G sensor.
4	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 1.5±0.2 V when lateral G sensor is inclined backwards to 90°?	Lateral G sensor is normal.	Replace the lateral G sensor.
5	**CHECK LATERAL G SENSOR.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor to data link connector. 3)Turn the Subaru Select Monitor into {BRAKE CONTROL} mode. 4)Set the display in the {Current Data Display & Save} mode. 5)Read the lateral G sensor output voltage.	Is the indicated reading 2.5±0.2 V when the vehicle is in horizontal position?	Go to step **6.**	Replace the lateral G sensor.
6	**CHECK LATERAL G SENSOR.** 1)Remove the console box. 2)Remove the lateral G sensor from vehicle. (Do not disconnect the connector.) 3)Read the Subaru Select Monitor display.	Is the indicated reading 3.5±0.2 V when lateral G sensor is inclined forwards to 90°?	Go to step **7.**	Replace the lateral G sensor.
7	**CHECK LATERAL G SENSOR.** Read the Subaru Select Monitor display.	Is the indicated reading 1.5±0.2 V when lateral G sensor is inclined backwards to 90°?	Lateral G sensor is normal.	Replace the lateral G sensor.

ABS (DIAGNOSTICS)

ABS

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	5
3.	General Description	9
4.	Electrical Components Location	11
5.	Control Module I/O Signal	13
6.	Subaru Select Monitor	17
7.	Read Diagnostic Trouble Code (DTC)	20
8.	Inspection Mode	21
9.	Clear Memory Mode	22
10.	ABS Warning Light/Brake Warning Light Illumination Pattern	23
11.	List of Diagnostic Trouble Code (DTC)	24
12.	Diagnostics Procedure without Diagnostic Trouble Code (DTC)	29
13.	Diagnostics Procedure with Diagnostic Trouble Code (DTC)	95
14.	General Diagnostics Table	187

1. Basic Diagnostic Procedure

A: PROCEDURE

1. WITHOUT SUBARU SELECT MONITOR

CAUTION:
Remove foreign matter (dust, water, etc.) from the ABSCM&H/U connector during removal and installation.

NOTE:
- To check the harness for broken wires or short circuits, shake it while holding it or the connector.
- When the ABS warning light illuminates, read and record the DTC indicated by ABS warning light.

	Step	Check	Yes	No
1	**CHECK PRE-INSPECTION.** 1)Ask the customer when and how trouble occurred using interview checklist. <Ref. to ABS-5, Check List for Interview.> 2)Before performing diagnosis, inspect the unit which might influence ABS problem. <Ref. to ABS-9, INSPECTION, General Description.>	Is the unit that might influence the ABS problem normal?	Go to step **2.**	Repair or replace each unit.
2	**CHECK INDICATION OF DTC.** Calling up the DTC. <Ref. to ABS-20, Read Diagnostic Trouble Code (DTC).> Record all DTCs.	Is only the start code issued?	Go to step **3.**	Go to step **4.**
3	**PERFORM THE GENERAL DIAGNOSTICS.** 1)Inspect using “General Diagnostics Table”. <Ref. to ABS-187, General Diagnostics Table.> 2)Perform the clear memory mode. <Ref. to ABS-22, WITHOUT SUBARU SELECT MONITOR, OPERATION, Clear Memory Mode.> 3)Perform the inspection mode. <Ref. to ABS-21, Inspection Mode.> Calling up the DTC. <Ref. to ABS-20, Read Diagnostic Trouble Code (DTC).>	Is only the start code issued?	Complete the diagnosis.	Go to step **4.**
4	**PERFORM THE DIAGNOSIS.** 1)Repair trouble cause. NOTE: For DTC list, refer to “List of DTC”.<Ref. to ABS-24, WITHOUT SUBARU SELECT MONITOR, LIST, List of Diagnostic Trouble Code (DTC).> 2)Perform the clear memory mode. <Ref. to ABS-22, WITHOUT SUBARU SELECT MONITOR, OPERATION, Clear Memory Mode.> 3)Perform the inspection mode. <Ref. to ABS-21, Inspection Mode.> 4)Calling up the DTC. <Ref. to ABS-20, Read Diagnostic Trouble Code (DTC).>	Is only the start code issued?	Complete the diagnosis.	Repeat the step 4 until only start code is issued.

2. WITH SUBARU SELECT MONITOR

CAUTION:
Remove foreign matter (dust, water, etc.) from the ABSCM&H/U connector during removal and installation.

NOTE:
- To check the harness for broken wires or short circuits, shake it while holding it or the connector.
- Check list for interview. <Ref. to ABS-5, Check List for Interview.>

	Step	Check	Yes	No
1	**CHECK PRE-INSPECTION.** 1)Ask the customer when and how trouble occurred using interview checklist. <Ref. to ABS-5, Check List for Interview.> 2)Before performing diagnosis, inspect the unit which might influence the ABS problem. <Ref. to ABS-9, INSPECTION, General Description.>	Is the unit that might influence the ABS problem normal?	Go to step **2.**	Repair or replace each unit.
2	**CHECK INDICATION OF DTC DISPLAY.** 1)Turn the ignition switch to OFF. 2)Connect the SUBARU SELECT MONITOR to data link connector. 3)Turn the ignition switch to ON and SUBARU SELECT MONITOR to ON. NOTE: If the communication function of Subaru Select Monitor cannot be executed normally, check communication circuit. <Ref. to ABS-95, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostics Procedure with Diagnostic Trouble Code (DTC).> 4)Read the DTC. <Ref. to ABS-18, READ CURRENT DATA, OPERATION, Subaru Select Monitor.> 5)Record all DTCs and freeze frame data.	Is the DTC displayed?	Go to step **4.**	Go to step **3.**
3	**PERFORM THE GENERAL DIAGNOSTICS.** 1)Inspect using “General Diagnostics Table”. <Ref. to ABS-187, General Diagnostics Table.> 2)Perform the clear memory mode. <Ref. to ABS-18, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.> 3)Perform the inspection mode. <Ref. to ABS-21, Inspection Mode.> 4)Calling up the DTC. <Ref. to ABS-17, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> Check DTC is not displayed.	Is the ABS warning light turned off after ignition switch OFF?	Complete the diagnosis.	Inspect using “diagnostics procedure for No DTC”. <Ref. to ABS-98, NO DTC.>

	Step	Check	Yes	No
4	**PERFORM THE DIAGNOSIS.** 1)For the DTC list, refer to “List of DTC”.<Ref. to ABS-25, WITH SUBARU SELECT MONITOR, LIST, List of Diagnostic Trouble Code (DTC).> 2)Repair trouble cause. 3)Perform the clear memory mode. <Ref. to ABS-18, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.> 4)Perform the inspection mode. <Ref. to ABS-21, Inspection Mode.> 5)Calling up the DTC. <Ref. to ABS-17, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Are the DTCs indicated on display?	Inspect using “diagnostics procedure with Subaru Select Monitor”. <Ref. to ABS-95, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>	Complete the diagnosis.

2. Check List for Interview

A: CHECK

Check the following items about the vehicle's state.

1. STATE OF ABS WARNING LIGHT

ABS warning light comes on.	❑ Always ❑ Sometimes ❑ Only once ❑ Does not come on • When / how long does it come on?:		
Ignition key position	❑ LOCK ❑ ACC ❑ ON (before starting engine) ❑ START ❑ On after starting (Engine is running) ❑ On after starting (Engine is stop)		
Timing	❑ Immediately after ignition is ON. ❑ Immediately after ignition starts.		
	❑ When advancing	km/h to	km/h
		MPH to	MPH
	❑ While traveling at a constant speed	km/h	MPH
	❑ When decelerating	km/h to	km/h
		MPH to	MPH
	❑When turning to right	Steering angle :	deg
		Steering time :	sec
	❑ When turning to left	Steering angle :	deg
		Steering time :	sec
	❑ When moving other electrical parts		
	• Parts name : • Operating condition :		

2. STATE OF BRAKE WARNING LIGHT

Brake warning light comes on.	❑ Always ❑ Sometimes ❑ Only once ❑ Does not come on ❑ When parking brake lever is pulled ❑ When parking brake lever is released • When / how long does it come on?:
Ignition key position	❑ LOCK ❑ ACC ❑ ON (before starting engine) ❑ START ❑ On after starting (Engine is running) ❑ On after starting (Engine is stop)

Timing	❑ Immediately after ignition is ON. ❑ Immediately after ignition starts.		
	❑ When advancing		km/h to km/h
			MPH to MPH
	❑ While traveling at a constant speed	km/h	MPH
	❑ When decelerating		km/h to km/h
			MPH to MPH
	❑When turning to right	Steering angle :	deg
		Steering time :	sec
	❑ When turning to left	Steering angle :	deg
		Steering time :	sec
	❑ When operating other electrical parts		
	• Parts name : • Operating condition :		

3. SYMPTOMS

ABS operating condition	❑ Does not operate.		
	❑ Operates only when abruptly applying brakes.	Vehicle speed :	km/h
			MPH
	• How to step on brake pedal :		
	a) Operating time :		sec
	b) Operating noise : ❑ Produce / ❑ Does not produce		
	• What kind of noise?	❑ Knock ❑ Gong gong ❑ Bong ❑ Buzz ❑ Gong gong buzz ❑ Others :	
	c) Reaction force of brake pedal		
		❑ Stick ❑ Press down once with a clunk ❑ Press and released ❑ Others :	

<table>
<tr><td rowspan="14">Behavior of vehicle</td><td colspan="2">a) Directional stability cannot be obtained or steering refuses to work when applying brakes :
❑ Yes / ❑ No</td></tr>
<tr><td>• When :</td><td>❑ Vehicle turns to right
❑ Vehicle turns to left
❑ Spins
❑ Others :</td></tr>
<tr><td colspan="2">b) Directional stability cannot be obtained or steering refuses to work when accelerating :
❑ Yes / ❑ No</td></tr>
<tr><td>• When :</td><td>❑ Vehicle turns to right
❑ Vehicle turns to left
❑ Spins
❑ Others :</td></tr>
<tr><td colspan="2">c) Brakes out of order : ❑ Yes / ❑ No</td></tr>
<tr><td>• What :</td><td>❑ Braking distance is long
❑ Brakes lock or drag
❑ Pedal stroke is long
❑ Pedal sticks
❑ Others :</td></tr>
<tr><td colspan="2">d) Poor acceleration : ❑ Yes / ❑ No</td></tr>
<tr><td>• What :</td><td>❑ Fails to accelerate
❑ Engine stalls
❑ Others :</td></tr>
<tr><td colspan="2">e) Occurrence of vibration : ❑ Yes / ❑ No</td></tr>
<tr><td colspan="2">• Where
• What kind :</td></tr>
<tr><td colspan="2">f) Occurrence of abnormal noise : ❑ Yes / ❑ No</td></tr>
<tr><td colspan="2">• Where
• What kind :</td></tr>
<tr><td colspan="2">g) Occurrence of other phenomena : ❑ Yes / ❑ No</td></tr>
<tr><td colspan="2">• What kind :</td></tr>
</table>

4. CONDITIONS UNDER WHICH TROUBLE OCCURS

Environment	a) Weather	❑ Fine ❑ Cloudy ❑ Rainy ❑ Snowy ❑ Various/Others :
	b) Ambient temperature	°C (°F)
	c) Road	❑ Urban area ❑ Suburbs ❑ Highway ❑ General road ❑ Ascending slope ❑ Descending slope ❑ Paved road ❑ Gravel road ❑ Muddy road ❑ Sandy place ❑ Others :
	d) Road surface	❑ Dry ❑ Wet ❑ New-fallen snow ❑ Compressed snow ❑ Frozen slope ❑ Others :
Condition	a) Brakes	Deceleration : g
		❑ Continuous / ❑ Intermittent
	b) Accelerator	Acceleration : g
		❑ Continuous / ❑ Intermittent
	c) Vehicle speed	km/h | MPH
		❑ Advancing ❑ Accelerating ❑ Reducing speed ❑ Low speed ❑ Turning ❑ Others :
	d) Tire inflation pressure	Front RH tire : kPa
		Front LH tire : kPa
		Rear RH tire : kPa
		Rear LH tire : kPa
	e) Degree of wear	Front RH tire :
		Front LH tire :
		Rear RH tire :
		Rear LH tire :
	f) Genuine parts are used. : ❑ Yes / ❑ No	
	g) Chain is passed around tires. : ❑ Yes / ❑ No	
	h) T tire is used. : ❑ Yes / ❑ No	
	i) Condition of suspension alignment :	
	j) Loading state :	
	k) Repair parts are used. : ❑ Yes / ❑ No	
	• What :	
	l) Others :	

3. General Description

A: CAUTION

1. SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

Airbag system wiring harness is routed near the ABS wheel speed sensor, ABS control module and hydraulic control unit.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
• Be careful not to damage the airbag system wiring harness when servicing the ABS wheel speed sensor, ABS control module and hydraulic control unit.

B: INSPECTION

Before performing diagnostics, check the following items which might affect ABS problems:

1. BATTERY

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V, or more

Specific gravity: Above 1.260

2. BRAKE FLUID

1) Check the brake fluid level.
2) Check the brake fluid leakage.

3. HYDRAULIC UNIT

Check the hydraulic unit.
• With brake tester <Ref. to ABS-9, CHECKING THE HYDRAULIC UNIT ABS OPERATION WITH BRAKE TESTER, INSPECTION, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
• Without brake tester <Ref. to ABS-8, CHECKING THE HYDRAULIC UNIT ABS OPERATION BY PRESSURE GAUGE, INSPECTION, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

4. BRAKE DRAG

Check for brake drag.

5. BRAKE PAD AND ROTOR

Check the brake pad and rotor.
• Front <Ref. to BR-27, INSPECTION, Front Brake Pad.> and <Ref. to BR-30, INSPECTION, Front Disc Rotor.>
• Rear <Ref. to BR-38, INSPECTION, Rear Brake Pad.> and <Ref. to BR-40, INSPECTION, Rear Disc Rotor.> or <Ref. to BR-48, INSPECTION, Rear Drum Brake Shoe.> and <Ref. to BR-49, INSPECTION, Rear Drum Brake Drum.>

6. TIRE

Check the tire specifications, tire wear and air pressure. <Ref. to WT-2, SPECIFICATIONS, General Description.>

C: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
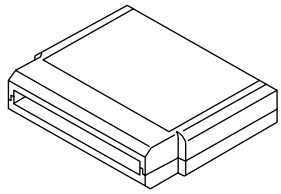 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems.

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and amperage.
Oscilloscope	Used for measuring sensor.

4. Electrical Components Location

A: LOCATION

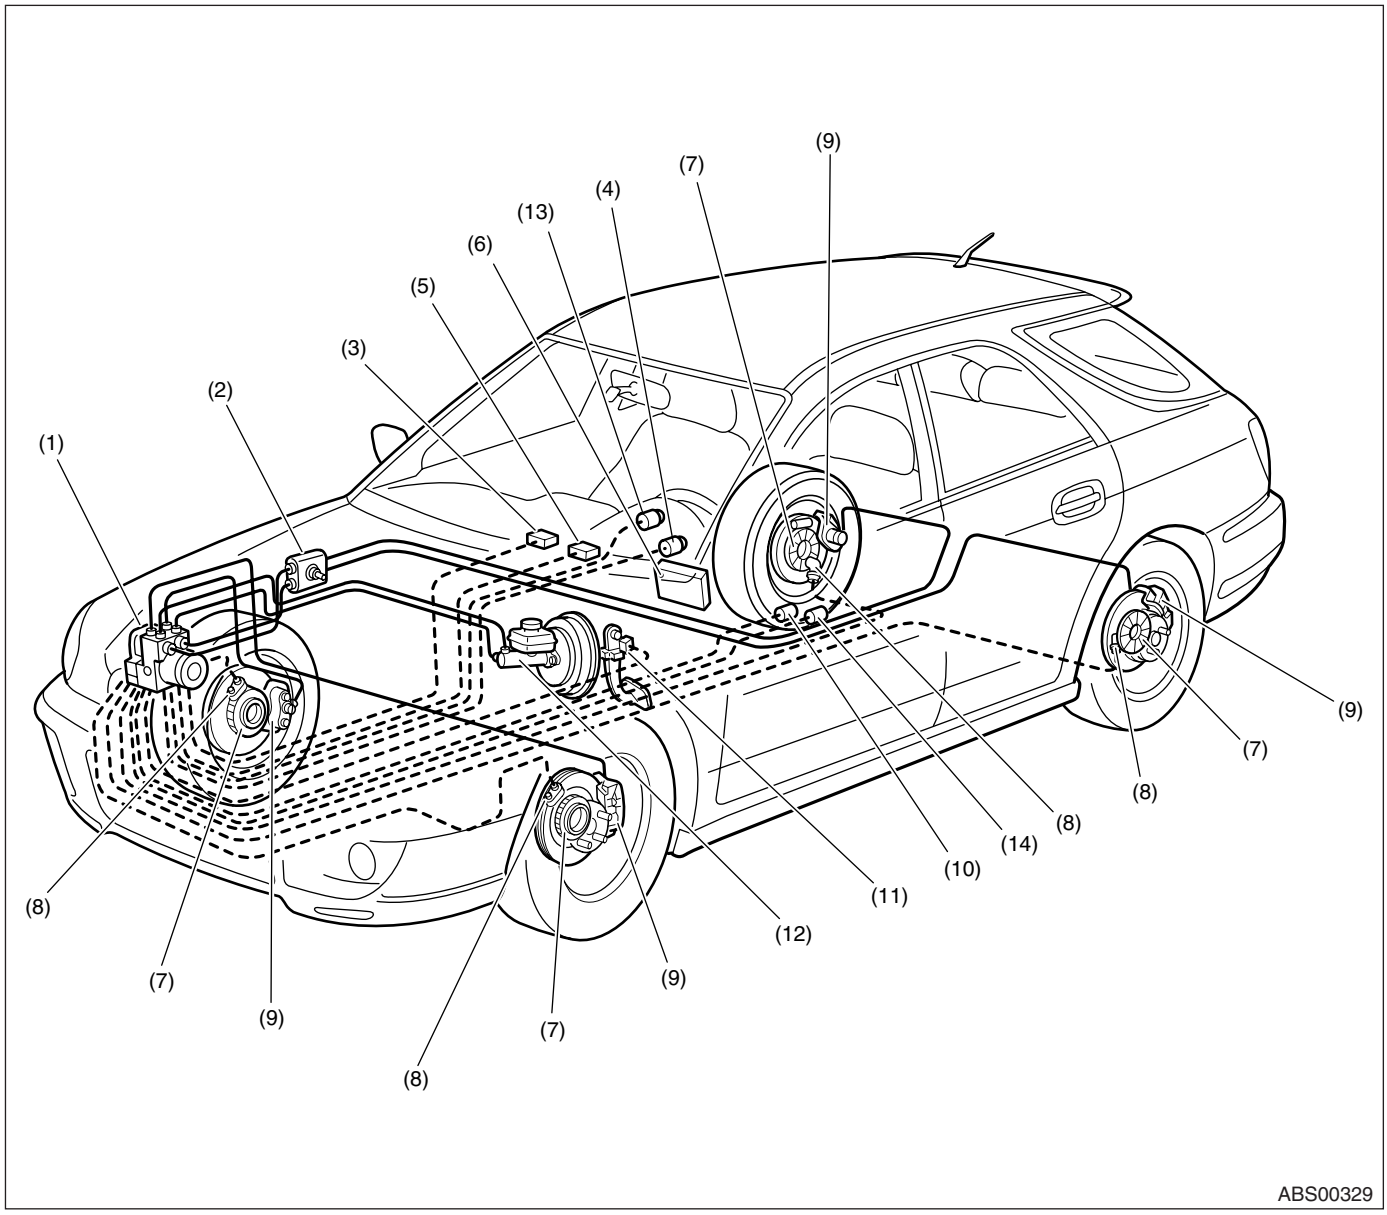

(1) ABS control module and hydraulic control unit (ABSCM&H/U)
(2) Connector
(3) Diagnosis connector
(4) ABS warning light
(5) Data link connector (for Subaru Select Monitor)
(6) Transmission control module (TCM) (AT model)
(7) Tone wheel
(8) ABS wheel speed sensor
(9) Wheel cylinder
(10) G sensor
(11) Stop light switch
(12) Master cylinder
(13) Brake & EBD warning light
(14) Lateral G sensor (STi model)

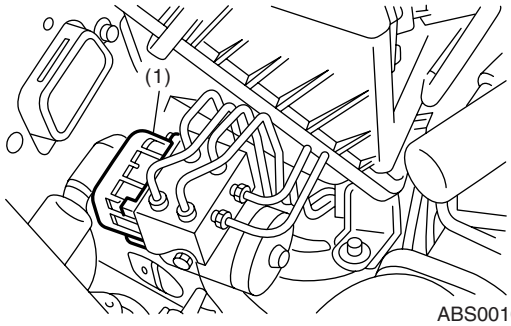

ABS00101

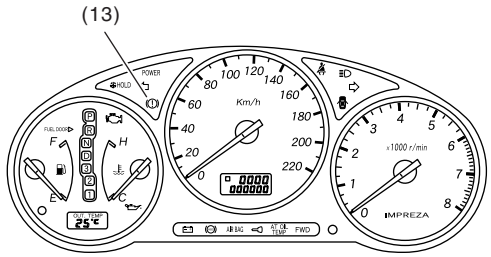

ABS00337

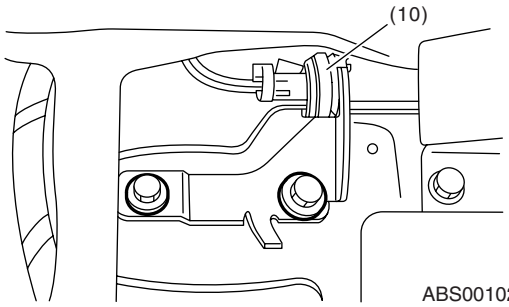

ABS00102

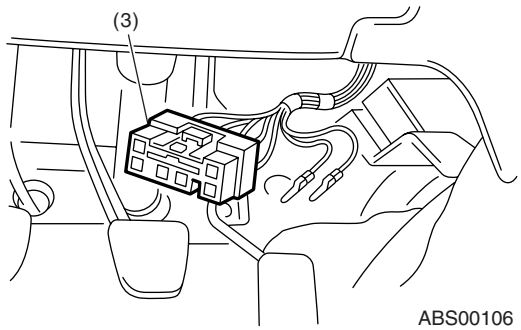

ABS00106

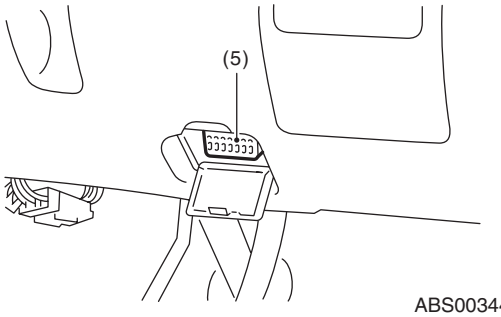

ABS00344

FRONT

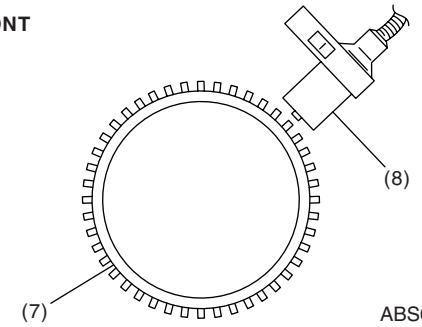

ABS00107

REAR

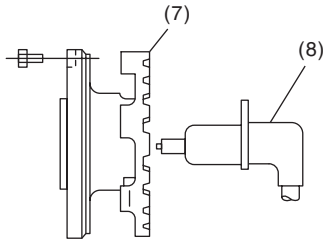

ABS00104

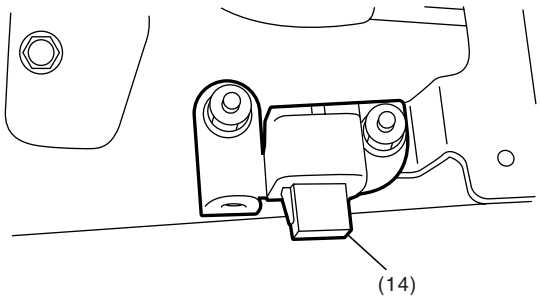

ABS00345

5. Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

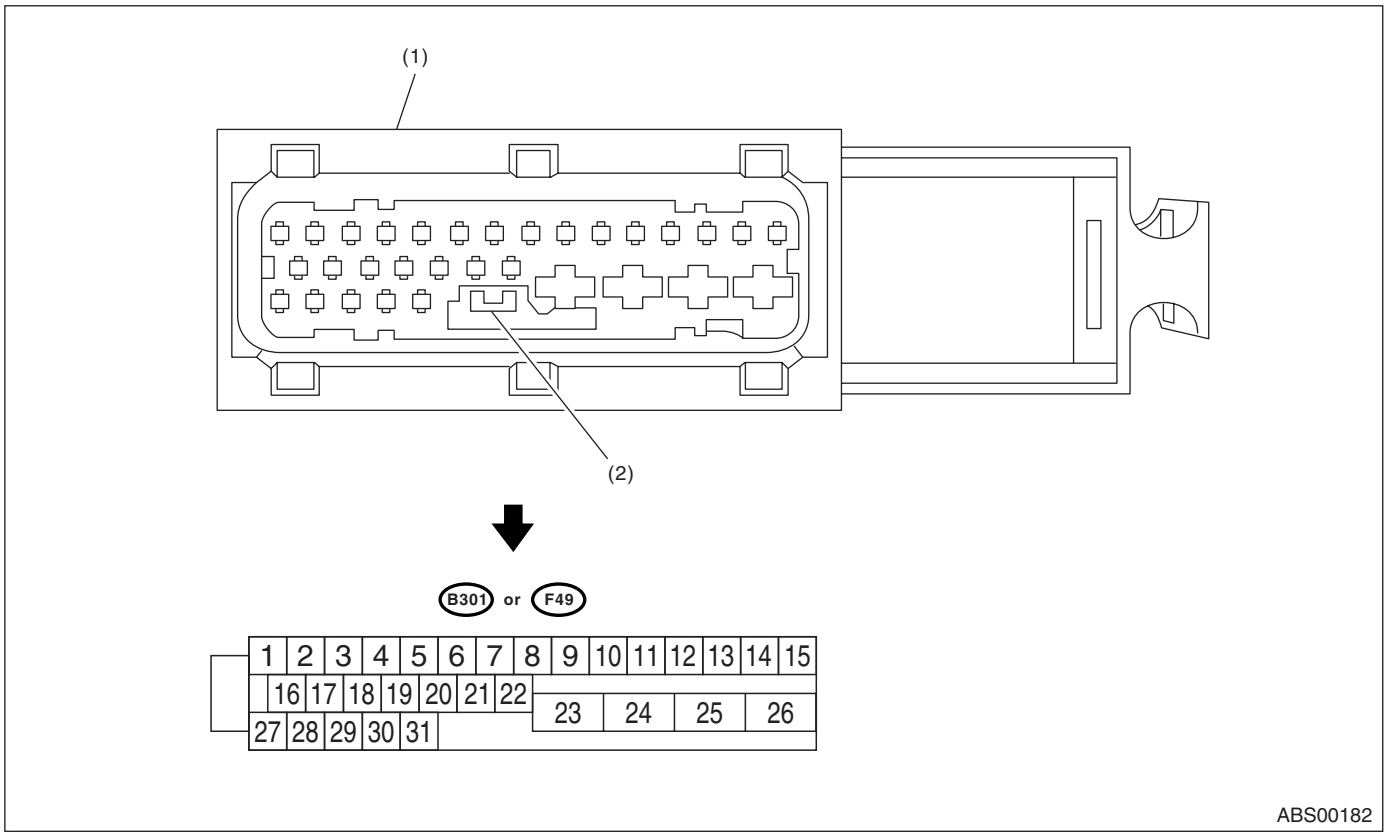

(1) ABS control module and hydraulic control unit (ABSCM&H/U) connector
(2) Connector switch

NOTE:
• The terminal numbers in ABS control module and hydraulic control unit connector are as shown in the figure.
• When the connector is removed from ABSCM&H/U, the connector switch closes the circuit between terminal No. 22 and No. 23. The ABS warning light illuminates.

CONTROL MODULE I/O SIGNAL

Contents		Terminal No. (+) — (–)	Input/Output signal Measured value and measuring conditions
ABS wheel speed sensor*2 (Wheel speed sensor)	Front left wheel	9 — 10	0.12 — 1 V (When it is 20 Hz.)
	Front right wheel	11 — 12	
	Rear left wheel	7 — 8	
	Rear right wheel	14 — 15	
Valve relay power supply*1		24 — 23	10 — 15 V
Motor relay power supply*1		25 — 23	10 — 15 V
G sensor*2	Power supply	30 — 28	4.75 — 5.25 V
	Ground	28	—
	Output	6 — 28	2.1 — 2.5 V when vehicle is in horizontal position.
Lateral G sensor (STi model)	Power supply	30 — 28	4.75 — 5.25 V
	Ground	28	—
	Output	29 — 28	2.3 — 2.7 V when vehicle is in horizontal position.
Stop light switch*1		2 — 23	Less than 1.5 V when the stop light is OFF and, 10 — 15 V when the stop light is ON.
ABS warning light*2		22 — 23	Less than 1.5 V within 1.5 seconds immediately after ignition switch has been turned to ON, and 10 — 15 V after 1.5 seconds has elapsed.
Brake warning light*2 (EBD warning light)		21 — 23	Less than 1.5 V within 1.5 seconds immediately after ignition switch has been turned to ON, and 10 — 15 V after 1.5 seconds has elapsed.
AT ABS signal (AT models only)		31 — 23	Less than 1.5 V when the ABS control still operates and more than 5.5 V when ABS does not operate.
ABS operation signal monitor		3 — 23	Less than 1.5 V when the ABS control still operates and more than 5.5 V when ABS does not operate.
Subaru Select Monitor*2	Data is received.	20 — 23	Less than 1.5 V when no data is received.
	Data is sent.	5 — 23	4.75 — 5.25 V when no data is sent.
ABS diagnosis connector	Terminal No. 3	29 — 23	10 — 15 V when ignition switch is ON.
	Terminal No. 6	4 — 23	10 — 15 V when ignition switch is ON.
Power supply*1		1 — 23	10 — 15 V when ignition switch is ON.
Grounding line		23	—
Grounding line		26	—

*1: Measure the I/O signal voltage after removing the connector from the ABSCM&H/U terminal.
*2: Measure the I/O signal voltage at connector (F2).

B: SCHEMATIC

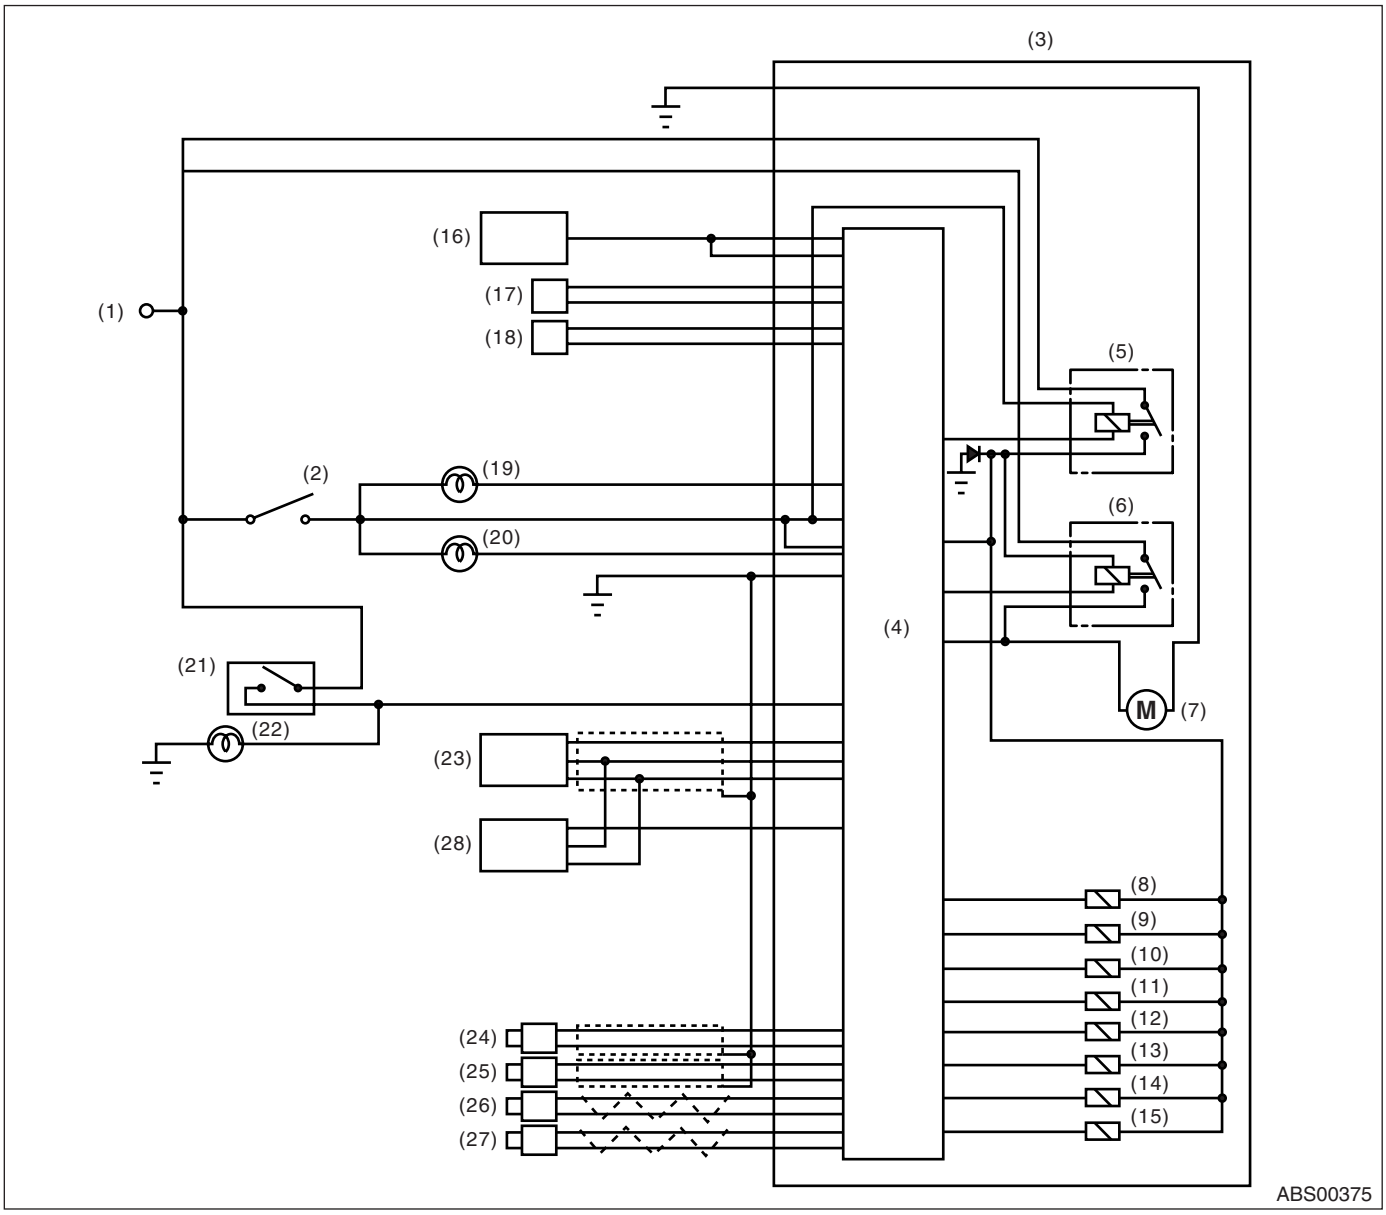

(1) Battery
(2) IGN
(3) ABS control module and hydraulic control unit (ABSCM&H/U)
(4) ABS control module area
(5) Valve relay
(6) Motor relay
(7) Motor
(8) Front inlet solenoid valve LH
(9) Front outlet solenoid valve LH
(10) Front inlet solenoid valve RH
(11) Front outlet solenoid valve RH
(12) Rear inlet solenoid valve LH
(13) Rear outlet solenoid valve LH
(14) Rear inlet solenoid valve RH
(15) Rear outlet solenoid valve RH
(16) Transmission control module (TCM) (AT model)
(17) Diagnosis connector
(18) Data link connector
(19) Brake warning light
(20) ABS warning light
(21) Stop light switch
(22) Stop light
(23) G sensor
(24) Front ABS wheel speed sensor LH
(25) Front ABS wheel speed sensor RH
(26) Rear ABS wheel speed sensor LH
(27) Rear ABS wheel speed sensor RH
(28) Lateral G sensor (STi model)

C: WAVEFORM

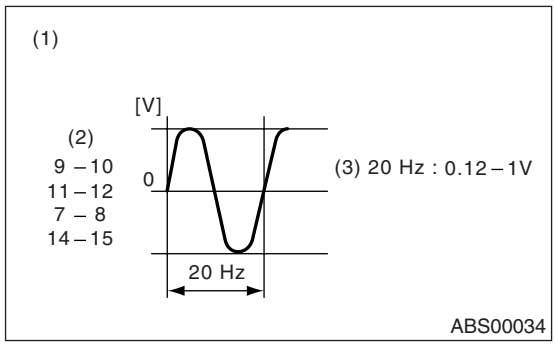

(1) ABS wheel speed sensor
(2) Terminal No.
(3) Standard output voltage

6. Subaru Select Monitor

A: OPERATION

1. READ DIAGNOSTIC TROUBLE CODE (DTC)

1) Prepare the Subaru Select Monitor kit.

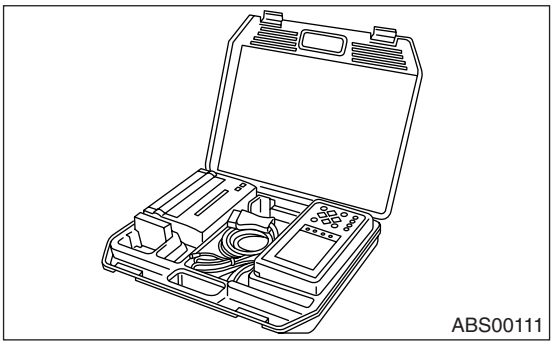

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor. <Ref. to ABS-10, SPECIAL TOOLS, PREPARATION TOOL, General Description.>

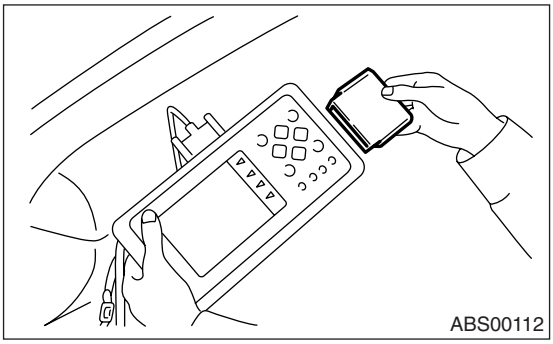

4) Connect the Subaru Select Monitor to data link connector.

(1) Data link connector located in the lower portion of instrument panel (on the driver's side).

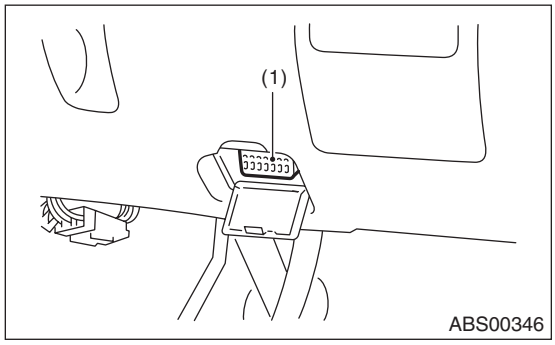

(1) Data link connector

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

5) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

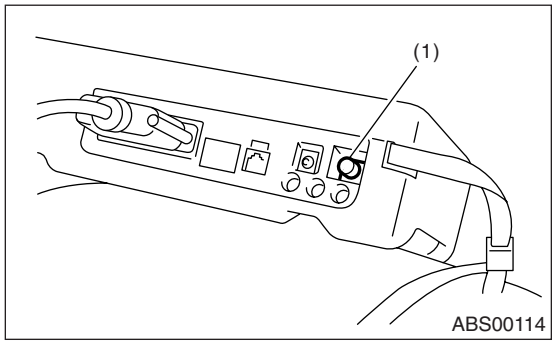

(1) Power switch

6) On the «Main Menu» display screen, select the {Each System Check} and press [YES] key.
7) On the «System Selection Menu» display screen, select the {Brake Control System} and press [YES] key.
8) Press the [YES] key after the information of engine type is displayed.
9) On the «ABS Diagnosis» display screen, select the {DTC Display} and press [YES] key.
10) On the «DTC Display» display screen, select the {Current DTC} or {History DTC} and press [YES] key.

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For detailed concerning the DTC, refer to the LIST OF DTC. <Ref. to ABS-24, List of Diagnostic Trouble Code (DTC).>
• A maximum of 3 DTCs are displayed in order of occurrence.
• If a particular DTC is not properly stored in memory (due to a drop in ABSCM&H/U power supply, etc.) when a problem occurs, the DTC, followed by a question mark “?”, appears on the Subaru Select Monitor display. This shows it may be an unreliable reading.

Display screen	Contents to be monitored
Latest	The most recent DTC appears on Subaru Select Monitor display.
Old	The second most recent DTC appears on Subaru Select Monitor display.
Older	The third most recent DTC appears on Subaru Select Monitor display.
Reference	DTC issued after elapse of a specified period of time.

2. READ CURRENT DATA

1) On the «Main Menu» display screen, select the {Each System Check} and press «YES» key.
2) On the «System Selection Menu» display screen, select the {Brake Control System} and press «YES» key.
3) Press the «YES» key after the information of ABS type is displayed.
4) On the «Brake Control Diagnosis» display screen, select the {Current Data Display & Save} and press «YES» key.
5) On the «Data Display Menu» display screen, select the {Data Display} and press «YES» key.
6) Using the scroll key, move the display screen up or down until desired data is shown.
• A list of the support data is shown in the following table.

Display screen	Contents to be monitored	Unit of measure
FR Wheel Speed	Wheel speed detected by Front ABS wheel speed sensor RH is displayed	km/h or MPH
FL Wheel Speed	Wheel speed detected by Front ABS wheel speed sensor LH is displayed	km/h or MPH
RR Wheel Speed	Wheel speed detected by Rear ABS wheel speed sensor RH is displayed	km/h or MPH
RL Wheel Speed	Wheel speed detected by Rear ABS wheel speed sensor LH is displayed	km/h or MPH
Stop Light Switch	Stop light switch signal	ON or OFF
Stop Light Switch	Stop light switch monitor voltage is displayed.	V
G Sensor Output Signal	Voltage equivalent to vehicle acceleration detected by analog G sensor is displayed.	V
Lateral G Sensor Output Signal	Lateral G detected by Lateral G sensor is displayed in voltage. (STi model)	V
Valve Relay Signal	Valve Relay Signal	ON or OFF
Motor Relay Signal	Motor Relay Signal	ON or OFF
ABS Signal to TCM	ABS operation signal from ABS control module to TCM	ON or OFF
ABS Warning Lamp	ON operation of ABS warning light is displayed.	ON or OFF
EBD Warning Light	ON operation of EBD warning light is displayed.	ON or OFF
Motor Relay Monitor	Operating condition of motor relay is displayed.	ON or OFF
Valve Relay Monitor	Operating condition of the valve relay is displayed.	ON or OFF
CCM Signal	ABS operation signal from ABS control module to TCM	ON or OFF

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

3. CLEAR MEMORY MODE

1) On the «Main Menu» display screen, select the {2. Each System Check} and press «YES» key.
2) On the «System Select Menu» display screen, select the {Brake System} and press «YES» key.
3) Press the «YES» key after the information of engine type is displayed.
4) On the «Brake Control Diagnosis» display screen, select the {Clear Memory} and press «YES» key.

Display screen	Contents to be monitored
Clear memory?	Function of clearing DTC.

5) When the “Done” and “turn ignition switch to OFF” are shown on display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:
For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

4. ABS SEQUENCE CONTROL

Display screen	Contents to be monitored	Index No.
ABS sequence control	Perform ABS sequence control by operating valve and pump motor sequentially.	<Ref. to ABS-10, ABS Sequence Control.>

5. FREEZE FRAME DATA

NOTE:
• Data stored at the time of trouble occurrence is shown on display.
• Each time trouble occurs, the latest information is stored in the freeze frame data in memory.
• Freeze frame data will be memorized maximum to three.
• If freeze frame data is not properly stored in memory (due to a drop in ABSCM power supply, etc.), a DTC, preceded by a question mark "?", appears on the Subaru Select Monitor display. This shows it may be an unreliable reading.

Display screen	Contents to be monitored
FR wheel speed	Wheel speed detected by Front ABS wheel speed sensor RH is displayed in km/h or mile/h.
FL wheel speed	Wheel speed detected by Front ABS wheel speed sensor LH is displayed in km/h or mile/h.
RR wheel speed	Wheel speed detected by Rear ABS wheel speed sensor RH is displayed in km/h or mile/h.
RL wheel speed	Wheel speed detected by Rear ABS wheel speed sensor LH is displayed in km/h or mile/h.
ABSCM power voltage	Power (in volts) supplied to ABSCM& H/U appears on the Subaru Select Monitor display.
G sensor output voltage	Voltage equivalent to vehicle acceleration detected by analog G sensor is displayed.
Lateral G sensor output voltage	Voltage equivalent to Lateral G detected by analog Lateral G sensor is displayed.
Motor relay monitor	Motor relay operation monitor signal
Stop light switch	Stop light switch signal
ABS signal to TCM	ABS operation signal from ABS control module to TCM
ABS-AT control	ABS operation signal from ABS control module to TCM
ABS operation signal	ABS operation signal
Condition of malfunction	Displays if the malfunction has occurred to ABS only, or to ABS and EBD.

6. ANALOG DATA ARE DISPLAYED

Display screen	Contents to be monitored
FR wheel speed	Wheel speed detected by Front ABS wheel speed sensor RH is displayed in km/h or mile/h.
FL wheel speed	Wheel speed detected by Front ABS wheel speed sensor LH is displayed in km/h or mile/h.
RR wheel speed	Wheel speed detected by Rear ABS wheel speed sensor RH is displayed in km/h or mile/h.
RL wheel speed	Wheel speed detected by Rear ABS wheel speed sensor LH is displayed in km/h or mile/h.
Stop light switch	Stop light switch monitor voltage is displayed.
G sensor output voltage	Refers to vehicle acceleration detecting by analog G sensor. It appears on the Subaru Select Monitor display in volts.
Lateral G sensor output voltage	Voltage equivalent to Lateral G detected by analog Lateral G sensor is displayed.

7. ON/OFF DATA ARE DISPLAYED

Display screen	Contents to be monitored
Stop light switch	Stop light switch signal
Valve relay signal	Valve relay signal
Motor relay signal	Motor relay signal
ABS signal to TCM	ABS operation signal from ABS control module to TCM
ABS warning light	ABS warning light
Valve relay monitor	Valve relay operation monitor signal
Motor relay monitor	Motor relay operation monitor signal
CCM signal	ABS operation signal from ABS control module to TCM

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. WITHOUT SUBARU SELECT MONITOR

1) Take out the diagnosis connector from side of driver's seat.

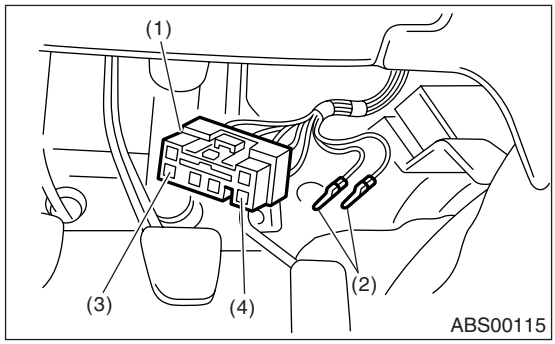

(1) Diagnosis connector
(2) Ground terminal
(3) Terminal No. 3
(4) Terminal No. 6

2) Turn the ignition switch to OFF.
3) Connect the diagnosis connector terminal 6 to Ground terminal.
4) Turn the ignition switch to ON.
5) ABS warning light is set in the diagnostic mode and blinks to identify DTC.
6) After the start code (11) is shown, the DTCs will be shown in order of the last information first.
These repeat for a maximum of 3 minutes.

NOTE:
• When there are no DTCs in memory, only the start code (11) is shown.
• When on-board diagnosis of the ABS control module detects a problem, the information (up to a maximum of three) will be stored in EEP ROM as a DTC. When there are more than three, the most recent three will be stored. (Stored codes will stay in memory until they are cleared.)

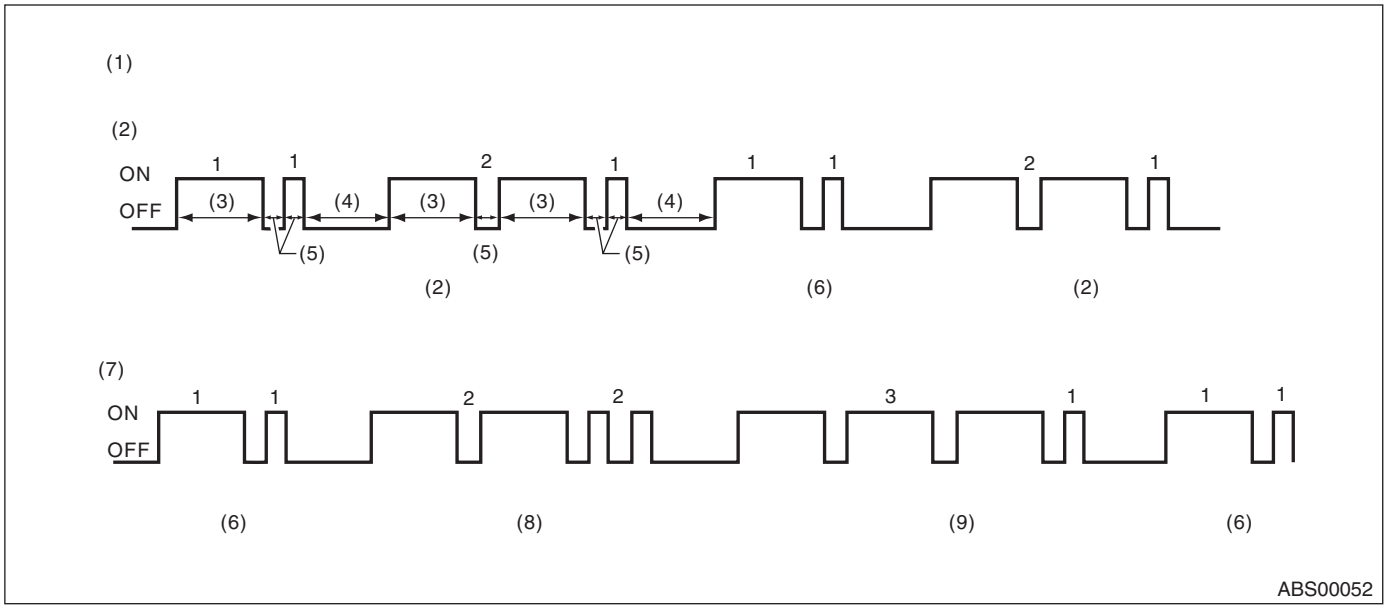

(1) Example of DTC indication
(2) DTC: 21
(3) 1.2 sec.
(4) 1.0 sec.
(5) 0.3 sec.
(6) Start code
(7) DTC: 22, 31
(8) DTC: 22
(9) DTC: 31

2. WITH SUBARU SELECT MONITOR

Refer to SUBARU SELECT MONITOR for information about how to obtain and understand DTCs. <Ref. to ABS-17, Subaru Select Monitor.>

8. Inspection Mode

A: OPERATION

Reproduce the condition under which the problem has occurred as much as possible.
Drive the vehicle at a speed more than 40 km/h (25 MPH) for at least 1 minute.

9. Clear Memory Mode

A: OPERATION

1. WITHOUT SUBARU SELECT MONITOR

1) After calling up a DTC, disconnect the diagnosis connector terminal 6 from Ground terminal.

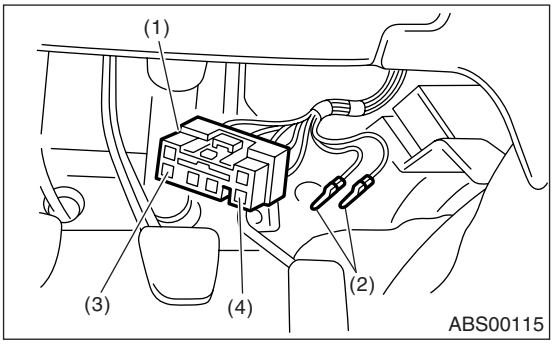

(1) Diagnosis connector
(2) Ground terminal
(3) Terminal No.3
(4) Terminal No.6

2) Repeat 3 times within approx. 12 seconds; connecting and disconnecting terminal 6 and Ground terminal for at least 0.2 seconds each time.

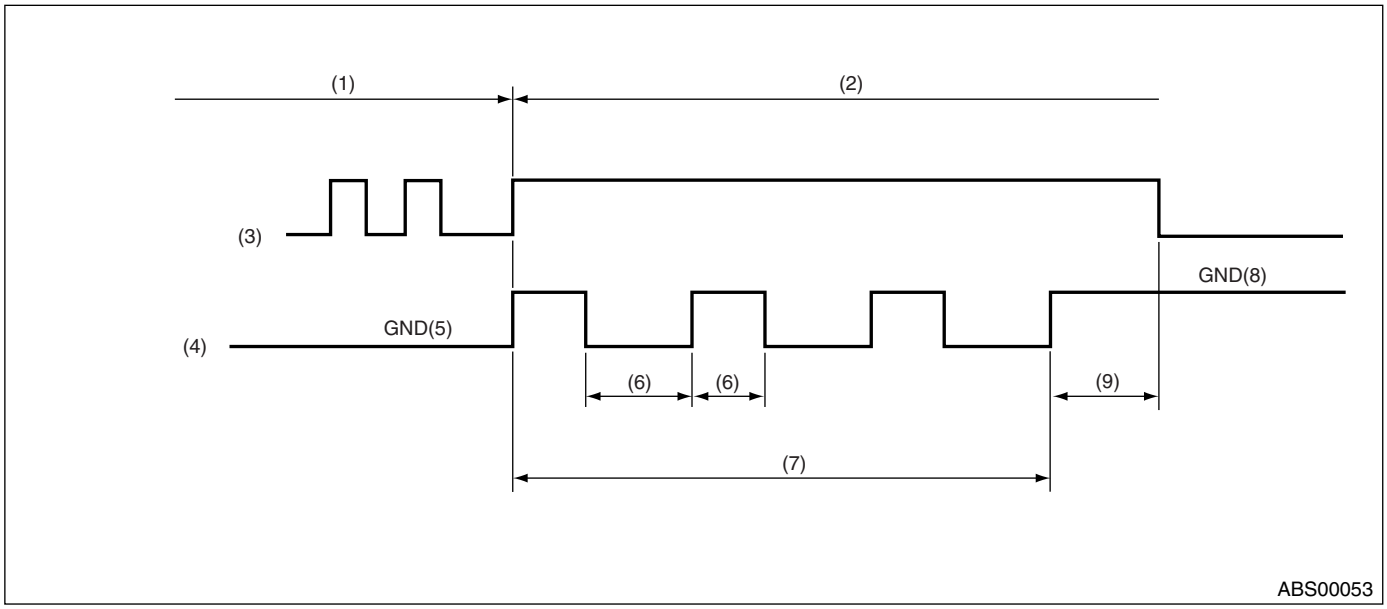

(1) Diagnostic trouble code (DTC) indication mode
(2) Clear memory mode
(3) ABS warning lamp
(4) Terminal No.8
(5) Low level
(6) 0.2 sec. or more
(7) 12 sec. or less
(8) Open (high level)
(9) 1.5 sec.

NOTE:
After the diagnostics is completed, make sure to clear memory. Make sure only start code (11) is shown after memory is cleared.

2. WITH SUBARU SELECT MONITOR

Refer to SUBARU SELECT MONITOR for information about how to clear DTC. <Ref. to ABS-17, Subaru Select Monitor.>

10.ABS Warning Light/Brake Warning Light Illumination Pattern

A: INSPECTION

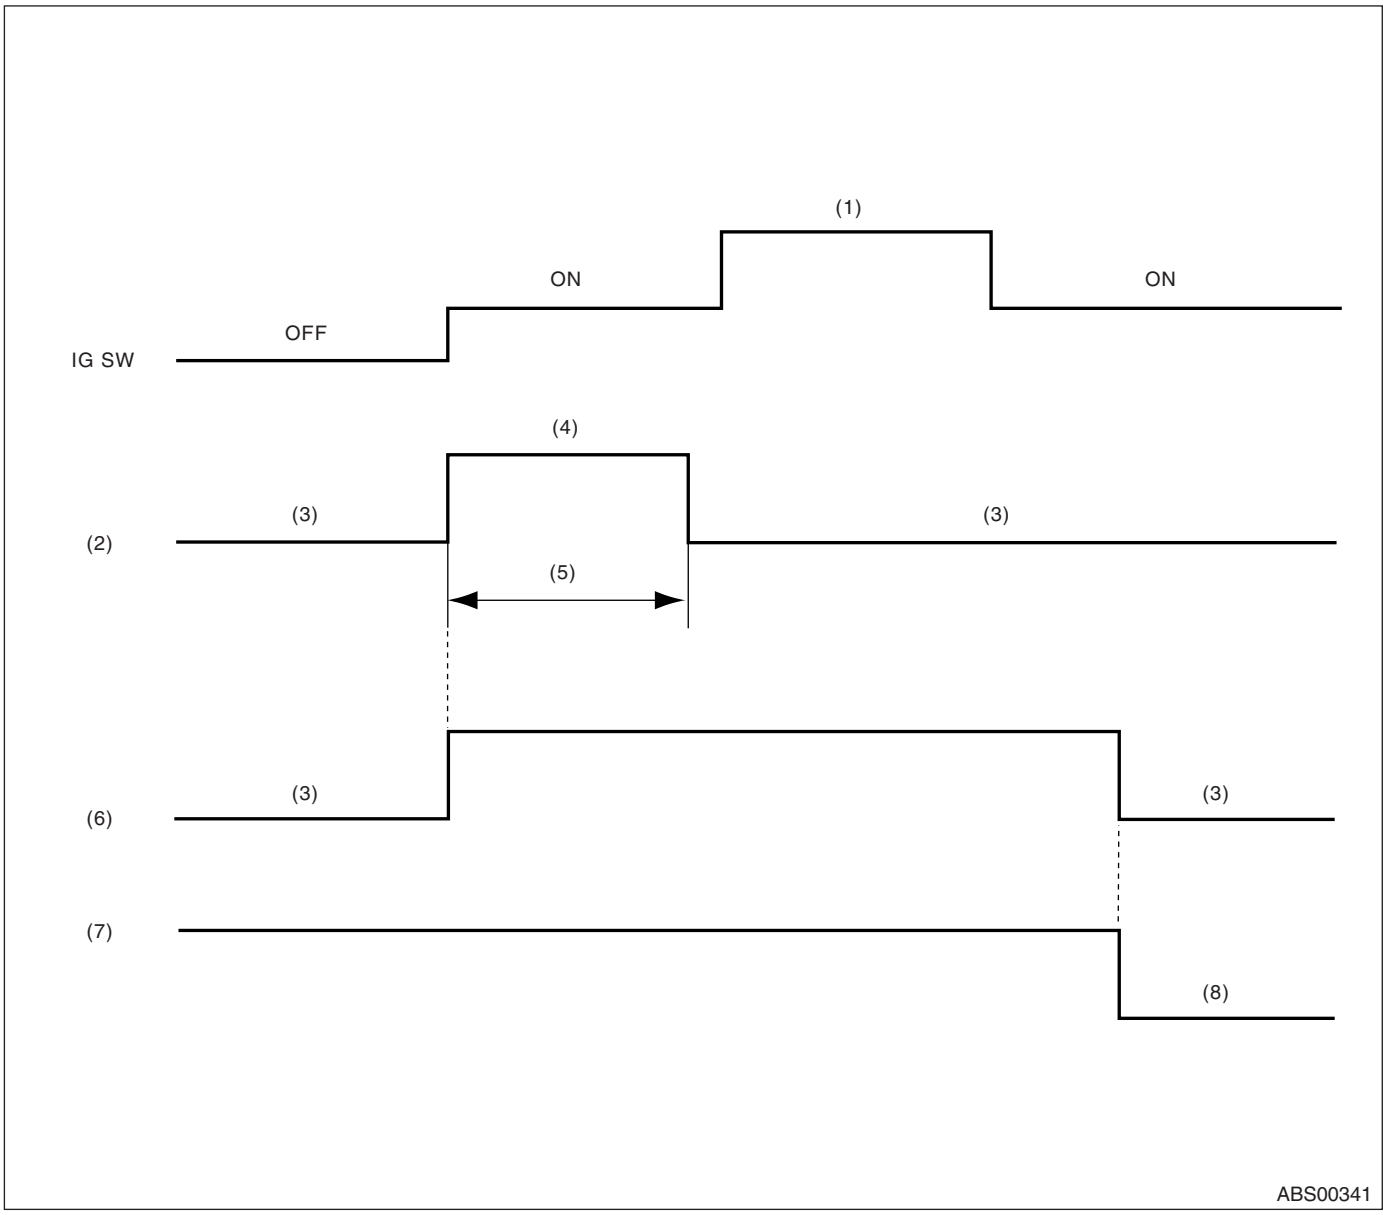

(1) START
(2) ABS warning light
(3) Goes out
(4) Illuminates
(5) 1.5 sec.
(6) Brake warning light
(7) Parking brake
(8) Release

1) When the ABS warning light does not illuminate in accordance with this illumination pattern, there must be an electrical malfunction.
2) When the ABS warning light remains constantly OFF, repair the ABS warning light circuit or diagnosis circuit. <Ref. to ABS-29, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

NOTE:
Even though the ABS warning light does not go out 1.5 seconds after it illuminates, the ABS system operates normally when the warning light goes out while driving at approx. 12 km/h (7 MPH). However, the Anti-lock brakes do not work while ABS warning light is illuminated.

11.List of Diagnostic Trouble Code (DTC)

A: LIST

1. WITHOUT SUBARU SELECT MONITOR

DTC	Contents of diagnosis		Index No.
—	ABS warning light does not illuminate.		<Ref. to ABS-29, ABS WARNING LIGHT DOES NOT COME ON, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
—	ABS warning light remains on.		<Ref. to ABS-34, ABS WARNING LIGHT DOES NOT GO OFF, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
—	Brake warning light remains on.		<Ref. to ABS-38, BRAKE WARNING LIGHT DO NOT GO OFF, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
—	DTC does not illuminate.		<Ref. to ABS-41, DTC DOES NOT APPEAR, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
11	Start code • DTC is shown after start code. • Only start code is shown in normal condition.		—
21	Abnormal ABS wheel speed sensor (Open circuit or input voltage too high)	Front ABS wheel speed sensor RH	<Ref. to ABS-43, DTC 21 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (FRONT RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
23		Front ABS wheel speed sensor LH	<Ref. to ABS-43, DTC 23 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (FRONT LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
25		Rear ABS wheel speed sensor RH	<Ref. to ABS-43, DTC 25 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
27		Rear ABS wheel speed sensor LH	<Ref. to ABS-44, DTC 27 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
22	Abnormal ABS wheel speed sensor (Abnormal ABS wheel speed sensor signal)	Front ABS wheel speed sensor RH	<Ref. to ABS-50, DTC 22 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (FRONT RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
24		Front ABS wheel speed sensor LH	<Ref. to ABS-50, DTC 24 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (FRONT LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
26		Rear ABS wheel speed sensor RH	<Ref. to ABS-50, DTC 26 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
28		Rear ABS wheel speed sensor LH	<Ref. to ABS-51, DTC 28 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
29		Any one of four	<Ref. to ABS-58, DTC 29 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (ANY ONE OF FOUR) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

DTC	Contents of diagnosis		Index No.
31	Inlet valve, outlet valve in hydraulic control unit	Front inlet valve RH	<Ref. to ABS-63, DTC 31 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
32		Front outlet valve RH	<Ref. to ABS-67, DTC 32 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
33		Front inlet valve LH	<Ref. to ABS-63, DTC 33 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
34		Front outlet valve LH	<Ref. to ABS-67, DTC 34 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
35		Rear inlet valve RH	<Ref. to ABS-63, DTC 35 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
36		Rear outlet valve RH	<Ref. to ABS-67, DTC 36 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR RH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
37		Rear inlet valve LH	<Ref. to ABS-64, DTC 37 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
38		Rear outlet valve LH	<Ref. to ABS-68, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
41	Abnormal ABS control module		<Ref. to ABS-71, DTC 41 — ABNORMAL ABS CONTROL MODULE —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
42	Source voltage is abnormal.		<Ref. to ABS-73, DTC 42 — SOURCE VOLTAGE IS ABNORMAL —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
44	A combination of AT control abnormal		<Ref. to ABS-76, DTC 44 — A COMBINATION OF AT CONTROL ABNORMAL —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
51	Abnormal valve relay		<Ref. to ABS-79, DTC 51 — ABNORMAL VALVE RELAY —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
52	Abnormal motor and/or motor relay		<Ref. to ABS-82, DTC 52 — ABNORMAL MOTOR AND/OR MOTOR RELAY —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
54	Abnormal stop light switch		<Ref. to ABS-85, DTC 54 — ABNORMAL STOP LIGHT SWITCH —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
56	Abnormal G sensor output voltage		<Ref. to ABS-87, DTC 56 — ABNORMAL G SENSOR OUTPUT VOLTAGE —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>
73	Abnormal Lateral G sensor output voltage		<Ref. to ABS-91, DTC 73 — ABNORMAL LATERAL G SENSOR OUTPUT VOLTAGE —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

2. WITH SUBARU SELECT MONITOR

DTC	Sub code No.	Display screen	Contents of diagnosis	Index No.
—	—	Communication for initializing impossible	Subaru Select Monitor communication failure	<Ref. to ABS-95, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
—	—	No DTC	Although no DTC appears on the Subaru Select Monitor display, the ABS warning light remains on.	<Ref. to ABS-98, NO DTC, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

DTC	Sub code No.	Display screen	Contents of diagnosis	Index No.
21	4A02	Open or short circuit in Front ABS wheel speed sensor RH circuit	Open or short circuit in Front ABS wheel speed sensor RH circuit	<Ref. to ABS-102, DTC 21 — OPEN OR SHORT CIRCUIT IN FRONT RIGHT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
22	48C5, 4945 48E5, 4845 4905, 4885	Front ABS wheel speed sensor RH abnormal signal	Front ABS wheel speed sensor RH abnormal signal	<Ref. to ABS-110, DTC 22 — FRONT RIGHT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
23	4202	Open or short circuit in Front ABS wheel speed sensor LH circuit	Open or short circuit in Front ABS wheel speed sensor LH circuit	<Ref. to ABS-102, DTC 23 — OPEN OR SHORT CIRCUIT IN FRONT LEFT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
24	40C5, 4145 40E5, 4045 4105, 4085	Front ABS wheel speed sensor LH abnormal signal	Front ABS wheel speed sensor LH abnormal signal	<Ref. to ABS-110, DTC 24 — FRONT LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
25	4602	Open or short circuit in Rear ABS wheel speed sensor RH circuit	Open or short circuit in Rear ABS wheel speed sensor RH circuit	<Ref. to ABS-102, DTC 25 — OPEN OR SHORT CIRCUIT IN REAR RIGHT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
26	44C5, 4545 44E5, 4445 4505, 4485	Rear ABS wheel speed sensor RH abnormal signal	Rear ABS wheel speed sensor RH abnormal signal	<Ref. to ABS-110, DTC 26 — REAR RIGHT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
27	4E02	Open or short circuit in Rear ABS wheel speed sensor LH circuit	Open or short circuit in Rear ABS wheel speed sensor LH circuit	<Ref. to ABS-103, DTC 27 — OPEN OR SHORT CIRCUIT IN REAR LEFT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
28	4CC5, 4D45 4CE5, 4C45 4D05, 4C85	Rear ABS wheel speed sensor LH abnormal signal	Rear ABS wheel speed sensor LH abnormal signal	<Ref. to ABS-111, DTC 28 — REAR LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
29	5080 50C0	Abnormal ABS wheel speed sensor signal on any one of four sensor	Abnormal ABS wheel speed sensor signal on any one of four	<Ref. to ABS-117, DTC 29 — ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL ON ANY ONE OF FOUR SENSOR —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
31	3200	Front inlet valve RH malfunction	Front inlet valve RH malfunction	<Ref. to ABS-121, DTC 31 — FRONT RIGHT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
32	3600	Front outlet valve RH malfunction	Front outlet valve RH malfunction	<Ref. to ABS-124, DTC 32 — FRONT RIGHT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
33	2200	Front inlet valve LH malfunction	Front inlet valve LH malfunction	<Ref. to ABS-121, DTC 33 — FRONT LEFT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
34	2600	Front outlet valve LH malfunction	Front outlet valve LH malfunction	<Ref. to ABS-124, DTC 34 — FRONT LEFT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
35	2A00	Rear inlet valve RH malfunction	Rear inlet valve RH malfunction	<Ref. to ABS-121, DTC 35 — REAR RIGHT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
36	2E00	Rear outlet valve RH malfunction	Rear outlet valve RH malfunction	<Ref. to ABS-124, DTC 36 — REAR RIGHT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
37	3A00	Rear inlet valve LH malfunction	Rear inlet valve LH malfunction	<Ref. to ABS-122, DTC 37 — REAR LEFT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
38	3E00	Rear outlet valve LH malfunction	Rear outlet valve LH malfunction	<Ref. to ABS-125, DTC 38 — REAR LEFT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

DTC	Sub code No.	Display screen	Contents of diagnosis	Index No.
41	02A0, 0040, 0020, 02C0, 00E0, 0340, 0140, 0160, 0280, 0460, 0260, 0060, 0080, 0300	ABS control module malfunction	ABS control module and hydraulic control unit malfunction	<Ref. to ABS-128, DTC 41 — ABS CONTROL MODULE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
42	5A00	Power supply voltage too low	Power supply voltage too low	<Ref. to ABS-130, DTC 42 — POWER SUPPLY VOLTAGE TOO LOW —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	5A80	Power supply voltage too high	Power supply voltage too high	<Ref. to ABS-133, DTC 42 — POWER SUPPLY VOLTAGE TOO HIGH —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
44	1600	ABS-AT control (Non Controlled)	ABS-AT control (Non Controlled)	<Ref. to ABS-136, DTC 44 — ABS-AT CONTROL (NON CONTROLLED) —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	1500	ABS-AT control (Controlled)	ABS-AT control (Controlled)	<Ref. to ABS-138, DTC 44 — ABS-AT CONTROL (CONTROLLED) —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
51	0C80 0EA0	Valve relay malfunction	Valve relay malfunction	<Ref. to ABS-140, DTC 51 — VALVE RELAY MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	0C40	Valve relay ON failure	Valve relay ON failure	<Ref. to ABS-143, DTC 51 — VALVE RELAY ON FAILURE —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
52	10A1	Open circuit in motor relay circuit	Open circuit in motor relay circuit	<Ref. to ABS-145, DTC 52 — OPEN CIRCUIT IN MOTOR RELAY CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	10E1	Motor relay ON failure	Motor relay ON failure	<Ref. to ABS-147, DTC 52 — MOTOR RELAY ON FAILURE —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	10C1	Motor malfunction	Motor malfunction	<Ref. to ABS-149, DTC 52 — MOTOR MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
54	5600	Stop light switch signal circuit malfunction	Stop light switch signal circuit malfunction	<Ref. to ABS-151, DTC 54 — STOP LIGHT SWITCH SIGNAL CIRCUIT MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
56	7600	Open or short circuit in G sensor circuit	Open or short circuit in G sensor circuit	<Ref. to ABS-153, DTC 56 — OPEN OR SHORT CIRCUIT IN G SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	7580	Battery short in G sensor circuit	Battery short in G sensor circuit	<Ref. to ABS-157, DTC 56 — BATTERY SHORT IN G SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	7540	Abnormal G sensor high μ output	Abnormal G sensor high μ output	<Ref. to ABS-162, DTC 56 — ABNORMAL G SENSOR HIGH μ OUTPUT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	7500	Detection of G sensor stick	Detection of G sensor stick	<Ref. to ABS-166, DTC 56 — DETECTION OF G SENSOR STICK —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

DTC	Sub code No.	Display screen	Contents of diagnosis	Index No.
73	7A00	Open or short circuit in Lateral G sensor circuit	Open or short circuit in Lateral G sensor circuit	<Ref. to ABS-170, DTC 73 — OPEN OR SHORT CIRCUIT IN LATERAL G SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	7980	Battery short in Lateral G sensor circuit	Battery short in Lateral G sensor circuit	<Ref. to ABS-174, DTC 73 — BATTERY SHORT IN LATERAL G SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	7940	Abnormal Lateral G sensor high μ output	Abnormal Lateral G sensor high μ output	<Ref. to ABS-179, DTC 73 — ABNORMAL LATERAL G SENSOR HIGH μ OUTPUT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>
	7900	Detection of Lateral G sensor stick	Detection of Lateral G sensor stick	<Ref. to ABS-183, DTC 73 — DETECTION OF LATERAL G SENSOR STICK —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

12.Diagnostics Procedure without Diagnostic Trouble Code (DTC)

A: ABS WARNING LIGHT DOES NOT COME ON

DIAGNOSIS:

- ABS warning light circuit is open or shorted.

TROUBLE SYMPTOM:

- When the ignition switch is turned to ON (engine OFF), ABS warning light does not come on.

WIRING DIAGRAM:
LHD MODEL

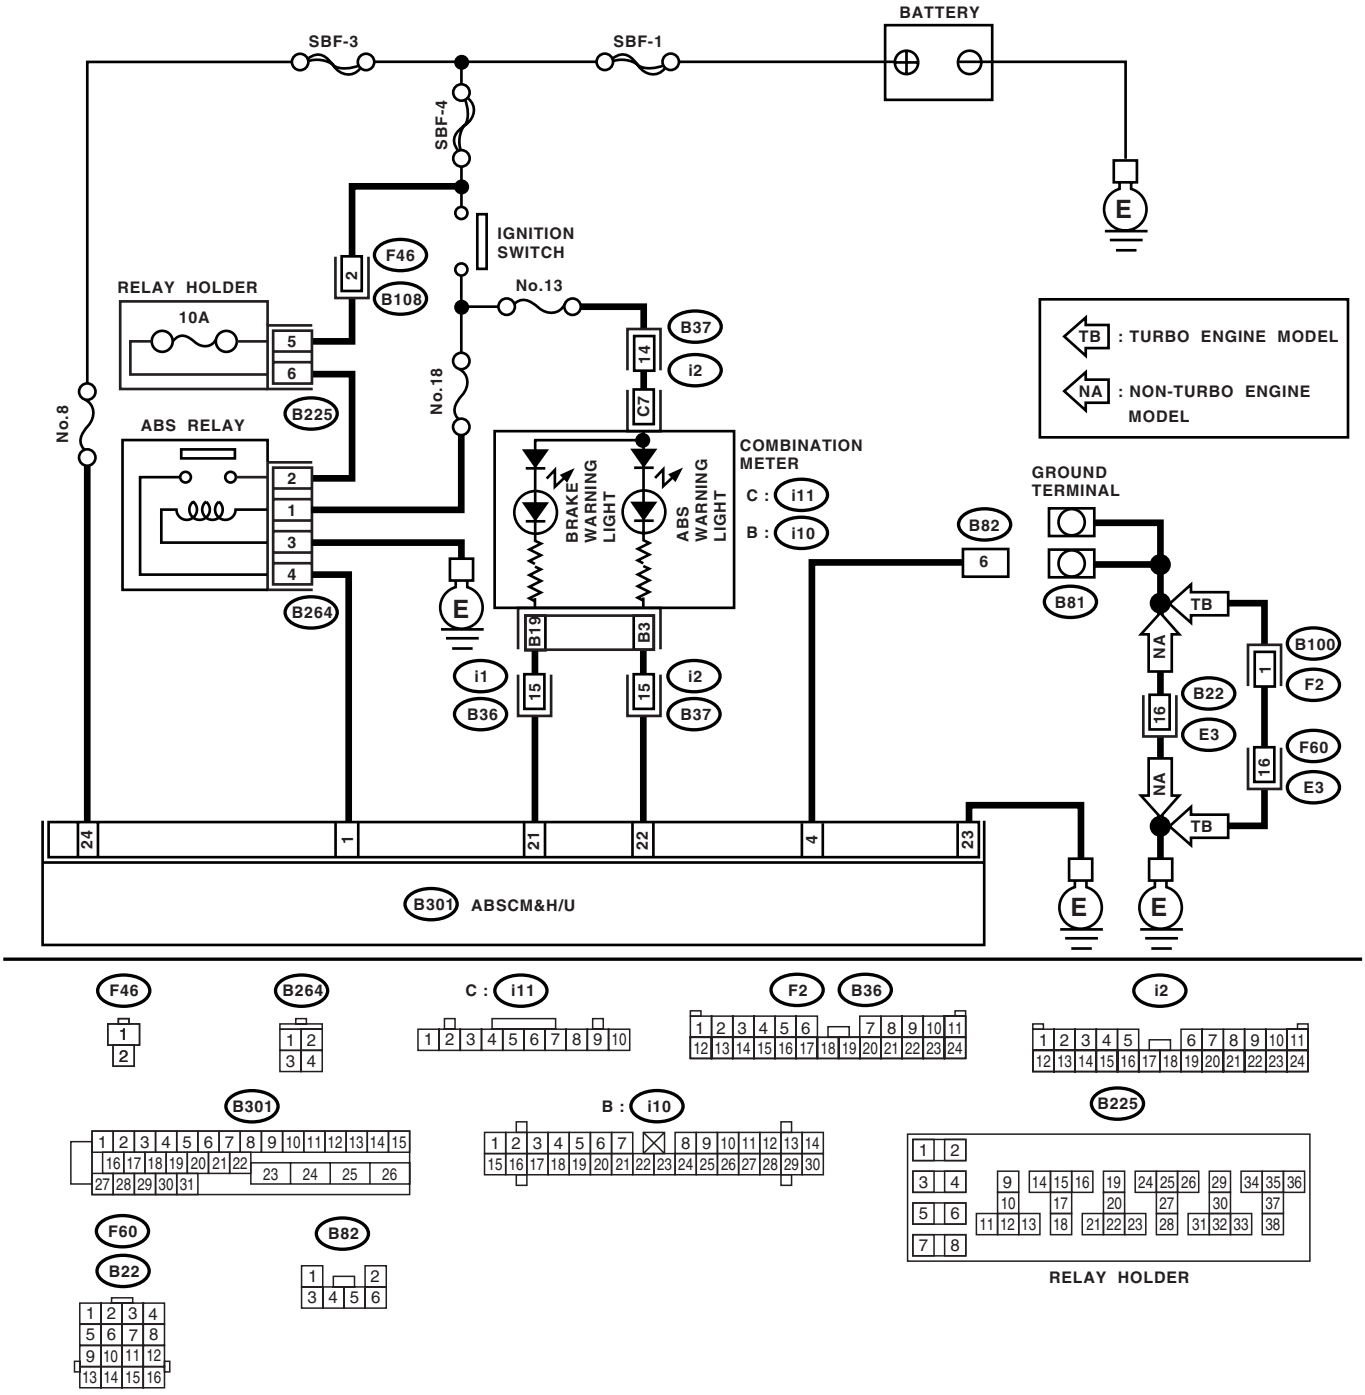

ABS00347

RHD MODEL

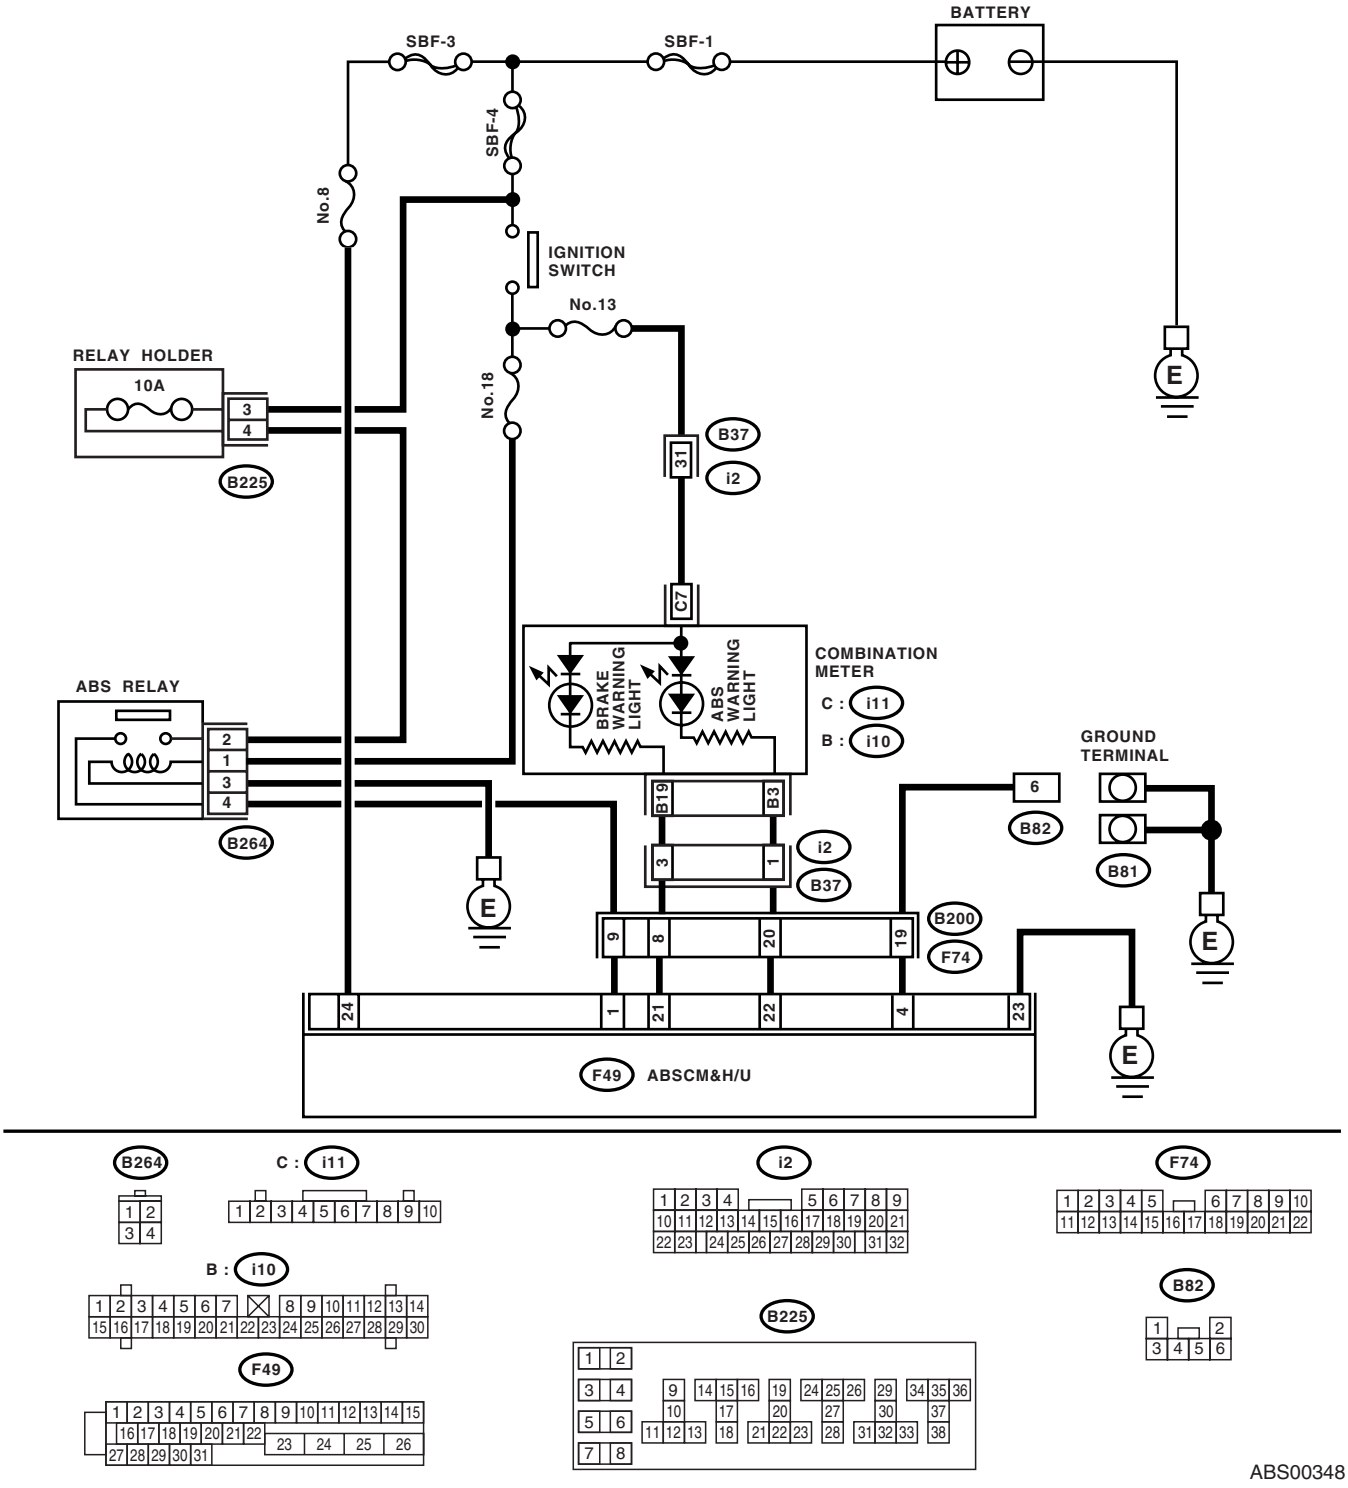

ABS00348

Step		Check	Yes	No
1	**CHECK IF OTHER WARNING LIGHTS TURN ON.** Turn the ignition switch to ON (engine OFF).	Are other warning lights turned on?	Go to step **2.**	Repair the combination meter. <Ref. to IDI-11, Combination Meter Assembly.>

	Step	Check	Yes	No
2	**CHECK ABS AND BRAKE WARNING LIGHT BULB.** 1)Turn the ignition switch to OFF. 2)Remove the combination meter. 3)Remove the ABS warning light and brake warning light.	Is the ABS warning light bulb open?	Replace the ABS and brake warning light bulb. <Ref. to IDI-11, Combination Meter Assembly.>	Go to step **3.**
3	**CHECK BATTERY SHORT OF ABS HARNESS.** 1)Disconnect the connector (i2) from connector (B37). 2)Measure the voltage between connector (i2) and chassis ground. ***Connector & terminal*** ***LHD: (i2) No. 15 (+) — Chassis ground (–):*** ***RHD: (i2) No. 1 (+) — Chassis ground (–):***	Is the voltage less than 3 V?	Go to step **4.**	Repair battery short in the warning light harness.
4	**CHECK BATTERY SHORT OF ABS AND BRAKE WARNING LIGHT HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between connector (i2) and chassis ground. ***Connector & terminal*** ***LHD: (i2) No. 15 (+) — Chassis ground (–):*** ***RHD: (i2) No. 1 (+) — Chassis ground (–):***	Is the voltage less than 3 V?	Go to step **5.**	Repair battery short in the warning light harness.
5	**CHECK WIRING HARNESS.** 1)Turn the ignition switch to OFF. 2)Install the combination meter. 3)Turn the ignition switch to ON. 4)Measure the voltage between connector (i2) and chassis ground. ***Connector & terminal*** ***LHD: (i2) No. 15 (+) — Chassis ground (–):*** ***RHD: (i2) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **6.**	Repair open circuit in the wiring harness.
6	**CHECK BATTERY SHORT OF ABS AND BRAKE WARNING LIGHT HARNESS.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between connector (B37) and chassis ground. ***Connector & terminal*** ***LHD: (B37) No. 15 (+) — Chassis ground (–):*** ***RHD: (B37) No. 1 (+) — Chassis ground (–):***	Is the voltage less than 3 V?	Go to step **7.**	Repair battery short in the wiring harness.
7	**CHECK BATTERY SHORT OF ABS AND BRAKE WARNING LIGHT HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between connector (B37) and chassis ground. ***Connector & terminal*** ***LHD: (B37) No. 15 (+) — Chassis ground (–):*** ***RHD: (B37) No. 1 (+) — Chassis ground (–):***	Is the voltage less than 3 V?	Go to step **8.**	Repair battery short in the wiring harness.

	Step	Check	Yes	No
8	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **9.**	Repair open circuit in the ABSCM&H/U ground harness.
9	**CHECK WIRING HARNESS.** Measure the resistance between connector (B37) and chassis ground. ***Connector & terminal*** ***LHD: (B37) No. 15 — Chassis ground:*** ***RHD: (B37) No. 1 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **10.**	Repair open circuit in the harness/connector.
10	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connectors between combination meter and ABSCM&H/U?	Repair the connector.	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

B: ABS WARNING LIGHT DOES NOT GO OFF

DIAGNOSIS:

- ABS warning light circuit is open or shorted.

TROUBLE SYMPTOM:

- When starting the engine and while ABS warning light is kept ON.

WIRING DIAGRAM:

LHD MODEL

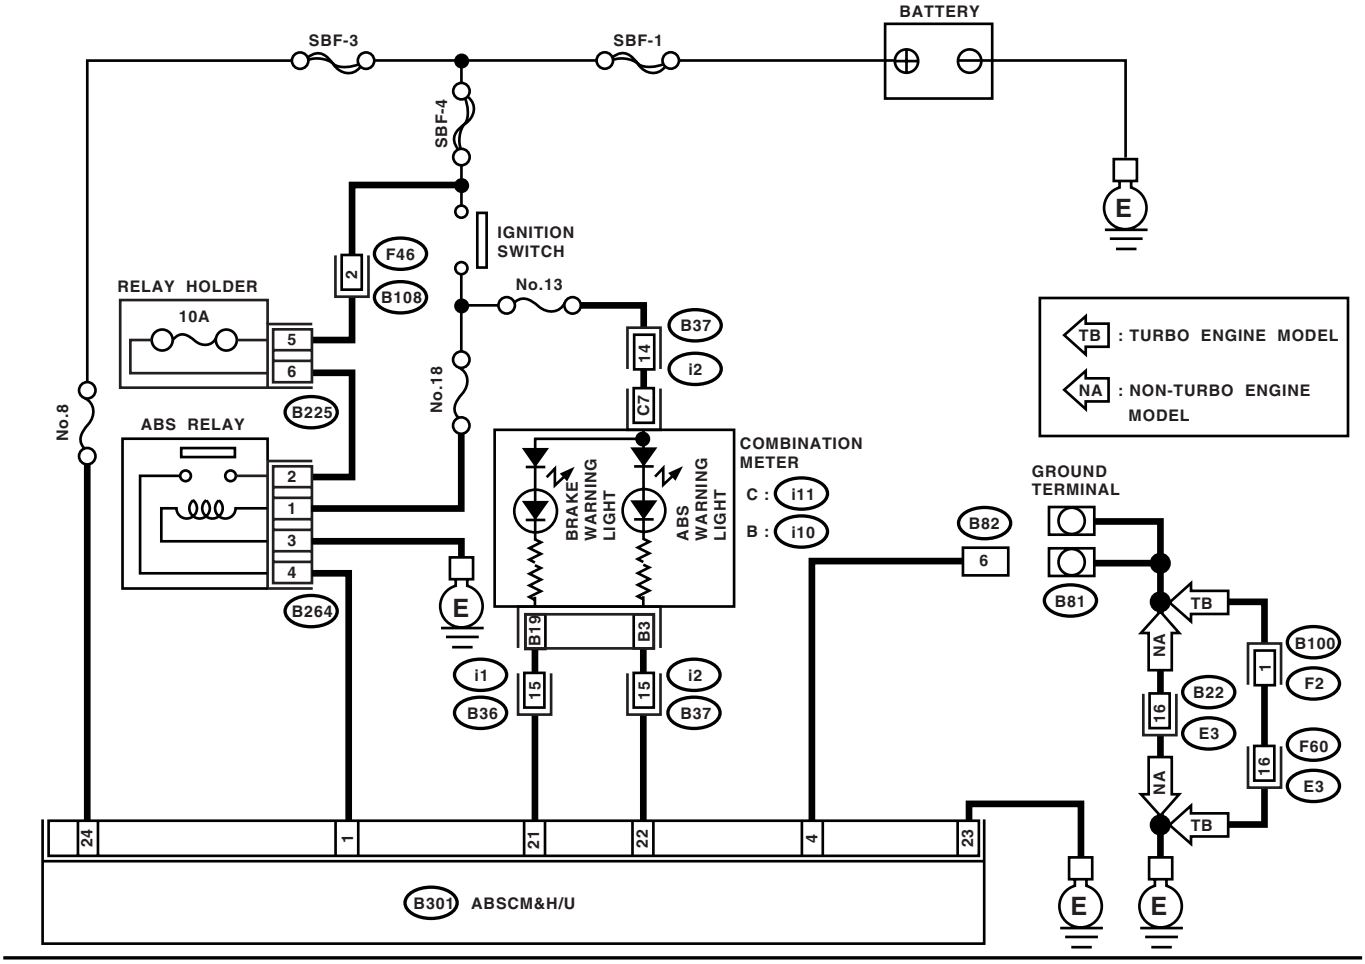

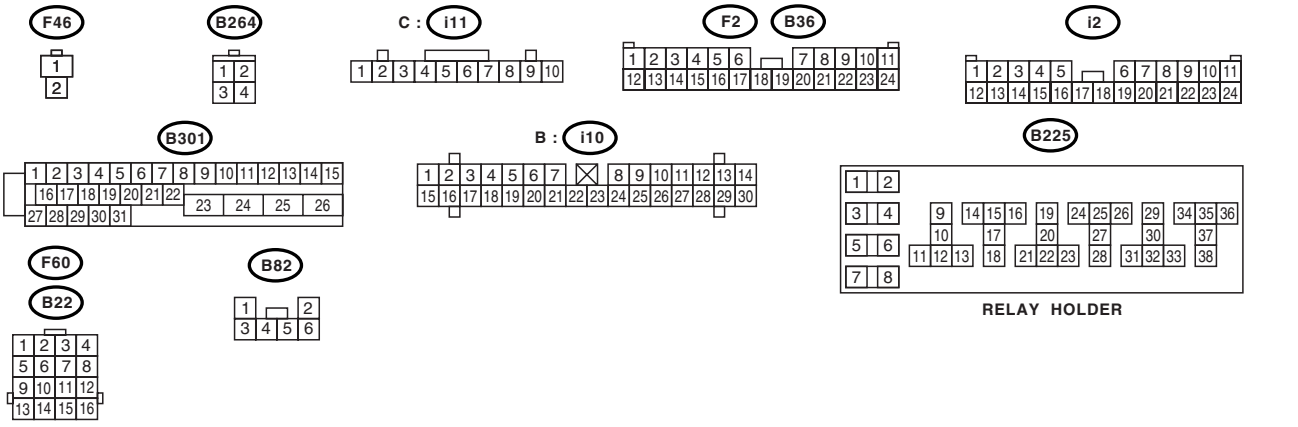

ABS00347

RHD MODEL

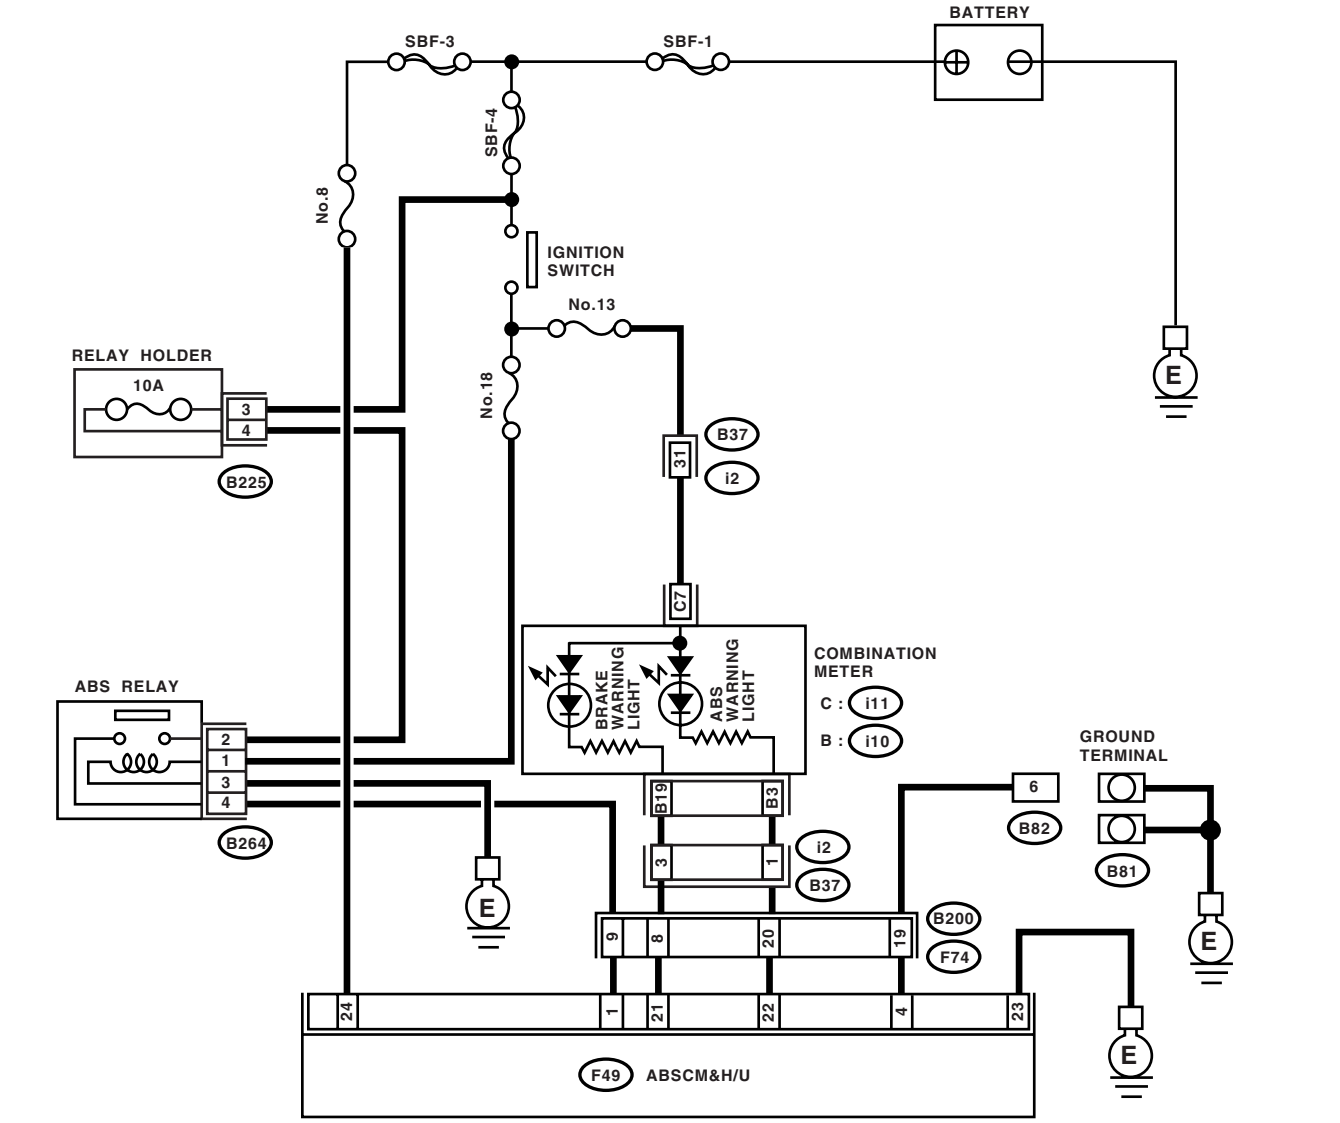

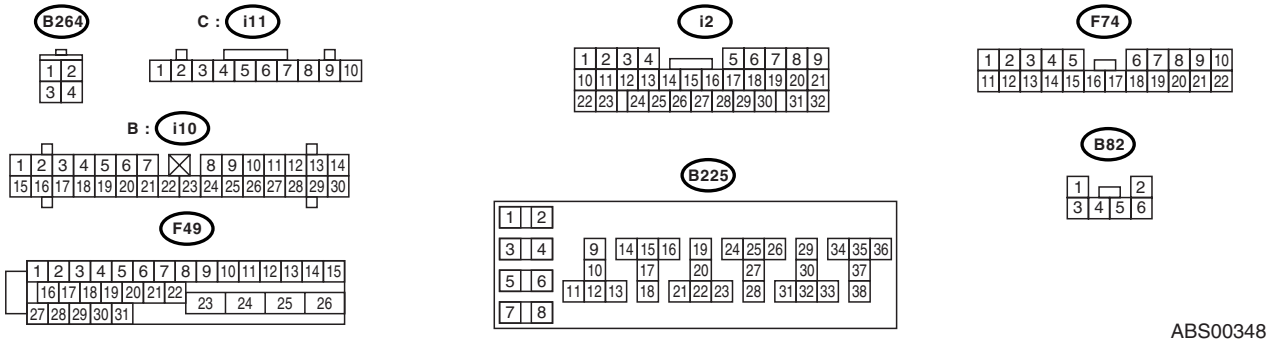

ABS00348

Step		Check	Yes	No
1	**CHECK INSTALLATION OF ABSCM&H/U CONNECTOR.** Turn the ignition switch to OFF.	Is the ABSCM&H/U connector inserted into ABSCM until the clamp locks onto it?	Go to step **2.**	Insert the ABSCM&H/U connector into ABSCM&H/U until the clamp locks onto it.

	Step	Check	Yes	No
2	**CHECK GROUND TERMINAL.** Measure the resistance between Ground terminals (B81) and chassis ground. ***Terminals*** ***Ground terminal (A) — Chassis ground:*** ***Ground terminal (B) — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the open circuit in Ground terminal harness.
3	**CHECK DIAGNOSIS LINE.** 1)Connect the Ground terminal (B81) to diagnosis connector (B82) No. 6. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 4 — Chassis ground:*** ***RHD: (F49) No. 4 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **4.**	Repair the open circuit in harness connector between ABSCM&H/U and diagnosis connector.
4	**CHECK GENERATOR.** 1)Start the engine. 2)Idle the engine. 3)Measure the voltage between generator and chassis ground. ***Terminals*** ***Generator B terminal (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **5.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
5	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Is there poor contact at battery terminal?	Repair or tighten the battery terminal.	Go to step **6.**
6	**CHECK POWER SUPPLY OF ABSCM.** 1)Start the engine. 2)Idle the engine. 3)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (−):*** ***RHD: (F49) No. 1 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **7.**	Repair the ABSCM&H/U power supply circuit.
7	**CHECK WIRING HARNESS.** 1)Disconnect the connector (i2) from connector (B37). 2)Turn the ignition switch to ON.	Does the ABS warning light turn on?	Repair the front or body wiring harness.	Go to step **8.**
8	**CHECK PROJECTION AT ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Check for damage at the ABSCM&H/U terminal. NOTE: For detail of connector switch, refer to following. <Ref. to ABS-13, ELECTRICAL SPECIFICATION, Control Module I/O Signal.>	Is there any damage on projection which switches connector switch?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **9.**
9	**CHECK ABSCM&H/U.** Measure the resistance between ABSCM&H/U terminals. ***Terminals*** ***No. 22 — No. 23:***	Is the resistance more than 1 MΩ?	Go to step **10.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

	Step	Check	Yes	No
10	**CHECK WIRING HARNESS.** Measure the resistance between connector (B37) and chassis ground. ***Connector & terminal*** ***LHD: (B37) No. 15 — Chassis ground:*** ***RHD: (B37) No. 1 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **11.**	Repair the harness.
11	**CHECK WIRING HARNESS.** 1)Connect the connector to ABSCM&H/U. 2)Measure the resistance between connector (B37) and chassis ground. ***Connector & terminal*** ***LHD: (B37) No. 15 — Chassis ground:*** ***RHD: (B37) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **12.**	Repair the harness.
12	**CHECK POOR CONTACT IN ABSCM&H/U CONNECTOR.**	Is there poor contact in ABSCM&H/U connector?	Repair the connector.	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

C: BRAKE WARNING LIGHT DO NOT GO OFF

DIAGNOSIS:

- Brake warning light circuit is shorted.
- Faulty sensor/connector

TROUBLE SYMPTOM:

- After starting the engine, brake warning light is kept ON, even if the parking brake lever has been released.

WIRING DIAGRAM:

LHD MODEL

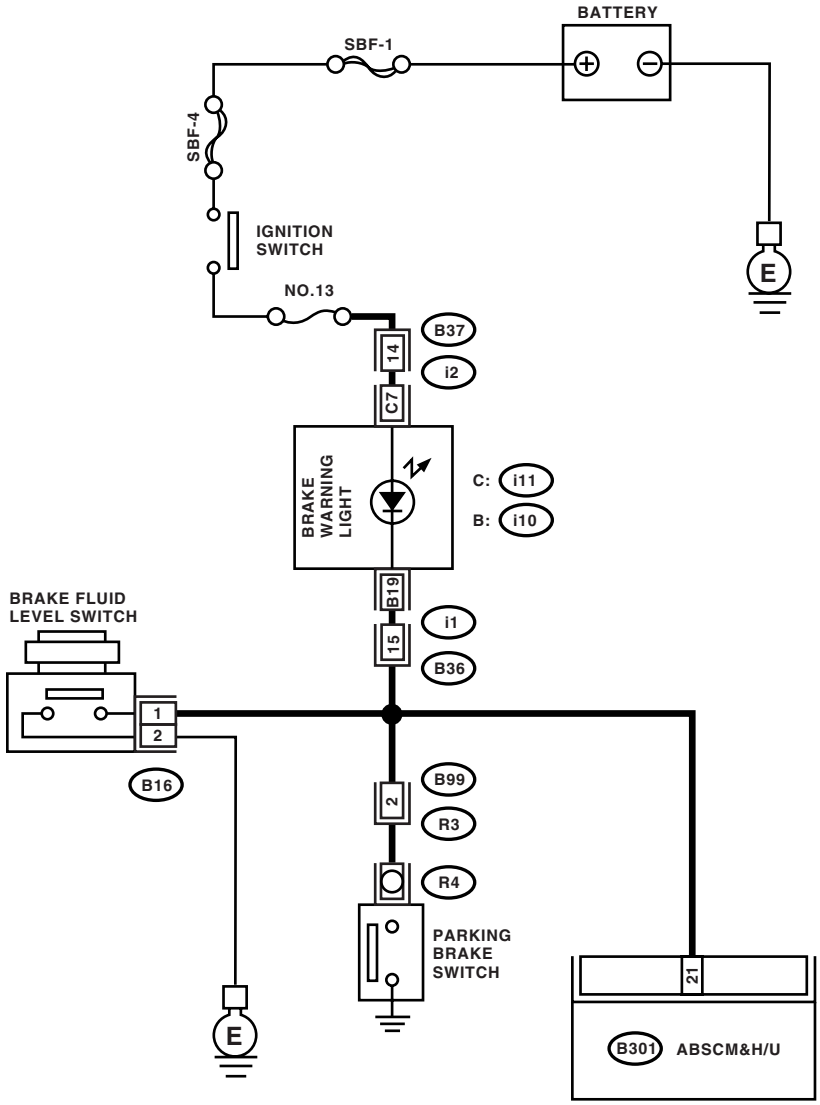

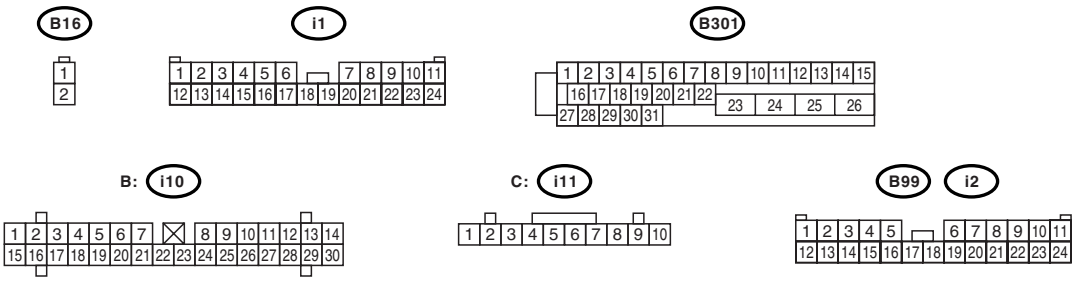

ABS00350

RHD MODEL

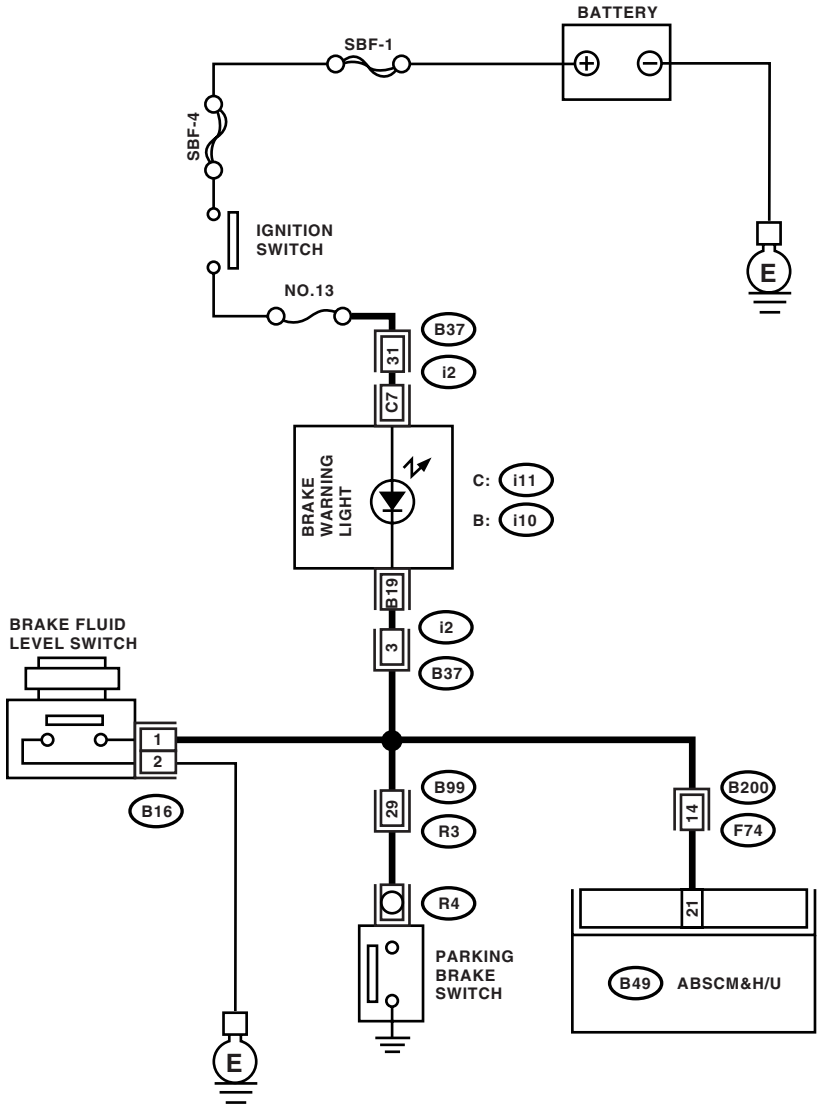

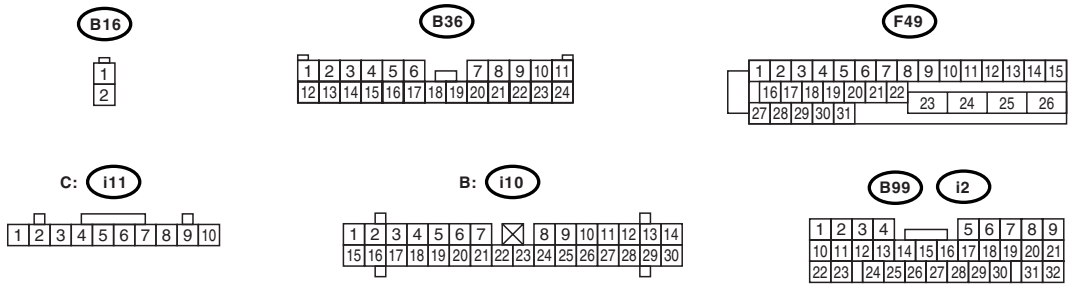

ABS00351

Step		Check	Yes	No
1	**CHECK BRAKE FLUID AMOUNT.** Check the amount of brake fluid in reservoir tank of master cylinder.	Is the brake fluid amount between “MAX” line and “MIN” line?	Go to step **2.**	Fill the brake fluid to specified amount.

	Step	Check	Yes	No
2	**CHECK BRAKE FLUID LEVEL SWITCH.** 1)Disconnect the level switch connector (B16) from master cylinder. 2)Measure the resistance of master cylinder terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Replace the master cylinder.
3	**CHECK PARKING BRAKE SWITCH.** 1)Disconnect the connector (R4) from parking brake switch. 2)Release the parking brake switch. 3)Measure the resistance between parking brake switch terminal and chassis ground.	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the parking brake switch.
4	**CHECK GROUND SHORT OF HARNESS.** 1)Disconnect the connector form ABSCM & H/U. 2)Disconnect the connector (i2) or (i1) from combination meter. 3)Turn the ignition switch to ON.	Does the brake warning light go off?	Go to step **5.**	Repair the harness.
5	**CHECK POOR CONTACT IN ABSCM & H/U.**	Is there poor contact in ABSCM & H/U connector?	Repair the connector.	Replace the ABSCM&H/U.<Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

D: DTC DOES NOT APPEAR

DIAGNOSIS:

- Diagnosis circuit is open.

TROUBLE SYMPTOM:

- The ABS warning light turns on or off normally but the start code cannot be read out in diagnostic mode.

WIRING DIAGRAM:

LHD MODEL

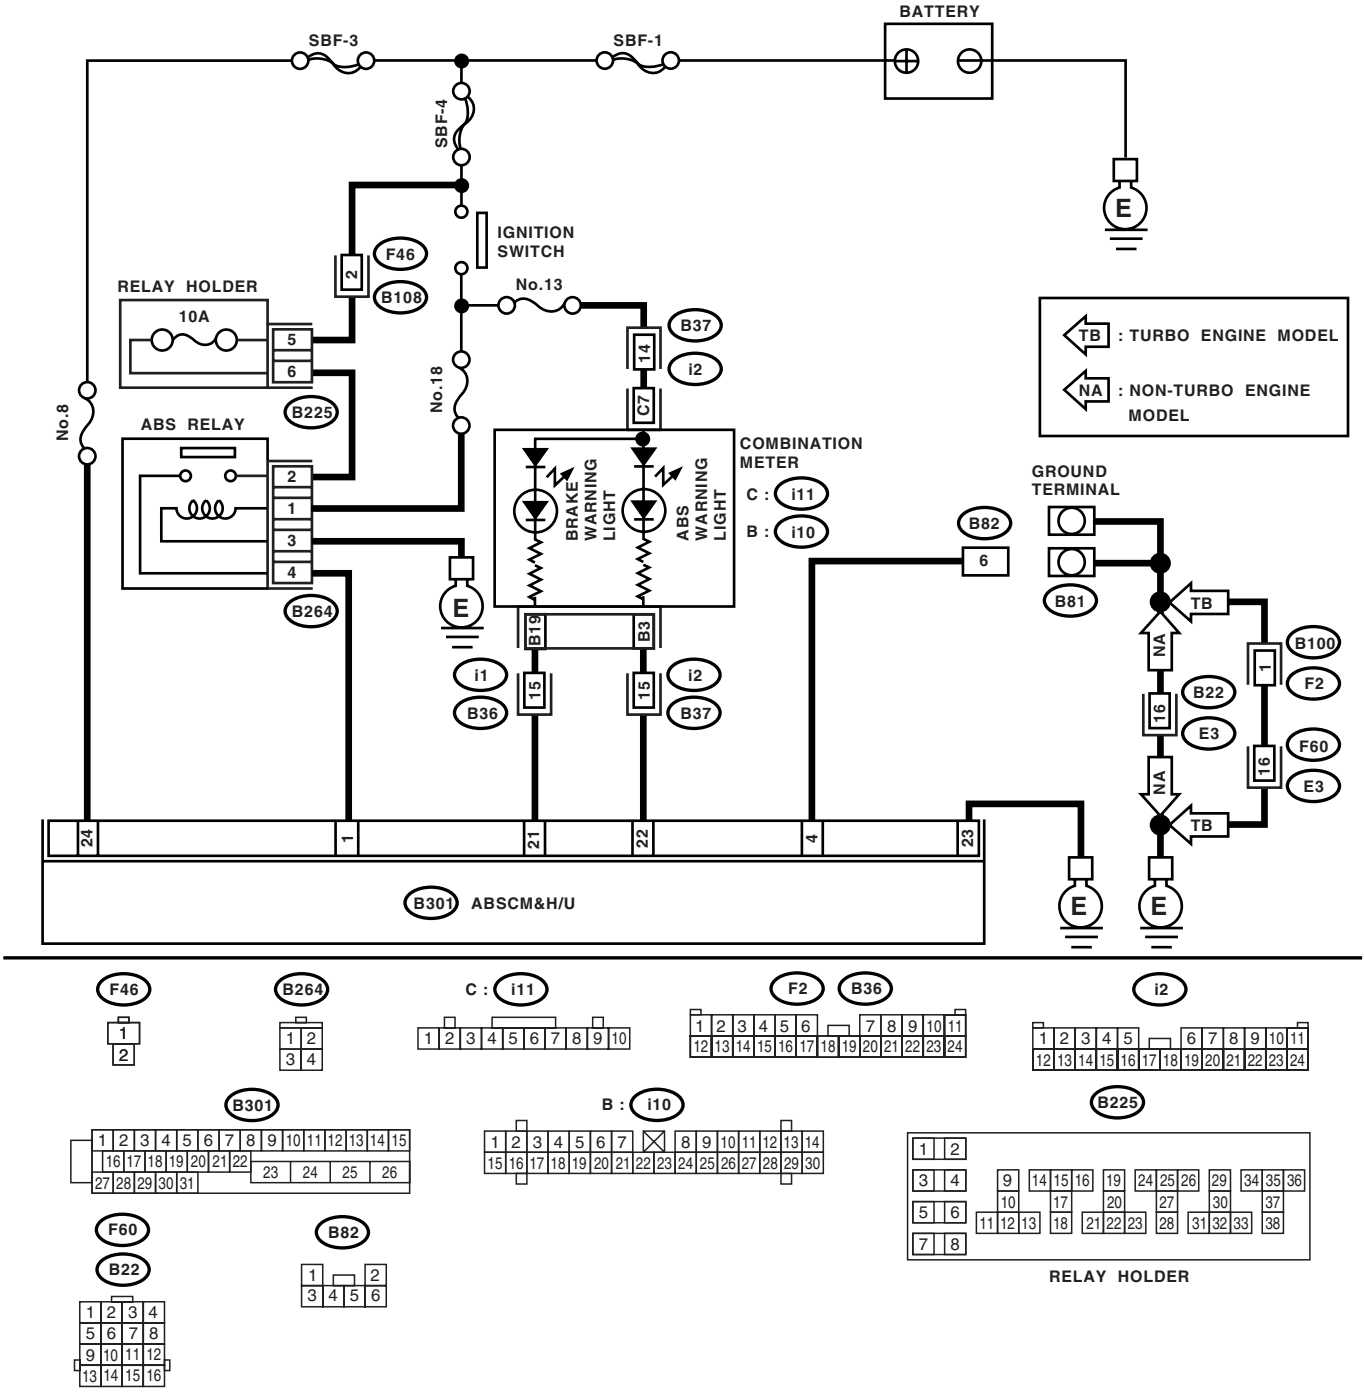

ABS00347

RHD MODEL

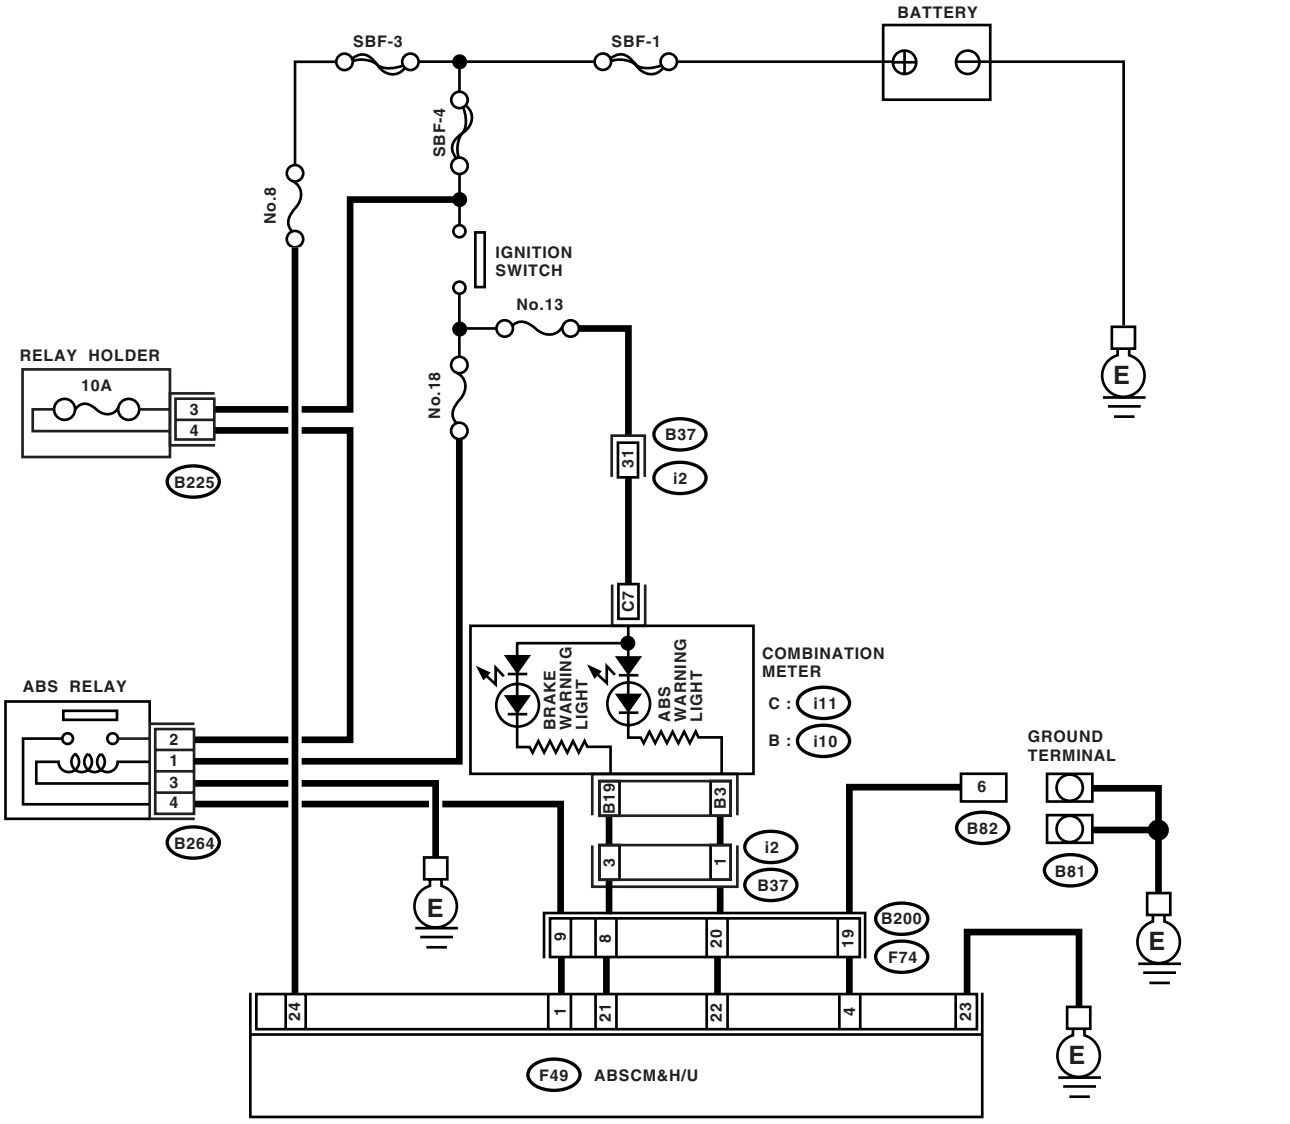

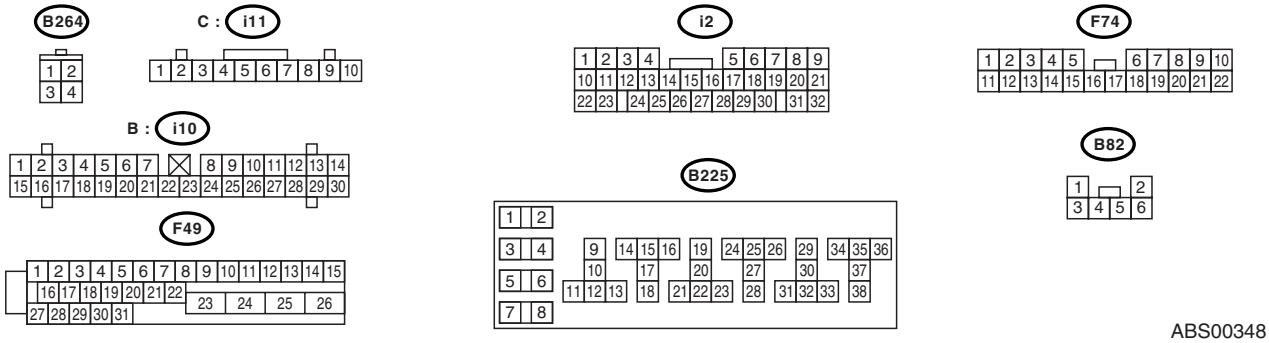

ABS00348

Step		Check	Yes	No
1	**CHECK GROUND TERMINAL.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between Ground terminals (B81) and chassis ground. ***Terminals*** ***Ground terminal (A) — Chassis ground:*** ***Ground terminal (B) — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **2.**	Repair the Ground terminal harness.

	Step	Check	Yes	No
2	**CHECK DIAGNOSIS LINE.** 1)Connect the Ground terminal (B81) to diagnosis connector (B82) No. 6. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 4 — Chassis ground:*** ***RHD: (F49) No. 4 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the harness connector between ABSCM&H/U and diagnosis connector.
3	**CHECK POOR CONTACT IN ABSCM&H/U CONNECTOR.**	Is there poor contact in ABSCM&H/U connector?	Repair the connector.	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

E: DTC 21 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (FRONT RH) —

NOTE:
For the diagnostic procedure, refer to DTC 27. <Ref. to ABS-44, DTC 27 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

F: DTC 23 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (FRONT LH) —

NOTE:
For the diagnostic procedure, refer to DTC 27. <Ref. to ABS-44, DTC 27 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

G: DTC 25 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR RH) —

NOTE:
For the diagnostic procedure, refer to DTC 27. <Ref. to ABS-44, DTC 27 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

H: DTC 27 — ABNORMAL ABS WHEEL SPEED SENSOR (OPEN CIRCUIT OR INPUT VOLTAGE TOO HIGH) (REAR LH) —

DIAGNOSIS:

- Faulty ABS wheel speed sensor (Broken wire, input voltage too high)
- Faulty harness connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:
LHD MODEL

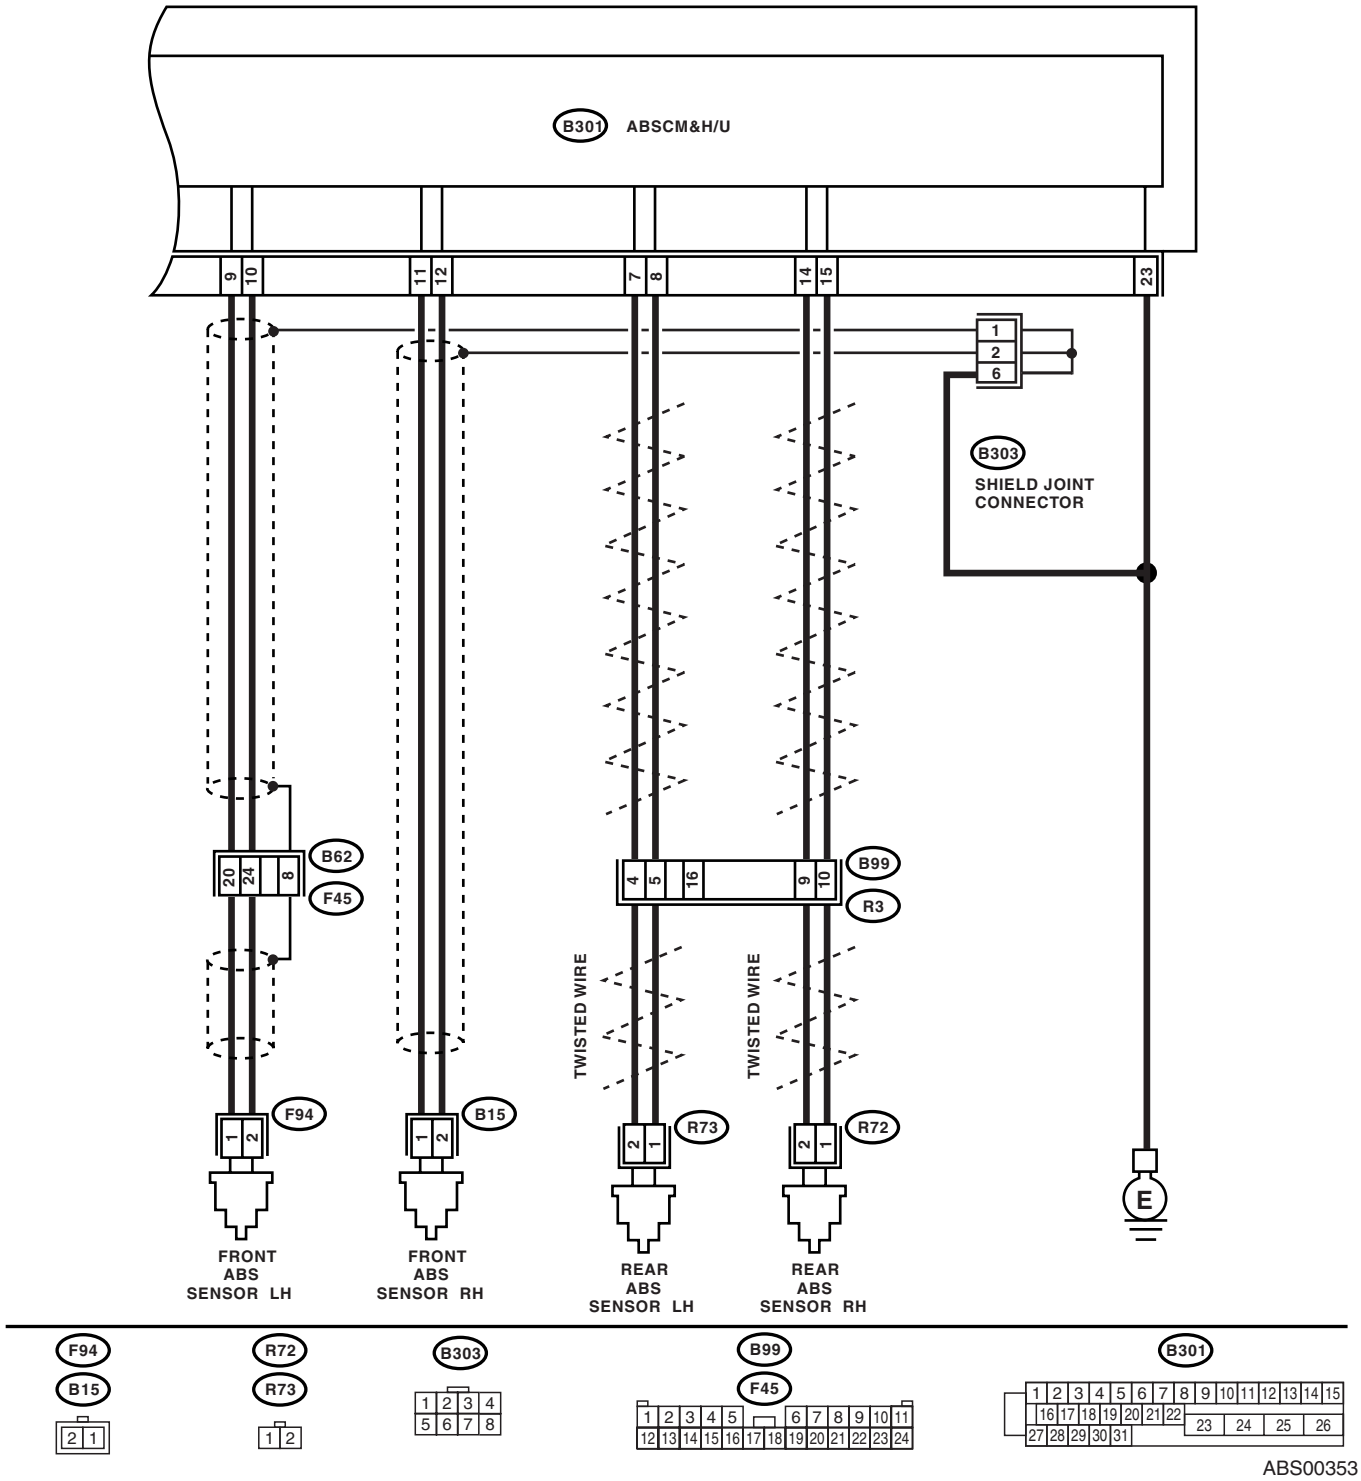

ABS00353

RHD MODEL

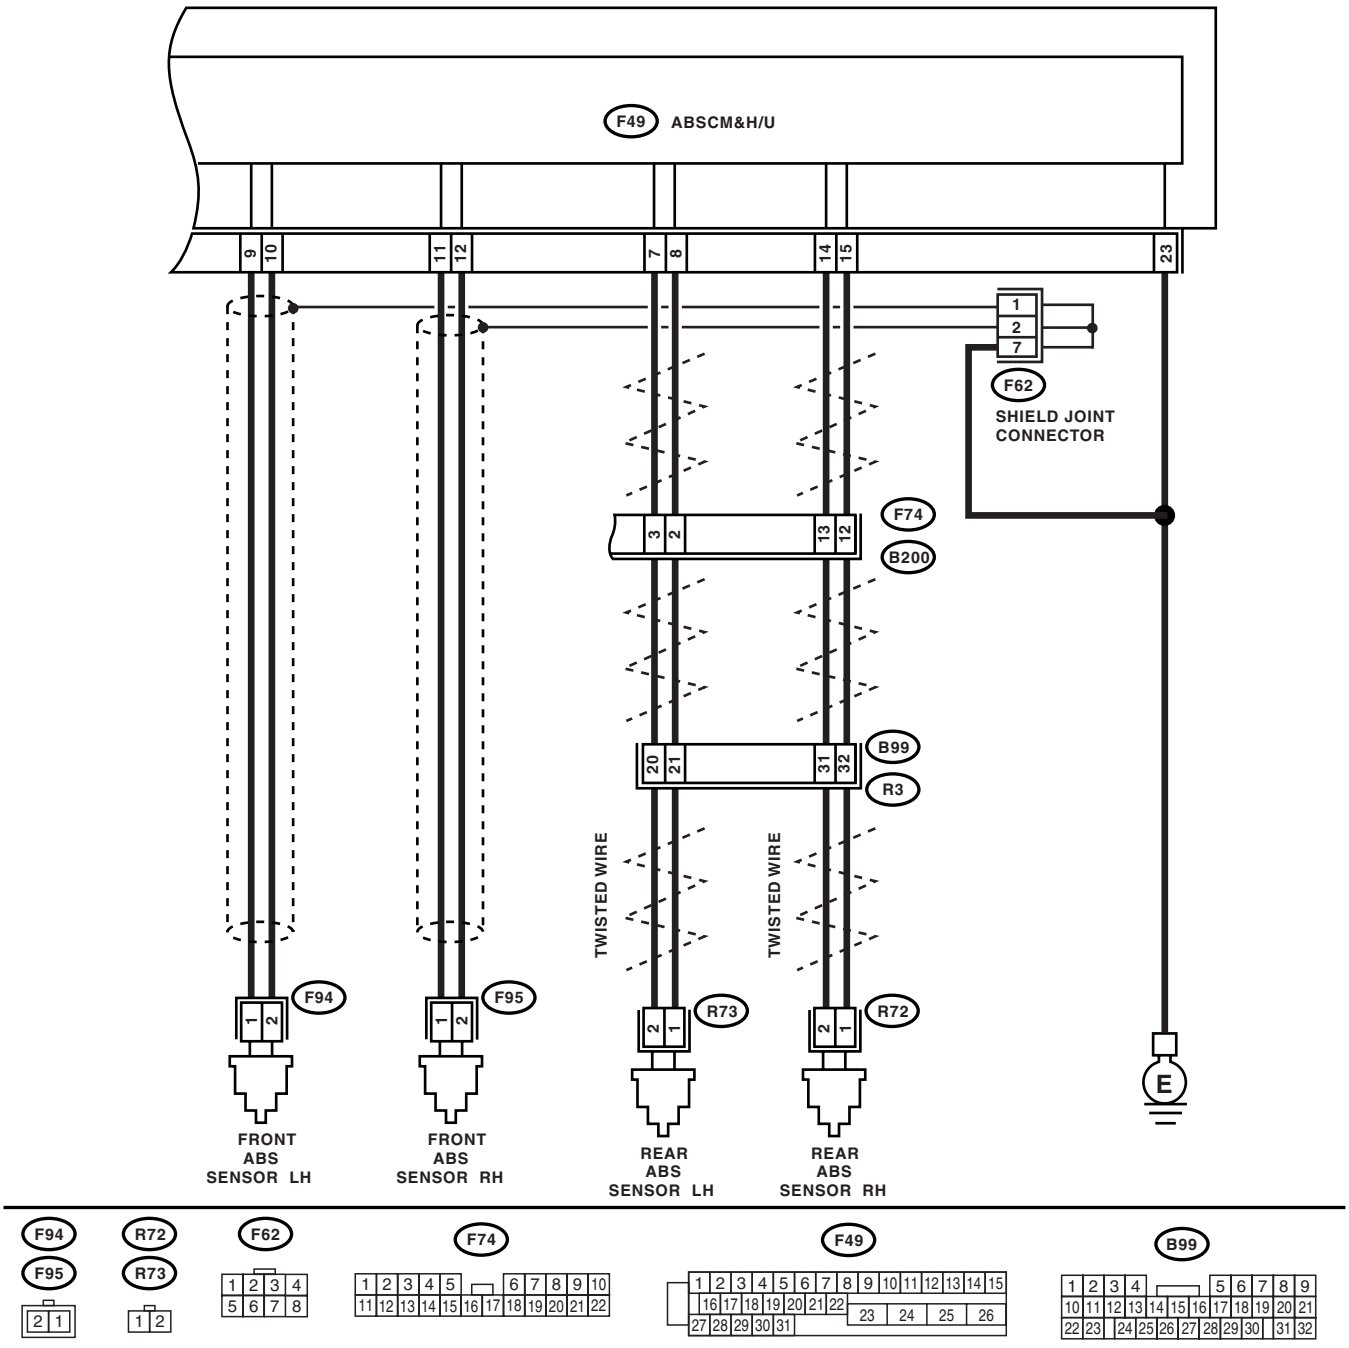

ABS00354

	Step	Check	Yes	No
1	**CHECK ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABS wheel speed sensor. 3)Measure the resistance of ABS wheel speed sensor connector terminals while shaking the harness lightly. ***Terminals*** ***Front RH No. 1 — No. 2:*** ***Front LH No. 1 — No. 2:*** ***Rear RH No. 1 — No. 2:*** ***Rear LH No. 1 — No. 2:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **2.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
2	**CHECK BATTERY SHORT OF ABS WHEEL SPEED SENSOR.** 1)Disconnect the connector from ABSCM&H/U. 2)Measure the voltage between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 (+) — Chassis ground (−):*** ***Front LH No. 1 (+) — Chassis ground (−):*** ***Rear RH No. 1 (+) — Chassis ground (−):*** ***Rear LH No. 1 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
3	**CHECK BATTERY SHORT OF ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 (+) — Chassis ground (−):*** ***Front LH No. 1 (+) — Chassis ground (−):*** ***Rear RH No. 1 (+) — Chassis ground (−):*** ***Rear LH No. 1 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
4	**CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Connect the connector to ABS wheel speed sensor. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***DTC 21*** ***LHD: (B301) No. 11 — No. 12:*** ***RHD: (F49) No. 11 — No. 12:*** ***DTC 23*** ***LHD:(B301) No. 9 — No. 10:*** ***RHD: (F49) No. 9 — No. 10:*** ***DTC 25*** ***LHD:(B301) No. 14 — No. 15:*** ***RHD: (F49) No. 14 — No. 15:*** ***DTC 27*** ***LHD:(B301) No. 7 — No. 8:*** ***RHD: (F49) No. 7 — No. 8:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **5.**	Repair the harness/connector between ABSCM&H/U and ABS wheel speed sensor.

	Step	Check	Yes	No
5	**CHECK BATTERY SHORT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***DTC 21*** ***LHD:(B301) No. 11 (+) — Chassis ground (–):*** ***RHD: (F49) No. 11 (+) — Chassis ground (–):*** ***DTC 23*** ***LHD: (B301) No. 9 (+) — Chassis ground (–):*** ***RHD: (F49) No. 9 (+) — Chassis ground (–):*** ***DTC 25*** ***LHD:(B301) No. 14 (+) — Chassis ground (–):*** ***RHD: (F49) No. 14 (+) — Chassis ground (–):*** ***DTC 27*** ***LHD: (B301) No. 7 (+) — Chassis ground (–):*** ***RHD: (F49) No. 7 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **6.**	Repair the harness between ABSCM&H/U and ABS wheel speed sensor.
6	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***DTC 21*** ***LHD:(B301) No. 11 (+) — Chassis ground (–):*** ***RHD: (F49) No. 11 (+) — Chassis ground (–):*** ***DTC 23*** ***LHD: (B301) No. 9 (+) — Chassis ground (–):*** ***RHD: (F49) No. 9 (+) — Chassis ground (–):*** ***DTC 25*** ***LHD:(B301) No. 14 (+) — Chassis ground (–):*** ***RHD: (F49) No. 14 (+) — Chassis ground (–):*** ***DTC 27*** ***LHD: (B301) No. 7 (+) — Chassis ground (–):*** ***RHD: (F49) No. 7 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **7.**	Repair the harness between ABSCM&H/U and ABS wheel speed sensor.
7	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.** Turn the ignition switch to OFF.	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **8.**	Tighten the ABS wheel speed sensor installation bolts securely.

	Step	Check	Yes	No
8	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of the wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **9.**	Adjust the gap. NOTE: Adjust the gap using spacers (Part No. 26755AA000). If the spacers cannot correct gap, replace worn sensor or worn tone wheel.
9	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **10.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
10	**CHECK GROUND SHORT OF ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the resistance between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 — Chassis ground:*** ***Front LH No. 1 — Chassis ground:*** ***Rear RH No. 1 — Chassis ground:*** ***Rear LH No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **11.**	Replace the ABS wheel speed sensor and ABSCM&H/U. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.> and <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
11	**CHECK GROUND SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Connect the connector to ABS wheel speed sensor. 3)Measure the resistance between ABSCM&H/U connector terminal and chassis ground. ***Connector & terminal*** ***DTC 21*** ***LHD: (B301) No. 11 — Chassis ground:*** ***RHD: (F49) No. 11 — Chassis ground:*** ***DTC 23*** ***LHD: (B301) No. 11 — Chassis ground:*** ***RHD: (F49) No. 11 — Chassis ground:*** ***DTC 25*** ***LHD: (B301) No. 14 — Chassis ground:*** ***RHD: (F49) No. 14 — Chassis ground:*** ***DTC 27*** ***LHD: (B301) No. 7 — Chassis ground:*** ***RHD: (F49) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **12.**	Repair the harness between ABSCM&H/U and ABS wheel speed sensor. Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
12	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between ABSCM&H/U and ABS wheel speed sensor?	Repair the connector.	Go to step **13.**

	Step	Check	Yes	No
13	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **14.**
14	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to the DTC.	A temporary poor contact. NOTE: Check the harness and connectors between ABSCM&H/U and ABS wheel speed sensor.

I: DTC 22 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (FRONT RH) —

NOTE:
For the diagnostic procedure, refer to DTC 28. <Ref. to ABS-51, DTC 28 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

J: DTC 24 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (FRONT LH) —

NOTE:
For the diagnostic procedure, refer to DTC 28. <Ref. to ABS-51, DTC 28 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

K: DTC 26 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR RH) —

NOTE:
For the diagnostic procedure, refer to DTC 28. <Ref. to ABS-51, DTC 28 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

L: DTC 28 — ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (REAR LH) —

DIAGNOSIS:

- Faulty ABS wheel speed sensor signal (noise, irregular signal, etc.)
- Faulty harness/connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:
LHD MODEL

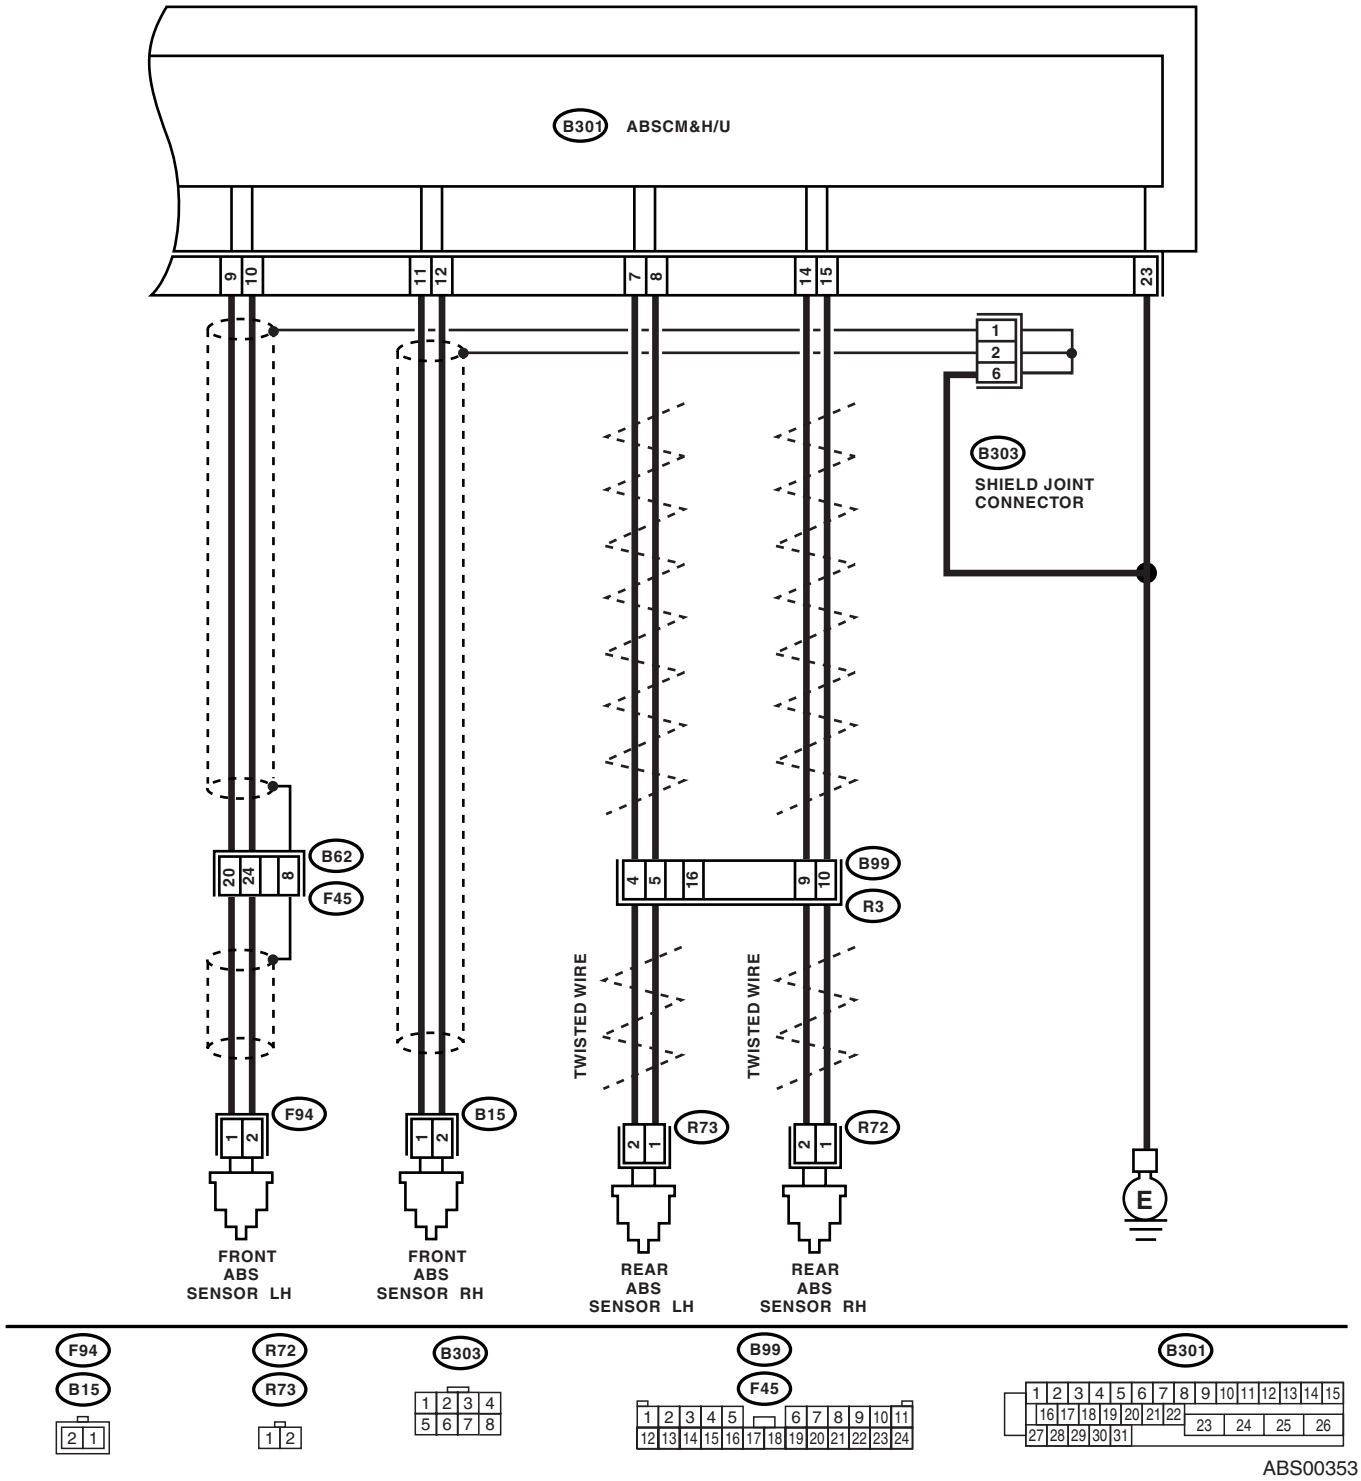

ABS00353

RHD MODEL

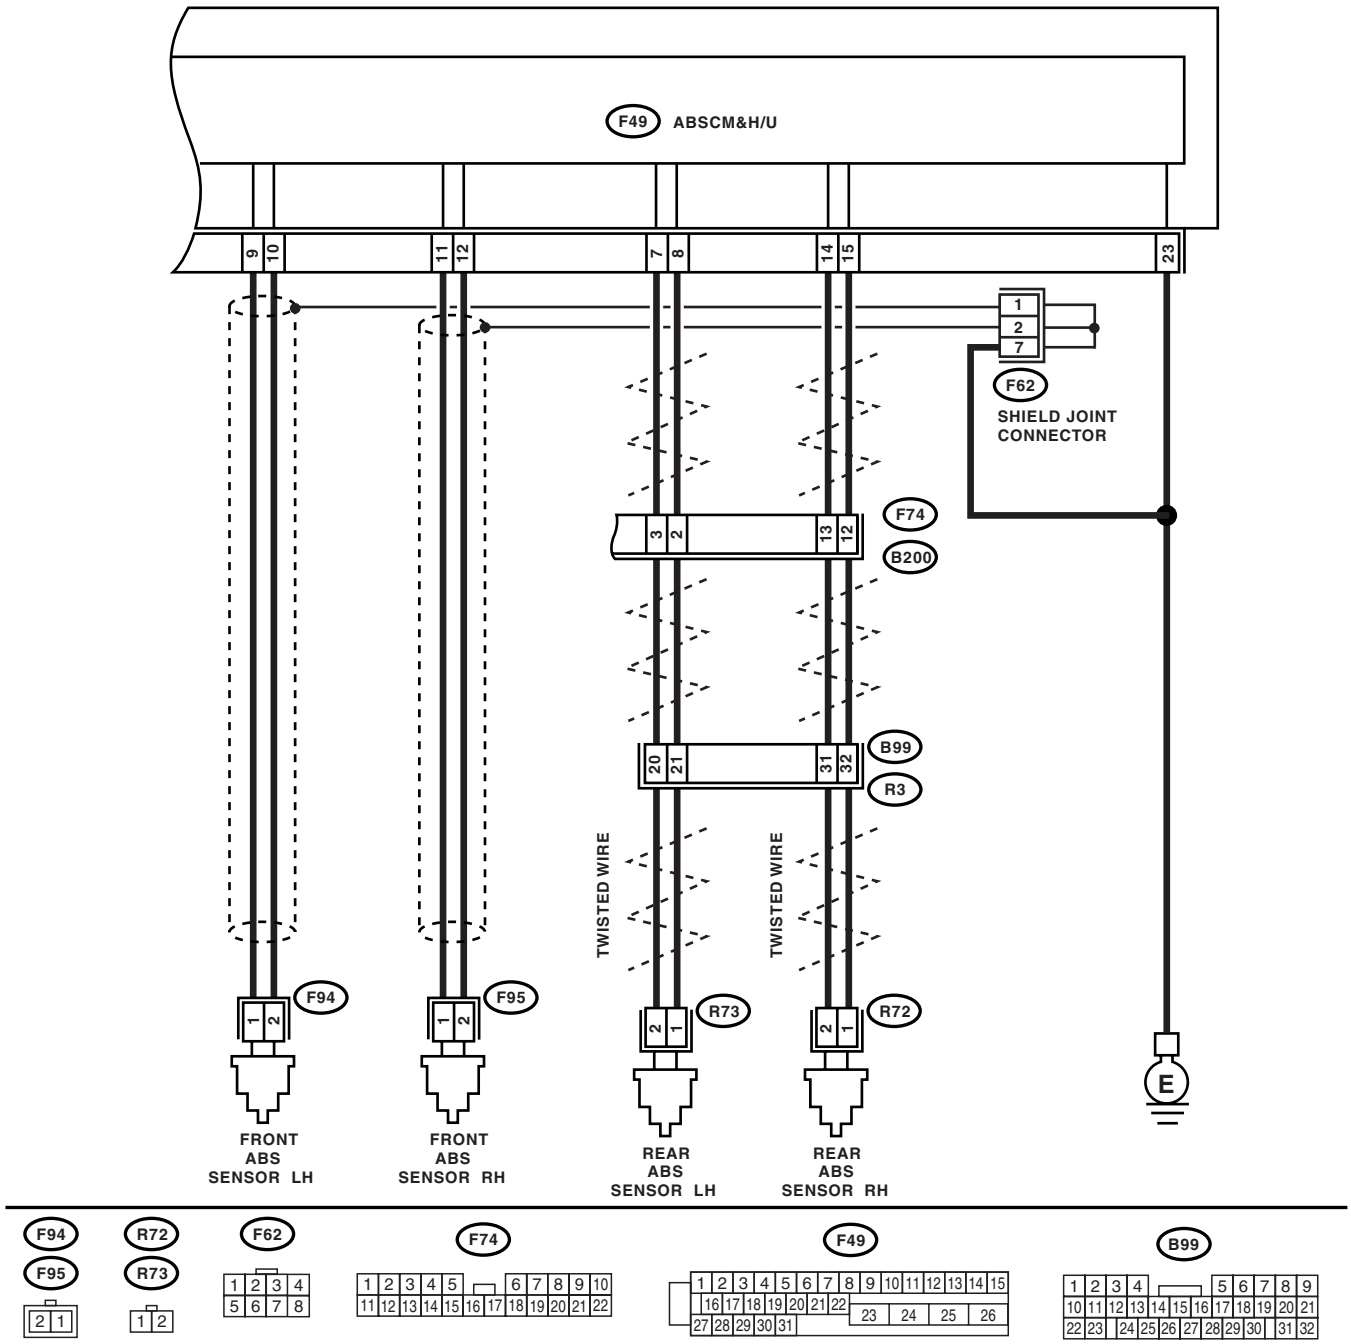

ABS00354

Step		Check	Yes	No
1	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.** Turn the ignition switch to OFF.	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **2.**	Tighten the ABS wheel speed sensor installation bolts securely.

	Step	Check	Yes	No
2	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of the wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **3.**	Adjust the gap. NOTE: Adjust the gap using spacer (Part No. 26755AA000). If the spacer cannot correct gap, replace worn sensor or worn tone wheel.
3	**PREPARE OSCILLOSCOPE.**	Is an oscilloscope available?	Go to step **4.**	Go to step **5.**
4	**CHECK ABS WHEEL SPEED SENSOR SIGNAL.** 1)Raise all four wheels off ground. 2)Turn the ignition switch to OFF. 3)Connect the oscilloscope to the connector. 4)Turn the ignition switch to ON. 5)Rotate the wheels and measure voltage at specified frequency. <Ref. to ABS-16, WAVEFORM, Control Module I/O Signal.> NOTE: When this inspection is completed, the ABS control module sometimes stores DTC 29 or DTC 56. ***Connector & terminal*** ***DTC 22*** ***LHD: (B15) No. 1 (+) — No. 2 (−):*** ***RHD: (F95) No. 1 (+) — No. 2 (−):*** ***DTC 24*** ***LHD: (F45) No. 20 (+) — No. 24 (−):*** ***RHD: (F94) No. 1 (+) — No. 2 (−):*** ***DTC 26*** ***LHD: (B99) No. 10 (+) — No. 9 (−):*** ***RHD: (B99) No. 32 (+) — No. 31 (−):*** ***DTC 28*** ***LHD: (B99) No. 5 (+) — No. 4 (−):*** ***RHD: (B99) No. 20 (+) — No. 21 (−):***	Is an oscilloscope pattern smooth, as shown in the figure?	Go to step **8.**	Go to step **7.**
5	**CHECK CONTAMINATION OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.** Remove the disc rotor or drum from hub in accordance with DTC.	Is the ABS wheel speed sensor piece or the tone wheel contaminated by dirt or other foreign matter?	Thoroughly remove dirt or other foreign matter.	Go to step **6.**
6	**CHECK DAMAGE OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.**	Are there broken or damaged in the ABS wheel speed sensor piece or the tone wheel?	Replace the ABS wheel speed sensor or tone wheel. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.> and Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>	Go to step **7.**

	Step	Check	Yes	No
7	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **8.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
8	**CHECK RESISTANCE OF ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABS wheel speed sensor. 3)Measure the resistance between ABS wheel speed sensor connector terminals while shaking the harness lightly. ***Terminals*** ***Front RH No. 1 — No. 2:*** ***Front LH No. 1 — No. 2:*** ***Rear RH No. 1 — No. 2:*** ***Rear LH No. 1 — No. 2:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **9.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
9	**CHECK GROUND SHORT OF ABS WHEEL SPEED SENSOR.** Measure the resistance between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 — Chassis ground:*** ***Front LH No. 1 — Chassis ground:*** ***Rear RH No. 1 — Chassis ground:*** ***Rear LH No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **10.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
10	**CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND ABS WHEEL SPEED SENSOR.** 1)Connect the connector to ABS wheel speed sensor. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance at ABSCM&H/U connector terminals. ***Connector & terminal*** ***DTC 22*** ***LHD: (B301) No. 11 — No. 12:*** ***RHD: (F49) No. 11 — No. 12:*** ***DTC 24*** ***LHD: (B301) No. 9 — No. 10:*** ***RHD: (F49) No. 9 — No. 10:*** ***DTC 26*** ***LHD: (B301) No. 14 — No. 15:*** ***RHD: (F49) No. 14 — No. 15:*** ***DTC 28*** ***LHD: (B301) No. 7 — No. 8:*** ***RHD: (F49) No. 7 — No. 8:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **11.**	Repair the harness/connector between ABSCM&H/U and ABS wheel speed sensor.

Step		Check	Yes	No
11	**CHECK GROUND SHORT OF HARNESS.** Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***DTC 22*** ***LHD: (B301) No. 11 — Chassis ground:*** ***RHD: (F49) No. 11 — Chassis ground:*** ***DTC 24*** ***LHD: (B301) No. 9 — Chassis ground:*** ***RHD: (F49) No. 9 — Chassis ground:*** ***DTC 26*** ***LHD: (B301) No. 14 — Chassis ground:*** ***RHD: (F49) No. 14 — Chassis ground:*** ***DTC 28*** ***LHD: (B301) No. 7 — Chassis ground:*** ***RHD: (F49) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **12.**	Repair the harness/connector between ABSCM&H/U and ABS wheel speed sensor.
12	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** Measure the resistance between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **13.**	Repair the ABSCM&H/U ground harness.
13	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between ABSCM&H/U and ABS wheel speed sensor?	Go to step **14.**	Repair the connector.
14	**CHECK SOURCES OF SIGNAL NOISE.**	Is the car telephone or wireless transmitter properly installed?	Go to step **15.**	Properly install the car telephone or wireless transmitter.
15	**CHECK SOURCES OF SIGNAL NOISE.**	Are noise sources (such as an antenna) installed near the sensor harness?	Go to step **16.**	Install the noise sources apart from sensor harness.
16	**CHECK SHIELD CIRCUIT.** 1)Disconnect the connectors (B303) and (F62). 2)Measure the resistance between shield connector and chassis ground. ***Connector & terminal*** ***DTC 22*** ***LHD: (B303) No. 2 — Chassis ground:*** ***RHD: (F62) No. 2 — Chassis ground:*** ***DTC 24*** ***LHD: (B303) No. 1 — Chassis ground:*** ***RHD: (F62) No. 1 — Chassis ground:*** NOTE: If the DTC is 26, 28: Go to YES.	Is the resistance less than 0.5 Ω?	Go to step **17.**	Repair the shield harness.
17	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **18.**

Step	Check	Yes	No
18 CHECK ANY OTHER DTC APPEARANCE.	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary noise interference. NOTE: Although the ABS warning light remains illuminating at this point, this is a normal condition. Vehicle must be driven at approx. 12 km/h (7.46 MPH) or faster to turn off ABS warning light. Make sure that the ABS warning light goes off after driving vehicle.

M: DTC 29
— ABNORMAL ABS WHEEL SPEED SENSOR (ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL) (ANY ONE OF FOUR) —

DIAGNOSIS:

- Faulty ABS wheel speed sensor signal (noise, irregular signal, etc.)
- Faulty tone wheel
- Wheels turning freely for a long time

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:
LHD MODEL

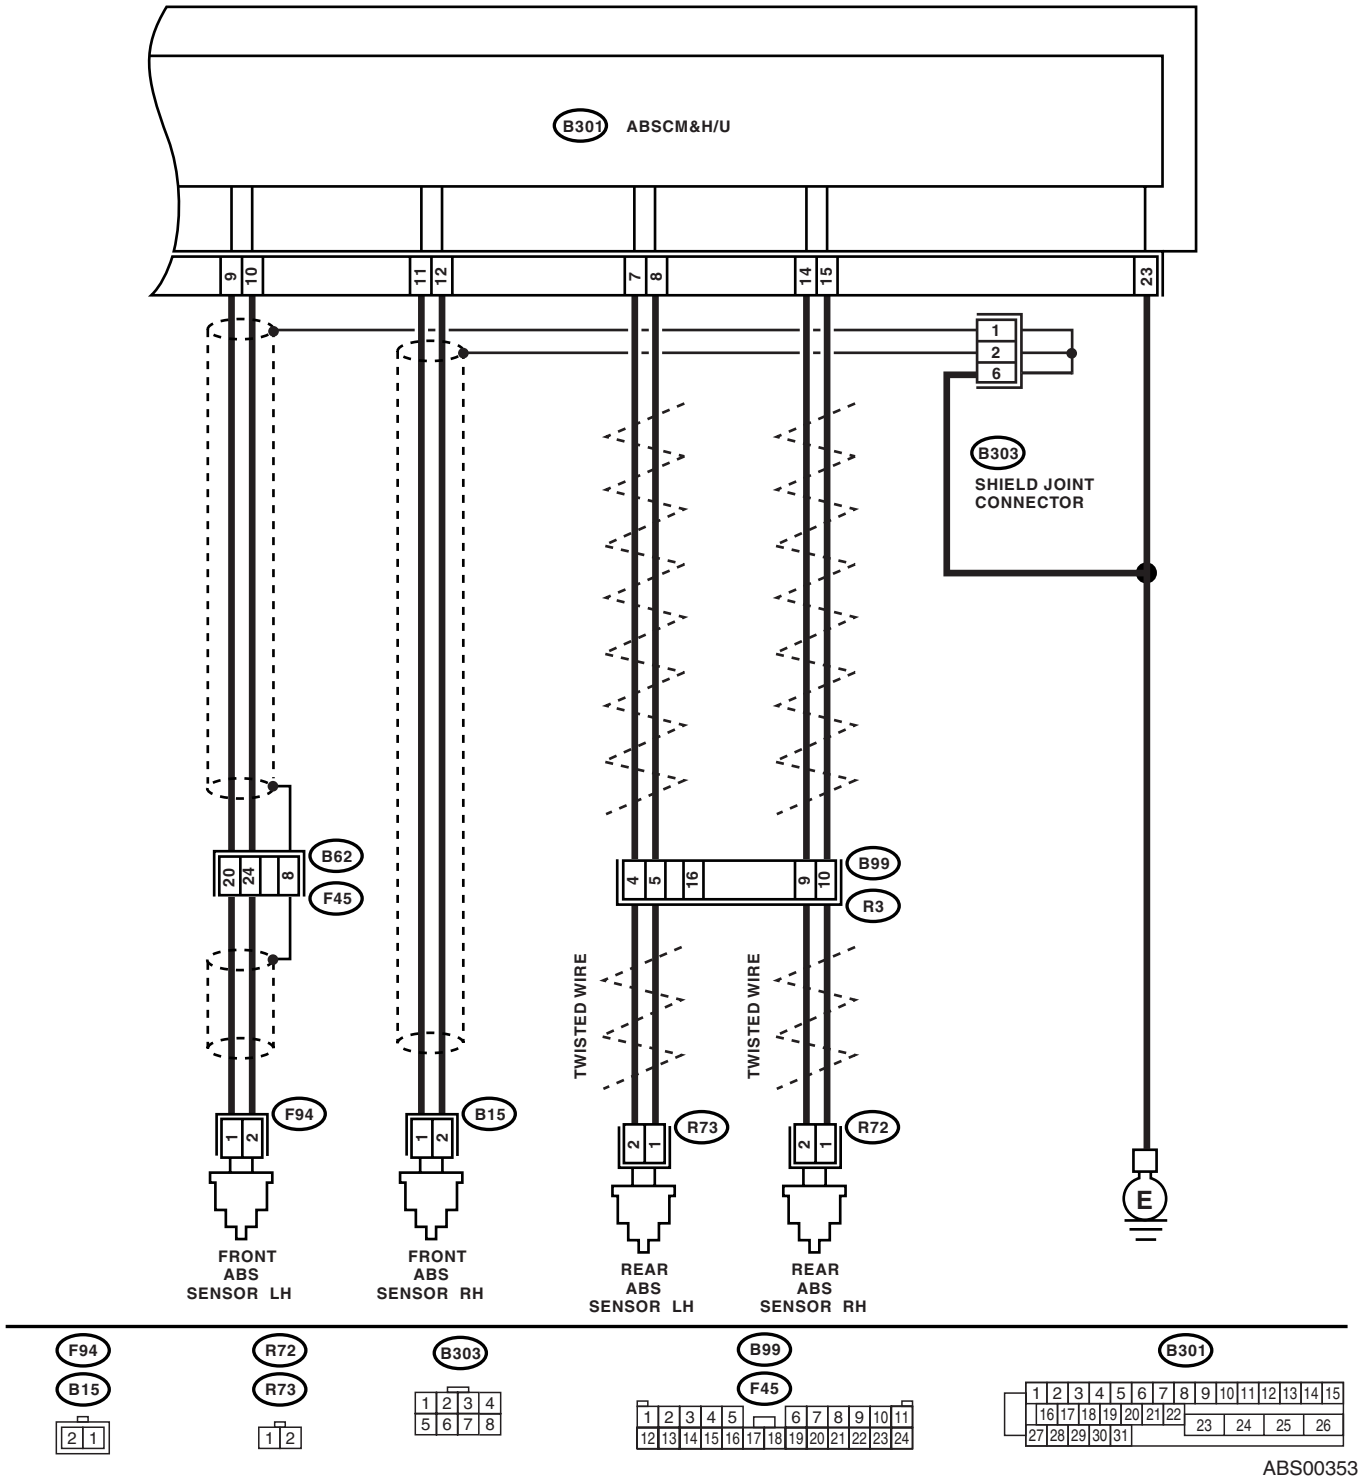

ABS00353

RHD MODEL

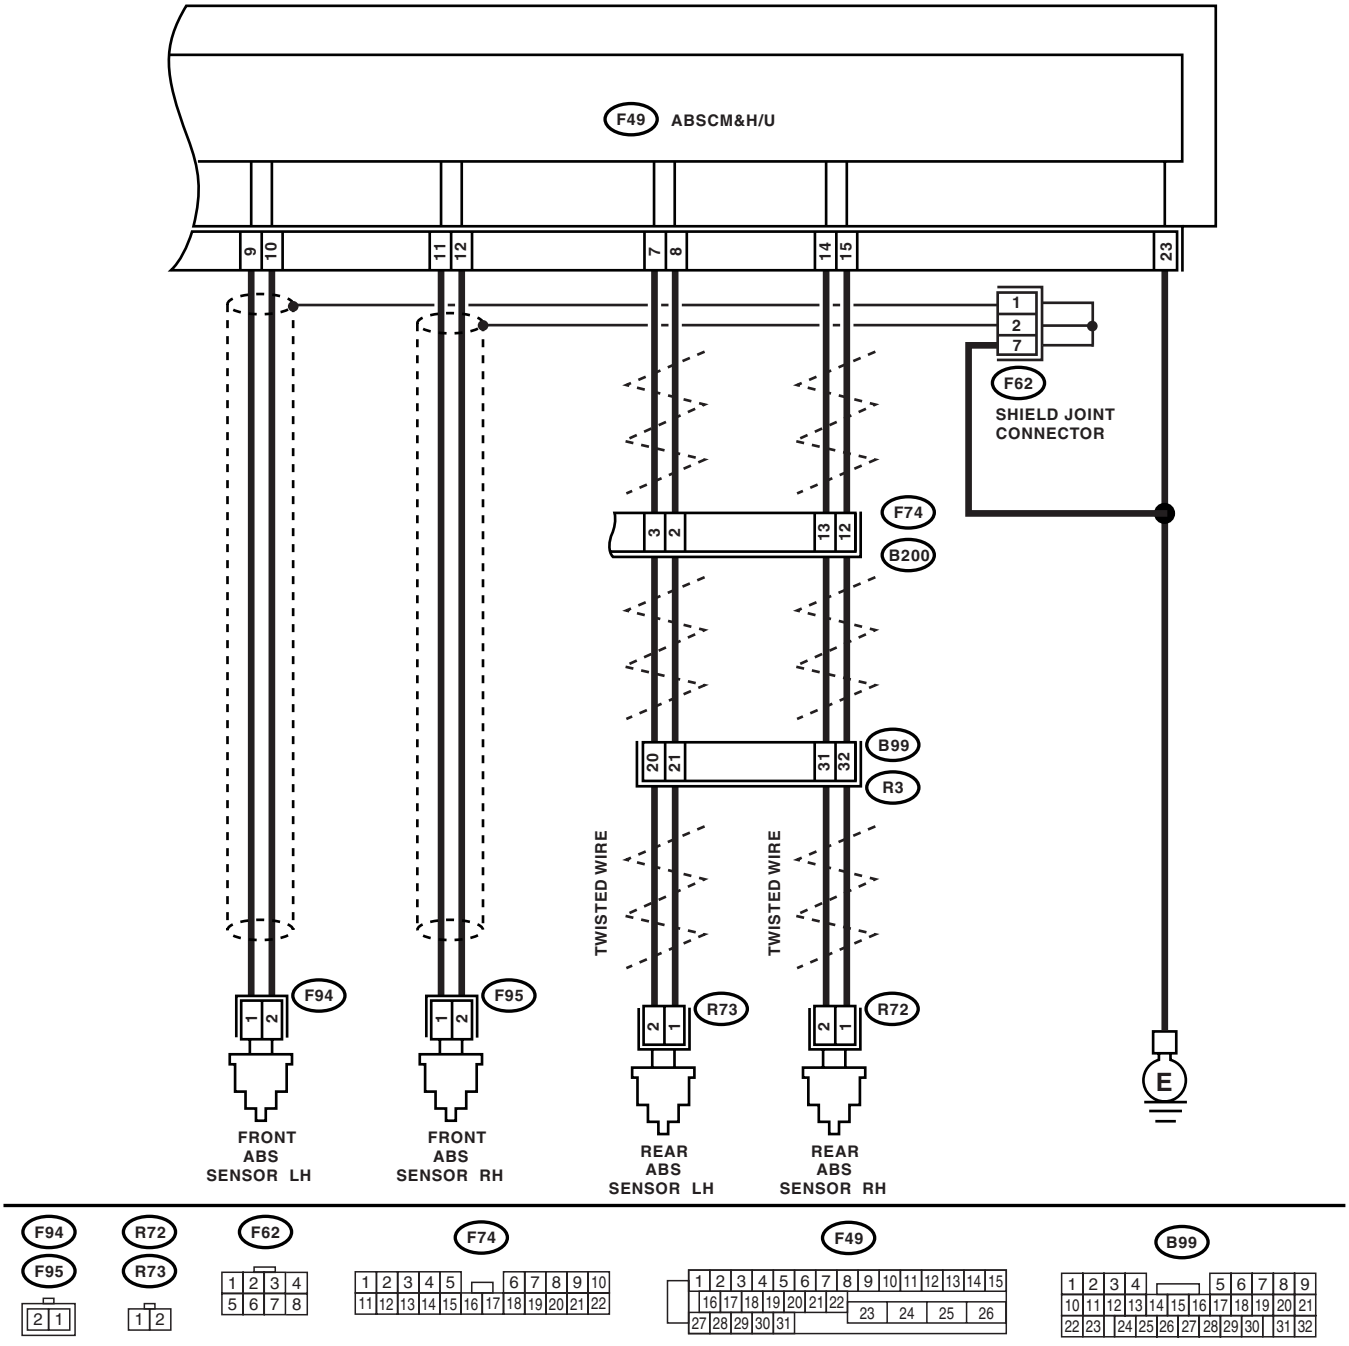

ABS00354

	Step	Check	Yes	No
1	**CHECK IF THE WHEELS HAVE TURNED FREELY FOR A LONG TIME.** Check if the wheels have been turned freely for more than 1 minute, such as when vehicle is jacked-up, under full-lock cornering or when tire is not in contact with road surface.	Have the wheels been turned freely?	The ABS is normal. Erase the DTC. NOTE: When the wheels turn freely for a long time, such as when the vehicle is towed or jacked-up, or when steering wheel is continuously turned all the way, this DTC may sometimes occur.	Go to step **2.**
2	**CHECK TIRE SPECIFICATIONS.** Turn the ignition switch to OFF.	Are the tire specifications correct?	Go to step **3.**	Replace the tire.
3	**CHECK WEAR OF TIRE.**	Is the tire worn excessively?	Replace tire.	Go to step **4.**
4	**CHECK TIRE PRESSURE.**	Is the tire pressure correct?	Go to step **5.**	Adjust tire pressure.
5	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.**	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **6.**	Tighten the ABS wheel speed sensor installation bolts securely.
6	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of the wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel: 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **7.**	Adjust the gap. NOTE: Adjust the gap using spacer (Part No. 26755AA000). If the spacer cannot correct gap, replace worn sensor or worn tone wheel.
7	**PREPARE OSCILLOSCOPE.**	Is an oscilloscope available?	Go to step **8.**	Go to step **9.**

	Step	Check	Yes	No
8	**CHECK ABS WHEEL SPEED SENSOR SIGNAL.** 1)Raise all four wheels off ground. 2)Turn the ignition switch to OFF. 3)Connect the oscilloscope to the connector. 4)Turn the ignition switch to ON. 5)Rotate the wheels and measure voltage at specified frequency. <Ref. to ABS-16, WAVEFORM, Control Module I/O Signal.> NOTE: When this inspection is completed, the ABSCM&H/U sometimes stores the DTC 29. ***Connector & terminal*** ***Front RH*** ***LHD: (B15) No. 1 (+) — No. 2 (−):*** ***RHD: (F95) No. 1 (+) — No. 2 (−):*** ***Front LH*** ***LHD: (F45) No. 20 (+) — No. 24 (−):*** ***RHD: (F94) No. 1 (+) — No. 2 (−):*** ***Rear RH*** ***LHD: (B99) No. 10 (+) — No. 9 (−):*** ***RHD: (B99) No. 32 (+) — No. 31 (−):*** ***Rear LH*** ***LHD: (B99) No. 5 (+) — No. 4 (−):*** ***RHD: (B99) No. 20 (+) — No. 21 (−):***	Is an oscilloscope pattern smooth, as shown in the figure?	Go to step **12.**	Go to step **9.**
9	**CHECK CONTAMINATION OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.** Remove the disc rotor or drum from hub.	Is the ABS wheel speed sensor piece or the tone wheel contaminated by dirt or other foreign matter?	Thoroughly remove dirt or other foreign matter.	Go to step **10.**
10	**CHECK DAMAGE OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.**	Are there broken or damaged teeth in the ABS wheel speed sensor piece or the tone wheel?	Replace the ABS wheel speed sensor or tone wheel. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.> and Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>	Go to step **11.**
11	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **12.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
12	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **13.**

Step		Check	Yes	No
13	CHECK ANY OTHER DTC APPEARANCE.	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

N: DTC 31 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT RH) —

NOTE:
For the diagnostic procedure, refer to DTC 37. <Ref. to ABS-64, DTC 37 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

O: DTC 33 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT LH) —

NOTE:
For the diagnostic procedure, refer to DTC 37. <Ref. to ABS-64, DTC 37 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

P: DTC 35 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR RH) —

NOTE:
For the diagnostic procedure, refer to DTC 37. <Ref. to ABS-64, DTC 37 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

Q: DTC 37 — ABNORMAL INLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —

DIAGNOSIS:

- Faulty harness/connector
- Faulty inlet solenoid valve in ABSCM&H/U

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

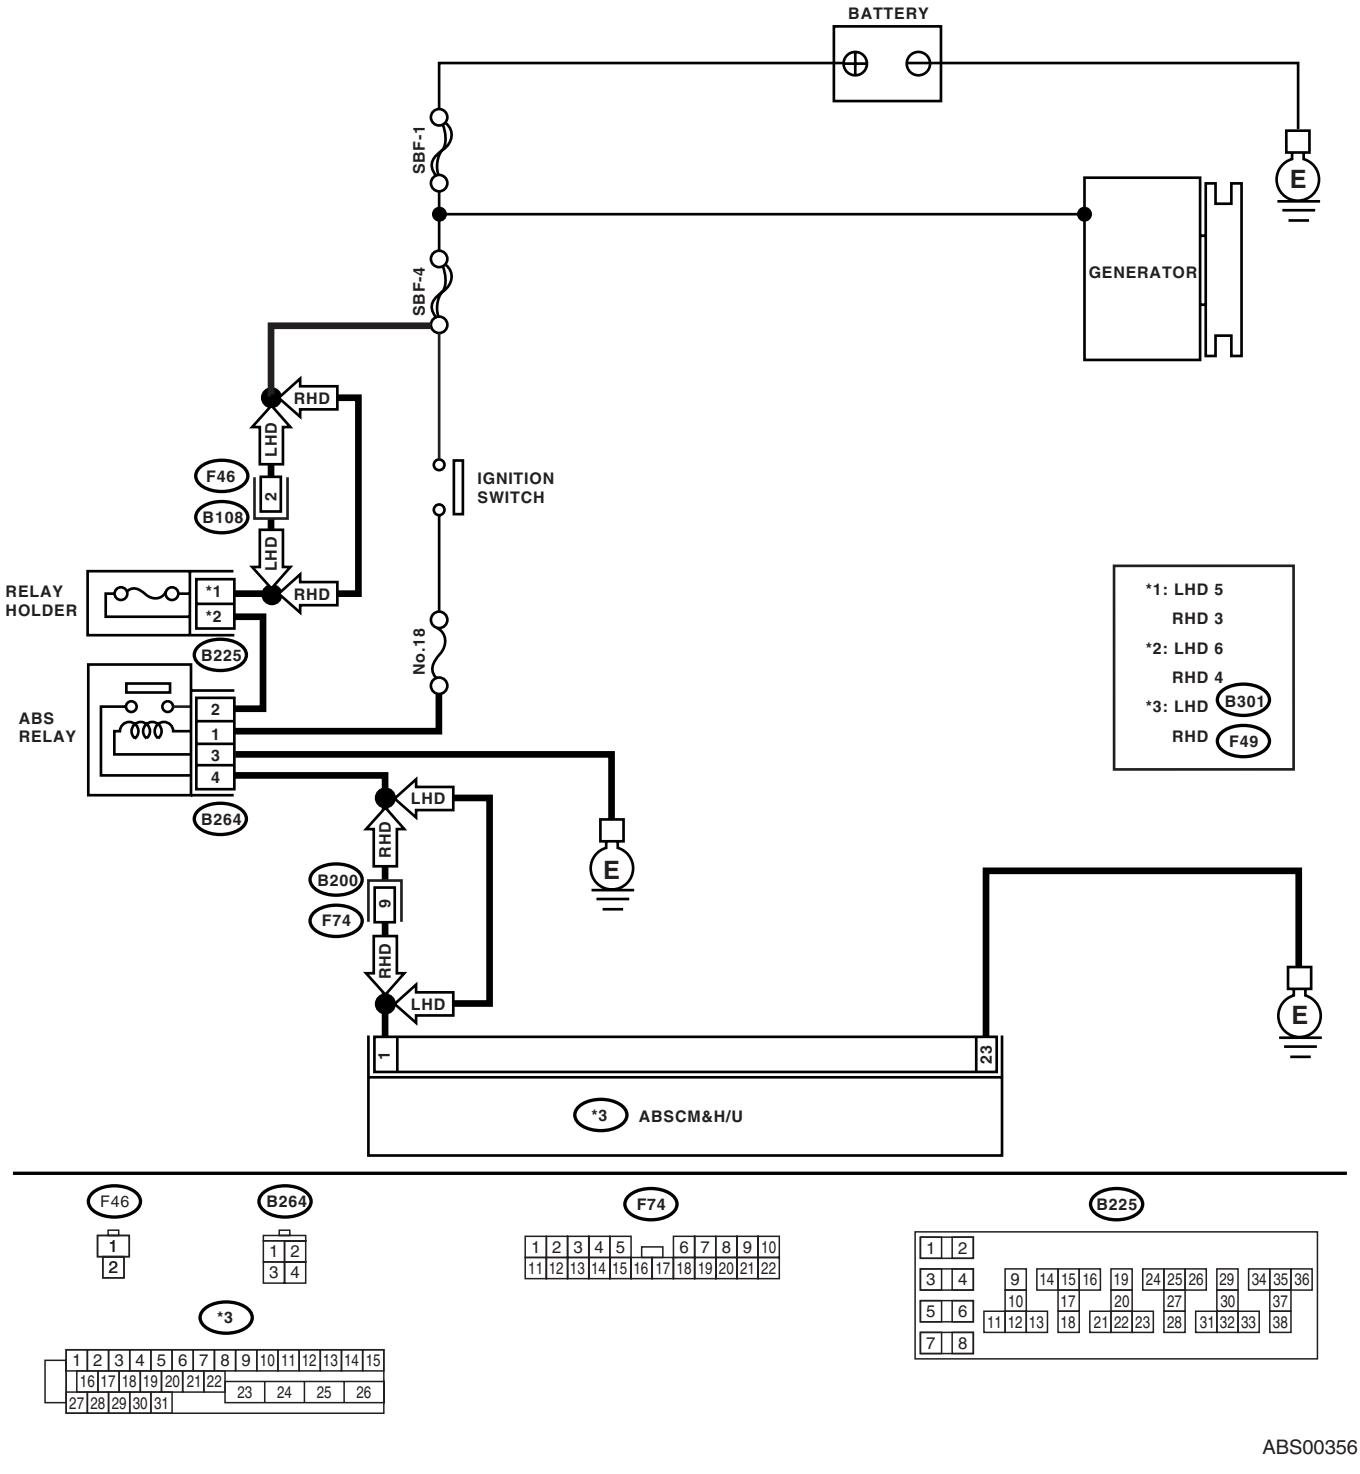

ABS00356

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Run the engine at idle. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the power supply circuit and ABSCM&H/U.
2	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

R: DTC 32 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT RH) —

NOTE:
For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-68, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

S: DTC 34 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT LH) —

NOTE:
For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-68, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

T: DTC 36 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR RH) —

NOTE:
For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-68, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

U: DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —

DIAGNOSIS:

- Faulty harness/connector
- Faulty outlet solenoid valve in ABSCM&H/U

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

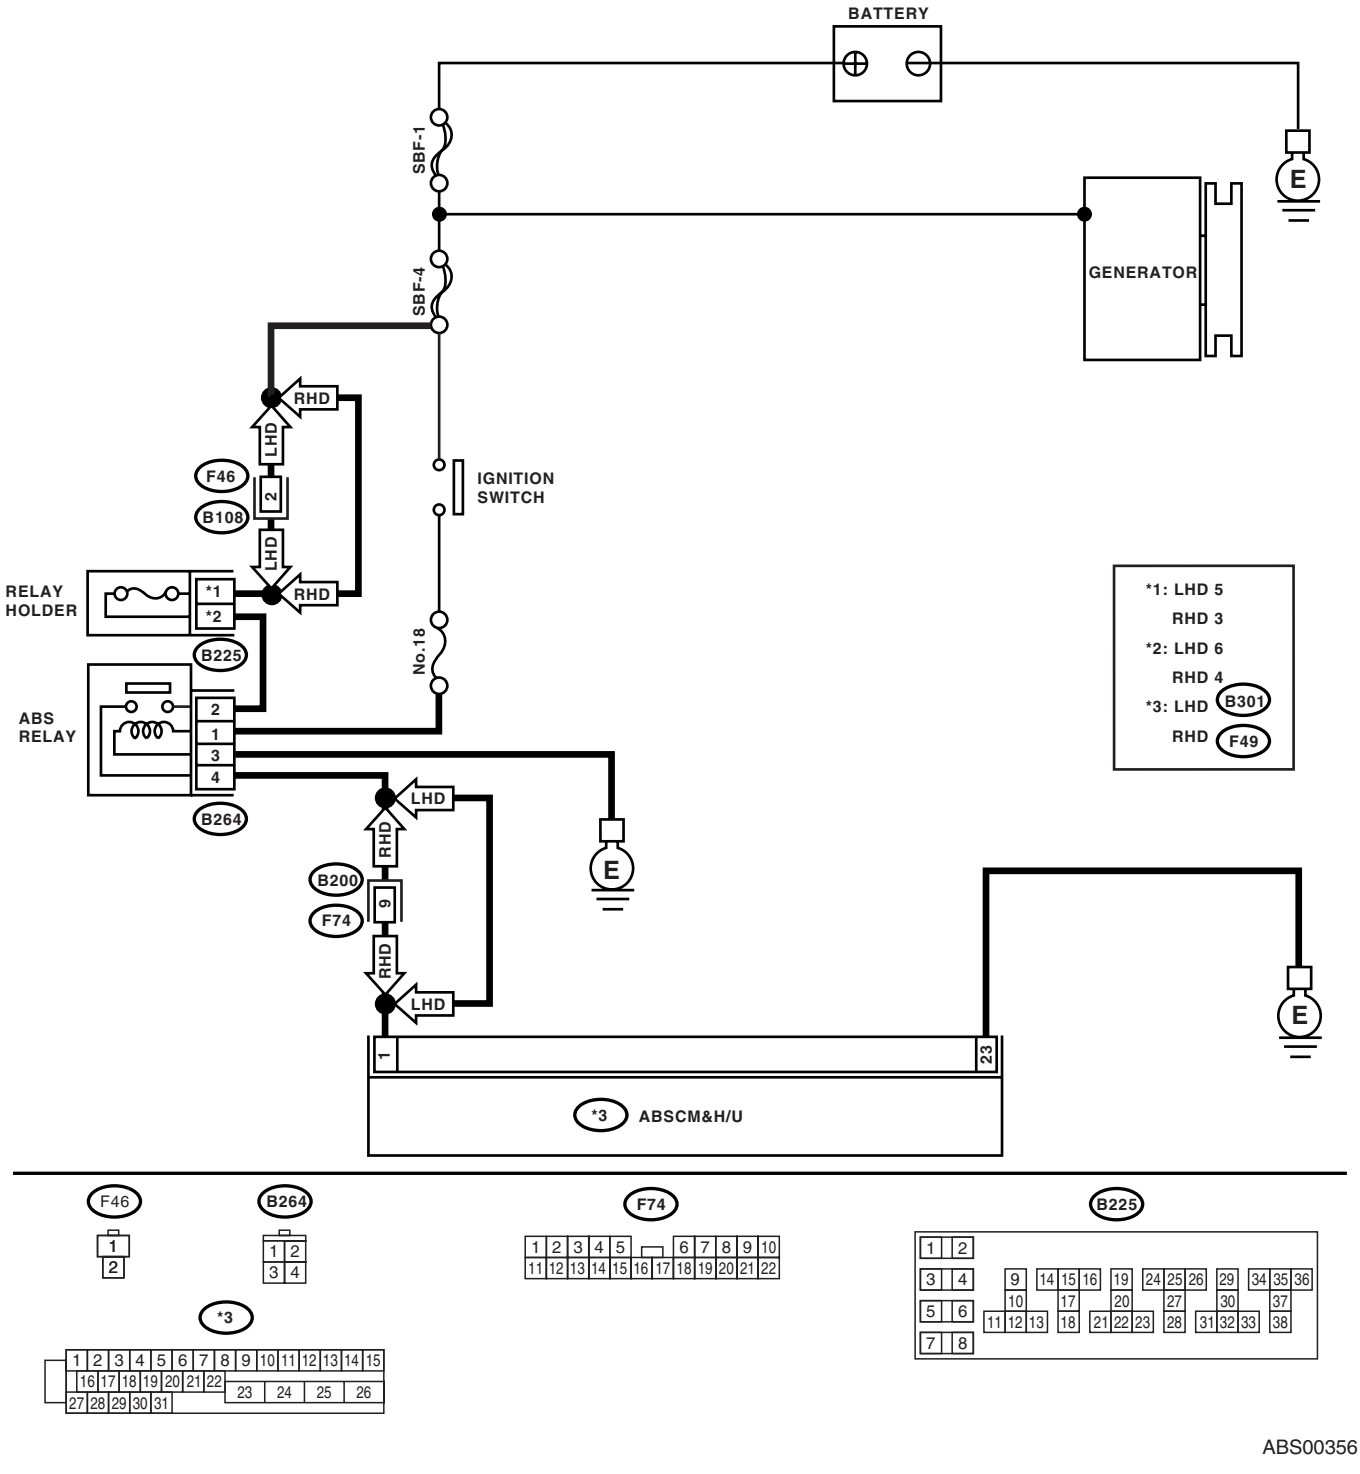

ABS00356

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Run the engine at idle. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the power supply circuit and ABSCM&H/U.
2	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

V: DTC 41
— ABNORMAL ABS CONTROL MODULE —

DIAGNOSIS:

- Faulty ABSCM&H/U.

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

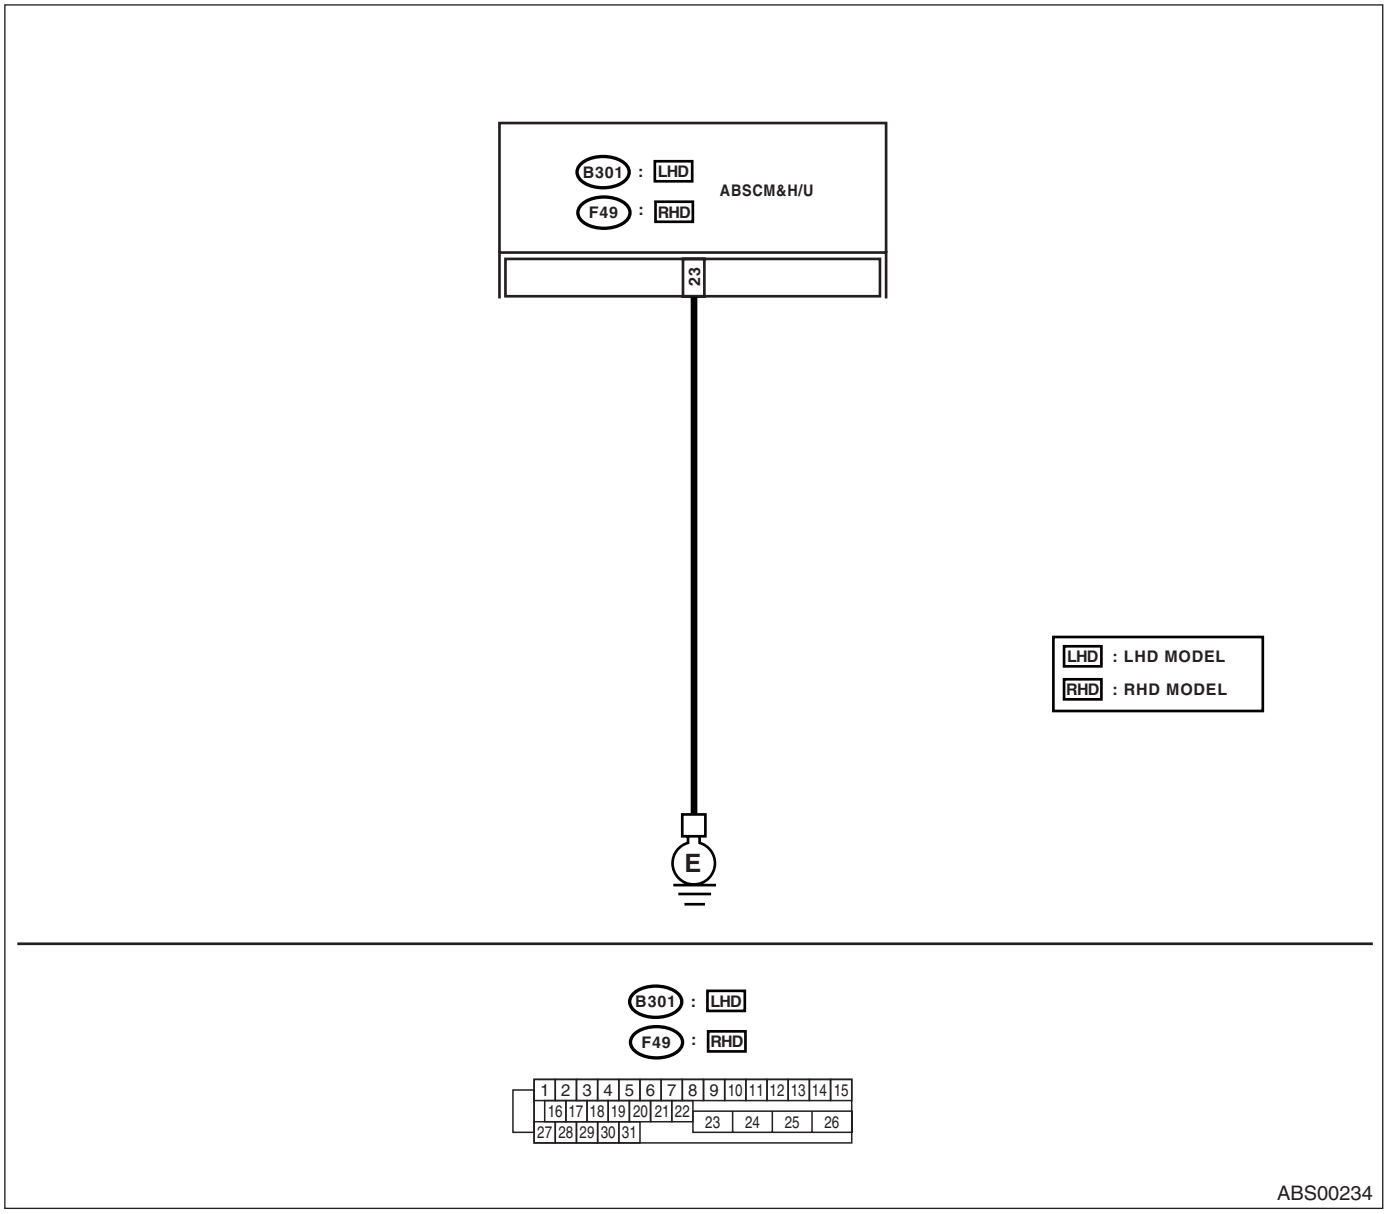

	Step	Check	Yes	No
1	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **2.**	Repair the ABSCM&H/U ground harness.
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between battery, ignition switch and ABSCM&H/U?	Repair the connector.	Go to step **3.**
3	**CHECK SOURCES OF SIGNAL NOISE.**	Is the car telephone or the wireless transmitter properly installed?	Go to step **4.**	Properly install the car telephone or wireless transmitter.
4	**CHECK SOURCES OF SIGNAL NOISE.**	Are noise sources (such as an antenna) installed near the sensor harness?	Install the noise sources apart from the sensor harness.	Go to step **5.**
5	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **6.**
6	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

W: DTC 42
— SOURCE VOLTAGE IS ABNORMAL —

DIAGNOSIS:

- Power source voltage of the ABSCM&H/U is low or high.

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates temporarily. Both warning lights go off on the recovery of voltage.

WIRING DIAGRAM:

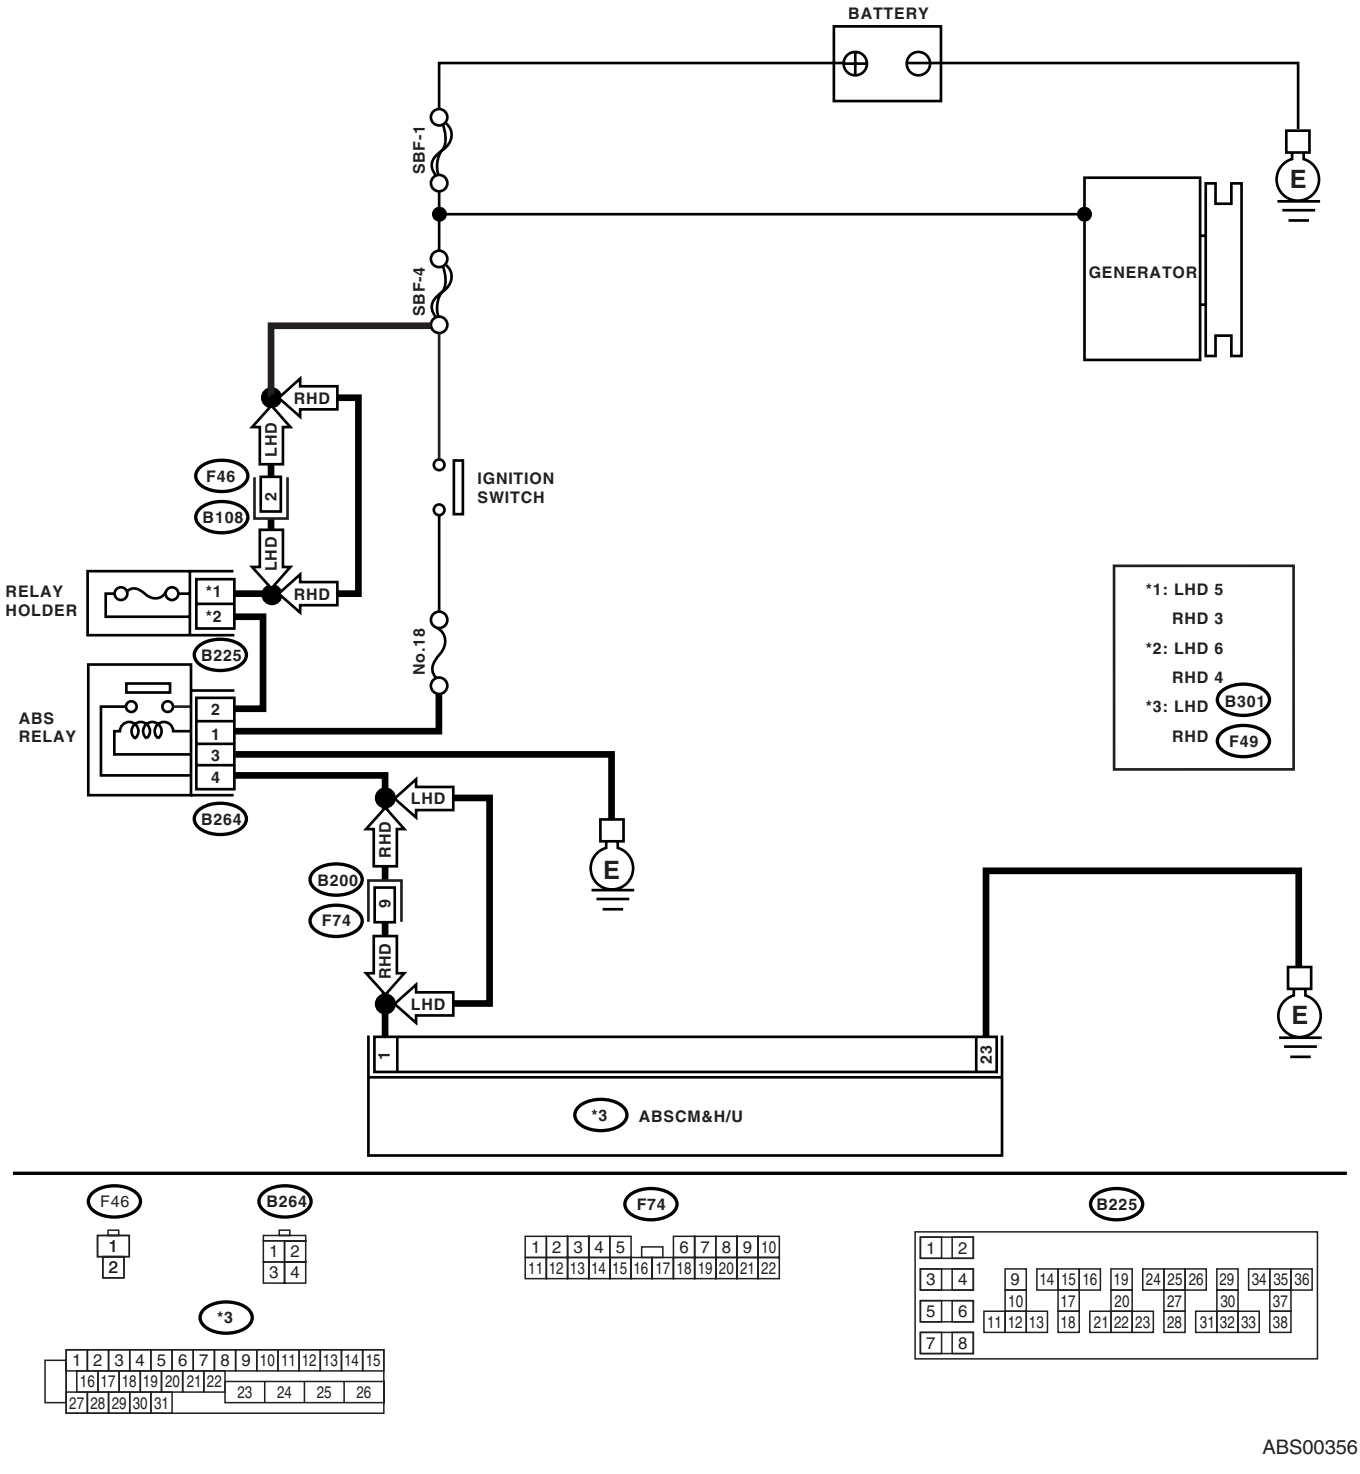

ABS00356

	Step	Check	Yes	No
1	**CHECK GENERATOR.** 1)Start the engine. 2)Idle after warm-up. 3)Measure the voltage between generator B terminal and chassis ground. ***Terminals*** ***Generator B terminal (+) — Chassis ground (−):***	Is the voltage 10 — 17 V?	Go to step **2.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
2	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Are the positive and negative battery terminals tightly clamped?	Go to step **3.**	Tighten the clamp of terminal.
3	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Disconnect the connector from ABSCM&H/U. 2)Run the engine at idle. 3)Operate the electric load applying devices, such as the headlight, A/C, and defogger. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (−):*** ***RHD: (F49) No. 1 (+) — Chassis ground (−):***	Is the voltage 10 — 17 V?	Go to step **4.**	Repair the power supply circuit and ABSCM&H/U.
4	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **5.**	Repair the ABSCM&H/U ground harness.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **6.**
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

X: DTC 44
— A COMBINATION OF AT CONTROL ABNORMAL —

DIAGNOSIS:

- Combination of AT control faults

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

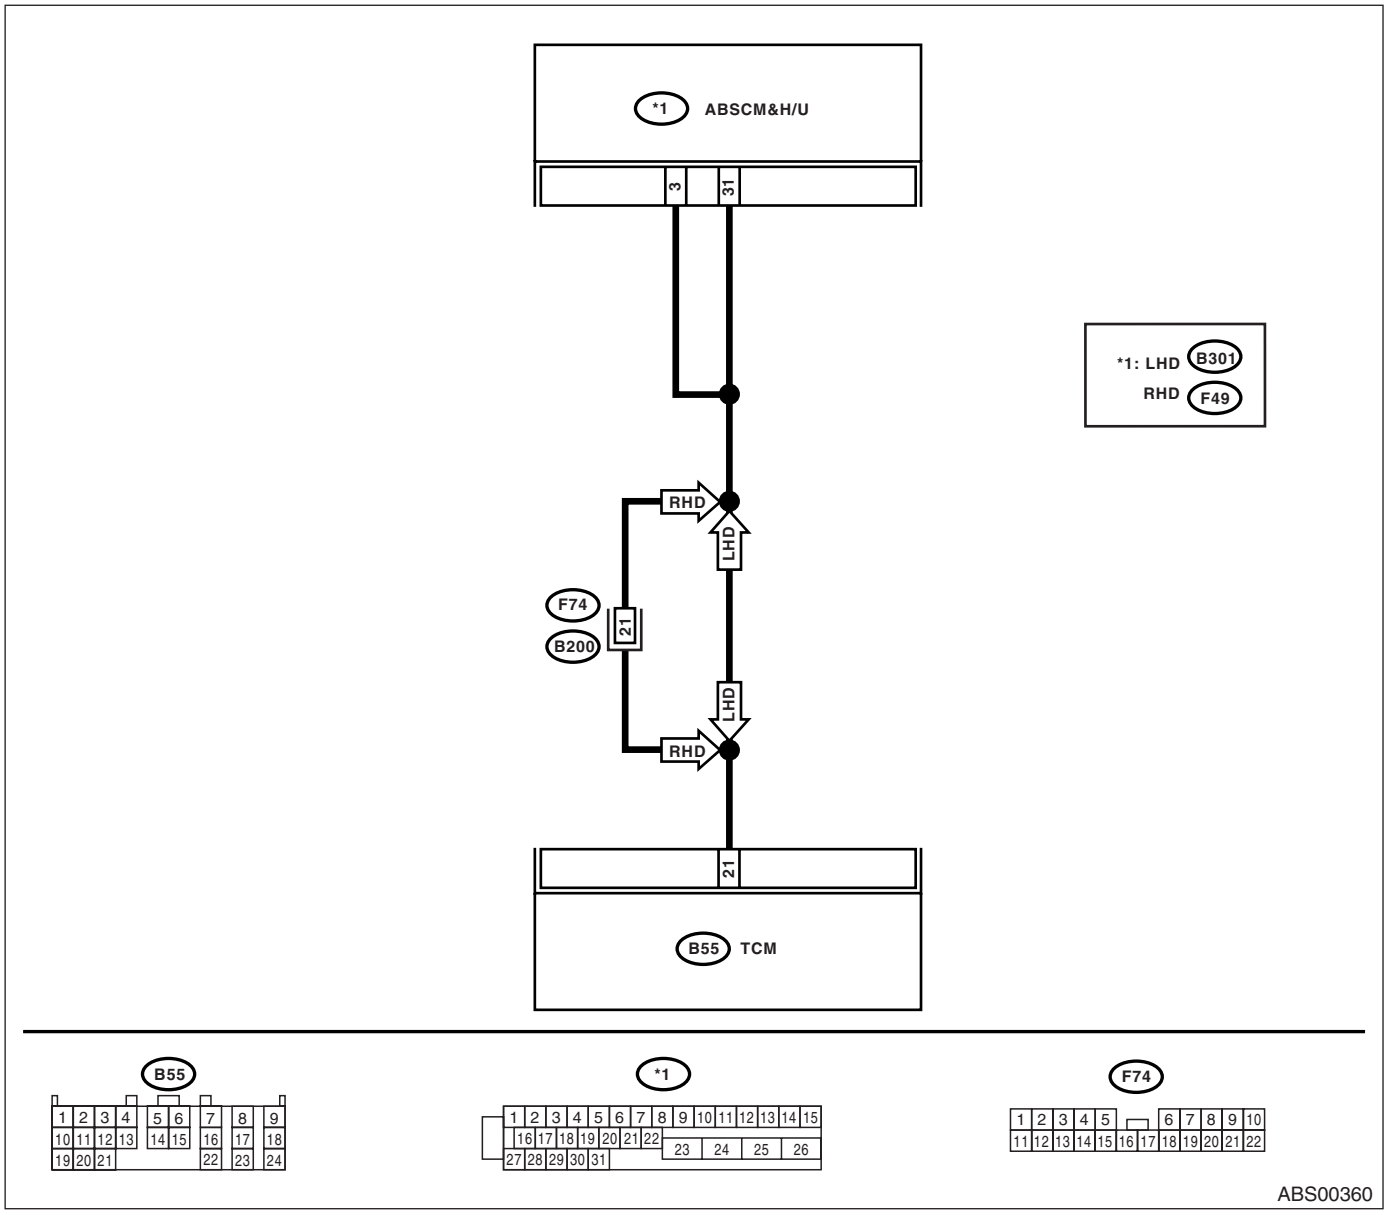

	Step	Check	Yes	No
1	**CHECK SPECIFICATIONS OF THE ABSCM&H/U.** Check the specifications of mark on ABSCM&H/U. ***CK: FWD AT*** ***CL: FWD MT*** ***CU: AWD AT*** ***CV: AWD MT*** ***CX: AWD MT (STi model)*** ***CY: AWD MT (STi with Driver's control center differential model)***	Specifications between vehicle and ABSCM&H/U are matched?	Go to step **2.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
2	**CHECK GROUND SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect all connectors from TCM. 3)Disconnect the connector from ABSCM&H/U. 4)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 3 — Chassis ground:*** ***RHD: (F49) No. 3 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the harness between TCM and ABSCM&H/U.
3	**CHECK BATTERY SHORT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 3 (+) — Chassis ground (–):*** ***RHD: (F49) No. 3 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **4.**	Repair the harness between TCM and ABSCM&H/U.
4	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 3 (+) — Chassis ground (–):*** ***RHD: (F49) No. 3 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **5.**	Repair the harness between TCM and ABSCM&H/U.
5	**CHECK TCM.** 1)Turn the ignition switch to OFF. 2)Connect all connectors to TCM. 3)Turn the ignition switch to ON. 4)Measure the voltage between TCM connector terminal and chassis ground. ***Connector & terminal*** ***(B55) No. 21 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **7.**	Go to step **6.**
6	**CHECK AT.**	Is the AT functioning normally?	Replace the TCM.	Repair the AT.
7	**CHECK OPEN CIRCUIT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD:*** ***(B301) No. 3 (+) — Chassis ground (–):*** ***(B301) No. 31 (+) — Chassis ground (–):*** ***RHD:*** ***(F49) No. 3 (+) — Chassis ground (–):*** ***(F49) No. 31 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **8.**	Repair the harness/connector between TCM and ABSCM&H/U.
8	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between TCM and ABSCM&H/U?	Repair the connector.	Go to step **9.**

	Step	Check	Yes	No
9	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **10.**
10	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

Y: DTC 51
— ABNORMAL VALVE RELAY —

DIAGNOSIS:

- Faulty valve relay

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate in some malfunctions.

NOTE:
In addition to the ABS warning light, brake warning light illuminates, if the EBD does not operate.

WIRING DIAGRAM:

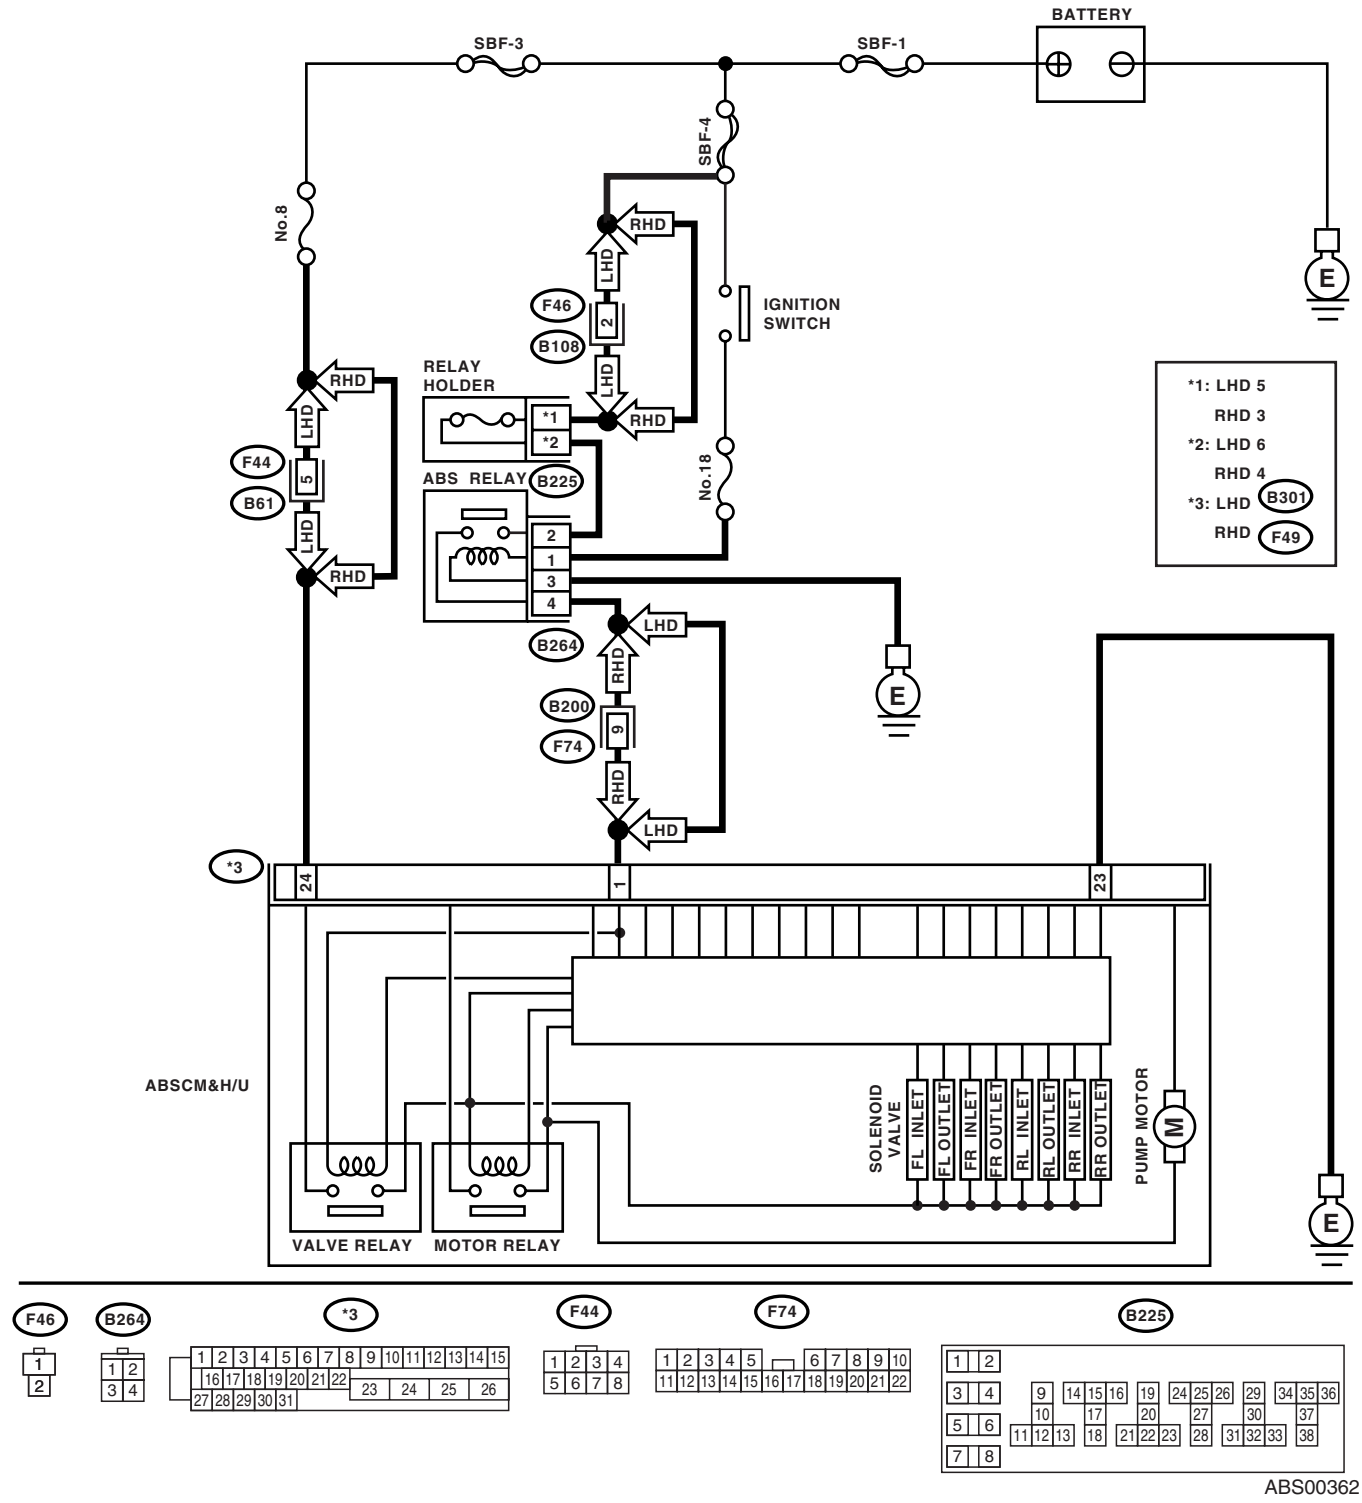

ABS00362

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Run the engine at idle. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD:*** ***(B301) No. 1 (+) — Chassis ground (−):*** ***(B301) No. 24 (+) — Chassis ground (−):*** ***RHD:*** ***(F49) No. 1 (+) — Chassis ground (−):*** ***(F49) No. 24 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness connector between battery, ABS relay and ABSCM&H/U.
2	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK VALVE RELAY IN ABSCM&H/U.** Measure the resistance between ABSCM&H/U and terminals. ***Terminals*** ***No. 23 — No. 24:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
4	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **5.**
5	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **6.**
6	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

Z: DTC 52
— ABNORMAL MOTOR AND/OR MOTOR RELAY —

DIAGNOSIS:

- Faulty motor
- Faulty motor relay
- Faulty harness connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

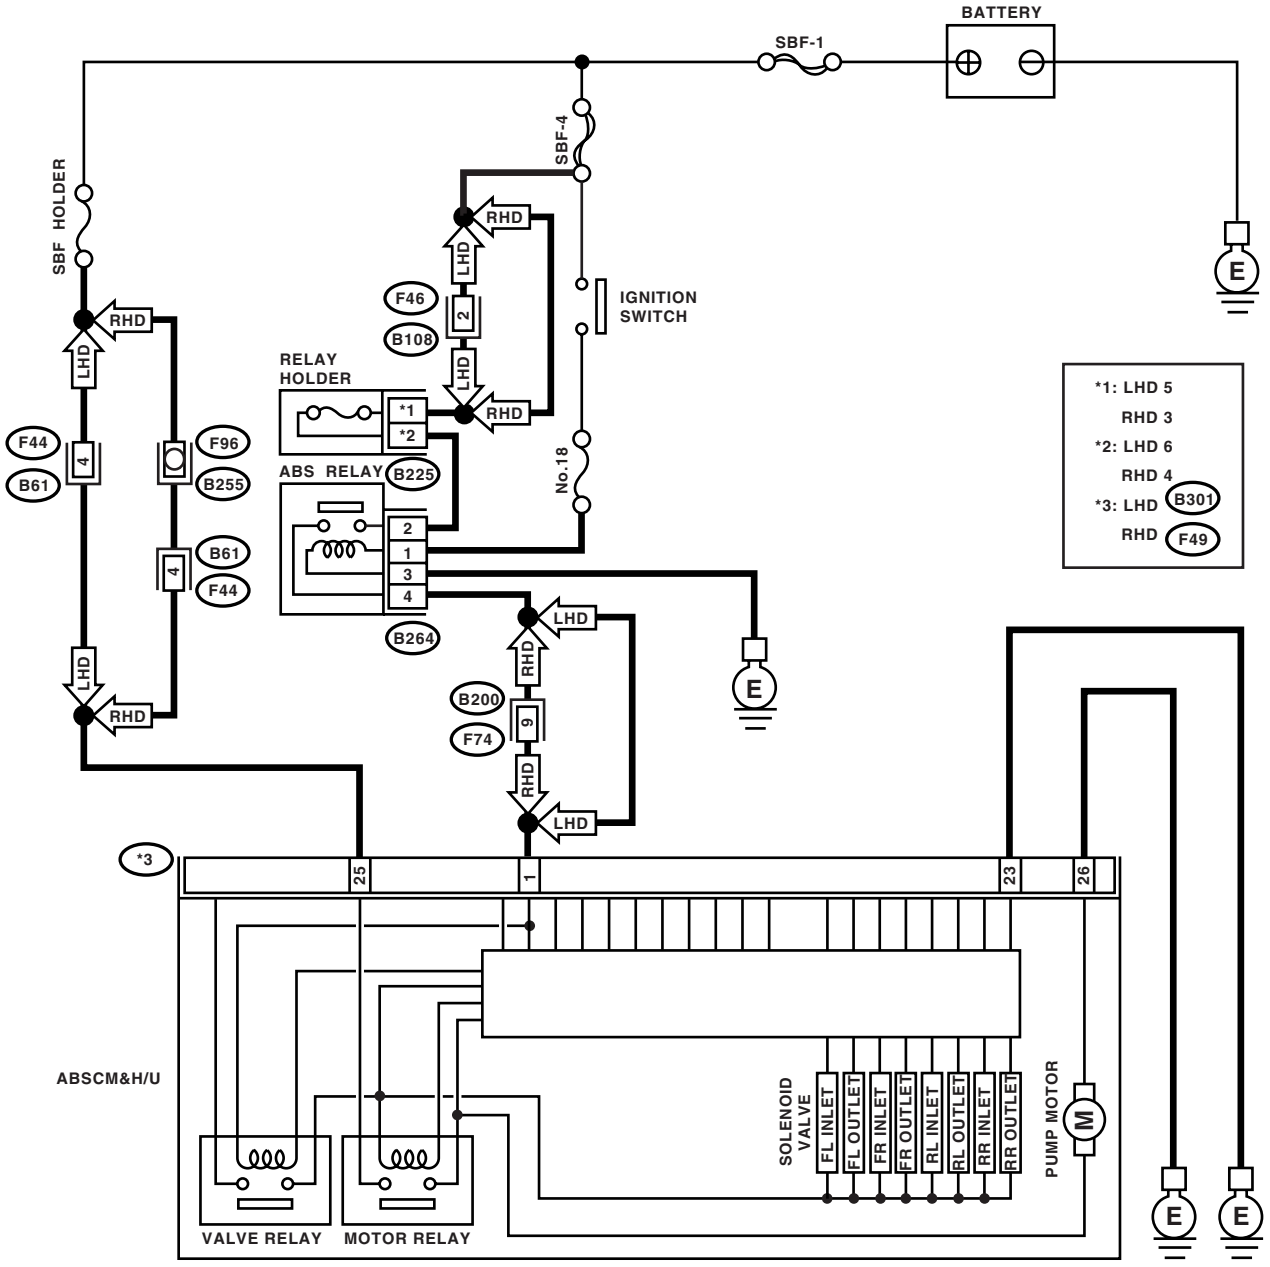

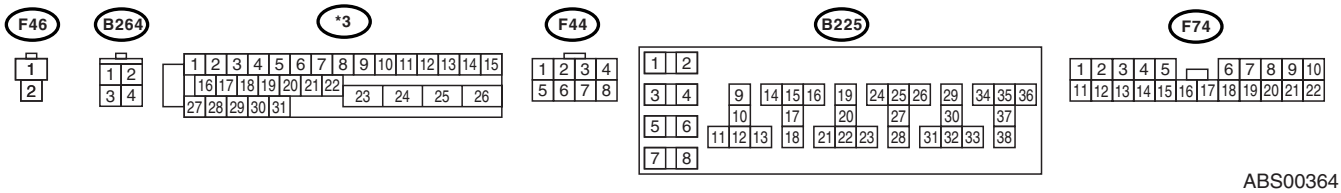

ABS00364

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 25 (+) — Chassis ground (–):*** ***RHD: (F49) No. 25 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness/connector between battery and ABSCM&H/U and check fuse SBF-holder.
2	**CHECK GROUND CIRCUIT OF MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 26 — Chassis ground:*** ***RHD: (F49) No. 26 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Run the engine at idle. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **4.**	Repair the harness connector between battery, ignition switch and ABSCM&H/U.
4	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **5.**	Repair the ABSCM&H/U ground harness.
5	**CHECK MOTOR OPERATION.** Operate the sequence control. <Ref. to ABS-10, ABS Sequence Control.> NOTE: Use the diagnosis connector to operate the sequence control.	Can motor revolution noise (buzz) be heard when carrying out the sequence control?	Go to step **6.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
6	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **7.**
7	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **8.**

Step	Check	Yes	No
8 CHECK ANY OTHER DTC APPEARANCE.	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact. NOTE: Although the ABS warning light remains illuminating at this point, this is a normal condition. Vehicle must be driven at approx. 12 km/h (7.46 MPH) or faster to turn off ABS warning light. Make sure that the ABS warning light goes off after driving vehicle.

AA:DTC 54
— ABNORMAL STOP LIGHT SWITCH —

DIAGNOSIS:

- Faulty stop light switch

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

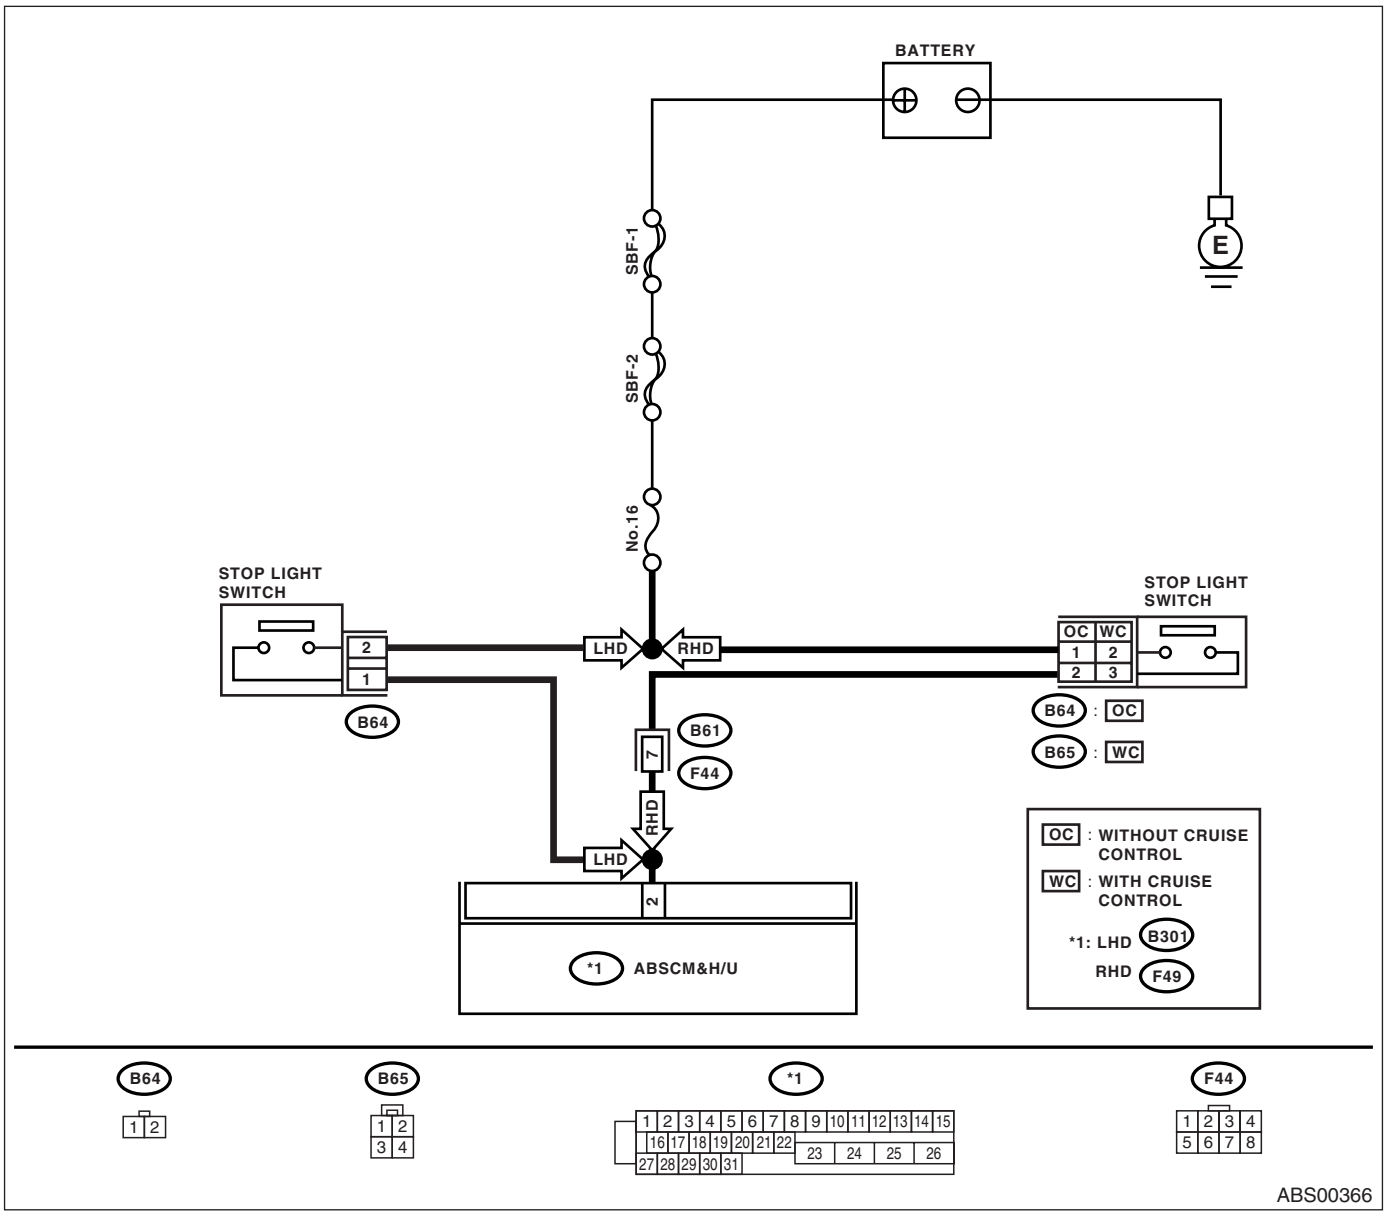

Step		Check	Yes	No
1	**CHECK STOP LIGHTS COME ON.** Depress the brake pedal.	Do the stop lights come on?	Go to step **2.**	Repair the stop lights circuit.

	Step	Check	Yes	No
2	**CHECK OPEN CIRCUIT IN HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Depress the brake pedal. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 2 (+) — Chassis ground (–):*** ***RHD: (F49) No. 2 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **3.**	Repair the harness between stop light switch and ABSCM&H/U.
3	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between stop light switch and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AB:DTC 56
— ABNORMAL G SENSOR OUTPUT VOLTAGE —

DIAGNOSIS:

- Faulty G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

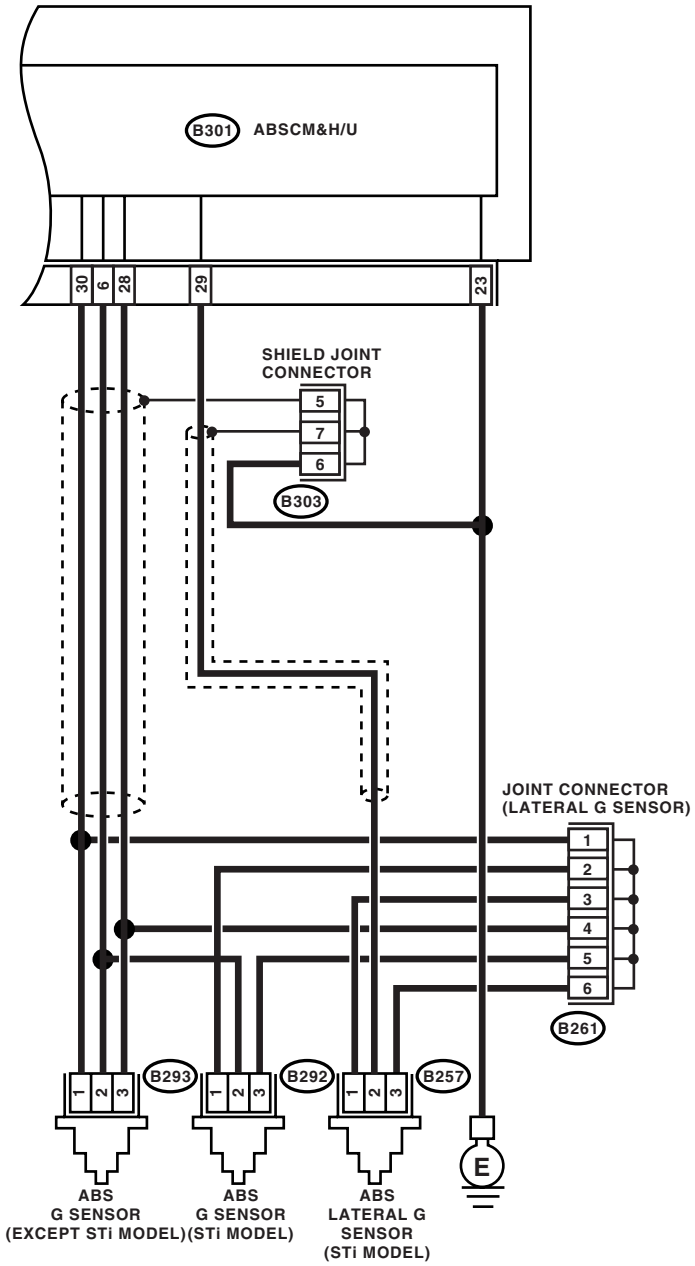

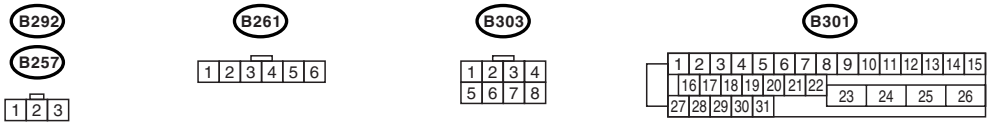

ABS00368

RHD MODEL

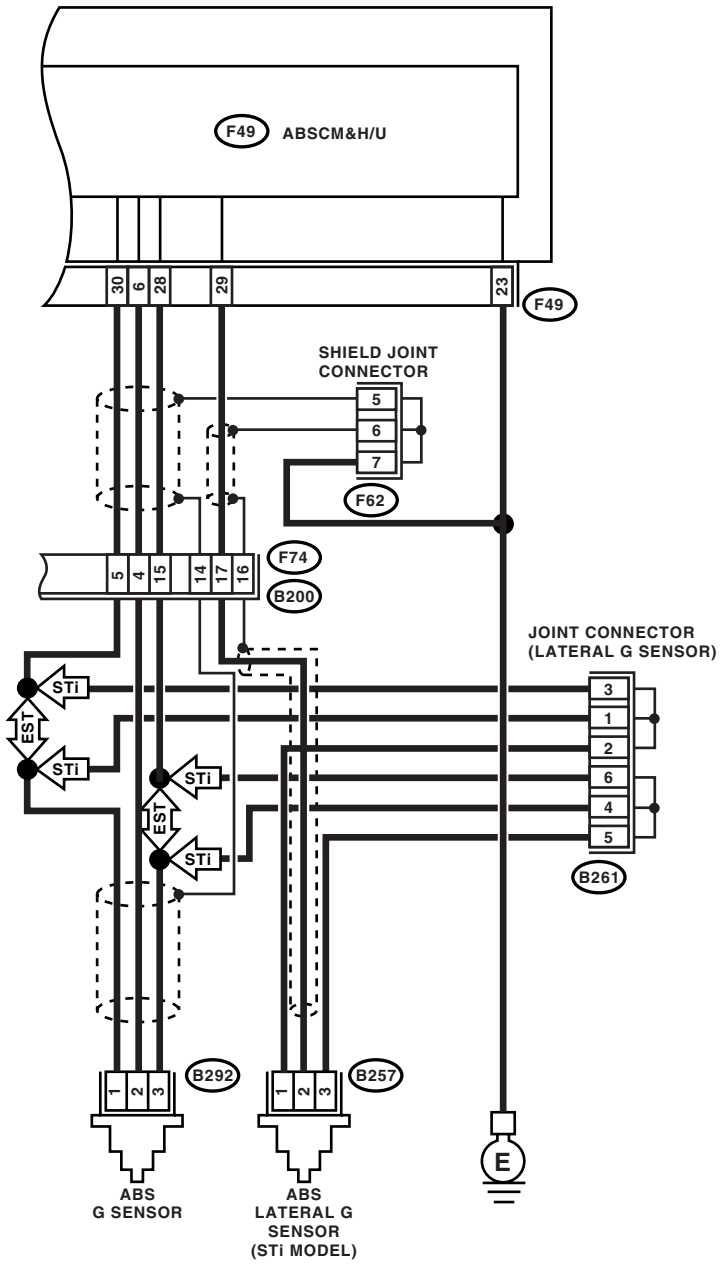

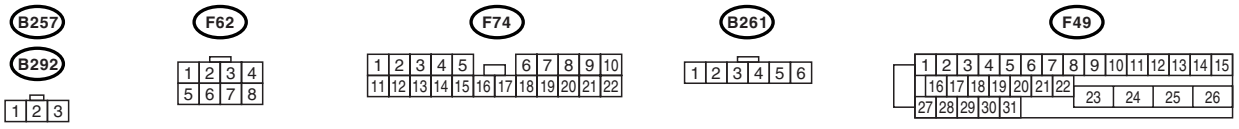

ABS00369

Step		Check	Yes	No
1	**CHECK ALL FOUR WHEELS FOR FREE TURNING.**	Have the wheels been turned freely such as when the vehicle is lifted up, or operated on a free roller or rolling road?	The ABS is normal. Erase the DTC.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK SPECIFICATIONS OF ABSCM&H/U.** Check the specifications of mark on ABSCM&H/U. ***CK: FWD AT*** ***CL: FWD MT*** ***CU: AWD AT*** ***CV: AWD MT*** ***CX: AWD MT (STi model)*** ***CY: AWD MT (STi with Driver's control center differential model)***	Does the vehicle specification and ABSCM&H/U specification match?	Go to step **3.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
3	**CHECK INPUT VOLTAGE OF G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the G sensor from vehicle. (Do not disconnect the connector.) 4)Turn the ignition switch to ON. 5)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 1 (+) — No. 3 (−):***	Is the voltage 4.75 — 5.25 V?	Go to step **4.**	Repair the harness/connector between G sensor and ABSCM&H/U.
4	**CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 6 — No. 28:*** ***RHD: (F49) No. 6 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **5.**	Repair the harness/connector between G sensor and ABSCM&H/U.
5	**CHECK GROUND SHORT IN G SENSOR OUTPUT HARNESS.** 1)Disconnect the connector from G sensor. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 6 — Chassis ground:*** ***RHD: (F49) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the harness between G sensor and ABSCM&H/U.
6	**CHECK BATTERY SHORT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 6 (+) — Chassis ground (−):*** ***RHD: (F49) No. 6 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **7.**	Repair the harness between G sensor and ABSCM&H/U.
7	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 6 (+) — Chassis ground (−):*** ***RHD: (F49) No. 6 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **8.**	Repair the harness between G sensor and ABSCM&H/U.

	Step	Check	Yes	No
8	**CHECK GROUND SHORT OF HARNESS.** Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 28 — Chassis ground:*** ***RHD: (F49) No. 28 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the harness between G sensor and ABSCM&H/U. Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
9	**CHECK G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the G sensor from vehicle. 3)Connect the connector to G sensor. 4)Connect the connector to ABSCM&H/U. 5)Turn the ignition switch to ON. 6)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.4 V when G sensor is horizontal?	Go to step **10.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
10	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 3.7 — 4.1 V when G sensor is inclined forwards to 90°?	Go to step **11.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
11	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when G sensor is inclined backwards to 90°?	Go to step **12.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
12	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **13.**
13	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **14.**
14	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AC:DTC 73
— ABNORMAL LATERAL G SENSOR OUTPUT VOLTAGE —

DIAGNOSIS:

- Faulty Lateral G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

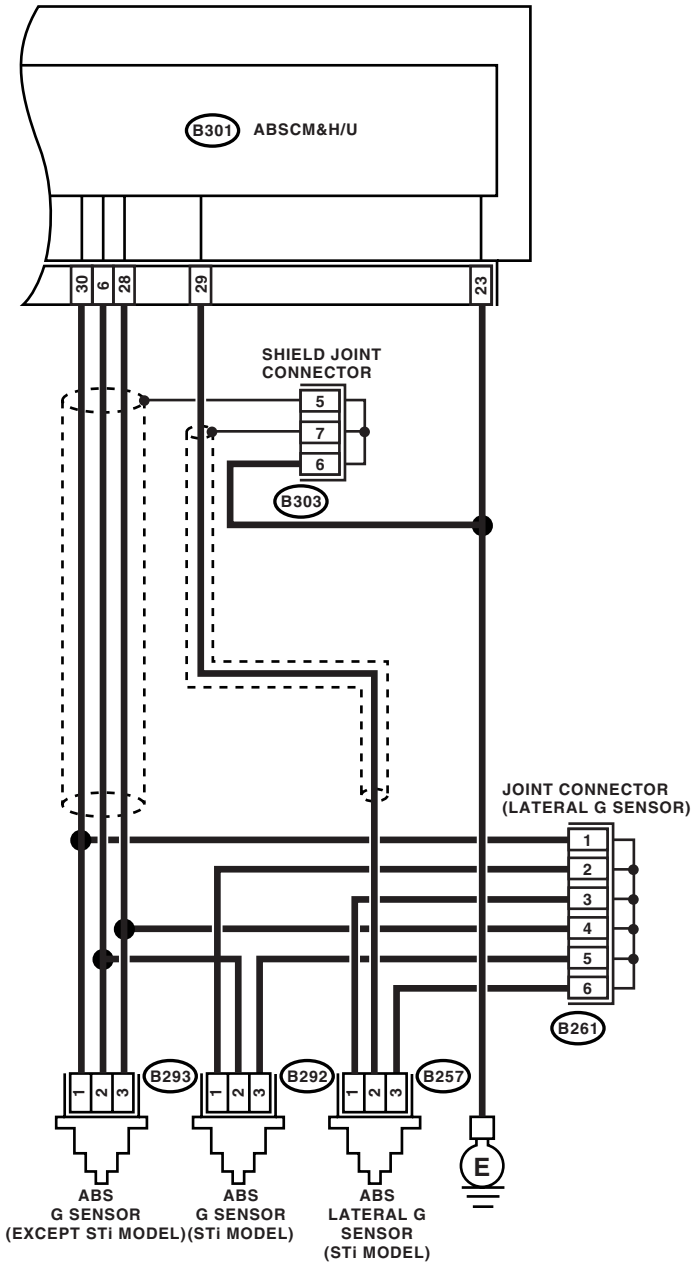

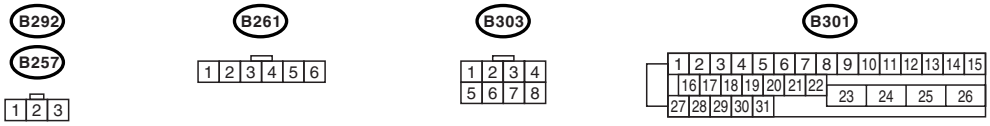

ABS00368

RHD MODEL

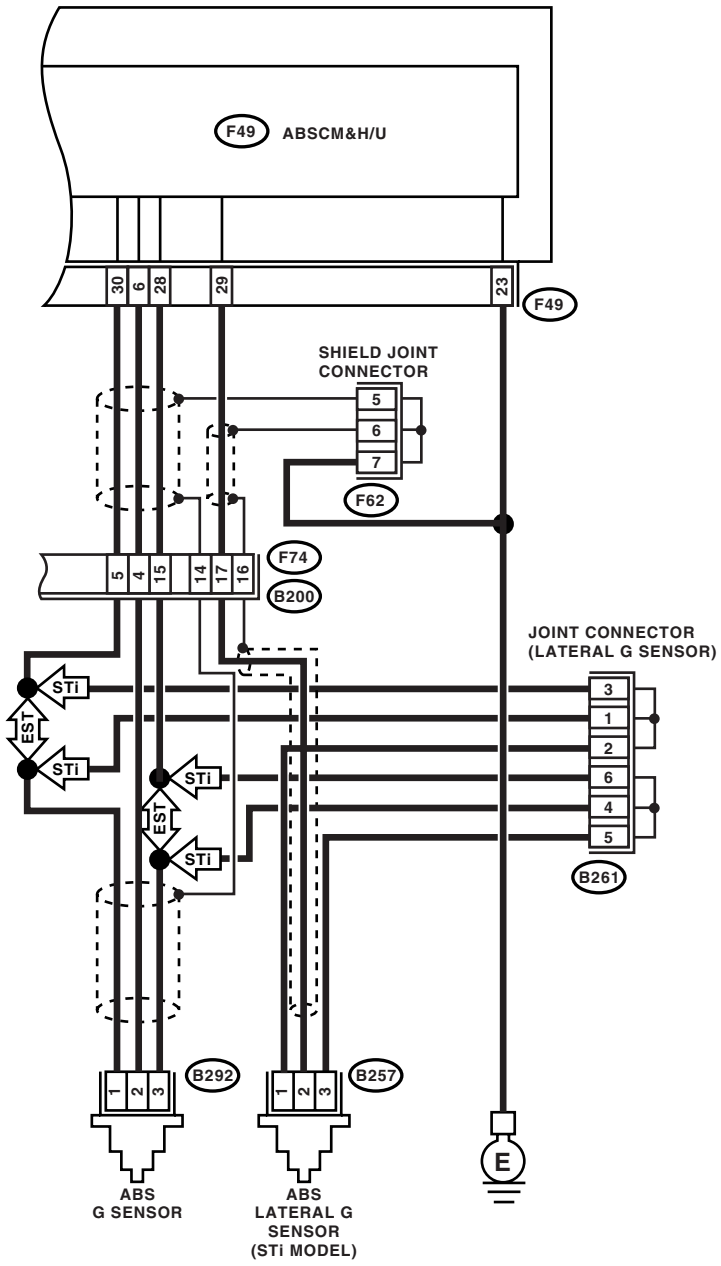

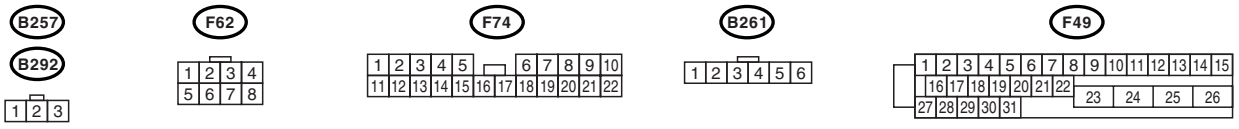

ABS00369

Step		Check	Yes	No
1	**CHECK ALL FOUR WHEELS FOR FREE TURNING.**	Have the wheels been turned freely such as when the vehicle is lifted up, or operated on a free roller or rolling road?	The ABS is normal. Erase the DTC.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK SPECIFICATIONS OF ABSCM&H/U.** Check the specifications of mark on ABSCM&H/U. ***CK: FWD AT*** ***CL: FWD MT*** ***CU: AWD AT*** ***CV: AWD MT*** ***CX: AWD MT (STi model)*** ***CY: AWD MT (STi with Driver's control center differential model)***	Does the vehicle specification and ABSCM&H/U specification match?	Go to step **3.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
3	**CHECK INPUT VOLTAGE OF LATERAL G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the lateral G sensor from vehicle. (Do not disconnect the connector.) 4)Turn the ignition switch to ON. 5)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 1 (+) — No. 3 (−):***	Is the voltage 4.75 — 5.25 V?	Go to step **4.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
4	**CHECK OPEN CIRCUIT IN LATERAL G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD:(B301) No. 29 — No. 28:*** ***RHD: (F49) No. 29 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **5.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
5	**CHECK GROUND SHORT IN LATERAL G SENSOR OUTPUT HARNESS.** 1)Disconnect the connector from lateral G sensor. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 29 — Chassis ground:*** ***RHD: (F49) No. 29 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the harness between lateral G sensor and ABSCM&H/U.
6	**CHECK BATTERY SHORT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 29 (+) — Chassis ground (−):*** ***RHD: (F49) No. 29 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **7.**	Repair the harness between lateral G sensor and ABSCM&H/U.
7	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 29 (+) — Chassis ground (−):*** ***RHD: (F49) No. 29 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **8.**	Repair the harness between lateral G sensor and ABSCM&H/U.

	Step	Check	Yes	No
8	**CHECK GROUND SHORT OF HARNESS.** Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 28 — Chassis ground:*** ***RHD: (F49) No. 28 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Repair the harness between lateral G sensor and ABSCM&H/U. Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
9	**CHECK LATERAL G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the lateral G sensor from vehicle. 3)Connect the connector to lateral G sensor. 4)Connect the connector to ABSCM&H/U. 5)Turn the ignition switch to ON. 6)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 2.3 — 2.7 V when lateral G sensor is horizontal?	Go to step **10.**	Replace the lateral G sensor. <Ref. to ABS-21, G Sensor.>
10	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage between 3.7 — 4.1 V when lateral G sensor is inclined right to 90°?	Go to step **11.**	Replace the lateral G sensor. <Ref. to ABS-21, G Sensor.>
11	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage between 0.5 — 0.9 V when lateral G sensor is inclined left to 90°?	Go to step **12.**	Replace the lateral G sensor. <Ref. to ABS-21, G Sensor.>
12	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **13.**
13	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **14.**
14	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

13.Diagnostics Procedure with Diagnostic Trouble Code (DTC)

A: COMMUNICATION FOR INITIALIZING IMPOSSIBLE

DIAGNOSIS:

- Faulty harness connector

TROUBLE SYMPTOM:

- Communication cannot be executed between ABS and Subaru select monitor.

WIRING DIAGRAM:

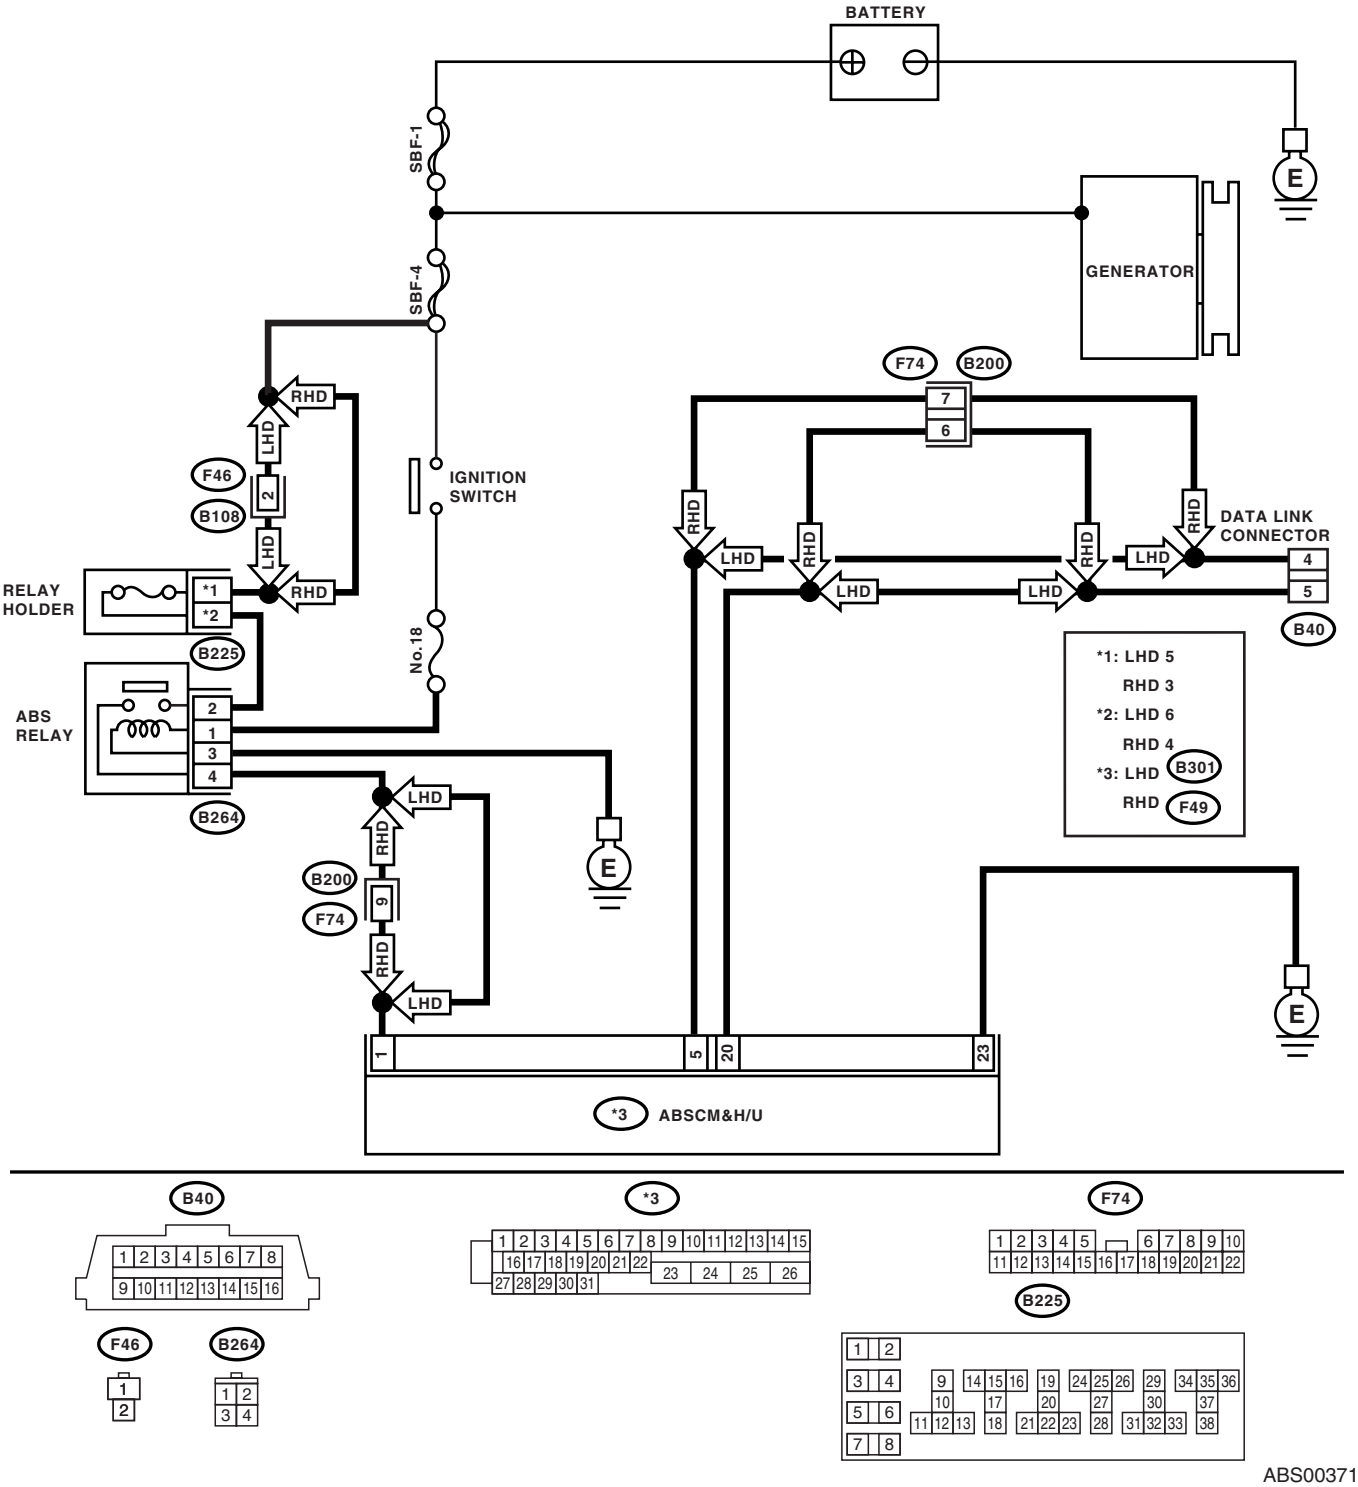

ABS00371

	Step	Check	Yes	No
1	**CHECK IGNITION SWITCH.**	Is the ignition switch turned to ON?	Go to step **2.**	Turn the ignition switch to ON, and select ABS mode using Subaru Select Monitor.
2	**CHECK BATTERY.** 1)Turn the ignition switch to OFF. 2)Measure the battery voltage.	Is the voltage or more 11 V?	Go to step **3.**	Charge or replace the battery.
3	**CHECK BATTERY TERMINAL.**	Is there poor contact at battery terminal?	Repair or tighten the battery terminal.	Go to step **4.**
4	**CHECK COMMUNICATION OF SUBARU SELECT MONITOR.** 1)Turn the ignition switch to ON. 2)Using the Subaru Select Monitor, check whether communication to other system can be executed normally.	Are the name and year of system displayed on Subaru Select Monitor?	Go to step **8.**	Go to step **5.**
5	**CHECK COMMUNICATION OF SUBARU SELECT MONITOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the ABSCM&H/U connector. 3)Turn the ignition switch to ON. 4)Check whether communication to other systems can be executed normally.	Are the name and year of system displayed on Subaru Select Monitor?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **6.**
6	**CHECK HARNESS CONNECTOR BETWEEN EACH CONTROL MODULE AND DATA LINK CONNECTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the ABSCM&H/U, ECM and TCM connectors. 3)Measure the resistance between data link connector and chassis ground. ***Connector & terminal*** ***(B40) No. 5 — Chassis ground:*** ***(B40) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the harness and connector between each control module and data link connector.
7	**CHECK OUTPUT SIGNAL FOR ABSCM&H/U.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***(B40) No. 5 (+) — Chassis ground (−):*** ***(B40) No. 4 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **8.**	Repair the harness and connector between each control module and data link connector.
8	**CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND DATA LINK CONNECTOR.** Measure the resistance between ABSCM&H/U connector and data link connector. ***Connector & terminal*** ***LHD:*** ***(B301) No. 20 — (B40) No. 5:*** ***(B301) No. 5 — (B40) No. 4:*** ***RHD:*** ***(F49) No. 20 — (B40) No. 5:*** ***(F49) No. 5 — (B40) No. 4:***	Is the resistance less than 0.5 Ω?	Go to step **9.**	Repair the harness and connector between ABSCM&H/U and data link connector.
9	**CHECK INSTALLATION OF ABSCM&H/U CONNECTOR.** Turn the ignition switch to OFF.	Is the ABSCM&H/U connector inserted into ABSCM&H/U until the clamp locks onto it?	Go to step **10.**	Insert the ABSCM&H/U connector into ABSCM&H/U.

	Step	Check	Yes	No
10	**CHECK POWER SUPPLY CIRCUIT.** 1)Turn the ignition switch to ON (engine OFF). 2)Measure the ignition power supply voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **11.**	Repair the open circuit in harness between ABSCM&H/U and battery.
11	**CHECK HARNESS CONNECTOR BETWEEN ABSCM&H/U AND CHASSIS GROUND.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U and transmission. 3)Measure the resistance of harness between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **12.**	Repair the open circuit in harness between ABSCM&H/U and inhibitor side connector, and poor contact in coupling connector.
12	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in control module power supply, ground line and data link connector?	Repair the connector.	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

B: NO DTC

DIAGNOSIS:

- ABS warning light circuit is shorted.

TROUBLE SYMPTOM:

- ABS warning light remains on.
- NO DTC displayed on the Subaru Select Monitor.

NOTE:
When the ABS warning light is OFF and “NO DTC” is displayed on Subaru Select Monitor, the system is in normal condition.

WIRING DIAGRAM:
LHD MODEL

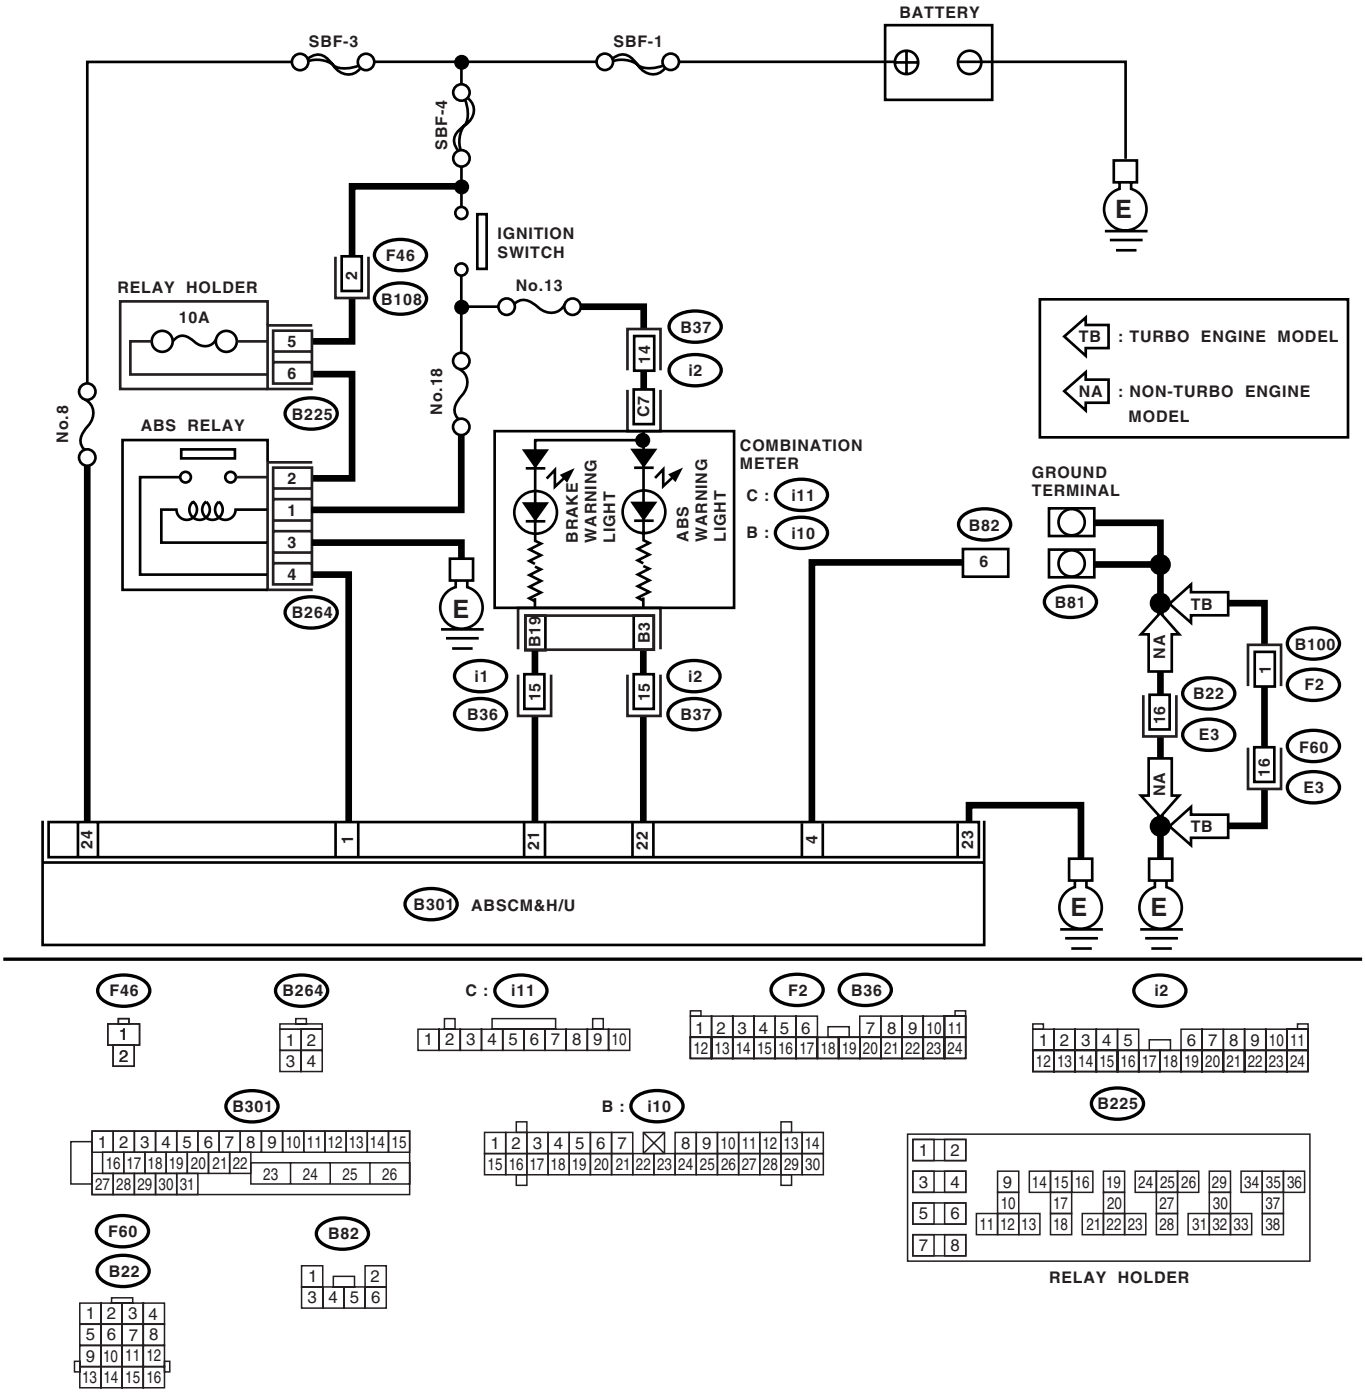

ABS00347

RHD MODEL

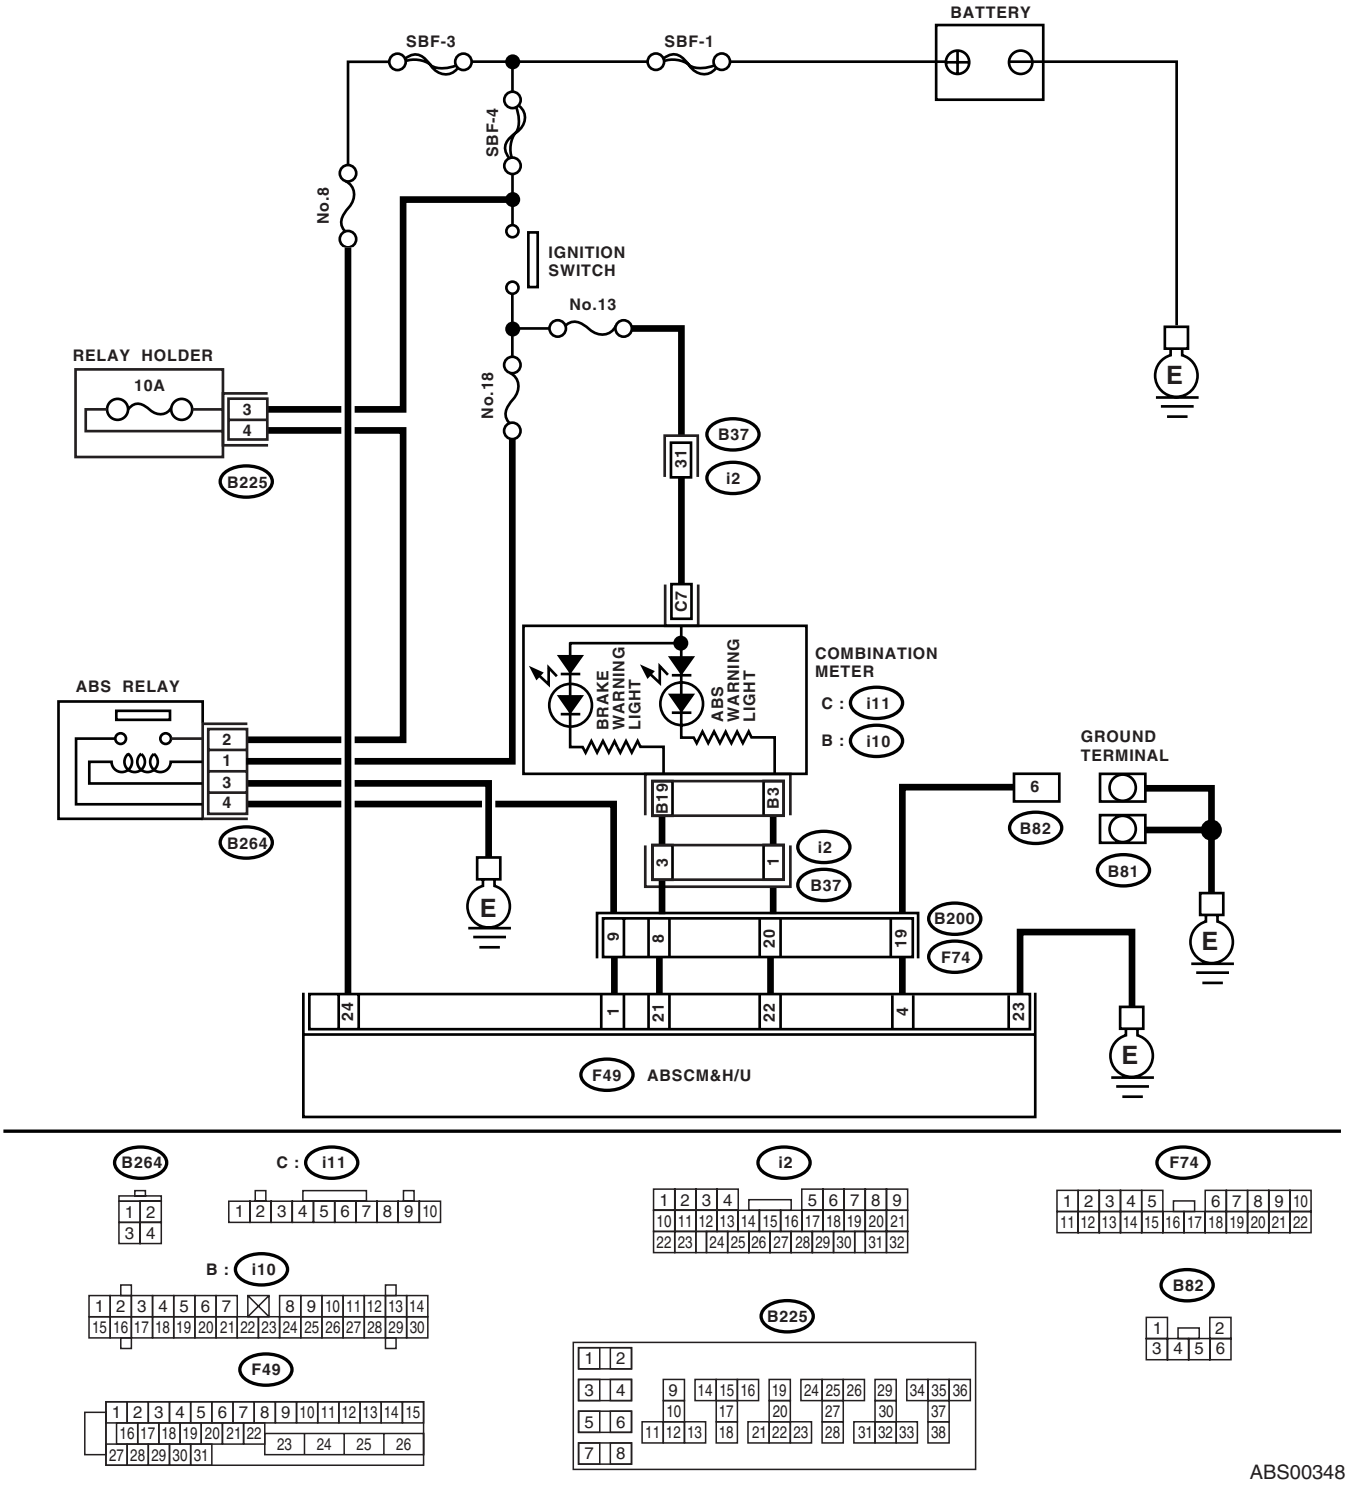

Step		Check	Yes	No
1	**CHECK WIRING HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector (i2) from connector (B37). 3)Turn the ignition switch to ON.	Does the ABS warning light turn on?	Go to step **2.**	Repair the front wiring harness.

	Step	Check	Yes	No
2	**CHECK PROJECTION AT ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. NOTE: For detail of connector switch, refer to following. <Ref. to ABS-13, ELECTRICAL SPECIFICATION, Control Module I/O Signal.>	Is there any damage on projection which switches connector switch?	Go to step **3.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
3	**CHECK ABSCM&H/U.** Measure the resistance between ABSCM&H/U terminals. ***Terminals*** ***No. 22 — No. 23:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
4	**CHECK WIRING HARNESS.** Measure the resistance between connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 22 — Chassis ground:*** ***RHD: (F49) No. 22 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **5.**	Repair the harness.
5	**CHECK WIRING HARNESS.** 1)Connect the connector to ABSCM&H/U. 2)Measure the resistance between connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 22 — Chassis ground:*** ***RHD: (F49) No. 22 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Repair the harness.
6	**CHECK POOR CONTACT IN ABSCM&H/U CONNECTOR.**	Is there poor contact in ABSCM&H/U connector?	Repair the connector.	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

C: DTC 21 — OPEN OR SHORT CIRCUIT IN FRONT RIGHT ABS WHEEL SPEED SENSOR CIRCUIT —

NOTE:
For the diagnostic procedure, refer to DTC 27. <Ref. to ABS-103, DTC 27 — OPEN OR SHORT CIRCUIT IN REAR LEFT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

D: DTC 23 — OPEN OR SHORT CIRCUIT IN FRONT LEFT ABS WHEEL SPEED SENSOR CIRCUIT —

NOTE:
For the diagnostic procedure, refer to DTC 27. <Ref. to ABS-103, DTC 27 — OPEN OR SHORT CIRCUIT IN REAR LEFT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

E: DTC 25 — OPEN OR SHORT CIRCUIT IN REAR RIGHT ABS WHEEL SPEED SENSOR CIRCUIT —

NOTE:
For the diagnostic procedure, refer to DTC 27. <Ref. to ABS-103, DTC 27 — OPEN OR SHORT CIRCUIT IN REAR LEFT ABS WHEEL SPEED SENSOR CIRCUIT —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

F: DTC 27 — OPEN OR SHORT CIRCUIT IN REAR LEFT ABS WHEEL SPEED SENSOR CIRCUIT —

DIAGNOSIS:

- Faulty ABS wheel speed sensor (Broken wire, input voltage too high)
- Faulty harness connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:
LHD MODEL

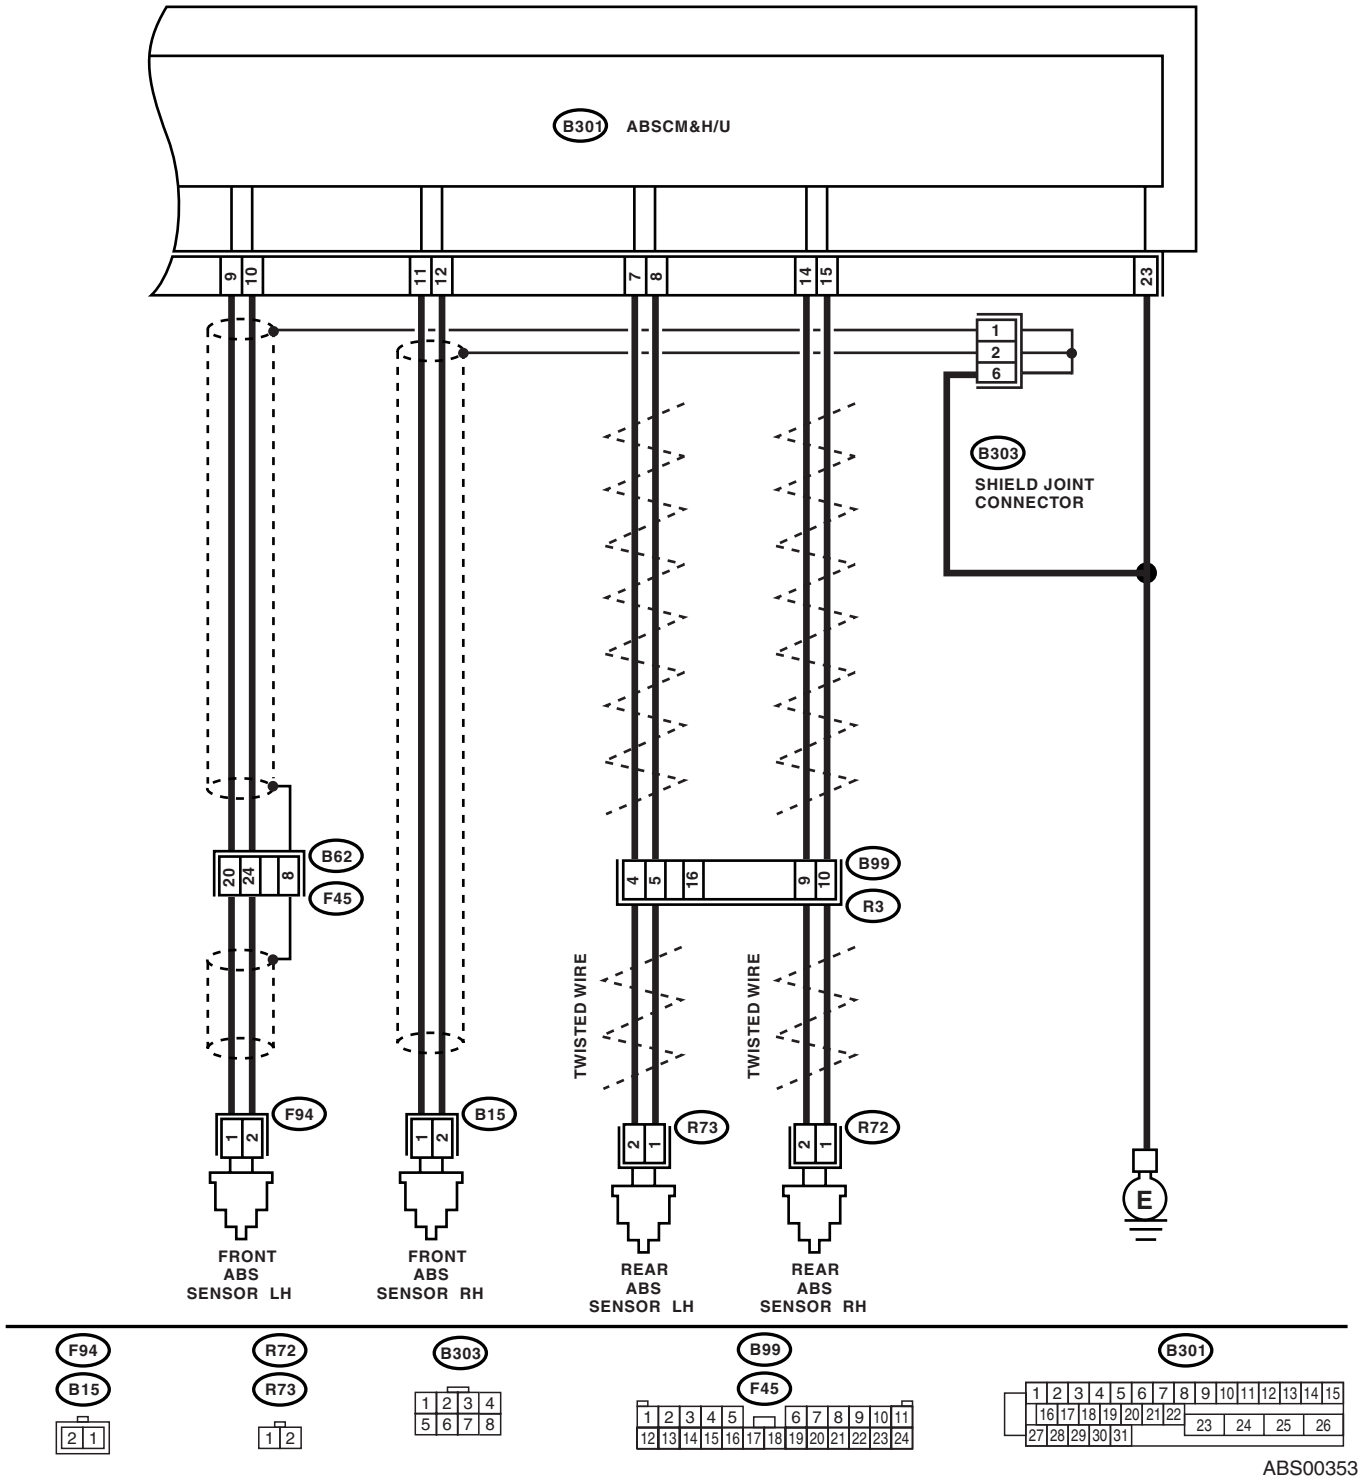

ABS00353

RHD MODEL

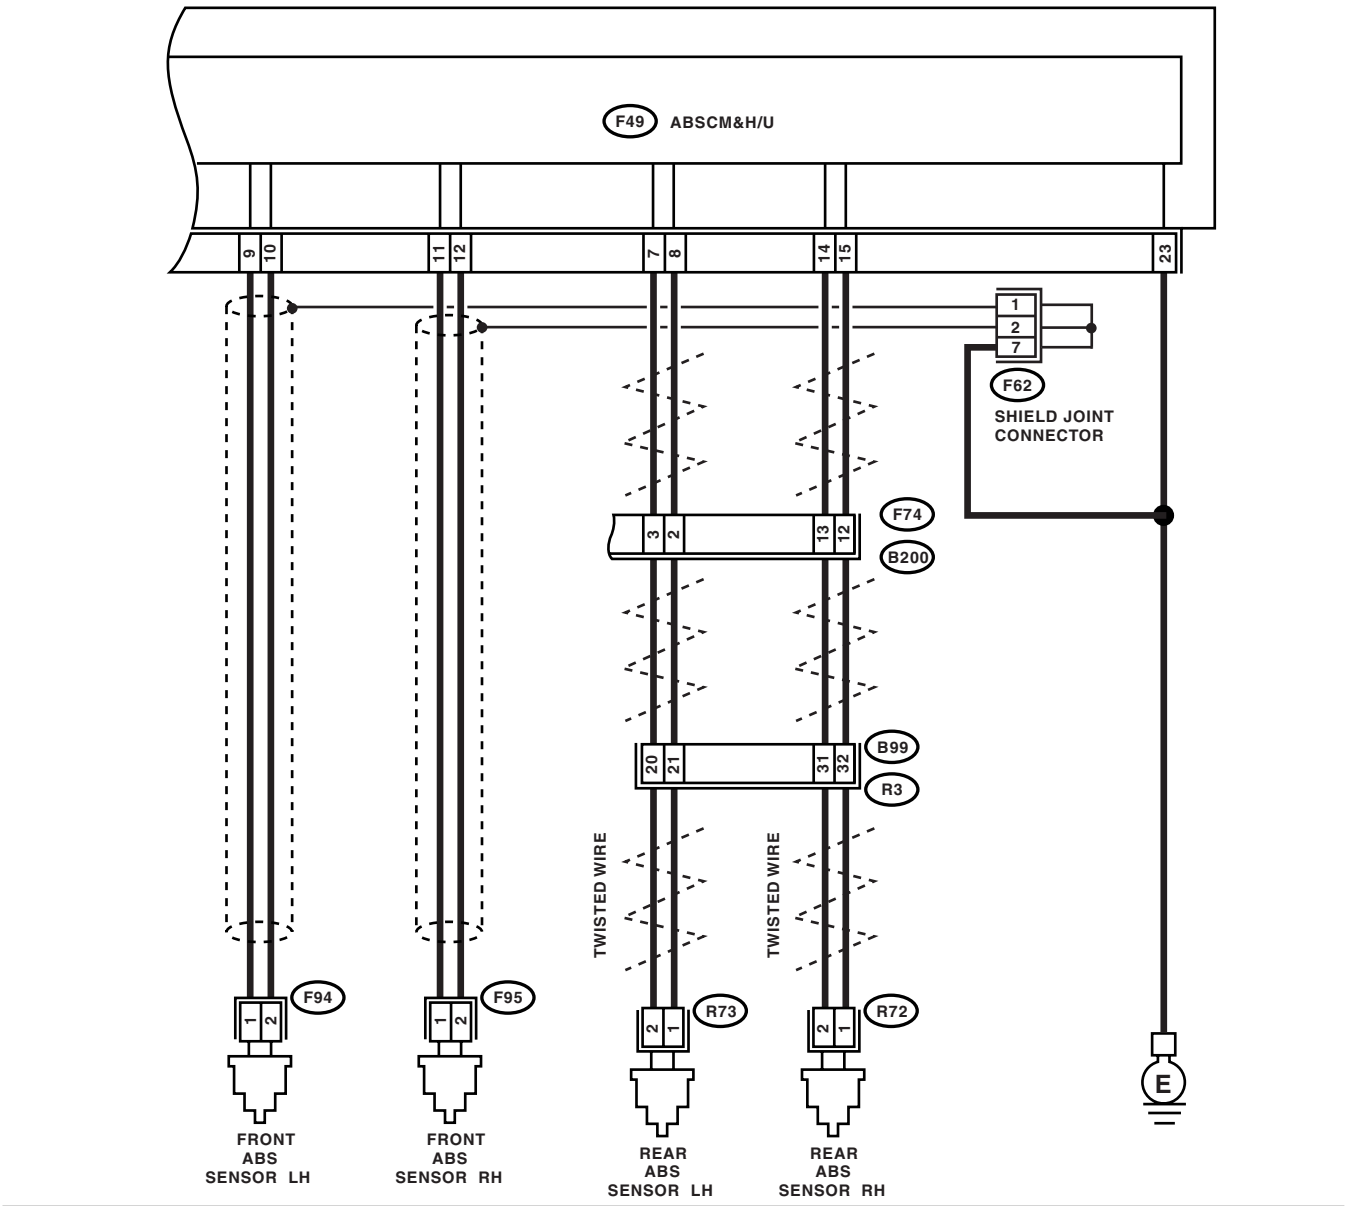

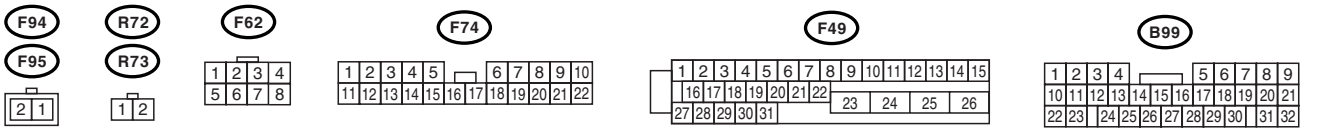

ABS00354

	Step	Check	Yes	No
1	**CHECK OUTPUT OF ABS WHEEL SPEED SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the ABS wheel speed sensor output corresponding to faulty system in the Subaru Select Monitor data display mode.	Does the speed indicated on display change in response to speedometer reading during acceleration/deceleration when the steering wheel is in straight-ahead position?	Go to step **2.**	Go to step **8.**
2	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.**	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **3.**	Tighten the ABS wheel speed sensor installation bolts securely.
3	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of the wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **4.**	Adjust the gap. NOTE: Adjust the gap using spacers (Part No. 26755AA000). If the spacers cannot correct gap, replace worn sensor or worn tone wheel.
4	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **5.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
5	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connectors between ABSCM&H/U and ABS wheel speed sensor?	Repair the connector.	Go to step **6.**
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact. NOTE: Check the harness and connectors between ABSCM&H/U and ABS wheel speed sensor.

	Step	Check	Yes	No
8	**CHECK ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABS wheel speed sensor. 3)Measure the resistance of ABS wheel speed sensor connector terminals while shaking the harness lightly. ***Terminals*** ***Front RH No. 1 — No. 2:*** ***Front LH No. 1 — No. 2:*** ***Rear RH No. 1 — No. 2:*** ***Rear LH No. 1 — No. 2:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **9.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
9	**CHECK BATTERY SHORT OF ABS WHEEL SPEED SENSOR.** 1)Disconnect the connector from ABSCM&H/U. 2)Measure the voltage between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 (+) — Chassis ground (−):*** ***Front LH No. 1 (+) — Chassis ground (−):*** ***Rear RH No. 1 (+) — Chassis ground (−):*** ***Rear LH No. 1 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **10.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
10	**CHECK BATTERY SHORT OF ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 (+) — Chassis ground (−):*** ***Front LH No. 1 (+) — Chassis ground (−):*** ***Rear RH No. 1 (+) — Chassis ground (−):*** ***Rear LH No. 1 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **11.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
11	**CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Connect the connector to ABS wheel speed sensor. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***DTC 21*** ***LHD: (B301) No. 11 — No. 12:*** ***RHD: (F49) No. 11 — No. 12:*** ***DTC 23*** ***LHD: (B301) No. 9 — No. 10:*** ***RHD: (F49) No. 9 — No. 10:*** ***DTC 25*** ***LHD: (B301) No. 14 — No. 15:*** ***RHD: (F49) No. 14 — No. 15:*** ***DTC 27*** ***LHD: (B301) No. 7 — No. 8:*** ***RHD: (F49) No. 7 — No. 8:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **12.**	Repair the harness/connector between ABSCM&H/U and ABS wheel speed sensor.

	Step	Check	Yes	No
12	**CHECK BATTERY SHORT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***DTC 21*** ***LHD: (B301) No. 11 (+) — Chassis ground (–):*** ***RHD: (F49) No. 11 (+) — Chassis ground (–):*** ***DTC 23*** ***LHD: (B301) No. 9 (+) — Chassis ground (–):*** ***RHD: (F49) No. 9 (+) — Chassis ground (–):*** ***DTC 25*** ***LHD: (B301) No. 14 (+) — Chassis ground (–):*** ***RHD: (F49) No. 14 (+) — Chassis ground (–):*** ***DTC 27*** ***LHD: (B301) No. 7 (+) — Chassis ground (–):*** ***RHD: (F49) No. 7 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **13.**	Repair the harness between ABSCM&H/U and ABS wheel speed sensor.
13	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***DTC 21*** ***LHD: (B301) No. 11 (+) — Chassis ground (–):*** ***RHD: (F49) No. 11 (+) — Chassis ground (–):*** ***DTC 23*** ***LHD: (B301) No. 9 (+) — Chassis ground (–):*** ***RHD: (F49) No. 9 (+) — Chassis ground (–):*** ***DTC 25*** ***LHD: (B301) No. 14 (+) — Chassis ground (–):*** ***RHD: (F49) No. 14 (+) — Chassis ground (–):*** ***DTC 27*** ***LHD: (B301) No. 7 (+) — Chassis ground (–):*** ***RHD: (F49) No. 7 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **14.**	Repair the harness between ABSCM&H/U and ABS wheel speed sensor.
14	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.**	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **15.**	Tighten the ABS wheel speed sensor installation bolts securely.

	Step	Check	Yes	No
15	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of the wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel: 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **16.**	Adjust the gap. NOTE: Adjust the gap using spacers (Part No. 26755AA000). If the spacers cannot correct gap, replace worn sensor or worn tone wheel.
16	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **17.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
17	**CHECK GROUND SHORT OF ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the resistance between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 — Chassis ground:*** ***Front LH No. 1 — Chassis ground:*** ***Rear RH No. 1 — Chassis ground:*** ***Rear LH No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **18.**	Replace the ABS wheel speed sensor and ABSCM&H/U. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.> and <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
18	**CHECK GROUND SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Connect the connector to ABS wheel speed sensor. 3)Measure the resistance between ABSCM&H/U connector terminal and chassis ground. ***Connector & terminal*** ***DTC 21*** ***LHD: (B301) No. 11 — Chassis ground:*** ***RHD: (F49) No. 11 — Chassis ground:*** ***DTC 23*** ***LHD: (B301) No. 9 — Chassis ground:*** ***RHD: (F49) No. 9 — Chassis ground:*** ***DTC 25*** ***LHD: (B301) No. 14 — Chassis ground:*** ***RHD: (F49) No. 14 — Chassis ground:*** ***DTC 27*** ***LHD: (B301) No. 7 — Chassis ground:*** ***RHD: (F49) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **19.**	Repair the harness between ABSCM&H/U and ABS wheel speed sensor. And replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
19	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between ABSCM&H/U and ABS wheel speed sensor?	Repair the connector.	Go to step **20.**

	Step	Check	Yes	No
20	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U.	Go to step **21.**
21	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact. NOTE: Check the harness and connectors between ABSCM&H/U and ABS wheel speed sensor.

G: DTC 22 — FRONT RIGHT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —

NOTE:
For the diagnostic procedure, refer to DTC 28. <Ref. to ABS-111, DTC 28 — REAR LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

H: DTC 24 — FRONT LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —

NOTE:
For the diagnostic procedure, refer to DTC 28. <Ref. to ABS-111, DTC 28 — REAR LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

I: DTC 26 — REAR RIGHT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —

NOTE:
For the diagnostic procedure, refer to DTC 28. <Ref. to ABS-111, DTC 28 — REAR LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

J: DTC 28
— REAR LEFT ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL —

DIAGNOSIS:

- Faulty ABS wheel speed sensor signal (noise, irregular signal, etc.)
- Faulty harness/connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

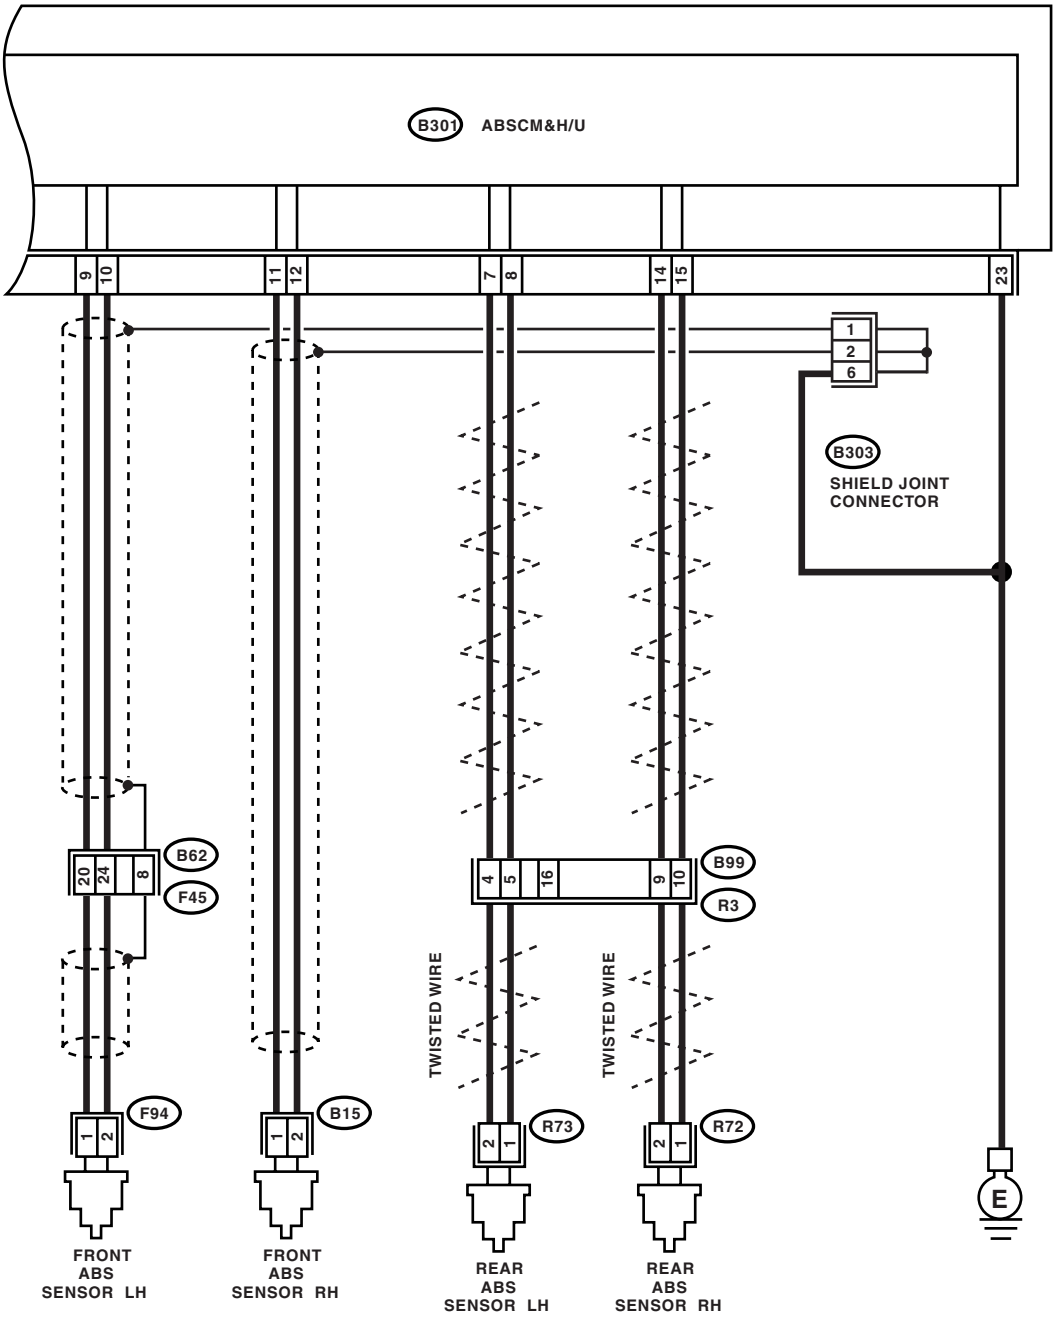

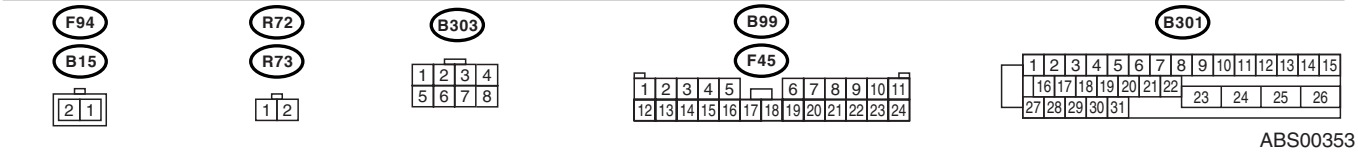

ABS00353

RHD MODEL

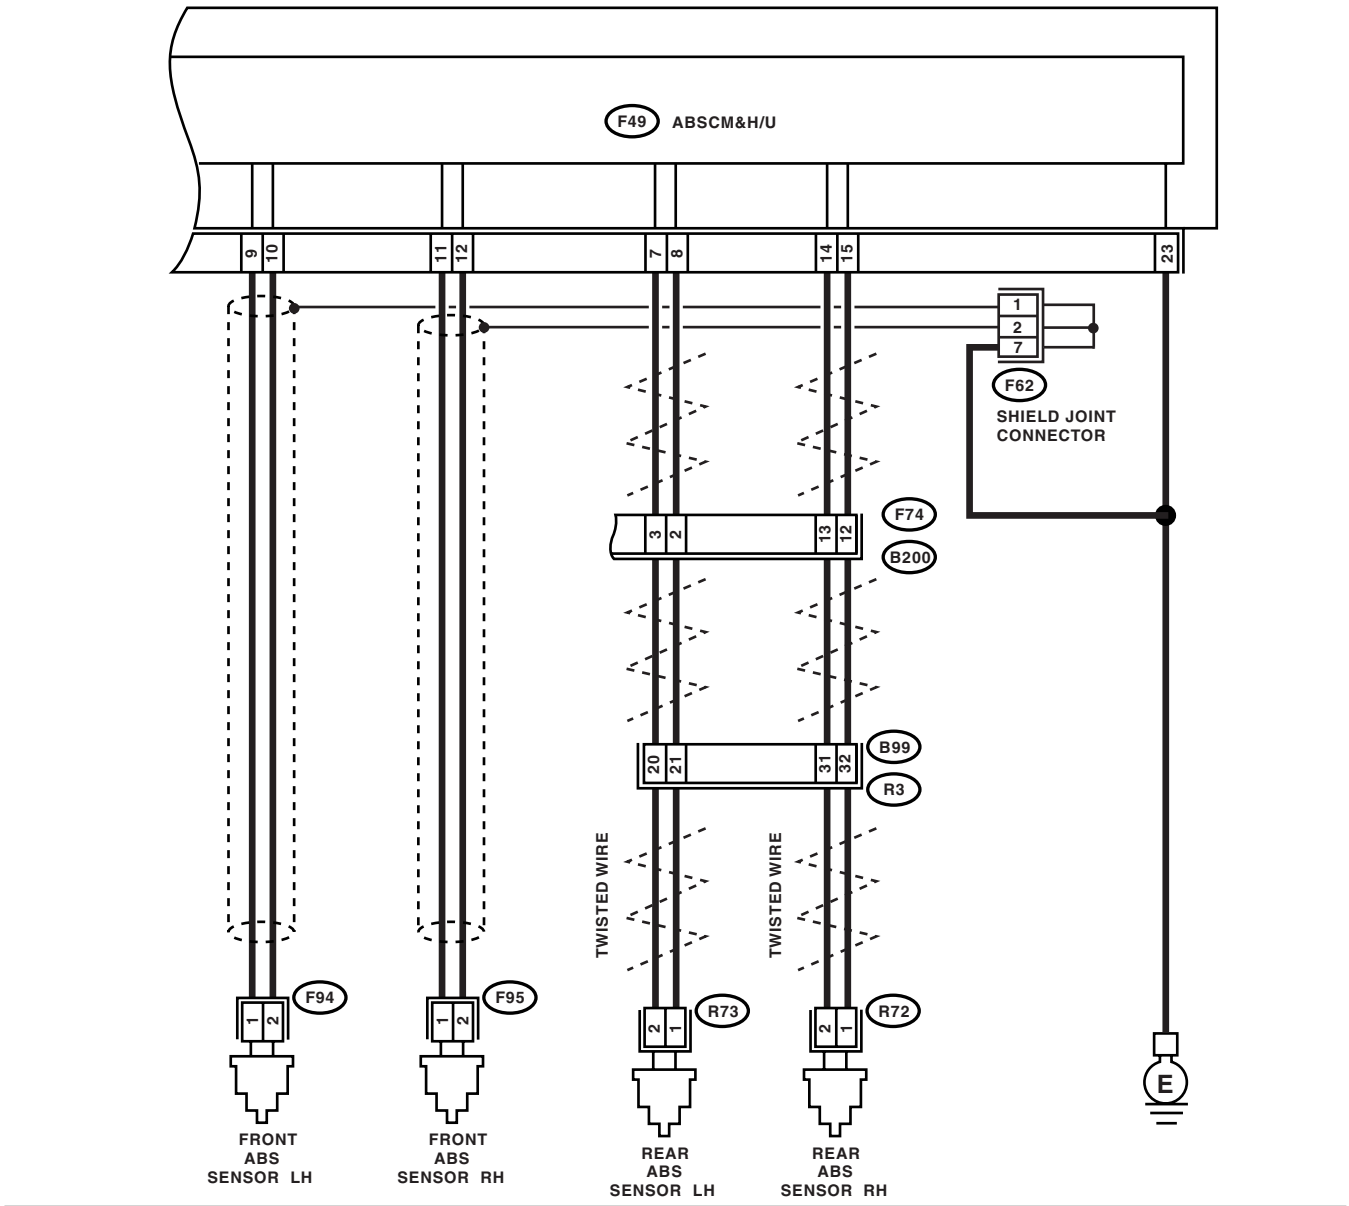

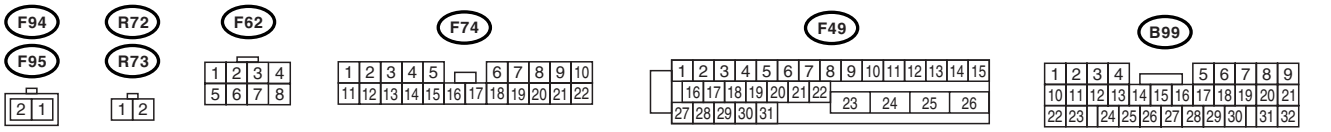

ABS00354

	Step	Check	Yes	No
1	**CHECK OUTPUT OF ABS WHEEL SPEED SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the ABS wheel speed sensor output corresponding to faulty system in the Subaru Select Monitor data display mode.	Does the speed indicated on display change in response to speedometer reading during acceleration/deceleration when the steering wheel is in straight-ahead position?	Go to step **2.**	Go to step **8.**
2	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connectors between ABSCM&H/U and ABS wheel speed sensor?	Repair the connector.	Go to step **3.**
3	**CHECK SOURCES OF SIGNAL NOISE.**	Is the car telephone or wireless transmitter properly installed?	Go to step **4.**	Properly install the car telephone or wireless transmitter.
4	**CHECK SOURCES OF SIGNAL NOISE.**	Are noise sources (such as an antenna) installed near the sensor harness?	Install the noise sources apart from sensor harness.	Go to step **5.**
5	**CHECK SHIELD CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Measure the resistance between shield connector and chassis ground. ***Connector & terminal*** ***DTC 22*** ***LHD: (B303) No. 2 — Chassis ground:*** ***RHD: (F62) No. 2 — Chassis ground:*** ***DTC 24*** ***LHD: (B303) No. 1 — Chassis ground:*** ***RHD: (F62) No. 1 — Chassis ground:*** NOTE: If the DTC is 26, 28: Go to YES.	Is the resistance less than 0.5 Ω?	Go to step **6.**	Repair the shield harness.
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary noise interference.
8	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.**	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **9.**	Tighten the ABS wheel speed sensor installation bolts securely.
9	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel: 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **10.**	Adjust the gap. NOTE: Adjust the gap using spacer (Part No. 26755AA000). If the spacers cannot correct gap, replace worn sensor or worn tone wheel.
10	**PREPARE OSCILLOSCOPE.**	Is an oscilloscope available?	Go to step **11.**	Go to step **12.**

	Step	Check	Yes	No
11	**CHECK ABS WHEEL SPEED SENSOR SIGNAL.** 1)Raise all four wheels off ground. 2)Turn the ignition switch to OFF. 3)Connect the oscilloscope to the connector. 4)Turn the ignition switch to ON. 5)Rotate the wheels and measure voltage at specified frequency. <Ref. to ABS-16, WAVEFORM, Control Module I/O Signal.> NOTE: When this inspection is completed, the ABSCM&H/U sometimes stores DTC 29 or DTC 56. ***Connector & terminal*** ***DTC 22*** ***LHD: (B15) No. 1 (+) — No. 2 (−):*** ***RHD: (F95) No. 1 (+) — No. 2 (−):*** ***DTC 24*** ***LHD: (B62) No. 20 (+) — No. 24 (−):*** ***RHD: (F94) No. 1 (+) — No. 2 (−):*** ***DTC 26*** ***LHD: (B99) No. 10 (+) — No. 9 (−):*** ***RHD: (B99) No. 32 (+) — No. 31 (−):*** ***DTC 28*** ***LHD: (B99) No. 5 (+) — No. 4 (−):*** ***RHD: (B99) No. 21 (+) — No. 20 (−):***	Is an oscilloscope pattern smooth, as shown in the figure?	Go to step **15.**	Go to step **12.**
12	**CHECK CONTAMINATION OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.** Remove the disc rotor or drum from hub in accordance with DTC.	Is the ABS wheel speed sensor piece or tone wheel contaminated by dirt or other foreign matter?	Thoroughly remove dirt or other foreign matter.	Go to step **13.**
13	**CHECK DAMAGE OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.**	Are there broken or damaged in the ABS wheel speed sensor piece or tone wheel?	Go to step **14.**	Replace the ABS wheel speed sensor or tone wheel. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.> and Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
14	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **15.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>

	Step	Check	Yes	No
15	**CHECK RESISTANCE OF ABS WHEEL SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABS wheel speed sensor. 3)Measure the resistance between ABS wheel speed sensor connector terminals while shaking the harness lightly. ***Terminals*** ***Front RH No. 1 — No. 2:*** ***Front LH No. 1 — No. 2:*** ***Rear RH No. 1 — No. 2:*** ***Rear LH No. 1 — No. 2:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **16.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
16	**CHECK GROUND SHORT OF ABS WHEEL SPEED SENSOR.** Measure the resistance between ABS wheel speed sensor and chassis ground. ***Terminals*** ***Front RH No. 1 — Chassis ground:*** ***Front LH No. 1 — Chassis ground:*** ***Rear RH No. 1 — Chassis ground:*** ***Rear LH No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **17.**	Replace the ABS wheel speed sensor. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.>
17	**CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND ABS WHEEL SPEED SENSOR.** 1)Connect the connector to ABS wheel speed sensor. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance at ABSCM&H/U connector terminals. ***Connector & terminal*** ***DTC 22*** ***LHD: (B301) No. 11 — No. 12:*** ***RHD: (F49) No. 11 — No. 12:*** ***DTC 24*** ***LHD: (B301) No. 9 — No. 10:*** ***RHD: (F49) No. 9 — No. 10:*** ***DTC 26*** ***LHD: (B301) No. 14 — No. 15:*** ***RHD: (F49) No. 14 — No. 15:*** ***DTC 28*** ***LHD: (B301) No. 7 — No. 8:*** ***RHD: (F49) No. 7 — No. 8:***	Is the resistance as following value? Front: 1 — 1.5 kΩ Rear: 1.025 — 1.265 kΩ	Go to step **18.**	Repair the harness/connector between ABSCM&H/U and ABS wheel speed sensor.
18	**CHECK GROUND SHORT OF HARNESS.** Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***DTC 22*** ***LHD: (B301) No. 11 — Chassis ground:*** ***RHD: (F49) No. 11 — Chassis ground:*** ***DTC 24*** ***LHD: (B301) No. 9 — Chassis ground:*** ***RHD: (F49) No. 9 — Chassis ground:*** ***DTC 26*** ***LHD: (B301) No. 14 — Chassis ground:*** ***RHD: (F49) No. 14 — Chassis ground:*** ***DTC 28*** ***LHD: (B301) No. 7 — Chassis ground:*** ***RHD: (F49) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **19.**	Repair the harness/connector between ABSCM&H/U and ABS wheel speed sensor.

	Step	Check	Yes	No
19	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** Measure the resistance between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **20.**	Repair the ABSCM&H/U ground harness.
20	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between ABSCM&H/U and ABS wheel speed sensor?	Repair the connector.	Go to step **21.**
21	**CHECK SOURCES OF SIGNAL NOISE.**	Is the car telephone or the wireless transmitter properly installed?	Go to step **22.**	Properly install the car telephone or wireless transmitter.
22	**CHECK SOURCES OF SIGNAL NOISE.**	Are noise sources (such as an antenna) installed near the sensor harness?	Install the noise sources apart from sensor harness.	Go to step **23.**
23	**CHECK SHIELD CIRCUIT.** 1)Connect all connectors. 2)Measure the resistance between shield connector and chassis ground. ***Connector & terminal*** ***DTC 22*** ***LHD: (B303) No. 2 — Chassis ground:*** ***RHD: (F62) No. 2 — Chassis ground:*** ***DTC 24*** ***LHD: (B303) No. 1 — Chassis ground:*** ***RHD: (F62) No. 1 — Chassis ground:*** NOTE: If the DTC is 26, 28: Go to YES.	Is the resistance less than 0.5 Ω?	Go to step **24.**	Repair the shield harness.
24	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **25.**
25	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary noise interference. NOTE: Although the ABS warning light remains illuminating at this point, this is a normal condition. Vehicle must be driven at approx. 12 km/h (7.46 MPH) or faster to turn off ABS warning light. Make sure that the ABS warning light goes off after driving vehicle.

K: DTC 29 — ABNORMAL ABS WHEEL SPEED SENSOR SIGNAL ON ANY ONE OF FOUR SENSOR —

DIAGNOSIS:

- Faulty ABS wheel speed sensor signal (noise, irregular signal, etc.)
- Faulty tone wheel
- Wheels turning freely for a long time

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:
LHD MODEL

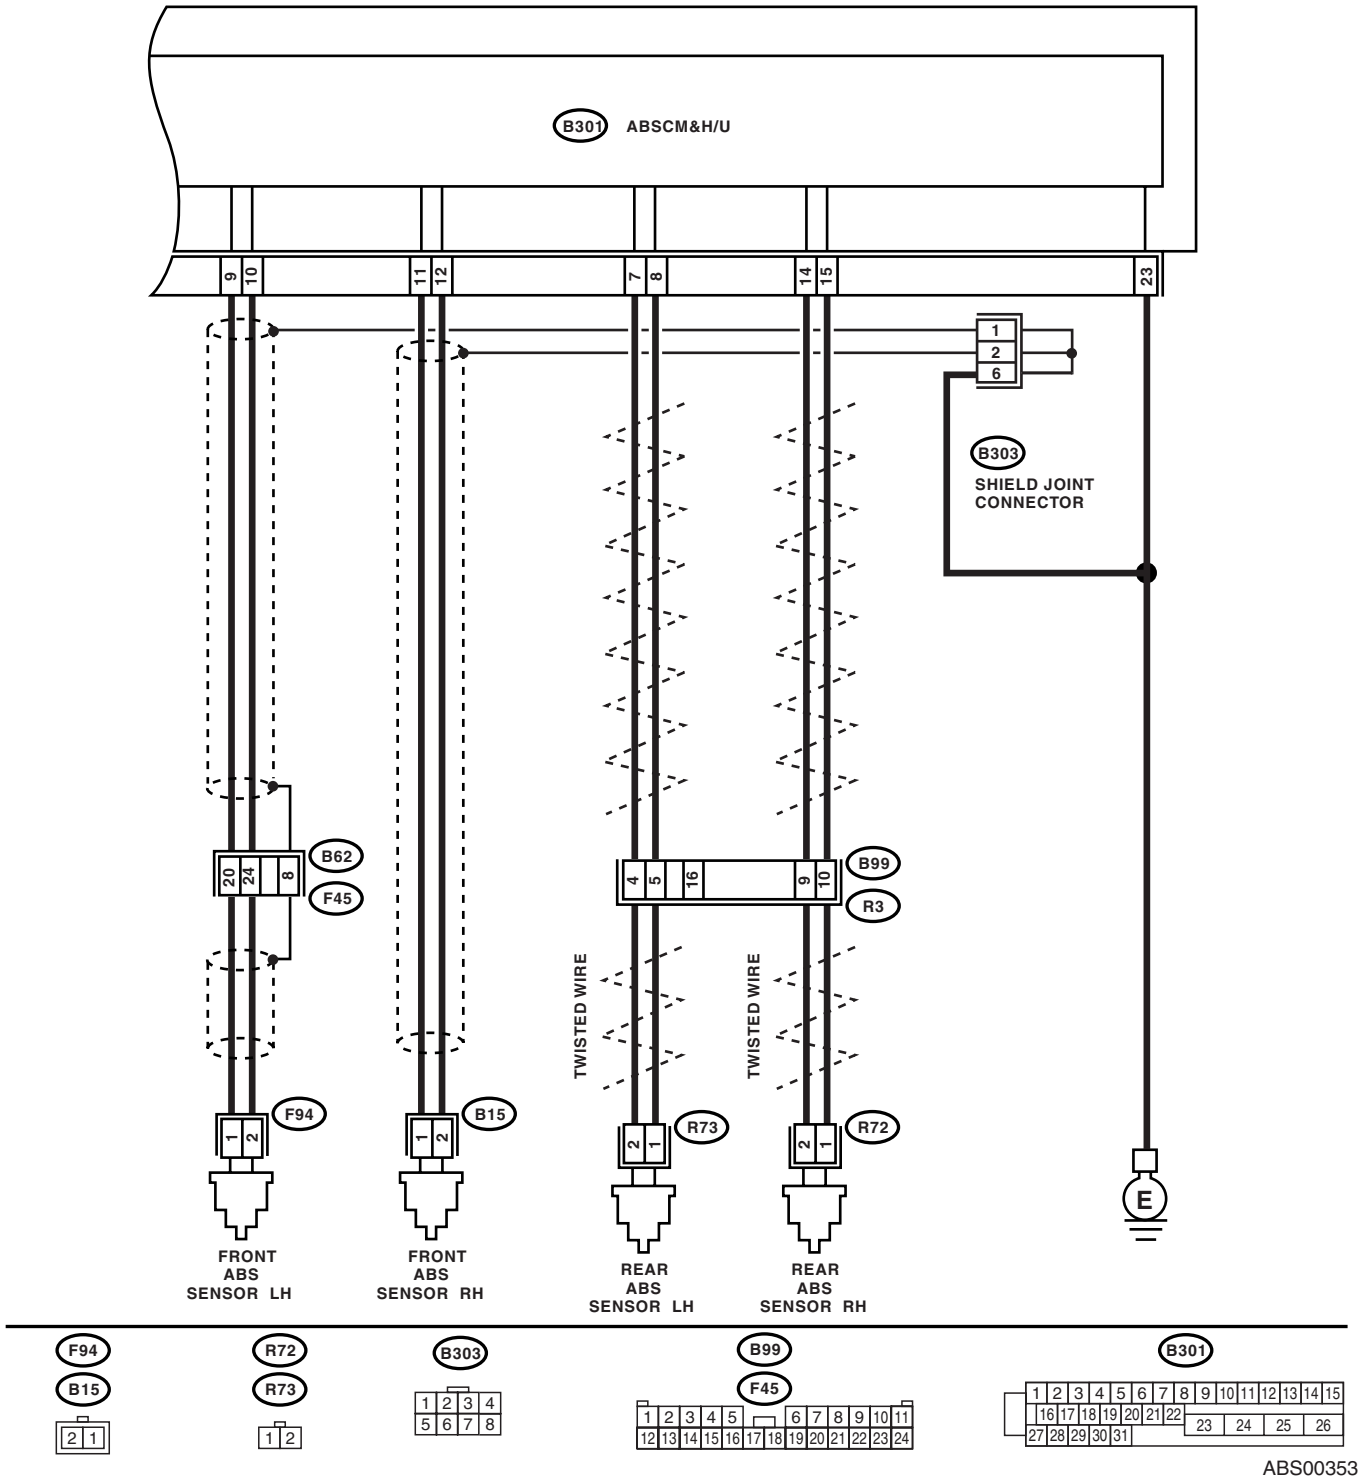

ABS00353

RHD MODEL

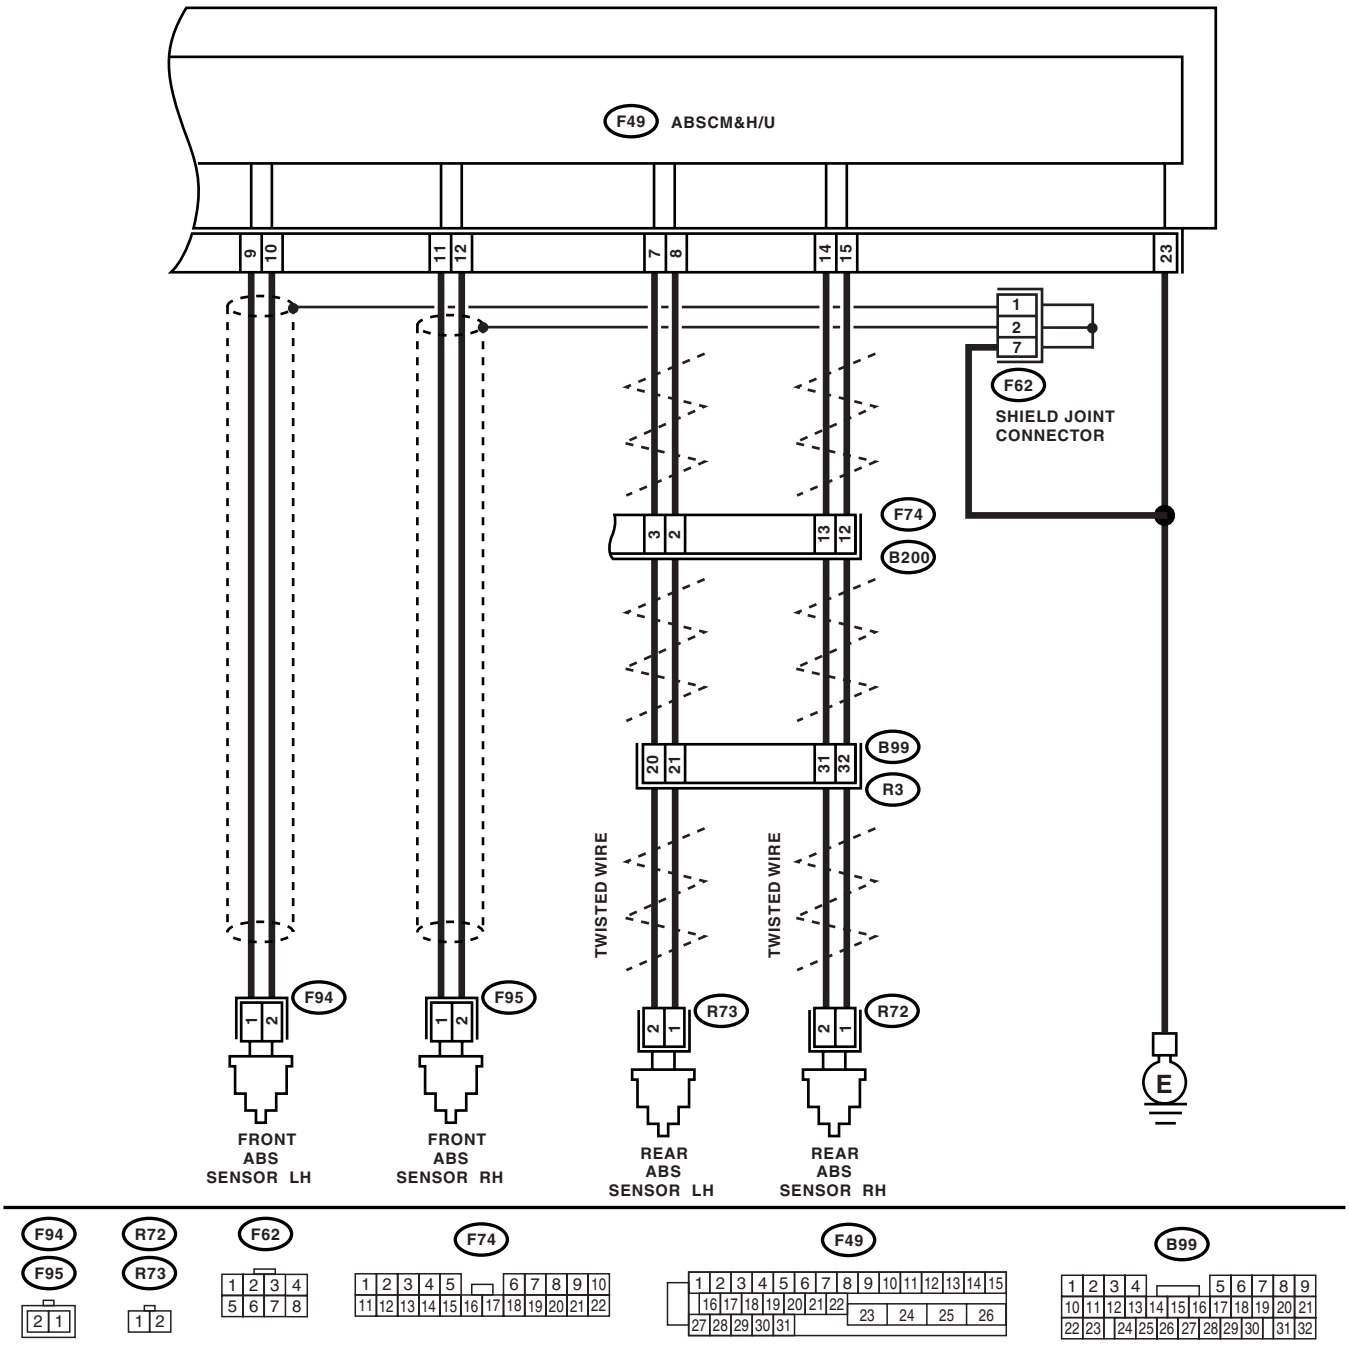

ABS00354

	Step	Check	Yes	No
1	**CHECK IF THE WHEELS HAVE TURNED FREELY FOR A LONG TIME.**	Is the wheels have been turned freely for more than one minute, such as when vehicle is jacked-up, under full-lock cornering or the tires not in contact with road surface?	Go to step **2.**	The ABS is normal. Erase the DTC. NOTE: When the wheels turn freely for a long time, such as when vehicle is towed or jacked-up, or when steering wheel is continuously turned all way, this DTC may sometimes occur.
2	**CHECK TIRE SPECIFICATIONS.** Turn the ignition switch to OFF.	Are the tire specifications correct?	Go to step **3.**	Replace the tire.
3	**CHECK WEAR OF TIRE.**	Is the tire worn excessively?	Replace the tire.	Go to step **4.**
4	**CHECK TIRE PRESSURE.**	Is the tire pressure correct?	Go to step **5.**	Adjust the tire pressure.
5	**CHECK INSTALLATION OF ABS WHEEL SPEED SENSOR.**	Are the ABS wheel speed sensor installation bolts tightened 33 N·m (3.3 kgf-m, 24 ft-lb)?	Go to step **6.**	Tighten the ABS wheel speed sensor installation bolts securely.
6	**CHECK ABS WHEEL SPEED SENSOR GAP.** Measure the tone wheel to ABS wheel speed sensor piece gap over entire perimeter of the wheel.	Is the gap as following value? Front wheel: 0.3 — 0.8 mm (0.012 — 0.031 in) Rear wheel: 0.7 — 1.2 mm (0.028 — 0.047 in)	Go to step **7.**	Adjust the gap. NOTE: Adjust the gap using spacer (Part No. 26755AA000). If the spacers cannot correct gap, replace worn sensor or worn tone wheel.
7	**PREPARE OSCILLOSCOPE.**	Is an oscilloscope available?	Go to step **8.**	Go to step **9.**
8	**CHECK ABS WHEEL SPEED SENSOR SIGNAL.** 1)Raise all four wheels off ground. 2)Turn the ignition switch to OFF. 3)Connect the oscilloscope to the connector. 4)Turn the ignition switch to ON. 5)Rotate the wheels and measure voltage at specified frequency. <Ref. to ABS-16, WAVEFORM, Control Module I/O Signal.> NOTE: When this inspection is completed, ABSCM& H/U sometimes stores the DTC 29. ***Connector & terminal*** ***Front RH*** ***LHD: (B15) No. 1 (+) — No. 2 (−):*** ***RHD: (F95) No. 1 (+) — No. 2 (−):*** ***Front LH*** ***LHD: (B62) No. 20 (+) — No. 24 (−):*** ***RHD: (F94) No. 1 (+) — No. 2 (−):*** ***Rear RH*** ***LHD: (B99) No. 10 (+) — No. 9 (−):*** ***RHD: (B99) No. 32 (+) — No. 31 (−):*** ***Rear LH*** ***LHD: (B99) No. 5 (+) — No. 4 (−):*** ***RHD: (B99) No. 21 (+) — No. 22 (−):***	Is an oscilloscope pattern smooth, as shown in the figure?	Go to step **12.**	Go to step **9.**

	Step	Check	Yes	No
9	**CHECK CONTAMINATION OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.** Remove the disc rotor or drum from hub.	Is the ABS wheel speed sensor piece or tone wheel contaminated by dirt or other foreign matter?	Thoroughly remove dirt or other foreign matter.	Go to step **10.**
10	**CHECK DAMAGE OF ABS WHEEL SPEED SENSOR OR TONE WHEEL.**	Are there broken or damaged teeth in the ABS wheel speed sensor piece or tone wheel?	Replace the ABS wheel speed sensor or tone wheel. Front: <Ref. to ABS-13, Front ABS Wheel Speed Sensor.> Rear: <Ref. to ABS-16, Rear ABS Wheel Speed Sensor.> and Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>	Go to step **11.**
11	**CHECK TONE WHEEL RUNOUT.** Measure the tone wheel runout.	Is the runout less than 0.05 mm (0.0020 in)?	Go to step **12.**	Replace the tone wheel. Front: <Ref. to ABS-19, Front Tone Wheel.> Rear: <Ref. to ABS-20, Rear Tone Wheel.>
12	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **13.**
13	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

L: DTC 31 — FRONT RIGHT INLET VALVE MALFUNCTION —

NOTE:
For the diagnostic procedure, refer to DTC 37. <Ref. to ABS-122, DTC 37 — REAR LEFT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

M: DTC 33 — FRONT LEFT INLET VALVE MALFUNCTION —

NOTE:
For the diagnostic procedure, refer to DTC 37. <Ref. to ABS-122, DTC 37 — REAR LEFT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

N: DTC 35 — REAR RIGHT INLET VALVE MALFUNCTION —

NOTE:
For the diagnostic procedure, refer to DTC 37. <Ref. to ABS-122, DTC 37 — REAR LEFT INLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

O: DTC 37
— REAR LEFT INLET VALVE MALFUNCTION —

DIAGNOSIS:
- Faulty harness/connector
- Faulty inlet solenoid valve

TROUBLE SYMPTOM:
- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

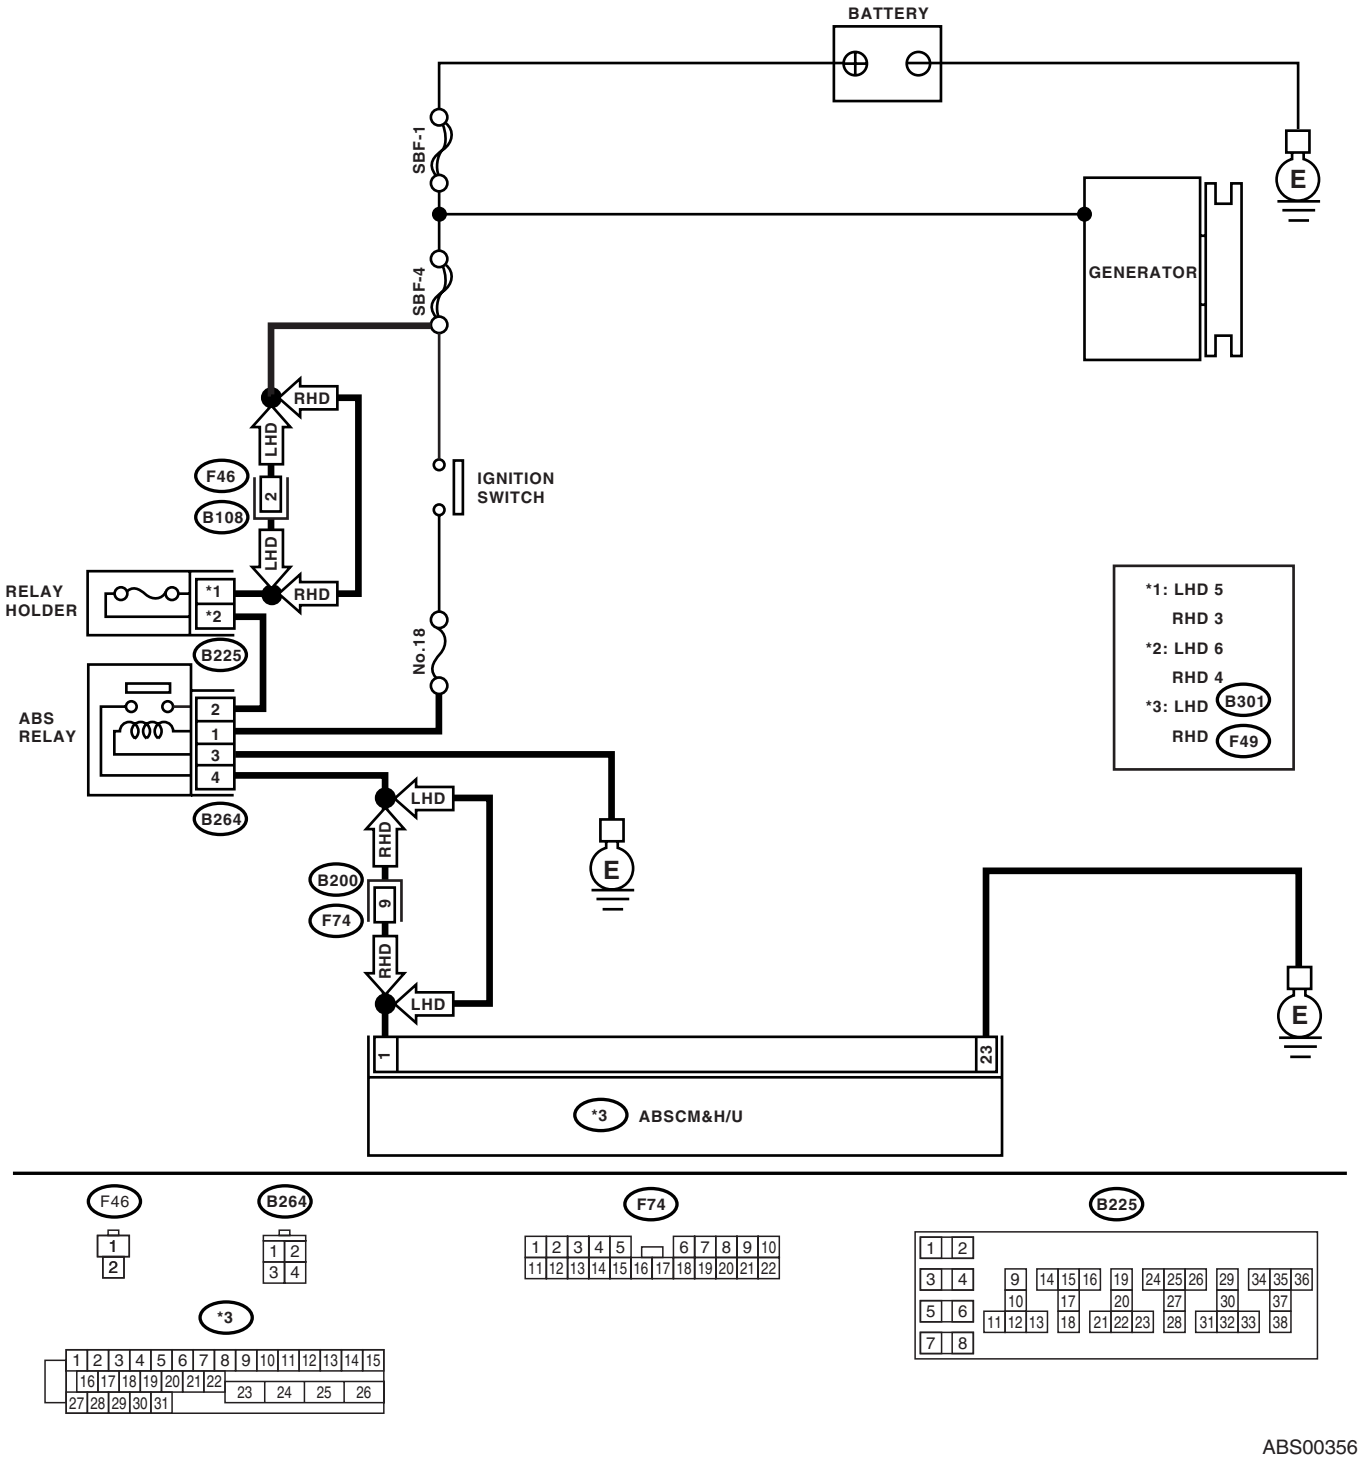

ABS00356

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Run the engine at idle. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness connector between battery, ignition switch and ABSCM&H/U.
2	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

P: DTC 32 — FRONT RIGHT OUTLET VALVE MALFUNCTION —

NOTE:
For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-125, DTC 38 — REAR LEFT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

Q: DTC 34 — FRONT LEFT OUTLET VALVE MALFUNCTION —

NOTE:
For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-125, DTC 38 — REAR LEFT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

R: DTC 36 — REAR RIGHT OUTLET VALVE MALFUNCTION —

NOTE:
For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-125, DTC 38 — REAR LEFT OUTLET VALVE MALFUNCTION —, Diagnostics Procedure with Diagnostic Trouble Code (DTC).>

S: DTC 38
— REAR LEFT OUTLET VALVE MALFUNCTION —

DIAGNOSIS:
- Faulty harness/connector
- Faulty outlet solenoid valve

TROUBLE SYMPTOM:
- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

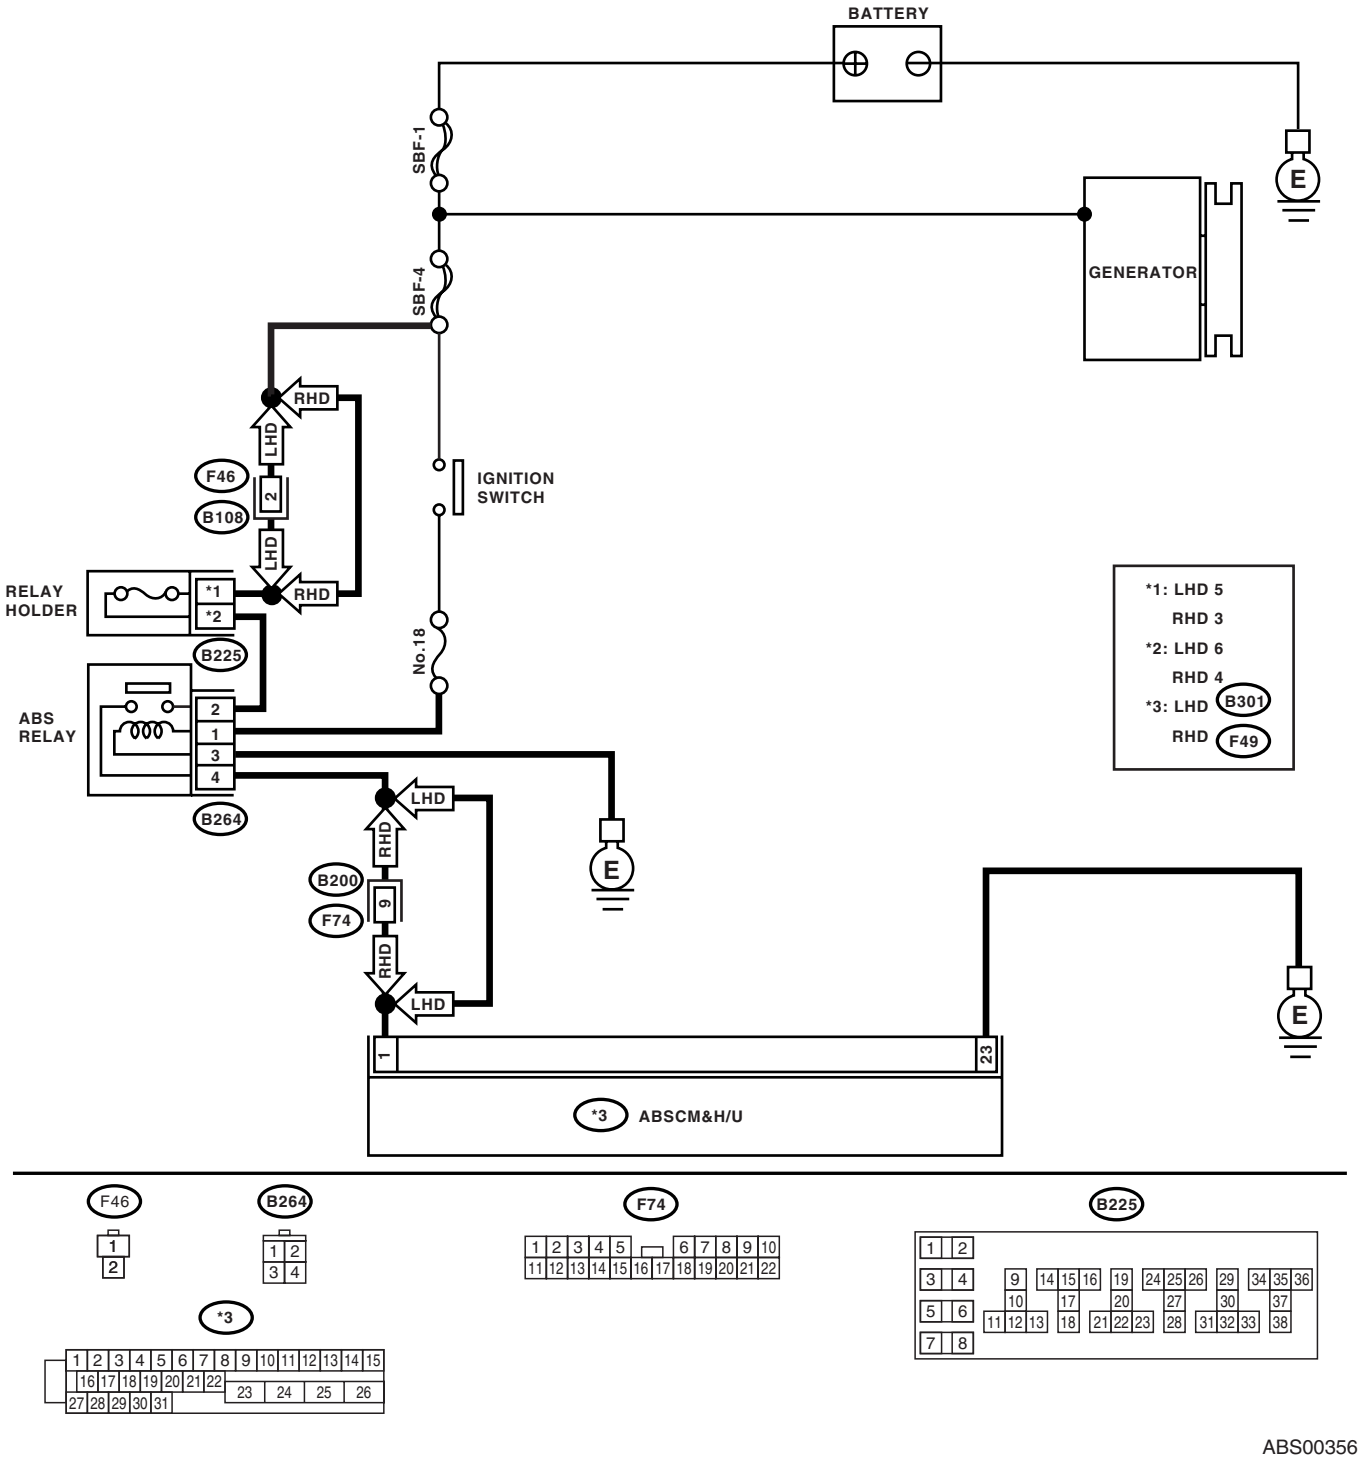

ABS00356

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Run the engine at idle. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness connector between battery, ignition switch and ABSCM&H/U.
2	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

T: DTC 41
— ABS CONTROL MODULE MALFUNCTION —

DIAGNOSIS:

- Faulty ABSCM&H/U

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

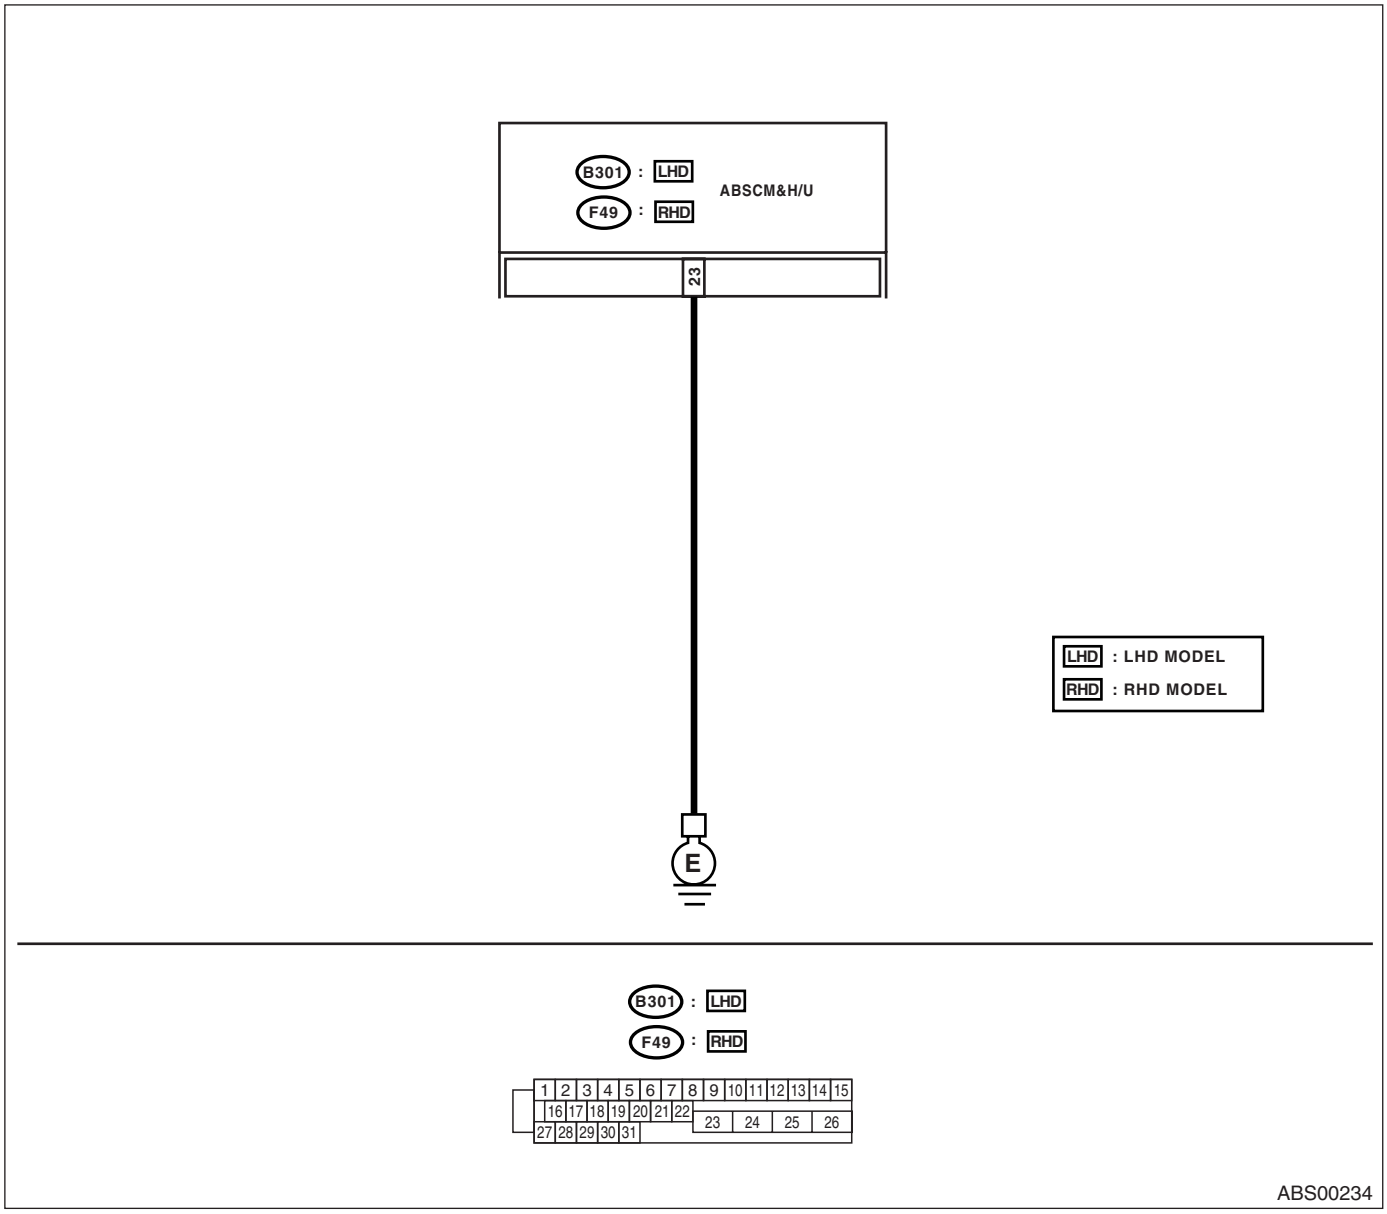

	Step	Check	Yes	No
1	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **2.**	Repair the ABSCM&H/U ground harness.
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between battery, ignition switch and ABSCM&H/U?	Repair the connector.	Go to step **3.**
3	**CHECK SOURCES OF SIGNAL NOISE.**	Is the car telephone or wireless transmitter properly installed?	Go to step **4.**	Properly install the car telephone or wireless transmitter.
4	**CHECK SOURCES OF SIGNAL NOISE.**	Are noise sources (such as an antenna) installed near the sensor harness?	Install the noise sources apart from sensor harness.	Go to step **5.**
5	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **6.**
6	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

U: DTC 42
— POWER SUPPLY VOLTAGE TOO LOW —

DIAGNOSIS:

- Power source voltage of the ABSCM&H/U is low.

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates temporarily. Both warning lights go off on the recovery of voltage.

WIRING DIAGRAM:

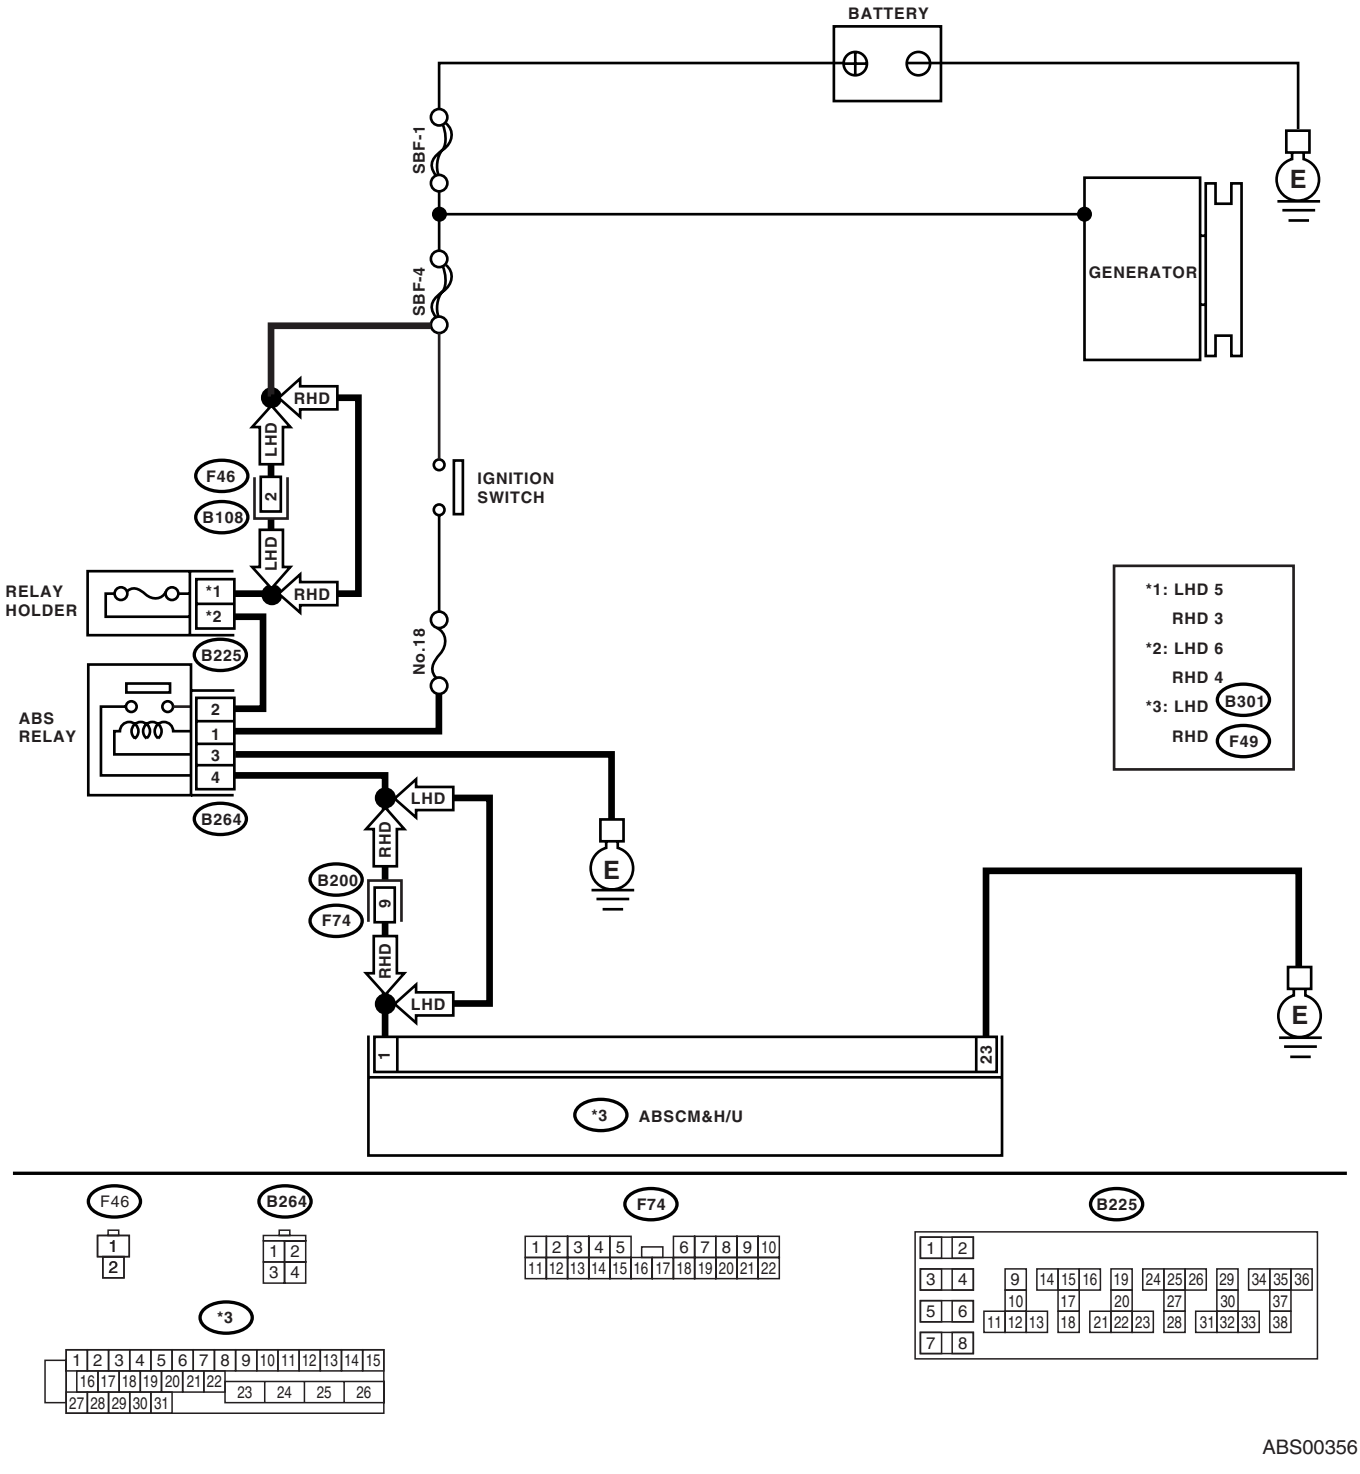

ABS00356

	Step	Check	Yes	No
1	**CHECK GENERATOR.** 1)Start the engine. 2)Idle after warm-up. 3)Measure the voltage between generator B terminal and chassis ground. ***Terminals*** ***Generator B terminal (+) — Chassis ground (−):***	Is the voltage 10 — 17 V?	Go to step **2.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
2	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Are the positive and negative battery terminals tightly clamped?	Go to step **3.**	Tighten the clamp of terminal.
3	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Disconnect the connector from ABSCM&H/U. 2)Run the engine at idle. 3)Operate the electric load applying devices, such as the headlight, A/C, and defogger. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (−):*** ***RHD: (F49) No. 1 (+) — Chassis ground (−):***	Is the voltage 10 — 17 V?	Go to step **4.**	Repair the harness connector between battery, ignition switch and ABSCM&H/U.
4	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **5.**	Repair the ABSCM&H/U ground harness.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **6.**
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

V: DTC 42
— POWER SUPPLY VOLTAGE TOO HIGH —

DIAGNOSIS:

- Power source voltage of the ABSCM&H/U is high.

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates temporarily. Both warning lights go off on the recovery of voltage.

WIRING DIAGRAM:

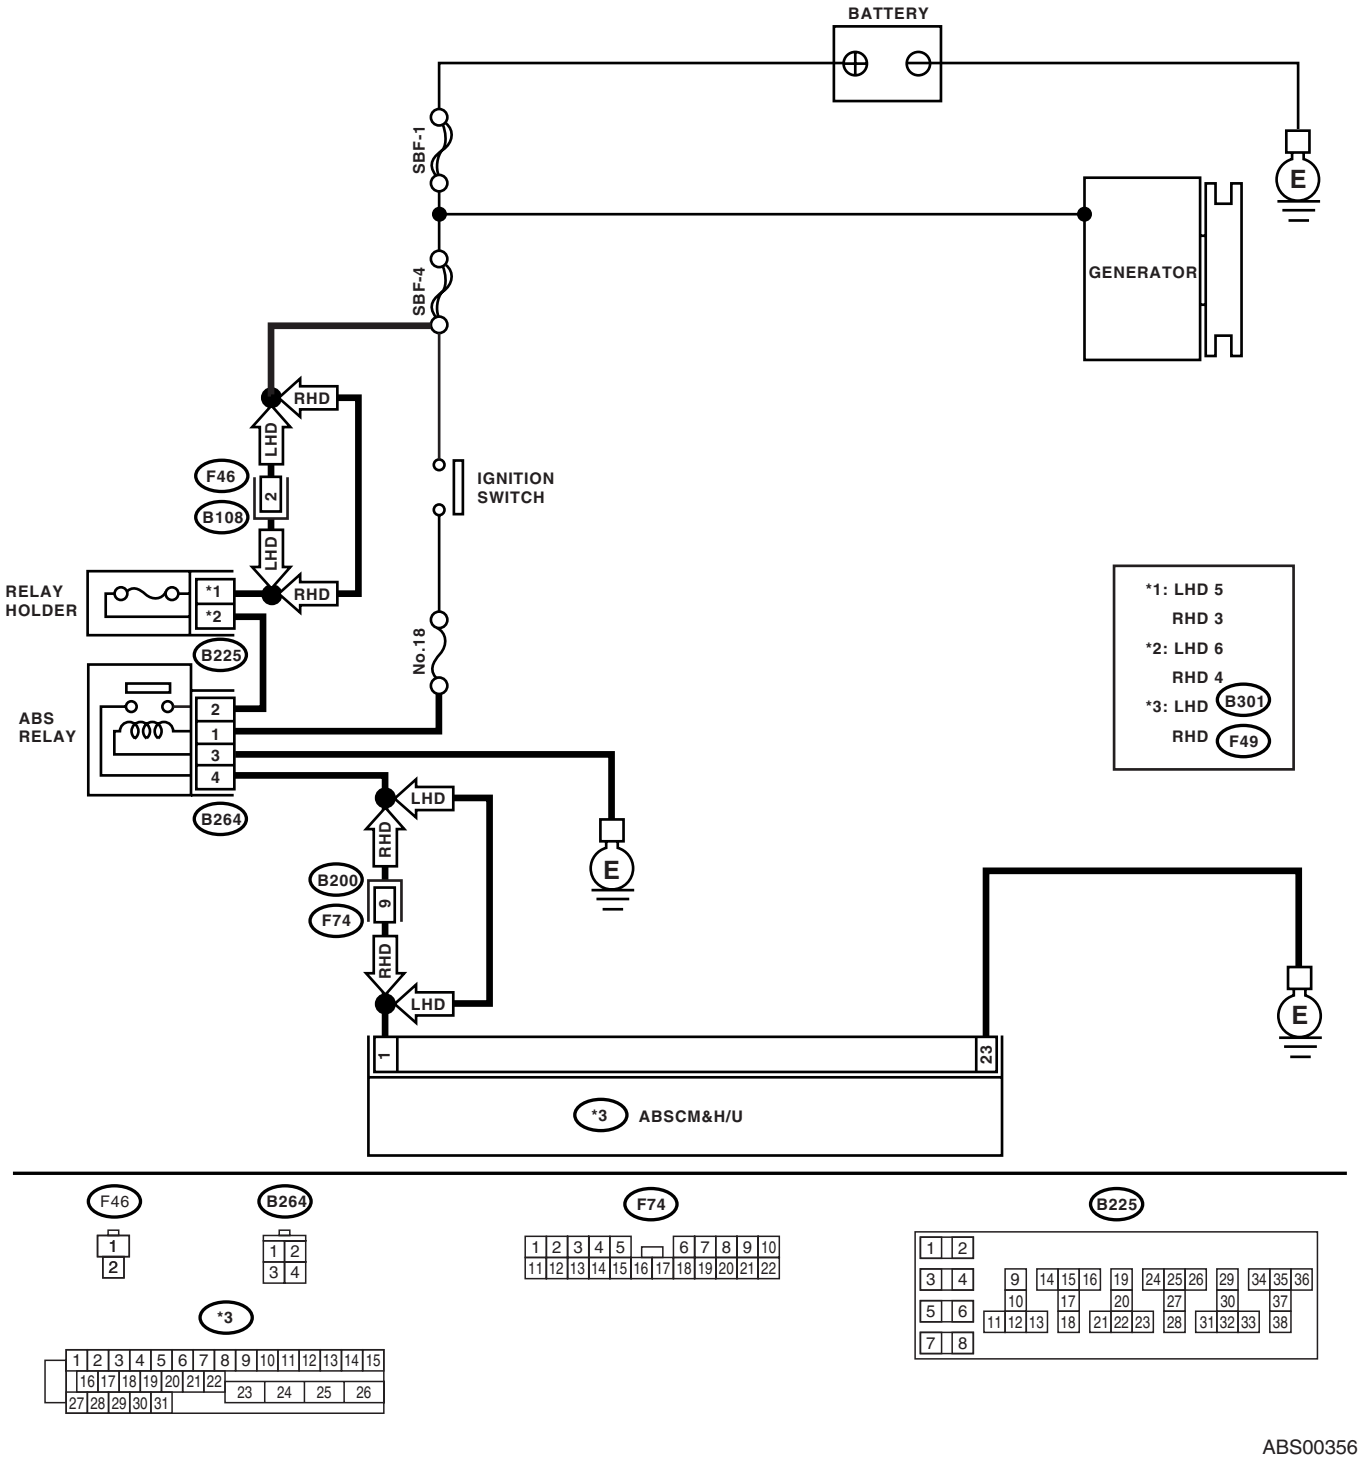

ABS00356

	Step	Check	Yes	No
1	**CHECK GENERATOR.** 1)Start the engine. 2)Idle after warm-up. 3)Measure the voltage between generator B terminal and chassis ground. ***Terminals*** ***Generator B terminal (+) — Chassis ground (−):***	Is the voltage 10 — 17 V?	Go to step **2.**	Repair the generator. <Ref. to SC(H4SO)-14, Generator.>
2	**CHECK BATTERY TERMINAL.** Turn the ignition switch to OFF.	Are the positive and negative battery terminals tightly clamped?	Go to step **3.**	Tighten the clamp of terminal.
3	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Disconnect the connector from ABSCM&H/U. 2)Run the engine at idle. 3)Operate the electric load applying devices, such as the headlight, A/C, and defogger. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (−):*** ***RHD: (F49) No. 1 (+) — Chassis ground (−):***	Is the voltage 10 and 17 V?	Go to step **4.**	Repair the harness connector between battery, ignition switch and ABSCM&H/U.
4	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **5.**	Repair the ABSCM&H/U ground harness.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **6.**
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

W: DTC 44
— ABS-AT CONTROL (NON CONTROLLED) —

DIAGNOSIS:

- Combination of AT control faults

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

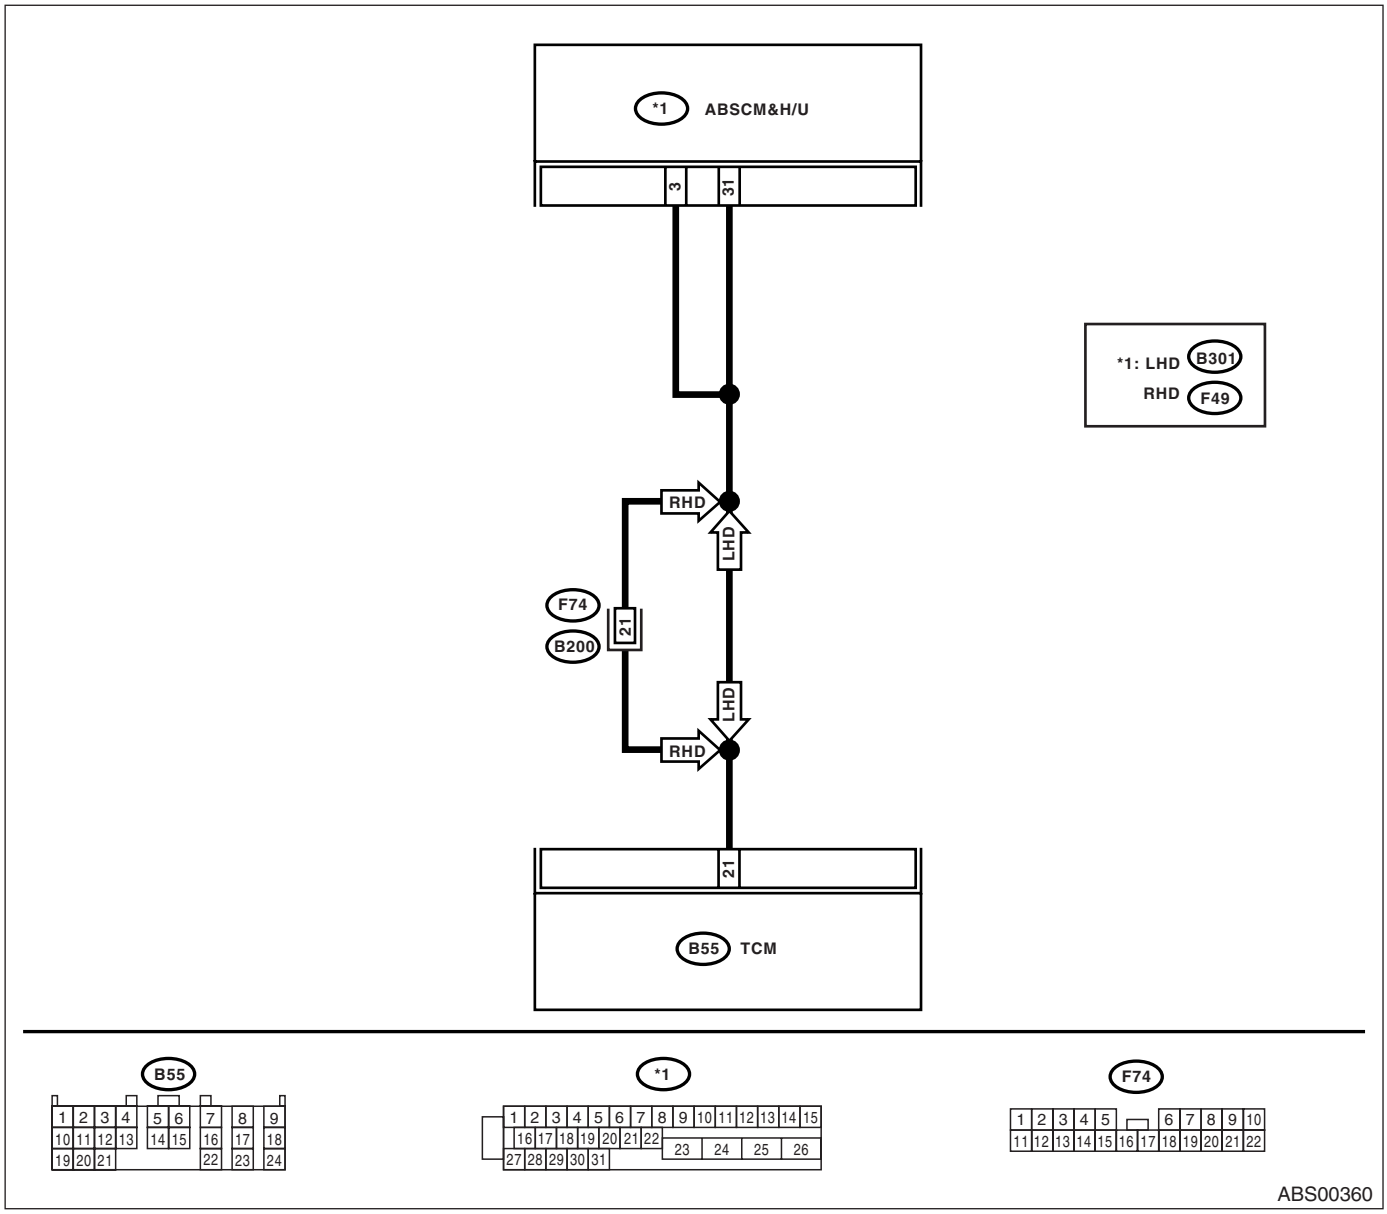

Step		Check	Yes	No
1	**CHECK SPECIFICATIONS OF THE ABSCM&H/U.** Check specifications of mark on ABSCM&H/U. ***CK: FWD AT*** ***CL: FWD MT*** ***CU: AWD AT*** ***CV: AWD MT*** ***CX: AWD MT (STi model)*** ***CY: AWD MT (STi with Driver's control center differential model)***	Does the vehicle specification and ABSCM&H/U specification match?	Go to step **2.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>

	Step	Check	Yes	No
2	**CHECK GROUND SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the two connectors from TCM. 3)Disconnect the connector from ABSCM&H/U. 4)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 3 — Chassis ground:*** ***RHD: (F49) No. 3 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **3.**	Repair the harness between TCM and ABSCM&H/U.
3	**CHECK TCM.** 1)Connect all connectors to TCM. 2)Turn the ignition switch to ON. 3)Measure the voltage between TCM connector terminal and chassis ground. ***Connector & terminal*** ***(B55) No. 21 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **5.**	Go to step **4.**
4	**CHECK AT.**	Is the AT functioning normally?	Replace the TCM.	Repair the AT.
5	**CHECK OPEN CIRCUIT OF HARNESS.** Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD:*** ***(B301) No. 3 (+) — Chassis ground (−):*** ***(B301) No. 31 (+) — Chassis ground (−):*** ***RHD:*** ***(F49) No. 3 (+) — Chassis ground (−):*** ***(F49) No. 31 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **6.**	Repair the harness/connector between TCM and ABSCM&H/U.
6	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between TCM and ABSCM&H/U?	Repair the connector.	Go to step **7.**
7	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **8.**
8	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

X: DTC 44
— ABS-AT CONTROL (CONTROLLED) —

DIAGNOSIS:

- Combination of AT control faults

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

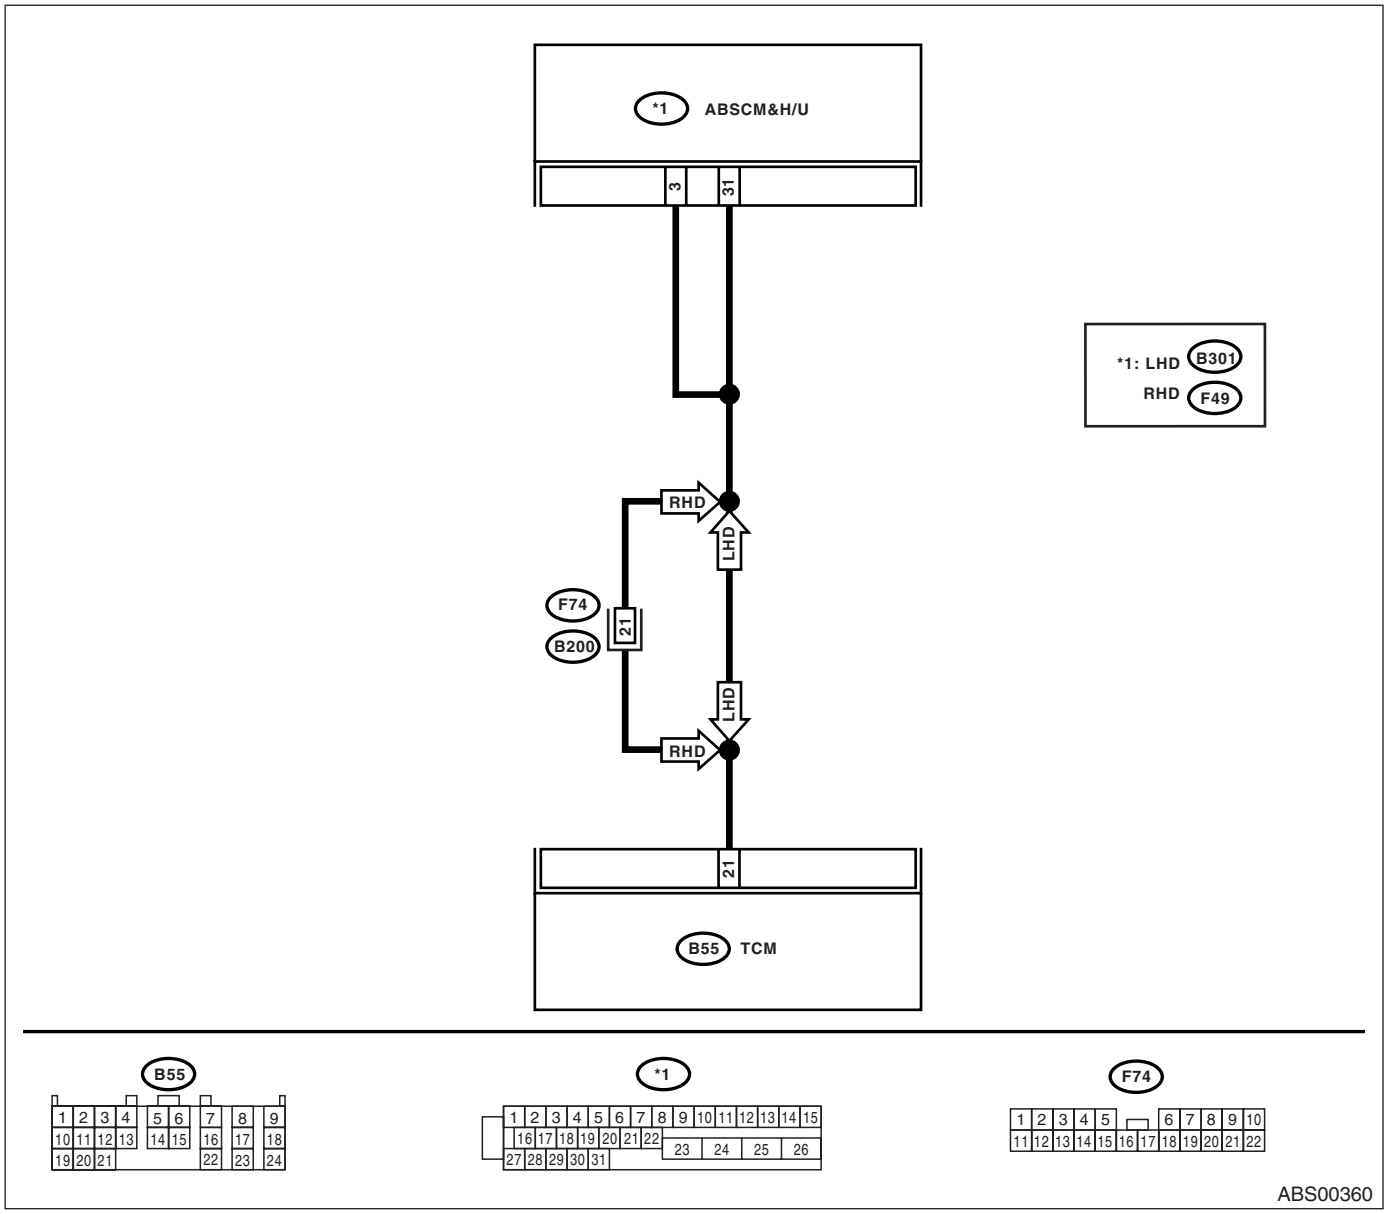

	Step	Check	Yes	No
1	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect all connectors from TCM. 3)Disconnect the connector from ABSCM&H/U. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 3 (+) — Chassis ground (−):*** ***RHD: (F49) No. 3 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **2.**	Repair the harness between TCM and ABSCM&H/U.
2	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 3 (+) — Chassis ground (−):*** ***RHD: (F49) No. 3 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Repair the harness between TCM and ABSCM&H/U.
3	**CHECK OPEN CIRCUIT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Connect all connectors to TCM. 3)Turn the ignition switch to ON. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD:*** ***(B301) No. 3 (+) — Chassis ground (−):*** ***(B301) No. 31 (+) — Chassis ground (−):*** ***RHD:*** ***(F49) No. 3 (+) — Chassis ground (−):*** ***(F49) No. 31 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **4.**	Repair the harness/connector between TCM and ABSCM&H/U.
4	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connectors between TCM and ABSCM&H/U?	Repair the connector.	Go to step **5.**
5	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **6.**
6	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

Y: DTC 51
— VALVE RELAY MALFUNCTION —

DIAGNOSIS:

- Faulty valve relay

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.

NOTE:
In addition to the ABS warning light, brake warning light illuminates.

WIRING DIAGRAM:

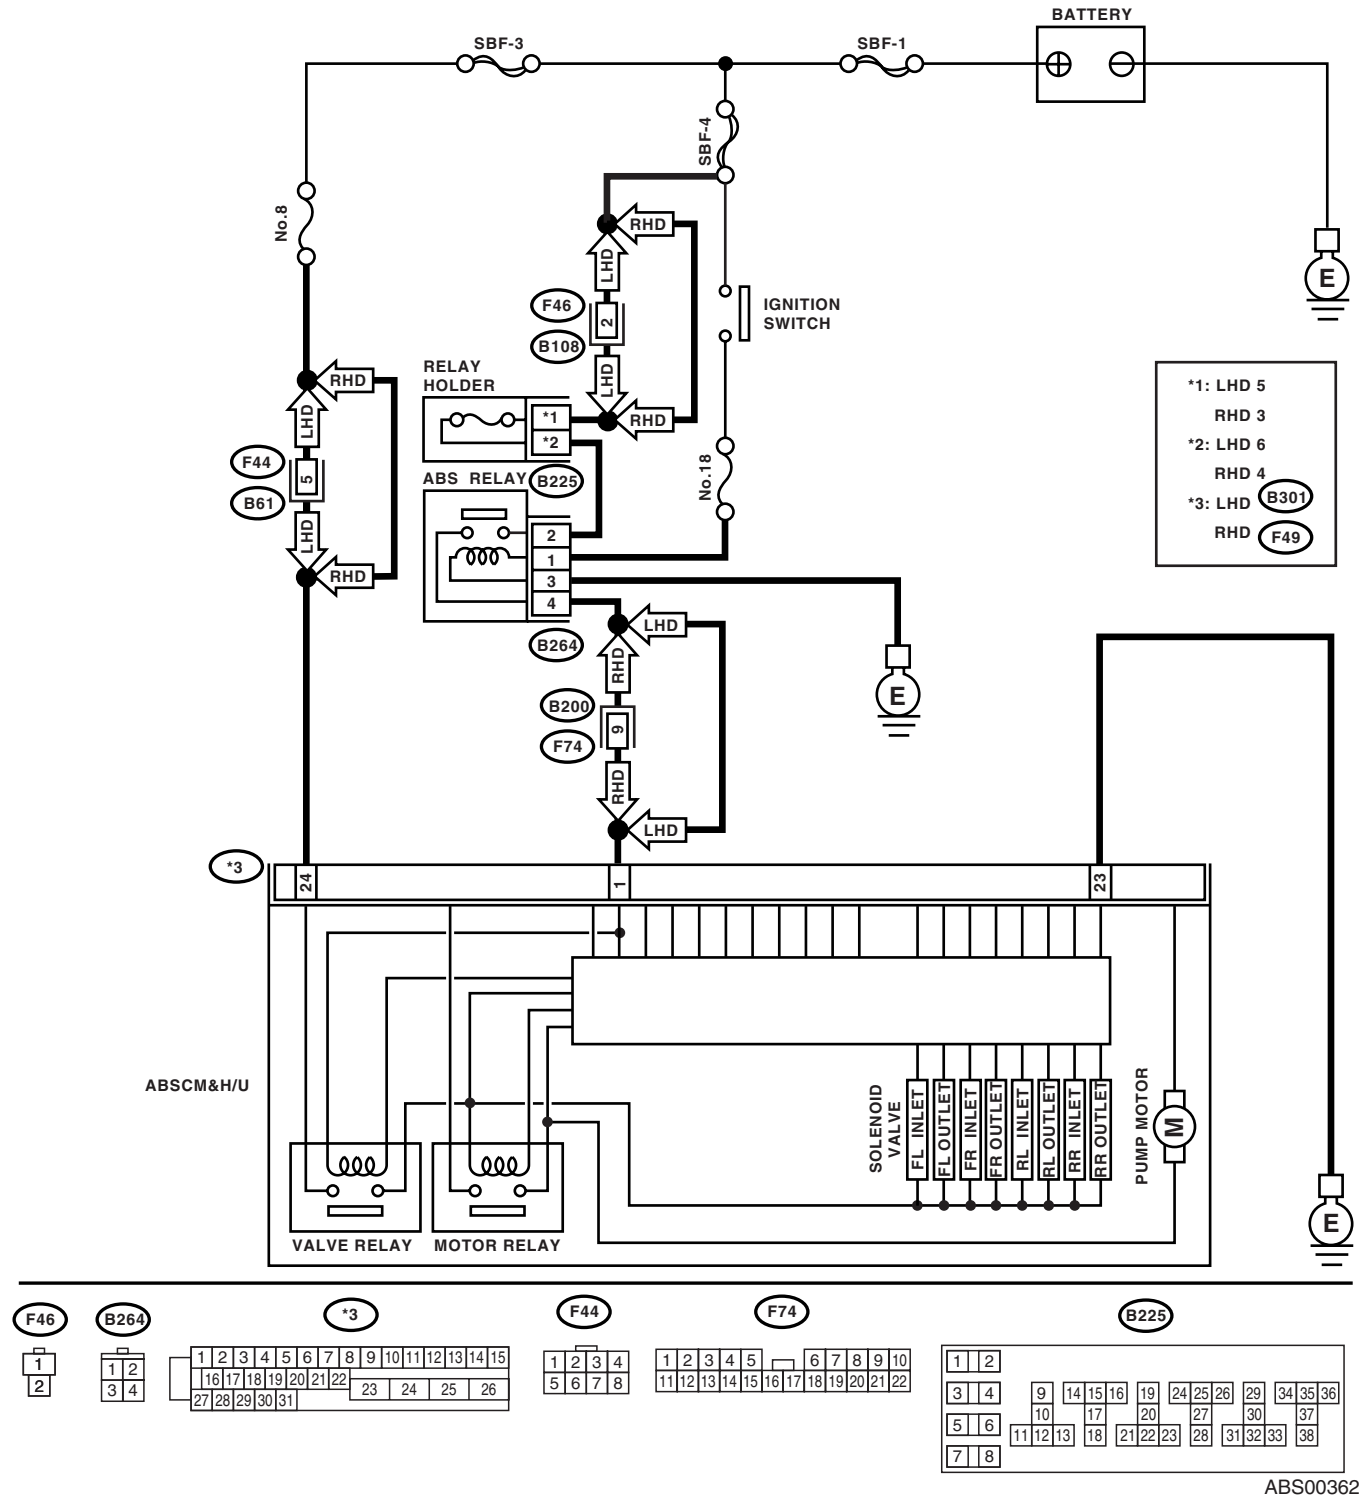

ABS00362

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Run the engine at idle. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD:*** ***(B301) No. 1 (+) — Chassis ground (−):*** ***(B301) No. 24 (+) — Chassis ground (−):*** ***RHD:*** ***(F49) No. 1 (+) — Chassis ground (−):*** ***(F49) No. 24 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness connector between battery and ABSCM&H/U.
2	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

Z: DTC 51
— VALVE RELAY ON FAILURE —

DIAGNOSIS:

- Faulty valve relay

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

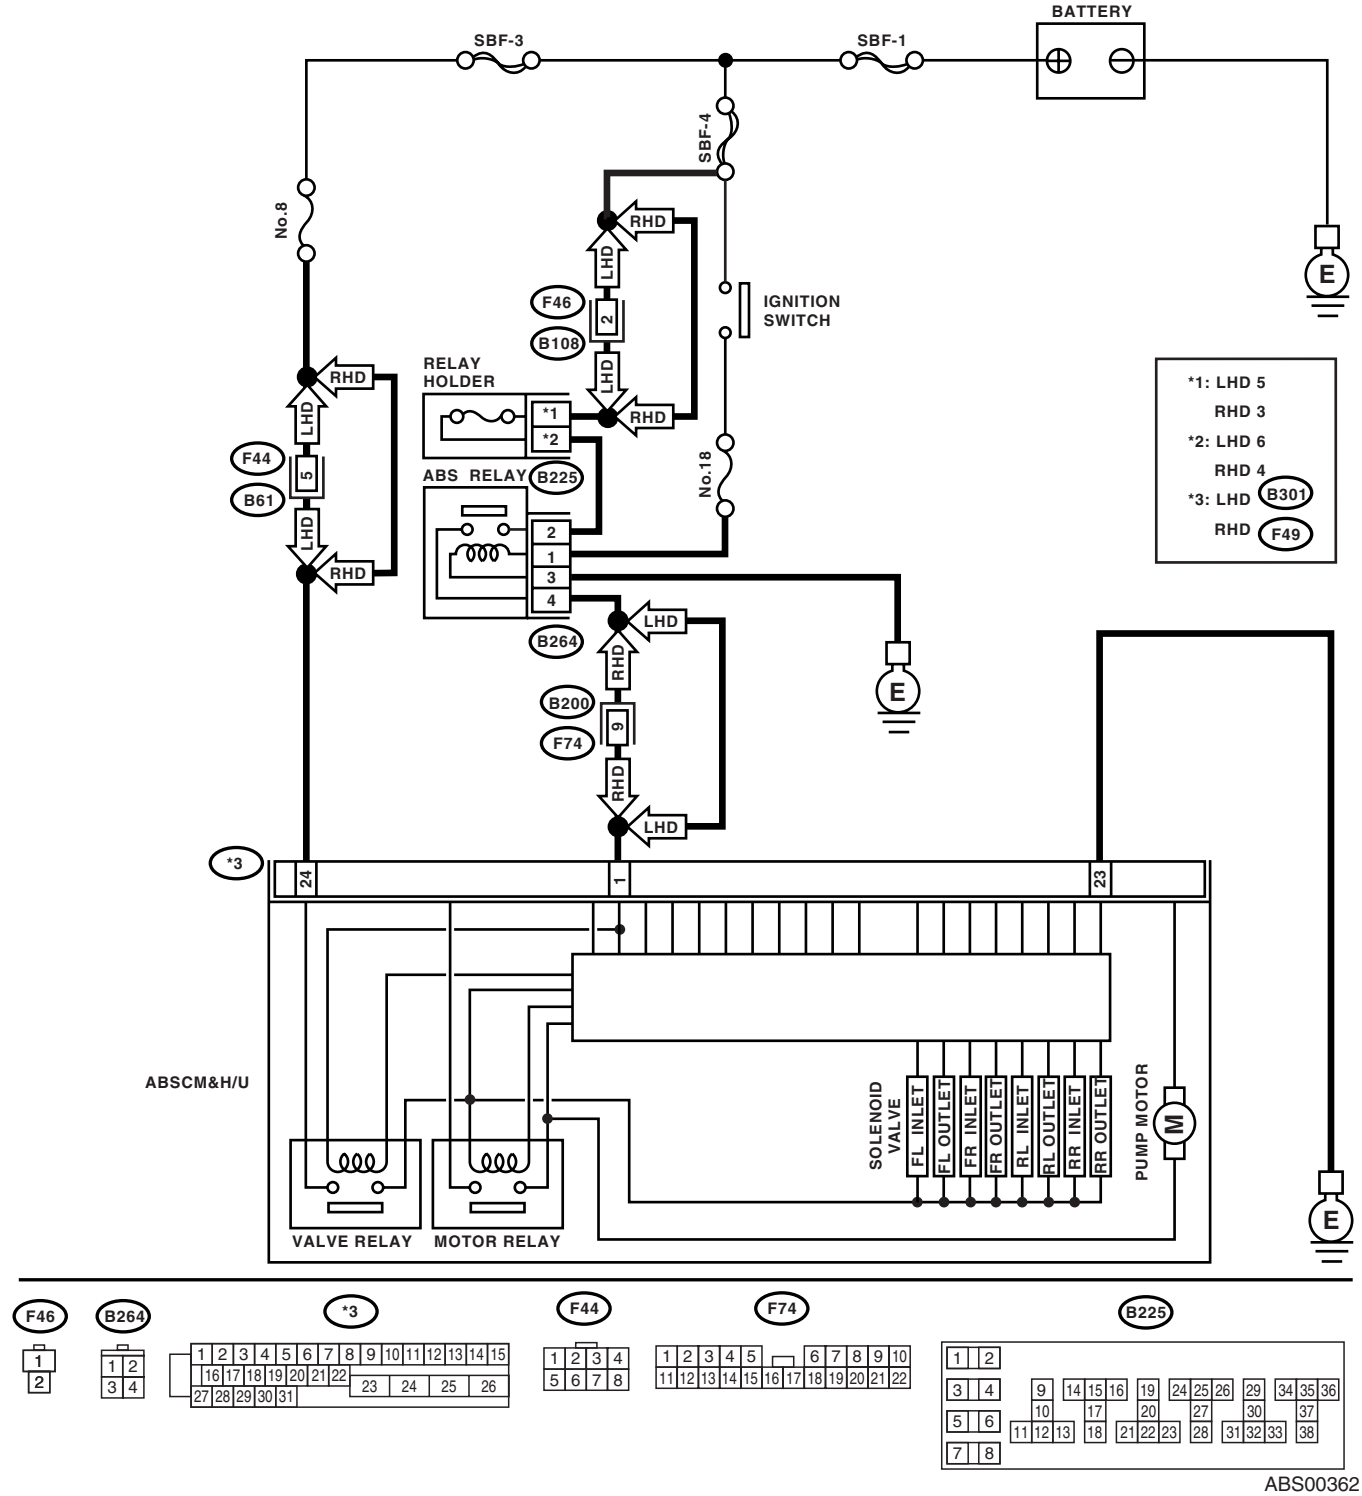

ABS00362

	Step	Check	Yes	No
1	**CHECK VALVE RELAY IN ABSCM&H/U.** 1)Disconnect the connector from ABSCM&H/U. 2)Measure the resistance between ABSCM&H/U terminals. ***Terminals*** ***No. 23 — No. 24:***	Is the resistance more than 1 MΩ?	Go to step **2.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connectors between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AA:DTC 52
— OPEN CIRCUIT IN MOTOR RELAY CIRCUIT —

DIAGNOSIS:

- Faulty motor
- Faulty motor relay
- Faulty harness connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

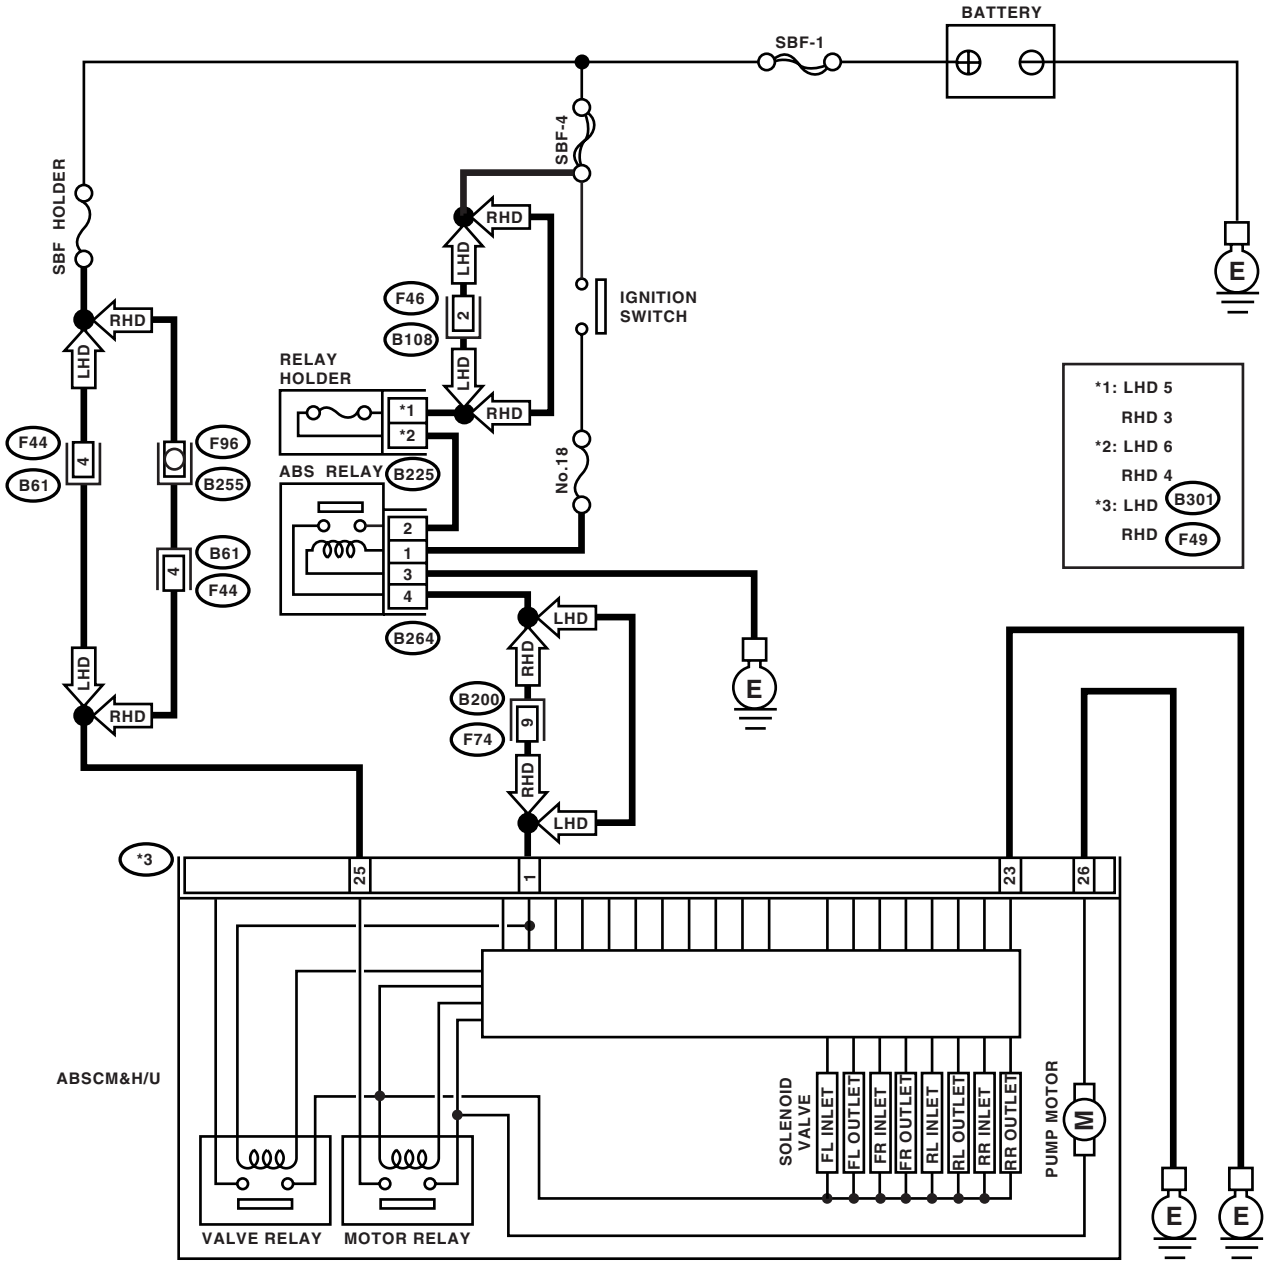

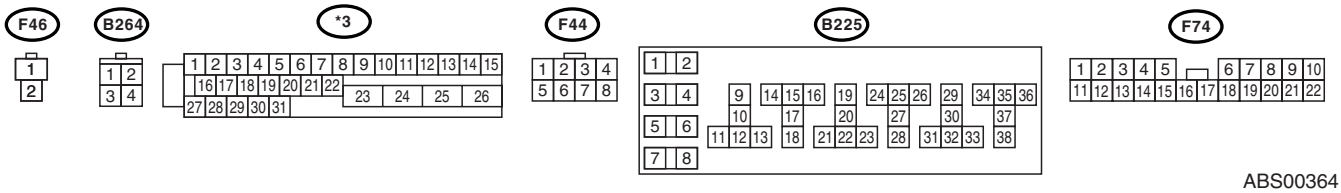

ABS00364

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 25 (+) — Chassis ground (−):*** ***RHD: (F49) No. 25 (+) — Chassis ground (−):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness/connector between battery and ABSCM&H/U and check fuse SBF8.
2	**CHECK GROUND CIRCUIT OF MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 26 — Chassis ground:*** ***RHD: (F49) No. 26 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK MOTOR OPERATION.** Operate the sequence control. <Ref. to ABS-10, ABS Sequence Control.> NOTE: Use the diagnosis connector to operate sequence control.	Can motor revolution noise (buzz) be heard when carrying out the check sequence?	Go to step **4.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
4	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **5.**
5	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **6.**
6	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AB:DTC 52
— MOTOR RELAY ON FAILURE —

DIAGNOSIS:

- Faulty motor
- Faulty motor relay
- Faulty harness connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

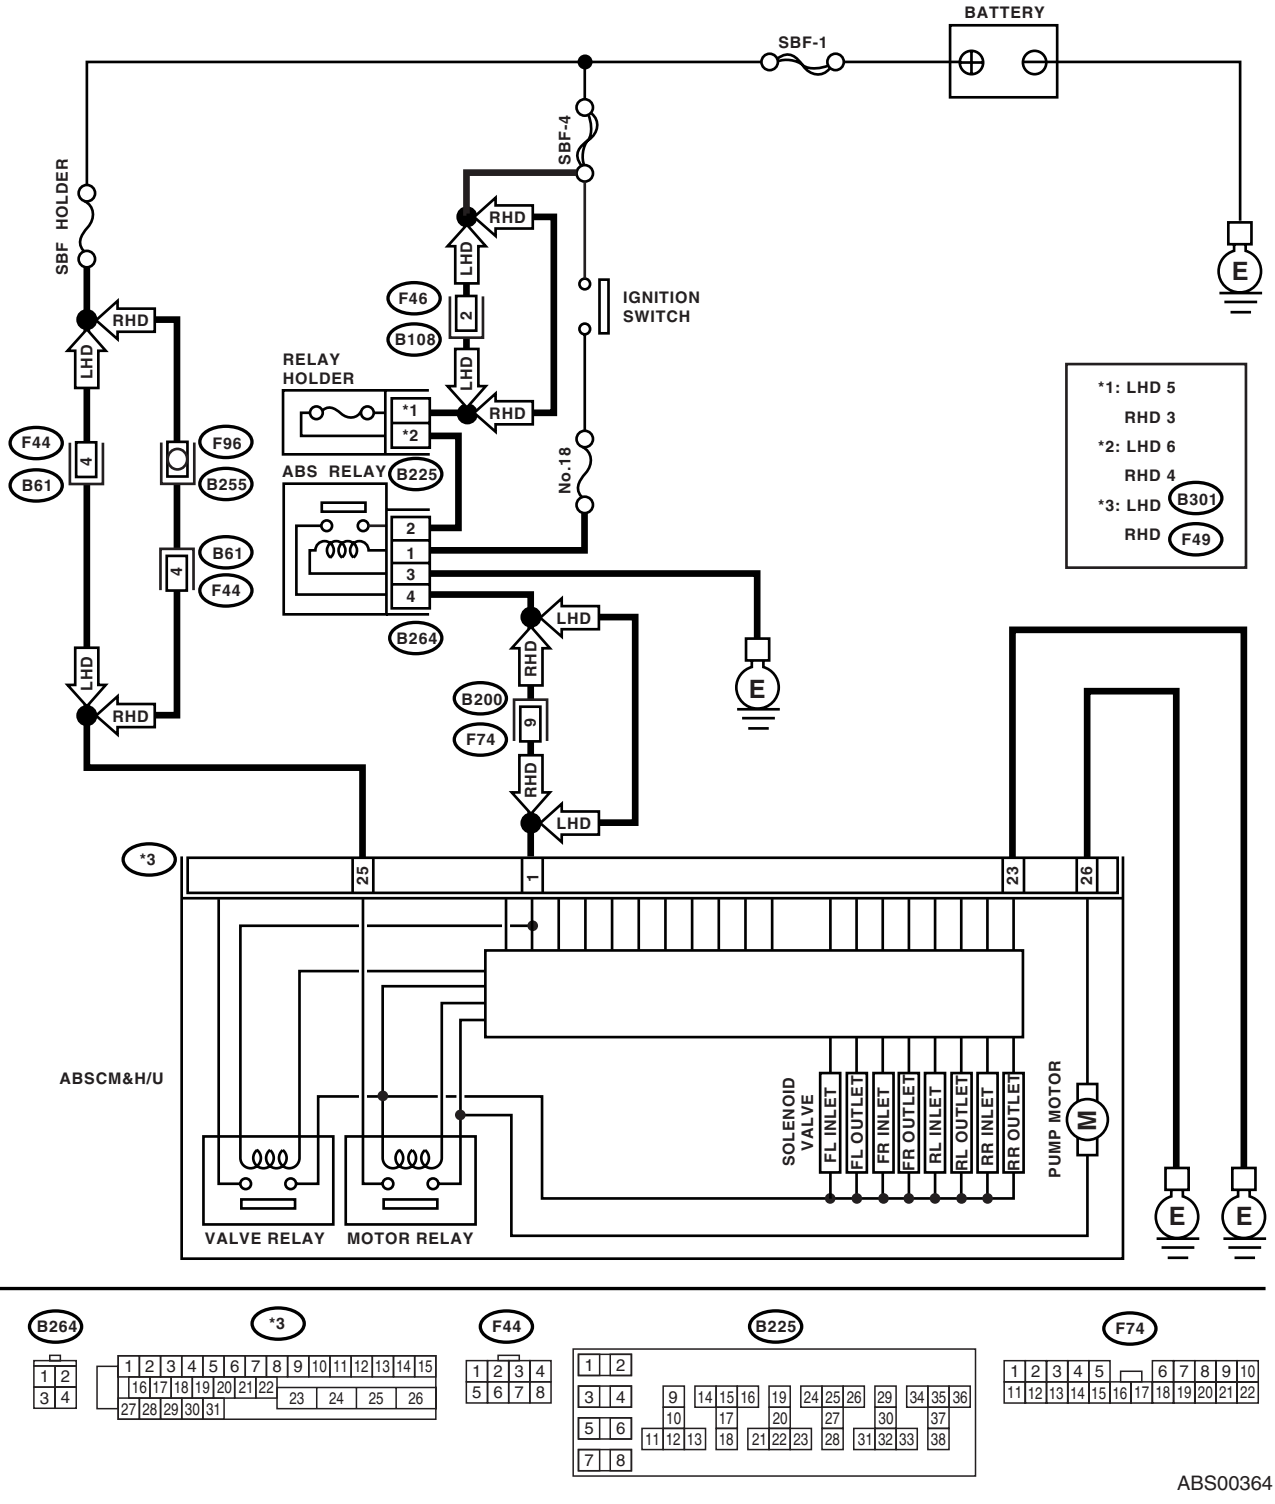

ABS00364

	Step	Check	Yes	No
1	**CHECK MOTOR RELAY IN ABSCM&H/U.** 1)Disconnect the connector from ABSCM&H/U. 2)Measure the resistance between ABSCM&H/U terminals. ***Terminals*** ***No. 25 — No. 26:***	Is the resistance more than 1 MΩ?	Go to step **2.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
2	**CHECK MOTOR OPERATION.** Operate the sequence control. <Ref. to ABS-10, ABS Sequence Control.> NOTE: Use the diagnosis connector to operate sequence control.	Can motor revolution noise (buzz) be heard when carrying out the sequence control?	Go to step **3.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
3	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **4.**
4	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **5.**
5	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact. NOTE: Although the ABS warning light remains illuminating at this point, this is a normal condition. Vehicle must be driven at approx. 12 km/h (7.46 MPH) or faster to turn off ABS warning light. Make sure that the ABS warning light goes off after driving vehicle.

AC:DTC 52
— MOTOR MALFUNCTION —

DIAGNOSIS:

- Faulty motor
- Faulty motor relay
- Faulty harness connector

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

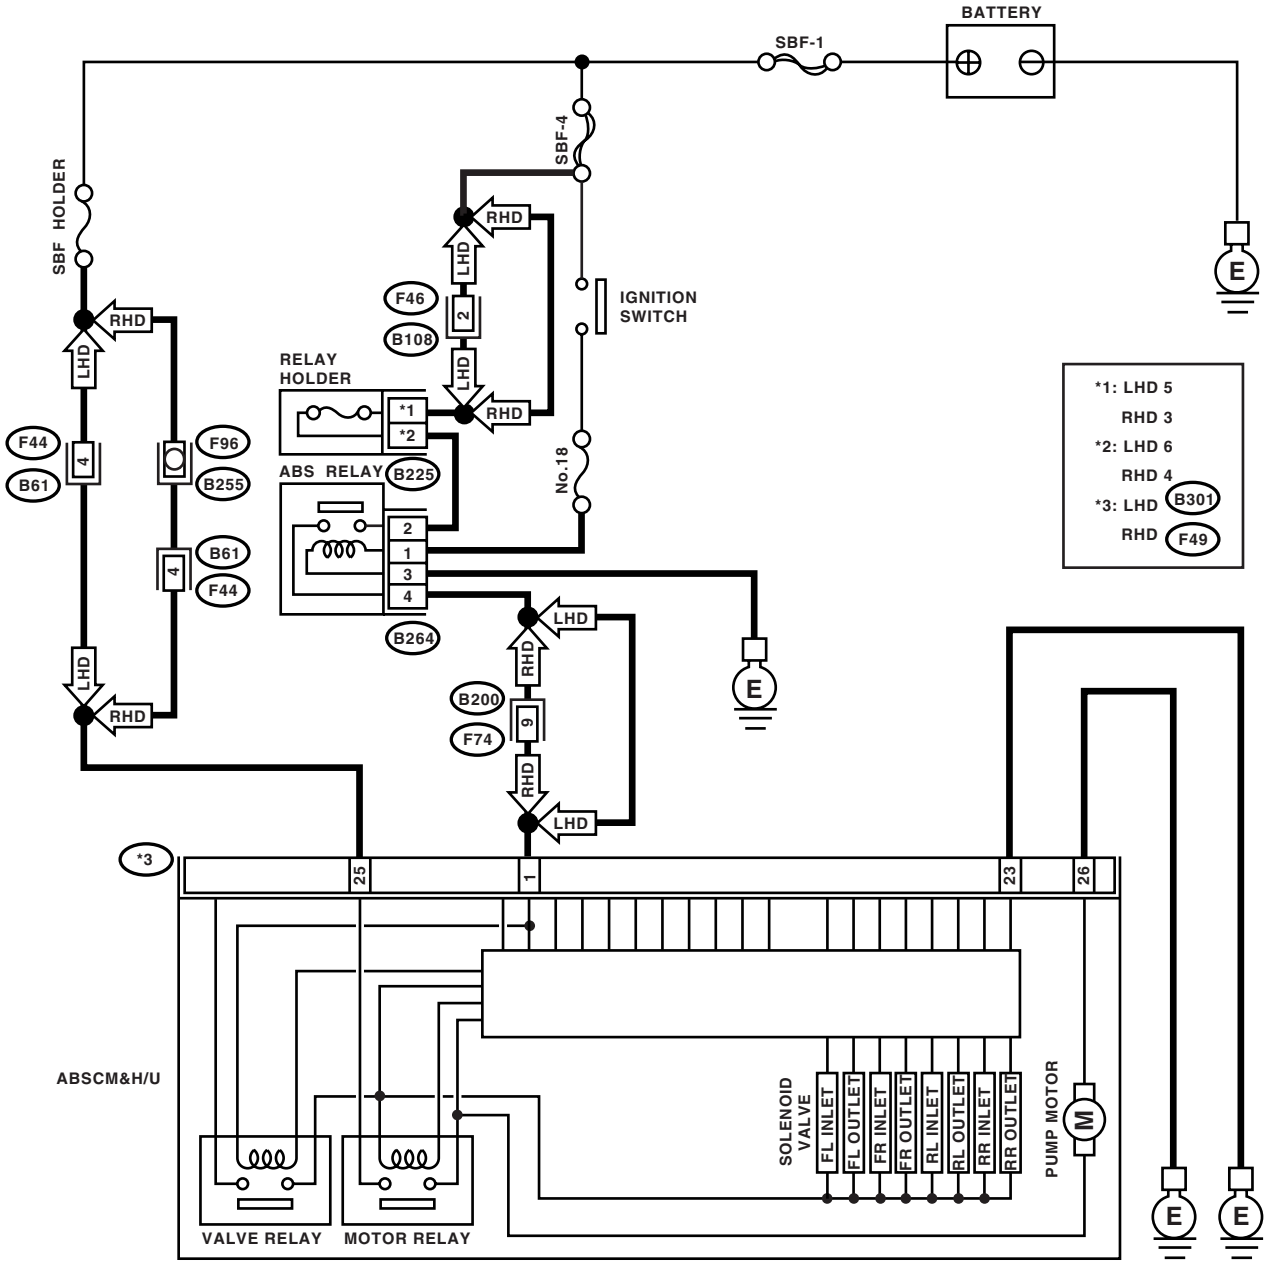

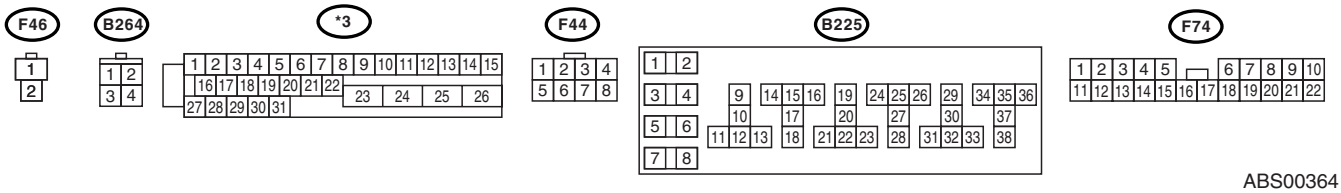

ABS00364

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 25 (+) — Chassis ground (–):*** ***RHD: (F49) No. 25 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **2.**	Repair the harness/connector between battery and ABSCM&H/U and check fuse SBF8.
2	**CHECK GROUND CIRCUIT OF MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 26 — Chassis ground:*** ***RHD: (F49) No. 26 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **3.**	Repair the ABSCM&H/U ground harness.
3	**CHECK INPUT VOLTAGE OF ABSCM&H/U.** 1)Run the engine at idle. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 1 (+) — Chassis ground (–):*** ***RHD: (F49) No. 1 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **4.**	Repair the harness connector between battery, ignition switch and ABSCM&H/U.
4	**CHECK GROUND CIRCUIT OF ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 23 — Chassis ground:*** ***RHD: (F49) No. 23 — Chassis ground:***	Is the resistance less than 0.5 Ω?	Go to step **5.**	Repair the ABSCM&H/U ground harness.
5	**CHECK MOTOR OPERATION.** Operate the sequence control. <Ref. to ABS-10, ABS Sequence Control.> NOTE: Use the diagnosis connector to operate sequence control.	Can motor revolution noise (buzz) be heard when carrying out the sequence control?	Go to step **6.**	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
6	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between generator, battery and ABSCM&H/U?	Repair the connector.	Go to step **7.**
7	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **8.**
8	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AD:DTC 54
— STOP LIGHT SWITCH SIGNAL CIRCUIT MALFUNCTION —

DIAGNOSIS:
- Faulty stop light switch

TROUBLE SYMPTOM:
- ABS does not operate.

WIRING DIAGRAM:

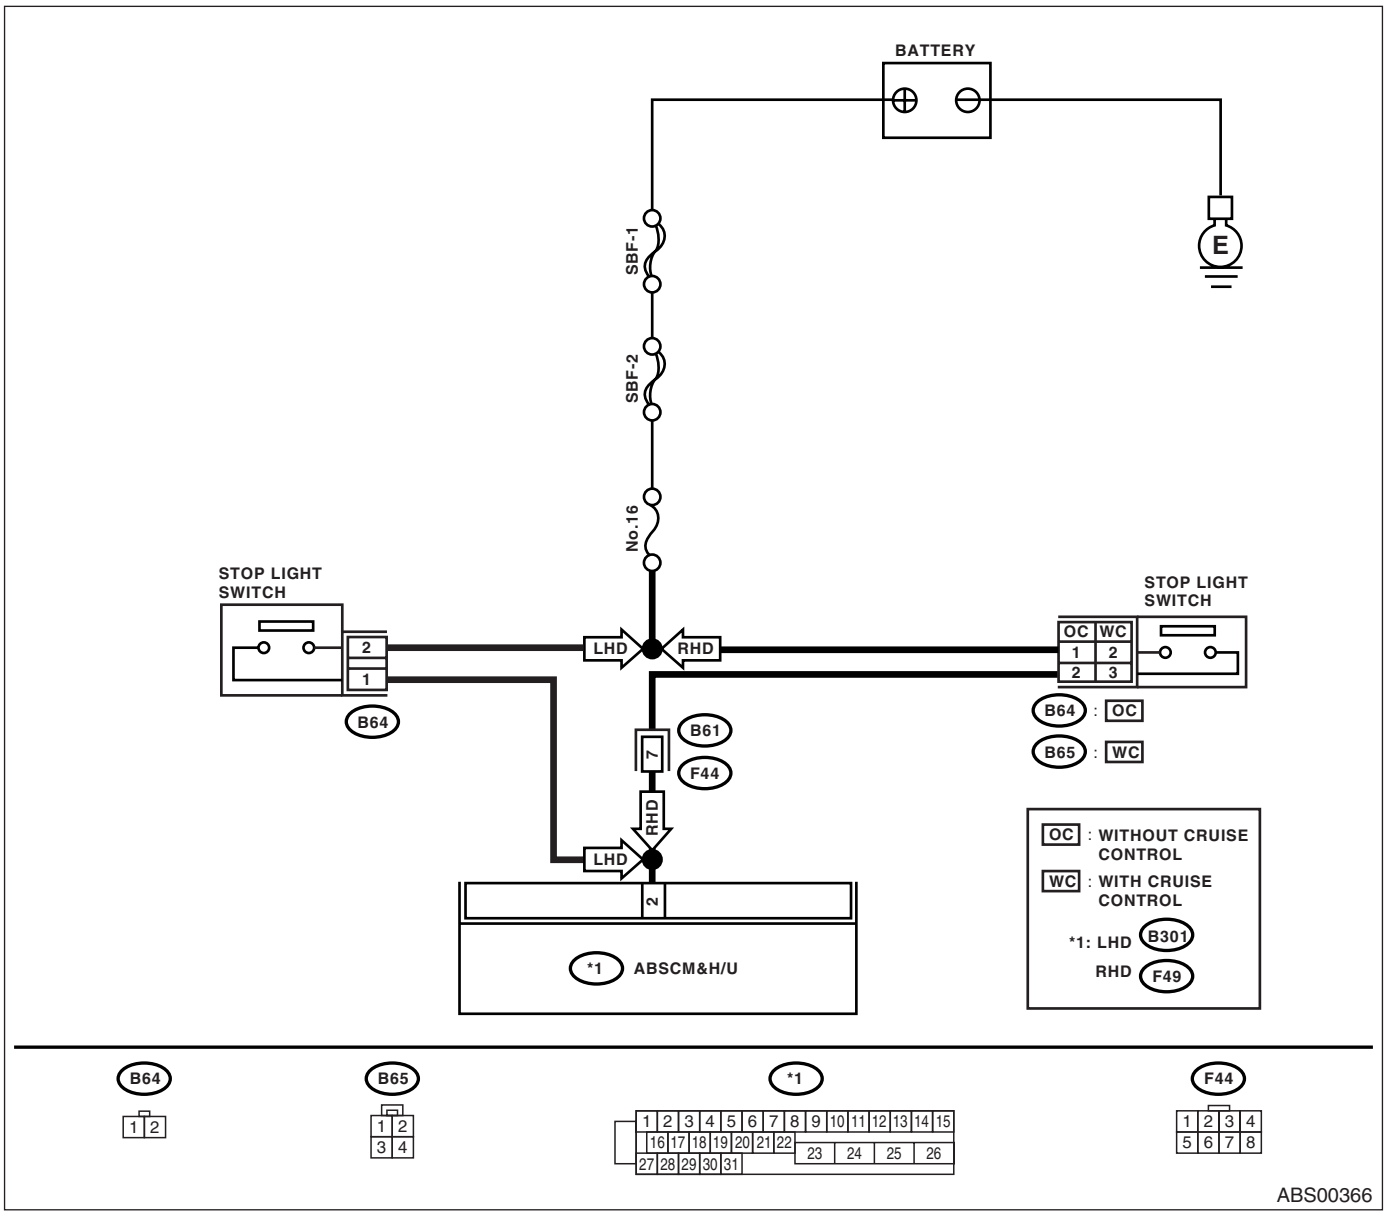

	Step	Check	Yes	No
1	**CHECK OUTPUT OF STOP LIGHT SWITCH USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Release the brake pedal. 3)Read the stop light switch output in Subaru Select Monitor data display.	Is the reading indicated on monitor display less than 1.5 V?	Go to step **2.**	Go to step **3.**

	Step	Check	Yes	No
2	**CHECK OUTPUT OF STOP LIGHT SWITCH USING SUBARU SELECT MONITOR.** 1)Depress the brake pedal. 2)Read the stop light switch output in Subaru Select Monitor data display.	Is the reading indicated on monitor display 10 — 15 V?	Go to step **5.**	Go to step **3.**
3	**CHECK IF STOP LIGHTS COME ON.** Depress the brake pedal.	Do the stop lights turn on?	Go to step **4.**	Repair the stop lights circuit.
4	**CHECK OPEN CIRCUIT IN HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Depress the brake pedal. 4)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 2 (+) — Chassis ground (–):*** ***RHD: (F49) No. 2 (+) — Chassis ground (–):***	Is the voltage 10 — 15 V?	Go to step **5.**	Repair the harness between stop light switch and ABSCM&H/U connector.
5	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between stop light switch and ABSCM&H/U?	Go to step **6.**	Repair the connector.
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AE:DTC 56
— OPEN OR SHORT CIRCUIT IN G SENSOR CIRCUIT —

DIAGNOSIS:

- Faulty G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

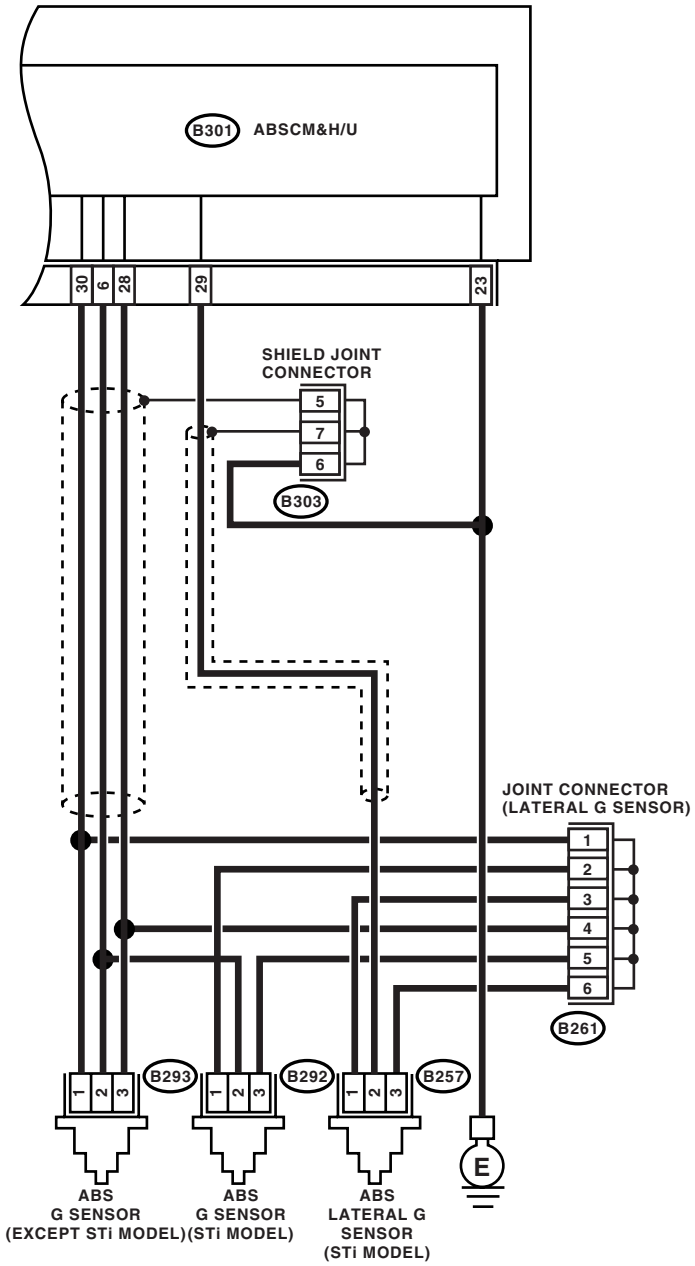

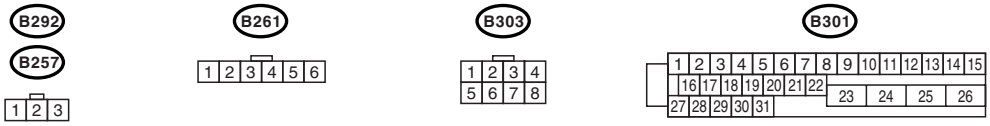

ABS00368

RHD MODEL

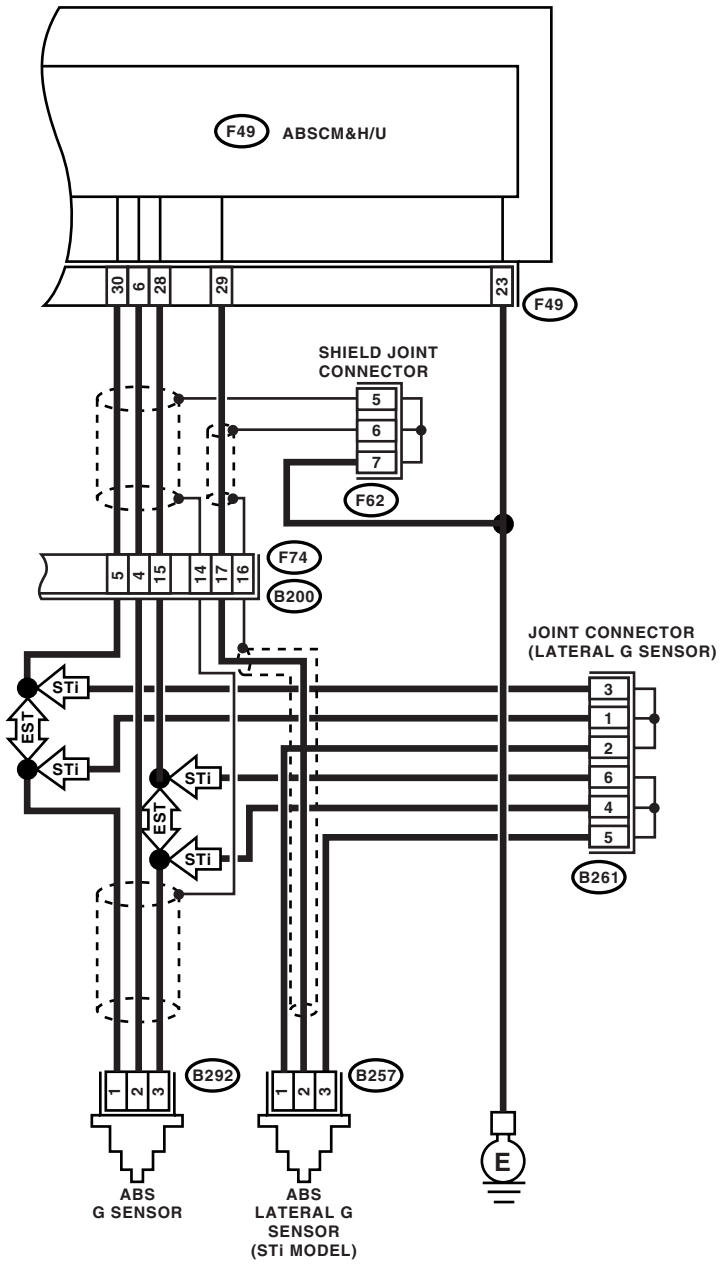

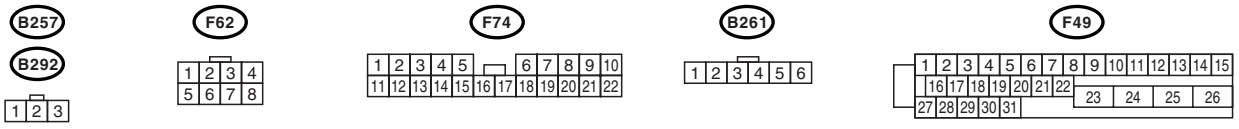

ABS00369

Step		Check	Yes	No
1	**CHECK OUTPUT OF G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the G sensor output in Subaru Select Monitor data display.	Is the G sensor output on monitor display 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **2.**	Go to step **5.**

	Step	Check	Yes	No
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
5	**CHECK INPUT VOLTAGE OF G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the G sensor from vehicle. (Do not disconnect connector.) 4)Turn the ignition switch to ON. 5)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 1 (+) — No. 3 (–):***	Is the voltage 4.75 — 5.25 V?	Go to step **6.**	Repair the harness/connector between G sensor and ABSCM&H/U.
6	**CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 6 — No. 28:*** ***RHD: (F49) No. 6 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **7.**	Repair the harness/connector between G sensor and ABSCM&H/U.
7	**CHECK GROUND SHORT IN G SENSOR OUTPUT HARNESS.** 1)Disconnect the connector from G sensor. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 6 — Chassis ground:*** ***RHD: (F49) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair the harness between G sensor and ABSCM&H/U.
8	**CHECK G SENSOR.** 1)Connect the connector to G sensor. 2)Connect the connector to ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (–):***	Is the voltage 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **9.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
9	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (–):***	Is the voltage 3.7 — 4.1 V when G sensor is inclined forwards to 90°?	Go to step **10.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
10	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (–):***	Is the voltage 0.5 — 0.9 V when G sensor is inclined backwards to 90°?	Go to step **11.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>

	Step	Check	Yes	No
11	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **12.**
12	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **13.**
13	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AF:DTC 56
— BATTERY SHORT IN G SENSOR CIRCUIT —

DIAGNOSIS:

- Faulty G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

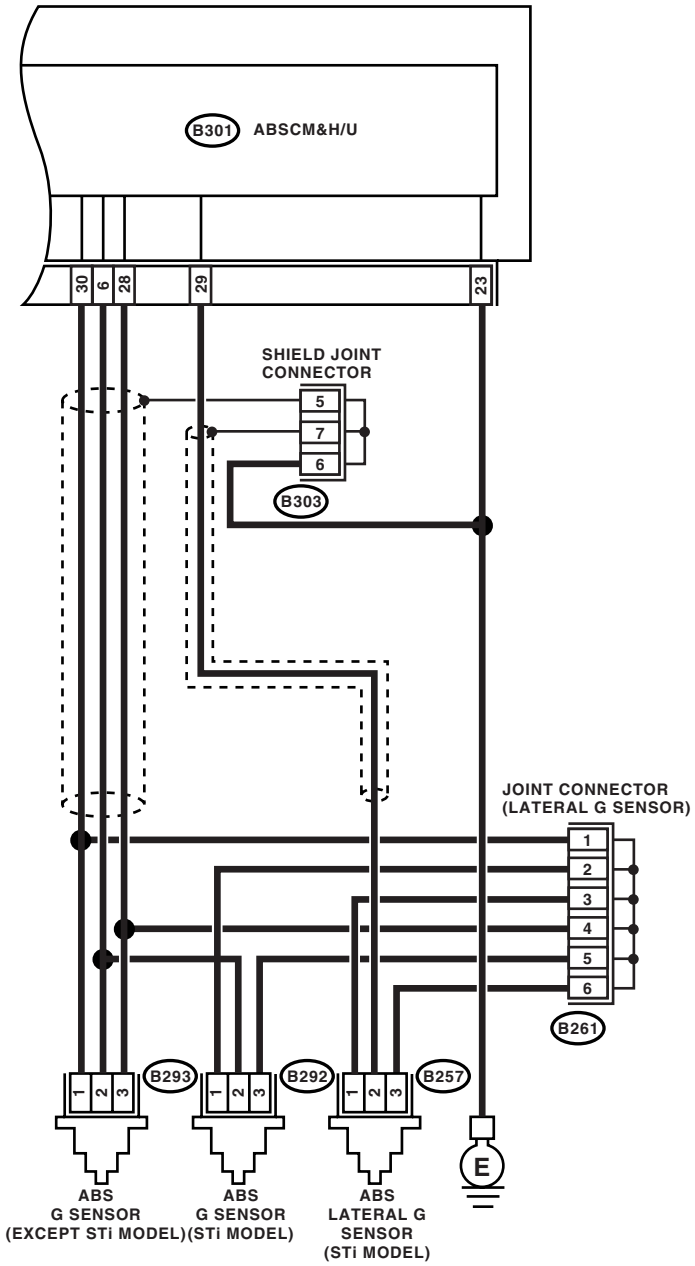

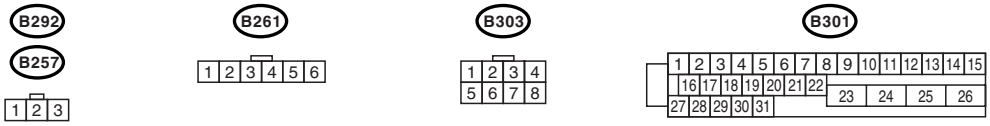

ABS00368

RHD MODEL

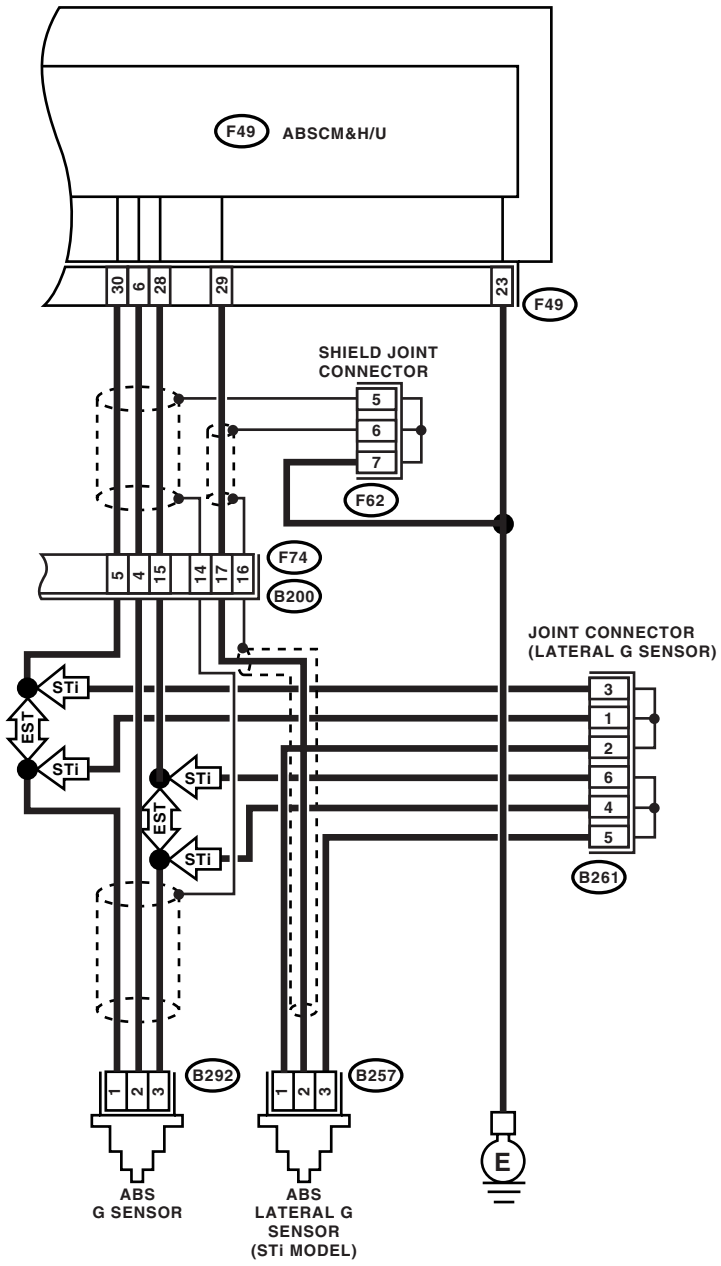

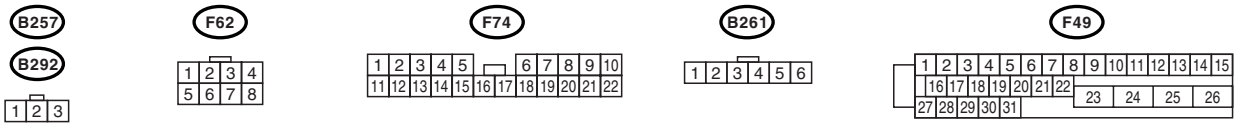

ABS00369

Step		Check	Yes	No
1	**CHECK OUTPUT OF G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the G sensor output in Subaru Select Monitor data display.	Is the voltage 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **2.**	Go to step **5.**

	Step	Check	Yes	No
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
5	**CHECK FREEZE FRAME DATA.** 1)Select “Freeze frame data” on the Subaru Select Monitor. 2)Read front right wheel speed on the Subaru Select Monitor display.	Is the front right wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **6.**	Go to step **16.**
6	**CHECK FREEZE FRAME DATA.** Read front left wheel speed on the Subaru Select Monitor display.	Is the front left wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **7.**	Go to step **16.**
7	**CHECK FREEZE FRAME DATA.** Read rear right wheel speed on the Subaru Select Monitor display.	Is the rear right wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **8.**	Go to step **16.**
8	**CHECK FREEZE FRAME DATA.** Read rear left wheel speed on the Subaru Select Monitor display.	Is the rear left wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **9.**	Go to step **16.**
9	**CHECK FREEZE FRAME DATA.** Read G sensor output on the Subaru Select Monitor display.	Is the G sensor output on monitor display more than 3.65 V?	Go to step **10.**	Go to step **16.**
10	**CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 6 — No. 28:*** ***RHD: (F49) No. 6 — No. 28:***	Is the resistance 4.3 — 4.9 kΩ?	Go to step **11.**	Repair the harness/connector between G sensor and ABSCM&H/U.
11	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Disconnect the connector from G sensor. 4)Disconnect the connector from ABSCM&H/U. 5)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 6 (+) — Chassis ground (–):*** ***RHD: (F49) No. 6 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **12.**	Repair the harness between G sensor and ABSCM&H/U.

	Step	Check	Yes	No
12	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 6 (+) — Chassis ground (–):*** ***RHD: (F49) No. 6 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Go to step **13.**	Repair the harness between G sensor and ABSCM&H/U.
13	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **14.**
14	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **15.**
15	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
16	**CHECK INPUT VOLTAGE OF G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the G sensor from vehicle. (Do not disconnect connector.) 4)Turn the ignition switch to ON. 5)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 1 (+) — No. 3 (–):***	Is the voltage 4.75 — 5.25 V?	Go to step **17.**	Repair the harness/connector between G sensor and ABSCM&H/U.
17	**CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 6 — No. 28:*** ***RHD: (F49) No. 6 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **18.**	Repair the harness/connector between G sensor and ABSCM&H/U.
18	**CHECK G SENSOR.** 1)Connect the connector to G sensor. 2)Connect the connector to ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (–):***	Is the voltage 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **19.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
19	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (–):***	Is the voltage 3.7 — 4.1 V when G sensor is inclined forwards to 90°?	Go to step **20.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>

	Step	Check	Yes	No
20	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal (B292) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when G sensor is inclined backwards to 90°?	Go to step **21.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
21	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **22.**
22	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **23.**
23	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AG:DTC 56
— ABNORMAL G SENSOR HIGH μ OUTPUT —

DIAGNOSIS:

- Faulty G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

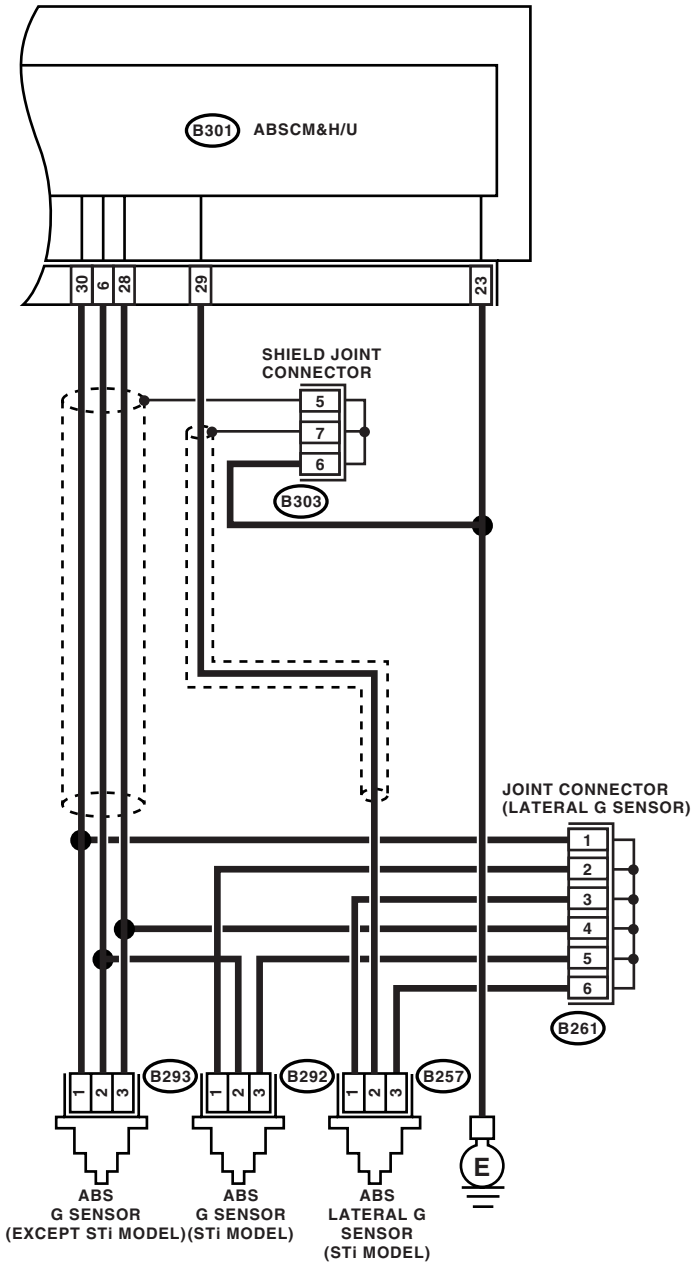

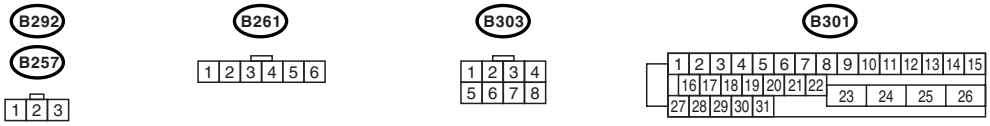

ABS00368

RHD MODEL

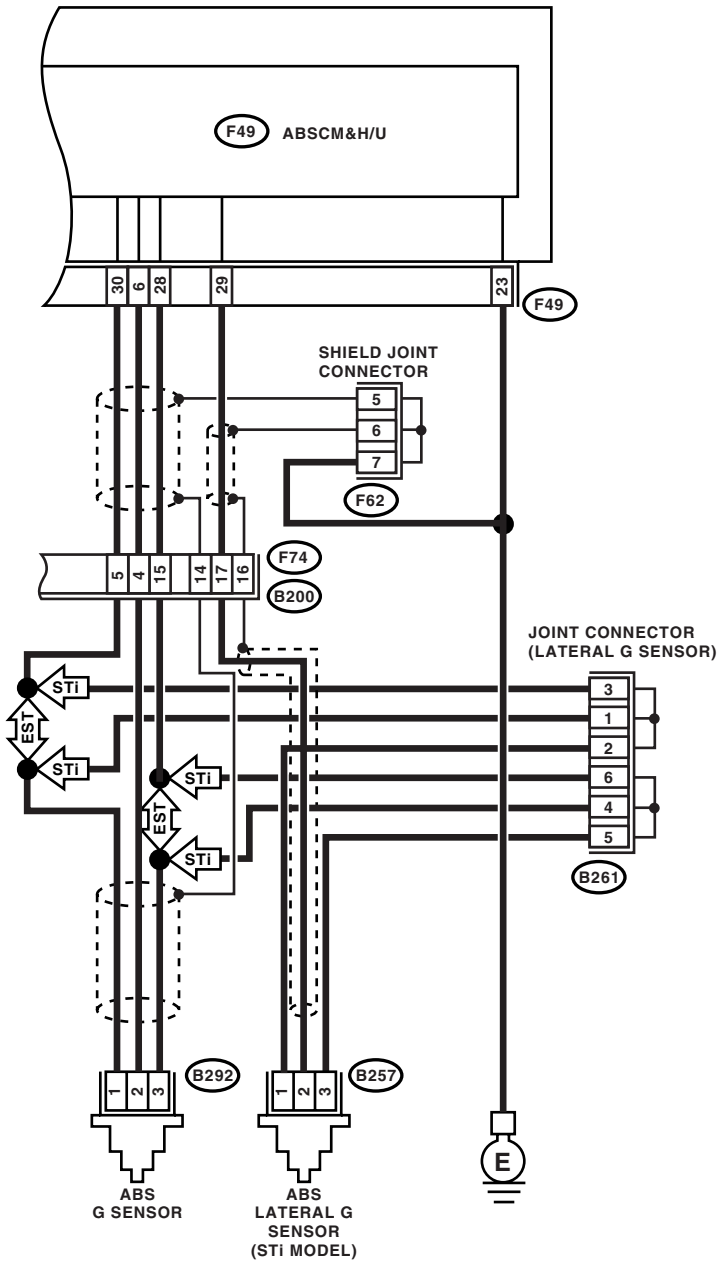

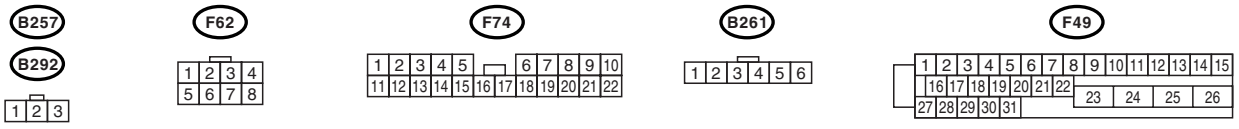

ABS00369

Step		Check	Yes	No
1	**CHECK OUTPUT OF G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read G sensor output on the Subaru Select Monitor display.	Is the voltage 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **2.**	Go to step **6.**

	Step	Check	Yes	No
2	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
5	**CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 6 — No. 28:*** ***RHD: (F49) No. 6 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **6.**	Repair the harness/connector between G sensor and ABSCM&H/U.
6	**CHECK GROUND SHORT OF HARNESS.** Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 28 — Chassis ground:*** ***RHD: (F49) No. 28 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the harness between G sensor and ABSCM&H/U. Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
7	**CHECK G SENSOR.** 1)Remove the console box. 2)Remove the G sensor from vehicle. 3)Connect the connector to G sensor. 4)Connect the connector to ABSCM&H/U. 5)Turn the ignition switch to ON. 6)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **8.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
8	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 3.7 — 4.1 V when G sensor is inclined forwards to 90°?	Go to step **9.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
9	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when G sensor is inclined backwards to 90°?	Go to step **10.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>

	Step	Check	Yes	No
10	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **11.**
11	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AH:DTC 56
— DETECTION OF G SENSOR STICK —

DIAGNOSIS:

- Faulty G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

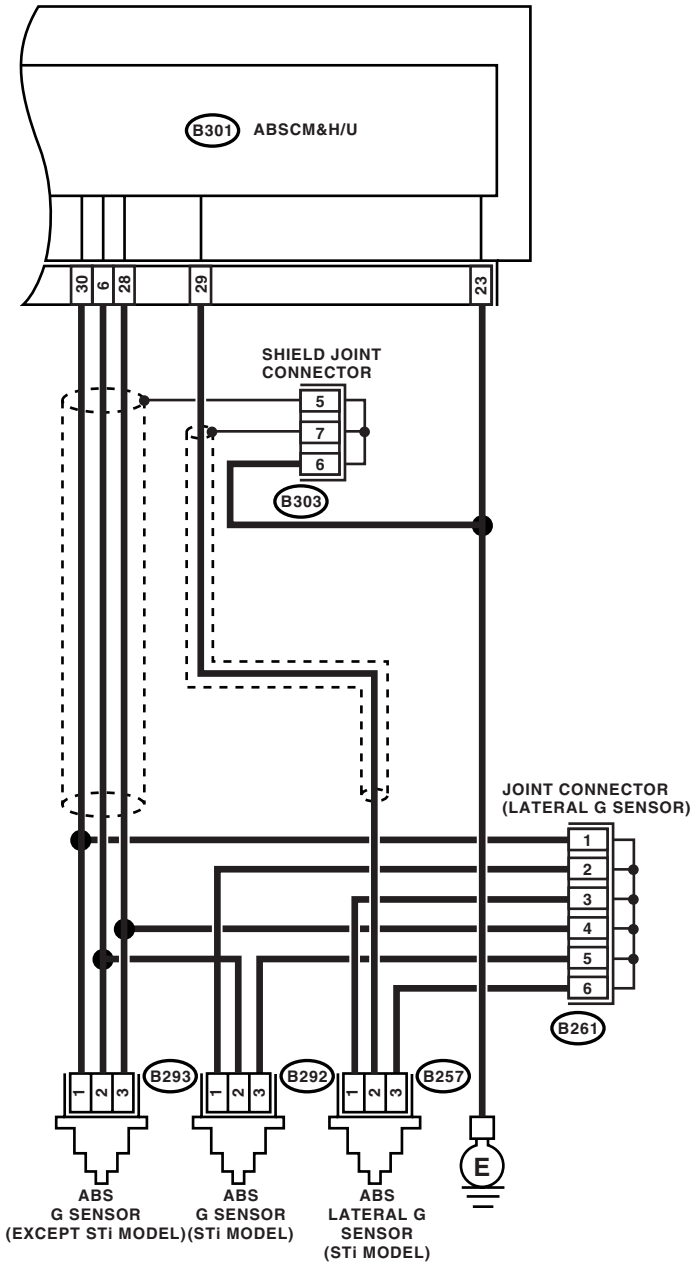

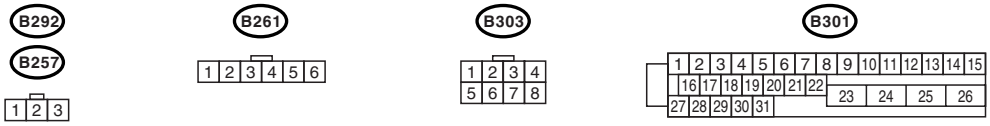

ABS00368

RHD MODEL

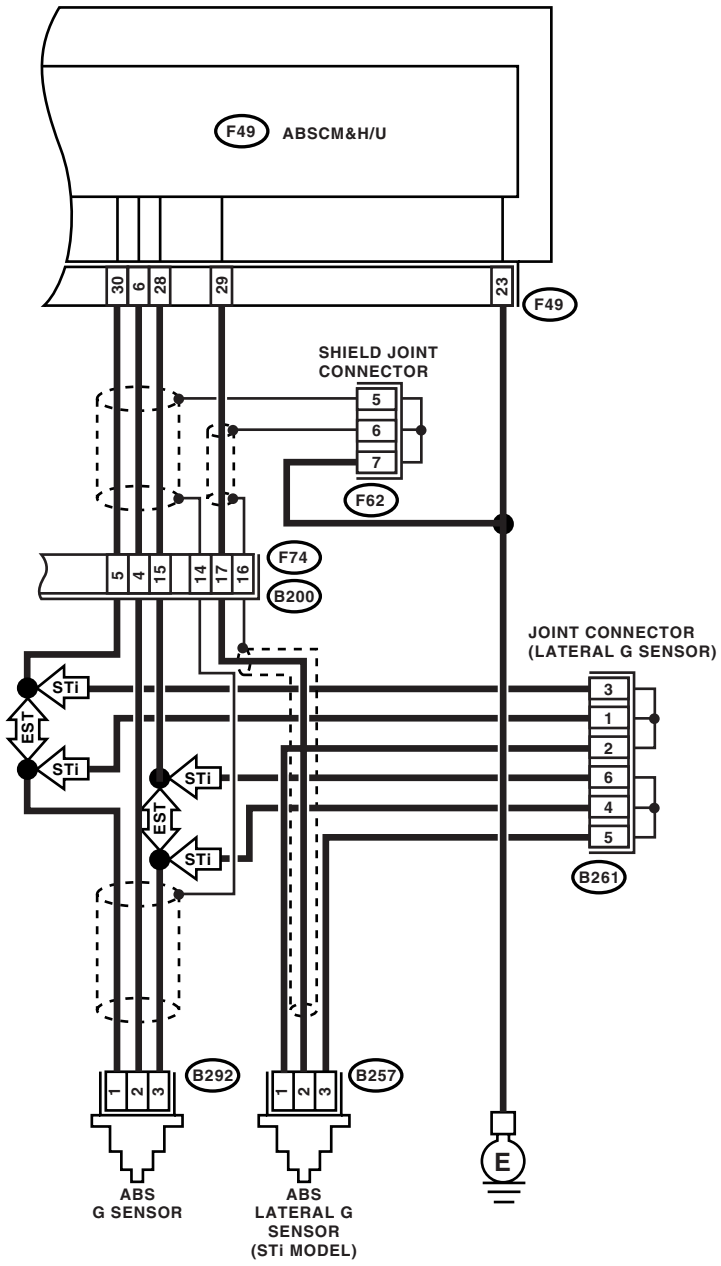

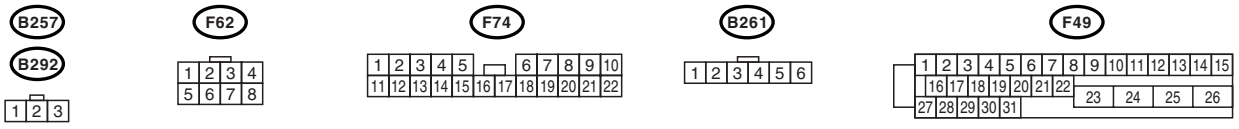

ABS00369

Step		Check	Yes	No
1	**CHECK ALL FOUR WHEELS FOR FREE TURNING.**	Have the wheels been turned freely such as when vehicle is lifted up, or operated on a rolling road?	The ABS is normal. Erase the DTC.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK OUTPUT OF G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the Subaru Select Monitor display.	Is the G sensor output on monitor display 2.1 — 2.5 V when the vehicle is in horizontal position?	Go to step **3.**	Go to step **8.**
3	**CHECK OUTPUT OF G SENSOR USING SUBARU SELECT MONITOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the G sensor from vehicle. (Do not disconnect the connector.) 4)Turn the ignition switch to ON. 5)Select “Current data display & Save” on the Subaru Select Monitor. 6)Read the Subaru Select Monitor display.	Is the voltage 3.7 — 4.1 V when G sensor is inclined forwards to 90°?	Go to step **4.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
4	**CHECK OUTPUT OF G SENSOR USING SUBARU SELECT MONITOR.** Read the Subaru Select Monitor display.	Is the voltage 0.5 — 0.9 V when G sensor is inclined backwards to 90°?	Go to step **5.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
5	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and G sensor?	Repair the connector.	Go to step **6.**
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
8	**CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 6 — No. 28:*** ***RHD: (F49) No. 6 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **9.**	Repair the harness/connector between G sensor and ABSCM&H/U.
9	**CHECK G SENSOR.** 1)Remove the console box. 2)Remove the G sensor from vehicle. 3)Connect the connector to G sensor. 4)Connect the connector to ABSCM&H/U. 5)Turn the ignition switch to ON. 6)Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.5 V when G sensor is in horizontal position?	Go to step **10.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
10	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal*** ***(B292) No. 2 (+) — No. 3 (−):***	Is the voltage 3.7 — 4.1 V when G sensor is inclined forwards to 90°?	Go to step **11.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>

	Step	Check	Yes	No
11	**CHECK G SENSOR.** Measure the voltage between G sensor connector terminals. ***Connector & terminal (B292) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when G sensor is inclined backwards to 90°?	Go to step **12.**	Replace the G sensor. <Ref. to ABS-21, G Sensor.>
12	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **13.**
13	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AI: DTC 73
— OPEN OR SHORT CIRCUIT IN LATERAL G SENSOR CIRCUIT —

DIAGNOSIS:

- Faulty Lateral G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

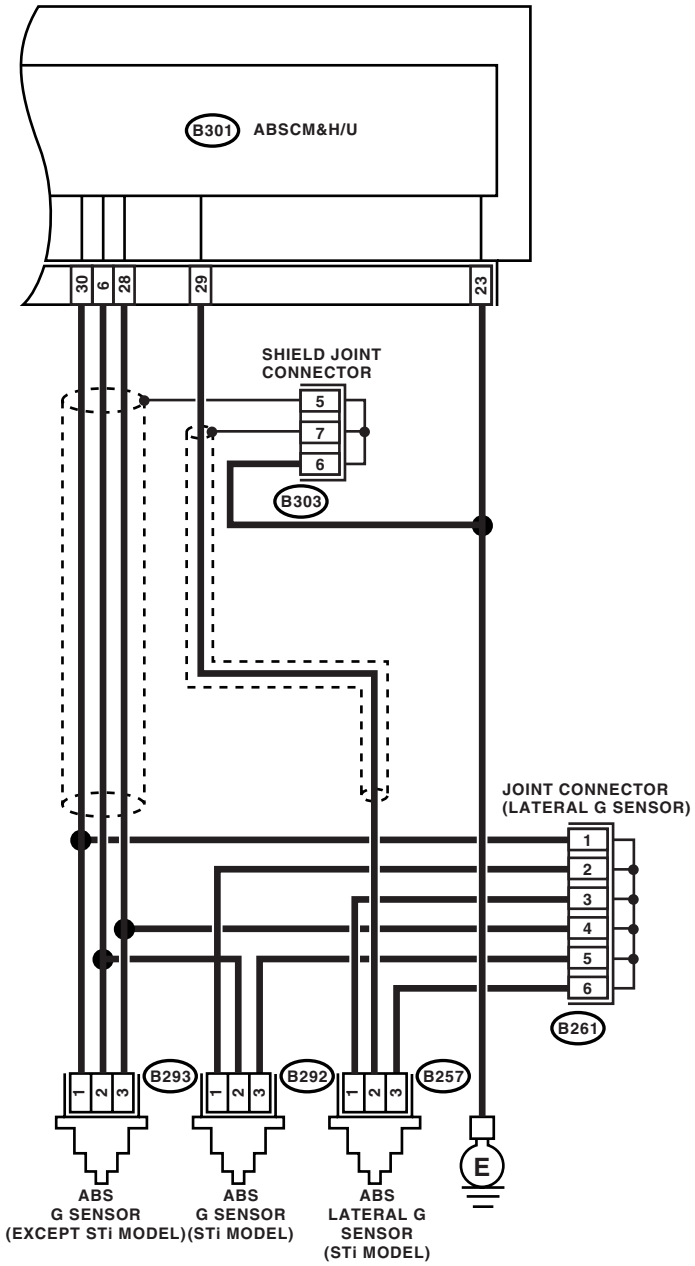

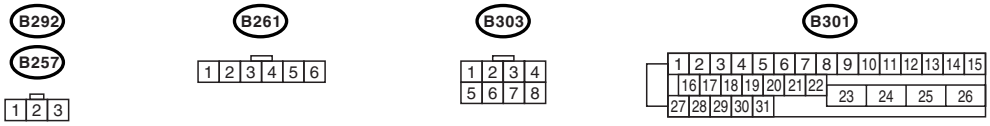

ABS00368

RHD MODEL

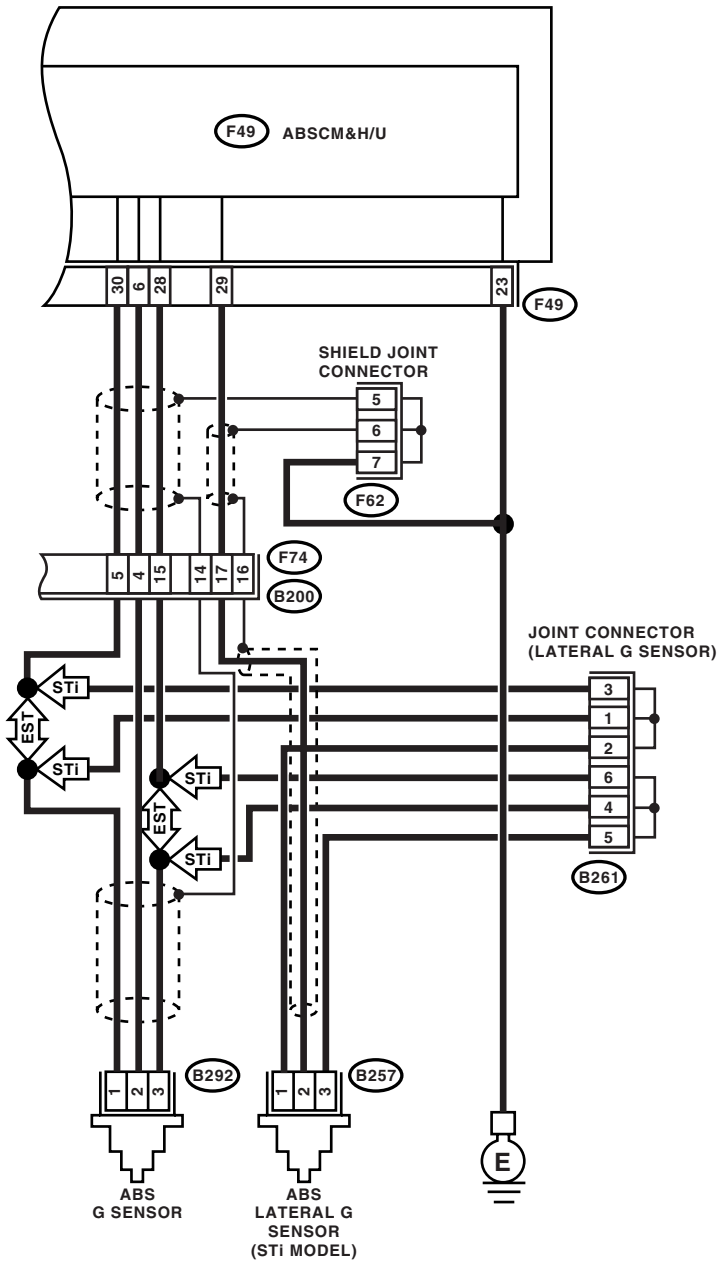

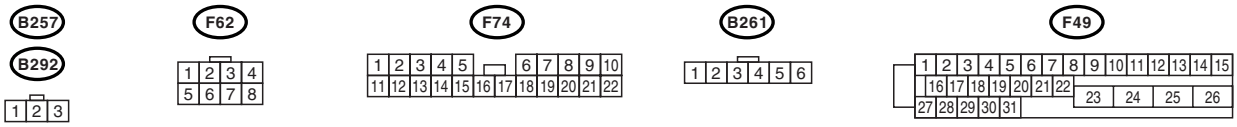

ABS00369

Step		Check	Yes	No
1	**CHECK OUTPUT OF LATERAL G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the lateral G sensor output in Subaru Select Monitor data display.	Is the lateral G sensor output on monitor display 2.3 — 2.7 V when lateral G sensor is in horizontal position?	Go to step **2.**	Go to step **5.**

	Step	Check	Yes	No
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
5	**CHECK INPUT VOLTAGE OF LATERAL G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the lateral G sensor from vehicle. (Do not disconnect connector.) 4)Turn the ignition switch to ON. 5)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 1 (+) — No. 3 (−):***	Is the voltage 4.75 — 5.25 V?	Go to step **6.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
6	**CHECK OPEN CIRCUIT IN LATERAL G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 28 — No. 30:*** ***RHD: (F49) No. 28 — No. 30:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **7.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
7	**CHECK GROUND SHORT IN LATERAL G SENSOR OUTPUT HARNESS.** 1)Disconnect the connector from lateral G sensor. 2)Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 29 — Chassis ground:*** ***RHD: (F49) No. 29 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **8.**	Repair the harness between lateral G sensor and ABSCM&H/U.
8	**CHECK LATERAL G SENSOR.** 1)Connect the connector to lateral G sensor. 2)Connect the connector to ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.5 V when lateral G sensor is in horizontal position?	Go to step **9.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
9	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 3.7 — 4.1 V when lateral G sensor is inclined right to 90°?	Go to step **10.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>

	Step	Check	Yes	No
10	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal (B257) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when lateral G sensor is inclined left to 90°?	Go to step **11.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
11	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **12.**
12	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **13.**
13	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AJ:DTC 73
— BATTERY SHORT IN LATERAL G SENSOR CIRCUIT —

DIAGNOSIS:

- Faulty Lateral G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

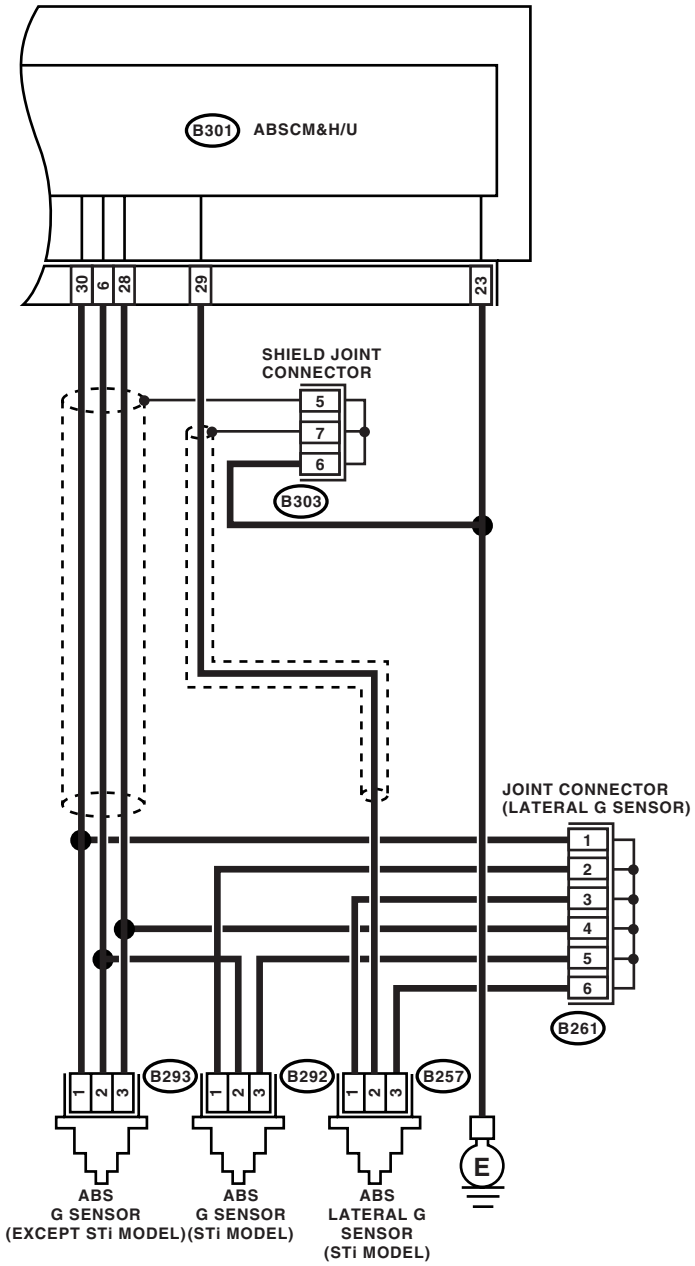

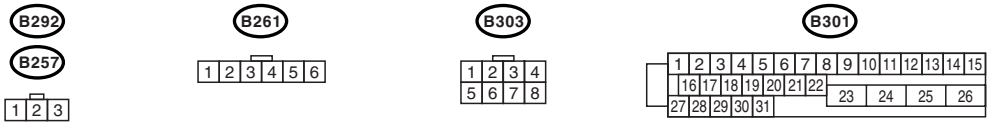

ABS00368

RHD MODEL

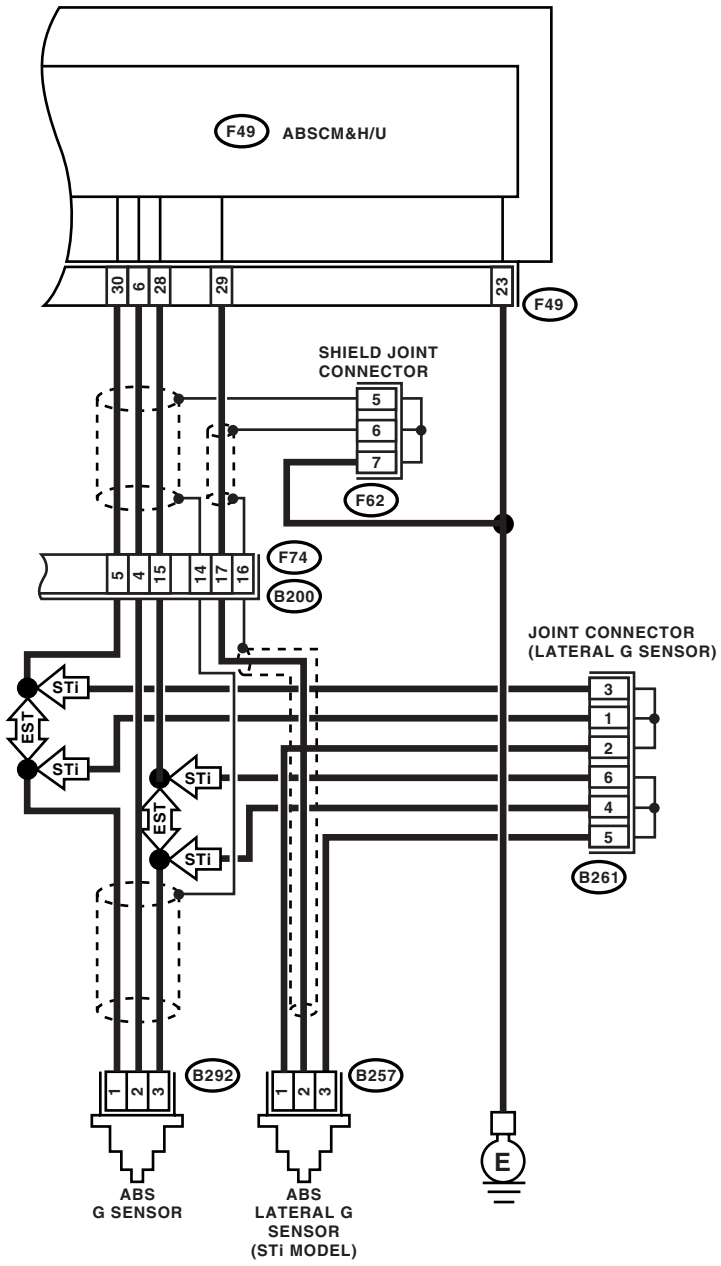

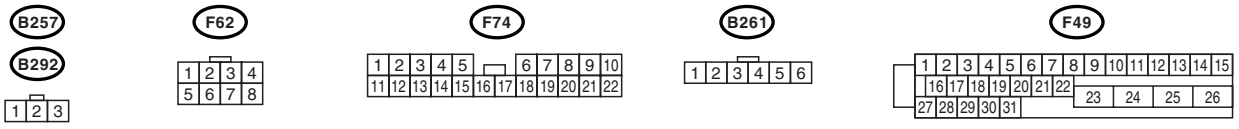

ABS00369

Step		Check	Yes	No
1	**CHECK OUTPUT OF LATERAL G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the lateral G sensor output in Subaru Select Monitor data display.	Is the voltage 2.3 — 2.7 V when lateral G sensor is in horizontal position?	Go to step **2.**	Go to step **5.**

	Step	Check	Yes	No
2	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
5	**CHECK FREEZE FRAME DATA.** 1)Select “Freeze frame data” on the Subaru Select Monitor. 2)Read front right wheel speed on the Subaru Select Monitor display.	Is the front right wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **6.**	Go to step **16.**
6	**CHECK FREEZE FRAME DATA.** Read front left wheel speed on the Subaru Select Monitor display.	Is the front left wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **7.**	Go to step **16.**
7	**CHECK FREEZE FRAME DATA.** Read rear right wheel speed on the Subaru Select Monitor display.	Is the rear right wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **8.**	Go to step **16.**
8	**CHECK FREEZE FRAME DATA.** Read rear left wheel speed on the Subaru Select Monitor display.	Is the rear left wheel speed on monitor display 0 km/h (0 MPH)?	Go to step **9.**	Go to step **16.**
9	**CHECK FREEZE FRAME DATA.** Read lateral G sensor output on the Subaru Select Monitor display.	Is the lateral G sensor output on monitor display more than 3.65 V?	Go to step **10.**	Go to step **16.**
10	**CHECK OPEN CIRCUIT IN LATERAL G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 29 — No. 28:*** ***RHD: (F49) No. 29 — No. 28:***	Is the resistance 4.3 — 4.9 kΩ?	Go to step **11.**	Repair the harness/connector between Lateral G sensor and ABSCM&H/U.
11	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Disconnect the connector from lateral G sensor. 4)Disconnect the connector from ABSCM&H/U. 5)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 29 (+) — Chassis ground (−):*** ***RHD: (F49) No. 29 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **12.**	Repair the harness between lateral G sensor and ABSCM&H/U.

	Step	Check	Yes	No
12	**CHECK BATTERY SHORT OF HARNESS.** 1)Turn the ignition switch to ON. 2)Measure the voltage between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 29 (+) — Chassis ground (−):*** ***RHD: (F49) No. 29 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **13.**	Repair the harness between lateral G sensor and ABSCM&H/U.
13	**CHECK POOR CONTACT IN CONNECTORS.**	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **14.**
14	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **15.**
15	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
16	**CHECK INPUT VOLTAGE OF LATERAL G SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the lateral G sensor from vehicle. (Do not disconnect connector.) 4)Turn the ignition switch to ON. 5)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 1 (+) — No. 3 (−):***	Is the voltage 4.75 — 5.25 V?	Go to step **17.**	Repair the harness/connector between Lateral G sensor and ABSCM&H/U.
17	**CHECK OPEN CIRCUIT IN LATERAL G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 29 — No. 28:*** ***RHD: (F49) No. 29 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **18.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
18	**CHECK LATERAL G SENSOR.** 1)Connect the connector to lateral G sensor. 2)Connect the connector to ABSCM&H/U. 3)Turn the ignition switch to ON. 4)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.5 V when lateral G sensor is in horizontal position?	Go to step **19.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
19	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 3.3 — 3.7 V when lateral G sensor is inclined right to 90°?	Go to step **20.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>

	Step	Check	Yes	No
20	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal (B257) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when lateral G sensor is inclined left to 90°?	Go to step **21.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
21	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **22.**
22	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **23.**
23	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AK:DTC 73
— ABNORMAL LATERAL G SENSOR HIGH μ OUTPUT —

DIAGNOSIS:

- Faulty Lateral G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

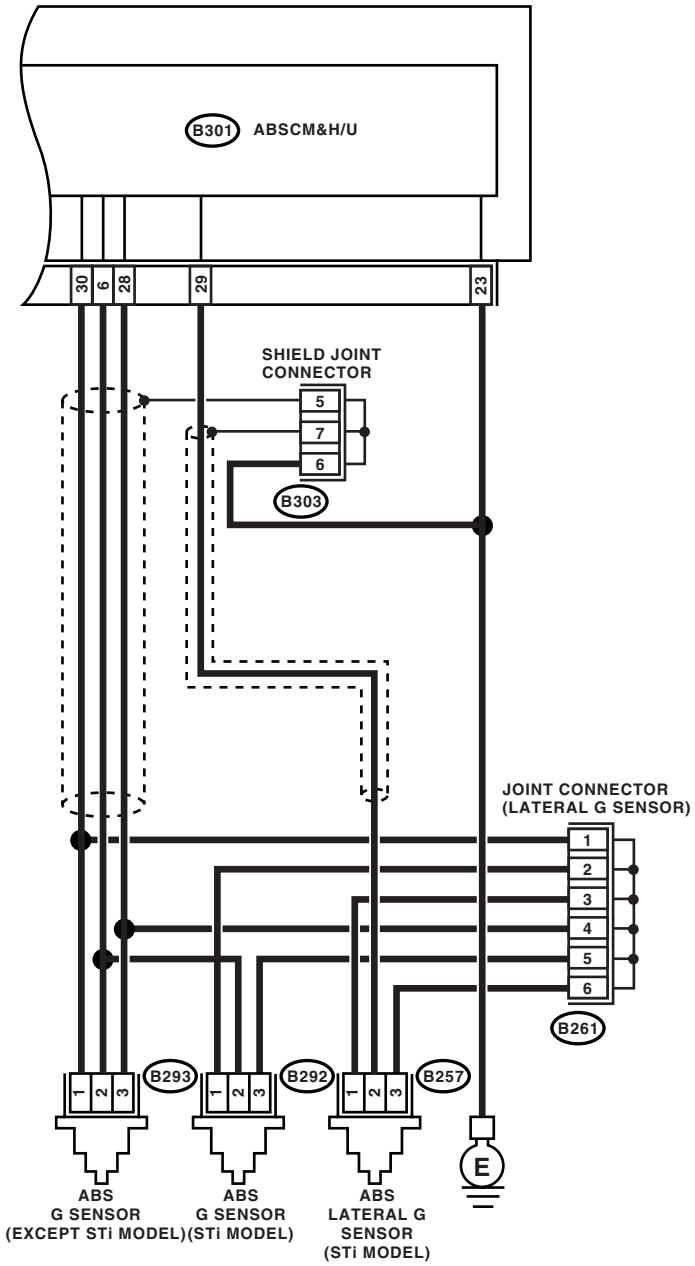

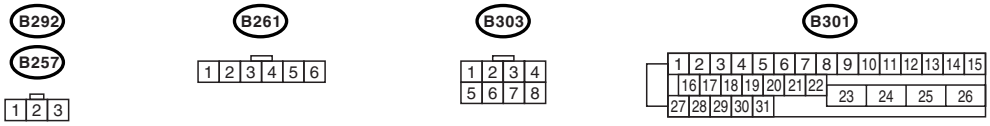

ABS00368

RHD MODEL

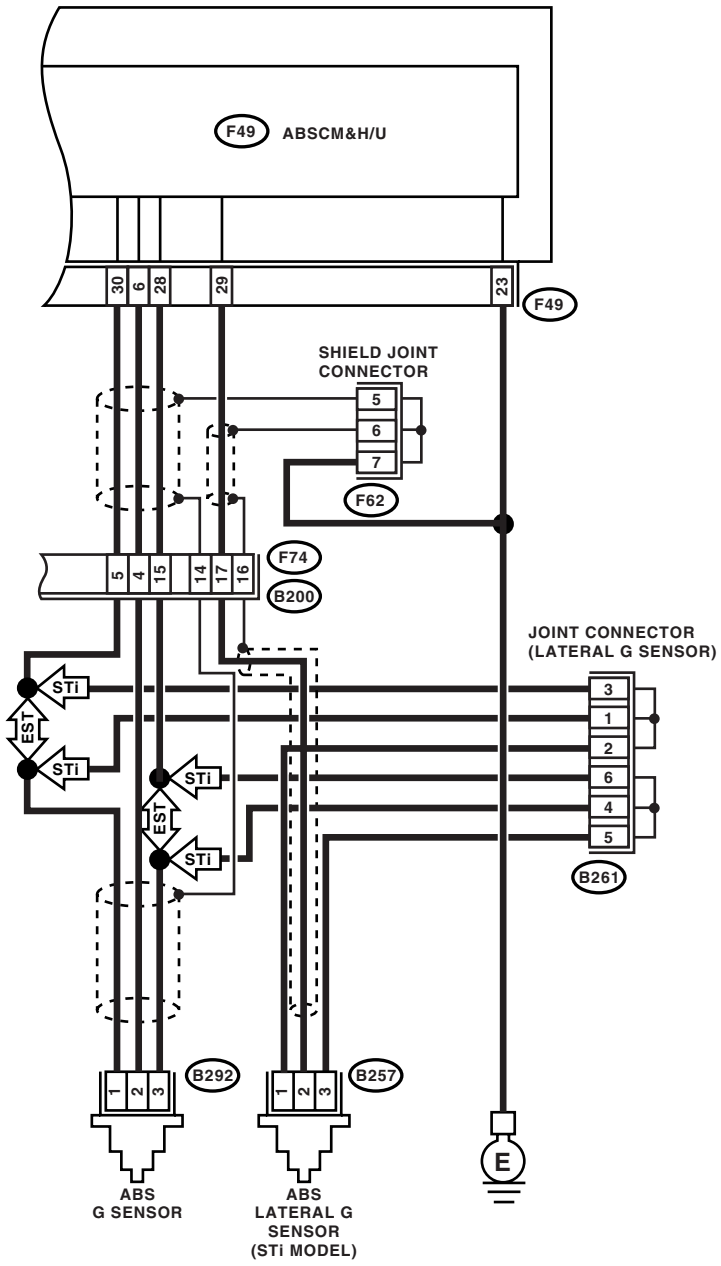

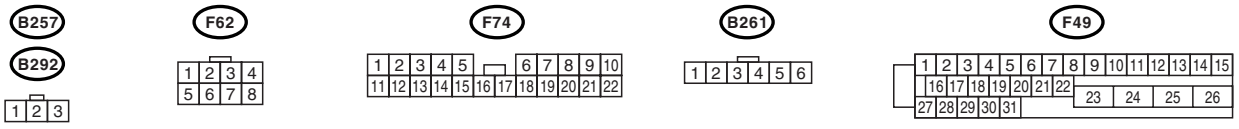

ABS00369

Step		Check	Yes	No
1	**CHECK OUTPUT OF LATERAL G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read Lateral G sensor output on the Subaru Select Monitor display.	Is the voltage 2.3 — 2.7 V when Lateral G sensor is in horizontal position?	Go to step **2.**	Go to step **6.**

	Step	Check	Yes	No
2	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **3.**
3	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **4.**
4	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
5	**CHECK OPEN CIRCUIT IN LATERAL G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 29 — No. 28:*** ***RHD: (F49) No. 29 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **6.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
6	**CHECK GROUND SHORT OF HARNESS.** Measure the resistance between ABSCM&H/U connector and chassis ground. ***Connector & terminal*** ***LHD: (B301) No. 28 — Chassis ground:*** ***RHD: (F49) No. 28 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the harness between lateral G sensor and ABSCM&H/U. Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>
7	**CHECK LATERAL G SENSOR.** 1)Remove the console box. 2)Remove the lateral G sensor from vehicle. 3)Connect the connector to lateral G sensor. 4)Connect the connector to ABSCM&H/U. 5)Turn the ignition switch to ON. 6)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.5 V when lateral G sensor is in horizontal position?	Go to step **8.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
8	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 3.3 — 3.7 V when lateral G sensor is inclined right to 90°?	Go to step **9.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
9	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when lateral G sensor is inclined left to 90°?	Go to step **10.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>

	Step	Check	Yes	No
10	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **11.**
11	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

AL:DTC 73
— DETECTION OF LATERAL G SENSOR STICK —

DIAGNOSIS:

- Faulty Lateral G sensor output voltage

TROUBLE SYMPTOM:

- ABS does not operate.

WIRING DIAGRAM:

LHD MODEL

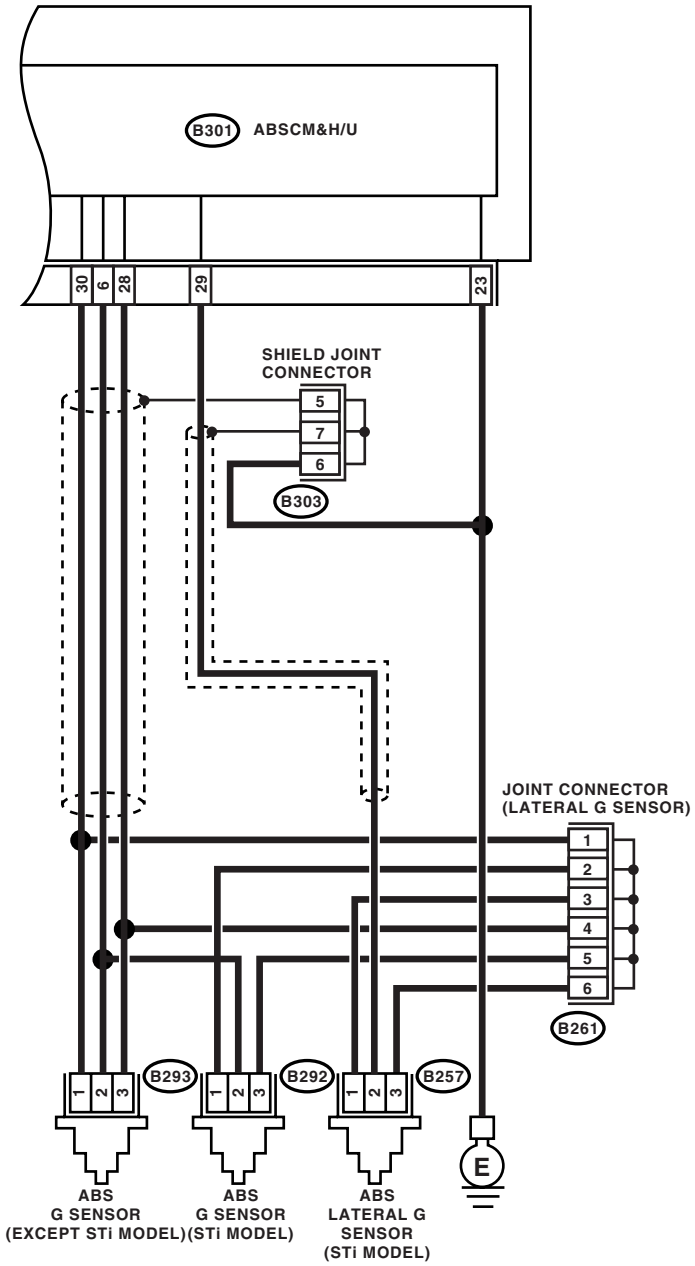

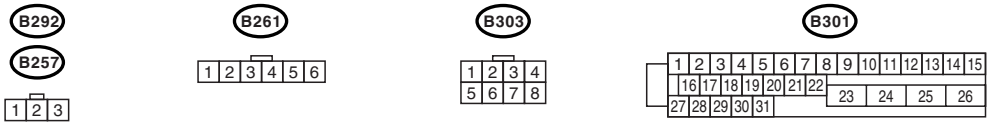

ABS00368

RHD MODEL

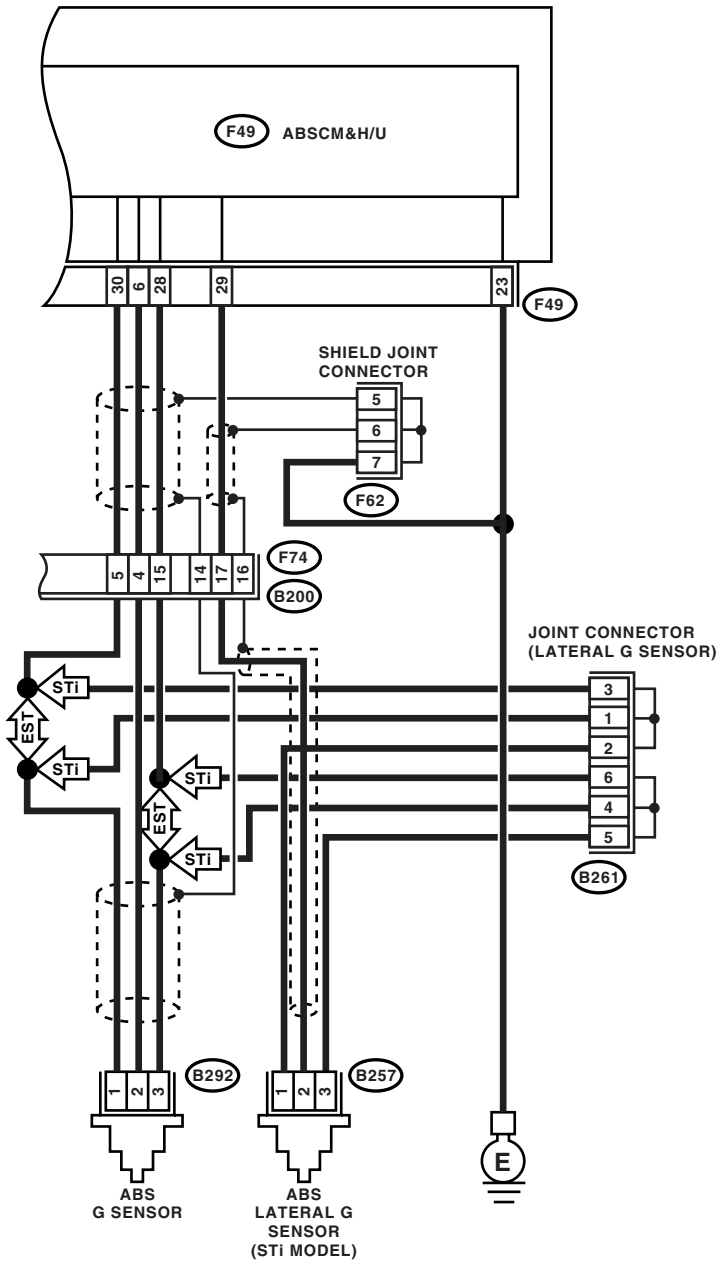

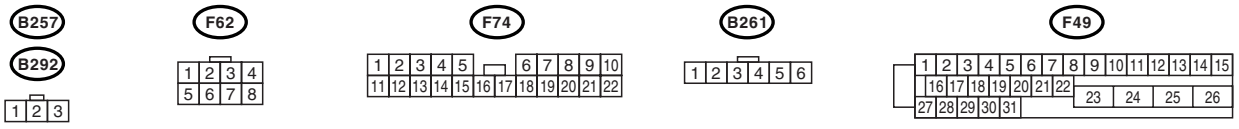

ABS00369

Step		Check	Yes	No
1	**CHECK ALL FOUR WHEELS FOR FREE TURNING.**	Have the wheels been turned freely such as when vehicle is lifted up, or operated on a rolling road?	The ABS is normal. Erase the DTC.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK OUTPUT OF LATERAL G SENSOR USING SUBARU SELECT MONITOR.** 1)Select “Current data display & Save” on the Subaru Select Monitor. 2)Read the Subaru Select Monitor display.	Is the lateral G sensor output on monitor display 2.3 — 2.7 V when the vehicle is in horizontal position?	Go to step **3.**	Go to step **8.**
3	**CHECK OUTPUT OF LATERAL G SENSOR USING SUBARU SELECT MONITOR.** 1)Turn the ignition switch to OFF. 2)Remove the console box. 3)Remove the lateral G sensor from vehicle. (Do not disconnect the connector.) 4)Turn the ignition switch to ON. 5)Select “Current data display & Save” on the Subaru Select Monitor. 6)Read the Subaru Select Monitor display.	Is the voltage 3.7 — 4.1 V when lateral G sensor is inclined right to 90°?	Go to step **4.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
4	**CHECK OUTPUT OF LATERAL G SENSOR USING SUBARU SELECT MONITOR.** Read the Subaru Select Monitor display.	Is the voltage 0.5 — 0.9 V when lateral G sensor is inclined left to 90°?	Go to step **5.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
5	**CHECK POOR CONTACT IN CONNECTORS.** Turn the ignition switch to OFF.	Is there poor contact in connector between ABSCM&H/U and lateral G sensor?	Repair the connector.	Go to step **6.**
6	**CHECK ABSCM&H/U.** 1)Connect all connectors. 2)Erase the memory. 3)Perform the inspection mode. 4)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **7.**
7	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.
8	**CHECK OPEN CIRCUIT IN LATERAL G SENSOR OUTPUT HARNESS AND GROUND HARNESS.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ABSCM&H/U. 3)Measure the resistance between ABSCM&H/U connector terminals. ***Connector & terminal*** ***LHD: (B301) No. 29 — No. 28:*** ***RHD: (F49) No. 29 — No. 28:***	Is the resistance 5.0 — 5.6 kΩ?	Go to step **9.**	Repair the harness/connector between lateral G sensor and ABSCM&H/U.
9	**CHECK LATERAL G SENSOR.** 1)Remove the console box. 2)Remove the lateral G sensor from vehicle. 3)Connect the connector to lateral G sensor. 4)Connect the connector to ABSCM&H/U. 5)Turn the ignition switch to ON. 6)Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 2.1 — 2.5 V when lateral G sensor is in horizontal position?	Go to step **10.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
10	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal*** ***(B257) No. 2 (+) — No. 3 (−):***	Is the voltage 3.3 — 3.7 V when lateral G sensor is inclined right to 90°?	Go to step **11.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>

	Step	Check	Yes	No
11	**CHECK LATERAL G SENSOR.** Measure the voltage between lateral G sensor connector terminals. ***Connector & terminal (B257) No. 2 (+) — No. 3 (−):***	Is the voltage 0.5 — 0.9 V when lateral G sensor is inclined left to 90°?	Go to step **12.**	Replace the lateral G sensor. <Ref. to ABS-23, Lateral G Sensor.>
12	**CHECK ABSCM&H/U.** 1)Turn the ignition switch to OFF. 2)Connect all connectors. 3)Erase the memory. 4)Perform the inspection mode. 5)Read out the DTC.	Is the same DTC as in current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step **13.**
13	**CHECK ANY OTHER DTC APPEARANCE.**	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.

14.General Diagnostics Table

A: INSPECTION

Symptom		Probable faulty units/parts
Vehicle instability during braking	Vehicle pulls to either side.	• ABSCM&H/U (solenoid valve) • ABS wheel speed sensor • Brake (caliper & piston, pads) • Wheel alignment • Tire specifications, tire wear and air pressures • Incorrect wiring or piping connections • Road surface (uneven, camber)
	Vehicle spins.	• ABSCM&H/U (solenoid valve) • ABS wheel speed sensor • Brake (pads) • Tire specifications, tire wear and air pressures • Incorrect wiring or piping connections
Poor braking	Long braking/stopping distance	• ABSCM&H/U (solenoid valve) • Brake (pads) • Air in brake line • Tire specifications, tire wear and air pressures • Incorrect wiring or piping connections
	Wheel locks.	• ABSCM&H/U (solenoid valve, motor) • ABS wheel speed sensor • Incorrect wiring or piping connections
	Brake dragging	• ABSCM&H/U (solenoid valve) • ABS wheel speed sensor • Master cylinder • Brake (caliper & piston) • Parking brake • Axle & wheels • Brake pedal play
	Long brake pedal stroke	• Air in brake line • Brake pedal play
	Vehicle pitching	• Suspension play or fatigue (reduced damping) • Incorrect wiring or piping connections • Road surface (uneven)
	Unstable or uneven braking	• ABSCM&H/U (solenoid valve) • ABS wheel speed sensor • Brake (caliper & piston, pads) • Tire specifications, tire wear and air pressures • Incorrect wiring or piping connections • Road surface (uneven)
Vibration and/or noise (while driving on slippery roads)	Excessive pedal vibration	• Incorrect wiring or piping connections • Road surface (uneven)
	Noise from ABSCM&H/U	• ABSCM&H/U (mount bushing) • ABS wheel speed sensor • Brake piping
	Noise from front of vehicle	• ABSCM&H/U (mount bushing) • ABS wheel speed sensor • Master cylinder • Brake (caliper & piston, pads, rotor) • Brake piping • Brake booster & check valve • Suspension play or fatigue
	Noise from rear of vehicle	• ABS wheel speed sensor • Brake (caliper & piston, pads, rotor) • Parking brake • Brake piping • Suspension play or fatigue

BRAKE

BR

		Page
1.	General Description	2
2.	Front Brake Pad	25
3.	Front Disc Rotor	29
4.	Front Disc Brake Assembly	31
5.	Rear Brake Pad	37
6.	Rear Disc Rotor	40
7.	Rear Disc Brake Assembly	42
8.	Rear Drum Brake Shoe	47
9.	Rear Drum Brake Drum	49
10.	Rear Drum Brake Assembly	50
11.	Master Cylinder	53
12.	Brake Booster	55
13.	Proportioning Valve	60
14.	Brake Fluid	61
15.	Air Bleeding	63
16.	Brake Hose	65
17.	Brake Pipe	67
18.	Brake Pedal	68
19.	Stop Light Switch	73
20.	Hill Holder	75
21.	General Diagnostics	78

1. General Description

A: SPECIFICATIONS

Model		BASE, TS	GX, RS, OBK	WRX	STi
Front disc brake	Size	14 inch type	15 inch type	16 inch type	17 inch type
	Type	Disc (Floating type, ventilated)		Disc (Fixed type, ventilated)	
	Effective disc diameter	210 mm (8.27 in)	228 mm (8.98 in)	255 mm (10.04 in)	268 mm (10.55 in)
	Disc thickness × Outer diameter	24 × 260 mm (0.94 × 10.24 in)	24 × 277 mm (0.94 × 10.91 in)	24 × 294 mm (0.94 × 11.57 in)	30 × 326 mm (1.18 × 12.83 in)
	Effective cylinder diameter	57.2 mm (2.252 in)	42.8 mm (1.685 in) × 2	40.4 mm (1.591 in) × 4	40.0 mm × 2, 46.0 mm × 2 (1.575 in × 2, 1.811 in × 2)
	Pad dimensions (length × width × thickness)	115.0 × 44.3 × 11.0 mm (4.528 × 1.744 × 0.433 in)	117.8 × 50.5 × 11.0 mm (4.638 × 1.988 × 0.433 in)	116.0 × 47.7 × 10.0 mm (4.567 × 1.878 × 0.394 in)	129.8 × 60.5 × 9.2 mm (5.110 × 2.382 × 0.362 in)
	Clearance adjustment	Automatic adjustment			
Rear disc brake	Size	—	14 inch type	15 inch type	17 inch type
	Type	—	Disc (Floating type)	Disc (Fixed type, ventilated)	
	Effective disc diameter	—	230 mm (9.06 in)	261 mm (10.28 in)	268 mm (10.55 in)
	Disc thickness × Outer diameter	—	10 × 266 mm (0.39 × 10.47 in)	18 × 290 mm (0.71 × 11.42 in)	20 × 316 mm (0.79 × 12.44 in)
	Effective cylinder diameter	—	38.1 mm (1.500 in)		36.0 mm (1.417 in)
	Pad dimensions (length × width × thickness)	—	89.4 × 33.7 × 9.0 mm (3.520 × 1.327 × 0.354 in)	71.8 × 35.0 × 11.5 mm (2.827 × 1.378 × 0.453 in)	74.8 × 45.0 × 9.0 mm (2.945 × 1.772 × 0.354 in)
	Clearance adjustment	—	Automatic adjustment		
Rear drum brake	Type	Drum (Leading-Trailing type)	—	—	—
	Effective drum diameter	228.6 mm (9 in)	—	—	—
	Effective cylinder diameter	17.5 mm (0.689 in)	—	—	—
	Lining dimensions (length × width × thickness)	218.8 × 35.0 × 4.1 mm (8.61 × 1.378 × 0.161 in)	—	—	—
	Clearance adjustment	Automatic adjustment	—	—	—
Master cylinder	Type	Tandem			
	Effective diameter	23.81 mm (0.9374 in) [25.4 mm (1 in)]	26.99 mm (1-1/16 in)		
	Reservoir type	Sealed type			
	Brake fluid reservoir capacity	205 cm^3 (12.51 cu in)			
Brake booster	Type	Vacuum suspended			
	Effective diameter	230 mm (9.06 in) [180 + 205 mm (7.09 + 8.07 in)]	205 + 230 mm (8.07 + 9.06 in)		

Model		BASE, TS	GX, RS, OBK	WRX	STi
Proportioning valve	Split point	1,961 kPa (20 kg/cm^2, 285 psi)	—		
	Reduce ratio	0.4	—		
Brake line		Dual circuit system			
Brake fluid **CAUTION:** **• Avoid mixing brake fluid of different brands to prevent the fluid performance from degrading.** **• When brake fluid is supplemented, be careful not to allow any dust into the reservoir.** **• Use fresh DOT3 brake fluid when replacing or refilling the fluid.**		FMVSS No. 116, DOT3			

[ ]: Model with ABS.

NOTE:
Refer to “PB section” for parking brake SPECIFICATIONS. <Ref. to PB-2, SPECIFICATIONS, General Description.>

ITEM			STANDARD	SERVICE LIMIT
Front brake	Pad thickness	14″, 15″	11 mm (0.43 in)	1.5 mm (0.059 in)
		16″	10 mm (0.39 in)	1.5 mm (0.059 in)
		17″	9.2 mm (0.362 in)	1.2 mm (0.047 in)
	Disc thickness	Except 17″	24 mm (0.94 in)	22 mm (0.87 in)
		17″	30 mm (1.18 in)	28 mm (1.10 in)
	Disc runout		—	0.075 mm (0.0030 in)
Rear brake (Disc type)	Pad thickness	14″	9.0 mm (0.354 in)	1.5 mm (0.059 in)
		15″	11.5 mm (0.452 in)	1.5 mm (0.059 in)
		17″	9.0 mm (0.354 in)	1.2 mm (0.047 in)
	Disc thickness	14″	10 mm (0.39 in)	8.5 mm (0.335 in)
		15″	18 mm (0.71 in)	16 mm (0.63 in)
		17″	20 mm (0.79 in)	18 mm (0.71 in)
	Disc runout		—	0.07 mm (0.0028 in)
Rear brake (Drum type)	Inside diameter		228.6 mm (9 in)	230.6 mm (9.08 in)
	Lining thickness		4.1 mm (0.161 in)	1.5 mm (0.059 in)
Rear brake (Disc type parking)	Inside diameter		170 mm (6.69 in)	171 mm (6.73 in)
	Lining thickness		3.2 mm (0.126 in)	1.5 mm (0.059 in)
Parking brake	Lever stroke		7 to 8 notches/196 N (20 kgf, 44 lb)	

		Brake pedal force	Fluid pressure				
			BASE, TS		GX, RS, OBK	WRX	STi
			Without ABS	With ABS			
Brake booster	Brake fluid pressure without engine running	147 N (15 kgf, 33 lb)	686 kPa (7 kg/cm^2, 100 psi)	588 kPa (6 kg/cm^2, 85 psi)	588 kPa (6 kg/cm^2, 85 psi)		
		294 N (30 kgf, 66 lb)	1,961 kPa (20 kg/cm^2, 284 psi)	1,667 kPa (17 kg/cm^2, 242 psi)	1,471 kPa (15 kg/cm^2, 213 psi)		
	Brake fluid pressure with engine running and vacuum at 66.7 kPa (500 mmHg, 19.69 inHg)	147 N (15 kgf, 33 lb)	5,982 kPa (61 kg/cm^2, 868 psi)	5,982 kPa (61 kg/cm^2, 868 psi)	5,296 kPa (54 kg/cm^2, 768 psi)	4,707 kPa (48 kg/cm^2, 683 psi)	4,021 kPa (41 kg/cm^2, 583 psi)
		294 N (30 kgf, 66 lb)	7,649 kPa (78 kg/cm^2, 1,109 psi)	8,434 kPa (86 kg/cm^2, 1,223 psi)	9,120 kPa (93 kg/cm^2, 1,323 psi)		8,336 kPa (85 kg/cm^2, 1,209 psi)

Brake pedal	Free play	1 — 3 mm (0.04 — 0.12 in) [Depress brake pedal pad with a force of less than 10 N (1 kgf, 2 lb).]

B: COMPONENT

1. FRONT DISC BRAKE

• 14 INCH TYPE

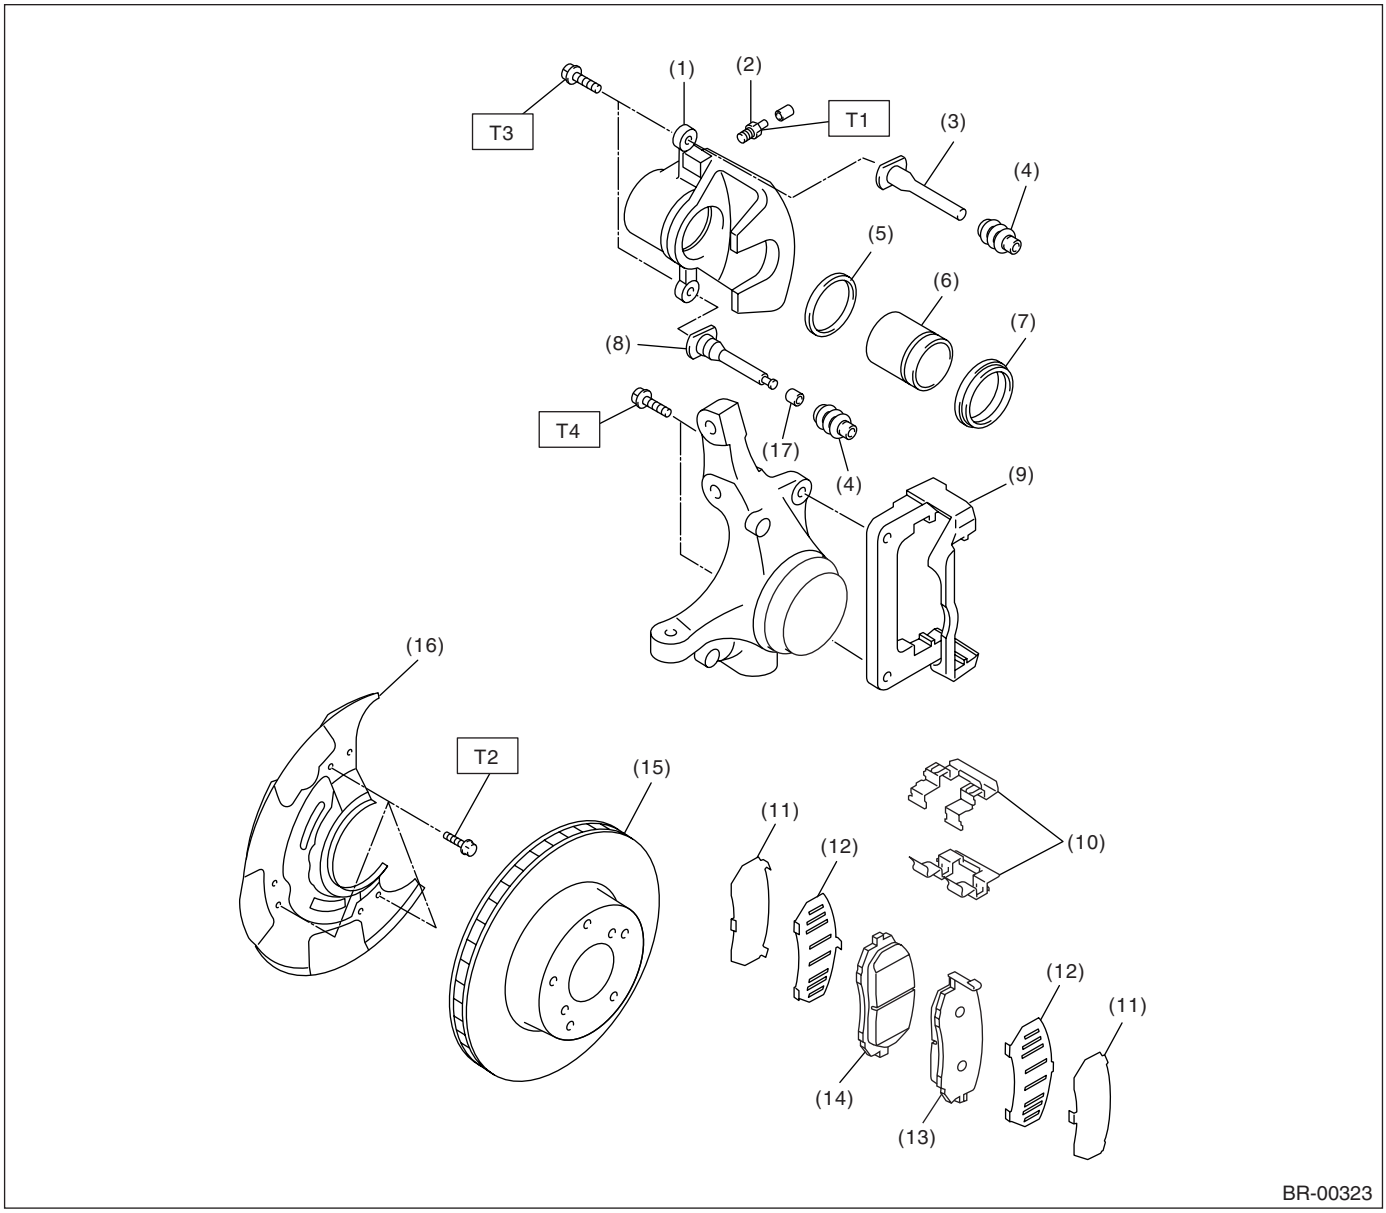

(1)	Caliper body	(9)	Support	(17)	Bushing
(2)	Air bleeder screw	(10)	Pad clip		
(3)	Guide pin (Green)	(11)	Outer shim	***Tightening torque: N·m (kgf-m, ft-lb)***	
(4)	Pin boot	(12)	Inner shim	***T1:***	***8 (0.8, 5.8)***
(5)	Piston seal	(13)	Pad (Outside)	***T2:***	***18 (1.8, 13.0)***
(6)	Piston	(14)	Pad (Inside)	***T3:***	***37 (3.8, 27.5)***
(7)	Piston boot	(15)	Disc rotor	***T4:***	***80 (8.2, 59)***
(8)	Lock pin (Yellow)	(16)	Disc cover		

• 15 INCH TYPE

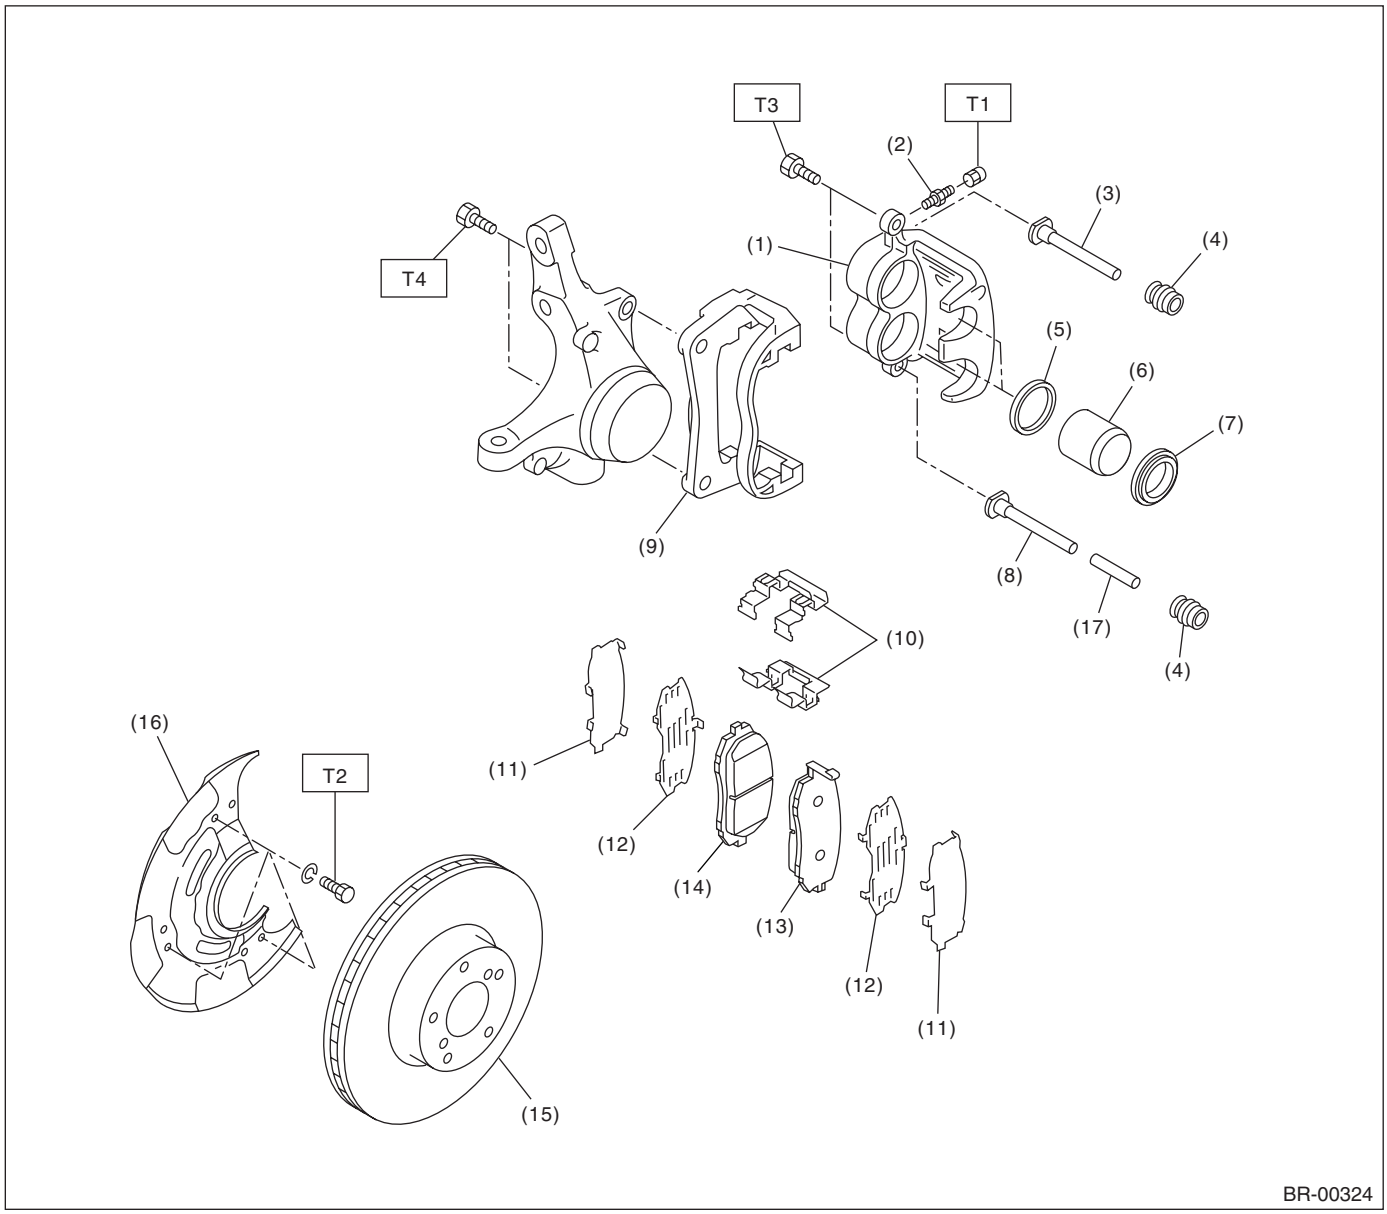

(1) Caliper body
(2) Air bleeder screw
(3) Guide pin (Green)
(4) Pin boot
(5) Piston seal
(6) Piston
(7) Piston boot
(8) Lock pin (Yellow)
(9) Support
(10) Pad clip
(11) Outer shim
(12) Inner shim
(13) Pad (Outside)
(14) Pad (Inside)
(15) Disc rotor
(16) Disc cover
(17) Bushing

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 27 (2.8, 19.9)
T3: 37 (3.8, 27.5)
T4: 80 (8.2, 59)

• 16 INCH TYPE

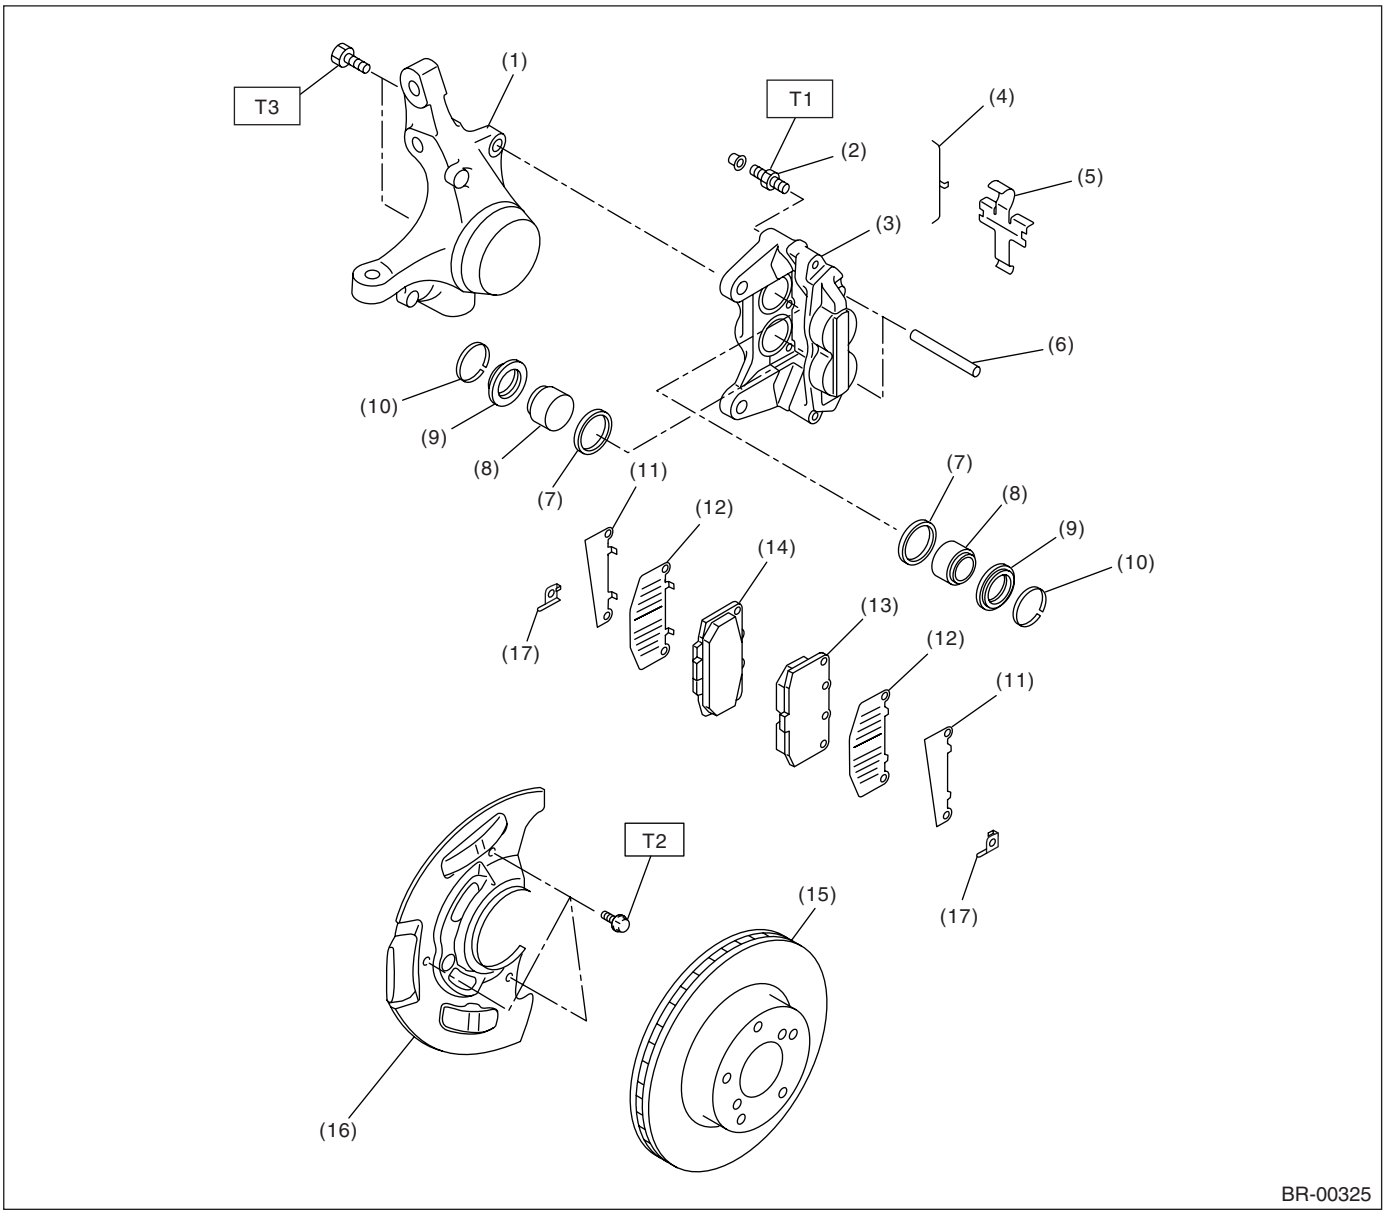

(1) Housing
(2) Air bleeder screw
(3) Caliper body
(4) M clip
(5) Cross spring
(6) Pad pin
(7) Piston seal
(8) Piston
(9) Piston boot
(10) Boot ring
(11) Outer shim
(12) Inner shim
(13) Pad (Outside)
(14) Pad (Inside)
(15) Disc rotor
(16) Disc cover
(17) Spacer

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 18 (1.8, 13.0)
T3: 80 (8.2, 59)

• 17 INCH TYPE

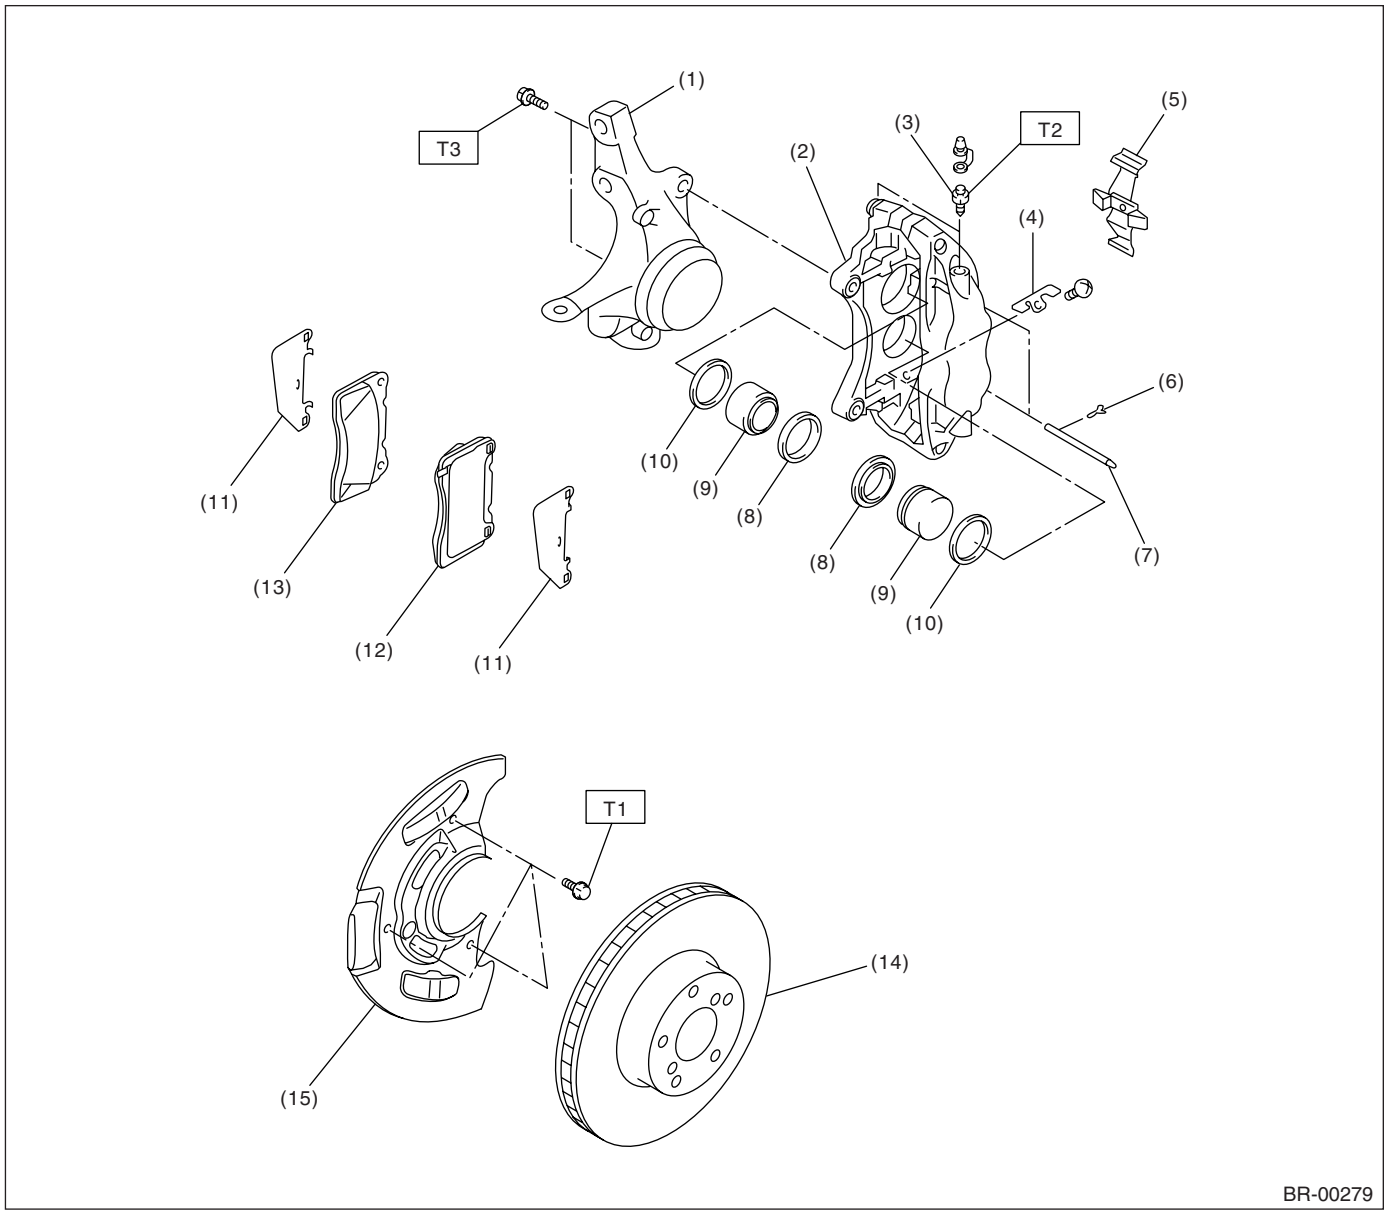

(1) Housing
(2) Caliper body
(3) Air bleeder screw
(4) Guide plate
(5) Cross spring
(6) Clip
(7) Pad pin
(8) Piston boot
(9) Piston
(10) Piston seal
(11) Pad shim
(12) Pad (Outside)
(13) Pad (Inside)
(14) Disc rotor
(15) Disc cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 18 (1.8, 13.0)
T2: 20 (2.0, 14.5)
T3: 155 (15.8, 114.3)

2. REAR DISC BRAKE

• 14 INCH TYPE

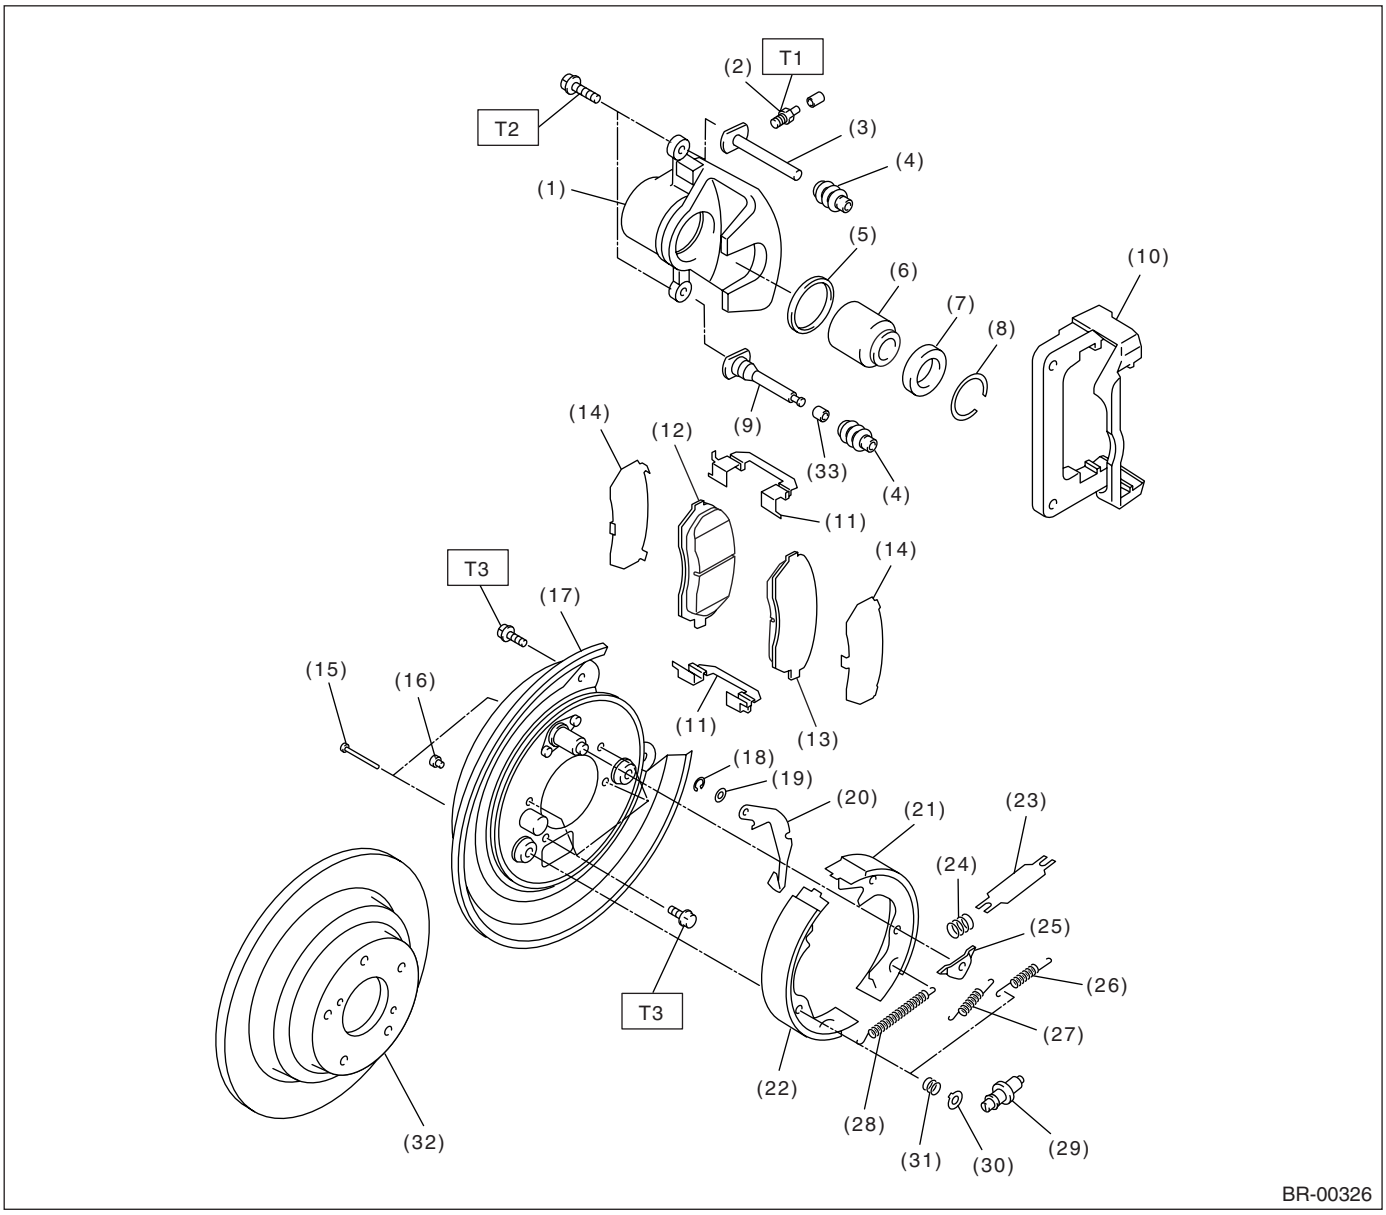

(1) Caliper body
(2) Air bleeder screw
(3) Guide pin (Green)
(4) Pin boot
(5) Piston seal
(6) Piston
(7) Piston boot
(8) Boot ring
(9) Lock pin (Yellow)
(10) Support
(11) Pad clip
(12) Inner pad
(13) Outer pad
(14) Shim
(15) Shoe hold-down pin
(16) Cover
(17) Back plate
(18) Retainer
(19) Spring washer
(20) Parking brake lever
(21) Parking brake shoe (Secondary)
(22) Parking brake shoe (Primary)
(23) Strut
(24) Strut shoe spring
(25) Shoe guide plate
(26) Secondary shoe return spring
(27) Primary shoe return spring
(28) Adjusting spring
(29) Adjuster
(30) Shoe hold-down cup
(31) Shoe hold-down spring
(32) Disc rotor
(33) Bushing

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 37 (3.8, 27.5)
T3: 52 (5.3, 38.3)

• 15 INCH TYPE

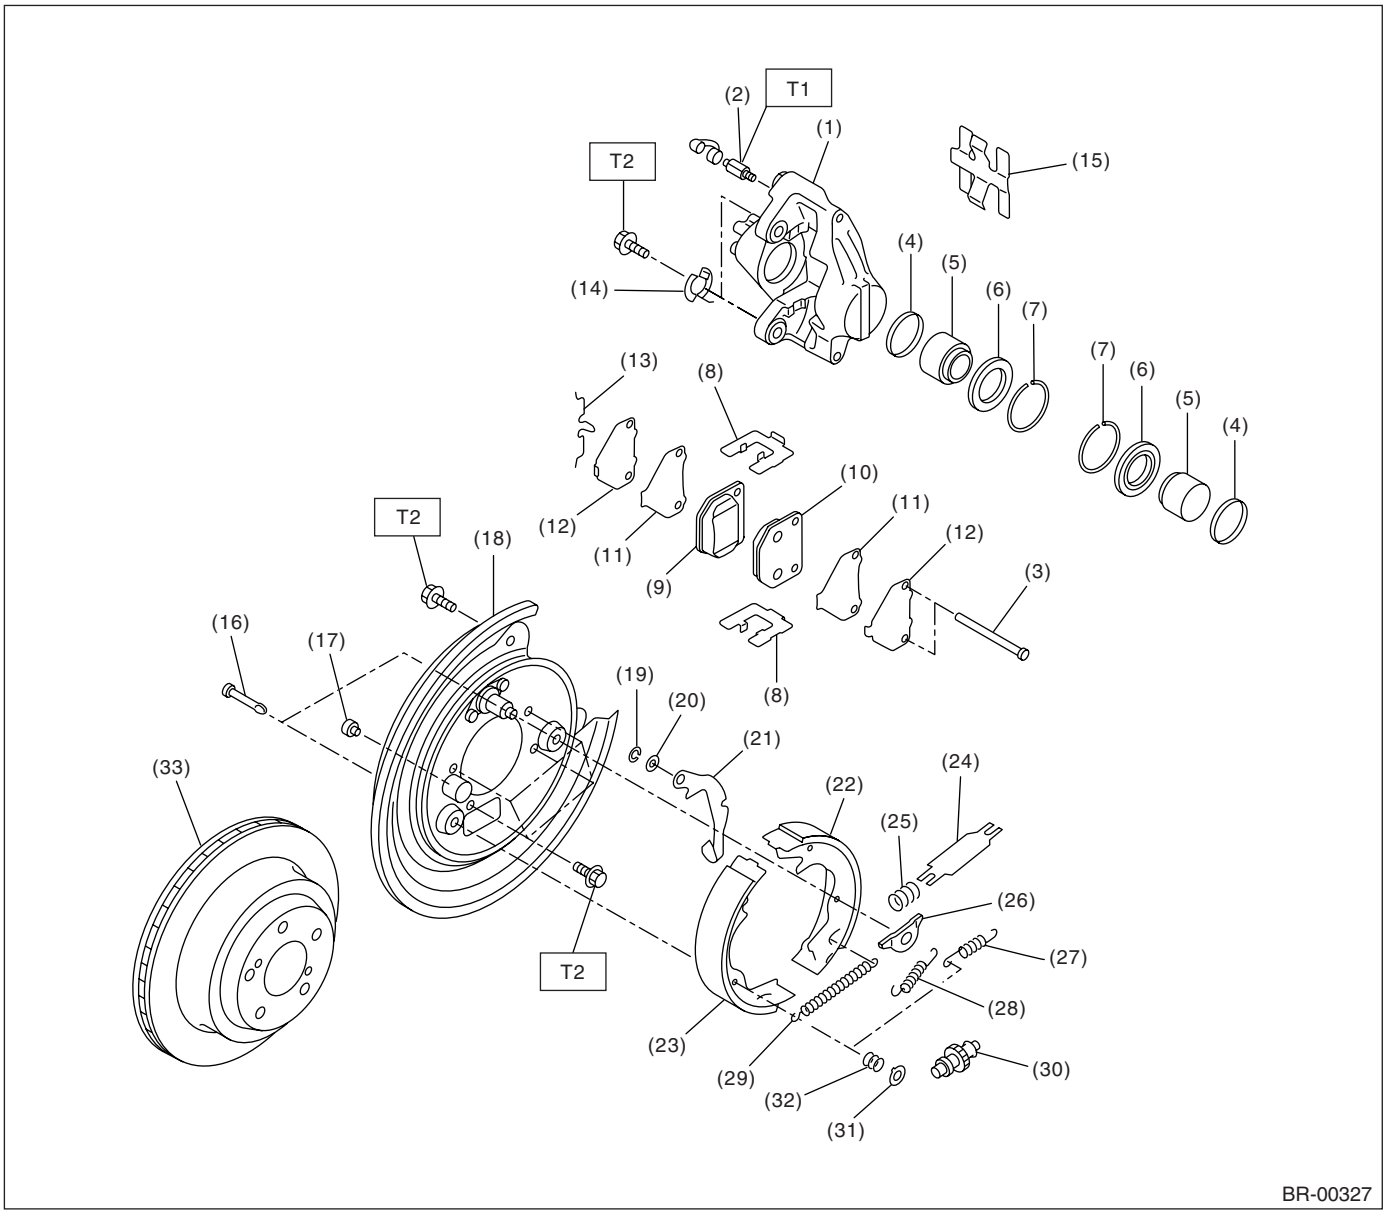

(1) Caliper body
(2) Air bleeder screw
(3) Pad pin
(4) Piston seal
(5) Piston
(6) Piston boot
(7) Boot ring
(8) Pad clip
(9) Inner pad
(10) Outer pad
(11) Inner shim
(12) Outer shim
(13) M clip
(14) Washer
(15) Cross spring
(16) Shoe hold-down pin
(17) Cover
(18) Back plate
(19) Retainer
(20) Spring washer
(21) Parking brake lever
(22) Parking brake shoe (Secondary)
(23) Parking brake shoe (Primary)
(24) Strut
(25) Strut shoe spring
(26) Shoe guide plate
(27) Secondary shoe return spring
(28) Primary shoe return spring
(29) Adjusting spring
(30) Adjuster
(31) Shoe hold-down cup
(32) Shoe hold-down spring
(33) Disc rotor

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 52 (5.3, 38.3)

• 17 INCH TYPE

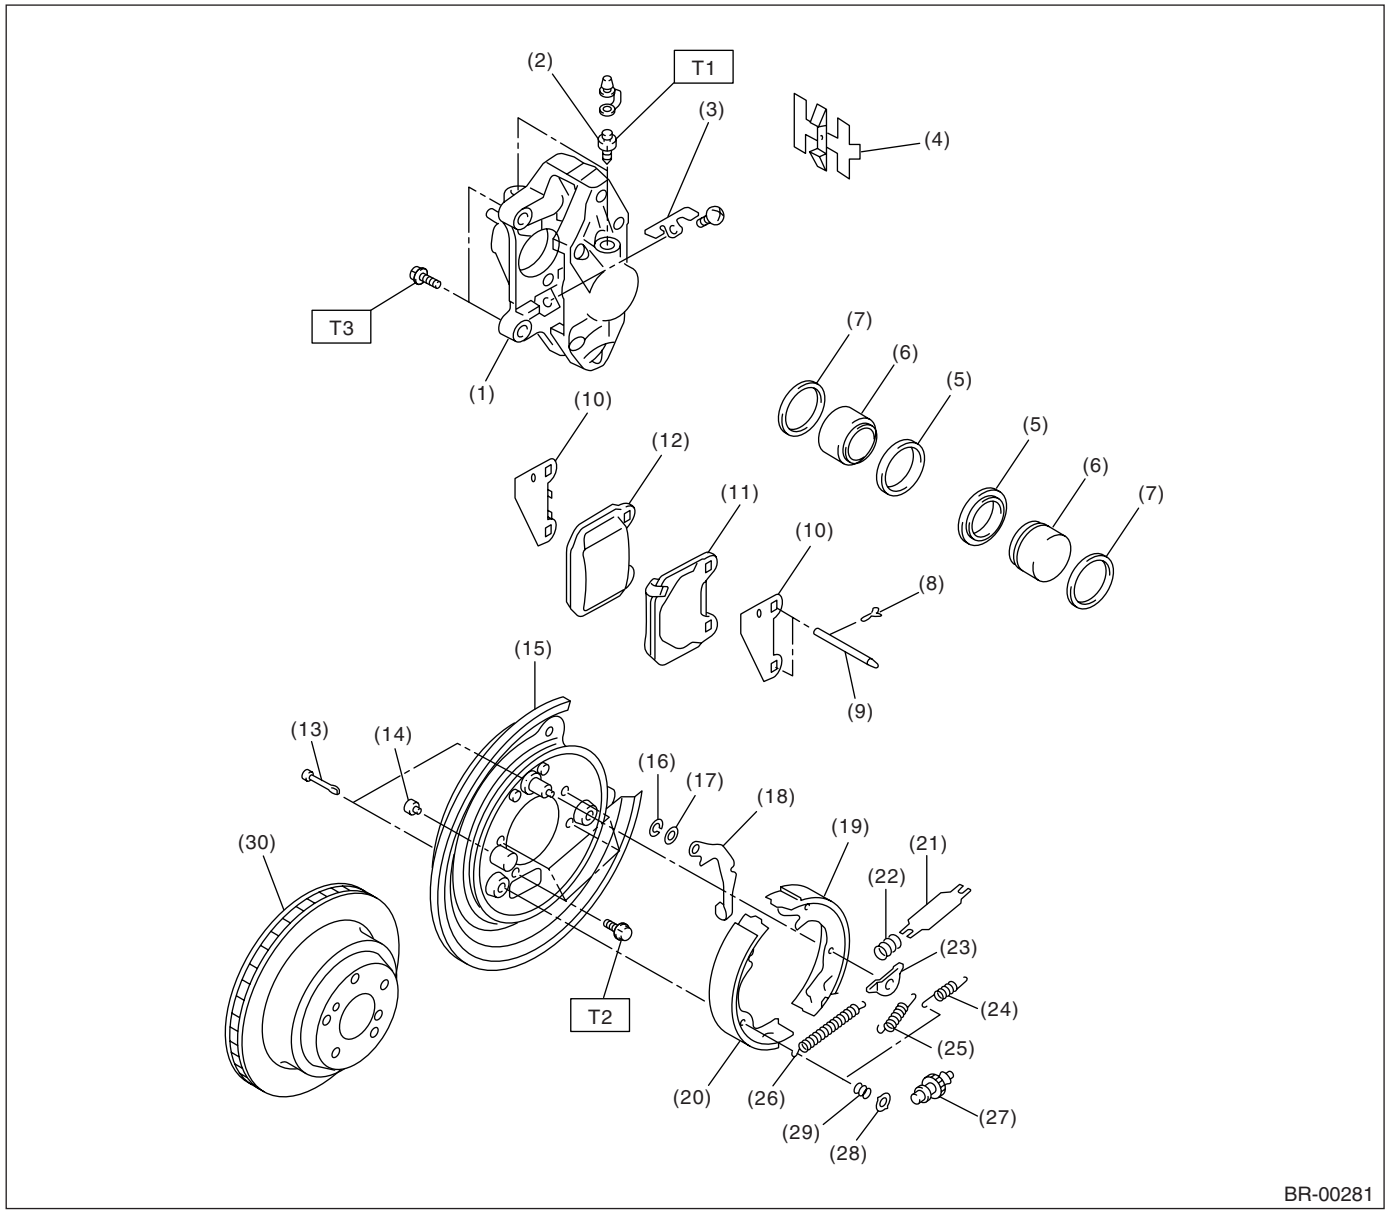

(1) Caliper body
(2) Air bleeder screw
(3) Guide plate
(4) Cross spring
(5) Piston boot
(6) Piston
(7) Piston seal
(8) Clip
(9) Pad pin
(10) Pad shim
(11) Pad (Outside)
(12) Pad (Inside)
(13) Shoe hold-down pin
(14) Cover
(15) Back plate
(16) Retainer
(17) Spring washer
(18) Parking brake lever
(19) Parking brake shoe (Secondary)
(20) Parking brake shoe (Primary)
(21) Strut
(22) Strut shoe spring
(23) Shoe guide plate
(24) Secondary shoe return spring
(25) Primary shoe return spring
(26) Adjusting spring
(27) Adjuster
(28) Shoe hold-down cup
(29) Shoe hold-down spring
(30) Disc rotor

Tightening torque: N·m (kgf-m, ft-lb)
T1: 20 (2.0, 14.5)
T2: 52 (5.3, 38.3)
T3: 65 (6.6, 47.9)

3. REAR DRUM BRAKE

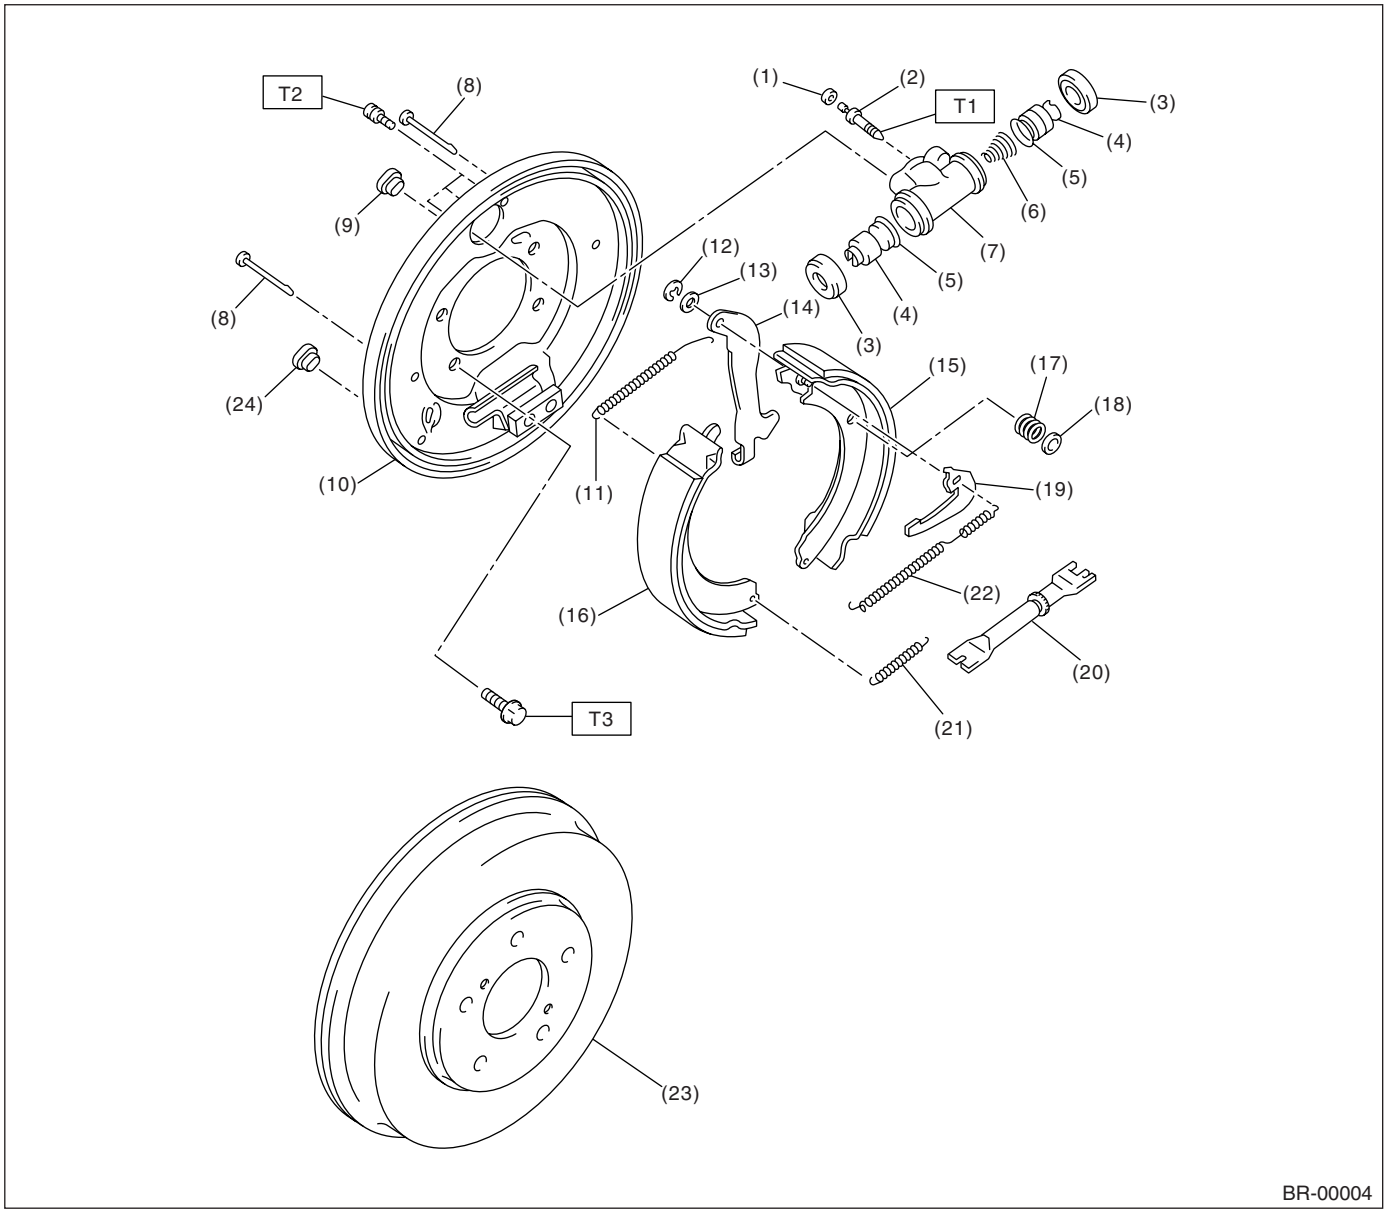

(1) Air bleeder cap
(2) Air bleeder screw
(3) Boot
(4) Piston
(5) Cup
(6) Spring
(7) Wheel cylinder body
(8) Pin
(9) Plug
(10) Back plate
(11) Upper shoe return spring
(12) Retainer
(13) Washer
(14) Parking brake lever
(15) Brake shoe (Trailing)
(16) Brake shoe (Leading)
(17) Shoe hold-down spring
(18) Cup
(19) Adjusting lever
(20) Adjuster
(21) Lower shoe return spring
(22) Adjusting spring
(23) Drum
(24) Plug

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 10 (1.0, 7.2)
T3: 52 (5.3, 38.3)

4. MASTER CYLINDER

• LHD MODEL

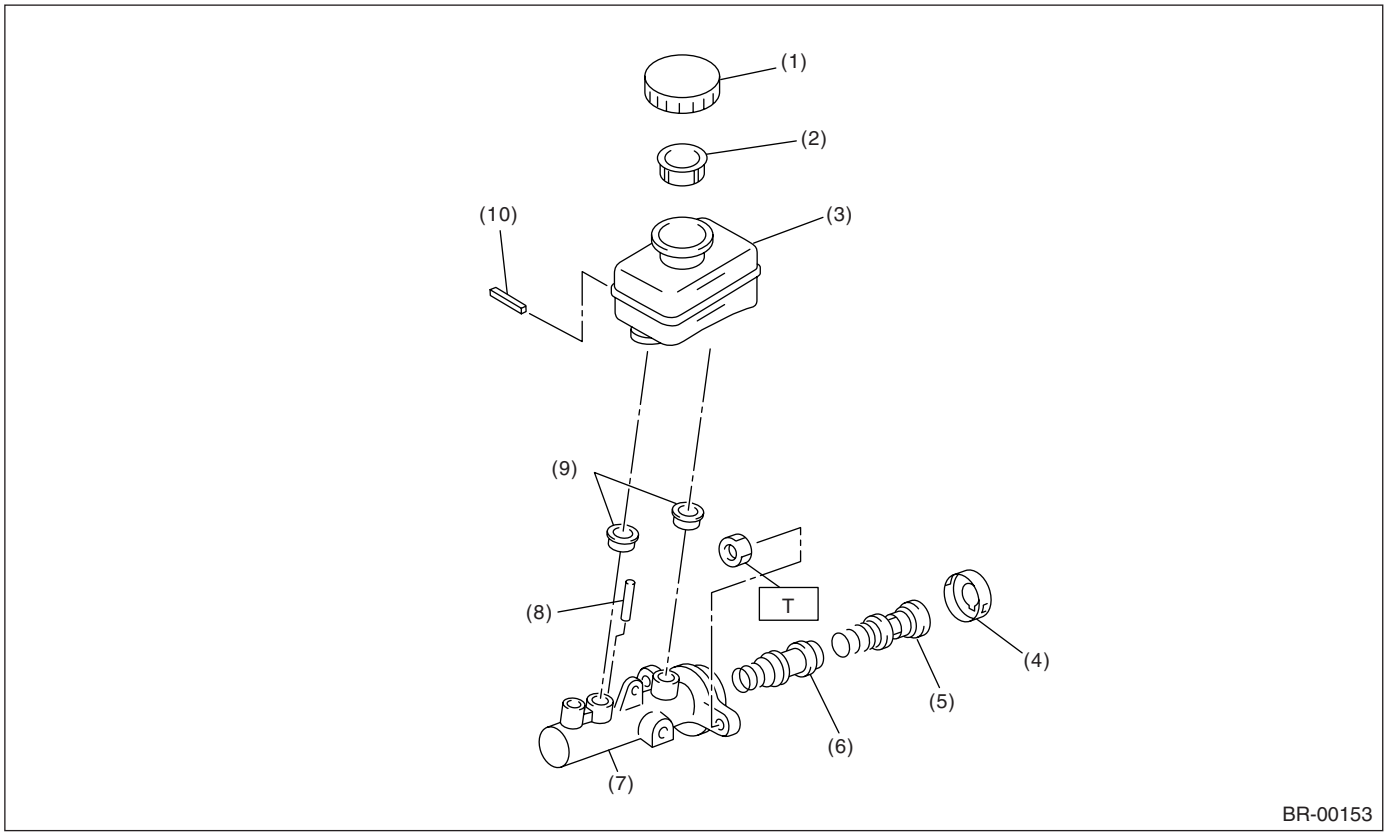

(1) Cap
(2) Filter
(3) Reservoir tank
(4) Piston retainer
(5) Primary piston
(6) Secondary piston
(7) Cylinder body
(8) Cylinder pin
(9) Seal
(10) Pin

Tightening torque: N·m (kgf-m, ft-lb)
T1: 15 (1.5, 10.8)

• RHD MODEL

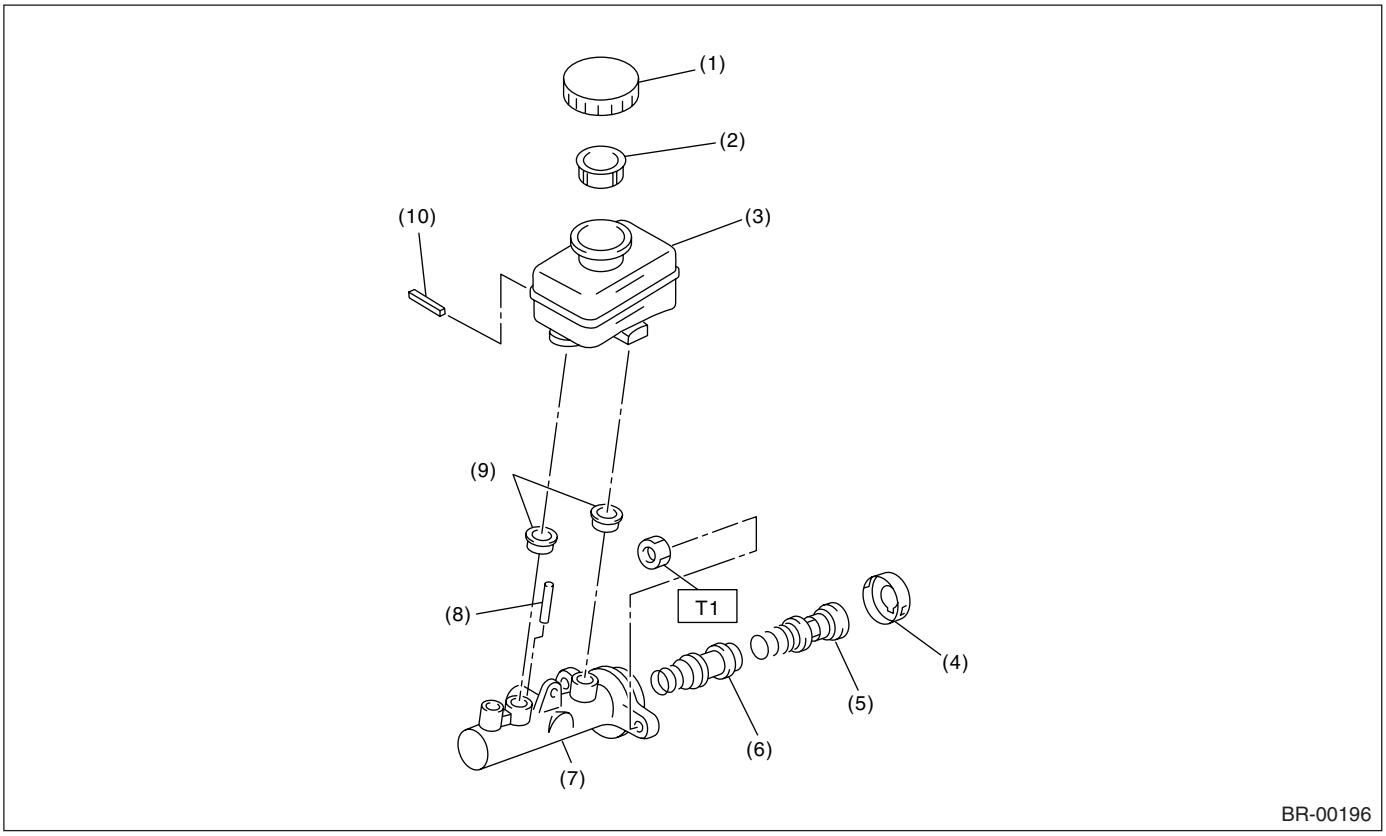

(1) Cap
(2) Filter
(3) Reservoir tank
(4) Piston retainer
(5) Primary piston
(6) Secondary piston
(7) Cylinder body
(8) Cylinder pin
(9) Seal
(10) Pin

Tightening torque: N·m (kgf-m, ft-lb)
T1: 15 (1.5, 10.8)

5. FRONT BRAKE PIPES AND HOSE

• LHD MODEL

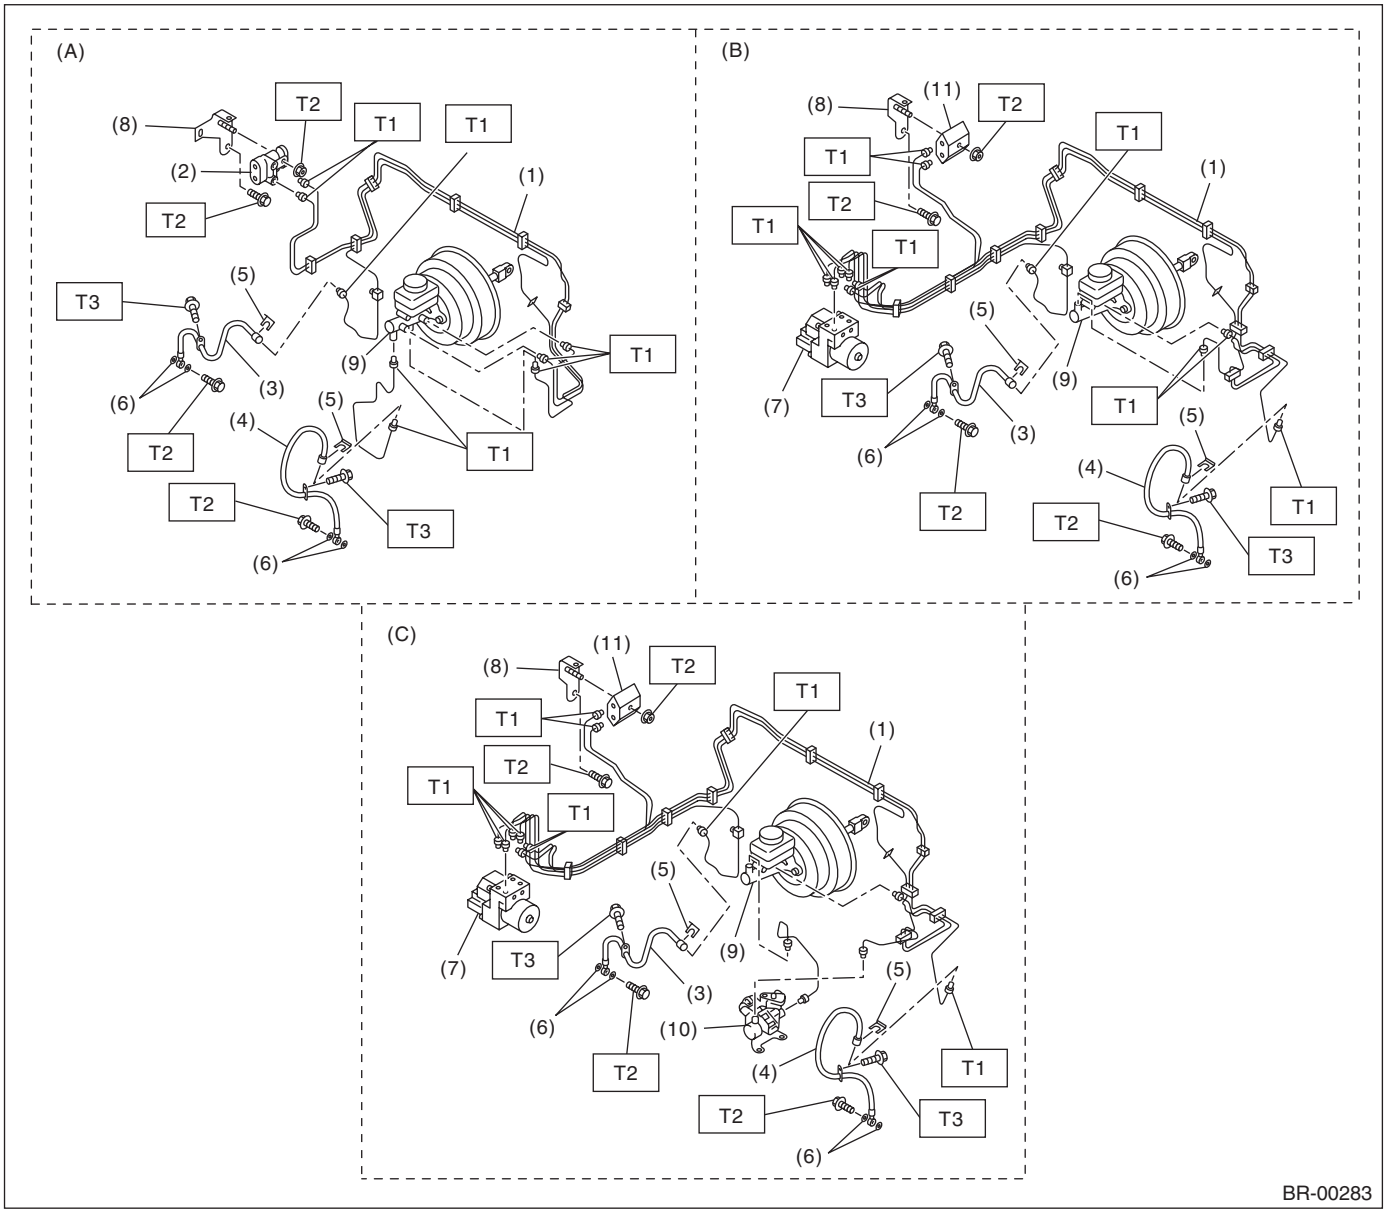

(A) Model without ABS
(B) Model with ABS
(C) Model with ABS (with hill holder)

(1) Front brake pipe assembly
(2) Proportioning valve
(3) Front brake hose RH
(4) Front brake hose LH
(5) Clamp
(6) Gasket
(7) ABS control module and hydraulic control unit (ABSCM & H/U)
(8) Bracket
(9) Master cylinder
(10) Hill holder
(11) Two-way connector

Tightening torque: N·m (kgf-m, ft-lb)
T1: 15 (1.5, 10.8)
T2: 18 (1.8, 13.0)
T3: 32 (3.3, 23.6)

• RHD MODEL

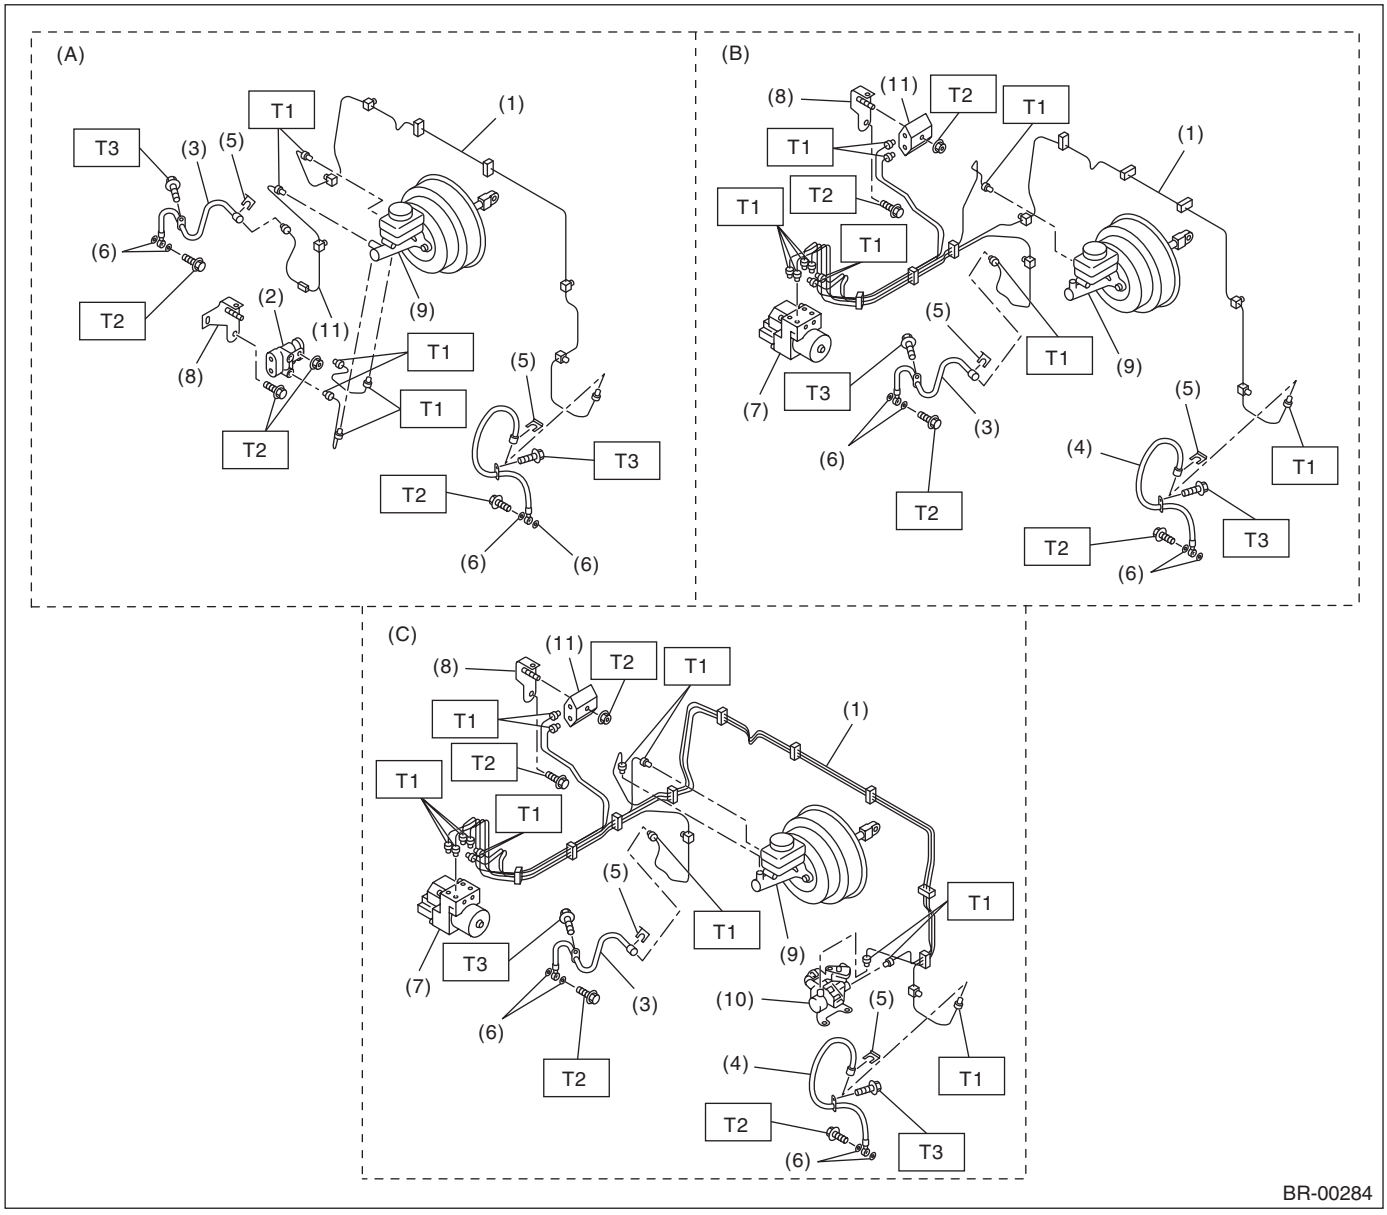

(A) Model without ABS
(B) Model with ABS
(C) Model with ABS (With hill holder)

(1) Front brake pipe assembly
(2) Proportioning valve
(3) Front brake hose RH
(4) Front brake hose LH
(5) Clamp
(6) Gasket
(7) ABS control module and hydraulic control unit (ABSCM & H/U)
(8) Bracket
(9) Master cylinder
(10) Hill holder
(11) Two-way connector

Tightening torque: N·m (kgf-m, ft-lb)
T1: 15 (1.5, 10.8)
T2: 18 (1.8, 13.0)
T3: 32 (3.3, 23.6)

6. CENTER AND REAR BRAKE PIPES AND HOSES

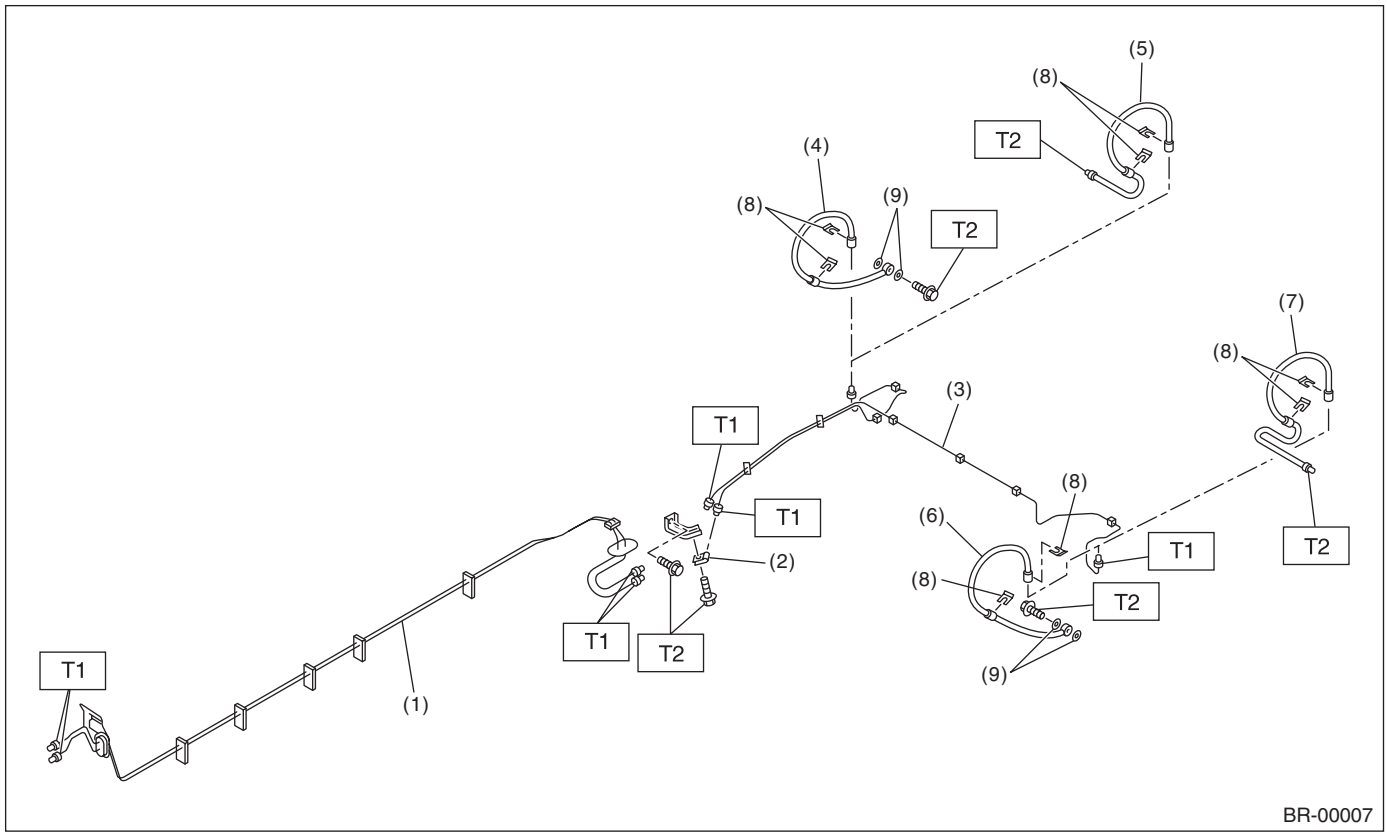

(1) Center brake pipe assembly
(2) Two-way connector
(3) Rear brake pipe assembly
(4) Rear brake hose RH (Disc brake model)
(5) Rear brake hose RH (Drum brake model)
(6) Rear brake hose LH (Disc brake model)
(7) Rear brake hose LH (Drum brake model)
(8) Clamp
(9) Gasket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 15 (1.5, 10.8)
T2: 18 (1.8, 13.0)

7. BRAKE BOOSTER

• MODEL With ABS

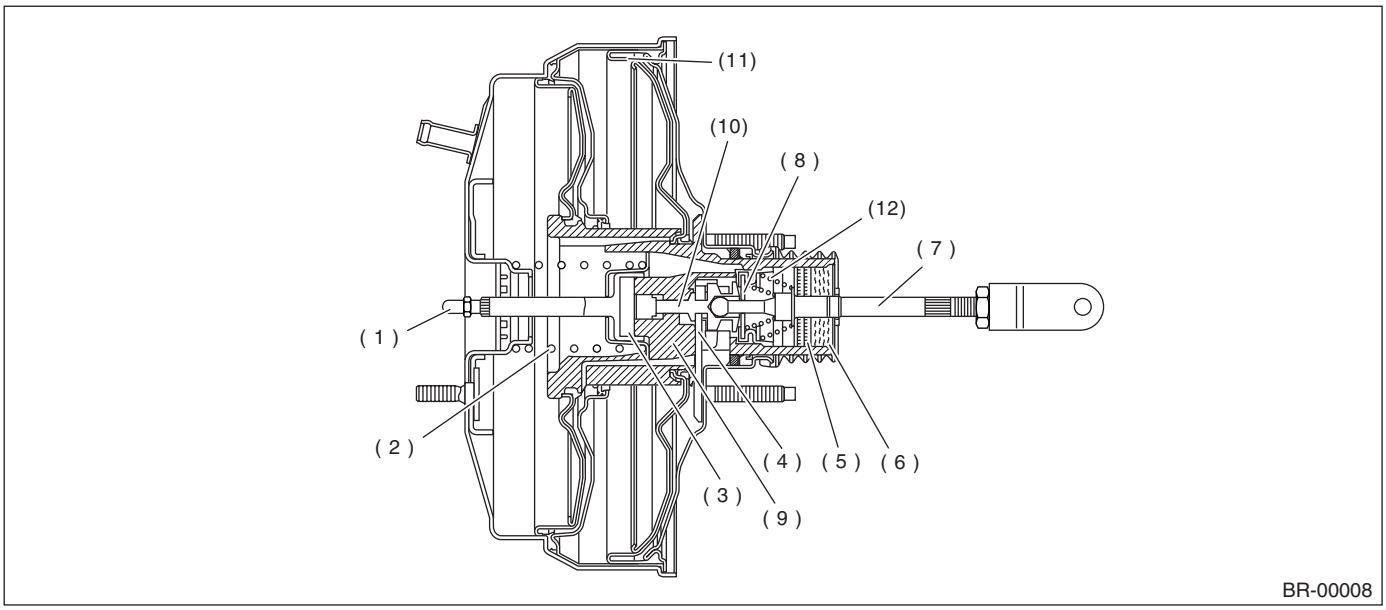

(1) Push rod
(2) Return spring
(3) Reaction disc
(4) Key
(5) Filter
(6) Silencer
(7) Operating rod
(8) Poppet valve
(9) Valve body
(10) Plunger valve
(11) Diaphragm plate
(12) Valve return spring

• MODEL Without ABS

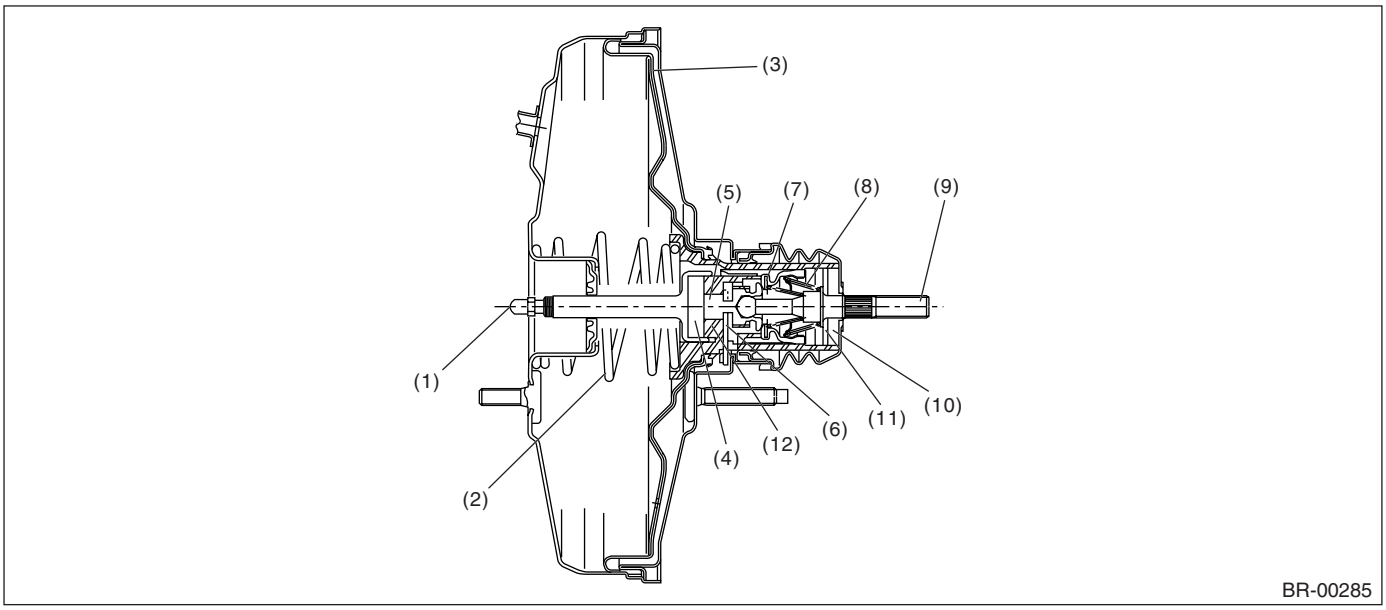

(1) Push rod
(2) Return spring
(3) Diaphragm plate
(4) Reaction disc
(5) Plunger valve
(6) Key
(7) Poppet valve
(8) Valve return spring
(9) Operating rod
(10) Silencer
(11) Filter
(12) Valve body

8. BRAKE PEDAL

• 1.6 L MODEL

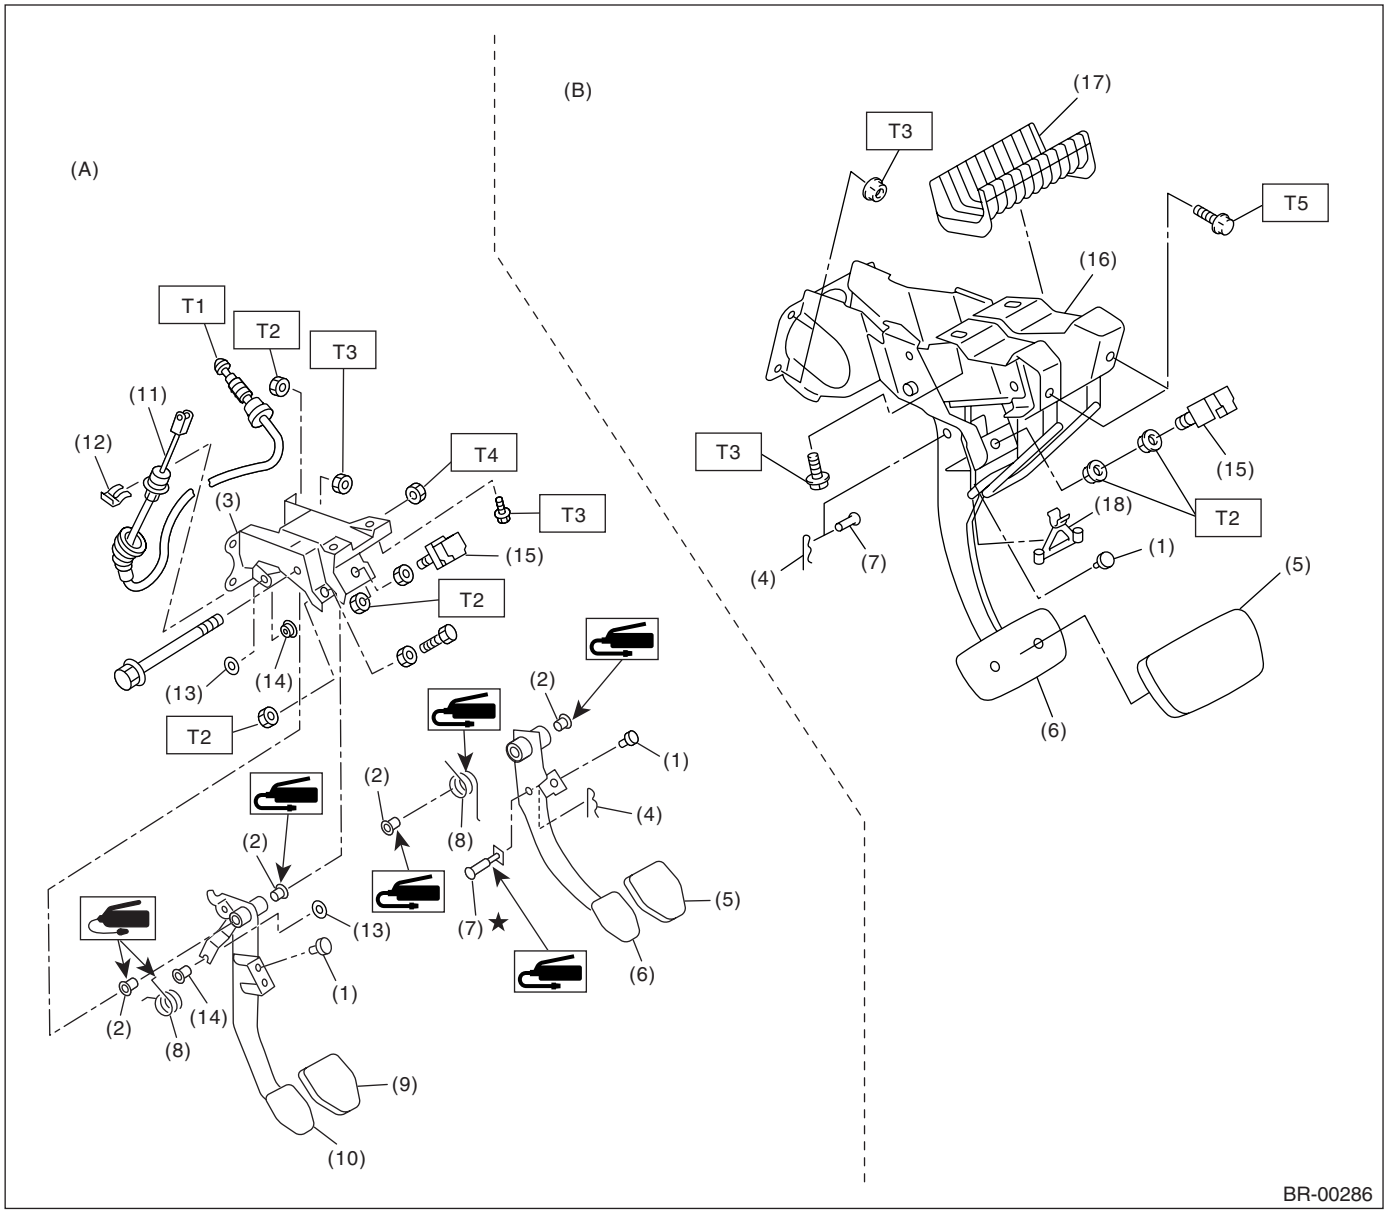

(A)	LHD	(B)	RHD

(1)	Stopper	(10)	Clutch pedal
(2)	Bushing	(11)	Clutch cable
(3)	Pedal bracket	(12)	Clutch cable clamp
(4)	Snap pin	(13)	Clip
(5)	Brake pedal pad	(14)	Spring assist
(6)	Brake pedal	(15)	Stop light switch
(7)	Clevis pin	(16)	Brake pedal bracket ASSY
(8)	Spring	(17)	Cover
(9)	Clutch pedal pad	(18)	Protector

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	*5.9 (0.6, 4.3)*
T2:	*8 (0.8, 5.8)*
T3:	*18 (1.8, 13.0)*
T4:	*30 (3.1, 22.4)*
T5:	*33 (3.3, 24.3)*

• 2.0 L AND 2.5 L MODEL

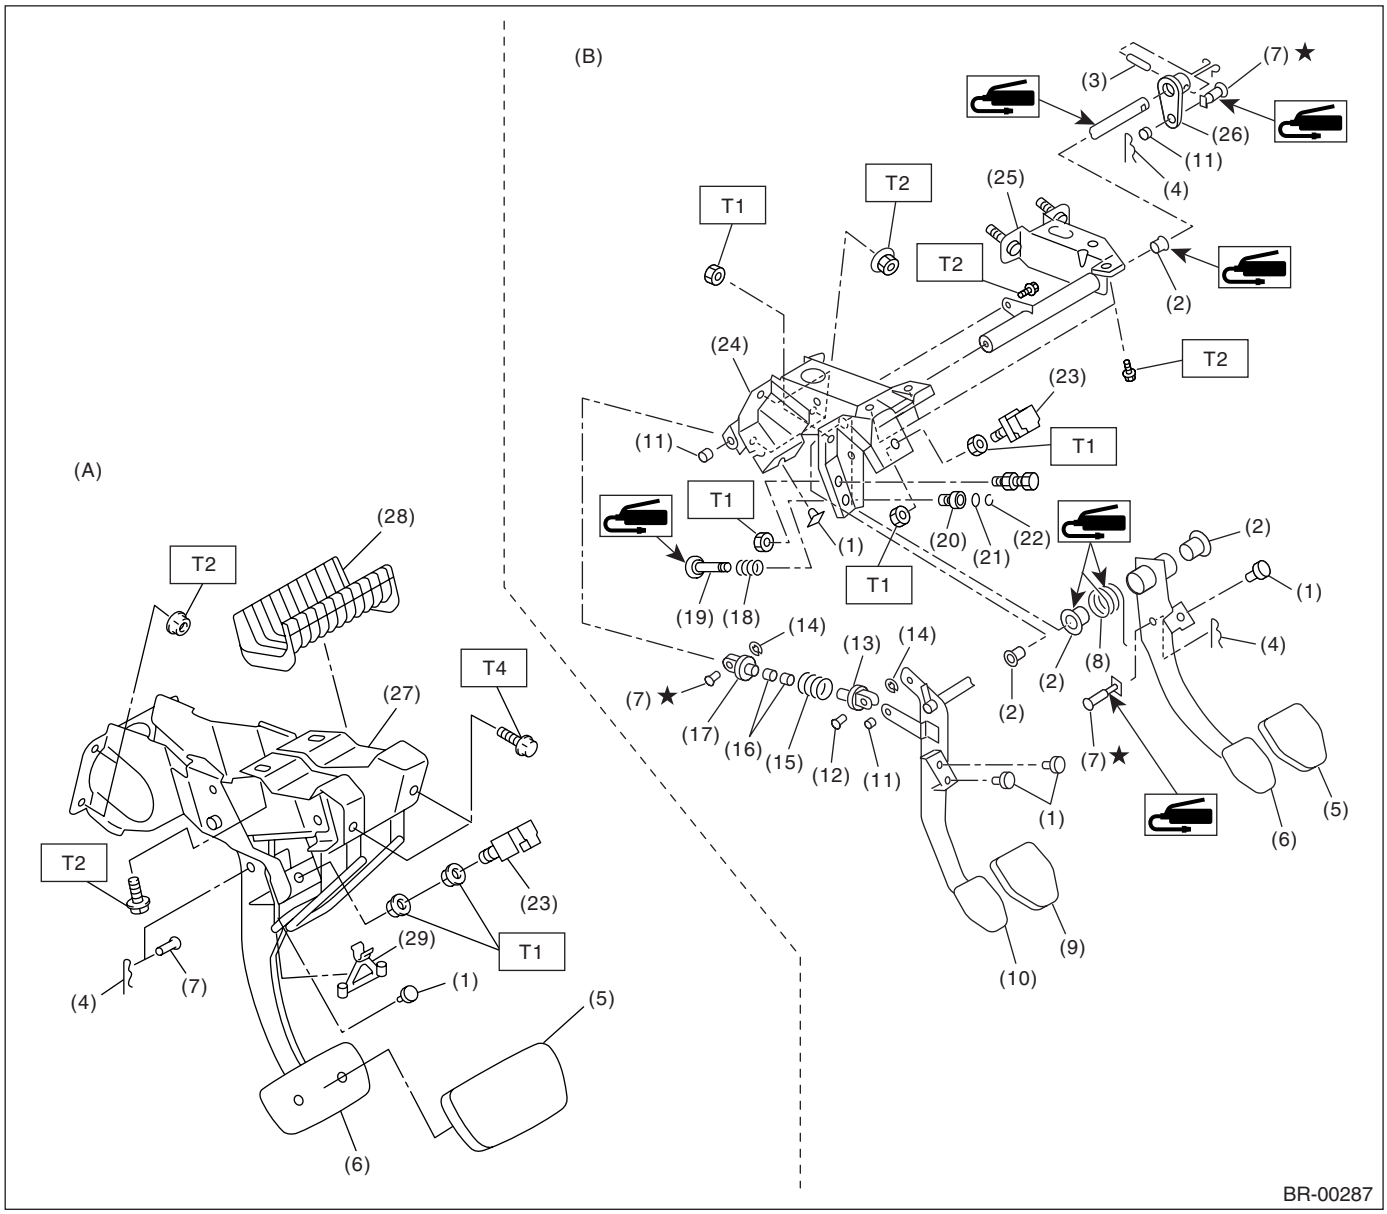

(A) RHD
(B) LHD

(1) Stopper
(2) Bushing
(3) Spring pin
(4) Snap pin
(5) Brake pedal pad
(6) Brake pedal
(7) Clevis pin
(8) Brake pedal spring
(9) Clutch pedal pad
(10) Clutch pedal
(11) Bushing C
(12) Clutch clevis pin
(13) Assist rod A
(14) Clip
(15) Assist spring
(16) Assist bushing
(17) Assist rod B
(18) Spring S
(19) Rod S
(20) Bushing S
(21) O-ring
(22) Clip
(23) Stop light switch
(24) Pedal bracket
(25) Clutch master cylinder bracket
(26) Lever
(27) Brake pedal bracket ASSY
(28) Cover
(29) Protector

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 18 (1.8, 13.0)
T3: 30 (3.1, 22.4)
T4: 33 (3.3, 24.3)

• LHD AT MODEL

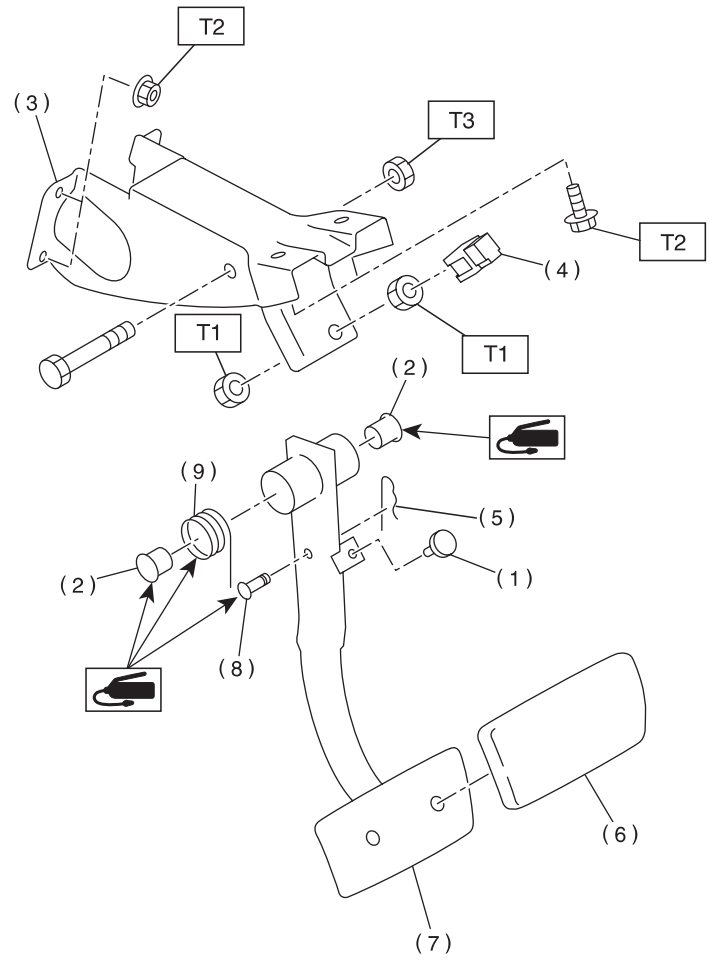

BR-00139

(1) Stopper
(2) Bushing
(3) Pedal bracket
(4) Stop light switch
(5) Snap pin
(6) Brake pedal pad
(7) Brake pedal
(8) Clevis pin
(9) Brake pedal spring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 18 (1.8, 13.0)
T3: 29 (3.0, 21.7)

• RHD MODEL

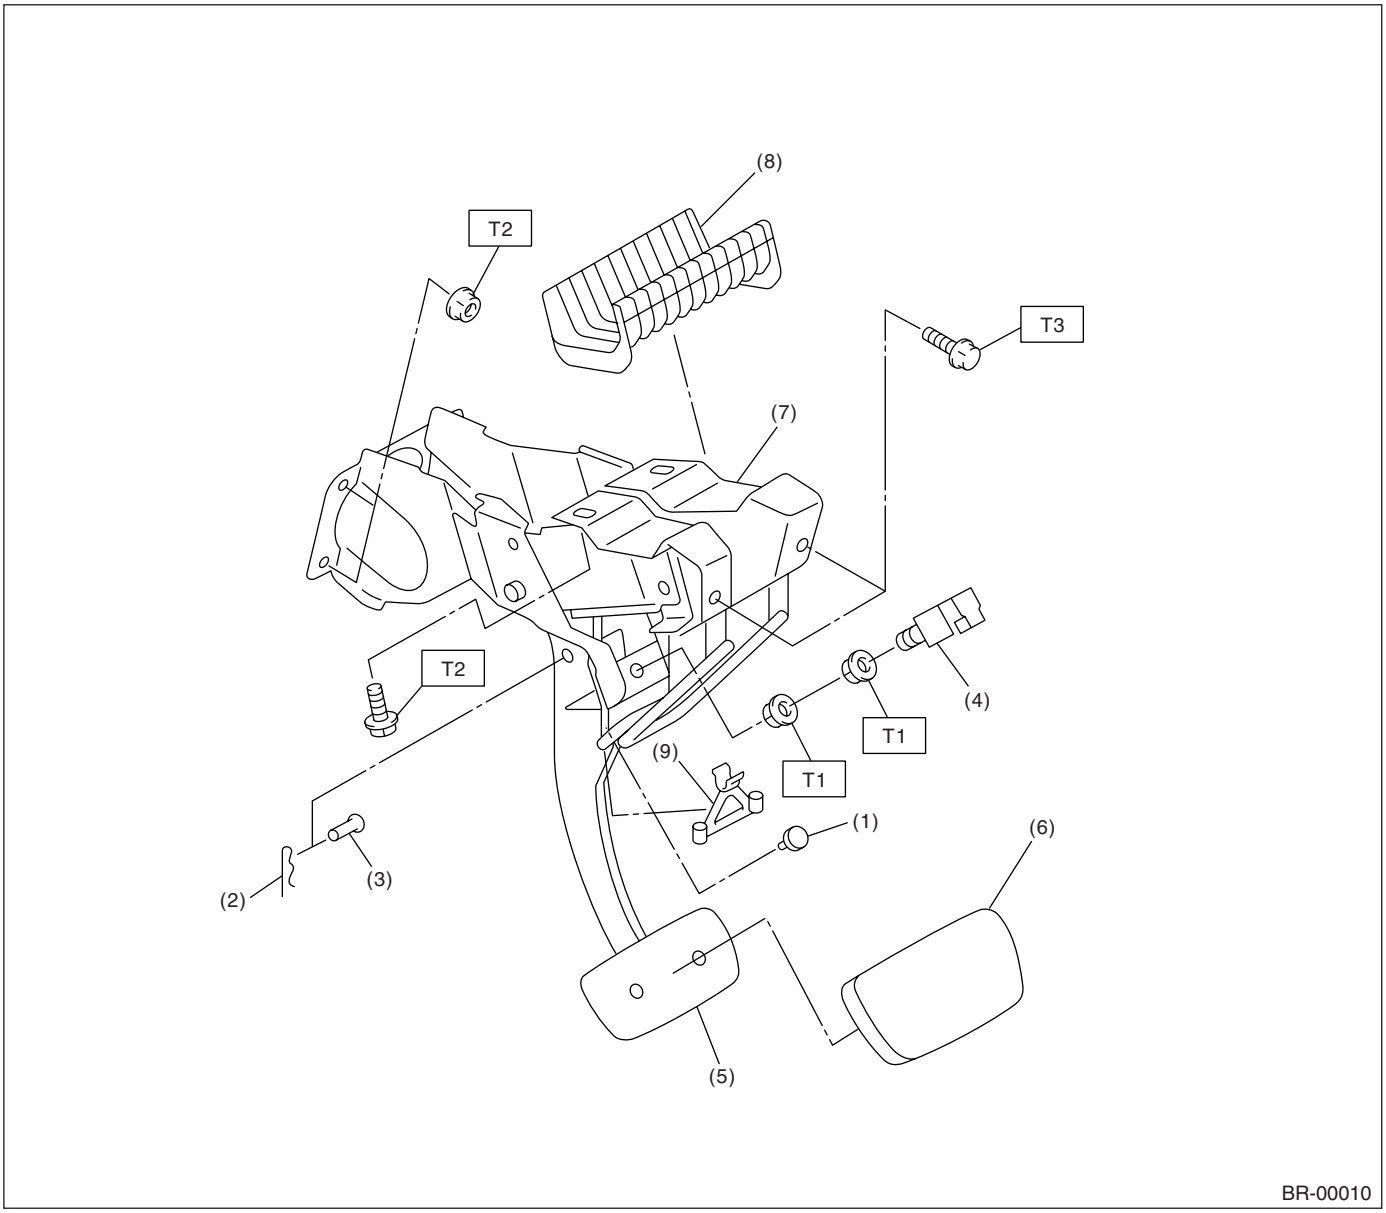

(1)	Stopper	(6)	Brake pedal pad	
(2)	Snap pin	(7)	Brake pedal bracket ASSY	
(3)	Clevis pin	(8)	Cover	
(4)	Stop light switch	(9)	Protector	
(5)	Brake pedal			

Tightening torque: N·m (kgf-m, ft-lb)
T1: 8 (0.8, 5.8)
T2: 18 (1.8, 13.0)
T3: 33 (3.3, 24.3)

9. HILL HOLDER

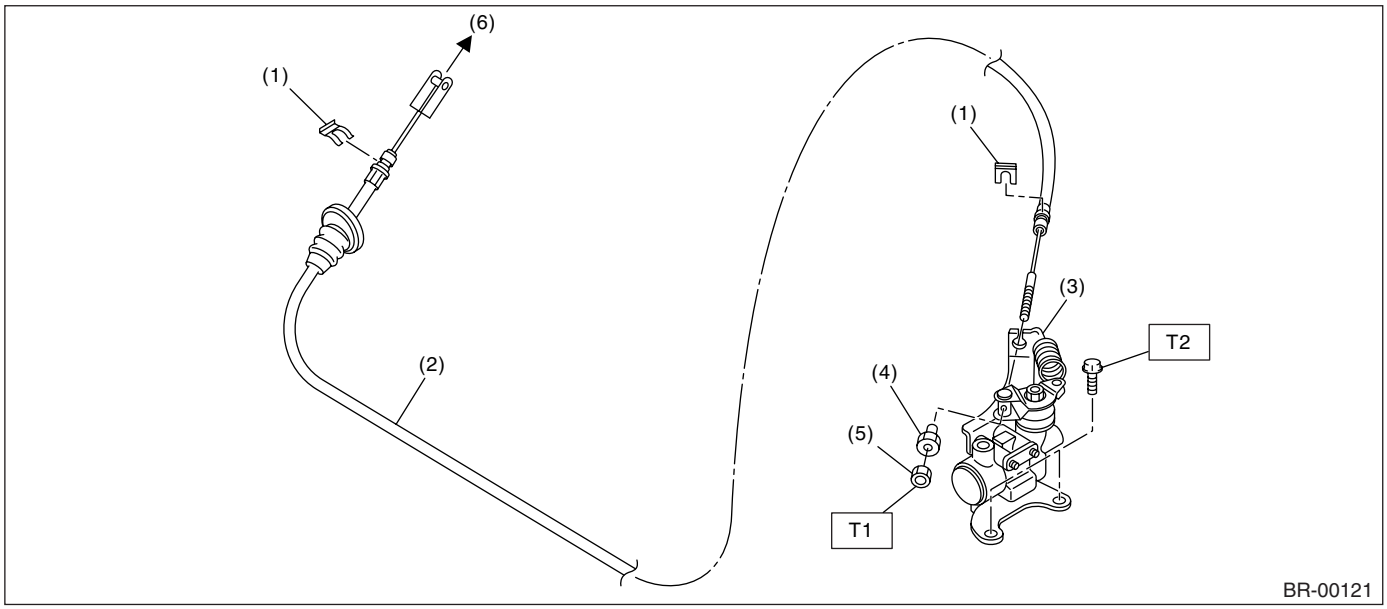

(1)	Clamp	(4)	Adjusting nut
(2)	PHV cable	(5)	Lock nut
(3)	PHV (Pressure hold valve)	(6)	To clutch pedal

Tightening torque: N·m (kgf-m, ft-lb)
T1: 3.5 (0.35, 2.5)
T2: 18 (1.8, 13.0)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
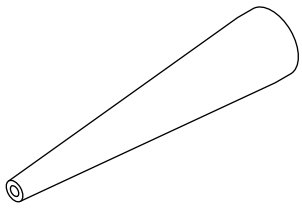 ST-925460000	925460000	WHEEL CYLINDER 11/16″ ADAPTER	Used for installing cup onto wheel cylinder piston (Size 11/16″).

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
SNAP RING PLIERS	Used for removing and installing snap ring.

2. Front Brake Pad

A: REMOVAL

1. 14 INCH AND 15 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the lower caliper bolt.
5) Raise the caliper body upward and support it.

NOTE:
Do not disconnect the brake hose from caliper body.

6) Remove the pad.

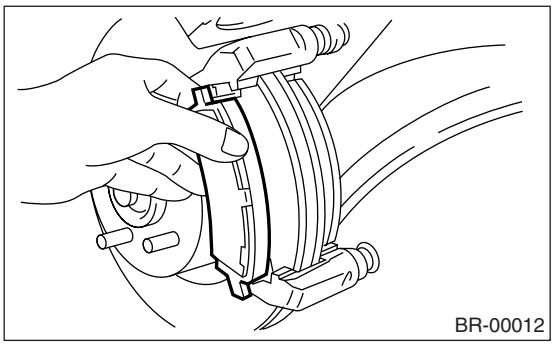

NOTE:
If the brake pad is difficult to remove, proceed as follows:

(1) Remove the caliper body from support.
(2) Remove the support.
(3) Place a support in a vise between wooden blocks.

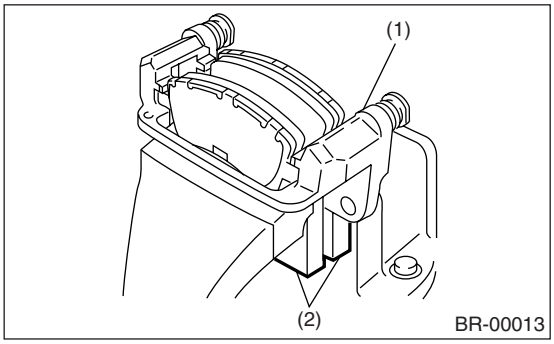

(1) Support
(2) Wooden blocks

(4) Attach a rod of less than 12 mm (0.47 in) dia. to the shaded area of brake pad, and strike the rod with a hammer to drive brake pad out of place.

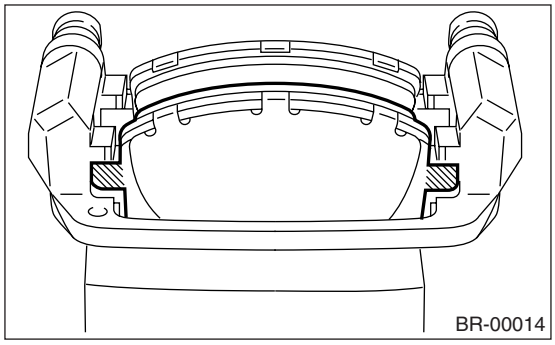

2. 16 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the M clip.

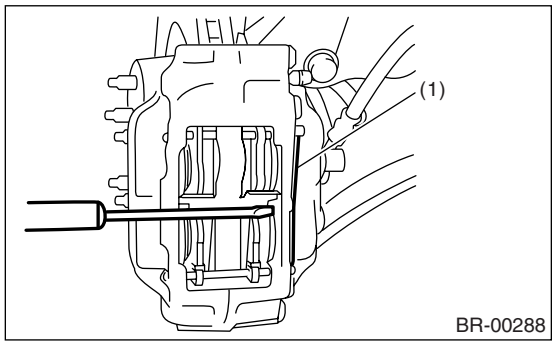

(1) M clip

5) Remove the pad pins, then remove the cross spring.

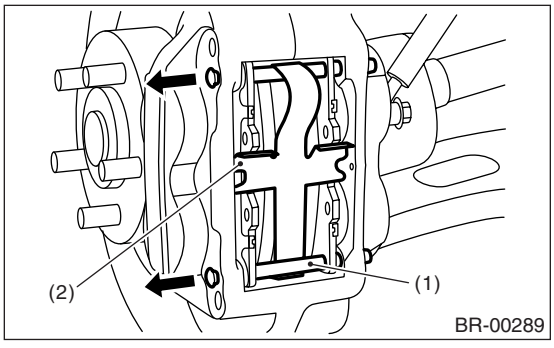

(1) Pad pin
(2) Cross spring

6) Use a wrench to expand the pads, and then push the piston back.

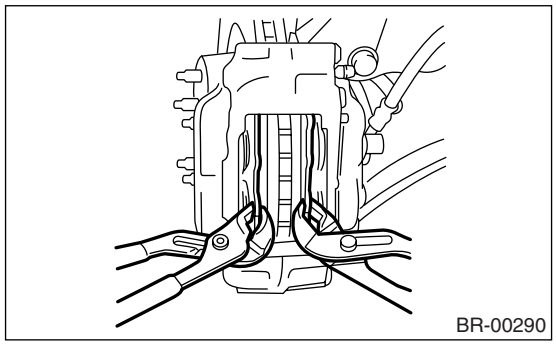

7) Remove the pad.

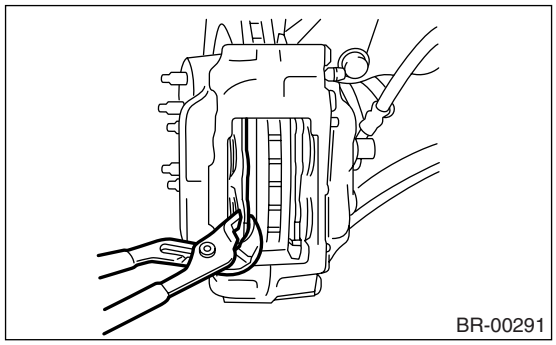

3. 17 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the clip.

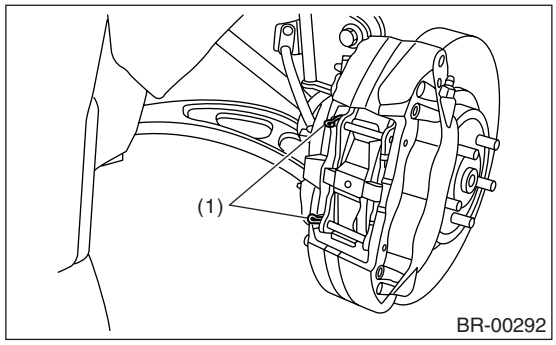

(1) Clip

5) Remove the pad pins and cross spring.

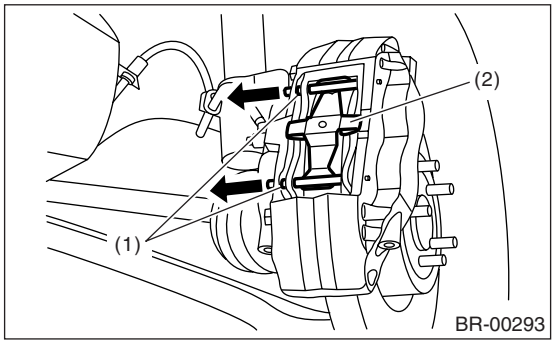

(1) Pad pin
(2) Cross spring

6) Use a wrench to expand the pads, and then push the piston back.

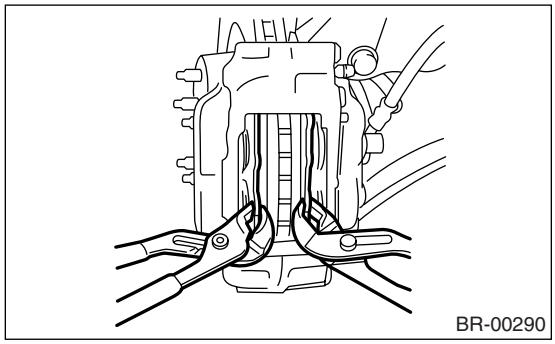

7) Remove the pad.

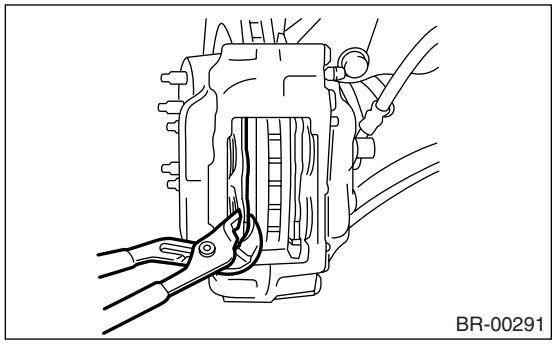

B: INSTALLATION

1. 14 INCH AND 15 INCH TYPE

1) Apply thin coat of Molykote AS880N (Part No. K0779YA010) to the frictional portion between pad and pad clip.
2) Apply thin coat of Molykote AS880N (Part No. K0779YA010) to the frictional portion between pad and pad inner shim.

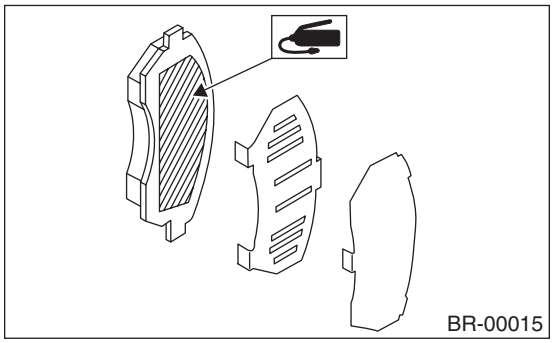

3) Install the pads on support.
4) Install the caliper body on support.

Tightening torque:
37 N·m (3.8 kgf-m, 27.5 ft-lb)

NOTE:
If it is difficult to push the piston during pad replacement, loosen the air bleeder to facilitate work.

2. 16 INCH TYPE

1) Apply thin coat of Molykote AS880N (Part No.K0779YA010) to the frictional portion between pad and pad inner shim.

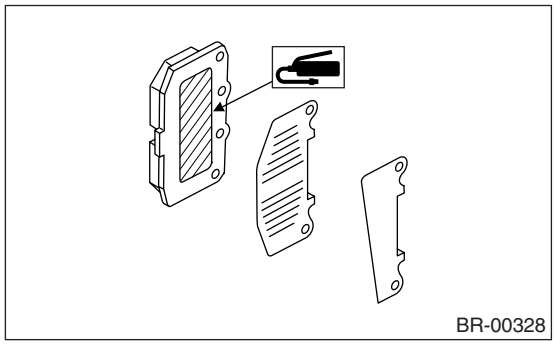

2) Install the pads on caliper body.
3) Install the pad pins on caliper body.
4) Install the M clip.
5) Install the cross spring.

3. 17 INCH TYPE

1) Apply thin coat of Molykote AS880N (Part No. K0779YA010) to the frictional portion between pad and pad shim.

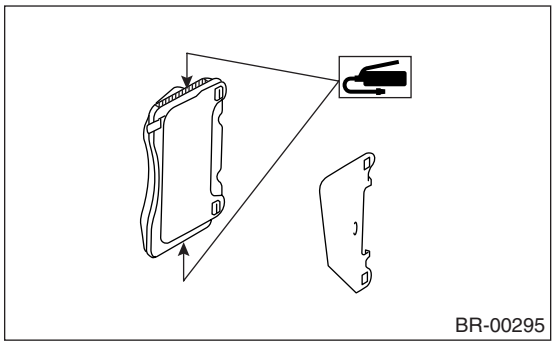

2) Install the pads on caliper body.
3) Install the cross spring.
4) Install the pad pins.
5) Install the clip.

C: INSPECTION

1. 14 INCH AND 15 INCH TYPE

Check the pad thickness A.

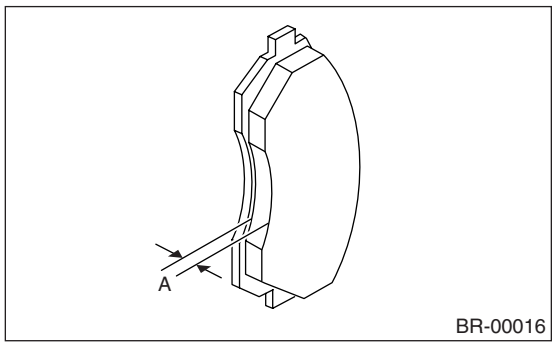

Pad thickness	Standard value	11 mm (0.43 in)
	Wear limit	1.5 mm (0.059 in)

NOTE:
• Always replace the pads for both right and left wheels at the same time.
• Also replace the pad clips if they are twisted or worn.
• A wear indicator is provided on the inner disc brake pad. If the pad wears down to such an extent that the end of wear indicator contacts disc rotor, a squeaking sound is produced as the wheel rotates. If this sound is heard, replace the pad.
• Replace the pad if there is oil or grease on it.

2. 16 INCH TYPE

Check the pad thickness A.

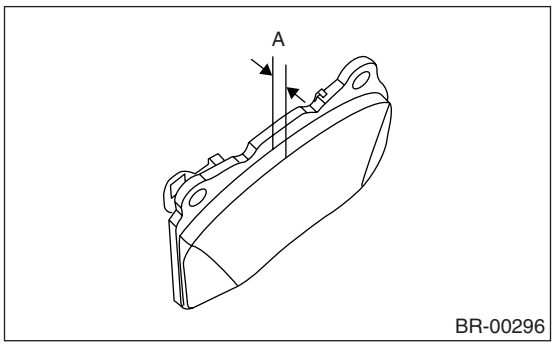

Pad thickness	Standard value	10 mm (0.393 in)
	Wear limit	1.5 mm (0.59 in)

NOTE:
• Always replace the pads for both right and left wheels at the same time.
• Also replace the pad clips if they are twisted or worn.
• A wear indicator is provided on the inner disc brake pad. If the pad wears down to such an extent that the end of wear indicator contacts disc rotor, a squeaking sound is produced as the wheel rotates. If this sound is heard, replace the pad.
• Replace the pad if there is oil or grease on it.

3. 17 INCH TYPE

Check the pad thickness A.

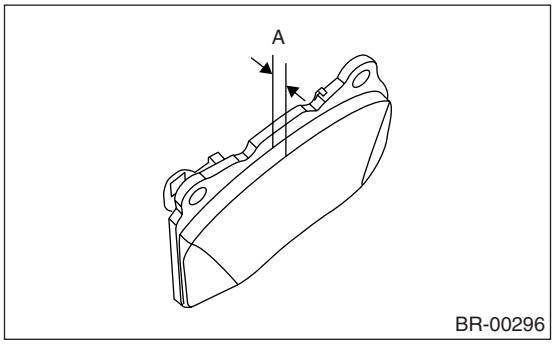

Pad thickness	Standard value	9.2 mm (0.362 in)
	Wear limit	1.2 mm (0.047 in)

NOTE:
• Always replace the pads for both right and left wheels at the same time.
• Also replace the pad clips if they are twisted or worn.
• A wear indicator is provided on the inner disc brake pad. If the pad wears down to such an extent that the end of wear indicator contacts disc rotor, a squeaking sound is produced as the wheel rotates. If this sound is heard, replace the pad.
• Replace the pad if there is oil or grease on it.

3. Front Disc Rotor

A: REMOVAL

1. 14 INCH AND 15 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the caliper body and support from housing, and suspend it from strut using a wire.

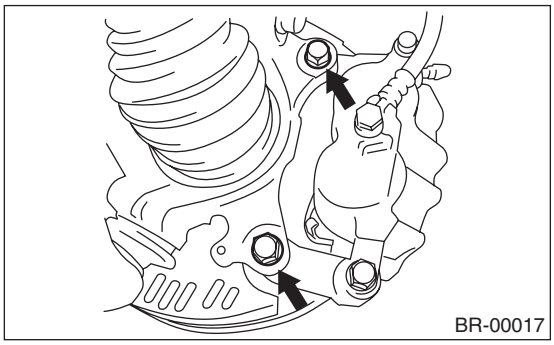

5) Remove the disc rotor.

NOTE:
If the disc rotor seizes up within the hub, drive the disc rotor out by installing an 8-mm bolt in holes (B) on rotor.

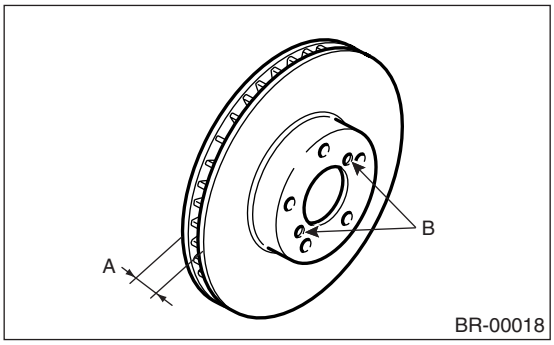

6) Clean mud and foreign particles from the caliper body assembly and support.

2. 16 INCH AND 17 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nut.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the caliper body from housing and suspend from strut using a wire.

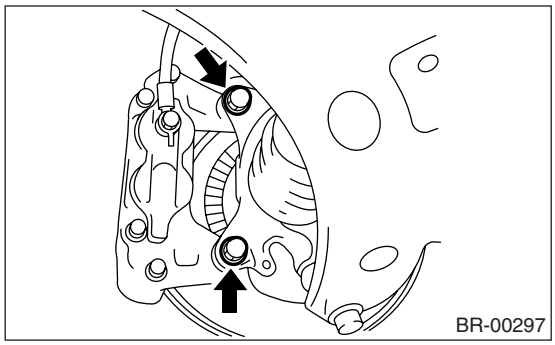

5) Remove the disc rotor from hub.

NOTE:
If the disc rotor seizes up within the hub, drive the disc rotor out by installing an 8-mm bolt in holes B on rotor.

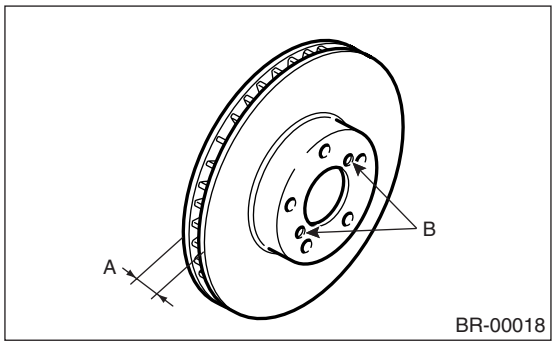

6) Clean mud and foreign particles from the caliper body assembly and support.

B: INSTALLATION

1) Install the disc rotor.
2) Install the caliper body and support to housing.

Tightening torque:
Except 17 inch type:
80 N·m (8.2 kgf-m, 59 ft-lb)
17 inch type:
155 N·m (15.8 kgf-m, 114.3 ft-lb)

3) Install the wheel.

C: INSPECTION

1) Check bearing axial end play and hub runout before disc rotor runout limit inspection. <Ref. to DS-23, INSPECTION, Front Axle.>
2) Secure the disc rotor by tightening five wheel nuts.
3) Set a dial gauge 10 mm (0.39 in) inward of rotor outer perimeter. Turn the disc rotor to check runout. If the disc rotor runout is above specified value, replace the disc rotor.

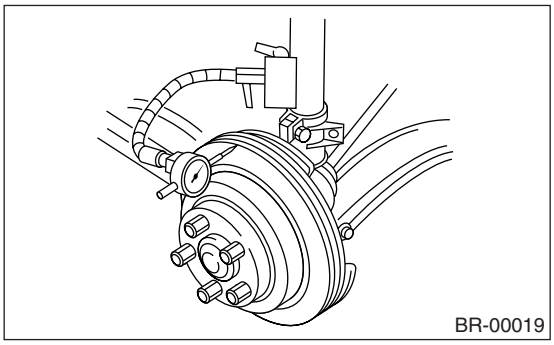
BR-00019

Disc rotor runout limit:
0.075 mm (0.0030 in)

4) Set a micrometer 10 mm (0.39 in) inward of the rotor outer perimeter, and then measure the disc rotor thickness. If the thickness of disc rotor is outside the service limit, replace the disc rotor.

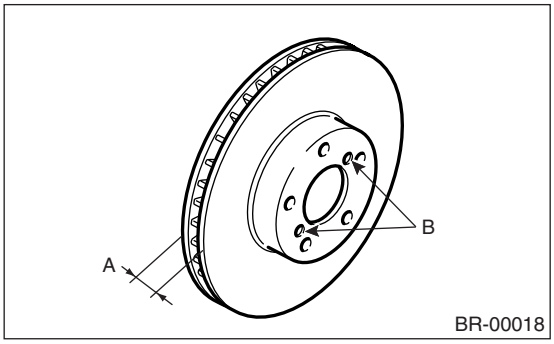

BR-00018

		Standard value	Service limit	Disc outer dia.
Disc rotor thickness A	14″	24 mm (0.94 in)	22 mm (0.87 in)	260 mm (10.24 in)
	15″	24 mm (0.94 in)	22 mm (0.87 in)	277 mm (10.91 in)
	16″	24 mm (0.94 in)	22 mm (0.87 in)	294 mm (11.57 in)
	17″	30 mm (1.18 in)	28 mm (1.10 in)	326 mm (12.83 in)

4. Front Disc Brake Assembly

A: REMOVAL

1. 14 INCH AND 15 INCH TYPE

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the union bolt, and then disconnect the brake hose from caliper body assembly.

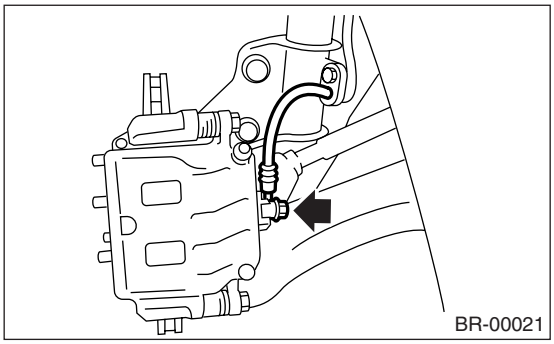

5) Remove the bolt securing lock pin to caliper body.

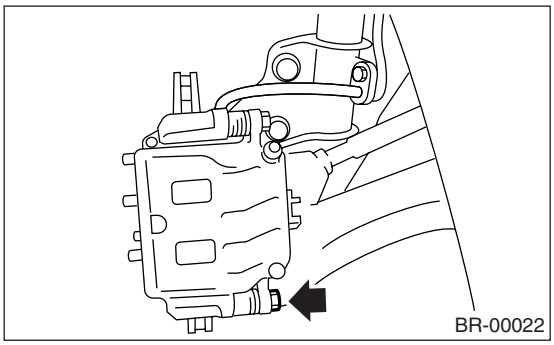

6) Raise the caliper body, and then move it toward vehicle center to separate it from support.
7) Remove the support from housing.

NOTE:
Remove the support only when replacing it or the rotor. It need not be removed when servicing the caliper body assembly.

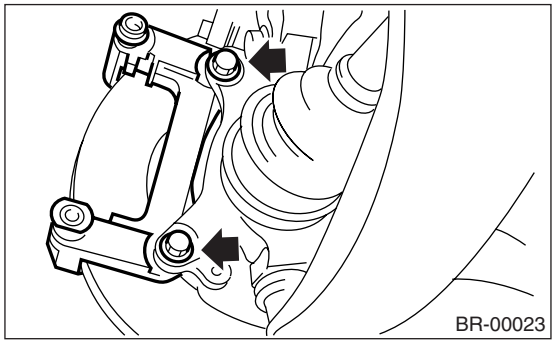

8) Clean mud and foreign particles from the caliper body assembly and support.

2. 16 INCH TYPE

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.
4) Remove the union bolt, and then disconnect the brake hose from caliper body assembly.
5) Remove the caliper body from housing.

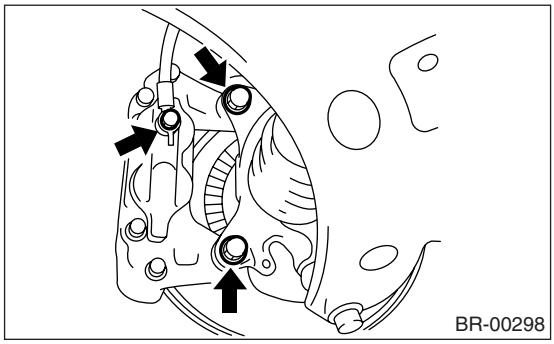

6) Clean mud and foreign particles from the caliper body assembly and support.

3. 17 INCH TYPE

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the front wheel.

4) Remove the brake pads from caliper body. <Ref. to BR-26, 17 INCH TYPE, REMOVAL, Front Brake Pad.>.
5) Remove the union bolt and brake hose from caliper body assembly.
6) Remove two installation bolts from housing.

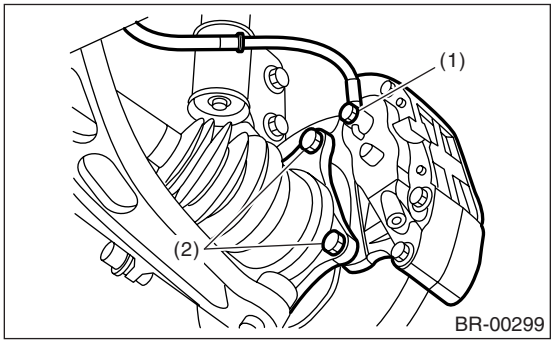

(1) Union bolt
(2) Installation bolt

7) Clean mud and foreign particles from the caliper body assembly.

B: INSTALLATION

1. 14 INCH AND 15 INCH TYPE

1) Install the support on housing.

Tightening torque:
80 N·m (8.2 kgf-m, 59 ft-lb)

2) Apply thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and pad clip.
3) Apply thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and inner shim.

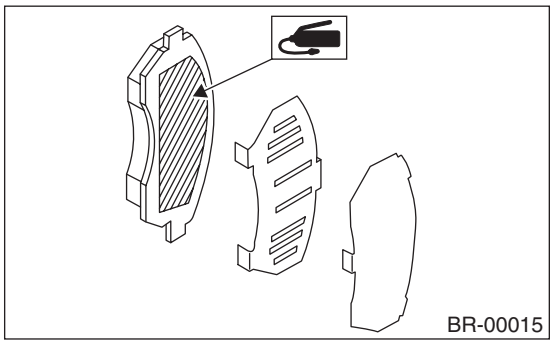

4) Install the pads on support.
5) Install the caliper body on support.

Tightening torque:
37 N·m (3.8 kgf-m, 27.5 ft-lb)

6) Replace the brake hose gaskets with new ones, and then connect the brake hose.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

7) Bleed air from the brake system.

2. 16 INCH TYPE

1) Install the caliper body on housing.

Tightening torque:
80 N·m (8.2 kgf-m, 59 ft-lb)

2) Apply thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and pad inner shim.

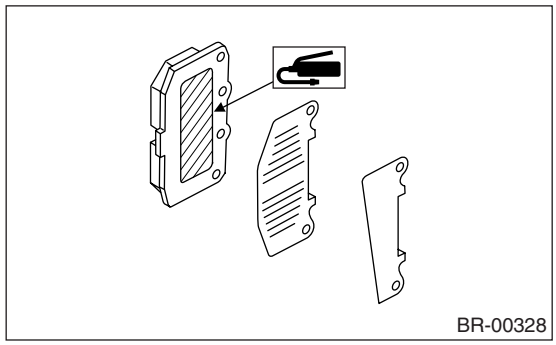

3) Install the pads on caliper body.
4) Install the pad pins and cross spring on caliper body.
5) Install the M clip.
6) Replace the brake hose gaskets with new ones, and then connect the brake hose.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

7) Bleed air from the brake system.

3. 17 INCH TYPE

1) Install the caliper body assembly on housing.

Tightening torque:
155 N·m (15.8 kgf-m, 114.3 ft-lb)

2) Apply thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and pad shim.

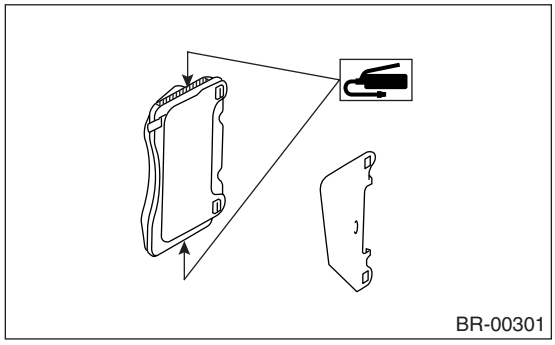

3) Install the pads on caliper body.
4) Install the cross spring.
5) Install the pad pins.
6) Install the clip.

7) Replace the brake hose gaskets with new ones, and then connect the brake hose.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

8) Bleed air from the brake system.

C: DISASSEMBLY

1. 14 INCH AND 15 INCH TYPE

1) Clean mud and foreign particles from the caliper body assembly and support.

CAUTION:
Be careful not to allow foreign particles to enter the brake hose connector.

2) Place a wooden block in caliper body as shown in the figure to prevent the piston from jumping out and avoid being damaged.
3) Gradually supply compressed air via the installation hole of brake hose to force the piston out.

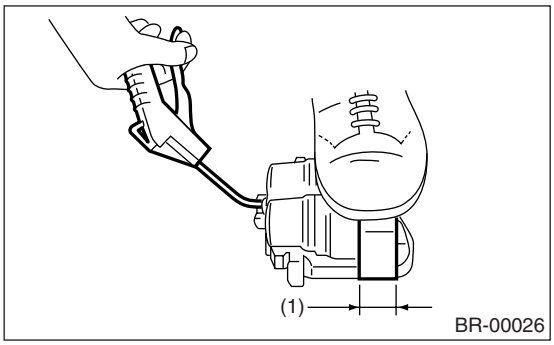

(1) Place a 30 mm (1.18 in) wide wooden block here.

4) Remove the piston boot.
5) Remove the piston seal from caliper body cylinder.

CAUTION:
Do not damage the cylinder and piston seal groove.

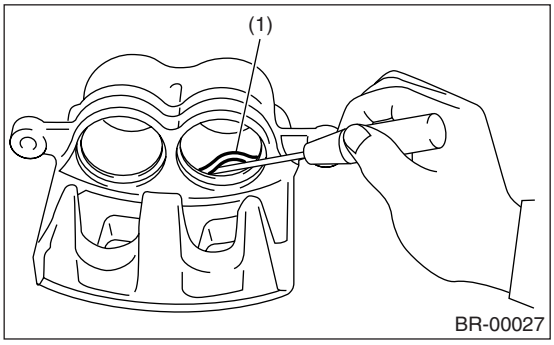

6) Remove the guide pin and boot from caliper body.

2. 16 INCH TYPE

1) Clean mud and foreign particles from the caliper body assembly.

CAUTION:
Be careful not to allow foreign particles to enter the brake hose connector.

2) Using a standard screwdriver, remove the boot ring from piston.

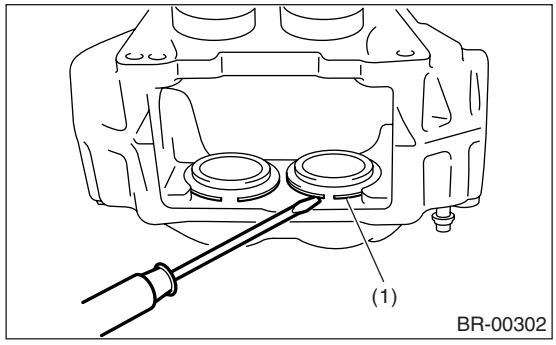

(1) Boot ring

3) Remove the boot from piston end.

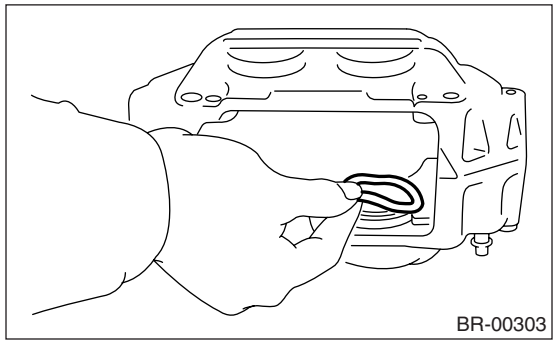

4) Place a wooden block in caliper body as shown in the figure to prevent the piston from jumping out and avoid being damaged.
5) Gradually supply compressed air via the installation hole of brake hose to force the piston out.

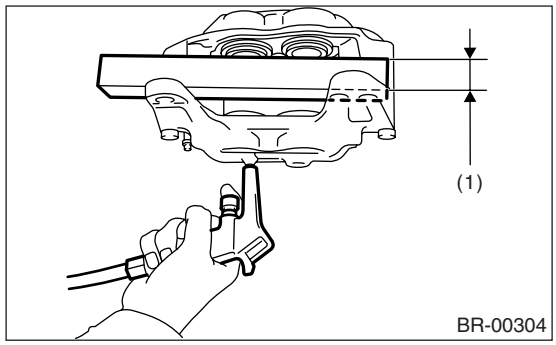

(1) Place a 30 mm (1.18 in) wide wooden block here.

6) Remove the piston seal from caliper body cylinder.

CAUTION:
Do not damage the cylinder and piston seal groove.

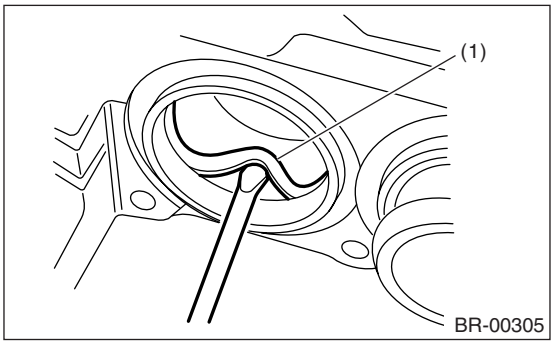

(1) Piston seal

3. 17 INCH TYPE

1) Clean mud and foreign particles from the caliper body assembly.

CAUTION:
Be careful not to allow foreign particles to enter the brake hose connector.

2) Remove the piston boots from each piston end.

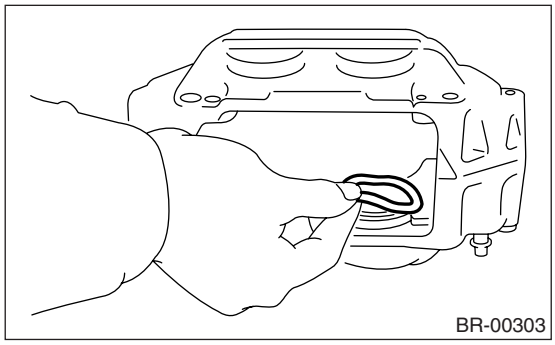

3) Place a wooden block in caliper body as shown in the figure to prevent the piston from jumping out and avoid being damaged.

4) Gradually supply compressed air via the installation hole of brake hose to force the piston out.

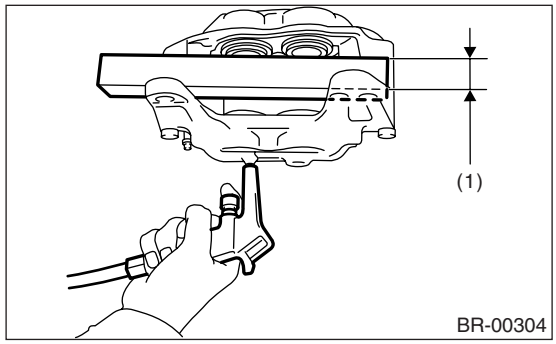

(1) Place a 30 mm (1.18 in) wide wooden block here.

5) Remove the piston seal from caliper body cylinder.

CAUTION:
Do not damage the cylinder and piston seal groove.

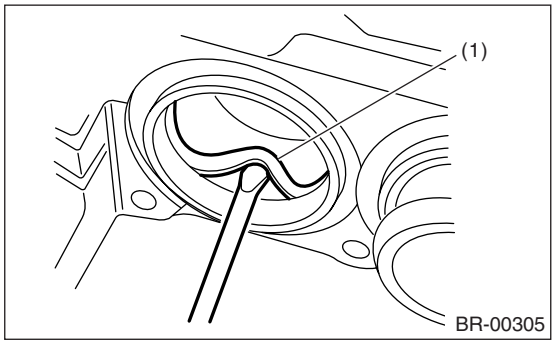

(1) Piston seal

D: ASSEMBLY

1. 14 INCH AND 15 INCH TYPE

1) Clean the caliper body interior using brake fluid.
2) Apply a coat of brake fluid to the piston seal and fit piston seal in groove on caliper body.
3) Apply a coat of brake fluid to the entire inner surface of cylinder and outer surface of piston.
4) Apply a coat of specified grease to the boot and install the piston boot to the groove on ends of cylinder.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

5) Insert the piston into cylinder.

CAUTION:
Do not force the piston into cylinder.

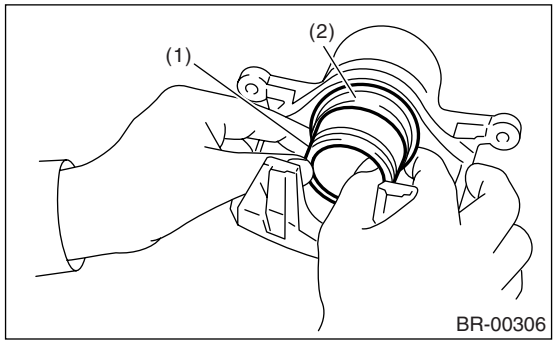

(1) Piston
(2) Piston boot

6) Position the boot in grooves on cylinder and piston.

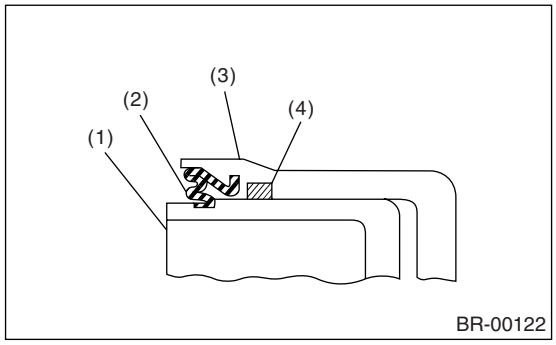

(1) Piston
(2) Piston boot
(3) Caliper body
(4) Piston seal

7) Apply a coat of specified grease to the lock pin and guide pin outer surface, cylinder inner surface, and boot grooves.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

8) Install the lock and guide pin boot on support.

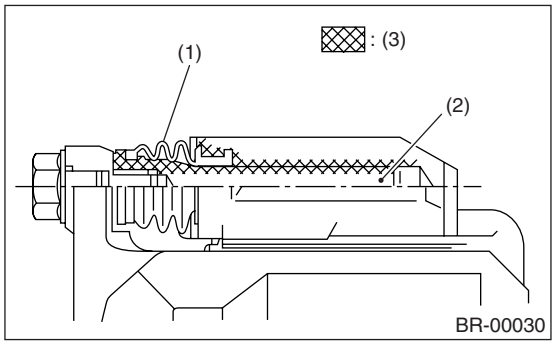

(1) Pin boot
(2) Lock pin or guide pin
(3) Apply grease.

2. 16 INCH TYPE

1) Clean the caliper body interior using brake fluid.
2) Apply a coat of brake fluid to the piston seal and fit piston seal in groove on caliper body.
3) Apply a coat of brake fluid to the entire inner surface of cylinder and outer surface of piston.
4) Apply a coat of specified grease to the boot and fit in groove on ends of cylinder and piston.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

5) Insert the piston into cylinder.

CAUTION:
Do not force the piston into cylinder.

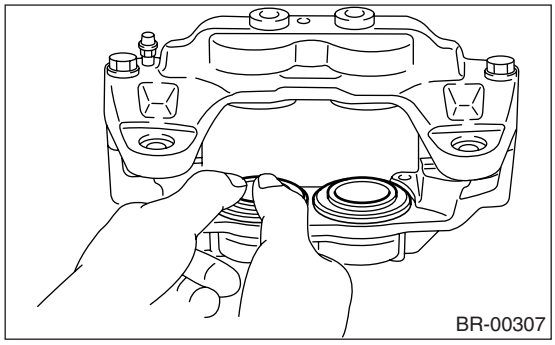

6) Position the boot in grooves on cylinder and piston.

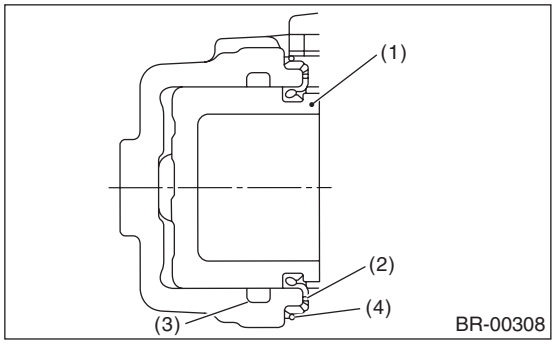

(1) Piston
(2) Piston boot
(3) Piston seal
(4) Boot ring

7) Install the boot ring. Be careful not scratch the boot.

3. 17 INCH TYPE

1) Clean the caliper body interior using brake fluid.
2) Apply a coat of brake fluid to the piston seal, and then install the piston seal in groove on caliper body.
3) Apply a coat of brake fluid to the entire inner surface of cylinder and outer surface of piston.
4) Apply a coat of specified grease to the boot and install it in the groove on piston.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

5) Insert the piston into cylinder.

CAUTION:
Do not force the piston into cylinder.

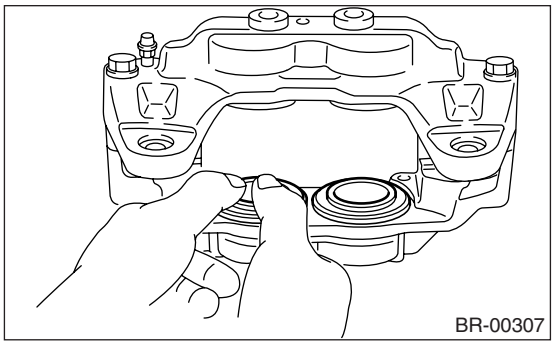

6) Position the boot in grooves on cylinder and piston.

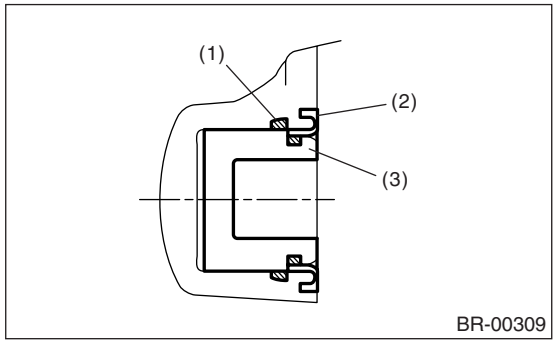

(1) Piston seal
(2) Piston boot
(3) Piston

E: INSPECTION

1) Repair or replace the faulty parts.
2) Check the caliper body and piston for uneven wear, damage or rust.
3) Check the rubber parts for damage or deterioration.

5. Rear Brake Pad

A: REMOVAL

1. 14 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the rear wheel.
4) Remove the lower caliper bolt.

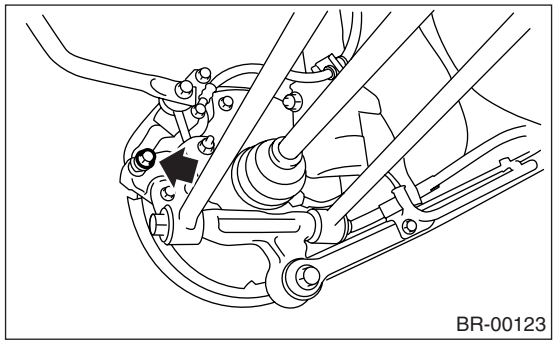

5) Raise the caliper body upward and support it.

NOTE:
Do not disconnect the brake hose from caliper body.

6) Remove the pad.

NOTE:
If the brake pad is difficult to remove, use the same procedure as for front disc brake pad.
<Ref. to BR-25, REMOVAL, Front Brake Pad.>

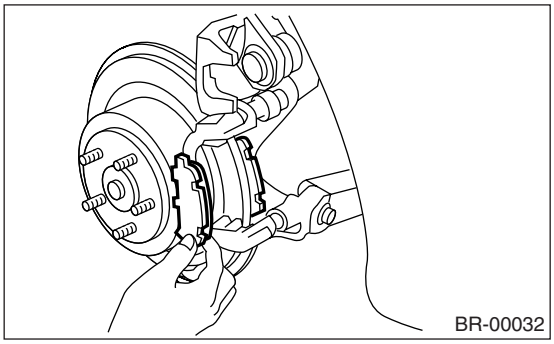

2. 15 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the rear wheel.
4) Remove the M clip.

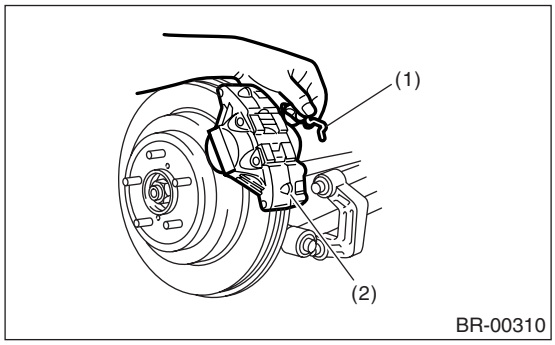

(1) M clip
(2) Caliper

5) Remove the two pad pins.
6) Remove the cross spring.

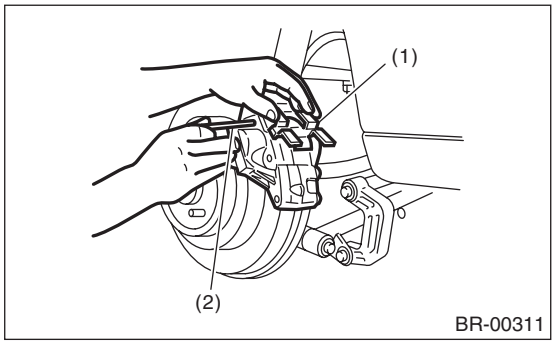

(1) Cross spring
(2) Pad pin

7) Expand the pads and push piston back.
8) Remove the pad and shim.

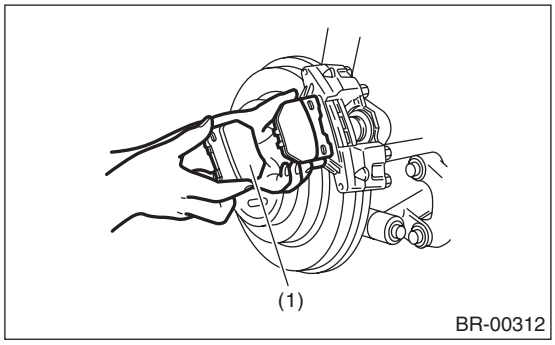

(1) Brake pad

3. 17 INCH TYPE

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the rear wheel.
4) Remove the clip.

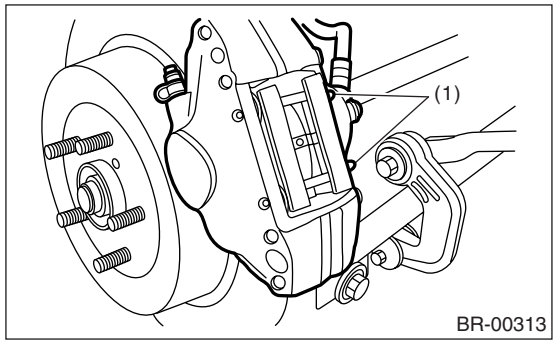

(1) Clip

5) Remove the pad pins and cross spring.

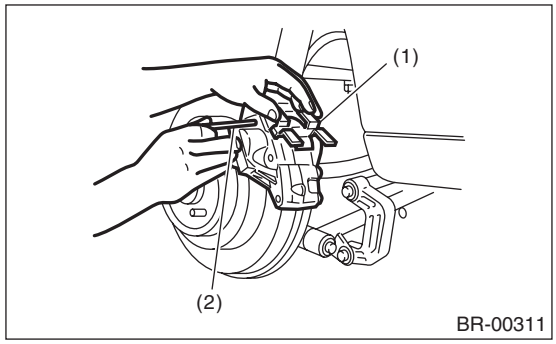

(1) Cross spring
(2) Pad pin

6) Expand the pads and push piston back.
7) Remove the pad.

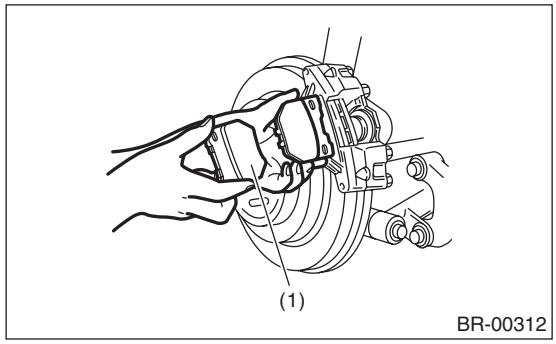

(1) Rear brake pad

B: INSTALLATION

1. 14 INCH TYPE

1) Apply a thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and pad clip.
2) Install the pad on support.
3) Install the caliper body on support.

Tightening torque:
37 N·m (3.8 kgf-m, 27.5 ft-lb)

NOTE:
If it is difficult to push the piston during pad replacement, loosen air bleeder to facilitate work.

2. 15 INCH TYPE

1) Apply a thin coat of Molykote AS880N (Part No. K0777YA010) to frictional portion between pad and pad inner shim.
2) Install the pads on caliper body.
3) Install the cross spring.
4) Install the pad pins on caliper body.
5) Install the M clip.

3. 17 INCH TYPE

1) Apply a thin coat of Molykote AS880N (Part No. K0777YA010) to frictional portion between pad and pad inner shim.
2) Install the pads on caliper body.
3) Install the cross spring and pad pins.
4) Install the Clip.

C: INSPECTION

1. 14 INCH TYPE

Check pad thickness A.

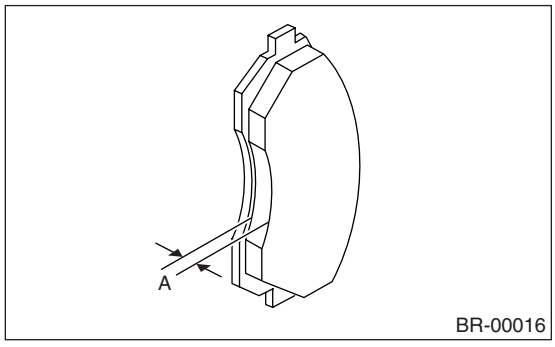

Pad thickness	Standard value	9.0 mm (0.354 in)
	Wear limit	1.5 mm (0.059 in)

NOTE:
• Always replace the pads for both right and left wheels at the same time.
• Also replace the pad clips if they are twisted or worn.

• A wear indicator is provided on the inner disc brake pad. If the pad wears down to such an extent that the end of wear indicator contacts disc rotor, a squeaking sound is produced as the wheel rotates. If this sound is heard, replace the pad.
• Replace the pad if there is oil or grease on it.

2. 15 INCH TYPE

Check the pad thickness A.

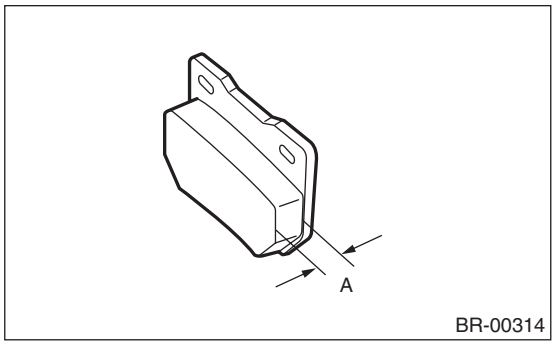

Pad thickness	Standard value	11.5 mm (0.452 in)
	Wear limit	1.5 mm (0.059 in)

NOTE:
• Always replace the pads for both right and left wheels at the same time.
• Also replace the pad clips if they are twisted or worn.
• A wear indicator is provided on the inner disc brake pad. If the pad wears down to such an extent that the end of wear indicator contacts disc rotor, a squeaking sound is produced as the wheel rotates. If this sound is heard, replace the pad.
• Replace the pad if there is oil or grease on it.

3. 17 INCH TYPE

Check the pad thickness A.

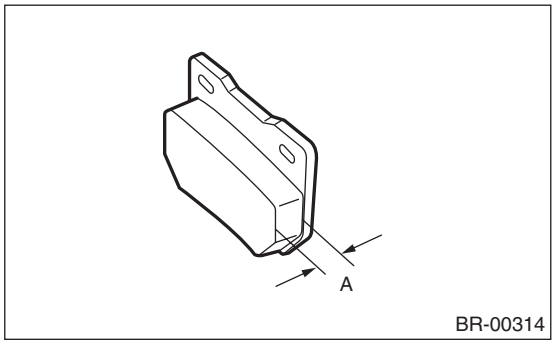

Pad thickness	Standard value	9.0 mm (0.354 in)
	Wear limit	1.2 mm (0.047 in)

NOTE:
• Always replace the pads for both right and left wheels at the same time.
• Also replace the pad clips if they are twisted or worn.
• A wear indicator is provided on the inner disc brake pad. If the pad wears down to such an extent that the end of wear indicator contacts disc rotor, a squeaking sound is produced as the wheel rotates. If this sound is heard, replace the pad.
• Replace the pad if there is oil or grease on it.

6. Rear Disc Rotor

A: REMOVAL

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Pull down and release the parking brake.
5) Remove the two mounting bolts, and then remove the disc brake assembly.

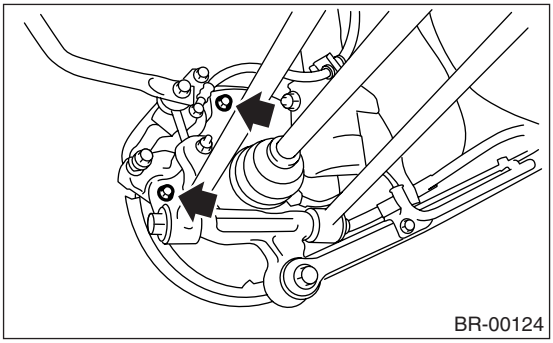

6) Suspend the disc brake assembly so that hose is not stretched.
7) Remove the disc rotor.

NOTE:
If the disc rotor is difficult to remove try following two methods in order.

(1) Turn the adjusting screw using a flat tip screwdriver until brake shoe gets away enough from the disc rotor.

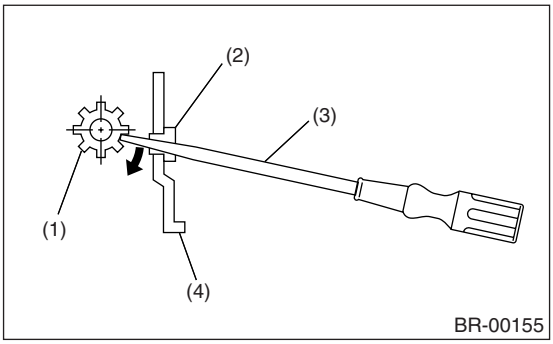

(1) Adjusting screw
(2) Cover
(3) Flat tip screwdriver
(4) Back plate

(2) If the disc rotor seizes up within hub, drive the disc rotor out by installing an 8-mm bolt in holes B on rotor.

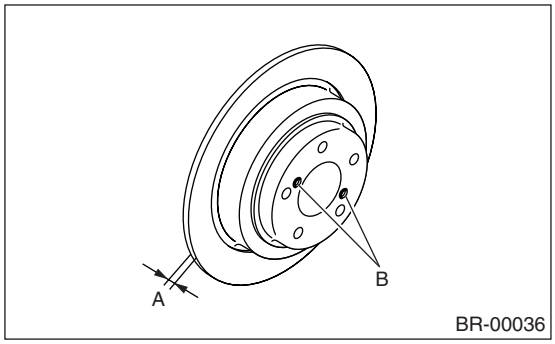

B: INSTALLATION

1) Install in the reverse order of removal.
2) Adjust the parking brake. <Ref. to PB-10, ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>

C: INSPECTION

1) Check bearing axial end play and hub runout before disc rotor runout limit inspection. <Ref. to DS-31, INSPECTION, Rear Axle.>
2) Secure the disc rotor by tightening five wheel nuts.
3) Set a dial gauge 10 mm (0.39 in) inward of rotor outer perimeter. Turn the disc rotor to check runout. If the disc rotor runout is above specified value, replace the disc rotor.

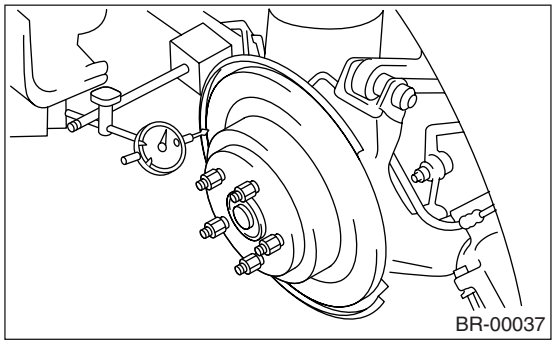

Disc rotor runout limit:
0.070 mm (0.0027 in)

4) Set a micrometer 10 mm (0.39 in) inward of the rotor outer perimeter, and then measure the disc rotor thickness. If the thickness of disc rotor is outside the service limit, replace the disc rotor.

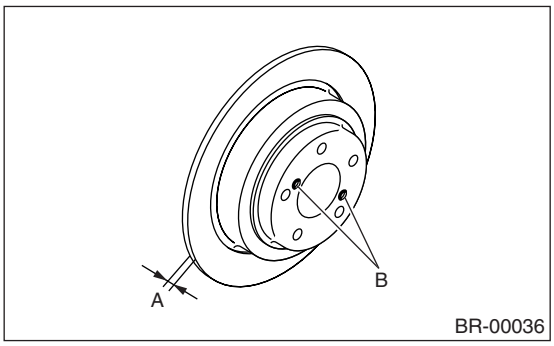

		Standard value	Service limit	Disc outer dia.
Disc rotor thickness A	14″	10 mm (0.39 in)	8.5 mm (0.335 in)	266 mm (10.47 in)
	15″	18 mm (0.71 in)	16 mm (0.63 in)	290 mm (11.42 in)
	17″	20 mm (0.79 in)	18 mm (0.71 in)	316 mm (12.44 in)

7. Rear Disc Brake Assembly

A: REMOVAL

1. 14 INCH TYPE

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Disconnect the brake hose from caliper body assembly.
5) Remove the bolt securing lock pin to caliper body.

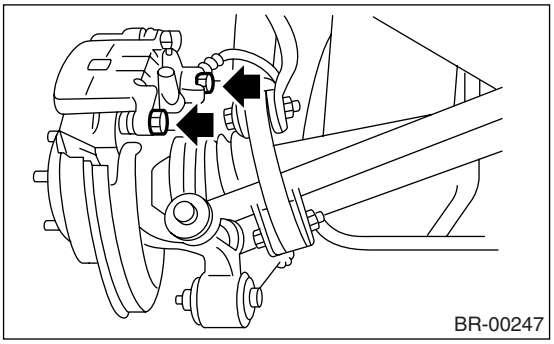

6) Raise the caliper body and move it toward vehicle center to separate it from support.
7) Remove the support from housing.

NOTE:
Remove the support only when replacing it or the rotor. It need not be removed when servicing the caliper body assembly.

8) Clean mud and foreign particles from the caliper body assembly and support.

CAUTION:
Be careful not to allow foreign particles to enter brake hose connector.

2. 15 INCH TYPE

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Remove the pads from caliper body. <Ref. to BR-37, REMOVAL, Rear Brake Pad.>
5) Disconnect the brake hose from caliper body assembly.
6) Remove the caliper body from housing.

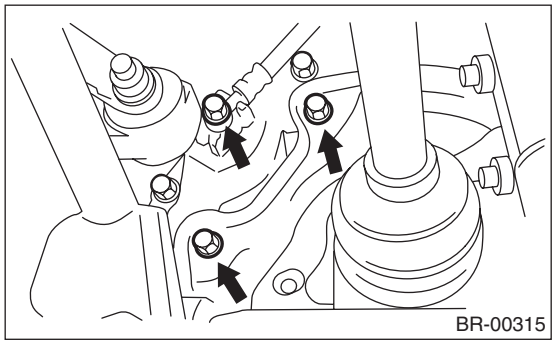

7) Clean mud and foreign particles from the caliper body assembly.

CAUTION:
Be careful not to allow foreign particles to enter brake hose connector.

3. 17 INCH TYPE

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Remove the brake pads from caliper body. <Ref. to BR-38, 17 INCH TYPE, REMOVAL, Rear Brake Pad.>
5) Disconnect the brake hose from caliper body.
6) Remove the caliper body from housing.

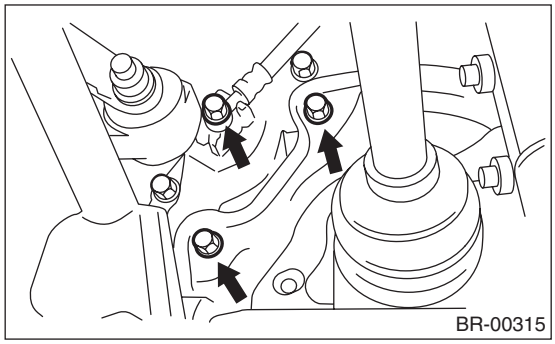

7) Clean mud and foreign particles from the caliper body.

CAUTION:
Be careful not to allow foreign particles to enter brake hose connector.

B: INSTALLATION

1. 14 INCH TYPE

1) Install the support on housing.

Tightening torque:
52 N·m (5.3 kgf-m, 38.3 ft-lb)

2) Apply thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and pad clip.
3) Install the pads on support.
4) Install the caliper body on support.

Tightening torque:
37 N·m (3.8 kgf-m, 27.5 ft-lb)

5) Replace the brake hose gaskets with new ones, and then connect the brake hose.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

6) Bleed air from the brake system.

2. 15 INCH TYPE

1) Install the caliper body on housing.

Tightening torque:
52 N·m (5.3 kgf-m, 38.3 ft-lb)

2) Apply thin coat of Molykote AS880N (Part No. K0777YA010) to the frictional portion between pad and pad clip.
3) Install the pads on caliper body.
4) Replace the brake hose gaskets with new ones, and then connect the brake hose.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

5) Bleed air from the brake system.

3. 17 INCH TYPE

1) Install the caliper body on housing.

Tightening torque:
65 N·m (6.6 kgf-m, 47.9 ft-lb)

2) Install the pads on caliper body.
3) Replace the brake hose gaskets with new ones, and then connect the brake hose.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

4) Bleed air from the brake system.

C: DISASSEMBLY

1. 14 INCH TYPE

1) Remove the boot ring.

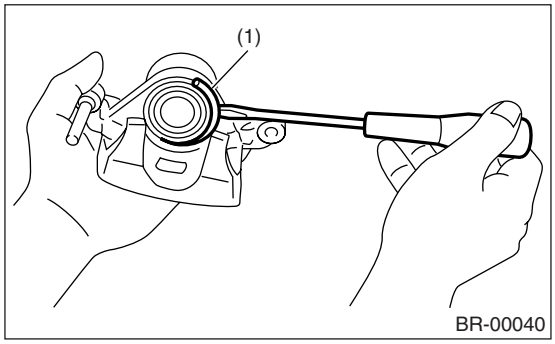

(1) Boot ring

2) Remove the piston boot.

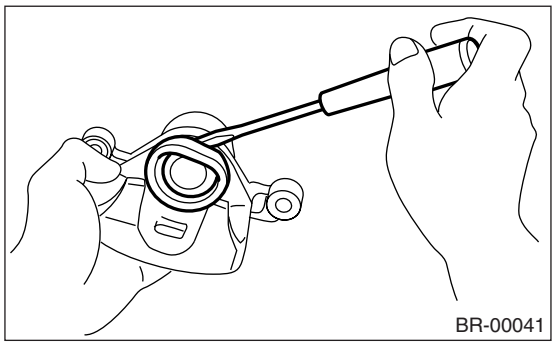

3) Place a wooden block in caliper body as shown in the figure to prevent the piston from jumping out and avoid being damaged.
4) Gradually supply compressed air via the installation hole of brake hose to force the piston out.

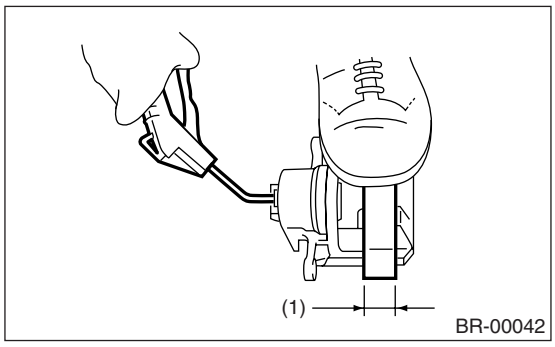

(1) Place a 30 mm (1.18 in) wide wooden block here.

5) Remove the piston seal from caliper body cylinder.

CAUTION:
Do not damage the cylinder and piston seal groove.

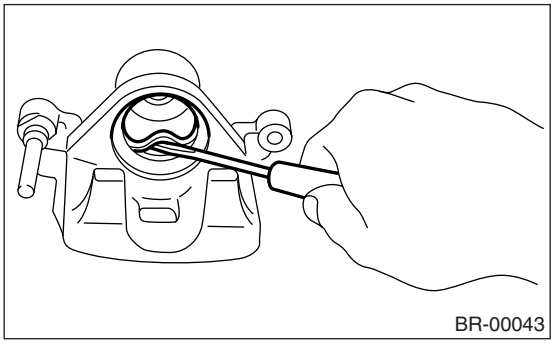

6) Remove the lock pin sleeve and boot from caliper body.
7) Remove the guide pin boot.

2. 15 INCH TYPE

1) Remove the boot ring.

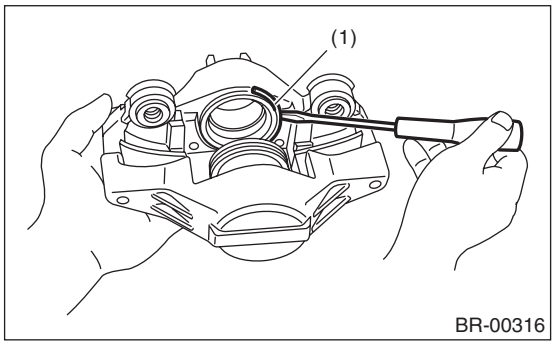

(1) Boot ring

2) Remove the piston boot.

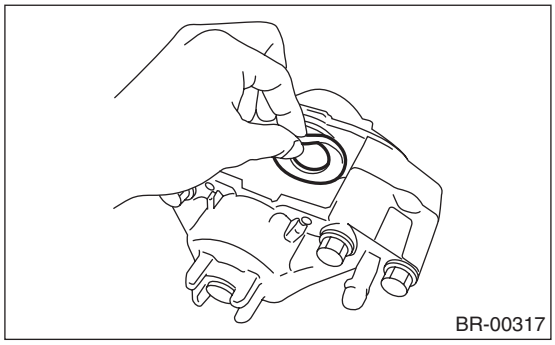

3) Place a wooden block in caliper body as shown in the figure to prevent the piston from jumping out and avoid being damaged.

4) Gradually supply compressed air via the installation hole of brake hose to force the piston out.

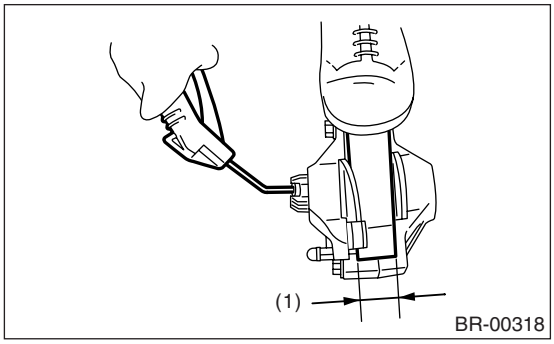

(1) Place a 30 mm (1.18 in) wide wooden block here.

5) Remove the piston seal from caliper body cylinder.

CAUTION:
Do not damage the cylinder and piston seal groove.

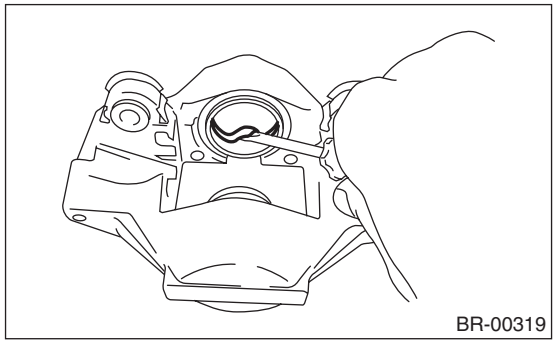

3. 17 INCH TYPE

1) Remove the piston boot from piston end.

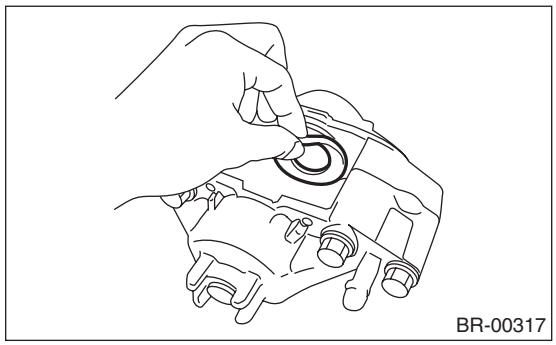

2) Place a wooden block in caliper body as shown in the figure to prevent the piston from jumping out and avoid being damaged.

3) Gradually supply compressed air via the installation hole of brake hose to force the piston out.

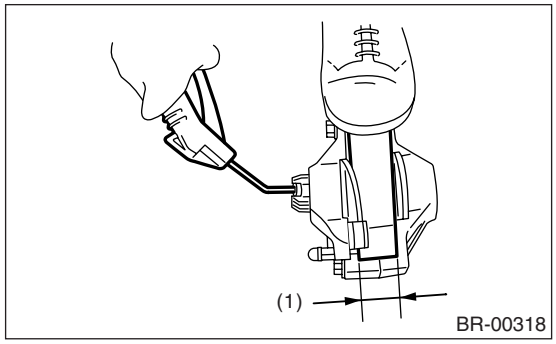

(1) Place a 20 mm (0.79 in) wide wooden block here.

4) Remove the piston seal from caliper body cylinder.

CAUTION:
Do not damage the cylinder and piston seal groove.

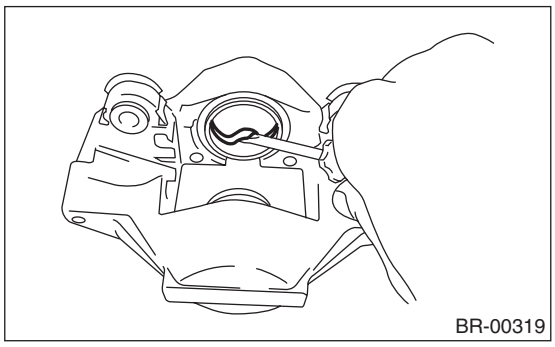

D: ASSEMBLY

1. 14 INCH TYPE

1) Clean the caliper body interior using brake fluid.
2) Apply a coat of brake fluid to the piston seal and fit piston seal in groove on caliper body.
3) Apply a coat of brake fluid to the entire inner surface of cylinder and outer surface of piston.
4) Insert the piston into cylinder.

CAUTION:
Do not force piston into cylinder.

5) Apply a coat of specified grease to the boot and fit in groove on ends of cylinder and piston.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

6) Install the piston boot to caliper body, and then attach boot ring.

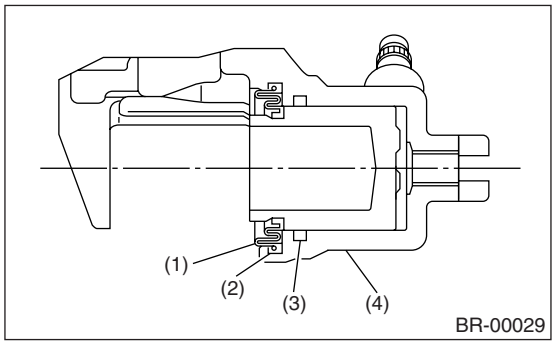

(1) Piston boot
(2) Boot ring
(3) Piston seal
(4) Caliper body

7) Apply a coat of specified grease to the guide pin, outer surface, sleeve outer surface, cylinder inner surface, and boot grooves.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

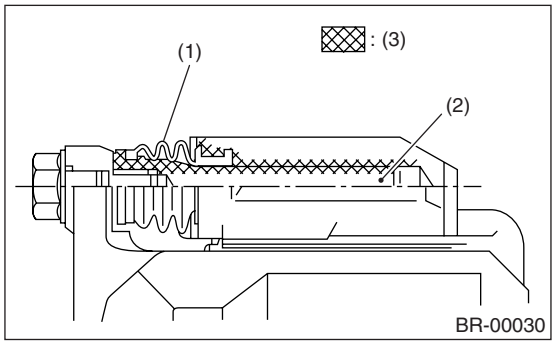

(1) Pin boot
(2) Lock pin or guide pin
(3) Apply grease.

8) Install the guide pin boot on support.
9) Install the lock pin boot on support, and then insert the lock pin sleeve into place.

2. 15 INCH TYPE

1) Clean the caliper body interior using brake fluid.
2) Apply a coat of brake fluid to the piston seal and fit piston seal in groove on caliper body.
3) Apply a coat of brake fluid to the entire inner surface of cylinder and outer surface of piston.
4) Apply a coat of specified grease to the boot and install it in the groove on piston.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

5) Insert the piston into cylinder.

CAUTION:
Do not force piston into cylinder.

6) Install the piston boot to the caliper body, and then attach boot ring.

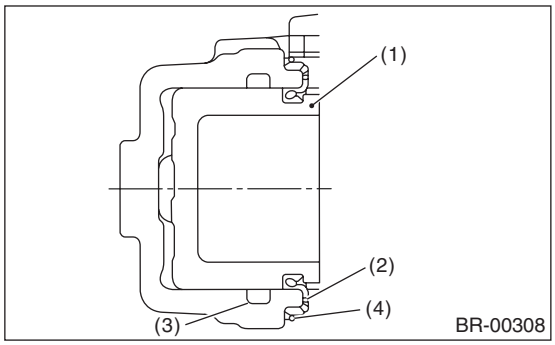

(1) Piston
(2) Piston boot
(3) Piston seal
(4) Boot ring

3. 17 INCH TYPE

1) Clean the caliper body interior using brake fluid.
2) Apply a coat of brake fluid to the piston seal and install the piston seal in groove on caliper body.
3) Apply a coat of brake fluid to the entire inner surface of cylinder and outer surface of piston.
4) Apply a coat of specified grease to the boot and install it in the groove on piston.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

5) Insert the piston into cylinder.

CAUTION:
Do not force the piston into cylinder.

6) Position the boot in grooves on cylinder and piston.

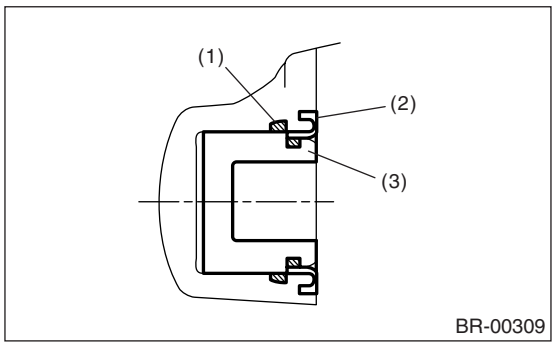

(1) Piston seal
(2) Piston boot
(3) Piston

E: INSPECTION

1) Repair or replace the faulty parts.
2) Check the caliper body and piston for uneven wear, damage or rust.
3) Check the rubber parts for damage or deterioration.

8. Rear Drum Brake Shoe

A: REMOVAL

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Release the parking brake.
5) Remove the brake drum from brake assembly.

NOTE:
• If it is difficult to remove the brake drum, remove the adjusting hole cover from back plate, and then turn adjuster assembly pawls using a flat tip screwdriver until brake shoe separates from the drum.

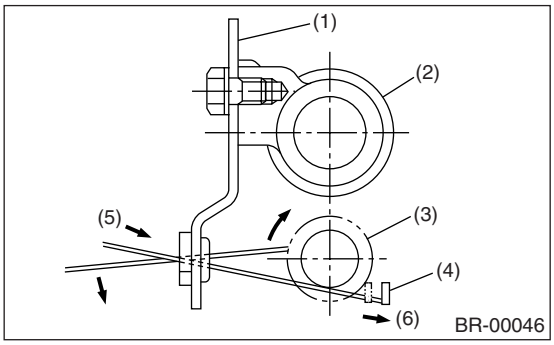

(1) Back plate
(2) Wheel cylinder
(3) Adjuster ASSY pawls
(4) Adjusting lever
(5) Tightening direction
(6) Push.

• If the brake drum is difficult to remove, drive it out by installing an 8-mm bolt into bolt hole in brake drum.

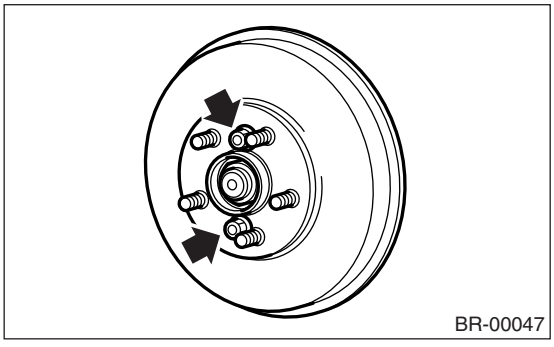

6) Hold the hold-down pin by securing rear of back plate with your hand.

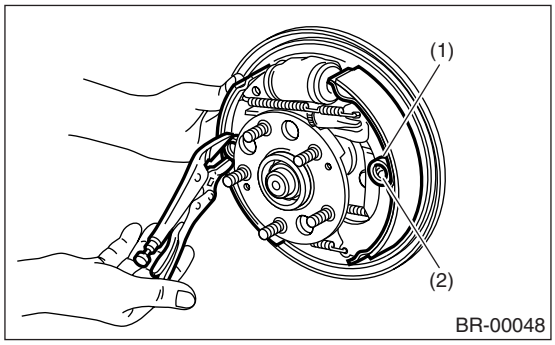

(1) Hold-down cup
(2) Hold-down pin

7) Disconnect the hold-down cup from hold-down pin by rotating hold-down cup.
8) Disconnect the lower shoe return spring from shoes.

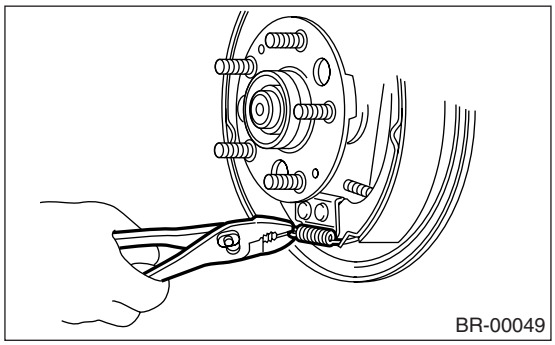

9) Remove the shoes one by one from back plate with adjuster.

CAUTION:
Be careful not to bend the parking brake cable excessively when removing brake shoes.

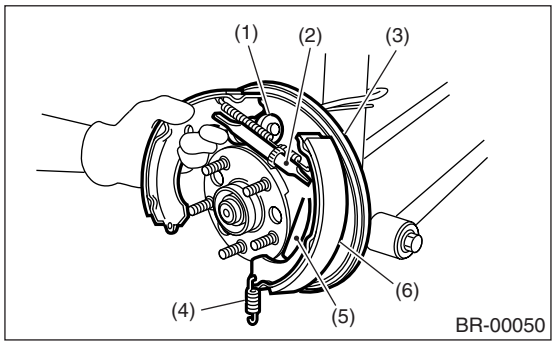

(1) Wheel cylinder
(2) Adjuster
(3) Back plate
(4) Lower shoe return spring
(5) Parking lever
(6) Trailing shoe

10) Disconnect the parking brake cable from parking lever.

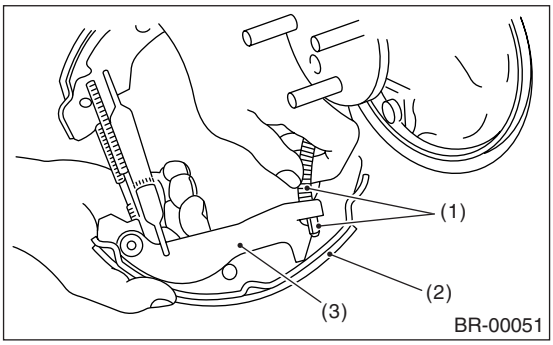

(1) Parking brake cable
(2) Trailing shoe
(3) Parking brake lever

11) Remove the upper shoe return spring and adjusting spring from brake shoe.

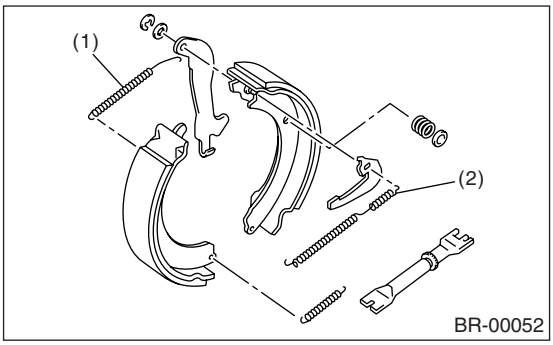

(1) Upper shoe return spring
(2) Adjusting spring

B: INSTALLATION

1) Clean the back plate and wheel cylinder.
2) Apply grease to portions indicated by arrows in the figure.

Brake grease:
Dow Corning Molykote No. 7439 (Part No. 003602001)

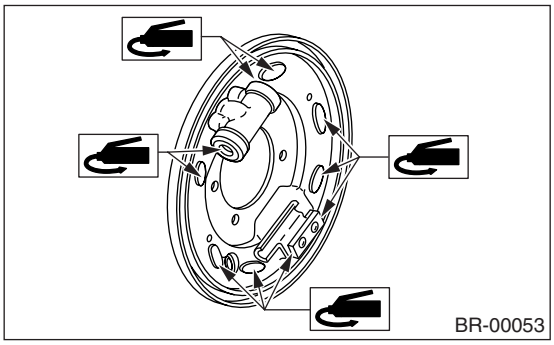

3) Apply grease to the adjusting screw and both ends of adjuster.

Brake grease:
Dow Corning Molykote No. 7439 (Part No. 003602001)

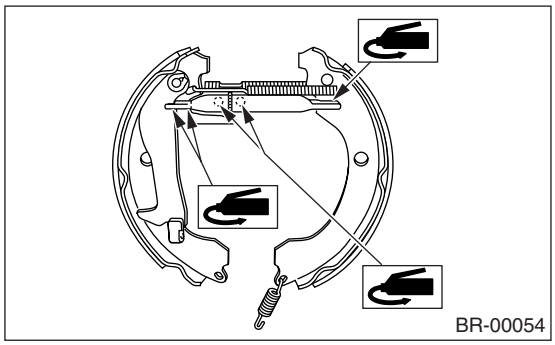

4) Connect the upper shoe return spring to shoes.
5) Connect the parking brake cable to parking lever.
6) While positioning the shoes (one at a time) in groove on wheel cylinder, secure the shoes.

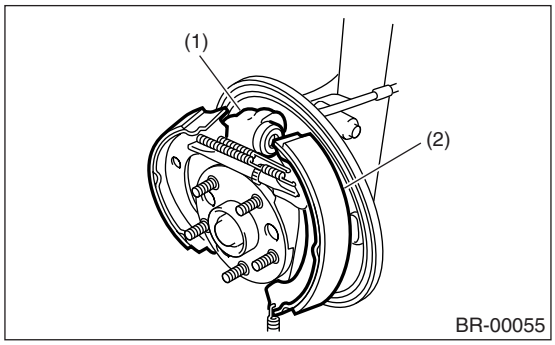

(1) Wheel cylinder
(2) Shoe (Trailing)

7) Fix the shoes by connecting hold-down cup to hold-down pin.
8) Connect the lower shoe return spring.
9) Set the outside diameter of brake shoes less than 0.5 to 0.8 mm (0.020 to 0.031 in) in comparison with inside diameter of brake drum.

C: INSPECTION

1) Measure the lining thickness. If the thickness of lining is outside the service limit, replace the shoes.

Lining thickness:
Standard 4.1 mm (0.161 in)
Service limit 1.5 mm (0.059 in)

2) If the deformation or wear of back plate, shoe, etc. are notable, replace them.
3) When the shoe return spring tension is excessively weakened, replace it, taking care to identify the upper and lower springs.

9. Rear Drum Brake Drum

A: REMOVAL

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Release the parking brake.
5) Remove the brake drum from brake assembly.

NOTE:
• If it is difficult to remove the brake drum, remove the adjusting hole cover from back plate, and then turn the adjuster assembly pawls using a flat tip screwdriver until brake shoe separates from drum.

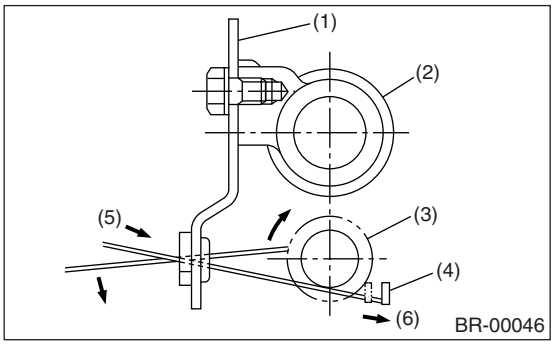

(1) Back plate
(2) Wheel cylinder
(3) Adjuster ASSY pawls
(4) Adjusting lever
(5) Tightening direction
(6) Push.

• If the brake drum is difficult to remove, drive it out by installing an 8-mm bolt into bolt hole in the brake drum.

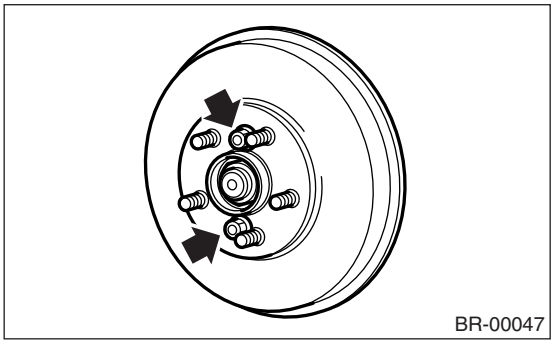

B: INSTALLATION

Set the outside diameter of brake shoes less than 0.5 to 0.8 mm (0.020 to 0.031 in) in comparison with inside diameter of brake drum.

C: INSPECTION

1) If the inside surface of brake drum is streaked, correct the surface. And, if it is unevenly worn, taperingly streaked, or the outside surface of brake drum is damaged, correct or replace it.

2) Measure the drum inner diameter. If the inner diameter of drum is outside the service limit, replace the drum.

Drum inner diameter: "L"
Standard 228.6 mm (9 in)
Service limit 230.6 mm (9.08 in)

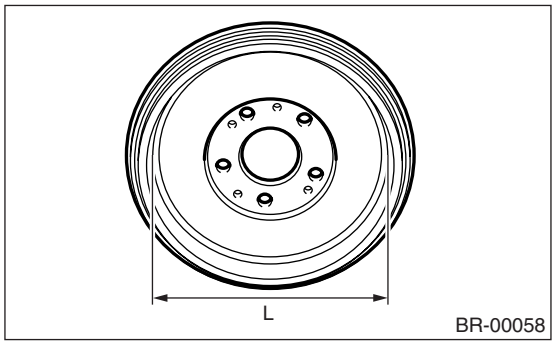

10.Rear Drum Brake Assembly

A: REMOVAL

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Set the vehicle on a lift.
2) Loosen the wheel nuts.
3) Lift-up the vehicle, and then remove the wheels.
4) Release the parking brake.
5) Remove the brake drum from brake assembly. <Ref. to BR-49, REMOVAL, Rear Drum Brake Drum.>
6) Remove the brake shoe. <Ref. to BR-47, REMOVAL, Rear Drum Brake Shoe.>
7) Disconnect the brake hose. <Ref. to BR-65, REAR BRAKE HOSE (DRUM BRAKE), REMOVAL, Brake Hose.>
8) Remove the hub. <Ref. to DS-24, REMOVAL, Rear Axle.>
9) Disconnect the ABS wheel speed sensor from back plate.
10) Remove the brake assembly.

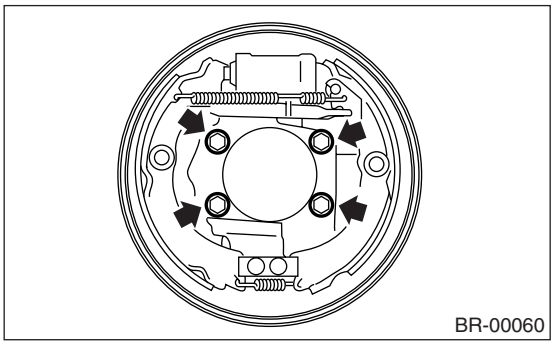
BR-00060

11) Remove the bolts installing wheel cylinder on back plate, and remove it.

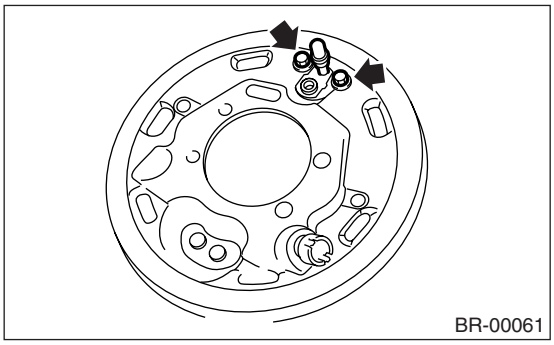
BR-00061

B: INSTALLATION

1) Clean the back plate and wheel cylinder.
2) Install the wheel cylinder on back plate, and tighten bolts.

Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

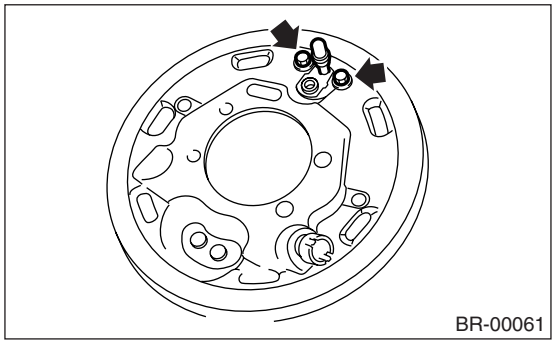
BR-00061

3) Apply grease to the portions indicated by arrows in the figure.

Brake grease:
Dow Corning Molykote No. 7439 (Part No. 003602001)

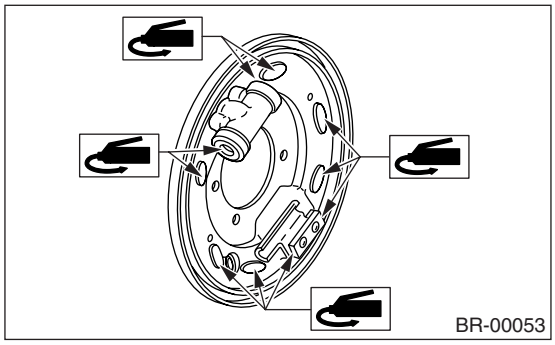
BR-00053

4) Install the brake assembly on housing, and tighten the bolts to install back plate.

Tightening torque:
52 N·m (5.3 kgf-m, 38.3 ft-lb)

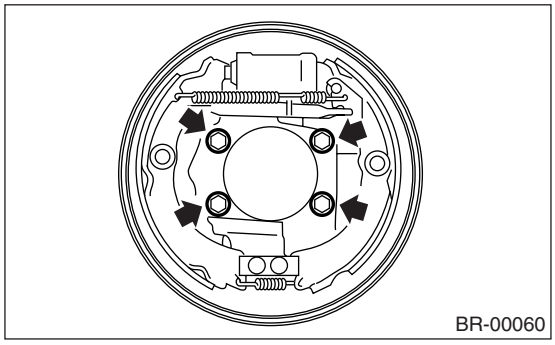
BR-00060

5) Install the hub. <Ref. to DS-27, INSTALLATION, Rear Axle.>

6) Connect the brake hose, and tighten the brake hose flange nut.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

7) Connect the ABS wheel speed sensor to back plate.

Tightening torque:
32 N·m (3.3 kgf-m, 24 ft-lb)

8) Apply grease to the adjusting screw and both ends of adjuster.

Brake grease:
Dow Corning Molykote No. 7439 (Part No. 003602001)

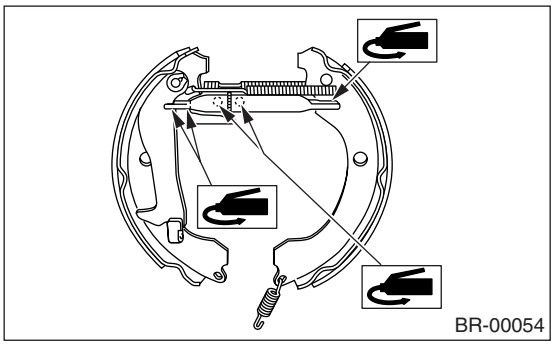

9) Install the brake shoe. <Ref. to BR-48, INSTALLATION, Rear Drum Brake Shoe.>
10) Install the brake drum. <Ref. to BR-49, INSTALLATION, Rear Drum Brake Drum.>
11) After installing the brake assembly, bleed air from the brake line. <Ref. to BR-63, Air Bleeding.>

C: DISASSEMBLY

1) Remove the right and left dust boots from wheel cylinder.

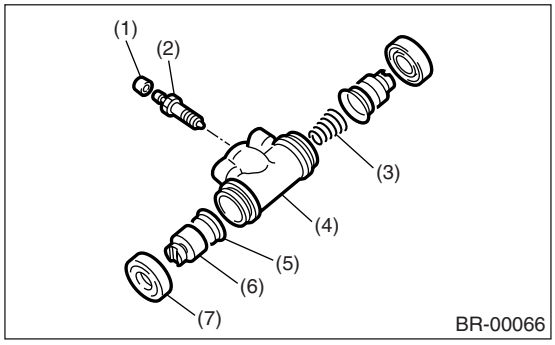

(1) Bleeder cap
(2) Bleeder screw
(3) Spring
(4) Cylinder
(5) Cup
(6) Piston
(7) Boot

2) Remove the piston, cup, spring and air bleeder screw and cap.

D: ASSEMBLY

1) Clean all parts in brake fluid. Check and replace the faulty parts.
- Cup and boot for damage or fatigue
- Cylinder, piston and spring or damage or rust formation

2) Assemble in the reverse order of disassembly.
   (1) When installing the cup, use ST, apply brake fluid to the frictional surface for smooth installation and pay attention to cup direction.
   (2) STs are available in different sizes.

CAUTION:
When replacing the repair kit, make sure that the sizes of cylinder and cup are same as those which were replaced.

ST: ADAPTER	
Applicable size	Part No.
11/16″	925460000

CAUTION:
While assembling, be careful to prevent any metal chip, dust or dirt from entering the wheel cylinder.

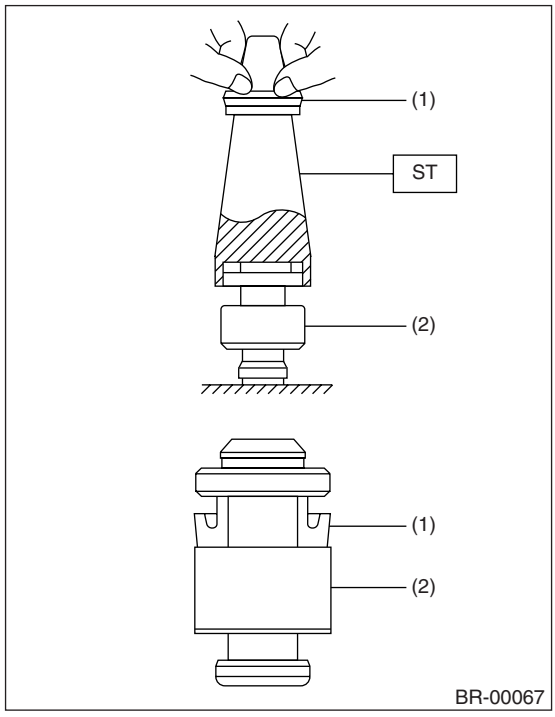

(1) Cup
(2) Piston

3) Apply rubber grease to the boot inside as shown in the figure.

Grease:
NIGLUBE RX-2 (Part No. K0779GA102)

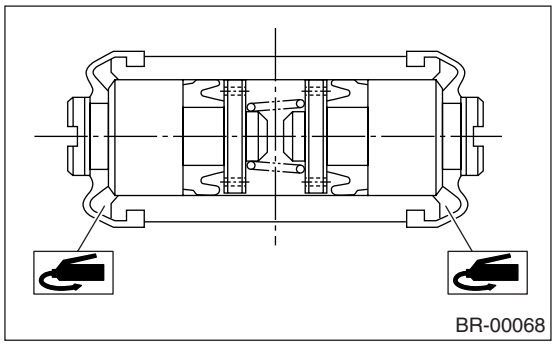

CAUTION:
Never use brake grease.

E: INSPECTION

1) If the deformation or wear of back plate, shoe, etc. are notable, replace them.

11.Master Cylinder

A: REMOVAL

CAUTION:
Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.

1) Thoroughly drain brake fluid from reservoir tank.
2) Disconnect the fluid level indicator harness connector.
3) Remove the brake pipes from master cylinder.
4) Remove the master cylinder mounting nuts, and take out master cylinder from brake booster.

B: INSTALLATION

1) To install the master cylinder to body, reverse the sequence of removal procedure.

Tightening torque:
Master cylinder mounting nut
14 N·m (1.4 kgf-m, 10.1 ft-lb)
Piping flare nut
15 N·m (1.5 kgf-m, 10.8 ft-lb)

CAUTION:
Be sure to use recommended brake fluid.

2) Bleed air from the brake system. <Ref. to BR-63, PROCEDURE, Air Bleeding.>

C: DISASSEMBLY

1) Remove mud and dirt from the surface of brake master cylinder.
2) Secure the master cylinder on a vise.
3) Remove the pin which secures reservoir tank to master cylinder, and then remove the reservoir tank and grommet.
4) Remove the cylinder pin with magnetic pick-up tool while pushing in primary piston by screwdriver which wrapped with tape. (Model with ABS)

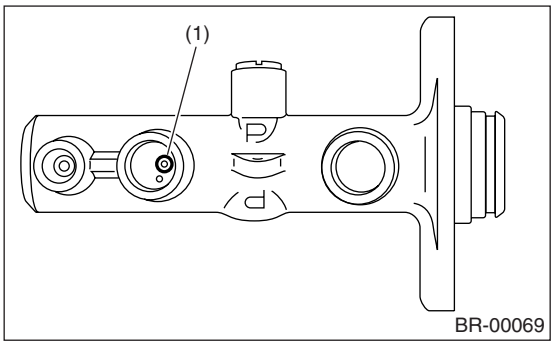

(1) Cylinder pin (straight pin)

5) Pry up the pawl, and then remove the piston retainer. Hold piston retainer tight, because the piston may jump out from master cylinder.

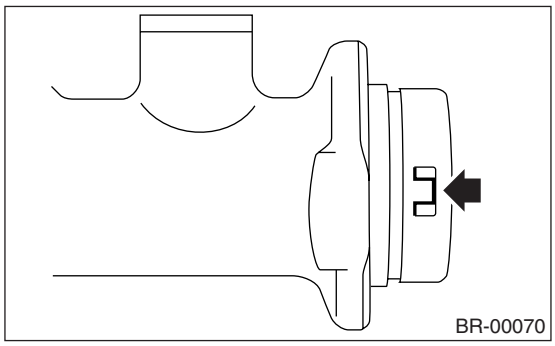

6) Extract the primary piston assembly and secondary piston assembly straight out, while taking care not to scratch the inner surface of cylinder.
7) Use brake fluid to wash the inside wall of cylinder, and piston assembly. If any damage, deformation, wear, rust, and other faults are found, replace the faulty part.

D: ASSEMBLY

1) Apply recommended brake fluid to the inside wall of cylinder, and to outer surface of the piston assembly.
2) Ensure that the inside wall of cylinder, and piston assembly are free from dirt when assembling. Install the primary piston assembly and secondary piston assembly, while taking care not to damage, scratch, or dent the cylinder inside wall, and piston assembly.
3) Install the cylinder pin while pushing in primary piston by screwdriver which wrapped with tape. (Model with ABS)
4) Install the piston retainer, and then secure it by pressing the pawl.

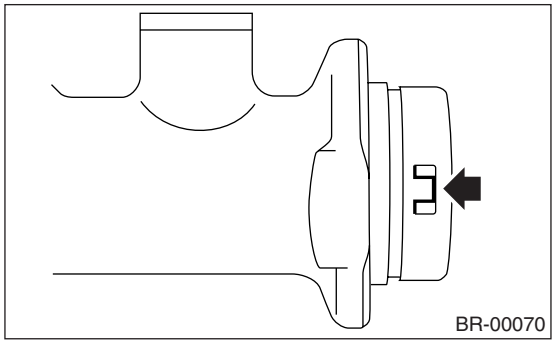

5) Install the seal to reservoir tank.

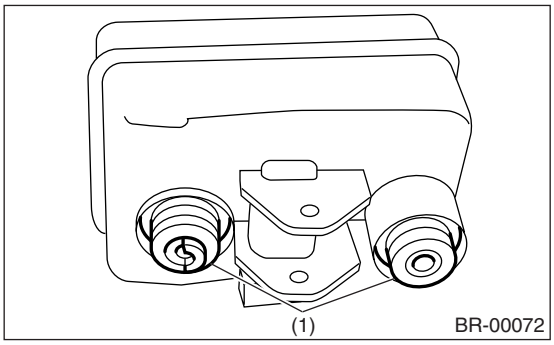

(1) Seal

6) Install the reservoir tank to master cylinder and secure with pin.

E: INSPECTION

If any damage, deformation, wear, swelling, rust, and other faults are found on the primary piston assembly, secondary piston assembly, supply the valve stopper, or gasket, replace the faulty part.

NOTE:
• The primary and secondary pistons must be replaced as complete assemblies.
• The service limit of clearance between each piston and the master cylinder inner dia. is 0.11 mm (0.0043 in).

12.Brake Booster

A: REMOVAL

1) Remove or disconnect the following parts at engine compartment.
   (1) Disconnect the connector for brake fluid level indicator.
   (2) Remove the brake pipes from master cylinder.
   (3) Remove the master cylinder installing nuts.
   (4) Disconnect the vacuum hose from brake booster.
2) Remove the following parts from pedal bracket.
   (1) Snap pin and clevis pin
   (2) Four brake booster installing nuts

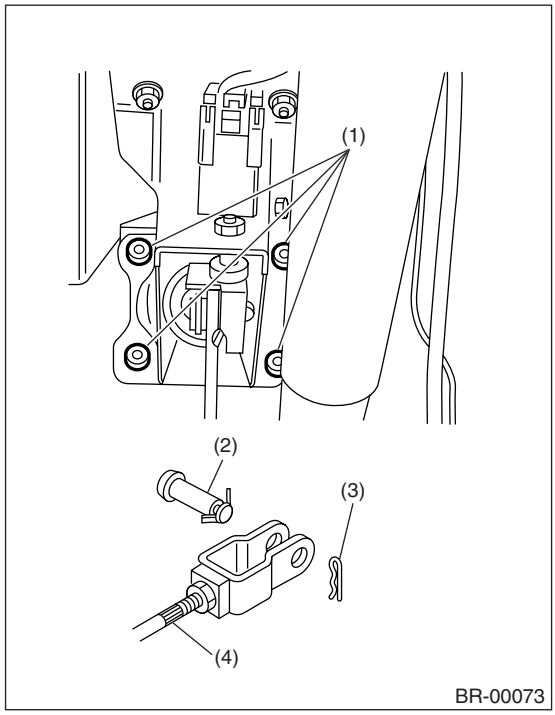

(1) Nuts
(2) Clevis pin
(3) Snap pin
(4) Operating rod

3) Remove the brake booster while shunning brake pipes.

NOTE:
• Be careful not to drop the brake booster. The brake booster should be discarded if it has been dropped.
• Use special care when handling the operating rod.
If excessive force is applied to the operating rod, sufficient to cause a change in the angle in excess of ±3°, it may result in damage to the power piston cylinder.
• Use care when placing the brake booster on floor.
• Do not change the push rod length. If it has been changed, reset the projected length “L” to standard length.

Standard L
10.05 mm (0.40 in)

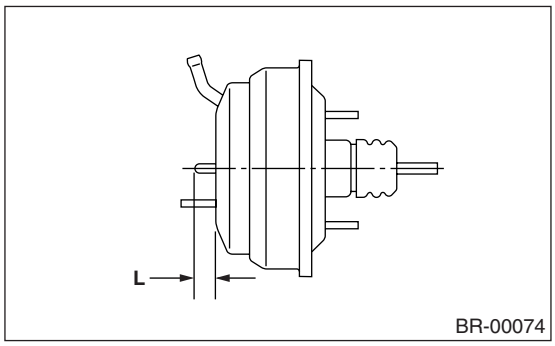

CAUTION:
If external force is applied from above when the brake booster is placed in this position, the resin portion as indicated by “P”, may be damaged.

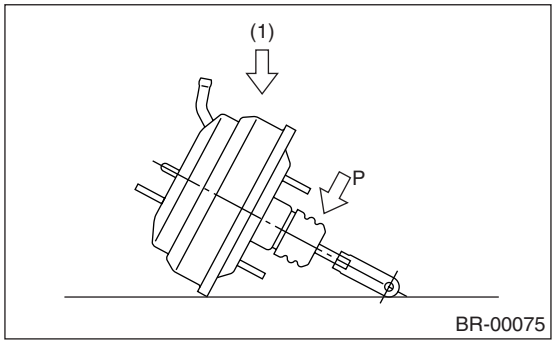

(1) Force

B: INSTALLATION

1) Adjust the operating rod of brake booster.

Standard L
LHD model: 144.6 mm (5.69 in)
RHD model: 173.2 mm (6.82 in)

If it is not within specified value, adjust it by adjusting the brake booster operating rod.

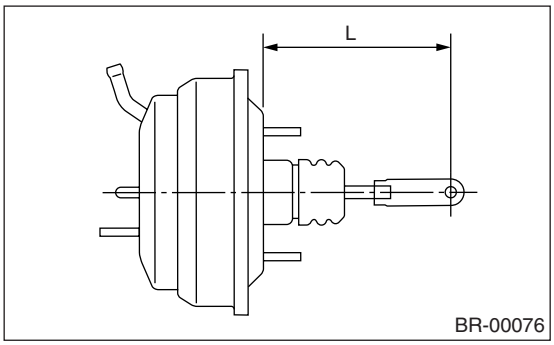

2) Mount the brake booster in position.
3) Connect the operating rod to brake pedal with clevis pin and snap pin.

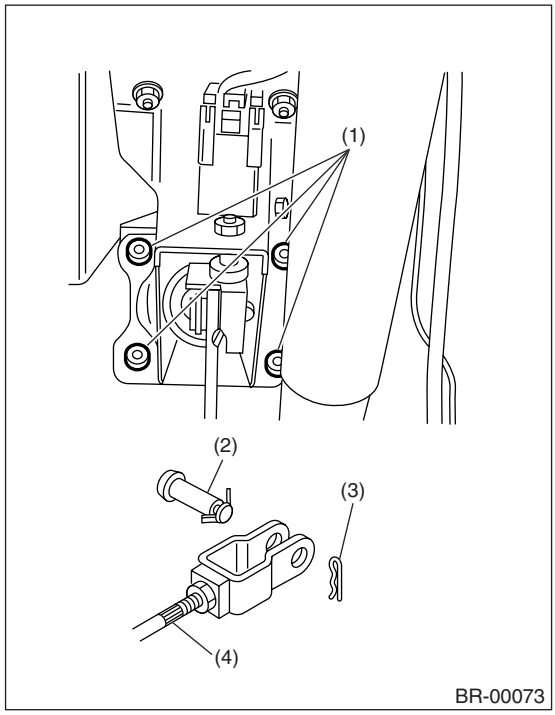

(1) Nuts
(2) Clevis pin
(3) Snap pin
(4) Operating rod

4) Connect the vacuum hose to brake booster.

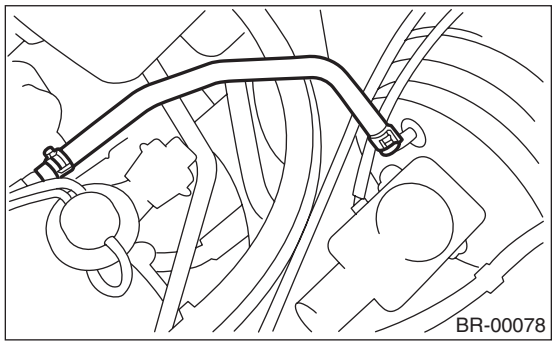

5) Mount the master cylinder onto brake booster.
6) Connect the brake pipes to master cylinder.
7) Connect the electric connector for brake fluid level indicator.
8) Measure the clearance between threaded end of stop light switch and stopper.If it is not within specified value, adjust it by adjusting the position of stop light switch. <Ref. to BR-74, ADJUSTMENT, Stop Light Switch.>
If it is not within specified value, adjust it by adjusting the position of stop light switch.

CAUTION:
Be careful not to rotate the stop light switch.

Stop light switch clearance: A
0.3 mm (0.012 in)

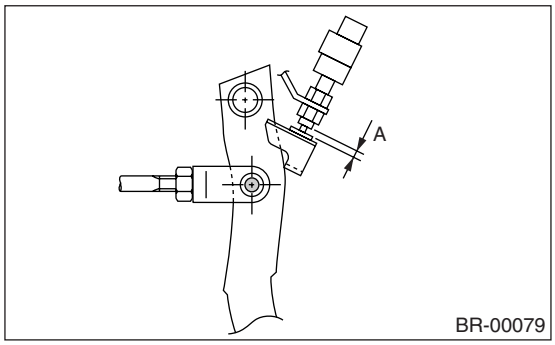

9) Apply grease to operating rod connecting pin to prevent it from wearing.
10) Bleed air from the brake system.

Tightening torque (Air bleeder screw):
Except for 17 inch type:
8 N·m (0.8 kgf-m, 5.8 ft-lb)
17 inch type:
20 N·m (2.0 kgf-m, 14.5 ft-lb)

11) Conduct road tests to ensure brakes do not drag.

C: INSPECTION

1. OPERATION CHECK (WITHOUT GAUGES)

CAUTION:
When checking operation, be sure to securely apply the parking brake.

• Checking without gauges

This method cannot determine the exact portion which has failed, but it can provide a rough understanding of the nature of failure if checking is conducted in accordance with the following procedures.

• Air tightness check

Start the engine, and run it for 1 to 2 minutes, then turn it off. Depress the brake pedal several times applying same pedal force as that used in ordinary braking operations. The pedal stroke should be greatest on 1st depression, and it should become smaller with each successive depression. If no change occurs in the pedal height while in a depressed state, the brake booster is faulty.

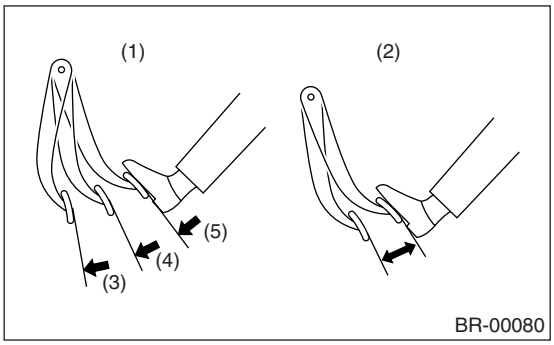

(1) OK
(2) NOT OK
(3) 1st
(4) 2nd
(5) 3rd

NOTE:
• In the event of defective operation, inspect the condition of check valve and vacuum hose.
• Replace them if faulty and conduct the test again.
• If no improvement is observed, check precisely with gauges.

• Operation check

1) With the engine off, depress the brake pedal several times applying same pedal force and make sure that pedal height does not vary with each depression of pedal.

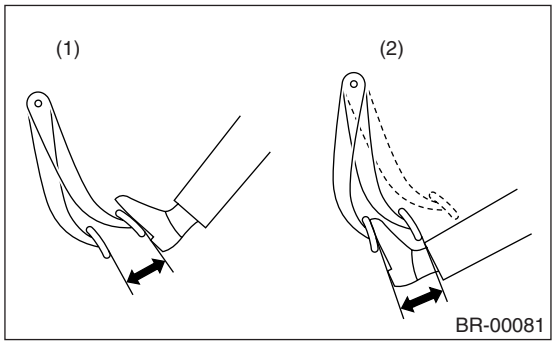

(1) When engine is stopped
(2) When engine is started

2) With the brake pedal depressed, start the engine.
3) As the engine starts, the brake pedal should move slightly toward the floor. If no change occurs in the pedal height, the brake booster is faulty.

NOTE:
If faulty, check precisely with gauges.

• Loaded air tightness check

Depress the brake pedal while engine is running, and turn off the engine while pedal is still depressed. Keep the pedal depressed for 30 seconds; if no change occurs in the pedal height, the brake booster is functioning normally; if the pedal height increases, it is faulty.

NOTE:
If faulty, check precisely with gauges.

2. OPERATION CHECK (WITH GAUGES)

CAUTION:
When checking operation, be sure to securely apply the parking brake.

• Checking with gauges

Connect gauges as shown in the figure. After bleeding air from pressure gauges, proceed to each check.

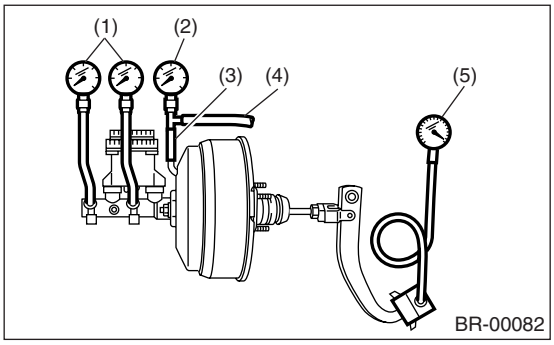

(1) Pressure gauge
(2) Vacuum gauge
(3) Adapter hose
(4) Vacuum hose
(5) Pedal force gauge

• Air tightness check

1) Start the engine and keep it running until a vacuum of 66.7 kPa (500 mmHg, 19.69 inHg) = point A is indicated on vacuum gauge. Do not depress the brake pedal.

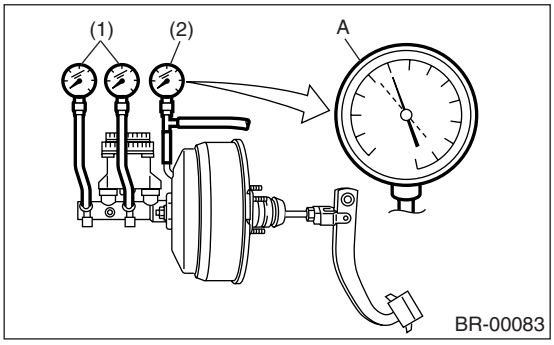

(1) Pressure gauge
(2) Vacuum gauge

2) Stop the engine and watch the gauge. If the vacuum drop range is less than 3.3 kPa (25 mmHg, 0.98 inHg) within 15 seconds after stopping engine, the brake booster is functioning properly.
If defective, the cause may be one of those listed below.

- Check valve malfunction
- Leak from vacuum hose
- Leak from the shell jointed portion or stud bolt welded portion
- Damaged diaphragm
- Leak from valve body seal and bearing portion
- Leak from plate and seal assembly portion
- Leak from poppet valve assembly portion

• Loaded air tightness check

1) Start the engine and depress brake pedal with pedal force of 196 N (20 kgf, 44 lb). Keep the engine running until a vacuum of 66.7 kPa (500 mmHg, 19.69 inHg) = point B is indicated on vacuum gauge while the pedal is still depressed.

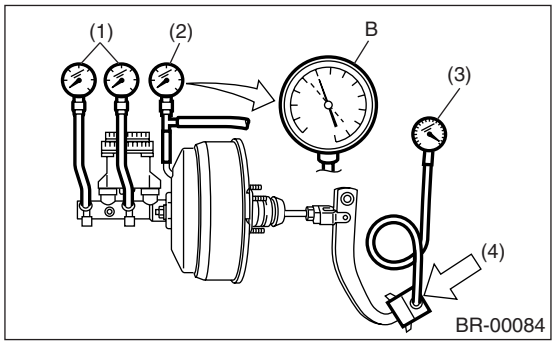

(1) Pressure gauge
(2) Vacuum gauge
(3) Pedal force gauge
(4) Depress

2) Stop the engine and watch vacuum gauge.
If the vacuum drop range is less than 3.3 kPa (25 mmHg, 0.98 inHg) within 15 seconds after stopping engine, the brake booster is functioning properly.
If defective, refer to “AIR TIGHTNESS CHECK”.
<Ref. to BR-57, INSPECTION, Brake Booster.>
3) If any fault is found on brake booster, replace the brake booster with a new one.

• Lack of boosting action check

Turn off the engine, and set the vacuum gauge reading at “0”. Then, check the fluid pressure when brake pedal is depressed. The pressure must be greater than the standard value listed.

Brake pedal force		147 N (15 kgf, 33 lb)	294 N (30 kgf, 66 lb)
Fluid pressure	14″	686 kPa (7 kg/cm^2, 100 psi) [588 kPa (6 kg/cm^2, 85 psi)]	1,961 kPa (20 kg/cm^2, 284 psi) [1,667 kPa (17 kg/cm^2, 242 psi)]
	15″	588 kPa (6 kg/cm^2, 85 psi)	1,471 kPa (15 kg/cm^2, 213 psi)
	16″		
	17″		

[ ] : Model with ABS

• Boosting action check

Set the vacuum gauge reading at 66.7 kPa (500 mmHg, 19.69 inHg) by running engine. Then, check the fluid pressure when brake pedal is depressed. The pressure must be greater than the standard value listed.

Brake pedal force		147 N (15 kgf, 33 lb)	294 N (30 kgf, 66 lb)
Fluid pressure	14″	5,982 kPa (61 kg/cm^2, 868 psi)	7,649 kPa (78 kg/cm^2, 1,109 psi) [8,434 kPa (86 kg/cm^2, 1,223 psi)]
	15″	5,296 kPa (54 kg/cm^2, 768 psi)	9,120 kPa (93 kg/cm^2, 1,323 psi)
	16″	4,707 kPa (48 kg/cm^2, 683 psi)	
	17″	4,021 kPa (41 kg/cm^2, 583 psi)	8,336 kPa (85 kg/cm^2, 1,209 psi)

[ ] : Model with ABS

13.Proportioning Valve

A: REMOVAL

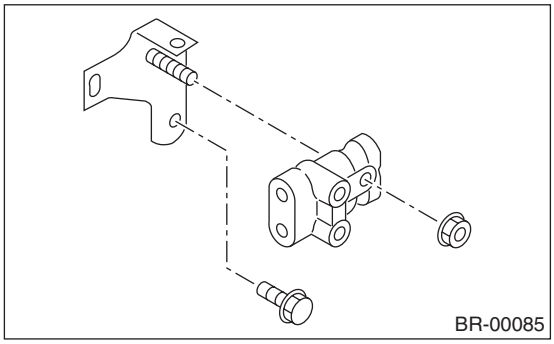

1) Remove the brake pipe from proportioning valve at four places.
2) Remove the proportioning valve from its bracket.

NOTE:
Do not disassemble or adjust the proportioning valve. (The proportioning valve must be replaced as an assembly.)

B: INSTALLATION

1) Install the proportioning valve to bracket.
2) Connect the brake pipes correctly to proportioning valve.
3) Bleed air, and then check each joint of the brake pipe for oil leaks.

Tightening torque:
Proportioning valve to brake pipe flare nut:
15 N·m (1.5 kgf-m, 10.8 ft-lb)
Proportioning valve to bracket
18 N·m (1.8 kgf-m, 13.0 ft-lb)

C: INSPECTION

1) Install the oil pressure gauges to measure the master cylinder fluid pressure (front wheel brake fluid pressure) and rear wheel cylinder fluid pressure.
2) Bleed air from the oil pressure gauges.
3) Check the master cylinder fluid pressure and rear wheel cylinder fluid pressure.
The standard values are shown in the figure.

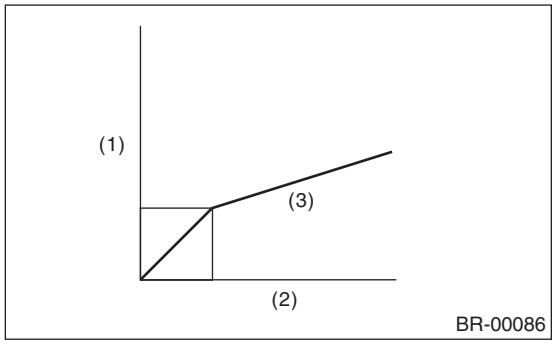

(1) Rear wheel cylinder fluid pressure: P_3
(2) Master cylinder fluid pressure: P_2
(3) When both circuits are normal

4) For the oil pressure in case of split point, refer to “SPECIFICATIONS”.
<Ref. to BR-2, SPECIFICATIONS, General Description.>

14.Brake Fluid

A: INSPECTION

1) Check that the brake fluid level remains between “MIN” and “MAX”. If out of the specified range, refill or drain fluid. If the fluid level becomes close to “MIN”, refill the fluid.
2) Check the fluid for discoloration. If the fluid color has excessively changed, drain the fluid and refill with new fluid.

B: REPLACEMENT

CAUTION:
• To always maintain the brake fluid characteristics, replace the brake fluid according to maintenance schedule or earlier than that when used in severe condition.
• The FMVSS No. 116, fresh DOT3 brake fluid must be used.
• Cover the bleeder with waste cloth, when loosening it, to prevent brake fluid from being splashed over surrounding parts.
• Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.
• Avoid mixing different brands of brake fluid to prevent degrading the quality of fluid.
• Be careful not to allow dirt or dust to get into the reservoir tank.

NOTE:
• During bleeding operation, keep the brake reservoir tank filled with brake fluid to eliminate entry of air.
• The brake pedal operating must be very slow.
• For convenience and safety, two people should do the work.
• The amount of brake fluid required is approx. 500 mℓ (16.9 US fl oz, 17.6 Imp fl oz) for total brake system.

1) Either lift-up the vehicle and place a safety stand under it, or lift-up vehicle.
2) Remove both front and rear wheels.
3) Draw out the brake fluid from master cylinder with syringe.
4) Refill the reservoir tank with recommended brake fluid.

Recommended brake fluid:
FMVSS No. 116, fresh DOT3 brake fluid

5) Install one end of a vinyl tube onto the air bleeder and insert the other end of the tube into a container to collect the brake fluid.

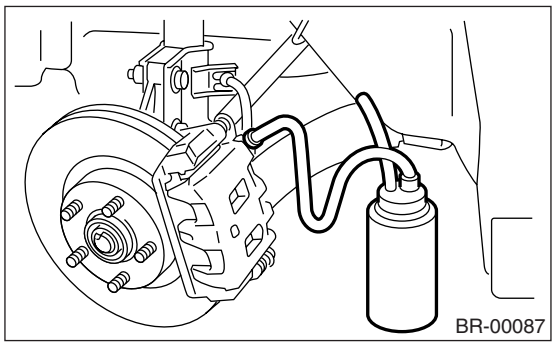

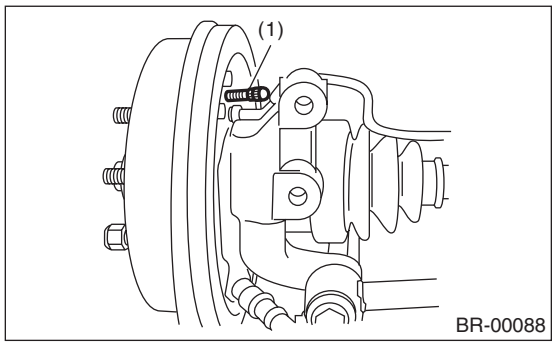

(1) Air bleeder screw

CAUTION:
Brake fluid replacement sequence; (A) Front right → (B) Rear left → (C) Front left → (D) Rear right

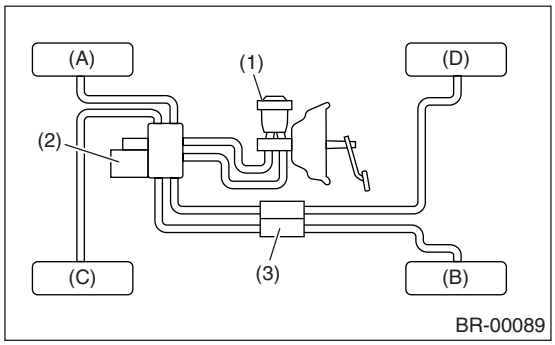

(1) Master cylinder
(2) Hydraulic unit
(3) Proportioning valve

6) Instruct your co-worker to depress the brake pedal slowly two or three times and then hold it depressed.
7) Loosen the bleeder screw approx. 1/4 turn until a small amount of brake fluid drains into container, and then quickly tighten the screw.

8) Release the brake pedal slowly. Repeat steps 6) through 8) until there are no air bubbles in the drained brake fluid and new fluid flows through vinyl tube.

NOTE:
Add brake fluid as necessary while performing air bleed operation, in order to prevent the tank from running short of brake fluid.

9) After completing the bleeding operation, hold brake pedal depressed and tighten screw and install bleeder cap.

Tightening torque (Bleeder screw):
Except for 17 inch type:
8 N·m (0.8 kgf-m, 5.8 ft-lb)
17 inch type:
20 N·m (2.0 kgf-m, 14.5 ft-lb)

10) Bleed air from each wheel cylinder using the same procedures as described in steps 6) through 8) above.

11) Depress the brake pedal with a force of approx. 294 N (30 kg, 66 lb) and hold it there for approx. 20 seconds. At this time check for mix in air and pedal height change. Visually inspect the bleeder screws and brake pipe joints to make sure that there is no fluid leakage.

12) Install the wheels, and drive the vehicle for a short distance between 2 to 3 km (1 to 2 miles) to make sure that brakes are operating properly.

15.Air Bleeding

A: PROCEDURE

CAUTION:
• The FMVSS No. 116, fresh DOT3 brake fluid must be used.
• Cover the bleeder with waste cloth when loosening it to prevent brake fluid from being splashed over surrounding parts.
• Do not allow brake fluid to come in contact with vehicle body; wash away with water and wipe off completely if spilled.
• Avoid mixing different brands of brake fluid to prevent degrading the quality of the fluid.
• Be careful not to allow dirt or dust to get into the reservoir tank.

1. MASTER CYLINDER

NOTE:
• If the master cylinder is disassembled or reservoir tank is empty, bleed the master cylinder.
• During the bleeding operation, keep the brake reservoir tank filled with brake fluid to eliminate entry of air.
• The brake pedal operating must be very slow.
• For convenience and safety, two people should do the work.

1) Loosen the wheel nuts, jack-up the vehicle, support it with safety stands, and remove the wheel.
2) Disconnect the brake line at primary and secondary sides.
3) Put a plastic bag cover on master cylinder.
4) Carefully depress and hold the brake pedal.

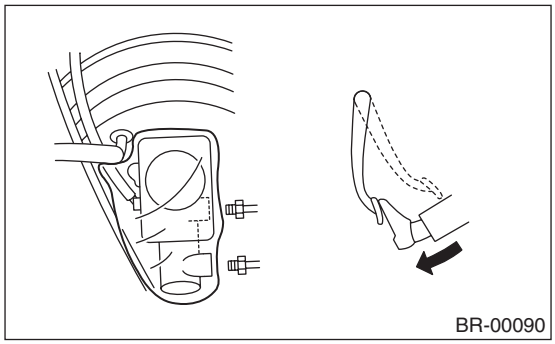
BR-00090

5) Close the outlet plug with your finger, and then release the brake pedal.

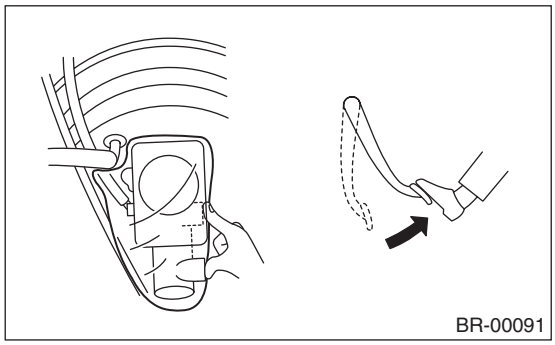
BR-00091

6) Repeat step4) and 5) until the brake fluid is completely bled from outlet plug.
7) Remove the plastic bag.
8) Install the brake pipes to master cylinder.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

9) Bleed air from the brake line. <Ref. to BR-63, BRAKE LINE, PROCEDURE, Air Bleeding.>

2. BRAKE LINE

NOTE:
• During the bleeding operation, keep the brake reservoir tank filled with brake fluid to eliminate entry of air.
• The brake pedal operating must be very slow.
• For convenience and safety, two people should do the work.

1) Make sure that there is no leak from the joints and connections of brake system.
2) Fit one end of vinyl tube into the air bleeder and put the other end into a brake fluid container.

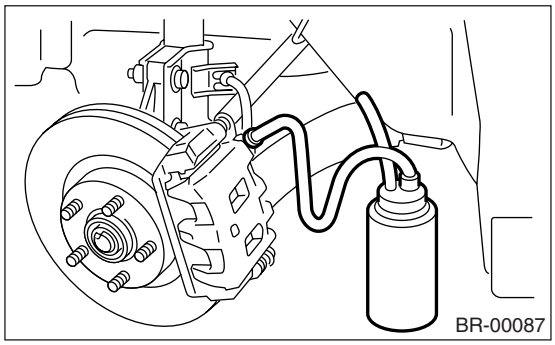
BR-00087

CAUTION:
Brake fluid replacement sequence; (A) Front right → (B) Rear left → (C) Front left → (D) Rear right

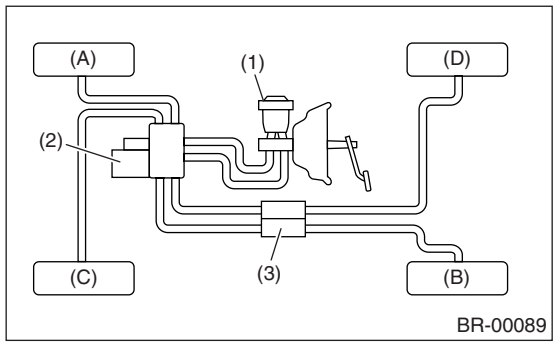

(1) Master cylinder
(2) Hydraulic unit
(3) Proportioning valve

3) Slowly depress the brake pedal and keep it depressed. Then, open the air bleeder to discharge air together with the fluid.
Release the air bleeder for 1 to 2 seconds.
Next, with the bleeder closed, slowly release the brake pedal.
Repeat these steps until there are no more air bubbles in the vinyl tube.
Allow 3 to 4 seconds between two brake pedal operations.

CAUTION:
Cover the bleeder with waste cloth, when loosening it, to prevent brake fluid from being splashed over surrounding parts.

NOTE:
The brake pedal operating must be very slow.

4) Tighten the air bleeder securely when no air bubbles are visible.

Air bleeder tightening torque:
Except for 17 inch type:
8 N·m (0.8 kgf-m, 5.8 ft-lb)
17 inch type:
20 N·m (2.0 kgf-m, 14.5 ft-lb)

5) Perform these steps for the brakes connecting to secondary chamber of master cylinder, first, and then for the ones connecting to primary chamber. With all procedures completed, fully depress the brake pedal and keep it in that position for approx. 20 seconds to make sure that there is no leak evident in the entire system.

6) Check the pedal stroke.
While the engine is idling, depress the brake pedal with a 490 N (50 kgf, 110 lb) load and measure the distance between brake pedal and steering wheel. With the brake pedal released, measure the distance between pedal and steering wheel again. The difference between the two measurements must not be more than specified.

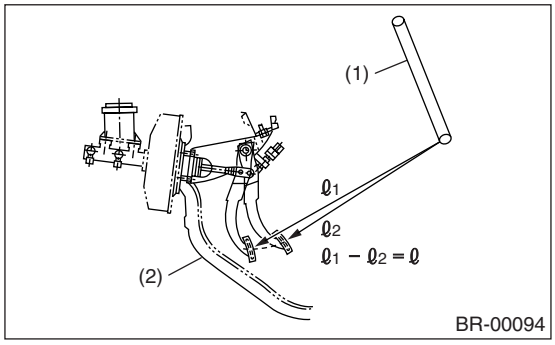

(1) Steering wheel
(2) Toe board

Specified pedal stroke
90 mm (3.54 in)
When depressing brake pedal with a 490 N (50 kgf, 110 lbf) load.

7) If the distance is more than the specifications, there is a possibility that air is in the brake line. Bleed the brake line until pedal stroke meets the specification.
8) Operate the hydraulic control unit in the sequence control mode. <Ref. to ABS-10, ABS Sequence Control.>
9) Recheck the pedal stroke.
10) If the distance is more than specifications, there is a possibility air is in the inside of hydraulic unit. Repeat above steps 2) to 9) above until pedal stroke meets the specification.
11) Add brake fluid to the required level (MAX. level) of reservoir tank.
12) As a final step, test run the vehicle at low speed and apply brakes relatively hard 2 to 3 times to ensure that brakes provide normal braking action on all four wheels without dragging and uneven braking.

16.Brake Hose

A: REMOVAL

1. FRONT BRAKE HOSE

1) Separate the brake pipe from brake hose.
(Always use the flare nut wrench and be careful not to deform the flare nut.)
2) Pull out the clamp to remove brake hose.
3) Remove the bolt at strut and union bolt.

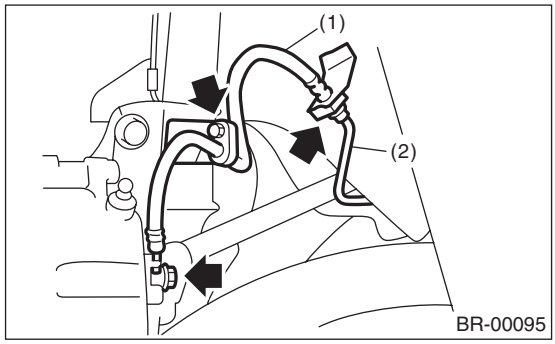

(1) Brake hose
(2) Brake pipe

2. REAR BRAKE HOSE (DISC BRAKE)

1) Separate the brake pipe from brake hose.

NOTE:
Always use the flare nut wrench and be careful not to deform the flare nut.

2) Remove the clamp and union bolt.

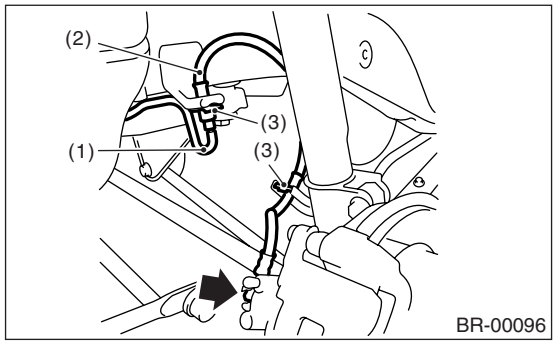

(1) Brake pipe
(2) Brake hose
(3) Brake hose clamp

3. REAR BRAKE HOSE (DRUM BRAKE)

1) Separate the brake pipe from brake hose using a flare nut wrench.
2) Remove two clamps.
3) Separate the brake hose from wheel cylinder.

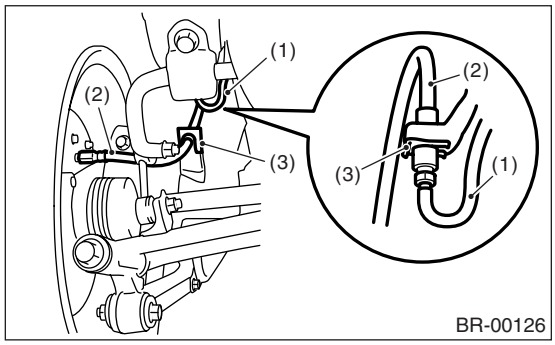

(1) Brake pipe
(2) Brake hose
(3) Brake hose clamp

B: INSTALLATION

1. FRONT BRAKE HOSE

1) Secure the brake hose to strut.

Tightening torque:
32 N·m (3.3 kgf-m, 23.6 ft-lb)

2) Install the brake hose to caliper using a new gasket.

Tightening torque (Union bolt):
18 N·m (1.8 kgf-m, 13.0 ft-lb)

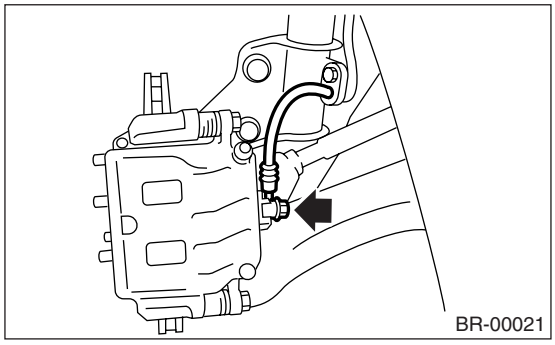

3) Position the disc in straight-forward direction and route brake hose through hole in bracket on wheel apron side.

CAUTION:
Be sure brake hose is not twisted.

4) Temporarily tighten the flare nut to connect brake pipe and hose.
5) Fix the brake hose with clamp at wheel apron bracket.
6) While holding the hexagonal part of brake hose fitting with a wrench, tighten the flare nut to the specified torque.

Tightening torque (Brake pipe flare nut):
15 N·m (1.5 kgf-m, 10.8 ft-lb)

7) Bleed air from the brake system.

2. REAR BRAKE HOSE (DISC BRAKE)

1) Pass the brake hose through hole of bracket, and then lightly tighten the flare nut to connect brake pipe.
2) Insert the clamp upward to fix brake hose.
3) Install the brake hose to caliper using a new gasket.

Tightening torque (Union bolt):
18 N·m (1.8 kgf-m, 13.0 ft-lb)

4) While holding the hexagonal part of brake hose fitting with a wrench, tighten the flare nut to the specified torque.

Tightening torque (Brake pipe flare nut):
15 N·m (1.5 kgf-m, 10.8 ft-lb)

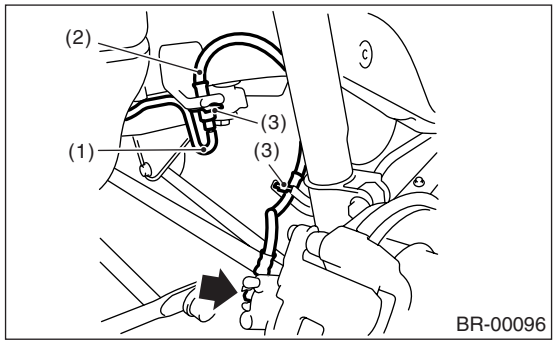

(1) Brake pipe
(2) Brake hose
(3) Brake hose clamp

5) Bleed air from the brake system.

3. REAR BRAKE HOSE (DRUM BRAKE)

1) Install the brake hose to wheel cylinder.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

2) Secure the brake hose to bracket on strut using a clamp.
3) Connect the brake hose through hole in bracket on body.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

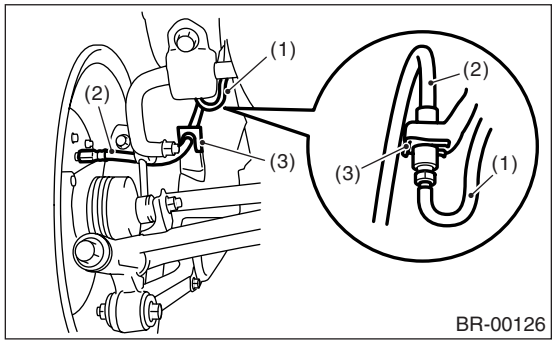

(1) Brake pipe
(2) Brake hose
(3) Brake hose clamp

4) Bleed air from the brake system.

C: INSPECTION

Ensure there are no cracks, breakage, or damage on the hoses. Check the joints for fluid leakage. If any cracks, breakage, damage or leakage is found, repair or replace the hose.

17.Brake Pipe

A: REMOVAL

NOTE:
Airbag system wiring harness is routed near the center brake pipe.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
• Be careful not to damage the airbag system wiring harness when servicing the center brake pipe.
• When removing the brake pipe, make sure that it is not bent.

B: INSTALLATION

NOTE:
Airbag system wiring harness is routed near the center brake pipe.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
• Be careful not to damage the airbag system wiring harness when servicing the center brake pipe.
• When installing the brake pipe, make sure that it is not bent.
• After installing the brake pipe and hose, bleed the air.
• After installing the brake hose, make sure that it does not touch the tire or suspension assembly, etc.

Brake pipe tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

C: INSPECTION

Ensure there are no cracks, breakage, or damage on pipes. Check the joints for fluid leakage. If any cracks, breakage, damage or leakage is found, repair or replace the pipe.

NOTE:
Use a mirror when inspecting low-visible part or back side.

18.Brake Pedal

A: REMOVAL

1. LHD 1.6 L MT MODEL

1) Disconnect the ground cable from battery.
2) Disconnect the clutch cable from release lever.
3) Remove the instrument panel lower cover from instrument panel.
4) Disconnect the connectors (for stop light switch, etc.) from pedal bracket.
5) Remove the clevis pin which secures the pedal to push rod.
6) Remove the bolts and nuts which secure the brake and clutch pedals, and then remove the pedal bracket and clutch cable as a unit.

CAUTION:
Before removing the clutch cable from toe board, remove the grommet. Slowly remove the clutch cable, being careful not to scratch it.

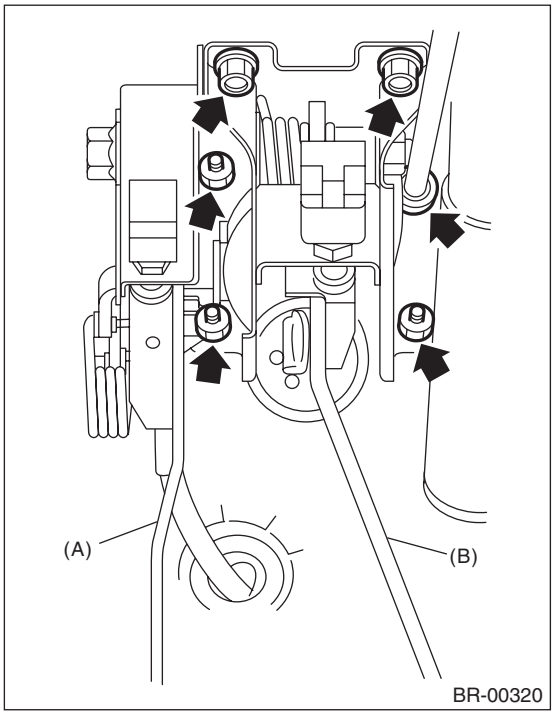

(A) Clutch pedal
(B) Brake pedal

7) Depress the clutch pedal, and then disconnect the clutch cable from clutch pedal.

2. LHD 2.0 L MT MODEL

1) Remove the steering shaft.
2) Disconnect the connectors (for stop light switch, etc.) from pedal bracket.
3) Remove the clevis pin which secures the lever to push rod.
4) Remove the nut which secures the clutch master cylinder.
5) Remove the accelerator pedal.
6) Remove the bolts and nuts which the secure pedal bracket.

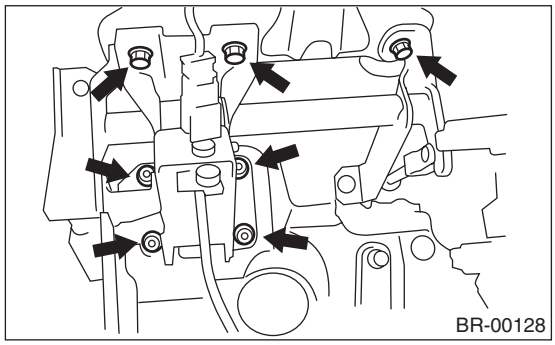

3. LHD 2.5 L MT MODEL

Refer to LHD 2.0 L MT MODEL for removal. <Ref. to BR-68, LHD 2.0 L MT MODEL, REMOVAL, Brake Pedal.>

4. LHD AT MODEL

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover from instrument panel.
3) Remove the clevis pin which secures the brake pedal to brake booster operating rod. Also disconnect the stop light switch connector.

4) Remove the four bolts and four nuts which secure the brake pedal to pedal.

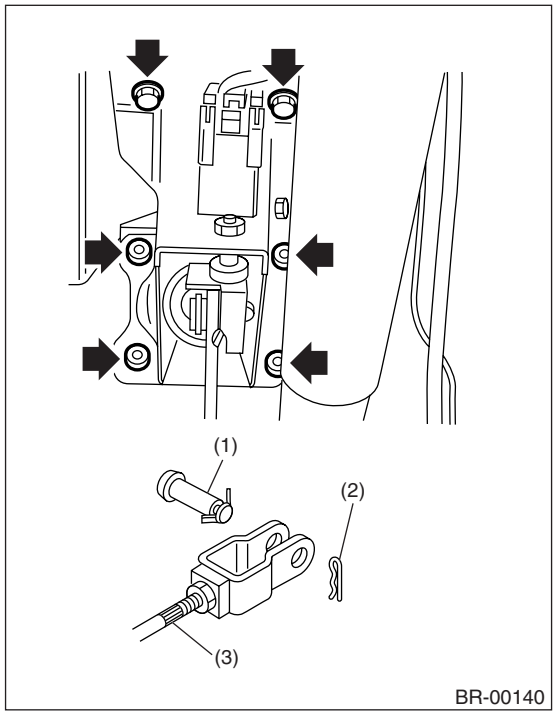

(1) Clevis pin
(2) Snap pin
(3) Operating rod

5. RHD AT MODEL

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover from instrument panel.
3) Disconnect the connectors (for stop light switch, etc.) from pedal bracket.
4) Remove the snap pin and clevis pin.
5) Remove the four bolts which secure the brake pedal bracket (rear side).

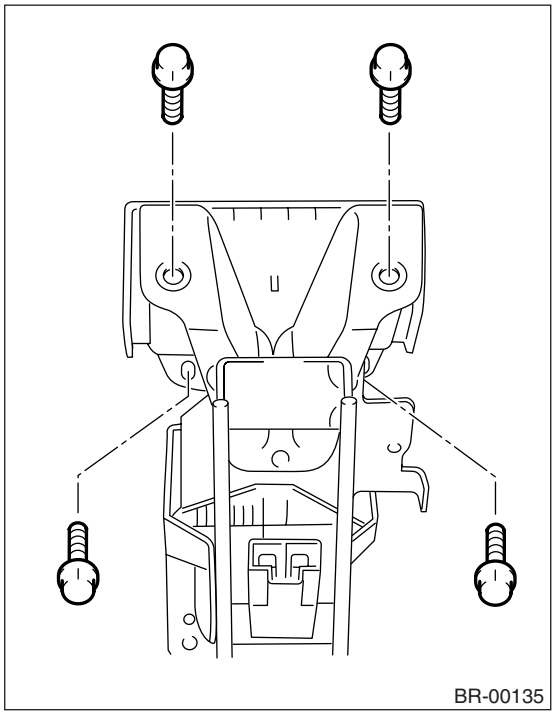

6) Remove the nuts which secure the brake pedal bracket (front side).

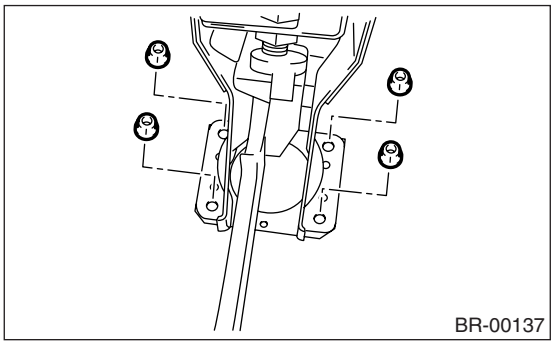

7) Remove the brake pedal without prying the bracket.

6. RHD MT MODEL

Refer to RHD AT MODEL. <Ref. to BR-69, RHD AT MODEL, REMOVAL, Brake Pedal.>

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:
• If the cable clamp is damaged, replace it with a new one.
• Never fail to cover the outer cable end with boot.
• Be careful not to kink the accelerator cable.
• Always use new clevis pins.

2) Adjust the clutch pedal <Ref. to CL-45, ADJUSTMENT, Clutch Pedal.>
3) Inspect the brake pedal after installation <Ref. to BR-72, INSPECTION, Brake Pedal.>

C: DISASSEMBLY

1. LHD 1.6 L MT MODEL

1) Remove the stop light switch.
<Ref. to BR-73, REMOVAL, Stop Light Switch.>
2) Remove the nut and pull out the bolt until brake pedal is able to remove, then remove brake pedal.

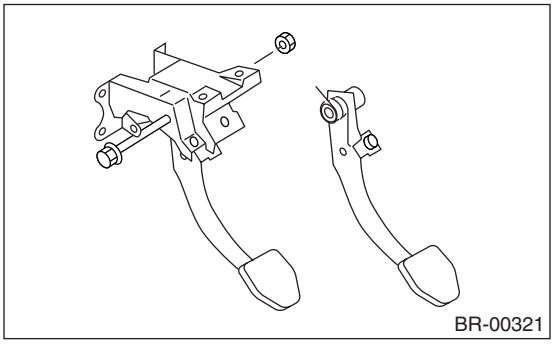
BR-00321

3) Remove the bushing, spring and stopper.

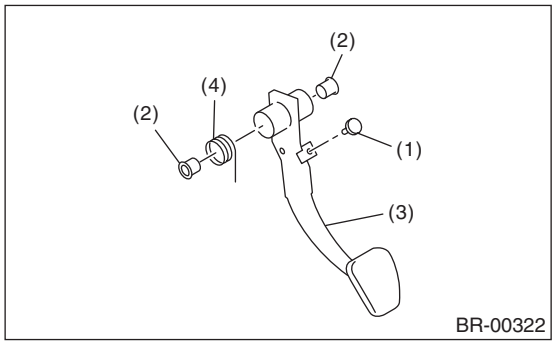

BR-00322

(1) Stopper
(2) Bushing
(3) Brake pedal
(4) Brake pedal spring

4) Remove the brake pad.

2. LHD 2.0 L MT MODEL

1) Remove the brake switch.
<Ref. to BR-73, REMOVAL, Stop Light Switch.>
2) Remove the clutch pedal.
<Ref. to CL-42, DISASSEMBLY, Clutch Pedal.>
3) Remove the clutch master cylinder bracket.

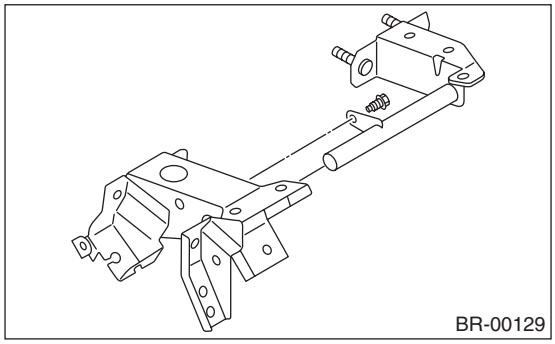
BR-00129

4) Remove the bushing, spring and stopper.

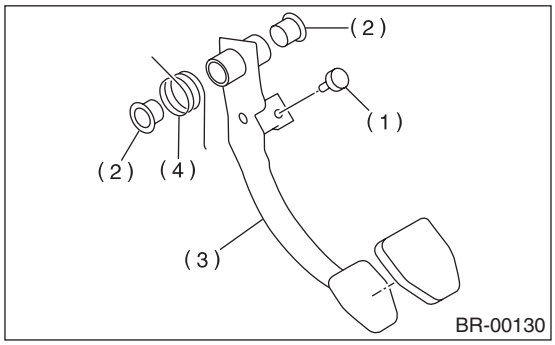

BR-00130

(1) Stopper
(2) Bushing
(3) Brake pedal
(4) Brake pedal spring

5) Remove the brake pedal pad.

3. LHD 2.5 L MT MODEL

Refer to LHD 2.0 L MT MODEL for disassembly.
<Ref. to BR-70, LHD 2.0 L MT MODEL, DISASSEMBLY, Brake Pedal.>

4. LHD AT MODEL

1) Remove the brake switch.
2) Unbolt, and then remove the brake pedal.

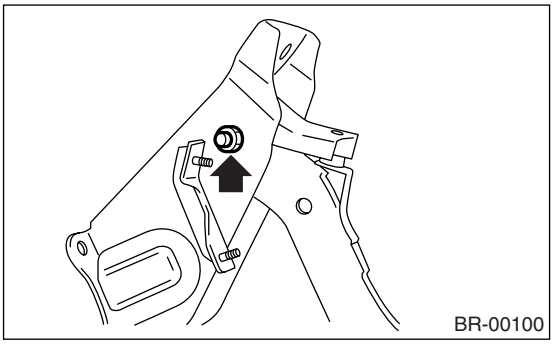

3) Remove the bushing, spacer and spring.

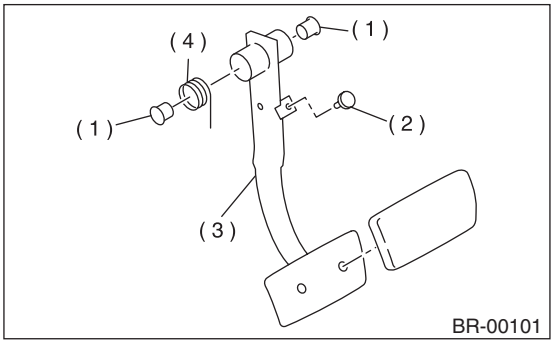

(1) Plug
(2) Stopper
(3) Brake pedal
(4) Brake pedal spring

4) Remove the brake pedal pad.

5. RHD AT MODEL

Do not disassemble the brake pedal because it has non-disassemble structure.

6. RHD MT MODEL

Do not disassemble the brake pedal because it has non-disassemble structure.

D: ASSEMBLY

1) Attach the stop light switch, etc. to pedal bracket temporarily.
2) Clean the inside of bores of clutch pedal and brake pedal, apply grease, and set the bushings into bores.
3) Align bores of the pedal bracket, clutch pedal and brake pedal, attach the brake pedal return spring and clutch pedal effort reducing spring (model with hill holder), and then install the pedal bolt.

NOTE:
Clean up the inside of bushings and apply grease before installing spacer.

Tightening torque:
T: 29 N·m (3.0 kgf-m, 21.7 ft-lb)

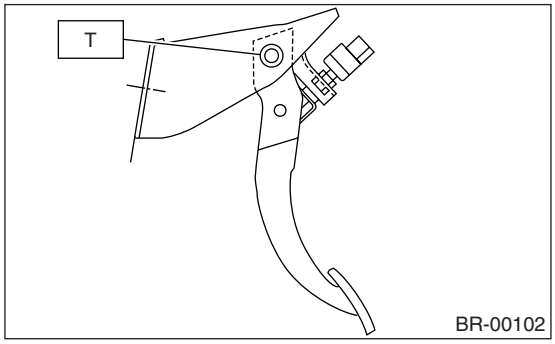

4) Adjust the stop light switch position after installing the brake pedal to vehicle.

E: INSPECTION

1) Move the brake and clutch pedal pads in the lateral direction with a force of approx. 10 N (1 kgf, 2 lb) to ensure pedal deflection is in specified range.

CAUTION:
If excessive deflection is noted, replace the bushings with new ones.

Deflection of brake and clutch pedal:
Service limit
5.0 mm (0.197 in) or less

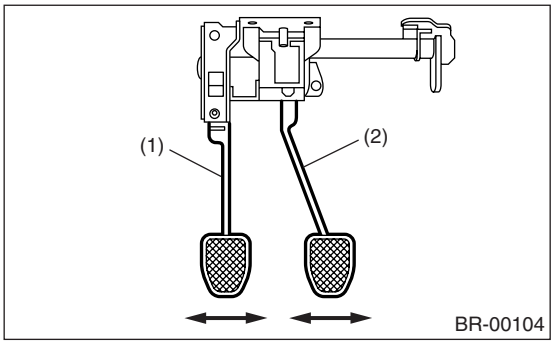

(1) Clutch pedal
(2) Brake pedal

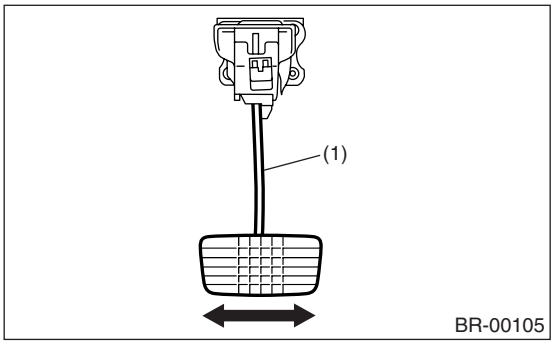

(1) Brake pedal

2) Check the position of pedal pad.

Pedal height: L
148 mm (5.83 in)

Brake pedal free play: A
1 — 3 mm (0.04 — 0.12 in) [Depress brake pedal pad with a force of less than 10 N (1 kgf, 2 lb).]

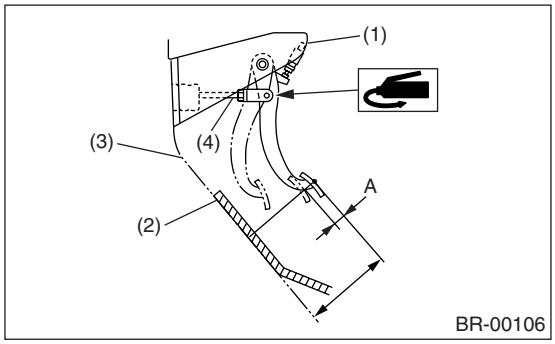

(1) Stop light switch
(2) Mat
(3) Toe board
(4) Brake booster operating rod

3) If it is not within specified value, adjust it by adjusting the brake booster operating rod length.

19.Stop Light Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the stop light switch connector.
3) Loosen nuts, and unscrew stop light switch to remove.

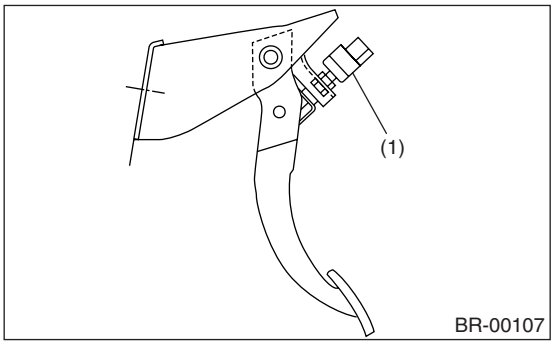

(1) Stop light switch

B: INSTALLATION

1) Screw the stop light switch onto a bracket and secure it temporarily with a nut.
2) Adjust the stop light switch position, and then tighten the nut.
<Ref. to BR-74, ADJUSTMENT, Stop Light Switch.>

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

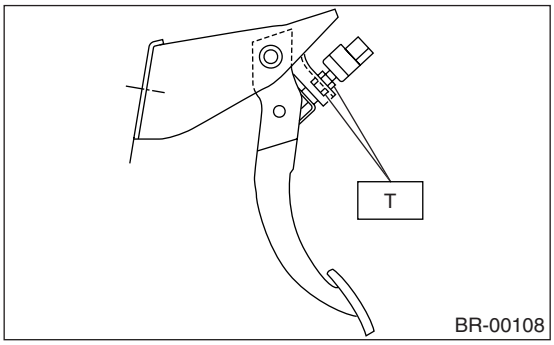

C: INSPECTION

1) If the stop light switch does not operate properly (or if it does not stop at the specified position), replace with a new one.

Specified position: L
2 mm (0.079 in)

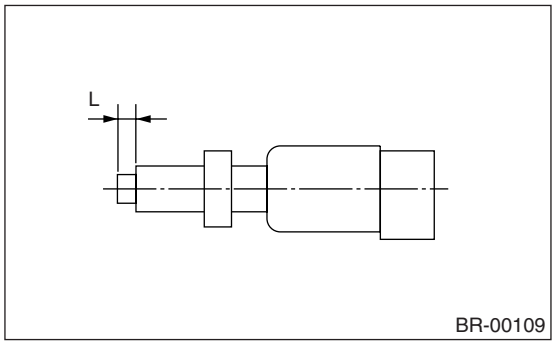

2) Measure the clearance between threaded end of stop light switch and stopper.

CAUTION:
Be careful not to rotate stop light switch.

Stop light switch clearance: A
0.3 mm (0.012 in)

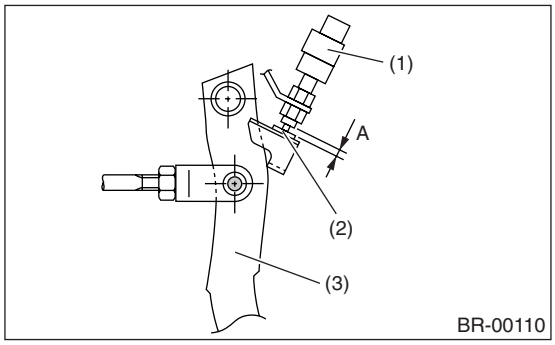

(1) Stop light switch
(2) Stopper
(3) Brake pedal

3) If it is not within specified value, adjust it by adjusting position of stop light switch.

CAUTION:
Be careful not to rotate the stop light switch.

D: ADJUSTMENT

Loosen the lock nut, and adjust the stop light switch position until the clearance between threaded end of stop light switch and stopper (A) becomes 0.3 mm (0.012 in). Then, tighten the lock nut.

Tightening torque:
8 N·m (0.8 kgf-m, 5.8 ft-lb)

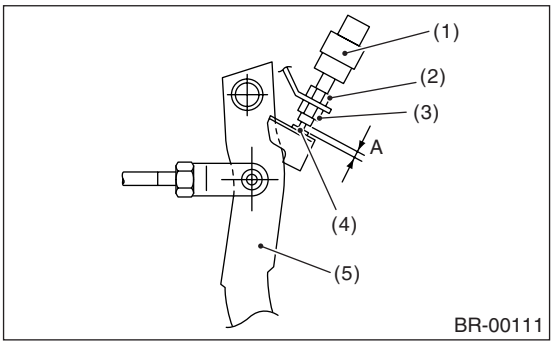

(1) Stop light switch
(2) Lock nut A
(3) Lock nut B
(4) Stopper
(5) Brake pedal

NOTE:
Tighten the lock nut B until the clearance between threaded end of stop light switch and stopper becomes 0 mm (0 in). Hold the stop light switch to prevent turning, and then loosen the lock nut B approx. 60°. The clearance (A) will become 0.3 mm (0.012 in).

20.Hill Holder

A: REMOVAL

1. PHV (PRESSURE HOLD VALVE)

1) Drain the brake fluid from reservoir of master cylinder.
2) Remove the adjusting nut and lock nut.

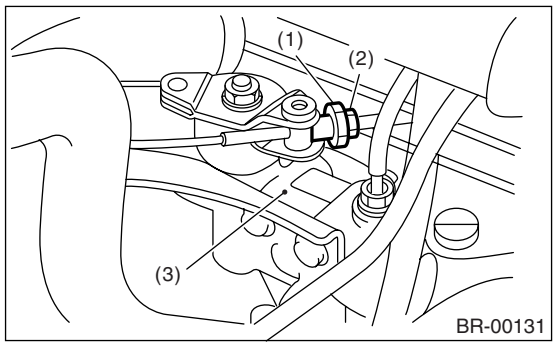

(1) Adjusting nut
(2) Lock nut
(3) PHV

3) Remove the cable clamp, and disconnect the PHV cable from PHV.

CAUTION:
Carefully protect the boots and inner cable from damage when disconnecting PHV cable.

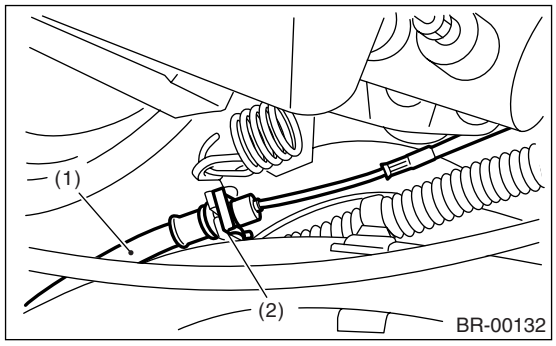

(1) PHV cable
(2) Clamp

4) Disconnect the brake pipes from PHV.

CAUTION:
• Pay attention not to drop the brake fluid onto body painting since it may dissolve paint.
• Pay attention not to damage hexagonal head of the flare nut by using pipe wrench without fail.

5) Detach the PHV along with support from side frame.

CAUTION:
Exercise utmost care to prevent foreign matter from entering into the PHV when removing it.

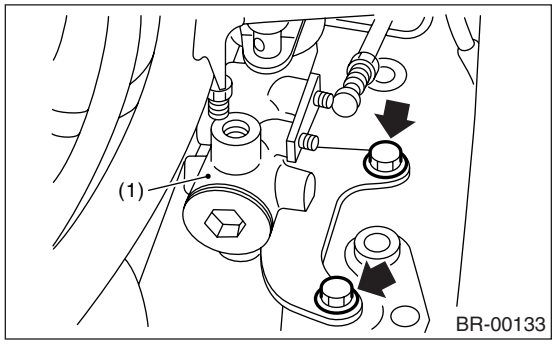

(1) PHV

2. PHV CABLE

1) Remove the adjusting nut and lock nut.

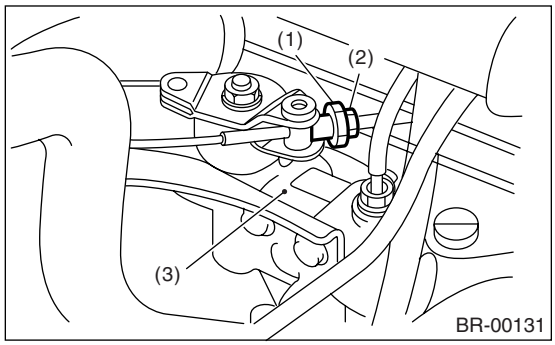

(1) Adjusting nut
(2) Lock nut
(3) PHV

2) Remove the cable clamp, and disconnect PHV cable from PHV.

CAUTION:
Carefully protect the boot and inner cable from damage when disconnecting PHV cable.

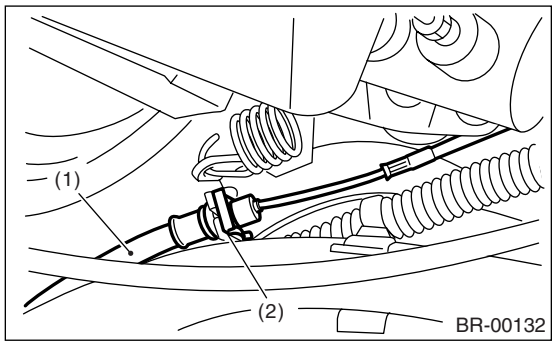

(1) PHV cable
(2) Clamp

3) Remove the cable clamp from clutch pedal bracket.

- LHD MODEL

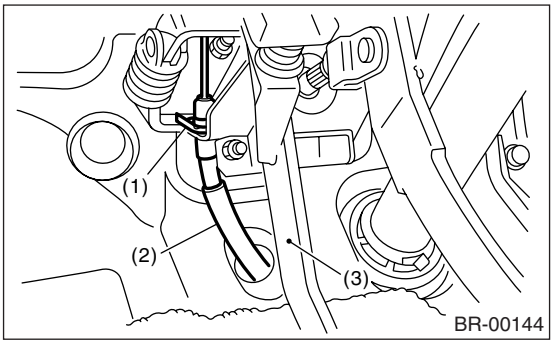

(1) Clamp
(2) PHV cable
(3) Clutch pedal

- RHD MODEL

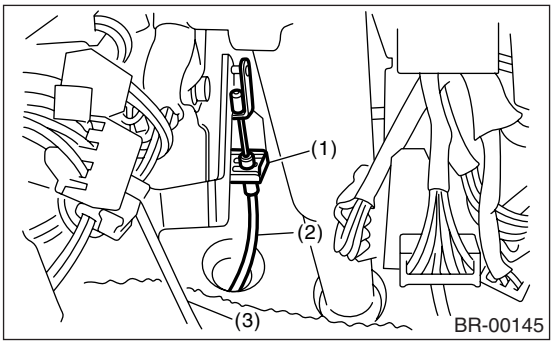

(1) Clamp
(2) PHV cable
(3) Clutch pedal

4) Remove the PHV cable.

B: INSPECTION

Check up removed parts as follows, and replace defective ones.

1) Check if the boots of PHV cable are damaged or degraded, the inner cable is damaged or corroded.
2) Check if the return spring is worn out, damaged or corroded.
3) Confirm that rolling sound of the ball is heard with PHV inclined and lever rotates smoothly.

CAUTION:
Never disassemble the PHV. Replace entire PHV assembly if necessary.

C: INSTALLATION

1. PHV (PRESSURE HOLD VALVE)

1) Install the PHV onto side frame.

Tightening torque:
18 N·m (1.8 kgf-m, 13.0 ft-lb)

2) Connect the brake pipes to PHV.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

CAUTION:
Confirm that the brake pipes are not deformed and/or damaged. Replace them with new ones if necessary.

3) Install the PHV cable to PHV.

CAUTION:
• If the cable clamp (and clips) is damaged, replace it with a new one.
• Avoid sharp bending of PHV cable as it may cause breakage.

4) Connect the PHV cable with clips.
5) Apply grease to the following points.
- Hook portion of return spring
- Cable end portion of lever

Grease:
SUNLIGHT 2 (Part No. 003602010)

6) Be sure to bleed air from the brake system.
7) Adjust the PHV cable. <Ref. to BR-76, PHV CABLE, INSTALLATION, Hill Holder.>

CAUTION:
After replacing with new one, operate the clutch pedal about 30 times as a running-in operation prior to adjustment.

2. PHV CABLE

1) Install in the reverse order of removal.

CAUTION:
• If the cable clamp is damaged, replace it with a new one.
• Avoid sharp bending of PHV cable as it may cause breakage.

2) Apply grease to the following points.
- Hook portion of return spring
- Cable end portion of lever

Grease:
SUNLIGHT 2 (Part No. 003602010)

3) Adjust the PHV cable. <Ref. to BR-77, ADJUSTMENT, Hill Holder.>

CAUTION:
After replacing with new one, operate the clutch pedal about 30 times as a running-in operation prior to adjustment.

D: ADJUSTMENT

Confirm stopping and starting performances by activating the hill holder on an uphill road of 3° or higher inclination.

1) If the vehicle does not stop;

Tighten the adjusting nut of PHV cable.

2) If the vehicle does not start properly;

• Case A — When the hill holder is released later than engagement of clutch pedal (Engine tends to stall.):

Loosen adjusting nut gradually until smooth starting is enabled.

• Case B — When the hill holder is released earlier than engagement of clutch pedal (Vehicle slips down slightly.):

Tighten the adjusting nut so that hill holder is released later than engagement of clutch pedal (status in Case A). Then make adjustment the same as in Case A.

CAUTION:
Whenever turning the adjusting nut, prevent the PHV cable from revolving.

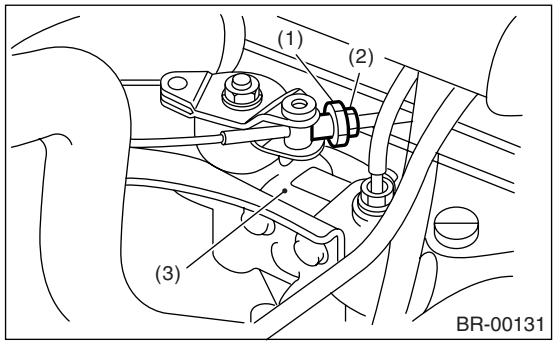

(1) Adjusting nut
(2) Lock nut
(3) PHV

3) Tighten the lock nut.

Tightening torque:
3.5 N·m (0.35 kgf-m, 2.5 ft-lb)

21.General Diagnostics

A: INSPECTION

	Trouble and possible cause	Corrective action
1. Insufficient braking	(1) Fluid leakage from the hydraulic mechanism	Repair or replace (cup, piston seal, piston boot, master cylinder piston kit, pipe or hose).
	(2) Entry of air into the hydraulic mechanism	Bleed the air.
	(3) Excessively wide shoe clearance	Adjust the clearance.
	(4) Wear, deteriorated surface material, adhering water or fluid on the lining	Replace, grind or clean.
	(5) Improper operation of master cylinder, disc caliper, brake booster or check valve	Correct or replace.
2. Unstable or uneven braking	(1) Fluid on the lining, drum or rotor	Eliminate cause of fluid leakage, clean, or replace.
	(2) Drum or rotor eccentricity	Correct or replace the drum or rotor.
	(3) Worn brake drum, or damage to the drum caused by sand	Correct by grinding, or replace.
	(4) Improper lining contact, deteriorated surface material, improper inferior material, or wear	Correct by grinding, or replace.
	(5) Deformed back plate	Correct or replace.
	(6) Improper tire inflation	Inflate to correct pressure.
	(7) Disordered wheel alignment	Adjust alignment.
	(8) Loosened back plate or the support installing bolts	Retighten.
	(9) Loosened wheel bearing	Retighten to normal tightening torque or replace.
	(10) Trouble in the hydraulic system	Replace the cylinder, brake pipe or hose.
	(11) Uneven effect of the parking brake	Check, adjust, or replace the rear brake and cable system.
3. Excessive pedal stroke	(1) Entry of air into the hydraulic mechanism	Bleed the air.
	(2) Excessive play in the master cylinder push rod	Adjust.
	(3) Fluid leakage from the hydraulic mechanism	Repair or replace (cup, piston seal, piston boot, master cylinder piston kit, pipe or hose).
	(4) Improperly adjusted shoe clearance	Adjust.
	(5) Improper lining contact or worn lining	Correct or replace.
4. Brake dragging or improper brake return	(1) Insufficient pedal play	Adjust play.
	(2) Improper master cylinder return	Clean or replace the cylinder.
	(3) Clogged hydraulic system	Replace.
	(4) Improper return or adjustment of parking brake	Correct or adjust.
	(5) Weakened spring tension or breakage of shoe return spring	Replace the spring.
	(6) Excessively narrow shoe clearance	Adjust the clearance.
	(7) Improper disc caliper operation	Correct or replace.
	(8) Wheel bearing faulty	Replace the wheel bearing.
5. Brake noise (1) (creak sound)	(1) Hardened or deteriorated lining	Replace the shoe assembly or pad.
	(2) Worn lining	Replace the shoe assembly or pad.
	(3) Loosened back plate or the support installing bolts	Retighten.
	(4) Loose wheel bearing	Retighten to normal tightening torque.
	(5) Dirty drum or rotor	Clean the drum or rotor, or clean and replace the brake assembly.
6. Brake noise (2) (hissing sound)	(1) Worn lining	Replace the shoe assembly or pad.
	(2) Improper installed shoe or pad	Correct or replace the shoe assembly or pad.
	(3) Loose or bent drum or rotor	Retighten or replace.

	Trouble and possible cause	Corrective action
7. Brake noise (3) (click sound)	In the case of the disc brake:	
	(1) Excessively worn pad or the support	Replace the pad or the support.
	In the case of the drum brake:	
	(1) Excessively worn shoe ridge	Replace the back plate.
	(2) Lack of oil on the shoe ridge surface and anchor	Add more grease.

PARKING BRAKE

PB

Page

1. General Description 2
2. Parking Brake Lever.....6
3. Parking Brake Cable 7
4. Parking Brake Assembly (Rear Disc Brake) 8
5. General Diagnostic Table.....11

1. General Description

A: SPECIFICATIONS

Model		Rear drum brake	Rear disc brake	Rear disc brake (STi model)
Type		Mechanical on rear brakes	Mechanical on rear brakes, drum in disc	
Effective drum diameter	mm (in)	228.6 (9)	170 (6.69)	190 (7.48)
Lining dimensions (length × width × thickness)	mm (in)	218.8 × 35.0 × 4.1 (8.61 × 1.378 × 0.161)	162.6 × 30.0 × 3.2 (6.40 × 1.181 × 0.126)	182.3 × 30.0 × 3.2 (7.18 × 1.181 × 0.126)
Clearance adjustment		Automatic adjustment	Manual adjustment	
Lever stroke	notches/N (kgf, lb)	7 to 8/196 (20, 44)		

B: COMPONENT

1. PARKING BRAKE (REAR DISC BRAKE)

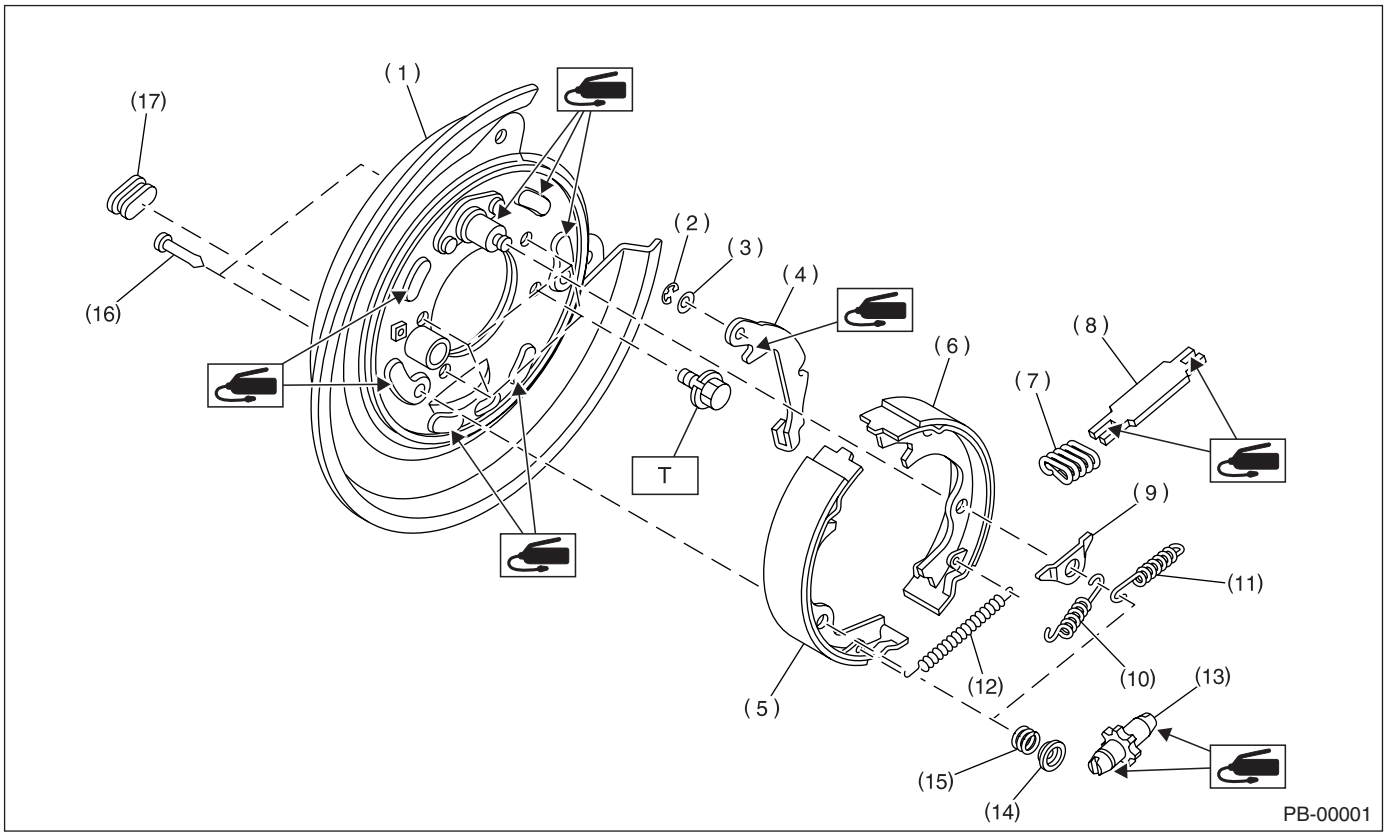

(1) Back plate
(2) Retainer
(3) Spring washer
(4) Lever
(5) Parking brake shoe (Primary)
(6) Parking brake shoe (Secondary)
(7) Strut spring
(8) Strut
(9) Shoe guide plate
(10) Primary return spring
(11) Secondary return spring
(12) Adjusting spring
(13) Adjuster
(14) Shoe hold-down cup
(15) Shoe hold-down spring
(16) Shoe hold-down pin
(17) Adjusting hole cover

Tightening torque: N·m (kgf-m, ft-lb)
T: 53 (5.4, 39.1)

2. PARKING BRAKE CABLE

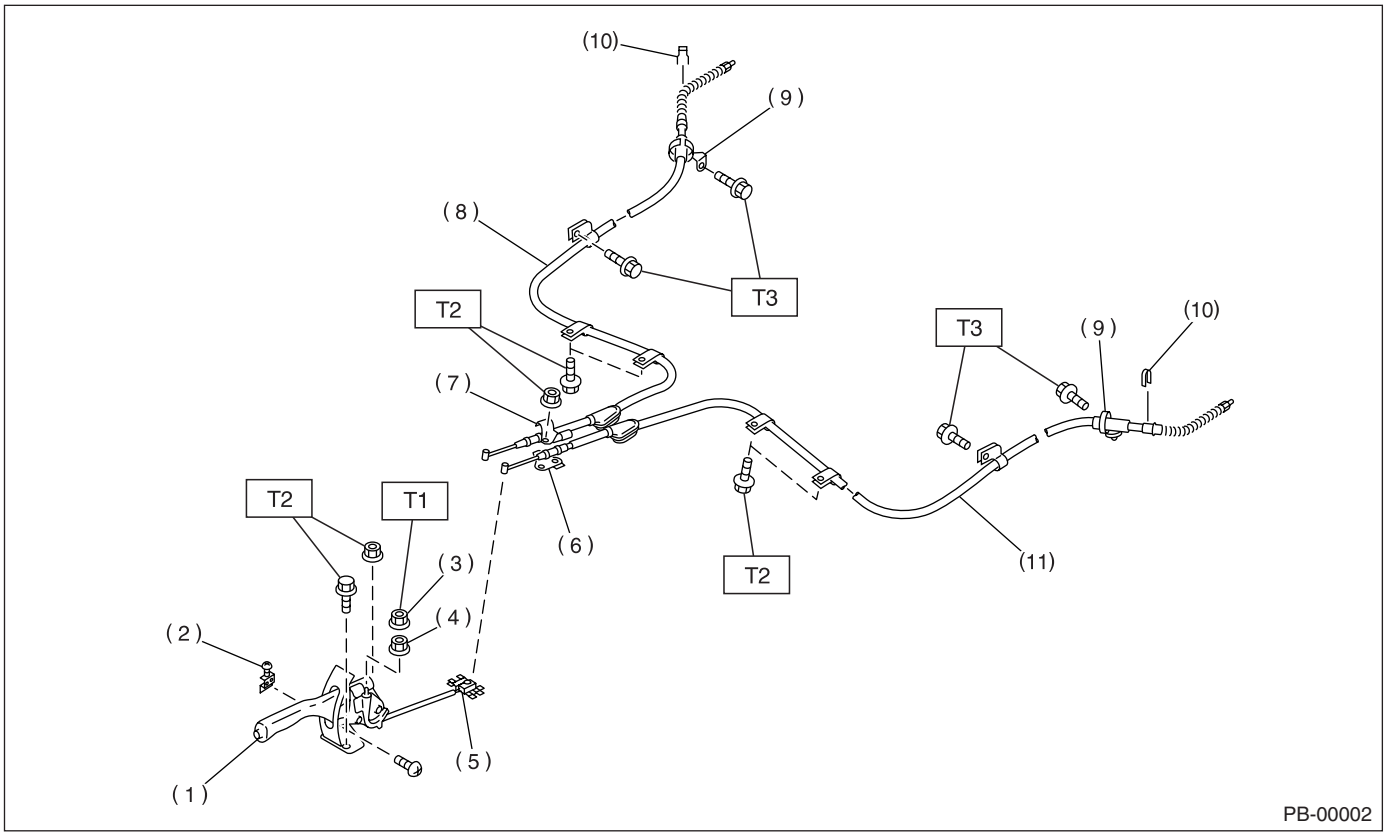

(1) Parking brake lever
(2) Parking brake switch
(3) Lock nut
(4) Adjusting nut
(5) Equalizer
(6) Bracket
(7) Clamp
(8) Parking brake cable RH
(9) Cable guide
(10) Clamp (Rear disc brake model)
(11) Parking brake cable LH

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5.9 (0.6, 4.3)
T2: 18 (1.8, 13.0)
T3: 32 (3.3, 23.6)

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.
• Keep grease etc. away from parking brake shoes.

2. Parking Brake Lever

A: REMOVAL

1) Lift up the vehicle.
2) Remove the rear wheel.
3) Remove the rear seat cushion.
4) Remove the console box.
5) Loosen the parking cable adjusting nut and console bracket.
6) Disconnect the connector of parking brake switch.
7) Remove the parking brake lever.

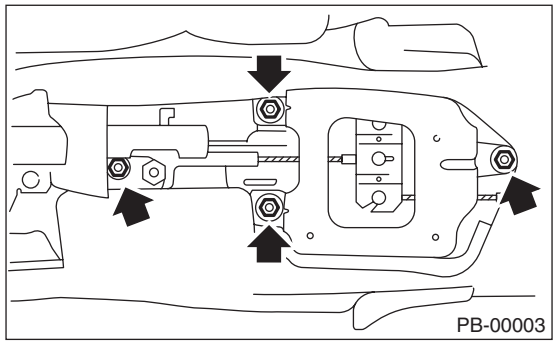

8) Unbend the parking brake lever pawls and remove cable.

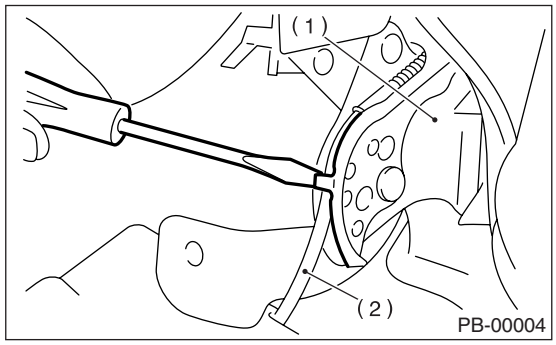

(1) Parking brake lever
(2) Cable

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:
Parking brake lever;
18 N·m (1.8 kgf-m, 13.0 ft-lb)
Adjusting nut;
5.9 N·m (0.6 kgf-m, 4.3 ft-lb)

2) Be sure to adjust the lever stroke. <Ref. to PB-6, ADJUSTMENT, Parking Brake Lever.>

C: INSPECTION

While pulling the parking brake lever upward, count the notches.

Lever stroke:
7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)

If not as specified, adjust the parking brake. <Ref. to PB-10, ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>

D: ADJUSTMENT

1) Remove the console cover.
2) Forcibly pull the parking brake lever 3 to 5 times.
3) Adjust the parking brake lever by turning adjuster until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kgf, 44 lb).
4) Tighten the lock nut.

Lever stroke:
7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)

Tightening torque (Lock nut):
5.9 N·m (0.6 kgf-m, 4.3 ft-lb)

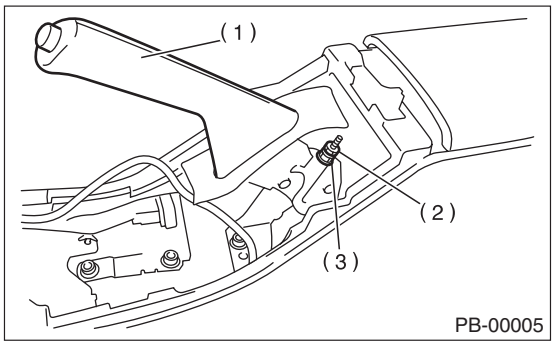

(1) Parking brake lever
(2) Lock nut
(3) Adjusting nut

5) Install the console cover.

3. Parking Brake Cable

A: REMOVAL

1) Lift up the vehicle.
2) Remove the rear wheels.
3) Remove the rear seat cushion.
4) Remove the console box.
5) Loosen the parking cable adjusting nut and console bracket.
6) Remove the parking brake lever.

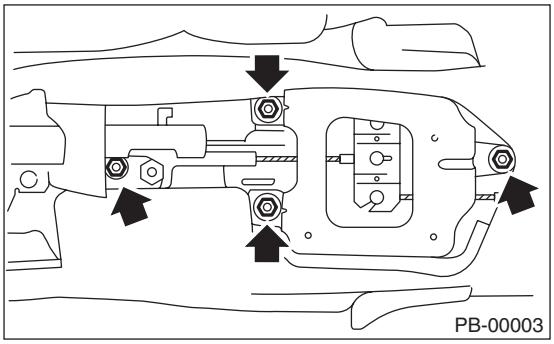

7) Roll up the floor mat and remove clamps.

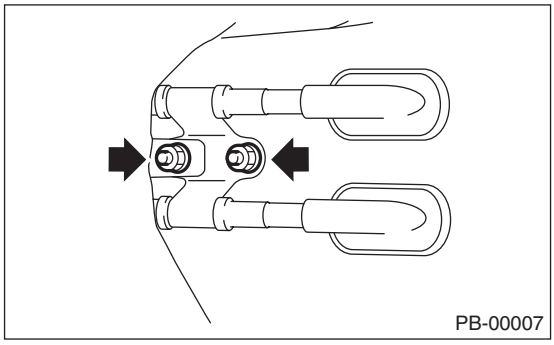

8) Remove the equalizer cover.
9) Remove the inner cable end from equalizer.

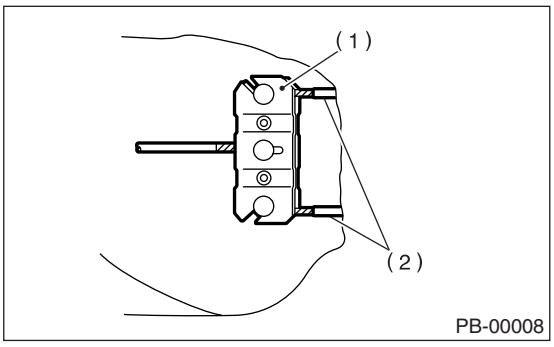

(1) Equalizer
(2) Inner cable end

10) Remove the parking brake cable from rear brake.
Disc brake
<Ref. to PB-8, REMOVAL, Parking Brake Assembly (Rear Disc Brake).>
Drum brake
<Ref. to BR-50, REMOVAL, Rear Drum Brake Assembly.>
11) Remove the clamp from rear brake.
12) Remove the bolt and bracket from trailing link bracket.
13) Remove the bolt and clamp from rear floor.

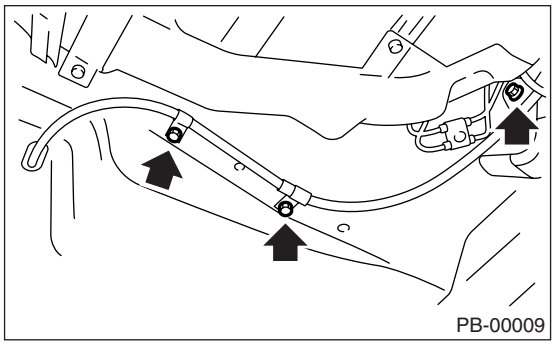

14) Detach the grommet from rear floor.
15) Remove the cable assembly from cabin by forcibly pulling it backward.
16) Detach the parking brake cable from cable guide at rear trailing link.

B: INSTALLATION

1) Install the (new) parking brake assembly in the reverse order of removal.

NOTE:
Be sure to pass the cable through cable guide inside the tunnel.

2) Be sure to adjust the lever stroke. <Ref. to PB-6, ADJUSTMENT, Parking Brake Lever.>

C: INSPECTION

Check the removed cable and replace it if damaged, rusty or malfunctioning.
1) Check for smooth operation of the cable.
2) Check the inner cable for damage and rust.
3) Check the outer cable for damage, bends and cracks.
4) Check the boot for damage, cracks and deterioration.

4. Parking Brake Assembly (Rear Disc Brake)

A: REMOVAL

1) Pull down and release the parking brake.
2) Remove the two mounting bolts and remove the brake caliper assembly.

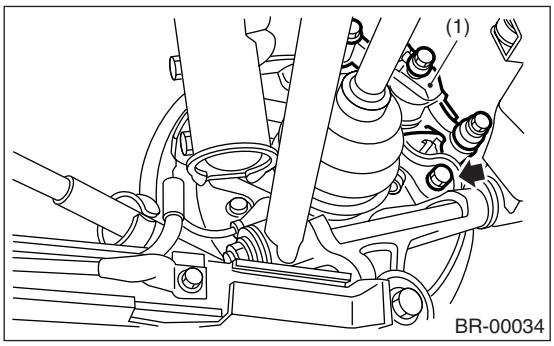

(1) Brake caliper assembly

3) Suspend the brake caliper assembly so that the hose is not stretched.
4) Remove the disc rotor.

NOTE:
If the disc rotor is difficult to remove, try the two following methods in order.

(1) Turn the adjusting screw using a flat tip screwdriver until brake shoe gets away enough from the disc rotor.

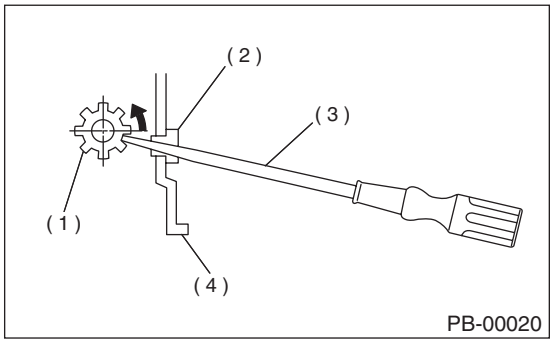

(1) Adjusting screw
(2) Adjusting hole cover (rubber)
(3) Flat tip screwdriver
(4) Back plate

(2) If the disc rotor seizes up within hub, drive the disc rotor out by installing two 8-mm bolts in holes B on rotor.

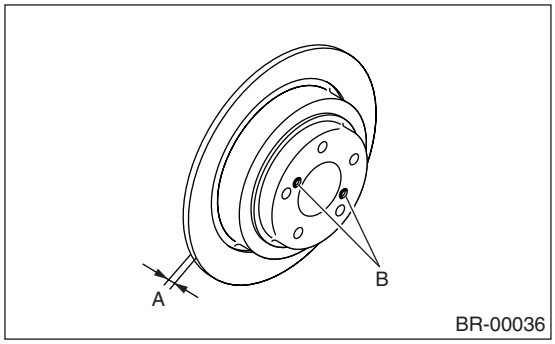

5) Remove the shoe return spring from parking brake assembly.
6) Remove the front shoe hold-down spring and pin with pliers.

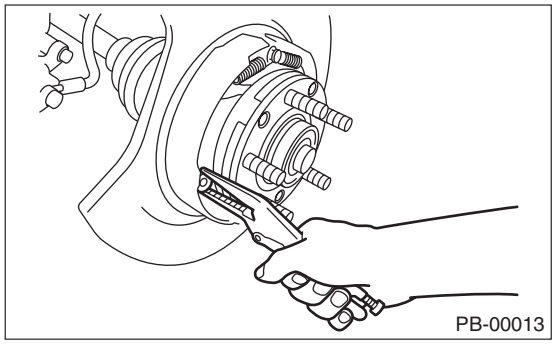

7) Remove the strut and strut spring.
8) Remove the adjuster assembly from parking brake assembly.
9) Remove the brake shoe.
10) Remove the rear shoe hold-down spring and pin with pliers.
11) Remove the parking brake cable from parking brake lever.

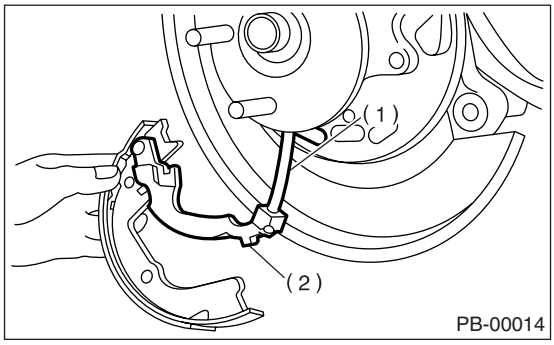

(1) Parking brake cable
(2) Parking brake lever

12) Using a standard screwdriver, raise the retainer. Remove the parking brake lever and washer from brake shoe.

B: INSTALLATION

CAUTION:
Be sure the lining surface is free from oil and grease contamination.

1) Apply brake grease to the following places.

Brake grease:
Brake Grease (Part No. 003602002)

- Six contact surfaces of shoe rim and back plate packing
- Contact surface of shoe wave and anchor pin
- Contact surface of lever and strut
- Contact surface of shoe wave and adjuster assembly
- Contact surface of shoe wave and strut
- Contact surface of lever and shoe wave

2) Insert the primary side brake shoe into anchor pin groove.
3) Secure the brake shoe with shoe hold-down pin and cup.
4) Install the plate to anchor pin, and then assemble the primary return spring to anchor pin.

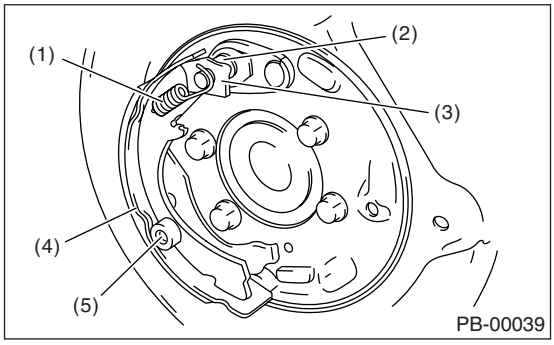

(1) Primary return spring
(2) Anchor pin
(3) Plate
(4) Primary shoe
(5) Shoe hold-down pin & cup

5) Install the parking brake cable to parking brake lever.
6) Assemble the strut and adjuster, and then secure the secondary side brake shoe with shoe hold-down pin & cup.

NOTE:
- Install the strut spring of both right and left wheels facing vehicle front.
- Install the adjuster assembly with screw on left side.

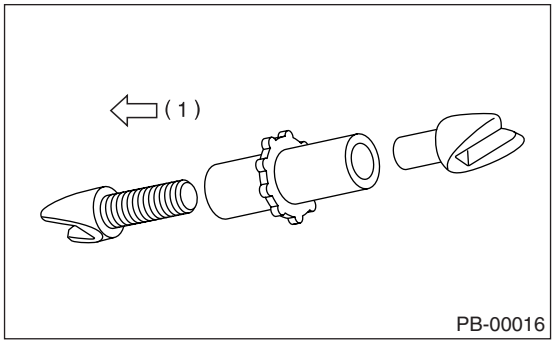

(1) Left

7) Install the secondary return spring and adjusting spring.

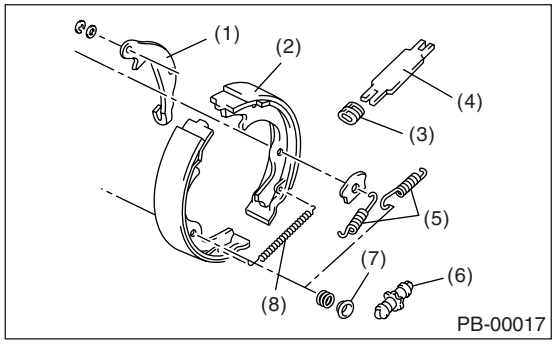

(1) Lever
(2) Secondary brake shoe
(3) Strut spring
(4) Strut
(5) Return spring
(6) Adjuster
(7) Shoe hold-down cup
(8) Adjusting spring

8) Adjust the parking brakes. <Ref. to PB-10, ADJUSTMENT, Parking Brake Assembly (Rear Disc Brake).>
9) Drive the vehicle for parking brake lining “break-in”.
(1) Drive the vehicle at about 35 km/h (22 MPH).
(2) With the parking brake release button pushed in, pull the parking brake lever gently.
(3) Drive the vehicle for about 200 meter (0.12 mile) in this condition.
(4) Wait 5 to 10 minutes for the parking brake to cool down. Repeat this procedure once more.
(5) After breaking-in, re-adjust the parking brakes.

C: INSPECTION

1) Measure the brake disc rotor inside diameter. If the disc is scored or worn, replace the brake disc rotor.

Disc rotor inside diameter:
Standard
Except STi model 170 mm (6.69 in)
STi model 190 mm (7.48 in)
Service limit
Except STi model 171 mm (6.73 in)
STi model 191 mm (7.52 in)

2) Measure the lining thickness. If it exceeds the limit, replace the shoe assembly.

Lining thickness:
Standard
3.2 mm (0.126 in)
Service limit
1.5 mm (0.059 in)

NOTE:
Replace the right and left brake shoes at the same time.

D: ADJUSTMENT

1. SHOE CLEARANCE

1) Remove the adjusting hole cover from back plate.
2) Turn the adjusting screw using a flat tip screwdriver until brake shoe is in close contact with disc rotor.

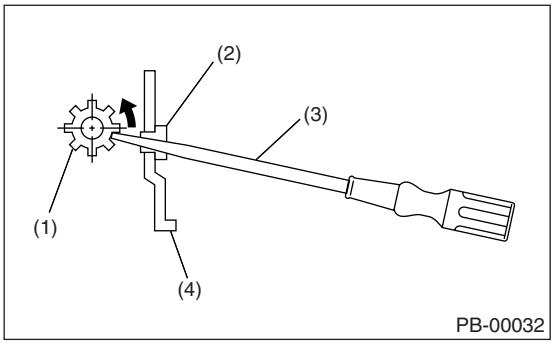

(1) Adjusting screw
(2) Adjusting hole cover (rubber)
(3) Flat tip screwdriver
(4) Back plate

3) Turn back (downward) the adjusting screw 3 or 4 notches.
4) Install the adjusting hole cover to back plate.

2. LEVER STROKE

1) Remove the console box lid.
2) Forcibly pull the parking brake lever 3 to 5 times.
3) Adjust the parking brake lever by turning adjuster until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kgf, 44 lb).

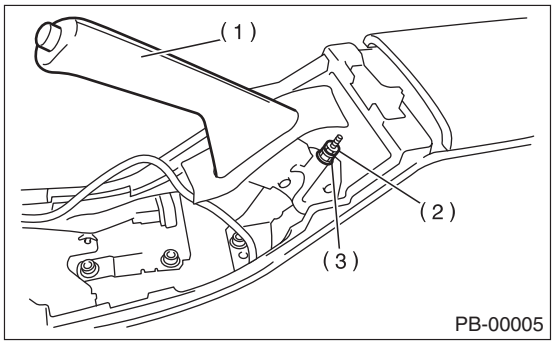

(1) Parking brake lever
(2) Lock nut
(3) Adjusting nut

4) Tighten the lock nut.
5) Install the console box lid.

Lever stroke:
7 to 8 notches when pulled with a force of 196 N (20 kgf, 44 lb)

Tightening torque (Lock nut):
5.9 N·m (0.6 kgf-m, 4.3 ft-lb)

5. General Diagnostic Table

A: INSPECTION

Symptom	Possible cause	Remedy
Brake drag	Parking brake lever is maladjusted.	Adjustment.
	Parking brake cable does not move.	Repair or replace.
	Parking brake shoe clearance is maladjusted.	Adjustment.
	Return spring is faulty.	Replace.
Noise from brake	Return spring is faulty.	Replace.
	Shoe hold-down spring is faulty.	Replace.

POWER ASSISTED SYSTEM (POWER STEERING)

PS

		Page
1.	General Description	2
2.	Steering Wheel	23
3.	Universal Joint	24
4.	Tilt Steering Column	26
5.	Steering Gearbox [LHD MODEL]	29
6.	Steering Gearbox [RHD MODEL]	48
7.	Pipe Assembly [LHD MODEL]	66
8.	Pipe Assembly [RHD MODEL]	74
9.	Oil Pump	82
10.	Reservoir Tank	87
11.	Power Steering Fluid	88
12.	General Diagnostic Table	89

1. General Description

A: SPECIFICATIONS

Model			1.6 L	2.0 L				2.5 L
				Except OUTBACK	OUT-BACK	DOHC TURBO		
						LHD	RHD	STi
Whole system	Minimum turning radius m (ft)		5.2 (17.1)		5.5 (18.0)			
	Steering angle (Inside-Outside)		37.3° — 32.4°		34.5° — 30.3°			
	Steering wheel diameter mm (in)		385 (15.16)				375 (14.76)	385 (15.16)
	Overall gear ratio (Turns, lock to lock Gear box)		3.22		3.02	2.69		3.02
Gearbox	Type		Rack and pinion, Integral					
	Backlash		0 (Automatically adjustable)					
	Valve (Power steering system)		Rotary valve					
Pump (Power steering system)	Type		Vane pump					
	Oil tank		Installed on body					
	Output cm^3 (cu in)/rev.		7.2 (0.439)	7.8 (0.476)		7.2 (0.439)		7.8 (0.476)
	Relief pressure kPa (kg/cm^2, psi)		6,174 — 6,860 (63 — 70, 896 — 994)	6,767 — 7,453 (69 — 76, 981 — 1,081)		7,350 — 8,036 (75 — 82, 1,067 — 1,165)		6,767 — 7,453 (69 — 76, 981 — 1,081)
	Hydraulic fluid control		Dropping in response to increased engine revolutions					
	Hydraulic fluid ℓ (US qt, Imp qt)/min		1,000 rpm: 7 (7.4, 6.2) 3,000 rpm: 6.5 (6.9, 5.7)	1,000 rpm: 7 (7.4, 6.2) 3,000 rpm: 5 (5.3, 4.4)		7.5 (7.9, 6.6)*1 7 (7.4, 6.2)*2		1,000 rpm: 7 (7.4, 6.2) 3,000 rpm: 5 (5.3, 4.4)
	Range of revolution rpm		700 — 9,000					
	Revolving direction		Clockwise					
Working fluid (Power steering system)	Name		ATF DEXRON III or equivalent					
	Capacity ℓ (US qt, Imp qt)	Oil tank	0.3 (0.3, 0.3)					
		Total	0.7 (0.7, 0.6)					

*1: With maximum load.
*2: With no load.

Model				LHD	RHD
Steering wheel	Free play		mm (in)	17 (0.67)	
Turning angle	Inner tire & wheel	TURBO, OUTBACK, RS		34.5°±1.5°	
		Except TURBO, OUTBACK, RS		37.3°±1.5°	
	Outer tire & wheel	TURBO, OUTBACK, RS		30.3°±1.5°	
		Except TURBO, OUTBACK, RS		32.4°±1.5°	
Steering shaft	Clearance between steering wheel and column cover		mm (in)	4.0 (0.16)	
Steering gearbox (Power steering system)	Sliding resistance		N (kgf, lb)	400 (41, 90) or less	
	Rack shaft play in radial direction	Right-turn steering	mm (in)	0.19 (0.0075) or less	Horizontal movement: 0.19 (0.0075) or less Vertical movement: 0.3 (0.012) or less
		Left-turn steering	mm (in)	Horizontal movement: 0.15 (0.0059) or less Vertical movement: 0.3 (0.012) or less	0.19 (0.0075) or less
	Input shaft play	In radial direction	mm (in)	0.18 (0.0071) or less	
		In axial direction	mm (in)	0.5 (0.020) or less	
	Turning resistance		N (kgf, lb)	Maximum allowable value: Less than 10.5 N (1.1 kgf, 2.4 lb) Difference between right and left sliding resistance: Less than 20 %	
Oil pump (Power steering system)	Pulley shaft	Radial play	mm (in)	0.4 (0.016) or less	
		Axial play	mm (in)	0.9 (0.035) or less	
	Pulley	Ditch deflection	mm (in)	1.0 (0.039) or less	
		Resistance to rotation	N (kgf, lb)	9.22 (0.94, 2.07) or less	
	Regular pressure (Unloaded)		kPa (kg/cm^2, psi)	981 (10, 142) or less	
Steering wheel effort (Power steering system)	At standstill with engine idling on a concrete road		N (kgf, lb)	31.4 (3.2, 7.1) or less	
	At standstill with engine stalled on a concrete road		N (kgf, lb)	294.2 (30, 66.2) or less	

Recommended power steering fluid	Manufacturer
ATF DEXRON III or equivalent	B.P.
	CALTEX
	CASTROL
	MOBIL
	SHELL
	TEXACO

CAUTION:
This table lists various clearances that must be correctly adjusted to ensure the normal vehicle driving without interfering noise, or any other faults.

Location	Minimum allowance
(1) Crossmember — Pipe	5 mm (0.20 in)
(2) DOJ — Shaft or joint	14 mm (0.55 in)
(3) DOJ — Valve housing	11 mm (0.43 in)
(4) Pipe — Pipe	2 mm (0.08 in)
(5) Stabilizer — Pipe	5 mm (0.20 in)
(6) Exhaust pipe — Pipe	11 mm (0.43 in)
(7) Exhaust pipe — Gearbox bolt	15 mm (0.59 in)
(8) Side frame — Hose A and B	10 mm (0.39 in)
(9) Cruise control pump — Hose A and B	15 mm (0.59 in)
(10) Pipe portion of hose A — Pipe portion of hose B	1.5 mm (0.059 in)

- LHD MODEL

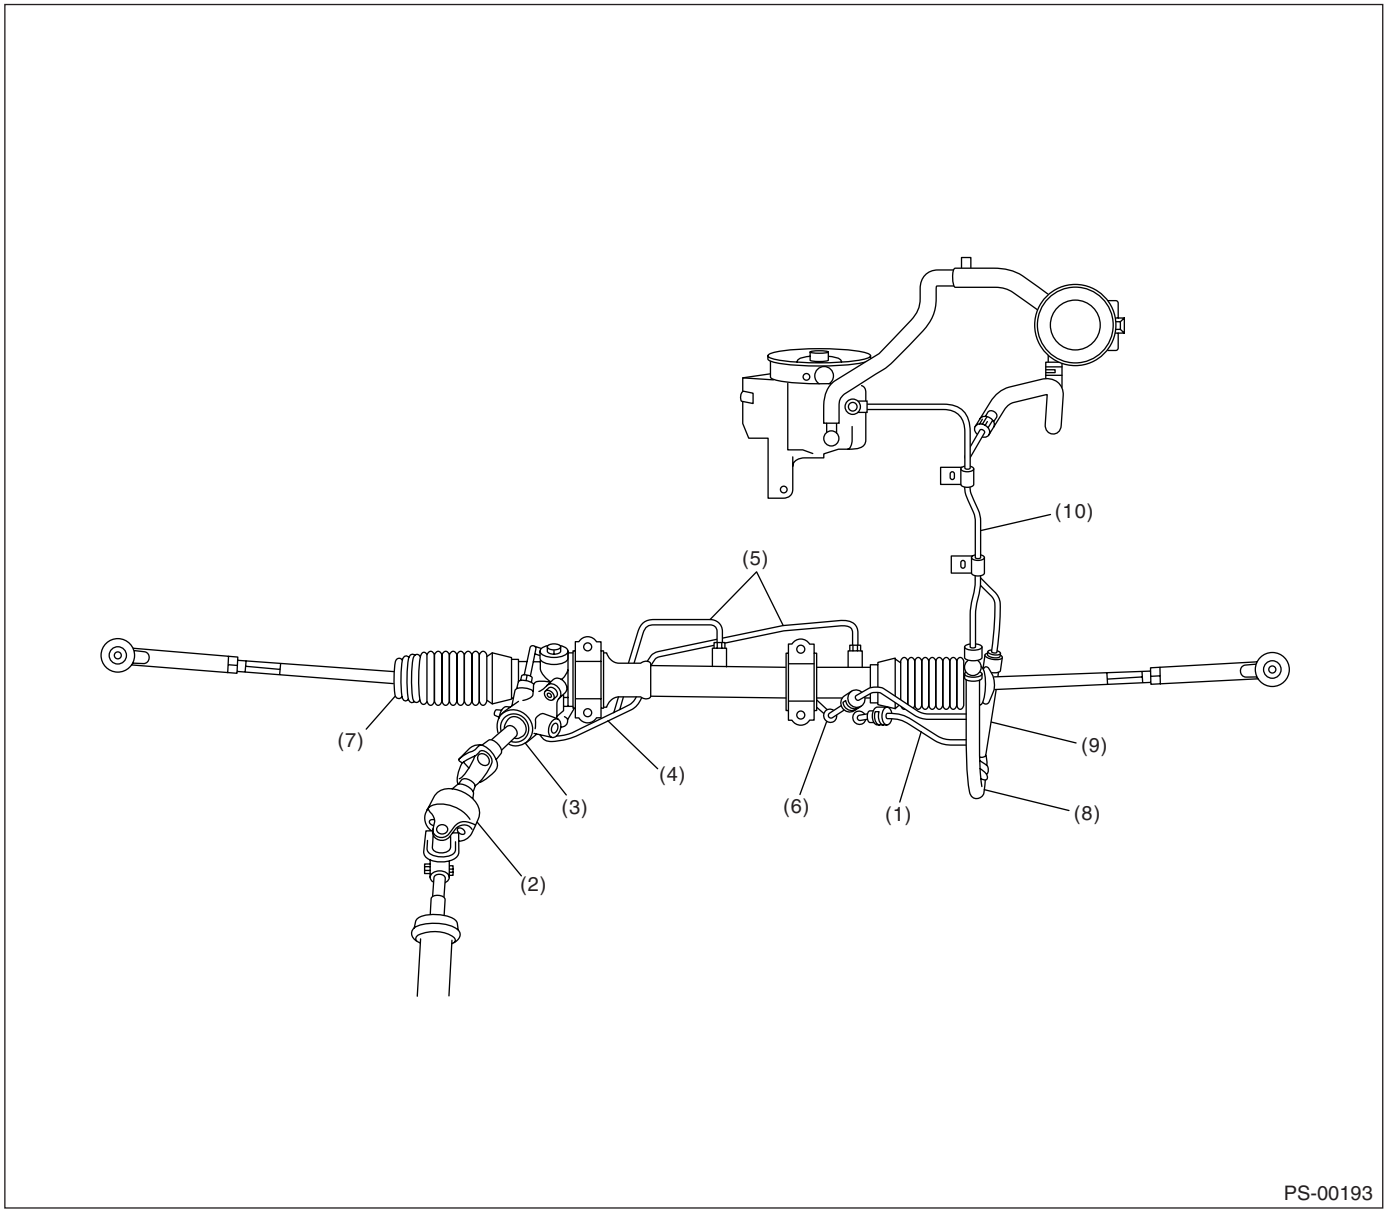

- RHD MODEL

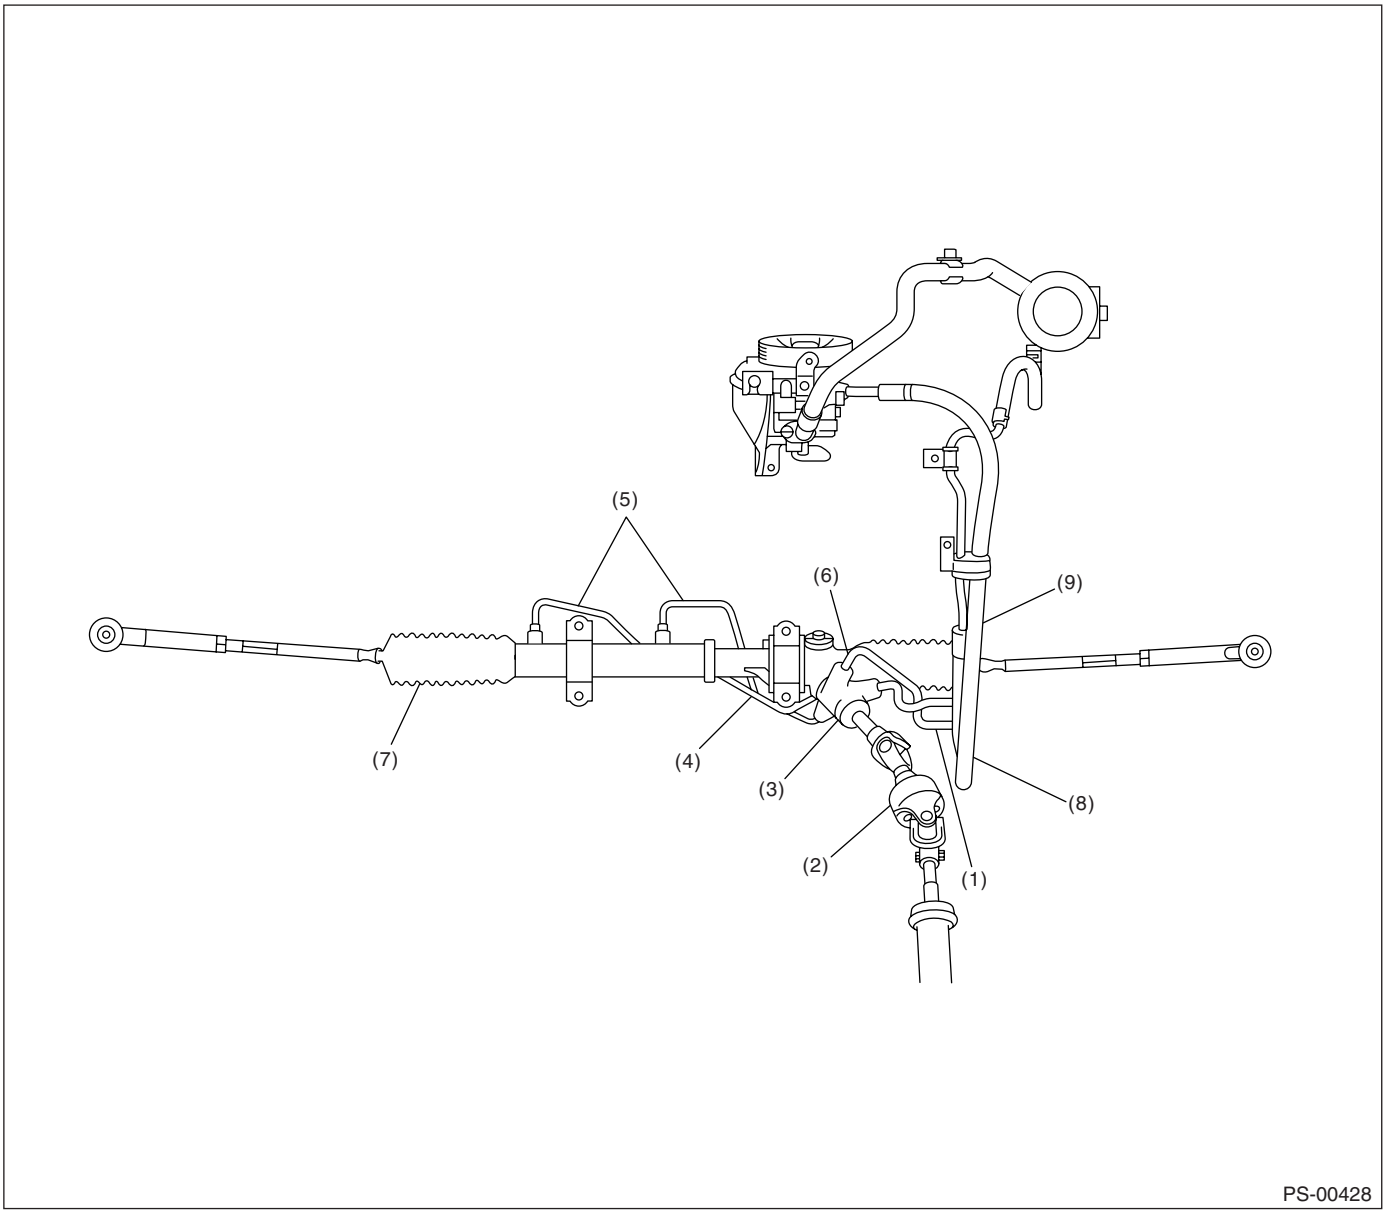

B: COMPONENT

1. STEERING WHEEL AND COLUMN

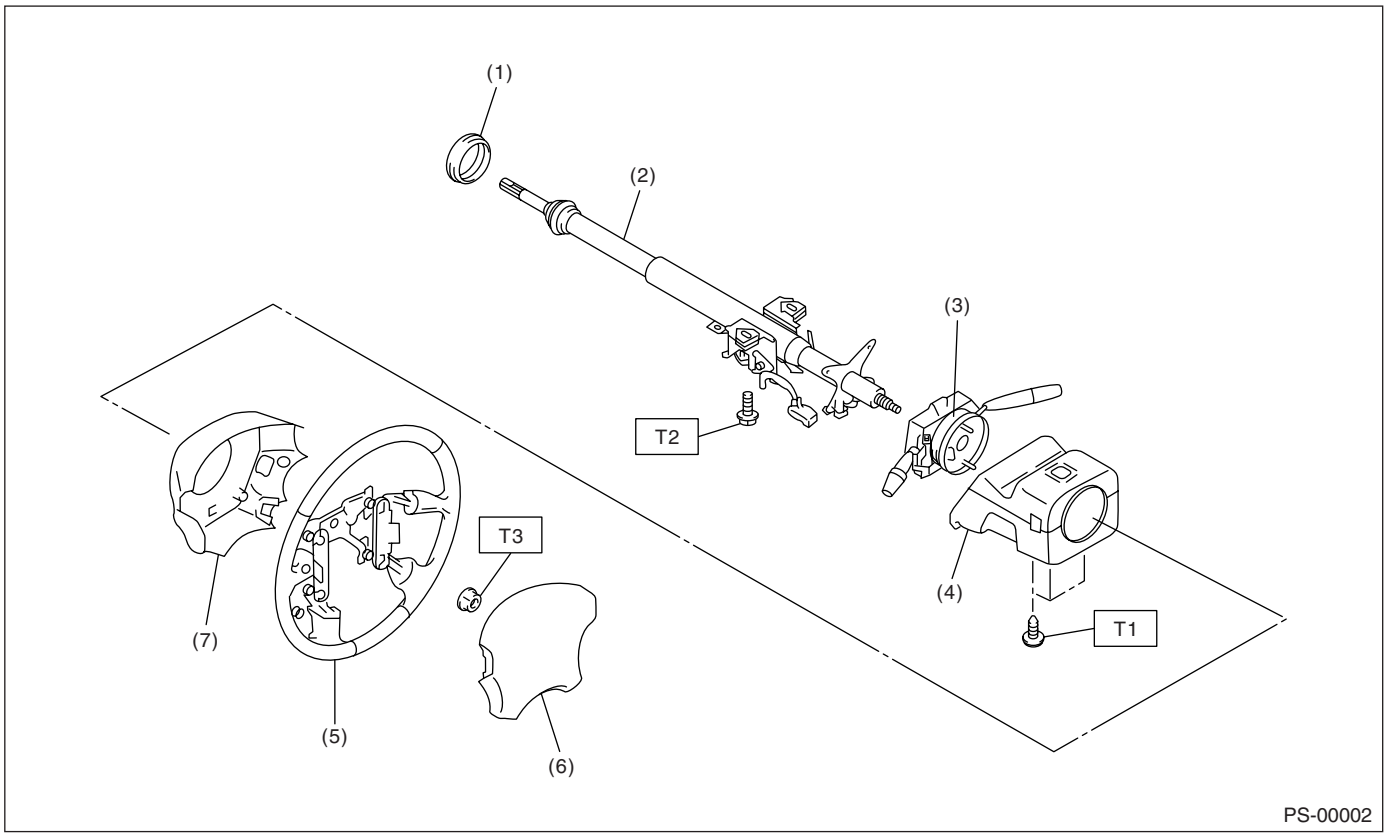

(1) Bushing
(2) Steering shaft
(3) Steering roll connector
(4) Column cover
(5) Steering wheel
(6) Airbag module
(7) Steering wheel lower cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 1.2 (0.12, 0.9)
T2: 25 (2.5, 18.1)
T3: 45 (4.6, 33.2)

2. POWER ASSISTED SYSTEM

• LHD MODEL

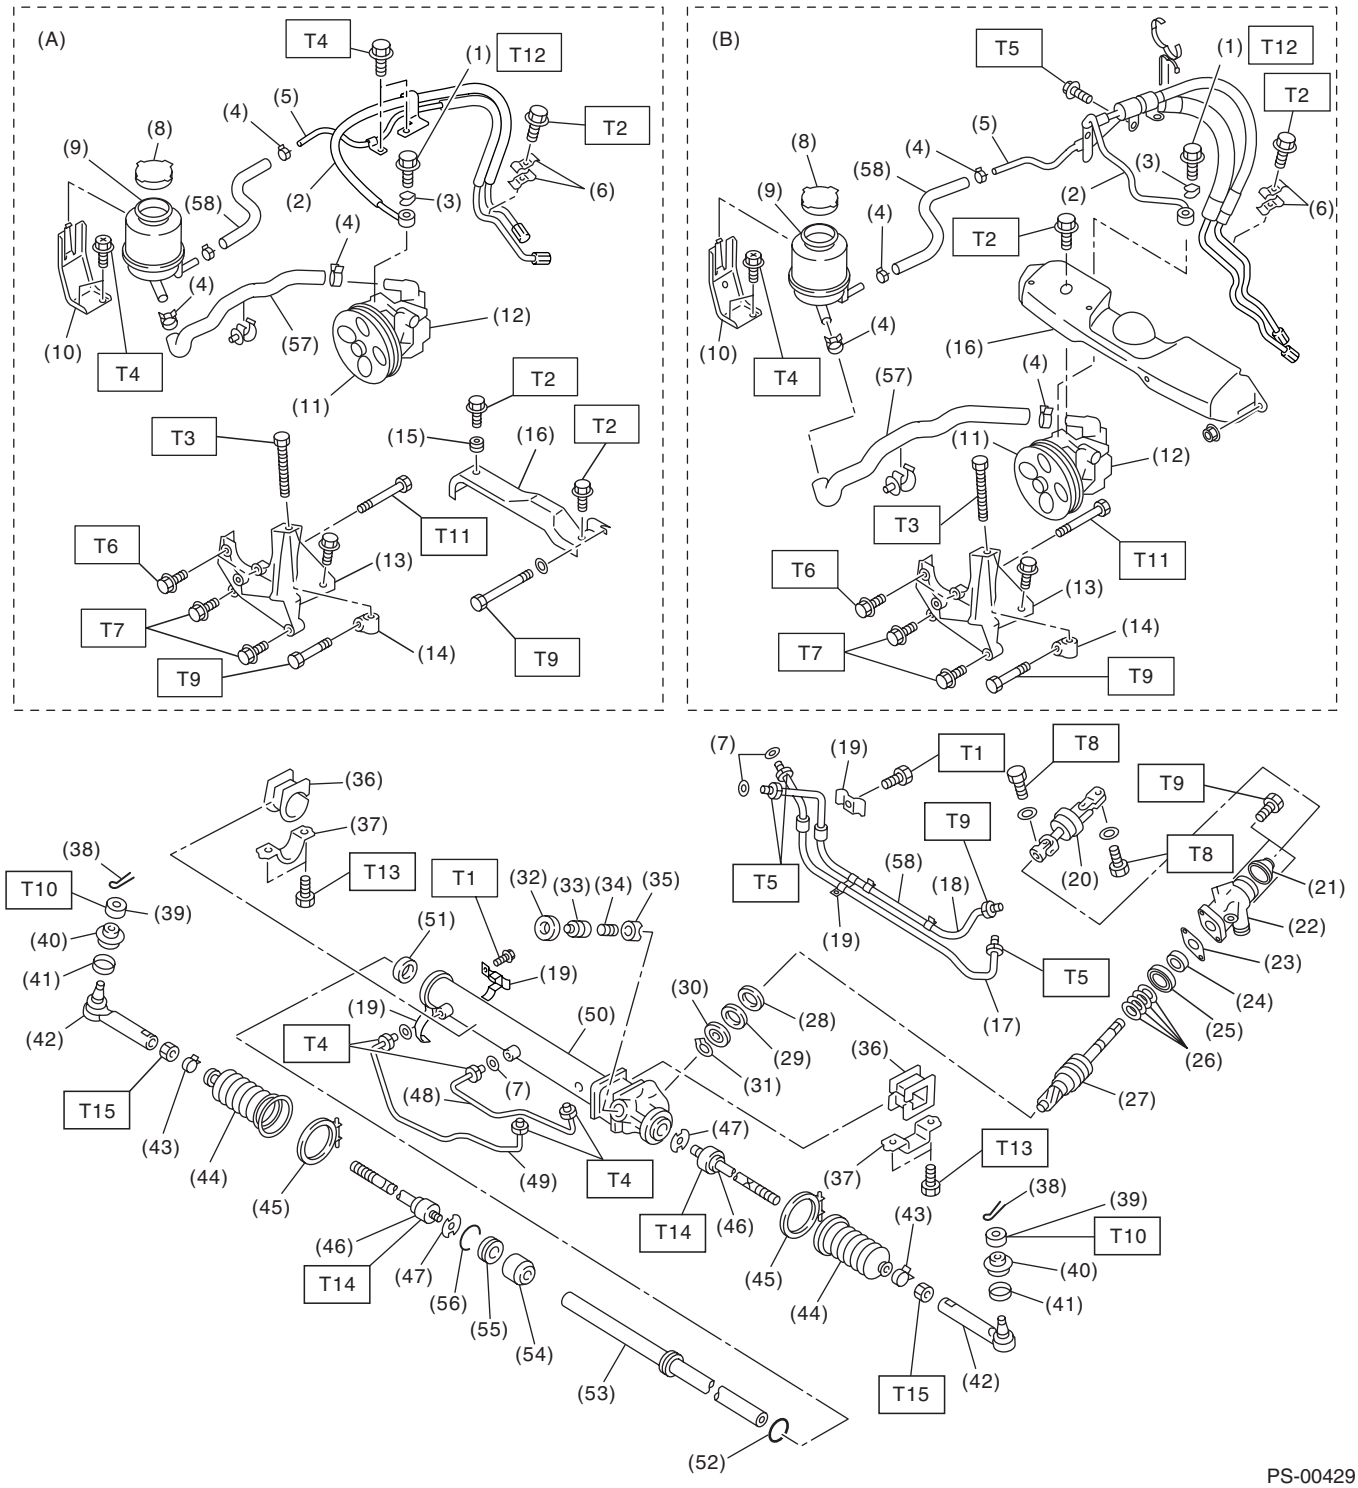

(A) NON-TURBO MODEL
(B) TURBO MODEL

(1) Eye bolt
(2) Pipe C
(3) Gasket
(4) Clip
(5) Pipe D
(6) Clamp E
(7) O-ring
(8) Cap
(9) Reservoir tank
(10) Reservoir tank bracket
(11) Pulley
(12) Oil pump
(13) Bracket
(14) Belt tension nut
(15) Bush
(16) Belt cover
(17) Pipe E
(18) Pipe F
(19) Clamp plate
(20) Universal joint
(21) Dust seal
(22) Valve housing
(23) Gasket
(24) Oil seal
(25) Ball bearing
(26) Seal ring
(27) Pinion and valve ASSY
(28) Oil seal
(29) Back-up washer
(30) Ball bearing
(31) Snap ring
(32) Lock nut
(33) Adjusting screw
(34) Spring
(35) Sleeve
(36) Adapter
(37) Clamp
(38) Cotter pin
(39) Castle nut
(40) Dust cover
(41) Clip
(42) Tie-rod end
(43) Clip
(44) Boot
(45) Band
(46) Tie-rod
(47) Lock washer
(48) Pipe B
(49) Pipe A
(50) Steering body
(51) Oil seal
(52) Piston ring
(53) Rack
(54) Rack bushing
(55) Rack stopper
(56) Circlip
(57) Suction hose
(58) Hose

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	***6 (0.6, 4.3)***
T2:	***7.4 (0.75, 5.4)***
T3:	***8 (0.8, 5.8)***
T4:	***13 (1.3, 9.4)***
T5:	***15 (1.5, 10.8)***
T6:	***15.7 (1.6, 11.6)***
T7:	***22 (2.2, 15.9)***
T8:	***24 (2.4, 17.4)***
T9:	***25 (2.5, 18.1)***
T10:	***27 (2.75, 19.9)***
T11:	***37.3 (3.8, 27.5)***
T12:	***39 (4.0, 28.9)***
T13:	***59 (6.0, 43.4)***
T14:	***78 (8.0, 57.9)***
T15:	***83 (8.5, 61.5)***

• RHD MODEL

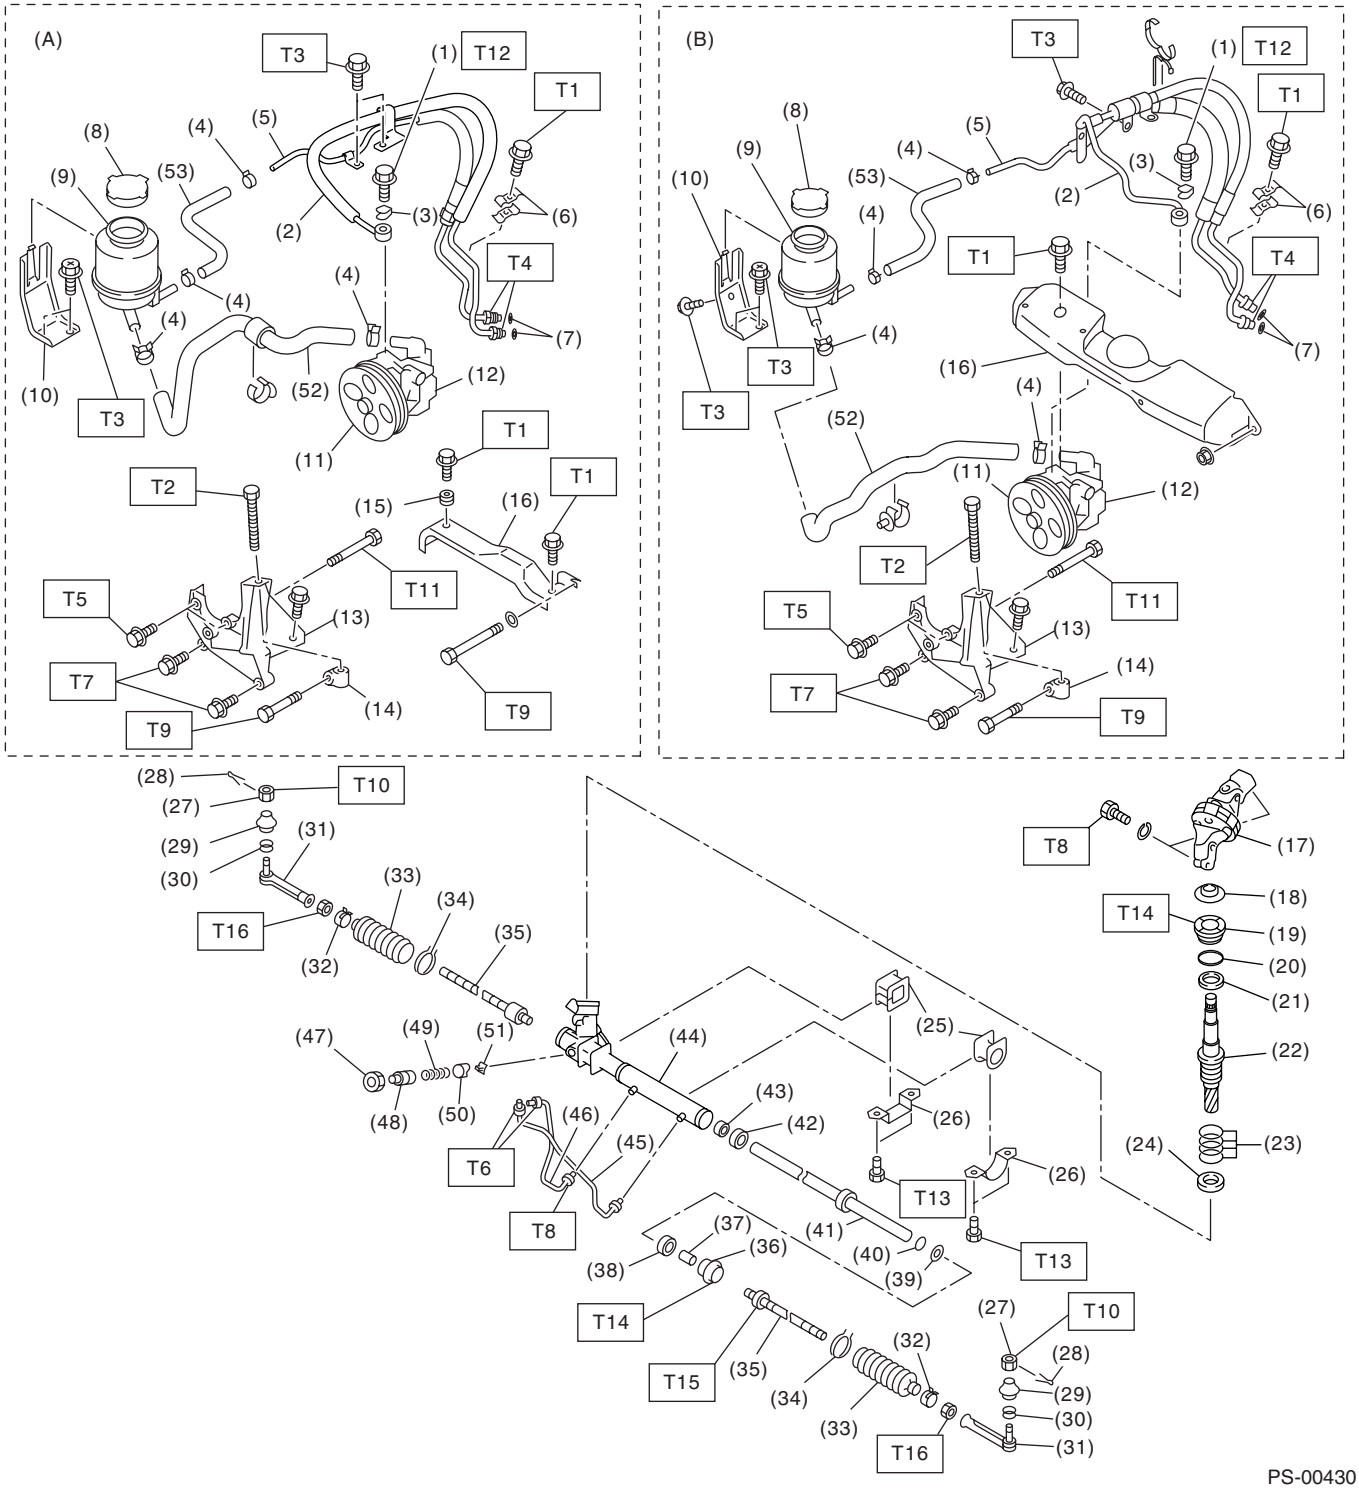
(A)
(B)
T1
T2
T3
T4
T5
T6
T7
T8
T9
T10
T11
T12
T13
T14
T15
T16
(1)
(2)
(3)
(4)
(5)
(6)
(7)
(8)
(9)
(10)
(11)
(12)
(13)
(14)
(15)
(16)
(17)
(18)
(19)
(20)
(21)
(22)
(23)
(24)
(25)
(26)
(27)
(28)
(29)
(30)
(31)
(32)
(33)
(34)
(35)
(36)
(37)
(38)
(39)
(40)
(41)
(42)
(43)
(44)
(45)
(46)
(47)
(48)
(49)
(50)
(51)
(52)
(53)
PS-00430

(A) NON-TURBO MODEL
(B) TURBO MODEL

(1) Eye bolt
(2) Pipe C
(3) Gasket
(4) Clip
(5) Pipe D
(6) Clamp E
(7) O-ring
(8) Cap
(9) Reservoir tank
(10) Reservoir tank bracket
(11) Pulley
(12) Oil pump
(13) Bracket
(14) Belt tension nut
(15) Bush
(16) Belt cover
(17) Universal joint
(18) Dust cover
(19) Plug
(20) O-ring
(21) Oil seal
(22) Pinion
(23) Seal ring
(24) Oil seal
(25) Adapter
(26) Clamp
(27) Castle nut
(28) Cotter pin
(29) Dust seal
(30) Clip
(31) Tie-rod end
(32) Clip
(33) Boot
(34) Wire
(35) Tie-rod
(36) Holder
(37) Bush
(38) Oil seal
(39) Oil seal
(40) O-ring
(41) Rack
(42) Oil seal
(43) Back-up washer
(44) Steering body
(45) Pipe A
(46) Pipe B
(47) Lock nut
(48) Adjusting screw
(49) Spring
(50) Sleeve
(51) Seat pad
(52) Suction hose
(53) Return hose

Tightening torque: N·m (kgf-m, ft-lb)	
T1:	***7.4 (0.75, 5.4)***
T2:	***8 (0.8, 5.8)***
T3:	***13 (1.3, 9.4)***
T4:	***15 (1.5, 10.8)***
T5:	***15.7 (1.6, 11.6)***
T6:	***20 (2.0, 14.5)***
T7:	***22 (2.2, 15.9)***
T8:	***24 (2.4, 17.4)***
T9:	***25 (2.5, 18.1)***
T10:	***27 (2.75, 19.9)***
T11:	***37.3 (3.8, 27.5)***
T12:	***39 (4.0, 28.9)***
T13:	***60 (6.1, 44.1)***
T14:	***64 (6.5, 47.0)***
T15:	***90 (9.0, 65.1)***
T16:	***85 (8.6, 62.2)***

3. OIL PUMP

• EXCEPT DOHC TURBO MODEL

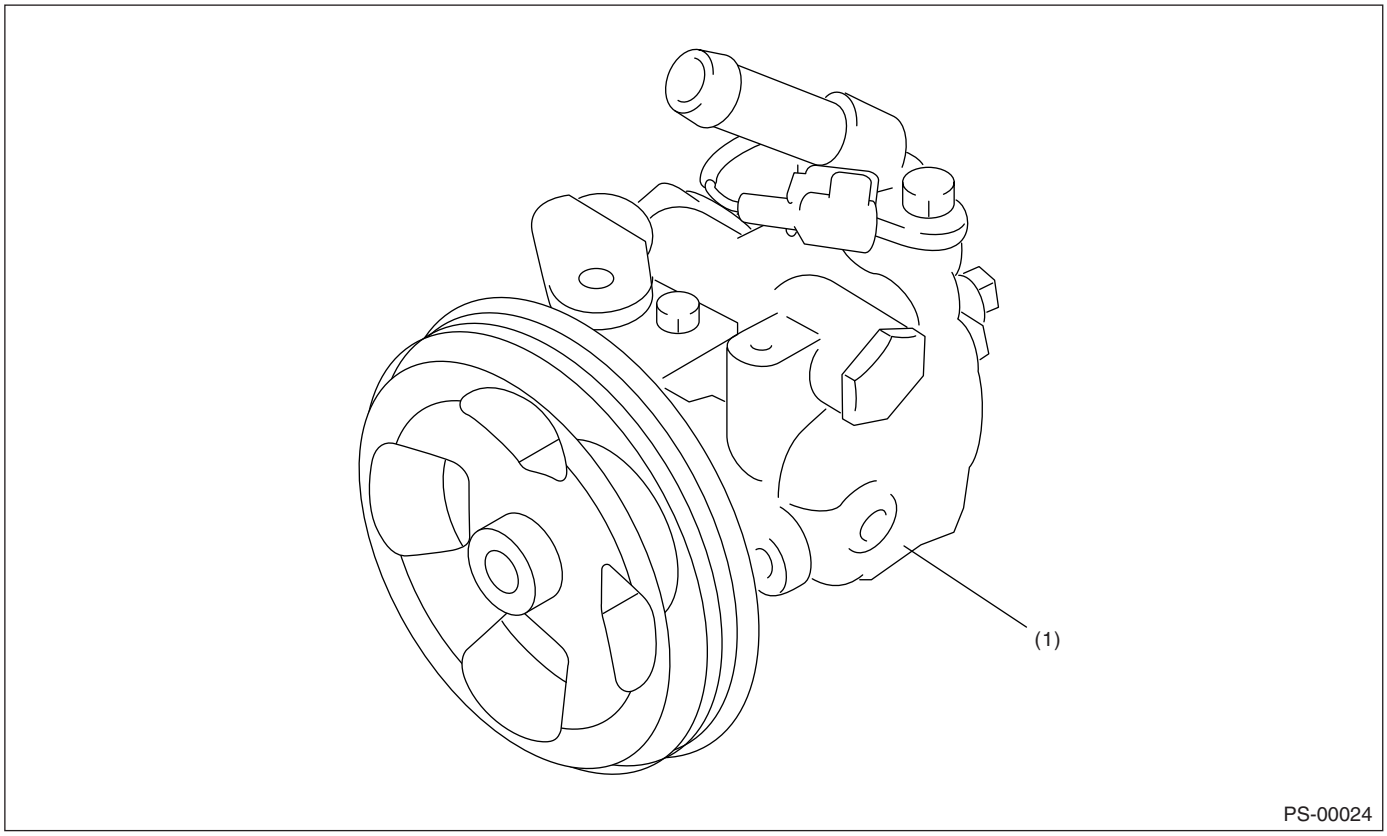

(1) Oil pump ASSY

• DOHC TURBO MODEL

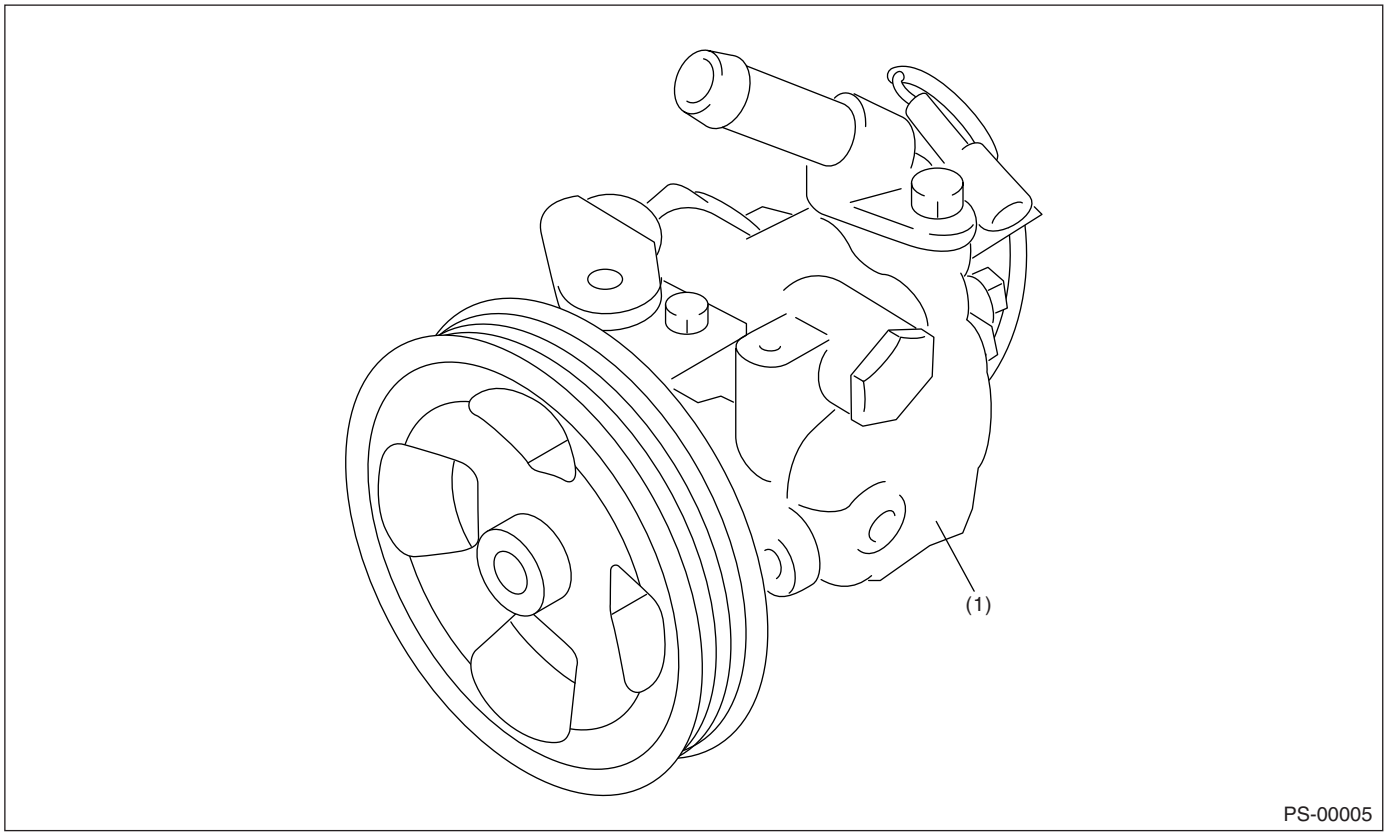

(1) Oil pump ASSY

C: CAUTION

• Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
• Be careful not to burn your hands, because each part on the vehicle is hot after running.
• Use SUBARU genuine power steering fluid, grease etc. or the equivalent. Do not mix steering fluid, grease etc. with that of another grade or from other manufacturers.
• Be sure to tighten fasteners including bolts and nuts to the specified torque.
• Place shop jacks or safety stands at the specified points.
• Before securing a part on a vise, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vise.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
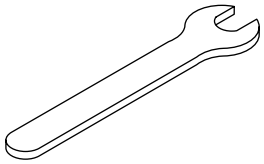 ST-925700000	925700000	WRENCH	• Used for removing and installing tie-rod. • Apply this tool to rack.
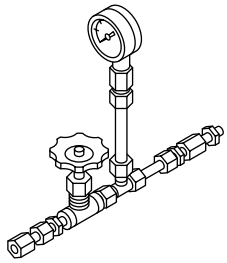 ST-925711000	925711000	PRESSURE GAUGE	Used for measuring oil pump pressure.
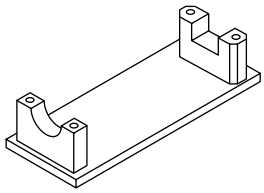 ST-926200000	926200000	STAND	Used when inspecting characteristic of gearbox assembly and disassembling it.
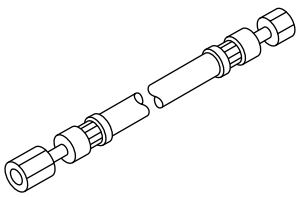 ST34099AC010	34099AC010	ADAPTER HOSE A	Used with PRESSURE GAUGE (925711000).

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
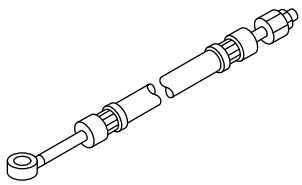 ST34099AC020	34099AC020	ADAPTER HOSE B	Used with PRESSURE GAUGE (925711000).
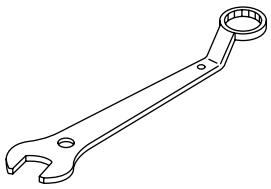 ST926230000	926230000	SPANNER	For the lock nut when adjusting backlash of gearbox.
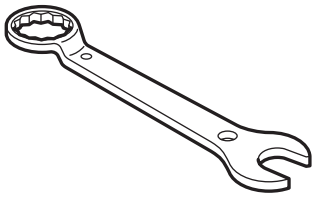 ST34099PA100	34099PA100	SPANNER	Used for measuring the rotating resistance of gear-box assembly.
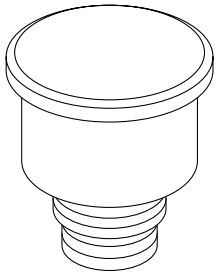 ST34199AE040	34199AE040	OIL CHARGE GUIDE	Used for charging power steering fluid.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
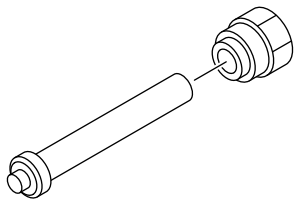 ST-926420000	926420000	PLUG	When oil leaks from pinion side of gearbox assembly, remove pipe B from valve housing, attach this tool and check oil leaking points.
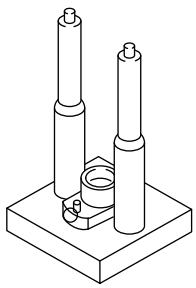 ST-926370000	926370000	INSTALLER A	• Used for installing valve assembly into valve housing assembly. • Used with STAND BASE (34099FA100). • For LHD model.
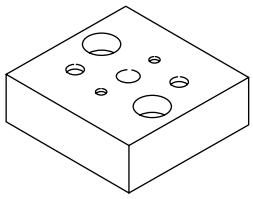 ST34099FA100	34099FA100	STAND BASE	• Used for assembling power steering gearbox. • For LHD model.
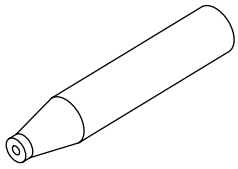 ST-926390001	926390001	COVER & REMOVER ASSY	• Used for assembling rack assembly. • For LHD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
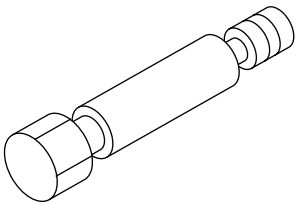 ST-926400000	926400000	GUIDE	• Right side of rack when installing rack bush. • Used with GUIDE (927660000). • For LHD model.
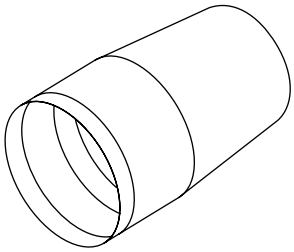 ST-927660000	927660000	GUIDE	• Right side of rack when installing rack bush. • Used with GUIDE (926400000). • For LHD model.
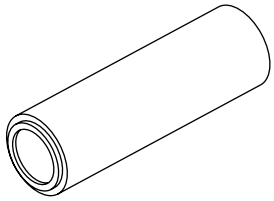 ST-927620000	927620000	INSTALLER B	• Used for installing oil seal of valve housing. • Used with INSTALLER A (926360000). • For LHD model.
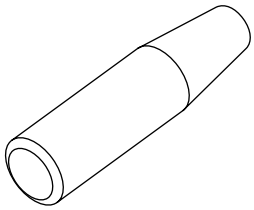 ST-926360000	926360000	INSTALLER A	• Used as a guide to install oil seal. • Used with INSTALLER B (927620000). • For LHD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
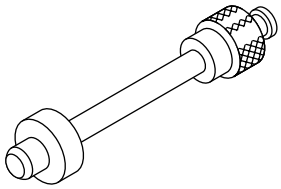 ST34099FA110	34099FA110	INSTALLER	Used for installing oil seal. • For LHD model.
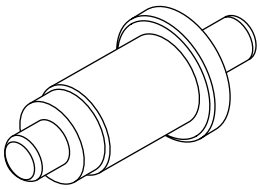 ST34099FA120	34099FA120	INSTALLER AND REMOVER SEAL	• Used for installing valve housing oil seal. • Used with INSTALLER SEAL. (34099FA130) • Used for installing valve housing ball bearing. • Used for removing oil seal and ball bearing from valve housing. • For LHD model.
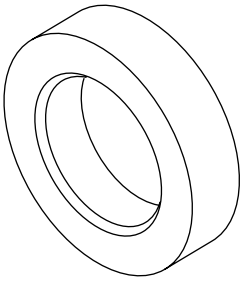 ST34099FA130	34099FA130	INSTALLER SEAL	• Used for installing valve housing oil seal. • Used with INSTALLER AND REMOVER SEAL (34099FA120). • For LHD model.
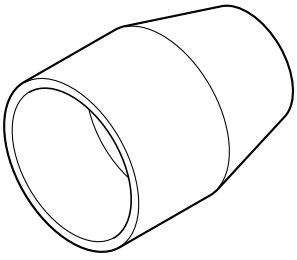 ST-926250000	926250000	GUIDE	• Used for installing holder ASSY into rack housing. • For RHD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
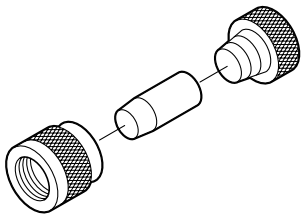 ST-927490000	927490000	INSTALLER A, B, C	• Used for installing oil seal into rack assembly. • For RHD model.
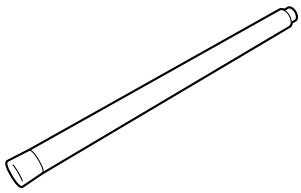 ST-927580000	927580000	REMOVER	• Used for removing back-up ring and oil seal. • For RHD model.
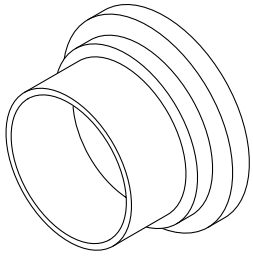 ST34199AE000	34199AE000	GUIDE	• Used for installing rack and seal into housing assembly. • For RHD model.
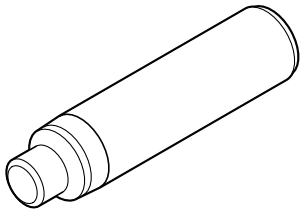 ST34099FA030	34099FA030	INSTALLER & REMOVER	• Used for removing and installing rack oil seal (outer & inner). • For RHD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
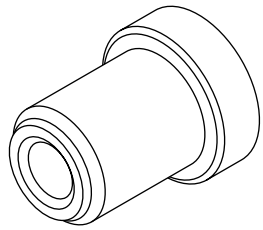 ST34199AE010	34199AE010	INSTALLER	• Used for installing rack oil seal (outer). • For RHD model.
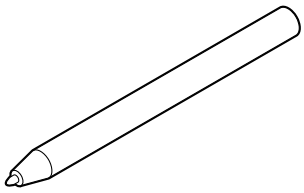 ST34099FA060	34099FA060	PUNCH HOLDER	• Used for caulking. • For RHD model.
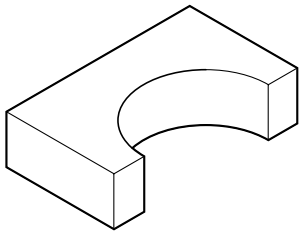 ST34099FA070	34099FA070	BASE	• Used for supporting housing assembly. • For RHD model.
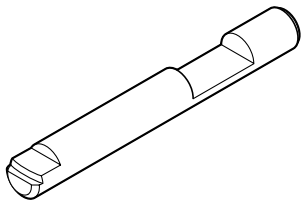 ST34099FA080	34099FA080	PUNCH	• Used for removing caulking. • For RHD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
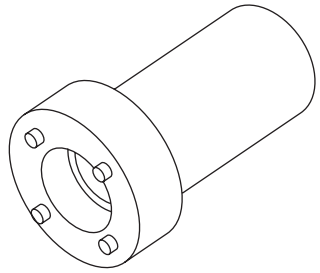 ST34199AE090	34199AE090	PLUG WRENCH	• Used for removing plug. • For RHD model.
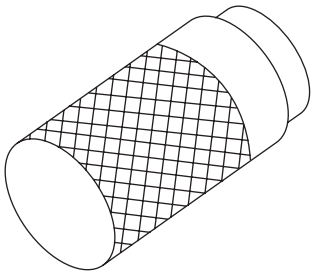 ST34199AE100	34199AE100	PLUG OIL SEAL REMOVER	• Used for removing plug oil seal. • For RHD model.
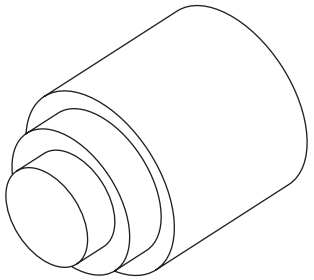 ST34199AE110	34199AE110	PLUG OIL SEAL INSTALLER	• Used for installing plug oil seal. • For RHD model.
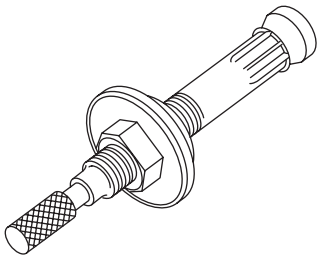 ST34199AE120	34199AE120	GEARBOX OIL SEAL REMOVER	• Used for removing gearbox oil seal. • For RHD model.

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
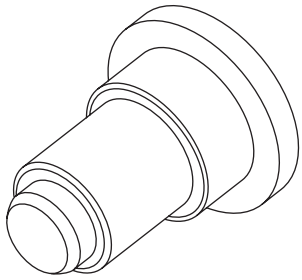 ST34199AE130	34199AE130	GEARBOX OIL SEAL INSTALLER	• Used for installing gearbox oil seal. • For RHD model.

2. Steering Wheel

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Set the tires to straight-ahead position.
3) Remove the airbag module.<Ref. to AB-12, REMOVAL, Driver's Airbag Module.>

WARNING:
Always refer to "Airbag System" before performing airbag module service. <Ref. to AB-3, CAUTION, General Description.>

4) Make matching marks on the steering wheel and steering shaft.

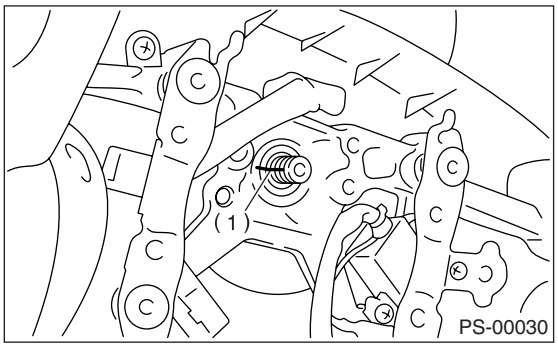

(1) Matching mark

5) Remove the steering wheel nut, and then draw out the steering wheel from shaft using steering puller.

B: INSTALLATION

WARNING:
Always refer to "Airbag System" before performing airbag module service. <Ref. to AB-3, CAUTION, General Description.>

1) Align the center of roll connector. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>
2) Install in the reverse order of removal.

NOTE:
Align matching marks on the steering wheel and steering shaft.

Tightening torque:
45 N·m (4.6 kgf-m, 33.2 ft-lb)

Column cover-to-steering wheel clearance:
2 — 4 mm (0.08 — 0.16 in)

CAUTION:
Insert the roll connector guide pin into guide hole on lower end of surface of steering wheel to prevent damage.

C: INSPECTION

1) Check the steering wheel for deformation. If the deformation is excessive, replace steering wheel.
2) Check the splines on steering wheel for damage. If the damage is excessive, replace steering wheel.

3. Universal Joint

A: REMOVAL

1) Remove the steering wheel. <Ref. to PS-23, REMOVAL, Steering Wheel.>
2) Make matching mark on the universal joint.
3) Remove the universal joint bolts, and then remove the universal joint.

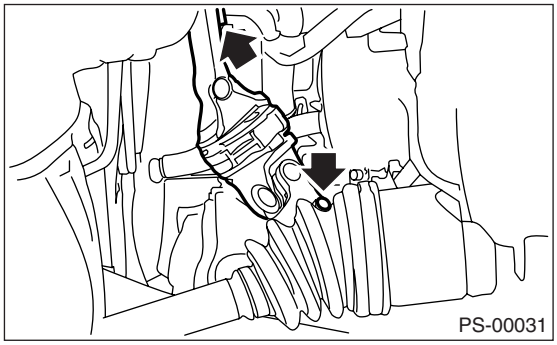

B: INSTALLATION

1) Align the cutout at serrated section of the column shaft and yoke, and then insert the universal joint into column shaft.

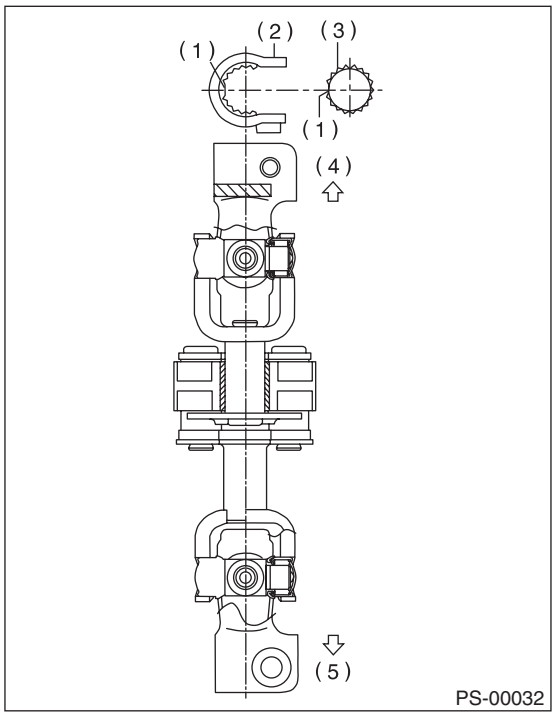

(1) Cutout
(2) Yoke
(3) Column shaft
(4) Column shaft side
(5) Gearbox side

2) Align the matching marks, and then insert the universal joint to serrated section of gear box assembly.
3) Tighten the bolt.

Tightening torque:
24 N·m (2.4 kgf-m, 17.4 ft-lb)

CAUTION:
Excessively large tightening torque of the universal joint bolts may lead to heavy steering wheel operation.

Standard clearance between gearbox to DOJ:
Over 14 mm (0.55 in)

4) Align the center of roll connector. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>
5) Install the steering wheel and airbag module. <Ref. to PS-23, INSTALLATION, Steering Wheel.>

WARNING:
Always refer to "Airbag System" before performing airbag module service. <Ref. to AB-3, CAUTION, General Description.>

C: INSPECTION

Check for wear, damage, or any other faults. If necessary, replace.

Service limit:
Universal joint play; 0 mm (0 in)
Maximum swing torque; 0.3 N (0.03 kgf, 0.07 lb)

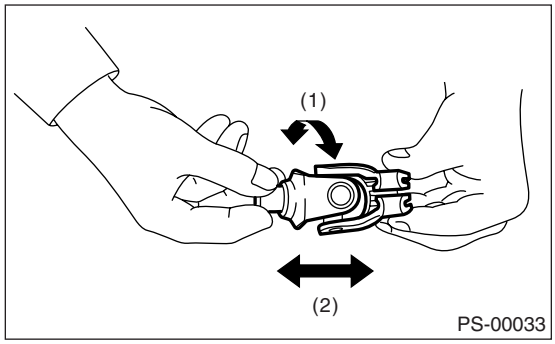

(1) Swing torque
(2) Play

Measurement of folding torque of universal joint is as shown in the figures.

Service limit:
Maximum load; 3.8 N (0.39 kgf, 0.86 lb) or less

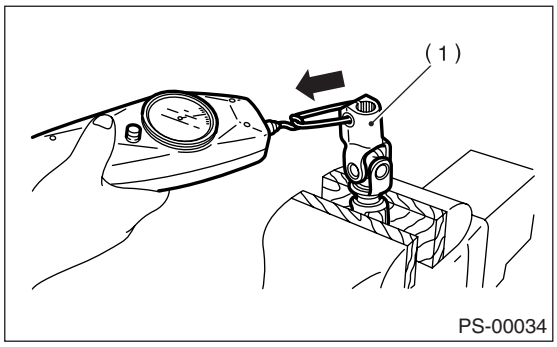

(1) Yoke (gearbox side)

Service limit:
Maximum load; 3.8 N (0.39 kgf, 0.86 lb) or less

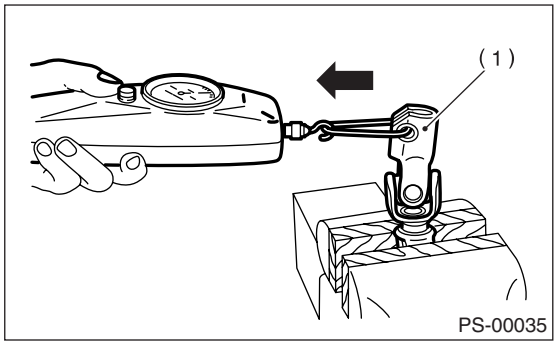

(1) Yoke (gearbox side)

Service limit:
Maximum load; 7.3 N (0.74 kgf, 1.64 lb) or less

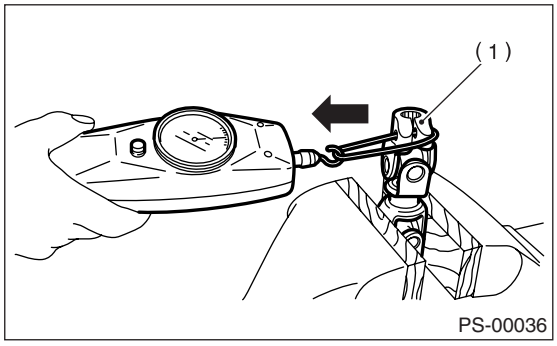

(1) Yoke (Steering column side)

Service limit:
Maximum load; 7.3 N (0.74 kgf, 1.64 lb) or less

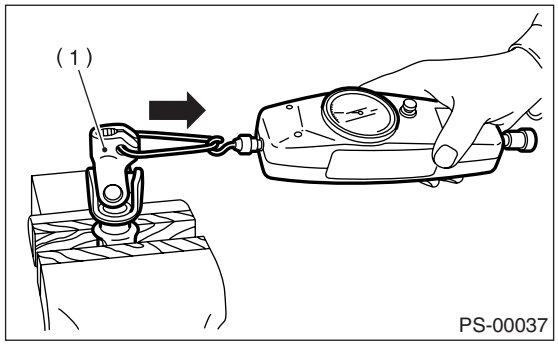

(1) Yoke (Steering column side)

4. Tilt Steering Column

A: REMOVAL

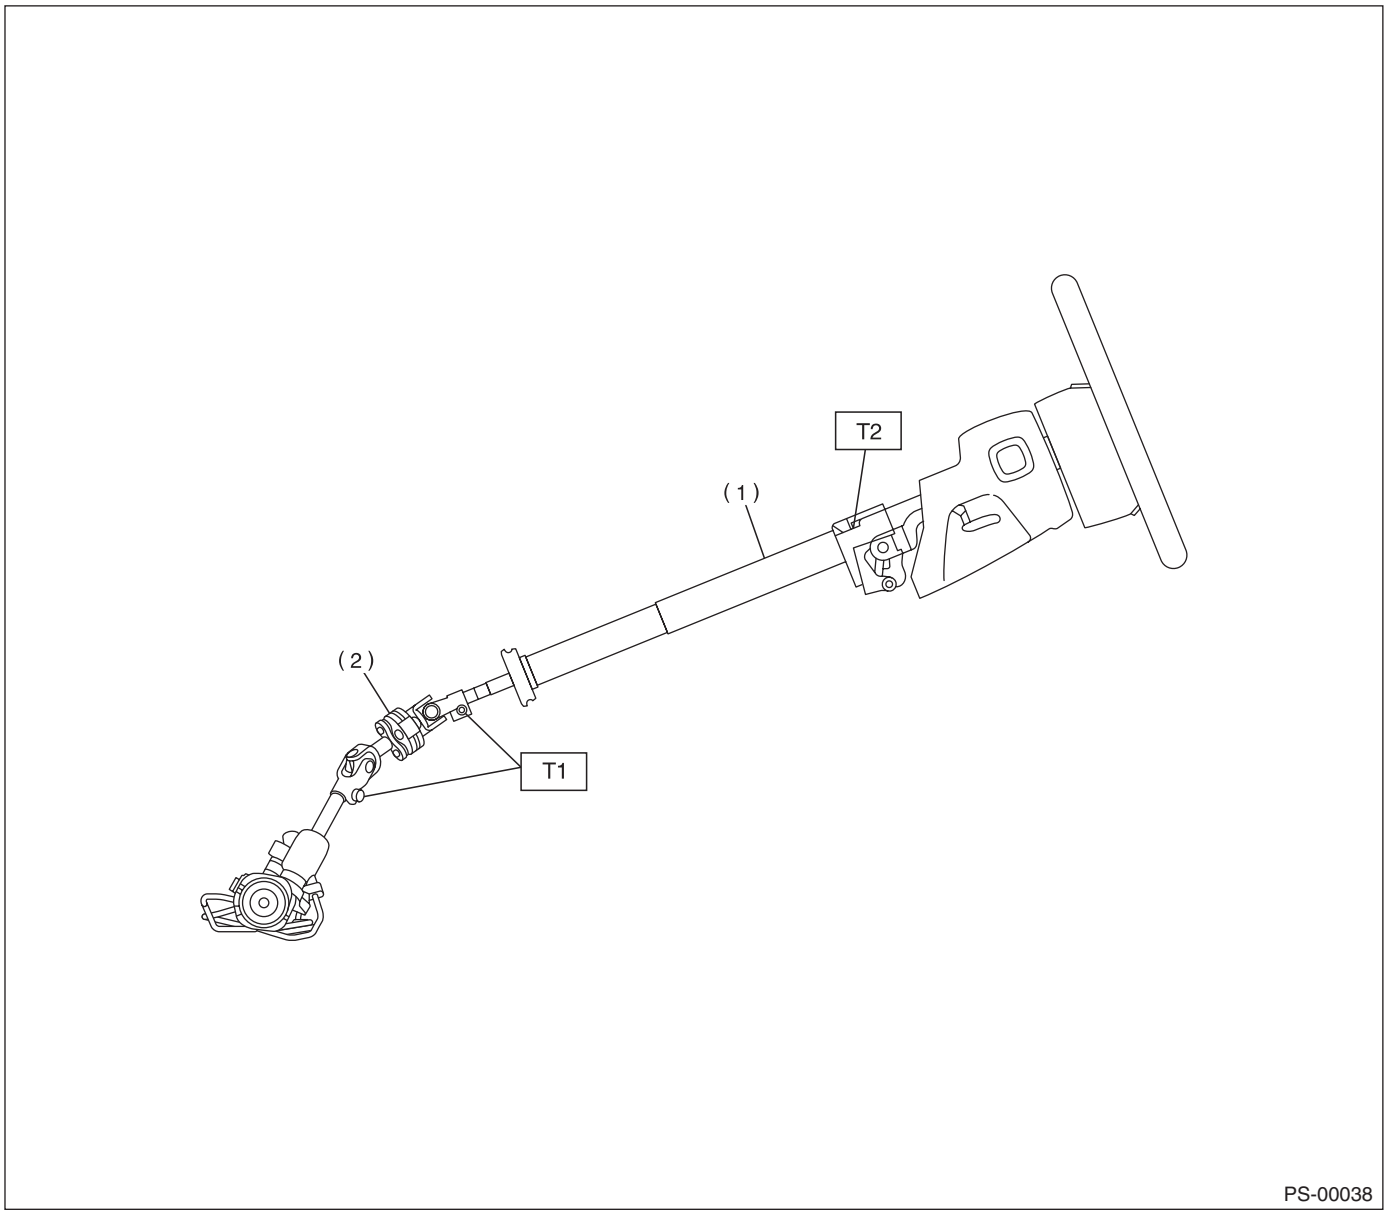

(1) Tilt steering column
(2) Universal joint

Tightening torque: N·m (kgf-m, ft-lb)
T1: 24 (2.4, 17.4)
T2: 25 (2.5, 18.1)

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Remove the airbag module. <Ref. to AB-12, REMOVAL, Driver's Airbag Module.>

WARNING:
Always refer to "Airbag System" before performing airbag module service. <Ref. to AB-3, CAUTION, General Description.>

4) Remove the steering wheel. <Ref. to PS-23, REMOVAL, Steering Wheel.>
5) Remove the universal joint. <Ref. to PS-24, REMOVAL, Universal Joint.>
6) Remove the trim panel under instrument panel.
7) Remove the steering column lower cover.
8) Remove all connectors from steering column.
9) Remove the two bolts under instrument panel securing steering column.

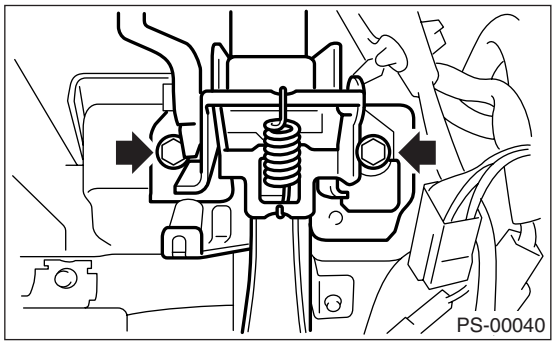
PS-00040

10) Pull out the steering shaft assembly from hole on toe board.

CAUTION:
• Be sure to remove the universal joint before removing the steering shaft assembly installing bolts when removing the steering shaft assembly or when lowering it for servicing of other parts.
• Do not loosen the tilt lever when the steering column is not secured to the vehicle.

B: INSTALLATION

1) Set the grommet to toe board.

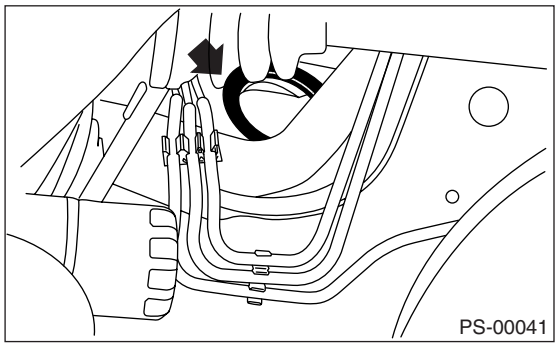
PS-00041

2) Insert the end of steering shaft into toe board grommet.
3) With the tilt lever secured, tighten the steering shaft mounting bolts under instrument panel.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

4) Connect all connectors under instrument panel.
5) Connect the airbag system connector at harness spool.

NOTE:
Make sure to apply double lock.

6) Install the lower column cover with tilt lever held in the lowered position.
7) Install the universal joint. <Ref. to PS-24, INSTALLATION, Universal Joint.>
8) Align center of roll connector. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>
9) Install the steering wheel. <Ref. to PS-23, INSTALLATION, Steering Wheel.>

CAUTION:
Insert the roll connector guide pin into guide hole on lower end of surface of steering wheel to prevent damage.

10) Install the airbag module to steering wheel.

WARNING:
Always refer to "Airbag System" before performing the service operation. <Ref. to AB-3, CAUTION, General Description.>

C: DISASSEMBLY

Remove the two screws securing upper steering column covers, and two screws securing combination switch, and then remove the related parts.

D: ASSEMBLY

1) Insert the combination switch to upper column shaft, and then install the upper column cover. Then route the ignition key harness and combination switch harness between column cover mounting bosses.

Tightening torque:
1.2 N·m (0.12 kgf-m, 0.9 ft-lb)

CAUTION:
Do not overtorque the screw.

E: INSPECTION

1. BASIC INSPECTION

Measure overall length of the steering column. If not as specified, replace.

Standard value:
Overall length L
Except STi model
825.7±1.5 mm (32.51±0.059 in)
STi model
818.7±1.5 mm (32.23±0.059 in)

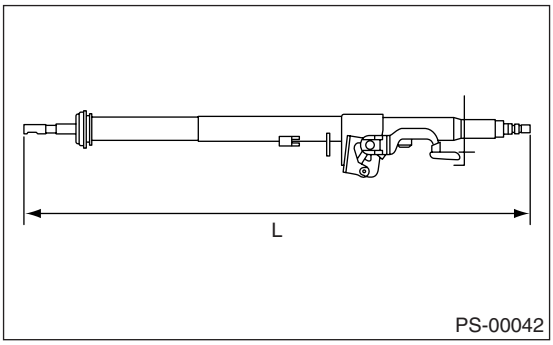

2. AIRBAG MODEL INSPECTION

WARNING:
For airbag inspection procedures, refer to "Airbag System". <Ref. to AB-3, CAUTION, General Description.>

5. Steering Gearbox [LHD MODEL]

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Loosen the front wheel nut.
4) Lift-up the vehicle, and then remove the front wheels.
5) Remove the under cover.
6) Remove the sub frame. <Ref. to FS-26, REMOVAL, Sub Frame.>
7) Remove the front exhaust pipe assembly. (Non-turbo model)
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>

WARNING:
Be careful, the exhaust pipe is hot.

8) Using a puller, remove the tie-rod end from knuckle arm after pulling off cotter pin and removing castle nut.

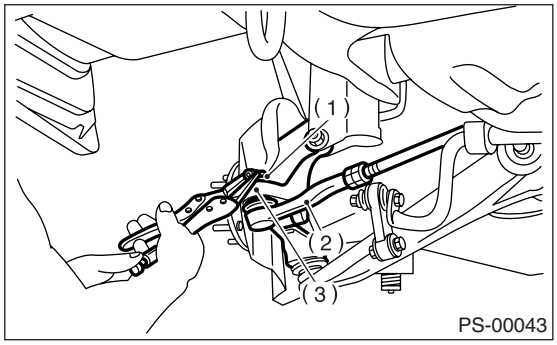

(1) Castle nut
(2) Tie-rod end
(3) Knuckle arm

9) Remove the jack-up plate and front stabilizer.

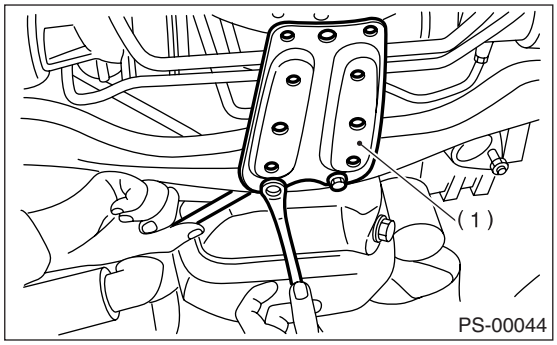

(1) Jack-up plate

10) Remove the one pipe joint at center of gearbox, and connect vinyl hose to pipe and joint. Discharge fluid by turning the steering wheel fully clockwise and counterclockwise. Discharge fluid similarly from the other pipe.

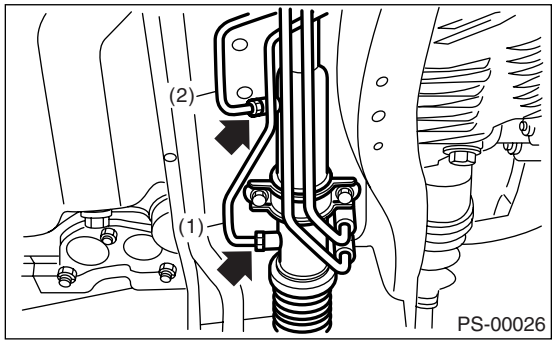

(1) Pipe A
(2) Pipe B

11) Remove the universal joint. <Ref. to PS-24, REMOVAL, Universal Joint.>
12) Disconnect the lower pipe C from gear box first, and upper pipe D second.

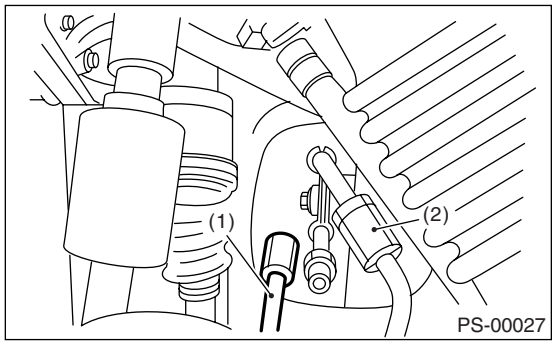

(1) Pipe C
(2) Pipe D

13) Remove the clamp bolts securing the gearbox to crossmember, and then remove the gearbox.

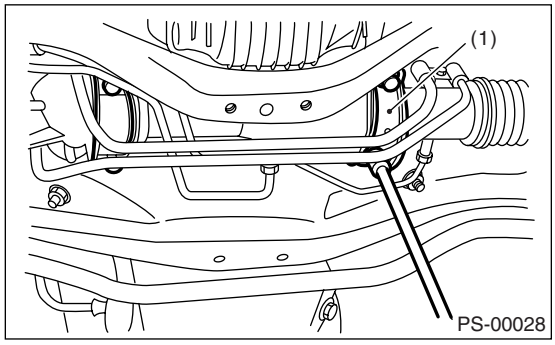

(1) Clamp

B: INSTALLATION

1) Insert the gearbox into crossmember, being careful not to damage the gearbox boot.
2) Tighten the gearbox to crossmember bracket via clamp with bolts to specified torque.

Tightening torque:
59 N·m (6.0 kgf-m, 43.4 ft-lb)

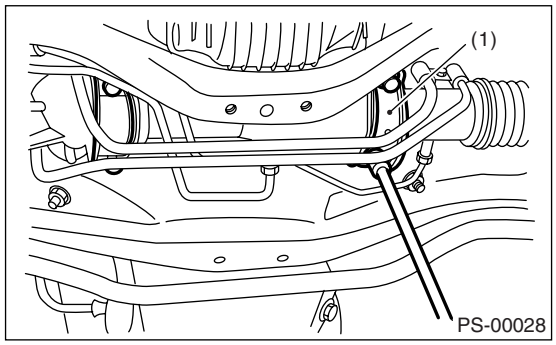

(1) Clamp

3) Connect the pipe D first to gear box, and pipe C second.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

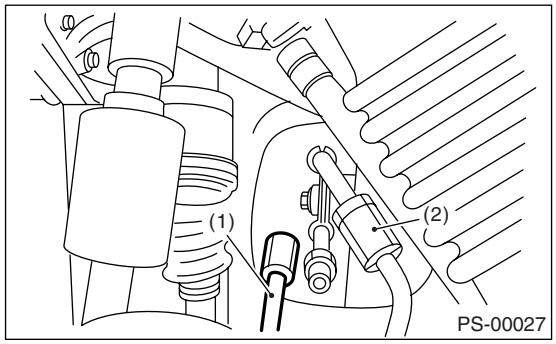

(1) Pipe C
(2) Pipe D

4) Install the universal joint. <Ref. to PS-24, INSTALLATION, Universal Joint.>
5) Connect the tie-rod end and knuckle arm, and tighten with castle nut.

Castle nut tightening torque:
27 N·m (2.75 kgf-m, 19.9 ft-lb)

CAUTION:
When connecting, do not hit the cap at bottom of tie-rod end with hammer.

6) After tightening the castle nut to specified torque, tighten it further within 60° until cotter pin hole is aligned with the slot in nut, and then bend the cotter pin to lock.

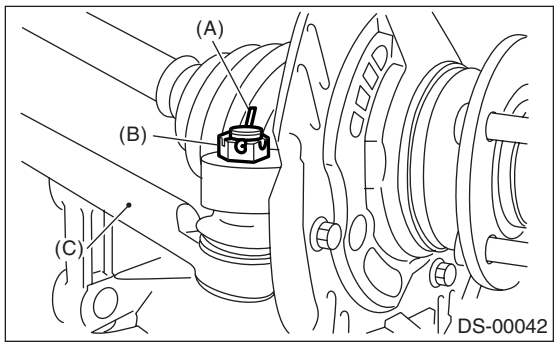

(A) Cotter pin
(B) Castle nut
(C) Tie-rod end

7) Install the front stabilizer to vehicle. <Ref. to FS-24, INSTALLATION, Front Stabilizer.>
8) Install the front exhaust pipe assembly.
9) Install the sub frame. <Ref. to FS-26, INSTALLATION, Sub Frame.>
10) Install the under cover. <Ref. to EI-21, INSTALLATION, Front Under Cover.>
11) Align the center of roll connector. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>
12) Install the steering wheel. <Ref. to PS-23, INSTALLATION, Steering Wheel.>
13) Install the front wheels.
14) Tighten the wheel nuts to specified torque.

Tightening torque:
90 N·m (9.1 kgf-m, 65.8 ft-lb)

15) Connect the battery ground cable to battery.
16) Pour fluid into the oil tank, and bleed air.
<Ref. to PS-88, Power Steering Fluid.>
17) Check for fluid leaks.
18) Install the jack-up plate.
19) Lower the vehicle.
20) Check the fluid level in oil tank.

21) After adjusting the toe-in and steering angle, tighten the lock nut on tie-rod end.

Tightening torque:
83 N·m (8.5 kgf-m, 61.5 ft-lb)

NOTE:
When adjusting the toe-in, hold boot as shown to prevent it from being rotated or twisted. If twisted, straighten it.

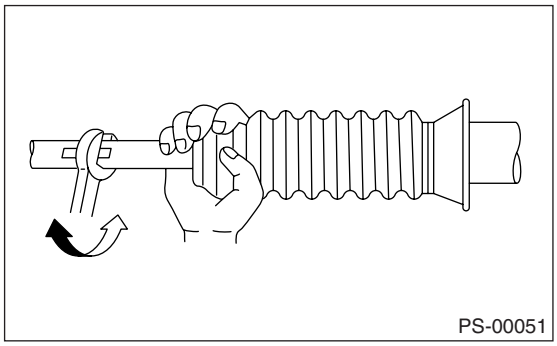
PS-00051

C: DISASSEMBLY

1. RACK HOUSING ASSEMBLY

1) Disconnect the four pipes from gearbox.

NOTE:
Remove the pipes E and F as a single unit being fixed at clamp plate.

2) Secure the gearbox removed from vehicle in vice using ST.
ST 926200000 STAND

CAUTION:
Secure the gearbox in a vise using ST as shown. Do not attempt to secure it without this ST.

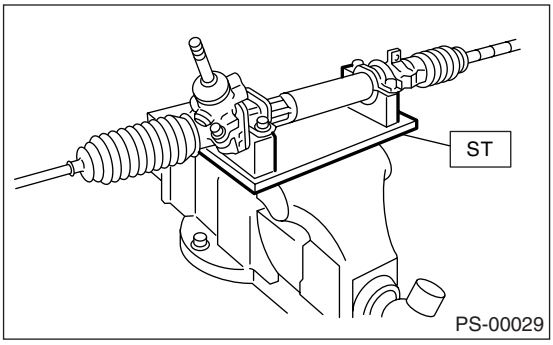

PS-00029

3) Remove the tie-rod end and lock nut from gearbox.

4) Remove the small clip from boot using pliers, and then move the boot to tie-rod end side.

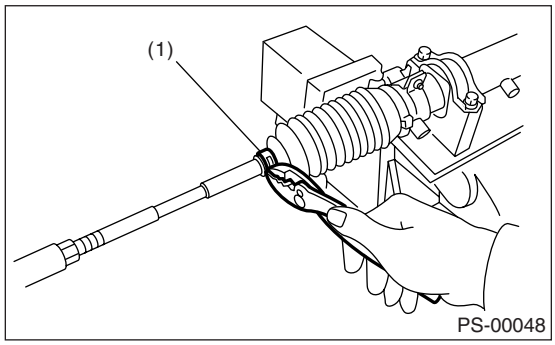

PS-00048

(1) Clip

5) Using a flat tip screwdriver, remove the band from boot.

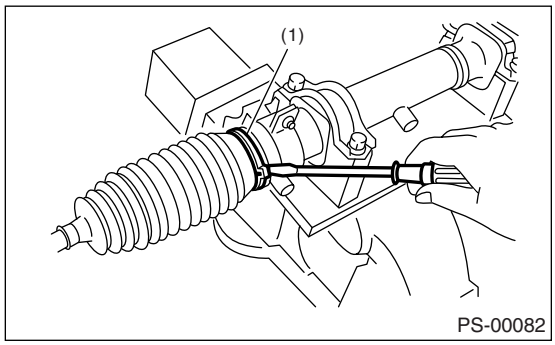

PS-00082

(1) Band

6) Extend the rack approx. 40 mm (1.57 in) out. Unlock the lock washer on both side of tie-rod end using a flat tip screwdriver.

CAUTION:
Be careful not to scratch the rack surface as oil leaks may result.

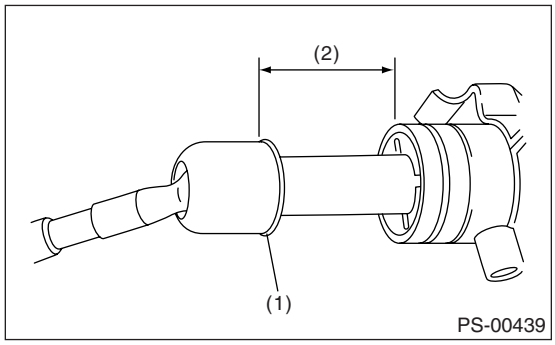

PS-00439

(1) Lock washer
(2) Approx. 40 mm (1.57 in)

7) Using the ST, loosen the lock nut.
ST 926230000 SPANNER

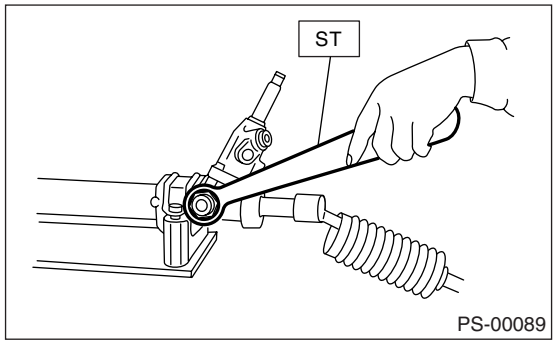

8) Tighten the adjusting screw until it no longer tightens.

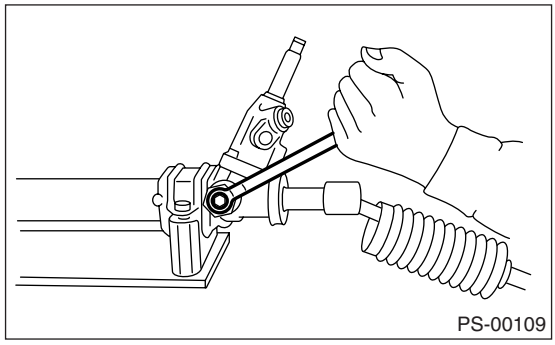

9) Using a wrench [32 mm (1.26 in) width across flats] or adjustable wrench, remove the tie-rod.

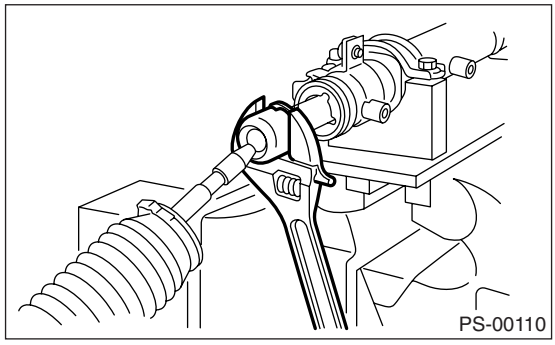

10) Loosen the adjusting screw, and then remove the spring and sleeve.
11) Remove the two bolts securing valve assembly.

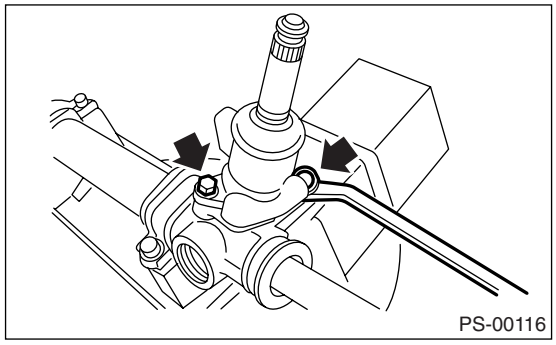

12) Carefully draw out the input shaft, and then remove the valve assembly.

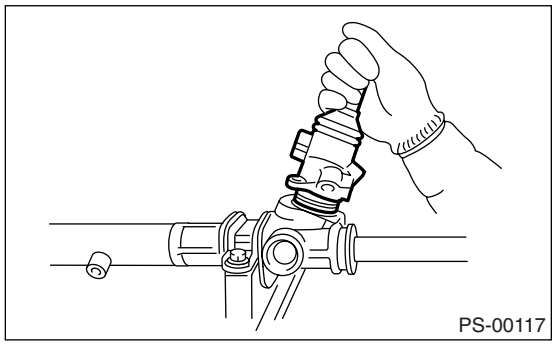

13) Using a sharp pointed pliers, rotate the rack stopper in direction of the arrow until end of the circlip comes out of stopper. Rotate the circlip in opposite direction and pull it out.

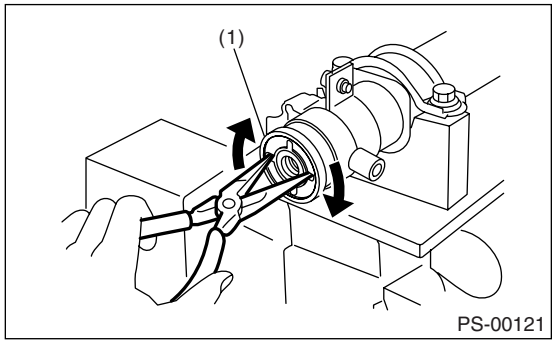

(1) Rack stopper

14) Pull the rack assembly from cylinder side, and draw out the rack bushing and rack stopper together with the rack assembly.

CAUTION:
Be careful not to contact the rack to inner wall of cylinder when drawing out. Any scratch on the cylinder inner wall will cause oil leakage.

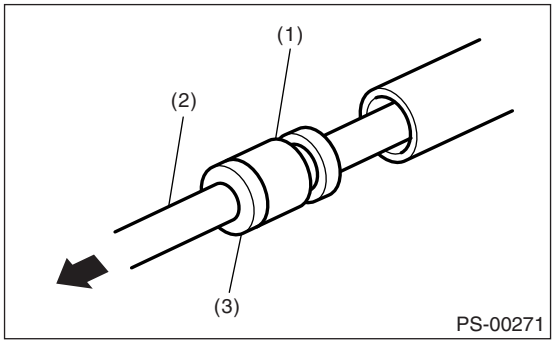

(1) Rack bushing
(2) Rack assembly
(3) Rack stopper

15) Remove the rack bushing and rack stopper from rack assembly.

16) Remove the oil seal from rack.
17) Insert the ST from pinion housing side, and then remove the oil seal using a press.
ST 34099FA110 INSTALLER

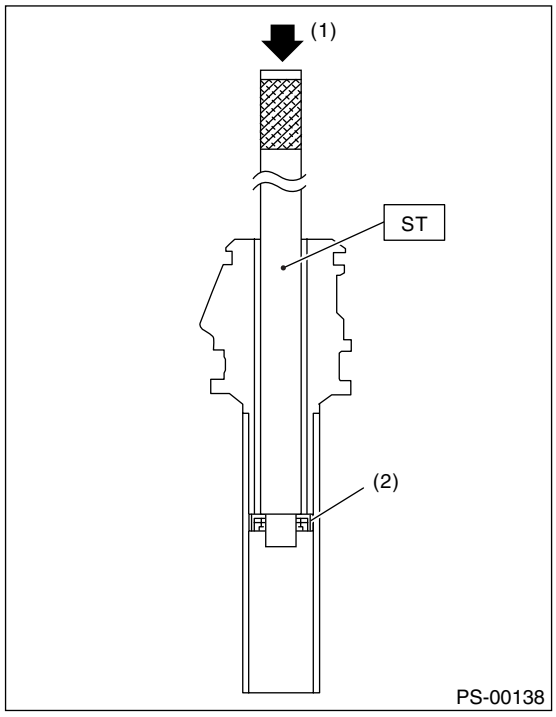

(1) Press
(2) Oil seal

2. CONTROL VALVE

1) Disconnect the four pipes from gearbox.

NOTE:
Remove the pipes E and F as a single unit being fixed at clamp plate.

2) Secure the gearbox removed from the vehicle in vise using ST.
ST 926200000 STAND

CAUTION:
Secure the gearbox in a vise using ST as shown. Do not attempt to secure it without this ST.

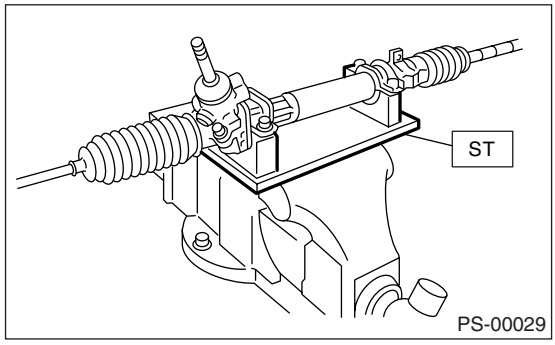

3) Using the ST, loosen the lock nut.
ST 926230000 SPANNER

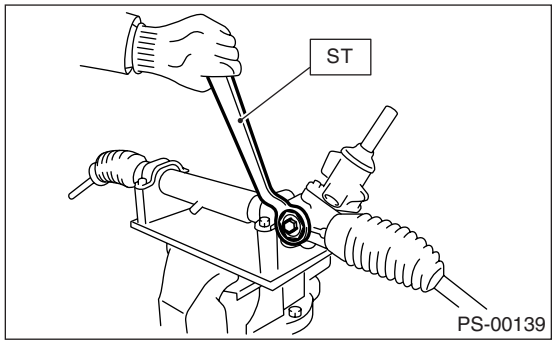

4) Tighten the adjusting screw until it no longer tightens.

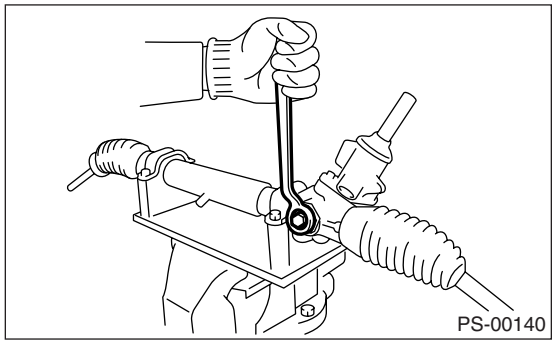

5) Loosen the adjusting screw, and then remove the spring and sleeve.
6) Remove the two bolts securing valve assembly.

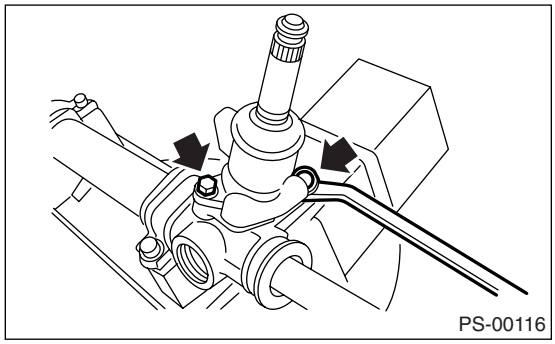

7) Carefully draw out the input shaft, and then remove the valve assembly.

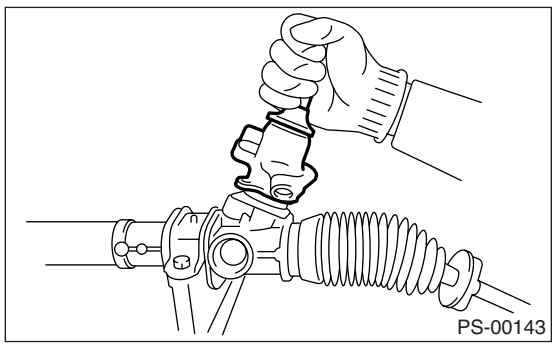

8) Slide the dust cover out.

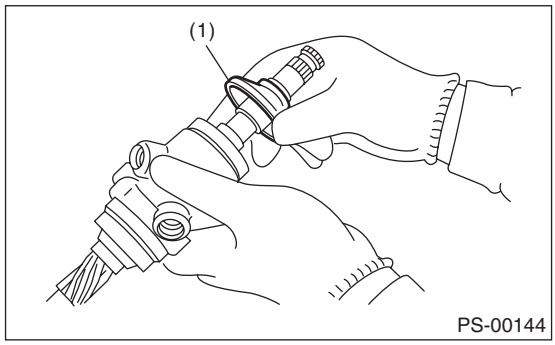

(1) Dust cover

9) Using a press remove the pinion and valve assembly from valve housing.

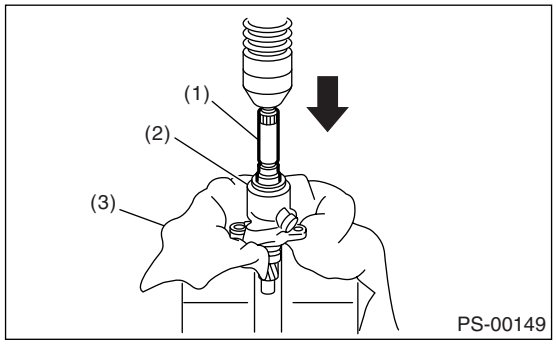

(1) Valve assembly
(2) Valve housing
(3) Cloth

10) Using the ST and press, remove the dust seal, oil seal and special bearing from valve housing.
ST 34099FA120 INSTALLER & REMOVER SEAL

CAUTION:
• Do not apply force to the end surface of valve housing.
• Do not reuse the oil seal after removal.

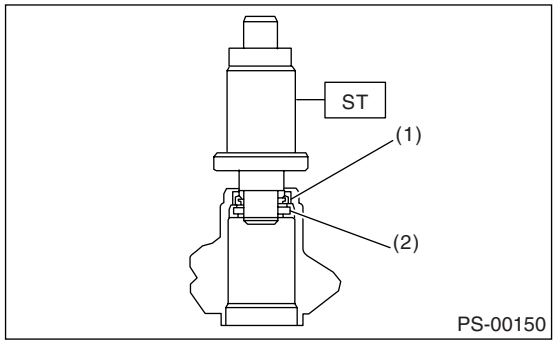

(1) Oil seal
(2) Special bearing

11) Remove the snap ring using snap ring pliers.

CAUTION:
Be careful not to scratch the pinion and valve assembly.

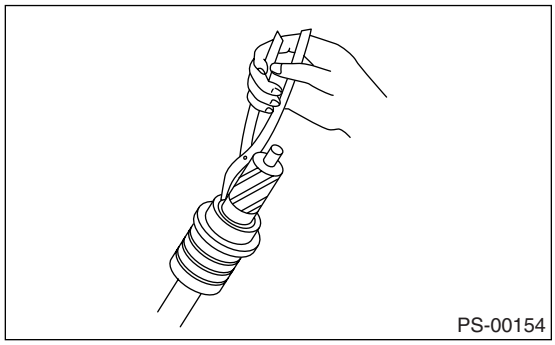

12) Press out the bearing together with the back up washer using pipe of I.D. 38.5 to 39.5 mm (1.516 to 1.555 in) and press.

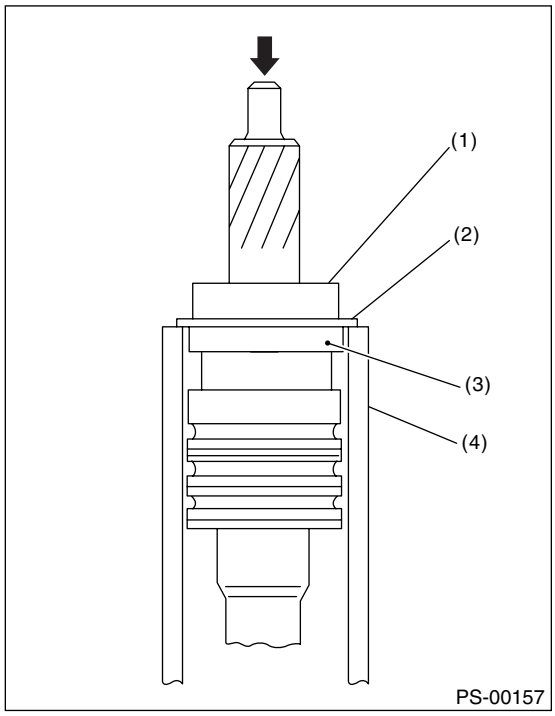

(1) Bearing
(2) Backing washer
(3) Oil seal
(4) Pipe

13) Remove the oil seal.

D: ASSEMBLY

1. RACK HOUSING ASSEMBLY

CAUTION:
Use only SUBARU genuine grease for the gearbox.

Specified grease for gearbox:
VALIANT GREASE M2 (Part No. 003608001)

1) Apply power steering fluid to a new oil seal.
2) Install the oil seal in correct position as shown in the figure. Push the oil seal using a press until portion A of ST contacts face of B.
ST 34099FA110 INSTALLER

CAUTION:
Be careful not to damage or scratch the cylinder inner wall.

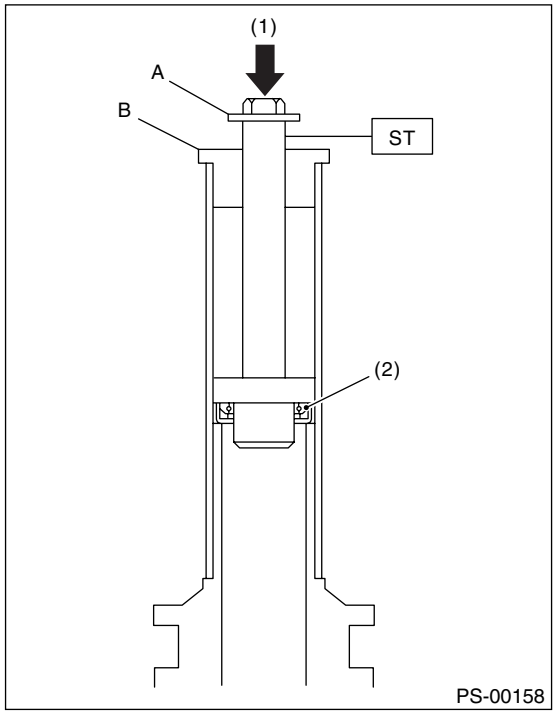

(1) Press
(2) Oil seal

3) Fix the rack housing in vise using ST.
ST 926200000 STAND

NOTE:
• When fixing the rack housing in vise, be sure to use this special tool. Do not fix rack housing in vise using pad such as aluminum plates, etc.
• When using the old rack housing, be sure to clean and remove rust before assembling. Check pinion housing bushing carefully.

4) Fit the ST over toothed portion of rack assembly, and check for binding or unsmooth insertion. If any deformation is noted on flats at the end of rack, shape by using file, and wash with cleaning fluid.
ST 926390001 COVER & REMOVER

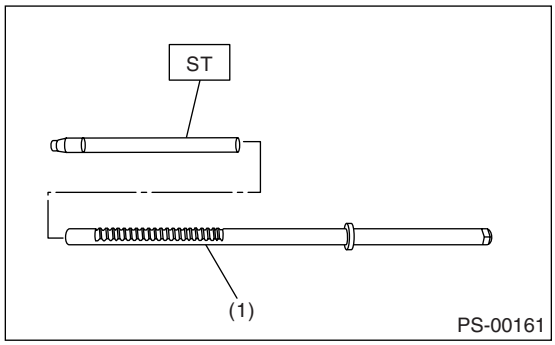

(1) Rack assembly

5) Apply genuine grease to the teeth of thoroughly washed rack assembly, and then fit the ST over the toothed portion.

CAUTION:
• Be careful not to block the air passage with grease. Remove excessive grease.
• After fitting cover, check the air passage hole for clogging. If clogged, open by removing grease from the hole.

6) Before inserting the rack assembly, apply a coat of specified power steering fluid to the surfaces of ST and rack piston.
7) Insert the rack assembly into rack housing from cylinder side, and then remove the ST after it has passed completely through oil seal.

8) Fit the ST1 and ST2 over the end of rack, and then install a new rack bushing.
ST1 926400000 GUIDE
ST2 927660000 GUIDE

CAUTION:
• If burrs or nicks are found on this guide and rack shaft portion, remove by filing.
• Dip the rack bushing in specified power steering fluid before installing, and pay attention not to damage O-ring and oil seal.

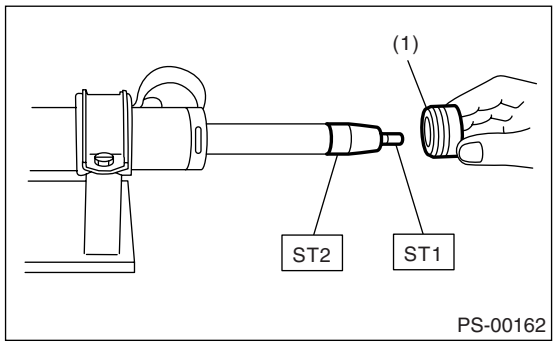

(1) Rack bushing assembly

9) Insert the rack stopper into the cylinder tube until internal groove (on cylinder side) is aligned with external groove (on rack stopper). Turn the rack stopper with ST so that the rack stopper hole is seen through cylinder slits.
10) Insert the rack stopper into the rack housing, and then wrap a new circlip using a sharp pointed pliers to secure the rack stopper in position.

CAUTION:
Be careful not to scratch the rack while winding circlip.

NOTE:
Rotate the wrench another 90 to 180° after end of circlip has been wrapped in.

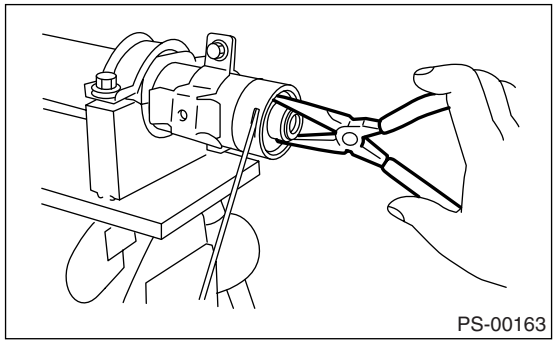

11) Apply genuine grease to dust cover, and then install the dust cover to valve assembly.

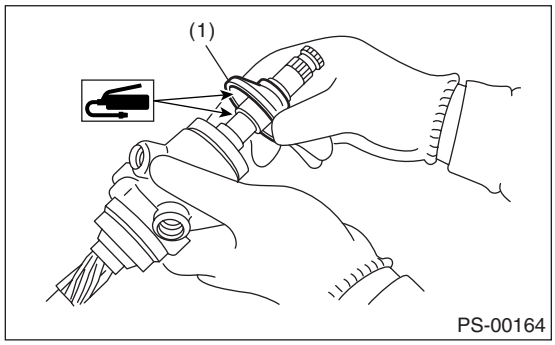

(1) Dust cover

12) Apply genuine grease to the pinion gear and bearing of valve assembly.

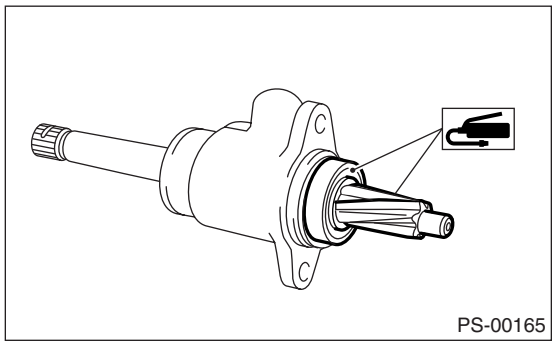

13) Install a new gasket on valve assembly. Insert the valve assembly into place while facing rack teeth toward pinion.

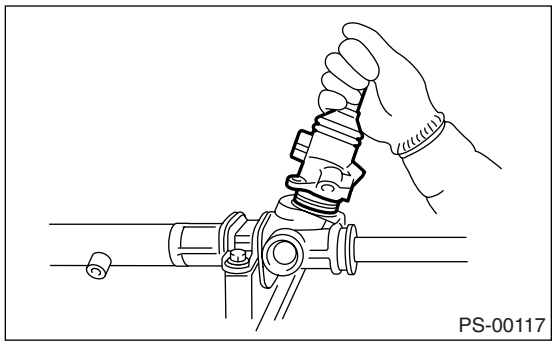

14) Tighten the bolts alternately to secure valve assembly.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

CAUTION:
Be sure to alternately tighten the bolts.

15) Temporarily install the rack, and then operate it from lock to lock two or three times to make it fit in. Remove the grease blocking air vent hole.

CAUTION:
If operating the rack from lock to lock without installing tie-rod, it may damage the oil seal. Always install the tie-rods LH and RH.

16) Apply a coat of grease to the sliding surface of sleeve and seating surface of spring, and then insert sleeve into steering body.
Charge the adjusting screw with grease, and then insert the spring into adjusting screw and install on steering body.

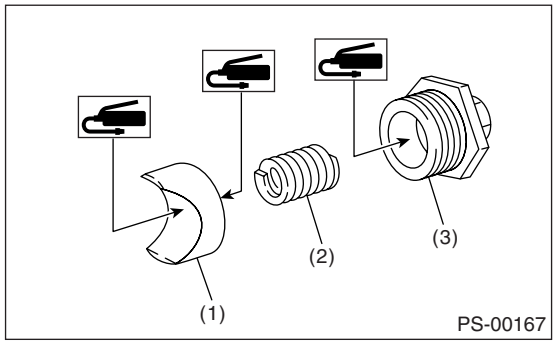

(1) Sleeve
(2) Spring
(3) Adjusting screw

17) Tighten the adjusting screw to specified torque.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

18) After tightening to the specified tightening torque, loosen it by 25°.
19) Remove the tie-rod.
20) Verify that play is within specified value. <Ref. to PS-44, SERVICE LIMIT, INSPECTION, Steering Gearbox [LHD MODEL].>

21) Loosen the adjusting screw, and then apply liquid gasket to at least 1/3 of the entire perimeter of adjusting screw thread.

Liquid gasket:
THREE BOND 1141

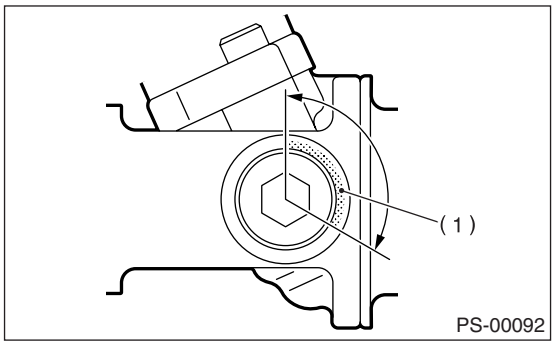

(1) Apply liquid gasket to at least 1/3 of entire perimeter.

22) Tighten the adjusting screw to specified torque.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

23) After tightening to the specified tightening torque, loosen it by 25°.
24) Install the lock nut. While holding the adjusting screw with a wrench, tighten lock nut using ST.
ST 926230000 SPANNER

Tightening torque (Lock nut):
39 N·m (4.0 kgf-m, 28.9 ft-lb)

NOTE:
Hold the adjusting screw with a wrench to prevent it from turning while tightening lock nut.

25) Extend the rack approx. 40 mm (1.57 in) beyond side of steering body.
26) Install the tie-rod and a new lock washer into rack.

Tightening torque:
78 N·m (8.0 kgf-m, 57.9 ft-lb)

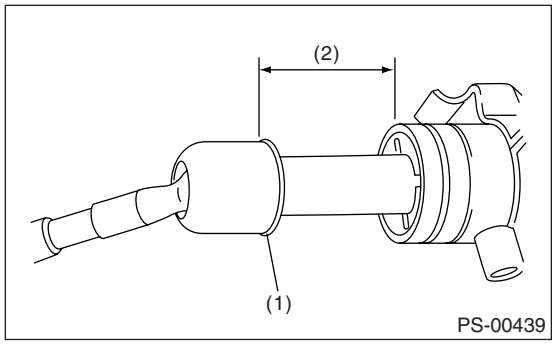

(1) Lock washer
(2) Approx. 40 mm (1.57 in)

27) Bend the lock washer.

CAUTION:
Be careful not to scratch the rack when bending lock washer.

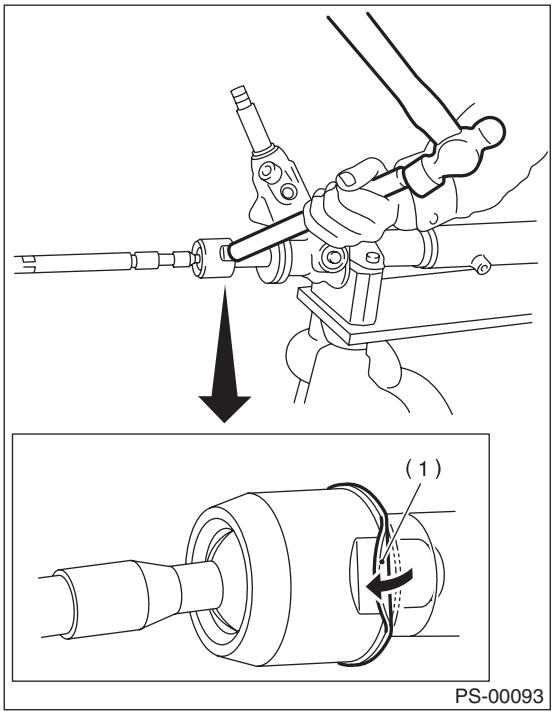

(1) Lock washer

28) Apply a coat of grease to the tie-rod groove, and then install the boot to housing.

NOTE:
Make sure that the boot is installed without unusual inflation or deflation.

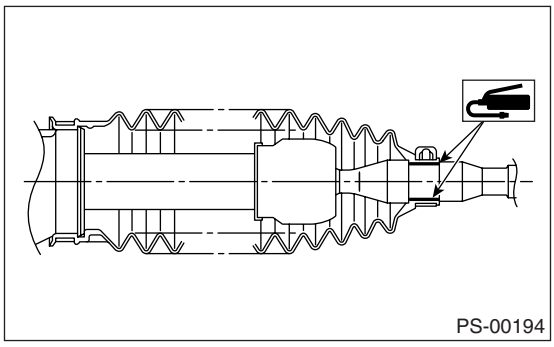

29) Install a new boot band. Using band clamp pliers, caulk the boot band until caulking part clearance is 2 mm (0.079 in) or less.

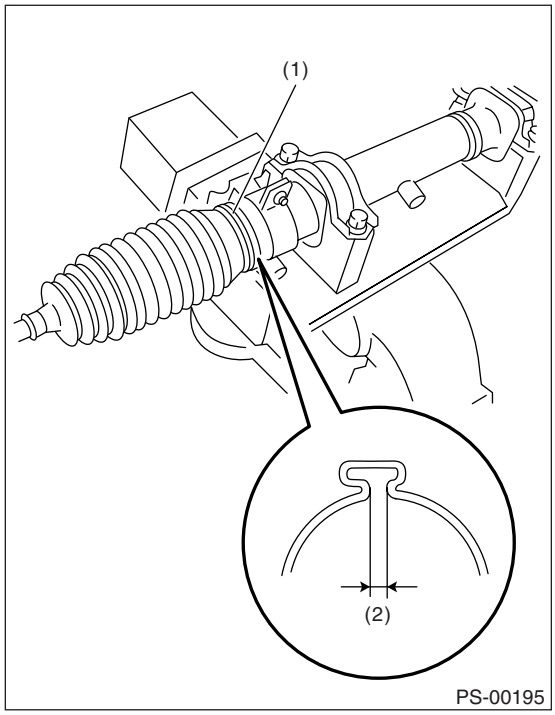

(1) Boot band
(2) 2 mm (0.079 in) or less

30) Fix the boot end with clip (small).

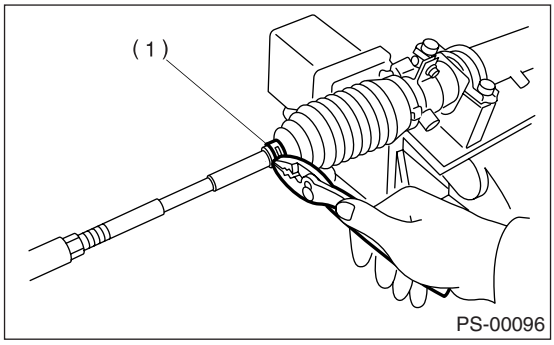

(1) Clip

31) After installing, check the boot end is positioned into groove on tie-rod.

32) If the tie-rod end was removed, screw in the lock nut and tie-rod end to screwed portion of tie-rod, and then tighten the lock nut temporarily in a position as shown in the figure.

Installed tie-rod length: L
Sedan:
25 mm (0.98 in)
Wagon:
15 mm (0.59 in)

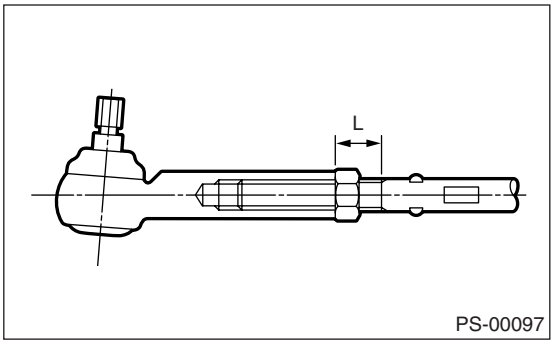

33) Inspect the gearbox as follows:
"A" Holding the tie-rod end, repeat lock to lock two or three times as quickly as possible.
"B" Holding the tie-rod end, turn it slowly at a radius one or two times as large as possible.
After all, make sure that the boot is installed in specified position without deflation.

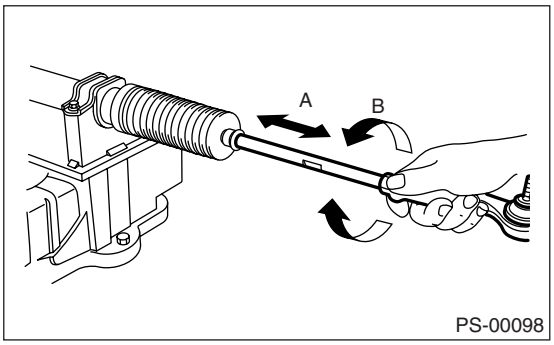

34) Remove the gearbox from ST.
ST 926200000 STAND
35) Install the four pipes on gearbox.
(1) Connect the pipe A and B to four pipe joints of gearbox.

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

(2) Connect the pipe E and F to gearbox.

Tightening torque:
Pipe E: 15 N·m (1.5 kgf-m, 10.8 ft-lb)
Pipe F: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

2. CONTROL VALVE ASSEMBLY

Specified steering grease:
VALIANT GREASE M2 (Part No. 003608001)

1) Clean all parts and tools before reassembling.
2) Apply a coat of specified power steering fluid to the inner wall of valve housing.

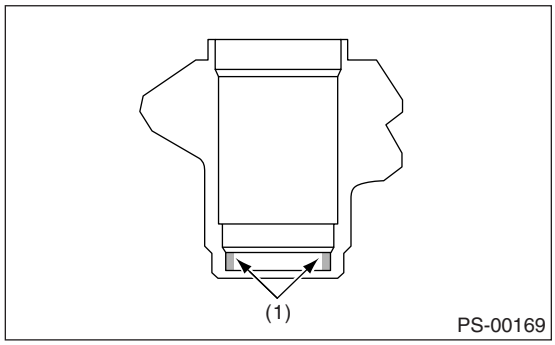

(1) Apply fluid.

3) Attach the ST2 to ST1.
ST1 34099FA120 INSTALLER & REMOVER SEAL
ST2 34099FA130 INSTALLER SEAL
4) To avoid scratching the oil seal, apply a coat of grease to the contact surface of installer and oil seal.
5) Verify the oil seal direction.
Attach the oil seal to installer and position in valve housing before pressing into place.
6) Press the oil seal into place using a press.

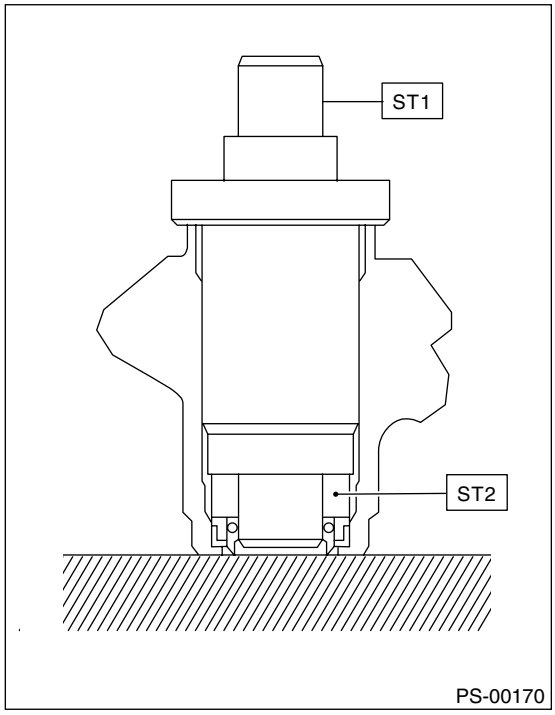

7) Attach the bearing to ST, and then position in value housing. Using the ST and press, install the special bearing in valve housing.
ST 34099FA120 INSTALLER & REMOVER SEAL

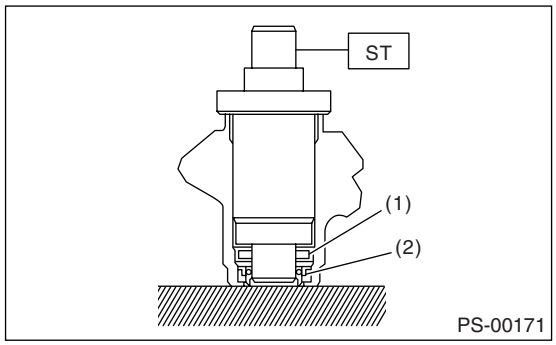

(1) Special bearing
(2) Oil seal

8) Put vinyl tape around the pinion shaft splines to protect oil seal from damage.
9) Fit the pinion and valve assembly into valve housing.
10) Secure the valve assembly to ST1 and ST2.
ST1 926370000 INSTALLER A
ST2 34099FA100 STAND BASE
11) Apply specified power steering fluid to oil seal and ST3.

12) Install the ST3 to pinion, and then insert the oil seal. Press the oil seal using a press until ST4 contacts face end of valve housing.
ST3 926360000 INSTALLER A
ST4 927620000 INSTALLER B

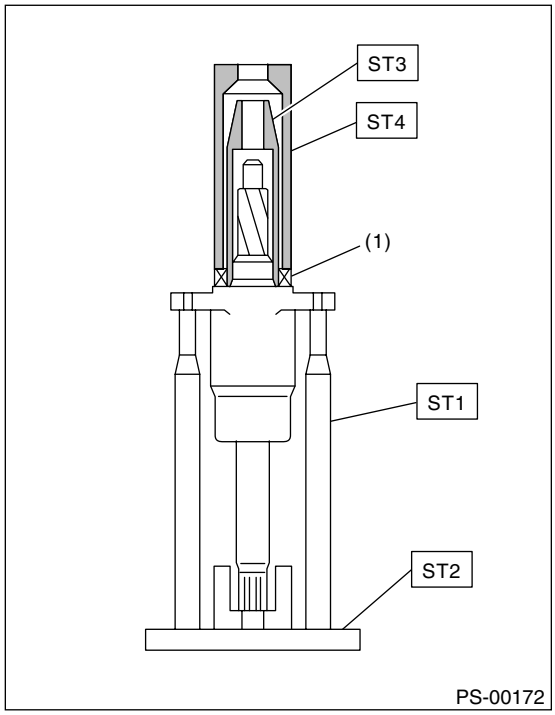

(1) Oil seal

13) Remove the ST3, and then fit the back-up washer.
14) Force-fit the ball bearing using ST3.
ST1 926370000 INSTALLER A
ST2 34099FA100 STAND BASE
ST3 927640000 INSTALLER B

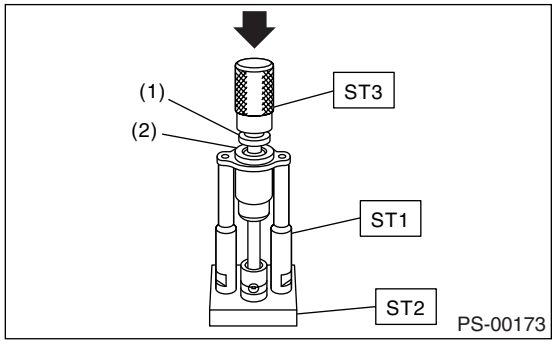

(1) Ball bearing
(2) Back-up washer

NOTE:
Be careful not to tilt the ball bearing during installation.

15) Install the snap ring using snap ring pliers.

NOTE:
Rotate the snap ring to check for proper installation.

16) Apply the specified grease to dust cover.
17) Install the dust cover on valve assembly.

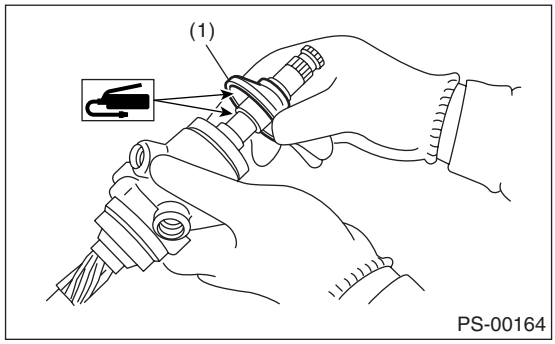

(1) Dust cover

18) Apply genuine grease to the pinion gear and bearing of valve assembly.

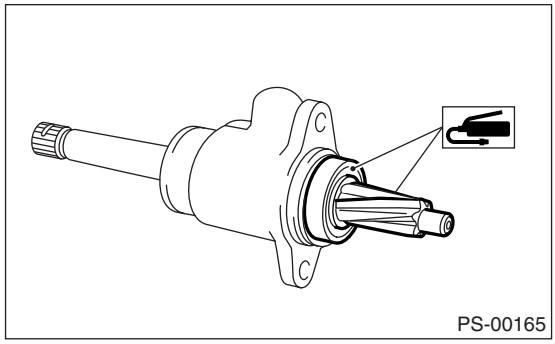

19) Install a new gasket on valve assembly. Insert the valve assembly into place while facing rack teeth toward pinion.

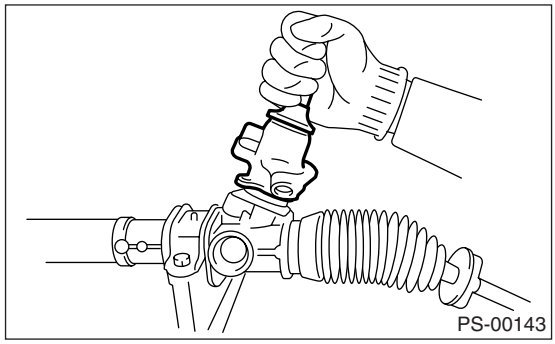

20) Tighten the bolts alternately to secure valve assembly.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

CAUTION:
Be sure to alternately tighten the bolts.

21) Apply a coat of grease to the sliding surface of sleeve and seating surface of spring, and then insert sleeve into steering body.
Charge the adjusting screw with grease, and then insert the spring into adjusting screw and install on steering body.

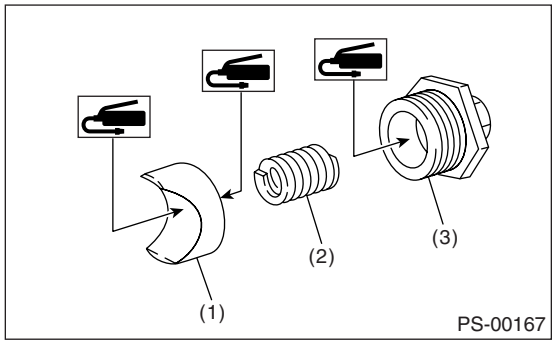

(1) Sleeve
(2) Spring
(3) Adjusting screw

22) Tighten the adjusting screw to specified torque.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

23) After tightening to the specified tightening torque, loosen it by 25°.
24) Verify that play is within specified value. <Ref. to PS-44, SERVICE LIMIT, INSPECTION, Steering Gearbox [LHD MODEL].>
25) Loosen the adjusting screw, and then apply liquid gasket to at least 1/3 of the entire perimeter of adjusting screw thread.

Liquid gasket:
THREE BOND 1141

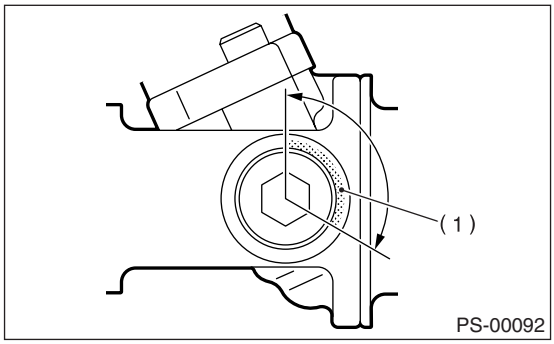

(1) Apply liquid gasket to at least 1/3 of entire perimeter.

26) Tighten the adjusting screw to specified torque.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

27) After tightening to the specified tightening torque, loosen it by 25°.

28) Install the lock nut. While holding the adjusting screw with a wrench, tighten lock nut using ST.
ST 926230000 SPANNER

Tightening torque (Lock nut):
39 N·m (4.0 kgf-m, 28.9 ft-lb)

NOTE:
Hold the adjusting screw with a wrench to prevent it from turning while tightening lock nut.

29) Remove the gearbox from ST.
30) Install the four pipes on gearbox.
(1) Connect the pipe A and B to the gearbox.

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

(2) Connect the pipe E and F to gearbox.

Tightening torque:
Pipe E: 15 N·m (1.5 kgf-m, 10.8 ft-lb)
Pipe F: 25 N·m (2.5 kgf-m, 18.1 ft-lb)

E: INSPECTION

1. BASIC INSPECTION

1) Clean all disassembled parts, and check for wear, damage, or any other faults, then repair or replace as necessary.
2) When disassembling, check the inside of gearbox for water. If any water is found, carefully check the boot for damage, input shaft dust seal, adjusting screw and boot clips for poor sealing. If faulty, replace with new parts.

No.	Parts	Inspection	Corrective action
1	Input shaft	(1) Bend of input shaft (2) Damage on serration	If the bend or damage is excessive, replace the entire gearbox.
2	Dust seal	(1) Crack or damage (2) Wear	If the outer wall slips, the lip is worn out or damage is found, replace it with a new one.
3	Rack and pinion	Poor mating of rack with pinion	(1) Adjust the backlash properly. By measuring the turning torque of gearbox and sliding resistance of rack, check if rack and pinion engage uniformly and smoothly with each other. (Refer to “Service limit”.) (2) Keeping the rack pulled out all the way so that all teeth emerge, check teeth for damage. Even if abnormality is found in either (1) or (2), replace the entire gearbox.
4	Gearbox unit	(1) Bend of rack shaft (2) Bend of cylinder portion (3) Crack or damage on cast iron portion	Replace the gearbox with a new one.
		(4) Wear or damage on rack bush	If the free play of rack shaft in radial direction is out of the specified range, replace the gearbox with a new one. (Refer to “Service limit”.)
		(5) Wear on input shaft bearing	If the free plays of input shaft in radial and axial directions are out of the specified ranges, replace the gearbox with a new one. (Refer to “Service limit”.)
5	Boot	Crack, damage or deterioration	Replace.
6	Tie-rod	(1) Looseness of ball joint (2) Bend of tie-rod	Replace.
7	Tie-rod end	Damage or deterioration on dust seal	Replace.
8	Adjusting screw spring	Deterioration	Replace.
9	Boot clip	Deterioration	Replace.
10	Sleeve	Damage	Replace.
11	Pipes	(1) Damage to flared surface (2) Damage to flare nut (3) Damage to pipe	Replace.

2. SERVICE LIMIT

Make a measurement as follows. If it exceeds the specified service limit, adjust or replace.

NOTE:
When making a measurement, vise the gearbox by using ST. Never vise the gearbox by inserting aluminum plates, etc. between vise and gearbox.

ST 926200000 STAND

Sliding resistance of rack shaft:

Service limit
400 N (41 kgf, 90 lb) or less

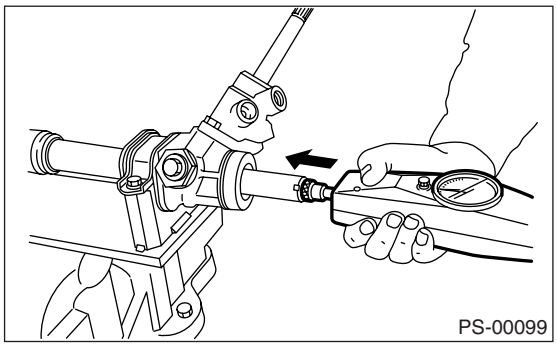
PS-00099

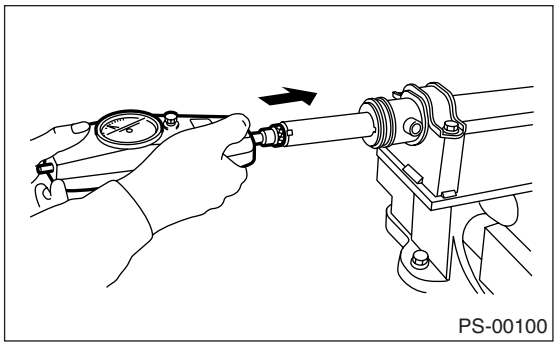
PS-00100

3. RACK SHAFT PLAY IN RADIAL DIRECTION

Right-turn steering:

Service limit
0.19 mm (0.0075 in) or less

On condition
L: 5 mm (0.20 in)
P: 122.6 N (12.5 kgf, 27.6 lb)

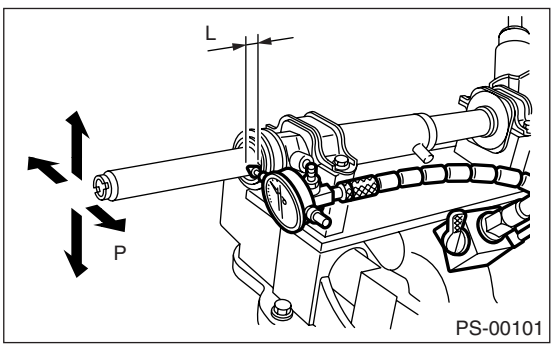

PS-00101

Left-turn steering:

Service limit
Direction ⇦ ⇨
0.3 mm (0.012 in) or less
Direction ⬅ ➡
0.15 mm (0.0059 in) or less

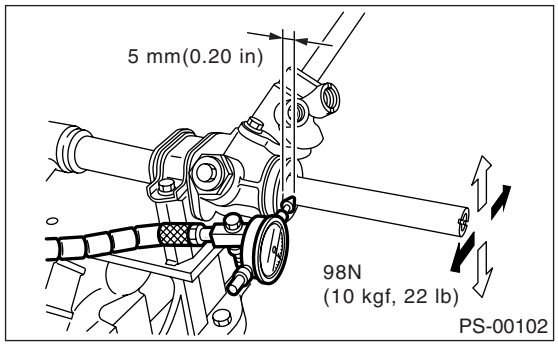

PS-00102

4. INPUT SHAFT PLAY

In radial direction:

Service limit
0.18 mm (0.0071 in) or less

On condition
P: 98 N (10 kgf, 22 lb)

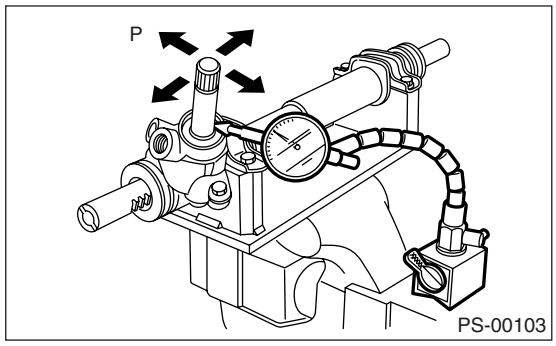

In axial direction:

Service limit
0.5 mm (0.020 in) or less

On condition
P: 20 — 49 N (2 — 5 kgf, 4 — 11 lb)

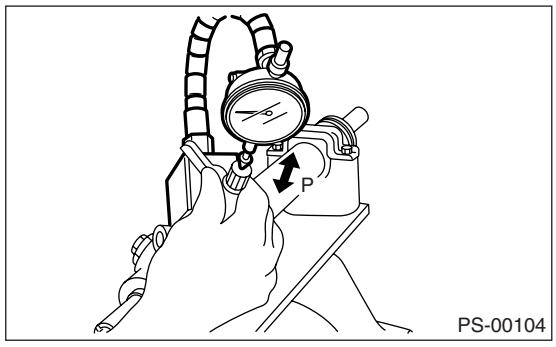

5. TURNING RESISTANCE OF GEARBOX

Using the ST, measure the gearbox turning resistance.
ST 34099PA100 SPANNER

Service limit
Maximum allowable resistance
10.5 N (1.1 kgf, 2.4 lb) or less
Difference between right and left turning resistance: Less than 20 %

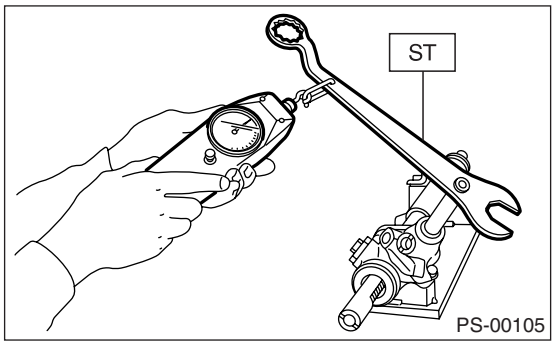

6. OIL LEAKING

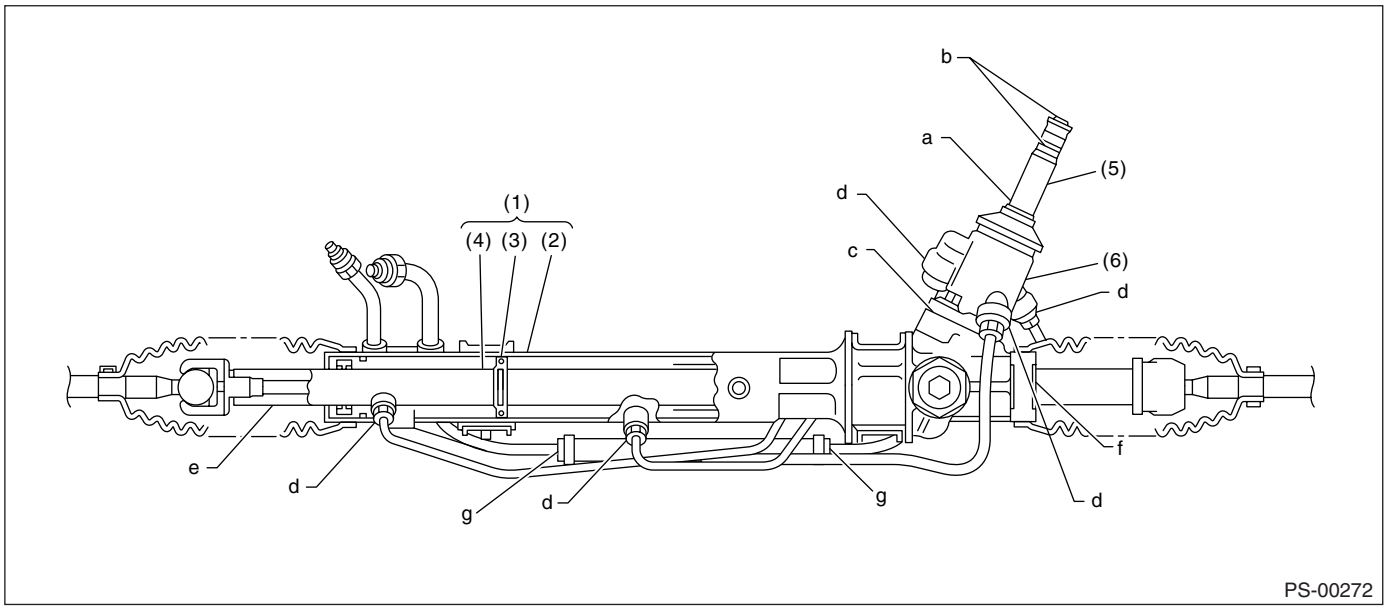

(1) Power cylinder
(2) Cylinder
(3) Rack piston
(4) Rack axle
(5) Input shaft
(6) Valve housing

1) Lift up the vehicle.
2) Even if the location of the leak can be easily found by observing the leaking condition, it is necessary to thoroughly remove the fluid from the suspected portion and turn the steering wheel from lock to lock about thirty to forty times with engine running, then make comparison of the suspected portion between immediately after and several hours after this operation.
3) Inspect leakage from “a”.
The oil seal is damaged. Replace the valve assembly with a new one.
4) Inspect leakage from “b”.
The torsion bar O-ring is damaged. Replace the valve assembly with a new one.
5) Inspect leakage from “c”.
The oil seal is damaged. Replace the valve assembly or oil seal with a new one.
6) Inspect leakage from “d”.
The pipe is damaged. Replace the faulty pipe or O-ring.
7) Inspect leakage from “g”.
The hose is damaged. Replace the hose with a new one.
8) If leak is other than a, b, c, d, or g, and if oil is leaking from the gearbox, move the right and left boots toward tie-rod end side, respectively, with the gearbox mounted to the vehicle, and remove fluid from the surrounding portions. Then, turn the steering wheel from lock to lock thirty to forty times with the engine running, then make comparison of the leaked portion immediately after and several hours after this operation.
(1) Leakage from “e”
The cylinder seal is damaged. Replace the rack bush with a new one.
(2) Leakage from “f”
There are two possible causes. Take the following step first. Remove the pipe assembly B from the valve housing, and close the circuit with ST.
ST 926420000 PLUG
Turn the steering wheel from lock to lock thirty to forty times with the engine running, then make comparison of the leaked portion between immediately after and several hours after this operation.
• If leakage from “f” is noted again:
The oil seal of pinion and valve assembly is damaged. Replace the pinion and valve assembly with a new one. Or replace the oil seal and parts that are damaged during disassembly with new ones.
• If oil stops leaking from “f”:
The oil seal of rack housing is damaged. Replace the oil seal and the parts that are damaged during disassembly with new ones.

F: ADJUSTMENT

1) Adjust the front toe. <Ref. to FS-11, FRONT WHEEL TOE-IN, INSPECTION, Wheel Alignment.>

Standard of front toe:
IN 3 — OUT 3 mm (IN 0.12 — OUT 0.12 in)

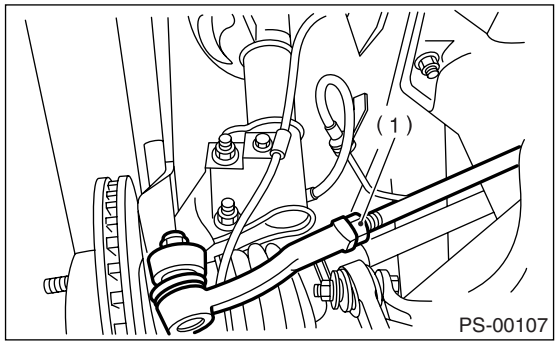

(1) Lock nut

2) Adjust the steering angle of wheels.

Standard of steering angle:

Model	TURBO, 2.5 L and OUTBACK	Others
Inner wheel	34.5°±1.5°	37.3°±1.5°
Outer wheel	30.3°±1.5°	32.4°±1.5°

3) If the steering wheel spokes are not horizontal when wheels are set in the straight ahead position, and error is more than 5° on the periphery of steering wheel, correctly re-install the steering wheel.

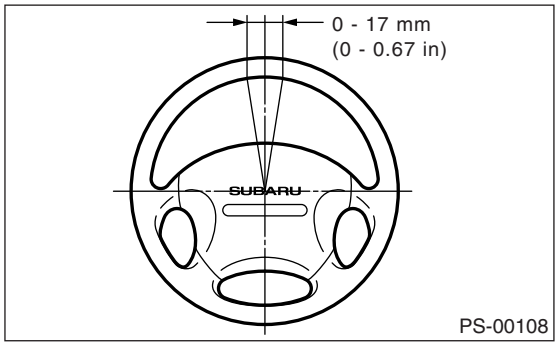

4) If the steering wheel spokes are not horizontal with vehicle set in the straight ahead position after this adjustment, correct it by turning the right and left tie-rods in opposite direction by same angle.

6. Steering Gearbox [RHD MODEL]

A: REMOVAL

1) Set the vehicle on a lift.
2) Disconnect the ground cable from battery.
3) Loosen the front wheel nut.
4) Lift-up the vehicle, and then remove the front wheels.
5) Remove the under cover.
6) Remove the sub frame.
7) Remove the front exhaust pipe assembly. (Non-turbo model)
<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>

WARNING:
Be careful, the exhaust pipe is hot.

8) Using a puller, remove the tie-rod end from knuckle arm after pulling off cotter pin and removing castle nut.

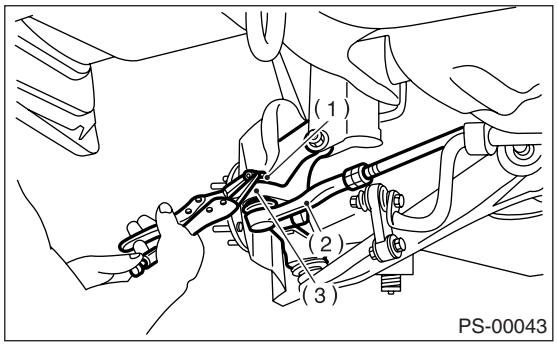

(1) Castle nut
(2) Tie-rod end
(3) Knuckle arm

9) Remove the jack-up plate and front stabilizer.

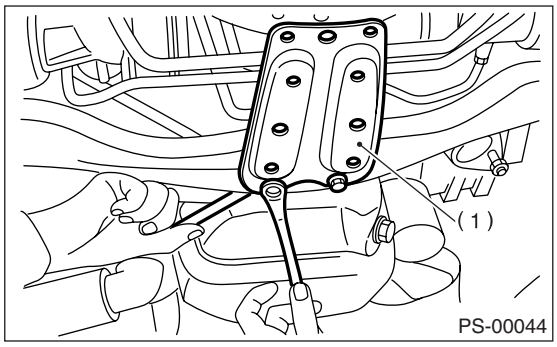

(1) Jack-up plate

10) Remove the one pipe joint at center of gearbox, and connect vinyl hose to pipe and joint. Discharge fluid by turning the steering wheel fully clockwise and counterclockwise. Discharge fluid similarly from the other pipe.

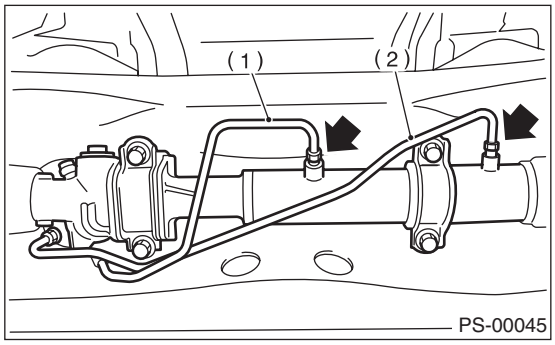

(1) Pipe A
(2) Pipe B

11) Remove the universal joint. <Ref. to PS-24, REMOVAL, Universal Joint.>
12) Disconnect the lower pipe C from gear box first, and upper pipe D second.

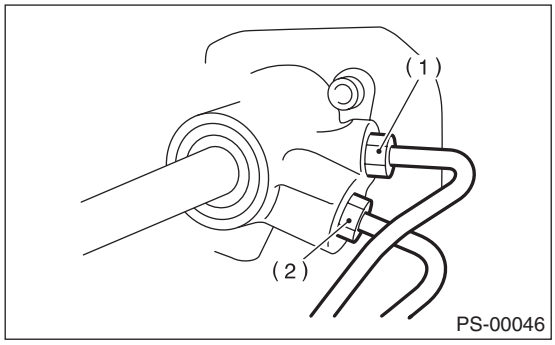

(1) Pipe C
(2) Pipe D

13) Remove the clamp bolts securing the gearbox to crossmember, and then remove the gearbox.

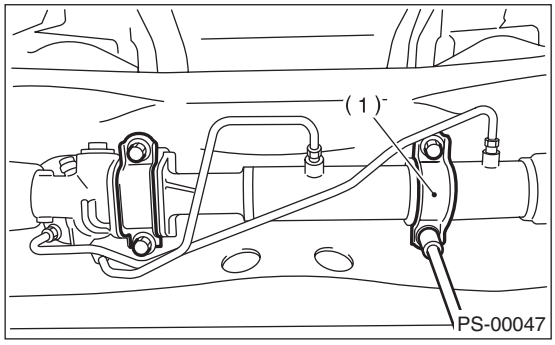

(1) Clamp

B: INSTALLATION

1) Insert the gearbox into crossmember, being careful not to damage the gearbox boot.
2) Tighten the gearbox to crossmember bracket via clamp with bolts to specified torque.

Tightening torque:
60 N·m (6.1 kgf-m, 44.1 ft-lb)

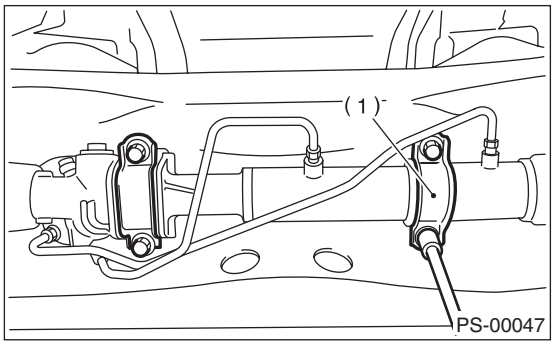

(1) Clamp

3) Connect the pipe D first to gear box, and pipe C second.

Tightening torque:
T: 15 N·m (1.5 kgf-m, 10.8 ft-lb)

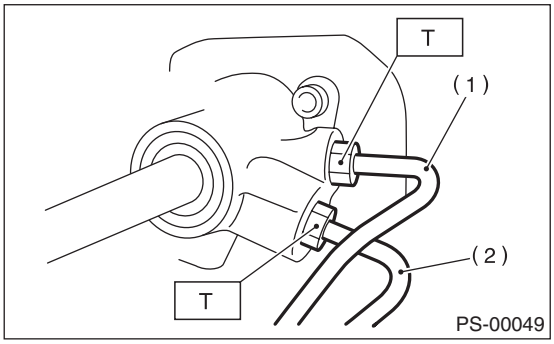

(1) Pipe C
(2) Pipe D

4) Install the universal joint. <Ref. to PS-24, INSTALLATION, Universal Joint.>
5) Connect the tie-rod end and knuckle arm, and tighten with castle nut.

Castle nut tightening torque:
27 N·m (2.75 kgf-m, 19.9 ft-lb)

CAUTION:
When connecting, do not hit the cap at bottom of tie-rod end with hammer.

6) After tightening the castle nut to the specified tightening torque, tighten it further within 60° until cotter pin hole is aligned with slot in the nut. Fit the cotter pin into nut, and then bend the pin to lock.

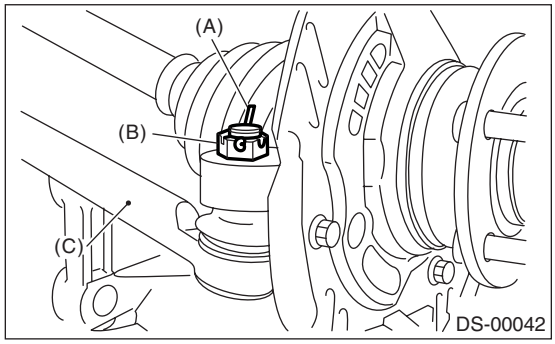

(A) Cotter pin
(B) Castle nut
(C) Tie-rod

7) Install the front stabilizer to vehicle.
8) Install the front exhaust pipe assembly.
9) Install the sub frame.
10) Install the under cover.
11) Align the center of roll connector. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>
12) Install the steering wheel. <Ref. to PS-23, INSTALLATION, Steering Wheel.>
13) Install the front wheels.
14) Tighten the wheel nuts to specified torque.

Tightening torque:
90 N·m (9.1 kgf-m, 65.8 ft-lb)

15) Connect the battery ground cable to battery.
16) Pour fluid into the oil tank, and bleed air.
<Ref. to PS-88, Power Steering Fluid.>
17) Check for fluid leaks.
18) Install the jack-up plate.
19) Lower the vehicle.
20) Check the fluid level in oil tank.

21) After adjusting the toe-in and steering angle, tighten the lock nut on tie-rod end.

Tightening torque:
83 N·m (8.5 kgf-m, 61.5 ft-lb)

NOTE:
When adjusting the toe-in, hold boot as shown to prevent it from being rotated or twisted. If twisted, straighten it.

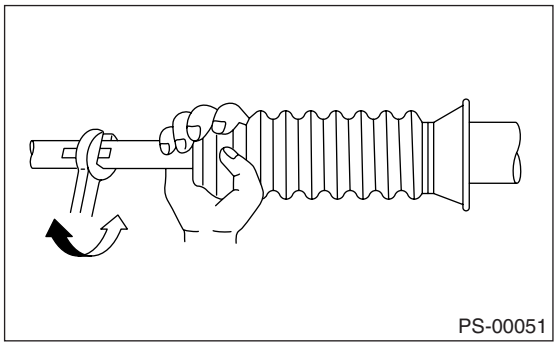

C: DISASSEMBLY

1) Secure the gearbox removed from vehicle in vise using the ST.
ST 926200000 STAND

CAUTION:
Secure the gearbox assembly in a vise using the ST as shown. Do not attempt to secure it without this ST.

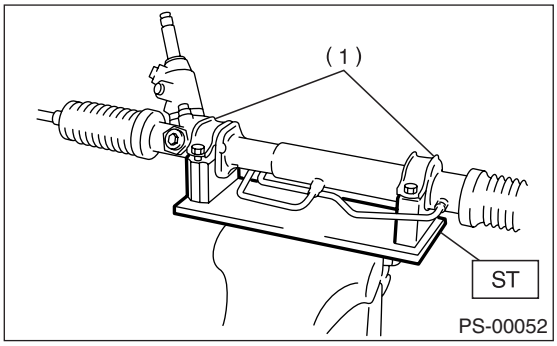

(1) Clamp

2) Remove the tie-rod end and lock nut from gearbox.

3) Remove the clip on outside of boot using pliers, and then slide the boot to tie-rod end side.

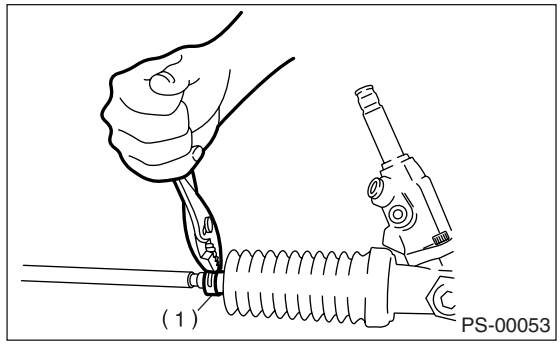

(1) Clip

4) Using flat tip screwdriver, remove the band from boot.

NOTE:
Check the boot for crack, damage or deterioration. Replace the boot with a new one if necessary.

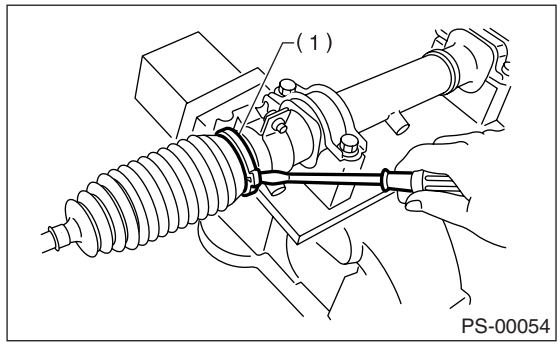

(1) Band

5) Using the ST, loosen lock nut.
ST 926230000 SPANNER

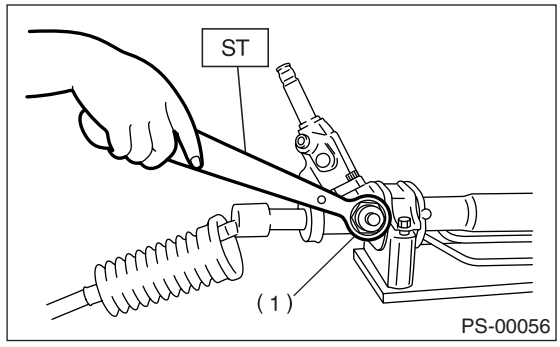

(1) Lock nut

6) Tighten the adjusting screw until it no longer tightens.

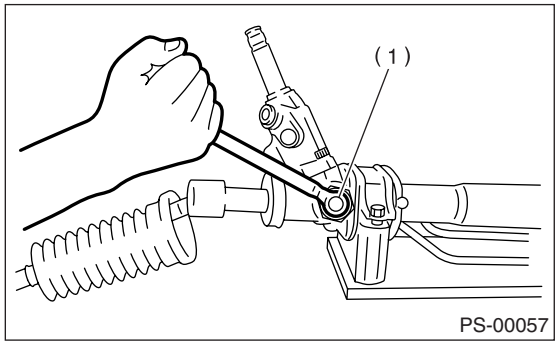

(1) Adjusting screw

7) Using a wrench (32 mm (1.26 in) width across flats) or adjustable wrench with cinching boot, remove the tie-rod.

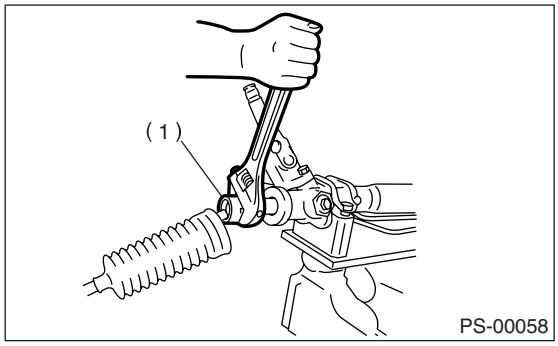

(1) Tie-rod

8) Loosen the adjusting screw, and then remove the spring and sleeve.
9) Disconnect the pipes A and B from steering body and control valve housing.

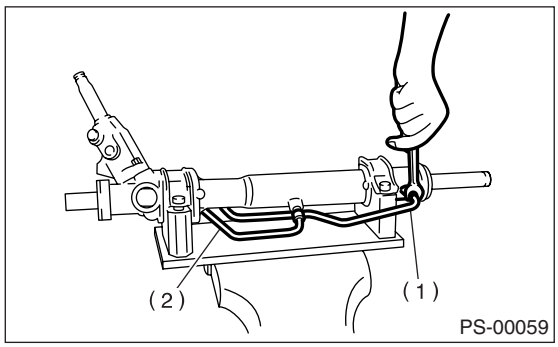

(1) Pipe A
(2) Pipe B

10) Clean the dirt of input shaft. Remove the dust cover taking care not to scratch the housing or input shaft and allow foreign matter to enter gear box interior.

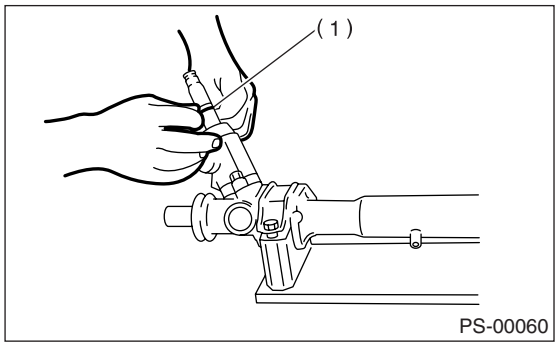

(1) Dust cover

11) Align the ST pin to plug hole to install. Rotate the ST counterclockwise to remove plug.
ST 34199AE090 PLUG WRENCH

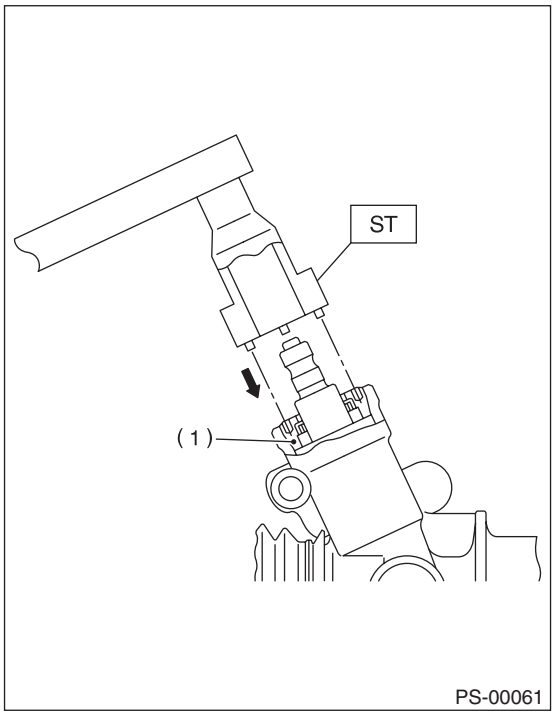

(1) Plug

12) Remove the valve assembly taking care not to scratch seal ring and valve housing inner surface.

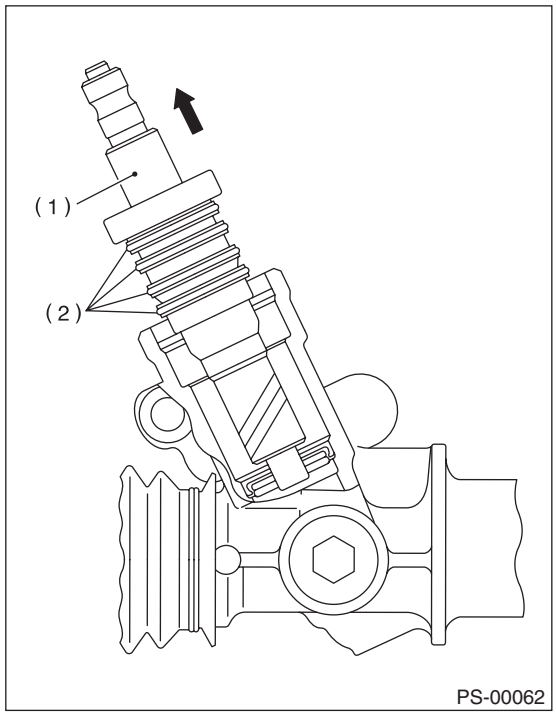

(1) Valve ASSY
(2) Seal ring

13) Remove the holder using a wrench (32 mm (1.26 in) width across flats) or adjustable wrench.

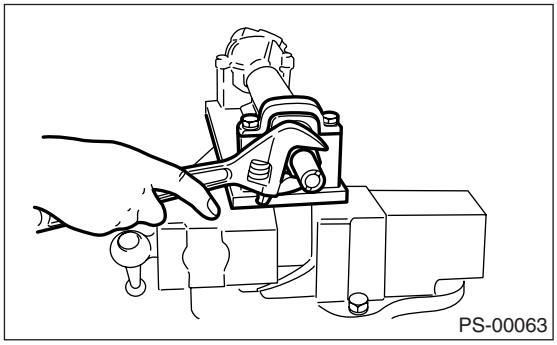

14) Install the ST on valve side of rack and press outer side oil seal out taking care not to contact rack with steering body inner surface.
ST 34099FA030 INSTALLER & REMOVER

NOTE:
Block the pipe connection of steering body to prevent fluid from flowing out.

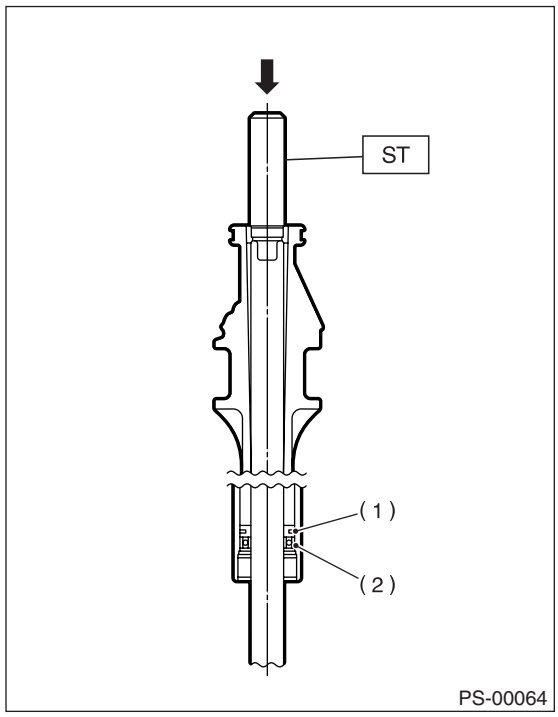

(1) Rack piston
(2) Outer side oil seal

15) Insert the ST from valve side and press back-up ring and oil seal out.
ST 927580000 REMOVER

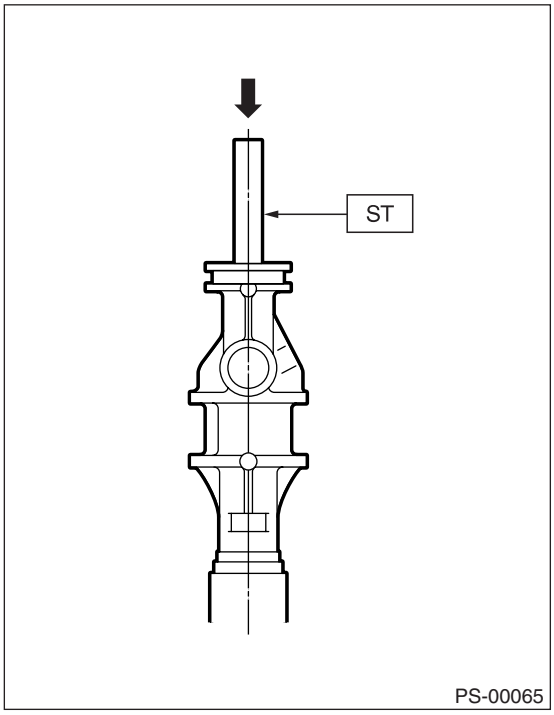

16) Using the ST1 and ST2, repair the cylinder's clinched sections.
ST1 34099FA080 PUNCH
ST2 34099FA070 BASE

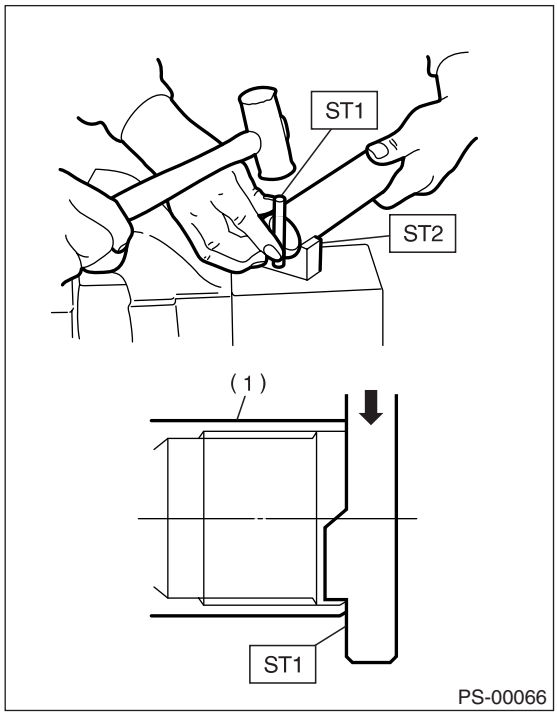

(1) Cylinder

17) If the cylinder edge is deformed in a convex shape, repair using an oil stone.

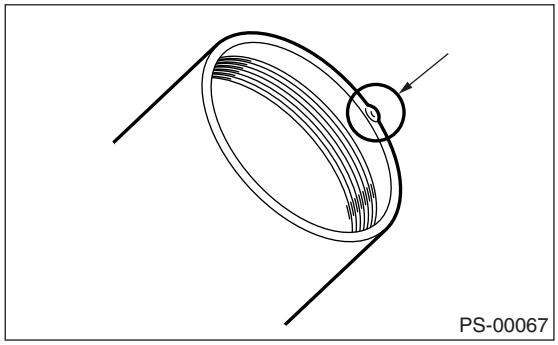

18) Remove the oil seal using ST and press from plug.
ST 34199AE100 PLUG OIL SEAL REMOVER

NOTE:
Do not apply force on the plug edge surface.

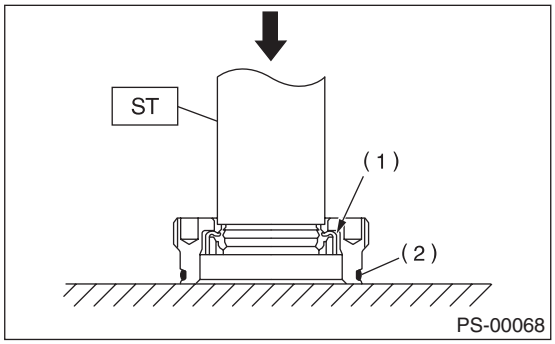

(1) Oil seal
(2) O-ring

19) Set the ST on drawing dimension.
ST 34199AE120 GEARBOX OIL SEAL REMOVER

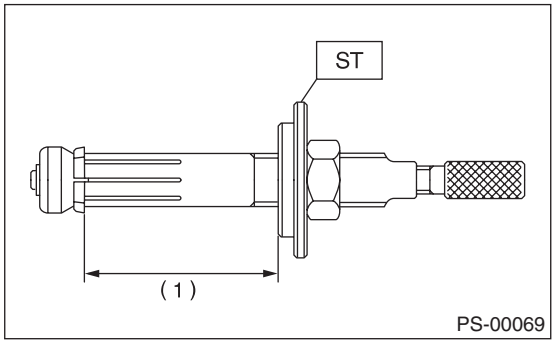

(1) 70 mm (2.76 in)

20) Set the stopper to gear box, and then insert the tip of ST to gear box.

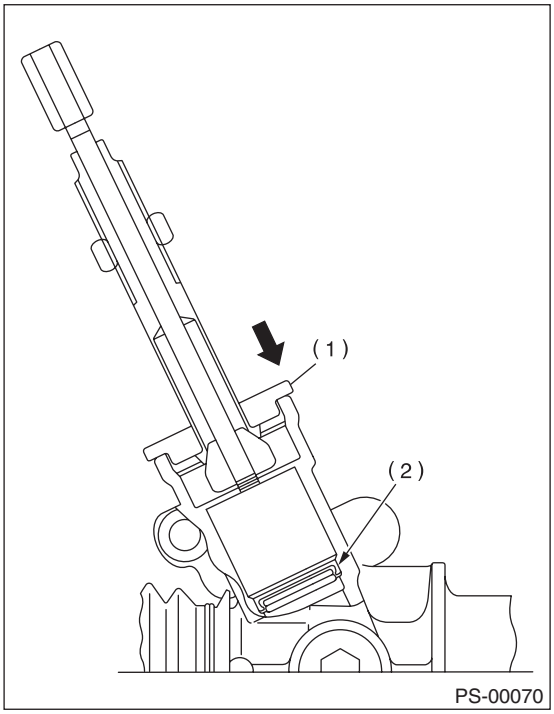

(1) Stopper
(2) Oil seal

21) By fixing the 2-surface width, press in by rotating the rod and attach to oil seal.

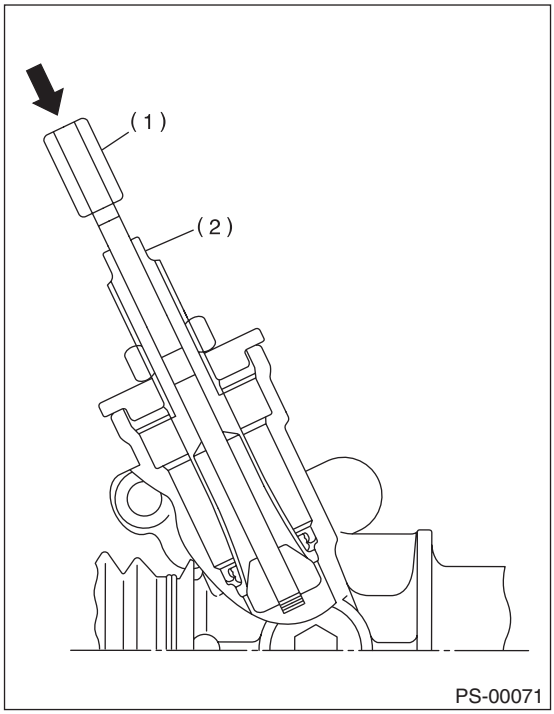

(1) Rod
(2) 2-surface width

22) While fixing the 2-surface width, pull out the oil seal by rotating nut.

CAUTION:
Take care not to scratch the gear box inner surface.

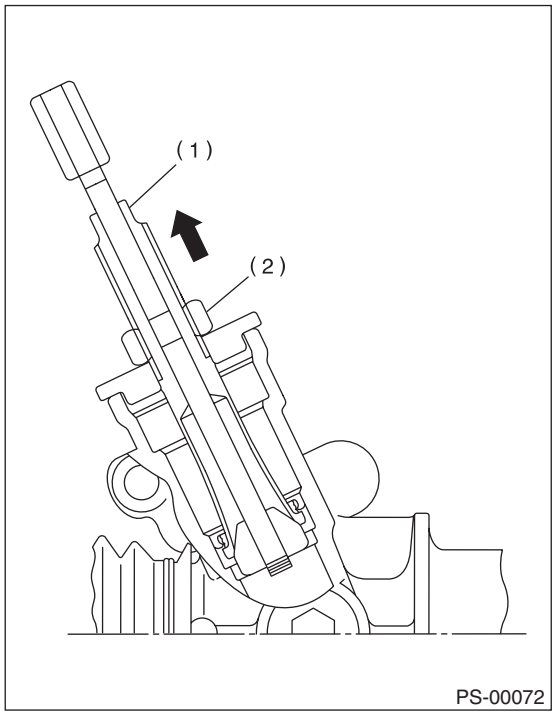

(1) 2-surface width
(2) Nut

D: ASSEMBLY

1) Apply a coat of grease to inside and outside of new oil seal.

Specified steering grease:
VALIANT GREASE M2 (Part No. 003608001)

2) Verify the oil seal direction and installation position. Using the ST and press, press fit the oil seal to gear box.

ST 34199AE130 GEARBOX OIL SEAL INSTALLER

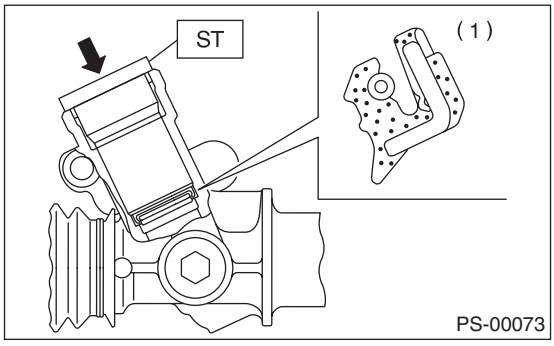

(1) Oil seal

3) Attach the steering body to ST as shown in the figure. Apply a coat of grease to needle bearing.
ST 926200000 STAND

CAUTION:
Ensure the needle bearing is free from defects. If it is faulty, replace the steering body with a new one.

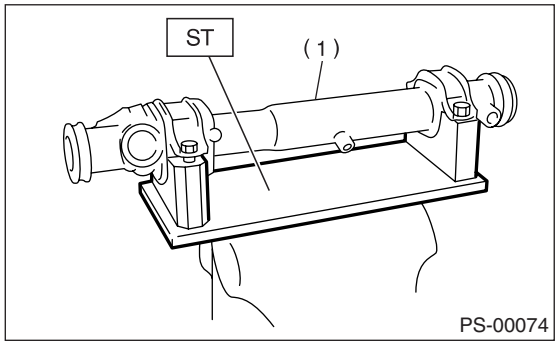

(1) Steering body

4) Using the ST·B and ST·C, attach the oil seal to ST·A.
ST 927490000 INSTALLER A, B, C

NOTE:
Face the oil seal in direction shown in the figure.

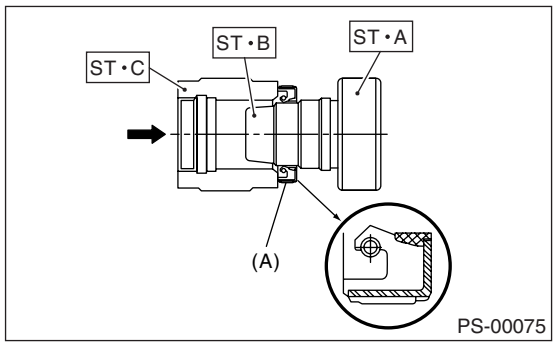

(A) Oil seal

5) Insert the ST·A with oil seal assembled, through gear side of rack. Remove the oil seal from ST·A near piston, and then remove the ST·A from rack.

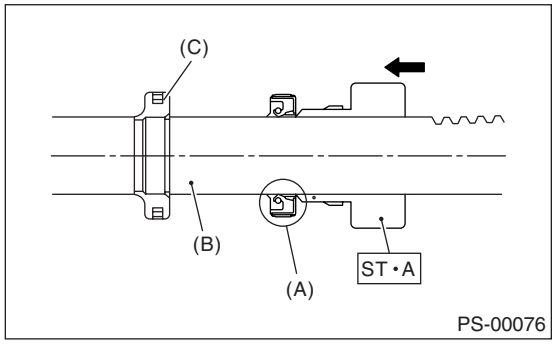

(A) Oil seal
(B) Rack
(C) Piston

6) Install the back-up washer from gear side of rack.

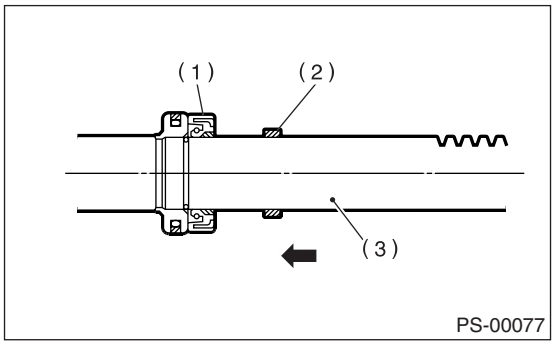

(1) Oil seal
(2) Back-up washer
(3) Rack

7) Install the ST on rack and equally apply a thin coat of grease to the rack and ST, then install the oil seal.
ST 926250000 GUIDE

CAUTION:
Be careful not to scratch the oil seal lips with piston's inner ring section.

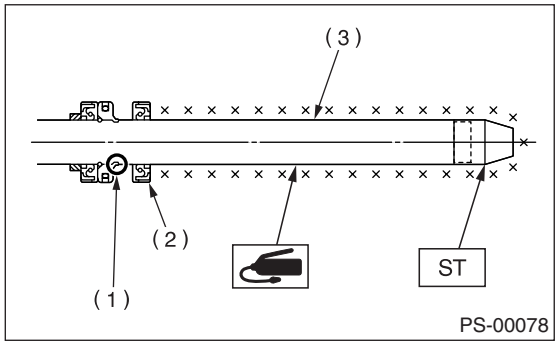

(1) Rack piston inner ring
(2) Outer side oil seal
(3) Rack

8) Apply a coat of grease to the grooves in rack, sliding surface of sleeve and sealing surface of piston. Install the ST on end of steering body cylinder. Then insert the rack into steering body from cylinder side.
ST 34199AE000 GUIDE (Oil seal)

CAUTION:
Do not allow grease to block the air vent hole on rack.

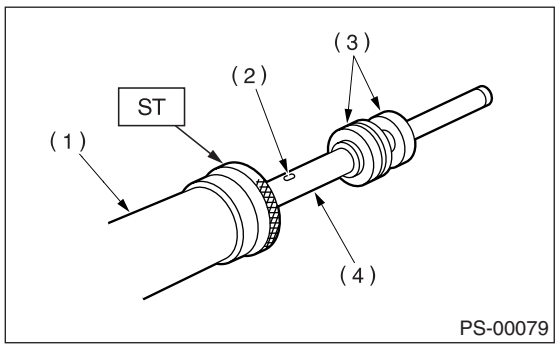

(1) Cylinder side of steering body
(2) Air vent hole
(3) Oil seal
(4) Rack

9) Make the ST2 pass through rack, and then push in the rack and ST2 using a press until ST1 comes in contact with ST2 and the end of rack is aligned with end of ST2.
ST1 34199AE000 GUIDE (Oil seal)
ST2 34199AE010 INSTALLER (Oil seal)

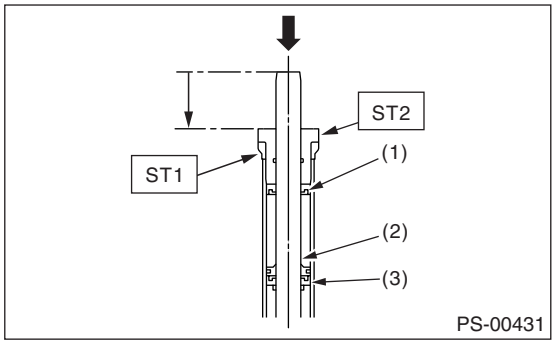

(1) Outer side oil seal
(2) Rack piston
(3) Inner side oil seal

10) Install a new holder to cylinder side of steering body.

Tightening torque:
64 N·m (6.5 kgf-m, 47.0 ft-lb)

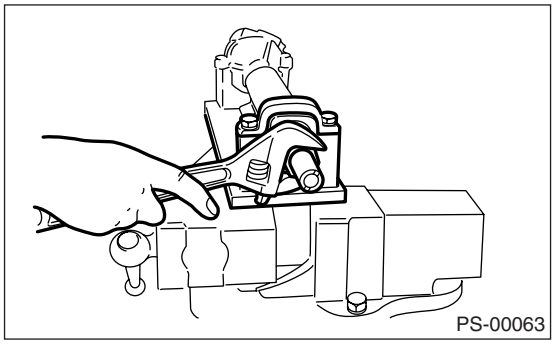

11) Using the ST, clinch steering body cylinder at a point less than 3 mm (0.12 in) from holder.

CAUTION:
Be careful not to deform the holder.

ST 34099FA060 PUNCH HOLDER

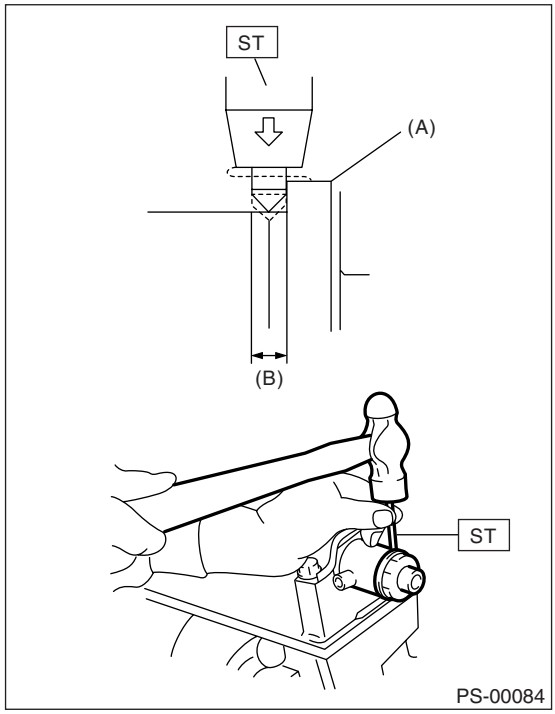

(A) Holder
(B) 3 mm (0.1 in)

12) Roll the vinyl tape on serration part of valve assembly, and then apply grease on the tape surface.

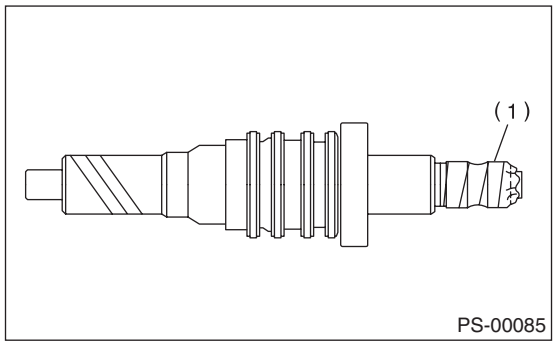

(1) Vinyl tape

13) Apply a coat of grease on the gear teeth of valve assembly, and then attach the valve assembly taking care not to scratch oil seal and seal ring.

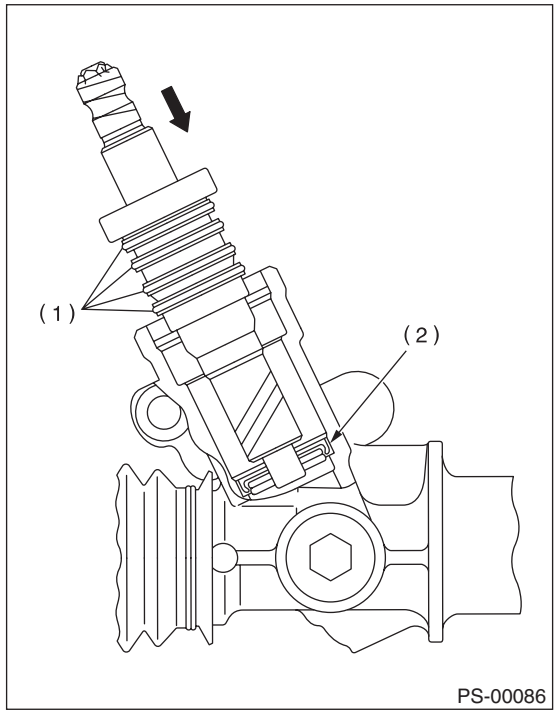

(1) Seal ring
(2) Oil seal

14) Apply grease on the oil seal circumference, and then press into the plug using ST and a press. Replace the plug circumference O-rings with new ones.

ST 34199AE110 PLUG OIL SEAL INSTALLER

CAUTION:
Pay attention to the oil seal direction, and attaching position.

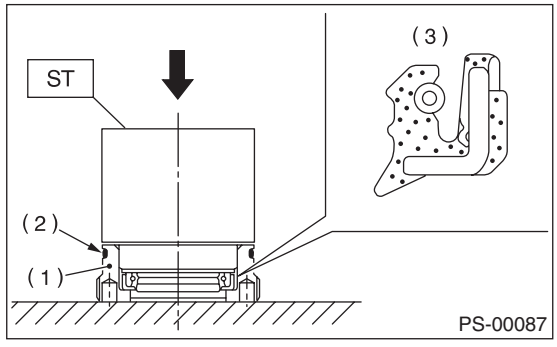

(1) Plug
(2) O-ring
(3) Oil seal

15) Using the ST, install plug.
ST 34199AE090 PLUG WRENCH

Tightening torque:
64 N·m (6.5 kgf-m, 47.0 ft-lb)

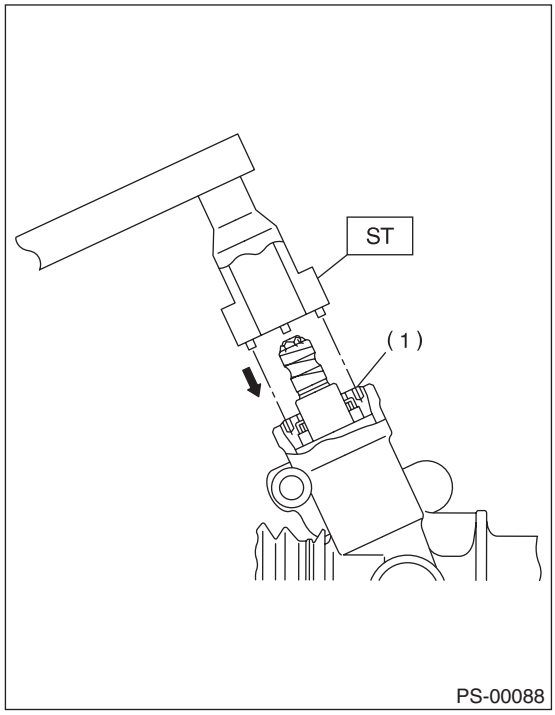

(1) Plug

16) Install the dust cover. Remove the vinyl tape.

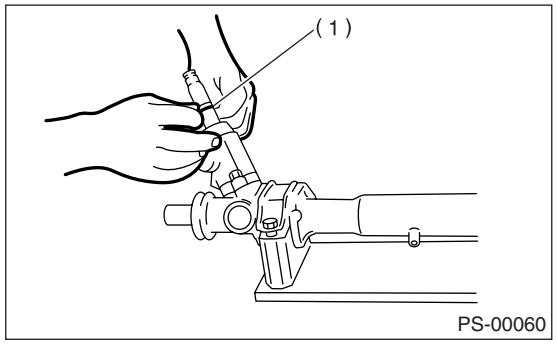

(1) Dust cover

17) Temporarily install the rack, and then operate it from lock to lock two or three times to make it fit in. Remove the grease blocking air vent hole.

CAUTION:
If operating the rack from lock to lock without installing tie-rod, it may damage the oil seal. Always install the tie-rods LH and RH.

18) Apply a coat of grease to the sliding surface of seat pad, sleeve and seating surface of spring, and then insert sleeve into steering body.
Charge the adjusting screw with grease, and then insert the spring into adjusting screw and install on steering body.

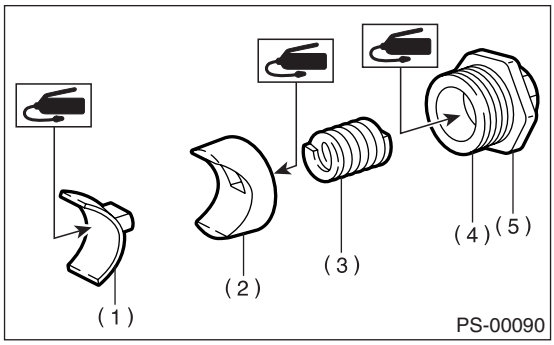

(1) Seat pad
(2) Sleeve
(3) Spring
(4) Adjusting screw
(5) Lock nut

19) Tighten the adjusting screw to specified torque.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

20) After tightening to the specified tightening torque, loosen it by 25°.
21) Remove the tie-rod.
22) Verify that play is within specified value. <Ref. to PS-62, SERVICE LIMIT, INSPECTION, Steering Gearbox [RHD MODEL].>
23) Loosen the adjusting screw, and then apply liquid gasket to at least 1/3 of the entire perimeter of adjusting screw thread.

Liquid gasket:
THREE BOND 1141

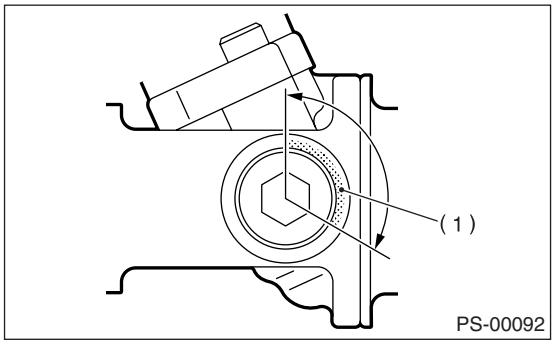

(1) Apply liquid gasket to at least 1/3 of entire perimeter.

24) Tighten the adjusting screw.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

25) After tightening to the specified tightening torque, loosen it by 25°.

26) Install the lock nut. While holding the adjusting screw with a wrench, tighten lock nut using ST.
ST 926230000 SPANNER

Tightening torque (Lock nut):
39 N·m (4.0 kgf-m, 28.9 ft-lb)

NOTE:
Hold the adjusting screw with a wrench to prevent it from turning while tightening lock nut.

27) Install the tie-rod into rack.

Tightening torque:
90 N·m (9.0 kgf-m, 65.1 ft-lb)

NOTE:
Check the mating face of rack and tie-rod for foreign material, dirt, dust and etc.
If required, clean the mating face.

28) Apply a coat of grease to the tie-rod groove, and then install the boot to housing.

NOTE:
Make sure that the boot is installed without unusual inflation or deflation.

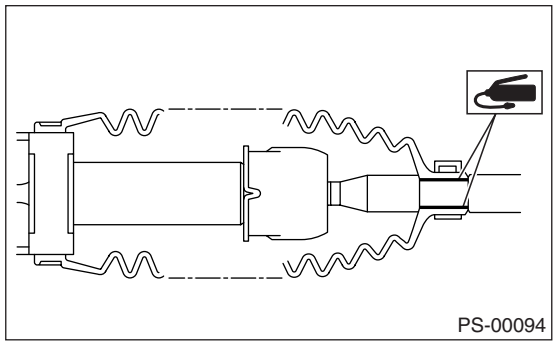
PS-00094

29) Caulk the boot so the space inside boot band caulking portion becomes 2 mm (0.08 in) or less.

NOTE:
Use a new boot band.

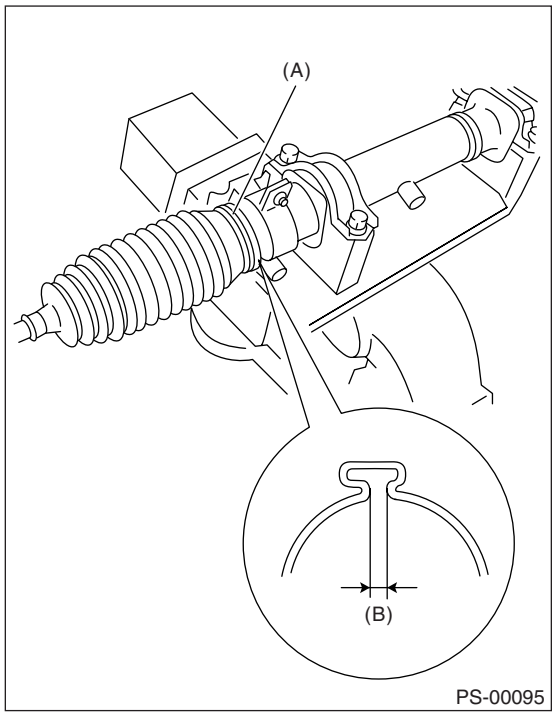

PS-00095

(A) Boot band
(B) Less than 2mm (0.08 in)

30) Fix the boot end with clip (small).

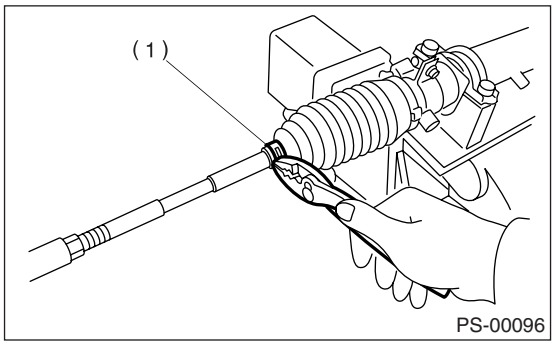

PS-00096

(1) Clip

31) After installing, check the boot end is positioned into groove on tie-rod.

32) If the tie-rod end was removed, screw in the lock nut and tie-rod end to screwed portion of tie-rod, and then tighten the lock nut temporarily in a position as shown in the figure.

Installed tie-rod length: L
Sedan:
25 mm (0.98 in)
Wagon:
15 mm (0.59 in)

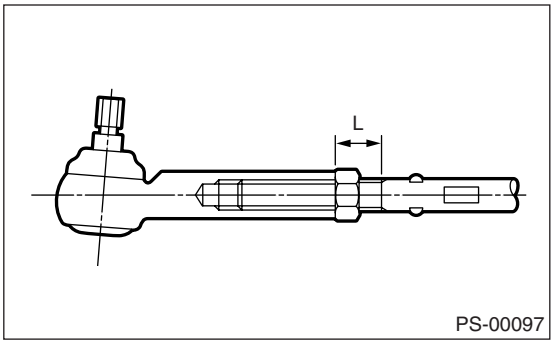

33) Inspect the gearbox as follows:
"A" Holding the tie-rod end, repeat lock to lock two or three times as quickly as possible.
"B" Holding the tie-rod end, turn it slowly at a radius one or two times as large as possible.
After all, make sure that the boot is installed in specified position without deflation.

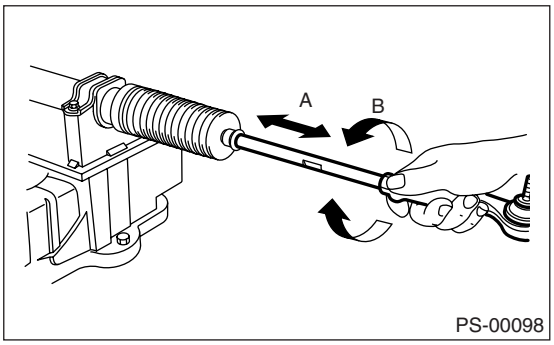

34) Remove the gearbox from ST.
ST 926200000 STAND

E: INSPECTION

1. BASIC INSPECTION

1) Clean all disassembled parts, and check for wear, damage, or any other faults, then repair or replace as necessary.
2) When disassembling, check the inside of gearbox for water. If any water is found, carefully check the boot for damage, input shaft dust seal, adjusting screw and boot clips for poor sealing. If faulty, replace with new parts.

No.	Parts	Inspection	Corrective action
1	Input shaft	(1) Bend of input shaft (2) Damage on serration	If the bend or damage is excessive, replace the entire gearbox.
2	Dust seal	(1) Crack or damage (2) Wear	If the outer wall slips, lip is worn out or damage is found, replace it with a new one.
3	Rack and pinion	Poor mating of rack with pinion	(1) Adjust the backlash properly. By measuring the turning torque of gearbox and sliding resistance of rack, check if rack and pinion engage uniformly and smoothly with each other. (Refer to “Service limit”.) (2) Keeping the rack pulled out all the way so that all teeth emerge, check teeth for damage. Even if abnormality is found in either (1) or (2), replace the entire gearbox.
4	Gearbox unit	(1) Bend of rack shaft (2) Bend of cylinder portion (3) Crack or damage on cast iron portion	Replace the gearbox with a new one.
		(4) Wear or damage on rack bush	If the free play of rack shaft in radial direction is out of the specified range, replace the gearbox with a new one. (Refer to “Service limit”.)
		(5) Wear on input shaft bearing	If the free plays of input shaft in radial and axial directions are out of the specified ranges, replace the gearbox with a new one. (Refer to “Service limit”.)
5	Boot	Crack, damage or deterioration	Replace with a new one.
6	Tie-rod	(1) Looseness of ball joint (2) Bend of tie-rod	Replace with a new one.
7	Tie-rod end	Damage or deterioration on dust seal	Replace with a new one.
8	Adjusting screw spring	Deterioration	Replace with a new one.
9	Boot clip	Deterioration	Replace with a new one.
10	Sleeve	Damage	Replace with a new one.
11	Pipes	(1) Damage to flared surface (2) Damage to flare nut (3) Damage to pipe	Replace with a new one.

2. SERVICE LIMIT

Make a measurement as follows. If it exceeds the specified service limit, adjust or replace.

NOTE:
When making a measurement, vise gearbox by using ST. Never vise the gearbox by inserting aluminum plates, etc. between vise and gearbox.

ST 926200000 STAND

Sliding resistance of rack shaft:

Service limit
400 N (41 kgf, 90 lb) or less

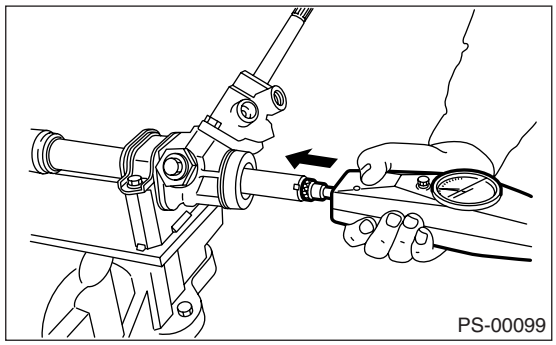

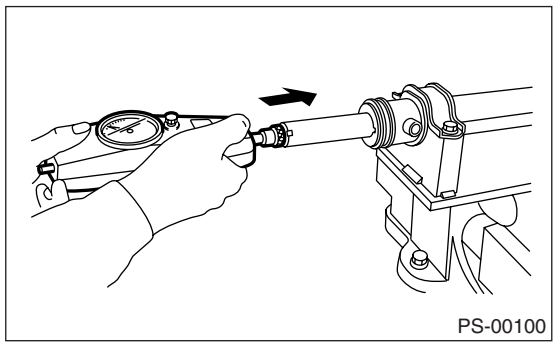

3. RACK SHAFT PLAY IN RADIAL DIRECTION

Left-turn steering:

Service limit
0.19 mm (0.0075 in) or less

On condition
L: 5 mm (0.20 in)
P: 98 N (10 kgf, 22 lb)

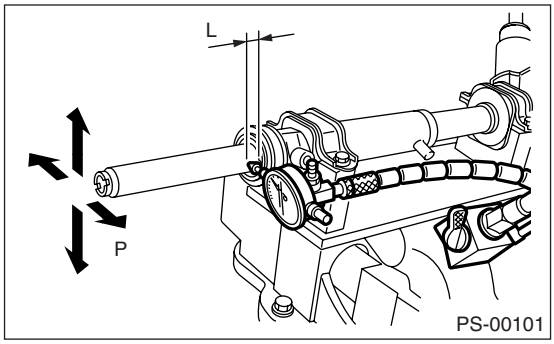

Right-turn steering:

Service limit
Direction ⇦⇨
0.3 mm (0.012 in) or less
Direction ⬅➡
0.19 mm (0.0075 in) or less

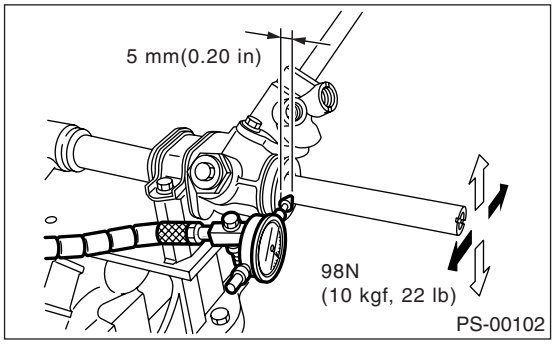

4. INPUT SHAFT PLAY

In radial direction:

Service limit
0.18 mm (0.0071 in) or less

On condition
P: 98 N (10 kgf, 22 lb)

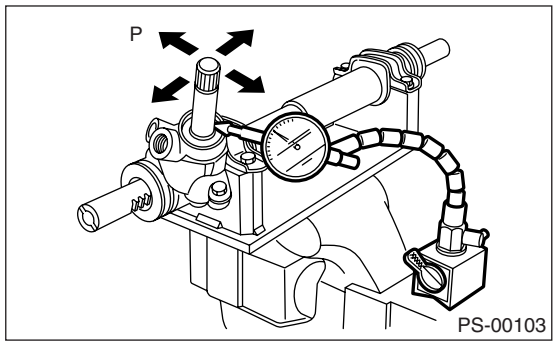

In axial direction:

Service limit
0.5 mm (0.020 in) or less

On condition
P: 20 — 49 N (2 — 5 kgf, 4 — 11 lb)

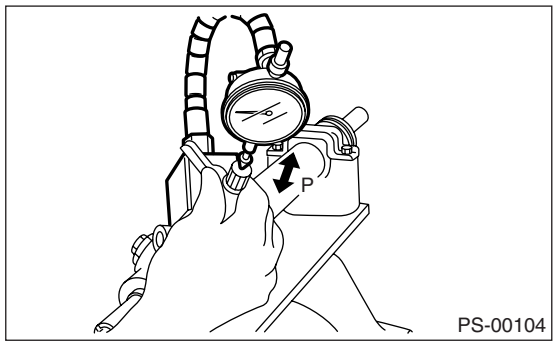

5. TURNING RESISTANCE OF GEARBOX

Using the ST, measure gearbox turning resistance.
ST 34099PA100 SPANNER

Service limit
Maximum allowable resistance
10.5 N (1.1 kgf, 2.4 lb) or less

Difference between right and left turning resistance:
Less than 20 %

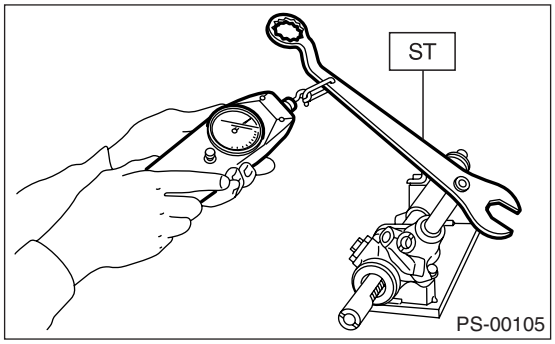

6. OIL LEAKING

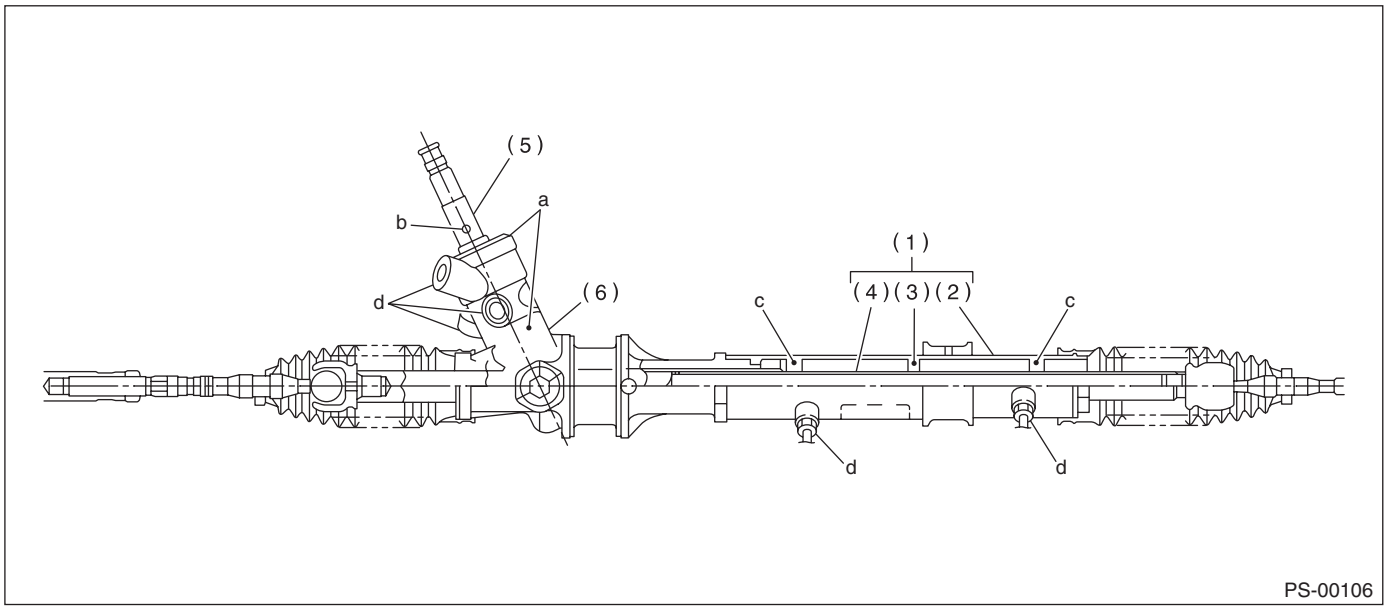

(1) Power cylinder
(2) Cylinder
(3) Rack piston
(4) Rack
(5) Input shaft
(6) Valve housing

1) Lift up the vehicle.
2) Even if the location of leak can be easily found by observing leaking condition, it is necessary to thoroughly remove the oil from suspected portion and turn steering wheel from lock to lock about thirty to forty times with engine running, then reinspect the suspected portion between immediately after and several hours after this operation.
3) Inspect leakage from “a”.
The oil seal is damaged. Replace the valve assembly with a new one.
4) Inspect leakage from “b”.
The torsion bar O-ring is damaged. Replace the valve assembly with a new one.
5) Inspect leakage from “c”.
The oil seal is damaged. Replace the oil seal with a new one.
6) Inspect leakage from “d”.
The pipe is damaged. Replace the faulty pipe or O-ring with a new one.

F: ADJUSTMENT

1) Adjust the front toe. <Ref. to FS-11, FRONT WHEEL TOE-IN, INSPECTION, Wheel Alignment.>

Standard of front toe:
IN 3 — OUT 3 mm (IN 0.12 — OUT 0.12 in)

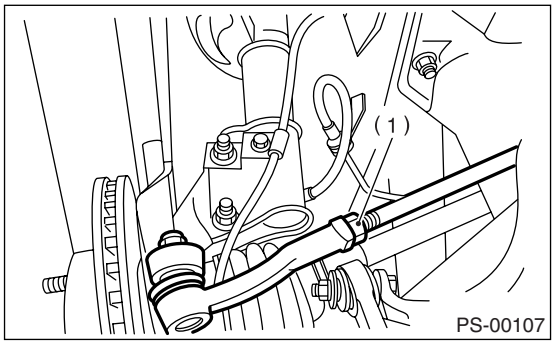

(1) Lock nut

2) Adjust the steering angle of wheels. <Ref. to FS-11, STEERING ANGLE, INSPECTION, Wheel Alignment.>

Standard of steering angle:

Model	TURBO, 2.5 L and OUTBACK	Others
Inner wheel	34.5°±1.5°	37.3°±1.5°
Outer wheel	30.3°±1.5°	32.4°±1.5°

3) If the steering wheel spokes are not horizontal when wheels are set in the straight ahead position, and error is more than 5° on the periphery of steering wheel, correctly re-install the steering wheel.

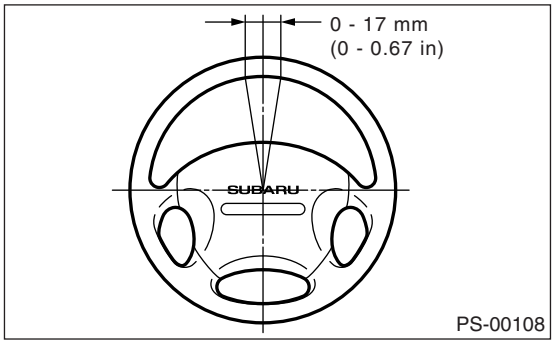

4) If the steering wheel spokes are not horizontal with vehicle set in the straight ahead position after this adjustment, correct it by turning the right and left tie-rods in the opposite direction each other by the same angle.

7. Pipe Assembly [LHD MODEL]

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle, and then remove the jack-up plate.

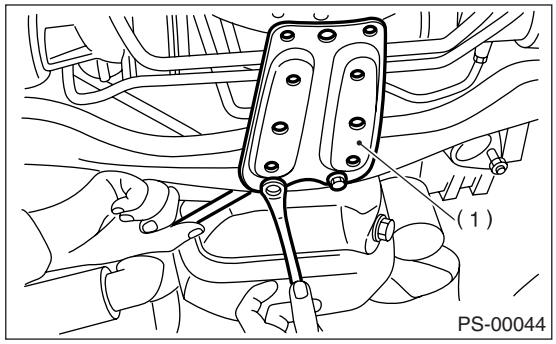

(1) Jack-up plate

3) Remove the one pipe joint at the center of gear-box, and then connect the vinyl hose to pipe and joint. Discharge fluid by turning steering wheel fully clockwise and counterclockwise. Discharge fluid similarly from the other pipe.

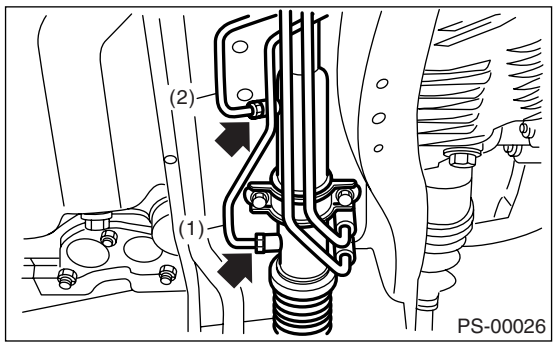

(1) Pipe A
(2) Pipe B

4) Remove the clamp E from pipes C and D.

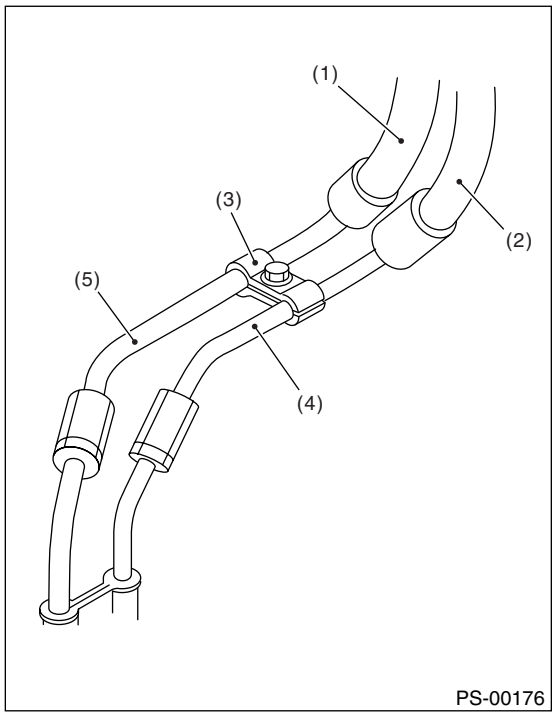

(1) Return hose
(2) Pressure hose
(3) Clamp E
(4) Pipe C
(5) Pipe D

5) Disconnect the pipe C and D from gear box.

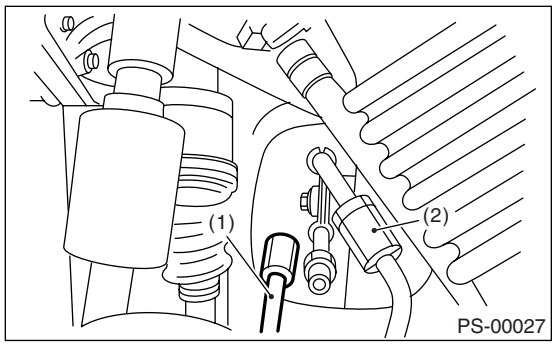

(1) Pipe C
(2) Pipe D

6) NON-TURBO MODEL
(1) Remove the air intake duct. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
(2) Remove the bolt A.
(3) Disconnect the pipe C from oil pump. Disconnect the pipe D from return hose.

CAUTION:
• Do not allow fluid from the hose end to come into contact with pulley belt.
• To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

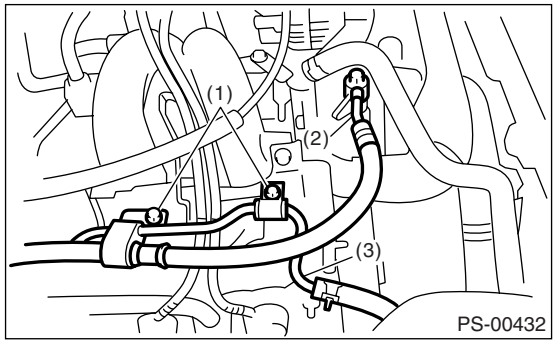

(1) Bolt A
(2) Pipe C
(3) Pipe D

7) TURBO MODEL
(1) Remove the air cleaner.
<Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
(2) Remove the coolant filler tank.

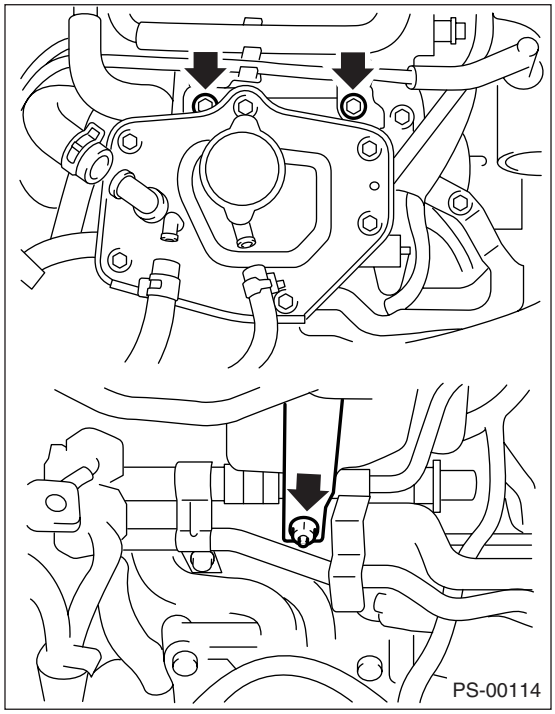

(3) Remove the two bolts fixing pipe C and D.
(4) Disconnect the pipe C from oil pump. Disconnect the pipe D from return hose.

CAUTION:
• Do not allow fluid from the hose end to come into contact with pulley belt.
• To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

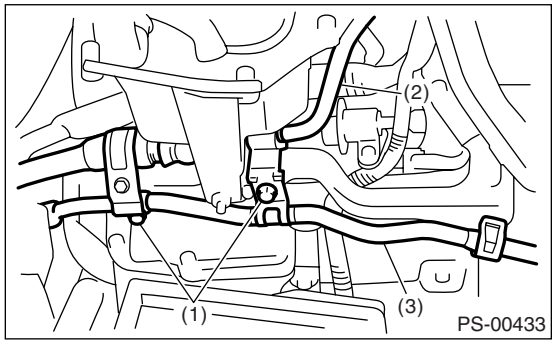

(1) Bolt
(2) Pipe C
(3) Pipe D

B: INSTALLATION

1) Temporarily tighten the two bolts fixing pipe C and D. (bolt A)

NOTE:
Visually check that the hose between tank and pipe D is free from bending or twisting.

- NON-TURBO MODEL

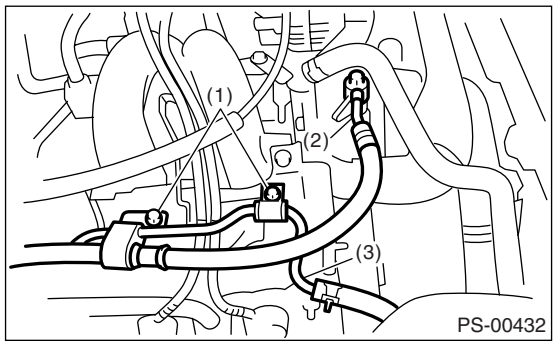

(1) Bolt A
(2) Pipe C
(3) Pipe D

- TURBO MODEL

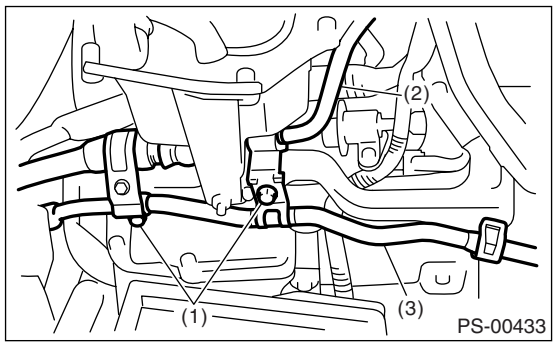

(1) Bolt A
(2) Pipe C
(3) Pipe D

(1) Connect the pipe D to oil tank.
(2) Using a new gasket, connect the pipe C to oil pump.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

(3) Tighten the two bolts fixing pipe C and D. (bolt A)

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

2) Install the coolant filler tank. (Turbo model)

Tightening torque:
T1: 19 N·m (1.9 kgf-m, 13.7 ft-lb)
T2: 21 N·m (2.1 kgf-m, 15.2 ft-lb)

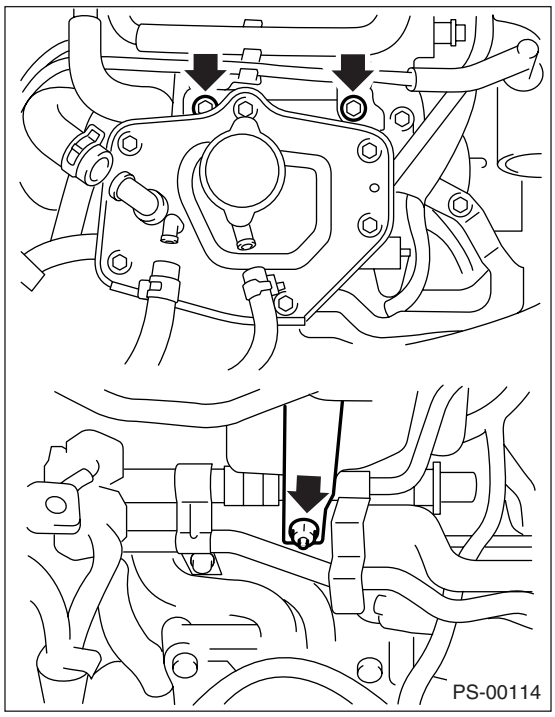

3) Temporarily connect the pipe C and D to gear box.

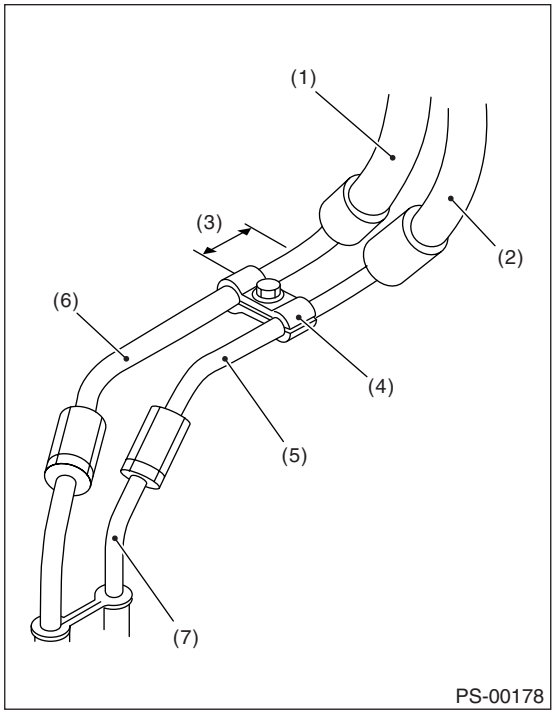

(1) Return hose
(2) Pressure hose
(3) Approx. 30 mm (1.18 in)
(4) Clamp E
(5) Pipe C
(6) Pipe D
(7) Pipe (Gear box side)

4) Temporarily install the clamp E on pipes C and D.

NOTE:
Ensure the letter “8” on each clamp are diagonally opposite each other as shown in the figure.

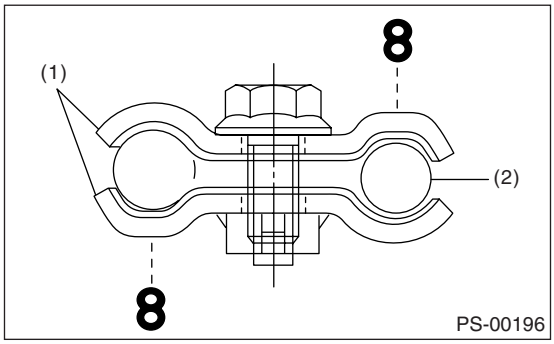

(1) Clamp E
(2) Pipe C

5) Tighten the clamp E firmly.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

6) Tighten the joint nut.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

7) Connect the pipes A and B to four pipe joints of gearbox. Connect the upper pipe B first, and lower pipe A second.

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

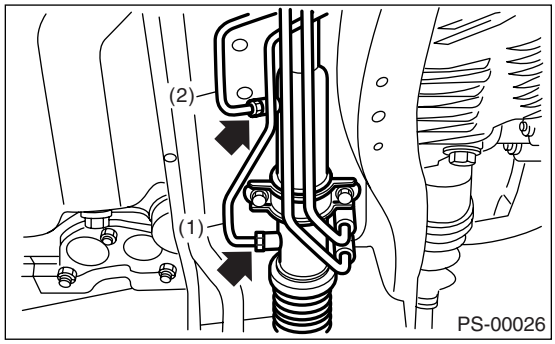

(1) Pipe A
(2) Pipe B

8) Install the jack-up plate.
9) Install the air intake duct. <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
10) Install the air intake duct, air cleaner upper cover and air intake boot.
<Ref. to IN(H4DOTC)-8, INSTALLATION, Air Cleaner.> and <Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Duct.>
11) Connect the battery ground cable to battery.
12) Feed the specified fluid.

CAUTION:
Never start the engine before feeding the fluid; otherwise vane pump might be seized up.

13) Finally check clearance between pipes and/or hoses, as shown above.
If cruise control actuator-to-power steering hose clearance is less than 10 mm (0.39 in), move the portion (A) secured by clamp to other portion, or bend portion (B) to adjust.

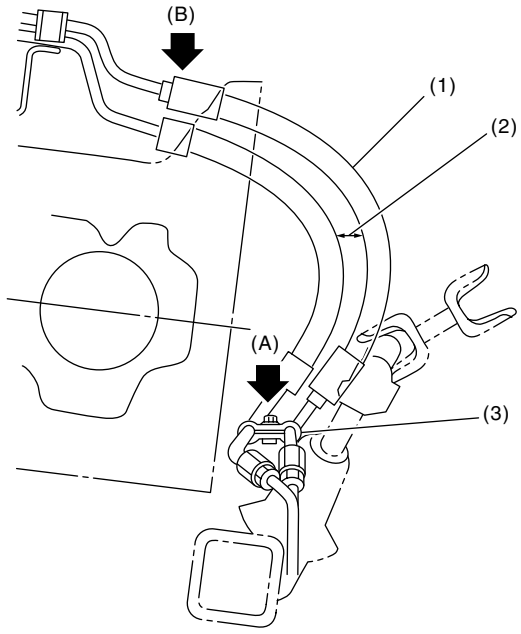

PS-00179

(1) High pressure hose
(2) No interference is allowed between hoses.
(3) Clearance between crossmember and pipe: 3 — 8 mm (0.12 — 0.31 in)

C: INSPECTION

Check all disassembled parts for wear, damage or other abnormalities. Repair or replace faulty parts as required.

Part name	Inspection	Remedy
Pipe	• O-ring fitting surface for damage • Nut for damage • Pipe for damage	Replace with a new one.
Clamp	• Clamps for weak clamping force	Replace with a new one.
Hose	• Flared surface for damage • Flare nut for damage • Outer surface for cracks • Outer surface for wear • Clip for damage • End coupling or adapter for degradation	Replace with a new one.

CAUTION:
Although the surface layer materials of rubber hoses have excellent weathering resistance, heat resistance and resistance for low temperature brittleness, they are likely to be damaged chemically by brake fluid, battery electrolyte, engine oil and automatic transmission fluid and their service lives are to be very shortened. It is very important to keep the hoses free from before mentioned fluids and to wipe out immediately when the hoses are adhered with the fluids.
Since the resistances for heat or low temperature brittleness are gradually declining according to time accumulation of hot or cold conditions for the hoses and their service lives are shortening accordingly, it is necessary to perform the careful inspection frequently when the vehicle is used in hot weather areas, cold weather area and a driving condition in which many steering operations are required in short time.
Particularly, continuous work of relief valve over 5 seconds causes to reduce service lives of the hoses, the oil pump, the fluid, etc. due to over heat.

Trouble	Possible cause	Corrective action
Pressure hose burst	Excessive holding time of relief status	Instruct the customers.
	Malfunction of relief valve	Replace the oil pump.
	Poor cold characteristic of fluid	Replace the fluid.
Forced out return hose	Poor connection	Correct.
	Poor holding of clip	Retighten.
	Poor cold characteristic of fluid	Replace the fluid.
Fluid bleeding out of hose slightly	Wrong layout, tensioned	Replace the hose.
	Excessive play of engine due to deterioration of engine mounting rubber	Replace the defective parts.
	Improper stop position of pitching stopper	Replace the defective parts.
Crack on hose	Excessive holding time of relief status	Replace. Instruct customer.
	Excessive tightening torque for return hose clip	Replace.
	Power steering fluid, brake fluid, engine oil, electrolyte adhere on the hose surface	Replace. Pay attention on service work.
	Too many times use in extremely cold weather	Replace. Instruct the customers.

NOTE:
It is likely that although one judges fluid leakage, there is actually no leakage. This is because the fluid spilt during the last maintenance was not completely wiped off. Be sure to wipe off spilt fluid thoroughly after maintenance.

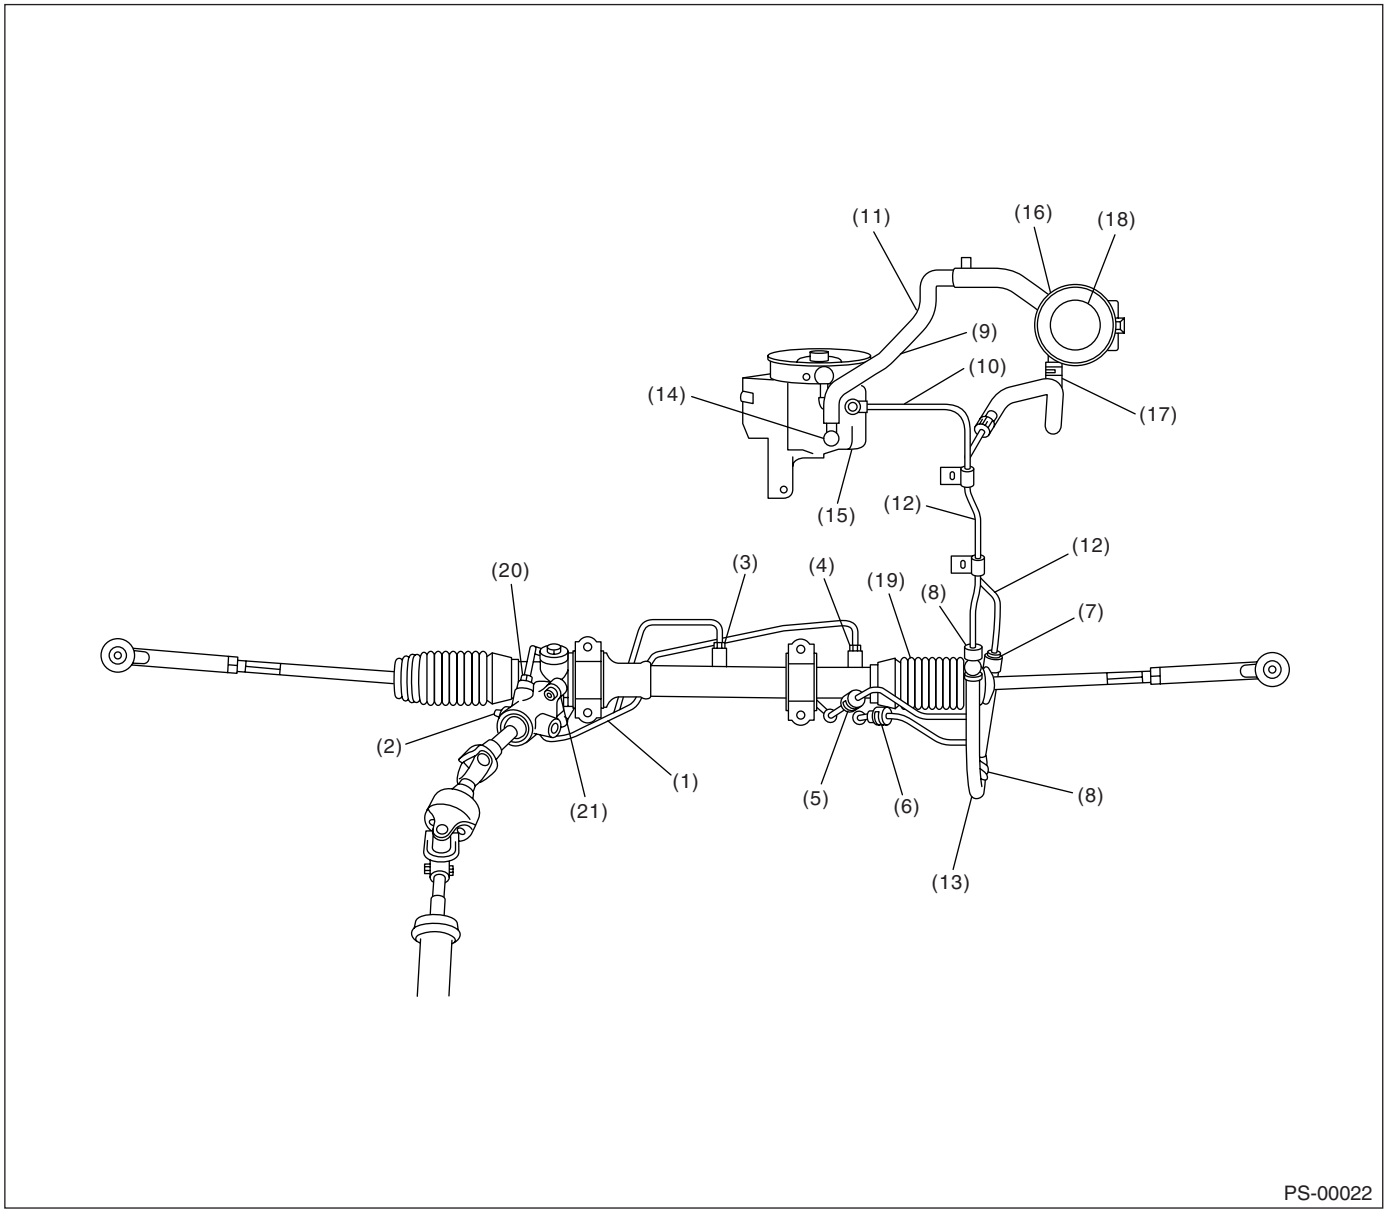

Fluid leaking area	Possible cause	Corrective action
Leakage from connecting portions of pipes and hoses, numbered with (1) through (10) in figure	Insufficient tightening of flare nut, catching dirt or the like, damage to flare or flare nut or eye bolt	Loosen and retighten, if ineffective, replace.
	Poor insertion of hose, poor clamping	Retighten or replace the clamp.
	Damaged O-ring or gasket	Replace the O-ring or gasket pipe or hose with new one, if ineffective, replace gearbox also.
Leakage from hose (11), (12) and (13) in figure	Crack or damage in hose	Replace with a new one.
	Crack or damage in hose hardware	Replace with a new one.
Leakage from surrounding of cast iron portion of oil pump (14) and (15) in figure	Damaged O-ring	Replace the oil pump.
	Damaged gasket	Replace the oil pump.

Fluid leaking area	Possible cause	Corrective action
Leakage from oil tank (16) and (17) in figure	Crack in oil tank	Replace the oil tank.
Leakage from filler neck (18)	Damaged cap packing	Replace the cap.
	Crack in root of filler neck	Replace the oil tank.
	High fluid level	Adjust the fluid level.
Leakage from surrounding of power cylinder of gearbox (19) in figure	Damaged oil seal	Replace the oil seal.
Leakage from control valve of gear-box (20) and (21) in figure	Damaged packing or oil seal	Replace the problem parts.
	Damage in control valve	Replace the control valve.

8. Pipe Assembly [RHD MODEL]

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Lift-up the vehicle, and then remove the jack-up plate.

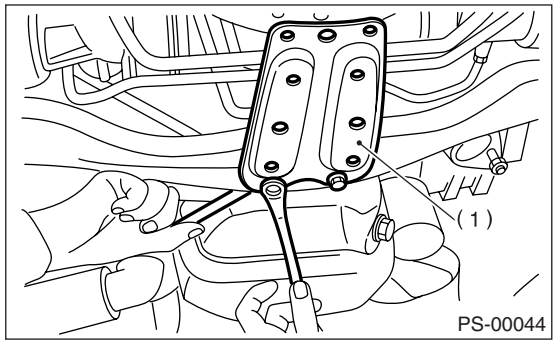

(1) Jack-up plate

3) Remove the one pipe joint at the center of gear-box, and then connect the vinyl hose to pipe and joint. Discharge fluid by turning steering wheel fully clockwise and counterclockwise. Discharge fluid similarly from the other pipe.

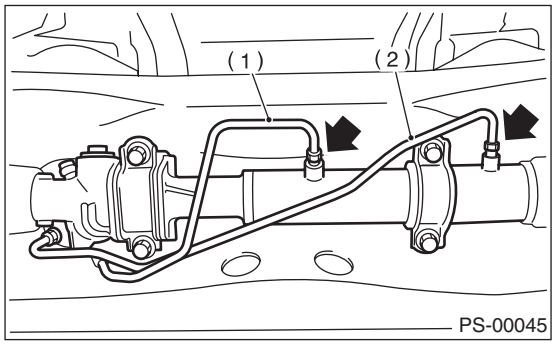

(1) Pipe A
(2) Pipe B

4) Remove the clamp E from pipes C and D.

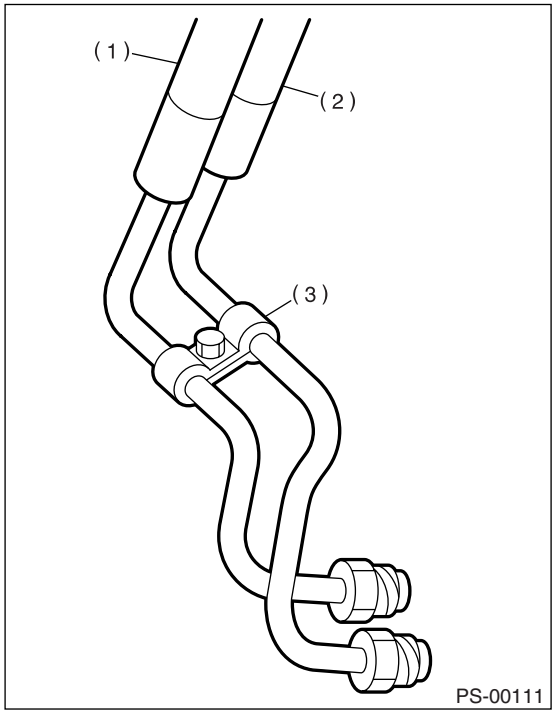

(1) Return hose
(2) Pressure hose
(3) Clamp E

5) Disconnect the pipe C and D from gear box.

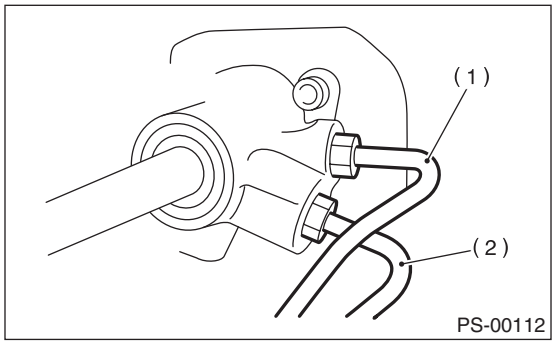

(1) Pipe C
(2) Pipe D

6) Non-turbo model
(1) Remove the air cleaner.
(2) Remove the bolt A.
(3) Disconnect the pipe C from oil pump. Disconnect the pipe D from return hose.

CAUTION:
• Do not allow fluid from the hose end to come into contact with pulley belt.
• To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

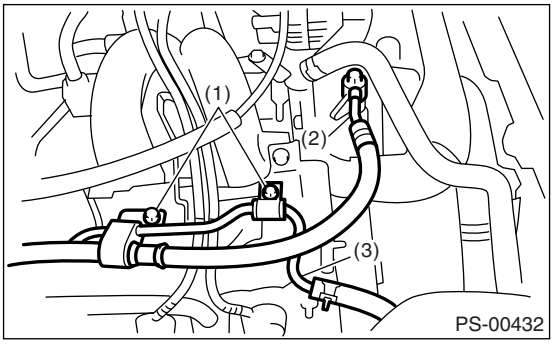

(1) Bolt A
(2) Pipe C
(3) Pipe D

7) Turbo model
(1) Remove the air cleaner.
<Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner.>
(2) Remove the coolant filler tank.

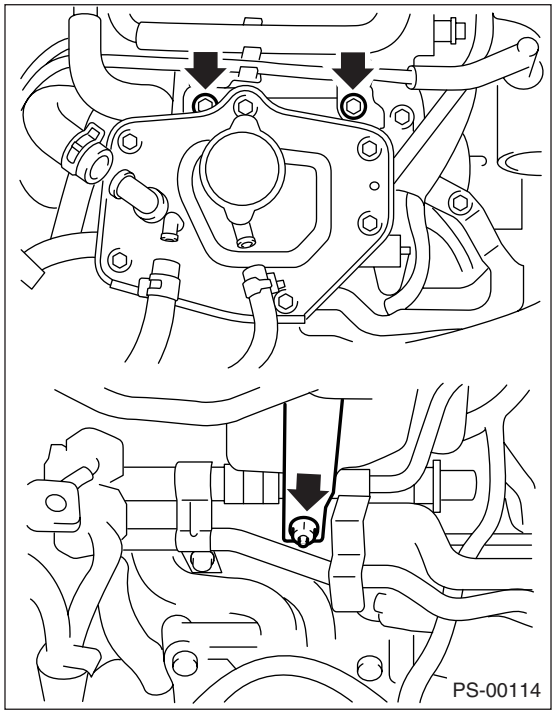

(3) Remove the two bolts fixing pipe C and D.
(4) Disconnect the pipe C from oil pump. Disconnect pipe D from return hose.

CAUTION:
• Do not allow fluid from the hose end to come into contact with pulley belt.
• To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

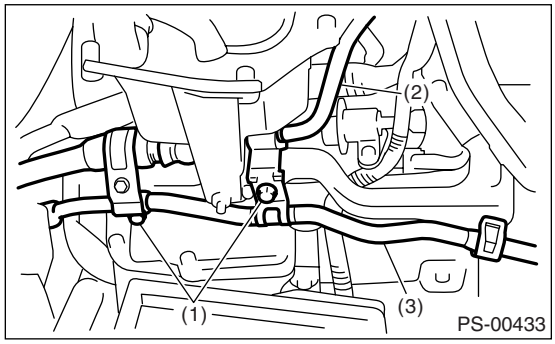

(1) Bolt
(2) Pipe C
(3) Pipe D

B: INSTALLATION

1) Temporarily tighten the two bolts fixing pipe C and D. (bolt A for Non-turbo model.)

NOTE:
Visually check that the hose between tank and pipe D is free from bending or twisting.

- NON-TURBO MODEL

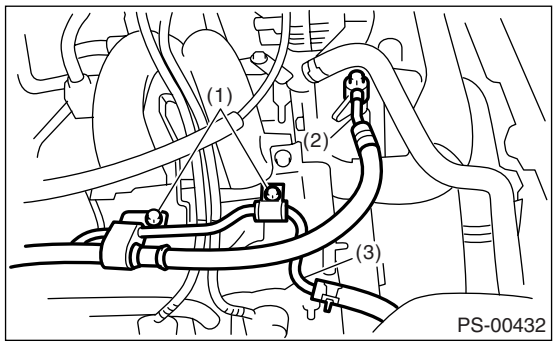

(1) Bolt A
(2) Pipe C
(3) Pipe D

- TURBO MODEL

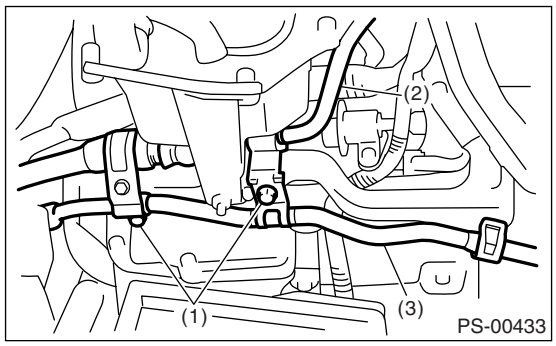

(1) Bolt
(2) Pipe C
(3) Pipe D

(1) Connect the pipe D to oil tank.
(2) Using a new gasket, connect the pipe C to oil pump.

Tightening torque:
39 N·m (4.0 kgf-m, 28.9 ft-lb)

(3) Tighten the two bolts fixing pipe C and D. (bolt A for Non-turbo model.)

Tightening torque:
13 N·m (1.3 kgf-m, 9.4 ft-lb)

2) Install the coolant filler tank. (Turbo model)

Tightening torque:
T1: 19 N·m (1.9 kgf-m, 13.7 ft-lb)
T2: 21 N·m (2.1 kgf-m, 15.2 ft-lb)

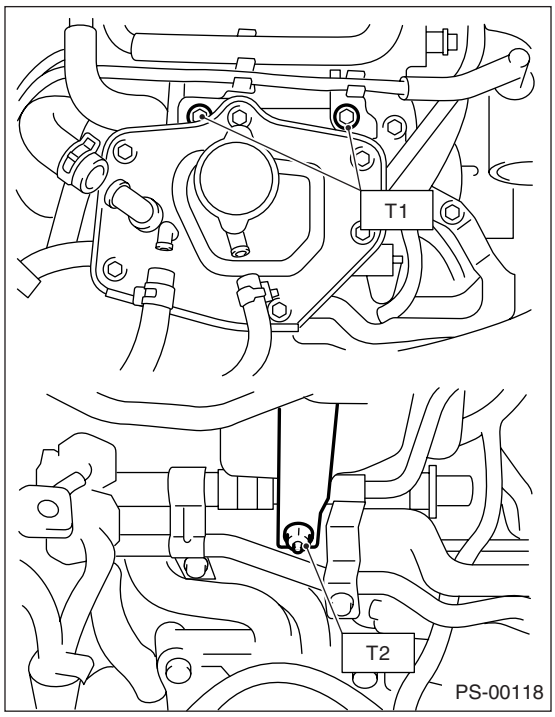

3) Temporarily connect the pipe C and D to gear box.

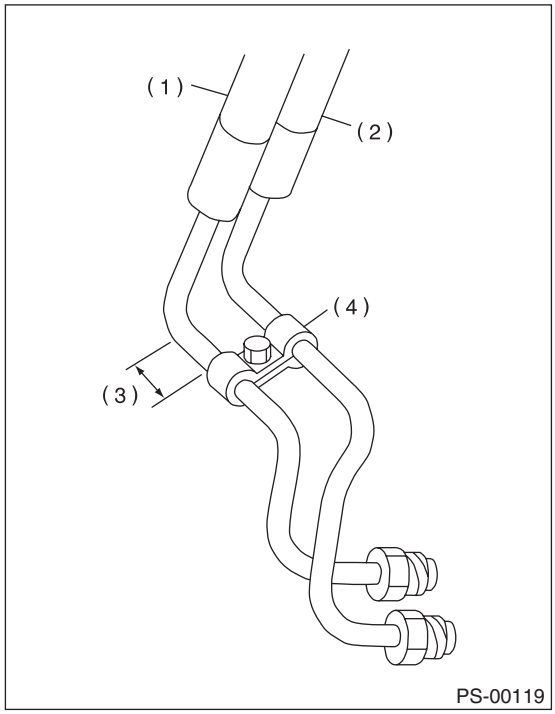

(1) Return hose
(2) Pressure hose
(3) Approx. 30 mm (1.18 in)
(4) Clamp E

4) Temporarily install the clamp E on pipes C and D.

NOTE:
Ensure the letter “8” on each clamp are diagonally opposite each other as shown in the figure.

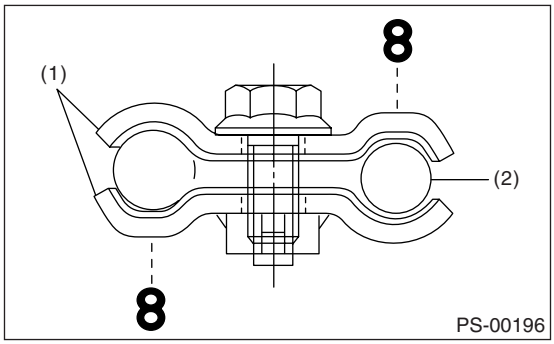

(1) Clamp E
(2) Pipe C

5) Tighten the clamp E firmly.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

6) Tighten the joint nut.

Tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

7) Connect the pipes A and B to four pipe joints of gearbox. Connect the upper pipe B first, and lower pipe A second.

Tightening torque:
24 N·m (2.4 kgf-m, 17.4 ft-lb)

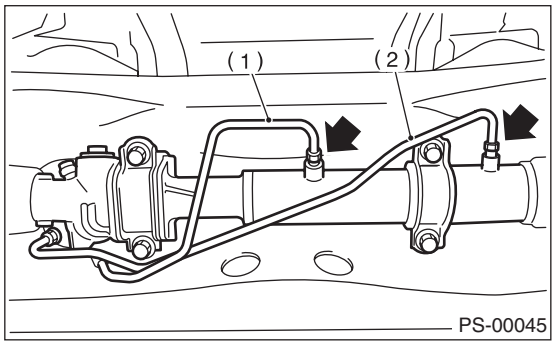

(1) Pipe A
(2) Pipe B

8) Install the jack-up plate.
9) Install the air intake duct, air cleaner upper cover and air intake boot.
<Ref. to IN(H4DOTC)-8, INSTALLATION, Air Cleaner.> and <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
10) Connect the battery ground cable to battery.
11) Feed the specified fluid.

CAUTION:
Never start the engine before feeding the fluid; otherwise vane pump might be seized up.

12) Finally check clearance between pipes and/or hoses, as shown in the figure.

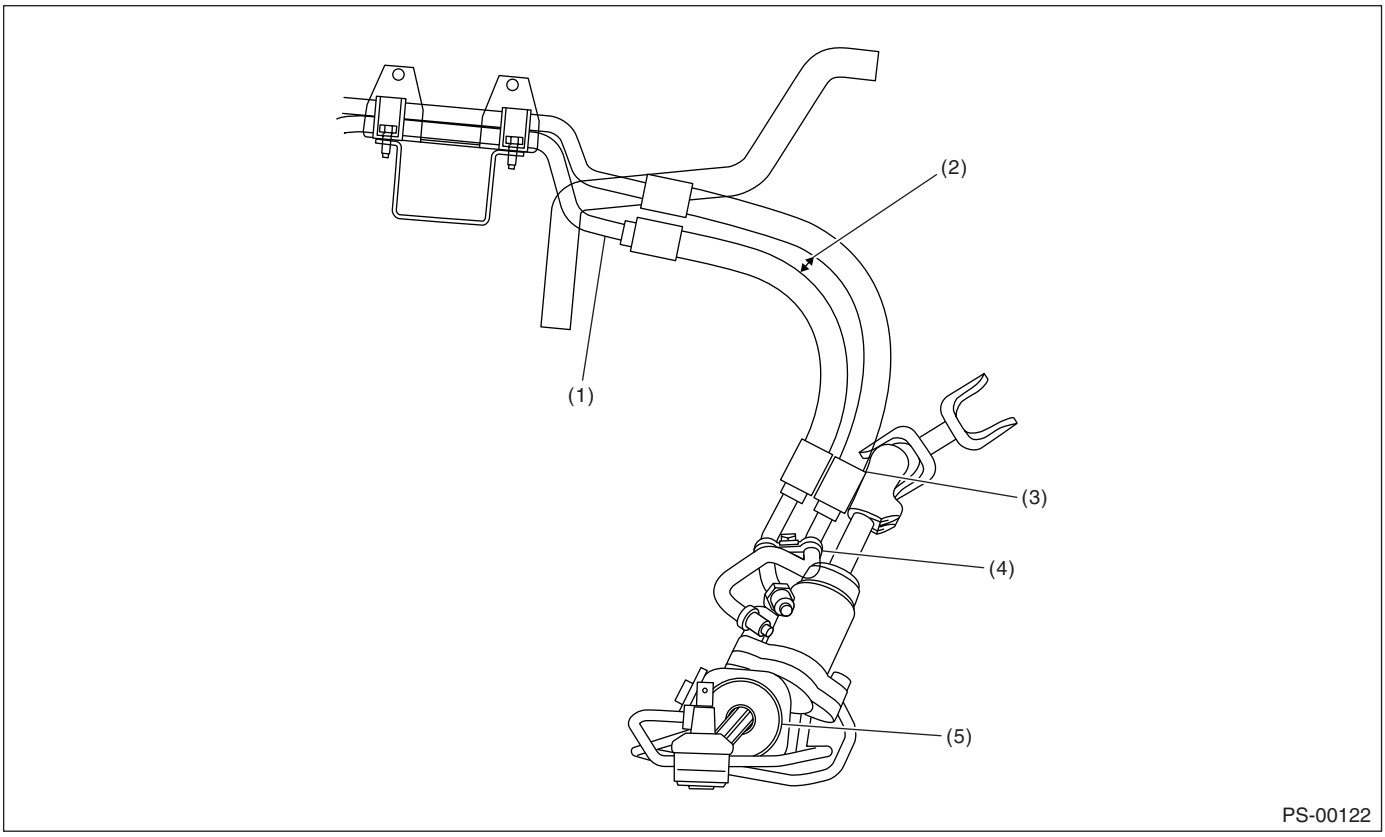

(1) Clearance between blow-by hose and pipe: 3 — 5 mm (0.12 — 0.20 in)
(2) No interference is allowed between hoses.
(3) Clearance between side frame and hose: 15 mm (0.59 in) or more
(4) Clearance between crossmember and pipe: 5 — 13 mm (0.20 — 0.51 in)
(5) Steering gearbox

C: INSPECTION

Check all disassembled parts for wear, damage or other abnormalities. Repair or replace faulty parts as required.

Part name	Inspection	Remedy
Pipe	• O-ring fitting surface for damage • Nut for damage • Pipe for damage	Replace with a new one.
Clamp	• Clamps for weak clamping force	Replace with a new one.
Hose	• Flared surface for damage • Flare nut for damage • Outer surface for cracks • Outer surface for wear • Clip for damage • End coupling or adapter for degradation	Replace with a new one.

CAUTION:
Although the surface layer materials of rubber hoses have excellent weathering resistance, heat resistance and resistance for low temperature brittleness, they are likely to be damaged chemically by brake fluid, battery electrolyte, engine oil and automatic transmission fluid and their service lives are to be very shortened. It is very important to keep the hoses free from before mentioned fluids and to wipe out immediately when the hoses are adhered with the fluids.
Since the resistances for heat or low temperature brittleness are gradually declining according to time accumulation of hot or cold conditions for the hoses and their service lives are shortening accordingly, it is necessary to perform the careful inspection frequently when the vehicle is used in hot weather areas, cold weather area and a driving condition in which many steering operations are required in short time.
Particularly, continuous work of relief valve over 5 seconds causes to reduce service lives of the hoses, the oil pump, the fluid, etc. due to over heat.

Trouble	Possible cause	Corrective action
Pressure hose burst	Excessive holding time of relief status	Instruct the customers.
	Malfunction of relief valve	Replace the oil pump.
	Poor cold characteristic of fluid	Replace the fluid.
Forced out return hose	Poor connection	Correct.
	Poor holding of clip	Retighten.
	Poor cold characteristic of fluid	Replace the fluid.
Fluid bleeding out of hose slightly	Wrong layout, tensioned	Replace the hose.
	Excessive play of engine due to deterioration of engine mounting rubber	Replace the defective parts.
	Improper stop position of pitching stopper	Replace the defective parts.
Crack on hose	Excessive holding time of relief status	Replace. Instruct customer.
	Excessive tightening torque for return hose clip	Replace.
	Power steering fluid, brake fluid, engine oil, electrolyte adhere on the hose surface	Replace. Pay attention on service work.
	Too many times use in extremely cold weather	Replace. Instruct the customers.

NOTE:
It is likely that although one judges fluid leakage, there is actually no leakage. This is because the fluid spilt during the last maintenance was not completely wiped off. Be sure to wipe off spilt fluid thoroughly after maintenance.

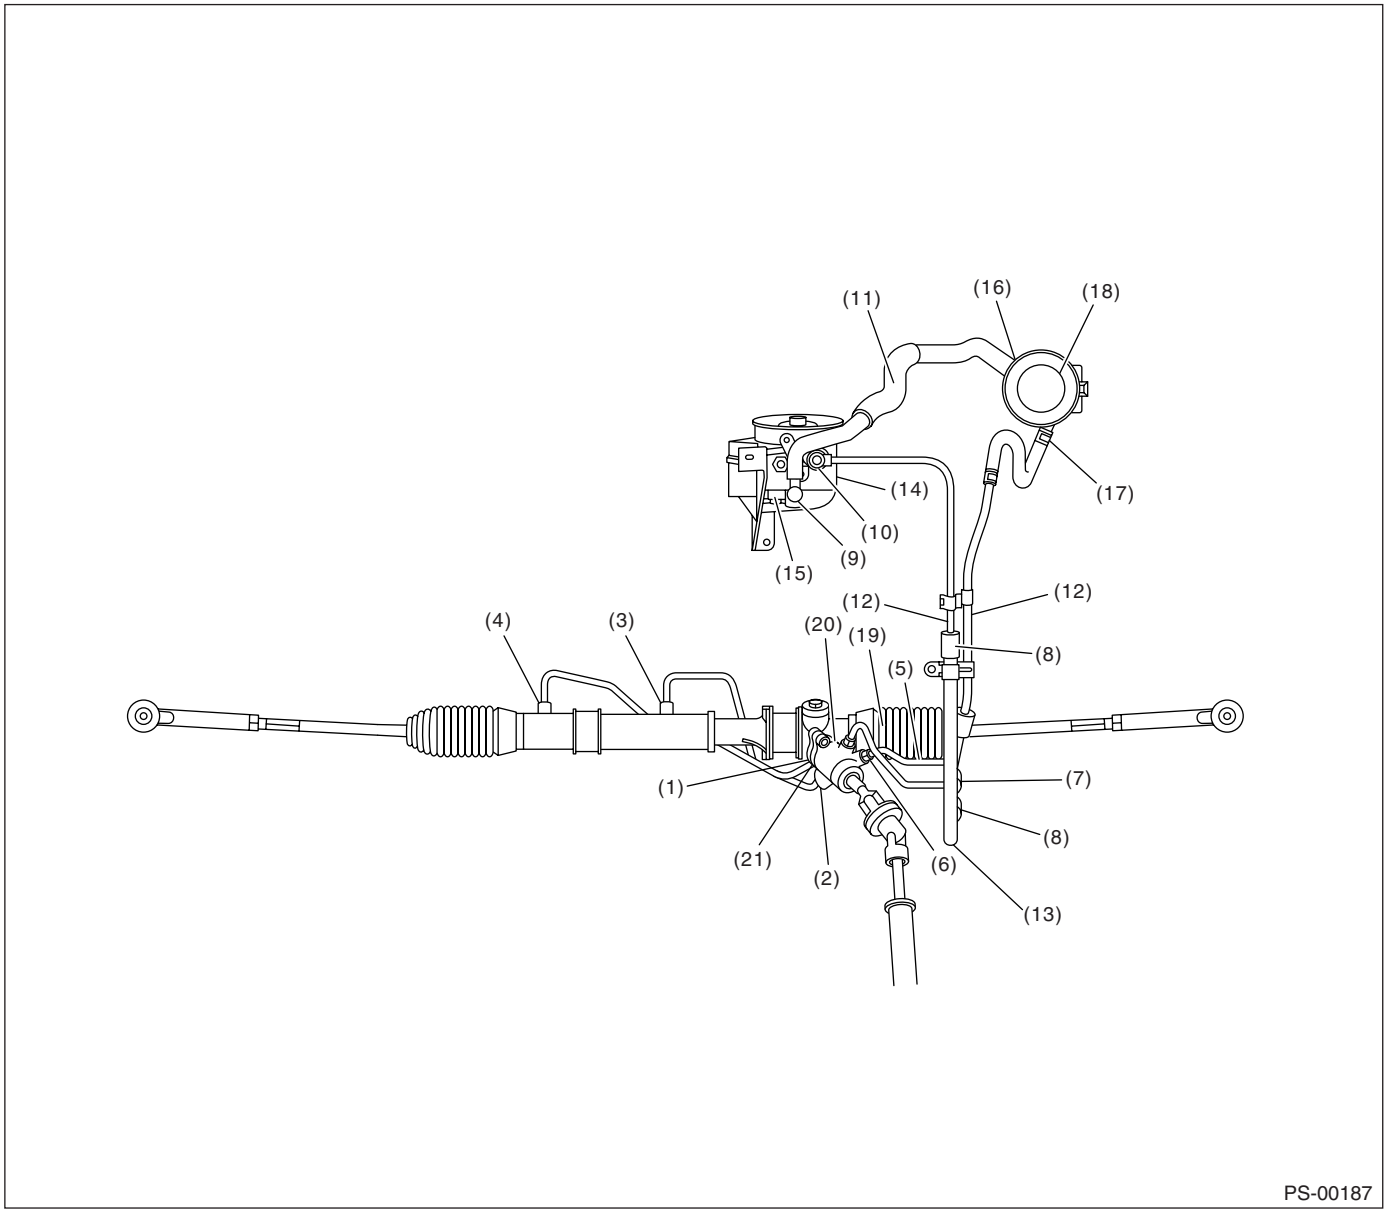

Fluid leaking area	Possible cause	Corrective action
Leakage from connecting portions of pipes and hoses, numbered with (1) through (10) in figure	Insufficient tightening of flare nut, catching dirt or the like, damage to flare or flare nut or eye bolt	Loosen and retighten, if ineffective, replace.
	Poor insertion of hose, poor clamping	Retighten or replace the clamp.
	Damaged O-ring or gasket	Replace the O-ring or gasket pipe or hose with new one, if ineffective, replace gearbox also.
Leakage from hose (11), (12) and (13) and oil cooler (22) in figure	Crack or damage in hose	Replace with a new one.
	Crack or damage in hose hardware	Replace with a new one.
Leakage from surrounding of cast iron portion of oil pump (14) and (15) in figure	Damaged O-ring	Replace the oil pump.
	Damaged gasket	Replace the oil pump.

Fluid leaking area	Possible cause	Corrective action
Leakage from oil tank (16) and (17) in figure	Crack in oil tank	Replace the oil tank.
Leakage from filler neck (18)	Damaged cap packing	Replace the cap.
	Crack in root of filler neck	Replace the oil tank.
	High fluid level	Adjust the fluid level.
Leakage from surrounding of power cylinder of gearbox (19) in figure	Damaged oil seal	Replace the oil seal.
Leakage from control valve of gear-box (20) and (21) in figure	Damaged packing or oil seal	Replace the problem parts.
	Damage in control valve	Replace the control valve.

9. Oil Pump

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the pulley belt cover.
3) Loosen the belt tension adjusting bolt and generator securing bolt, and then remove the power steering pump V-belt.

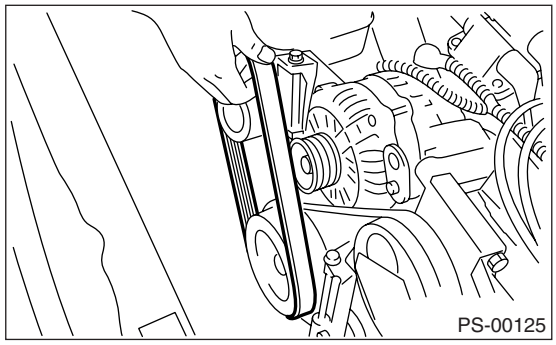

4) Disconnect the connector from power steering pump switch.
5) Disconnect the pipe C and suction hose from oil pump.

CAUTION:
• Do not allow fluid from the hose end to come into contact with pulley belt.
• To prevent foreign matter from entering the hose, cover the open ends of them with a clean cloth.

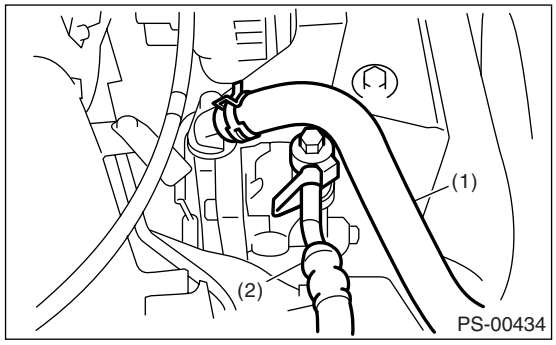

(1) Suction hose
(2) Pipe C

6) Remove the bolts which install the power steering pump bracket.

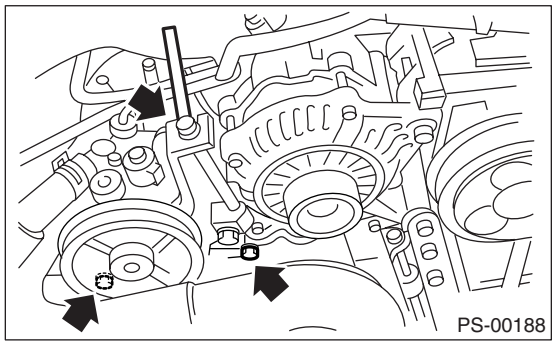

7) Place the oil pump bracket in a vise, remove the two bolts from front side of oil pump.

CAUTION:
Do not place the oil pump bracket directly in the vise; use soft pads and hold oil pump lightly to protect the pump.

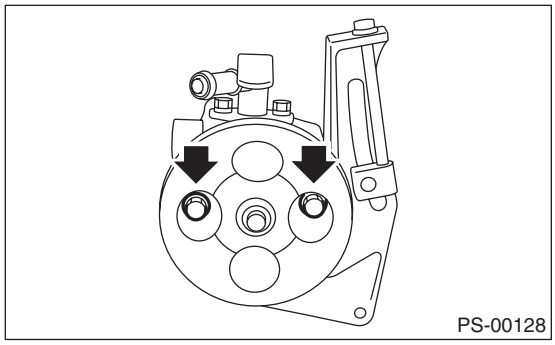

8) Remove the bolt from the rear side of oil pump.
9) Disassemble the oil pump and bracket by inserting a flat tip screwdriver as shown in the figure.

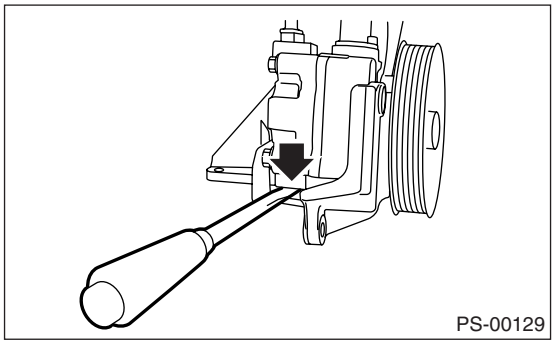

B: INSTALLATION

1) Install the oil pump to bracket.
(1) Place the oil pump bracket in a vise. Tighten the bushing using a 12.7 mm (1/2″) type 14 mm and 21 mm box wrench until it is in contact with the oil pump mounting surface.

CAUTION:
Do not place the oil pump bracket directly in the vise; use soft pads and hold oil pump lightly to protect the pump.

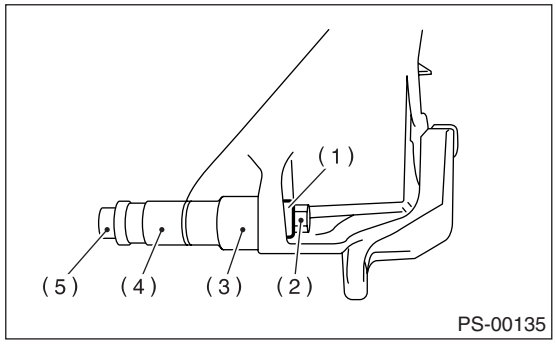

(1) Bush
(2) Nut
(3) 21 mm
(4) 14 mm
(5) Bolt

(2) Tighten the bolts which install the oil pump to bracket.

Tightening torque:
15.7 (1.6 kgf-m, 11.6 ft-lb)

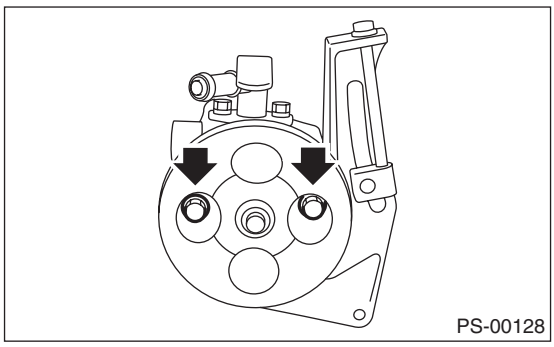

Tightening torque:
37.3 (3.8 kgf-m, 27.5 ft-lb)

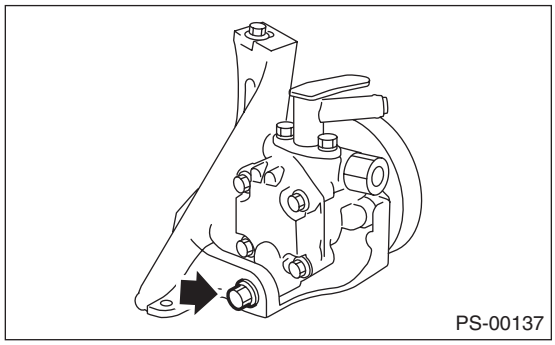

2) Tighten the bolts which install the power steering pump bracket.

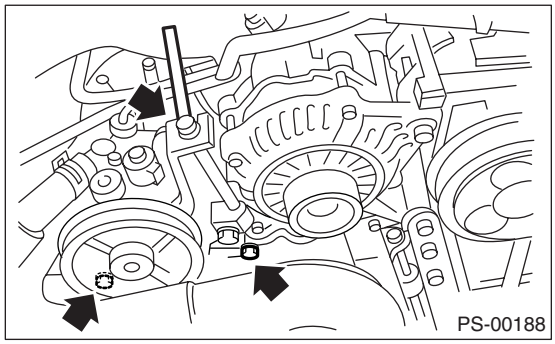

3) Interconnect the pipe C and suction hose.

Tightening torque:
Eye bolt
39 N·m (4.0 kgf-m, 28.9 ft-lb)

CAUTION:
If a hose is twisted at this step, the hose may come into contact with some other parts.

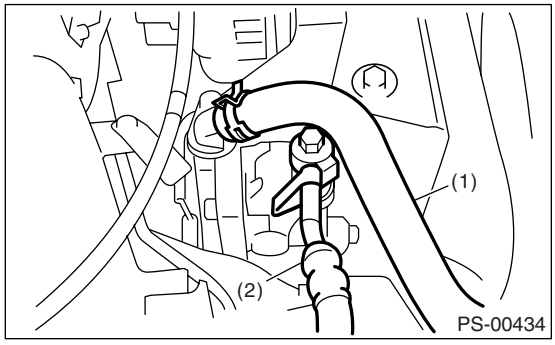

(1) Suction hose
(2) Pipe C

4) Connect the connector to power steering pump switch.
5) Install the pulley belt to oil pump.
6) Check the pulley belt tension.
<Ref. to ME(H4SO)-45, INSPECTION, V-belt.>

7) Tighten the bolt of belt tension.

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

8) Install the pulley belt cover.
9) Connect the battery ground cable to battery.
10) Feed the specified power steering fluid. <Ref. to PS-88, Power Steering Fluid.>

CAUTION:
Never start the engine before feeding the fluid; otherwise vane pump might be seized up.

C: INSPECTION

1. BASIC INSPECTION

Perform the following inspection procedures and repair or replace defective parts.

No.	Parts	Inspection	Corrective action
1	Oil pump (Exterior)	(1) Crack, damage or oil leakage	Replace the oil pump with a new one.
		(2) Play of pulley shaft	Measure the radial play and axial play. If any of these exceeds the service limit, replace the oil pump with a new one.
2	Pulley	(1) Damage	Replace it with a new one.
		(2) Bend	Measure the V ditch deflection. If it exceeds the service limit, replace the pulley with a new one.
3	Oil pump (Interior)	(1) Defect or burning of vane pump	Check the resistance to rotation of pulley. If it is past the service limit, replace the oil pump with a new one.
		(2) Bend in the shaft or damage to bearing	Oil pump emits a noise that is markedly different in tone and loudness from a sound of a new oil pump when turning with a string put around its pulley, replace the oil pump with a new one.
4	O-ring	Crack or deterioration	Replace it with a new one.
5	Bracket	Crack	Replace it with a new one.

2. SERVICE LIMIT

Make a measurement as follows. If it exceeds the specified service limit, replace the parts with new ones.

CAUTION:
• Fix the oil pump on a vise to make a measurement. At this time, hold the oil pump with least possible force between two wood pieces.
• Do not set outside of flow control valve or pulley on a vise; otherwise outside or pulley might be deformed. Select properly sized wood pieces.

1) Play of the pulley shaft

Condition:
P: When applying the force of 9.8 N (1.0 kgf, 2.2 lb)

Service limit:
Radial play (Direction ⟷)
0.4 mm (0.016 in) or less

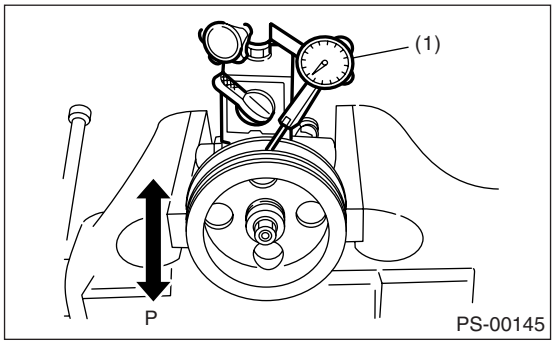

(1) Dial indicator

Axial play (Direction ⟺)
0.9 mm (0.035 in) or less

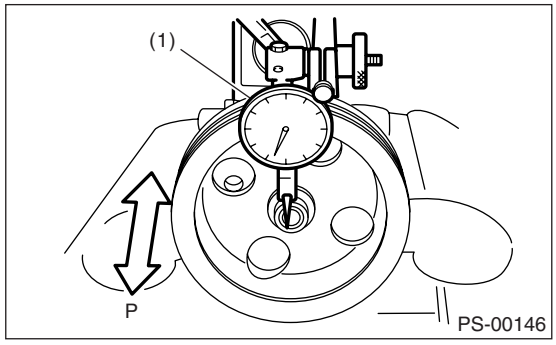

(1) Dial indicator

2) Ditch deflection of pulley

Service limit:
1.0 mm (0.039 in) or less

NOTE:
Read the value for one surface of V ditch, and then the value for another off the dial.

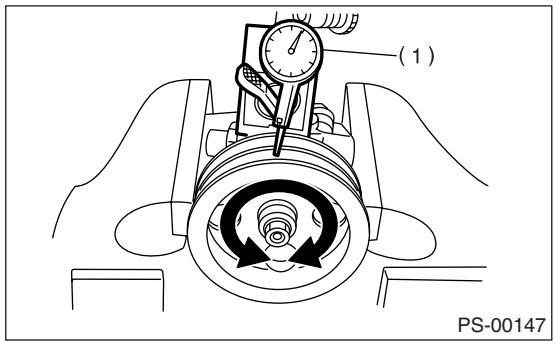

(1) Dial indicator

3) Resistance to rotation of pulley

Service limit:
Maximum load; 9.22 N (0.94 kgf, 2.07 lb) or less

NOTE:
• A rather higher value may be indicated when pulley starts turning.
• Measure the load during rotation and make a judgment.

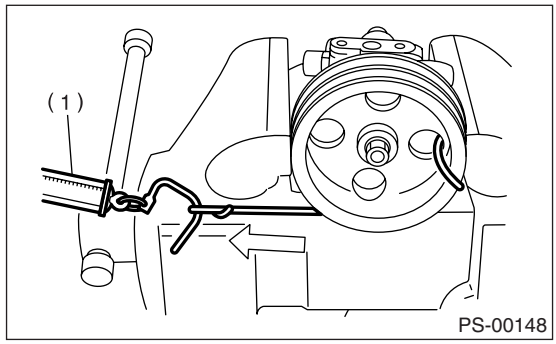

(1) Spring balance

3. HYDRAULIC PRESSURE

NOTE:
• Be sure to complete all items aforementioned in “INSPECTION”, prior to measuring hydraulic pressure. Otherwise, pressure can not be measured correctly. <Ref. to PS-89, INSPECTION, General Diagnostic Table.>
• Do not leave the valve of pressure gauge closed or hold the steering wheel at stop end for 5 seconds or more in any case, as the oil pump may be damaged due to long keep of these conditions.
• Put a cotton cloth waste at a place where fluid drops before the pressure gauge is installed. Wipe off split fluid thoroughly after the measurement.

1) REGULAR PRESSURE MEASUREMENT
(1) Connect the ST1, ST2 and ST3.

ST1 92511000 PRESSURE GAUGE
ST2 34099AC020 ADAPTER HOSE B
ST3 34099AC010 ADAPTER HOSE A

(2) Remove the air intake duct.
(3) Disconnect the pipe C from the pump.
(4) Using the gasket (Part No. 34621AC021) and bolt (Part No. 34620AC010), install the ST2 to the pump instead of pipe C.

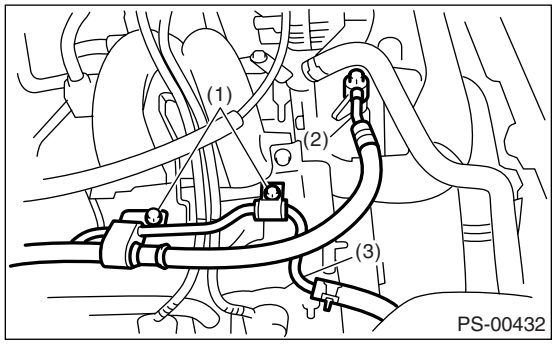

(1) Bolt A
(2) Pipe C
(3) Pipe D

(5) Install the ST3 to end of pipe C removed from pump.
(6) Replenish power steering fluid up to the specified level.
(7) Open the valve, and start the engine.
(8) Measure the regular pressure.

ST1 925711000 PRESSURE GAUGE
ST2 34099AC020 ADAPTER HOSE B
ST3 34099AC010 ADAPTER HOSE A

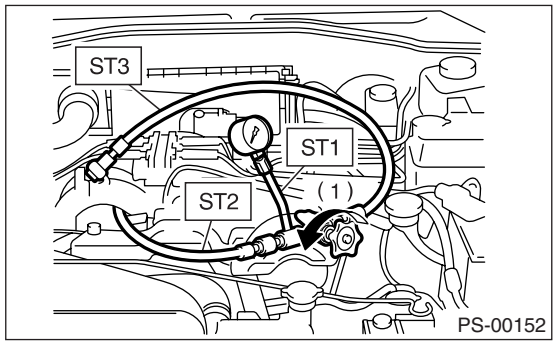

Service limit:
981 kPa (10 kg/cm^2, 142 psi) or less

(9) If it is not within the specified value, replace the troubled part caused by the following symptoms; pipe or hose clogged, leaks from fluid line, and mix of foreign objects in fluid line.

2) Measure the relief pressure.
(1) Using the STs, measure the relief pressure.
(2) Close the valve.
(3) Measure the relief pressure.

ST1 925711000 PRESSURE GAUGE
ST2 34099AC020 ADAPTER HOSE B
ST3 34099AC010 ADAPTER HOSE A

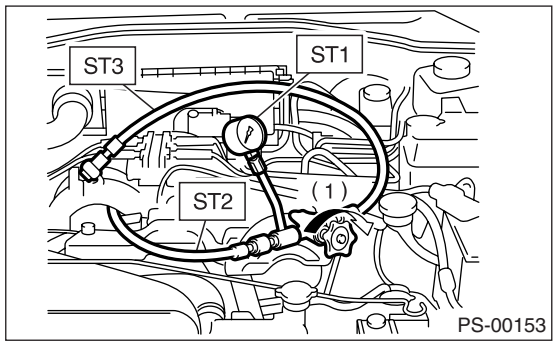

Service limit:
1.6 L model:
6,174 — 6,860 kPa
(63 — 70 kg/cm^2, 896 — 994 psi)
2.0 L Non-turbo model, 2.5 L model:
6,767 — 7,453 kPa
(69 — 76 kg/cm^2, 981 — 1,081 psi)
2.0 L Turbo model:
7,350 — 8,036 kPa
(75 — 82 kg/cm^2, 1,067 — 1,165 psi)

(4) If it is not within the specified value, replace the oil pump.

3) Measure the working pressure.
(1) Using the STs, measure the working pressure.
(2) Open the valve.
(3) Measure the working pressure of control valve by turning wheel from stop to stop.

ST1 925711000 PRESSURE GAUGE
ST2 34099AC020 ADAPTER HOSE B
ST3 34099AC010 ADAPTER HOSE A

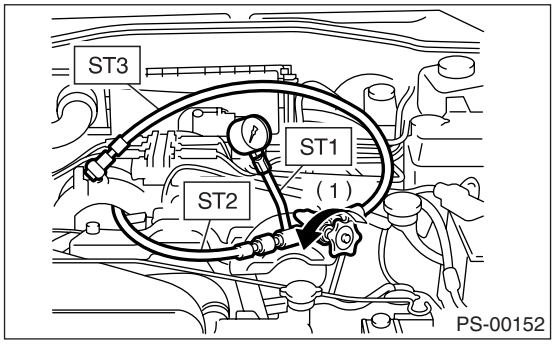

Service limit:
1.6 L model:
6,174 — 6,860 kPa
(63 — 70 kg/cm^2, 896 — 994 psi)
2.0 L Non-turbo model, 2.5 L model:
6,767 — 7,453 kPa
(69 — 76 kg/cm^2, 981 — 1,081 psi)
2.0 L Turbo model:
7,350 — 8,036 kPa
(75 — 82 kg/cm^2, 1,067 — 1,165 psi)

(4) If it is within the specified value, measure the steering effort. <Ref. to PS-91, MEASUREMENT OF STEERING EFFORT, INSPECTION, General Diagnostic Table.> If it is not within specified value, replace the control valve itself or control valve and pinion as a single unit with new ones.

10.Reservoir Tank

A: REMOVAL

1) Remove the air intake duct. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Duct.>
2) Drain fluid from the reservoir tank.
3) Disconnect the pipe D from return hose and suction hose from oil pump.

CAUTION:
• Do not allow fluid from the hose end to come into contact with pulley belt.
• To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

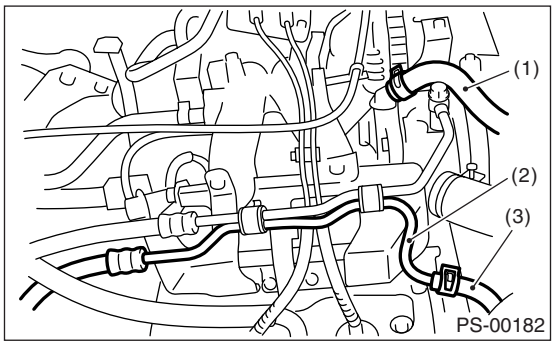

(1) Suction hose
(2) Pipe D
(3) Return hose

4) Remove the reservoir tank from bracket by pulling it upwards.

B: INSTALLATION

1) Install the reservoir tank to bracket.
2) Connect the pipes D to return hose and suction hose to oil pump.

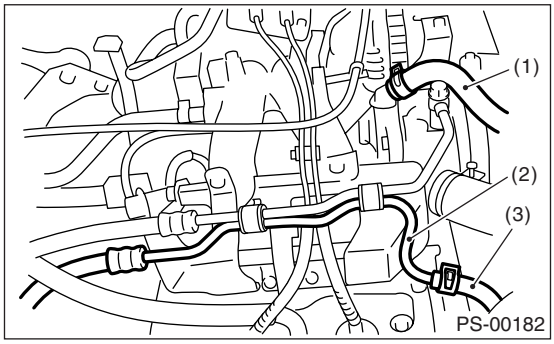

(1) Suction hose
(2) Pipe D
(3) Return hose

3) Feed the power steering fluid to the specified level. <Ref. to PS-88, Power Steering Fluid.>

C: INSPECTION

Check the reservoir tank for cracks, breakage, or damage. If any cracks, breakage, or damage is found, replace the reservoir tank.

11.Power Steering Fluid

A: SPECIFICATION

Recommended power steering fluid	Manufacturer
DEXRON III or equivalent	B.P.
	CALTEX
	CASTROL
	MOBIL
	SHELL
	TEXACO

B: INSPECTION

1) Check the power steering fluid for deterioration or contamination. If the fluid is highly deteriorated or contaminated, drain it and refill with new fluid.
2) Check the joints and units for oil leakage. If any oil leaks are found, repair or replace the applicable part.
3) Inspect the fluid level on flat and level surface with engine “OFF” by indicator of reservoir tank.
If the level is at MIN. point or below, add fluid to keep the level in the specified range of the indicator. If at MAX. point or above, drain fluid by using a syringe or the like.

(1) Check at power steering fluid temperature 20°C (68°F); read the fluid level on the “COLD” side.

(2) Check at power steering fluid temperature 80°C (176°F); read the fluid level on the “HOT” side.

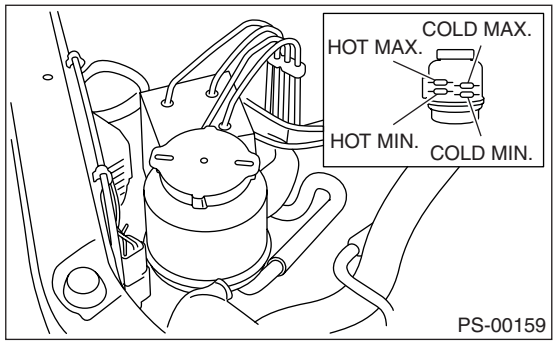

C: REPLACEMENT

1) Lift up the vehicle.
2) Remove the jack up plate.
3) Remove the pipe joint in center of gear box, and then install the vinyl hose to pipe and joint. Drain the fluid while turning steering wheel.
4) Set the ST on top of reservoir tank and fill it about half way with the specified fluid.
ST 34199AE040 OIL CHARGE

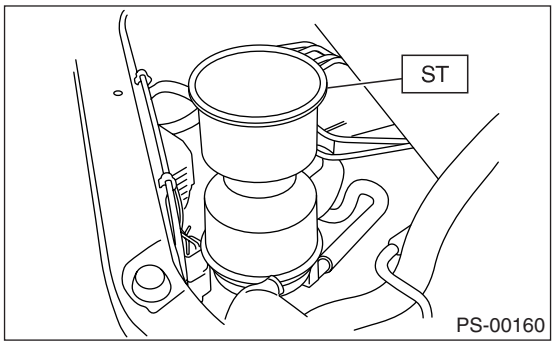

5) Continue to turn the steering wheel slowly from lock to lock until bubbles stop appearing on oil surface while keeping the fluid at that level.
6) If turning the steering wheel in low fluid level condition, air will be sucked in pipe. In this case, leave it about half an hour and then do the step 5) again.
7) Lift up the vehicle, start the engine and let it idle.
8) Continue to turn the steering wheel slowly from lock to lock again until bubbles stop appearing on oil surface while keeping the fluid at that level.
It is normal that bubbles stop appearing after three times turning of steering wheel from lock to lock.
9) In case the bubbles do not stop appearing in the tank, leave it about half an hour and then do the step 4) all over again.
10) Lower the vehicle, and then idle the engine.
11) Continue to turn the steering wheel from lock to lock until bubbles stop appearing and change of the fluid level is within 3 mm (0.12 in).
12) In case the following happens, leave it about half an hour and then do step 8) to 11) again.

(1) The fluid level changes over 3 mm (0.12 in).

(2) Bubbles remain on the upper surface of the fluid.

(3) Grinding noise is generated from oil pump.

13) Check the fluid leakage after turning steering wheel from lock to lock with engine running.

12.General Diagnostic Table

A: INSPECTION

Trouble	Possible cause	Corrective action
• Heavy steering effort in all ranges • Heavy steering effort at stand still • Steering wheel surges when turning.	1. Pulley belt • Unequal length of pulley belts • Adhesion of oil and grease • Loose or damage of pulley belt • Poor uniformity of pulley belt cross section • Pulley belt touches to pulley bottom • Poor revolution of pulleys (except oil pump pulley) • Poor revolution of oil pump pulley	Adjust or replace.
	2. Tire and wheel • Improper tires out of specification • Improper wheels out of specification • Tires not properly inflated *1	Replace or reinflate.
	3. Fluid • Low fluid level • Aeration • Dust mix • Deterioration of fluid • Poor warming-up of fluid *2	Refill, bleed air, replace or instruct the customer.
	4. Idle speed • Lower idle speed • Excessive drop of idle speed at start or at turning steering wheel *3	Adjust or instruct the customer.
	5. Measure hydraulic pressure.<Ref. to PS-84, INSPECTION, Oil Pump.>	Replace the problem parts.
	6. Measure steering effort.<Ref. to PS-89, INSPECTION, General Diagnostic Table.>	Adjust or replace.
• Vehicle leads to one side or the other. • Poor return of steering wheel to center • Steering wheel surges when turning.	1. Fluid line • Folded hose • Flattened pipe	Reform or replace.
	2. Tire and wheel • Flat tire • Mix use of different tires • Mix use of different wheels • Abnormal wear of tire • Unbalance of remained grooves • Unbalance of tire pressure	Adjust, fix or replace.
	3. Front alignment • Improper or unbalance caster • Improper or unbalance toe-in • Loose connection of suspension	Adjust or retighten.
	4. Others • Damaged joint assembly • Unbalanced height • One-sided weight	Replace, adjust or instruct the customer.
	5. Measure steering effort.<Ref. to PS-89, INSPECTION, General Diagnostic Table.>	Adjust or replace.

*1 If tires and/or wheels are wider, the load to power steering system is the more. Accordingly, in a condition, for example before fluid warms-up, relief valve may work before maximum turning angle. In this case, steering effort may be heavy. When measured hydraulic pressure is normal, there is no abnormal thing.
*2 In cold weather, steering effort may be heavy due to increased flow resistance of cold fluid. After warming-up engine, turn steering wheel from stop to stop several times to warm-up fluid. Then if steering effort reduces normally, there is no abnormal thing.
*3 In cold weather or with insufficient warm-up of engine, steering effort may be heavy due to excessive drop of idling when turning steering wheel. In this case, it is recommended to start the vehicle with increasing engine speed than usual. Then if steering effort reduces normally, there is no abnormal thing.

1. NOISE AND VIBRATION

CAUTION:
Don't keep the relief valve operated over 5 seconds at any time or inner parts of the oil pump may be damaged due to rapid increase of fluid temperature.

NOTE:
• Grinding noise may be heard immediately after the engine start in extremely cold condition. In this case, if the noise goes off during warm-up there is no abnormal function in the system. This is due to the fluid characteristic in extremely cold condition.
• Oil pump makes whine or growl noise slightly due to its mechanism. Even if the noise can be heard when steering wheel is turned at stand still there is no abnormal function in the system provided that the noise eliminates when the vehicle is running.
• When turning the steering wheel with service brake and/or parking brake applied, the noise is generated by creaking between disk and pads. However this does not indicate abnormal function in system.
• There may be a little vibration around the steering devices when turning steering wheel at standstill, even though the component parts have no defects.
Hydraulic systems are likely to generate this kind of vibration as well as working noise and fluid noise because of combined conditions, i.e., road surface and tire surface, engine speed and turning speed of steering wheel, fluid temperature and braking condition.
This phenomena does not indicate there is some abnormal function in the system.
The vibration can be known when steering wheel is turned repeatedly at various speeds from slow to rapid step by step with parking brake applied on concrete road and in "D" range for automatic transmission vehicle.

Trouble	Possible cause	Corrective action
Hiss noise (continuous) While engine is running.	Relief valve emits operating sound when steering wheel is completely turned in either direction. (Don't keep this condition over 5 seconds.)	Normal
	Relief valve emits operating sound when steering wheel is not turned. This means that the relief valve is faulty.	Defective Replace the oil pump.
Rattling noise (intermittent) While engine is running.	Interference with adjacent parts	Check the clearance. Correct if necessary. <Ref. to PS-71, INSPECTION, Pipe Assembly [LHD MODEL].>
	Loosened installation of oil pump, oil tank, pump bracket, gearbox or crossmember	Retighten.
	Loosened installation of oil pump pulley or other pulley(s)	Retighten.
	Loosened linkage or play of steering or suspension Loosened tightening of joint or steering column	Retighten or replace.
	Sound generates from the inside of gearbox or oil pump.	Replace the faulty parts of gearbox or oil pump.
Knocking When turning steering wheel in both direction with small angle repeatedly at engine ON or OFF.	Excessive backlash Loosened lock nut for adjusting backlash	Adjust and retighten.
	Loosened tightening or play of tie-rod, or tie-rod end	Retighten or replace.
Grinding noise (continuous) While engine is running.	Vane pump aeration	Inspect and retighten the fluid line connection. Refill fluid and vent air.
	Vane pump seizing	Replace the oil pump.
	Pulley bearing seizing of oil pump	Replace the oil pump.
	Folded hose, flat pipe	Replace.
Squeal, squeak (intermittent or continuous) While engine is running.	Maladjustment of pulley belt Damaged or charged pulley belt Unequal length of pulley belts	Adjust or replace. (Replace two belts as a set.)
	Run out or soilage of V-groove surface of oil pump pulley	Clean or replace.

Trouble	Possible cause	Corrective action
Sizzling noise (continuous) While engine is running.	Fluid aeration	Fix the wrong part causing aeration. Replace the fluid and vent air.
	Damaged pipe of gearbox	Replace the pipe.
	Abnormal inside of hose or pipe Flat hose or pipe	Rectify or replace.
	Abnormal inside of oil tank	Replace.
	Removed oil tank cap	Install the cap.
Whistle (continuous) While engine is running.	Abnormal pipe of gearbox or abnormal inside of hose	Replace the faulty parts of gearbox or hose.
Whine or growl (continuous or intermittent) While engine is running with/ without steering turned.	Loosened installation of oil pump, oil pump bracket	Retighten.
	Abnormal inside of oil pump, hose	Replace the oil pump, hose, if the noise can be heard when running as well as stand still.
	Torque converter growl, air conditioner compression growl	Remove the power steering pulley belt and confirm.
Creaking noise (intermittent) While engine is running with steering turned.	Abnormal inside of gearbox	Replace the faulty parts of gearbox.
	Abnormal bearing for steering shaft	Apply grease or replace.
	Generates when turning steering wheel with brake (service or parking) applied.	If the noise goes off when brake is released, it is normal.
Vibration While engine is running with/ without steering turned.	Too low engine speed	Adjust and instruct customers.
	Vane pump aeration	Fix the wrong part. Vent air.
	Damaged valve in oil pump, gearbox	Replace the oil pump, faulty parts of gearbox.
	Looseness of play of steering, suspension parts	Retighten.

2. MEASUREMENT OF STEERING EFFORT

	Step	Check	Yes	No
1	**CHECK STEERING EFFORT.** 1)Stop the vehicle on a concrete road. 2)Start the engine. 3)Idle the engine. 4)Install the spring scale on the steering wheel. 5)Pull the spring scale at an right angle to steering wheel, and measure both right and left steering wheel effort. NOTE: When turning the steering more quickly than necessary from a direction to the other direction at an engine speed over 2,000 rpm, steering effort may be heavy. This is caused by flow characteristic of oil pump and is not a problem.	Is the steering effort less than 29.4 N (3.0 kgf, 6.6 lb)?	Go to step **2.**	Adjust the backlash.
2	**CHECK STEERING EFFORT.** 1)Stop the engine. 2)Pull the spring scale at an right angle to the steering wheel, and measure both right and left steering wheel effort.	Is the steering effort less than 400 N (41 kgf, 90 lb)?	Go to step **3.**	Perform adjustment.
3	**CHECK STEERING WHEEL EFFORT.** 1)Remove the universal joint. 2)Measure the steering wheel effort.	Is the maximum steering effort less than 2.26 N (0.23 kgf, 0.51 lb)?	Go to step **4.**	Check, adjust and replace if necessary.
4	**CHECK STEERING WHEEL EFFORT.** Measure the steering wheel effort.	Is the difference of steering effort between clockwise and counterclockwise less than 20%?	Go to step **5.**	Check, adjust and replace if necessary.

	Step	Check	Yes	No
5	**CHECK UNIVERSAL JOINT.** Measure the folding torque of the joint (yoke of steering column side). <Ref. to PS-24, INSPECTION, Universal Joint.>	Is the folding torque less than 7.3 N (0.74 kgf, 1.64 lb)?	Go to step **6.**	Replace with new one.
6	**CHECK UNIVERSAL JOINT.** Measure the folding torque of the joint (yoke of gearbox side). <Ref. to PS-24, INSPECTION, Universal Joint.>	Is the folding torque less than 3.8 N (0.39 kgf, 0.86 lb)?	Go to step **7.**	Replace with new one.
7	**CHECK FRONT WHEEL.** Check the front wheel.	Are the front wheels for unsteady revolution or rattling and brake for dragging?	Inspect, readjust and replace if necessary.	Go to step **8.**
8	**CHECK TIE-ROD ENDS.** Remove the tie-rod ends.	Are the tie-rod ends of suspension for unsteady revolution or rattling?	Inspect and replace if necessary.	Go to step **9.**
9	**CHECK BALL JOINT.** Remove the ball joint.	Are the ball joints of suspension for unsteady revolution or rattling?	Inspect and replace if necessary.	Go to step **10.**
10	**CHECK GEARBOX.** Measure the rotating of gearbox. <Ref. to PS-45, TURNING RESISTANCE OF GEARBOX, INSPECTION, Steering Gearbox [LHD MODEL].> or <Ref. to PS-63, TURNING RESISTANCE OF GEARBOX, INSPECTION, Steering Gearbox [RHD MODEL].>	Is the rotating resistance of gear box less than 10.5 N (1.1 kgf, 2.4 lb)? Is the difference between clockwise and counterclockwise 20%?	Go to step **11.**	Readjust the backlash, and if ineffective, replace the faulty parts.
11	**CHECK GEARBOX.** Measure the sliding of gearbox. <Ref. to PS-44, SERVICE LIMIT, INSPECTION, Steering Gearbox [LHD MODEL].> or <Ref. to PS-62, SERVICE LIMIT, INSPECTION, Steering Gearbox [RHD MODEL].>	Is the sliding resistance of gear box less than 400 N (41 kgf, 90 lb)? Is the difference between right and left 20%?	Steering effort is normal.	Readjust the backlash, and if ineffective, replace the faulty parts.

BODY SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)	AC
HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)	AC
AIRBAG SYSTEM	AB
AIRBAG SYSTEM (DIAGNOSTICS)	AB
SEAT BELT SYSTEM	SB
LIGHTING SYSTEM	LI
WIPER AND WASHER SYSTEMS	WW
ENTERTAINMENT	ET
COMMUNICATION SYSTEM	COM
GLASS/WINDOWS/MIRRORS	GW
BODY STRUCTURE	BS
INSTRUMENTATION/DRIVER INFO	IDI
SEATS	SE
SECURITY AND LOCKS	SL
SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)	SR
EXTERIOR/INTERIOR TRIM	EI
EXTERIOR BODY PANELS	EB

FUJI HEAVY INDUSTRIES LTD.

BODY SECTION

CRUISE CONTROL SYSTEM	CC
CRUISE CONTROL SYSTEM (DIAGNOSTICS)	CC
IMMOBILIZER (DIAGNOSTICS)	IM

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

AC

		Page
1.	General Description	2
2.	Refrigerant Pressure with Manifold Gauge Set	20
3.	Refrigerant Recovery Procedure	21
4.	Refrigerant Charging Procedure	22
5.	Refrigerant Leak Check	25
6.	Compressor Oil	26
7.	Blower Motor Unit Assembly	27
8.	Power Transistor (Auto A/C Model)	28
9.	Blower Resistor (Without A/C Model and Manual A/C Model)	29
10.	Heater Core	30
11.	Control Unit	31
12.	Compressor	32
13.	Condenser	34
14.	Heater and Cooling Unit	35
15.	Evaporator	36
16.	Hose and Tube	37
17.	Relay and Fuse	38
18.	Pressure Switch (Dual Switch)	39
19.	Ambient Sensor (Auto A/C Model)	40
20.	Sunload Sensor (Auto A/C Model)	41
21.	Air Vent Grille	42
22.	Heater Duct	43
23.	Heater Vent Duct	44
24.	General Diagnostic Table	45

1. General Description

A: SPECIFICATIONS

1. HEATER SYSTEM

Item			Specifications	Condition
Heating capacity			5.0 kW (4,300 kcal/h, 17,062 BTU/h) or more	• Mode selector switch: HEAT • Temperature control switch: FULL HOT • Temperature difference between hot water and inlet air: 65°C (149°F) • Hot water flow rate: 360 ℓ (95.1 US gal, 79.2 Imp gal)/h
Air flow rate			280 m^3 (9,888 cu ft)/h	Heat mode (FRESH), FULL HOT at 12.5 V
Max air flow rate			450 m^3 (15,892 cu ft)/h	• Temperature control switch: FULL COLD • Blower fan speed: 4th position • Mode selector lever: RECIRC
Heater core size (height × length × width)		LHD model	163.9 × 200 × 25.0 mm (6.45 × 7.87 × 0.984 in)	—
		RHD model	181.5 × 160 × 27 mm (7.15 × 6.30 × 1.06 in)	
Blower motor	Type		Magnet motor 200 W or less	at 12 V
	Fan type and size (diameter × width)		Sirocco fan type 150 × 75 mm (5.91 × 2.95 in)	—

2. A/C SYSTEM

• AUTO A/C MODEL

Item		Specifications
Type of air conditioner		Reheat air-mix type
Cooling capacity		5.1 kW (4,385 kcal/h, 17,402 BTU/h)
Refrigerant		HFC-134a (CH_2FCF_3) [0.5±0.05 kg (0.99±0.11 lb)]
Compressor	Type	Vane rotary, fix volume (CR-14)
	Discharge	144 cm^3 (8.79 cu in)/rev
	Max. permissible speed	7,000 rpm
Magnet clutch	Type	Dry, single-disc type
	Power consumption	47 W
	Type of belt	V-Ribbed 4 PK
	Pulley dia. (effective dia.)	125 mm (4.92 in)
	Pulley ratio	1.064
Condenser	Type	Corrugated fin (Sub cool type)
	Core face area	0.21 m^2 (2.26 sq ft)
	Core thickness	16 mm (0.63 in)
	Radiation area	5.34 m^2 (57.48 sq ft)
Receiver drier	Effective inner capacity	250 cm^3 (15.26 cu in)
Expansion valve	Type	Internal equalizing
Evaporator	Type	Single tank
	Dimensions (W × H × T)	255 × 200 × 48 mm (10 × 7.87 × 1.89 in)
Blower fan	Fan type	Sirocco fan
	Outer diameter × width	150 × 75 mm (5.91 × 2.95 in)
	Power consumption	200 W

Condenser fan (Sub fan)		Motor type	Magnet
		Power consumption	120 W (Turbo model), 70 W (Non-turbo model)
		Fan outer diameter	320 mm (12.6 in)
Radiator fan (Main fan)		Motor type	Magnet
		Power consumption	120 W (Turbo model), 70 W (Non-turbo model)
		Fan outer diameter	320 mm (12.6 in)
Idling speed (A/C ON)		MPFI model	850±100 rpm
Dual switch (Pressure switch)	Low-pressure switch operating pressure	ON → OFF	278±29 kPa (2.83±0.3 kg/cm^2, 40.3±4.2 psi)
		OFF → ON	$287^{+39}/_{-25}$ kPa ($2.9^{+0.4}/_{-0.25}$ kg/cm^2, $42^{+5.7}/_{-3.6}$ psi)
	High-pressure switch operating pressure	ON → OFF	2,800±100 kPa (29±1 kg/cm^2, 406±15 psi)
		DIFF	600±200 kPa (6.12±2 kg/cm^2, 87±29 psi)
Thermo control amplifier working temperature (Evaporator outlet air)			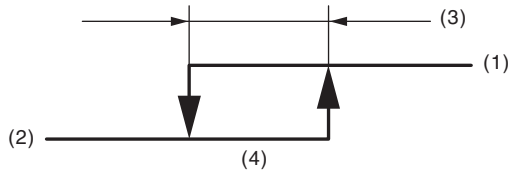 AC-00601 (1) ON (2) OFF (3) 2.5±0.5°C (36.5±0.9°F) (4) 1.5±0.5°C (35±0.9°F)

• MANUAL A/C MODEL

Item		Specifications
Type of air conditioner		Reheat air-mix type
Cooling capacity		5.1 kW (4,385 kcal/h, 17,402 BTU/h)
Refrigerant		HFC-134a (CH_2FCF_3) [0.5±0.05 kg (1.10±0.11 lb)]
Compressor	Type	Vane rotary, fix volume (CR-14)
	Discharge	144 cm^3 (8.79 cu in)/rev
	Max. permissible speed	7,000 rpm
Magnet clutch	Type	Dry, single-disc type
	Power consumption	47 W
	Type of belt	V-Ribbed 4 PK
	Pulley dia. (effective dia.)	125 mm (4.92 in)
	Pulley ratio	1.064
Condenser	Type	Corrugated fin (Sub cool type)
	Core face area	0.21 m^2 (2.26 sq ft)
	Core thickness	16 mm (0.63 in)
	Radiation area	5.34 m^2 (57.48 sq ft)
Receiver drier	Effective inner capacity	250 cm^3 (15.26 cu in)
Expansion valve	Type	Externally equalizing

Evaporator		Type	Single tank
		Dimensions (W × H × T)	255 × 200 × 48 mm (10 × 7.87 × 1.89 in)
Blower fan		Fan type	Sirocco fan
		Outer diameter × width	150 × 75 mm (5.91 × 2.95 in)
		Power consumption	200 W
Condenser fan (Sub fan)		Motor type	Magnet
		Power consumption	120 W (Turbo model), 70 W (Non-turbo model)
		Fan outer diameter	320 mm (12.6 in)
Radiator fan (Main fan)		Motor type	Magnet
		Power consumption	120 W (Turbo model), 70 W (Non-turbo model)
		Fan outer diameter	320 mm (12.6 in)
Idling speed (A/C ON)		MPFI model	850±100 rpm
Dual switch (Pressure switch)	Low-pressure switch operating pressure	ON → OFF	278±29 kPa (2.83±0.3 kg/cm^2, 40.3±4.2 psi)
		OFF → ON	$287^{+39}/_{-25}$ kPa ($2.9^{+0.4}/_{-0.25}$ kg/cm^2, $42^{+5.7}/_{-3.6}$ psi)
	High-pressure switch operating pressure	ON → OFF	2,800±100 kPa (29±1 kg/cm^2, 406±15 psi)
		DIFF	600±200 kPa (6.12±2 kg/cm^2, 87±29 psi)
Thermo control amplifier working temperature (Evaporator outlet air)			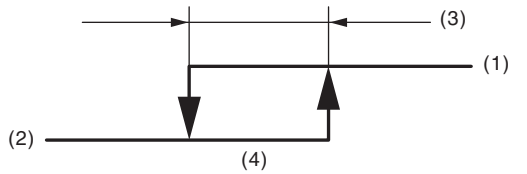 AC-00601 (1) ON (2) OFF (3) 1.5±0.5°C (35±0.9°F) (4) 3.0±0.5°C (37±0.9°F)

B: COMPONENT

1. HEATER COOLING UNIT

• AUTO A/C MODEL

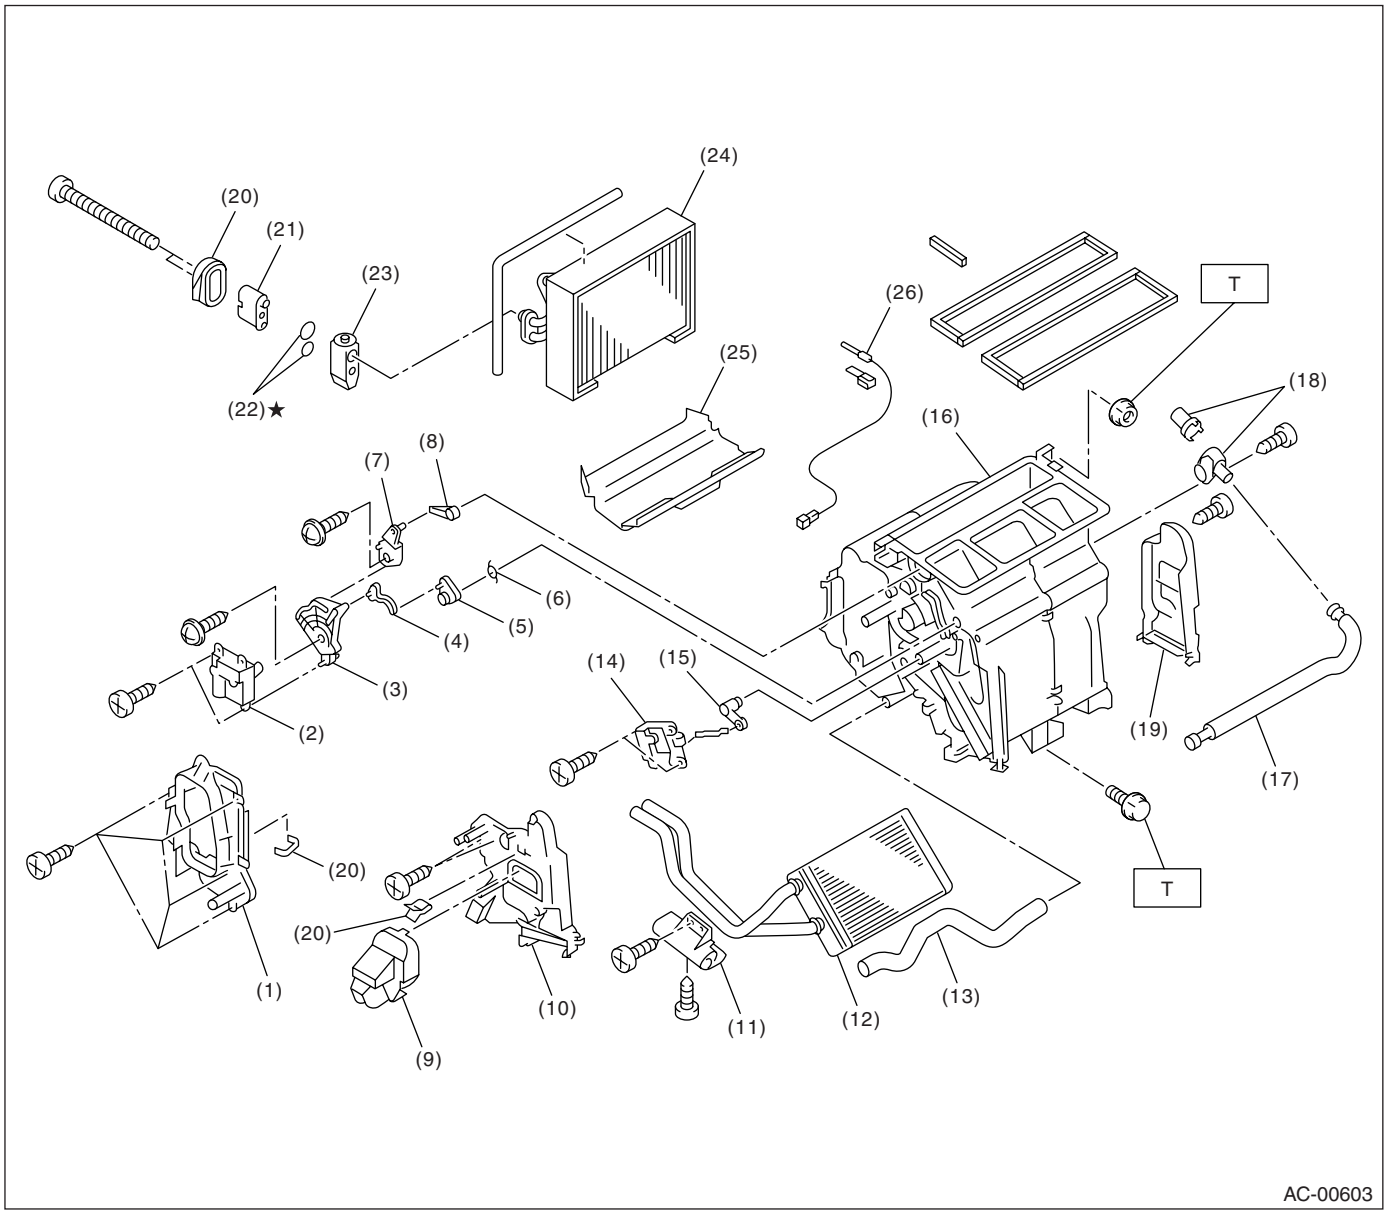

(1) Unit cover
(2) Mode actuator
(3) Side link
(4) Mode actuator lever
(5) Foot lever
(6) Spring
(7) Mode actuator link
(8) Defroster lever
(9) Foot nozzle
(10) Unit duct cover
(11) Heater core clamp
(12) Heater core
(13) Drain hose
(14) Mix actuator
(15) Mix actuator lever
(16) Unit assembly
(17) Aspirator hose
(18) Aspirator
(19) Foot duct
(20) Packing
(21) Cooling unit block
(22) O-ring
(23) Expansion valve
(24) Evaporator
(25) Evaporator cover
(26) Thermistor

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.4)

• MANUAL A/C MODEL

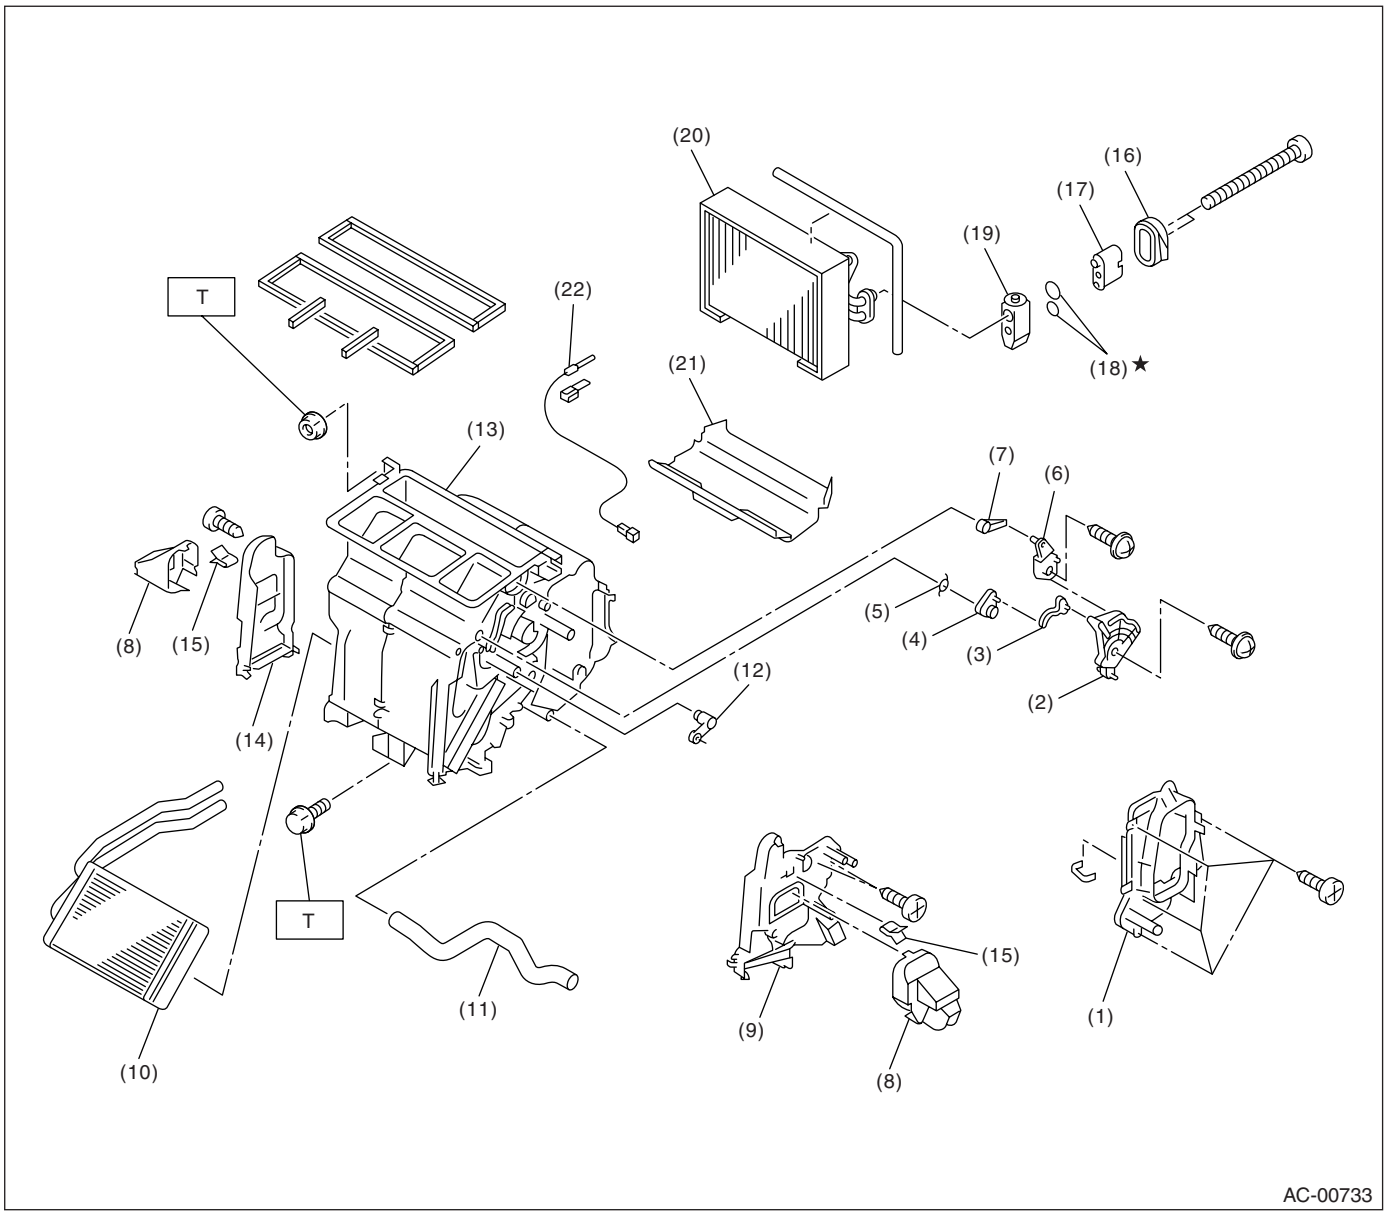

(1) Unit cover
(2) Side link
(3) Mode lever
(4) Foot lever
(5) Spring
(6) Mode link
(7) Defroster lever
(8) Foot nozzle
(9) Unit duct cover
(10) Heater core
(11) Drain hose
(12) Mix lever
(13) Unit assembly
(14) Foot duct
(15) Clip
(16) Packing
(17) Cooling unit block
(18) O-ring
(19) Expansion valve
(20) Evaporator
(21) Evaporator cover
(22) Thermistor

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.4)

2. BLOWER MOTOR UNIT

• AUTO A/C MODEL

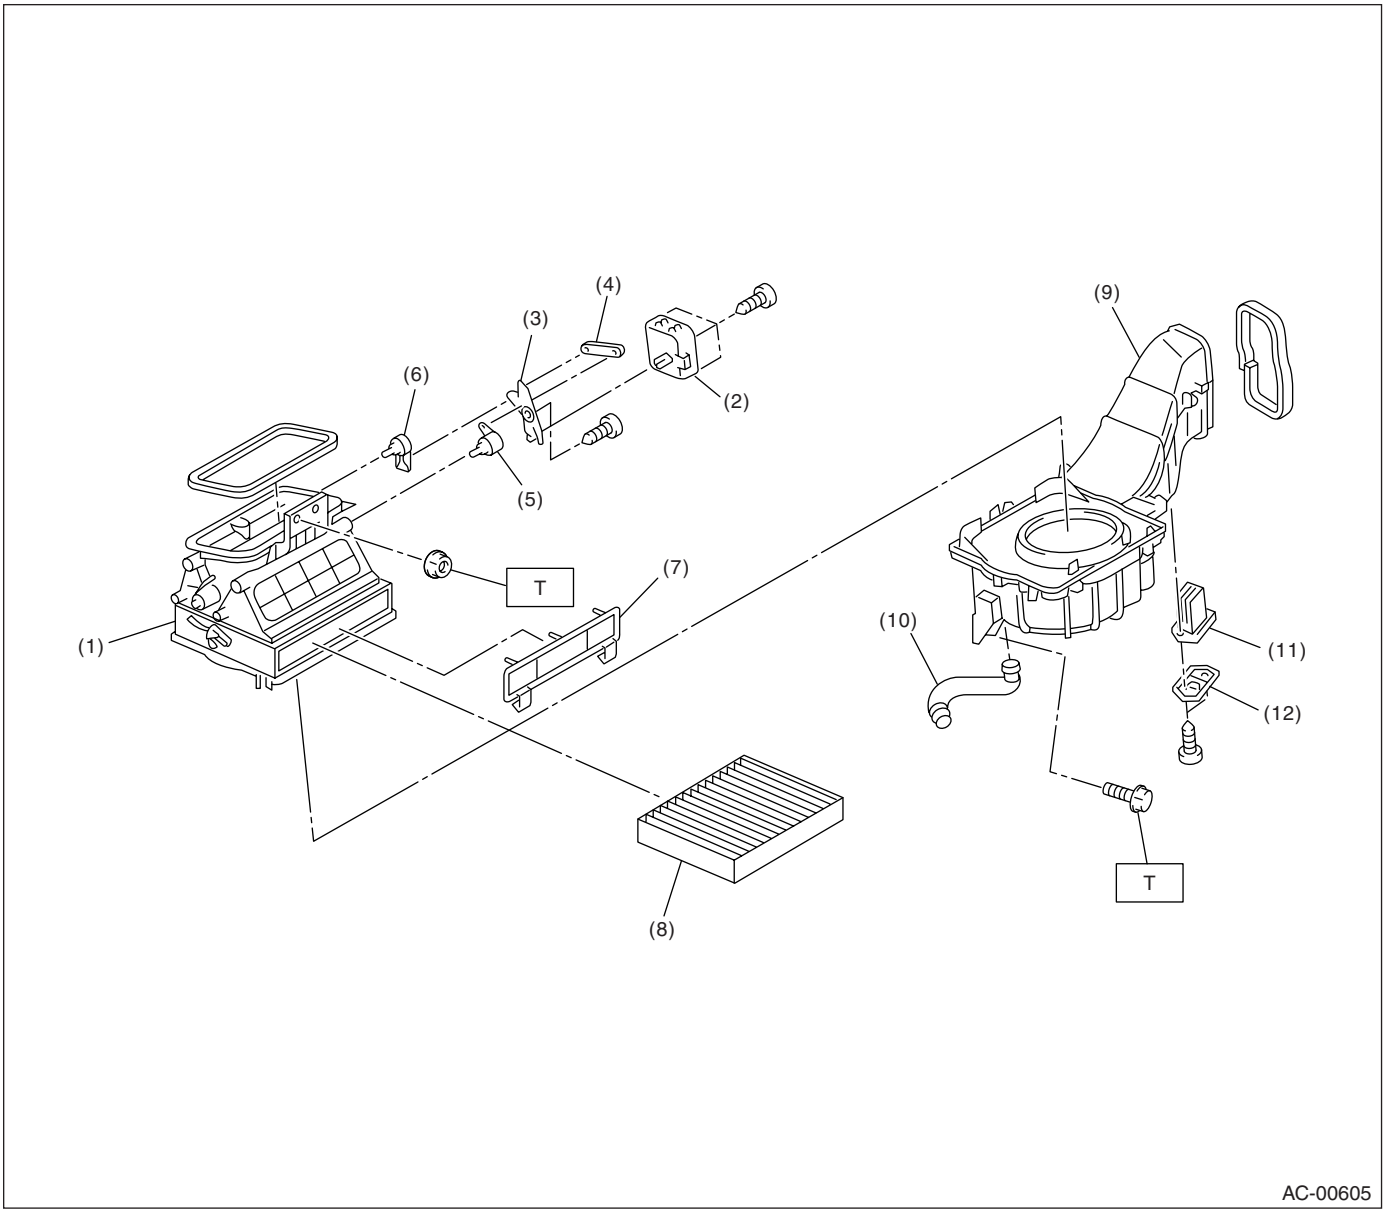

(1) Upper case
(2) Servo motor
(3) Blower link
(4) Blower link lever A
(5) Blower link lever B
(6) Blower link lever C
(7) Filter cover
(8) Filter
(9) Blower motor assembly
(10) Hose
(11) Power transistor
(12) Power transistor cover

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.4)

• WITHOUT A/C MODEL AND MANUAL A/C MODEL

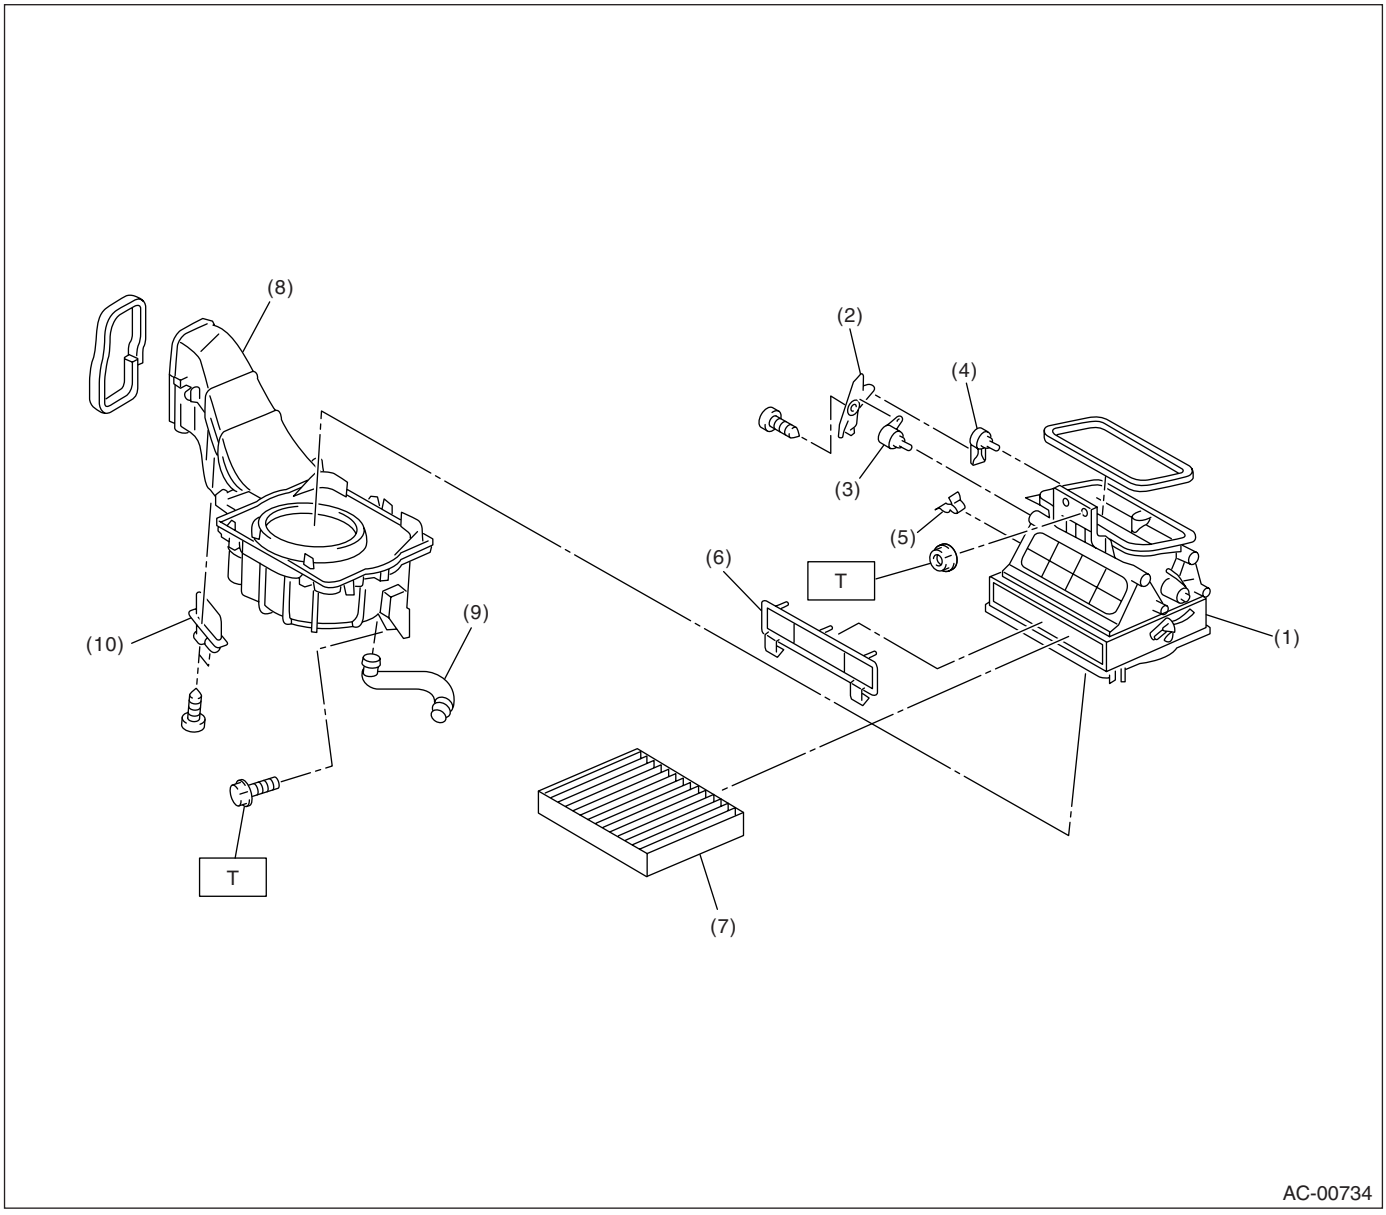

(1) Upper case
(2) Blower link
(3) Blower link lever A
(4) Blower link lever B
(5) Clip
(6) Filter cover
(7) Filter
(8) Blower motor assembly
(9) Hose
(10) Blower resistor

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.4)

3. CONTROL UNIT

• AUTO A/C MODEL

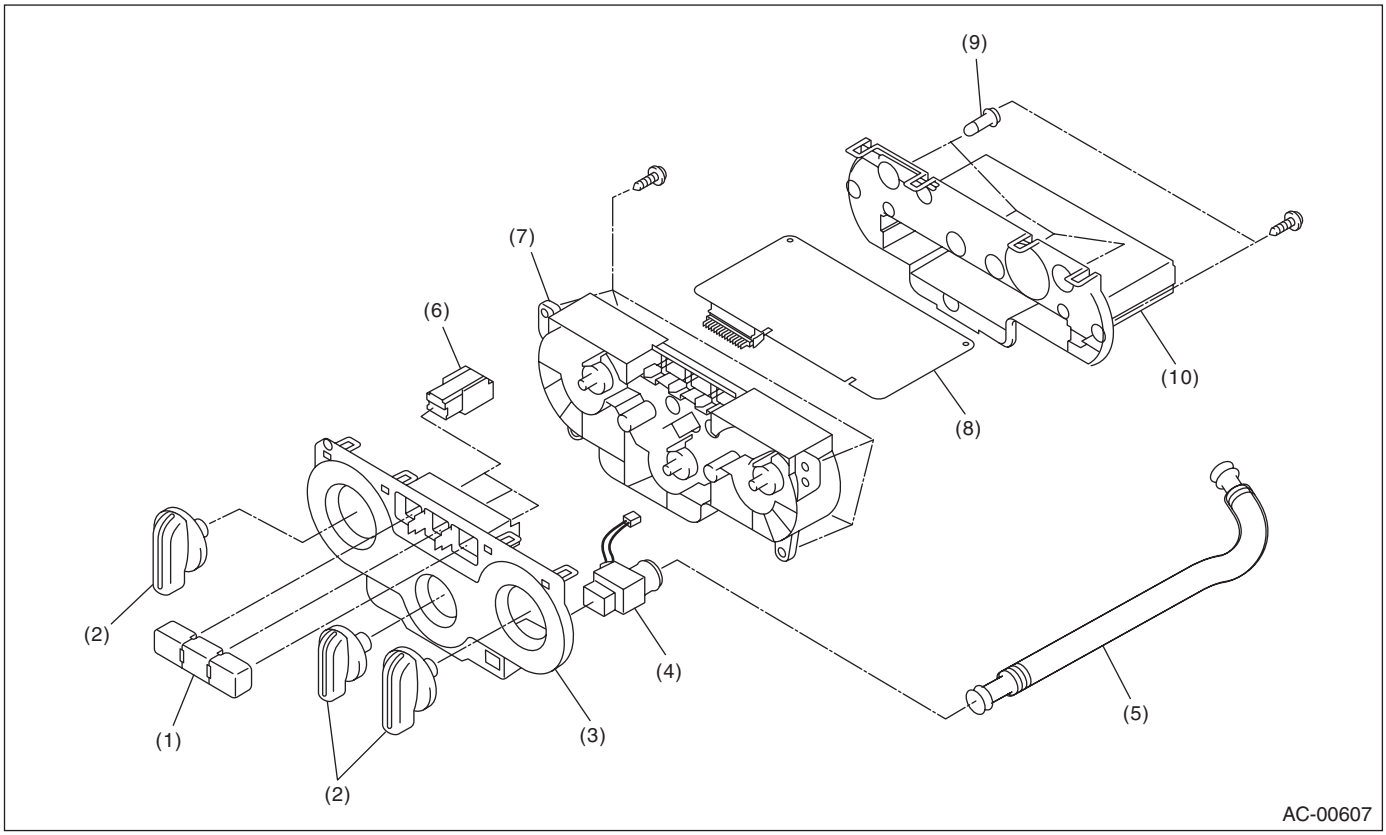

(1) Switch
(2) Control lever
(3) Control panel
(4) In-vehicle sensor
(5) Aspirator hose
(6) Switch assembly
(7) Control base
(8) Electronic control unit
(9) Bulb
(10) Control case

• WITHOUT A/C MODEL AND MANUAL A/C MODEL

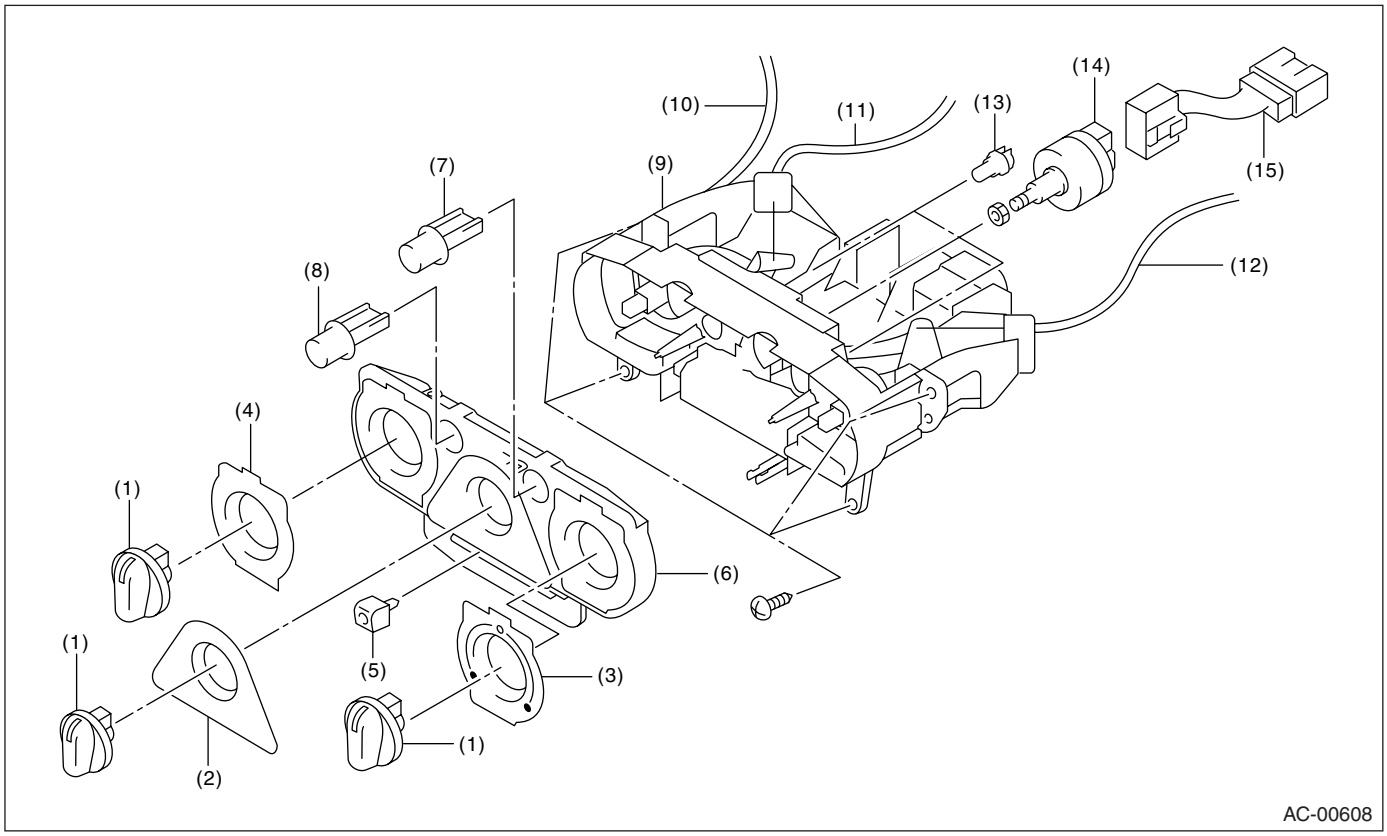

(1)	Dial	(6)	Heater control panel	(11)	Mode cable
(2)	Fan control plate	(7)	A/C switch (with A/C model)	(12)	Temperature cable
(3)	Temperature control plate	(8)	Rear window defogger switch	(13)	Bulb
(4)	Mode control plate	(9)	Heater control base	(14)	Fan switch ASSY
(5)	FRESH/RECIRC switching knob	(10)	Intake cable	(15)	Harness

4. AIR CONDITIONING UNIT

• LHD MODEL

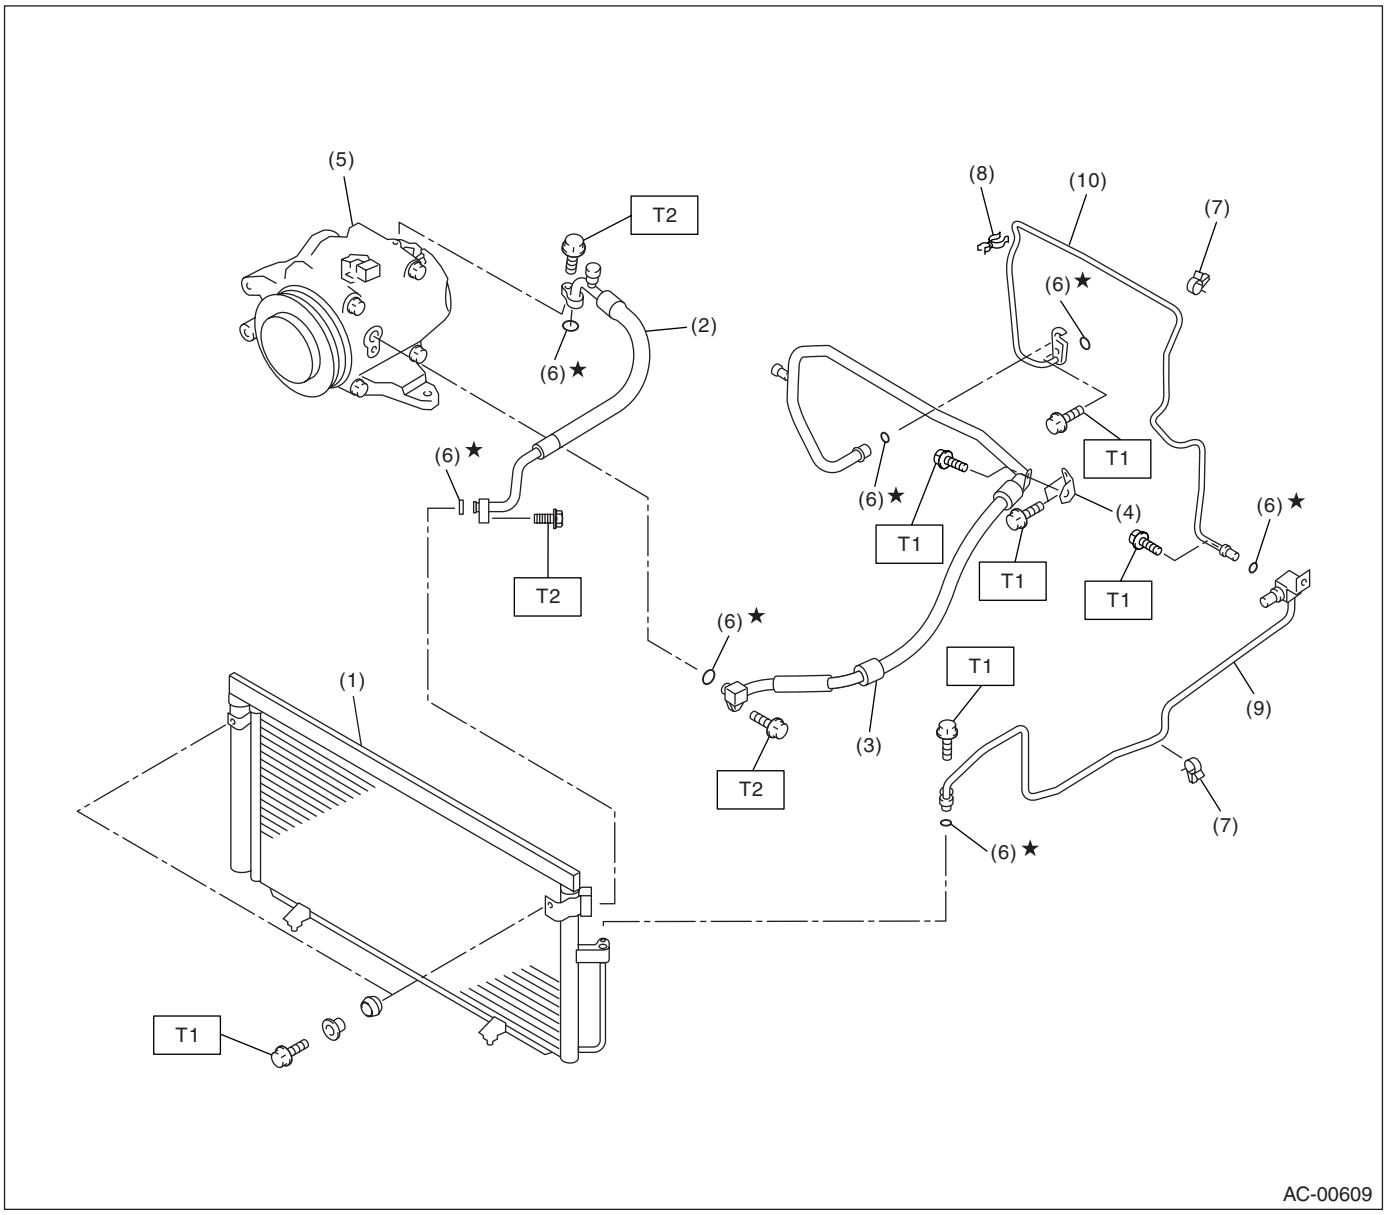

(1)	Condenser	(6)	O-ring
(2)	Hose (High-pressure)	(7)	Clamp A
(3)	Hose (Low-pressure)	(8)	Clamp B
(4)	Bracket	(9)	Tube (To condenser)
(5)	Compressor	(10)	Tube (To evaporator)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.4 (0.75, 5.4)
T2: 15 (1.5, 10.8)

• RHD MODEL

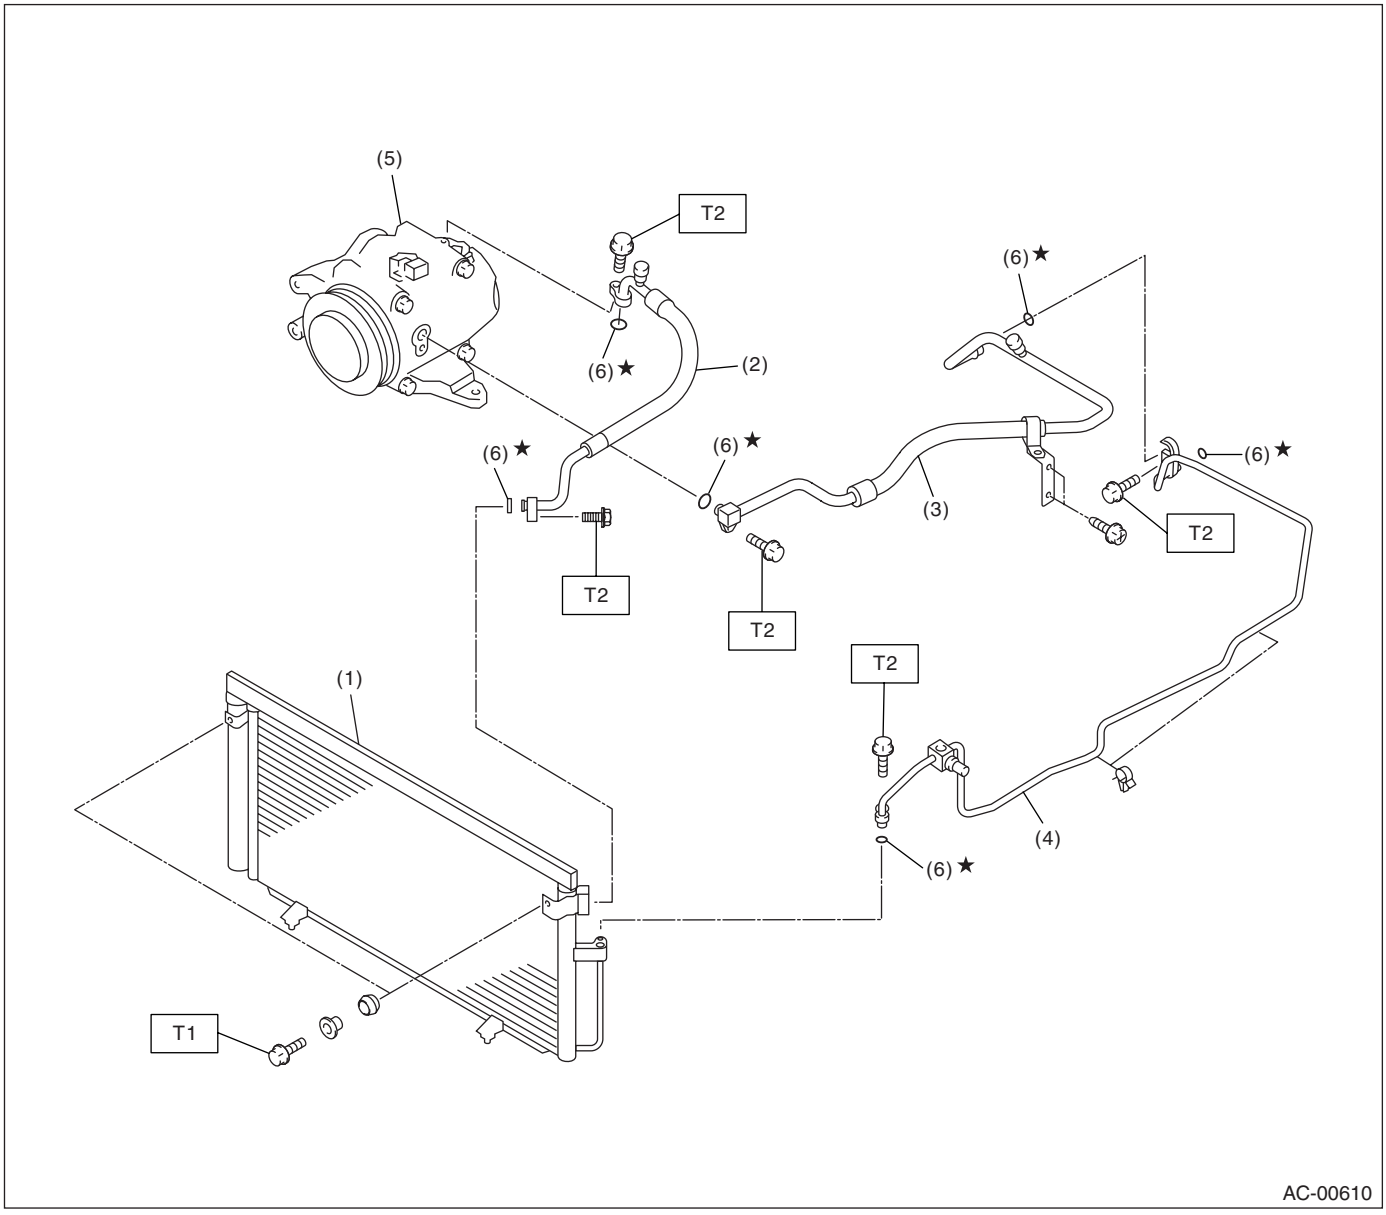

(1)	Condenser	(4)	Tube
(2)	Hose (High-pressure)	(5)	Compressor
(3)	Hose (Low-pressure)	(6)	O-ring

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.4 (0.75, 5.4)
T2: 15 (1.5, 10.8)

5. COMPRESSOR

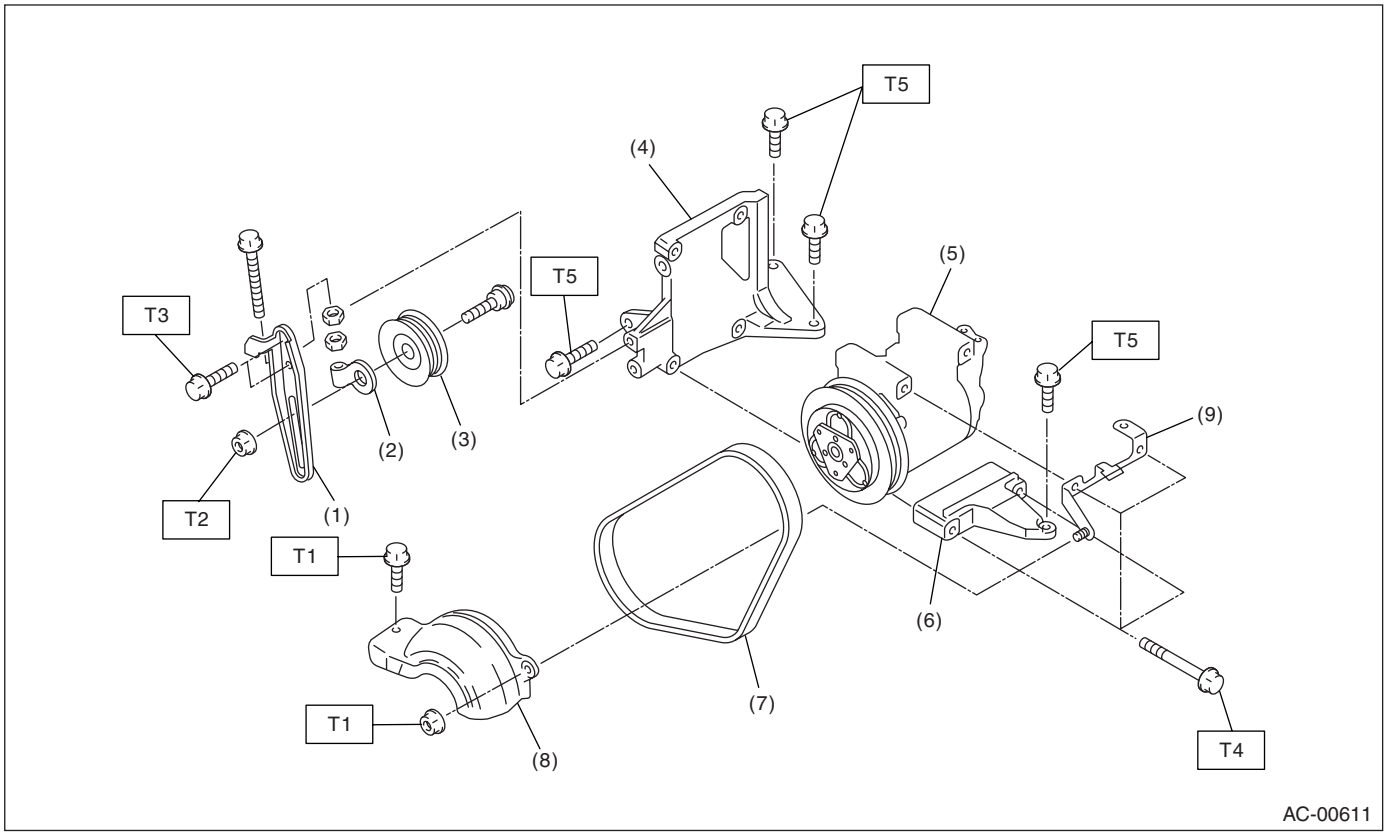

(1) Idler pulley bracket
(2) Idler pulley adjuster
(3) Idler pulley
(4) Compressor upper bracket
(5) Compressor
(6) Compressor lower bracket
(7) V-belt
(8) Compressor belt cover
(9) Compressor belt cover bracket

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.4 (0.75, 5.4)
T2: 22.6 (2.3, 16.6)
T3: 23.0 (2.35, 17.0)
T4: 28.9 (2.95, 21.3)
T5: 35 (3.6, 26)

6. HEATER DUCT

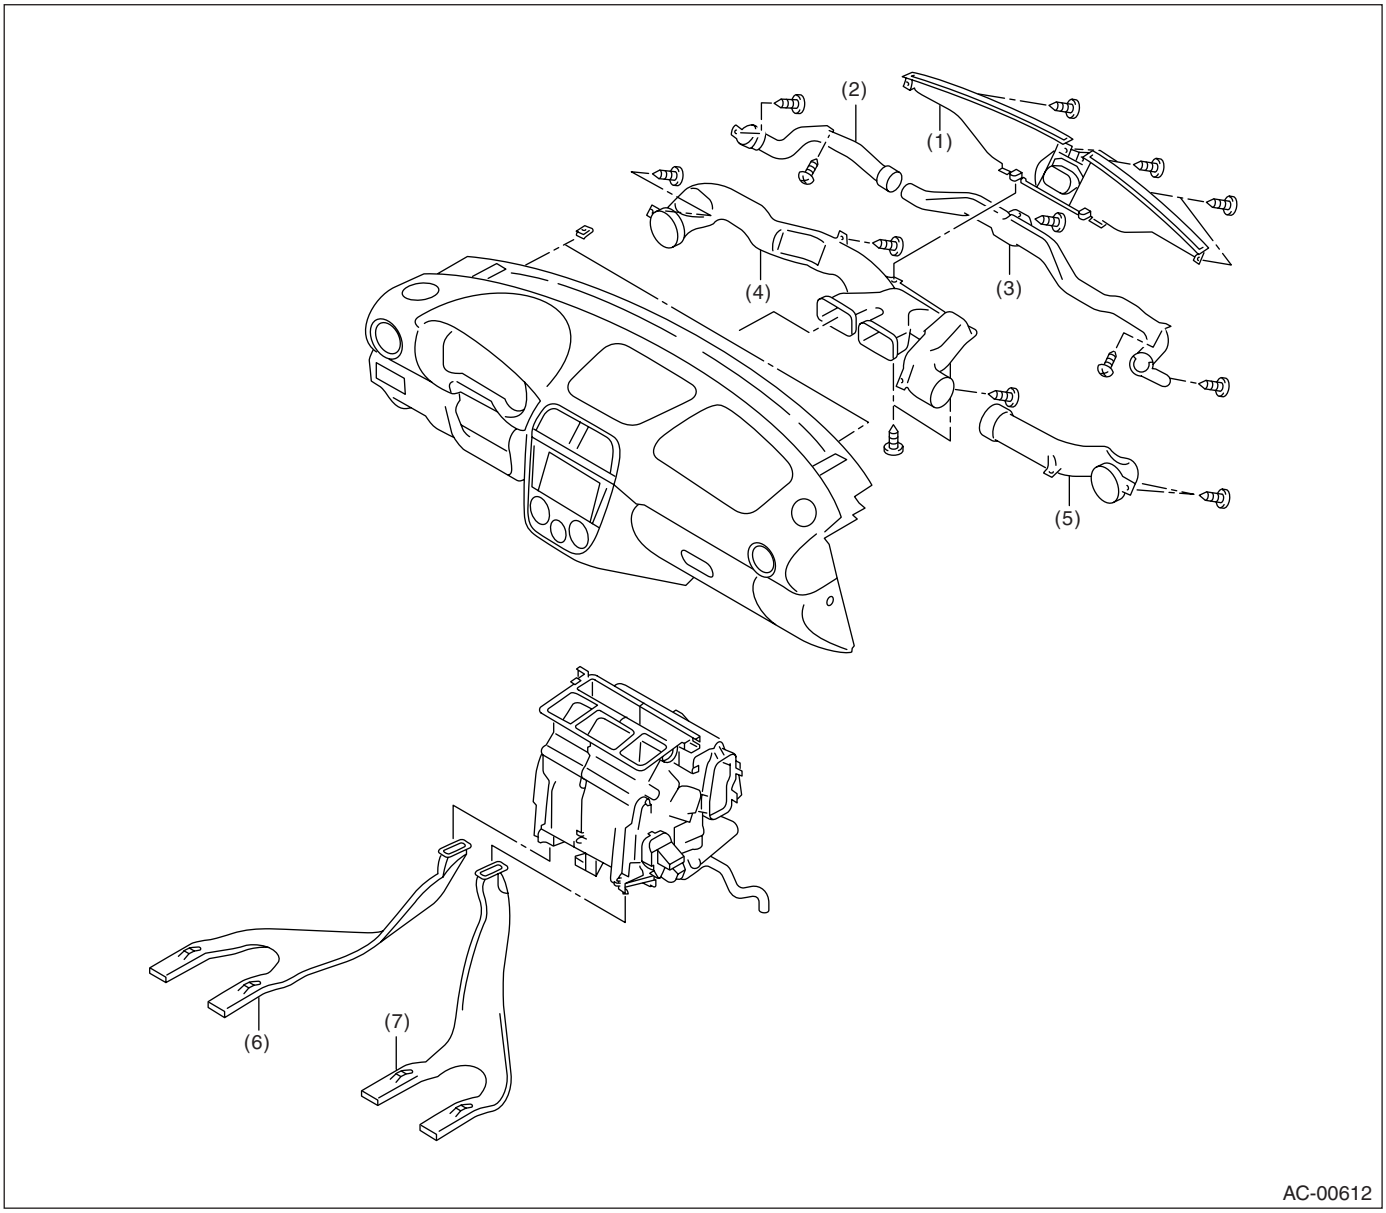

(1) Front defroster nozzle
(2) Side defroster duct (LH)
(3) Side defroster duct (RH)
(4) Side ventilation duct (LH)
(5) Side ventilation duct (RH)
(6) Rear heater duct (LH)
(7) Rear heater duct (RH)

C: CAUTION

1. HFC-134A A/C SYSTEM

• Unlike the old conventional CFC-12 system components, the cooling system components for the HFC-134a system such as the refrigerant and compressor oil are incompatible.
• Vehicles with the HFC-134a system can be identified by the label “A” attached to the vehicle.
Before maintenance, check which A/C system is installed in the vehicle.

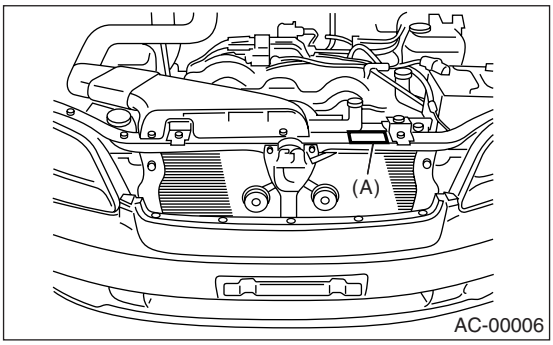

2. COMPRESSOR OIL

• HFC-134a compressor oil has no compatibility with that for R12 system.
• Use only the manufacturer-authorized compressor oil for the HFC-134a system; only use DH-PR.
• Do not mix multiple compressor oils.
If CFC-12 compressor oil is used in a HFC-134a A/C system, the compressor may become stuck due to poor lubrication, or the refrigerant may leak due to swelling of rubber parts.
On the other hand, if HFC-134a compressor oil is used in a CFC-12 A/C system, the durability of the A/C system will be lowered.
• HFC-134a compressor oil is very hygroscopic. When replacing or installing/removing A/C parts, immediately isolate the oil from the atmosphere using a plug or tape. In order to avoid moisture, store the oil in a container with its cap tightly closed.

3. REFRIGERANT

• The CFC-12 refrigerant cannot be used in the HFC-134a A/C system. The HFC-134a refrigerant, also, cannot be used in the CFC-12 A/C system.
• If an incorrect or no refrigerant is used, poor lubrication will result and the compressor itself may be damaged.

4. HANDLING OF REFRIGERANT

• The refrigerant boils at approx. −30°C (−22°F). When handling it, be sure to wear safety goggles and protective gloves. Direct contact of the refrigerant with skin may cause frostbite.
If the refrigerant gets into your eye, avoid rubbing your eyes with your hands. Wash your eye with plenty of water, and receive medical treatment from an eye doctor.
• Do not heat a service can. If a service can is directly heated, or put into boiling water, the inside pressure will become extremely high. This may cause the can to explode. If a service can must be warmed up, use hot water in 40°C (104°F) max.
• Do not drop or impact a service can. (Observe the precautions and operation procedure described on the refrigerant can.)
• When the engine is running, do not open the high-pressure valve of the manifold gauge. The high-pressure gas will back-flow resulting in an explosion of the can.
• Provide good ventilation and do not work in a closed area.
• In order to prevent global warning, avoid releasing HFC-134a into the atmosphere. Using a refrigerant recovery system, discharge and reuse it.

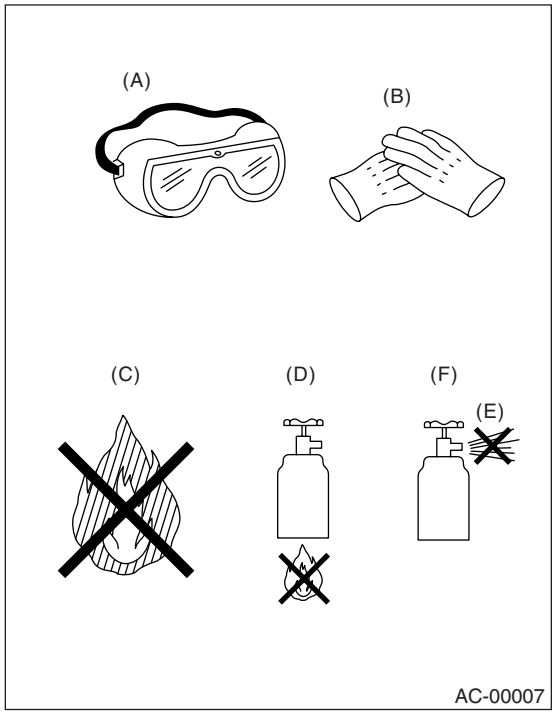

(A) Goggles
(B) Gloves
(C) Avoid open flame
(D) No direct heat on container
(E) Do not discharge
(F) Loosen

5. O-RING CONNECTIONS

- Use new O-rings.
- In order to keep the O-rings free of lint which will cause a refrigerant gas leak, perform operations without gloves and shop cloths.
- Apply the compressor oil to the O-rings to avoid sticking, then install them.
- Use a torque wrench to tighten the O-ring fittings: Over-tightening will damage the O-ring and tube end distortion.
- If the operation is interrupted before completing a pipe connection, recap the tubes, components, and fittings with a plug or tape to prevent contamination from entering.

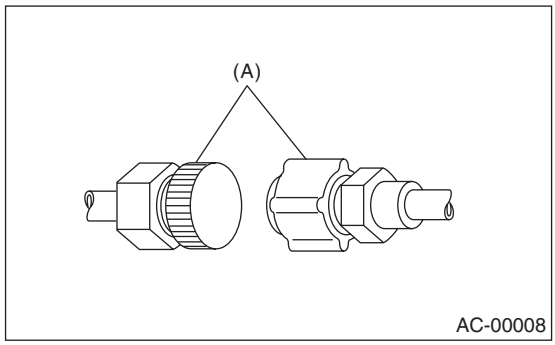

(A) Seal

- Visually check the surfaces and mating surfaces of O-rings, threads, and connecting points. If a failure is found, replace the applicable parts.
- Install the O-rings at right angle to the tube beards.

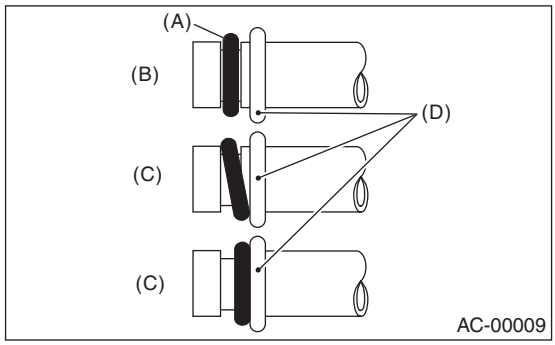

(A) O-ring
(B) OK
(C) NG
(D) Bead

- Use the oil specified in the service manual to lubricate the O-rings.

Apply the oil to the top and sides of the O-rings before installation.

Apply the oil to the area including the O-rings and tube beads.

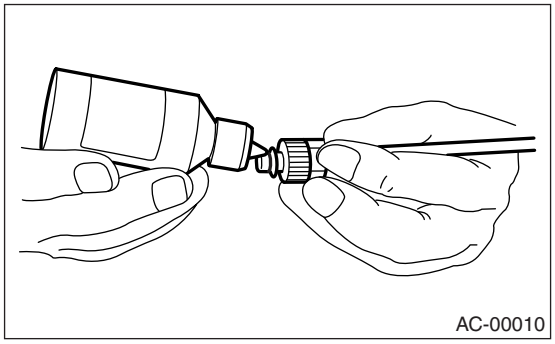

- After tightening, use a clean shop cloth to remove excess oil from the connections and any oil which may have run on the vehicle body or other parts.
- If any leakage is suspected after tightening, do not retighten the connections, Disconnect the connections, remove the O-rings, and check the O-rings, threads, and connections.

D: PREPARATION TOOL

CAUTION:
When working on vehicles with the HFC-134a system, only use HFC-134a specified tools and parts. Do not mix with CFC-12 tools and parts. If HFC-134a and CFC-12 refrigerant or compressor oil is mixed, poor lubrication will result and the compressor itself may be destroyed.
In order to help prevent mixing HFC-134a and CFC-12 parts and liquid, the tool and screw type and the type of service valves used are different. The gas leak detectors for the HFC-134a and CFC-12 systems must also not be interchanged.

	HFC-134a	CFC-12
Tool & screw type	Millimeter size	Inch size
Valve type	Quick joint type	Screw-in type

Description	Tools and Equipment
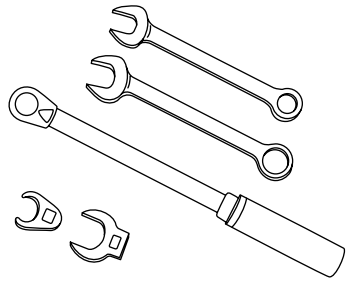 AC-00213	Wrench Various **WRENCHES** will be required to service any A/C system. A 7 to 40 N·m (0.7 to 4.1 kgf-m, 5 to 30 ft-lb) torque wrench with various crowfoot wrenches will be needed. Open end or flare nut wrenches will be needed for back-up on the tube and hose fittings.
 AC-00012	Applicator bottle A small **APPLICATOR BOTTLE** is recommended to apply refrigerant oil to the various parts. They can be obtained at a hardware or drug store.
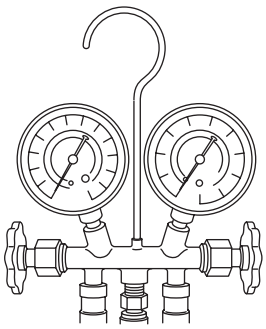 AC-00013	Manifold gauge set A **MANIFOLD GAUGE SET** (with hoses) can be obtained from either a commercial refrigeration supply house or from an auto shop equipment supplier.
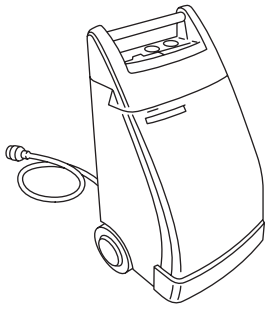 AC-00014	Refrigerant recovery system A **REFRIGERANT RECOVERY SYSTEM** is used for the recovery and reuse of A/C system refrigerant after contaminants and moisture have been removed from the refrigerant.

Description	Tools and Equipment
 AC-00015	Syringe A graduated plastic **SYRINGE** will be needed to add oil back into the system. The syringe can be found at a pharmacy or drug store.
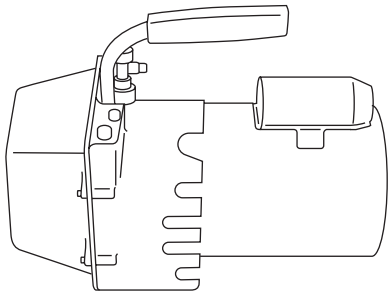 AC-00016	Vacuum pump A **VACUUM PUMP** (in good working condition) is necessary, and may be obtained from either a commercial refrigeration supply house or an automotive equipment supplier.
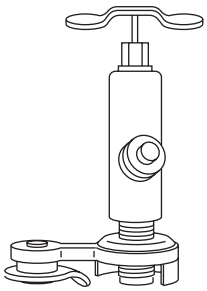 AC-00017	Can tap A **CAN TAP** for the 397 g (14 oz) can is available from an auto supply store.
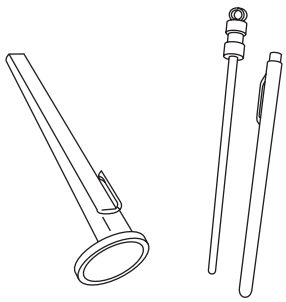 AC-00018	Thermometer Pocket **THERMOMETERS** are available from either industrial hardware store or commercial refrigeration supply houses.

Description	Tools and Equipment
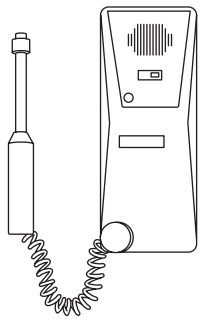 AC-00019	Electronic leak detector An **ELECTRONIC LEAK DETECTOR** can be obtained from either a specialty tool supply or an A/C equipment supplier.
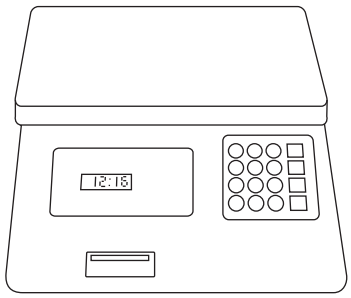 AC-00020	Weight scale A **WEIGHT SCALE** such as an electronic charging scale or a bathroom scale with digital display will be needed if a 13.6 kg (30 lb) refrigerant container is used.

2. Refrigerant Pressure with Manifold Gauge Set

A: OPERATION

1) Place the vehicle in the shade and windless condition.
2) Connect the manifold gauge set.
3) Open the front windows and close all doors.
4) Open the front hood.
5) Increase the engine to 1,500 rpm.
6) Turn ON the A/C switch.
7) Turn the temperature control switch to MAX COOL.
8) Put in RECIRC position.
9) Turn the blower control switch to HI.
10) Read the gauge.

Standard:
Low pressure: 127 — 196 kPa (1.3 — 2.0 kg/cm^2, 18 — 28 psi)
High pressure: 1,471 — 1,667 kPa (15 — 17 kg/cm^2, 213 — 242 psi)
Ambient temperature: 30 — 35 °C (86 — 95 °F)

B: INSPECTION

Symptom	Probable cause	Repair order
High-pressure side is unusually high.	• Defective condenser fan motor • Clogged condenser fin • Too much refrigerant • Air inside the system • Defective receiver dryer	• Replace the fan motor. • Clean the condenser fin. • Discharge refrigerant. • Replace the receiver dryer. • After revacuating the receiver dryer, charge appropriate amount of refrigerant.
High-pressure side is unusually low.	• Defective compressor • Not enough refrigerant • Clogged expansion valve • Expansion valve frozen temporarily by moisture	• Replace the compressor. • Check for leaks. • Replace the expansion valve. • Fully evacuate the expansion valve.
Low-pressure side is unusually high.	• Defective compressor • Defective expansion valve • Too much refrigerant	• Replace the compressor. • Replace the expansion valve. • Discharge refrigerant.
Low-pressure side is unusually low.	• Not enough refrigerant • Clogged expansion valve • Expansion valve frozen temporarily by moisture • Saturated receiver dryer	• Check for leaks. • Replace the expansion valve. • Replace the receiver dryer.

3. Refrigerant Recovery Procedure

A: OPERATION

CAUTION:
• During operation, be sure to wear safety goggles and protective gloves.
• Connect the refrigerant recovery system with the manifold gauge set to discharge the refrigerant from the A/C system and reuse it.
• When reusing the discharged refrigerant, keep service cans on hand. Because the discharge rate with the recovery system is approx. 90%, service cans are necessary to charge the refrigerant.
• Follow the detailed operation procedure described in the operation manual attached to the refrigerant recovery system.

1) Perform the compressor oil return operation. <Ref. to AC-26, OPERATION, Compressor Oil.>
2) Stop the engine.
3) Make sure the valves on low-/high-pressure sides of manifold gauge set are fully closed.

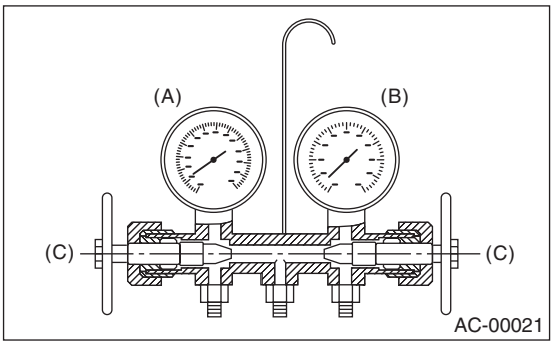

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close

4) Install the low-/high-pressure hoses to the service ports on the low-/high-pressure sides of the vehicle respectively.

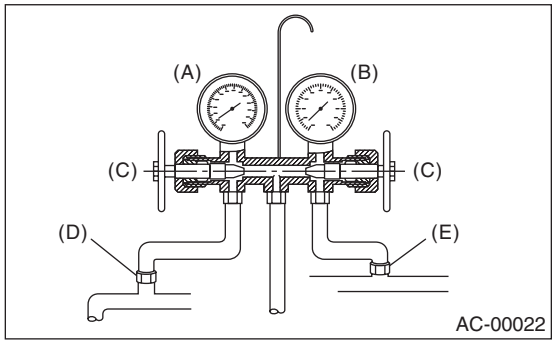

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close
(D) Low-pressure side service port
(E) High-pressure side service port

5) Connect the center hose to the refrigerant recovery system.
6) Follow the operation manual to activate the refrigerant recovery system.

4. Refrigerant Charging Procedure

A: OPERATION

CAUTION:
• During operation, be sure to wear safety goggles and protective gloves.
• Before charging the refrigerant, evacuate the system to remove small amounts of moisture remaining in the system.
The moisture in the system can be completely evacuated only under the minimum vacuum level. The minimum vacuum level affects the temperature in the system.
• The list below shows the vacuum values necessary to boil water in various temperature. In addition, the vacuum levels indicated on the gauge are approx. 3.3 kPa (25 mmHg, 0.98 inHg) lower than those measured at 304.8 m (1,000 ft) above sea level.

Vacuum level required to boil water (at sea level)	
Temperature	Vacuum
1.7°C (35°F)	100.9 kPa (757 mmHg, 29.8 inHg)
7.2°C (45°F)	100.5 kPa (754 mmHg, 29.7 inHg)
12.8°C (55°F)	99.8 kPa (749 mmHg, 29.5 inHg)
18.3°C (65°F)	99.2 kPa (744 mmHg, 29.3 inHg)
23.9°C (75°F)	98.5 kPa (739 mmHg, 29.1 inHg)
29.4°C (85°F)	97.2 kPa (729 mmHg, 28.7 inHg)
35°C (95°F)	95.8 kPa (719 mmHg, 28.3 inHg)

1) Close the valves on low-/high-pressure sides of the manifold gauge.

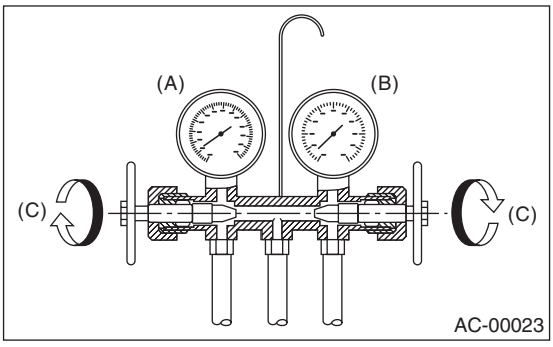

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close

2) Install the low-/high-pressure hoses to the corresponding service ports on the vehicle respectively.
3) Connect the center hose of the manifold gauge set with the vacuum pump.
4) Carefully open the valves on the low-/high-pressure sides to activate the vacuum pump.

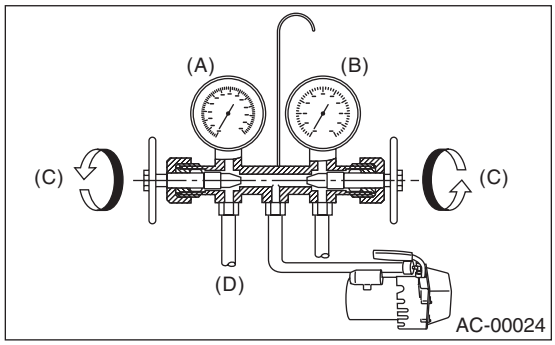

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Slowly open
(D) Vacuum pump turn on

5) After the low-pressure gauge reaches 100.0 kPa (750 mmHg, 29.5 inHg) or higher, evacuate the system for approx. 15 minutes (Continue evacuation).

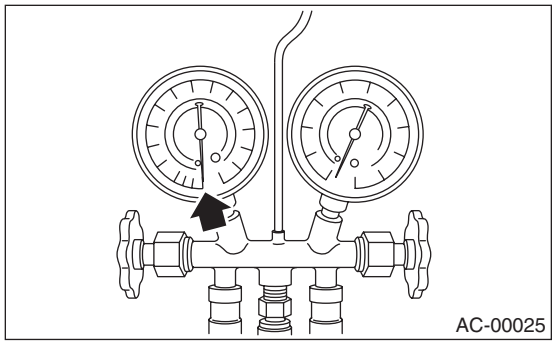

6) After 15 minutes of evacuation, if the reading shows 100.0 kPa (750 mmHg, 29.5 inHg) or higher, close the valves on the both sides to stop the vacuum pump.

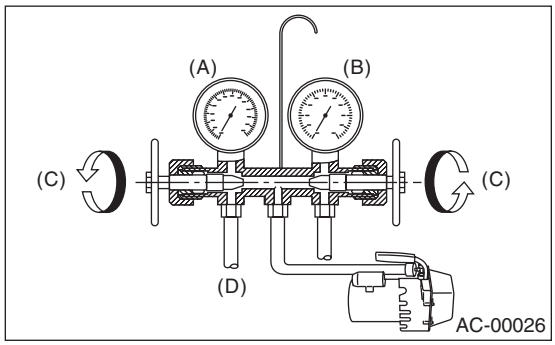

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close
(D) Vacuum pump turn off

7) Note the low-pressure gauge reading.

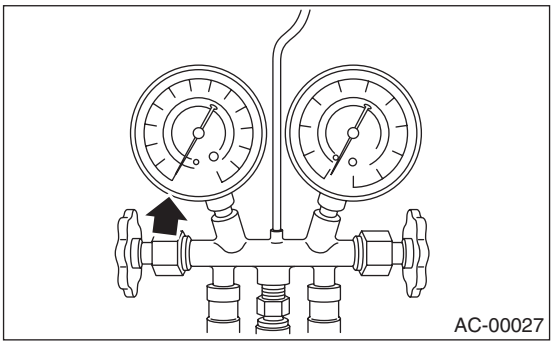

8) Leave it at least 5 minutes, and then check the low-pressure gauge reading for any changes.
When a gauge indicator shows near to zero point, this is a sign of leakage. Check pipe connector points, repair them, make sure there is no leakage by air bleeding.
9) Following the can tap operation manual instructions, install it to the refrigerant can.

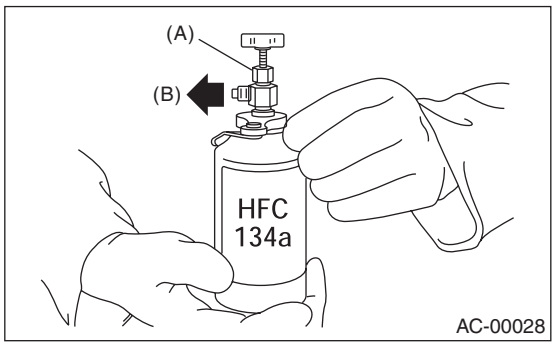

(A) Tap valve
(B) Center manifold hose

10) Disconnect the center manifold hose from the vacuum pump, and connect the hose to the tap valve.
11) When a 13.6 kg (30 lb) refrigerant container is used, measure the refrigerant amount in use using a weighting scale.

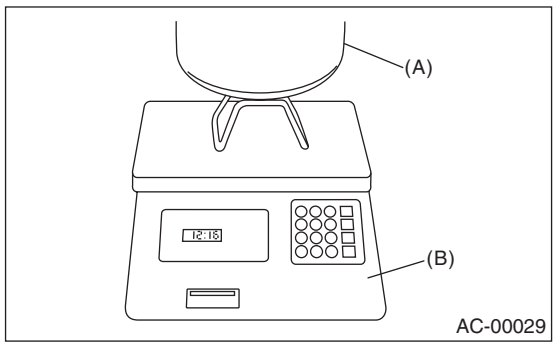

(A) Refrigerant container (HFC-134a)
(B) Weight scale

12) Confirm that all the 3 hoses are tightly connected to the manifold gauge set.

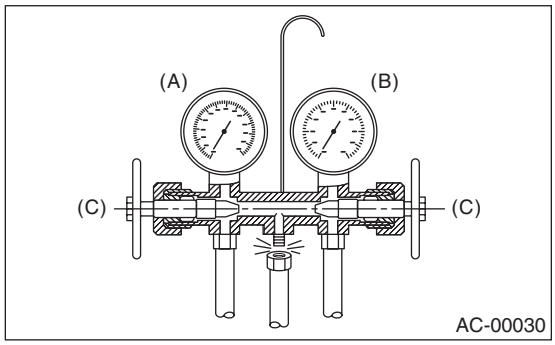

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close

13) Open the valve on the HFC-134a source.
14) Loosen the center hose connection on the manifold gauge set (if applicable, press a purge valve on the manifold gauge set) only for a couple of seconds to allow the air in the center hose to escape by the refrigerant.
15) Carefully open the high-pressure valve with the engine stopping.

CAUTION:
Do not open the low-pressure valve.

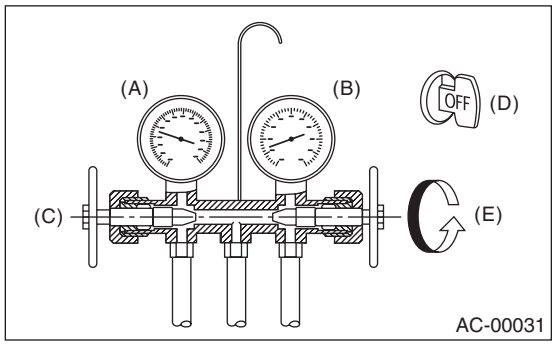

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close
(D) Ignition switch OFF
(E) Slowly open

CAUTION:
Never run the engine during charging from the high-pressure side.

16) Close the high-pressure valve when the low-pressure gauge reaches 98 kPa (1 kg/cm^2, 14 psi).
Using a leak tester, check the system for leaks.
If any leakage is found after the refrigerant recovery is completed, repair the applicable area.

17) After confirming that there are no leaks with the leak test, charge the required amount of refrigerant.

CAUTION:
Never run the engine during charging from the high-pressure side.

18) Close the high-pressure valve when;
• the readings of low-/high-pressure gauges become almost equal, after the charging speed is reduced,
• the HFC-134a source becomes empty, or the system is filled with the gas.

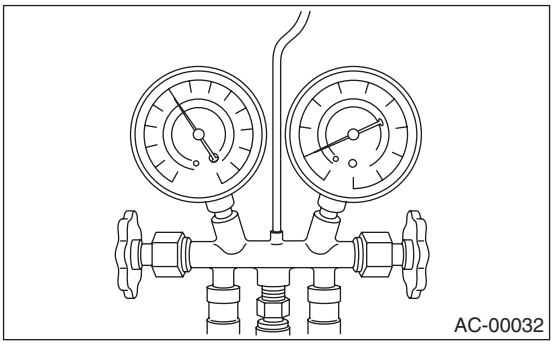

19) If the HFC-134a source is empty, close the high-pressure valve, close the valve on the can tap, and replace the HFC-134a source with a new one to restart the operation.

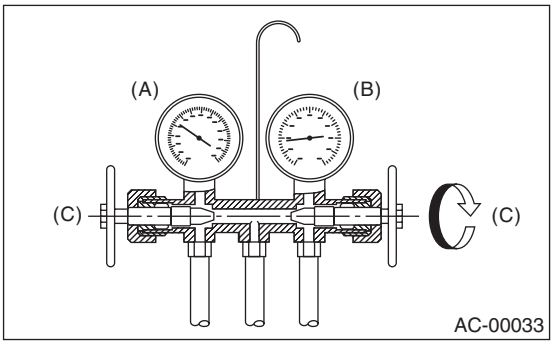

(A) Low-pressure gauge (Compound pressure gauge)
(B) High-pressure gauge
(C) Close

20) Confirm that both the low-/high-pressure valves can be closed. Start the engine with the A/C switch OFF.
21) Quickly repeat ON-OFF cycles a few times to prevent initial compressor damage.
22) Set up the vehicle to the following status:
• A/C switch ON
• Engine running at 1,500 rpm
• Blower speed setting to “HI”
• Temperature setting to “MAX COOL”
• Air inlet setting to “RECIRC”
• Windows open

23) While reading the low-pressure gauge, carefully open the low-pressure valve with the refrigerant source connected and the service hose purged.

CAUTION:
Never open the high-pressure valve with the engine running. Doing so may result in a reflow of high-pressure gas and refrigerant can’s explosion.

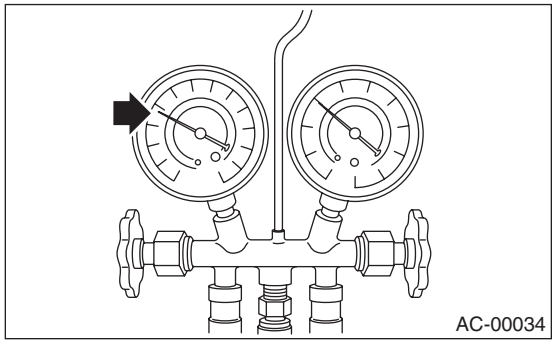

24) Adjust the refrigerant flow to maintain the pressure on the low-pressure side at 276 kPa (2.81 kg/cm^2, 40 psi) max.
25) After the system is fully charged, close the low-pressure valve.
26) Close the valve on the refrigerant source.

Refrigerant amount		
Refrigerant	Minimum	Maximum
HFC-134a	450 g (0.99 lb)	550 g (1.21 lb)

27) Disconnect the hose from the service port, and install the service port cap.

5. Refrigerant Leak Check

A: INSPECTION

1) Operate the A/C system for approx. 10 minutes, and confirm that the high-pressure side shows at least 690 kPa (7.03 kg/cm^2, 100 psi). Then stop the engine to start the leak test.
2) Starting from the connection between the high-pressure pipe and evaporator, check the system for leaks along the high-pressure side through the compressor. The following items must be checked thoroughly.
3) Check the joint and seam between the pressure switch (dual pressure switch) and high-pressure pipe.
4) Check the connections between the condenser and pipes, and welded joints on the condenser.
The leak tester may detect the oil on the condenser fins as a leak.
5) Check the joint between the compressor and hoses.
6) Check the machined area of compressor and other joints on the compressor.
7) Check the compressor shaft seal at the area near the center of compressor clutch pulley.
Some shaft seals show a slight amount of leakage about 3 g (0.1 oz) per year. This is not a problem.
8) Starting from the connection between the low-pressure pipe and evaporator, check the system for leakage along the low-pressure side through the compressor. The following items must be checked thoroughly.
- Connection between two parts
- Connection between the pipe and plate

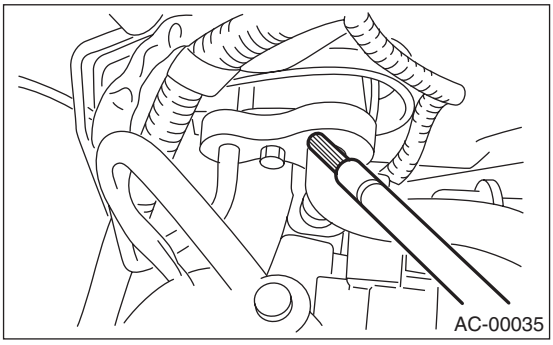
AC-00035

9) Visually check the rubber area of the flexible hose for cracks.
Check the entire length of the flexible hose, especially the connection with the metal hose end.

CAUTION:
Carefully check the external surface of hoses and tubes at approx. 25 mm (0.98 in) per second.

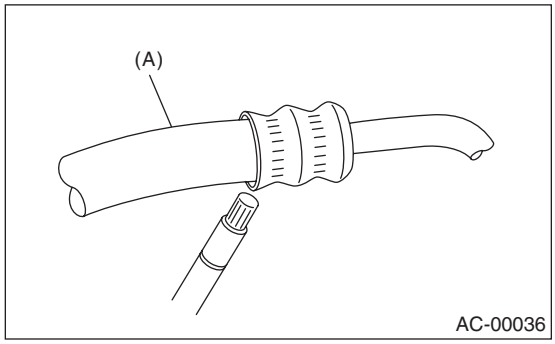

AC-00036

(A) Flexible hose

10) Disconnect the drain hose from the heater case, and check the hose end for at least 10 seconds.
After the test is finished, reconnect the drain hose.
11) Turn the ignition key to ON position, and run the blower at high speed for 1 minute. Stop the blower to check the ventilation grille on the instrument panel. While moving the tester closer to the grille, run the blower for 1 or 2 seconds, then stop it. Check the grille at that point for at least 10 seconds.

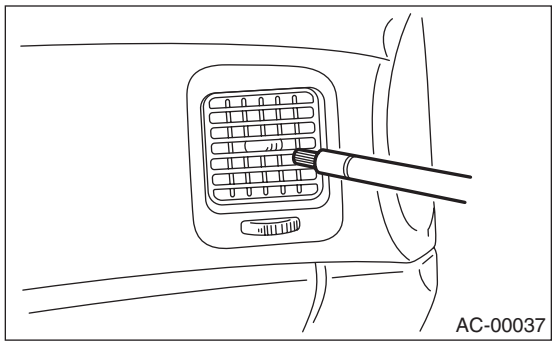
AC-00037

12) Check the valve in the service port.
13) Visually check the rubber seal in service port cap.

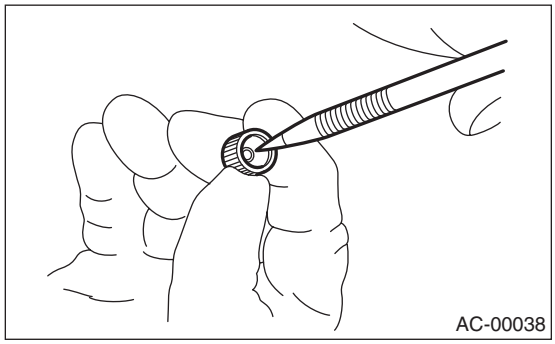
AC-00038

6. Compressor Oil

A: OPERATION

NOTE:
Before making repairs, conduct the oil return operation to return the compressor oil in circulation with the refrigerant to compressor.

1) Increase engine to 1,500 rpm.
2) Turn ON the A/C switch.
3) Turn the temperature control switch to MAX COOL.
4) Put in RECIRC position.
5) Turn the blower control switch to HI.
6) Leave in this condition for 10 minutes.

B: REPLACEMENT

NOTE:
• If a component is replaced, add an appropriate amount of compressor oil.
• When replacing the compressor, the new compressor will already have the specified amount of oil in it. Install the new compressor after removing the same amount of oil that is remaining in the compressor removed.

Replacement parts	Amount of oil replenishment
Evaporator	114 m ℓ (3.9 US fl oz, 4.0 Imp fl oz)
Condenser	7 m ℓ (0.24 US fl oz, 0.25 Imp fl oz)
Hose	1 m ℓ (0.03 US fl oz, 0.04 Imp fl oz)

7. Blower Motor Unit Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
3) Loosen the nut to remove the support beam stay.

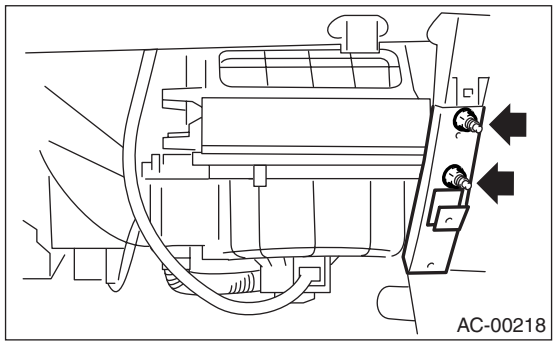

4) Disconnect the blower motor connector.

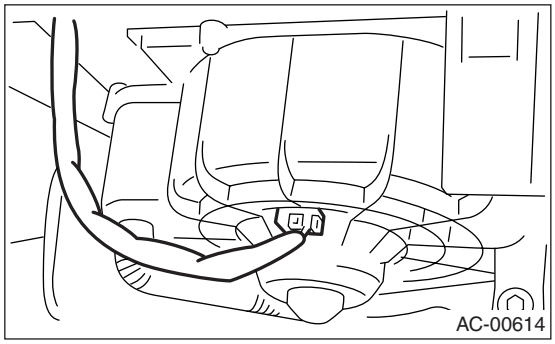

5) Disconnect the power transistor or blower resistor connector.

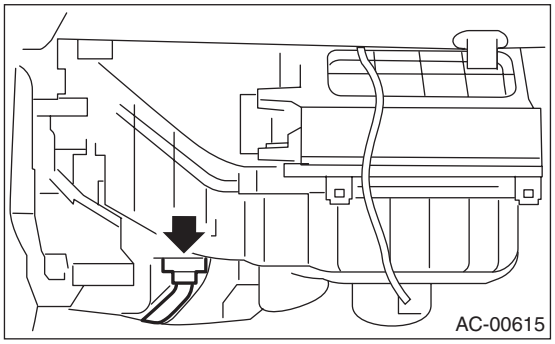

6) Loosen the bolt and nut to remove the blower motor unit assembly.

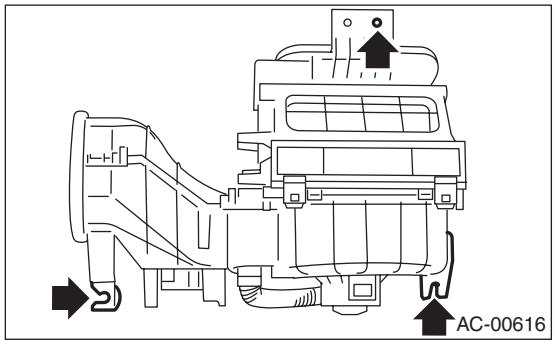

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.> and <Ref. to AC-7, BLOWER MOTOR UNIT, COMPONENT, General Description.>

C: INSPECTION

Connect the motor connector terminal 1 from the battery to the positive (+) lead and terminal 2 to the negative (–) lead. Make sure the motor runs smoothly.

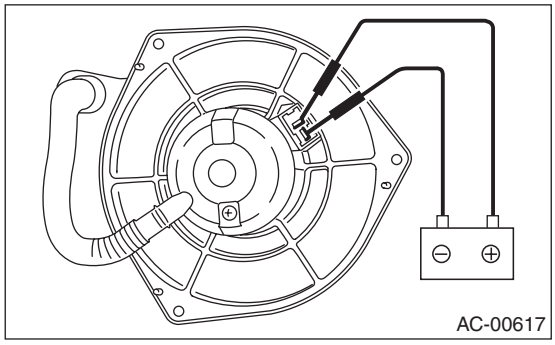

8. Power Transistor (Auto A/C Model)

A: REMOVAL

1) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
2) Disconnect the power transistor connector.
3) Loosen the two screws to remove the power transistor.

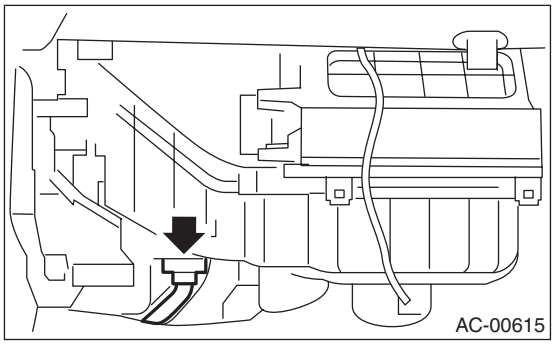

B: INSTALLATION

Install in the reverse order of removal.

9. Blower Resistor (Without A/C Model and Manual A/C Model)

A: REMOVAL

1) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
2) Disconnect the blower resistor connector.
3) Loosen the two screws to remove the blower resistor.

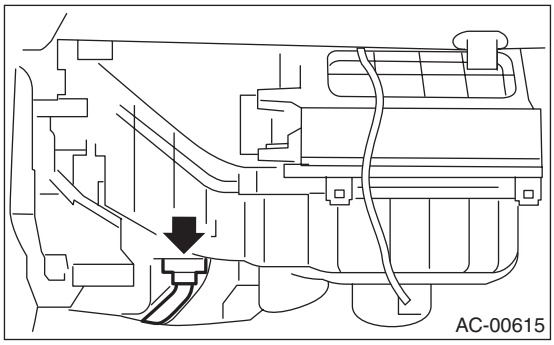

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

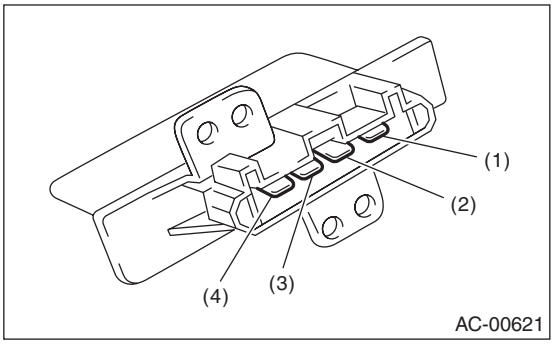

Measure the blower resistor resistance.

Terminal No.	Standard
3 and 1	Approx. 0.51 Ω
3 and 2	Approx. 2.70 Ω
3 and 4	Approx. 1.43 Ω

If NG, replace the blower resistor.

10.Heater Core

A: REMOVAL

1) Remove the heater and cooling unit. <Ref. to AC-35, REMOVAL, Heater and Cooling Unit.>
2) Loosen the screws to remove the heater core cover.

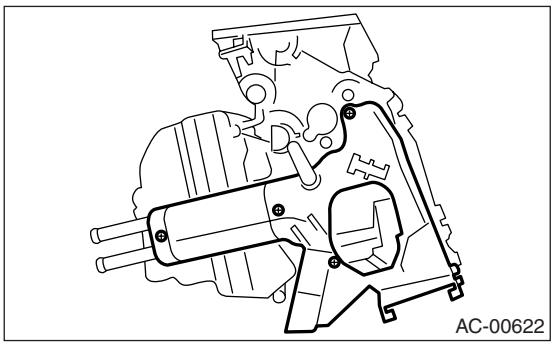
AC-00622

3) Remove the heater core.

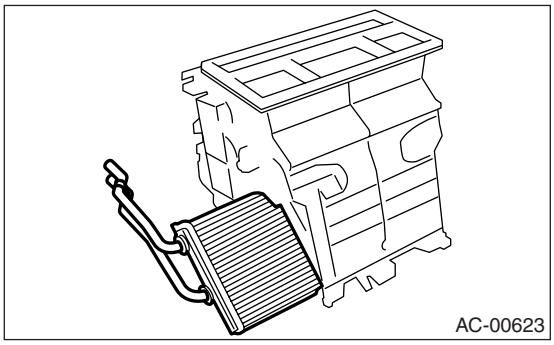
AC-00623

B: INSTALLATION

Install in the reverse order of removal.

11.Control Unit

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the center console panel.
3) Disconnect the connector and aspirator hose (A).

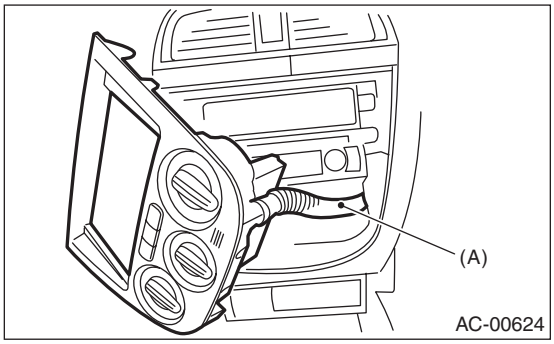

B: INSTALLATION

Install in the reverse order of removal.

12.Compressor

A: INSPECTION

1. MAGNETIC CLUTCH CLEARANCE

1) Check the clearance of the entire circumference around the drive plate and pulley.

Standard:
0.45±0.15 mm (0.0177±0.0059 in)

2. MAGNETIC CLUTCH OPERATION

1) Disconnect the compressor connector.
2) Connect the battery positive (+) terminal to the terminal of compressor connector.

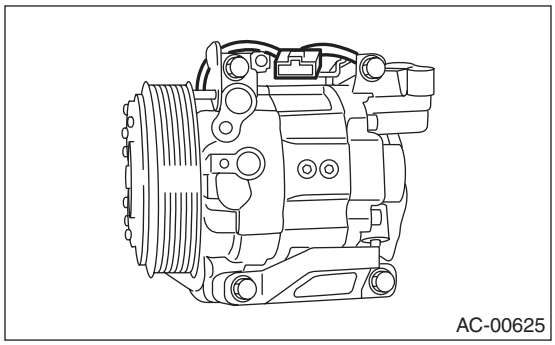
AC-00625

3) Make sure the magnet clutch engages.
If NG, replace the compressor.

B: REMOVAL

1) Perform the compressor oil return operation. <Ref. to AC-26, OPERATION, Compressor Oil.>
2) Turn the A/C switch OFF and stop the engine.
3) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-21, OPERATION, Refrigerant Recovery Procedure.>
4) Disconnect the ground cable from battery.
5) Remove the V-belt. <Ref. to ME(H4SO)-44, REMOVAL, V-belt.> or <Ref. to ME(H4DOTC)-55, REMOVAL, V-belt.>
6) Remove the generator. <Ref. to SC(H4SO)-14, REMOVAL, Generator.>
7) Remove the low-pressure hose and high-pressure hose.

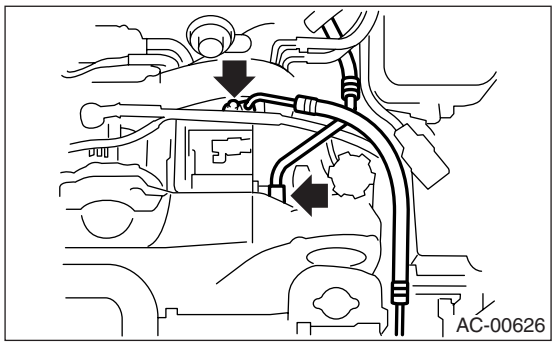
AC-00626

8) Disconnect the compressor harness from body harness.
9) Loosen the bolts to remove the compressor bracket.

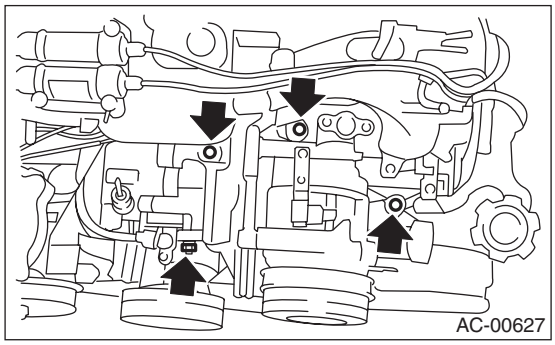
AC-00627

10) Remove the bolts, and then separate the compressor and bracket.

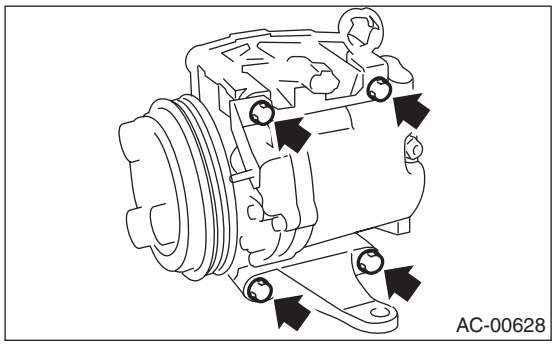
AC-00628

C: INSTALLATION

1) Install in the reverse order of removal.
2) Replace the O-rings on low-/high-pressure hoses with new ones, then apply compressor oil.
3) When replacing compressor, adjust amount of compressor oil. <Ref. to AC-26, OPERATION, Compressor Oil.>
4) Charge refrigerant. <Ref. to AC-22, OPERATION, Refrigerant Charging Procedure.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to AC-11, AIR CONDITIONING UNIT, COMPONENT, General Description.> and <Ref. to AC-13, COMPRESSOR, COMPONENT, General Description.>

13.Condenser

A: REMOVAL

1) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-21, OPERATION, Refrigerant Recovery Procedure.>
2) Disconnect the ground cable from battery.
3) Disconnect the pressure hose and pipe from condenser.

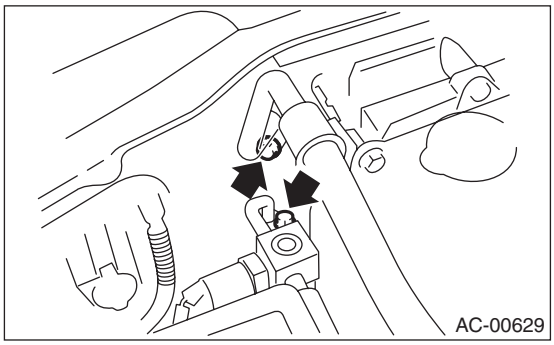

4) Remove the radiator bracket (A).

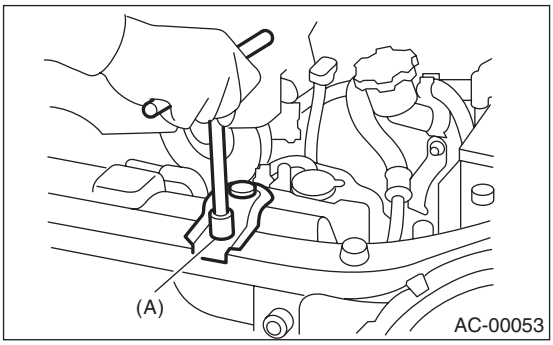

5) Remove the two bolts. While lifting the condenser, pull it out through the space between radiator and radiator panel.

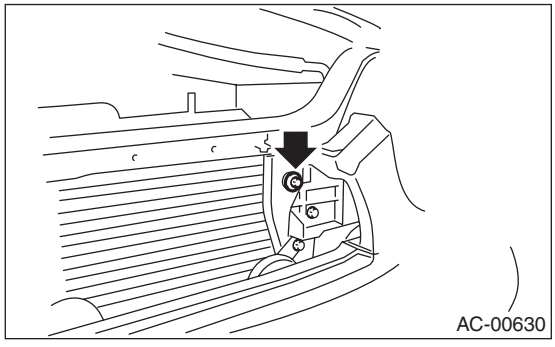

CAUTION:
• Be careful not to damage the condenser fins. If a damaged fin is found, repair it using a thin screwdriver.
• If the condenser is replaced, add appropriate amount of compressor oil to the compressor. <Ref. to AC-26, REPLACEMENT, Compressor Oil.>

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:
Replace the O-rings on hoses or pipes with new ones, and then apply compressor oil. Confirm that lower guide of condenser (A) has been fitted into holes on radiator panel.

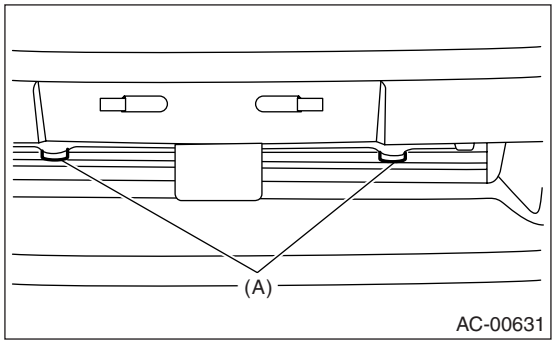

2) Charge refrigerant. <Ref. to AC-22, OPERATION, Refrigerant Charging Procedure.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to AC-11, AIR CONDITIONING UNIT, COMPONENT, General Description.> and <Ref. to CO(H4SO)-4, RADIATOR AND RADIATOR FAN, COMPONENT, General Description.>

C: INSPECTION

1) Confirm that no dust or insects are found on the condenser fins. Air-blow or flush fins with water as needed.
2) Confirm that no oil leaks from condenser. If a failure is found, replace the condenser with a new one.

14.Heater and Cooling Unit

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-21, OPERATION, Refrigerant Recovery Procedure.>
3) Drain LLC from the radiator.
4) Remove the bolt securing expansion valve and pipe in engine compartment. Release the heater hose clamps in engine compartment to remove the hoses.

- LHD MODEL

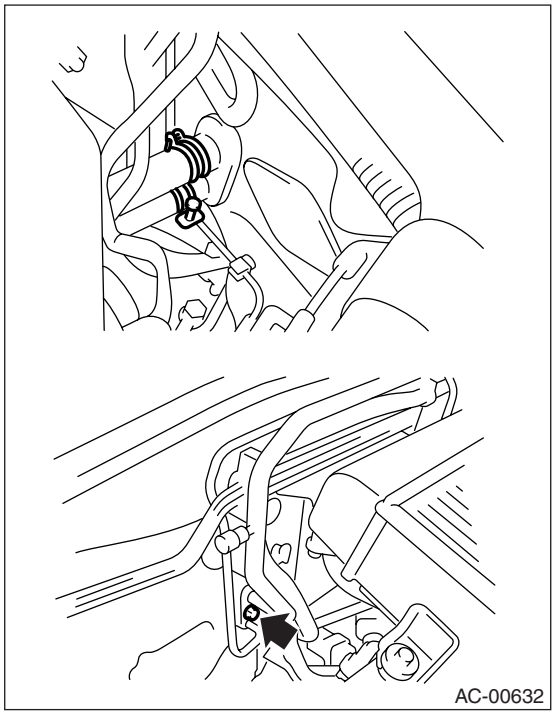

- RHD MODEL

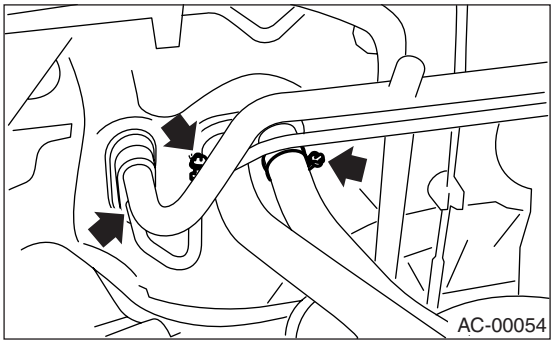

5) Remove the instrument panel. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
6) Remove the support beam.
7) Remove the blower motor unit assembly. <Ref. to AC-27, REMOVAL, Blower Motor Unit Assembly.>
8) Disconnect the servo motor connectors.
9) Loosen the bolt and nuts to remove the heater and cooling unit.

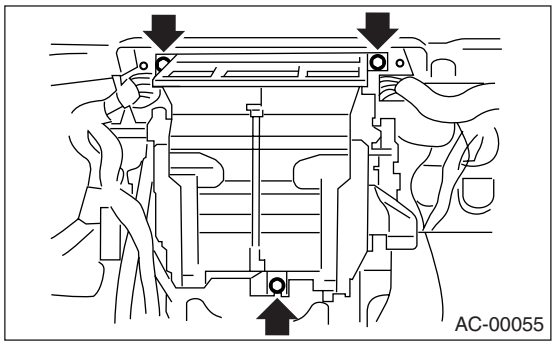

B: INSTALLATION

1) Install in the reverse order of removal.
2) Charge refrigerant. <Ref. to AC-22, OPERATION, Refrigerant Charging Procedure.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.>

15.Evaporator

A: REMOVAL

1) Remove the heater and cooling unit. <Ref. to AC-35, REMOVAL, Heater and Cooling Unit.>
2) Loosen the screws and clip to remove the evaporator cover.

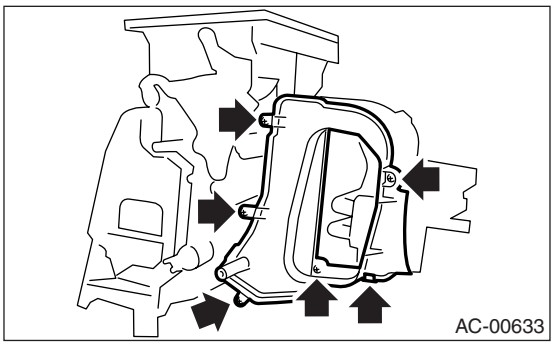

3) Remove the evaporator.

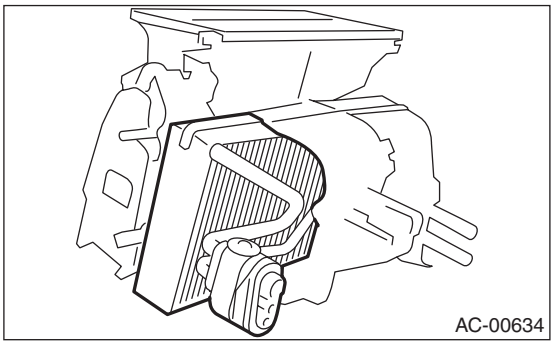

4) Loosen the two bolts to remove the expansion valve.

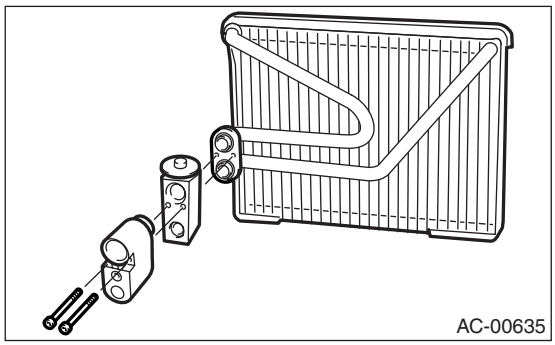

CAUTION:
If the evaporator is replaced, add appropriate amount of compressor oil to evaporator. <Ref. to AC-26, REPLACEMENT, Compressor Oil.>

B: INSTALLATION

Install in the reverse order of removal.

16.Hose and Tube

A: REMOVAL

CAUTION:
• When disconnecting/connecting hoses, do not apply excessive force to them. Confirm that no torsion and excessive tension exists after installing.
• Seal the disconnected hose with a plug or vinyl tape to prevent contamination from entering.

1) Disconnect the ground cable from battery.
2) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-21, OPERATION, Refrigerant Recovery Procedure.>
3) Remove the evaporator unit mounting bolt (A).
4) Remove the low-pressure hose attaching bolts (B).
5) Disconnect the low-pressure hose from evaporator unit.
6) Disconnect the low-pressure hose from compressor.
7) Remove the low-pressure hose from vehicle.
8) Remove the high-pressure hose attaching bolts (C).
9) Disconnect the high-pressure hose from compressor.
10) Disconnect the high-pressure hose from condenser.
11) Remove the high-pressure hose from vehicle.
12) Remove the high-pressure tube attaching bolt (D).
13) Remove the high-pressure tube from vehicle.

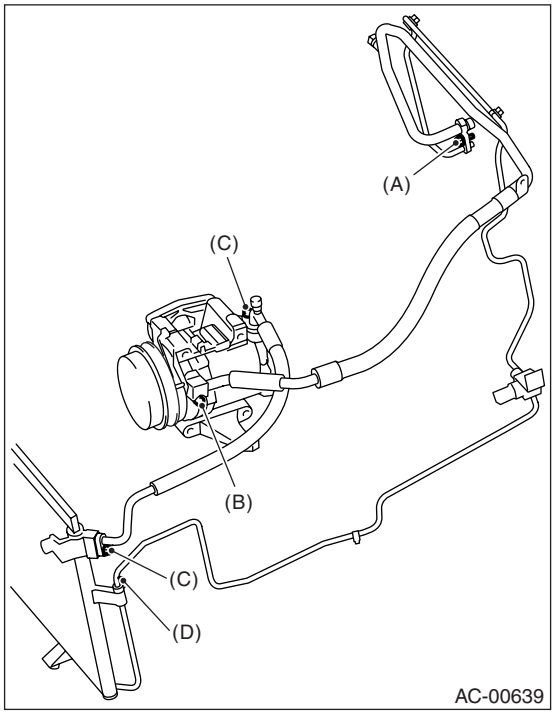

B: INSTALLATION

CAUTION:
• When disconnecting/connecting hoses, do not apply an excessive force to them. Confirm that no torsion and excessive tension exists after installing.
• Seal the disconnected hose with a plug or vinyl tape to prevent contamination from entering.

1) Install in the reverse order of removal.
2) Charge refrigerant. <Ref. to AC-22, OPERATION, Refrigerant Charging Procedure.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to AC-11, AIR CONDITIONING UNIT, COMPONENT, General Description.>

C: INSPECTION

NOTE:
If cracking, damage, or swelling is found on a hose, replace it with a new one.

17.Relay and Fuse

A: LOCATION

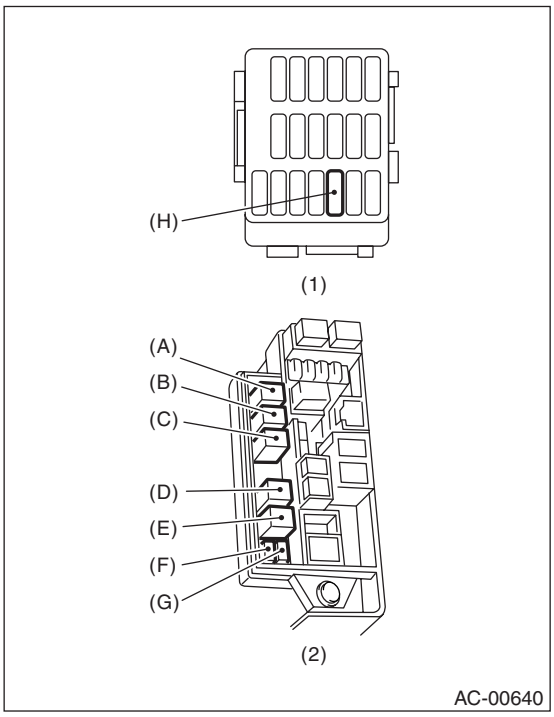

(1) Joint box
(2) Main fuse box

Main Fan Relay 1	A
Main Fan Relay 2	B
Sub Fan Relay 1	C
Sub Fan Relay 2	E
A/C Relay	D
Main Fan Fuse	F
Sub Fan Fuse	G
A/C Fuse	H

B: INSPECTION

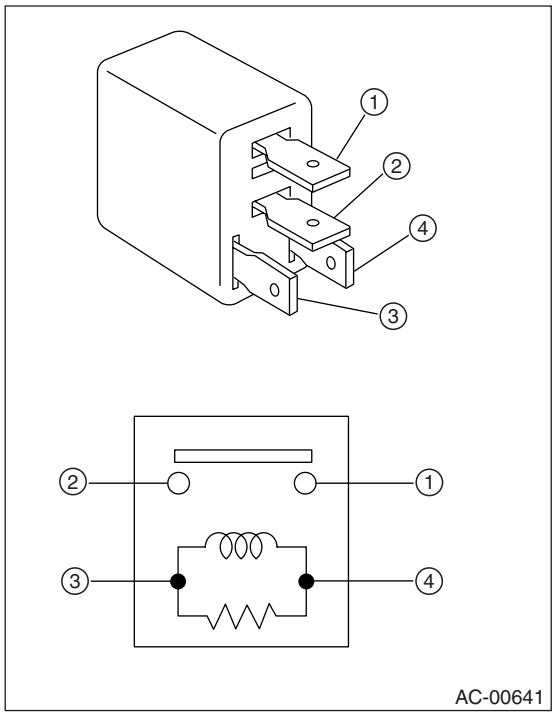

(3) — (4): Continuity exists.
(1) — (2): No continuity
While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2).
If no continuity exists, replace the relay with a new one.

18.Pressure Switch (Dual Switch)

A: INSPECTION

1) Connect the manifold gauge to the service valve on high-pressure side.
2) Remove the pressure switch harness connector. Using a circuit tester, inspect the ON-OFF operation of pressure switch.

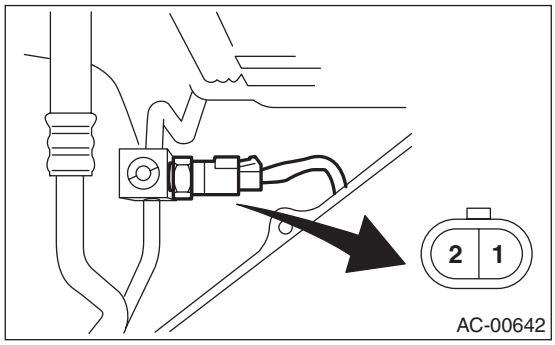

	Terminal No.	Operation	Standard kPa (kg/cm^2, psi)
High and low pressure switch	1 and 2	Turns OFF.	Increasing to 2,800±100 (29±1, 406±15)
			Decreasing to 278±29 (2.83±0.3, 40.3±4.2)
		Turns ON.	Increasing to $287^{+39}/_{-25}$ ($2.9^{+0.4}/_{-0.25}$, $42^{+5.7}/_{-3.6}$)
			Decreasing to 2,200±200 (22.4±2, 319±29)

19. Ambient Sensor (Auto A/C Model)

A: REMOVAL

1) Open the front hood.
2) Disconnect the ground cable from battery.
3) Disconnect the ambient sensor connector.
4) Remove the ambient sensor from radiator lower panel.

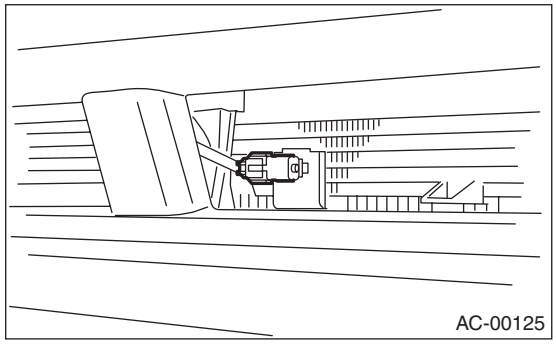

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC-29, AMBIENT SENSOR, Diagnostic Procedure for Sensors.>

20.Sunload Sensor (Auto A/C Model)

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front defroster grille.
3) Disconnect the sunload sensor connector (A).

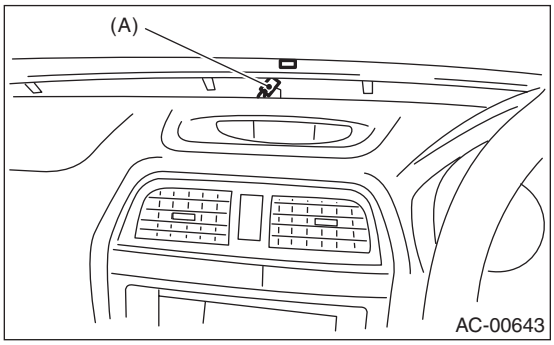

CAUTION:
Be careful not to damage the sensors and interior trims when removing them.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC-33, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>

21.Air Vent Grille

A: REMOVAL

1. CENTER GRILLE

1) Disconnect the ground cable from battery.
2) Remove the center console panel (A).
3) Loosen the two screws to remove the center air vent grille (B).

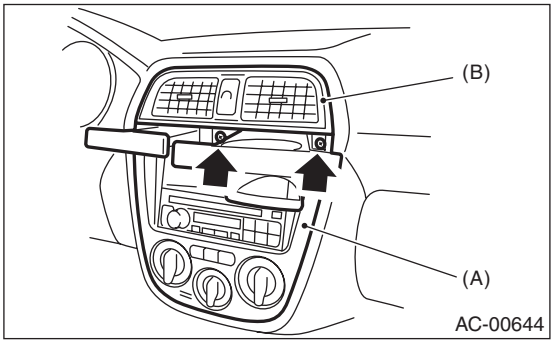

2. SIDE GRILLE

1) Disconnect the ground cable from battery.
2) Remove the heater vent duct. <Ref. to AC-44, REMOVAL, Heater Vent Duct.>
3) Loosen the screws to remove the side air vent grille.

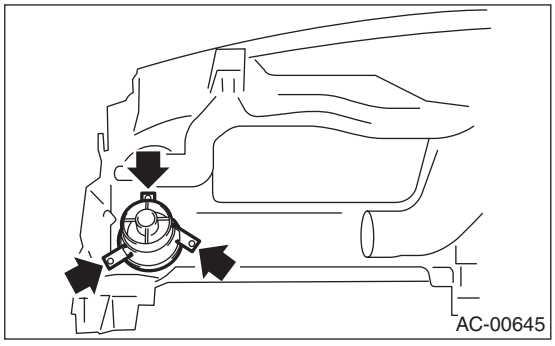

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

The direction and amount of air should be adjusted smoothly.
The adjustment should be kept in each position.

22.Heater Duct

A: REMOVAL

1) Remove the front seat. <Ref. to SE-6, REMOVAL, Front Seat.>
2) Remove the front side sill cover.
3) Pull off the floor mat to remove the heater duct.

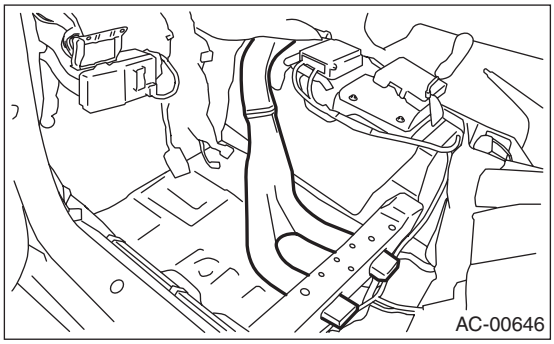

B: INSTALLATION

Install in the reverse order of removal.

23.Heater Vent Duct

A: REMOVAL

1) Remove the instrument panel. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
2) Remove the screws.
3) Remove the heater vent duct.

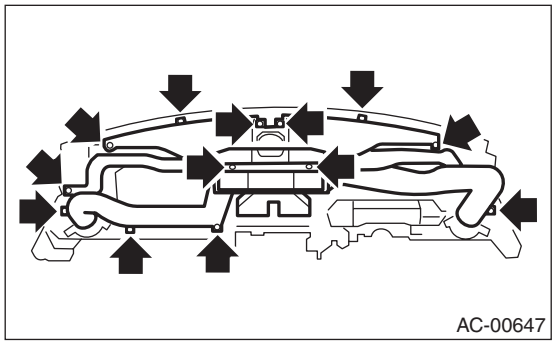

B: INSTALLATION

Install in the reverse order of removal.

24.General Diagnostic Table

A: INSPECTION

Symptom		Repair order
Blower motor	Doesn't move.	Fuse
		Blower motor relay
		Blower motor
		Blower motor resistor
		Blower switch
		Wire harness
	Strange noise.	Blower motor
Compressor	Doesn't move.	Refrigerant
		Fuse
		Air conditioning relay
		Magnet clutch
		Compressor
		Pressure switch
		A/C switch
		Blower switch
		Wire harness
	Strange noise	V-Belt
		Magnet clutch
		Compressor
Cold air not emitted.		Refrigerant
		V-Belt
		Magnet clutch
		Compressor
		Pressure switch
		A/C switch
		Blower switch
		Wire harness
		Heater duct
		Heater vent duct
Warm air not emitted.		Engine coolant
		Blower switch
		Heater core
Temperature of air from vents does not change.		Engine coolant
		Mode actuator
		Wire harness
Unable to switch blow vents.		Mode actuator
		Air flow switch
		Wire harness
Unable to switch suction vents.		Air inlet select switch
		FRESH/RECIRC actuator
		Wire harness

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

AC

Page

1. Basic Diagnostic Procedure 2
2. General Description 3
3. Electrical Components Location 5
4. A/C Control Module I/O Signal 7
5. Diagnostics Chart for Self-diagnosis 9
6. Diagnostics for A/C System Malfunction 12
7. Diagnostic Procedure for Actuators 23
8. Diagnostic Procedure for Sensors 29
9. Symptom Related Diagnostic 35

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	**START INSPECTIONS.** 1)Perform the pre-inspection. <Ref. to AC-3, INSPECTION, General Description.> 2)Perform the self-diagnosis. <Ref. to AC-9, OPERATION, Diagnostics Chart for Self-diagnosis.>	Does the self-diagnosis operate?	Go to step **2.**	<Ref. to AC-12, A/C AND/OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE, Diagnostics for A/C System Malfunction.>
2	**CONFIRM MALFUNCTION PART.** Confirm the malfunction part with self-diagnosis.	Can the malfunction part be confirmed?	Repair the malfunction part according to each diagnostics chart.	Go to step **3.**
3	**CHECK COMPARTMENT TEMPERATURE.** 1)Turn the A/C switch ON. 2)Set the temperature at maximum cold position. 3)Check the compartment temperature changes.	Is the compartment temperature changed?	Go to step **4.**	<Ref. to AC-16, COMPARTMENT TEMPERATURE IS NOT CHANGED OR A/C SYSTEM DOES NOT RESPOND QUICKLY, Diagnostics for A/C System Malfunction.>
4	**CHECK A/C SYSTEM RESPONSE.** Change the temperature setting, and check the response of A/C system.	Does the A/C system respond quickly?	A/C system is OK.	<Ref. to AC-16, COMPARTMENT TEMPERATURE IS NOT CHANGED OR A/C SYSTEM DOES NOT RESPOND QUICKLY, Diagnostics for A/C System Malfunction.>

2. General Description

A: CAUTION

1) Never connect the battery in reverse polarity.
• The Auto A/C control module will be destroyed instantly.
2) Do not disconnect the battery cables while the engine is running.
• A large counter electromotive force will be generated in the alternator, and this voltage may damage electronic parts such as A/C control module.
3) Before disconnecting the connectors of each sensor and the A/C control module, be sure to turn off the ignition switch.
• Otherwise, the Auto A/C control module may be damaged.
4) Every Auto A/C-related part is a precision part. Do not drop them.
5) Airbag system wiring harness is routed near the A/C control panel (A/C control module) and junction box.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
• Be careful not to damage the airbag system wiring harness when servicing the A/C control panel (A/C control module) and junction box.

B: INSPECTION

Before performing diagnosis, check the following items which might affect A/C system problems.

1. BATTERY

1) Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

2) Check the condition of the fuses for A/C system power supply and other fuses.
3) Check the condition of the harnesses and harness connectors connection.

2. ASPIRATOR HOSE

1) Turn the ignition switch to ON and push the A/C switch.
2) Turn the temperature control dial to maximum hot position.
3) Turn the air flow control dial to “DEF” position.
4) Turn the fan speed control dial to 4th position.
5) Firmly hold a thin paper (b) in front of the in-vehicle sensor suction port (a) for the auto A/C control unit and check that the paper moves towards the port indicating that air is being sucked into the port.

NOTE:
Ensure the paper does not get sucked into the port.

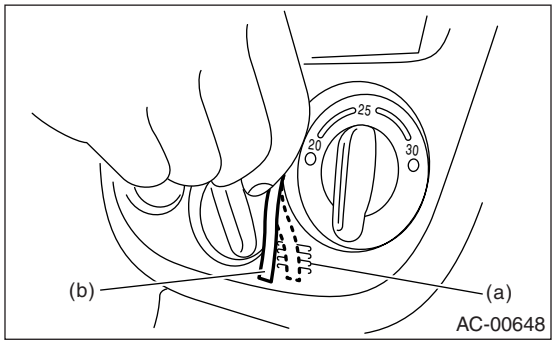

6) If the paper does not move at all, remove the auto A/C control unit <Ref. to AC-31, REMOVAL, Control Unit.> and check for improper connection of the aspirator hose (a), auto A/C control unit and heater unit, and secure as necessary.

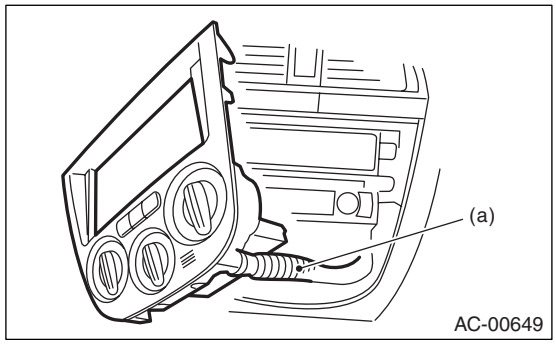

3. REFRIGERANT LINE

Check the connection for refrigerant line (A) and high-pressure pipe.

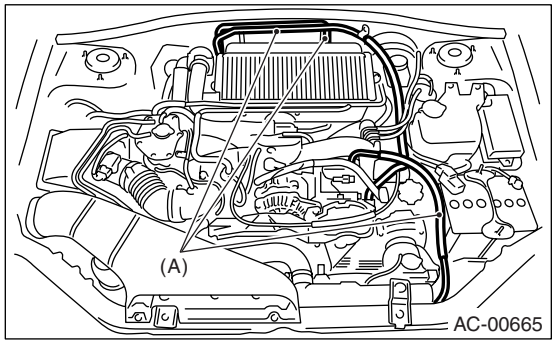

4. CONTROL LINKAGE

1) Check the state of mode door linkage.
2) Check the state of air mix door linkage.
3) Check the state of intake door linkage.

5. CONTROL SWITCHES

Start and warm up the engine completely.
1) Inspection using switches.

No.	Point to check	Switch operation	Judgement standard
1	Fan speed control dial	OFF position	A/C switch LED goes out. • Fan speed: OFF • Compressor: OFF
		Fan speed control dial 1st → 2nd → 3rd → 4th	Fan speed changes 1st → 2nd → 3rd → 4th
2	Fan speed control dial and temperature control dial	A. Fan speed control dial auto position. B. Temperature control dial maximum cold position	• Outlet air: Cool • Fan speed: 4th • Compressor: ON
		C. Turn the temperature control dial from maximum cold position to maximum hot position gradually.	• Outlet air: Cool → Hot • Fan speed: AUTO • Compressor: ON
		D. Temperature control dial maximum hot position	• Outlet air: Hot • Fan speed: 4th • Compressor: ON
3	Air flow control dial	Air flow control dial VENT → BI-LEVEL → HEAT → DEF/HEAT → DEF	Air flow outlet changes from VENT → BI-LEVEL → HEAT → DEF/HEAT → DEF.
4	FRESH/RECIRC switch	FRESH/RECIRC switch ON	Changes from RECIRC → FRESH, or FRESH → RECIRC.

2) Compressor operation inspection

No.	Point to check	Switch operation	Judgement standard
1	Compressor	A. A/C switch ON B. Fan speed control dial 1st-4th	Compressor: ON

3) Illumination control inspection

No.	Point to check	Switch operation	Judgement standard
1	Illumination	Lighting switch ON	Illumination light illuminates.

3. Electrical Components Location

A: LOCATION

1. ENGINE COMPARTMENT

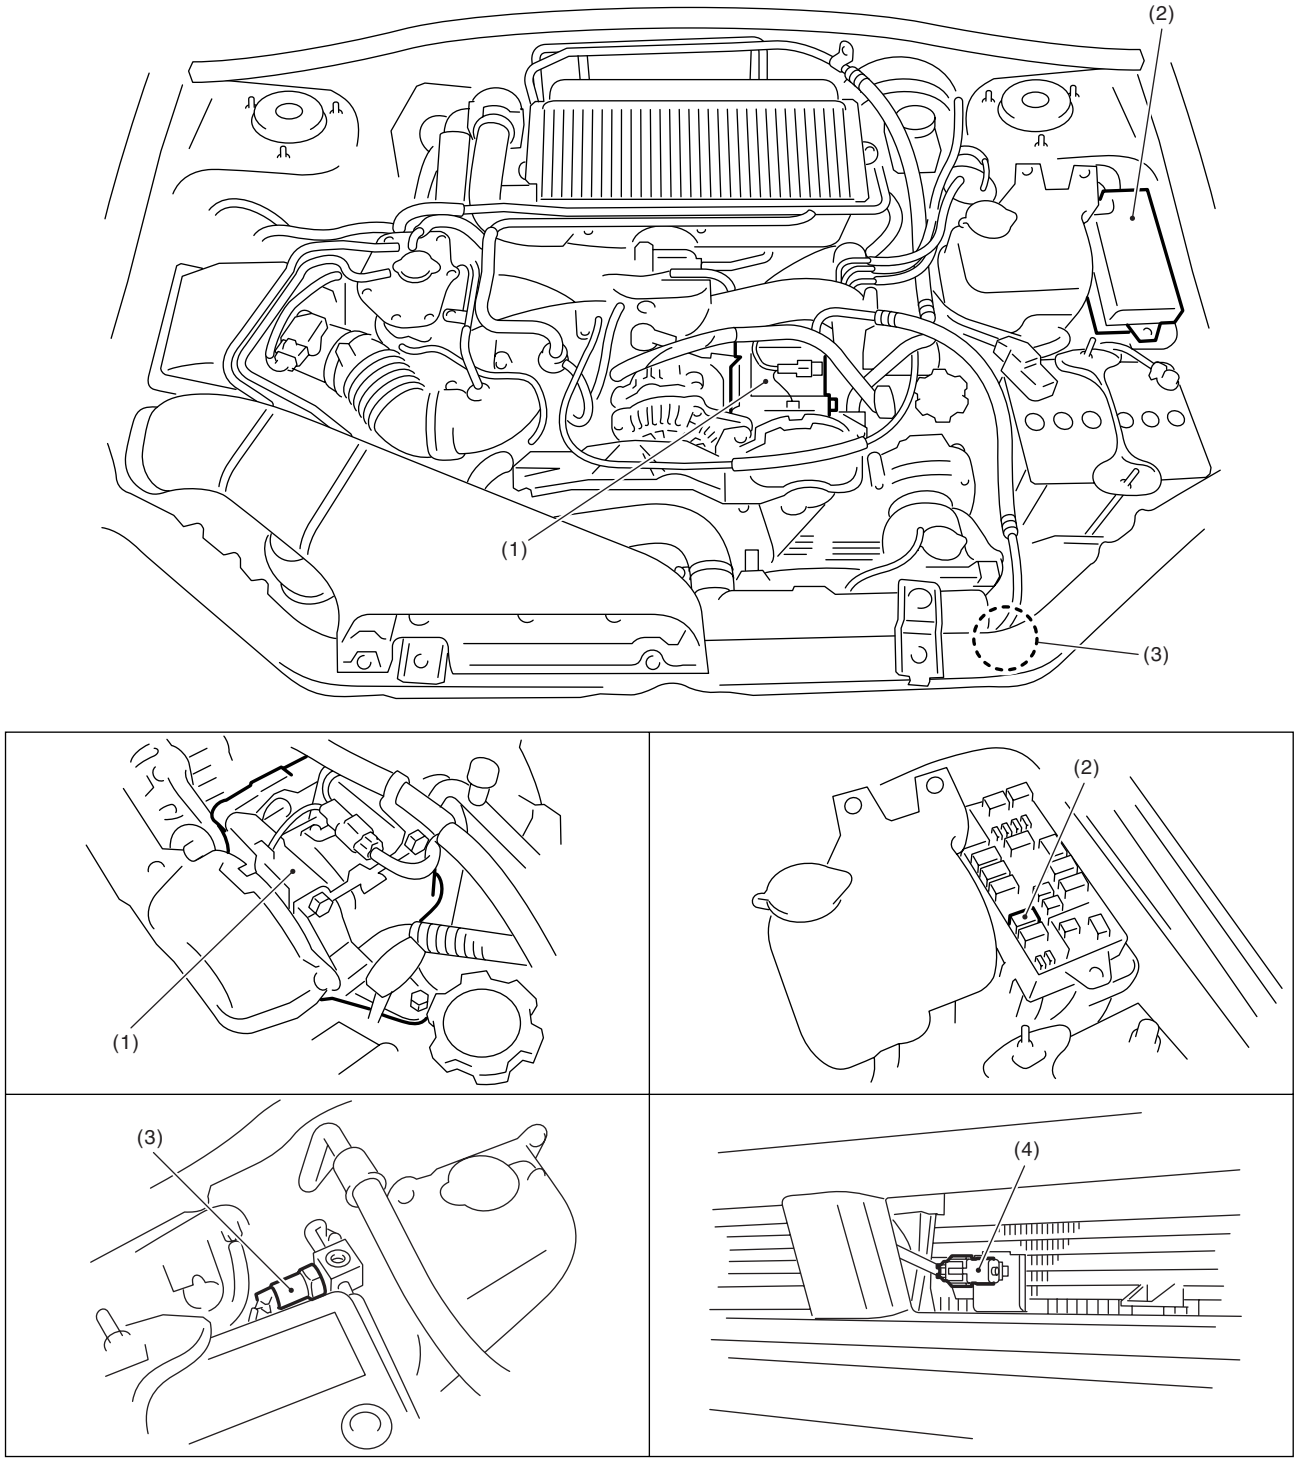

AC-00666

(1) A/C compressor
(2) A/C relay
(3) Pressure switch
(4) Ambient sensor

2. PASSENGER COMPARTMENT

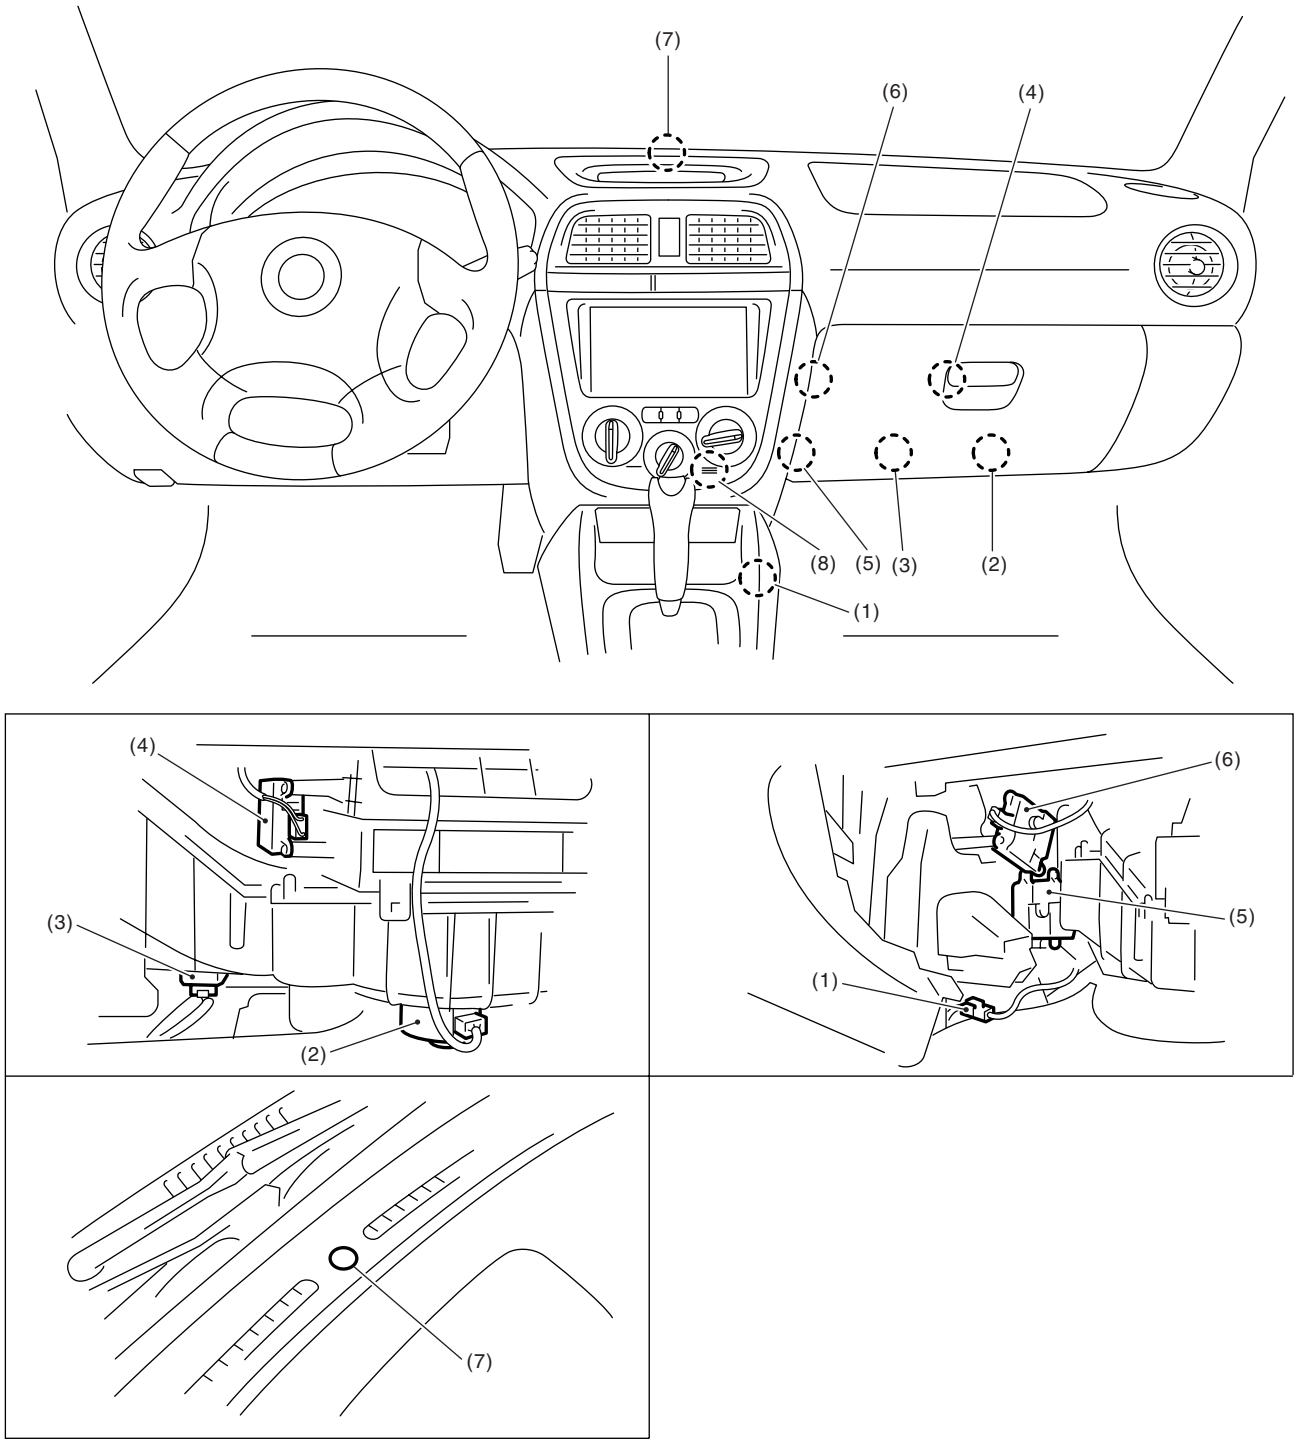

AC-00667

(1) Evaporator sensor
(2) Blower motor
(3) Blower motor resistor
(4) Intake door actuator
(5) Air mix door actuator
(6) Mode door actuator
(7) Sunload sensor
(8) In-vehicle sensor (built-in Auto A/C control module)

4. A/C Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

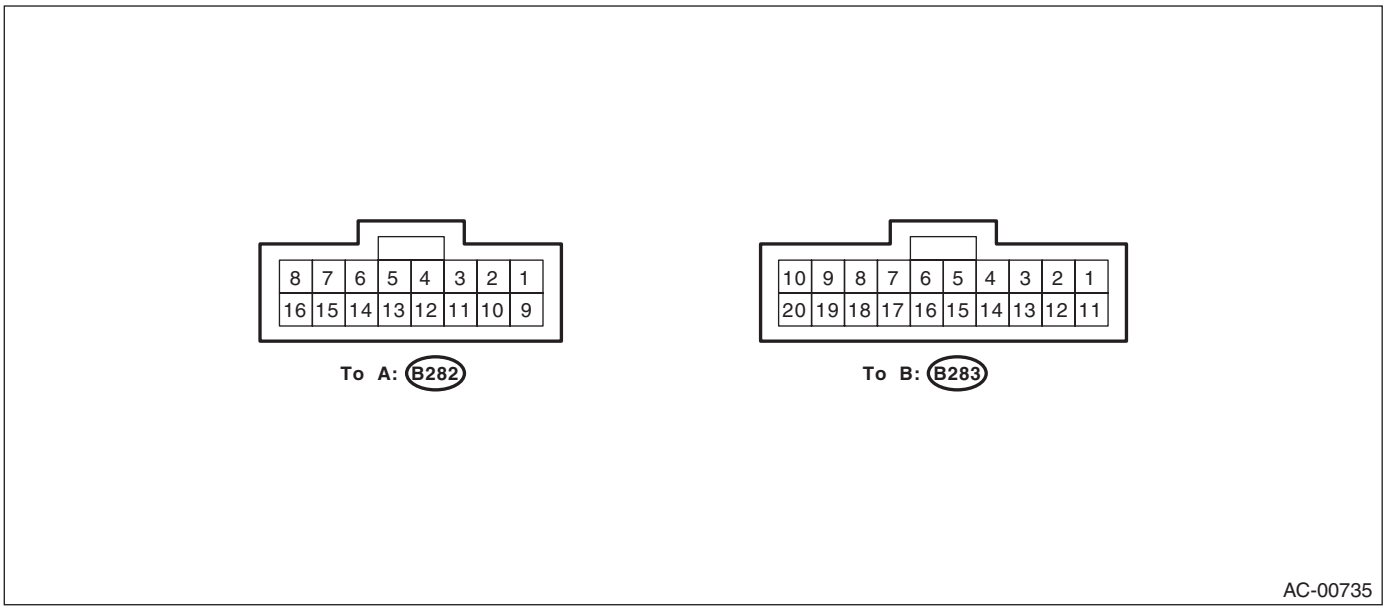

Content	Connector & Terminal No.	Signal (V)
Battery power supply (Memory back-up)	B1 — B12	Battery voltage, 13 — 14 (engine running)
IGN power supply	A8 — B12	Battery voltage (ignition switch ON), 13 — 14 (engine running)
ACC power supply	B2 — B12	Battery voltage, 0 (engine cranking), Battery voltage (engine running)
A/C control module ground circuit	B12 — chassis ground	0 (ignition switch ON) — circuit constantly grounded to chassis
Sensor ground circuit	B17 — chassis ground	0 (ignition switch ON) — circuit constantly grounded to chassis
Ambient sensor	B9 — B17	Approx. 5 (disconnect connector, and ignition switch ON)
Evaporator sensor	B7 — B17	
Thermometer	B15 — B12	
Sunload sensor	B16 — B17	Approx. 5 (disconnect connector, and ignition switch ON)
Air mix door actuator	B5 — B1	Battery voltage (ignition switch ON)
Air mix door actuator P.B.R.	A4 — B17	LAN connection
Mode door actuator	B6 — B17	Battery voltage (ignition switch ON)
Mode door actuator P.B.R.	A12 — B17	LAN connection
Intake door FRS voltage	A15 — A7	Battery voltage (FRESH/RECIRC switch OFF)
Intake door CIRC voltage	A7 — A15	Battery voltage (FRESH/RECIRC switch ON)
Blower fan relay	B14 — body	Battery voltage (ignition switch ON)
A/C relay	B3 — B12	0 (ignition and A/C switches ON) Battery voltage (A/C switch OFF)
Illumination control signal	B10 — B20	Battery voltage (ignition and lighting switches ON)
Rear window defogger	A13 — B12	0 (ignition switch ON, rear window defogger switch ON)

B: SCHEMATIC

1. AIR CONDITIONER AUTO A/C LHD MODEL

<Ref. to WI-54, AUTO A/C LHD MODEL, SCHEMATIC, Air Conditioning System.>

2. AIR CONDITIONER AUTO A/C RHD MODEL

<Ref. to WI-58, AUTO A/C RHD MODEL, SCHEMATIC, Air Conditioning System.>

5. Diagnostics Chart for Self-diagnosis

A: OPERATION

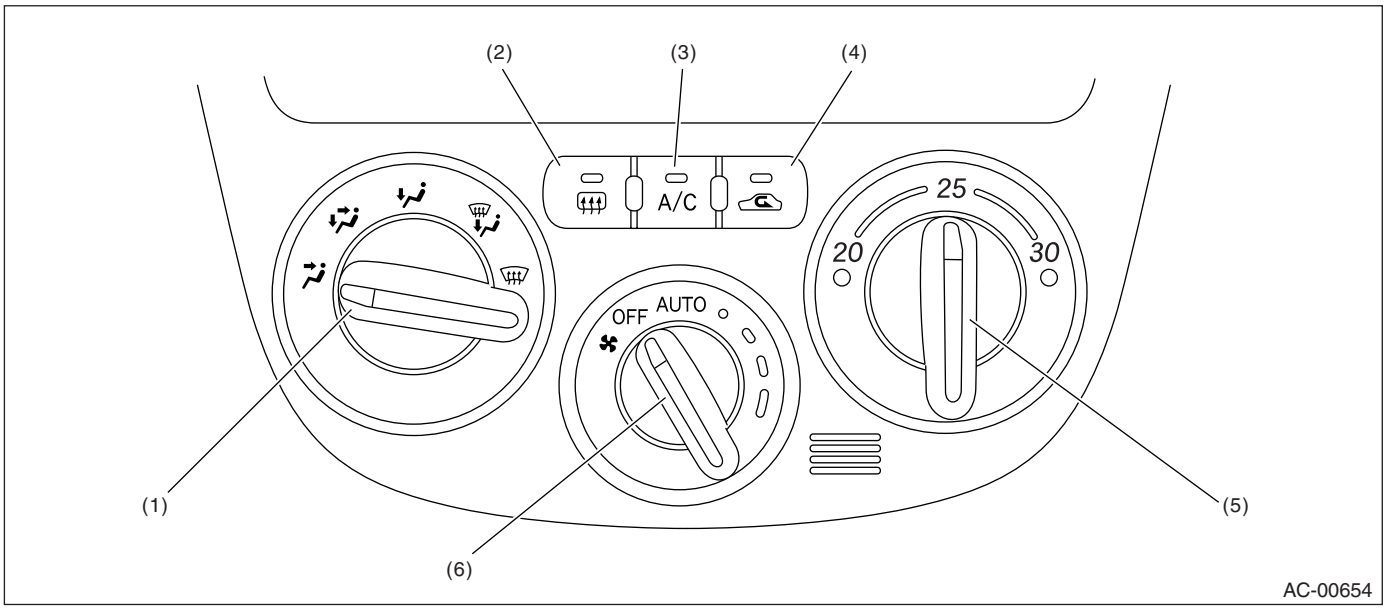

(1) Air flow control dial
(2) Rear window defogger switch
(3) A/C switch
(4) FRESH/RECIRC switch
(5) Temperature control dial
(6) Fan speed control dial

	Step	Check	Yes	No
1	**SELECT CONTROL PANEL TO SELF-DIAGNOSIS MODE.** 1)Turn the fan speed control dial to OFF position. 2)Start the engine and press the rear window defogger switch for at least 5 seconds. The rear window defogger switch must be pressed within 10 seconds after starting engine.	Does the self-diagnosis mode operate?	Go to step **2.**	<Ref. to AC-12, A/C AND/OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE, Diagnostics for A/C System Malfunction.>
2	**CHECK LED ILLUMINATION.** Make sure that all switch LED illuminates (RHD model) or blink (LHD model) on control panel.	Do all LED illuminate or blink?	Go to step **3.**	Check the switch LED.
3	**CHECK SENSORS MALFUNCTION.** 1)Turn the fan speed control dial to AUTO position. 2)If the system has trouble for each sensor, rear window defogger switch LED is turned off. 3)If the system has no trouble, rear window defogger switch LED is illuminated.	Does the rear window defogger switch LED illuminate?	Go to step **5.**	Go to step **4.**
4	**CONFIRM MALFUNCTIONING SENSOR.** 1)Turn the fan speed control dial to 1st position. 2)Turn the air flow control dial to each mode position, check each switch LED illumination according to sensor check table. <Ref. to AC-11, SENSOR CHECK TABLE, OPERATION, Diagnostics Chart for Self-diagnosis.>	Do FRESH/RECIRC and A/C switch LED illuminate when turning the dial to each mode position?	Go to step **5.**	Repair the malfunctioning sensor. <Ref. to AC-29, Diagnostic Procedure for Sensors.>

	Step	Check	Yes	No
5	**CHECK MODE DOOR POSITION SIGNAL.** 1)Turn the fan speed control dial to 2nd position. 2)If the system has trouble for mode door position signal, rear window defogger switch LED is turned off. 3)If the system has no trouble, rear window defogger switch LED is illuminated.	Does the rear window defogger switch LED illuminate?	Go to step **6.**	Check the mode door actuator circuit. <Ref. to AC-25, MODE DOOR ACTUATOR, Diagnostic Procedure for Actuators.>
6	**CHECK BLOWER FAN OPERATION.** 1)Turn the fan speed control dial to 3rd position. 2)Turn the temperature control dial, check that blower fan speed changes depending on set temperature.	Does the blower fan speed change?	Go to step **7.**	Check the blower motor circuit. <Ref. to AC-14, BLOWER MOTOR IS NOT ROTATED, Diagnostics for A/C System Malfunction.>
7	**CHECK OPERATION OF EACH ACTUATOR, BLOWER FAN AND COMPRESSOR CLUTCH.** 1)Turn the fan speed control dial to 4th position. 2)Select the operating mode by turning air flow control dial. 3)Check the operation of each mode according to operating mode table. <Ref. to AC-11, OPERATING MODE TABLE, OPERATION, Diagnostics Chart for Self-diagnosis.> •Air inlet: •Air outlet: •Air mix door: •Blower fan: •A/C compressor:	Does the operation of each mode match to operating mode table?	Push the A/C switch or turn the ignition switch to OFF, and finish the self-diagnosis.	Repair the malfunction part according to each diagnostics chart.

1. SENSOR CHECK TABLE

NOTE:
When the sunload sensor is checked indoors or in the shade, open circuit might be indicated. Always check the sunload sensor at a place where sun shines directly on it.

Air flow control dial position	Checked sensor	No trouble	Short circuit	Open circuit
VENT	Ambient sensor	A/C switch LED and FRESH/RECIRC switch LED illuminate	A/C switch LED illuminate	FRESH/RECIRC switch LED illuminate
BI-LEVEL	In-vehicle sensor	A/C switch LED and FRESH/RECIRC switch LED illuminate	A/C switch LED illuminate	FRESH/RECIRC switch LED illuminate
HEAT	Evaporator sensor	A/C switch LED and FRESH/RECIRC switch LED illuminate	A/C switch LED illuminate	FRESH/RECIRC switch LED illuminate
DEF/HEAT	Sunload sensor	A/C switch LED and FRESH/RECIRC switch LED illuminate	A/C switch LED illuminate	FRESH/RECIRC switch LED illuminate
DEF	Air mix door motor (Potentio balance resistor)	A/C switch LED and FRESH/RECIRC switch LED illuminate	A/C switch LED illuminate	

2. OPERATING MODE TABLE

Operation	Air flow control dial position				
	VENT	BI-LEVEL	HEAT	DEF/HEAT	DEF
Air outlet	VENT	BI-LEVEL	HEAT	DEF/HEAT	DEF
Air inlet	RECIRC	RECIRC	RECIRC	FRESH	FRESH
Air mix door	FULL COOL	FULL COOL	FULL HOT	FULL HOT	FULL COOL
Blower fan	5V	5V	8V	10V	Power supply voltage
A/C compressor	ON	OFF	OFF	ON	ON

6. Diagnostics for A/C System Malfunction

A: A/C AND/OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE

TROUBLE SYMPTOM:

- “Set” temperature is not indicated on the display, switch LEDs are faulty and switches do not operate.
- Self-diagnosis system does not operate.

WIRING DIAGRAM:

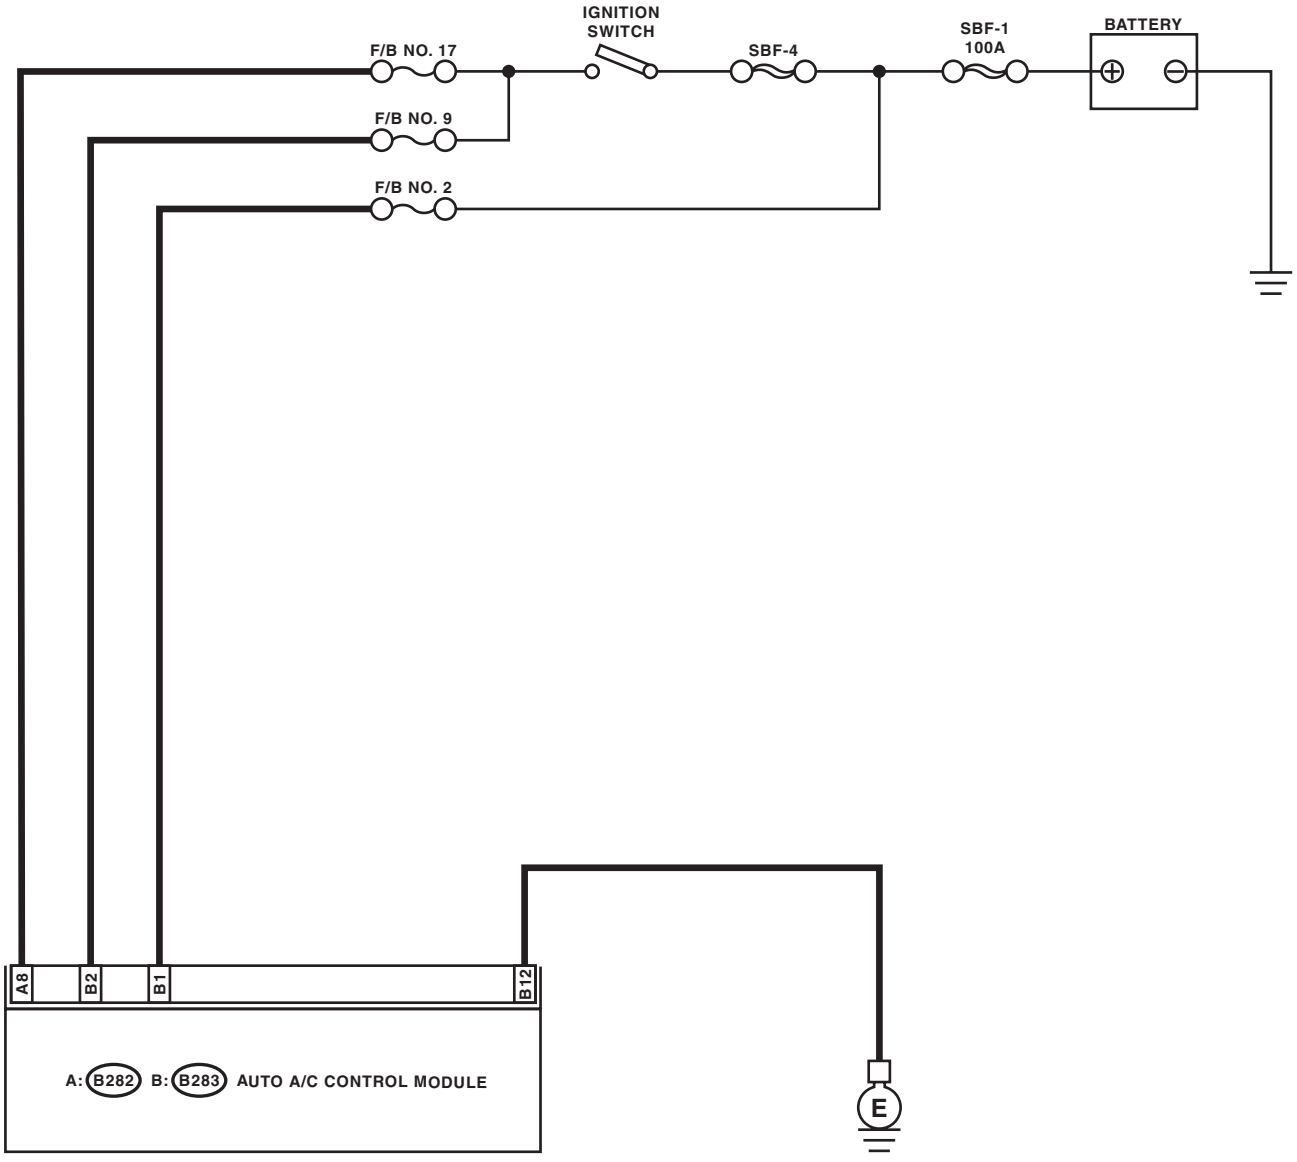

AC-00669

	Step	Check	Yes	No
1	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuse No. 2 from main fuse box. 3)Check the condition of fuse.	Is the fuse blown-out?	Replace the fuse.	Go to step **2.**
2	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the fuses No. 9 and No. 17 from fuse & relay box. 3)Check the condition of fuse.	Is the fuse blown-out?	Replace the fuse.	Go to step **3.**
3	**CHECK A/C CONTROL MODULE POWER CIRCUIT.** 1)Pull out the A/C control module connector. 2)Measure the voltage between A/C control module connector terminal and chassis ground when turning ignition switch to OFF. ***Connector & terminal*** ***(B283) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the short circuit in harness for power supply line.
4	**CHECK A/C CONTROL MODULE POWER CIRCUIT.** Measure the voltage between A/C control module connector terminal and chassis ground when turning the ignition switch to ACC. ***Connector & terminal*** ***(B283) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **5.**	Repair the short circuit in harness for power supply line.
5	**CHECK A/C CONTROL MODULE POWER CIRCUIT.** Measure the voltage between A/C control module connector terminal and chassis ground when turning the ignition switch to ON. ***Connector & terminal*** ***(B282) No. 8 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Repair the short circuit in harness for power supply line.
6	**CHECK A/C CONTROL MODULE GROUND CIRCUIT.** Measure the resistance of harness between A/C control module and chassis ground. ***Connector & terminal*** ***(B283) No. 12 — Chassis ground:***	Is the resistance less than 5 Ω?	Go to step **7.**	Repair the short circuit in harness for ground line.
7	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

B: BLOWER MOTOR IS NOT ROTATED

TROUBLE SYMPTOM:

- Blower motor is not rotated.
- Blower motor is not rotated in “HI”.

WIRING DIAGRAM:

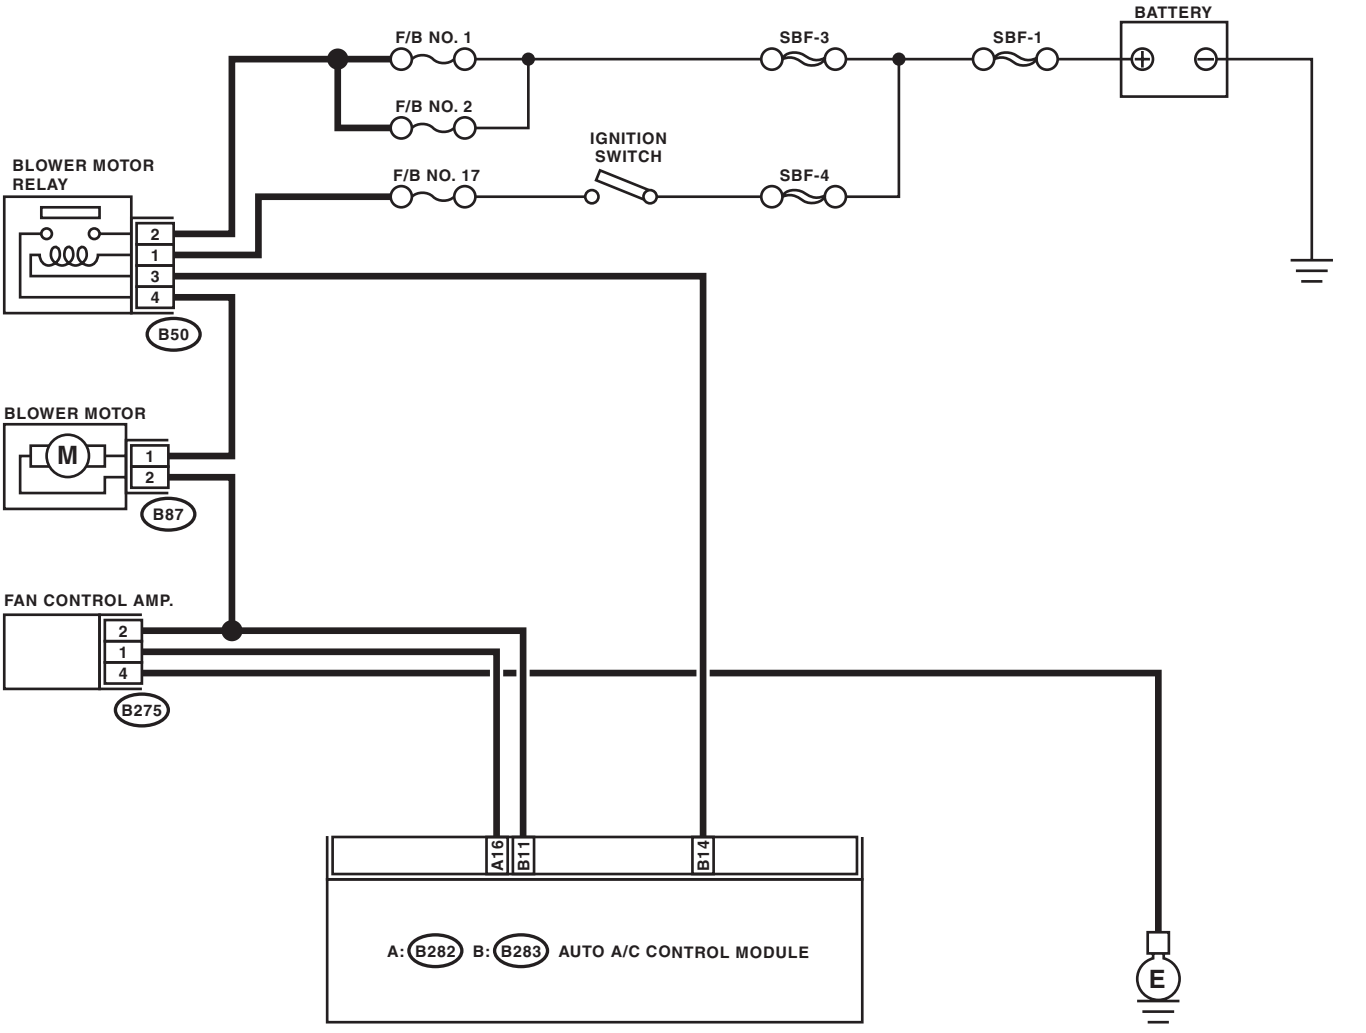



AC-00670

	Step	Check	Yes	No
1	**CHECK FUSE.** 1)Remove the No.1, No. 2 and No. 17 fuses in fuse & relay box. 2)Check the condition of fuses.	Are any of the fuses blown-out?	Replace the fuse.	Go to step **2.**
2	**CHECK POWER SUPPLY TO BLOWER FAN MOTOR.** 1)Turn the ignition switch to ON. 2)Turn the blower switch to ON. 3)Measure the voltage between blower fan motor and chassis ground. ***Connector & terminal*** ***(B87) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the open circuit in harness for blower fan motor power supply line.
3	**CHECK BLOWER FAN MOTOR RELAY.** 1)Turn the ignition switch to OFF. 2)Remove the blower fan motor relay. 3)Connect the battery positive (+) terminal to No. 1 terminal and negative (–) terminal to No. 3 terminal of blower fan motor connector. 4)Measure the resistance between No. 2 and No. 4 terminals. ***Terminals*** ***No. 2 — No. 4:***	Is the resistance less than 1 Ω?	Go to step **4.**	Replace the blower fan motor relay.
4	**CHECK BLOWER FAN MOTOR.** 1)Disconnect the connector from blower fan motor. 2)Connect the battery positive (+) terminal to No.1 terminal and negative (–) terminal to No.2 terminal of blower fan motor connector. 3)Make sure that the blower fan motor is operated.	Does the blower fan motor operate?	Go to step **5.**	Replace the blower fan motor.
5	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

C: COMPARTMENT TEMPERATURE IS NOT CHANGED OR A/C SYSTEM DOES NOT RESPOND QUICKLY

WIRING DIAGRAM:

- FOR LHD DOHC TURBO MODEL

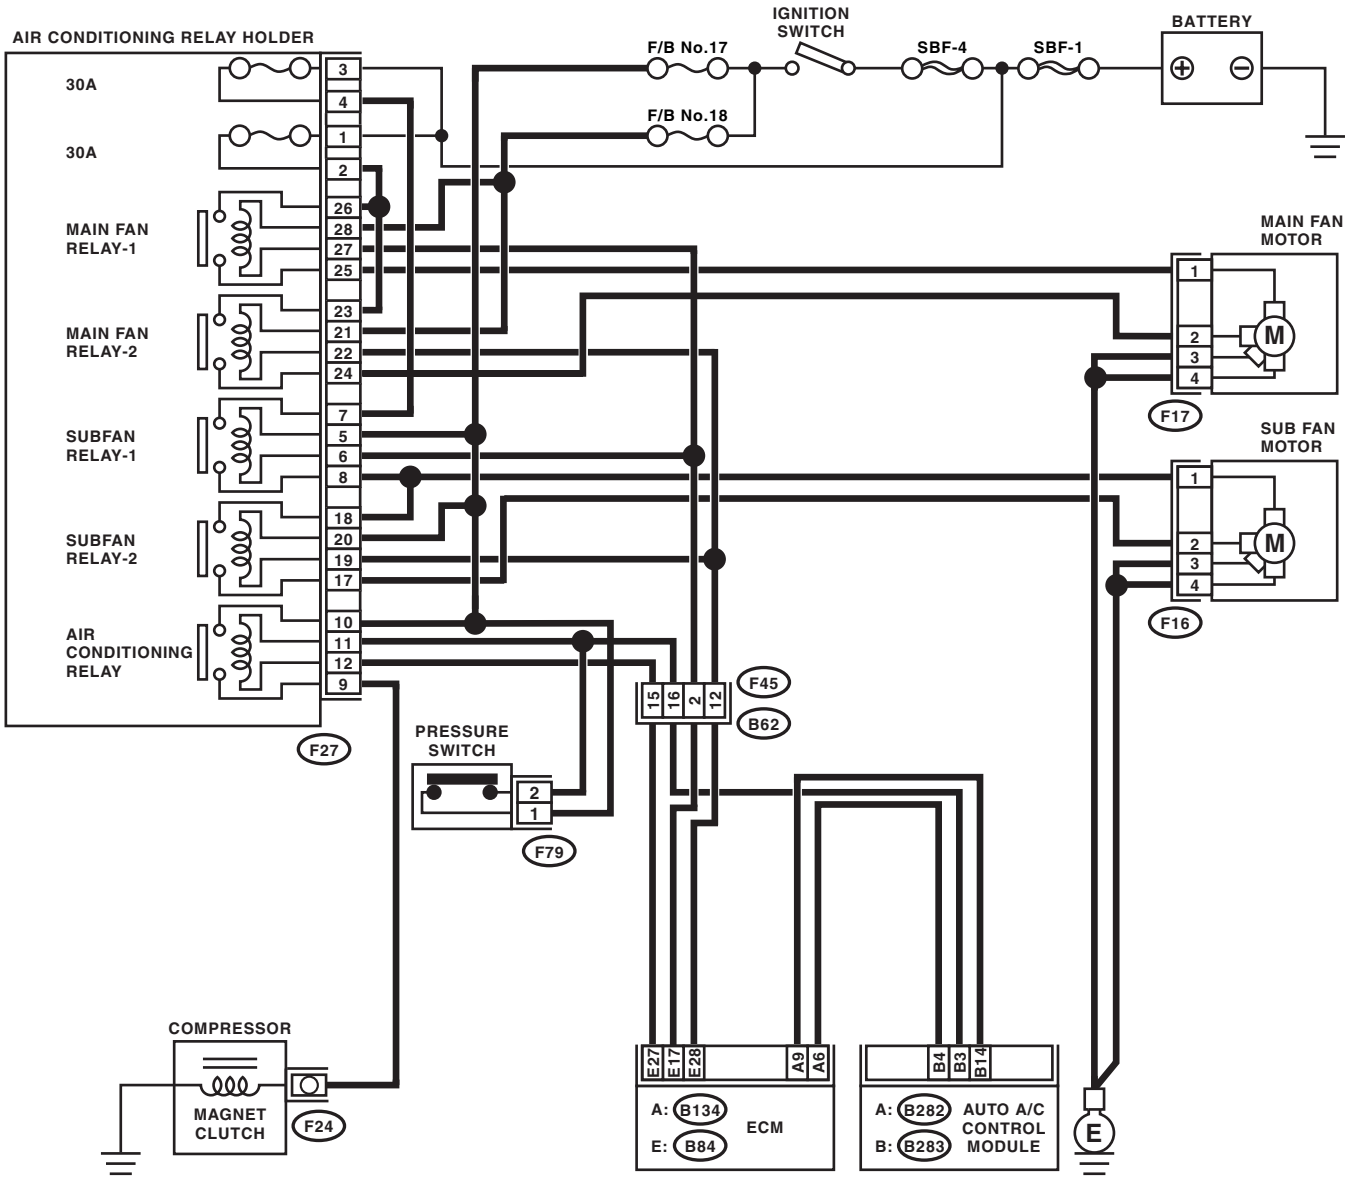

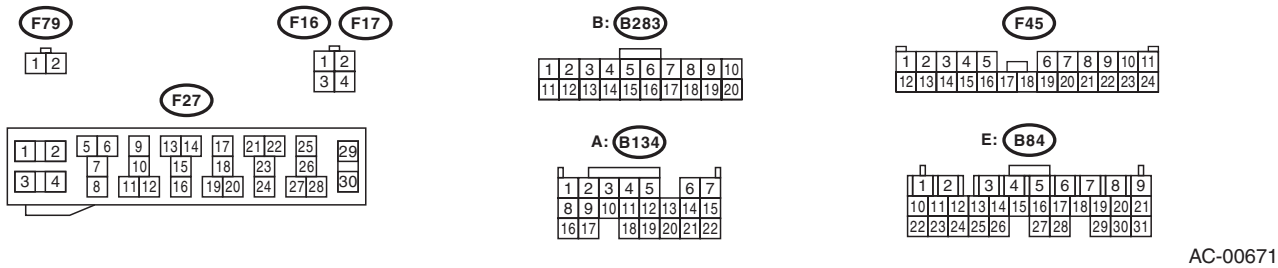

AC-00671

WIRING DIAGRAM:

- FOR RHD DOHC TURBO MODEL

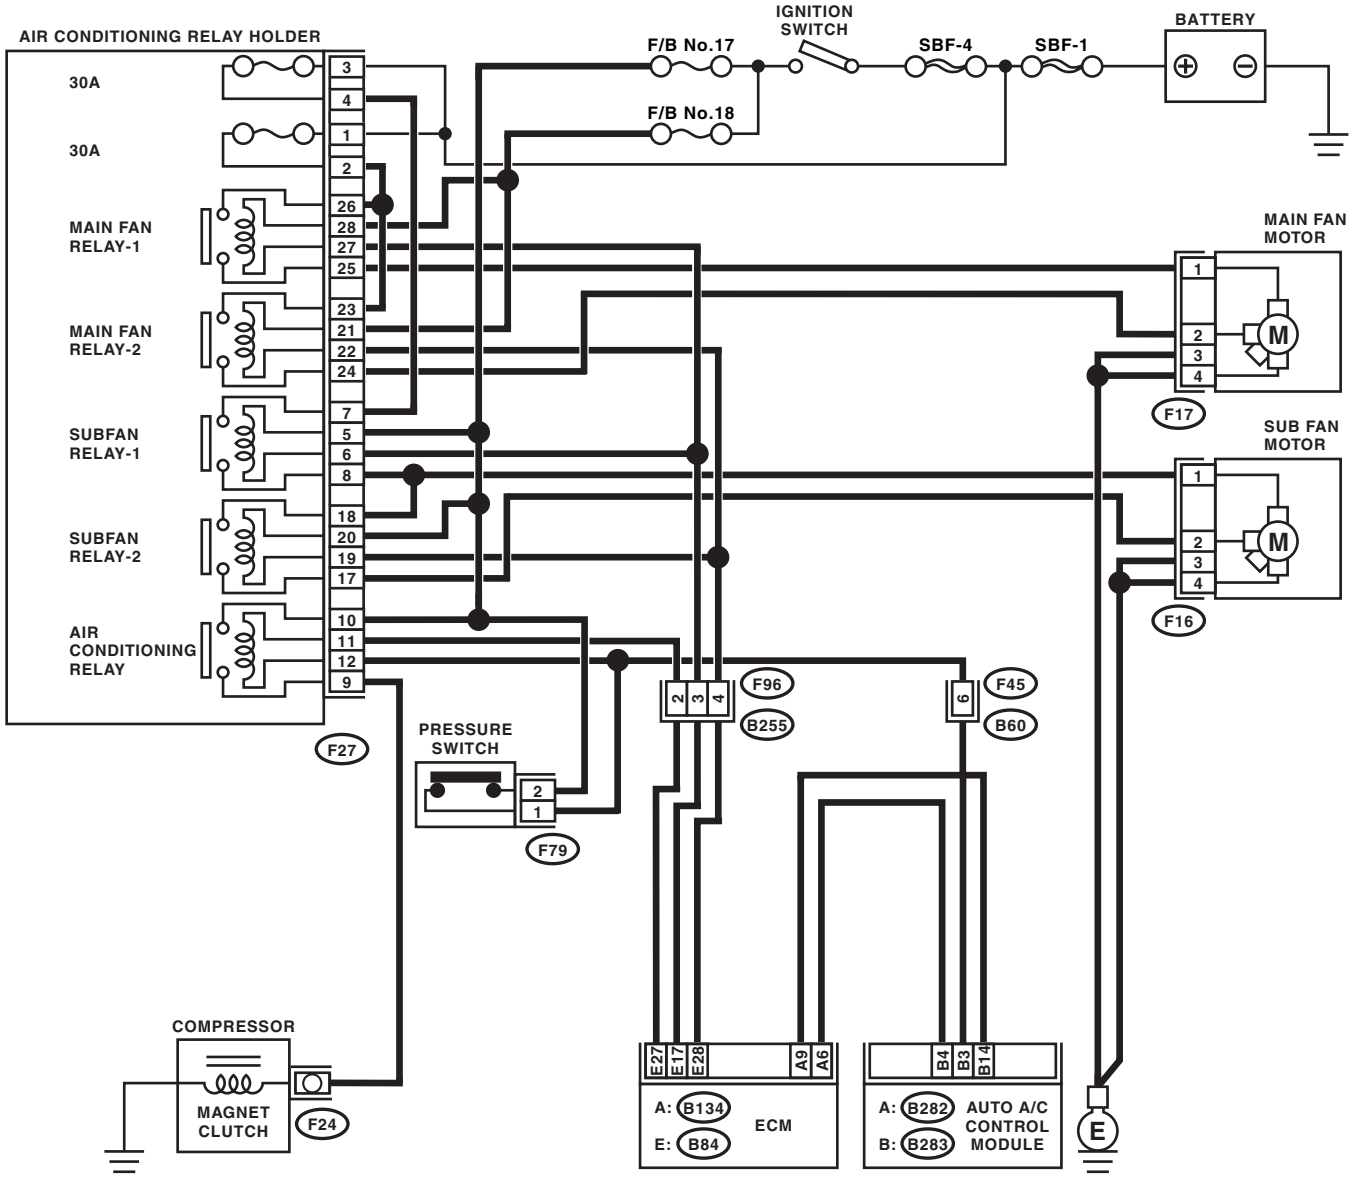

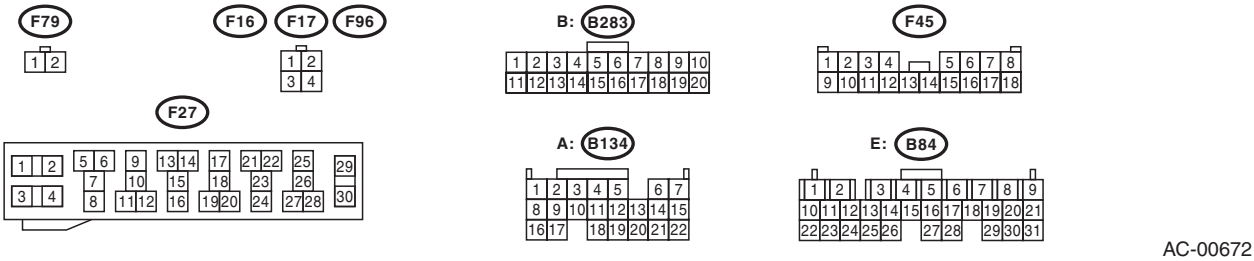

AC-00672

WIRING DIAGRAM:

- FOR LHD SOHC MODEL

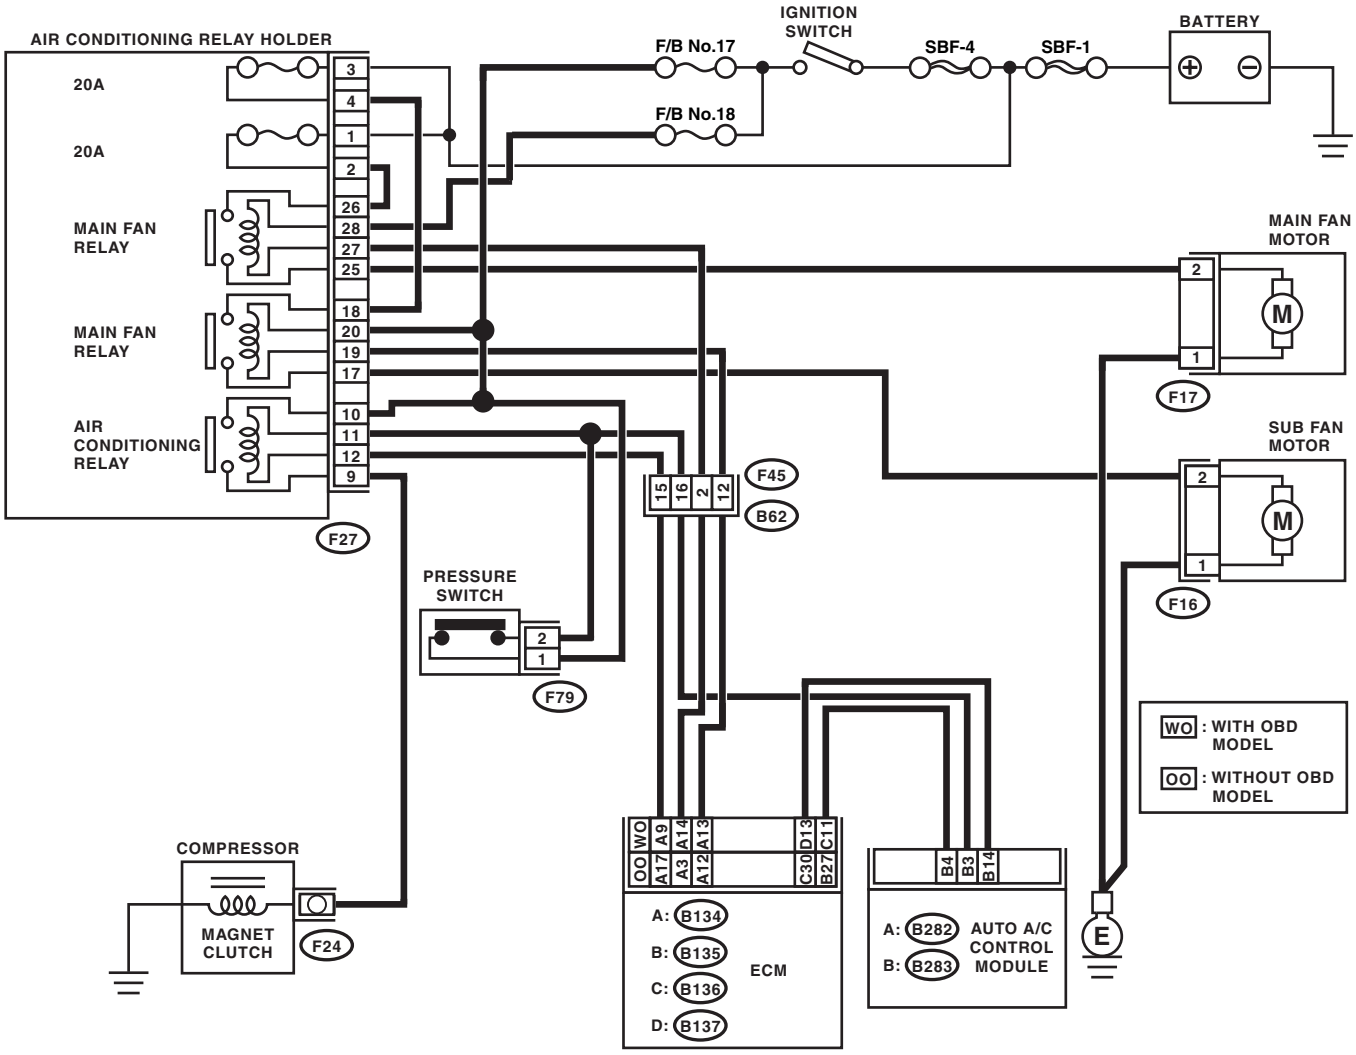

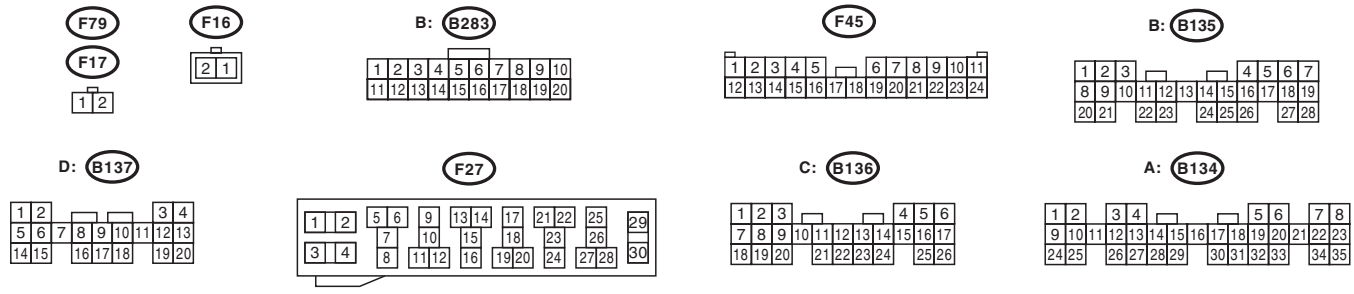

AC-00673

WIRING DIAGRAM:

- FOR RHD SOHC MODEL

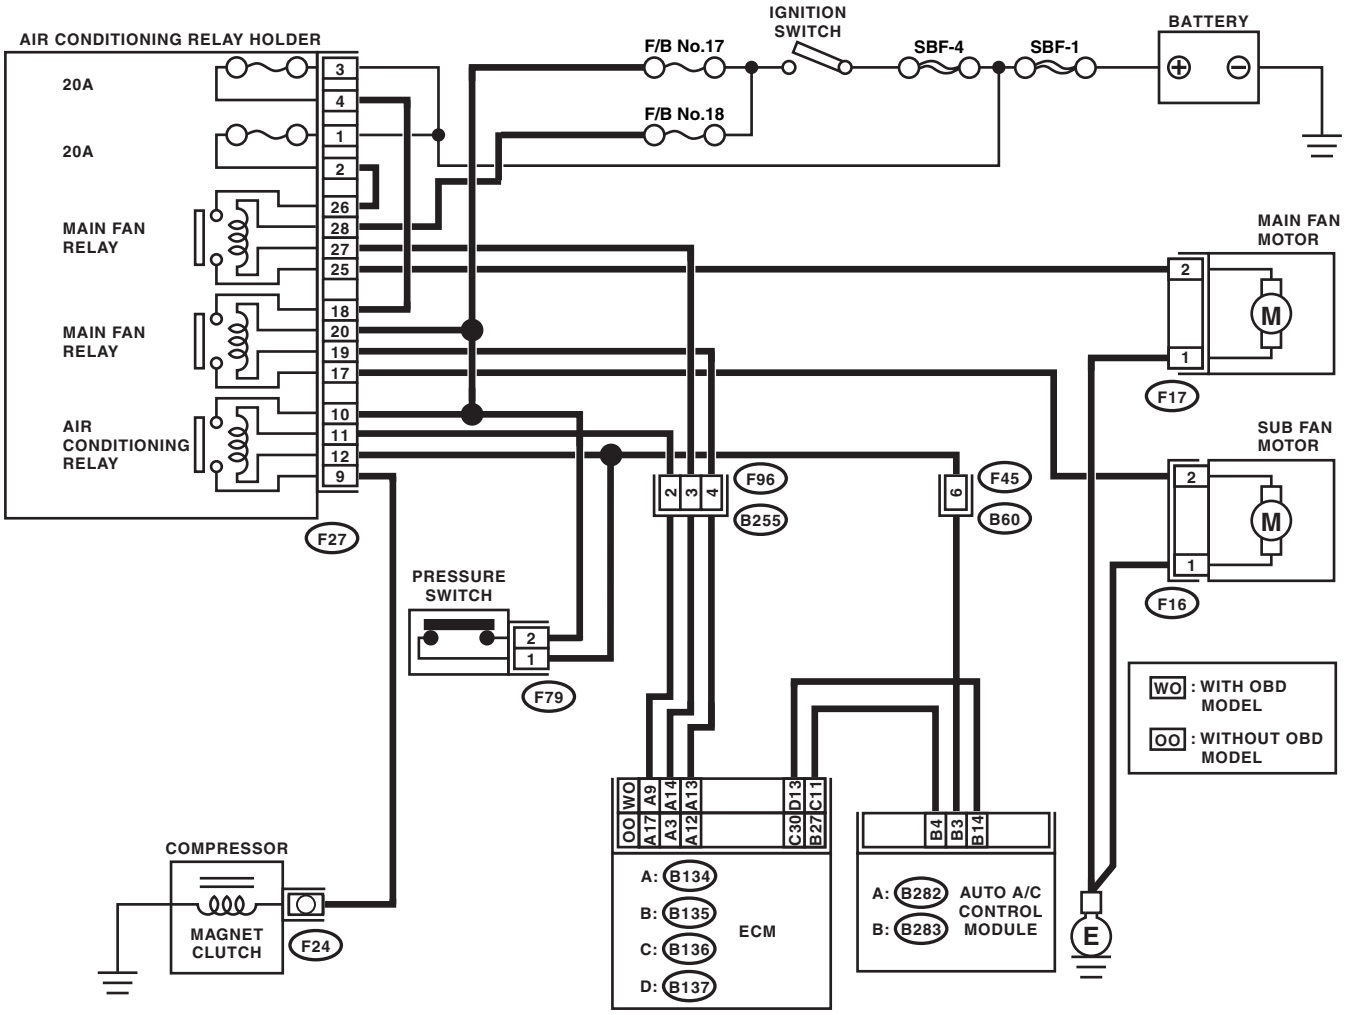

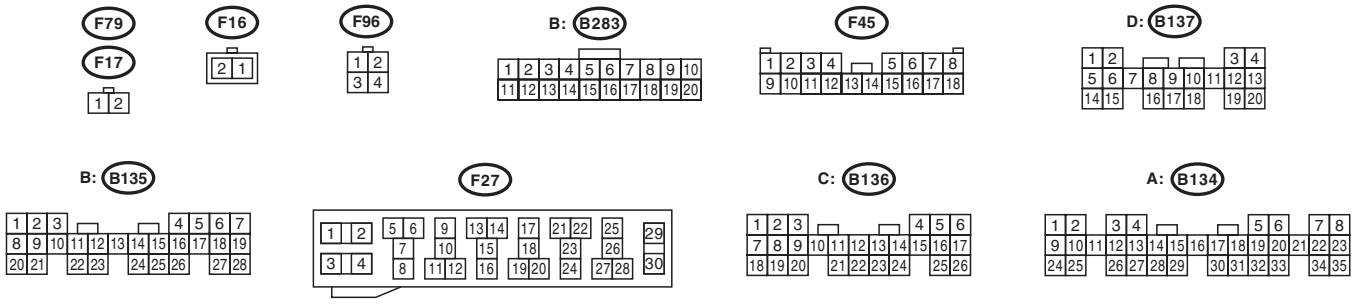

AC-00674

	Step	Check	Yes	No
1	**CHECK FUSE.** 1)Turn the ignition switch to OFF. 2)Remove the No. 2 fuse in main fuse box. 3)Check the condition of fuse.	Is the fuse blown-out?	Replace the fuse.	Go to step **2.**
2	**CHECK POWER SUPPLY TO MAGNET CLUTCH OF A/C COMPRESSOR.** 1)Start the engine, and turn A/C switch to ON. 2)Set the temperature control dial to maximum cold position. 3)Measure the voltage between magnet clutch connector and chassis ground. ***Connector & terminal*** ***(F24) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the open circuit in harness for power supply line of the A/C compressor.
3	**CHECK SIGNAL VOLTAGE TO A/C RELAY.** 1)Turn the ignition switch to ON. 2)Turn the A/C switch to ON. 3)Measure the signal voltage between A/C relay and chassis ground. ***Connector & terminal*** ***(F27) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Repair the open circuit in harness for A/C relay signal circuit.
4	**CHECK A/C RELAY.** 1)Remove the A/C relay in main fuse box. 2)Check the A/C relay. <Ref. to AC-38, INSPECTION, Relay and Fuse.>	Is the operation of the relay OK?	Go to step **5.**	Replace the A/C relay.
5	**CHECK OPERATION OF MAIN FAN MOTOR.** 1)Start the engine. 2)Turn the A/C switch to ON. 3)Check the operation of main fan motor.	Does the radiator main fan operate?	Go to step **10.**	Go to step **6.**
6	**CHECK POWER SUPPLY TO MAIN FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from main fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 95°C (203°F). 4)Stop the engine and turn ignition switch to ON. 5)Measure the voltage between main fan motor connector and chassis ground. ***Connector & terminal*** ***DOHC Turbo model:*** ***(F17) No. 1, 2 (+) — Chassis ground (−):*** ***Non-turbo model:*** ***(F17) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **7.**	Repair the open circuit in harness for power supply circuit.
7	**CHECK GROUND CIRCUIT OF MAIN FAN MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between main fan motor connector and chassis ground. ***Connector & terminal*** ***DOHC Turbo model:*** ***(F17) No. 3, 4 — Chassis ground:*** ***SOHC model:*** ***(F17) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **8.**	Repair the open circuit in harness between main fan motor connector and chassis ground.

	Step	Check	Yes	No
8	**CHECK POOR CONTACT.** Check poor contact in main fan motor connector.	Is there poor contact in main fan motor connector?	Repair the poor contact in main fan motor connector.	Go to step **9.**
9	**CHECK MAIN FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 1 and 2 (DOHC turbo model) or No.2 (SOHC model), and negative (−) terminal to terminal No. 3 and 4 (DOHC turbo model) or No.1 (SOHC model).	Does the main fan rotate?	Repair the poor contact in main fan motor connector.	Replace the main fan motor with a new one.
10	**CHECK OPERATION OF SUB FAN MOTOR.** Check the operation of sub fan motor.	Does the radiator sub fan operate?	Go to step **15.**	Go to step **11.**
11	**CHECK POWER SUPPLY TO SUB FAN MOTOR.** **CAUTION:** **Be careful not to overheat the engine during repair.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from sub fan motor. 3)Start the engine, and warm it up until engine coolant temperature increases over 100°C (212°F). 4)Stop the engine and turn the ignition switch to ON. 5)Measure the voltage between sub fan motor connector and chassis ground. ***Connector & terminal*** ***DOHC Turbo model:*** ***(F16) No. 1, 2 (+) — Chassis ground (−):*** ***SOHC model:*** ***(F16) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **12.**	Repair the open circuit in harness for power supply circuit.
12	**CHECK GROUND CIRCUIT OF SUB FAN MOTOR.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between sub fan motor connector and chassis ground. ***Connector & terminal*** ***DOHC Turbo model:*** ***(F16) No. 3, 4 — Chassis ground:*** ***SOHC model:*** ***(F16) No. 1 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **13.**	Repair the open circuit in harness between sub fan motor connector and chassis ground.
13	**CHECK POOR CONTACT.** Check poor contact in sub fan motor connector.	Is there poor contact in sub fan motor connector?	Repair the poor contact in sub fan motor connector.	Go to step **14.**
14	**CHECK SUB FAN MOTOR.** Connect the battery positive (+) terminal to terminal No. 1 and 2 (DOHC turbo model) or No.2 (SOHC model), and negative (−) terminal to terminal No. 3 and 4 (DOHC turbo model) or No.1 (SOHC model).	Does the sub fan rotate?	Repair the poor contact in sub fan motor connector.	Replace the sub fan motor with a new one.
15	**CHECK EACH SENSOR AND POTENTIOMETER.** Check the sensors and potentiometer for proper operation using the self-diagnostic function. <Ref. to AC-9, Diagnostics Chart for Self-diagnosis.>	Is the operation of each sensor and potentiometer normal?	Go to step **16.**	Check the sensor and circuit. <Ref. to AC-29, Diagnostic Procedure for Sensors.>

Step		Check	Yes	No
16	**CHECK CONNECTION OF ASPIRATOR DUCT.** Make sure the connection of aspirator duct is correct.	Is the connection of aspirator duct correct?	Repair the aspirator duct connection.	Go to step **17.**
17	**CHECK EACH ACTUATOR.** Check the actuators for proper operation using the self-diagnostic function. <Ref. to AC-9, Diagnostics Chart for Self-diagnosis.>	Is the operation of each actuator normal?	Go to step **18.**	Check the actuator and circuit. <Ref. to AC-23, Diagnostic Procedure for Actuators.>
18	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

7. Diagnostic Procedure for Actuators

A: INTAKE DOOR ACTUATOR

TROUBLE SYMPTOM:

FRESH/RECIRC mode is not changed.

WIRING DIAGRAM:

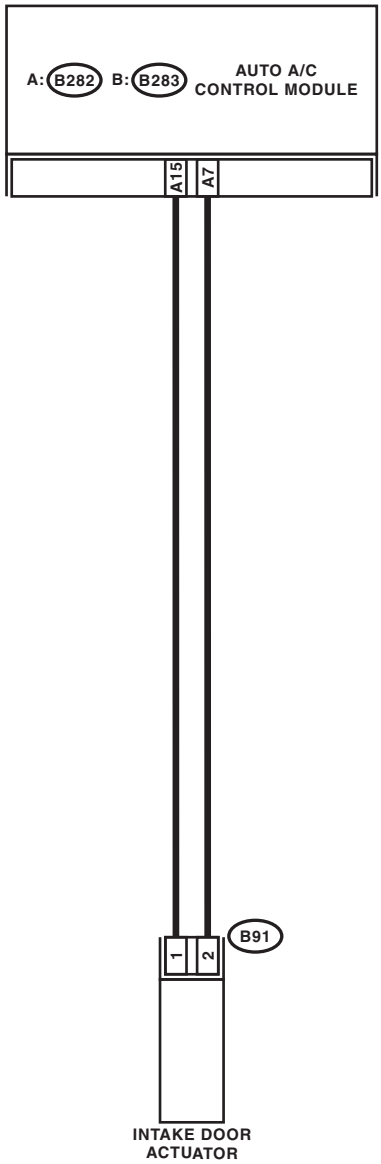



AC-00675

DIAGNOSTIC PROCEDURE FOR ACTUATORS

	Step	Check	Yes	No
1	**CHECK FUSE.** 1)Remove the No. 17 fuse in fuse & relay box. 2)Check the condition of fuse.	Is the fuse blown-out?	Replace the fuse.	Go to step **2.**
2	**CHECK SIGNAL VOLTAGE.** 1)Change the air intake to RECIRC by pushing FRESH/RECIRC switch. 2)Measure the voltage between A/C control module and chassis ground. ***Connector & terminal*** ***(B282) No. 15 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **3.**	Repair the short circuit in harness for power supply line.
3	**CHECK SIGNAL VOLTAGE.** 1)Change the air intake to FRESH with pushing FRESH/RECIRC switch. 2)Measure the voltage between A/C control module and chassis ground. ***Connector & terminal*** ***(B282) No. 7 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Go to step **4.**	Repair the short circuit in harness for power supply line.
4	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND FRESH/RECIRC ACTUATOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from A/C control module and intake door actuator. 3)Measure the resistance of harness between A/C control module and intake door actuator. ***Connector & terminal*** ***(B282) No. 15 — (B91) No. 1:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between A/C control module and intake door actuator.
5	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND FRESH/RECIRC ACTUATOR.** Measure the resistance of harness between A/C control module and intake door actuator. ***Connector & terminal*** ***(B282) No. 7 — (B91) No. 2:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between A/C control module and intake door actuator.
6	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

B: MODE DOOR ACTUATOR

TROUBLE SYMPTOM:

Air flow outlet is not changed.

WIRING DIAGRAM:

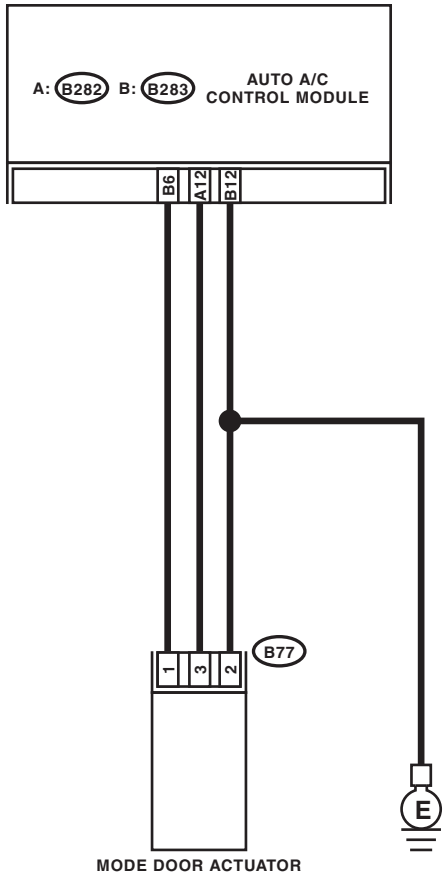

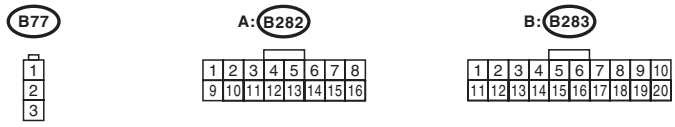

AC-00676

DIAGNOSTIC PROCEDURE FOR ACTUATORS

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY FOR AUTO A/C CONTROL MODULE SIDE.** 1)Turn the ignition switch to ON. 2)Turn the A/C switch to ON. 3)Measure the voltage between auto A/C control module harness connector terminal and chassis ground. ***Connector & terminal*** ***(B283) No. 6 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Replace the auto A/C control module.
2	**CHECK POWER SUPPLY FOR ACTUATOR SIDE.** Measure the voltage between mode door actuator harness connector terminal and chassis ground. ***Connector & terminal*** ***(B77) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the open circuit in harness between auto A/C control module and mode door actuator.
3	**CHECK SIGNAL FOR AUTO A/C CONTROL MODULE SIDE.** Measure the voltage between auto A/C control module harness connector terminal and chassis ground with oscilloscope. ***Connector & terminal*** ***(B282) No. 12 (+) — Chassis ground (−):***	Is the voltage approx. 5.5 V?	Go to step **4.**	Replace the auto A/C control module.
4	**CHECK SIGNAL FOR ACTUATOR SIDE.** Measure the voltage between mode door actuator harness connector terminal and chassis ground. ***Connector & terminal*** ***(B77) No. 3 (+) — Chassis ground (−):***	Is the voltage approx. 5.5 V?	Go to step **5.**	Repair the open circuit in harness between auto A/C control module and mode door actuator.
5	**CHECK GROUND CIRCUIT OF ACTUATOR.** 1)Turn the ignition switch and A/C switch to OFF. 2)Measure the resistance between mode door actuator harness connector terminal and chassis ground. ***Connector & terminal*** ***(B77) No. 2 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between mode door actuator and chassis ground.
6	**CHECK POOR CONTACT.** Check poor contact in auto A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

C: AIR MIX DOOR ACTUATOR

TROUBLE SYMPTOM:

Outlet air temperature is not changed.

WIRING DIAGRAM:

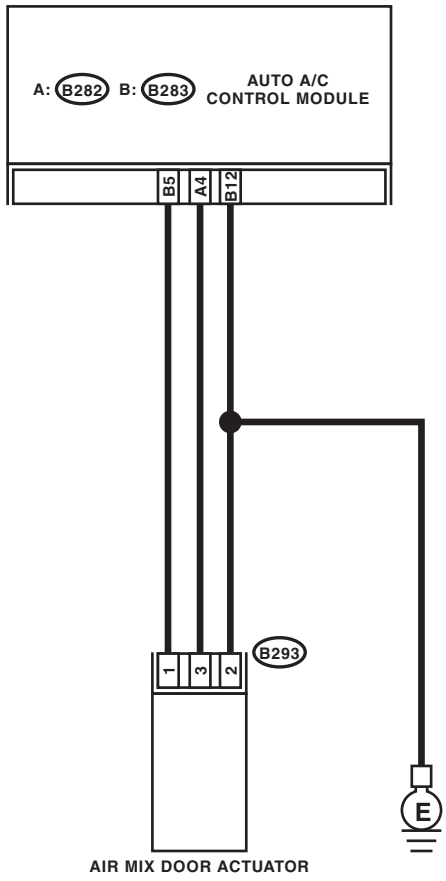

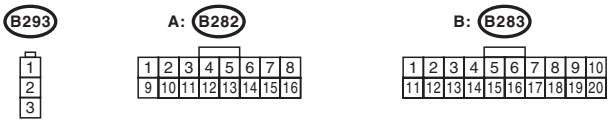

AC-00677

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY FOR AUTO A/C CONTROL MODULE SIDE.** 1)Turn the ignition switch to ON. 2)Turn the A/C switch to ON. 3)Measure the voltage between auto A/C control module harness connector terminal and chassis ground. ***Connector & terminal*** ***(B283) No. 5 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Replace the auto A/C control module.
2	**CHECK POWER SUPPLY FOR ACTUATOR SIDE.** Measure the voltage between air mix door actuator harness connector terminal and chassis ground. ***Connector & terminal*** ***(B293) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the open circuit in harness between auto A/C control module and air mix door actuator.
3	**CHECK SIGNAL FOR AUTO A/C CONTROL MODULE SIDE.** Measure the voltage between auto A/C control module harness connector terminal and chassis ground with oscilloscope. ***Connector & terminal*** ***(B282) No. 4 (+) — Chassis ground (−):***	Is the voltage approx. 5.5 V?	Go to step **4.**	Replace the auto A/C control module.
4	**CHECK SIGNAL FOR ACTUATOR SIDE.** Measure the voltage between air mix door actuator harness connector terminal and chassis ground with oscilloscope. ***Connector & terminal*** ***(B293) No. 3 (+) — Chassis ground (−):***	Is the voltage approx. 5.5 V?	Go to step **5.**	Repair the open circuit in harness between auto A/C control module and air mix door actuator.
5	**CHECK GROUND CIRCUIT OF ACTUATOR.** 1)Turn the ignition switch and A/C switch to OFF. 2)Measure the resistance between air mix door actuator harness connector terminal and chassis ground. ***Connector & terminal*** ***(B293) No. 2 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between air mix door actuator and chassis ground.
6	**CHECK POOR CONTACT.** Check poor contact in auto A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

8. Diagnostic Procedure for Sensors

A: AMBIENT SENSOR

TROUBLE SYMPTOM:

Fan speed is not switched when the fan speed control dial is in AUTO position.

WIRING DIAGRAM:

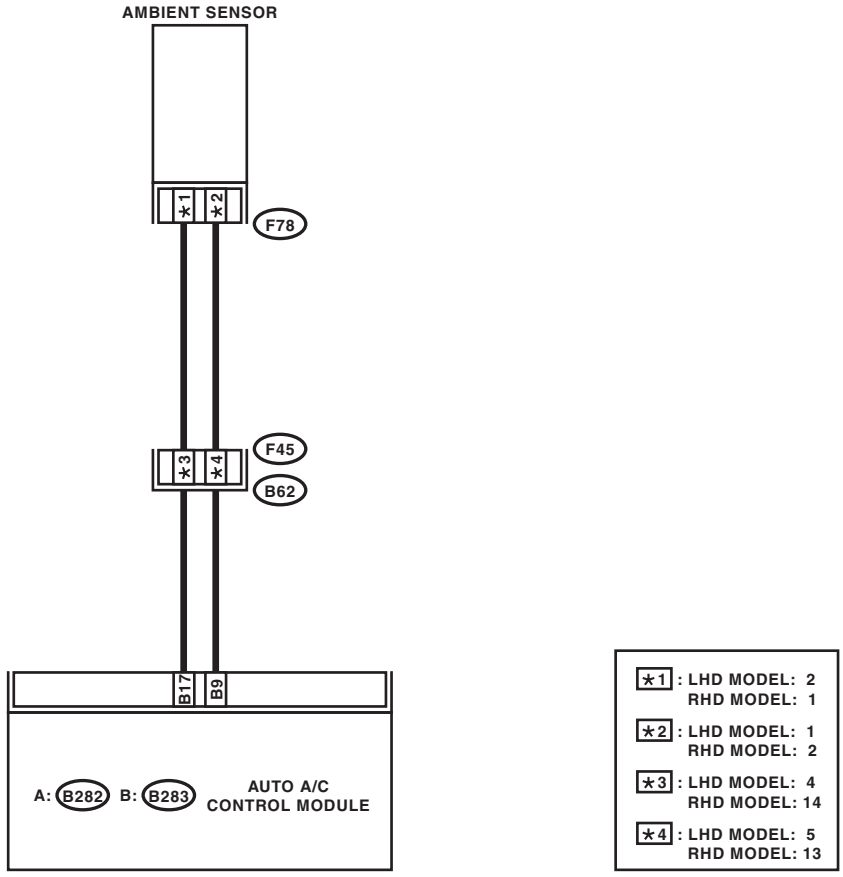



AC-00678

	Step	Check	Yes	No
1	**CHECK AMBIENT SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ambient sensor. 3)Measure the resistance between connector terminals of ambient sensor. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance approx. 2.2 kΩ at 25°C (77°F)?	Go to step **2.**	Replace the ambient sensor.
2	**CHECK INPUT SIGNALS FOR AMBIENT SENSOR.** 1)Turn the ignition ON. 2)Measure the voltage between (F78) connector terminals. ***Connector & terminal*** ***LHD model:*** ***(F78) No. 1 (+) — No. 2 (–):*** ***RHD model:*** ***(F78) No. 2 (+) — No. 1 (–):***	Is the voltage approx. 5 V?	Go to step **6.**	Go to step **3.**
3	**CHECK OUTPUT SIGNALS FROM A/C CONTROL MODULE.** 1)Turn the ignition switch to OFF. 2)Pull out the A/C control unit. 3)Disconnect the connector from ambient sensor. 4)Turn the ignition switch to ON. 5)Measure the voltage between connector terminals of A/C control module. ***Connector & terminal*** ***(B283) No. 9 (+) — No. 17 (–):***	Is the voltage approx. 5 V?	Go to step **4.**	Go to step **6.**
4	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND AMBIENT SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from A/C control module. 3)Measure the resistance of harness between A/C control module and ambient sensor. ***Connector & terminal*** ***LHD model:*** ***(F78) No. 1 — (B283) No. 9:*** ***RHD model:*** ***(F78) No. 2 — (B283) No. 9:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between A/C control module and ambient sensor.
5	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND AMBIENT SENSOR.** Measure the resistance of harness between A/C control module and ambient sensor. ***Connector & terminal*** ***LHD model:*** ***(F78) No. 2 — (B283) No. 17:*** ***RHD model:*** ***(F78) No. 1 — (B283) No. 17:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between A/C control module and ambient sensor.
6	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

B: IN-VEHICLE SENSOR

TROUBLE SYMPTOM:

- When turning the AUTO switch to ON, blower fan speed, outlet port and inlet port is not changed.
- If the switch LED indicates that the sensor is malfunctioning, replace the A/C control module. The in-vehicle sensor is built into the A/C control module and cannot be replaced as a single unit.

C: EVAPORATOR SENSOR

WIRING DIAGRAM:

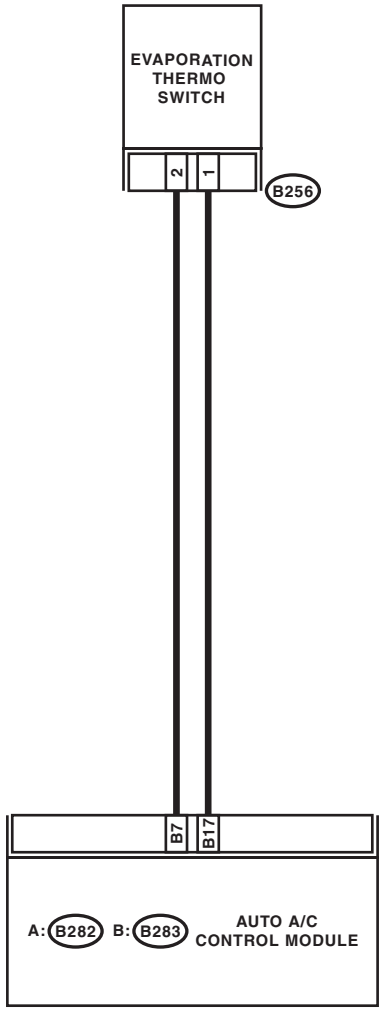



AC-00679

DIAGNOSTIC PROCEDURE FOR SENSORS

	Step	Check	Yes	No
1	**CHECK EVAPORATOR SENSOR.** 1)Turn the ignition switch to OFF. 2)Remove the glove box. 3)Disconnect the connector from evaporator sensor. 4)Measure the resistance between connector terminals of evaporator sensor. ***Terminals*** ***No. 1 — No. 2***	Is the resistance approx. 3.3 kΩ at 20°C (68°F)?	Go to step **2.**	Replace the evaporator sensor.
2	**CHECK INPUT SIGNALS FOR EVAPORATOR SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between (B88) connector terminal and chassis ground. ***Connector & terminal*** ***(B256) No. 2 (+) — Chassis ground (−):***	Is the voltage approx. 5 V?	Go to step **6.**	Go to step **3.**
3	**CHECK OUTPUT SIGNALS FROM A/C CONTROL MODULE.** 1)Turn the ignition switch to OFF. 2)Pull out the A/C control module. 3)Turn the ignition switch to ON. 4)Measure the voltage between A/C control module connector terminals. ***Connector & terminal*** ***(B283) No. 7 (+) — No. 17 (−):***	Is the voltage approx. 5 V?	Go to step **4.**	Go to step **6.**
4	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND EVAPORATOR SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from A/C control module. 3)Measure the resistance of harness between A/C control module and evaporator sensor. ***Connector & terminal*** ***(B256) No. 2 — (B283) No. 7:***	Is the resistance less than 1 Ω?	Go to step **5.**	Repair the open circuit in harness between A/C control module and evaporator sensor.
5	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND EVAPORATOR SENSOR.** Measure the resistance of harness between A/C control module and evaporator sensor. ***Connector & terminal*** ***(B256) No. 1 — (B283) No. 17:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit in harness between A/C control module and evaporator sensor.
6	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

D: SUNLOAD SENSOR

TROUBLE SYMPTOM:

- Sensor identified that sunlight is at maximum. Then, A/C system is controlled to COOL side.
- Sensor identified that sunlight is at minimum. Then, A/C system is controlled to HOT side.

NOTE:
When the sunload sensor is checked indoors or in the shade, open circuit might be indicated. Always check the sunload sensor at a place where sun shines directly on it.

WIRING DIAGRAM:

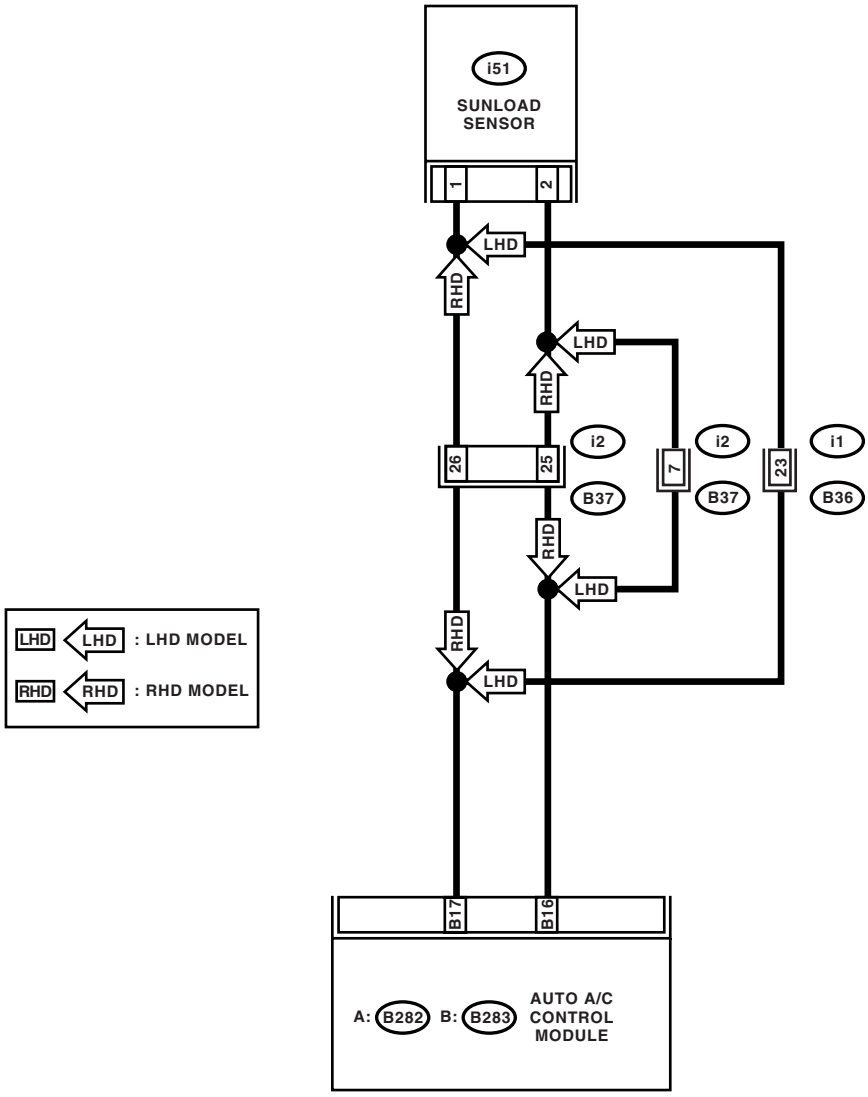

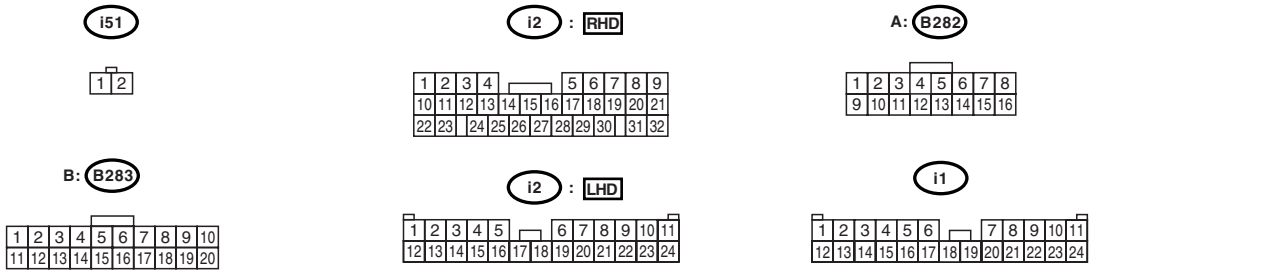

AC-00680

	Step	Check	Yes	No
1	**CHECK INPUT VOLTAGE TO SUNLOAD SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the input voltage to sunload sensor. ***Connector & terminal*** ***(i51) No. 2 (+) — Chassis ground (−):***	Is the voltage approx. 5 V?	Go to step **3.**	Go to step **2.**
2	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND SUNLOAD SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connectors from A/C control module. 3)Measure the resistance of harness between A/C control module and sunload sensor. ***Connector & terminal*** ***(i51) No. 2 — (B283) No. 16:***	Is the resistance less than 1 Ω?	Go to step **3.**	Repair the harness between A/C control module and sunload sensor.
3	**CHECK HARNESS CONNECTOR BETWEEN A/C CONTROL MODULE AND SUNLOAD SENSOR.** Measure the resistance of harness between A/C control module and sunload sensor. ***Connector & terminal*** ***(i51) No. 1 — (B283) No. 17:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the harness between A/C control module and sunload sensor.
4	**CHECK THE INPUT VOLTAGE TO A/C CONTROL MODULE.** 1)Connect the A/C control module connector. 2)Turn the ignition switch to ON. 3)Measure the voltage between A/C control module connector terminals. ***Connector & terminal*** ***(B283) No. 16 (+) — (B283) No. 17 (−):***	Is the voltage approx. 2.5 V?	Go to step **5.**	Replace the sunload sensor.
5	**CHECK POOR CONTACT.** Check poor contact in A/C control module connector.	Is there poor contact in connector?	Repair the connector.	Replace the A/C control module.

9. Symptom Related Diagnostic

A: GENERAL DIAGNOSTICS TABLE

Component parts \ Symptom	A/C system fails to operate.	Burned-out fuse.	Illumination does not dim at night.	Blower motor does not rotate or rotates erroneously.	A/C does not change from "Fresh" to "Recirc" or vise versa.	Air outlet cannot be switched.	Compartment temperature does not increase (No hot air is discharged).	Compartment temperature does not decrease (No cool air is discharged).	Compartment temperature is higher than or lower than the set value.	Compartment temperature does not quickly respond to the set value.	Condenser fan does not operate during A/C operation.
Fuses (M/B No. 5, F/B No. 17)	○	○	○	○							
Poor connector contacts	○	○	○	○	○	○	○	○			
Ground	○			○							
A/C control module	○		○	○	○	○	○	○	○		
Air mix door actuator and potentiometer (including links)							○	○	○	○	
Mode door actuator and potentiometer (including links)						○					
Intake door actuator and potentiometer (including links)					○						
Blower fan motor	○			○							
Blower fan relay	○			○							
A/C relay	○							○			
Magnet clutch	○							○			
Radiator fan motors (Main and sub)								○			○
Radiator fan relays (Main and sub)								○			○
Sensors (In-vehicle, ambient, water temperature, evaporator, sunload, etc.)	○ (Evaporator sensor)						○	○	○	○	
In-vehicle sensor aspirator duct							○	○	○	○	

AC-00681

AIRBAG SYSTEM

AB

		Page
1.	General Description	2
2.	Airbag Connector	8
3.	Inspection Locations After a Collision	10
4.	Driver's Airbag Module	12
5.	Passenger's Airbag Module	13
6.	Side Airbag Module	14
7.	Airbag Control Module	16
8.	Side Airbag Sensor	17
9.	Roll Connector	18
10.	Front Sub Sensor	19
11.	Disposal of Airbag Module (Deploying While Installed in Vehicle)	20
12.	Disposal of Airbag Module (Deploying After Removal from Vehicle)	24

1. General Description

A: COMPONENT

1. SRS AIRBAG

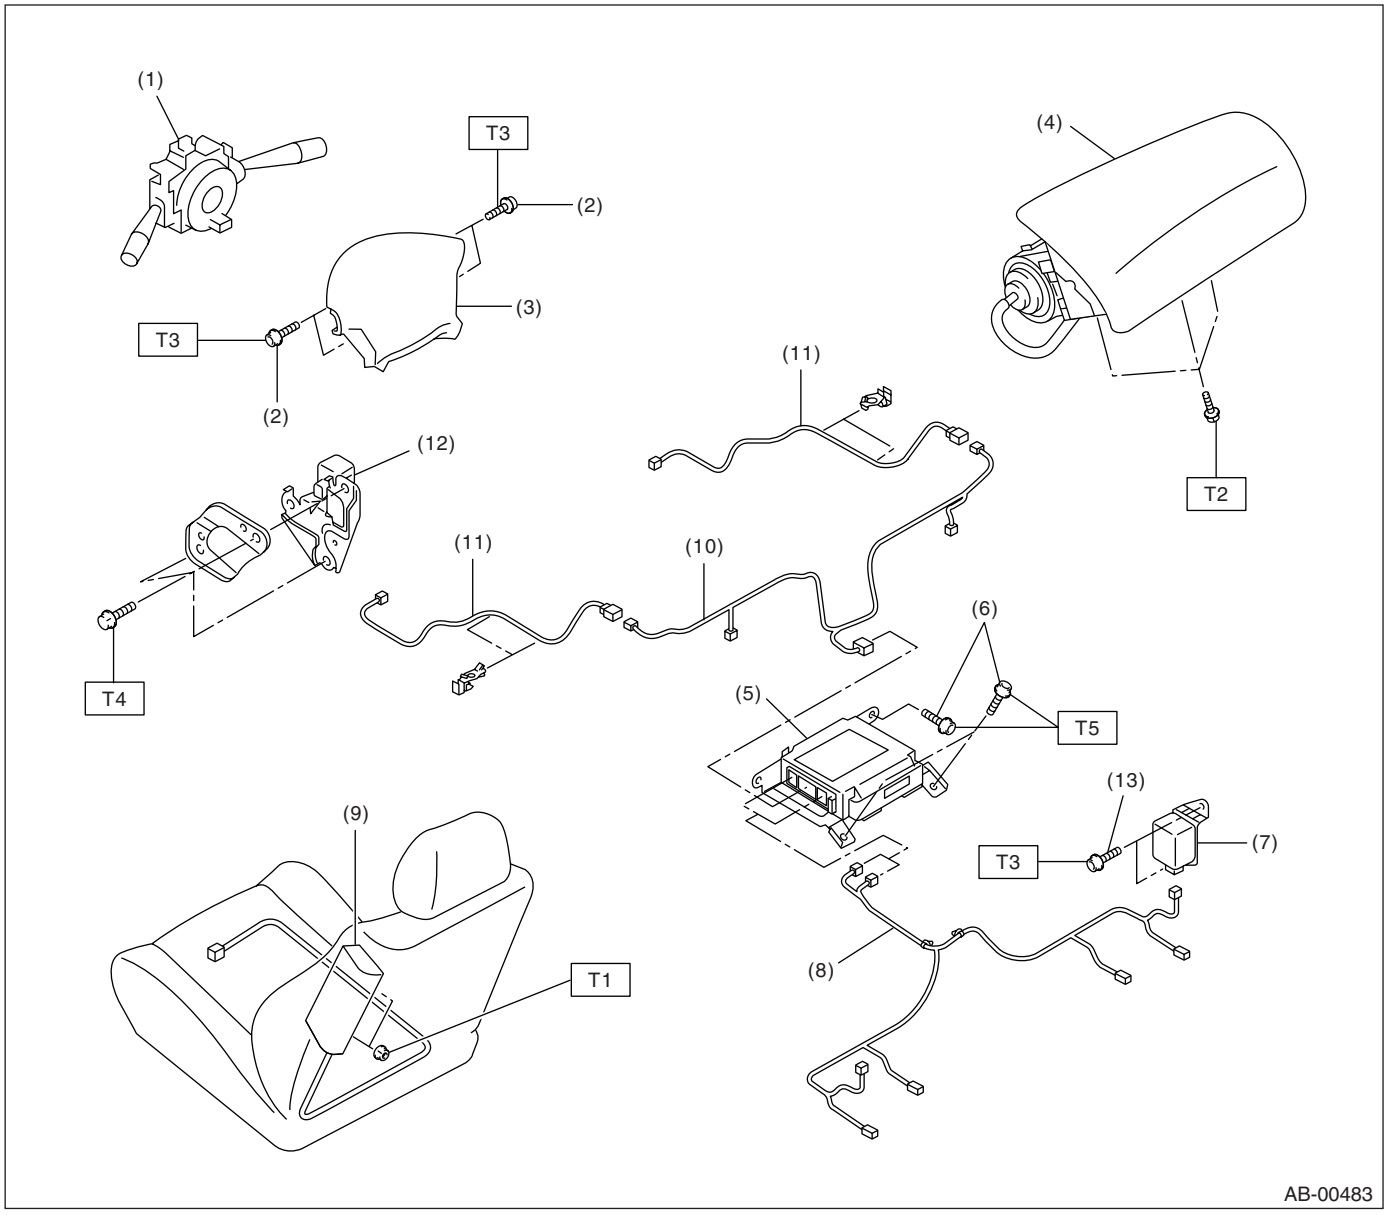

(1)	Combination switch ASSY with roll connector	(6)	TORX® bolt T40
(2)	TORX® bolt T30	(7)	Side airbag sensor
(3)	Airbag module ASSY (Driver's side)	(8)	Side airbag harness
(4)	Airbag module ASSY (Passenger's side)	(9)	Side airbag module
(5)	Airbag control module	(10)	Airbag main harness
		(11)	Front sub sensor harness
		(12)	Front sub sensor
		(13)	TORX® bolt T30

Tightening torque: N·m (kgf-m, ft-lb)

T1: 5.9 (0.59, 4.4)
T2: 7.4 (0.75, 5.4)
T3: 10 (1.0, 7.2)
T4: 20 (2.0, 14.5)
T5: 25 (2.5, 18.1)

B: CAUTION

• When servicing a vehicle, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
• The airbag system is fitted with a backup power source. If the airbag system is serviced within 20 seconds after the ground cable is disconnected, it may inflate.

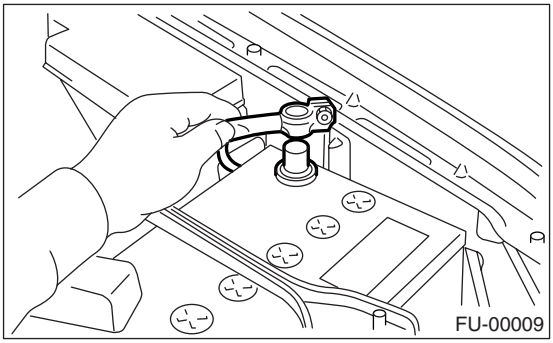

• If the airbag warning light illuminates, repair the vehicle immediately. Airbag or pretensioner may inflate incorrectly, or not inflate in collision.
• If sensors, airbag module, airbag control module, pretensioner, and harness are deformed or damaged, replace them with new genuine parts.

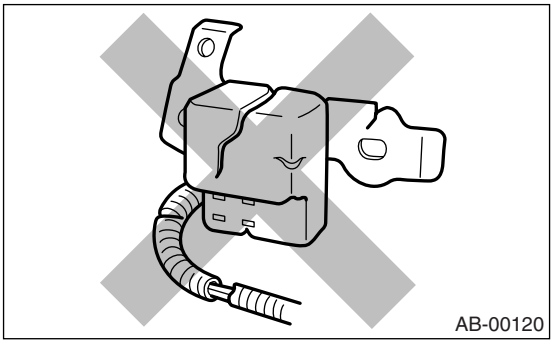

• When checking the airbag system, be sure to use a digital circuit tester.
Infinitesimal electric current in an analog circuit tester may cause the airbag to activate erroneously.

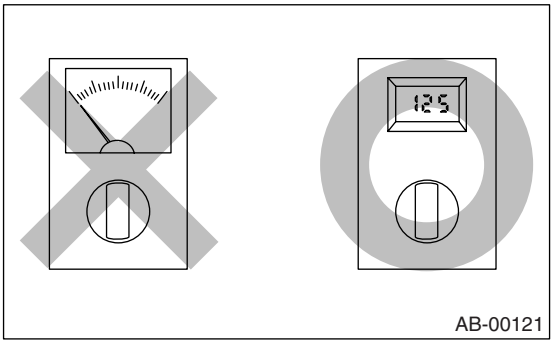

• When checking, use a test harness (1). Do not directly apply the tester probe to any connector terminal of the airbag. Damage to the connector terminal may cause the airbag to activate erroneously.

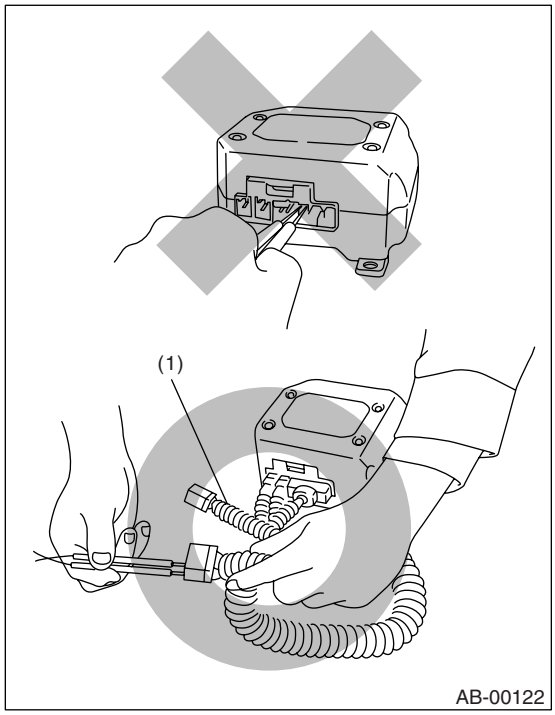

• Do not check continuity of either of the airbag modules for driver, passenger or side, or pretensioner.

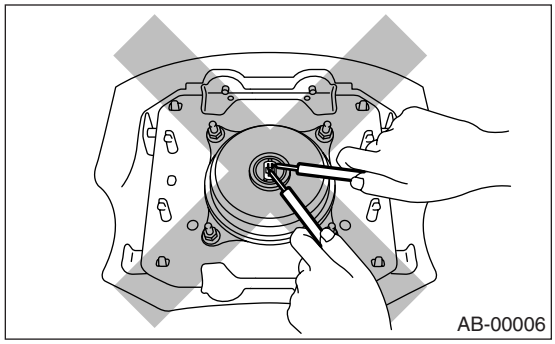

• Do not drop the airbag modulator parts, subject them to high temperature over 93°C (199°F), or let water, oil, or grease get on them; otherwise, the internal parts may be damaged and reliability greatly lowered.

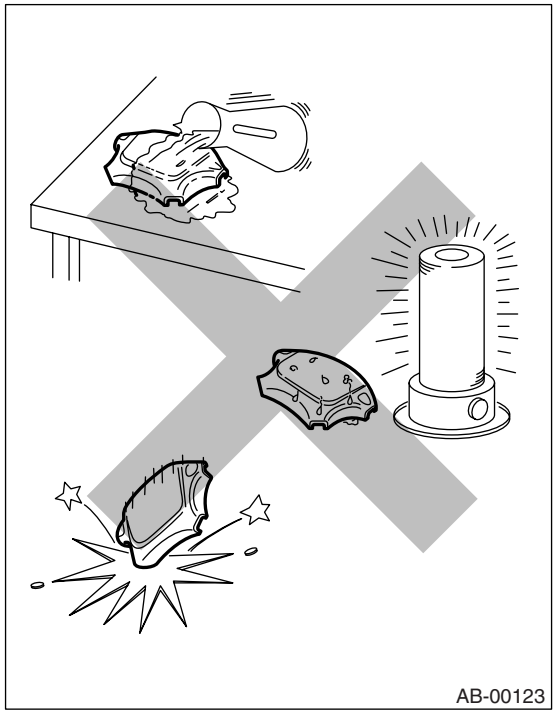
AB-00123

• If any damage, opening, or rust is found on the airbag system wire harness, do not attempt to repair using soldering equipment. Be sure to replace the faulty harness with a new genuine part.

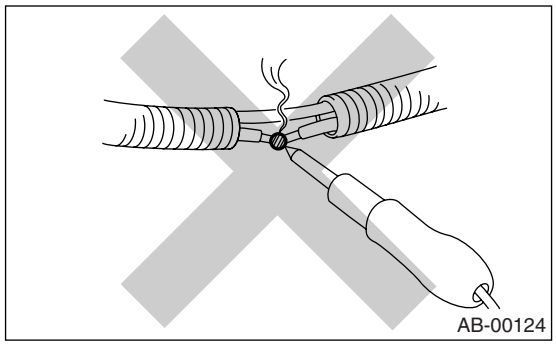
AB-00124

• Install the wire harness securely with the specified clips to avoid interference or tangled up with other parts.

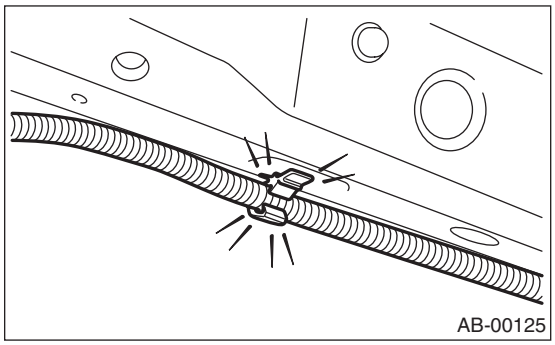
AB-00125

• Do not allow water or oil to come in contact with the connector terminals. Do not touch the connector terminals.

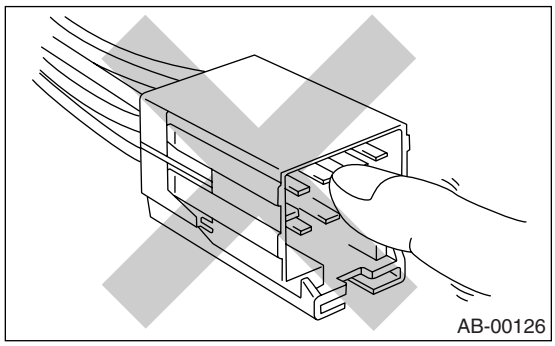
AB-00126

• Either of the airbag modules for driver, passenger or side, or pretensioner must not be disassembled.

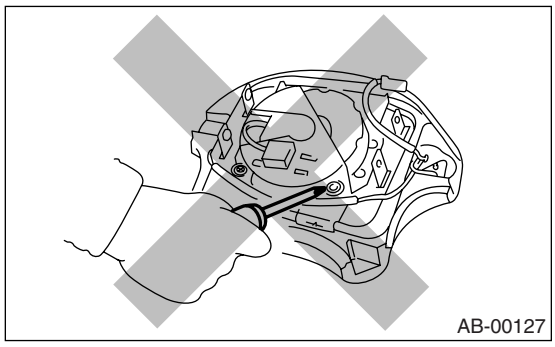
AB-00127

• The removed front seat with the airbag module must be kept at least 200 mm (8 in) away from walls and other objects.

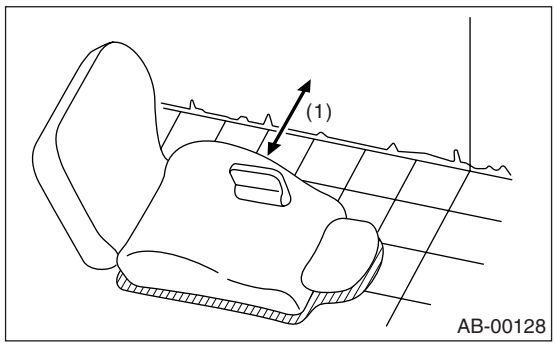

(1) More than 200 mm (8 in)

• Do not use the airbag or pretensioner parts from other vehicles. Always replace defective parts with new parts.
• Never reuse a deployed airbag or pretensioner.
• When painting or performing sheet metal work on the front part of the vehicle, including the front wheel apron, front fender, and front side frame, remove the front sub sensors and wire harness of the airbag system.
• When painting or performing sheet metal work on the side of the vehicle, including the side sill, center pillar, and front and rear doors, remove the side airbag sensors and wire harness of the airbag system.

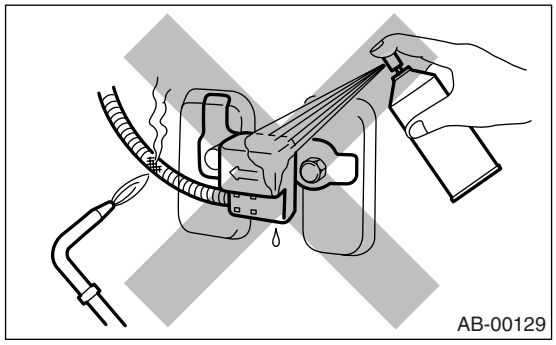

• When storing a removed airbag module, do not place any objects on it or pile airbag modules on top of each other. If the airbag inflates for some reason when it is placed with its pad side facing downward or under any object, a serious accident may result.

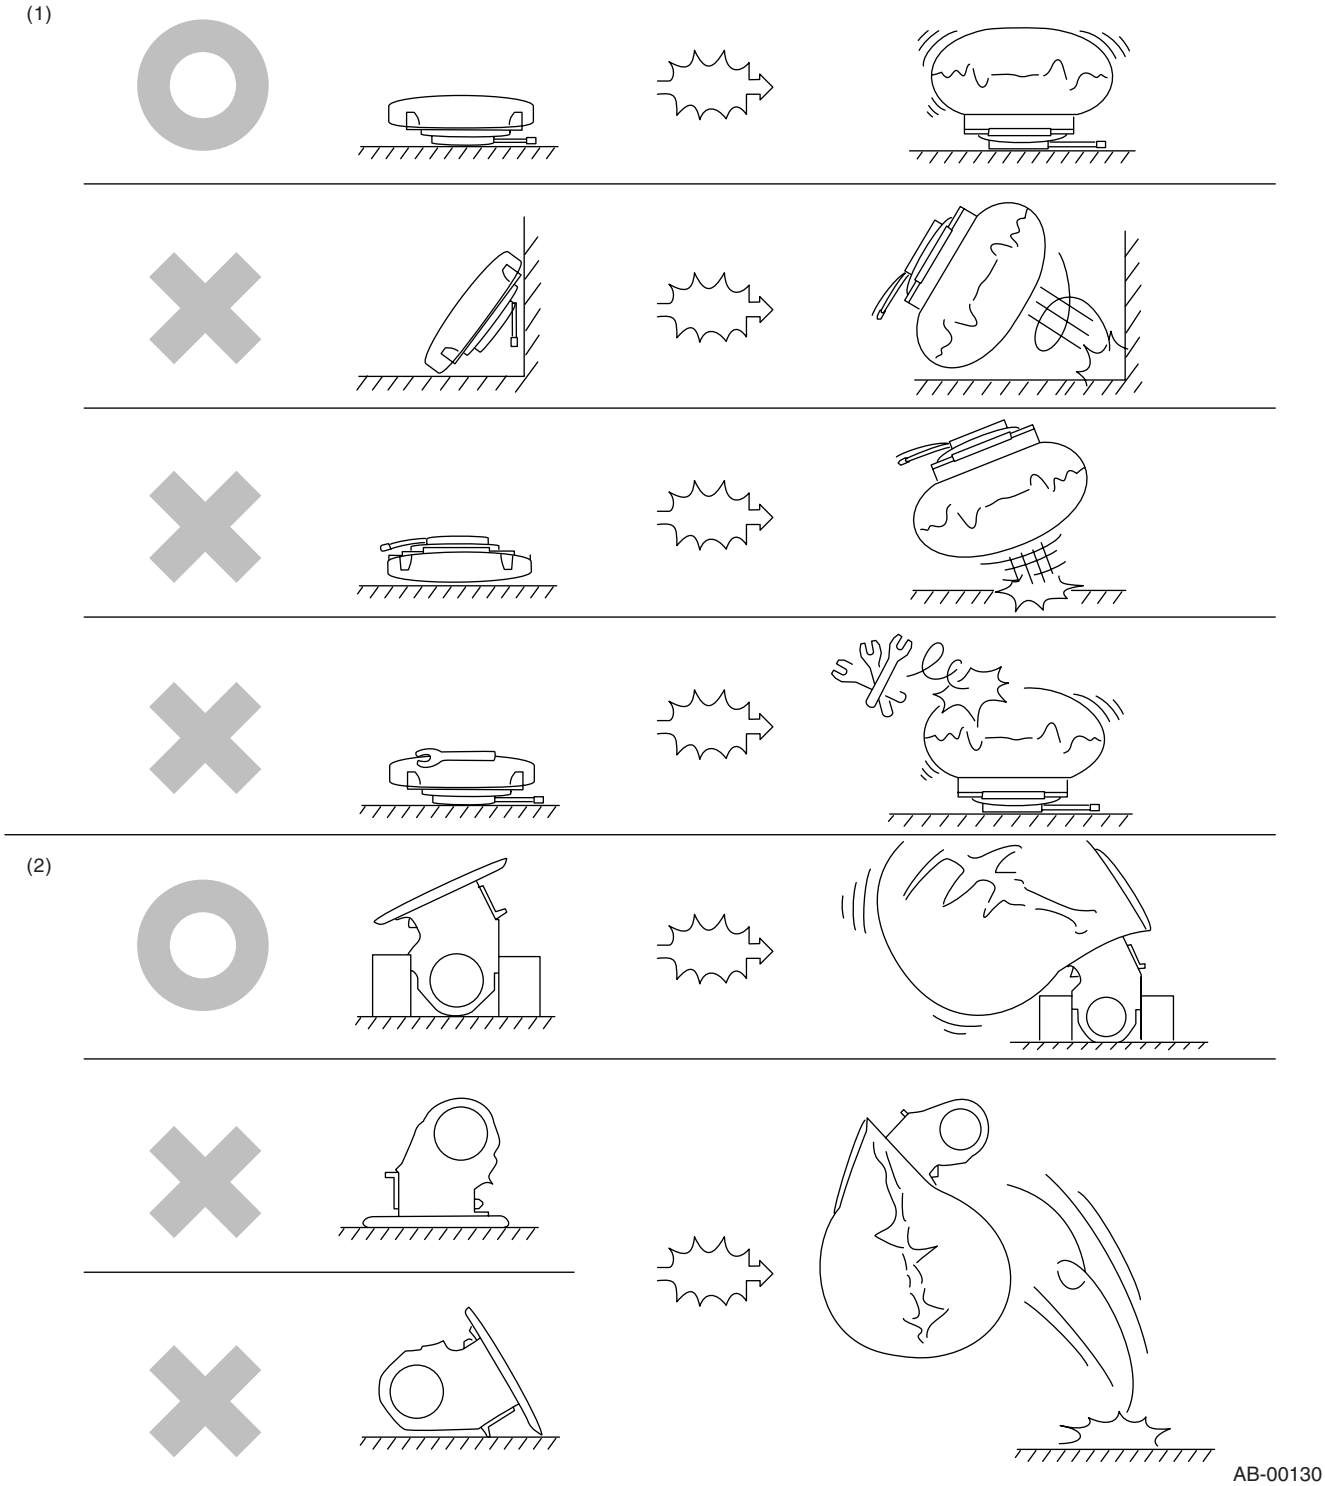

(1) Driver's airbag module (2) Passenger's airbag module

C: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
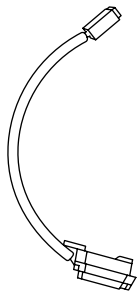 ST98299FC030	98299FC030	DEPLOYMENT ADAPTER A	• Used for deploying the driver's airbag module. • Used for deploying the passenger's airbag module. • Used for deploying the side airbag module. • Used with DEPLOYMENT TOOL (98299PA030).
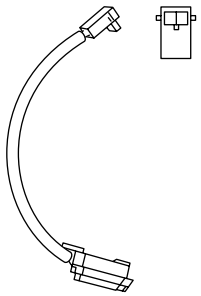 ST98299SA010	98299SA010	TEST HARNESS ADAPTER D	• Used for deploying the driver's airbag module. • Used for deploying the seat belt pretensioner. • Used with DEPLOYMENT TOOL (98299PA030). • Can not reuse.
ST98299PA030	98299PA030	DEPLOYMENT TOOL	• Used for deploying the airbag module. • Used with DEPLOYMENT ADAPTER A (98299FC030).

2. GENERAL TOOL

TOOL NAME	REMARKS
TORX® T30	Used for removal/installation of driver's airbag module, side airbag sensor.
TORX® T40 (Tamper resistant type)	Used for removal/installation of airbag control module.

2. Airbag Connector

A: OPERATION

1. POWER SUPPLY

1) How to disconnect:
(1) Move the slide lock (A) in the direction of the arrow.
(2) Pull the female connector in the direction of the arrow with slide lock (A) moved.

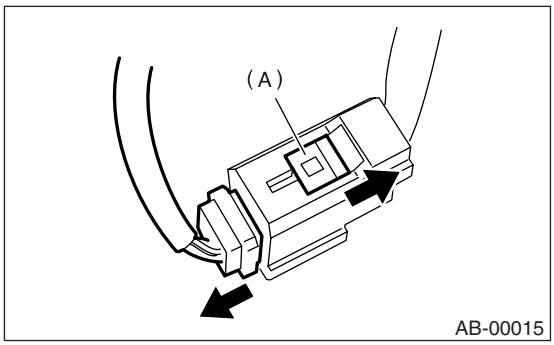

CAUTION:
When pulling, be sure to hold onto the connector and not the wire.

2) How to connect:
Holding the connector (A), and push it in carefully until a connecting sound is heard.

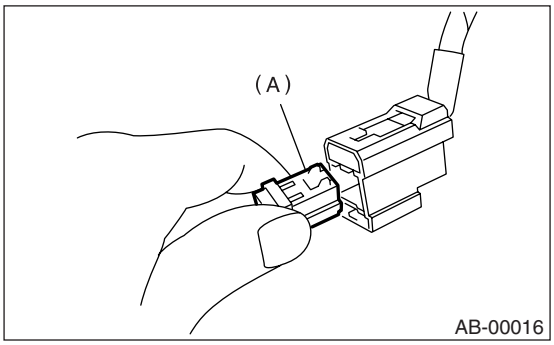

CAUTION:
Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

2. DRIVER'S AIRBAG (BETWEEN AIRBAG HARNESS AND ROLL CONNECTOR), PASSENGER'S AIRBAG AND SIDE AIRBAG

1) How to disconnect:
(1) Push the lock arm (A).
(2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of the arrow.

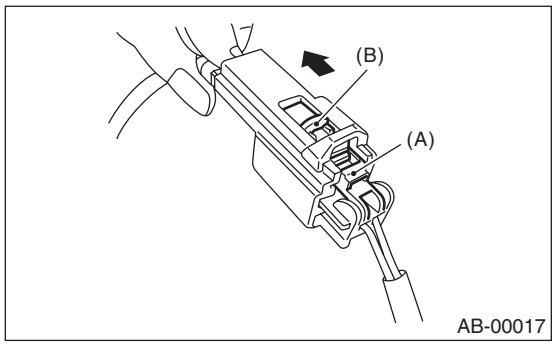

(3) With the slide lock (B) pulled, remove the lock arm (A) to its original position, and then pull in the direction of the arrow and separate the connector.

CAUTION:
When pulling, be sure to hold onto the connector and not the wire.

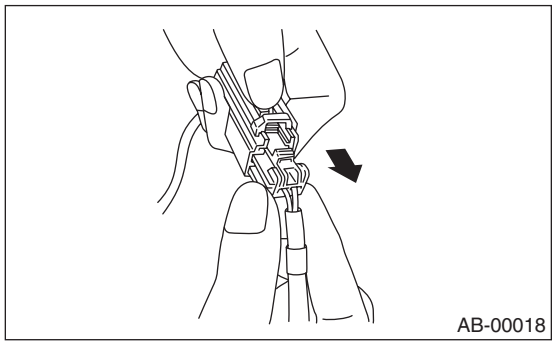

2) How to connect:
Holding the connector, and push it in carefully until a connecting sound is heard.

CAUTION:
Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

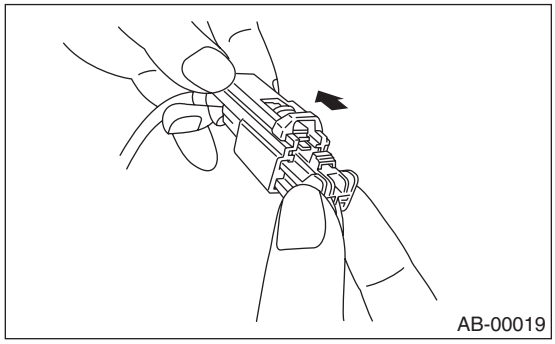

3. DRIVER'S AIRBAG MODULE AND PRETENSIONER

1) How to disconnect:
(1) Using a flat tip screwdriver, pry the push lock upward to unlock.

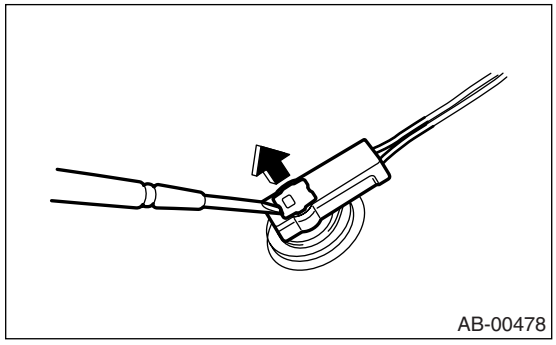

(2) Pull the connector to disconnect from driver's side airbag module assembly.

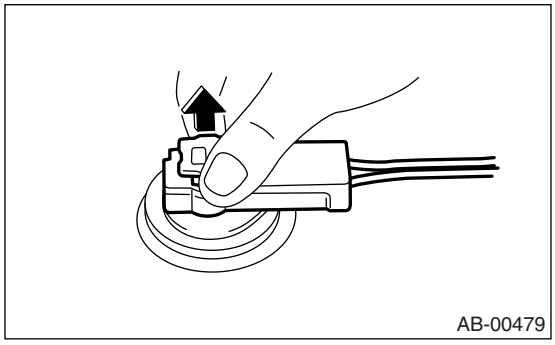

2) How to connect:
Connect the connector in reverse order of disconnecting. At this time, be sure to insert the connector in until connecting sound is heard.

CAUTION:
• Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.
• At this time, be sure to insert the push lock in.

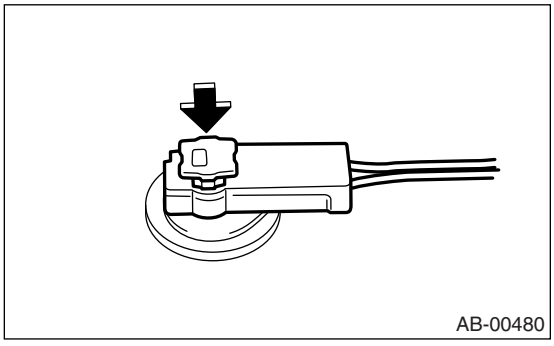

4. FRONT SUB-SENSOR AND SIDE AIRBAG SENSOR

1) How to disconnect:
Holding outer part (A), pull it in the direction of the arrow.

CAUTION:
When pulling, be sure to hold onto the connector and not the wire.

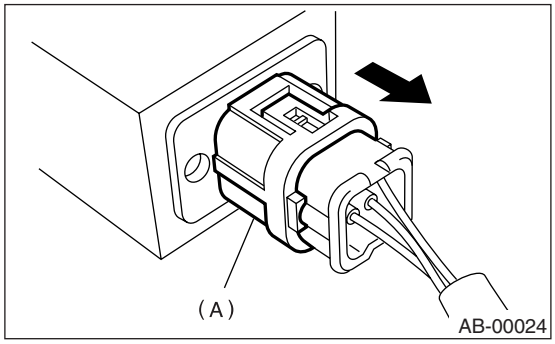

2) How to connect:
Holding the connector, and push it in carefully until a connecting sound is heard.

CAUTION:
• Outer (A) moves back, and so do not put your hand on the outer part.
• Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

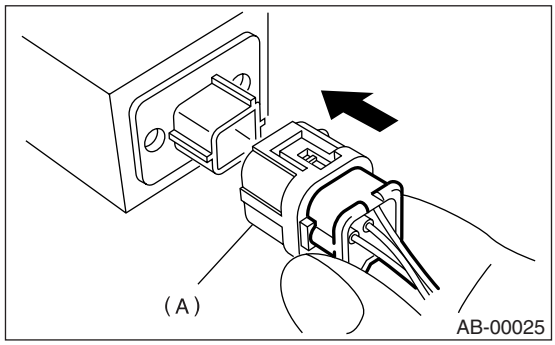

3. Inspection Locations After a Collision

A: REPLACEMENT

When airbag system is deployed, replace the following parts.

1. FRONT COLLISION

1) Driver's airbag module
2) Passenger's airbag module
3) Driver's seat belt (pretensioner)
4) Passenger's seat belt (pretensioner)
5) Airbag control module
6) Front sub-sensor
7) Roll connector

2. SIDE COLLISION

1) Airbag control module
2) Side airbag module (operating side)
3) Side airbag module (operating side)

3. INSPECTION OF OTHER PARTS

Check for the following parts, replace the damaged parts with new ones.
1) Steering wheel and steering shaft
Check the steering wheel and steering shaft for mounting condition and deflection of axial and radical, upward and downward direction. Check the steering shaft for deflection of axial and radical direction with tilt lever released. (After a collision, absorbing part of steering shaft may inflate.)
2) Check the direct type connector of driver's airbag module, pretensioner, etc. for damage, and also check each harness for pinch and connector damage. If damage is found, replace the harness as a unit.

B: INSPECTION

If the vehicle is involved in a collision on any side, even if it is a slight collision, be sure to check the following system parts.

1. DRIVER'S AIRBAG MODULE

1) Check for the following, and replace damaged parts with new parts.
• Airbag module is cracked or deformed.
• Harness and/or connector is cracked, deformed or open. Lead wire is exposed.
• The module surface is fouled with grease, oil, water or cleaning solvent.
2) When installing a new driver's airbag module, check the following. If necessary, install a new airbag module and steering wheel.
• The steering wheel is in the way, making it difficult to install the airbag module.
• The clearance between the driver's airbag module and steering wheel is not constant.
• The steering wheel deformation in axial and radial directions exceed limits.

Specifications:
Height deflection A
Less than 6 mm (0.24 in)
O.D. deflection L
Less than 17 mm (0.67 in)

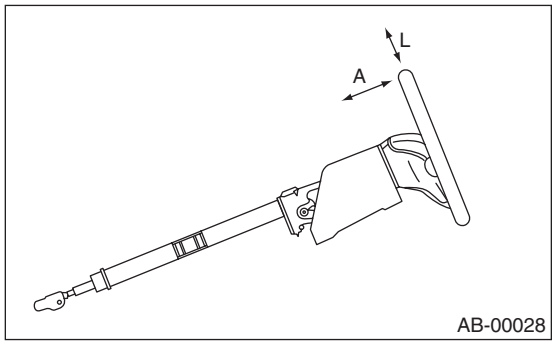

2. PASSENGER'S AIRBAG MODULE

Check for the following, and replace damaged parts with new parts.
• Airbag module is cracked or deformed.
• Harness and/or connector is cracked, deformed or open. Lead wire is exposed.
• Mounting bracket is cracked or deformed.

3. SIDE AIRBAG MODULE

Check for the following, and replace damaged parts with new parts.
• Front seat is damaged or deformed.
• Harness and/or connector is cracked, deformed or open.
• Lead wire is exposed.

4. AIRBAG CONTROL MODULE

Check for the following, and replace damaged parts with new parts.
• Control module is cracked or deformed.
• Mounting bracket is cracked or deformed.
• Connector is scratched or deformed.
• Airbag is deployed.
• Side airbag is deployed.

5. FRONT SUB SENSOR

If the front section of vehicle as shown in the figure is damaged:

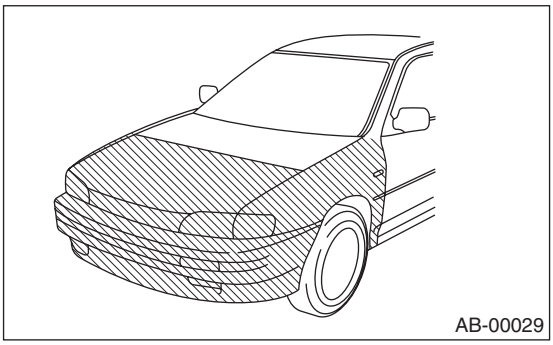

Check for the following, and replace damaged parts with new parts.
- Front sub sensor is cracked or deformed.
- Mounting bracket is cracked or deformed.
- Connector is scratched or cracked.
- Airbag is deployed.

6. SIDE AIRBAG SENSOR

If the side section of vehicle as shown in the figure is damaged:

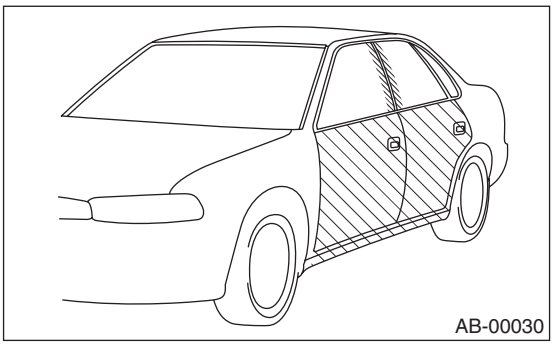

Check for the following, and replace damaged parts with new parts.
- Side airbag sensor is cracked or deformed.
- Mounting bracket is cracked or deformed.
- Connector is scratched or cracked.
- Side airbag is deployed. (operating side)

7. ROLL CONNECTOR

Check for the following, and replace damaged parts with new parts.
- Combination switch or steering roll connector is cracked or deformed.

8. STEERING SHAFT

Check for the following, and replace damaged parts with new parts.
Overall length of steering column should be within specifications.

Specifications:
Overall length L
Except for STi model:
825.7±1.5 mm (32.5±0.06 in)
STi model:
818.7±1.5 mm (32.23±0.06 in)

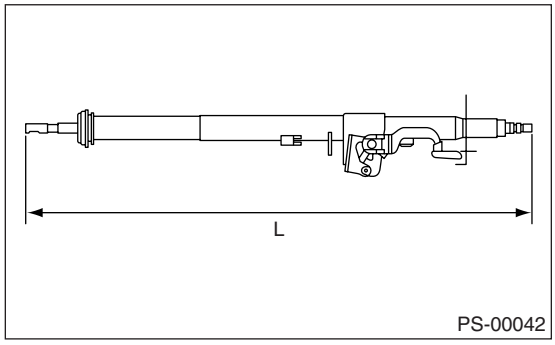

If necessary, replace it with a new part.

4. Driver's Airbag Module

A: REMOVAL

CAUTION:
Refer to "CAUTION" in General Description before handing the airbag module. <Ref. to AB-3, CAUTION, General Description.>

1) Position the front wheels straight ahead. (After moving the vehicle more than 5 m (16 ft) with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead).
2) Turn the ignition switch to OFF.
3) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
4) Using the TORX® BIT T30, remove the two TORX® bolts on side of steering wheel.

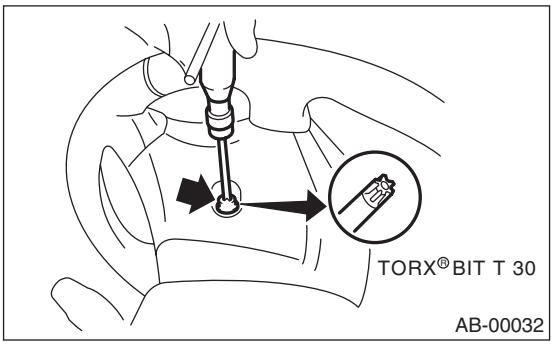

5) Disconnect the airbag connector on the back of airbag module, and then remove the airbag module.

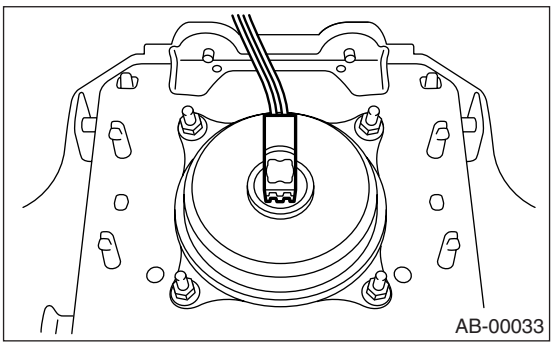

6) Refer to "CAUTION" for handling of a removed airbag module. <Ref. to AB-3, CAUTION, General Description.>

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:
Do not allow harness and connectors to interfere or get tangled up with other parts.

Tightening torque:
Refer to "COMPONENT" in "General Description" <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

CAUTION:
Refer to "CAUTION" in General Description before handing the airbag module. <Ref. to AB-3, CAUTION, General Description.>

Check for the following, and replace damaged parts with new parts.
• Airbag module, harness, connector, and mounting bracket are damaged.

5. Passenger's Airbag Module

A: REMOVAL

CAUTION:
Refer to "CAUTION" in General Description before handing the airbag module. <Ref. to AB-3, CAUTION, General Description.>

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
4) Detach the airbag connector from support beam bracket, and then disconnect the airbag connector.

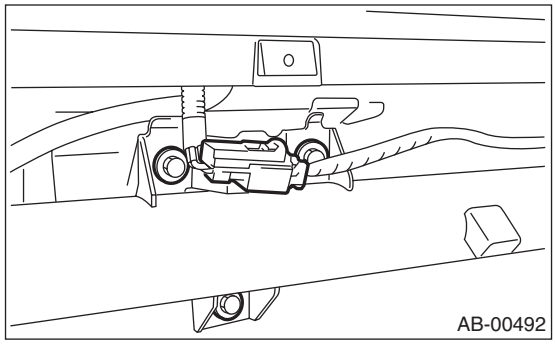

5) Remove the three bolts, and then carefully remove the airbag module.
6) Refer to "CAUTION" for handling of a removed airbag module. <Ref. to AB-3, CAUTION, General Description.>

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Do not allow harness and connectors to interfere or get tangled up with other parts.

Tightening torque:
Refer to "COMPONENT" in "General Description" <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

CAUTION:
Refer to "CAUTION" in General Description before handing the airbag module. <Ref. to AB-3, CAUTION, General Description.>

Check for the following, and replace damaged parts with new parts.
• Airbag module, harness, connector, and mounting bracket are damaged.

6. Side Airbag Module

A: REMOVAL

CAUTION:
Before working on the airbag module, refer to the "CAUTION" in General Description. <Ref. to AB-3, CAUTION, General Description.>

NOTE:
Remove the passenger's side by referring to driver's side.

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the front seat from the vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
4) Remove the clip, and then remove the side airbag harness from slide rail IN (A) and reverse side of seat cushion assembly.

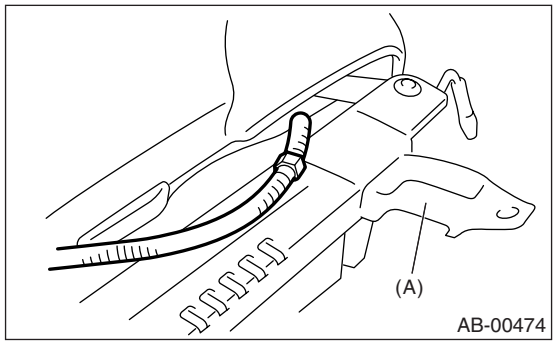

5) Remove the backrest cover. <Ref. to SE-6, DISASSEMBLY, Front Seat.>
6) Remove the side airbag harness from backrest frame assembly.

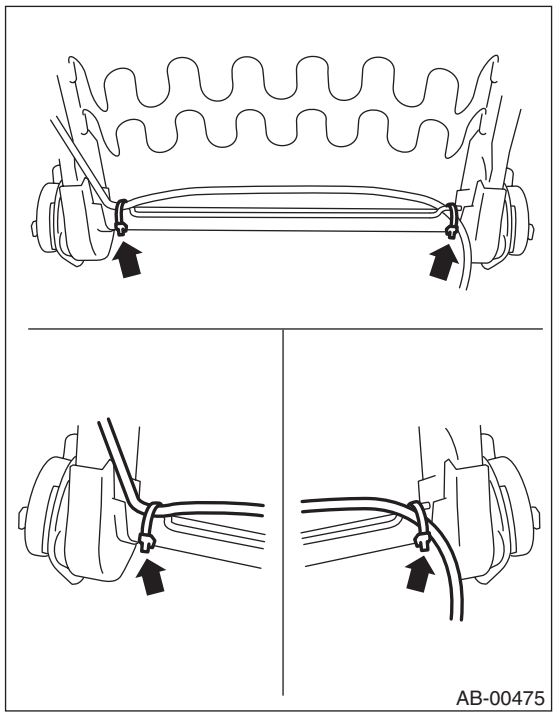

7) Remove the side airbag module (A) from backrest frame assembly.

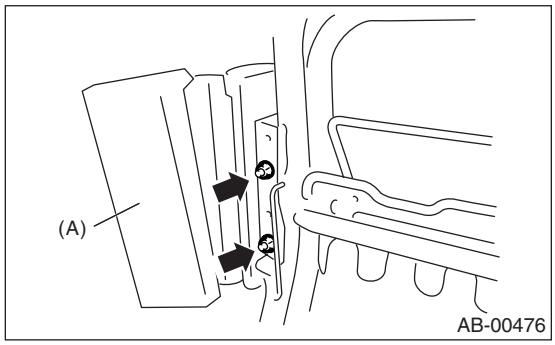

B: INSTALLATION

1) Ensure there are no foreign particles on side airbag module.
2) Install the side airbag module (A) to backrest frame assembly.

Tightening torque:
5.9 N·m (0.59 kgf-m, 4.4 ft-lb)

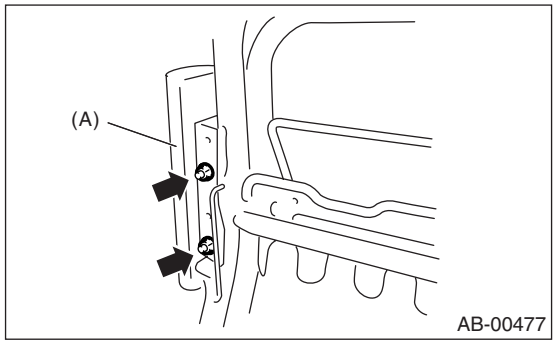

3) Install the side airbag harness to backrest frame assembly.

NOTE:
Secure the harness to its original position of seat.

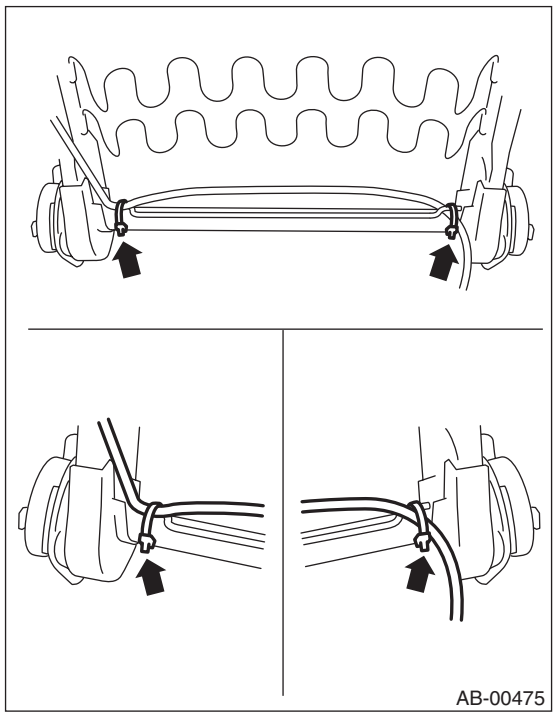

4) Install the backrest cover. <Ref. to SE-16, ASSEMBLY, Front Seat.>

5) Install the side airbag harness to slide rail IN (A).

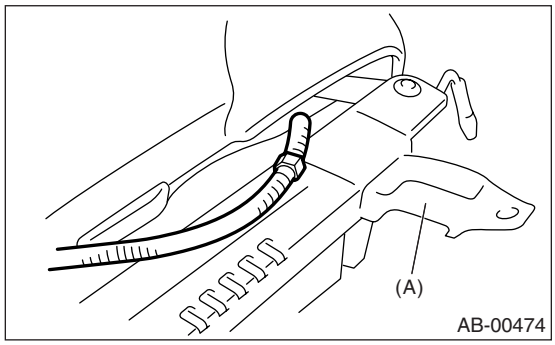

6) Recline the seat or slide it backward and forward. Check there is no contact between seat backrest assembly, cushion cover assembly and side airbag harness.

C: INSPECTION

CAUTION:
Before working on the airbag module, refer to the "CAUTION" in General Description. <Ref. to AB-3, CAUTION, General Description.>

Perform the inspection of following items, and replace the damaged parts with new ones. <Ref. to AB-10, SIDE AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>
1) With side clash (when side airbag is deployed)
<Replacement parts>
- Side airbag module assembly
- Backrest pad assembly
- Backrest frame assembly
- Backrest cover assembly

<Other replacement parts, which found to be damaged by visual check>
- Headrest assembly
- Bush
- Slide rail OUT
- Slide rail IN
- Seat hinge cover
- Seat lifter dial
- Reclining lever
- Side airbag harness and connector (body side)

2) With side clash (when side airbag is not deployed)
Check the seat and airbag module visually, and then replace them with new ones if damaged or cracked.
Specially inspect the damage of airbag module body, installing bracket, harness connector.
3) Without side clash (dirt and damage of cover)
Replace the corresponding part with a new one.

7. Airbag Control Module

A: REMOVAL

CAUTION:
• Do not disassemble the airbag control module.
• If the airbag control module is deformed or if water damage is suspected, replace the airbag control module with a new genuine part.
• Do not drop the airbag control module.
• After removal, keep the airbag control module on a dry, clean surface away from moisture, heat, and dust.

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the console cover. <Ref. to EI-42, REMOVAL, Console Box.>
4) Remove the center console panel. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
5) Disconnect the connector from airbag control module.
6) Using the T40® TORX bit (Tamper resistant type), remove the four TORX® bolts in the order shown in the figure.

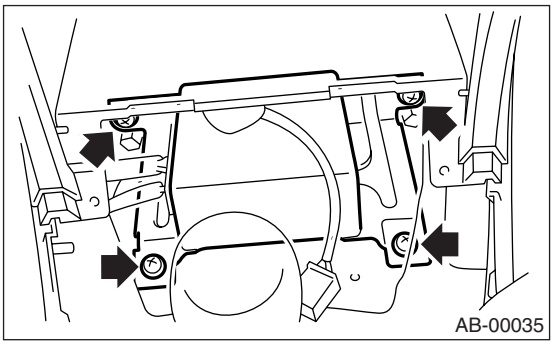

B: INSTALLATION

CAUTION:
Use new TORX® bolts during reassembly.

Install in the reverse order of removal.

Tightening torque:
Refer to "COMPONENT" in "General Description" <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

Check for the following, and replace damaged parts with new parts.
• Control module, connector, and mounting bracket are damaged.
• Airbag is deployed.
• Side airbag is deployed.

8. Side Airbag Sensor

A: REMOVAL

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the outer belt (FRONT). <Ref. to SB-12, FRONT INNER BELT, REMOVAL, Front Seat Belt.>
4) Detach the side airbag sensor, and then disconnect the airbag connector.

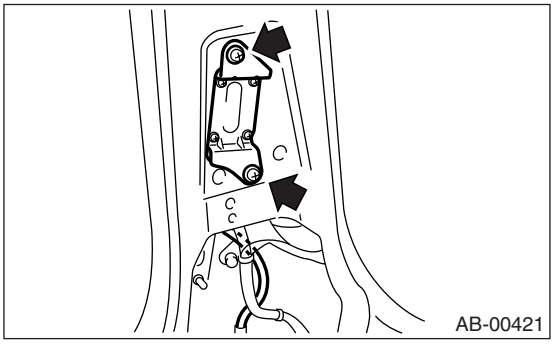

B: INSTALLATION

CAUTION:
Use new TORX® bolts T30 when reassembling.

Install in the reverse order of removal.

Tightening torque:
Refer to "COMPONENT" in "General Description" <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

Check for the following, and replace damaged parts with new parts.

- Bracket connector for side airbag sensor is damaged.
- Side airbag is deployed.

9. Roll Connector

A: REMOVAL

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.>
4) Remove the steering wheel. <Ref. to PS-23, REMOVAL, Steering Wheel.>
5) Remove the steering column cover.
6) Remove the screws, and then remove the roll connector.

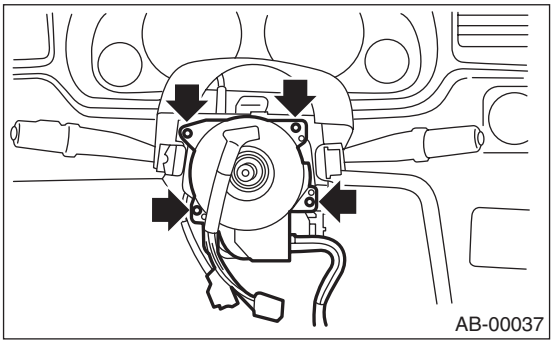

B: INSTALLATION

1) Install in the reverse order of removal.
2) Before installing the steering wheel, be sure the direction of roll connector is adjusted with steering. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>

C: INSPECTION

Check for the following, and replace damaged parts with new parts.
• Combination switch and roll connector is cracked or deformed.

D: ADJUSTMENT

1) Check that the front wheels are positioned in straight ahead direction.
2) Turn the roll connector pin (A) clockwise until it stops.
3) Turn the roll connector pin (A) counterclockwise approx. 2.65 turns until "▲" marks are aligned.

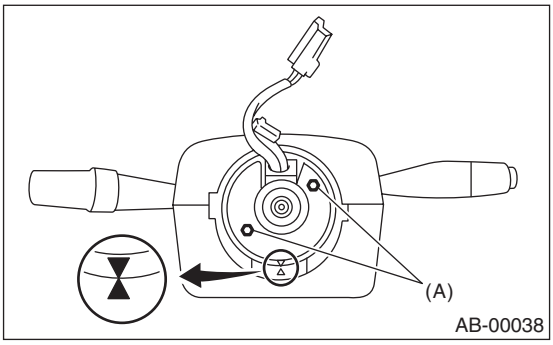

10.Front Sub Sensor

A: REMOVAL

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the front bumper. <Ref. to EI-22, REMOVAL, Front Bumper.>
4) Loosen the two bolts to remove the sensor cover.

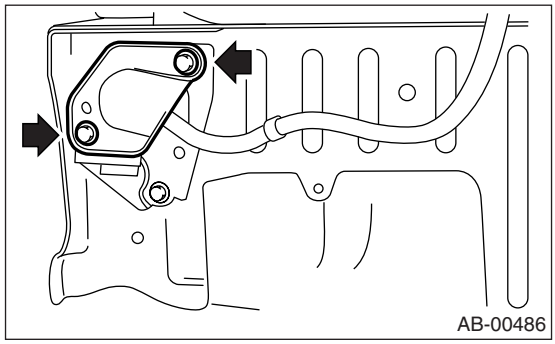

5) Remove the bolt, and then detach the front sub sensor.
6) Disconnect the connector from front sub sensor.

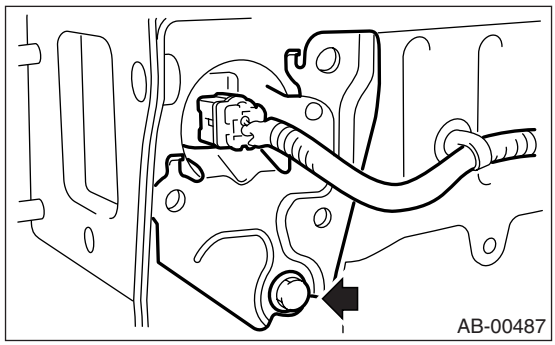

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Refer to "COMPONENT" in "General Description" <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

Check for the following, and replace damaged parts with new parts.

- Front sub sensor, mounting bracket, and connector are damaged.
- Airbag is deployed.

11. Disposal of Airbag Module (Deploying While Installed in Vehicle)

A: OPERATION

CAUTION:
• Do not discard an undeployed airbag module because it may cause serious personal injury when accidentally deployed.
• As a rule, the airbag module should be deployed while still installed in the vehicle. Do not remove it unless necessary.
• Deployment of the airbag module should be done on a flat place free from any possible danger. Avoid deploying outdoors during rainy or windy weather.
• Deploying the airbag module causes a high explosive noise, be sure to warn people in the area, and do not allow anyone within a 5 m (16 ft) radius of the disposal site.
• Some smoke will be emitted from deployment of the airbag module. Therefore, it must be deployed in a well-ventilated place with no fire alarms nearby.
• Wear gloves, goggles, and earplugs during this operation. Wash your hands afterwards.
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.
• Wrap the deployed airbag module in an airtight vinyl bag, and discard it.
• If circumstances do not permit airbag module deployment, contact a SUBARU dealer.

1. DRIVER'S AIRBAG MODULE

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the instrument panel lower cover.
4) Disconnect the airbag connector (AB26) and (AB21) below steering column.

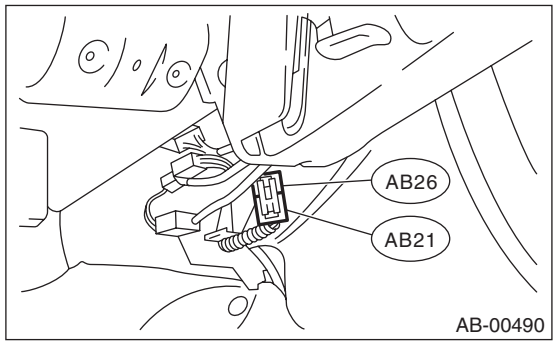

5) Short the terminal to alligator clip furnished as deployment tool (A).
6) Connect the deployment tool and adapter A (deployment) (B).

CAUTION:
The deployment tool should be kept shorted terminals until just before deployment of the airbag module.

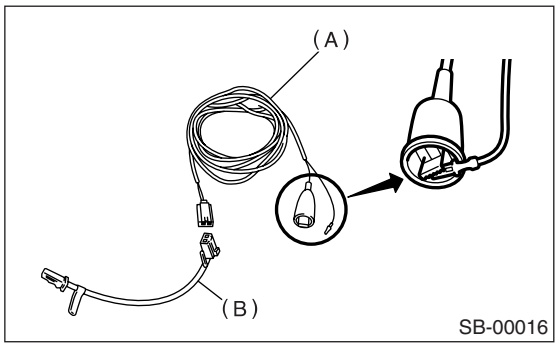

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter A: (Part No. 98299FC030)

7) Connect the adapter A (deployment) connector to airbag connector (AB26).

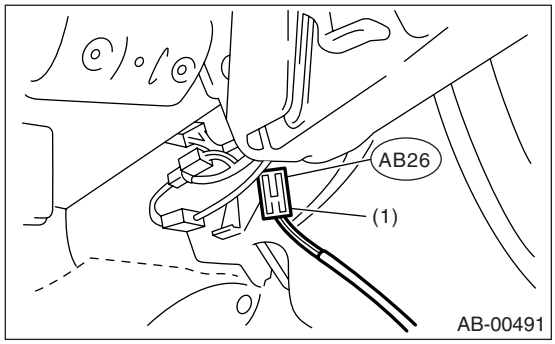

(1) Adapter A: (Part No. 98299FC030)

8) Extend the deployment tool to the limit, and make sure that the vehicle is empty. Close all windows, sunroof, and rear gate completely.

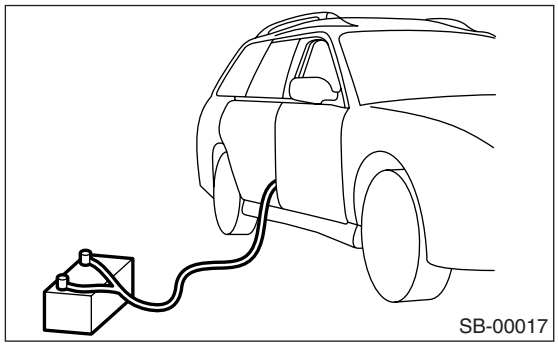

9) Move the battery at least 5 m (16 ft) from vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (–) terminal.
10) Connect the other cable of the deployment tool to the battery positive (+) terminal. Then, deploy the airbag module.

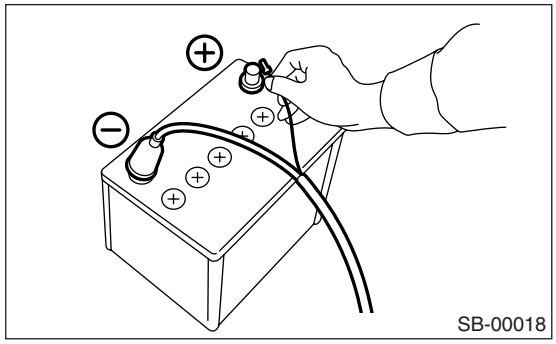
SB-00018

CAUTION:
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.

11) Remove the airbag module. <Ref. to AB-12, Driver's Airbag Module.>
12) Wrap the deployed airbag module in an airtight vinyl bag, and discard it.

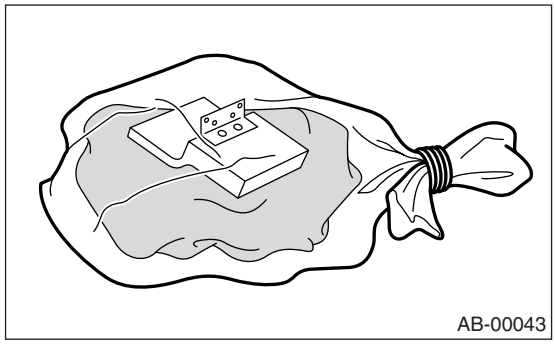
AB-00043

2. PASSENGER'S AIRBAG MODULE

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the glove box.
4) Disconnect the airbag connectors (AB4) and (AB27).
5) Short the terminal to alligator clip furnished as deployment tool (A).
6) Connect the deployment tool and adapter A.

CAUTION:
The deployment tool should be kept shorted terminals until just before deployment of the airbag module.

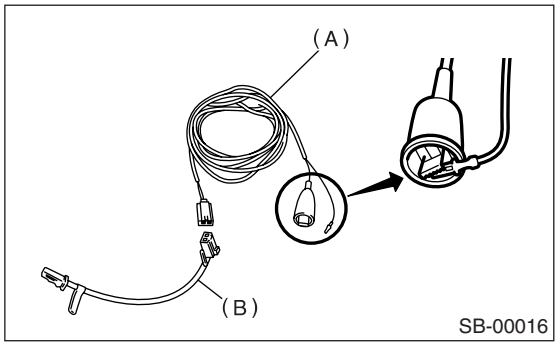

SB-00016

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter A: (Part No. 98299FC030)

7) Connect the adapter A to airbag connector (AB27).

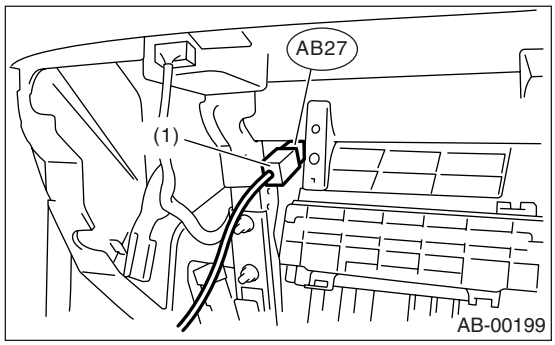

AB-00199

(1) Adapter A: (Part No. 98299FC030)

8) Extend the deployment tool to the limit, and make sure that the vehicle is empty. Close all windows, sunroof, and rear gate completely.

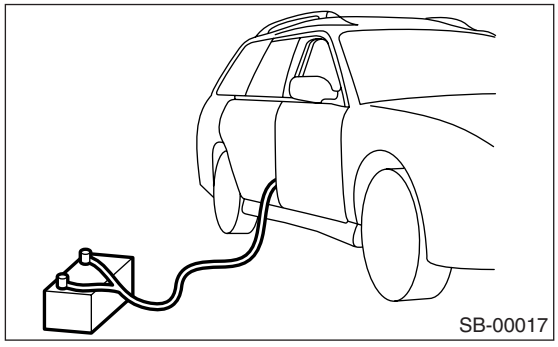
SB-00017

9) Move the battery at least 5 m (16 ft) from vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (–) terminal.

10) Connect the other cable of the deployment tool to the battery positive (+) terminal. Then, deploy the airbag module.

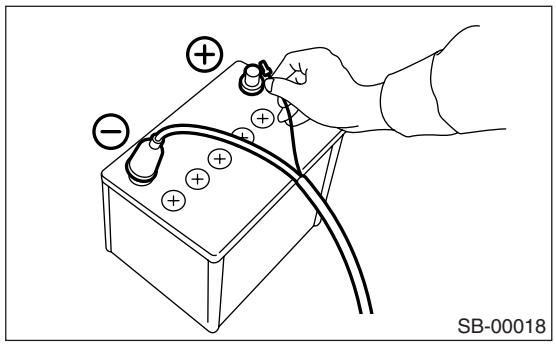

CAUTION:
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.

11) Remove the airbag module. <Ref. to AB-13, Passenger's Airbag Module.>
12) Wrap the deployed airbag module in an airtight vinyl bag, and discard it.

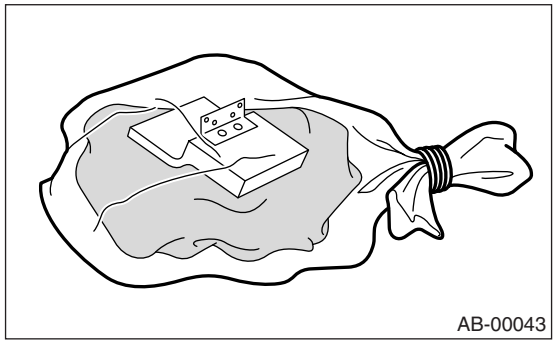

3. SIDE AIRBAG MODULE

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Disconnect the side airbag module connector (yellow) under the front seat cushion.
4) Adjust both the front seat and front seat backrest to center positions.
5) Short the terminal to alligator clip furnished as deployment tool (A).
6) Connect the deployment tool and adapter A (deployment) (B).

CAUTION:
The deployment tool should be kept shorted terminals until just before deployment of the airbag module.

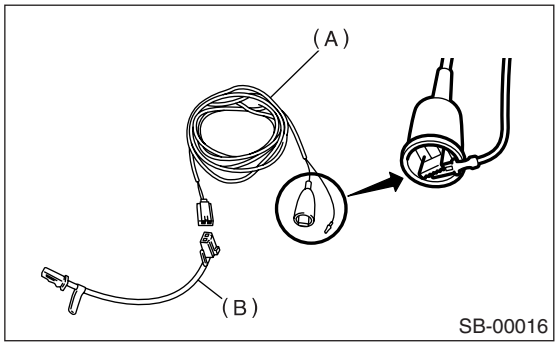

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter A: (Part No. 98299FC030)

7) Connect the adapter A (deployment) connector (2D) to side airbag module connector (yellow).

CAUTION:
Do not put any objects on the front seat.

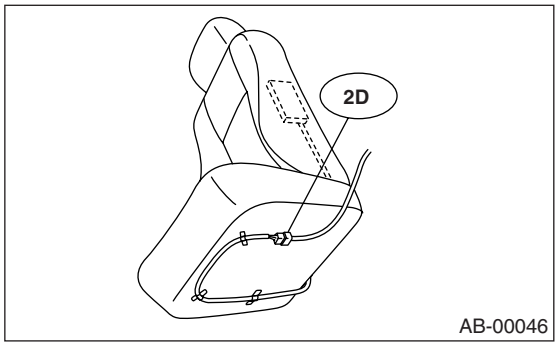

8) Extend the deployment tool to the limit, and make sure that the vehicle is empty. Close all windows, sunroof, and rear gate completely.

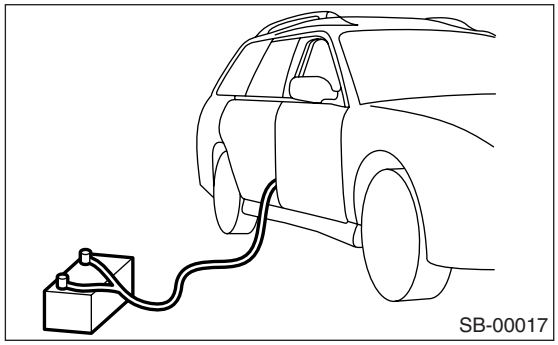

9) Move the battery at least 5 m (16 ft) from vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (–) terminal.

10) Connect the other cable of the deployment tool to the battery positive (+) terminal. Then, deploy the airbag module.

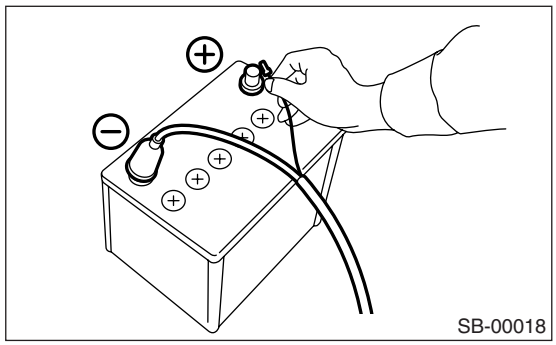

CAUTION:
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.

11) Remove the side airbag module. <Ref. to AB-14, REMOVAL, Side Airbag Module.>
12) Wrap the deployed airbag module in an airtight vinyl bag, and discard it.

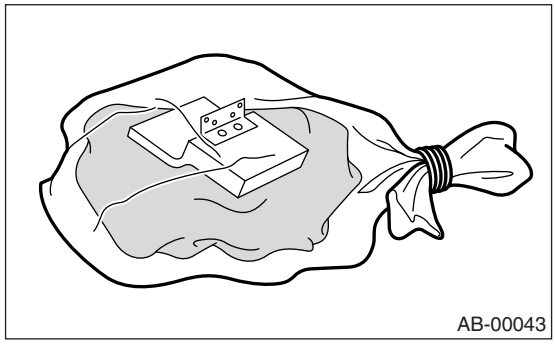

12. Disposal of Airbag Module (Deploying After Removal from Vehicle)

A: OPERATION

CAUTION:
• Do not discard an undeployed airbag module because it may cause serious personal injury when accidentally deployed.
• As a rule, the airbag module should be deployed while still installed in the vehicle. Do not remove it unless necessary.
• Deployment of the airbag module should be done on a flat place free from any possible danger. Avoid deploying outdoors during rainy or windy weather.
• Do not damage the airbag module or drop it.
• Deploying the airbag module causes a high explosive noise, be sure to warn people in the area, and do not allow anyone within a 5 m (16 ft) radius of the disposal site.
• Some smoke will be emitted from deployment of the airbag module. Therefore, it must be deployed in a well-ventilated place with no fire alarms nearby.
• Wear gloves, goggles, and earplugs during this operation. Wash your hands afterwards.
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.
• Wrap the deployed airbag module in an airtight vinyl bag, and discard it.
• If circumstances do not permit airbag module deployment, contact a SUBARU dealer.

1. DRIVER'S AIRBAG MODULE

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the airbag module. <Ref. to AB-12, Driver's Airbag Module.>
4) Install the removed bolts to airbag module.

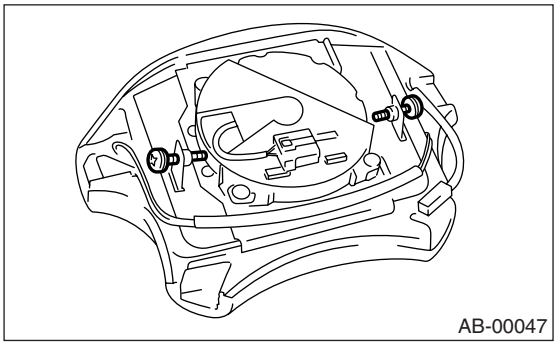
AB-00047

5) Bundle three wire automotive harnesses [each with a sectional area of 1.25 mm^2 (0.00194 sq in) or more], and bind them twofold around the airbag module stay.

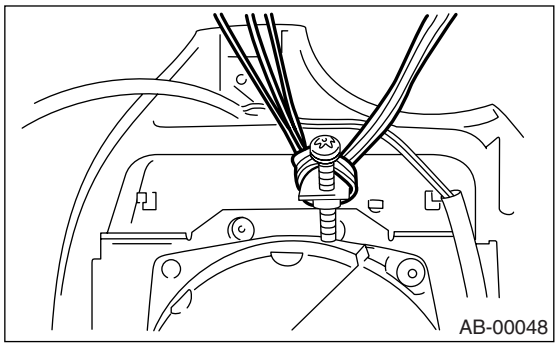
AB-00048

6) Short the terminal to alligator clip furnished as deployment tool (A).
7) Connect the deployment tool and adapter D.

CAUTION:
The deployment tool should be kept shorted terminals until just before deployment of the airbag module.

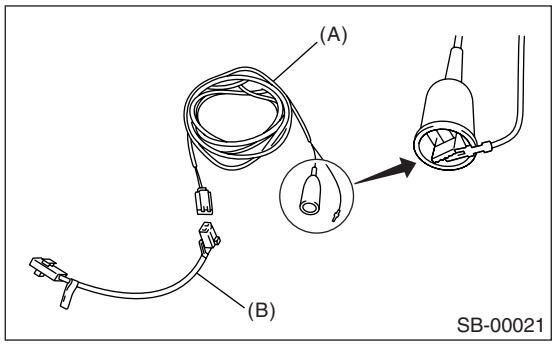

SB-00021

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter D: (Part No. 98299SA010)

8) Connect the adapter D connector (2D) to airbag module.
9) Install the airbag module with pad side facing upward on a wheel with tire.

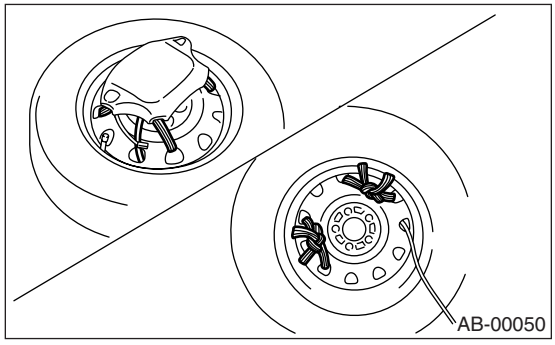
AB-00050

10) Put three tires without a wheel on the tire installed with the airbag module. Put on an additional tire with a wheel, and then fasten them tight with a rope.

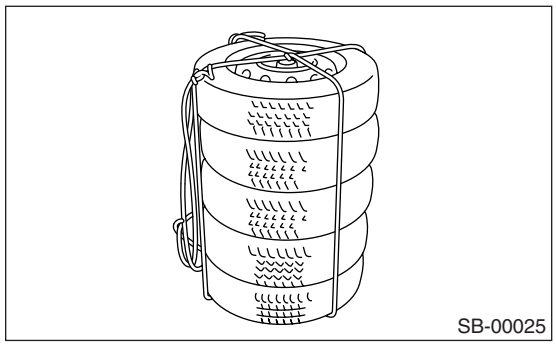
SB-00025

11) Move the battery at least 5 m (16 ft) from vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (−) terminal.

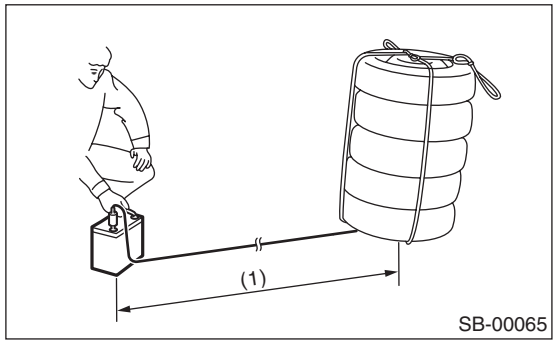

SB-00065

(1) More than 5 m (16 ft)

12) Connect the other cable of the deployment tool to the battery positive (+) terminal. Then, deploy the airbag module.

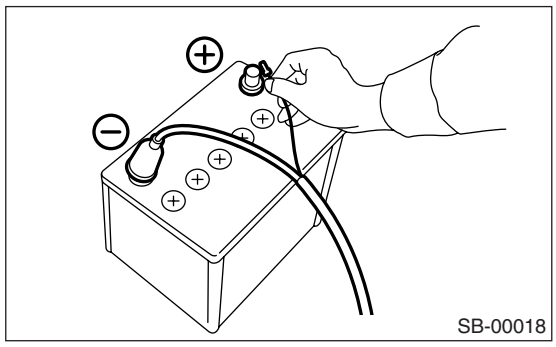
SB-00018

CAUTION:
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.

13) Wrap the deployed airbag module in an airtight vinyl bag, and discard it.

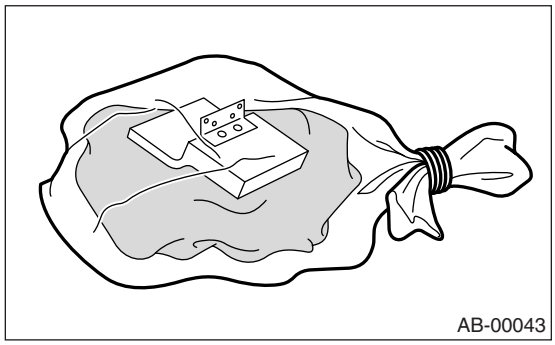
AB-00043

2. PASSENGER'S AIRBAG MODULE

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the airbag module. <Ref. to AB-13, Passenger's Airbag Module.>
4) Bundle three wire automotive harnesses [each with a sectional area of 1.25 mm^2 (0.00194 sq in) or more], and route them through the airbag module bracket (A). Then, twist them for added strength.

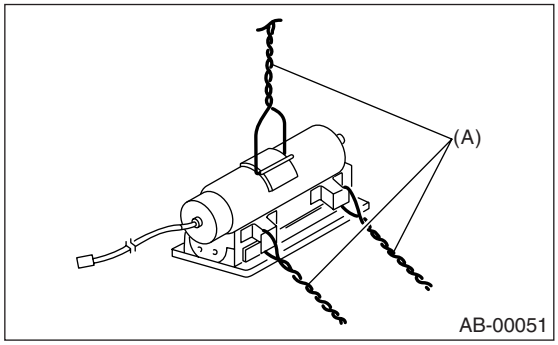

AB-00051

5) Short the terminal to alligator clip furnished as deployment tool (A).
6) Connect the deployment tool and adapter A.

CAUTION:
The deployment tool should be kept shorted terminals until just before deployment of the airbag module.

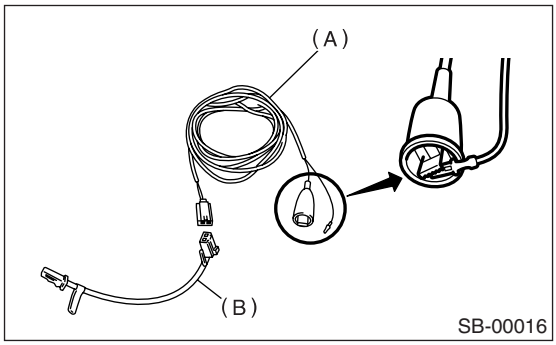

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter A: (Part No. 98299FC030)

7) Connect the adapter A connector to airbag module.
8) Install the airbag module with pad side facing upward on 14 inch or greater size wheel with tire.

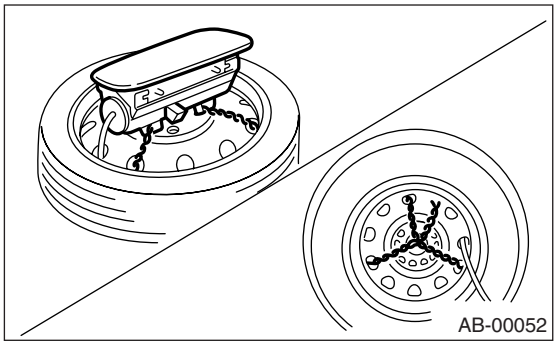

9) Put three tires without a wheel on the tire installed with the airbag module. Put on an additional tire with a wheel on top, and then fasten them tight with a rope.

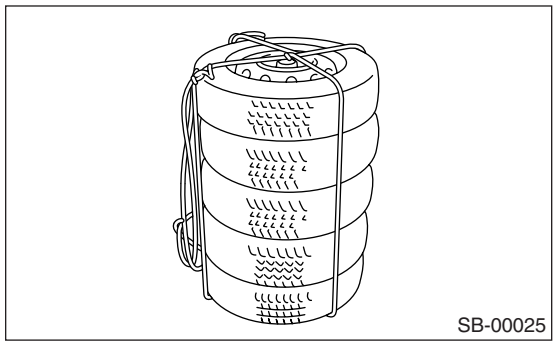

10) Move the battery at least 5 m (16 ft) from vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (−) terminal.

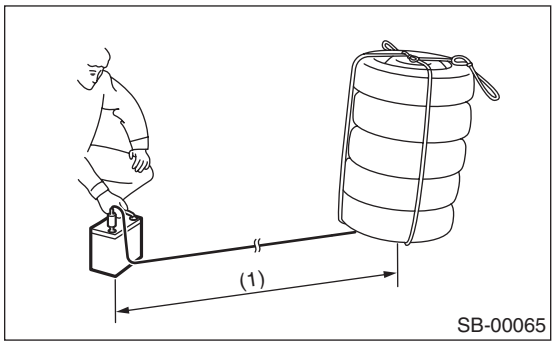

(1) More than 5 m (16 ft)

11) Connect the other cable of the deployment tool to the battery positive (+) terminal. Then, deploy the airbag module.

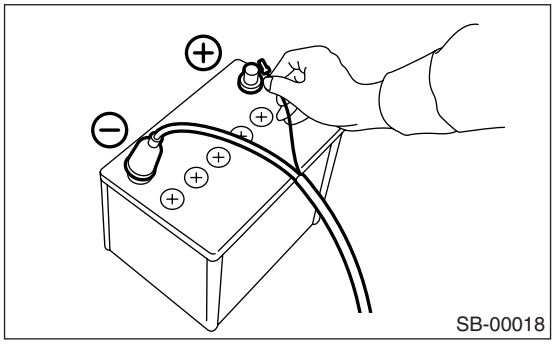

CAUTION:
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.

12) Wrap the deployed airbag module in an airtight vinyl bag, and discard it.

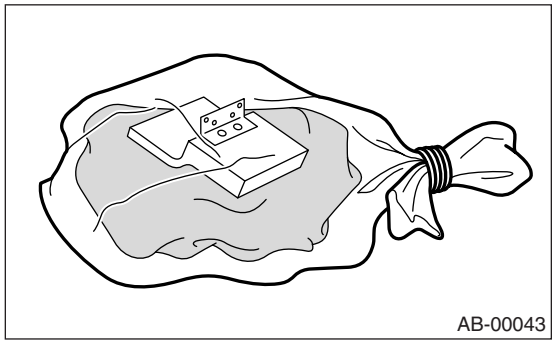

3. SIDE AIRBAG MODULE

1) Turn the ignition switch to OFF.
2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
3) Remove the front seat. <Ref. to SE-6, REMOVAL, Front Seat.>
4) Remove the side airbag module. <Ref. to AB-14, REMOVAL, Side Airbag Module.>
5) Bundle three wire automotive harnesses [each with a sectional area of 1.25 mm^2 (0.00194 sq in) or more], and then bind them through the holes in airbag module bracket.

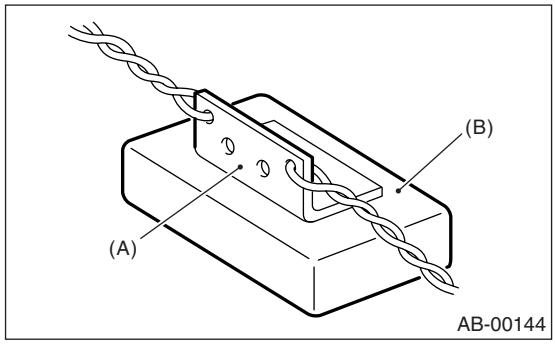

(A) Airbag module bracket
(B) Side airbag module

6) Short the terminal to alligator clip furnished as deployment tool (A).
7) Connect the deployment tool and adapter A (deployment) (B).

CAUTION:
The deployment tool should be kept shorted terminals until just before deployment of the airbag module.

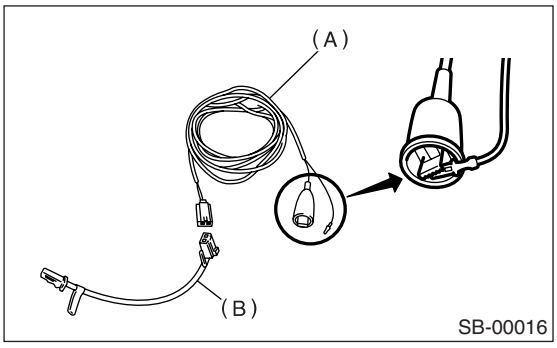

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter A: (Part No. 98299FC030)

8) Connect the adapter A connector to airbag module.

9) Install the side airbag module on 14 inch or greater size tire without disk wheel.

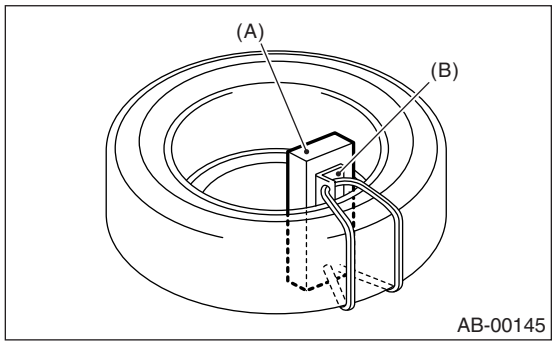

(A) Pad
(B) Airbag module bracket

10) Put two tires without a wheel (A) under the tire installed with the side airbag module (B). Put on an additional tire without disk wheel (C), and then put a tire with a wheel (D) on top. Fasten them tight with a rope.

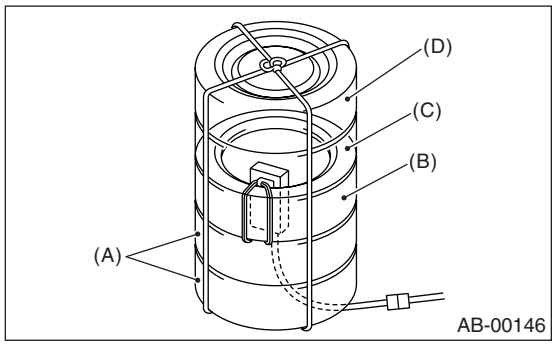

11) Move the battery at least 5 m (16 ft) from the vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (–) terminal.

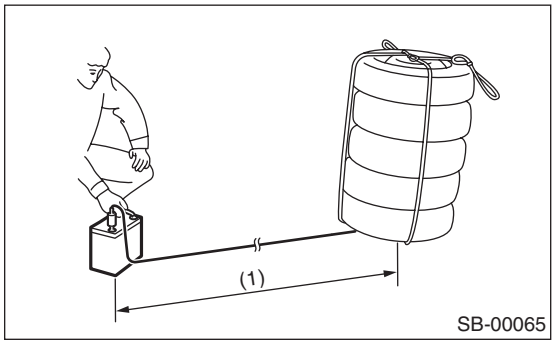

(1) More than 5 m (16 ft)

12) Connect the other cable of the deployment tool to the battery positive (+) terminal. Then, deploy the airbag module.

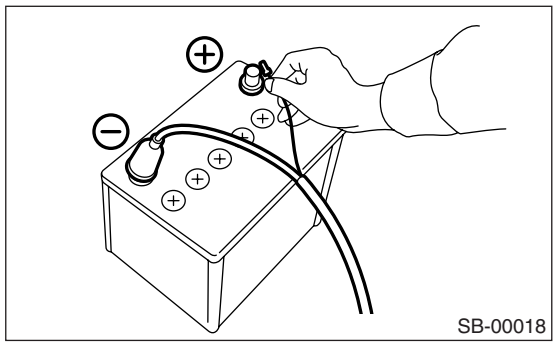

CAUTION:
• After deployment, the airbag module will be especially hot. Leave it unattended for 40 minutes, and then discard it.
• Do not let water get on the deployed airbag module.

13) Wrap the deployed airbag module in an airtight vinyl bag, and discard it.

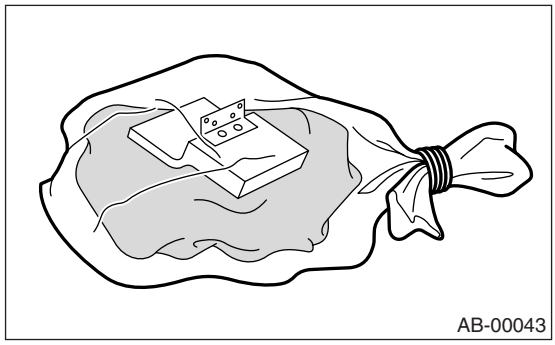

AIRBAG SYSTEM (DIAGNOSTICS)

AB

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	3
3.	General Description	4
4.	Electrical Components Location	17
5.	Airbag Control Module I/O Signal	19
6.	Airbag Connector	25
7.	Airbag Warning Light Illumination Pattern	27
8.	Read Diagnostic Trouble Code (DTC)	28
9.	Inspection Mode	29
10.	Clear Memory Mode	30
11.	Airbag Warning Light Failure	31
12.	List of Diagnostic Trouble Code (DTC)	38
13.	Diagnostic Procedure with Diagnostic Trouble Code (DTC)	41

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	**READ DTC.** <Ref. to AB-28, Read Diagnostic Trouble Code (DTC).>	Is the normal code being detected?	Finish the diagnosis.	Go to step **2.**
2	**READ DTC.** <Ref. to AB-28, Read Diagnostic Trouble Code (DTC).>	Is the DTC being detected?	Go to step **3.**	Go to “Airbag Warning Light Failure”. <Ref. to AB-31, Airbag Warning Light Failure.>
3	**PERFORM THE DIAGNOSIS.** 1)Judge the possible cause from “List of Diadnostic Trouble Code (DTC)”. <Ref. to AB-38, List of Diagnostic Trouble Code (DTC).> 2)Inspect using “Diagnostic Chart with Diagnostic Trouble Code (DTC)”. 3)Repair the cause of the trouble. 4)Perform the clear memory mode. <Ref. to AB-30, Clear Memory Mode.> 5)Perform the inspection mode. <Ref. to AB-29, Inspection Mode.> 6)Read any DTC again.	Is the DTC being detected?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.

2. Check List for Interview

A: CHECK

Customer's Name		Inspector's Name	
Date Vehicle Brought In	/ /	Registration No.	
Odometer Reading	km Miles	VIN	
Date Problem Occurred	/ /	Registration Year	/ /
Weather	❑ Fine ❑ Cloudy ❑ Rainy ❑ Snowy ❑ Other:		
Temperature	°C (°F)		
Road Condition	❑ Level road ❑ Uphill ❑ Downhill ❑ Rough road ❑ Others:		
Vehicle Operation	❑ Starting ❑ Idling ❑ Driving (❑ Constant Speed ❑ Acceleration ❑ Deceleration ❑ Steering wheel turn ❑ Other:)		
Details of Problem			
Check Airbag Warning Light	❑ Remains ON ❑ Remains OFF		
Check DTC	❑ Normal Code ❑ DTC: (Code:)		

3. General Description

A: CAUTION

• When servicing a vehicle, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
• The airbag system is fitted with a backup power source. If the airbag system is serviced within 20 seconds after the ground cable is disconnected, it may inflate.

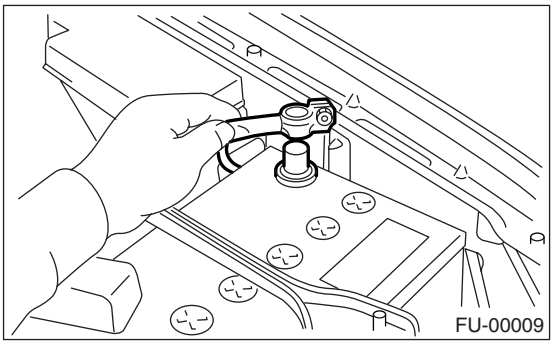

• If sensors, airbag module, airbag control module, pretensioner, and harness are deformed or damaged, replace them with new genuine parts.

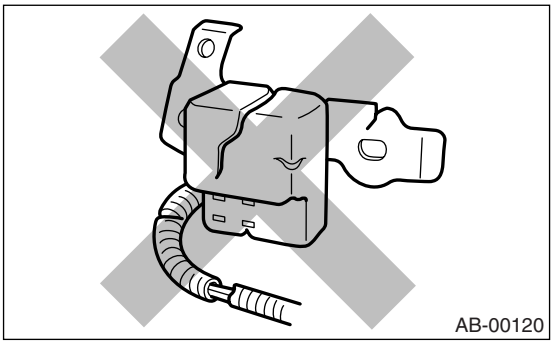

• Do not use the airbag system and pretensioners on other vehicles. When replacing parts, be sure to replace them with new parts.
• When checking the airbag system, be sure to use a digital circuit tester. Use of an analog circuit tester may cause the airbag to activate erroneously.

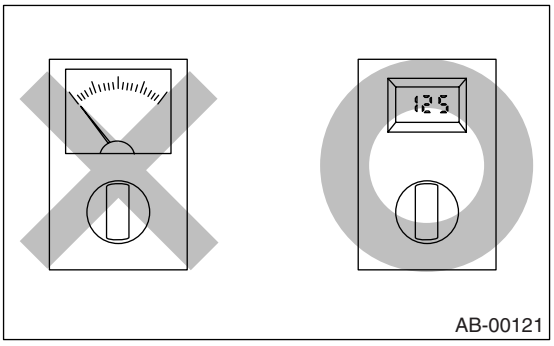

• When checking, use a test harness. Do not directly apply the tester probe to any connector terminal of the airbag.

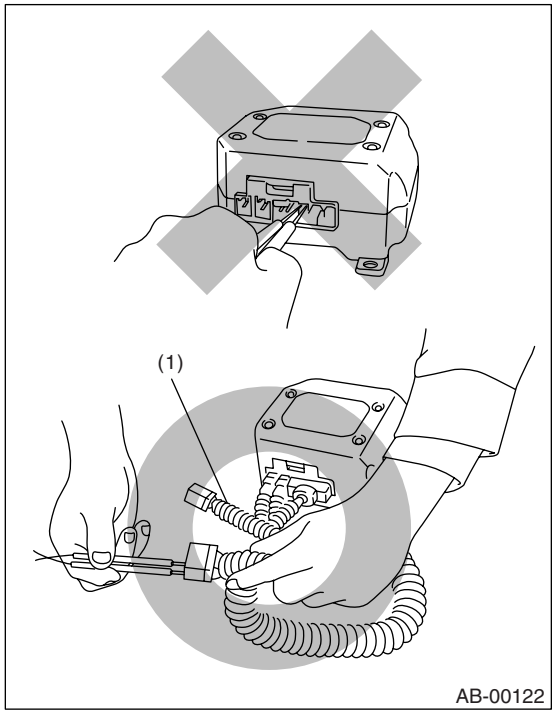

(1) Test harness

• Do not drop the airbag modulator parts, subject them to high temperature over 93°C (199°F), or let water, oil, or grease get on them; otherwise, the internal parts may be damaged and may be reliability greatly lowered.

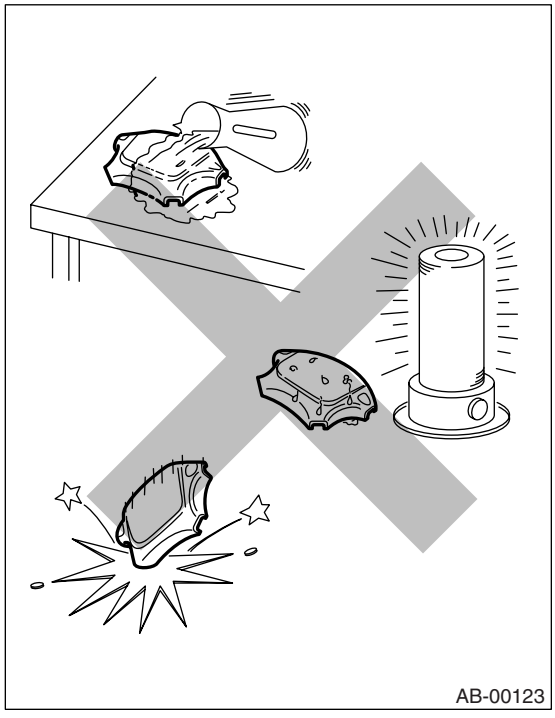

• If any damage, opening, or rust is found on the airbag system wire harness, do not attempt to repair using soldering equipment. Be sure to replace the faulty harness with a new genuine part.

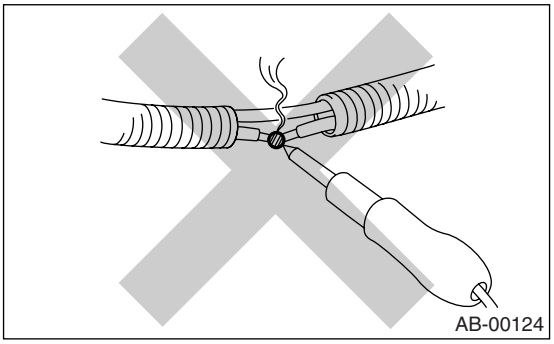

• Install the wire harness securely with the specified clips to avoid interference or tangled up with other parts.

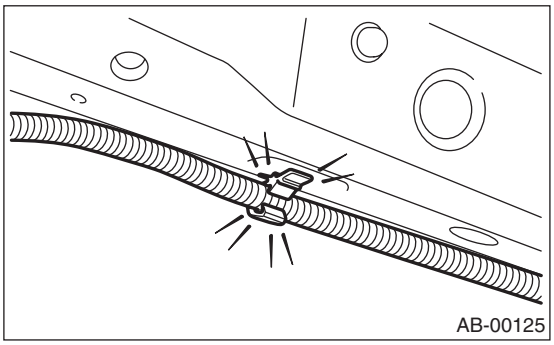

• Do not allow water or oil to come in contact with the connector terminals. Do not touch the connector terminals.

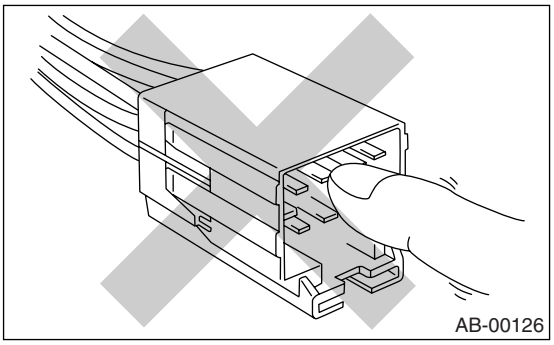

• Either of the airbag modules for driver, passenger or side, or pretensioner must not be disassembled.

• The airbag module cannot be used again if once inflated.

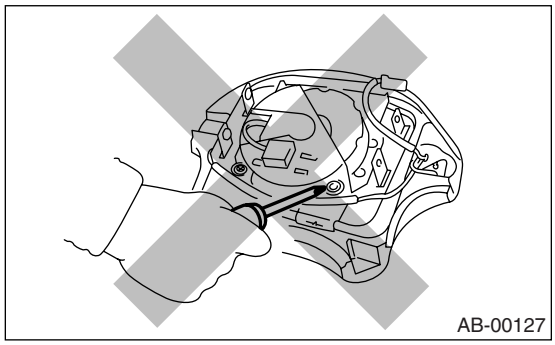

• After removal, keep the airbag module with the pad facing upward on a dry, clean, and flat surface away from heat and light sources, and moisture and dust.

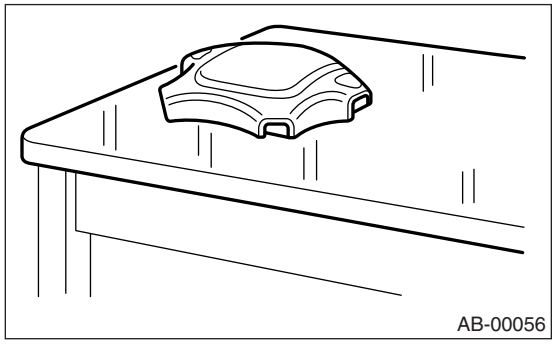

• Do not check continuity of either of the airbag modules for driver, passenger or side, or pretensioner.

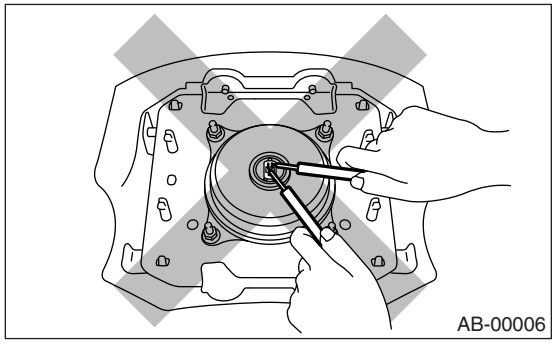

• The removed front seat with the airbag module must be kept at least 200 mm (8 in) away from walls and other objects.

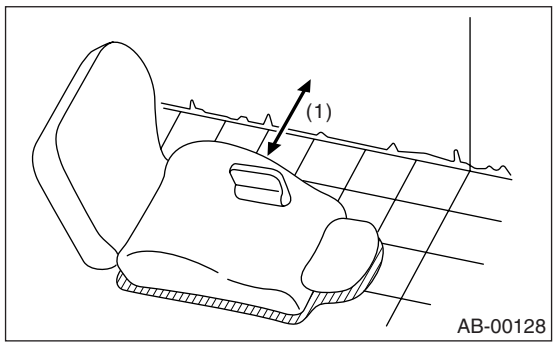

(1) More than 200 mm (8 in)

• When painting or performing sheet metal work on the front part of the vehicle, including the front wheel apron, front fender, and front side frame, remove the front sub sensors and wire harness of the airbag system.
• When painting or performing sheet metal work on the side of the vehicle, including the side sill, center pillar, and front and rear doors, remove the side airbag sensors and wire harness of the airbag system.

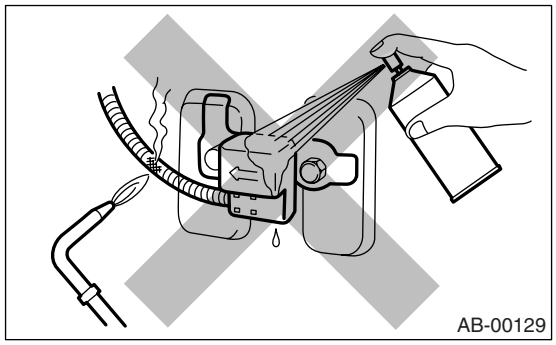

• Do not discard undeployed airbag modules. They could easily cause a serious accident if accidentally deployed.

• When storing a removed airbag module, do not place any objects on it or pile airbag modules on top of each other. If the airbag inflates for some reason when it is placed with its pad side facing downward or under any object, a serious accident may result.

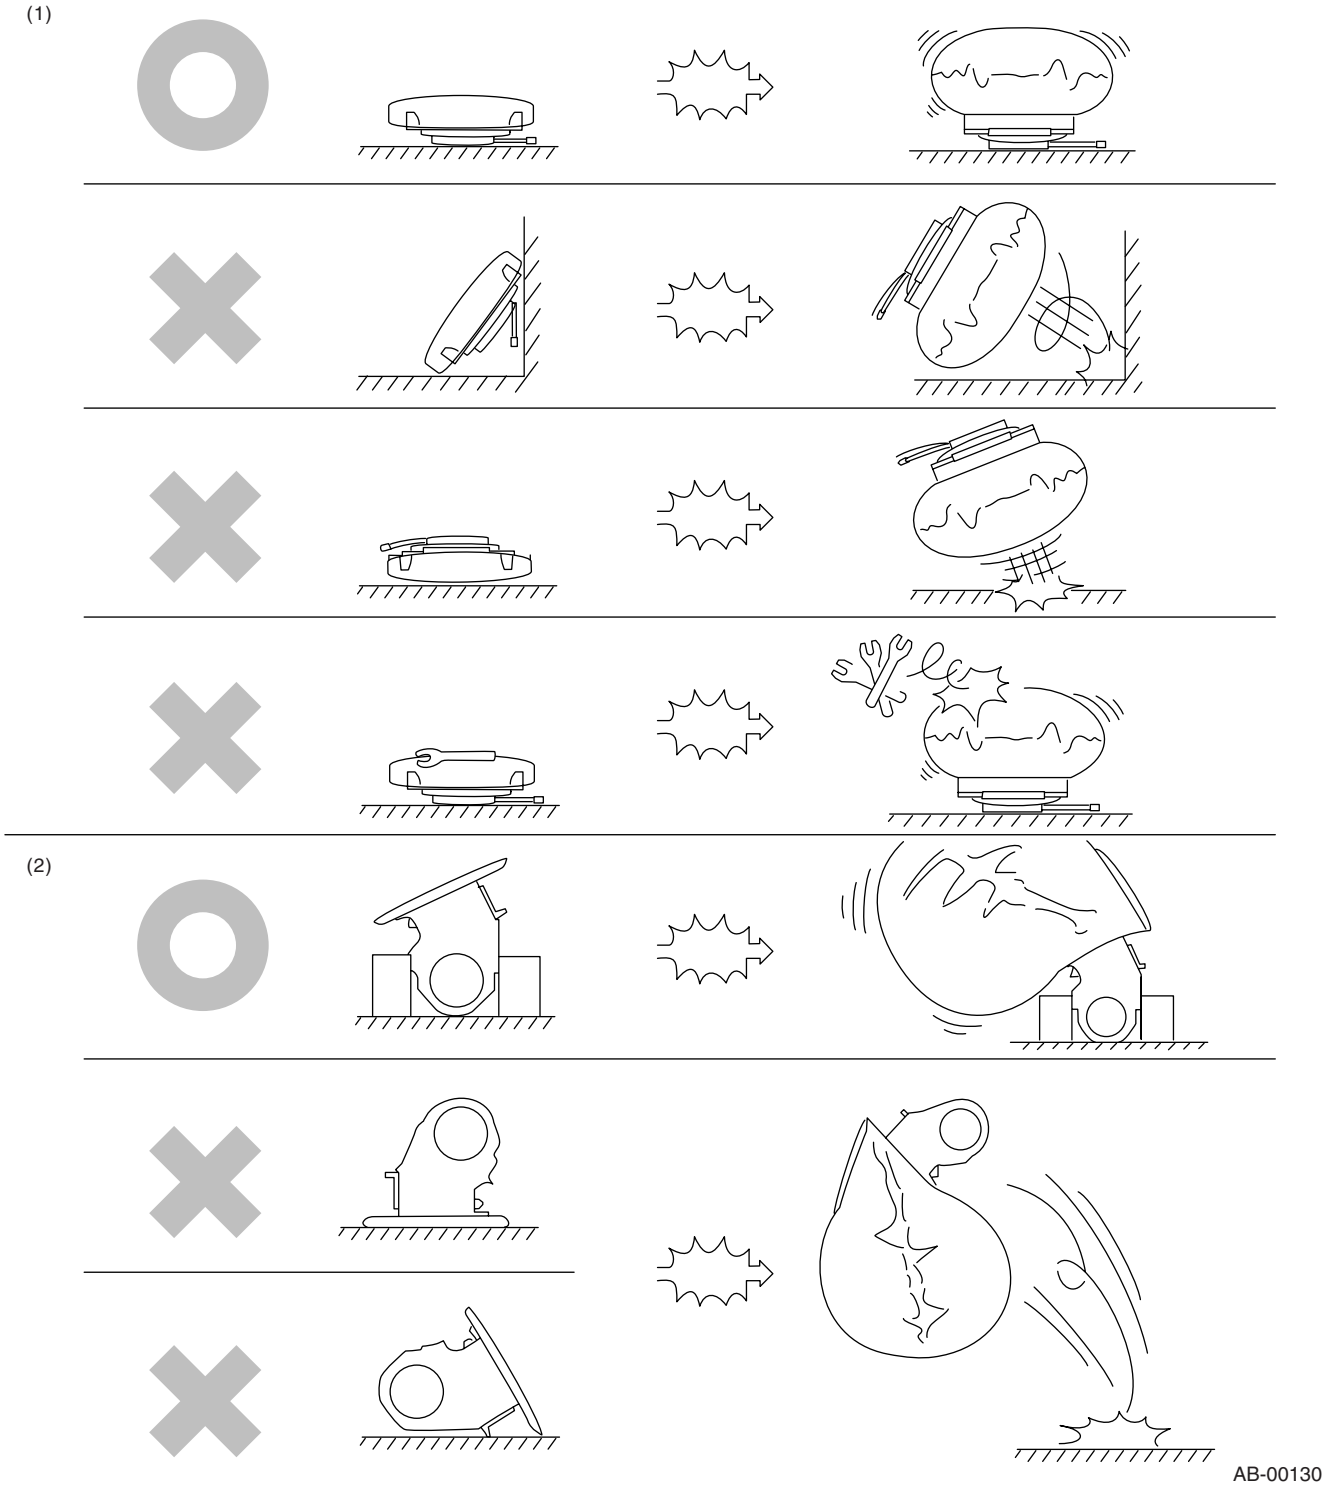

(1) Driver side airbag module (2) Passenger side airbag module

B: INSPECTION

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

C: PREPARATION TOOL

CAUTION:
Be sure to use specified test harness when measuring the voltage, resistance, etc. of AIRBAG system component parts.

1. TEST HARNESS M

PN 98299FE020

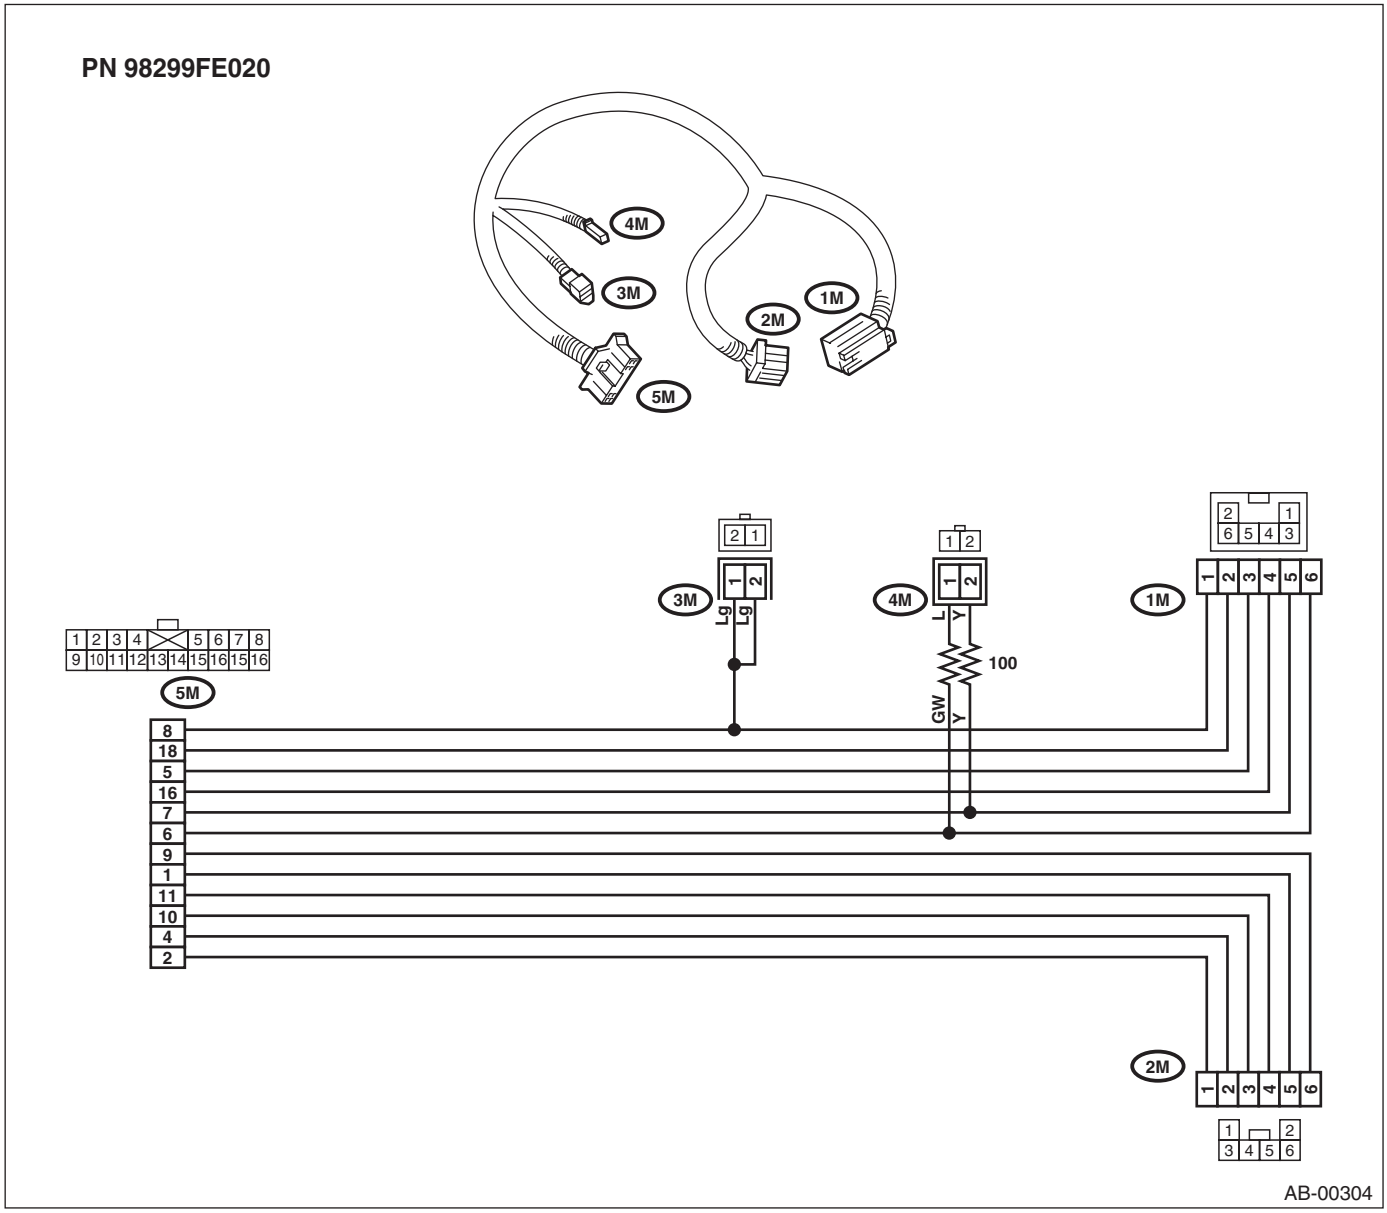

2. TEST HARNESS F

PN 98299FC010

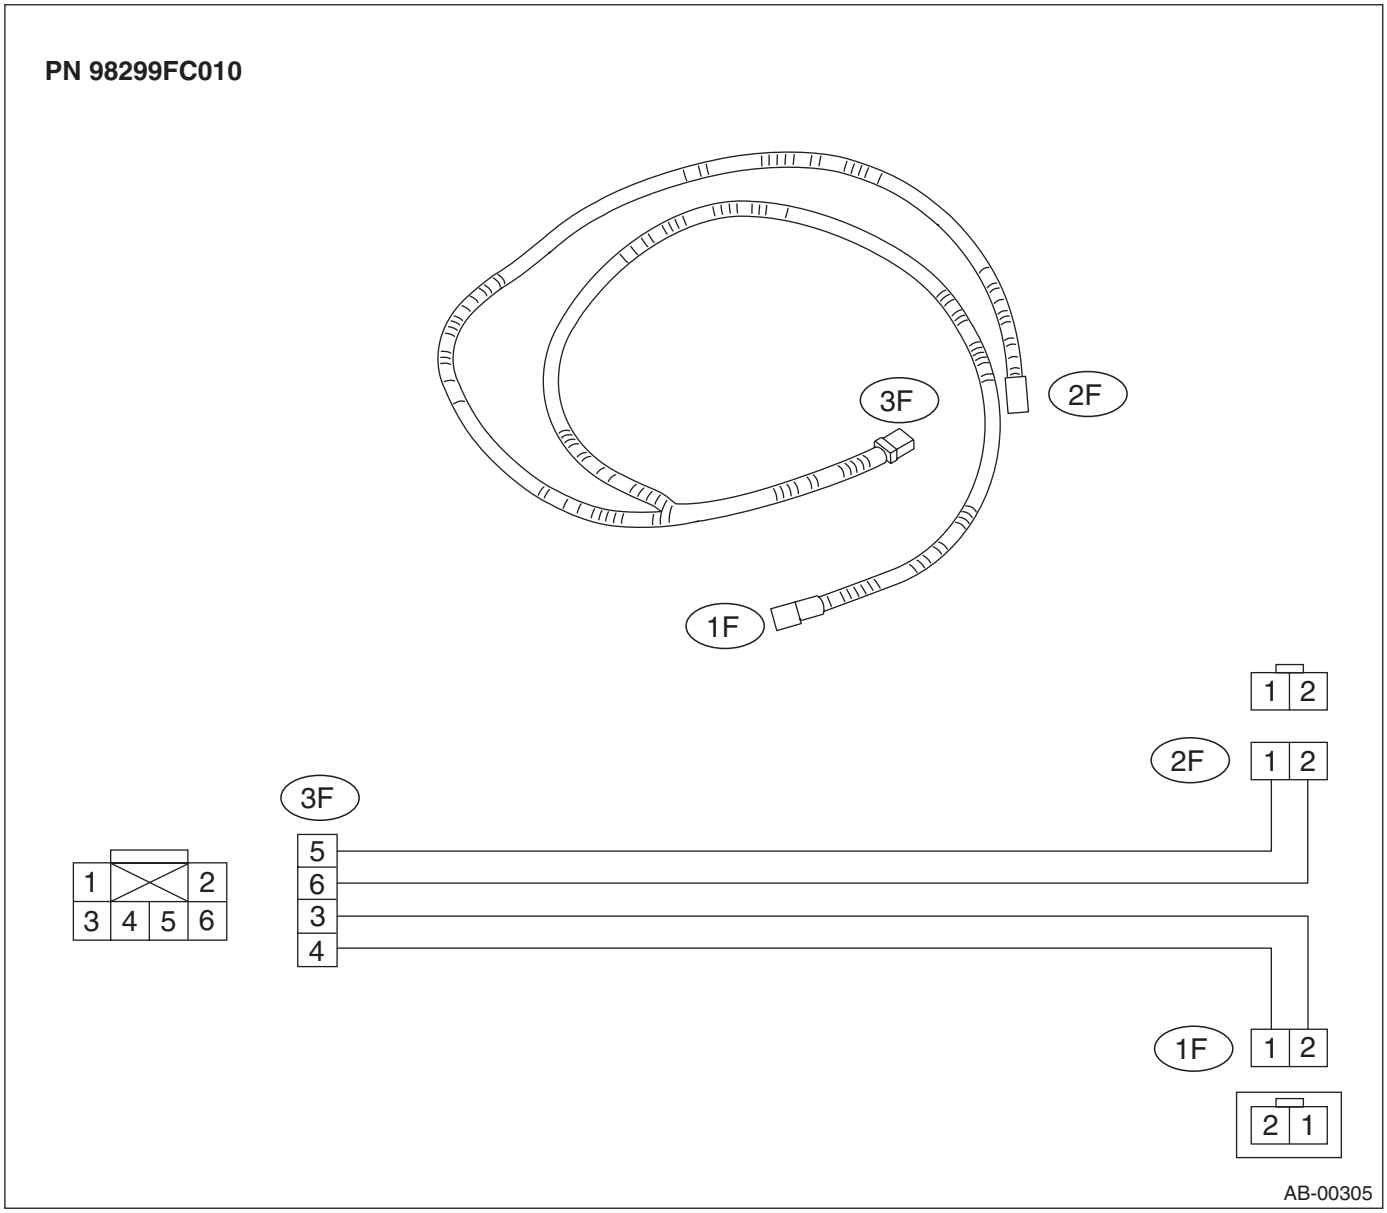

3. TEST HARNESS G

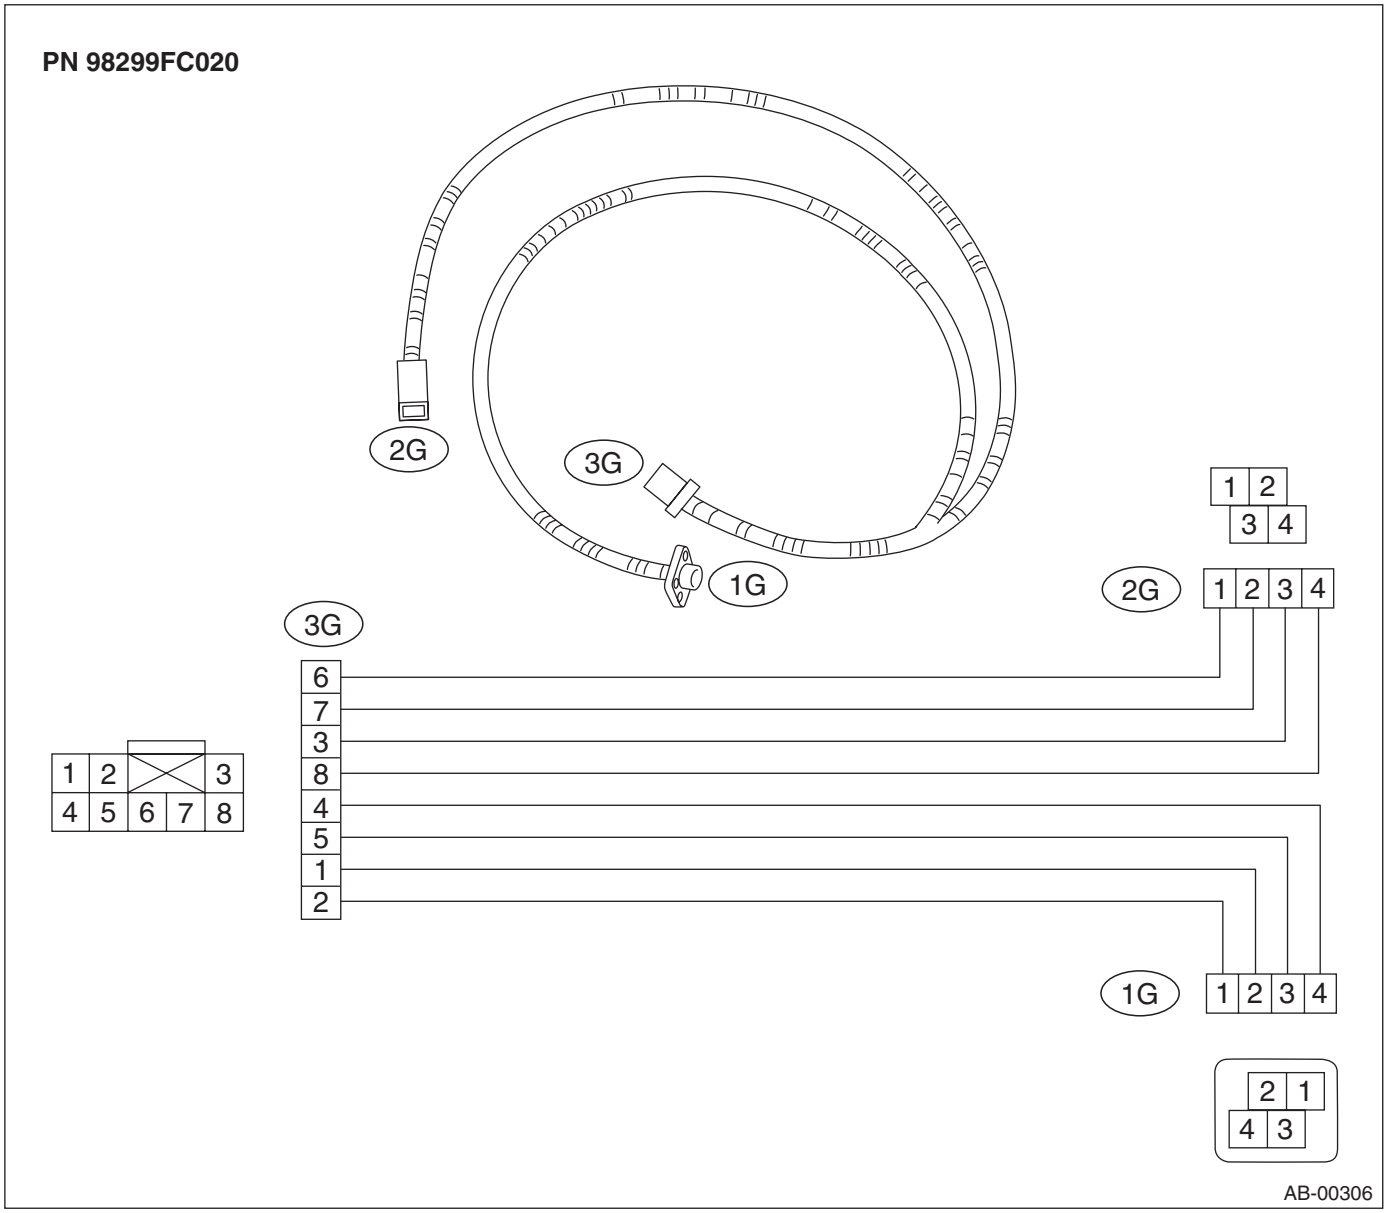

4. TEST HARNESS H

PN 98299FA030

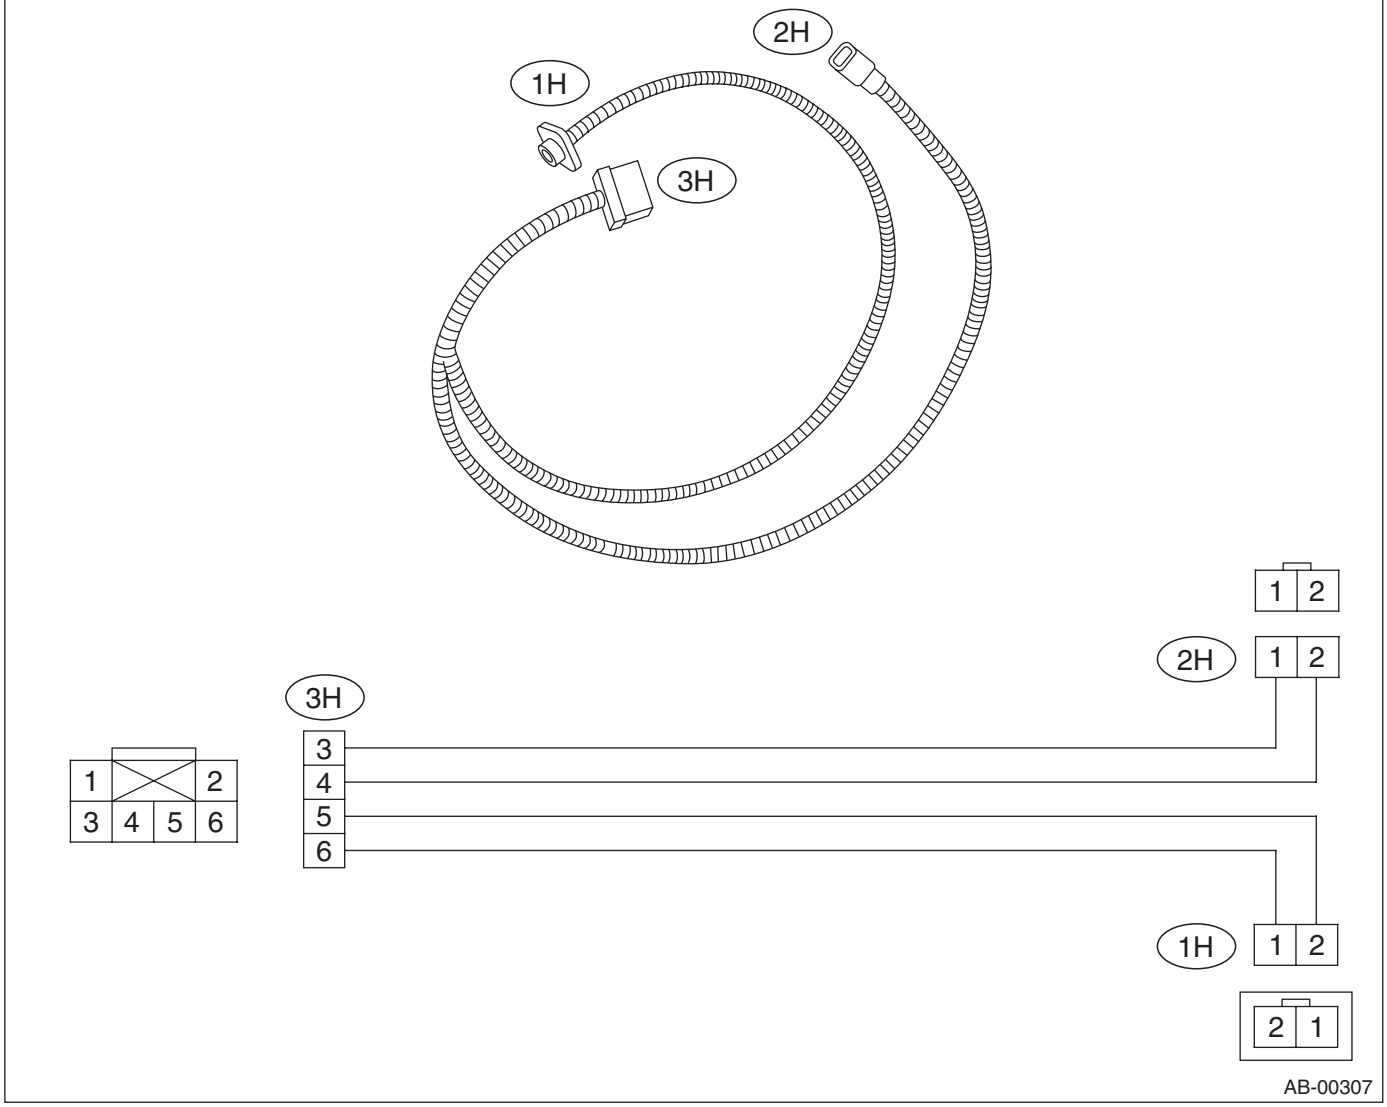

5. TEST HARNESS L

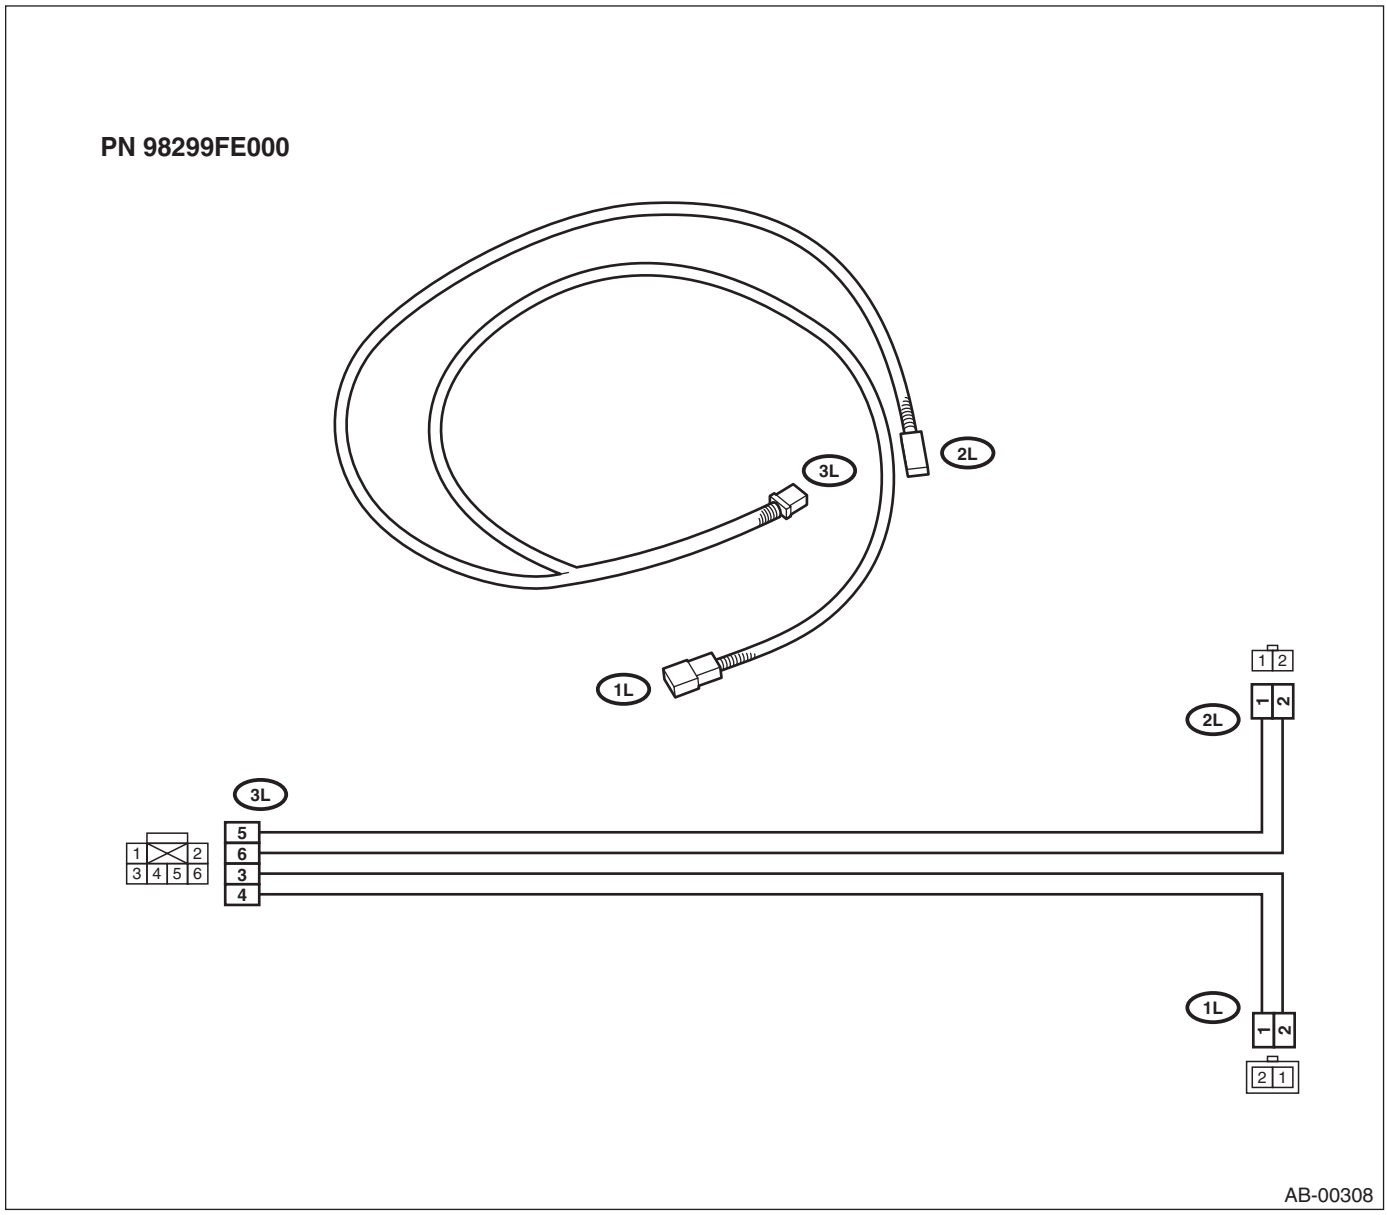

6. TEST HARNESS R

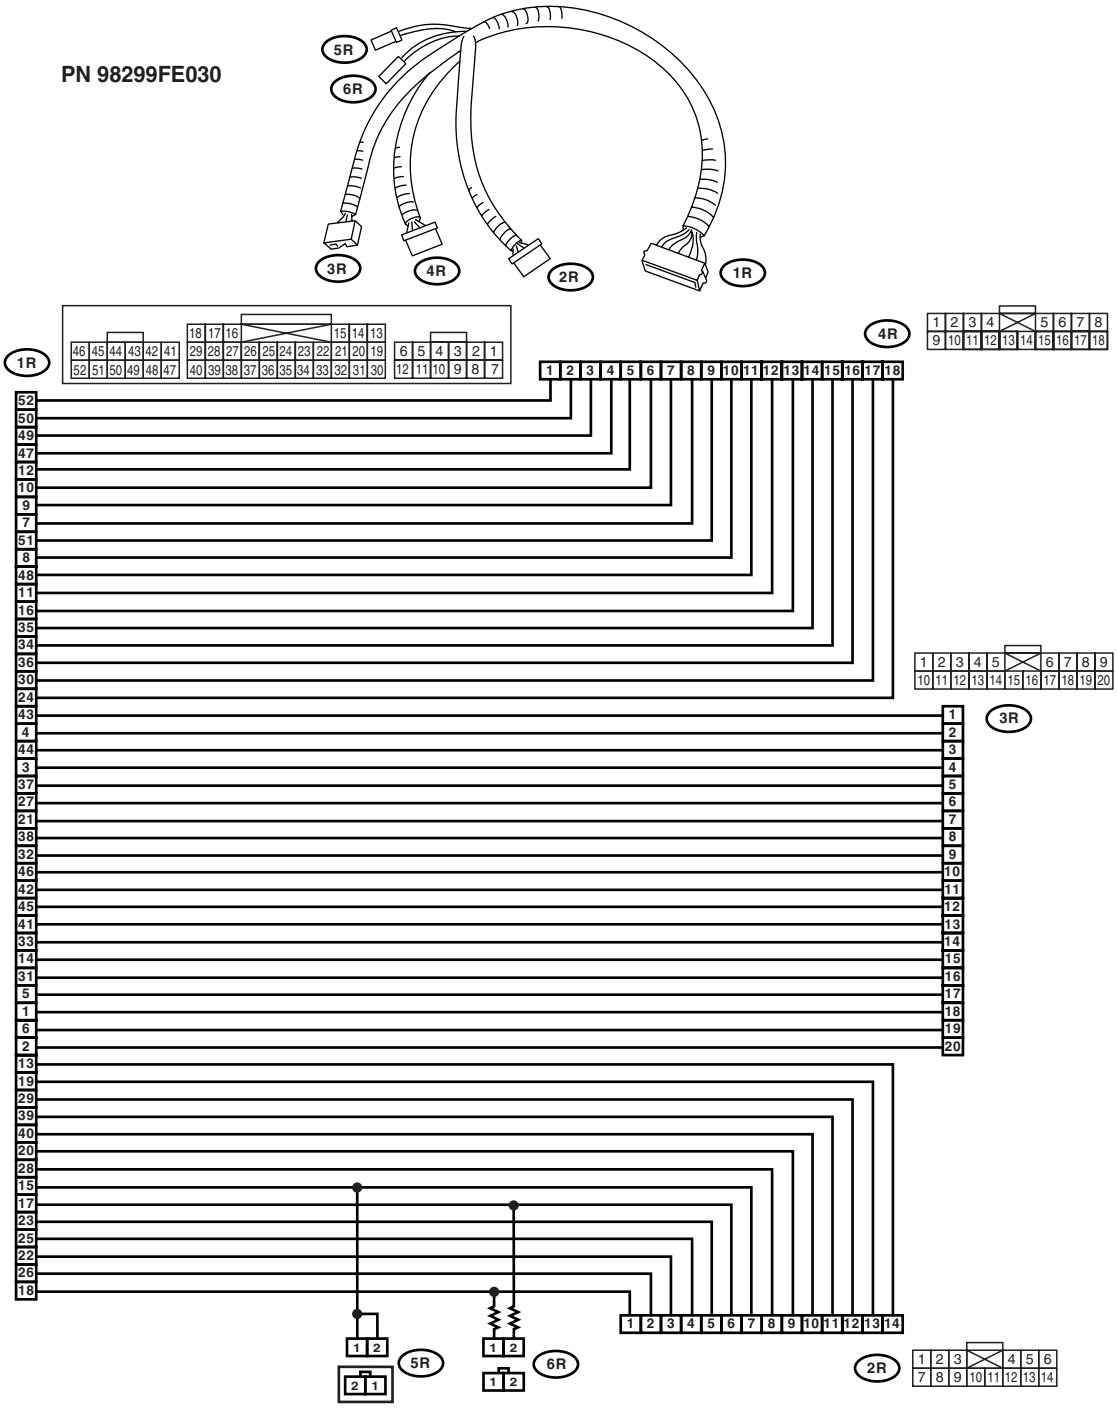

AB-00143

7. TEST HARNESS N

PN 98299SA000

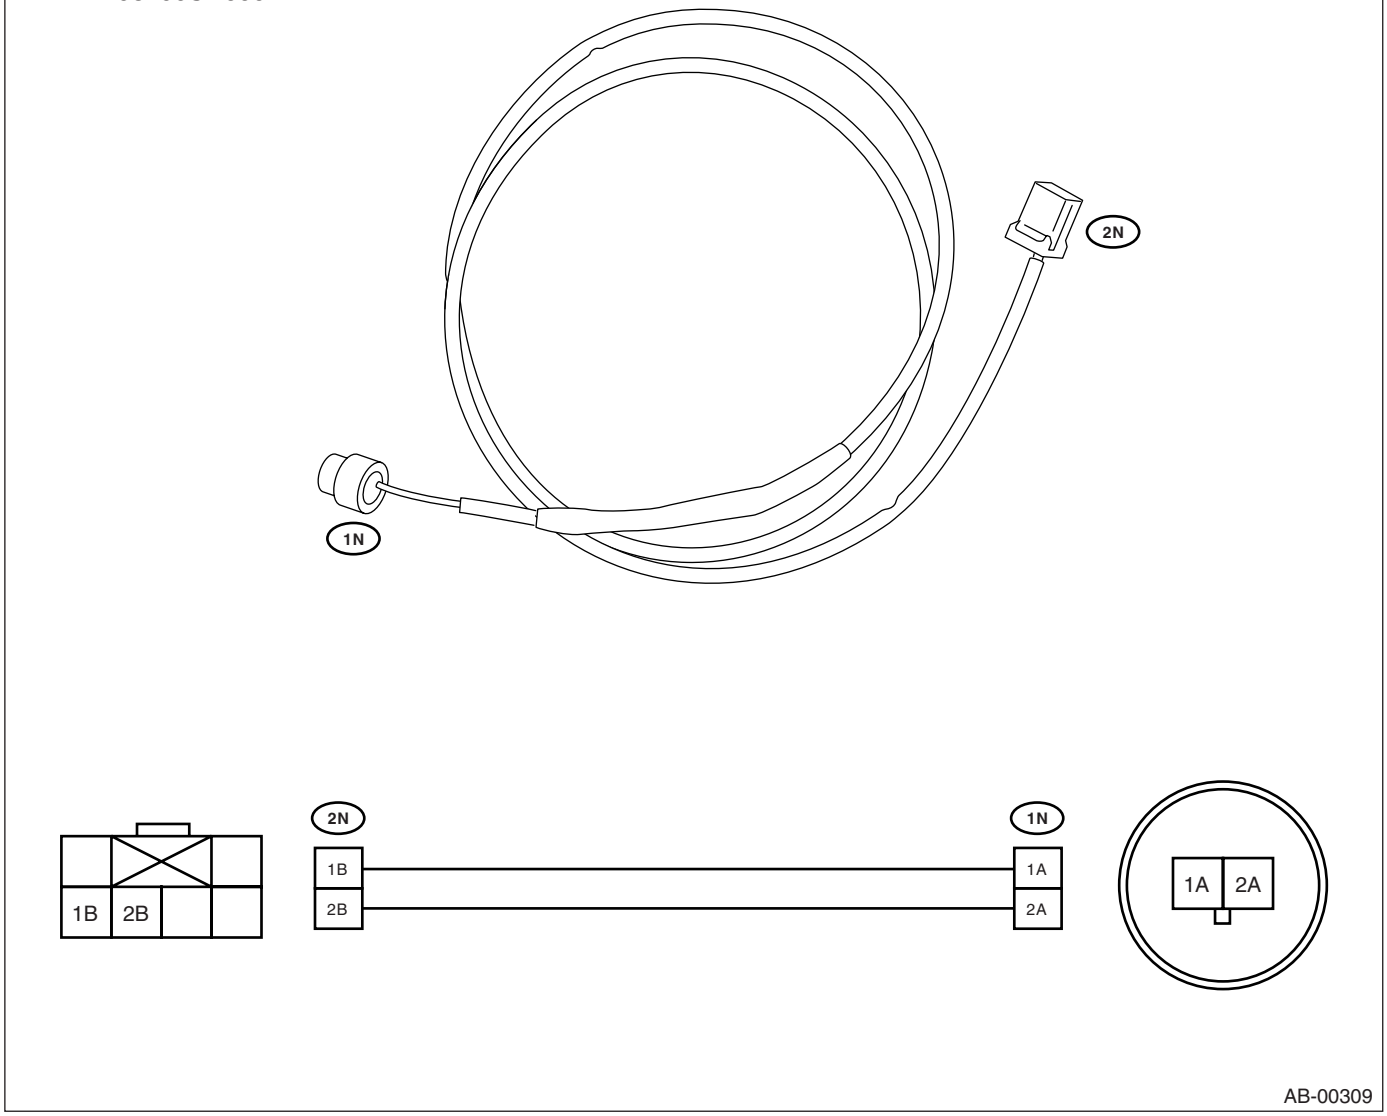

8. TEST HARNESS T

PN 98299SA060

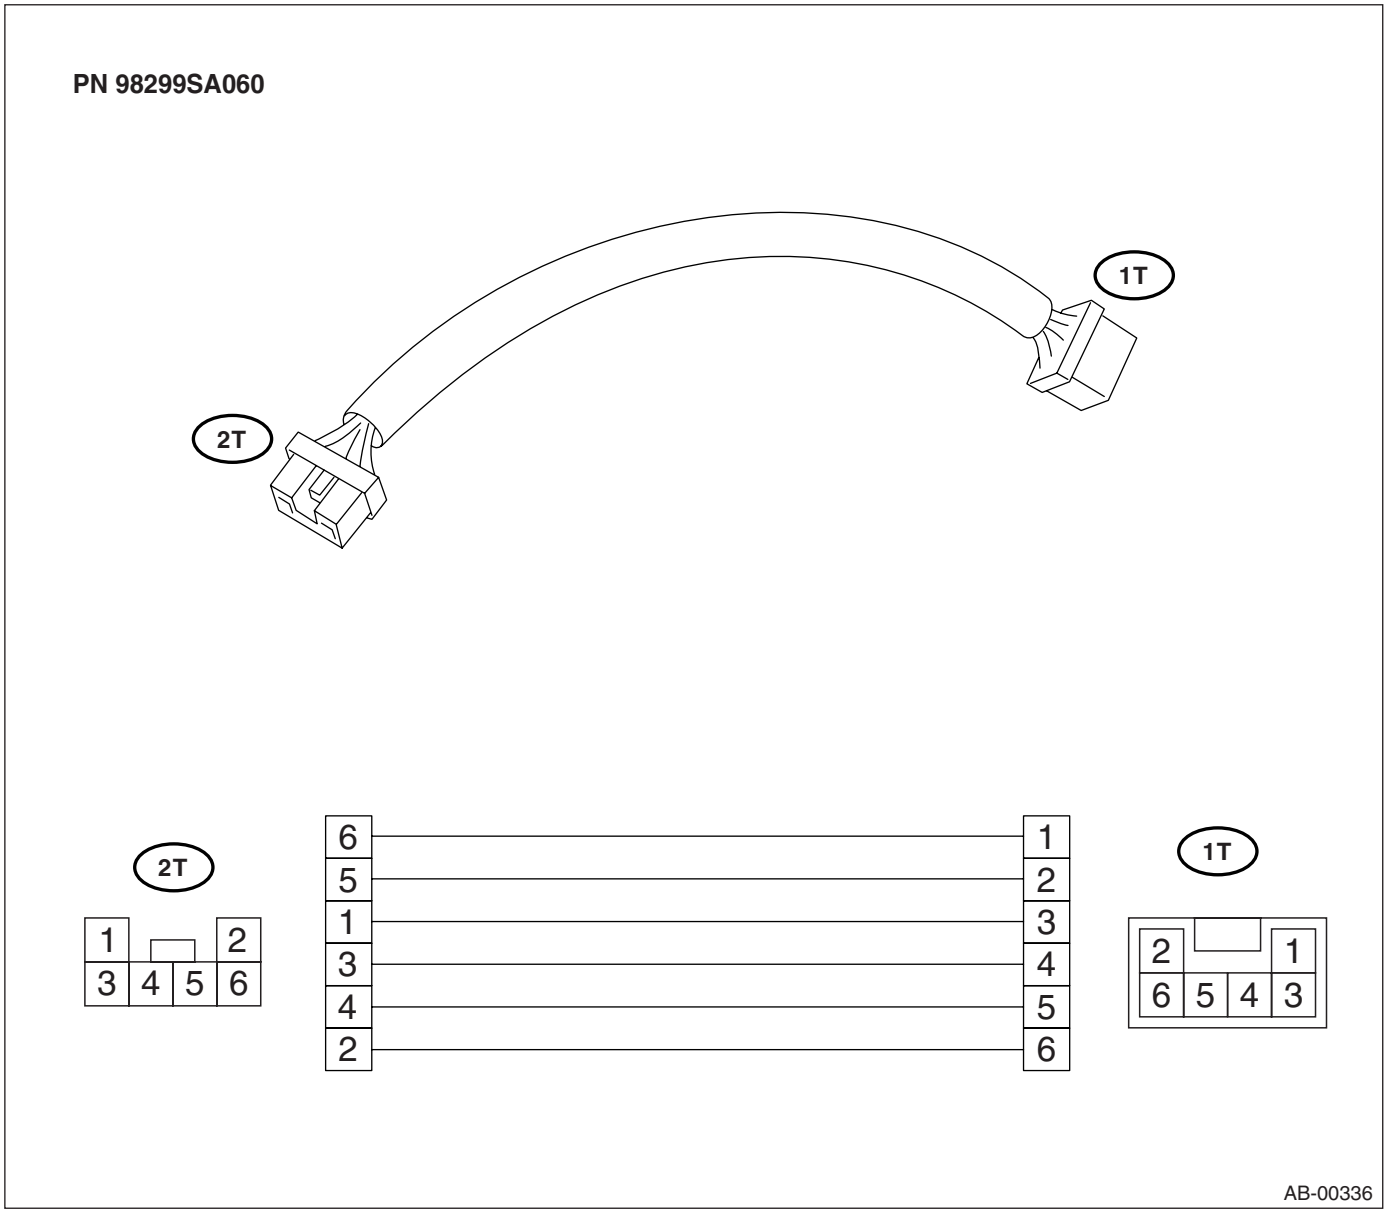

9. AIRBAG RESISTOR

The airbag resistor is used during diagnostics. The airbag resistor has the same resistance as the airbag module and thus provides safety when used instead of the airbag module. It also makes it possible to finish, diagnostics in less time.

PN 98299PA040

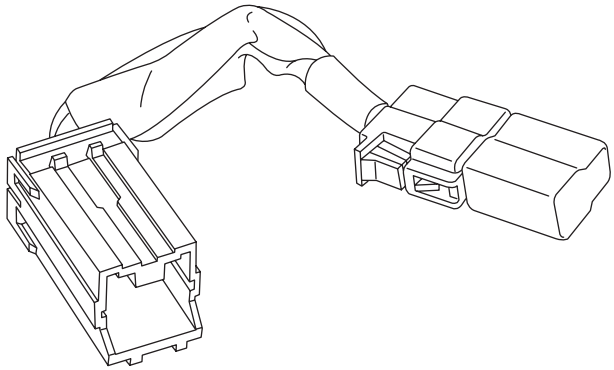

AB-00312

4. Electrical Components Location

A: LOCATION

1. LHD MODEL

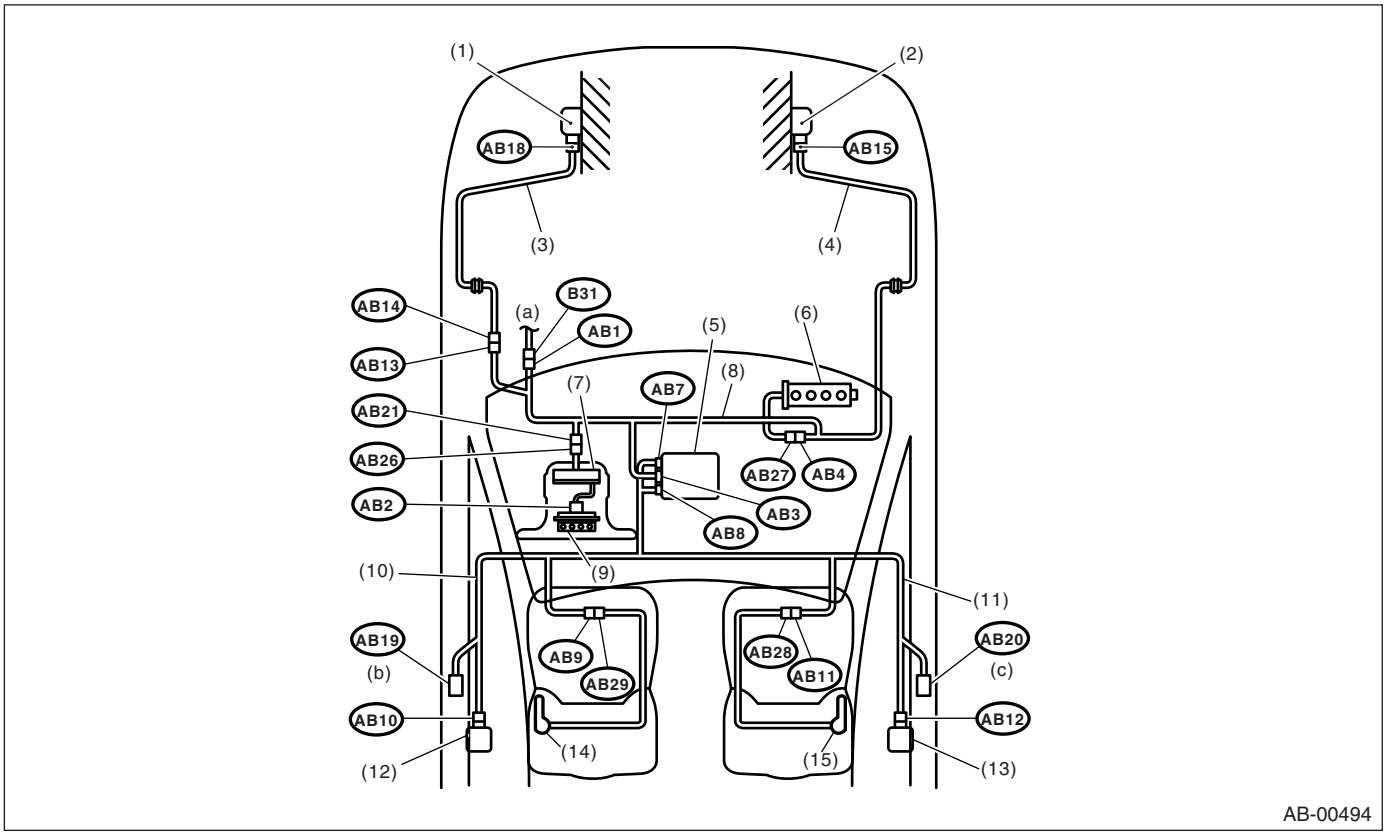

(1) Front sub sensor (LH)
(2) Front sub sensor (RH)
(3) Front sub sensor harness (LH)
(4) Front sub sensor harness (RH)
(5) Airbag control module with built-in safety and electric sensor
(6) Passenger's airbag inflator
(7) Roll connector
(8) Airbag main harness
(9) Driver's airbag inflator
(10) Side airbag harness (LH)
(11) Side airbag harness (RH)
(12) Side airbag sensor (LH)
(13) Side airbag sensor (RH)
(14) Side airbag inflator (LH)
(15) Side airbag inflator (RH)
(a) To body harness
(b) To seat belt pretensioner (LH)
(c) To seat belt pretensioner (RH)

Connector No.	(AB1)	(AB2)	(AB3)	(AB4)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pole	6	2	28	4	12	12	2	4	2	4	2	2
Color	Yellow	Black	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Male	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Male

Connector No.	(AB15)	(AB18)	(AB19)	(AB20)	(AB21)	(AB26)	(AB27)	(AB28)	(AB29)			
Pole	2	2	2	2	2	2	4	2	2			
Color	Yellow	Yellow	Black	Black	Yellow	Yellow	Yellow	Yellow	Yellow			
Male/Female	Female	Female	Female	Female	Female	Male	Male	Male	Male			

2. RHD MODEL

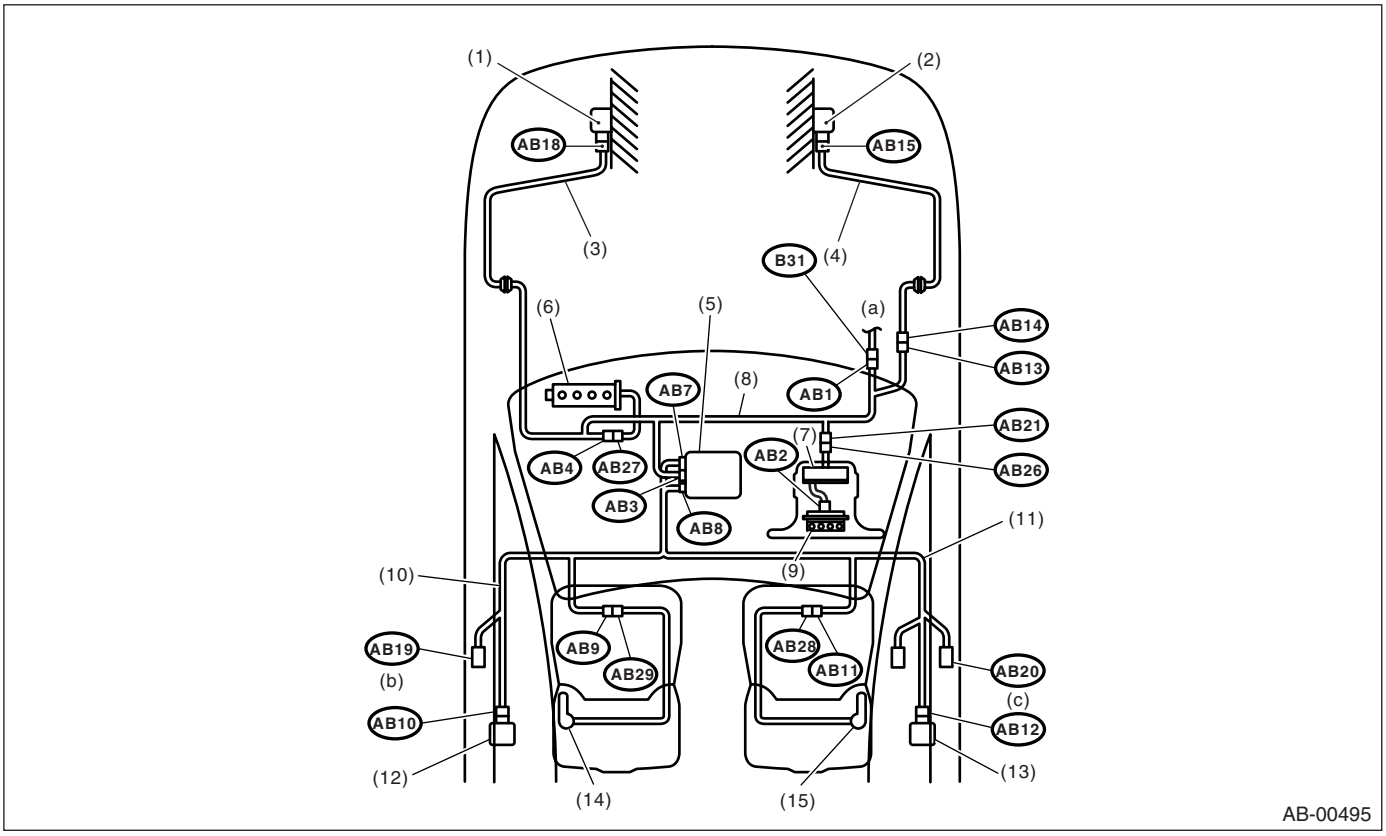

(1) Front sub sensor (LH)
(2) Front sub sensor (RH)
(3) Front sub sensor harness (LH)
(4) Front sub sensor harness (RH)
(5) Airbag control module with built-in safety and electric sensor
(6) Passenger's airbag inflator
(7) Roll connector
(8) Airbag main harness
(9) Driver's airbag inflator
(10) Side airbag harness (LH)
(11) Side airbag harness (RH)
(12) Side airbag sensor (LH)
(13) Side airbag sensor (RH)
(14) Side airbag inflator (LH)
(15) Side airbag inflator (RH)
(a) To body harness
(b) To seat belt pretensioner (LH)
(c) To seat belt pretensioner (RH)

Connector No.	(AB1)	(AB2)	(AB3)	(AB4)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pole	6	2	28	4	12	12	2	4	2	4	2	2
Color	Yellow	Black	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Male	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Male

Connector No.	(AB15)	(AB18)	(AB19)	(AB20)	(AB21)	(AB26)	(AB27)	(AB28)	(AB29)			
Pole	2	2	2	2	2	2	4	2	2			
Color	Yellow	Yellow	Black	Black	Black	Yellow	Yellow	Yellow	Yellow			
Male/Female	Female	Female	Female	Female	Female	Female	Male	Male	Male			

5. Airbag Control Module I/O Signal

A: SCHEMATIC

1. AIRBAG LHD MODEL

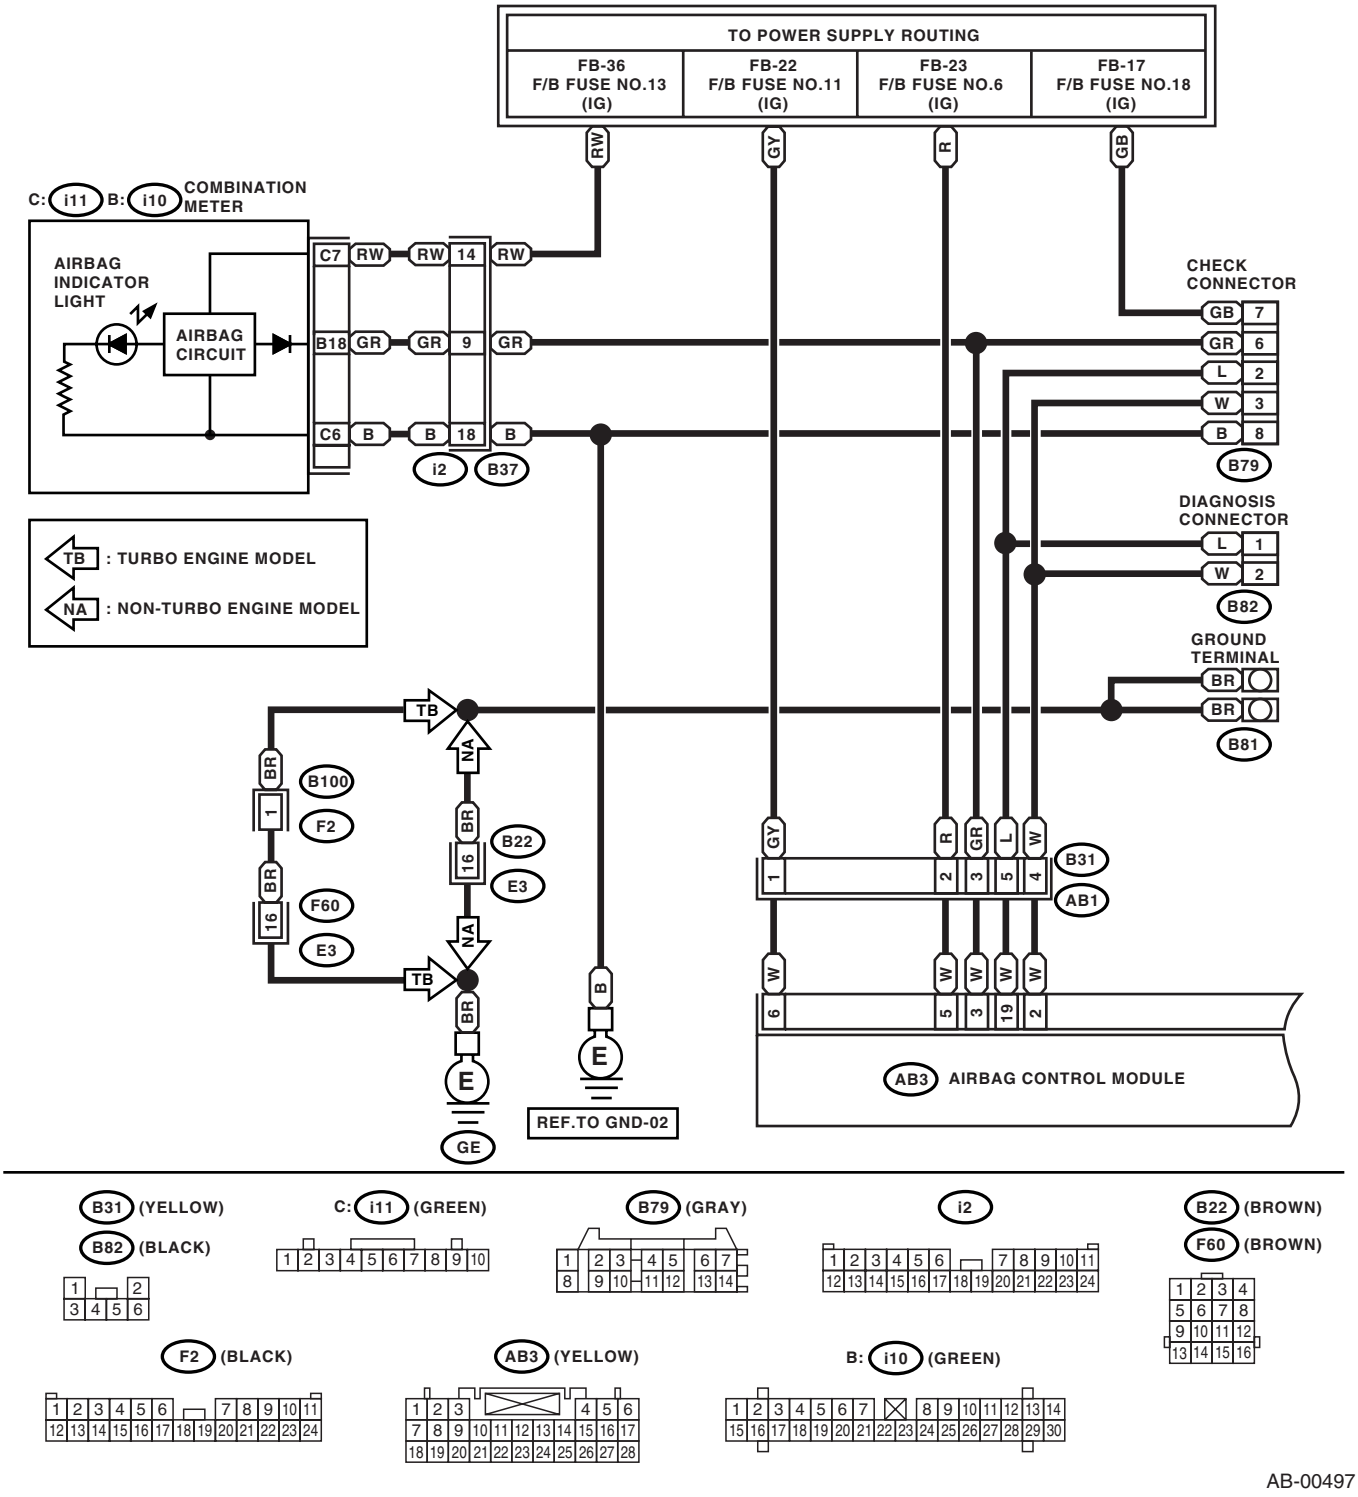

AB-00497

AIRBAG CONTROL MODULE I/O SIGNAL

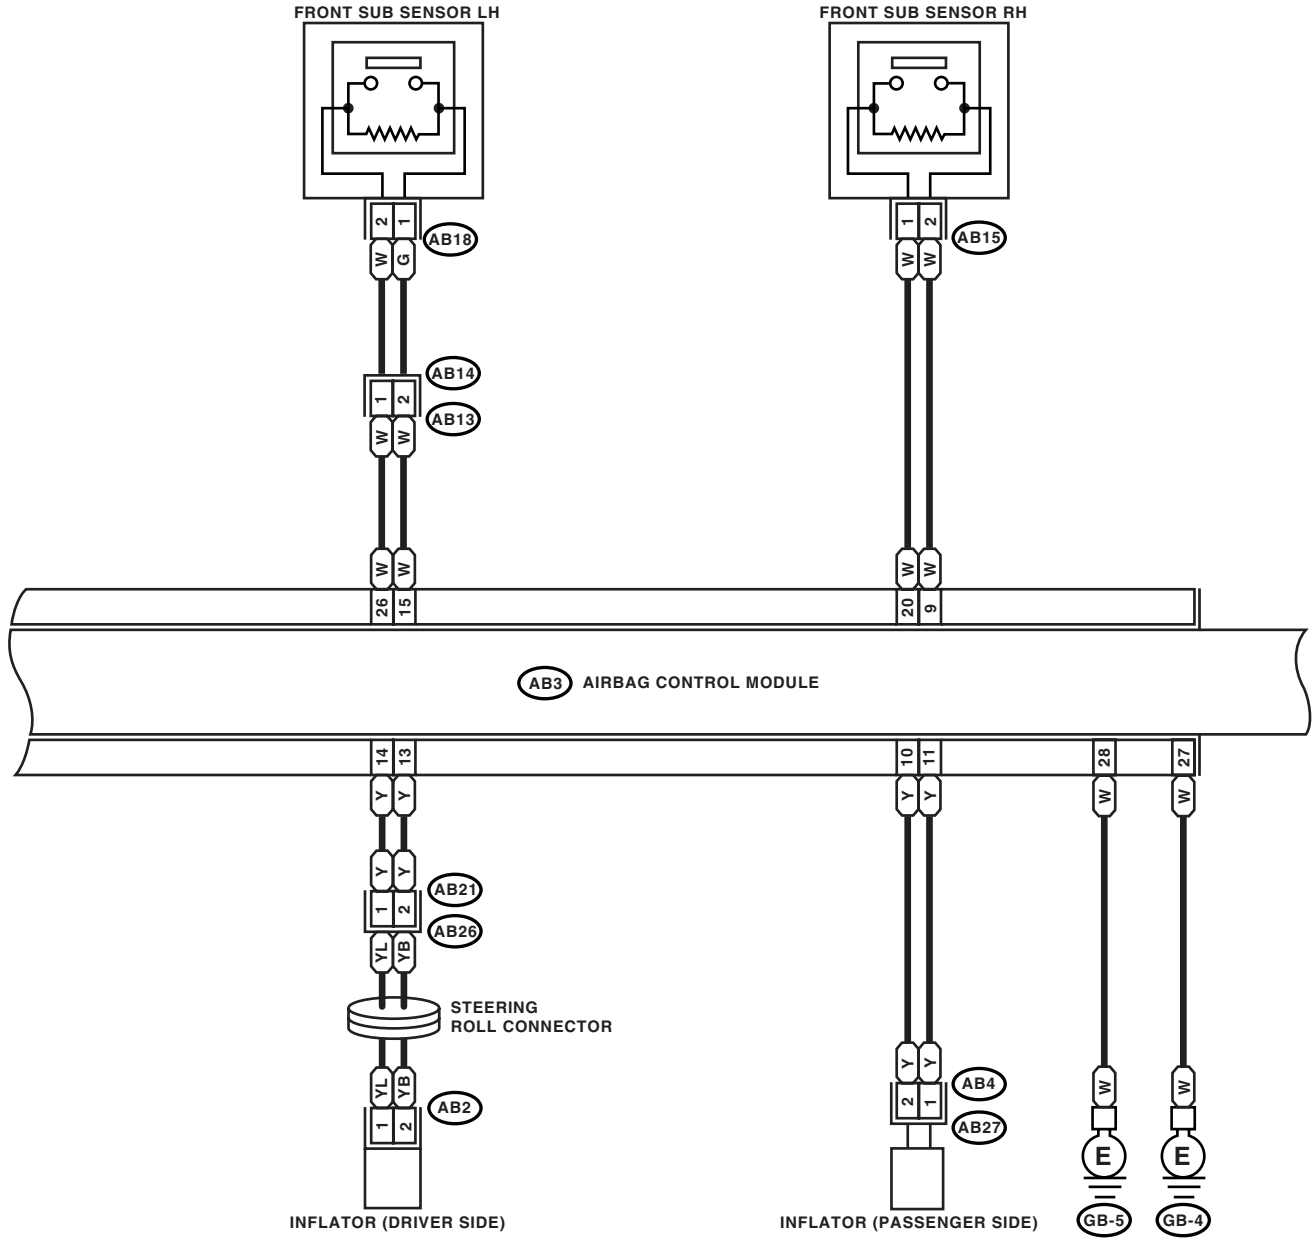

AB4 (YELLOW)
AB13 (YELLOW)
AB21 (YELLOW)

AB15 (YELLOW)
AB18 (YELLOW)

AB3 (YELLOW)

AB2

AB-00501

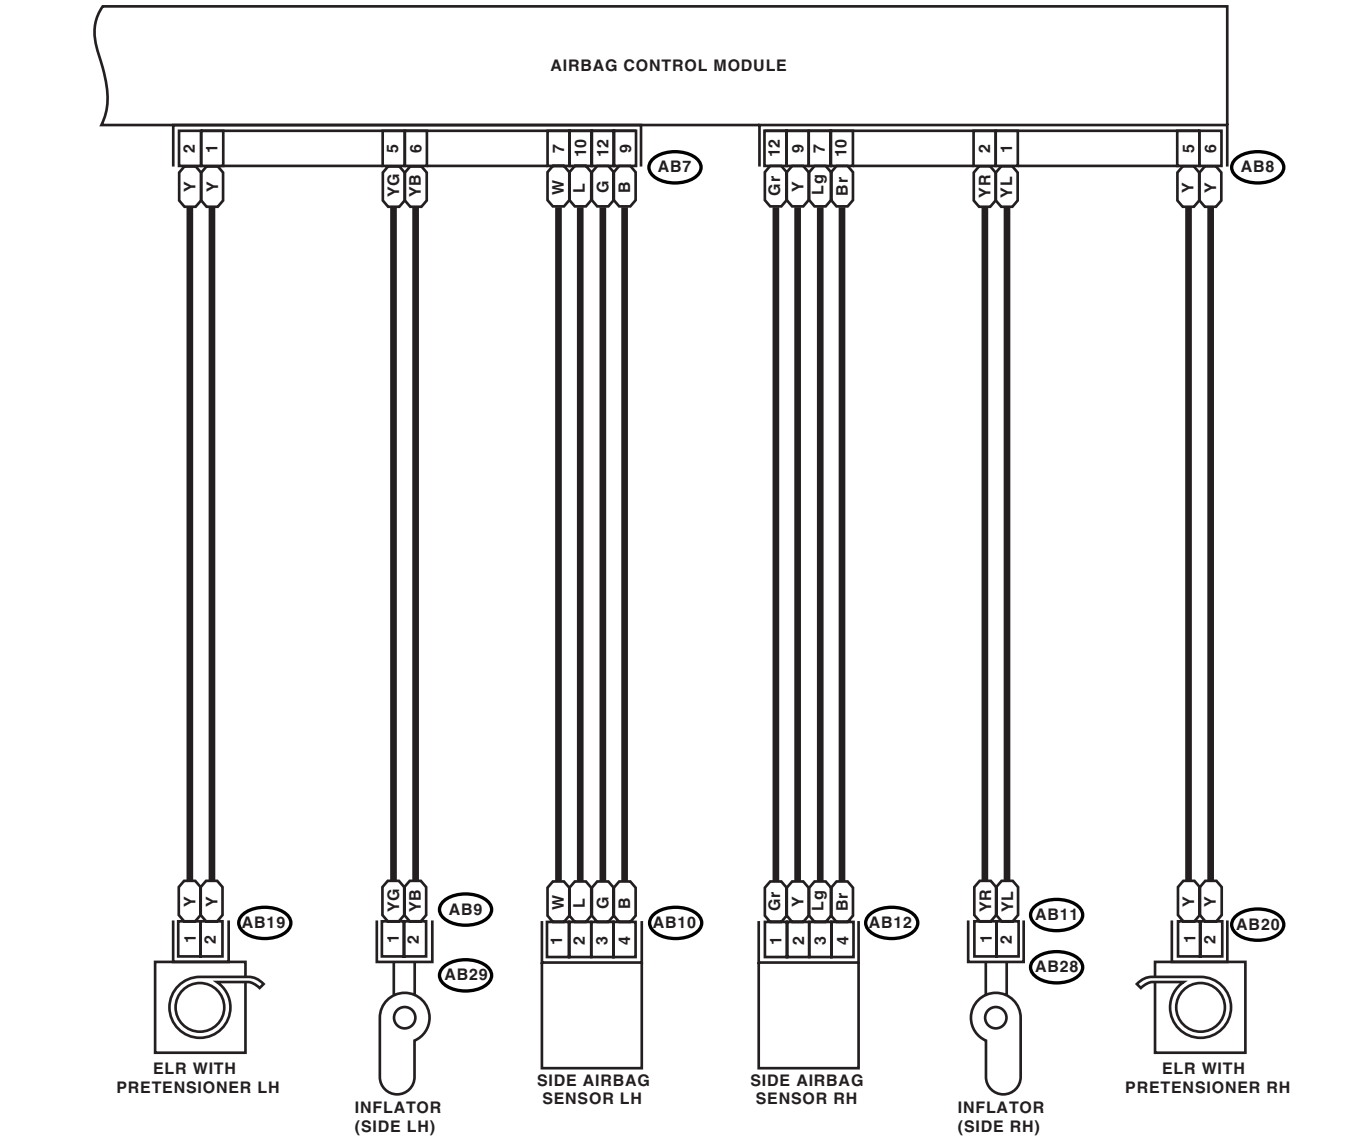
AIRBAG CONTROL MODULE
AB7
AB8
AB19
AB9
AB29
AB10
AB12
AB11
AB28
AB20
ELR WITH PRETENSIONER LH
INFLATOR (SIDE LH)
SIDE AIRBAG SENSOR LH
SIDE AIRBAG SENSOR RH
INFLATOR (SIDE RH)
ELR WITH PRETENSIONER RH

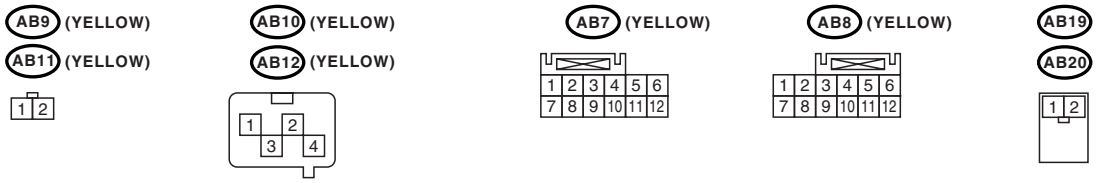
AB9 (YELLOW)
AB11 (YELLOW)
AB10 (YELLOW)
AB12 (YELLOW)
AB7 (YELLOW)
AB8 (YELLOW)
AB19
AB20

AB-00505

2. AIRBAG RHD MODEL

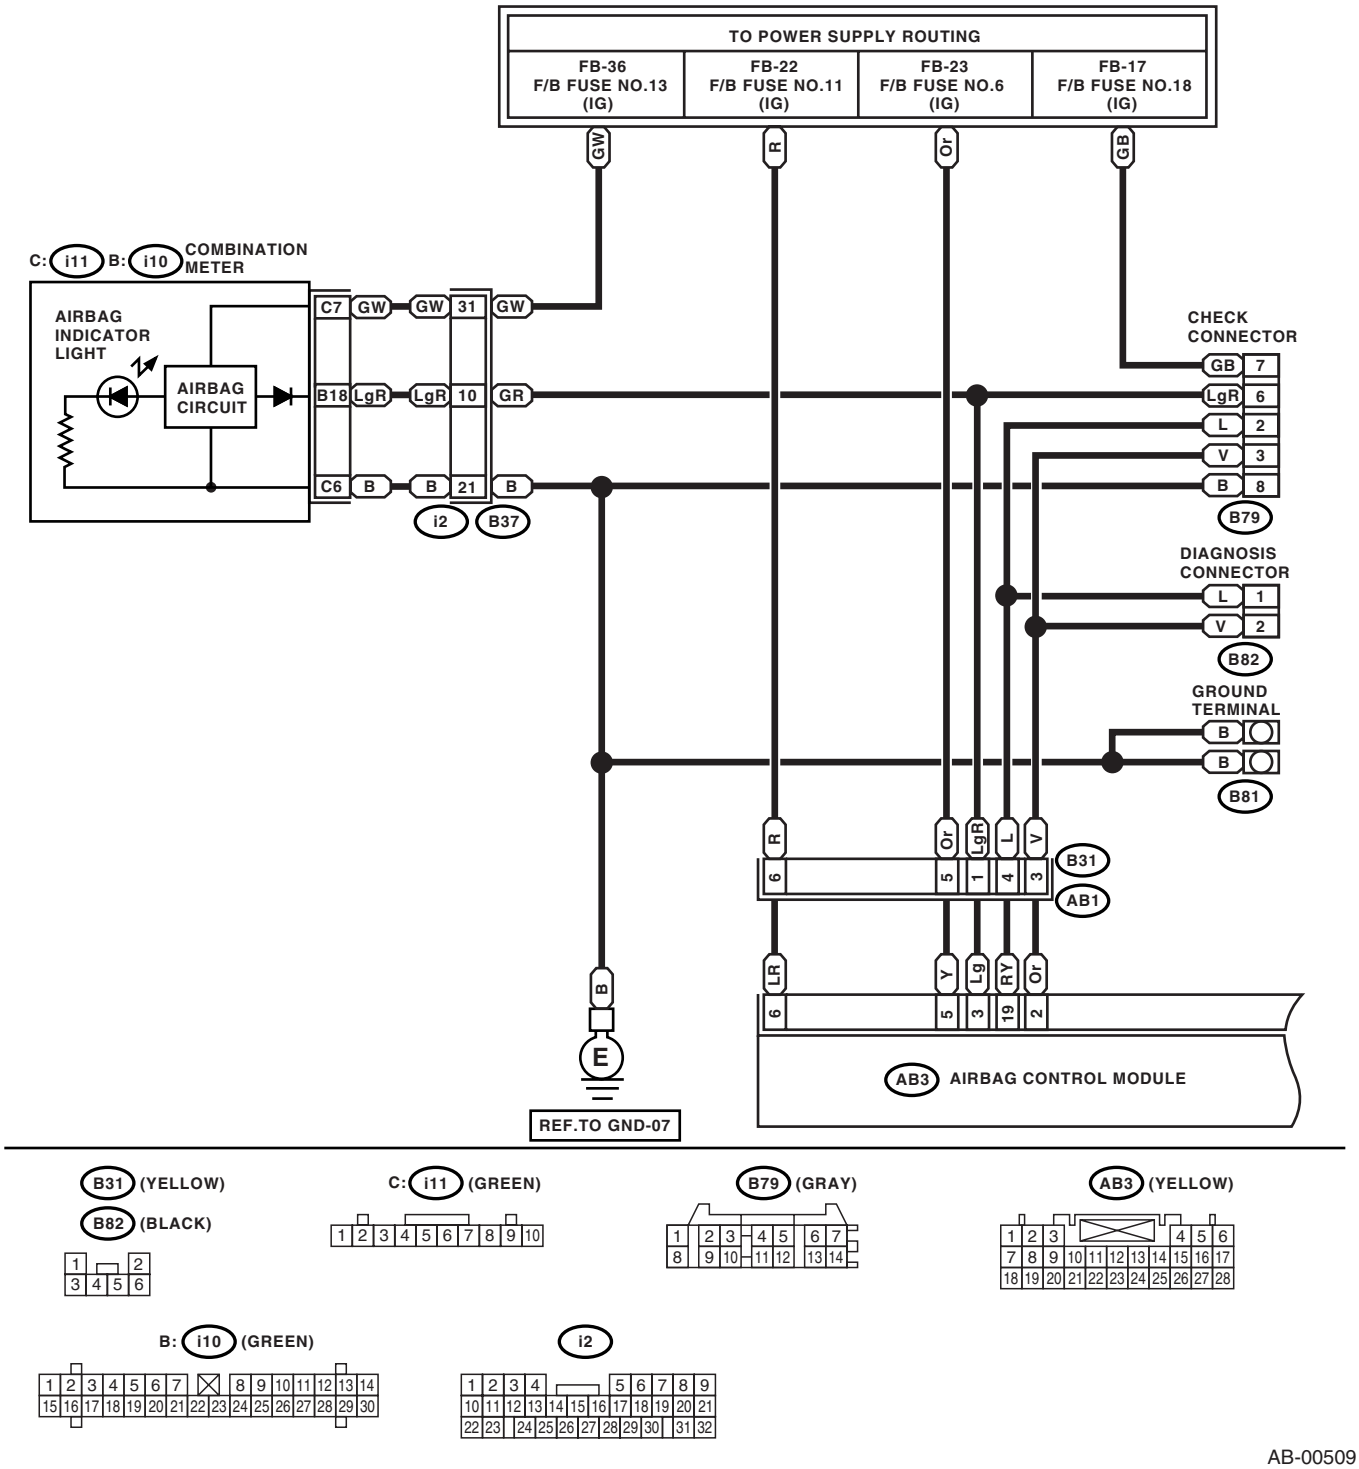

AB-00509

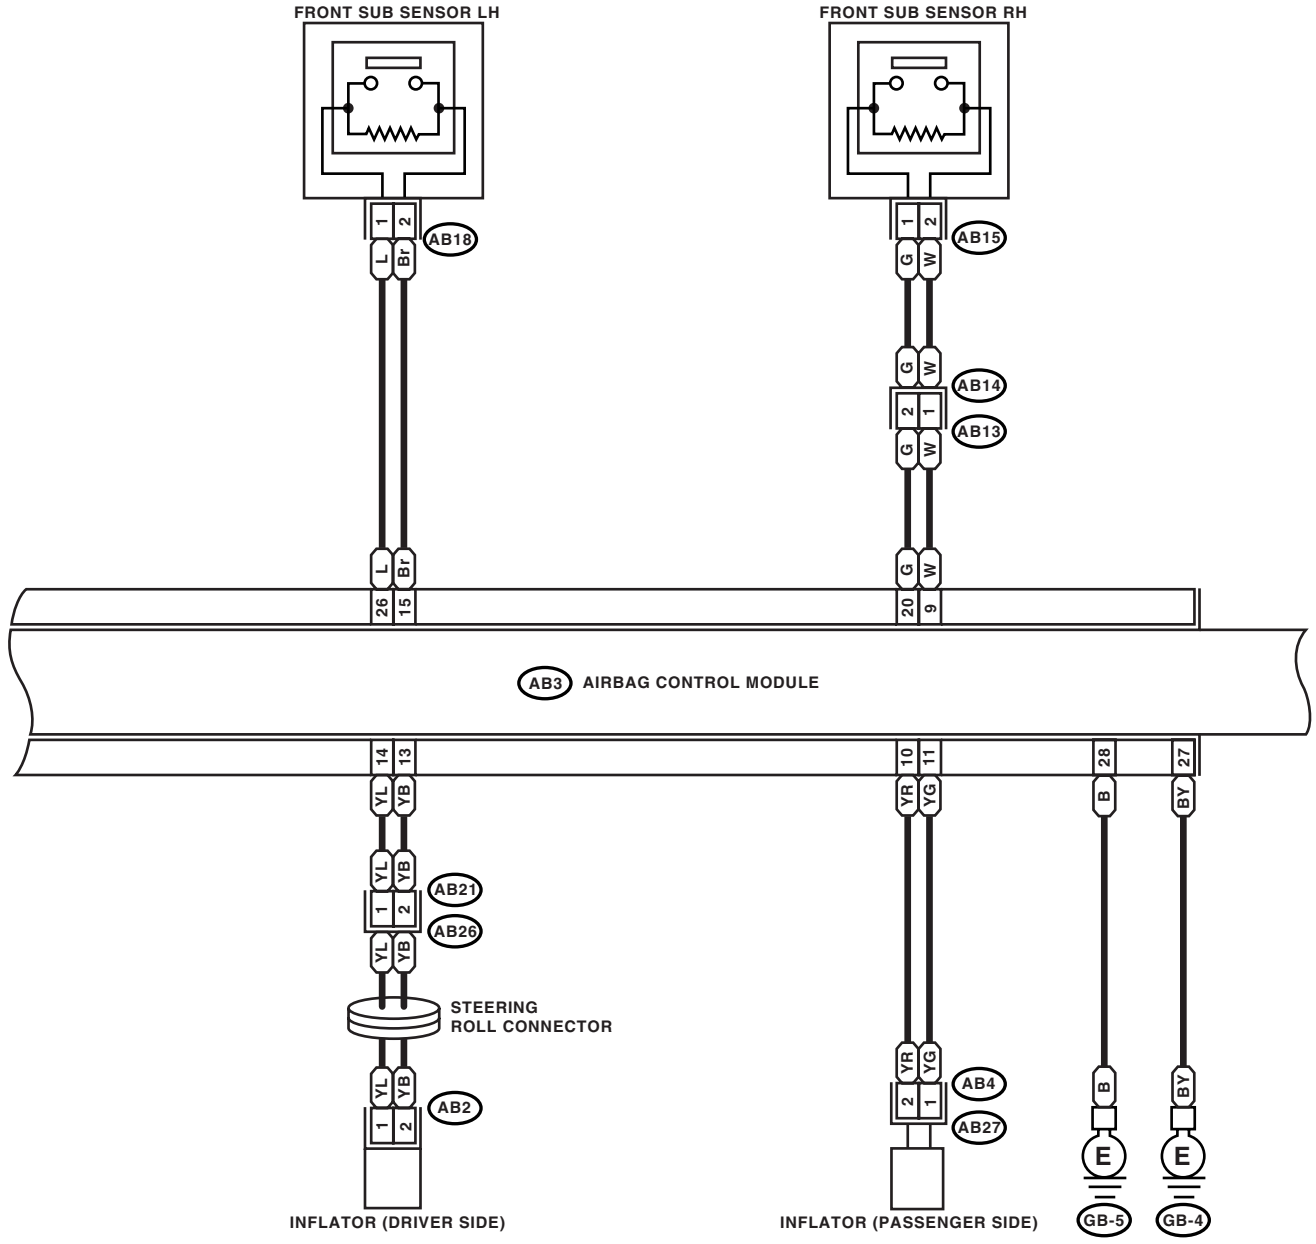
FRONT SUB SENSOR LH
FRONT SUB SENSOR RH
AB18
AB15
AB14
AB13
AB3 AIRBAG CONTROL MODULE
AB21
AB26
STEERING ROLL CONNECTOR
AB2
AB4
AB27
INFLATOR (DRIVER SIDE)
INFLATOR (PASSENGER SIDE)
GB-5
GB-4

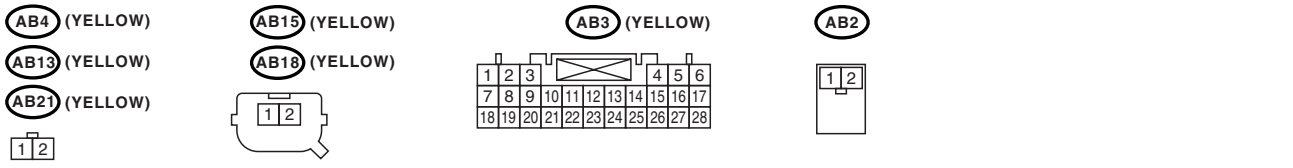
AB4 (YELLOW)
AB13 (YELLOW)
AB21 (YELLOW)
AB15 (YELLOW)
AB18 (YELLOW)
AB3 (YELLOW)
AB2

AB-00513

AIRBAG CONTROL MODULE I/O SIGNAL

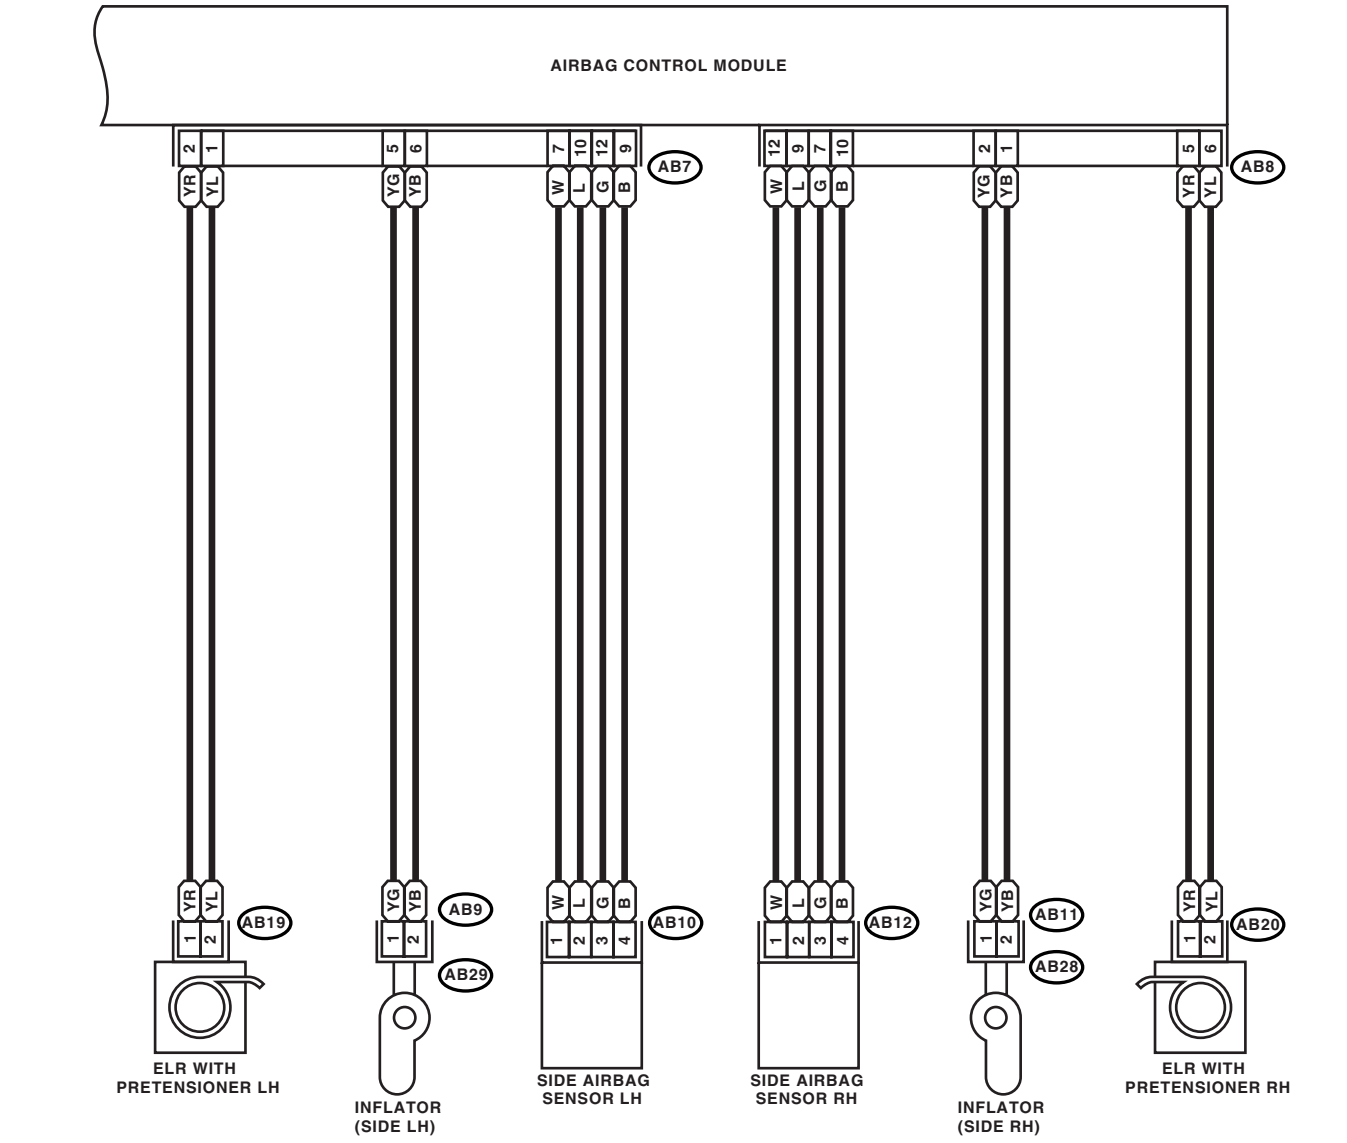

AB-00517

6. Airbag Connector

A: OPERATION

1. POWER SUPPLY

1) How to disconnect:
(1) Move the slide lock (A) in the direction of the arrow.
(2) Pull the female connector in the direction of the arrow with slide lock (A) moved.

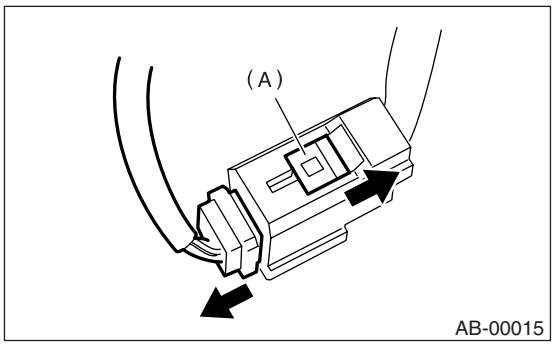

CAUTION:
When pulling, be sure to hold onto the connector and not the wire.

2) How to connect:
Holding the connector (A), and push it in carefully until a connecting sound is heard.

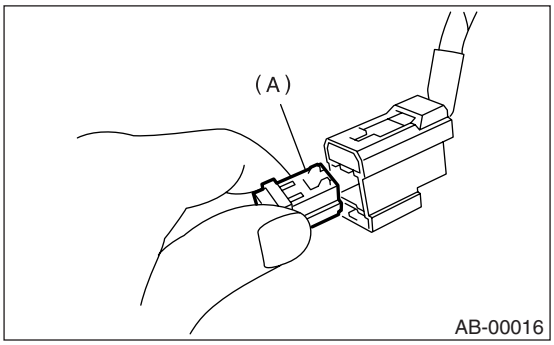

CAUTION:
Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

2. DRIVER'S AIRBAG (BETWEEN AIRBAG MAIN HARNESS AND ROLL CONNECTOR), PASSENGER'S AIRBAG AND SIDE AIRBAG

1) How to disconnect:
(1) Push the lock arm (A).
(2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of the arrow.

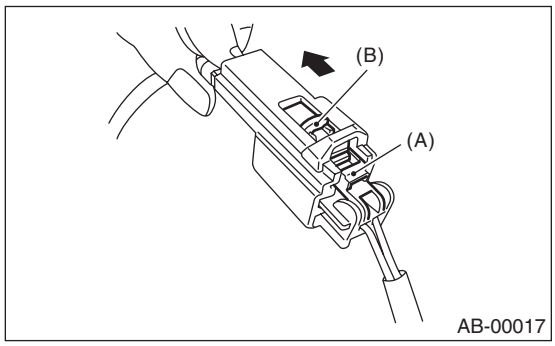

(3) With the slide lock (B) pulled, remove the lock arm (A) to its original position, and then pull in the direction of the arrow and separate the connector.

CAUTION:
When pulling, be sure to hold onto the connector and not the wire.

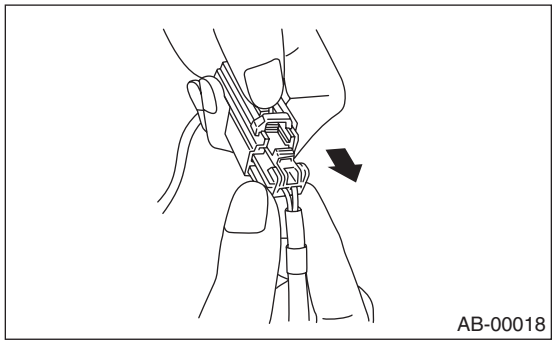

2) How to connect:
Holding the connector, and push it in carefully until a connecting sound is heard.

CAUTION:
Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

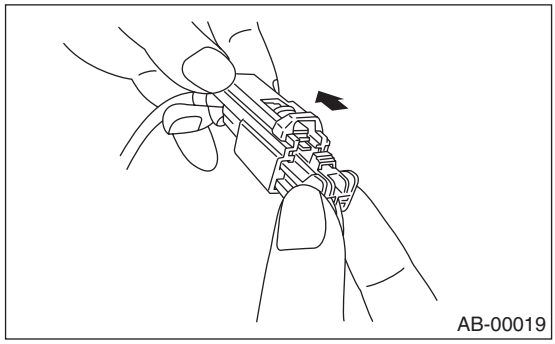

3. DRIVER'S AIRBAG MODULE AND PRETENSIONER

1) How to disconnect:
(1) Using a flat tip screwdriver, pry the push lock upward to unlock.

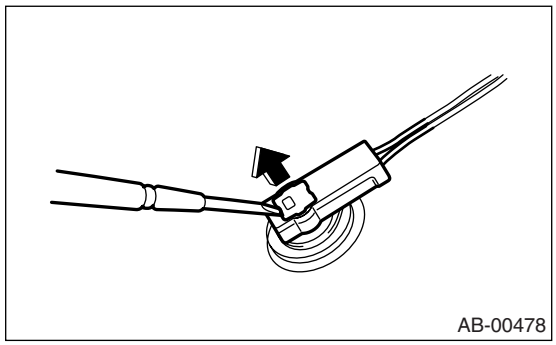

(2) Pull the connector to disconnect from driver's side airbag module assembly or retractor assembly.

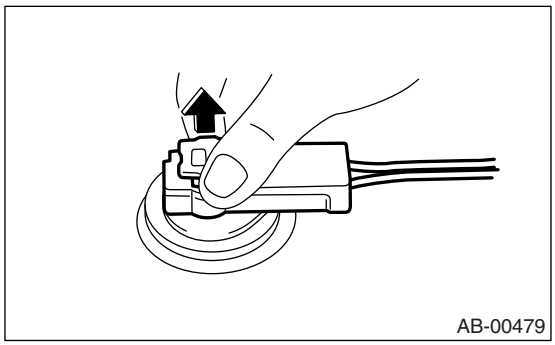

2) How to connect:
Connect the connector in reverse order of disconnecting. At this time, be sure to insert the connector in until connecting sound is heard.

CAUTION:
• Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.
• Be sure to push the push lock in securely.

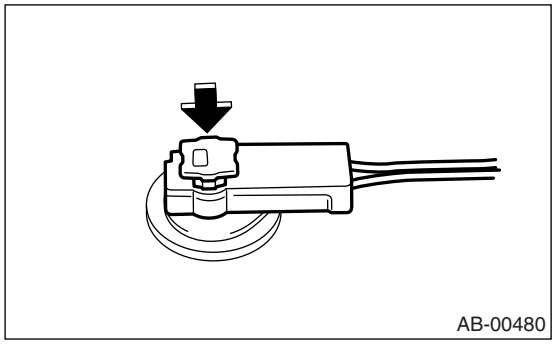

4. FRONT SUB-SENSOR AND SIDE AIRBAG SENSOR

1) How to disconnect:
Holding outer part (A), pull it in the direction of the arrow.

CAUTION:
When pulling, be sure to hold onto the connector and not the wire.

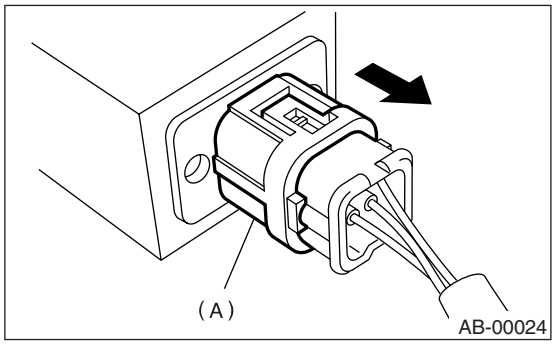

2) How to connect:
Holding the connector, and push it in carefully until a connecting sound is heard.

CAUTION:
• Outer (A) moves back, and so do not put your hand on the outer part.
• Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

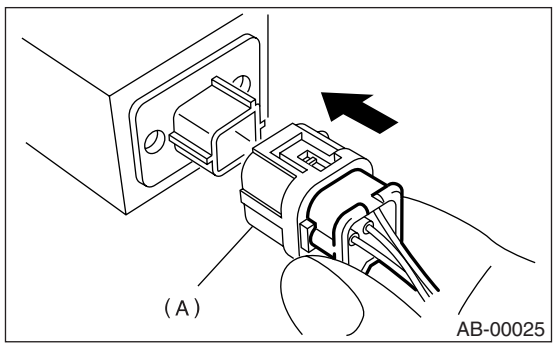

7. Airbag Warning Light Illumination Pattern

A: INSPECTION

Keep the ignition switch to ON, and confirm that the airbag warning light remains off after being turned on for approx. 6 seconds.

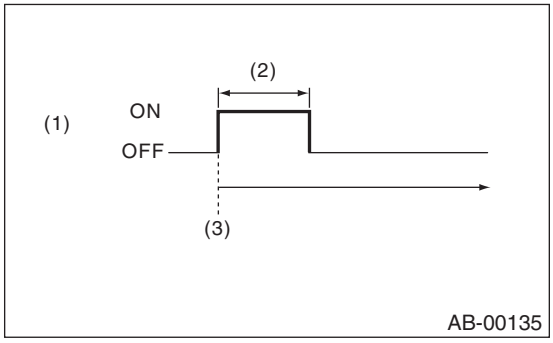

(1) Airbag warning light
(2) Approx. 6 seconds
(3) Ignition switch ON

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1) Turn the ignition switch to ON.
2) Connect the ground terminal to diagnosis connector terminal No. 1 in the instrument panel lower cover area.

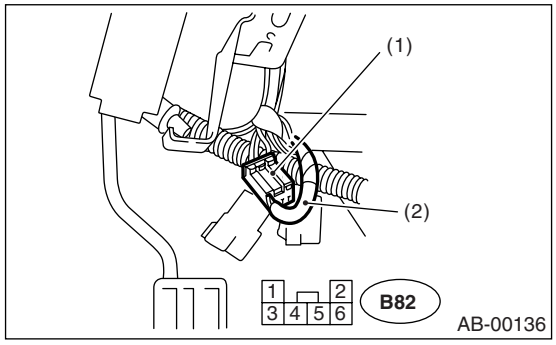

(1) Diagnosis connector
(2) Ground terminal

3) Read the DTC by identifying the way airbag warning light flashes.
The airbag warning light flashes a code corresponding to the faulty parts.
The long segment (1.2 sec on) indicates a “ten”, and the short segment (0.3 sec on) indicates a “one”.

NOTE:
• “List of Diagnostic Trouble Code (DTC)” <Ref. to AB-38, List of Diagnostic Trouble Code (DTC).>
• “Airbag Warning Light Failure” <Ref. to AB-31, Airbag Warning Light Failure.>

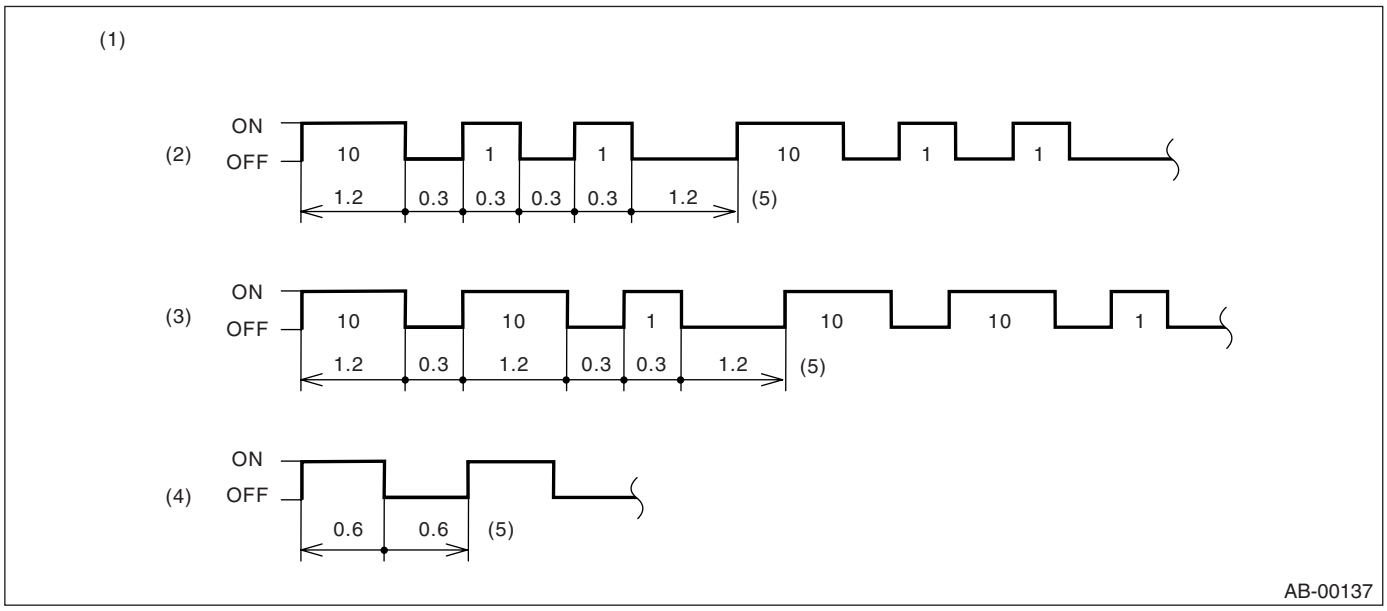

(1) Example
(2) Flashing code 12:
(3) Flashing code 21:
(4) Flashing normal code:
(5) Sec

4) Turn the ignition switch to OFF, and disconnect the ground terminal from the diagnosis connector terminal No. 1.
5) Wind tape around the ground terminal and return it to its original position.

9. Inspection Mode

A: OPERATION

Recreate the circumstance by referring to the conditions described in the checklist.

10.Clear Memory Mode

A: OPERATION

1) Turn the ignition switch to ON.
2) Connect the ground terminal (ground terminal “A”) to diagnosis connector terminal No. 1 in the instrument panel lower cover area.

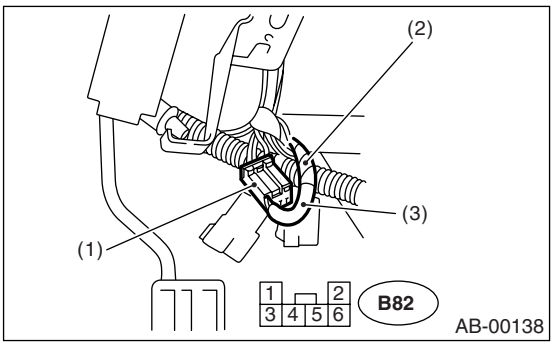

(1) Diagnosis connector
(2) Ground terminal “B”
(3) Ground terminal “A”

3) While the warning light flashes, connect another diagnosis terminal (ground terminal “B”) to diagnosis connector terminal No.2.
4) Once the memory is erased, the warning light returns to the normal flash rate (0.6 sec on). The failure to recover the normal flash rate indicates that trouble parts still remain. Having repaired such parts, erase the memory again and confirm that the normal flash rate has returned.
5) When the memory has been cleared, disconnect the ground terminal from the diagnosis connector.
6) Wind tape around the ground terminal and return it to its original position.

11.Airbag Warning Light Failure

A: AIRBAG WARNING LIGHT REMAINS ON.

DIAGNOSIS:

- Airbag warning light unit is faulty.
- Airbag control module to airbag warning light circuit is shorted or open.
- Grounding circuit is faulty.
- Airbag control module is faulty.
- (AB1) and (B31) are not connected properly.
- (AB3) is not connected properly to the airbag control module.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the airbag module connector of the driver and passenger seats for safety reasons.

1. LHD MODEL

WIRING DIAGRAM:

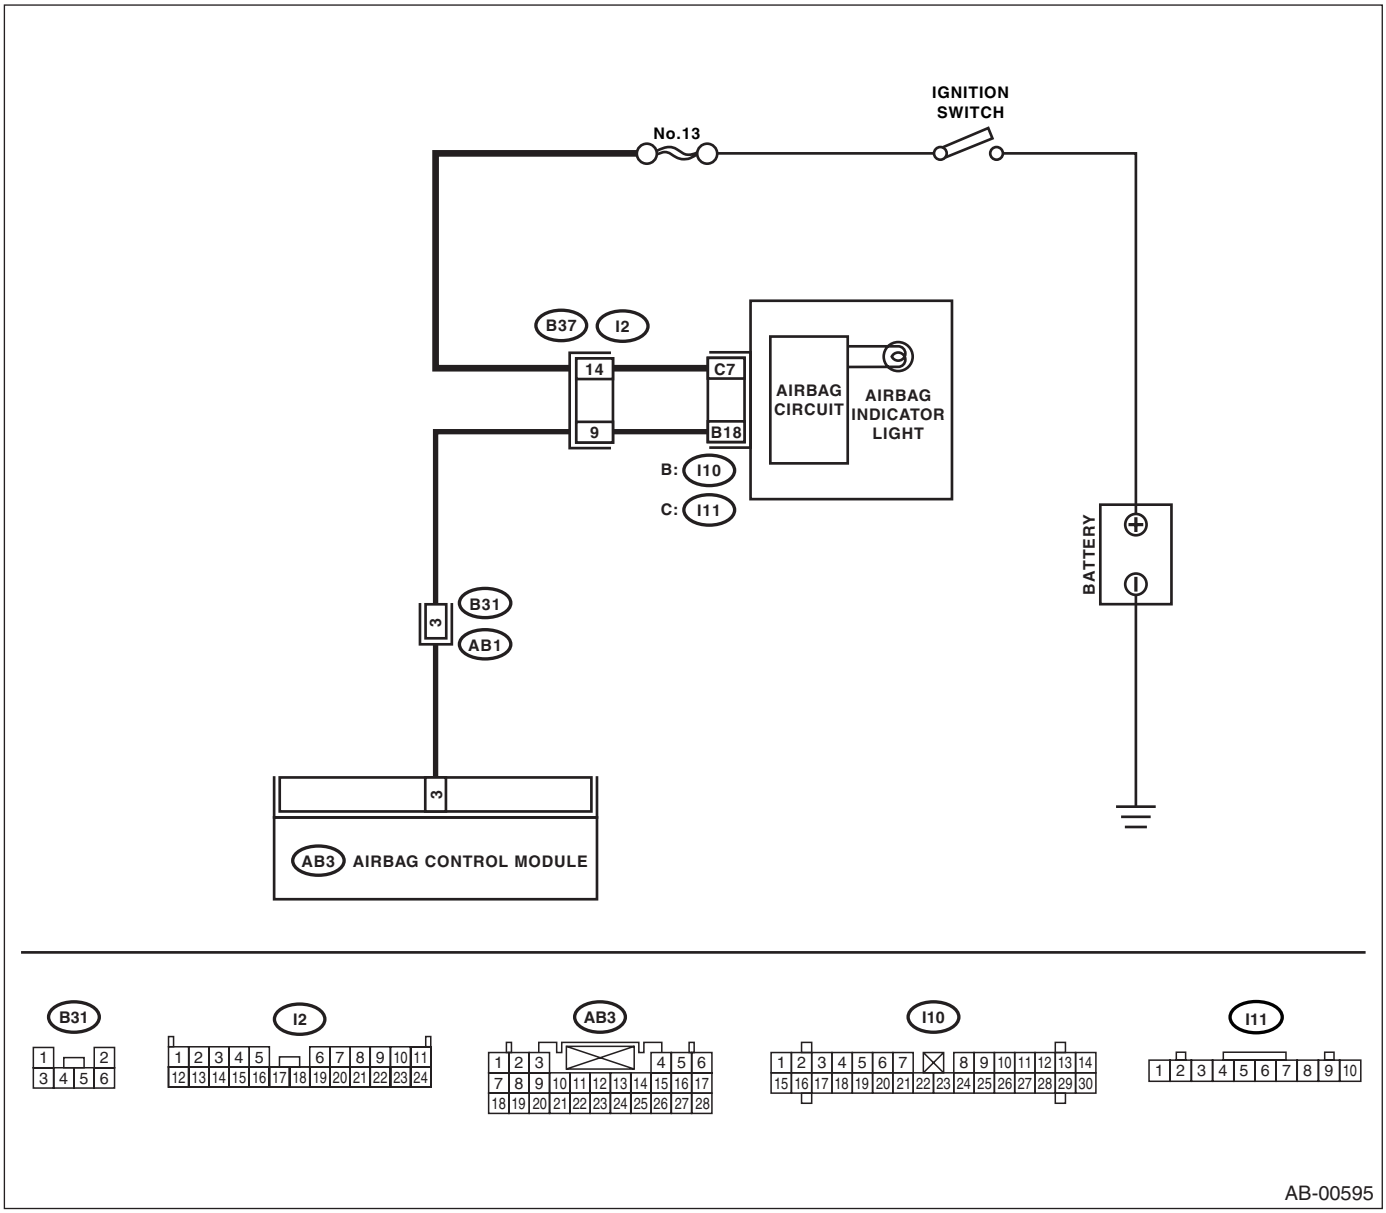

	Step	Check	Yes	No
1	**CHECK POOR CONTACT IN CONNECTORS (AB1) AND (B31).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Remove the side sill cover. (Driver's side) 3)Confirm that firm contact is secured between connectors (AB1) and (B31).	Is the poor contact in connectors (AB1) and (B31)?	Repair the body harness or replace the body harness with airbag main harness.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK AIRBAG WARNING LIGHT.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Connect the connector (1T) in test harness T to the body harness connector (B31). 3)Connect the connector (1M) in test harness M to the connector (2T) in test harness T. 4)Connect the battery ground cable and turn the ignition switch to ON. 5)Connect two connectors, (3M) and (4M) in test harness M.	Is the airbag warning light turned off?	Go to step **4.**	Go to step **3.**
3	**CHECK BODY HARNESS.** Check the body harness. NOTE: After problem has been eliminated, disconnect the connectors (3M) and (4M).	Is the anything unusual to body harness?	Repair the body harness.	Replace the combination meter printed circuit. <Ref. to IDI-11, Combination Meter Assembly.>
4	**CHECK POOR CONTACT.** Confirm that firm contact is secured between the airbag control module and the connector (AB3). <Ref. to AB-16, Airbag Control Module.>	Is the poor contact in connector (AB3)?	Replace the body harness with airbag main harness or replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **5.**
5	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Connect the connector (AB1) to (B31). 3)Disconnect the connectors (AB26) and (AB21). 4)Remove the glove box and disconnect the connectors (AB27) and (AB4). 5)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 6)Connect the battery ground cable and turn the ignition switch to ON. 7)Connect the connectors (5R) and (6R) in test harness R. NOTE: After problem has been eliminated, disconnect the connectors (5R) and (6R).	Is the airbag warning light turned off?	Go to step **6.**	Replace the body harness with airbag main harness.
6	**CHECK GROUNDING CIRCUIT.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB3) from the airbag control module. 3)Connect the connector (1R) in test harness R to body harness connector (AB3). 4)Measure the resistance between connector (2R) in test harness R and the chassis ground. ***Connector & terminal*** ***(2R) No. 10 — Chassis ground:*** ***(2R) No. 11 — Chassis ground:***	Is the resistance less than 10 Ω?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Repair the body-grounding circuit.

2. RHD MODEL

WIRING DIAGRAM:

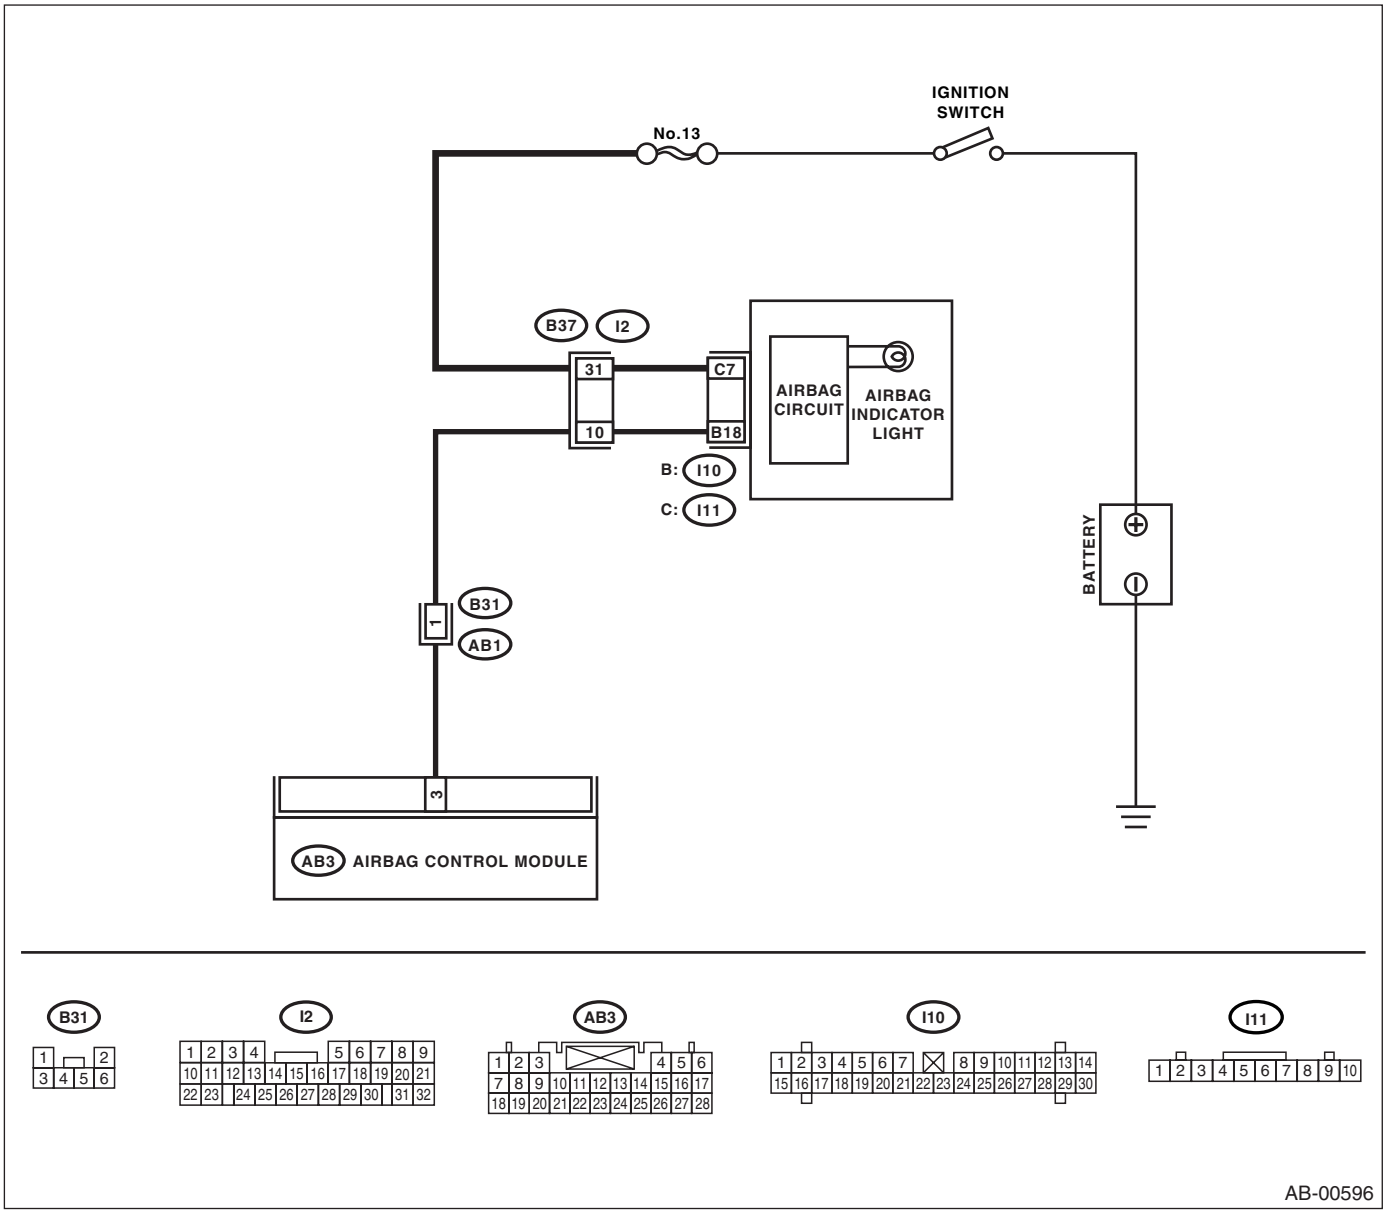

	Step	Check	Yes	No
1	**CHECK POOR CONTACT IN CONNECTORS (AB1) AND (B31).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Remove the side sill cover. (Driver's side) 3)Confirm that firm contact is secured between connectors (AB1) and (B31).	Is the poor contact in connectors (AB1) and (B31)?	Repair the body harness or replace the body harness with airbag main harness.	Go to step **2.**

	Step	Check	Yes	No
2	**CHECK AIRBAG WARNING LIGHT.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Connect the connector (1M) in test harness M to the body harness connector (B31). 3)Connect the battery ground cable and turn the ignition switch to ON. 4)Connect two connectors, (3M) and (4M) in test harness M.	Is the airbag warning light turned off?	Go to step **4.**	Go to step **3.**
3	**CHECK BODY HARNESS.** Check the body harness. NOTE: After problem has been eliminated, disconnect the connectors (3M) and (4M).	Is the anything unusual to body harness?	Repair the body harness.	Replace the combination meter printed circuit. <Ref. to IDI-11, Combination Meter Assembly.>
4	**CHECK POOR CONTACT.** Confirm that firm contact is secured between the airbag control module and the connector (AB3). <Ref. to AB-16, Airbag Control Module.>	Is the poor contact in connector (AB3)?	Replace the body harness with airbag main harness or replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **5.**
5	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Connect the connector (AB1) to (B31). 3)Disconnect the connectors (AB26) and (AB21). 4)Remove the glove box and disconnect the connectors (AB27) and (AB4). 5)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 6)Connect the battery ground cable and turn the ignition switch to ON. 7)Connect the connectors (5R) and (6R) in test harness R. NOTE: After problem has been eliminated, disconnect the connectors (5R) and (6R).	Is the airbag warning light turned off?	Go to step **6.**	Replace the body harness with airbag main harness.
6	**CHECK GROUNDING CIRCUIT.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB3) from the airbag control module. 3)Connect the connector (1R) in test harness R to body harness connector (AB3). 4)Measure the resistance between connector (2R) in test harness R and the chassis ground. ***Connector & terminal*** ***(2R) No. 10 — Chassis ground:*** ***(2R) No. 11 — Chassis ground:***	Is the resistance less than 10 Ω?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Repair the body-grounding circuit.

B: AIRBAG WARNING LIGHT REMAINS OFF.

DIAGNOSIS:

- Fuse No. 13 (in fuse box) is blown.
- Body harness circuit is open.
- Airbag warning light is faulty.
- Airbag main harness is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the airbag module connector of the driver and passenger seats for safety reasons.

WIRING DIAGRAM:

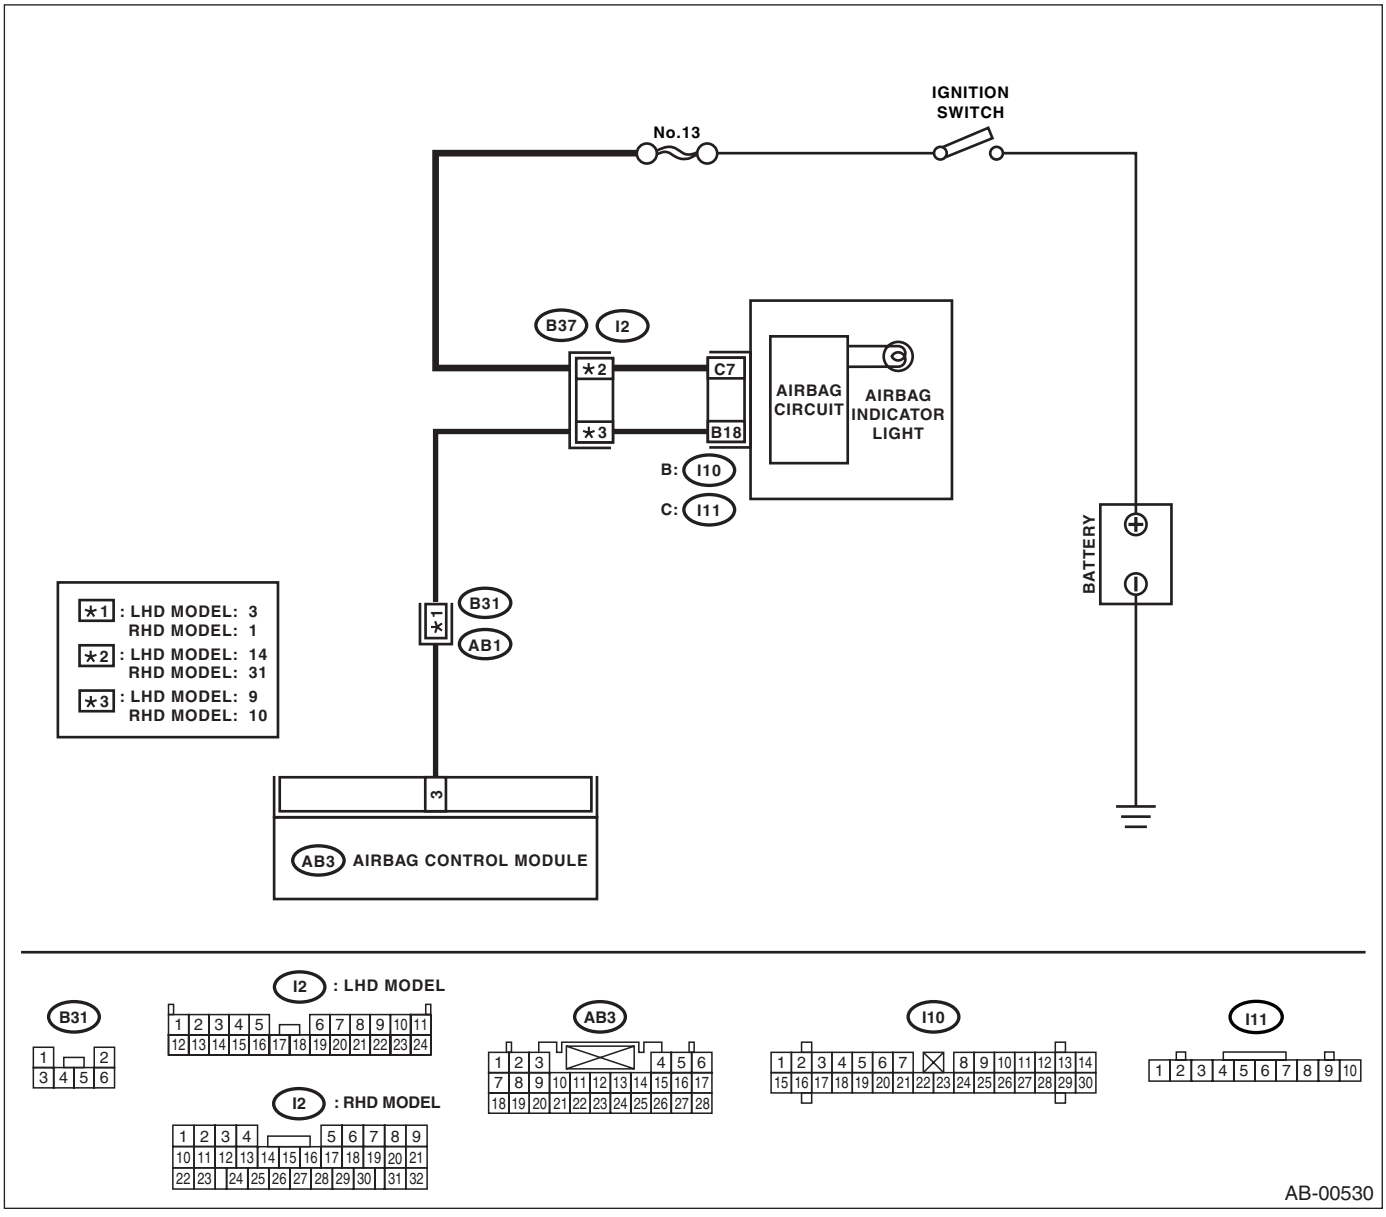

AIRBAG WARNING LIGHT FAILURE

	Step	Check	Yes	No
1	**CHECK COMBINATION METER.** Turn the ignition switch to ON, and confirm that warning lights equipped in the combination meter are turned on.	Do the warning lights not for airbag turn on?	Go to step **2.**	Repair the combination meter power supply. <Ref. to IDI-3, Combination Meter System.>
2	**CHECK FUSE NO. 13 (IN MAIN FUSE BOX).** Remove the fuse No. 13 and perform visual inspection.	Is the fuse No. 13 (in main fuse box) blown out?	Replace the fuse No. 13. If fuse No. 13 is blown out again, go to step 3.	Go to step **3.**
3	**CHECK AIRBAG WARNING LIGHT CIRCUIT (IN COMBINATION METER).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB1) from (B31). 3)Connect the battery ground cable and turn the ignition switch to ON.	Is the airbag warning light turned on?	Go to step **4.**	Replace the airbag warning light bulb or combination meter printed circuit. <Ref. to IDI-11, Combination Meter Assembly.>
4	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Connect the connector (AB1) to (B31). 3)Disconnect the connector (AB3) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 4)Connect the battery ground cable and turn the ignition switch to ON.	Is the airbag warning light turned on?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with airbag main harness.

12.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Memory function	Contents of diagnosis	Index No.
11	Provided.	• Airbag main harness circuit is open, shorted or shorted to ground. • Airbag module harness (driver) circuit is open, shorted or shorted to ground. • Roll connector circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Driver's airbag module is faulty.	<Ref. to AB-41, DTC 11, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
12	Provided.	• Airbag main harness circuit is open, shorted or shorted to ground. • Airbag module harness (passenger) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Passenger's airbag module is faulty.	<Ref. to AB-43, DTC 12, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
15	Provided.	• Airbag main harness circuit (driver) is shorted to power supply. • Airbag module harness (driver) is shorted to power supply. • Roll connector is shorted to power supply. • Airbag control module is faulty. • Driver's airbag module is faulty.	<Ref. to AB-45, DTC 15, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
16	Provided.	• Airbag main harness circuit (passenger) is shorted to power supply. • Airbag module harness (passenger) is shorted to power supply. • Airbag control module is faulty. • Passenger's airbag module is faulty.	<Ref. to AB-47, DTC 16, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
21	Provided.	Airbag control module is faulty.	<Ref. to AB-48, DTC 21, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
22	Provided.	Front airbag module and seat belt pretensioner (LH/RH) are inflated.	<Ref. to AB-49, DTC 22, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
23	Not provided.	(AB3), (AB7) and (AB8) are not connected properly to airbag control module.	<Ref. to AB-50, DTC 23, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
24	Not provided.	• Airbag control module is faulty. • Airbag main harness circuit is open. • Fuse No. 11 (in joint box) is blown. • Body harness circuit is open.	<Ref. to AB-51, DTC 24, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
25	Provided.	• Airbag control module is faulty. • Airbag main harness circuit is open. • Fuse No. 6 (in joint box) is blown. • Body harness circuit is open.	<Ref. to AB-53, DTC 25, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
31	Provided.	• Front sub-sensor harness (RH) circuit is shorted. • Front sub-sensor harness (RH) circuit is open. • Front sub-sensor (RH) is faulty. • Airbag control module is faulty.	<Ref. to AB-55, DTC 31, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Memory function	Contents of diagnosis	Index No.
32	Provided.	• Front sub-sensor harness (LH) circuit is shorted. • Front sub-sensor harness (LH) circuit is open. • Front sub-sensor (LH) is faulty. • Airbag control module is faulty.	<Ref. to AB-58, DTC 32, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
41	Provided.	• Side airbag harness (RH) is faulty. • Side airbag module (RH) is faulty. • Airbag control module is faulty.	<Ref. to AB-61, DTC 41, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
42	Provided.	• Side airbag harness (LH) is faulty. • Side airbag module (LH) is faulty. • Airbag control module is faulty.	<Ref. to AB-63, DTC 42, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
45	Provided.	• Side airbag harness (RH) is shorted to power supply. • Airbag control module is faulty.	<Ref. to AB-65, DTC 45, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
46	Provided.	• Side airbag harness (LH) is shorted to power supply. • Airbag control module is faulty.	<Ref. to AB-67, DTC 46, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
51	Provided.	• Side airbag sensor (RH) is faulty. • Side airbag harness (RH) is faulty. • Airbag control module is faulty.	<Ref. to AB-69, DTC 51, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
52	Provided.	• Side airbag sensor (LH) is faulty. • Side airbag harness (LH) is faulty. • Airbag control module is faulty.	<Ref. to AB-71, DTC 52, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
53	Provided.	Side airbag sensor (RH) is faulty.	<Ref. to AB-73, DTC 53, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
54	Provided.	Side airbag sensor (LH) is faulty.	<Ref. to AB-73, DTC 54, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
55	Provided.	Side airbag module is inflated.	<Ref. to AB-73, DTC 55, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
61	Provided.	• Seat belt pretensioner (RH) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Pretensioner is faulty. • Pretensioner harness is faulty.	<Ref. to AB-74, DTC 61, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
62	Provided.	• Seat belt pretensioner (LH) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Pretensioner is faulty. • Pretensioner harness is faulty.	<Ref. to AB-76, DTC 62, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DTC	Memory function	Contents of diagnosis	Index No.
65	Provided.	• Seat belt pretensioner (RH) circuit is shorted to power supply. • Pretensioner is faulty. • Pretensioner harness is faulty. • Airbag control module is faulty.	<Ref. to AB-78, DTC 65, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
66	Provided.	Seat belt pretensioner (LH) circuit is shorted to power supply. • Pretensioner is faulty. • Pretensioner harness is faulty. • Airbag control module is faulty.	<Ref. to AB-80, DTC 66, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

13.Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC 11

DIAGNOSIS:

- Airbag main harness circuit is open, shorted or shorted to ground.
- Airbag module harness (Driver) circuit is open, shorted or shorted to ground.
- Roll connector circuit is open, shorted or shorted to ground.
- Driver's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

WIRING DIAGRAM:

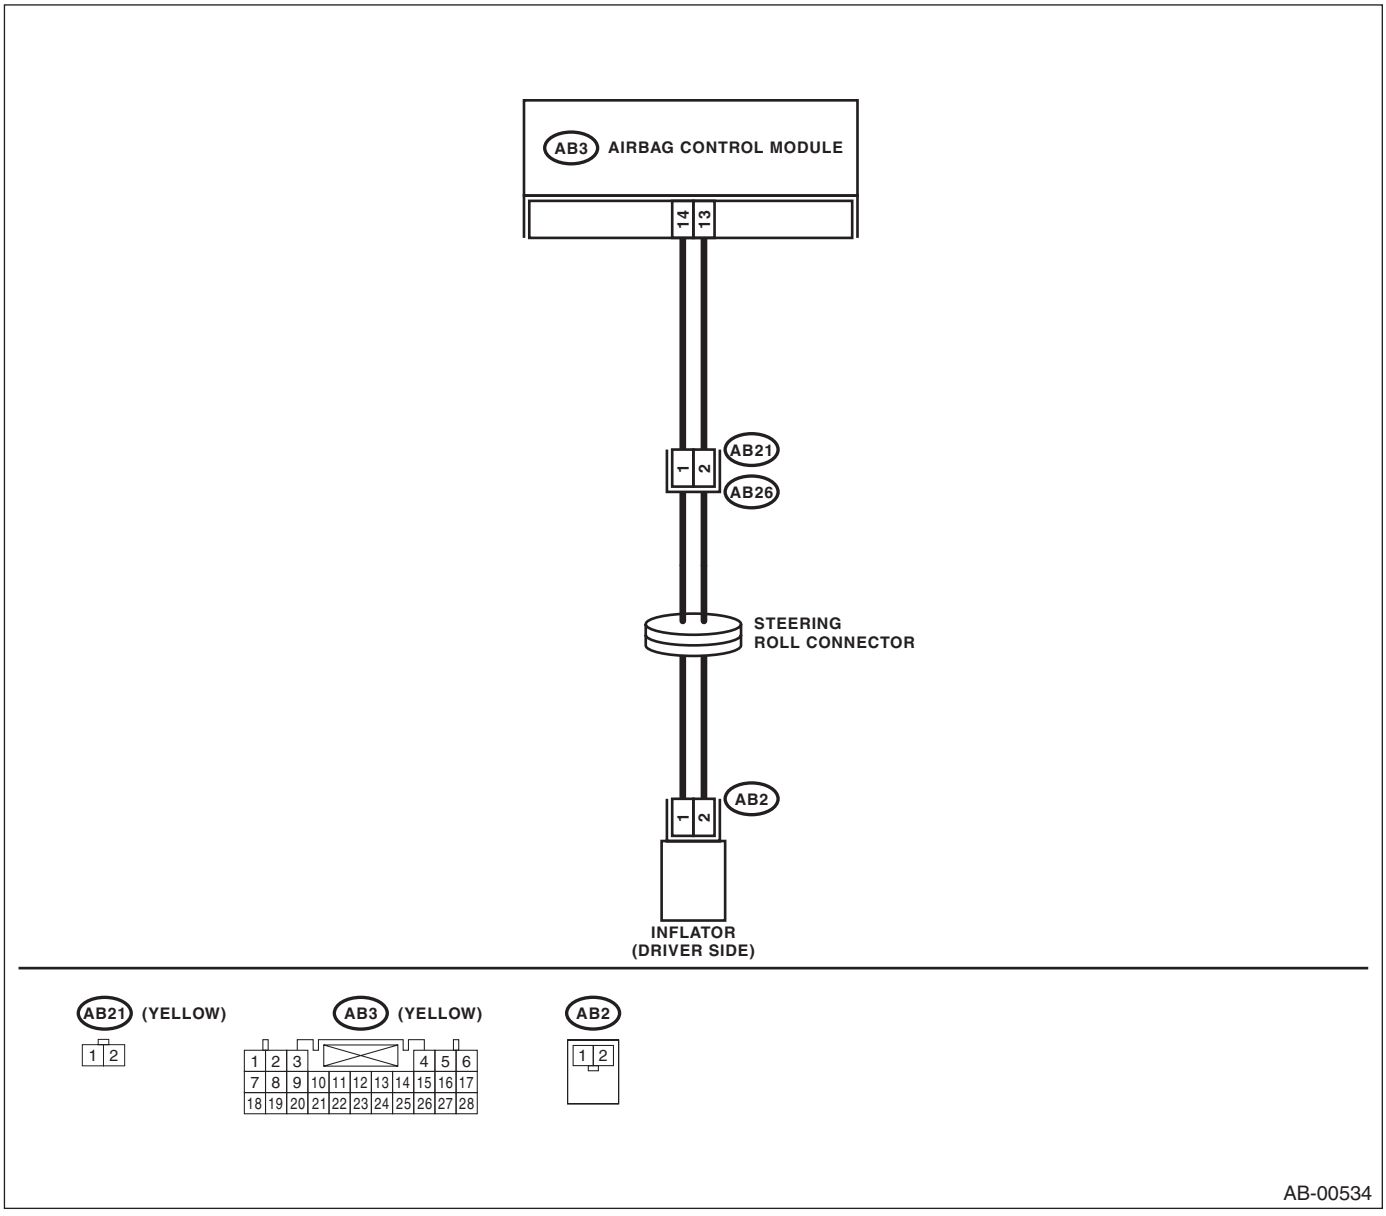

	Step	Check	Yes	No
1	**CHECK DRIVER'S AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Remove the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.> 3)Connect the connector (1N) in test harness N to connector (AB2). 4)Connect the airbag resistor to connector (2N) in test harness N. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.>	Go to step **2.**
2	**CHECK ROLL CONNECTOR.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 second. 2)Disconnect the test harness N from the connector (AB2). 3)Remove the instrument panel lower cover, disconnect the connector (AB26) from (AB21) and connect the connector (1F) in test harness F to connector (AB21). 4)Connect the airbag resistor to connector (3F) in test harness F. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the roll connector. <Ref. to AB-18, Roll Connector.>	Go to step **3.**
3	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the connector (3F) in test harness F. 3)Remove the glove box, <Ref. to AB-13, Passenger's Airbag Module.> and disconnect connectors (AB27) and (AB4). 4)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 5)Measure the resistance between connector (2R) in test harness R and the connector (3F) in test harness F. ***Connector & terminal*** ***(2R) No. 2 — (3F) No. 4:*** ***(2R) No. 4 — (3F) No. 3:***	Is the resistance less than 10 Ω?	Go to step **4.**	Replace the body harness with airbag main harness.
4	**CHECK AIRBAG MAIN HARNESS.** Measure the resistance of the connector (2R) in test harness R. ***Connector & terminal*** ***(2R) No. 2 — (2R) No. 4:*** ***(2R) No. 4 — Chassis ground:*** ***(2R) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with airbag main harness.

B: DTC 12

DIAGNOSIS:

- Airbag main harness circuit is open, shorted or shorted to ground.
- Airbag module harness (Passenger) circuit is open, shorted or shorted to ground.
- Passenger's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the airbag module connector of the driver and passenger seats for safety reasons.

WIRING DIAGRAM:

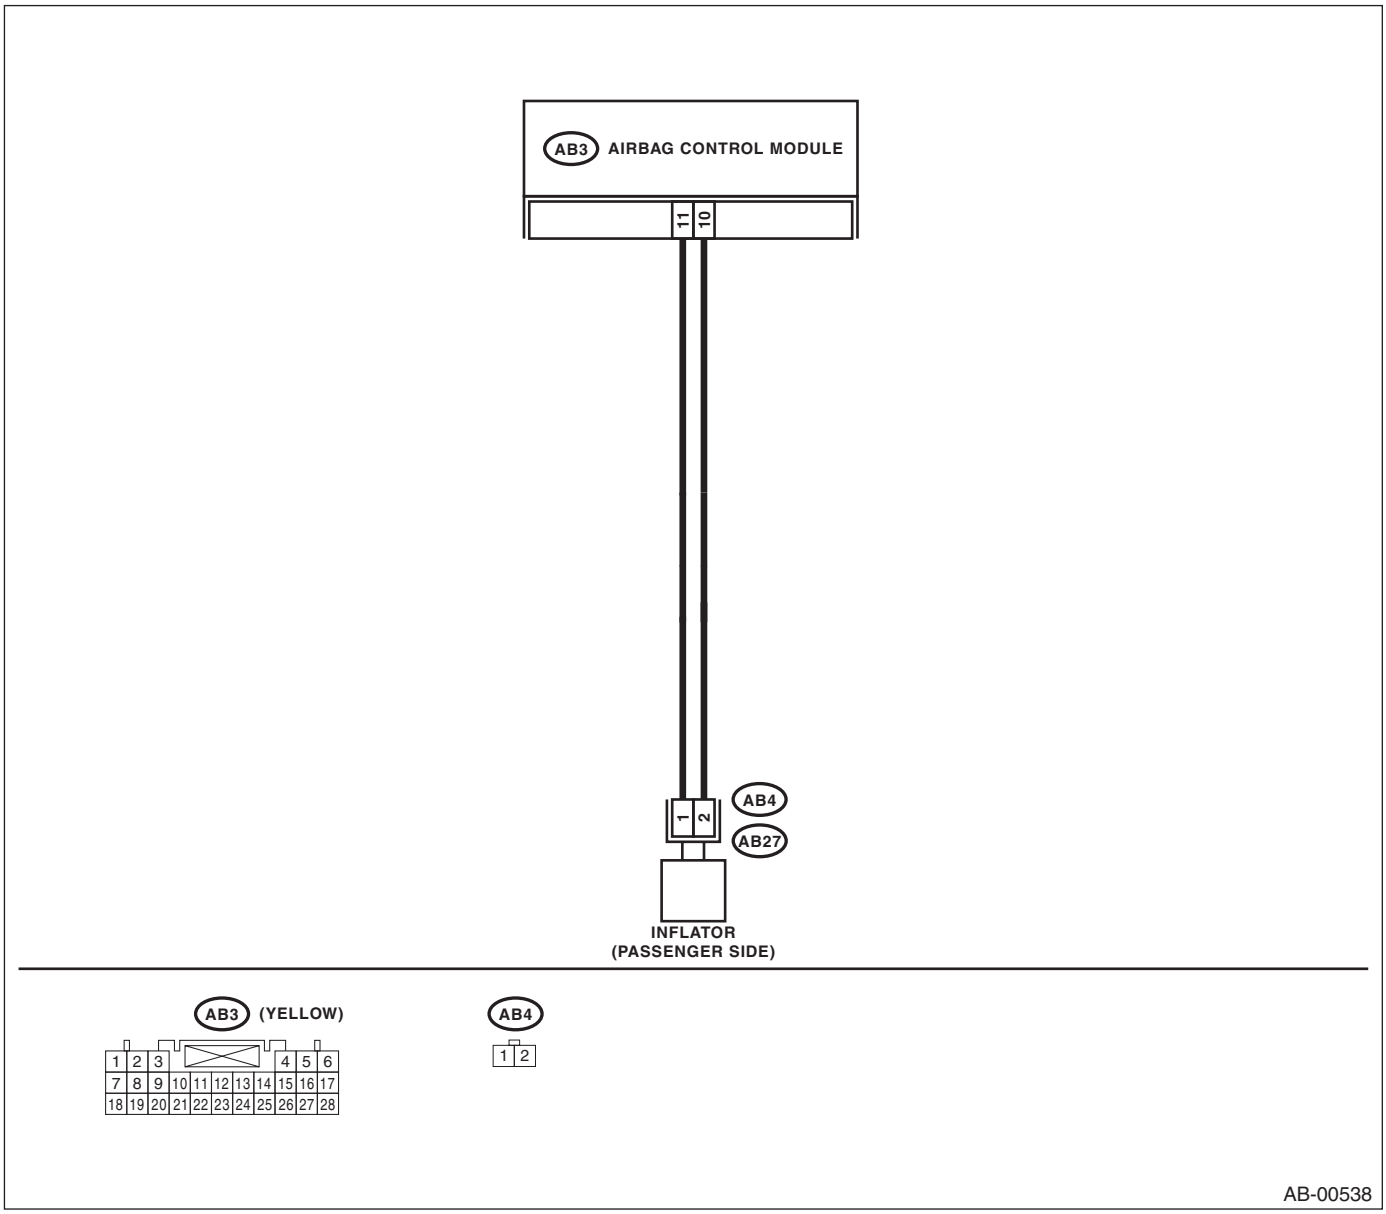

	Step	Check	Yes	No
1	**CHECK PASSENGER'S AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Remove the glove box. 3)Disconnect the connector (AB27) from (AB4). 4)Connect the connector (1F) in test harness F to connector (AB4). 5)Connect the airbag resistor to connector (3F) in test harness F. 6)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the passenger airbag module. <Ref. to AB-13, Passenger's Airbag Module.>	Go to step **2.**
2	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the connector (3F) in test harness F. 3)Remove the instrument panel lower cover and disconnect the connector (AB26) from (AB21). 4)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 5)Measure the resistance between connector (2R) in test harness R and the connector (3F) in test harness F. ***Connector & terminal*** ***(2R) No. 3 — (3F) No. 3:*** ***(2R) No. 5 — (3F) No. 4:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with airbag main harness.
3	**CHECK AIRBAG MAIN HARNESS.** Measure the resistance of the connector (2R) in test harness R. ***Connector & terminal*** ***(2R) No. 3 — (2R) No. 5:*** ***(2R) No. 3 — Chassis ground:*** ***(2R) No. 5 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with airbag main harness.

C: DTC 15

DIAGNOSIS:

- Airbag main harness circuit (Driver) is shorted to the power supply.
- Airbag module harness (Driver) is shorted to the power supply.
- Roll connector is shorted to the power supply.
- Driver's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

WIRING DIAGRAM:

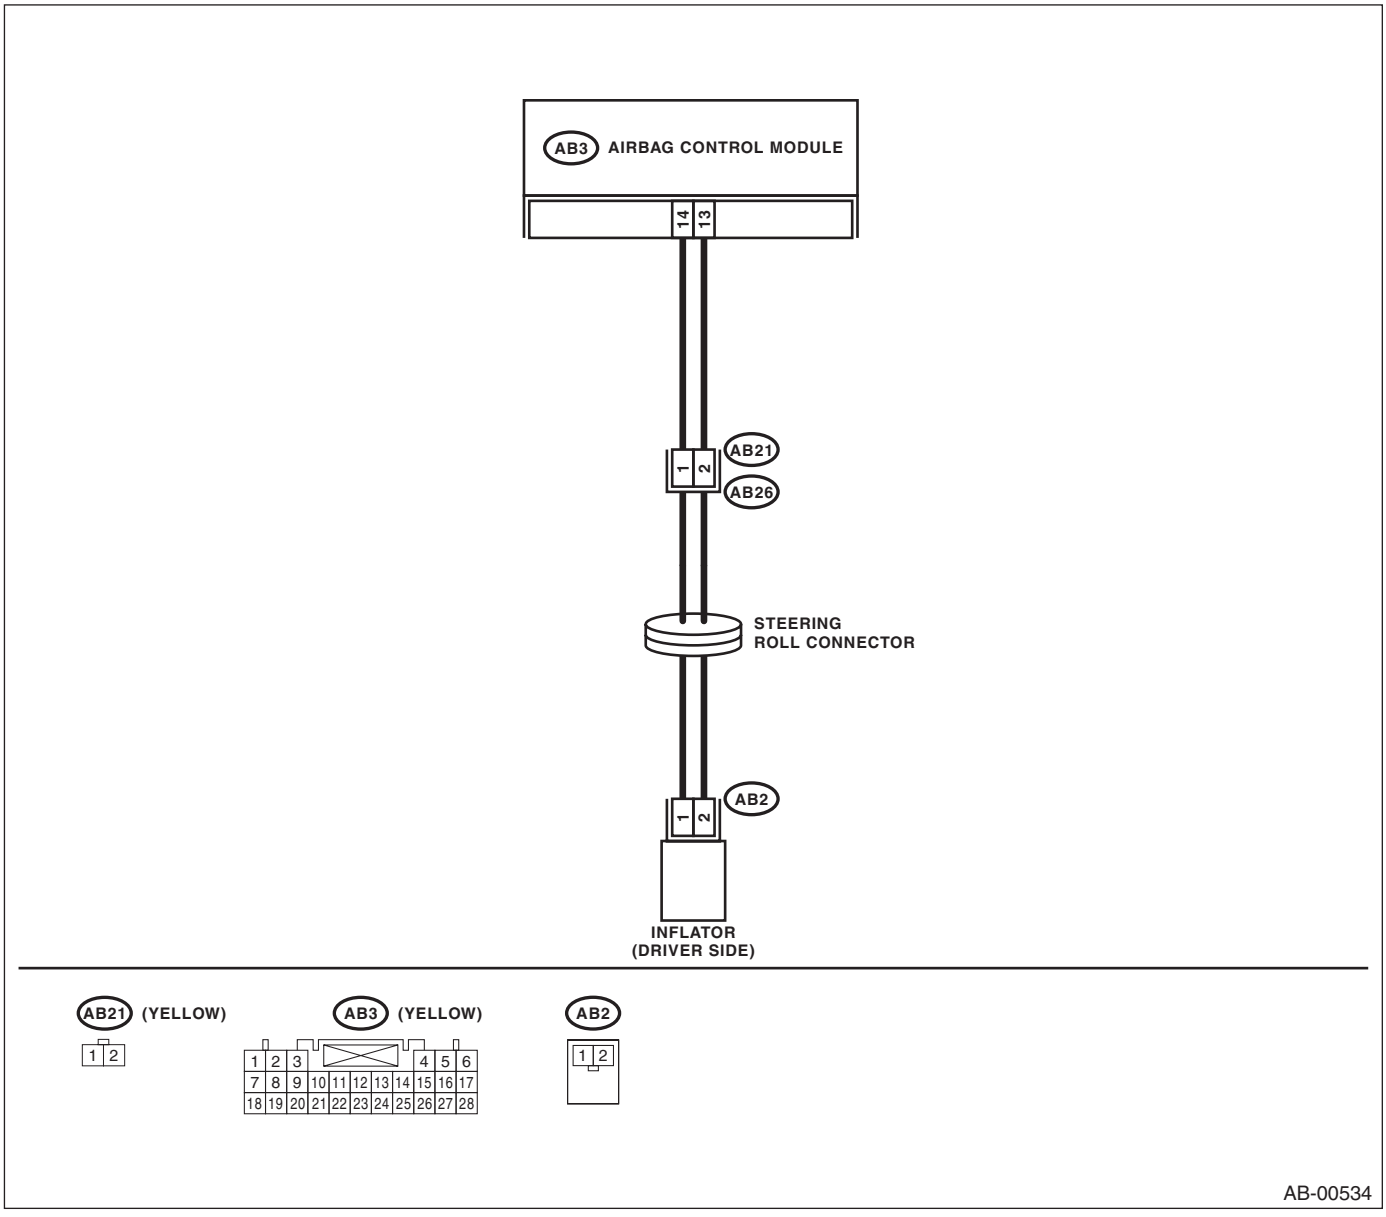

	Step	Check	Yes	No
1	**CHECK DRIVER'S AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Remove the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.> 3)Connect the connector (AB2) to connector (1N) in test harness N. 4)Connect the airbag resistor to connector (2N) in test harness N. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.>	Go to step **2.**
2	**CHECK ROLL CONNECTOR.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the test harness N from the connector (AB2). 3)Remove the instrument panel lower cover panel and disconnect the connector (AB26) from (AB21). 4)Connect the connector (1F) in test harness F to connector (AB21). 5)Connect the airbag resistor to connector (3F) in test harness F. 6)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the roll connector. <Ref. to AB-18, Roll Connector.>	Go to step **3.**
3	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the connector (3F) in test harness F. 3)Remove the glove box, and disconnect the connectors (AB27) and (AB4). 4)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 5)Connect the battery ground cable and turn the ignition switch to ON. (engine OFF) 6)Measure the voltage between connector (2R) in test harness R and the chassis ground. ***Connector & terminal*** ***(2R) No. 4 (+) — Chassis ground (−):*** ***(2R) No. 2 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with airbag main harness.

D: DTC 16

DIAGNOSIS:

- Airbag main harness circuit (Passenger) is shorted to the power supply.
- Airbag module harness (Passenger) is shorted to the power supply.
- Passenger's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the airbag module connector of the driver and passenger seats for safety reasons.

WIRING DIAGRAM:

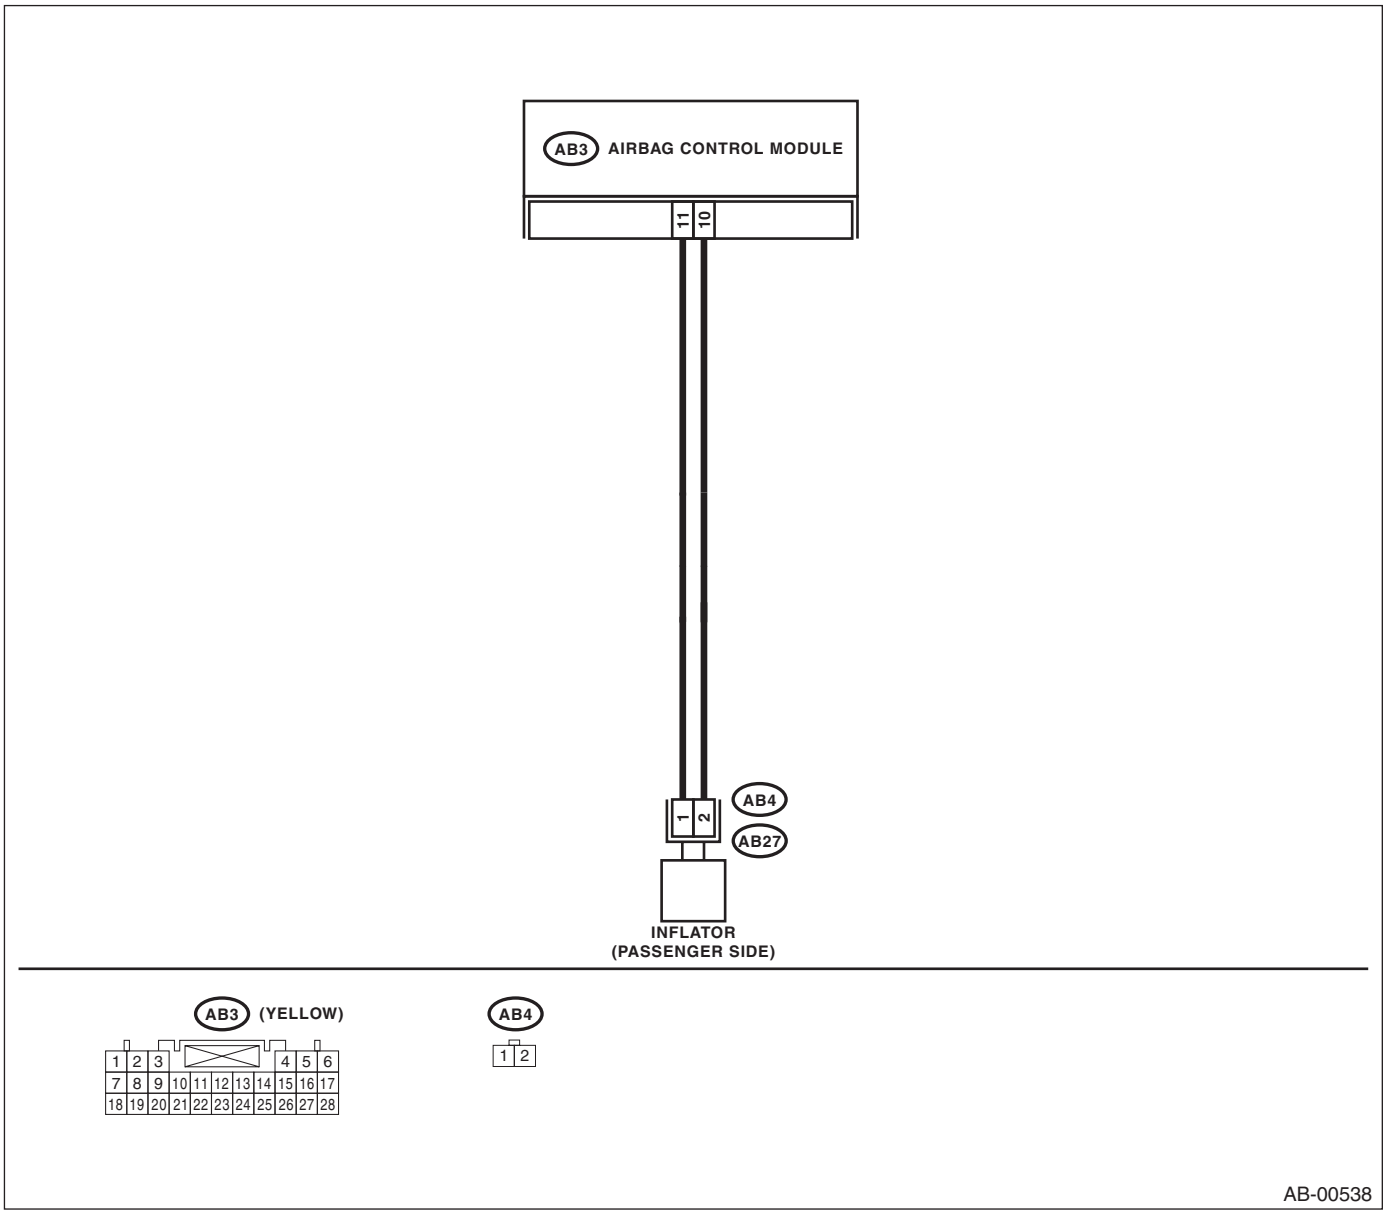

	Step	Check	Yes	No
1	**CHECK PASSENGER'S AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Remove the glove box. 3)Disconnect the connector (AB27) from (AB4) 4)Connect the connector (1F) in test harness F to connector (AB4). 5)Connect the airbag resistor to connector (3F) in test harness F. 6)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the passenger airbag module. <Ref. to AB-13, Passenger's Airbag Module.>	Go to step **2.**
2	**CHECK AIRBAG MAIN HARNESS.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the connector (3F) in test harness F. 3)Remove the instrument panel lower cover and disconnect the connector (AB26) from (AB21). 4)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 5)Measure the voltage between connector (2R) in test harness R and the chassis ground. ***Connector & terminal*** ***(2R) No. 3 (+) — Chassis ground (–):*** ***(2R) No. 5 (+) — Chassis ground (–):***	Is the voltage less than 1 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with airbag main harness.

E: DTC 21

DIAGNOSIS:

- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

	Step	Check	Yes	No
1	**CHECK IF DTC 21 IS INDICATED.** Read the DTC. <Ref. to AB-28, Read Diagnostic Trouble Code (DTC).>	Is the airbag warning light DTC 21 indicated?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Perform clear memory. <Ref. to AB-30, Clear Memory Mode.>

F: DTC 22

WIRING DIAGRAM:

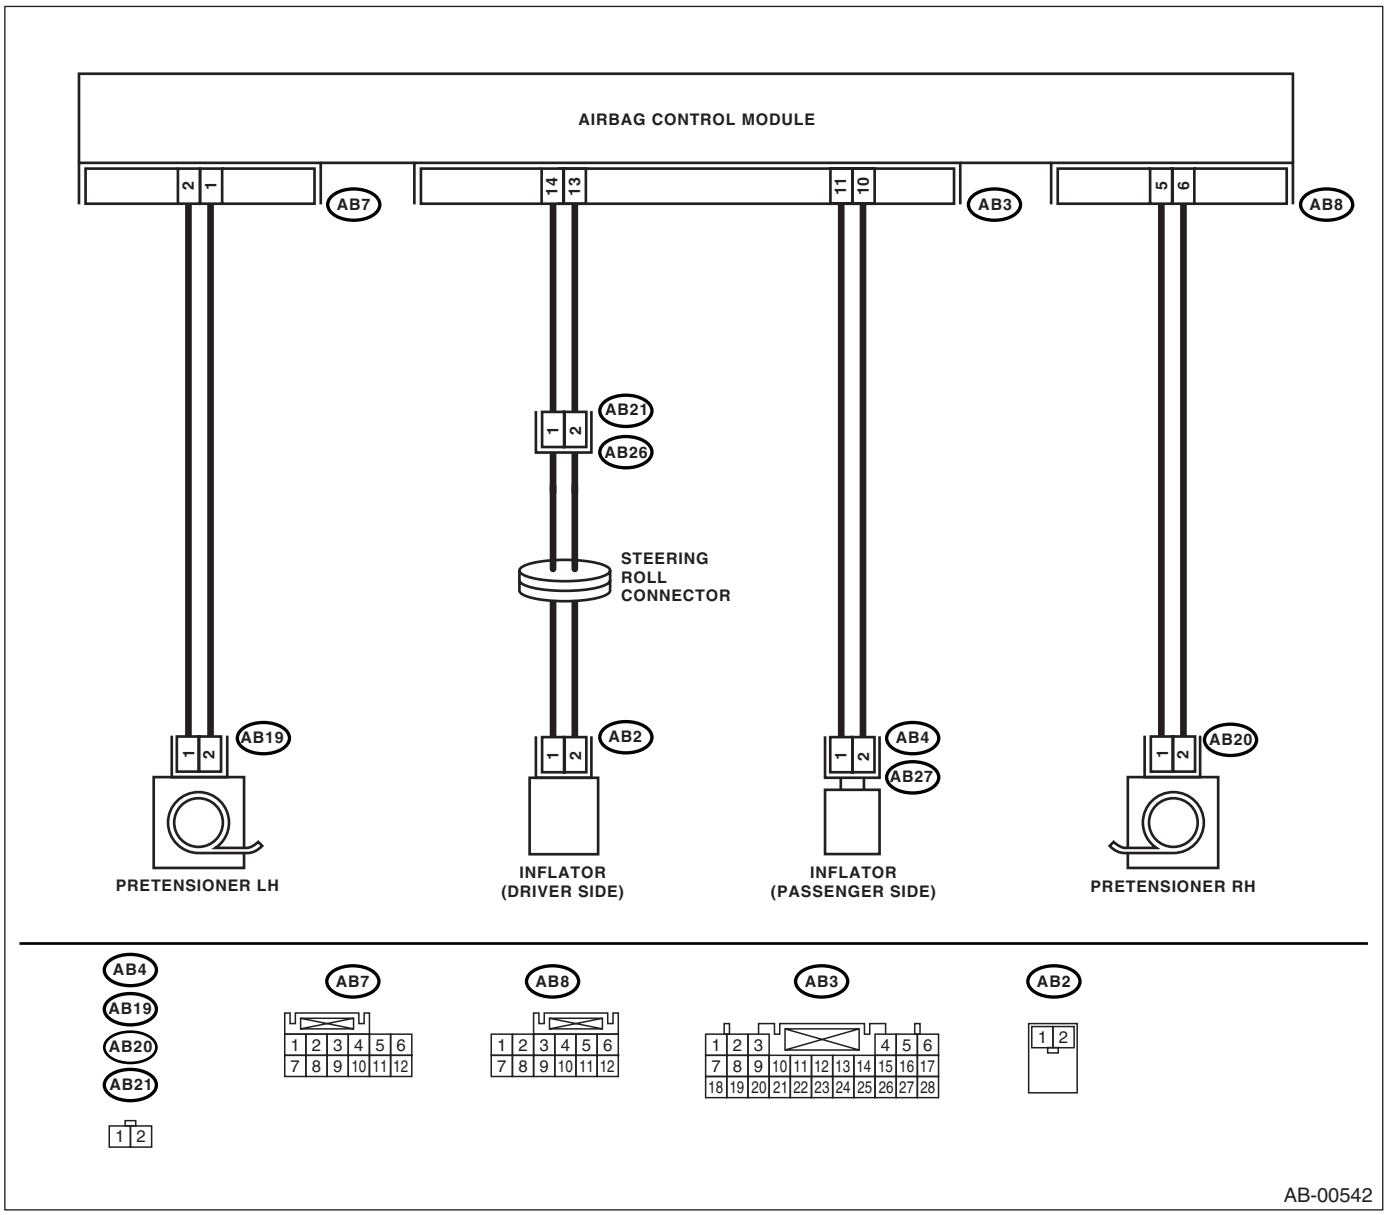

This code is indicated when the front airbag and the pretensioner are in operation.
Once this code is indicated, memory is not erasable; therefore replace the following parts.

- Airbag control module. <Ref. to AB-16, Airbag Control Module.>
- Driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.>
- Passenger's airbag module. <Ref. to AB-13, Passenger's Airbag Module.>
- Front sub-sensor of both sides. <Ref. to AB-19, Front Sub Sensor.>
- Front seat belt outer with pretensioner of both sides. <Ref. to SB-12, Front Seat Belt.>

G: DTC 23

DIAGNOSIS:

(AB3), (AB7) and (AB8) are not connected properly to airbag control module.

CAUTION:

Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

	Step	Check	Yes	No
1	**CHECK POOR CONTACT IN CONECTORS (AB3), (AB7) and (AB8).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connectors (AB3), (AB7) and (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Check if rust or damage appear on the harness connector and the control module connector.	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.> Replace the body harness with airbag main harness. Replace the body harness with side airbag harness.	Go to step **2.**
2	**CHECK POOR CONTACT IN CONECTORS (AB3), (AB7) and (AB8).** 1)Ensure that connectors are firmly reconnected. 2)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Finish the diagnosis.	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>

H: DTC 24

DIAGNOSIS:

- Airbag control module is faulty.
- Airbag main harness circuit is open.
- Fuse No, 11 (in joint box) is blown.
- Body harness circuit is open.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

WIRING DIAGRAM:

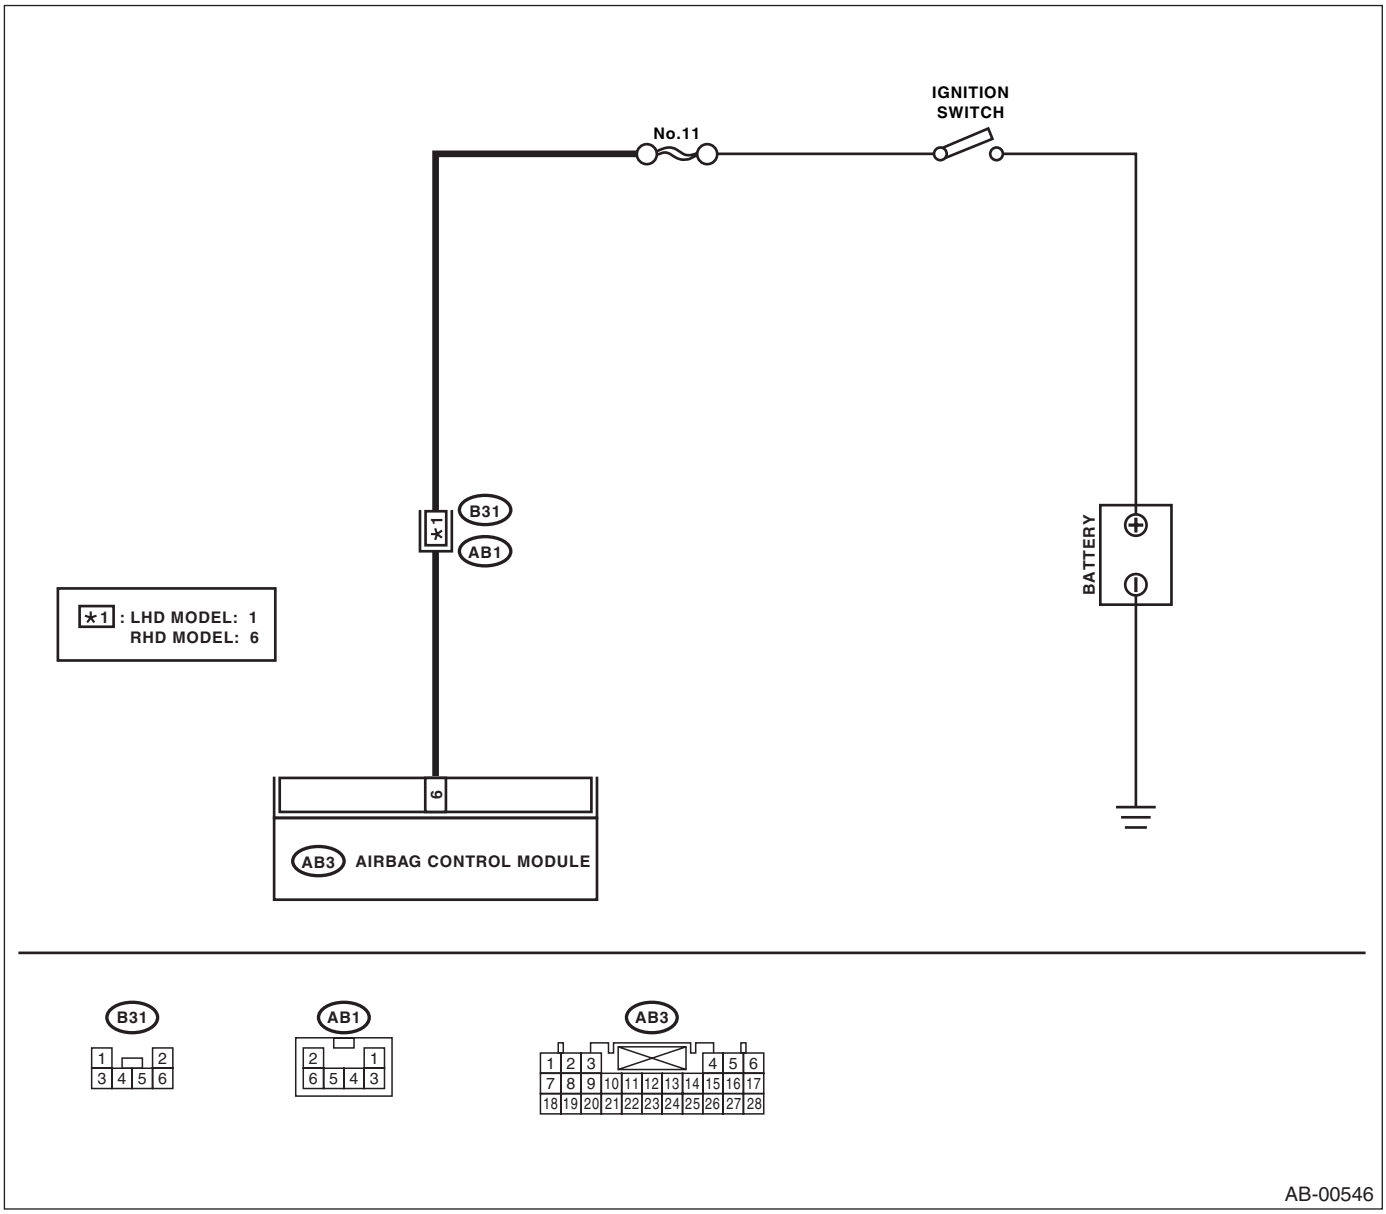

	Step	Check	Yes	No
1	**CHECK AIRBAG CONTROL MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB3) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 3)Connect the connector (1R) in test harness R to connector (AB3). 4)Connect the battery ground cable and turn the ignition switch to ON. 5)Measure the voltage between connector (2R) in test harness R and chassis ground. ***Connector & terminal*** ***(2R) No. 1 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **2.**
2	**CHECK AIRBAG MAIN HARNESS.** 1)While checking control module, turn the ignition switch to OFF and disconnect the battery ground cable. Wait more than 20 seconds before operation. 2)Disconnect the airbag connector (AB1) from the body harness (B31). 3)Connect the connector (2M) in test harness M to connector (AB1). 4)Measure the resistance between connector (5M) in test harness M and the connector (2R) in test harness R. ***Connector & terminal*** ***LHD MODEL:*** ***(5M) No. 2 — (2R) No. 1:*** ***RHD MODEL:*** ***(5M) No. 9 — (2R) No. 1:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with airbag main harness.
3	**CHECK AIRBAG MAIN HARNESS.** Measure the following resistance with the above-mentioned condition maintained. ***Connector & terminal*** ***LHD MODEL:*** ***(5M) No. 2 — Chassis ground:*** ***(2R) No. 1 — Chassis ground:*** ***RHD MODEL:*** ***(5M) No. 9 — Chassis ground:*** ***(2R) No. 1 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the body harness with airbag main harness.
4	**CHECK FUSE No. 11 (IN JOINT BOX).** 1)Confirm that the ignition switch is turned OFF. 2)Remove the fuse No. 11 (in joint box) and perform visual inspection.	Is the fuse No. 11 blown out?	Replace the fuse No. 11. If fuse No. 11 is blown out again, repair the body harness.	Repair the body harness.

I: DTC 25

DIAGNOSIS:

- Airbag control module is faulty.
- Airbag main harness circuit is open.
- Fuse No. 6 (in joint box) is blown.
- Body harness circuit is open.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

WIRING DIAGRAM:

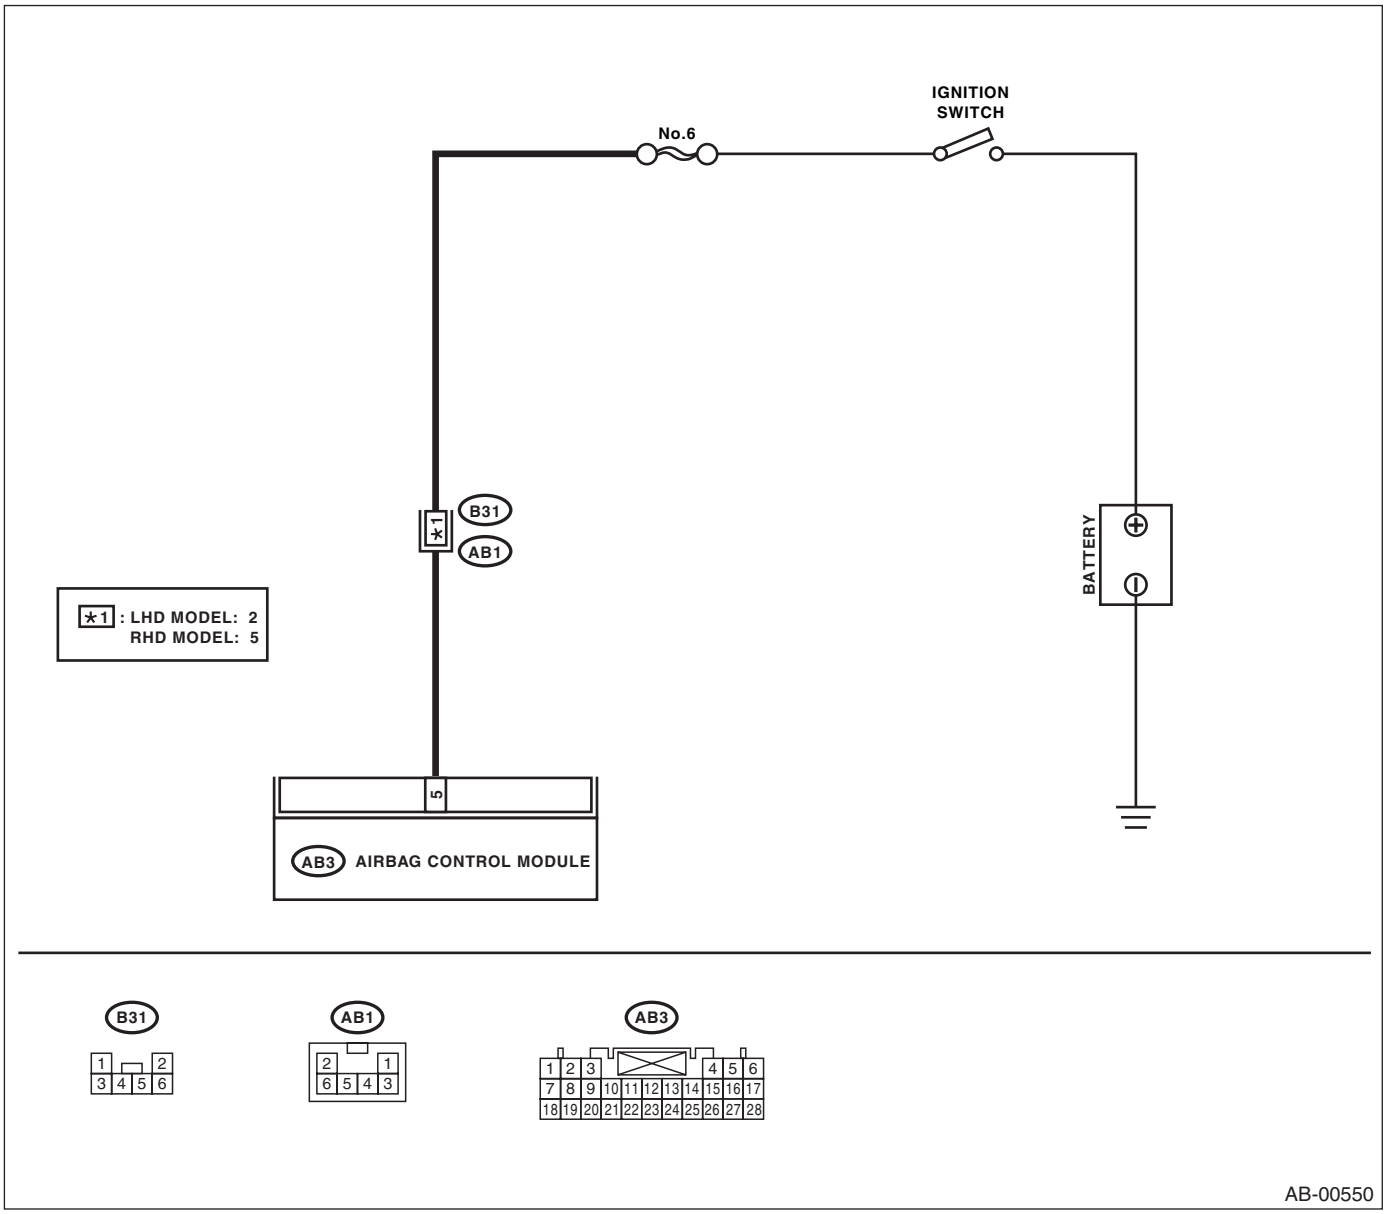

	Step	Check	Yes	No
1	**CHECK AIRBAG CONTROL MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB3) from airbag control module. <Ref. to AB-16, Airbag Control Module.> 3)Connect the connector (1R) in test harness R to connector (AB3). 4)Connect the battery ground cable, and turn the ignition switch to ON. 5)Measure the voltage between the connector (2R) in test harness R and the chassis ground. ***Connector & terminal*** ***(2R) No. 6 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **2.**
2	**CHECK AIRBAG MAIN HARNESS.** 1) While checking control module, turn the ignition switch to OFF and disconnect the battery ground cable. Wait more than 20 seconds before operation. 2)Disconnect the airbag connector (AB1) from the body harness (B31). 3)Connect the connector (2M) in test harness M to the airbag connector (AB1). 4)Measure the resistance between the connector (5M) in test harness M and the connector (2R) in test harness R. ***Connector & terminal*** ***LHD MODEL:*** ***(5M) No. 4 — (2R) No. 6:*** ***RHD MODEL:*** ***(5M) No. 1 — (2R) No. 6:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with airbag main harness.
3	**CHECK AIRBAG MAIN HARNESS.** Measure the following resistance with the above-mentioned condition maintained. ***Connector & terminal*** ***LHD MODEL:*** ***(5M) No. 4 — Chassis ground:*** ***(2R) No. 6 — Chassis ground:*** ***RHD MODEL:*** ***(5M) No. 1 — Chassis ground:*** ***(2R) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the body harness with airbag main harness.
4	**CHECK FUSE NO. 6 (IN JOINT BOX).** 1)Confirm that the ignition switch is turned OFF. 2)Remove the No. 6 fuse (in joint box) and perform visual inspection.	Is the fuse No. 6 blown out?	Replace the fuse No. 6. If fuse No. 6 is blown out again, repair the body harness.	Repair the body harness.

J: DTC 31

DIAGNOSIS:

- Front sub-sensor harness (RH) circuit is shorted.
- Front sub-sensor harness (RH) circuit is open.
- Front sub-sensor (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

WIRING DIAGRAM:

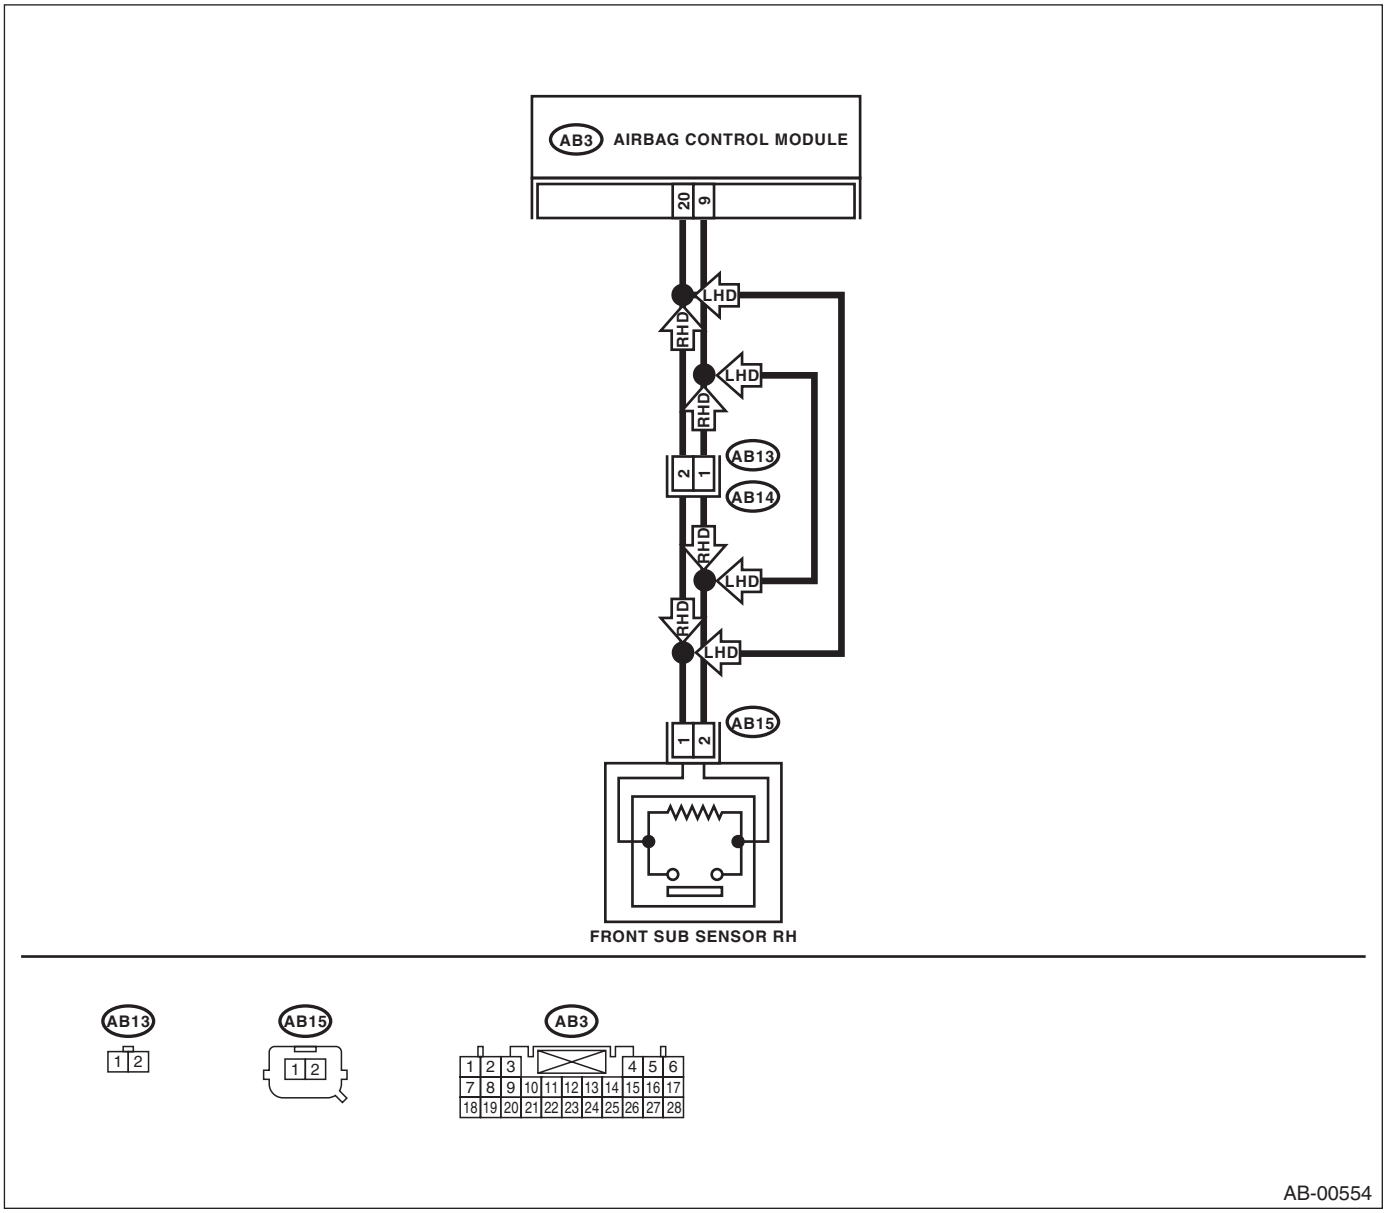

	Step	Check	Yes	No
1	**CHECK FRONT SUB-SENSOR (RH) AND FRONT SUB-SENSOR HARNESS (RH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB3) from the airbag control module, and connect the connector (1R) in test harness R. <Ref. to AB-16, Airbag Control Module.> 3)Measure the resistance of the connector (3R) in test harness R. ***Connector & terminal*** ***(3R) No. 7 — (3R) No. 9:***	Is the resistance 750 Ω — 1 kΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **2.**
2	**CHECK FRONT SUB-SENSOR (RH) AND FRONT SUB-SENSOR HARNESS (RH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 7 — Chassis ground:*** ***(3R) No. 9 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **3.**
3	**CHECK AIRBAG MAIN HARNESS AND FRONT SUB-SENSOR HARNESS (RH).** 1)Disconnect the connector (AB15) from the front sub-sensor. <Ref. to AB-19, Front Sub Sensor.> 2)Connect the connector (1H) in test harness H to connector (AB15). 3)Measure the resistance between connector (3R) in test harness R and connector (3H) in test harness H. ***Connector & terminal*** ***(3R) No. 7 — (3H) No. 5:*** ***(3R) No. 9 — (3H) No. 6:***	Is the resistance less than 10 Ω?	Go to step **4.**	Go to step **5.**
4	**CHECK AIRBAG MAIN HARNESS AND FRONT SUB-SENSOR HARNESS (RH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 7 — Chassis ground:*** ***(3R) No. 9 — Chassis ground:***	Is the resistance more than 1 MΩ?	LHD model: Finish the diagnosis. RHD model: Go to step **9.**	LHD model: Replace the front sub-sensor (RH).<Ref. to AB-19, Front Sub Sensor.> RHD model: Go to step **5.**
5	**CHECK AIRBAG MAIN HARNESS** 1)Disconnect the connector (AB14) from (AB13), and connect the connector (1F) in test harness F to connector (AB13). 2)Measure the resistance between connector (3R) in test harness R and connector (3F) in test harness F. ***Connector & terminal*** ***(3R) No. 7 — (3F) No. 4:*** ***(3R) No. 9 — (3F) No. 3:***	Is the resistance less than 10 Ω?	Go to step **6.**	Replace the body harness with airbag main harness.
6	**CHECK AIRBAG MAIN HARNESS** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 7 — Chassis ground:*** ***(3R) No. 9 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Replace the body harness with airbag main harness.

	Step	Check	Yes	No
7	**CHECK FRONT SUB-SENSOR HARNESS (RH).** 1)Connect the connector (2F) in test harness F to the connector (AB14). 2)Measure the resistance between connector (3H) in test harness H and connector (3F) in the test harness F. ***Connector & terminal*** ***(3F) No. 5 — (3H) No. 5:*** ***(3F) No. 6 — (3H) No. 6:***	Is the resistance less than 10 Ω?	Go to step **8.**	Replace the body harness with front sub-sensor harness (RH).
8	**CHECK FRONT SUB-SENSOR HARNESS (RH).** Measure the resistance between connector (3F) in test harness F and the chassis ground. ***Connector & terminal*** ***(3F) No. 5 — Chassis ground:*** ***(3F) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Replace the body harness with front sub-sensor harness (RH).
9	**CHECK FRONT SUB-SENSOR (RH).** 1)Connect the connector (2H) in test harness H to front sub-sensor (RH). 2)Measure the resistance of the connector (3H) in test harness H. ***Connector & terminal*** ***(3H) No. 3 — (3H) No. 4:***	Is the resistance 750 Ω — 1 kΩ?	Go to step **10.**	Replace the front sub-sensor (RH). <Ref. to AB-19, Front Sub Sensor.>
10	**CHECK FRONT SUB-SENSOR (RH).** Measure the resistance between connector (3H) in test harness H and the chassis ground. ***Connector & terminal*** ***(3H) No. 3 — Chassis ground:*** ***(3H) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Finish the diagnosis.	Replace the front sub-sensor (RH). <Ref. to AB-19, Front Sub Sensor.>

K: DTC 32

DIAGNOSIS:

- Front sub-sensor harness (LH) circuit is shorted.
- Front sub-sensor harness (LH) circuit is open.
- Front sub-sensor (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

WIRING DIAGRAM:

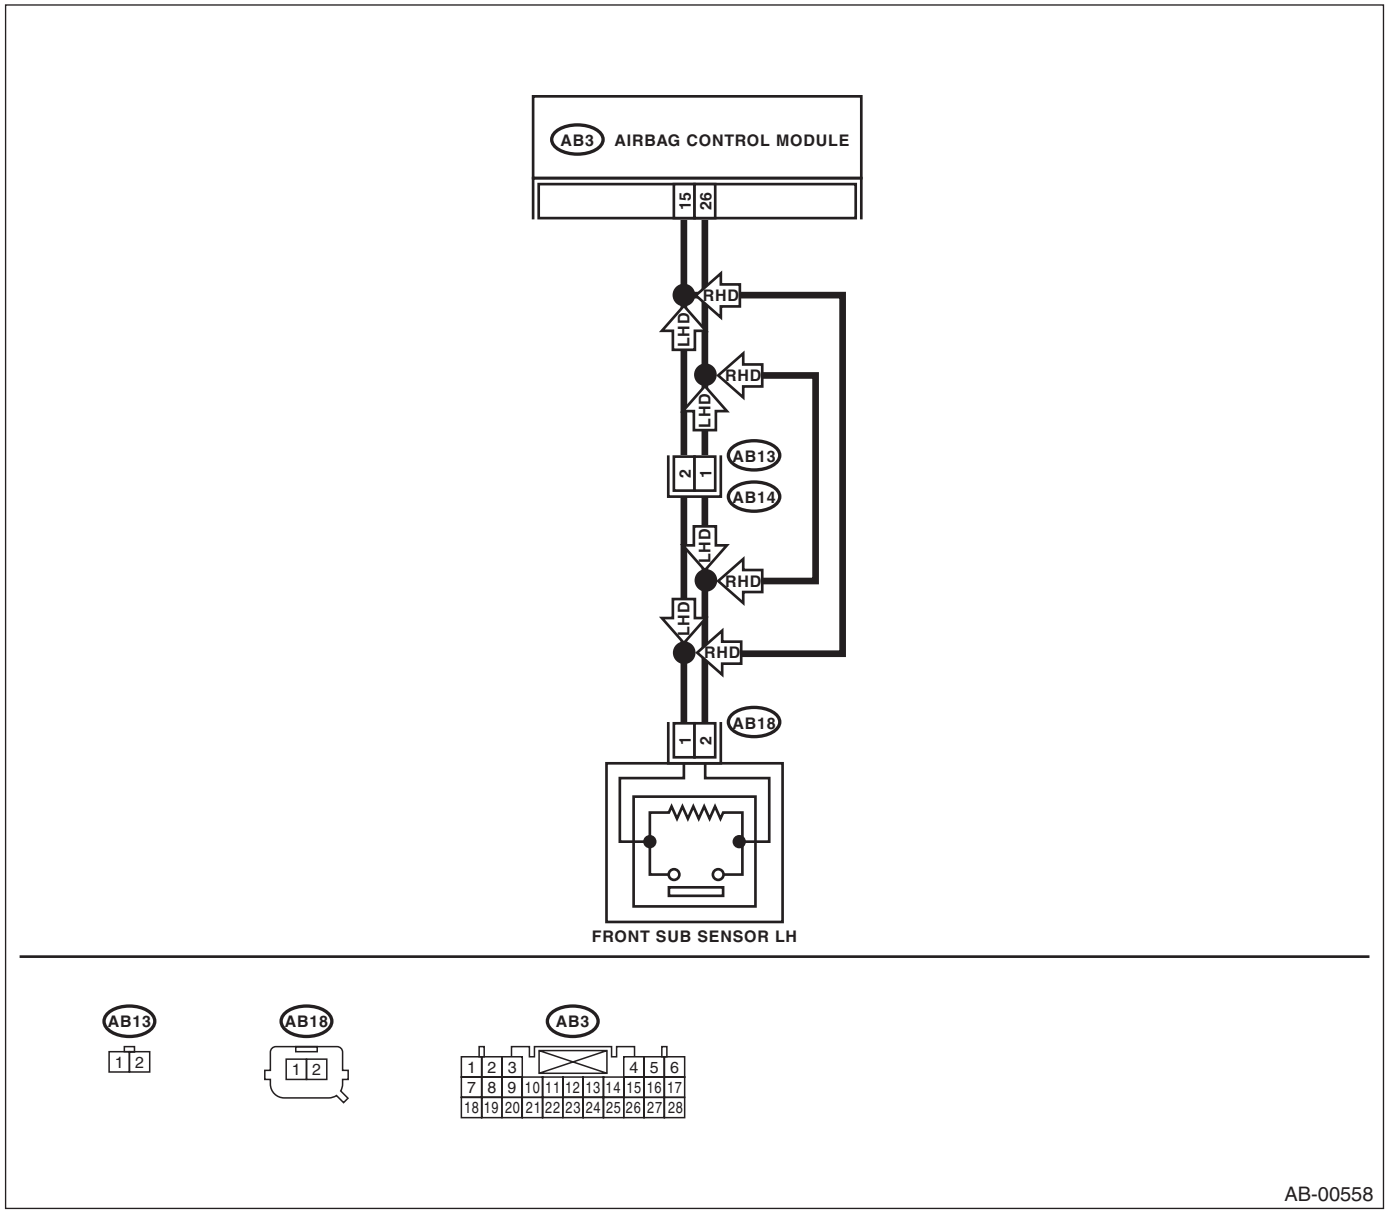

AB-00558

	Step	Check	Yes	No
1	**CHECK FRONT SUB-SENSOR (LH) AND FRONT SUB-SENSOR HARNESS (LH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB3) from the airbag control module, and connect connector (1R) in the test harness R to connector (AB3). <Ref. to AB-16, Airbag Control Module.> 3)Measure the resistance of the connector (3R) in the test harness R. ***Connector & terminal*** ***(3R) No. 8 — (3R) No. 6:***	Is the resistance 750 Ω — 1 kΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **2.**
2	**CHECK FRONT SUB-SENSOR (LH) AND FRONT SUB-SENSOR HARNESS (LH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 8 — Chassis ground:*** ***(3R) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Go to step **3.**
3	**CHECK AIRBAG MAIN HARNESS AND FRONT SUB-SENSOR HARNESS (LH).** 1)Disconnect the connector (AB18) from the front sub-sensor. <Ref. to AB-19, Front Sub Sensor.> 2)Connect the connector (1H) in test harness H to connector (AB18). 3)Measure the resistance between connector (3R) in test harness R and connector (3H) in test harness H. ***Connector & terminal*** ***(3R) No. 6 — (3H) No. 6:*** ***(3R) No. 8 — (3H) No. 5:***	Is the resistance less than 10 Ω?	Go to step **4.**	Go to step **5.**
4	**CHECK AIRBAG MAIN HARNESS AND FRONT SUB-SENSOR HARNESS (LH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 6 — Chassis ground:*** ***(3R) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	LHD MODEL: Go to step **9.** RHD MODEL: Finish the diagnosis.	LHD MODEL: Go to step **5.** RHD MODEL: Replace the front sub-sensor (LH). <Ref. to AB-19, Front Sub Sensor.>
5	**CHECK AIRBAG MAIN HARNESS.** 1)Disconnect the connector (AB13) from (AB14), and connect the connector (1F) in test harness F to (AB13). 2)Measure the resistance between connector (3R) in test harness R and connector (3F) in test harness F. ***Connector & terminal*** ***(3R) No. 6 — (3F) No. 3:*** ***(3R) No. 8 — (3F) No. 4:***	Is the resistance less than 10 Ω?	Go to step **6.**	Replace the body harness with airbag main harness.
6	**CHECK AIRBAG MAIN HARNESS.** Measure the resistance between connector (3R) in the test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 6 — Chassis ground:*** ***(3R) No. 8 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Replace the body harness with airbag main harness.

	Step	Check	Yes	No
7	**CHECK FRONT SUB-SENSOR HARNESS (LH).** 1)Connect the connector (2F) in test harness F to connector (AB14). 2)Measure the resistance between connector (3H) in test harness H and connector (3F) in test harness F. ***Connector & terminal*** ***(3F) No. 5 — (3H) No. 5:*** ***(3F) No. 6 — (3H) No. 6:***	Is the resistance less than 10 Ω?	Go to step **8.**	Replace the body harness with front sub-sensor harness (LH).
8	**CHECK FRONT SUB-SENSOR HARNESS (LH).** Measure the resistance between connector (3F) in test harness F and the chassis ground. ***Connector & terminal*** ***(3F) No. 5 — Chassis ground:*** ***(3F) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **9.**	Replace the body harness with front sub-sensor harness (LH).
9	**CHECK FRONT SUB-SENSOR (LH).** 1)Connect the connector (2H) in test harness H to front sub-sensor (LH). 2)Measure the resistance of the connector (3H) in test harness H. ***Connector & terminal*** ***(3H) No. 3 — (3H) No. 4:***	Is the resistance 750 Ω — 1 kΩ?	Go to step **10.**	Replace the front sub-sensor (LH). <Ref. to AB-19, Front Sub Sensor.>
10	**CHECK FRONT SUB-SENSOR (LH).** Measure the resistance between connector (3H) in test harness H and the chassis ground. ***Connector & terminal*** ***(3H) No. 3 — Chassis ground:*** ***(3H) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Finish the diagnosis.	Replace the front sub-sensor (LH). <Ref. to AB-19, Front Sub Sensor.>

L: DTC 41

DIAGNOSIS:

- Side airbag harness (RH) is faulty.
- Side airbag module (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.

• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

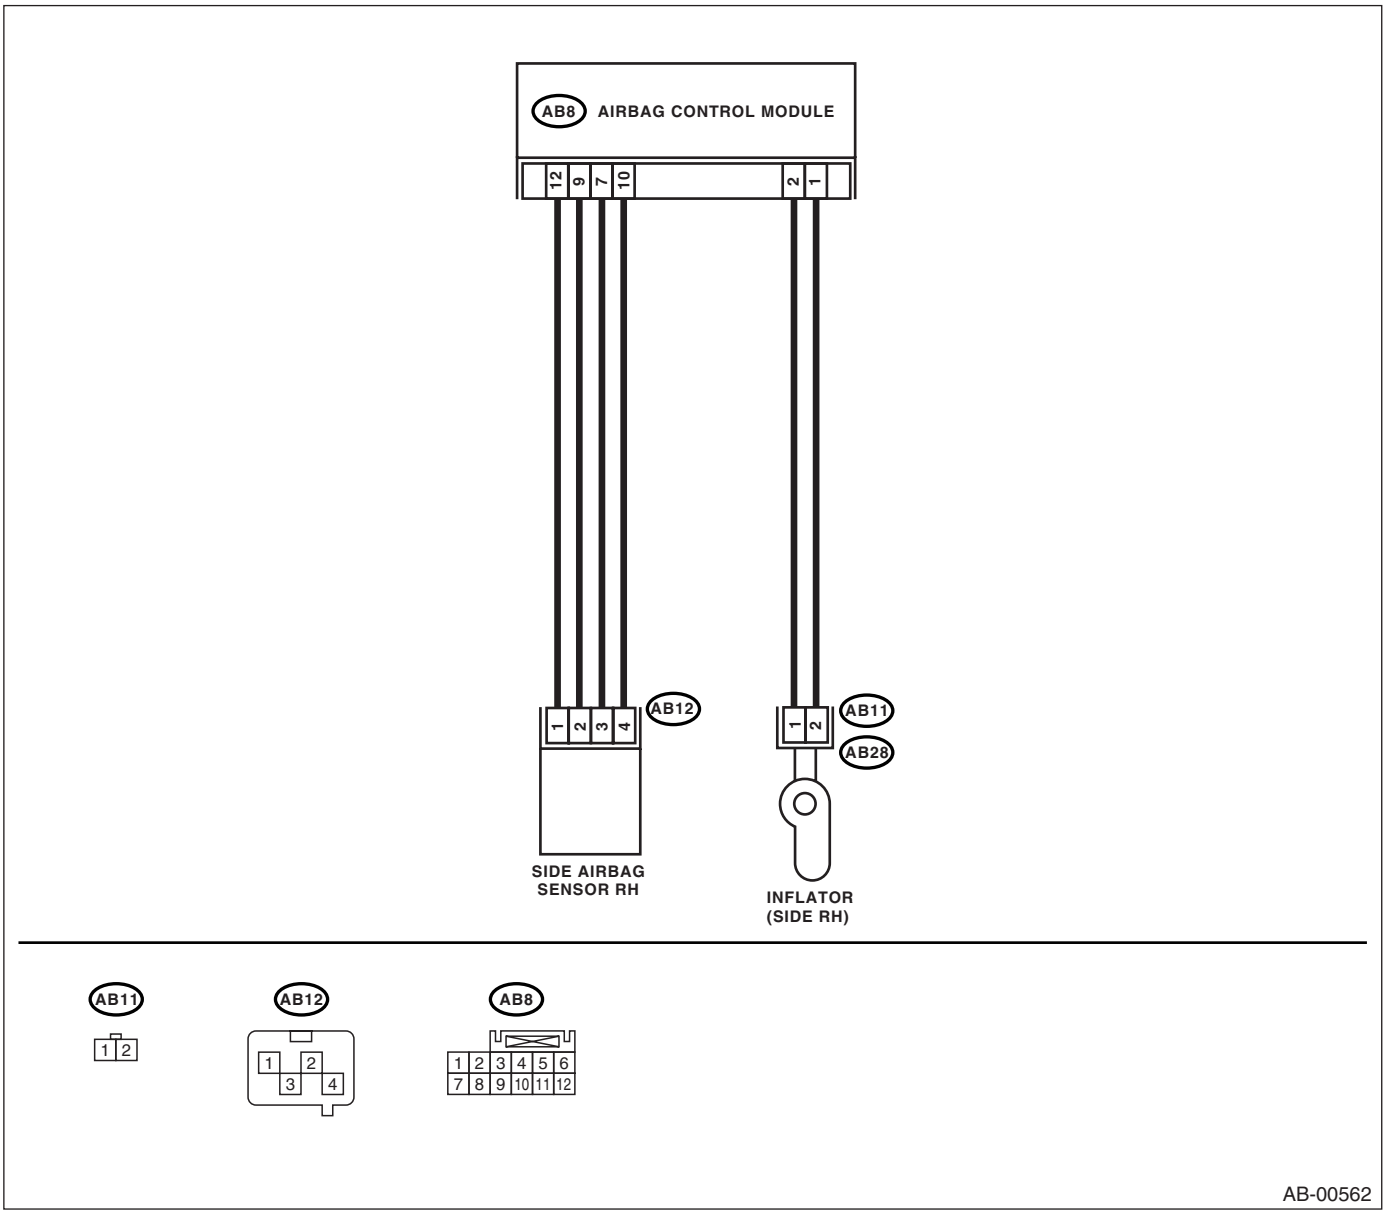

	Step	Check	Yes	No
1	**CHECK SIDE AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB20) from the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.> 3)Disconnect the connector (AB28) from (AB11), and connect the connector (1F) in test harness F to (AB11). 4)Connect the airbag resistor to connector (3F) in test harness F. 5)Connect the battery ground cable, and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the front seat with side airbag module (RH). <Ref. to SE-6, Front Seat.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (RH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from test harness F. 3)Disconnect the connector (AB8) from air bag control module. <Ref. to AB-16, Airbag Control Module.> 4)Connect the connector (1R) in test harness R to connector (AB8). 5)Measure the resistance between connector (3R) in test harness R and connector (3F) in test harness F. ***Connector & terminal*** ***(3R) No. 20 — (3F) No. 4:*** ***(3R) No. 18 — (3F) No. 3:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with side airbag harness.
3	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance of the connector (3R) in test harness R. ***Connector & terminal*** ***(3R) No. 20 — (3R) No. 18:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the body harness with side airbag harness.
4	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance of the connector (3F) in test harness F. ***Connector & terminal*** ***(3F) No. 3 — (3F) No. 4:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Replace the body harness with side airbag harness.
5	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance between connector (3F) in test harness F and the chassis ground. ***Connector & terminal*** ***(3F) No. 3 — Chassis ground:*** ***(3F) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Replace the body harness with side airbag harness.
6	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 20 — Chassis ground:*** ***(3R) No. 18 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

M: DTC 42

DIAGNOSIS:

- Side airbag harness (LH) is faulty.
- Side airbag module (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.
• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

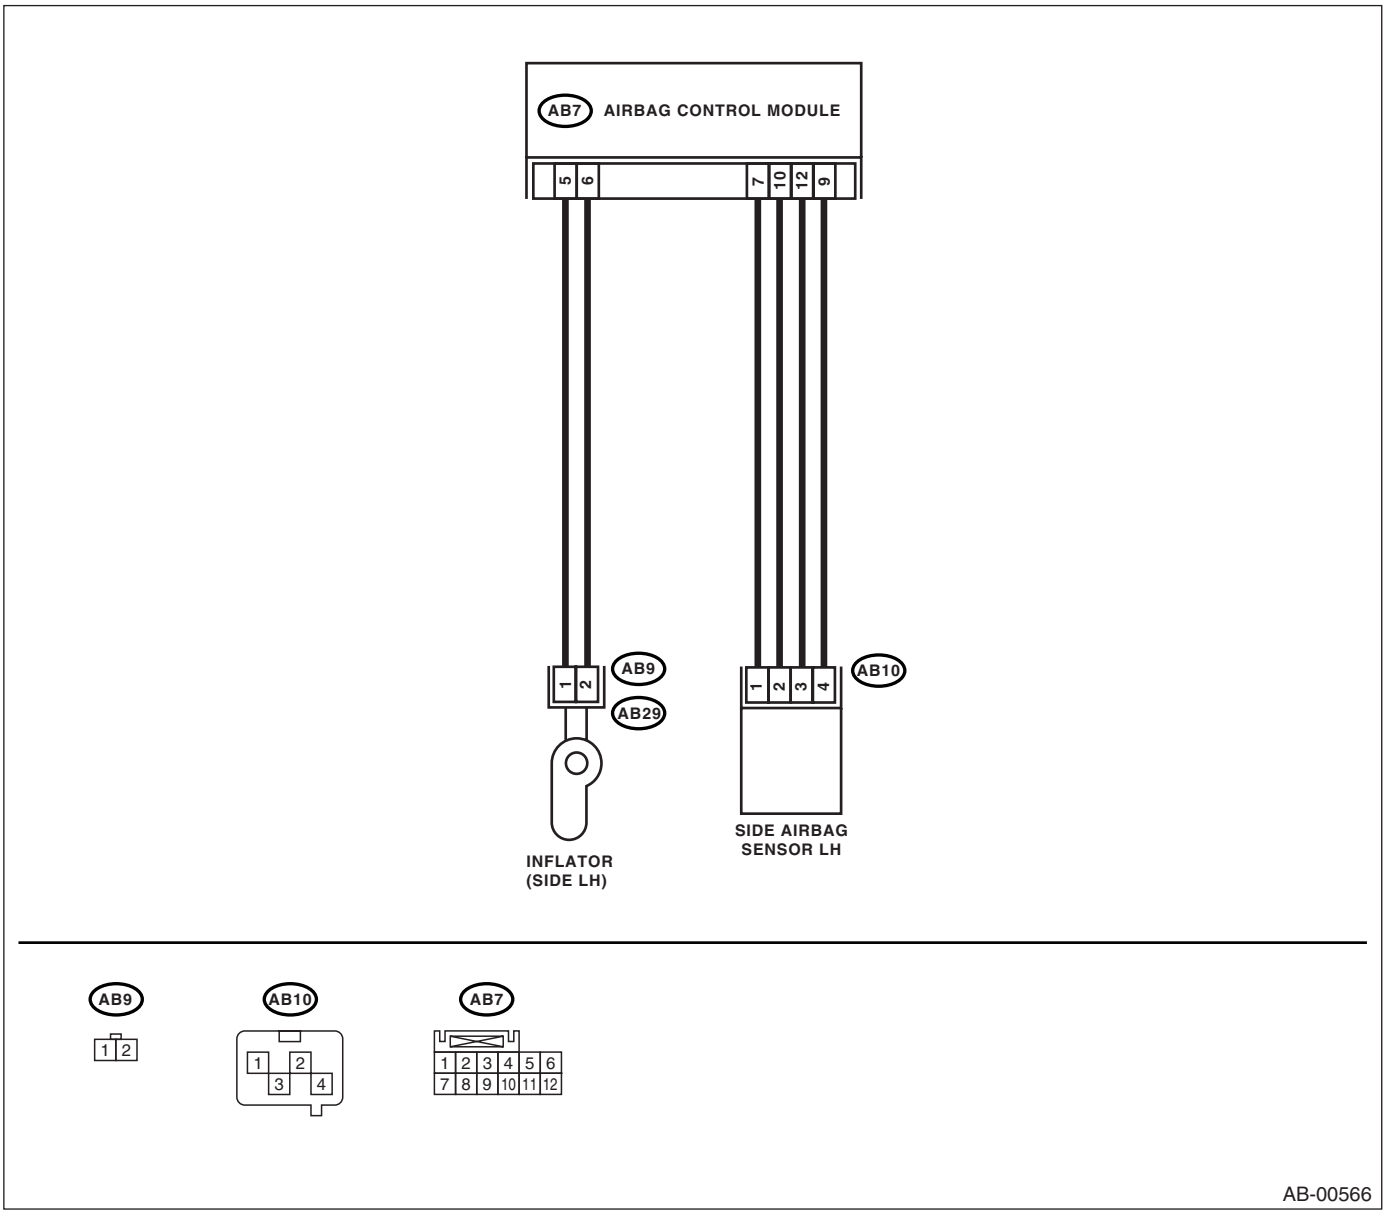

	Step	Check	Yes	No
1	**CHECK SIDE AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB19) from the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.> 3)Disconnect the connector (AB29) from (AB9), and connect the connector (1F) in test harness F to (AB9). 4)Connect the airbag resistor to connector (3F) in test harness F. 5)Connect the battery ground cable, and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the front seat with side airbag module (LH). <Ref. to SE-6, Front Seat.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (LH).** 1)Turn ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB7) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 4)Connect the connector (1R) in test harness R to connector (AB7). 5)Measure the resistance between connector (3R) in test harness R and connector (3F) in test harness F. ***Connector & terminal*** ***(3R) No. 12 — (3F) No. 4:*** ***(3R) No. 10 — (3F) No. 3:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with side airbag harness.
3	**CHECK SIDE AIRBAG HARNESS (LH).** Measure the resistance of the connector (3R) in test harness R. ***Connector & terminal*** ***(3R) No. 12 — (3R) No. 10:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the body harness with side airbag harness.
4	**CHECK SIDE AIRBAG HARNESS (LH).** Measure the resistance of the connector (3F) in test harness F. ***Connector & terminal*** ***(3F) No. 3 — (3F) No. 4:***	Is the resistance more than 1 MΩ?	Go to step **5.**	Replace the body harness with side airbag harness.
5	**CHECK SIDE AIRBAG HARNESS (LH).** Measure the resistance between connector (3F) in test harness F and the chassis ground. ***Connector & terminal*** ***(3F) No. 3 — Chassis ground:*** ***(3F) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **6.**	Replace the body harness with side airbag harness.
6	**CHECK SIDE AIRBAG HARNESS (LH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 12 — Chassis ground:*** ***(3R) No. 10 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

N: DTC 45

DIAGNOSIS:

- Side airbag harness (RH) is shorted to power supply.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.
• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

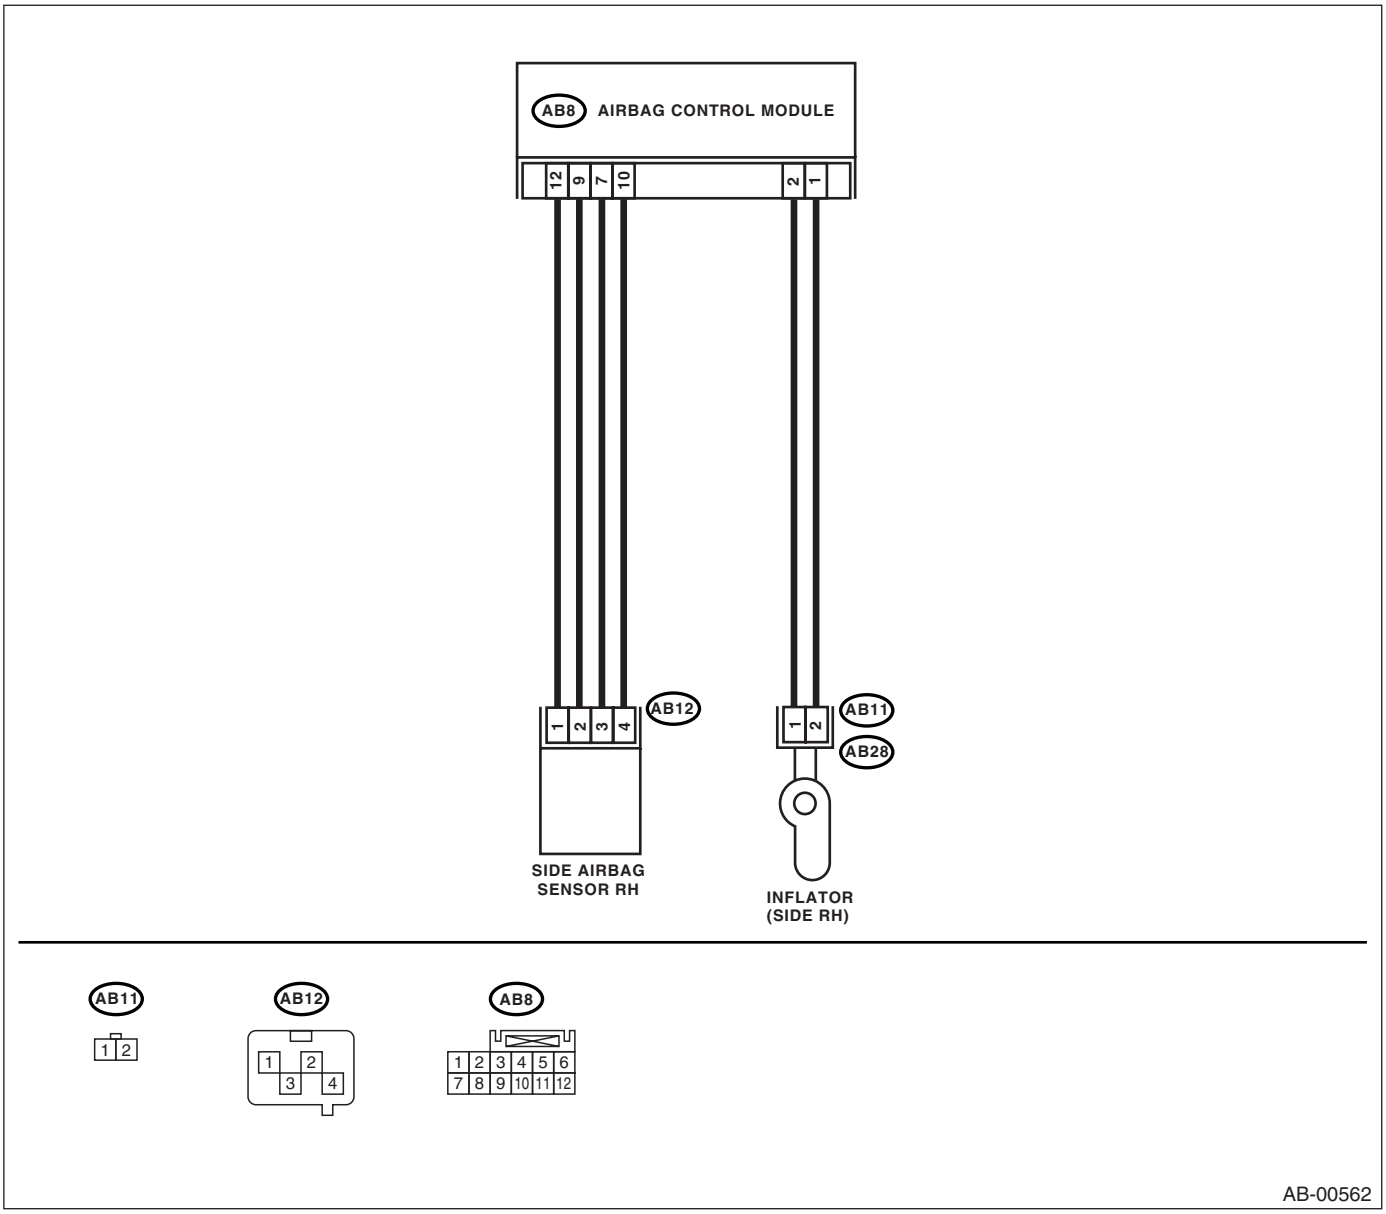

	Step	Check	Yes	No
1	**CHECK SIDE AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB20) from the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.> 3)Disconnect the connector (AB28) from (AB11), and connect the connector (1F) in test harness F to (AB11). 4)Connect the airbag resistor to connector (3F) in test harness F. 5)Connect the battery ground cable, and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the front seat with side airbag module (RH). <Ref. to SE-6, Front Seat.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (RH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 4)Connect the connector (1R) in test harness R to connector (AB8). 5)Connect the battery ground cable, and turn the ignition switch to ON. 6)Measure the voltage between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 20 (+) — Chassis ground (−):*** ***(3R) No. 18 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

O: DTC 46

DIAGNOSIS:

- Side airbag harness (LH) is shorted to power supply.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.
• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

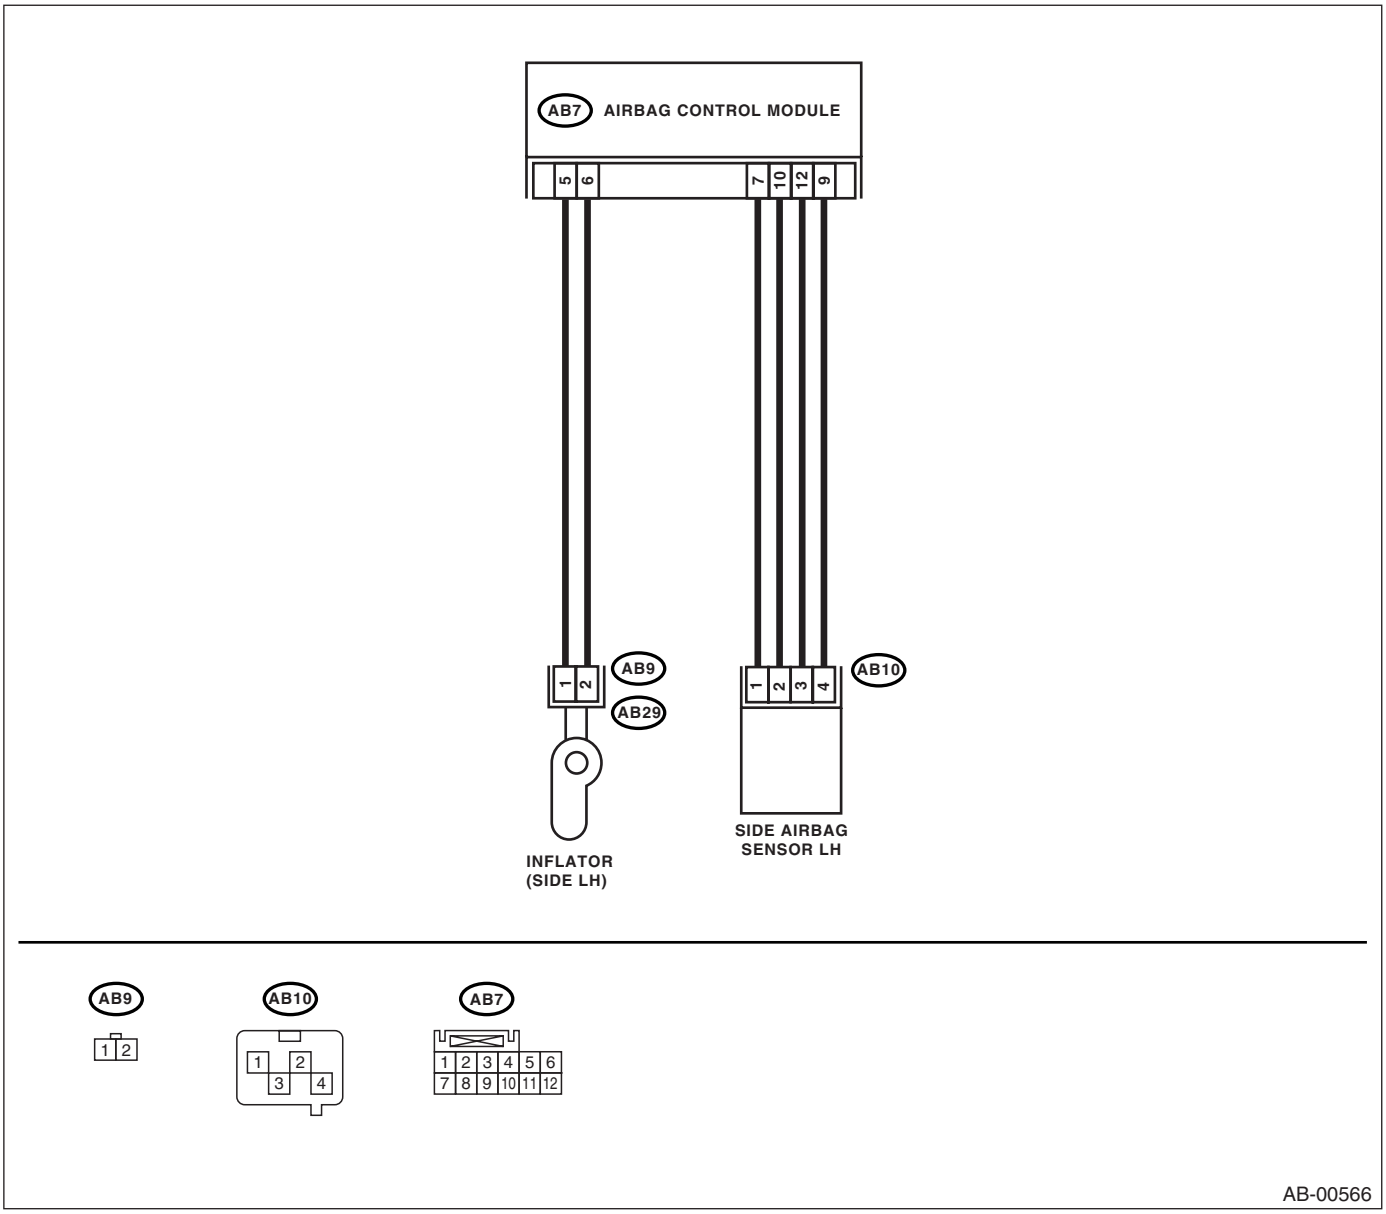

	Step	Check	Yes	No
1	**CHECK SIDE AIRBAG MODULE.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB19) from the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.> 3)Disconnect the connector (AB29) from (AB9), and connect the connector (1F) in test harness F to (AB9). 4)Connect the airbag resistor to connector (3F) in test harness F. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the front seat with side airbag module (LH). <Ref. to SE-6, Front Seat.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (LH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB7) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 4)Connect the connector (1R) in test harness R to connector (AB7). 5)Connect the battery ground cable, and turn the ignition switch to ON. 6)Measure the voltage between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 12 (+) — Chassis ground (−):*** ***(3R) No. 10 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

P: DTC 51

DIAGNOSIS:

- Side airbag sensor (RH) is faulty.
- Side airbag harness (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.
• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

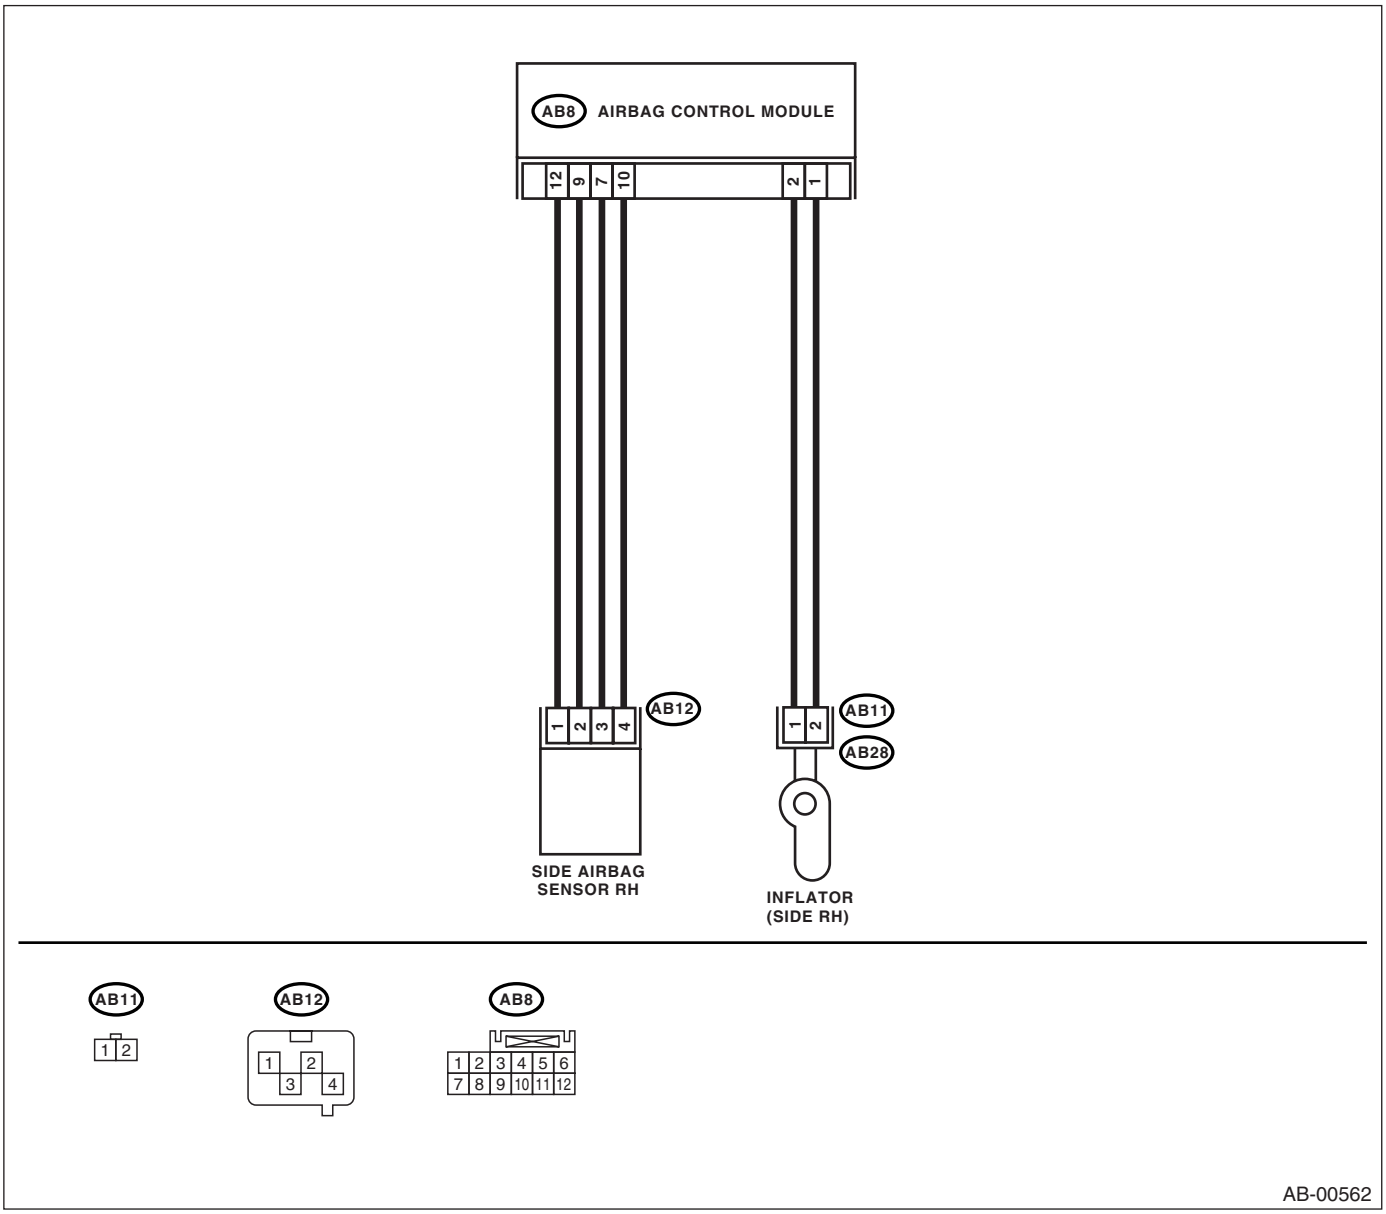

	Step	Check	Yes	No
1	**CHECK SIDE AIRBAG HARNESS (RH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB20) from the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.> 3)Disconnect the connector (AB28) from (AB11). 4)Disconnect the connector (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 5)Connect the connector (1R) in test harness R to the connector (AB8). 6)Disconnect the connector (AB12) from the side airbag sensor (RH), and connect the connector (1G) in test harness G to connector (AB12). 7)Measure the resistance between connector (4R) in test harness R and connector (3G) in test harness G. ***Connector & terminal*** ***(4R) No. 5 — (3G) No. 2:*** ***(4R) No. 7 — (3G) No. 1:*** ***(4R) No. 8 — (3G) No. 5:*** ***(4R) No. 6 — (3G) No. 4:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the body harness with side airbag harness.
2	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance between connector (4R) in test harness R and the chassis ground. ***Connector & terminal*** ***(4R) No. 5 — Chassis ground:*** ***(4R) No. 7 — Chassis ground:*** ***(4R) No. 8 — Chassis ground:*** ***(4R) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the side airbag sensor (RH). <Ref. to AB-17, Side Airbag Sensor.> When sensor replacement is not OK, replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

Q: DTC 52

DIAGNOSIS:

- Side airbag sensor (LH) is faulty.
- Side airbag harness (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the airbag main harness, disconnect the driver's airbag module and passenger's airbag module connectors for safety reasons.
• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

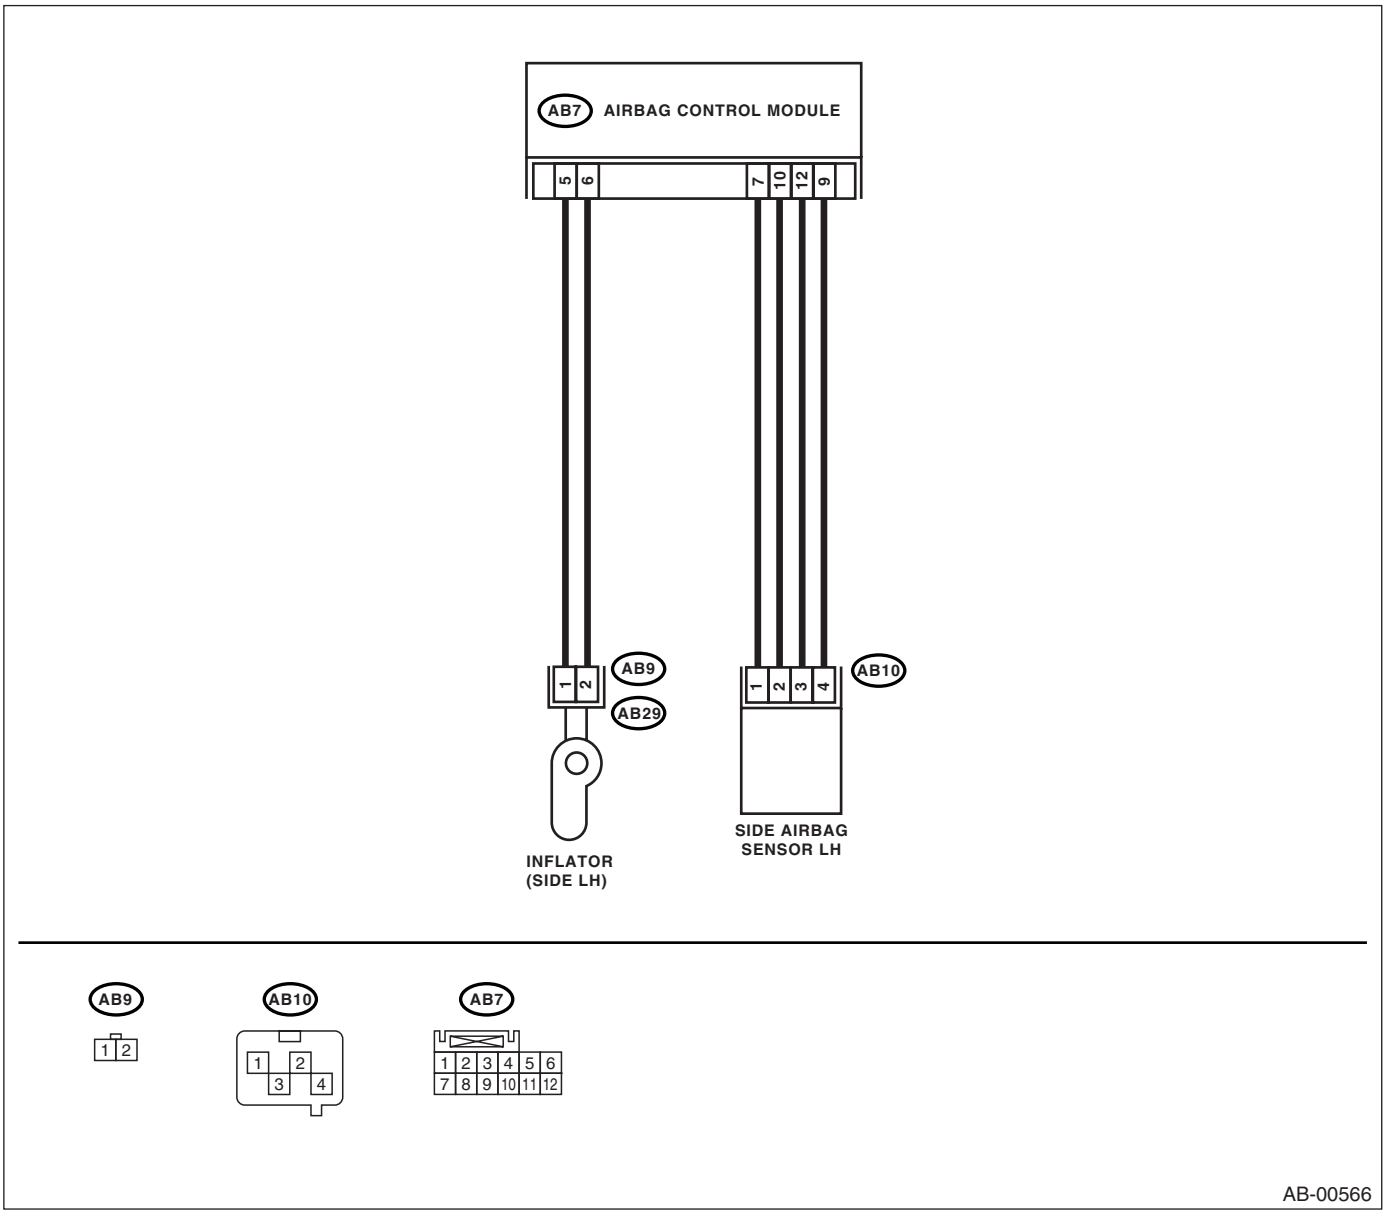

	Step	Check	Yes	No
1	**CHECK SIDE AIRBAG HARNESS (LH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB19) from the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.> 3)Disconnect the connector (AB29) from (AB9). 4)Disconnect the connector (AB7) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 5)Connect the connector (1R) in test harness R to connector (AB7). 6)Disconnect the connector (AB10) from the side airbag sensor (LH), and connect the connector (1G) in test harness G to connector (AB10). 7)Measure the resistance between connector (4R) in test harness R and connector (3G) in test harness G. ***Connector & terminal*** ***(4R) No. 3 — (3G) No. 4:*** ***(4R) No. 1 — (3G) No. 5:*** ***(4R) No. 2 — (3G) No. 1:*** ***(4R) No. 4 — (3G) No. 2:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the body harness with side airbag harness.
2	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance between connector (4R) in test harness R and the chassis ground. ***Connector & terminal*** ***(4R) No. 3 — Chassis ground:*** ***(4R) No. 1 — Chassis ground:*** ***(4R) No. 2 — Chassis ground:*** ***(4R) No. 4 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the side airbag sensor (LH). <Ref. to AB-17, Side Airbag Sensor.> When sensor replacement is not OK, replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

R: DTC 53

DIAGNOSIS:

- Side airbag sensor (RH) is faulty.

When Code 53 is displayed, the circuit within the side airbag sensor (RH) is faulty. Replace the side airbag sensor (RH).
<Ref. to AB-17, Side Airbag Sensor.>

S: DTC 54

DIAGNOSIS:

- Side airbag sensor (LH) is faulty.

When Code 53 is displayed, the circuit within the side airbag sensor (LH) is faulty. Replace the side airbag sensor (LH).
<Ref. to AB-17, Side Airbag Sensor.>

T: DTC 55

This code is displayed when the side airbag is deployed.
When this code is displayed, the memory cannot be erased. Replace the following parts.

- Airbag control module. <Ref. to AB-16, Airbag Control Module.>
- Front seat with side airbag module. (Operating side) <Ref. to SE-6, Front Seat.>
- Side airbag sensor. (Operating side) <Ref. to AB-17, Side Airbag Sensor.>

U: DTC 61

DIAGNOSIS:

- Seat belt pretensioner (RH) circuit is open, shorted or shorted to ground.
- Airbag control module is faulty.
- Pretensioner is faulty.
- Pretensioner harness is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

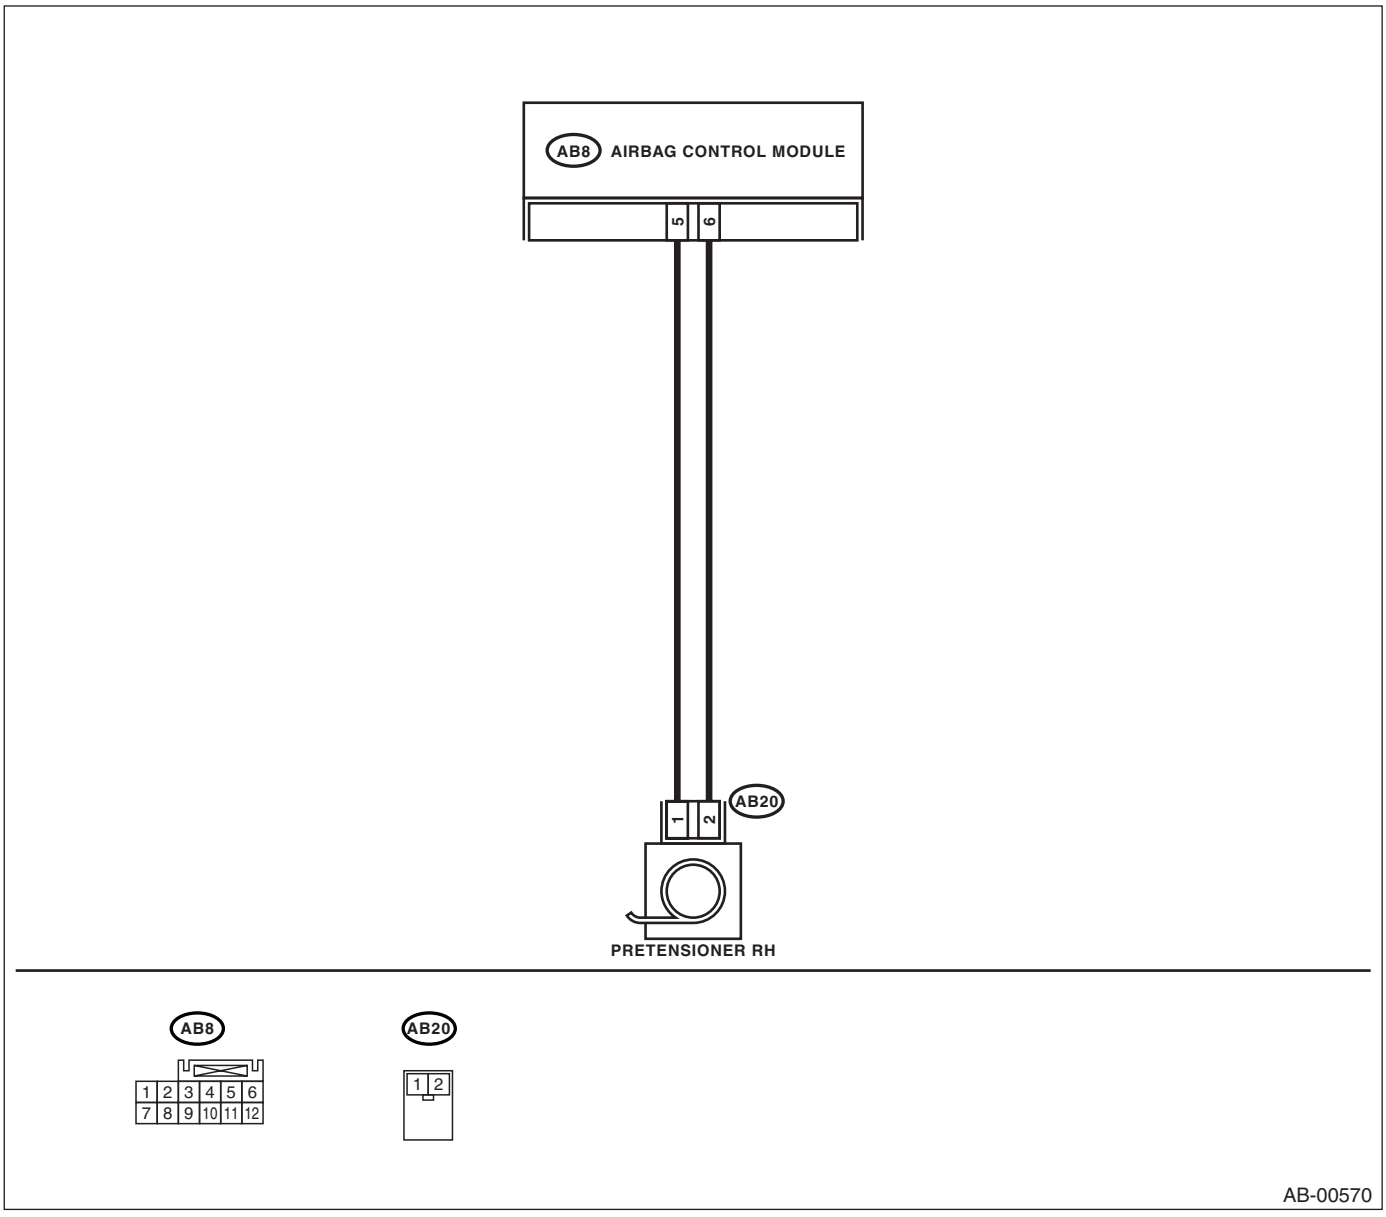

	Step	Check	Yes	No
1	**CHECK SEAT BELT PRETENSIONER.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB20) from the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.> 3)Connect the connector (1N) in test harness N to (AB20). 4)Connect the airbag resistor to connector (2N) in test harness N. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (RH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB28) from (AB11). 4)Disconnect the connectors (AB7) and (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 5)Connect the connector (1R) in test harness R to connector (AB8). 6)Measure the resistance between connector (3R) in test harness R and connector (2N) in test harness N. ***Connector & terminal*** ***(3R) No. 19 — (2N) No. 2:*** ***(3R) No. 17 — (2N) No. 1:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with side airbag harness.
3	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance of the connector (3R) in test harness R. ***Connector & terminal*** ***(3R) No. 17 — (3R) No. 19:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the body harness with side airbag harness.
4	**CHECK SIDE AIRBAG HARNESS (RH).** Measure the resistance between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 17 — Chassis ground:*** ***(3R) No. 19 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

V: DTC 62

DIAGNOSIS:

- Seat belt pretensioner (LH) circuit is open, shorted or shorted to ground.
- Airbag control module is faulty.
- Pretensioner is faulty.
- Pretensioner harness is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.
• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.
• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

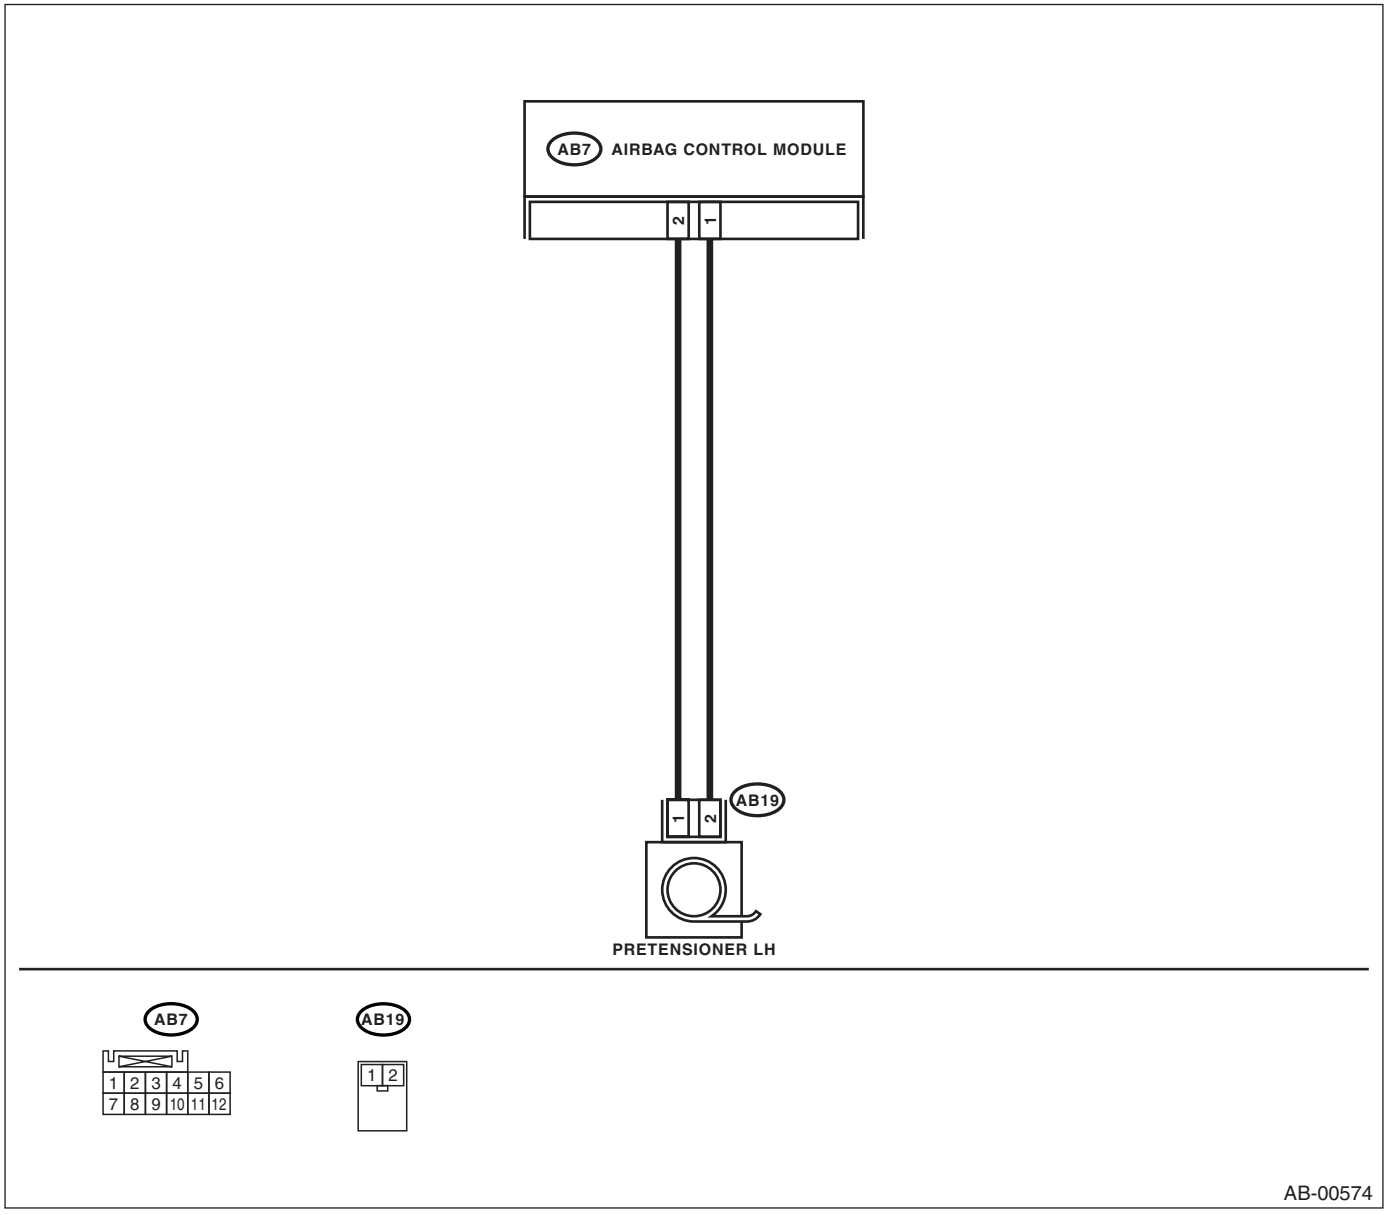

	Step	Check	Yes	No
1	**CHECK SEAT BELT PRETENSIONER.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB19) from the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.> 3)Connect the connector (1N) in test harness N to (AB19). 4)Connect the airbag resistor to the connector (2N) in test harness N. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (LH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB29) from (AB9). 4)Disconnect the connectors (AB7) and (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 5)Connect the connector (1R) in test harness R to the connector (AB7). 6)Measure the resistance between connector (3R) in test harness R and the connector (2N) in test harness N. ***Connector & terminal*** ***(3R) No. 11 — (2N) No. 1:*** ***(3R) No. 13 — (2N) No. 2:***	Is the resistance less than 10 Ω?	Go to step **3.**	Replace the body harness with side airbag harness.
3	**CHECK SIDE AIRBAG HARNESS (LH).** Measure the resistance of the connector (3R) in test harness R. ***Connector & terminal*** ***(3R) No. 11 — (3R) No. 13:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the body harness with side airbag harness.
4	**CHECK SIDE AIRBAG HARNESS (LH).** Measure the resistance between the connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 11 — Chassis ground:*** ***(3R) No. 13 — Chassis ground:***	Is the resistance more than 1 MΩ?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

W: DTC 65

DIAGNOSIS:

- Seat belt pretensioner (RH) circuit is shorted to the power supply.
- Pretensioner is faulty.
- Pretensioner harness is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module, and sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

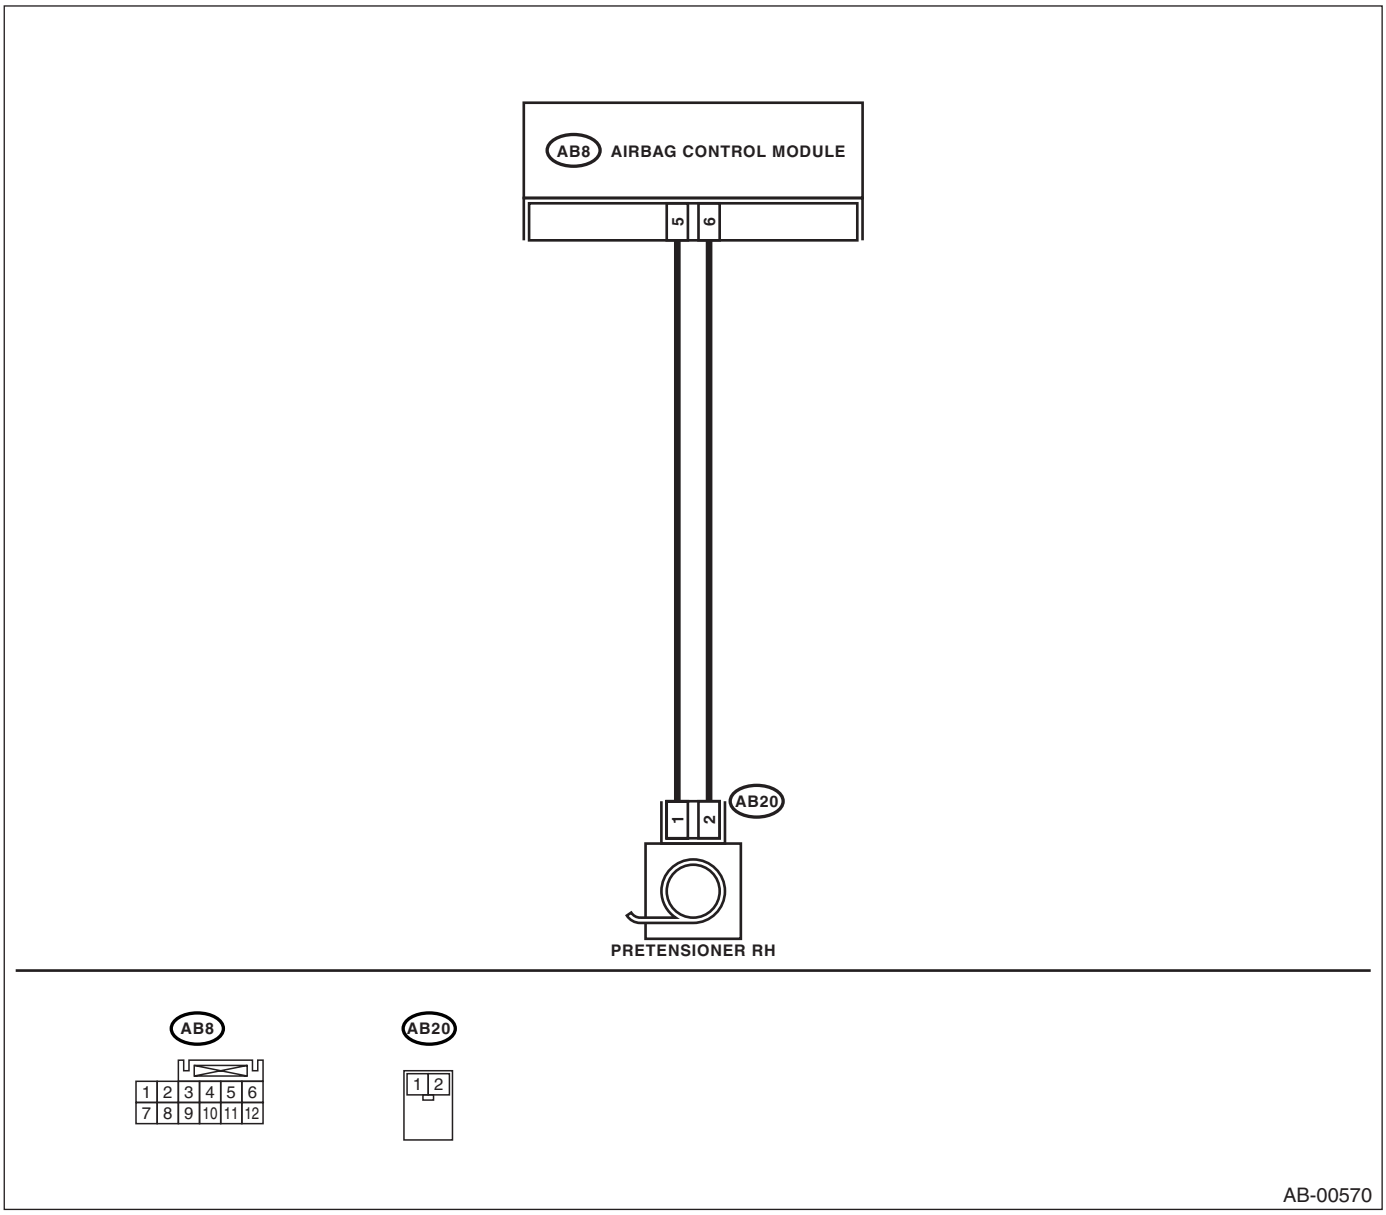

	Step	Check	Yes	No
1	**CHECK SEAT BELT PRETENSIONER.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB20) from the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.> 3)Connect the connector (1N) in test harness N to (AB20). 4)Connect the airbag resistor to connector (2N) in test harness N. 5)Connect the battery ground cable, and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the seat belt pretensioner (RH). <Ref. to SB-12, Front Seat Belt.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (RH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB28) from (AB11). 4)Disconnect the connectors (AB7) and (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 5)Connect the connector (1R) in test harness R to the connector (AB8). 6)Connect the battery ground cable and turn the ignition switch to ON. 7)Measure the voltage between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 17 (+) — Chassis ground (−):*** ***(3R) No. 19 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

X: DTC 66

DIAGNOSIS:

- Seat belt pretensioner (LH) circuit is shorted to the power supply.
- Pretensioner is faulty.
- Pretensioner harness is faulty.
- Airbag control module is faulty.

CAUTION:

• Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait more than 20 seconds before starting to work.

• Before replacing the airbag module, seat belt pretensioner roll connector, control module and the sensor, reconnect each part and confirm that the warning light operates properly.

• When inspecting the side airbag harness, disconnect the side airbag module connector and seat belt pretensioner connector for the safety reasons.

WIRING DIAGRAM:

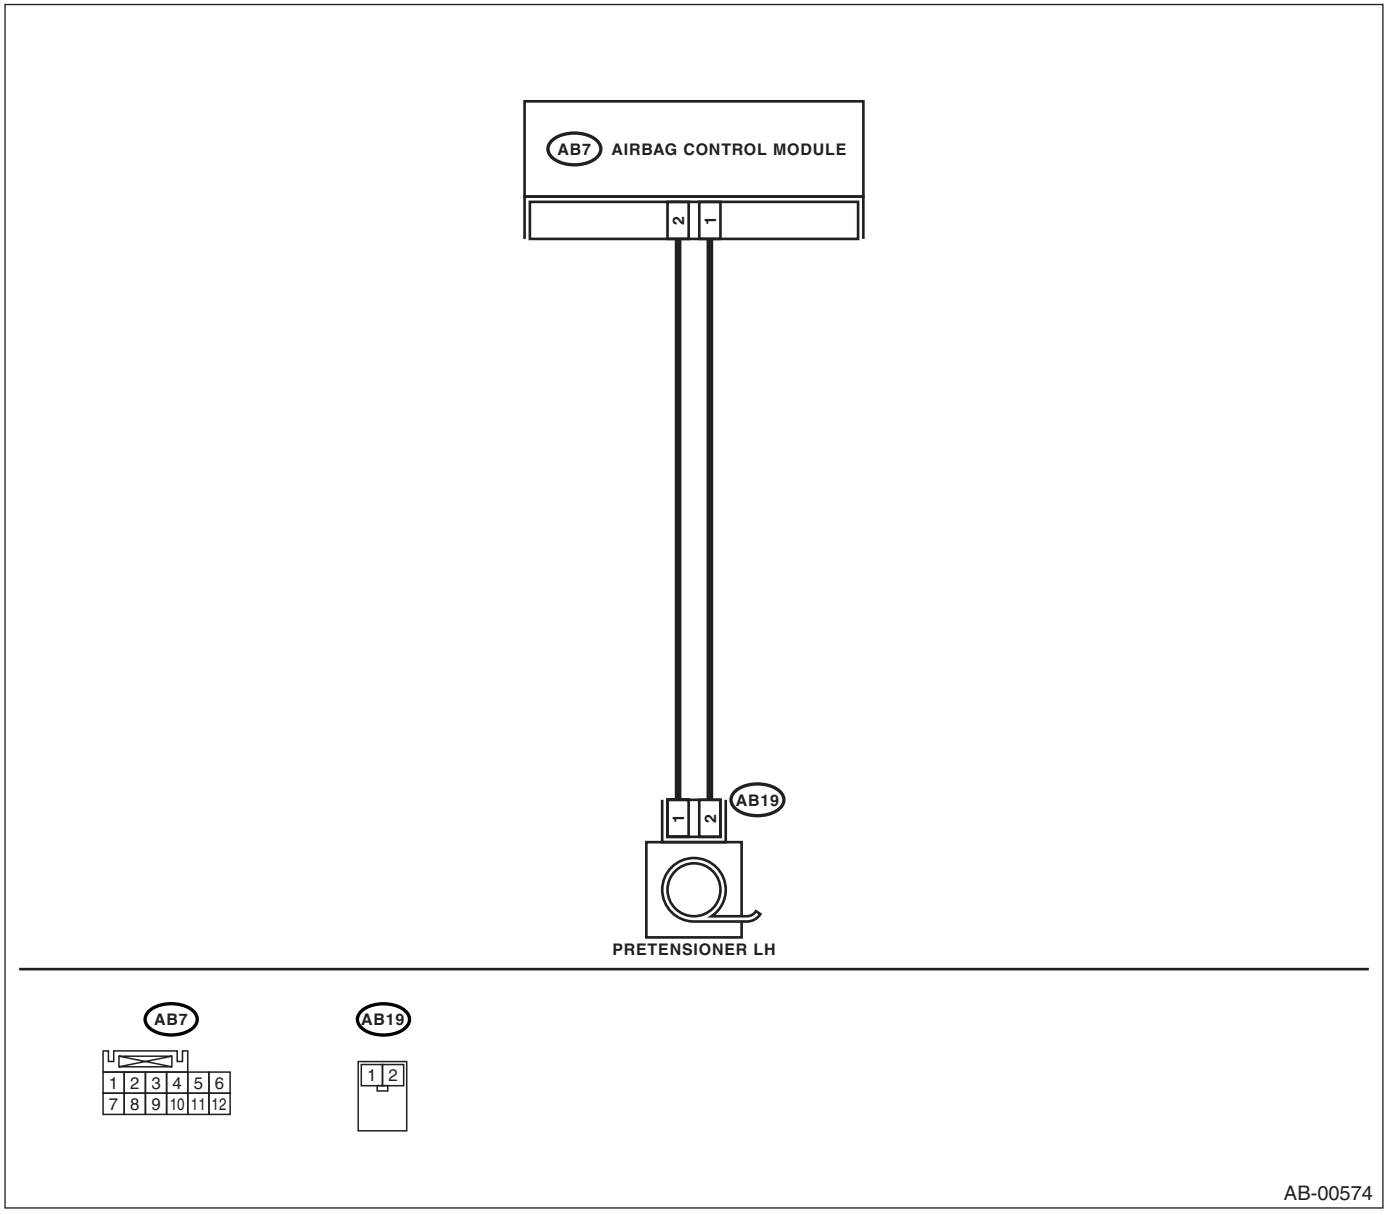

	Step	Check	Yes	No
1	**CHECK SEAT BELT PRETENSIONER.** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the connector (AB19) from the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.> 3)Connect the connector (1N) in test harness N to (AB19). 4)Connect the airbag resistor to the connector (2N) in test harness N. 5)Connect the battery ground cable and turn the ignition switch to ON.	Does the airbag warning light operate properly?	Replace the seat belt pretensioner (LH). <Ref. to SB-12, Front Seat Belt.>	Go to step **2.**
2	**CHECK SIDE AIRBAG HARNESS (LH).** 1)Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2)Disconnect the airbag resistor from the test harness. 3)Disconnect the connector (AB29) from (AB9). 4)Disconnect the connectors (AB7) and (AB8) from the airbag control module. <Ref. to AB-16, Airbag Control Module.> 5)Connect the connector (1R) in test harness R to the connector (AB7). 6)Connect the battery ground cable and turn the ignition switch to ON. 7)Measure the voltage between connector (3R) in test harness R and the chassis ground. ***Connector & terminal*** ***(3R) No. 11 (+) — Chassis ground (−):*** ***(3R) No. 13 (+) — Chassis ground (−):***	Is the voltage less than 1 V?	Replace the airbag control module. <Ref. to AB-16, Airbag Control Module.>	Replace the body harness with side airbag harness.

SEAT BELT SYSTEM

SB

Page

1. General Description 2
2. Pretensioner Connector 7
3. Seat Belt Warning System 8
4. Inspection Locations After a Collision 11
5. Front Seat Belt 12
6. Rear Seat Belt 14
7. Disposal of Pretensioner 17

1. General Description

A: COMPONENT

1. FRONT SEAT BELT

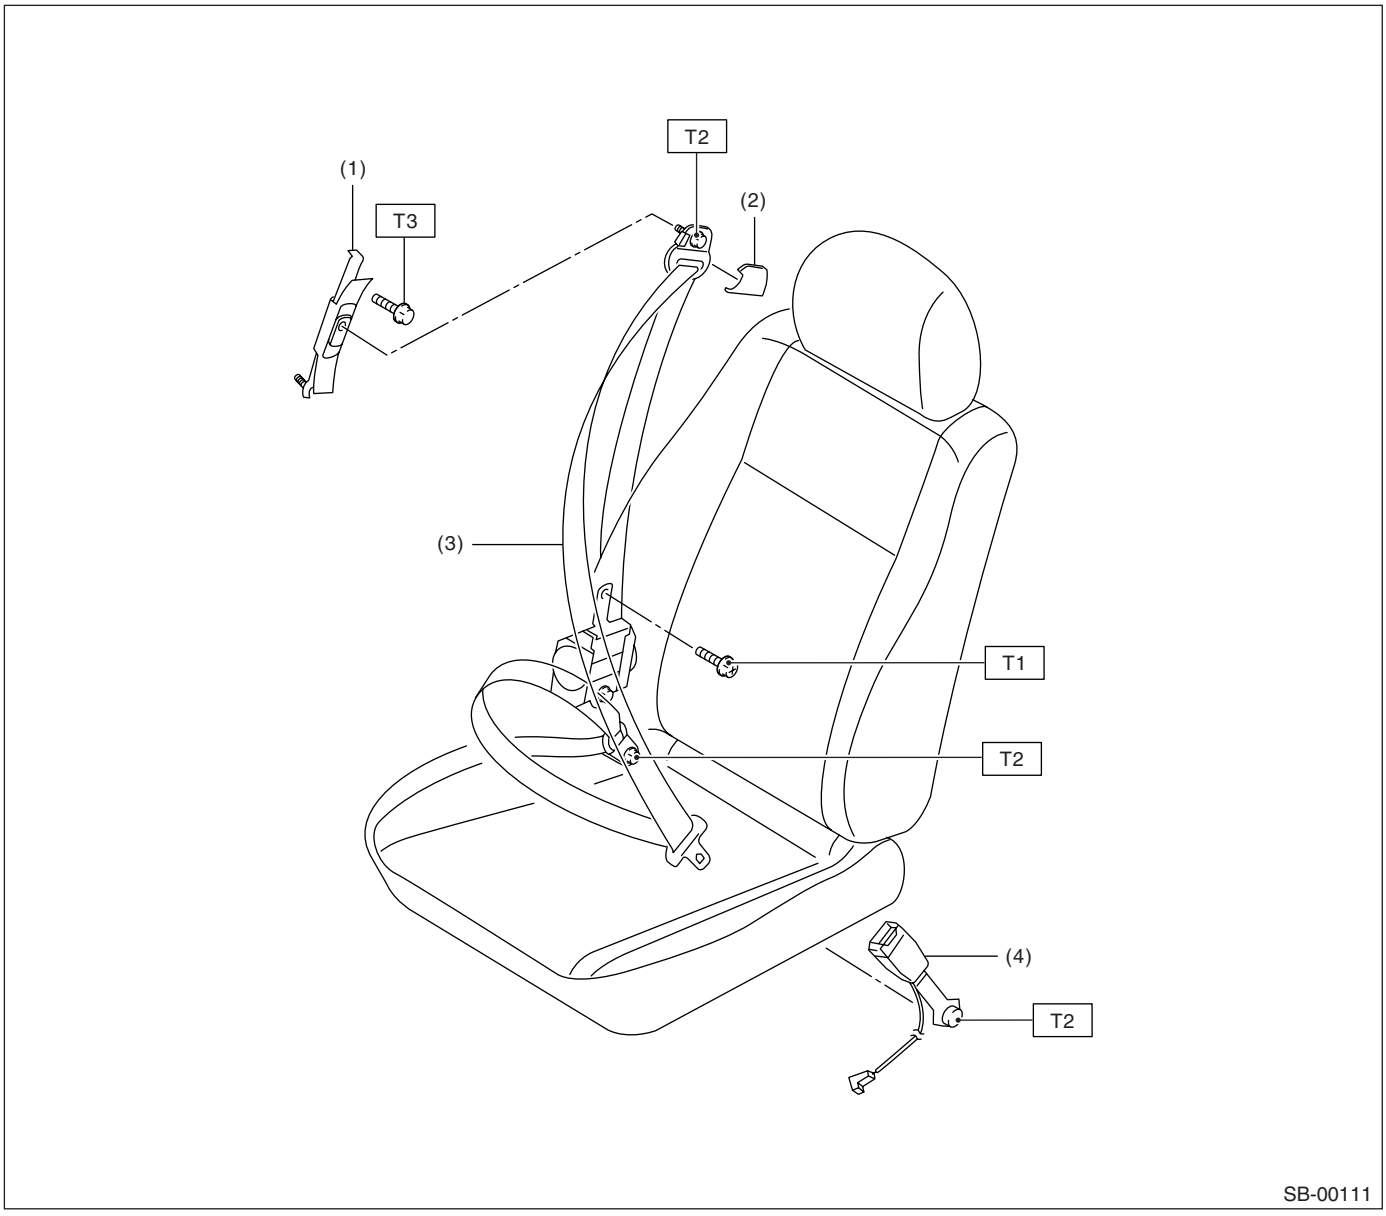

(1) Adjuster anchor ASSY
(2) Anchor cover
(3) Outer belt ASSY
(4) Inner belt ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 30 (3.1, 22)
T3: 53 (5.4, 39)

2. REAR SEAT BELT (SEDAN MODEL)

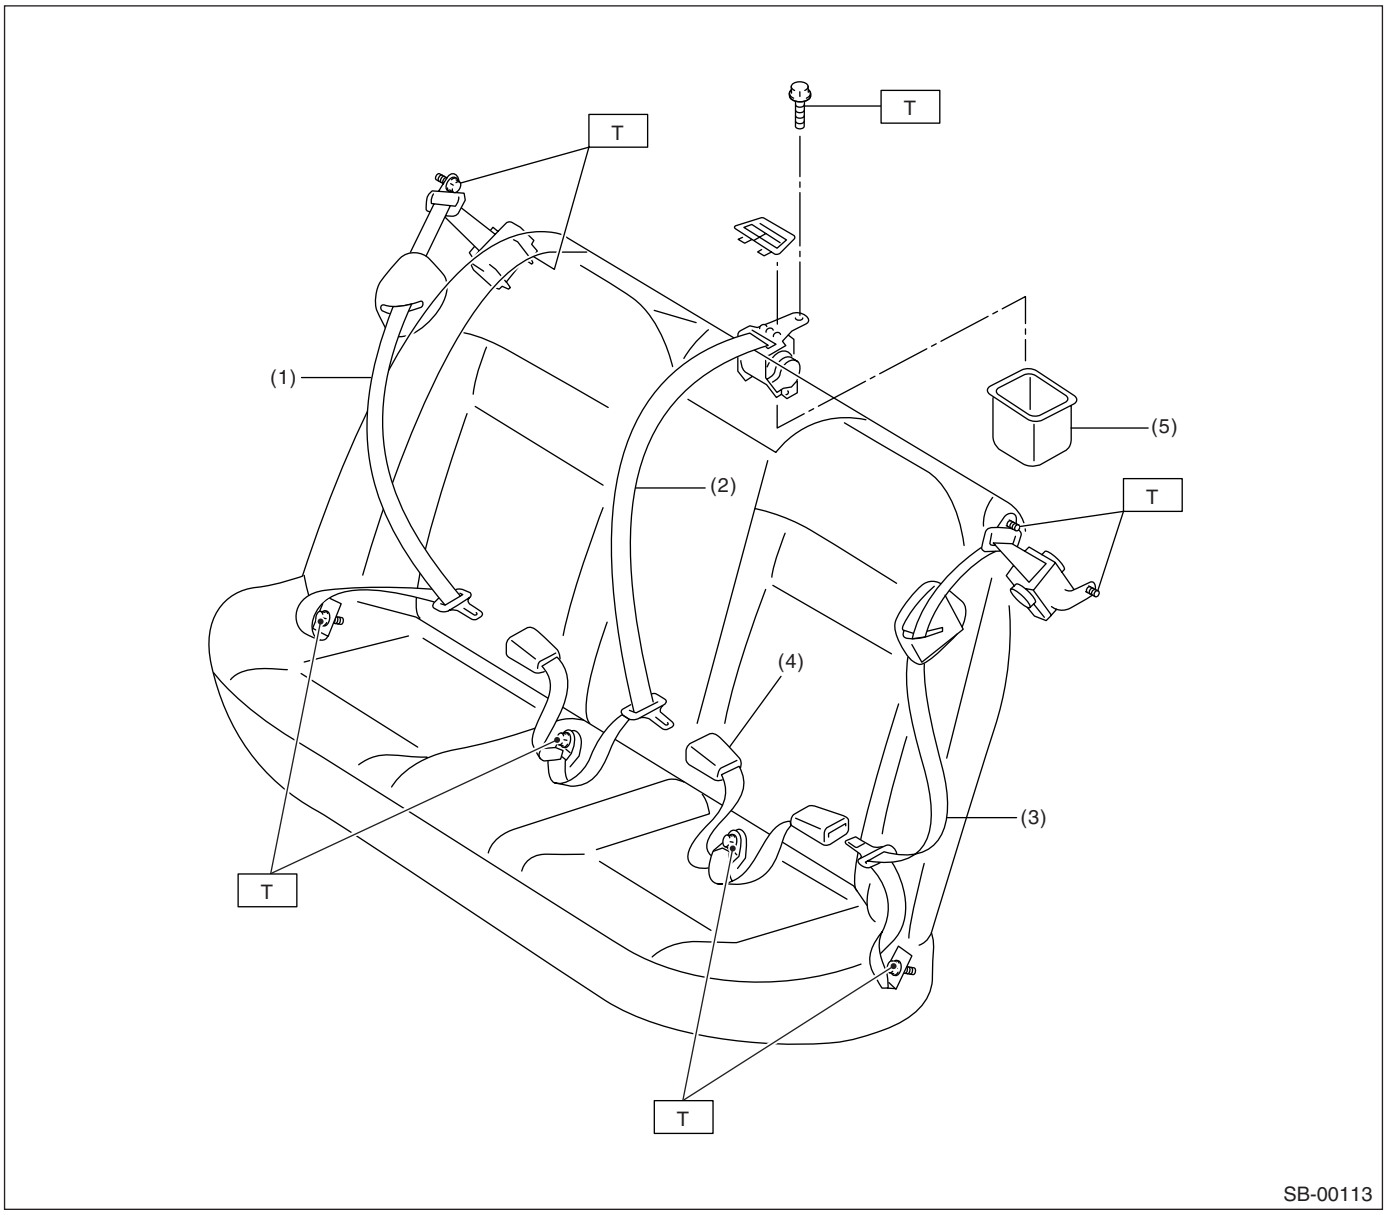

(1) Outer seat belt RH ASSY
(2) Shoulder seat belt CTR ASSY
(3) Outer seat belt LH ASSY
(4) Center seat belt LH ASSY
(5) Case center ELR

Tightening torque: N·m (kgf-m, ft-lb)
T: 30 (3.1, 22)

3. REAR SEAT BELT (WAGON MODEL)

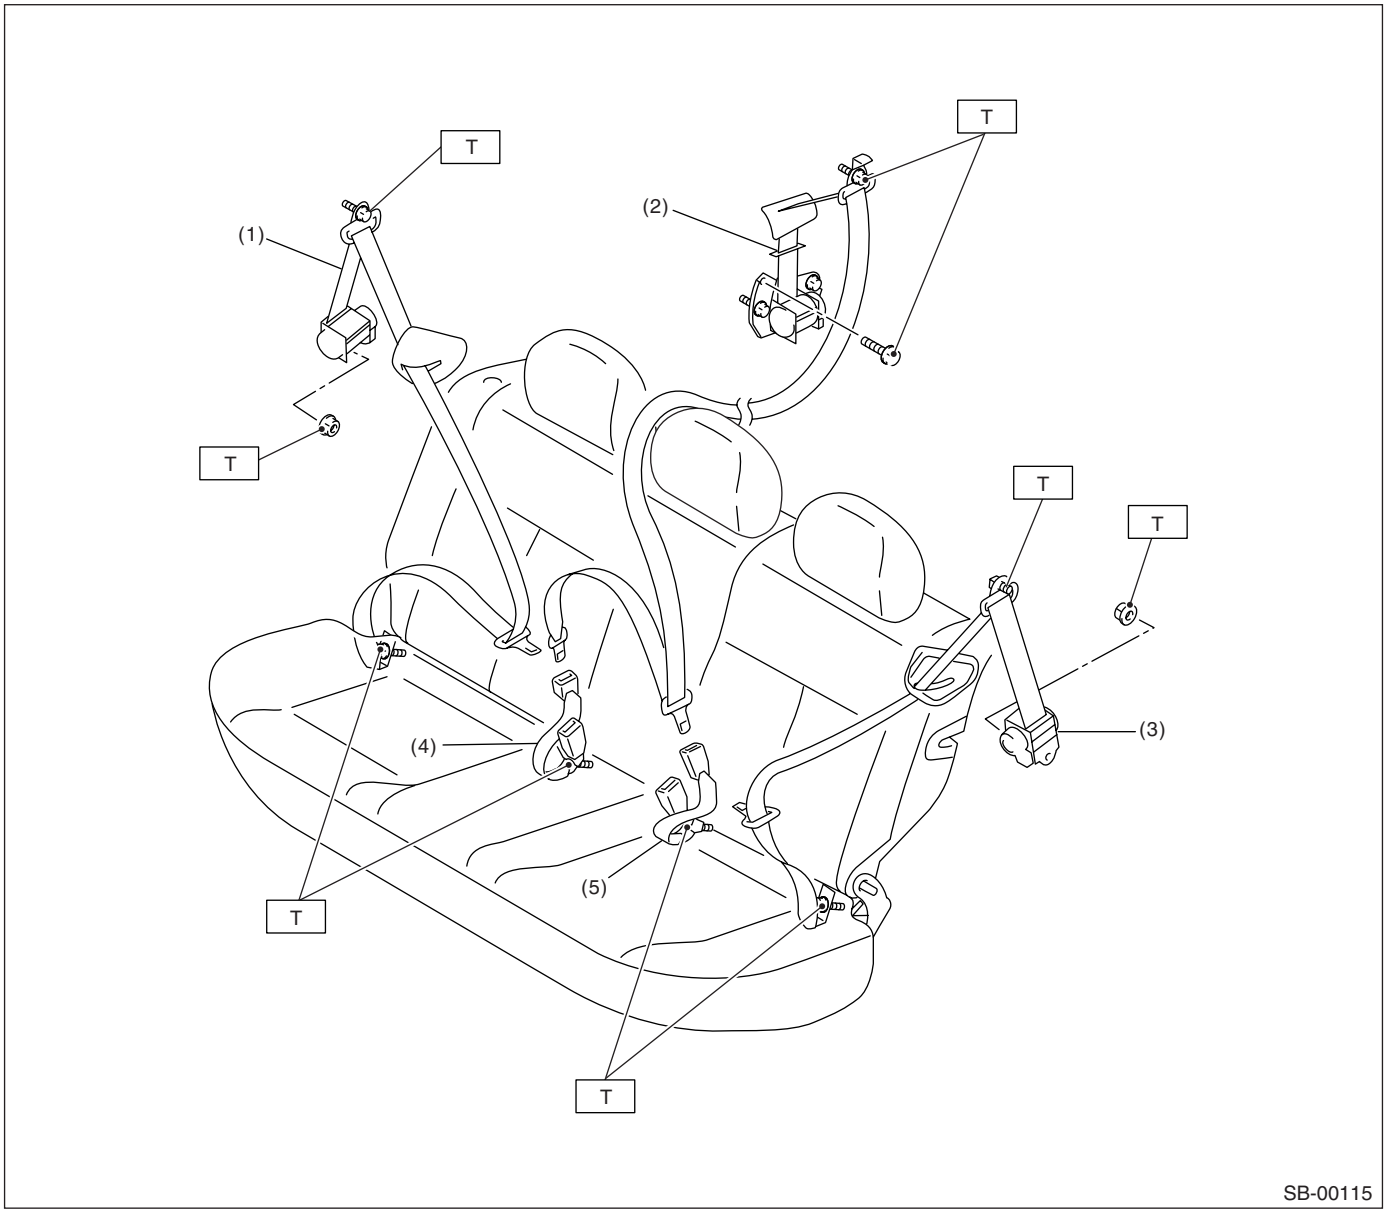

(1) Outer seat belt RH ASSY
(2) Shoulder seat belt CTR ASSY
(3) Outer seat belt LH ASSY
(4) Center seat belt RH ASSY
(5) Center seat belt LH ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T: 30 (3.1, 22)

B: CAUTION

• Before starting, turn the ignition switch to OFF, disconnect the battery ground cable and wait for 20 seconds or more.
• The pretensioner system has a backup power source. The pretensioner might deploy if you do not wait for 20 seconds or more before starting work.
• Do not drop or apply any impact to the pretensioner.
• If oil, grease, or water gets on the pretensioner, wipe it off immediately with a dry cloth.
• Do not expose the pretensioner to high temperature or flame.
• Do not allow current to flow through or voltage to reach the pretensioner. Do not use a circuit tester to check resistance of the pretensioner.
• Do not disassemble or attempt to repair the pretensioner. If it is dented, cracked, or deformed, replace it with a new one.
• Do not use the airbag or pretensioner parts from other vehicles. Always replace parts with new parts.
• When handling a seat belt with a deployed pretensioner, wear gloves and goggles. Wash your hands afterwards.
• Do not re-use a seat belt with a deployed pretensioner again.
• Be sure to deploy pretensioner before disposal. <Ref. to SB-17, OPERATION, Disposal of Pretensioner.>
• If the material gets in your eyes or on your skin during deployment, wash it away with clean water, and then consult a doctor.

C: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
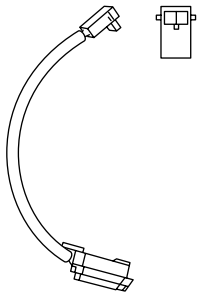 ST98299SA010	98299SA010	ADAPTER D (DEPLOYMENT)	• Used for deploying the pretensioner. • Used with DEPLOYMENT TOOL (98299PA030).
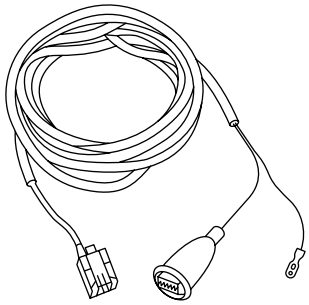 ST98299PA030	98299PA030	DEPLOYMENT TOOL	• Used for deploying the pretensioner. • Used with ADAPTER D (DEPLOYMENT) (98299SA010).

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.

2. Pretensioner Connector

A: OPERATION

1) How to disconnect:

(1) Using a flat tip screwdriver, pry the push lock upward to unlock.

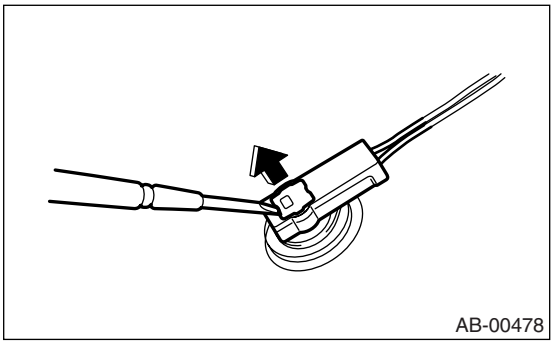

(2) Pull the connector to disconnect from retractor assembly.

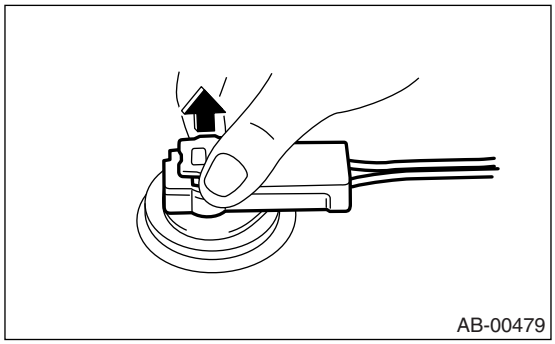

2) How to connect:

Connect the connector in reverse order of disconnecting. At this time, be sure to insert the connector in until connecting sound is heard.

CAUTION:

• Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

• At this time, be sure to insert the push lock in.

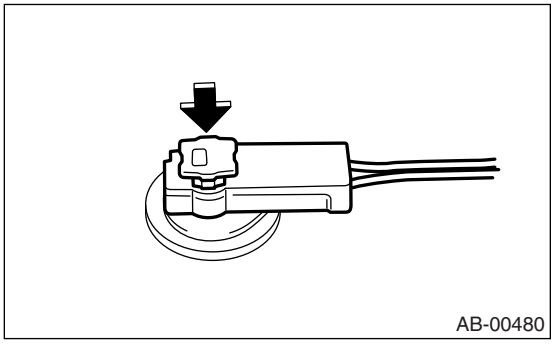

3. Seat Belt Warning System

A: SCHEMATIC

1. LHD MODEL
<Ref. to WI-247, LHD FOR EUROPE MODEL, SCHEMATIC, Seat Belt Warning System.>
2. RHD MODEL
<Ref. to WI-248, RHD FOR EUROPE MODEL, SCHEMATIC, Seat Belt Warning System.>

B: INSPECTION

TROUBLE SYMPTOM:
- Seat belt warning light does not come on or go off.
- Buzzer does not beep.

	Step	Check	Yes	No
1	**CHECK HARNESS BETWEEN SEAT BELT TIMER MODULE AND CHASSIS GROUND.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from seat belt timer module. 3)Measure the resistance between seat belt timer module harness connector and chassis ground. ***Connector & terminal*** ***(B44) No. 3 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **2.**	Repair the open circuit of harness between seat belt timer module and chassis ground.
2	**CHECK POWER SUPPLY OF SEAT BELT TIMER MODULE.** 1)Turn the ignition switch to ON. 2)Measure the voltage between seat belt timer module connector and chassis ground. ***Connector & terminal*** ***(B44) No. 9 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Repair the open harness, short circuit and poor contact of connector between seat belt timer module and battery.
3	**CHECK HARNESS AND SEAT BELT SWITCH.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from seat belt timer module. 3)Hold the tang plate disconnected from seat belt buckle. 4)Measure the resistance between seat belt timer module harness connector and chassis ground. ***Connector & terminal*** ***(B44) No. 6 — Chassis ground:***	Is the resistance less than 1 Ω?	Go to step **4.**	Repair the short circuit of harness between seat belt timer module connector and chassis ground.
4	**CHECK SEAT BELT SWITCH AND HARNESS.** 1)Turn the ignition switch to OFF. 2)Insert the tang plate into seat belt buckle. 3)Measure the resistance between seat belt timer module connector and chassis ground. ***Connector & terminal*** ***(B44) No. 6 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Go to step **5.**
5	**CHECK HARNESS BETWEEN SEAT BELT TIMER MODULE AND SEAT BELT SWITCH.** Measure the resistance of harness between seat belt timer module connector and seat belt switch. ***Connector & terminal*** ***(B44) No. 6 — (R8) No. 1:***	Is the resistance less than 1 Ω?	Go to step **6.**	Repair the open circuit of harness and poor contact of connector between seat belt timer module connector and seat belt switch.

	Step	Check	Yes	No
6	**CHECK HARNESS BETWEEN SEAT BELT SWITCH AND CHASSIS GROUND.** Measure the resistance of harness between seat belt switch and chassis ground. ***Connector & terminal*** ***(R8) No. 2 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **7.**	Repair the open circuit of harness between seat belt switch and chassis ground.
7	**CHECK SEAT BELT SWITCH.** 1)Hold the tang plate disconnected from seat belt buckle. 2)Measure the resistance between seat belt switch terminals. ***Terminals*** ***No. 4 — No. 2:***	Is the resistance less than 1 Ω?	Go to step **8.**	Replace the inner belt assembly.
8	**CHECK SEAT BELT SWITCH.** 1)Insert the tang plate into seat belt buckle. 2)Measure the resistance between seat belt switch terminals. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance more than 1 Ω?	Go to step **9.**	Replace the inner belt assembly.
9	**CHECK OPERATION OF SPEEDOMETER IN COMBINATION METER.** Check the speedometer indicates vehicle speed correctly.	Does the speedometer operate correctly?	Go to step **10.**	Check the speedometer circuit.
10	**CHECK VEHICLE MODEL.** Check the model of vehicle.	Is the vehicle MT model?	Go to step **11.**	Go to step **13.**
11	**CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND SEAT BELT TIMER MODULE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector of vehicle speed sensor. 3)Measure the resistance between vehicle speed sensor harness connector and seat belt timer module connector. ***Connector & terminal*** ***(B17) No. 1 — (B44) No. 7:***	Is the resistance less than 10 Ω?	Go to step **12.**	Repair the open harness between vehicle speed sensor and seat belt timer module.
12	**CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND SEAT BELT TIMER MODULE.** Measure the resistance between seat belt timer module harness connector and chassis ground. ***Connector & terminal*** ***(B44) No. 7 — Chassis ground:***	Is the resistance more than 1 MΩ?	Go to step **15.**	Repair the short of harness.
13	**CHECK HARNESS BETWEEN TCU AND SEAT BELT TIMER MODULE.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector of TCU. 3)Measure the resistance of harness between TCU harness connector and seat belt timer module harness connector ***Connector & terminal*** ***(B56) No. 17 — (B44) No. 7:***	Is the resistance less than 10 Ω?	Go to step **14.**	Repair the open harness between TCU and seat belt timer module.

	Step	Check	Yes	No
14	**CHECK HARNESS BETWEEN TCU AND SEAT BELT TIMER MODULE.** Measure the resistance between seat belt timer module harness connector and chassis ground. ***Connector & terminal*** ***(B44) No. 7 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **15.**	Repair the short of harness.
15	**CHECK SEAT BELT TIMER MODULE OUTPUT SIGNAL.** 1)Turn the ignition switch to ON. 2)Measure the voltage between seat belt timer module harness connector and chassis ground. ***Connector & terminal*** ***(B44) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **16.**	Check the wiring harness and combination meter, and then repair or replace them.
16	**CHECK POOR CONTACT.** Check the poor contact of seat belt warning light circuit.	Is there any poor contact occurs?	Repair the poor contact.	Go to step **17.**
17	**CHECK SEAT BELT TIMER MODULE.** 1)Connect all connectors. 2)Lift-up the vehicle and place rigid racks. NOTE: Raise all wheels off floor. 3)Hold the tang plate disconnected from seat belt buckle. 4)Start the engine, and set the vehicle speed less than 19 km/h (12 MPH) NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When diagnosis is finished, perform the ABS memory clearance procedure of OBD system. <Ref. to ABS-22, Clear Memory Mode.> Check seat belt warning light comes on.	Does the seat belt warning light come on?	Go to step **18.**	Replace the seat belt timer module.
18	**CHECK SEAT BELT TIMER MODULE.** 1)Connect all connectors. 2)Lift-up the vehicle and place rigid racks. NOTE: Raise all wheels off floor. 3)Hold the tang plate disconnected from seat belt buckle. 4)Start the engine, and set the vehicle speed more than 25 km/h (16 MPH). NOTE: The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When diagnosis is finished, perform the ABS memory clearance procedure of OBD system. <Ref. to ABS-22, Clear Memory Mode.> Check seat belt warning light comes on and buzzer beeps.	Does the seat belt warning light come on and buzzer beep?	Temporary poor contact of connector or harness may be the cause. Check the poor contact.	Replace the seat belt timer module.

4. Inspection Locations After a Collision

A: INSPECTION

Check for the following, and then replace with new parts if necessary.

- Center pillar lower garnish is discolored or cracked.
- Wire harness and/or connector is damaged.

5. Front Seat Belt

A: REMOVAL

1. FRONT OUTER BELT

1) Turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
2) Fold backrest all the way forward, and then move front seat all the way forward.
3) Remove the center pillar lower trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
4) Remove the anchor cover. Loosen the shoulder anchor bolt, and then detach the shoulder anchor from center pillar.

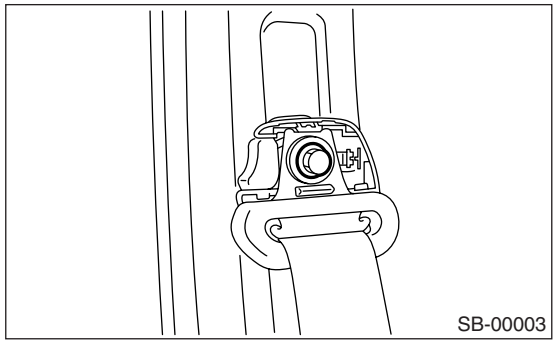
SB-00003

5) Turn over the floor mat to disconnect the connector (A) of pretensioner, and then loosen the three bolts to remove the front outer belt.

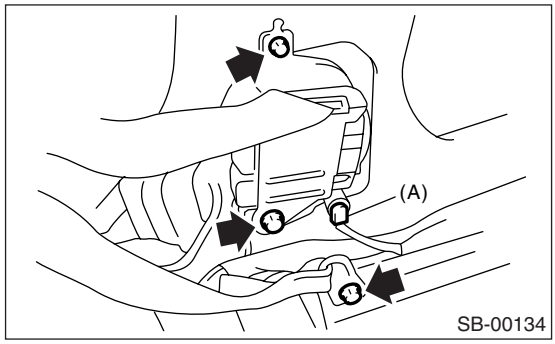

SB-00134

6) Remove the center pillar upper trim. <Ref. to EI-46, REMOVAL, Upper Inner Trim.>
7) Remove the two bolts and adjustable anchor assembly.

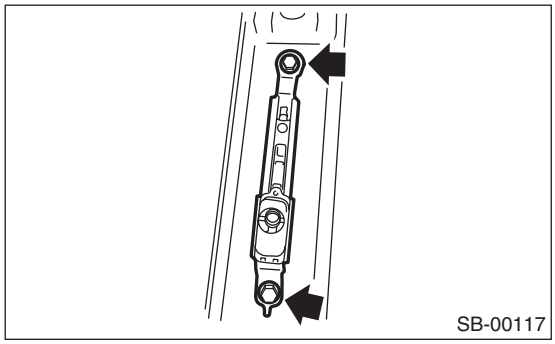
SB-00117

CAUTION:
• Do not drop or apply any impact to the pretensioner.
• Pretensioner and bracket should be treated as an assembly. Do not attempt to disassemble it.

2. FRONT INNER BELT

1) Turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
2) Remove the console box. <Ref. to EI-42, REMOVAL, Console Box.>
3) Disconnect the seat belt warning light connector under the seat.
4) Remove the clip of harness from seat rail.
5) Remove the anchor bolt, and then remove the inner belt.

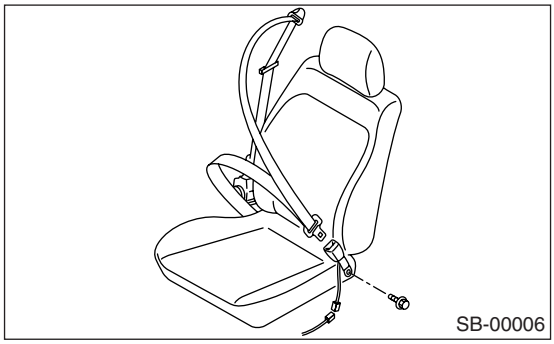
SB-00006

B: INSTALLATION

1. FRONT OUTER BELT

Install in the reverse order of removal.

CAUTION:
• Parts on right and left are not identical. Before installation, make sure the correct part is used.
• Be careful not to twist the seat belts during installation.

Tightening torque:
<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>

2. FRONT INNER BELT

Install in the reverse order of removal.

Tightening torque:
<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>

C: INSPECTION

1. FRONT OUTER BELT

Check for the following, and replace with new parts if necessary.
• Pretensioner is cracked or deformed.
• Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

2. FRONT INNER BELT

Check for the following, and replace with new parts if necessary.
• Inner belt is deformed or damaged.
• Seat belt buckle is engaged improperly.

6. Rear Seat Belt

A: REMOVAL

1. OUTER BELT RH AND LH (SEDAN MODEL)

1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the side sill rear lower cover. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
3) Remove the seat belt lower anchor bolt.

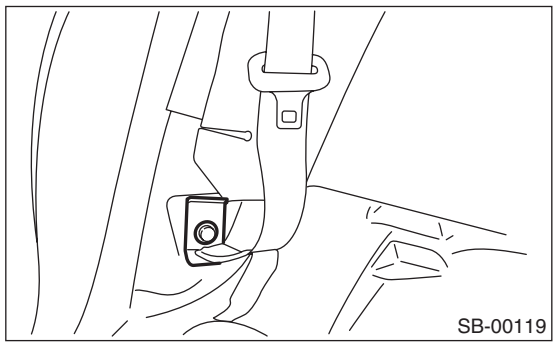
SB-00119

4) Remove the quarter pillar trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
5) Remove the bolts, and then detach the seat belt.

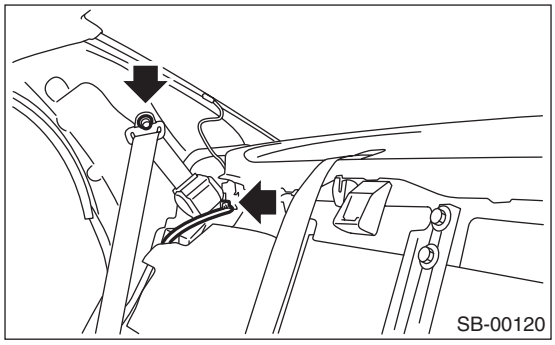
SB-00120

2. SHOULDER BELT CTR (SEDAN MODEL)

1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the seat belt lower anchor bolt.

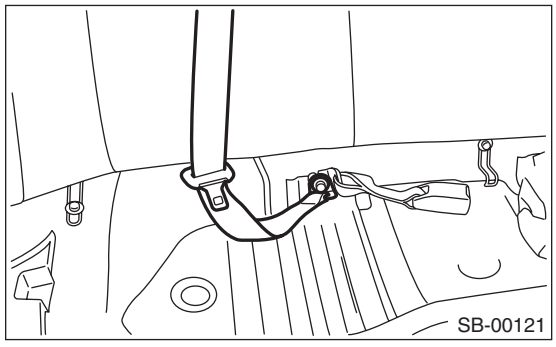
SB-00121

3) Remove the quarter pillar trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
4) Remove the rear shelf trim. <Ref. to EI-53, REMOVAL, Rear Shelf Trim.>
5) Remove the bolts, and then detach the seat belt.

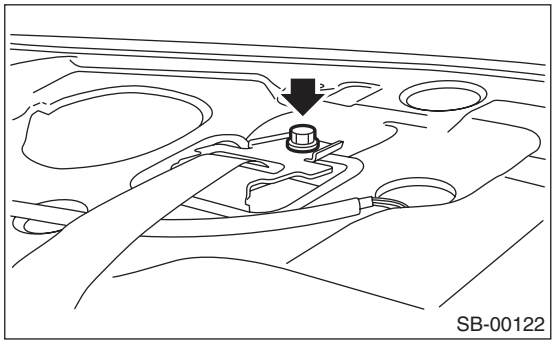
SB-00122

3. CENTER BELT (SEDAN MODEL)

1) Remove the rear cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the bolts, and then detach the inner belt.

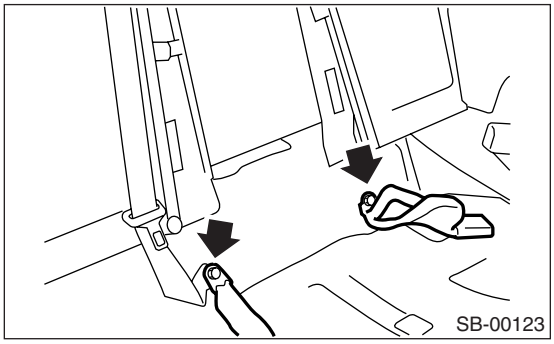
SB-00123

4. OUTER BELT RH AND LH (WAGON MODEL)

1) Remove the luggage floor mat. <Ref. to EI-56, REMOVAL, Luggage Floor Mat.>
2) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
3) Remove the side sill rear lower cover. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
4) Remove the seat belt lower anchor bolt.

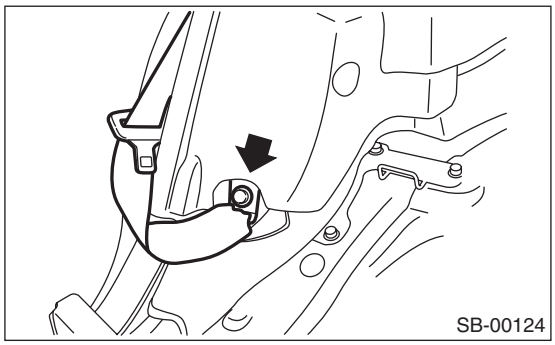
SB-00124

5) Remove the rear quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>

6) Remove the bolts, and then detach the outer belt side.

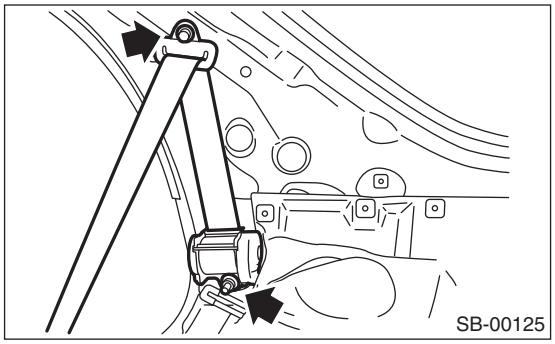

5. SHOULDER BELT CTR (WAGON MODEL)

1) Remove the shoulder anchor bolt, and then detach the shoulder anchor from quarter pillar.

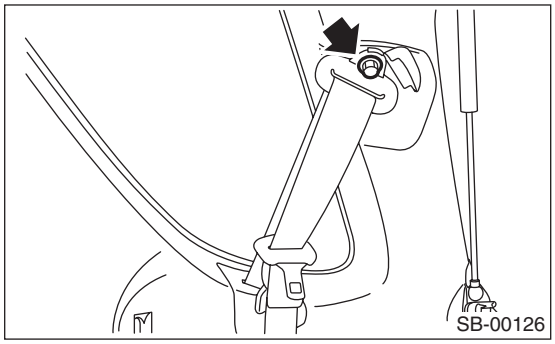

2) Remove the quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
3) Remove the three bolts, and then detach the outer belt center.

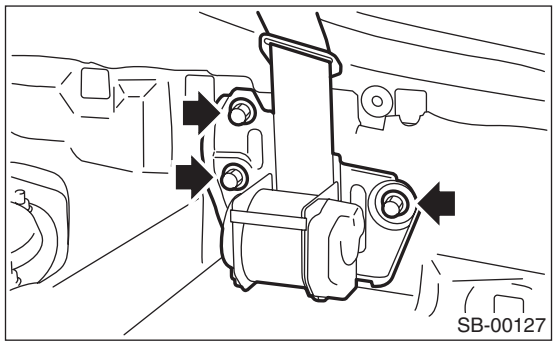

6. CENTER BELT (WAGON MODEL)

1) Remove the rear cushion.
2) Remove the bolt, and then detach the inner belt.

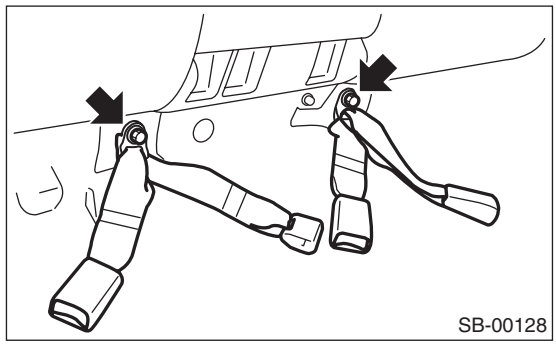

B: INSTALLATION

1. OUTER BELT RH AND LH (SEDAN MODEL)

Install in the reverse order of removal.

CAUTION:
• During installation, make sure that the seat belts are not twisted.
• After installation, make sure that the seat belts can be smoothly extended and wound.

2. SHOULDER BELT CTR (SEDAN MODEL)

Install in the reverse order of removal.

CAUTION:
• During installation, make sure that the seat belts are not twisted.
• After installation, make sure that the seat belts can be smoothly extended and wound.

3. CENTER BELT (SEDAN MODEL)

Install in the reverse order of removal.

CAUTION:
During installation, make sure that the seat belts are not twisted.

4. OUTER BELT RH AND LH (WAGON MODEL)

Install in the reverse order of removal.

CAUTION:
• During installation, make sure that the seat belts are not twisted.
• After installation, make sure that the seat belts can be smoothly extended and wound.

5. SHOULDER BELT CTR (WAGON MODEL)

Install in the reverse order of removal.

CAUTION:
• During installation, make sure that the seat belts are not twisted.
• After installation, make sure that the seat belts are smoothly extended and wound.

6. CENTER BELT (WAGON MODEL)

Install in the reverse order of removal.

CAUTION:
During installation, make sure that the seat belts are not twisted.

C: INSPECTION

1. OUTER BELT RH AND LH (SEDAN MODEL)

Check for the following, and replace with new parts if necessary.
• Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

2. SHOULDER BELT CTR (SEDAN MODEL)

Check for the following, and replace with new parts if necessary.
• Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

3. CENTER BELT (SEDAN MODEL)

Check for the following, and replace with new parts if necessary.
• Inner belt is deformed or damaged.
• Seat belt buckle is engaged improperly.

4. OUTER BELT RH AND LH (WAGON MODEL)

Check for the following, and replace with new parts if necessary.
• Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

5. SHOULDER BELT CTR (WAGON MODEL)

Check for the following, and replace with new parts if necessary.
• Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

6. CENTER BELT (WAGON MODEL)

Check for the following, and replace with new parts if necessary.
• Inner belt is deformed or damaged.
• Seat belt buckle is engaged improperly.

7. Disposal of Pretensioner

A: CAUTION

• Do not discard undeployed pretensioners, because they may cause serious personal injury when accidentally deployed.
• Deployment of the pretensioners should be done on a flat place free from any possible danger. Avoid deploying outdoors during heavy rainy or strong windy weather.
• Do not drop or damage the pretensioner.
• Because deploying the pretensioners causes a high-explosive noise, be sure to warn people in the area, and do not allow anyone within a 5 m (16 ft) radius of the disposal site.
• Some smoke will be emitted after deployment of the pretensioners. Therefore, it must be deployed in a well-ventilated area with no smoke alarms nearby.
• Wear gloves, goggles, and earplugs during this operation. Wash your hands afterwards.
• After deployment, the pretensioner is especially hot. Leave it unattended for 40 minutes or longer, and then discard it.
• Do not let water get on the deployed pretensioner.
• Wrap the deployed pretensioner in an airtight vinyl bag, and then discard it.
• If circumstances do not permit pretensioner deployment, contact a SUBARU dealer.

B: OPERATION

1. DEPLOYING OF PRETENSIONER WHILE INSTALLED IN VEHICLE

1) Fold backrest all the way forward, and then move front seat all the way forward.
2) Turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
3) Remove the center pillar lower trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
4) Disconnect the connector (A) of pretensioner.

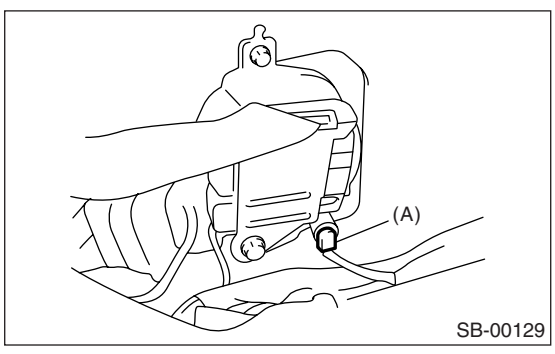

5) Short the terminal to alligator clip furnished as deployment tool (A).
6) Connect the deployment tool and adapter D (deployment) (B).

CAUTION:
Deployment tool terminals should be kept shorted until just before deployment of the pretensioner.

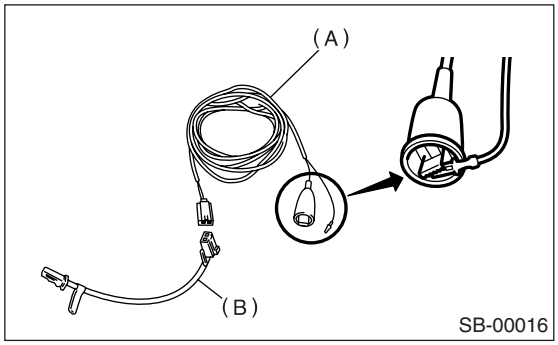

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter D (deployment): (Part No. 98299SA010)

7) Connect the adapter D (deployment) connector and pretensioner connector.
8) Extend the deployment tool to the limit, and make sure the vehicle is empty. Close all windows, sunroof, and rear gate completely.

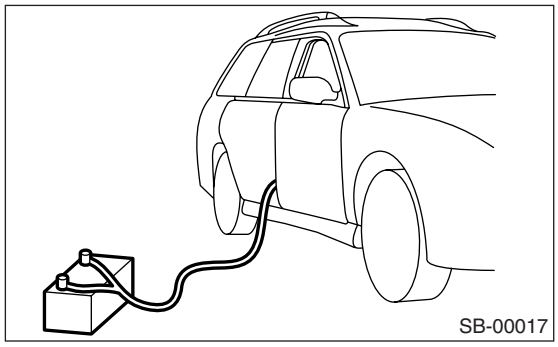

9) Move the battery at least 5 m (16 ft) from the vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (−) terminal.
10) Connect the other cable of deployment tool to the battery positive (+) terminal. Then deploy the pretensioner.

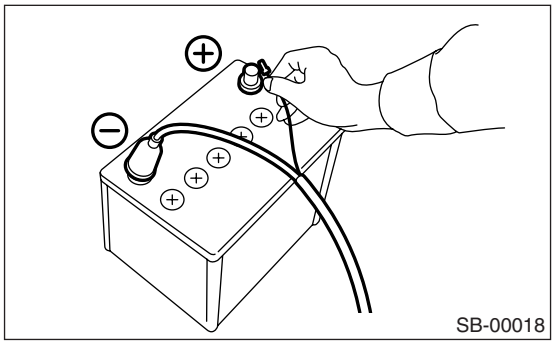

CAUTION:
• After deployment, pretensioner is especially hot. Leave it unattended for 40 minutes or longer.
• Do not let water get on the deployed pretensioner.

11) Remove the front outer belt. <Ref. to SB-12, REMOVAL, Front Seat Belt.>
12) Cut off the seat belt as close to retractor as possible.

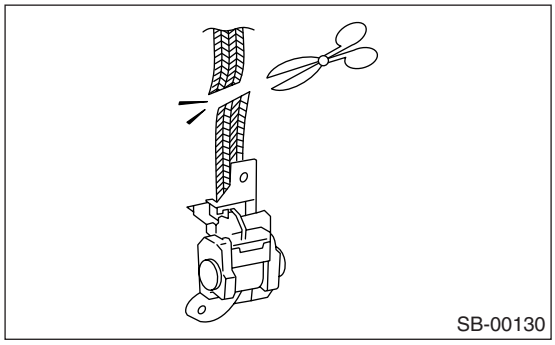
SB-00130

13) Wrap the deployed pretensioner in an airtight vinyl bag, and discard it.

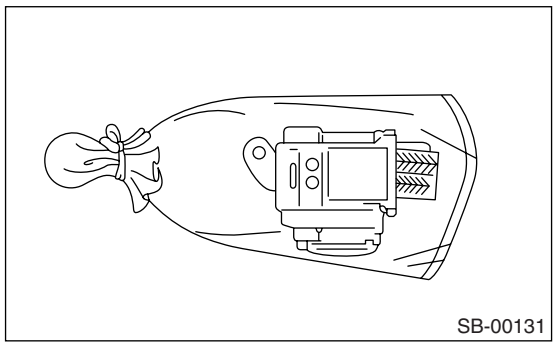
SB-00131

2. DEPLOYING OF PRETENSIONER AFTER REMOVAL FROM VEHICLE

1) Fold the backrest all the way forward, and then move the front seat all the way forward.
2) Turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
3) Remove the front outer belt. <Ref. to SB-12, REMOVAL.>
4) Cut off the seat belt as close to retractor as possible.

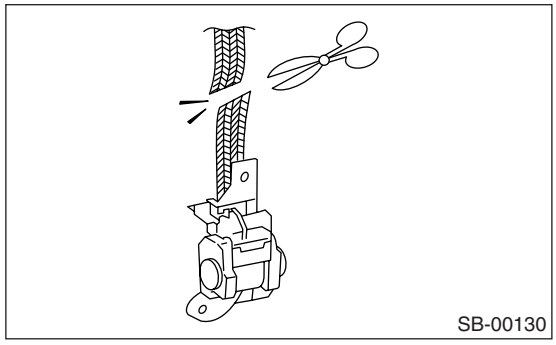
SB-00130

5) Short the terminal to alligator clip furnished as a deployment tool.
6) Connect the deployment tool (A) and adapter D (deployment) (B).

CAUTION:
Deployment tool terminals should be kept shorted until just before deployment of the pretensioner.

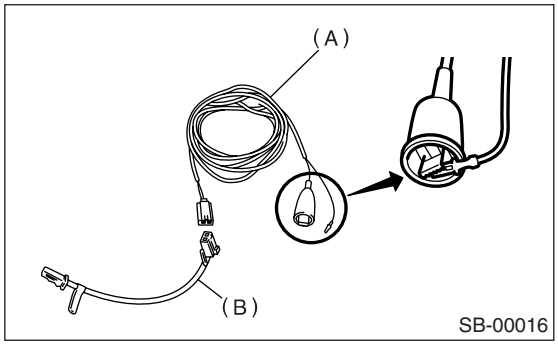

SB-00016

(A) Deployment tool: (Part No. 98299PA030)
(B) Adapter D (deployment): (Part No. 98299SA010)

7) Connect the adapter D (deployment) connector and pretensioner connector.

8) Install the pretensioner on a wheel with tire. Then, bundle three wire automotive harness [each with a sectional area of 1.25 mm^2 (0.00194 sq in) or more], and bind them twofold around the pretensioner bracket and wheel.

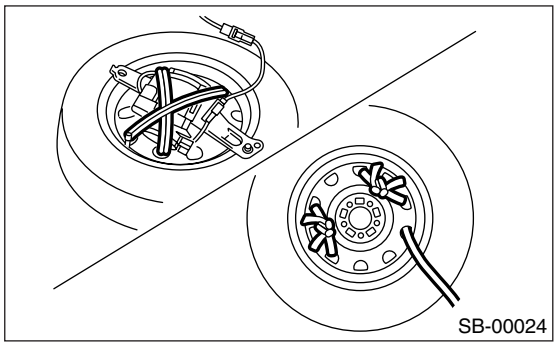

9) Put three tires without a wheel on the tire installed with pretensioner. Put on an additional tire with a wheel on top, and then fasten them tight with a rope.

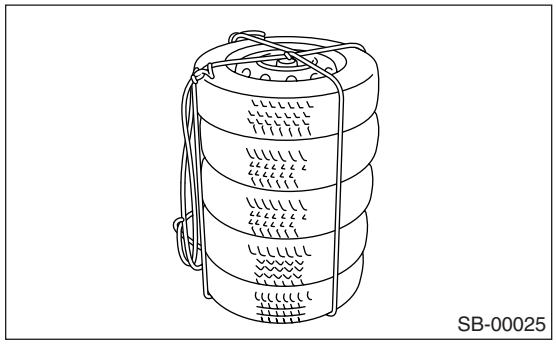

10) Move the battery at least 5 m (16 ft) from the vehicle, and secure the nearby area. Connect the deployment tool alligator clip to the battery negative (−) terminal.

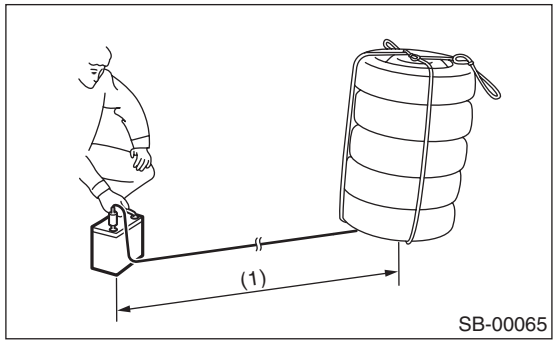

(1) 5 m (16 ft) or more

11) Connect the other cable of deployment tool to the battery positive (+) terminal. Then deploy the pretensioner.

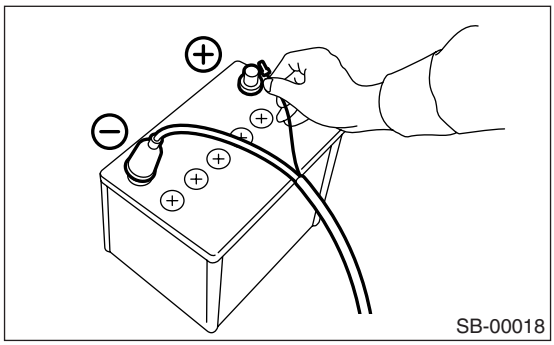

CAUTION:
• After deployment, pretensioner is especially hot. Leave it unattended for 40 minutes or longer.
• Do not let water get on the deployed pretensioner.

12) Wrap the deployed pretensioner in an airtight vinyl bag, and discard it.

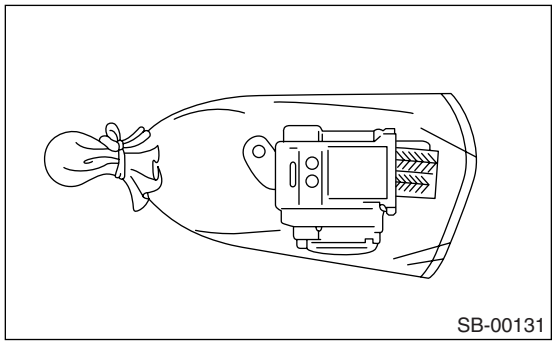

DISPOSAL OF PRETENSIONER

LIGHTING SYSTEM

LI

		Page
1.	General Description	2
2.	Headlight and Tail Light System	3
3.	Front Fog Light System	4
4.	Rear Fog Light System	5
5.	Turn Signal and Hazard Light System	6
6.	Back-up Light System	7
7.	Stop Light System	8
8.	Interior Light System	9
9.	Headlight Beam Leveler System	10
10.	Combination Switch (Light)	11
11.	Combination Base Switch Assembly	13
12.	Headlight Assembly	14
13.	Headlight Bulb	16
14.	Front Turn Signal Light Bulb	17
15.	Clearance/Parking Light Bulb	18
16.	Front Fog Light Assembly	19
17.	Front Fog Light Bulb	20
18.	Rear Combination Light Assembly	21
19.	Brake/Tail Light Bulb	22
20.	Back-up Light Bulb	23
21.	Rear Turn Signal Light Bulb	24
22.	Rear Fog Light Bulb	25
23.	License Plate Light	26
24.	High-mounted Stop Light	27
25.	Side Turn Signal Light	28
26.	Spot Map Light	29
27.	Room Light	30
28.	Luggage Room Light	31
29.	Trunk Room Light	32
30.	Glove Box Light	33

1. General Description

A: SPECIFICATIONS

Headlight			12 V — 55 W/60 W (Halogen)
Front turn signal light			12 V — 21 W
Side turn signal light			12 V — 5 W
Clearance/Parking light			12 V — 5 W
Front fog light			12 V — 55 W
Rear fog light			12 V — 21 W
Rear combination light	Sedan	Tail light	12 V — 5/21 W
		Stop light	12 V — 21 W
	Wagon	Tail/Stop light	12 V — 5/21 W
	Turn signal light		12 V — 21 W
	Back-up light		12 V — 21 W
License plate light			12 V — 5 W
High-mounted stop light	Sedan	Standard type	12 V — 21 W
		Rear spoiler built-in type	12 V — 1.2 W (LED)
	Wagon		12 V — 10 W
Room light			12 V — 8 W
Spot light			12 V — 8 W
Luggage room light			12 V — 13 W
Trunk room light			12 V — 5 W
Glove box light			12 V — 1.4 W

B: PRECAUTIONS

- Before disassembling or reassembling parts, always disconnect the battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
- Reassemble in reverse order of disassembly, unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors and hoses securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

WARNING:

• Airbag system wiring harness is routed near electrical parts and switches. All airbag system wiring harnesses and connectors are yellow. Do not use electric test equipment on these circuits.

• Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.

C: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.

2. Headlight and Tail Light System

A: SCHEMATIC

1. HEADLIGHT LHD MODEL

<Ref. to WI-211, LHD MODEL, SCHEMATIC, Headlight System.>

2. HEADLIGHT RHD MODEL

<Ref. to WI-212, RHD MODEL, SCHEMATIC, Headlight System.>

3. CLEARANCE LIGHT AND ILLUMINATION LIGHT LHD MODEL

<Ref. to WI-196, LHD MODEL, SCHEMATIC, Clearance Light and Illumination Light System.>

4. CLEARANCE LIGHT AND ILLUMINATION LIGHT RHD WITHOUT ILLUMINATION CONTROL MODEL

<Ref. to WI-199, RHD WITHOUT ILLUMINATION CONTROL MODEL, SCHEMATIC, Clearance Light and Illumination Light System.>

5. CLEARANCE LIGHT AND ILLUMINATION LIGHT RHD WITH ILLUMINATION CONTROL MODEL

<Ref. to WI-202, RHD WITH ILLUMINATION CONTROL EXCEPT FOR AUSTRALIA STi MODEL, SCHEMATIC, Clearance Light and Illumination Light System.>

6. CLEARANCE LIGHT AND ILLUMINATION LIGHT STi MODEL FOR AUSTRALIA

<Ref. to WI-205, RHD FOR AUSTRALIA STi MODEL, SCHEMATIC, Clearance Light and Illumination Light System.>

B: INSPECTION

1. HEADLIGHT RELAY

Measure the headlight relay resistance between terminals when connecting terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal.

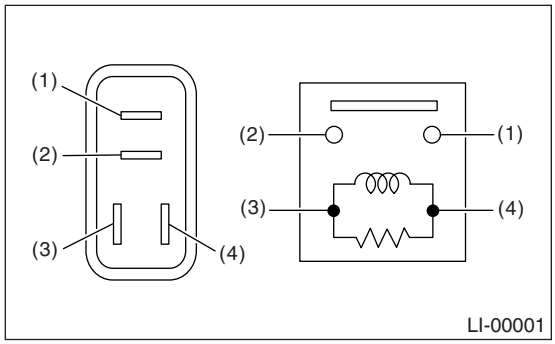

Current	Terminal No.	Standard
Flow	1 and 2	Less than 1 Ω
No flow		More than 1 MΩ

2. TAIL AND ILLUMINATION RELAY

Measure the tail and illumination relay resistance between terminals when connecting terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal.

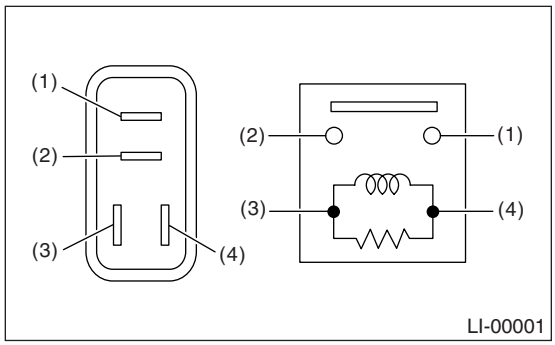

Current	Terminal No.	Standard
Flow	1 and 2	Less than 1 Ω
No flow		More than 1 MΩ

3. Front Fog Light System

A: SCHEMATIC

1. FRONT FOG LIGHT LHD MODEL

<Ref. to WI-208, LHD MODEL, SCHEMATIC, Front Fog Light System.>

2. FRONT FOG LIGHT RHD FOR EUROPE MODEL

<Ref. to WI-209, RHD FOR EUROPE MODEL, SCHEMATIC, Front Fog Light System.>

3. FRONT FOG LIGHT RHD EXCEPT FOR EUROPE MODEL

<Ref. to WI-210, RHD EXCEPT FOR EUROPE MODEL, SCHEMATIC, Front Fog Light System.>

B: INSPECTION

1. FRONT FOG LIGHT SWITCH

Measure the front fog light switch resistance.

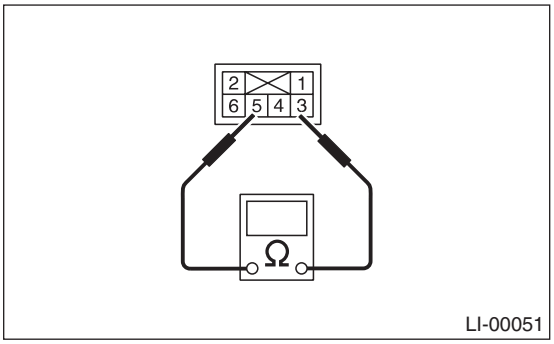

Switch position	Terminal No.	Standard
OFF	3 and 5	More than 1 MΩ
ON		Less than 1 Ω

2. FRONT FOG LIGHT RELAY

Measure the front fog light relay resistance between terminals when connecting terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal.

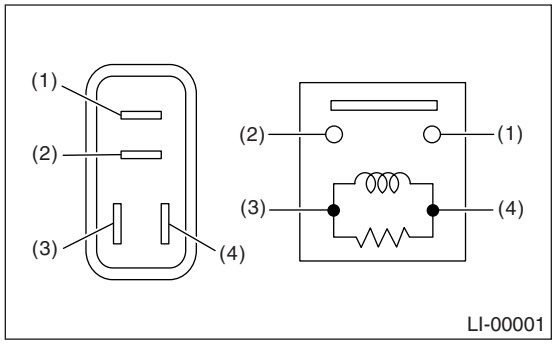

Current	Terminal No.	Standard
Flow	1 and 2	Less than 1 Ω
No flow		More than 1 MΩ

4. Rear Fog Light System

A: SCHEMATIC

1. REAR FOG LIGHT LHD MODEL

<Ref. to WI-238, LHD MODEL, SCHEMATIC, Rear Fog Light System.>

2. REAR FOG LIGHT RHD FOR EUROPE MODEL

<Ref. to WI-239, RHD FOR EUROPE MODEL, SCHEMATIC, Rear Fog Light System.>

3. REAR FOG LIGHT RHD EXCEPT FOR EUROPE MODEL

<Ref. to WI-240, RHD EXCEPT FOR EUROPE MODEL, SCHEMATIC, Rear Fog Light System.>

B: INSPECTION

1. REAR FOG LIGHT SWITCH

1) Turn the ignition switch to ON.
2) Turn on the headlight or front fog light.
3) Push the rear fog light switch and check if the rear fog light turns on.

2. REAR FOG LIGHT RELAY

Measure the rear fog light relay resistance between terminals when connecting terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal.

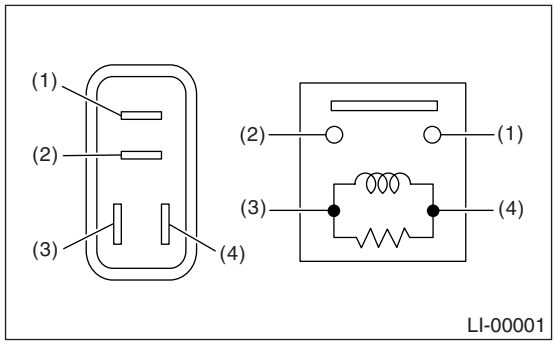

Current	Terminal No.	Standard
Flow	1 and 2	Less than 1 Ω
No flow		More than 1 MΩ

5. Turn Signal and Hazard Light System

A: SCHEMATIC

1. TURN SIGNAL LIGHT AND HAZARD LIGHT LHD MODEL

<Ref. to WI-218, LHD MODEL, SCHEMATIC, Turn Signal Light and Hazard Light System.>

2. TURN SIGNAL LIGHT AND HAZARD LIGHT RHD MODEL

<Ref. to WI-220, RHD MODEL, SCHEMATIC, Turn Signal Light and Hazard Light System.>

B: INSPECTION

1. TURN SIGNAL SWITCH

<Ref. to LI-11, INSPECTION, Combination Switch (Light).>

2. HAZARD SWITCH

Measure the hazard switch resistance.

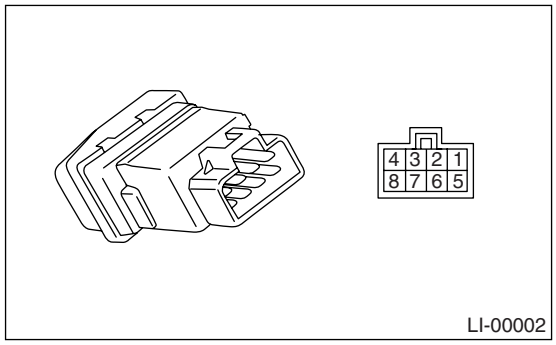

Switch position	Terminal No.	Standard
OFF	6 and 7	Less than 1 Ω
ON	1, 3 and 4	Less than 1 Ω
	7 and 8	Less than 1 Ω

3. TURN SIGNAL AND HAZARD MODULE

Connect the battery and turn signal light bulb to the module, as shown in the figure. The module is properly functioning if it blinks when power is supplied to the circuit.

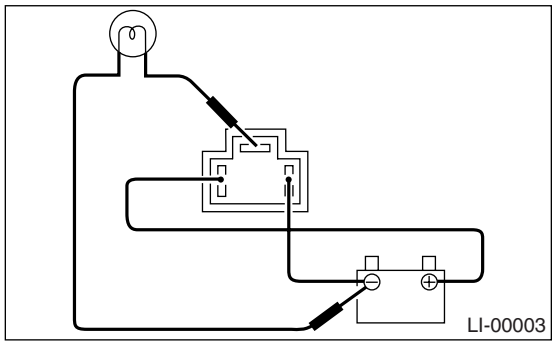

6. Back-up Light System

A: SCHEMATIC

1. BACK-UP LIGHT

<Ref. to WI-195, SCHEMATIC, Back-up Light System.>

B: INSPECTION

1. BACK-UP LIGHT SWITCH (M/T)

Measure the back-up light switch resistance.

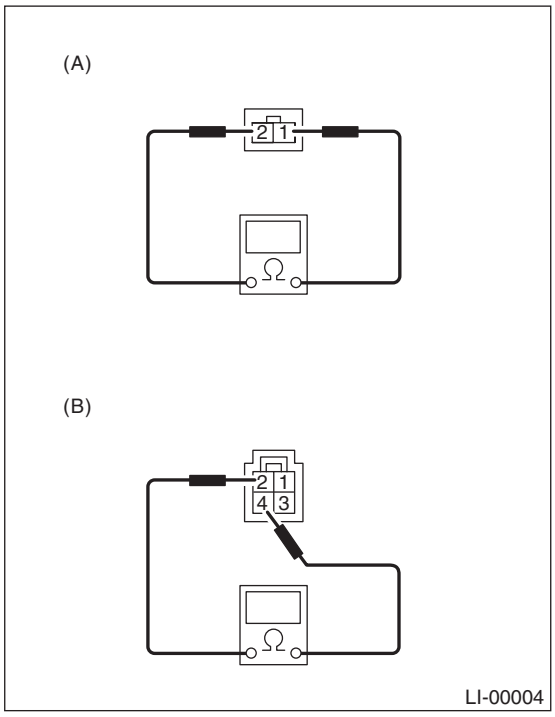

(A) Non-turbo model
(B) Turbo model

Switch position	Terminal No.	Standard
When shift lever is set in reverse position	Turbo model: 2 and 4 Non-turbo model: 1 and 2	Less than 1 Ω
Other positions		More than 1 MΩ

2. INHIBITOR SWITCH (A/T)

Measure the inhibitor switch resistance.

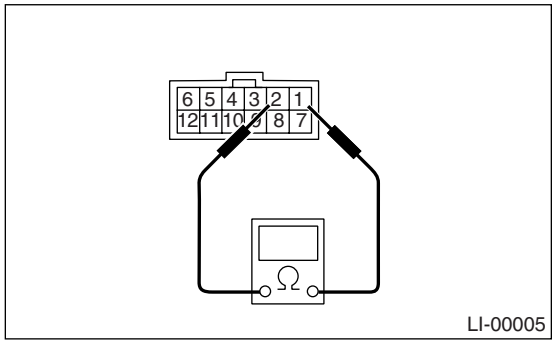

Switch position	Terminal No.	Standard
When select lever is set in “R” range	1 and 2	Less than 1 Ω
Other positions		More than 1 MΩ

7. Stop Light System

A: SCHEMATIC

1. STOP LIGHT

<Ref. to WI-217, SCHEMATIC, Stop Light System.>

B: INSPECTION

1. STOP LIGHT SWITCH

Measure the stop light switch resistance.

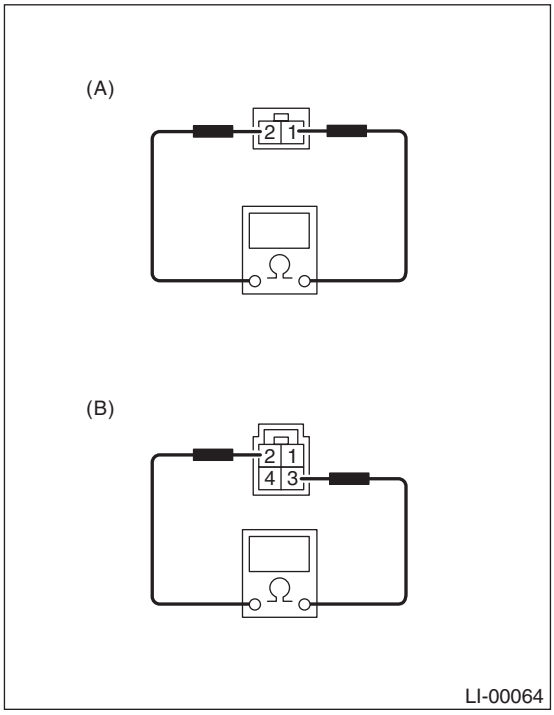

(A) Without cruise control
(B) With cruise control

Switch position	Terminal No.	Standard
When brake pedal is depressed	1 and 2: Without cruise control 2 and 3: With cruise control	Less than 1 Ω
When brake pedal is released		More than 1 MΩ

8. Interior Light System

A: SCHEMATIC

1. INTERIOR LIGHT LHD MODEL

<Ref. to WI-213, LHD MODEL, SCHEMATIC, In Compartment Light System.>

2. INTERIOR LIGHT RHD MODEL

<Ref. to WI-215, RHD MODEL, SCHEMATIC, In Compartment Light System.>

B: INSPECTION

1. DOOR SWITCH

Measure the door switch resistance.

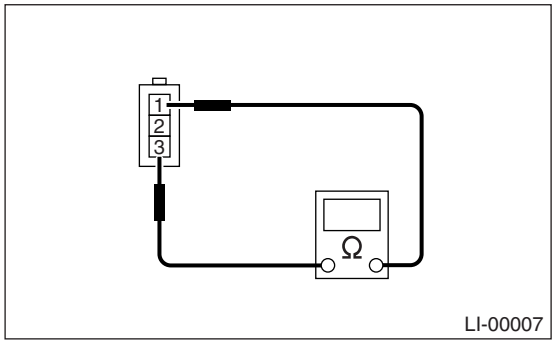

Switch position	Terminal No.	Standard
When door is opened	1 and 3	Less than 1 Ω
When door is closed		More than 1 MΩ

2. REAR GATE LATCH SWITCH

Measure the rear gate latch switch resistance.

Switch position	Terminal No.	Standard
When rear gate is opened	1 and 2	Less than 1 Ω
When rear gate is closed		More than 1 MΩ

3. TRUNK ROOM LIGHT SWITCH

Measure the trunk room light switch resistance.

Switch position	Terminal No.	Standard
When trunk lid is opened	1 and 2	Less than 1 Ω
When trunk lid is closed		More than 1 MΩ

9. Headlight Beam Leveler System

A: SCHEMATIC

1. HEADLIGHT BEAM LEVELER

<Ref. to WI-180, SCHEMATIC, Headlight Beam Leveler System.>

B: INSPECTION

1. HEADLIGHT BEAM LEVELER ACTUATOR

1) Turn on the headlights.
2) Confirm the headlight beam level is lowered by changing the switch position to 0 - 1 - 2 - 3.

2. HEADLIGHT BEAM LEVELER SWITCH

Connect the battery, headlight beam leveler switch connector and circuit tester as shown in the figure. Measure the voltage at each switch position.

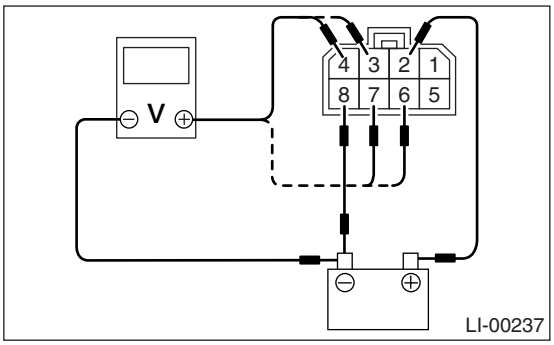

Switch position	Terminal No.	Standard
0	7 (+) and battery (–)	Battery voltage
1	6 (+) and battery (–)	Battery voltage
2	3 (+) and battery (–)	Battery voltage
3	4 (+) and battery (–)	Battery voltage

10.Combination Switch (Light)

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
3) Remove the screws which secure the upper column cover to lower column cover.

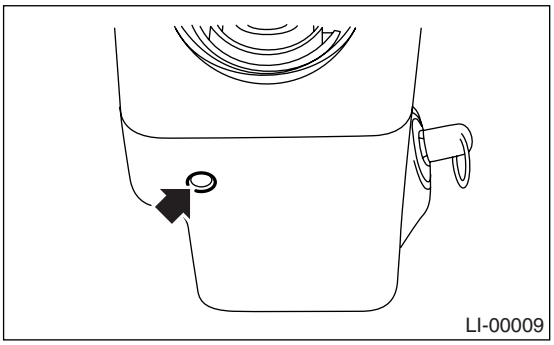

4) Disconnect the connector from combination switch.
5) Remove the screws which secure the switch, and then remove the switch.

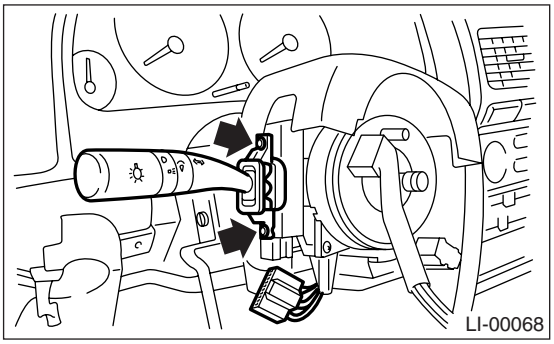

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the combination switch resistance.

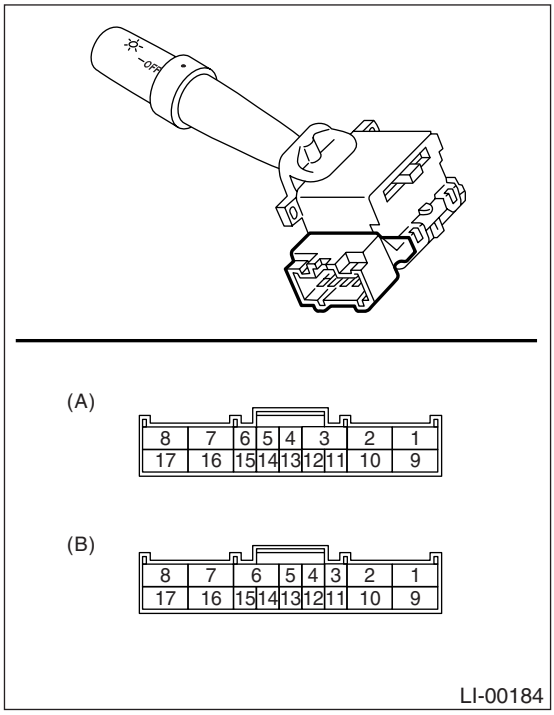

(A) LHD model/RHD model (for Europe)
(B) RHD model (Except for Europe)

1. LIGHTING SWITCH

LHD model and RHD for Europe model:

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
Tail	14 and 16	Less than 1 Ω
Head	13, 14 and 16	Less than 1 Ω

RHD except for Europe model:

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
Tail	9 and 15	Less than 1 Ω
Head	9, 14 and 15	Less than 1 Ω

2. DIMMER AND PASSING SWITCH

LHD model and RHD for Europe model:

Switch position	Terminal No.	Standard
Passing	7, 8 and 16	Less than 1 Ω
Low beam	16 and 17	Less than 1 Ω
High beam	7 and 16	Less than 1 Ω

RHD except for Europe model:

Switch position	Terminal No.	Standard
Passing	1, 2 and 9	Less than 1 Ω
Low beam	9 and 10	Less than 1 Ω
High beam	2 and 9	Less than 1 Ω

3. TURN SIGNAL SWITCH

LHD model and RHD for Europe model:

Switch position	Terminal No.	Standard
Left	1 and 2	Less than 1 Ω
Neutral	—	More than 1 MΩ
Right	2 and 3	Less than 1 Ω

RHD except for Europe model:

Switch position	Terminal No.	Standard
Left	6 and 7	Less than 1 Ω
Neutral	—	More than 1 MΩ
Right	7 and 8	Less than 1 Ω

11.Combination Base Switch Assembly

A: REMOVAL

1) Remove the driver's airbag module. <Ref. to AB-12, REMOVAL, Driver's Airbag Module.>
2) Remove the steering wheel. <Ref. to PS-23, REMOVAL, Steering Wheel.>
3) Remove the steering column cover.
4) Remove the combination switch. <Ref. to LI-11, REMOVAL, Combination Switch (Light).> <Ref. to WW-7, REMOVAL, Combination Switch (Wiper).>
5) Loosen the four screws and remove the roll connector.
6) Loosen the three screws.

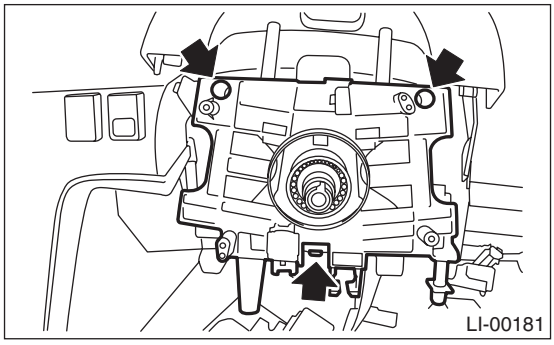

7) Disconnect the connector and remove the combination base switch assembly.

B: INSTALLATION

1) Install in the reverse order of removal.
2) Align the attaching direction of roll connector with the steering wheel, before installation of steering wheel. <Ref. to AB-18, ADJUSTMENT, Roll Connector.>

C: INSPECTION

1. COMBINATION BASE SWITCH ASSEMBLY

Perform the inspection for the following items and replace with a new one, if any damage is found.
- Crack or deformation of combination base switch assembly or roll connector

2. PARKING SWITCH

Measure the parking switch resistance.

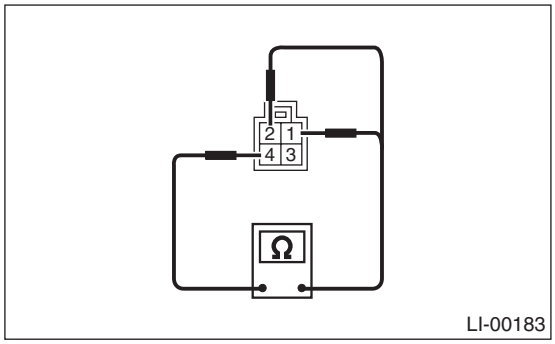

Switch position	Terminal No.	Standard
OFF	2 and 4	Less than 1 Ω
ON	1 and 4	Less than 1 Ω

12.Headlight Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the duct (A) (when right side headlight is removed).

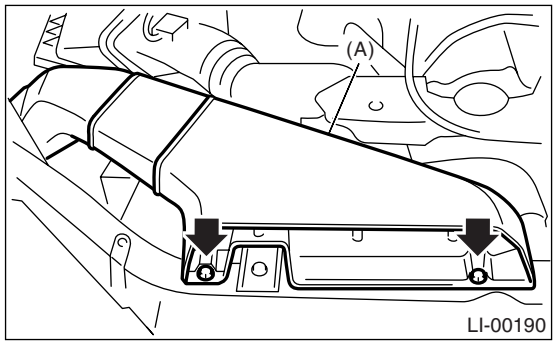

3) Remove the front grille and bumper upper clips. <Ref. to EI-18, REMOVAL, Front Grille.>
4) Disconnect each harness connector.
5) Remove the three bolts and disengage the clips, and then detach the headlight assembly.

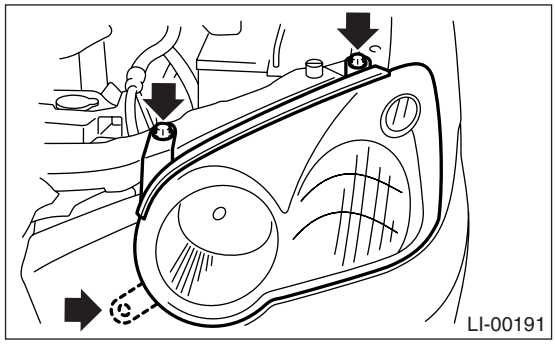

B: INSTALLATION

Install in the reverse order of removal.

C: ADJUSTMENT

1. HEADLIGHT AIMING

CAUTION:
Turn off the light before adjusting headlight aiming. If the light is necessary to check aiming, do not turn on for more than 2 minutes.

NOTE:
Before checking the headlight aiming, be sure of the following:
• The area around the headlight has not sustained any accident, damage or other type of deformation.
• Vehicle is parked on level ground.
• The inflation pressure of tires is correct.
• Vehicle's gas tank is fully charged.
• Bounce the vehicle several times to normalize the suspension.
• Make certain that someone is seated in the driver's seat.

Turn the headlights on and then adjust the low beam pattern to the following positions on the screen.

NOTE:
• Set the headlight leveler switch to "0" position.
• Adjust the vertical aim (A) first, then horizontal aim (B).

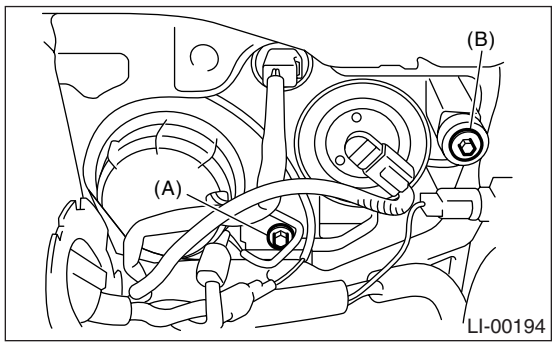

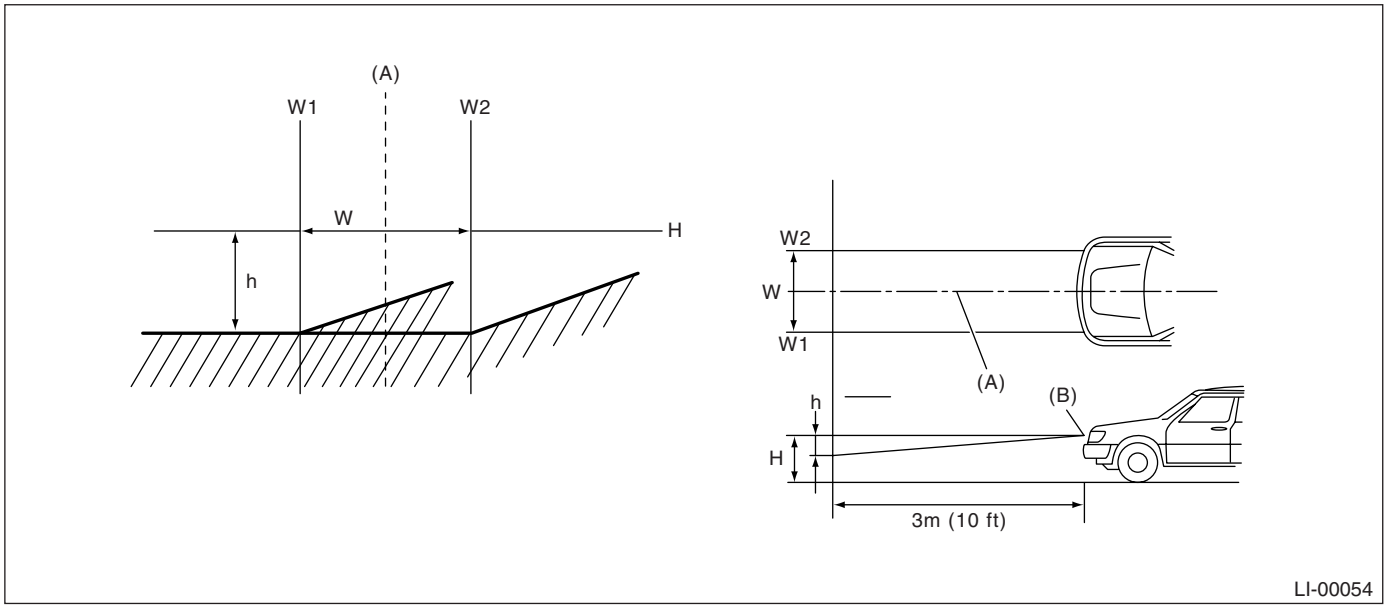

(A) Vehicle center (B) Bulb center making

This illustration is for LHD model.
The pattern for RHD model is symmetrically opposite.

W mm (in)	H mm (in)					h mm (in) at 3 m (10 ft)
	Sedan		Wagon			
	TS	GX, RS, WRX STi	TS	GX, WRX	OUTBACK	
1,279 (50.35)	644 (25.35)	639 (25.16)	644 (25.35)	639 (25.16)	649 (25.55)	30 (1.18)

13.Headlight Bulb

A: REMOVAL

CAUTION:
• Because the tungsten halogen bulb operates at a high temperature, dirt and oil on the bulb surface reduces the bulb's service life. Hold the flange portion when replacing the bulb. Never touch the glass portion.
• Do not leave the headlight without a bulb for a long time. Dust, moisture, etc. entering the headlight may affect its performance.

1) Disconnect the ground cable from battery.
2) Remove the air intake duct (A) (when right side headlight bulb is removed).

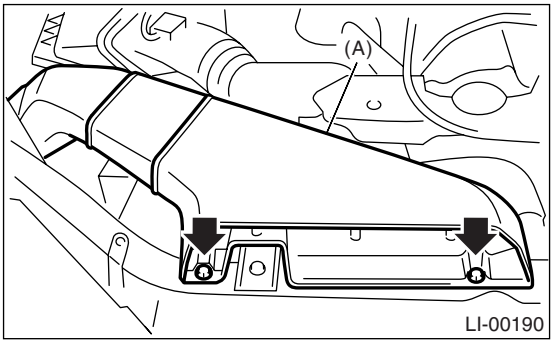

3) Disconnect the harness connector.
4) Remove the bulb ASSY (A): high beam. To remove the low beam, remove the back cover (B), and then go to Step 5.

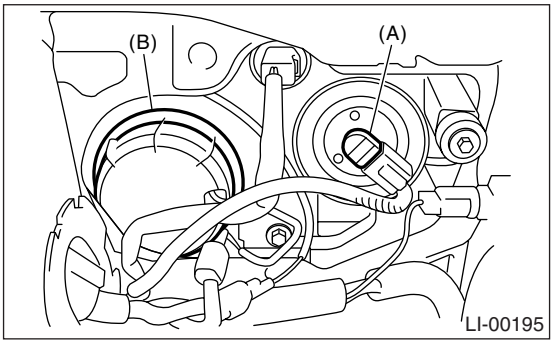

5) Remove the light bulb retaining spring (A) to remove the bulb.

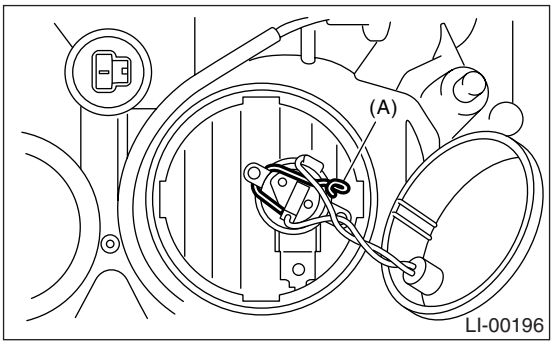

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Attach the rubber cap with letters TOP on the top so the drain hole will be on the lower side.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

14.Front Turn Signal Light Bulb

A: REMOVAL

1) Disconnect the harness connector (A), and then turn the socket (B) and remove the bulb.

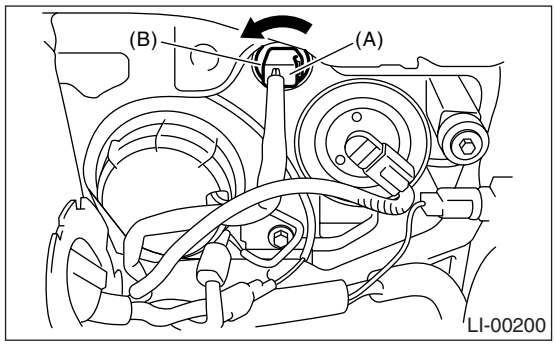

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

15.Clearance/Parking Light Bulb

A: REMOVAL

1) Remove the headlight assembly. <Ref. to LI-14, REMOVAL, Headlight Assembly.>
2) Turn the socket (A) and remove the bulb.

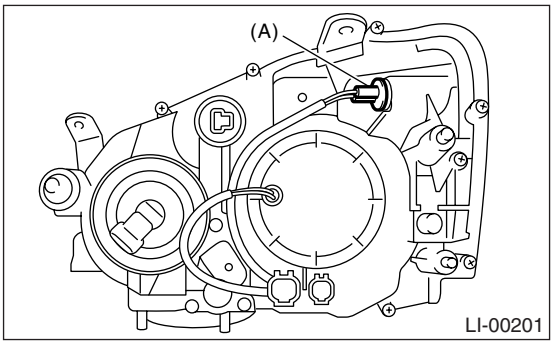

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

16.Front Fog Light Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disengage the hooks (six places), and then remove the fog light cover.

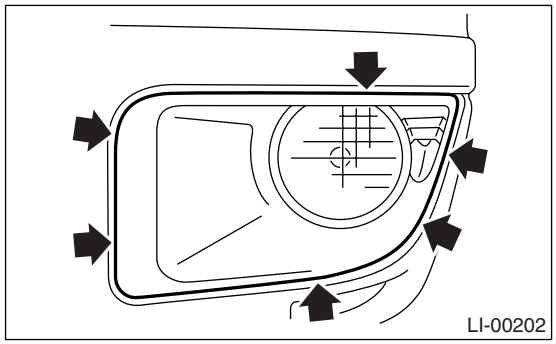

3) Remove the mounting bolts, and then detach the fog light assembly by disconnecting the harness connector.

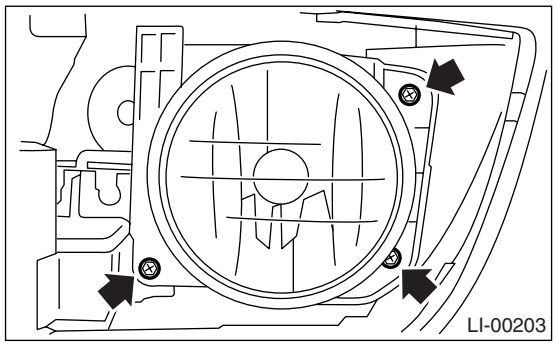

B: INSTALLATION

Install in the reverse order of removal.

17.Front Fog Light Bulb

A: REMOVAL

1) Remove the front fog light assembly. <Ref. to LI-19, REMOVAL, Front Fog Light Assembly.>
2) Remove the two screws, and then remove the back cover.

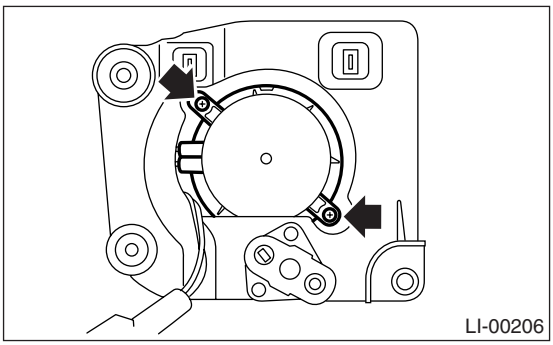

3) Remove the spring retainer, and then detach the fog light bulb.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

18.Rear Combination Light Assembly

A: REMOVAL

1. SEDAN

1) Disconnect the ground cable from battery.
2) Remove the clips, and then detach the trunk rear trim.

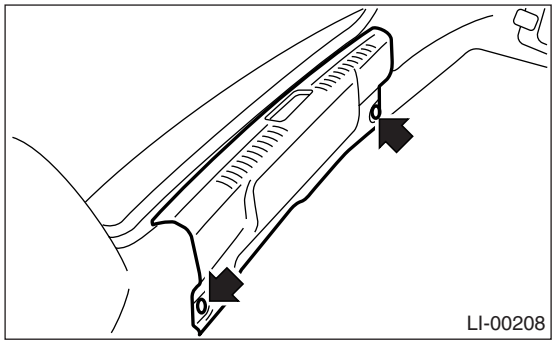

3) Remove the trunk side trim of rear portion.
4) Remove the four nuts, and then detach the rear combination light while disconnecting connector.

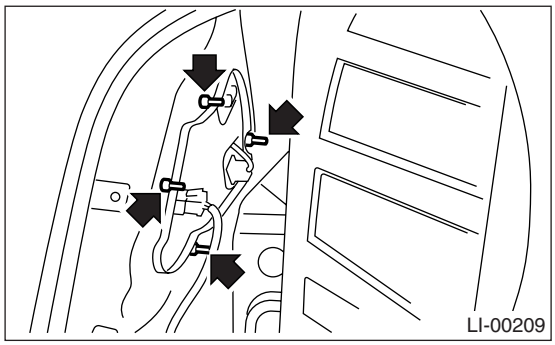

2. WAGON

1) Disconnect the ground cable from battery.
2) Remove the clips, and then detach the rear combination light covers.

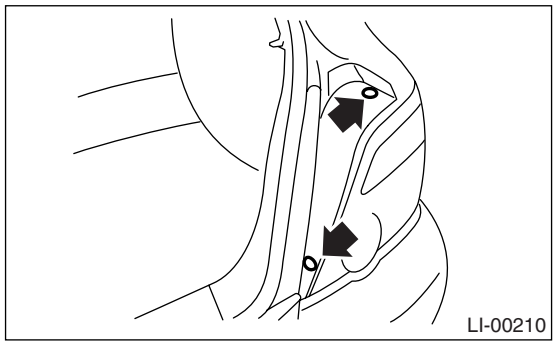

3) Remove the two bolts, and then remove the rear combination light while disconnecting connector.

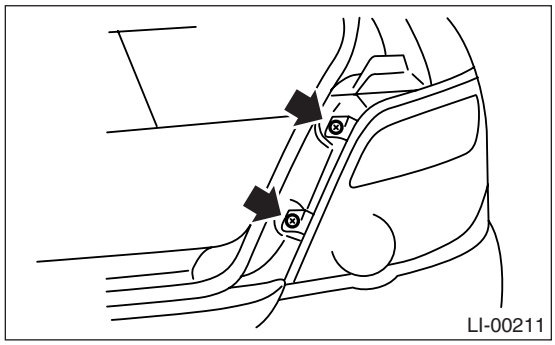

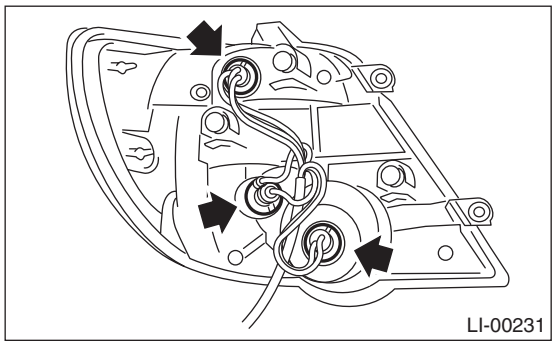

B: INSTALLATION

Install in the reverse order of removal.

19.Brake/Tail Light Bulb

A: REMOVAL

1. SEDAN

1) Remove the trunk side trim of rear portion.
2) Turn the socket and remove the bulb.

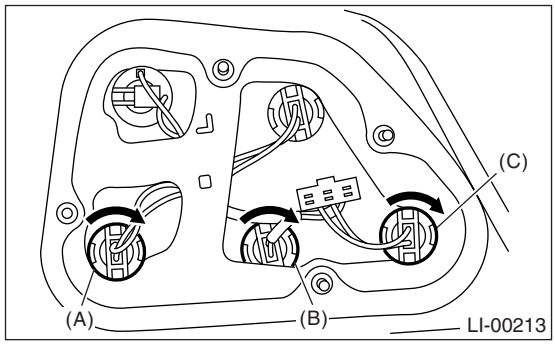

(A) Model without rear fog light: Stop light
(B) Model with rear fog light: Tail light
(C) Model with rear fog light: Stop light
Model without rear fog light: Tail light

2. WAGON

1) Remove the rear combination light assembly. <Ref. to LI-21, WAGON, REMOVAL, Rear Combination Light Assembly.>
2) Turn the socket and remove the bulb.

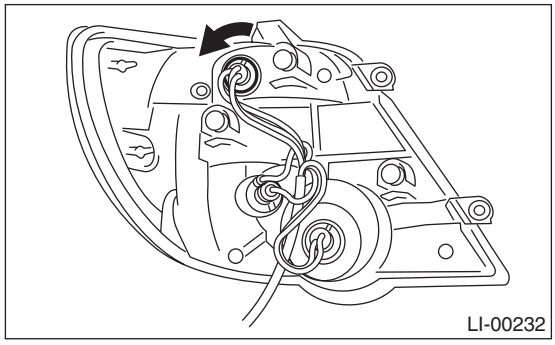

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

20.Back-up Light Bulb

A: REMOVAL

1. SEDAN

1) Remove the trunk side trim of rear portion.
2) Turn the socket and remove the bulb.

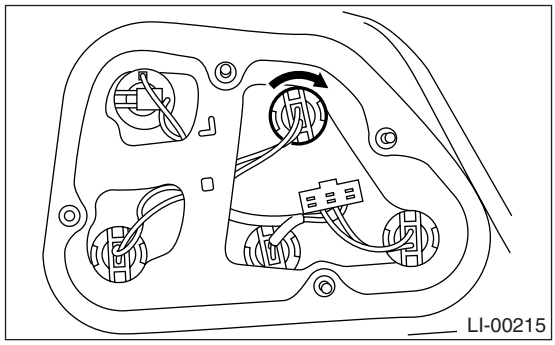

2. WAGON

1) Remove the rear combination light assembly. <Ref. to LI-21, WAGON, REMOVAL, Rear Combination Light Assembly.>
2) Turn the socket and remove the bulb.

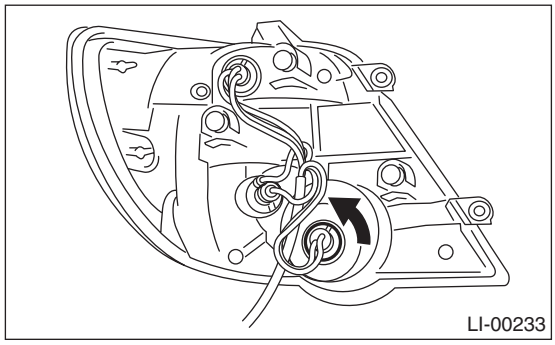

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

21.Rear Turn Signal Light Bulb

A: REMOVAL

1. SEDAN

1) Remove the trunk side trim of rear portion.
2) Turn the socket and remove the bulb.

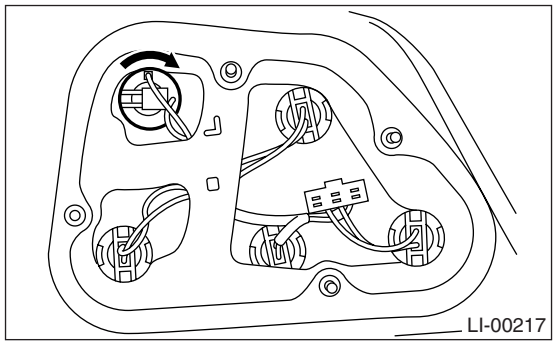

2. WAGON

1) Remove the rear combination light assembly. <Ref. to LI-21, WAGON, REMOVAL, Rear Combination Light Assembly.>
2) Turn the socket and remove the bulb.

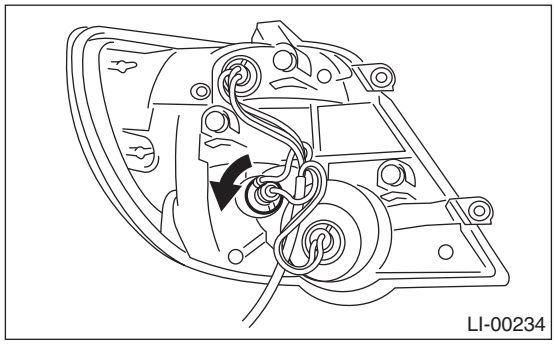

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

22.Rear Fog Light Bulb

A: REMOVAL

1. SEDAN

1) Remove the trunk side trim of rear portion.
2) Turn the socket and remove the bulb.

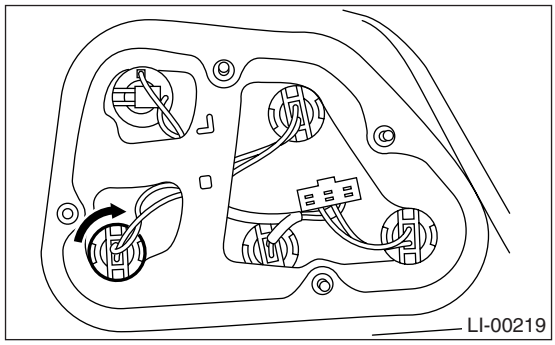

2. WAGON

1) Remove the rear combination light assembly. <Ref. to LI-21, WAGON, REMOVAL, Rear Combination Light Assembly.>
2) Turn the socket and remove the bulb.

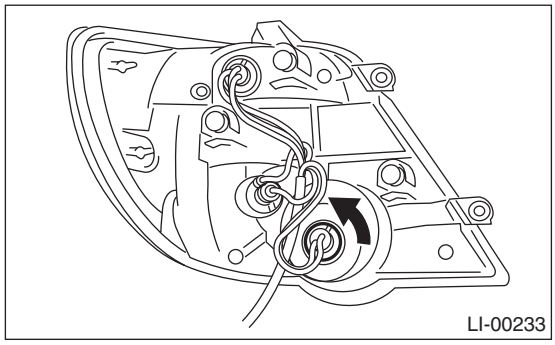

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

23.License Plate Light

A: REMOVAL

1) Remove the license plate light mounting screw (A), and then remove the lens (B).

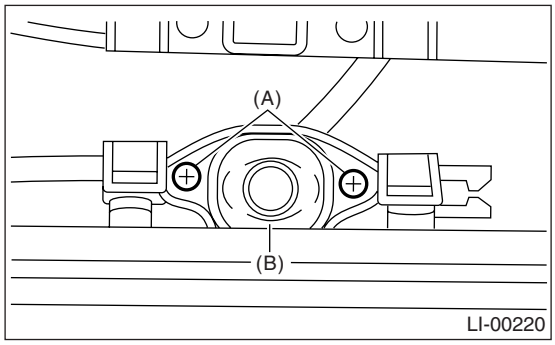

2) Remove the bulb.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

24.High-mounted Stop Light

A: REMOVAL

1. SEDAN (STANDARD TYPE)

1) Disconnect the ground cable from battery.
2) Disconnect the connector of high-mounted stop light from body harness.
3) Remove the bolts, then detach the high-mounted stop light assembly.

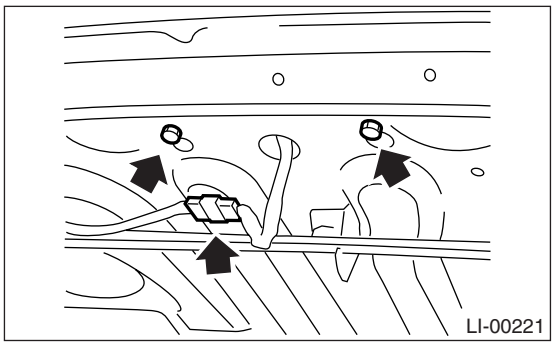

2. SEDAN (REAR SPOILER BUILT-IN TYPE)

1) Disconnect the ground cable from battery.
2) Remove the bolts, then detach the high-mounted stop light assembly.
3) Disconnect the connector of high-mounted stop light from body harness.

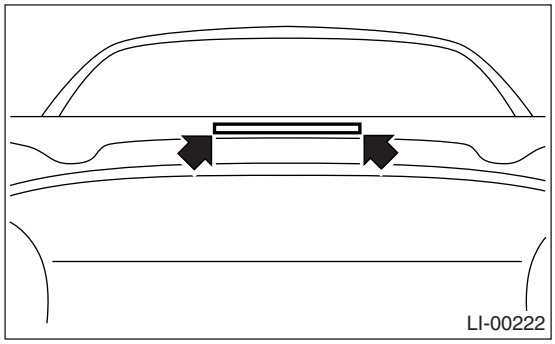

3. WAGON

1) Disconnect the ground cable from battery.
2) Remove the cap (a) by prying on the edge with screwdriver.
3) Remove the screws (b), and then the detach cover (c).
4) Remove screws (d), and then detach the high-mounted stop light while disconnecting connector.

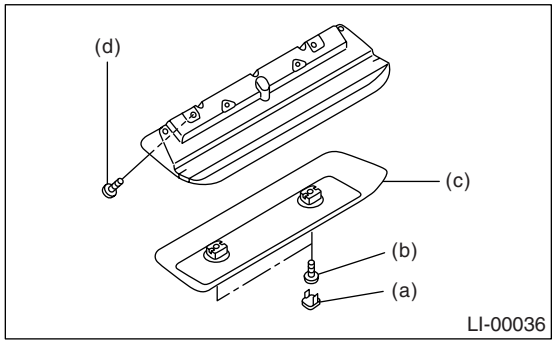

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

25.Side Turn Signal Light

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Pull out the light from body while pushing it in direction of vehicle front.
3) Disconnect the harness connector and remove the light.

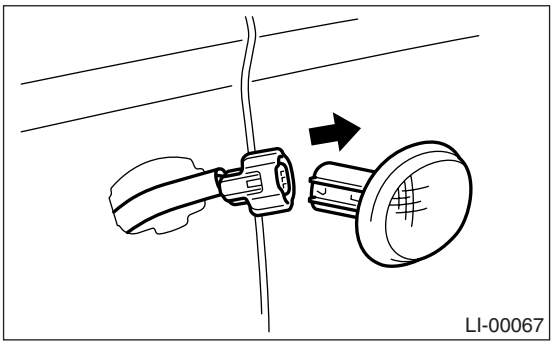

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Check the bulb for blow out using a tester.
2) If NG, replace the side turn signal light assembly with a new one.

26.Spot Map Light

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the lens (A) and spot map light mounting screw (B).

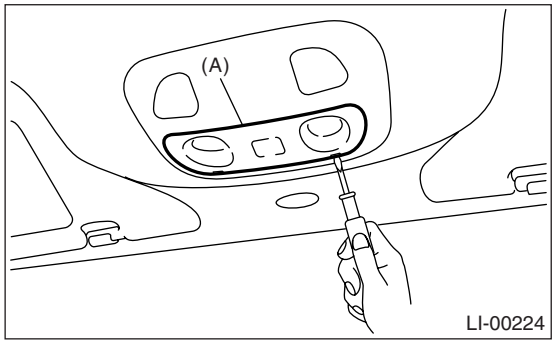

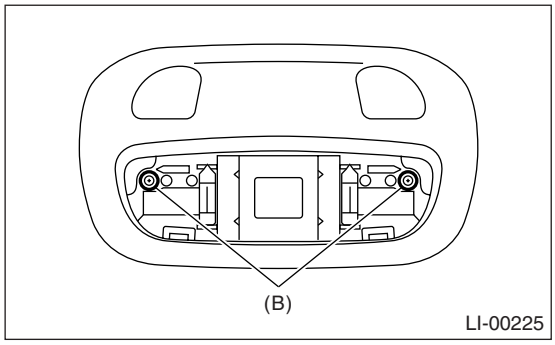

3) Disconnect the harness connectors and remove the spot map light.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SPOT MAP LIGHT BULB

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

2. SPOT MAP LIGHT SWITCH

Measure the spot map light resistance.

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
ON	1 and 2	18±5.4 Ω

27.Room Light

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the lens (A) and room light mounting screws (B).

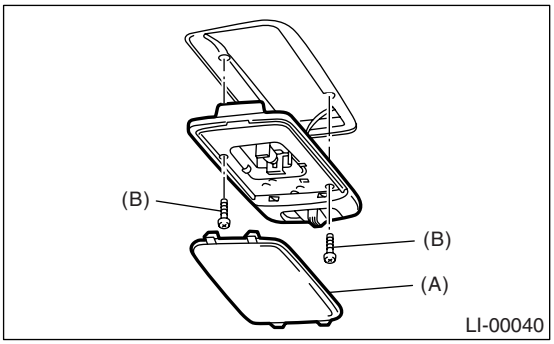

3) Disconnect the harness connectors and remove the light.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. ROOM LIGHT BULB

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

2. ROOM LIGHT SWITCH

Measure the room light resistance.

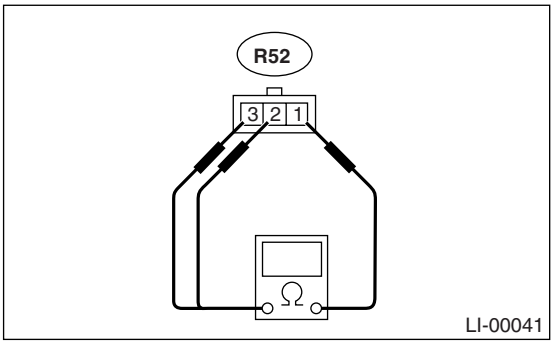

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
ON	1 and 3	1.5±0.5 Ω
DOOR	1 and 2	1.5±0.5 Ω

28.Luggage Room Light

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the lens (A) And luggage room light mounting screws (B).

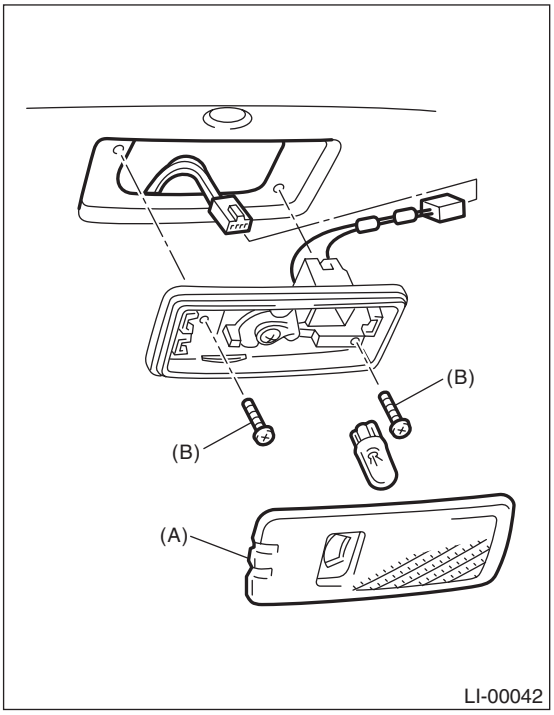

3) Disconnect the harness connectors and remove the luggage room light.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. LUGGAGE ROOM LIGHT BULB

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

2. LUGGAGE ROOM LIGHT SWITCH

Measure the luggage room light resistance.

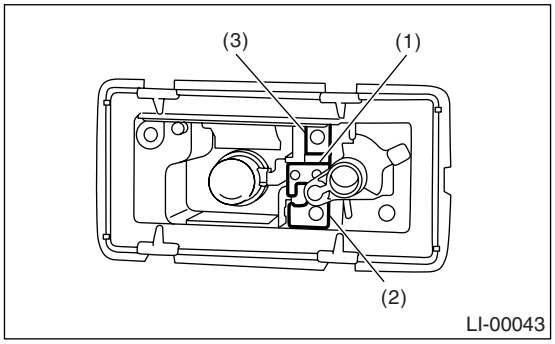

Switch position	Terminal No.	Standard
OFF	—	More than 1MΩ
ON	1 and 3	1.5±0.5 Ω
DOOR	1 and 2	1.5±0.5 Ω

29.Trunk Room Light

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the harness connectors and remove the trunk room light.

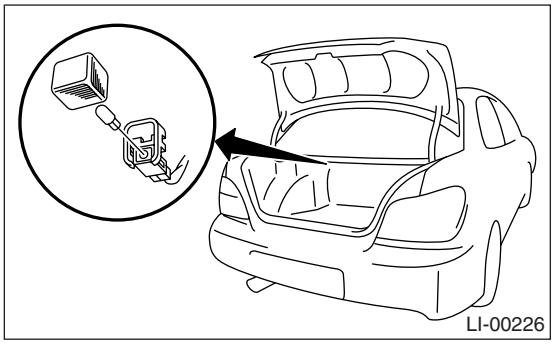

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

30.Glove Box Light

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
3) Disconnect the harness connector.
4) Remove the glove box light.

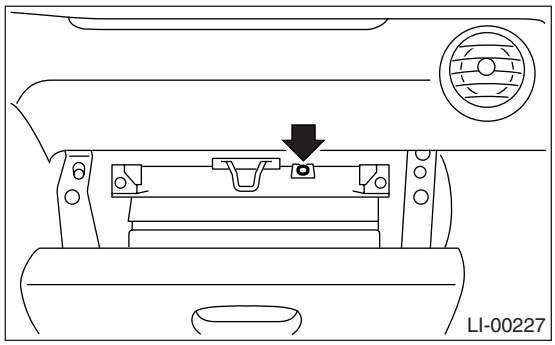

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.
2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
3) If NG, replace the bulb with a new one.

GLOVE BOX LIGHT

WIPER AND WASHER SYSTEMS

WW

		Page
1.	General Description	2
2.	Wiper and Washer System	6
3.	Combination Switch (Wiper)	7
4.	Wiper Blade	9
5.	Washer Tank and Motor	11
6.	Front Wiper Arm	12
7.	Front Wiper Motor and Link	13
8.	Front Washer Nozzle	15
9.	Rear Wiper Arm	16
10.	Rear Wiper Motor	17
11.	Rear Washer	18
12.	Wiper Control Relay (Wagon Model)	19

1. General Description

A: SPECIFICATIONS

Front wiper motor	Input	12 V — 72 W or less
Rear wiper motor	Input	12 V — 42 W or less
Front washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less
Rear washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less

B: COMPONENT

1. FRONT WIPER

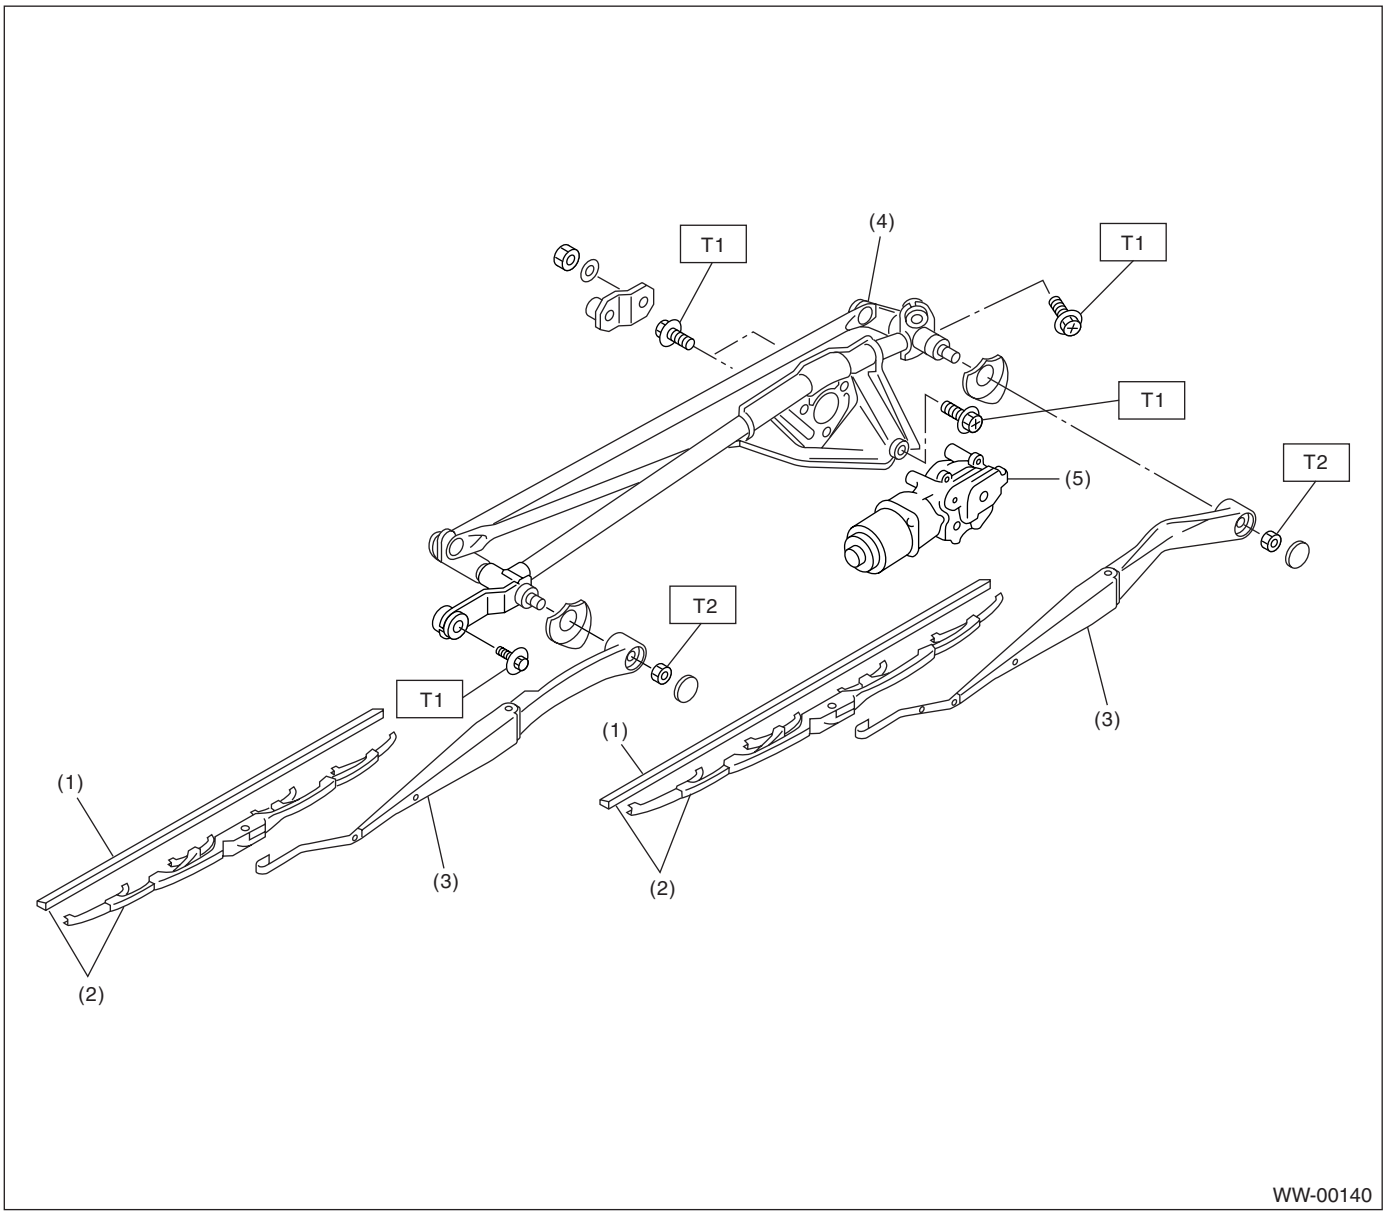

(1) Wiper rubber
(2) Wiper blade ASSY
(3) Wiper arm
(4) Wiper link
(5) Wiper motor

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.0 (0.61, 4.4)
T2: 20 (2.0, 14.5)

2. REAR WIPER

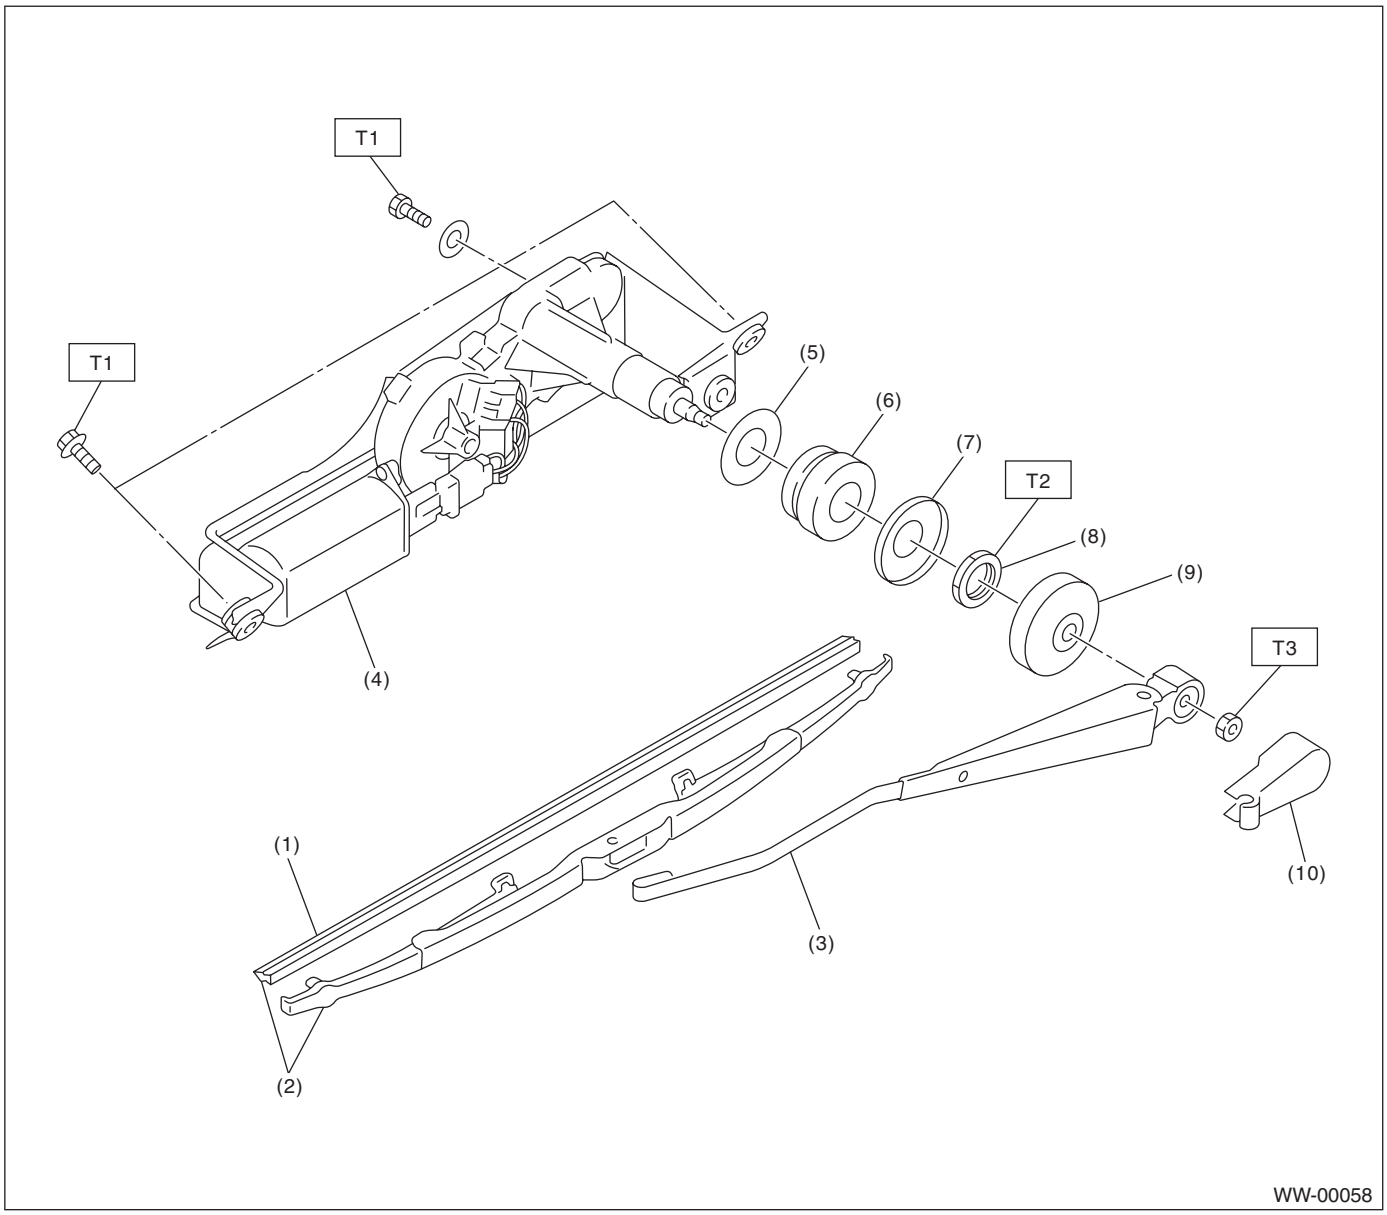

(1) Wiper rubber
(2) Wiper blade ASSY
(3) Wiper arm
(4) Wiper motor
(5) Spacer A
(6) Cushion
(7) Spacer B
(8) Nut
(9) Cap
(10) Wiper arm cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.0 (0.61, 4.4)
T2: 7.5 (0.76, 5.5)
T3: 8.0 (0.82, 5.9)

3. WASHER TANK

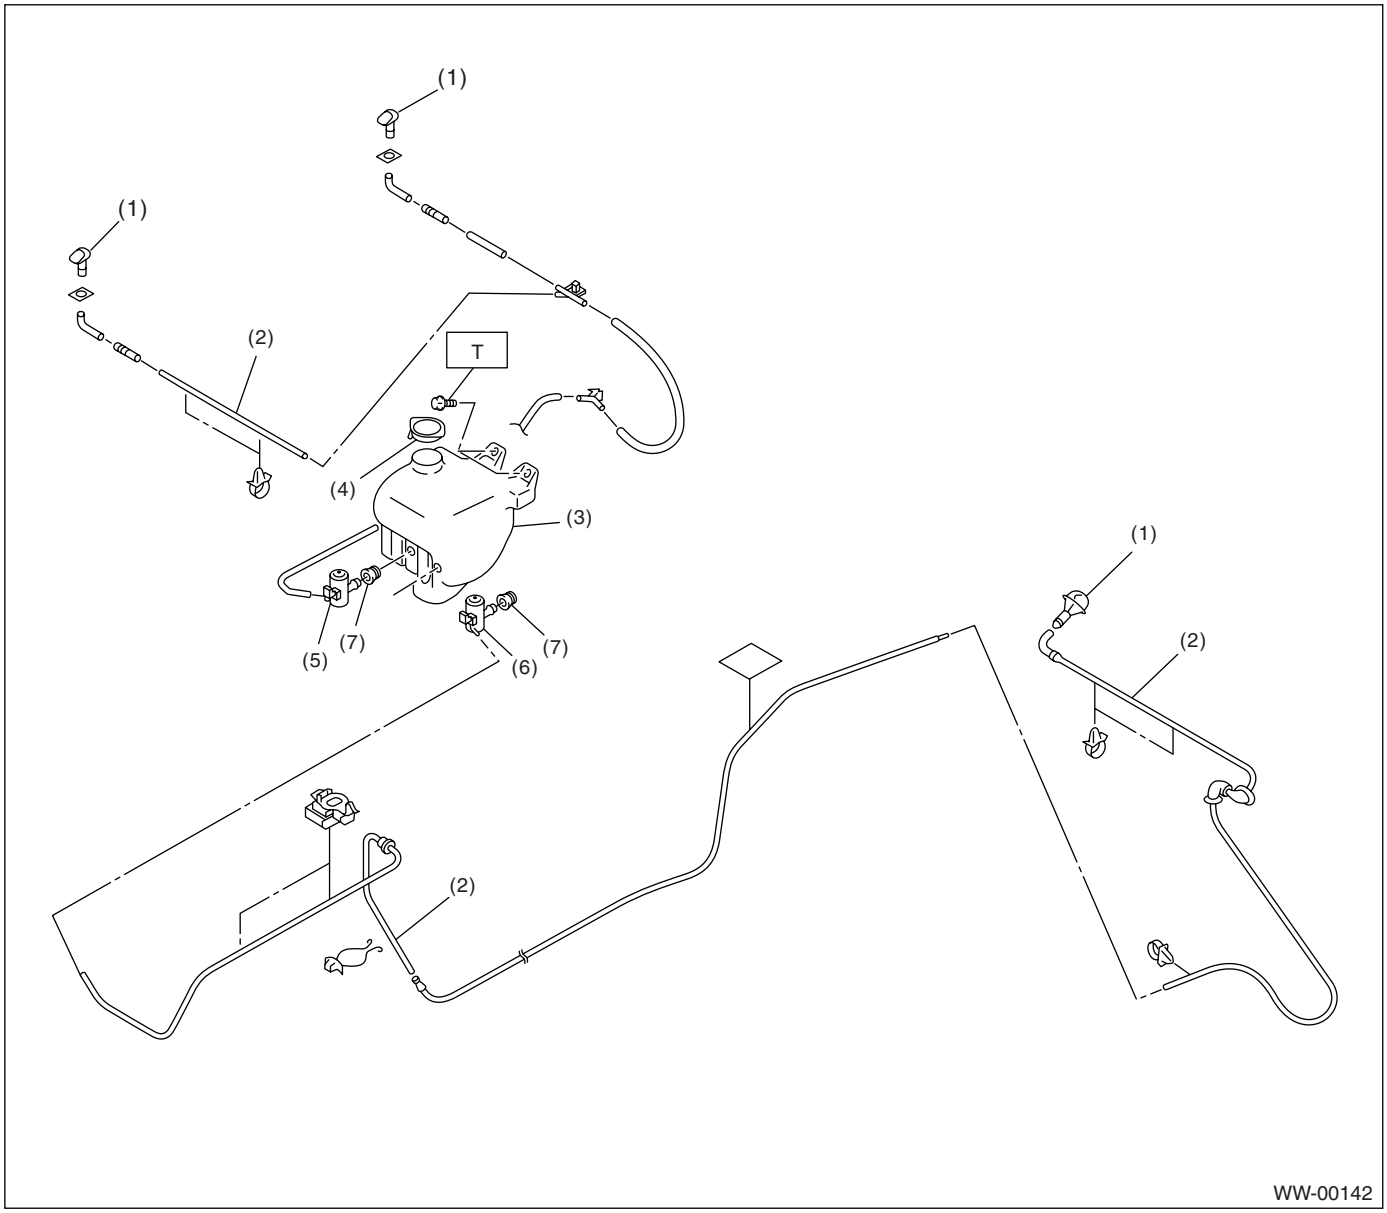

(1) Washer nozzle
(2) Washer hose
(3) Washer tank
(4) Washer tank cap
(5) Front washer motor
(6) Rear washer motor
(7) Grommet

Tightening torque: N·m (kgf-m, ft-lb)
T: 6.0 (0.61, 4.4)

C: CAUTION

• Reconnect the connectors and hoses securely. After reconnecting, confirm that each function operates normally.
• Be careful that wiring harnesses of airbag system pass near electrical parts and switches.
• Wiring harnesses and connectors of all airbag system are yellow color. Do not use a tester on these circuits.
• Care must be taken when installing the piping hose so that no bending, jamming, etc. are caused.
• If even a little oil or grease such as silicon oil gets in the tank and washer passages, an oil film easily forms on the glass, causing the wiper to chatter and judder. Therefore, be careful not to let this happen.

2. Wiper and Washer System

A: SCHEMATIC

1. WIPER AND WASHER (FRONT) LHD MODEL

<Ref. to WI-255, LHD MODEL, SCHEMATIC, Wiper and Washer System (Front).>

2. WIPER AND WASHER (FRONT) RHD MODEL

<Ref. to WI-256, RHD MODEL, SCHEMATIC, Wiper and Washer System (Front).>

3. WIPER AND WASHER (REAR) LHD MODEL

<Ref. to WI-257, LHD MODEL, SCHEMATIC, Wiper and Washer System (Rear).>

4. WIPER AND WASHER (REAR) RHD MODEL

<Ref. to WI-258, RHD MODEL, SCHEMATIC, Wiper and Washer System (Rear).>

B: INSPECTION

Symptom	Repair order
Wiper and washers do not operate.	(1) Wiper fuse (F/B No. 14, 15) (2) Combination switch (3) Wiper motor (4) Wiring harness
Wipers do not operate in LO or HI.	(1) Combination switch (2) Wiper motor (3) Wiring harness
Wipers do not operate in INT.	(1) Combination switch (2) Wiper motor (3) Wiring harness
Washer motor does not operate.	(1) Washer switch (2) Washer motor (3) Wiring harness
Wipers do not operate when washer switch is ON.	(1) Washer motor (2) Wiring harness
Washer fluid spray does not operate.	(1) Washer motor (2) Washer hose and nozzle

3. Combination Switch (Wiper)

A: REMOVAL

1) Loosen the screw to remove steering column cover.

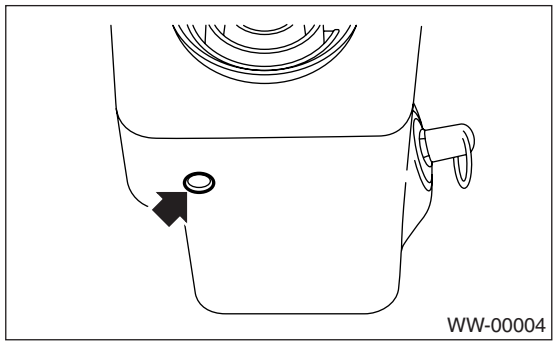

2) Disconnect the connectors from combination switches.
3) Loosen the screw to remove combination switch.

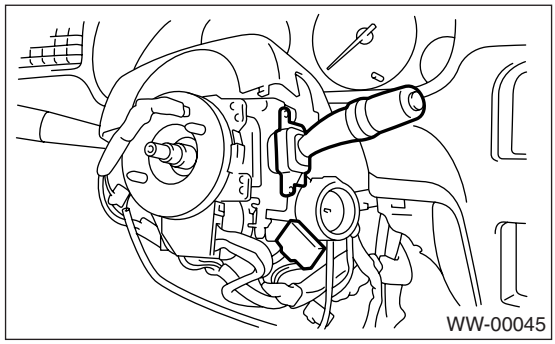

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

• Inspect the continuity between each connector terminal.

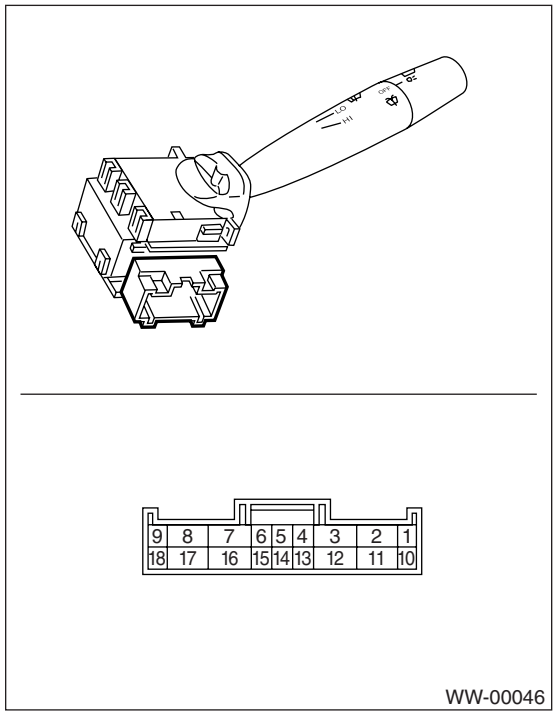

LHD model and RHD model (Europe model):

	Switch position	Terminal No.	Standard
FRONT	OFF	7 and 16	Less than 1 Ω
	INT	7 and 16	Less than 1 Ω
	LO	7 and 17	Less than 1 Ω
	HI	8 and 17	Less than 1 Ω
	Washer ON	2 and 11	Less than 1 Ω
REAR	Washer ON	2 and 10 10 and 12 2 and 12	Less than 1 Ω
	OFF	—	More than 1 MΩ
	ON	2 and 10	Less than 1 Ω
	Washer ON	2 and 10 10 and 12 2 and 12	Less than 1 Ω

If continuity is not as specified, replace the switch.

RHD model (Except Europe model):

	Switch position	Terminal No.	Standard
FRONT	OFF	3 and 12	Less than 1 Ω
	INT	3 and 12	Less than 1 Ω
	LO	3 and 11	Less than 1 Ω
	HI	2 and 11	Less than 1 Ω
	Washer ON	8 and 17	Less than 1 Ω
REAR	Washer ON	8 and 16 16 and 18 8 and 18	Less than 1 Ω
	OFF	—	More than 1MΩ
	ON	8 and 18	Less than 1 Ω
	Washer ON	8 and 16 16 and 18 8 and 18	Less than 1 Ω

If continuity is not as specified, replace the switch.

- Intermittent operation inspection

1) Turn the wiper switch to INT.
2) Adjust the intermittent control switch to MAX.
3) Apply battery voltage to switch terminals 16 and 2.
4) Inspect the voltage of combination switch terminals.

Terminals

LHD model and RHD model (Europe model)

No. 7 — No. 2:

RHD model (Except for Europe model)

No. 3 — No. 8:

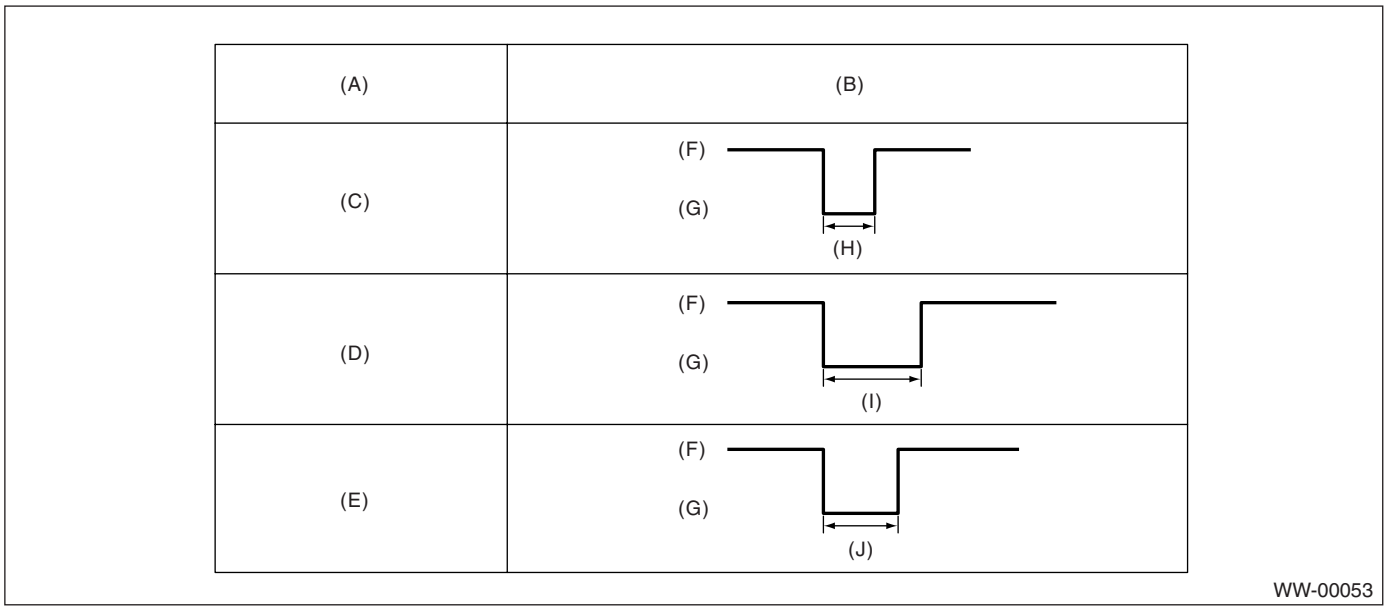

(A) Switch position
(B) Voltage
(C) MIN.
(D) MAX.
(E) Non variable type
(F) 12 V
(G) 0 V
(H) Approx. 2 sec.
(I) 16±6 sec.
(J) 3±1 sec.

If operation is not as specified, replace the switch.

4. Wiper Blade

A: REMOVAL

While pushing the locking clip (A) up, pull out the blade from arm to arrow direction.

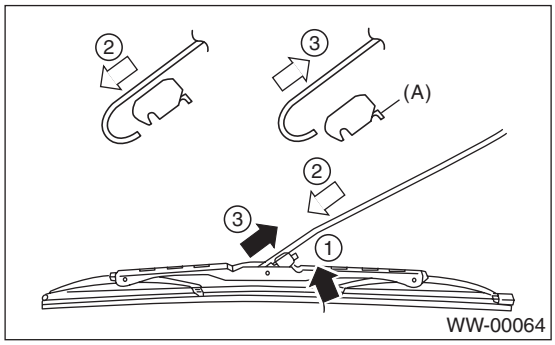

B: INSTALLATION

1) Install in the reverse order of removal.
2) Confirm that the clip is locked securely.

C: DISASSEMBLY

1. METAL TYPE

Pull on the side (A) of wiper rubber stopper, and then remove the rubber from blade assembly.

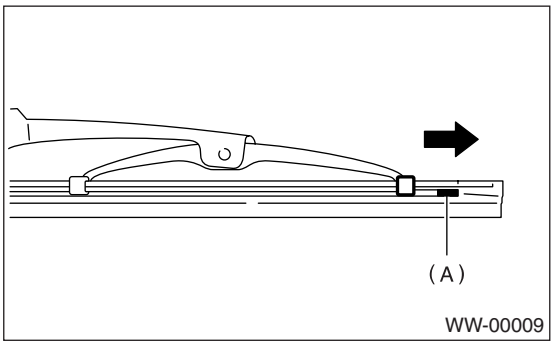

2. RESIN TYPE

Pull the wiper rubber top slightly from the stopper (A) and pull it out fully.

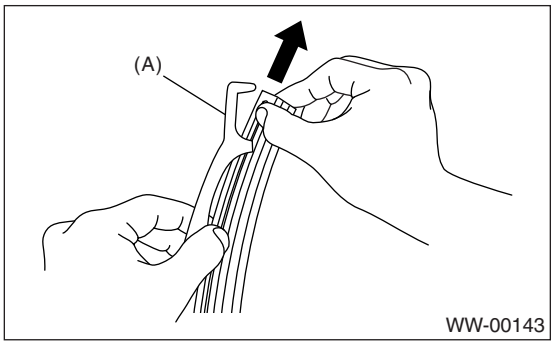

D: ASSEMBLY

1. METAL TYPE

1) Insert the wiper rubber onto blade so that the stopper is in the position shown.

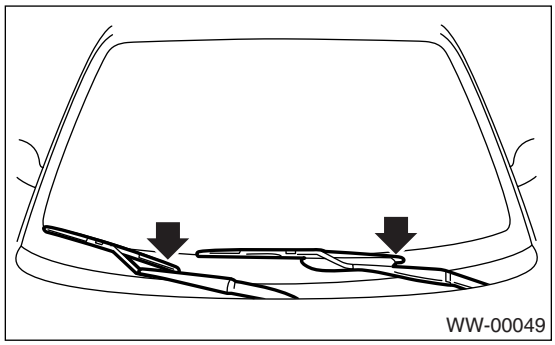

2) Make sure the wiper rubber is securely fastened to the pull stopper (A).

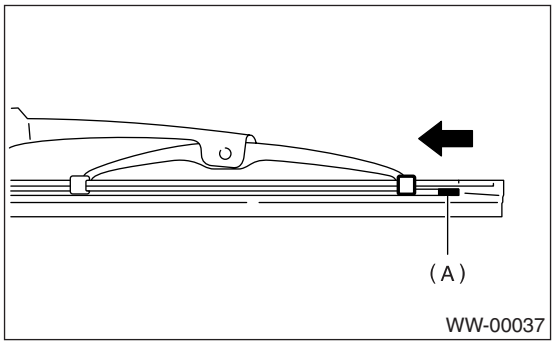

2. RESIN TYPE

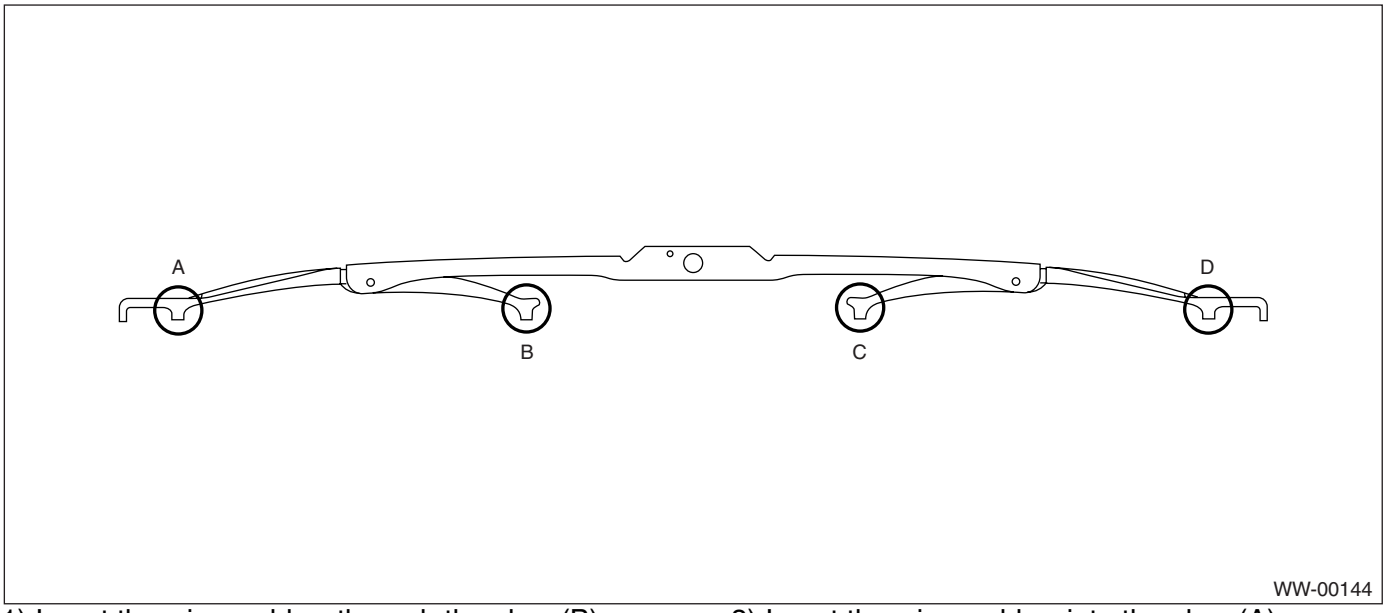

1) Insert the wiper rubber through the claw (B).

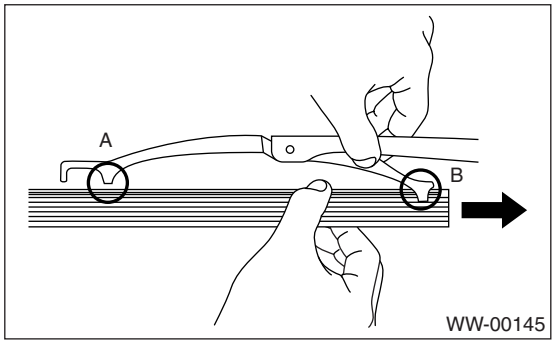

2) Insert the wiper rubber top until it protrudes about 20 mm (0.79 in) from the stopper (D).

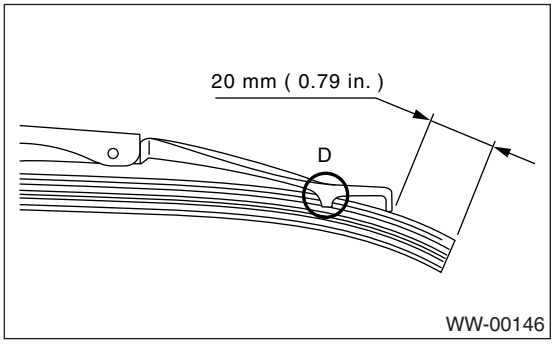

3) Insert the wiper rubber into the claw (A).

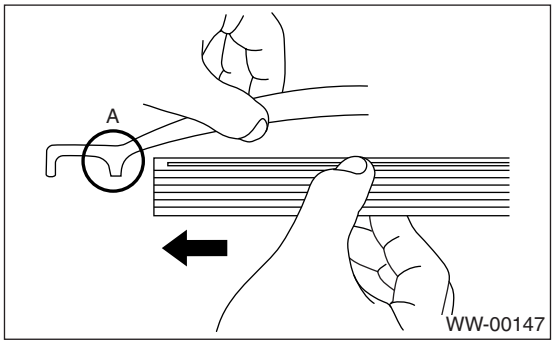

E: INSPECTION

1) When the wiper does not perform well, inspect the following:

- Make sure the movable part of the blade assembly moves smoothly.
- Make sure the wiper rubber is not deformed or damaged.

2) Replace them with new parts if damaged.

5. Washer Tank and Motor

A: REMOVAL

1) Open the hood.
2) Disconnect the ground cable from battery.
3) Remove the two bolts, hose and connector, and then remove the tank.

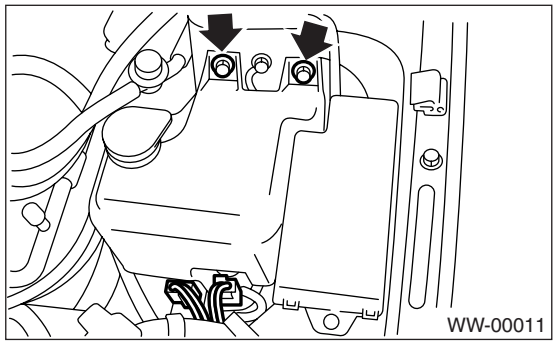

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

C: DISASSEMBLY

Pull out the washer motor from tank.

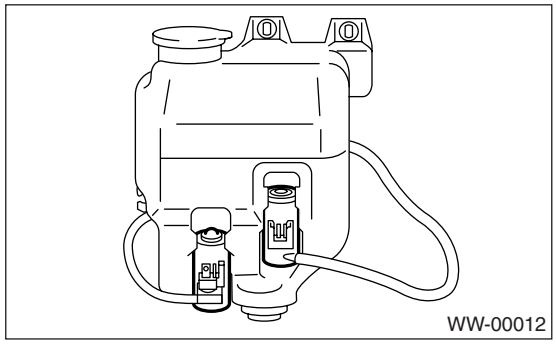

D: ASSEMBLY

1) Assemble in the reverse order of disassembly.
2) Confirm that water does not leak from installation area of motor.

E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

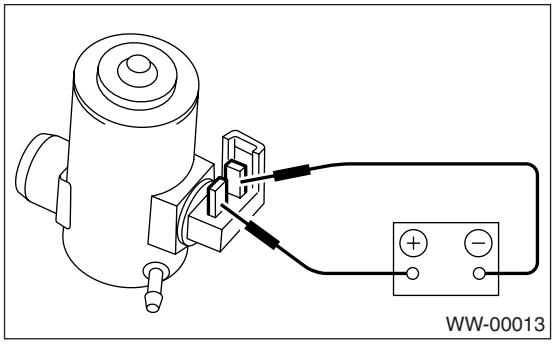

6. Front Wiper Arm

A: REMOVAL

NOTE:
The positions for RHD model are symmetrically opposite.

1) Open the hood.
2) Remove the cap.
3) Loosen the nut to remove arm.

B: INSTALLATION

NOTE:
The positions for RHD model are symmetrically opposite.

1) Install in the reverse order of removal.
2) Operate the wiper once.
3) Align the wiper blade to the ceramic print point mark (A) of front window pane.

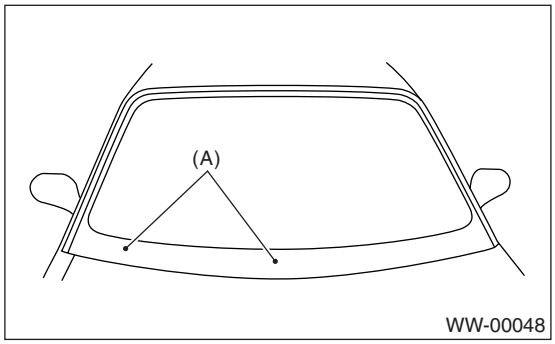

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

C: ADJUSTMENT

NOTE:
The positions for RHD model are symmetrically opposite.

Operate the wiper once. Align the wiper blade to the ceramic print point mark (A) of front window pane.

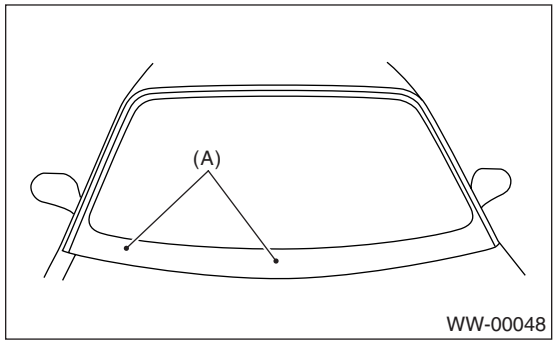

7. Front Wiper Motor and Link

A: REMOVAL

NOTE:
The positions for RHD model are symmetrically opposite.

1) Disconnect the ground cable from battery.
2) Remove the cowl panel. <Ref. to EI-32, REMOVAL, Cowl Panel.>
3) Disconnect the connector of motor.
4) Loosen the bolts to remove wiper link.

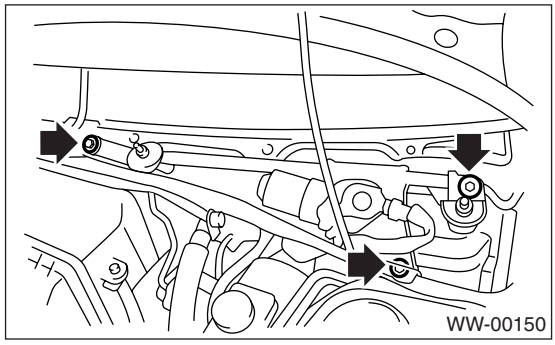

5) Loosen the bolts and nuts to remove motor.

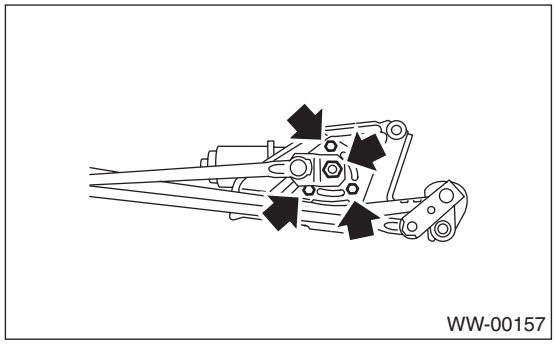

B: INSTALLATION

1) Connect the battery ground cable to battery.
2) To confirm that the motor is at auto stop position, connect the harness to motor and turn the wiper switch ON/OFF once.
3) Disconnect the ground cable from battery.
4) Tighten the nut where rod (A) and link plate (B) is aligned in a straight line.

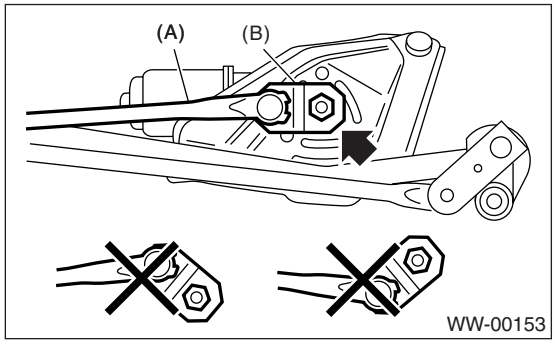

5) Install in the reverse order of removal.

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

C: INSPECTION

1) When the battery is connected to the terminal of connectors, confirm that the motor operates at low speed.

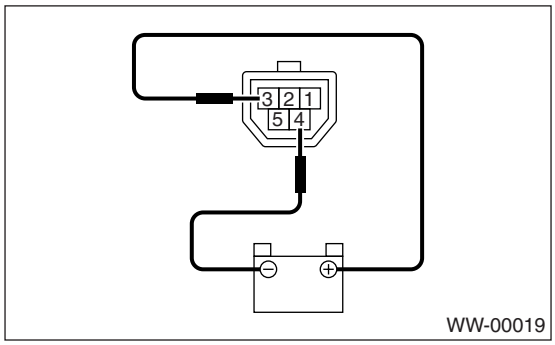

2) When the battery is connected to the terminal of connectors, confirm that the motor operates at high speed.

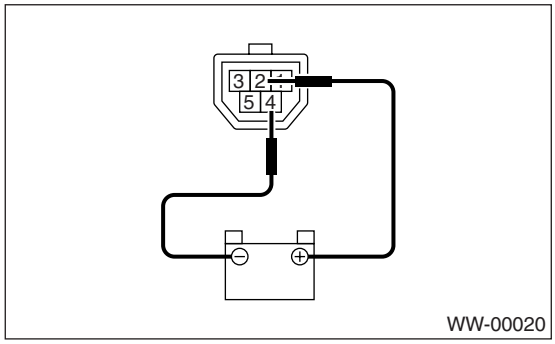

3) Connect the battery to terminals of connector, and then remove the terminal connection with motor rotated at low speed, and stop the wiper motor through operation.

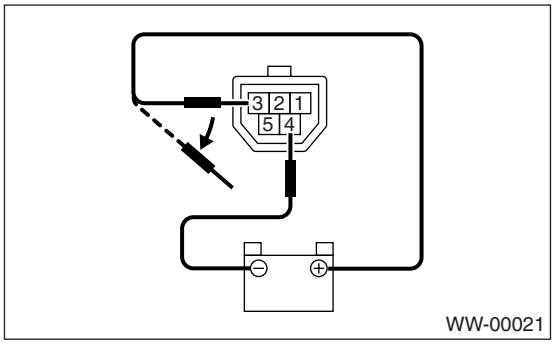

4) Connect the battery and confirm that the motor stops at automatic stop position after the motor operates at low speed again.

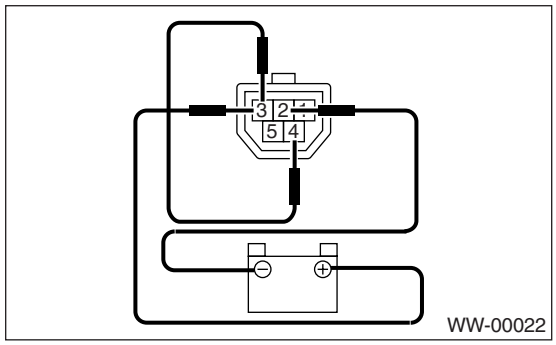

8. Front Washer Nozzle

A: REMOVAL

1) Remove the washer hose from washer nozzle.
2) Open the clips on the underside of hood with a thin screwdriver or other tool, and then remove the washer nozzle.

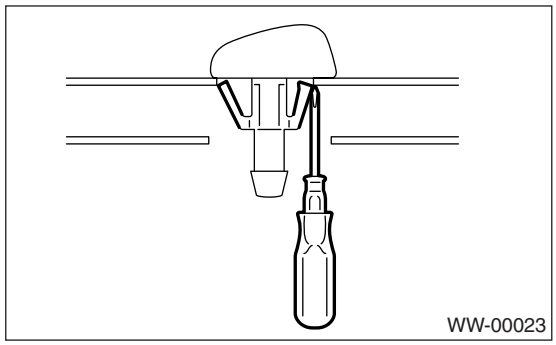

B: INSTALLATION

1) Install in the reverse order of removal.
2) Adjust the position of the washer liquid sprayer. <Ref. to WW-15, ADJUSTMENT, Front Washer Nozzle.>

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

D: ADJUSTMENT

NOTE:
This adjustment position is for left-handed vehicle. Carry out left-right symmetry for adjustment positions for right-handed vehicle.

1) Turn the wiper switch to OFF position.
2) When the vehicle stops, adjust the washer injection position as shown in the figure.

Injection position:
A: 350 mm (13.78 in)
B: 162 mm (6.38 in)
C: 300 mm (11.81 in)
D: 500 mm (19.69 in)

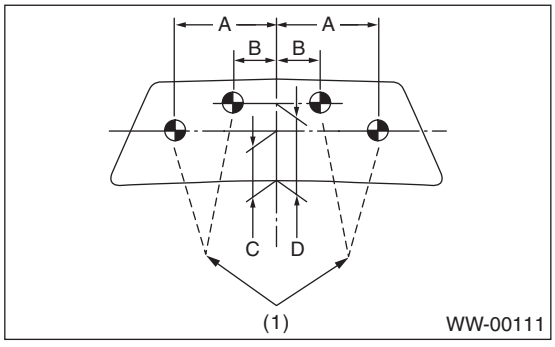

(1) Nozzle

9. Rear Wiper Arm

A: REMOVAL

1) Raise the wiper arm cover (A).
2) Loosen the nut to remove wiper arm.

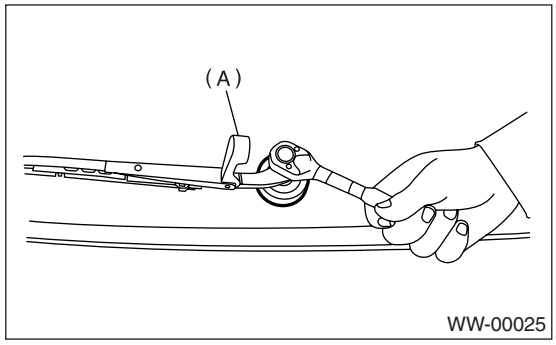

B: INSTALLATION

1) Install in the reverse order of removal.
2) Operate the rear wiper once.
3) Align the blade to rear defogger heat wire (A).

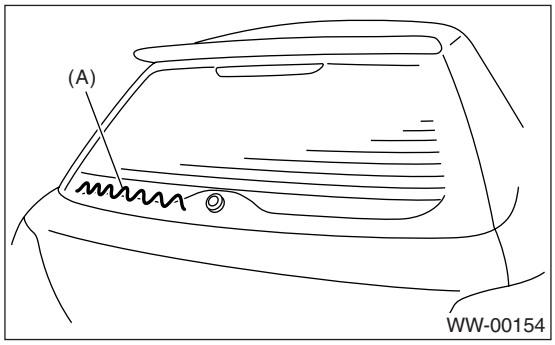

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to WW-3, REAR WIPER, COMPONENT, General Description.>

C: ADJUSTMENT

1) Operate the rear wiper once.
2) Align the blade to rear defogger heat wire (A).

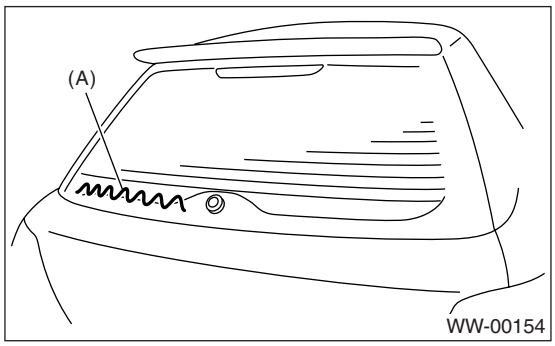

10.Rear Wiper Motor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear wiper arm.
3) Remove the cap (A), nut (B) and spacer (C) from rear wiper shaft.

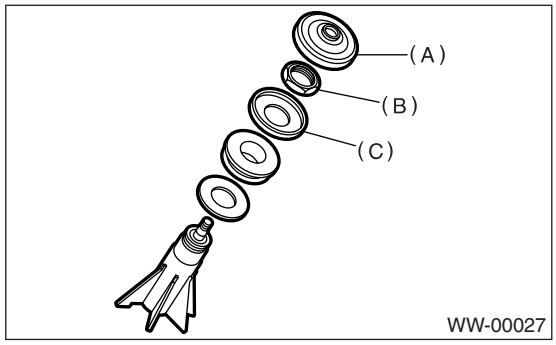

4) Remove the rear gate lower trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
5) Unclip the clip of harness, and then disconnect the connector of wiper motor.
6) Loosen the bolts to remove the wiper motor assembly (A).

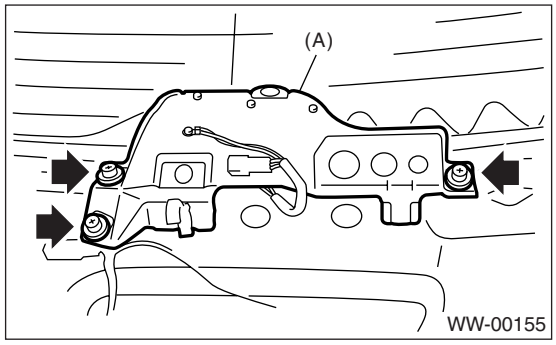

B: INSTALLATION

1) Install in the reverse order of removal.
2) Install the rear wiper cushion with the arrow mark facing up, as shown in the figure.

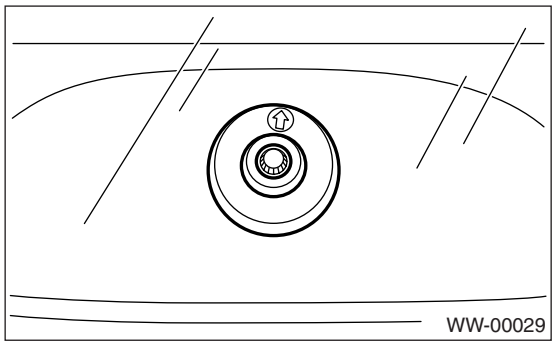

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to WW-3, REAR WIPER, COMPONENT, General Description.>

C: INSPECTION

1) Connect the battery to wiper motor connector and confirm that the wiper motor operates.

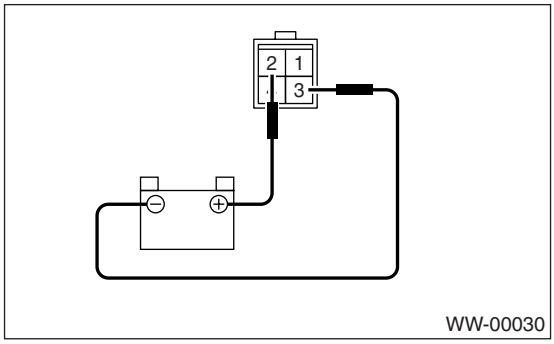

2) Connect the battery to terminal of connector, and then remove the terminal connections with motor rotated, and stop the wiper motor through operation.

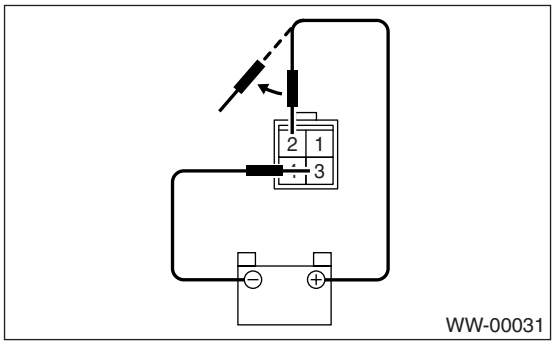

3) Connect the battery and confirm that the motor stops at automatic stop position after the motor operates at low speed again.

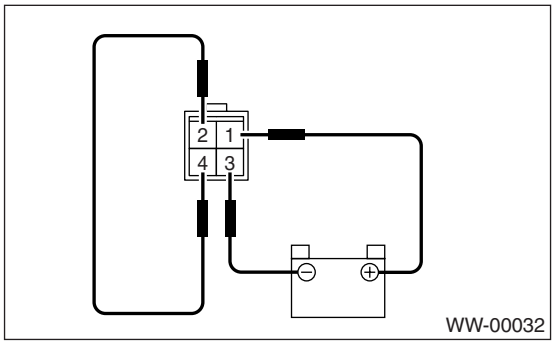

11.Rear Washer

A: REMOVAL

1) Remove the high-mount stop light. <Ref. to LI-27, REMOVAL, High-mounted Stop Light.>
2) Remove the washer hose from washer nozzle.
3) Open the clips on the underside of hood with a thin screwdriver or other tool, and then remove the washer nozzle.

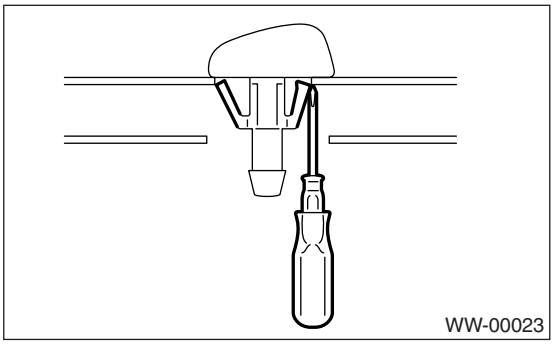

B: INSTALLATION

1) Install in the reverse order of removal.
2) Adjust the position of the washer liquid sprayer. <Ref. to WW-18, ADJUSTMENT, Rear Washer.>

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

D: ADJUSTMENT

1) Turn the wiper switch to OFF position.
2) When the vehicle stops, adjust the washer injection position as shown in the figure.

Injection position:
A: 39 mm (1.54 in)
B: 72°

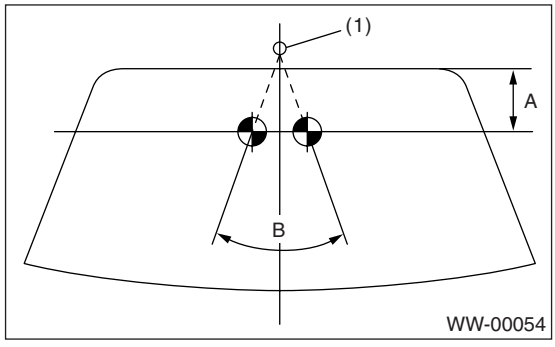

(1) Nozzle

12. Wiper Control Relay (Wagon Model)

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the right quarter lower trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
3) Loosen the nut to remove control unit.

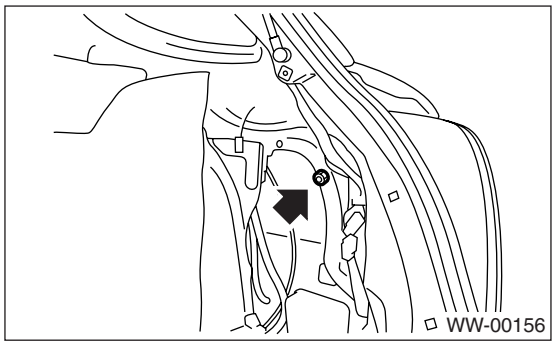

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Disconnect the connector from wiper control relay.
2) Connect the positive (+) lead from the battery to terminal 8 and the negative (−) lead to terminal 6. Connect the positive (+) lead from the voltmeter to terminal 3 and the negative (−) lead to ground.

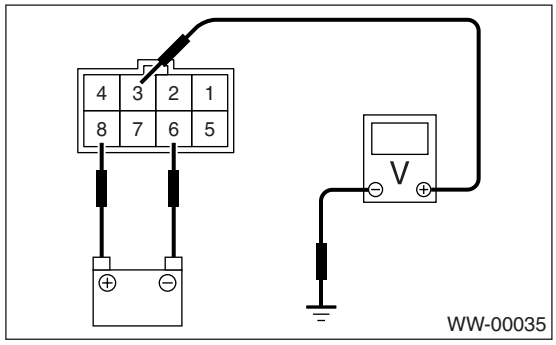

3) Measure the voltage when the wiper relay is operated.

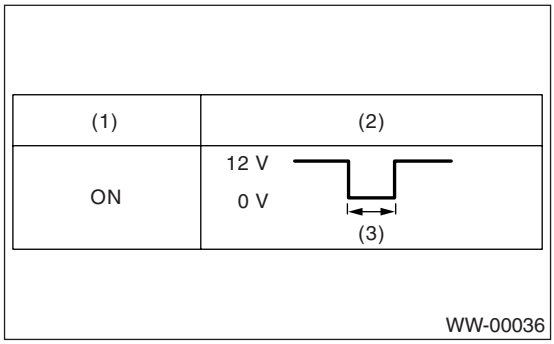

(1) Switch position
(2) Voltage
(3) 9±2 sec.

If operation is not as specified, replace the switch.

ENTERTAINMENT

ET

		Page
1.	General Description	2
2.	Radio System	3
3.	Front Accessory Power Supply Socket System	4
4.	Radio Body	5
5.	Front Speaker	6
6.	Tweeter	7
7.	Rear Speaker	8
8.	Antenna	9
9.	Antenna Amplifier	10
10.	Noise Suppressor	11
11.	Front Accessory Power Supply Socket	12

1. General Description

A: CAUTION

• Before disassembling or reassembling parts, always disconnect the battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
• Reassemble in reverse order of disassembly, unless otherwise indicated.
• Adjust parts to the given specifications.
• Connect the connectors and hoses securely during reassembly.
• After reassembly, make sure functional parts operate smoothly.

B: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.
Conductive Silver Composition (DUPONT NO. 4817 or equivalent)	Used for repairing antenna wire.

2. Radio System

A: SCHEMATIC

1. RADIO LHD MODEL

<Ref. to WI-80, LHD MODEL, SCHEMATIC, Audio System.>

2. RADIO RHD MODEL

<Ref. to WI-82, RHD MODEL, SCHEMATIC, Audio System.>

B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	(1) Check the fuse and power supply for radio. (2) Check the radio ground. (3) Remove the radio for repair.
A specific speaker does not operate.	(1) Check the speaker. (2) Check the output circuit between radio and speaker.
Radio generates noise with engine running.	(1) Check the radio ground. (2) Check the generator. (3) Check the ignition coil. (4) Remove the radio for repair.
AM and FM modes are weak or noisy.	(1) Check the antenna. (2) Check the antenna amplifier. (3) Check the noise suppressor. (4) Check the radio ground. (5) Remove the radio for repair.

3. Front Accessory Power Supply Socket System

A: SCHEMATIC

1. FRONT ACCESSORY POWER SUPPLY SOCKET

<Ref. to WI-179, SCHEMATIC, Front Accessory Power Supply System.>

4. Radio Body

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the center panel while disconnecting connector.

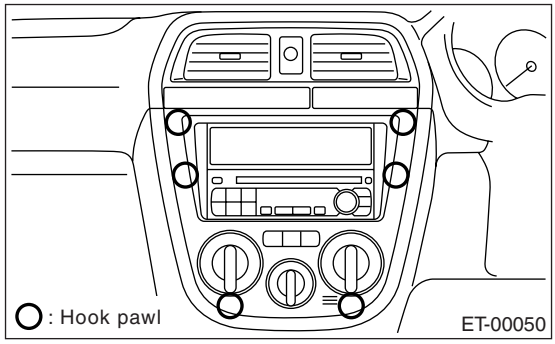

3) Remove the fitting screws, and slightly pull out the radio from center console.

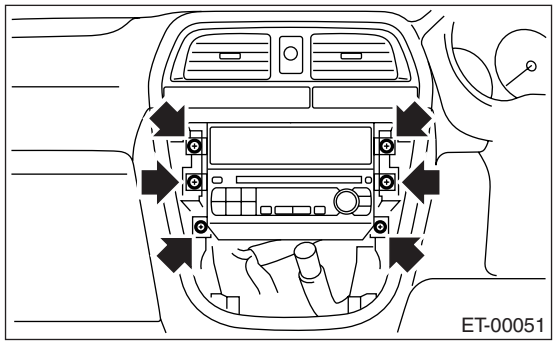

4) Disconnect the harness connectors and antenna feeder cord.

B: INSTALLATION

Install in the reverse order of removal.

5. Front Speaker

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
3) Remove the front speaker mounting screws.

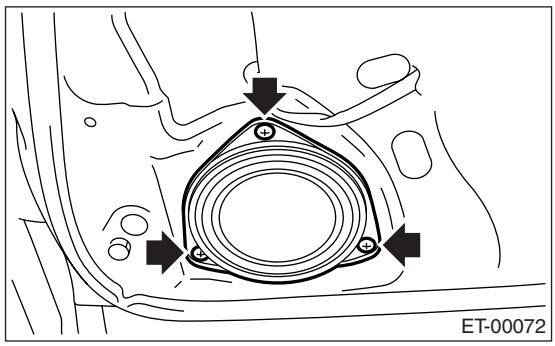

4) Disconnect the harness connector and remove front speaker.

B: INSTALLATION

Install in the reverse order of removal.

6. Tweeter

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
3) Remove the tweeter mounting screws.

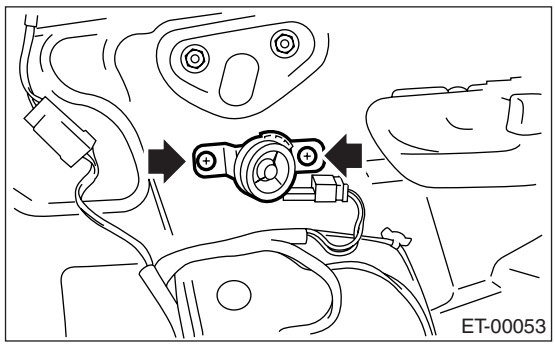

4) Disconnect the harness connector and remove tweeter.

B: INSTALLATION

Install in the reverse order of removal.

7. Rear Speaker

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
3) Remove the rear speaker mounting screws.

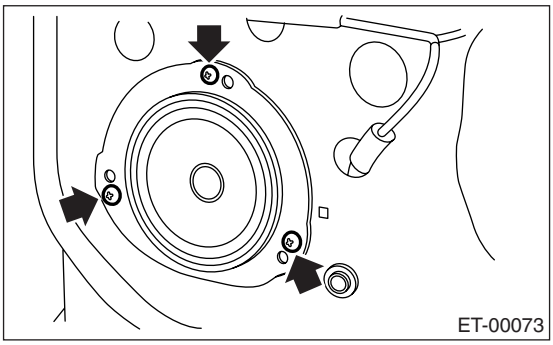

4) Disconnect the harness connector and remove rear speaker.

B: INSTALLATION

Install in the reverse order of removal.

8. Antenna

A: INSPECTION

Measure the resistance between antenna terminal and each antenna wire.
If an antenna wire is OK, resistance will be less than 1 Ω. If an antenna wire is broken, the resistance will be more than 1 MΩ.

NOTE:
When checking the continuity, wind a piece of aluminum foil around the tip of tester probe, and then press the aluminum foil against wire with your finger.

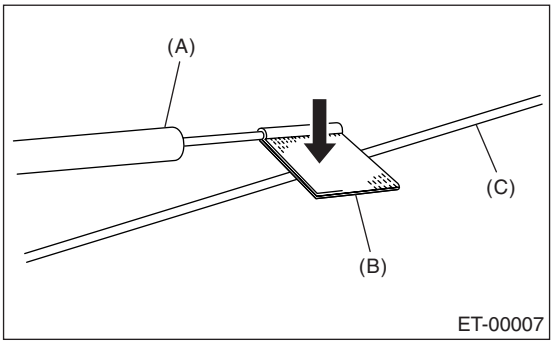

(A) Tester probe
(B) Aluminum foil
(C) Antenna wire

To locate the broken point, move the probe along antenna wire.

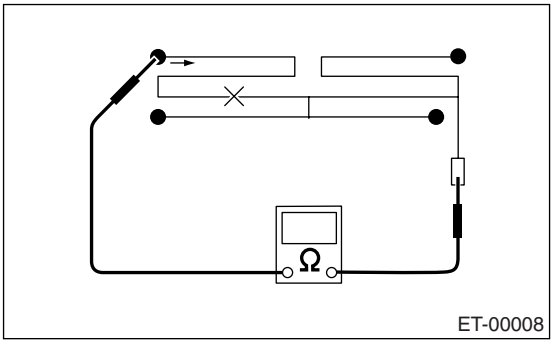

B: REPAIR

1) Clean the antenna wire and surrounding area with a cloth dampened by alcohol.
2) Paste a thin masking film on the glass along broken wire.
3) Deposit conductive silver composition (DUPONT No. 4817) on the broken portion with a drawing pen.

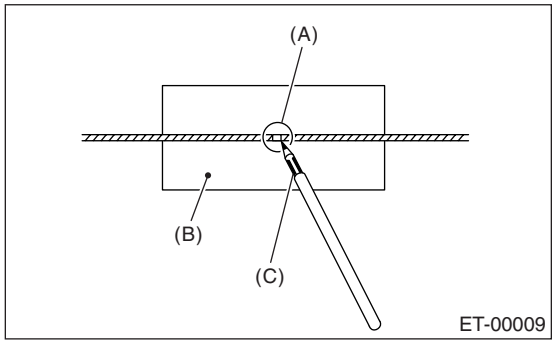

(A) Broken portion
(B) Masking film
(C) Conductive silver composition

4) Dry out the deposited portion.
5) After repair has been completed, measure the resistance in repaired wire.

9. Antenna Amplifier

A: REMOVAL

1. SEDAN

1) Disconnect the ground cable from battery.
2) Remove the rear pillar upper trim. <Ref. to EI-48, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
3) Disconnect the harness connector and terminal.
4) Remove the mounting screws and detach antenna amplifier.

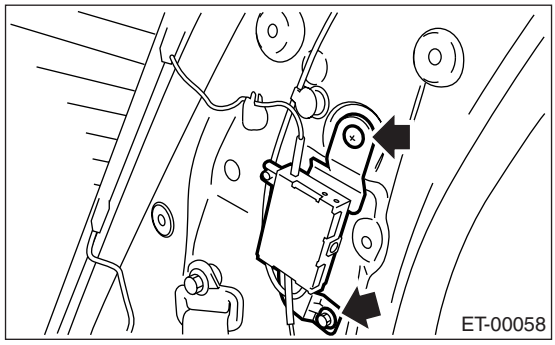

2. WAGON

1) Disconnect the ground cable from battery.
2) Remove the rear quarter upper trim and roof trim. <Ref. to EI-50, WAGON MODEL, REMOVAL, Roof Trim.>
3) Disconnect the harness connector and terminal.
4) Remove the mounting screws and detach the antenna amplifier.

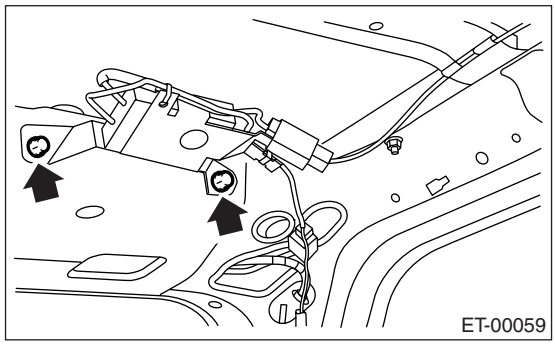

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the antenna amplifier resistance.

- SEDAN

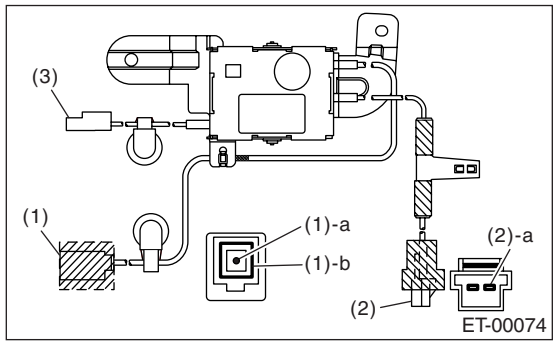

- WAGON (Europe model)

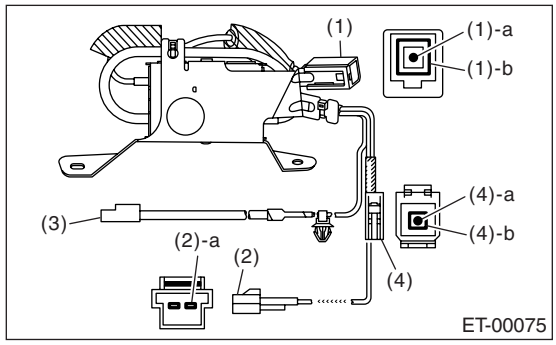

- WAGON (Except for Europe model)

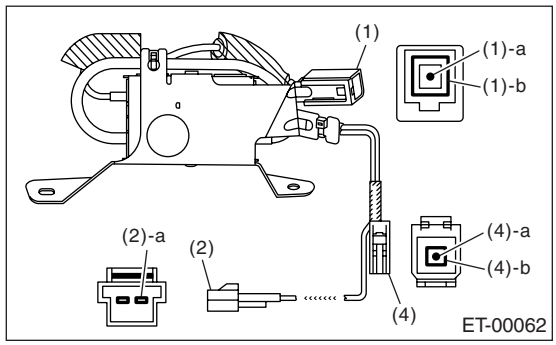

Terminal No.	Standard
1-a and Amplifier body	More than 100 kΩ
1-b and Amplifier body	Less than 1 Ω
2-a and Amplifier body	More than 100 kΩ
3 and Amplifier body	More than 100 kΩ
4-a and Amplifier body	More than 100 kΩ
4-b and Amplifier body	Less than 1 Ω

10.Noise Suppressor

A: REMOVAL

1. SEDAN

1) Disconnect the ground cable from battery.
2) Remove the rear pillar upper trim. <Ref. to EI-48, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
3) Remove the rear shelf trim. <Ref. to EI-53, REMOVAL, Rear Shelf Trim.>
4) Disconnect the feeder cord connector from antenna amplifier.
5) Disconnect the harness connector of noise suppressor from terminal on glass antenna.
6) Remove the harness clip.
7) Remove the mounting nut and detach the noise suppressor.

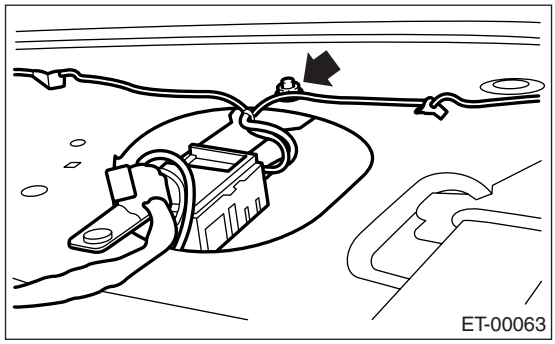

2. WAGON

1) Disconnect the ground cable from battery.
2) Remove the rear gate trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
3) Disconnect the connector from noise suppressor.
4) Remove the mounting nut and detach the noise suppressor.

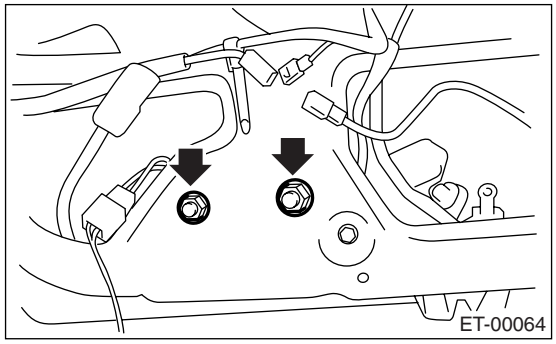

B: INSTALLATION

Install in the reverse order of removal.

11.Front Accessory Power Supply Socket

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the center panel. <Ref. to ET-5, REMOVAL, Radio Body.>
3) Disconnect the harness connectors and remove front accessory power supply socket.

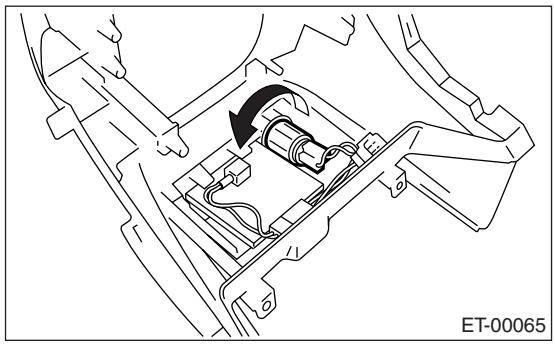

B: INSTALLATION

Install in the reverse order of removal.

COMMUNICATION SYSTEM

COM

Page

1. General Description 2
2. Horn System 3
3. Horn 4
4. Horn Switch 5

1. General Description

A: CAUTION

• Before disassembling or reassembling parts, always disconnect the battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
• Reassemble in reverse order of disassembly, unless otherwise indicated.
• Adjust parts to the given specifications.
• Connect the connectors and hoses securely during reassembly.
• After reassembly, make sure functional parts operate smoothly.

B: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.

2. Horn System

A: SCHEMATIC

1. HORN

<Ref. to WI-181, SCHEMATIC, Horn System.>

B: INSPECTION

1. HORN RELAY

Measure the horn relay resistance between terminals (indicated in table below) when connecting the terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground cable.

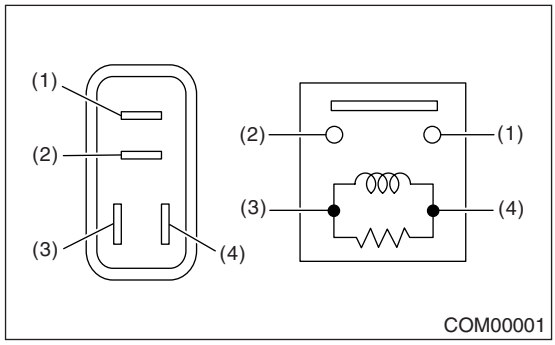

Current	Terminal No.	Standard
Flow	1 and 2	Less than 1 Ω
No Flow		More than 1 MΩ

3. Horn

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the horn bracket mounting bolt (A).
3) Disconnect the harness connector and remove the horn assembly (B).

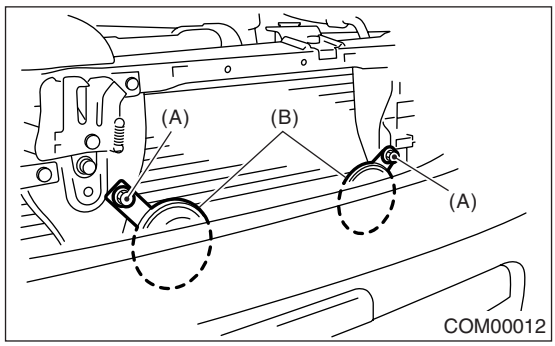

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

With 12 V direct current supplied between horn terminal and case ground, check that the horn sounds properly.

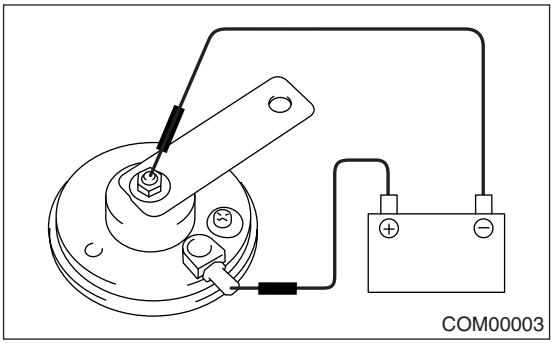

4. Horn Switch

A: REMOVAL

WARNING:
Before servicing, be sure to read the notes in AB section for proper handling of driver airbag module. <Ref. to AB-3, CAUTION, General Description.>

1) Disconnect the ground cable from battery.
2) Remove the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.>
3) Remove the horn switch from steering wheel as shown in the figure.

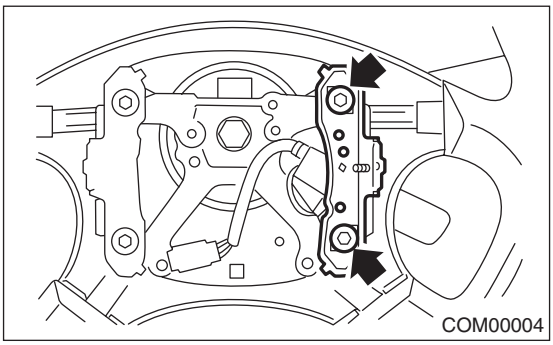

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the horn switch resistance.

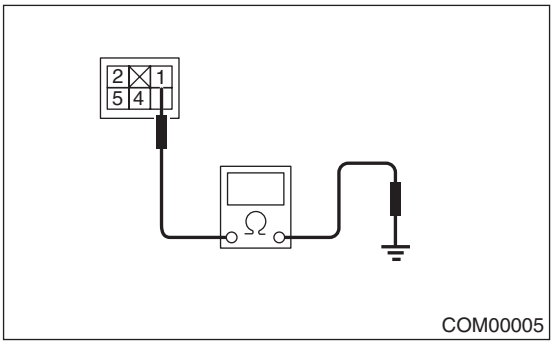

Switch position	Terminal No.	Resistance
When horn switch is pushed.	1 and Body ground	Less than 1 Ω
When horn switch is not pushed.		More than 1 MΩ

GLASS/WINDOWS/MIRRORS

GW

		Page
1.	General Description	2
2.	Power Window System	7
3.	Power Window Control Switch	8
4.	Front Door Glass	11
5.	Front Regulator and Motor Assembly	15
6.	Remote Control Mirror System	16
7.	Scalp Cap	17
8.	Outer Mirror Assembly	18
9.	Outer Mirror	19
10.	Remote Control Mirror Switch	20
11.	Rear Door Glass	21
12.	Rear Regulator and Motor Assembly	23
13.	Windshield Glass	24
14.	Rear Gate Glass	27
15.	Rear Window Glass	28
16.	Rear Window Defogger System	29
17.	Rear Window Defogger	30
18.	Rear Quarter Glass	31
19.	Roof Window Glass	33
20.	Inner Rearview Mirror	34

1. General Description

A: COMPONENT

1. FIXED GLASS (SEDAN)

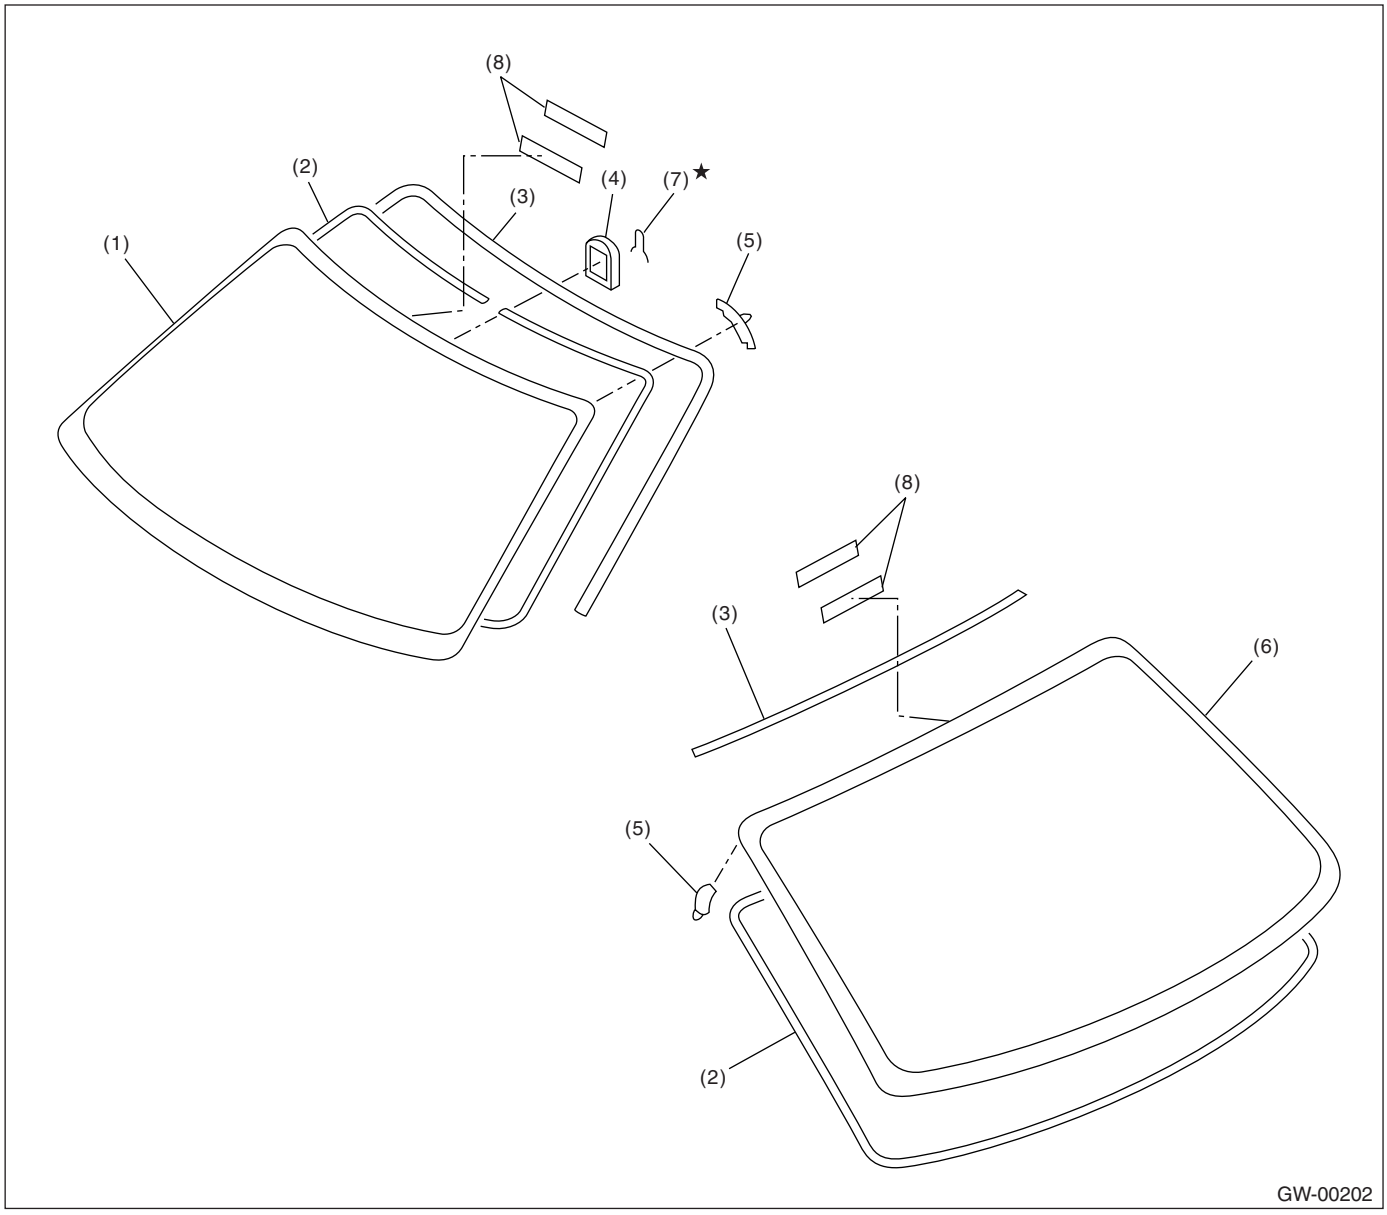

(1) Windshield glass
(2) Dam rubber
(3) Molding
(4) Rearview mirror mount
(5) Locate pin
(6) Rear window glass
(7) Spring
(8) Fastener

2. FIXED GLASS (WAGON)

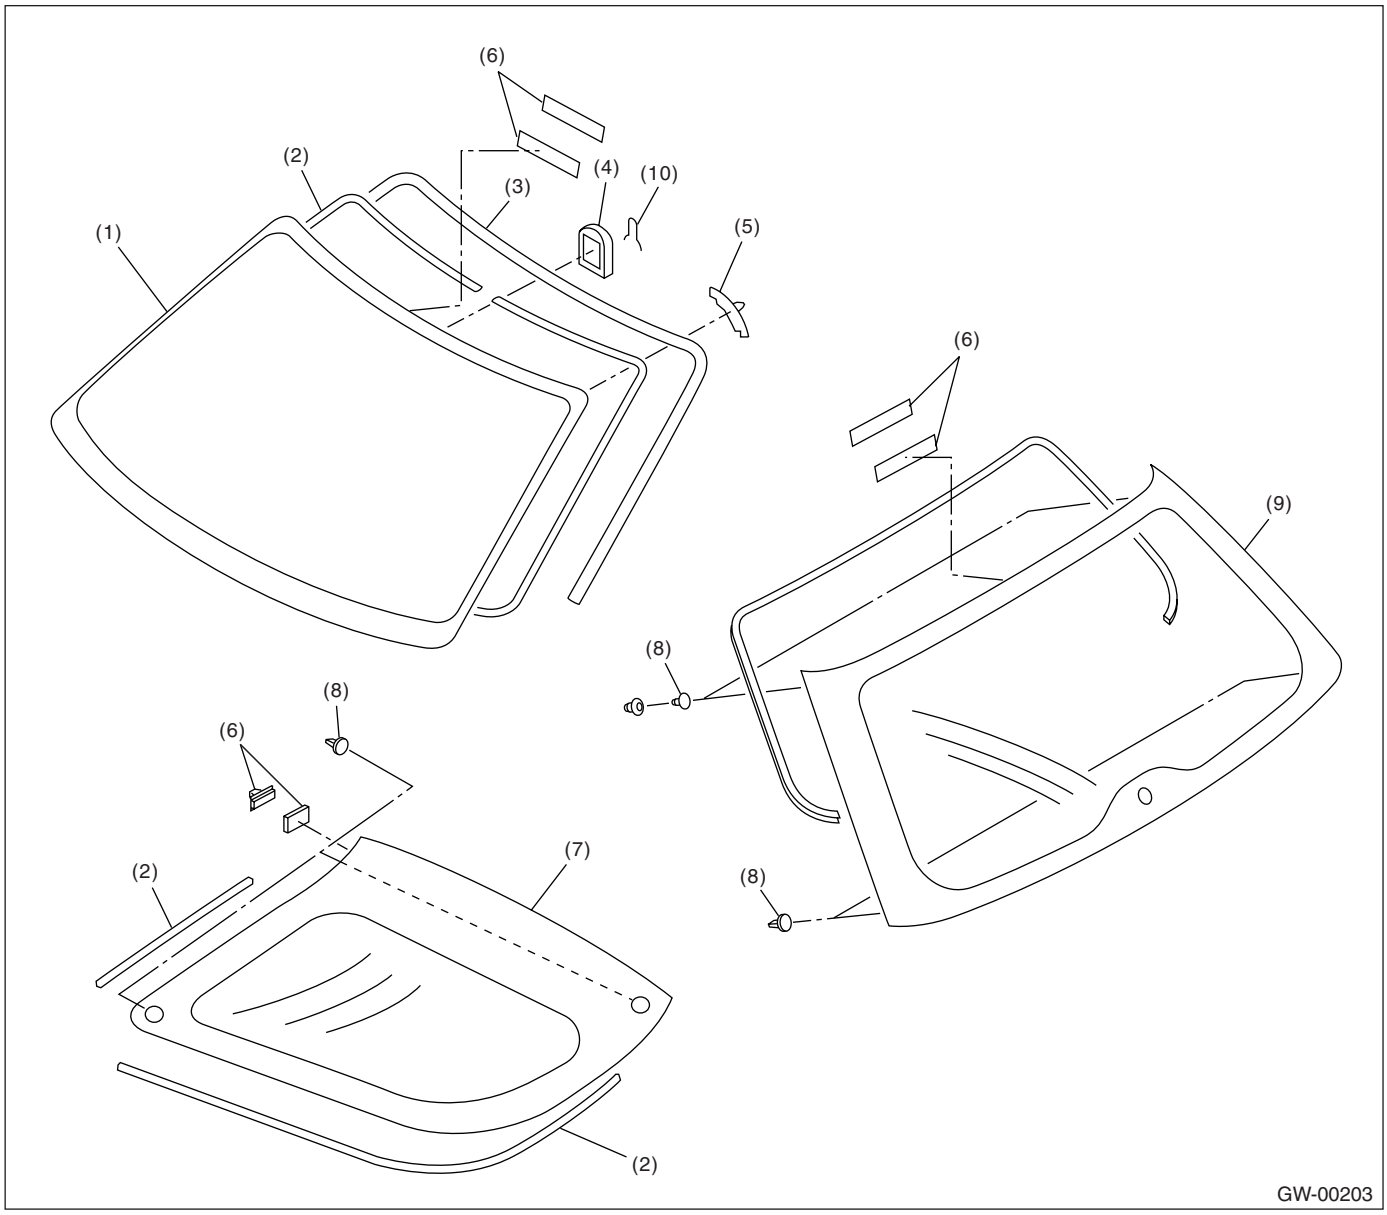

(1) Windshield glass
(2) Dam rubber
(3) Molding
(4) Rearview mirror mount
(5) Locate pin
(6) Fastener
(7) Rear quarter glass
(8) Locate pin
(9) Glass
(10) Spring

3. FRONT DOOR GLASS

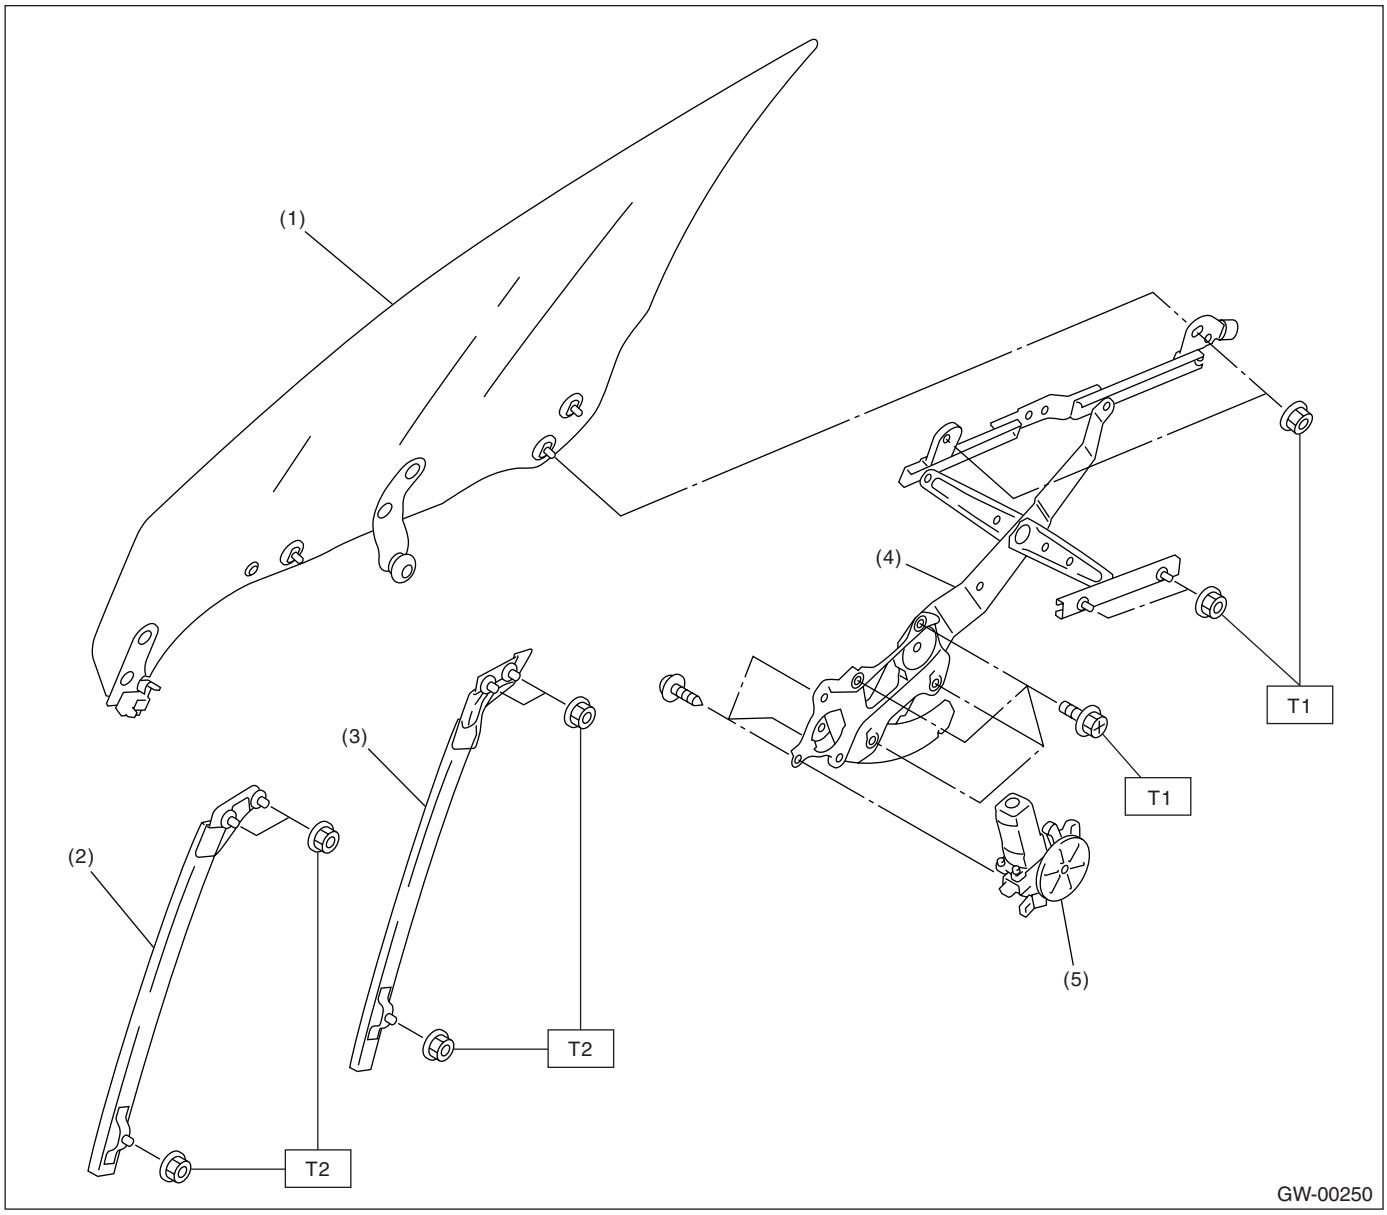

(1) Glass
(2) Door sash (Front)
(3) Door sash (Rear)
(4) Regulator ASSY
(5) Motor ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.4 (0.75, 5.5)
T2: 13.7 (1.4, 10.1)

4. REAR DOOR GLASS

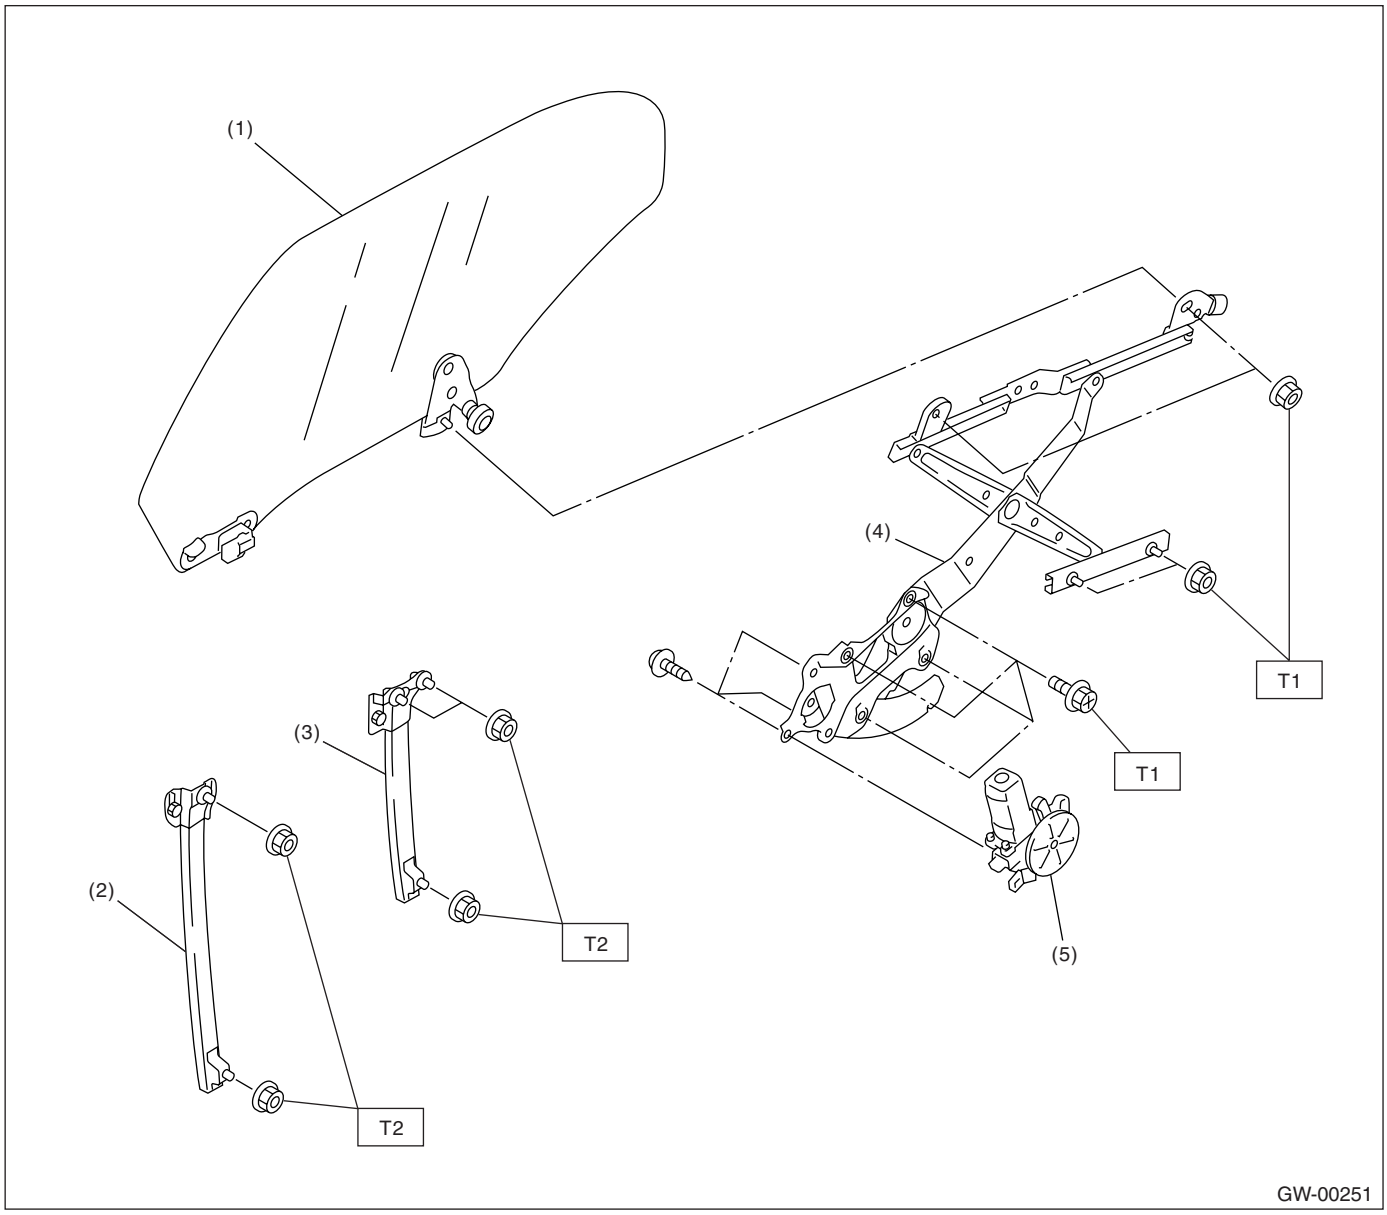

(1) Glass
(2) Door sash (Front)
(3) Door sash (Rear)
(4) Regulator ASSY
(5) Motor ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.4 (0.75, 5.5)
T2: 13.7 (1.4, 10.1)

5. MIRRORS

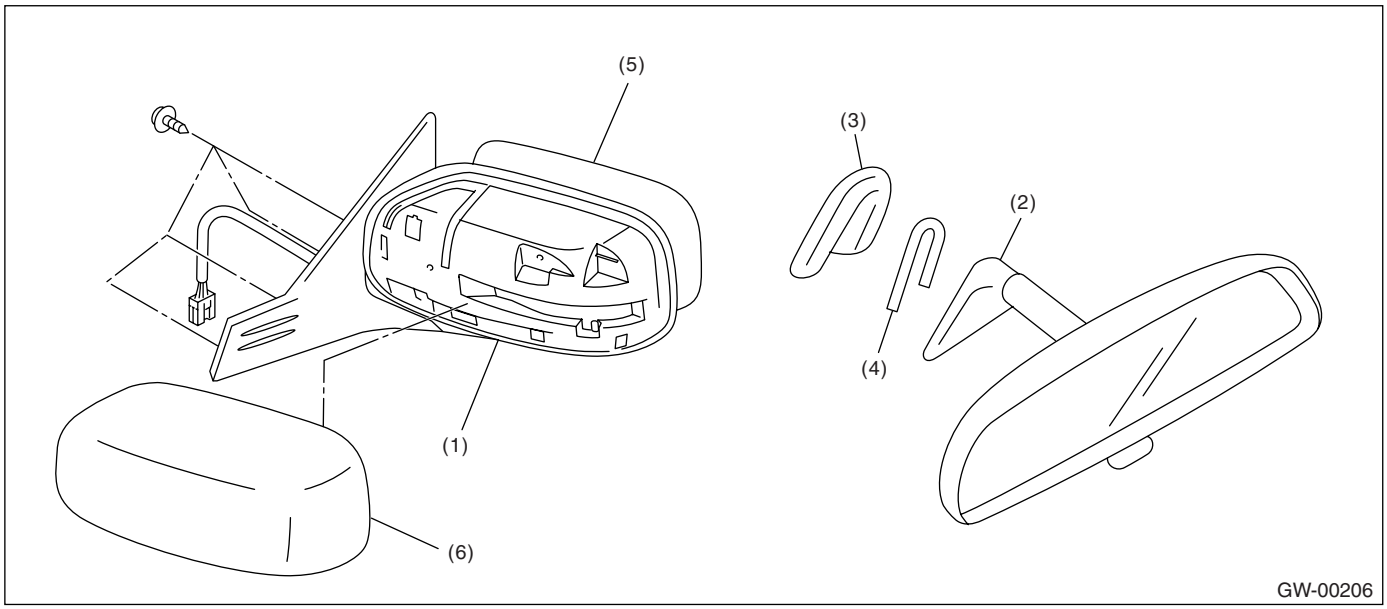

(1) Outer mirror
(2) Inner rearview mirror
(3) Mount
(4) Spring
(5) Mirror
(6) Scalp cap

B: CAUTION

- When the electrical connectors are disconnected, always conduct an operational check after connecting them again.
- Avoid impact and damage to glass.

C: PREPARATION TOOL

TOOL NAME	REMARKS
Circuit Tester	Used for checking voltage and continuity.
Piano Wire	Used for window glass removal.
Windshield Knife	Used for window glass removal.

2. Power Window System

A: SCHEMATIC

1. POWER WINDOW LHD MODEL

<Ref. to WI-228, LHD MODEL, SCHEMATIC, Power Window System.>

2. POWER WINDOW RHD MODEL

<Ref. to WI-232, RHD MODEL, SCHEMATIC, Power Window System.>

B: INSPECTION

Symptom	Repair order
All power windows do not operate.	(1) Fuse (SBF-6) (F/B No. 18: RHD model) (2) Power window circuit breaker (3) Power window relay (4) Wiring harness
One window does not operate.	(1) Power window main switch (2) Power window sub switch (3) Power window motor (4) Wiring harness
“Window Lock” does not operate.	(1) Power window main switch

3. Power Window Control Switch

A: REMOVAL

1. MAIN SWITCH

1) Disconnect the ground cable from battery.
2) Loosen the screw to remove the power window main switch.
3) Disconnect the connector.

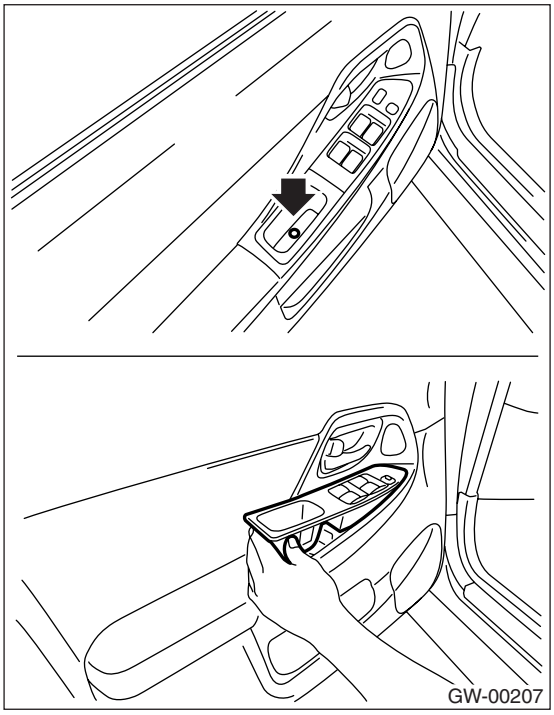

2. SUB-SWITCH

1) Disconnect the ground cable from battery.
2) Remove the switch panel.
3) Disconnect the connector.

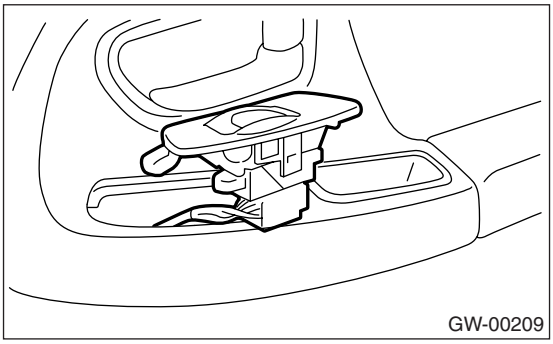

B: INSTALLATION

1. MAIN SWITCH

Install in the reverse order of removal.

2. SUB-SWITCH

Install in the reverse order of removal.

C: INSPECTION

1. MAIN SWITCH

• LHD MODEL

Measure the switch resistance.

	Switch position	Terminal No.	Standard
Driver's side	AUTO UP	13 and 2, 1 and 5	Less than 1 Ω
	UP	13 and 2, 1 and 5	Less than 1 Ω
	OFF	1 and 2 1 and 5 2 and 5	Less than 1 Ω
	DOWN	13 and 1, 2 and 5	Less than 1 Ω
	AUTO DOWN	13 and 1, 2 and 5	Less than 1 Ω
Front passenger's side	UP	13 and 7, 6 and 5	Less than 1 Ω
	OFF	5 and 6 5 and 7 6 and 7	Less than 1 Ω
	DOWN	13 and 6, 7 and 5	Less than 1 Ω
Rear LH	UP	10 and 13, 9 and 5	Less than 1 Ω
	OFF	5 and 11 5 and 10 11 and 10	Less than 1 Ω
	DOWN	13 and 11, 10 and 5	Less than 1 Ω
Rear RH	UP	13 and 16, 15 and 5	Less than 1 Ω
	OFF	5 and 15 5 and 16 15 and 16	Less than 1 Ω
	DOWN	13 and 15, 16 and 5	Less than 1 Ω

If NG, replace the main switch.

• RHD MODEL

Measure the switch resistance.

	Switch position	Terminal No.	Standard
Driver's side	AUTO UP	12 and 6, 7 and 1	Less than 1 Ω
	UP	12 and 6, 7 and 1	Less than 1 Ω
	OFF	1 and 6 1 and 7 6 and 7	Less than 1 Ω
	DOWN	12 and 7, 6 and 1	Less than 1 Ω
	AUTO DOWN	12 and 7, 6 and 1	Less than 1 Ω
Front passenger's side	UP	12 and 3, 2 and 1	Less than 1 Ω
	OFF	1 and 2 1 and 3 2 and 3	Less than 1 Ω
	DOWN	12 and 2, 3 and 1	Less than 1 Ω
Rear LH	UP	12 and 10, 9 and 1	Less than 1 Ω
	OFF	1 and 9 1 and 10 9 and 10	Less than 1 Ω
	DOWN	12 and 9, 10 and 1	Less than 1 Ω

Rear RH	UP	12 and 14, 1 and 13	Less than 1 Ω
	OFF	1 and 13 1 and 14 13 and 14	Less than 1 Ω
	DOWN	12 and 13, 14 and 1	Less than 1 Ω

If NG, replace the main switch.

2. SUB-SWITCH

Measure the switch resistance.

	Switch position	Terminal No.	Standard
Front passenger's side & rear	UP	8 and 5, 6 and 7	Less than 1 Ω
	OFF	4 and 5, 6 and 7	Less than 1 Ω
	DOWN	8 and 7, 4 and 5	Less than 1 Ω

If NG, replace the sub-switch.

4. Front Door Glass

A: REMOVAL

1) Remove the front door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
3) Remove the outer mirror assembly. <Ref. to GW-18, REMOVAL, Outer Mirror Assembly.>
4) Remove the gusset.

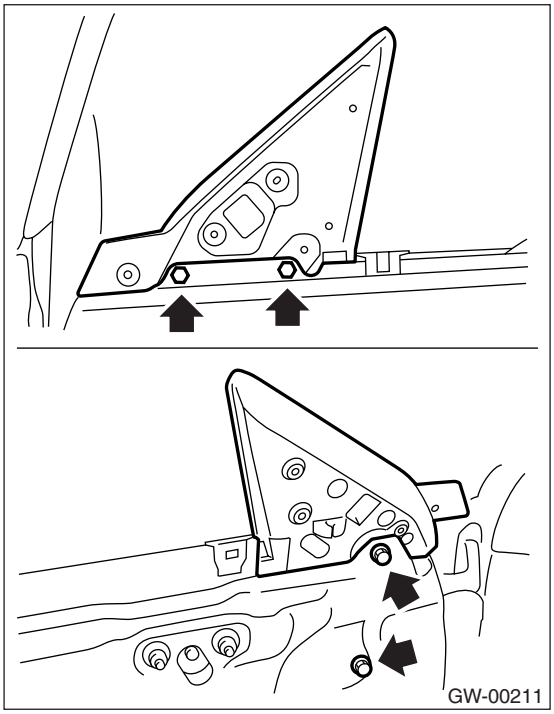

5) Remove the stabilizers and trim hooks.

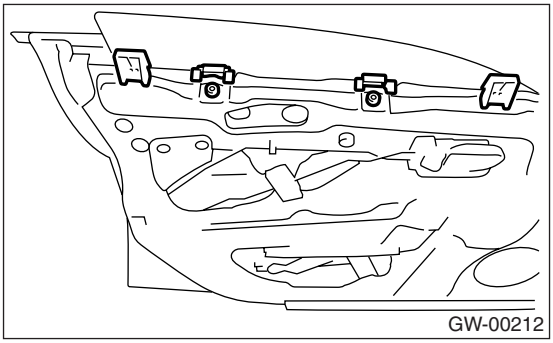

6) Remove the rear end of door weather strip and weather strip outer.

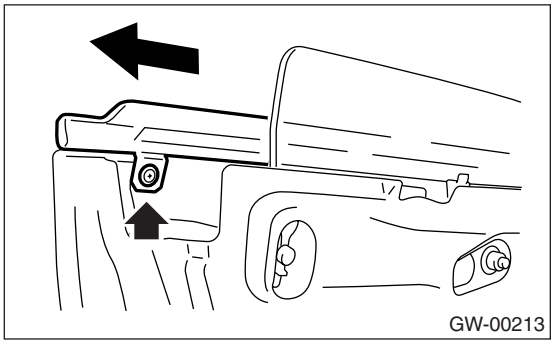

7) Operate the power window switch to move the glass to position shown in the figure, and then remove the two nuts from service holes.

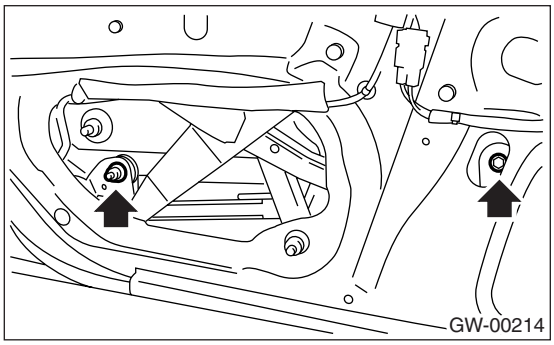

8) Take out the door glass.

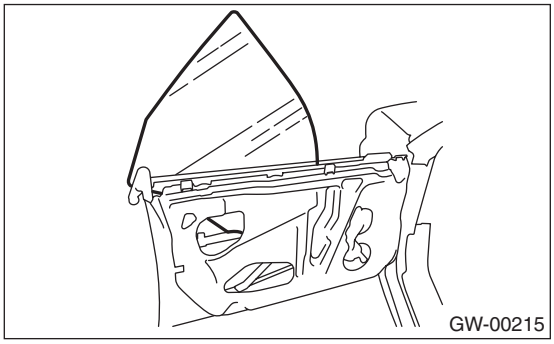

CAUTION:
• Do not turn the regulator in closing direction after removal of the glass. Otherwise gear may be disengaged.
• Avoid impact and damage to the glass.

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:
Make sure the glass stay is placed securely in sash.

2) Adjust the front door glass. <Ref. to GW-12, ADJUSTMENT, Front Door Glass.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>

C: ADJUSTMENT

NOTE:
Before adjustment, ensure that all adjusting bolts of stabilizer, upper stopper, and sash are loosened and door glass is raised so that it is in contact with weather strip.

1) Temporarily tighten one adjusting bolt on one side of rear sash at the midpoint of slotted hole in the inner panel.
2) Temporarily tighten the regulator B-channel in a position at the top of slotted hole.
3) Lower the door glass 10 to 15 mm (0.39 to 0.59 in) from fully closed position. While applying outward pressure of 45.0±5.0 N (4.5±0.5 kgf, 9.9±1.1 lb) (F) to upper edge of glass above midpoint of two outer stabilizers, press the inner stabilizer at pressure of 30±5 N (3.0±0.5 kgf, 6.6±1.1 lb) to the glass, then secure it.

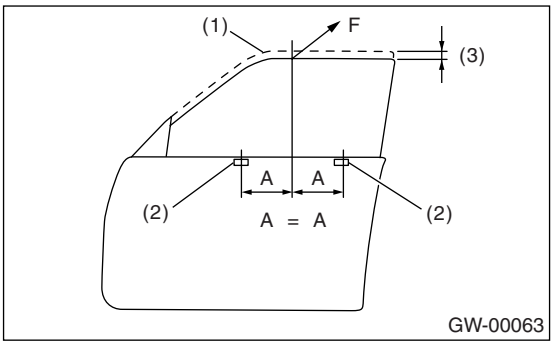

(1) Full close position
(2) Stabilizer
(3) 10 — 15 mm (0.39 — 0.59 in)

4) For adjustment of clearance between front glass and center pillar cover, loosen the nuts (A), and move the glass sash back and forward until clearance becomes the value shown.

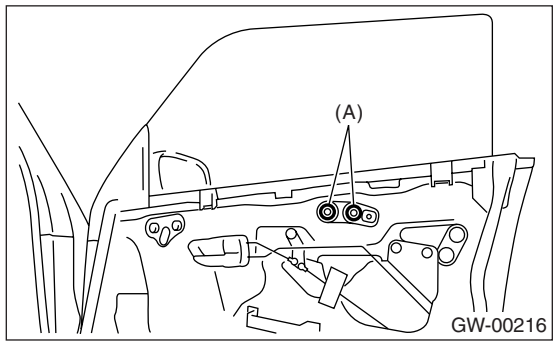

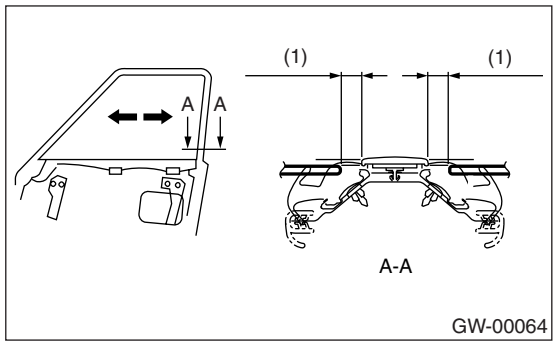

(1) 12 mm (0.472 in)

5) For adjustment of upper and lower ends of center pillar, loosen the adjusting nut (A) of B-channel (B).

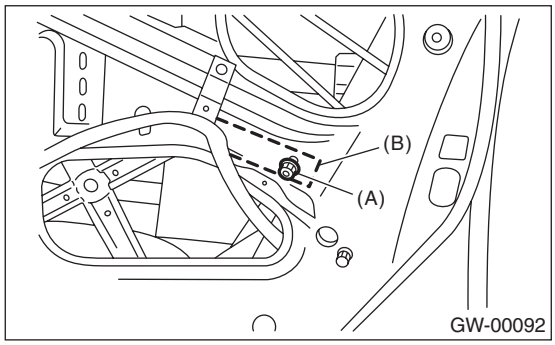

6) Adjust so that the upper and lower ends of center pillar are the same size.

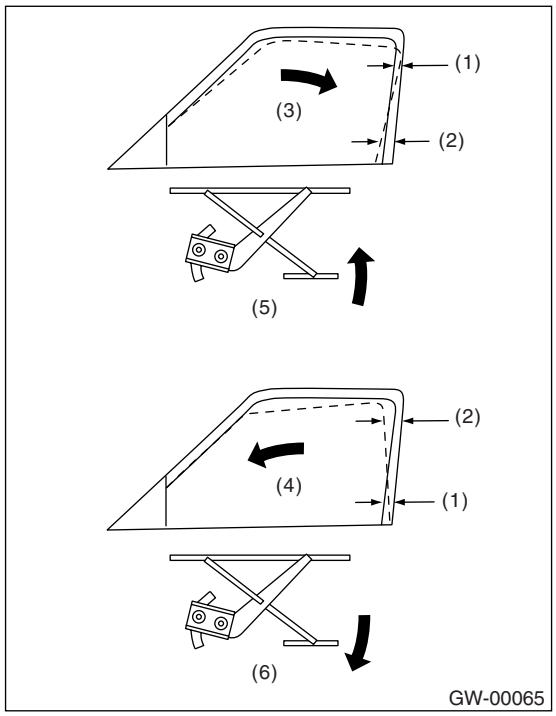

(1) Narrow
(2) Wide
(3) Glass tilts too far rearward
(4) Glass tilts too far forward
(5) Raise B channel
(6) Lower B channel

7) For glass stroke adjustment, close the door, raise glass until positional relationship between glass and weather strip becomes as shown. And secure the glass so that the upper stopper lightly touches the glass holder.

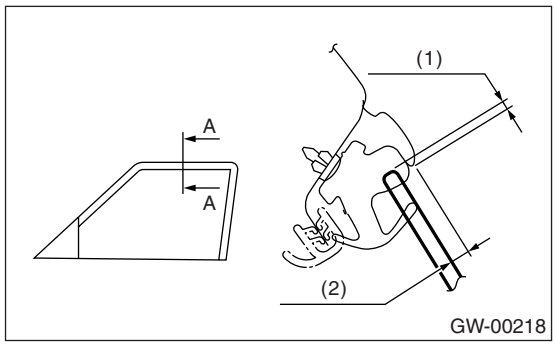

(1) 2 — 3 mm (0.079 — 0.118 in)
(2) 6 mm (0.236 in)

For preventing wind noise, adjust the glass at the position where tip of gusset is raised up a little.

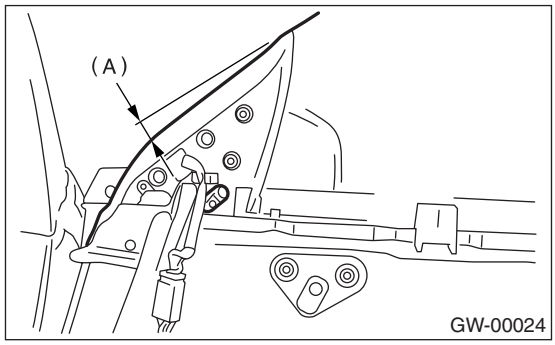

(A) 0 — 1.5 mm (0 — 0.059 in)

8) After stabilizer adjustment, carry out the glass crimp adjustment. First, visually ensure positional relationship between retainer & molding and glass of the roof side, and then begin with rear sash adjustment. Adjust two adjusting bolts alternately step by step to obtain dimensions shown below (cross-section A).

NOTE:
If two nuts are loosened at the same time, sash moves back and forth. Therefore, when one nut is adjusted, leave the other secured.

9) Make the same adjustment of two adjusting bolts of rear sash.

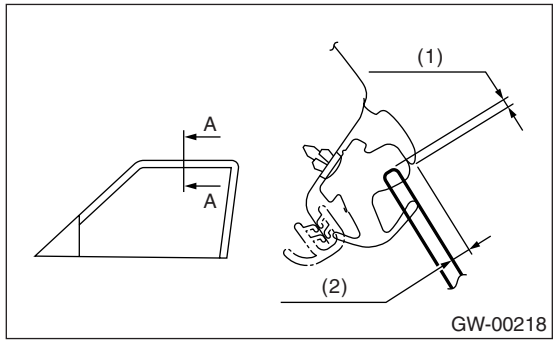

(1) 2 — 3 mm (0.079 — 0.118 in)
(2) 6 mm (0.236 in)

NOTE:
Do not tilt the sash bracket to inner panel during adjustment. Otherwise smooth regulator operation cannot be achieved.

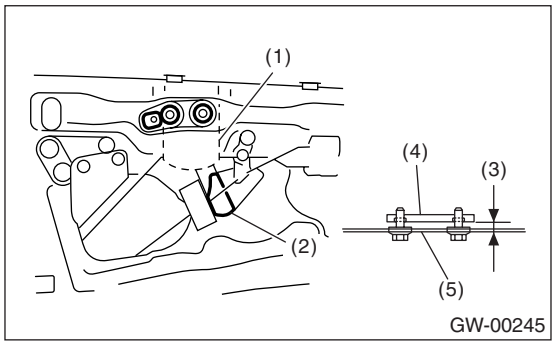

(1) Sash bracket
(2) Rear sash
(3) Adjust a line parallel
(4) Sash
(5) Inner panel

10) Make adjustment of front sash in the same manner as that of rear sash.

NOTE:
Although front and rear sashes must, as a rule, be adjusted in the same manner, in some door installation, the adjustment in a different manner may be required. However, adjustment of one sash to the maximum amount and the other to the minimum amount is not permitted. Such adjustment may result in application of excessive load to regulator.

11) After adjustments, tighten the nuts.

12) After adjustment to glass, close the door. If there is a gap between outer lip of gusset and glass surface, adjust the gap with adjusting bolt (A) in lower fitting part of the gusset to prevent generation of wind noise.

13) During adjustments, loosen the other three clamping bolts.

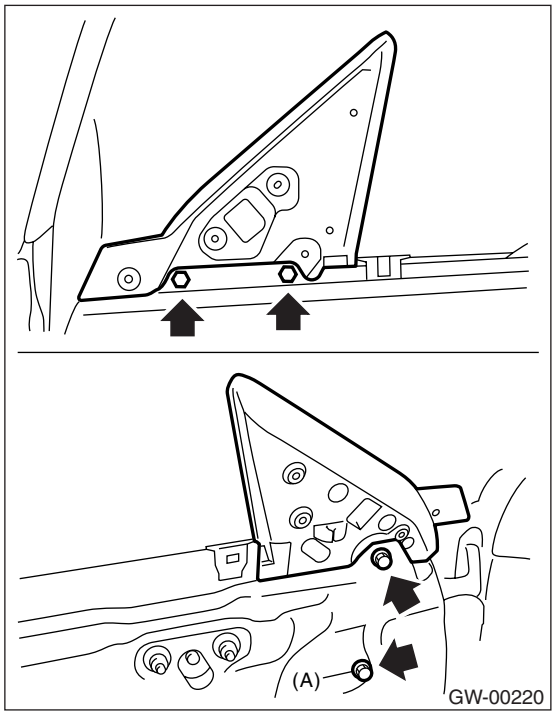

14) After adjustment, tighten the bolts and nuts.

5. Front Regulator and Motor Assembly

A: REMOVAL

1) Remove the door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
2) Loosen the nuts to remove the rear sash.

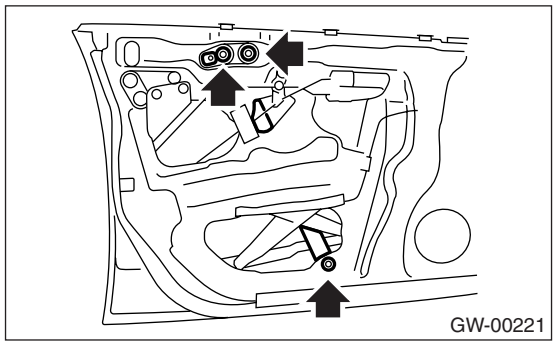

3) Disconnect the motor connector.
4) Loosen the four bolts and two nuts to remove the regulator assembly.

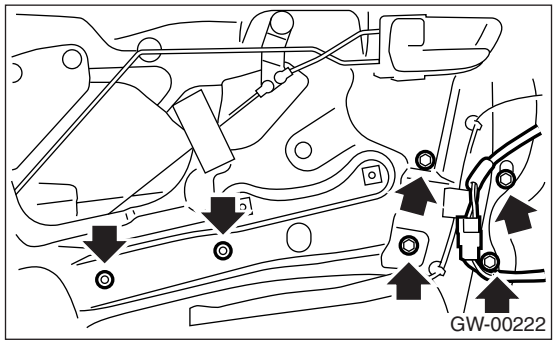

5) Loosen the screw to remove motor assembly.

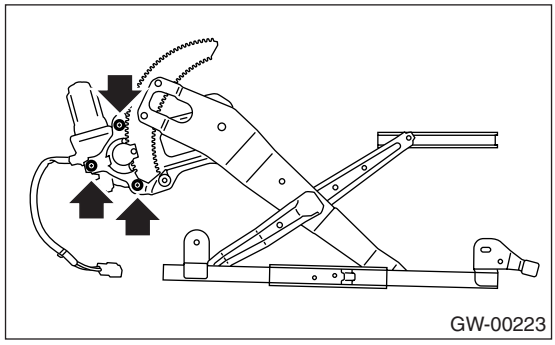

B: INSTALLATION

1) Install in the reverse order of removal.
2) Adjust the front door glass. <Ref. to GW-12, ADJUSTMENT, Front Door Glass.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

1) Make sure the power window motor rotates properly when battery voltage is applied to the terminals of motor connector.
2) Change polarity of battery connections to terminals to ensure the motor rotates in reverse direction.

6. Remote Control Mirror System

A: SCHEMATIC

1. REMOTE CONTROL MIRROR LHD MODEL

<Ref. to WI-243, LHD MODEL, SCHEMATIC, Remote Controlled Rearview Mirror System.>

2. REMOTE CONTROL MIRROR RHD MODEL

<Ref. to WI-244, RHD MODEL, SCHEMATIC, Remote Controlled Rearview Mirror System.>

B: INSPECTION

Symptom	Repair order
All functions do not operate.	(1) Fuse (F/B No. 1) (F/B No. 4) (F/B No. 19) (2) Mirror switch (3) Wiring harness
One side of the mirror motor does not operate.	(1) Mirror switch (2) Mirror motor (3) Wiring harness
Mirror heater does not operate.	(1) Mirror switch (2) Mirror heater (3) Wiring harness

7. Scalp Cap

A: REPLACEMENT

1) Turn the rearview mirror downward.
2) Insert a thin screw driver, push the clip part of scalp cap, and remove the scalp cap.

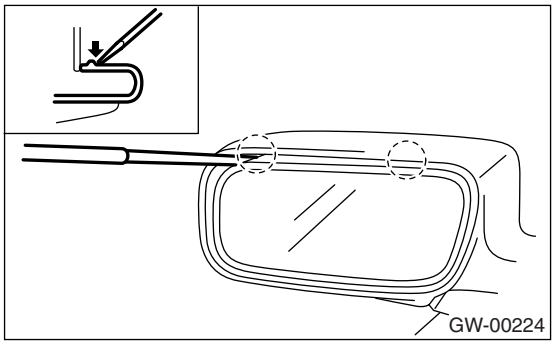

3) Insert the claw at the bottom of scalp cap into door mirror.

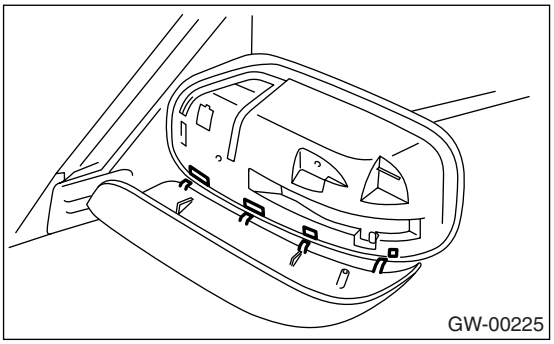

4) Install the scalp cap securely.

8. Outer Mirror Assembly

A: REMOVAL

1) Remove the scalp cap. <Ref. to GW-17, REPLACEMENT, Scalp Cap.>
2) Remove the door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
3) Remove the mirror gusset cover.

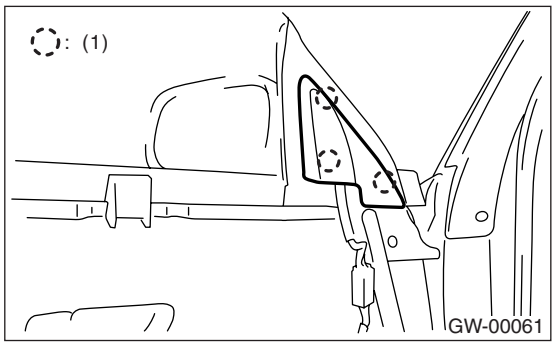

(1) Hook

4) Disconnect the mirror connector.
5) Loosen the screws to remove the mirror assembly.

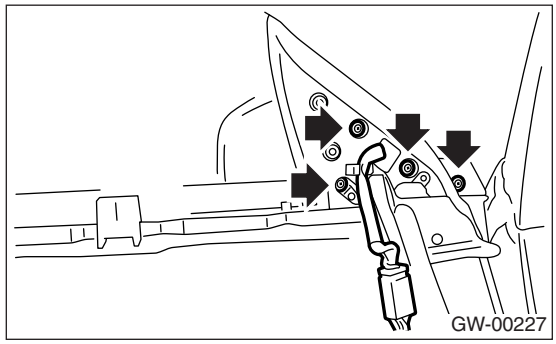

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check to ensure that the rearview mirror moves properly when battery voltage is applied to terminals.

Mirror heater not-equipped model:

Switch position	Terminal No.
OFF	—
UP	4 (+) and 6 (–)
DOWN	6 (+) and 4 (–)
LEFT	5 (+) and 6 (–)
RIGHT	6 (+) and 5 (–)

If NG, replace the mirror.

Mirror heater equipped model:

Switch position	Terminal No.
OFF	—
UP	6 (+) and 8 (–)
DOWN	8 (+) and 6 (–)
LEFT	7 (+) and 8 (–)
RIGHT	8 (+) and 7 (–)

If NG, replace the mirror.

9. Outer Mirror

A: REPLACEMENT

1) Remove the outer mirror assembly. <Ref. to GW-18, REMOVAL, Outer Mirror Assembly.>
2) Warm the area around the mirror holder (A) with a hair drier until the edges of the mirror holder become soft (about 2 or 3 minutes with a 1,000 W drier.)
3) Use a flat tip screwdriver without sharp edges to lift the mirror out of the mirror holder (A).
4) Disconnect the mirror heater connector from back of mirror. (model with mirror heater)

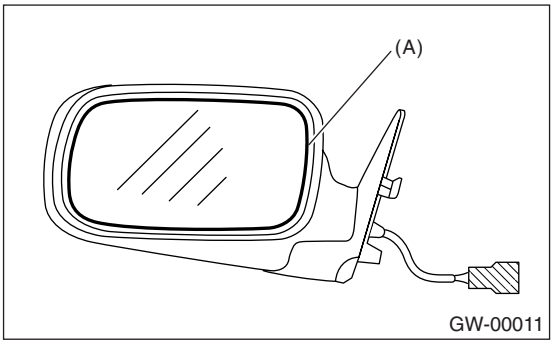

5) Warm the area around the mirror holder with a hair drier until the edges of the mirror holder become soft (about 2 or 3 minutes with a 1,000 W drier.)
6) Remove the backing of the new double-stick tape, and push the mirror in to install it.

NOTE:
Unless the mirror holder is warmed sufficiently, the mirror holder edges may be damaged or the mirror cracked.

10. Remote Control Mirror Switch

A: REMOVAL

1) Remove the console cover.
2) Disconnect the connector.

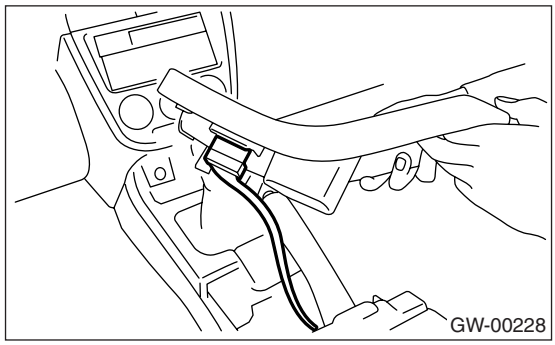

3) Remove the remote control mirror switch from console cover.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Move the rearview mirror switch to each position and check continuity between terminals.

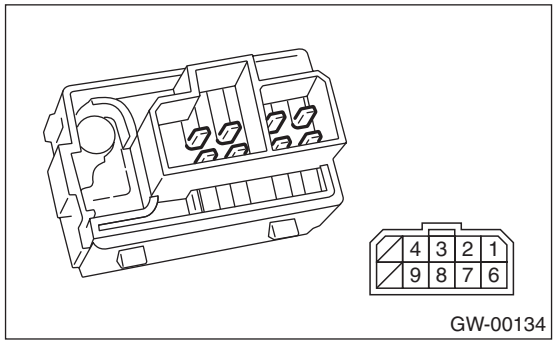

Change over switch right position:

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
UP	4 and 6, 2 and 1	Less than 1 Ω
DOWN	6 and 2, 4 and 1	Less than 1 Ω
LEFT	4 and 8, 2 and 1	Less than 1 Ω
RIGHT	8 and 2, 4 and 1	Less than 1 Ω

Change over switch left position:

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
UP	4 and 7, 2 and 1	Less than 1 Ω
DOWN	7 and 2, 4 and 1	Less than 1 Ω
LEFT	4 and 9, 2 and 1	Less than 1 Ω
RIGHT	9 and 2, 4 and 1	Less than 1 Ω

If NG, replace the switch.

11.Rear Door Glass

A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
2) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
3) Remove the stabilizer and trim hook.

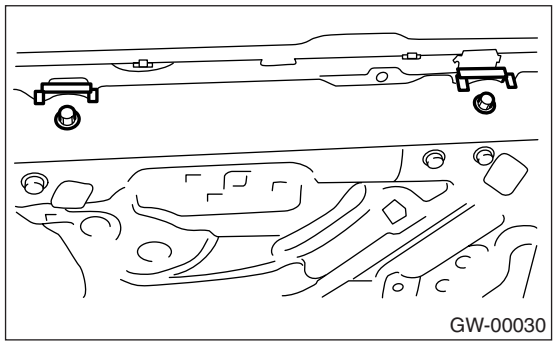
GW-00030

4) Remove the front end and rear end of door weather strip.

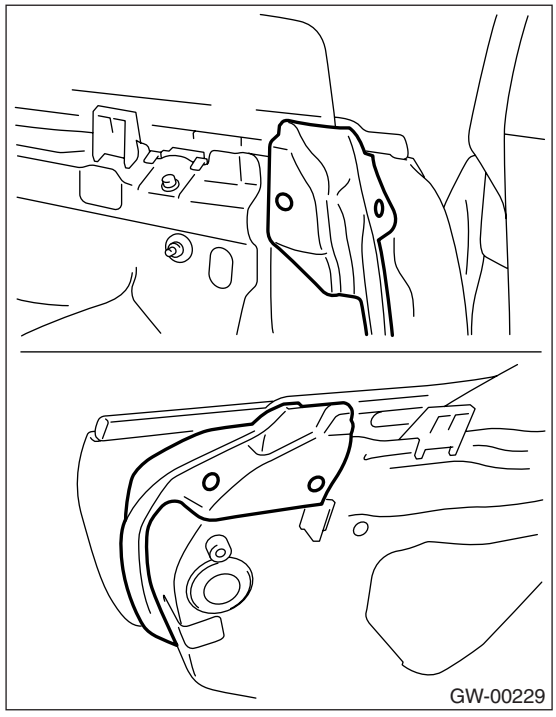
GW-00229

5) Loosen the two screws to remove the weather strip outer.

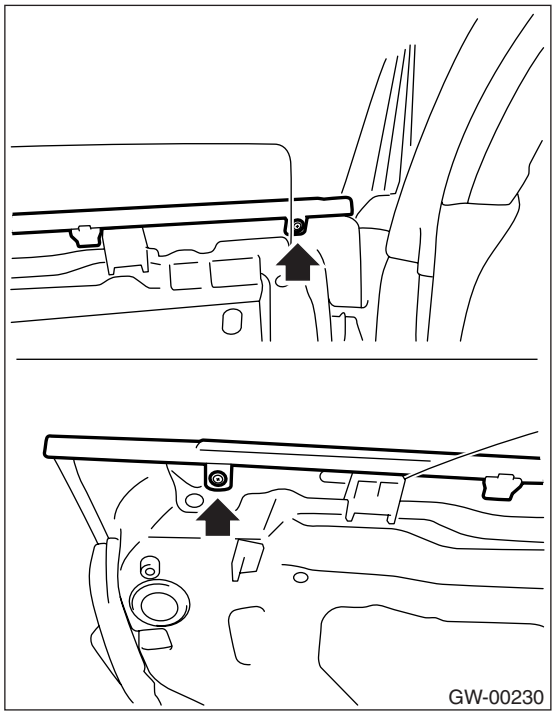
GW-00230

6) Operate the power window switch to move the glass to position shown in the figure, and then remove two nuts from service holes.

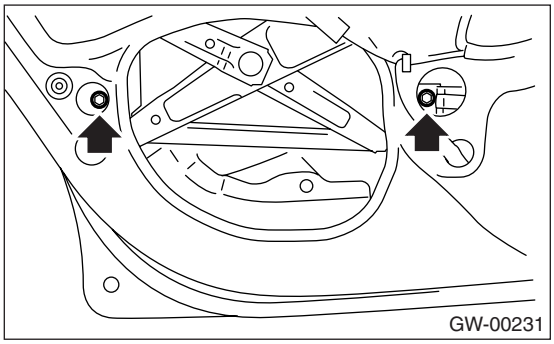
GW-00231

7) Loosen the two rear sash installation nuts, and then move the rear sash backward.
8) Remove the glass.

CAUTION:
Avoid impact and damage to the glass.

B: INSTALLATION

1) Install in the reverse order of removal.

NOTE:
Make sure the glass stay is placed securely in sash.

2) Adjust the rear door glass. <Ref. to GW-22, ADJUSTMENT, Rear Door Glass.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: ADJUSTMENT

NOTE:
The rear door glass, as a rule, should be adjusted in the same manner as front glass, although they are different in dimension. Special notes for the rear glass are given below.

1) Adjust the glass position using the following dimensions as a guide line.

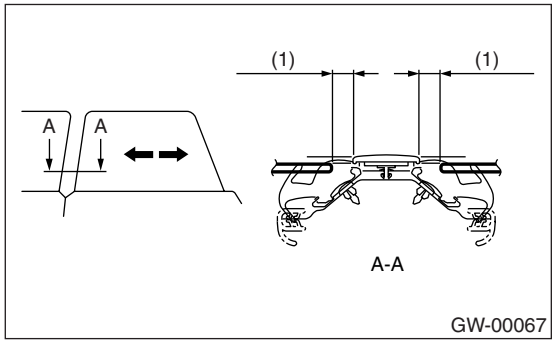

(1) 12 mm (0.472 in)

NOTE:
• If the dimensions are smaller than the given dimensions, glass may get caught in weather strip during lifting/lowering operation. In the worst case, it may cause the glass not to be opened fully.
• After adjustment, move the glass up and down to check whether it is caught.

2) Adjust the contact degree of glass using the following dimensions as a guide line.

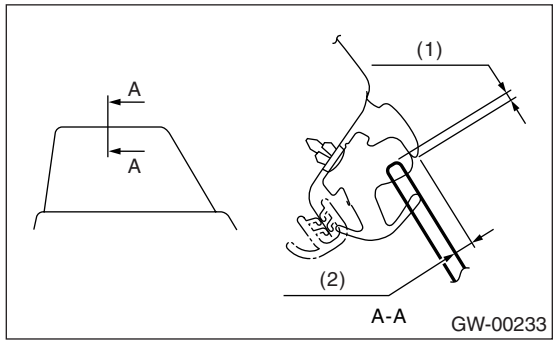

(1) 2 — 3 mm (0.079 — 0.118 in)
(2) 6 mm (0.236 in)

NOTE:
• If the contact degree of rear glass is higher than necessary, glass may get caught in weather strip of center pillar corner, resulting in early wear of weather strip. Be careful when adjusting.
• After adjustment, move the glass up and down to check whether it is caught.

12. Rear Regulator and Motor Assembly

A: REMOVAL

1) Remove the rear door glass. <Ref. to GW-21, REMOVAL, Rear Door Glass.>
2) Remove the front sash.
3) Disconnect the motor connector.
4) Loosen the four bolts and two nuts to remove regulator assembly.

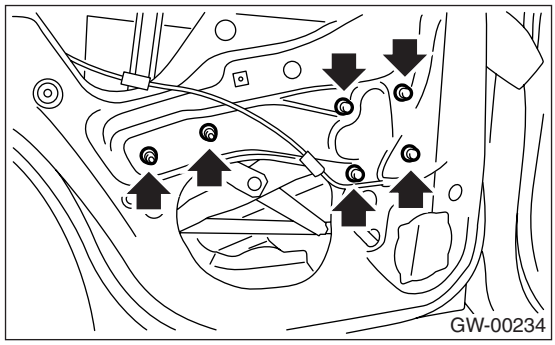

5) Loosen the screws to remove motor assembly.

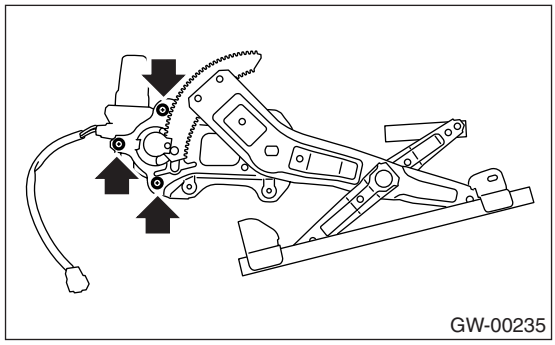

B: INSTALLATION

1) Install in the reverse order of removal.
2) Adjust the rear door glass. <Ref. to GW-22, ADJUSTMENT, Rear Door Glass.>

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

1) Make sure that the power window motor rotates properly when battery voltage is applied to terminals of motor connector.
2) Change polarity of battery connections to terminals to ensure that the motor rotates in reverse direction.

13.Windshield Glass

A: REMOVAL

1. USING WINDSHIELD KNIFE

1) Remove the cowl panel. <Ref. to EI-32, REMOVAL, Cowl Panel.>
2) Remove the glass molding.
3) Tape the body side of the circumference of windshield glass for protection.
4) Apply sufficient amount of soapy water to the adhesive layer.
5) Insert the windshield knife into the adhesive layer.
6) While holding the knife edge and windshield glass edge at a right angle, move the windshield knife in parallel to the windshield glass edge along face and edge of windshield glass to cut the adhesive layer.

NOTE:
• Do not twist the windshield knife.
• Cutting of adhesive layer shall be started with wider gap between windshield glass and body.

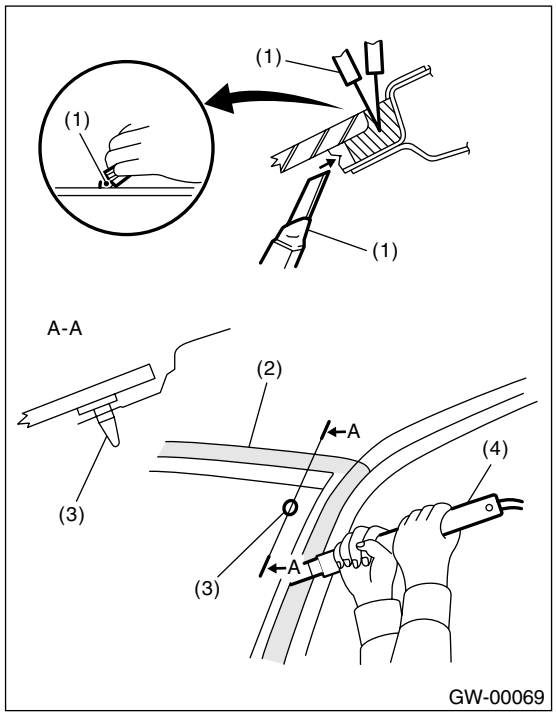

(1) Putty knife
(2) Protective tape
(3) Matching pin
(4) Windshield knife

• Because the matching pins are bonded to corners of glass, use piano wire to cut the pin.

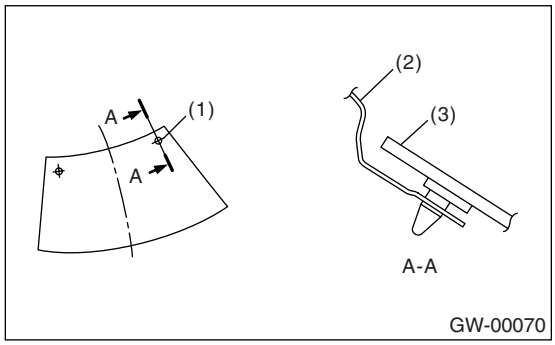

(1) Matching pin
(2) Body
(3) Windshield glass

2. USING PIANO WIRE

1) Remove the cowl panel. <Ref. to EI-32, REMOVAL, Cowl Panel.>
2) Remove the roof molding and upper front molding.
3) Tape the body side of circumference of windshield glass for protection.
4) Make a hole in adhesive layer using a drill or knife.
5) Pass the piano wire through hole, and attach securely both the piano wire ends to pieces of wood.

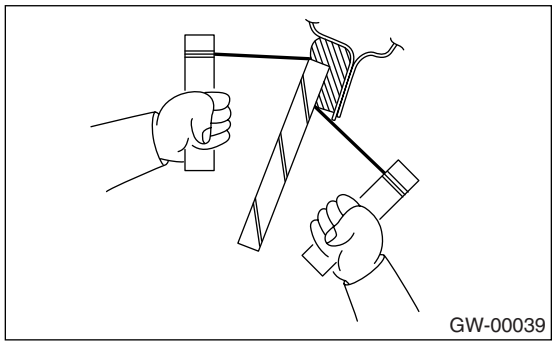

6) Pull the wire ends alternately to cut off the adhesive layer.

CAUTION:
• Do not tightly pull the piano wire against the windshield glass edge.
• Be careful not to damage the interior and exterior parts.
• When removal is made with area close to instrument panel, place a protection plate over it. Pay particular attention to the removal.
• Do not cross piano wires. Otherwise they may be cut.

B: INSTALLATION

1) Clean the external circumference of windshield glass with alcohol or white gasoline.
2) Remove the adhesive layer on the body using cutter knife to obtain smooth face 2 mm (0.08 in) thick.

CAUTION:
Be careful not to damage the body and paint surface.

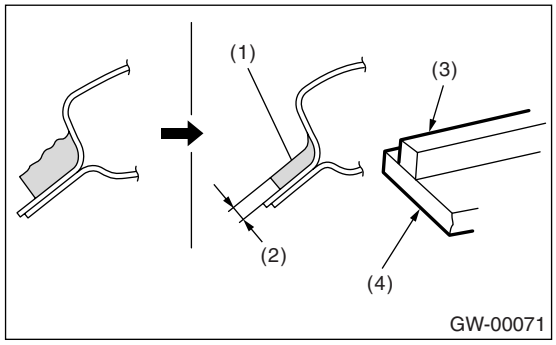

(1) Adhesive
(2) 2 mm (0.08 in)
(3) Dam rubber
(4) Glass

3) Clean the body with alcohol or white gasoline to remove thoroughly chips, dusts, and dirt from body face.
4) Place the glass on body.
5) Adjust the glass position to make uniform clearance between body and glass in four corners.

6) Place the matching pins and body on glass.

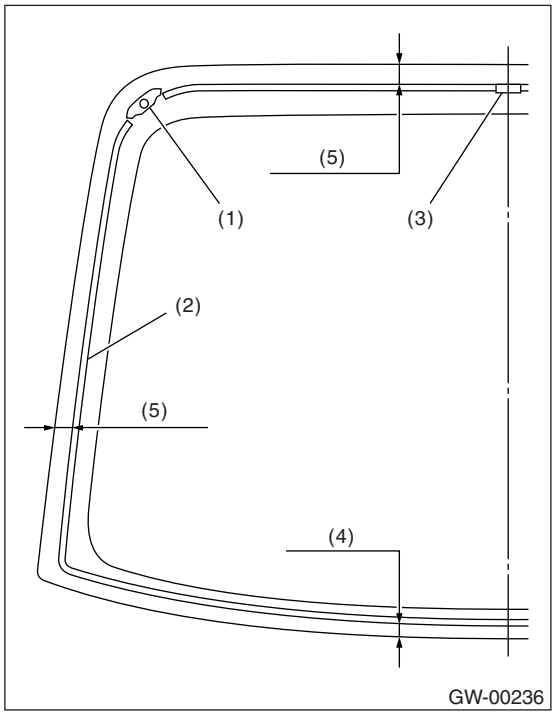

(1) Matching pin
(2) Dam rubber
(3) Fastener
(4) 15 mm (0.591 in)
(5) 11 mm (0.433 in)

7) Remove the glass from body.
8) Fit the molding mark (B) to notch (A) and install it.

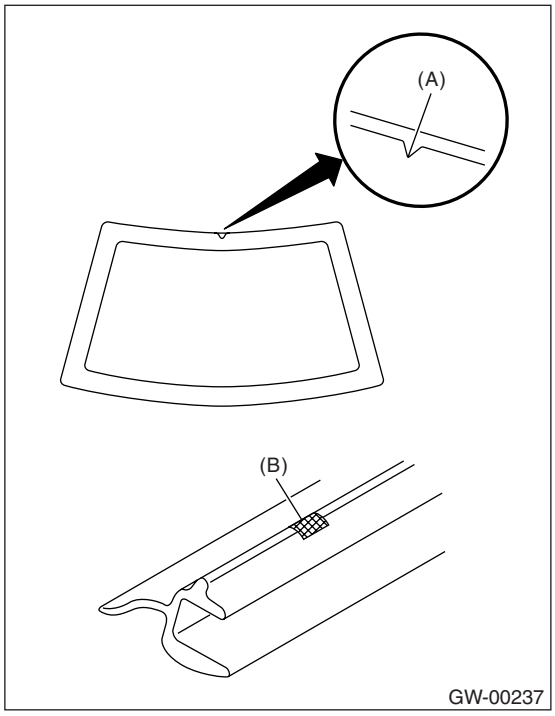

9) Apply primer to the adhesive layer of glass using sponge.

Glass primer:
Betawipe VPO 4604 or Betaprime 5001 or equivalent

10) Apply primer to adhesive layer of body.

Painted surface primer:
Betaprime 5402 or equivalent

NOTE:
• Primer once attached to painted surface of the body and internal trim is hard to wipe off. Mask the circumference of such areas.
• Let the primer dry for about ten minutes before installing the glass.
• Do not touch the surface coated with primer.

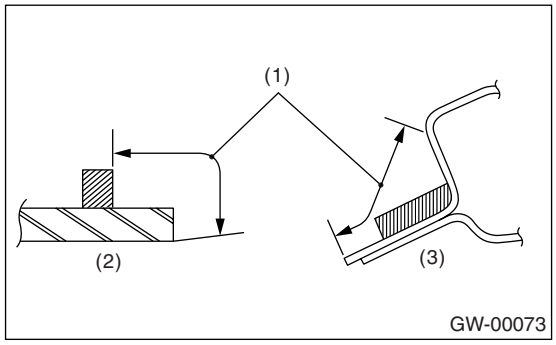

(1) Application of primer
(2) Glass side
(3) Body side

11) Cut off the cartridge nozzle tip as shown and set it in sealant gun.

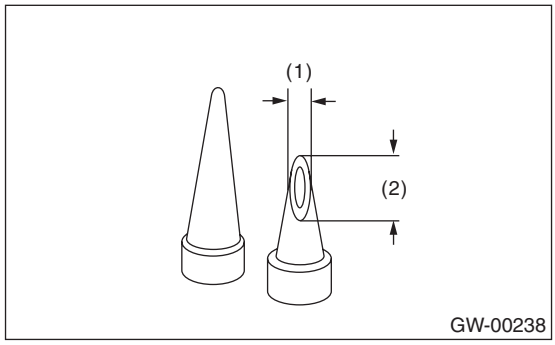

(1) 10 mm (0.39 in)
(2) 15 mm (0.59 in)

12) Apply adhesive to the glass end surface as shown.

Adhesive:
Gurit-ESSEX Betaseal 1502 or equivalent

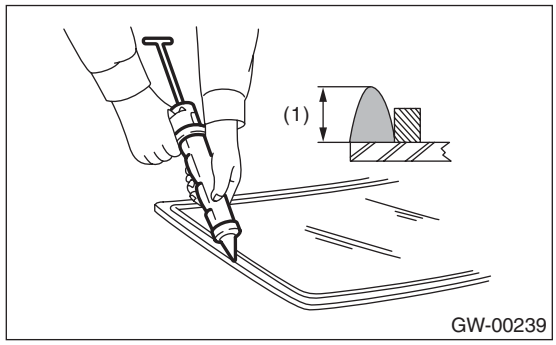

(1) 12 — 15 mm (0.47 — 0.59 in)

13) Fit the matching pins using suction rubber cup to install the windshield glass.

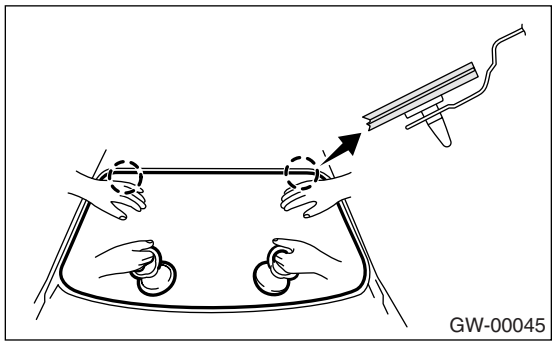

14) Lightly press the windshield glass for tight fit.
15) Make flush the adhesive surface jutted out using spatula.
16) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:
• When the door is opened/closed after glass is bonded, always lower the door glass and then open/close it carefully.
• Move the vehicle slowly.
• For minimum drying time and time the vehicle must be left standing before driving after bonding, follow the instructions or instruction manual from adhesive manufacturer.

17) After curing of adhesive, pour water on external surface of vehicle to check that there are no water leaks.

NOTE:
When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

18) Install the cowl panel. <Ref. to EI-32, INSTALLATION, Cowl Panel.>

14.Rear Gate Glass

A: REMOVAL

1) Remove the rear wiper motor. <Ref. to WW-17, REMOVAL, Rear Wiper Motor.>
2) Disconnect the electrical connector from rear defogger terminal.
3) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-24, REMOVAL, Windshield Glass.>

B: INSTALLATION

1) Apply adhesive in the same procedure as for windshield glass. <Ref. to GW-25, INSTALLATION, Windshield Glass.>
2) Insert the glass clip pin into the rear gate hole, and after pushing on the area around the clip pin to secure it, push lightly all around the area to seal it.
3) About one hour after installation, conduct a water leak test.

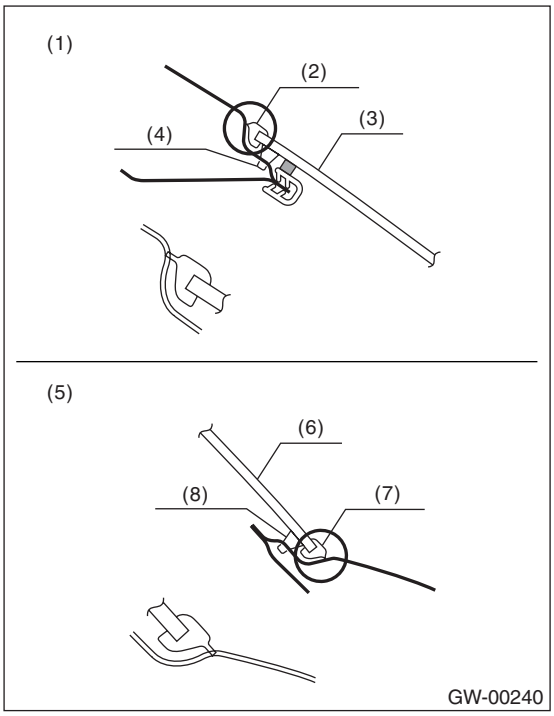

(1) Upper side
(2) Molding
(3) Glass
(4) Adhesive
(5) Lower side
(6) Glass
(7) Molding
(8) Adhesive

4) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:
• When the door is opened/closed after glass is bonded, always lower the door glass and then open/close it carefully.
• Move the vehicle slowly.
• For minimum drying time and time the vehicle must be left standing before driving after bonding, follow the instructions or instruction manual from adhesive manufacturer.
• When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

5) Connect the rear defogger terminals.
6) Install the rear wiper. <Ref. to WW-17, INSTALLATION, Rear Wiper Motor.>

15.Rear Window Glass

A: REMOVAL

1) Disconnect the electrical connectors from rear defogger terminals.
2) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-24, REMOVAL, Windshield Glass.>

B: INSTALLATION

1) Bond the dam rubber and matching pin.

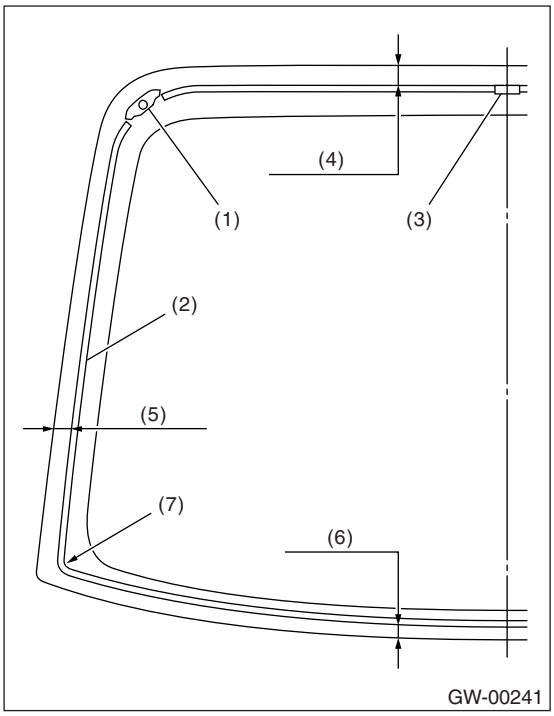

(1) Matching pin
(2) Dam rubber
(3) Fastener
(4) 14.5 mm (0.571 in)
(5) 8 mm (0.315 in)
(6) 22 mm (0.866 in)
(7) R20

2) Install the glass in the same procedure as for windshield glass. <Ref. to GW-25, INSTALLATION, Windshield Glass.>
3) Connect the rear defogger terminals.
4) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:
• When the door is opened/closed after glass is bonded, always lower the door glass and then open/close door carefully.
• Move the vehicle slowly.
• For minimum drying time and time the vehicle must be left standing before driving after bonding, follow the instructions or instruction manual from adhesive manufacturer.

5) After curing of adhesive, pour water on external surface of vehicle to check that there are no water leaks.

NOTE:
When a vehicle is returned to user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

16.Rear Window Defogger System

A: SCHEMATIC

1. REAR WINDOW DEFOGGER LHD MODEL

<Ref. to WI-241, LHD MODEL, SCHEMATIC, Rear Window Defogger System.>

2. REAR WINDOW DEFOGGER RHD MODEL

<Ref. to WI-242, RHD MODEL, SCHEMATIC, Rear Window Defogger System.>

B: INSPECTION

Symptom	Repair order
Rear window defogger does not operate.	(1) Fuse (M/B No. 1) (F/B No. 17) (2) Rear defogger relay (3) Rear defogger timer (4) Defogger switch (5) Rear defogger condenser (6) Defogger wire (7) Wiring harness

17.Rear Window Defogger

A: INSPECTION

CAUTION:
When wiping stain on glass off with cloth, use a dry and soft cloth and move it in the direction of heat wire extension to avoid damage to heat wire.

1) Turn the ignition switch to ON.
2) Turn the defogger switch to ON.
3) Wrap the tips of tester pins with aluminum foil to avoid damage to heat wire.

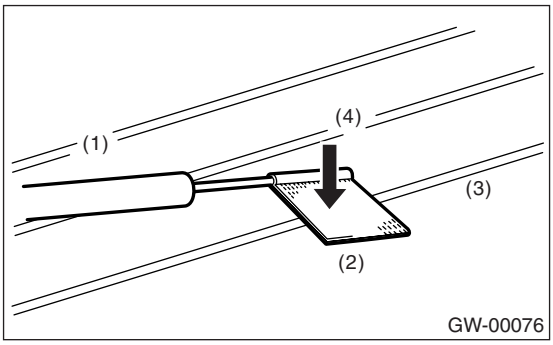

(1) Tester probe
(2) Aluminum foil
(3) Heat wire
(4) Press

4) Measure the voltage at wire center (1) with DC voltmeter.

Standard voltage:
Approx. 6 V

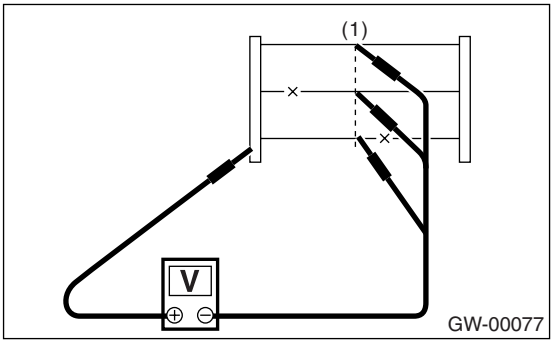

Voltage	Criteria
Approx. 6 V	OK
Approx. 12 V or 0 V	Broken

NOTE:
• If the measured value is 12 volts, heat wire is open between wire center and positive (+) end.
• If zero volt, heat wire is open between wire center and ground.

5) Apply positive lead of voltmeter to positive terminal of voltmeter, and then move the negative lead along the wire up to negative terminal end. If voltage changes from zero to several volts during movement of lead, heat wire is open at the voltage change point.

B: REPAIR

1) Clean the broken portion with alcohol or white gasoline.
2) Mask both side of wire with thin film.
3) Apply conductive silver composition (DUPONT No. 4817) to broken portion.

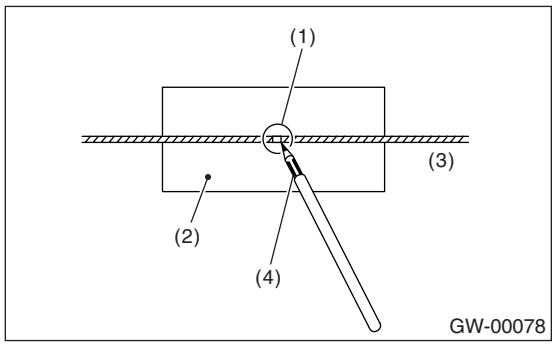

(1) Broken portion
(2) Masking thin film
(3) Broken wire
(4) Conductive silver composition (DUPONT No.4817)

4) After repair, check the wire.

18.Rear Quarter Glass

A: REMOVAL

Remove the glass in the same procedure as for windshield glass. <Ref. to GW-24, REMOVAL, Windshield Glass.>

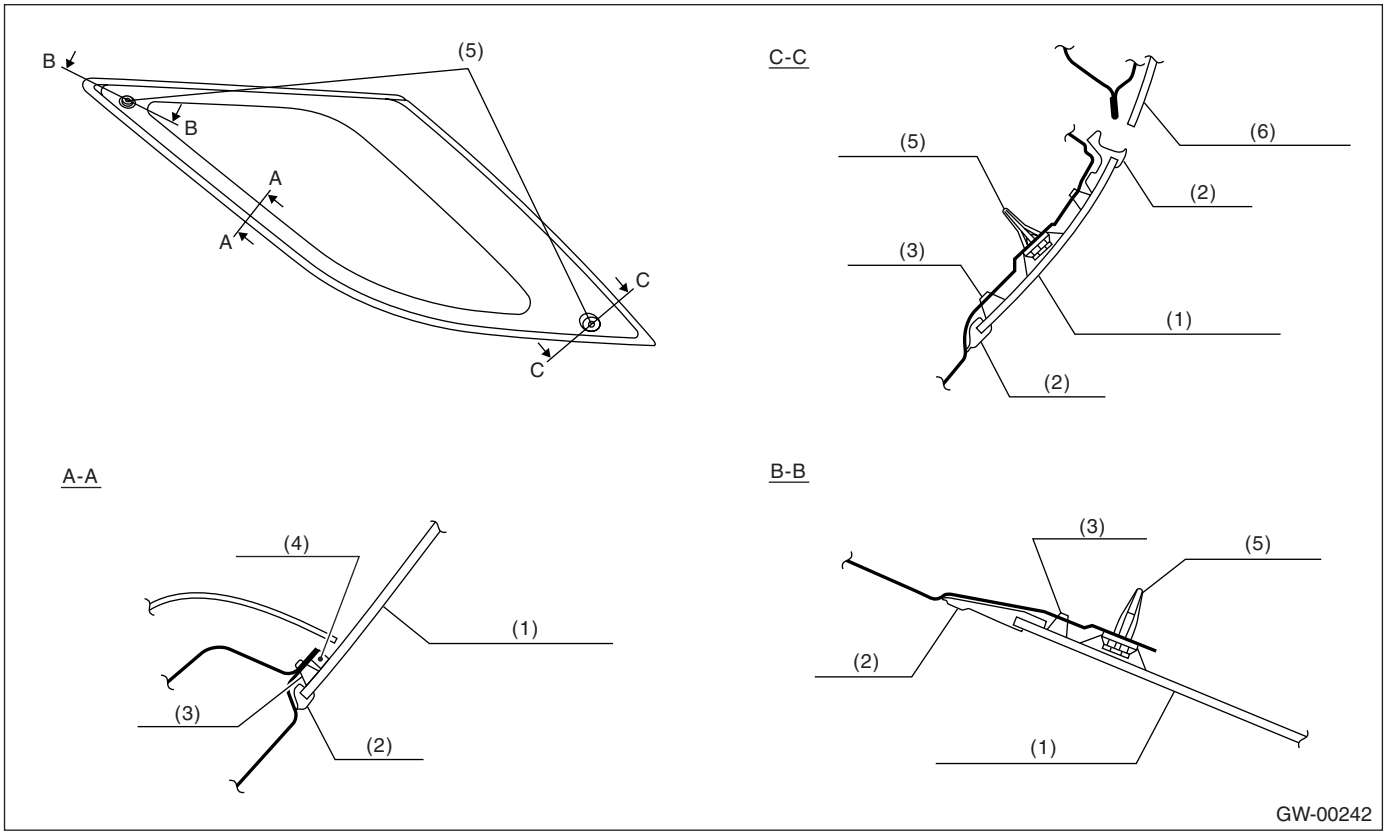

(1) Rear quarter glass
(2) Molding
(3) Adhesive
(4) Dam rubber
(5) Matching pin
(6) Rear gate glass

B: INSTALLATION

1) Cut off the nozzle tip as shown in the figure.

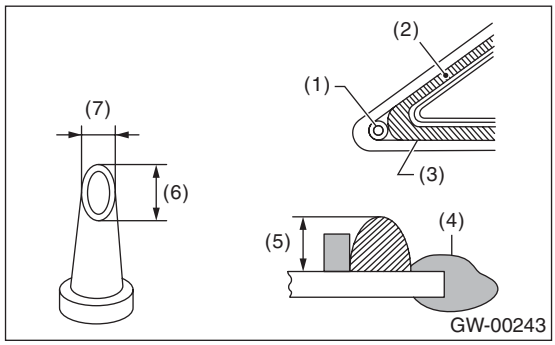

(1) Matching pin
(2) Dam rubber
(3) Adhesive
(4) Molding
(5) 12 — 15 mm (0.47 — 0.59 in)
(6) 15 mm (0.59 in)
(7) 10 mm (0.39 in)

2) Install the glass in the same procedure as for windshield glass. <Ref. to GW-25, INSTALLATION, Windshield Glass.>
3) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:
• When the door is opened/closed after glass is bonded, always lower the door glass and then open/close it carefully.
• Move the vehicle slowly.
• For minimum drying time and time the vehicle must be left standing before driving after bonding, follow the instructions or instruction manual from adhesive manufacturer.

4) After curing of adhesive, pour water on external surface of vehicle to check that there are no water leaks.

NOTE:
When a vehicle is returned to user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

19.Roof Window Glass

A: REMOVAL

<Ref. to SR-5, REMOVAL, Sunroof Lid.>

B: INSTALLATION

<Ref. to SR-5, INSTALLATION, Sunroof Lid.>

C: ADJUSTMENT

<Ref. to SR-5, ADJUSTMENT, Sunroof Lid.>

20.Inner Rearview Mirror

A: REMOVAL

NOTE:
The spring cannot be reused. Prepare a new spring before removal.

1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

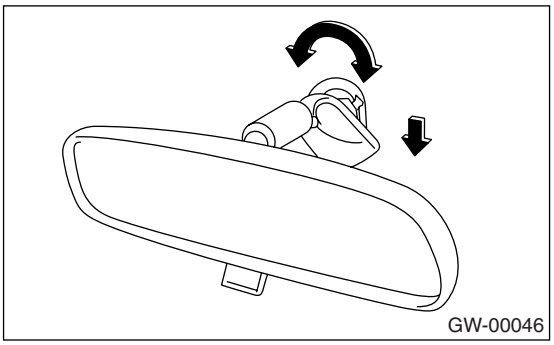

2) Remove the spring from mirror base.

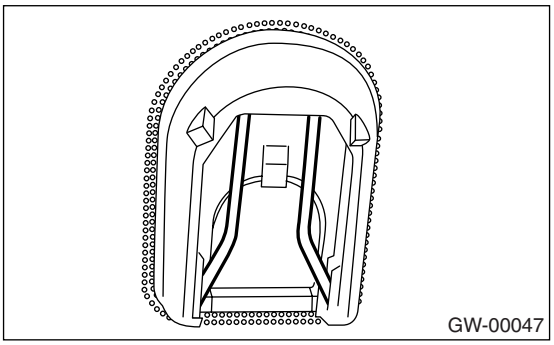

CAUTION:
Be careful not to damage the mirror surface.

3) If the mirror base is damaged, remove the mirror base using piano wire or spatula, etc.

CAUTION:
Be careful not to damage the windshield glass.

B: INSTALLATION

1) If removing the mirror base, remove the remaining adhesive thoroughly, and then fit the mirror base to mark on windshield glass to install.

Adhesive:
REPAIR KIT IN MR (Part No. 65029FC000) or equivalent

2) Verify that the mirror base is adhered securely, and then install the spring.
3) Install in the reverse order of removal.

C: INSPECTION

Make sure the mirror is not damaged.
Make sure the spring is not deteriorated.

BODY STRUCTURE

BS

Page

1. General Description 2
2. Datum Points.....3
3. Datum Dimensions.....11

1. General Description

A: PREPARATION TOOL

TOOL NAME	REMARKS
Tram tracking gauge	Used for measuring dimension.
Tape measure	Used for measuring dimension.

2. Datum Points

A: LOCATION

NOTE:
- Datum points are specified for body repair.
- Guide holes, locators, and indents are provided to facilitate panel replacement and to increase alignment accuracy.
- Both right and left reference points are symmetrical.

1. WAGON MODEL/SEDAN MODEL

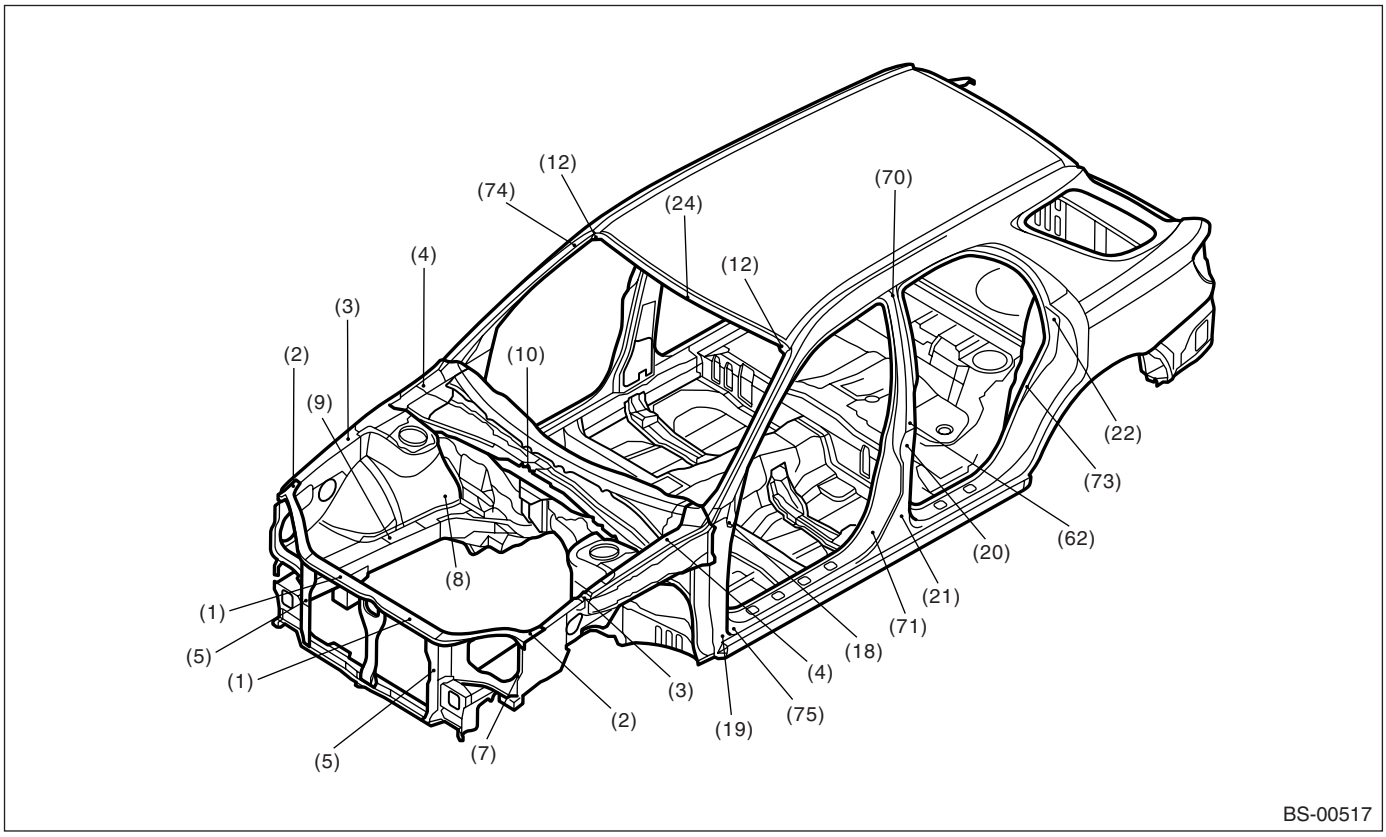

(1) Radiator attaching hole 12 mm (0.47 in) dia. (Symmetrical)
(2) Fender attaching hole 7 mm (0.28 in) dia. (Symmetrical)
(3) Fender attaching hole 10 mm (0.39 in) dia. (Symmetrical)
(4) Hood hinge attaching hole 12 mm (0.47 in) dia. (Symmetrical)
(5) Radiator panel side gauge hole 20 mm (0.79 in) dia. (Symmetrical)
(7) Fender attaching hole 9 mm (0.35 in) dia. (Symmetrical)
(8) Gauge hole 12 mm (0.47 in) dia. (Symmetrical)
(9) Front suspension crossmember attaching hole 12.4 mm (0.488 in) dia. (Symmetrical)
(10) Cowl panel attaching hole 6 mm (0.24 in) dia. (Vehicle center)
(12) Front glass attaching hole RH 6.5 mm (0.256 in) dia. LH 6.5 × 10 mm (0.256 × 0.39 in) dia.
(18) Fender attaching hole 12 mm (0.47 in) dia. (Symmetrical)
(19) Fender attaching hole 12 mm (0.47 in) dia. (Symmetrical)
(20) Outer panel center pillar gauge hole 12 mm (0.47 in) dia. (Symmetrical)
(21) Outer panel center pillar gauge hole 12 mm (0.47 in) dia. (Symmetrical)
(22) Weather strip patch attaching hole 5.2 mm (0.205 in) dia. (Symmetrical)
(24) Roof panel repair locator hollow
(62) Belt anchor attaching hole 11 mm (0.43 in) dia. (Symmetrical)
(70) Trim clip attaching hole 8.5 mm (0.335 in) dia. (Symmetrical)
(71) Harness clip attaching hole 7 mm (0.28 in) dia. (Symmetrical)
(73) Harness clip attaching hole 7 mm (0.28 in) dia. (Symmetrical)
(74) Trim clip attaching hole 10 mm (0.39 in) dia. (Symmetrical)
(75) Insulator attaching hole 8 mm (0.31 in) dia. (Symmetrical)

2. WAGON MODEL (REAR)

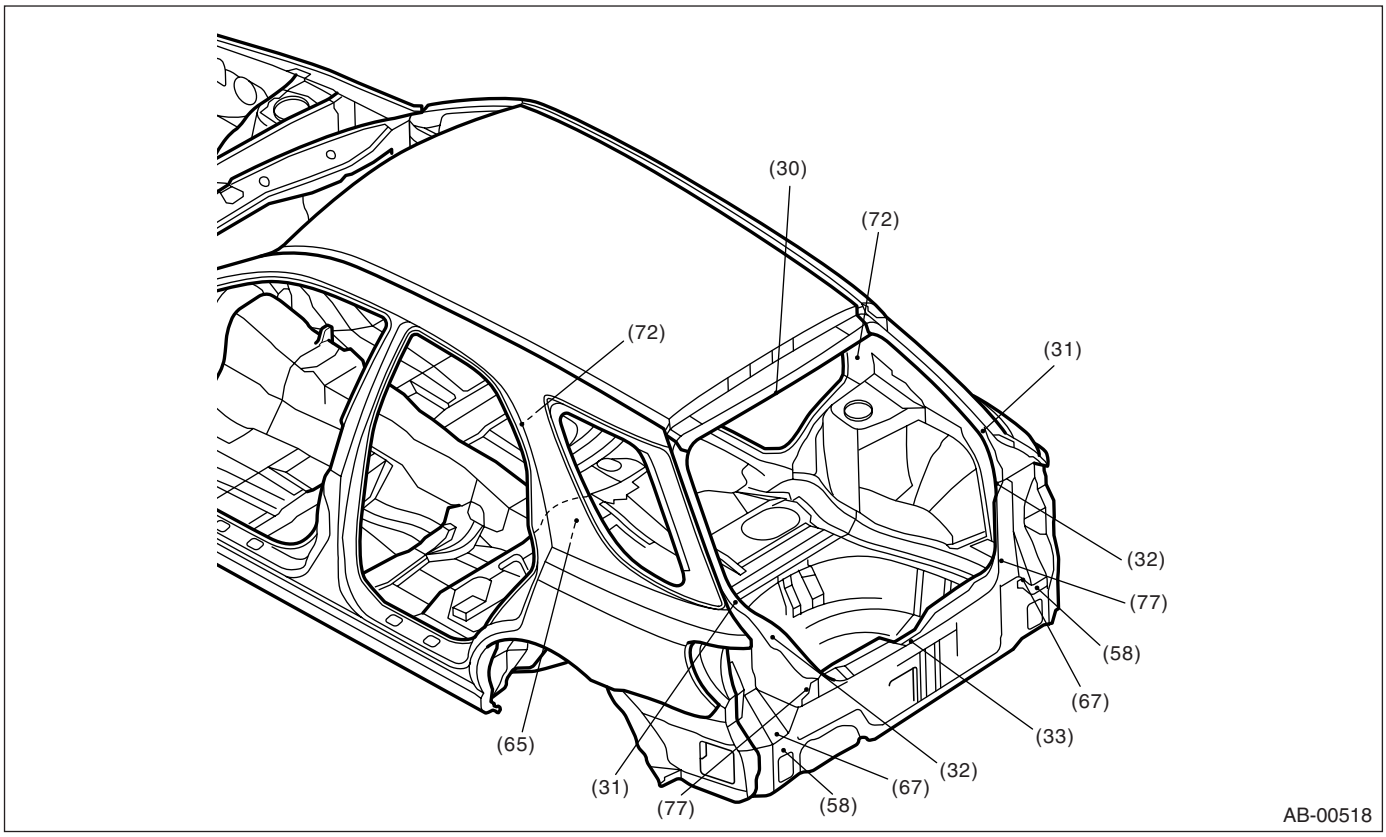

(30) Child anchor attaching hole 11 mm (0.43 in) dia.
(31) Washer hose attaching hole LH 7 mm (0.28 in) dia.
(32) Rear combination light mounting hole 7 mm (0.28 in) dia. (Symmetrical)
(33) Two striker attaching hole 15 mm (0.59 in) dia.
(58) Rear bumper plate nut attaching hole 11 mm (0.43 in) dia. (Symmetrical)
(65) Floor mat clip attaching hole 8 mm (0.31 in) dia.
(67) Gusset floor rear side gauge hole 11.5 mm (0.453 in) dia. (Symmetrical)
(72) Trim upper clip attaching hole 8.5 mm (0.335 in) dia. (Symmetrical)
(77) Harness clip attaching hole 7 mm (0.28 in) dia. (Symmetrical)

3. SEDAN MODEL (REAR)

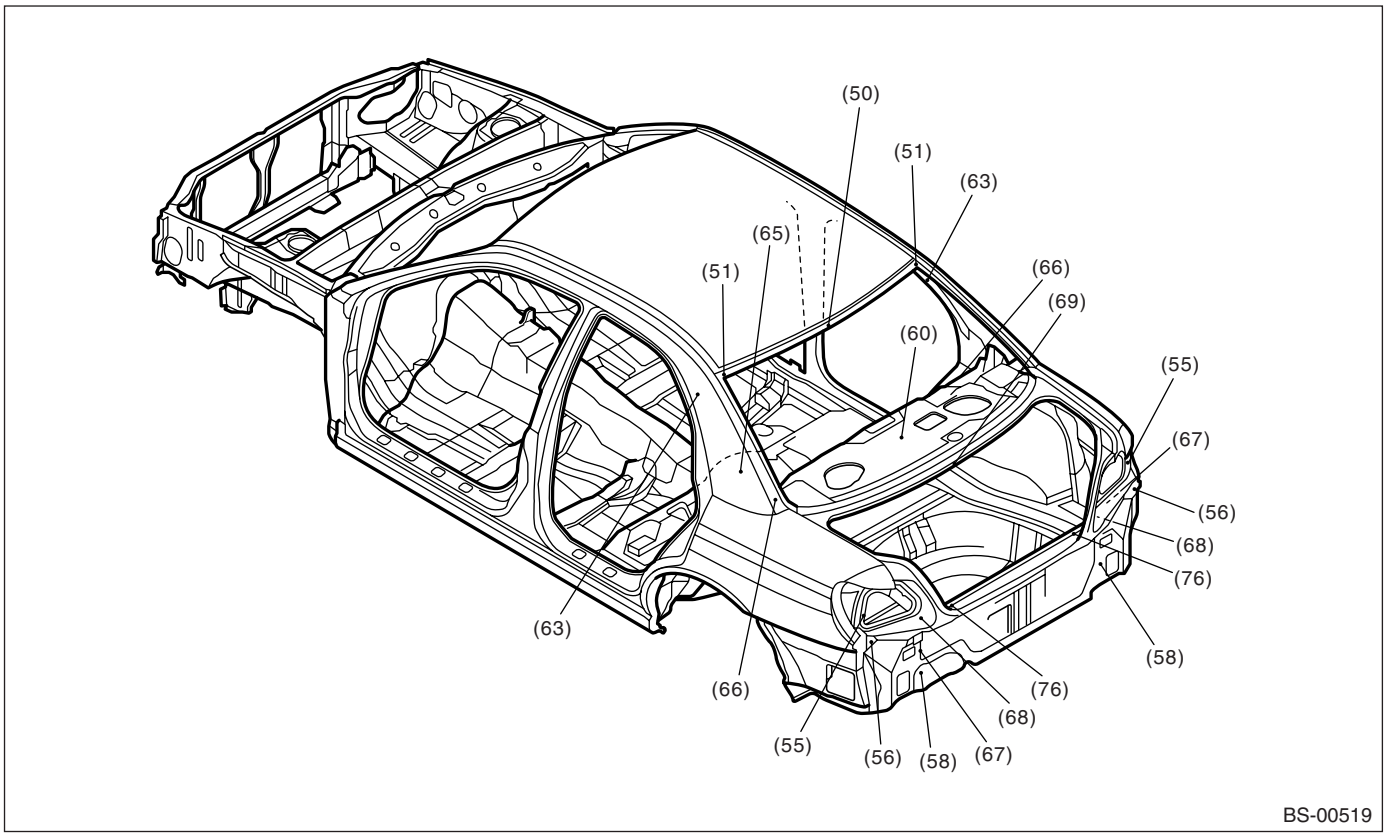

(50) Repair locator hollow (Vehicle center)

(51) Glass attaching hole RH 6.5 mm (0.256 in) dia. LH 6.5 × 10 mm (0.256 × 0.39 in) dia.

(55) Rear combination light mounting hole 8 mm (0.31 in) dia. (Symmetrical)

(56) Bumper attaching hole 7 mm (0.28 in) dia. (Symmetrical)

(58) Rear bumper attaching hole 11 mm (0.43 in) dia. (Symmetrical)

(60) Choke coil harness attaching hole 5.4 mm (0.213 in) dia.

(63) Feeder line fixing hole 7 mm (0.28 in) dia. (Symmetrical)

(65) Floor mat clip attaching hole 8 mm (0.31 in) dia.

(66) Bulkhead rear gauge hole 10 mm (0.39 in) dia. (Symmetrical)

(67) Gusset floor rear side gauge hole 11.5 mm (0.453 in) dia. (Symmetrical)

(68) Rear skirt inner side gauge hole 10 mm (0.39 in) dia. (Symmetrical)

(69) Rear panel (reinforcement) repair locator hollow (Vehicle center)

(76) Press location hole 15 mm (0.59 in) dia. (Symmetrical)

4. UNDERBODY

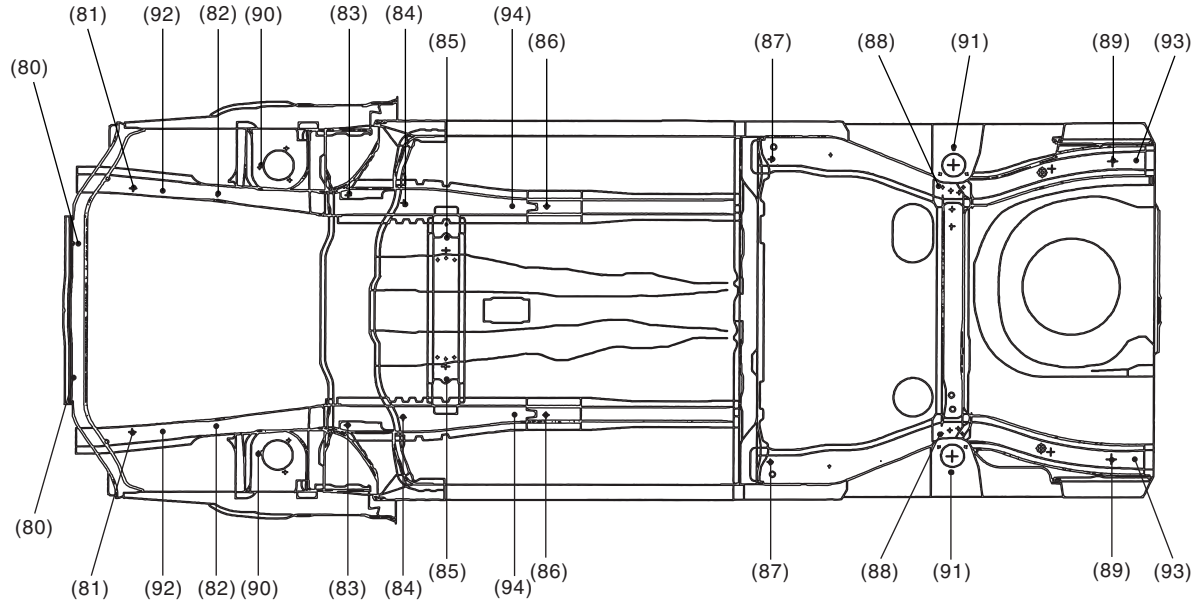

(80) Radiator lower frame gauge hole 12 mm (0.47 in) dia. (Symmetrical)

(81) Side frame gauge hole 20 mm (0.79 in) dia. (Symmetrical)

(82) Front crossmember attaching hole 12.4 mm (0.488 in) dia. (Symmetrical)

(83) Suspension attaching hole 17 mm (0.67 in) dia. (Symmetrical)

(84) Side frame gauge hole 20 mm (0.79 in) dia. (Symmetrical)

(85) Transmission mount attaching hole 14 mm (0.55 in) dia.

(86) Side frame gauge hole 18 mm (0.71 in) dia. (Symmetrical)

(87) Rear differential attaching hole 16 mm (0.63 in) dia. (Symmetrical)

(88) Rear suspension attaching hole 16 mm (0.63 in) dia. (Symmetrical)

(89) Rear side frame gauge hole 15 mm (0.59 in) dia. (Symmetrical)

(90) Strut mount attaching hole 9.5 mm (0.374 in) dia. (Symmetrical)

(91) Strut mount attaching hole 10 mm (0.39 in) dia. (Symmetrical)

(92) Sub frame attaching hole 16 mm (0.63 in) dia. (Symmetrical)

(93) Bumper beam attaching hole RH 15 mm (0.59 in) dia. LH 19 × 15 mm (0.75 × 0.59 in) dia.

(94) Side frame gauge hole 15 mm (0.59 in) dia. (Symmetrical)

DATUM POINTS

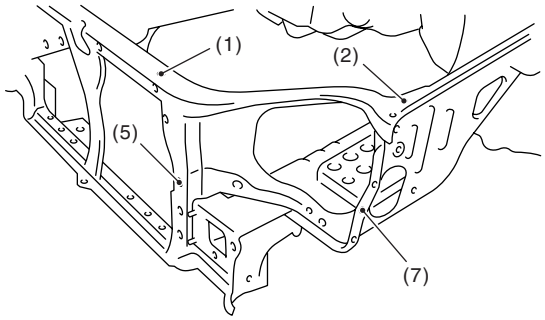

BS-00521

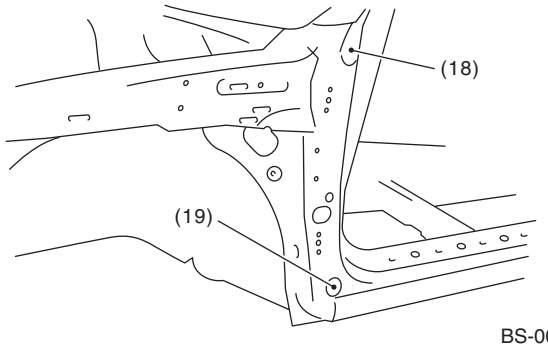

BS-00525

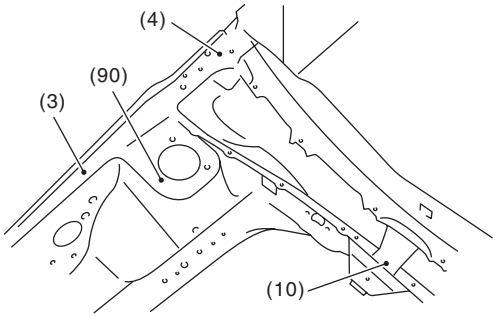

BS-00522

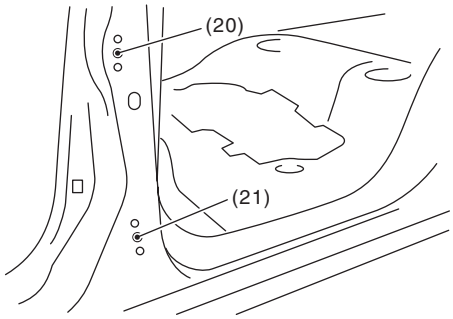

BS-00526

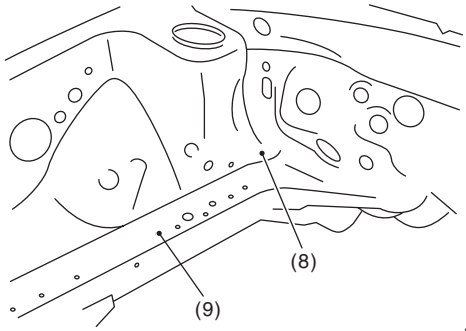

BS-00523

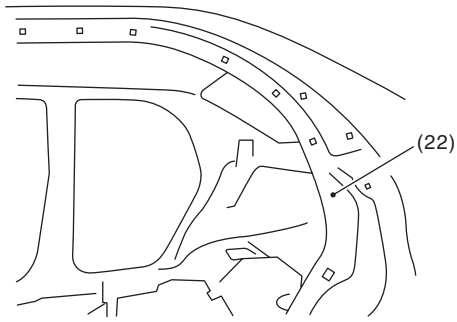

BS-00556

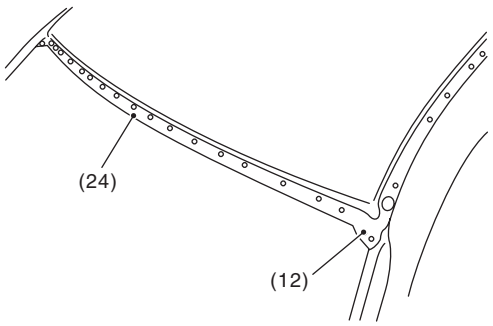

BS-00524

WAGON MODEL

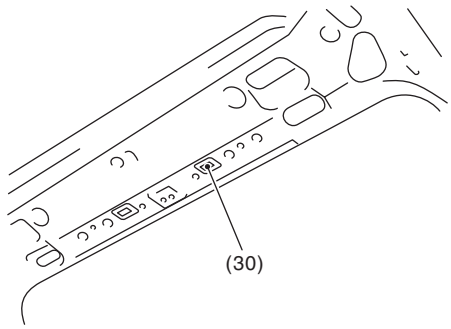

BS-00527

DATUM POINTS

WAGON MODEL

BS-00528

SEDAN MODEL

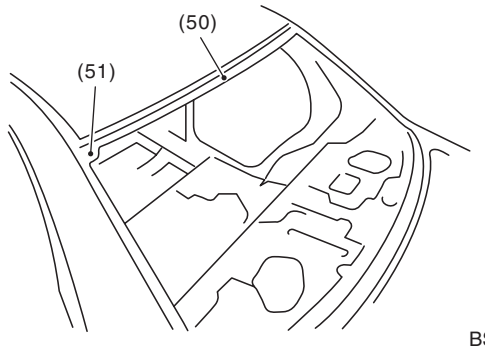

BS-00532

WAGON MODEL

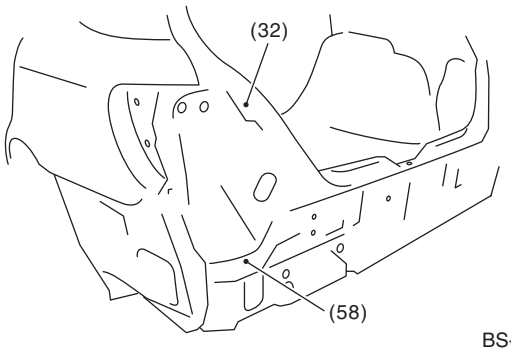

BS-00529

SEDAN MODEL

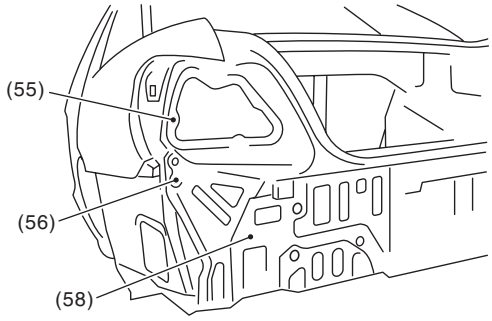

BS-00533

WAGON MODEL

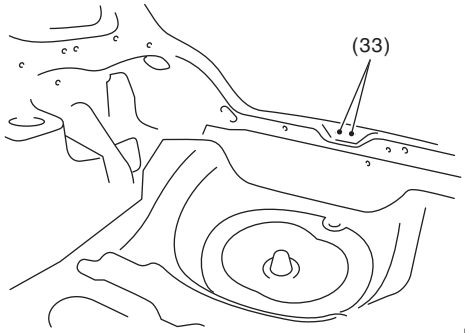

BS-00530

SEDAN MODEL

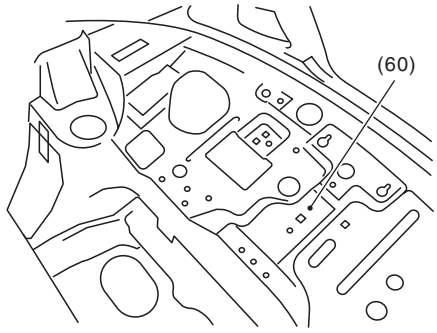

BS-00534

SEDAN MODEL

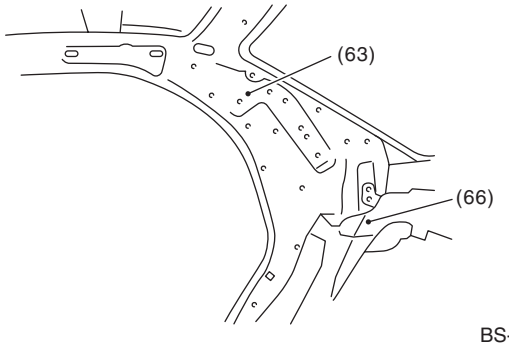

BS-00531

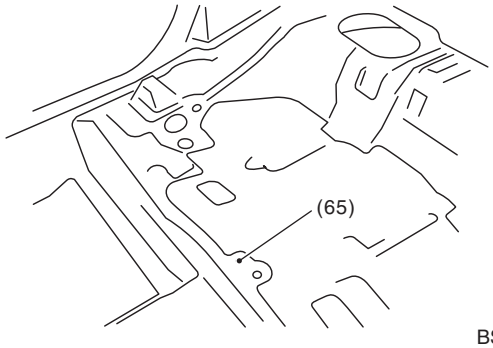

BS-00535

DATUM POINTS

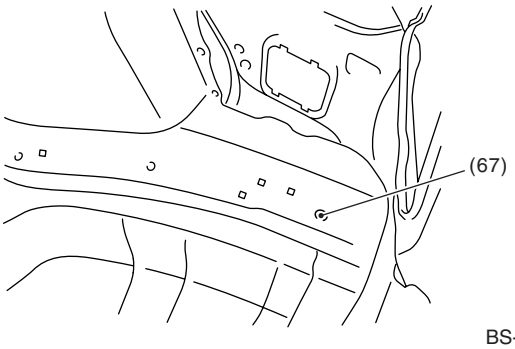

BS-00536

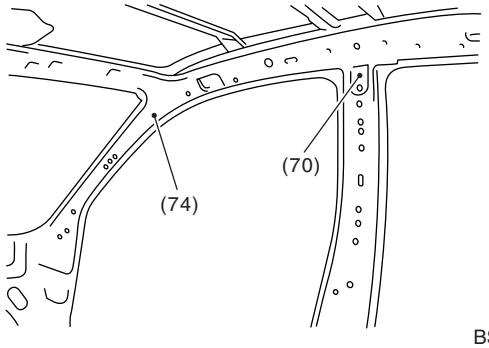

BS-00540

SEDAN MODEL

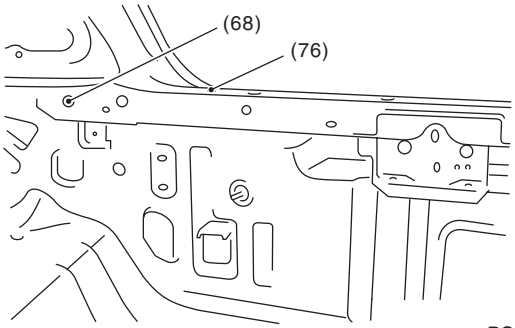

BS-00537

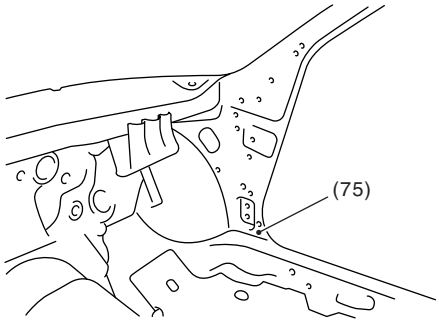

BS-00541

SEDAN MODEL

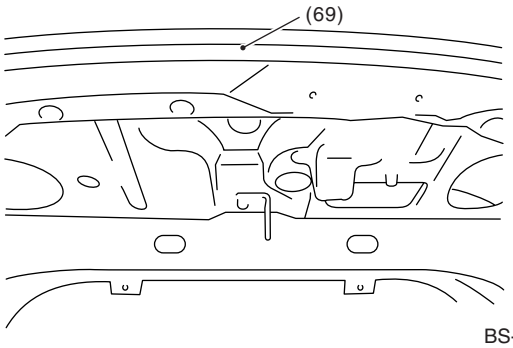

BS-00538

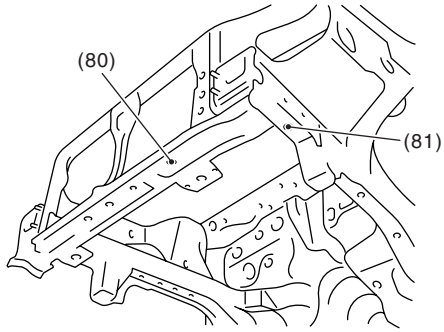

BS-00542

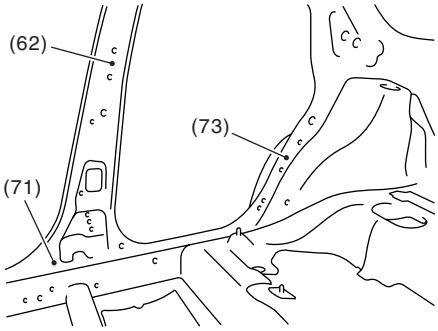

BS-00539

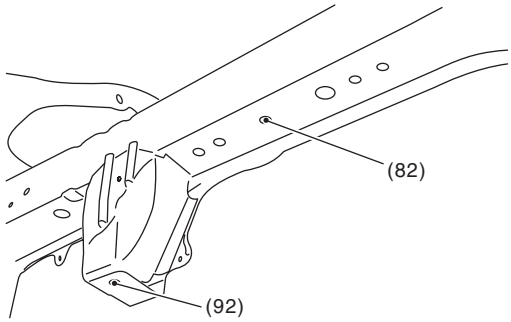

BS-00543

DATUM POINTS

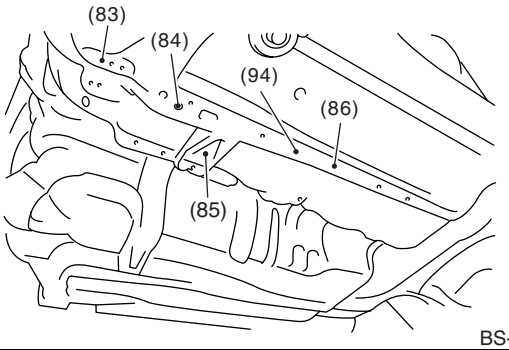

BS-00544

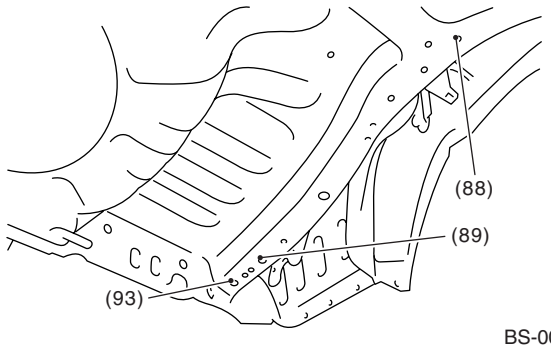

BS-00546

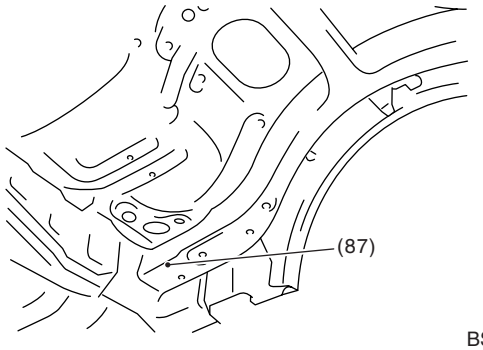

BS-00545

SUBARU.

3. Datum Dimensions

A: MEASUREMENT

Refer to LOCATION for details on measurement points. <Ref. to BS-3, LOCATION.>

NOTE:

- Using a tram tracking gauge, measure all the dimensions.
- When using a tape measure, carefully measure dimensions without letting the tape measure sag or twist.
- Measure the linear dimensions between cores of holes.
- Suffixes “RH” and “LH” indicate right-hand and left-hand.

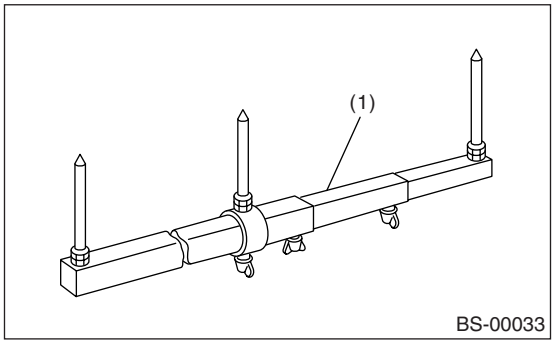

(1) Tram tracking gauge

- Measure at the center of the circle around the outside of the body panel.

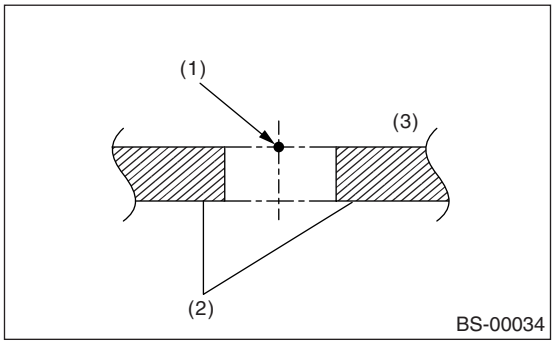

(1) Datum point
(2) Body panel
(3) Outside

1. CENTER STRUCTURE

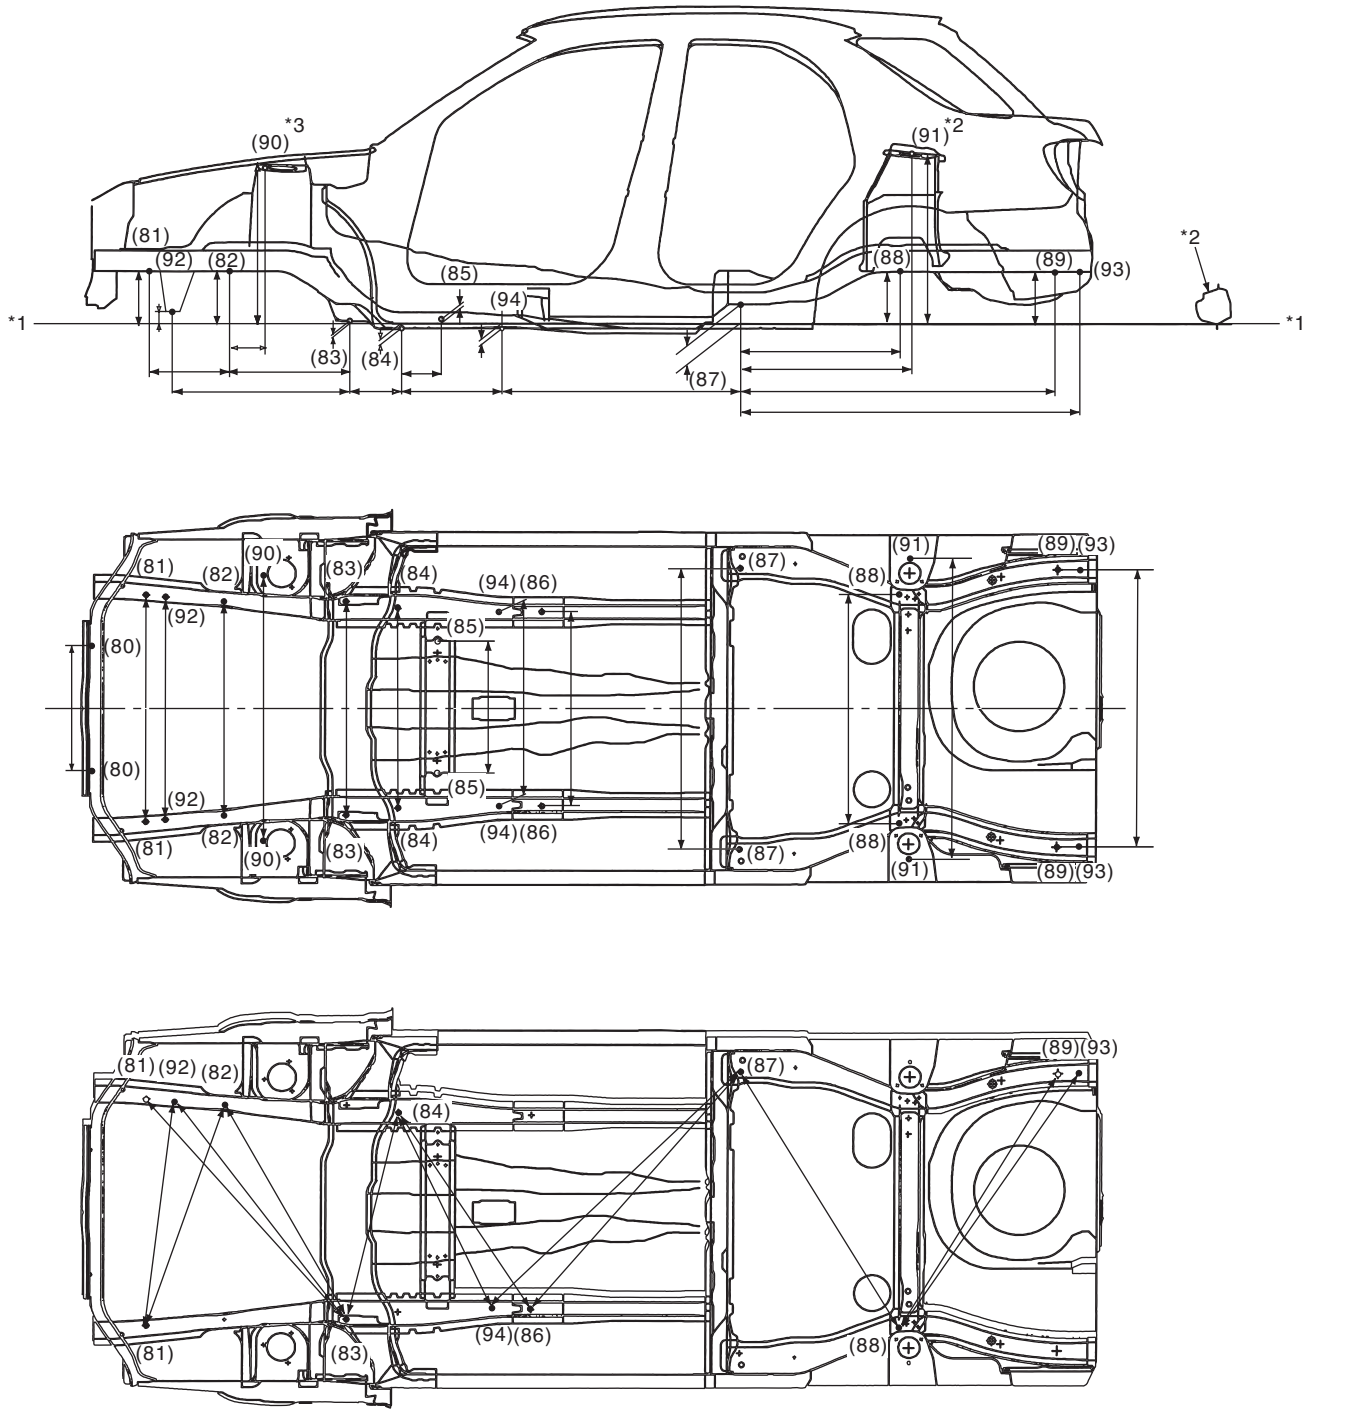

BS-00633

*1: Standard line
*2: Side sill
*3: Upper surface

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(81) from standard line	206 (8.11)	(92) RH to (92) LH	906 (35.67)
(92) from standard line	77 (3.03)	(82) RH to (82) LH	860 (33.86)
(82) from standard line	206 (8.11)	(90) RH to (90) LH	1,065 (41.93)
(90) from standard line	620 (24.41)	(83) RH to (83) LH	856 (33.70)
(83) from standard line	8 (0.31)	(84) RH to (84) LH	800 (31.50)
(84) from standard line	20 (0.79)	(85) RH to (85) LH	529 (20.83)
(85) from standard line	13 (0.51)	(94) RH to (94) LH	776 (30.55)
(94) from standard line	12 (0.47)	(86) RH to (86) LH	780 (30.71)
(87) from standard line	76 (2.99)	(87) RH to (87) LH	1,128 (44.41)
(88) from standard line	206 (8.11)	(88) RH to (88) LH	920 (36.22)
(91) from standard line	674 (26.54)	(91) RH to (91) LH	1,205 (47.44)
(89) from standard line	205 (8.07)	(89) RH to (89) LH	1,110 (43.70)
(81) to (82)	317 (12.48)	(93) RH to (93) LH	1,110 (43.70)
(82) to (90)	157 (6.18)	(81) LH to (92) RH	924 (36.38)
(82) to (83)	485 (19.09)	(81) LH to (82) RH	940 (37.01)
(92) to (83)	694 (27.32)	(81) RH to (83) LH	1,209 (47.60)
(83) to (84)	206 (8.11)	(92) RH to (83) LH	1,124 (44.25)
(84) to (85)	159 (6.26)	(82) RH to (83) LH	1,005 (39.57)
(84) to (94)	380 (14.96)	(83) LH to (84) RH	854 (33.62)
(94) to (87)	982 (38.66)	(84) RH to (94) LH	875 (34.45)
(87) to (88)	633 (24.92)	(84) RH to (86) LH	951 (37.44)
(87) to (91)	673 (26.50)	(94) LH to (87) RH	1,371 (53.98)
(87) to (89)	1,258 (49.53)	(86) LH to (87) RH	1,269 (49.96)
(87) to (93)	1,358 (53.46)	(87) RH to (88) LH	1,211 (47.68)
(80) RH to (80) LH	500 (19.69)	(88) LH to (89) RH	1,192 (46.93)
(81) RH to (81) LH	910 (35.83)	(88) LH to (93) RH	1,247 (49.09)

2. WAGON MODEL/SEDAN MODEL (FRONT STRUCTURE)

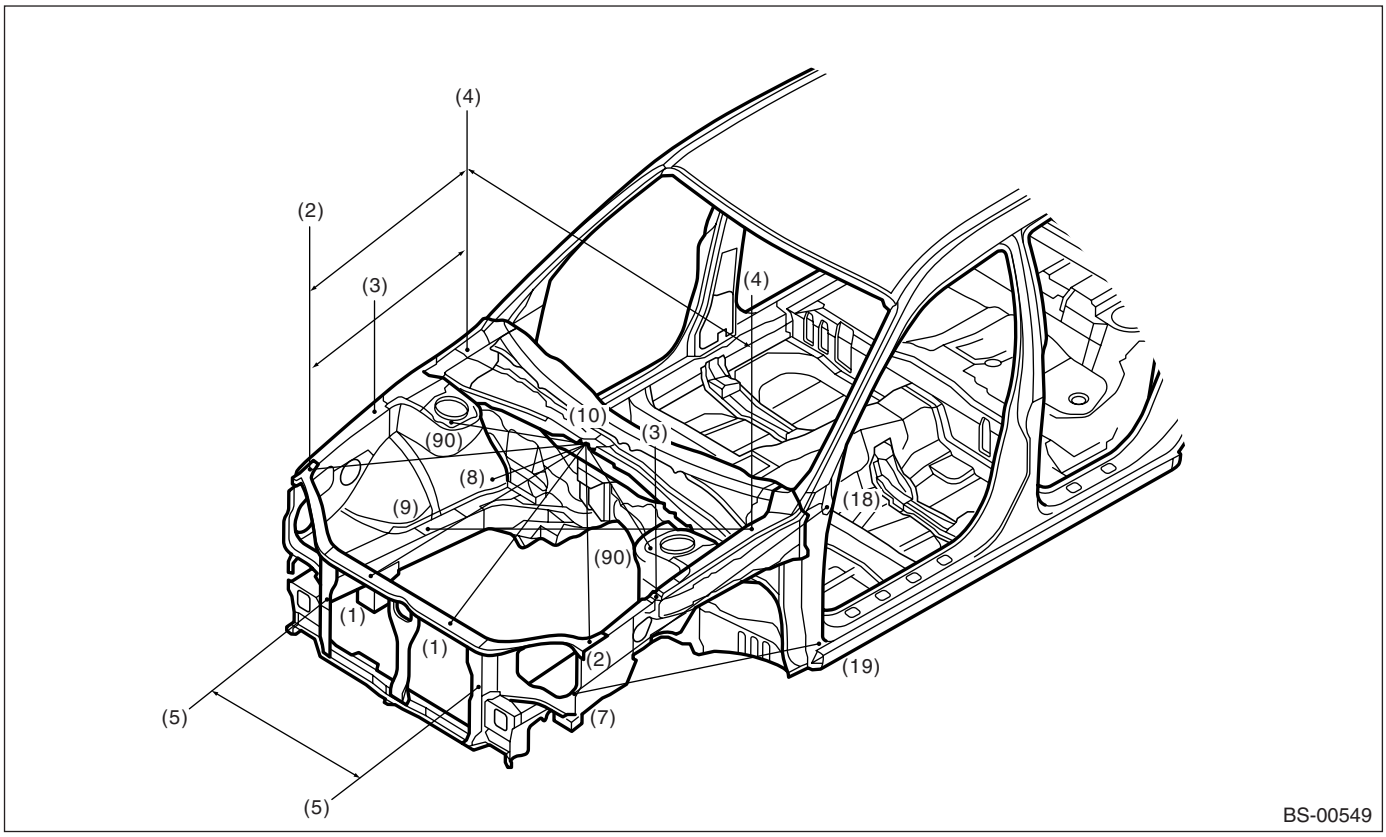

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(10) to (1) RH	912 (35.91)	(2) RH to (2) LH	1,341 (52.80)
(10) to (1) LH	912 (35.91)	(5) RH to (5) LH	720 (28.35)
(10) to (90) RH	566 (22.28)	(7) RH to (18) RH	1,107 (43.58)
(10) to (90) LH	566 (22.28)	(7) LH to (18) LH	1,107 (43.58)
(10) to (8) RH	581 (22.87)	(7) RH to (19) RH	1,105 (43.50)
(10) to (8) LH	581 (22.87)	(7) LH to (19) LH	1,105 (43.50)
(10) to (2) RH	948 (37.32)	(4) RH to (2) LH	1,583 (62.32)
(10) to (2) LH	948 (37.32)	(4) LH to (2) RH	1,583 (62.32)
(4) RH to (2) RH	779 (30.67)	(3) RH to (3) LH	1,396 (54.96)
(4) LH to (2) LH	779 (30.67)	(3) RH to (4) LH	1,470 (57.87)
(4) RH to (3) RH	430 (16.93)	(3) LH to (4) RH	1,470 (57.87)
(4) LH to (3) LH	430 (16.93)	(2) RH to (3) LH	1,412 (55.59)
(90) RH to (90) LH	1,065 (41.93)	(2) LH to (3) RH	1,412 (55.59)
(8) RH to (8) LH	894 (35.20)	(9) RH to (9) LH	860 (33.86)
(8) RH to (4) LH	1,210 (47.64)	(9) RH to (8) LH	931 (36.65)
(8) LH to (4) RH	1,210 (47.64)	(9) LH to (8) RH	931 (36.65)
(3) RH to (2) RH	350 (13.78)	(9) RH to (4) LH	1,280 (50.39)
(3) LH to (2) LH	350 (13.78)	(9) LH to (4) RH	1,280 (50.39)
(4) RH to (4) LH	1,417 (55.79)	—	—

DATUM DIMENSIONS

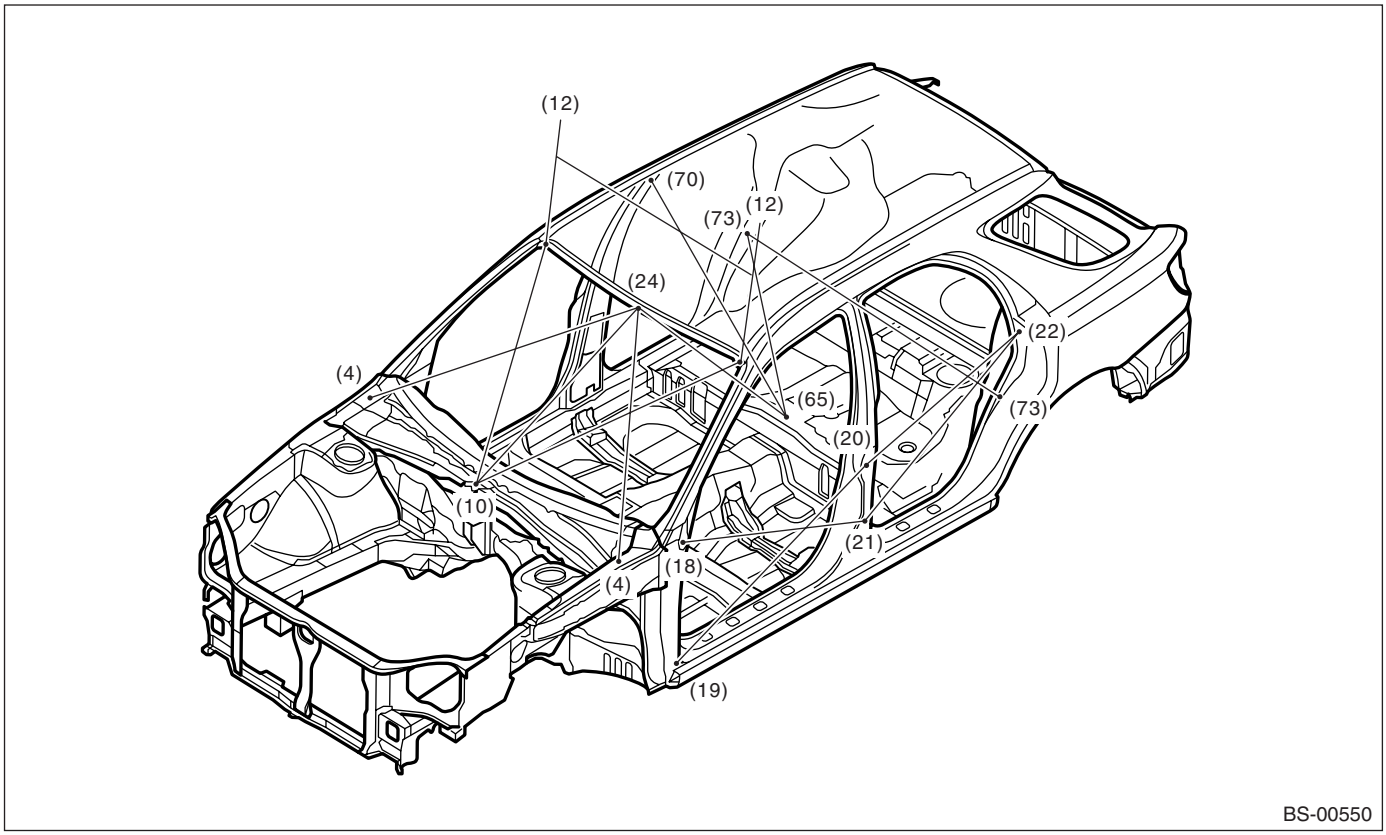

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(4) RH to (24)	1,127 (44.37) Wagon model	(19) LH to (20) LH	1,089 (42.87)
(4) LH to (24)	1,110 (43.70) Sedan model	(20) RH to (22) RH	869 (34.21)
(10) to (24)	957 (37.68) Wagon model	(20) LH to (22) LH	869 (34.21)
(10) to (24)	935 (36.81) Sedan model	(21) RH to (22) RH	985 (38.78)
(10) to (12) RH	1,122 (44.17) Wagon model	(21) LH to (22) LH	985 (38.78)
(10) to (12) RH	1,106 (43.54) Sedan model	(24) to (65)	1,232 (48.50) Wagon model
(10) to (12) LH	1,122 (44.17) Wagon model	(24) to (65)	1,237 (48.70) Sedan model
(10) to (12) LH	1,106 (43.17) Sedan model	(65) to (70) RH	1,067 (42.01)
(12) RH to (12) LH	1,029 (40.51) Wagon model	(65) to (70) LH	1,067 (42.01)
(12) RH to (12) LH	1,042 (41.02) Sedan model	(65) to (73) RH	830 (32.68)
(18) RH to (21) RH	1,049 (41.30)	(65) to (73) LH	830 (32.68)
(18) LH to (21) LH	1,049 (41.30)	(73) RH to (73) LH	1,394 (54.88)
(19) RH to (20) RH	1,089 (42.87)	—	—

3. WAGON MODEL/SEDAN MODEL (REAR STRUCTURE)

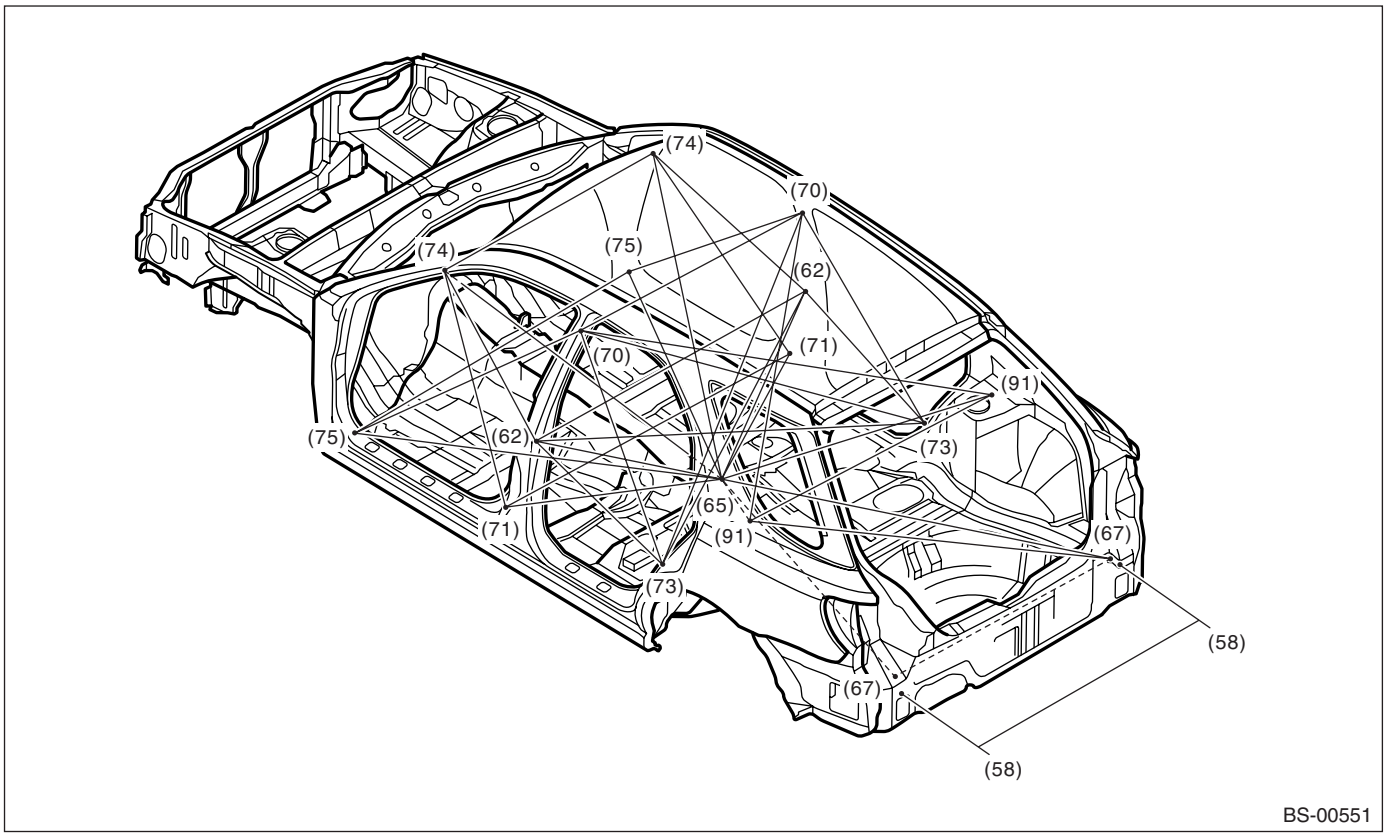

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(58) RH to (58) LH	1,128 (44.41)	(67) RH to (67) LH	1,110 (43.70)
(62) RH to (62) LH	1,332 (52.44)	(67) RH to (91) LH	1,381 (54.37)
(62) RH to (65)	915 (36.02)	(67) LH to (91) RH	1,381 (54.37)
(62) LH to (65)	915 (36.02)	(70) RH to (70) LH	1,060 (41.73)
(62) RH to (73) RH	762 (30.00)	(70) RH to (73) RH	948 (37.32)
(62) LH to (73) LH	762 (30.00)	(70) LH to (73) LH	948 (37.32)
(62) RH to (73) LH	1,561 (61.46)	(70) RH to (73) LH	1,542 (60.71)
(62) LH to (73) RH	1,561 (61.46)	(70) LH to (73) RH	1,542 (60.71)
(62) RH to (74) RH	592 (23.31) Wagon model	(70) RH to (75) RH	1,443 (56.81)
(62) LH to (74) LH	603 (23.74) Sedan model	(70) LH to (75) LH	1,443 (56.81)
(65) to (67) RH	1,501 (59.09)	(70) RH to (91) LH	1,532 (60.32)
(65) to (67) LH	1,501 (59.09)	(70) LH to (91) RH	1,532 (60.32)
(65) to (71) RH	823 (32.40)	(71) RH to (71) LH	1,361 (53.58)
(65) to (71) LH	823 (32.40)	(71) RH to (74) RH	954 (37.56) Wagon model
(65) to (74) RH	1,275 (50.20) Wagon model	(71) LH to (74) LH	949 (37.36) Sedan model
(65) to (74) LH	1,282 (50.47) Sedan model	(74) RH to (74) LH	1,135 (44.69) Wagon model
(65) to (75) RH	1,450 (57.09)	(74) RH to (74) LH	1,147 (45.16) Sedan model
(65) to (75) LH	1,450 (57.09)	(75) RH to (75) LH	1,399 (55.08)
(65) to (91) RH	1,064 (41.89)	(91) RH to (91) LH	1,205 (47.44)
(65) to (91) LH	1,064 (41.89)	—	—

4. WAGON MODEL (FRONT STRUCTURE)

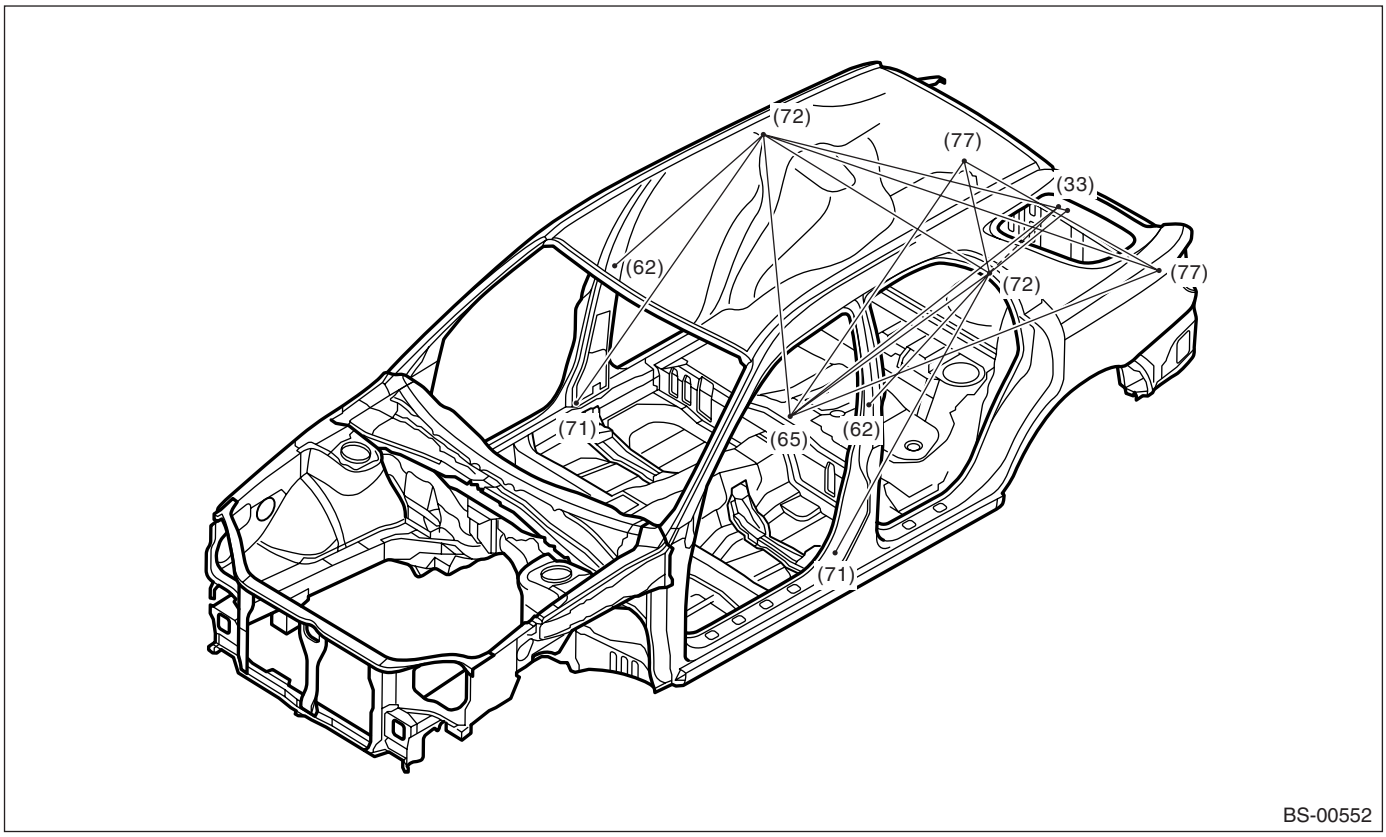

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(33) RH to (65)	1,534 (60.39)	(65) to (77) RH	1,538 (60.55)
(33) LH to (65)	1,534 (60.39)	(65) to (77) LH	1,538 (60.55)
(33) RH to (72) LH	1,344 (52.91)	(71) RH to (72) RH	1,223 (48.15)
(33) LH to (72) RH	1,344 (52.91)	(71) LH to (72) LH	1,223 (48.15)
(62) RH to (72) RH	732 (28.82)	(72) RH to (72) LH	1,226 (48.27)
(62) LH to (72) LH	732 (28.82)	(72) RH to (77) LH	1,544 (60.79)
(65) to (72) RH	1,076 (42.36)	(72) LH to (77) RH	1,544 (60.79)
(65) to (72) LH	1,076 (42.36)	(77) RH to (77) LH	898 (35.35)

5. WAGON MODEL (REAR STRUCTURE)

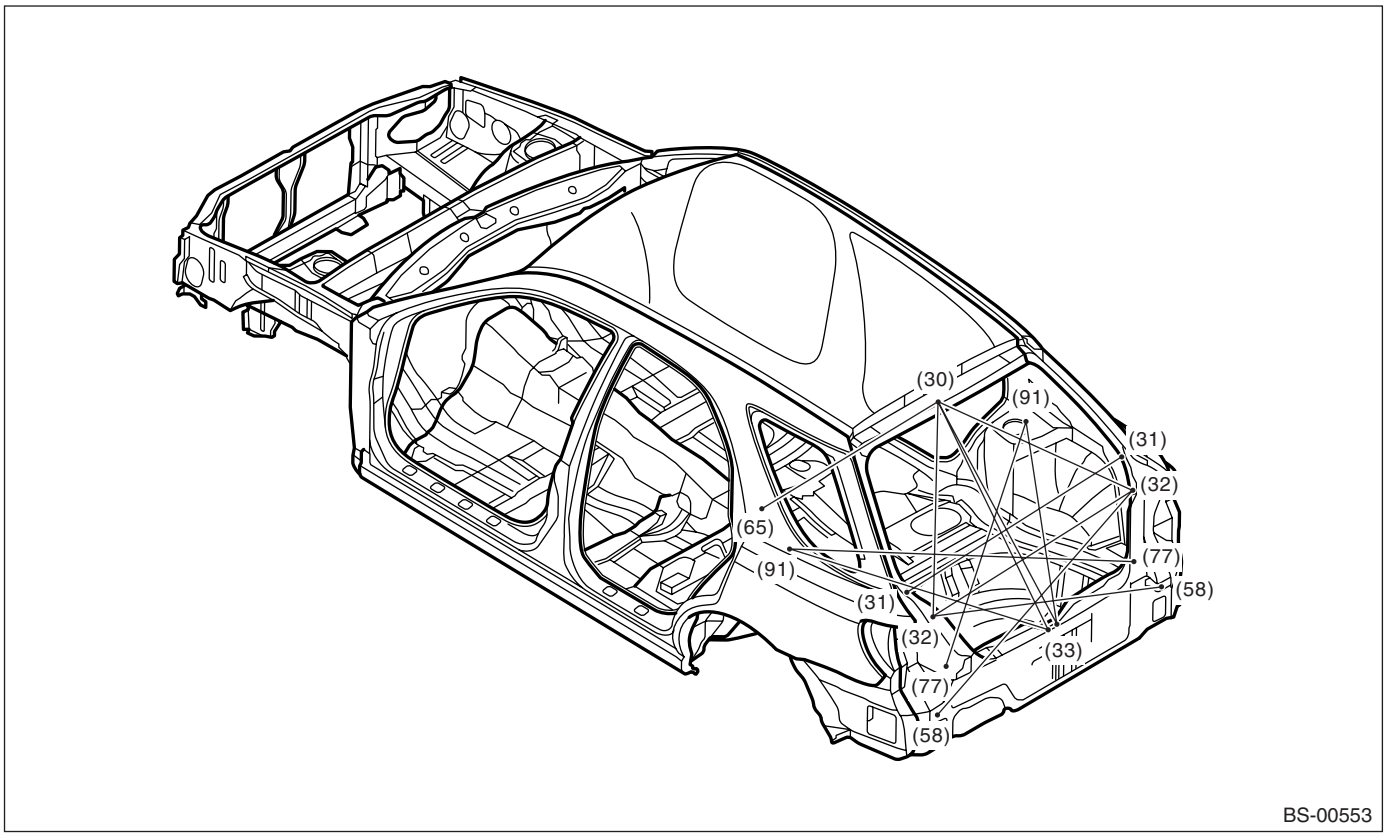

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(30) to (32) RH	850 (33.46)	(32) RH to (58) LH	1,139 (44.84)
(30) to (32) LH	850 (33.46)	(32) LH to (58) RH	1,139 (44.84)
(30) to (33) RH	904 (35.59)	(33) RH to (91) LH	993 (39.09)
(30) to (33) LH	904 (35.59)	(33) LH to (91) LH	993 (39.09)
(30) to (65)	1,292 (50.87)	(77) RH to (91) LH	1,289 (50.75)
(31) RH to (31) LH	1,212 (47.72)	(77) LH to (91) RH	1,289 (50.75)
(32) RH to (32) LH	1,038 (40.87)	—	—

6. SEDAN MODEL (FRONT STRUCTURE)

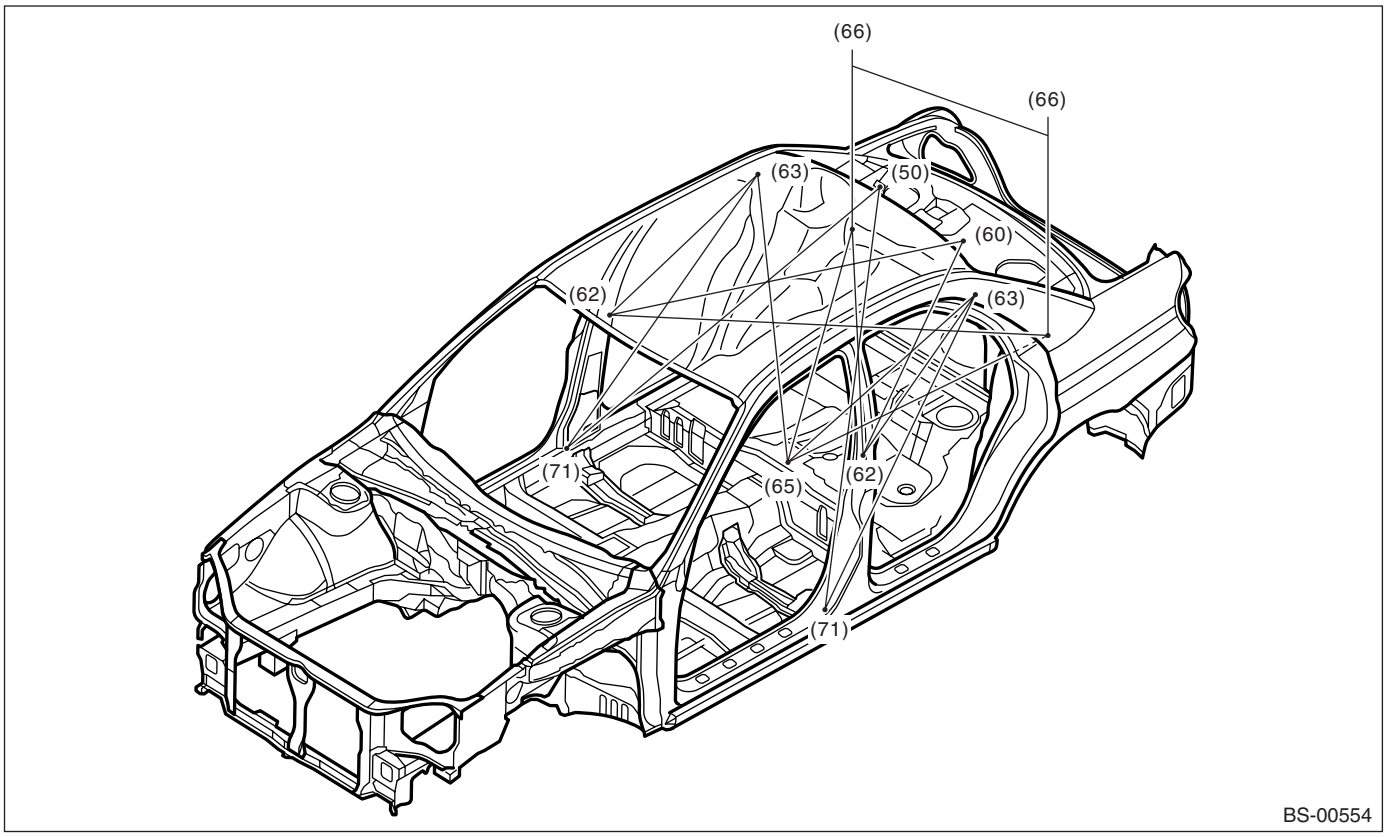

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(50) to (71) RH	1,562 (61.50)	(63) RH to (65)	1,118 (44.02)
(50) to (71) LH	1,562 (61.50)	(63) LH to (65)	1,118 (44.02)
(60) to (62) RH	1,338 (52.68)	(63) RH to (71) RH	1,283 (50.51)
(60) to (62) LH	1,338 (52.68)	(63) LH to (71) LH	1,283 (50.51)
(62) RH to (63) RH	773 (30.43)	(65) to (66) RH	956 (37.64)
(62) LH to (63) LH	773 (30.43)	(65) to (66) LH	956 (37.64)
(62) RH to (66) LH	1,449 (57.05)	(66) RH to (66) LH	840 (33.07)
(62) LH to (66) RH	1,449 (57.05)	—	—

7. SEDAN MODEL (REAR STRUCTURE)

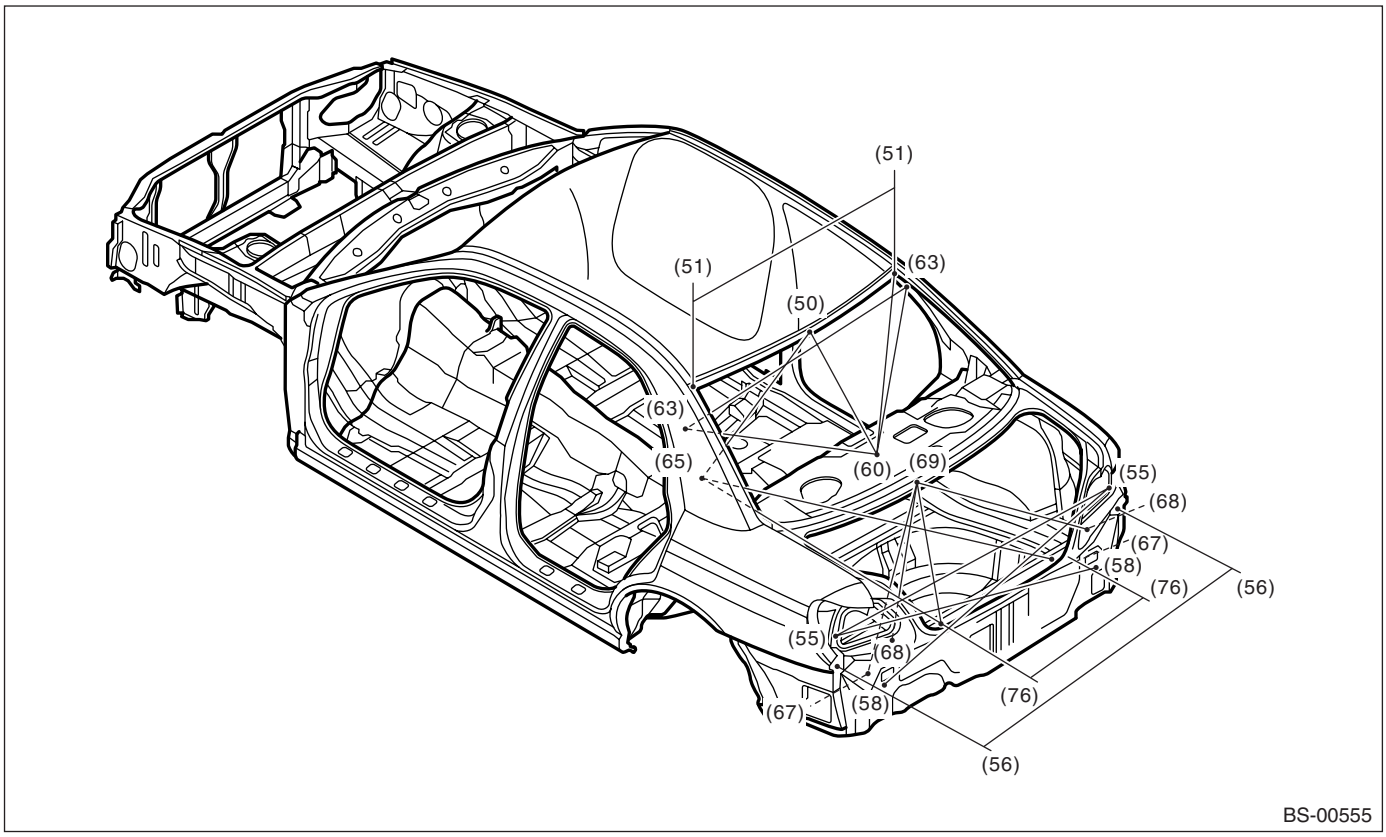

Unit: mm (in)

Point to point	Dimension	Point to point	Dimension
(50) to (60)	501 (19.72)	(65) to (76) LH	1,544 (60.79)
(50) to (65)	1,082 (42.60)	(65) to (68) RH	1,581 (62.24)
(51) RH to (51) LH	1,025 (40.35)	(65) to (68) LH	1,581 (62.24)
(51) RH to (60)	734 (28.90)	(67) RH to (69)	784 (30.87)
(55) RH to (55) LH	1,406 (55.35)	(67) LH to (69)	784 (30.87)
(55) RH to (58) LH	1,297 (51.06)	(68) RH to (68) LH	1,020 (40.16)
(55) LH to (58) RH	1,297 (51.06)	(68) RH to (69)	681 (26.81)
(56) RH to (56) LH	1,426 (56.14)	(68) LH to (69)	681 (26.81)
(60) to (63) RH	764 (30.08)	(69) to (76) RH	537 (21.14)
(60) to (63) LH	764 (30.08)	(69) to (76) LH	537 (21.14)
(63) RH to (63) LH	1,183 (46.57)	(76) RH to (76) LH	600 (23.62)
(65) to (76) RH	1,544 (60.79)	—	—

8. SUB FRAME ALIGNMENT

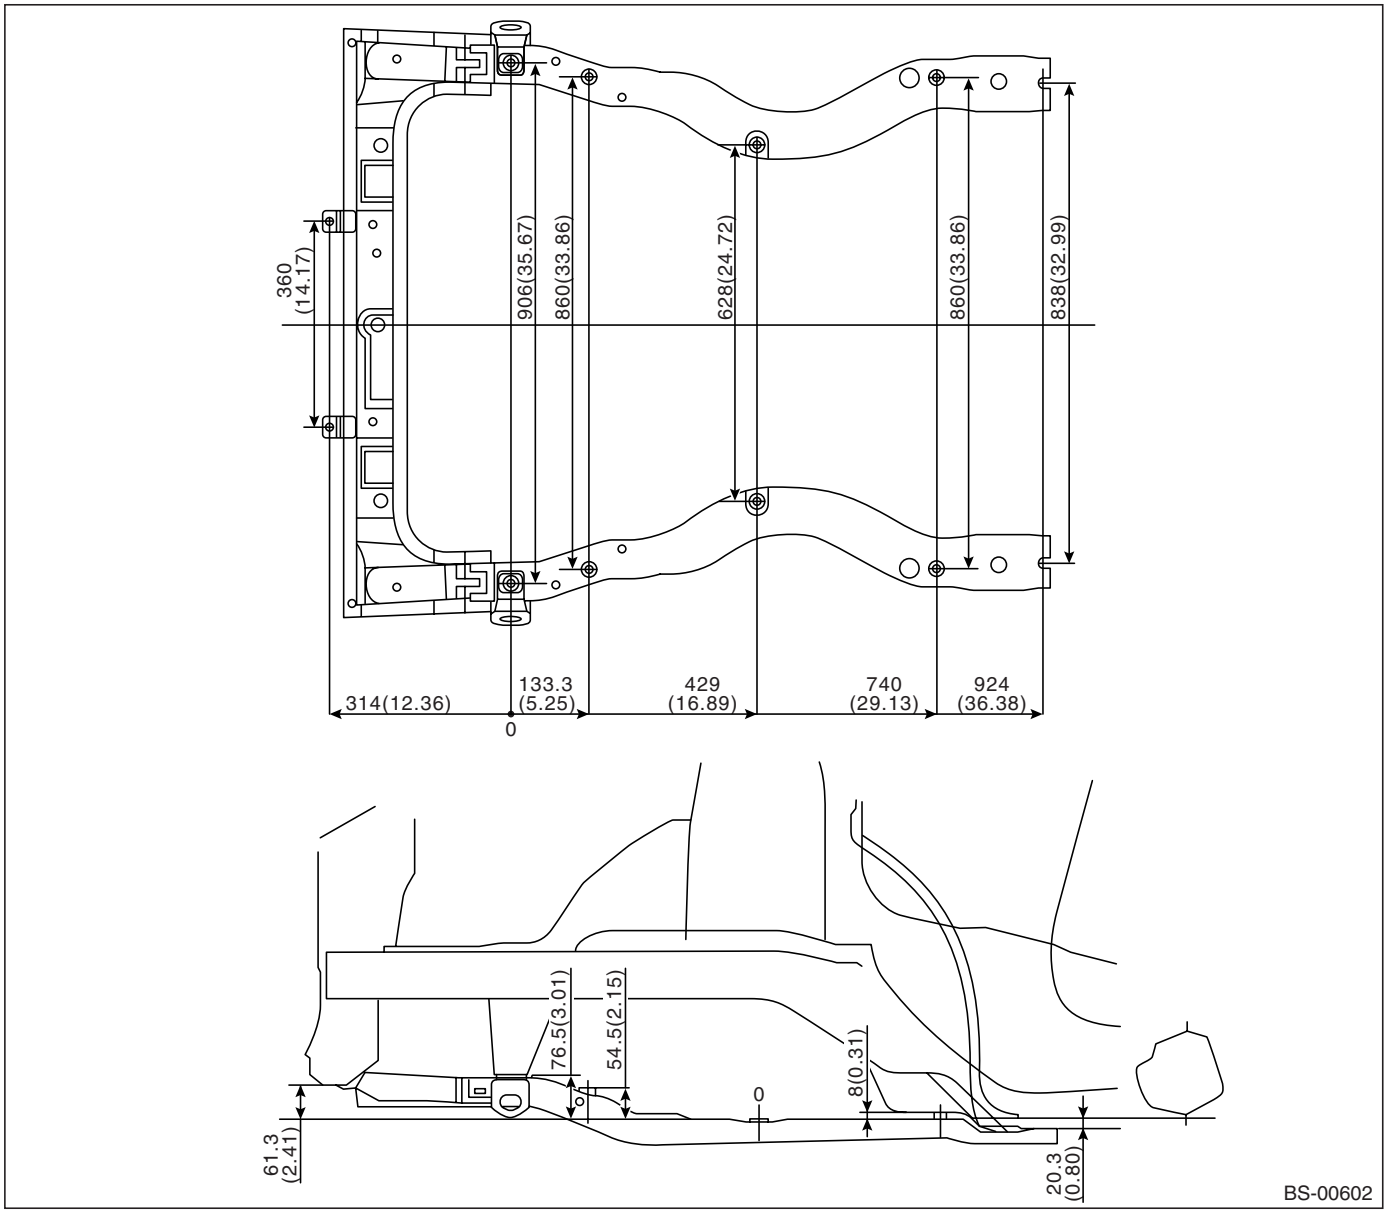

Unit: mm (in)

Horizontal and vertical dimensions are values measured from datum points (0).

INSTRUMENTATION/DRIVER INFO

IDI

		Page
1.	General Description	2
2.	Combination Meter System	3
3.	Combination Meter Assembly	11
4.	Speedometer	14
5.	Tachometer	15
6.	Fuel Gauge	16
7.	Water Temperature Gauge	17
8.	Ambient Sensor	18

1. General Description

A: SPECIFICATIONS

Combination meter	Model	Except STi model	STi model	STi model for Australia
	Speedometer	Electric pulse type		
	Temperature gauge	Cross coil type		
	Fuel gauge	Cross coil type		
	Tachometer	Electric pulse type		
	Turn signal indicator light	14 V — 1.4 W		LED
	Charge indicator light	14 V — 1.4 W		LED
	Oil pressure indicator light	LED		
	ABS warning light	LED		
	Malfunction indicator light	LED		
	HI-beam indicator light	14 V — 1.4 W		LED
	Door open warning light	LED		
	Seat belt warning light	LED		
	Brake fluid and parking brake warning light	14 V — 1.4 W		LED
	FWD indicator light	LED	—	
	AIRBAG warning light	LED		
	Meter illumination light	14 V — 3 W, 14 V — 2 W		LED
	AT OIL TEMP. warning light	LED	—	
	LO indicator light	LED	—	
	HOLD indicator light	LED	—	
	Immobilizer indicator light	LED		
	POWER indicator light	14 V — 2 W	—	
	Low fuel warning light	LED		
	AT select lever position indicator light	14 V — 100 mA	—	
	Intercooler water spray warning light	—	LED	
	REV indicator light	—	LED	
	Headlight indicator light	—		LED
	LCD back light	14 V — 1.4 W		LED

B: CAUTION

- Be careful not to damage the meters and instrument panel.
- Be careful not to damage the meter glasses.
- Make sure that electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to the printed circuit.
- Do not drop or otherwise apply impact.

C: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.

2. Combination Meter System

A: SCHEMATIC

1. COMBINATION METER

<Ref. to WI-86, SCHEMATIC, Combination Meter.>

2. OUTSIDE TEMPERATURE INDICATOR

<Ref. to WI-224, SCHEMATIC, Outside Temperature Display System.>

B: INSPECTION

CAUTION:
When measuring voltage and resistance of the ECM, TCM, or each sensor, use a tapered pin with a diameter of less than 0.64 mm (0.025 in) in order to avoid poor contact. Do not insert the pin more than 2 mm (0.08 in).

1. SYMPTOM CHART

Symptom	Repair order	Reference
Combination meter assembly does not operate.	(1) Power supply (2) Ground circuit	<Ref. to IDI-4, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Combination Meter System.>
Speedometer does not operate.	(1) (MT model) Vehicle speed sensor (AT model) TCM (2) Harness (3) Speedometer	MT model: <Ref. to IDI-4, CHECK VEHICLE SPEED SENSOR, INSPECTION, Combination Meter System.>
		AT model: <Ref. to IDI-6, CHECK TRANSMISSION CONTROL MODULE (TCM), INSPECTION, Combination Meter System.>
Tachometer does not operate.	(1) ECM (2) Harness (3) Tachometer	<Ref. to IDI-6, CHECK ENGINE CONTROL MODULE (ECM), INSPECTION, Combination Meter System.>
Fuel gauge does not operate.	(1) Fuel level sensor (2) Harness (3) Fuel gauge	<Ref. to IDI-7, CHECK FUEL LEVEL SENSOR, INSPECTION, Combination Meter System.>
Water temperature gauge does not operate.	(1) Engine coolant temperature sensor (2) Harness (3) Water temperature gauge	<Ref. to IDI-8, CHECK ENGINE COOLANT TEMPERATURE SENSOR, INSPECTION, Combination Meter System.>
Outside temperature indicator does not operate.	(1) Ambient sensor (2) Harness (3) Combination meter (4) Auto A/C control module	<Ref. to IDI-9, CHECK OUTSIDE TEMPERATURE INDICATOR, INSPECTION, Combination Meter System.>

2. CHECK POWER SUPPLY AND GROUND CIRCUIT

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY FOR COMBINATION METER.** 1)Remove the combination meter. <Ref. to IDI-11, REMOVAL, Combination Meter Assembly.> 2)Disconnect the combination meter harness connector. 3)Turn the ignition switch to ON. 4)Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 7 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between ignition switch and combination meter.
2	**CHECK POWER SUPPLY FOR COMBINATION METER.** Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 10 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Check the harness for open or short between fuse and combination meter.
3	**CHECK GROUND CIRCUIT OF COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Measure the resistance of harness between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 6 — Chassis ground:***	Is the resistance less than 10 Ω?	Replace the combination meter printed circuit.	Repair the wiring harness.

3. CHECK VEHICLE SPEED SENSOR

	Step	Check	Yes	No
1	**CHECK VEHICLE SPEED SENSOR.** 1)Lift-up the vehicle and support it with safety stands. 2)Remove the combination meter with harness connector. 3)Drive the vehicle at a speed greater than 20 km/h (12 MPH). **Warning:** **Be careful not to get caught in the running wheels.** 4)Measure the voltage between combination meter connector and chassis ground. ***Connector & terminal*** ***(i11) No. 2 (+) — Chassis ground (–):***	Is the voltage less than 1 V ←→ more than 5 V?	Check the speedometer. <Ref. to IDI-14, REMOVAL, Speedometer.>	Go to step **2.**
2	**CHECK VEHICLE SPEED SENSOR POWER SUPPLY.** 1)Turn the ignition switch to OFF. 2)Disconnect the vehicle speed sensor harness connector. 3)Turn the ignition switch to ON. 4)Measure the voltage between vehicle speed sensor connector and engine ground. ***Connector & terminal*** ***(B17) No. 3 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Check the harness for open or short between ignition switch and vehicle speed sensor.

	Step	Check	Yes	No
3	**CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND ENGINE GROUND.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between vehicle speed sensor connector and engine ground. ***Connector & terminal*** ***(B17) No. 2 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **4.**	Repair the wiring harness.
4	**CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND COMBINATION METER.** 1)Disconnect the connector from combination meter. 2)Measure the resistance between vehicle speed sensor harness connector and combination meter harness connector. ***Connector & terminal*** ***(B17) No. 1 — (i11) No. 2:***	Is the resistance less than 10 Ω?	Replace the vehicle speed sensor.	Repair the wiring harness.

4. CHECK TRANSMISSION CONTROL MODULE (TCM)

	Step	Check	Yes	No
1	**CHECK TCM SIGNAL.** 1)Lift-up the vehicle and support it with safety stands. 2)Drive the vehicle faster than 10 km/h (6 MPH). **Warning:** **Be careful not to get caught in the running wheels.** 3)Measure the voltage between TCM connector and chassis ground. ***Connector & terminal*** ***(B56) No. 17 (+) — Chassis ground (−):***	Is the voltage less than 1 V ⟷ more than 5 V?	Go to step **2.**	Check the TCM. <Ref. to 4AT-2, Basic Diagnostic Procedure.>
2	**CHECK HARNESS BETWEEN TCM AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from TCM and combination meter. 3)Measure the resistance between TCM harness connector and combination meter harness connector. ***Connector & terminal*** ***(B56) No. 17 — (i11) No. 2:***	Is the resistance less than 10 Ω?	Check the speed meter. <Ref. to IDI-14, REMOVAL, Speedometer.>	Repair the wiring harness.

5. CHECK ENGINE CONTROL MODULE (ECM)

	Step	Check	Yes	No
1	**CHECK ECM SIGNAL.** 1)Start the engine. 2)Measure the voltage between ECM connector and engine ground. ***Connector & terminal*** ***Turbo model:*** ***(B137) No. 9 (+) — Chassis ground (−):*** ***Non-turbo model without OBD:*** ***(B134) No. 30 (+) — Chassis ground (−):*** ***Non-turbo model with OBD:*** ***(B134) No. 10 (+) — Chassis ground (−):***	Is the voltage 0 ⟷ 14 V or more?	Go to step **2.**	Check the ECM. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>
2	**CHECK HARNESS BETWEEN COMBINATION METER AND ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ECM and combination meter. 3)Measure the resistance between ECM harness connector and combination meter harness connector. ***Connector & terminal*** ***Turbo model:*** ***(B137) No. 9 — (i11) No. 5:*** ***Non-turbo model without OBD:*** ***(B134) No. 30 — (i11) No. 5:*** ***Non-turbo model with OBD:*** ***(B134) No. 10 — (i11) No. 5:***	Is the resistance less than 10 Ω?	Check the tachometer. <Ref. to IDI-15, REMOVAL, Tachometer.>	Repair the wiring harness.

6. CHECK FUEL LEVEL SENSOR

	Step	Check	Yes	No
1	**CHECK ENGINE TYPE.**	Is the displacement 2.5 L or is the engine equipped with turbocharger?	Go to step **2.**	Go to step **7.**
2	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel level sensor. <Ref. to FU(H4DOTC)-63, REMOVAL, Fuel Level Sensor.> 2)Measure the resistance between fuel level sensor terminals when setting the float to FULL and EMPTY position. ***Terminals*** ***No. 3 — No. 5:***	Is the resistance 0.5 to 2.5 Ω (FULL) and 50 to 52 Ω (EMPTY)?	Go to step **3.**	Replace the fuel level sensor.
3	**CHECK FUEL SUB LEVEL SENSOR.** 1)Remove the fuel sub level sensor. <Ref. to FU(H4DOTC)-64, REMOVAL, Fuel Sub Level Sensor.> 2)Measure the resistance between fuel sub level sensor terminals when setting the float to FULL and EMPTY position. ***Terminals*** ***No. 1 — No. 2:***	Is the resistance 0.5 to 2.5 Ω (FULL) and 42 to 44 Ω (EMPTY)?	Go to step **4.**	Replace the fuel sub level sensor.
4	**CHECK HARNESS BETWEEN FUEL SUB LEVEL SENSOR AND COMBINATION METER.** 1)Disconnect the connector from combination meter. 2)Measure the resistance between fuel sub level sensor harness connector terminal and combination meter harness connector terminal. ***Connector & terminal*** ***(R59) No. 1 — (i12) No. 2:***	Is the resistance less than 10 Ω?	Go to step **5.**	Repair the wiring harness.
5	**CHECK HARNESS BETWEEN FUEL LEVEL SENSOR AND FUEL SUB LEVEL SENSOR.** Measure the resistance between fuel level sensor harness connector terminal and fuel sub level sensor harness connector terminal. ***Connector & terminal*** ***(R58) No. 3 — (R59) No.2:***	Is the resistance less than 10 Ω?	Go to step **6.**	Repair the wiring harness.
6	**CHECK FUEL LEVEL SENSOR GROUND CIRCUIT.** Measure the resistance between fuel level sensor harness connector terminal and chassis ground. ***Connector & terminal*** ***(R58) No. 5 — Chassis ground:***	Is the resistance less than 10 Ω?	Check the fuel gauge. <Ref. to IDI-16, REMOVAL, Fuel Gauge.>	Repair the wiring harness.
7	**CHECK FUEL LEVEL SENSOR.** 1)Remove the fuel level sensor. <Ref. to FU(H4SO)-61, REMOVAL, Fuel Level Sensor.> or <Ref. to FU(H4SOw/oOBD)-57, REMOVAL, Fuel Level Sensor.> 2)Measure the resistance between fuel level sensor terminals when setting the float to FULL and EMPTY position. ***Terminals*** ***No. 3 — No. 5:***	Is the resistance 2 to 5 Ω (FULL) and 92 to 95 Ω (EMPTY)?	Go to step **8.**	Replace the fuel level sensor.

	Step	Check	Yes	No
8	**CHECK HARNESS BETWEEN FUEL LEVEL SENSOR AND COMBINATION METER.** 1)Disconnect the connector from combination meter. 2)Measure the resistance between fuel level sensor harness connector terminal and combination meter harness connector terminal. ***Connector & terminal*** ***(R58) No. 3 — (i12) No. 2:***	Is the resistance less than 10 Ω?	Go to step **9.**	Repair the wiring harness.
9	**CHECK FUEL LEVEL SENSOR GROUND CIRCUIT.** Measure the resistance between fuel level sensor harness connector terminal and chassis ground. ***Connector & terminal*** ***(R58) No. 5 — Chassis ground:***	Is the resistance less than 10 Ω?	Check the fuel gauge. <Ref. to IDI-16, REMOVAL.>	Repair the wiring harness.

7. CHECK ENGINE COOLANT TEMPERATURE SENSOR

	Step	Check	Yes	No
1	**CHECK ENGINE COOLANT TEMPERATURE SENSOR.** Check the engine coolant temperature sensor. <Ref. to EN(H4SO)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4SOw/oOBD)-2, Basic Diagnostic Procedure.> or <Ref. to EN(H4DOTC)-2, Basic Diagnostic Procedure.>	Is the engine coolant temperature sensor OK?	Go to step **2.**	Replace the engine coolant temperature sensor.
2	**CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from engine coolant temperature sensor and combination meter. 3)Measure the resistance between engine coolant temperature sensor harness connector and combination meter harness connector. ***Connector & terminal*** ***(E8) No. 3 — (i12) No. 9:***	Is the resistance less than 10 Ω?	Check the water temperature gauge. <Ref. to IDI-17, REMOVAL, Water Temperature Gauge.>	Repair the wiring harness.

8. CHECK OUTSIDE TEMPERATURE INDICATOR

	Step	Check	Yes	No
1	**CHECK AIR CONDITIONER TYPE.**	Is the vehicle equipped with auto A/C?	Go to step **6.**	Go to step **2.**
2	**CHECK POWER SUPPLY FOR AMBIENT SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from combination meter. 3)Turn the ignition switch to ON. 4)Measure the voltage between combination meter terminal and chassis ground. ***Connector & terminal*** ***(i10) No. 11 (+) — Chassis ground (−):***	Is the voltage more than 4 V?	Go to step **3.**	Replace the combination meter printed circuit.
3	**CHECK HARNESS BETWEEN AMBIENT SENSOR AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ambient sensor. 3)Measure the resistance between ambient sensor harness connector terminal and combination meter harness connector terminal. ***Connector & terminal*** ***LHD model:*** ***(F78) No. 1 — (i10) No. 11:*** ***(F78) No. 2 — (i10) No. 8:*** ***RHD model:*** ***(F78) No. 2 — (i10) No. 11:*** ***(F78) No. 1 — (i10) No. 8:***	Is the resistance less than 10 Ω?	Go to step **4.**	Repair the wiring harness.
4	**CHECK AMBIENT SENSOR.** 1)Remove the ambient sensor. 2)Check the ambient sensor. <Ref. to IDI-18, INSPECTION, Ambient Sensor.>	Is the ambient sensor OK?	Go to step **5.**	Replace the ambient sensor.
5	**CHECK OUTSIDE TEMPERATURE INDICATOR.** 1)Connect the combination meter harness connector. 2)Connect a resistor (2.2 kΩ) between terminals of ambient sensor harness connector. 3)Turn the ignition switch to ON and check the outside temperature indicator display.	Is the outside temperature indicator indicating 25°C (77°F)?	Repair the poor contact of ambient sensor harness connector.	Replace the combination meter printed circuit.
6	**CHECK POWER SUPPLY FOR COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from auto A/C control module. 3)Turn the ignition switch to ON. 4)Measure the voltage between auto A/C control module terminal and chassis ground. ***Connector & terminal*** ***(B282) No. 11 (+) — chassis ground (−):***	Is the voltage more than 4 V?	Go to step **7.**	Replace the auto A/C control module.

	Step	Check	Yes	No
7	**CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from combination meter. 3)Measure the resistance between auto A/C control module harness connector terminal and combination meter harness connector terminal. ***Connector & terminal*** ***(B282) No. 11 — (i10) No. 12:***	Is the resistance less than 10 Ω?	Go to step **8.**	Repair the wiring harness.
8	**CHECK POWER SUPPLY FOR AMBIENT SENSOR.** 1)Turn the ignition switch to ON. 2)Measure the voltage between auto A/C control module terminal and chassis ground. ***Connector & terminal*** ***(B283) No. 9 (+) — chassis ground (−):***	Is the voltage more than 4 V?	Go to step **9.**	Replace the auto A/C control module.
9	**CHECK HARNESS BETWEEN AMBIENT SENSOR AND COMBINATION METER.** 1)Turn the ignition switch to OFF. 2)Disconnect the connector from ambient sensor. 3)Measure the resistance between ambient sensor harness connector terminal, combination meter harness connector terminal and auto A/C control module harness connector terminal. ***Connector & terminal*** ***LHD model:*** ***(F78) No. 1 — (i10) No. 11:*** ***(F78) No. 1 — (B283) No. 9:*** ***(F78) No. 2 — (i10) No. 8:*** ***RHD model:*** ***(F78) No. 2 — (i10) No. 11:*** ***(F78) No. 2 — (B283) No. 9:*** ***(F78) No. 1 — (i10) No. 8:***	Is the resistance less than 10 Ω?	Go to step **10.**	Repair the wiring harness.
10	**CHECK AMBIENT SENSOR.** 1)Remove the ambient sensor. 2)Check the ambient sensor. <Ref. to IDI-18, INSPECTION, Ambient Sensor.>	Is the ambient sensor OK?	Go to step **11.**	Replace the ambient sensor.
11	**CHECK OUTSIDE TEMPERATURE INDICATOR.** 1)Connect the combination meter and auto A/C control module harness connector. 2)Connect a resistor (2.2 kΩ) between terminals of ambient sensor harness connector. 3)Turn the ignition switch to ON and check the outside temperature indicator display.	Is the outside temperature indicator indicating 25°C (77°F)?	Repair the poor contact of ambient sensor harness connector.	Replace the combination meter printed circuit.

3. Combination Meter Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Set the tilt steering at lowest position.
3) Remove the screws and detach the meter visor.

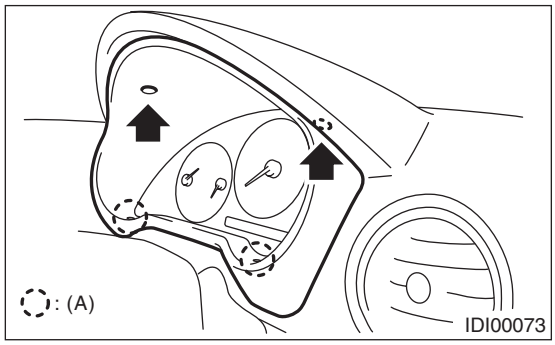

(A) Hook

4) Remove the screws of combination meter and pull out the meter toward you.

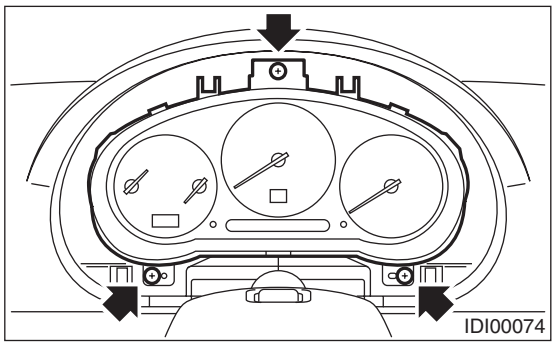

5) Disconnect the connector in the upper area of combination meter to remove the meter.

CAUTION:
• Be careful not to damage the meter or instrument panel.
• Pay particular attention to avoid damaging the meter glass.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
• Make sure that electrical connector is connected securely.
• Make sure that each meter operates normally.

C: DISASSEMBLY

1. EXCEPT STi MODEL FOR AUSTRALIA

CAUTION:
Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.

1) Disengage the claw (F) to remove the case (B) from back cover (A).
2) Disengage the claw (G) to remove the meter glass (E), reflector (D), and window plate (C) from inner case.

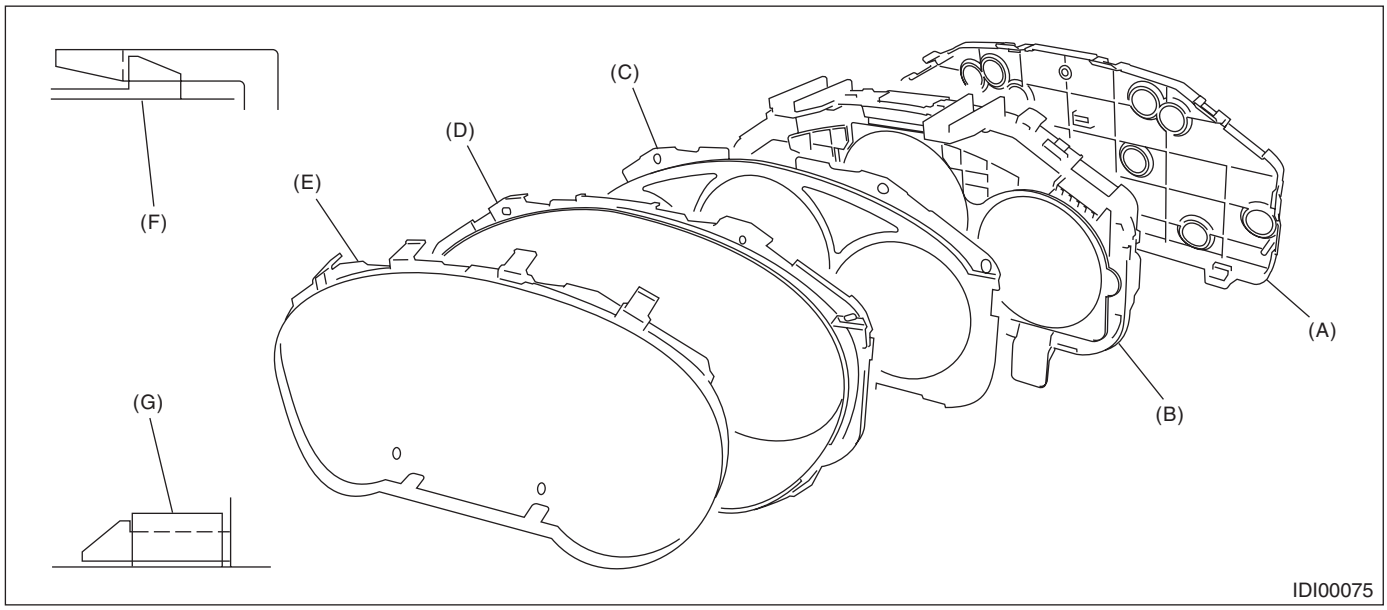

3) Pull up the claw (A) in portion (B) of combination meter printed circuit (C) with combination pliers. Push out the speedometer and tachometer assembly (D) and fuel gauge and water temperature gauge assembly (E) using hole (F).
4) Pull up the claw in center of combination meter printed circuit (C), and remove the printed circuit from case (G).

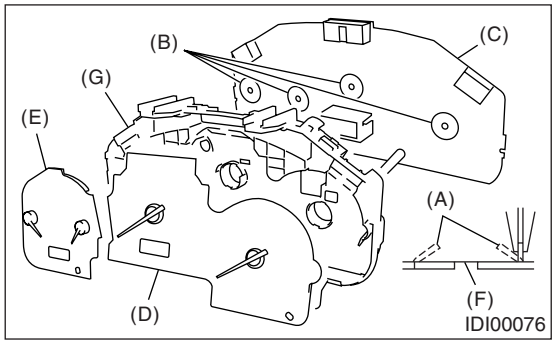

2. STi MODEL FOR AUSTRALIA

CAUTION:
Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.

Disengage the claw (E) to remove the meter glass (D), reflector (C), and window plate (B) from inner case (A).

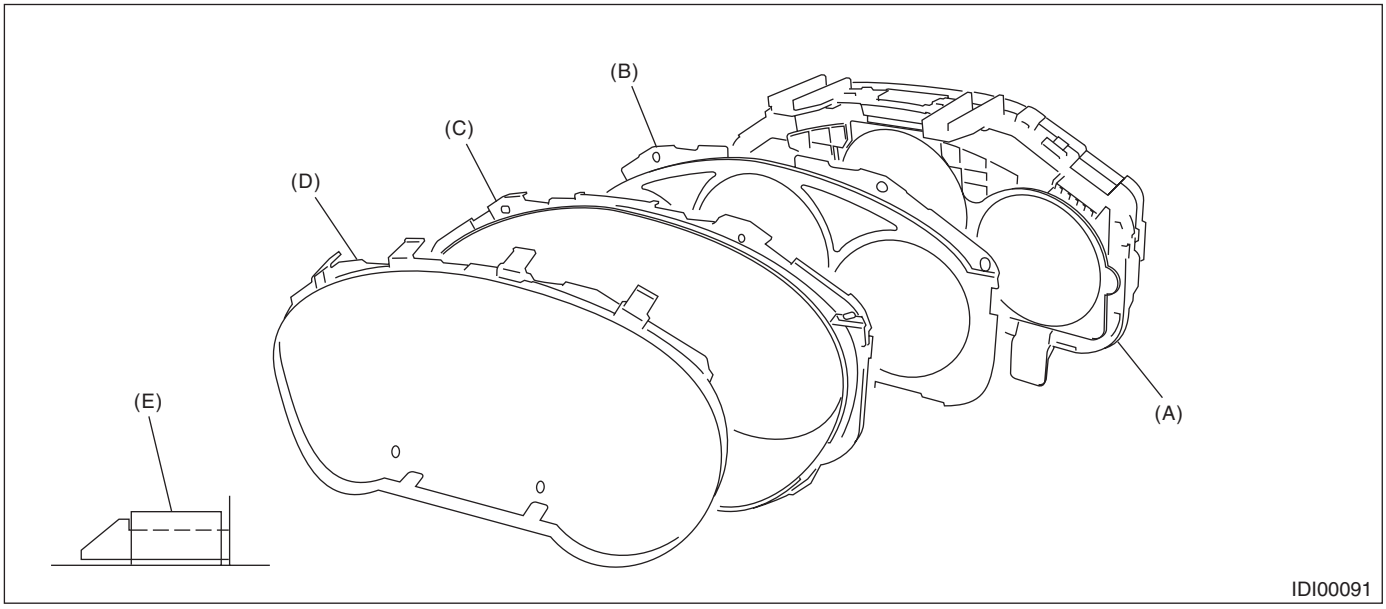

3. BULB REPLACEMENT

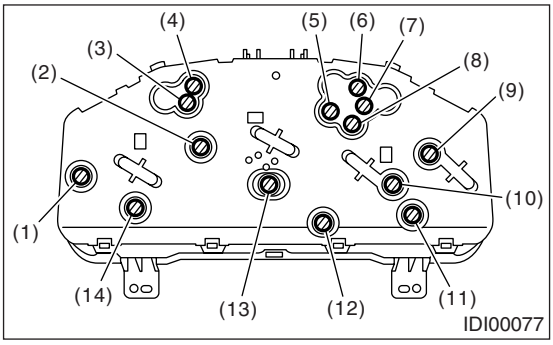

(1) Tachometer (Non-turbo model) or speedometer (Turbo model)
(2) Speedometer and tachometer
(3) Turn signal indicator light (RH)
(4) HI-beam indicator light
(5) Speedometer (Non-turbo model) or tachometer (Turbo model)
(6) POWER indicator light
(7) Turn signal indicator light (LH)
(8) Brake fluid and parking brake warning light
(9) Fuel gauge
(10) Temperature gauge
(11) LCD (Outside temperature indicator)
(12) Charge warning light
(13) LCD (Odometer and tripmeter: non-turbo model)
(14) LCD (Odometer and tripmeter: turbo model)

NOTE:
Replace the meter case assembly of STi model for Australia if it does not function properly, because the warning light and indicator light are made from LED.

D: ASSEMBLY

Assemble in the reverse order of disassembly.

4. Speedometer

A: REMOVAL

Disassemble the combination meter, and then remove the speedometer and tachometer assembly. <Ref. to IDI-12, DISASSEMBLY, Combination Meter Assembly.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the speedometer resistance.

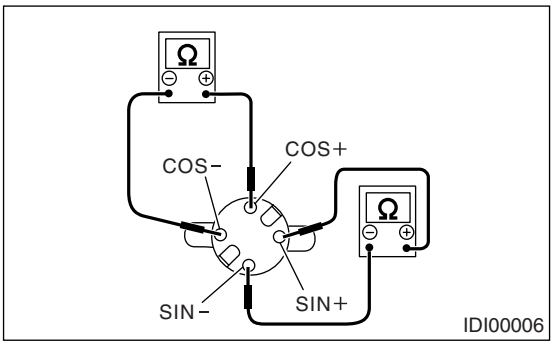

Terminal	Resistance
Terminals SIN+ and SIN−	200±8 Ω
Terminals COS+ and COS−	200±8 Ω

If NG, replace the speedometer and tachometer assembly.
If OK, replace the combination meter printed circuit.

5. Tachometer

A: REMOVAL

Disassemble the combination meter, and then remove the speedometer and tachometer assembly. <Ref. to IDI-12, DISASSEMBLY, Combination Meter Assembly.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the tachometer resistance.

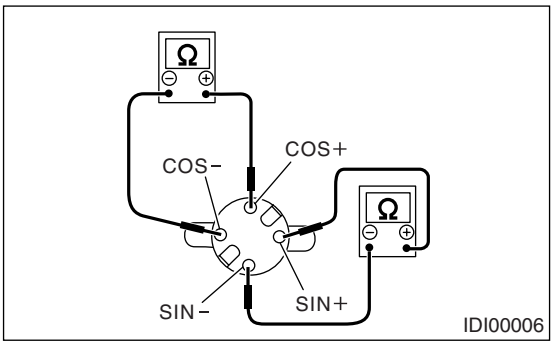

Terminal	Resistance
Terminals SIN+ and SIN−	200±8 Ω
Terminals COS+ and COS−	200±8 Ω

If NG, replace the speedometer and tachometer assembly.
If OK, replace the combination meter printed circuit.

6. Fuel Gauge

A: REMOVAL

Disassemble the combination meter, and then remove the water temperature gauge and fuel gauge assembly. <Ref. to IDI-12, DISASSEMBLY, Combination Meter Assembly.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the fuel gauge resistance.

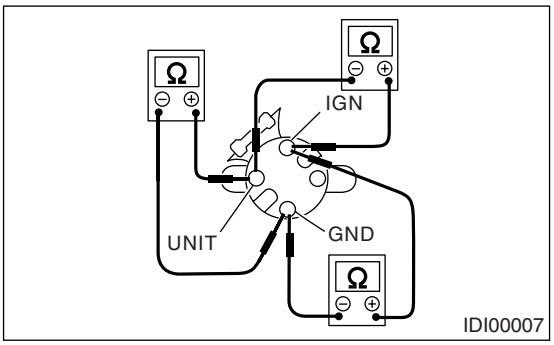

Terminal	Resistance
Terminals IGN and GND	170±10 Ω
Terminals IGN and UNIT	35±10 Ω
Terminals UNIT and GND	136±10 Ω

If NG, replace the water temperature gauge and fuel gauge assembly.
If OK, replace the combination meter printed circuit.

7. Water Temperature Gauge

A: REMOVAL

Disassemble the combination meter, and then remove the tachometer and water temperature gauge and fuel gauge assembly. <Ref. to IDI-12, DISASSEMBLY, Combination Meter Assembly.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the water temperature gauge resistance.

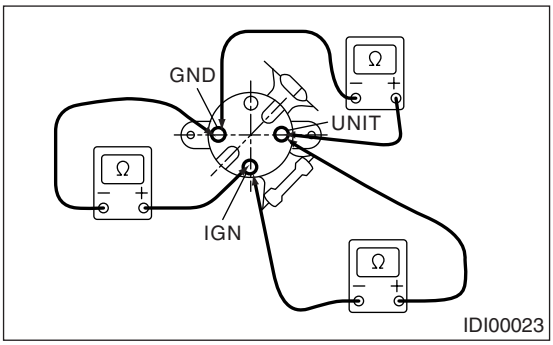

Terminal	Resistance
Terminals IGN and GND	208±10 Ω
Terminals IGN and UNIT	56±10 Ω
Terminals UNIT and GND	264±10 Ω

If NG, replace the water temperature gauge and fuel gauge assembly.
If OK, replace the combination meter printed circuit.

8. Ambient Sensor

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the ambient sensor connector.
3) Remove the ambient sensor (A) from radiator lower panel.

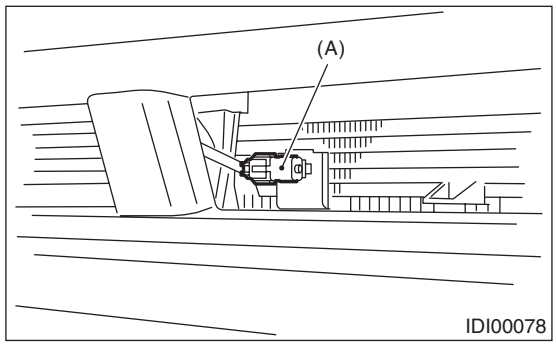

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the ambient sensor resistance.

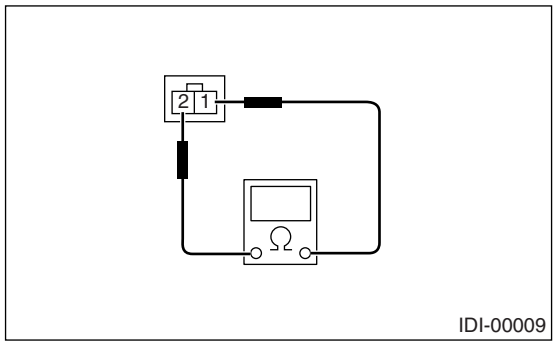

Terminal	Resistance
1 and 2	2.2 kΩ/25°C (77°F)

If NG, replace the ambient sensor.

SEATS

SE

Page

1. General Description 2
2. Front Seat 6
3. Rear Seat 17

1. General Description

A: COMPONENT

1. FRONT SEAT

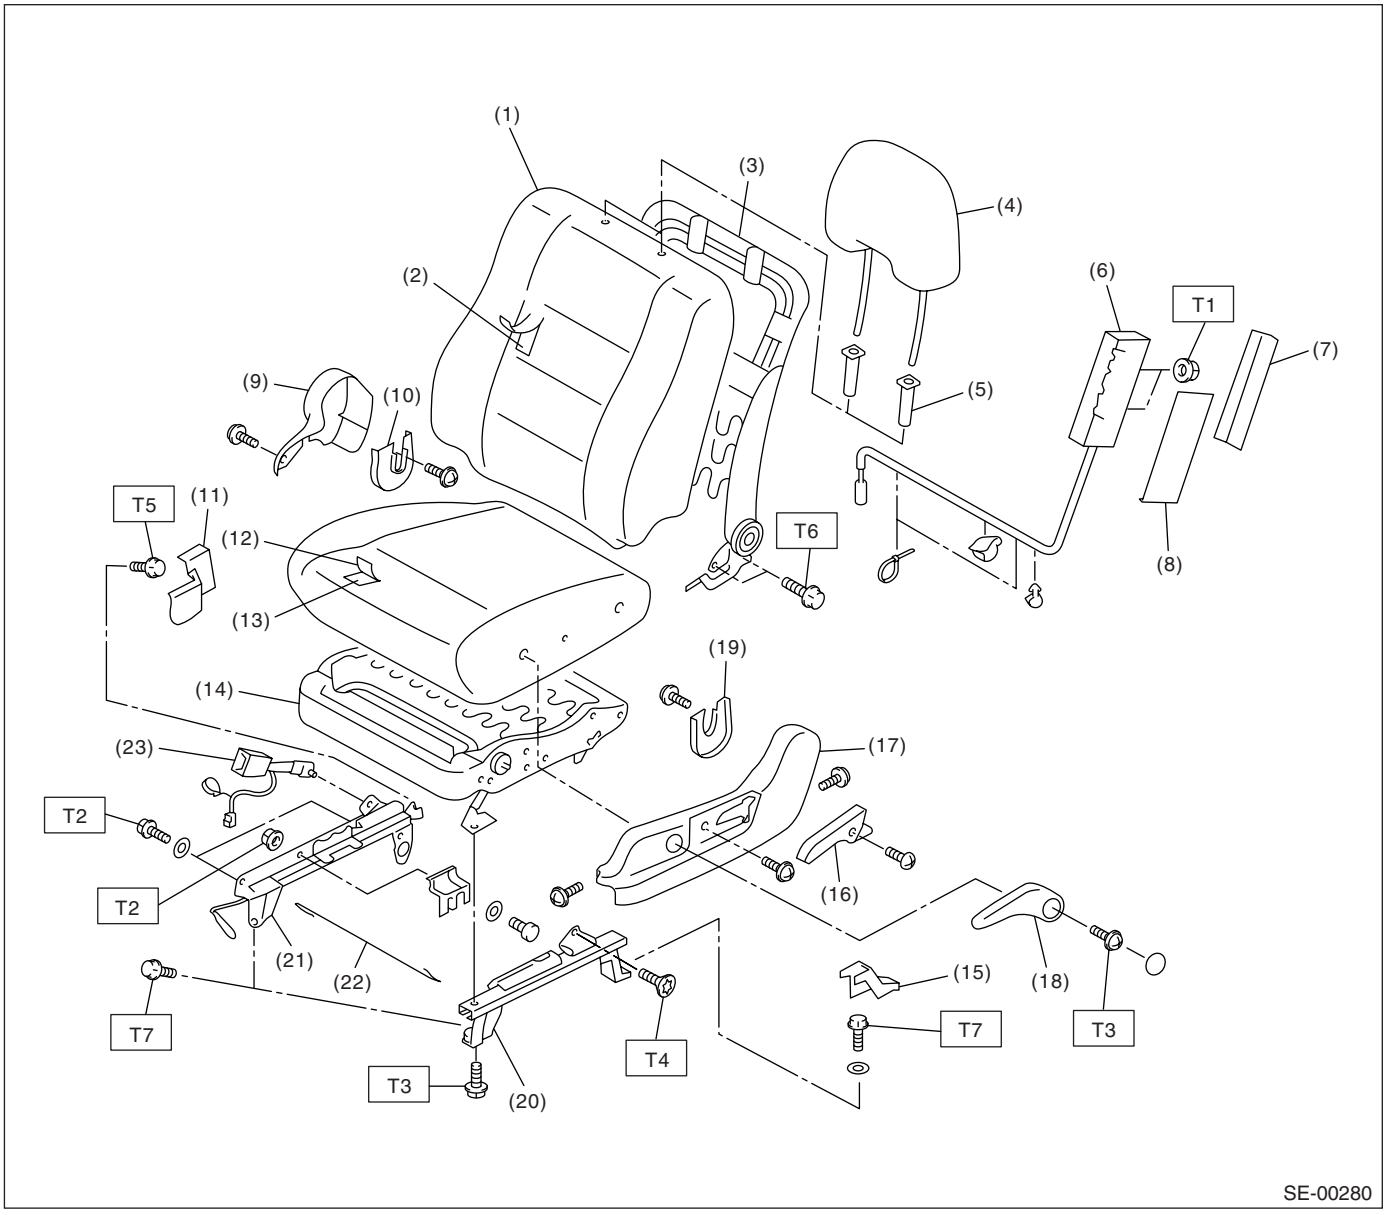

(1) Backrest cover
(2) Backrest pad
(3) Backrest frame ASSY
(4) Headrest ASSY
(5) Headrest lock bush
(6) Side airbag module
(7) Support pad (B)
(8) Support pad (A)
(9) Seat hinge inner cover
(10) Seat hinge inner cover LH
(11) Bolt cover LH
(12) Seat cushion cover
(13) Seat cushion pad
(14) Seat cushion frame ASSY
(15) Bolt cover RH
(16) Reclining lever
(17) Seat hinge outer cover
(18) Lifter lever
(19) Seat hinge inner cover RH
(20) Outer slide rail
(21) Inner slide rail
(22) Connecting wire
(23) Inner belt

Tightening torque: N·m (kgf-m, ft-lb)
T1: 5.9 (0.60, 4.35)
T2: 10 (1.02, 7.38)
T3: 17.7 (1.81, 13.1)
T4: 20 (2.04, 14.8)
T5: 30 (3.06, 22.1)
T6: 52 (5.30, 38.4)
T7: 53 (5.40, 39.1)

2. REAR SEAT (SEDAN MODEL)

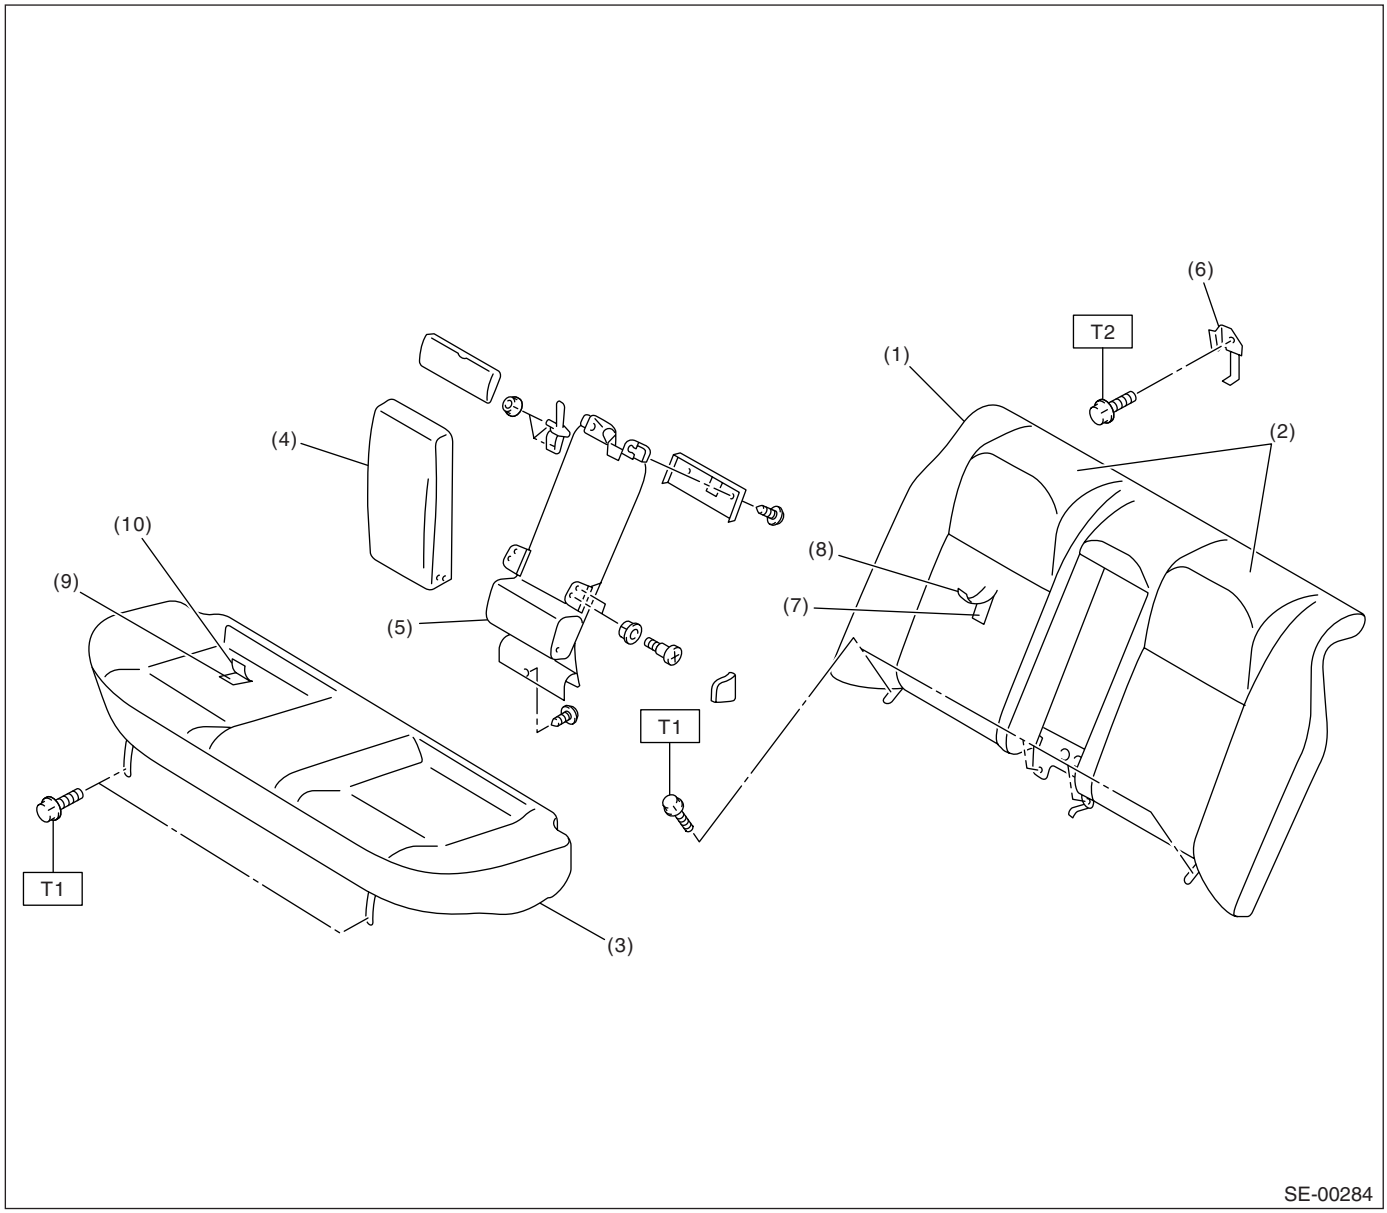

(1)	Backrest	(6)	Hook
(2)	Headrest	(7)	Backrest pad ASSY
(3)	Cushion	(8)	Backrest cover ASSY
(4)	Arm rest	(9)	Rear pad & cushion frame ASSY
(5)	Center through frame	(10)	Rear cushion cover

Tightening torque: N·m (kgf-m, ft-lb)
T1: 10 (1.02, 7.38)
T2: 24.5 (2.5, 18.1)

3. REAR SEAT (WAGON MODEL)

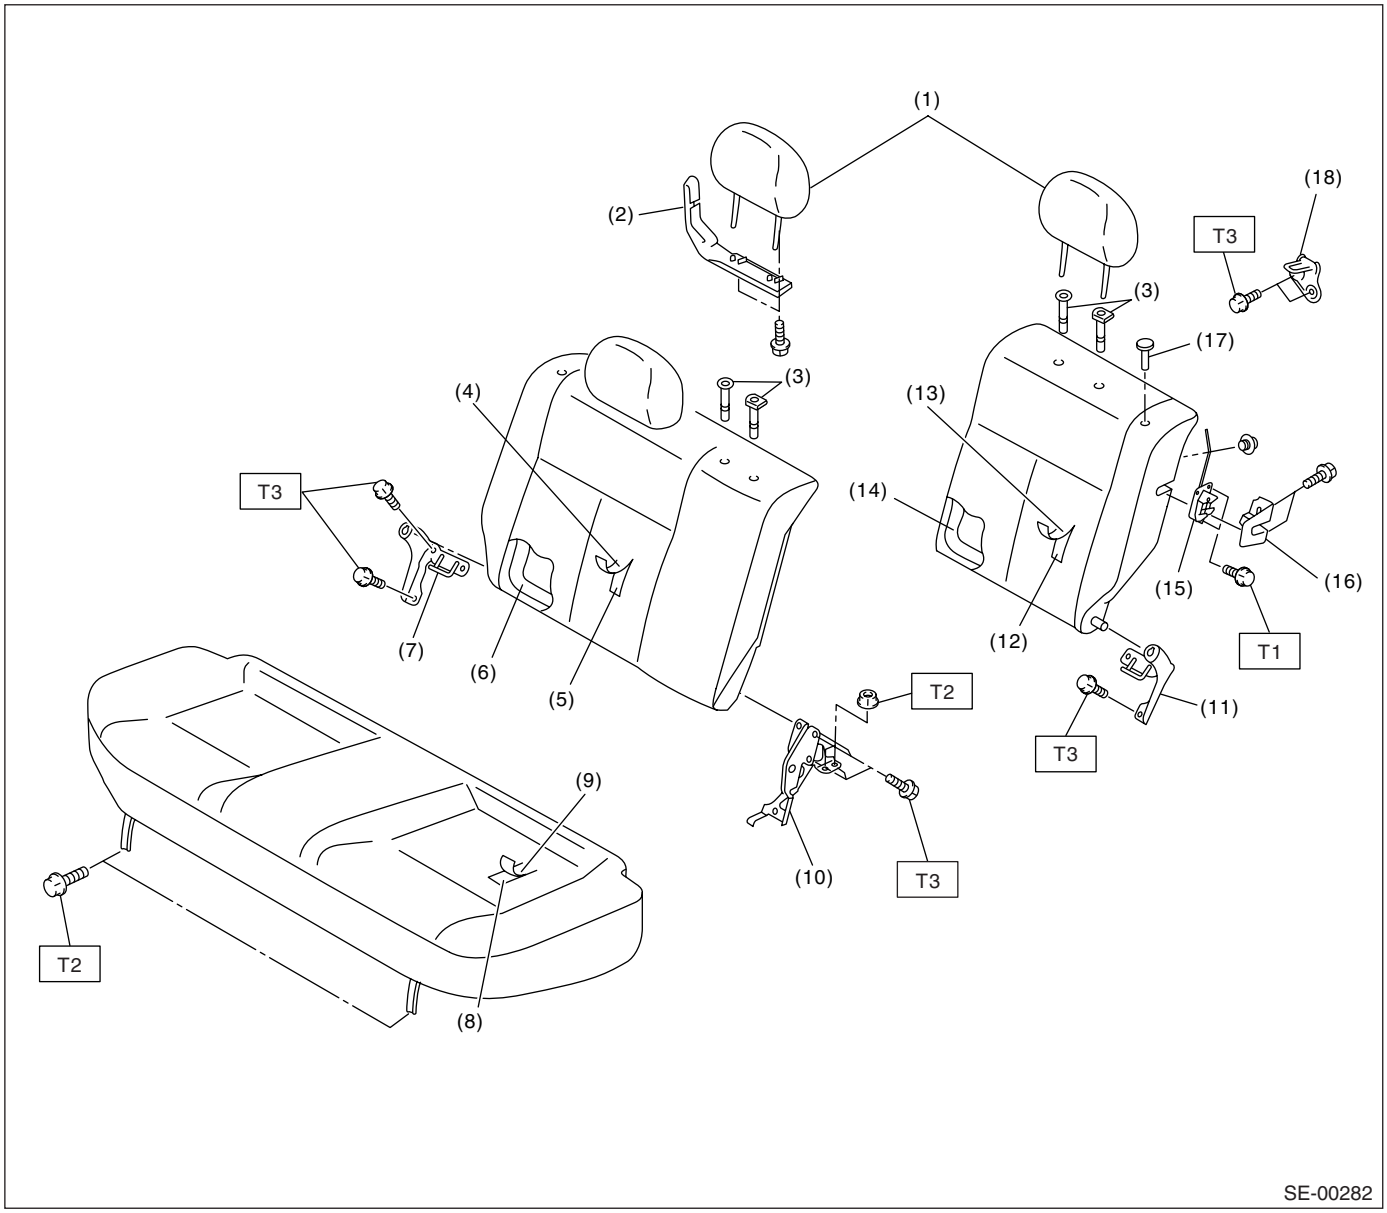

(1) Headrest
(2) Seat belt guide
(3) Headrest bush
(4) Backrest cover RH
(5) Backrest pad RH
(6) Backrest frame RH
(7) Hinge ASSY RH
(8) Seat cushion cover
(9) Seat cushion pad
(10) Hinge ASSY CTR
(11) Hinge ASSY LH
(12) Backrest pad LH
(13) Backrest cover LH
(14) Backrest frame LH
(15) Seat back latch
(16) Seat back latch cover
(17) Backrest knob
(18) Striker

Tightening torque: N·m (kgf-m, ft-lb)
T1: 17.3 (1.76, 12.8)
T2: 24.5 (2.5, 18.1)
T3: 33 (3.3, 24.6)

B: CAUTION

When removing the front seat from a side airbag loaded vehicle, follow cautions given in the airbag section.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Long Nose Pliers	Used for removing hog ring.
Hog Ring Pliers	Used for installing hog ring.
TORX® T30	Used for removing and installing slide rail.

2. Front Seat

A: REMOVAL

1) Disconnect the ground cable from battery.

CAUTION:
The airbag system is fitted with a backup power source. If the airbag system is serviced within 20 seconds after the ground cable is disconnected, it may inflate.

2) While pressing the headrest lock button, remove the headrest.

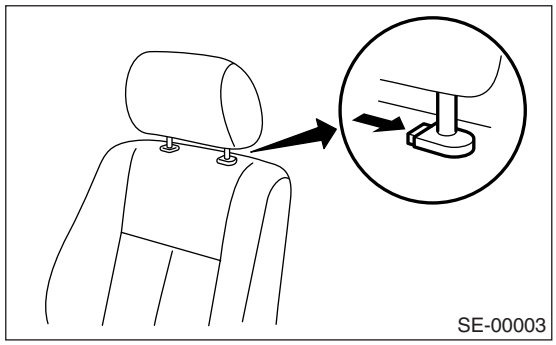
SE-00003

3) Tilt forward the backrest.
4) Move the seat to full front end.
5) Remove the bolt cover at rear end of slide rail.

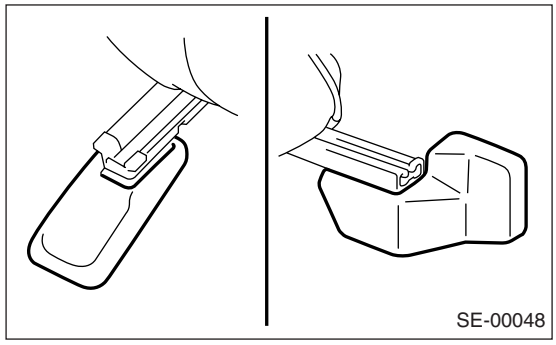
SE-00048

6) Remove the two bolts at rear side of seat rail.

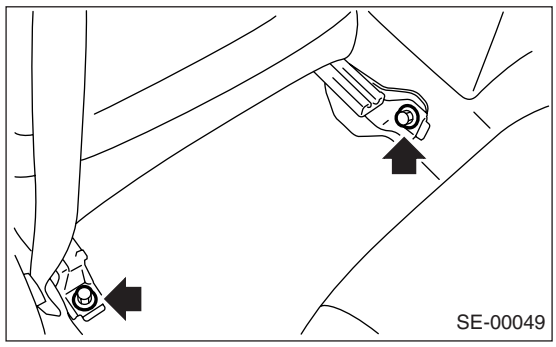
SE-00049

7) Move the seat to full rear end.

8) Remove the two bolts at front side of seat rail.

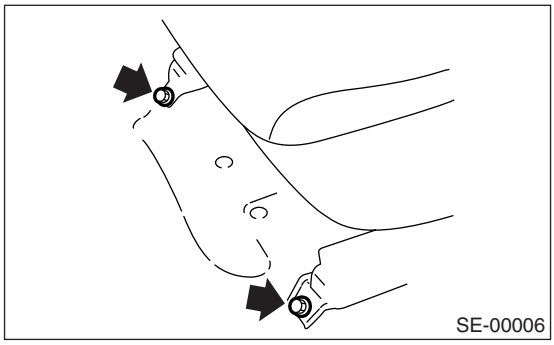
SE-00006

9) Disconnect the connector under seat.
- Seat belt warning light connector (Driver's seat)
- Side airbag connector (with side airbag)

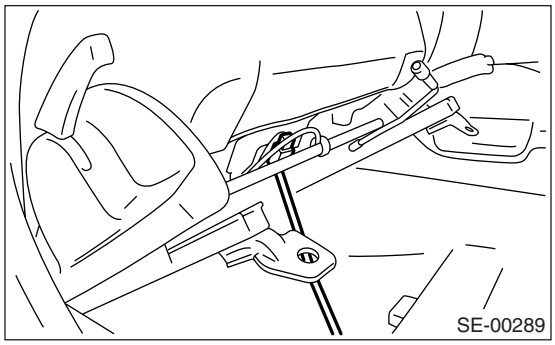
SE-00289

10) Remove the front seat from vehicle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to SE-2, FRONT SEAT, COMPONENT, General Description.>

C: DISASSEMBLY

1. DRIVER'S SEAT

• Standard seat

1) Remove the seat from vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
2) Remove the seat lifter cover using a flat tip screwdriver or equivalent, and then loosen the inside bolt to remove seat lifter lever.

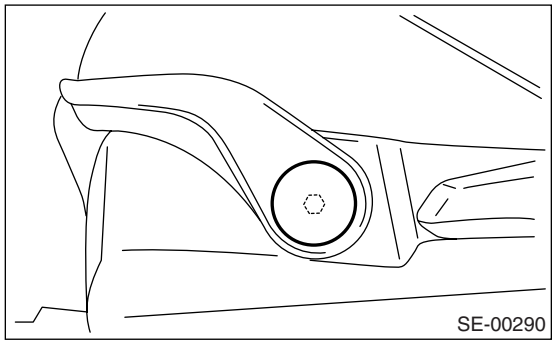
SE-00290

3) Remove the reclining lever and seat hinge outer cover.

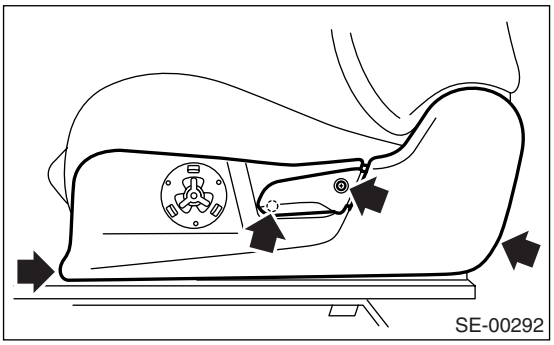

4) Remove the seat hinge inner cover.

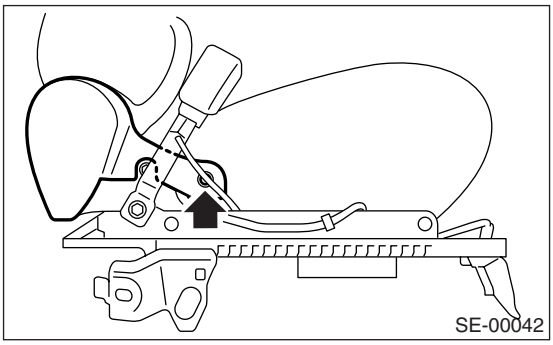

5) Remove two bolts from reclining hinge on each side.

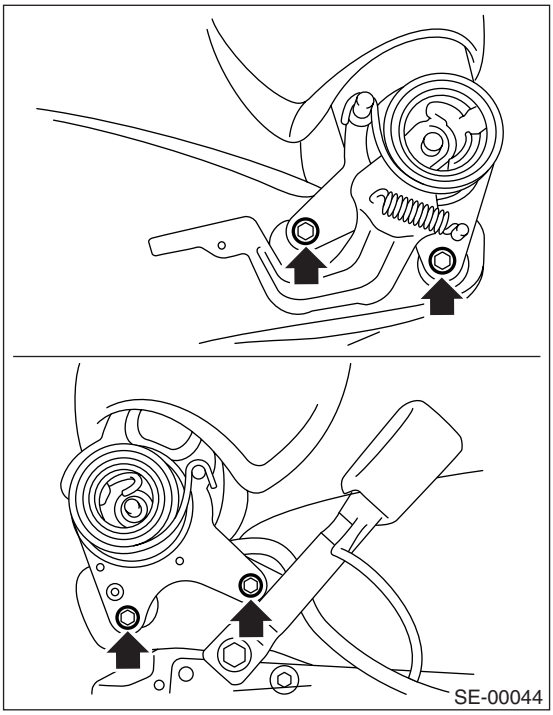

6) Remove the hook at bottom of backrest.

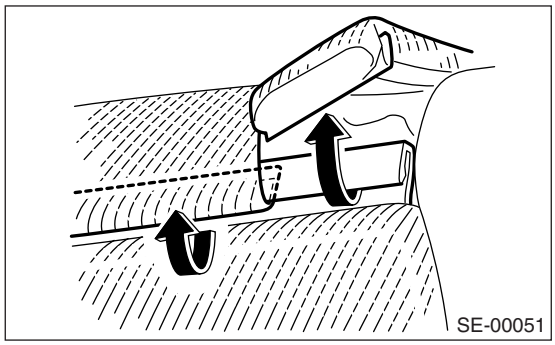

7) Open the zipper behind of backrest.

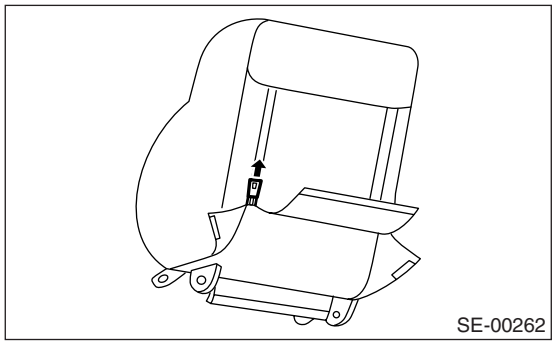

8) Remove the hog rings (A) of backrest cover.

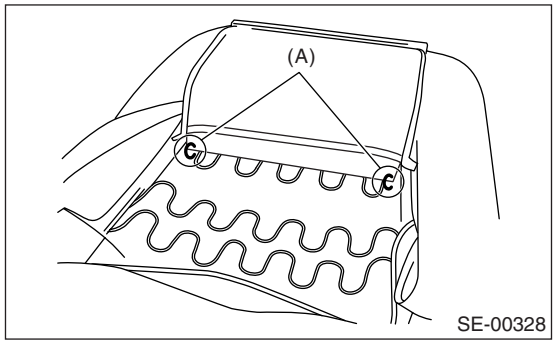

9) Remove the hog rings (A) which secure the backrest cover and backrest pad.

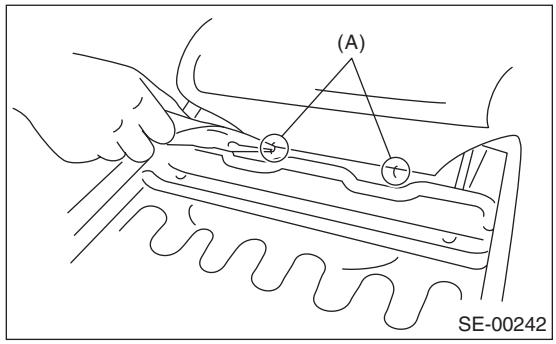

10) Open the zipper behind of backrest cover, and then remove the hog rings (A) at side of inside backrest from backrest frame. (Side airbag equipped seat)

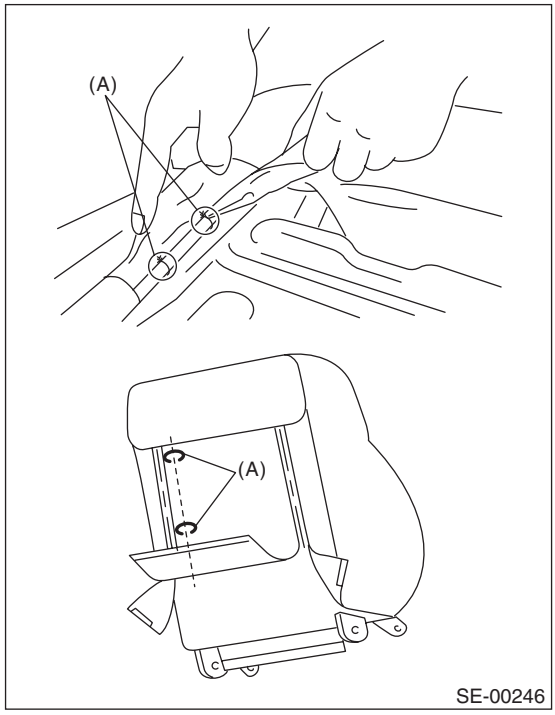

11) Remove the headrest bushes.

NOTE:
Push the headrest bushes to outside of seat from inside, and then remove them.

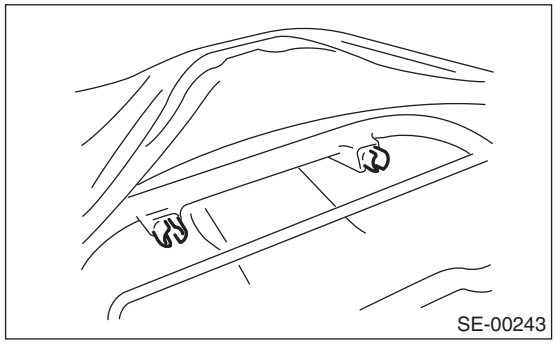

12) Pull out the backrest frame.
13) Remove the hog rings (A) at bottom of seat back. (Side airbag equipped seat)

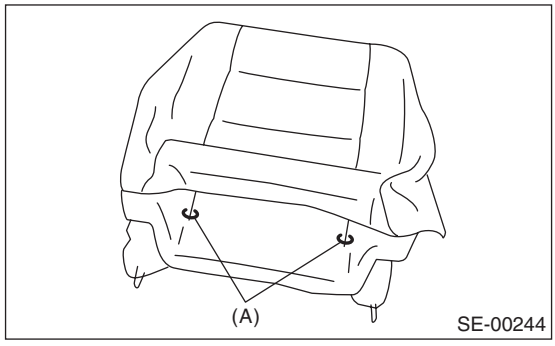

14) Remove the hog rings (A) at front of seat back, and then remove the seat back cover from seat back.

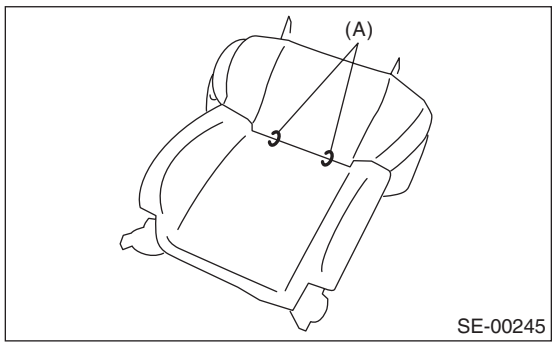

15) Remove the connecting wire (A), and then loosen the bolts and nuts to remove slide rail.

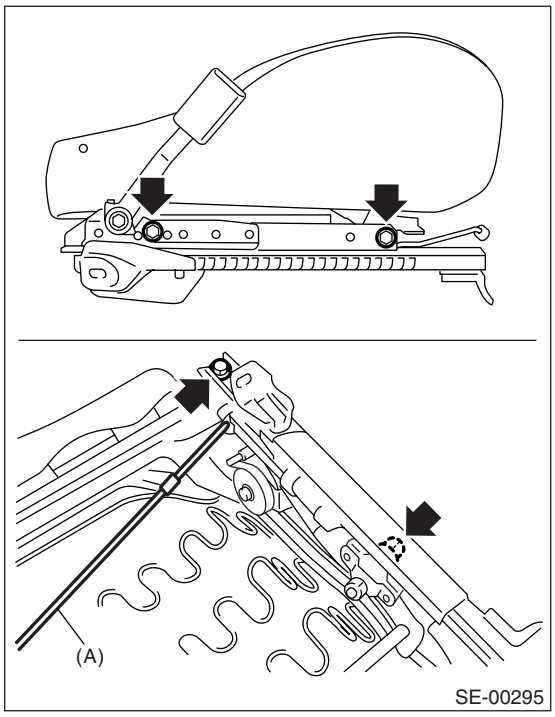

16) Remove the inner belt.

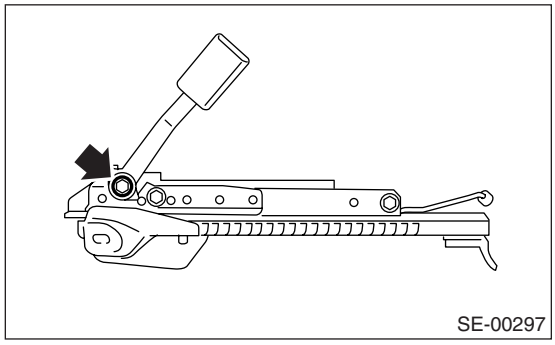

17) Remove the hook (A), and then remove the seat cushion frame.

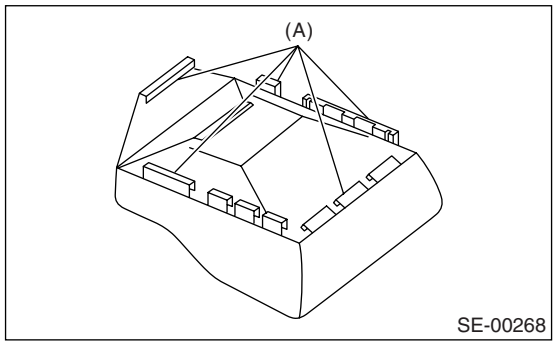

18) Remove the hog rings (A), and then remove the seat cushion cover from seat cushion pad.

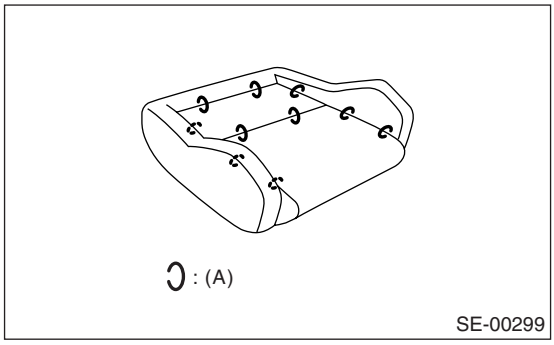

19) Open the zipper at bottom of headrest, and then remove the headrest cover from headrest.

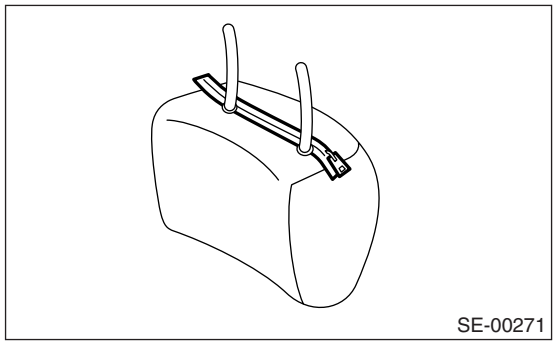

• Bucket type seat

1) Remove the seat from vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
2) Remove the seat lifter cover using a flat tip screwdriver or equivalent, and then loosen inside bolt to remove seat lifter lever.

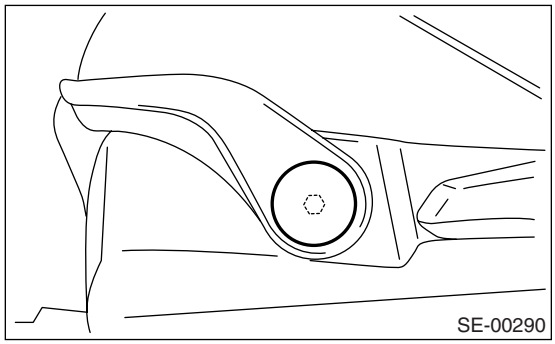

3) Remove the reclining lever and seat hinge outer cover.

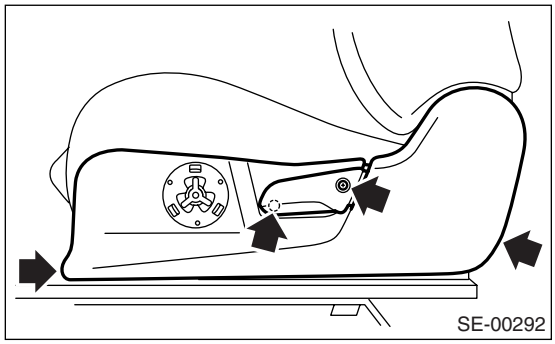

4) Remove the seat hinge inner cover.

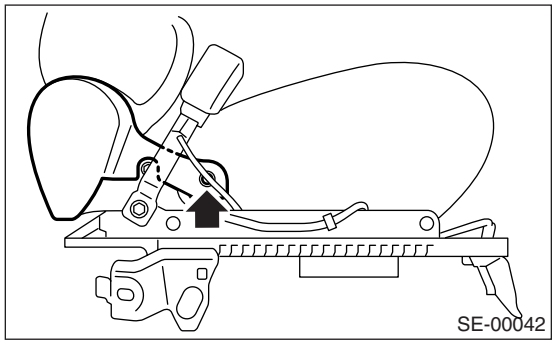

5) Remove two bolts from reclining hinge on each side.

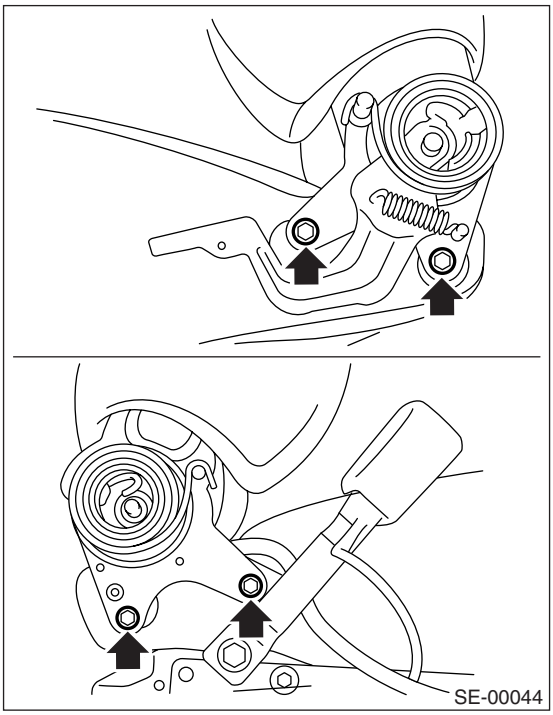

6) Remove the hook at bottom of backrest.

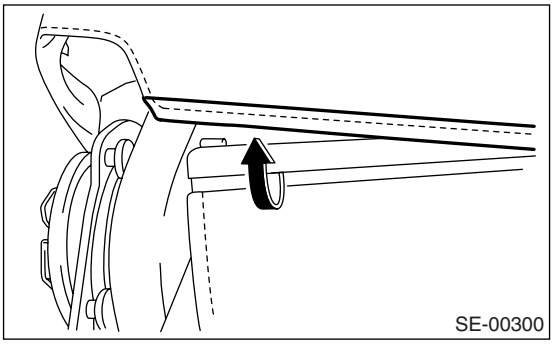

7) Open the zipper, and then pull out the backrest frame. (Side airbag not equipped seat)

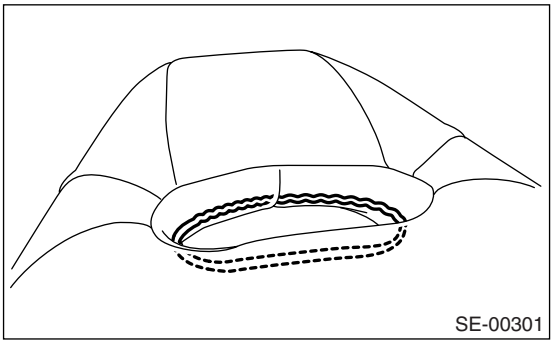

8) Open the zipper behind of backrest. (Side airbag equipped seat)

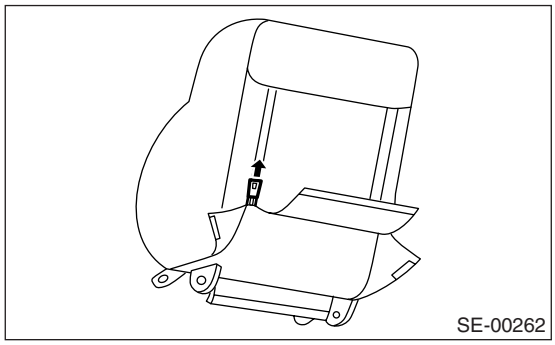

9) Remove the hog rings (A) of backrest cover. (Side airbag equipped seat)

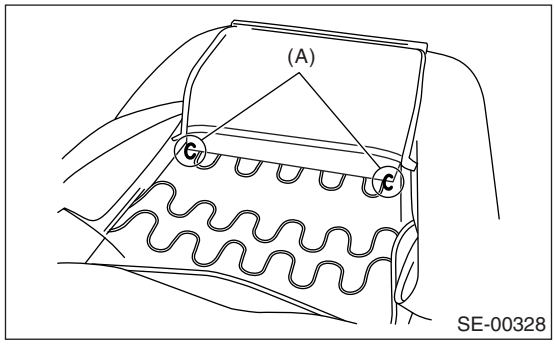

10) Open the zipper behind of backrest cover, and then remove the hog rings (A) at side of inside backrest from backrest frame. (Side airbag equipped seat)

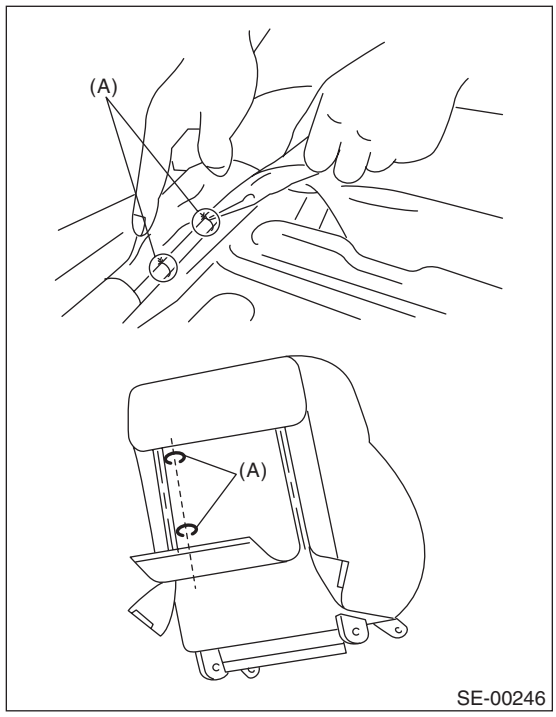

11) Pull out the backrest frame. (Side airbag equipped seat)

12) Remove the hog rings (A) at bottom of seat back. (Side airbag equipped seat)

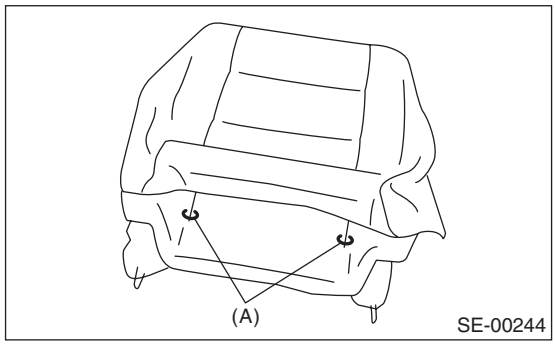

13) Remove the hog rings (A) at front of seat back, and then remove the seat back cover from seat back. (Side airbag equipped seat)

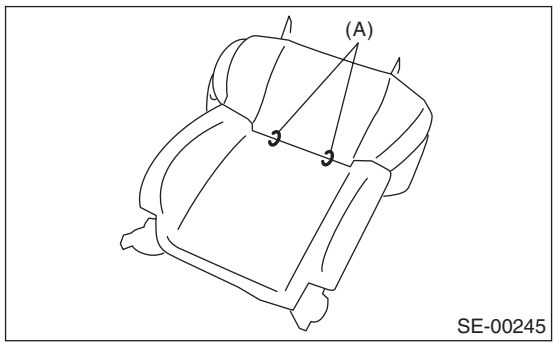

14) Remove the connection wire (A), and then loosen the bolts and nuts to remove slide rail.

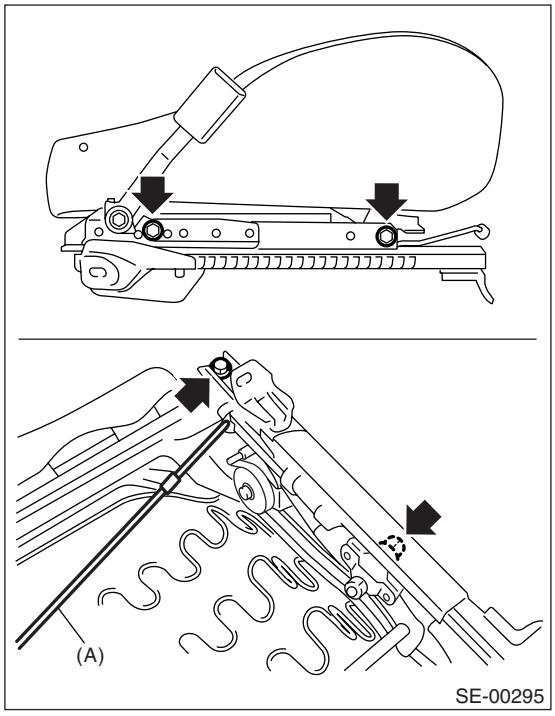

15) Remove the inner belt.

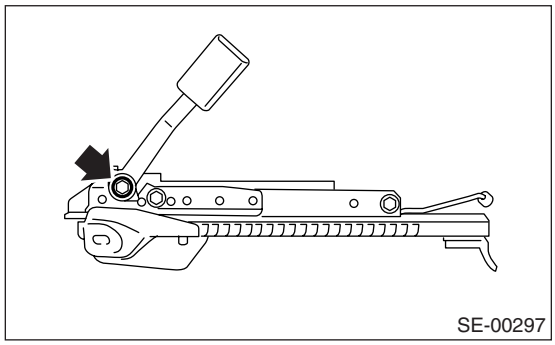

16) Remove the hook (A), and then remove the seat cushion frame.

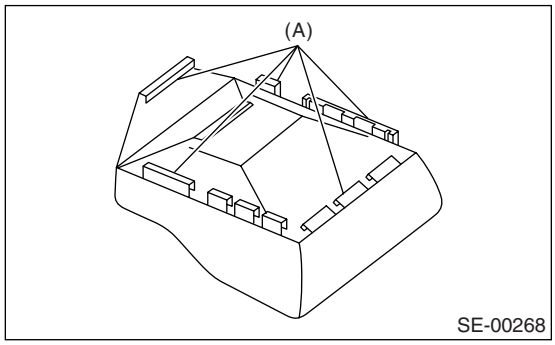

17) Remove the hog rings (A), and then remove the seat cushion cover from seat cushion pad.

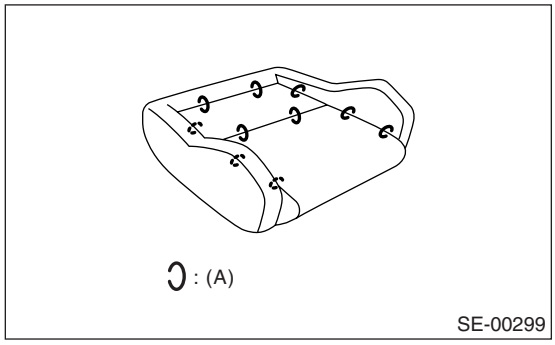

2. PASSENGER'S SEAT

• Standard seat

1) Remove the seat from vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
2) Remove the reclining lever and seat hinge cover outer.

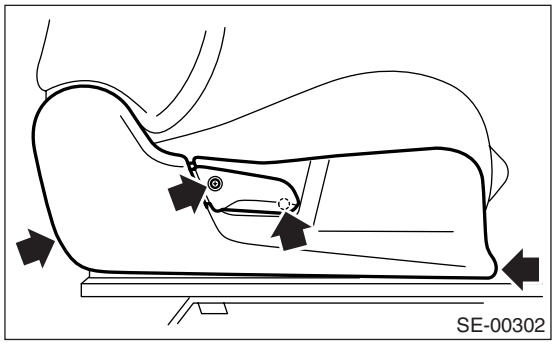
SE-00302

3) Remove the seat hinge cover inner.

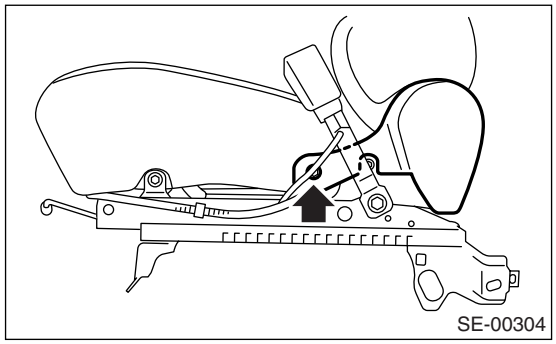
SE-00304

4) Remove the bolts from reclining hinge on each side.

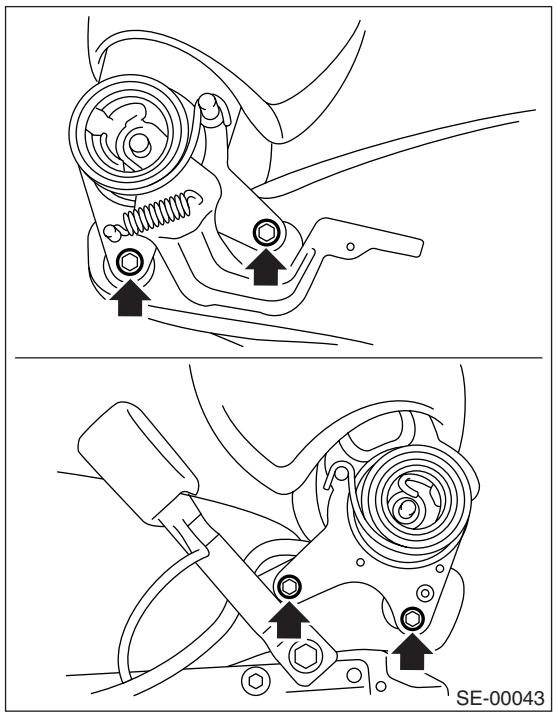
SE-00043

5) Remove the hook at bottom of backrest.

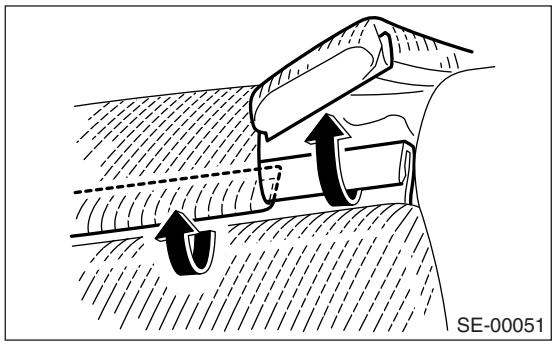
SE-00051

6) Open the zipper behind of backrest.

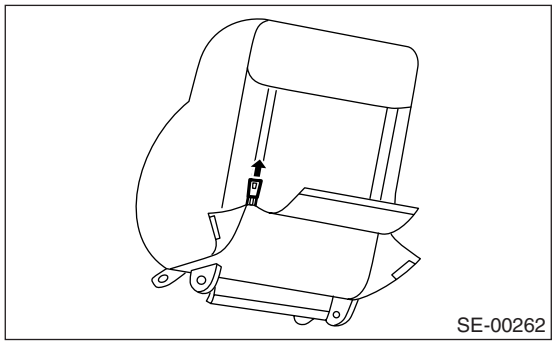
SE-00262

7) Remove the hog rings (A) of backrest cover.

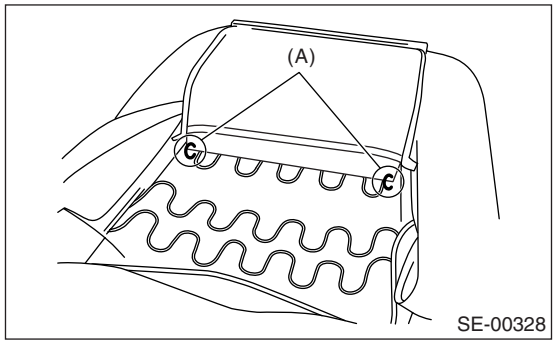

SE-00328

8) Remove the hog rings (A) which secure the backrest cover and backrest pad.

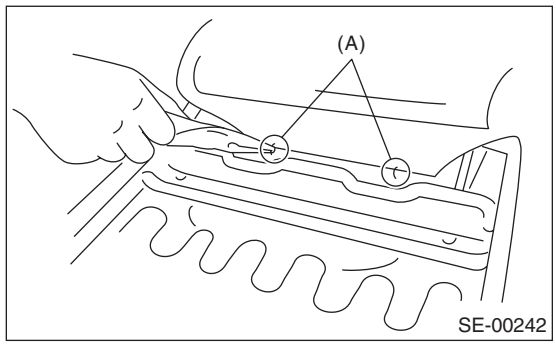

SE-00242

9) Remove the hog rings (A) at side of inside backrest from backrest frame. (Side airbag equipped model)

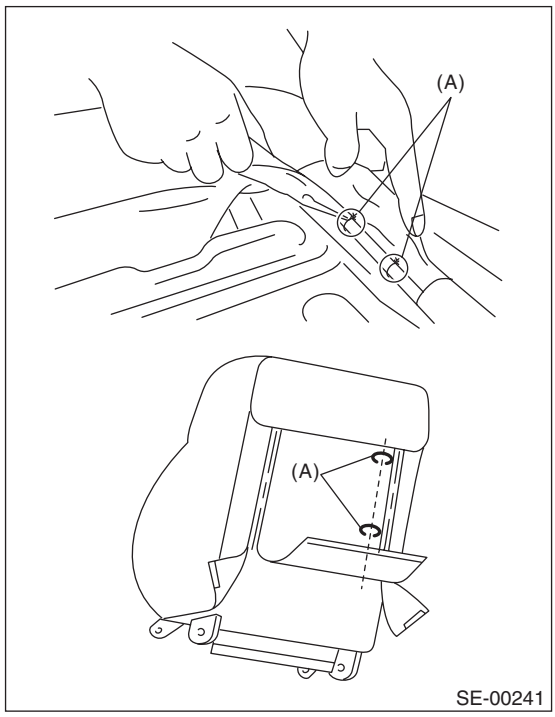

10) Remove the headrest bushes.

NOTE:
Push the headrest bushes to outside of seat from inside, and then remove them.

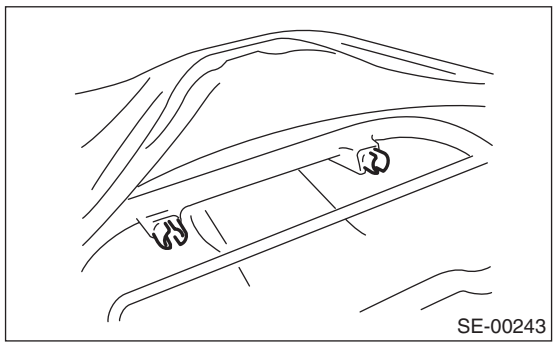

11) Pull out the backrest frame.
12) Remove the hog rings (A) at bottom of seat back. (Side airbag equipped seat)

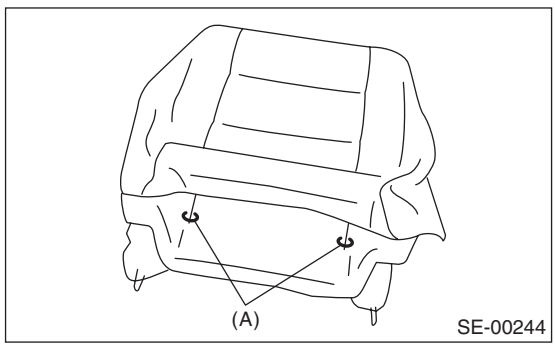

13) Remove the hog rings (A) at front of seat back, and then remove the seat back cover from seat back.

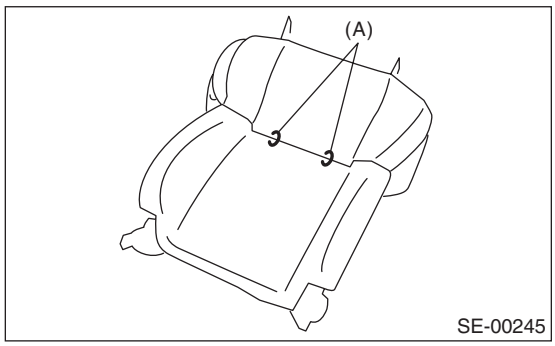

14) Loosen the bolts and nuts to remove the seat cushion from slide rail.

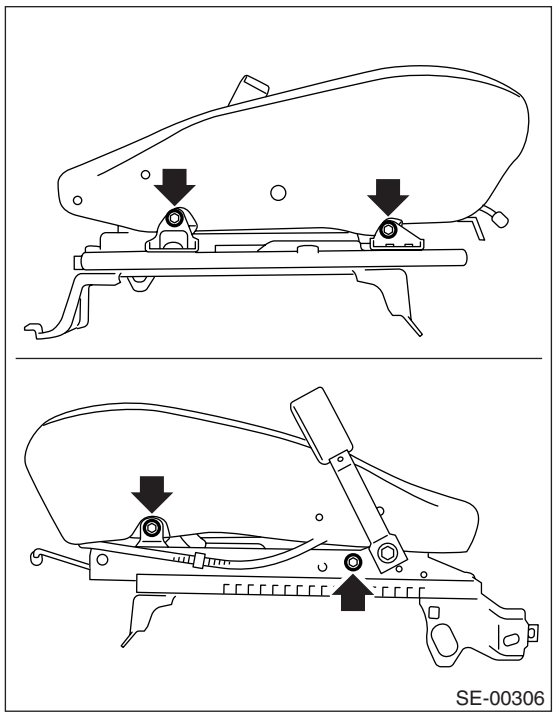

15) Remove the inner belt.

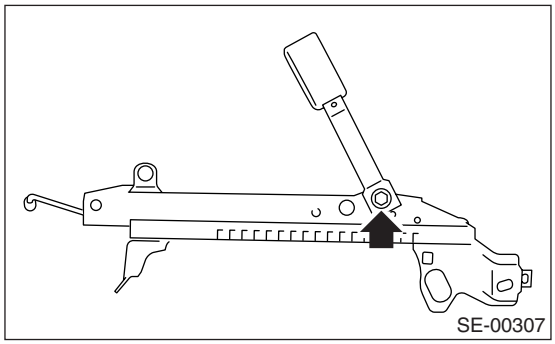

16) Remove the hooks (A), and then remove the seat cushion frame.

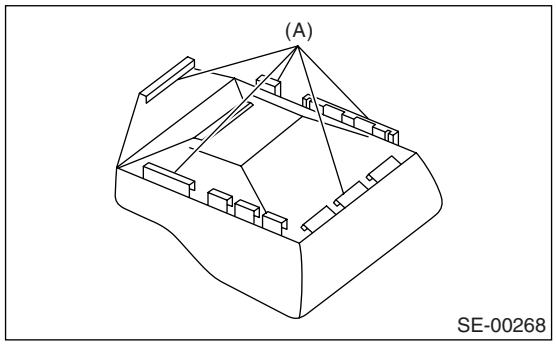

17) Remove the hog rings (A), and then remove seat cushion cover from seat cushion pad.

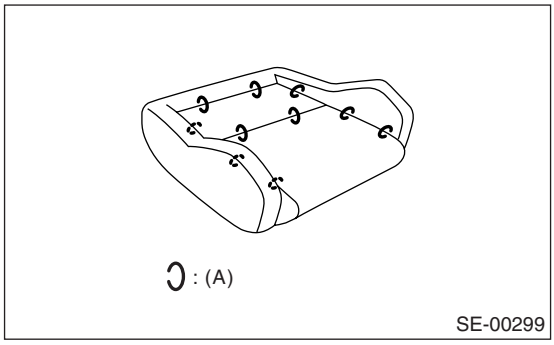

18) Open the zipper at bottom of headrest, and then remove the headrest cover from headrest.

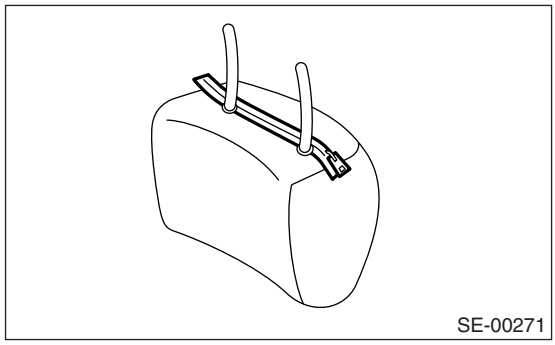

• Bucket type seat

1) Remove the seat from vehicle. <Ref. to SE-6, REMOVAL, Front Seat.>
2) Remove the reclining lever and seat hinge outer cover.

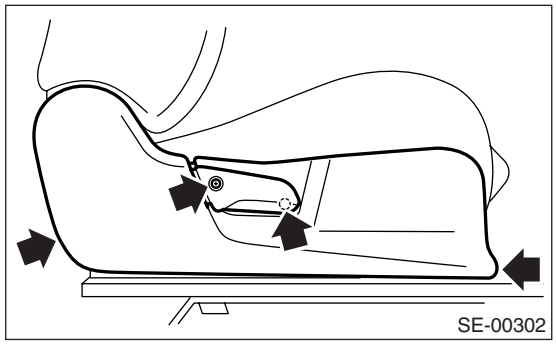

3) Remove the seat hinge inner cover.

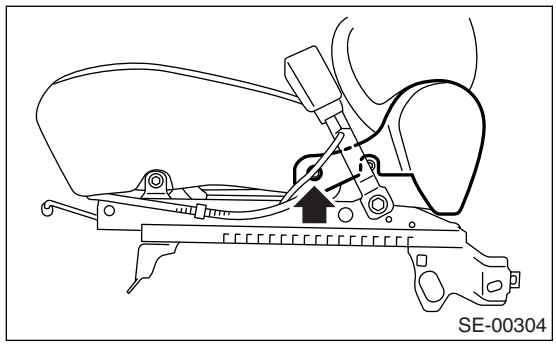

4) Remove two bolts from reclining hinge on each side.

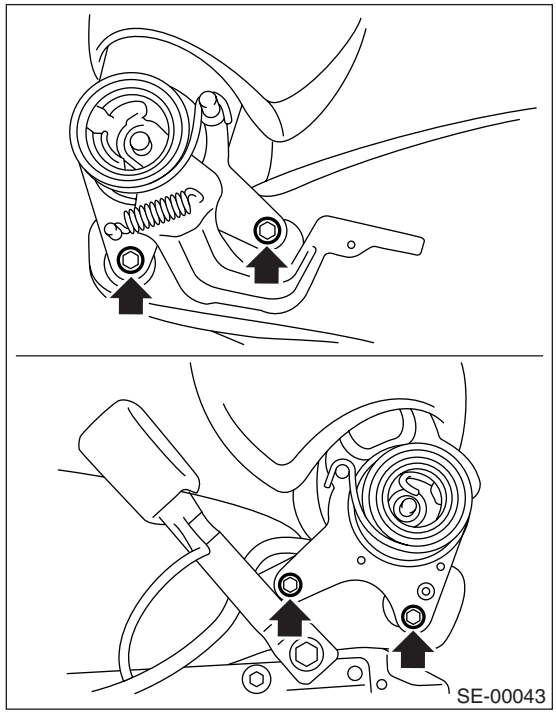

5) Remove the hook at bottom of backrest.

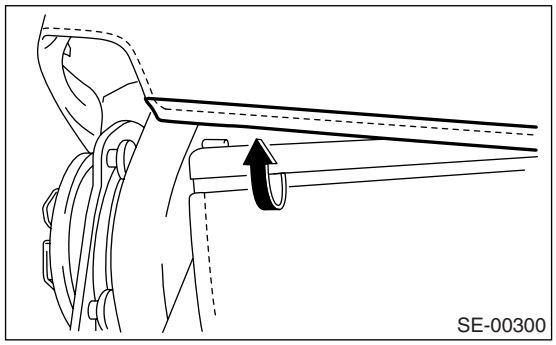

6) Open the zipper, and then pull out the backrest frame. (Side airbag not equipped seat)

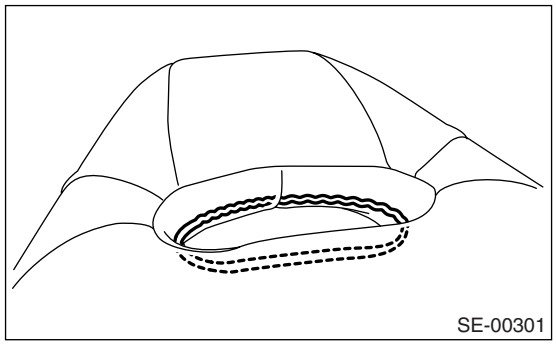

7) Open the zipper behind of backrest. (Side airbag equipped seat)

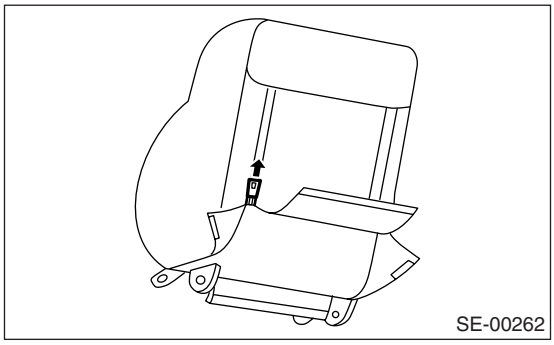

8) Remove the hog rings (A) of backrest cover. (Side airbag equipped seat)

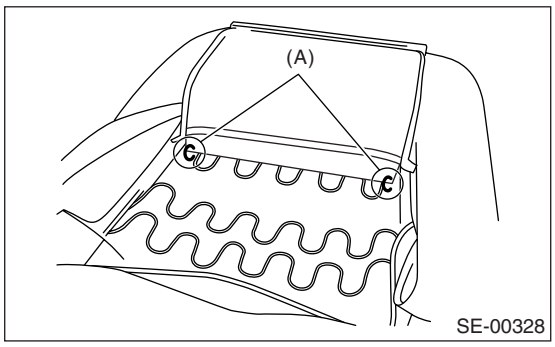

9) Remove the hog rings (A) at side of inside backrest from backrest frame. (Side airbag equipped model)

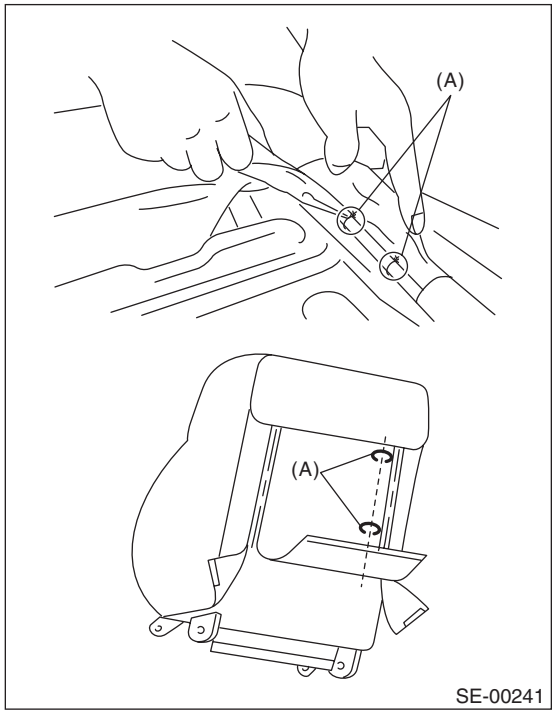

10) Pull out the backrest frame. (Side airbag equipped seat)

11) Remove the hog rings (A) at bottom of seat back. (Side airbag equipped seat)

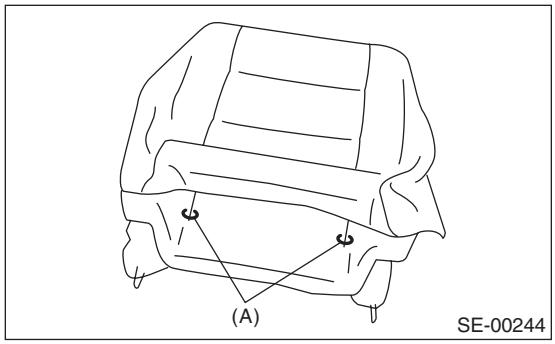

12) Remove the hog rings (A) at front of seat back, and then remove the seat back cover from seat back. (Side airbag equipped seat)

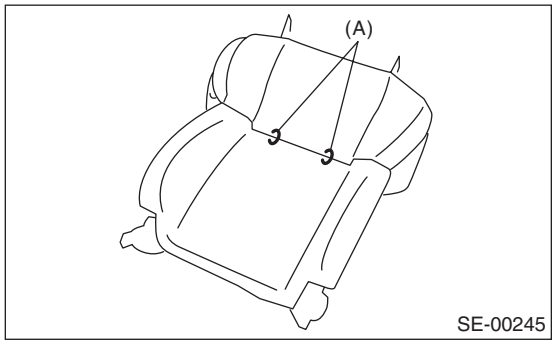

13) Loosen bolts and nuts to remove the seat cushion from slide rail.

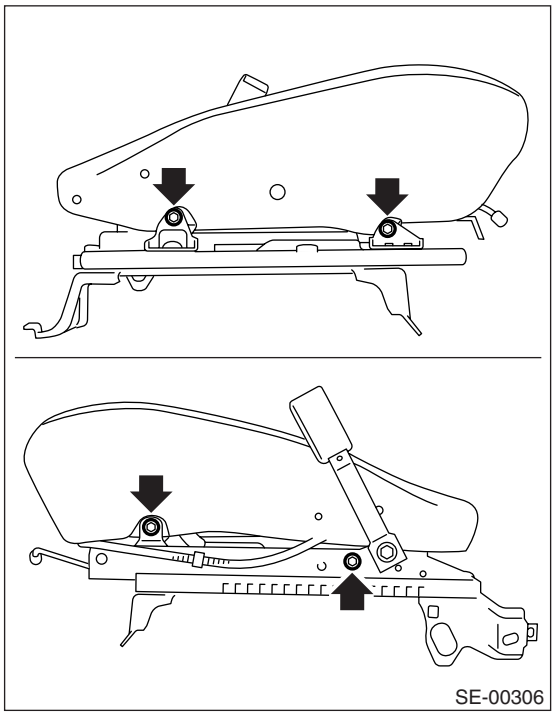

14) Remove the inner belt.

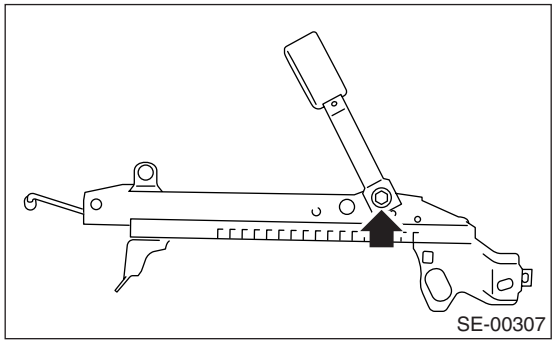

15) Remove the hook of seat cushion cover (A) behind of seat cushion.

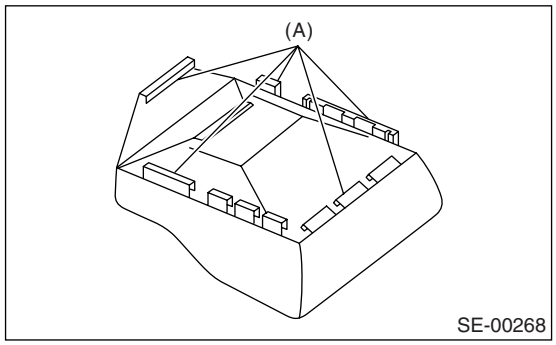

16) Remove the hog rings (A), and then remove the seat cushion cover from seat cushion pad.

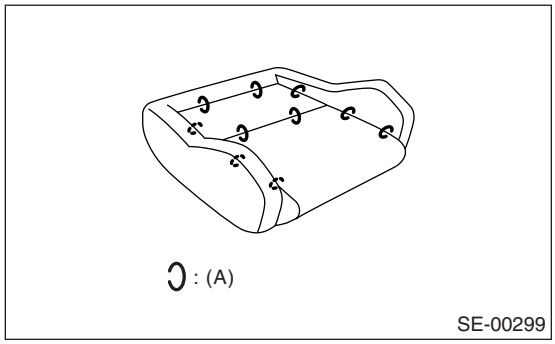

D: ASSEMBLY

1. DRIVER'S SIDE

Assemble in the reverse order of disassembly.

2. PASSENGER'S SIDE

Assemble in the reverse order of disassembly.

CAUTION:
Because it may cause the side airbag to activate incorrectly, observe the following steps to install the side airbag correctly.
- **Be careful not to dirty or damage the backrest cover.**
- **Always use new hog rings.**
- **Secure the hog ring using hog ring pliers.**
- **Install the hog ring to its original position, and not to twist or wrinkle the backrest cover.**

Tightening torque:
Refer to "COMPONENT" of "General Description". <Ref. to SE-2, FRONT SEAT, COMPONENT, General Description.>

3. Rear Seat

A: REMOVAL

1. WAGON MODEL

1) Remove the bolts, and then detach the rear seat cushion.

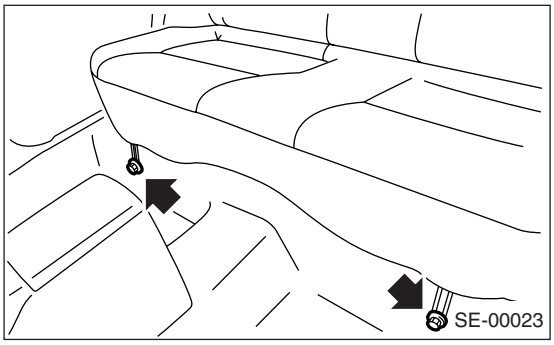

2) Remove the headrest.
3) Remove the luggage floor mat. <Ref. to EI-56, REMOVAL, Luggage Floor Mat.>
4) Turn over the mat to remove the bolts.

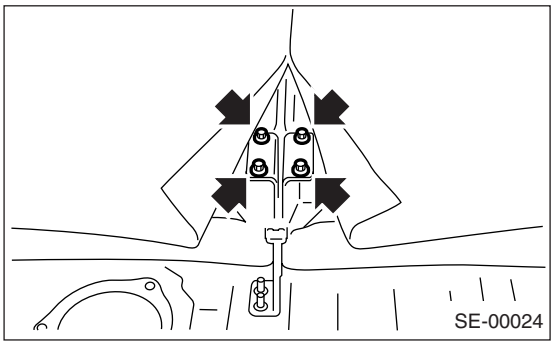

5) Remove the rear seat backrest.

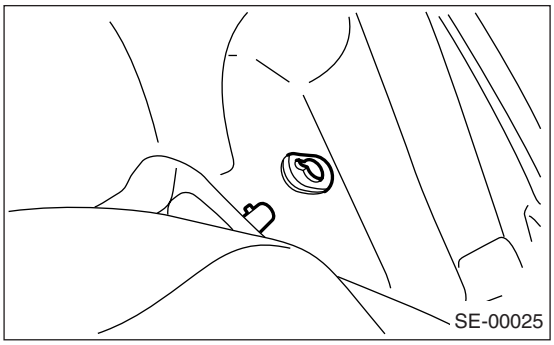

2. SEDAN MODEL

1) Remove the bolts, and then detach the rear seat cushion.

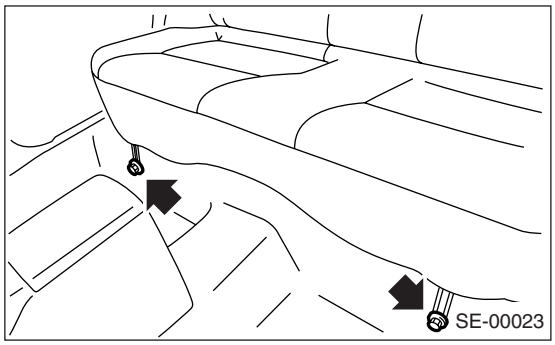

2) Remove the bolts securing lower portion of backrest and then open the center trunk through lid.

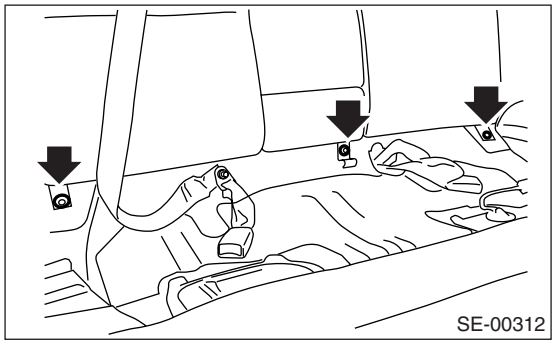

3) Lift the rear seat backrest and then remove it.

B: INSTALLATION

1. WAGON MODEL

Install in the reverse order of removal.

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to SE-4, REAR SEAT (WAGON MODEL), COMPONENT, General Description.>

2. SEDAN MODEL

1) Hook and fasten the upper-back side of the rear seat backrest to the body hook.

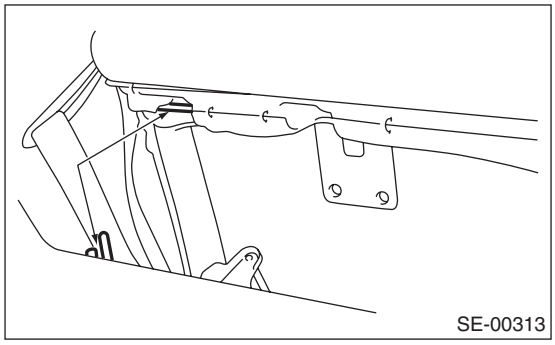

2) Tighten the bolts.

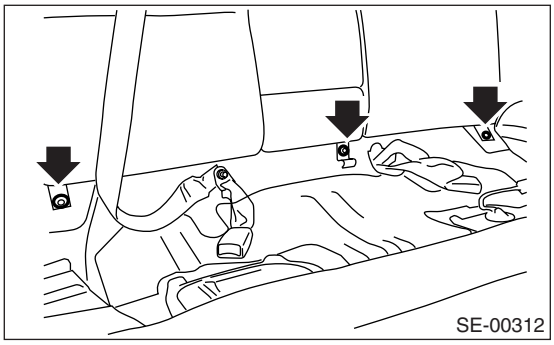

3) Hook and fasten the seat cushion to the hook on the lower part of the rear seat backrest.

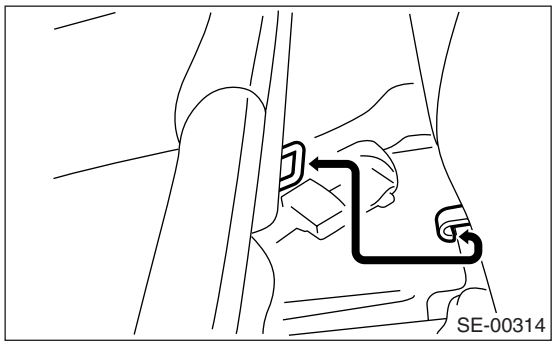

Tightening torque:
Refer to COMPONENT in General Description. <Ref. to SE-4, REAR SEAT (WAGON MODEL), COMPONENT, General Description.>

C: DISASSEMBLY

1. WAGON MODEL

1) Remove the rear seat. <Ref. to SE-17, WAGON MODEL, REMOVAL, Rear Seat.>
2) Remove the hog rings (A) behind of seat backrest.

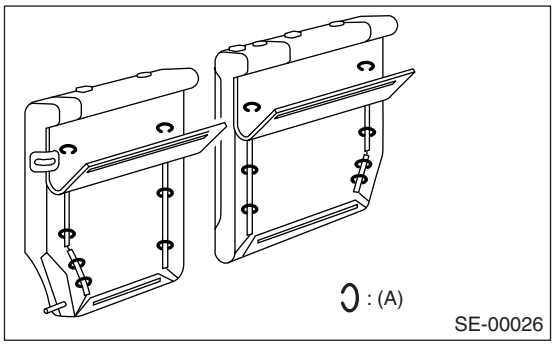

3) Remove the hog rings (A) on front side of cushion pad, and remove the cover.

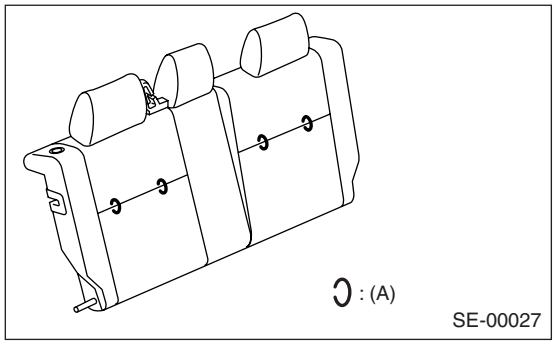

4) Remove the hog rings (A) beind of seat cushion.

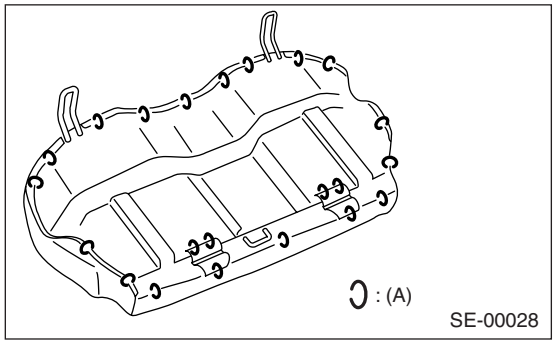

5) Remove the hog rings (A), and then remove the cover.

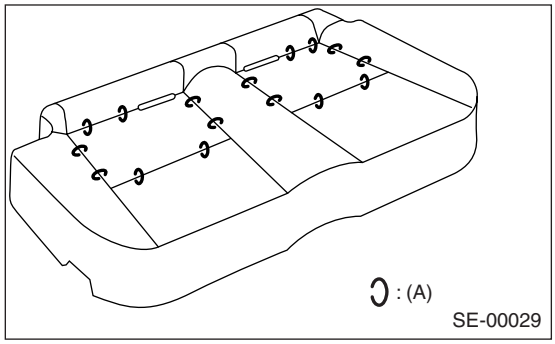

2. SEDAN MODEL

1) Remove the rear seat. <Ref. to SE-17, SEDAN MODEL, REMOVAL, Rear Seat.>
2) Remove two nuts, and then remove the armrest assembly.

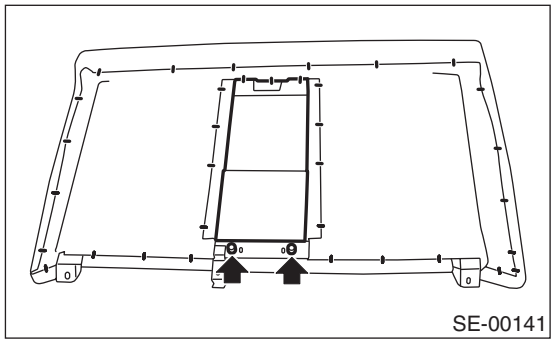

3) Remove the hog rings (A) behind of seat backrest.

- Armrest through type MODEL

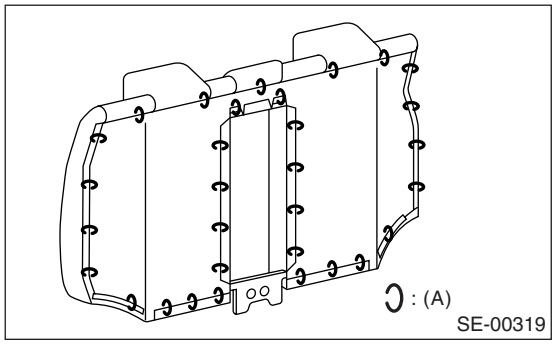

- Unified type MODEL

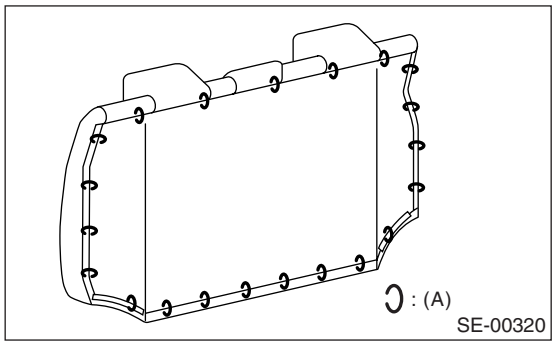

4) Remove the hog rings (A), and then remove the seat cover.

- Armrest through type MODEL

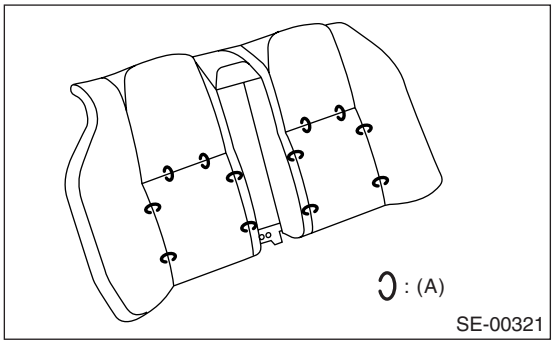

- Unified type MODEL

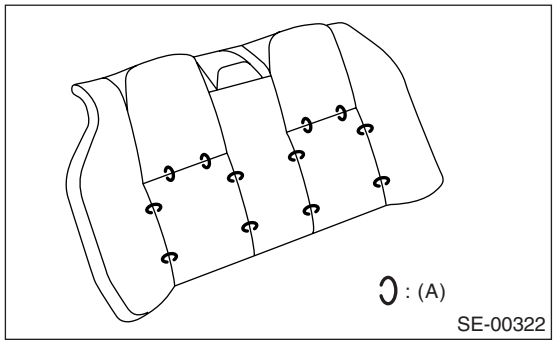

5) Remove the hog rings (A) behind of seat cushion.

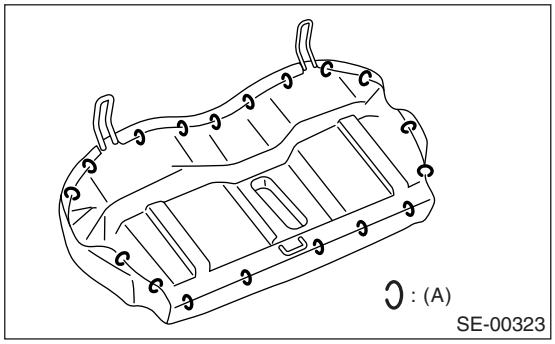

6) Remove the hog rings (A), and then remove the seat cover.

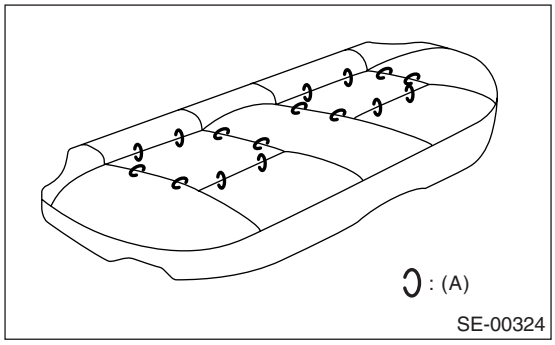

7) Remove the nuts and screws, and then disassemble the armrest assembly.

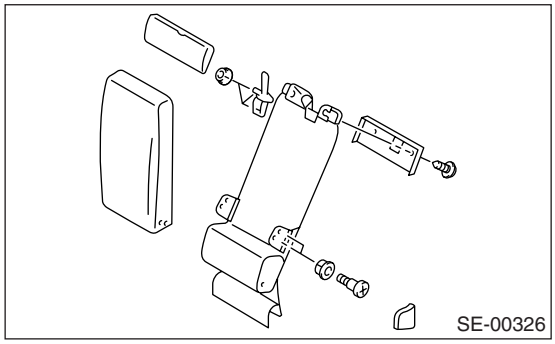

D: ASSEMBLY

1. WAGON MODEL

Assemble in the reverse order of disassembly.

NOTE:
- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

2. SEDAN MODEL

Assemble in the reverse order of disassembly.

NOTE:
- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

SECURITY AND LOCKS

SL

		Page
1.	General Description	2
2.	Door Lock Control System	9
3.	Keyless Entry System	14
4.	Front Inner Remote	22
5.	Front Outer Handle	23
6.	Front Door Latch Assembly	24
7.	Front Door Lock Actuator	25
8.	Rear Inner Remote	26
9.	Rear Outer Handle	27
10.	Rear Door Latch Assembly	28
11.	Rear Door Lock Actuator	29
12.	Rear Gate Outer Handle	30
13.	Rear Gate Latch Assembly	31
14.	Rear Gate Latch Lock Actuator	32
15.	Trunk Lid Lock Assembly	33
16.	Front Hood Lock Assembly	34
17.	Remote Openers	35
18.	Ignition Key Lock	37
19.	Key Lock Cylinders	38
20.	Immobilizer Control Module	39
21.	Immobilizer Antenna	40
22.	Keyless Entry Control Module	41
23.	Double Lock Module	42
24.	Keyless Transmitter	43

1. General Description

A: COMPONENT

1. DOOR LOCK ASSEMBLY

• Without double lock

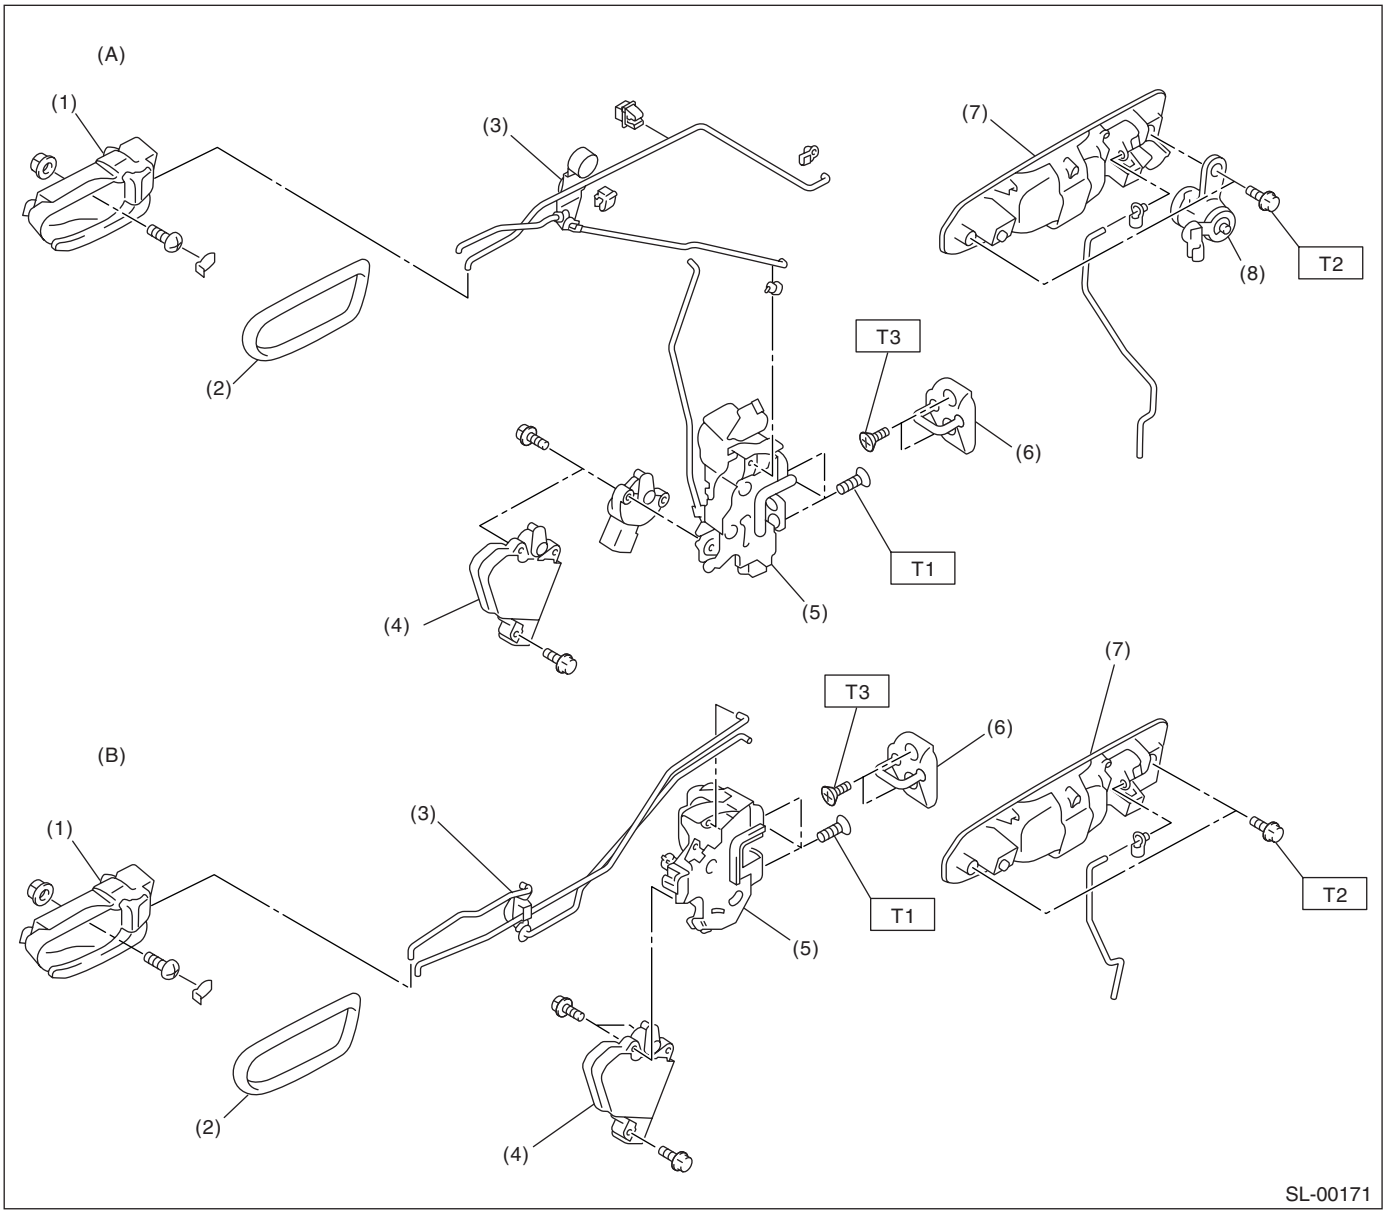

(A) Front
(B) Rear

(1) Inner remote ASSY
(2) Inner remote cover
(3) Bell crank
(4) Auto-door lock actuator
(5) Door latch
(6) Striker
(7) Door outer handle
(8) Key cylinder

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 7.4 (0.75, 5.5)
T3: 17.6 (1.8, 13.0)

• With double lock

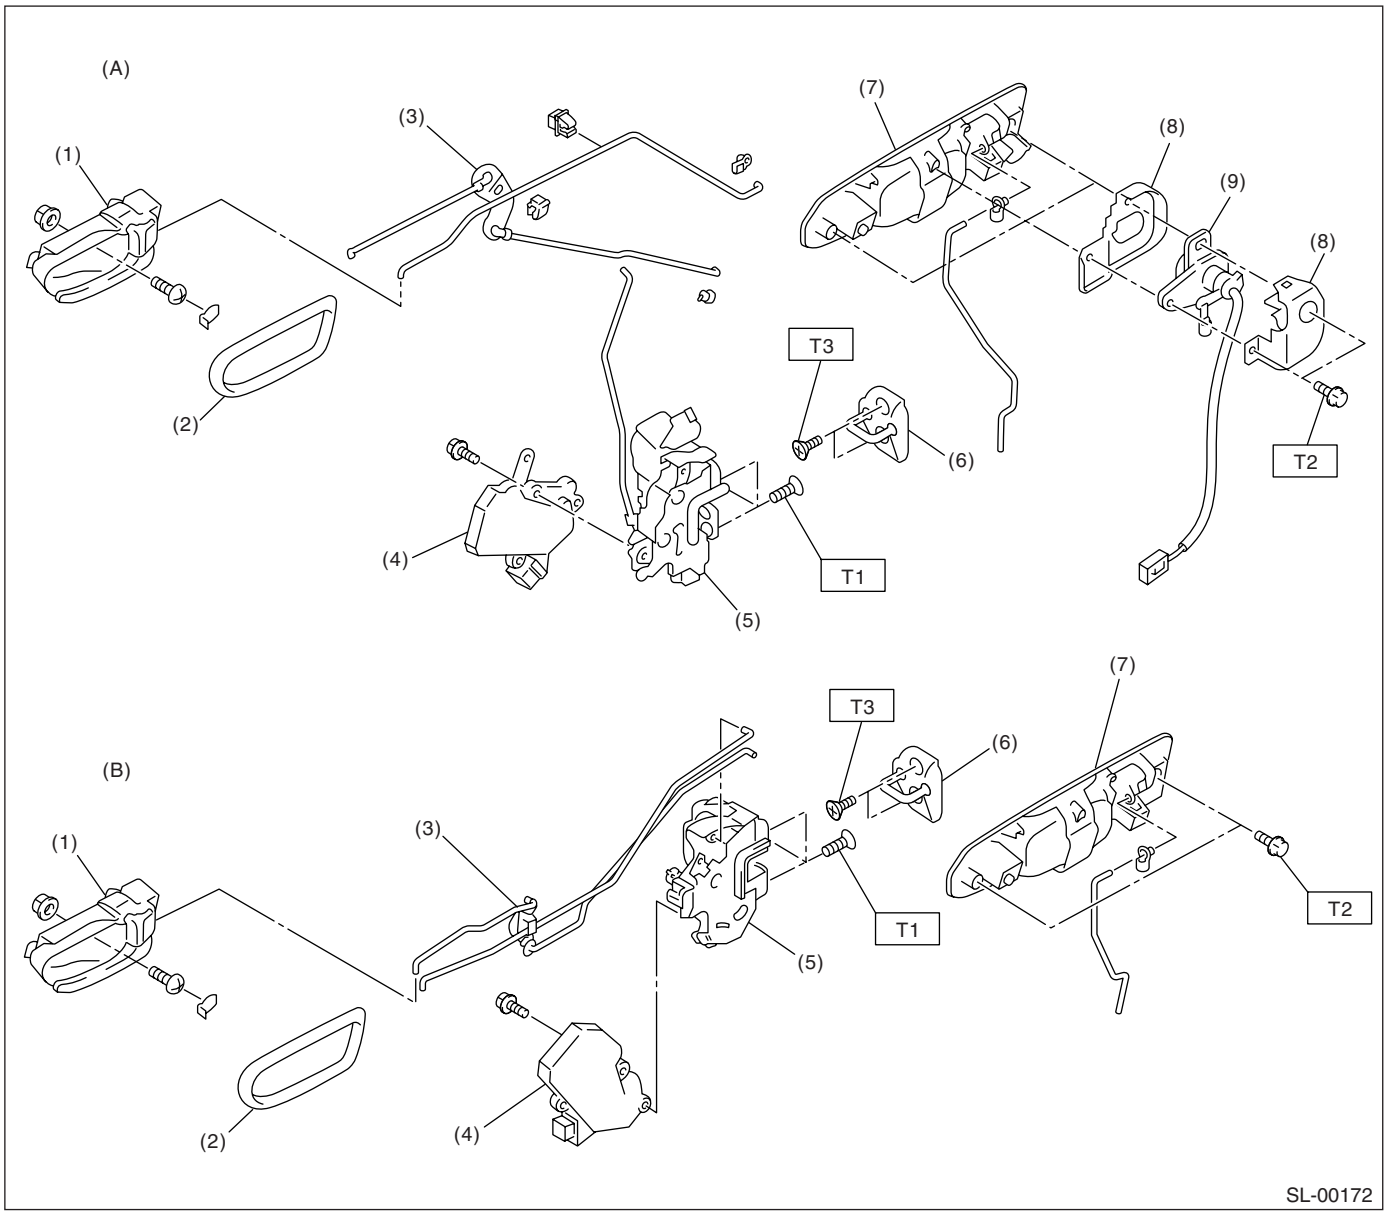

(A) Front
(B) Rear

(1) Inner remote ASSY
(2) Inner remote cover
(3) Bell crank
(4) Auto-door lock actuator
(5) Door latch
(6) Striker
(7) Door outer handle
(8) Outer handle cover
(9) Key cylinder (switch)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 7.4 (0.75, 5.5)
T3: 17.6 (1.8, 13.0)

2. TRUNK LID AND REAR GATE LOCK

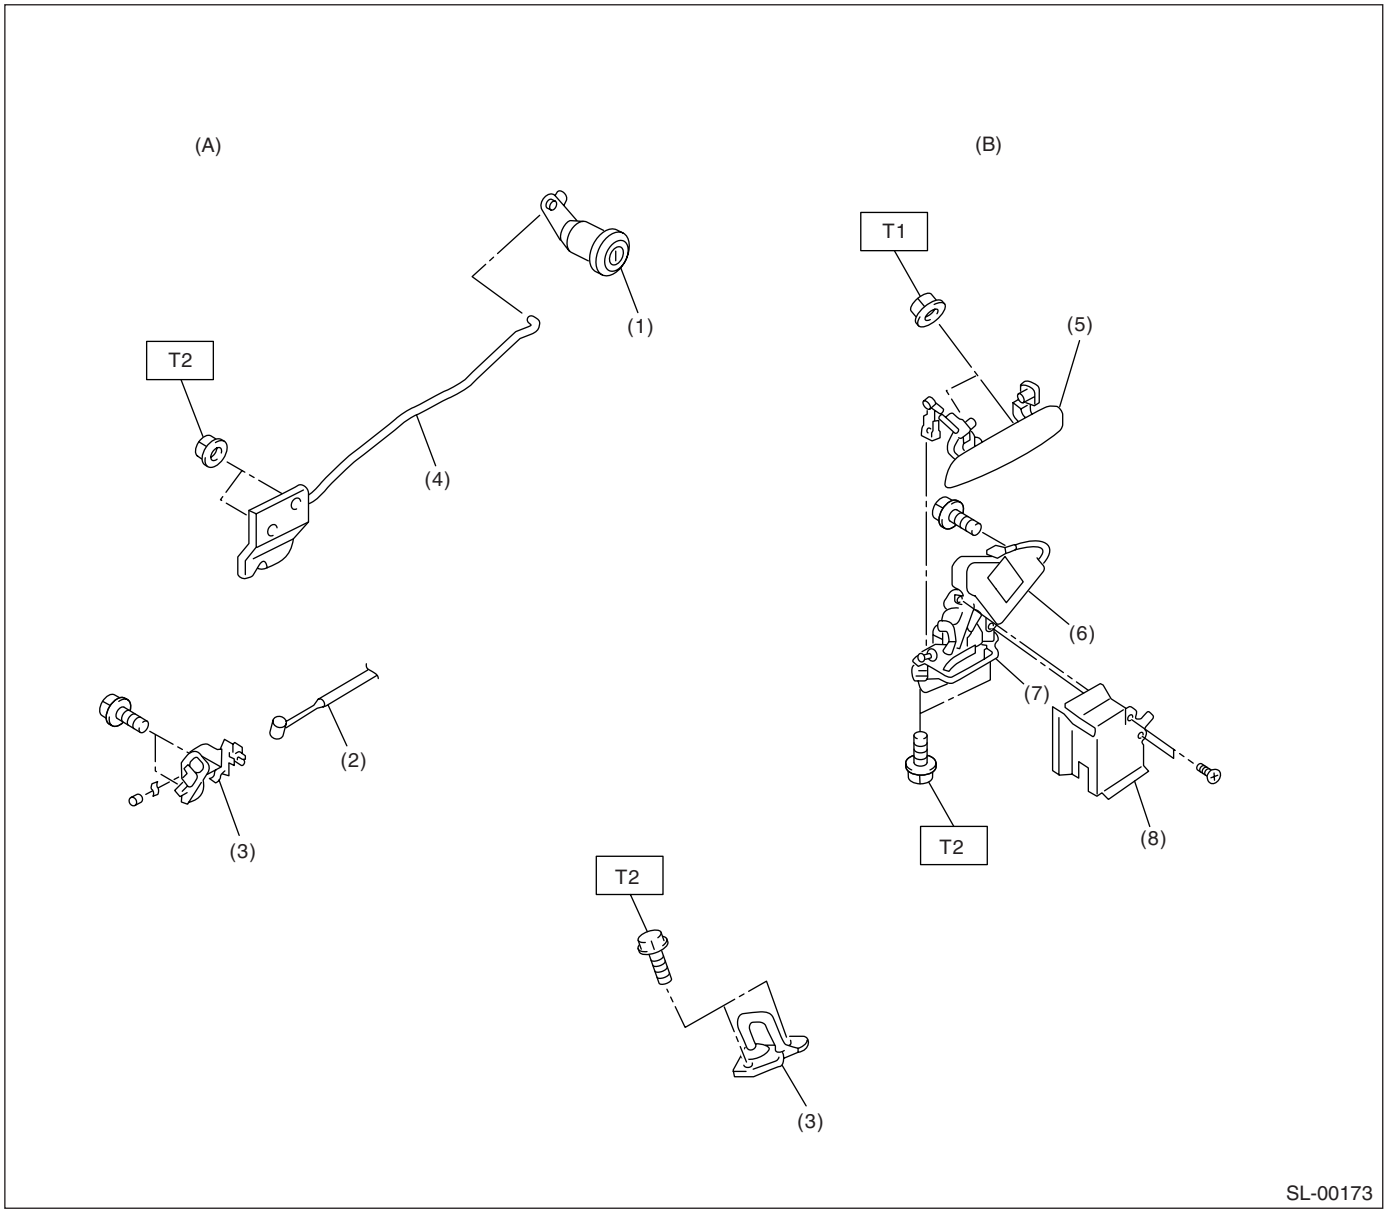

(A) Trunk
(B) Rear gate

(1) Key cylinder
(2) Cable
(3) Striker
(4) Trunk lid lock ASSY
(5) Rear gate outer handle
(6) Rear gate actuator
(7) Rear gate latch
(8) Rear gate latch cover (with double lock)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 4.5 (0.45, 3.3)
T2: 25 (2.5, 18.4)

3. HOOD LOCK AND REMOTE OPENERS

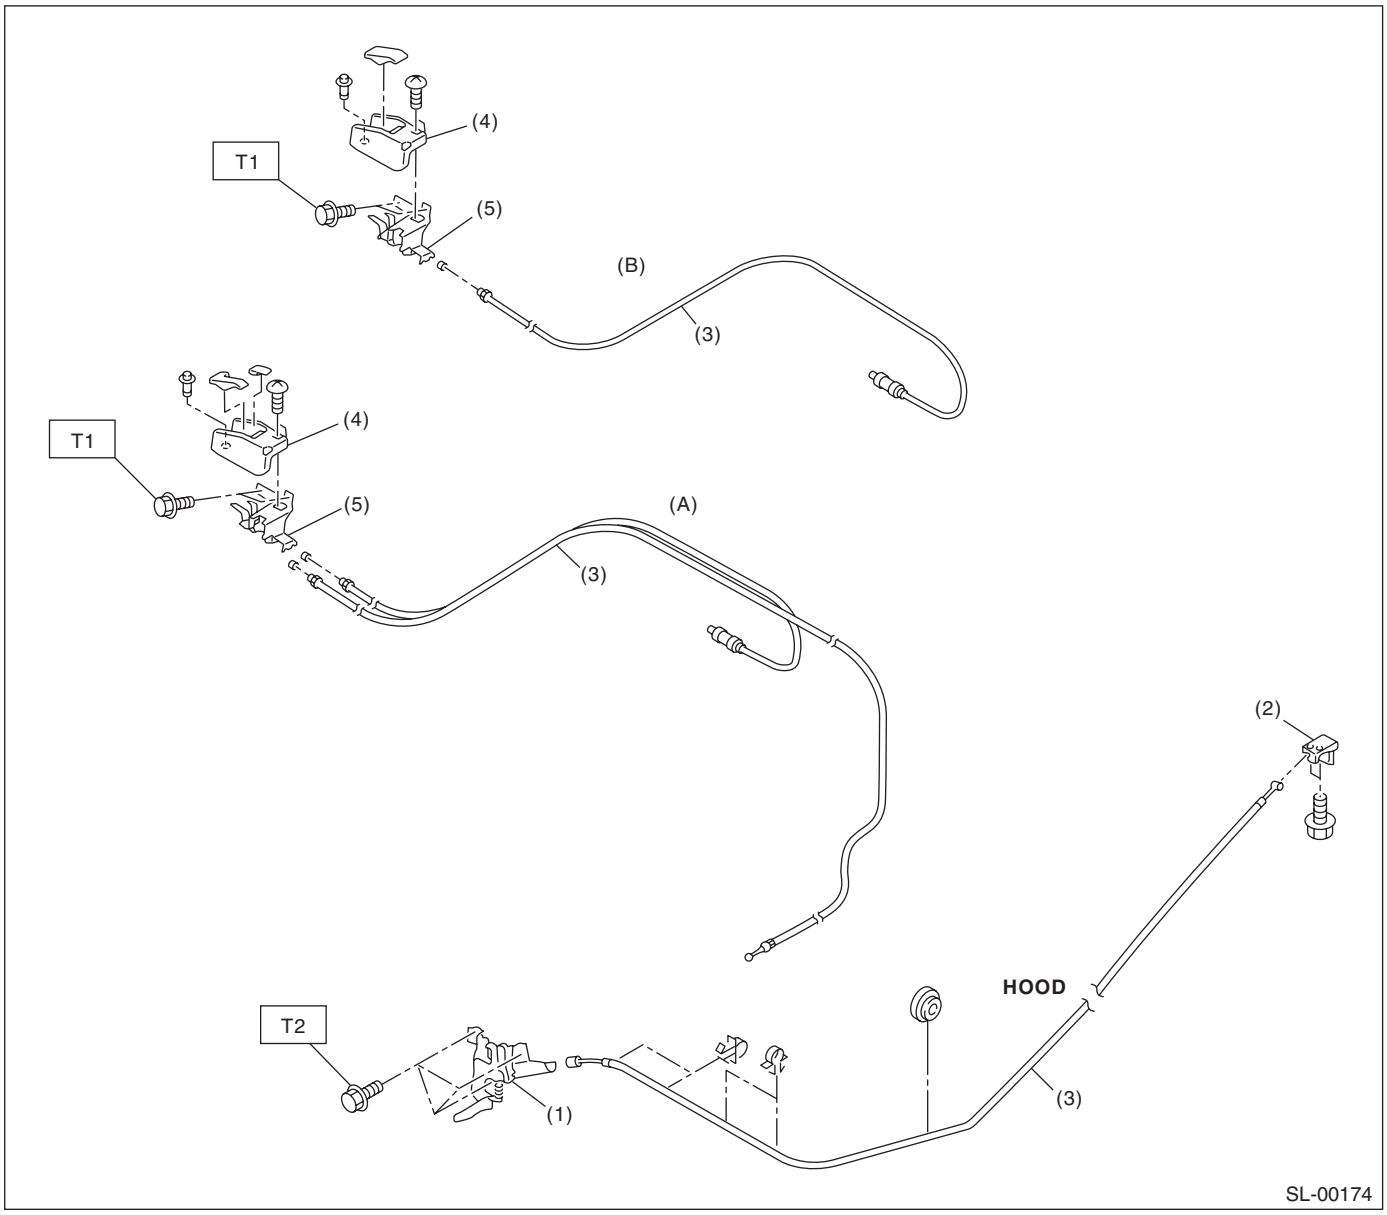

(A) Sedan
(B) Wagon

(1) Hood lock ASSY
(2) Lever ASSY
(3) Cable
(4) Cover
(5) Pull handle ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T1: 6.4 (0.65, 4.7)
T2: 32 (3.3, 23.9)

4. IMMOBILIZER SYSTEM

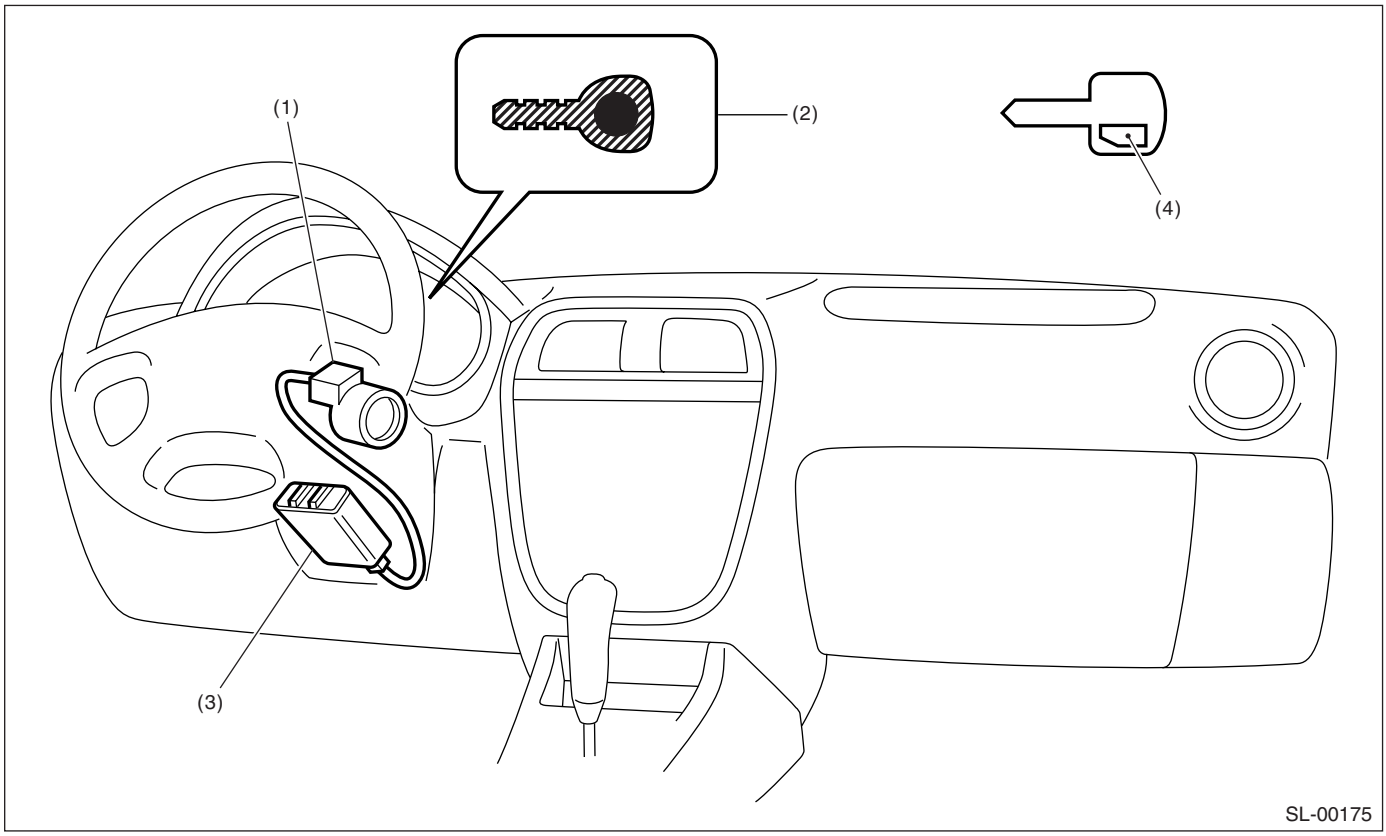

(1) Antenna
(2) Immobilizer indicator light (LED bulb)
(3) Immobilizer control module (IMM ECM)
(4) Transponder

NOTE:
IMM ECM location for RHD model is symmetrically opposite.

5. KEYLESS ENTRY SYSTEM

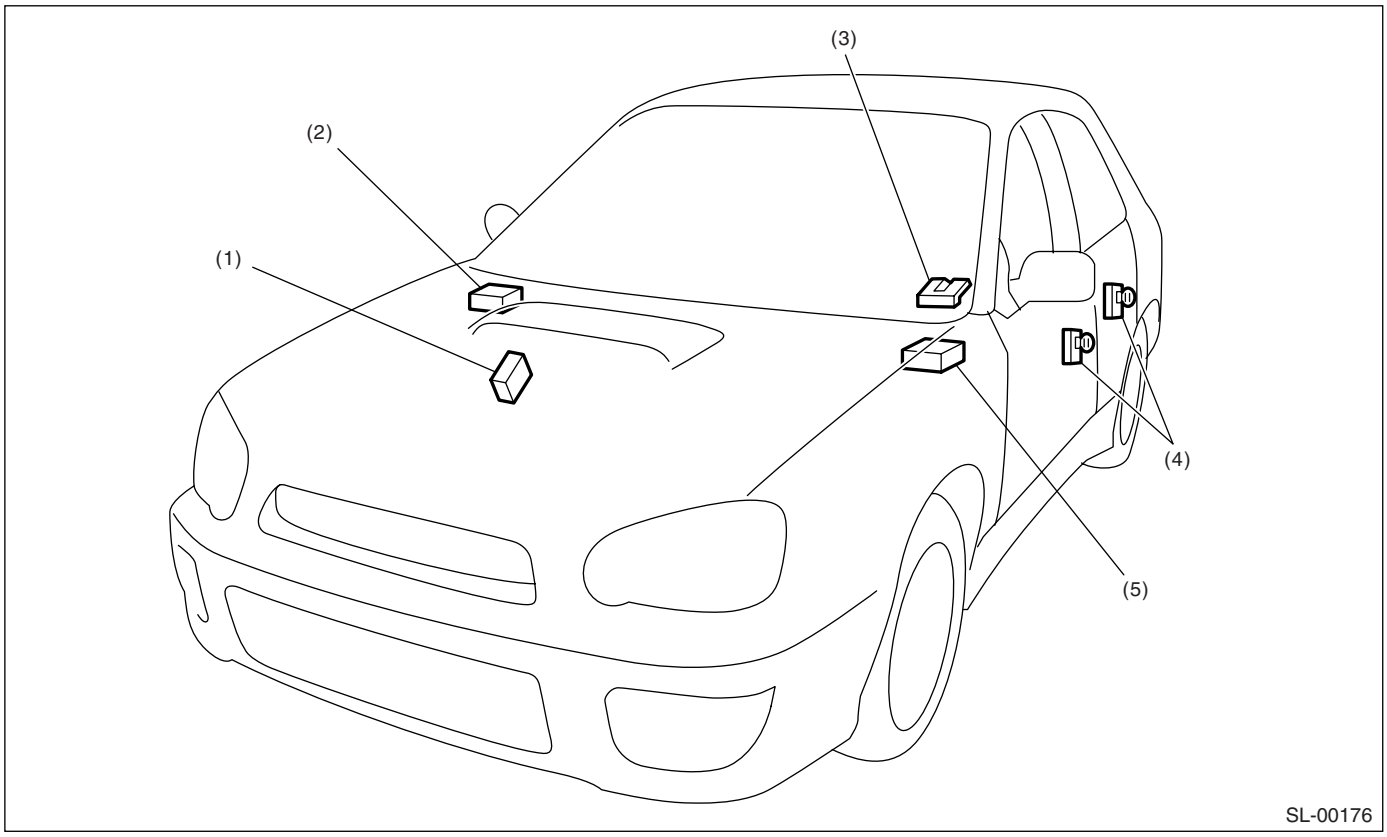

(1) Double lock module (with double lock)
(2) Keyless entry control module (RHD model)
(3) Rear gate latch
(4) Door switch
(5) Keyless entry control module (LHD model)

B: CAUTION

• Before disassembling or reassembling parts, always disconnect the ground cable from battery. When repairing radio, control module, etc. which are provided with memory functions, record the memory contents before disconnecting the ground cable from battery. Otherwise, these contents are cancelled upon disconnection.
• Reassemble parts in the reverse order of disassembly procedure unless otherwise indicated.
• Adjust parts to specifications contained in this manual if so designated.
• Connect the connectors and hoses securely during reassembly.
• After reassembly, ensure all functional parts operate smoothly.
• Airbag system wiring harness is routed near the electrical parts and switch.
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
• Be careful not to damage the airbag system wiring harness when servicing the ignition key cylinder.

C: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
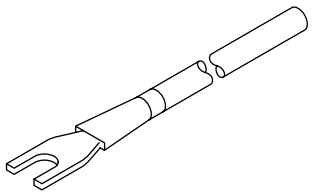 ST-925580000	925580000	PULLER	Used for removing trim clip

2. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.
Drill	Used for replacing ignition key lock.

2. Door Lock Control System

A: SCHEMATIC

1. DOOR LOCK CONTROL

<Ref. to WI-186, SCHEMATIC, Keyless Entry System.>

B: INSPECTION

1. SYMPTOM CHART

Symptom	Repair order	Reference
The door lock control system does not operate.	1. Check the fuse.	<Ref. to SL-10, CHECK FUSE, INSPECTION, Door Lock Control System.>
	2. Check the power supply and ground circuit for keyless entry control module (without double lock) or double lock module (with double lock).	<Ref. to SL-10, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Door Lock Control System.>
	3. Check the door lock switch and the circuit.	<Ref. to SL-11, CHECK DOOR LOCK SWITCH AND CIRCUIT, INSPECTION, Door Lock Control System.>
	4. Check the door lock actuator and the circuit.	<Ref. to SL-12, CHECK DOOR LOCK ACTUATOR AND CIRCUIT, INSPECTION, Door Lock Control System.>
The door lock switch does not operate.	Check the door lock switch and the circuit.	<Ref. to SL-11, CHECK DOOR LOCK SWITCH AND CIRCUIT, INSPECTION, Door Lock Control System.>
A specific door lock actuator does not operate.	Check the door lock actuator and the circuit.	<Ref. to SL-12, CHECK DOOR LOCK ACTUATOR AND CIRCUIT, INSPECTION, Door Lock Control System.>
The key cylinder lock switch does not operate. (with double lock)	Check the key cylinder lock switch and circuit.	<Ref. to SL-12, CHECK KEY CYLINDER LOCK SWITCH AND CIRCUIT, INSPECTION, Door Lock Control System.>
The double lock does not operate. (with double lock)	Check the door lock actuator (double lock) and circuit.	<Ref. to SL-13, CHECK DOOR LOCK ACTUATOR (DOUBLE LOCK) AND CIRCUIT, INSPECTION, Door Lock Control System.>

2. CHECK FUSE

	Step	Check	Yes	No
1	**CHECK FUSE.** Remove and visually check the fuse No. 2 (in the main fuse box) and No. 3 (in the fuse and relay box).	Is the fuse blown out?	Replace the fuse with a new one.	Check the power supply and ground circuit. <Ref. to SL-10, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Door Lock Control System.>

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY.** 1)Disconnect the keyless entry control module or double lock module harness connector. 2)Measure the voltage between the harness connector terminal and chassis ground. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 5, 16 (+) — Chassis ground (–):*** ***With double lock:*** ***(B324) No. 7, 8 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open circuits or shorts between the keyless entry control module or double lock module and the fuse.
2	**CHECK GROUND CIRCUIT.** Measure the resistance between the harness connector terminal and chassis ground. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 6, 14 — Chassis ground:*** ***With double lock:*** ***(B324) No. 9 — Chassis ground:***	Is the resistance less than 10 Ω?	The power supply and ground circuit is OK.	Repair the harness.

4. CHECK DOOR LOCK SWITCH AND CIRCUIT

	Step	Check	Yes	No
1	**CHECK DOOR LOCK SWITCH CIRCUIT.** 1)Disconnect the keyless entry control module or double lock module harness connector. 2)Measure the resistance between the harness connector terminal and chassis ground when moving the door lock switch to LOCK. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 10 — Chassis ground:*** ***With double lock:*** ***(B325) No. 7 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **2.**	Go to step **3.**
2	**CHECK DOOR LOCK SWITCH CIRCUIT.** Measure the resistance between the harness connector terminal and chassis ground when the door lock switch is moved to UNLOCK. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 8 — Chassis ground:*** ***With double lock:*** ***(B325) No. 4 — Chassis ground:***	Is the resistance less than 10 Ω?	The door lock switch is OK.	Go to step **3.**
3	**CHECK DOOR LOCK SWITCH.** 1)Disconnect the door lock switch harness connector. 2)Measure the resistance between the door lock switch terminals when moving the door lock switch to LOCK. ***Connector & terminal*** ***LHD model:*** ***(D7) No. 5 — No. 9:*** ***RHD model:*** ***(D7) No. 1 — No. 15:***	Is the resistance less than 1 Ω?	Go to step **4.**	Replace the door lock switch.
4	**CHECK DOOR LOCK SWITCH.** Measure the resistance between the door lock switch terminals when moving the door lock switch to UNLOCK. ***Connector & terminal*** ***LHD model:*** ***(D7) No. 5 — No. 8:*** ***RHD model:*** ***(D7) No. 1 — No. 16:***	Is the resistance less than 1 Ω?	Check the harness for open circuits or shorts between the keyless entry control module or double lock module and the door lock switch.	Replace the door lock switch.

5. CHECK DOOR LOCK ACTUATOR AND CIRCUIT

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL.** Measure the voltage between the harness connector terminal of keyless entry control module or double lock module and chassis ground when moving the door lock switch to LOCK. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 18 (+) — Chassis ground (–):*** ***With double lock:*** ***(B324) No. 3 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Replace the keyless entry control module or double lock module.
2	**CHECK OUTPUT SIGNAL.** Measure the voltage between the harness connector terminal of keyless entry control module or double lock module and chassis ground when moving the door lock switch to UNLOCK. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 17 (+) — Chassis ground (–):*** ***With double lock:*** ***(B324) No. 5 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Replace the keyless entry control module or double lock module.
3	**CHECK DOOR LOCK ACTUATOR.** Check the door lock actuator. Front door lock actuator: <Ref. to SL-25, Front Door Lock Actuator.> Rear door lock actuator: <Ref. to SL-29, Rear Door Lock Actuator.> Rear gate latch lock actuator: <Ref. to SL-32, Rear Gate Latch Lock Actuator.>	Is the door lock actuator OK?	Check the harness for open circuits or shorts between the keyless entry control module or double lock module and the door lock actuator.	Replace the door lock actuator.

6. CHECK KEY CYLINDER LOCK SWITCH AND CIRCUIT

	Step	Check	Yes	No
1	**CHECK KEY CYLINDER LOCK SWITCH CIRCUIT.** 1)Disconnect the double lock module harness connector. 2)Measure the resistance between harness connector terminal and chassis ground when turning the key cylinder lock switch to lock position. ***Connector & terminal*** ***(B325) No. 2 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **2.**	Go to step **3.**
2	**CHECK KEY CYLINDER LOCK SWITCH CIRCUIT.** Measure the resistance between harness connector terminal and chassis ground when turning the key cylinder lock switch to unlock position. ***Connector & terminal*** ***(B325) No. 3 — Chassis ground:***	Is the resistance less than 10 Ω?	Key cylinder lock switch is OK.	Go to step **3.**

	Step	Check	Yes	No
3	**CHECK KEY CYLINDER LOCK SWITCH.** 1)Disconnect the key cylinder lock switch connector. 2)Measure the resistance between key cylinder lock switch terminals when turning the key cylinder lock switch to lock position. ***Terminals*** ***No. 1 — No. 2***	Is the resistance less than 1 Ω?	Go to step **4.**	Replace the key cylinder lock switch.
4	**CHECK KEY CYLINDER LOCK SWITCH.** Measure the resistance between key cylinder lock switch terminals when turning the key cylinder lock switch to unlock position. ***Terminals*** ***No. 2 — No. 3***	Is the resistance less than 1 Ω?	Check the harness for open or short circuits between double lock module and key cylinder lock switch.	Replace the key cylinder lock switch.

7. CHECK DOOR LOCK ACTUATOR (DOUBLE LOCK) AND CIRCUIT

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL.** Measure the resistance between double lock module harness connector terminal and chassis ground when turning the key cylinder lock switch to lock position. ***Connector & terminal*** ***(B324) No. 6 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Replace the double lock module.
2	**CHECK OUTPUT SIGNAL.** Measure the resistance between double lock module harness connector terminal and chassis ground when turning the key cylinder lock switch to unlock position. ***Connector & terminal*** ***(B324) No. 6 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Replace the double lock module.
3	**CHECK DOOR LOCK ACTUATOR.** Check door lock actuator. Front door lock actuator: <Ref. to SL-25, Front Door Lock Actuator.> Rear door lock actuator: <Ref. to SL-29, Rear Door Lock Actuator.>	Is the door lock actuator normal?	Check the harness for open or short circuits between double lock module and door lock actuator.	Replace the door lock actuator.

3. Keyless Entry System

A: SCHEMATIC

<Ref. to WI-186, SCHEMATIC, Keyless Entry System.>

B: ELECTRICAL SPECIFICATION

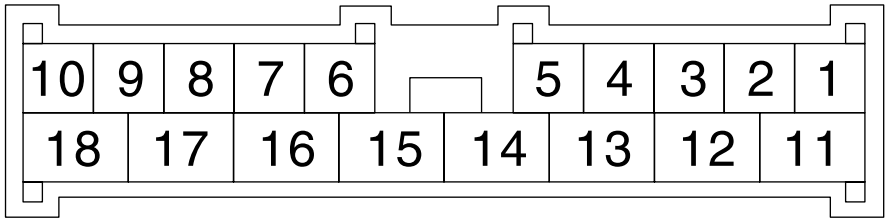

SL-00036

Content	Terminal No.	Measuring condition
Key warning switch	1 (INPUT)	Battery voltage is present when inserting the key into ignition switch.
Registration connector	2 (INPUT)	0 V is present when connecting the registration connector.
Door switch	3 (INPUT)	0 V is present when any door is open.
Power supply	5	Battery voltage is constantly present.
Empty	6	—
Empty	7	—
Door lock switch (Unlock)	8 (INPUT)	0 V is present when the door lock switch is turned to unlock position.
Empty	9	—
Door lock switch (Lock)	10 (INPUT)	0 V is present when the door lock switch is turned to lock position.
Room light/Ignition switch illumination	11 (OUTPUT)	• 0 V is present when pressing the transmitter OPEN button. • 0 V is present when any door is open.
Turn signal light (Left)	12 (OUTPUT)	Battery voltage is present when pressing the transmitter OPEN or LOCK button.
Turn signal light (Right)	13 (OUTPUT)	Battery voltage is present when pressing the transmitter OPEN or LOCK button.
Ground	14	0 V is constantly present.
Power supply (Hazard light)	15	Battery voltage is constantly present.
Power supply	16	Battery voltage is constantly present.
Door, rear gate lock actuator (without double lock) or double lock module (with double lock)	17 (OUTPUT)	Battery voltage is present when pressing the transmitter OPEN button.
Door, rear gate lock actuator (without double lock) or double lock module (with double lock)	18 (OUTPUT)	Battery voltage is present when pressing the transmitter LOCK button.

C: INSPECTION

1. SYMPTOM CHART

Symptom	Repair order	Reference
None of the functions of keyless entry system operate.	1. Check the transmitter battery.	<Ref. to SL-16, CHECK TRANSMITTER BATTERY, INSPECTION, Keyless Entry System.>
	2. Check the fuse.	<Ref. to SL-16, CHECK FUSE, INSPECTION, Keyless Entry System.>
	3. Check the keyless entry control module power supply and ground circuit.	<Ref. to SL-17, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Keyless Entry System.>
	4. Replace the keyless entry control module.	<Ref. to SL-41, Keyless Entry Control Module.>
The transmitter cannot be registered.	1. Check the transmitter battery.	<Ref. to SL-16, CHECK TRANSMITTER BATTERY, INSPECTION, Keyless Entry System.>
	2. Check the registration connector circuit.	<Ref. to SL-17, CHECK REGISTRATION CONNECTOR CIRCUIT, INSPECTION, Keyless Entry System.>
	3. Replace the keyless entry control module.	<Ref. to SL-41, Keyless Entry Control Module.>
The door lock or unlock does not operate. NOTE: If the door lock control system does not operate when using the door lock switch, check the door lock control system. <Ref. to SL-9, INSPECTION, INSPECTION, Door Lock Control System.>	1. Check the transmitter battery.	<Ref. to SL-16, CHECK TRANSMITTER BATTERY, INSPECTION, Keyless Entry System.>
	2. Check the key warning switch.	<Ref. to SL-19, CHECK KEY WARNING SWITCH, INSPECTION, Keyless Entry System.>
	3. Check the door switch.	<Ref. to SL-18, CHECK DOOR SWITCH, INSPECTION, Keyless Entry System.>
	4. Check output signal to double lock module. (with double lock)	<Ref. to SL-21, CHECK OUTPUT SIGNAL TO DOUBLE LOCK MODULE, INSPECTION, Keyless Entry System.>
	5. Replace the keyless entry control module.	<Ref. to SL-41, Keyless Entry Control Module.>
The hazard light does not operate.	1. Check the hazard light operation.	<Ref. to SL-20, CHECK HAZARD LIGHT OPERATION, INSPECTION, Keyless Entry System.>
	2. Replace the keyless entry control module.	<Ref. to SL-41, Keyless Entry Control Module.>
The room light and ignition switch illumination operation does not activate.	1. Check the room light operation.	<Ref. to SL-20, CHECK ROOM LIGHT OPERATION, INSPECTION, Keyless Entry System.>
	2. Check the ignition switch illumination circuit.	<Ref. to SL-21, CHECK IGNITION SWITCH ILLUMINATION CIRCUIT, INSPECTION, Keyless Entry System.>
	3. Replace the keyless entry control module. (without double lock)	<Ref. to SL-41, Keyless Entry Control Module.>
	4. Replace the double lock module. (with double lock)	<Ref. to SL-42, Double Lock Module.>

2. CHECK TRANSMITTER BATTERY

	Step	Check	Yes	No
1	**CHECK TRANSMITTER BATTERY.** 1)Remove the battery from transmitter. <Ref. to SL-43, REMOVAL, Keyless Transmitter.> 2)Check the battery voltage. <Ref. to SL-43, INSPECTION, Keyless Transmitter.>	Is the voltage more than 2 V?	Further inspection is necessary, refer to “SYMPTOM CHART”. <Ref. to SL-15, SYMPTOM CHART, INSPECTION, Keyless Entry System.>	Replace the transmitter battery.

3. CHECK FUSE

	Step	Check	Yes	No
1	**CHECK FUSE.** Remove and visually check the fuse No. 2 (in the main fuse box), No. 3 (in the fuse and relay box) and SBF-6 (in the main fuse box)	Is the fuse blown out?	Replace the fuse with a new one.	Check the power supply and ground circuit. <Ref. to SL-17, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Keyless Entry System.>

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY.** 1)Disconnect the keyless entry control module harness connector. 2)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B176) No. 5, No. 16 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open circuits or shorts between keyless entry control module and fuse.
2	**CHECK GROUND CIRCUIT.** Measure the resistance between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B176) No. 6, No. 14 — Chassis ground:***	Is the resistance less than 10 Ω?	The power supply and ground circuit are OK.	Repair the harness.

5. CHECK REGISTRATION CONNECTOR CIRCUIT

	Step	Check	Yes	No
1	**REGISTRATION CONNECTOR INPUT VOLTAGE INSPECTION** 1)Disconnect the registration connector. 2)Measure the voltage between keyless entry control module harness connector and chassis ground. ***Connector & terminal*** ***(B176) No. 2 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Repair the harness, and/or connector.
2	**REGISTRATION CONNECTOR INPUT VOLTAGE INSPECTION** 1)Connect the registration connector. 2)Measure the voltage between keyless entry control module harness connector and chassis ground. ***Connector & terminal*** ***(B176) No. 2 (+) — Chassis ground (–):***	Is the voltage 0 V?	Registration connector circuit is OK.	Repair the harness, and/or connector.

6. CHECK DOOR SWITCH

	Step	Check	Yes	No
1	**CHECK DOOR SWITCH CIRCUIT.** Measure the voltage between keyless entry control module harness connector terminal and chassis ground. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 3 (+) — Chassis ground (–):*** ***With double lock:*** ***(B176) No. 3 (+) — Chassis ground (–):*** ***(B325) No. 17 (+) — Chassis ground (–):***	Is the voltage 0 V when any one of doors or rear gate is opened?	Go to step **2.**	Go to step **3.**
2	**CHECK DOOR SWITCH CIRCUIT.** Measure the voltage between keyless entry control module harness connector terminal and chassis ground. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 3 (+) — Chassis ground (–):*** ***With double lock*** ***(B176) No. 3 (+) — Chassis ground (–):*** ***(B325) No. 17 (+) — Chassis ground (–):***	Is the voltage more than 10 V when all doors and rear gate are closed?	The door switch is OK.	Go to step **3.**
3	**CHECK DOOR SWITCH.** 1)Disconnect the door switch harness connector. 2)Measure the resistance between door switch terminals. ***Terminal*** ***Door switch No. 1 — No. 3:*** ***Rear gate latch switch No. 1 — No. 2:***	Is the resistance more than 1 MΩ when door switch is pushed?	Go to step **4.**	Replace the door switch.
4	**CHECK DOOR SWITCH.** Measure the resistance between door switch terminals. ***Terminal*** ***Door switch No. 1 — No. 3:*** ***Rear gate latch switch No. 1 — No. 2:***	Is the resistance less than 1 Ω when door switch is released?	Check the following: • Without double lock: Check the harness for open circuits or shorts between keyless entry control module and door switch. • With double lock: Check the harness for open circuits or short between keyless entry control module and door switch, between double lock module and door switch, and between check connector and door switch.	Replace the door switch.

7. CHECK KEY WARNING SWITCH

	Step	Check	Yes	No
1	**CHECK FUSE.** Remove and visually check the fuse No. 6 (in the main fuse box).	Is the fuse blown out?	Replace the fuse with a new one.	Go to step **2.**
2	**CHECK KEY WARNING SWITCH CIRCUIT.** 1)Disconnect the keyless entry control module harness connector. 2)Insert the key into ignition switch. (LOCK position) 3)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B176) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **3.**	Go to step **4.**
3	**CHECK KEY WARNING SWITCH CIRCUIT.** 1)Remove the key from ignition switch. 2)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B176) No. 1 (+) — Chassis ground (–):***	Is the voltage 0 V?	The key warning switch is OK.	Go to step **4.**
4	**CHECK KEY WARNING SWITCH.** 1)Disconnect the key warning switch harness connector. 2)Insert the key into ignition switch. (LOCK position) 3)Measure the resistance between key warning switch terminals. ***Terminal*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Go to step **5.**	Replace the key warning switch.
5	**CHECK KEY WARNING SWITCH.** 1)Remove the key from ignition switch. 2)Measure the resistance between key warning switch terminals. ***Terminal*** ***No. 1 — No. 2:***	Is the resistance more than 1 MΩ?	Check the following: • Harness for open circuits or shorts between the key warning switch and fuse • Harness for open circuits and shorts between the keyless entry control module and key warning switch	Replace the key warning switch.

8. CHECK HAZARD LIGHT OPERATION

	Step	Check	Yes	No
1	**CHECK HAZARD LIGHT OPERATION.** Make sure the hazard light blinks when hazard switch is turned to ON.	Does the hazard light blink?	Go to step **2.**	Check the hazard light circuit.
2	**CHECK OUTPUT SIGNAL.** 1)Remove the key from ignition switch. 2)Close all doors and rear gate. 3)Measure the voltage between keyless entry control module harness connector terminal and chassis ground when LOCK or OPEN button of transmitter is pressed. ***Connector & terminal*** ***(B176) No. 12, No. 13 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Check the harness for open or short between keyless entry control module and turn signal lights.	Replace the keyless entry control module.

9. CHECK ROOM LIGHT OPERATION

	Step	Check	Yes	No
1	**CHECK ROOM LIGHT OPERATION.** Make sure the room light illuminates when the room light switch is turned to ON.	Does the room light illuminate?	Go to step **2.**	Check the room light circuit.
2	**CHECK HARNESS BETWEEN ROOM LIGHT AND KEYLESS ENTRY CONTROL MODULE (WITHOUT DOUBLE LOCK) OR DOUBLE LOCK MODULE (WITH DOUBLE LOCK).** 1)Disconnect the keyless entry control module or double lock module harness connector and room light harness connector. 2)Measure the resistance between keyless entry control module or double lock module harness connector terminal and room light harness connector terminal. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 11 — (R52) No. 2:*** ***With double lock:*** ***(B325) No. 1 — (R52) No. 2:*** ***(B79) No. 13 — (R52) No. 2:***	Is the resistance less than 10 Ω?	The room light operation circuit is OK.	Check the following: • Without double lock: Check the harness for open circuit or short between keyless entry control module and room light. • With double lock: Check the harness for open circuit or short between double lock module and room light, and between check connector and room light.

10.CHECK IGNITION SWITCH ILLUMINATION CIRCUIT

	Step	Check	Yes	No
1	**CHECK IGNITION SWITCH ILLUMINATION POWER SUPPLY.** 1)Disconnect the ignition switch illumination harness connector. 2)Measure the voltage between ignition switch illumination harness connector terminal and chassis ground. ***Connector & terminal*** ***(B224) No. 1 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open circuit or shorts between ignition switch illumination and fuse.
2	**CHECK HARNESS BETWEEN IGNITION SWITCH ILLUMINATION AND KEYLESS ENTRY CONTROL MODULE (WITHOUT DOUBLE LOCK) OR DOUBLE LOCK MODULE (WITH DOUBLE LOCK).** 1)Disconnect the keyless entry control module or double lock module harness connector. 2)Measure the resistance between keyless entry or double lock module harness connector terminal and ignition switch illumination harness connector. ***Connector & terminal*** ***Without double lock:*** ***(B176) No. 11 — (R224) No. 2:*** ***With double lock:*** ***(B325) No. 1 — (R224) No. 2:*** ***(B79) No. 13 — (R224) No. 2:***	Is the resistance less than 10 Ω?	Check the ignition switch illumination. If NG, replace the ignition switch illumination.	Check the following: • Without double lock: Check the harness for open circuit or short between keyless entry control module and ignition switch illumination. • With double lock: Check the harness for open circuit or short between double lock unit and ignition switch illumination, and between check connector and ignition switch illumination.

11.CHECK OUTPUT SIGNAL TO DOUBLE LOCK MODULE

	Step	Check	Yes	No
1	**CHECK OUTPUT SIGNAL.** Measure the voltage between the keyless entry control module harness connector terminal and chassis ground when OPEN button of transmitter is pressed. ***Connector & terminal*** ***(B176) No. 17 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Go to step **2.**	Replace the keyless entry control module.
2	**CHECK OUTPUT SIGNAL.** Measure the voltage between the keyless entry control module harness connector terminal and chassis ground when LOCK button of transmitter is pressed. ***Connector & terminal*** ***(B176) No. 18 (+) — Chassis ground (–):***	Is the voltage more than 10 V?	Replace the double lock module.	Check the harness for open circuit or shorts between the keyless entry control module and double lock module.

4. Front Inner Remote

A: REMOVAL

1) Remove the door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
3) Remove a screw and two rod joints.
4) Remove the front inner remote.

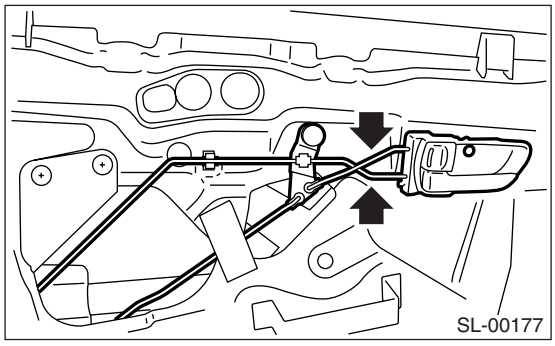

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the inner remote works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.

5. Front Outer Handle

A: REMOVAL

1. MODEL WITHOUT DOUBLE LOCK

1) Remove the door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
3) Remove the bolt (A).
4) Move the front door glass downward. Remove the bolt and rod clamp.
5) Remove the front outer handle.

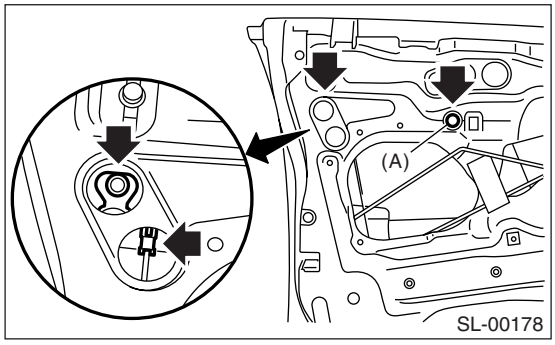

2. MODEL WITH DOUBLE LOCK

1) Remove the door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
3) Remove the front door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
4) Remove the key cylinder. <Ref. to SL-38, FRONT DOOR, REPLACEMENT, Key Lock Cylinders.>
5) Remove the front side bolt, and then remove the front outer hundle.

CAUTION:
Do not use excessive force to remove the hundle from door panel. This will deform it.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the outer handle works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.

6. Front Door Latch Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
3) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
4) Remove the front inner remote. <Ref. to SL-22, REMOVAL, Front Inner Remote.>
5) Remove three screws and a bolt.

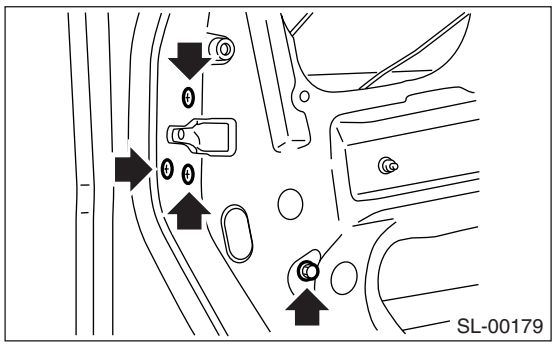

6) Remove the front door latch assembly, and then disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the lock works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.

7. Front Door Lock Actuator

A: REMOVAL

1) Remove the front door latch assembly. <Ref. to SL-24, REMOVAL, Front Door Latch Assembly.>
2) Loosen two screws to remove the front door lock actuator.

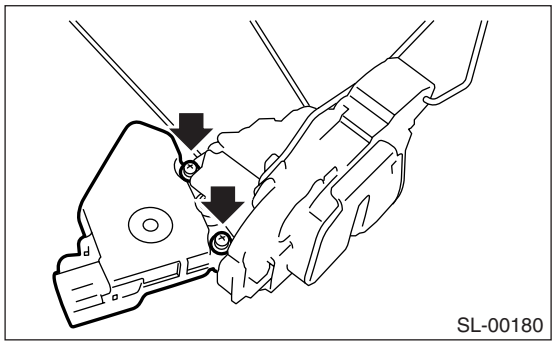
SL-00180

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the lock works properly after installation.

C: INSPECTION

1) Disconnect the door lock actuator harness connector.
2) Connect the battery to door lock actuator terminals.
If NG, replace the door lock actuator.

1. Without double lock

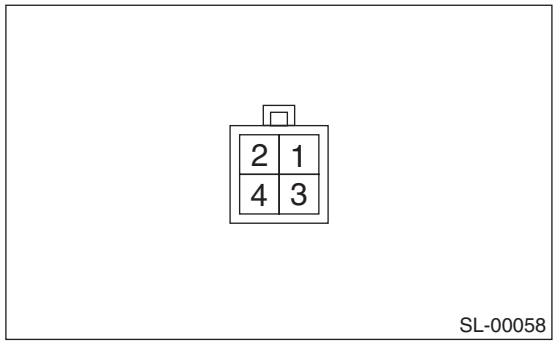

SL-00058

Terminal No.	Actuator operation
No. 3 (+) and No. 1 (–)	Unlocked → Locked
No. 1 (+) and No. 3 (–)	Locked → Unlocked

2. With double lock

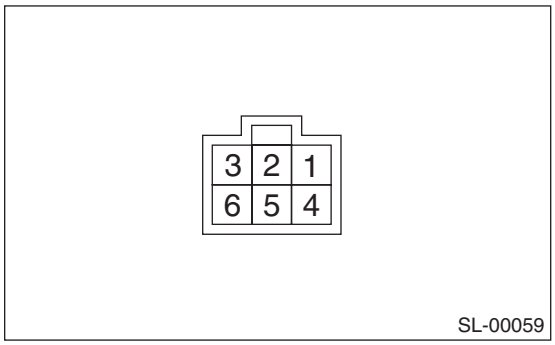

SL-00059

DOOR ACTUATOR RH:

Terminal No.	Actuator operation
No. 1 (+) and No. 4 (–)	Unlocked → Locked
No. 4 (+) and No. 1 (–)	Locked → Unlocked
No. 6 (+) and No. 3 (–)	Double lock released → Double lock set
No. 3 (+) and No. 6 (–)	Double lock set → Double lock released

DOOR ACTUATOR LH:

Terminal No.	Actuator operation
No. 6 (+) and No. 3 (–)	Unlocked → Locked
No. 3 (+) and No. 6 (–)	Locked → Unlocked
No. 1 (+) and No. 4 (–)	Double lock released → Double lock set
No. 4 (+) and No. 1 (–)	Double lock set → Double lock released

8. Rear Inner Remote

A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
2) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
3) Remove a screw and two rod joints.
4) Remove the inner remote.

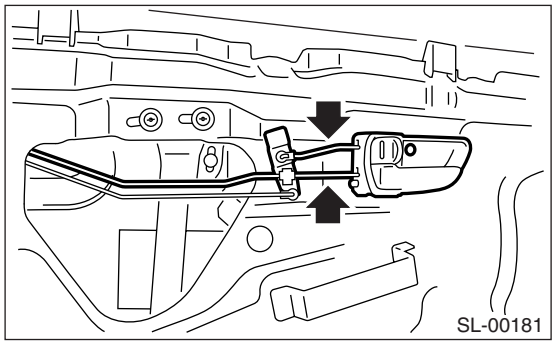

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the inner remote works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.
3) Make sure the child safety lock work properly.

9. Rear Outer Handle

A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
2) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
3) Remove the rear inner remote. <Ref. to SL-26, REMOVAL, Rear Inner Remote.>
4) Remove the rear door latch assembly. <Ref. to SL-28, REMOVAL, Rear Door Latch Assembly.>
5) Loosen two bolts and a nut to remove the rear outer handle.

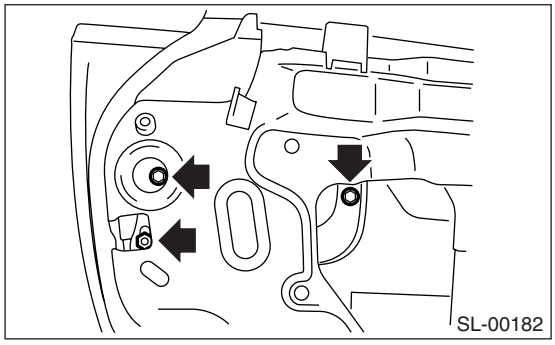

CAUTION:
Do not use excessive force to remove the hundle from door panel. This will deform it.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the outer handle works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.

10.Rear Door Latch Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
3) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
4) Remove the rear inner remote. <Ref. to SL-26, REMOVAL, Rear Inner Remote.>
5) Remove three screws and a bolt.

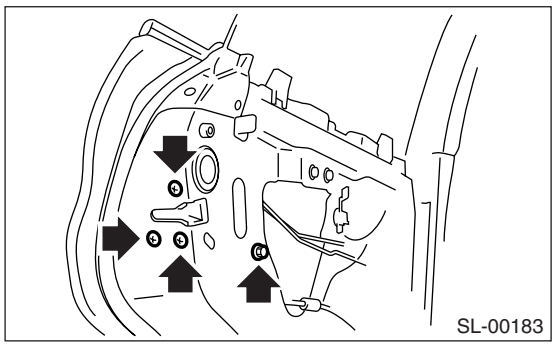

6) Disconnect the connector, and then remove the rear door latch assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the lock works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.

11.Rear Door Lock Actuator

A: REMOVAL

1) Remove the rear door latch assembly. <Ref. to SL-28, REMOVAL, Rear Door Latch Assembly.>
2) Loosen two screws to remove rear door lock actuator.

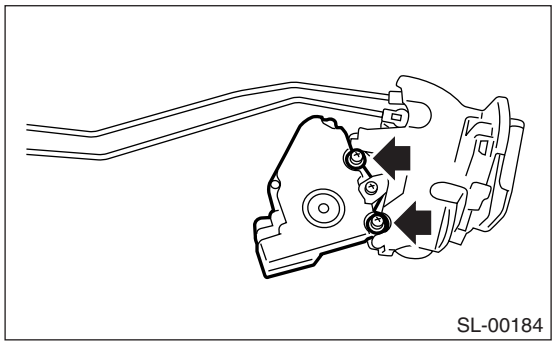
SL-00184

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the lock works properly after installation.

C: INSPECTION

1) Disconnect the door lock actuator harness connector.
2) Connect the battery to door lock actuator terminals.
If NG, replace the door lock actuator.

1. Without double lock

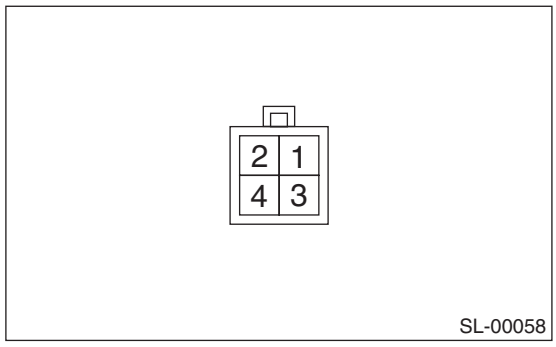

SL-00058

Terminal No.	Actuator operation
No. 3 (+) and No. 1 (–)	Unlocked → Locked
No. 1 (+) and No. 3 (–)	Locked → Unlocked

2. With double lock

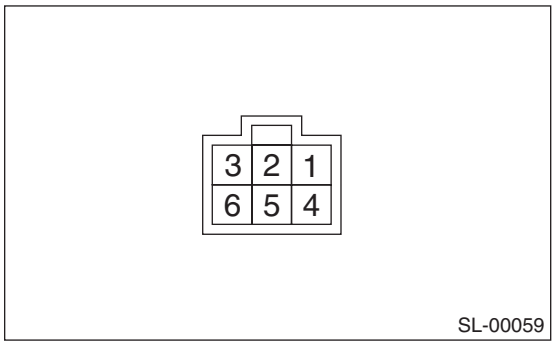

SL-00059

DOOR ACTUATOR RH:

Terminal No.	Actuator operation
No. 1 (+) and No. 4 (–)	Unlocked → Locked
No. 4 (+) and No. 1 (–)	Locked → Unlocked
No. 6 (+) and No. 3 (–)	Double lock released → Double lock set
No. 3 (+) and No. 6 (–)	Double lock set → Double lock released

DOOR ACTUATOR LH:

Terminal No.	Actuator operation
No. 6 (+) and No. 3 (–)	Unlocked → Locked
No. 3 (+) and No. 6 (–)	Locked → Unlocked
No. 1 (+) and No. 4 (–)	Double lock released → Double lock set
No. 4 (+) and No. 1 (–)	Double lock set → Double lock released

12.Rear Gate Outer Handle

A: REMOVAL

1) Remove the rear gate trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
2) Remove the rear gate latch assembly. <Ref. to SL-31, REMOVAL, Rear Gate Latch Assembly.>
3) Loosen two nuts to remove the rear gate outer handle.

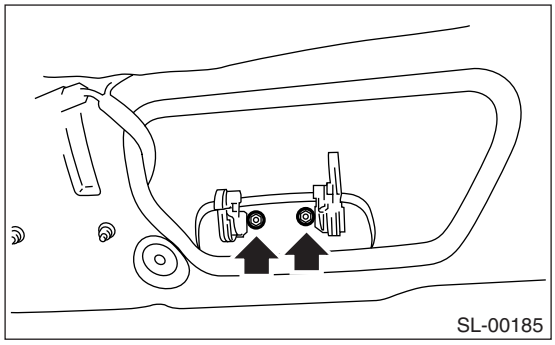

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the outer handle works properly after installation.

C: INSPECTION

1) Inspect the rod for deformation.
2) Make sure the lever and rod move smoothly.

13.Rear Gate Latch Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear gate trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
3) Remove three bolts.

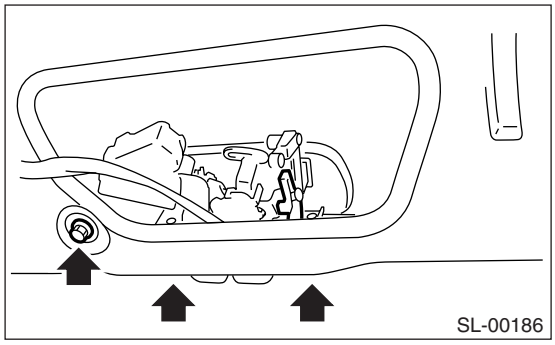

4) Disconnect the connectors, and then remove the rear gate latch assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the lock works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.
2) Make sure the lever and rod work smoothly.

14.Rear Gate Latch Lock Actuator

A: REMOVAL

1) Remove the rear gate latch assembly. <Ref. to SL-31, REMOVAL, Rear Gate Latch Assembly.>
2) Loosen two screws to remove the rear gate lock actuator.

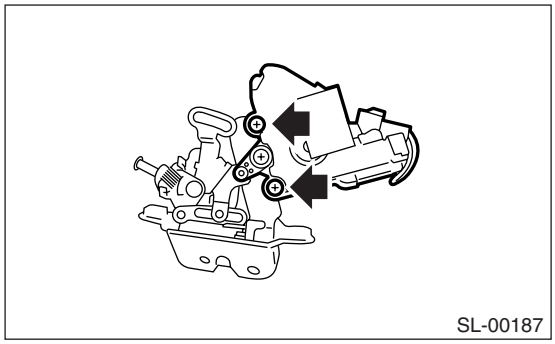
SL-00187

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
Make sure the lock works properly after installation.

C: INSPECTION

1) Disconnect the door lock actuator harness connector.
2) Connect the battery to door lock actuator terminals.

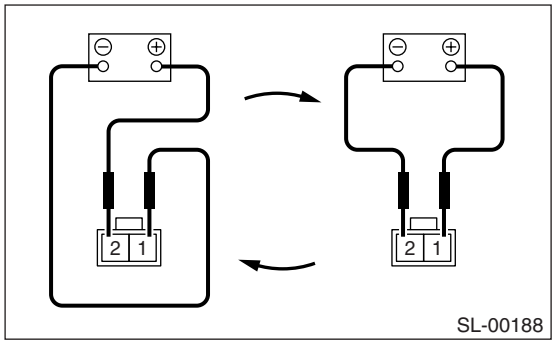

SL-00188

Terminal No.	Actuator operation
No. 1 (+) and No. 2 (–)	Unlocked → Locked
No. 2 (+) and No. 1 (–)	Locked → Unlocked

If NG, replace the rear gate latch lock actuator.

15.Trunk Lid Lock Assembly

A: REMOVAL

1) Remove the trunk lid key cylinder rod clamp.
2) Loosen two bolts to remove the trunk lid lock assembly.

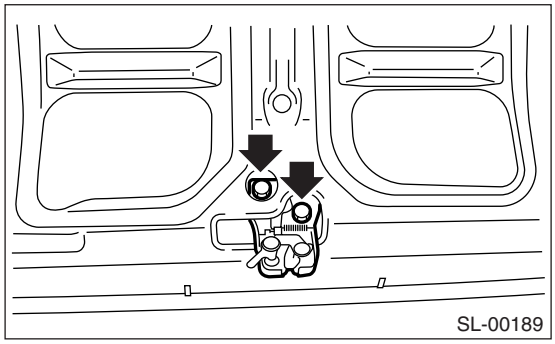

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
- Apply grease to parts that rub.
- Make sure the lock works properly after installation.

C: INSPECTION

1) Check the striker for bending or abnormal wear.
2) Check the safety lever for improper movement.
3) Check other levers and the spring for rust formation and unsmooth movement.

16.Front Hood Lock Assembly

A: REMOVAL

1) Open the hood.
2) Remove the bolts. Remove the hood lock assembly.
3) Remove the release cable from lock assembly.

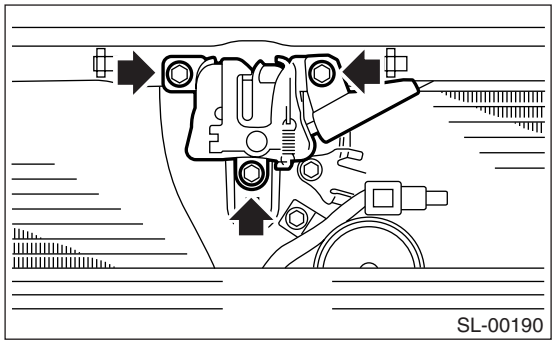

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
- Apply grease to parts that rub.
- Make sure the release cable works properly after installation.

C: ADJUSTMENT

Loosen the bolt. Adjust the lock assembly while moving it up and down.

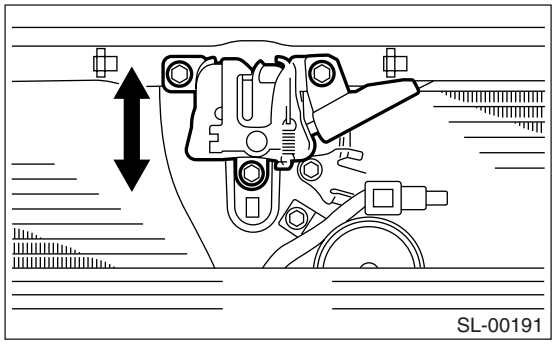

D: INSPECTION

1) Check the striker for bending or abnormal wear.
2) Check the safety lever for improper movement.
3) Check other levers and the spring for rust formation and unsmooth movement.

17.Remote Openers

A: REMOVAL

1. HOOD OPENER

1) Remove the release cable from hood lock.
2) Remove the bolt. Remove the opener lever.

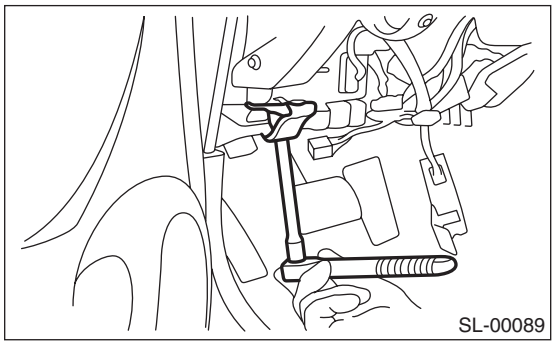

2. TRUNK LID OPENER

1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the center pillar lower trim, and for LHD model, remove the side sill cover on passenger side. Remove the rear pillar lower trim. Pull back the floor mat. Remove the clip holding the cable.
3) Remove the bolt. Remove the opener pull handle.

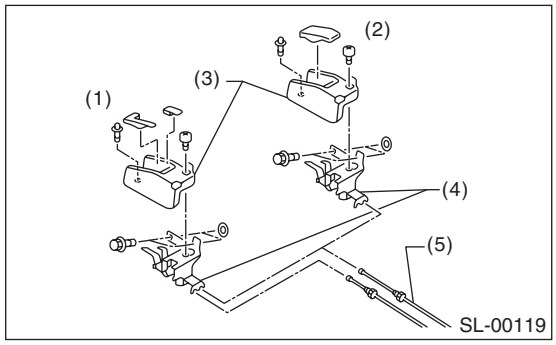

(1) Sedan
(2) Wagon
(3) Cover
(4) Pull handle ASSY
(5) Cable

4) Remove the cable from opener pull handle.
5) Remove the striker from trunk lid.
6) Remove the cable from striker.

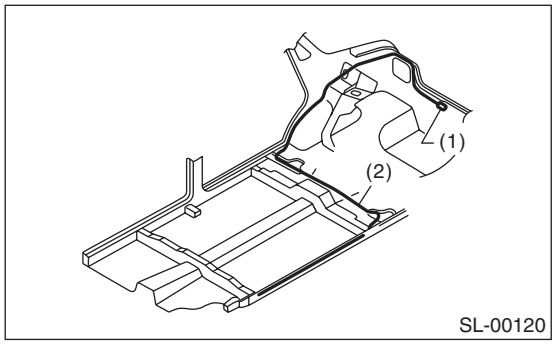

(1) Striker
(2) Cable

3. FUEL FLAP OPENER

1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the center pillar lower trim, and for LHD model, remove the side sill cover on passenger side. Remove the rear pillar lower trim. Pull back the floor mat. Remove the clip holding the cable.
3) Remove the bolt. Remove the opener pull handle.

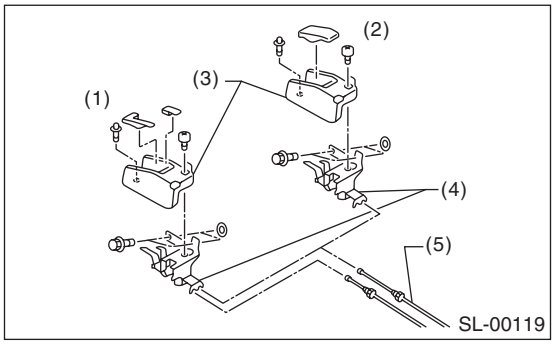

(1) Sedan
(2) Wagon
(3) Cover
(4) Pull handle ASSY
(5) Cable

4) Remove the cable from opener pull handle.
5) Remove the right rear quarter trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>

6) Rotate the fuel lock inside the quarter panel to left and remove.

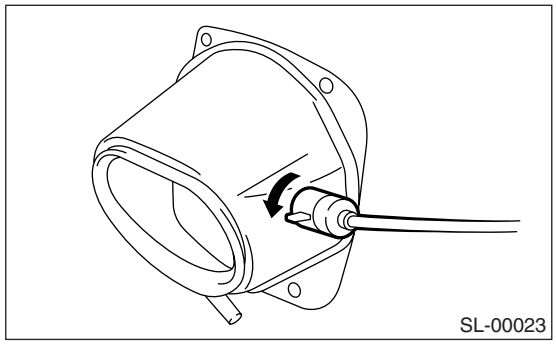

B: INSTALLATION

1. HOOD OPENER

Install in the reverse order of removal.

2. TRUNK LID OPENER

Install in the reverse order of removal.

3. FUEL FLAP OPENER

Install in the reverse order of removal.

C: INSPECTION

Make sure the fuel flap opens and closes smoothly.

18.Ignition Key Lock

A: REPLACEMENT

1) Remove the ground cable from battery.
2) Remove the steering column. <Ref. to PS-26, REMOVAL, Tilt Steering Column.>
3) Secure the steering column in a vise. Remove the bolt with a drill.

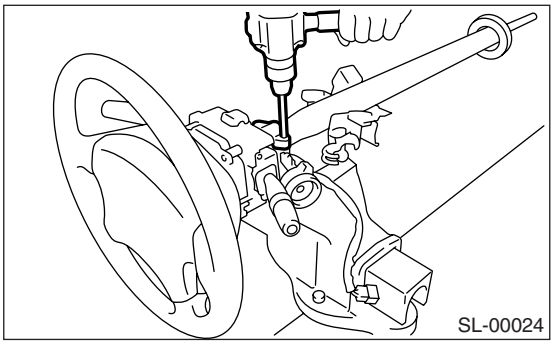

4) Remove the ignition key lock.
5) Use a new torn bolt. Tighten the torn bolt to end of thread.

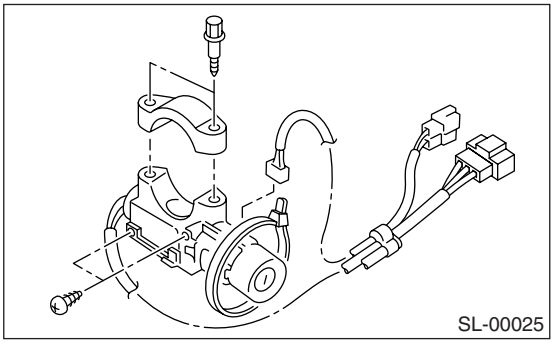

B: INSPECTION

1) Remove the instrument panel lower cover.
2) Remove the lower column cover.
3) Unfasten the hold-down clip which secures harness and disconnect the connector of ignition switch from body harness.
4) Turn the ignition key plate to each position and check the continuity between terminals of ignition connector.

Switch position	Terminal No.	Standard
LOCK	—	—
ACC	No. 1 and No. 2	Less than 1 Ω
ON	No. 1 and No. 2 No. 1 and No. 4 No. 2 and No. 4	Less than 1 Ω
ST	No. 1 and No. 3 No. 1 and No. 4 No. 3 and No. 4	Less than 1 Ω

If NG, replace the ignition switch.

19.Key Lock Cylinders

A: REPLACEMENT

1. FRONT DOOR

• Without double lock

1) Remove the door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
2) Pull back the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
3) Move the front door glass downward.
4) Remove the rod clamp. Remove the bolt. Replace the key cylinder.

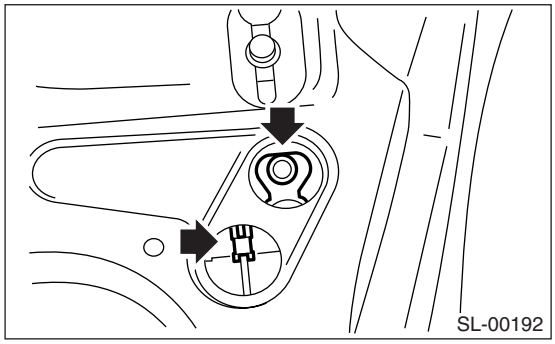

• With double lock

1) Remove the door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
3) Remove the front door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
4) Remove the rod clamp.
5) Remove two bolts, and then remove the key cylinder and outer hundle cover (A).

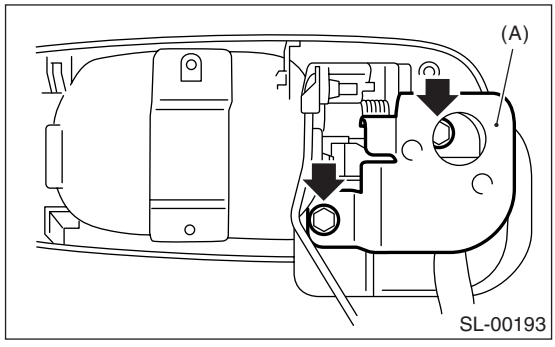

6) Remove the hooks (two), and then remove the key cylinder lock switch (A) to replace the key cylinder.

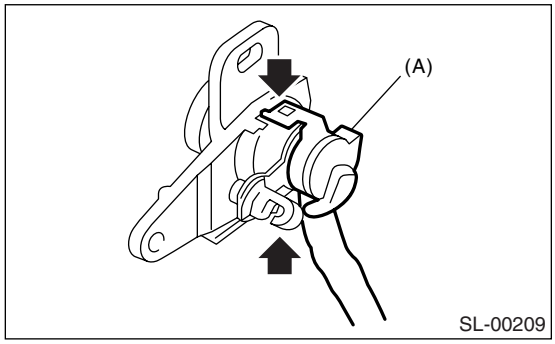

2. TRUNK LID

1) Remove the trunk trim. <Ref. to EI-54, REMOVAL, Trunk Trim.>
2) Remove the rod clamp. Remove the lock plate. Replace the key cylinder.

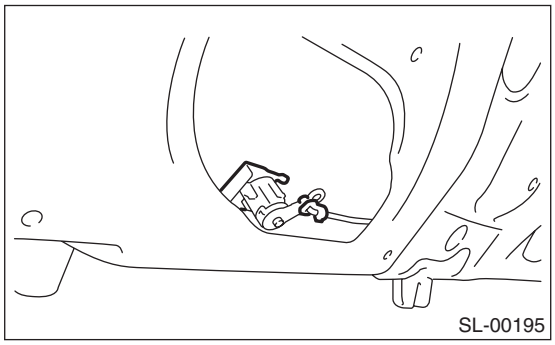

20.Immobilizer Control Module

A: REMOVAL

NOTE:
The following positions for removal and installation are for LHD models. The positions for RHD models are symmetrically opposite.

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
3) Disconnect the connector from immobilizer control module.
4) Remove the immobilizer control module.

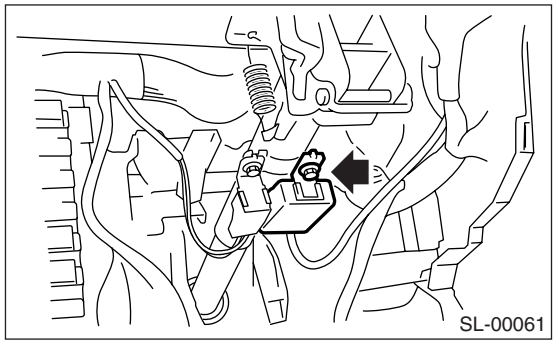

B: INSTALLATION

Install in the reverse order of removal.

21.Immobilizer Antenna

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
3) Remove the screws, separate upper column cover and lower column cover.

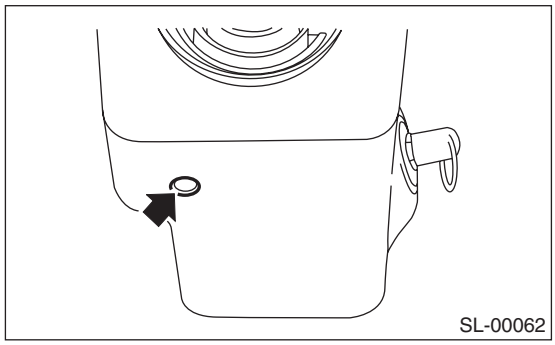

4) Disconnect the immobilizer antenna connector (A) from immobilizer control module.
5) Remove the screw, and detach the immobilizer antenna (B).

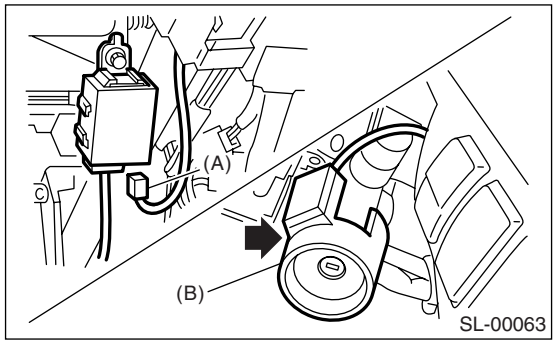

B: INSTALLATION

Install in the reverse order of removal.

22.Keyless Entry Control Module

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
3) Remove the nut, and then remove the keyless entry control module while disconnecting connector.

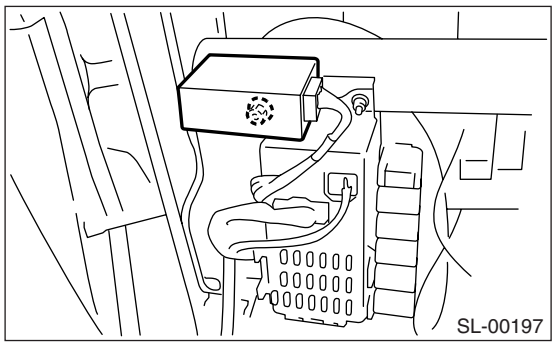

4) Disconnect the keyless entry control module and other electrical control module.

B: INSTALLATION

Install in the reverse order of removal.

23.Double Lock Module

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the instrument panel lower cover. <Ref. to EI-43, REMOVAL, Instrument Panel Assembly.>
3) Remove the nut, then remove the double lock module while disconnecting the connector.

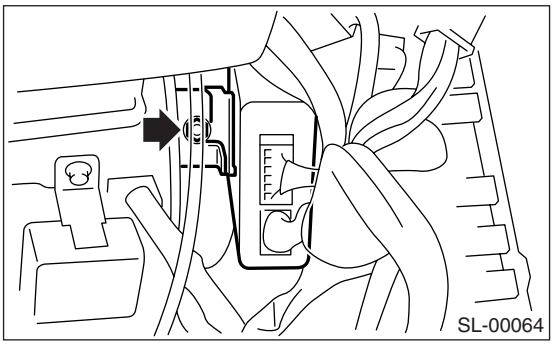

B: INSTALLATION

Install in the reverse order of removal.

24.Keyless Transmitter

A: REMOVAL

1. TRANSMITTER BATTERY

Remove the screw (A) from transmitter, and then remove the battery.

NOTE:
To prevent static electricity damage to transmitter printed circuit board, touch the steel area of building with hand to discharge the static electricity carried on body or clothes before disassembling transmitter.

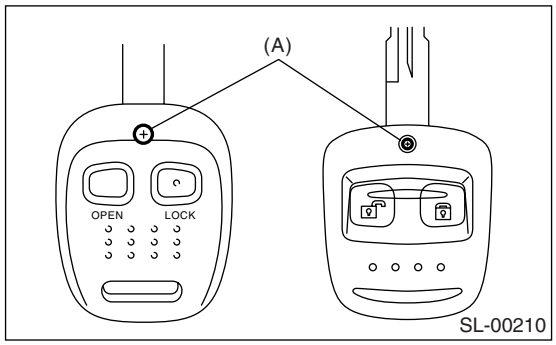

(A) Screw

B: INSTALLATION

1. TRANSMITTER BATTERY

Install in the reverse order of removal.

C: INSPECTION

1. TRANSMITTER BATTERY

Measure the voltage between battery (+) terminal and (–) terminal.

NOTE:
• Battery discharge occurs during measurement. Complete the measurement within 5 seconds.
• During battery voltage measurement, voltage falls more than 1.8 volts in 3 seconds period.

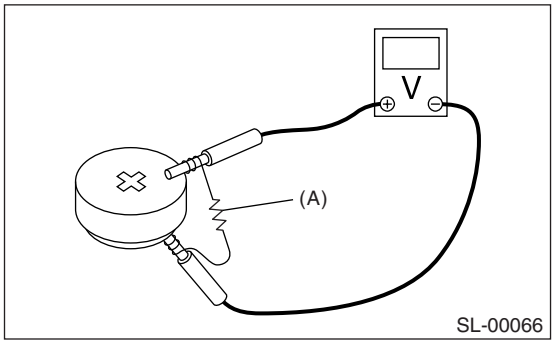

(A) Resistance 300 Ω

Tester connection		Standard
(+)	(–)	
Battery (+) terminal	Battery (–) terminal	2.5 — 3.0 V

If NG, replace the battery. (Use CR1620 or equivalent.)

D: REPLACEMENT

1. TRANSMITTER REGISTRATION

NOTE:
• A maximum of three transmitters can be registered for each individual vehicle.
• When replacing the transmitter (key), registration to immobilizer system is also necessary.

1) Remove the side sill cover at driver's side, then connect the registration connectors at front pillar lower section.
2) Push the door lock switch at driver's side to UNLOCK, and then unlock the door lock.
3) Press any button of the transmitter twice to be registered, while pushing the door lock switch to UNLOCK.
4) The door lock will automatically lock and unlock in sequence. This indicates the completion of transmitter registration for first transmitter.
5) If the registration of second and third transmitter is now to be carried out, repeat the procedure 3) and 4).
6) Disconnect the registration connectors after the completion of all registration operations. After confirming the operation of door lock using newly registered transmitter(s), reinstall the side sill cover at driver's side.

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

SR

Page

1. General Description 2
2. Sunroof Control System 4
3. Sunroof Lid 5
4. Sunroof Assembly 6
5. Sunroof Motor 8
6. Sunroof Switch 9

1. General Description

A: COMPONENT

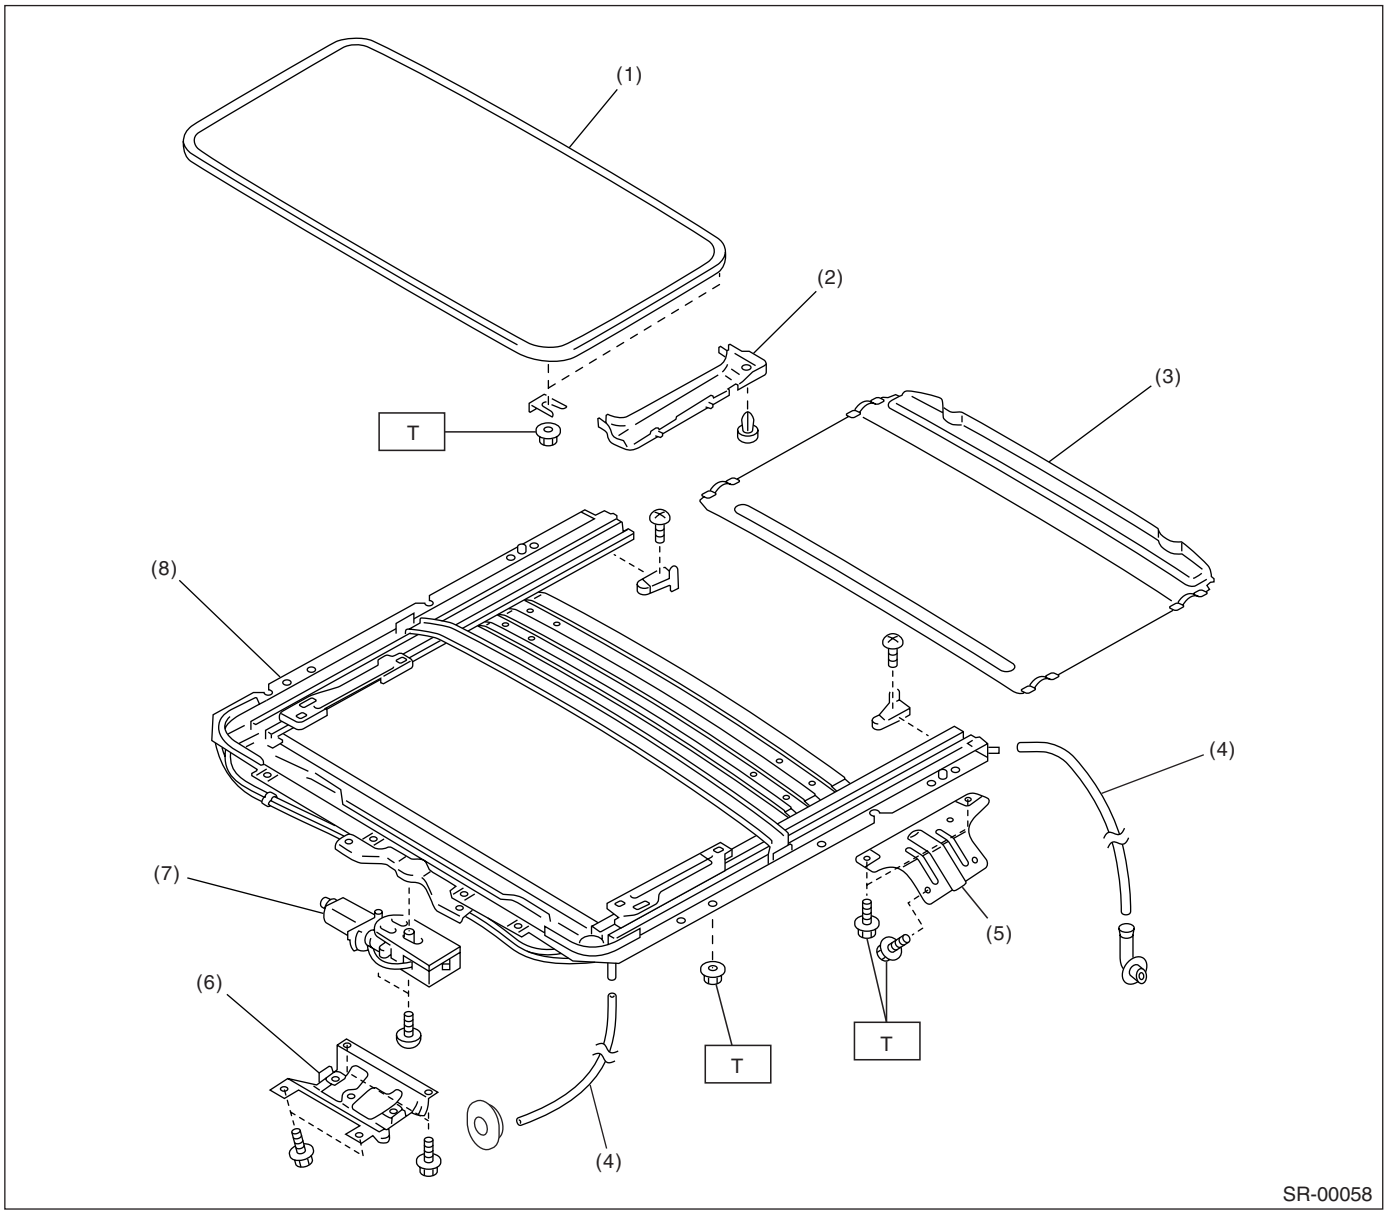

(1) Glass lid
(2) Guide rail cover
(3) Sunshade
(4) Drain tube
(5) Sunroof bracket
(6) Motor cover
(7) Motor ASSY
(8) Frame ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T*: *7.4 (0.75, 5.4)

B: CAUTION

• Before disassembling or reassembling parts, always disconnect battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
• Reassemble in reverse order of disassembly, unless otherwise indicated.
• Adjust parts to the given specifications.
• Connect the connectors and hoses securely during reassembly.
• After reassembly, make sure functional parts operate smoothly.

C: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.

2. Sunroof Control System

A: SCHEMATIC

1. SUNROOF

<Ref. to WI-254, SCHEMATIC, Sunroof System.>

B: INSPECTION

Symptom	Checking order
Water leaks.	(1) Check roof panel and sunroof lid for improper or poor sealing. (2) Check drain tube for clogging. (3) Check sunroof frame seal and body for improper fit.
Booming noise	(1) Check sunroof lid and roof panel for improper clearance. (2) Check sunshade and roof trim for improper clearance.
Abnormal motor noise	(1) Check motor for looseness. (2) Check gears and bearings for wear. (3) Check cables for wear. (4) Check cable pipe for deformities.
Failure of sunroof (Motor operates properly.)	(1) Check guide rail for foreign particles. (2) Check guide rail for improper installation. (3) Check parts for mutual interference. (4) Check cable slider for improper clinching. (5) Check cable for improper installation. (6) Check clutch adjustment nut for improper tightness.
Motor does not rotate or rotates improperly.	(1) Check fuse for blow-out. (2) Check switch for improper function. (3) Check motor for incorrect terminal voltage. (4) Check relay for improper operation. (5) Check poor grounding system. (6) Check harness for open or short and terminals for poor connections. (7) Check limit switch for improper operation.

3. Sunroof Lid

A: REMOVAL

1) Completely close the sunroof lid and open the sunshade.
2) Remove the cover (A) then remove the nuts (B).

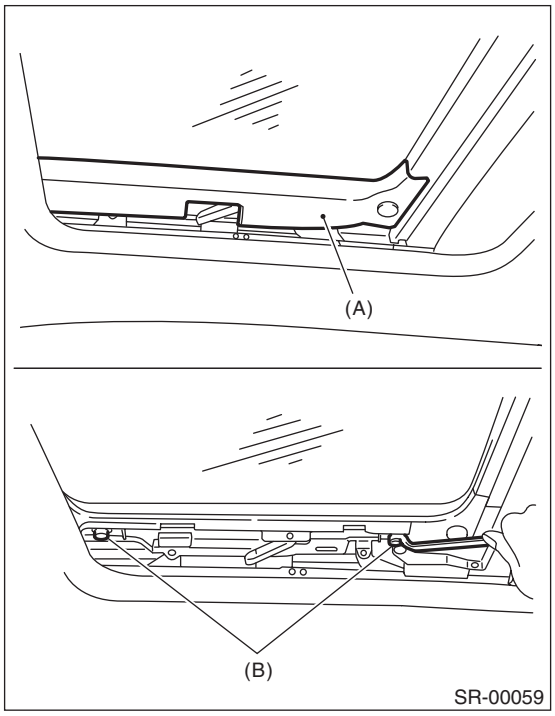

3) Remove the sunroof lid carefully.

B: INSTALLATION

Install in the reverse order of removal.

C: ADJUSTMENT

1. ALIGNMENT OF HEIGHT BETWEEN SUNROOF LID AND ROOF PANEL

Loosen the sunroof lid installation nuts and then adjust the height by adding (max: three pieces) or extracting (min: zero pieces) shims (standard: one piece).

Difference in height between sunroof lid and roof panel: L
L: 2.0±0.5 mm (0.079±0.020 in)

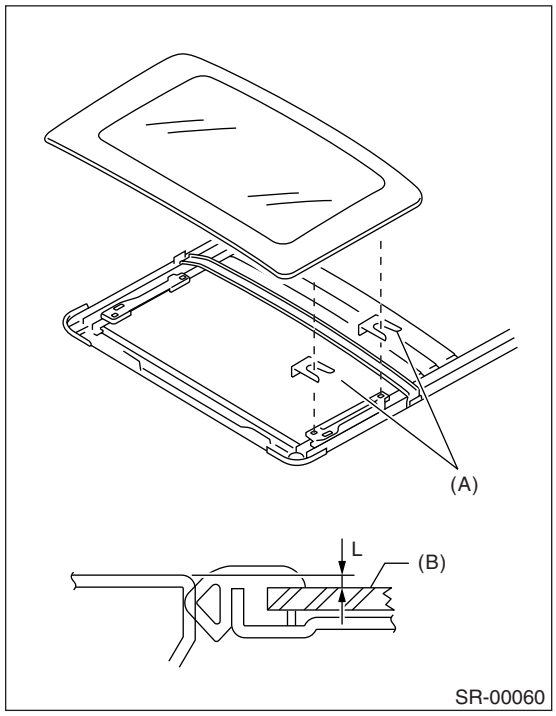

(A) Shim
(B) Sunroof lid

4. Sunroof Assembly

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the roof trim. <Ref. to EI-50, REMOVAL, Roof Trim.>
3) Remove the sunroof lid. <Ref. to SR-5, REMOVAL, Sunroof Lid.>
4) Disconnect the drain tubes from sunroof frame.
5) Remove the room lamp harness clip (A).

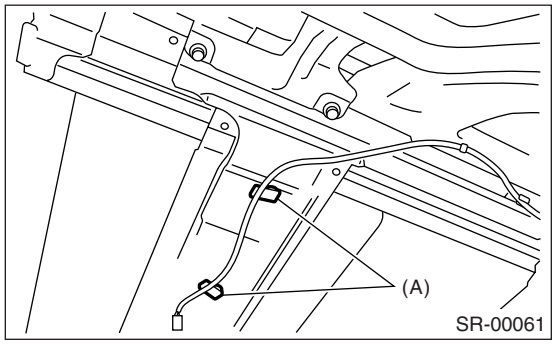

6) Disconnect the sunroof harness connector.
7) Remove the motor cover.

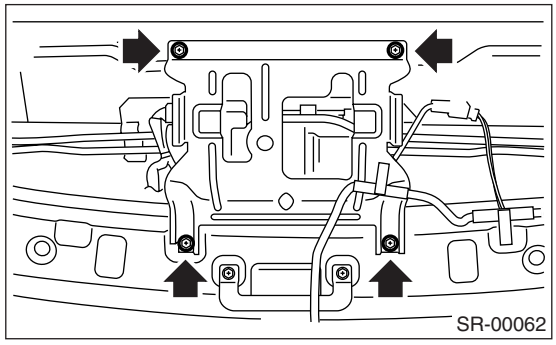

8) Remove the assist grip bracket (A) and sunroof bracket (B).

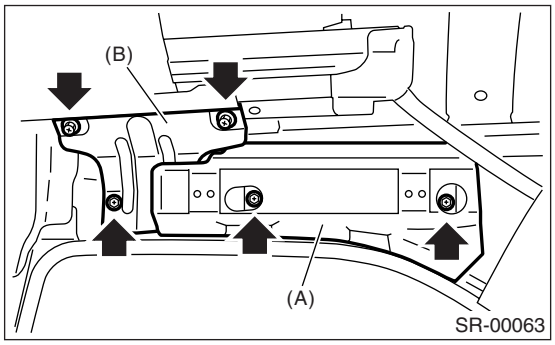

9) Remove the nuts then detach the sunroof frame.

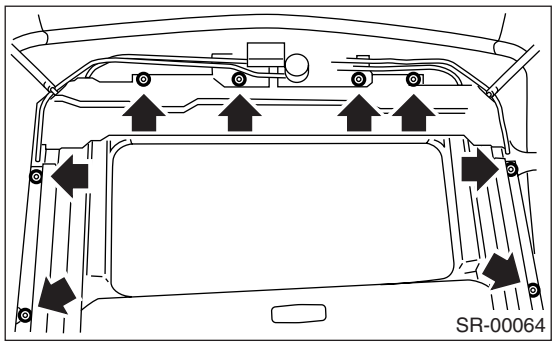

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Be careful not to snag the harness.

NOTE:
- Make sure to connect the harness connector.
- When installing the drain tube, insert it securely onto drain pipe.

Length A:
15 mm (0.59 in) or more

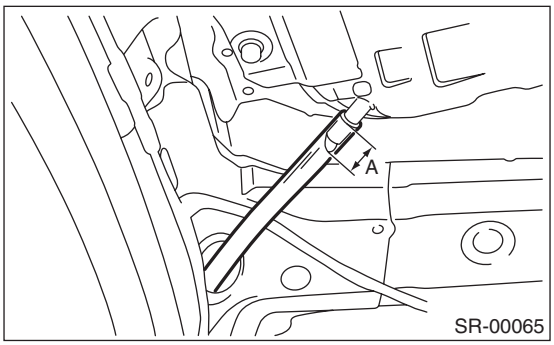

C: DISASSEMBLY

1) Remove the sunroof frame.
2) Remove the rail stoppers (A).

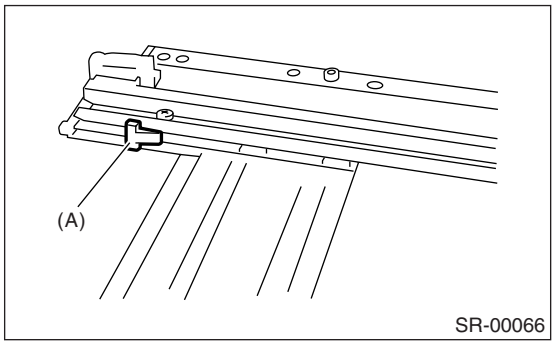

3) Pull out the sunshade (A) from sunroof frame.

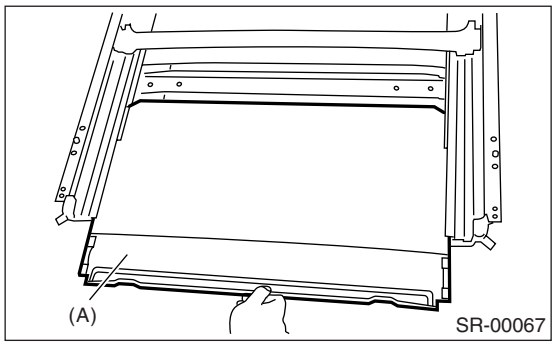

D: ASSEMBLY

Assemble in the reverse order of disassembly.

E: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

1) Attach a spring scale to sunshade edge using a cloth.

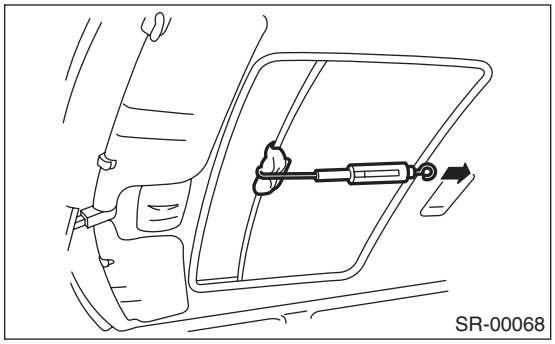

2) Pull the spring scale back to measure moving load of the sunshade.

Moving load of rear sunshade:
Less than 24.5±4.9 N (2.5±0.5 kgf, 55±1.1 lb)

NOTE:
Moving load is larger at the beginning of pulling a spring scale, so take a scale reading while sunshade sliding smoothly.

3) If moving load exceeds specifications, check the sunroof lid, sunshade and guide rail assembly for improper installation.

5. Sunroof Motor

A: REMOVAL

CAUTION:
• When removing the clip, use great care to not damage the roof trim.
• Never rotate the sunroof motor after removing it.

1) Completely close the sunroof.
2) Disconnect the ground cable from battery.
3) Remove the sunroof lid. <Ref. to SR-5, REMOVAL, Sunroof Lid.>
4) Confirm the alignment mark (A) of sunroof bracket link and the guide from sunroof opening. (If the mark does not align, adjust to align the mark.)

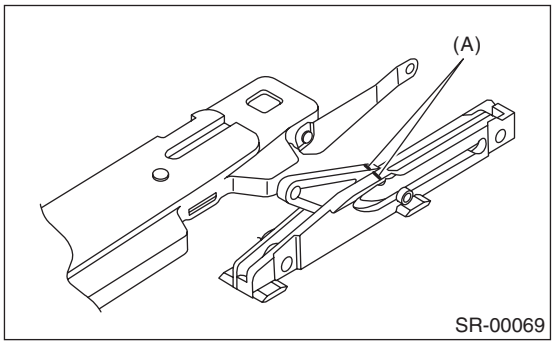

5) Remove the roof trim. <Ref. to EI-50, REMOVAL, Roof Trim.>
6) Remove the motor cover.

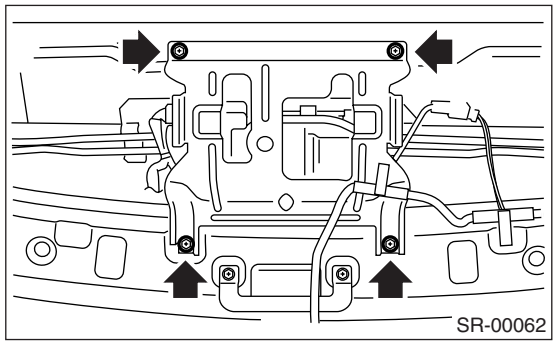

7) Disconnect the harness connector and remove the sunroof motor mounting screw.

B: INSTALLATION

CAUTION:
• Be careful not to move the sunroof cable when installing sunroof motor.

1) Check the alignment mark (A) of sunroof motor.

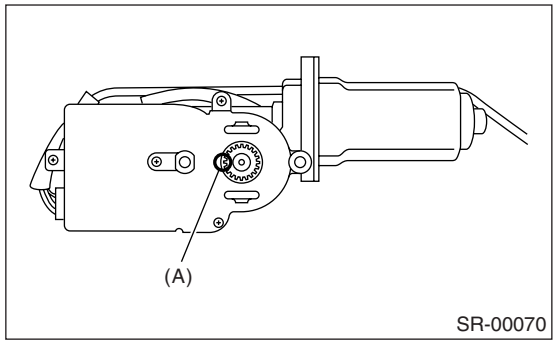

2) Confirm the alignment mark (A) of sunroof bracket link.

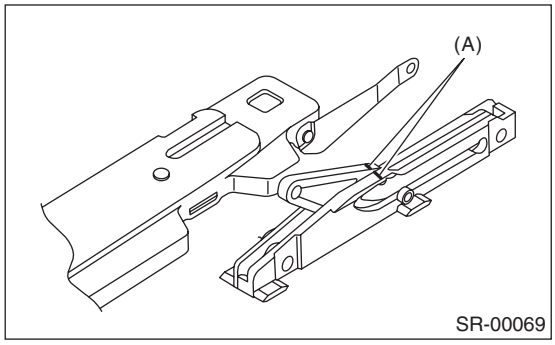

3) Install the sunroof motor.
4) After installing the motor, reconfirm the alignment marks of motor side and sunroof bracket link side.
5) Connect the sunroof motor harness connector and then connect the battery ground cable.
6) Check the sunroof operation with the procedure as shown in the table.

Checking order	Switch position
Completely close sunroof.	Closed
Tilt-up sunroof to most upper position.	Tilt-up
Lower sunroof completely.	Tilt-down
Open sunroof to near the completely open position.	Open
Completely open sunroof.	Open
Close sunroof 150 mm (5.91 in) away from completely closed position.	Closed
Completely close sunroof.	Closed

7) Install the sunroof lid and trims in the reverse order of removal.

6. Sunroof Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the spot light lens (A) and sunroof switch mounting screw (B).

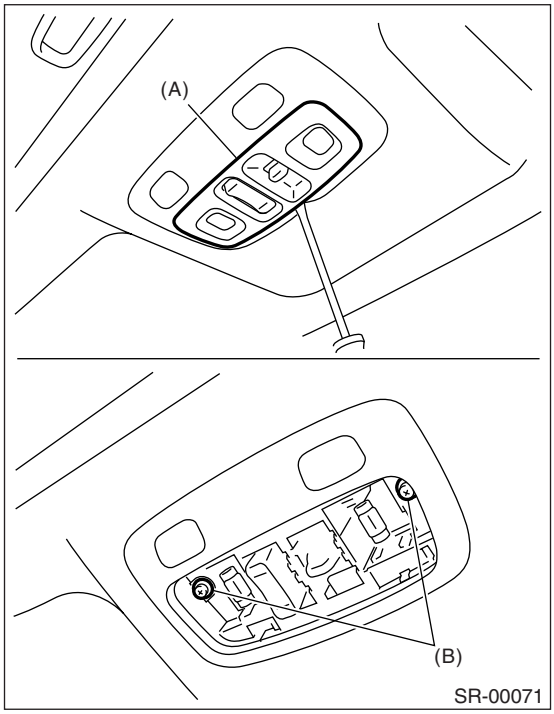

3) Disconnect the harness connectors and remove the sunroof switch.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the sunroof switch resistance.

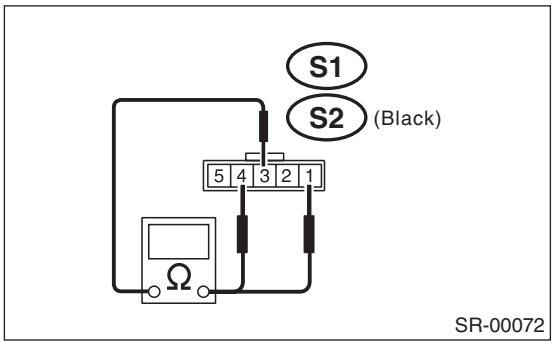

Switch	Terminal No.	Standard value
Open	S1: 3 and 4	Less than 1 Ω
Close	S1: 1 and 3	Less than 1 Ω
Tilt-up	S2: 3 and 4	Less than 1 Ω
Tilt-down	S2: 1 and 3	Less than 1 Ω

EXTERIOR/INTERIOR TRIM

EI

		Page
1.	General Description	2
2.	Front Grille	18
3.	Hood Grille	19
4.	Front Under Cover	21
5.	Front Bumper	22
6.	Rear Bumper	29
7.	Mud Guard	31
8.	Cowl Panel	32
9.	Roof Spoiler	33
10.	Rear Spoiler	35
11.	Side Sill Spoiler	36
12.	Front Door Trim	37
13.	Rear Door Trim	38
14.	Glove Box	39
15.	Roof Rail	40
16.	Roof Molding	41
17.	Console Box	42
18.	Instrument Panel Assembly	43
19.	Upper Inner Trim	46
20.	Lower Inner Trim	47
21.	Rear Quarter Trim	48
22.	Sun Visor	49
23.	Roof Trim	50
24.	Rear Gate Trim	52
25.	Rear Shelf Trim	53
26.	Trunk Trim	54
27.	Floor Mat	55
28.	Luggage Floor Mat	56
29.	Trunk Room Mat	57
30.	Heat Shield Cover	58

1. General Description

A: COMPONENT

1. FRONT GRILLE

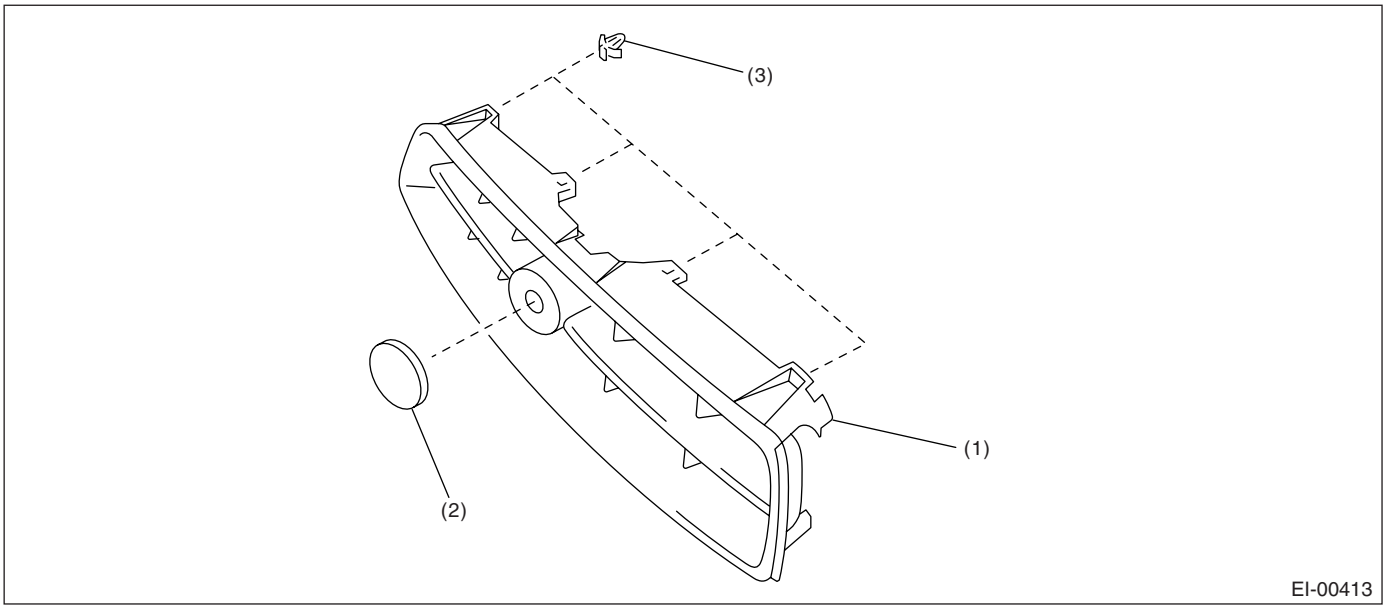

(1) Front grille (2) Front grille emblem (3) Clip

2. UNDER COVER

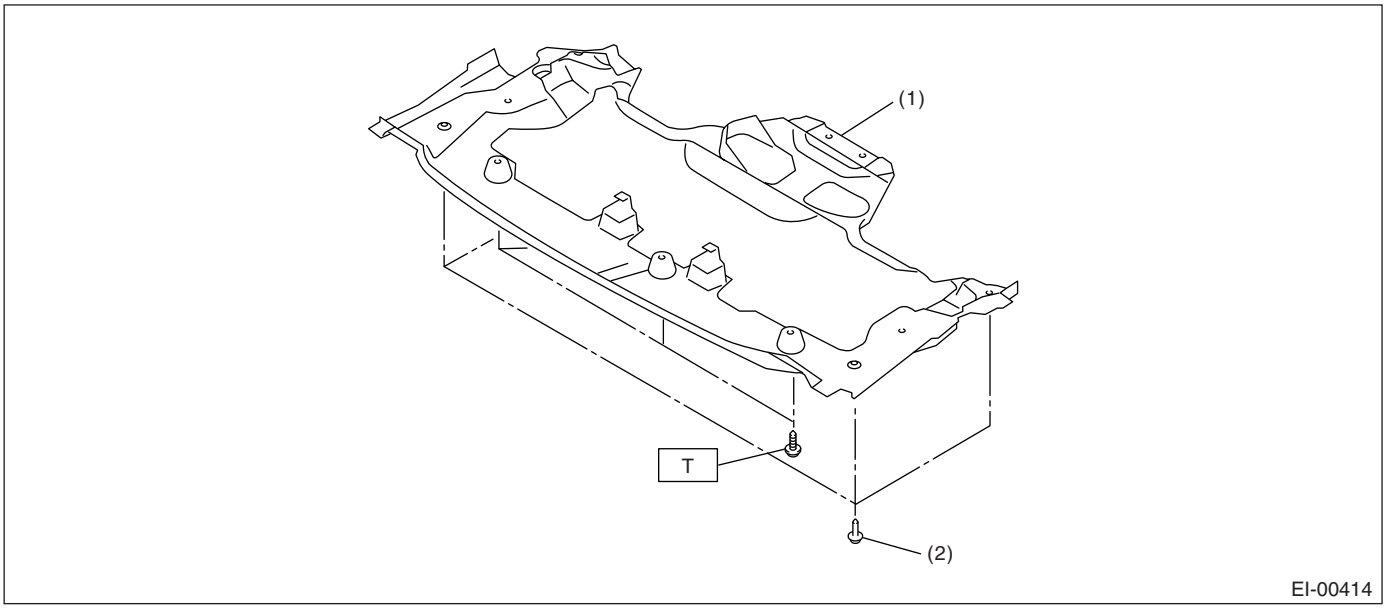

(1) Under cover (2) Clip (side)

Tightening torque: N·m (kgf-m, ft-lb)
T: 14 (1.42, 10.3)

3. HOOD GRILLE

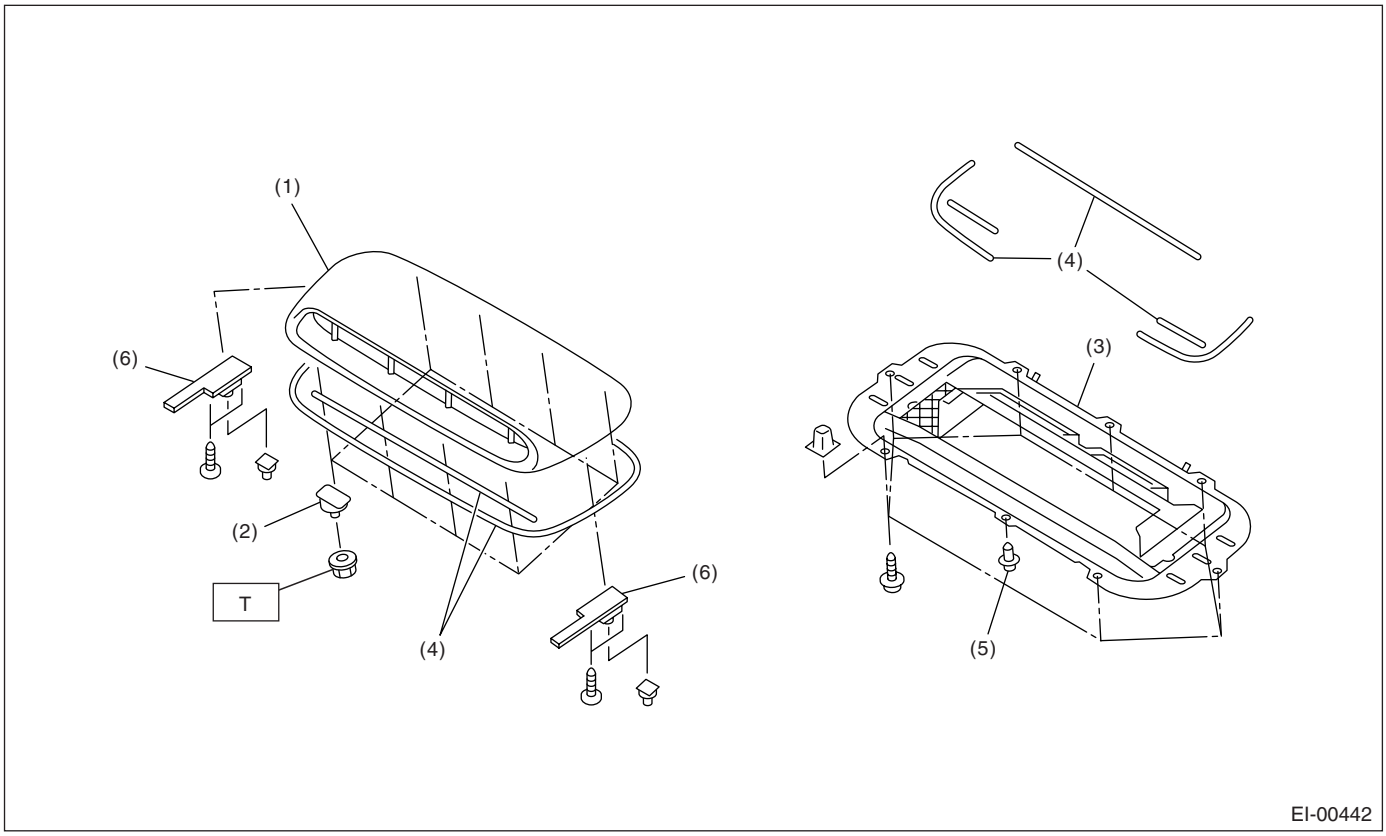

(1) Hood grille
(2) Bolt
(3) Grille duct
(4) Packing
(5) Clip
(6) Side plate

Tightening torque: N·m (kgf-m, ft-lb)
T: 4.5 (0.46, 3.32)

4. FRONT BUMPER

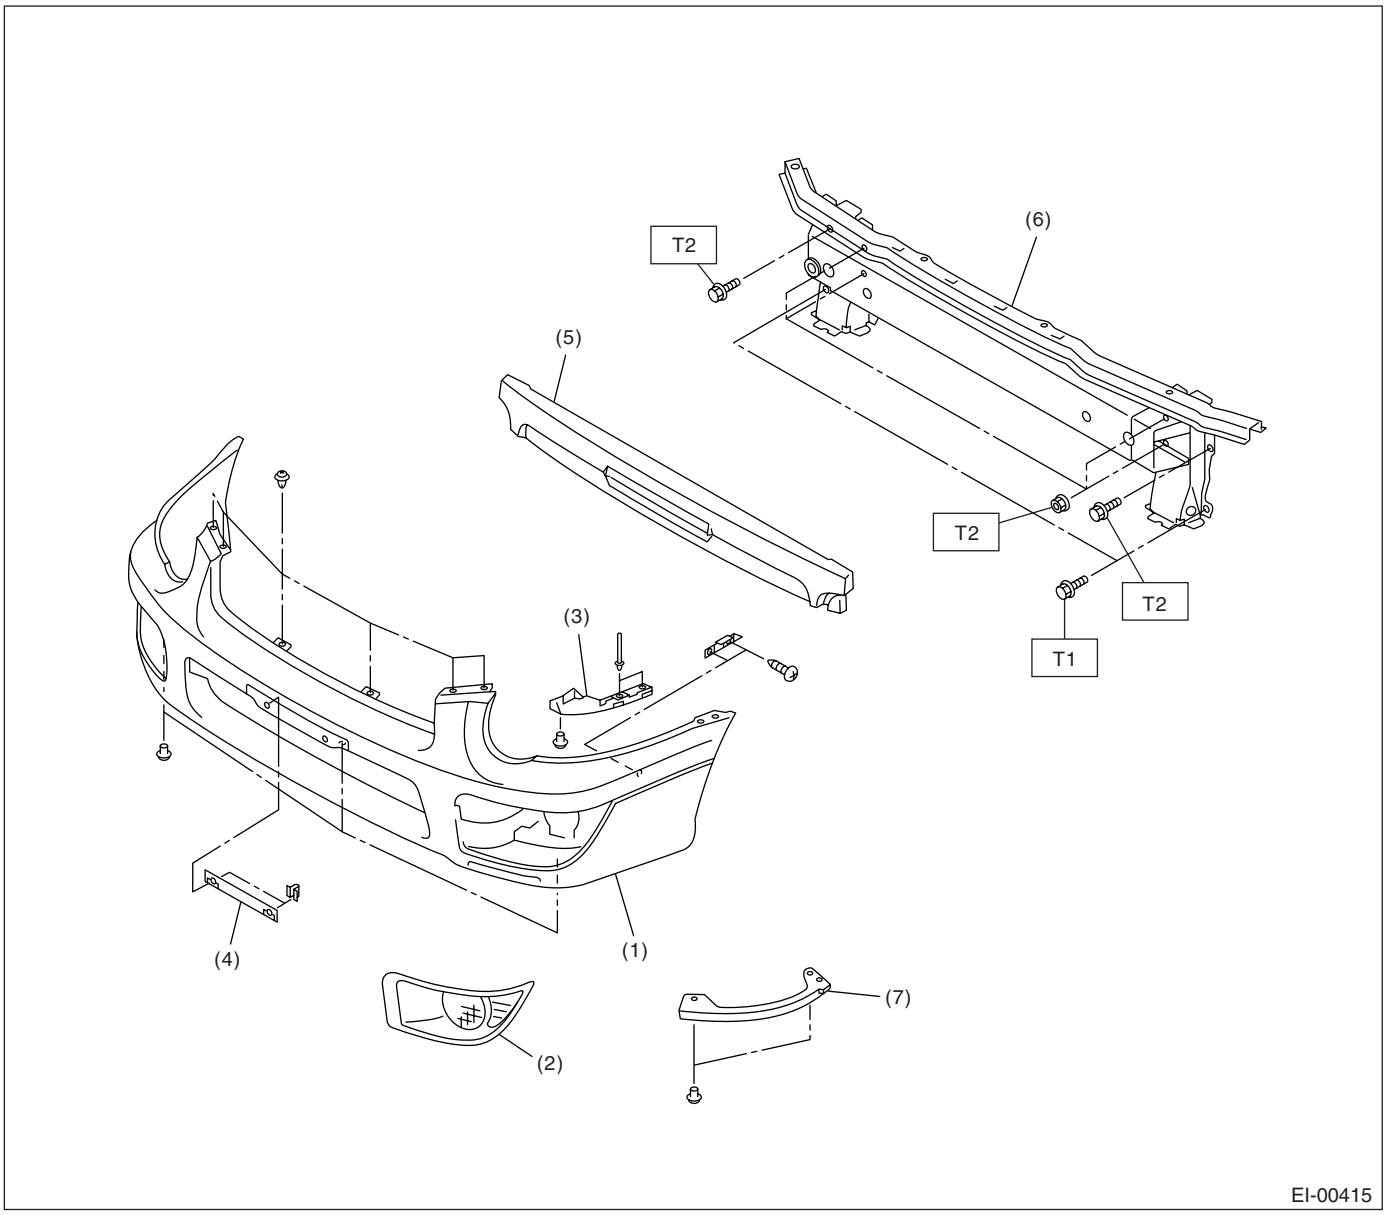

(1) Bumper face
(2) Fog light cover
(3) Bumper corner bracket
(4) License plate bracket
(5) Bumper energy absorber
(6) Bumper beam
(7) Bumper extension (wagon turbo model)

Tightening torque: N·m (kgf-m, ft-lb)
T1: 32 (3.3, 24)
T2: 69 (7.0, 51)

5. REAR BUMPER

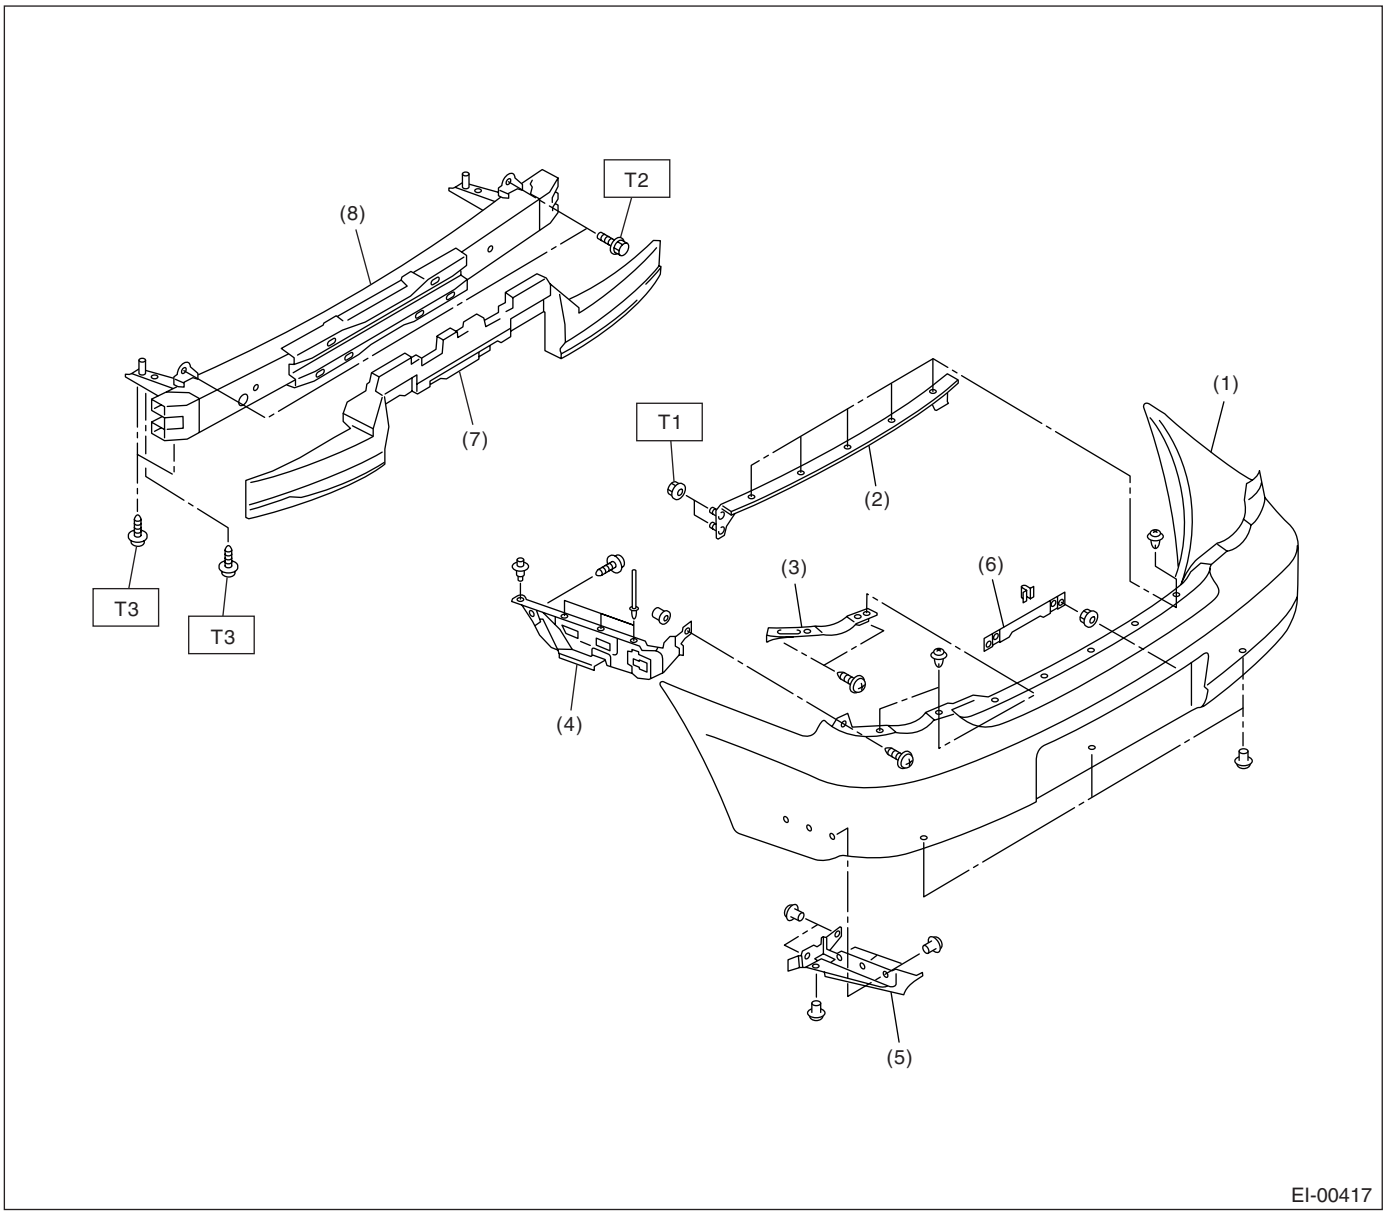

(1)	Bumper face	(5)	Bumper side cover	
(2)	Bumper upper beam	(6)	License plate base	
(3)	Bumper upper bracket	(7)	Bumper energy absorber	
(4)	Bumper side bracket	(8)	Bumper back beam	

Tightening torque: N·m (kgf-m, ft-lb)
T1: 33 (3.4, 24)
T2: 34 (3.5, 25)
T3: 95 (9.7, 70)

6. MUD GUARD

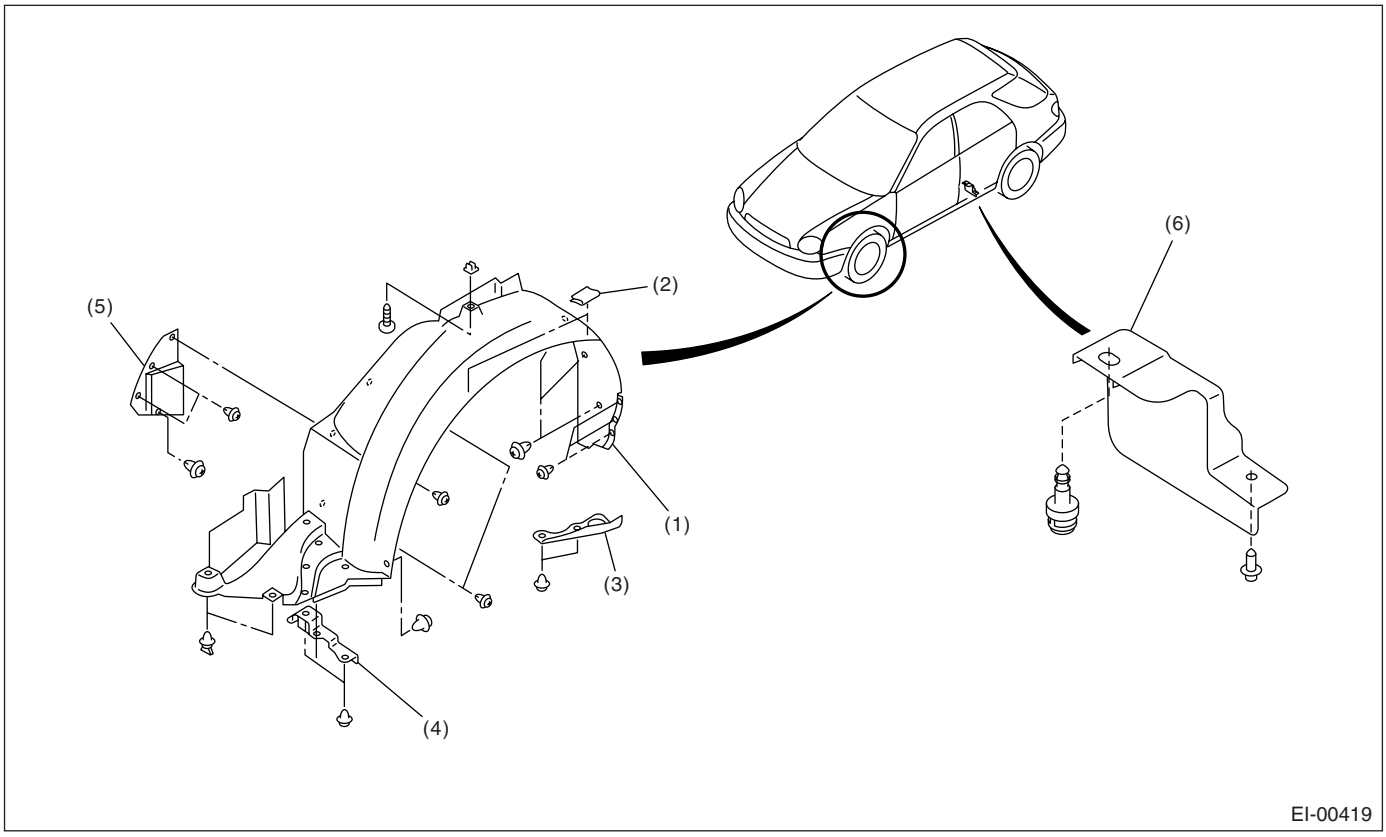

(1) Mud guard
(2) Clip
(3) Sub frame cover
(4) Front air flap plate
(5) Mud guard plate
(6) Rear air flap plate

7. COWL PANEL

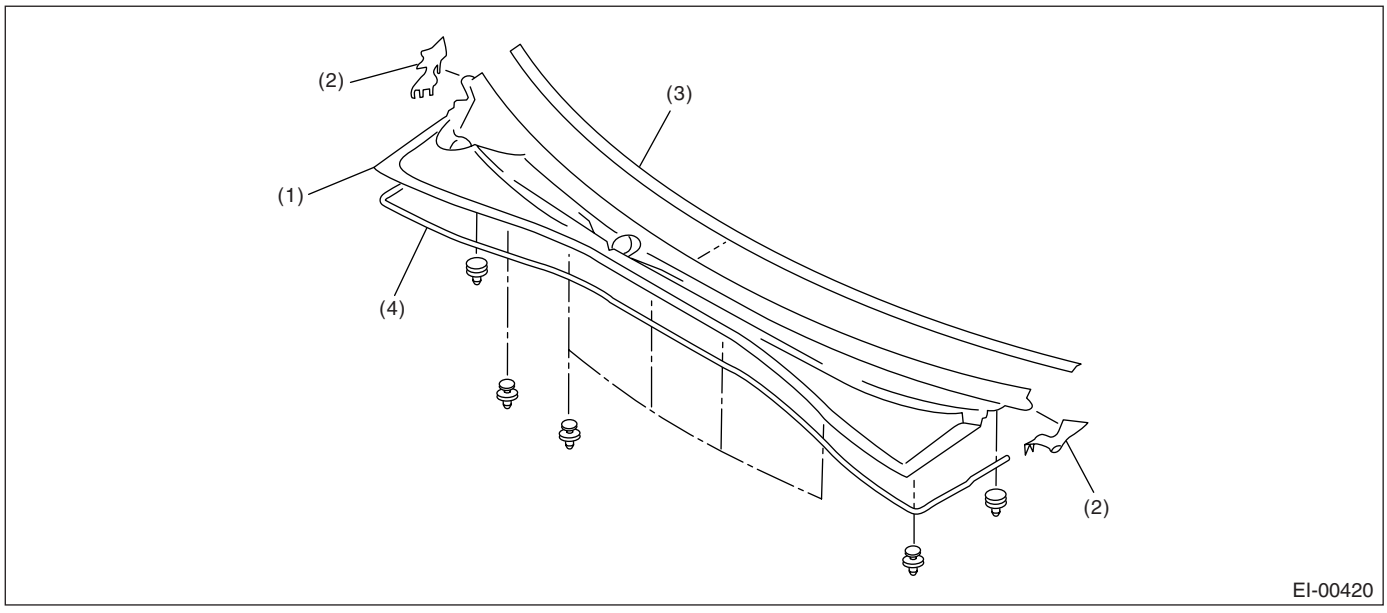

(1) Cowl panel
(2) Cowl side panel
(3) Protector
(4) Seal

8. ROOF SPOILER

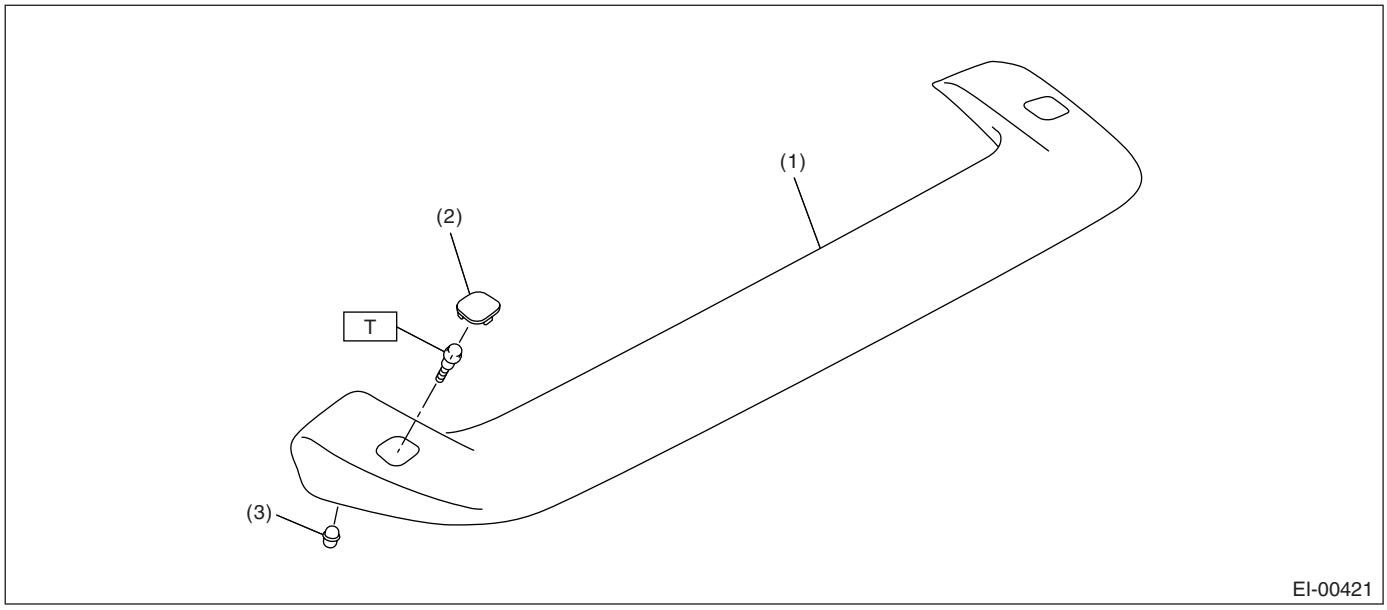

(1) Roof spoiler
(2) Cap
(3) Clip

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.46)

9. REAR SPOILER

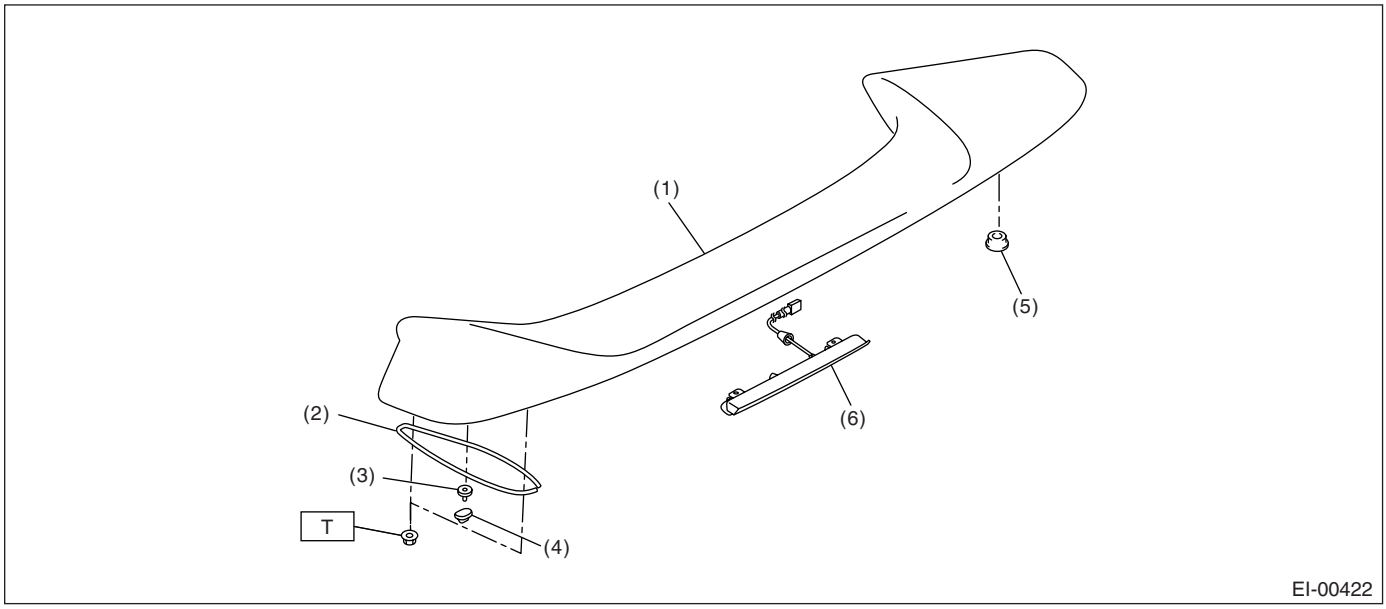

(1) Rear spoiler
(2) Protector
(3) Clip
(4) Grommet
(5) Seal (RH)
(6) High mount stop lamp

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.46)

10.SIDE SILL SPOILER

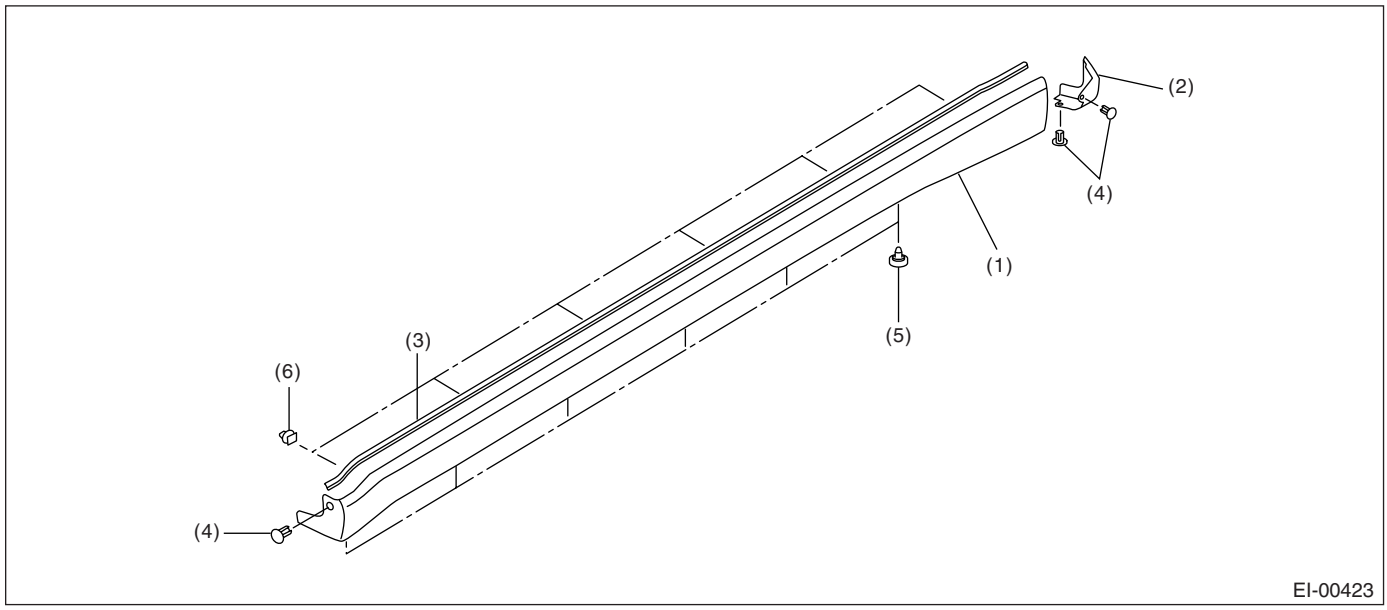

(1) Side sill spoiler
(2) End cover
(3) Protector
(4) Rivet clip
(5) Clip (Side sill spoiler)
(6) Clip

11.ROOF RAIL

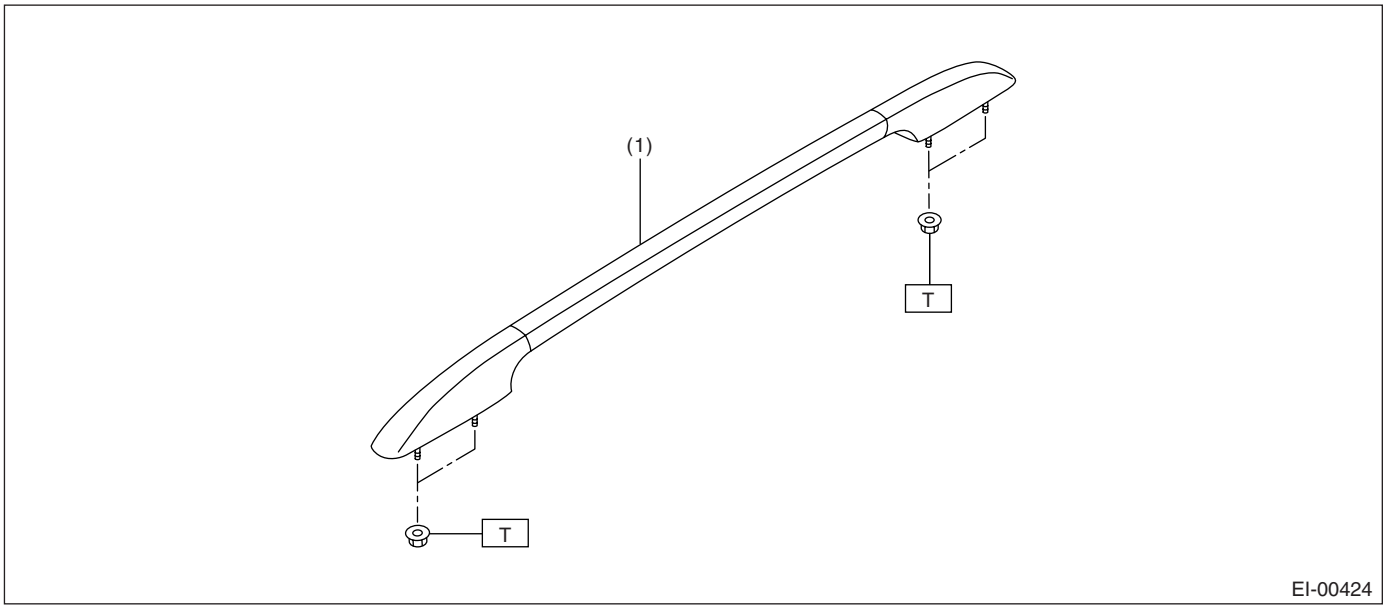

(1) Roof rail

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.46)

12.ROOF MOLDING

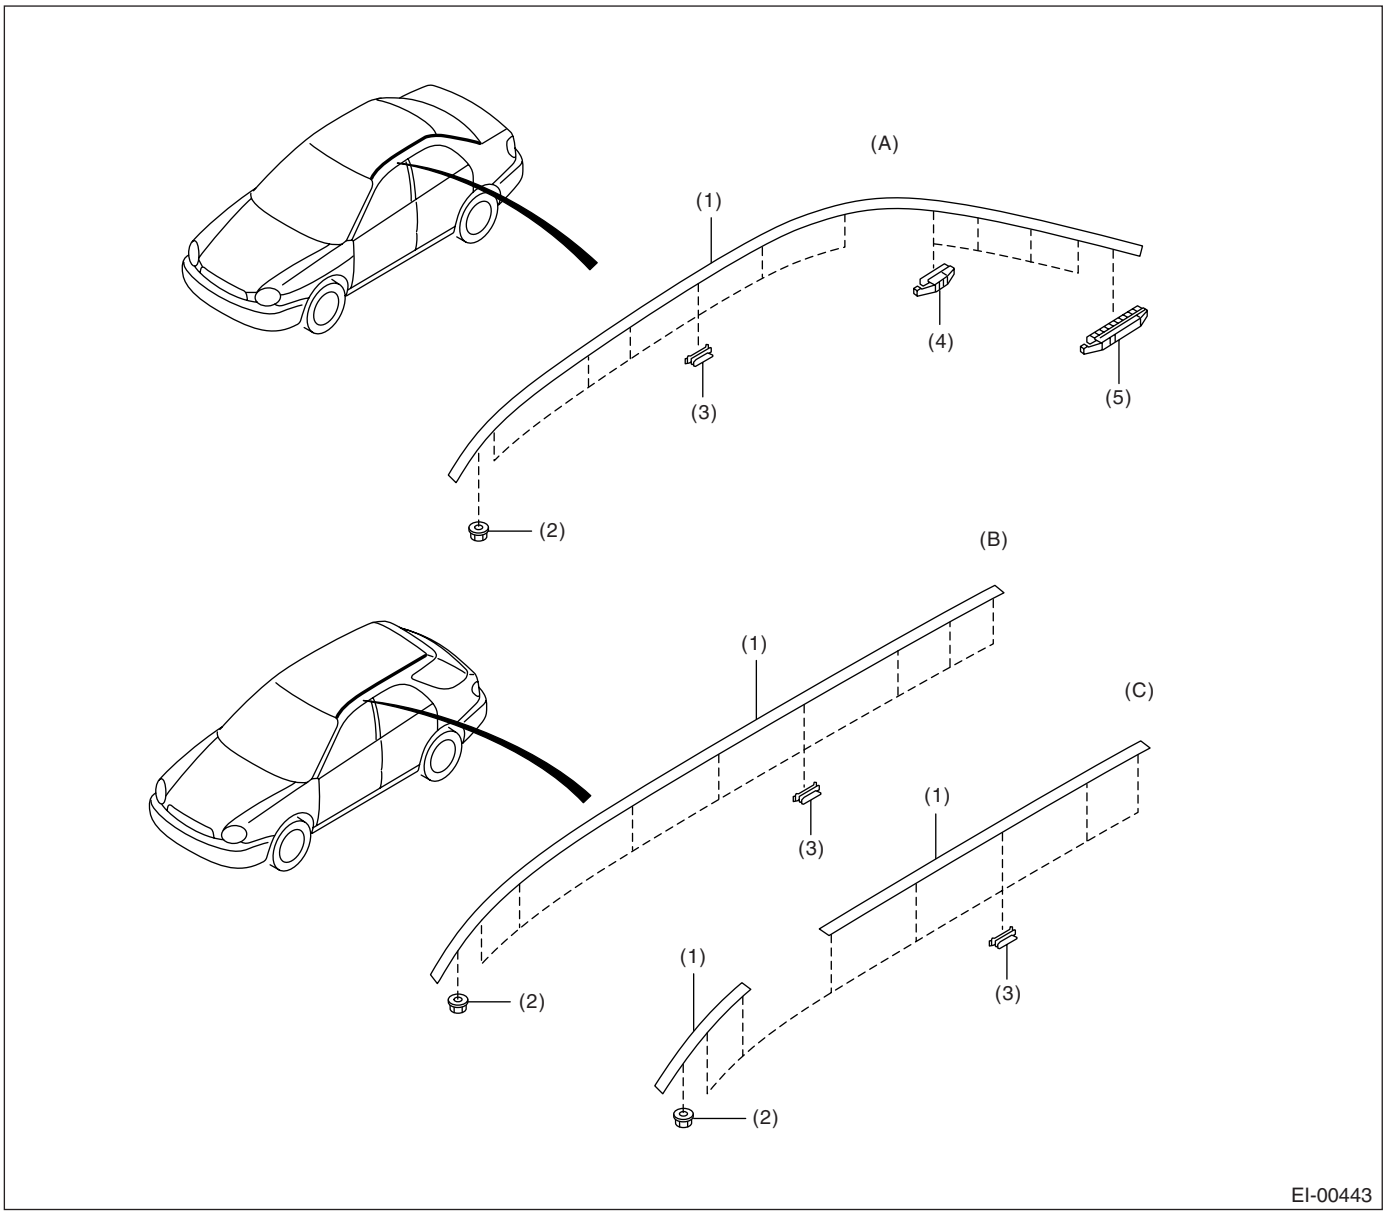

(A) For sedan model
(B) For wagon model
(C) For wagon model (with roof rail)
(1) Roof molding
(2) Clip A
(3) Clip B
(4) Clip C
(5) Clip D

13.DOOR TRIM

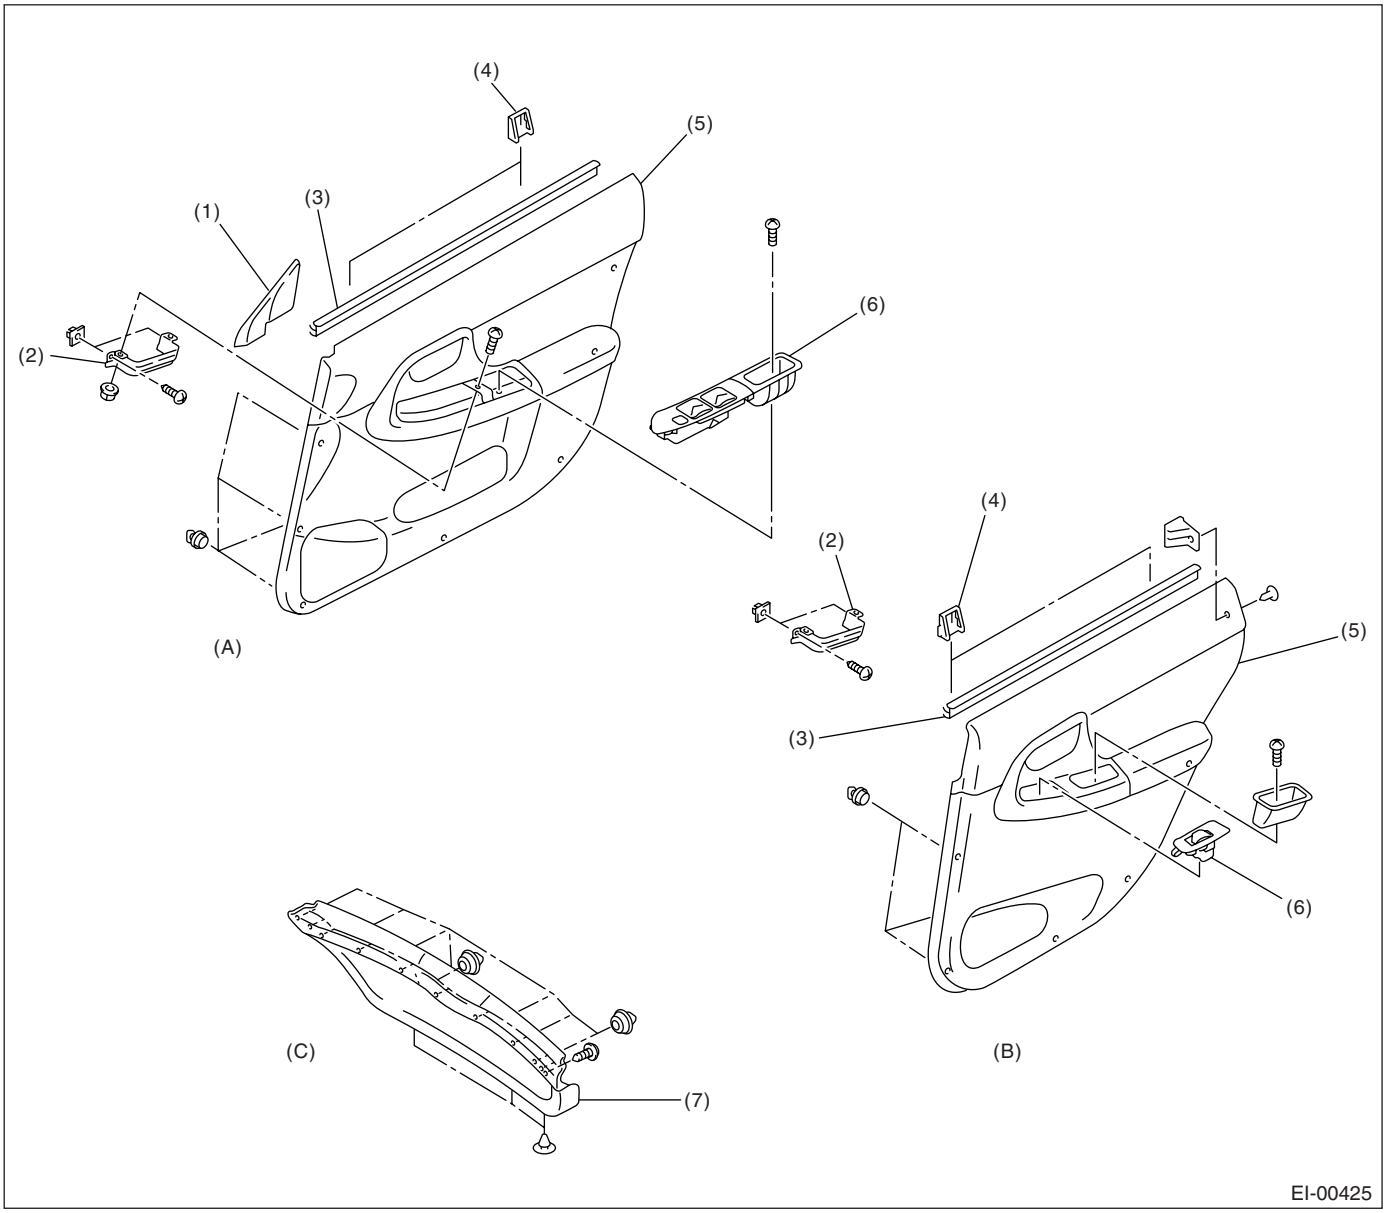

(A) Front door trim
(B) Rear door trim
(C) Rear gate trim

(1) Gusset cover
(2) Bracket
(3) Weather strip upper
(4) Clip
(5) Trim panel
(6) Power window switch cover
(7) Lower trim

14.CONSOLE BOX

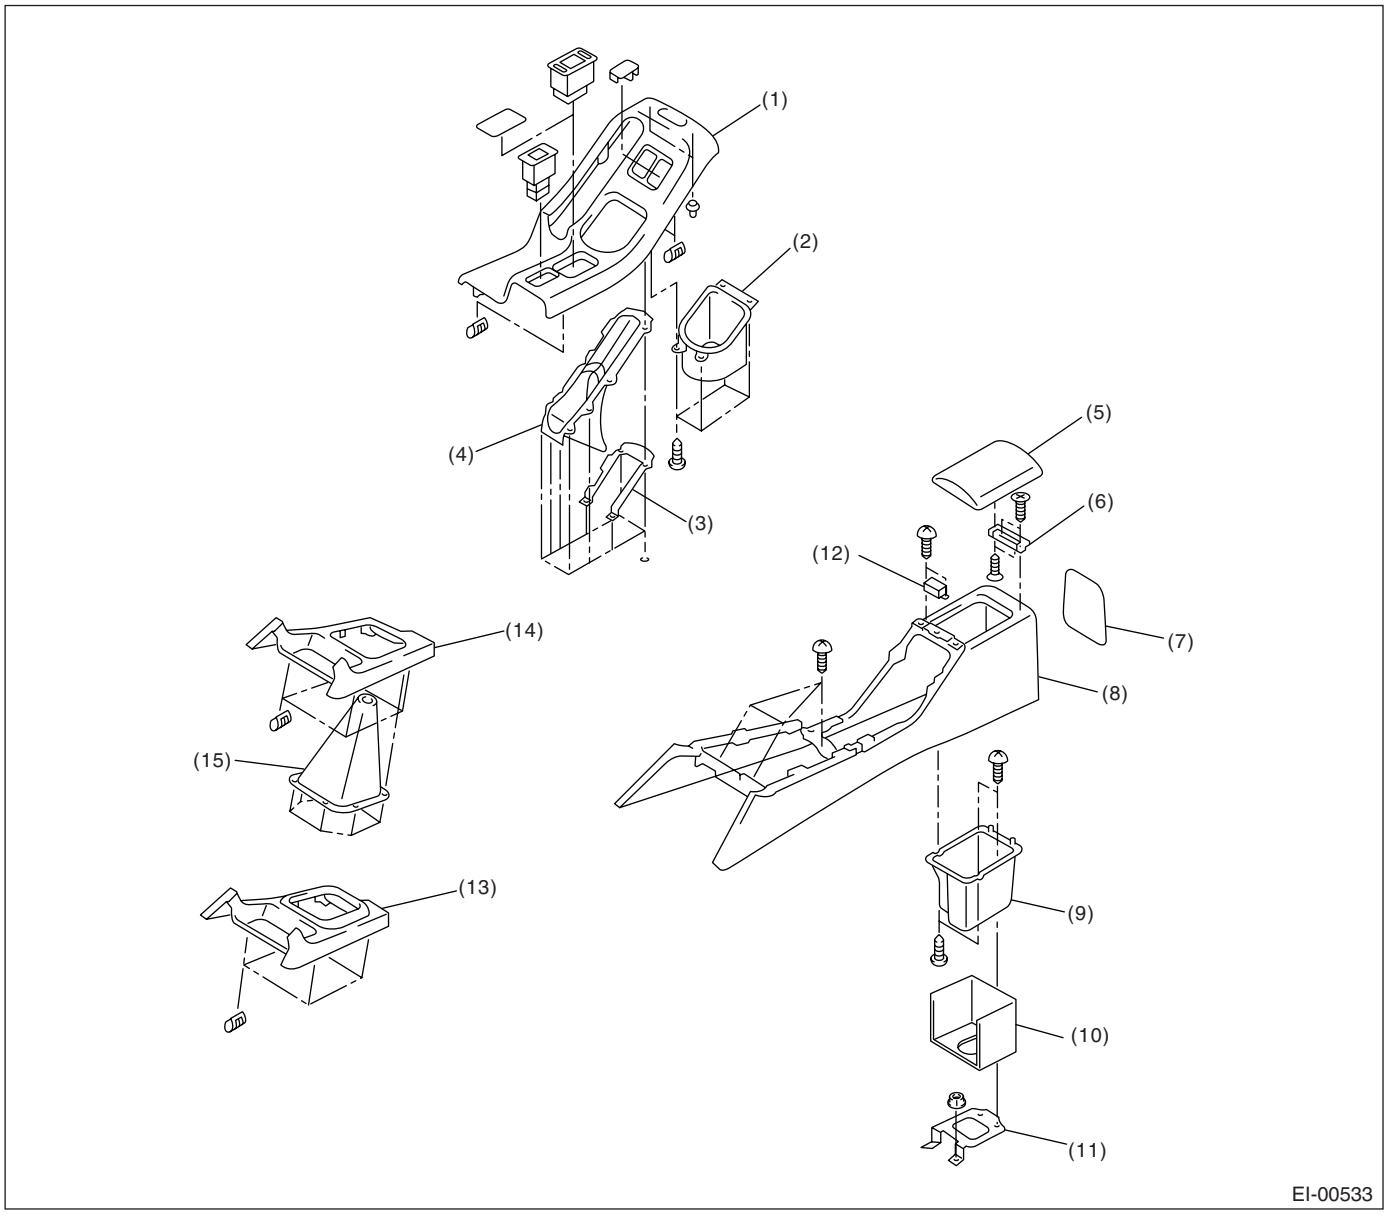

(1)	Console cover	(6)	Lid hinge	(11)	Lower bracket
(2)	Cup holder	(7)	Rear lid	(12)	Lock
(3)	Bracket	(8)	Console box	(13)	Front cover (AT model)
(4)	Strip	(9)	Console pocket	(14)	Front cover (MT model)
(5)	Upper lid	(10)	Upper bracket	(15)	Boot

15.INSTRUMENT PANEL

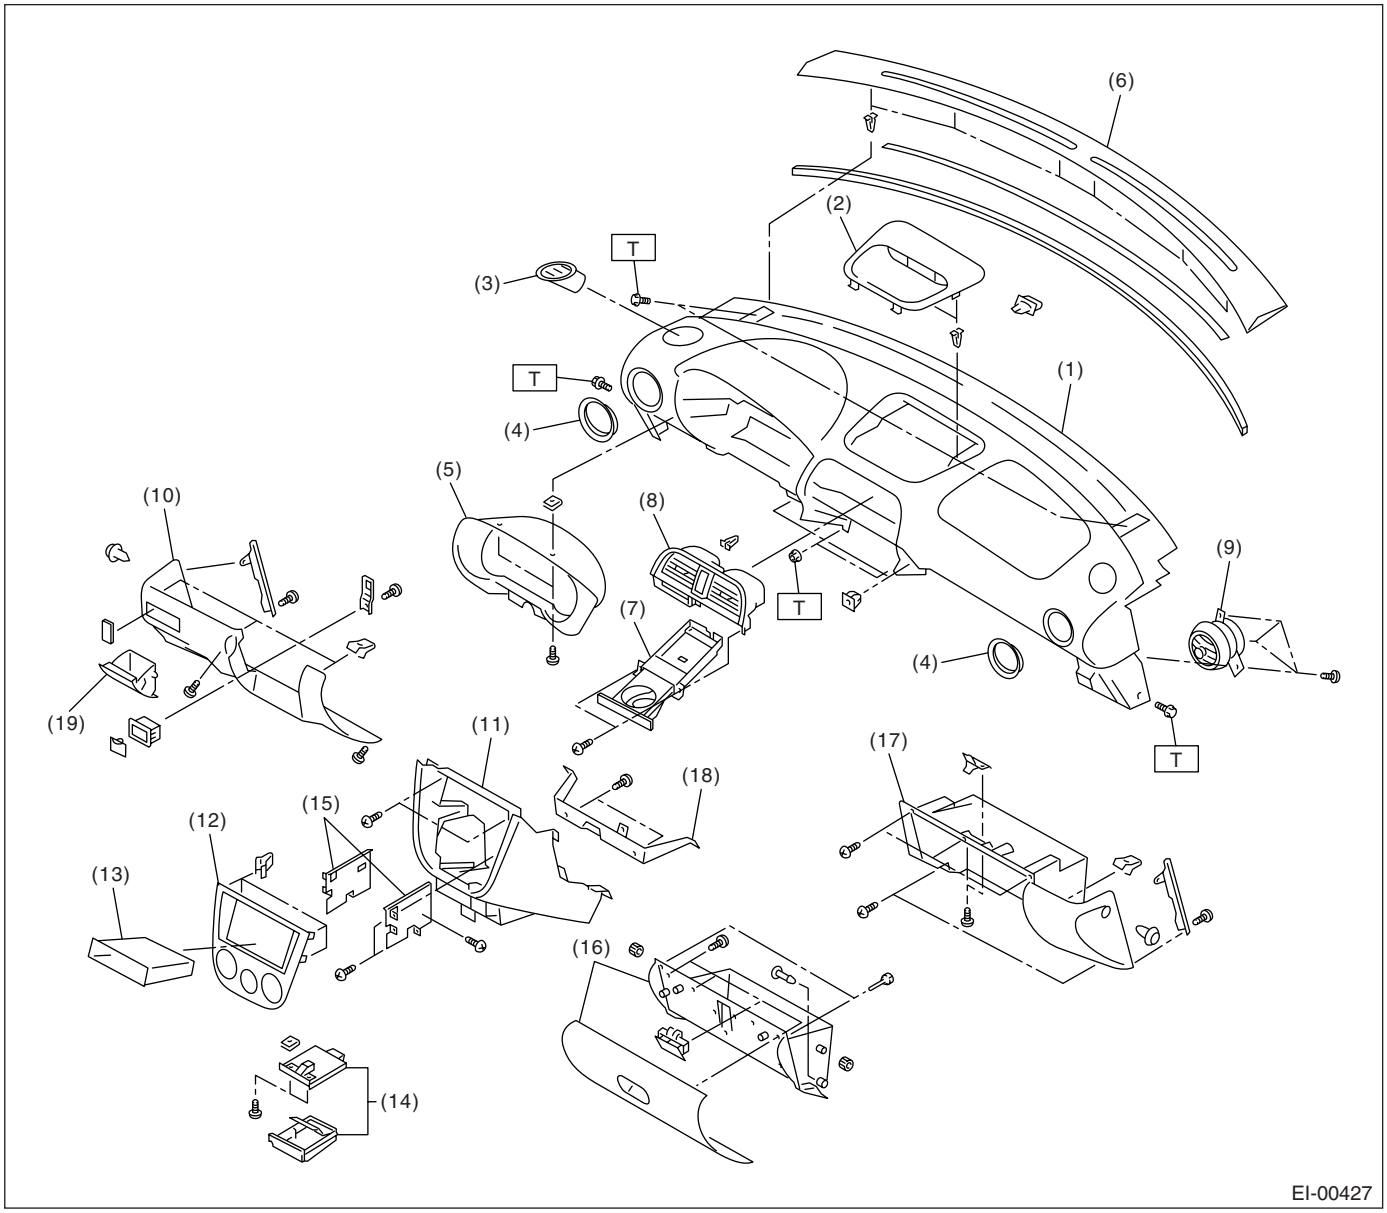

(1) Pad & frame
(2) Center upper panel
(3) Air vent grille (defroster)
(4) Grille cover
(5) Meter visor
(6) Defroster grille
(7) Cup holder
(8) Air vent grille (center)
(9) Air vent grille (side)
(10) Instrument panel lower cover
(11) Console cover
(12) Center panel
(13) Center pocket
(14) Ash tray
(15) Audio bracket
(16) Glove box lid
(17) Glove box panel
(18) Console reinforcement
(19) Coin box

Tightening torque: N·m (kgf-m, ft-lb)
T: 7 (0.71, 5.2)

16.INNER TRIM (SEDAN MODEL)

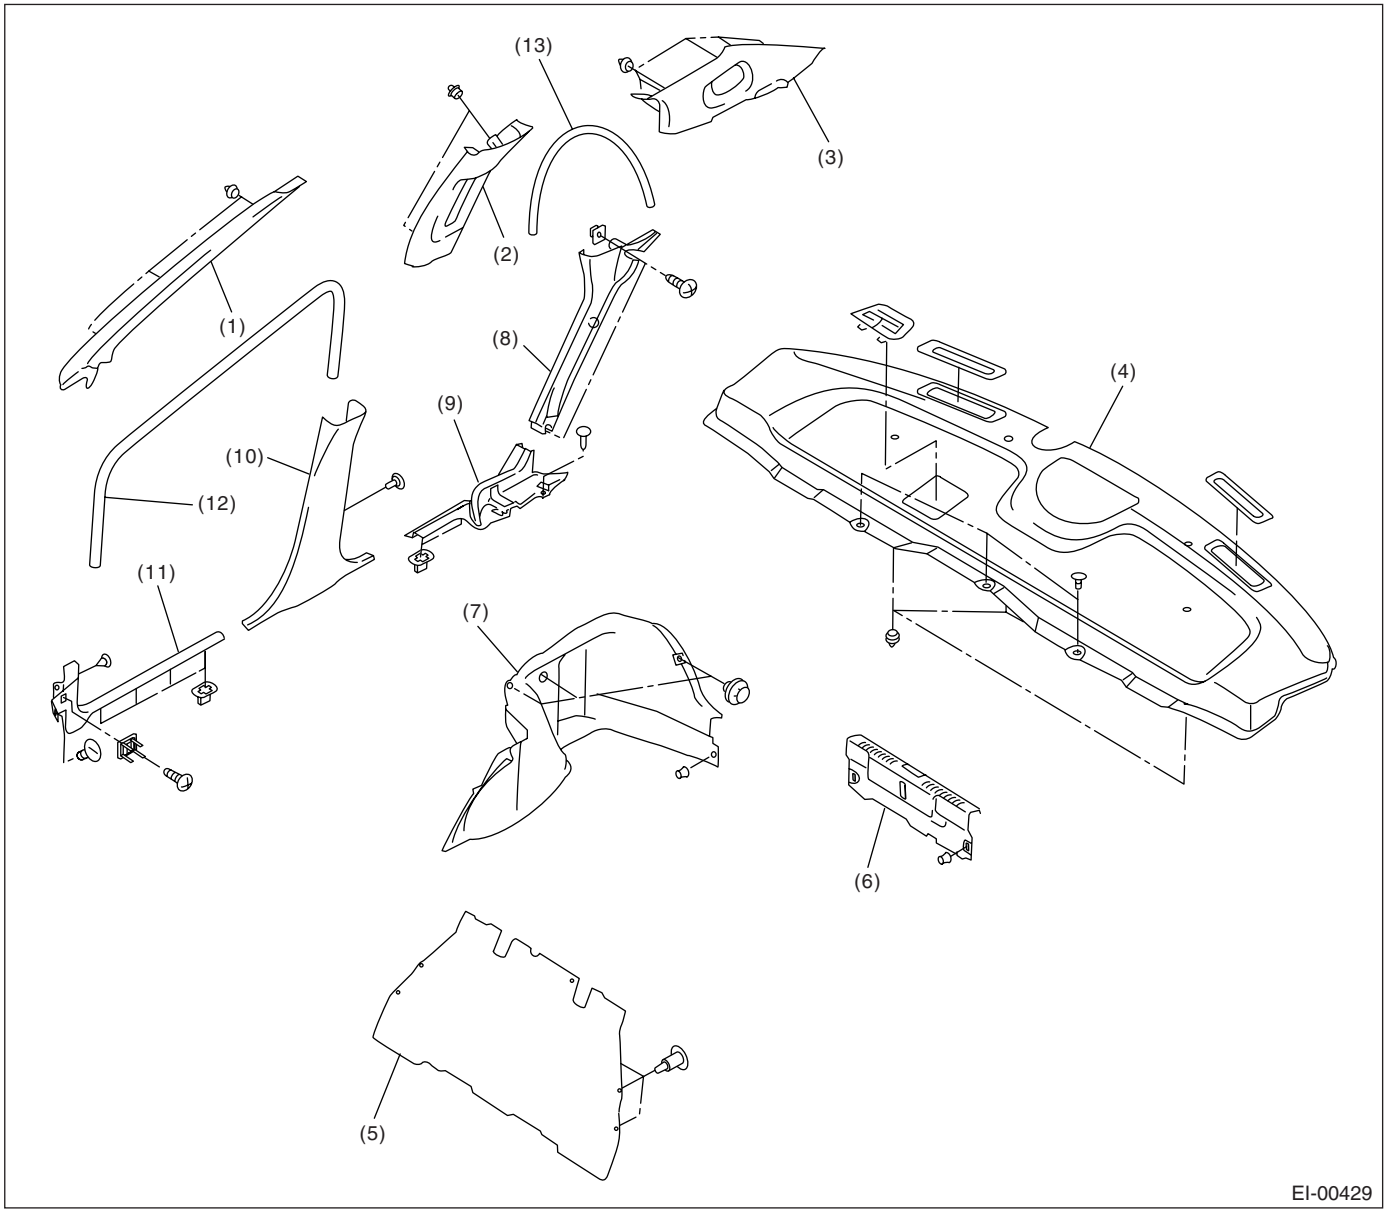

(1) Front pillar upper trim
(2) Center pillar upper trim
(3) Rear pillar upper trim
(4) Rear shelf trim
(5) Rear bulk trim
(6) Trunk rear trim
(7) Trunk side trim
(8) Rear pillar lower trim
(9) Side sill rear cover
(10) Center pillar lower trim
(11) Side sill front cover
(12) Front garnish
(13) Rear garnish

17.INNER TRIM (WAGON MODEL)

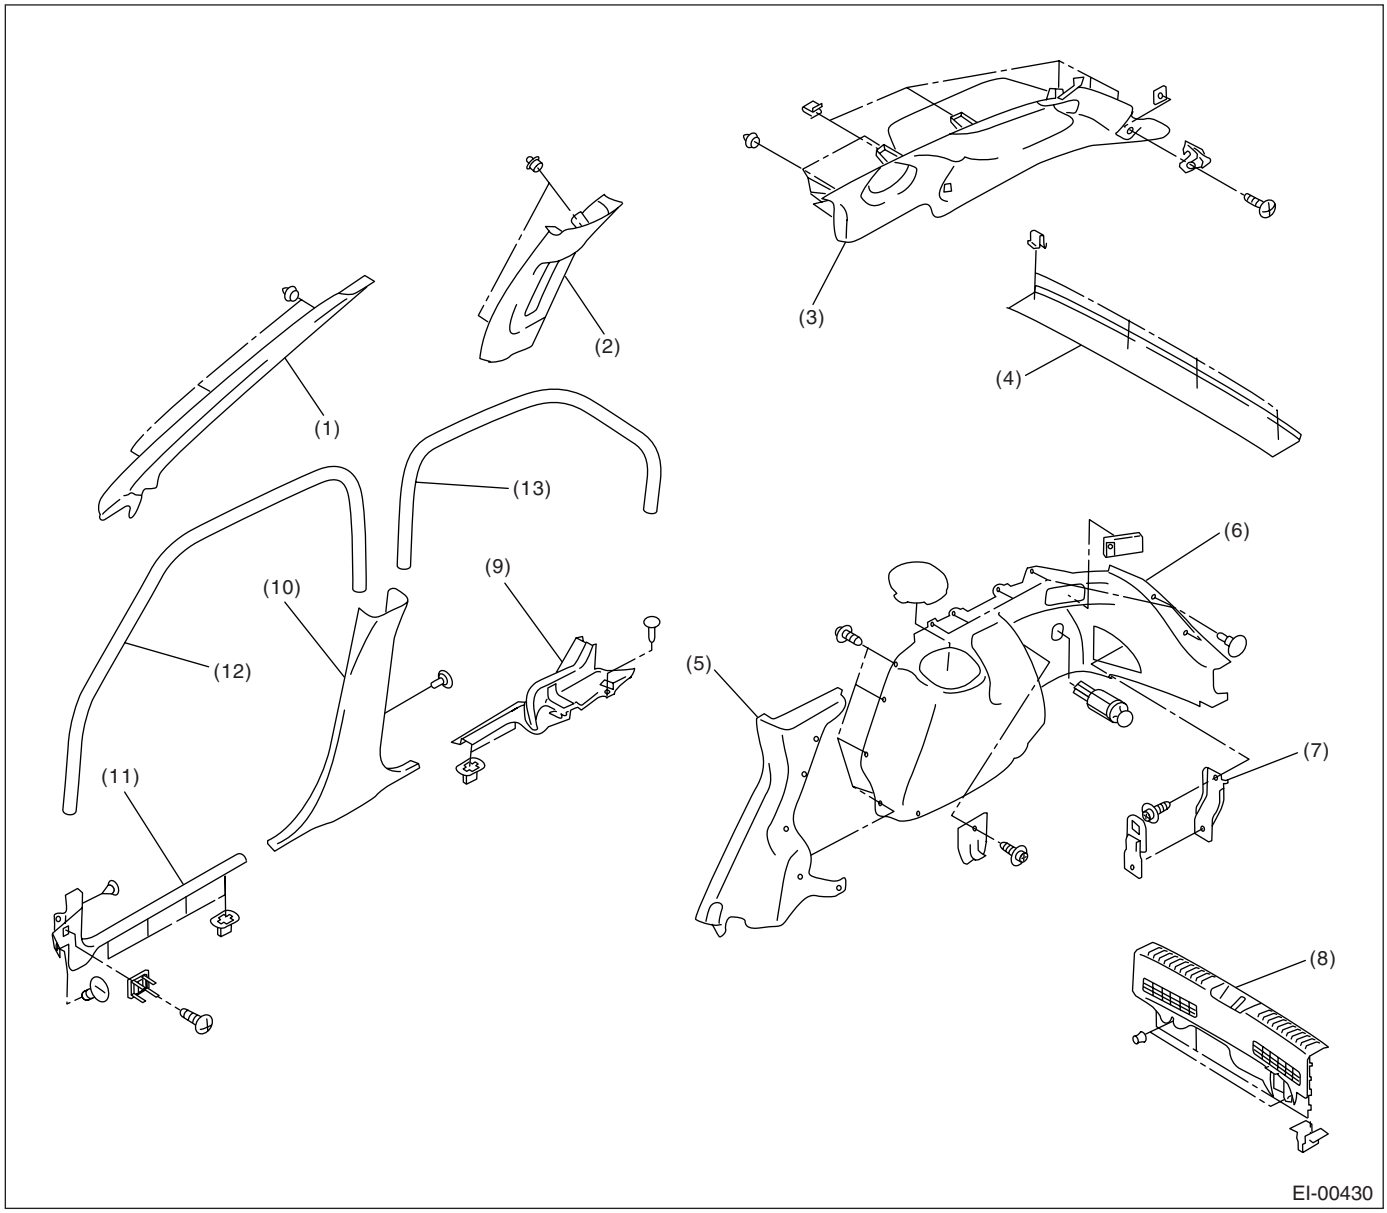

(1) Front pillar upper trim
(2) Center pillar upper trim
(3) Rear pillar upper trim
(4) Rear rail trim
(5) Rear pillar lower trim
(6) Rear quarter lower trim
(7) Hook
(8) Rear skirt trim
(9) Side sill rear cover
(10) Center pillar lower trim
(11) Side sill front cover
(12) Front garnish
(13) Rear garnish

18.ROOF TRIM (SEDAN MODEL)

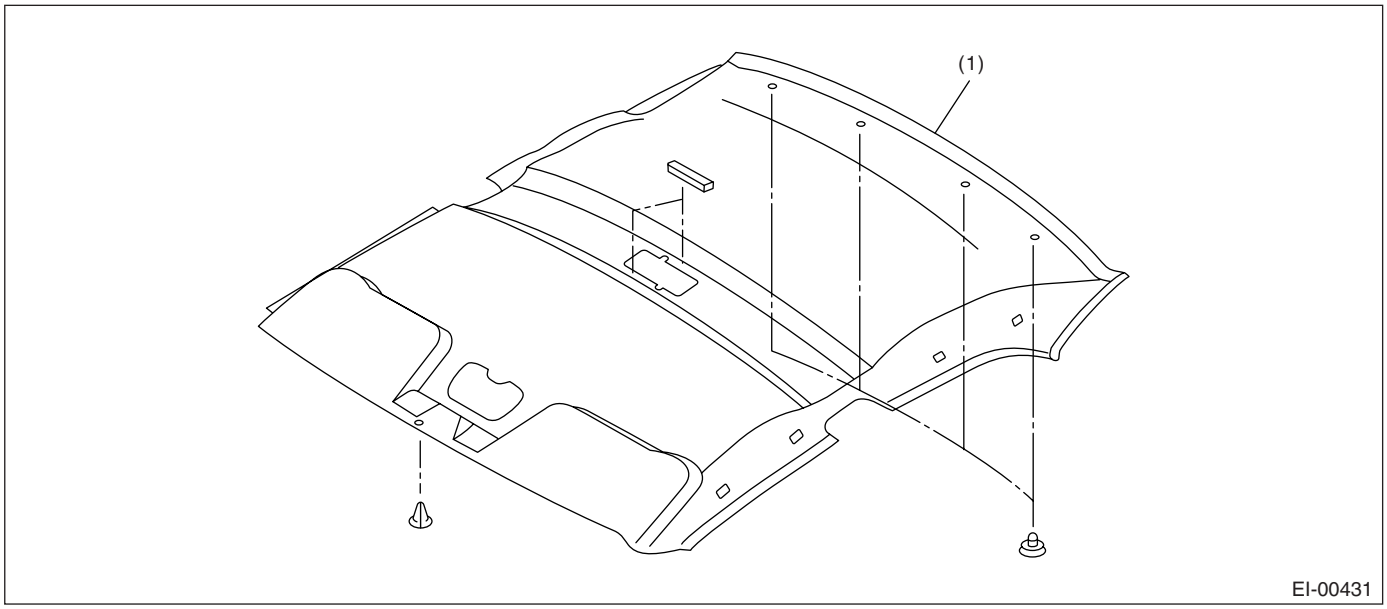

(1) Roof trim

19.ROOF TRIM (WAGON MODEL)

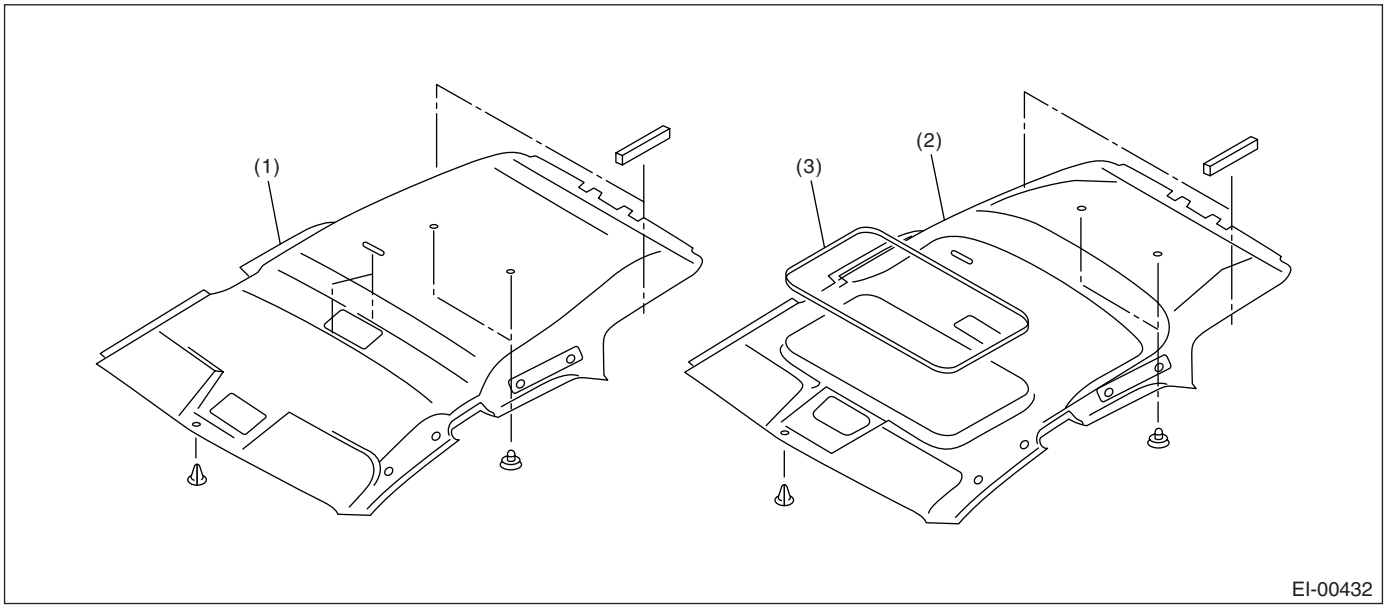

(1) Roof trim (2) Roof trim (Model with sun roof) (3) Sun roof garnish

20.LUGGAGE FLOOR MAT

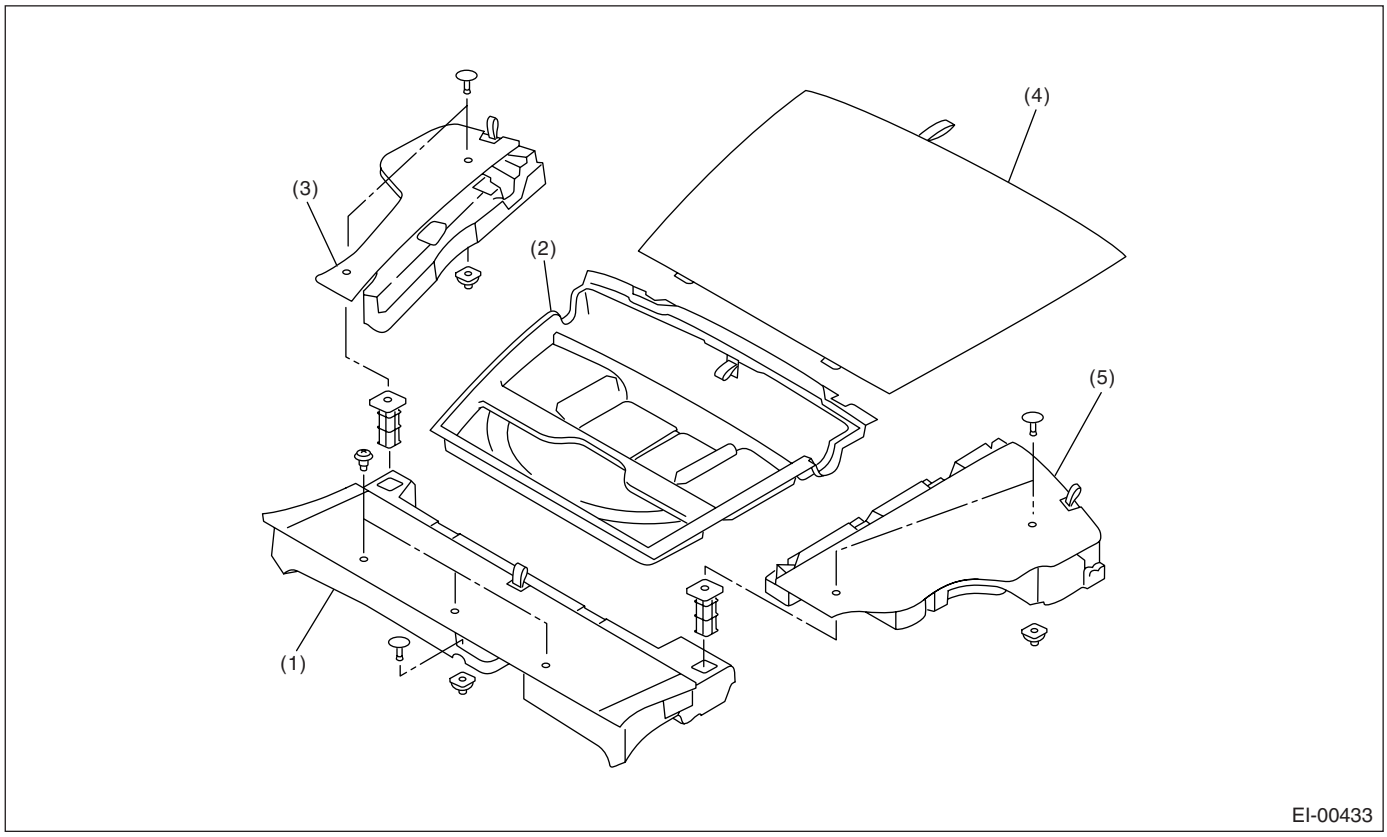

(1) Front floor mat
(2) Floor box
(3) Side floor mat (RH)
(4) Center floor mat
(5) Side floor mat (LH)

21.HEAT SHIELD COVER

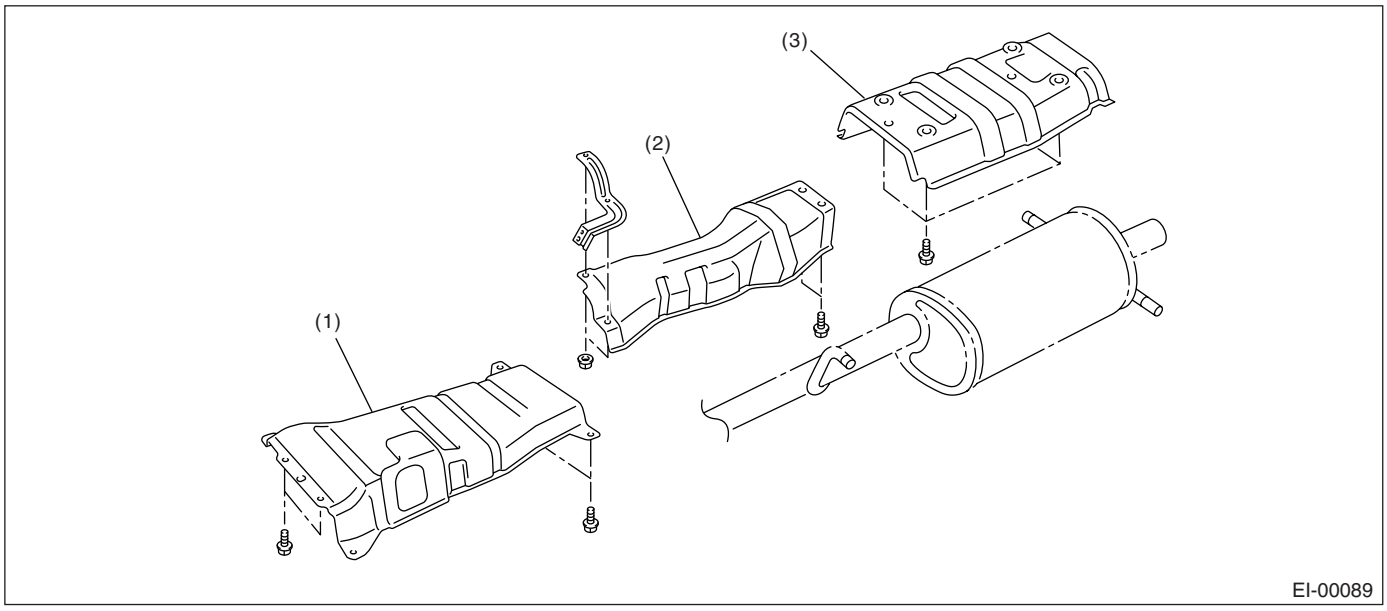

(1) Front heat shield cover
(2) Center heat shield cover
(3) Rear heat shield cover

22.INNER ACCESSORIES

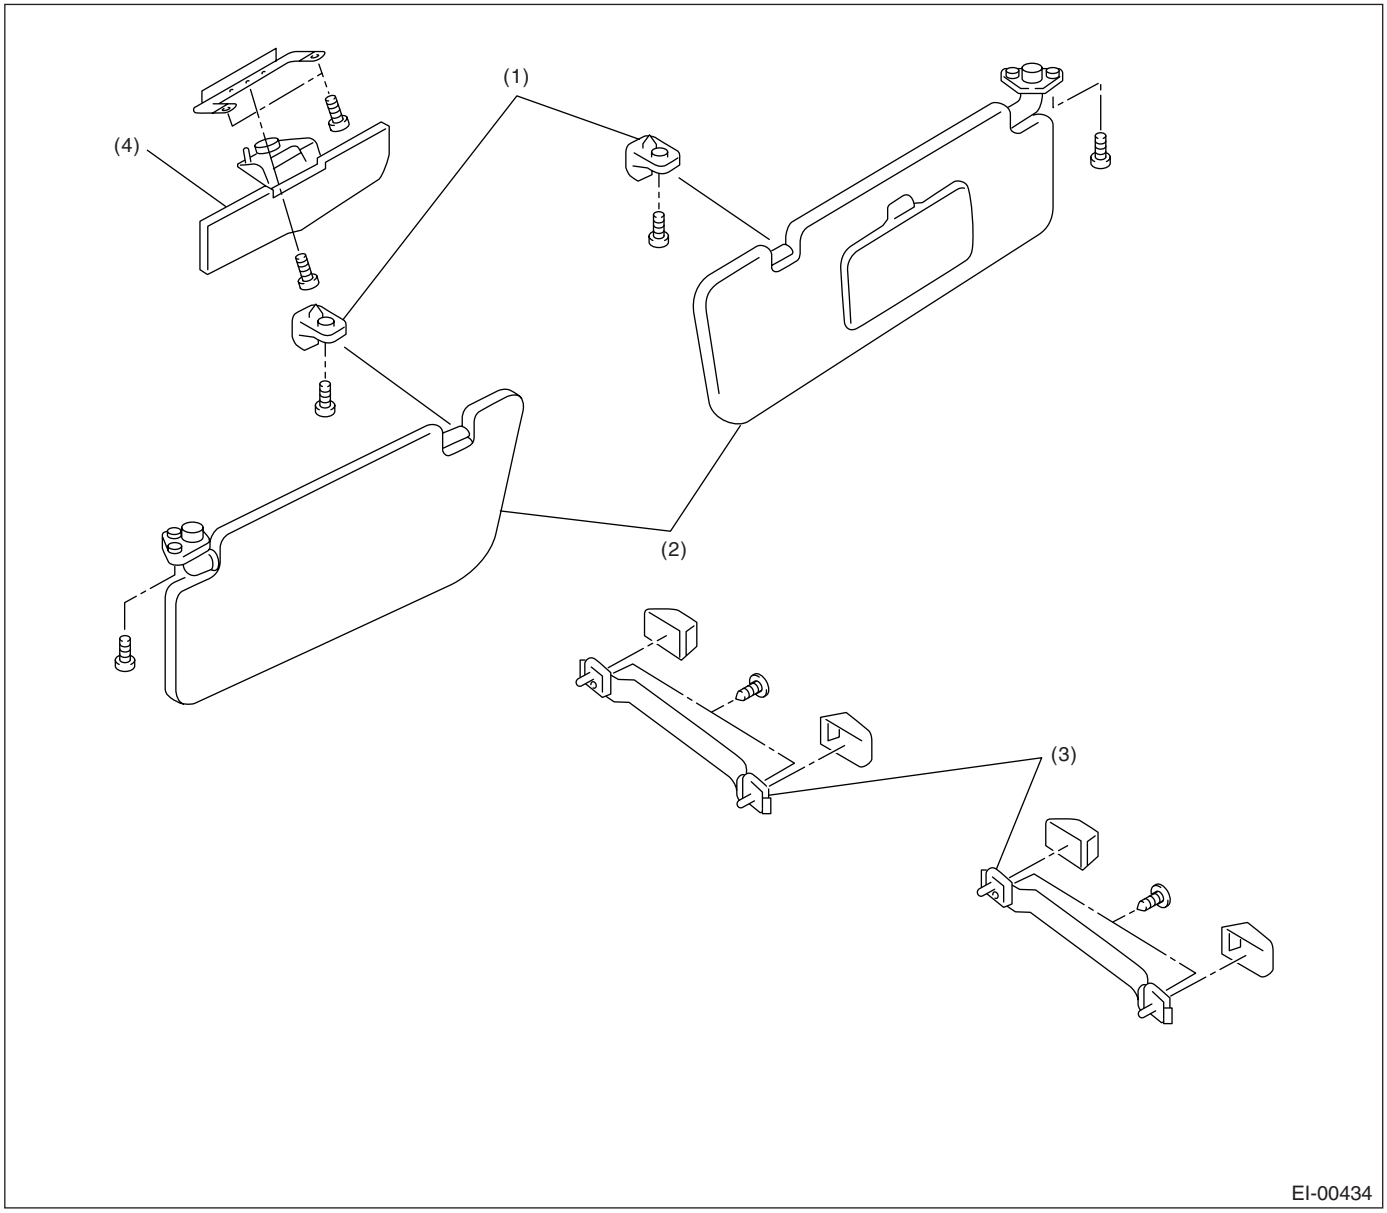

(1) Hook
(2) Sun visor
(3) Assist grip
(4) Center visor

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removal of trim.
Clip clamp pliers	Used for removal of various clips and clamps.

2. Front Grille

A: REMOVAL

1) Open the front hood.
2) Remove the four clips (A).

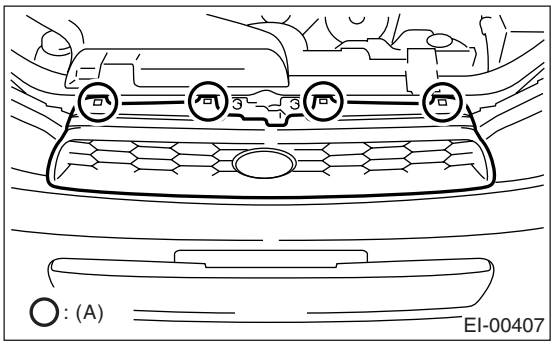

3) Remove the right and left hooks on the lower side.

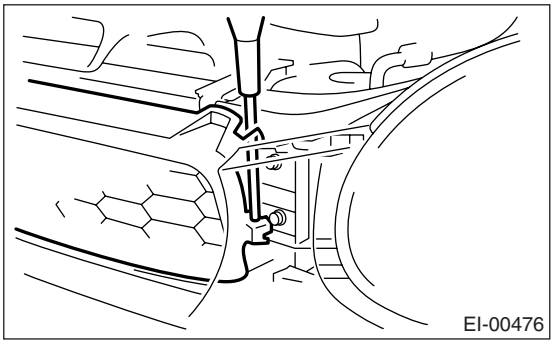

B: INSTALLATION

Install in the reverse order of removal.

3. Hood Grille

A: REMOVAL

1) Remove the hood insulator.
2) Remove the seven bolts and clip (A) to remove the hood duct.

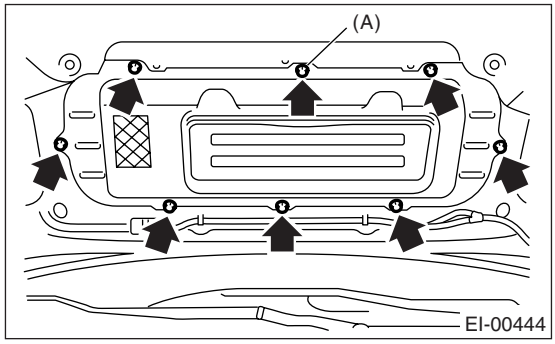

3) Loosen the six nuts (B), remove the four clips (A), and then remove the hood grille.

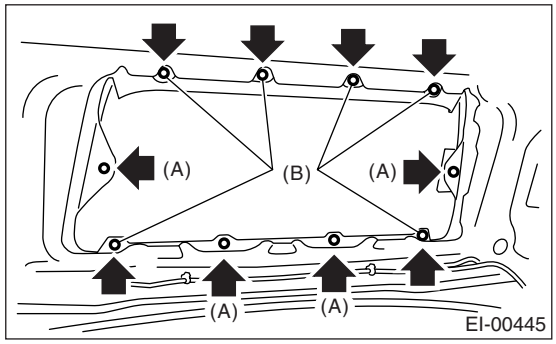

B: INSTALLATION

1) Replace the four clips with new ones.

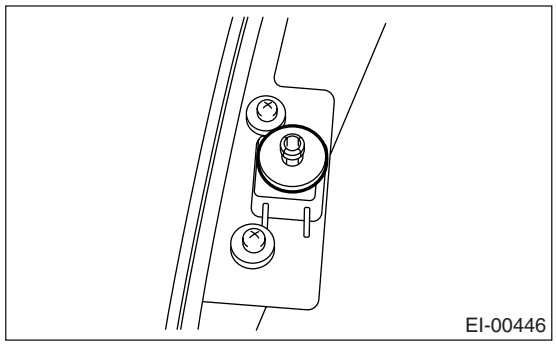

2) Engage the four clips of hood grille to front hood panel.

CAUTION:
Make sure that the anchor portion of each clip is firmly engaged.

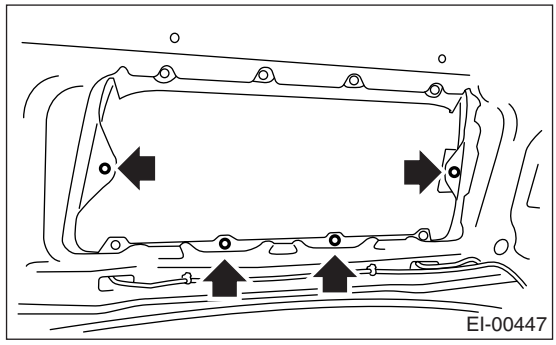

3) Install the five nuts.

Tightening torque:
4.5 N·m (0.46 kgf-m, 3.32 ft-lb)

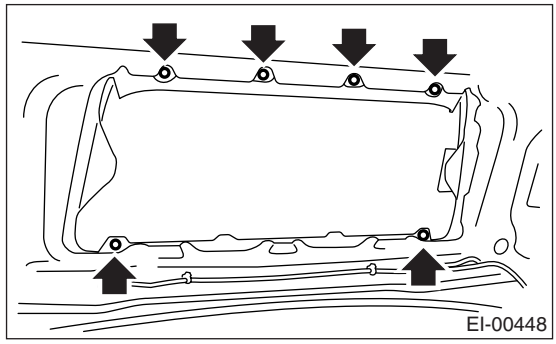

4) Catch the two hooks (A) of hood duct to hood holes.

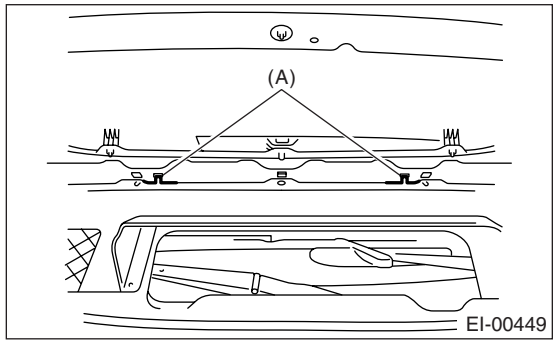

5) Install the hood duct with clip (A) and seven bolts.

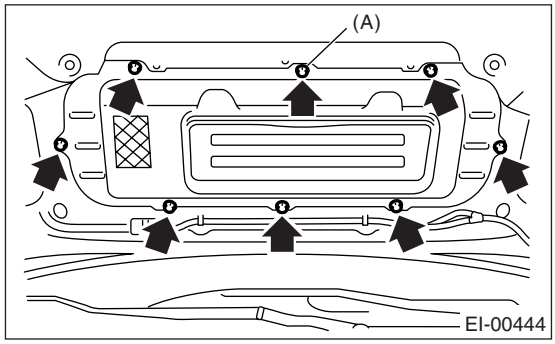

6) Install the hood insulator with new clips.

C: INSPECTION

Make sure that the clip is firmly engaged.
Make sure that there is no abnormal gap at whole periphery of hood grille.
Make sure that there is no damage on hood grille.

4. Front Under Cover

A: REMOVAL

1) Lift-up the vehicle.
2) Loosen the bolts and clips to remove the under cover.

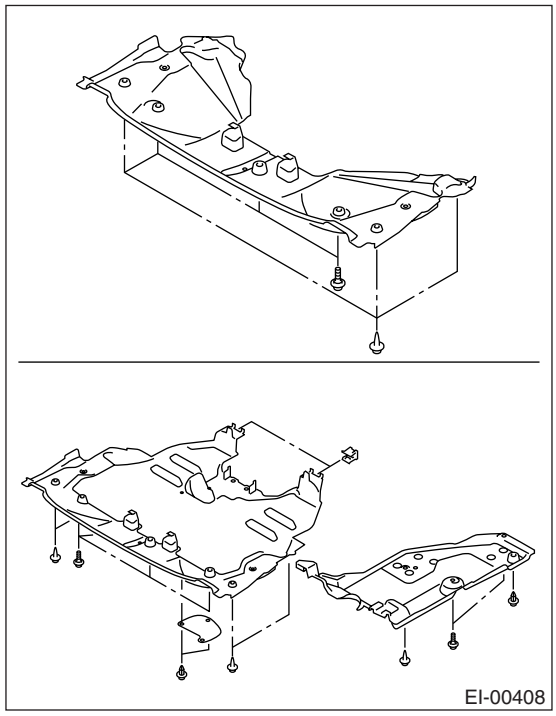

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
14 N·m (1.42 kgf-m, 10.3 ft-lb)

5. Front Bumper

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front grille. <Ref. to EI-18, REMOVAL, Front Grille.>
3) Remove the six clips on the upper part of bumper.

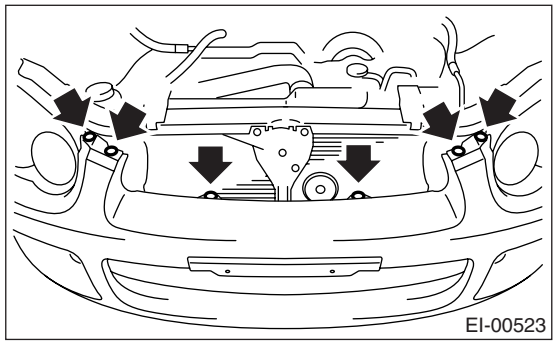

4) Turn over the mud guard, and then remove the clips (A) and (B), which secure the front bumper to fender.

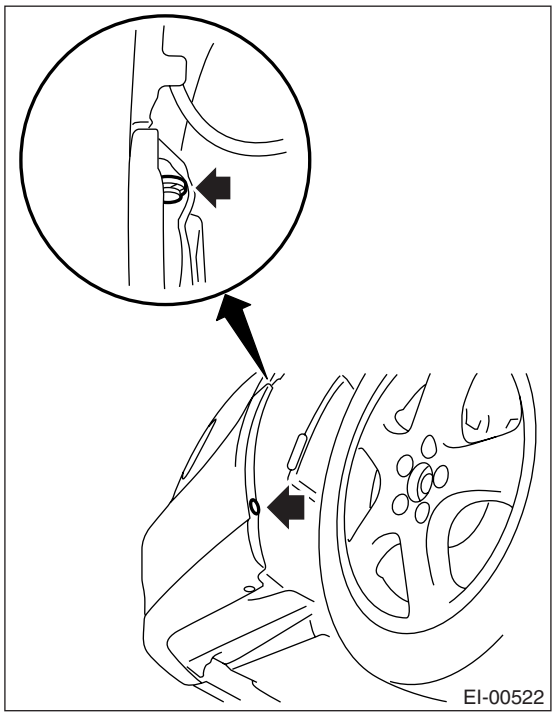

5) Remove the two clips (A), turn over the mud guard, and then remove the clip (B). (Same procedure on the right side.)

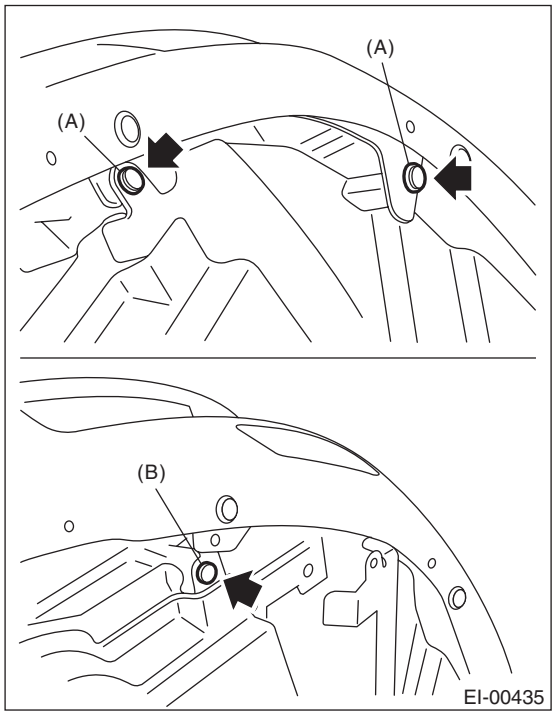

6) Remove the four clips in the center part of bumper.

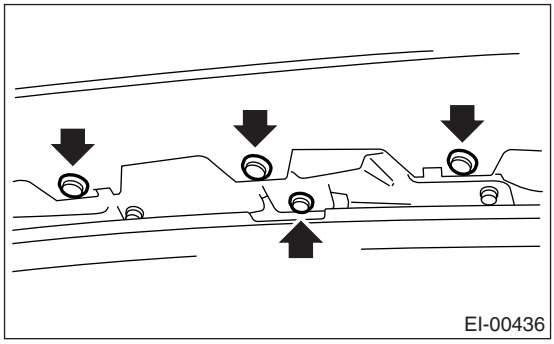

7) Remove the fog light. <Ref. to LI-19, REMOVAL, Front Fog Light Assembly.>
8) Remove the bumper from body.
9) Remove the energy absorber foam.

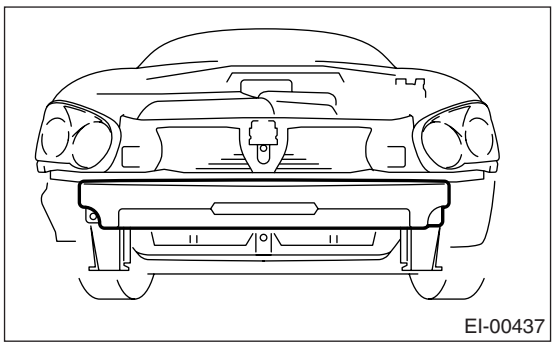

10) Loosen the bolt and nut, and then remove the bumper beam from body.

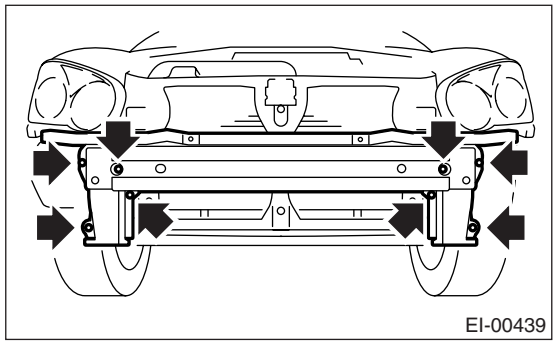

B: INSTALLATION

1) Install in the reverse order of removal.
2) Secure the slider (A) to guide plate (B).

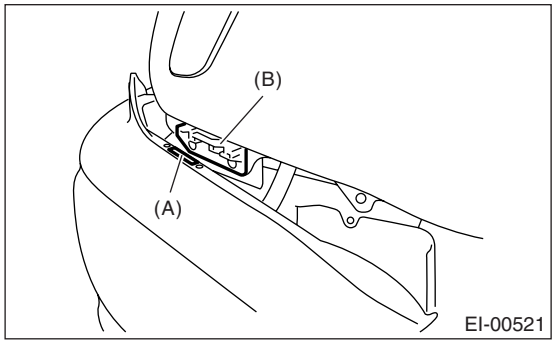

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to EI-4, FRONT BUMPER, COMPONENT, General Description.>

C: REPAIR

1. COATING METHOD FOR PP BUMPER

Process No.	Process name	Job contents	
1	Bumper mounting	Set the bumper on paint worktable if required. Use paint worktable conforming to inner shape of bumper when possible.	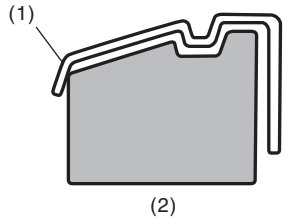 EI-00234 (1) Bumper (2) Set bumper section
2	Masking	Mask specified part (black base) with masking tape. Use masking tape for PP (example, Nichiban No. 533, etc.).	
3	Degreasing, cleaning	Clean all parts to be painted with white gasoline, normal alcohol, etc. to remove dirt, oil, fat, etc.	
4	Primer paint	Apply primer one to all parts to be painted, using air gun. Use primer (clear).	
5	Drying	Dry at normal temperature [10 to 15 min. at 20°C (68°F)]. In half-dried condition, PP primer paint is dissolved by solvent, e.g. thinner, etc. Therefore, if dust or dirt must be removed, use ordinary alcohol, etc.	
6	Top coat paint (I)	Solid color	Metallic color
		Use section (block) paint for top coat. • Paint in use (for each color): Solid paint Hardener PB Thinner T-301 • Mixing ratio: Main agent vs. hardener = 4:1 • Viscosity: 10 — 13 sec/20°C (68°F) • Film thickness: 35 — 45μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm^2, 36 — 50 psi)	Use section (block) paint for top coat. • Paint in use (for each color): Metallic paint Hardener PB Thinner T-306 • Mixing ratio: Main agent vs. hardener = 10:1 • Viscosity: 10 — 13 sec/20°C (68°F) • Film thickness: 15 — 20μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm^2, 36 — 50 psi)
7	Drying	Not required.	Dry at normal temperature [10 min. or more at 20°C (68°F)]. In half-dried condition, avoid dust, dirt.
8	Top coat paint (II)	Not required.	Apply a clear coat to parts with top coat paint (I), three times, at 5 — 7 minutes intervals. • Paint in use: Metallic paint Hardener PB Thinner T-301 • Mixing ratio: Clear vs. hardener = 6:1 • Viscosity: 14 — 16 sec/20°C (68°F) • Film thickness: 25 — 30μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm^2, 36 — 50 psi)
9	Drying	60°C (140°F), 60 min. or 80°C (176°F), 30 min. If higher than 80°C (176°F), PP may be deformed. Keep maximum temperature of 80°C (176°F).	
10	Inspection	Paint check.	
11	Masking removal	Remove the masking in process No. 2.	

2. REPAIR INSTRUCTIONS FOR COLORED PP BUMPER

NOTE:
All PP bumpers are provided with a grained surface, and if the surface is damaged, it cannot normally be restored to its former condition. Damage limited to shallow scratches that cause only a change in the lustre of the base material or coating, can be almost fully restored. Before repairing a damaged area, explain this point to the customer and get an understanding about the matter. Repair methods are outlined below, based on a classification of the extent of damage.

1) Minor damage causing only a change in the lustre of the bumper due to a light touch
Almost restorable.

<table>
<tr><th>Process No.</th><th>Process name</th><th colspan="2">Job contents</th></tr>
<tr><td>1</td><td>Cleaning</td><td colspan="2">Clean the area to be repaired using water.</td></tr>
<tr><td>2</td><td>Sanding</td><td colspan="2">Grind the repairing area with #500 sand paper in a “feathering” motion.</td></tr>
<tr><td rowspan="3">3</td><td rowspan="3">Finish</td><td>Resin section</td><td>Coated section</td></tr>
<tr><td>Repeatedly apply wax to the affected area using a soft cloth (such as flannel). Recommended wax: NITTO KASEI Soft 99 TIRE WAX BLACK, or equivalent.</td><td rowspan="2">Perform either the same operation as for the resin section or process No. 18 and subsequent operations in the “3)” section, depending on the degree and nature of damage.</td></tr>
<tr><td>Polish the waxed area with a clean cloth after 5 to 10 minutes.</td></tr>
</table>

2) Deep damage caused by scratching fences, etc.
A dent cannot be repaired but a whitened or swelled part can be removed.

<table>
<tr><th>Process No.</th><th>Process name</th><th colspan="2">Job contents</th></tr>
<tr><td>1</td><td>Cleaning</td><td colspan="2">Clean the damaged area with water.</td></tr>
<tr><td>2</td><td>Removal of damaged area</td><td colspan="2">Cut off protruding area, if any, due to collision, using a putty knife.</td></tr>
<tr><td>3</td><td>Sanding</td><td colspan="2">Grind the affected area with #100 to #500 sand paper.</td></tr>
<tr><td rowspan="2">4</td><td rowspan="2">Finish</td><td>Resin section</td><td>Coated section</td></tr>
<tr><td>Same as Process No. 3 in the “1)” section.</td><td>Perform Process No. 12 and subsequent operations in the “3)” section.</td></tr>
</table>

3) Deep damage such as a break or hole that requires filling
Much of the peripheral grained surface must be sacrificed for repair, and the degree of restoration is not really worth the expense. (The surface, however, will become almost flush with adjacent areas.)
Recommended repair kit: PP Part Repair Kit (NRM)

Process No.	Process name	Job contents	
1	Bumper removal	Remove the bumper as required.	
2	Part removal	Remove the parts built into bumper as required.	
3	Bumper placement	Place the bumper on a paint worktable as required. It is recommended that contour of worktable accommodate internal shape of bumper.	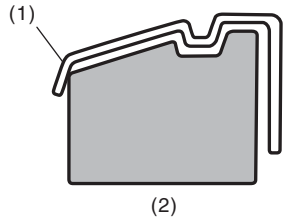 EI-00234 (1) Bumper (2) Set bumper section
4	Surface preparation	Remove dust, oil, etc. from areas to be repaired and surrounding areas, using a suitable solvent (NRM No. 900 Precleno, white gasoline, or alcohol).	
5	Cutting	If nature of damage are cracks or holes, cut a guide slit of 20 to 30 mm (0.79 to 1.18 in) in length along the crack or hole up to the bumper's base surface. Then, bevel or “vee-out” the affected area using a knife or grinder.	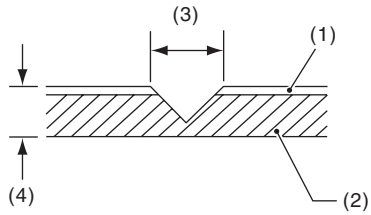 EI-00235 (1) Paint surface (2) PP base surface (3) 20 — 30 mm (0.79 — 1.18 in) (4) 3 mm (0.12 in)
6	Sanding (I)	Grind beveled surface with sand paper (#40 to #60) to smooth finish.	
7	Cleaning	Clean the sanded surface with the same solvent as used in Process No. 4.	
8	Temporary welding	Grind the side just opposite the beveled area with sand paper (#40 to #60) and clean using a solvent. Temporarily spot-weld the side, using a PP welding rod and heater gun.	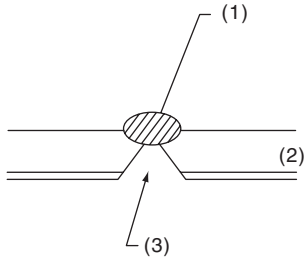 EI-00236 (1) Welded spot (Use heater gun and PP welding rod) (2) PP base surface (3) Beveled section NOTE: • Do not melt the welding rod until it flows out. This results in reduced strength. • Leave the welded spot unattended until it cools completely.

Process No.	Process name	Job contents
9	Welding	Using a heater gun and PP welding rod, weld the beveled spot while melting the rod and damaged area. 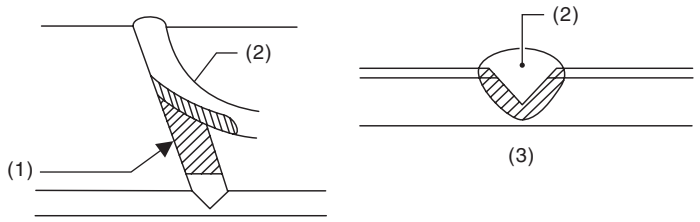 EI-00237 (1) Melt hatched area (2) Welding rod (3) Section NOTE: • Melt the sections indicated by hatched area. • Do not melt the welding rod until it flows out, in order to provide strength. • Always keep the heater gun 1 to 2 cm (0.4 to 0.8 in) away from the welding spot. • Leave the welded spot unattended until it cools completely.
10	Sanding (II)	Remove excess part of weld with a putty knife. If a drill or disc wheel is used instead of the knife, operate it at a rate lower than 1,500 rpm and grind the excess part little by little. A higher rpm will cause the PP substrate to melt from the heat.  EI-00042 Sand the welded spot smooth with #240 sand paper.
11	Masking	Mask the black substrate section using masking tape. Recommended masking tape: Nichiban No. 533 or equivalent
12	Cleaning/ degreasing	Completely clean the entire coated area, using solvent similar to that used in Process No. 4.
13	Primer coating	Apply a coat of primer to the repaired surface and its surrounding areas. Mask these areas, if necessary. Recommended primer: Mp/ 364 PP Primer NOTE: Be sure to apply one coat of primer at a spraying pressure of 245 to 343 kPa (2.5 to 3.5 kg/cm^2, 36 to 50 psi) with a spray gun.
14	Leave unattended.	Leave the repaired area unattended at 20°C (68°F) for 10 to 15 minutes until primer is half-dry. NOTE: If dirt or dust comes in contact with the coated area, wipe it off with a cloth impregnated with alcohol. (Do not use thinner since the coated area tends to melt.)
15	Primer surfacer coating	Apply a coat of primer surfacer to the repaired area two or three times at an interval of 3 to 5 minutes. Recommended surfacer: • UPS 300 Flex Primer • No. 303 UPS 300 Exclusive hardener • NPS 725 Exclusive Reducer (thinner) • Mixing ratio: 2 : 1 (UPS 300: No. 303) • Viscosity: 12 — 14 sec/20°C (68°F) • Coated film thickness: 40 — 50μ
16	Drying	Allow the coated surface to dry for 60 minutes at 20°C (68°F) [or 30 minutes at 60°C (140°F)].
17	Sanding (III)	Sand the coated surface and its surrounding areas using #400 sand paper and water.
18	Cleaning/ degreasing	Same as Process No. 12.

Process No.	Process name	Job contents	
		Solid color	Metallic color
19	Top coat (I)	Use a “block” coating method. • Recommended paint: Suncryl (SC) No. 307 Flex Hardener SC Reducer (thinner) • Mixing ratio: 3 : 1 Suncryl (SC) vs. No. 307 Flex Hardener • Viscosity: 11 — 13 sec/20°C (68°F) • Coated film thickness: 40 — 50μ • Spraying thickness: 245 — 343 kPa (2.5 — 3.5 kg/cm^2, 36 — 50 psi)	Use a “block” coating method. • Recommended paint: Suncryl (SC) No. 307 Flex Hardener SC Reducer (thinner) • Mixing ratio: 3 : 1 Suncryl (SC) vs. No. 307 Flex Hardener • Viscosity: 11 — 13 sec/20°C (68°F) • Coated film thickness: 20 — 30μ • Spraying thickness: 245 — 343 kPa (2.5 — 3.5 kg/cm^2, 36 — 50 psi)
20	Leave unattended.	Not required.	Leave unattended at 20°C (68°F) for at least 10 minutes until the topcoated area is half-dry. NOTE: Be careful to keep dust or dirt from coming in contact with the affected area.
21	Top coat (II)	Not required.	Apply a clear coat three times at an interval of 3 to 5 minutes. • Recommended paint: SC710 Overlay Clear No. 307 Flex Hardener SC Reducer (thinner) • Mixing ratio: 3 : 1 Suncryl (SC) vs. No. 307 Flex Hardener • Viscosity: 10 — 13 sec/20°C (68°F) • Coated film thickness: 20 — 30μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm^2, 36 — 50 psi)
22	Drying	Allow the coated surface to dry at 20°C (68°F) for two hours or 60°C (140°F) for 30 minutes. NOTE: Do not allow the temperature to exceed 80°C (176°F) since this will deform the PP substrate.	
23	Inspection	Carefully check the condition of the repaired area.	
24	Masking removal	Remove the masking tape applied in Process No. 11 and 13.	
25	Parts installation	Install the parts on bumper in reverse order of removal.	
26	Bumper installation	Install the bumper.	

6. Rear Bumper

A: REMOVAL

1. WAGON MODEL

1) Disconnect the ground cable from battery.
2) Remove the bolt of license plate bracket.

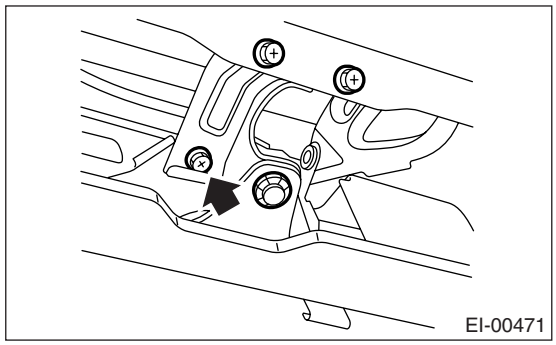

3) Remove the bolts inside wheel house (both sides), and the clips on lower side of bumper.

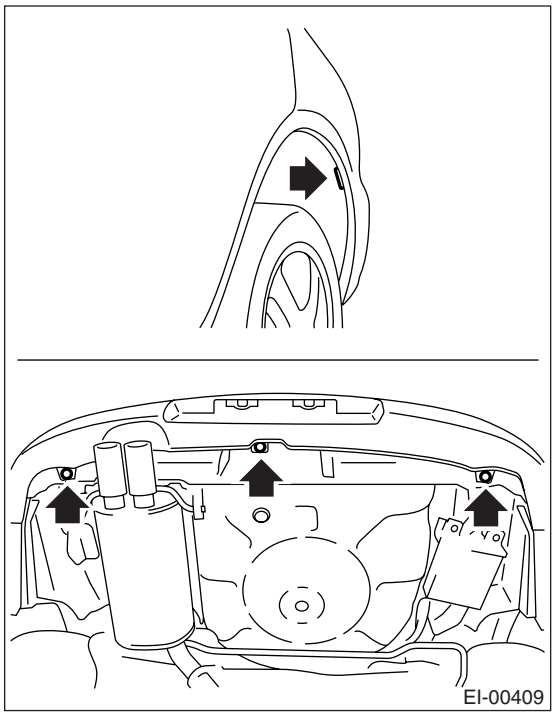

4) Remove the rear combination light assembly. <Ref. to LI-21, REMOVAL, Rear Combination Light Assembly.>

5) Remove the screw and two clips (both sides).

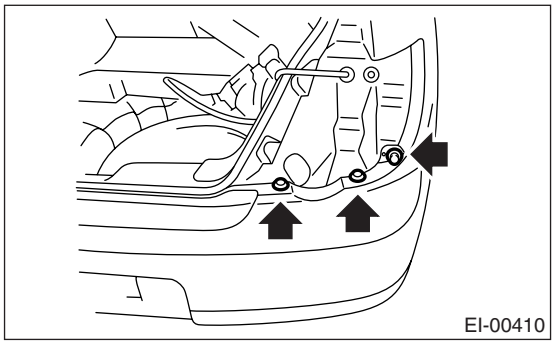

6) Remove the floor box.
7) Remove the rear skirt trim.
8) Turn over the rear quarter lower trims on both sides, and then loosen the four nuts.

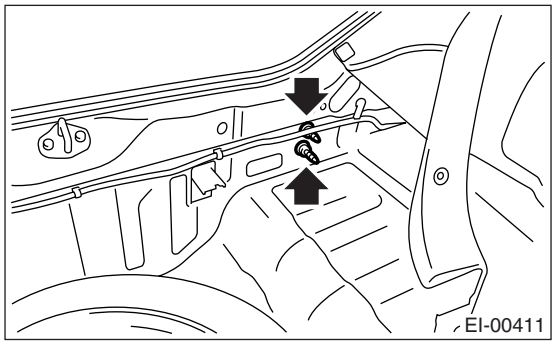

9) Disconnect the license plate light connector, and then remove the rear bumper.
10) Remove the license plate light.
11) Remove the five clips, and then remove the bumper beam.

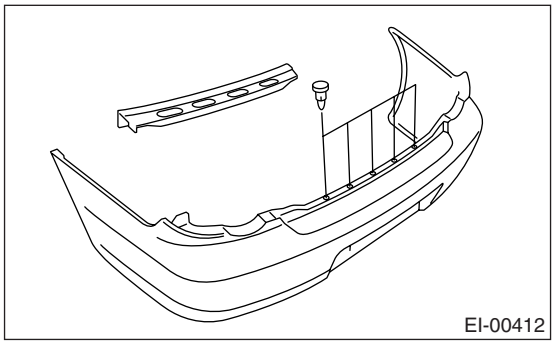

12) Remove the license plate light.

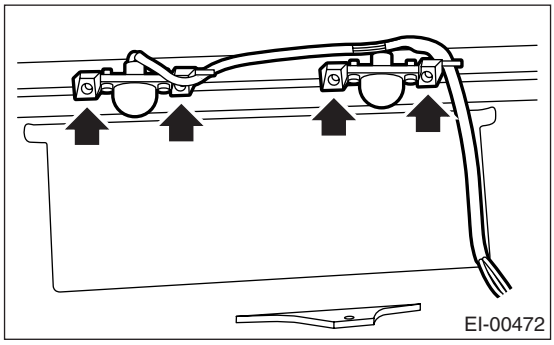

13) Remove the six clips, and then remove the bumper side cover.

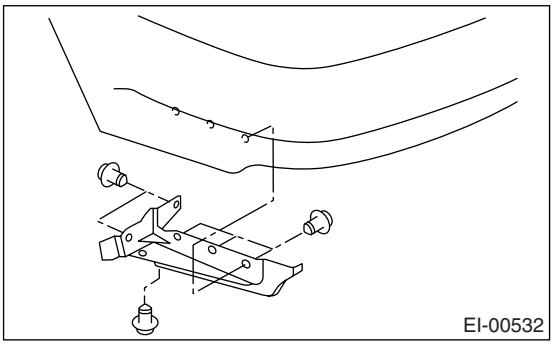

14) Remove the upper bracket from body.

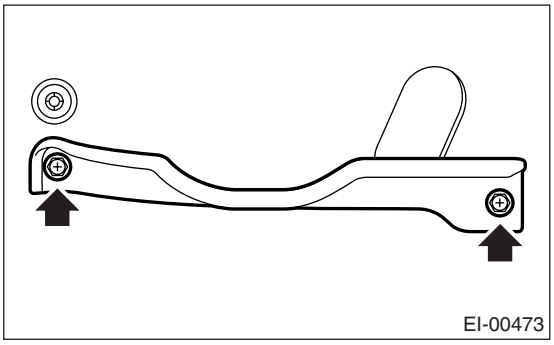

15) Remove the lower bracket (center) from body.

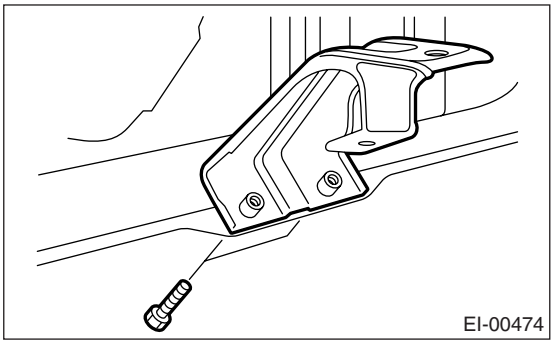

16) Loosen the three bolts, and then remove the lower bracket (side).

NOTE:
On the right side, after removing the canister, loosen the bolts and remove the lower bracket.

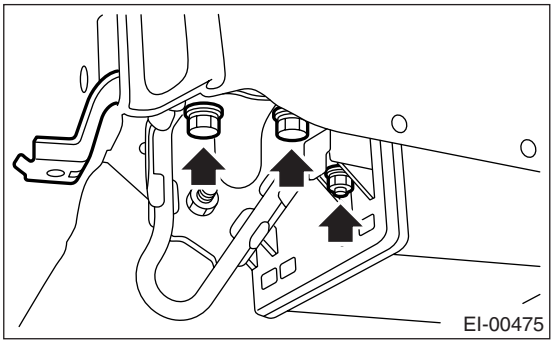

2. SEDAN MODEL

Refer to description about removal of rear bumper of wagon model. <Ref. to EI-29, WAGON MODEL, REMOVAL, Rear Bumper.>

B: INSTALLATION

1. WAGON MODEL

1) Install in the reverse order of removal.

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to EI-5, REAR BUMPER.>

2. SEDAN MODEL

1) Install in the reverse order of removal.

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to EI-5, REAR BUMPER.>

C: REPAIR

Refer to description about repair of front bumper. <Ref. to EI-22, REMOVAL, Front Bumper.>

7. Mud Guard

A: REMOVAL

1) Jack-up the vehicle.
2) Remove the screws and clips to remove mud guard.

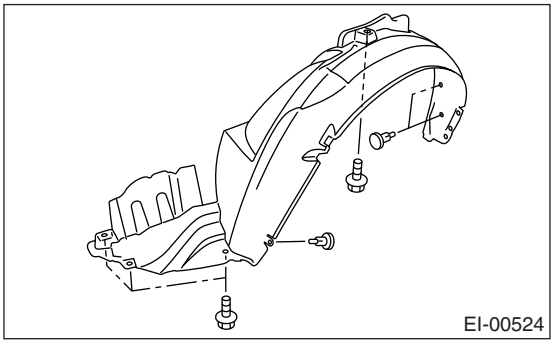

B: INSTALLATION

Insert the hook into body, and tighten it with screw and clip.

Tightening torque:
14 N·m (1.42 kgf-m, 10.3 ft-lb)

8. Cowl Panel

A: REMOVAL

1) Open the front hood.
2) Remove the wiper arm. <Ref. to WW-12, REMOVAL, Front Wiper Arm.>
3) Remove the front panel seal.

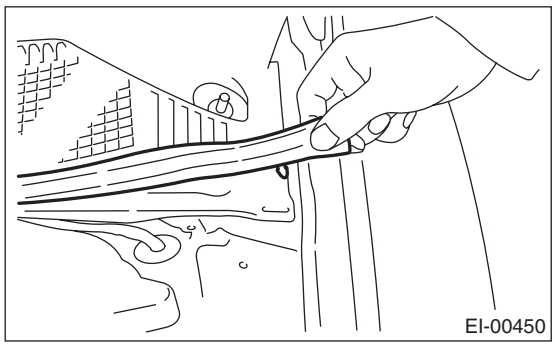

4) Disengage the clips (A) to remove the cowl panel.

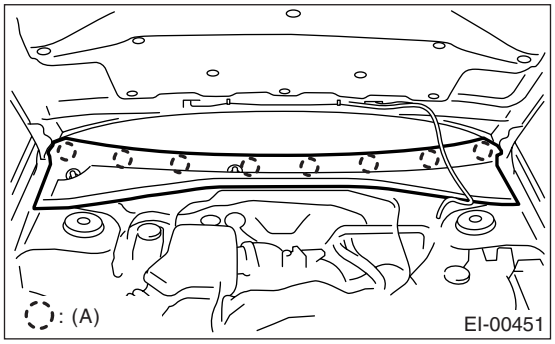

B: INSTALLATION

Install in the reverse order of removal.

9. Roof Spoiler

A: REMOVAL

1. LARGE-SIZED ROOF SPOILER

1) Remove the bolt cap, and then remove the two bolts.
2) Remove the roof spoiler.

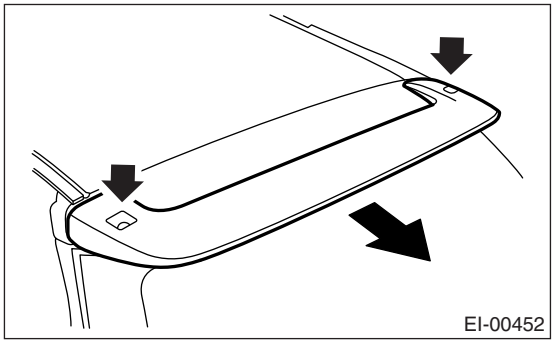

2. SMALL-SIZED ROOF SPOILER

1) Slide in a thin thread of 0.8 mm (0.031 in) diameter or less (fishing line etc.) between body and spoiler, and then remove the spoiler detaching double-sided tape.

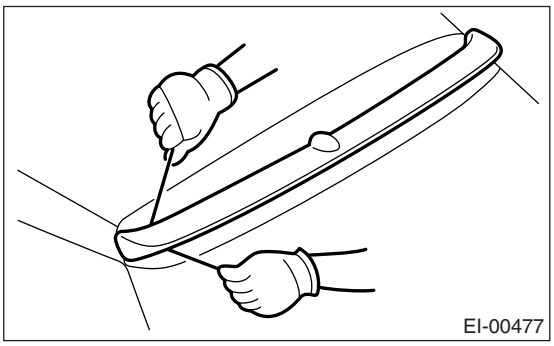

NOTE:
• To optimize the effect of solvent, slide the thread along the body without removing the double-sided tape on surface of body and spoiler.
• If it is difficult to detach the double-sided tape, warm up to approx. 40°C (104°F).
• If the double-sided tape remains thick on surface due to interfacial peeling, apply the solvent after slicing off the double-sided tape using a cutter.

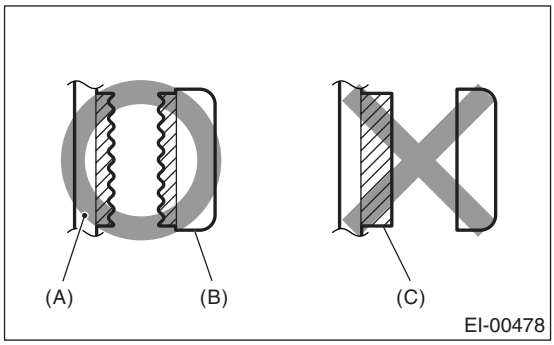

(A) Panel
(B) Spoiler
(C) Double-sided tape

2) Adhere the masking tape around the double-sided tape remaining on surface of body and spoiler.
3) Apply the solvent uniformly on double-sided tape using a brush.

CAUTION:
• Do not use the solvent to body which is repaired with lacquer paint.
• Wipe off immediately when the solvent is touched on surface of body and spoiler.

Solvent:
3M 8907 or equivalent

4) Cover the area where solvent is applied using plastic wrap (A), and then heat the double-sided tape for 5 to 10 minutes in 40 to 60°C (104 to 140°F) using a heat lamp (B).

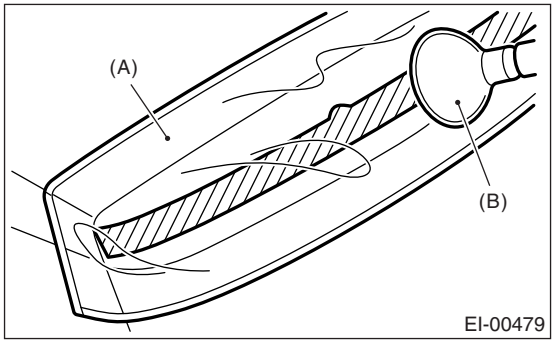

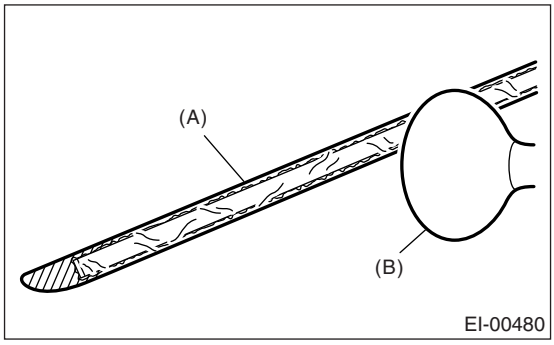

CAUTION:
Do not heat the double-sided tape until the surface becomes white and excessively dried.

5) Remove the double-sided tape using a plastic spatula.
6) After completely removing the double-sided tape, detach the masking tape and clean the surface using a cotton cloth waste damped with white gasoline.

B: INSTALLATION

1. LARGE-SIZED ROOF SPOILER

Install in the reverse order of removal.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.46 ft-lb)

2. SMALL-SIZED ROOF SPOILER

1) Apply the primer to spoiler surface where the double-sided tape is adhered, and then adhere the double-sided tape as shown in the figure.

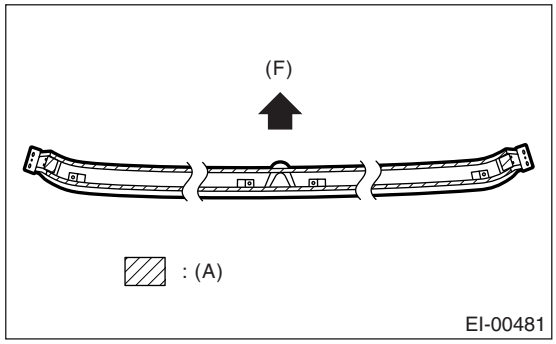

(F) Front side
(A) Double-sided tape; thickness: 0.8 mm (0.031 in), width: 5 mm (0.197 in)

Primer:
3M K-500 or equivalent

Double-sided tape:
3M 5531-5 or equivalent

2) Heat the adhering part using a heat lamp.
Body side: 40 — 60°C (104 — 140°F)
Spoiler side: 20 — 30°C (68 — 86°F)
3) Detach the double-sided tape backing sheet, align to clip position, and then adhere to body using care to avoid air entering.

CAUTION:
To keep the adhesion, do not wash the vehicle within 24 hours.

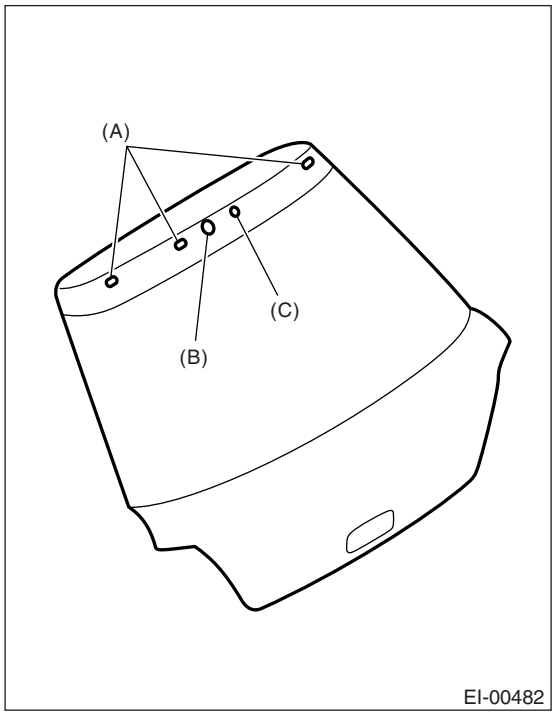

(A) Cap oblong hole
(B) Washer nozzle
(C) Cap round hole

10.Rear Spoiler

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Open the trunk lid.
3) Remove the electrical connector (A) of high mount stop light.
4) Loosen the mounting nut of rear spoiler to remove rear spoiler.

CAUTION:
• When removing the nut, do not drop it into trunk lid.
• Pay attention to avoid damage during removal or installation.

Small-sized rear spoiler:
Four tightening positions

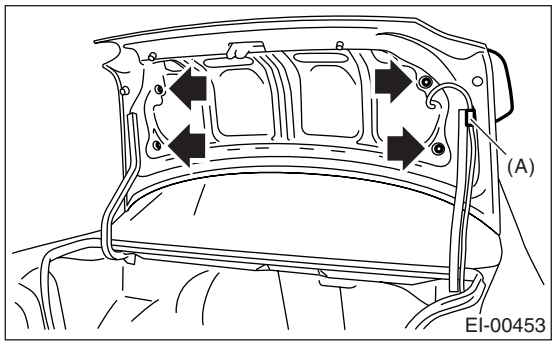

Large-sized rear spoiler:
Twelve tightening positions

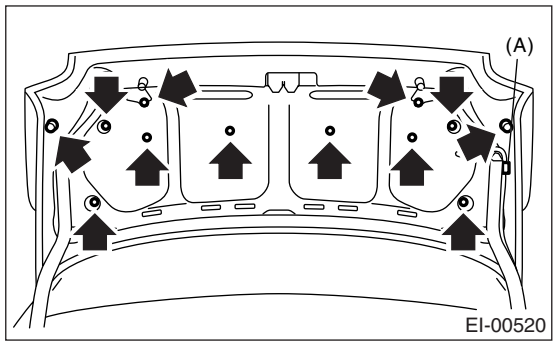

B: INSTALLATION

1) Install in the reverse order of removal.
2) Clean the mounting surfaces of trunk lid and spoiler before installation.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.46 ft-lb)

11.Side Sill Spoiler

A: REMOVAL

Remove the clips (one on front fender arch, six on bottom of side sill spoiler), then remove the side spoiler.

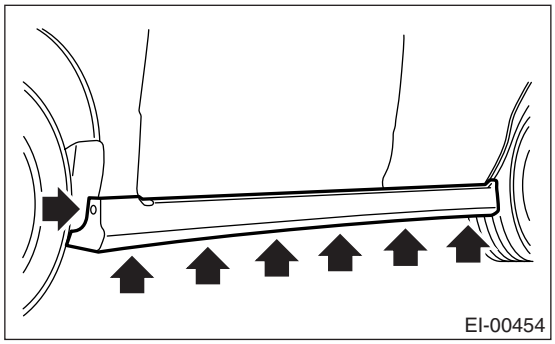

NOTE:
Some vehicle have a clip to retain the splash board together with side sill spoiler (forward of rear tire) at rearmost end.

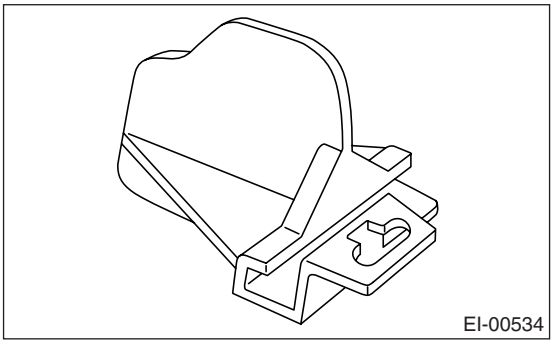

B: INSTALLATION

Install in the reverse order of removal.

12.Front Door Trim

A: REMOVAL

CAUTION:
Do not apply excessive force to the clip. Otherwise the clip may be broken.

1) Disconnect the ground cable from battery.
2) Pull the inner remote cover toward you to remove upper hook. Pull down it to remove the lower hook. Remove the inner remote cover.

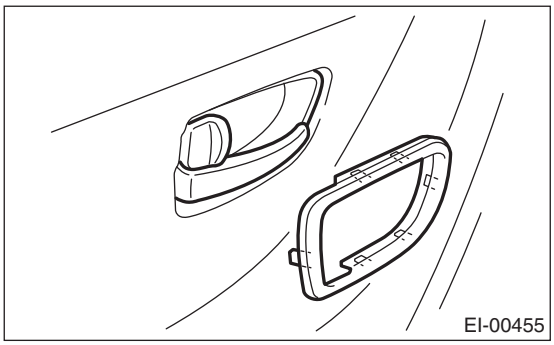

3) Remove the screw.
4) Remove the power window switch assembly and disconnect the harness connector. (for models with power window)
Remove the pull handle and panel. (for models without power window)

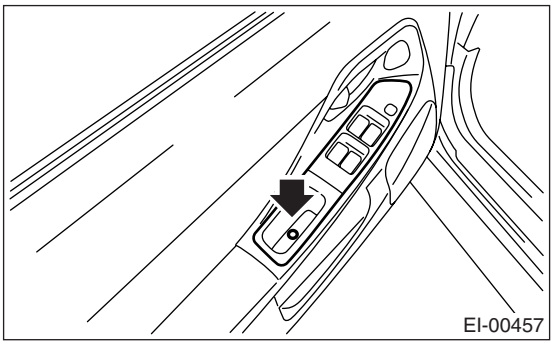

5) Remove the screw.
6) Remove the clips (A) of trim panel using clip remover to remove the trim panel.

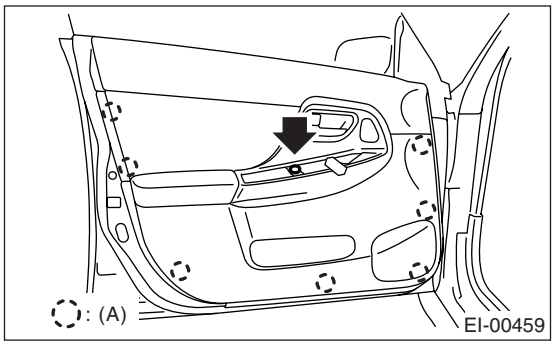

B: INSTALLATION

Install in the reverse order of removal.

13.Rear Door Trim

A: REMOVAL

CAUTION:
Do not apply excessive force to the clip. Otherwise the clip may be broken.

1) Disconnect the ground cable from battery.
2) Pull the inner remote cover toward you to remove upper hook. Pull down it to remove the lower hook. Remove the inner remote cover.

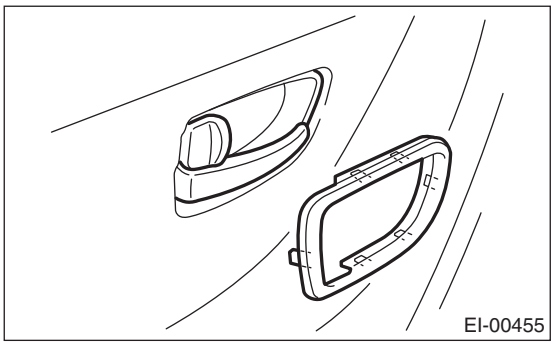

3) Remove the screw and clip.

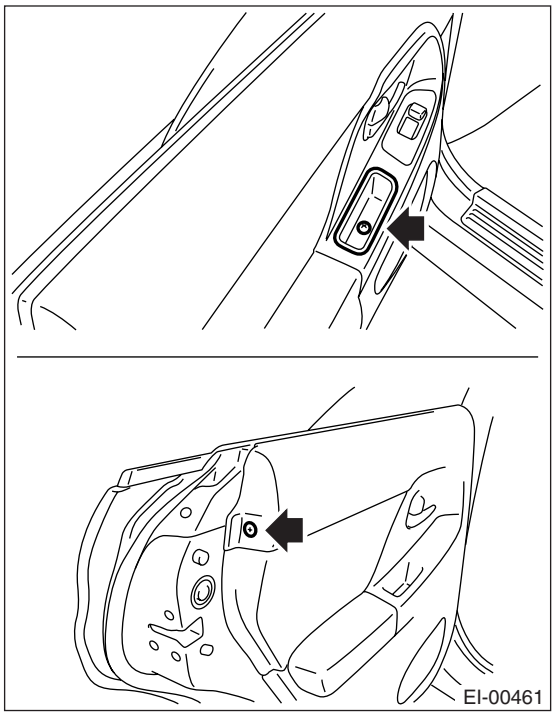

4) Remove the clips (A) of trim panel using clip remover to remove the trim panel.
5) Disconnect the power window harness connector. (for models with power window)

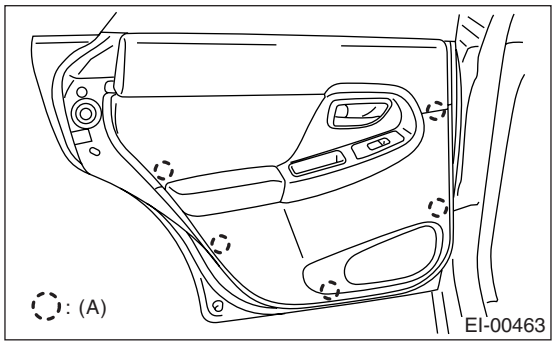

(A) Clip

B: INSTALLATION

Install in the reverse order of removal.

14.Glove Box

A: REMOVAL

1) Open the glove box.
2) Loosen the screws to remove the glove box.

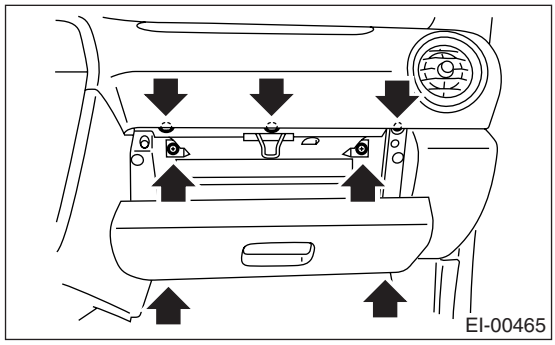

B: INSTALLATION

Install in the reverse order of removal.

15.Roof Rail

A: REMOVAL

1) Remove the roof trim. <Ref. to EI-50, REMOVAL, Roof Trim.>
2) Remove the four mounting nuts, and then detach the roof rail carefully.

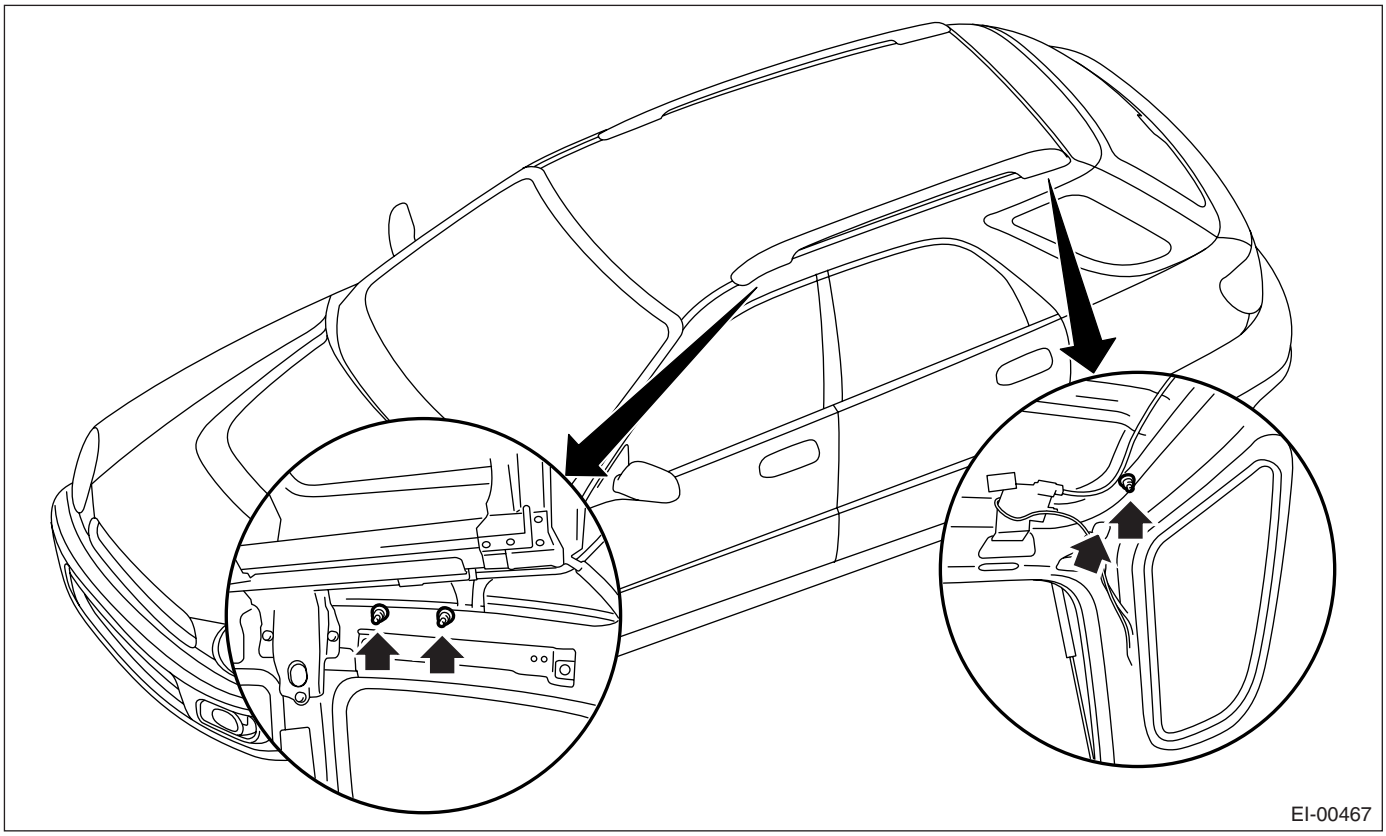

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Be careful not to scratch the body panels with roof rail stud bolts when removing and installing them.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.46 ft-lb)

16.Roof Molding

A: REMOVAL

1) Turn over the edge of roof molding, and then remove it by sliding the internal clip using a flat tip screwdriver.
RH: Slide the molding toward the rear side of vehicle.
LH: Slide the molding toward the front side of vehicle.

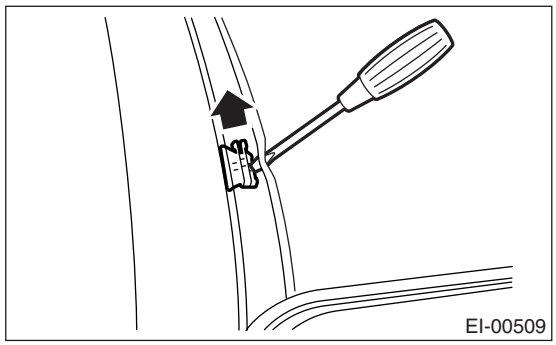

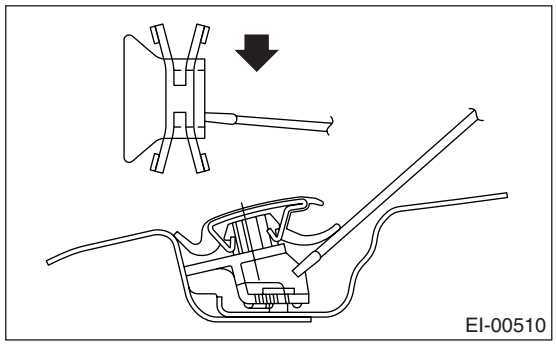

Sedan model: six clips
Wagon model: eight clips

2) For sedan model, remove four clips of rear pillar. Turn over the roof molding on rear glass side, insert a board of about 0.5 mm (0.020 in) thickness into clearance between roof molding and glass, and then remove the claw of internal clip.

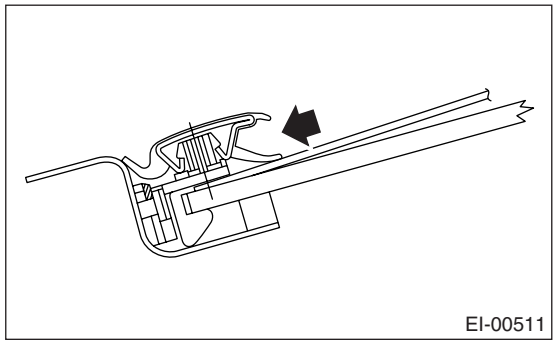

B: INSTALLATION

1) Remove the clip of roof and rear pillar (sedan model) from roof molding, and then install it to body side.

CAUTION:
Make sure to replace the clips broken when removing the roof molding with new ones.

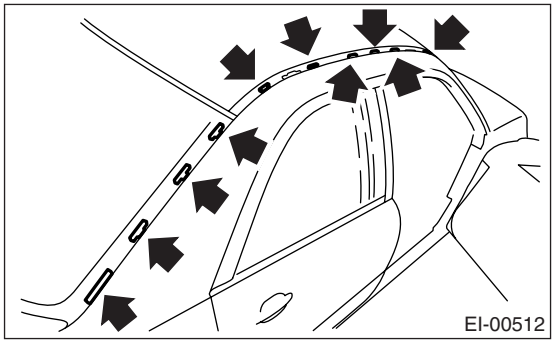

2) Put the front edge of roof molding onto front window molding, and insert the front locating pin into body side cap.

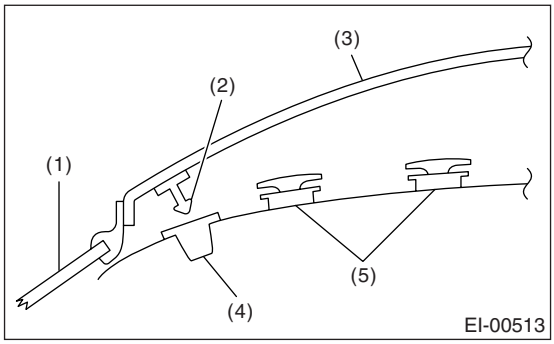

(1) Front window
(2) Locating pin
(3) Roof molding
(4) Cap
(5) Clip (roof)

3) Install the roof molding to body, by pushing the roof molding from above being careful not to deform it.

17.Console Box

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the console cover.

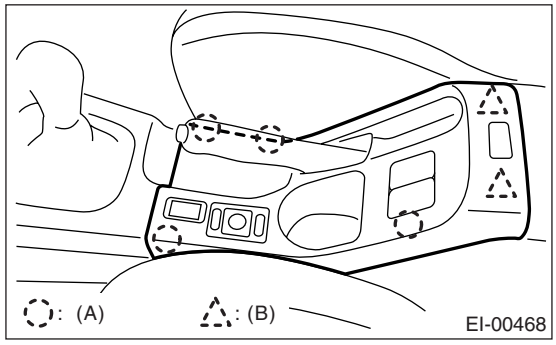

(A) Hook pawl
(B) Clip

3) Remove the shift knob (MT model) and front cover.

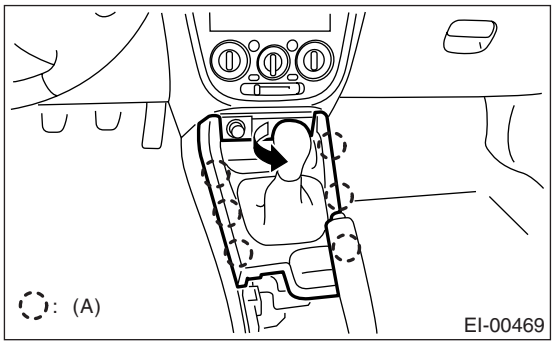

(A) Hook pawl

4) Loosen the screws to remove the console box.

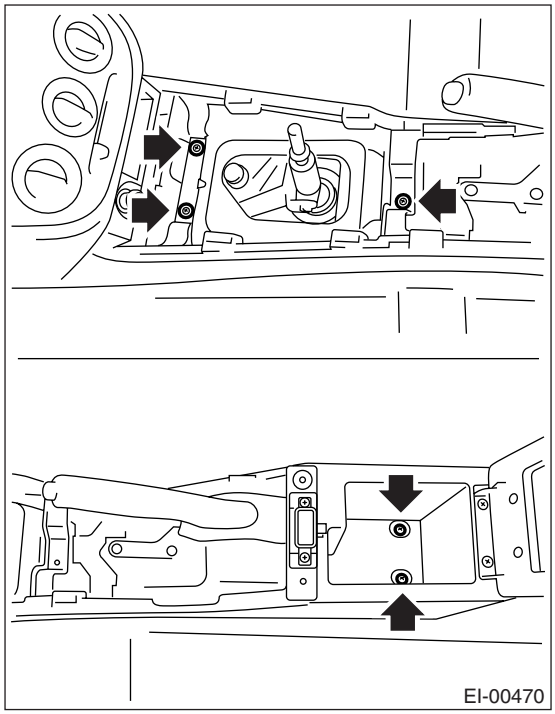

B: INSTALLATION

Install in the reverse order of removal.

18.Instrument Panel Assembly

A: REMOVAL

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical equipment on these circuits.
• Be careful not to damage the airbag system harness when servicing the instrument panel.

NOTE:
The following illustrations are for LHD model.
The locations for RHD model are symmetrically opposite.

1) Disconnect the ground cable from battery.
2) Loosen the screws, remove the clip (A), disconnect the connectors, and then remove the instrument panel lower cover.

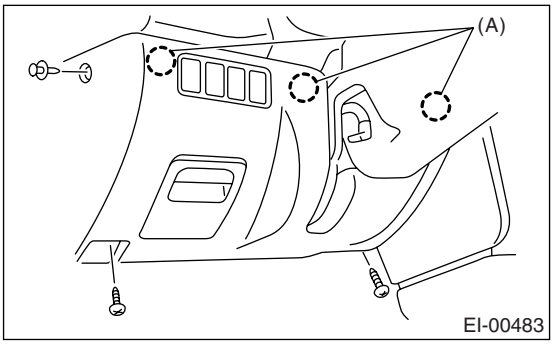

3) Remove the clip (A), and then remove the center console panel.

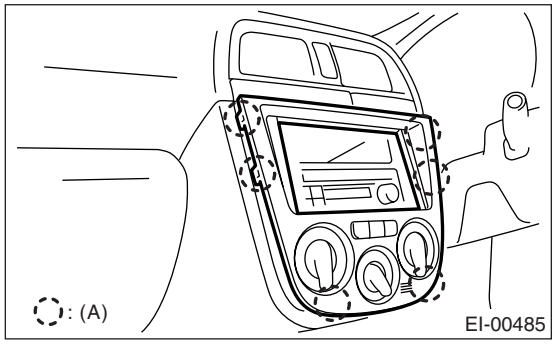

4) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
5) Remove the passenger's airbag module. <Ref. to AB-13, Passenger's Airbag Module.>
6) Remove the ash tray, and then remove the three screws.

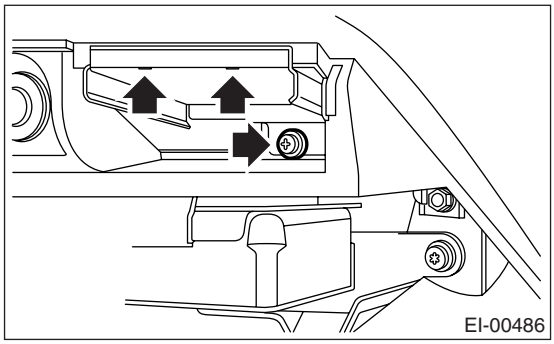

7) Loosen the four screws and two nuts, and then remove the lower console panel.

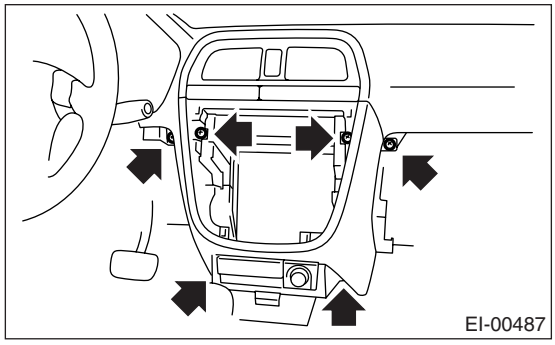

8) Remove the hook, and then remove the defroster panel.

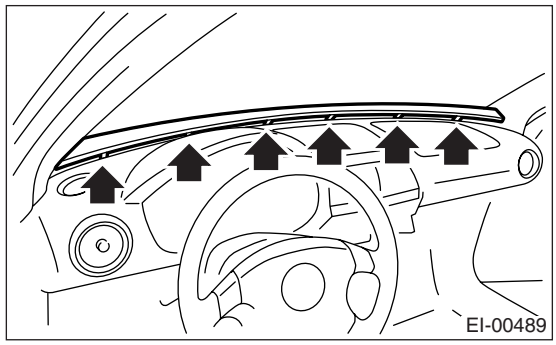

9) Remove the front pillar upper trim. <Ref. to EI-46, REMOVAL, Upper Inner Trim.>
10) Disconnect the two connectors, and then loosen the nuts.

11) Remove the instrument panel installation bolts.

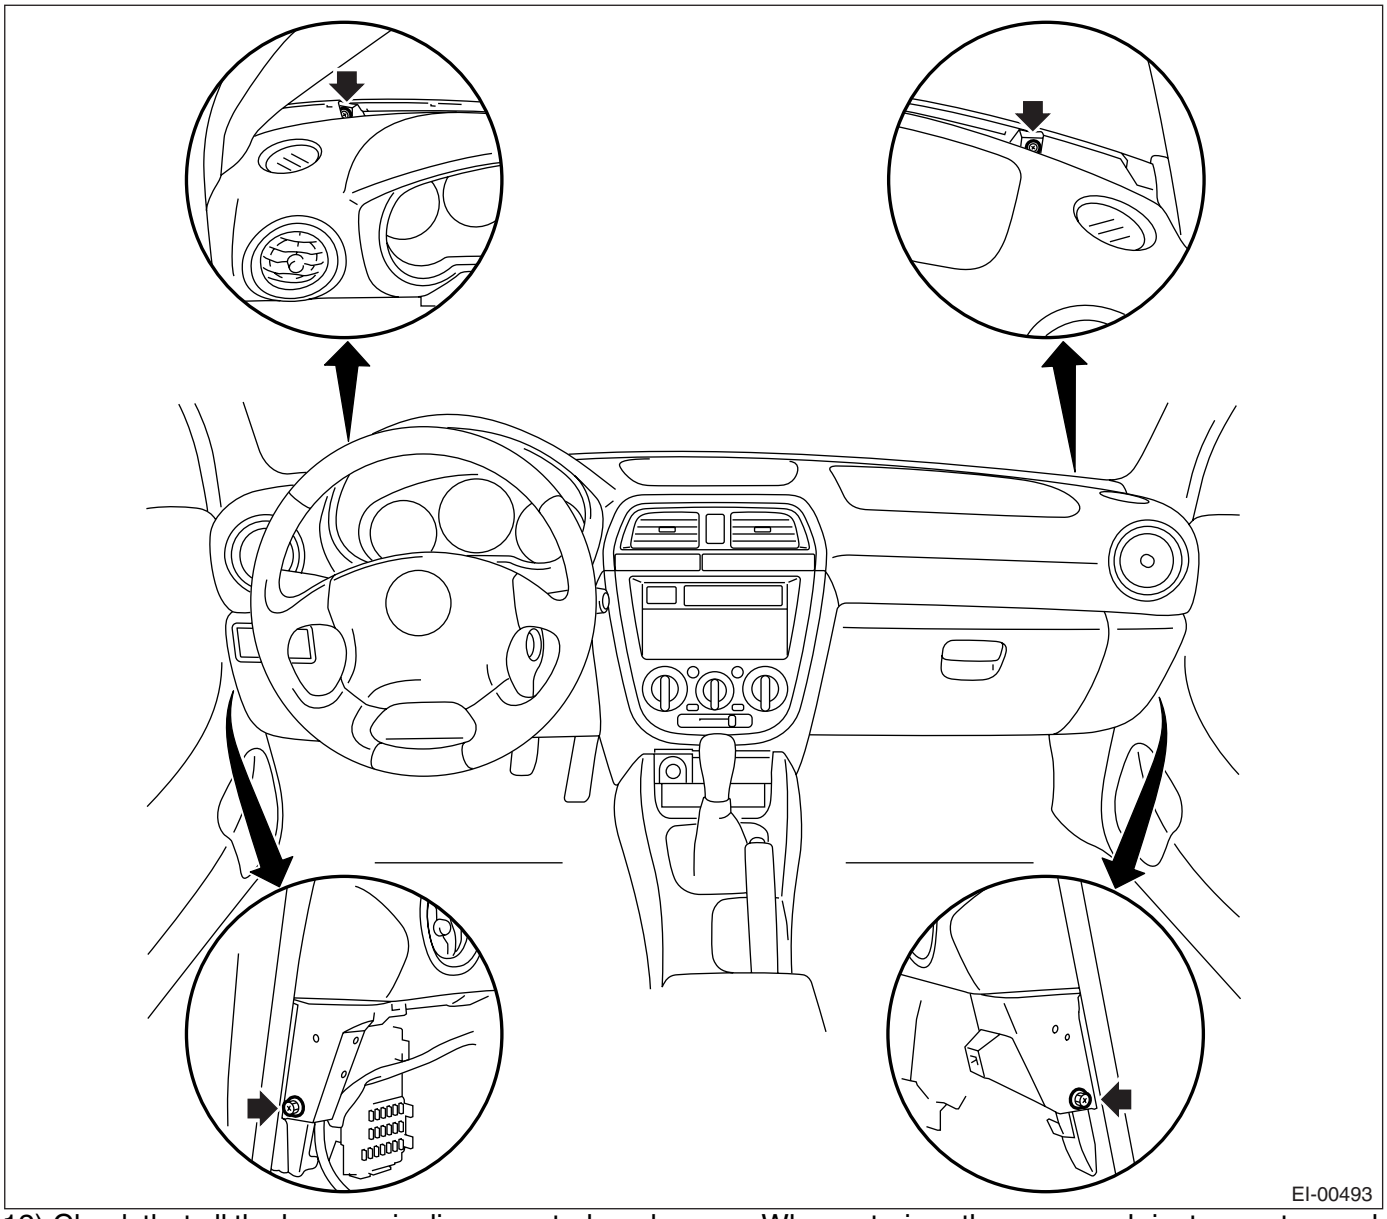

12) Check that all the harness is disconnected, and then remove the instrument panel from vehicle.

NOTE:
• Put alignment marks as necessary, in order to facilitate the reassembly.

• When storing the removed instrument panel, place it standing up on the floor.

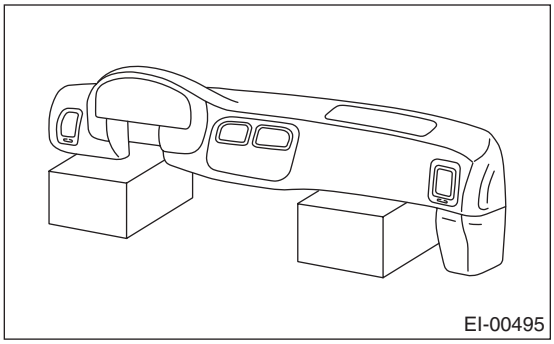

B: INSTALLATION

CAUTION:
- **Be careful not to snag the harness.**
- **Carry out installation checking that the harness is connected correctly.**
- **When setting the instrument panel into vehicle, do not damage trim panels.**

1) Install in the reverse order of removal.

NOTE:
When installing the instrument panel into position, push the hook into grommet (A) on the body panel. After tightening the bolts, recheck the installation.

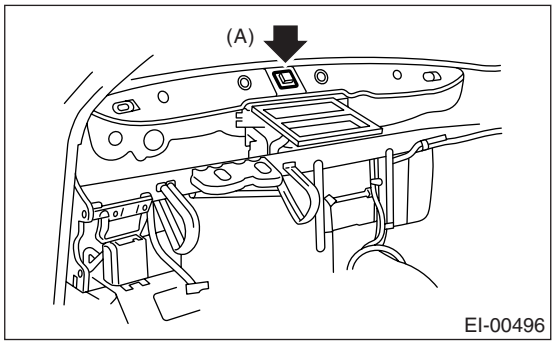

19.Upper Inner Trim

A: REMOVAL

1) Remove the lower inner trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
2) Remove the front molding (A).
3) Remove the front pillar upper trim (B).
4) Detach the front seat belt shoulder anchor, and then remove the center pillar upper trim (C).

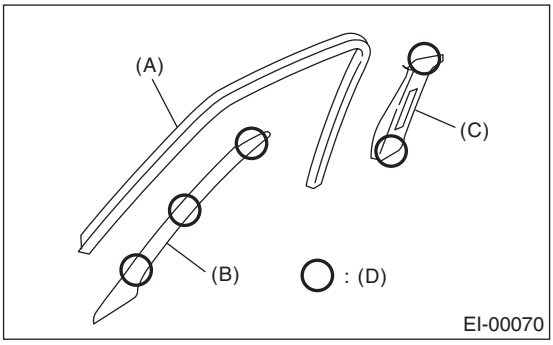

(D) Clip

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Be sure to securely hook pawls of inner trim panel to body flange.

NOTE:
When installing the center pillar upper trim and front pillar upper trim, be sure to set the front molding as shown in the figure.

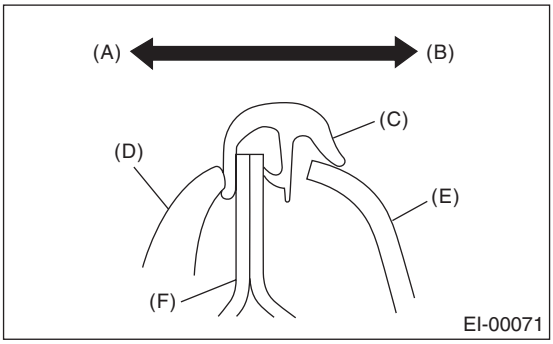

(A) Outside
(B) Inside
(C) Molding
(D) Weather strip
(E) Trim
(F) Body

20.Lower Inner Trim

A: REMOVAL

1) Remove the side sill front cover (A).
2) Remove the rear seat cushion <Ref. to SE-17, REMOVAL, Rear Seat.>, and then remove side sill rear cover (B).
3) Remove the center pillar lower trim (C).

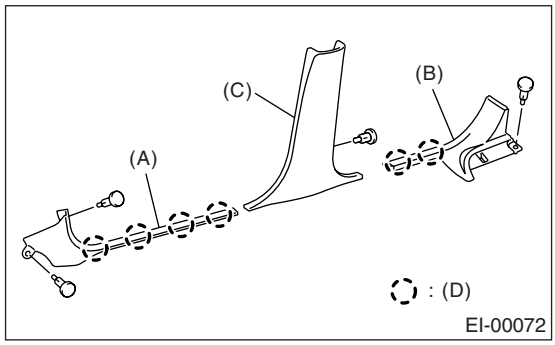

(D) Clip

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Be sure to securely hook pawls of inner trim panel to body flange.

21.Rear Quarter Trim

A: REMOVAL

1. SEDAN MODEL

1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the side sill rear cover. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
3) Remove the rear pillar lower cover (A).
4) Remove the seatbelt lower anchor bolt, and then remove the rear pillar upper trim (B).

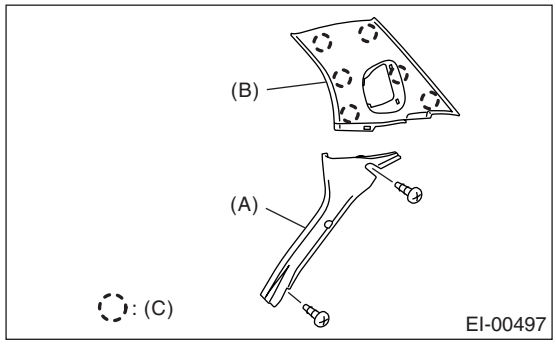

(C) Clip

2. WAGON MODEL

1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
2) Remove the side sill rear cover.
3) Remove the rear rail trim (A).
4) Loosen the screws and clips to remove the rear quarter upper trim (B).
5) Remove the rear skirt trim (C).
6) Loosen the bolts and clips to remove the rear quarter lower trim (D).

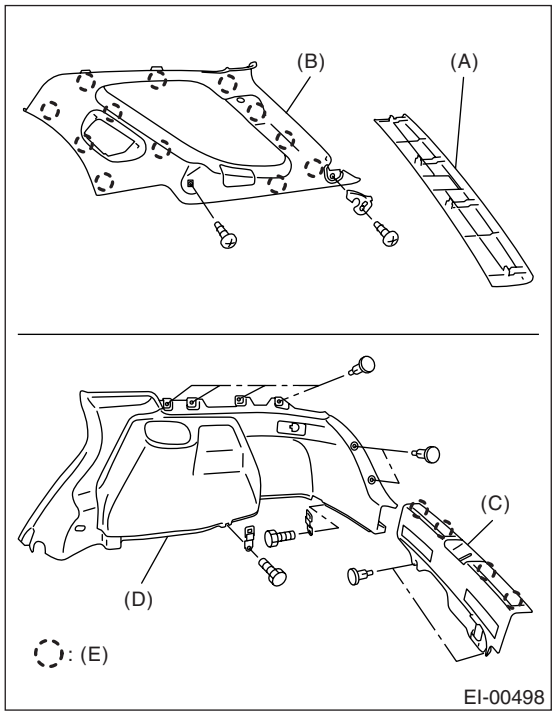

(E) Clip

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:
Be sure to securely hook pawls of inner trim panel to body flange.

NOTE:
When installing the rear quarter upper trim, be sure to set the rear molding as shown in the figure.

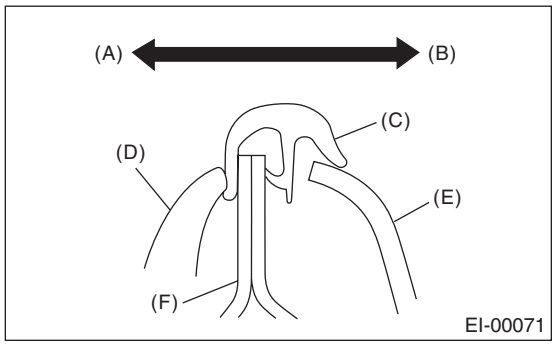

(A) Outside
(B) Inside
(C) Molding
(D) Weather strip
(E) Trim
(F) Body

22.Sun Visor

A: REMOVAL

Remove the mounting screws, and then detach the sun visor (A), hook (B) and center visor (C).

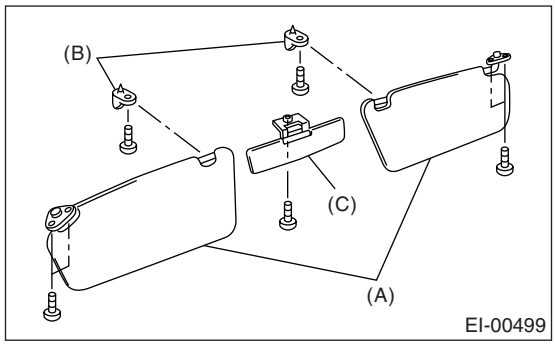

B: INSTALLATION

Install in the reverse order of removal.

23.Roof Trim

A: REMOVAL

CAUTION:
When removing the clip, use great care not to damage the roof trim.

1. SEDAN MODEL

1) Disconnect the ground cable from battery.
2) Remove the sunroof switch. (Model with sunroof) <Ref. to SR-9, REMOVAL, Sunroof Switch.>
3) Remove the spot map light. <Ref. to LI-29, REMOVAL, Spot Map Light.>
4) Remove the room light. <Ref. to LI-30, REMOVAL, Room Light.>
5) Remove the sun visor and hook or both sides. <Ref. to EI-49, REMOVAL, Sun Visor.>
6) In case of models with sunroof, remove the sunroof weather strip.

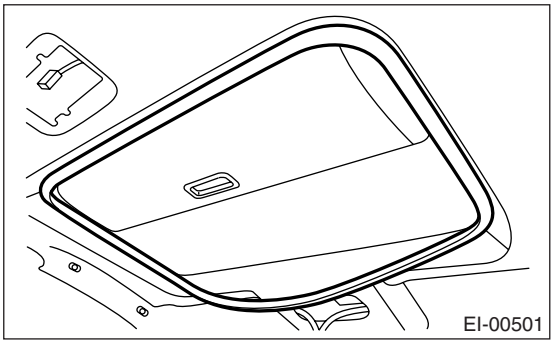

7) Remove the assist-grips (A).

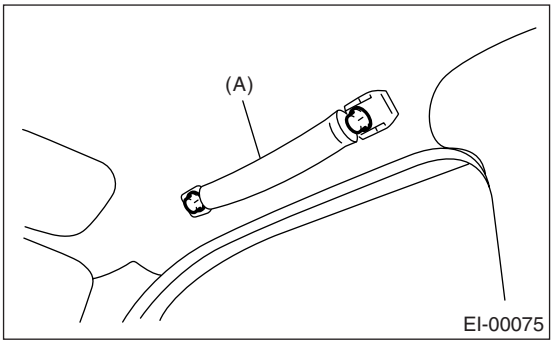

8) Remove the upper inner trim. <Ref. to EI-46, REMOVAL, Upper Inner Trim.>
9) Remove the quarter upper trim. <Ref. to EI-48, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
10) Remove the clips, and then remove the roof trim.

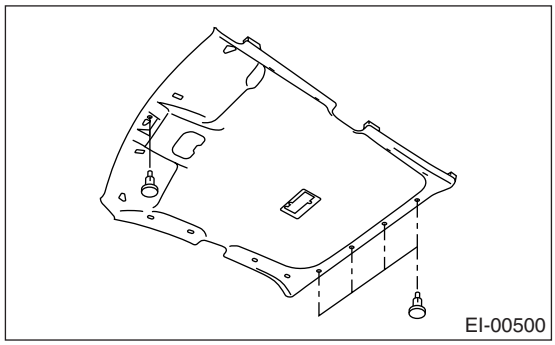

2. WAGON MODEL

1) Disconnect the ground cable from battery.
2) Remove the sunroof switch. (Model with sunroof) <Ref. to SR-9, REMOVAL, Sunroof Switch.>
3) Remove the room light. <Ref. to LI-30, REMOVAL, Room Light.>
4) Remove the sun visor and hook or both sides. <Ref. to EI-49, REMOVAL, Sun Visor.>
5) In case of models with sunroof, remove the sunroof weather strip.

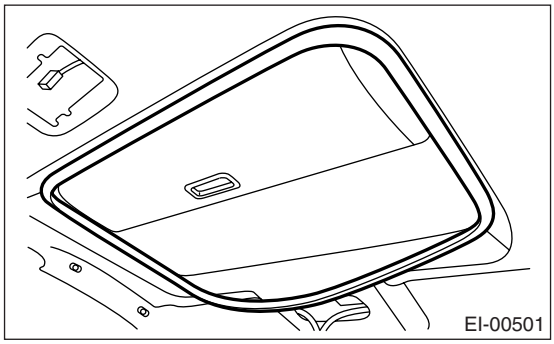

6) Remove the assist-grips (A).

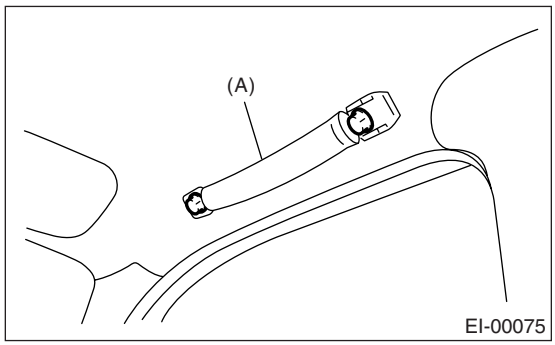

7) Remove the upper inner trim. <Ref. to EI-46, REMOVAL, Upper Inner Trim.>
8) Remove the rear quarter upper trim shown in the figure.
9) Remove the rear rail trim (A).

10) Remove the rear quarter upper trim (B) of both sides.

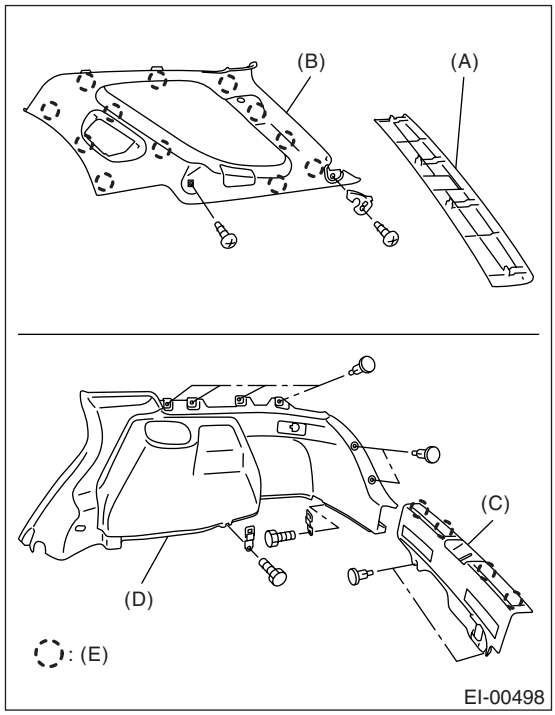

(E) Clip

11) Remove the clips, and then remove the roof trim.

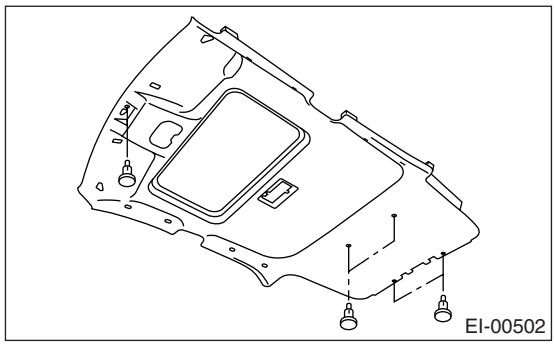

B: INSTALLATION

Install in the reverse order of removal.

24.Rear Gate Trim

A: REMOVAL

CAUTION:
Be careful not to damage the clips or their holes.

1) Remove the clips, and then detach the rear gate trim.

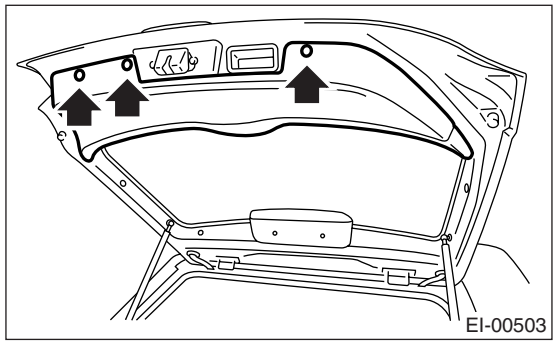

B: INSTALLATION

Install in the reverse order of removal.

25.Rear Shelf Trim

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the high mount stop light.

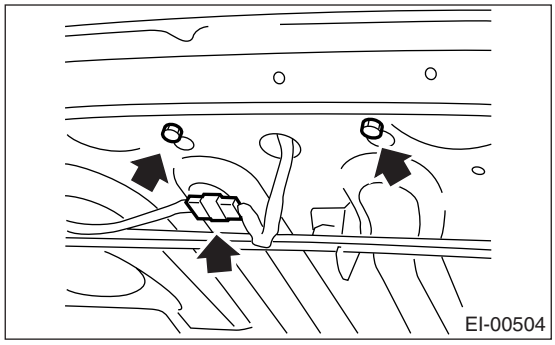

3) Remove the rear quarter upper trim. <Ref. to EI-48, REMOVAL, Rear Quarter Trim.>
4) Remove the seat belt center anchor lower bolt.
5) Remove the rear shelf trim.

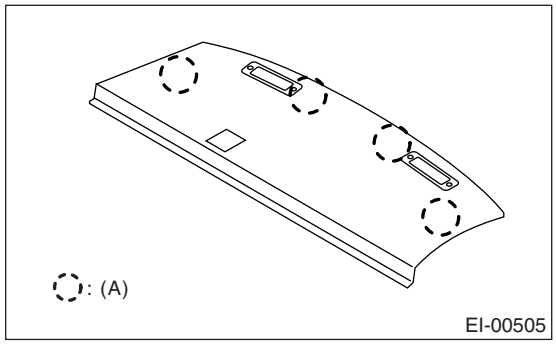

(A) Clip

B: INSTALLATION

Install in the reverse order of removal.

26.Trunk Trim

A: REMOVAL

1) Remove the rear seat backrest. <Ref. to SE-17, SEDAN MODEL, REMOVAL, Rear Seat.>
2) Remove the clip (A).
3) Loosen the clips, and then detach the trunk rear trim (B).
4) Loosen the clips to remove the trunk side trim (C).

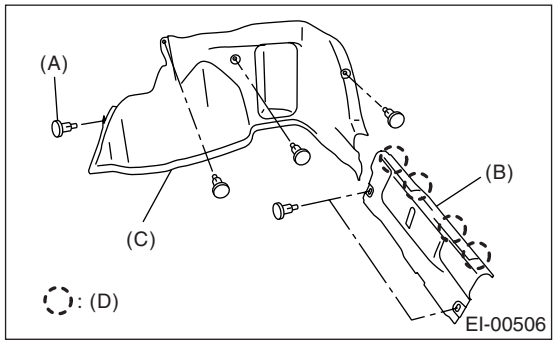

(D) Clip

B: INSTALLATION

Install in the reverse order of removal.

27.Floor Mat

A: REMOVAL

1) Remove the front seats. <Ref. to SE-6, REMOVAL, Front Seat.>
2) Remove the rear seat cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>
3) Remove the console box. <Ref. to EI-42, Console Box.>
4) Remove the side sill front cover, side sill rear cover and center pillar lower trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
5) Remove the foot rest.
6) Remove the clips from floor mat.
7) Remove the mat hook.
8) Remove the mat from toe board area.
9) Remove the mat from rear heater duct.
10) Roll the mat, and then take it out of opened rear door.

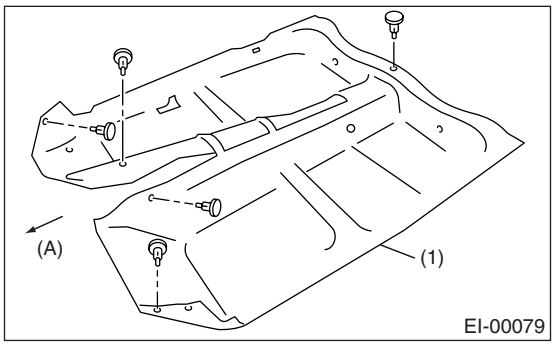

(A) Front
(1) Floor mat

B: INSTALLATION

Install in the reverse order of removal.

NOTE:
- Secure the mat firmly with hook and Velcro tape.
- Insert the mat edge firmly into the groove of side sill cover.

28.Luggage Floor Mat

A: REMOVAL

Remove the clips, and then detach the rear floor mats and boxes.

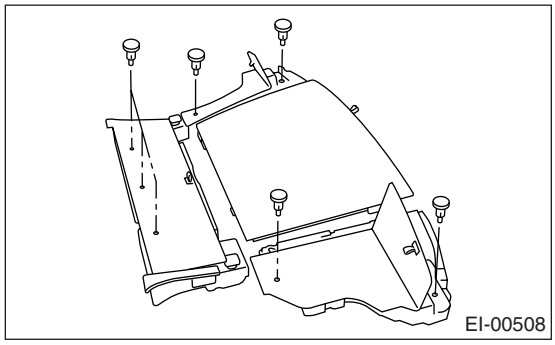

B: INSTALLATION

Install in the reverse order of removal.

29.Trunk Room Mat

A: REMOVAL

Draw out the trunk room mat.

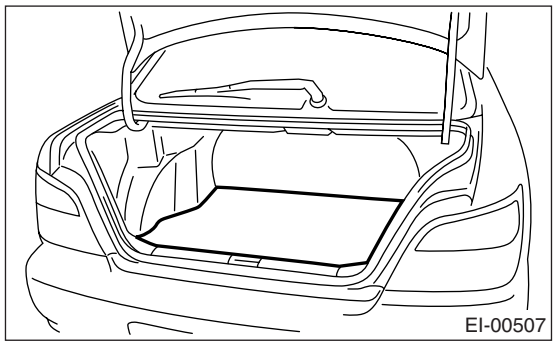

B: INSTALLATION

Install in the reverse order of removal.

30.Heat Shield Cover

A: REMOVAL

1. FRONT HEAT SHIELD COVER

1) Loosen the four bolts to remove the front heat shield cover.

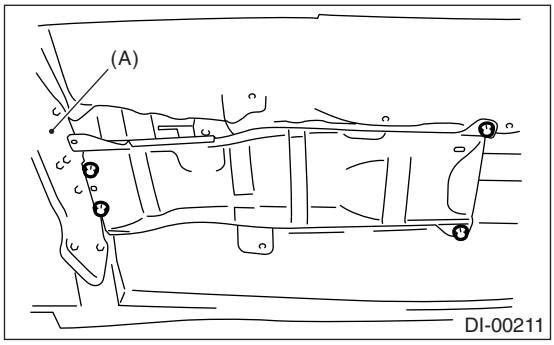

(A) Transmission mount

2. CENTER HEAT SHIELD COVER

1) Loosen the four bolts to remove the center heat shield cover.

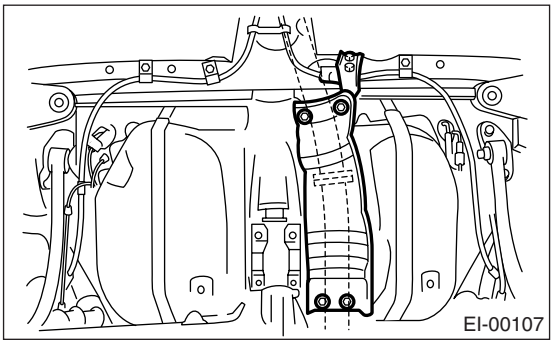

3. REAR HEAT SHIELD COVER

1) Remove the muffler. <Ref. to EX(H4SO)-12, REMOVAL, Muffler.>, <Ref. to EX(H4SOw/oOBD)-11, REMOVAL, Muffler.>, <Ref. to EX(H4DOTC)-15, REMOVAL, Muffler.>
2) Loosen the four bolts to remove the rear heat shield cover.

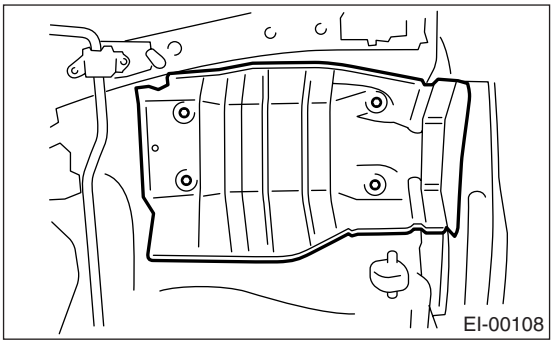

B: INSTALLATION

Install in the reverse order of removal.

EXTERIOR BODY PANELS

EB

		Page
1.	General Description	2
2.	Front Hood Panel	13
3.	Front Fender Panel	14
4.	Front Door Panel	15
5.	Front Sealing Cover	17
6.	Rear Door Panel	18
7.	Rear Sealing Cover	20
8.	Trunk Lid Panel	21
9.	Rear Gate Panel	22

1. General Description

A: SPECIFICATIONS

1. SIDE

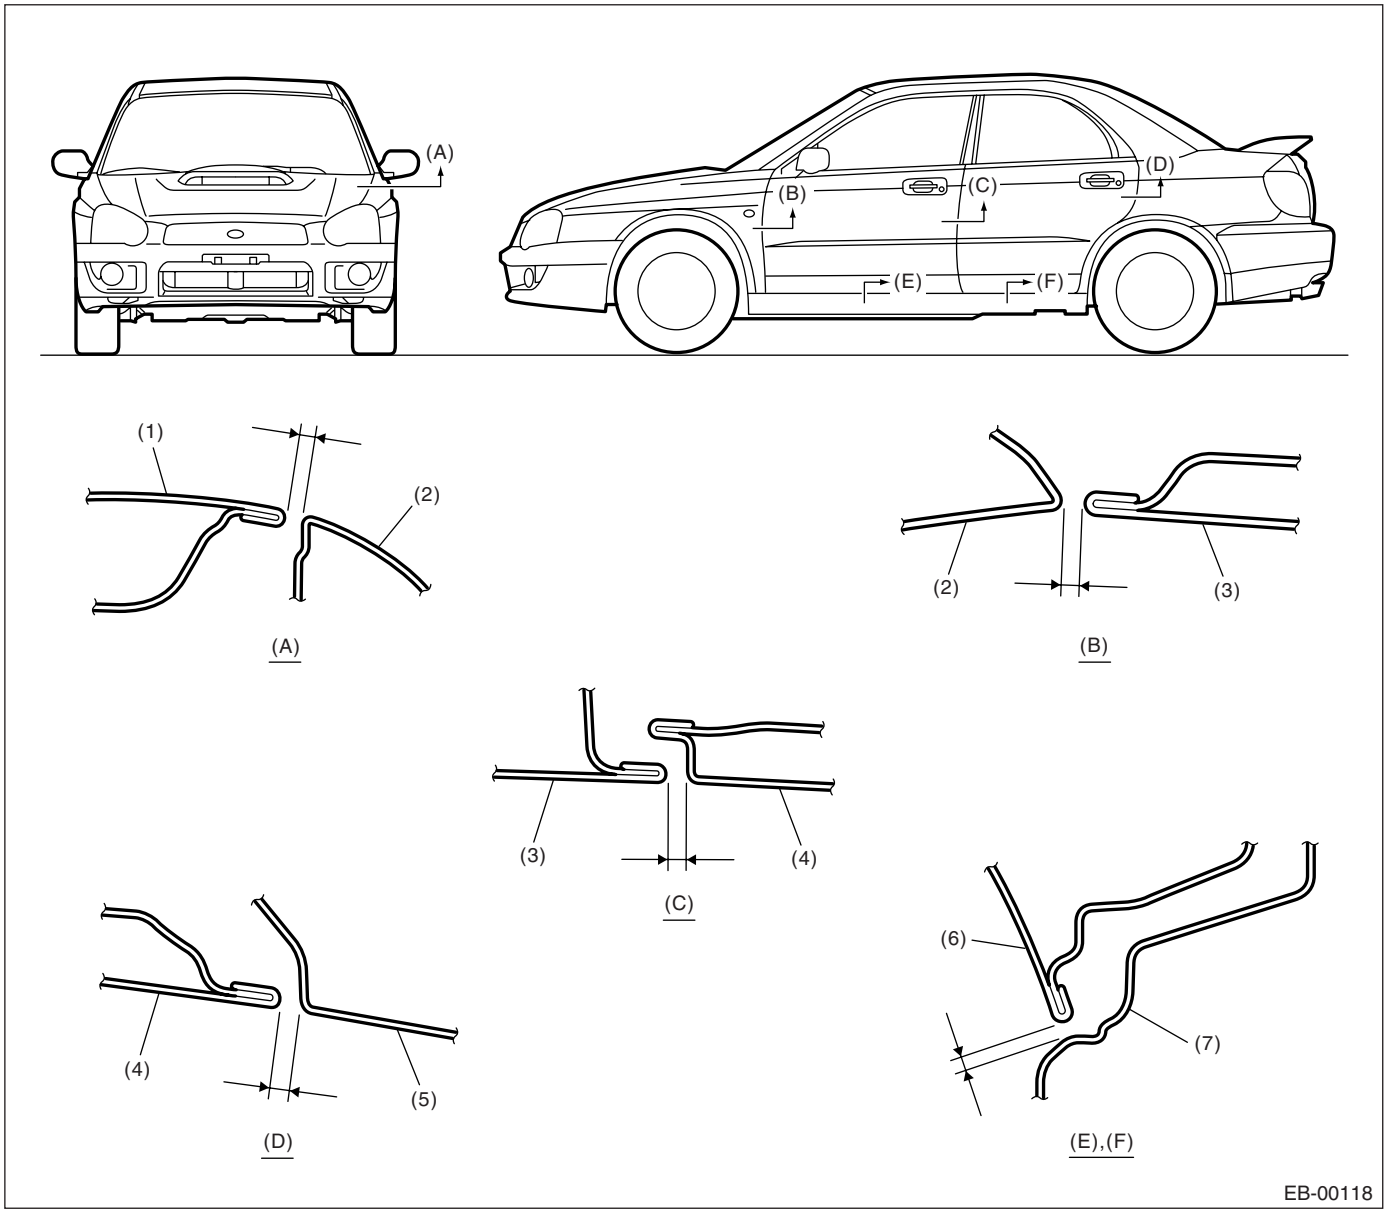

(1) Front hood panel
(2) Front fender panel
(3) Front door panel
(4) Rear door panel
(5) Rear quarter panel
(6) Door panel
(7) Side sill

Section	Part	Standard
(A)	Front hood panel to Front fender panel	NON-TURBO: 4.0±1.0 mm (0.16±0.04 in) TURBO: 3.7±1.0 mm (0.15±0.04 in)
(B)	Front fender panel to Front door panel	4.7±1.0 mm (0.19±0.04 in)
(C)	Front door panel to Rear door panel	5.1±1.0 mm (0.20±0.04 in)
(D)	Rear door panel to Rear quarter panel	4.6±1.0 mm (0.18±0.04 in)
(E), (F)	Door panel to Side sill	5.9±1.0 mm (0.23±0.04 in)

2. FRONT

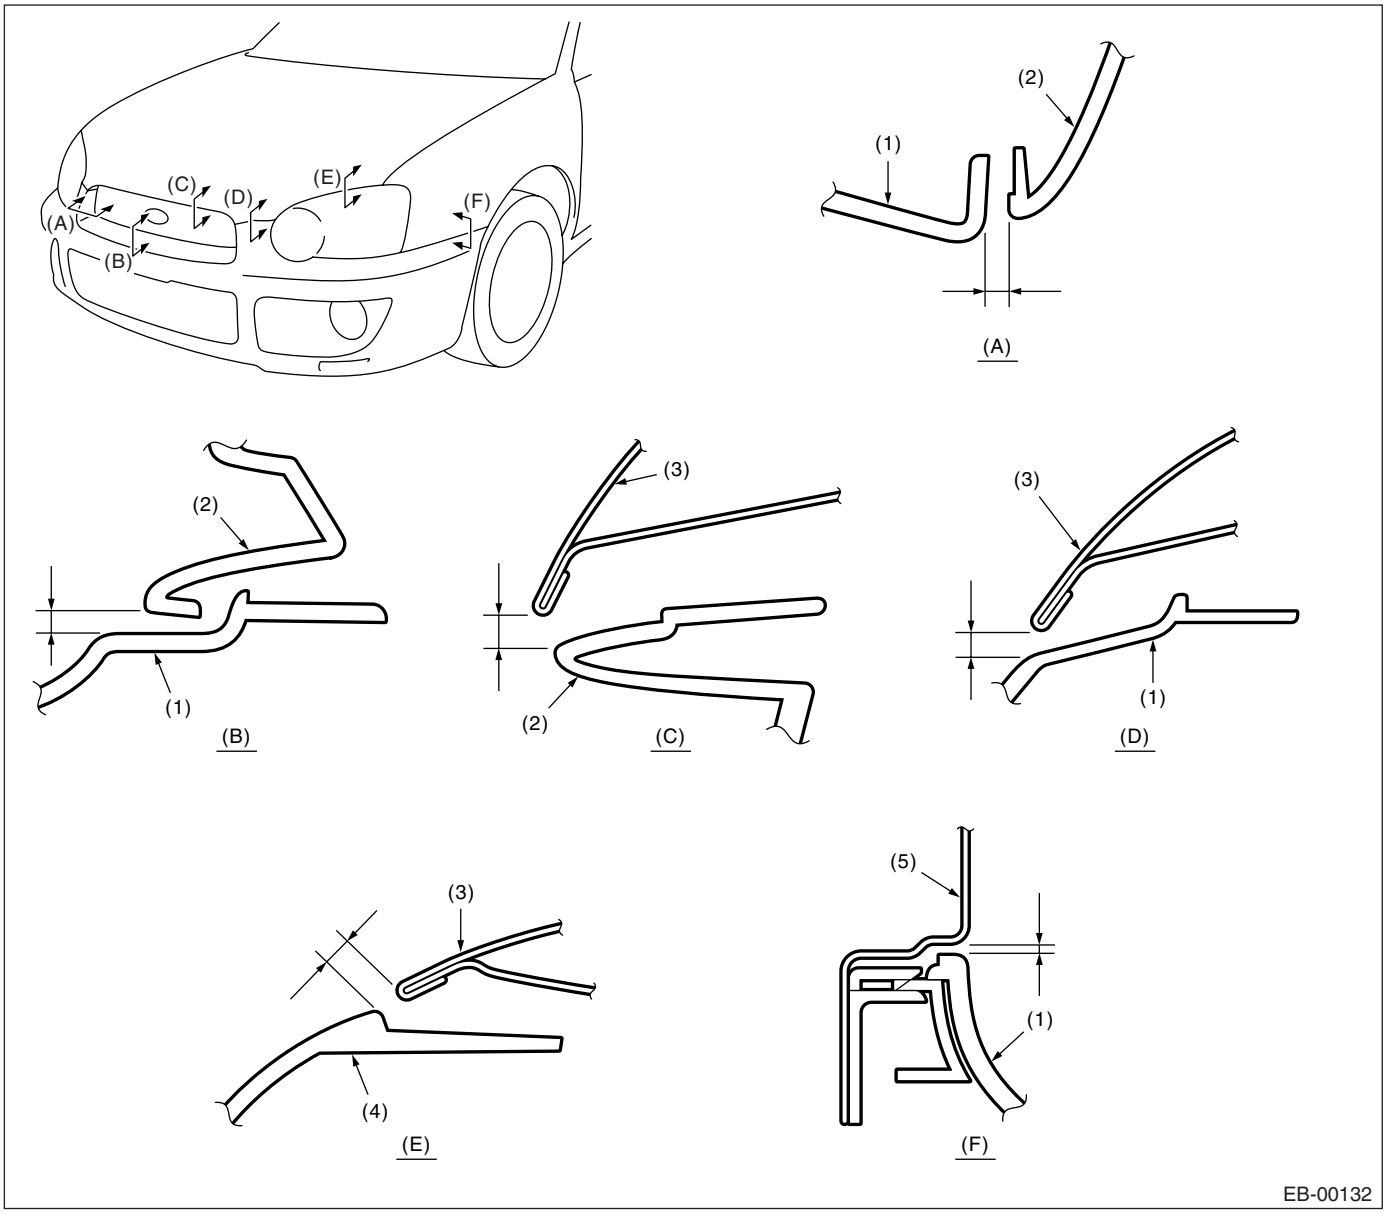

(1) Front bumper
(2) Front grille
(3) Front hood panel
(4) Headlight
(5) Front fender panel

Section	Part	Standard
(A)	Front bumper to Front grille (Lateral direction)	1.0±0.5 mm (0.04±0.02 in)
(B)	Front bumber to Front grille (Longitudinal direction)	1.0±1.0 mm (0.04±0.04 in)
(C)	Front hood panel to Front grille	Steel: 6.8±1.0 mm (0.27±0.04 in) Aluminum: 6.5±1.0 mm (0.26±0.04 in)
(D)	Front hood panel to Front bumper	6.0±1.0 mm (0.24±0.04 in)
(E)	Front hood panel to Headlight	5.5±1.0 mm (0.22±0.04 in)
(F)	Front fender panel to Front bumper	1.5±0.7 mm (0.06±0.03 in)

3. REAR (SEDAN MODEL)

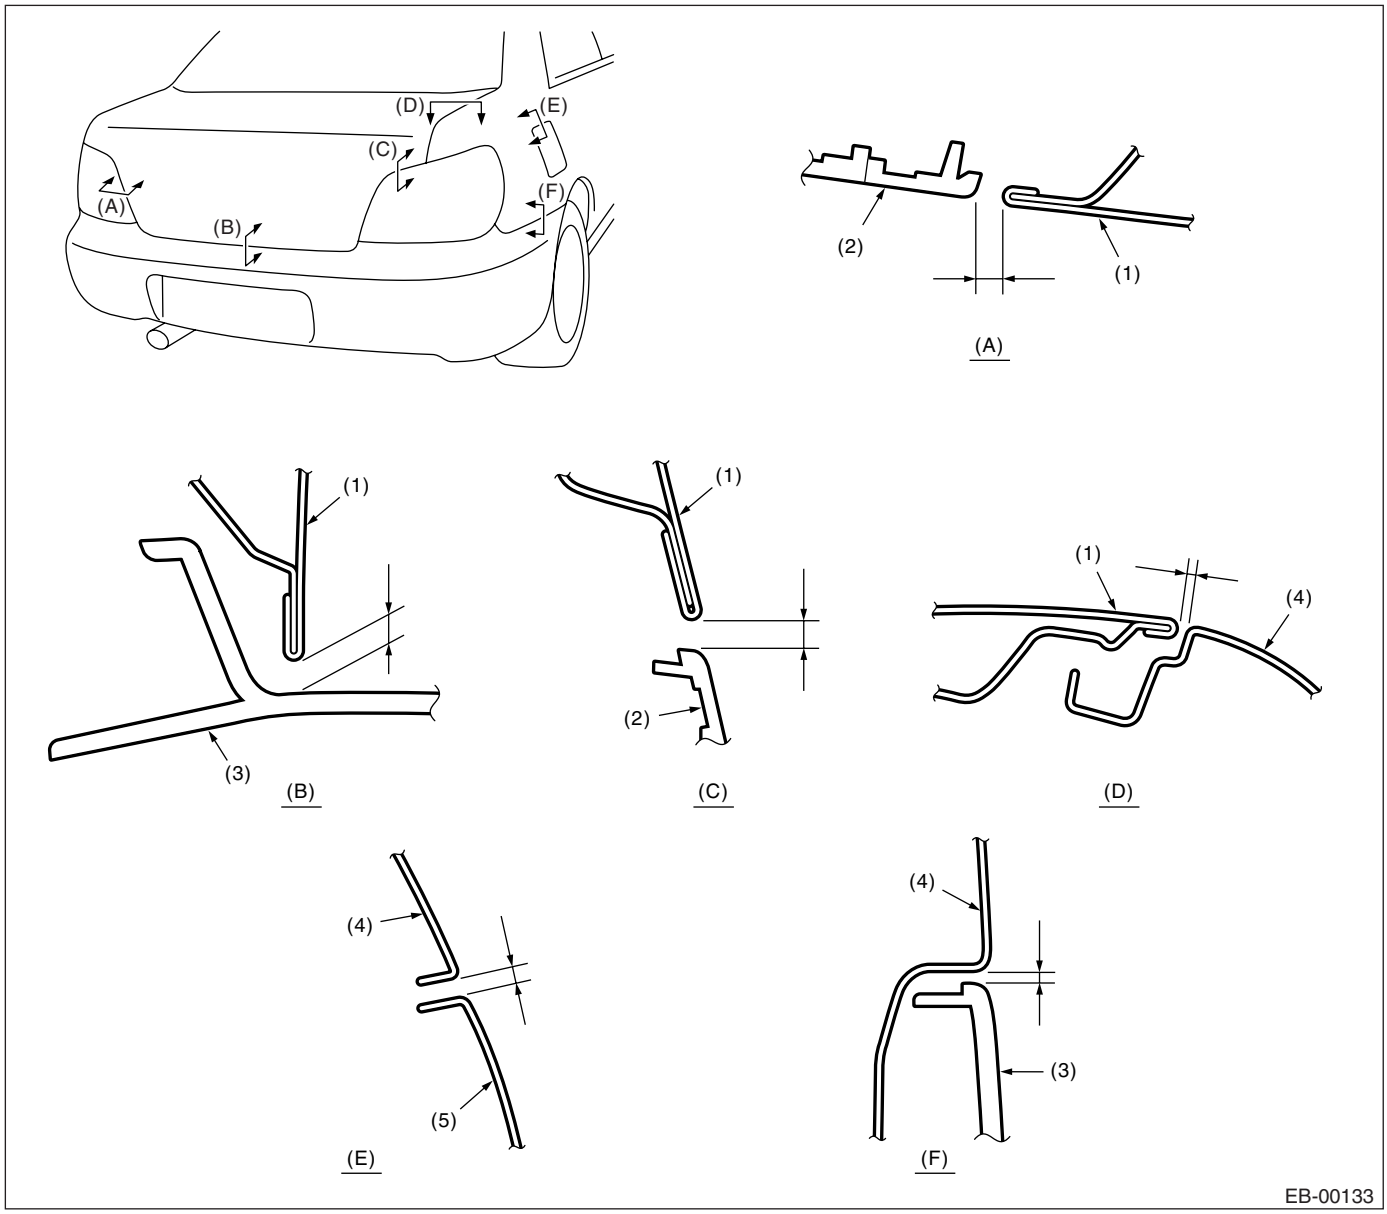

(1) Trunk lid panel
(2) Rear combination light
(3) Rear bumper
(4) Rear fender panel
(5) Fuel lid

Section	Part	Standard
(A)	Trunk lid panel to Rear combination light (Lateral direction)	5.0±1.0 mm (0.20±0.04 in)
(B)	Trunk lid panel to Rear bumper	7.0±1.5 mm (0.28±0.06 in)
(C)	Trunk lid panel to Rear combination light (Longitudinal direction)	7.0±1.0 mm (0.28±0.04 in)
(D)	Trunk lid panel to Rear fender panel	4.0±1.0 mm (0.16±0.04 in)
(E)	Rear fender panel to Fuel lid	3.5±0.5 mm (0.14±0.02 in)
(F)	Rear fender panel to Rear bumper	0.3 — 2.2 mm (0.01 — 0.09 in)

4. REAR (WAGON MODEL)

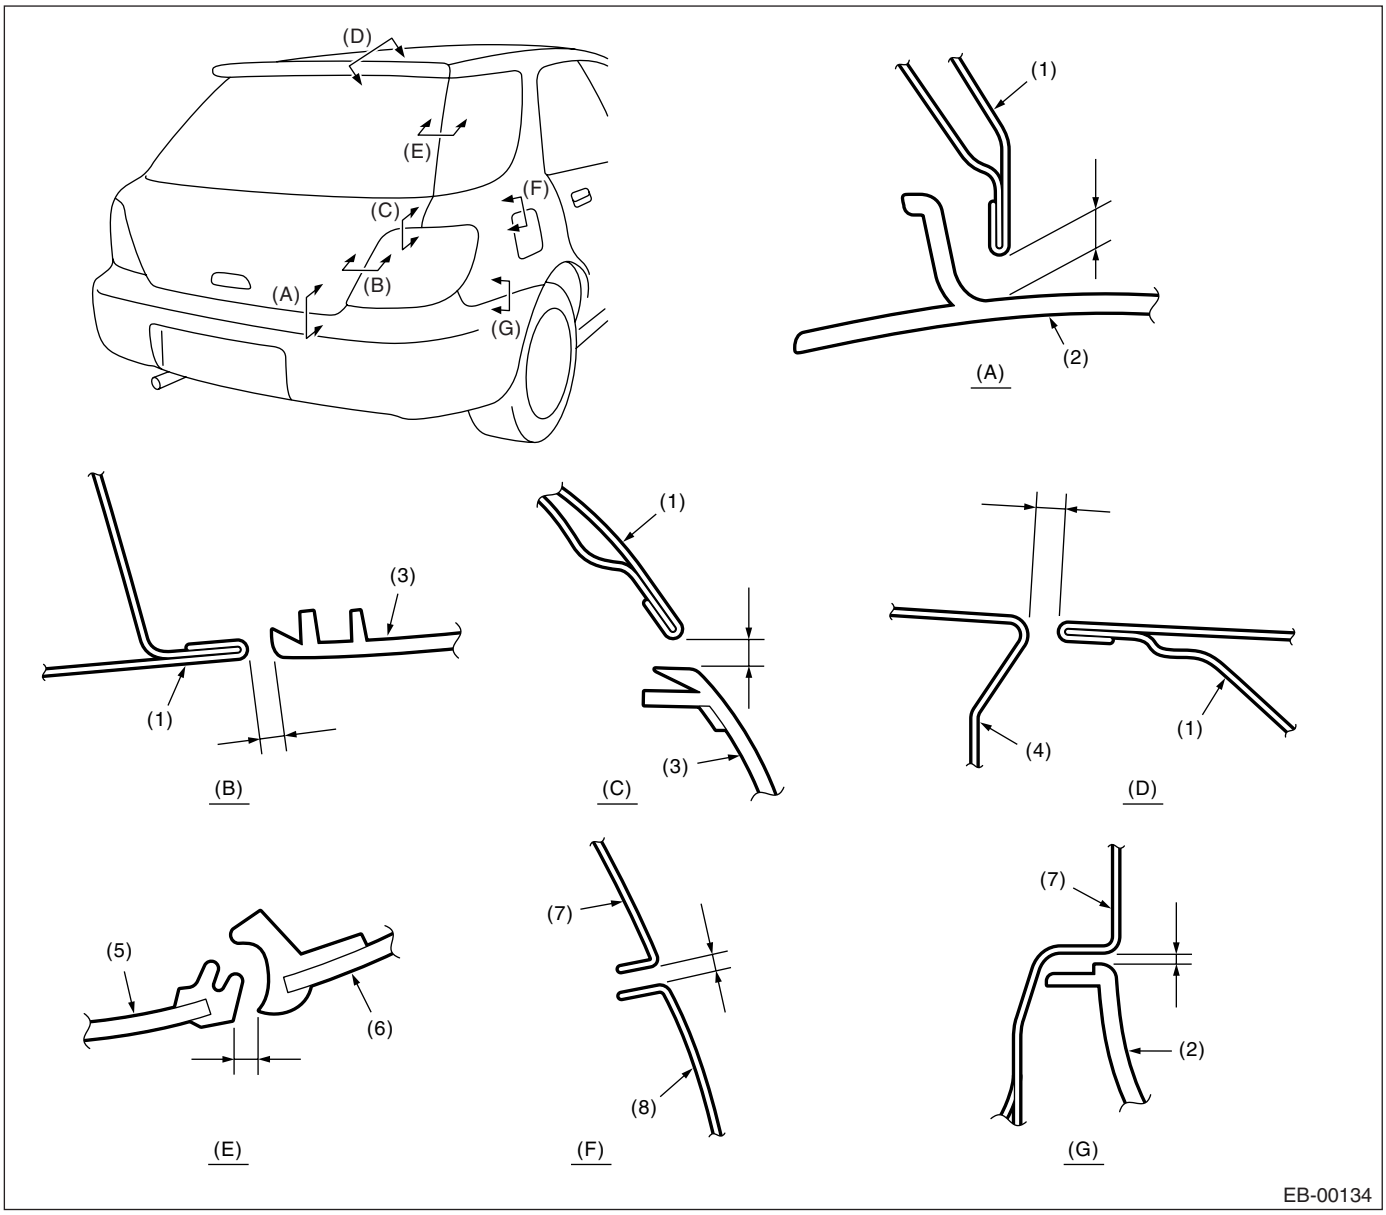

(1) Rear gate panel
(2) Rear bumper
(3) Rear combination light
(4) Roof panel
(5) Rear gate glass
(6) Rear quarter glass
(7) Rear fender panel
(8) Fuel lid

Section	Part	Standard
(A)	Rear gate panel to Rear bumber	8.3±1.5 mm (0.33±0.06 in)
(B)	Rear gate panel to Rear combination light (Lateral direction)	5.0±1.0 mm (0.20±0.04 in)
(C)	Rear gate panel to Rear combiantion light (Longitudinal direction)	6.0±1.0 mm (0.24±0.04 in)
(D)	Roof panel to Rear gate panel	6.1 — 7.6 mm (0.24 — 0.30 in)
(E)	Rear gate glass to Rear quarter glass	6.0±1.5 mm (0.24±0.06 in)
(F)	Rear fender panel to Fuel lid	3.5±0.5 mm (0.14±0.02 in)
(G)	Rear fender panel to Rear bumber	0.3 — 2.2 mm (0.01 — 0.09 in)

B: COMPONENT

1. FRONT HOOD

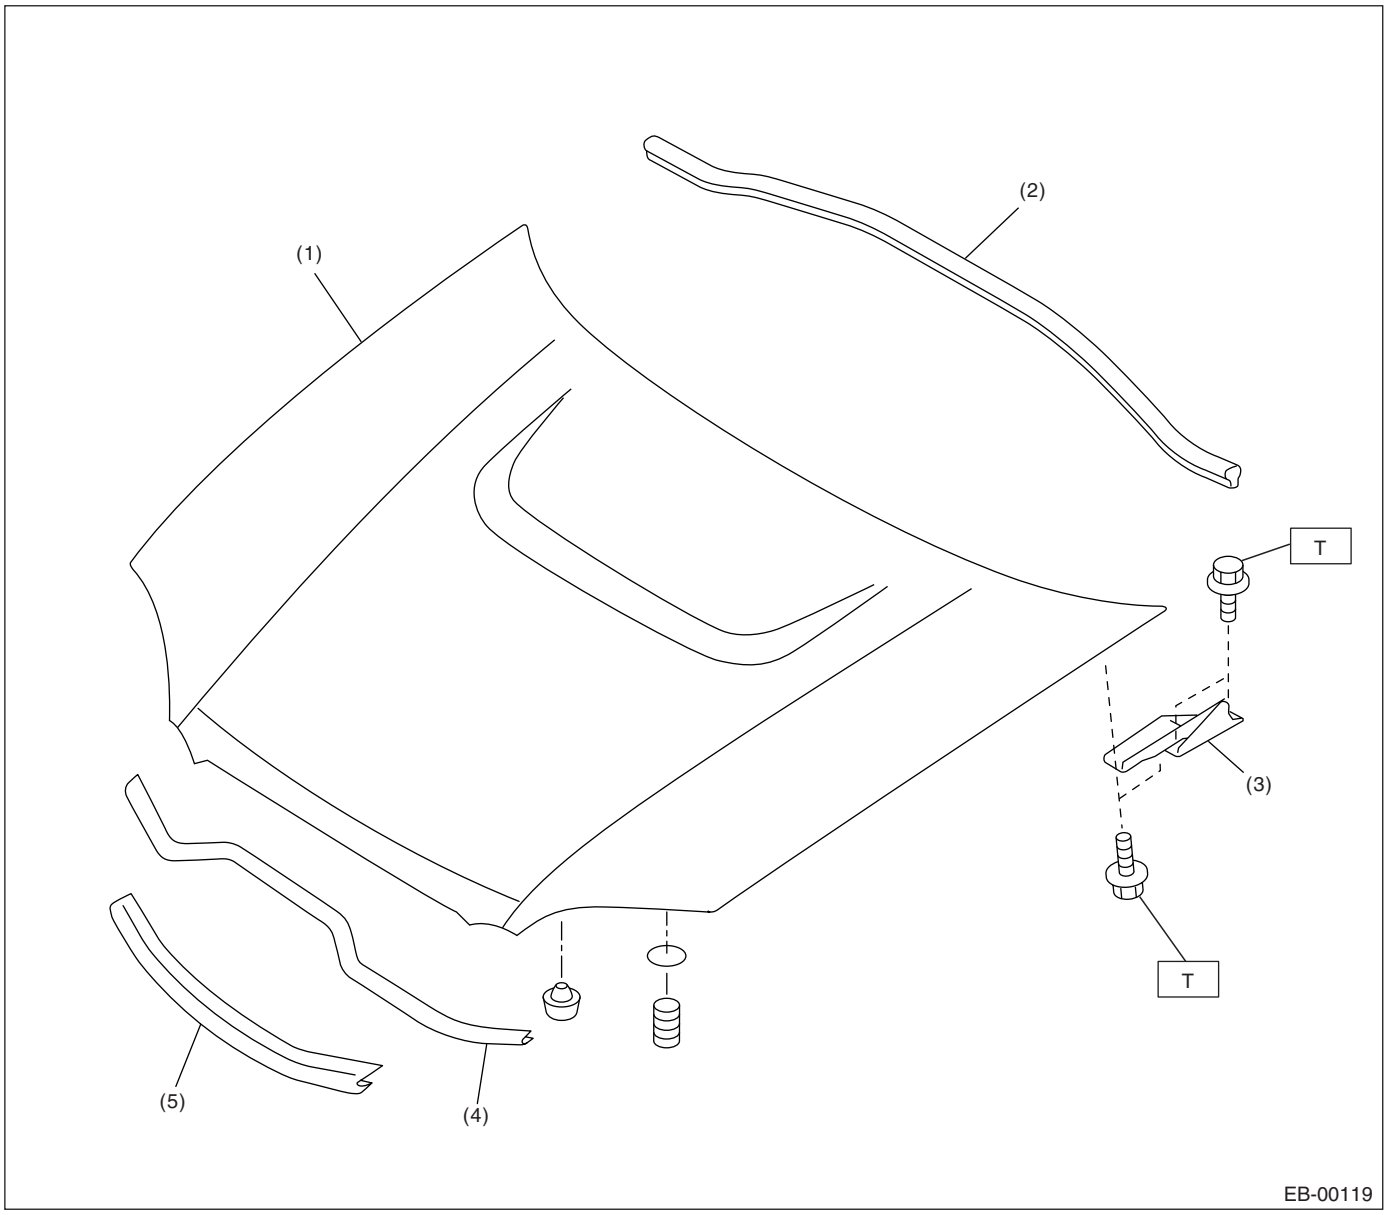

(1) Front hood
(2) Seal (Front panel)
(3) Hinge
(4) Seal (Intake duct) (Turbo model)
(5) Seal (Hood)

Tightening torque: N·m (kgf-m, ft-lb)
T: 24.5 (2.5, 18.1)

2. FRONT FENDER PANEL

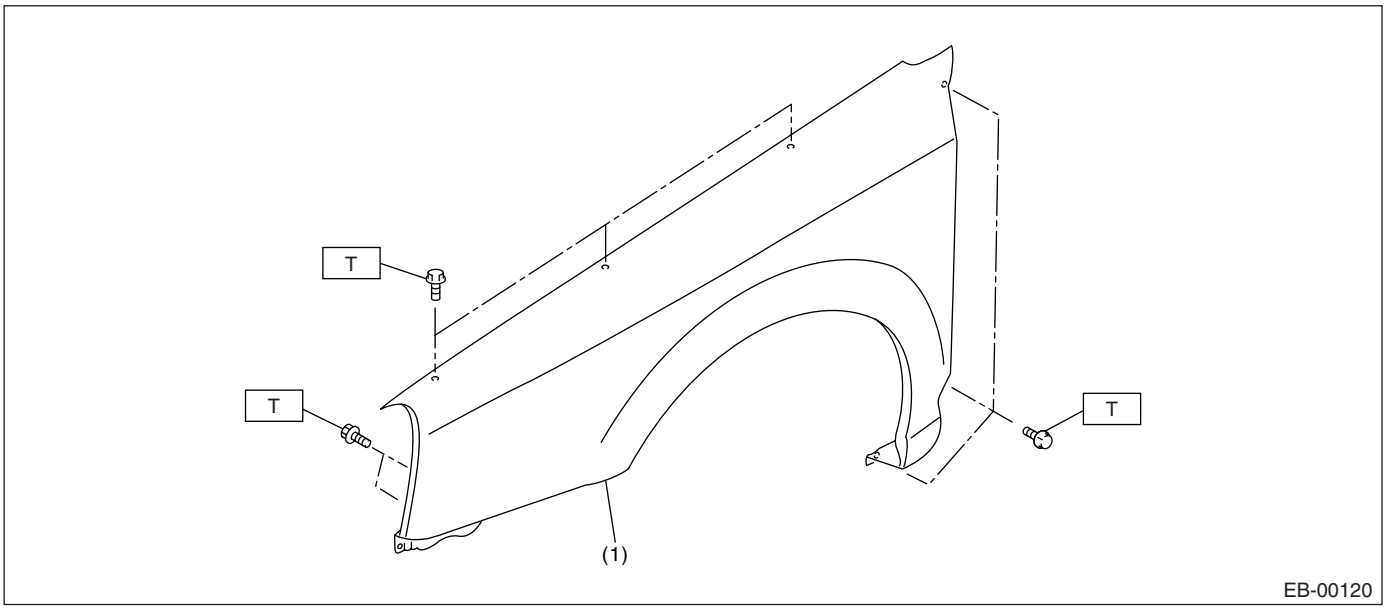

(1) Front fender panel

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.5)

3. FRONT DOOR PANEL

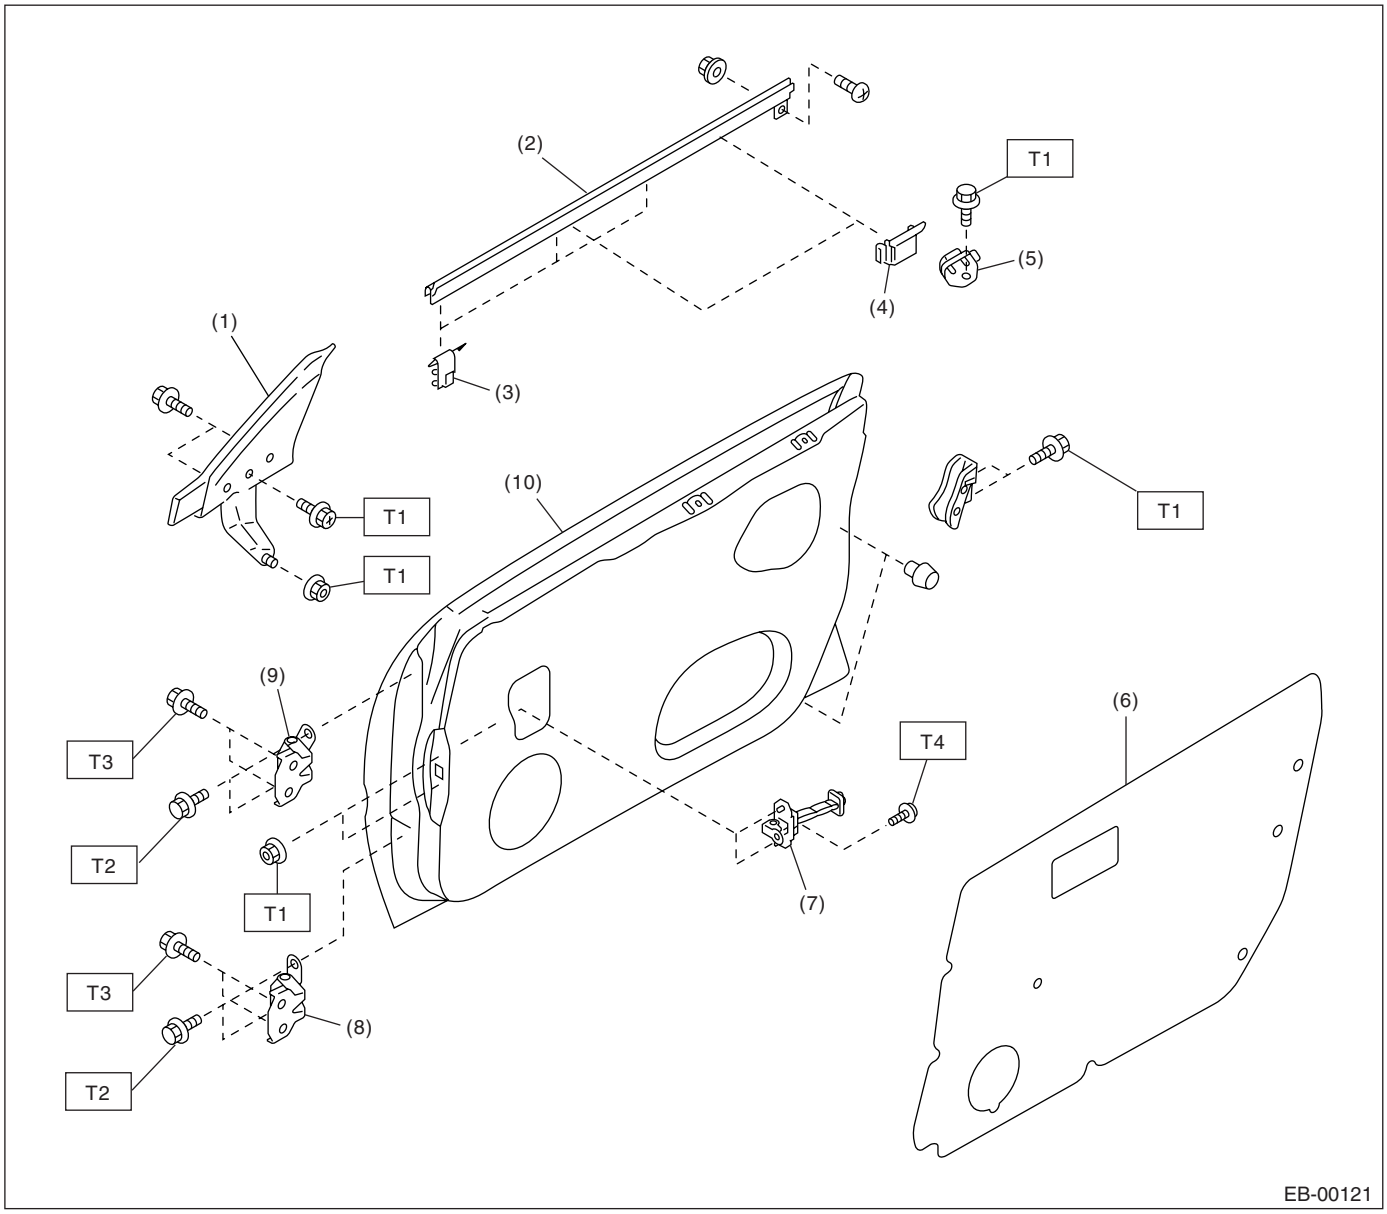

(1)	Gusset	(6)	Sealing cover	***Tightening torque: N·m (kgf-m, ft-lb)***
(2)	Weatherstrip (Outer)	(7)	Checker	***T1: 7.4 (0.75, 5.5)***
(3)	Clip (Weatherstrip, outer)	(8)	Lower hinge	***T2: 24.5 (2.5, 18.1)***
(4)	Stabilizer (Outer)	(9)	Upper hinge	***T3: 29.4 (3.0, 21.7)***
(5)	Stabilizer (Inner)	(10)	Front door panel	***T4: 32.3 (3.3, 23.8)***

4. REAR DOOR PANEL

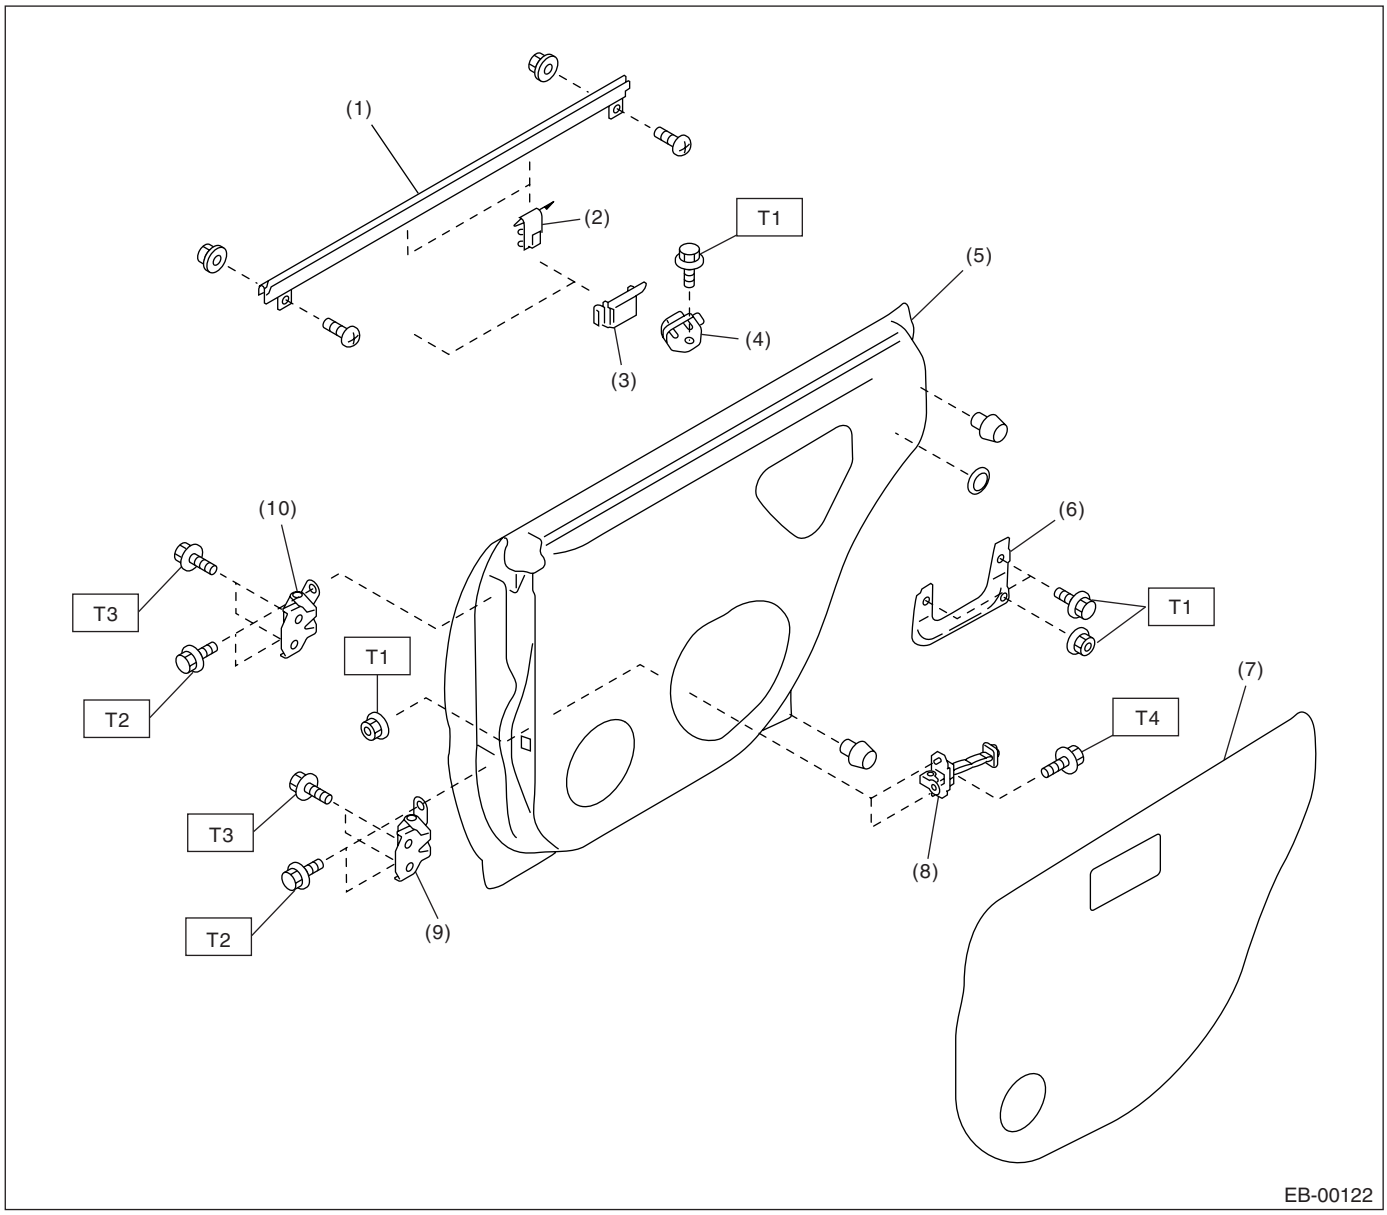

(1)	Weatherstrip (Outer)	(6)	Outer handle bracket	***Tightening torque: N·m (kgf-m, ft-lb)***
(2)	Clip (Weatherstrip, outer)	(7)	Sealing cover	***T1: 7.4 (0.75, 5.5)***
(3)	Stabilizer (Outer)	(8)	Checker	***T2: 24.5 (2.5, 18.1)***
(4)	Stabilizer (Inner)	(9)	Lower hinge	***T3: 29.4 (3.0, 21.7)***
(5)	Rear door panel	(10)	Upper hinge	***T4: 32.3 (3.3, 23.8)***

5. TRUNK LID PANEL

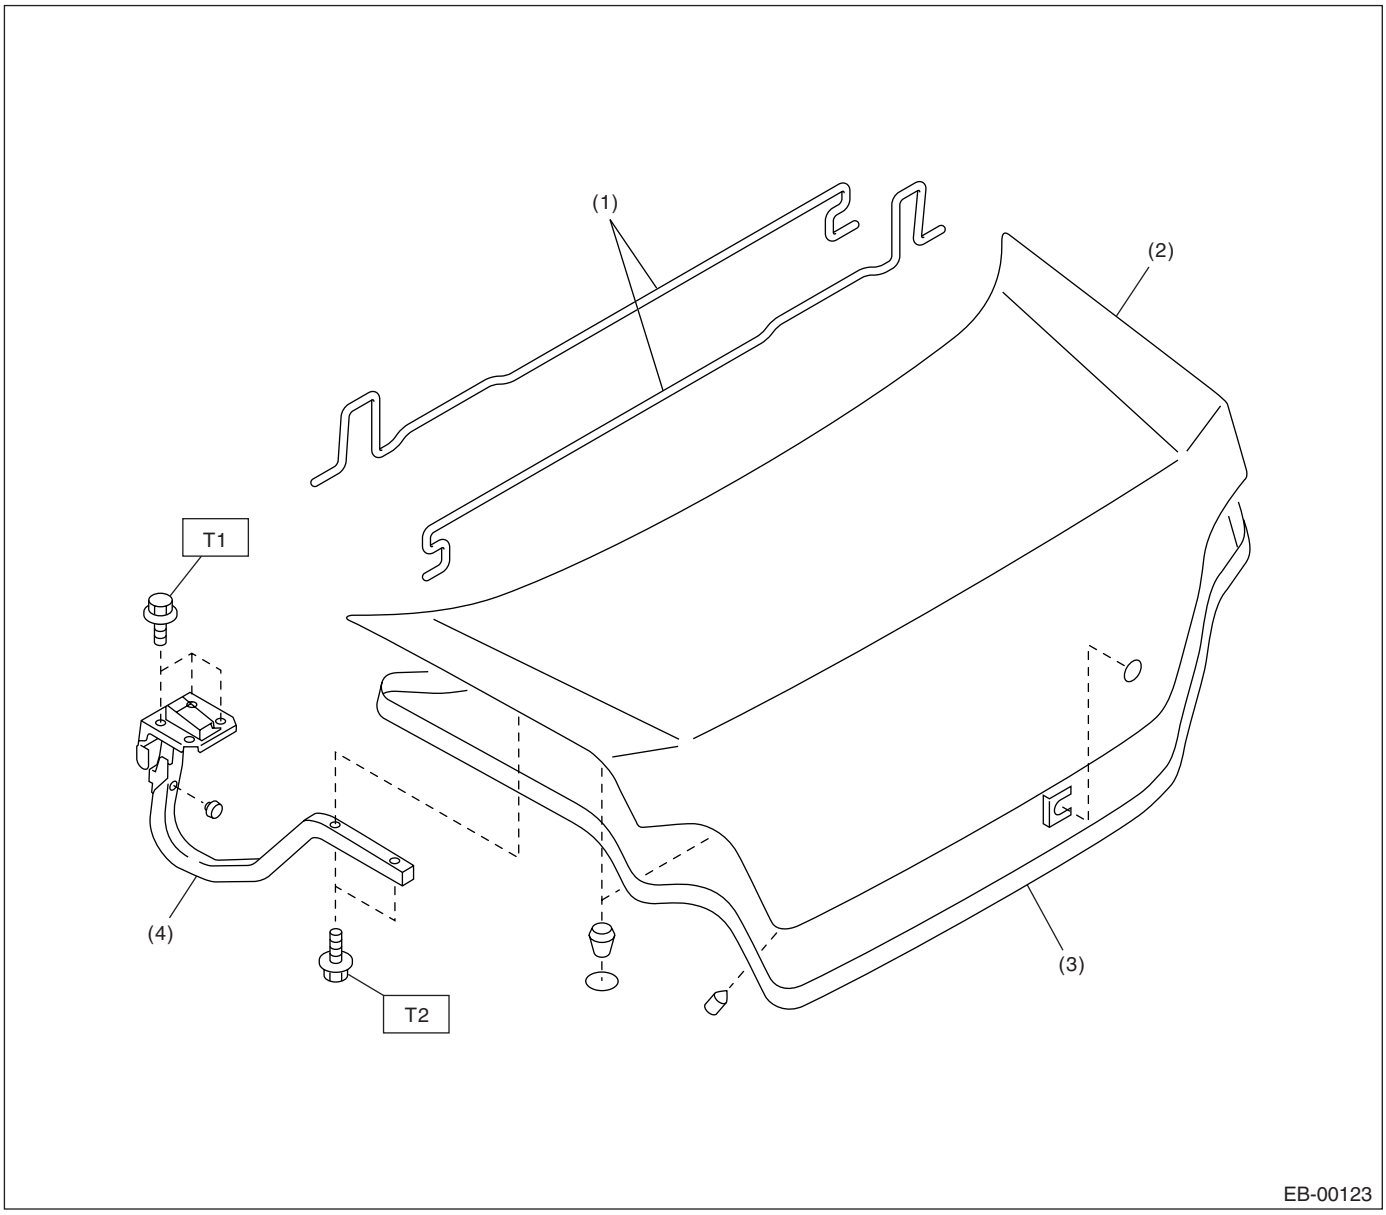

(1) Torsion bar
(2) Trunk lid panel
(3) Weatherstrip
(4) Hinge ASSY

Tightening torque: N·m (kgf-m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 14 (1.43, 10.3)

6. REAR GATE PANEL

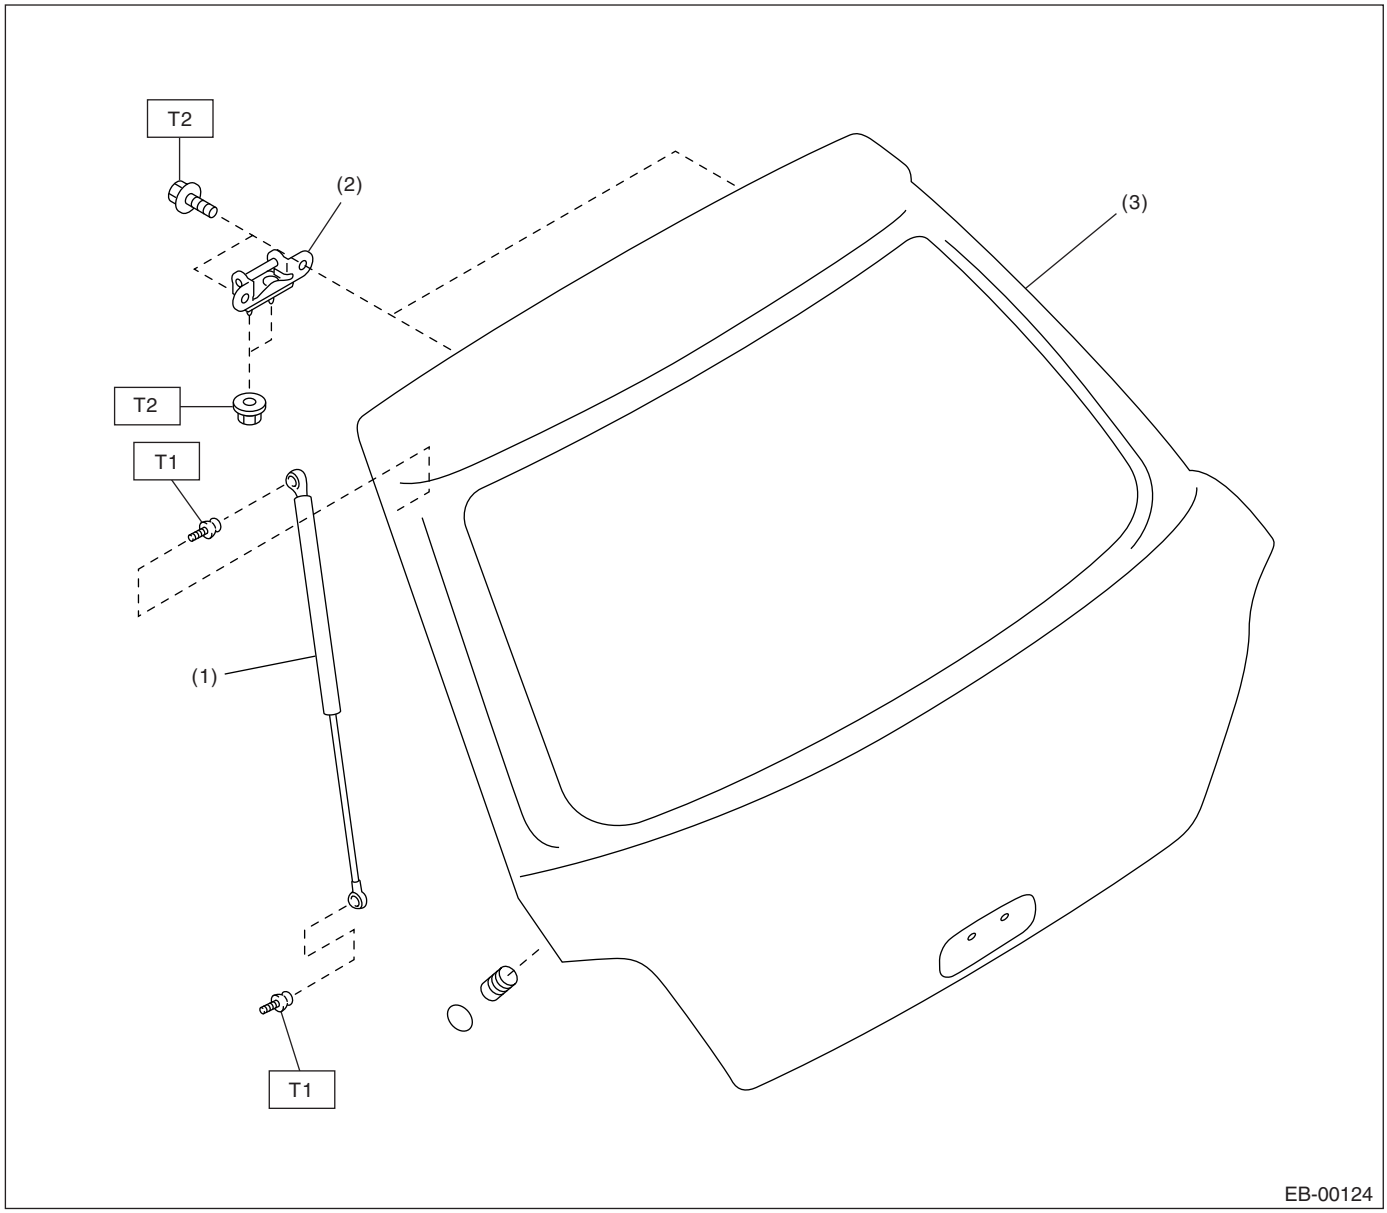

(1) Rear gate damper stay
(2) Hinge
(3) Rear gate panel

Tightening torque: N·m (kgf-m, ft-lb)
T1: 19.6 (2.0, 14.5)
T2: 24.5 (2.5, 18.1)

C: CAUTION

- Exterior body panels are heavy. Do not drop and damage the panels. During removal and installation, do not damage the panel painting surface.
- While removing the mounting bolts, using assistance devices such as a support jack will help support the panel.
- Be careful not to lose small parts.

D: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
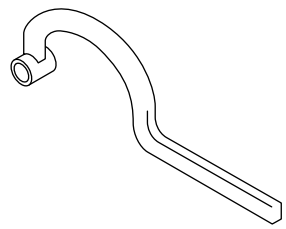 ST-925610000	925610000	WRENCH	Used for removing and installing door hinge.
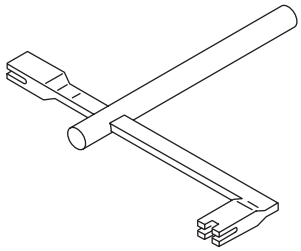 ST-927780000	927780000	REMOVER	Used for removing and installing trunk torsion bar.

2. GENERAL TOOL

TOOL NAME	REMARKS
Support Jack	Used for supporting door panel.

2. Front Hood Panel

A: REMOVAL

1) Open the front hood to remove washer nozzles.
2) Release the clips to remove hood insulator.

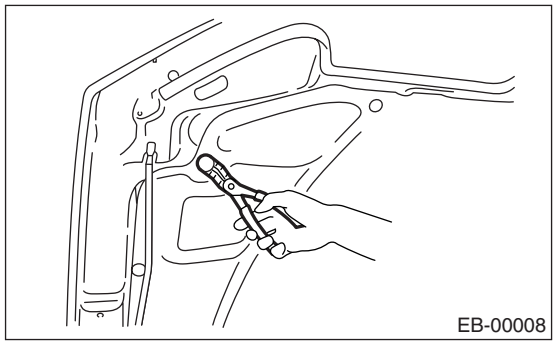

3) Remove the bolts to remove the front hood from hinges.

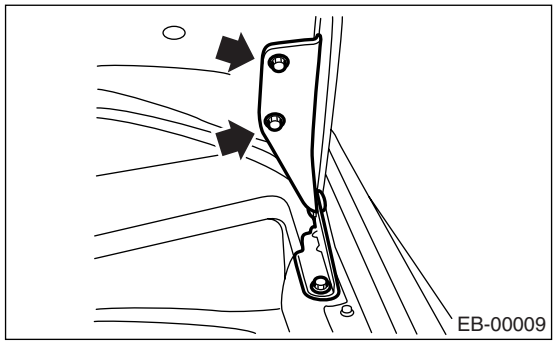

B: INSTALLATION

1) Install in the reverse order of removal.
2) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides.

Tightening torque:
24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

C: ADJUSTMENT

1) Use the hinge mounting holes to align the front hood longitudinally and laterally.

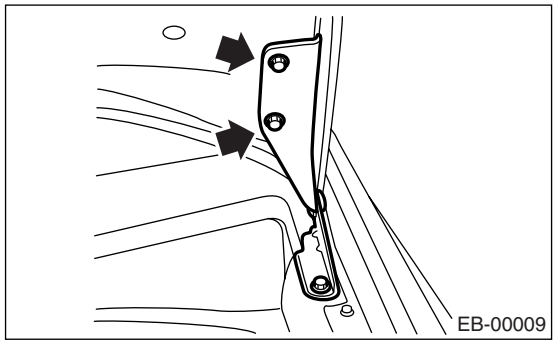

2) Adjust the height at front end of hood. <Ref. to SL-34, ADJUSTMENT, Front Hood Lock Assembly.>
3) Rotate the hood buffer to adjust lateral height.

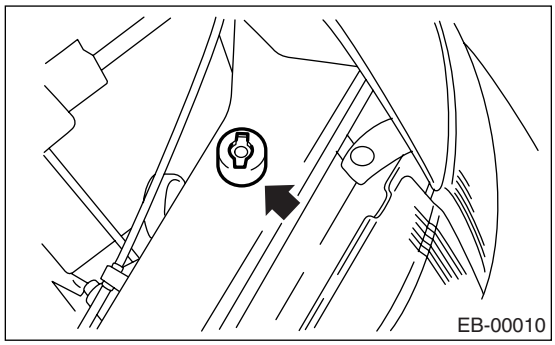

3. Front Fender Panel

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the side sill spoilers. <Ref. to EI-36, Side Sill Spoiler.> (Model with side sill spoiler)
3) Remove the front bumper face. <Ref. to EI-22, REMOVAL, Front Bumper.>
4) Remove the mud guard. <Ref. to EI-31, REMOVAL, Mud Guard.>
5) Loosen the bolts to remove front fender panel.

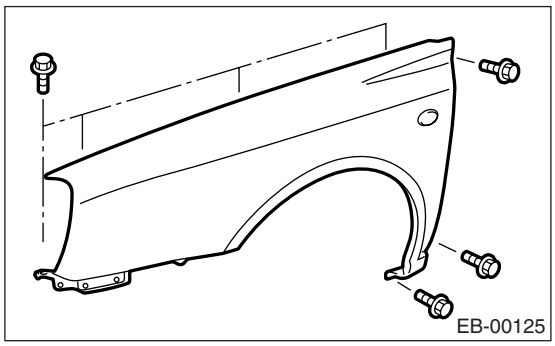

B: INSTALLATION

1) Install in the reverse order of removal.
2) When the front fender panel is installed, clearance between front fender panel and front hood panel must be equal.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.5 ft-lb)

4. Front Door Panel

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
3) Remove the outer mirror assembly. <Ref. to GW-18, REMOVAL, Outer Mirror Assembly.>
4) Remove the front door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
5) Remove the front door regulator and motor. <Ref. to GW-15, REMOVAL, Front Regulator and Motor Assembly.>
6) Remove the front door latch assembly. <Ref. to SL-24, REMOVAL, Front Door Latch Assembly.>
7) Remove the front outer handle. <Ref. to SL-23, REMOVAL, Front Outer Handle.>
8) Remove the front pillar lower trim to disconnect the connector from body harness.

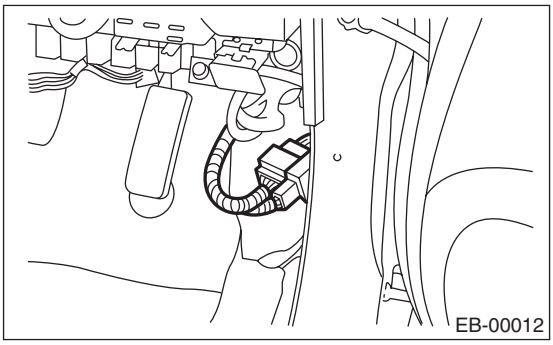
EB-00012

9) Put a wooden block on jack and place the jack under front door panel. Support the front door with the jack to protect it from damage.

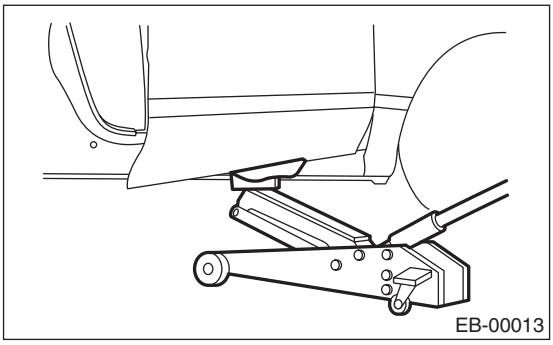
EB-00013

10) Remove the checker bolts.

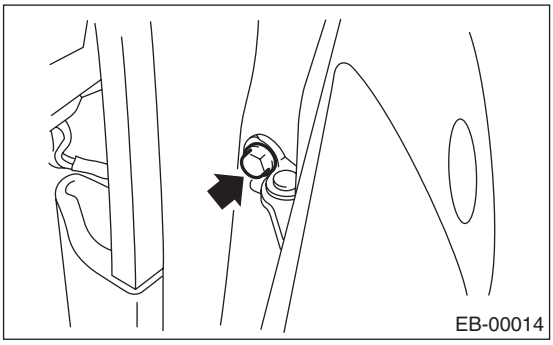
EB-00014

11) Remove the door-side bolts for upper and lower hinges to remove the front door panel.

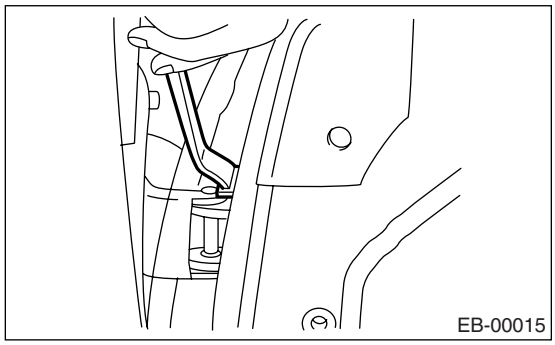
EB-00015

B: INSTALLATION

1) Install in the reverse order of removal.
2) Apply grease to the sliding area of door hinges.

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to EB-7, FRONT FENDER PANEL, COMPONENT, General Description.>

C: ADJUSTMENT

1) Using the ST, loosen the body-side bolts of upper and lower hinges to align the position of front door panel longitudinally and vertically.
ST 925610000 DOOR HINGE WRENCH

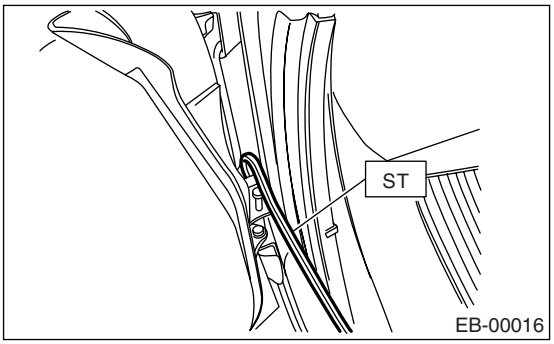

2) Loosen the screw (A) and tap striker (B) using a plastic hammer to adjust striker to align the position of front door panel laterally at the rear end.

CAUTION:
Do not use an impact wrench. Welding area on the striker nut plate is easily broken.

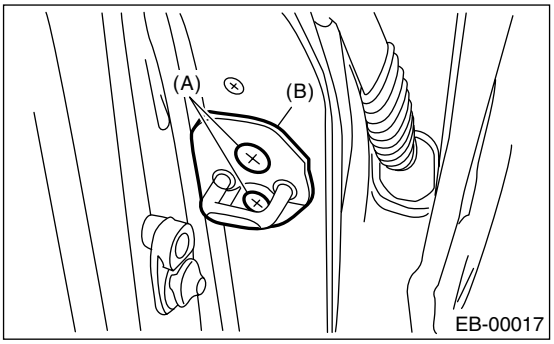

5. Front Sealing Cover

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the front door trim. <Ref. to EI-37, REMOVAL, Front Door Trim.>
3) Remove the front speaker. <Ref. to ET-6, REMOVAL, Front Speaker.>
4) Remove the door trim bracket.

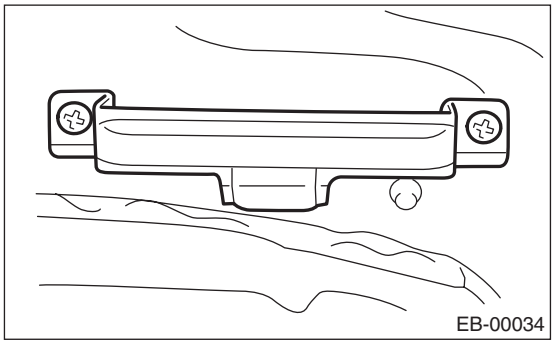

5) Remove the sealing cover.

NOTE:
• Carefully remove the butyl tape. Excessive force will easily break the cover.
• If the cover gets broken, replace it with a new one.

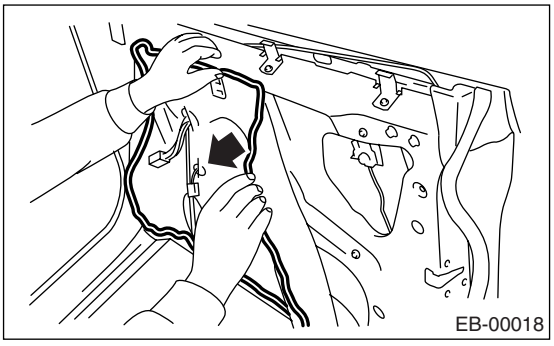

B: INSTALLATION

1) Install in the reverse order of removal.
2) When replacing the sealing cover, use the butyl tape.
3) Press the butyl tape-applied area firmly to prevent any floating on surface.

Butyl tape:
3M8626 or equivalent

NOTE:
• Apply a uniform bead of butyl tape.
• Attach the sealing cover, keeping it from becoming wrinkled.
• Breaks in the bead will allow water leakage and contamination.

C: INSPECTION

If the sealing cover is damaged, replace it with a new one.

6. Rear Door Panel

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
3) Remove the rear door glass. <Ref. to GW-21, REMOVAL, Rear Door Glass.>
4) Remove the rear door regulator and motor assembly. <Ref. to GW-23, REMOVAL, Rear Regulator and Motor Assembly.>
5) Remove the rear door latch. <Ref. to SL-28, REMOVAL, Rear Door Latch Assembly.>
6) Remove the rear outer handle. <Ref. to SL-27, REMOVAL, Rear Outer Handle.>
7) Remove the center pillar lower trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
8) Disconnect the connector of door harness.

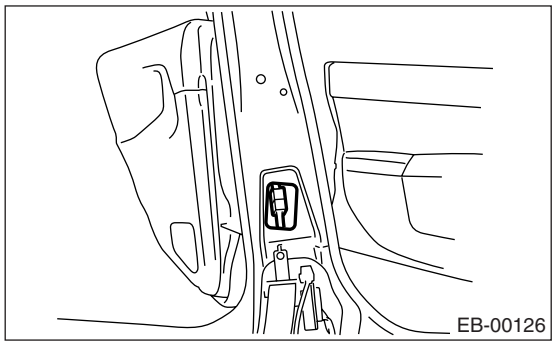
EB-00126

9) Put a wooden block on the jack and place the jack under the rear door. Support the rear door with jack to protect it.

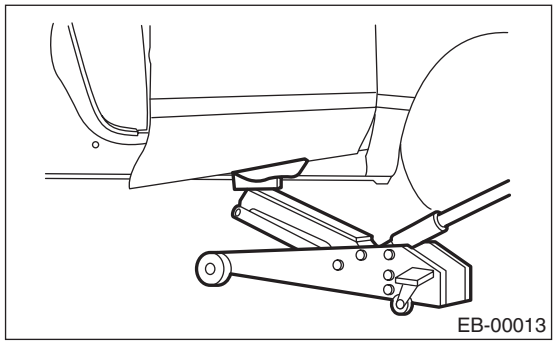
EB-00013

10) Remove the checker bolts.

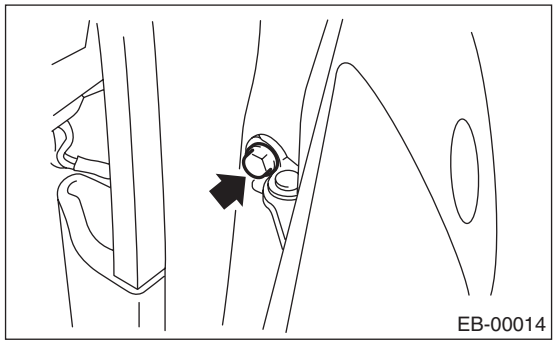
EB-00014

11) Remove the door-side bolts for upper and lower hinges to remove the rear door panel.

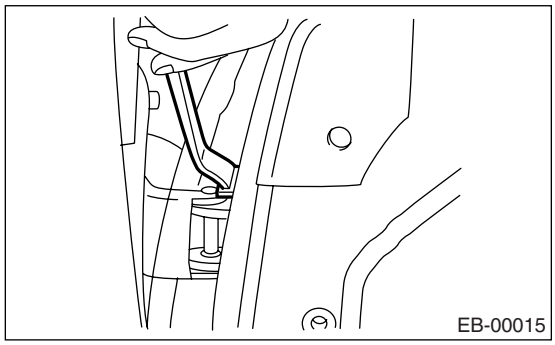
EB-00015

B: INSTALLATION

1) Install in the reverse order of removal.
2) Apply grease to the sliding area of door hinges.

Tightening torque:
Refer to COMPONENT in General Description.
<Ref. to EB-8, FRONT DOOR PANEL, COMPONENT, General Description.>

C: ADJUSTMENT

1) Open the rear door, and then loosen the door-side bolts of upper and lower hinges to align the position of rear door panel longitudinally and vertically.

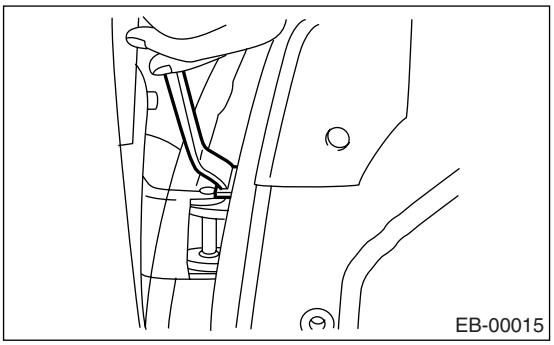

2) Loosen the screw (A), and then tap striker (B) using plastic hammer to adjust striker to align the position of rear door panel laterally at the rear end.

CAUTION:
Do not use an impact wrench. The welding area on the striker nut plate is easily broken.

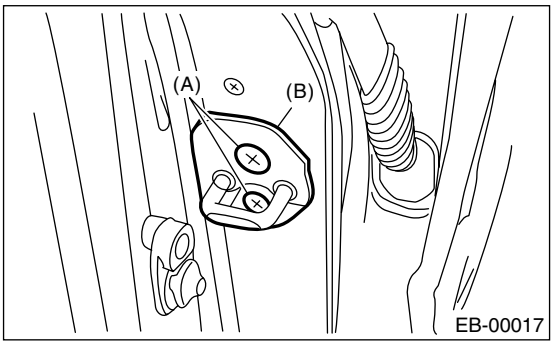

7. Rear Sealing Cover

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear door trim. <Ref. to EI-38, REMOVAL, Rear Door Trim.>
3) Remove the rear speaker. <Ref. to ET-8, REMOVAL, Rear Speaker.>
4) Remove the door trim bracket.

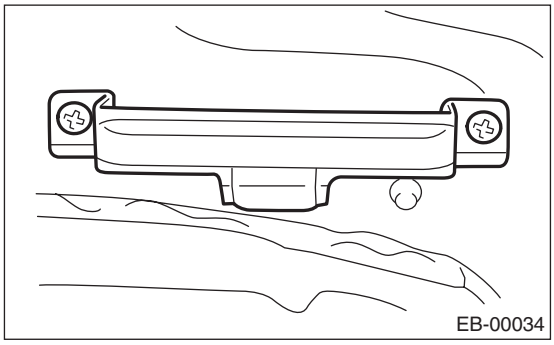

5) Remove the sealing cover.

NOTE:
• Carefully remove the butyl tape. Excessive force will easily break the cover.
• If the cover gets broken, replace it with a new one.

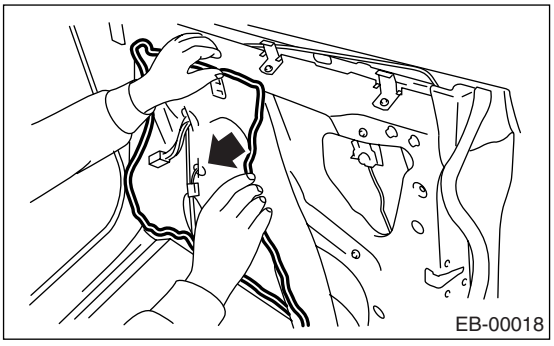

B: INSTALLATION

1) Install in the reverse order of removal.
2) When replacing the sealing cover, use butyl tape.
3) Press the butyl tape-applied area firmly to prevent any floating on surface.

Butyl tape:
3M8626 or equivalent

NOTE:
• Apply an uniform bead of butyl tape.
• Attach the sealing cover, keeping it from becoming wrinkled.
• Breaks in the bead will allow water leakage and contamination.

C: INSPECTION

If the sealing cover is damaged, replace it with a new one.

8. Trunk Lid Panel

A: REMOVAL

1. TRUNK LID

1) Open the trunk lid.
2) Disconnect the trunk lid connector.
3) Loosen the trunk lid mounting bolts to remove the trunk lid from hinges.

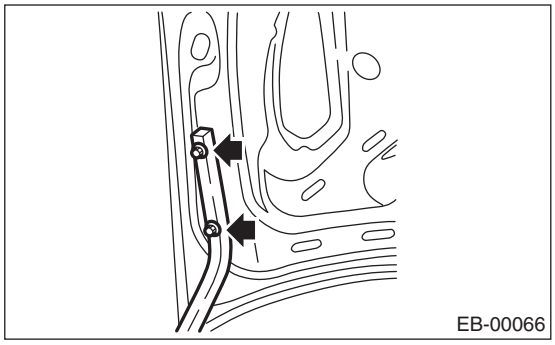

2. TORSION BAR

1) Open the trunk lid.
2) Using the ST, remove the torsion bar from hinge link.
ST 927780000 REMOVER

CAUTION:
During removal and installation, carefully handle the torsion bar, because it will generate reactive force.

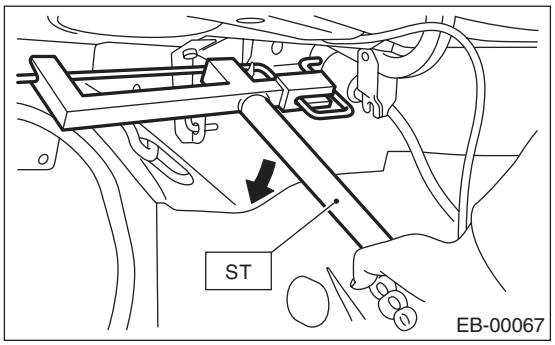

3) Remove the right/left torsion bars.

CAUTION:
Be careful not to get hit by the trunk lid, because the trunk lid will slam shut after the torsion bar is removed.

B: INSTALLATION

1. TRUNK LID

1) Install in the reverse order of removal.
2) Install the trunk lid with uniform clearance.

Tightening torque:
14 N·m (1.43 kgf-m, 10.3 ft-lb)

2. TORSION BAR

1) Install in the reverse order of removal.
2) Apply grease to the rotating area of hinges and mating surface of torsion bar.

9. Rear Gate Panel

A: REMOVAL

1. REAR GATE PANEL

1) Disconnect the ground cable from battery.
2) Open the rear gate.
3) Remove the rear gate outer handle. <Ref. to SL-30, REMOVAL, Rear Gate Outer Handle.>
4) Remove the rear gate latch assembly. <Ref. to SL-31, REMOVAL, Rear Gate Latch Assembly.>
5) Remove the rear wiper. <Ref. to WW-17, REMOVAL, Rear Wiper Motor.>
6) Disconnect the connectors of rear wiper, rear defogger and other lighting devices.
7) Disconnect the washer hose.
8) Remove the rubber duct (A) connection, and then pull out the harness and washer hose from rear gate.

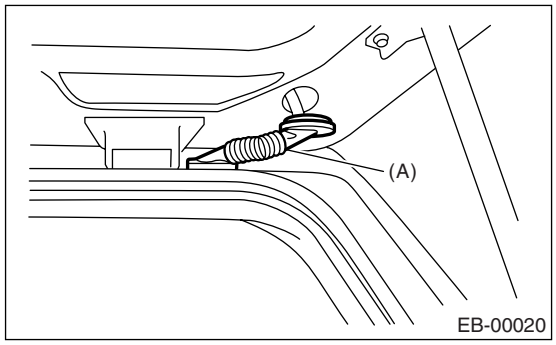

9) Using a support, support the rear gate while removing the rear gate damper stay mounting bolts.

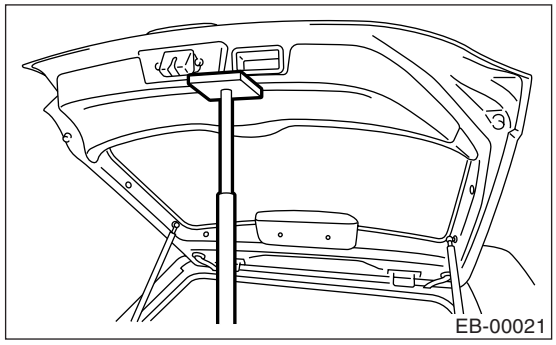

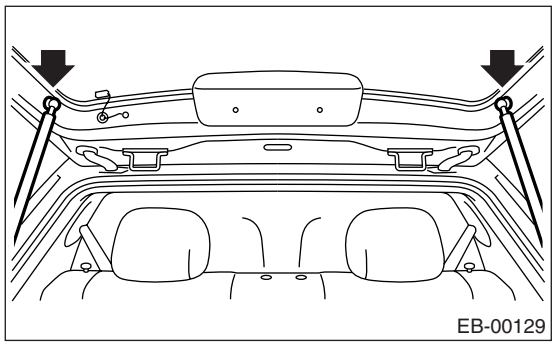

CAUTION:
When the rear gate is released, it may hit and damage the body. To prevent this, place a shop cloth between the body and gate.

10) Loosen the rear gate bolts to remove rear gate.

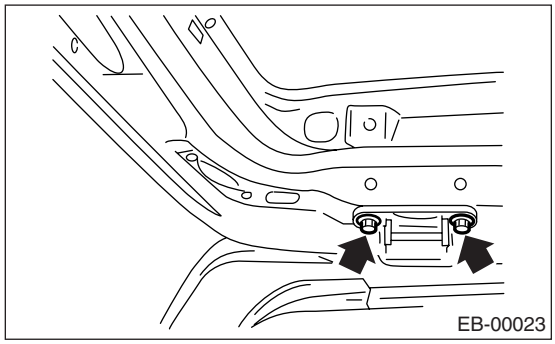

2. REAR GATE DAMPER STAY

1) Open the rear gate. Use a jack to support the rear gate.

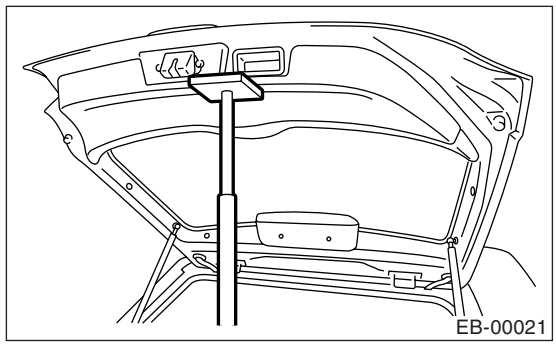

NOTE:
After the rear gate damper stay is removed, the rear gate cannot stay open. Supporting the rear gate with a jack, remove the bolts.

CAUTION:
- **Do not damage the piston rods and oil seals.**
- **Never disassemble the cylinders: They contain gas.**

2) Loosen the bolts to remove the rear gate damper stay from rear gate.

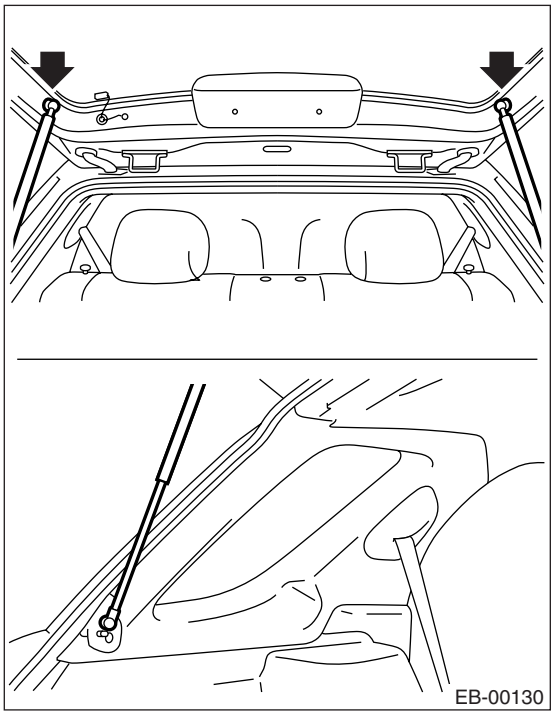

B: INSTALLATION

1. REAR GATE PANEL

1) Install in the reverse order of removal.
2) Install the rear gate panel with uniform clearance to the body.
Refer to COMPONENT of General Description for tightening torque. <Ref. to EB-10, TRUNK LID PANEL, General Description.>

CAUTION:
Do not damage the painted surfaces of body and rear gate panel.

2. REAR GATE DAMPER STAY

1) Install the mounting bolt (A) to the rear gate and body.

Tightening torque:
19.6 N·m (2.0 kgf-m, 14.5 ft-lb)

2) Firmly install the rear gate damper stay (B) to mounting bolt (A).

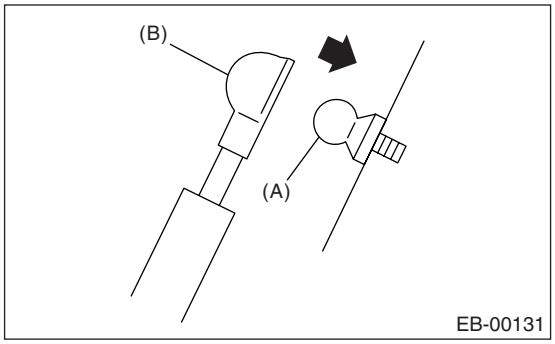

NOTE:
After supporting the rear gate with a jack, start operation.

C: DISPOSAL

1. REAR GATE DAMPER STAY

CAUTION:
Gas is colorless, odorless, and harmless. However, gas pressure may spray the cutting powder or oil. Be sure to wear dust-resistant goggles.

1) Cover with a vinyl case as shown in the figure.

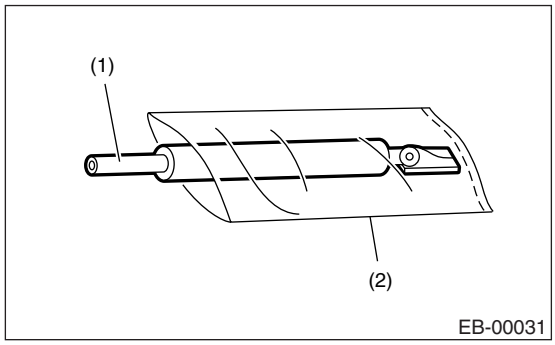

(1) Rear gate damper stay
(2) Vinyl sack

NOTE:
Prevent the vinyl case from being caught by drill cutting edge

2) Lift the body side slightly with piston rods fully extended, and secure the body side on vise stand. Drill a hole in 2 to 3 mm (0.08 to 0.12 in) diameter at a point 10 to 200 mm (0.39 to 7.87 in) from door side, and bleed the rear gate damper stay completely.

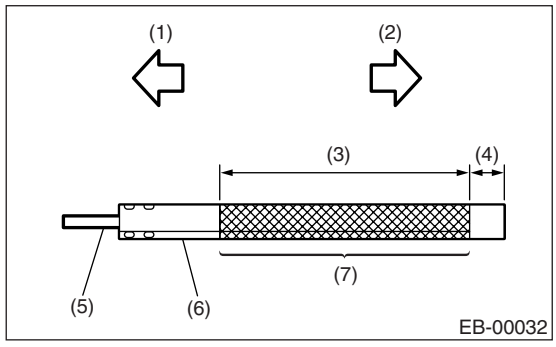

(1) Body side
(2) Door side
(3) 190 mm (7.48 in)
(4) 10 mm (0.39 in)
(5) Piston rod
(6) Cylinder
(7) Portion to be drilled

CRUISE CONTROL SYSTEM

CC

Page

1. General Description 2
2. Actuator 4
3. Cruise Control Module 5
4. Cruise Control Main Switch 6
5. Cruise Control Command Switch 7
6. Stop and Brake Switch 9
7. Clutch Switch 10
8. Inhibitor Switch 11

1. General Description

A: COMPONENT

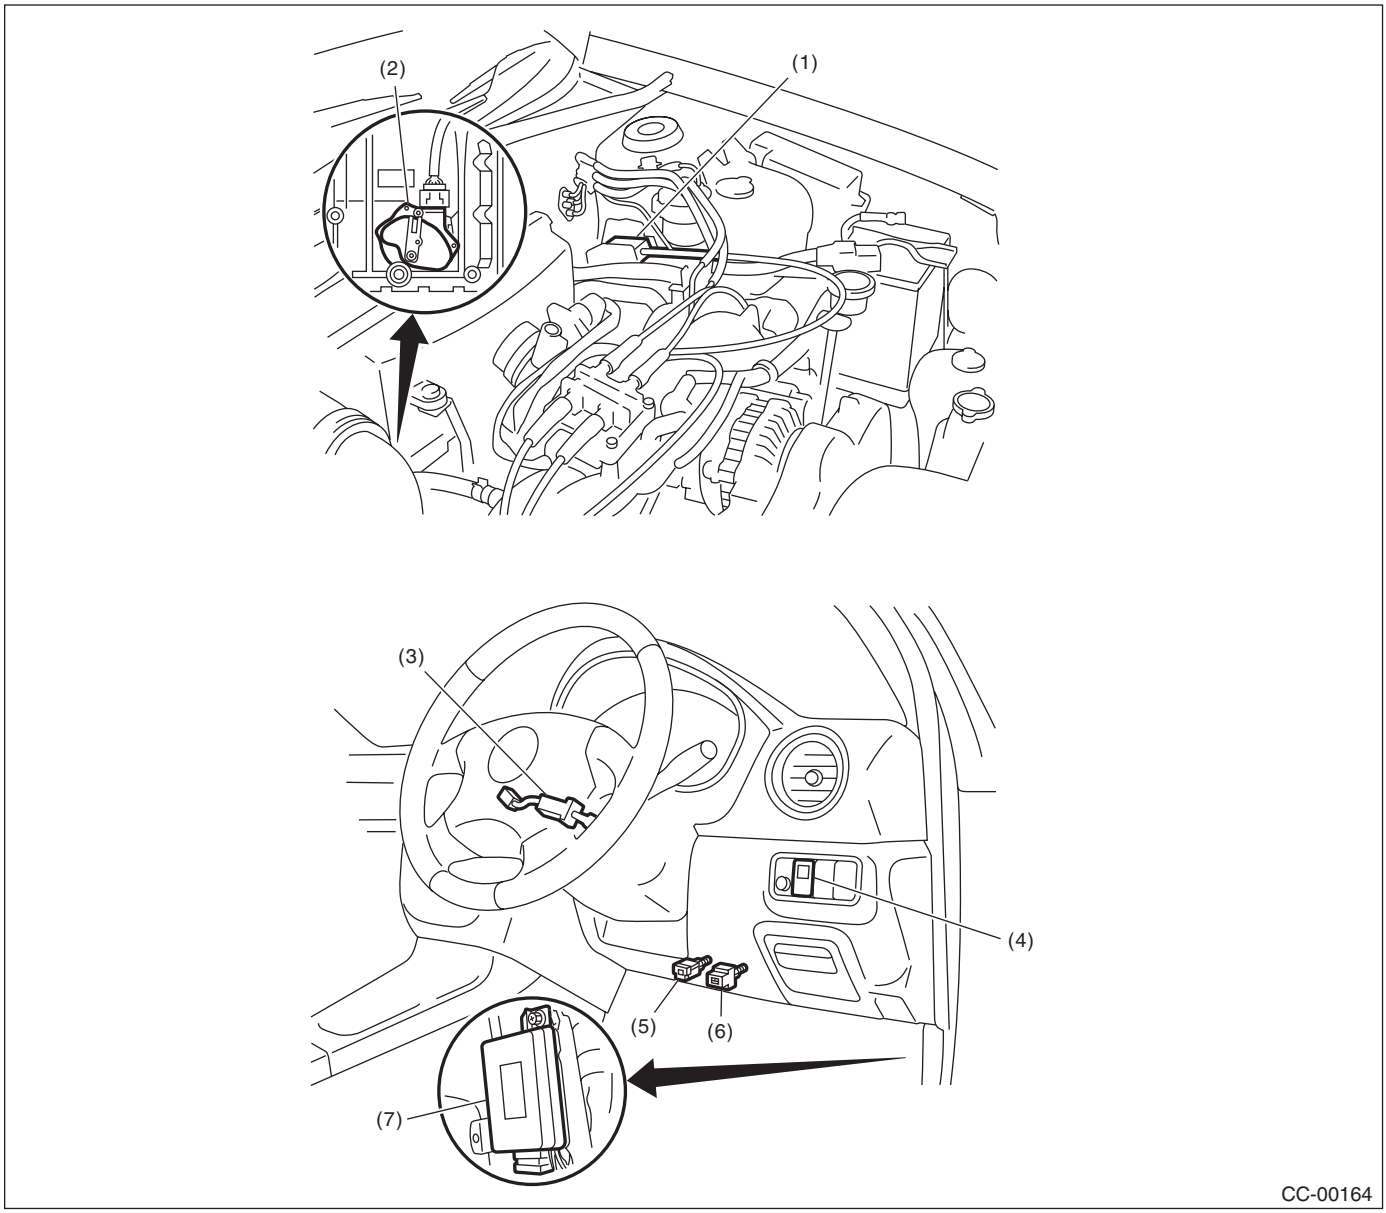

(1) Actuator
(2) Inhibitor switch (AT model)
(3) Cruise control command switch
(4) Cruise control main switch
(5) Clutch switch (MT model)
(6) Stop and brake switch
(7) Cruise control module

B: CAUTION

• Before disassembling or reassembling parts, always disconnect the battery ground cable. When repairing the radio, control module and other parts with memory functions, make note of the memory before disconnecting the battery ground cable. All memory will be erased.
• Reassemble parts in the reverse order of disassembly unless otherwise indicated.
• Adjust parts to specifications specified in this manual.
• Connect the connectors and hoses securely during reassembly.
• After reassembly, ensure functional parts operate properly.

C: PREPARATION TOOL

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.

2. Actuator

A: REMOVAL

CAUTION:
• Be careful not to apply excessive load to the wire cable when adjusting and/or installing; otherwise, the actuator may be deformed or damaged.
• Do not bend the cable sharply with a radius less than 100 mm (3.94 in); otherwise, cable may bend permanently, resulting in poor performance.
• When installing the cable, be careful not to sharply bend or pinch the inner cable; otherwise, the cable may break.

1) Disconnect the ground cable from battery.
2) Remove the clip bands from cruise control cable.
3) Loosen the nut which secures cruise control cable end to throttle cam, and then remove the cable from throttle cam.

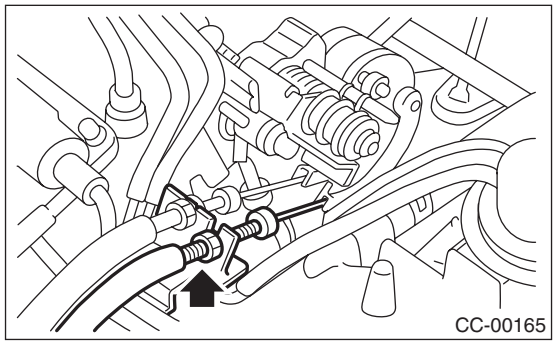
CC-00165

4) Remove the actuator attaching bolts.
5) Remove the actuator while disconnecting the connector.

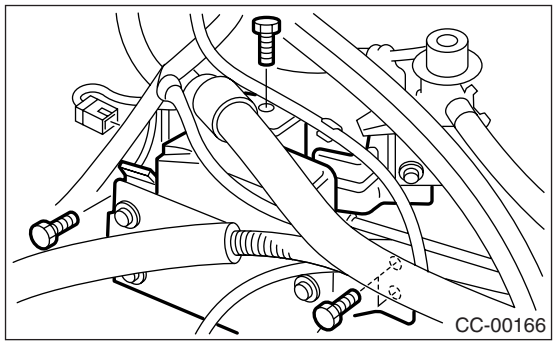
CC-00166

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)
Cable end nut:
12 N·m (1.2 kgf-m, 8.7 ft-lb)

NOTE:
(A): Must be adjusted when the cable end outer is fixed in place, so that gap between throttle cam and lever is 0 — 1 mm (0 — 0.04 in), otherwise, inner cable deflection (D) is 1 — 8 mm (0.039 — 0.315 in) when the throttle cable is installed.
(Must be attached while the throttle cam is being pulled by wire cable.)
(B): Must be coated evenly on the cam end inner connection.
(C): Cover must be inserted securely, until tip of cable touches cover stopper.

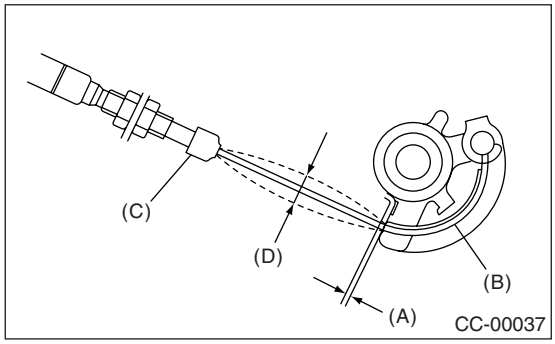

CC-00037

C: INSPECTION

Measure the cruise control actuator resistance.

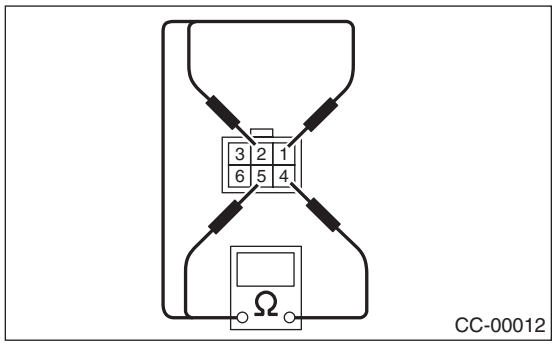

CC-00012

Terminal No.	Standard value
4 and 1	Approx. 5 Ω
4 and 2	Approx. 5 Ω
4 and 5	Approx. 5 Ω
3 and 6	Approx. 39 Ω

If NG, replace the cruise control actuator.

3. Cruise Control Module

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the side sill front cover.

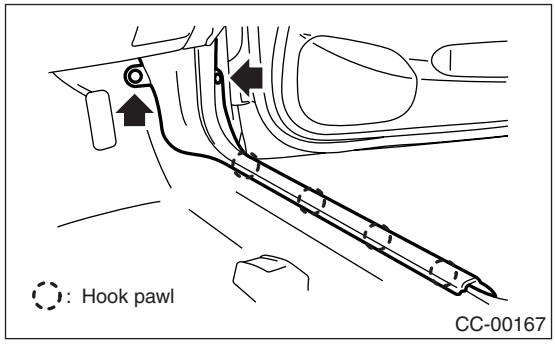

3) Disconnect the connector from cruise control module.
4) Remove the bolt, then detach the cruise control module (A).

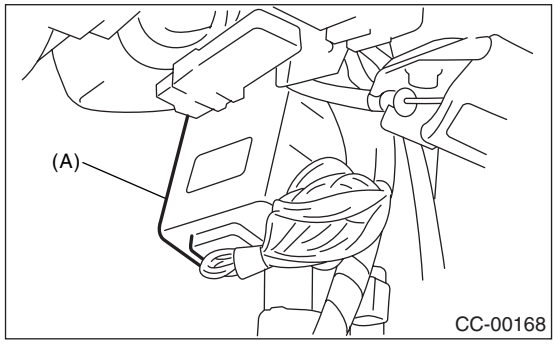

B: INSTALLATION

Install in the reverse order of removal.

4. Cruise Control Main Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the screws and clip from instrument panel lower cover.
3) Remove the instrument panel lower cover.

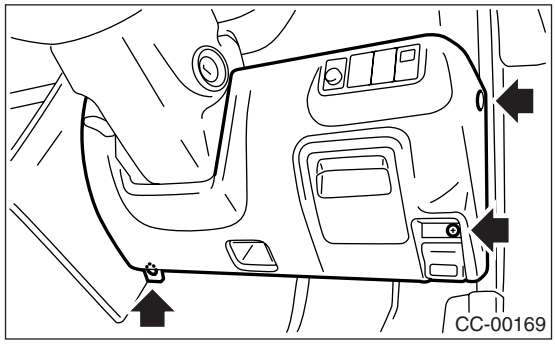

4) Disconnect the connector from cruise control main switch.

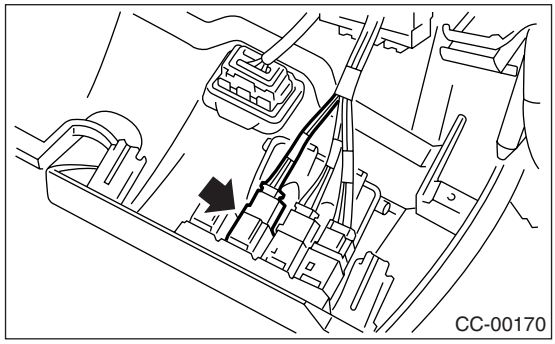

5) Remove the main switch by pushing it outward.

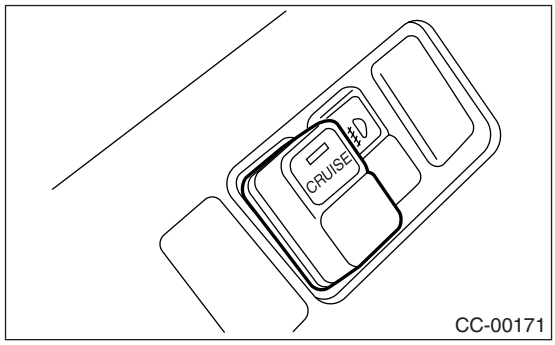

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the cruise control main switch resistance.

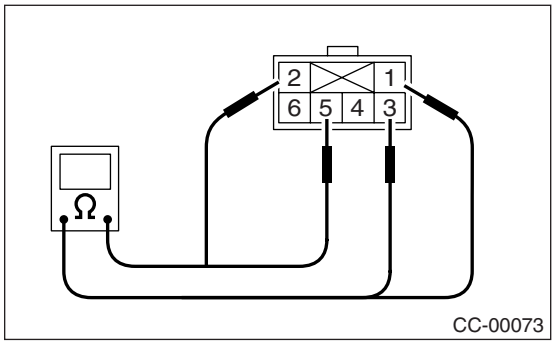

Switch position	Terminal No.	Standard value
OFF	3 and 5	More than 1 MΩ
ON	3 and 5	Less than 1 Ω

If NG, replace the cruise control main switch.

5. Cruise Control Command Switch

A: REMOVAL

WARNING:
Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-3, CAUTION, General Description.>

1. FOUR SPOKES STEERING WHEEL MODEL

1) Set the front wheels in straight ahead position.
2) Turn the ignition switch to OFF.
3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
4) Using the TORX® BIT T30 (Tamper resistant type), loosen the two TORX® bolts which secure driver's airbag module.

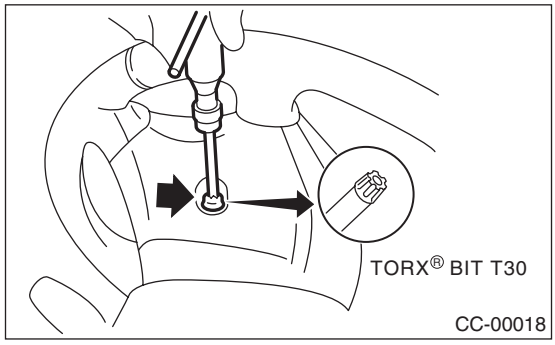

5) Disconnect the airbag module connector on back of airbag module.
6) Remove the horn switch from steering wheel as shown.

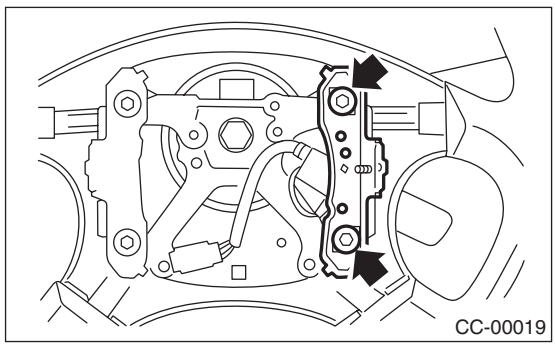

7) Disconnect the horn and cruise control command switch connector, then remove the cruise control command switch.

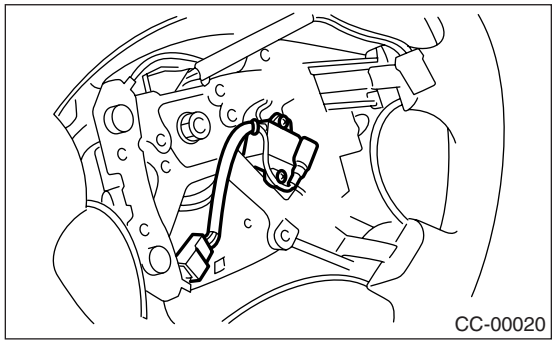

2. THREE SPOKES STEERING WHEEL MODEL

1) Set the front wheels in straight ahead position.
2) Turn the ignition switch to OFF.
3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
4) Using the TORX® BIT T30 (Tamper resistant type), loosen the two TORX® bolts which secure driver's airbag module.

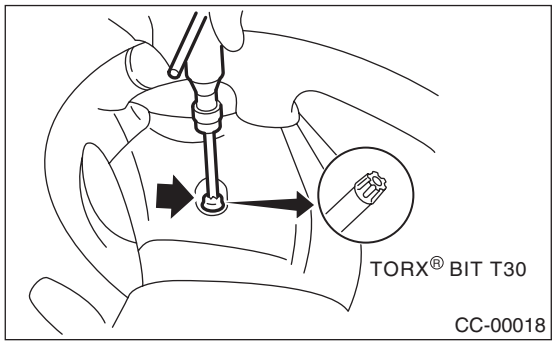

5) Disconnect the airbag module connector on back of airbag module.
6) Remove the horn switch from steering wheel.
7) Remove the steering wheel. <Ref. to PS-23, REMOVAL, Steering Wheel.>
8) Remove four screws, and then remove the lower cover from steering wheel.

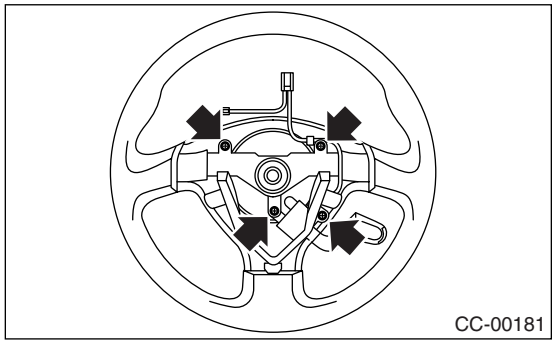

9) Remove the screw, and then remove the cruise control command switch from lower cover.

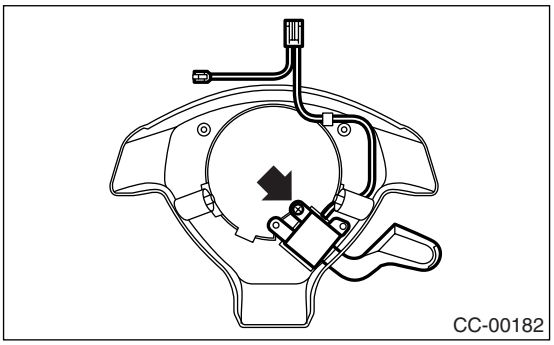

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the cruise control command switch resistance.

1. FOUR SPOKES STEERING WHEEL MODEL

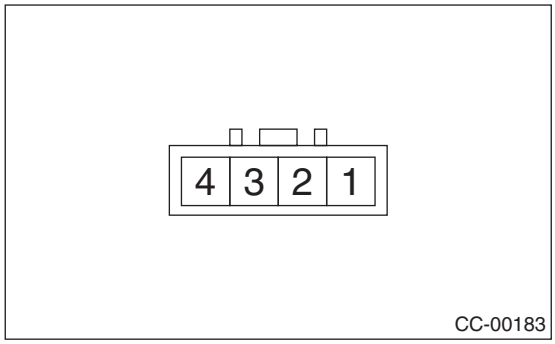

Switch	Position	Terminal No.	Standard value
CANCEL	ON	1 (+) and 2 (–)	Less than 1 Ω
	ON	1 (+) and 3 (–)	Less than 1 Ω
SET/COAST	OFF	1 and 2	More than 1 MΩ
	ON	1 and 2	Less than 1 Ω
RESUME/ ACCEL	OFF	1 and 3	More than 1 MΩ
	ON	1 and 3	Less than 1 Ω

2. THREE SPOKES STEERING WHEEL MODEL

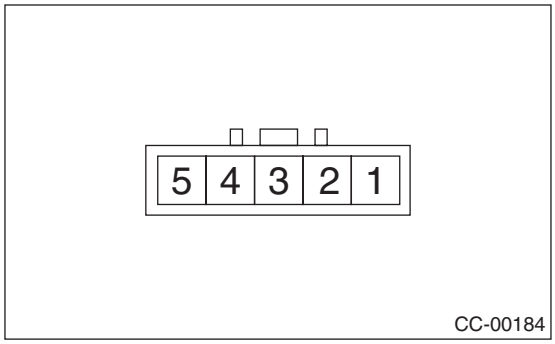

Switch	Position	Terminal No.	Standard value
CANCEL	ON	1 (+) and 2 (–)	Less than 1 Ω
	ON	1 (+) and 3 (–)	Less than 1 Ω
SET/COAST	OFF	1 and 3	More than 1 MΩ
	ON	1 and 3	Less than 1 Ω
RESUME/ ACCEL	OFF	1 and 2	More than 1 MΩ
	ON	1 and 2	Less than 1 Ω

If NG, replace the cruise control command switch.

6. Stop and Brake Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the connector from stop and brake switch, and then remove the switch. <Ref. to BR-73, REMOVAL, Stop Light Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the brake switch (A) and stop light switch (B) resistance.

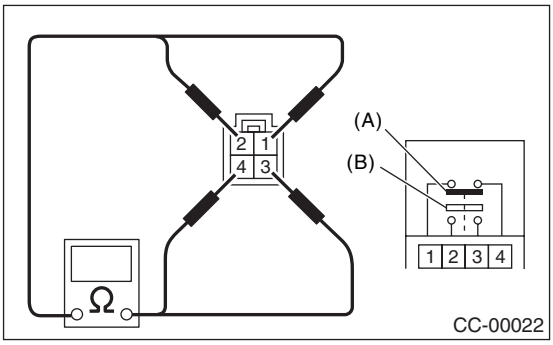

Switch	Pedal	Terminal No.	Standard value
Brake	Released	1 and 4	Less than 1 Ω
	Depressed	1 and 4	More than 1 MΩ
Stop light	Released	2 and 3	More than 1 MΩ
	Depressed	2 and 3	Less than 1 Ω

If NG, replace the stop and brake switch.

7. Clutch Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the connector from clutch switch, and then remove the switch. <Ref. to CL-42, DISASSEMBLY, Clutch Pedal.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the clutch switch resistance.

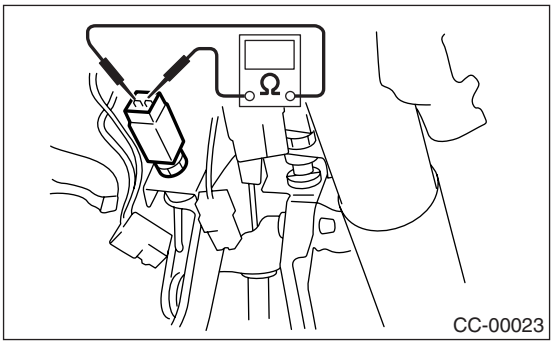

Switch	Pedal	Terminal No.	Standard value
Clutch	Released	1 and 2	Less than 1 Ω
	Depressed	1 and 2	More than 1 MΩ

If NG, replace the clutch switch.

8. Inhibitor Switch

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Disconnect the connector from inhibitor switch, and then remove the switch. <Ref. to 4AT-49, REMOVAL, Inhibitor Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the inhibitor switch resistance.

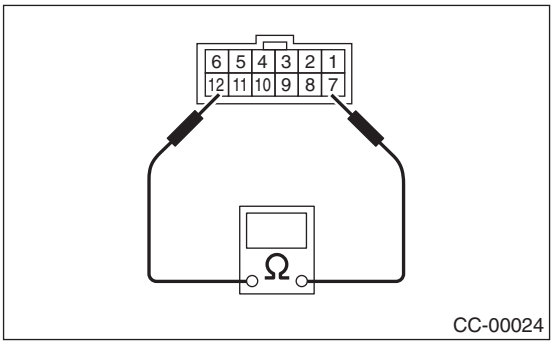

Selector lever position	Terminal No.	Standard value
P	7 and 12	Less than 1 Ω
N		Less than 1 Ω
Except P and N		More than 1 MΩ

If NG, replace the inhibitor switch.

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC

Page

1. Basic Diagnostic Procedure 2
2. General Description 3
3. Electrical Components Location....5
4. Cruise Control Module I/O Signal....6
5. Subaru Select Monitor....8
6. Diagnostic Procedure with Symptom 10
7. List of DTC 24
8. Diagnostic Procedure with DTC 25

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	**START DIAGNOSIS.** 1)Perform the pre-inspection. <Ref. to CC-4, INSPECTION, General Description.> 2)Check the cruise control main switch operation.	Is the cruise control main switch turned ON?	Go to step **2.**	Go to symptom 1. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
2	**PREPARE SUBARU SELECT MONITOR.**	Is the select monitor available?	Go to step **3.**	Go to step **4.**
3	**PERFORM CRUISE CANCEL CONDITIONS DIAGNOSIS.** Perform the cruise cancel conditions diagnosis. <Ref. to CC-8, Subaru Select Monitor.>	Are any DTC indicated?	Go to "List of DTC". <Ref. to CC-24, List of DTC.>	Go to step **4.**
4	**CHECK CRUISE CONTROL SET OPERATION.** Check the cruise control set operation.	Can the cruise control be set while driving at 40 km/h (25 MPH)?	Go to step **5.**	Go to symptom 2. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
5	**CHECK VEHICLE SPEED IS HELD WITHIN SET SPEED.** Make sure the vehicle speed is held within set speed.	Is the vehicle speed held within set speed ±3 km/h (±2 MPH)?	Go to step **6.**	Go to symptom 3. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
6	**CHECK RESUME/ACCEL OPERATION.** Check the RESUME/ACCEL operation.	Does the vehicle speed increase or return to set speed after RESUME/ACCEL switch has been pressed?	Go to step **7.**	Go to symptom 4. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
7	**CHECK SET/COAST OPERATION.** Check the SET/COAST operation.	Does the vehicle speed decrease after SET/COAST switch has been pressed?	Go to step **8.**	Go to symptom 5. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
8	**CHECK CANCEL OPERATION.** Check the CANCEL operation.	Is the cruise control released after CANCEL switch has been pressed?	Go to step **9.**	Go to symptom 6. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
9	**CHECK CRUISE CONTROL RELEASE OPERATION.** Check the cruise control release operation.	Is the cruise control released after brake pedal has been depressed?	Go to step **10.**	Go to symptom 7. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>
10	**CHECK CRUISE CONTROL RELEASE OPERATION.** Check the cruise control release operation.	Is the cruise control released after clutch pedal has been depressed? (MT model)	Finish the diagnostics.	Go to symptom 8. <Ref. to CC-10, SYMPTOM CHART, Diagnostic Procedure with Symptom.>

2. General Description

A: CAUTION

1. SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

Airbag system wiring harness is routed near the cruise control module and cruise control command switch.

CAUTION:
• All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
• Be careful not to damage the airbag system wiring harness when servicing the cruise control module and cruise control command switch.

B: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
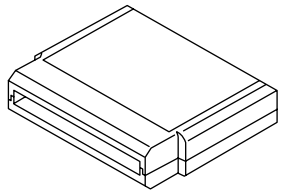 ST24082AA210	24082AA210	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.

C: INSPECTION

1. BATTERY

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage:
12 V, or more

Specific gravity:
Above 1.260

2. CRUISE CONTROL CABLE

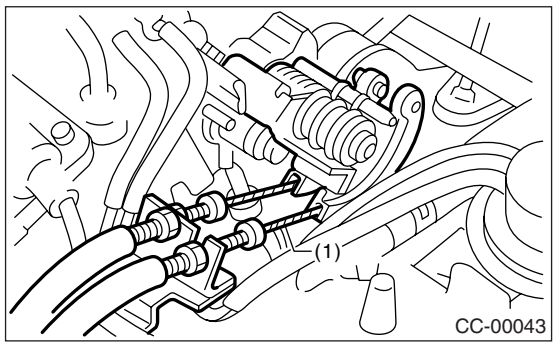

(1) Cruise control cable

Check the cruise control cable installation.
If NG, install the cable securely.

3. ACCELERATOR CABLE

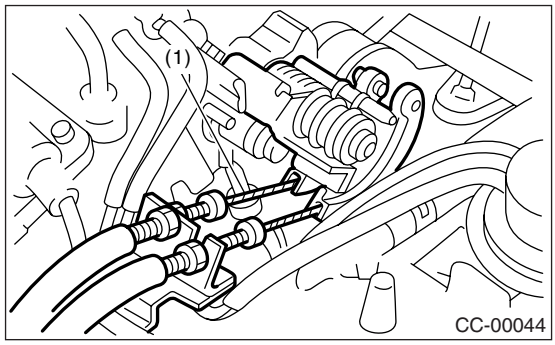

(1) Accelerator cable

Check the movement of accelerator cable when the cruise control throttle is moved by hand.
If NG, check the throttle cam.

4. THROTTLE CAM

Check that the throttle cam moves smoothly.
If NG, repair the throttle cam.

5. CABLE FREE PLAY

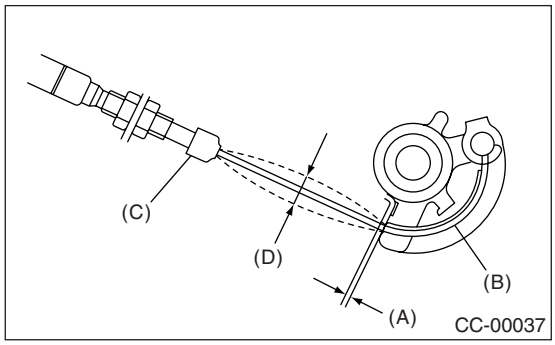

Check that the throttle cam-to-lever clearance (A) or cable (B) deflection amount (D) is within specifications.

Throttle cam-to-lever clearance:
0 — 1 mm (0 — 0.04 in)

Inner cable deflection:
1 — 8 mm (0.04 — 0.31 in)

If NG, adjust the clearance with the adjust nut.

NOTE:
Check that the cap (C) is positioned in the groove.

3. Electrical Components Location

A: LOCATION

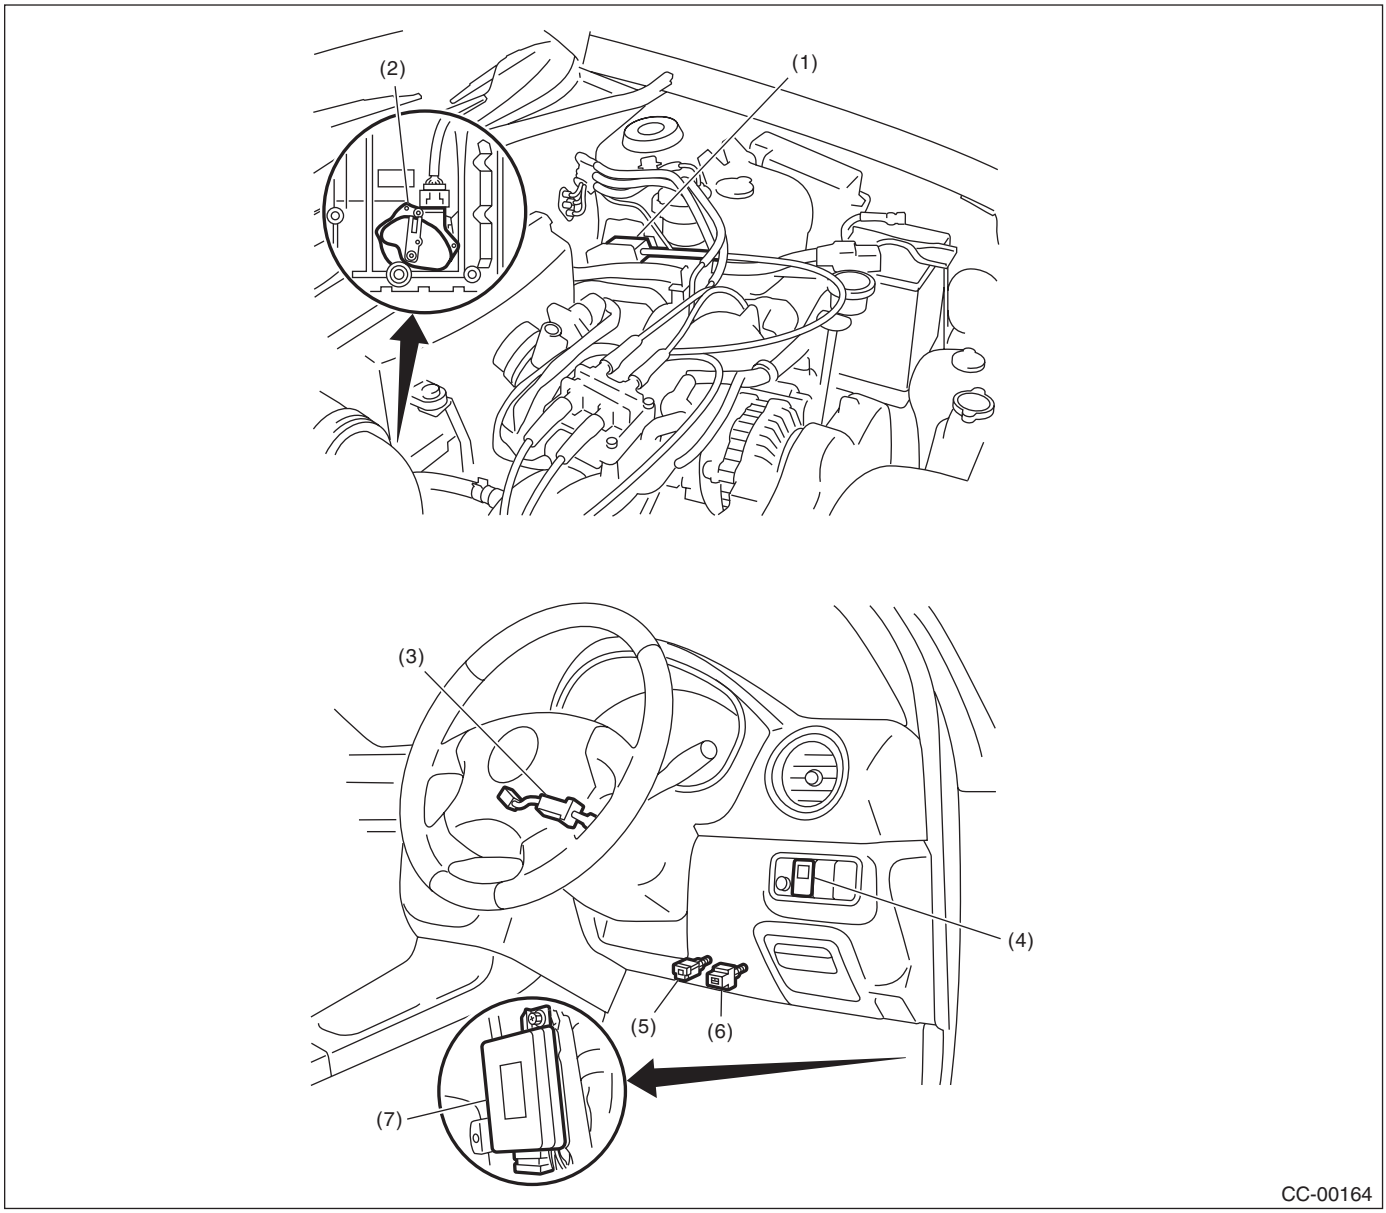

(1) Actuator
(2) Inhibitor switch (AT model)
(3) Cruise control command switch
(4) Cruise control main switch
(5) Clutch switch (MT model)
(6) Stop and brake switch
(7) Cruise control module

4. Cruise Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

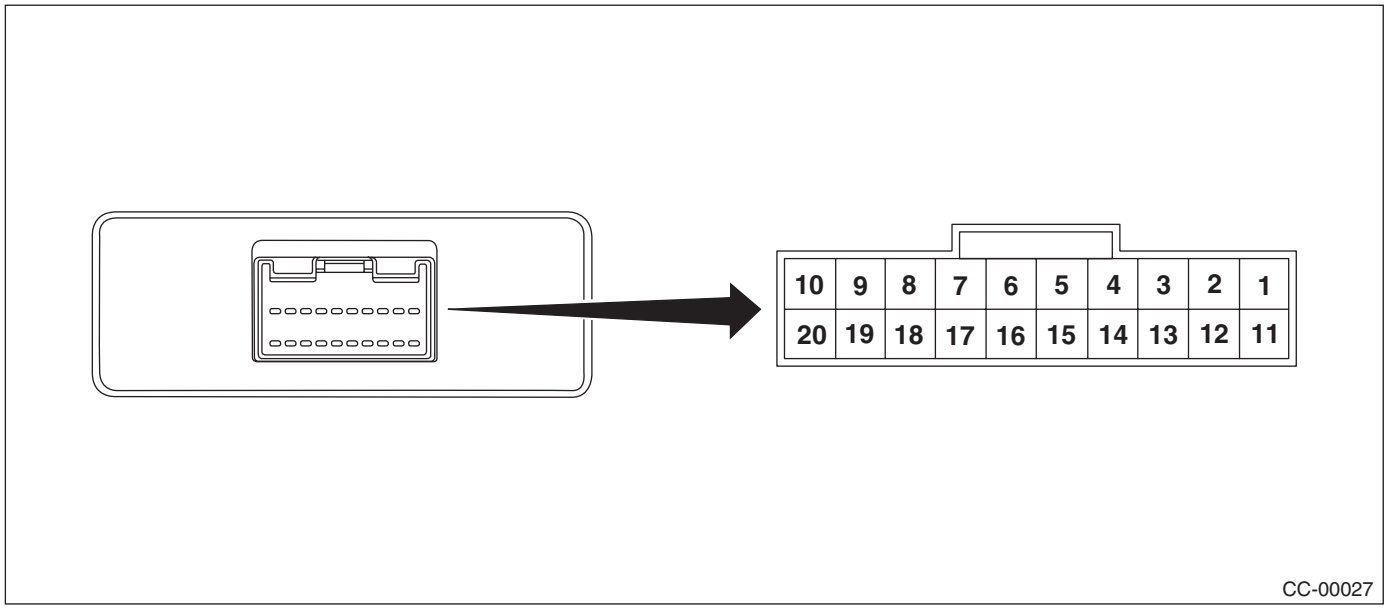

Content	Terminal No.	Measuring conditions and I/O signals (ignition switch ON and engine idling)
Main light	1	• Battery voltage is present when main switch is turned OFF. • “0” volt is present when main switch is turned ON.
Inhibitor switch (AT model)	4	• Battery voltage is present when selector lever is other than “P” or “N” position. • “0” volt is present when selector lever is set to “P” or “N” position.
Motor B	5	• ON-and-OFF (“0”-and-battery voltage) operation is alternately repeated while cruise control is operating. • “0” volt is present when main switch is turned OFF.
Ground	6	—
Motor A	7	• ON-and-OFF (“0”-and-battery voltage) operation is alternately repeated while cruise control is operating. • “0” volt is present when main switch is turned OFF.
RESUME/ACCEL switch	9	• Battery voltage is present when command switch is turned to RESUME/ACCEL position. • “0” volt is present when command switch is released.
SET/COAST switch	10	• Battery voltage is present when command switch is turned to SET/COAST position. • “0” volt is present when command switch is released.
Main power supply	11	• Battery voltage is present when ignition switch is turned ON. • “0” volt is present when ignition switch is turned OFF.
Ignition switch	12	• Battery voltage is present when ignition switch is turned ON. • “0” volt is present when ignition switch is turned OFF.
Motor C	13	• ON-and-OFF (“0”-and-battery voltage) operation is alternately repeated while cruise control is operating. • “0” volt is present when main switch is turned OFF.
Motor clutch	14	• ON-and-OFF (“0”-and-battery voltage) operation is alternately repeated while cruise control is operating. • “0” volt is present when vehicle is stopped.
Cruise control main switch	15	• Battery voltage is present during pressing the cruise control main switch. • “0” volt is present when main switch is turned OFF.

Content	Terminal No.	Measuring conditions and I/O signals (ignition switch ON and engine idling)
Brake switch	16	Leave clutch pedal released (MT model), while cruise control main switch is turned ON. Then check that; • Battery voltage is present when brake pedal is released. • “0” volt is present when brake pedal is depressed. Additionally only in MT model, keep the cruise control main switch to ON and leave brake pedal released. Then check that; • Battery voltage is present when clutch pedal is released. • “0” volt is present when clutch pedal is depressed.
Data link connector	17	—
Data link connector	18	—
Vehicle speed sensor (MT model) TCM (AT model)	19	Lift-up the vehicle until all four wheels are raised off ground, and then rotate any wheel manually. Approx. “5” and “0” volt pulse signals are alternately input to cruise control module.
Stop light switch	20	Turn ignition switch to OFF. Then check that; • Battery voltage is present when brake pedal is depressed. • “0” volt is present when brake pedal is released.
NOTE: Voltage at terminals 5, 7, 13 and 14 cannot be checked unless vehicle is driving by cruise control operation.		

B: SCHEMATIC

<Ref. to WI-94, SCHEMATIC, Cruise Control System.>

5. Subaru Select Monitor

A: OPERATION

1. GENERAL

The on-board diagnosis function of the cruise control system uses the Subaru Select Monitor.
The on-board diagnosis function operates in two categories, which are used depending on the type of problems;
1) Cruise cancel conditions diagnosis:
(1) This category of diagnosis requires actual vehicle driving in order to determine the cause, (as when cruise speed is cancelled during driving although cruise cancel condition is not entered).
(2) Cruise control module memory stores the cancel condition (Code No.) which occurred during driving. When there are plural cancel conditions (Code No.), they are shown on the Subaru Select Monitor.

CAUTION:
• The cruise control memory stores not only the cruise "cancel" which occurred (although "cancel" operation is not entered by the driver), but also the "cancel" condition input by the driver.
• The content of memory is cleared when ignition switch or cruise main switch is turned OFF.

2) Real-time diagnosis:
The real-time diagnosis function is used to determine whether or not the input signal system is in good order, according to signal emitted from switches, sensors, etc.
(1) Vehicle cannot be driven at cruise speed because problem occurs in the cruise control system or its associated circuits.
(2) Monitor the signal conditions from switches and sensors.

2. CRUISE CANCEL CONDITIONS DIAGNOSIS

1) Prepare the Subaru Select Monitor kit.

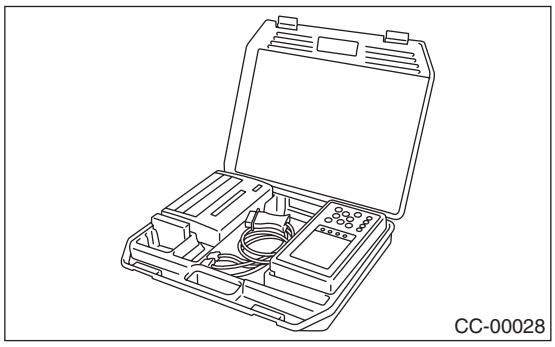
CC-00028

2) Connect the diagnosis cable to Subaru Select Monitor.

3) Insert the cartridge into Subaru Select Monitor. <Ref. to CC-3, SPECIAL TOOLS, PREPARATION TOOL, General Description.>

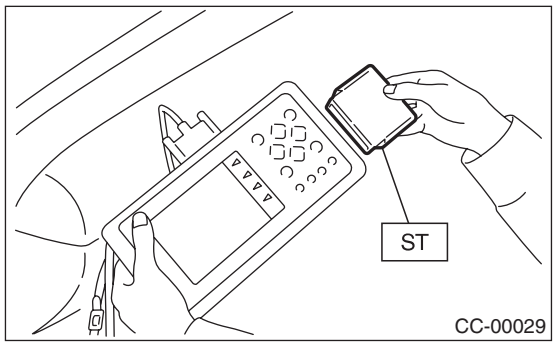

CC-00029

4) Connect the Subaru Select Monitor to data link connector.
(1) Data link connector is located in the lower portion of the instrument panel (on the driver's side).

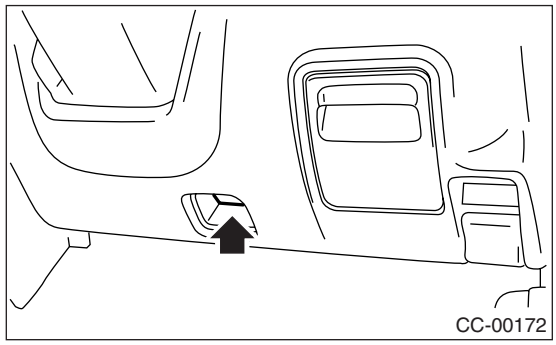
CC-00172

(2) Connect the diagnosis cable to data link connector.
5) Start the engine and turn the cruise control main switch to ON.
6) Turn the Subaru Select Monitor switch to ON.

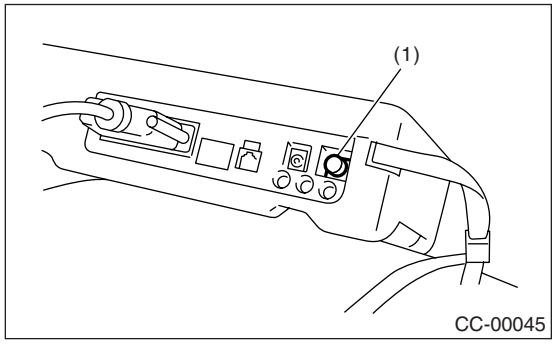

CC-00045

(1) Power switch

7) On the Main Menu display screen, select the {All System Diagnosis} and press [YES] key.

NOTE:
The DTC is also shown in the {Each System Check} mode. This mode is called up on the Cruise Control Diagnosis screen by selecting the item {Cancel Code(s) Display}.

8) Drive the vehicle at least 40 km/h (25 MPH) with cruise speed set.
9) If the cruise speed is canceled itself (without doing any cancel operations), a DTC will appear on select monitor display.

CAUTION:
• A DTC will also appear when cruise cancel is effected by driver. Do not confuse.
• Have a co-worker ride in the vehicle to assist in diagnosis during driving.

NOTE:
DTC will be cleared by turning the ignition switch or cruise control main switch to OFF.

3. REAL-TIME DIAGNOSIS

1) Connect the select monitor.
2) Turn the ignition switch and cruise control main switch to ON.
3) Turn the Subaru Select Monitor switch to ON.
4) On the Main Menu display screen, select the {Each System Check} and press [YES] key.
5) On the System Selection Menu display screen, select the {Cruise Control} and press [YES] key.
6) Press the [YES] key after displayed the information of engine type.
7) On the Cruise Control Diagnosis display screen, select the {Current Data Display & Save} and press [YES] key.
8) Make sure that normal indication is displayed when controls are operated as indicated below:
• Depress/release the brake pedal. (Stop light switch and brake switch turn ON.)
• Turn ON the “SET/COAST” switch.
• Turn ON the “RESUME/ACCEL” switch.
• Depress/release the clutch pedal. (MT model)
• Set the selector lever to P or N. (AT model)

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For details concerning DTCs, refer to the List of DTC. <Ref. to CC-24, List of DTC.>

6. Diagnostic Procedure with Symptom

A: SYMPTOM CHART

Symptom		Repair area	Reference
1	Cruise control main switch is not turned ON.	(1) Check the power supply.	<Ref. to CC-12, CHECK POWER SUPPLY, Diagnostic Procedure with Symptom.>
		(2) Check the cruise control main switch.	<Ref. to CC-14, CHECK CRUISE CONTROL MAIN SWITCH, Diagnostic Procedure with Symptom.>
2	Cruise control cannot be set.	(1) Check the SET/COAST switch.	<Ref. to CC-16, CHECK CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Symptom.>
		(2) Check the stop light switch and brake switch.	<Ref. to CC-18, CHECK STOP LIGHT SWITCH AND BRAKE SWITCH, Diagnostic Procedure with Symptom.>
		(3) Check the clutch switch (MT model).	<Ref. to CC-20, CHECK CLUTCH SWITCH (MT MODEL), Diagnostic Procedure with Symptom.>
		(4) Check the inhibitor switch (AT model).	<Ref. to CC-22, CHECK INHIBITOR SWITCH (AT MODEL), Diagnostic Procedure with Symptom.>
		(5) Check the vehicle speed sensor.	<Ref. to CC-26, DTC 22 VEHICLE SPEED SENSOR, Diagnostic Procedure with DTC.>
		(6) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(7) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>
3	Vehicle speed is not held within set speed ±3 km/h (±2 MPH).	(1) Check the vehicle speed sensor.	<Ref. to CC-26, DTC 22 VEHICLE SPEED SENSOR, Diagnostic Procedure with DTC.>
		(2) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(3) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>
4	Vehicle speed does not increase or does not return to set speed after RESUME/ ACCEL switch has been pressed.	(1) Check the RESUME/ ACCEL switch.	<Ref. to CC-16, CHECK CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Symptom.>
		(2) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(3) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>
5	Vehicle speed does not decrease after SET/COAST switch has been pressed.	(1) Check the SET/COAST switch.	<Ref. to CC-16, CHECK CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Symptom.>
		(2) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(3) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>
6	Cruise control is not released after CANCEL switch has been pressed.	(1) Check the CANCEL switch.	<Ref. to CC-16, CHECK CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Symptom.>
		(2) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(3) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>
7	Cruise control is not released after brake pedal has been depressed.	(1) Check the stop light switch and brake switch.	<Ref. to CC-18, CHECK STOP LIGHT SWITCH AND BRAKE SWITCH, Diagnostic Procedure with Symptom.>
		(2) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(3) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>

Symptom		Repair area	Reference
8	Cruise control is not released after clutch pedal has been depressed (MT model).	(1) Check the clutch switch.	<Ref. to CC-20, CHECK CLUTCH SWITCH (MT MODEL), Diagnostic Procedure with Symptom.>
		(2) Check the motor drive system.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
		(3) Check the motor clutch drive system.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>

B: CHECK POWER SUPPLY

TROUBLE SYMPTOM:

Cruise control can be set, but indicator does not come on. (When main switch is pressed.)

WIRING DIAGRAM:

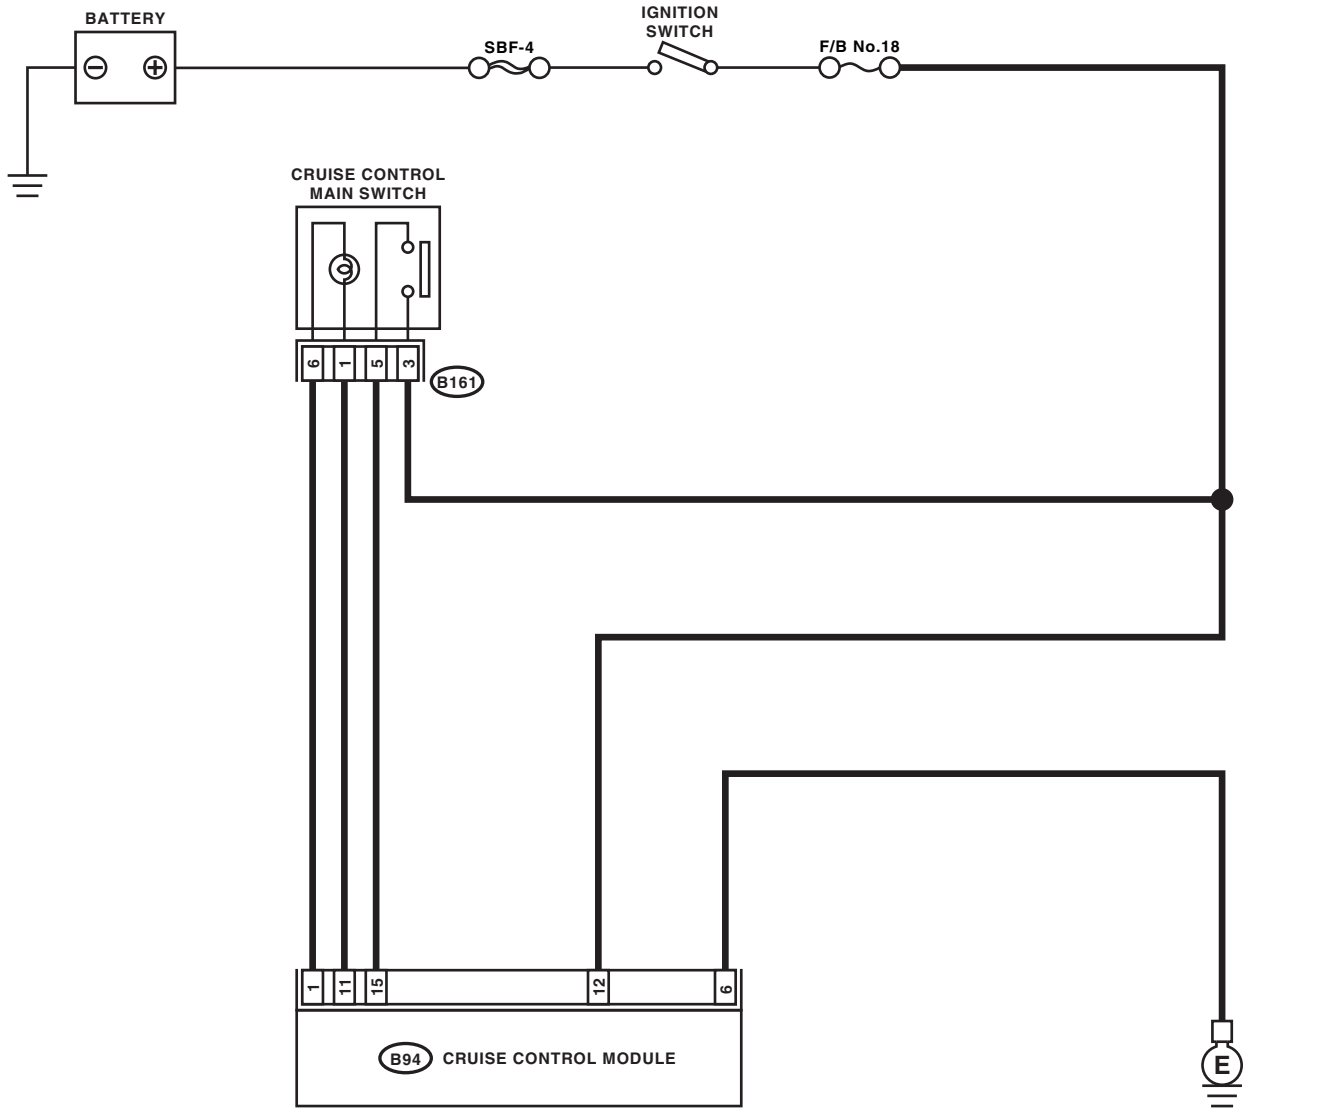



CC-00173

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY.** 1)Turn the ignition switch to OFF. 2)Disconnect the cruise control module harness connector. 3)Turn the ignition switch to ON. 4)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B94) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	• Check the fuse No. 18 (in fuse & relay box). • Check the harness for open or short between cruise control module and fuse & relay box.
2	**CHECK GROUND CIRCUIT.** 1)Turn the ignition switch OFF. 2)Measure the resistance between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B94) No. 6 — Chassis ground:***	Is the resistance less than 10 Ω?	Power supply and ground circuit are OK.	Repair the harness.

C: CHECK CRUISE CONTROL MAIN SWITCH

TROUBLE SYMPTOM:

Cruise control main switch is not turned ON and cruise control cannot be set.

NOTE:

When the main relay (built-in cruise control module) operates, the main switch circuit is in normal condition.
The main relay operation can be checked by hearing the operation sound.
This operation sound will be heard when the ignition switch and cruise control main switch is turned to ON.

WIRING DIAGRAM:

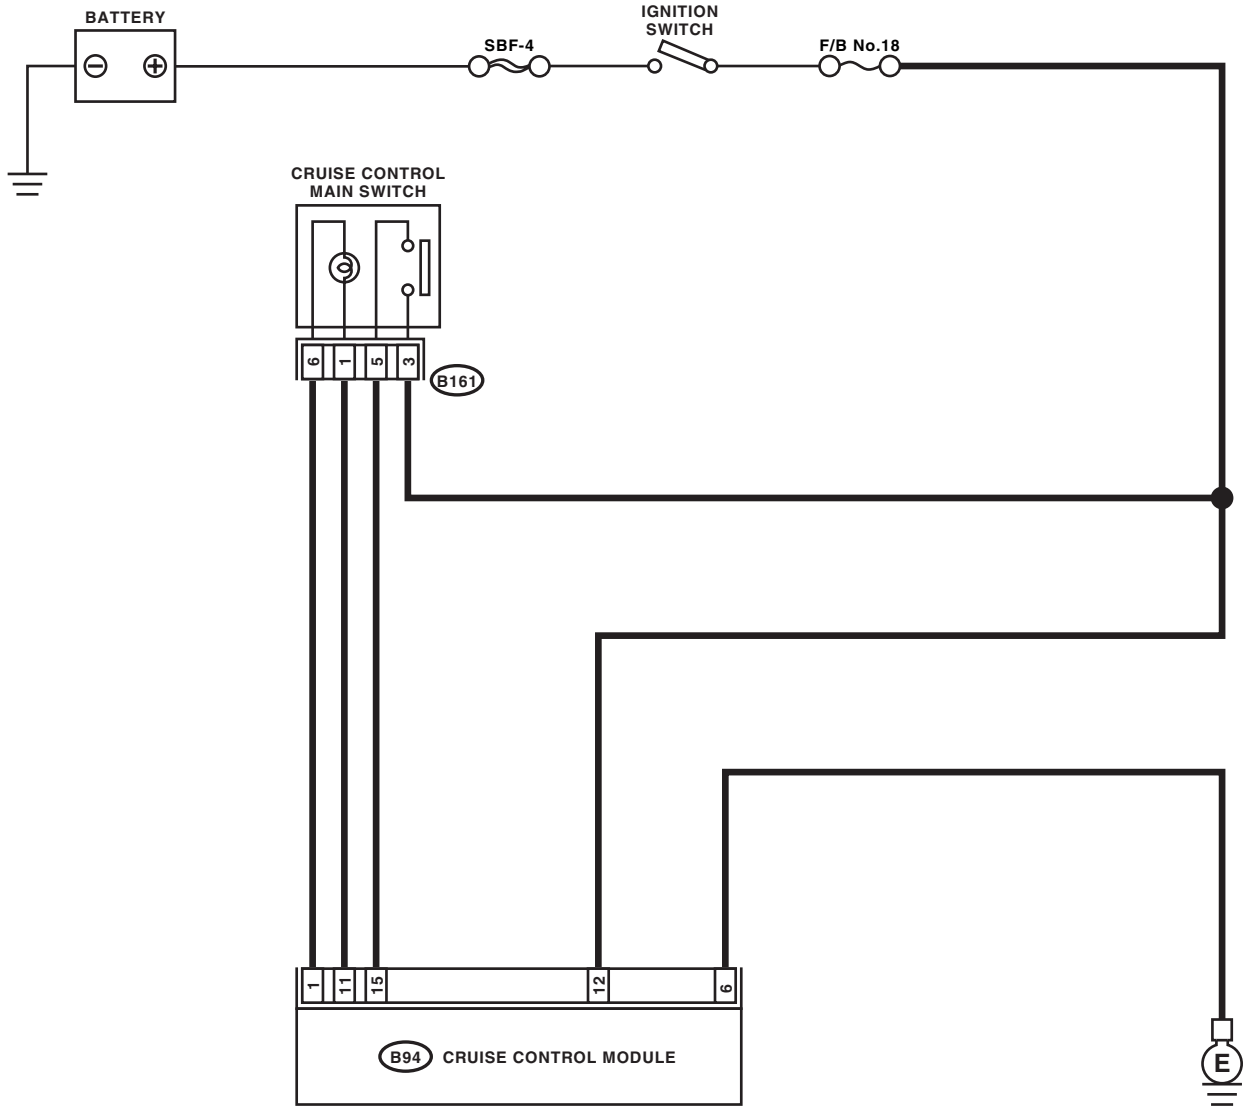



CC-00173

	Step	Check	Yes	No
1	**CHECK CRUISE CONTROL MAIN SWITCH CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the cruise control main switch harness connector. 3)Turn the ignition switch to ON. 4)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B161) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	• Check the fuse No. 18 (in fuse & relay box). • Check the harness for open or short between cruise control main switch and fuse & relay box.
2	**CHECK CRUISE CONTROL MAIN SWITCH CIRCUIT.** 1)Turn the ignition switch OFF. 2)Disconnect the cruise control module harness connector. 3)Measure the resistance between cruise control module harness connector terminal and cruise control main switch harness connector terminal. ***Connector & terminal*** ***(B94) No. 15 — (B161) No. 5:*** ***(B94) No. 1 — (B161) No. 6:*** ***(B94) No. 11 — (B161) No. 1:***	Is the resistance less than 10 Ω?	Go to step **3.**	Repair the harness.
3	**CHECK CRUISE CONTROL MAIN SWITCH.** Remove and check the cruise control main switch. <Ref. to CC-6, Cruise Control Main Switch.>	Is the cruise control main switch OK?	Replace the cruise control module.	Replace the cruise control main switch.

D: CHECK CRUISE CONTROL COMMAND SWITCH

TROUBLE SYMPTOM:

Cruise control cannot be set. (Cancelled immediately.)

WIRING DIAGRAM:

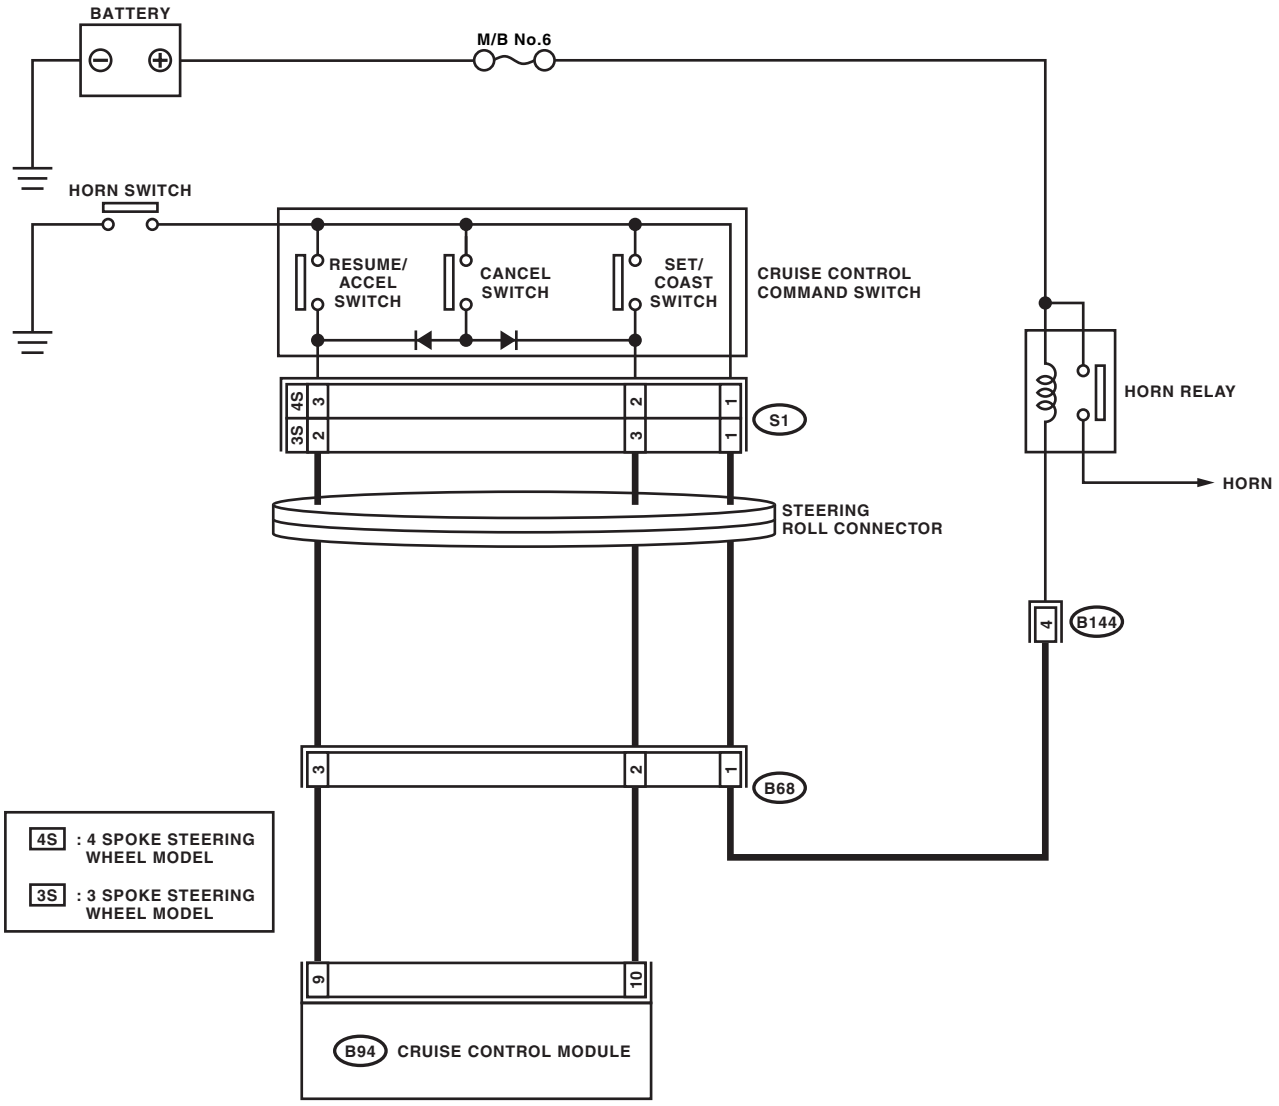

CC-00185

	Step	Check	Yes	No
1	**CHECK SET/COAST SWITCH CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the cruise control module harness connector. 3)Measure the voltage between harness connector terminal and chassis ground when SET/COAST switch is pressed and not pressed. ***Connector & terminal*** ***(B94) No. 10 (+) — Chassis ground (−):***	Is the voltage 0 V when SET/COAST switch is not pressed? Is the voltage more than 10 V when SET/COAST switch is pressed?	Go to step **2.**	Go to step **4.**
2	**CHECK RESUME/ACCEL SWITCH CIRCUIT.** Measure the voltage between harness connector terminal and chassis ground when RESUME/ACCEL switch is pressed and not pressed. ***Connector & terminal*** ***(B94) No. 9 (+) — Chassis ground (−):***	Is the voltage 0 V when RESUME/ACCEL switch is not pressed? Is the voltage more than 10 V when RESUME/ACCEL switch is pressed?	Go to step **3.**	Go to step **4.**
3	**CHECK CANCEL SWITCH CIRCUIT.** Measure the voltage between harness connector terminal and chassis ground when CANCEL switch is pressed and not pressed. ***Connector & terminal*** ***(B94) No. 9 (+) — Chassis ground (−):*** ***(B94) No. 10 (+) — Chassis ground (−):***	Is the voltage 0 V when CANCEL switch is not pressed? Is the voltage more than 10 V when CANCEL switch is pressed?	Cruise control command switch circuit is OK.	Go to step **4.**
4	**CHECK POWER SUPPLY FOR COMMAND SWITCH.** Check the horn operation.	Does the horn sound?	Go to step **5.**	• Check the fuse No. 6 (in main fuse box). • Check the horn relay. <Ref. to COM-3, HORN RELAY, INSPECTION, Horn System.> • Check the harness for open or short between cruise control command switch and fuse & relay box.
5	**CHECK CRUISE CONTROL COMMAND SWITCH.** Remove and check the cruise control command switch. <Ref. to CC-7, Cruise Control Command Switch.>	Is the cruise control command switch OK?	Check the harness between cruise control command switch and cruise control module.	Replace the cruise control command switch.

E: CHECK STOP LIGHT SWITCH AND BRAKE SWITCH

TROUBLE SYMPTOM:

Cruise control cannot be set.

WIRING DIAGRAM:

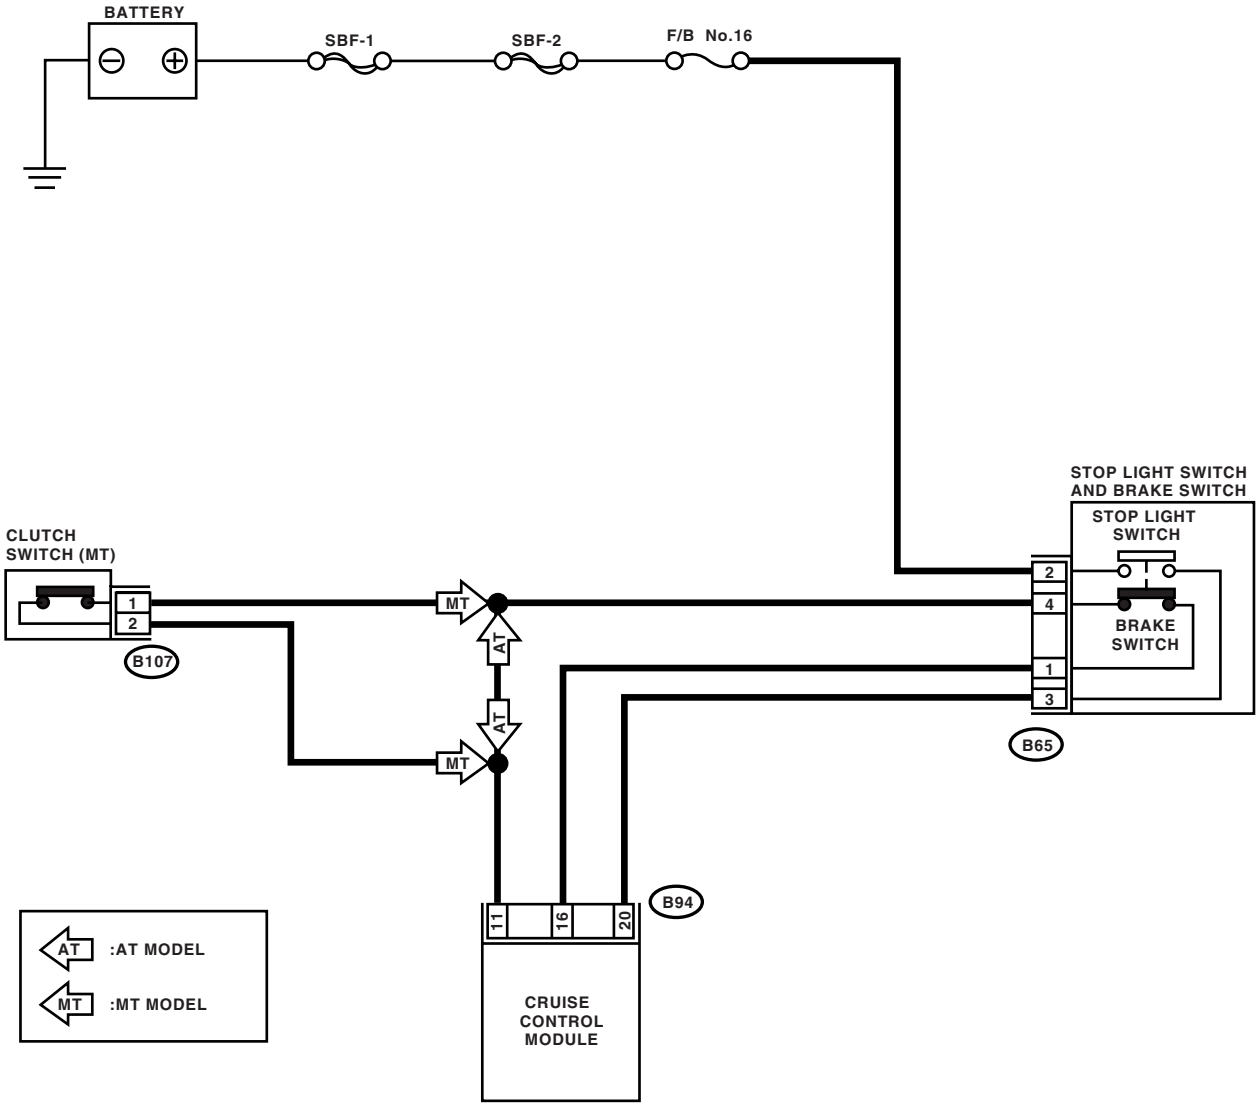



CC-00033

	Step	Check	Yes	No
1	**CHECK STOP LIGHT SWITCH AND BRAKE SWITCH CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the stop light switch and brake switch harness connector. 3)Turn the ignition switch to ON. 4)Turn the cruise control main switch to ON. 5)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B65) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	• Check the fuse No. 16 (in fuse & relay box). • Check the harness for open or short between stop light/brake switch and fuse & relay box.
2	**CHECK STOP LIGHT SWITCH AND BRAKE SWITCH CIRCUIT.** Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B65) No. 4 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	• Check the harness for open or short between stop light/brake switch and cruise control module (AT model). • Check the clutch switch and circuit (MT model).
3	**CHECK STOP LIGHT SWITCH AND BRAKE SWITCH CIRCUIT.** 1)Turn the cruise control main switch and ignition switch to OFF. 2)Disconnect the cruise control module harness connector. 3)Measure the resistance between cruise control module harness connector terminal and stop light switch and brake switch harness connector terminal. ***Connector & terminal*** ***(B94) No. 20 — (B65) No. 3:*** ***(B94) No. 16 — (B65) No. 1:***	Is the resistance less than 10 Ω?	Go to step **4.**	Repair the harness.
4	**CHECK STOP LIGHT SWITCH AND BRAKE SWITCH.** Remove and check the stop light switch and brake switch. <Ref. to CC-9, Stop and Brake Switch.>	Are the stop light switch and brake switch OK?	Stop light switch and brake switch circuit are OK.	Replace the stop light switch and brake switch.

F: CHECK CLUTCH SWITCH (MT MODEL)

TROUBLE SYMPTOM:

Cruise control cannot be set.

WIRING DIAGRAM:

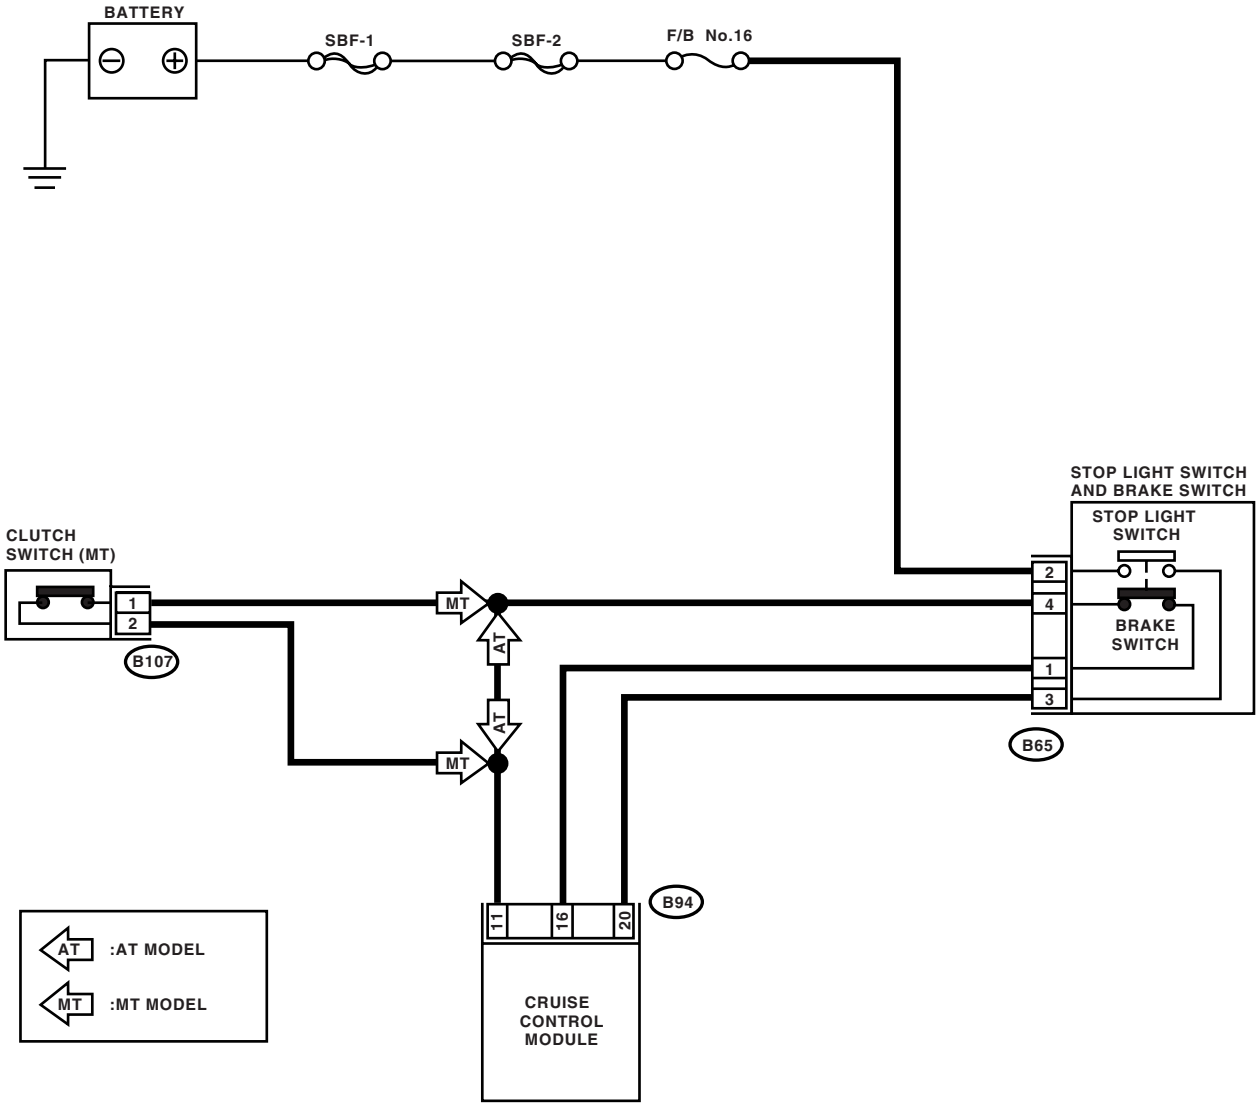



CC-00033

	Step	Check	Yes	No
1	**CHECK CLUTCH SWITCH CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the clutch switch harness connector. 3)Turn the ignition switch to ON. 4)Turn the cruise control main switch to ON. 5)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(B107) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between clutch switch and cruise control module.
2	**CHECK CLUTCH SWITCH CIRCUIT.** 1)Turn the cruise control main switch and ignition switch OFF. 2)Disconnect the stop light switch and brake switch harness connector. 3)Measure the resistance between clutch switch harness connector terminal and stop light switch and brake switch harness connector terminal. ***Connector & terminal*** ***(B107) No. 1 — (B65) No. 4:***	Is the resistance less than 10 Ω?	Go to step **3.**	Repair the harness.
3	**CHECK CLUTCH SWITCH.** Remove and check the clutch switch. <Ref. to CC-10, Clutch Switch.>	Is the clutch switch OK?	Clutch switch circuit is OK.	Replace the clutch switch.

G: CHECK INHIBITOR SWITCH (AT MODEL)

TROUBLE SYMPTOM:

Cruise control cannot be set.

WIRING DIAGRAM:

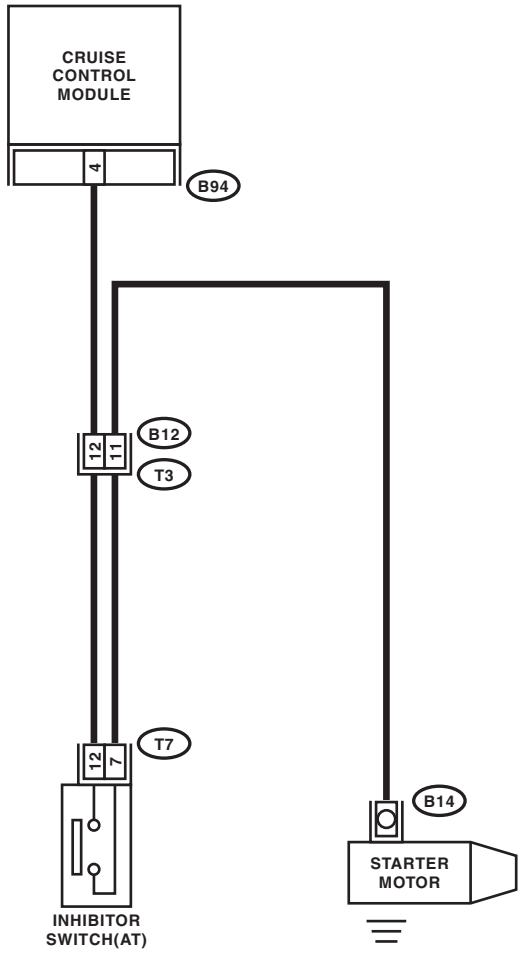



CC-00175

	Step	Check	Yes	No
1	**CHECK INHIBITOR SWITCH CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the inhibitor switch harness connector. 3)Turn the ignition switch to ON. 4)Turn the cruise control main switch to ON. 5)Measure the voltage between harness connector terminal and chassis ground. ***Connector & terminal*** ***(T7) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between inhibitor switch and cruise control module.
2	**CHECK INHIBITOR SWITCH CIRCUIT.** 1)Turn the cruise control main switch and ignition switch to OFF. 2)Disconnect the starter motor harness connector. 3)Measure the resistance between inhibitor switch harness connector terminal and chassis ground. ***Connector & terminal*** ***(T7) No. 7 — (B14) No. 1:***	Is the resistance less than 10 Ω?	Go to step **3.**	Repair the harness.
3	**CHECK INHIBITOR SWITCH.** Remove and check the inhibitor switch. <Ref. to CC-11, Inhibitor Switch.>	Is the inhibitor switch OK?	Inhibitor switch circuit is OK.	Replace the inhibitor switch.

7. List of DTC

A: LIST

DTC	Item	Contents of diagnosis	Reference
21	Inner relay is seized.	Cruise control module inner relay is seized when main switch is OFF.	<Ref. to CC-25, DTC 21, 24, 25 AND 2A CRUISE CONTROL MODULE BUILT-IN RELAY, CPU RAM, Diagnostic Procedure with DTC.>
22	Vehicle speed sensor	Vehicle speed signal changes more than 10 km/h (6 MPH) within 350 ms.	<Ref. to CC-26, DTC 22 VEHICLE SPEED SENSOR, Diagnostic Procedure with DTC.>
24	Cruise control module is abnormal.	Two vehicle speed values stored in cruise control module memory are not the same.	<Ref. to CC-25, DTC 21, 24, 25 AND 2A CRUISE CONTROL MODULE BUILT-IN RELAY, CPU RAM, Diagnostic Procedure with DTC.>
25	Cruise control module is abnormal.	Two output values stored in cruise control module memory are not the same.	<Ref. to CC-25, DTC 21, 24, 25 AND 2A CRUISE CONTROL MODULE BUILT-IN RELAY, CPU RAM, Diagnostic Procedure with DTC.>
28	Wiring harness opened.	Open wiring harness circuit is detected via control module relay when main switch is ON.	<Ref. to CC-29, DTC 28 WIRING HARNESS OPENED, Diagnostic Procedure with DTC.>
35	Motor drive system is abnormal.	• Motor output circuit is open or shorted. • Motor drive circuit is open or shorted.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
36	Trouble of motor turning speed	Motor turning speed is low.	<Ref. to CC-30, DTC 35 AND 36 ACTUATOR MOTOR, Diagnostic Procedure with DTC.>
37	Motor clutch drive system is abnormal.	• Motor clutch output circuit is open or shorted. • Motor clutch drive circuit is open or shorted.	<Ref. to CC-32, DTC 37 ACTUATOR MOTOR CLUTCH, Diagnostic Procedure with DTC.>
38	Motor drive shaft does not engage properly.	Motor drive gear engagement is not properly adjusted.	<Ref. to CC-34, DTC 38 MOTOR DRIVE SHAFT DOES NOT ENGAGE PROPERLY, Diagnostic Procedure with DTC.>
39	Motor is overloaded.	Current flows through motor more frequently than under normal conditions.	<Ref. to CC-34, DTC 39 MOTOR IS OVERLOADED, Diagnostic Procedure with DTC.>
2A	Cruise control module is abnormal.	Cruise control module self-diagnosis function senses abnormality.	<Ref. to CC-25, DTC 21, 24, 25 AND 2A CRUISE CONTROL MODULE BUILT-IN RELAY, CPU RAM, Diagnostic Procedure with DTC.>

8. Diagnostic Procedure with DTC

A: DTC 21, 24, 25 AND 2A CRUISE CONTROL MODULE BUILT-IN RELAY, CPU RAM

DIAGNOSIS:

- Poor welding of built-in relay of cruise control module.
- Failure of built-in CPU RAM of cruise control module.

TROUBLE SYMPTOM:

- Cruise control is canceled and memorized cruise speed is also canceled.
- Once cruise control is canceled, cruise control cannot be set until the ignition switch and cruise control main switch turns OFF, and then turns ON again.

NOTE:
Check input/output signal and vehicle speed signal with select monitor. When signals are in good condition, failure is in cruise control module. (Check the power supply and ground conditions of cruise control module.)

B: DTC 22 VEHICLE SPEED SENSOR

DIAGNOSIS:

Disconnection or short circuit of vehicle speed sensor system.

TROUBLE SYMPTOM:

Cruise control cannot be set. (Cancelled immediately.)

WIRING DIAGRAM:

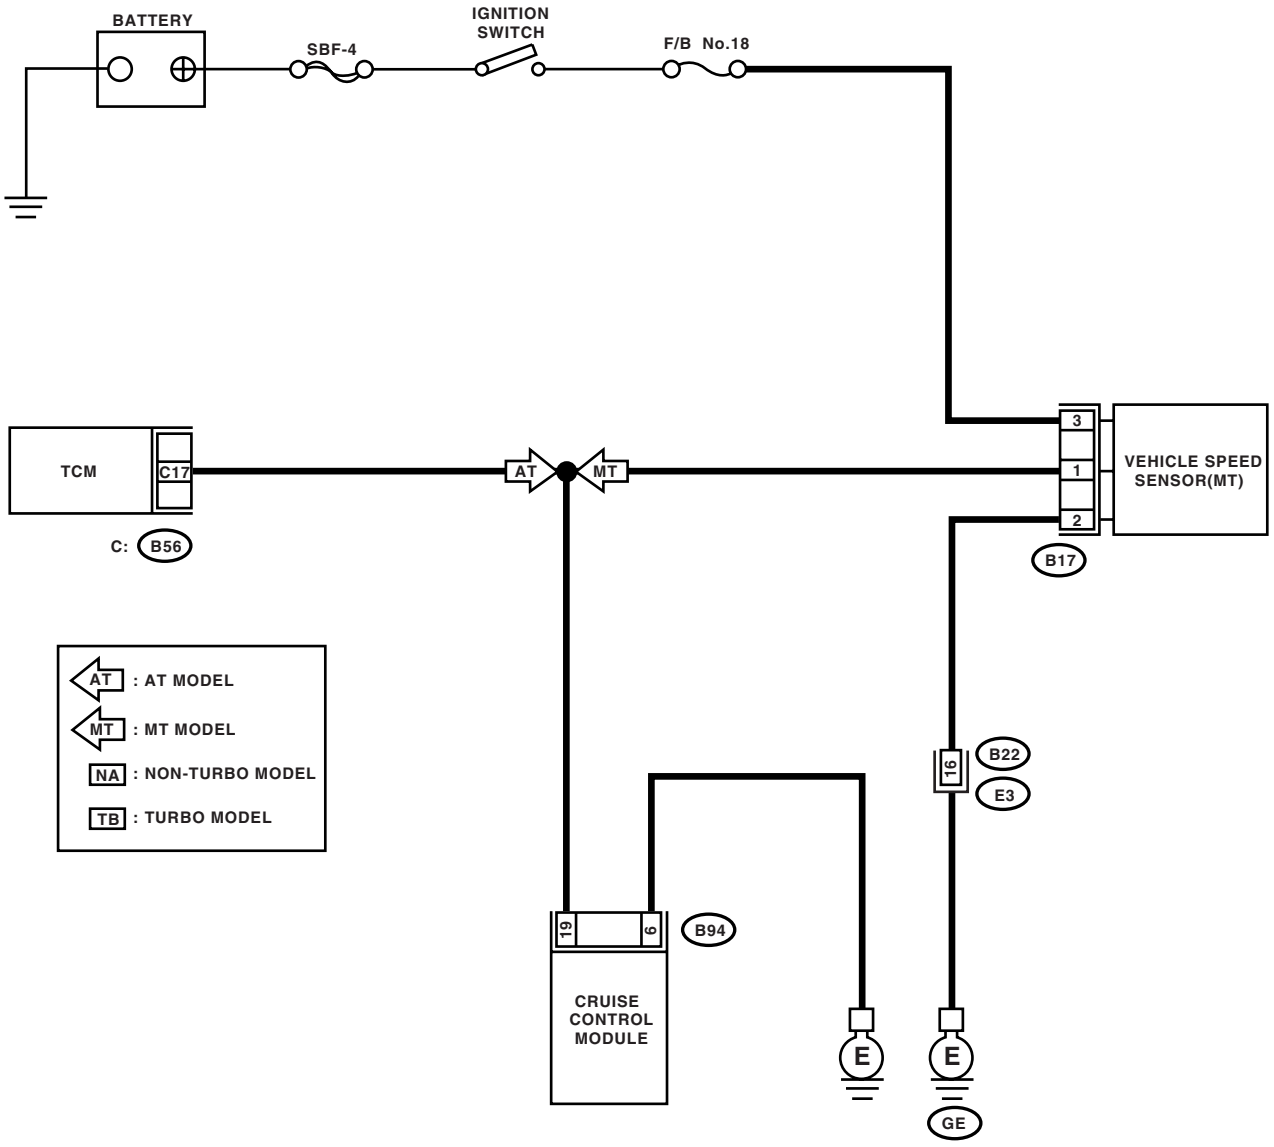

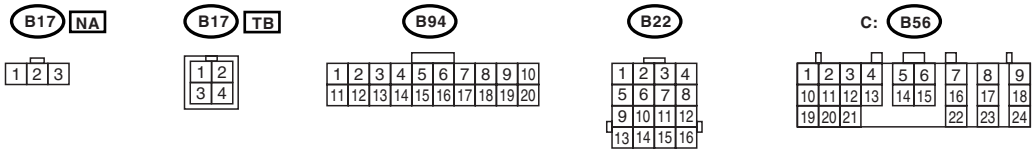

CC-00176

	Step	Check	Yes	No
1	**CHECK TRANSMISSION TYPE.**	Is the transmission type MT?	Go to step **2.**	Go to step **6.**
2	**CHECK HARNESS BETWEEN BATTERY AND VEHICLE SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from vehicle speed sensor. 3)Turn the ignition switch to ON. 4)Measure the voltage between vehicle speed sensor harness connector terminal and chassis ground. ***Connector & terminal*** ***(B17) No. 3 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Check the harness for open or short between fuse and vehicle speed sensor.
3	**CHECK HARNESS BETWEEN CRUISE CONTROL MODULE AND VEHICLE SPEED SENSOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from cruise control module. 3)Measure the resistance between vehicle speed sensor harness connector terminal and cruise control module harness connector terminal. ***Connector & terminal*** ***(B17) No. 1 — (B94) No. 19:***	Is the resistance less than 10 Ω?	Go to step **4.**	Repair the harness.
4	**CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND ENGINE GROUND.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between vehicle speed sensor harness connector terminal and engine ground. ***Connector & terminal*** ***(B17) No. 2 — Engine ground:***	Is the resistance less than 10 Ω?	Go to step **5.**	Repair the harness.
5	**CHECK VEHICLE SPEED SENSOR.** 1)Connect the harness connector to vehicle speed sensor. 2)Lift-up the vehicle and support with safety stands. 3)Drive the vehicle at speed greater than 20 km/h (12 MPH). **Warning:** **Be careful not to be caught up by the running wheels.** 4)Measure the voltage between cruise control module harness connector terminal and chassis ground. ***Connector & terminal*** ***(B94) No. 19 (+) — Chassis ground (−):***	Is the voltage less than 1V ←→ more than 5 V?	Replace the cruise control module. <Ref. to CC-5, Cruise Control Module.>	Replace the vehicle speed sensor.
6	**CHECK HARNESS BETWEEN CRUISE CONTROL MODULE AND TRANSMISSION CONTROL MODULE.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from transmission control module and cruise control module. 3)Measure the resistance between cruise control module harness connector terminal and transmission control module harness connector terminal. ***Connector & terminal*** ***(B94) No. 19 — (B56) No. 17:***	Is the resistance less than 10 Ω?	Go to step **7.**	Repair the harness.

	Step	Check	Yes	No
7	**CHECK TRANSMISSION CONTROL MODULE.** 1)Connect the harness connector to transmission control module. 2)Lift-up the vehicle and support with safety stands. 3)Drive the vehicle faster than 10 km/h (6 MPH). **Warning:** **Be careful not to be caught by the running wheels.** 4)Measure the voltage between transmission control module harness connector terminal and chassis ground. ***Connector & terminal*** ***(B56) No. 17 (+) — Chassis ground (−):***	Is the voltage less than 1 V ⟷ more than 5 V?	Replace the cruise control module. <Ref. to CC-5, Cruise Control Module.>	Replace the transmission control module. <Ref. to 4AT-70, Transmission Control Module (TCM).>

C: DTC 28 WIRING HARNESS OPENED

Step		Check	Yes	No
1	**CHECK BATTERY.** Measure the battery specific gravity of electrolyte.	Is the battery specific gravity more than 1.260?	Go to step **2.**	Charge or replace the battery. Go to step **2.**
2	**CHECK FUSES, CONNECTORS AND HARNESSES.** Check the condition of the main and other fuses, and harnesses and connectors. Also check for proper grounding.	Is there anything unusual about the appearance of main fuse, fuse, harness, connector and grounding?	Repair or replace the faulty parts.	End of inspection.

D: DTC 35 AND 36 ACTUATOR MOTOR

DIAGNOSIS:

Open or poor contact of cruise control actuator motor.

TROUBLE SYMPTOM:

Cruise control cannot be set. (Cancelled immediately.)

WIRING DIAGRAM:

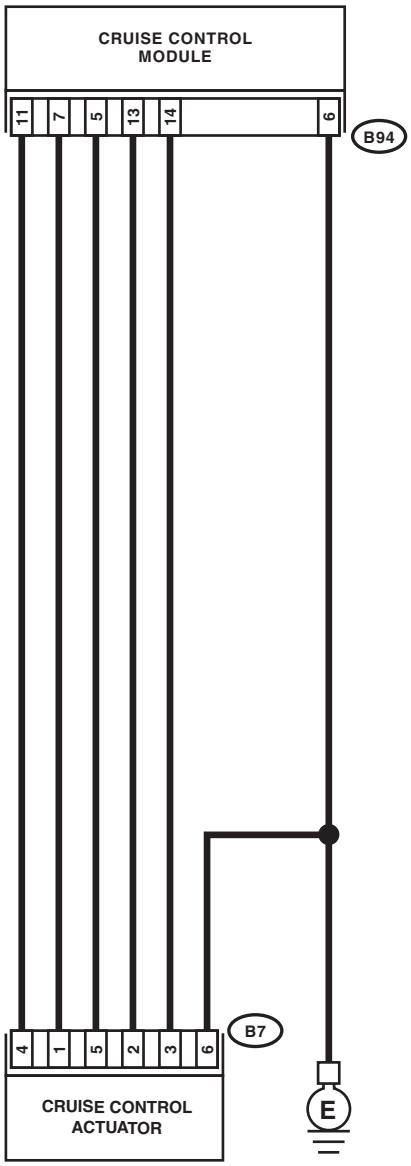



CC-00177

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from cruise control actuator. 3)Turn the ignition switch to ON. 4)Turn the cruise control main switch to ON. 5)Measure the voltage between cruise control actuator harness connector terminal and chassis ground. ***Terminals*** ***(B7) No. 4 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between cruise control module and cruise control actuator.
2	**CHECK GROUND CIRCUIT OF ACTUATOR.** 1)Turn the ignition switch and cruise control main switch to OFF. 2)Measure the resistance between cruise control actuator harness connector terminal and chassis ground. ***Terminals*** ***(B7) No. 6 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **3.**	Repair the harness.
3	**MEASURE RESISTANCE OF ACTUATOR.** Measure the resistance of cruise control actuator motor. ***Terminals*** ***No. 4 — No. 1:*** ***No. 4 — No. 2:*** ***No. 4 — No. 5:***	Is the resistance approx. 5 Ω?	Go to step **4.**	Replace the cruise control actuator. <Ref. to CC-4, Actuator.>
4	**CHECK HARNESS BETWEEN ACTUATOR AND CRUISE CONTROL MODULE.** 1)Disconnect the harness connector from cruise control module. 2)Measure the resistance between cruise control module harness connector terminal and cruise control actuator harness connector terminal. ***Connector & terminal*** ***(B7) No. 1 — (B94) No. 7:***	Is the resistance less than 10 Ω?	Go to step **5.**	Repair the harness.
5	**CHECK HARNESS BETWEEN ACTUATOR AND CRUISE CONTROL MODULE.** Measure the resistance between cruise control module harness connector terminal and cruise control actuator harness connector terminal. ***Connector & terminal*** ***(B7) No. 5 — (B94) No. 5:***	Is the resistance less than 10 Ω?	Replace the cruise control module. <Ref. to CC-5, Cruise Control Module.>	Repair the harness.

E: DTC 37 ACTUATOR MOTOR CLUTCH

DIAGNOSIS:

Open or poor contact of cruise control actuator motor clutch.

TROUBLE SYMPTOM:

Cruise control cannot be set. (Cancelled immediately.)

WIRING DIAGRAM:

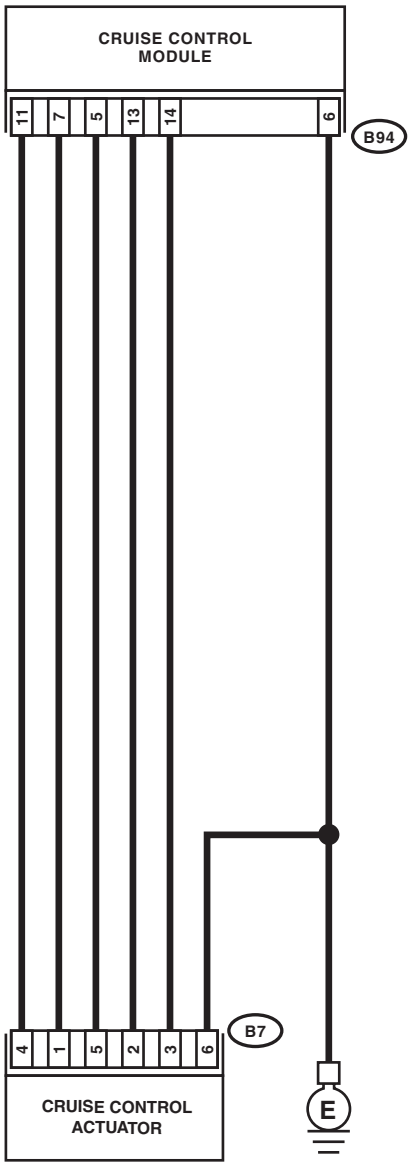



CC-00177

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from cruise control actuator. 3)Turn the ignition switch to ON. 4)Turn the cruise control main switch to ON. 5)Measure the voltage between cruise control actuator harness connector terminal and chassis ground. ***Terminals*** ***(B7) No. 4 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between cruise control module and cruise control actuator.
2	**CHECK GROUND CIRCUIT OF ACTUATOR.** 1)Turn the ignition switch and cruise control main switch to OFF. 2)Measure the resistance between cruise control actuator harness connector terminal and chassis ground. ***Terminals*** ***(B7) No. 6 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **3.**	Repair the harness.
3	**MEASURE RESISTANCE OF ACTUATOR CLUTCH.** Measure the resistance of cruise control actuator clutch. ***Terminals*** ***No. 3 — No. 6:***	Is the resistance approximately 39 Ω?	Go to step **4.**	Replace the cruise control actuator. <Ref. to CC-4, Actuator.>
4	**CHECK HARNESS BETWEEN ACTUATOR AND CRUISE CONTROL MODULE.** 1)Disconnect the harness connector from cruise control module. 2)Measure the resistance between cruise control module harness connector terminal and cruise control actuator harness connector terminal. ***Connector & terminal*** ***(B7) No. 2 — (B94) No. 13:***	Is the resistance less than 10 Ω?	Go to step **5.**	Repair the harness.
5	**CHECK HARNESS BETWEEN ACTUATOR AND CRUISE CONTROL MODULE.** Measure the resistance between cruise control module harness connector terminal and cruise control actuator harness connector terminal. ***Connector & terminal*** ***(B7) No. 3 — (B94) No. 14:***	Is the resistance less than 10 Ω?	Replace the cruise control module. <Ref. to CC-5, Cruise Control Module.>	Repair the harness.

F: DTC 38 MOTOR DRIVE SHAFT DOES NOT ENGAGE PROPERLY

	Step	Check	Yes	No
1	**CHECK ACTUATOR MOTOR.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from cruise control actuator. 3)Remove the cruise control actuator from mounting bracket. 4)Pull the cable by hand to check for looseness or status of inner gear engagement.	Are foreign particles caught in the inner gear or does inner gear engage and disengage improperly?	Replace the cruise control actuator. <Ref. to CC-4, Actuator.>	Check the cruise control cable adjustment.<Ref. to CC-4, CABLE FREE PLAY, General Description.>

G: DTC 39 MOTOR IS OVERLOADED

	Step	Check	Yes	No
1	**CHECK THE OPERATING CURRENT TO ACTUATOR MOTOR.** 1)Connect the Subaru Select Monitor to data link connector. 2)Try to drive the vehicle while operating the cruise control system. 3)Measure the operation current to the cruise control actuator motor. ***Connector & terminal*** ***(B7) No. 4 (+) — Chassis ground (−):***	Is the current more than 10 A?	Replace the cruise control module. <Ref. to CC-5, Cruise Control Module.>	Check the power supply circuit. <Ref. to CC-12, CHECK POWER SUPPLY, Diagnostic Procedure with Symptom.>

IMMOBILIZER (DIAGNOSTICS)

IM

Page

1. Basic Diagnostic Procedure 2
2. General Description 3
3. Electrical Components Location....5
4. Immobilizer Control Module I/O Signal....6
5. Subaru Select Monitor....7
6. Read Diagnostic Trouble Code (DTC) 8
7. Clear Memory Mode....9
8. Diagnostics Chart for Immobilizer Indicator Light....10
9. List of Diagnostic Trouble Code (DTC) 14
10. Diagnostics Chart with Diagnostic Trouble Code (DTC) 15

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	**CHECK ILLUMINATION OF IMMOBILIZER INDICATOR LIGHT.** 1)Turn the ignition switch to OFF or ACC position. 2)Wait at least 60 seconds.	Does the immobilizer indicator light blink?	Go to step **2.**	Check the immobilizer indicator light circuit.<Ref. to IM-10, CHECK IMMOBILIZER INDICATOR CIRCUIT, Diagnostics Chart for Immobilizer Indicator Light.>
2	**CHECK ILLUMINATION OF IMMOBILIZER INDICATOR LIGHT.** Remove the key from ignition switch.	Does the immobilizer indicator light begin to blink within 1 second after the key is removed?	Go to step **3.**	Check the key switch circuit. <Ref. to IM-12, CHECK KEY SWITCH CIRCUIT, Diagnostics Chart for Immobilizer Indicator Light.>
3	**CHECK ENGINE START.** Turn the ignition switch to START position.	Does the engine start?	Go to step **4.**	Go to step **5.**
4	**CHECK ILLUMINATION OF IMMOBILIZER INDICATOR LIGHT.** Turn the ignition switch to ON.	Does the immobilizer indicator light illuminate?	Check the immobilizer indicator light circuit.<Ref. to IM-10, CHECK IMMOBILIZER INDICATOR CIRCUIT, Diagnostics Chart for Immobilizer Indicator Light.>	Immobilizer system is normal.
5	**CHECK INDICATION OF DTC ON DISPLAY.** 1)Turn the ignition switch to OFF. 2)Connect the Subaru Select Monitor to data link connector. <Ref. to IM-7, Subaru Select Monitor.> 3)Turn the ignition switch and Subaru Select Monitor switch to ON. 4)Read any DTC on the display.	Are DTCs indicated on display?	Go to step **6.**	Repair the related parts.
6	**PERFORM THE DIAGNOSIS.** 1)Inspect using “Diagnostics Chart with DTC”.<Ref. to IM-15, Diagnostics Chart with Diagnostic Trouble Code (DTC).> 2)Repair the trouble cause. 3)Perform the clear memory mode. 4)Read any DTC again.	Are DTCs indicated on display?	Inspect using “Diagnostic Chart with DTC”. <Ref. to IM-15, Diagnostics Chart with Diagnostic Trouble Code (DTC).>	Finish the diagnostics.

2. General Description

A: CAUTION

CAUTION:

• The airbag system wiring harness is routed near the immobilizer control module. All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.

• Be careful not to damage the airbag system wiring harness when servicing the immobilizer control module.

• While diagnostic items are being checked, do not operate radios, portable telephones, etc. which emit electromagnetic waves near or inside the vehicle.

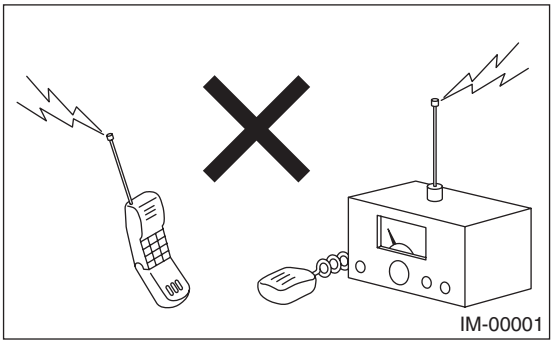

• When the ignition switch is being turned ON or OFF while diagnostic items are being checked, do not allow keys with different ID codes close to the ignition switch. If the ignition key is in a key holder, remove it from the holder before carrying out diagnoses.

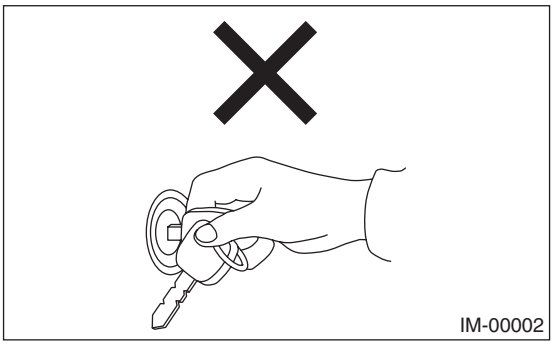

• When repeatedly turning the ignition ON or OFF while diagnostic items are being checked, it should be switched in cycles of "ON" for at least 5 seconds → "OFF" for at least 8 seconds.

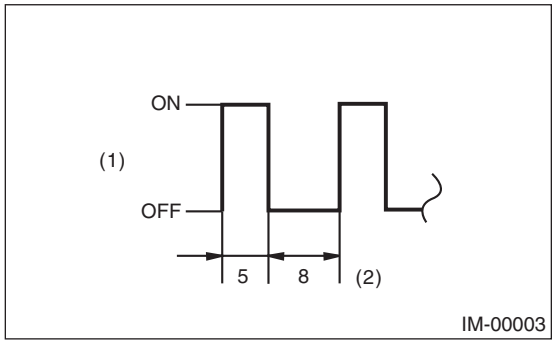

(1) Ignition switch position
(2) Sec.

• If the engine fails to start with a registered ignition key, detach the ignition key from ignition switch and wait for approx. 1 second until immobilizer indicator light begins to flash. Start the engine again.

• Before checking the diagnostic items, obtain all keys for the vehicle to be checked possessed by owner.

B: PREPARATION TOOL

1. SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
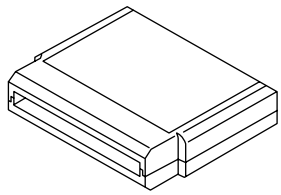 ST24082AA210	24082AA190	CARTRIDGE	Troubleshooting for electrical systems.
ST22771AA030	22771AA030	SELECT MONITOR KIT	Troubleshooting for electrical systems. • English: 22771AA030 (Without printer) • German: 22771AA070 (Without printer) • French: 22771AA080 (Without printer) • Spanish: 22771AA090 (Without printer)

2. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and current.

3. Electrical Components Location

A: LOCATION

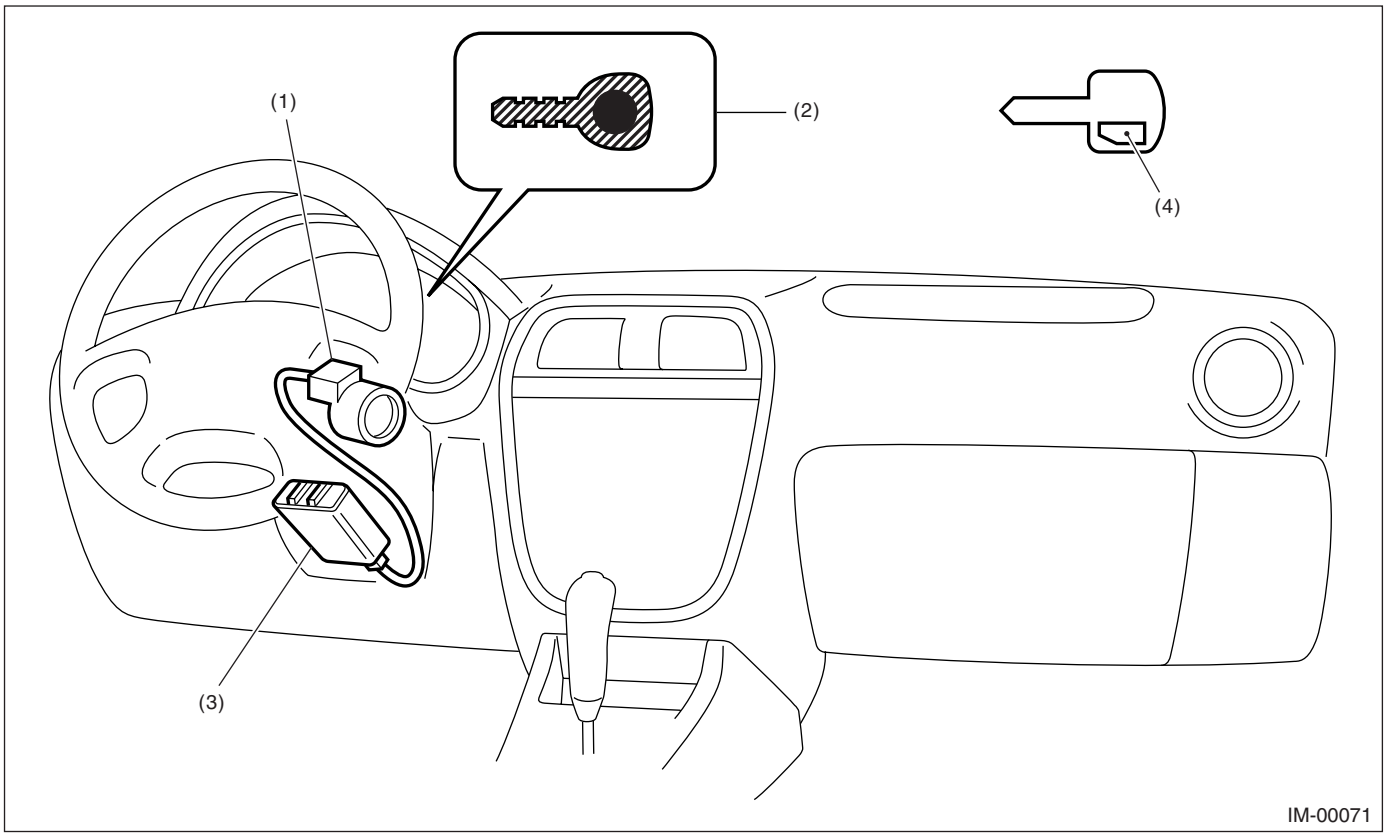

(1) Antenna
(2) Immobilizer indicator light (LED bulb)
(3) Immobilizer control module (IMM ECM)
(4) Transponder

NOTE:
IMM ECM location for RHD model is symmetrically opposite.

4. Immobilizer Control Module I/O Signal

A: SCHEMATIC

1. IMMOBILIZER

<Ref. to WI-182, SCHEMATIC, Immobilizer System.>

5. Subaru Select Monitor

A: OPERATION

1. HOW TO USE SUBARU SELECT MONITOR

1) Prepare the Subaru Select Monitor kit.

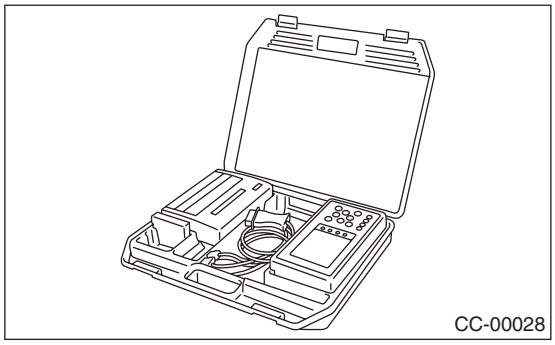

2) Connect the diagnosis cable to Subaru Select Monitor.
3) Insert the cartridge into Subaru Select Monitor.

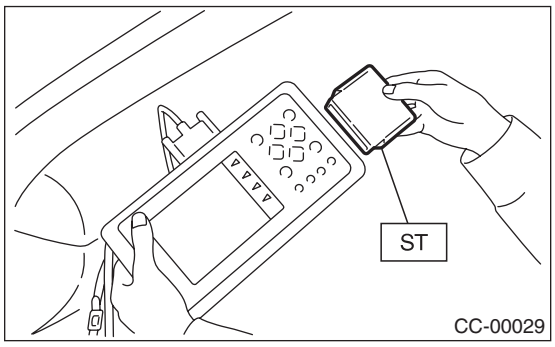

4) Connect the Subaru Select Monitor to data link connector.

(1) Data link connector is located in the lower portion of the instrument panel (on driver's side).

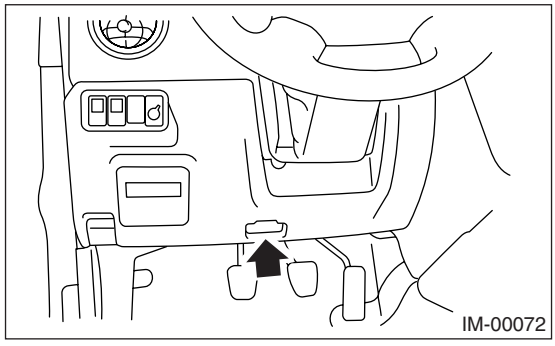

(2) Connect the diagnosis cable to data link connector.

CAUTION:
Do not connect the scan tools except for Subaru Select Monitor.

5) Turn the ignition switch to ON (engine OFF), and then Subaru Select Monitor switch to ON.

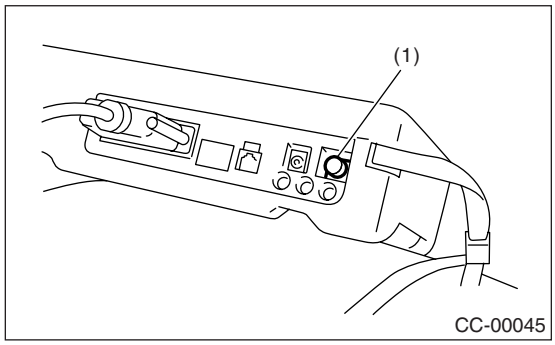

(1) Power switch

6) Using the Subaru Select Monitor, call up any DTCs and various data, and then record them.

2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE.

Refer to Read DTC for information about how to indicate DTC. <Ref. to IM-8, Read Diagnostic Trouble Code (DTC).>

3. INTERFACE CHECK

NOTE:
The communication line between ECM and IMM ECM can be checked in «System Operation Check Mode». This is referred to as "interface check".

1) Connect the Subaru Select Monitor.
2) Set the «System Operation Check Mode» menu display screen, and then select «Immobilizer System».
3) Start the interface check.
4) Does "Communication Line not Shorted" appear on screen?
If "Yes". Go to step 5).
If "No". Go to step 6).
5) After diagnostic results, it is determined that the short circuit is not a diagnostic item. This completes interface check.
6) If a problem is detected, repair. <Ref. to IM-19, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostics Chart with Diagnostic Trouble Code (DTC).>

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1) On the «Main Menu» display screen, select the {Each System Check}, and then press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System}, and then press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {DTC Display}, and then press the [YES] key.
5) On the «DTC Display» display screen, select the {Current DTC} or {History DTC}, and then press the [YES] key.

NOTE:
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
• For detailed concerning DTC, refer to the List of DTC. <Ref. to IM-14, LIST, List of Diagnostic Trouble Code (DTC).>

7. Clear Memory Mode

A: OPERATION

1) On the «Main Menu» display screen, select the {2. Each System Check}, and then press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Engine Control System}, and then press the [YES] key.
3) Press the [YES] key after the information of engine type is displayed.
4) On the «Engine Diagnosis» display screen, select the {Clear Memory}, and then press the [YES] key.
5) When the 'Done' are shown on the display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:
• After the memory has been cleared, the ISC must be initialized. To do this, turn the ignition switch to ON position. Wait 3 seconds before starting the engine.
• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

8. Diagnostics Chart for Immobilizer Indicator Light

A: INSPECTION

1. CHECK IMMOBILIZER INDICATOR CIRCUIT

WIRING DIAGRAM:

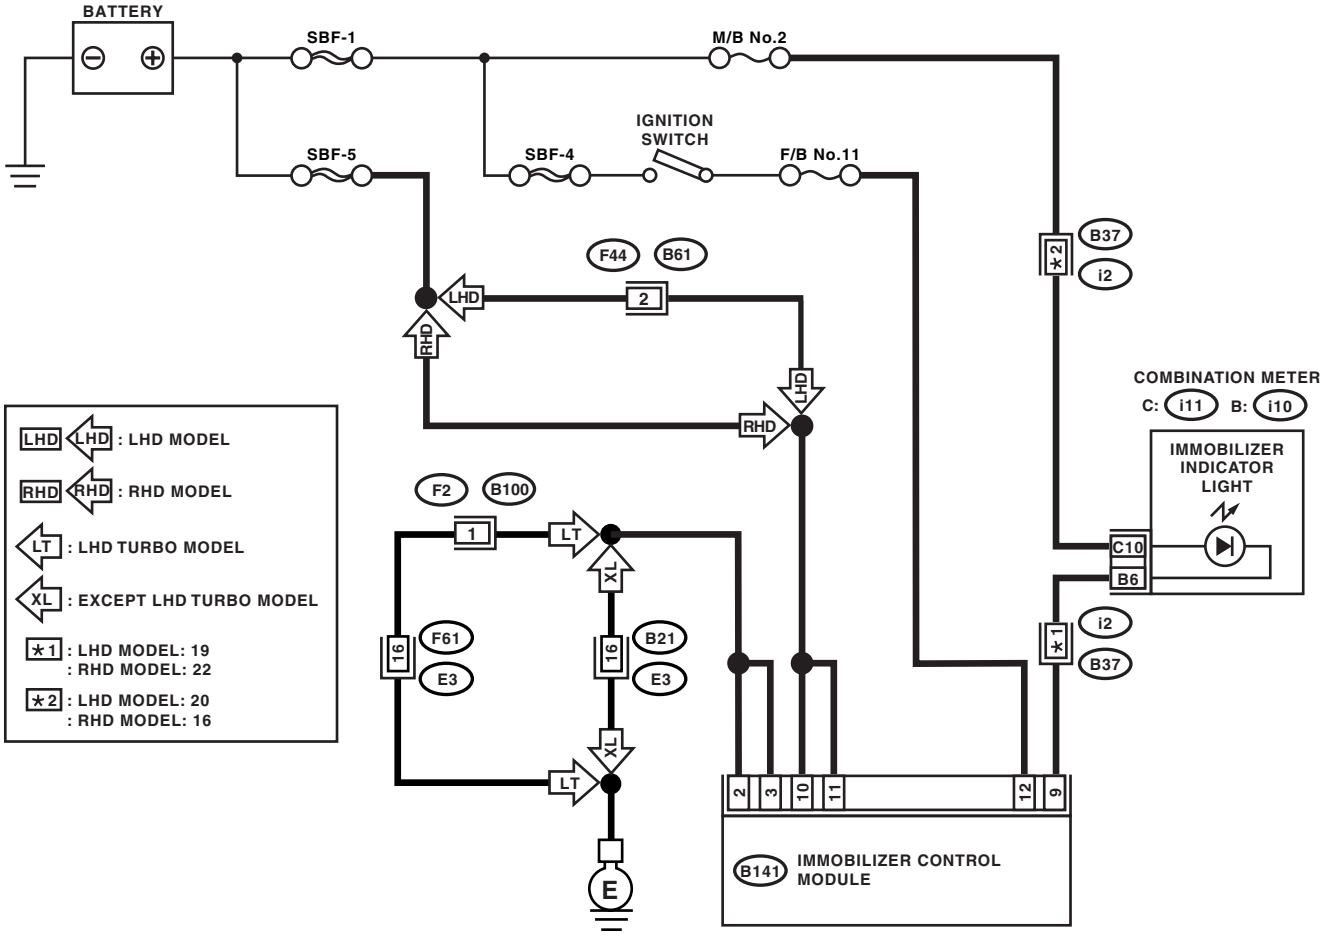

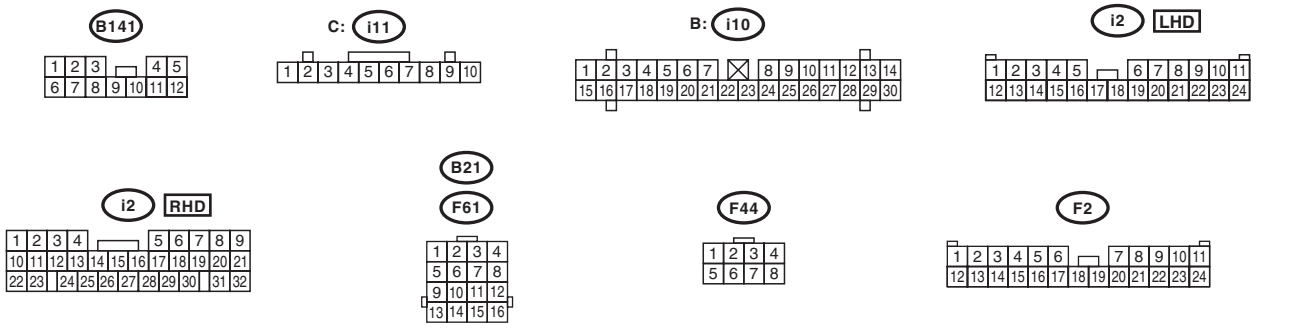

IM-00073

DIAGNOSTICS CHART FOR IMMOBILIZER INDICATOR LIGHT

	Step	Check	Yes	No
1	**CHECK IMMOBILIZER INDICATOR LIGHT COMES ON.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from IMM ECM. 3)Connect a resistor (750 Ω) between IMM ECM harness connector terminal No. 9 and chassis ground.	Does the indicator light come on?	Go to step **2.**	Go to step **5.**
2	**CHECK IMM ECM GROUND CIRCUIT.** Measure the resistance between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 2, No. 3 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **3.**	Repair the open circuit of IMM ECM ground circuit.
3	**CHECK IMM ECM IGNITION CIRCUIT.** 1)Turn the ignition switch to ON. (Engine OFF.) 2)Measure the voltage between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **4.**	Check the harness for open or short between IMM ECM and ignition switch.
4	**CHECK IMM ECM POWER SUPPLY CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Measure the voltage between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 10, No. 11 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to teaching operation manual (Pub. No. S0820GZ).	Check the harness for open or short between IMM ECM and fuse.
5	**CHECK COMBINATION METER CIRCUIT.** 1)Remove the combination meter. <Ref. to IDI-11, Combination Meter Assembly.> 2)Measure the voltage between combination meter harness connector terminal and chassis ground. ***Connector & terminal*** ***(i11) No. 10 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **6.**	Check the harness for open or short between combination meter and fuse.
6	**CHECK COMBINATION METER CIRCUIT.** Measure the resistance between IMM ECM harness connector terminal and combination meter harness connector terminal. ***Connector & terminal*** ***(B141) No. 9 — (i10) No. 6:***	Is the resistance less than 10 Ω?	Faulty LED bulb. Replace the combination meter printed circuit. <Ref. to IDI-12, DISASSEMBLY, Combination Meter Assembly.>	Repair the harness or connector.

2. CHECK KEY SWITCH CIRCUIT

WIRING DIAGRAM:

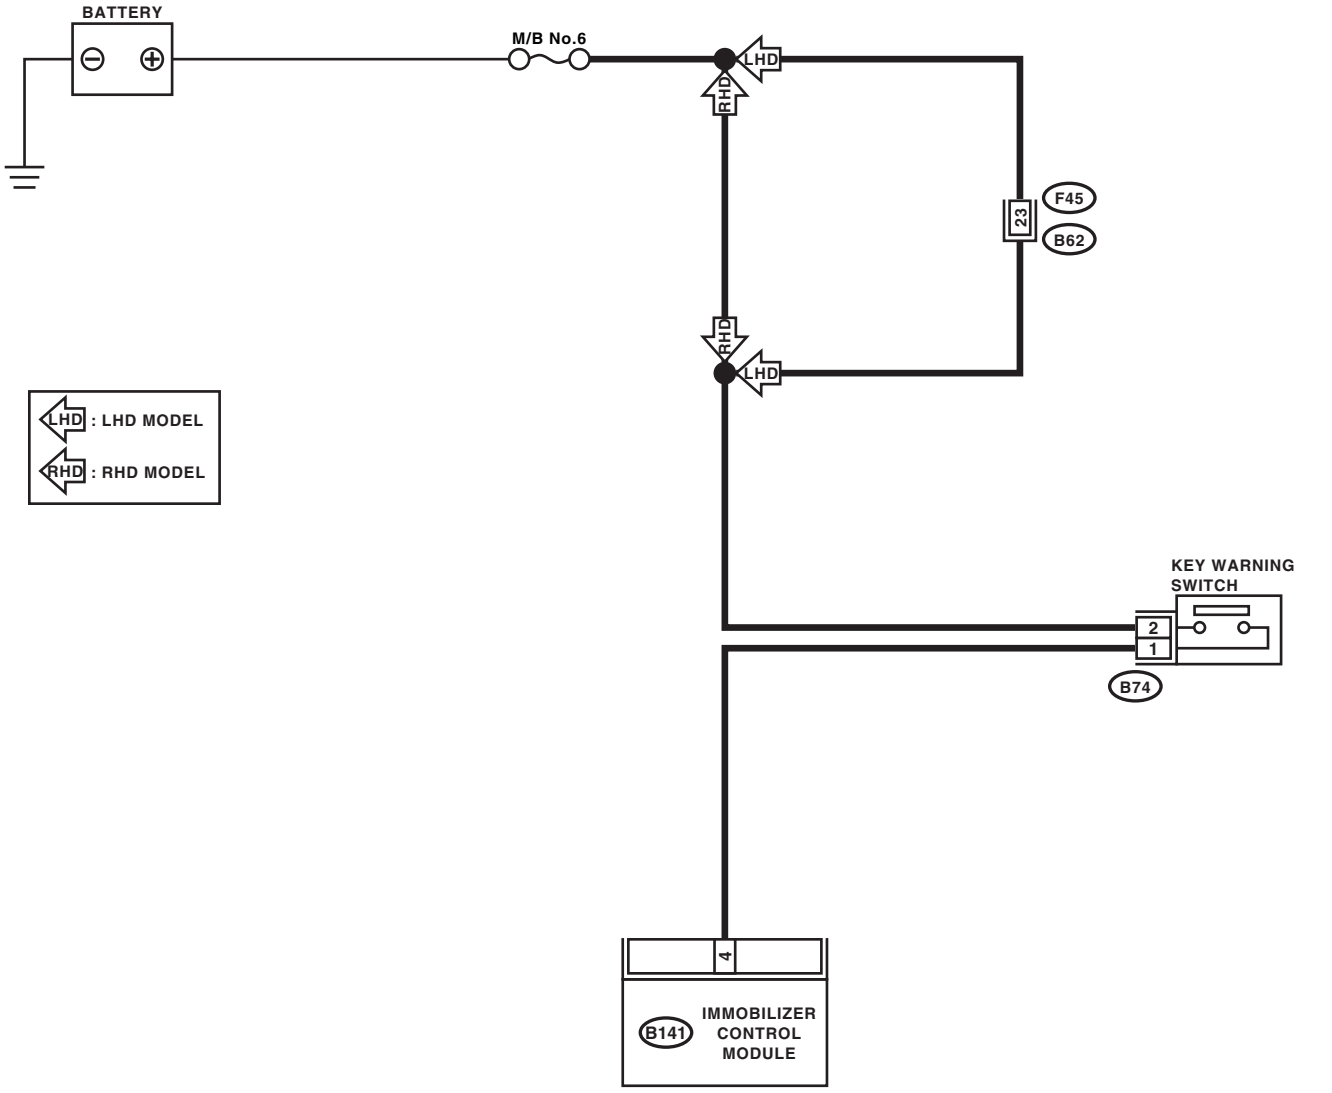

IM-00074

DIAGNOSTICS CHART FOR IMMOBILIZER INDICATOR LIGHT

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY CIRCUIT.** 1)Disconnect the harness connector from key warning switch. 2)Turn the ignition switch to ACC or LOCK position (The key inserted). 3)Measure the voltage between key warning switch harness connector terminal and chassis ground. ***Connector & terminal*** ***(B74) No. 2 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between key warning switch and fuse.
2	**CHECK KEY SWITCH.** 1)Insert the ignition key to the ignition switch. (OFF or ACC position) 2)Measure the resistance between key warning switch connector terminals. ***Connector & terminal*** ***No. 1 — No. 2:***	Is the resistance less than 1 Ω?	Go to step **3.**	Replace the key warning switch.
3	**CHECK KEY SWITCH.** 1)Remove the ignition key from the ignition switch. 2)Measure the resistance between key warning switch connector terminals. ***Connector & terminal*** ***No. 1 — No. 2:***	Is the resistance more than 1 MΩ?	Go to step **4.**	Replace the key warning switch.
4	**CHECK HARNESS BETWEEN KEY SWITCH AND IMM ECM.** 1)Disconnect the harness connector from key warning switch. 2)Disconnect the harness connector from IMM ECM. 3)Measure the resistance between key warning switch harness connector terminal and IMM ECM harness connector terminal. ***Connector & terminal*** ***(B74) No. 1 — (B141) No. 4:***	Is the resistance less than 10 Ω?	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to teaching operation manual (Pub. No. S0820GZ).	Repair the harness between key warning switch and IMM ECM.

9. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC		Item	Contents of diagnosis	Index No.
Without OBD	With OBD			
53	P0513	Incorrect Immobilizer Key	Incorrect immobilizer key (Use of unregistered key in IMM ECM)	<Ref. to IM-15, DTC P0513 INCORRECT IMMOBILIZER KEY, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
	P1570	ANTENNA	Faulty antenna	<Ref. to IM-16, DTC P1570 ANTENNA, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
	P1571	Reference Code Incompatibility	Reference code incompatibility between IMM ECM and ECM	<Ref. to IM-18, DTC P1571 REFERENCE CODE INCOMPATIBILITY, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
	P1572	IMM Circuit Failure (Except Antenna Circuit)	Communication failure between IMM ECM and ECM	<Ref. to IM-19, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostics Chart with Diagnostic Trouble Code (DTC).>
	P1574	Key Communication Failure	Failure of IMM ECM to verify key (transponder) ID code	<Ref. to IM-23, DTC P1574 KEY COMMUNICATION FAILURE, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
	P1576	EGI Control Module EEPROM	ECM malfunctioning	<Ref. to IM-23, DTC P1576 EGI CONTROL MODULE EEPROM, Diagnostics Chart with Diagnostic Trouble Code (DTC).>
	P1577	IMM Control Module EEPROM	IMM ECM malfunctioning	<Ref. to IM-23, DTC P1577 IMM CONTROL MODULE EEPROM, Diagnostics Chart with Diagnostic Trouble Code (DTC).>

NOTE:
If any DTC except for the above immobilizer DTC has been output, carry out diagnosis for the engine DTC. <Ref. to EN(H4SO)-73, List of Diagnostic Trouble Code (DTC).> or <Ref. to EN(H4SOw/oOBD)-54, List of Diagnostic Trouble Code (DTC).> or <Ref. to EN(H4DOTC)-75, List of Diagnostic Trouble Code (DTC).>

10.Diagnostics Chart with Diagnostic Trouble Code (DTC)

A: DTC P0513 INCORRECT IMMOBILIZER KEY

DIAGNOSIS:

- Use of unregistered key in IMM ECM

Step		Check	Yes	No
1	**PERFORM TEACHING OPERATION ON IGNITION KEY.** Perform teaching operation on all keys of the vehicle. Refer to the teaching operation manual (Pub. No. S0820GZ).	Is teaching operation for all keys completed?	END	Replace all ignition keys (including the transponder). Go to step **2.**
2	**PERFORM TEACHING OPERATION ON IGNITION KEY.** Perform teaching operation on all keys with vehicle. Refer to the teaching operation manual (Pub. No. S0820GZ).	Is teaching operation for all keys completed?	END	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).

B: DTC P1570 ANTENNA

DIAGNOSIS:

- Faulty antenna

WIRING DIAGRAM:

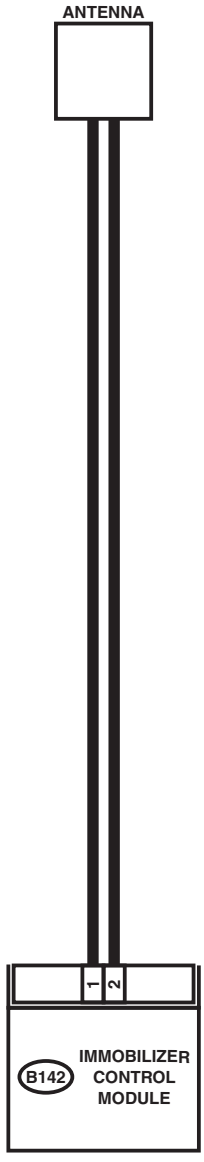

B142

1 2

IM-00008

	Step	Check	Yes	No
1	**CHECK ANTENNA CIRCUIT.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness antenna connector from IMM ECM. <Ref. to SL-40, Immobilizer Antenna.> 3)Measure the resistance of antenna circuit. ***Connector & terminal*** ***(B142) No. 1 — No. 2:***	Is the resistance less than 10 Ω?	Go to step **2.**	Replace the antenna. <Ref. to SL-40, Immobilizer Antenna.>
2	**CHECK ANTENNA CIRCUIT.** Measure the resistance between antenna harness connector and chassis ground. ***Connector & terminal*** ***(B142) No. 1 — Chassis ground:***	Is the resistance less than 10 Ω?	Replace the antenna. <Ref. to SL-40, Immobilizer Antenna.>	Go to step **3.**
3	**CHECK ANTENNA CIRCUIT.** Measure the resistance between antenna harness connector and chassis ground. ***Connector & terminal*** ***(B142) No. 2 — Chassis ground:***	Is the resistance less than 10 Ω?	Replace the antenna. <Ref. to SL-40, Immobilizer Antenna.>	Go to step **4.**
4	**CHECK ANTENNA CIRCUIT.** 1)Turn the ignition switch to ON. (Engine OFF.) 2)Measure the voltage between antenna harness connector and chassis ground. ***Connector & terminal*** ***(B142) No. 1 (+) — Chassis ground (−):***	Is the voltage 0 V?	Go to step **5.**	Replace the antenna. <Ref. to SL-40, Immobilizer Antenna.>
5	**CHECK ANTENNA CIRCUIT.** Measure the voltage between antenna harness connector and chassis ground. ***Connector & terminal*** ***(B142) No. 2 (+) — Chassis ground (−):***	Is the voltage 0 V?	Go to step **6.**	Repair the harness between IMM ECM and antenna, because there is short circuit with battery voltage line or ignition switch “ON” line.
6	**CHECK IMM ECM FUNCTION.** 1)Turn the ignition switch to OFF. 2)Connect the antenna harness connector to IMM ECM. 3)Insert the key to ignition switch, measure changes in voltage between antenna harness connector. ***Connector & terminal*** ***(B142) No. 1 (+) — No. 2 (−):***	Is the voltage −30 to 30 V? (Approx. 0.1 second after inserting the key) Is the voltage 0 V? (Approx. 1 second after inserting the key)	Go to step **7.**	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).
7	**CHECK IGNITION KEY (TRANSPONDER).** 1)Remove the key from ignition switch. 2)Start the engine using other keys that have undergone the teaching operation, furnished with vehicle.	Does the engine start?	Replace the ignition key (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).

C: DTC P1571 REFERENCE CODE INCOMPATIBILITY

DIAGNOSIS:

- Reference code incompatibility between IMM ECM and ECM

Step		Check	Yes	No
1	**PERFORM TEACHING OPERATION ON IGNITION KEY.** Perform teaching operation on all keys of the vehicle. Refer to the teaching operation manual.	Is teaching operation for all keys completed?	END	Replace the ECM <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>, <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).> or <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>, IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).

D: DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT)

DIAGNOSIS:

- Communication failure between IMM ECM and ECM

WIRING DIAGRAM:

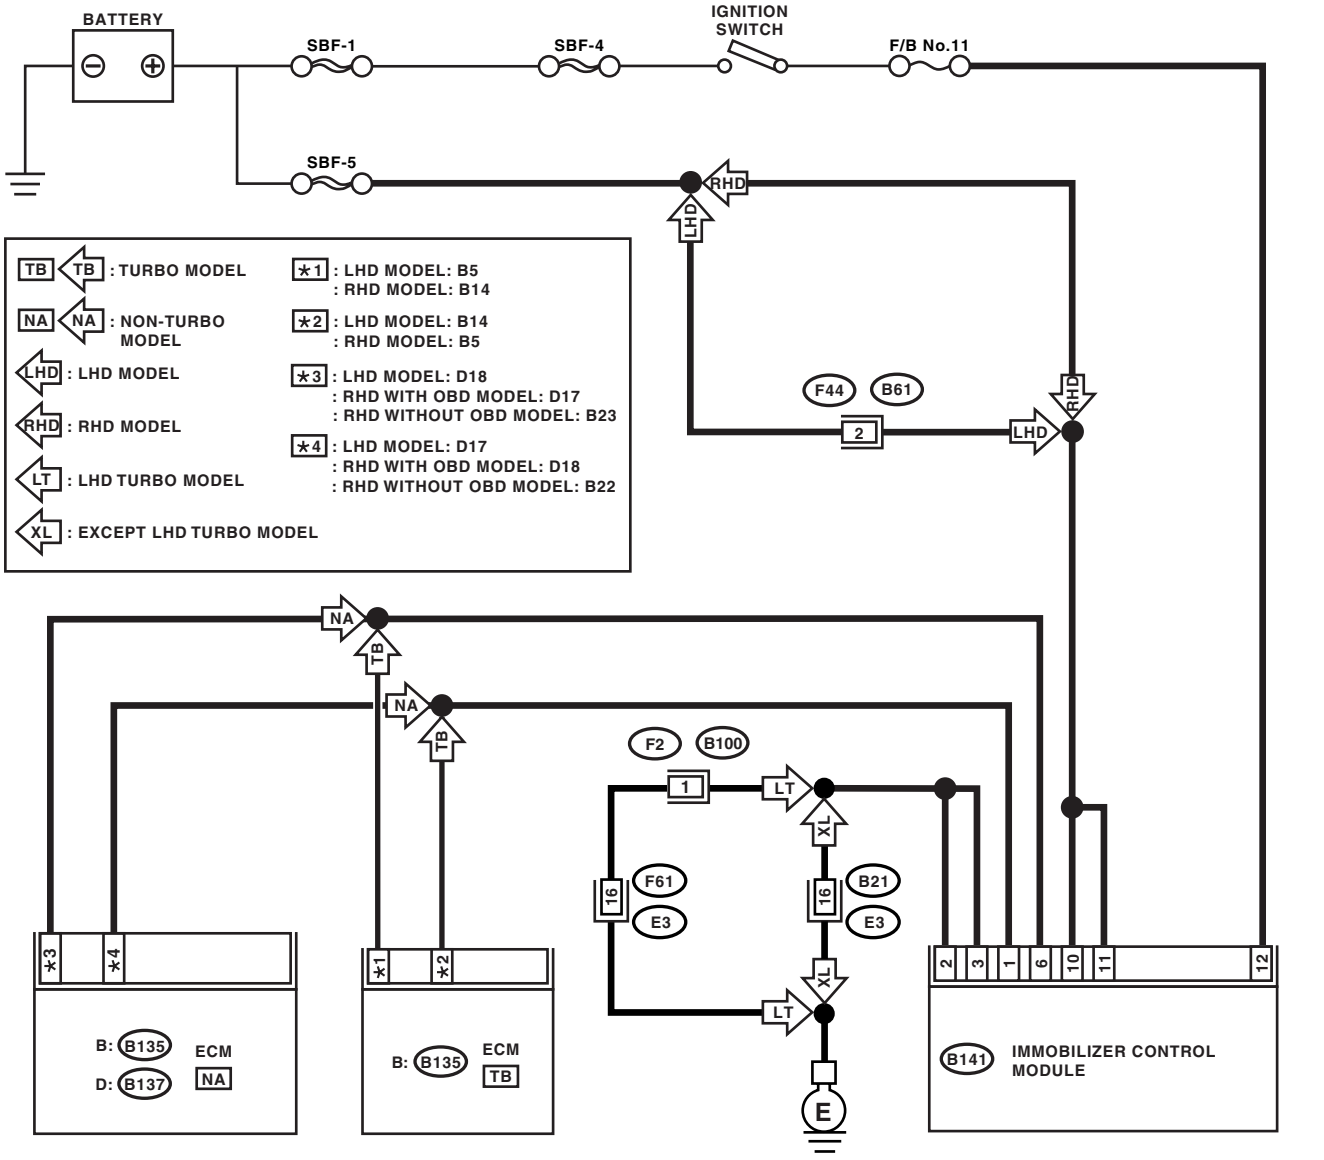

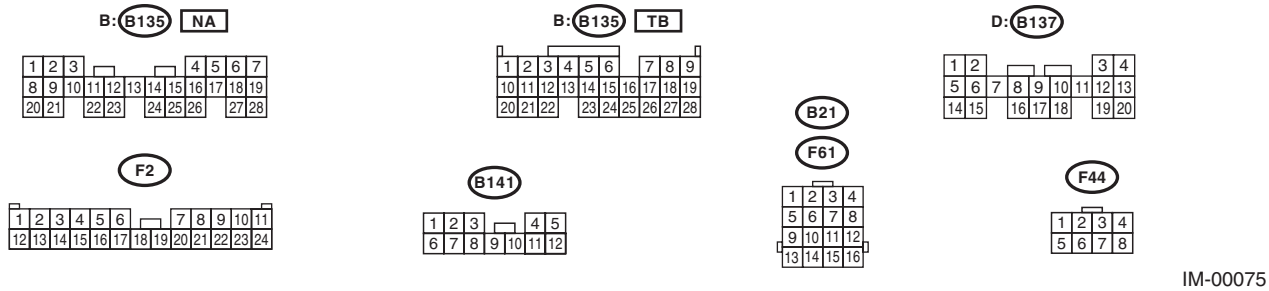

IM-00075

	Step	Check	Yes	No
1	**CHECK POWER SUPPLY CIRCUIT OF IMM ECM.** 1)Turn the ignition switch to OFF. 2)Disconnect the harness connector from IMM ECM. 3)Measure the voltage between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 10, No.11 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **2.**	Check the harness for open or short between IMM ECM and fuse.
2	**CHECK POWER SUPPLY CIRCUIT OF IMM ECM.** 1)Turn the ignition switch to ON. (Engine OFF.) 2)Measure the voltage between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 12 (+) — Chassis ground (−):***	Is the voltage more than 10 V?	Go to step **3.**	Check the harness for open or short between IMM ECM and ignition switch.
3	**CHECK GROUND CIRCUIT OF IMM ECM.** 1)Turn the ignition switch to OFF. 2)Measure the resistance between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 2, No.3 — Chassis ground:***	Is the resistance less than 10 Ω?	Go to step **4.**	Repair the open circuit of IMM ECM ground circuit.
4	**CHECK HARNESS BETWEEN IMM ECM AND ECM.** 1)Disconnect the harness connector from ECM and IMM ECM. 2)Measure the resistance between IMM ECM harness connector terminal and ECM harness connector terminal. ***Connector & terminal*** ***LHD SOHC model*** ***(B141) No. 1 — (B137) No. 17:*** ***RHD SOHC model with OBD*** ***(B141) No. 1 — (B137) No. 18:*** ***RHD SOHC model without OBD*** ***(B141) No. 1 — (B135) No. 22:*** ***LHD turbo model*** ***(B141) No. 1 — (B135) No. 14:*** ***RHD turbo model*** ***(B141) No. 1 — (B135) No. 5:***	Is the resistance less than 10 Ω?	Go to step **5.**	Repair the open circuit of harness between IMM ECM and ECM.
5	**CHECK HARNESS BETWEEN IMM ECM AND ECM.** Measure the resistance between IMM ECM harness connector terminal and ECM harness connector terminal. ***Connector & terminal*** ***LHD SOHC model*** ***(B141) No. 6 — (B137) No. 18:*** ***RHD SOHC model with OBD*** ***(B141) No. 6 — (B137) No. 17:*** ***RHD SOHC model without OBD*** ***(B141) No. 6 — (B135) No. 23:*** ***LHD turbo model*** ***(B141) No. 6 — (B135) No. 5:*** ***RHD turbo model*** ***(B141) No. 6 — (B135) No. 14:***	Is the resistance less than 10 Ω?	Go to step **6.**	Repair the open circuit of harness between IMM ECM and ECM.

	Step	Check	Yes	No
6	**CHECK HARNESS OF COMMUNICATION LINE.** 1)Turn the ignition switch to ON. (Engine OFF.) 2)Measure the voltage between IMM ECM harness connector terminal and chassis ground. ***Connector & terminal*** ***(B141) No. 1, No.6 (+) — Chassis ground (−):***	Is the voltage 0 V?	Go to step **7.**	Repair the harness between IMM ECM and ECM, because there is short circuit with battery voltage line or ignition switch "ON" line.
7	**CHECK HARNESS OF COMMUNICATION LINE.** Measure the voltage between ECM harness connector terminal and engine ground. ***Connector & terminal*** ***LHD SOHC and RHD SOHC model with OBD*** ***(B137) No. 17, No. 18 (+) — Engine ground (−):*** ***RHD SOHC model without OBD*** ***(B135) No. 22, No.23 (+) — Engine ground (−):*** ***Turbo model*** ***(B135) No. 5, No.14 (+) — Engine ground (−):***	Is the voltage 0 V?	Go to step **8.**	Repair the harness between IMM ECM and ECM, because there is short circuit with battery voltage line or ignition switch "ON" line.
8	**CHECK ECM BY INTERFACE CHECK.** 1)Connect the harness connector to ECM. 2)Disconnect the harness connector from IMM ECM. 3)Perform interface check. <Ref. to IM-7, INTERFACE CHECK, Subaru Select Monitor.>	Does "Commun. Line Shorted to Ground" appear on the screen?	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>, <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).> or <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).> Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).	Go to step **9.**

	Step	Check	Yes	No
9	**CHECK ECM BY INTERFACE CHECK.** Perform interface check.	Does “Commun. Line Shorted to Battery” appear on the screen?	Replace the ECM. <Ref. to FU(H4SO)-48, Engine Control Module (ECM).>, <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).> or <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).> Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).	Go to step **10.**
10	**CHECK ECM BY INTERFACE CHECK.** Perform interface check.	Does “Communication Line not Shorted” appear on the screen?	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).	When “**Check (Time Out)**” appears on the screen, perform interface check again.

E: DTC P1574 KEY COMMUNICATION FAILURE

DIAGNOSIS:

- Failure of IMM ECM to verify key (transponder) ID code

	Step	Check	Yes	No
1	**CHECK IMM ECM FUNCTION.** Insert the key to ignition switch (LOCK position), measure changes in voltage between Antenna connector. ***Connector & terminal (B142) No. 1 — No. 2:***	Is the voltage −30 to 30 V? (Approx. 0.1 second after inserting the key) Is the voltage 0 V? (Approx. 1 second after inserting the key)	Go to step **2.**	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).
2	**CHECK IGNITION KEY (TRANSPONDER).** 1)Remove the key from ignition switch. 2)Start the engine using other keys that have undergone the teaching operation, furnished with vehicle.	Does the engine start?	Replace the ignition key (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).	Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.> and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).

F: DTC P1576 EGI CONTROL MODULE EEPROM

DIAGNOSIS:

- ECM malfunctioning

1. REPLACE ECM.

Replace the ECM.
<Ref. to FU(H4SO)-48, Engine Control Module (ECM).>, <Ref. to FU(H4SOw/oOBD)-43, Engine Control Module (ECM).> or <Ref. to FU(H4DOTC)-49, Engine Control Module (ECM).>
Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).

G: DTC P1577 IMM CONTROL MODULE EEPROM

DIAGNOSIS:

- IMM ECM malfunctioning

1. REPLACE IMM ECM.

Replace the IMM ECM <Ref. to SL-39, Immobilizer Control Module.>, and then replace all ignition keys (including the transponder). Then perform teaching operation. Refer to the teaching operation manual (Pub. No. S0820GZ).

WIRING SYSTEM SECTION

WIRING SYSTEM WI

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.
This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.
Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD. G1860GE7

WIRING SYSTEM

WI

		Page
1.	Basic Diagnostics Procedure	3
2.	Working Precautions	15
3.	Power Supply Routing	16
4.	Ground Distribution	30
5.	Airbag System	48
6.	Air Conditioning System	54
7.	Anti-lock Brake System	62
8.	AT Control System	68
9.	Audio System	80
10.	Charging System	84
11.	Combination Meter	86
12.	Cruise Control System	94
13.	Engine Coolant Temperature Gauge System	97
14.	Engine Electrical System	100
15.	Fuel Gauge System	175
16.	Full-Time Dual-Range System	177
17.	Front Accessory Power Supply System	179
18.	Headlight Beam Leveler System	180
19.	Horn System	181
20.	Immobilizer System	182
21.	Keyless Entry System	186
22.	Back-up Light System	195
23.	Clearance Light and Illumination Light System	196
24.	Front Fog Light System	208
25.	Headlight System	211
26.	In Compartment Light System	213
27.	Stop Light System	217
28.	Turn Signal Light and Hazard Light System	218
29.	Oil Pressure Warning Light System	222
30.	Outside Temperature Display System	224
31.	Parking Brake and Brake Fluid Level Warning System	226
32.	Power Window System	228
33.	Radiator Fan System	236
34.	Rear Fog Light System	238
35.	Rear Window Defogger System	241
36.	Remote Controlled Rearview Mirror System	243
37.	Seat Belt Warning System	245
38.	Seat Heater System	249
39.	Security System	250
40.	Starter System	252
41.	Sunroof System	254
42.	Wiper and Washer System (Front)	255
43.	Wiper and Washer System (Rear)	257

44. Intercooler Water Spray System 259
45. Harness Components Location 261
46. Front Wiring Harness 263
47. Bulkhead Wiring Harness (In Engine Room) 267
48. Bulkhead Wiring Harness (In Compartment) 275
49. Engine Wiring Harness and Transmission Cord 281
50. Instrument Panel Wiring Harness 287
51. Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord 291
52. Door Cord 297
53. Rear Wiring Harness and Trunk Lid Cord 301
54. Rear Wiring Harness and Rear Gate Cord 303

1. Basic Diagnostics Procedure

A: BASIC PROCEDURES

1. GENERAL

The most important purpose of diagnostics is to determine which part is malfunctioning quickly, to save time and labor.

2. IDENTIFICATION OF TROUBLE SYMPTOM

Determine what the problem is based on symptom.

3. PROBABLE CAUSE OF TROUBLE

Look at the wiring diagram and check system's circuit. Then check the switch, relay, fuse, ground, etc.

4. LOCATION AND REPAIR OF TROUBLE

1) Using the diagnostics narrow down the causes.
2) If necessary, use a voltmeter, ohmmeter, etc.
3) Before replacing certain component parts (switch, relay, etc.), check the power supply, ground, for open wiring harness, poor connectors, etc. If no problems are encountered, check the component parts.

5. CONFIRMATION OF SYSTEM OPERATION

After repairing, ensure that the system operates properly.

B: BASIC INSPECTION

1. VOLTAGE MEASUREMENT

1) Using a voltmeter, connect the negative lead to a good ground point or negative battery terminal and the positive lead to the connector or component terminal.
2) Contact the positive probe of the voltmeter on connector (A).
The voltmeter will indicate a voltage.
3) Shift the positive probe to connector (B). The voltmeter will indicate no voltage.

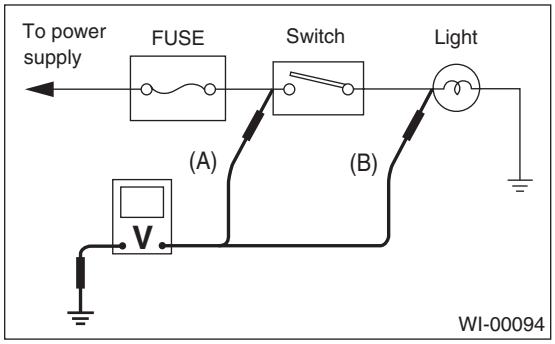

4) With test set-up held as it is, turn the switch ON. The voltmeter will indicate a voltage and, at the same time, the light will come on.
5) The circuit is in good order. If a problem such as a lamp failing to light occurs, use the procedures outlined above to track down malfunction.

2. CIRCUIT CONTINUITY CHECKS

1) Disconnect the battery cable or connector so there is no voltage between check points.
Contact the two leads of an ohmmeter to each of the check points.
If the circuit has diodes, reverse the two leads and check again.
2) Use an ohmmeter to check for the diode continuity. When contacting the negative lead to diode positive side and positive lead to negative side, there should be continuity.
When contacting the two leads in reverse, there should be no continuity.

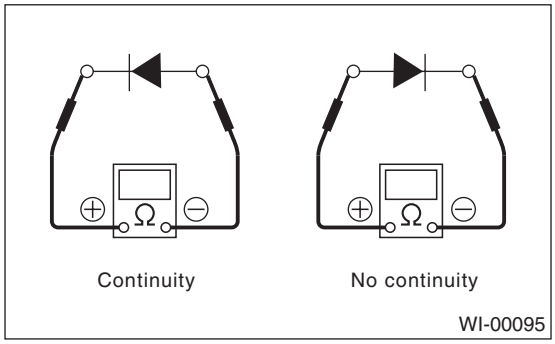

3) Symbol "❍—❍" indicates that continuity exists between two points or terminals. For example, when a switch position is "3", continuity exists among terminals 1, 3 and 6, as shown in table below.

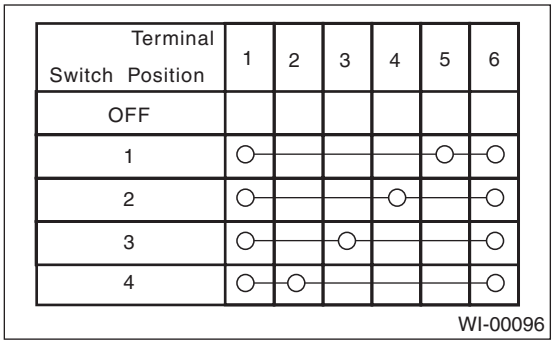

Terminal / Switch Position	1	2	3	4	5	6
OFF						
1	○				○	○
2	○			○		○
3	○		○			○
4	○	○				○

3. HOW TO DETERMINE AN OPEN CIRCUIT

1) Voltmeter Method:
An open circuit is determined by measuring the voltage between respective connectors and ground using a voltmeter, starting with the connector closest to power supply. The power supply must be turned ON so that current flows in the circuit. If voltage is not present between a particular connector and ground, the circuit between that connector and previous connector is open.

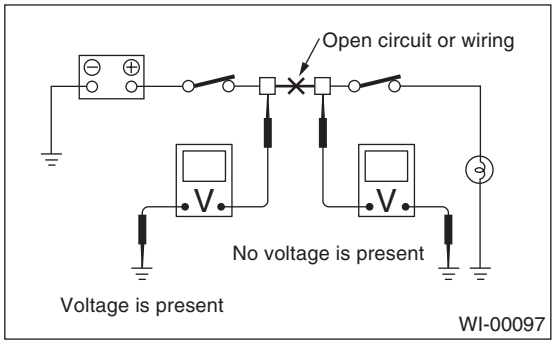

2) Ohmmeter method:
Disconnect all connectors affected, and check the continuity in wiring between adjacent connectors. When the ohmmeter indicates "infinite", the wiring is open.

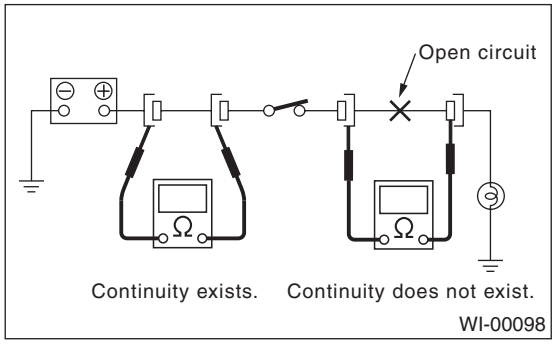

4. HOW TO DETERMINE A SHORT CIRCUIT

1) Test lamp method:
Connect a test lamp (rated at approx. 3 watts) in place of the blown fuse and allow current to flow through the circuit. Disconnect one connector at a time from the circuit, starting with the one located farthest from power supply. If the test lamp goes out when a connector is disconnected, the wiring between that connection and next connector (farther from the power supply) is shorted.

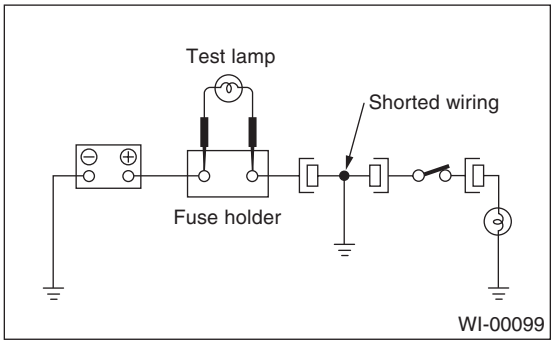

2) Ohmmeter method:
Disconnect all affected connectors, and check the continuity between each connector and ground. When the ohmmeter indicates continuity between a particular connector and ground, that the connector is shorted.

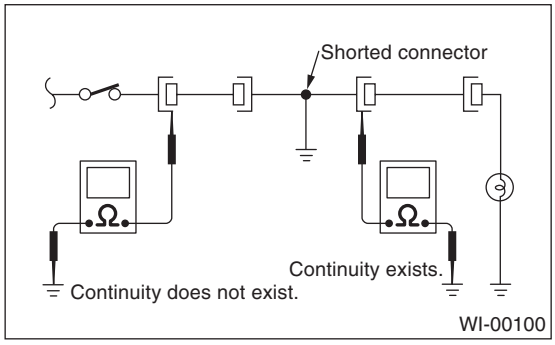

C: HOW TO READ WIRING DIAGRAMS

1. WIRING DIAGRAM

The wiring diagram of each system is illustrated so that you can understand the path through which electric current flows from battery.
Sketches and codes are used in the diagrams. They should read as follows:

- Each connector and its terminal position are indicated by a sketch of the connector in a disconnected state which is viewed from front.

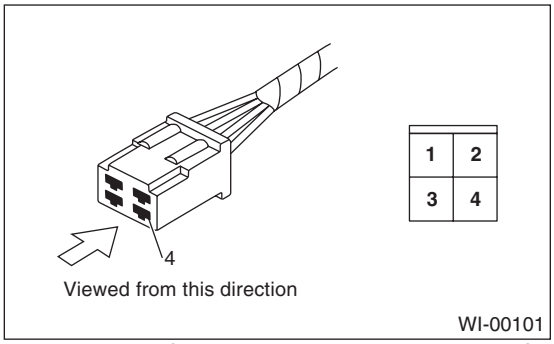

- The number of poles or pins, presence of a lock, and pin number of each terminal are indicated in the sketch of each connector. In the sketch, the highest pole number refers to the number of poles which connector has. For example, the sketch of connector shown in the figure indicates the connector has 9 poles.

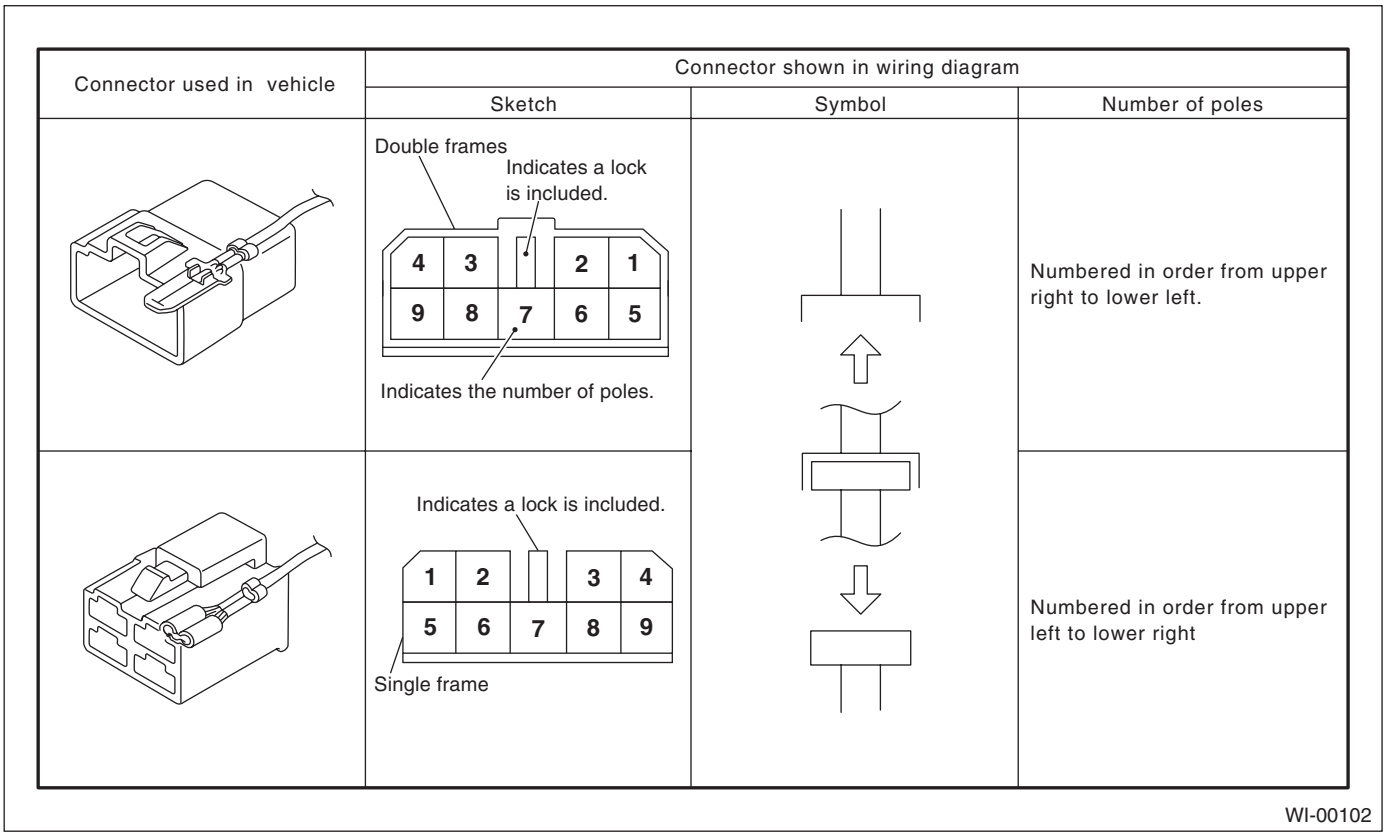

• When one set of connectors is viewed from the front side, the pole numbers of one connector are symmetrical to those of other. When these two connectors are connected as a unit, the poles which have the same number are joined.

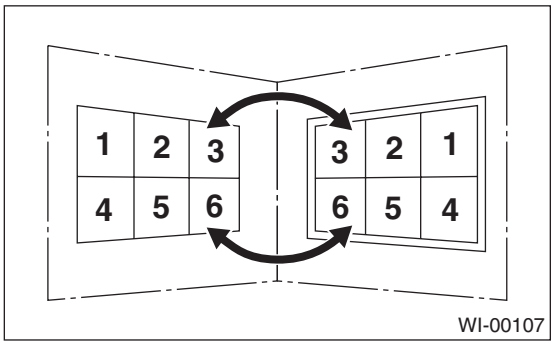

• Electrical wiring harness:
The connectors are numbered along with the number of poles, external colors, and mating connections in accompanying list.
• The sketch of each connector in the wiring diagram usually shows (A) side of the connector. The relationship between wire color, terminal number and connector is described in figure.

NOTE:
A wire which runs in one direction from a connector terminal sometimes may have a different color from that which runs in the other direction from that terminal.

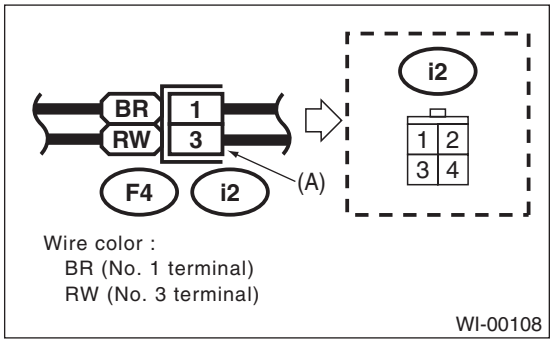

• In wiring diagram, connectors which have no terminal number refer to one-pole types. Sketches of these connectors are omitted intentionally.

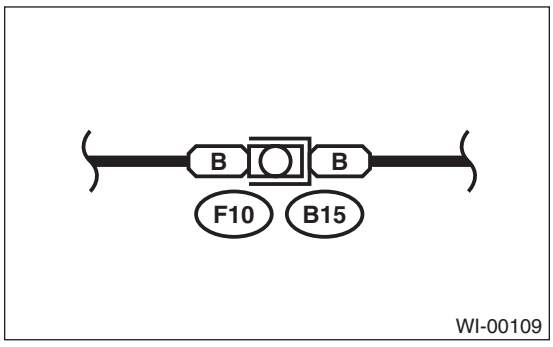

• The following color codes are used to indicate the colors of the wires used.

Color code	Color
L	Blue
B	Black
Y	Yellow
G	Green
R	Red
W	White
Br	Brown
Lg	Light green
Gr	Gray
P	Pink
Or	Orange
Lb	Light Blue
V	Violet
SA	Sealed (Inner)
SB	Sealed (Outer)

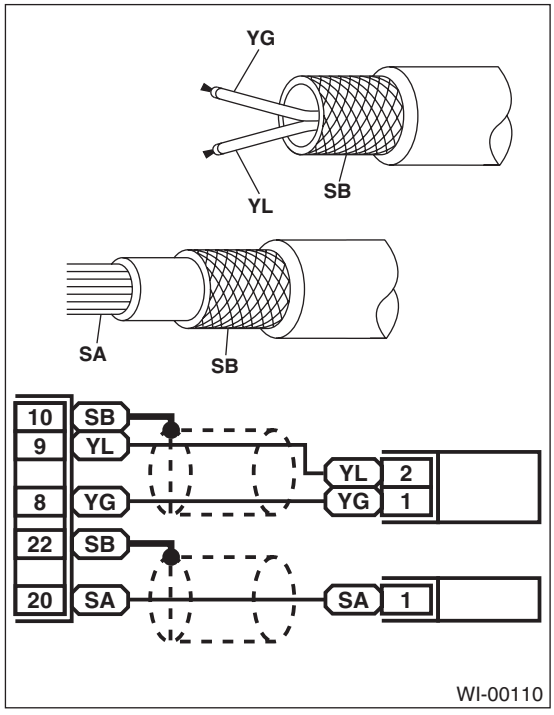

• The wire color code, which consists of two letters (or three letters including Br or Lg), indicates the standard color (base color of the wire covering) by its first letter and stripe marking by its second letter.

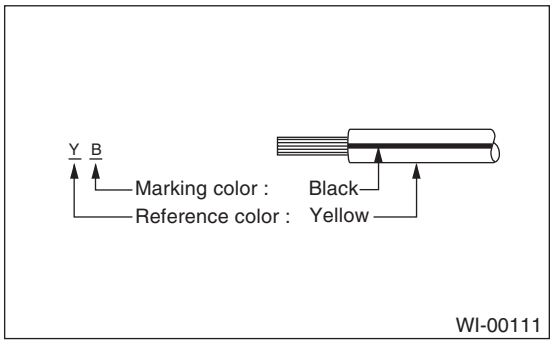

• The table lists the nominal sectional areas and allowable currents of wires.

CAUTION:
When replacing or repairing a wire, be sure to use the same size and type of wire which was originally used.

NOTE:
• The allowable current in the table indicates tolerable amperage of each wire at an ambient temperature of 40°C (104°F).
• The allowable current changes with ambient temperature. Also, it changes if a bundle of more than two wires is used.

Nominal sectional area mm^2	No. of strands/ strand diameter	Outside diameter of finished wiring mm	Allowable current Amps/ 40°C (104°F)
0.3	7/0.26	1.8	7
0.5	7/0.32	2.2 (or 2.0)	12
0.75	30/0.18	2.6 (or 2.4)	16
0.85	11/0.32	2.4 (or 2.2)	16
1.25	16/0.32	2.7 (or 2.5)	21
2	26/0.32	3.1 (or 2.9)	28
3	41/0.32	3.8 (or 3.6)	38
5	65/0.32	4.6 (or 4.4)	51
8	50/0.45	5.5	67

• Each unit is directly grounded to the body or indirectly grounds through a harness ground terminal. Different symbols are used in the wiring diagram to identify the two grounding systems.

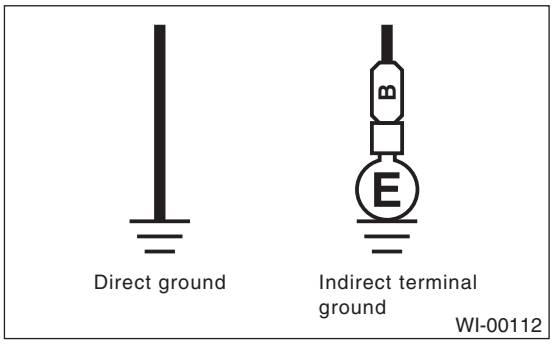

• The ground points shown in the wiring diagram refer to the following:

NOTE:
All wiring harnesses are provided with a ground point which should be securely connected.

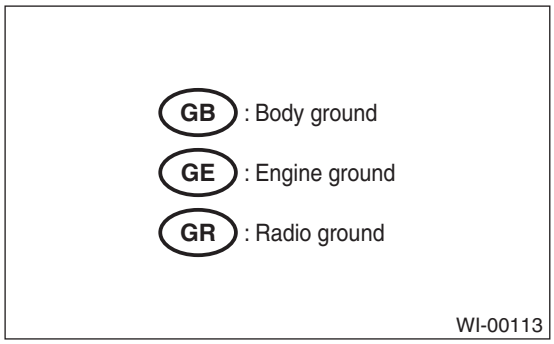

• Relays are classified as normally-open or normally-closed. The normally-closed relay has one or more contacts.

The wiring diagram shows the relay mode when energizing circuit is OFF.

Relay type		Energizing circuit OFF	Energizing circuit ON
Normally-open type	4-pole	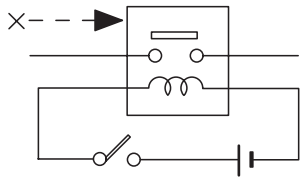	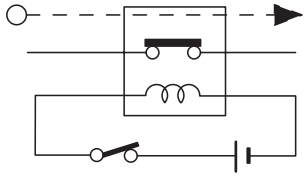
	6-pole	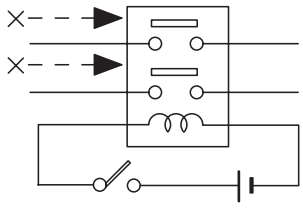	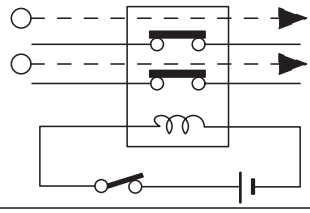
Normally-closed type	4-pole	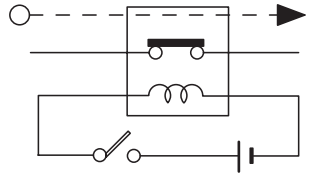	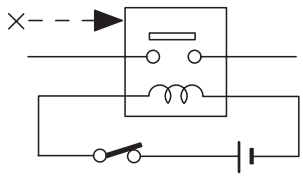
Mixed type	6-pole	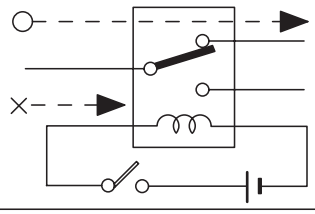	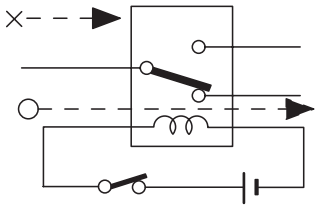

Key to symbols:

○ ⟶ : Current flows.

× ⟶ : Current does not flow.

WI-00114

• Each connector number shown in the wiring diagram corresponds to that in wiring harness. The location of each connector in actual vehicle is determined by reading the first character of the connector (for example, a “F” for F8, “i” for i16, etc.) and type of wiring harness.
The first character of each connector number refers to the area or system of the vehicle.

Symbol	Wiring harness and cord
F	Front wiring harness
B	Bulkhead wiring harness
E	Engine wiring harness
T	Transmission cord, Rear oxygen sensor cord
D	Door cord LH & RH, Rear door cord LH & RH, Rear gate cord
i	Instrument panel wiring harness
R	Rear wiring harness, Fuel tank cord, Roof cord, Trunk lid cord
AB	Airbag wiring harness

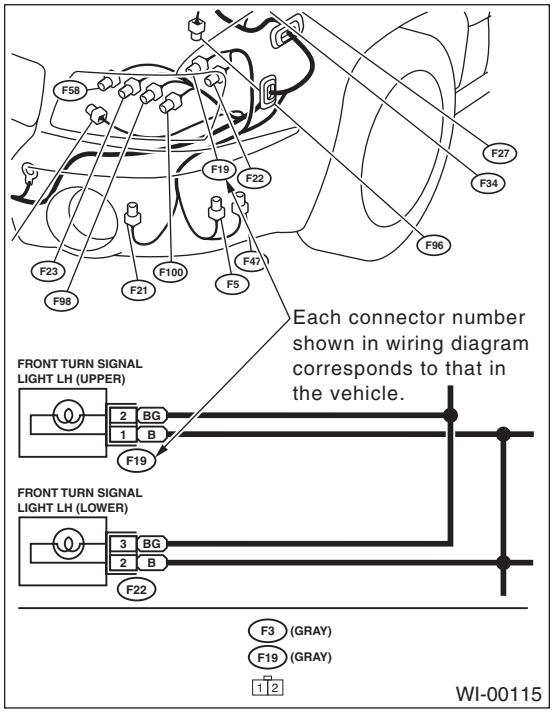

D: SYMBOLS IN WIRING DIAGRAMS

A number of symbols are used in each wiring diagram to easily identify parts or circuits.

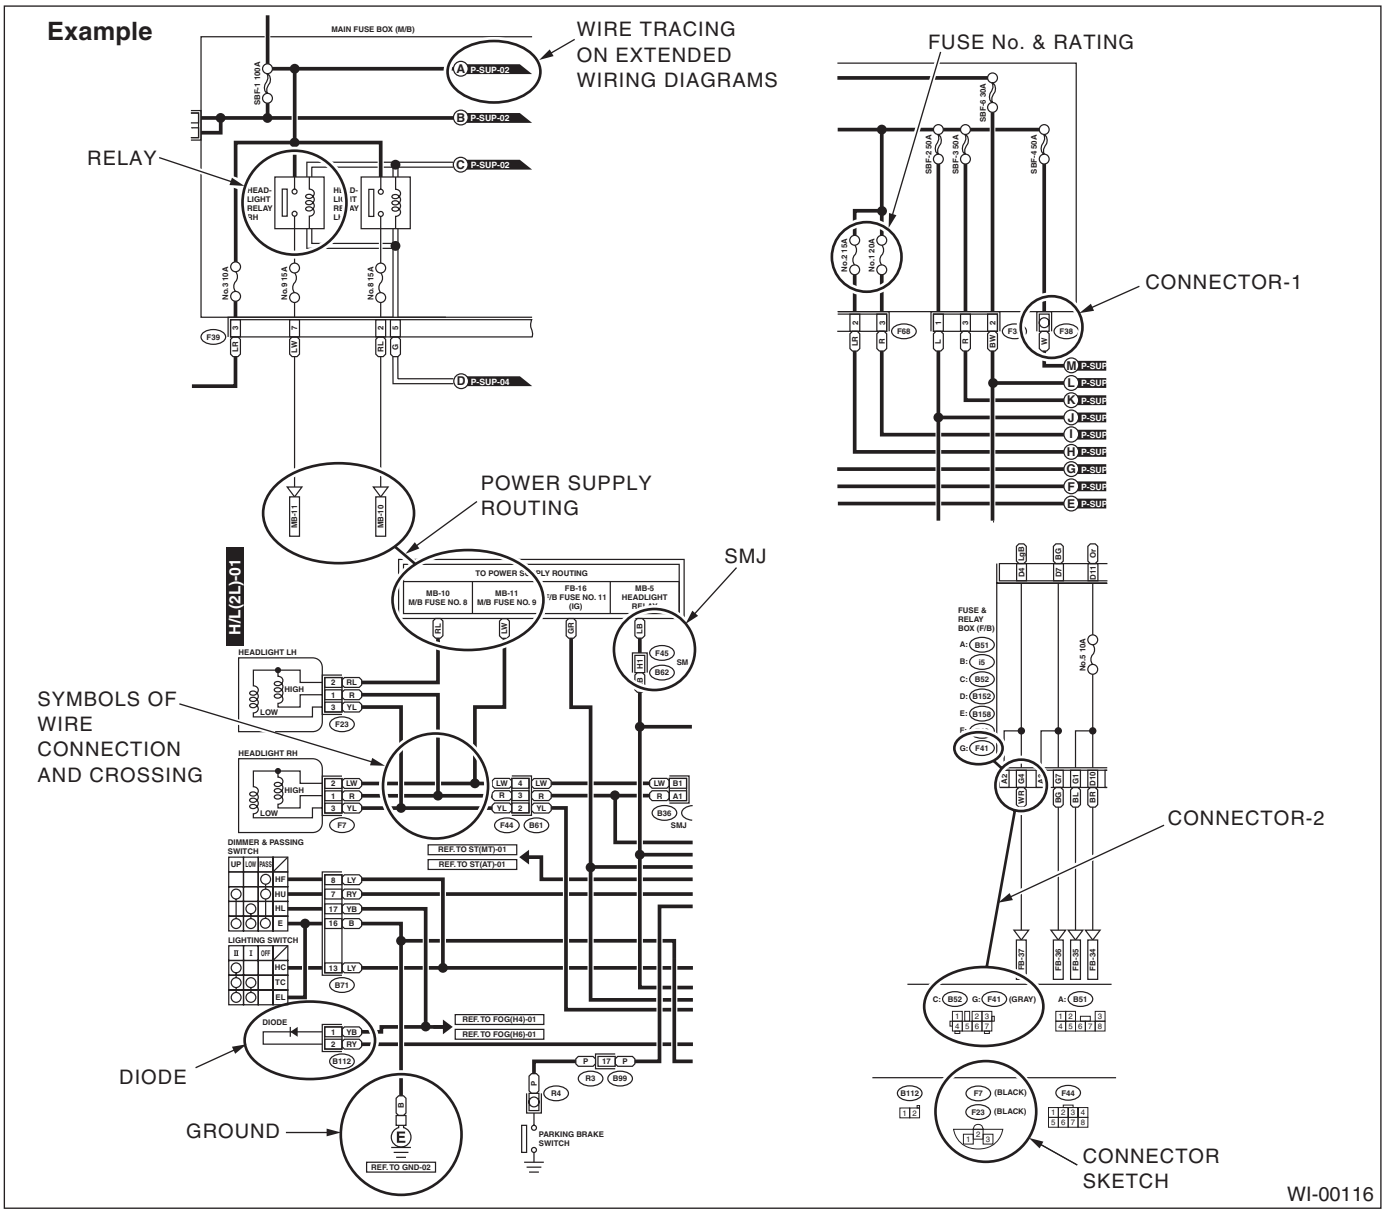

1. RELAY

A symbol used to indicate a relay.

2. CONNECTOR-1

The sketch of the connector indicates one-pole types.

3. WIRING CONNECTION

Some wiring diagrams are indicated in foldouts for convenience. Wiring destinations are indicated where necessary by corresponding symbols (as when two pages are needed for clear indication).

4. FUSE NO. & RATING

The “FUSE No. & RATING” corresponds with that used in fuse box (main fuse box, fuse and joint box).

5. CONNECTOR-2

- Each connector is indicated by a symbol.
- Each terminal number is indicated in the corresponding wiring diagram in an abbreviated form.
- For example, terminal number “G4” refers to No. 4 terminal of connector (G: F41) shown in the connector sketch.

6. CONNECTOR SKETCH

• Each connector sketch clearly identifies the shape and color of a connector as well as terminal locations. Non-colored connectors are indicated in natural color.
• When more than two types of connector number are indicated in a connector sketch, it means that the same type connectors are used.

7. GROUND

Each grounding point can be located easily by referring to the corresponding wiring harness.

8. DIODE

A symbol is used to indicate a diode.

9. WIRE TRACING ON EXTENDED WIRING DIAGRAMS

For a wiring diagram extending over at least two pages, a symbol (consisting of the same characters with arrows), facilitates wire tracing from one page to the next.
A ←→ A, B ←→ B

10.SYMBOLS OF WIRE CONNECTION AND CROSSING

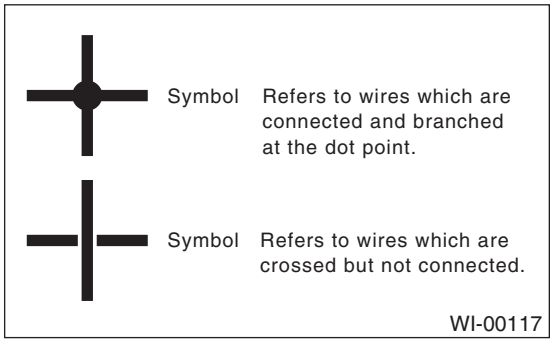

11.POWER SUPPLY ROUTING

A symbol is used to indicate the power supply in each wiring diagram.
“MB-5”, “MB-6”, etc., which are used as power-supply symbols throughout the text, correspond with those shown in POWER SUPPLY ROUTING in the wiring diagram.
Accordingly, using the POWER SUPPLY ROUTING and wiring diagrams permits service personnel to understand the entire electrical arrangement of a system.

12.CLASSIFICATION BY SPECIFICATION

When the wiring diagrams differ according to vehicle specifications, the specification difference is described by using abbreviations.

E: CONNECTOR SYMBOL IN WIRING HARNESS

Main symbols of connector (in wiring harness) are indicated in below.

	Female		
	Pole: From 1 to 8	Pole: From 9 to 20	Pole: More than 21
Water proof type			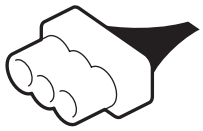
	Male		
		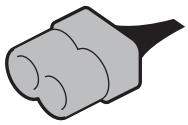	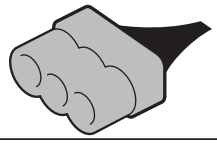
		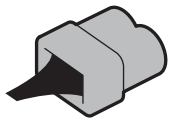	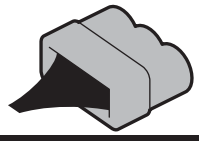

	Female		
	Pole: From 1 to 8	Pole: From 9 to 20	Pole: More than 21
Standard type			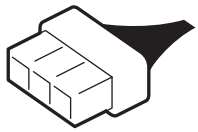
			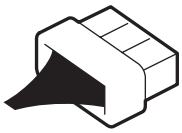
	Male		
		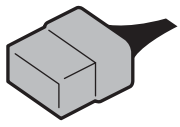	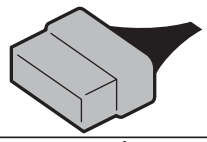
		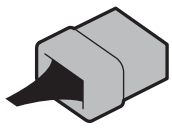	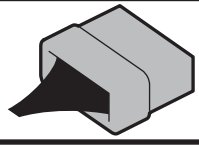

WI-02445

F: ABBREVIATION IN WIRING DIAGRAMS

Abbreviation	Full name
ABS	Antilock Brake System
ACC	Accessory
A/C	Air Conditioning
AD	Auto Down
AT	Automatic Transmission
AU	Auto Up
+B	Battery
DN	Down
E	Ground
F/B	Fuse & Joint Box
FL1.5	Fusible link 1.5 mm^2
IG	Ignition
Illumi.	Illumination
LH	Left Hand
Lo	Low
M	Motor
M/B	Main Fuse Box
MG	Magnet
Mi	Middle
OP	Optional Parts
PASS	Passing
RH	Right Hand
SBF	Slow Blow Fuse
ST	Starter
SW	Switch
UP	Up
WASH	Washer

2. Working Precautions

A: PRECAUTIONS WHEN WORKING WITH THE PARTS MOUNTED ON THE VEHICLE

1) When working under a vehicle which is jacked-up, always be sure to use safety stands.
2) The parking brake must always be applied during working. Also, in automatic transmission models, keep the select lever set to P (Parking) range.
3) Be sure the workshop is properly ventilated when running the engine. Further, be careful not to touch the belt or fan while the engine is operating.
4) Be careful not to touch hot metal parts, especially the radiator and exhaust system immediately after the engine has been shut off.

B: PRECAUTIONS IN TROUBLE DIAGNOSIS AND REPAIR OF ELECTRIC PARTS

1) The battery cable must be disconnected from battery's (–) terminal, and the ignition switch must be set to OFF position, unless otherwise required by the diagnostics.
2) Securely fasten the wiring harness with clamps and slips so that the harness does not interfere with body end parts or edges and bolts or screws.
3) When installing the parts, be careful not to catch them on the wiring harness.
4) When disconnecting a connector, do not pull the wires, but pull while holding the connector body.

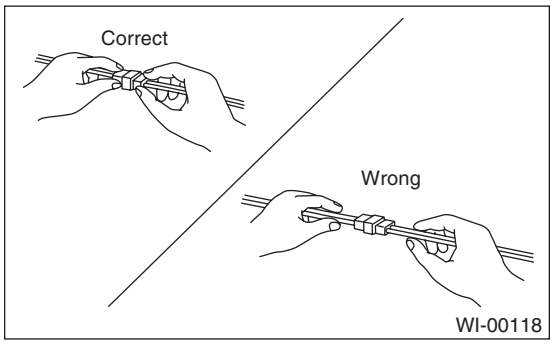

5) Some connectors are provided with a lock. One type of such a connector is disconnected by pushing the lock, and the other, by moving the lock up. In either type the lock shape must be identified before attempting to disconnect the connector.
To connect, insert the connector until it snaps and confirm that it is tightly connected.

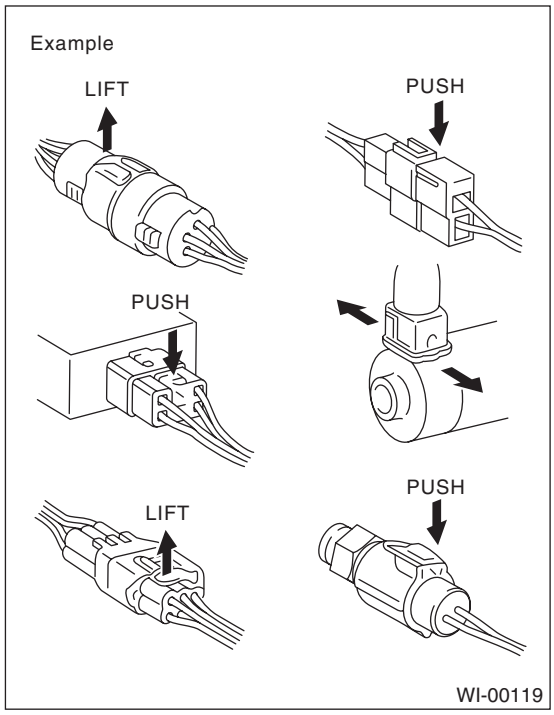

6) When checking continuity between connector terminals, or measuring the voltage across the terminal and ground, always contact tester probe(s) on terminals from the wiring connection side. If the probe is too thick to gain access to the terminal, use “mini” test leads.
To check water-proof connectors (which are not accessible from the wiring side), contact test probes on the terminal side being careful not to bend or damage terminals.

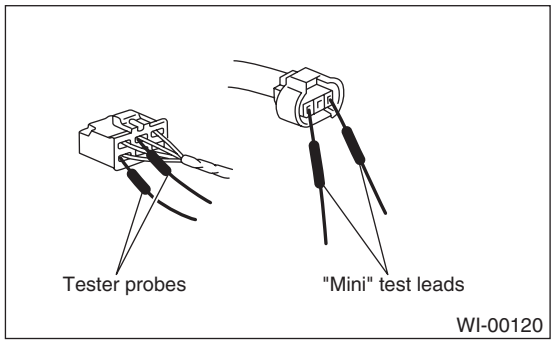

7) Sensors, relays, electrical unit, etc., are sensitive to strong impacts.
Handle them with care so that they are not dropped or mishandled.

3. Power Supply Routing

A: SCHEMATIC

1. LHD MODEL

P-SUP(L)-01

P-SUP(L)-01

MAIN FUSE BOX (M/B)

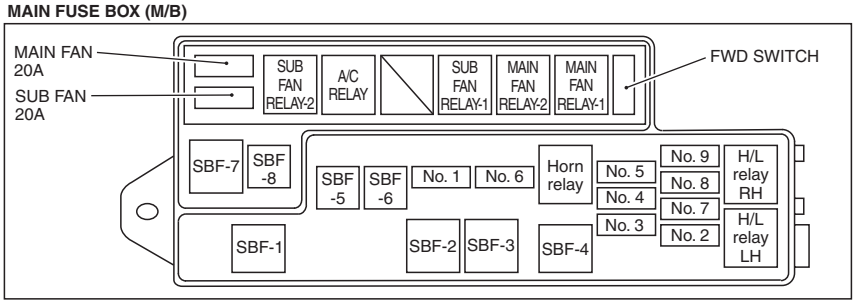

FUSE & RELAY BOX (F/B)

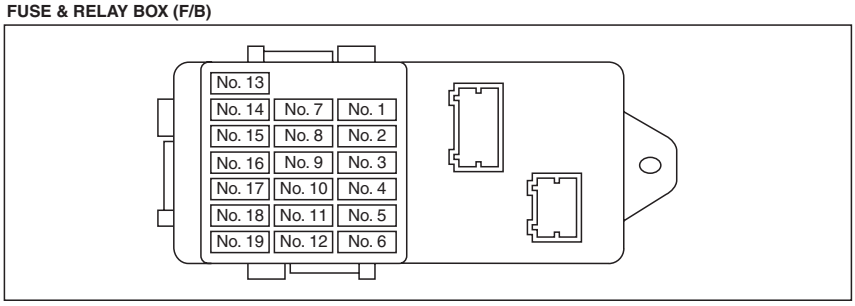

WI-02233

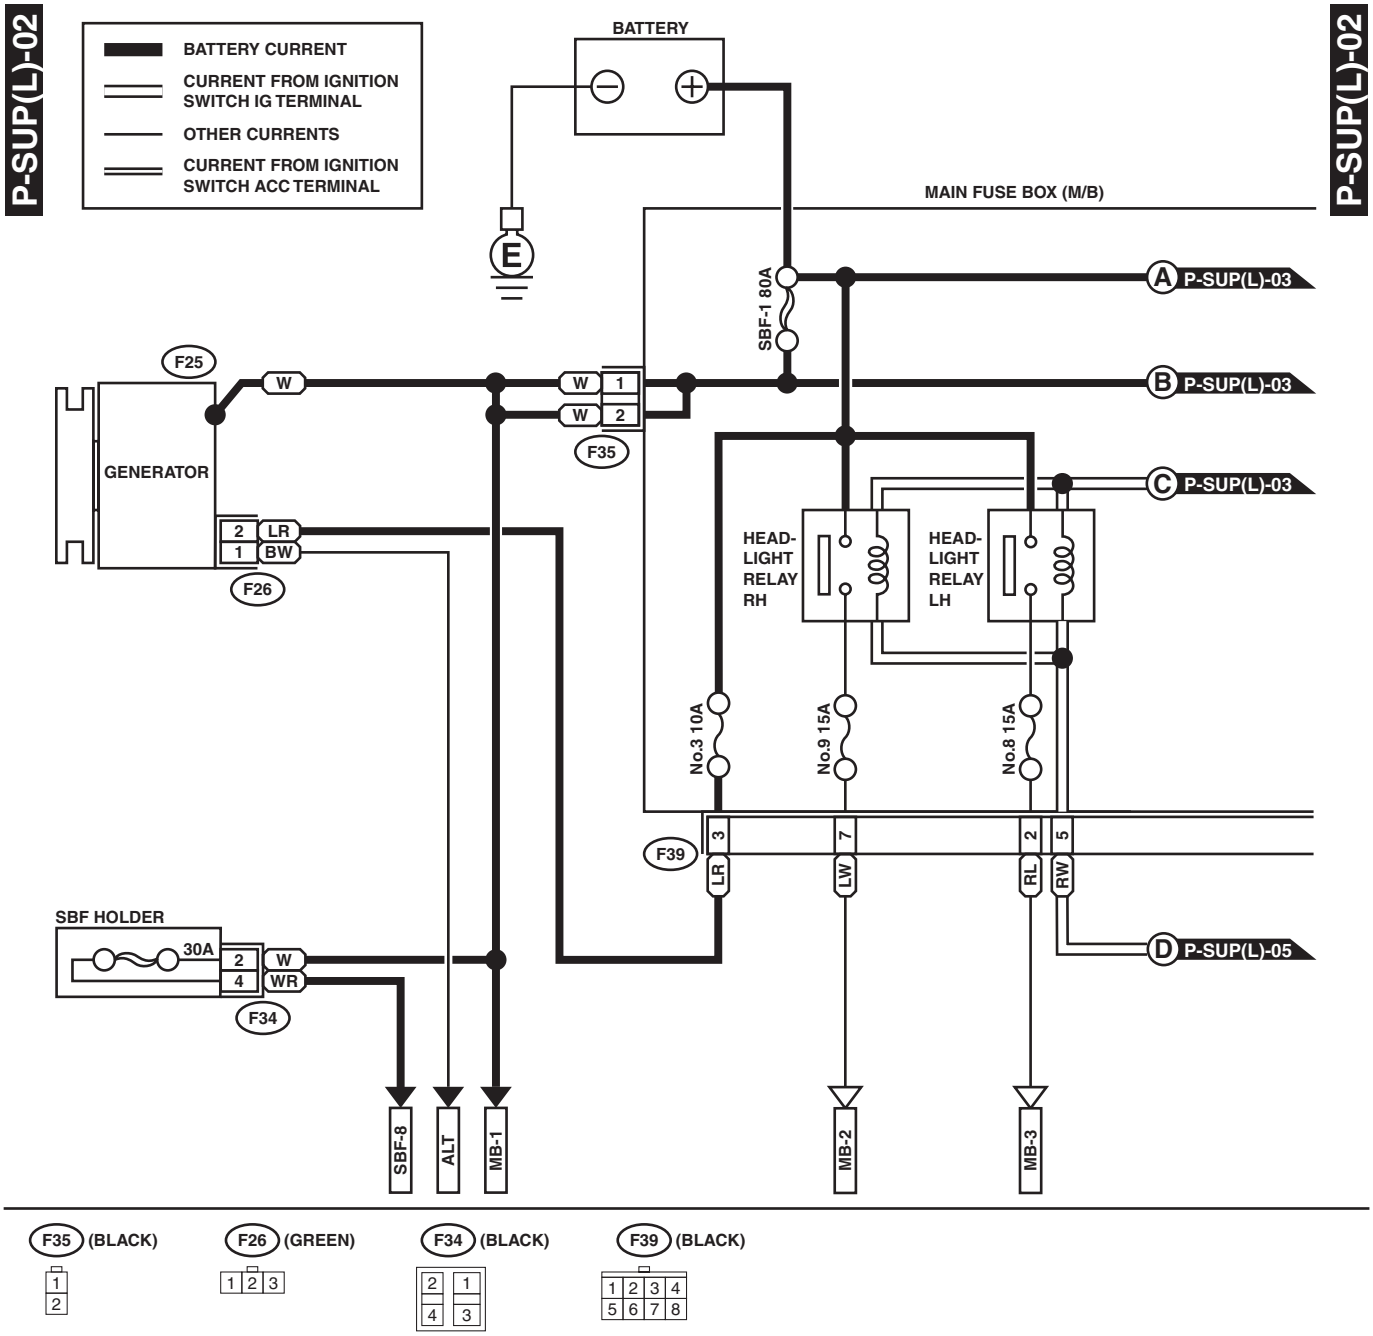
P-SUP(L)-02
P-SUP(L)-02
BATTERY CURRENT
CURRENT FROM IGNITION SWITCH IG TERMINAL
OTHER CURRENTS
CURRENT FROM IGNITION SWITCH ACC TERMINAL
BATTERY
MAIN FUSE BOX (M/B)
E
SBF-1 80A
A P-SUP(L)-03
B P-SUP(L)-03
C P-SUP(L)-03
F25
W
GENERATOR
2 LR
1 BW
F26
W 1
W 2
F35
HEAD-LIGHT RELAY RH
HEAD-LIGHT RELAY LH
No.3 10A
No.9 15A
No.8 15A
F39
3 LR
7 LW
2 RL
5 RW
D P-SUP(L)-05
SBF HOLDER
30A
2 W
4 WR
F34
SBF-8
ALT
MB-1
MB-2
MB-3

F35 (BLACK)
F26 (GREEN)
F34 (BLACK)
F39 (BLACK)

WI-02234

POWER SUPPLY ROUTING

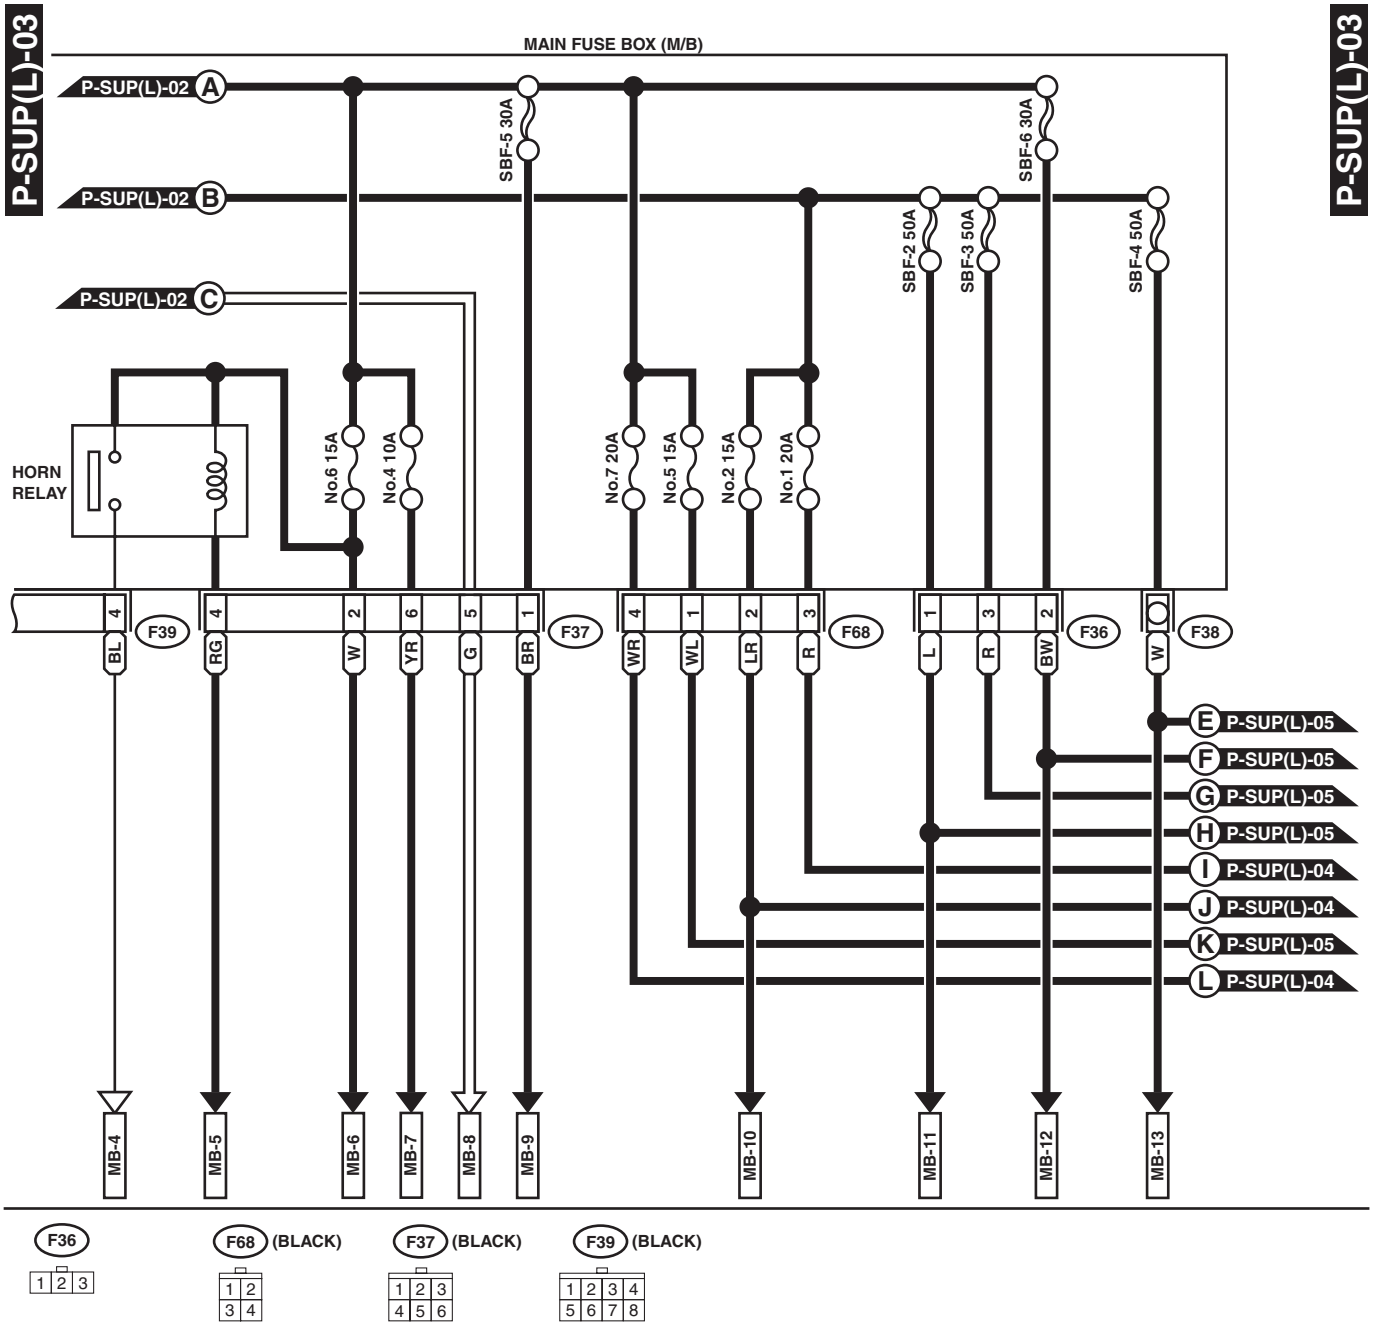

WI-02235

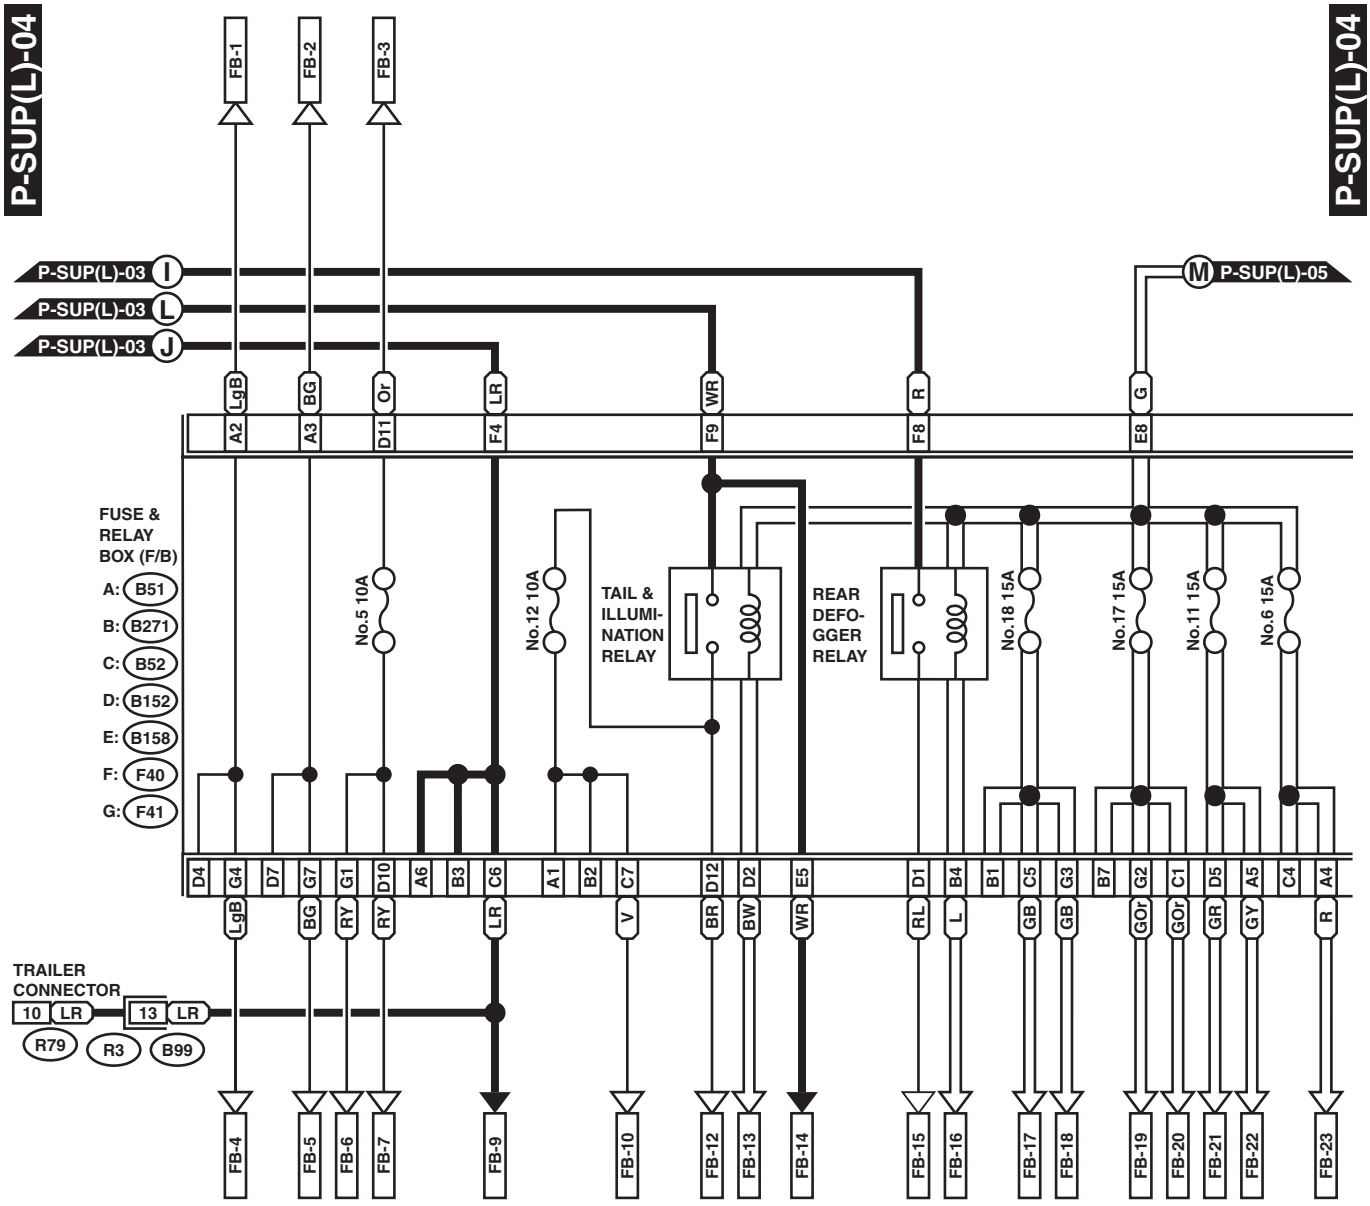
P-SUP(L)-04
P-SUP(L)-04
FB-1
FB-2
FB-3
P-SUP(L)-03 I
P-SUP(L)-03 L
P-SUP(L)-03 J
M P-SUP(L)-05
LgB
BG
Or
LR
WR
R
G
A2
A3
D11
F4
F9
F8
E8
FUSE & RELAY BOX (F/B)
A: B51
B: B271
C: B52
D: B152
E: B158
F: F40
G: F41
No.5 10A
No.12 10A
TAIL & ILLUMI-NATION RELAY
REAR DEFO-GGER RELAY
No.18 15A
No.17 15A
No.11 15A
No.6 15A
D4 G4 D7 G7 G1 D10 A6 B3 C6 A1 B2 C7 D12 D2 E5 D1 B4 B1 C5 G3 B7 G2 C1 D5 A5 C4 A4
LgB BG RY RY LR V BR BW WR RL L GB GB GOr GOr GR GY R
TRAILER CONNECTOR
10 LR
13 LR
R79
R3
B99
FB-4
FB-5
FB-6
FB-7
FB-9
FB-10
FB-12
FB-13
FB-14
FB-15
FB-16
FB-17
FB-18
FB-19
FB-20
FB-21
FB-22
FB-23
C: B52
G: F41 (GRAY)
A: B51 (BLUE)
F: F40 (BROWN)
E: B158 (GRAY)
R79
B: B271 (BLUE)
D: B152
B99

WI-02236

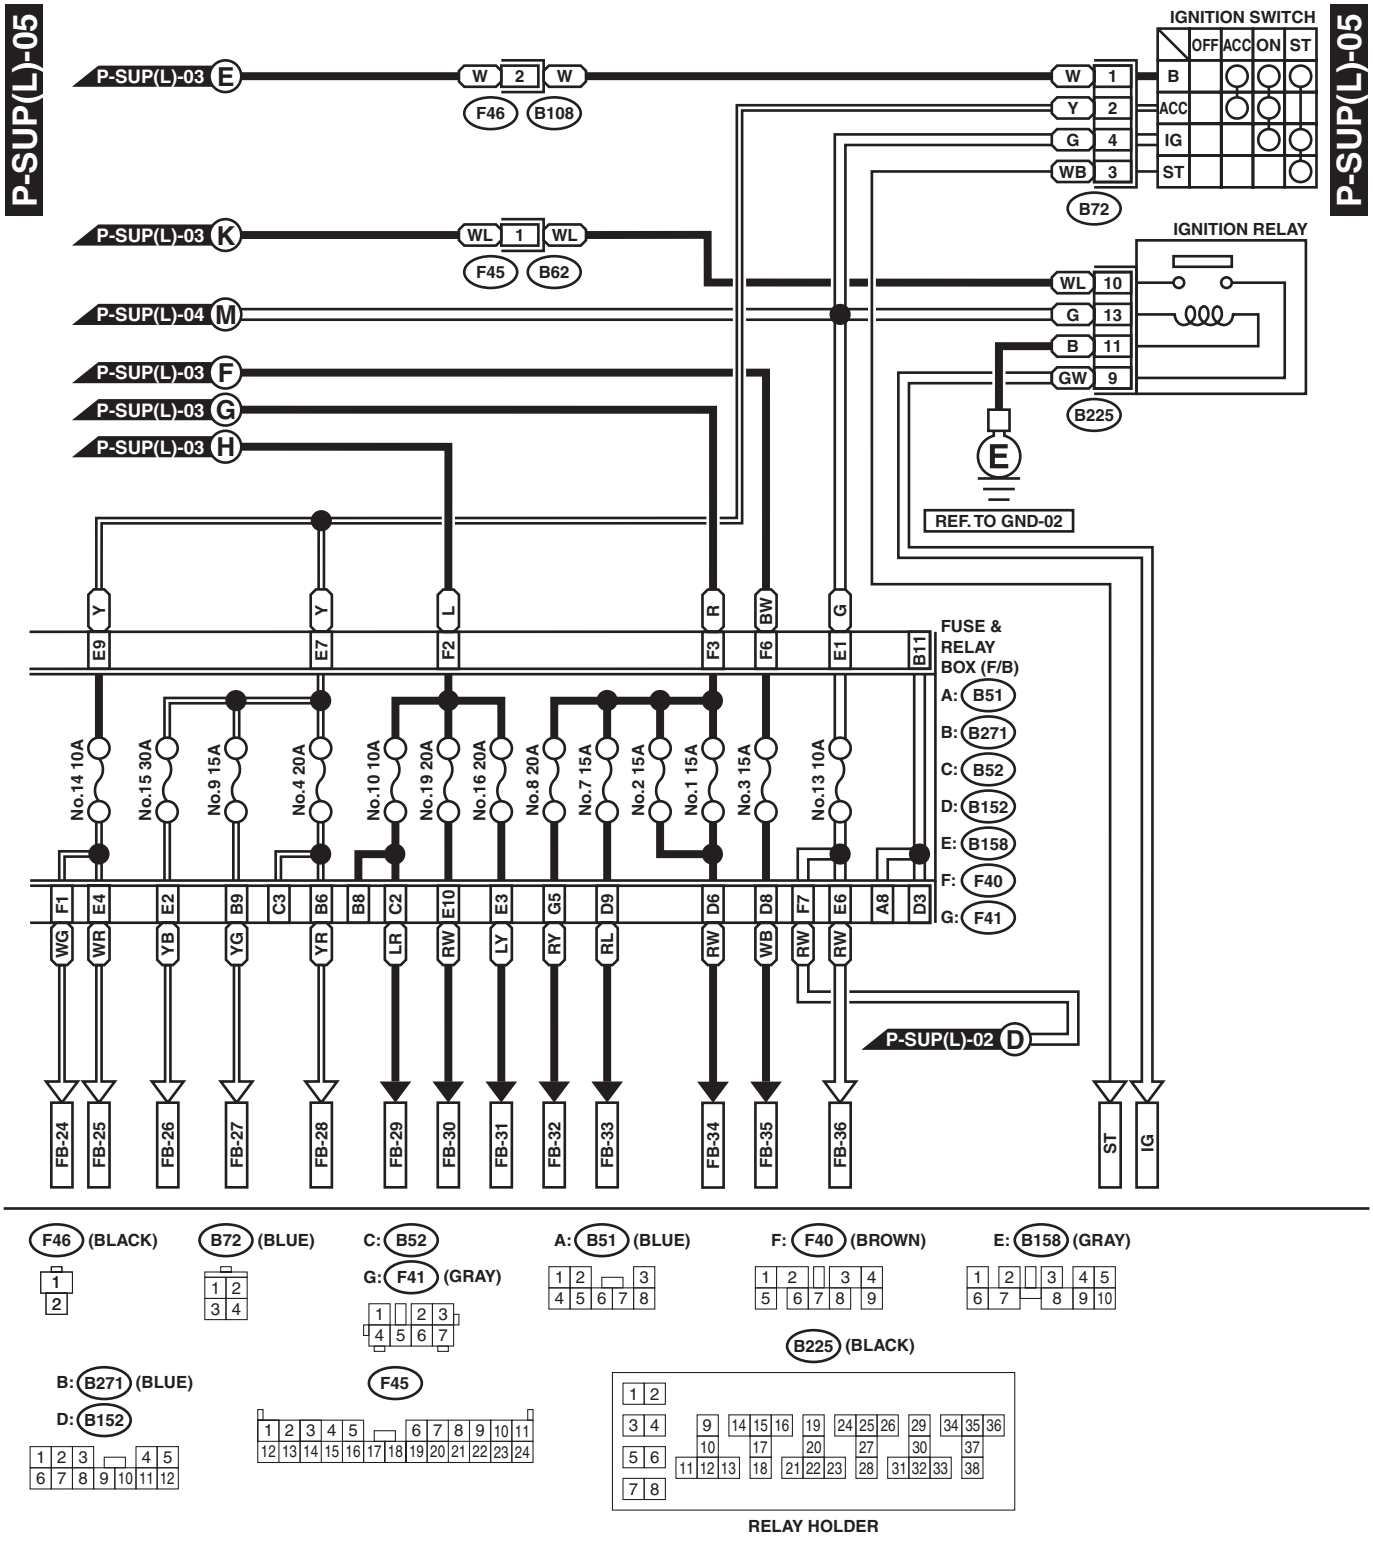
P-SUP(L)-05
P-SUP(L)-03 E
P-SUP(L)-03 K
P-SUP(L)-04 M
P-SUP(L)-03 F
P-SUP(L)-03 G
P-SUP(L)-03 H
F46
B108
F45
B62
IGNITION SWITCH
OFF ACC ON ST
B
ACC
IG
ST
B72
IGNITION RELAY
B225
REF. TO GND-02
FUSE & RELAY BOX (F/B)
A: B51
B: B271
C: B52
D: B152
E: B158
F: F40
G: F41
No.14 10A
No.15 30A
No.9 15A
No.4 20A
No.10 10A
No.19 20A
No.16 20A
No.8 20A
No.7 15A
No.2 15A
No.1 15A
No.3 15A
No.13 10A
P-SUP(L)-02 D
FB-24
FB-25
FB-26
FB-27
FB-28
FB-29
FB-30
FB-31
FB-32
FB-33
FB-34
FB-35
FB-36
ST
IG

F46 (BLACK)
B72 (BLUE)
C: B52
G: F41 (GRAY)
A: B51 (BLUE)
F: F40 (BROWN)
E: B158 (GRAY)
B225 (BLACK)
B: B271 (BLUE)
D: B152
F45
RELAY HOLDER

WI-02237

No.	Load
MB-1	Air conditioning relay holder
MB-2	Combination meter Headlight RH
MB-3	Headlight LH
MB-4	Horn
MB-5	Cruise control sub switch Horn switch
MB-6	Hazard switch Key warning switch
MB-7	Transmission control module
MB-8	Diode (With rear fog light model) Lighting switch
MB-9	Data link connector Engine control module Fuel pump relay Immobilizer control module Main relay
MB-11	Fuse (Seat heater)
MB-12	Power window circuit breaker
MB-13	Relay holder
SBF-8	ABS control module
IG	Hazard switch Power window relay
ST	Engine control module Inhibitor switch (AT) Starter motor (MT)
FB-1	Hazard switch Rear turn signal light RH Trailer connector Turn signal switch
FB-2	Hazard switch Rear turn signal light LH Trailer connector Turn signal switch
FB-3	Parking switch
FB-4	Front turn signal light RH Side turn signal light RH
FB-5	Front turn signal light LH Side turn signal light LH
FB-6	Front clearance light LH Front clearance light RH
FB-7	License plate light Tail light LH Tail light RH Trailer connector
FB-9	Auto A/C control module Combination meter Keyless entry control module Luggage room light (Wagon) Radio Room light Spot light Trunk room light (Sedan)

No.	Load
FB-10	Bright switch Combination meter Front fog light relay Front fog light switch Headlight leveling switch Illumination light Rear fog light relay Rear fog light switch
FB-12	Parking switch
FB-13	Engine control module Lighting switch
FB-14	Parking switch
FB-15	Mirror heater relay Rear defogger Rear defogger switch
FB-16	Engine control module Rear defogger timer
FB-17	ABS relay Back-up light switch (MT) Check connector Cruise control actuator Cruise control main switch Cruise control module Inhibitor switch (AT) Seat belt timer Vehicle speed sensor (MT)
FB-18	Headlight leveler LH Headlight leveler RH
FB-19	Air conditioning relay Sub fan relay Pressure switch (A/C)
FB-20	AUTO A/C control module Blower motor relay Rear defogger timer
FB-21	Engine control module Fuel pump relay Ignition coil and ignitor Immobilizer control module Transmission control module
FB-22	Airbag control module
FB-23	Airbag control module
FB-24	Rear washer motor
FB-25	Rear wiper intermittent module Rear wiper motor
FB-26	Front washer motor Front wiper motor Front wiper switch
FB-27	Auto A/C control module Radio
FB-28	Front accessory power supply socket Remote controlled rearview mirror switch Intercooler water spray switch Intercooler water spray timer Seat heater relay
FB-29	Rear fog light relay
FB-30	Mirror heater relay
FB-31	Stop light switch

No.	Load
FB-32	ABS control module
FB-33	Front fog light relay
FB-34	Blower motor relay
FB-35	Keyless entry control module
FB-36	Combination meter

2. RHD MODEL

P-SUP(R)-01

P-SUP(R)-01

MAIN FUSE BOX (M/B)

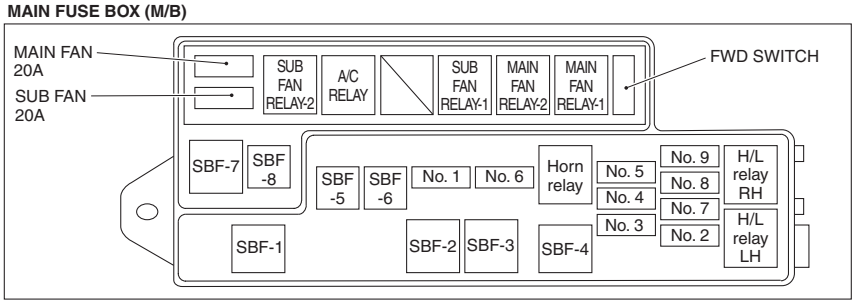

FUSE & RELAY BOX (F/B)

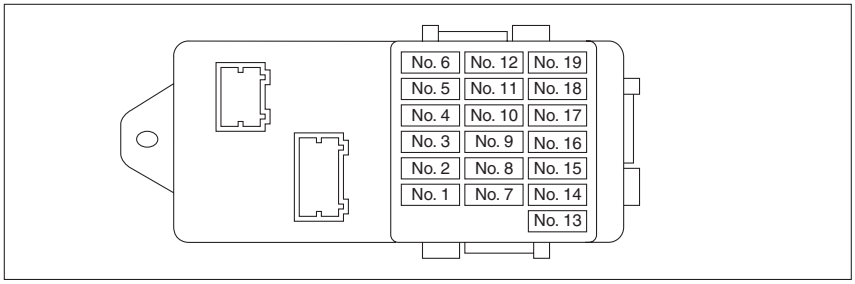

WI-02238

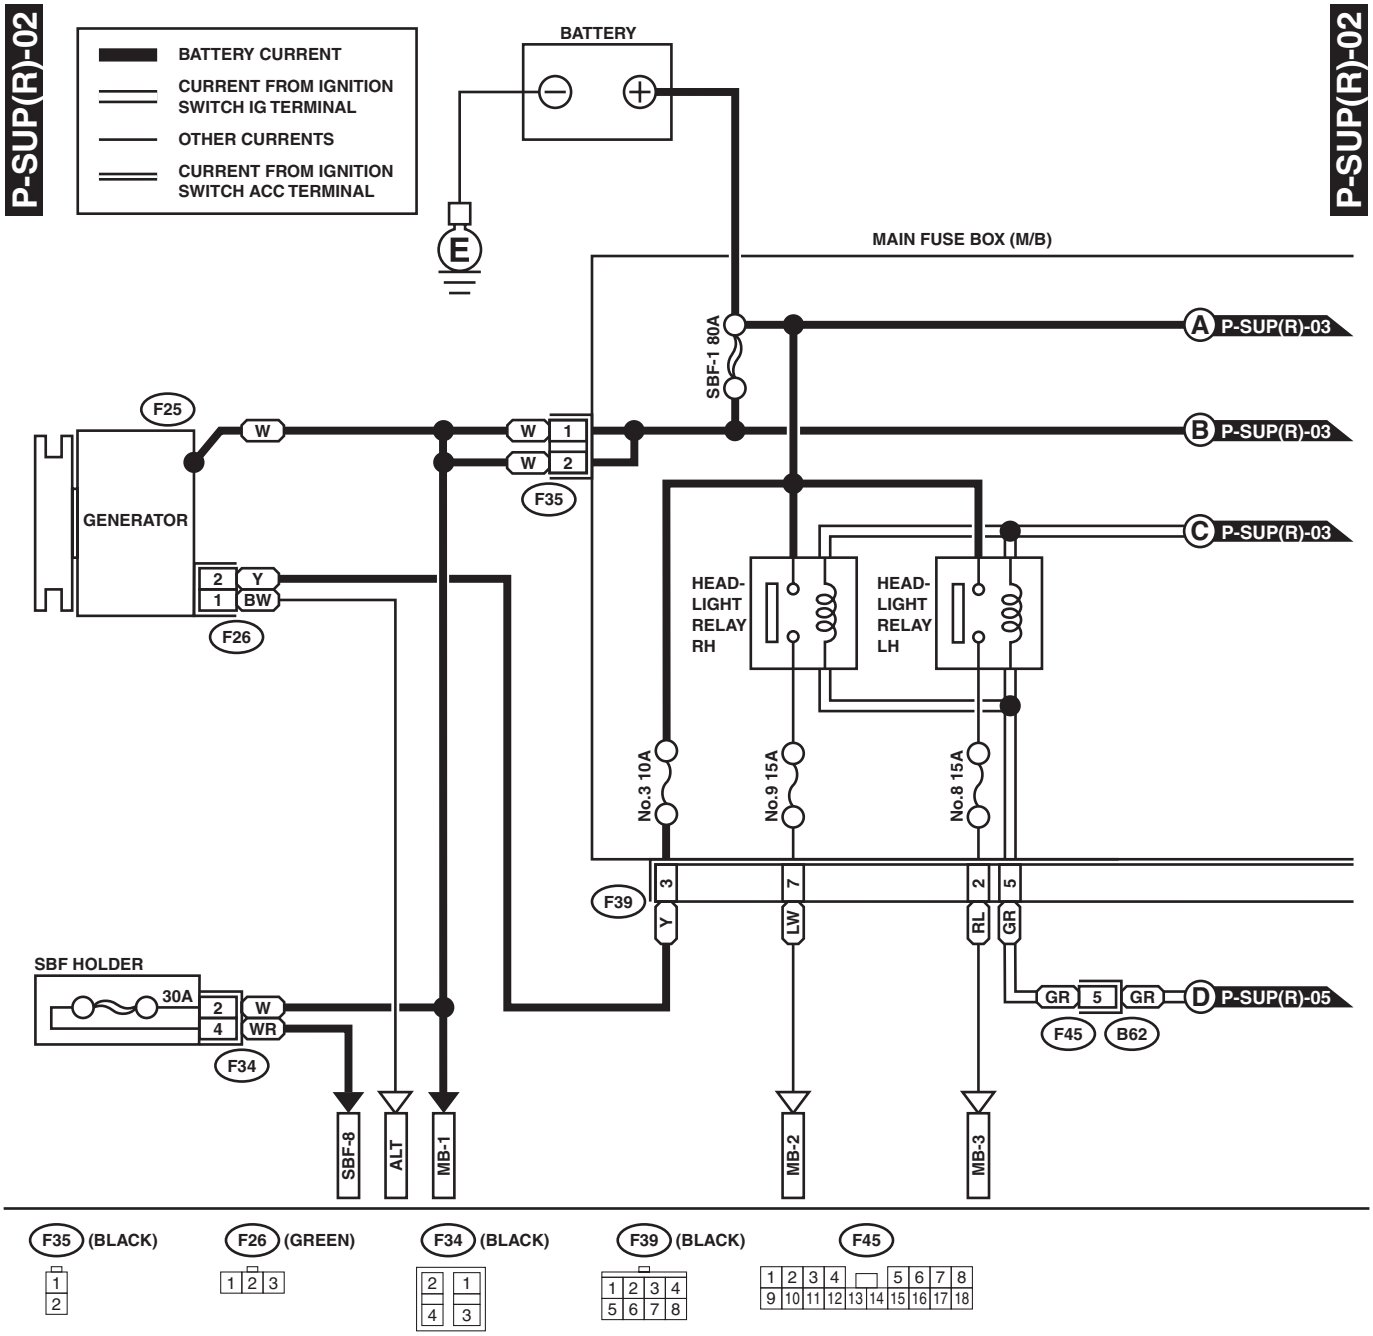
P-SUP(R)-02
P-SUP(R)-02
BATTERY CURRENT
CURRENT FROM IGNITION SWITCH IG TERMINAL
OTHER CURRENTS
CURRENT FROM IGNITION SWITCH ACC TERMINAL
BATTERY
E
MAIN FUSE BOX (M/B)
SBF-1 80A
A P-SUP(R)-03
B P-SUP(R)-03
C P-SUP(R)-03
F25
W
W 1
W 2
F35
GENERATOR
2 Y
1 BW
F26
HEAD-LIGHT RELAY RH
HEAD-LIGHT RELAY LH
No.3 10A
No.9 15A
No.8 15A
F39
3
7
2
5
Y
LW
RL
GR
SBF HOLDER
30A
2 W
4 WR
F34
GR 5 GR
D P-SUP(R)-05
F45
B62
SBF-8
ALT
MB-1
MB-2
MB-3
F35 (BLACK)
F26 (GREEN)
F34 (BLACK)
F39 (BLACK)
F45

WI-02239

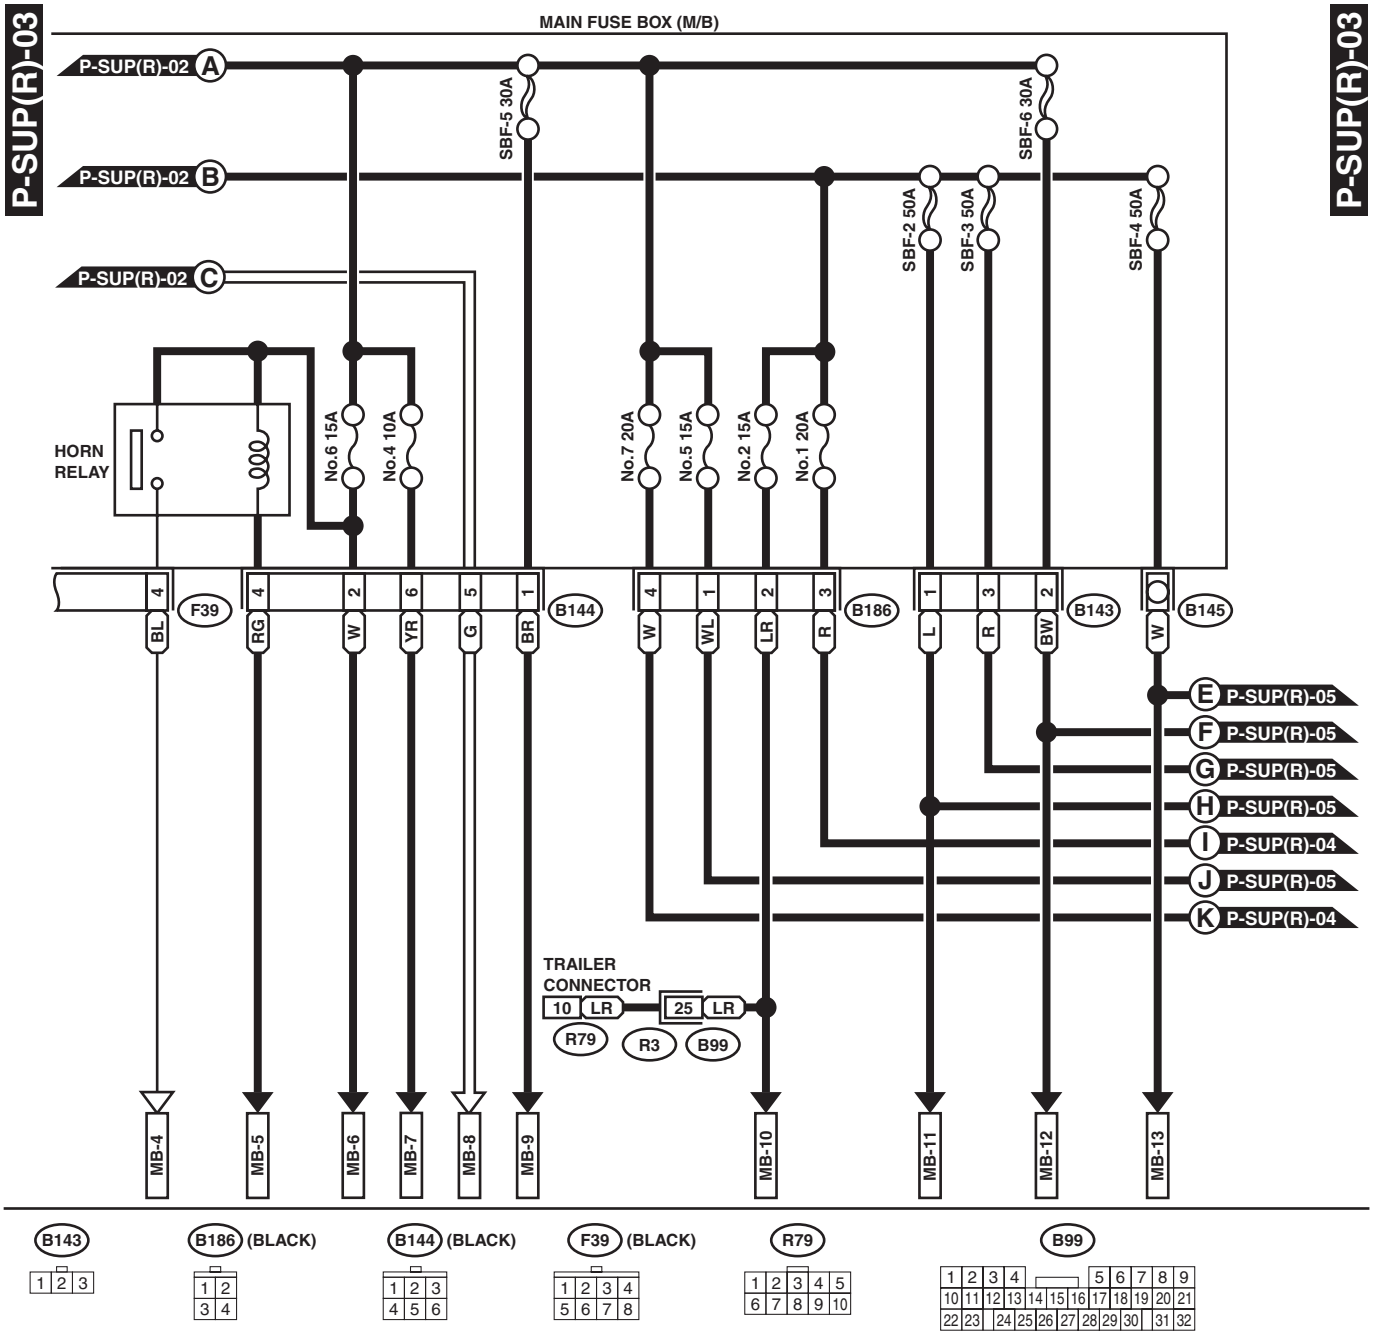
P-SUP(R)-03
P-SUP(R)-03
MAIN FUSE BOX (M/B)
P-SUP(R)-02 A
P-SUP(R)-02 B
P-SUP(R)-02 C
SBF-5 30A
SBF-6 30A
SBF-2 50A
SBF-3 50A
SBF-4 50A
HORN RELAY
No.6 15A
No.4 10A
No.7 20A
No.5 15A
No.2 15A
No.1 20A
F39
B144
B186
B143
B145
BL
RG
W
YR
G
BR
WL
LR
R
L
BW
E P-SUP(R)-05
F P-SUP(R)-05
G P-SUP(R)-05
H P-SUP(R)-05
I P-SUP(R)-04
J P-SUP(R)-05
K P-SUP(R)-04
TRAILER CONNECTOR
10 LR
25 LR
R79
R3
B99
MB-4
MB-5
MB-6
MB-7
MB-8
MB-9
MB-10
MB-11
MB-12
MB-13
B143
B186 (BLACK)
B144 (BLACK)
F39 (BLACK)
R79
B99

WI-02240

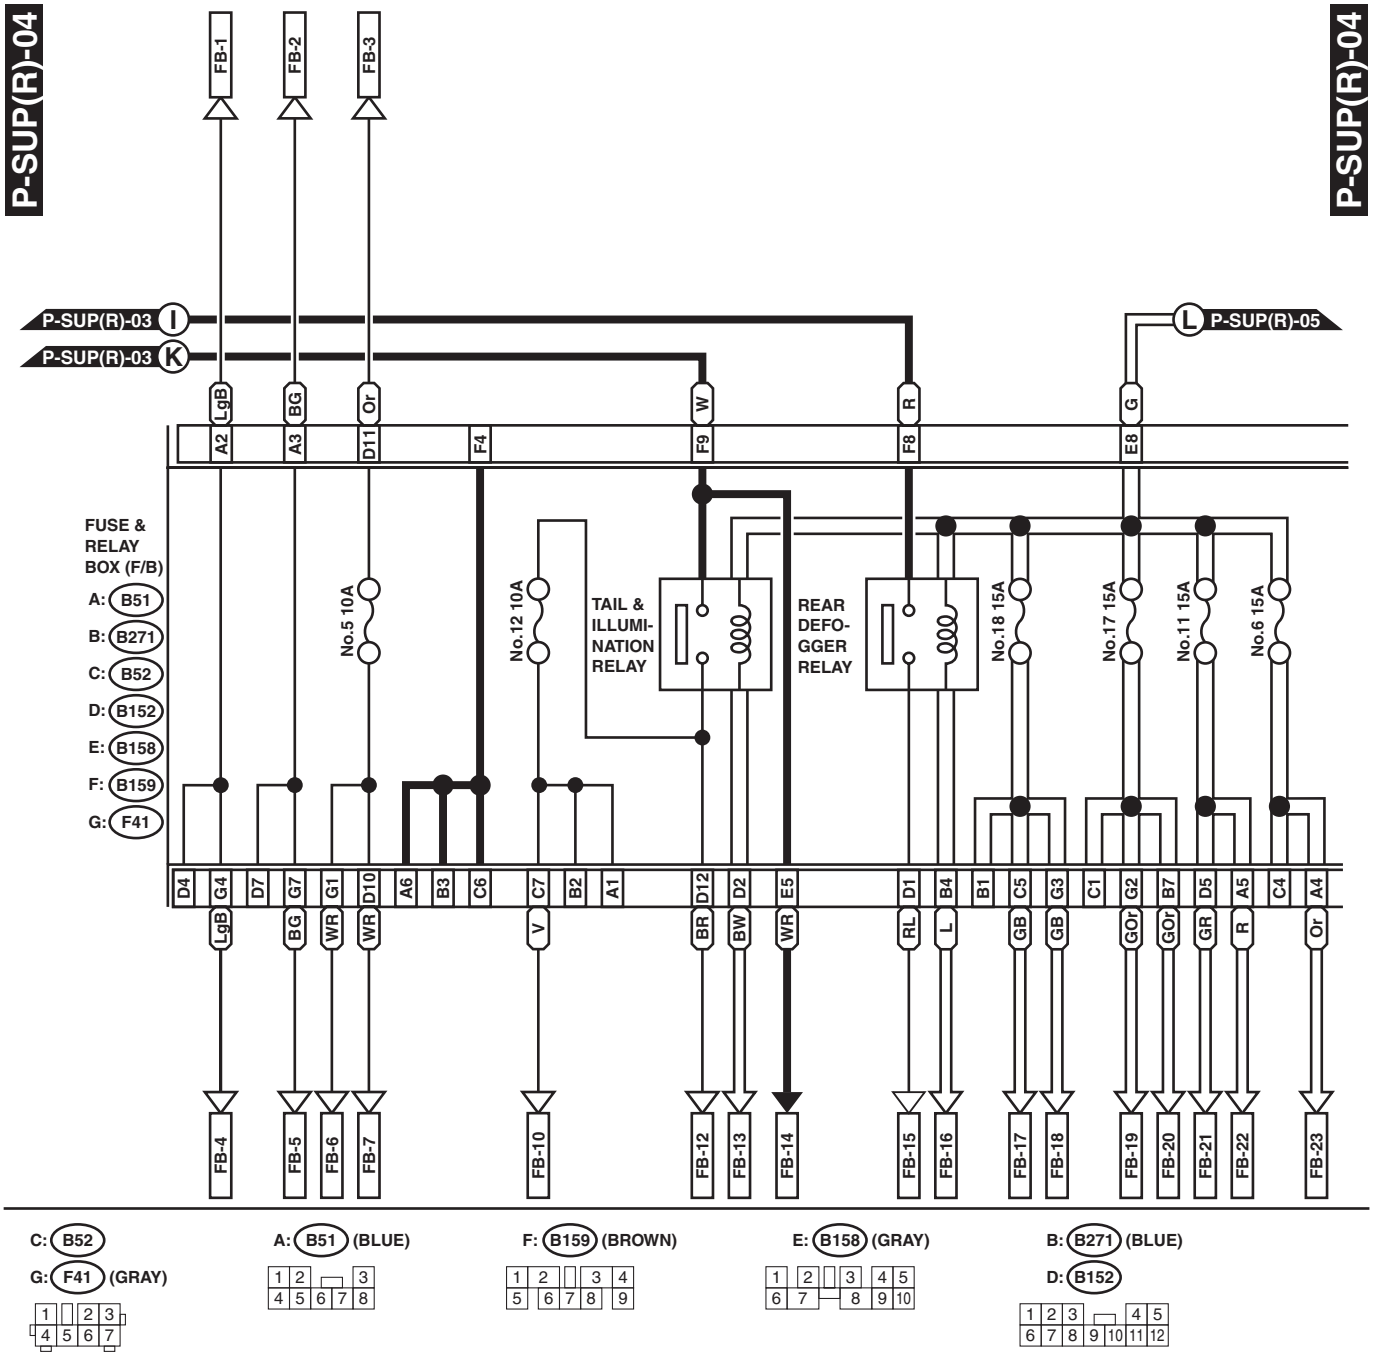
P-SUP(R)-04
P-SUP(R)-04
FB-1
FB-2
FB-3
P-SUP(R)-03 I
P-SUP(R)-03 K
L P-SUP(R)-05
LgB
BG
Or
W
R
G
A2
A3
D11
F4
F9
F8
E8
FUSE & RELAY BOX (F/B)
A: B51
B: B271
C: B52
D: B152
E: B158
F: B159
G: F41
No.5 10A
No.12 10A
TAIL & ILLUMI-NATION RELAY
REAR DEFO-GGER RELAY
No.18 15A
No.17 15A
No.11 15A
No.6 15A
D4 G4 D7 G7 G1 D10 A6 B3 C6 C7 B2 A1 D12 D2 E5 D1 B4 B1 C5 G3 C1 G2 B7 D5 A5 C4 A4
LgB BG WR WR V BR BW WR RL L GB GB GOr GOr GR R Or
FB-4 FB-5 FB-6 FB-7 FB-10 FB-12 FB-13 FB-14 FB-15 FB-16 FB-17 FB-18 FB-19 FB-20 FB-21 FB-22 FB-23
C: B52
G: F41 (GRAY)
A: B51 (BLUE)
F: B159 (BROWN)
E: B158 (GRAY)
B: B271 (BLUE)
D: B152

WI-02241

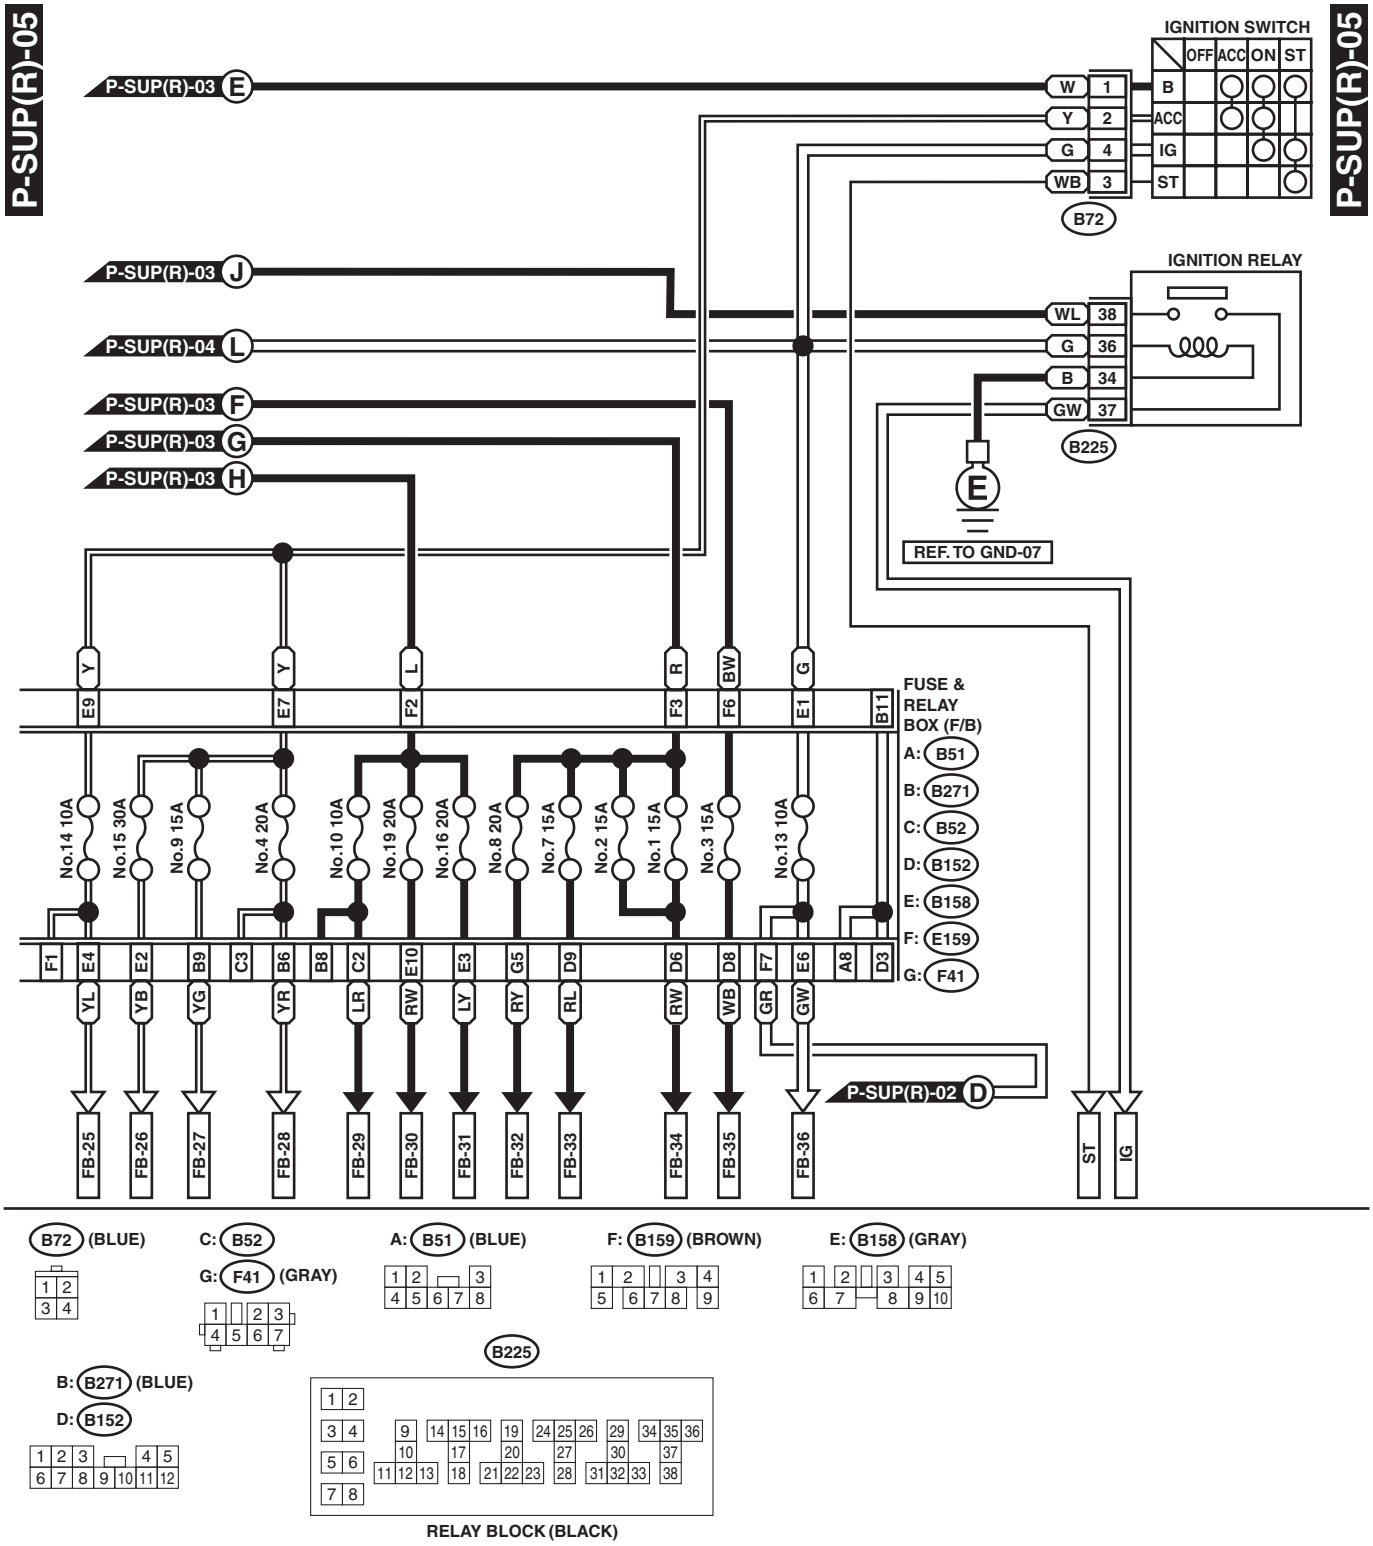
P-SUP(R)-05
P-SUP(R)-05
IGNITION SWITCH
OFF ACC ON ST
B
ACC
IG
ST
W 1
Y 2
G 4
WB 3
B72
P-SUP(R)-03 E
P-SUP(R)-03 J
P-SUP(R)-04 L
P-SUP(R)-03 F
P-SUP(R)-03 G
P-SUP(R)-03 H
IGNITION RELAY
WL 38
G 36
B 34
GW 37
B225
E
REF. TO GND-07
Y
Y
L
R
BW
G
E9
E7
F2
F3
F6
E1
B11
FUSE & RELAY BOX (F/B)
A: B51
B: B271
C: B52
D: B152
E: B158
F: E159
G: F41
No.14 10A
No.15 30A
No.9 15A
No.4 20A
No.10 10A
No.19 20A
No.16 20A
No.8 20A
No.7 15A
No.2 15A
No.1 15A
No.3 15A
No.13 10A
F1
E4
E2
B9
C3
B6
B8
C2
E10
E3
G5
D9
D6
D8
F7
E6
A8
D3
YL
YB
YG
YR
LR
RW
LY
RY
RL
RW
WB
GR
GW
P-SUP(R)-02 D
FB-25
FB-26
FB-27
FB-28
FB-29
FB-30
FB-31
FB-32
FB-33
FB-34
FB-35
FB-36
ST
IG
B72 (BLUE)
C: B52
G: F41 (GRAY)
A: B51 (BLUE)
F: B159 (BROWN)
E: B158 (GRAY)
B: B271 (BLUE)
D: B152
B225
RELAY BLOCK (BLACK)

WI-02242

No.	Load
MB-1	Air conditioning relay holder
MB-2	Combination meter Headlight RH
MB-3	Headlight LH
MB-4	Horn
MB-5	Cruise control sub switch Horn switch
MB-6	Hazard switch Keyless entry control module Key warning switch Security control module
MB-7	Transmission control module
MB-8	Diode (With rear fog light model) Lighting switch
MB-9	Data link connector Engine control module Fuel pump relay Immobilizer control module Main relay
MB-10	Auto A/C Control module Combination meter Ignition switch illumination light Keyless entry control module Luggage room light (Wagon) Radio Room light Security control module Security relay Spot light Trunk room light (Sedan)
MB-11	Fuse (Seat heater)
MB-12	Power window circuit breaker
MB-13	Relay holder
SBF-8	ABS control module
IG	Hazard switch
ST	Engine control module Inhibitor switch (AT) Security relay Starter motor (MT)
FB-1	Hazard switch Rear turn signal light RH Trailer connector Turn signal switch
FB-2	Hazard switch Rear turn signal light LH Side turn signal light LH Trailer connector Turn signal switch
FB-3	Parking switch
FB-4	Front turn signal light RH Side turn signal light RH
FB-5	Front turn signal light LH
FB-6	Front clearance light LH Front clearance light RH

No.	Load
FB-7	License plate light Tail light LH Tail light RH Trailer connector
FB-10	Bright switch Combination meter Front fog light relay Front fog light switch Headlight leveling switch Illumination control module Illumination light Rear fog light relay Rear fog light switch
FB-12	Parking switch
FB-13	Engine control module Lighting switch
FB-14	Parking switch
FB-15	Mirror heater relay Rear defogger Rear defogger switch
FB-16	Engine control module Rear defogger timer
FB-17	ABS relay Back-up light switch (MT) Check connector Cruise control actuator Cruise control main switch Cruise control module Inhibitor switch (AT) Power window relay Rear defogger timer Seatbelt timer Vehicle speed sensor (MT)
FB-18	Headlight leveler LH Headlight leveler RH
FB-19	Air conditioning relay Pressure switch Sub fan relay
FB-20	AUTO A/C control module Blower motor relay Double lock control module
FB-21	Engine control module Fuel pump relay Ignition coil and ignitor Immobilizer control module Security control module Transmission control module
FB-22	Airbag control module
FB-23	Airbag control module
FB-25	Rear washer motor Rear wiper intermittent module Rear wiper motor
FB-26	Front washer motor Front wiper motor Front wiper switch
FB-27	Auto A/C control module Radio

No.	Load
FB-28	Front accessory power supply socket Remote controlled rearview mirror switch Intercooler water spray switch Intercooler water spray timer Seat heater relay
FB-29	Rear fog light relay
FB-30	Mirror heater relay
FB-31	Stop light switch
FB-32	ABS control module
FB-33	Front fog light relay
FB-34	Blower motor relay
FB-35	Double lock control module Keyless entry control module
FB-36	Combination meter

4. Ground Distribution

A: SCHEMATIC

1. CHASSIS GROUND LHD MODEL

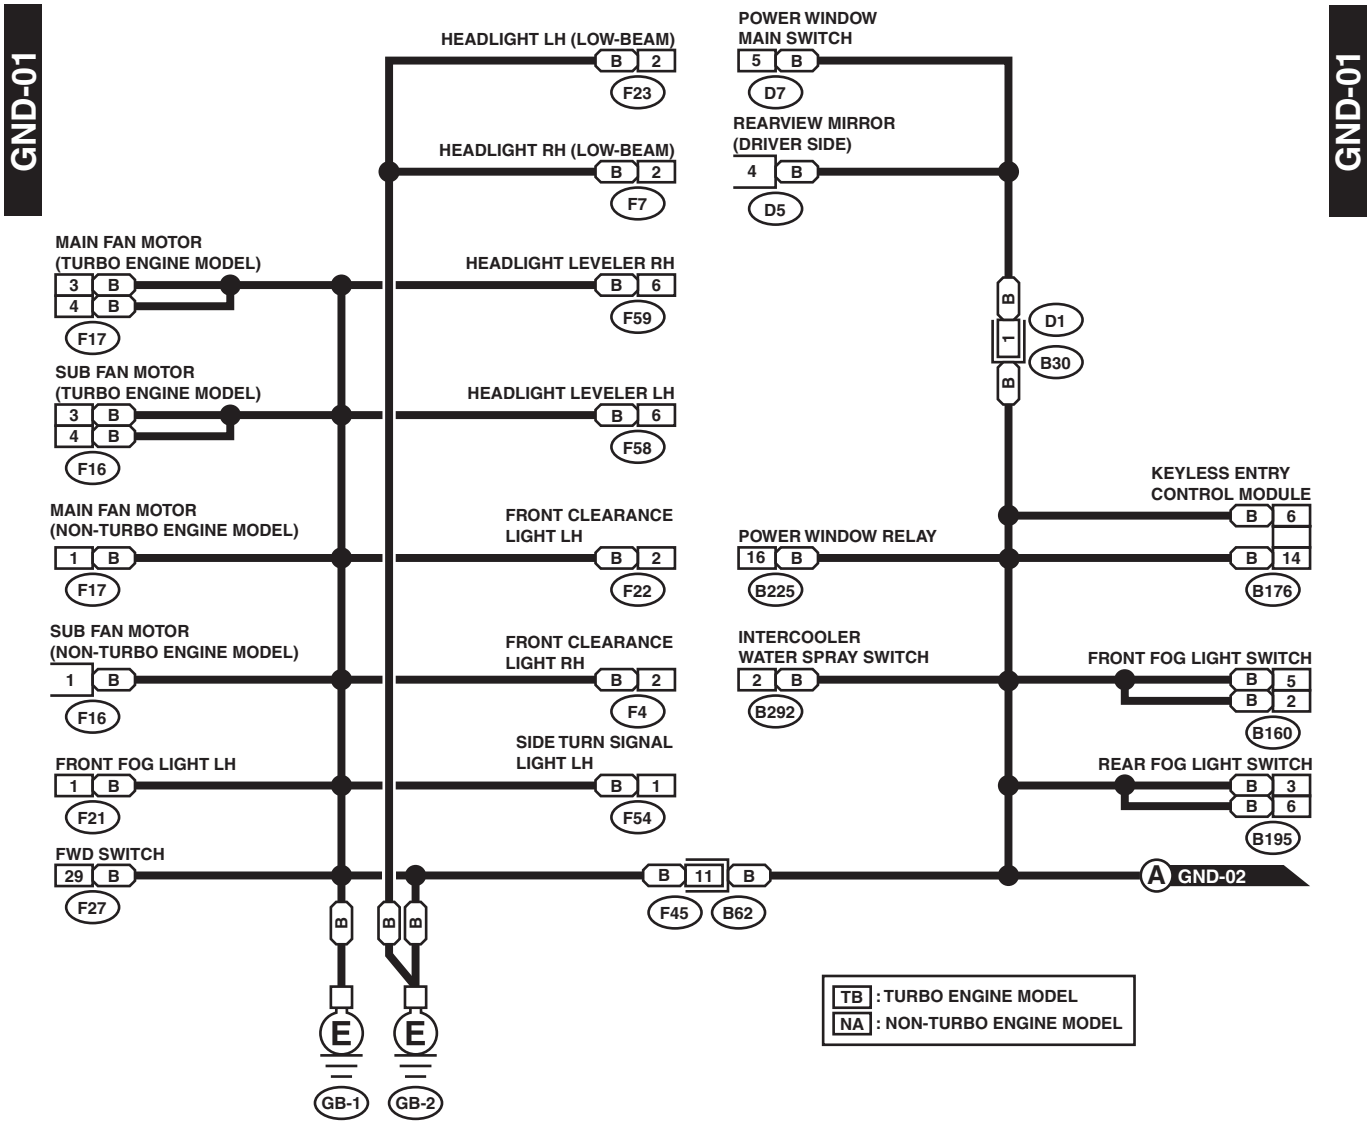

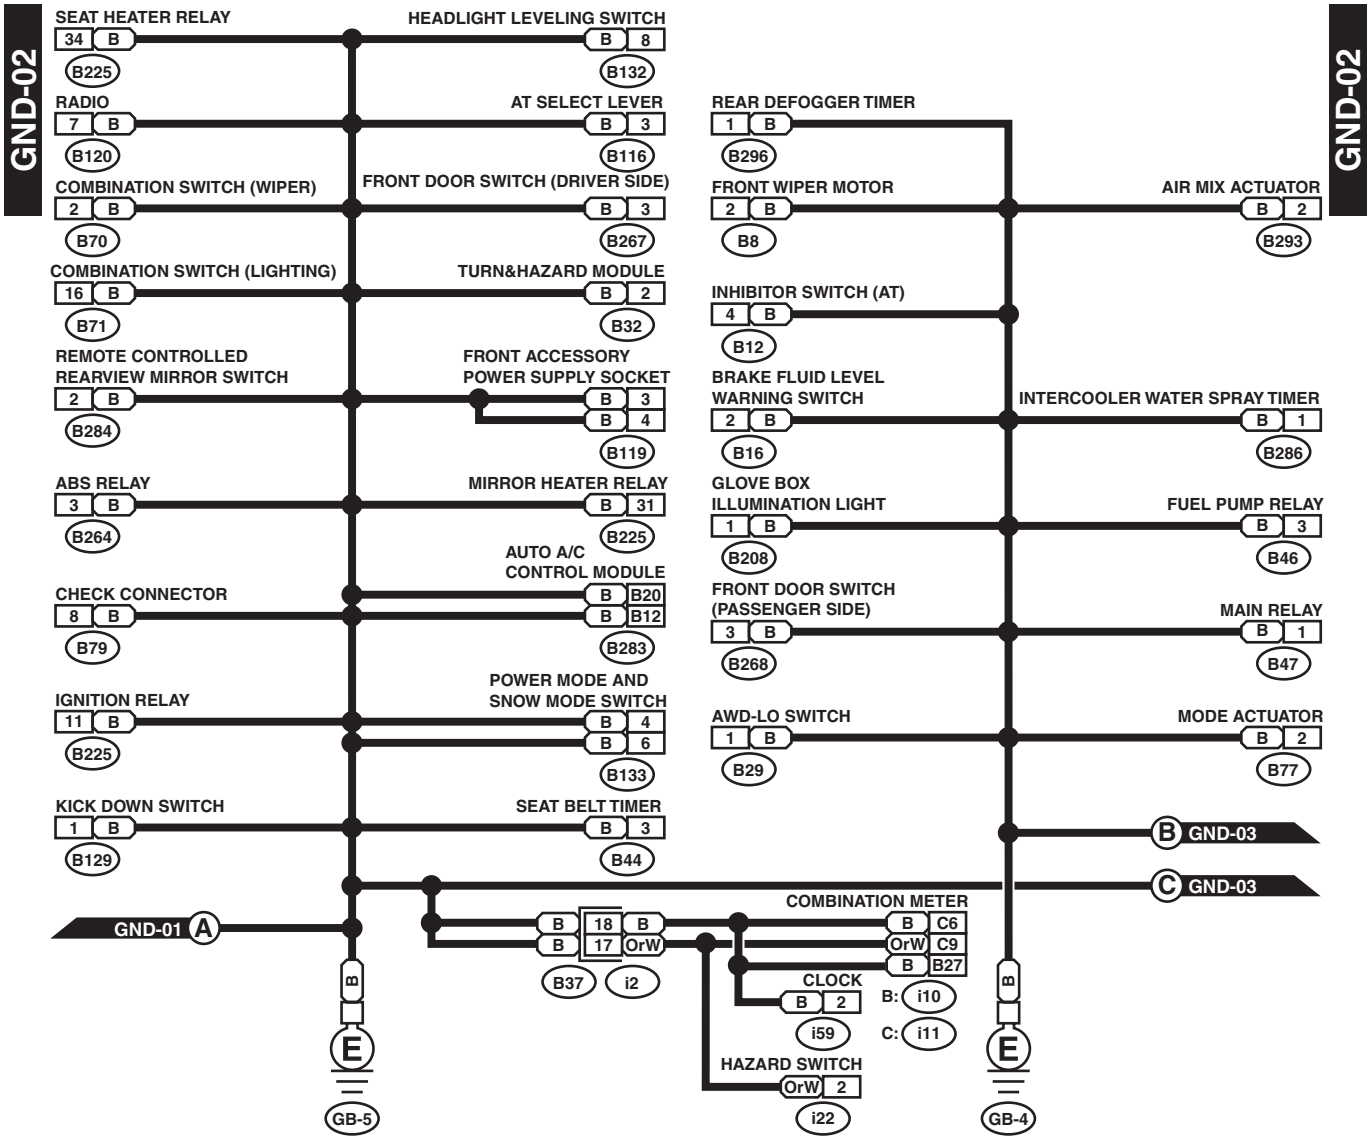
GND-02
SEAT HEATER RELAY
34 B
B225
RADIO
7 B
B120
COMBINATION SWITCH (WIPER)
2 B
B70
COMBINATION SWITCH (LIGHTING)
16 B
B71
REMOTE CONTROLLED REARVIEW MIRROR SWITCH
2 B
B284
ABS RELAY
3 B
B264
CHECK CONNECTOR
8 B
B79
IGNITION RELAY
11 B
B225
KICK DOWN SWITCH
1 B
B129
HEADLIGHT LEVELING SWITCH
B 8
B132
AT SELECT LEVER
B 3
B116
FRONT DOOR SWITCH (DRIVER SIDE)
B 3
B267
TURN&HAZARD MODULE
B 2
B32
FRONT ACCESSORY POWER SUPPLY SOCKET
B 3
B 4
B119
MIRROR HEATER RELAY
B 31
B225
AUTO A/C CONTROL MODULE
B B20
B B12
B283
POWER MODE AND SNOW MODE SWITCH
B 4
B 6
B133
SEAT BELT TIMER
B 3
B44
REAR DEFOGGER TIMER
1 B
B296
FRONT WIPER MOTOR
2 B
B8
INHIBITOR SWITCH (AT)
4 B
B12
BRAKE FLUID LEVEL WARNING SWITCH
2 B
B16
GLOVE BOX ILLUMINATION LIGHT
1 B
B208
FRONT DOOR SWITCH (PASSENGER SIDE)
3 B
B268
AWD-LO SWITCH
1 B
B29
AIR MIX ACTUATOR
B 2
B293
INTERCOOLER WATER SPRAY TIMER
B 1
B286
FUEL PUMP RELAY
B 3
B46
MAIN RELAY
B 1
B47
MODE ACTUATOR
B 2
B77
B GND-03
C GND-03
COMBINATION METER
B 18 B
B 17 OrW
B37
i2
B C6
OrW C9
B B27
CLOCK
B 2
i59
B: i10
C: i11
HAZARD SWITCH
OrW 2
i22
GND-01 A
B
E
GB-5
GB-4
GND-02

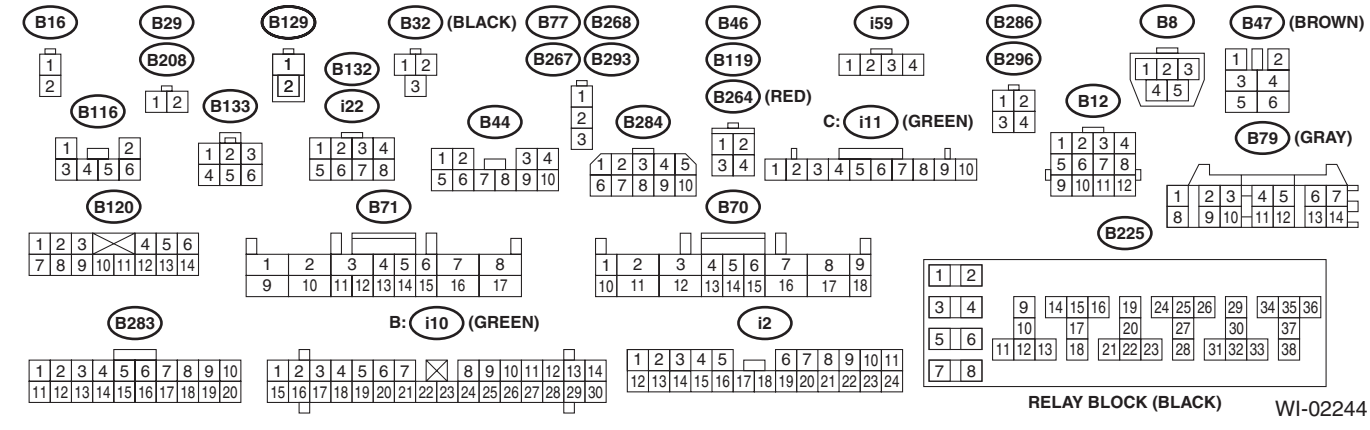
B16
B29
B208
B116
B133
B129
B132
i22
B32 (BLACK)
B44
B77
B268
B267
B293
B284
B46
B119
B264 (RED)
i59
C: i11 (GREEN)
B286
B296
B12
B8
B47 (BROWN)
B79 (GRAY)
B120
B71
B70
B225
B283
B: i10 (GREEN)
i2
RELAY BLOCK (BLACK)
WI-02244

GROUND DISTRIBUTION

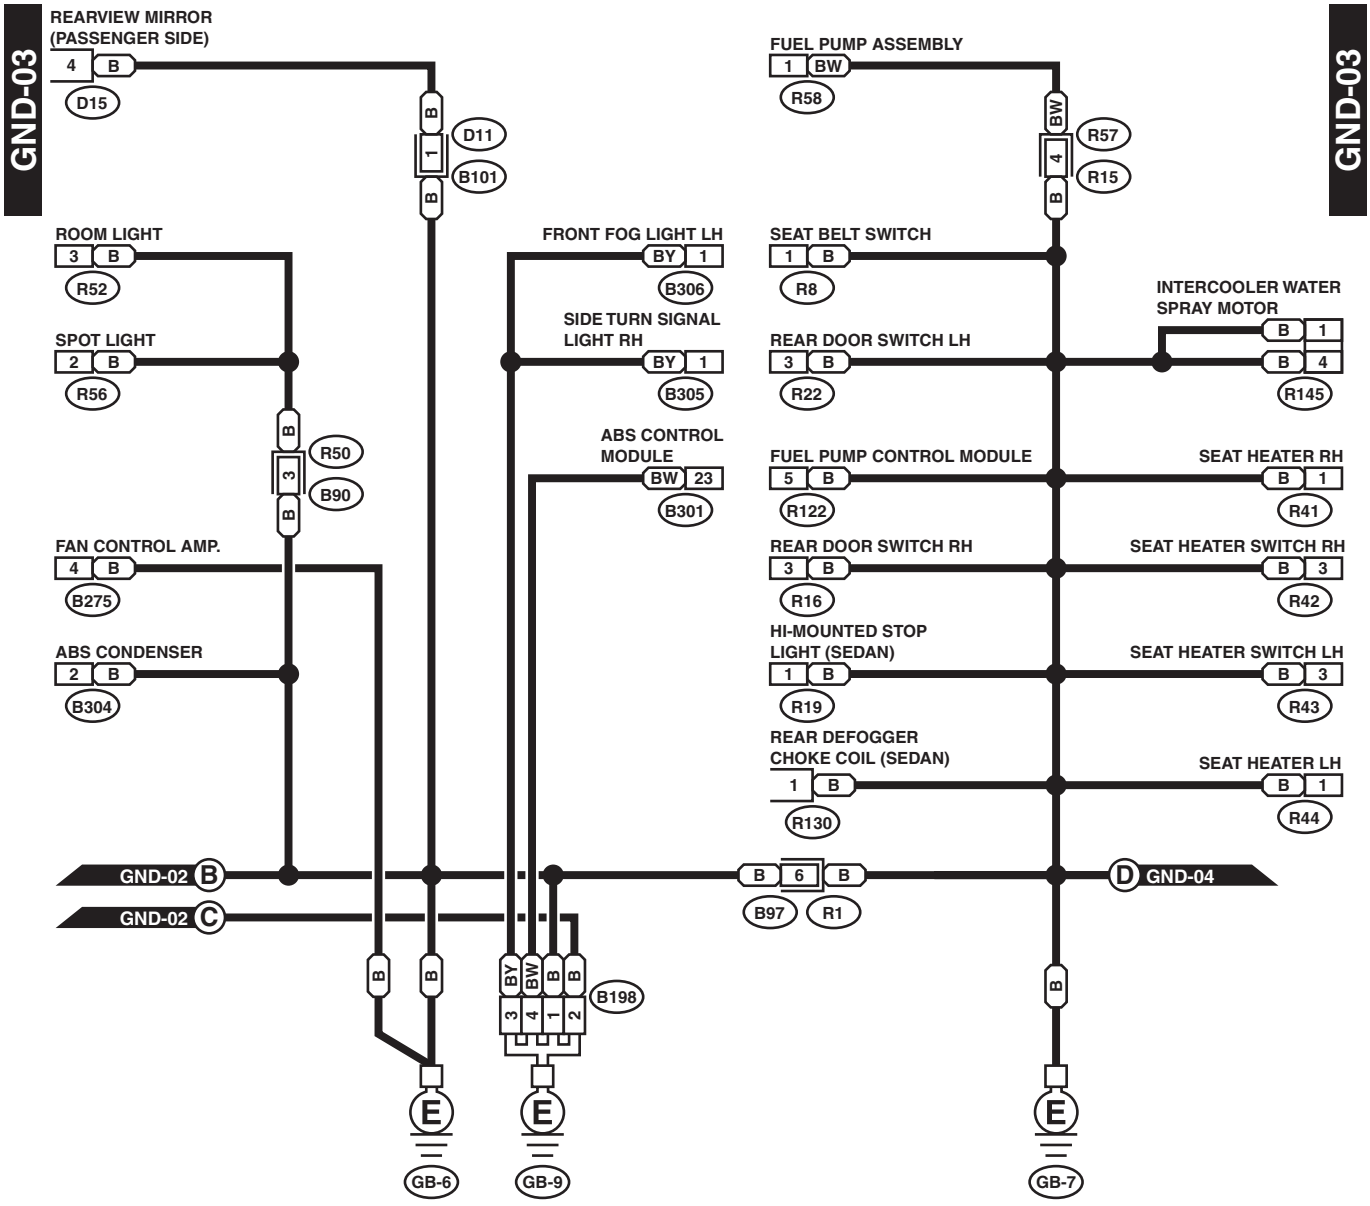

WI-02245

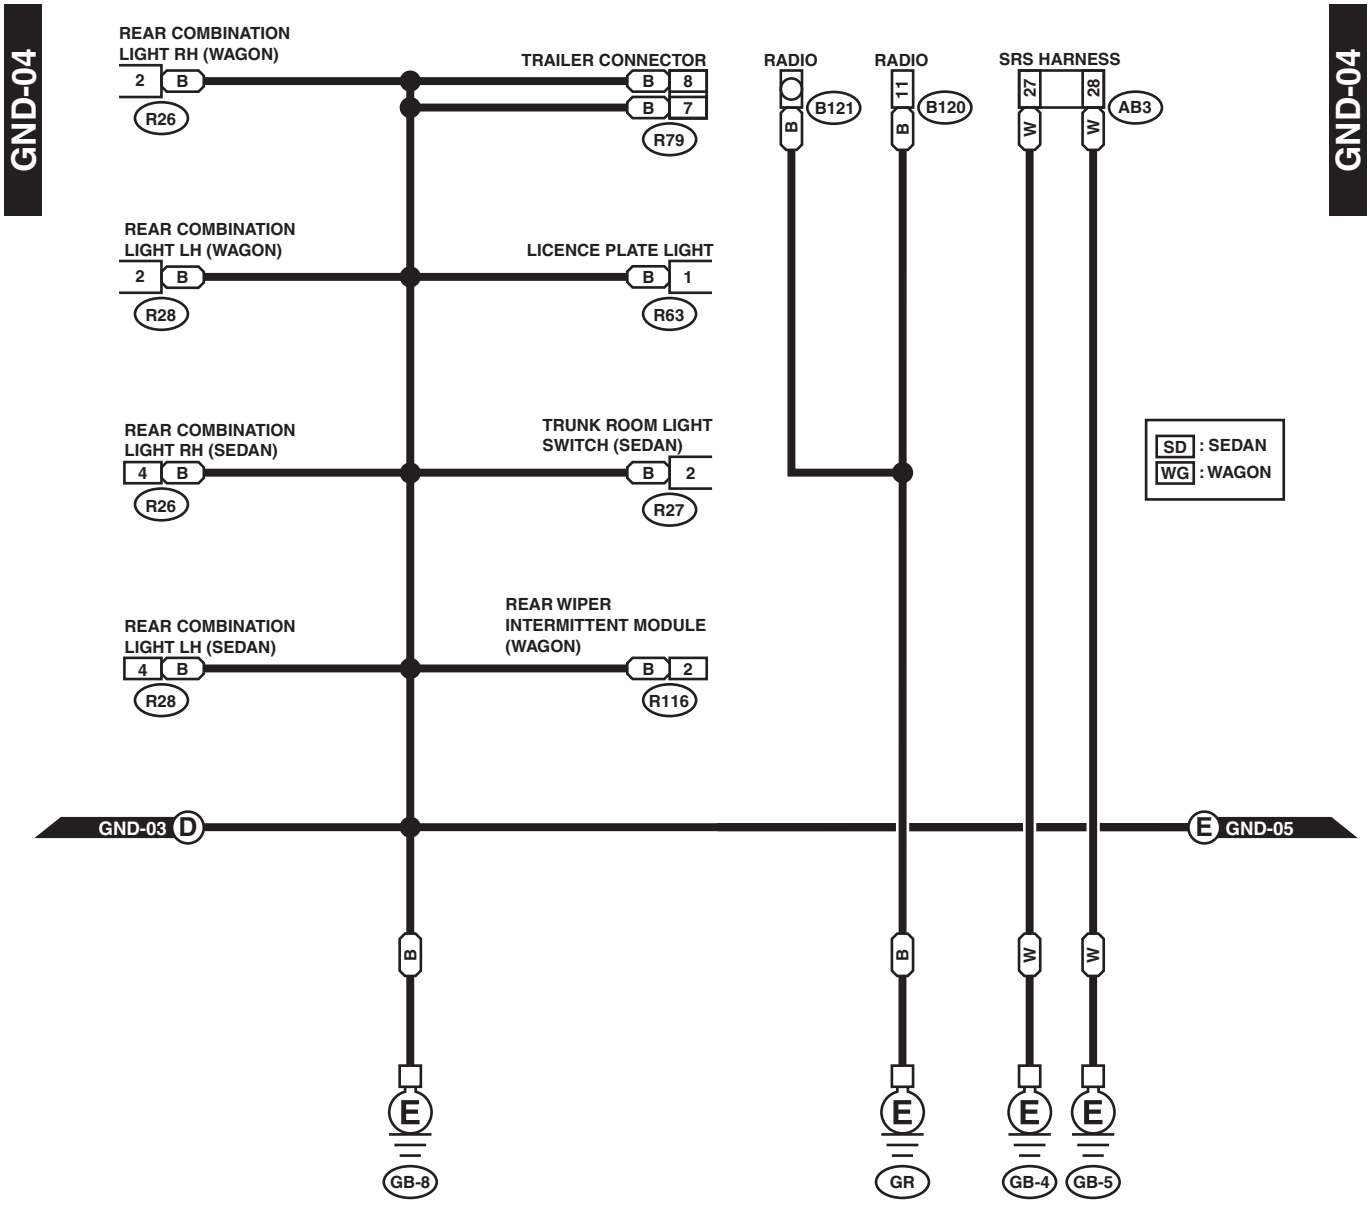
GND-04
GND-04
REAR COMBINATION LIGHT RH (WAGON)
2
B
R26
TRAILER CONNECTOR
B
8
B
7
R79
RADIO
B121
RADIO
11
B120
SRS HARNESS
27
28
AB3
W
W
REAR COMBINATION LIGHT LH (WAGON)
2
B
R28
LICENCE PLATE LIGHT
B
1
R63
REAR COMBINATION LIGHT RH (SEDAN)
4
B
R26
TRUNK ROOM LIGHT SWITCH (SEDAN)
B
2
R27
SD : SEDAN
WG : WAGON
REAR COMBINATION LIGHT LH (SEDAN)
4
B
R28
REAR WIPER INTERMITTENT MODULE (WAGON)
B
2
R116
GND-03 D
E GND-05
B
B
W
W
E
E
E
E
GB-8
GR
GB-4
GB-5

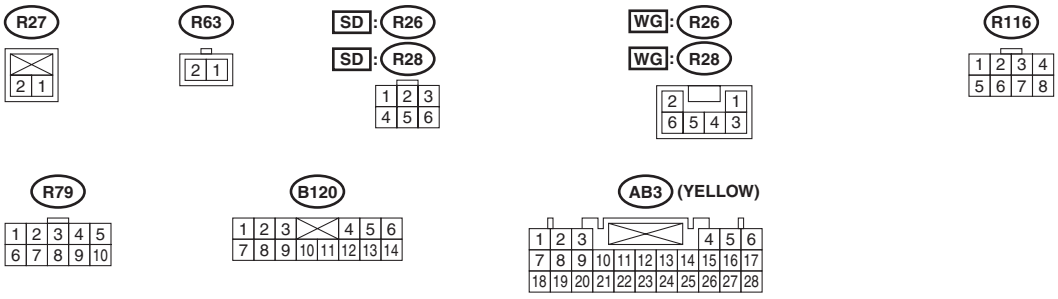
R27
2 1
R63
2 1
SD : R26
SD : R28
1 2 3
4 5 6
WG : R26
WG : R28
2 1
6 5 4 3
R116
1 2 3 4
5 6 7 8
R79
1 2 3 4 5
6 7 8 9 10
B120
1 2 3 4 5 6
7 8 9 10 11 12 13 14
AB3 (YELLOW)
1 2 3 4 5 6
7 8 9 10 11 12 13 14 15 16 17
18 19 20 21 22 23 24 25 26 27 28

WI-02246

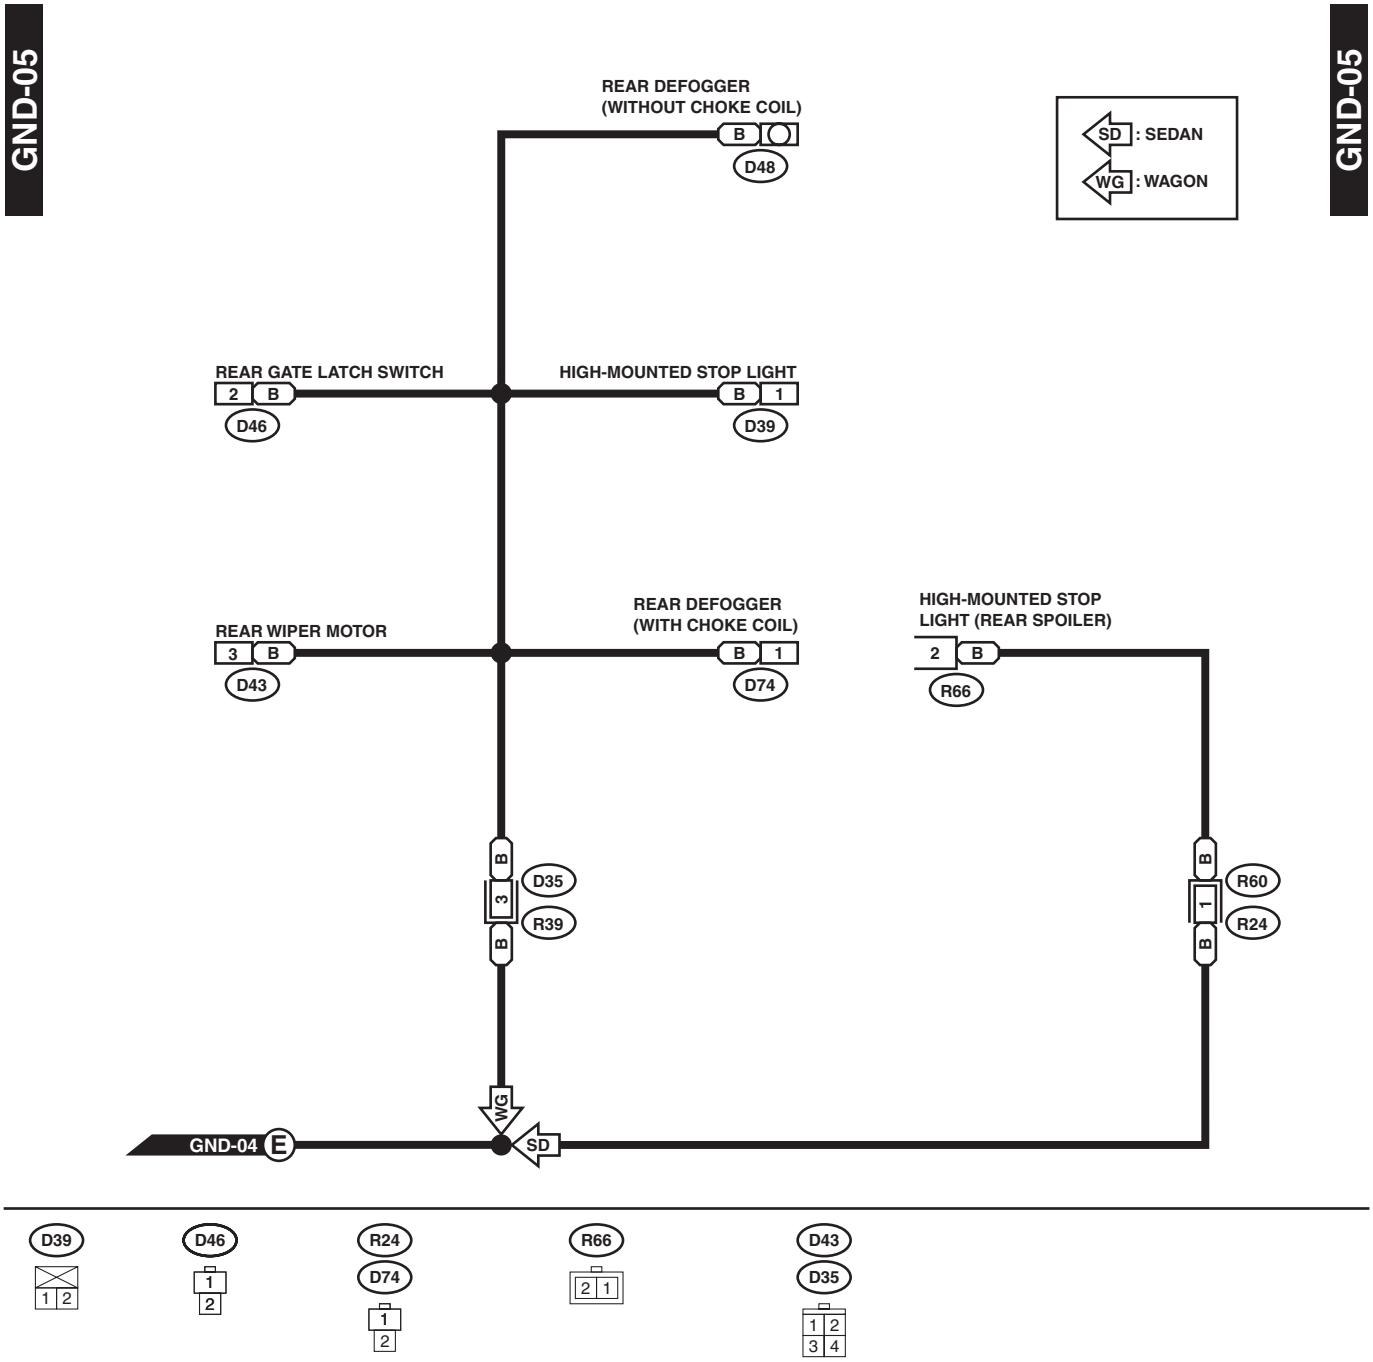
GND-05
GND-05
REAR DEFOGGER
(WITHOUT CHOKE COIL)
B
D48
SD : SEDAN
WG : WAGON
REAR GATE LATCH SWITCH
2
B
D46
HIGH-MOUNTED STOP LIGHT
B
1
D39
REAR WIPER MOTOR
3
B
D43
REAR DEFOGGER
(WITH CHOKE COIL)
B
1
D74
HIGH-MOUNTED STOP
LIGHT (REAR SPOILER)
2
B
R66
B
3
B
D35
R39
B
1
B
R60
R24
WG
SD
GND-04
E
D39
D46
R24
D74
R66
D43
D35

WI-02247

2. CHASSIS GROUND RHD MODEL

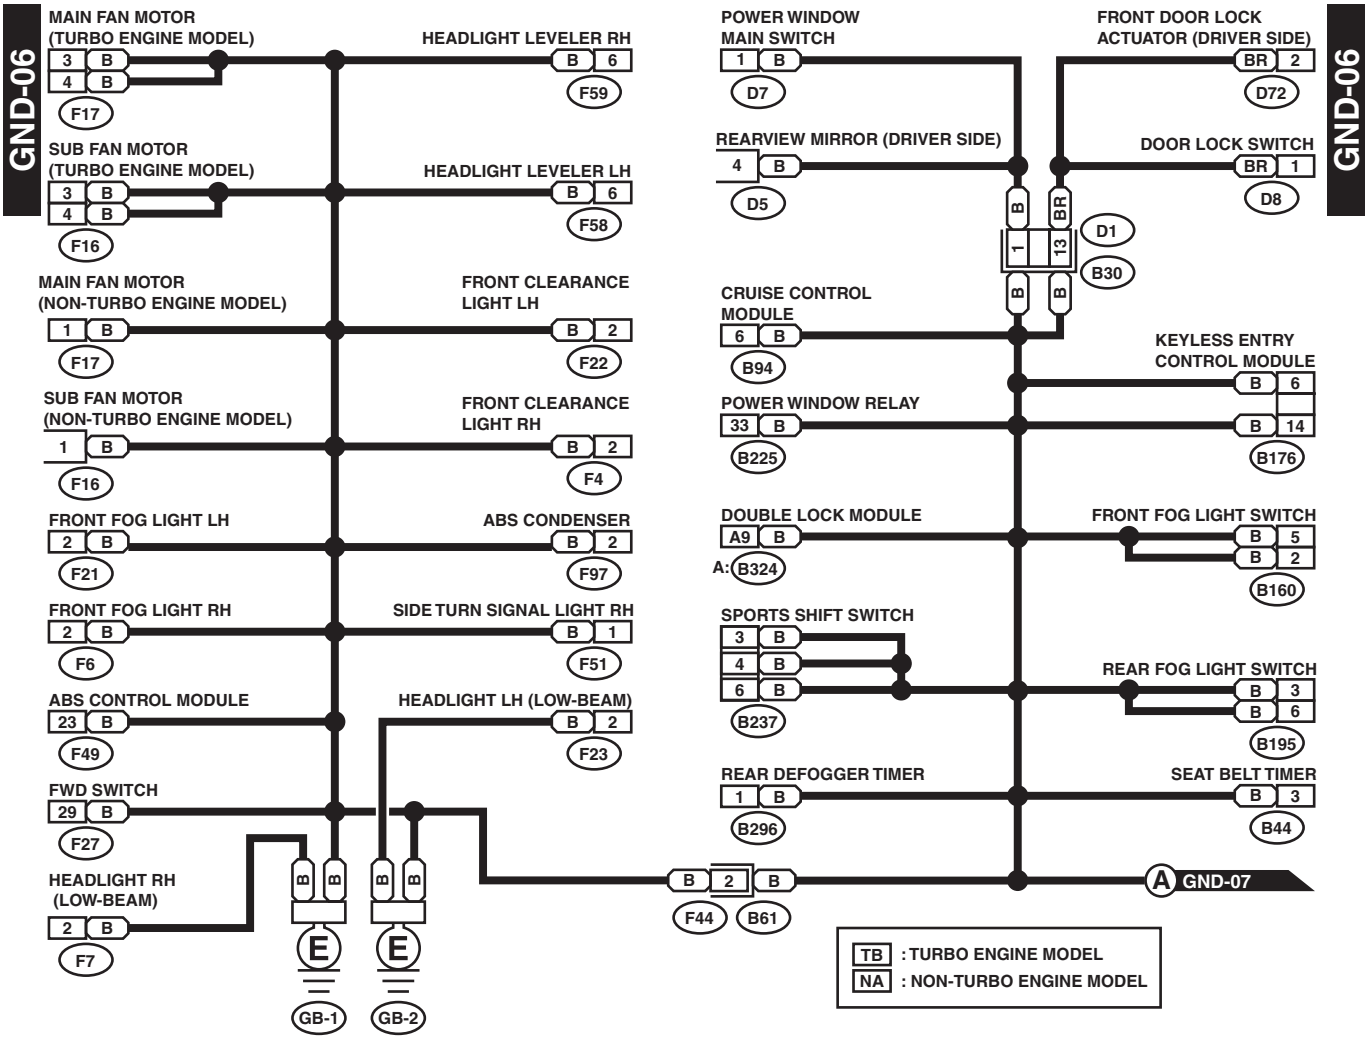

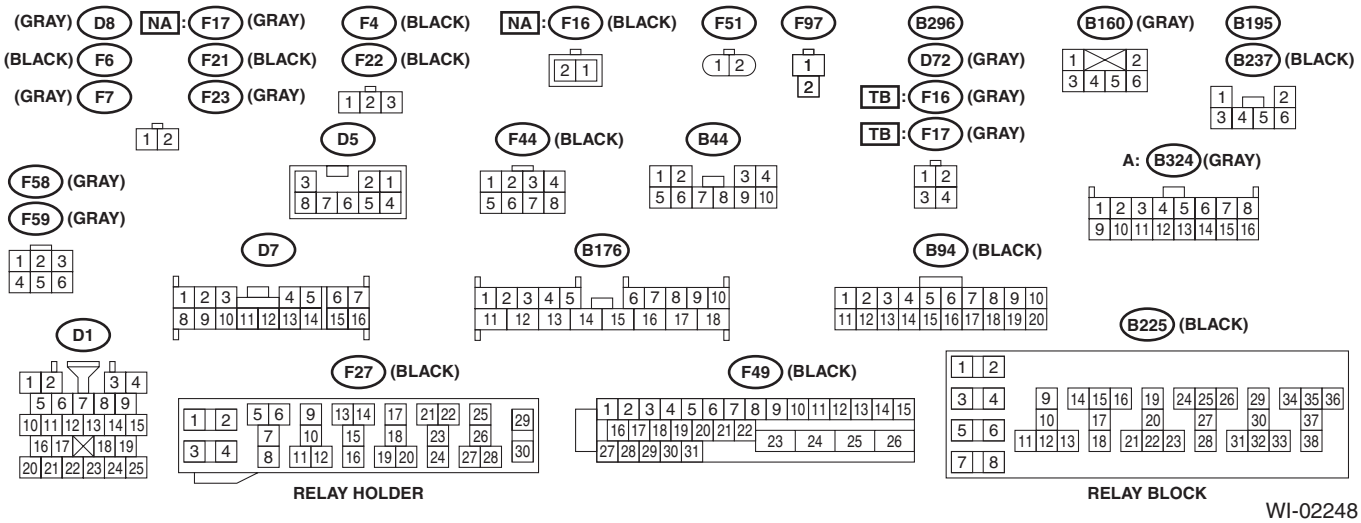

WI-02248

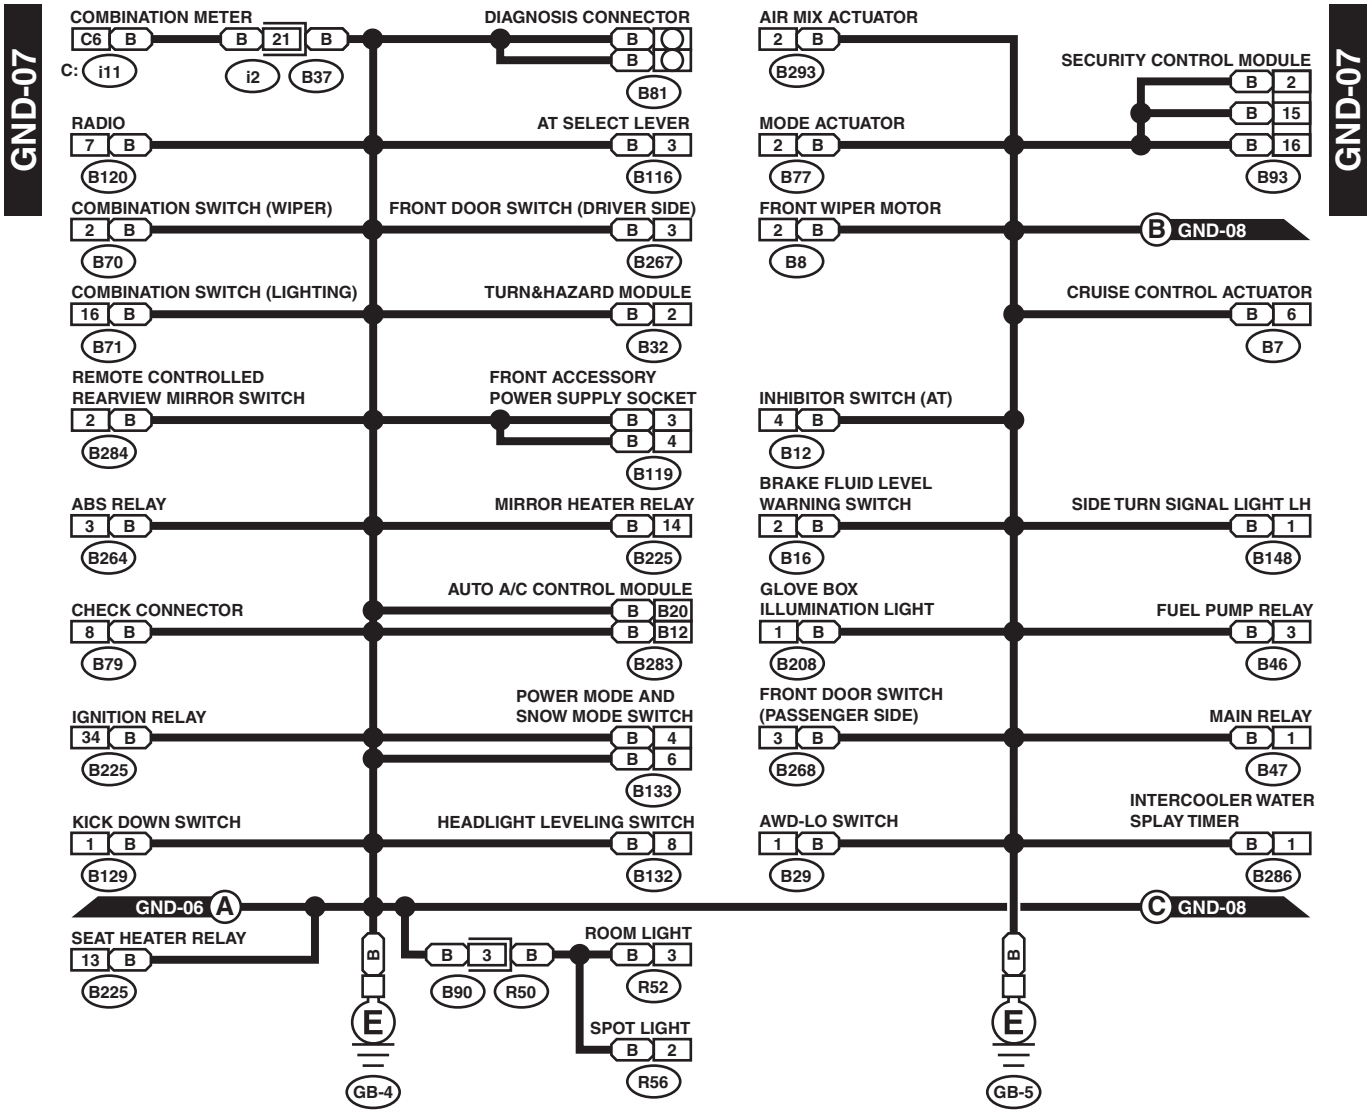
GND-07
COMBINATION METER
C6 B
B 21 B
C: i11
i2
B37
DIAGNOSIS CONNECTOR
B
B
B81
AIR MIX ACTUATOR
2 B
B293
SECURITY CONTROL MODULE
B 2
B 15
B 16
B93
RADIO
7 B
B120
AT SELECT LEVER
B 3
B116
MODE ACTUATOR
2 B
B77
COMBINATION SWITCH (WIPER)
2 B
B70
FRONT DOOR SWITCH (DRIVER SIDE)
B 3
B267
FRONT WIPER MOTOR
2 B
B8
B GND-08
COMBINATION SWITCH (LIGHTING)
16 B
B71
TURN&HAZARD MODULE
B 2
B32
CRUISE CONTROL ACTUATOR
B 6
B7
REMOTE CONTROLLED
REARVIEW MIRROR SWITCH
2 B
B284
FRONT ACCESSORY
POWER SUPPLY SOCKET
B 3
B 4
B119
INHIBITOR SWITCH (AT)
4 B
B12
ABS RELAY
3 B
B264
MIRROR HEATER RELAY
B 14
B225
BRAKE FLUID LEVEL
WARNING SWITCH
2 B
B16
SIDE TURN SIGNAL LIGHT LH
B 1
B148
AUTO A/C CONTROL MODULE
CHECK CONNECTOR
8 B
B79
B 20
B 12
B283
GLOVE BOX
ILLUMINATION LIGHT
1 B
B208
FUEL PUMP RELAY
B 3
B46
POWER MODE AND
SNOW MODE SWITCH
IGNITION RELAY
34 B
B225
B 4
B 6
B133
FRONT DOOR SWITCH
(PASSENGER SIDE)
3 B
B268
MAIN RELAY
B 1
B47
KICK DOWN SWITCH
1 B
B129
HEADLIGHT LEVELING SWITCH
B 8
B132
AWD-LO SWITCH
1 B
B29
INTERCOOLER WATER
SPLAY TIMER
B 1
B286
GND-06 A
C GND-08
SEAT HEATER RELAY
13 B
B225
ROOM LIGHT
B 3
R52
SPOT LIGHT
B 2
R56
B 3 B
B90
R50
B
E
GB-4
GB-5

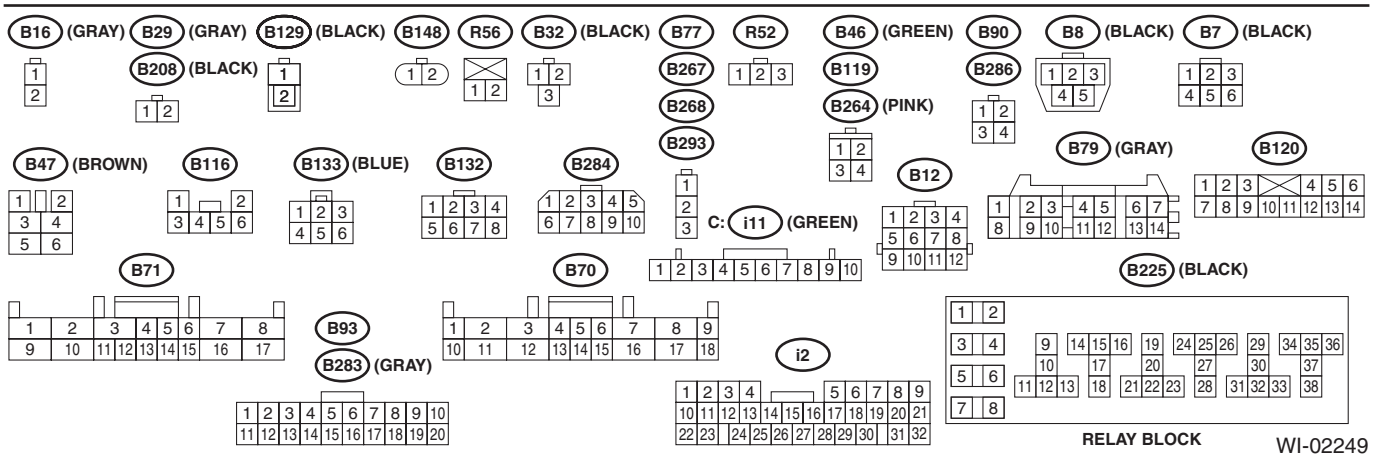
B16 (GRAY)
B29 (GRAY)
B208 (BLACK)
B129 (BLACK)
B148
R56
B32 (BLACK)
B77
B267
B268
B293
R52
B46 (GREEN)
B119
B264 (PINK)
B90
B286
B8 (BLACK)
B7 (BLACK)
B47 (BROWN)
B116
B133 (BLUE)
B132
B284
C: i11 (GREEN)
B12
B79 (GRAY)
B120
B71
B70
B93
B283 (GRAY)
i2
B225 (BLACK)
RELAY BLOCK
WI-02249

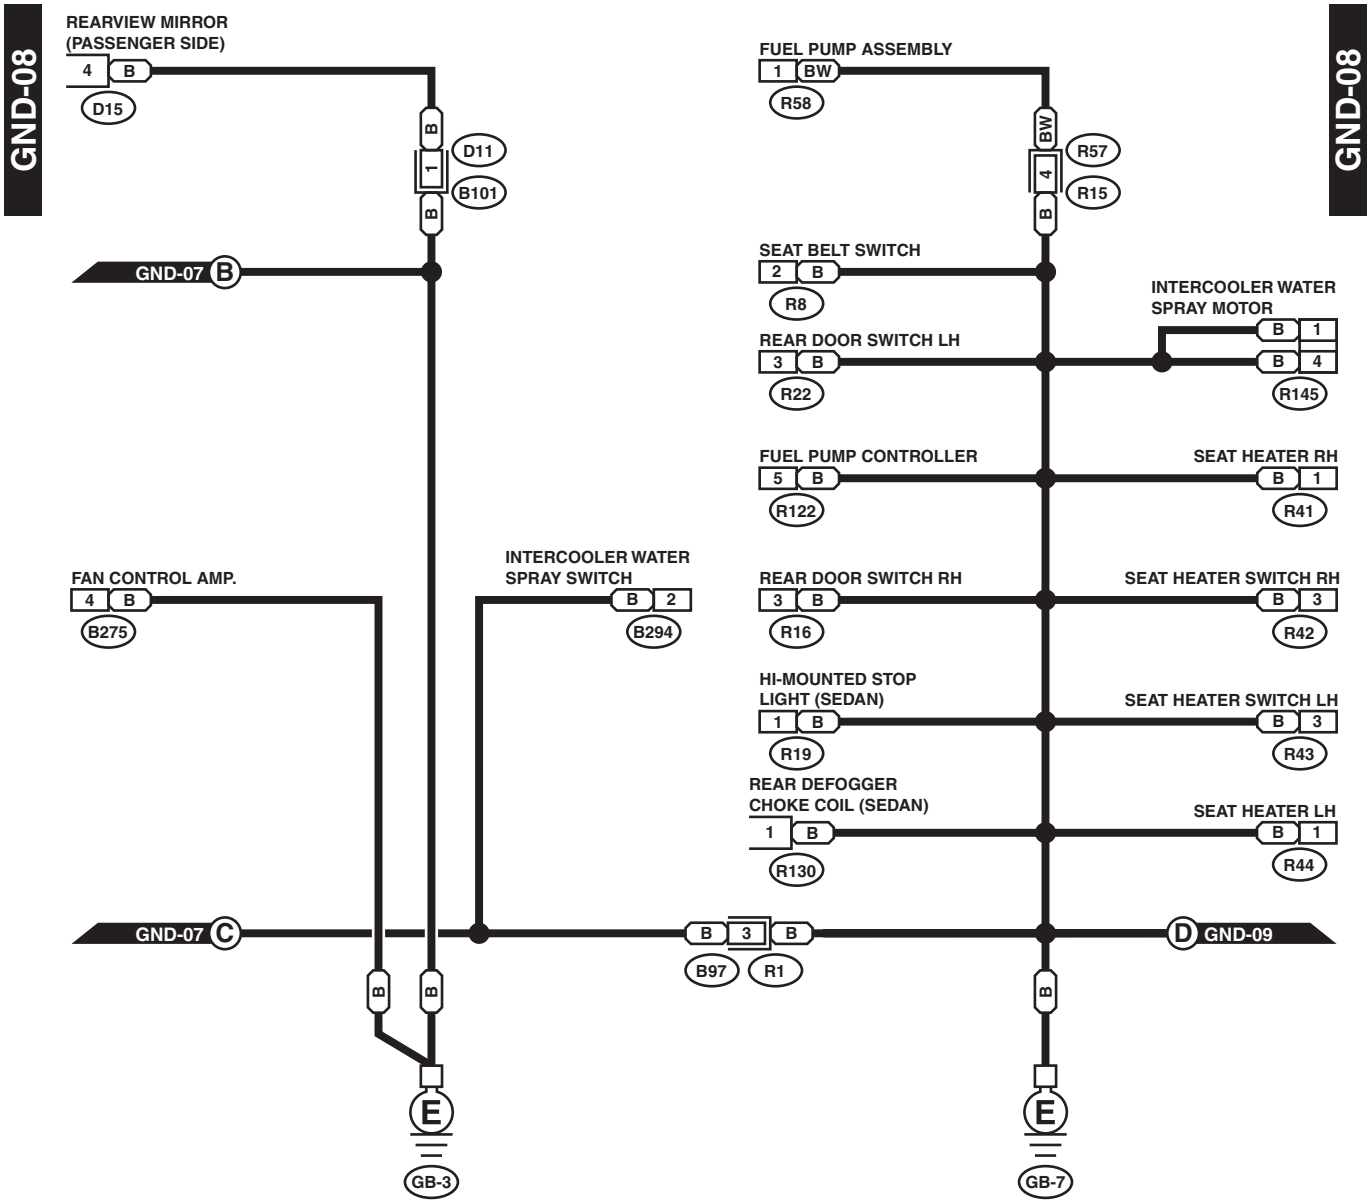
GND-08
GND-08
REARVIEW MIRROR (PASSENGER SIDE)
4 B
D15
B
1
D11
B101
B
GND-07 B
FUEL PUMP ASSEMBLY
1 BW
R58
BW
4
R57
R15
B
SEAT BELT SWITCH
2 B
R8
INTERCOOLER WATER SPRAY MOTOR
B 1
B 4
R145
REAR DOOR SWITCH LH
3 B
R22
FUEL PUMP CONTROLLER
5 B
R122
SEAT HEATER RH
B 1
R41
FAN CONTROL AMP.
4 B
B275
INTERCOOLER WATER SPRAY SWITCH
B 2
B294
REAR DOOR SWITCH RH
3 B
R16
SEAT HEATER SWITCH RH
B 3
R42
HI-MOUNTED STOP LIGHT (SEDAN)
1 B
R19
SEAT HEATER SWITCH LH
B 3
R43
REAR DEFOGGER CHOKE COIL (SEDAN)
1 B
R130
SEAT HEATER LH
B 1
R44
GND-07 C
B 3 B
B97 R1
D GND-09
B
B
B
E
GB-3
E
GB-7

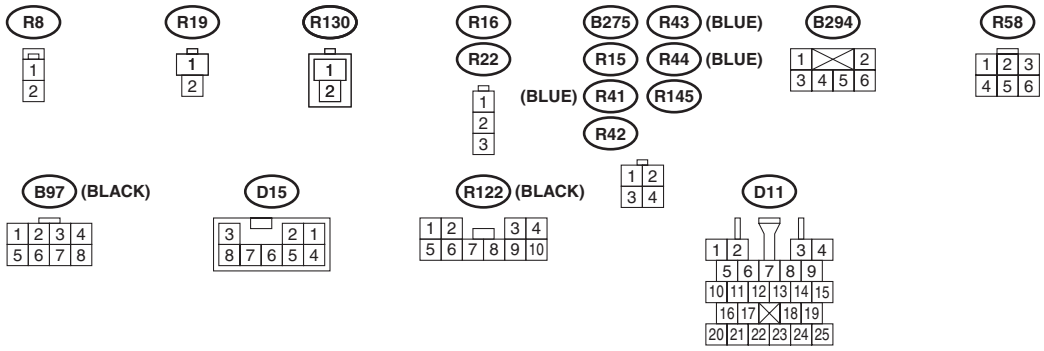
R8
R19
R130
R16
R22
(BLUE)
B275
R43 (BLUE)
R15
R44 (BLUE)
R41
R145
R42
B294
R58
B97 (BLACK)
D15
R122 (BLACK)
D11

WI-02250

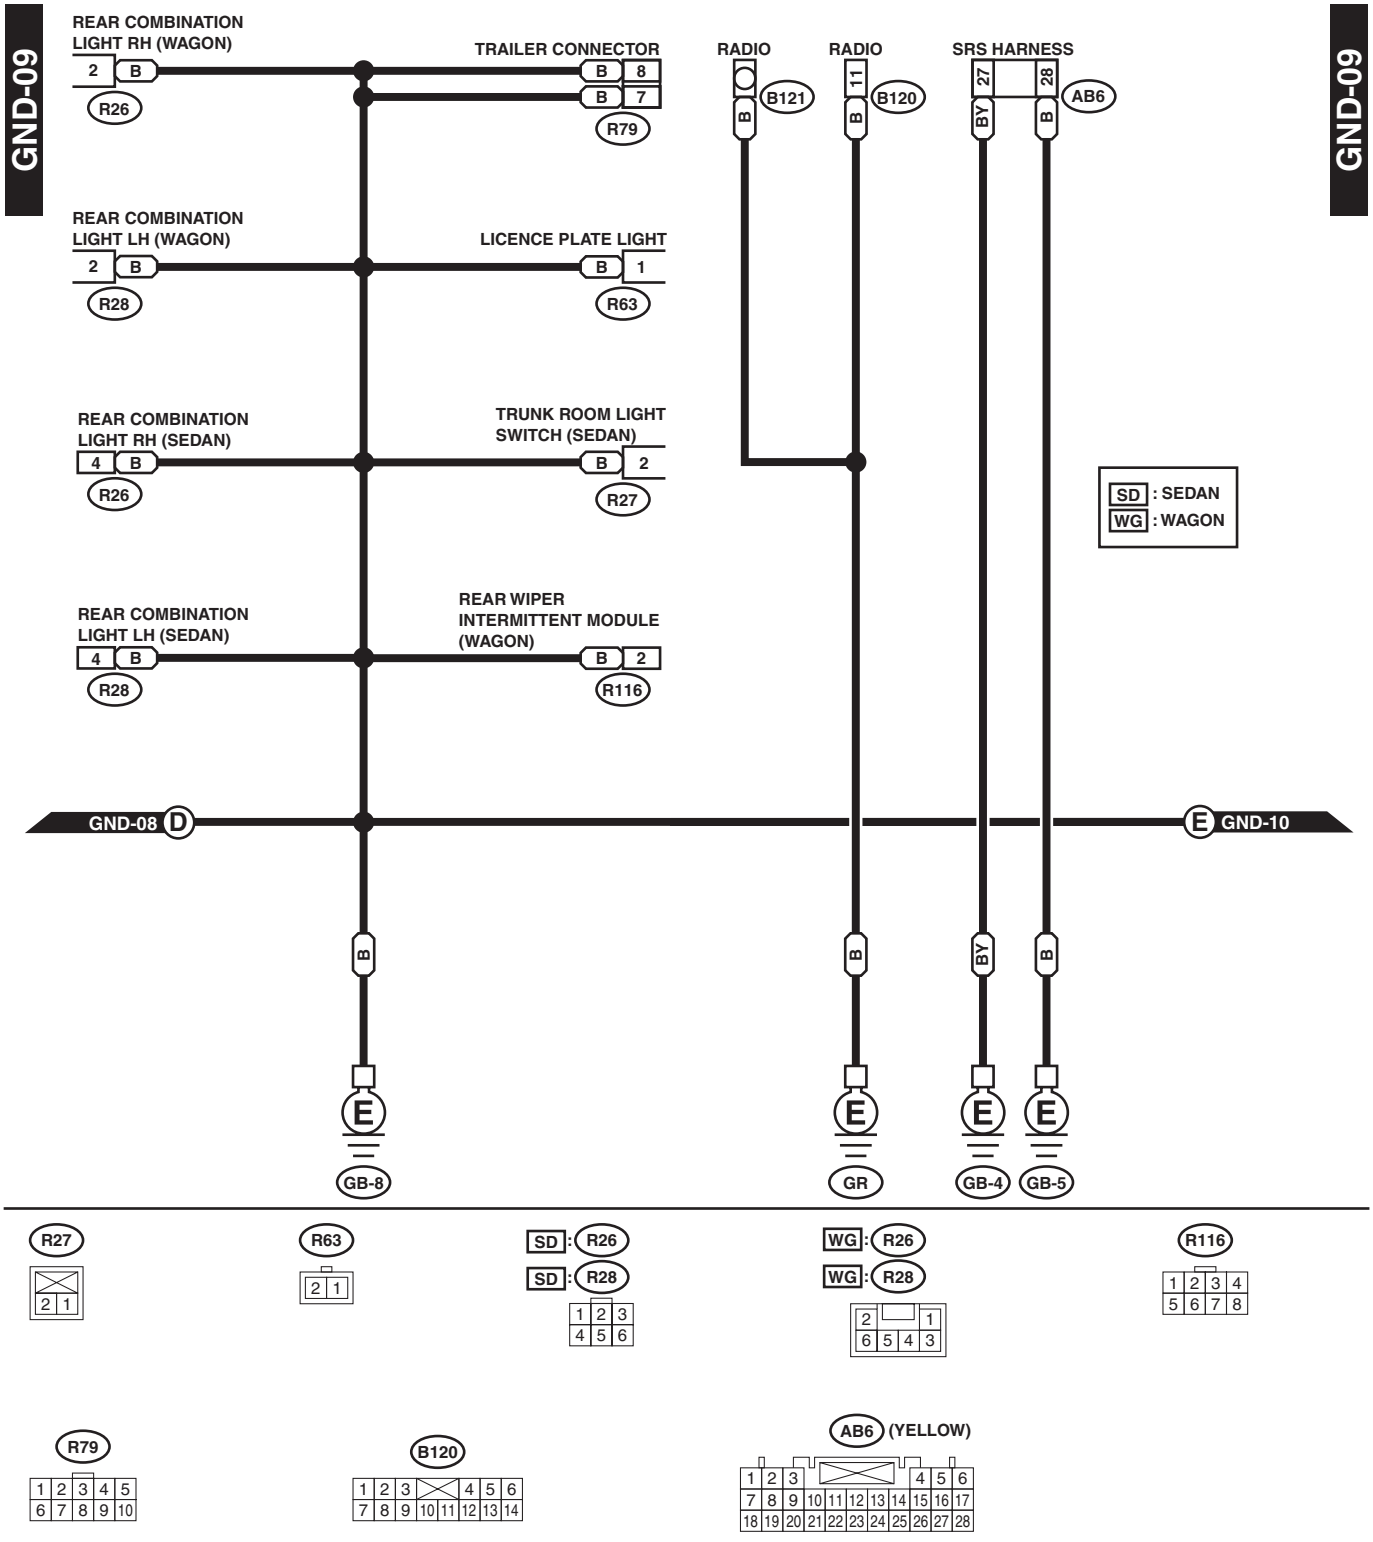
GND-09
GND-09
REAR COMBINATION LIGHT RH (WAGON)
2 B
R26
TRAILER CONNECTOR
B 8
B 7
R79
RADIO
B121
RADIO
B120
SRS HARNESS
27 28
BY B
AB6
REAR COMBINATION LIGHT LH (WAGON)
2 B
R28
LICENCE PLATE LIGHT
B 1
R63
REAR COMBINATION LIGHT RH (SEDAN)
4 B
R26
TRUNK ROOM LIGHT SWITCH (SEDAN)
B 2
R27
SD : SEDAN
WG : WAGON
REAR COMBINATION LIGHT LH (SEDAN)
4 B
R28
REAR WIPER INTERMITTENT MODULE (WAGON)
B 2
R116
GND-08 D
E GND-10
B
B
BY
B
E
E
E
E
GB-8
GR
GB-4
GB-5
R27
2 1
R63
2 1
SD : R26
SD : R28
1 2 3
4 5 6
WG : R26
WG : R28
2 1
6 5 4 3
R116
1 2 3 4
5 6 7 8
R79
1 2 3 4 5
6 7 8 9 10
B120
1 2 3 4 5 6
7 8 9 10 11 12 13 14
AB6 (YELLOW)
1 2 3 4 5 6
7 8 9 10 11 12 13 14 15 16 17
18 19 20 21 22 23 24 25 26 27 28

WI-02251

GND-10

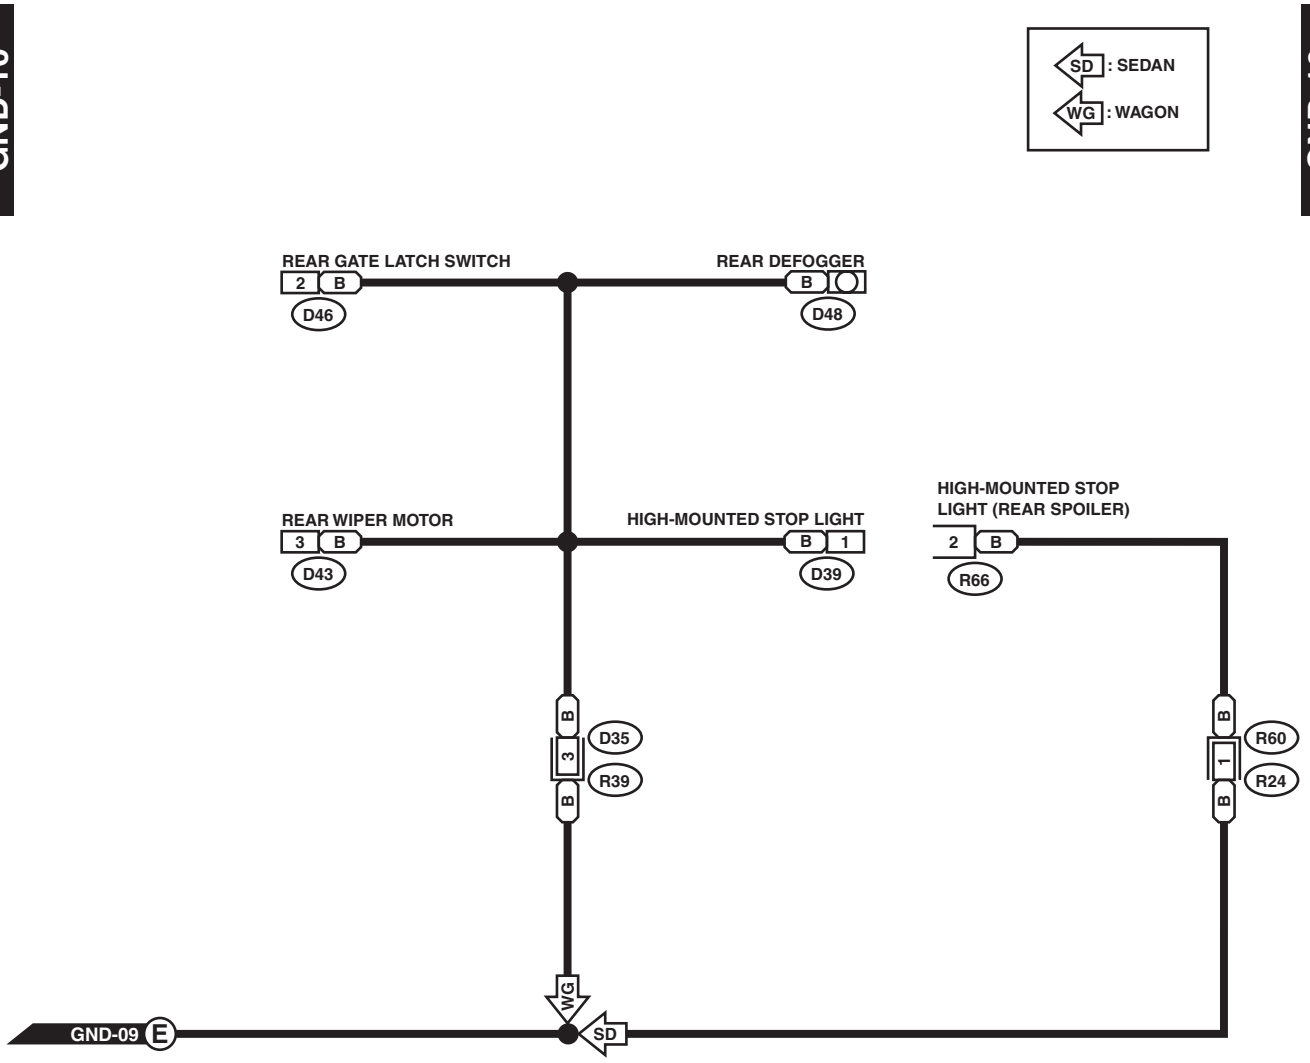

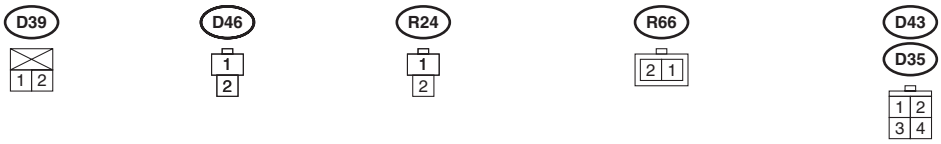

WI-02252

GND-10

3. ENGINE GROUND LHD SOHC W/O OBD ENGINE MODEL

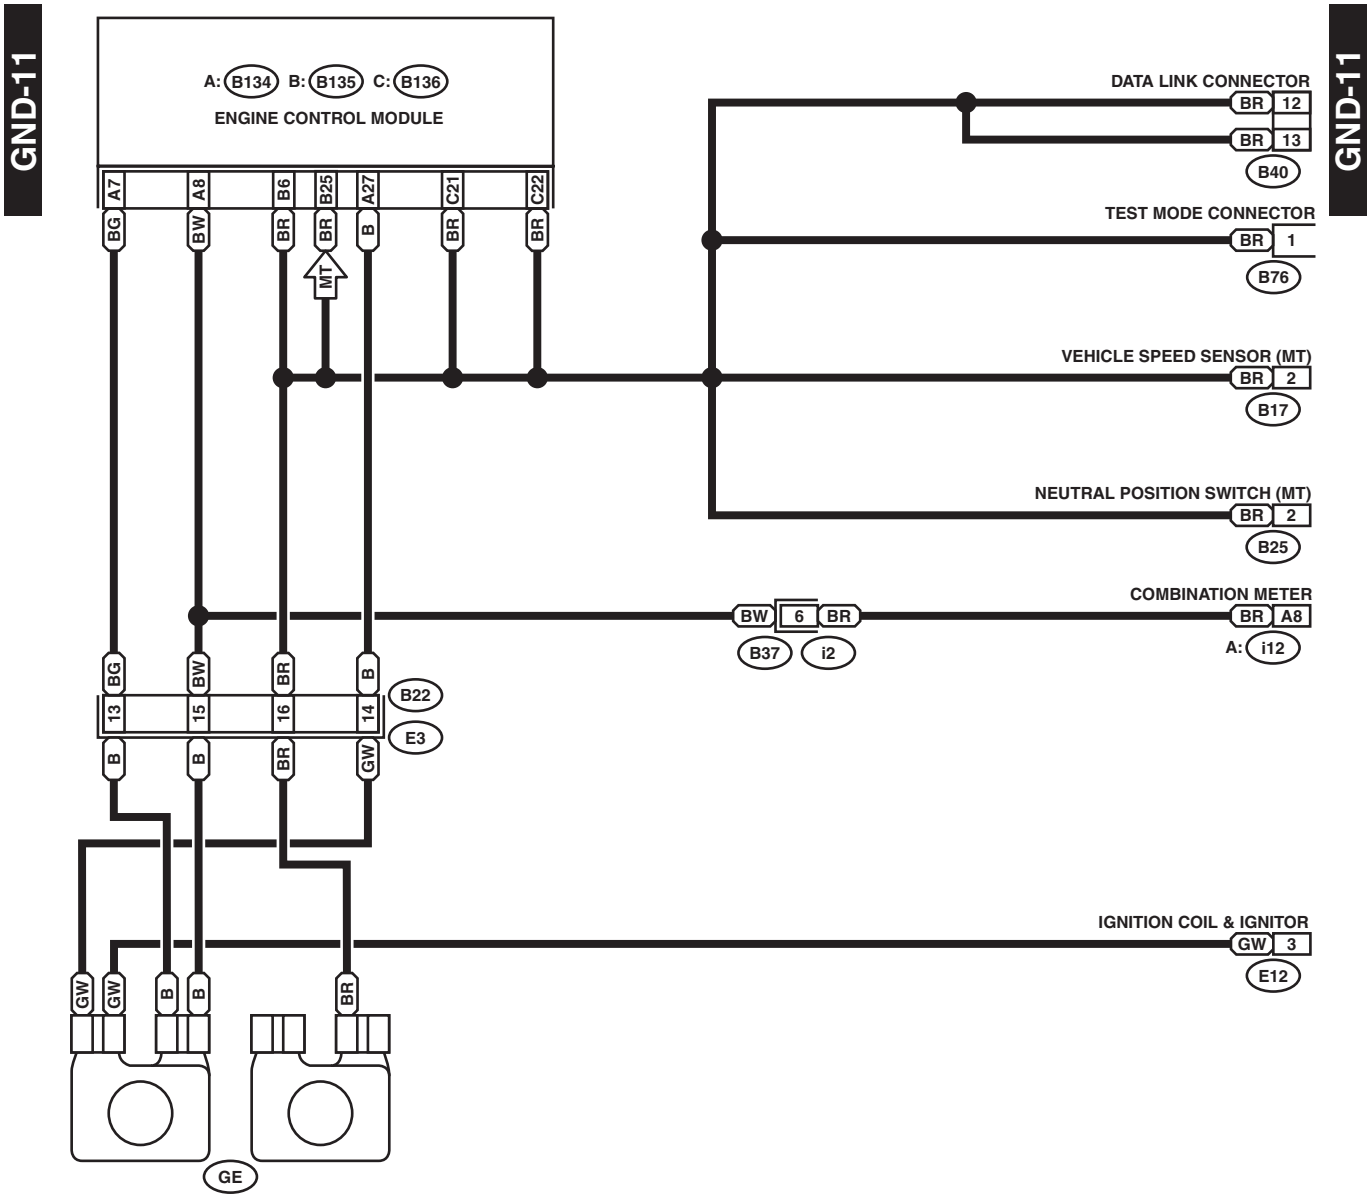

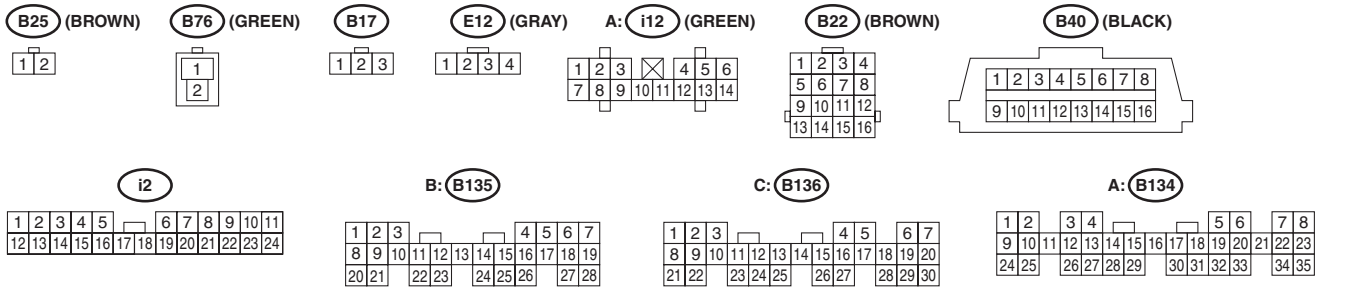

WI-02253

4. ENGINE GROUND RHD SOHC W/O OBD ENGINE MODEL

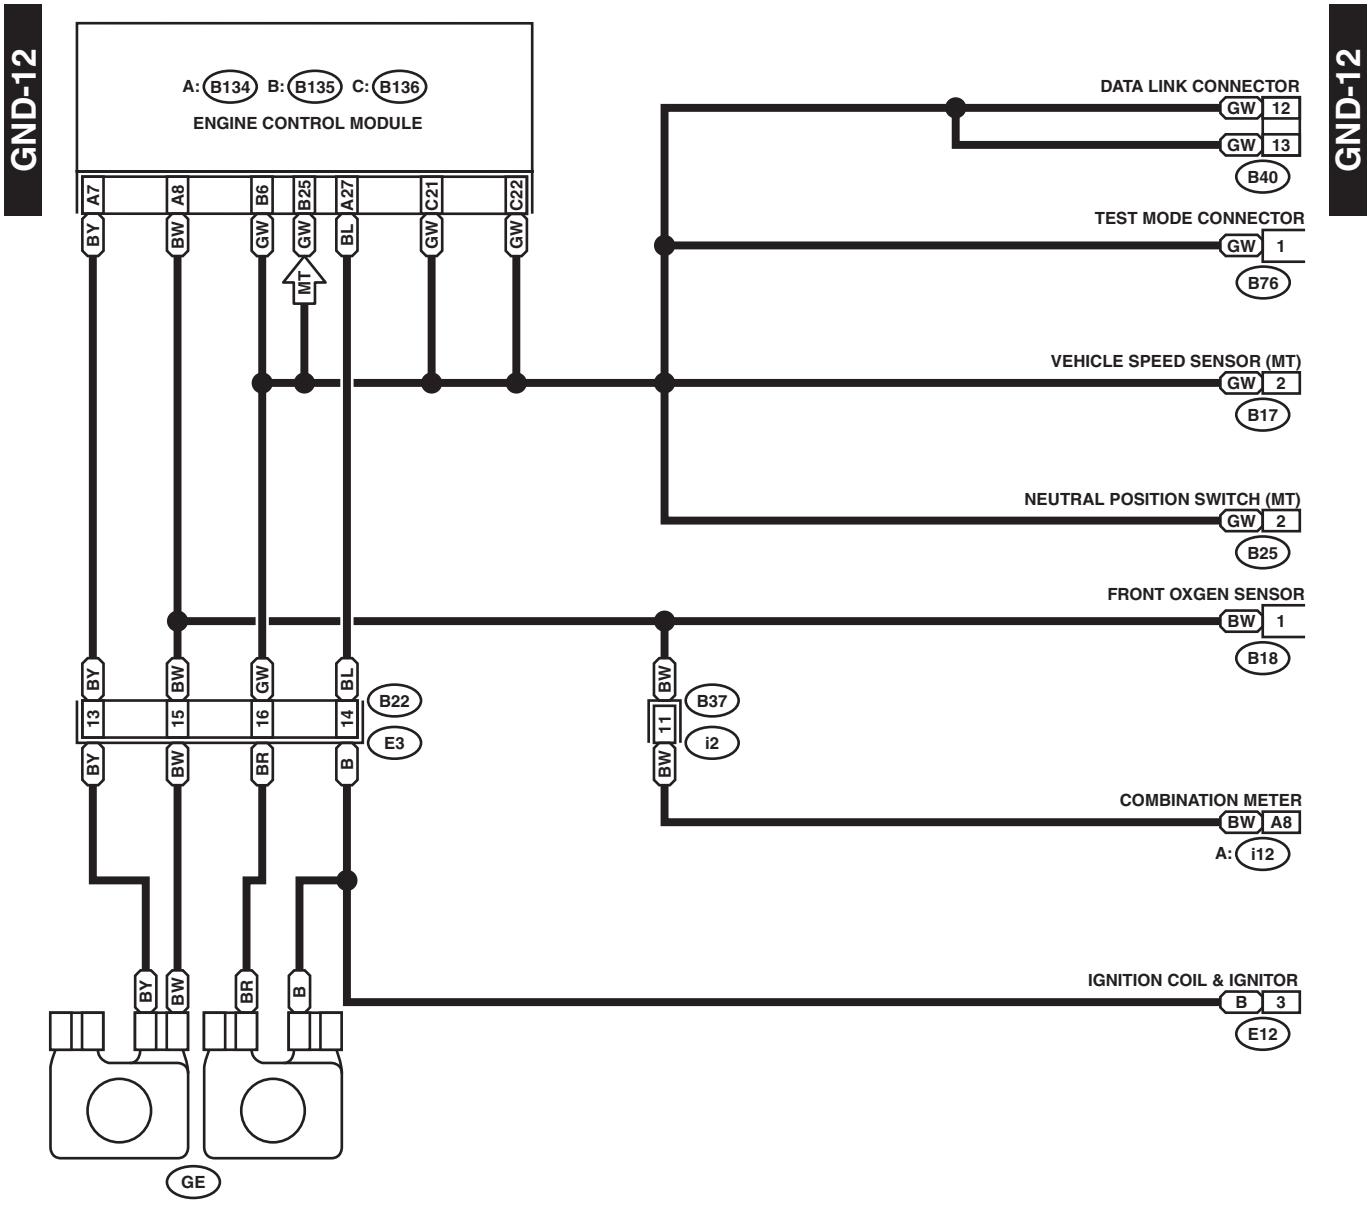

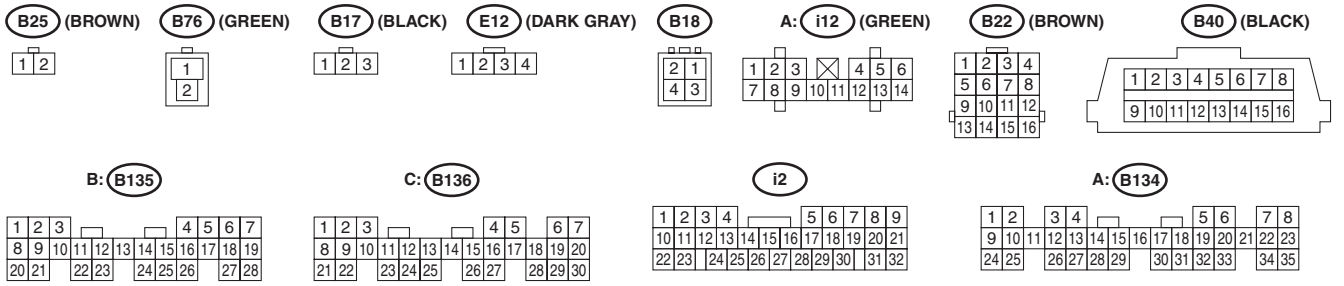

WI-02254

5. ENGINE GROUND LHD SOHC WITH OBD ENGINE MODEL

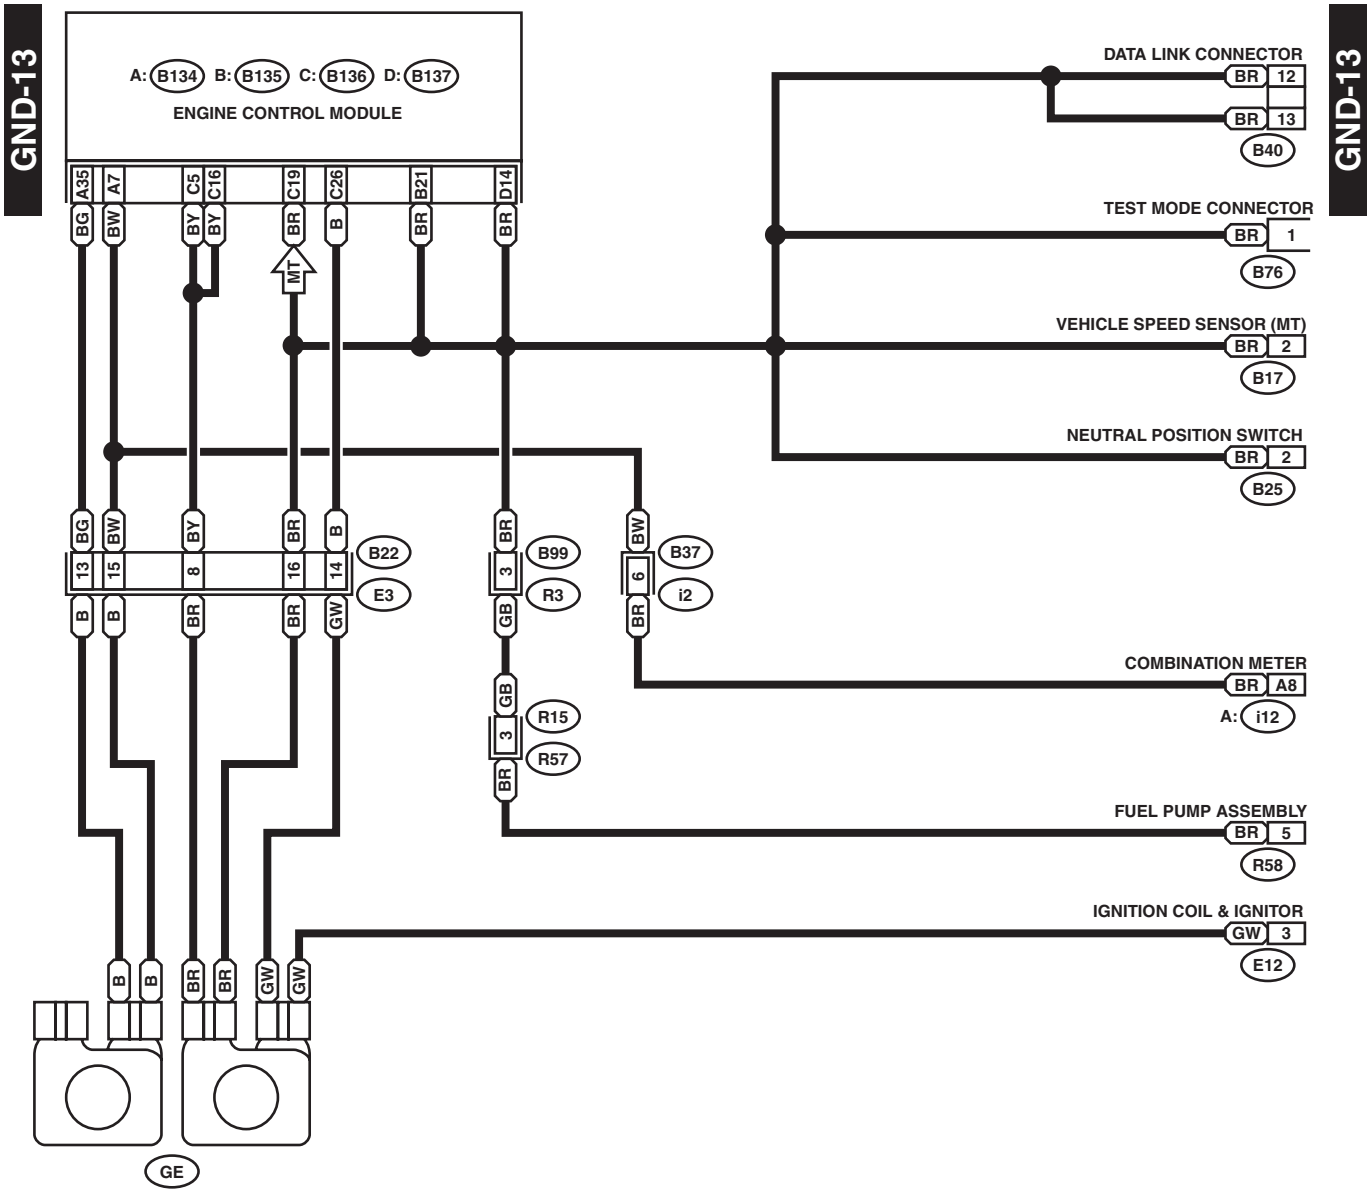

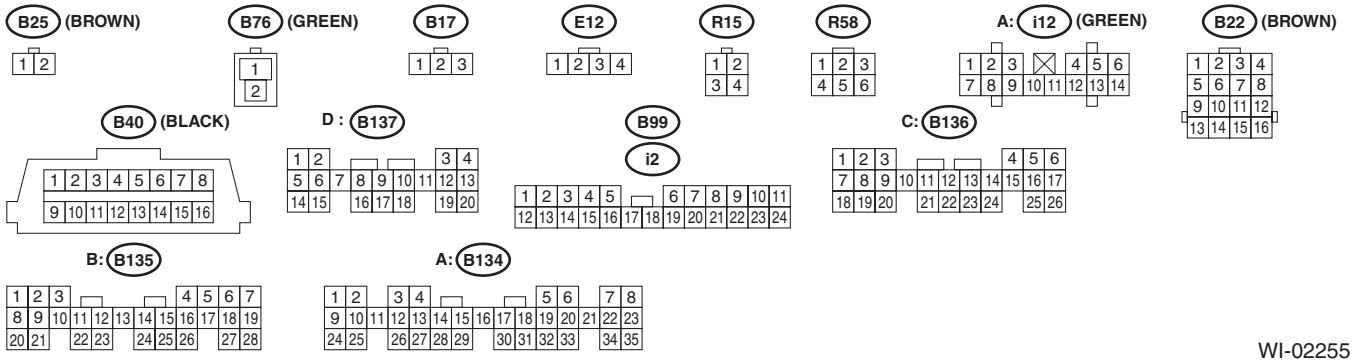

WI-02255

6. ENGINE GROUND RHD SOHC WITH OBD ENGINE MODEL

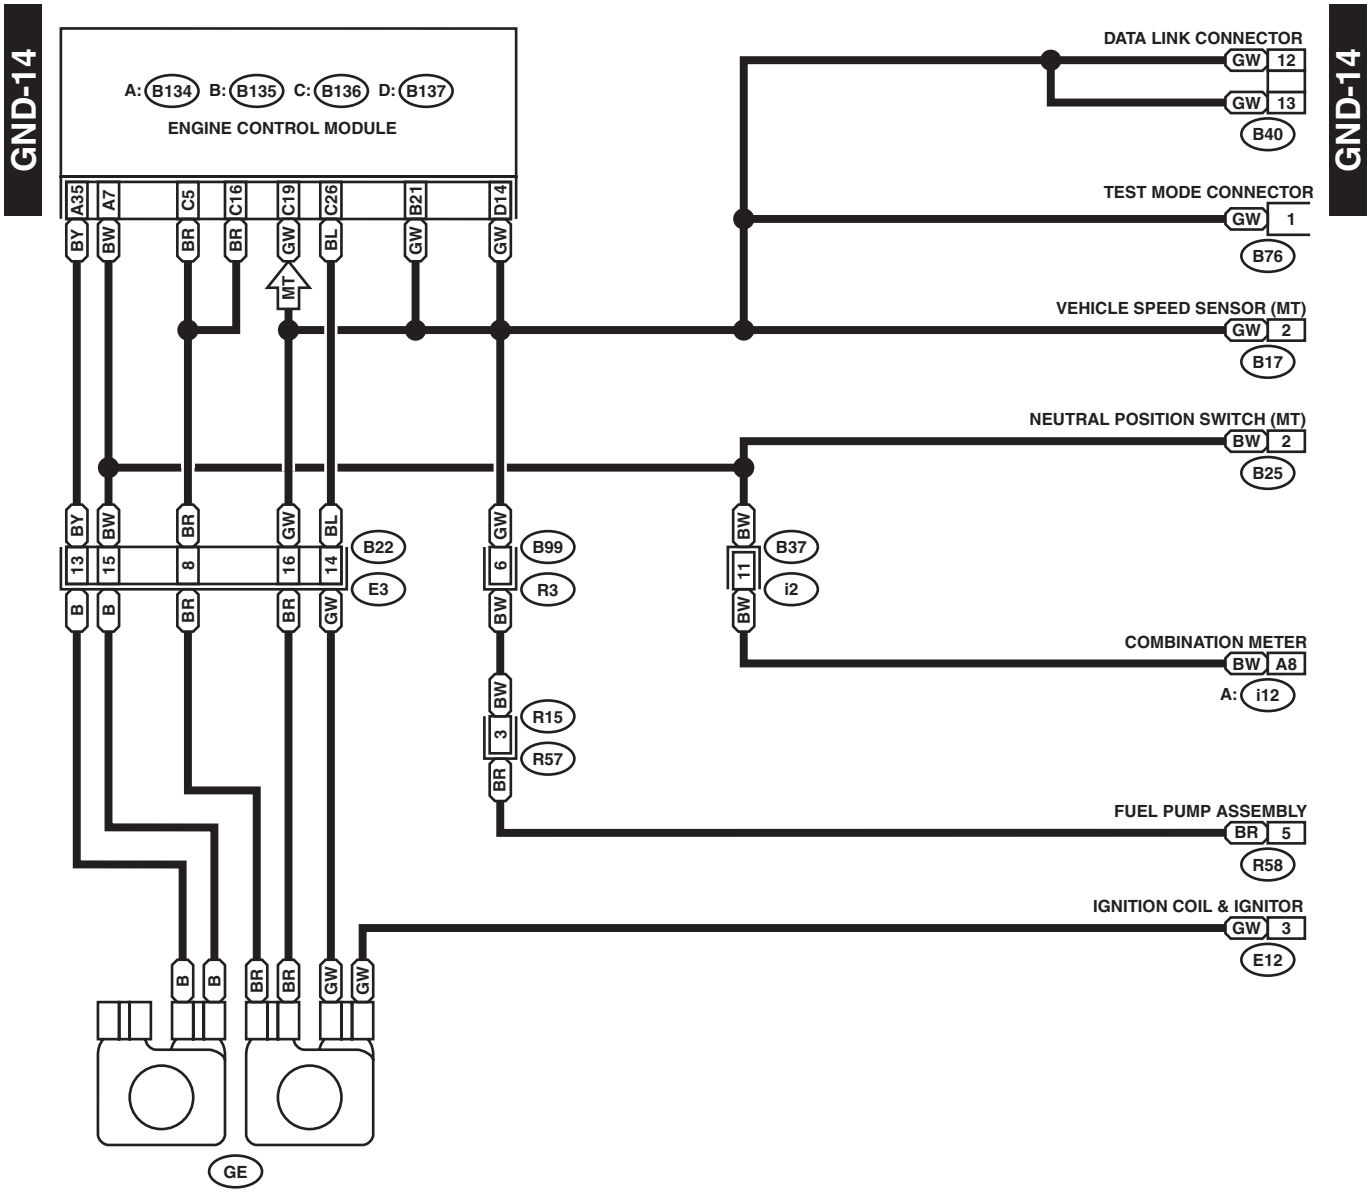

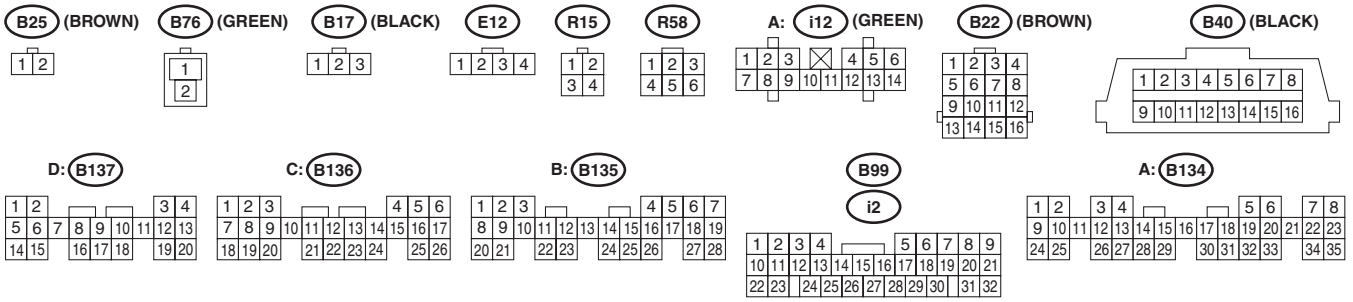

WI-02256

7. ENGINE GROUND LHD TURBO ENGINE MODEL

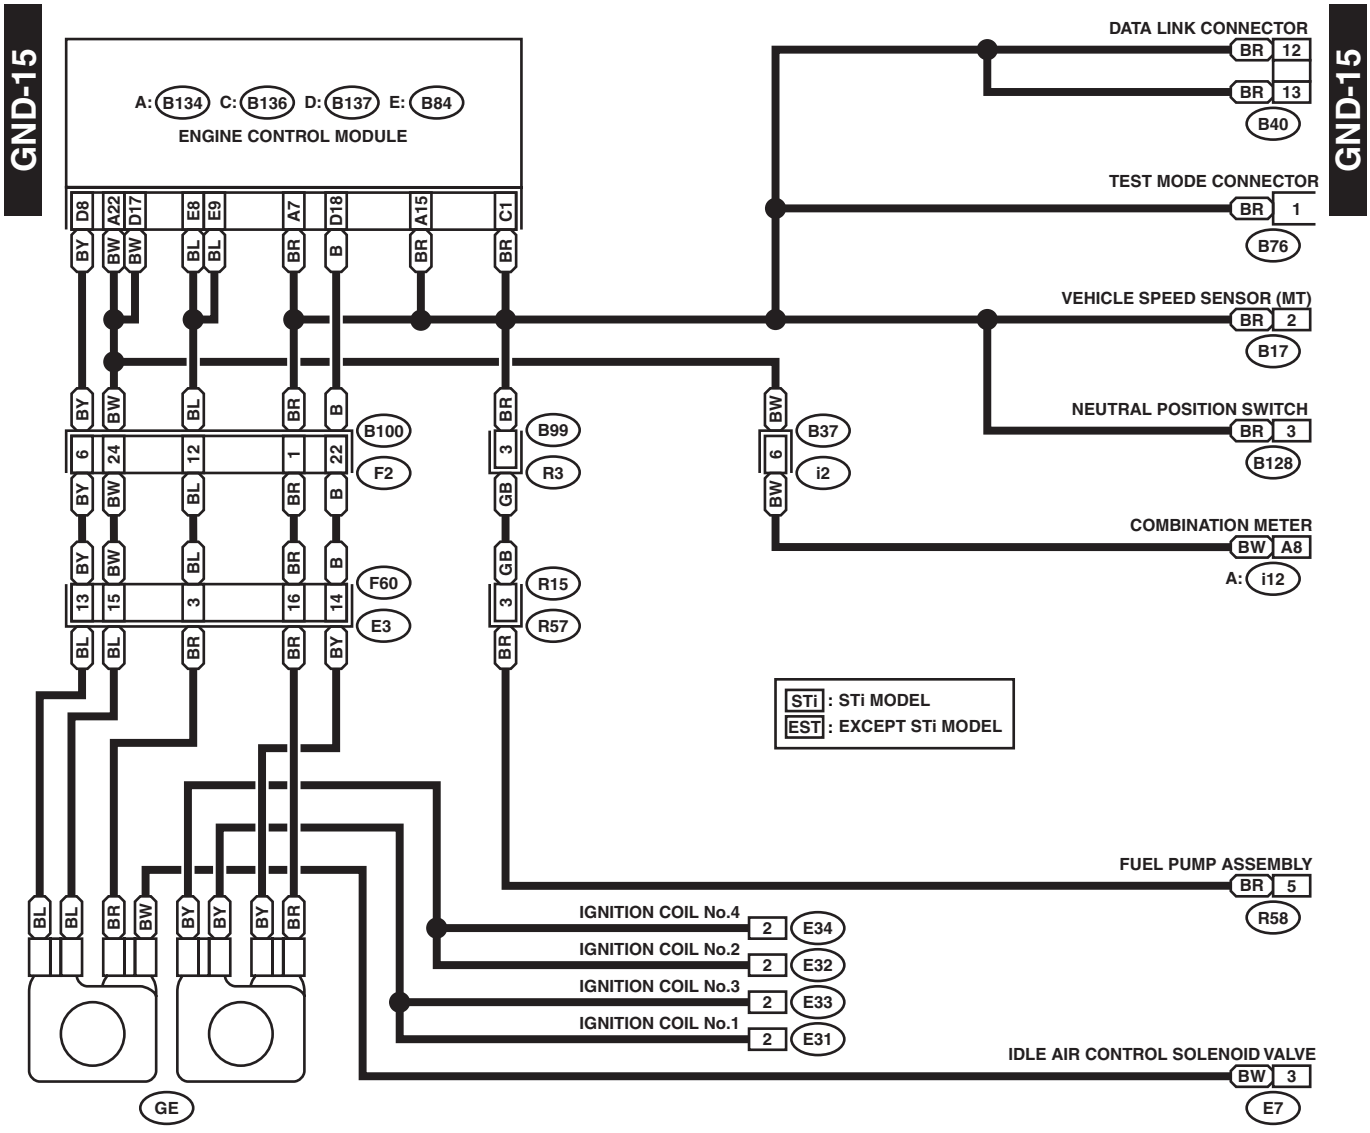

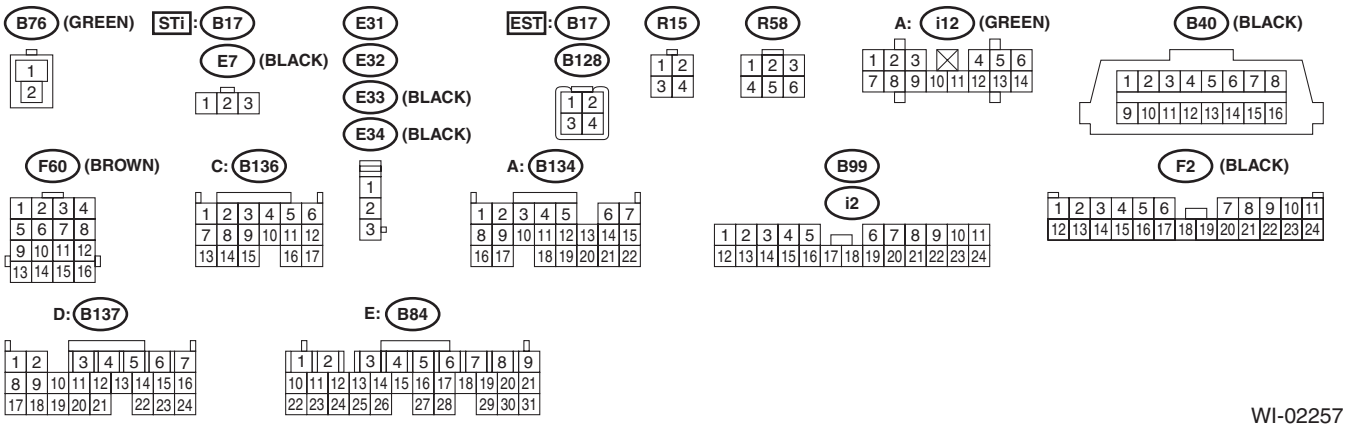

WI-02257

8. ENGINE GROUND RHD TURBO ENGINE MODEL

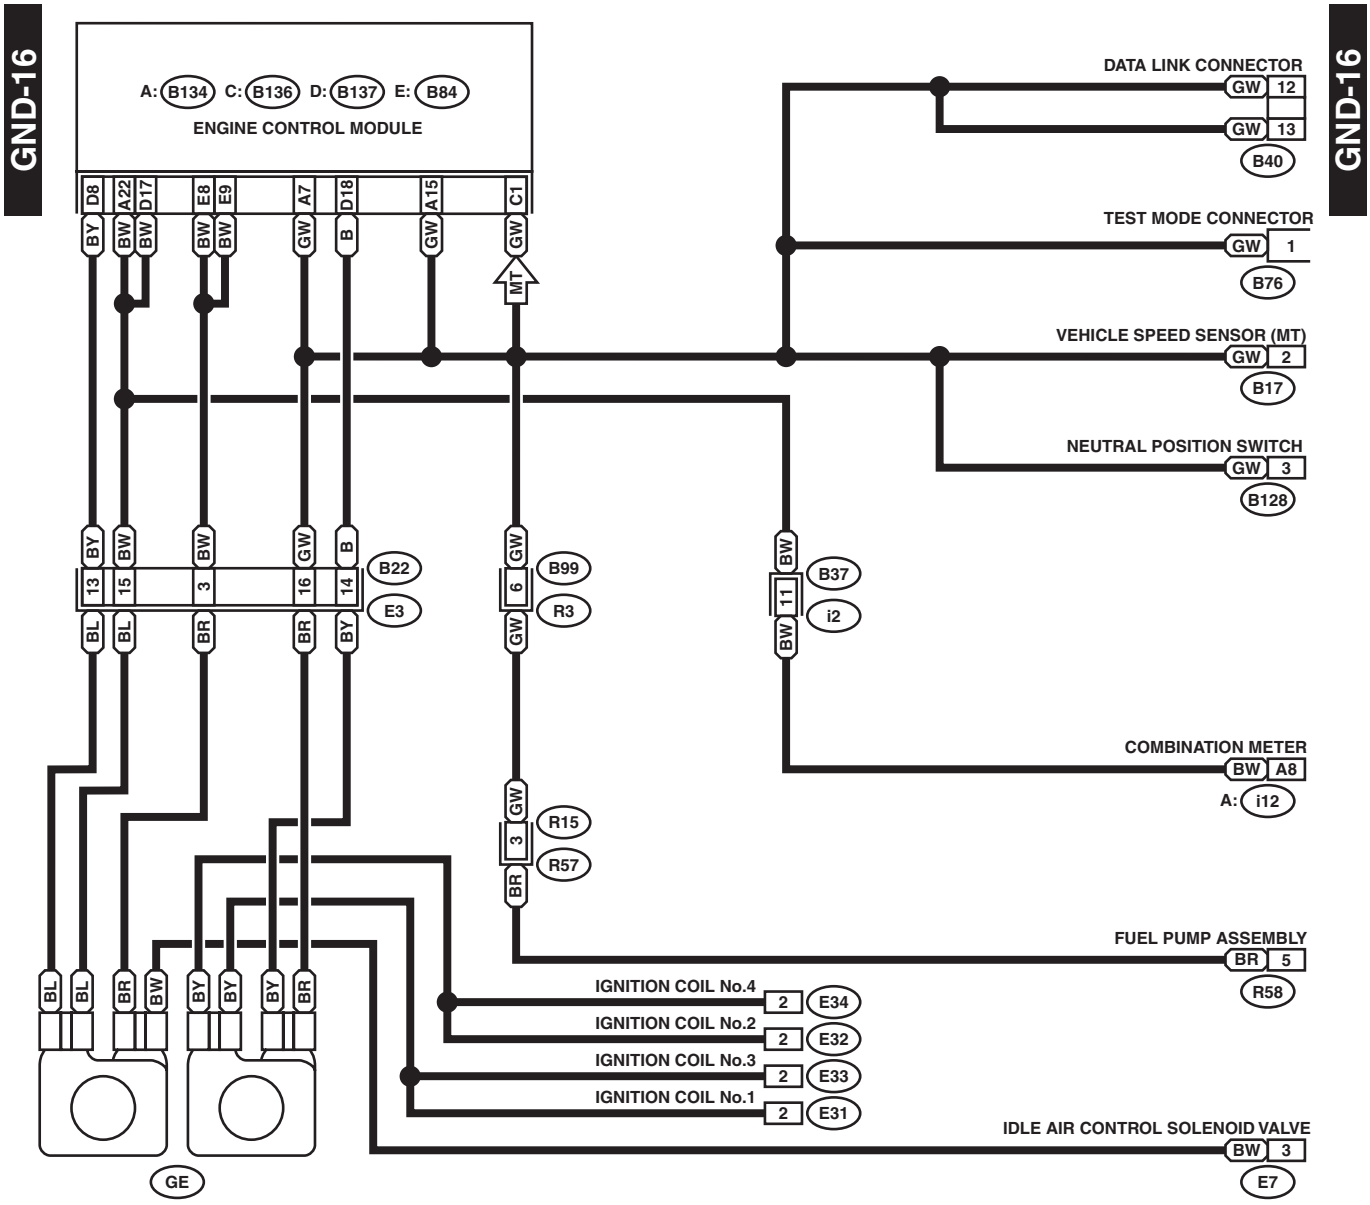

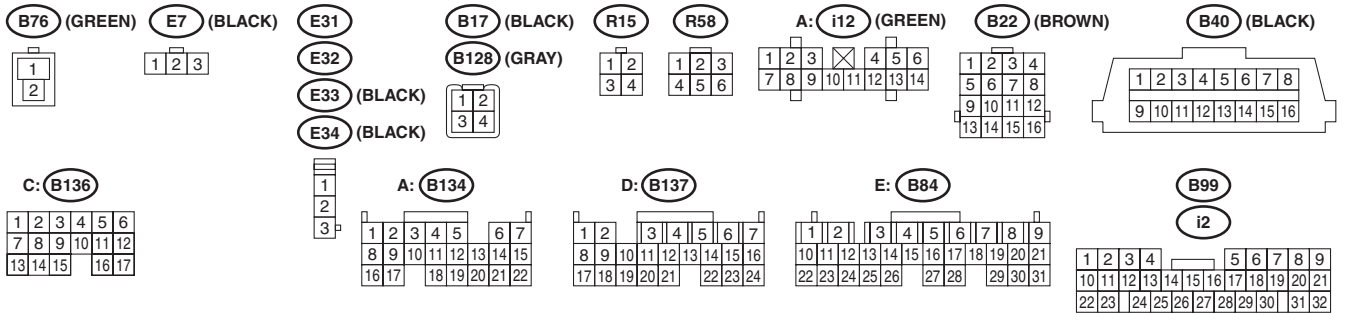

WI-02258

9. TRANSMISSION GROUND LHD MODEL

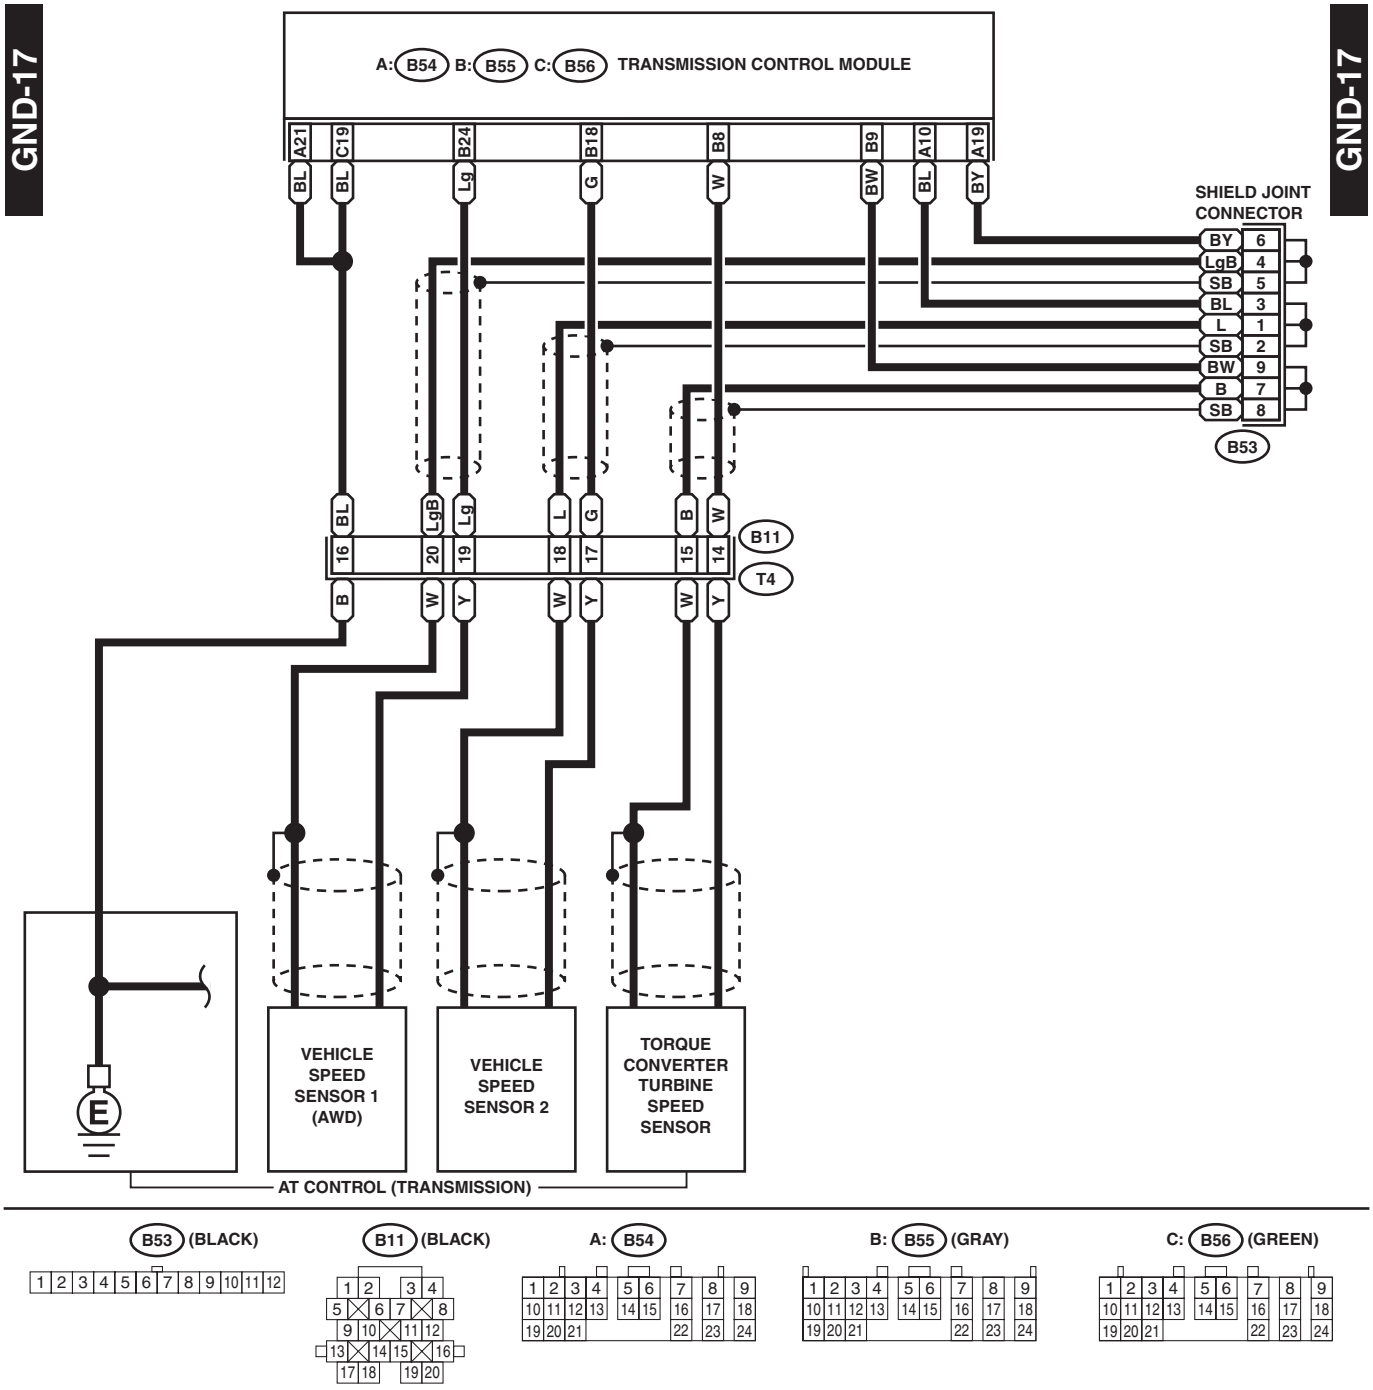

WI-02259

10.TRANSMISSION GROUND RHD MODEL

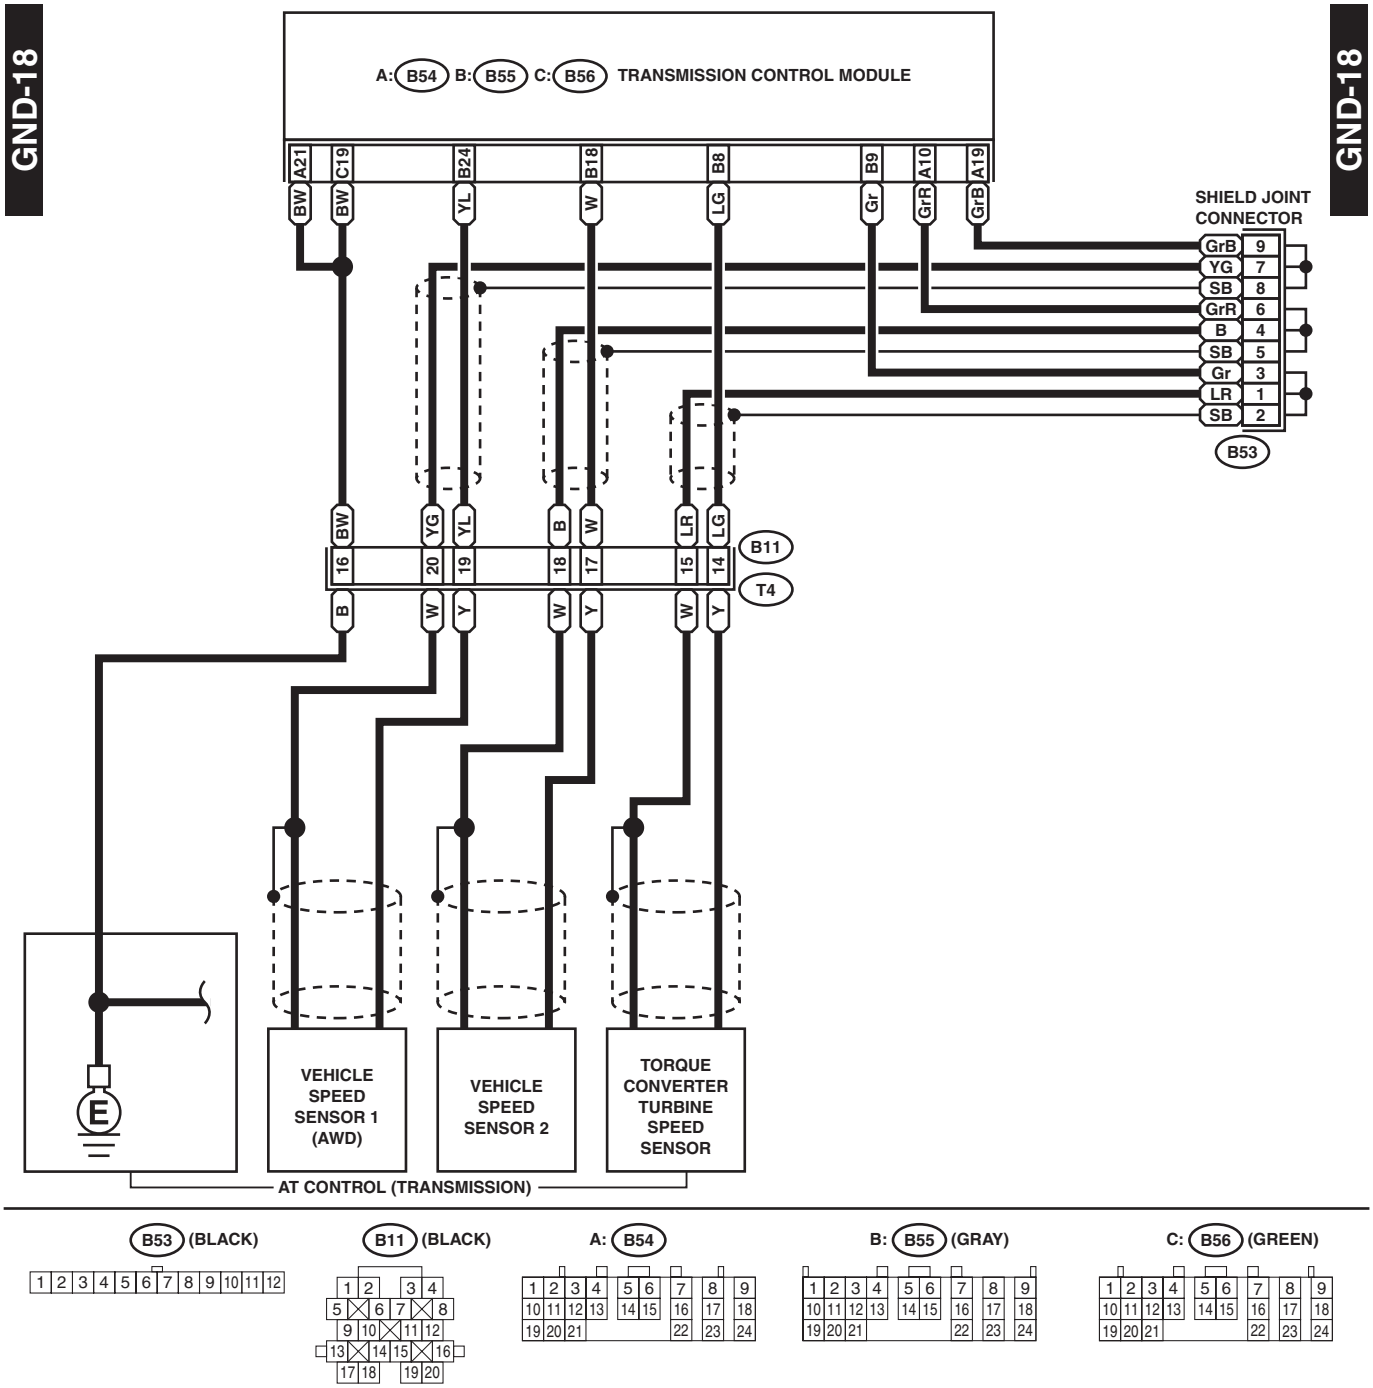

WI-02260

5. Airbag System

A: SCHEMATIC

1. LHD MODEL

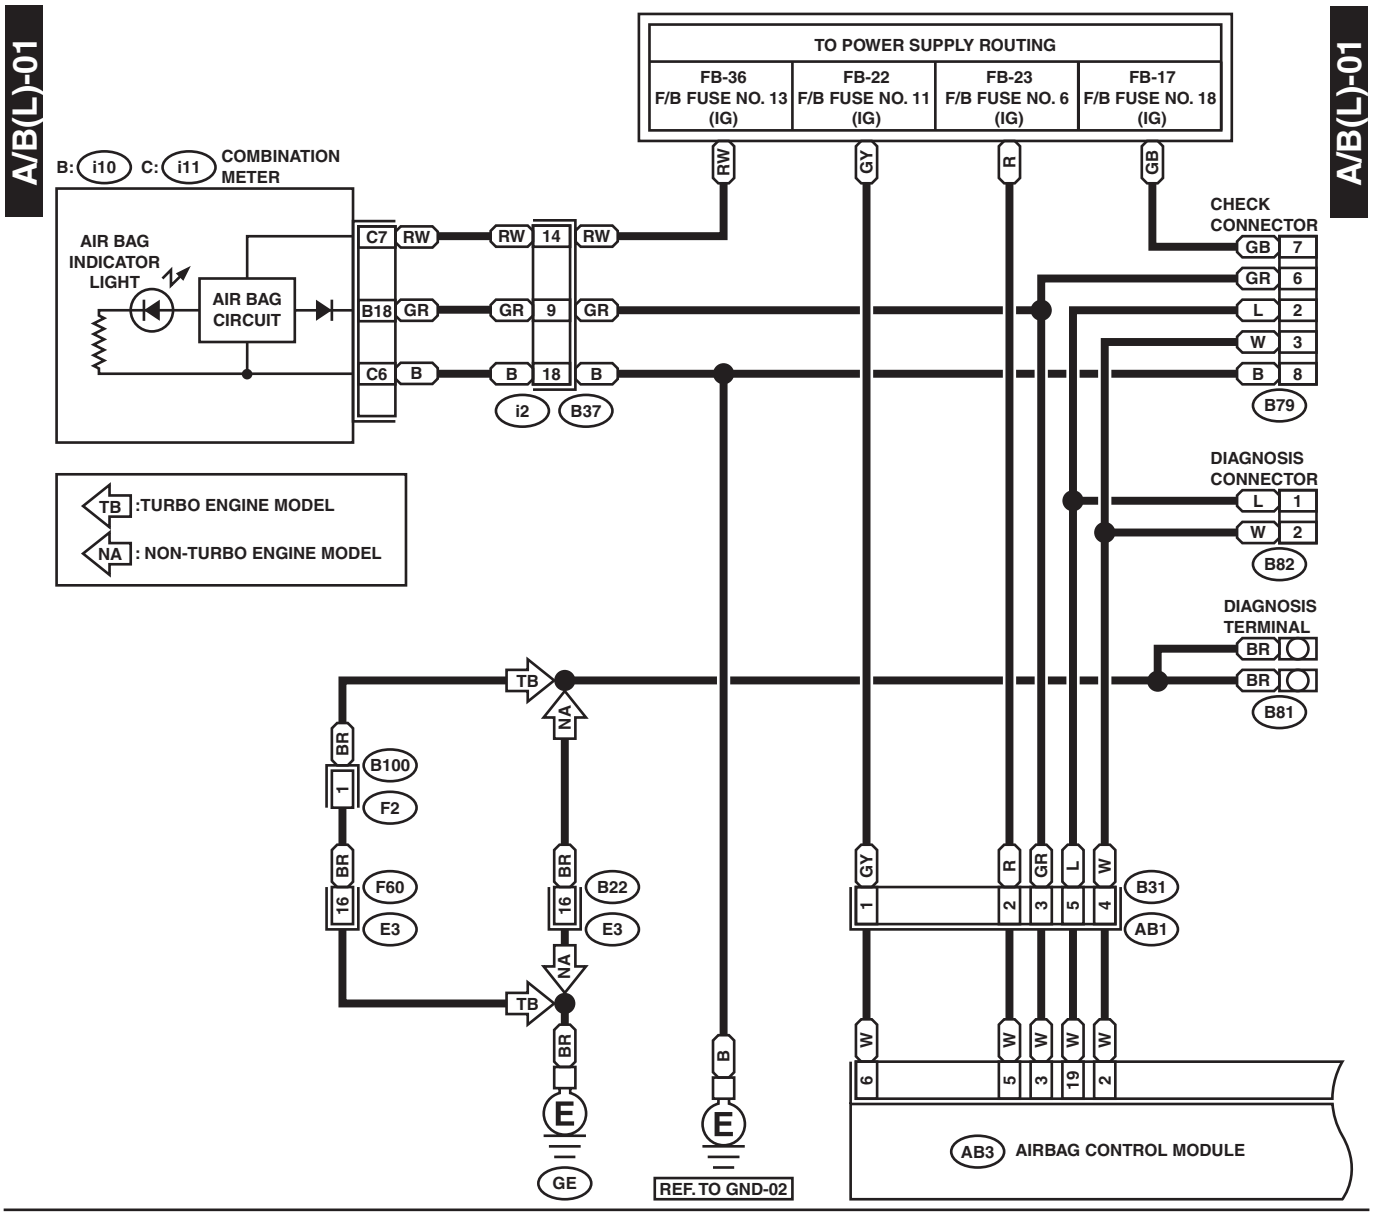

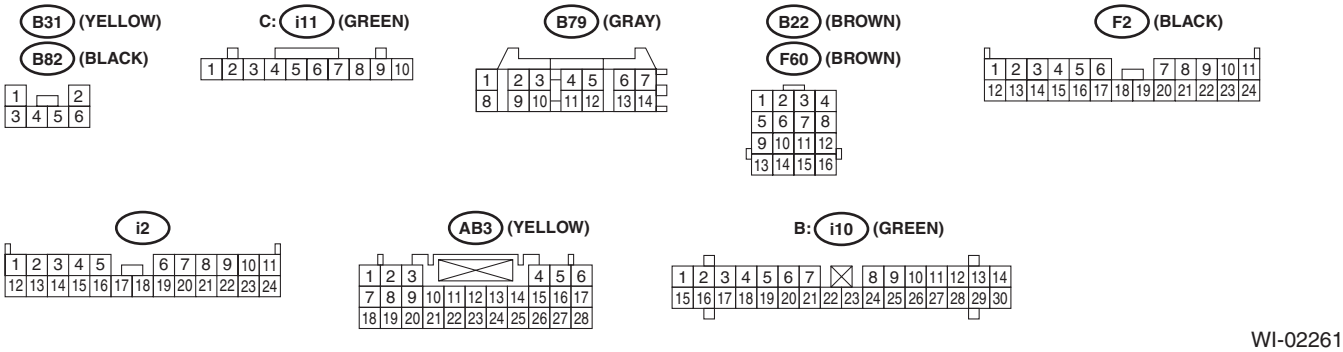

WI-02261

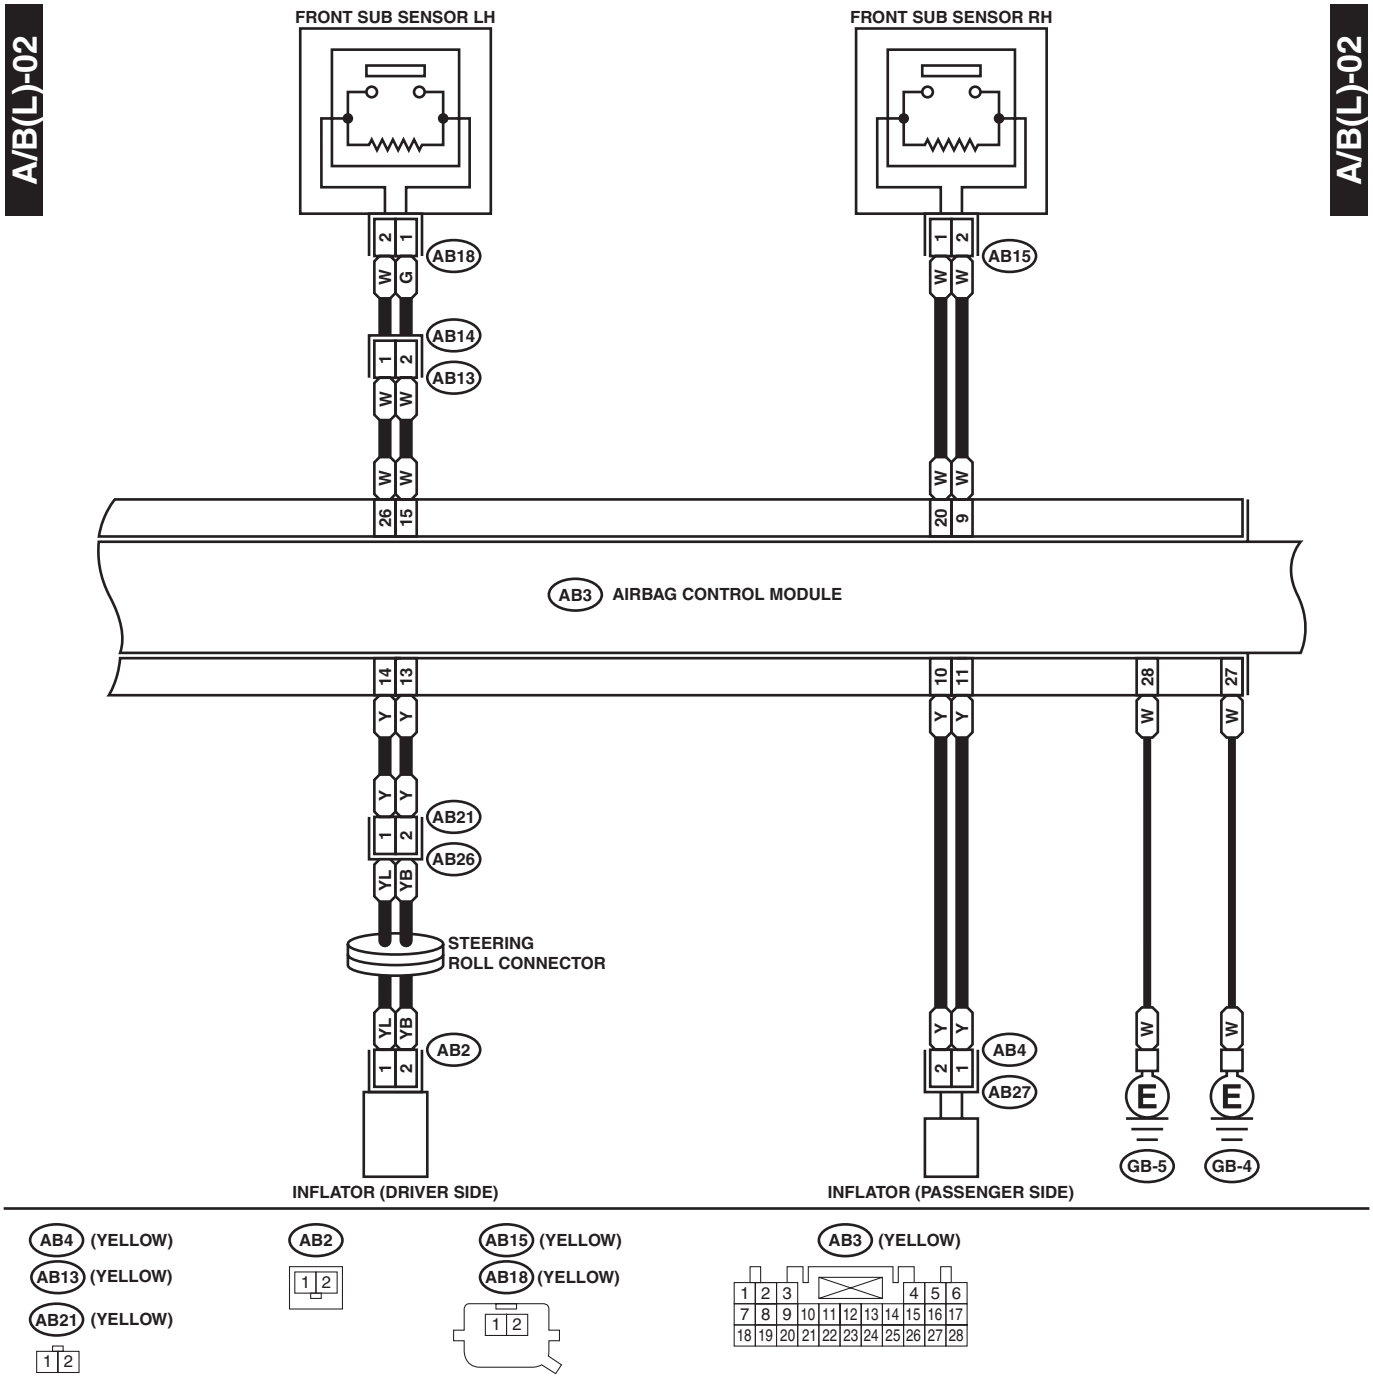
A/B(L)-02
A/B(L)-02
FRONT SUB SENSOR LH
FRONT SUB SENSOR RH
AB18
AB15
AB14
AB13
AB3 AIRBAG CONTROL MODULE
AB21
AB26
STEERING ROLL CONNECTOR
AB2
AB4
AB27
GB-5
GB-4
INFLATOR (DRIVER SIDE)
INFLATOR (PASSENGER SIDE)
AB4 (YELLOW)
AB13 (YELLOW)
AB21 (YELLOW)
AB2
AB15 (YELLOW)
AB18 (YELLOW)
AB3 (YELLOW)

WI-02262

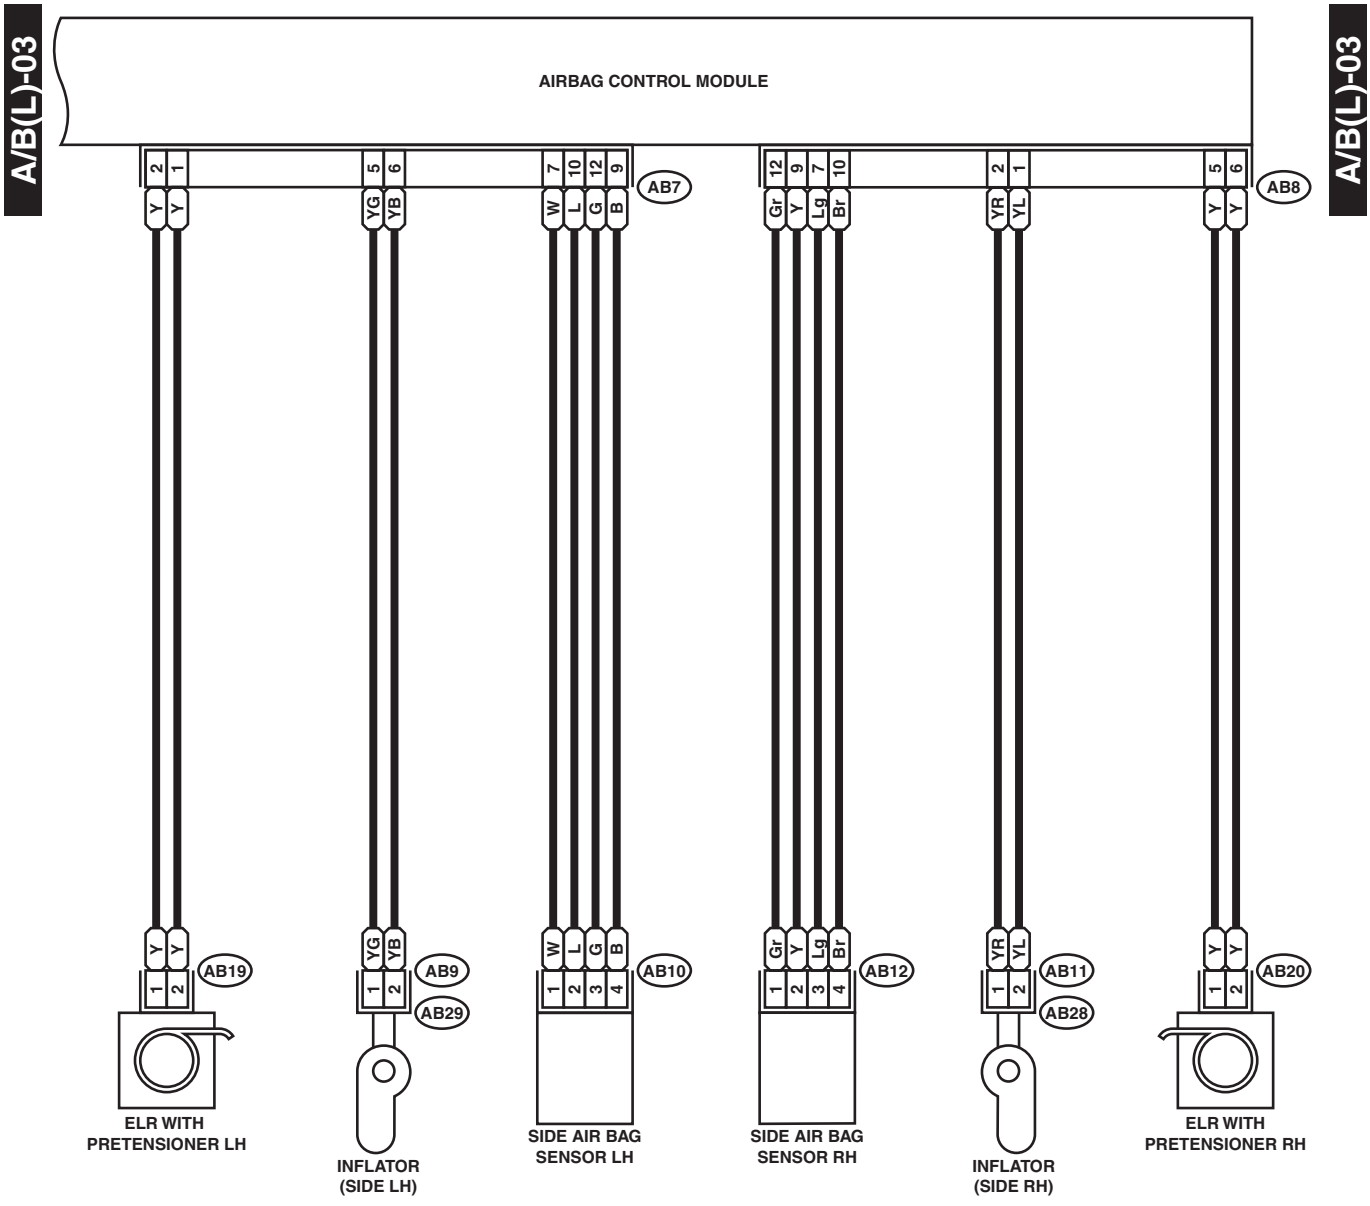

AB9 (YELLOW)
AB11 (YELLOW)
AB19 (YELLOW)
AB20 (YELLOW)

AB10 (YELLOW)
AB12 (YELLOW)



AB7 (YELLOW)



AB8 (YELLOW)



WI-02263

2. RHD MODEL

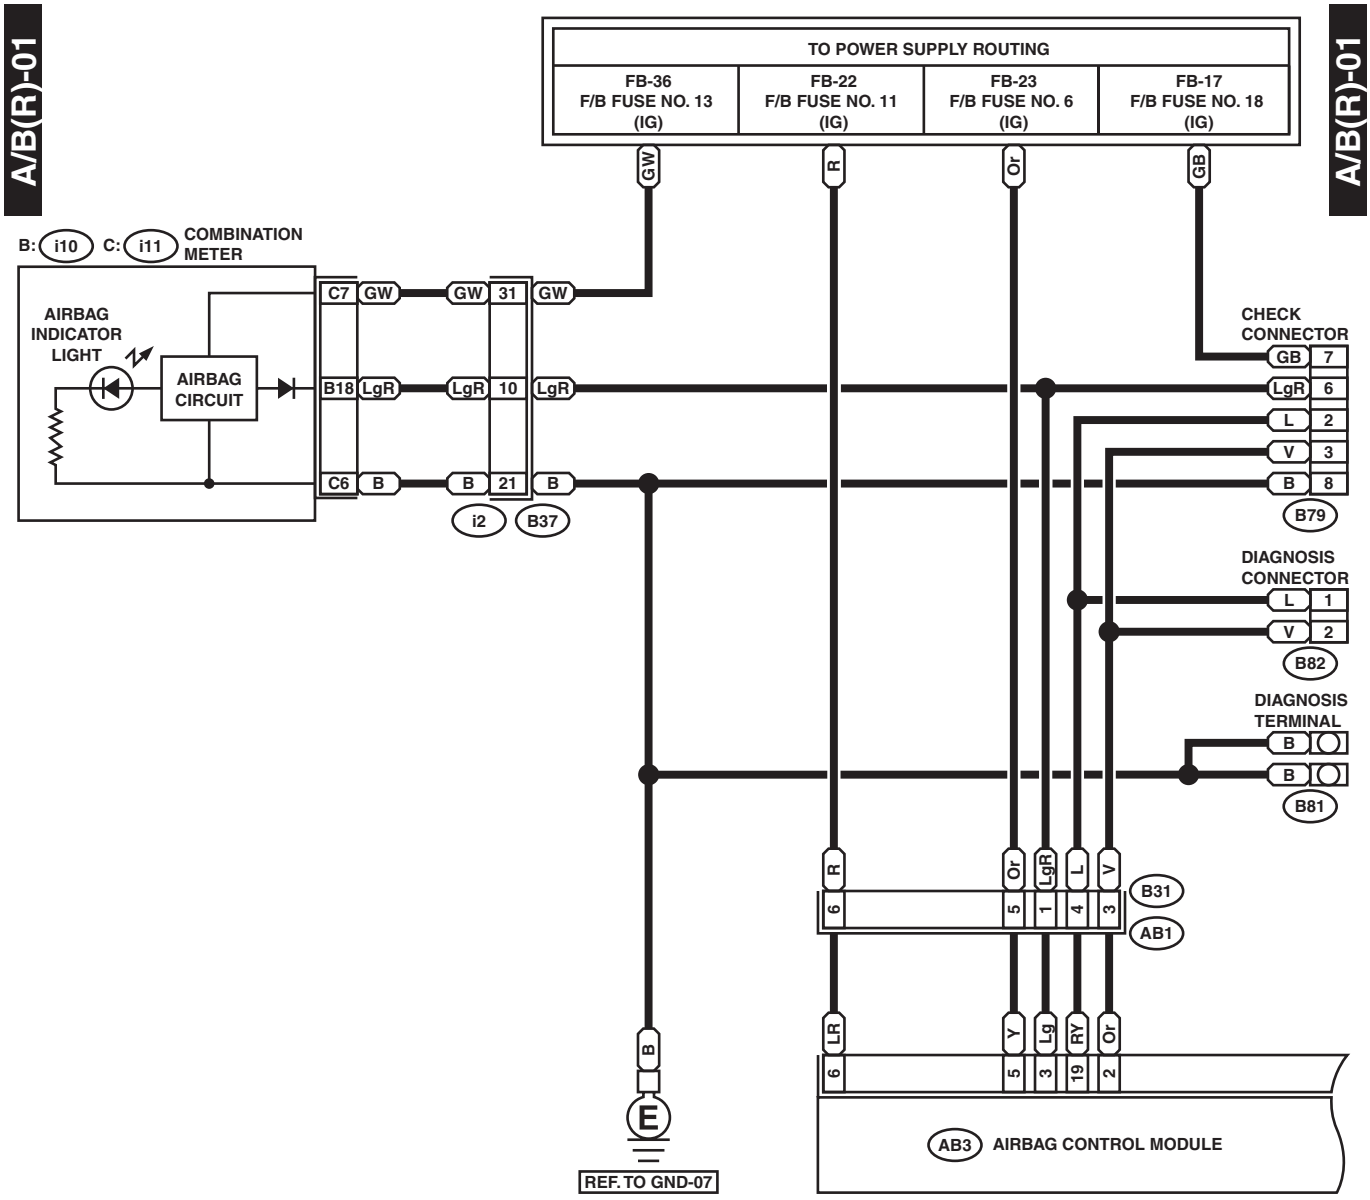

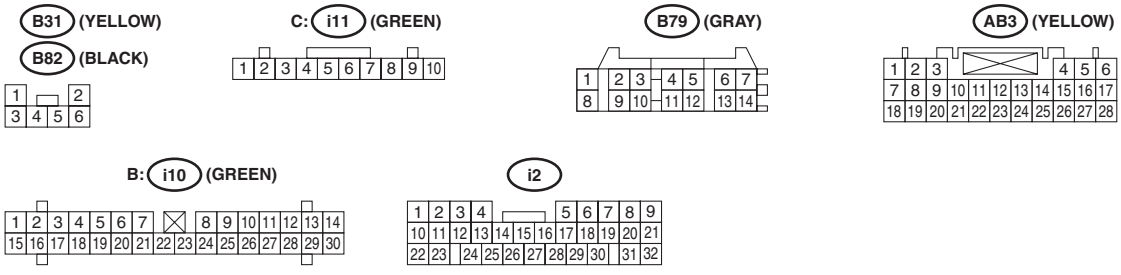

WI-02264

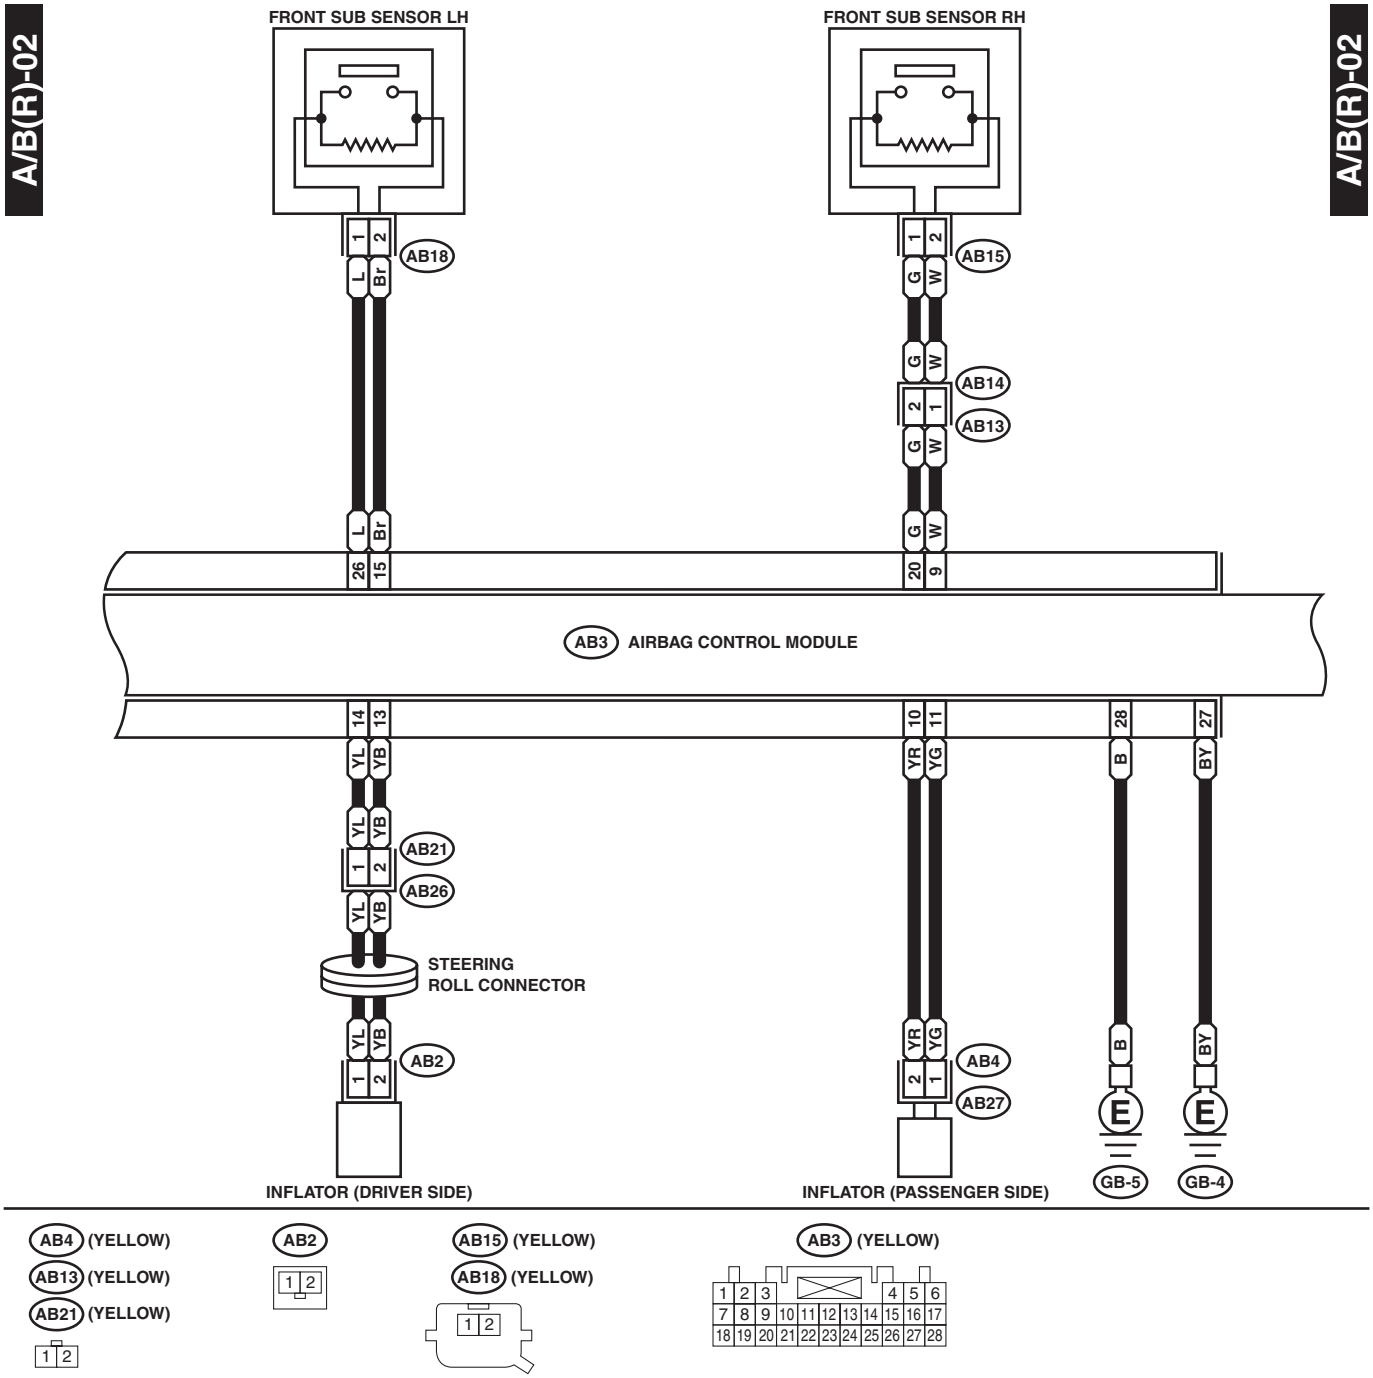
A/B(R)-02
A/B(R)-02
FRONT SUB SENSOR LH
FRONT SUB SENSOR RH
AB18
AB15
AB14
AB13
AB3 AIRBAG CONTROL MODULE
AB21
AB26
STEERING ROLL CONNECTOR
AB2
AB4
AB27
INFLATOR (DRIVER SIDE)
INFLATOR (PASSENGER SIDE)
GB-5
GB-4
AB4 (YELLOW)
AB13 (YELLOW)
AB21 (YELLOW)
AB2
AB15 (YELLOW)
AB18 (YELLOW)
AB3 (YELLOW)

WI-02265

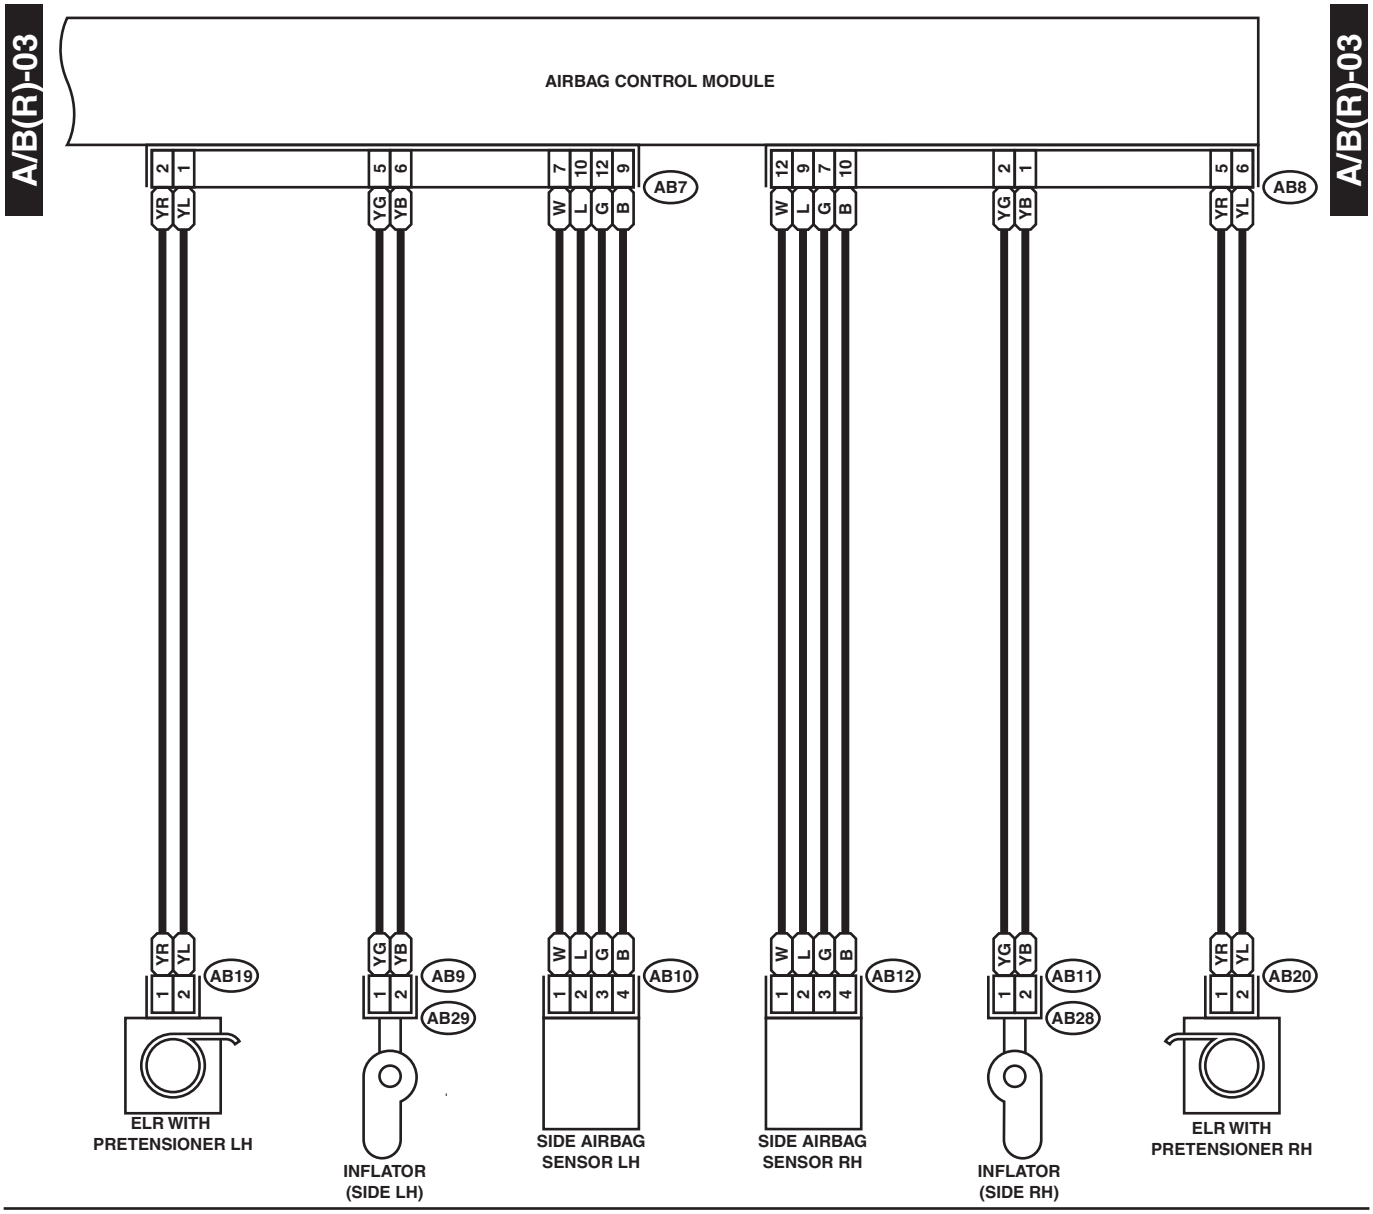
A/B(R)-03
A/B(R)-03
AIRBAG CONTROL MODULE
AB7
AB8
YR
YL
YG
YB
W
L
G
B
AB19
AB9
AB29
AB10
AB12
AB11
AB28
AB20
ELR WITH PRETENSIONER LH
INFLATOR (SIDE LH)
SIDE AIRBAG SENSOR LH
SIDE AIRBAG SENSOR RH
INFLATOR (SIDE RH)
ELR WITH PRETENSIONER RH

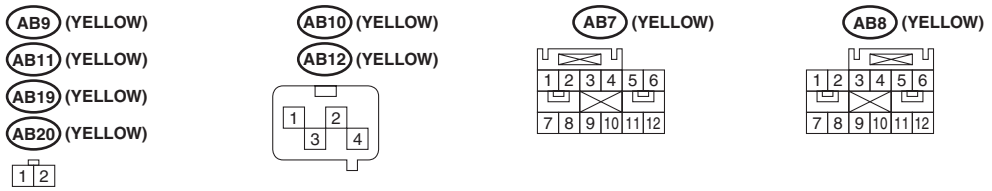
AB9 (YELLOW)
AB11 (YELLOW)
AB19 (YELLOW)
AB20 (YELLOW)
AB10 (YELLOW)
AB12 (YELLOW)
AB7 (YELLOW)
AB8 (YELLOW)

WI-02266

6. Air Conditioning System

A: SCHEMATIC

1. AUTO A/C LHD MODEL

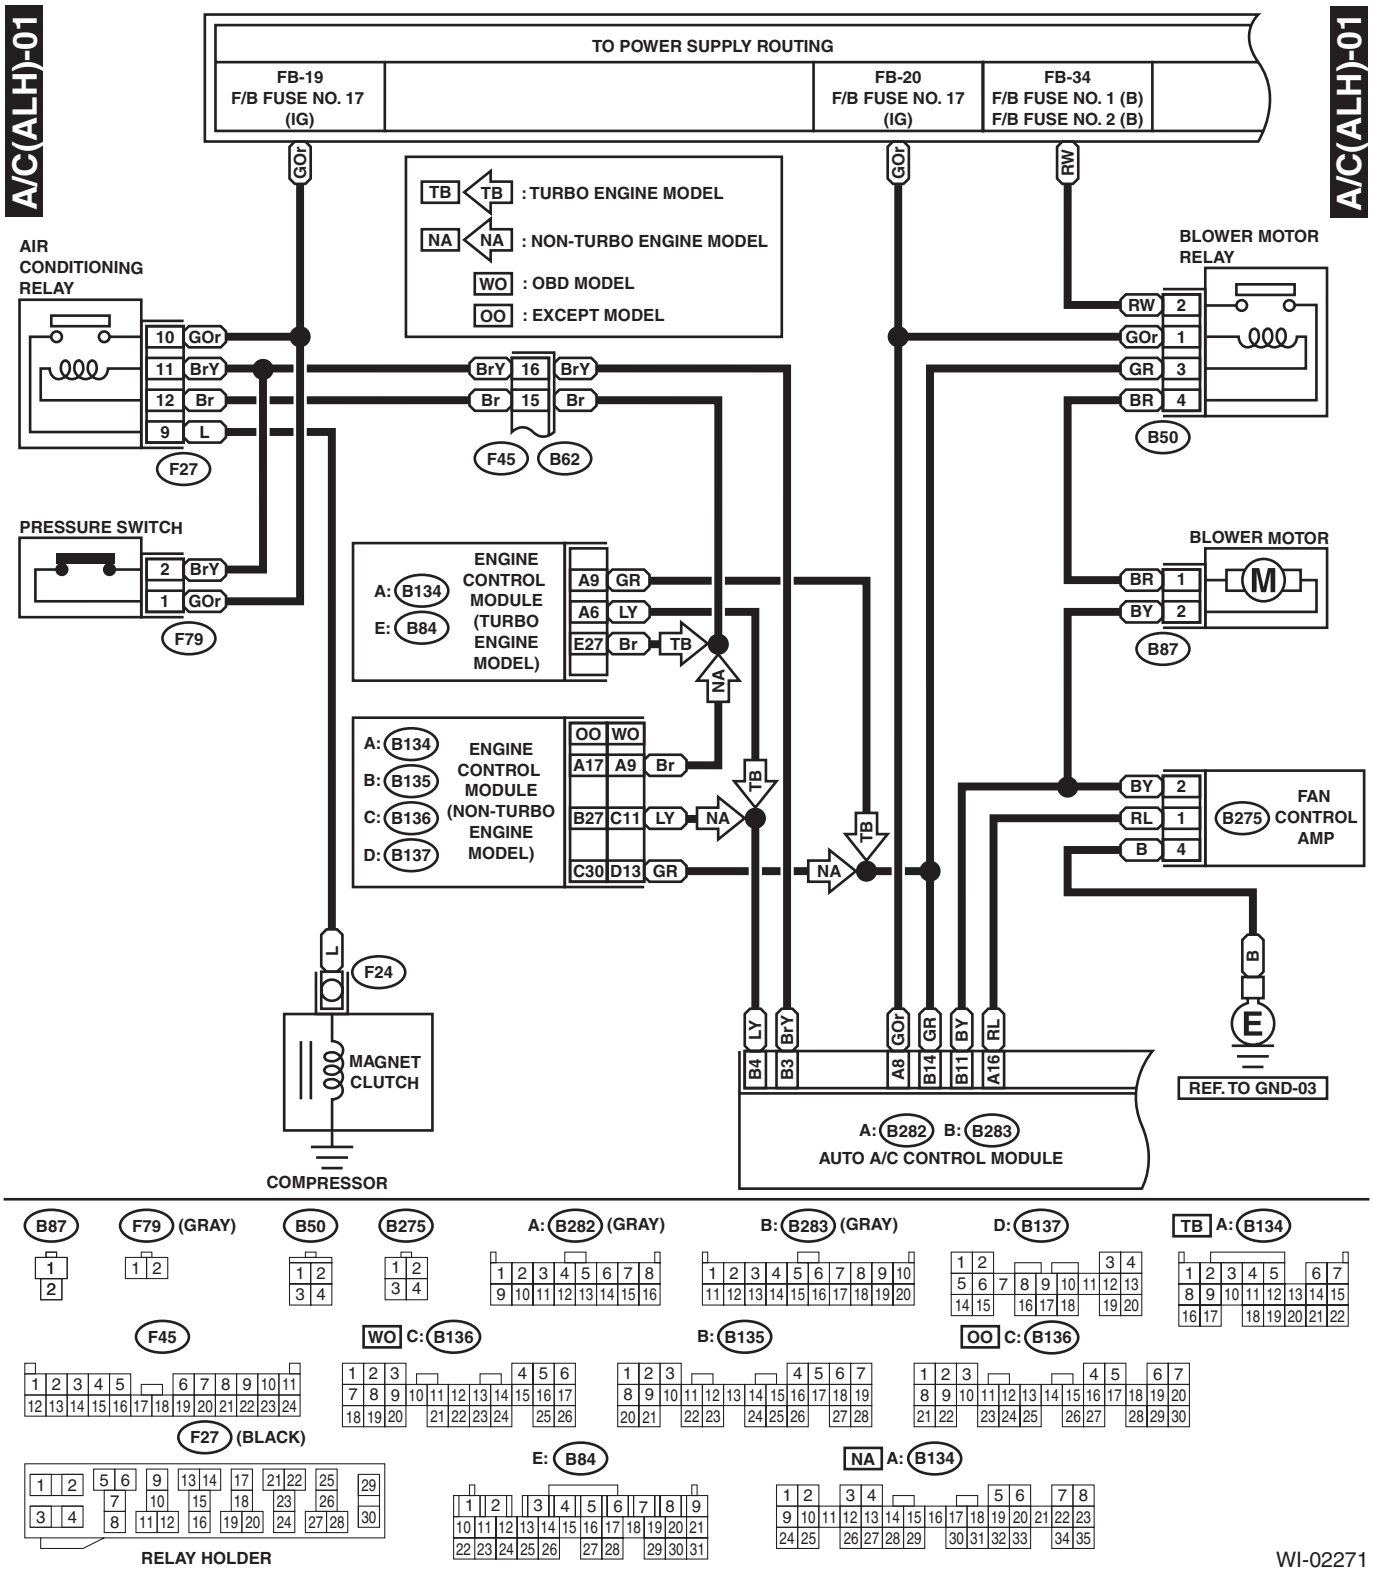

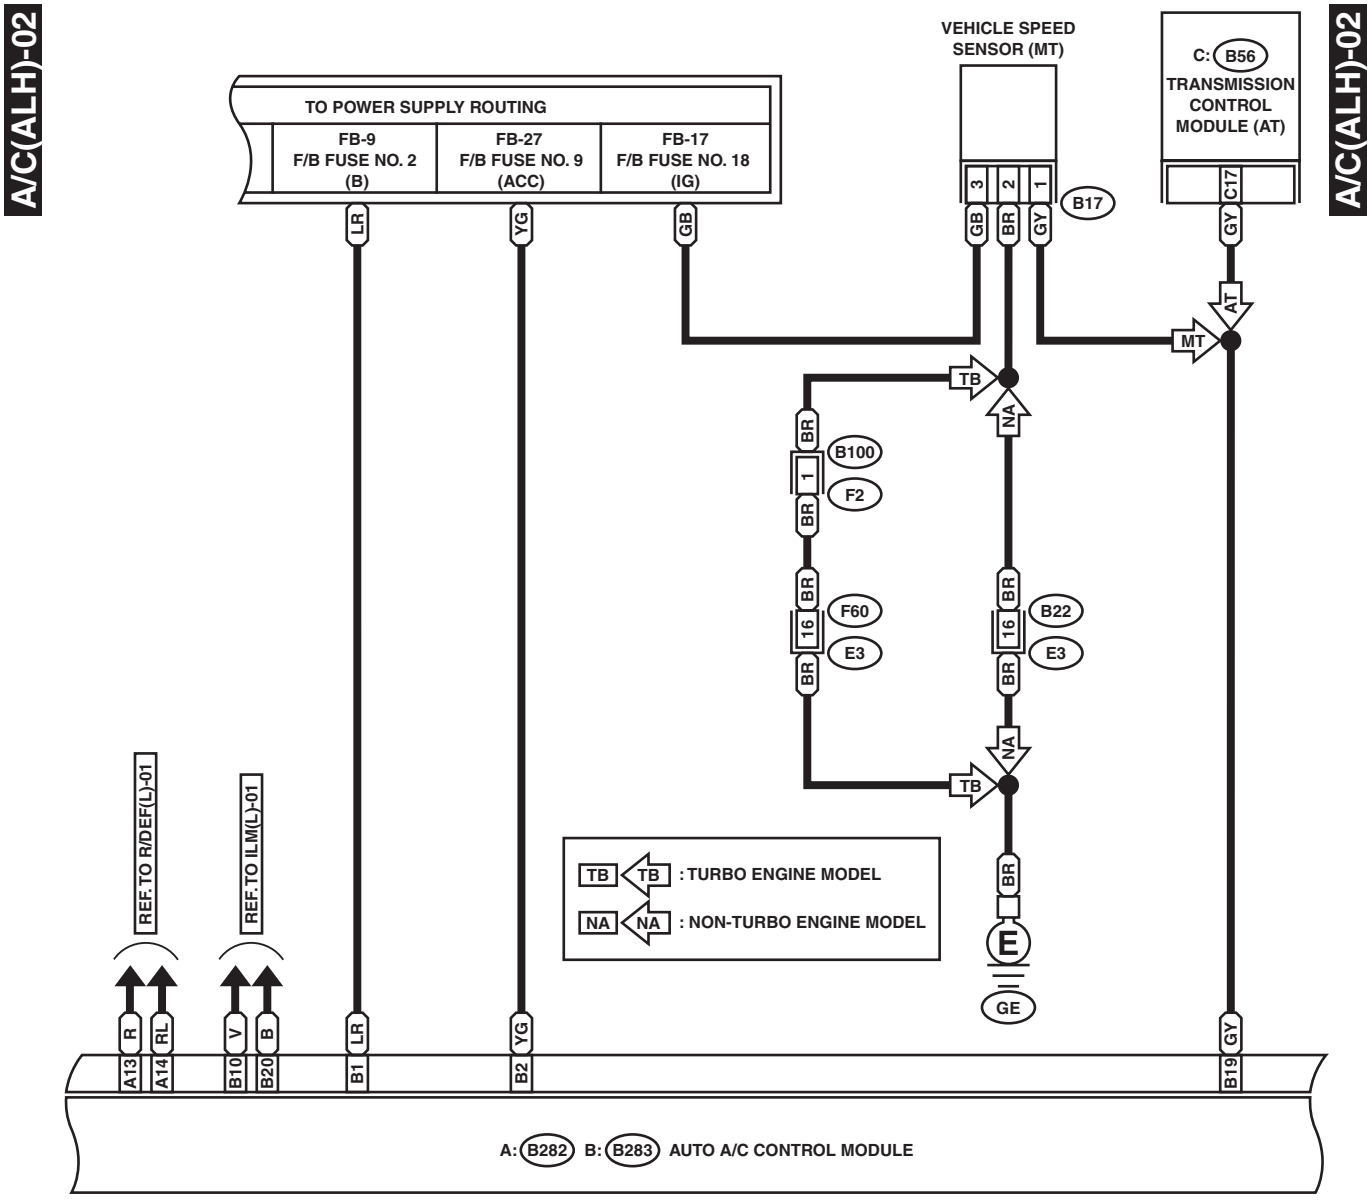
A/C(ALH)-02
A/C(ALH)-02
TO POWER SUPPLY ROUTING
FB-9
F/B FUSE NO. 2
(B)
FB-27
F/B FUSE NO. 9
(ACC)
FB-17
F/B FUSE NO. 18
(IG)
VEHICLE SPEED
SENSOR (MT)
C: B56
TRANSMISSION
CONTROL
MODULE (AT)
B17
C17
LR
YG
GB
GB
BR
GY
GY
AT
MT
TB
NA
BR
B100
1
F2
BR
BR
F60
16
E3
BR
BR
B22
16
E3
BR
NA
TB
BR
E
GE
TB TB : TURBO ENGINE MODEL
NA NA : NON-TURBO ENGINE MODEL
REF. TO R/DEF(L)-01
REF. TO ILM(L)-01
R
RL
V
B
LR
YG
GY
A13
A14
B10
B20
B1
B2
B19
A: B282 B: B283 AUTO A/C CONTROL MODULE

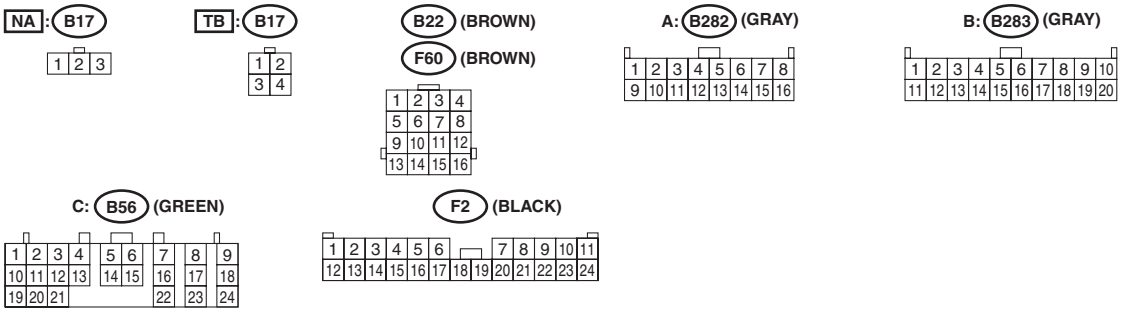
NA : B17
TB : B17
B22 (BROWN)
F60 (BROWN)
A: B282 (GRAY)
B: B283 (GRAY)
C: B56 (GREEN)
F2 (BLACK)

WI-02272

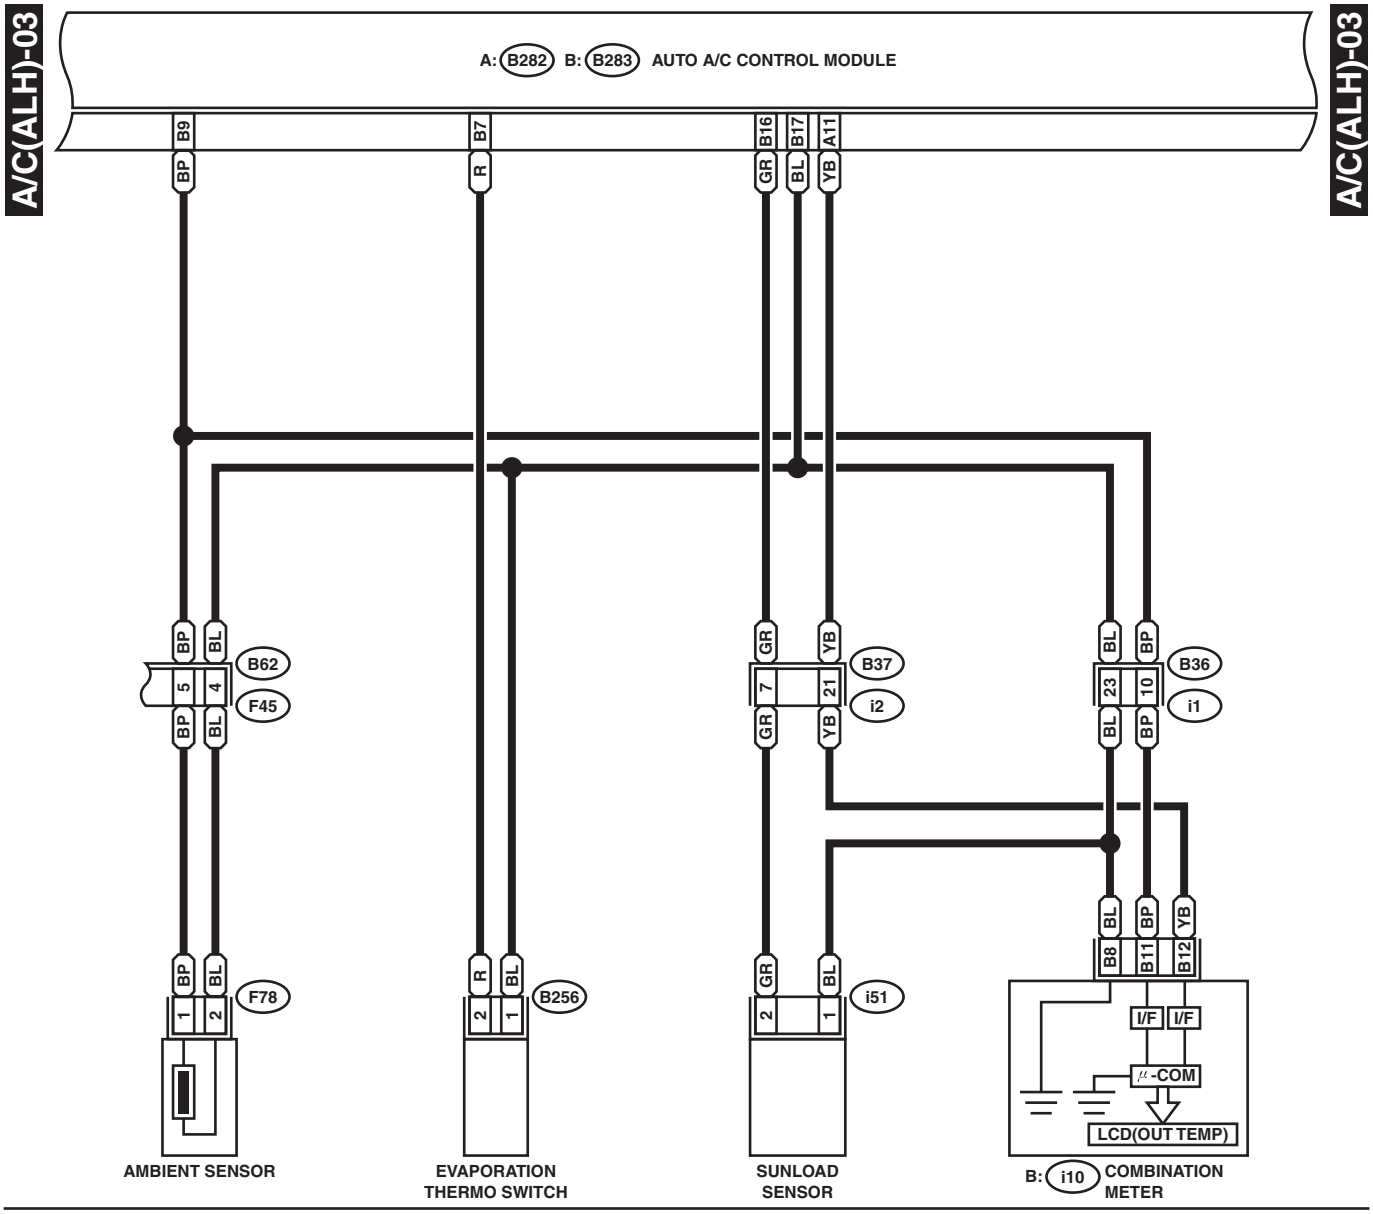

B256
F78 (BLACK)
i51

A: B282 (GRAY)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

B: B283 (GRAY)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

F45
i2

1	2	3	4	5		6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22	23	24

i1 (BROWN)

1	2	3	4	5	6		7	8	9	10	11	
12	13	14	15	16	17	18	19	20	21	22	23	24

B: i10 (GREEN)

1	2	3	4	5	6	7		8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

WI-02273

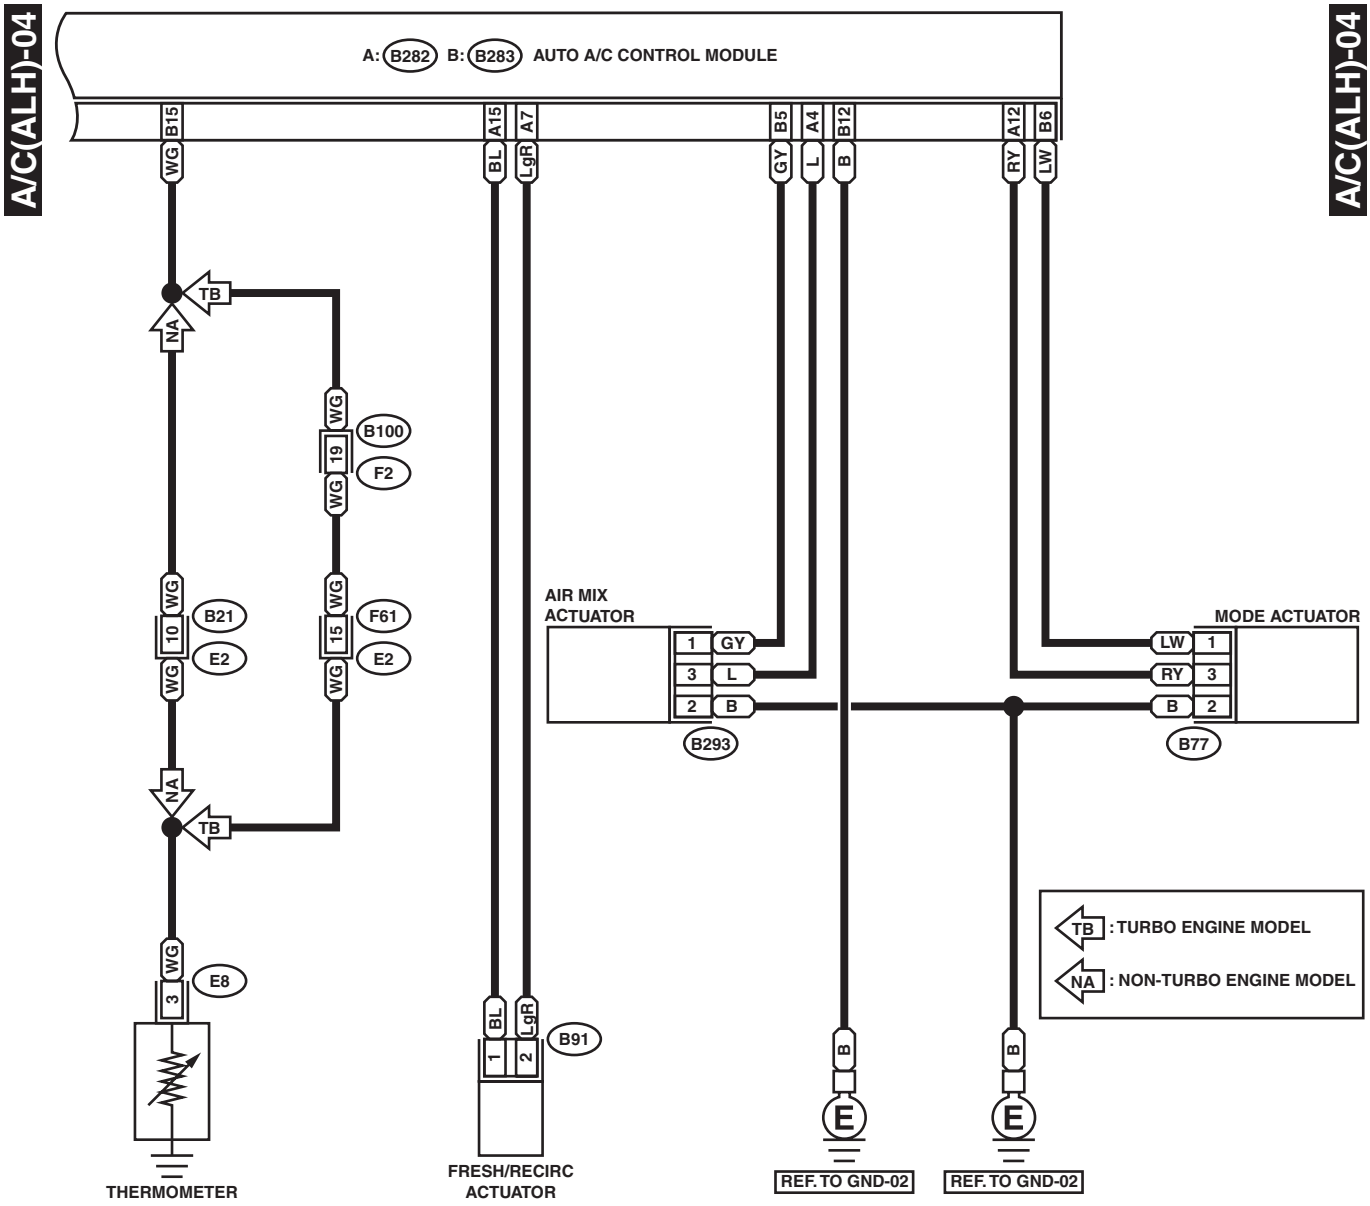
A/C(ALH)-04
A/C(ALH)-04
A: B282 B: B283 AUTO A/C CONTROL MODULE
B15
A15
A7
B5
A4
B12
A12
B6
WG
BL
LgR
GY
L
B
RY
LW
TB
NA
B100
19
F2
B21
10
E2
F61
15
E2
AIR MIX ACTUATOR
MODE ACTUATOR
1 GY
3 L
2 B
B293
LW 1
RY 3
B 2
B77
E8
3
THERMOMETER
B91
1 BL
2 LgR
FRESH/RECIRC ACTUATOR
E
REF. TO GND-02
REF. TO GND-02
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL

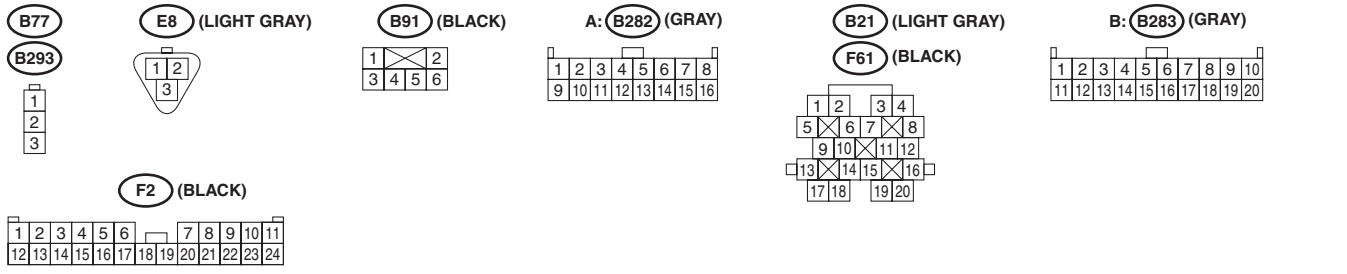
B77
B293
E8 (LIGHT GRAY)
B91 (BLACK)
A: B282 (GRAY)
B21 (LIGHT GRAY)
F61 (BLACK)
B: B283 (GRAY)
F2 (BLACK)

WI-02274

2. AUTO A/C RHD MODEL

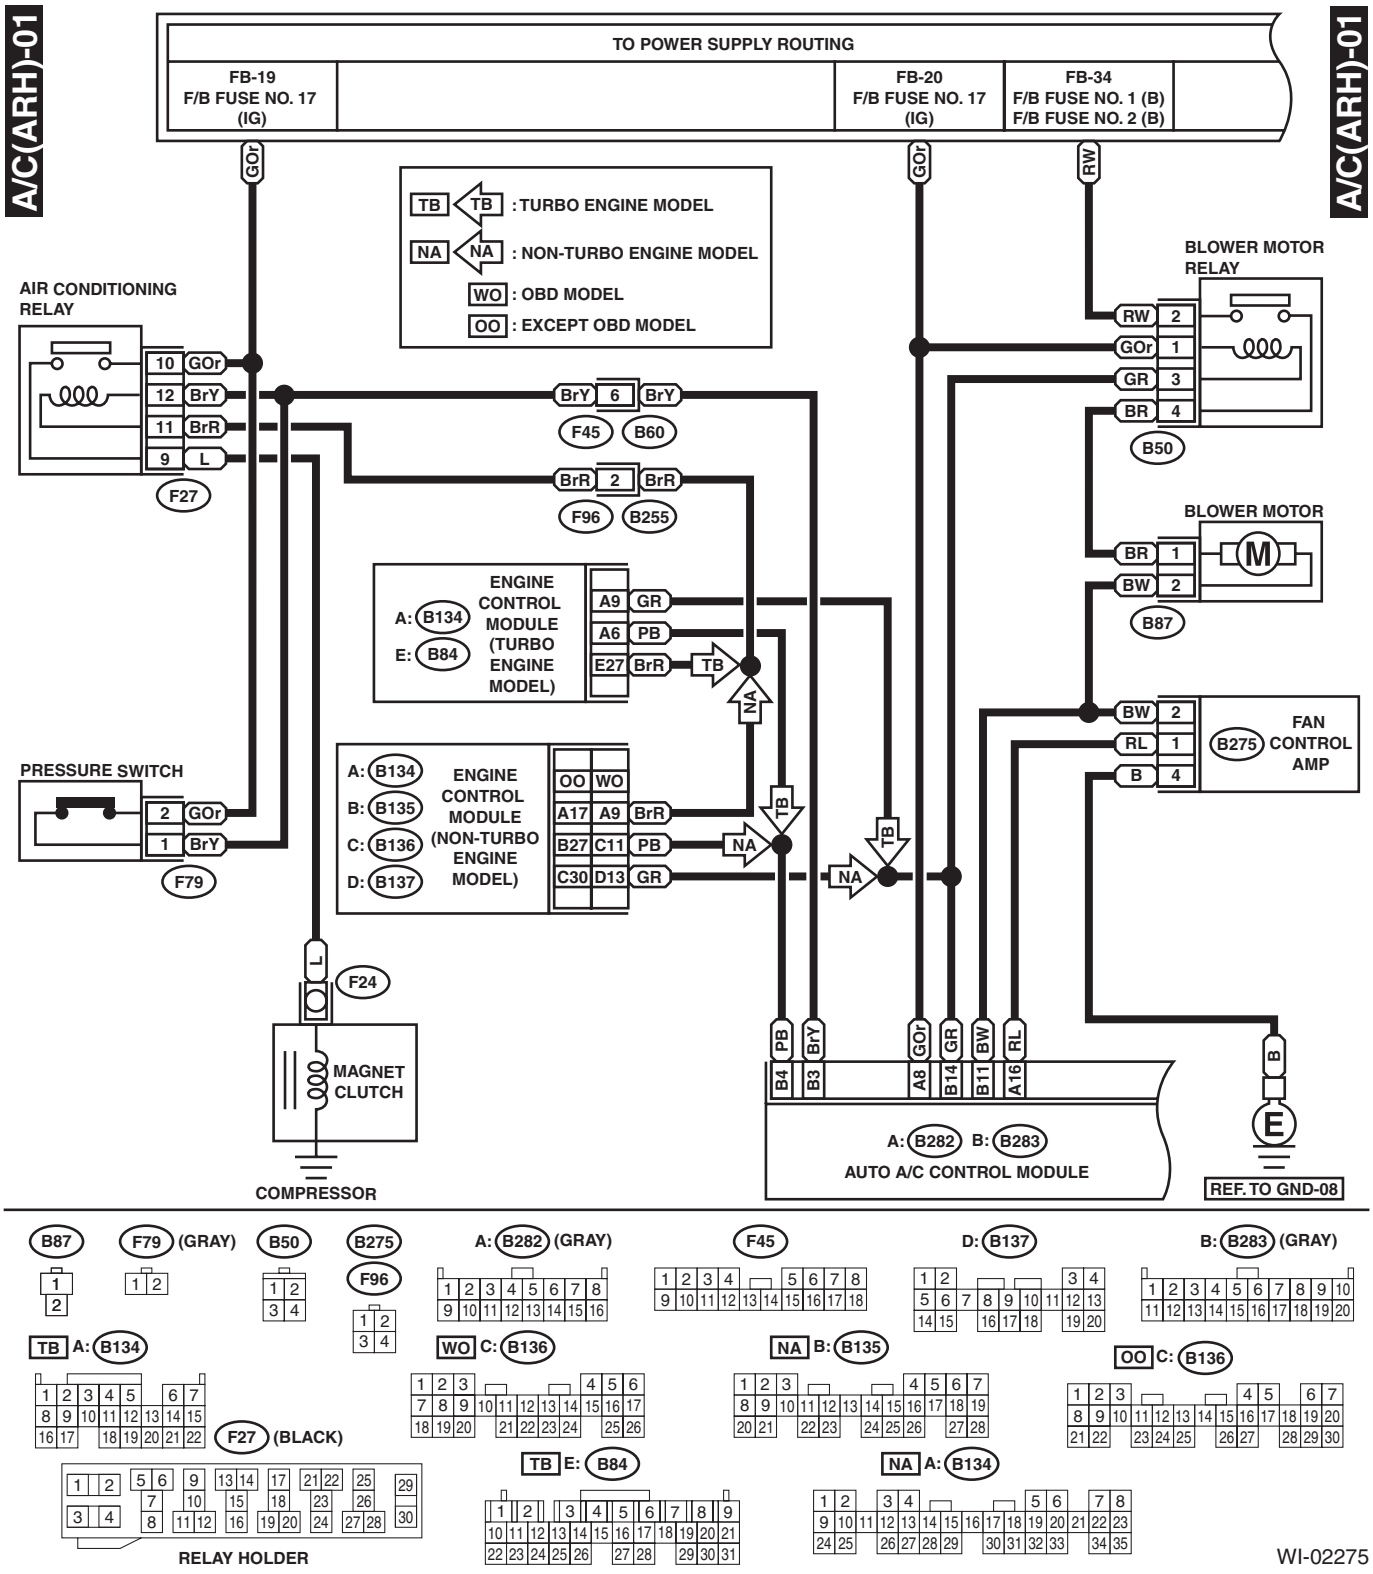

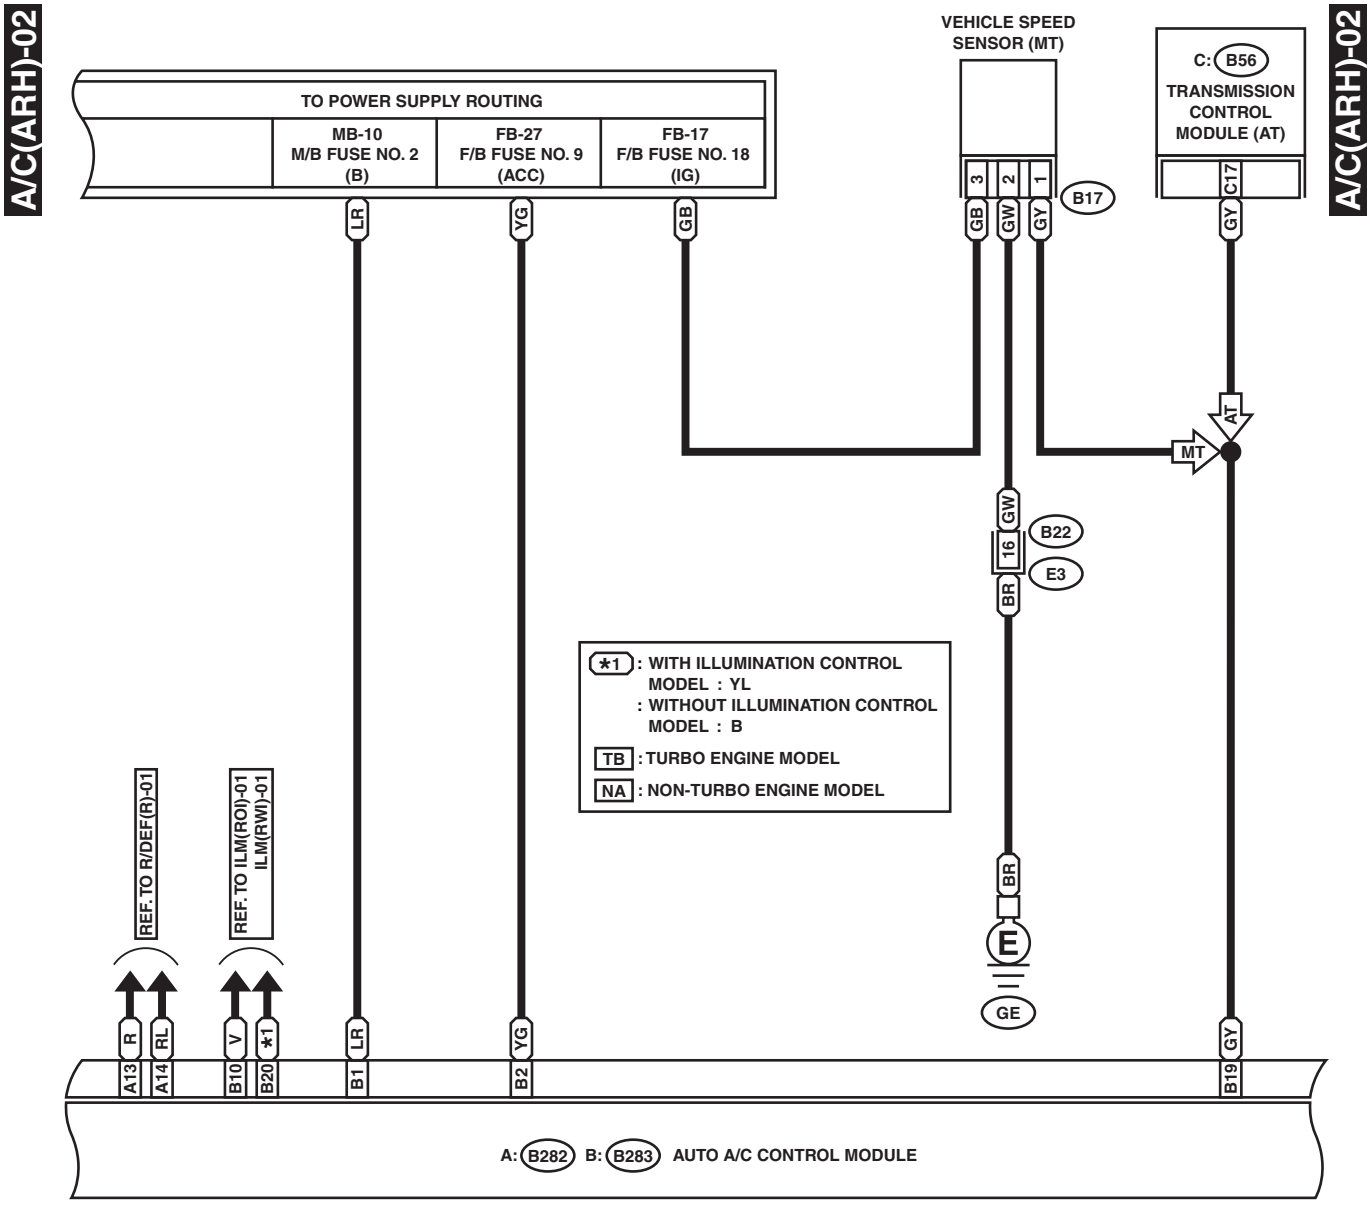

NA : B17 (BLACK)

TB : B17 (BLACK)

B22 (BROWN)



A: B282 (GRAY)



B: B283 (GRAY)



C: B56 (GREEN)



WI-02276

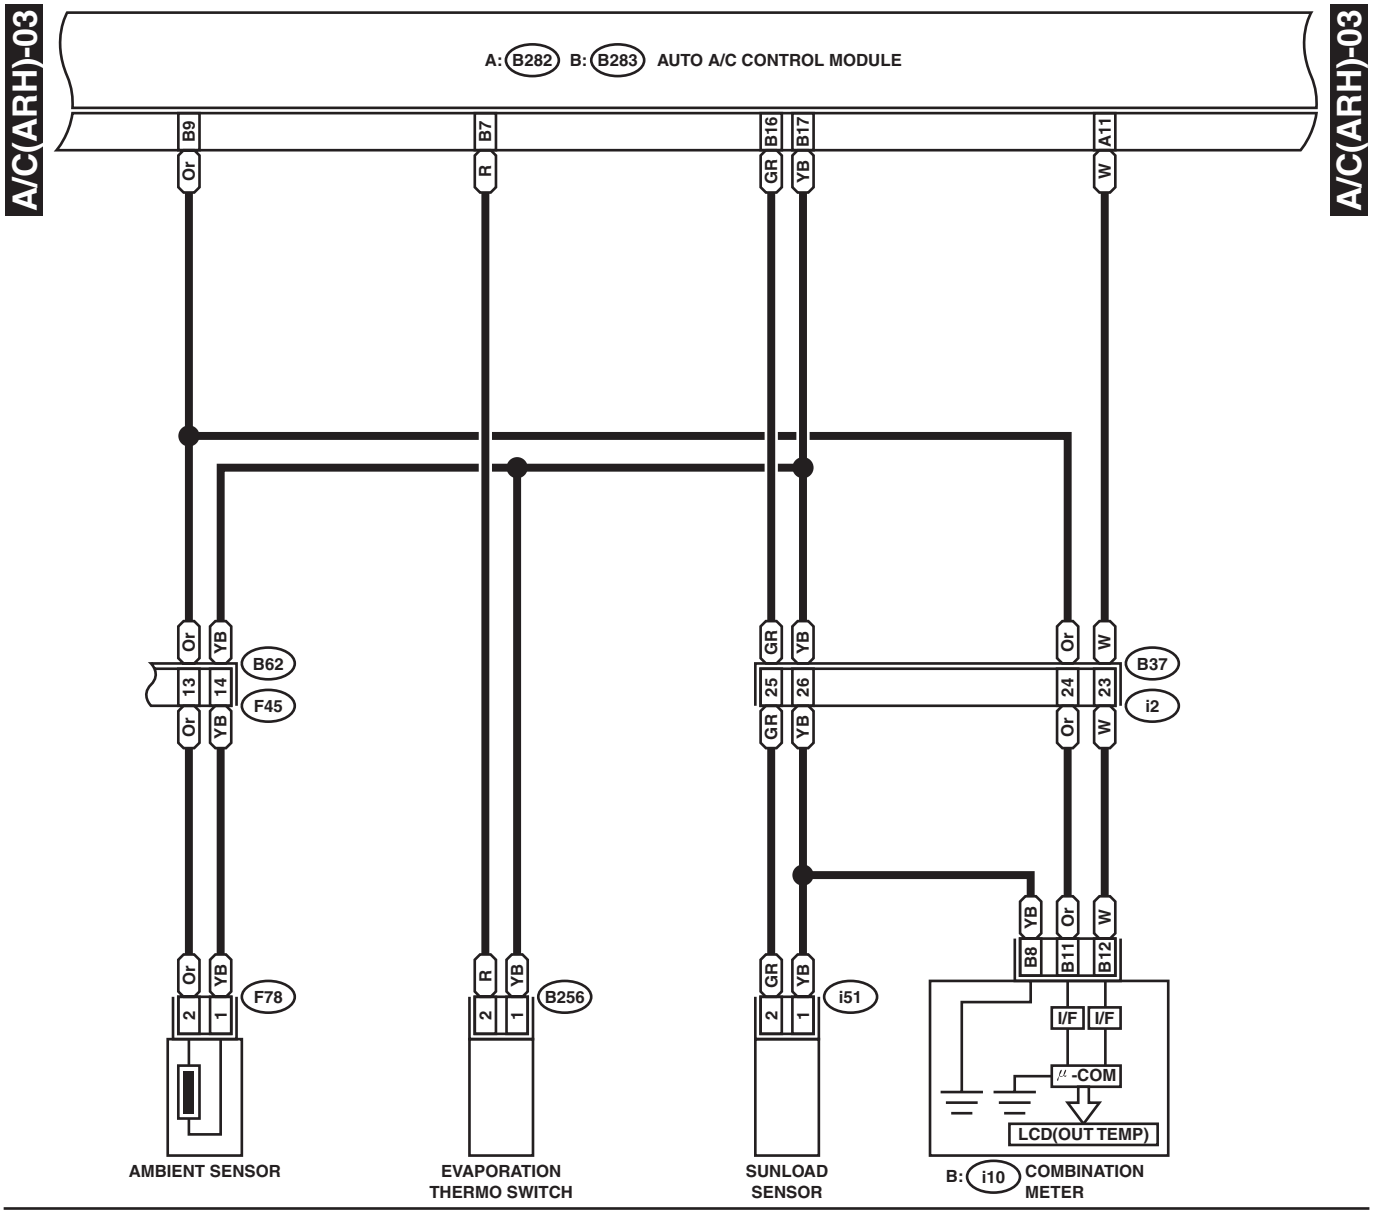
A/C(ARH)-03
A/C(ARH)-03
A: B282 B: B283 AUTO A/C CONTROL MODULE
B9
B7
B16
B17
A11
Or
R
GR
YB
W
B62
F45
B37
i2
13
14
25
26
24
23
F78
B256
i51
B8
B11
B12
I/F
I/F
μ-COM
LCD(OUT TEMP)
AMBIENT SENSOR
EVAPORATION THERMO SWITCH
SUNLOAD SENSOR
B: i10 COMBINATION METER
B256
F78 (BLACK)
i51
A: B282 (GRAY)
F45
B: B283 (GRAY)
B: i10 (GREEN)
i2

WI-02277

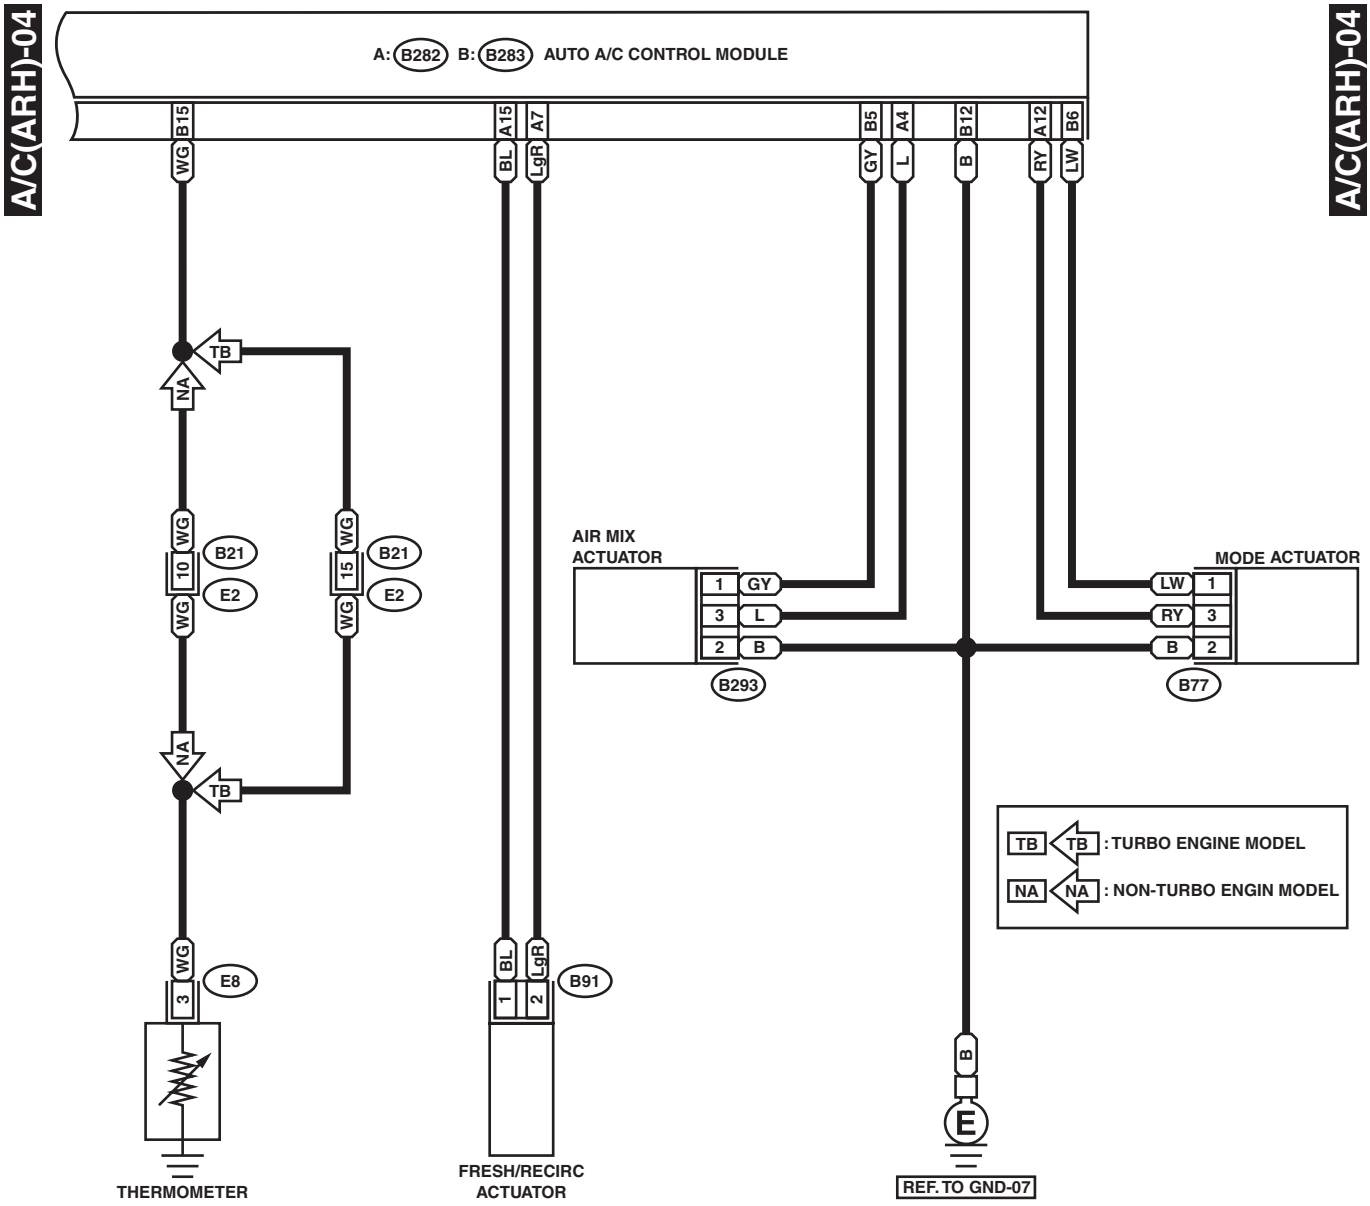
A/C(ARH)-04
A/C(ARH)-04
A: B282 B: B283 AUTO A/C CONTROL MODULE
B15
A15
A7
B5
A4
B12
A12
B6
WG
BL
LgR
GY
L
B
RY
LW
TB
NA
B21
E2
E8
B91
B293
B77
AIR MIX ACTUATOR
MODE ACTUATOR
THERMOMETER
FRESH/RECIRC ACTUATOR
REF. TO GND-07
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGIN MODEL

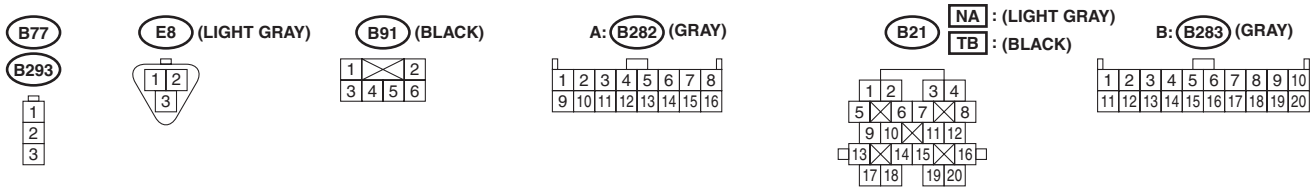
B77
B293
E8 (LIGHT GRAY)
B91 (BLACK)
A: B282 (GRAY)
B21
NA : (LIGHT GRAY)
TB : (BLACK)
B: B283 (GRAY)

WI-02278

7. Anti-lock Brake System

A: SCHEMATIC

1. LHD MODEL

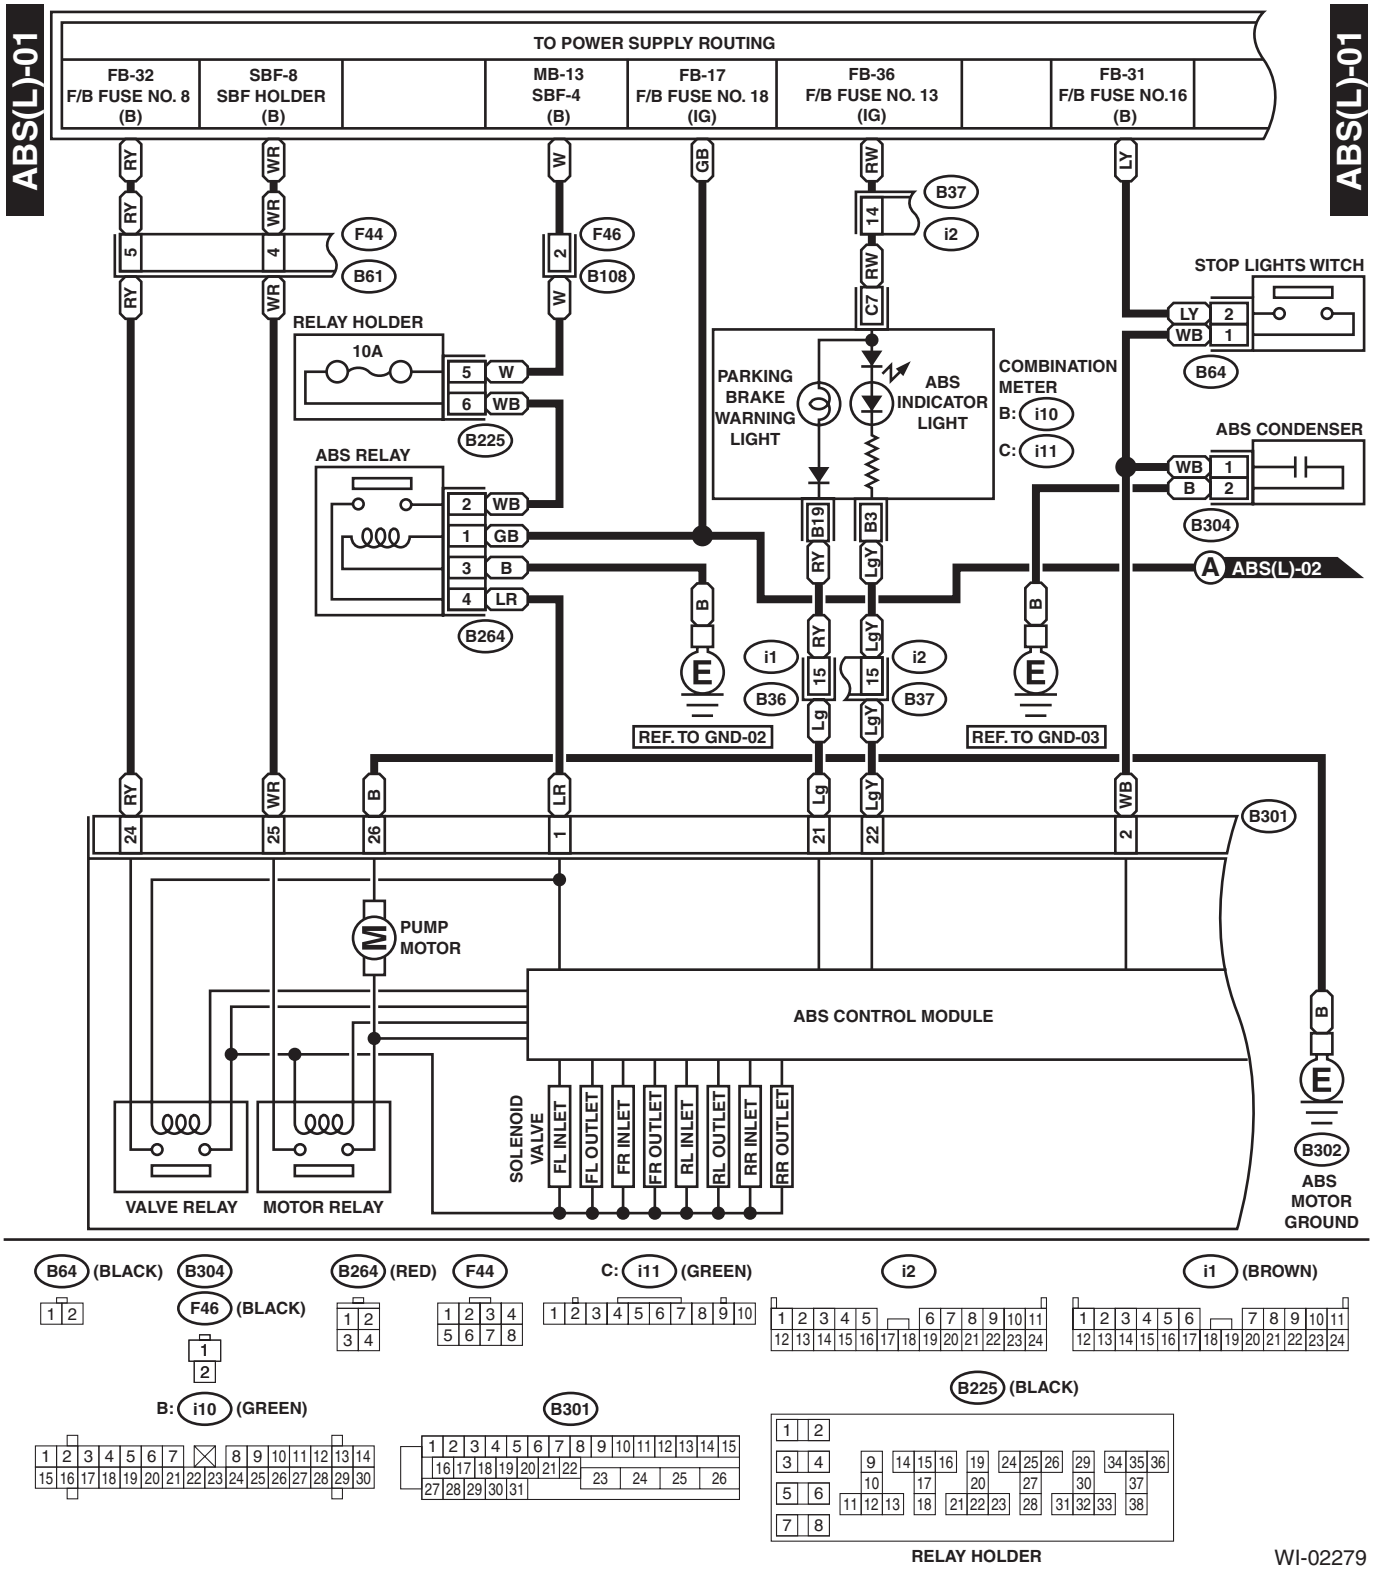

WI-02279

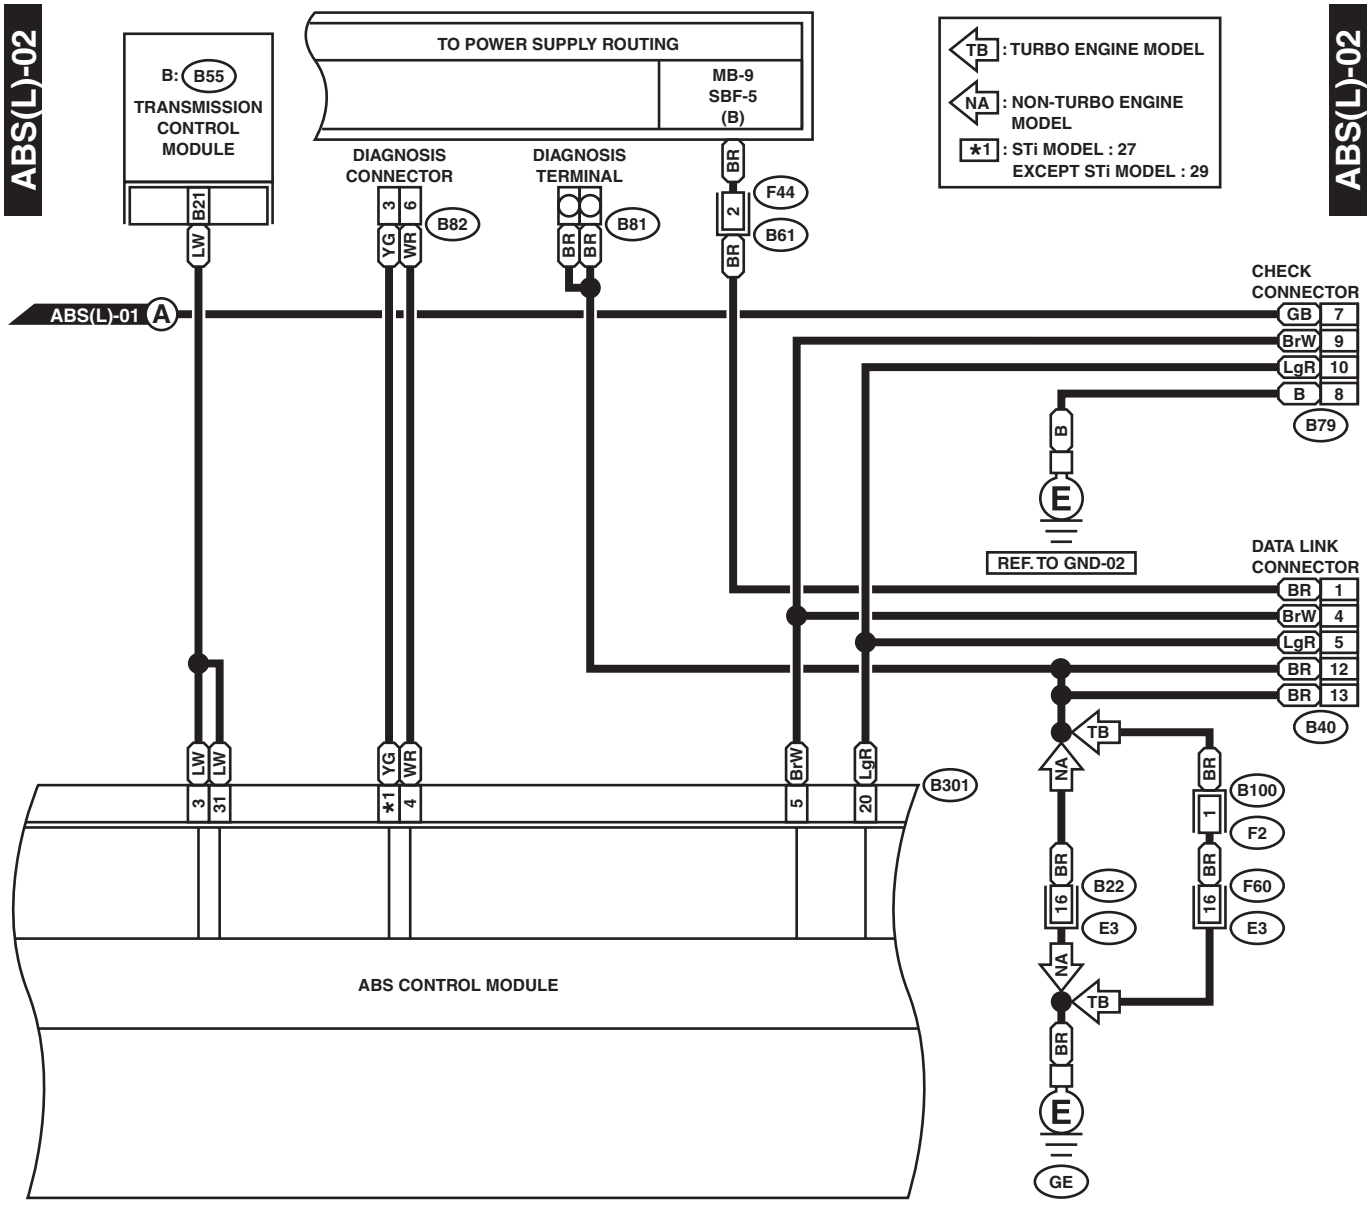
ABS(L)-02
ABS(L)-02
B: B55
TRANSMISSION CONTROL MODULE
B21
LW
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
DIAGNOSIS CONNECTOR
3
6
YG
WR
B82
DIAGNOSIS TERMINAL
BR
BR
B81
BR
2
F44
B61
BR
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL
*1 : STi MODEL : 27
EXCEPT STi MODEL : 29
ABS(L)-01 A
CHECK CONNECTOR
GB 7
BrW 9
LgR 10
B 8
B79
B
E
REF. TO GND-02
DATA LINK CONNECTOR
BR 1
BrW 4
LgR 5
BR 12
BR 13
B40
LW
LW
3
31
YG
WR
*1
4
BrW
LgR
5
20
B301
TB
NA
BR
1
B100
F2
BR
16
B22
E3
BR
16
F60
E3
NA
TB
BR
E
GE
ABS CONTROL MODULE

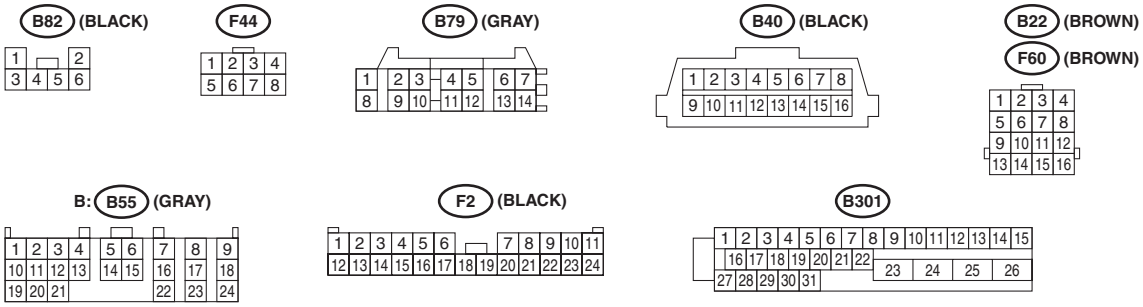
B82 (BLACK)
F44
B79 (GRAY)
B40 (BLACK)
B22 (BROWN)
F60 (BROWN)
B: B55 (GRAY)
F2 (BLACK)
B301

WI-02280

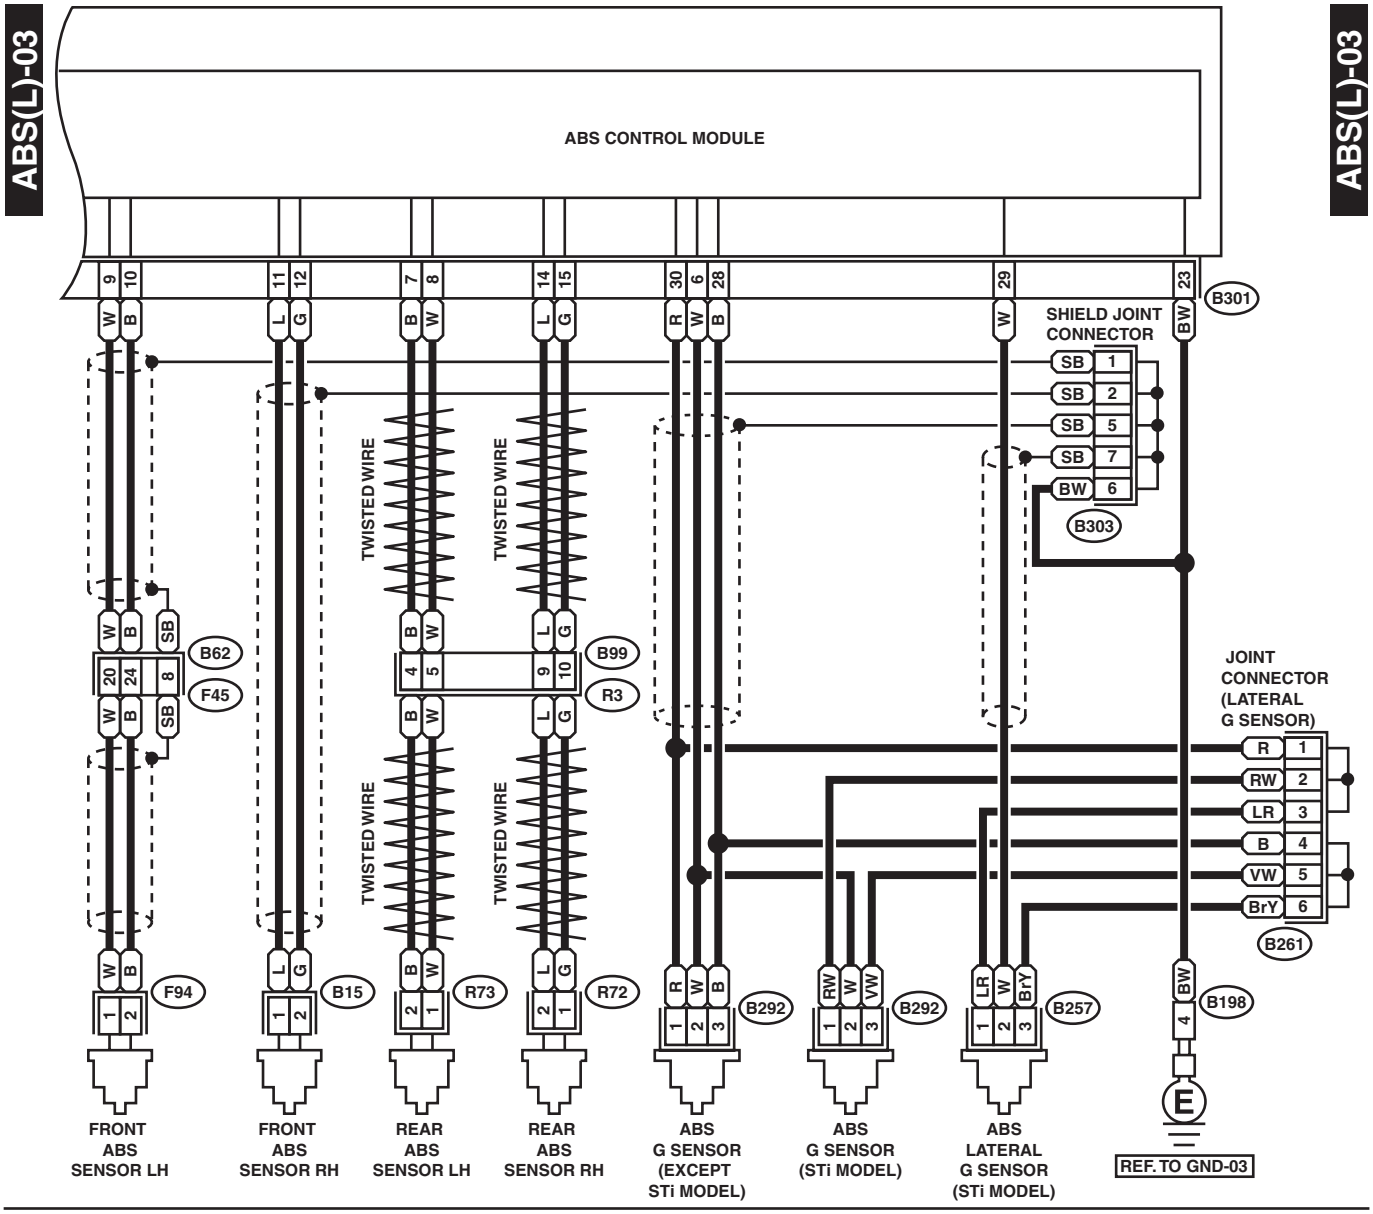

B15 (GRAY) F94 (GRAY) — 2 1

R72 R73 — 1 2

B257 B292 — 1 2 3

B198 — 1 2 3 4 5

B261 — 1 2 3 4 5 6

B303 (GRAY) — 1 2 3 4 / 5 6 7 8

B99 F45 — 1 2 3 4 5 6 7 8 9 10 11 / 12 13 14 15 16 17 18 19 20 21 22 23 24

B301 — 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 / 16 17 18 19 20 21 22 23 24 25 26 / 27 28 29 30 31

WI-02281

2. RHD MODEL

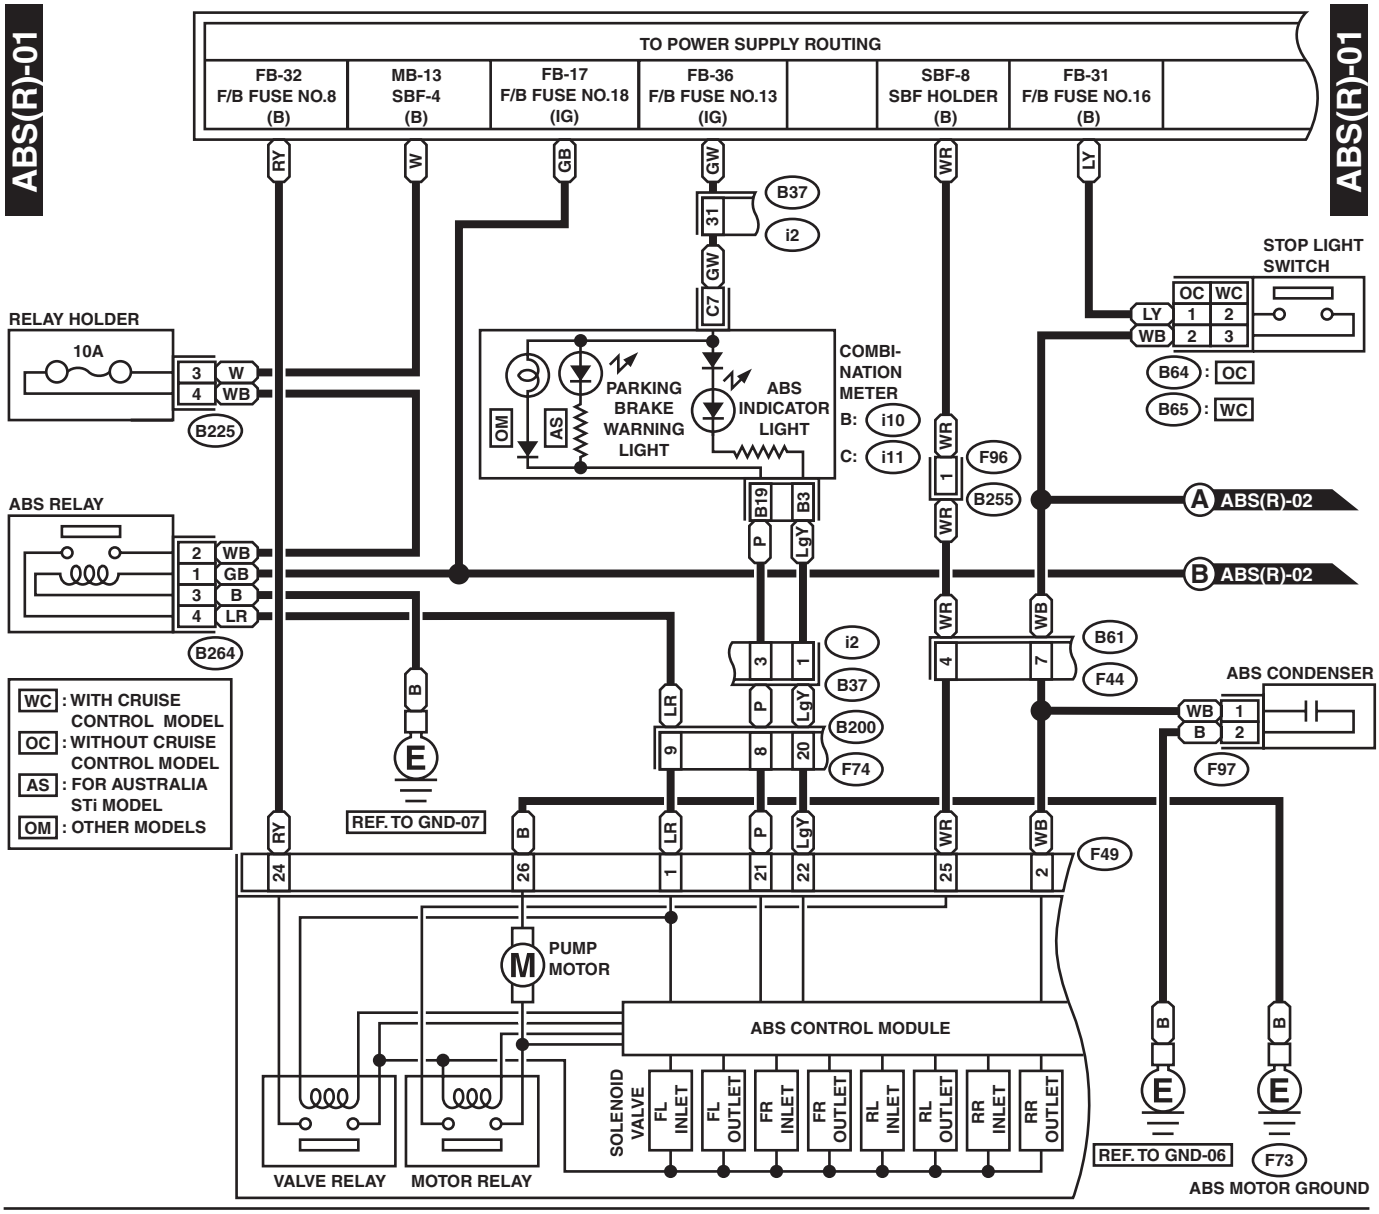
ABS(R)-01
TO POWER SUPPLY ROUTING
FB-32 F/B FUSE NO.8 (B)
MB-13 SBF-4 (B)
FB-17 F/B FUSE NO.18 (IG)
FB-36 F/B FUSE NO.13 (IG)
SBF-8 SBF HOLDER (B)
FB-31 F/B FUSE NO.16 (B)
RY
W
GB
GW
WR
LY
B37
i2
C7
STOP LIGHT SWITCH
OC WC
LY 1 2
WB 2 3
B64 : OC
B65 : WC
RELAY HOLDER
10A
3 W
4 WB
B225
COMBI-NATION METER
B: i10
C: i11
PARKING BRAKE WARNING LIGHT
ABS INDICATOR LIGHT
OM
AS
F96
B255
B19
B3
P
LgY
A ABS(R)-02
B ABS(R)-02
ABS RELAY
2 WB
1 GB
3 B
4 LR
B264
B61
F44
ABS CONDENSER
WB 1
B 2
F97
B37
B200
F74
REF. TO GND-07
F49
PUMP MOTOR
ABS CONTROL MODULE
SOLENOID VALVE
FL INLET
FL OUTLET
FR INLET
FR OUTLET
RL INLET
RL OUTLET
RR INLET
RR OUTLET
VALVE RELAY
MOTOR RELAY
REF. TO GND-06
F73
ABS MOTOR GROUND
WC : WITH CRUISE CONTROL MODEL
OC : WITHOUT CRUISE CONTROL MODEL
AS : FOR AUSTRALIA STi MODEL
OM : OTHER MODELS

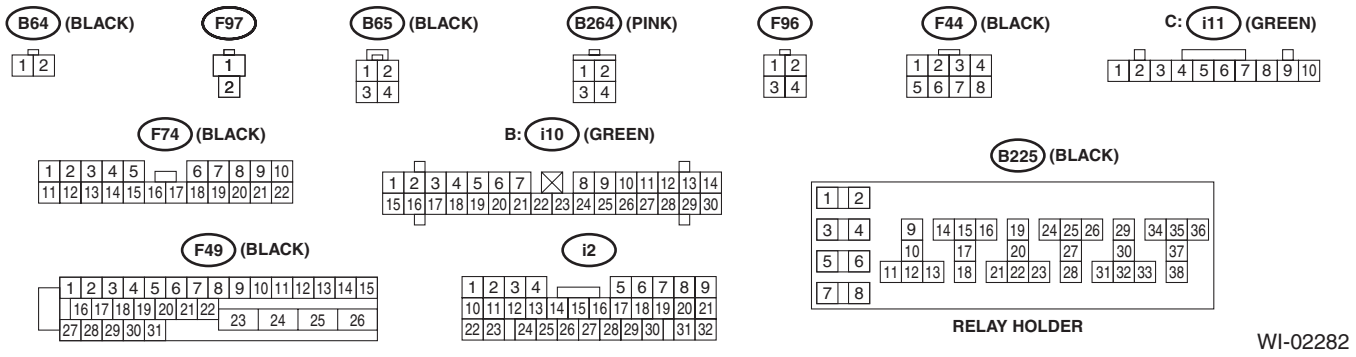
B64 (BLACK)
F97
B65 (BLACK)
B264 (PINK)
F96
F44 (BLACK)
C: i11 (GREEN)
F74 (BLACK)
B: i10 (GREEN)
B225 (BLACK)
F49 (BLACK)
i2
RELAY HOLDER
WI-02282

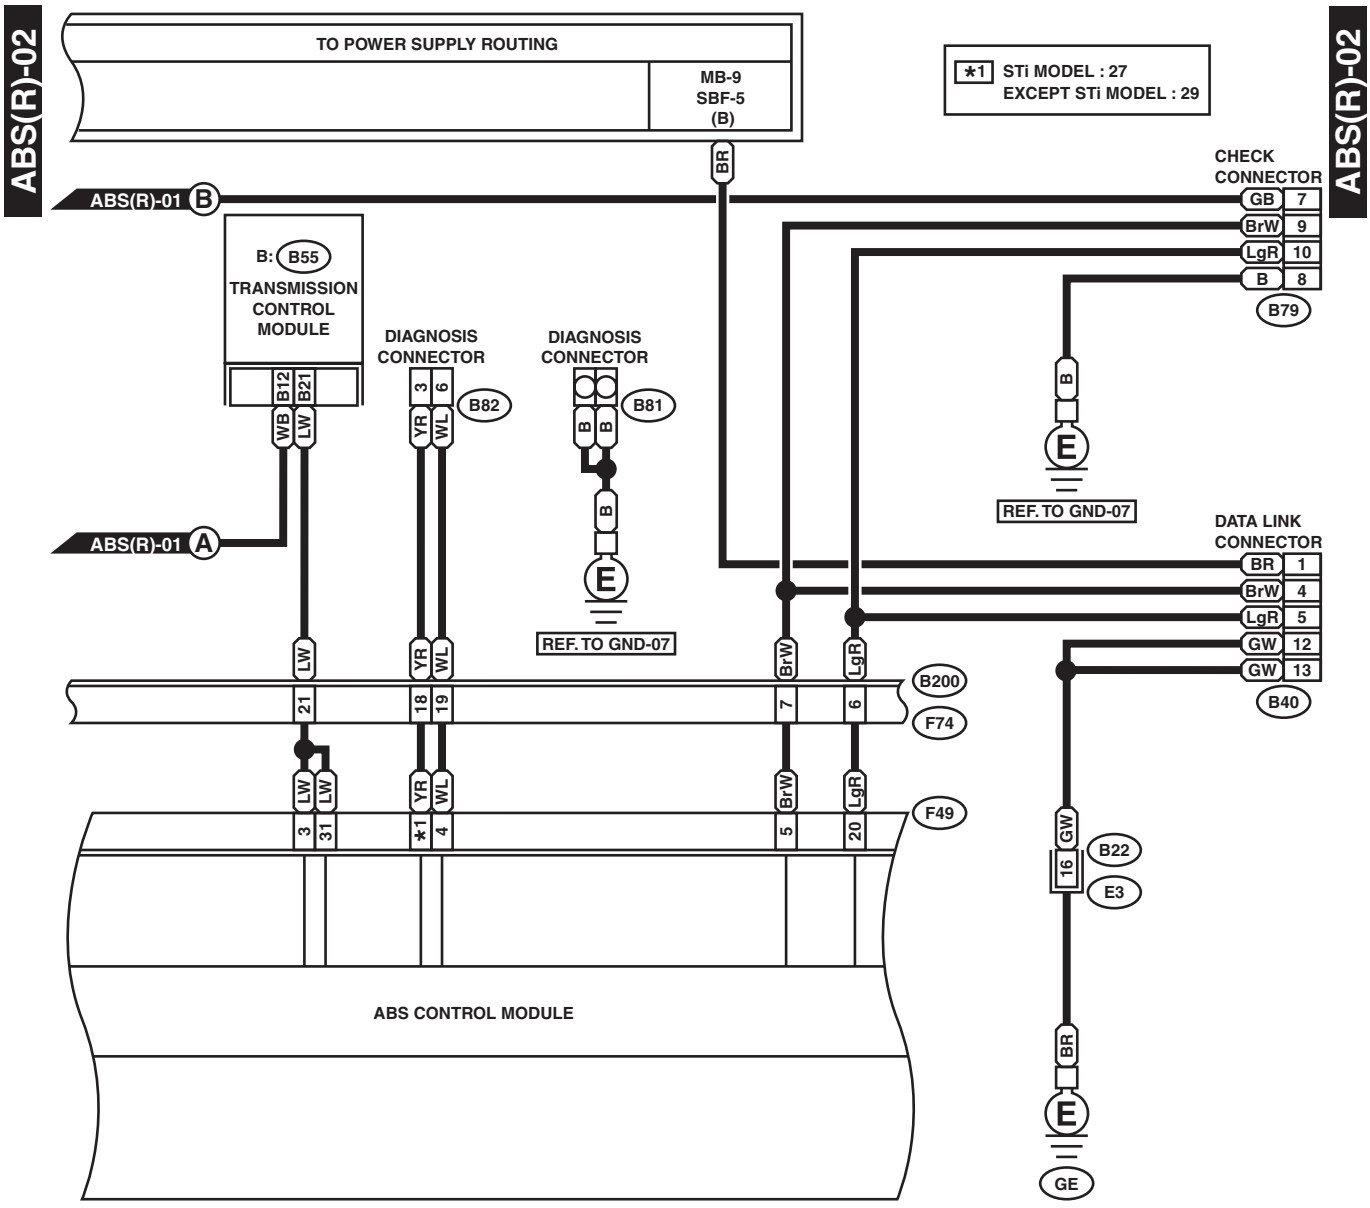
ABS(R)-02
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
*1 STi MODEL : 27
EXCEPT STi MODEL : 29
ABS(R)-01 B
ABS(R)-01 A
CHECK CONNECTOR
GB 7
BrW 9
LgR 10
B 8
B79
B: B55
TRANSMISSION CONTROL MODULE
B12
B21
WB
LW
DIAGNOSIS CONNECTOR
3
6
YR
WL
B82
DIAGNOSIS CONNECTOR
B
B
B81
REF. TO GND-07
REF. TO GND-07
DATA LINK CONNECTOR
BR 1
BrW 4
LgR 5
GW 12
GW 13
B40
B200
F74
F49
21
18
19
7
6
3
31
*1
4
5
20
16
B22
E3
ABS CONTROL MODULE
BR
GE


B82 (BLACK)

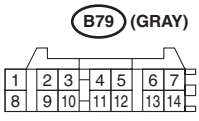
B79 (GRAY)


B22 (BROWN)

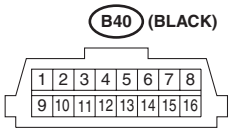
B40 (BLACK)


F74 (BLACK)

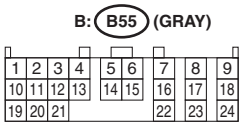
B: B55 (GRAY)


F49 (BLACK)

WI-02283

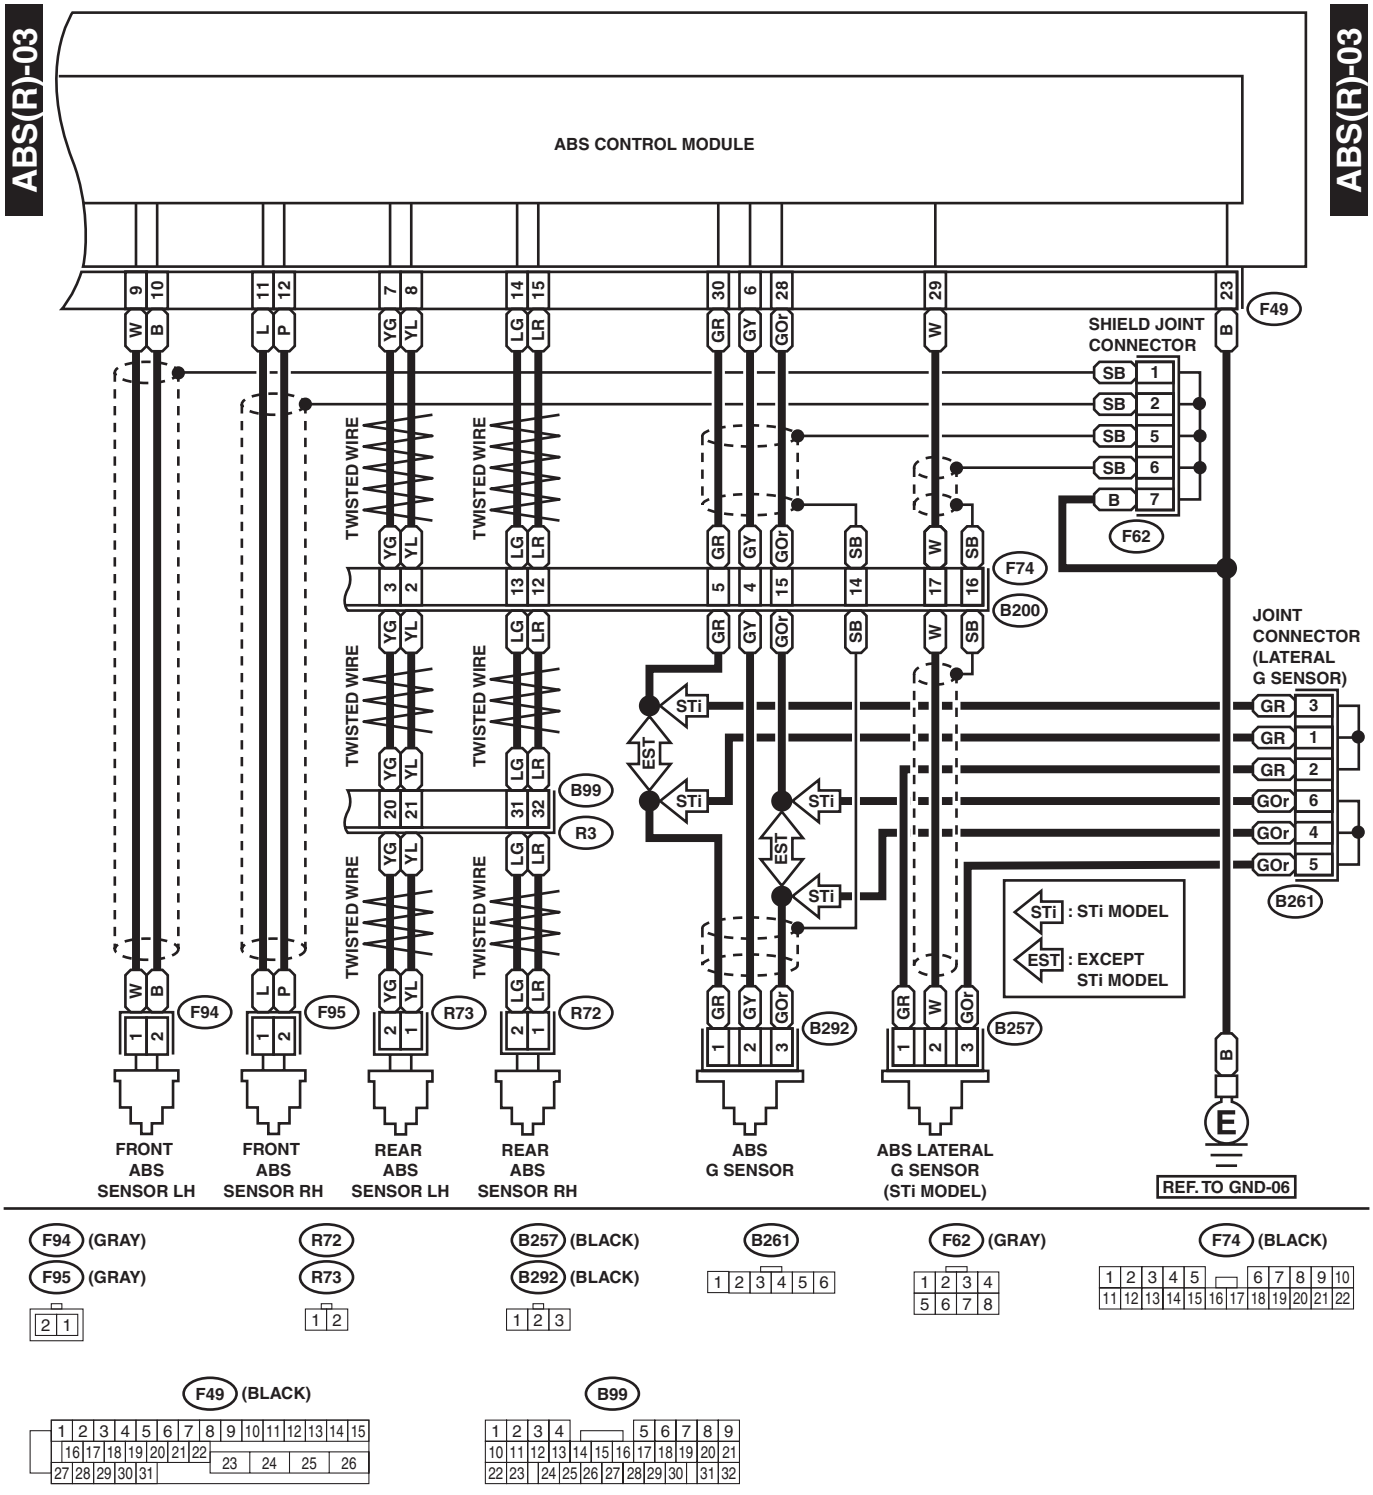
ABS(R)-03
ABS(R)-03
ABS CONTROL MODULE
SHIELD JOINT CONNECTOR
F49
F62
F74
B200
B99
R3
B292
B257
B261
F94
F95
R73
R72
JOINT CONNECTOR (LATERAL G SENSOR)
TWISTED WIRE
STi
EST
STi : STi MODEL
EST : EXCEPT STi MODEL
FRONT ABS SENSOR LH
FRONT ABS SENSOR RH
REAR ABS SENSOR LH
REAR ABS SENSOR RH
ABS G SENSOR
ABS LATERAL G SENSOR (STi MODEL)
REF. TO GND-06

F94 (GRAY)
F95 (GRAY)
R72
R73
B257 (BLACK)
B292 (BLACK)
B261
F62 (GRAY)
F74 (BLACK)
F49 (BLACK)
B99

WI-02284

8. AT Control System

A: SCHEMATIC

1. LHD MODEL

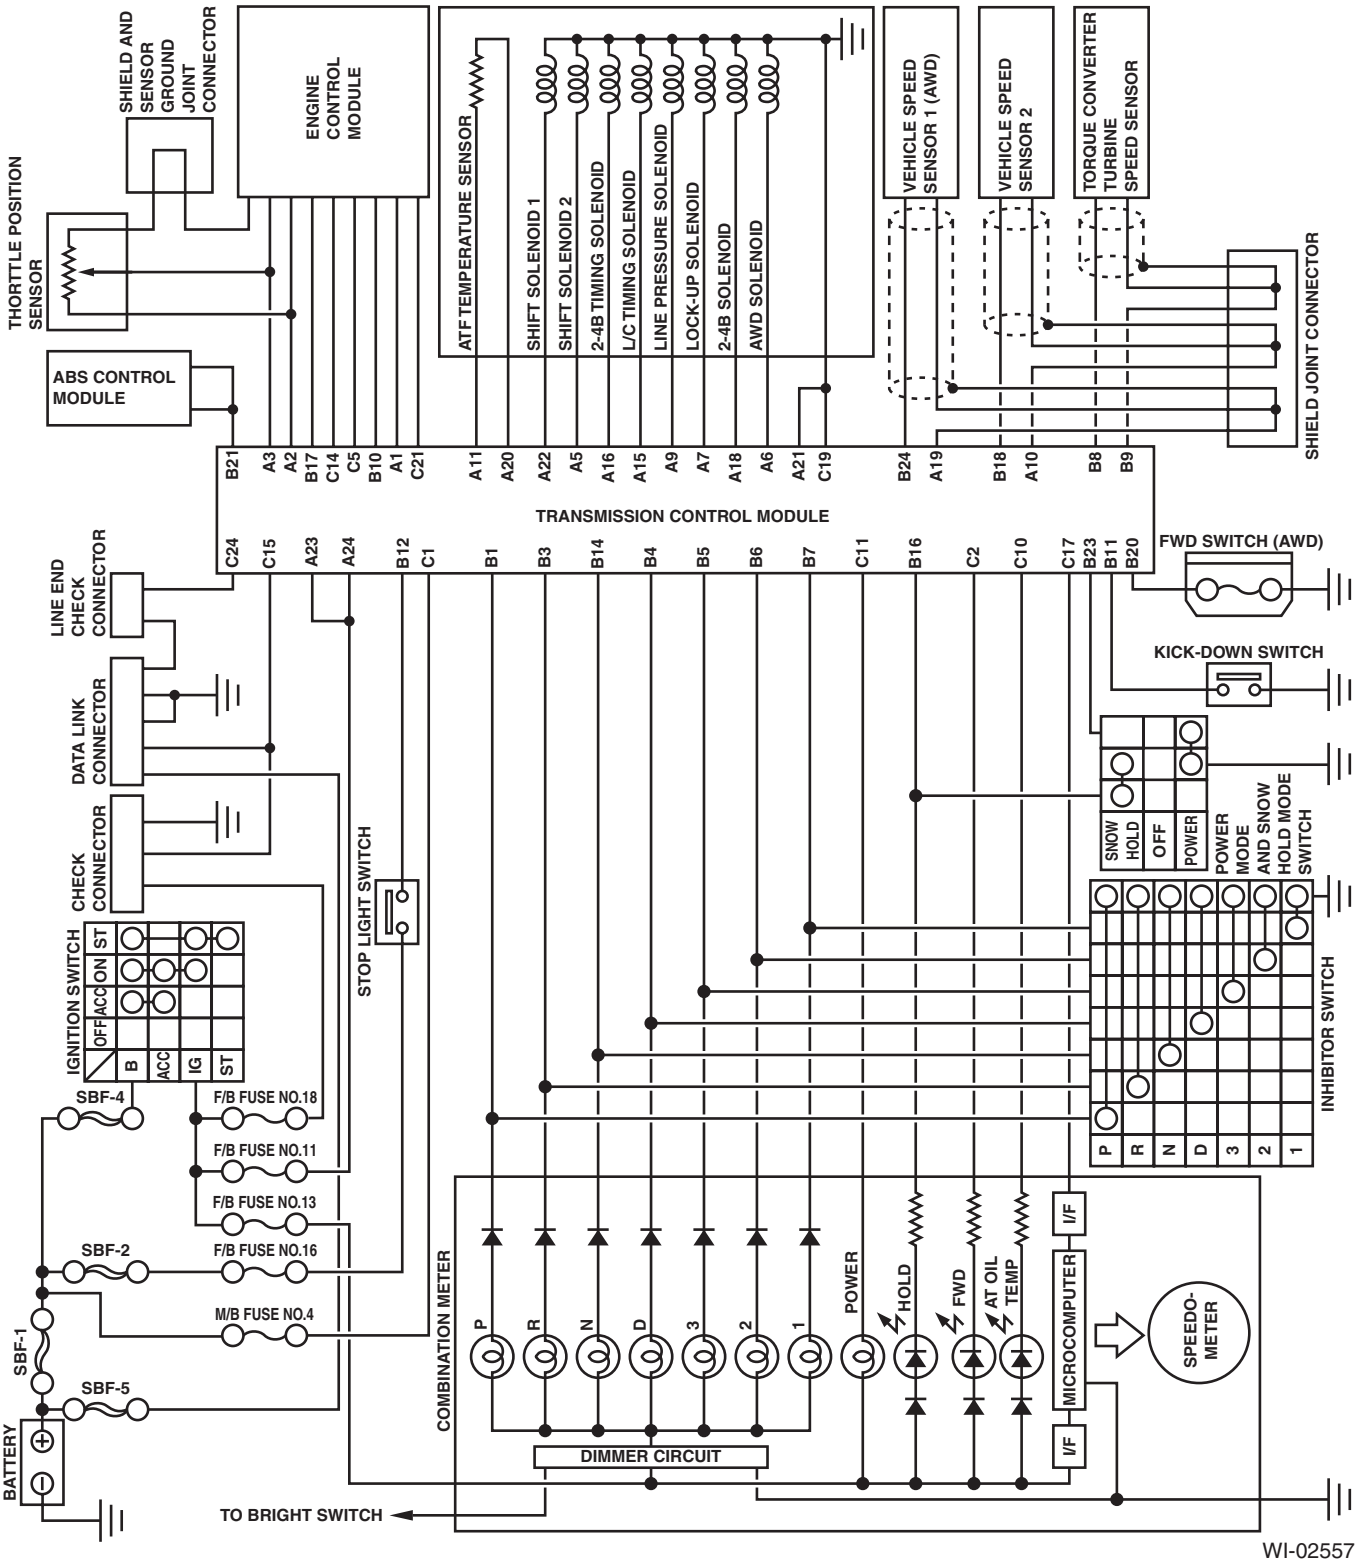

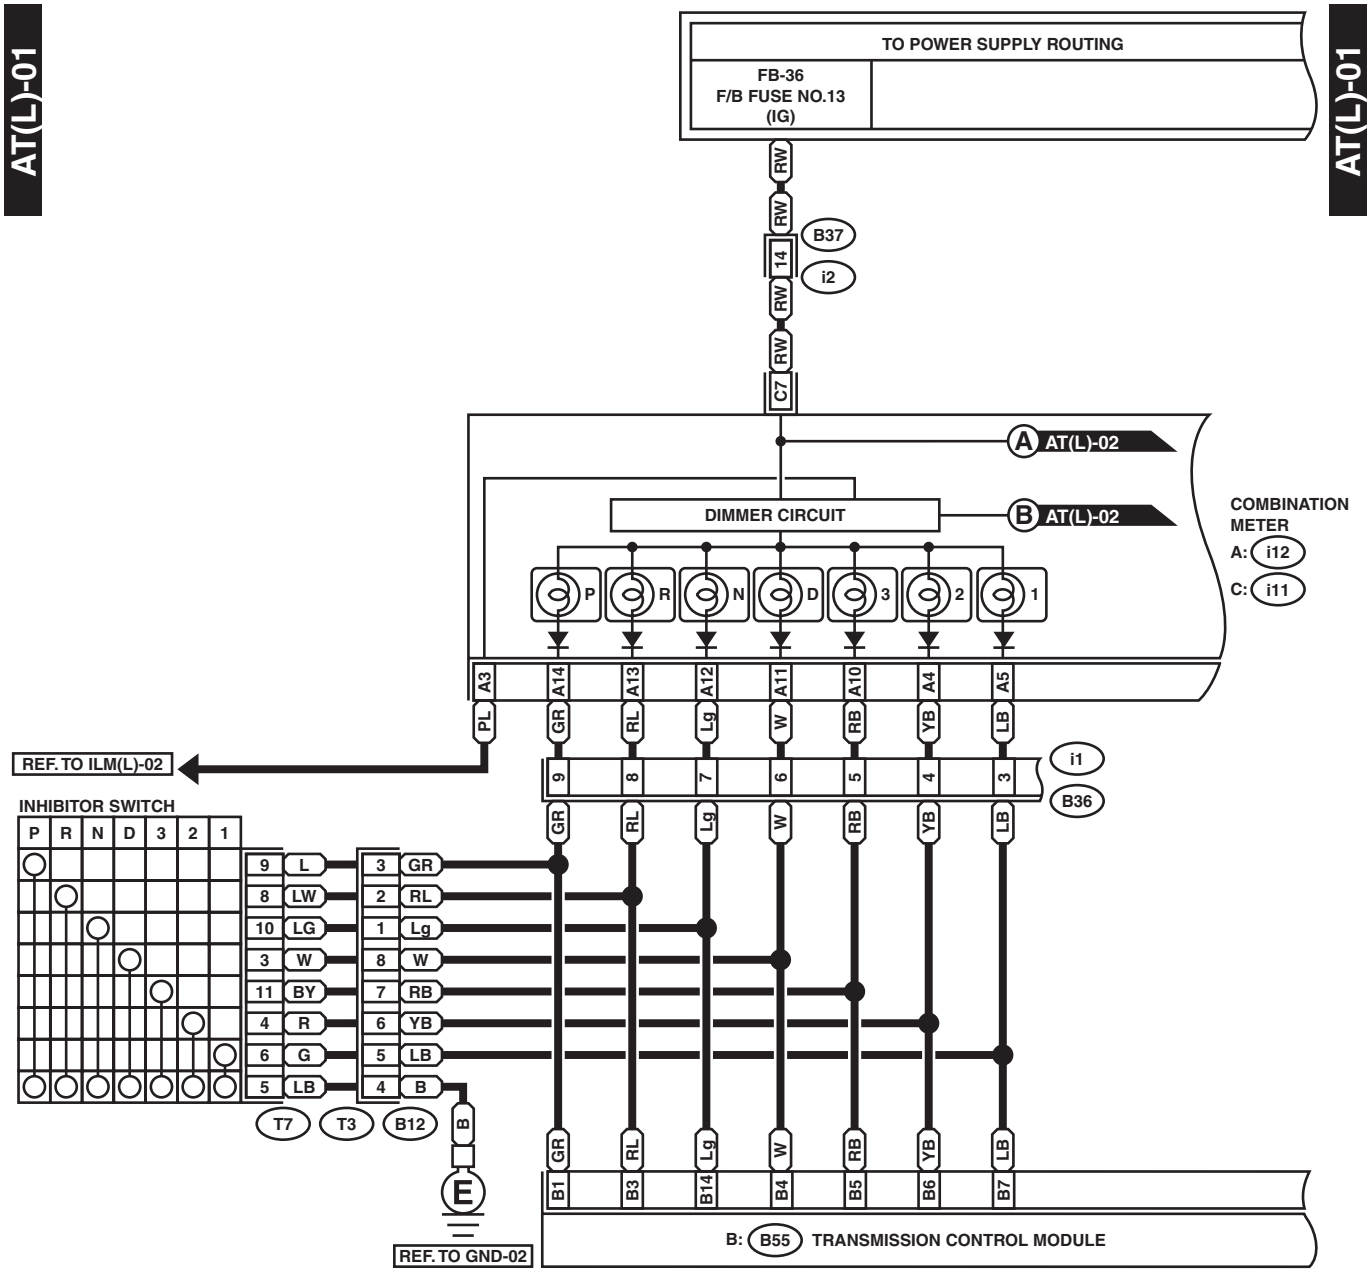
AT(L)-01
AT(L)-01
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO.13
(IG)
RW
RW
B37
14
i2
RW
RW
C7
A AT(L)-02
DIMMER CIRCUIT
B AT(L)-02
COMBINATION METER
A: i12
C: i11
P
R
N
D
3
2
1
A3
A14
A13
A12
A11
A10
A4
A5
PL
GR
RL
Lg
W
RB
YB
LB
REF. TO ILM(L)-02
9
8
7
6
5
4
3
i1
B36
INHIBITOR SWITCH
P R N D 3 2 1
9 L
8 LW
10 LG
3 W
11 BY
4 R
6 G
5 LB
3 GR
2 RL
1 Lg
8 W
7 RB
6 YB
5 LB
4 B
T7
T3
B12
B
E
REF. TO GND-02
B1
B3
B14
B4
B5
B6
B7
B: B55 TRANSMISSION CONTROL MODULE

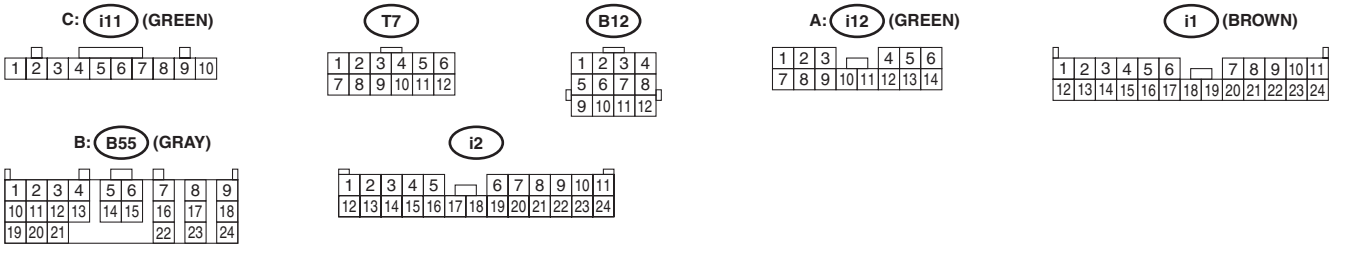
C: i11 (GREEN)
T7
B12
A: i12 (GREEN)
i1 (BROWN)
B: B55 (GRAY)
i2

WI-02285

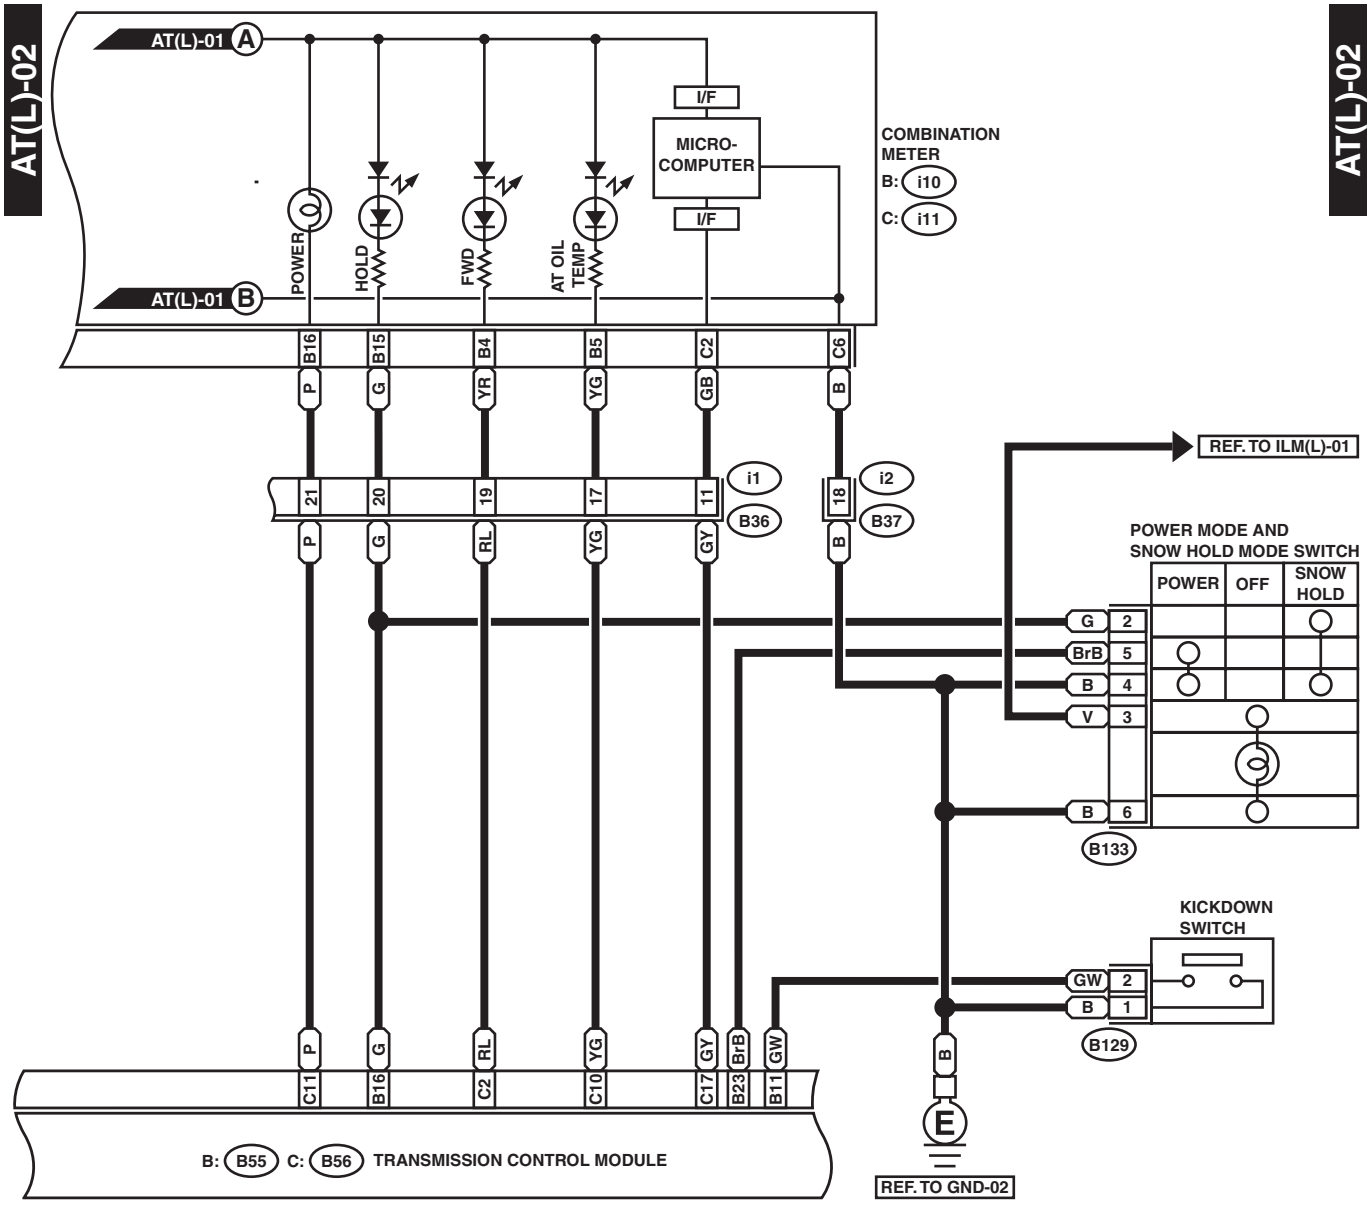
AT(L)-02
AT(L)-01 A
AT(L)-01 B
POWER
HOLD
FWD
AT OIL TEMP
I/F
MICRO-COMPUTER
I/F
COMBINATION METER
B: i10
C: i11
B16 B15 B4 B5 C2 C6
P G YR YG GB B
21 20 19 17 11 18
i1 B36
i2 B37
P G RL YG GY B
REF. TO ILM(L)-01
POWER MODE AND SNOW HOLD MODE SWITCH
POWER OFF SNOW HOLD
G 2
BrB 5
B 4
V 3
B 6
B133
KICKDOWN SWITCH
GW 2
B 1
B129
C11 B16 C2 C10 C17 B23 B11
P G RL YG GY BrB GW
B
E
REF. TO GND-02
B: B55 C: B56 TRANSMISSION CONTROL MODULE

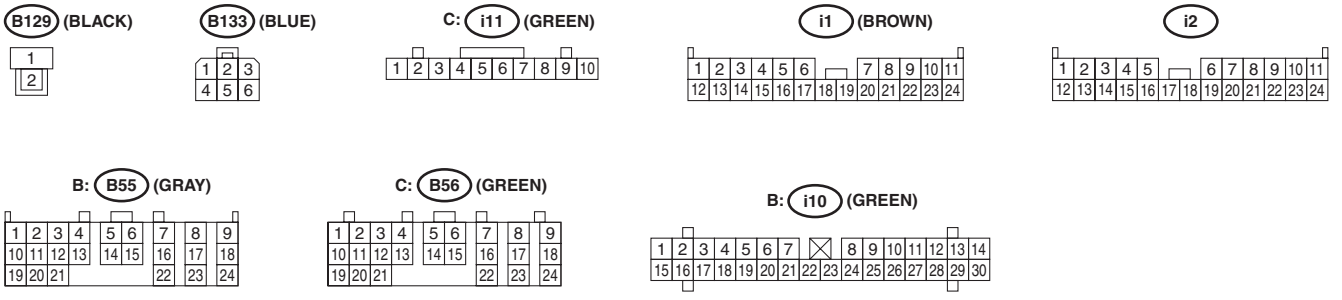
B129 (BLACK)
B133 (BLUE)
C: i11 (GREEN)
i1 (BROWN)
i2
B: B55 (GRAY)
C: B56 (GREEN)
B: i10 (GREEN)

WI-02286

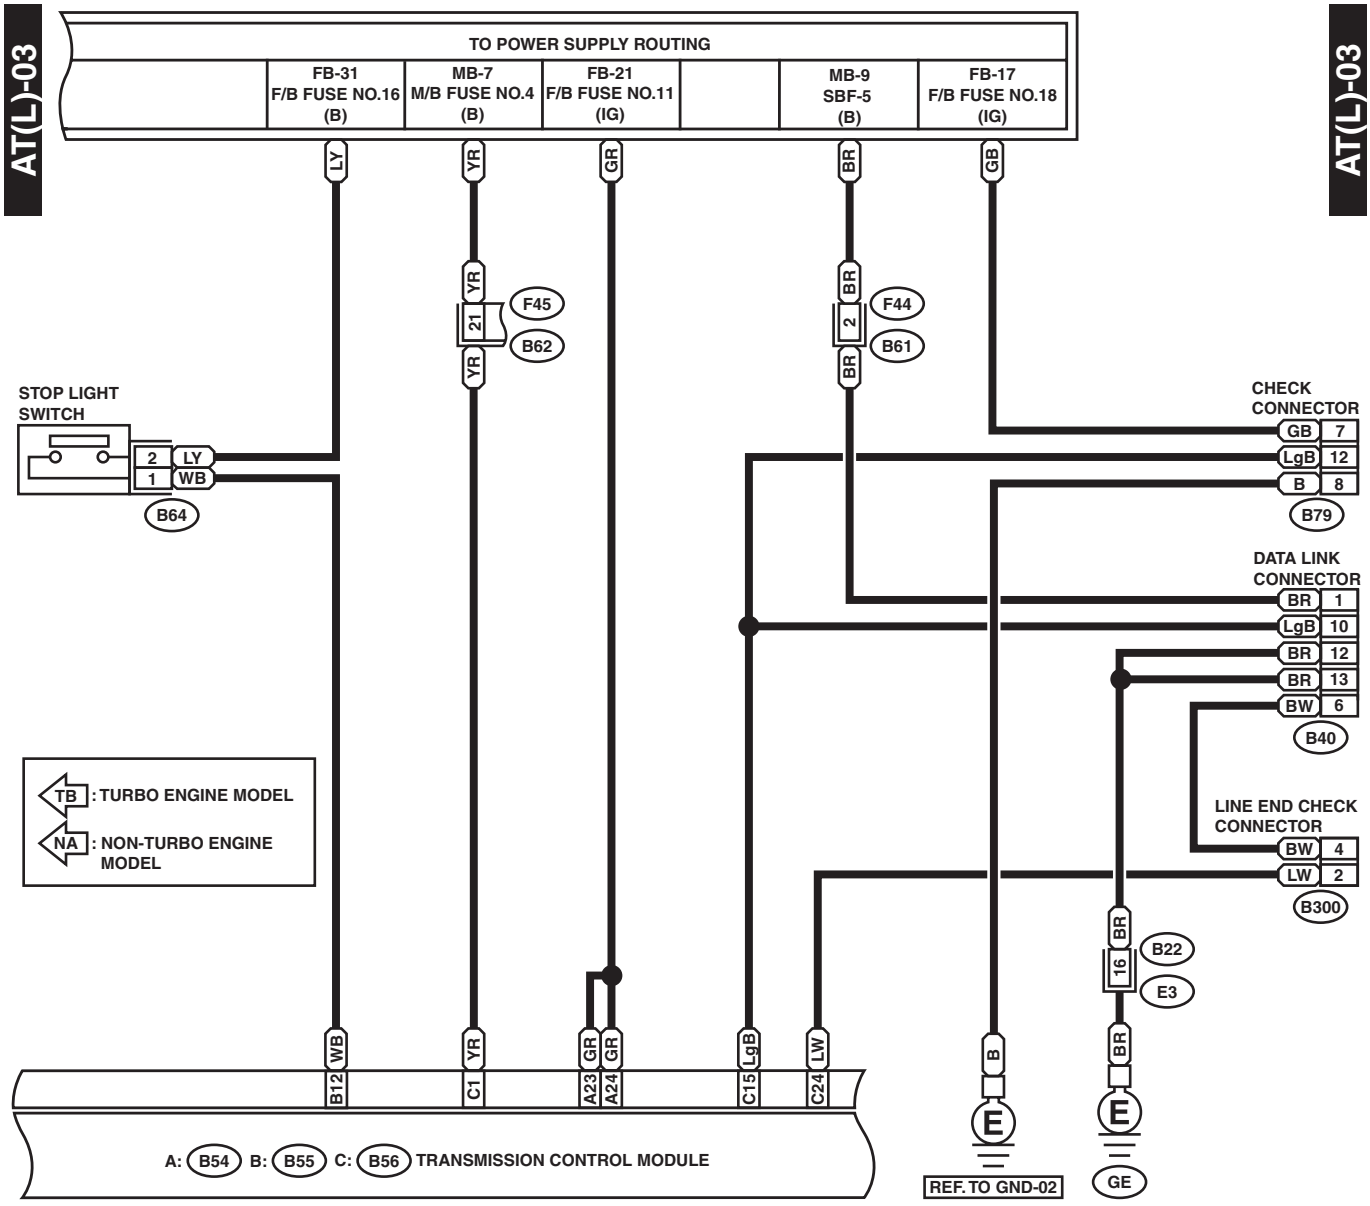
AT(L)-03
AT(L)-03
TO POWER SUPPLY ROUTING
FB-31 F/B FUSE NO.16 (B)
MB-7 M/B FUSE NO.4 (B)
FB-21 F/B FUSE NO.11 (IG)
MB-9 SBF-5 (B)
FB-17 F/B FUSE NO.18 (IG)
LY
YR
GR
BR
GB
F45
B62
F44
B61
STOP LIGHT SWITCH
LY
WB
B64
CHECK CONNECTOR
GB 7
LgB 12
B 8
B79
DATA LINK CONNECTOR
BR 1
LgB 10
BR 12
BR 13
BW 6
B40
LINE END CHECK CONNECTOR
BW 4
LW 2
B300
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL
B22
E3
WB
YR
GR
LgB
LW
B
BR
B12
C1
A23
A24
C15
C24
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE
REF. TO GND-02
GE

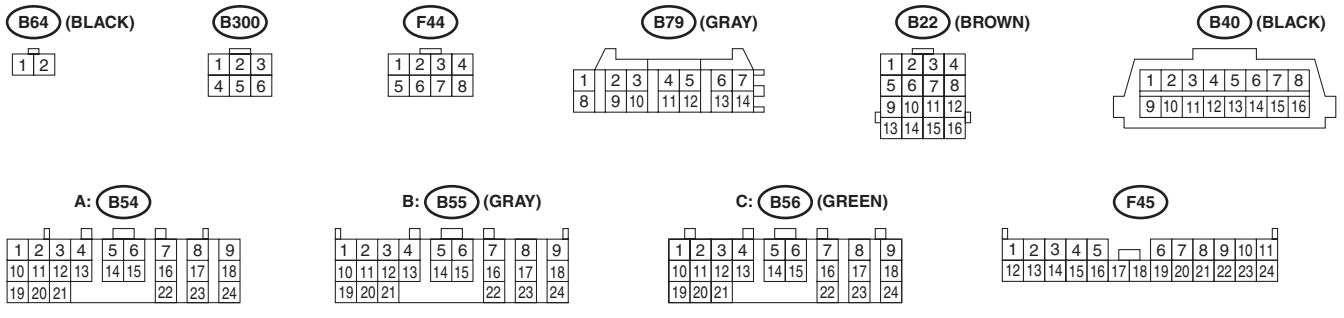
B64 (BLACK)
B300
F44
B79 (GRAY)
B22 (BROWN)
B40 (BLACK)
A: B54
B: B55 (GRAY)
C: B56 (GREEN)
F45

WI-02287

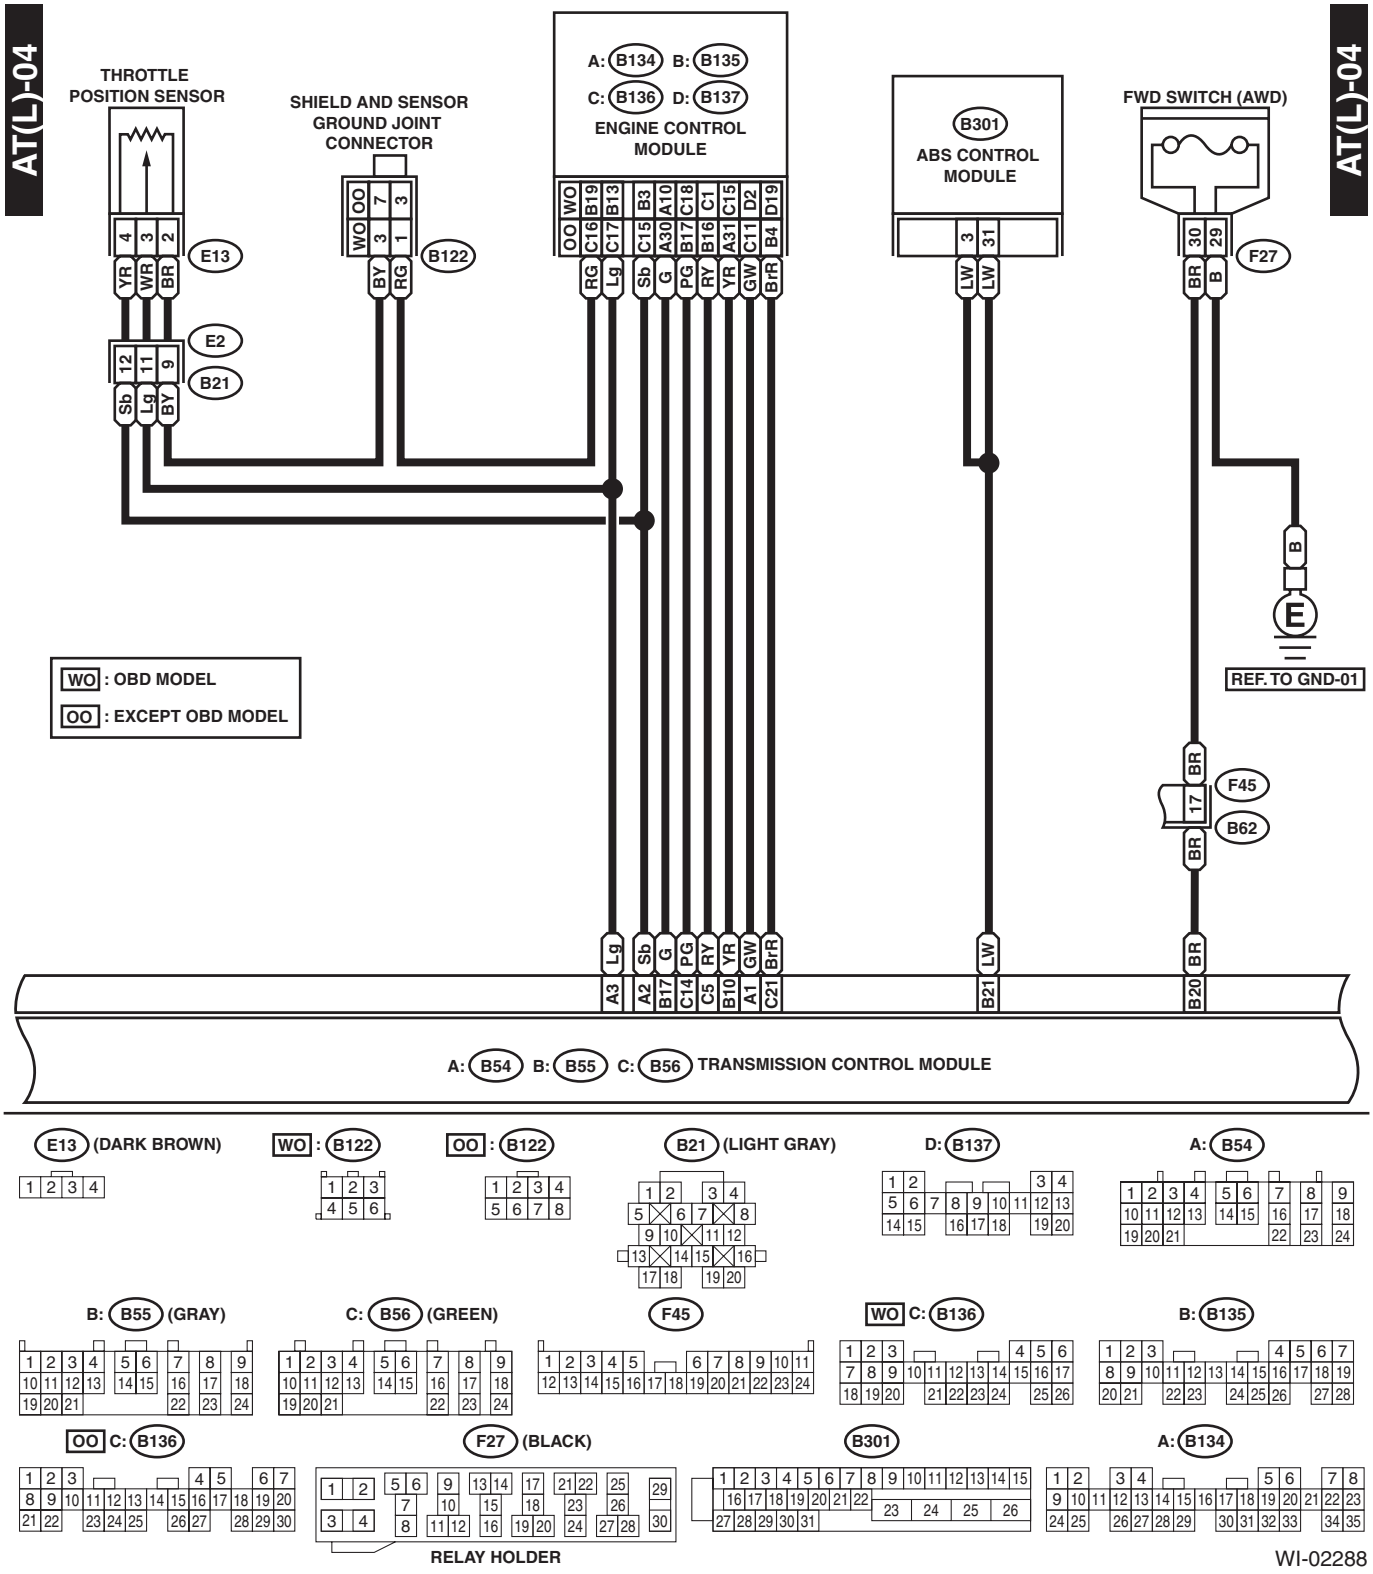
AT(L)-04
AT(L)-04
THROTTLE POSITION SENSOR
SHIELD AND SENSOR GROUND JOINT CONNECTOR
A: B134 B: B135
C: B136 D: B137
ENGINE CONTROL MODULE
B301
ABS CONTROL MODULE
FWD SWITCH (AWD)
E13
B122
E2
B21
F27
REF. TO GND-01
F45
B62
WO : OBD MODEL
OO : EXCEPT OBD MODEL
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE
E13 (DARK BROWN)
WO : B122
OO : B122
B21 (LIGHT GRAY)
D: B137
A: B54
B: B55 (GRAY)
C: B56 (GREEN)
F45
WO C: B136
B: B135
OO C: B136
F27 (BLACK)
B301
A: B134
RELAY HOLDER

WI-02288

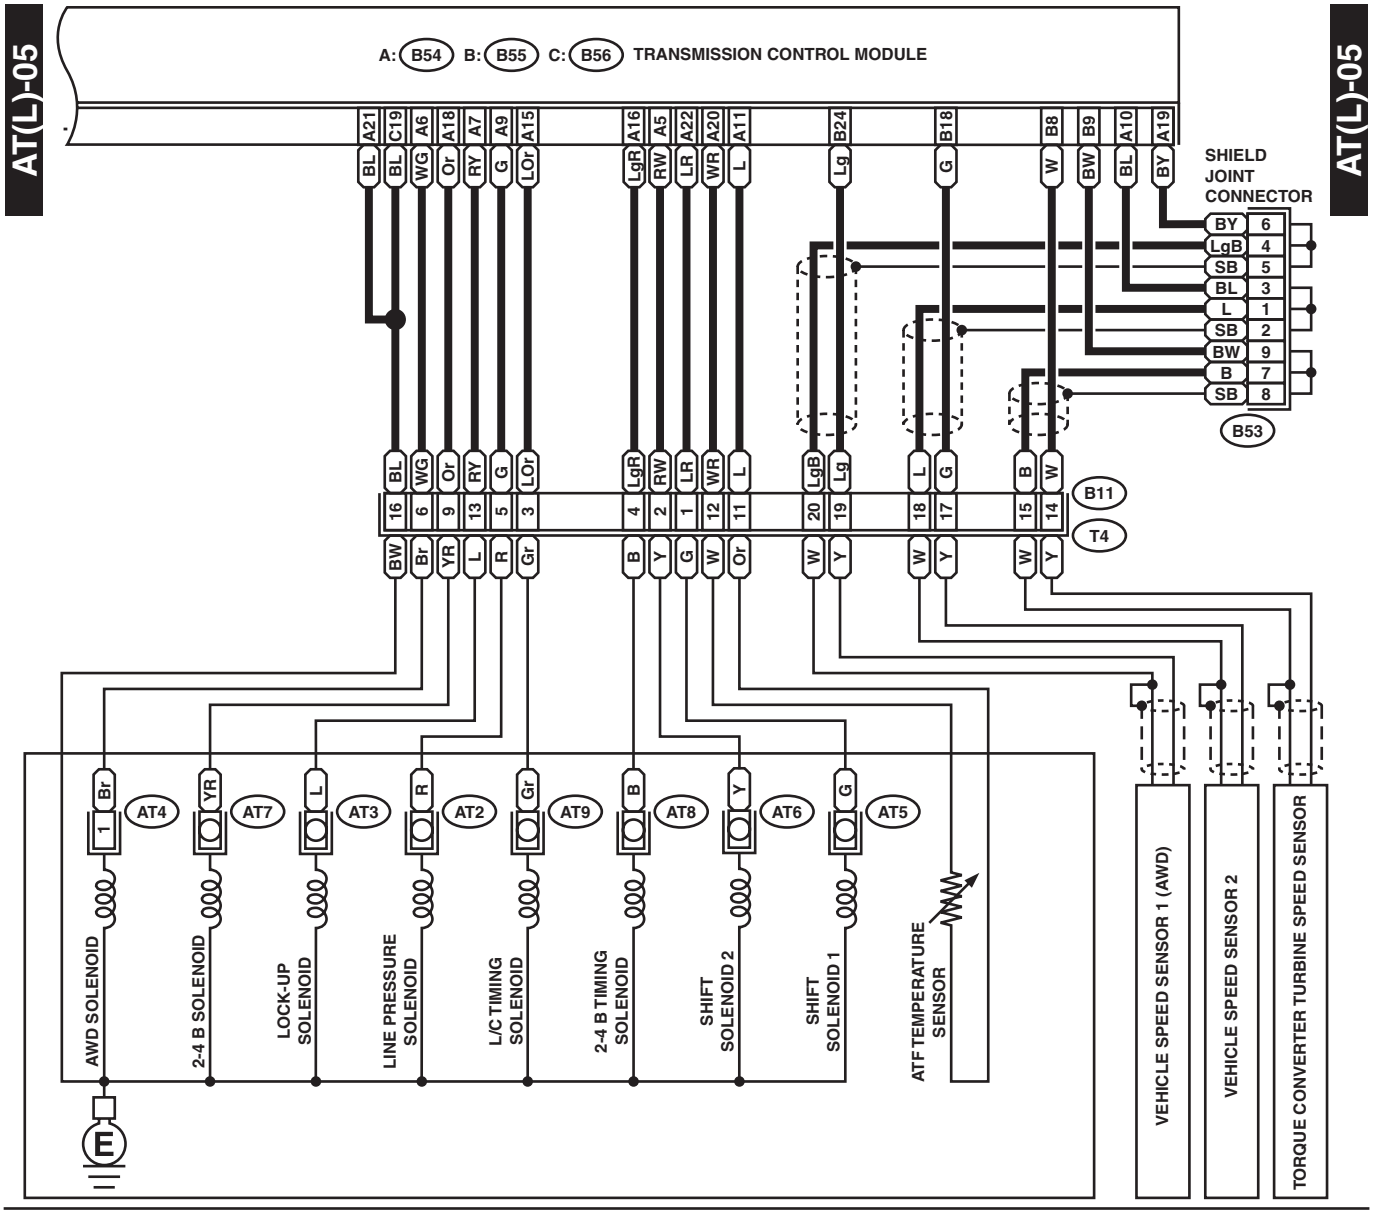
AT(L)-05
AT(L)-05
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE
A21 C19 A6 A18 A7 A9 A15 A16 A5 A22 A20 A11 B24 B18 B8 B9 A10 A19
BL BL WG Or RY G LOr LgR RW LR WR L Lg G W BW BL BY
SHIELD JOINT CONNECTOR
BY 6
LgB 4
SB 5
BL 3
L 1
SB 2
BW 9
B 7
SB 8
B53
BL WG Or RY G LOr LgR RW LR WR L LgB Lg L G B W
16 6 9 13 5 3 4 2 1 12 11 20 19 18 17 15 14
B11
T4
BW Br YR L R Gr B Y G W Or W Y W Y W Y
AT4 AT7 AT3 AT2 AT9 AT8 AT6 AT5
AWD SOLENOID
2-4 B SOLENOID
LOCK-UP SOLENOID
LINE PRESSURE SOLENOID
L/C TIMING SOLENOID
2-4 B TIMING SOLENOID
SHIFT SOLENOID 2
SHIFT SOLENOID 1
ATF TEMPERATURE SENSOR
VEHICLE SPEED SENSOR 1 (AWD)
VEHICLE SPEED SENSOR 2
TORQUE CONVERTER TURBINE SPEED SENSOR
E

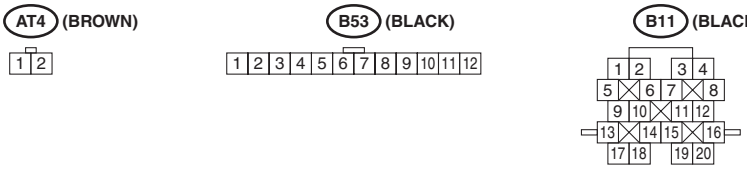
AT4 (BROWN)
1 2
B53 (BLACK)
1 2 3 4 5 6 7 8 9 10 11 12
B11 (BLACK)
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20

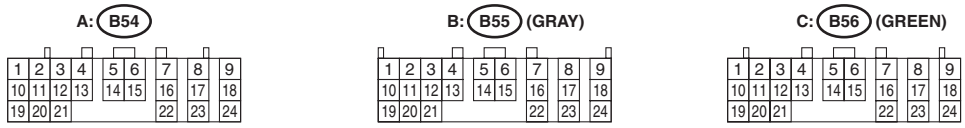
A: B54
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24
B: B55 (GRAY)
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24
C: B56 (GREEN)
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24

WI-02289

2. RHD MODEL

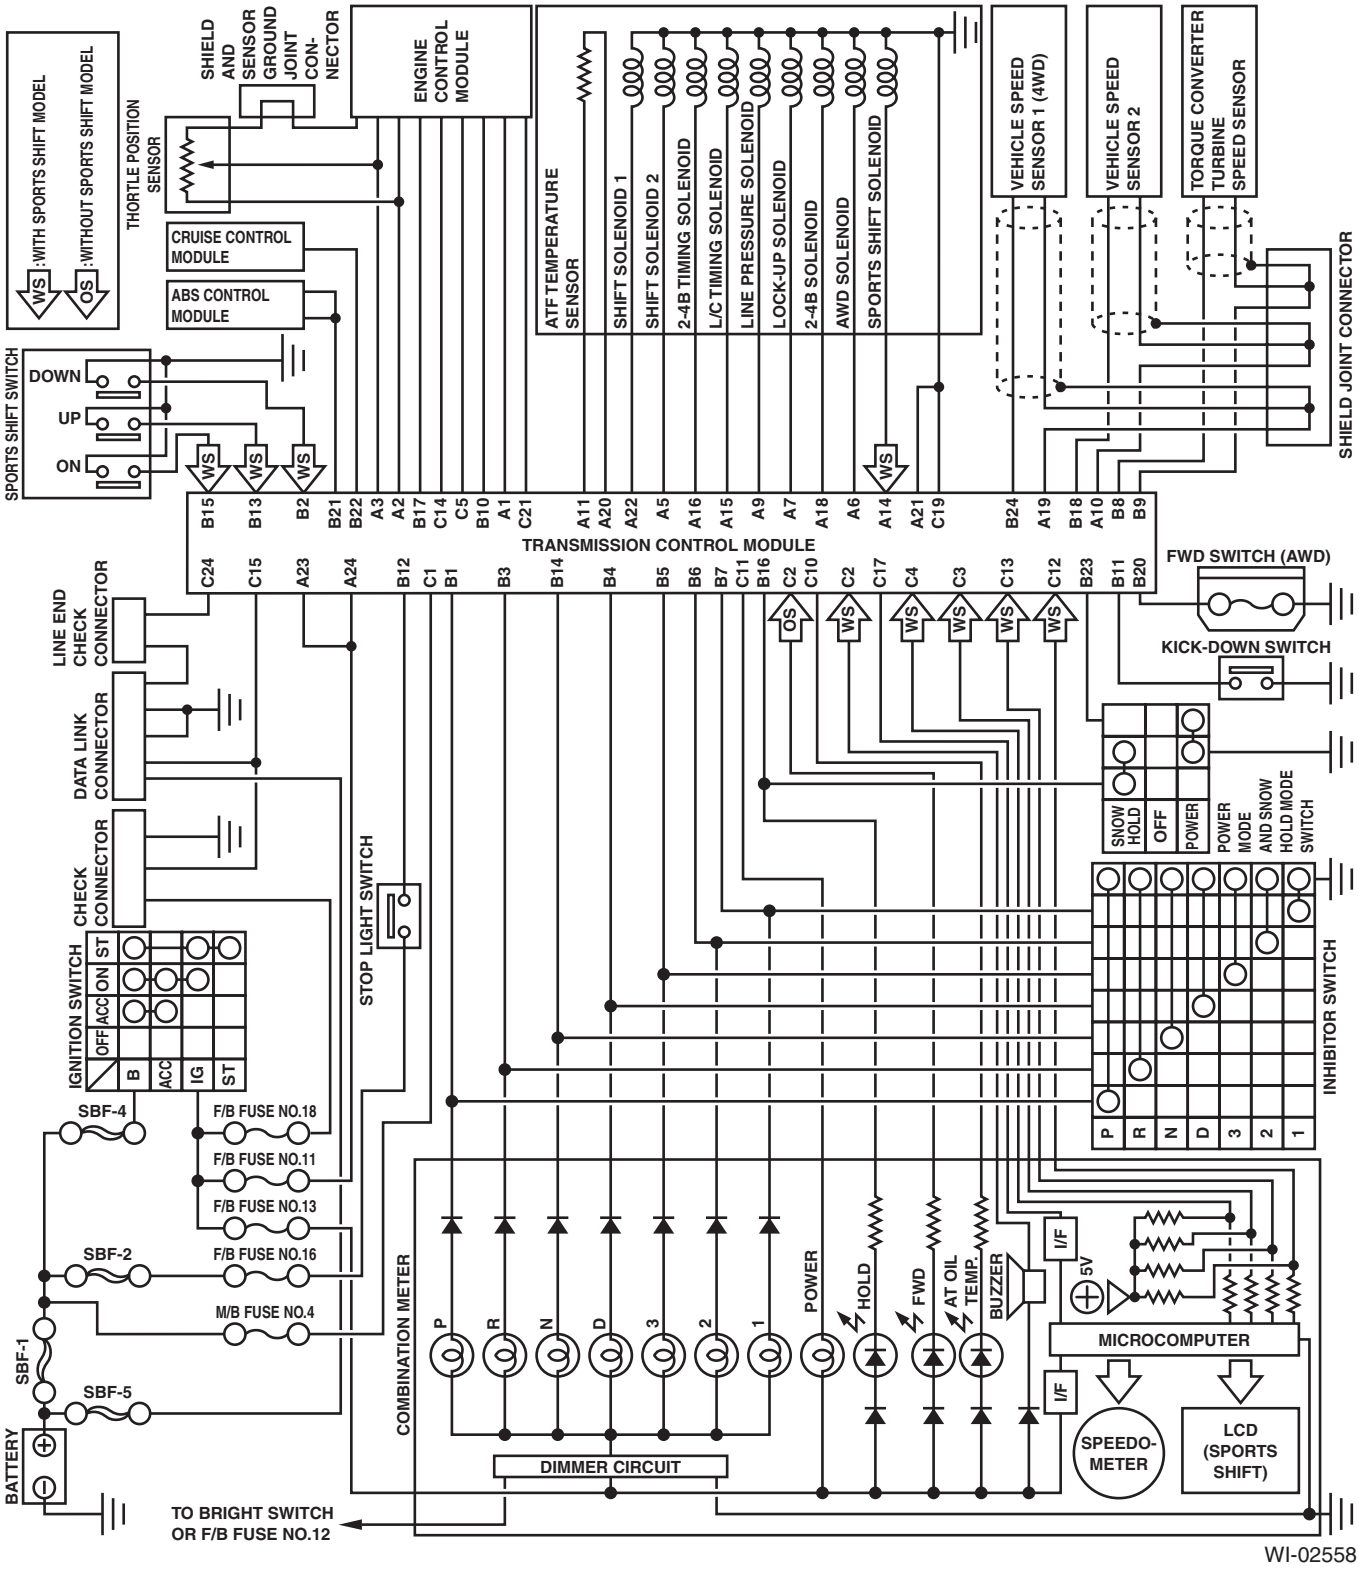

WI-02558

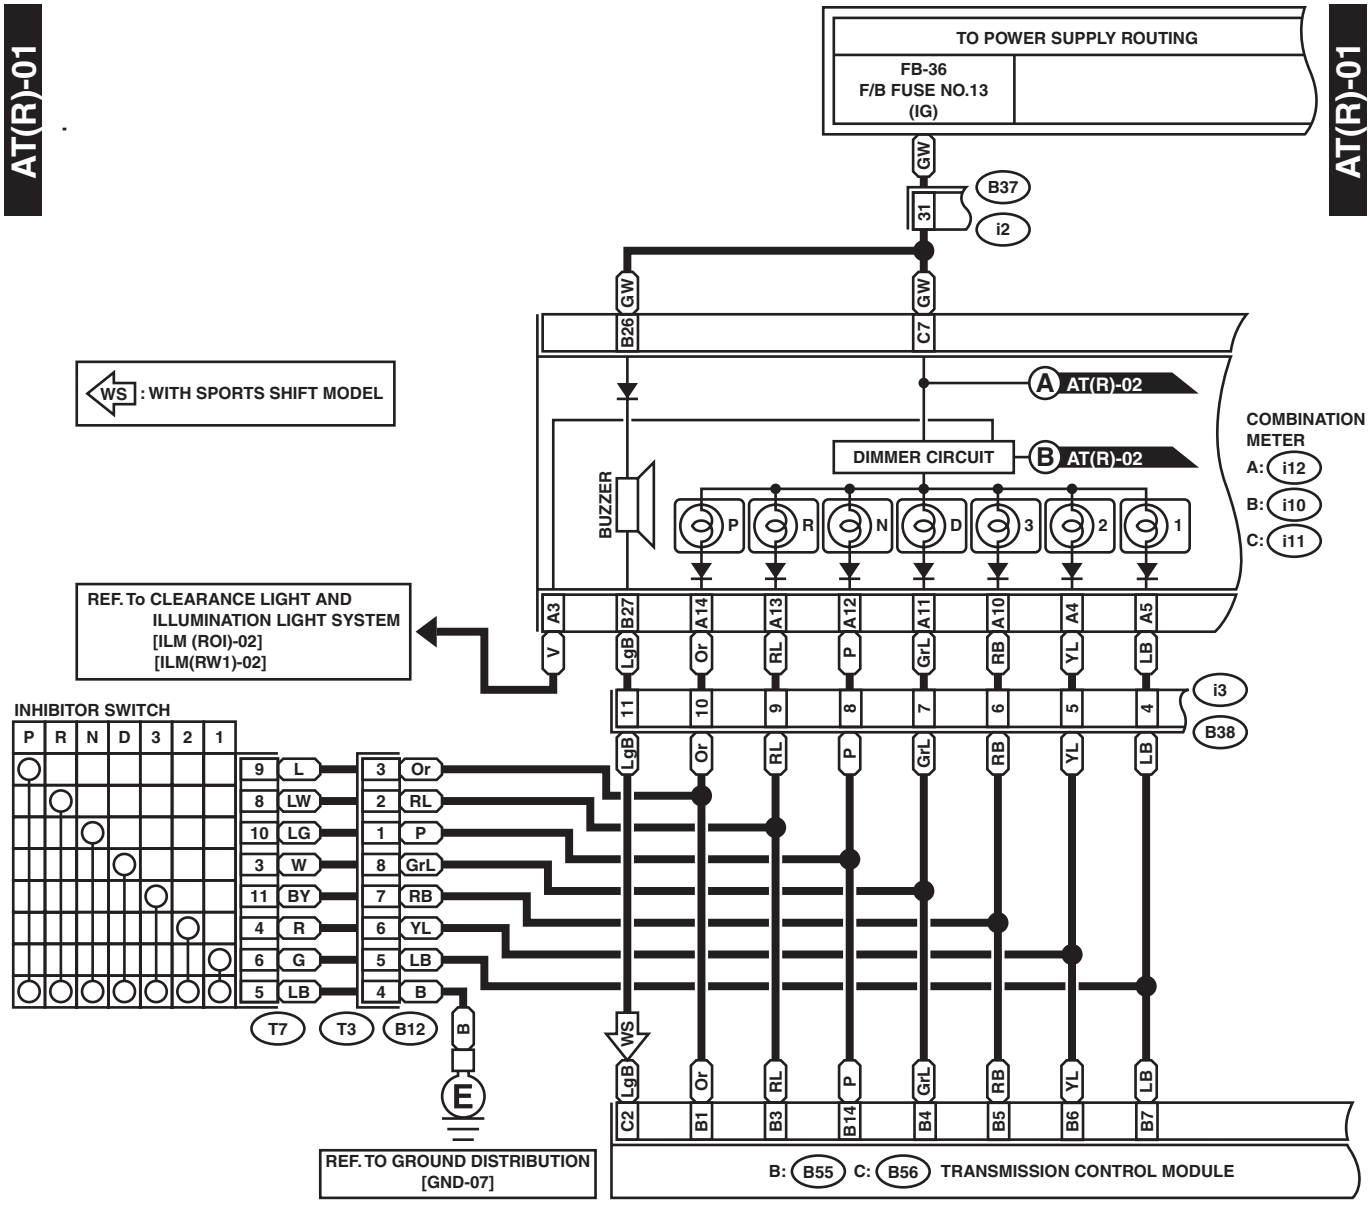
AT(R)-01
AT(R)-01
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO.13
(IG)
GW
B37
31
i2
GW
GW
B26
C7
WS : WITH SPORTS SHIFT MODEL
A AT(R)-02
COMBINATION METER
A: i12
B: i10
C: i11
DIMMER CIRCUIT
B AT(R)-02
BUZZER
P
R
N
D
3
2
1
REF. To CLEARANCE LIGHT AND ILLUMINATION LIGHT SYSTEM [ILM (ROI)-02] [ILM(RW1)-02]
A3
B27
A14
A13
A12
A11
A10
A4
A5
V
LgB
Or
RL
P
GrL
RB
YL
LB
i3
B38
11
10
9
8
7
6
5
4
INHIBITOR SWITCH
P R N D 3 2 1
9 L
8 LW
10 LG
3 W
11 BY
4 R
6 G
5 LB
3 Or
2 RL
1 P
8 GrL
7 RB
6 YL
5 LB
4 B
T7
T3
B12
B
WS
E
C2
B1
B3
B14
B4
B5
B6
B7
REF. TO GROUND DISTRIBUTION [GND-07]
B: B55 C: B56 TRANSMISSION CONTROL MODULE

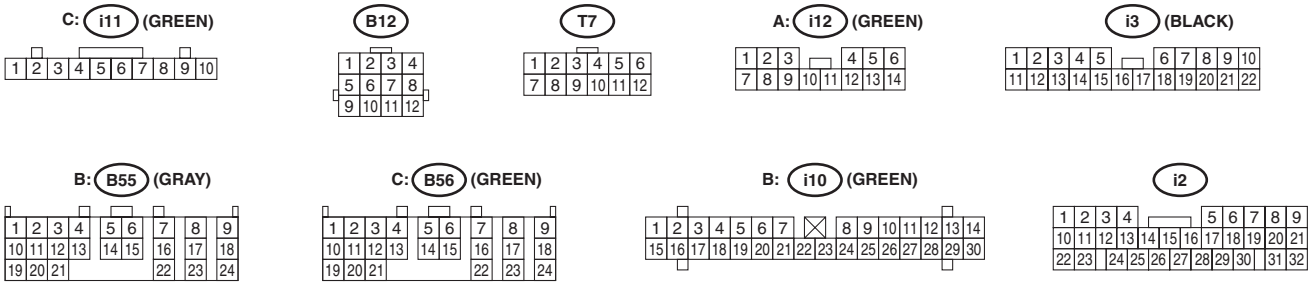
C: i11 (GREEN)
B12
T7
A: i12 (GREEN)
i3 (BLACK)
B: B55 (GRAY)
C: B56 (GREEN)
B: i10 (GREEN)
i2

WI-02290

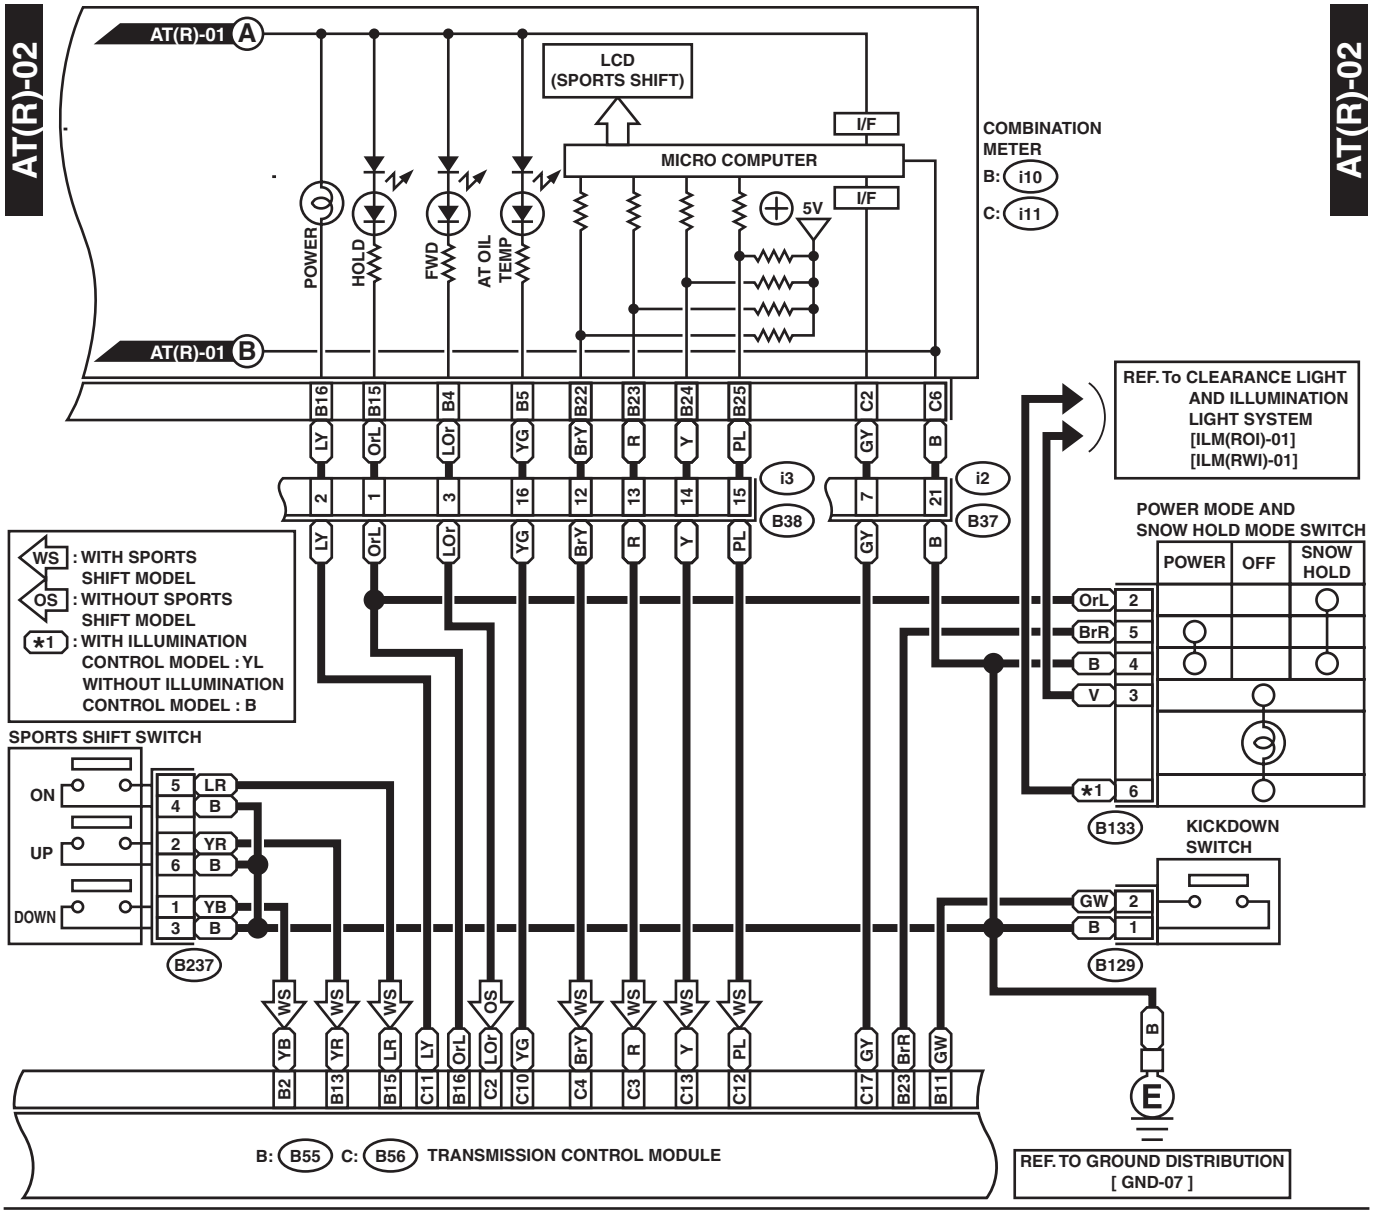
AT(R)-02
AT(R)-01 A
AT(R)-01 B
LCD (SPORTS SHIFT)
I/F
MICRO COMPUTER
I/F
5V
POWER
HOLD
FWD
AT OIL TEMP
COMBINATION METER
B: i10
C: i11
REF. To CLEARANCE LIGHT AND ILLUMINATION LIGHT SYSTEM [ILM(ROI)-01] [ILM(RWI)-01]
POWER MODE AND SNOW HOLD MODE SWITCH
POWER
OFF
SNOW HOLD
WS : WITH SPORTS SHIFT MODEL
OS : WITHOUT SPORTS SHIFT MODEL
*1 : WITH ILLUMINATION CONTROL MODEL : YL
WITHOUT ILLUMINATION CONTROL MODEL : B
SPORTS SHIFT SWITCH
ON
UP
DOWN
B237
B133
KICKDOWN SWITCH
B129
i3
B38
i2
B37
B: B55 C: B56 TRANSMISSION CONTROL MODULE
REF. TO GROUND DISTRIBUTION [GND-07]
B129 (BLACK)
B133 (BLUE)
B237 (BLACK)
C: i11 (GREEN)
i3 (BLACK)
B: B55 (GRAY)
C: B56 (GREEN)
B: i10 (GREEN)
i2

WI-02291

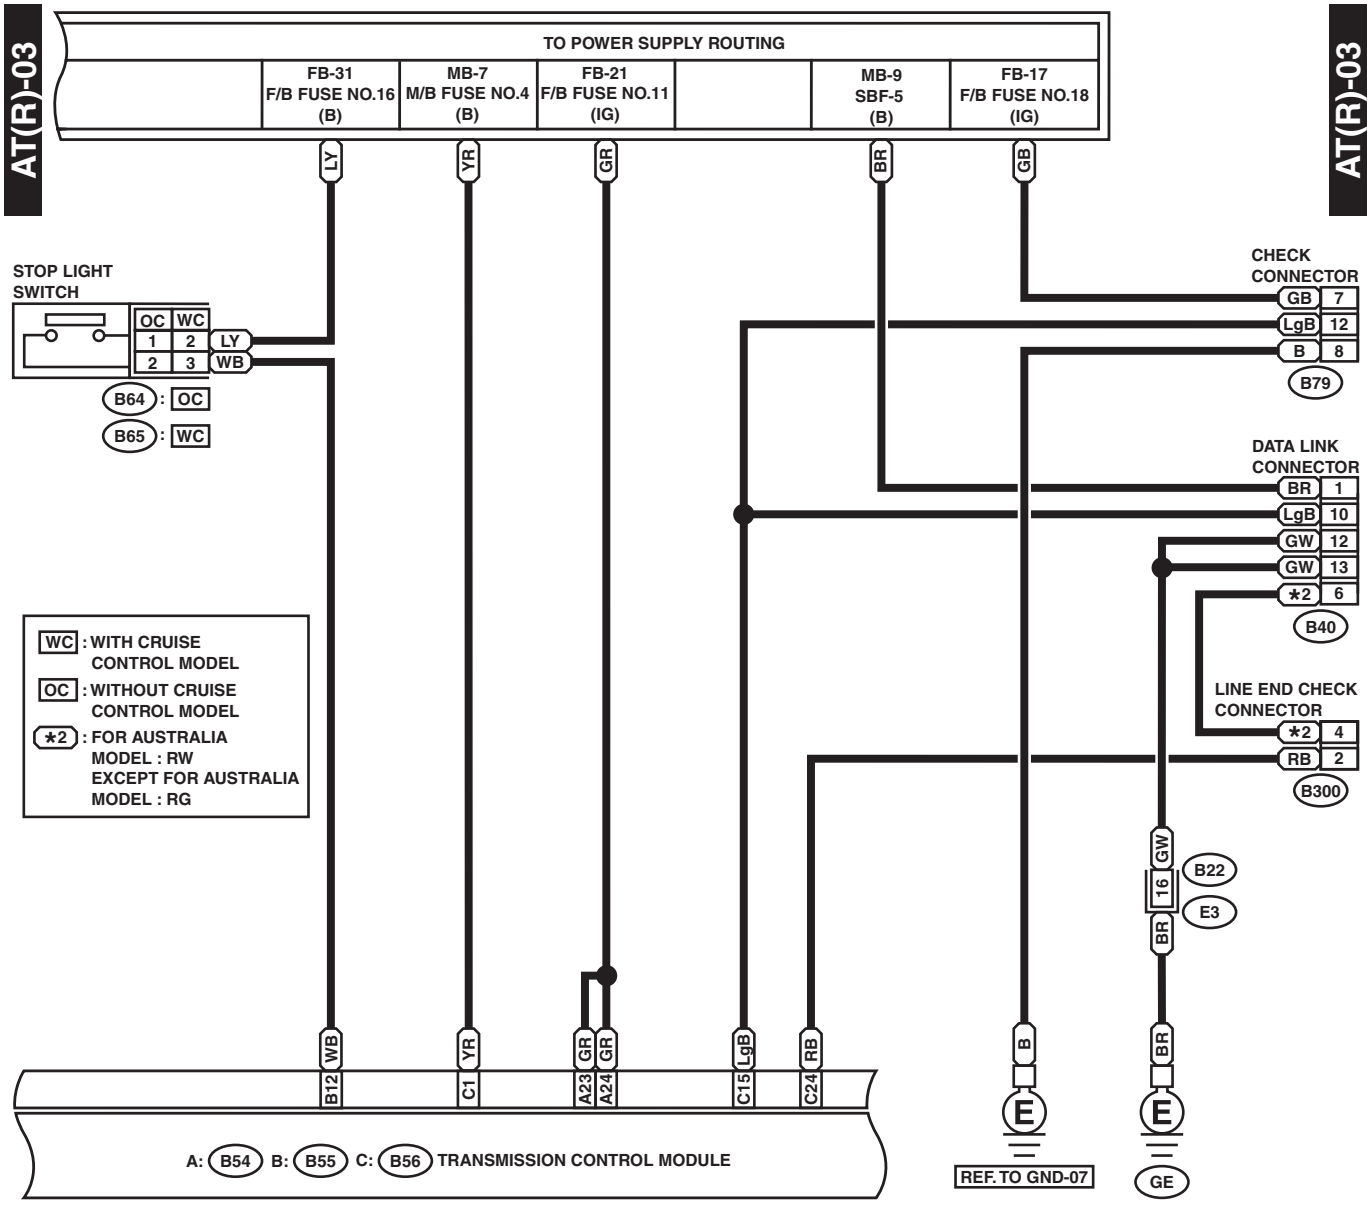

B64 (BLACK)

B65 (BLACK)

B300

B79 (GRAY)



B22 (BROWN)



B40 (BLACK)



A: B54



B: B55 (GRAY)



C: B56 (GREEN)



WI-02292

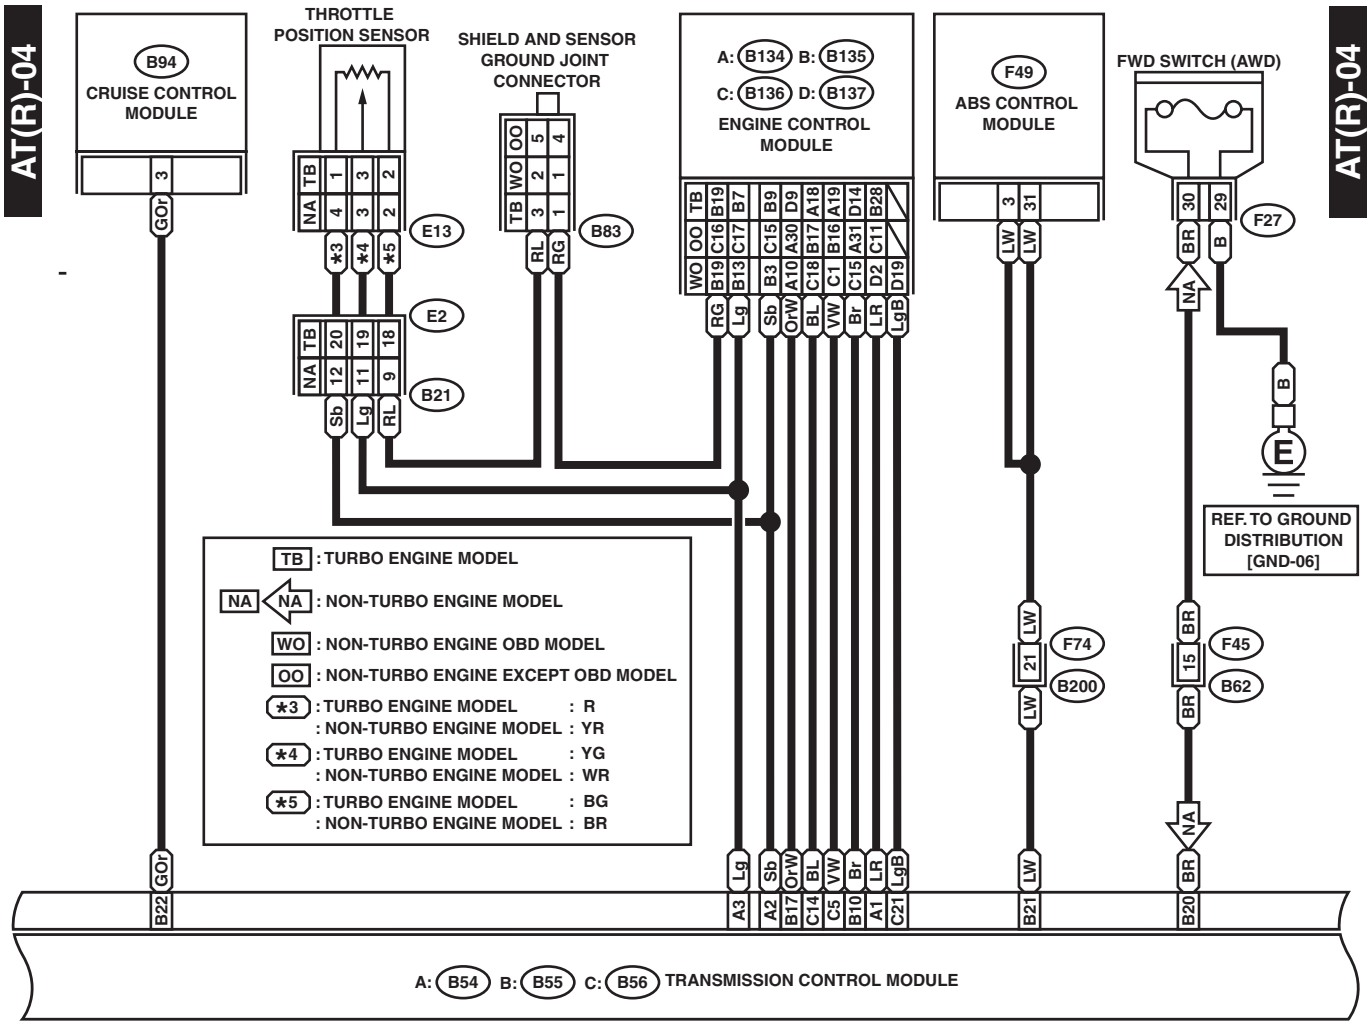
AT(R)-04
B94
CRUISE CONTROL MODULE
THROTTLE POSITION SENSOR
SHIELD AND SENSOR GROUND JOINT CONNECTOR
A: B134 B: B135
C: B136 D: B137
ENGINE CONTROL MODULE
F49
ABS CONTROL MODULE
FWD SWITCH (AWD)
E13
B83
E2
B21
F27
B
E
REF. TO GROUND DISTRIBUTION [GND-06]
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL
WO : NON-TURBO ENGINE OBD MODEL
OO : NON-TURBO ENGINE EXCEPT OBD MODEL
*3 : TURBO ENGINE MODEL : R
: NON-TURBO ENGINE MODEL : YR
*4 : TURBO ENGINE MODEL : YG
: NON-TURBO ENGINE MODEL : WR
*5 : TURBO ENGINE MODEL : BG
: NON-TURBO ENGINE MODEL : BR
F74
B200
F45
B62
B22
B21
B20
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE

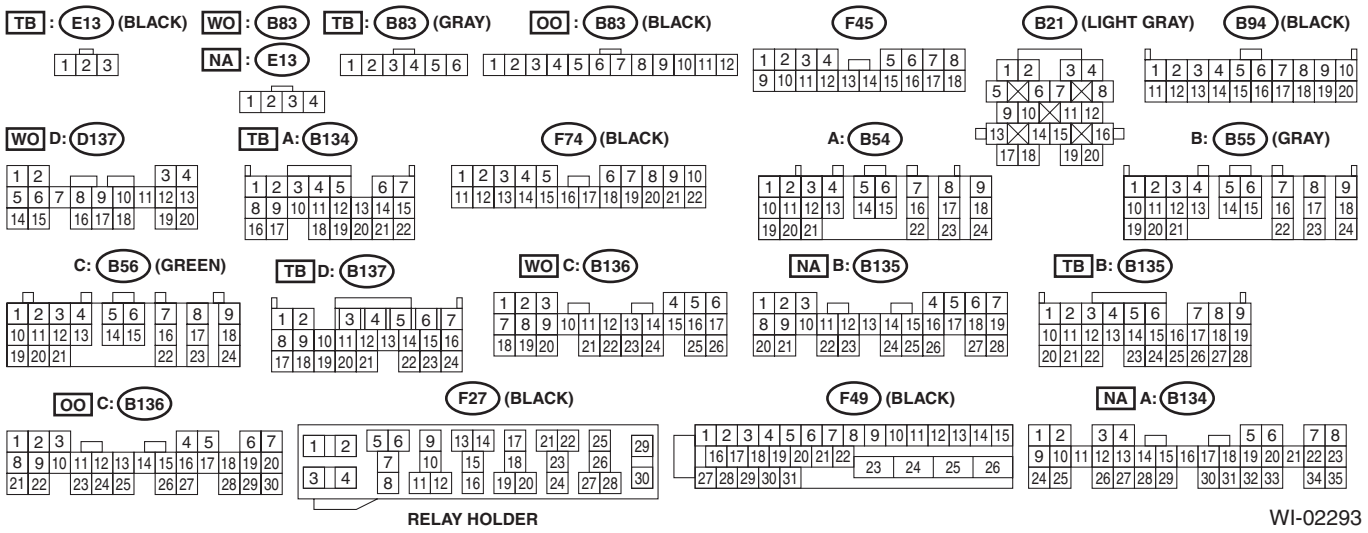
TB : E13 (BLACK)
WO : B83
TB : B83 (GRAY)
OO : B83 (BLACK)
NA : E13
F45
B21 (LIGHT GRAY)
B94 (BLACK)
WO D: D137
TB A: B134
F74 (BLACK)
A: B54
B: B55 (GRAY)
C: B56 (GREEN)
TB D: B137
WO C: B136
NA B: B135
TB B: B135
OO C: B136
F27 (BLACK)
F49 (BLACK)
NA A: B134
RELAY HOLDER

WI-02293

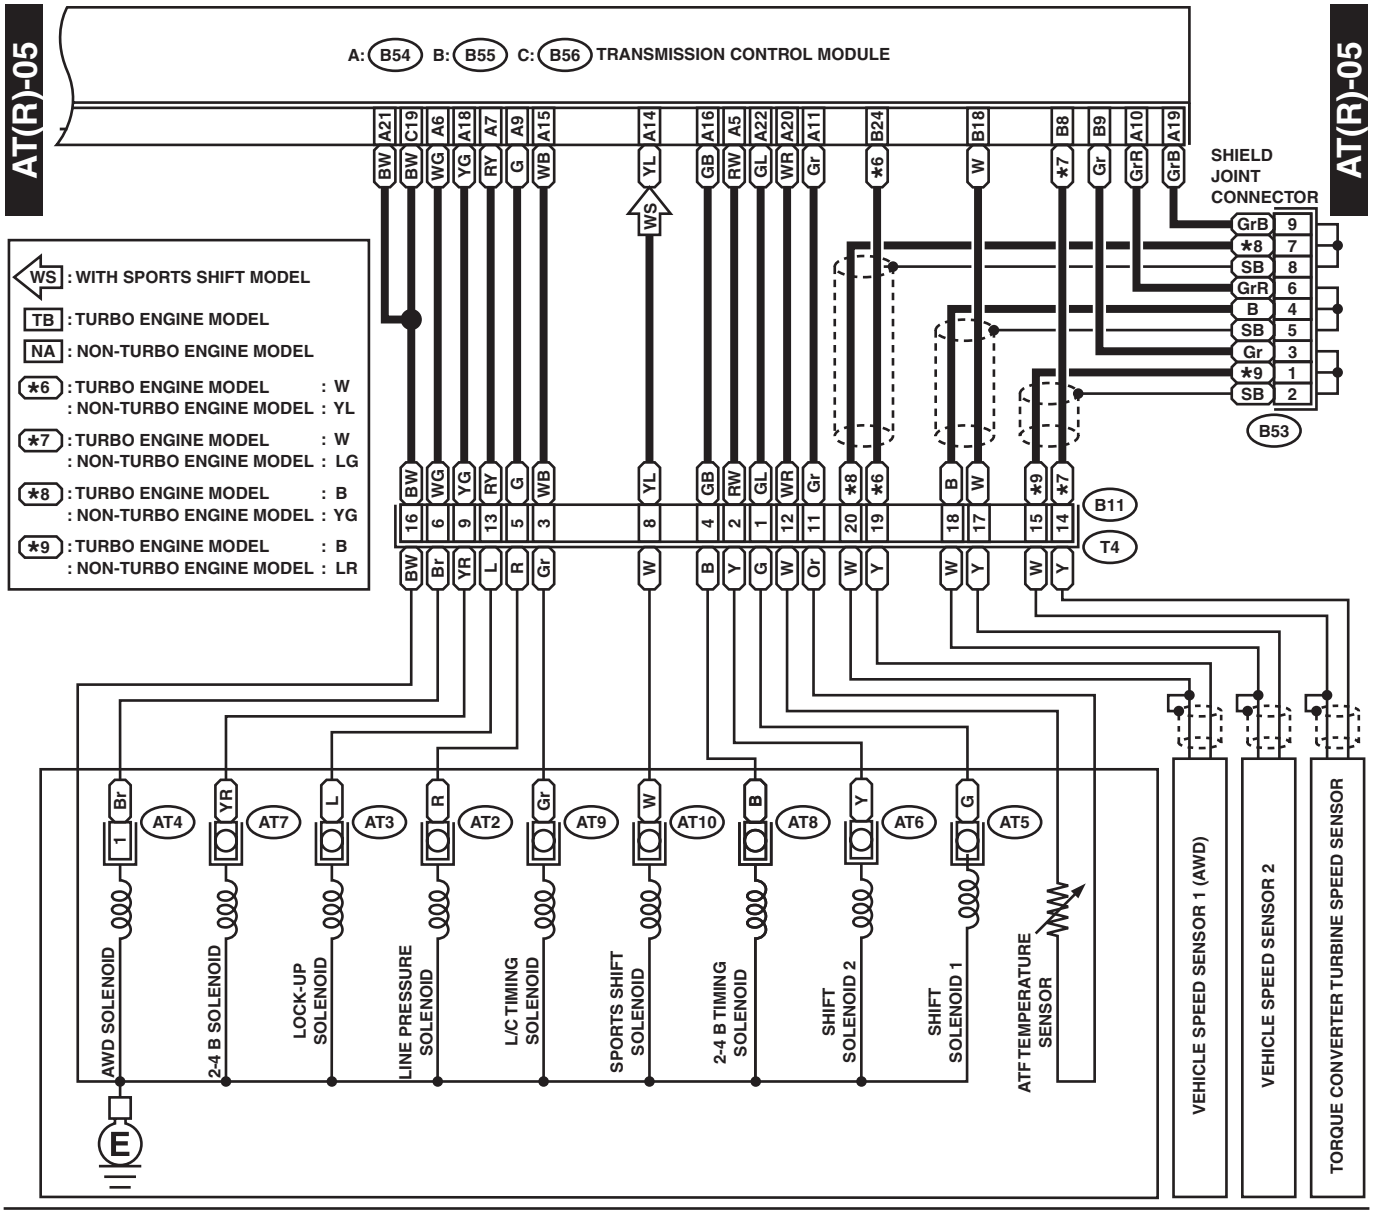
AT(R)-05
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE
AT(R)-05
SHIELD JOINT CONNECTOR
WS : WITH SPORTS SHIFT MODEL
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL
*6 : TURBO ENGINE MODEL : W
: NON-TURBO ENGINE MODEL : YL
*7 : TURBO ENGINE MODEL : W
: NON-TURBO ENGINE MODEL : LG
*8 : TURBO ENGINE MODEL : B
: NON-TURBO ENGINE MODEL : YG
*9 : TURBO ENGINE MODEL : B
: NON-TURBO ENGINE MODEL : LR
B53
B11
T4
AT4
AT7
AT3
AT2
AT9
AT10
AT8
AT6
AT5
AWD SOLENOID
2-4 B SOLENOID
LOCK-UP SOLENOID
LINE PRESSURE SOLENOID
L/C TIMING SOLENOID
SPORTS SHIFT SOLENOID
2-4 B TIMING SOLENOID
SHIFT SOLENOID 2
SHIFT SOLENOID 1
ATF TEMPERATURE SENSOR
VEHICLE SPEED SENSOR 1 (AWD)
VEHICLE SPEED SENSOR 2
TORQUE CONVERTER TURBINE SPEED SENSOR

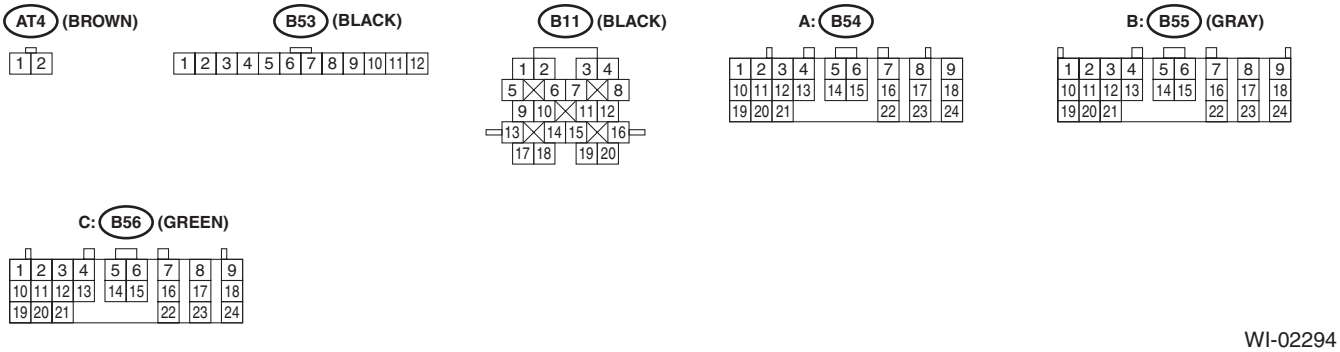
AT4 (BROWN)
B53 (BLACK)
B11 (BLACK)
A: B54
B: B55 (GRAY)
C: B56 (GREEN)

WI-02294

9. Audio System

A: SCHEMATIC

1. LHD MODEL

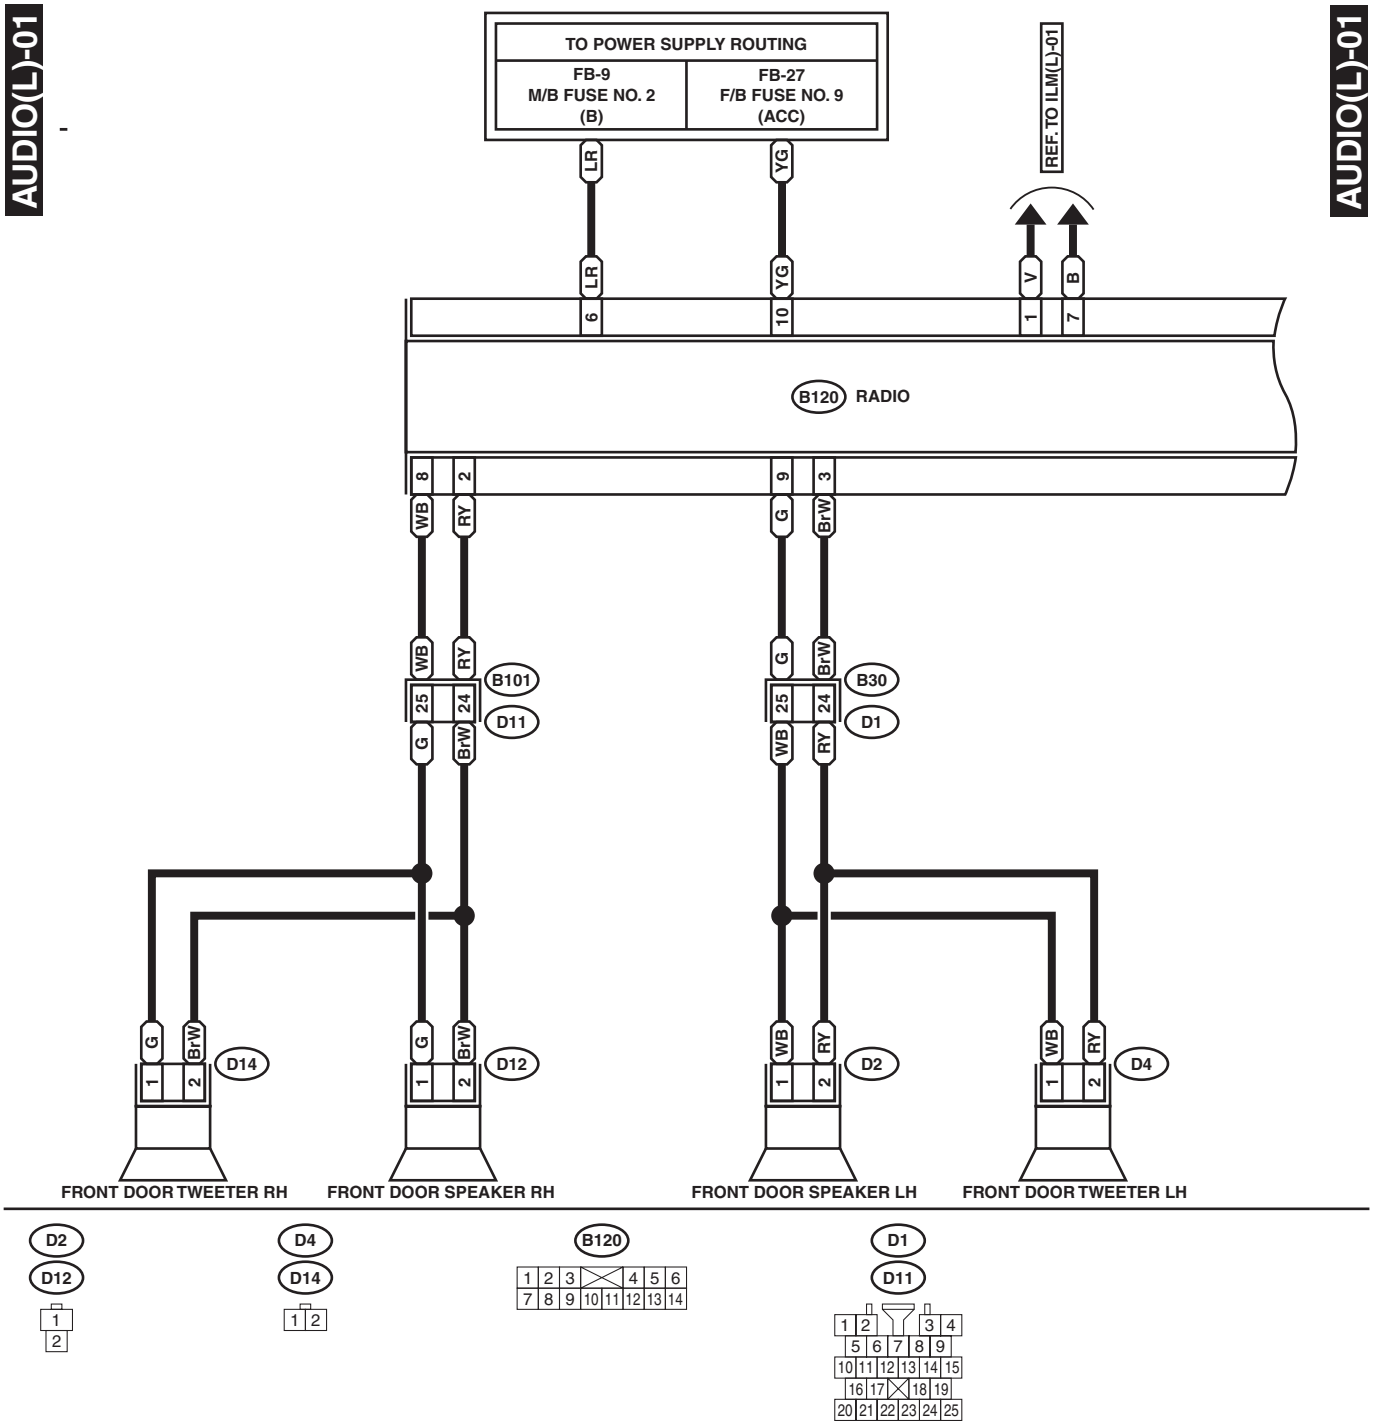

WI-02295

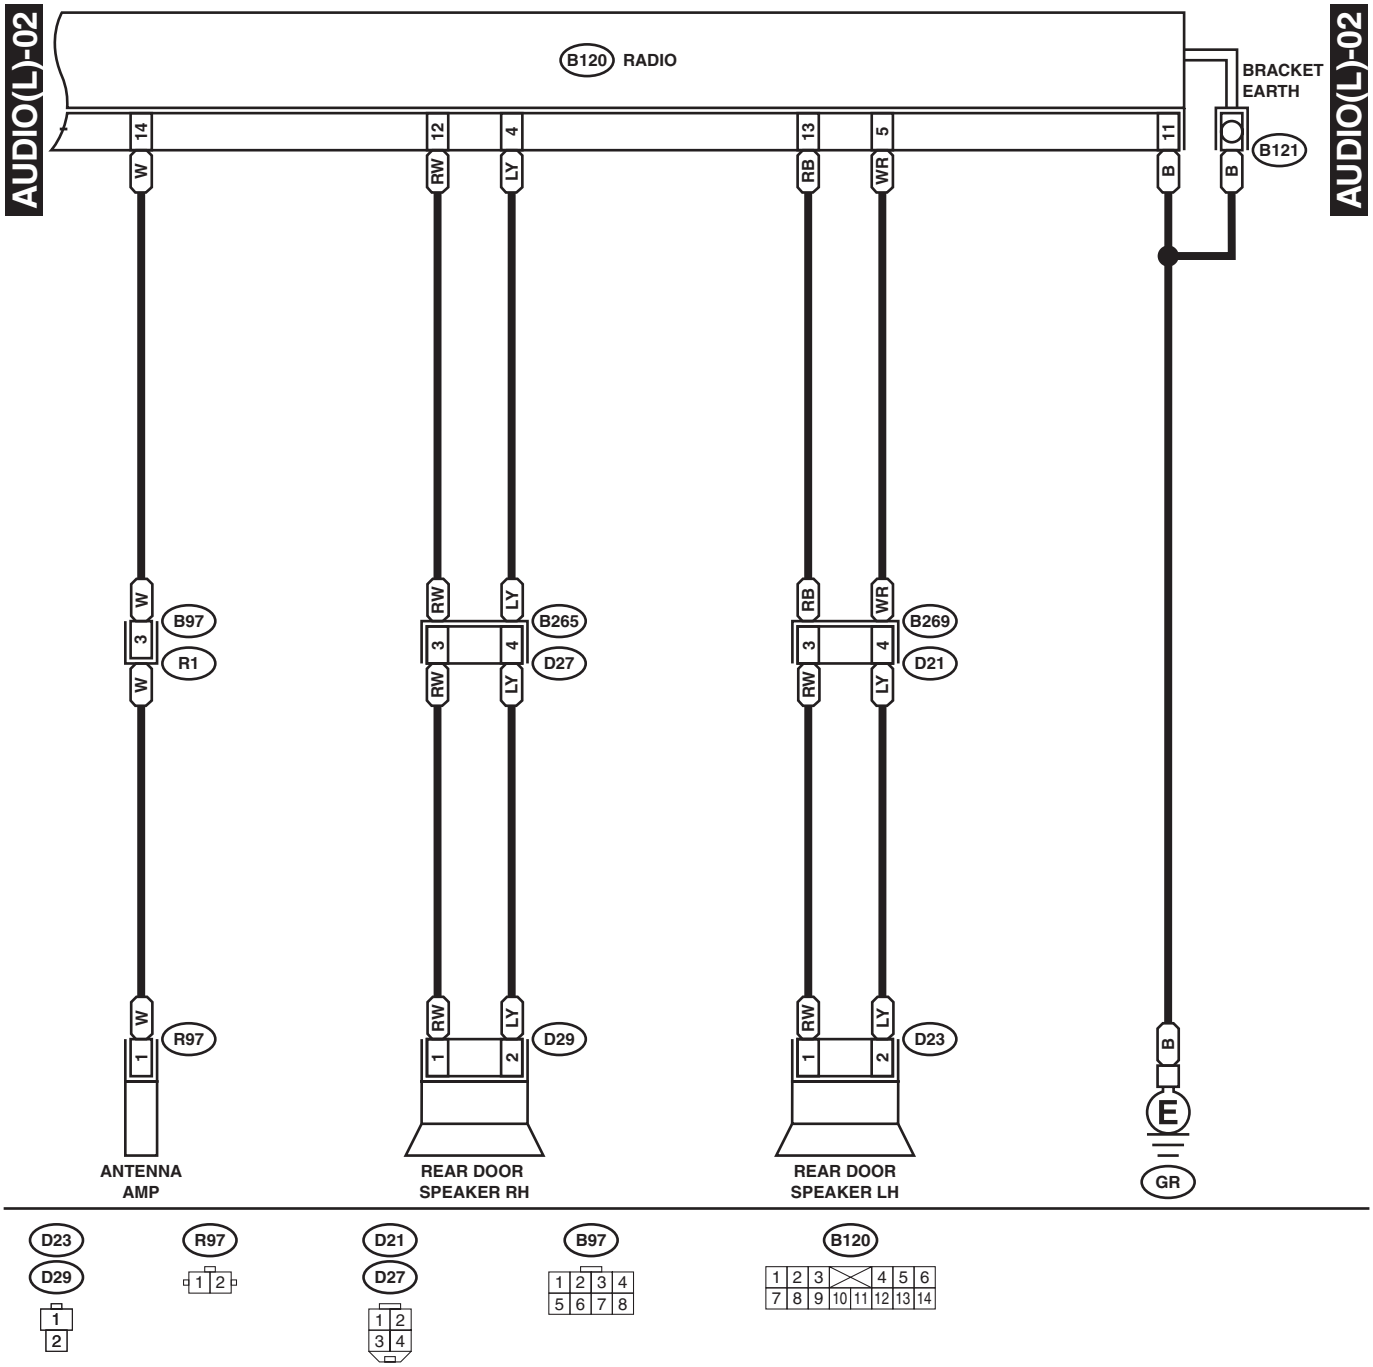
AUDIO(L)-02
AUDIO(L)-02
B120 RADIO
BRACKET EARTH
B121
14
12
4
13
5
11
W
RW
LY
RB
WR
B
B97
R1
B265
D27
B269
D21
R97
D29
D23
ANTENNA AMP
REAR DOOR SPEAKER RH
REAR DOOR SPEAKER LH
E
GR
D23
D29
R97
D21
D27
B97
B120

WI-02296

2. RHD MODEL

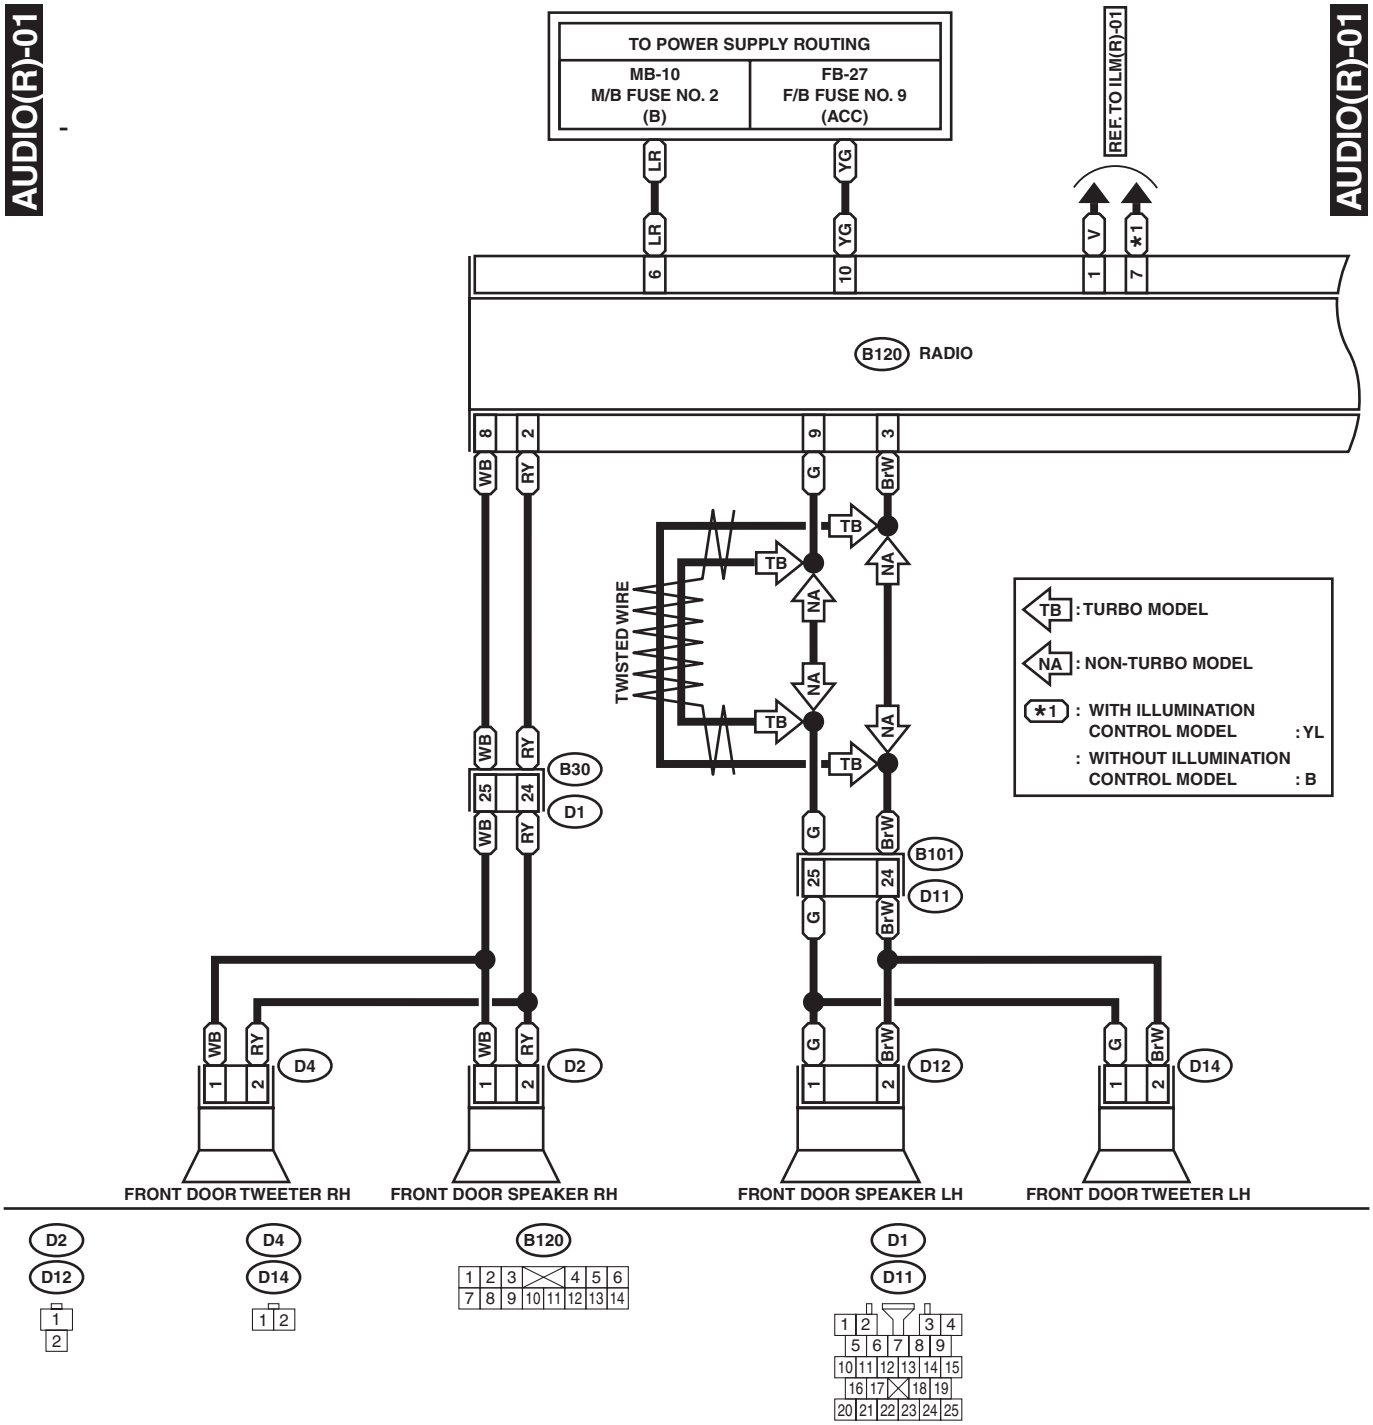

WI-02297

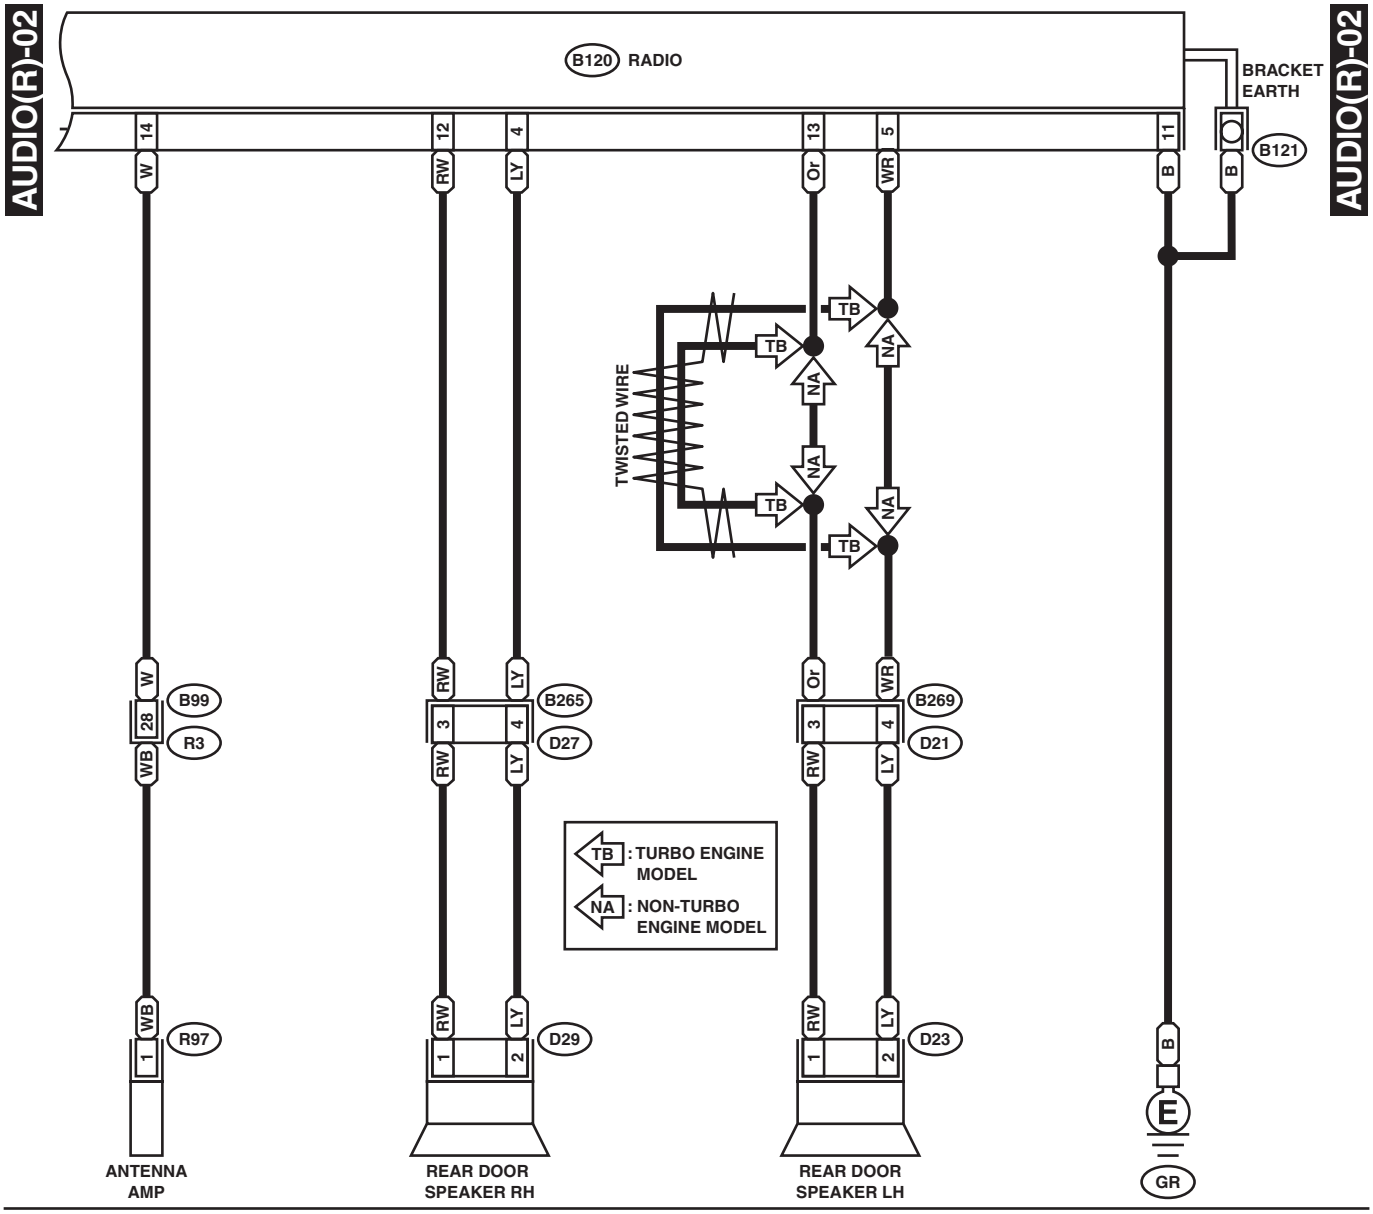
AUDIO(R)-02
AUDIO(R)-02
B120 RADIO
BRACKET EARTH
B121
14
12
4
13
5
11
W
RW
LY
Or
WR
B
B
TB
NA
TWISTED WIRE
B99
28
R3
WB
B265
3
4
D27
B269
D21
R97
1
2
D29
D23
B
E
GR
ANTENNA AMP
REAR DOOR SPEAKER RH
REAR DOOR SPEAKER LH
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL

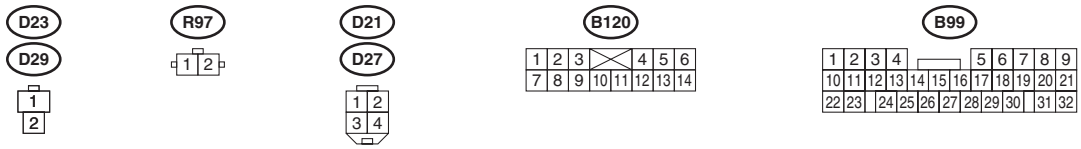
D23
D29
R97
D21
D27
B120
B99

WI-02298

10.Charging System

A: SCHEMATIC

1. LHD MODEL

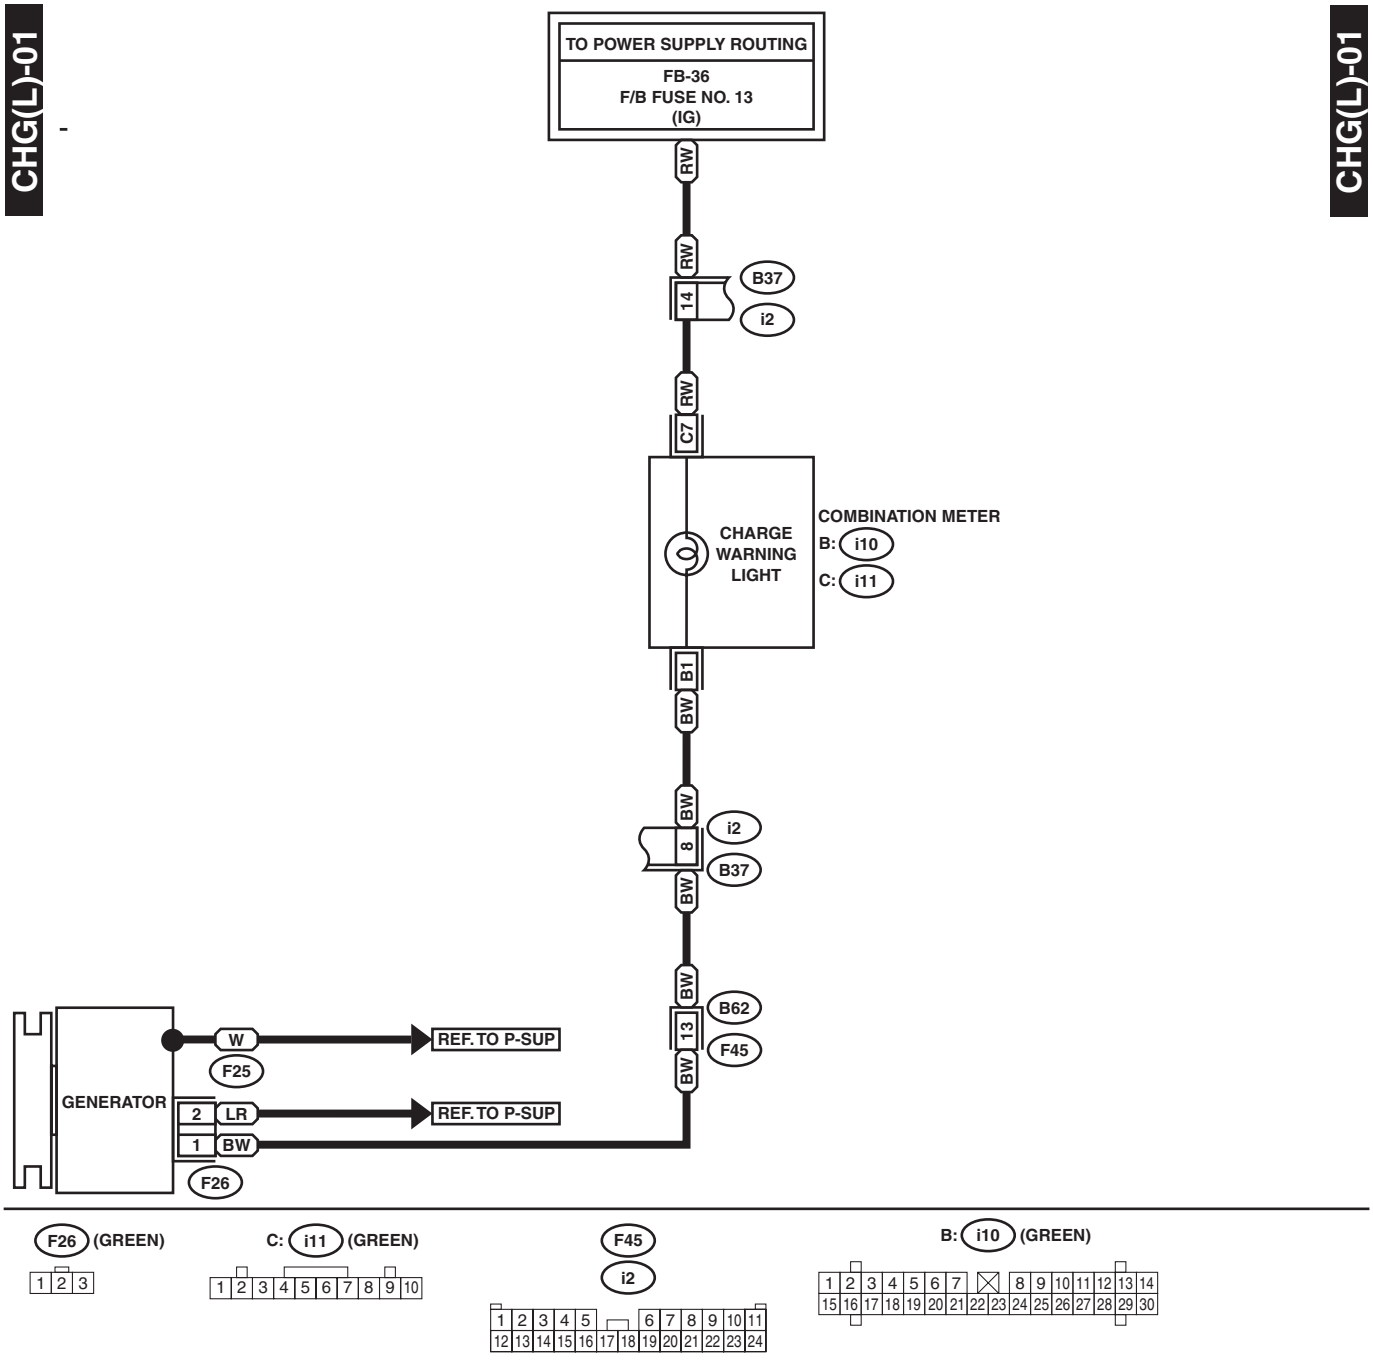

WI-02299

2. RHD MODEL

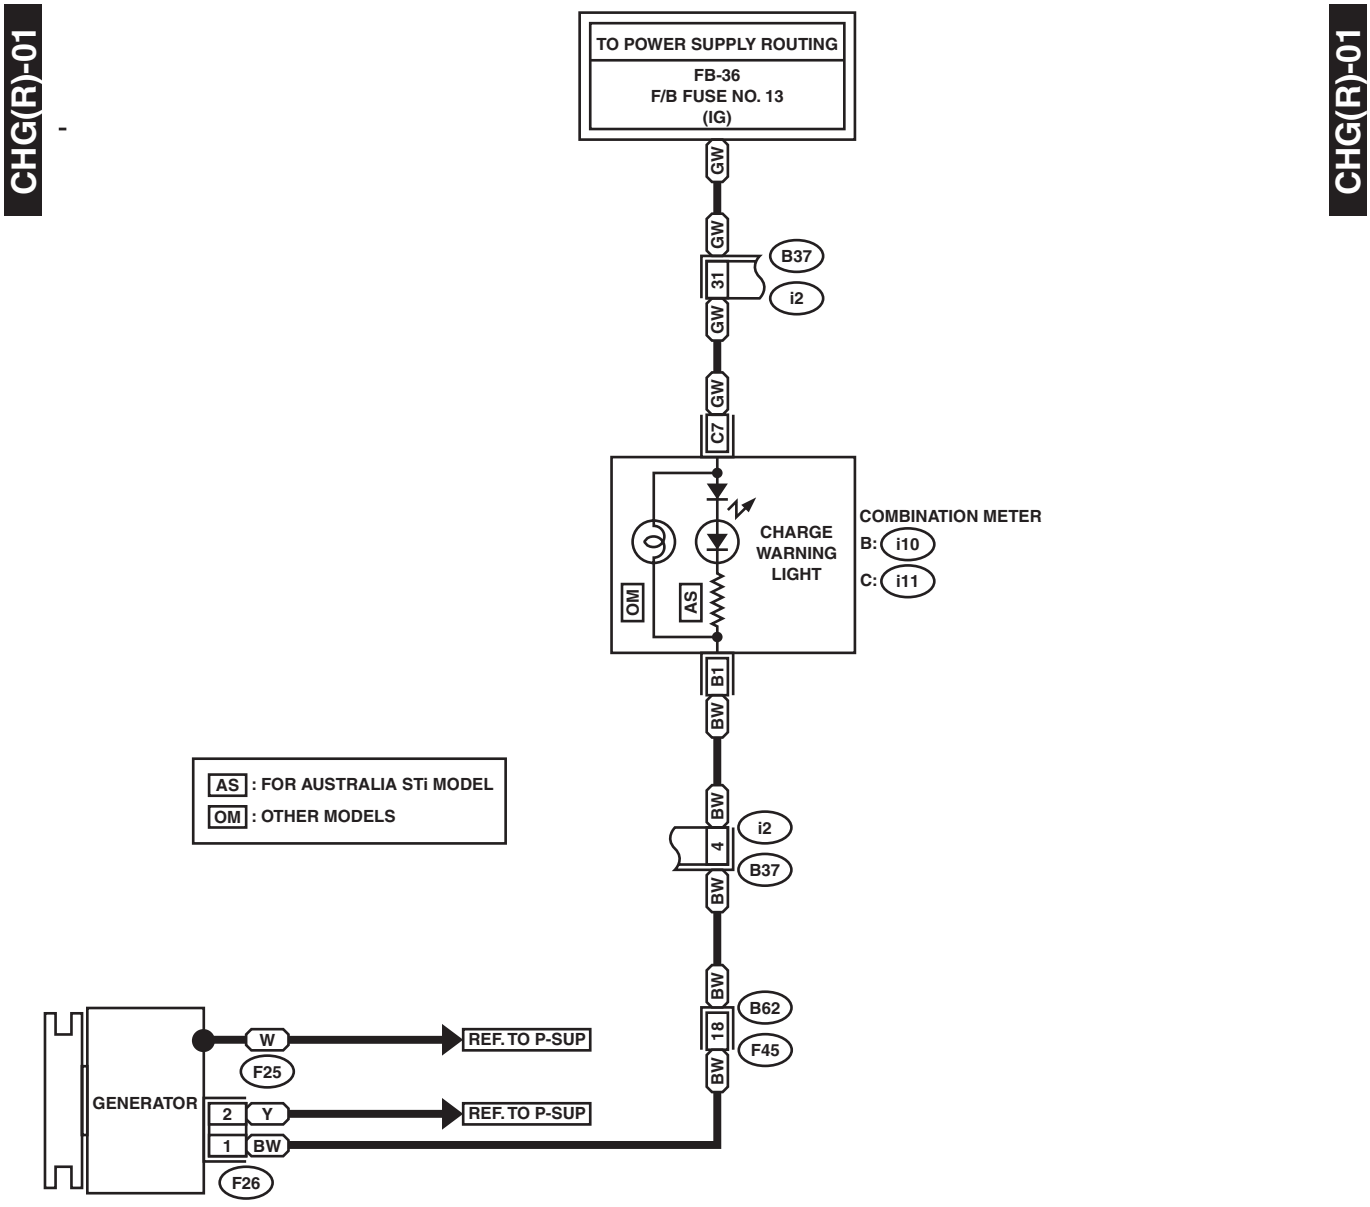

WI-02300

11.Combination Meter

A: SCHEMATIC

1. EXCEPT FOR AUSTRALIA STi MODEL

CM(EA)-01

CM(EA)-01

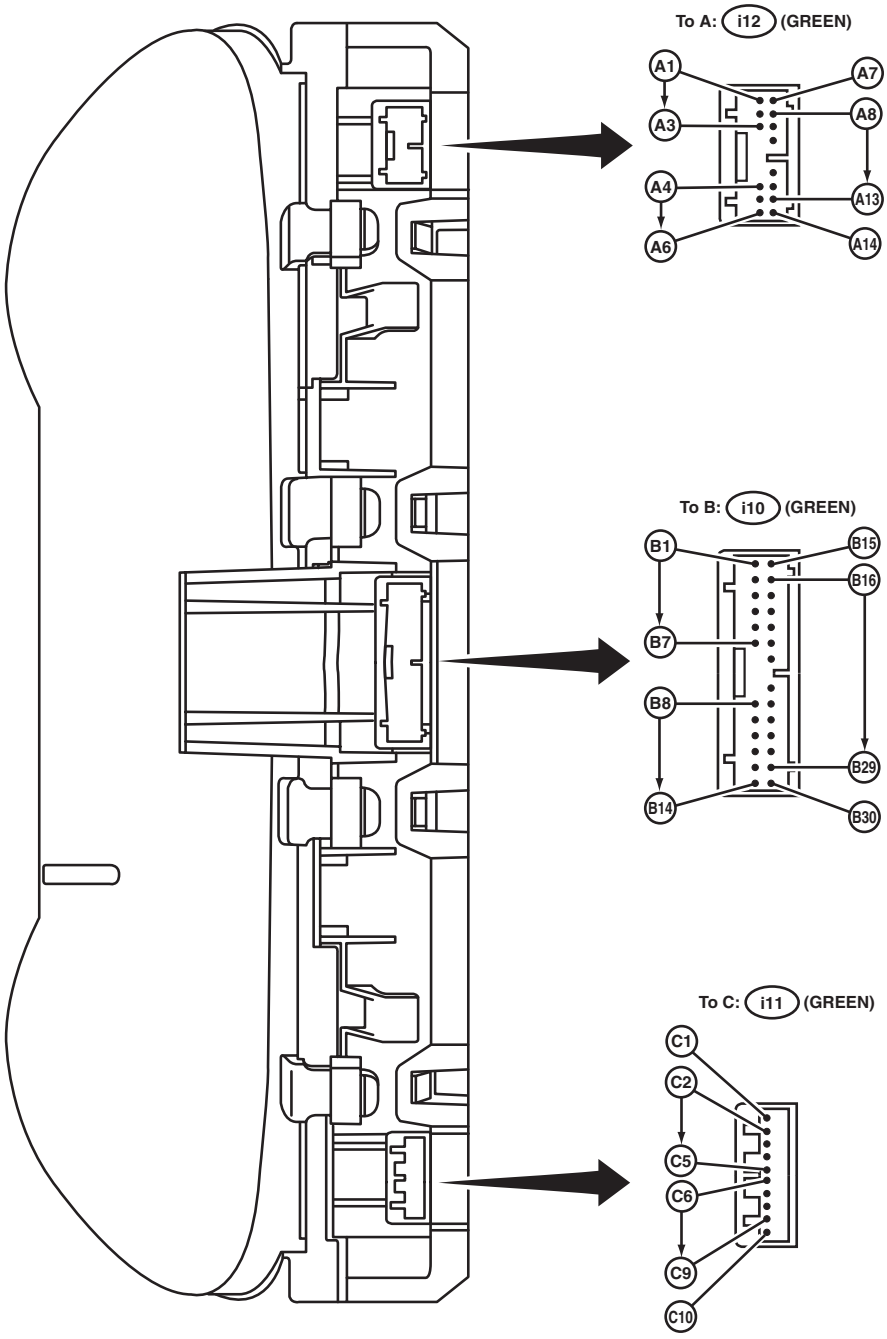

WI-02301

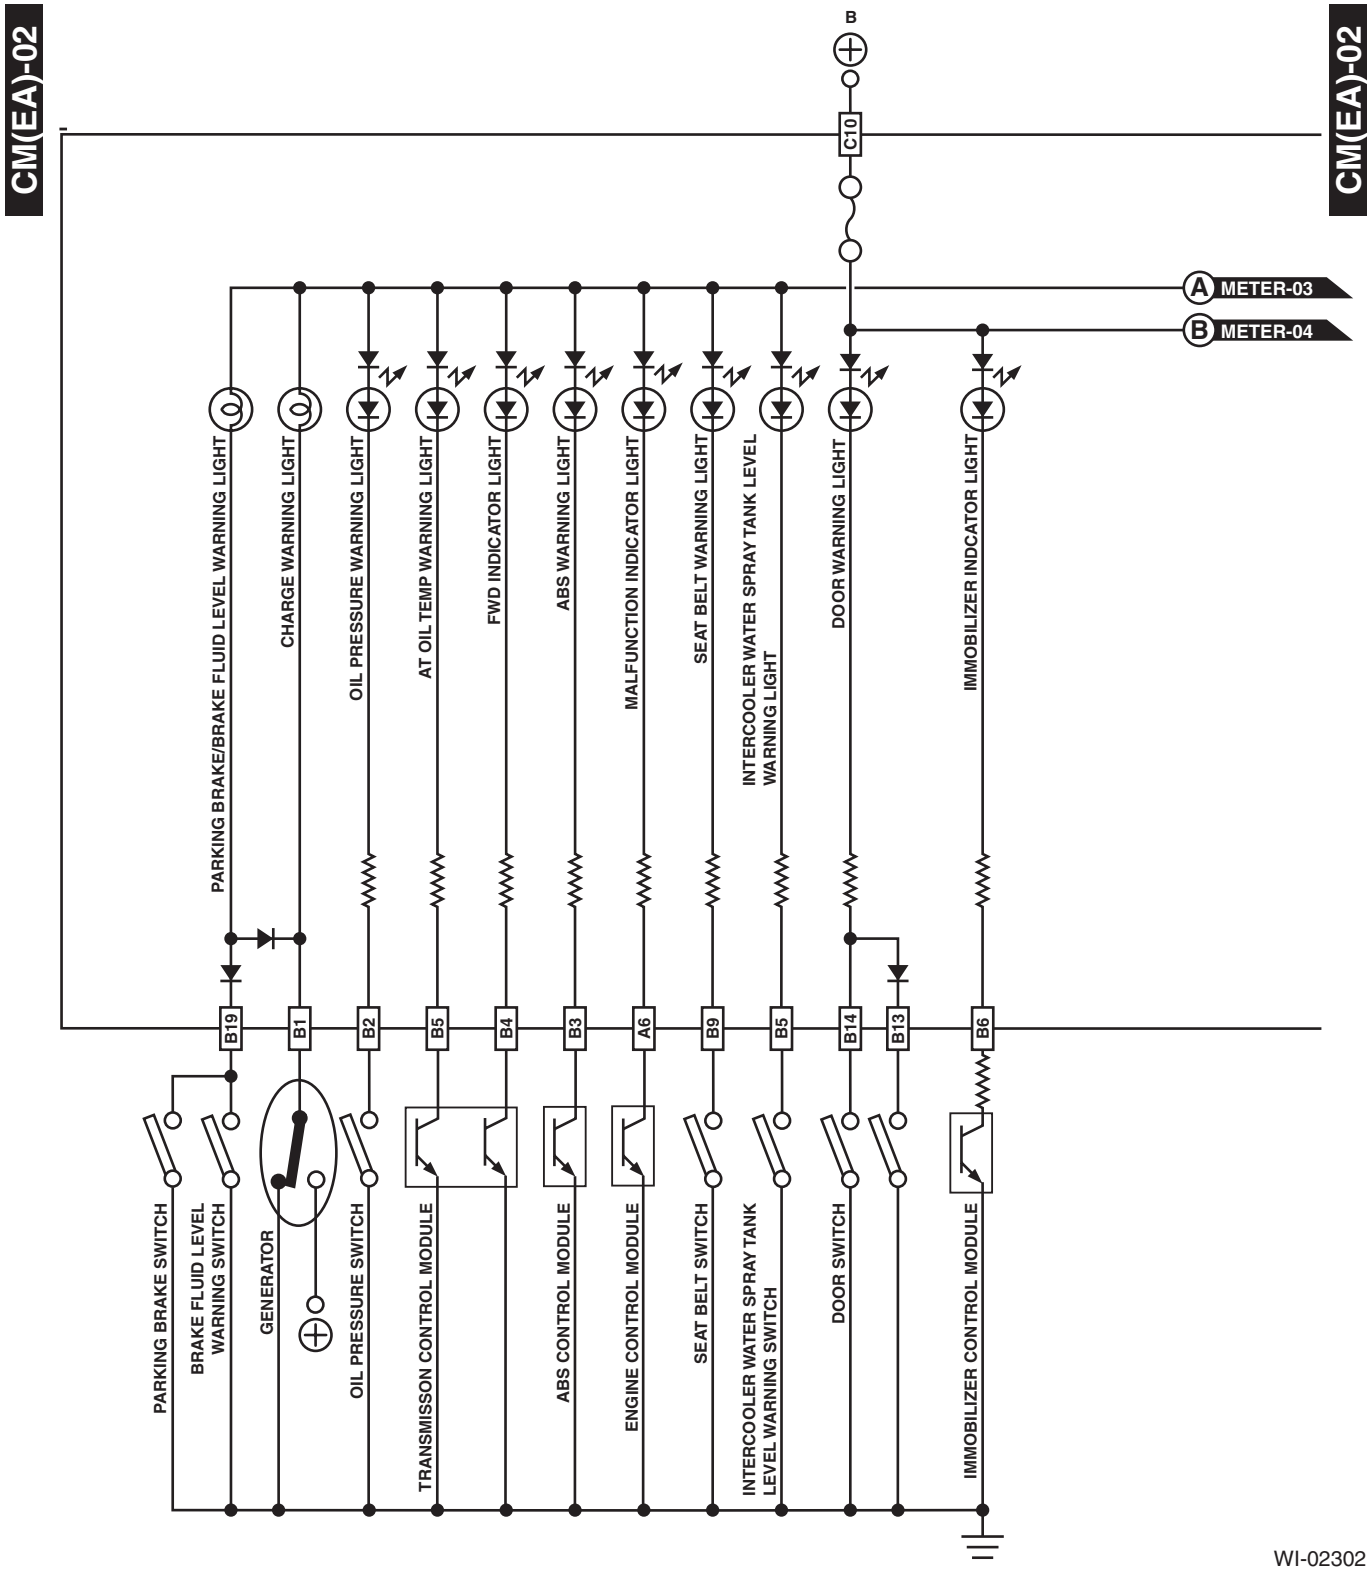
CM(EA)-02
CM(EA)-02
B
C10
A METER-03
B METER-04
PARKING BRAKE/BRAKE FLUID LEVEL WARNING LIGHT
CHARGE WARNING LIGHT
OIL PRESSURE WARNING LIGHT
AT OIL TEMP WARNING LIGHT
FWD INDICATOR LIGHT
ABS WARNING LIGHT
MALFUNCTION INDICATOR LIGHT
SEAT BELT WARNING LIGHT
INTERCOOLER WATER SPRAY TANK LEVEL WARNING LIGHT
DOOR WARNING LIGHT
IMMOBILIZER INDCATOR LIGHT
B19
B1
B2
B5
B4
B3
A6
B9
B5
B14
B13
B6
PARKING BRAKE SWITCH
BRAKE FLUID LEVEL WARNING SWITCH
GENERATOR
OIL PRESSURE SWITCH
TRANSMISSON CONTROL MODULE
ABS CONTROL MODULE
ENGINE CONTROL MODULE
SEAT BELT SWITCH
INTERCOOLER WATER SPRAY TANK LEVEL WARNING SWITCH
DOOR SWITCH
IMMOBILIZER CONTROL MODULE

WI-02302

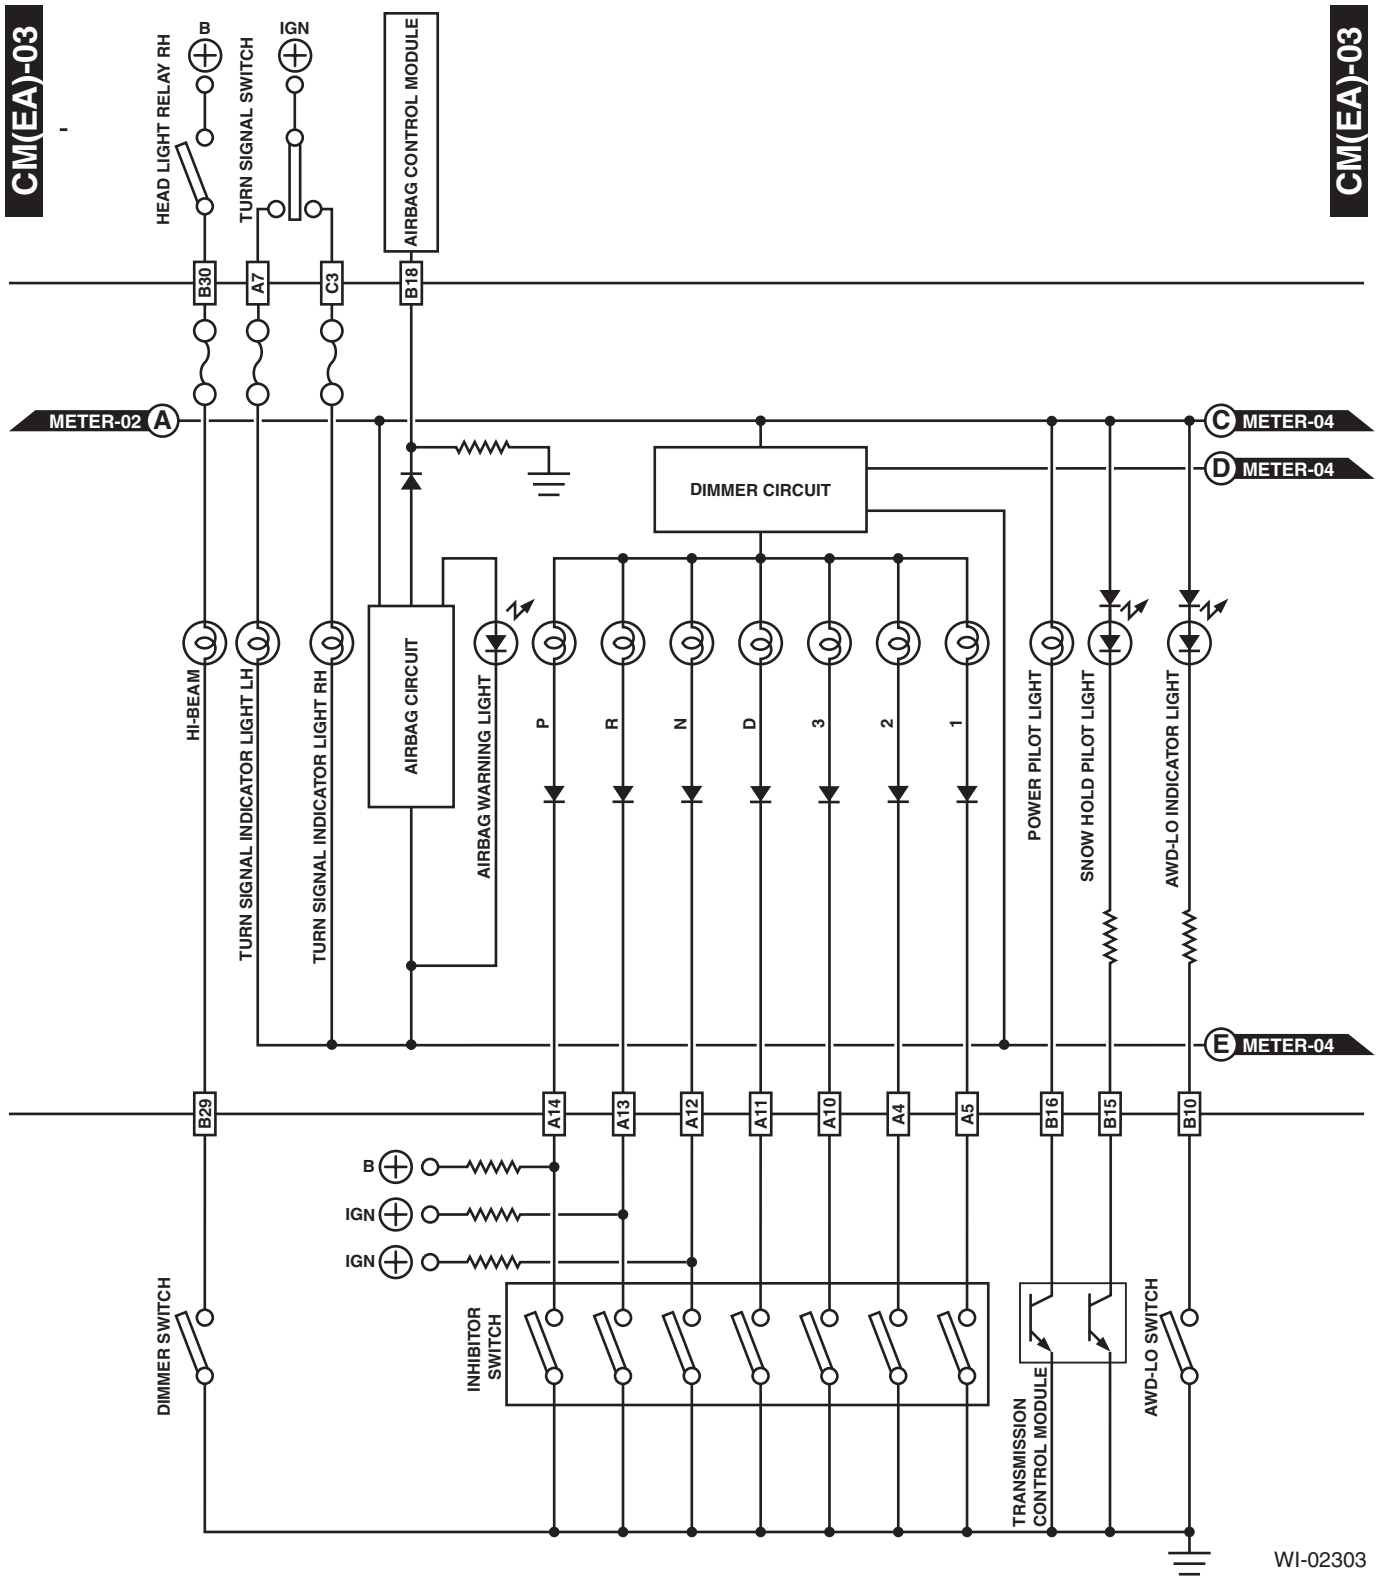
CM(EA)-03
CM(EA)-03
HEAD LIGHT RELAY RH
B
IGN
TURN SIGNAL SWITCH
AIRBAG CONTROL MODULE
B30
A7
C3
B18
METER-02 A
C METER-04
D METER-04
E METER-04
DIMMER CIRCUIT
HI-BEAM
TURN SIGNAL INDICATOR LIGHT LH
TURN SIGNAL INDICATOR LIGHT RH
AIRBAG CIRCUIT
AIRBAG WARNING LIGHT
P
R
N
D
3
2
1
POWER PILOT LIGHT
SNOW HOLD PILOT LIGHT
AWD-LO INDICATOR LIGHT
B29
A14
A13
A12
A11
A10
A4
A5
B16
B15
B10
B
IGN
IGN
DIMMER SWITCH
INHIBITOR SWITCH
TRANSMISSION CONTROL MODULE
AWD-LO SWITCH
WI-02303

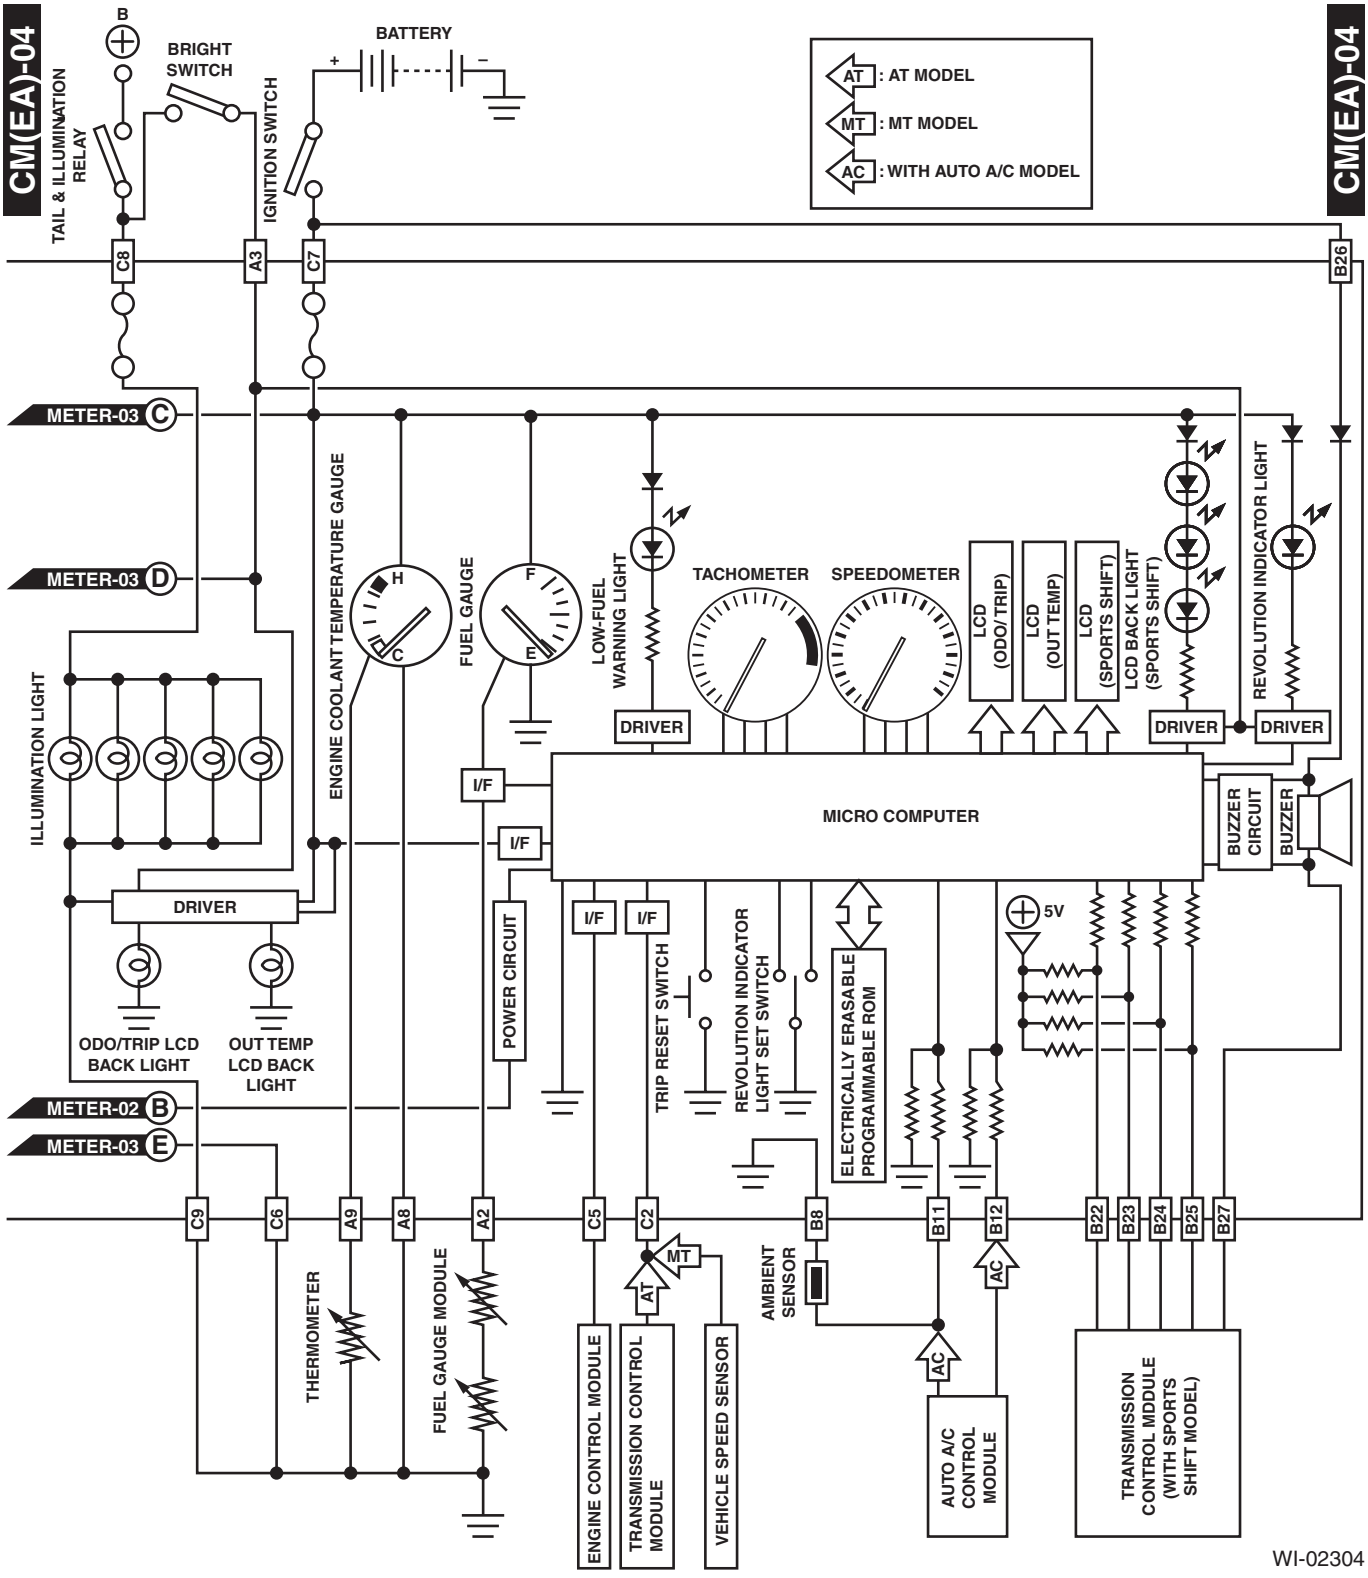
CM(EA)-04
CM(EA)-04
B
BRIGHT SWITCH
BATTERY
TAIL & ILLUMINATION RELAY
IGNITION SWITCH
AT : AT MODEL
MT : MT MODEL
AC : WITH AUTO A/C MODEL
C8
A3
C7
B26
METER-03 C
METER-03 D
METER-02 B
METER-03 E
ILLUMINATION LIGHT
ENGINE COOLANT TEMPERATURE GAUGE
FUEL GAUGE
LOW-FUEL WARNING LIGHT
TACHOMETER
SPEEDOMETER
LCD (ODO/TRIP)
LCD (OUT TEMP)
LCD (SPORTS SHIFT)
LCD BACK LIGHT (SPORTS SHIFT)
REVOLUTION INDICATOR LIGHT
DRIVER
I/F
MICRO COMPUTER
BUZZER CIRCUIT
BUZZER
POWER CIRCUIT
TRIP RESET SWITCH
REVOLUTION INDICATOR LIGHT SET SWITCH
ELECTRICALLY ERASABLE PROGRAMMABLE ROM
5V
ODO/TRIP LCD BACK LIGHT
OUT TEMP LCD BACK LIGHT
C9
C6
A9
A8
A2
C5
C2
B8
B11
B12
B22
B23
B24
B25
B27
THERMOMETER
FUEL GAUGE MODULE
AMBIENT SENSOR
ENGINE CONTROL MODULE
TRANSMISSION CONTROL MODULE
VEHICLE SPEED SENSOR
AUTO A/C CONTROL MODULE
TRANSMISSION CONTROL MDDULE (WITH SPORTS SHIFT MODEL)
WI-02304

2. FOR AUSTRALIA STi MODEL

CM(FA)-01

CM(FA)-01

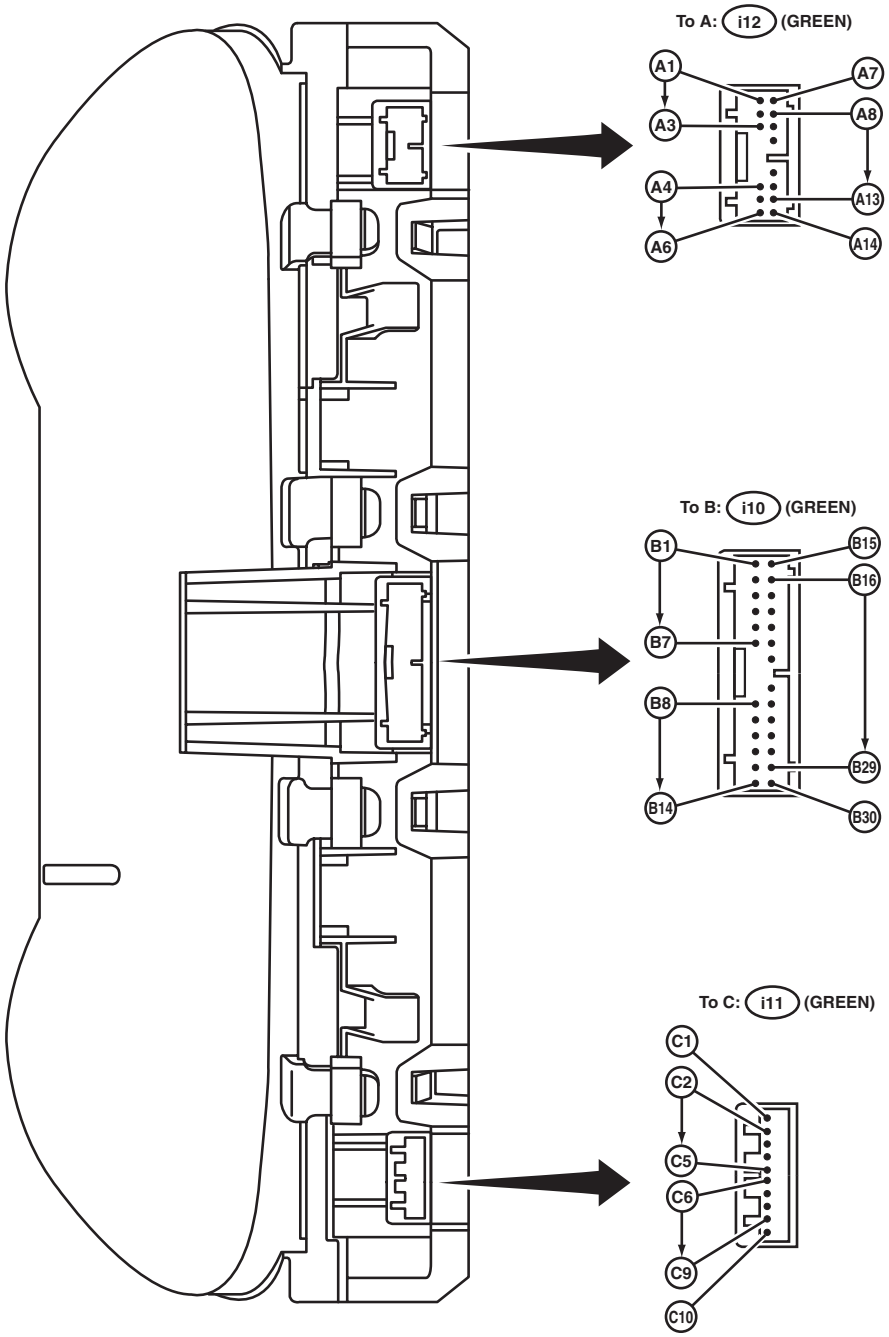

WI-02547

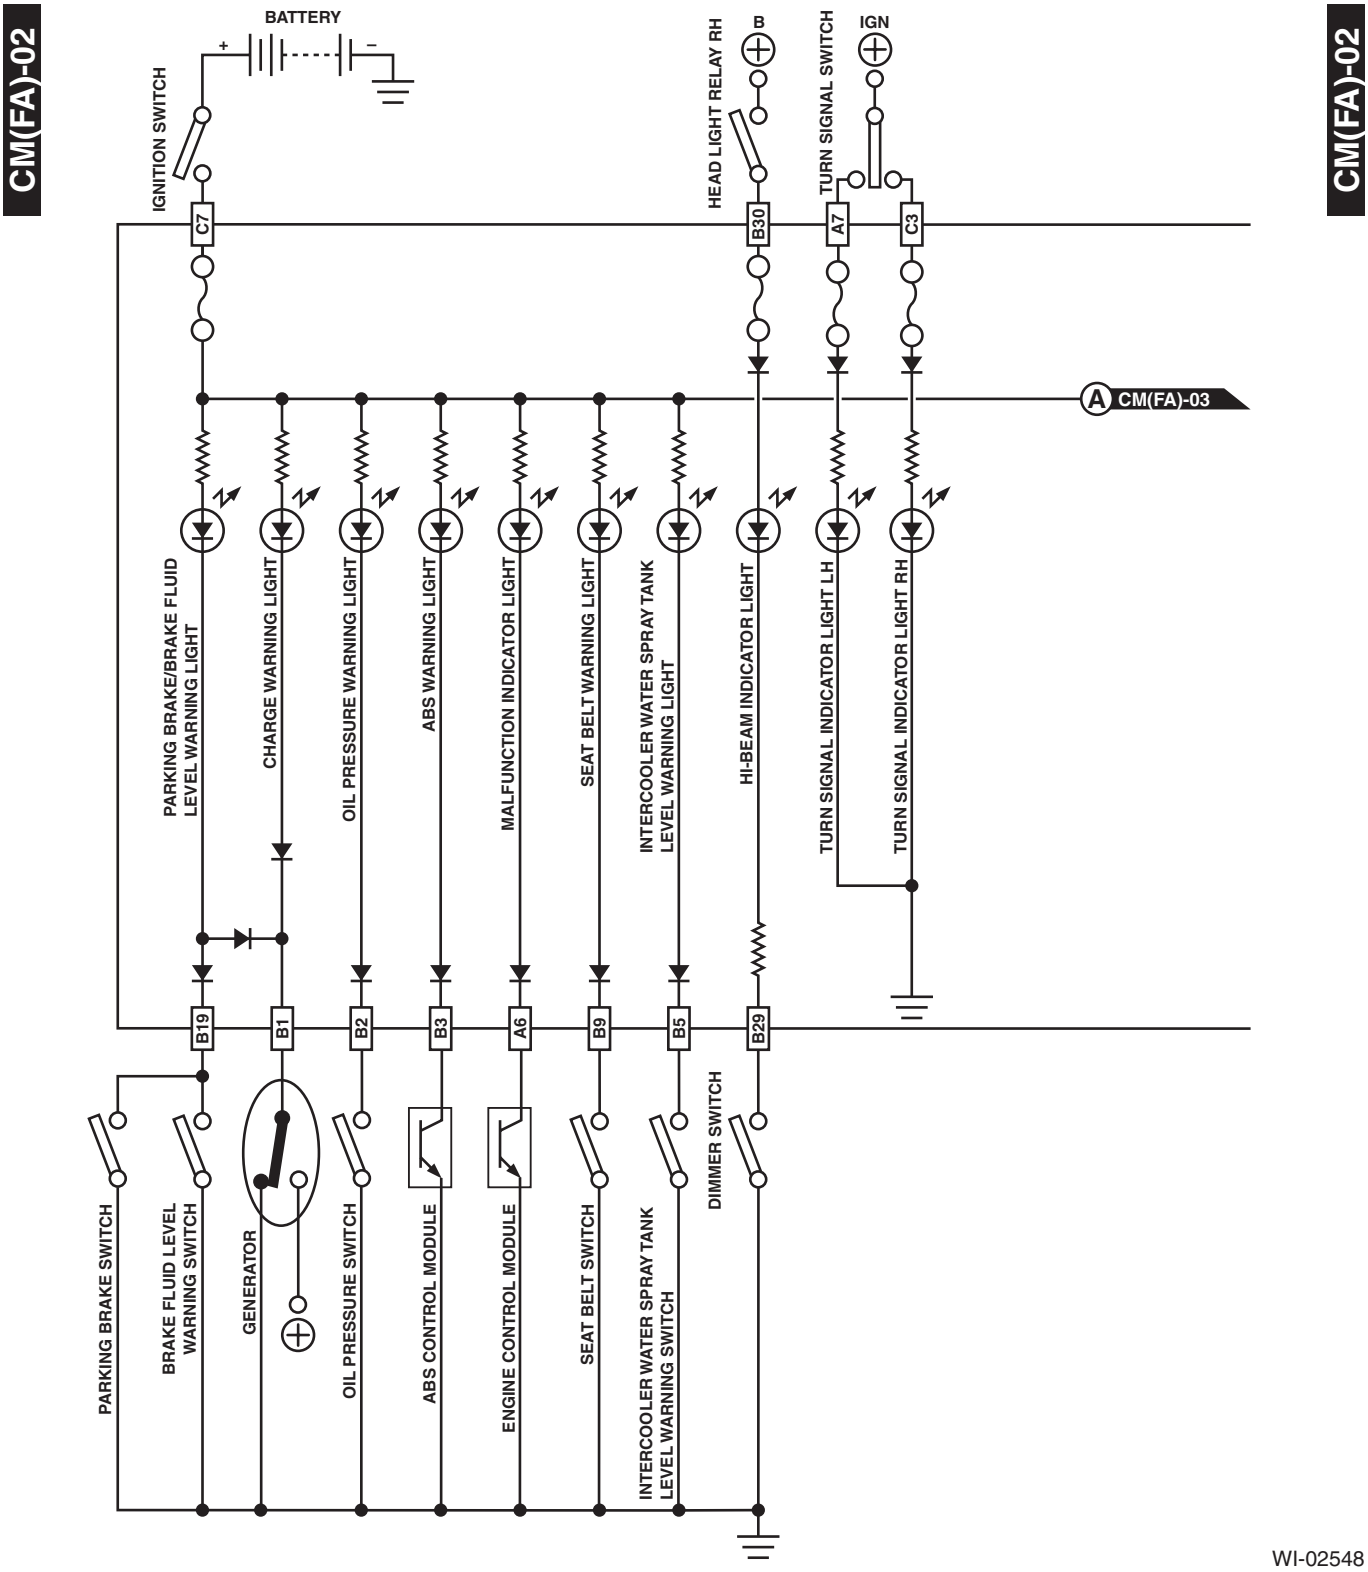
CM(FA)-02
CM(FA)-02
BATTERY
+
–
IGNITION SWITCH
C7
HEAD LIGHT RELAY RH
B
B30
TURN SIGNAL SWITCH
IGN
A7
C3
A CM(FA)-03
PARKING BRAKE/BRAKE FLUID LEVEL WARNING LIGHT
CHARGE WARNING LIGHT
OIL PRESSURE WARNING LIGHT
ABS WARNING LIGHT
MALFUNCTION INDICATOR LIGHT
SEAT BELT WARNING LIGHT
INTERCOOLER WATER SPRAY TANK LEVEL WARNING LIGHT
HI-BEAM INDICATOR LIGHT
TURN SIGNAL INDICATOR LIGHT LH
TURN SIGNAL INDICATOR LIGHT RH
B19
B1
B2
B3
A6
B9
B5
B29
PARKING BRAKE SWITCH
BRAKE FLUID LEVEL WARNING SWITCH
GENERATOR
OIL PRESSURE SWITCH
ABS CONTROL MODULE
ENGINE CONTROL MODULE
SEAT BELT SWITCH
INTERCOOLER WATER SPRAY TANK LEVEL WARNING SWITCH
DIMMER SWITCH

WI-02548

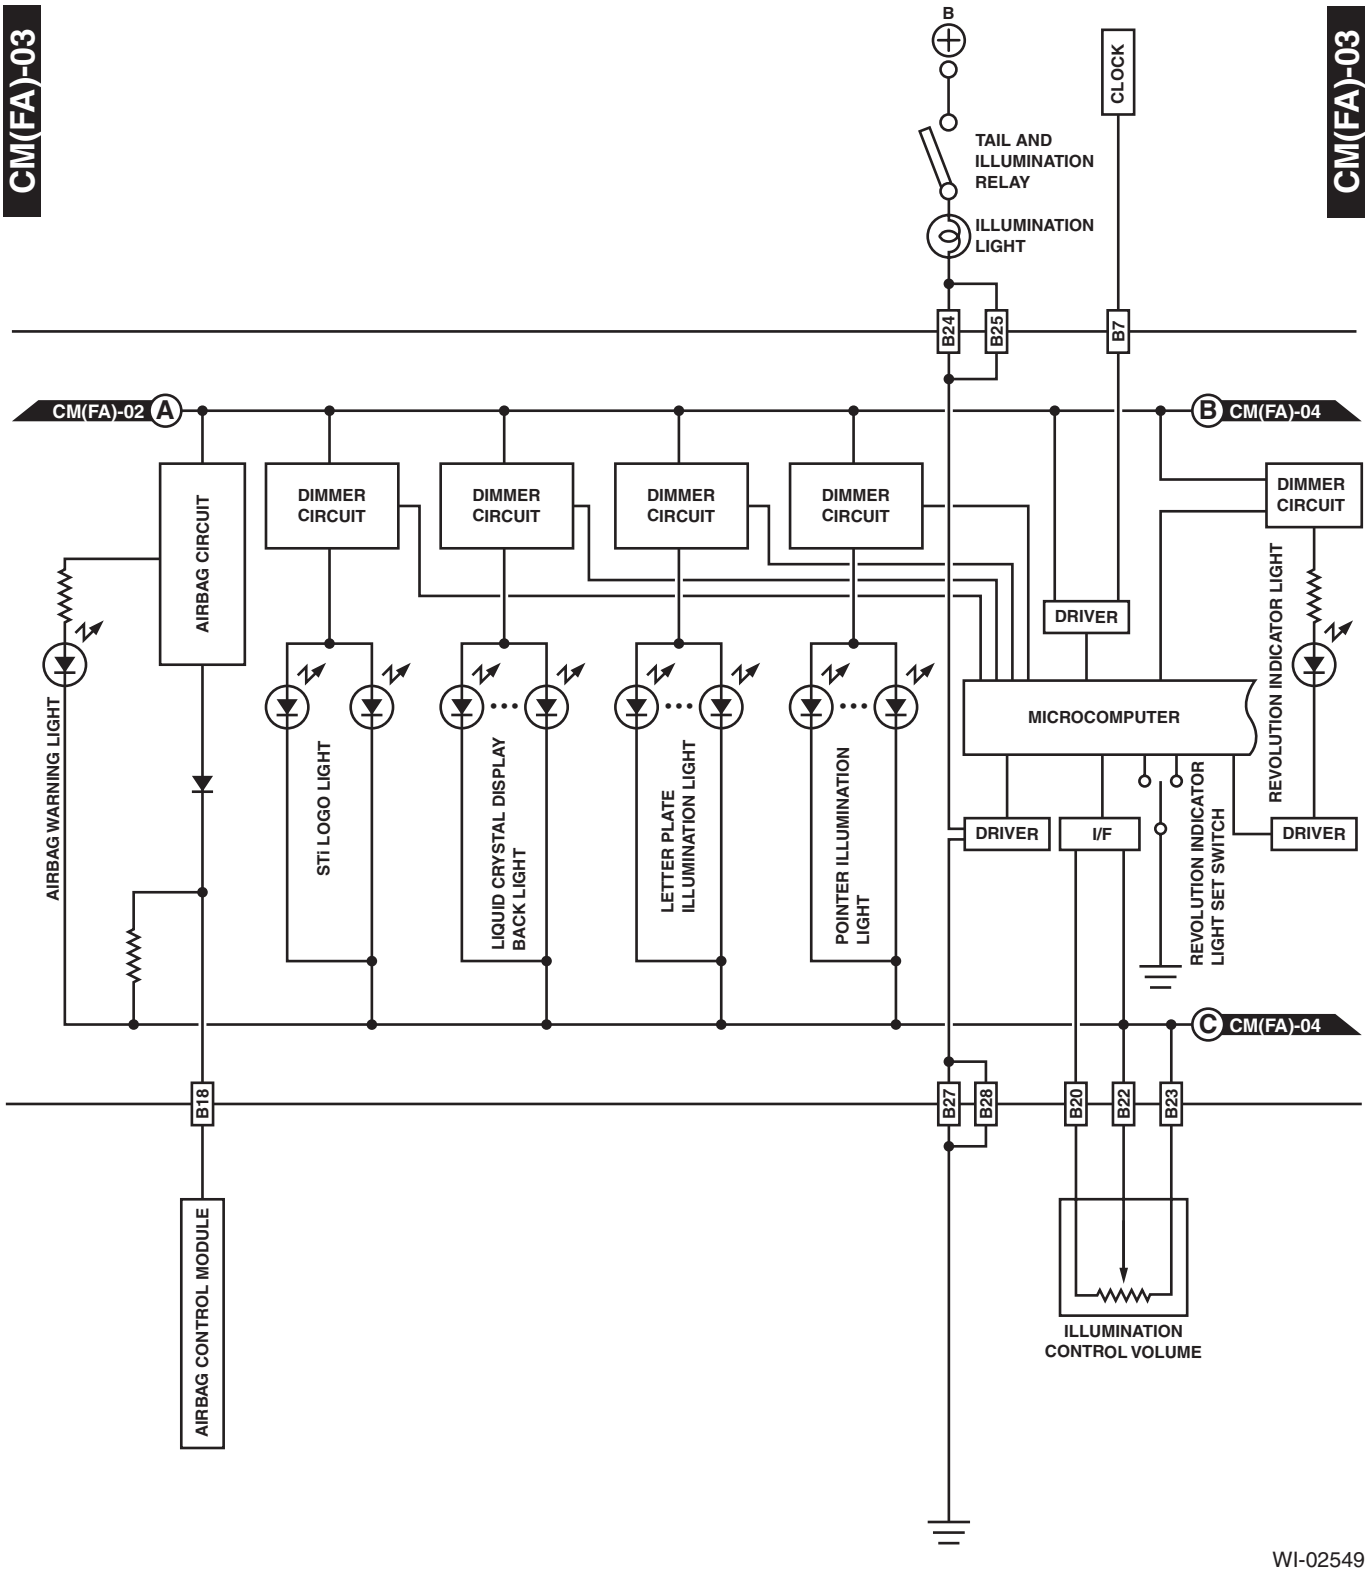
CM(FA)-03
CM(FA)-03
B
CLOCK
TAIL AND ILLUMINATION RELAY
ILLUMINATION LIGHT
B24
B25
B7
CM(FA)-02 A
B CM(FA)-04
AIRBAG CIRCUIT
DIMMER CIRCUIT
DIMMER CIRCUIT
DIMMER CIRCUIT
DIMMER CIRCUIT
DIMMER CIRCUIT
DRIVER
REVOLUTION INDICATOR LIGHT
AIRBAG WARNING LIGHT
STi LOGO LIGHT
LIQUID CRYSTAL DISPLAY BACK LIGHT
LETTER PLATE ILLUMINATION LIGHT
POINTER ILLUMINATION LIGHT
MICROCOMPUTER
DRIVER
I/F
REVOLUTION INDICATOR LIGHT SET SWITCH
DRIVER
C CM(FA)-04
B18
B27
B28
B20
B22
B23
AIRBAG CONTROL MODULE
ILLUMINATION CONTROL VOLUME

WI-02549

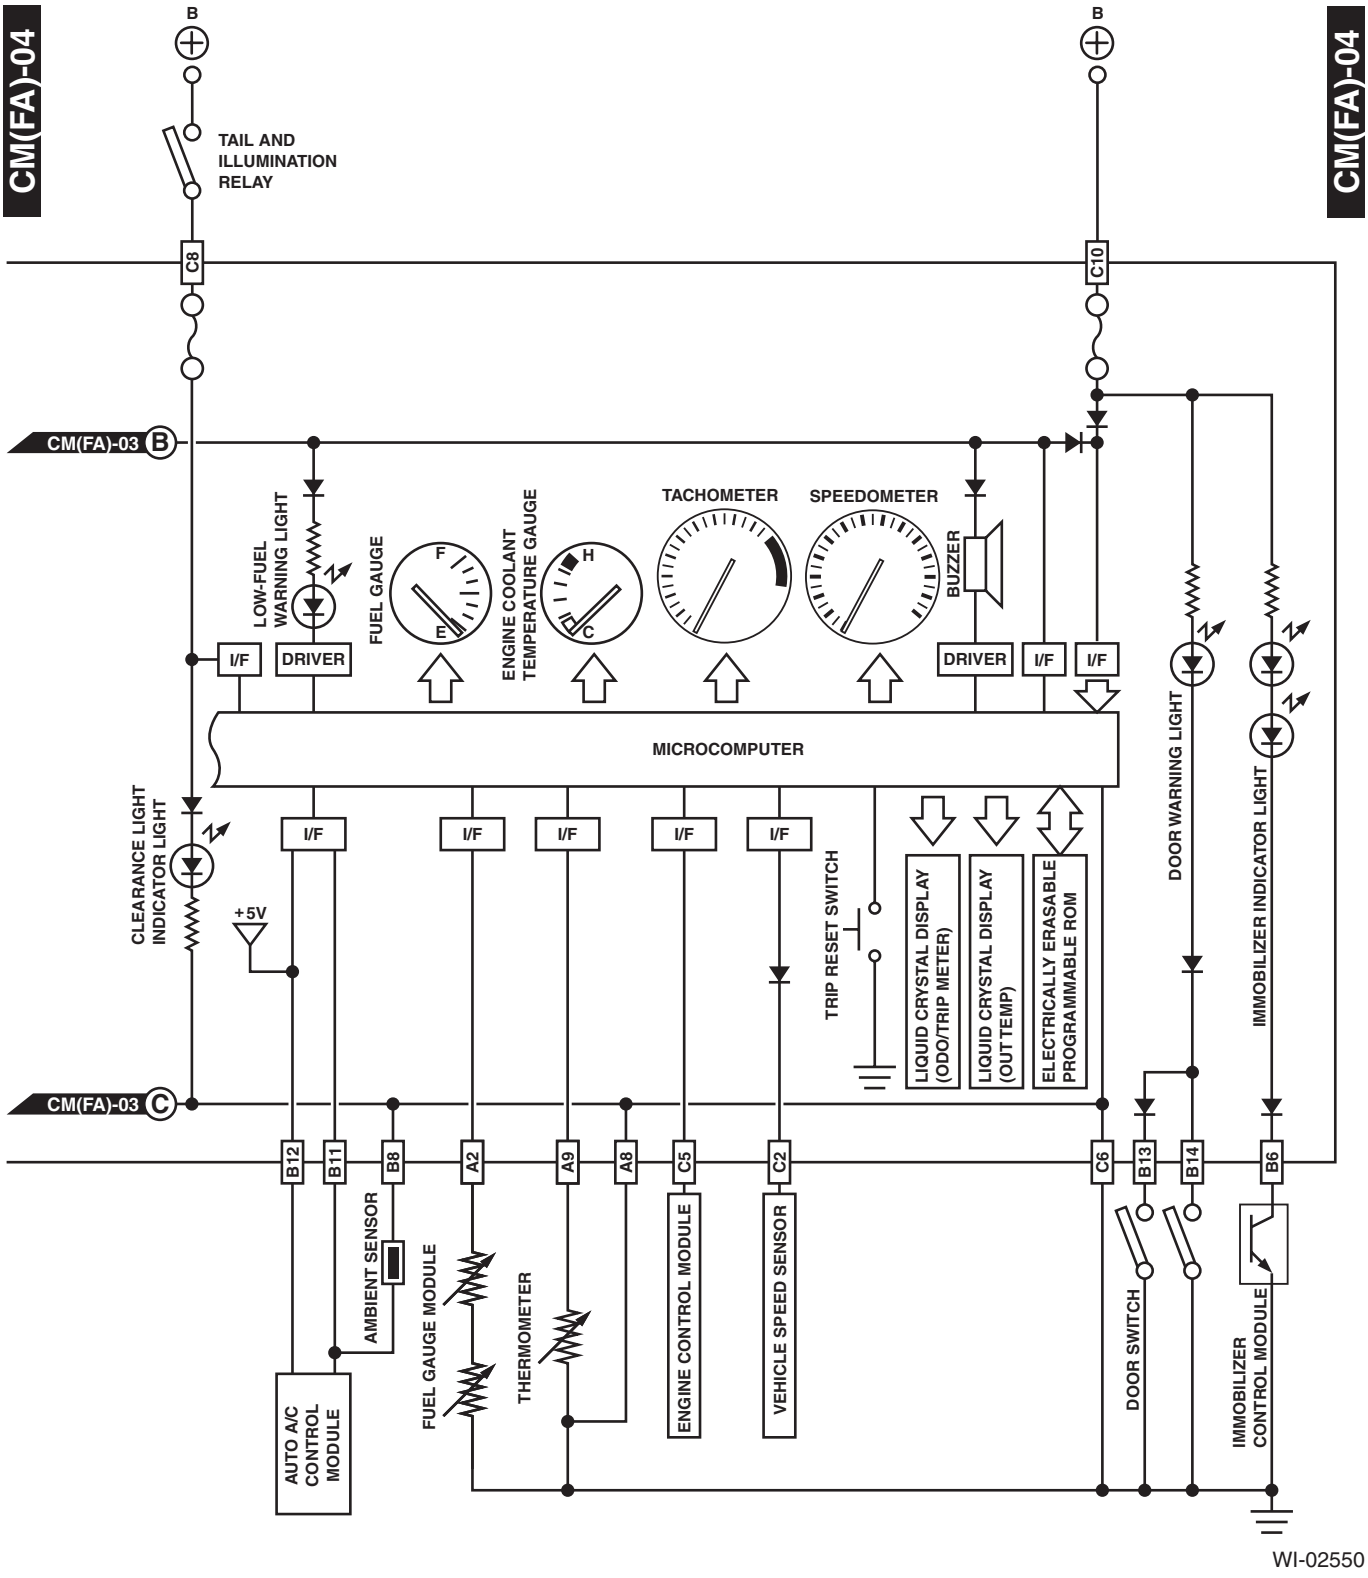
CM(FA)-04
CM(FA)-04
B
B
TAIL AND ILLUMINATION RELAY
C8
C10
CM(FA)-03 B
CM(FA)-03 C
LOW-FUEL WARNING LIGHT
FUEL GAUGE
ENGINE COOLANT TEMPERATURE GAUGE
TACHOMETER
SPEEDOMETER
BUZZER
I/F
DRIVER
MICROCOMPUTER
CLEARANCE LIGHT INDICATOR LIGHT
+5V
TRIP RESET SWITCH
LIQUID CRYSTAL DISPLAY (ODO/TRIP METER)
LIQUID CRYSTAL DISPLAY (OUT TEMP)
ELECTRICALLY ERASABLE PROGRAMMABLE ROM
DOOR WARNING LIGHT
IMMOBILIZER INDICATOR LIGHT
B12
B11
B8
A2
A9
A8
C5
C2
C6
B13
B14
B6
AMBIENT SENSOR
AUTO A/C CONTROL MODULE
FUEL GAUGE MODULE
THERMOMETER
ENGINE CONTROL MODULE
VEHICLE SPEED SENSOR
DOOR SWITCH
IMMOBILIZER CONTROL MODULE

WI-02550

12.Cruise Control System

A: SCHEMATIC

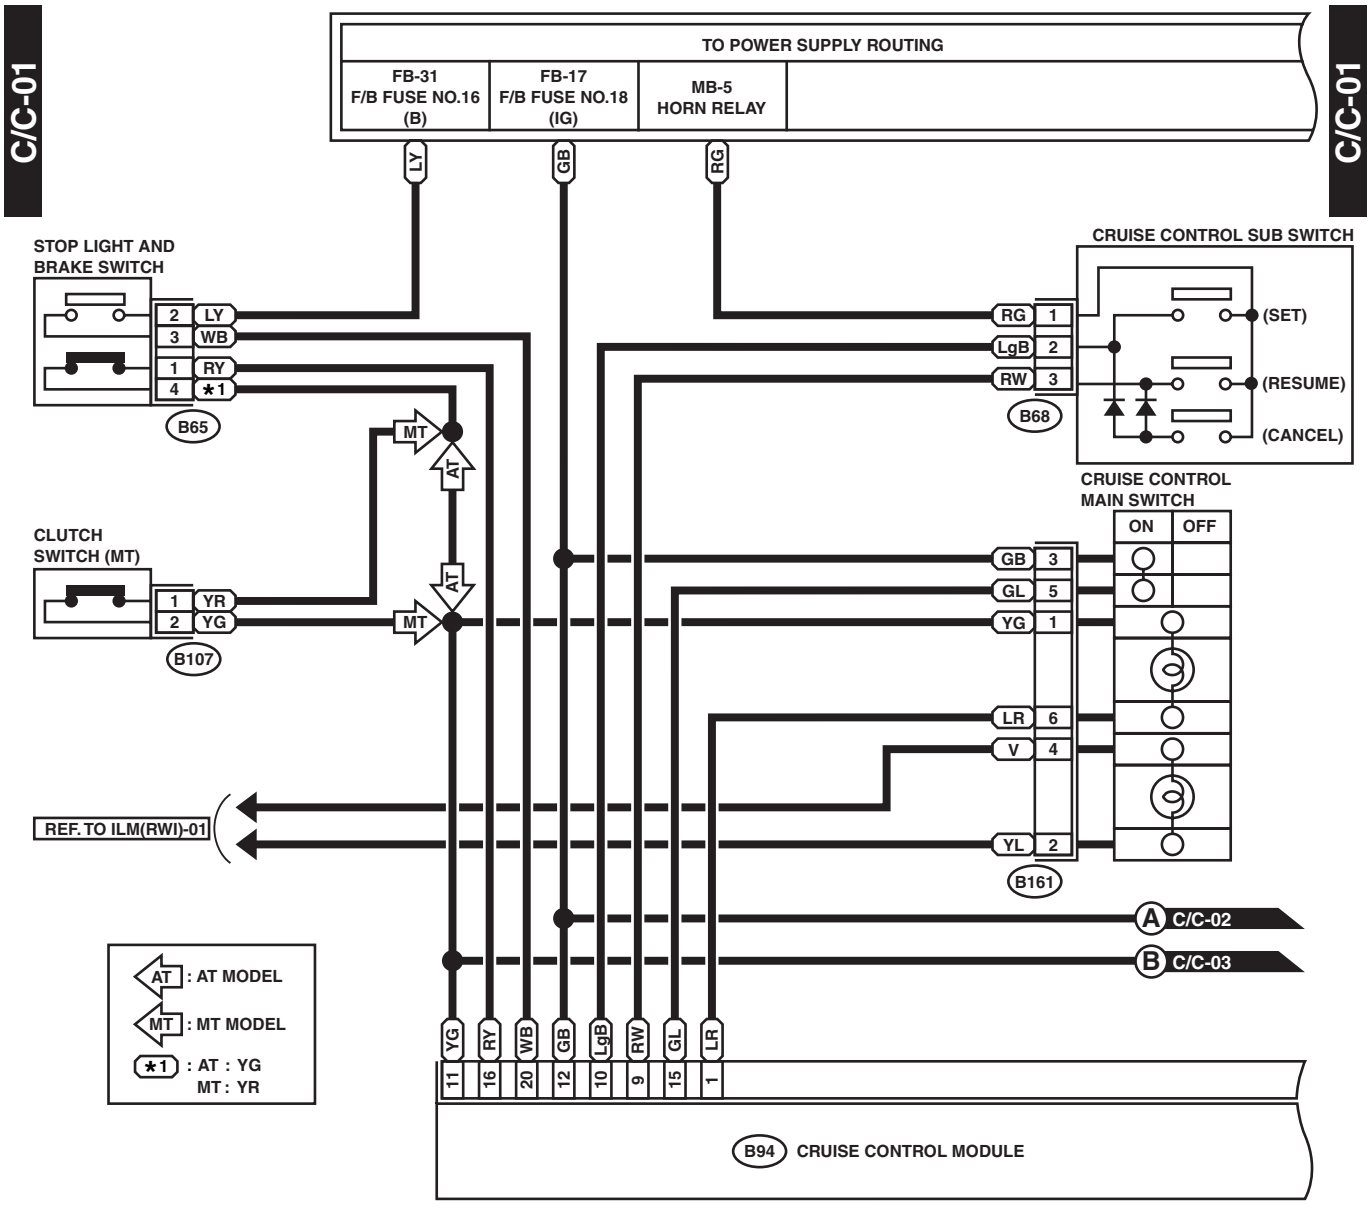



WI-02526

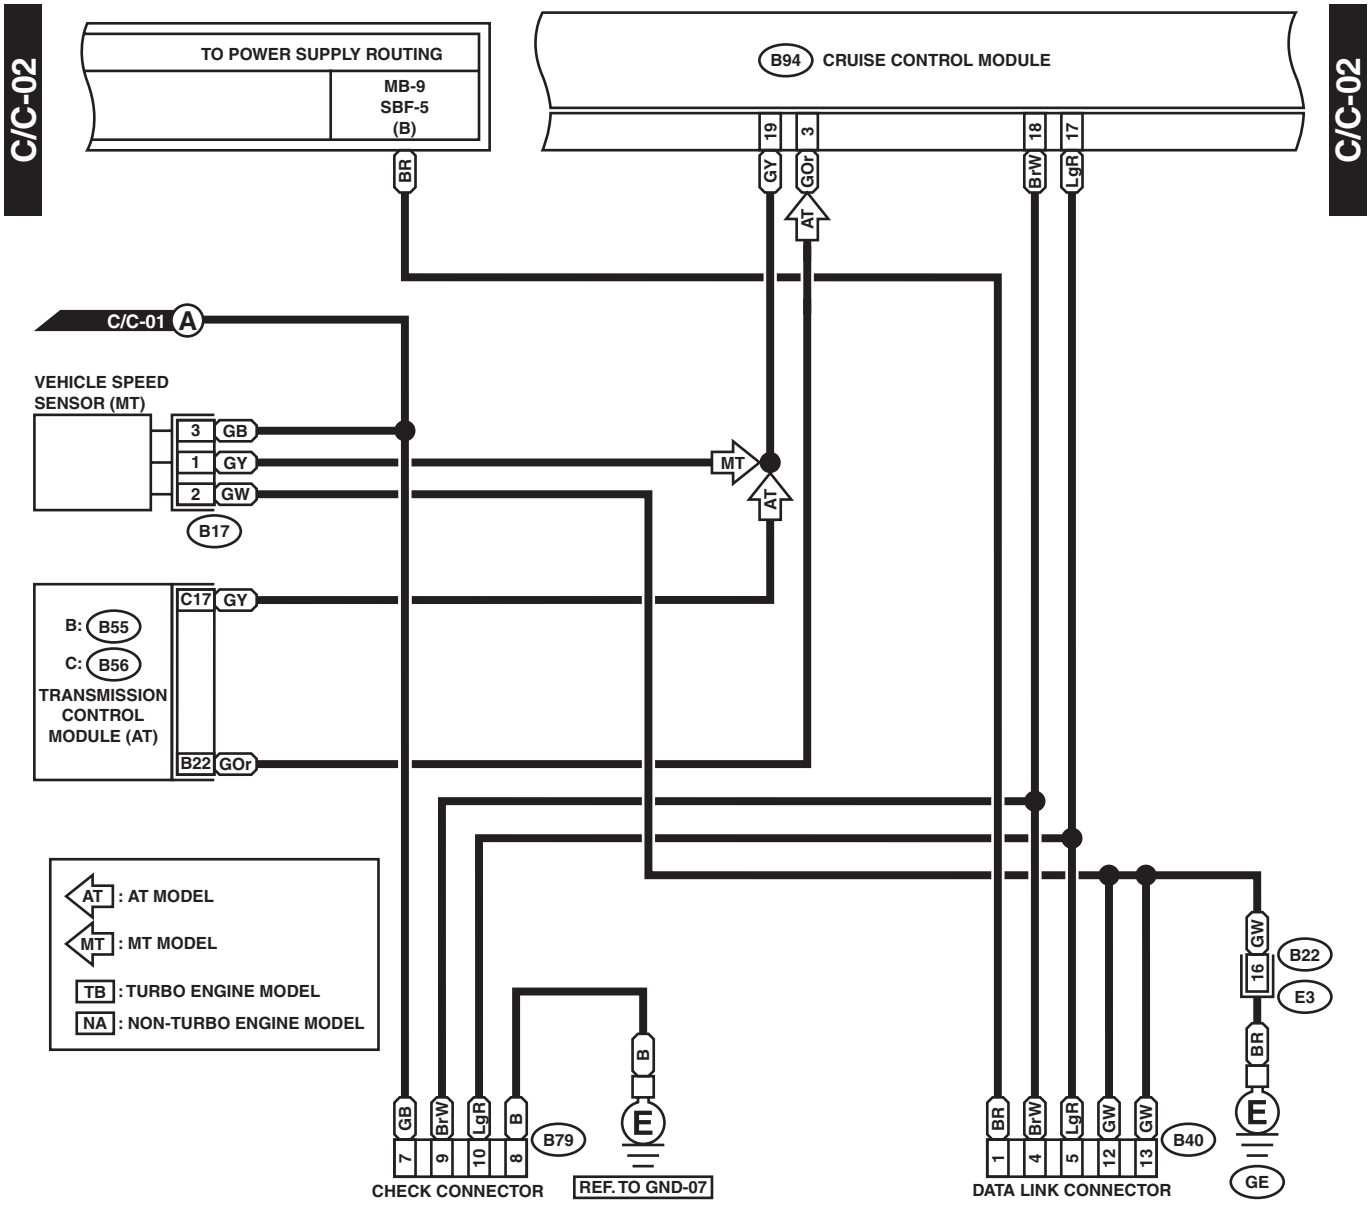
C/C-02
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
B94 CRUISE CONTROL MODULE
C/C-02
BR
GY
GOr
BrW
LgR
AT
C/C-01 A
VEHICLE SPEED SENSOR (MT)
3 GB
1 GY
2 GW
B17
MT
AT
C17 GY
B: B55
C: B56
TRANSMISSION CONTROL MODULE (AT)
B22 GOr
AT : AT MODEL
MT : MT MODEL
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL
GB
BrW
LgR
B
B79
CHECK CONNECTOR
REF. TO GND-07
BR
BrW
LgR
GW
GW
B40
DATA LINK CONNECTOR
GW
16
B22
E3
BR
GE

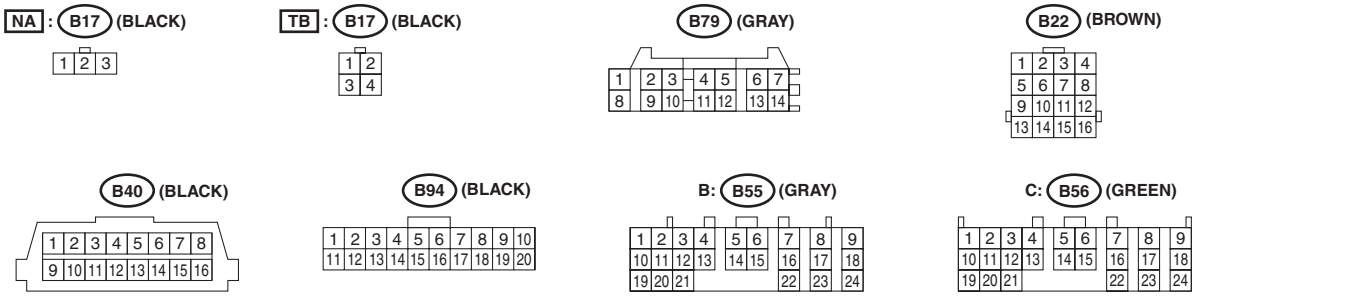
NA : B17 (BLACK)
TB : B17 (BLACK)
B79 (GRAY)
B22 (BROWN)
B40 (BLACK)
B94 (BLACK)
B: B55 (GRAY)
C: B56 (GREEN)

WI-02527

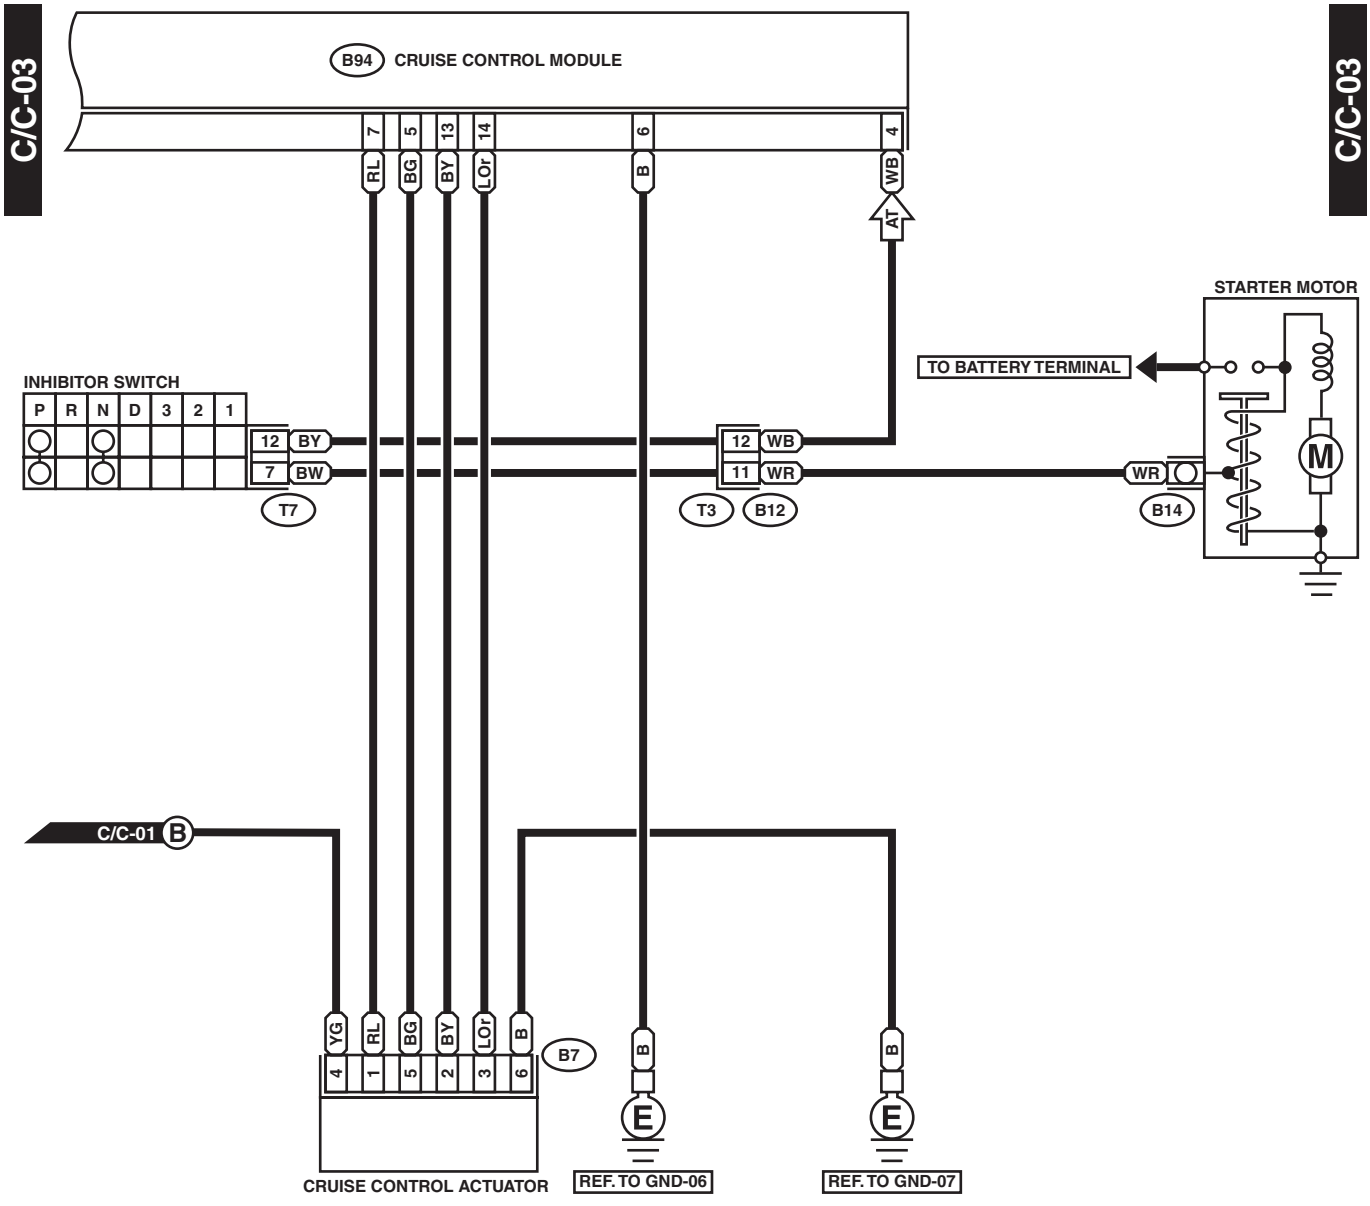
C/C-03
C/C-03
B94 CRUISE CONTROL MODULE
7 5 13 14 6 4
RL BG BY LOr B WB
AT
STARTER MOTOR
TO BATTERY TERMINAL
INHIBITOR SWITCH
P R N D 3 2 1
12 BY
7 BW
T7
12 WB
11 WR
T3 B12
WR
B14
M
C/C-01 B
YG RL BG BY LOr B
4 1 5 2 3 6
B7
B
B
E
E
CRUISE CONTROL ACTUATOR
REF. TO GND-06
REF. TO GND-07

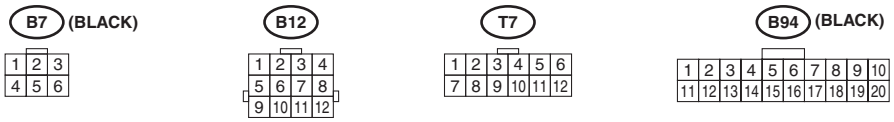
B7 (BLACK)
1 2 3
4 5 6
B12
1 2 3 4
5 6 7 8
9 10 11 12
T7
1 2 3 4 5 6
7 8 9 10 11 12
B94 (BLACK)
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20

WI-02528

13.Engine Coolant Temperature Gauge System

A: SCHEMATIC

1. LHD MODEL

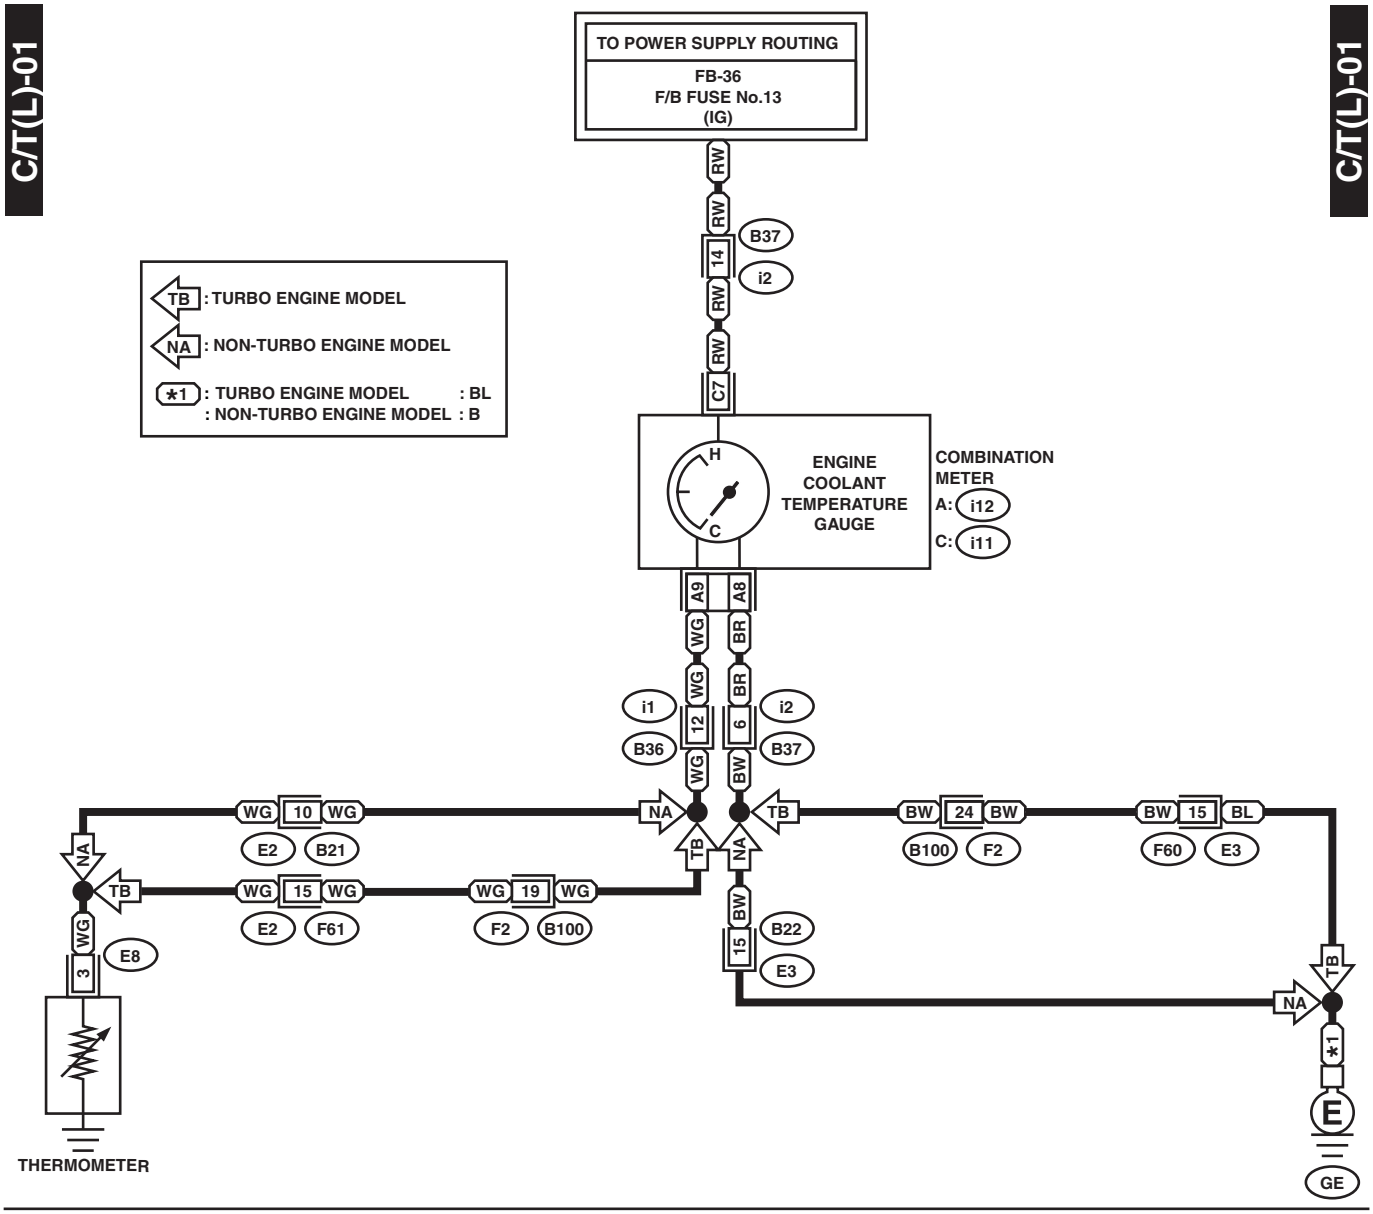

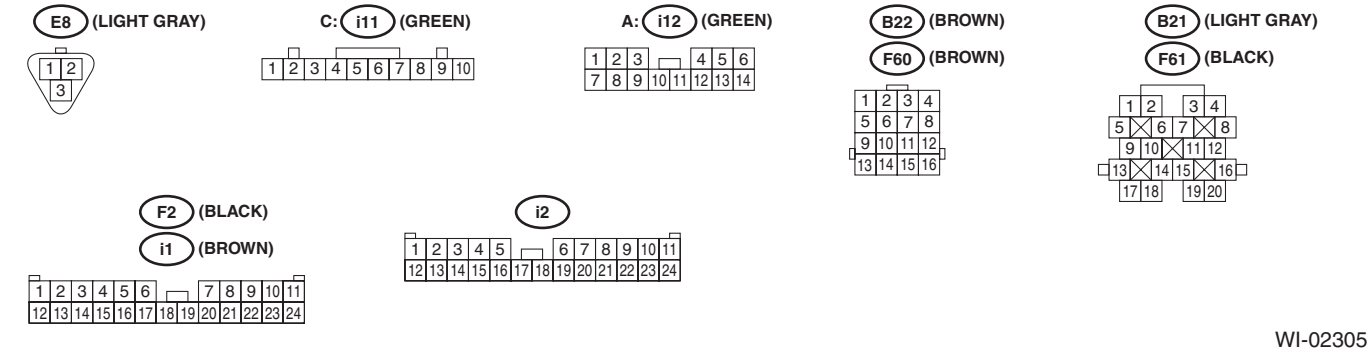

WI-02305

2. RHD MODEL

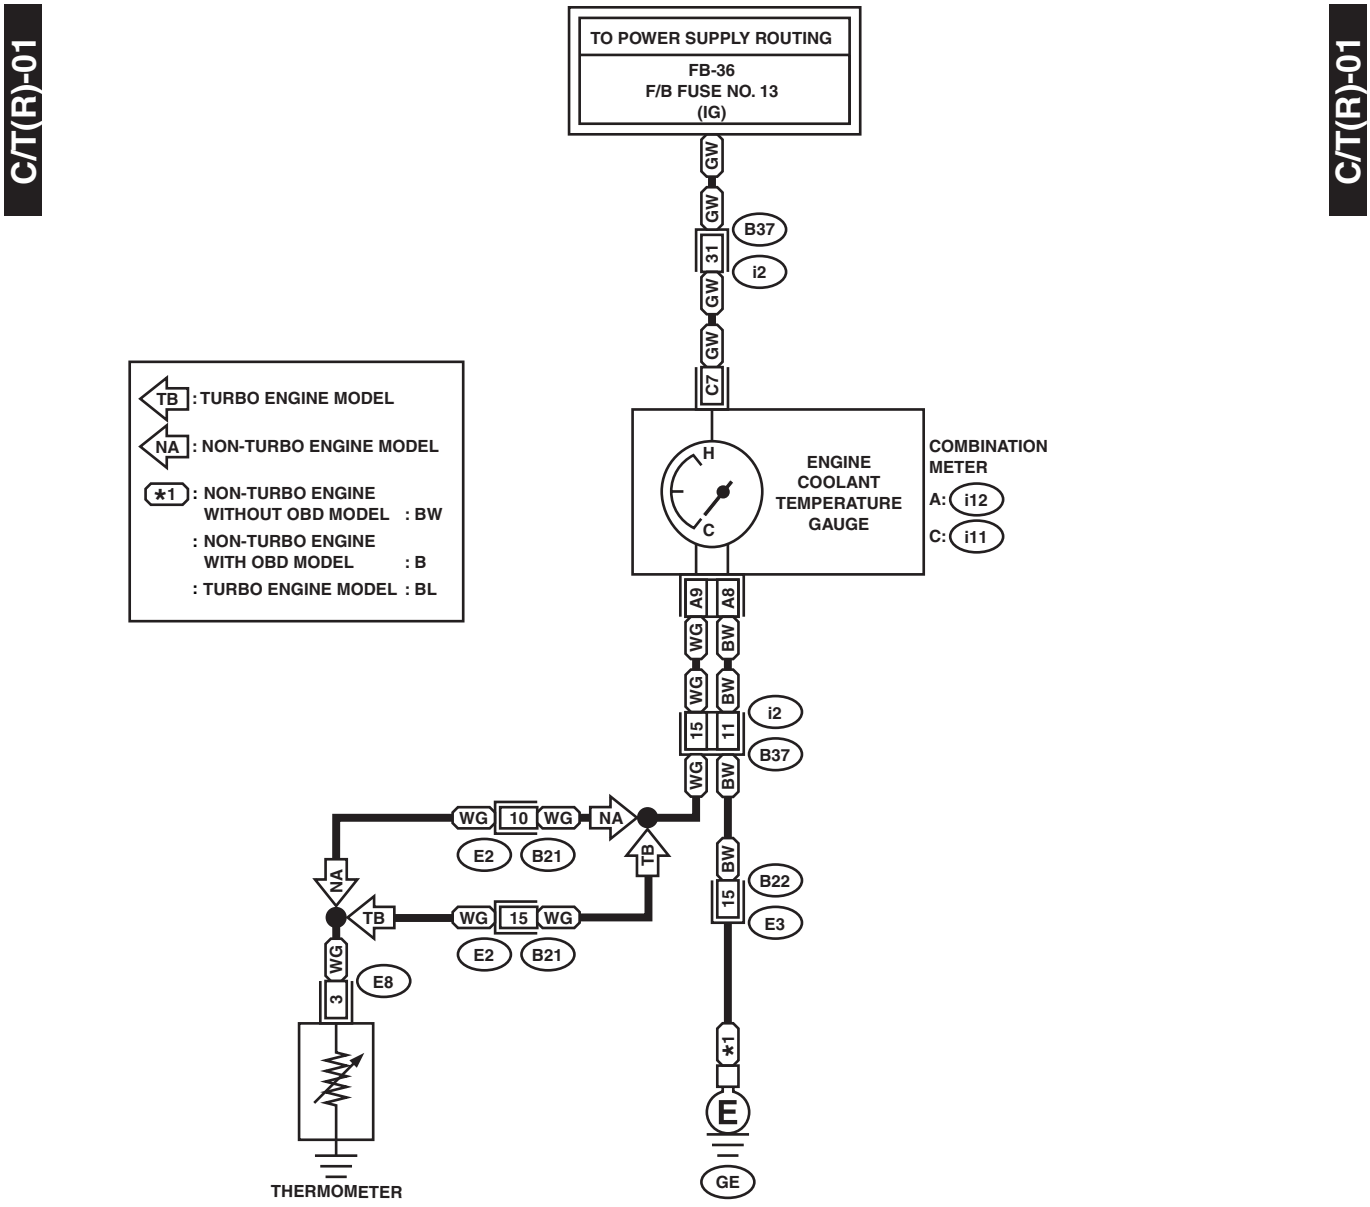

WI-02306

14.Engine Electrical System

A: SCHEMATIC

1. LHD SOHC W/O OBD MODEL

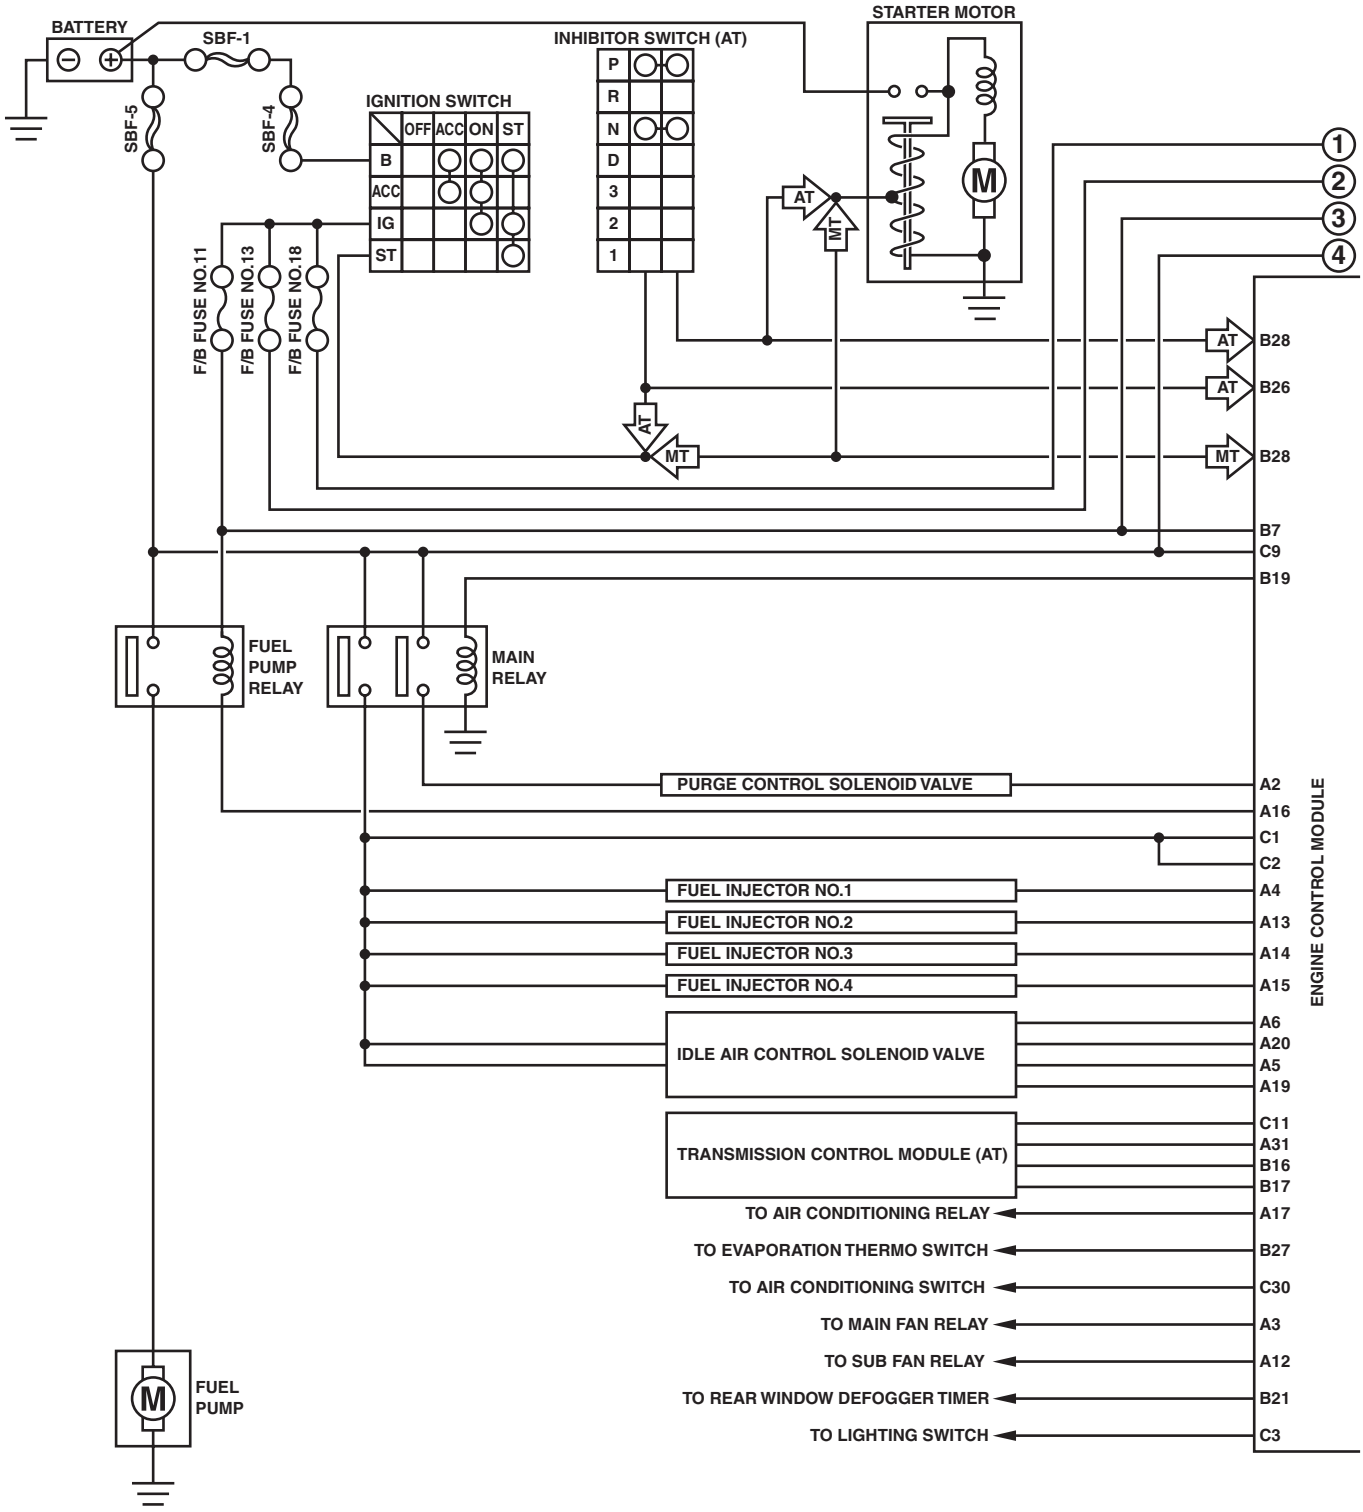

WI-02559

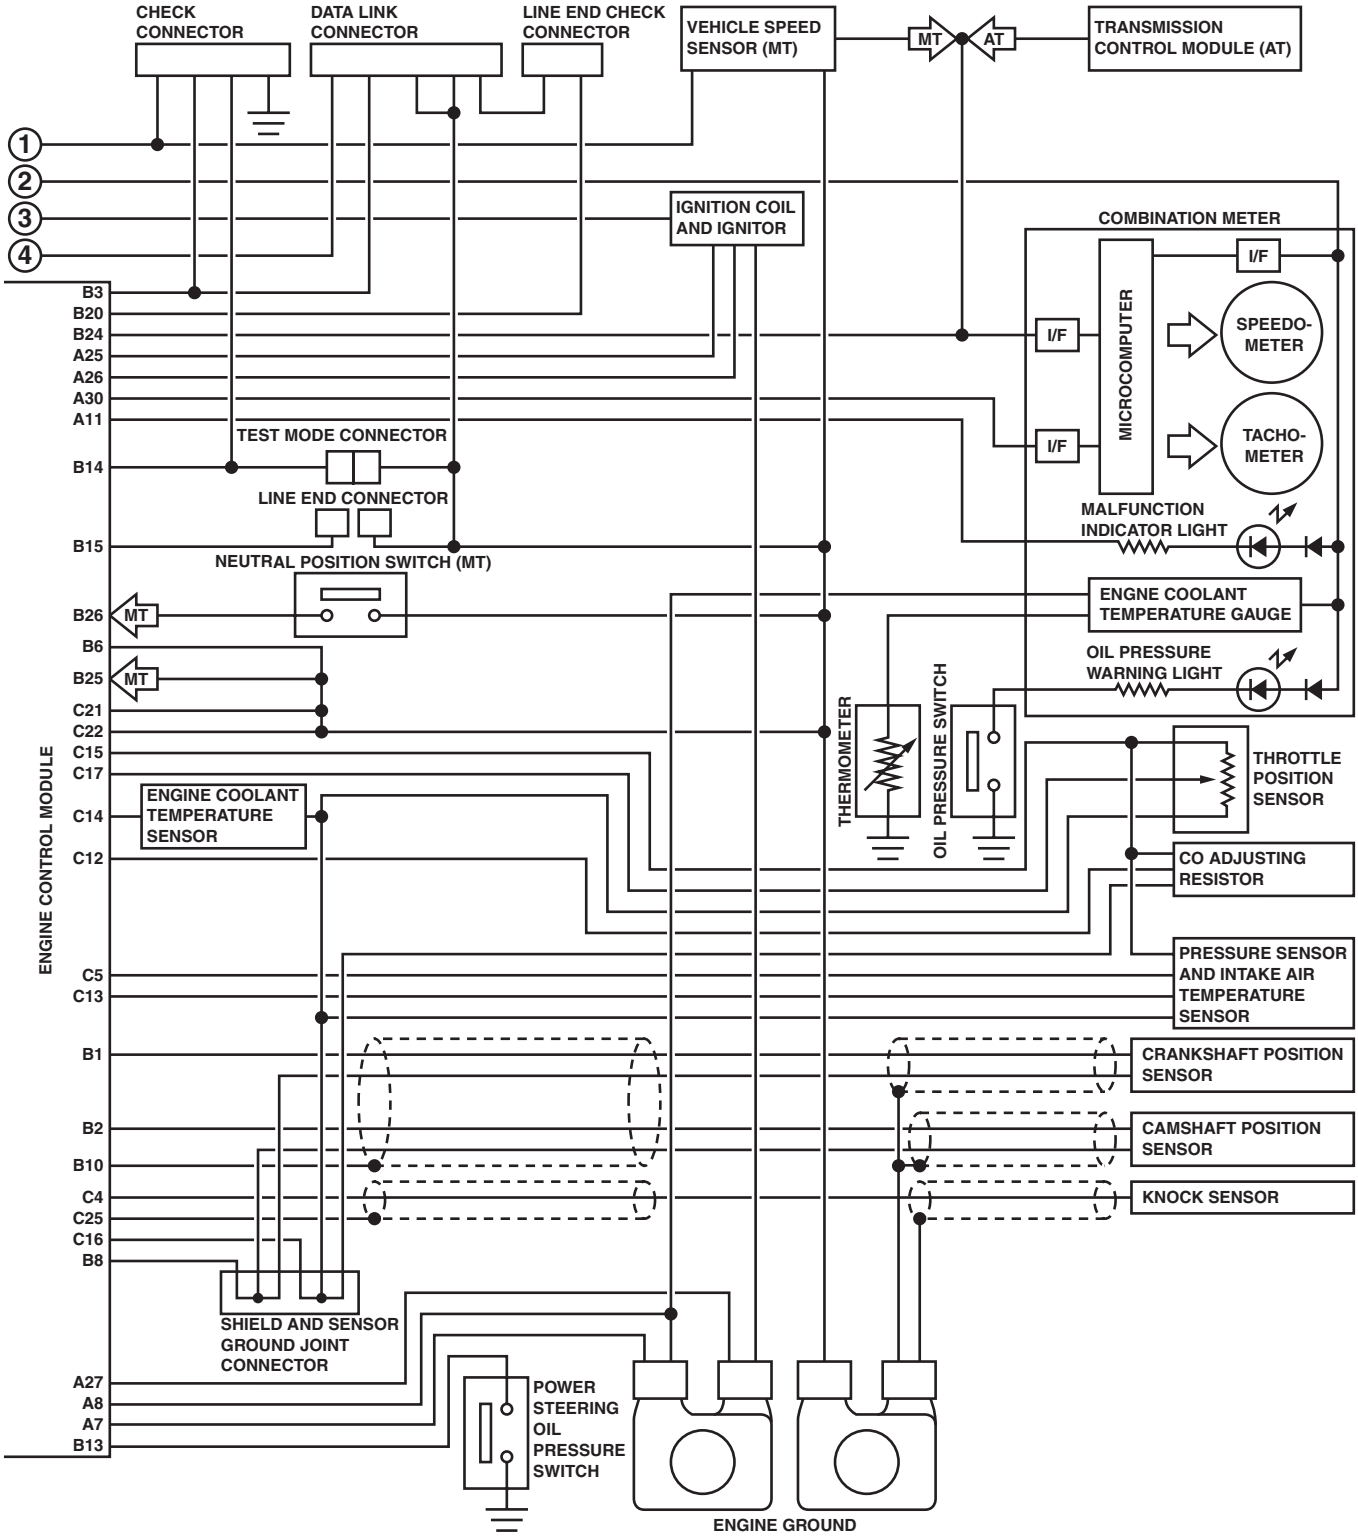
CHECK CONNECTOR
DATA LINK CONNECTOR
LINE END CHECK CONNECTOR
VEHICLE SPEED SENSOR (MT)
MT
AT
TRANSMISSION CONTROL MODULE (AT)
1
2
3
4
IGNITION COIL AND IGNITOR
COMBINATION METER
I/F
MICROCOMPUTER
SPEEDO-METER
TACHO-METER
MALFUNCTION INDICATOR LIGHT
ENGNE COOLANT TEMPERATURE GAUGE
OIL PRESSURE WARNING LIGHT
B3
B20
B24
A25
A26
A30
A11
B14
B15
B26
B6
B25
C21
C22
C15
C17
C14
C12
C5
C13
B1
B2
B10
C4
C25
C16
B8
A27
A8
A7
B13
ENGINE CONTROL MODULE
TEST MODE CONNECTOR
LINE END CONNECTOR
NEUTRAL POSITION SWITCH (MT)
ENGINE COOLANT TEMPERATURE SENSOR
THERMOMETER
OIL PRESSURE SWITCH
THROTTLE POSITION SENSOR
CO ADJUSTING RESISTOR
PRESSURE SENSOR AND INTAKE AIR TEMPERATURE SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
SHIELD AND SENSOR GROUND JOINT CONNECTOR
POWER STEERING OIL PRESSURE SWITCH
ENGINE GROUND

WI-02560

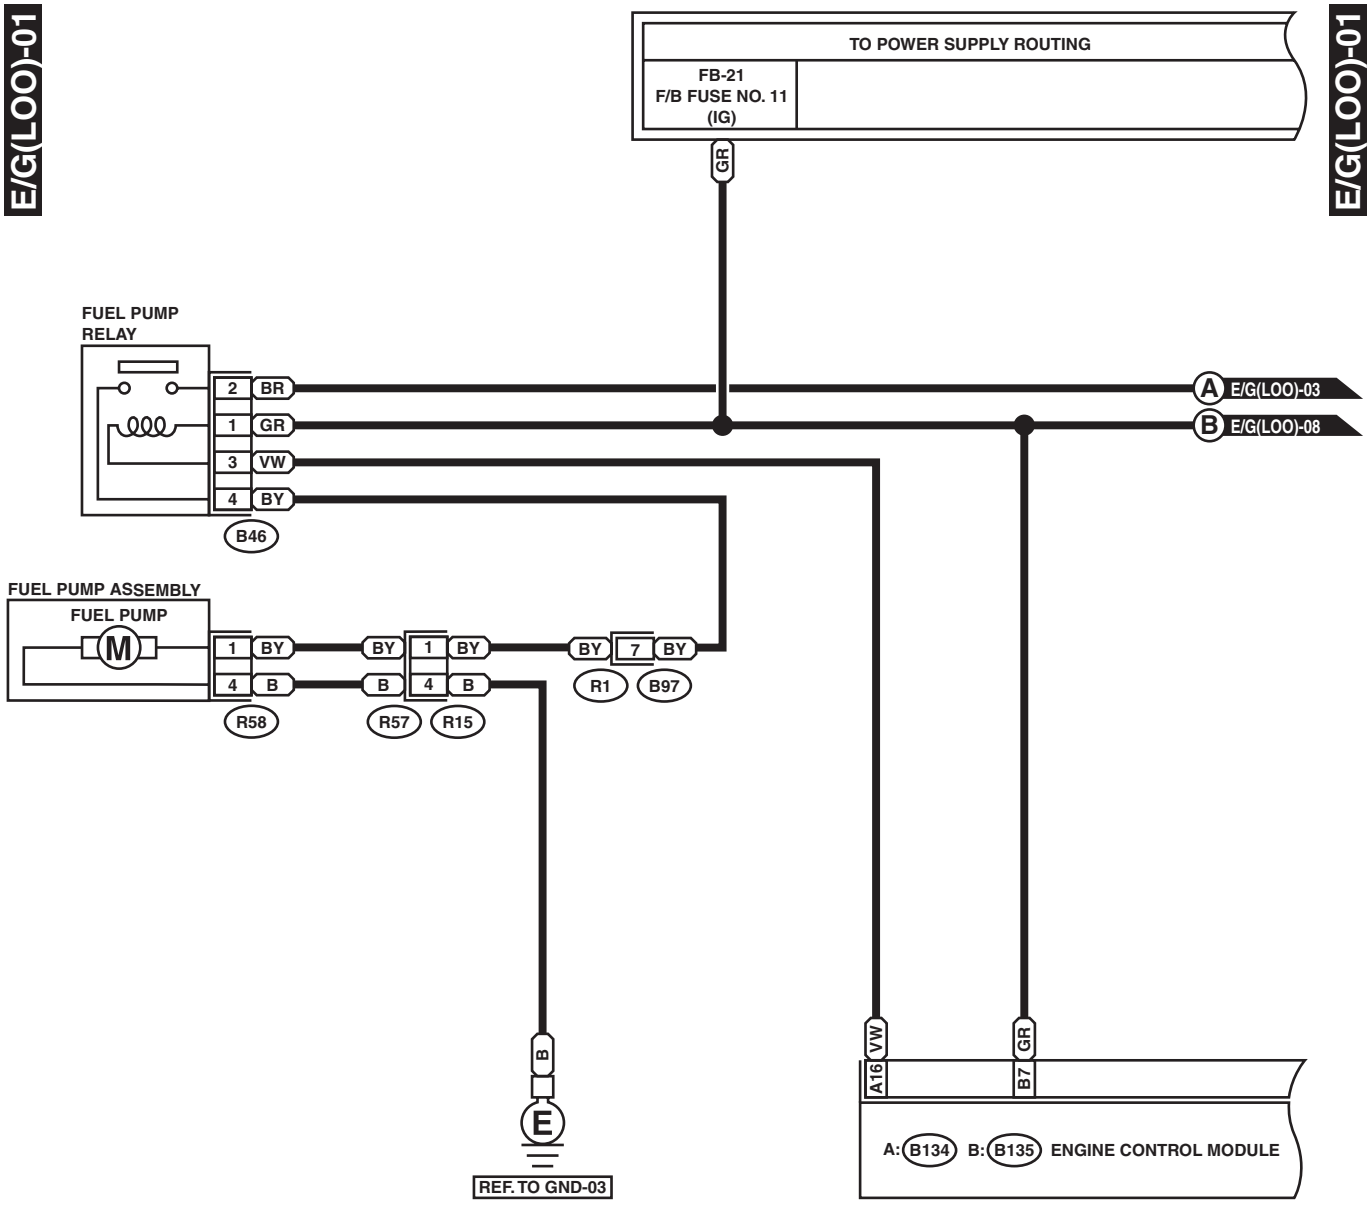
E/G(LOO)-01
E/G(LOO)-01
TO POWER SUPPLY ROUTING
FB-21
F/B FUSE NO. 11
(IG)
GR
FUEL PUMP
RELAY
2 BR
1 GR
3 VW
4 BY
B46
A E/G(LOO)-03
B E/G(LOO)-08
FUEL PUMP ASSEMBLY
FUEL PUMP
M
1 BY
4 B
R58
BY
B
R57
1 BY
4 B
R15
BY 7 BY
R1
B97
B
E
REF. TO GND-03
VW
GR
A16
B7
A: B134 B: B135 ENGINE CONTROL MODULE
B46 (GREEN)
R15
R58
B97
B: B135
A: B134

WI-02307

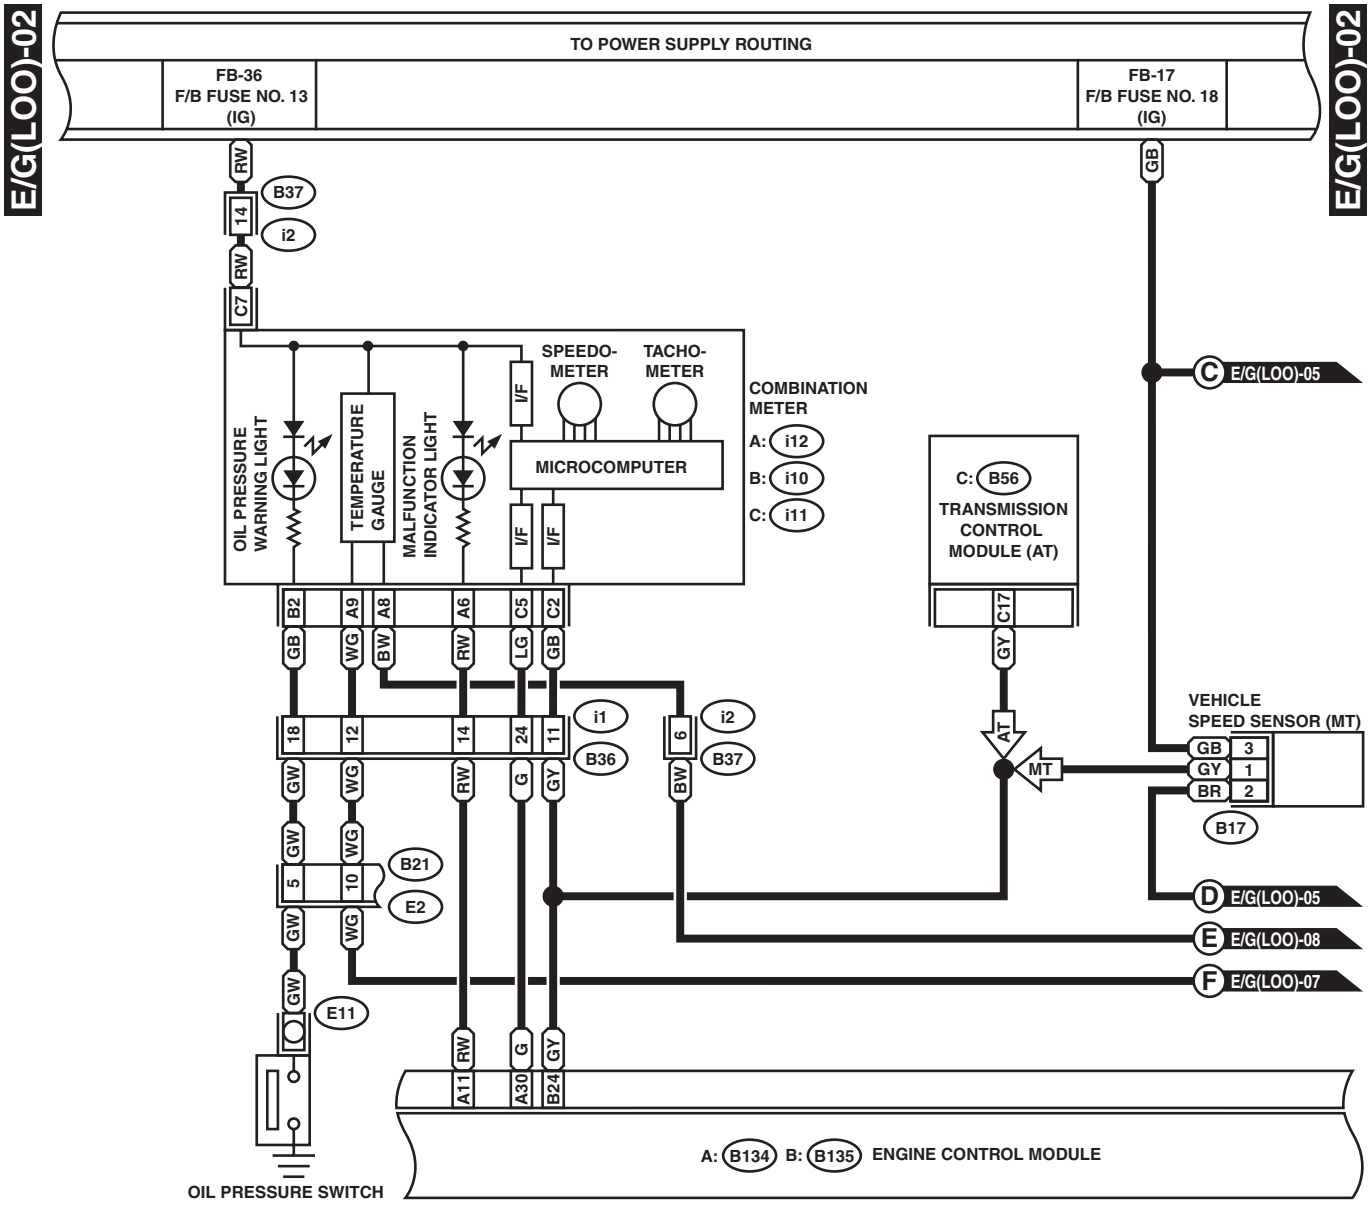
E/G(LOO)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO. 13
(IG)
FB-17
F/B FUSE NO. 18
(IG)
E/G(LOO)-02
RW
B37
14
i2
RW
C7
SPEEDO-METER
TACHO-METER
COMBINATION METER
A: i12
B: i10
C: i11
I/F
MICROCOMPUTER
OIL PRESSURE WARNING LIGHT
TEMPERATURE GAUGE
MALFUNCTION INDICATOR LIGHT
C: B56
TRANSMISSION CONTROL MODULE (AT)
C17
GY
C E/G(LOO)-05
VEHICLE SPEED SENSOR (MT)
GB 3
GY 1
BR 2
B17
AT
MT
B2
A9
A8
A6
C5
C2
GB
WG
BW
RW
LG
GB
18
12
14
24
11
i1
B36
6
i2
B37
GW
WG
RW
G
GY
BW
5
10
B21
E2
D E/G(LOO)-05
E E/G(LOO)-08
F E/G(LOO)-07
E11
A11
A30
B24
A: B134 B: B135 ENGINE CONTROL MODULE
OIL PRESSURE SWITCH

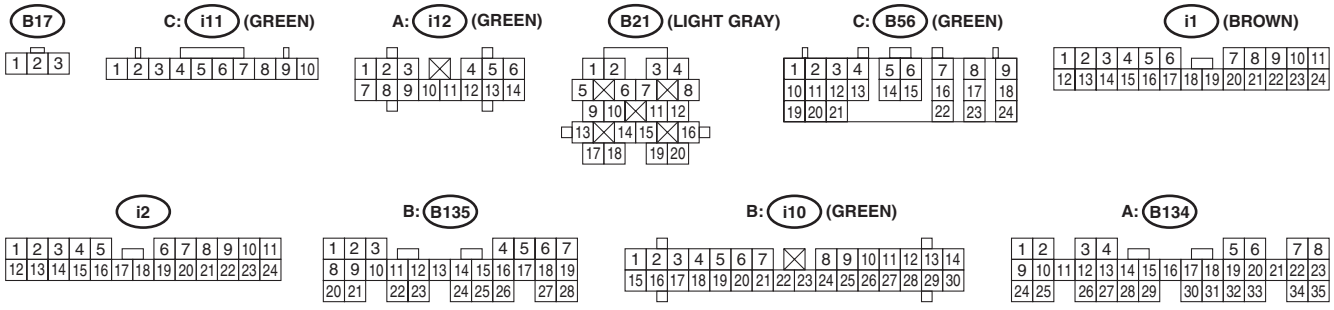
B17
C: i11 (GREEN)
A: i12 (GREEN)
B21 (LIGHT GRAY)
C: B56 (GREEN)
i1 (BROWN)
i2
B: B135
B: i10 (GREEN)
A: B134

WI-02308

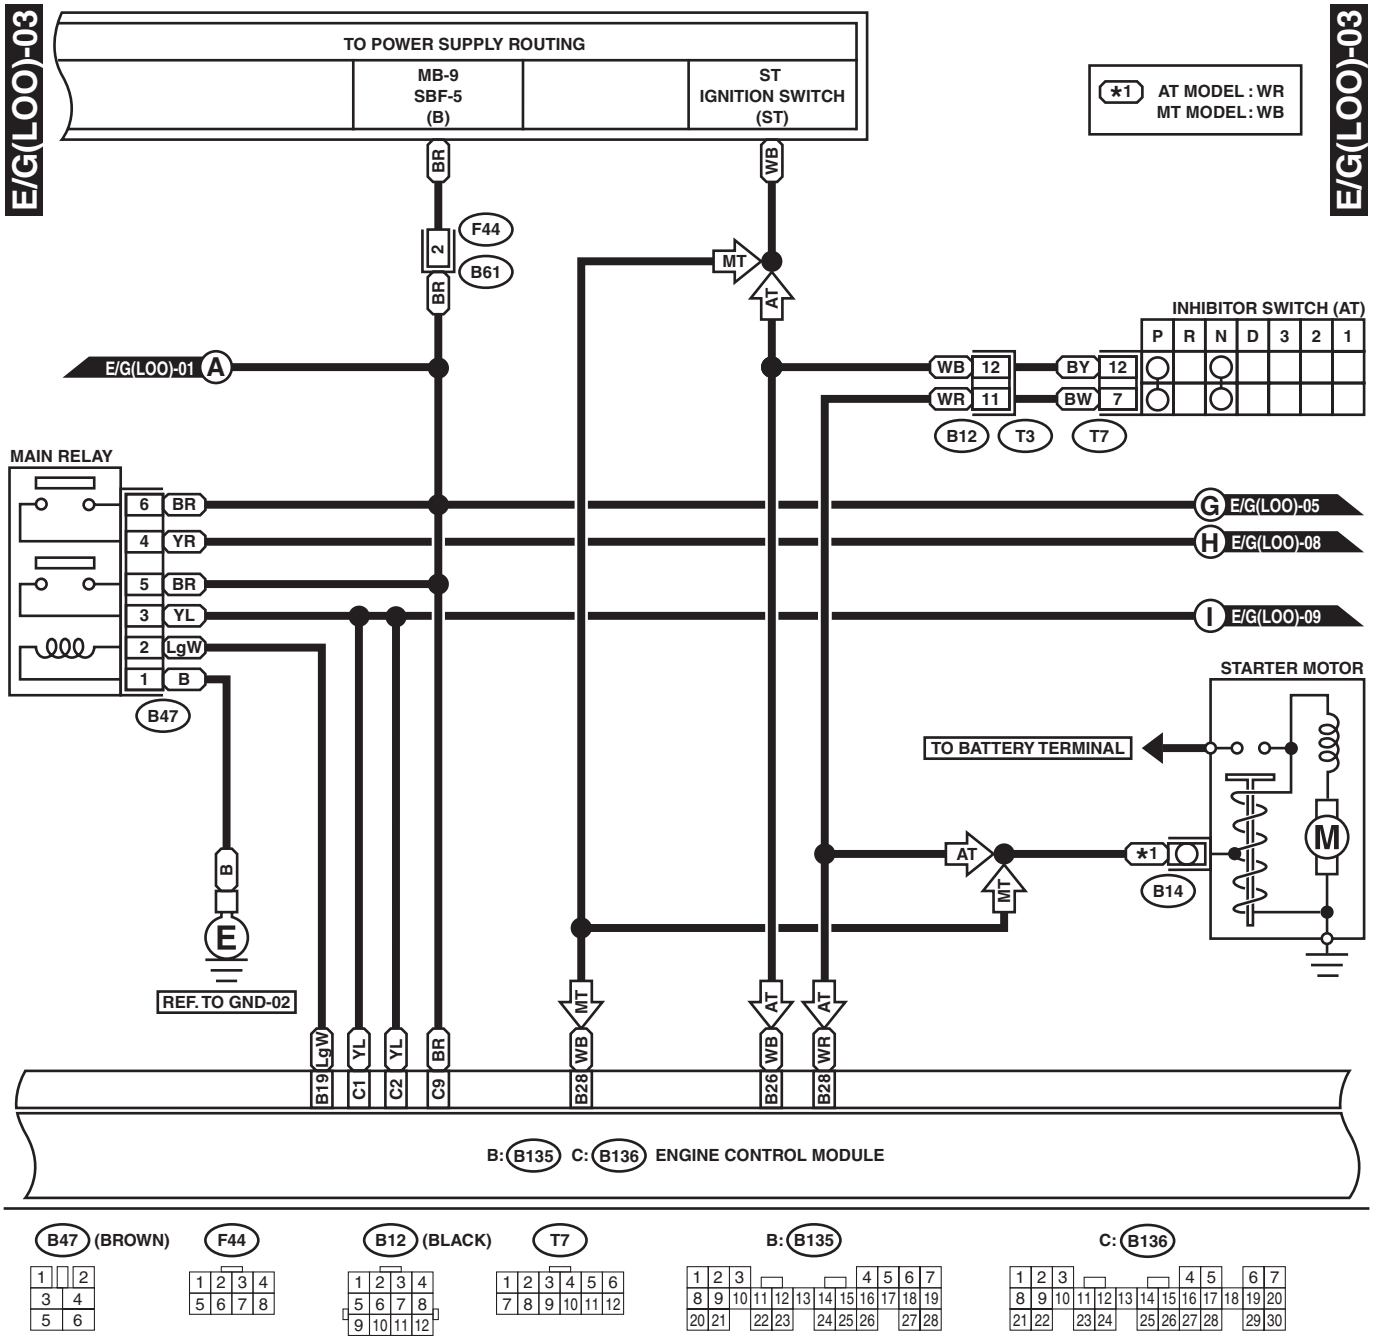
E/G(LOO)-03
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
ST
IGNITION SWITCH
(ST)
*1 AT MODEL : WR
MT MODEL : WB
BR
WB
F44
2
B61
MT
AT
INHIBITOR SWITCH (AT)
P R N D 3 2 1
E/G(LOO)-01 A
WB 12
WR 11
BY 12
BW 7
B12 T3 T7
MAIN RELAY
6 BR
4 YR
5 BR
3 YL
2 LgW
1 B
B47
G E/G(LOO)-05
H E/G(LOO)-08
I E/G(LOO)-09
STARTER MOTOR
TO BATTERY TERMINAL
M
*1
B14
B
E
REF. TO GND-02
B19 LgW
C1 YL
C2 YL
C9 BR
B28 WB
B26 WB
B28 WR
B: B135 C: B136 ENGINE CONTROL MODULE
B47 (BROWN)
F44
B12 (BLACK)
T7
B: B135
C: B136

WI-02309

E/G(LOO)-04

E/G(LOO)-04

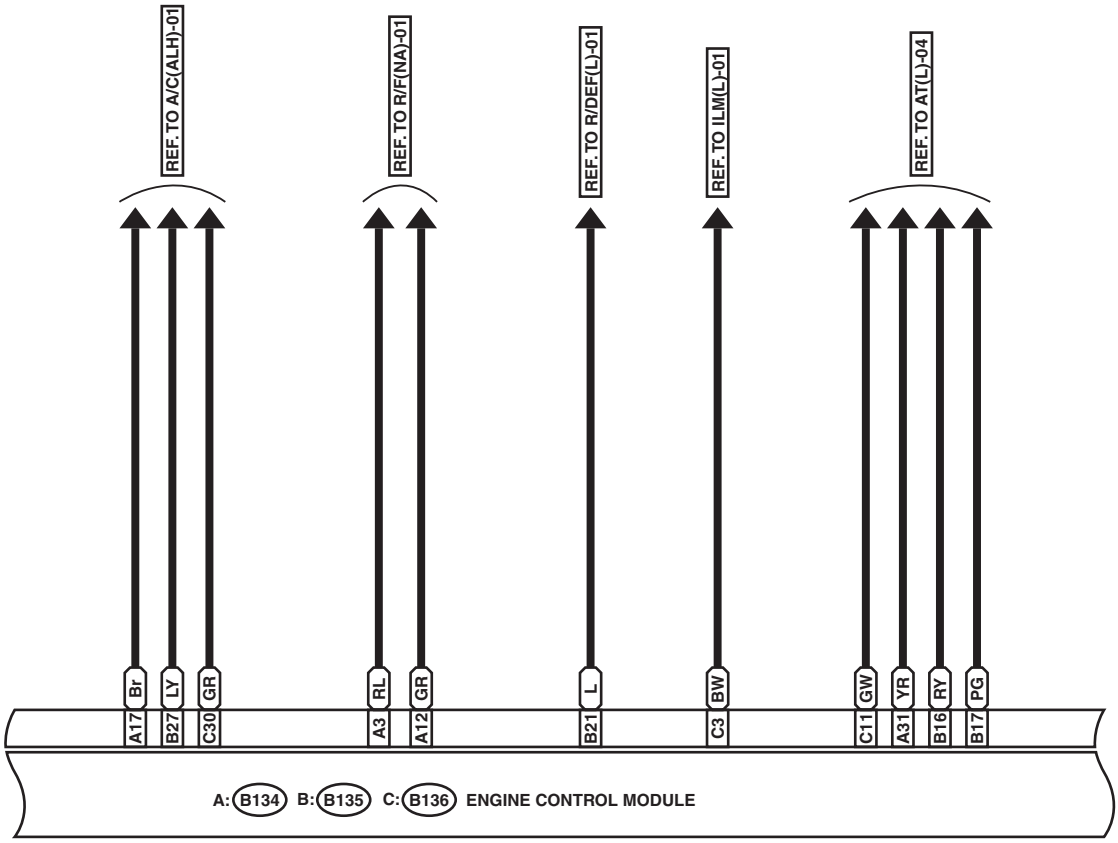



WI-02310

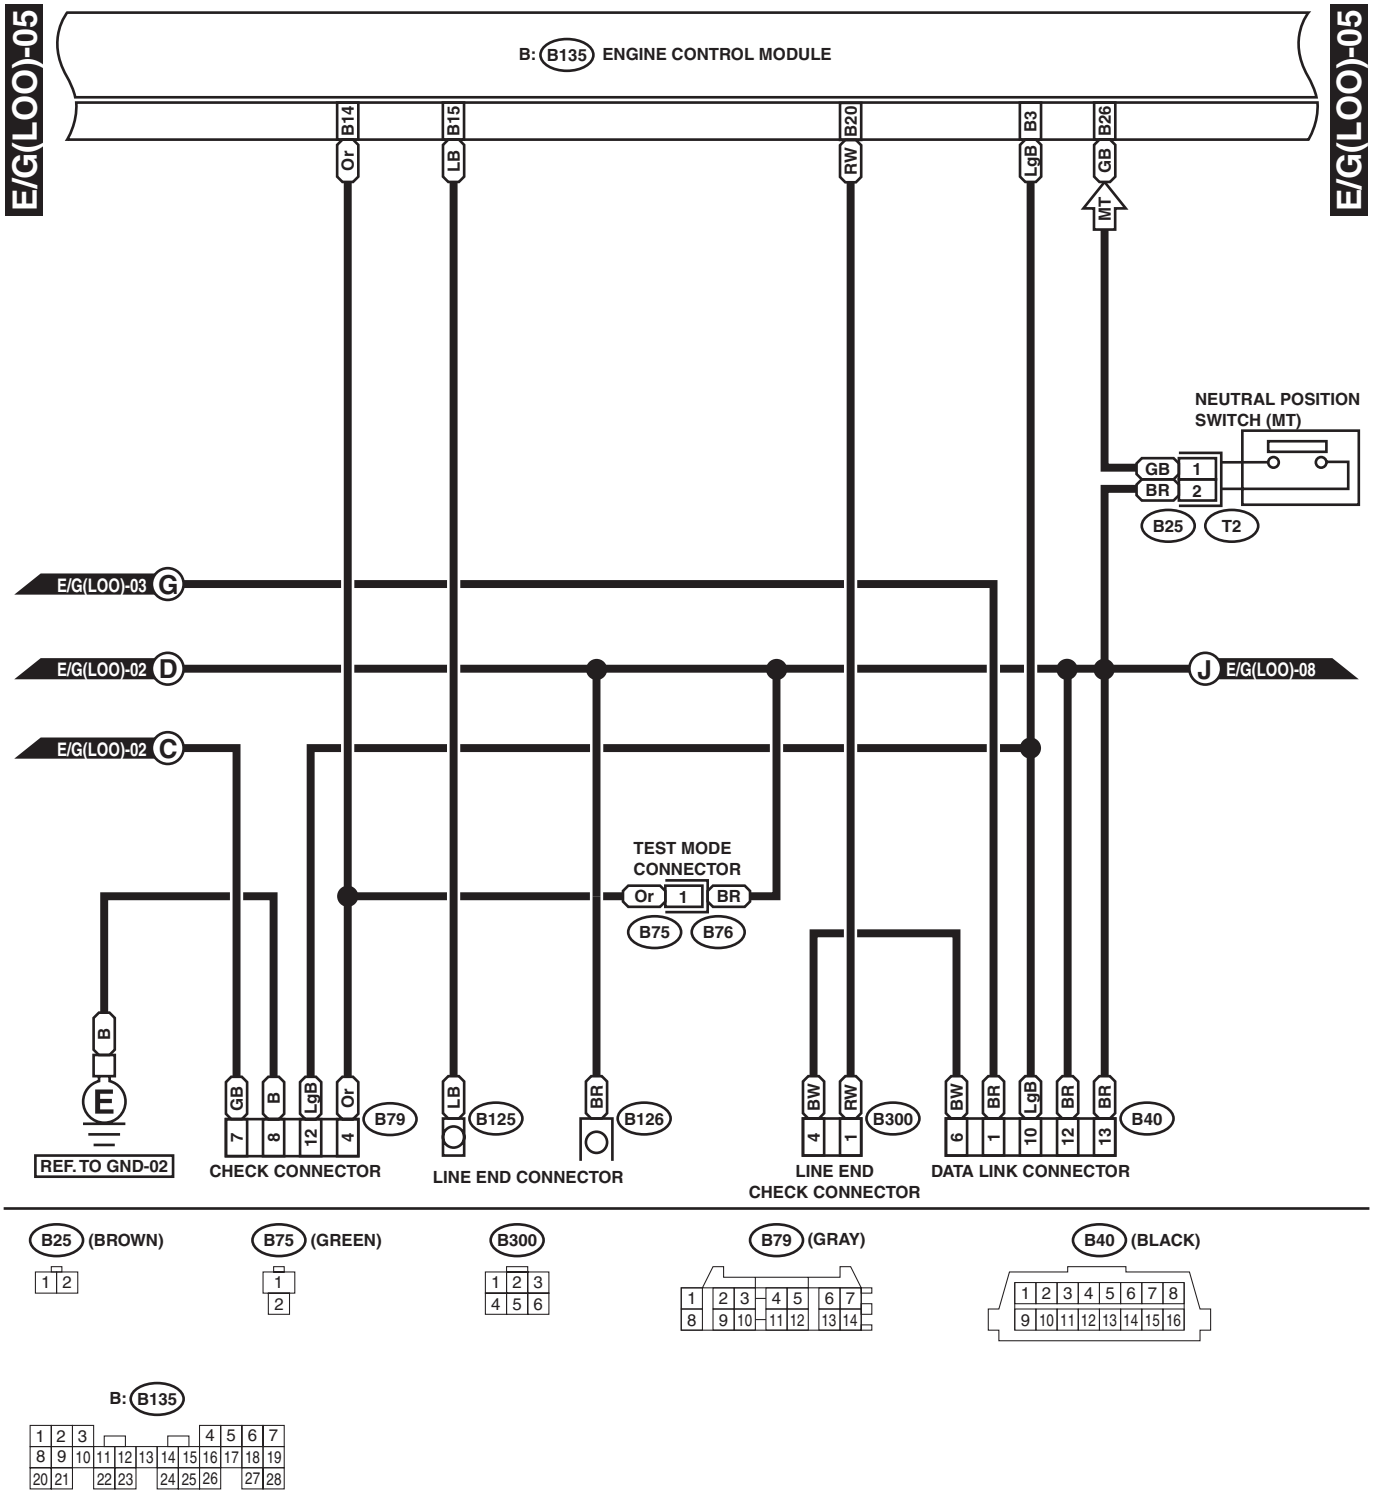
E/G(LOO)-05
B: B135 ENGINE CONTROL MODULE
E/G(LOO)-05
B14
B15
B20
B3
B26
Or
LB
RW
LgB
GB
MT
NEUTRAL POSITION SWITCH (MT)
GB
BR
1
2
B25
T2
E/G(LOO)-03 G
E/G(LOO)-02 D
J E/G(LOO)-08
E/G(LOO)-02 C
TEST MODE CONNECTOR
Or
1
BR
B75
B76
B
E
REF. TO GND-02
GB
B
LgB
Or
7
8
12
4
B79
CHECK CONNECTOR
LB
B125
LINE END CONNECTOR
BR
B126
BW
RW
4
1
B300
LINE END CHECK CONNECTOR
BW
BR
LgB
BR
BR
6
1
10
12
13
B40
DATA LINK CONNECTOR
B25 (BROWN)
1 2
B75 (GREEN)
1
2
B300
1 2 3
4 5 6
B79 (GRAY)
1 2 3 4 5 6 7
8 9 10 11 12 13 14
B40 (BLACK)
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
B: B135
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28

WI-02311

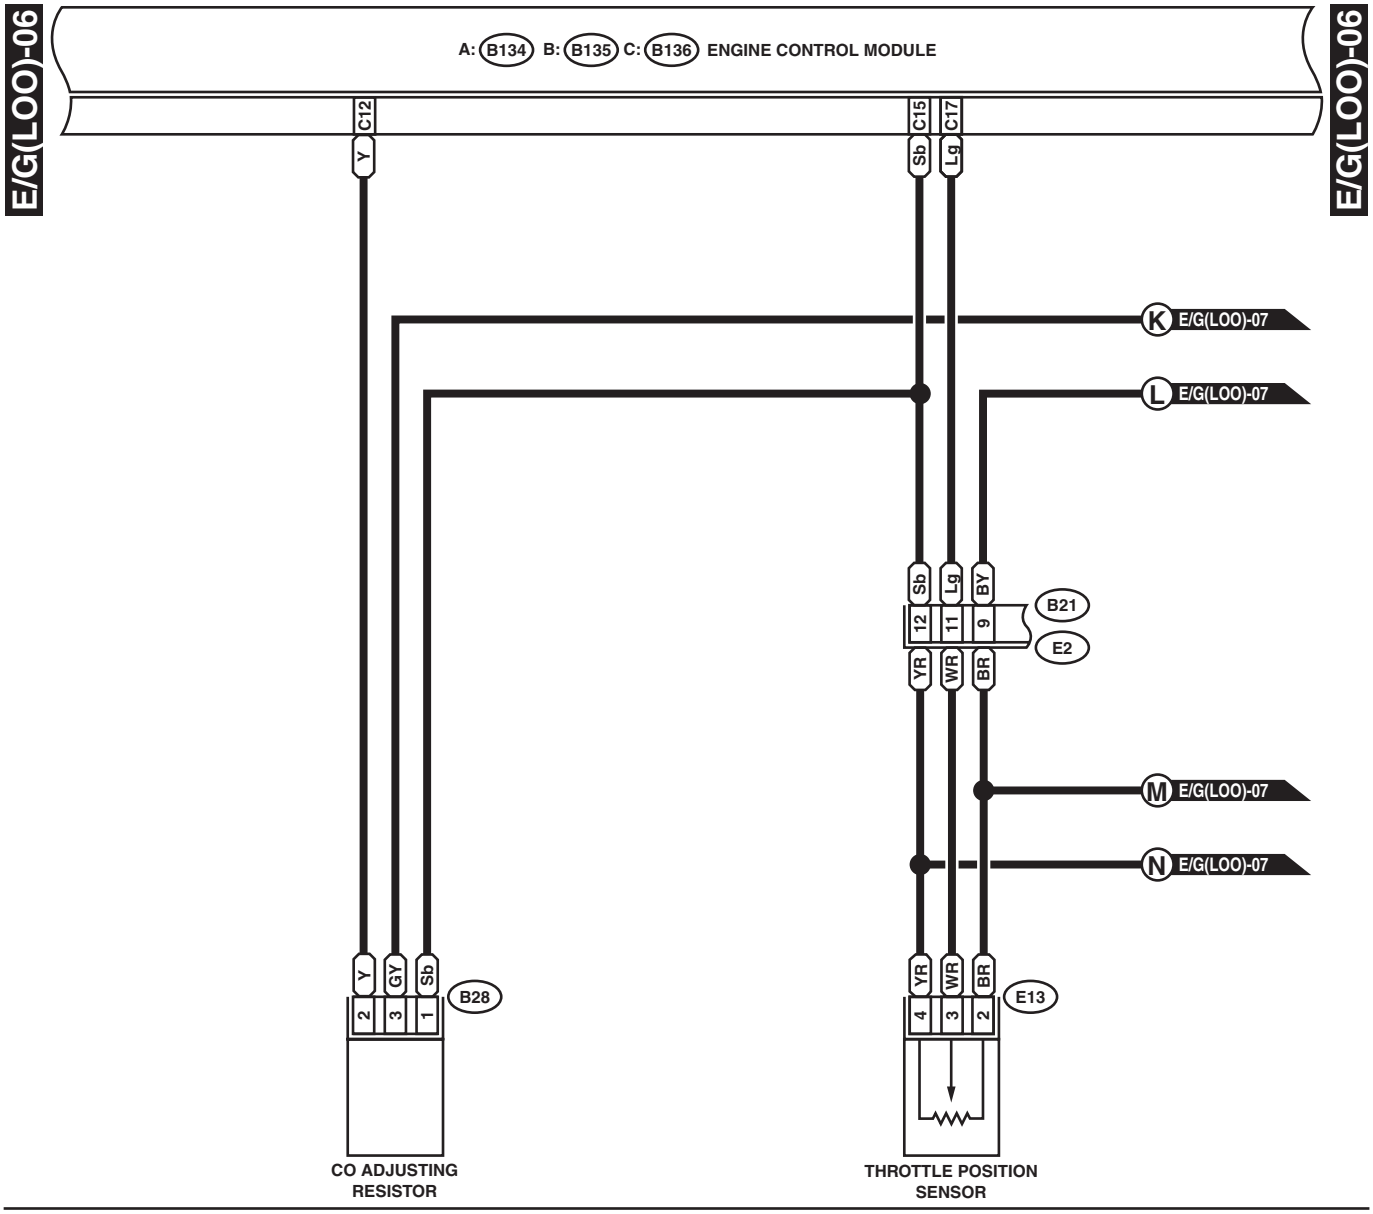
E/G(LOO)-06
A: B134 B: B135 C: B136 ENGINE CONTROL MODULE
E/G(LOO)-06
C12
C15
C17
Y
Sb
Lg
K E/G(LOO)-07
L E/G(LOO)-07
Sb
Lg
BY
12
11
9
B21
E2
YR
WR
BR
M E/G(LOO)-07
N E/G(LOO)-07
Y
GY
Sb
2
3
1
B28
YR
WR
BR
4
3
2
E13
CO ADJUSTING RESISTOR
THROTTLE POSITION SENSOR

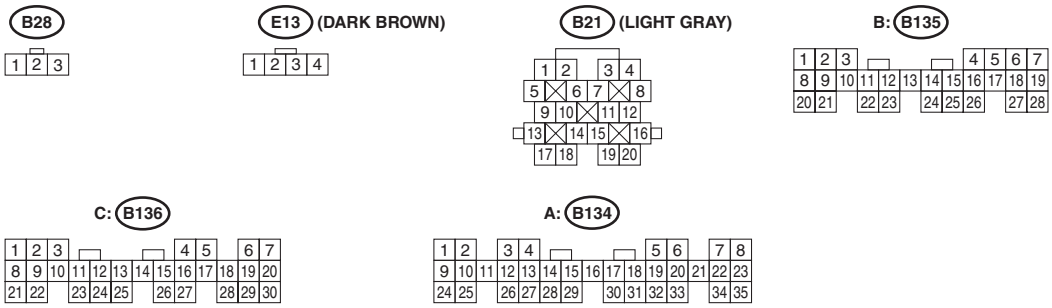
B28
1 2 3
E13 (DARK BROWN)
1 2 3 4
B21 (LIGHT GRAY)
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B: B135
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
C: B136
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30
A: B134
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
24 25 26 27 28 29 30 31 32 33 34 35

WI-02312

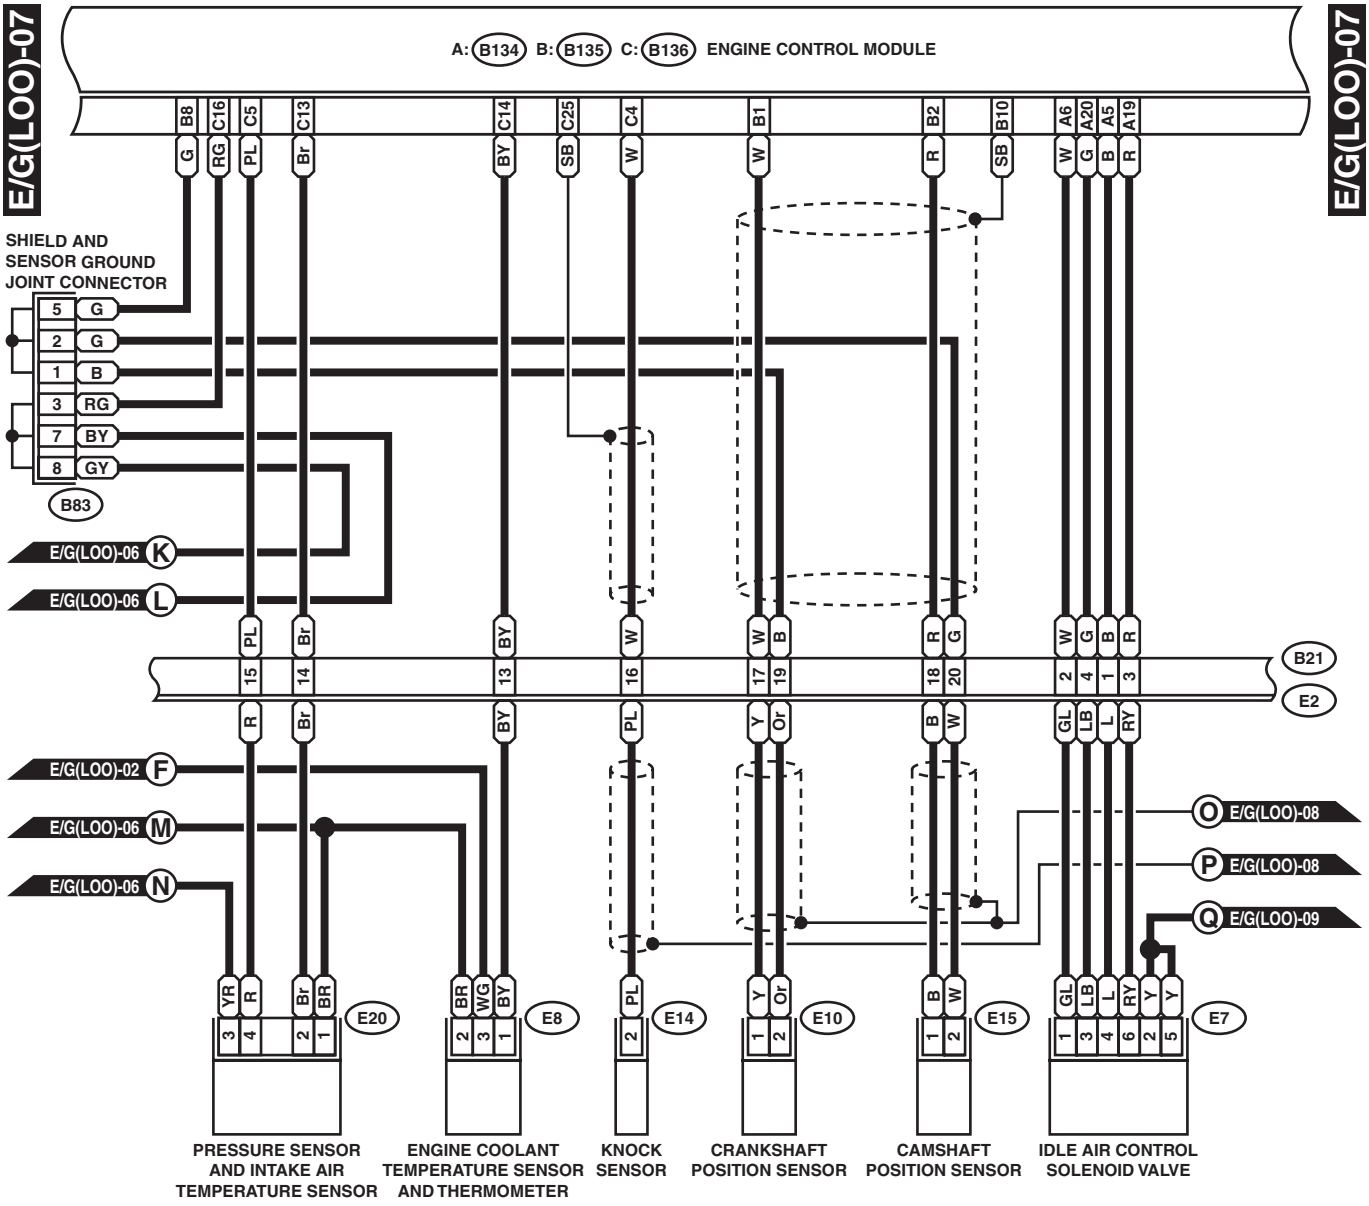
E/G(LOO)-07
A: B134 B: B135 C: B136 ENGINE CONTROL MODULE
E/G(LOO)-07
SHIELD AND SENSOR GROUND JOINT CONNECTOR
B83
E/G(LOO)-06 K
E/G(LOO)-06 L
B21
E2
E/G(LOO)-02 F
E/G(LOO)-06 M
E/G(LOO)-06 N
O E/G(LOO)-08
P E/G(LOO)-08
Q E/G(LOO)-09
E20
E8
E14
E10
E15
E7
PRESSURE SENSOR AND INTAKE AIR TEMPERATURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR AND THERMOMETER
KNOCK SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
IDLE AIR CONTROL SOLENOID VALVE

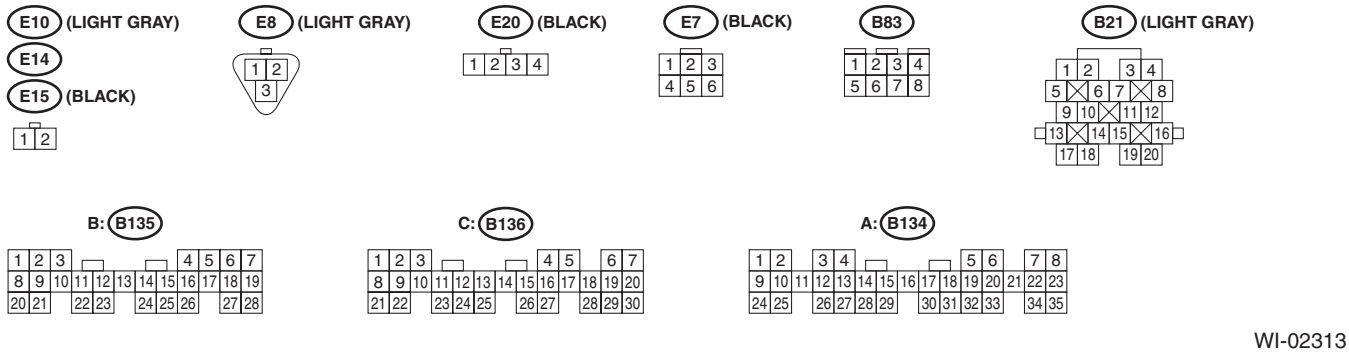
E10 (LIGHT GRAY)
E14
E15 (BLACK)
E8 (LIGHT GRAY)
E20 (BLACK)
E7 (BLACK)
B83
B21 (LIGHT GRAY)
B: B135
C: B136
A: B134

WI-02313

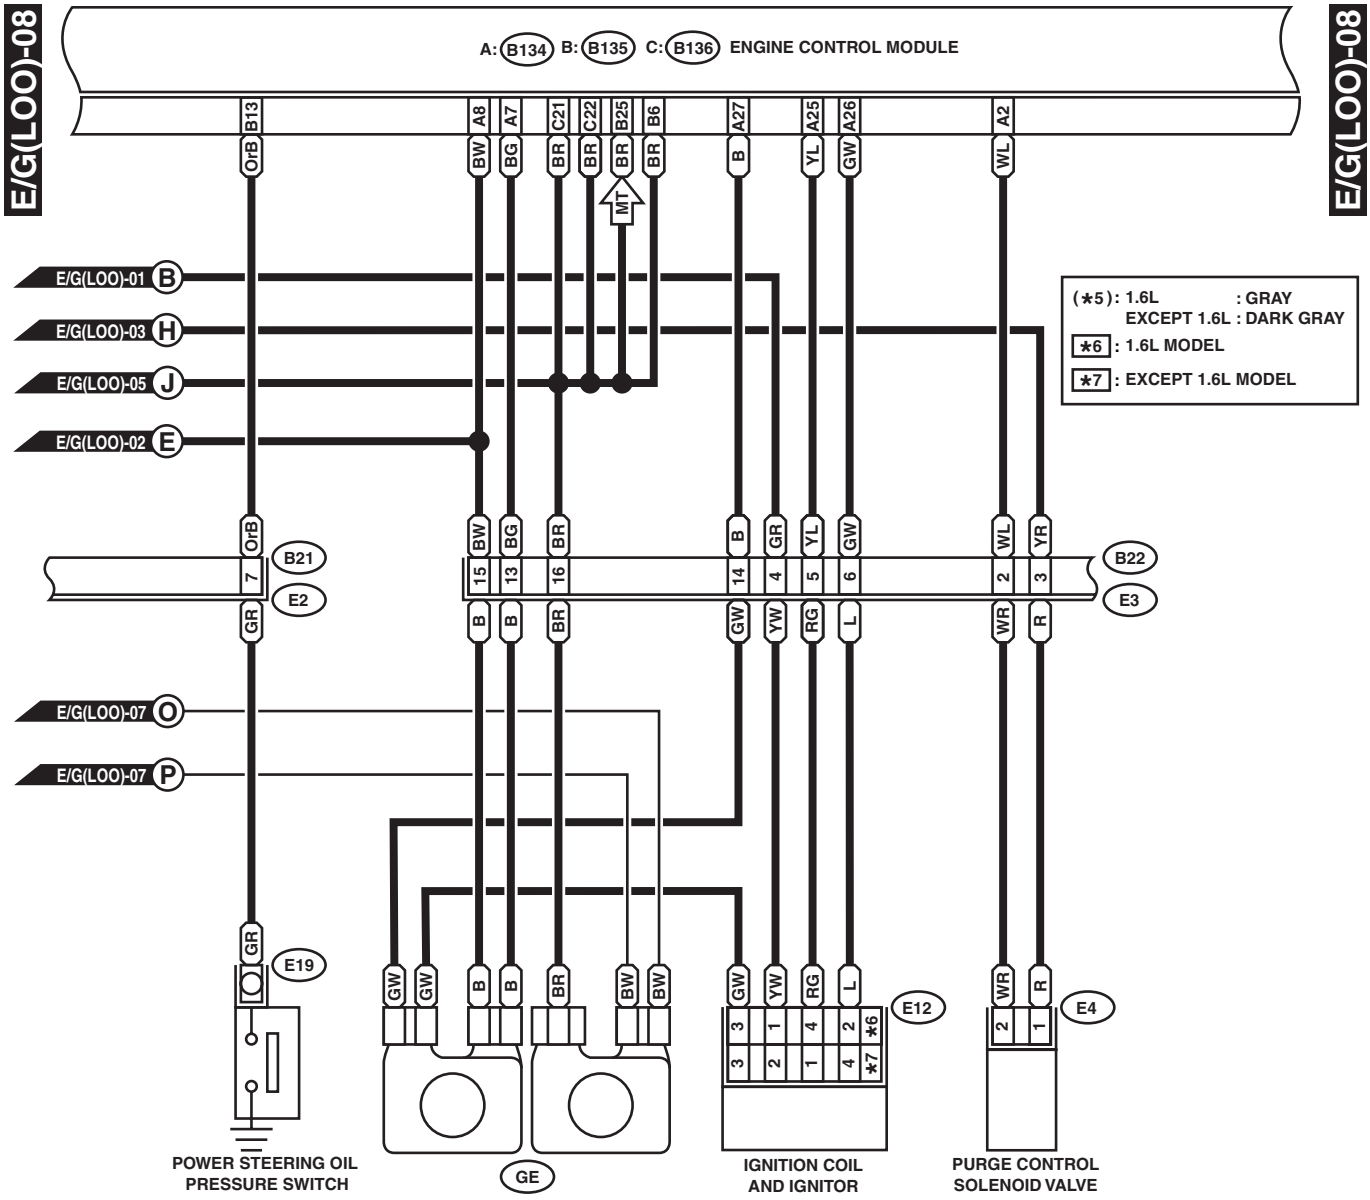
E/G(LOO)-08
A: B134 B: B135 C: B136 ENGINE CONTROL MODULE
E/G(LOO)-08
E/G(LOO)-01 B
E/G(LOO)-03 H
E/G(LOO)-05 J
E/G(LOO)-02 E
E/G(LOO)-07 O
E/G(LOO)-07 P
(*5): 1.6L : GRAY
EXCEPT 1.6L : DARK GRAY
*6 : 1.6L MODEL
*7 : EXCEPT 1.6L MODEL
B21
E2
B22
E3
E19
E12
E4
MT
POWER STEERING OIL PRESSURE SWITCH
GE
IGNITION COIL AND IGNITOR
PURGE CONTROL SOLENOID VALVE

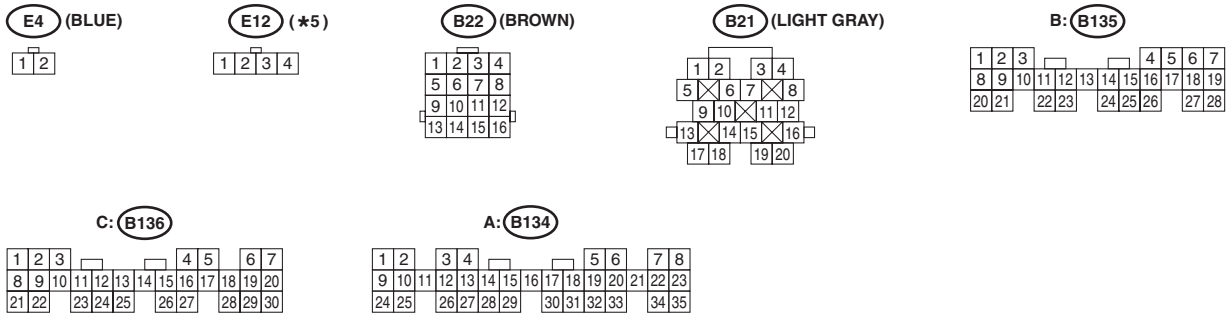
E4 (BLUE)
E12 (*5)
B22 (BROWN)
B21 (LIGHT GRAY)
B: B135
C: B136
A: B134

WI-02314

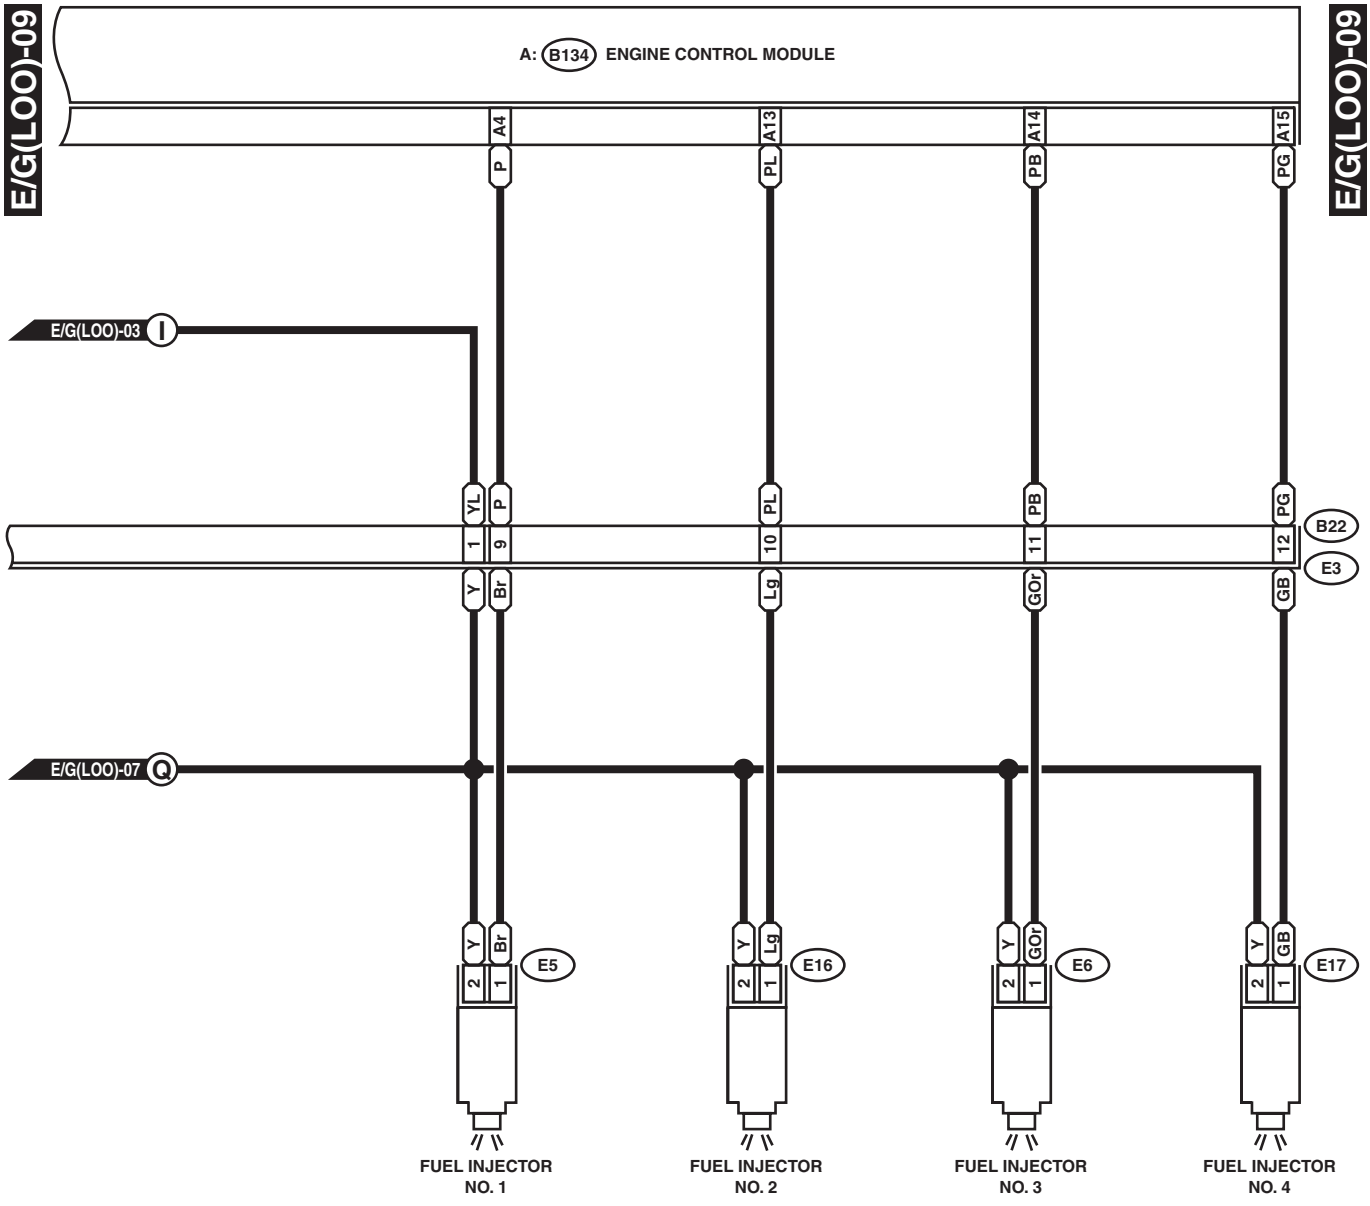

E5 (LIGHT GRAY)
E6 (LIGHT GRAY)
E16 (LIGHT GRAY)
E17 (LIGHT GRAY)

B22 (BROWN)



A: B134



WI-02315

2. LHD SOHC WITH OBD MODEL

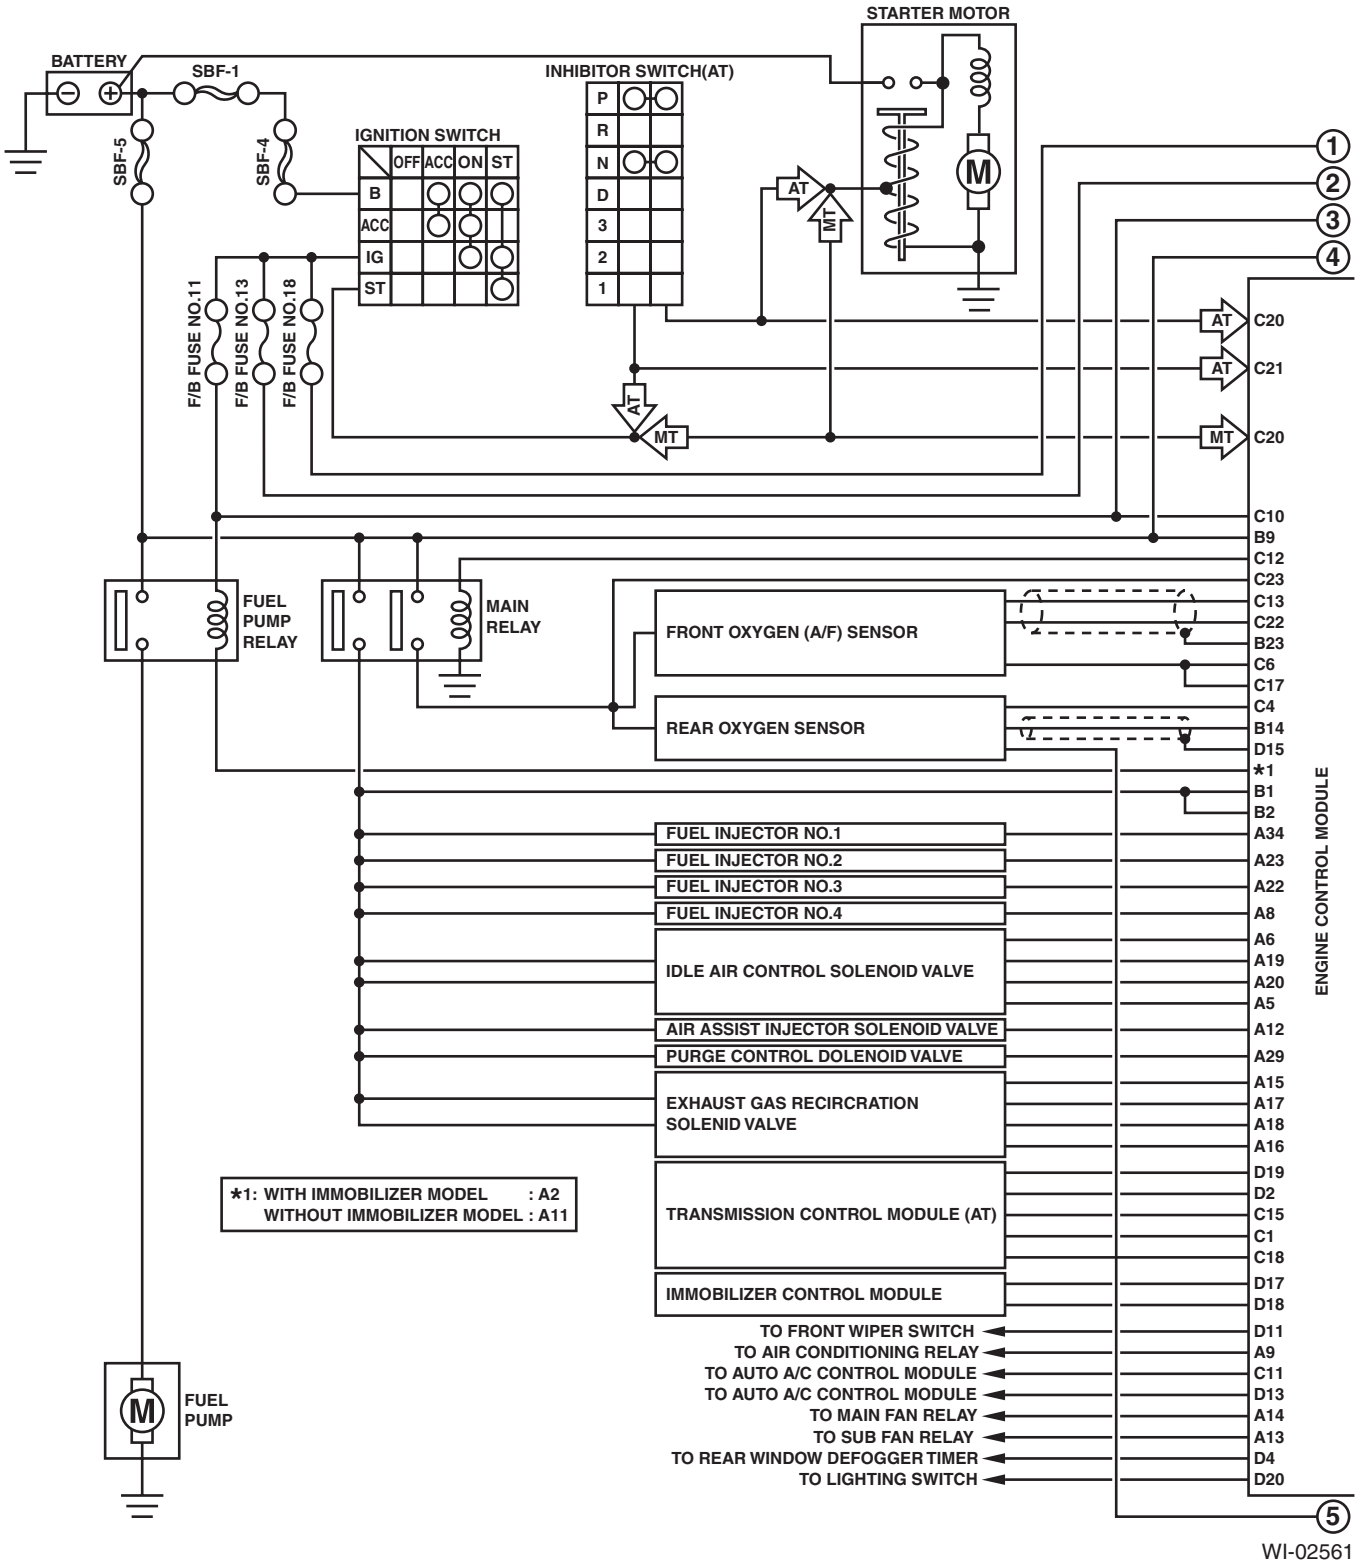

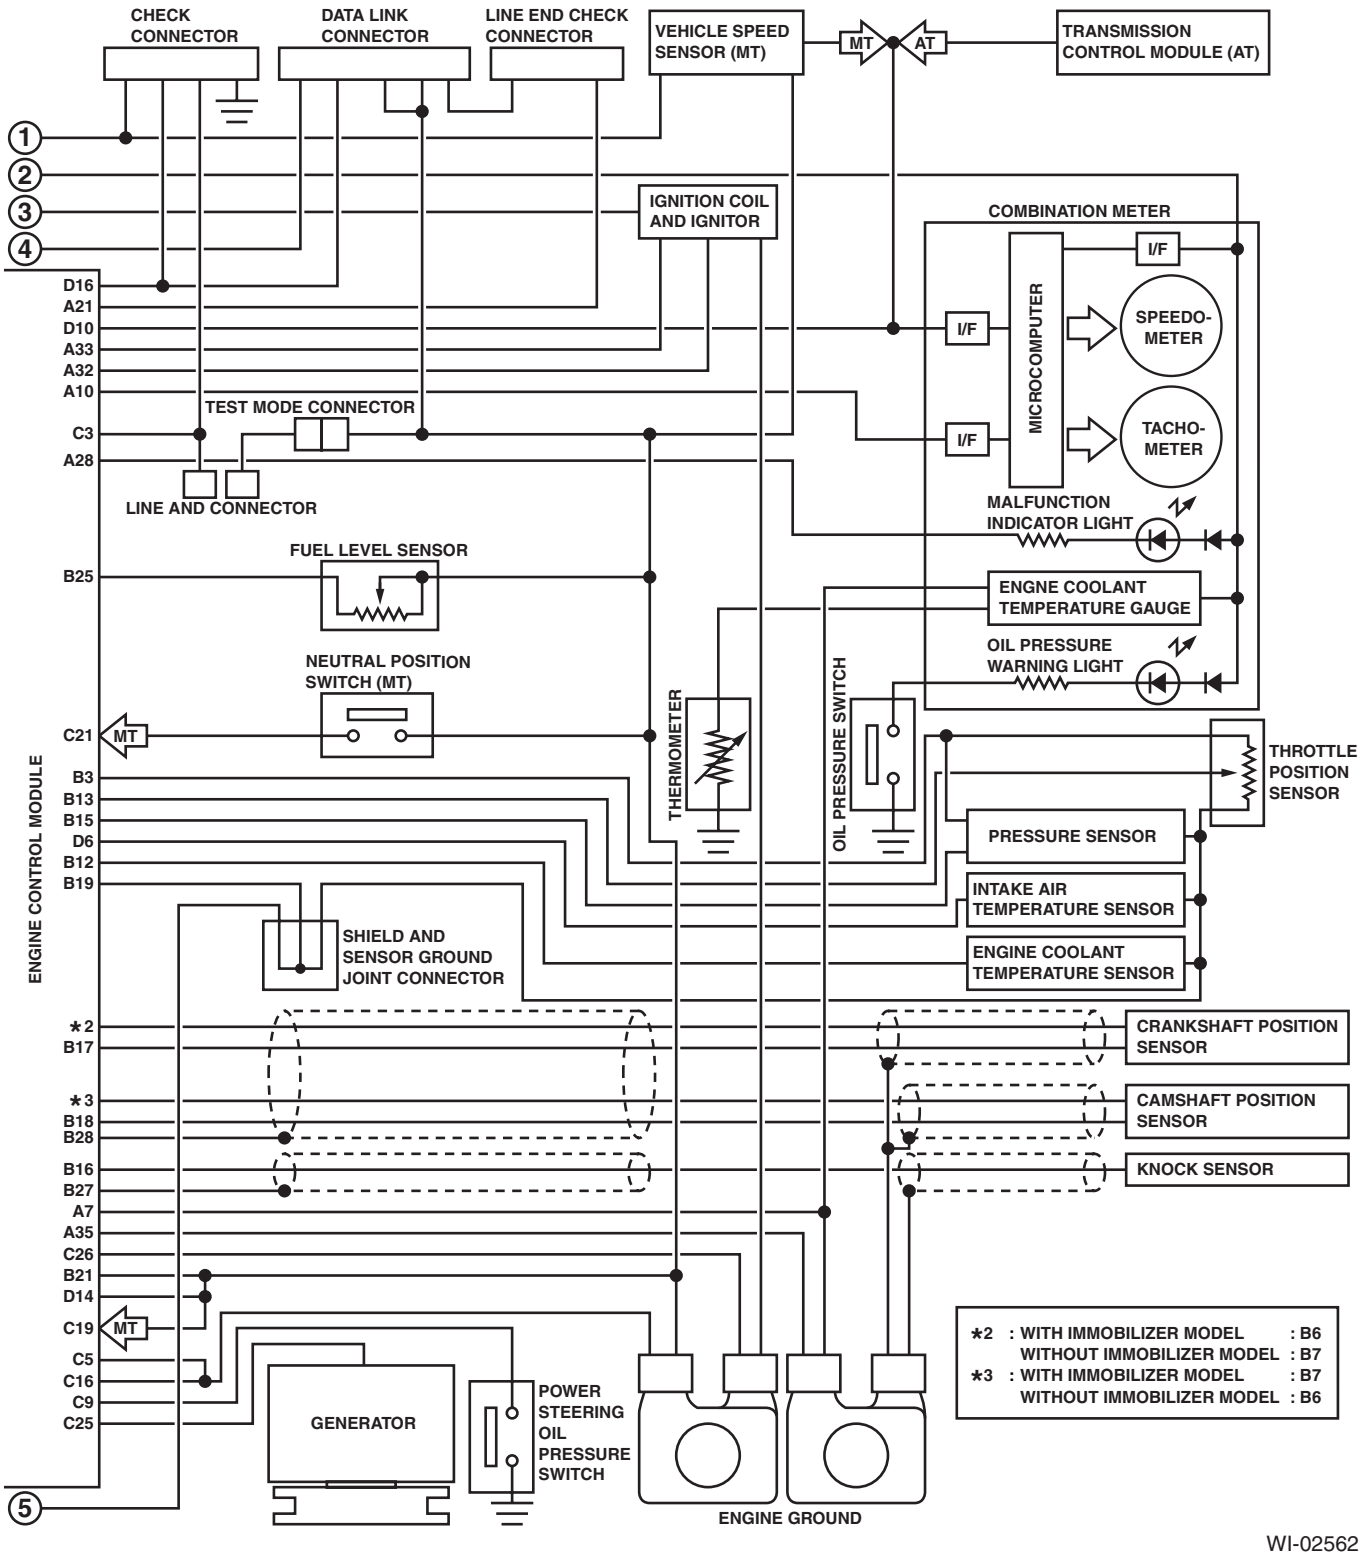
CHECK CONNECTOR
DATA LINK CONNECTOR
LINE END CHECK CONNECTOR
VEHICLE SPEED SENSOR (MT)
MT
AT
TRANSMISSION CONTROL MODULE (AT)
IGNITION COIL AND IGNITOR
COMBINATION METER
I/F
MICROCOMPUTER
SPEEDO-METER
TACHO-METER
MALFUNCTION INDICATOR LIGHT
ENGNE COOLANT TEMPERATURE GAUGE
OIL PRESSURE WARNING LIGHT
TEST MODE CONNECTOR
LINE AND CONNECTOR
FUEL LEVEL SENSOR
NEUTRAL POSITION SWITCH (MT)
THERMOMETER
OIL PRESSURE SWITCH
THROTTLE POSITION SENSOR
PRESSURE SENSOR
INTAKE AIR TEMPERATURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
SHIELD AND SENSOR GROUND JOINT CONNECTOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
ENGINE CONTROL MODULE
GENERATOR
POWER STEERING OIL PRESSURE SWITCH
ENGINE GROUND
D16
A21
D10
A33
A32
A10
C3
A28
B25
C21
B3
B13
B15
D6
B12
B19
∗2
B17
∗3
B18
B28
B16
B27
A7
A35
C26
B21
D14
C19
C5
C16
C9
C25
∗2 : WITH IMMOBILIZER MODEL : B6
WITHOUT IMMOBILIZER MODEL : B7
∗3 : WITH IMMOBILIZER MODEL : B7
WITHOUT IMMOBILIZER MODEL : B6

WI-02562

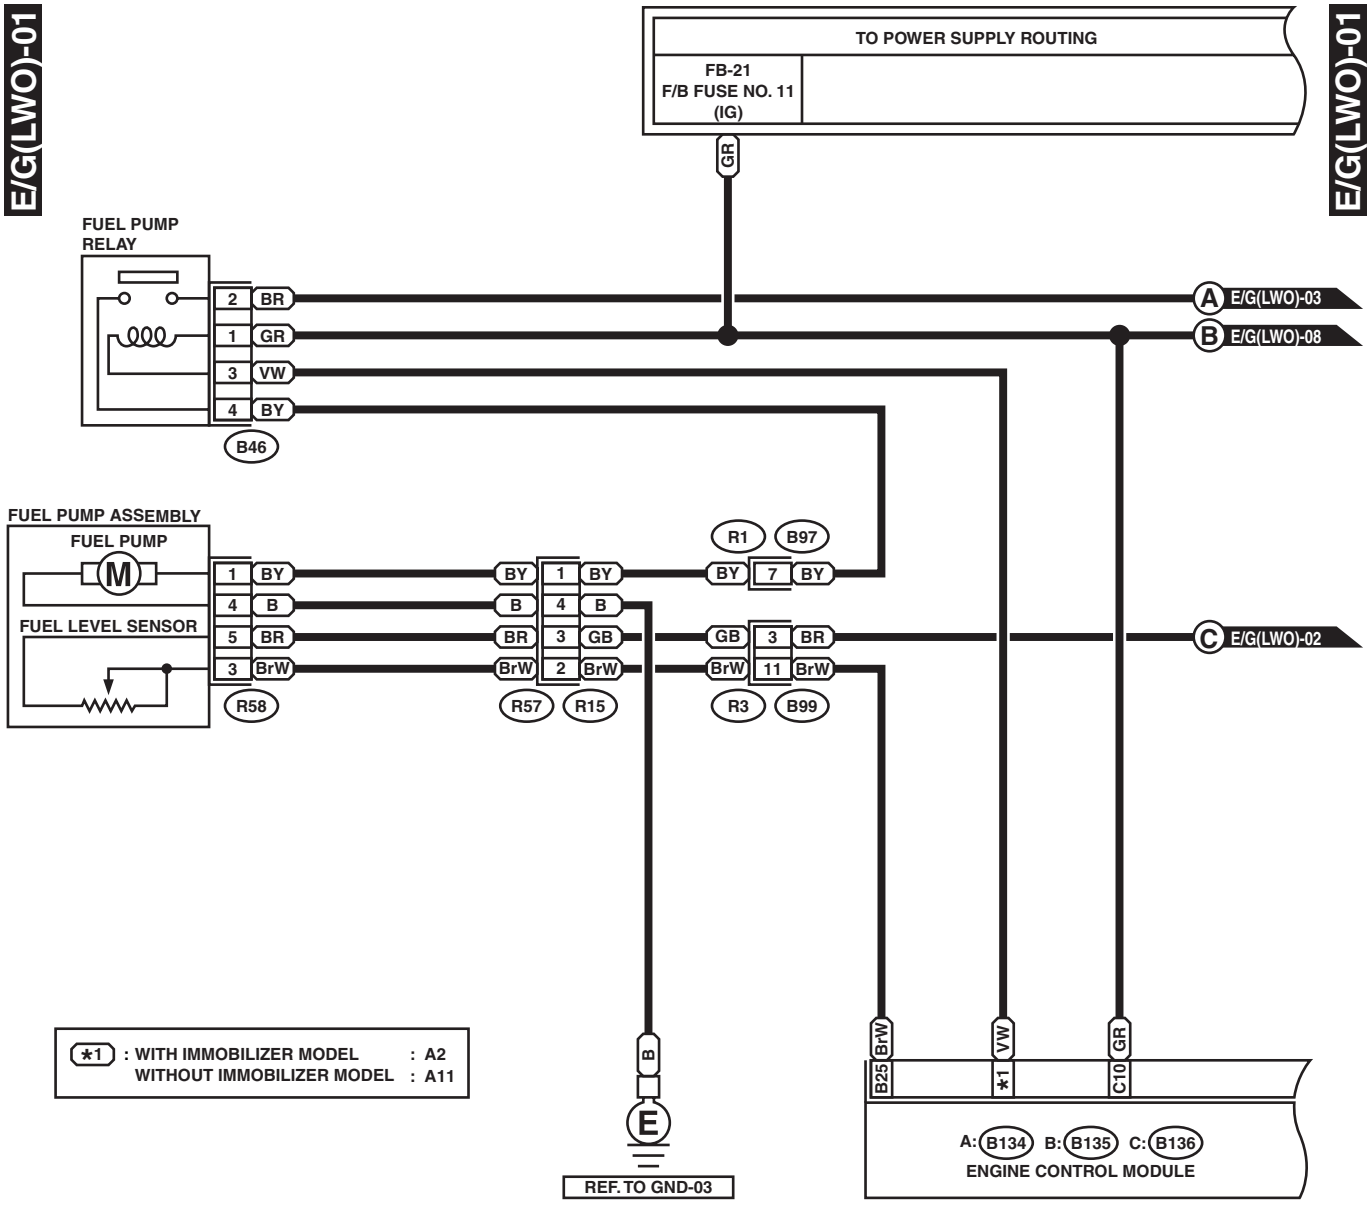
E/G(LWO)-01
E/G(LWO)-01
TO POWER SUPPLY ROUTING
FB-21
F/B FUSE NO. 11
(IG)
GR
FUEL PUMP
RELAY
2 BR
1 GR
3 VW
4 BY
B46
A E/G(LWO)-03
B E/G(LWO)-08
FUEL PUMP ASSEMBLY
FUEL PUMP
FUEL LEVEL SENSOR
1 BY
4 B
5 BR
3 BrW
R58
BY 1 BY
B 4 B
BR 3 GB
BrW 2 BrW
R57
R15
R1
B97
BY 7 BY
GB 3 BR
BrW 11 BrW
R3
B99
C E/G(LWO)-02
*1 : WITH IMMOBILIZER MODEL : A2
WITHOUT IMMOBILIZER MODEL : A11
B
E
REF. TO GND-03
BrW
VW
GR
B25
*1
C10
A: B134 B: B135 C: B136
ENGINE CONTROL MODULE

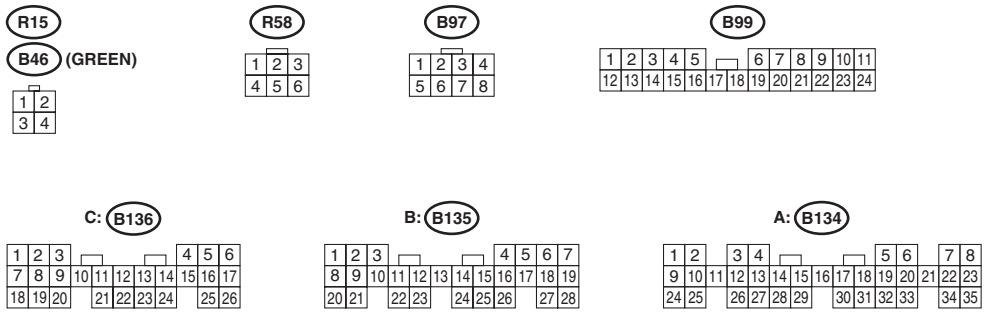
R15
B46 (GREEN)
R58
B97
B99
C: B136
B: B135
A: B134

WI-02316

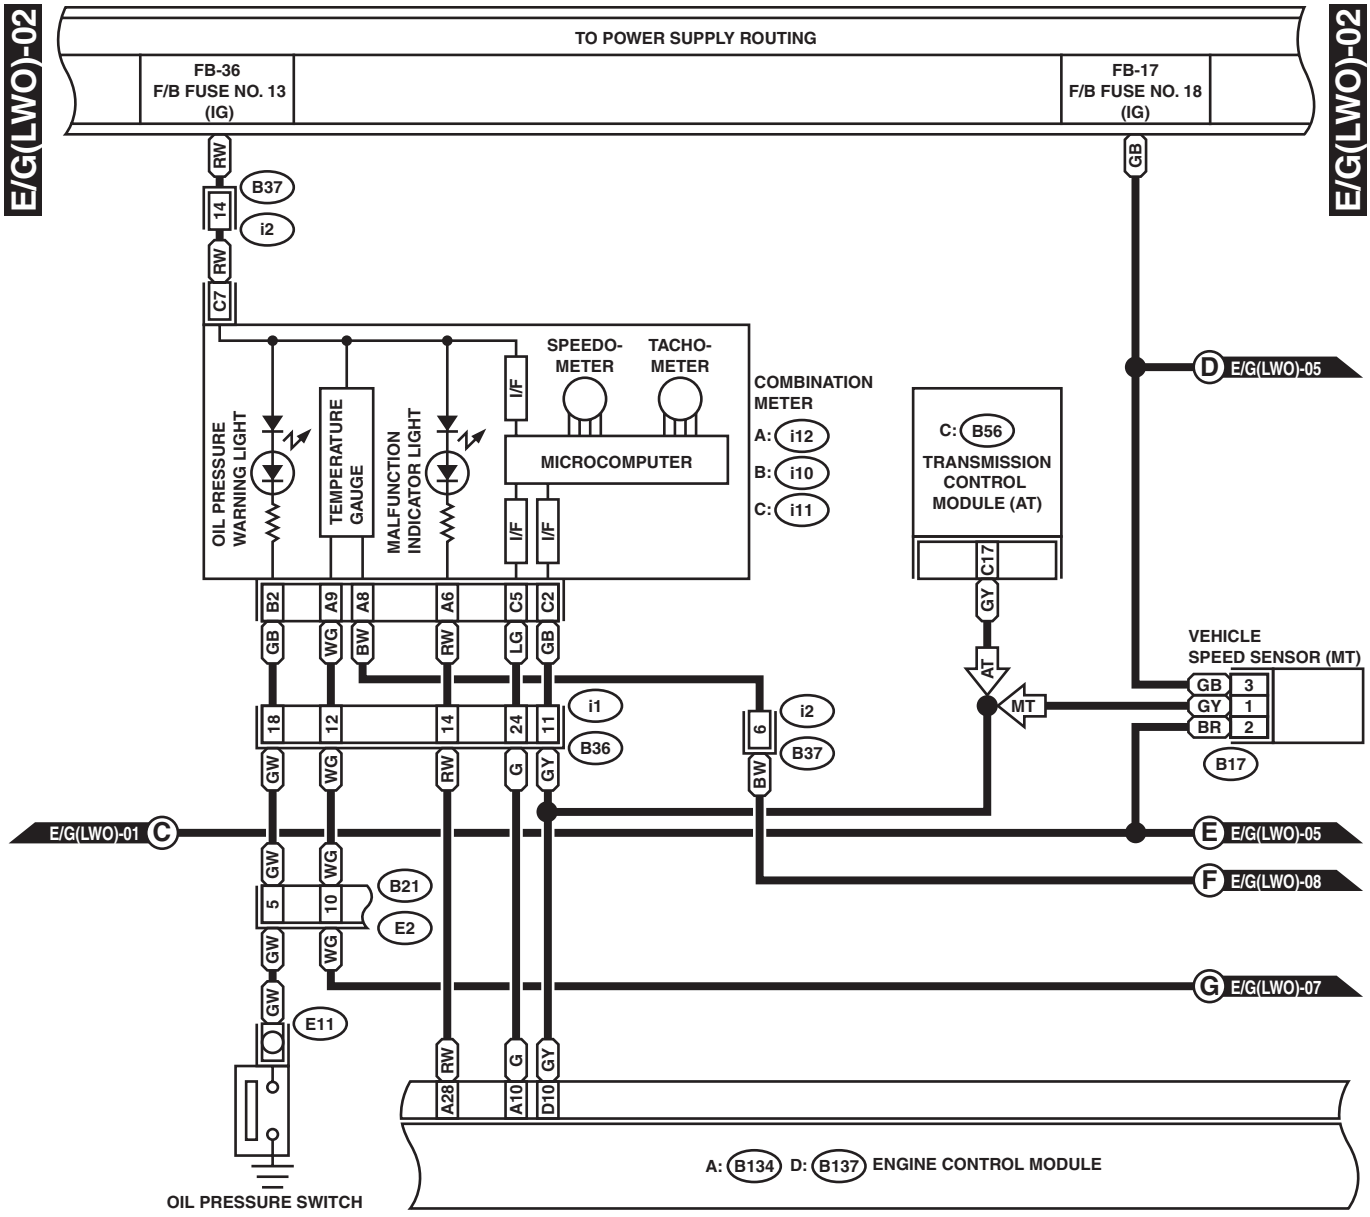
E/G(LWO)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO. 13
(IG)
FB-17
F/B FUSE NO. 18
(IG)
E/G(LWO)-02
RW
B37
14
i2
RW
C7
SPEEDO-
METER
TACHO-
METER
COMBINATION
METER
A: i12
B: i10
C: i11
OIL PRESSURE
WARNING LIGHT
TEMPERATURE
GAUGE
MALFUNCTION
INDICATOR LIGHT
I/F
MICROCOMPUTER
I/F
I/F
C: B56
TRANSMISSION
CONTROL
MODULE (AT)
C17
GY
AT
MT
GB
D E/G(LWO)-05
VEHICLE
SPEED SENSOR (MT)
GB 3
GY 1
BR 2
B17
B2
A9
A8
A6
C5
C2
GB
WG
BW
RW
LG
GB
18
12
14
24
11
i1
B36
6
i2
B37
GW
WG
RW
G
GY
BW
E/G(LWO)-01 C
E E/G(LWO)-05
F E/G(LWO)-08
GW
WG
5
10
B21
E2
GW
WG
G E/G(LWO)-07
GW
E11
RW
G
GY
A28
A10
D10
A: B134 D: B137 ENGINE CONTROL MODULE
OIL PRESSURE SWITCH

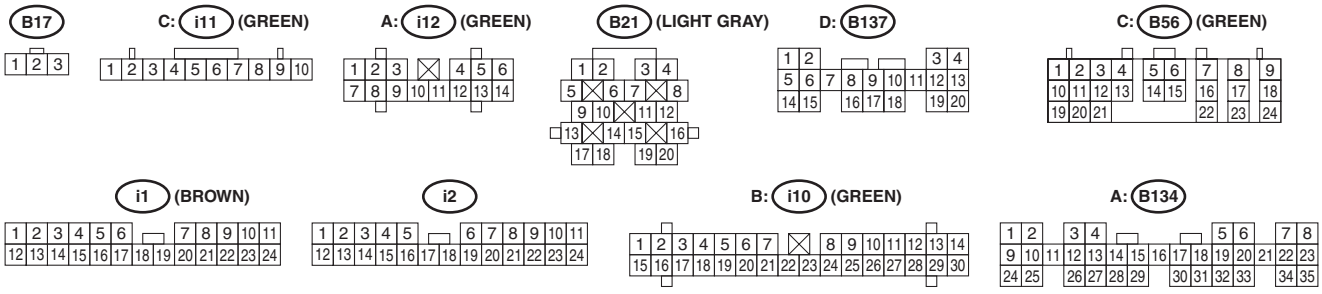
B17
C: i11 (GREEN)
A: i12 (GREEN)
B21 (LIGHT GRAY)
D: B137
C: B56 (GREEN)
i1 (BROWN)
i2
B: i10 (GREEN)
A: B134

WI-02317

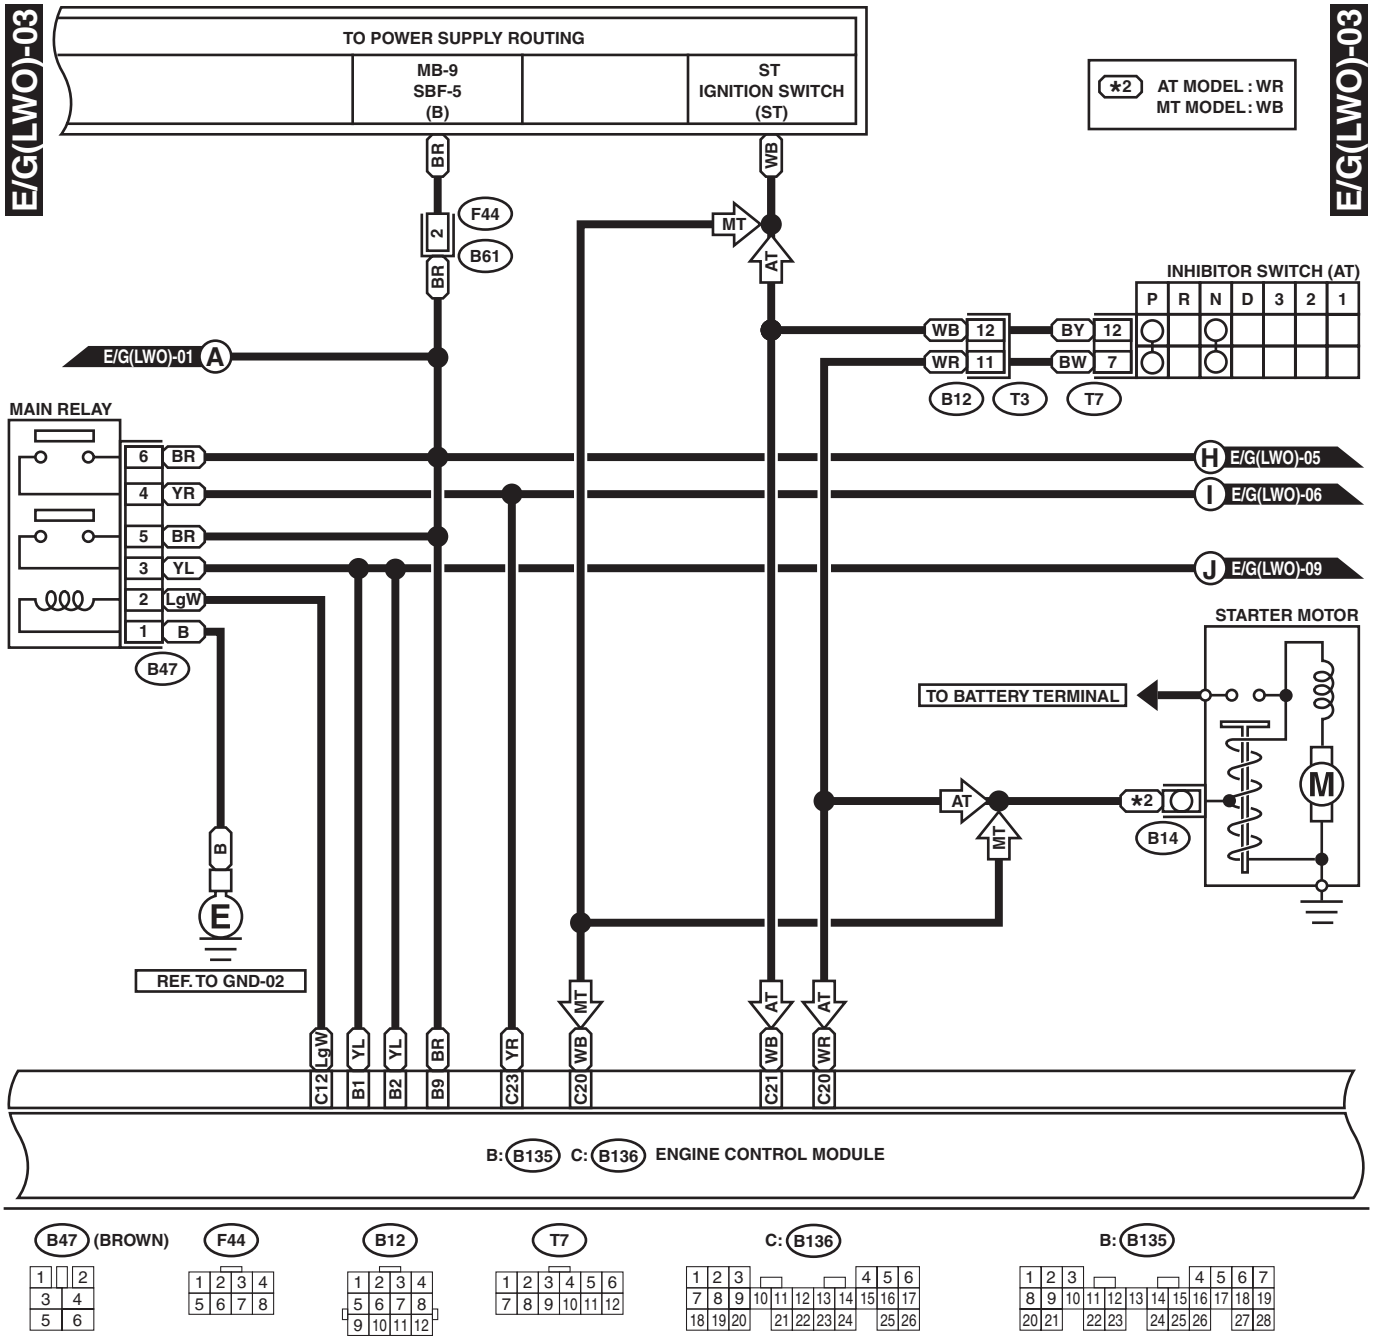
E/G(LWO)-03
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
ST
IGNITION SWITCH
(ST)
*2 AT MODEL : WR
MT MODEL : WB
BR
WB
F44
2
B61
MT
AT
INHIBITOR SWITCH (AT)
P R N D 3 2 1
WB 12
WR 11
BY 12
BW 7
B12 T3 T7
E/G(LWO)-01 A
MAIN RELAY
6 BR
4 YR
5 BR
3 YL
2 LgW
1 B
B47
H E/G(LWO)-05
I E/G(LWO)-06
J E/G(LWO)-09
STARTER MOTOR
TO BATTERY TERMINAL
M
*2
B14
B
E
REF. TO GND-02
C12 LgW
B1 YL
B2 YL
B9 BR
C23 YR
C20 WB
C21 WB
C20 WR
B: B135 C: B136 ENGINE CONTROL MODULE

B47 (BROWN)
F44
B12
T7
C: B136
B: B135

WI-02318

E/G(LWO)-04

E/G(LWO)-04

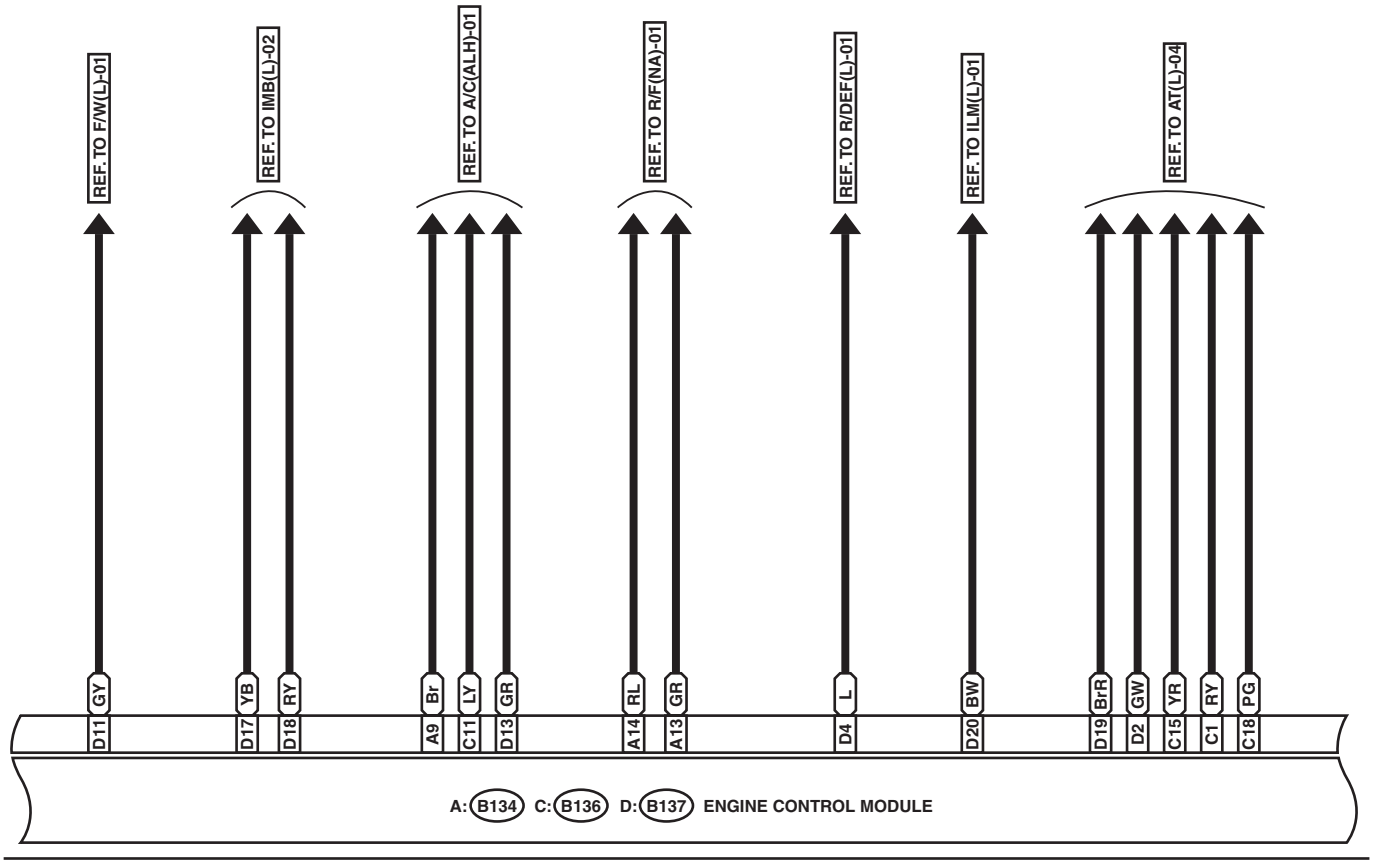



WI-02319

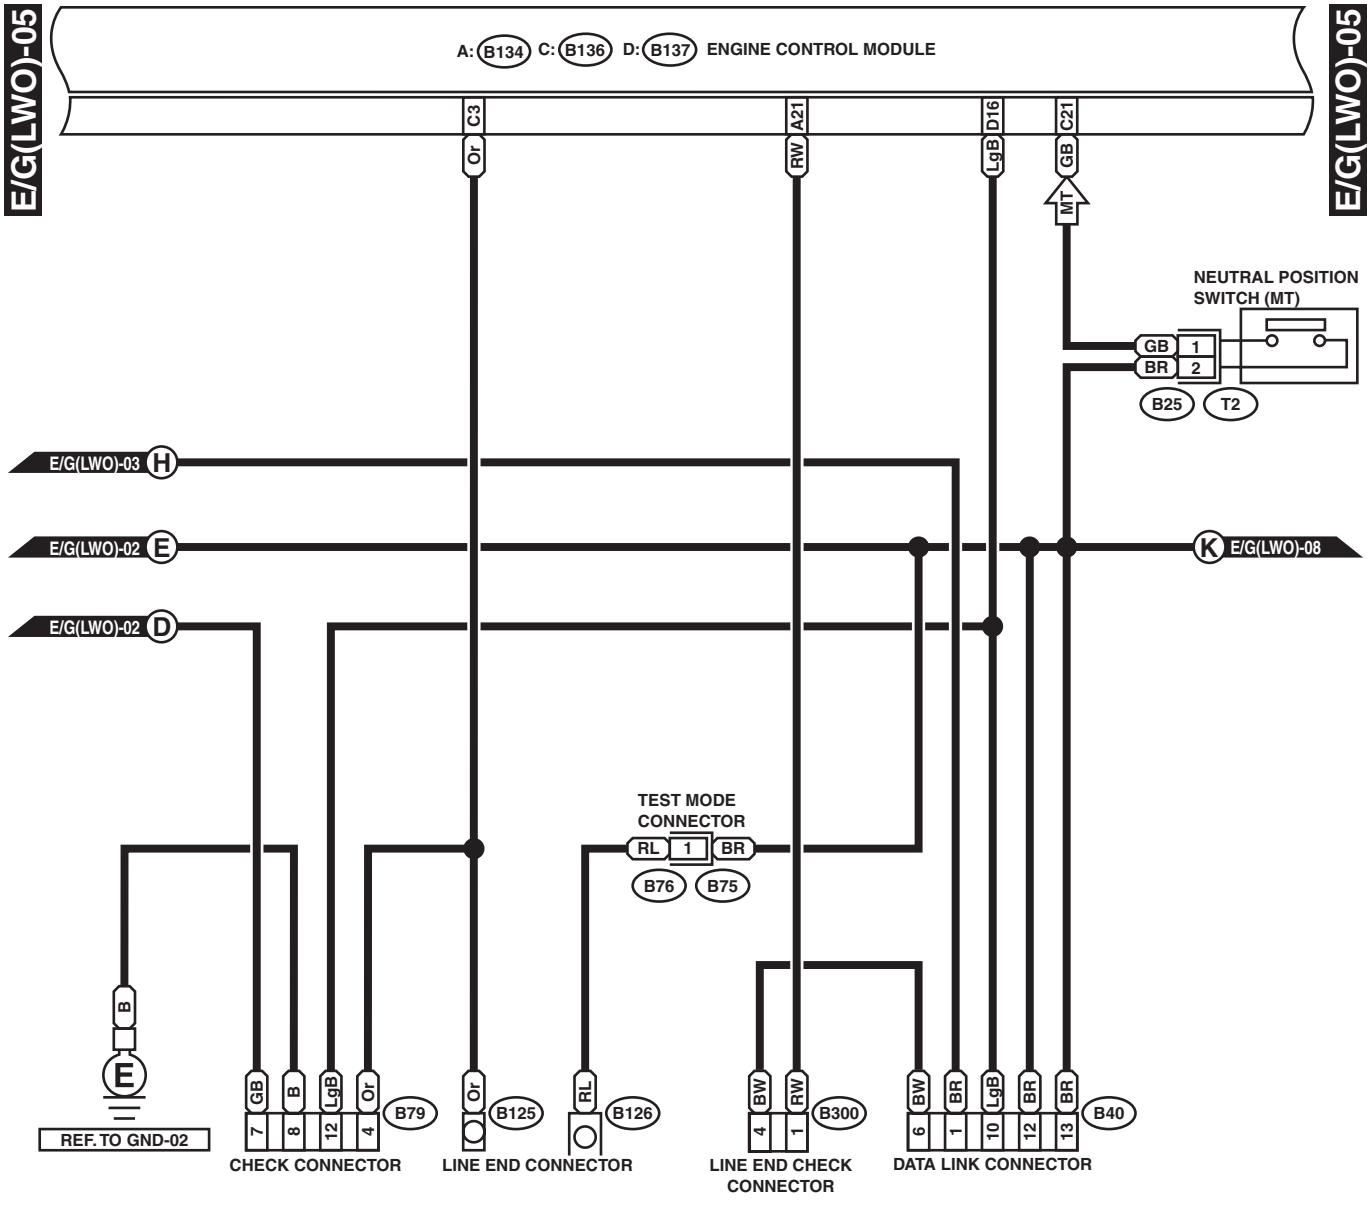
E/G(LWO)-05
A: B134 C: B136 D: B137 ENGINE CONTROL MODULE
E/G(LWO)-05
C3
A21
D16
C21
Or
RW
LgB
GB
MT
NEUTRAL POSITION SWITCH (MT)
GB 1
BR 2
B25
T2
E/G(LWO)-03 H
E/G(LWO)-02 E
K E/G(LWO)-08
E/G(LWO)-02 D
TEST MODE CONNECTOR
RL 1 BR
B76
B75
B
E
REF. TO GND-02
GB
B
LgB
Or
B79
7
8
12
4
CHECK CONNECTOR
Or
B125
LINE END CONNECTOR
RL
B126
BW
RW
B300
4
1
LINE END CHECK CONNECTOR
BW
BR
LgB
BR
BR
B40
6
1
10
12
13
DATA LINK CONNECTOR

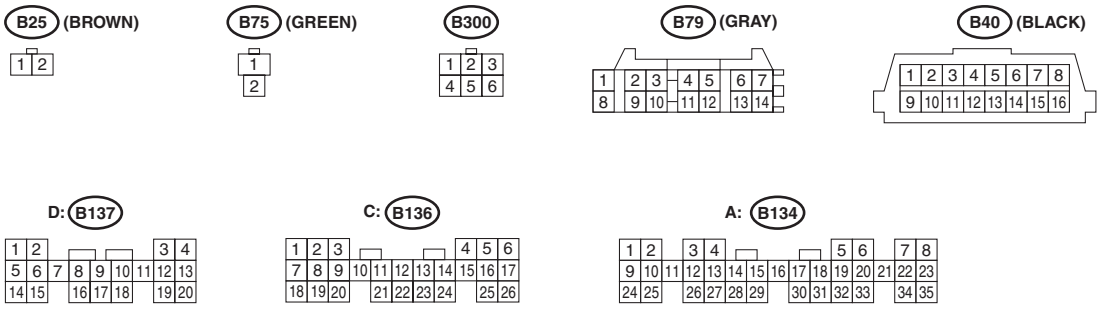
B25 (BROWN)
1 2
B75 (GREEN)
1
2
B300
1 2 3
4 5 6
B79 (GRAY)
1 2 3 4 5 6 7
8 9 10 11 12 13 14
B40 (BLACK)
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
D: B137
1 2 3 4
5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20
C: B136
1 2 3 4 5 6
7 8 9 10 11 12 13 14 15 16 17
18 19 20 21 22 23 24 25 26
A: B134
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
24 25 26 27 28 29 30 31 32 33 34 35

WI-02320

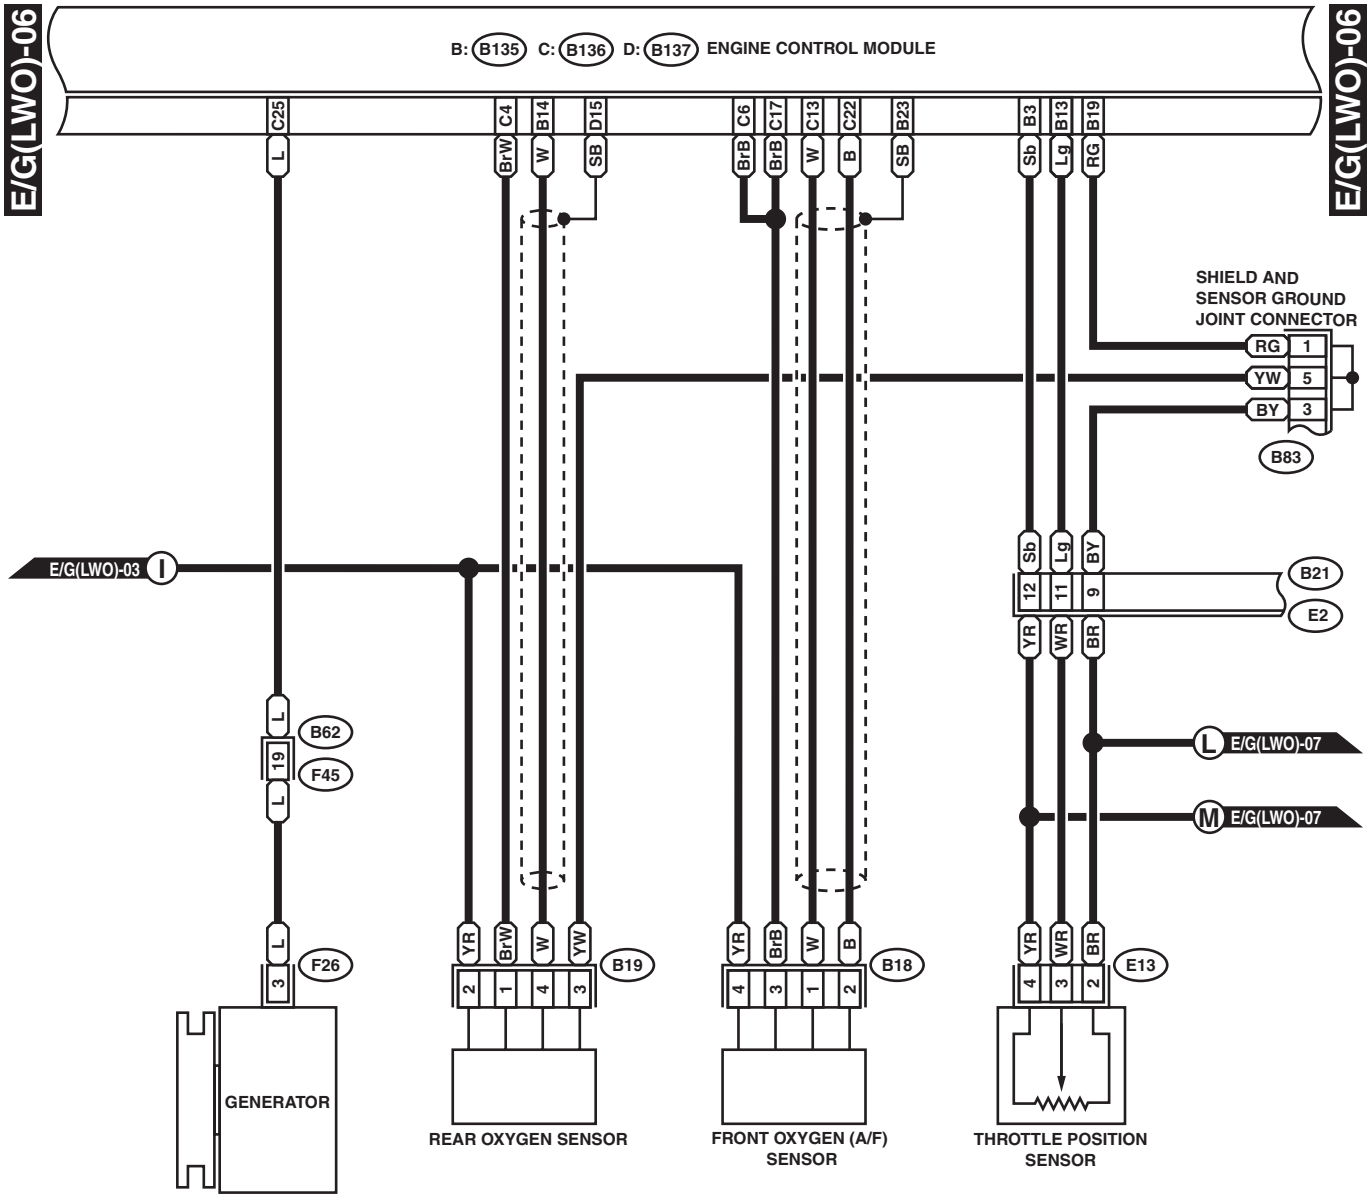
E/G(LWO)-06
B: B135 C: B136 D: B137 ENGINE CONTROL MODULE
E/G(LWO)-06
C25
C4
B14
D15
C6
C17
C13
C22
B23
B3
B13
B19
L
BrW
W
SB
BrB
BrB
W
B
SB
Sb
Lg
RG
SHIELD AND SENSOR GROUND JOINT CONNECTOR
RG 1
YW 5
BY 3
B83
E/G(LWO)-03 I
Sb
Lg
BY
12
11
9
B21
E2
YR
WR
BR
L
B62
19
F45
L
L E/G(LWO)-07
M E/G(LWO)-07
L
3
F26
YR
BrW
W
YW
2
1
4
3
B19
YR
BrB
W
B
4
3
1
2
B18
YR
WR
BR
4
3
2
E13
GENERATOR
REAR OXYGEN SENSOR
FRONT OXYGEN (A/F) SENSOR
THROTTLE POSITION SENSOR

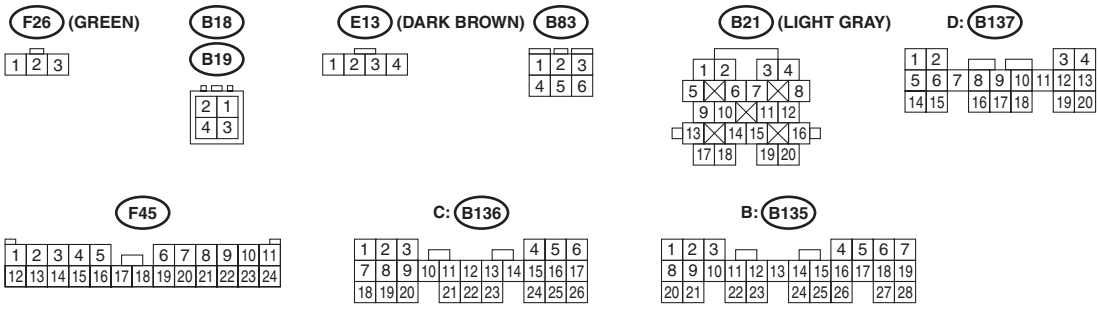
F26 (GREEN)
B18
B19
E13 (DARK BROWN)
B83
B21 (LIGHT GRAY)
D: B137
F45
C: B136
B: B135

WI-02321

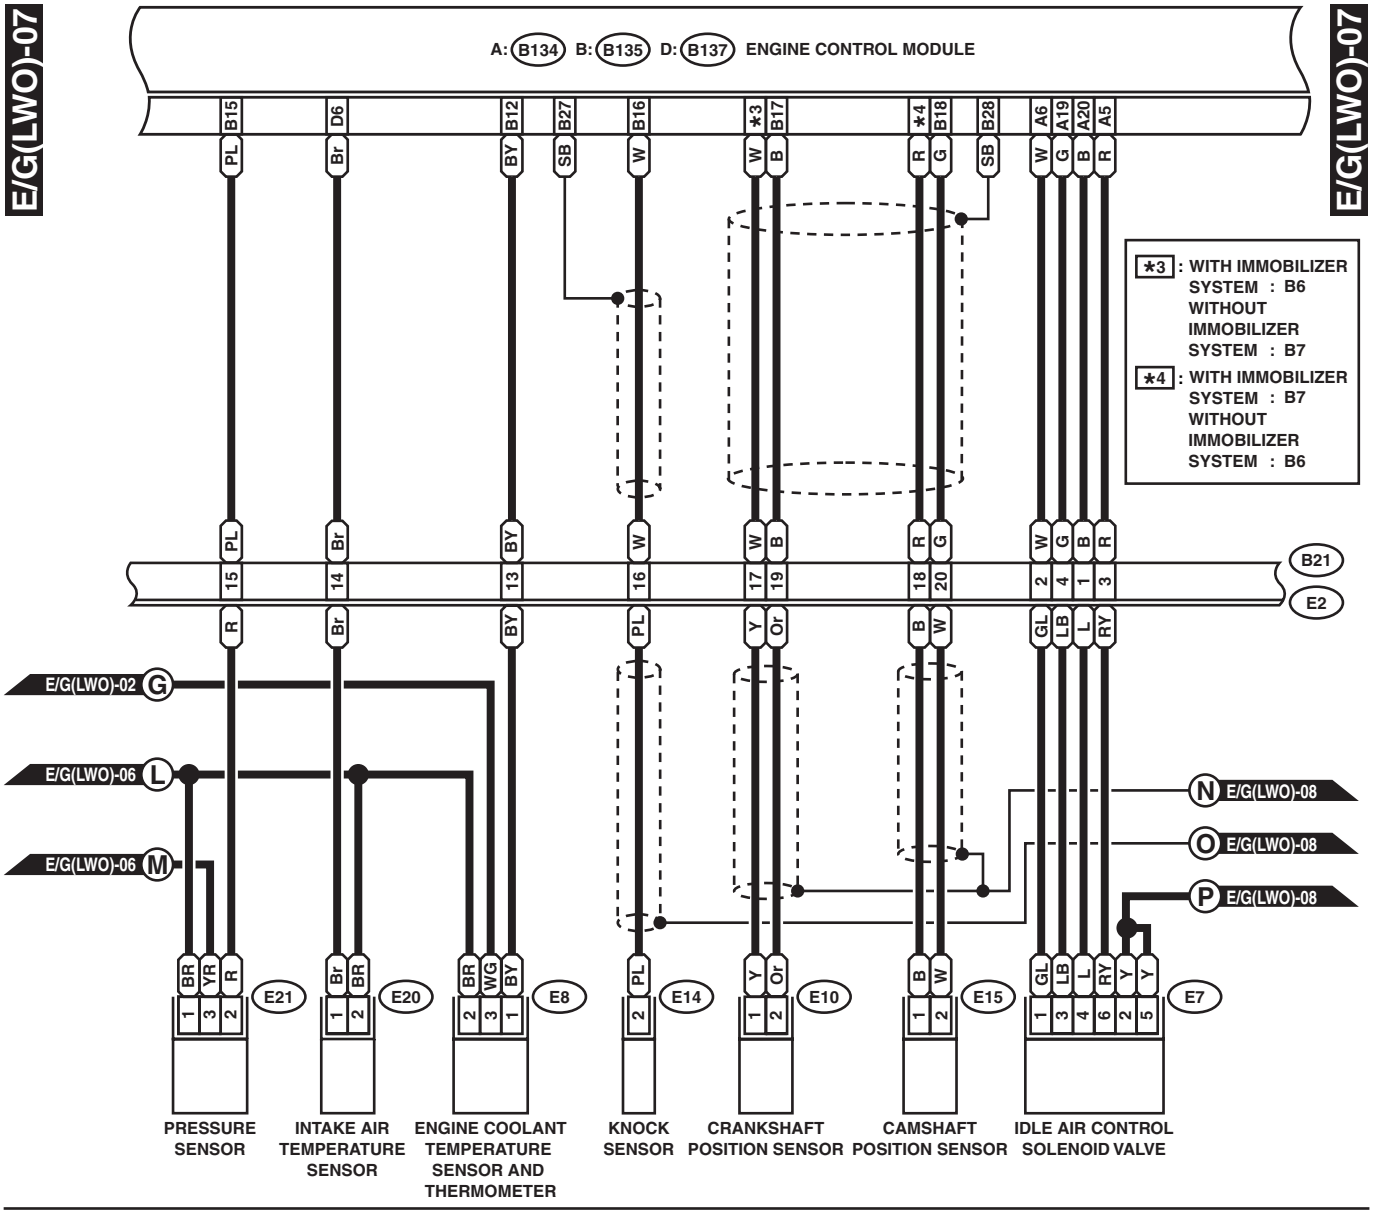

E10 (LIGHT GRAY)
E14 (LIGHT GRAY)
E15 (BLACK)
E20 (BLACK)

E8 (LIGHT GRAY)

E21 (LIGHT GRAY)

E7 (BLACK)

B21 (LIGHT GRAY)

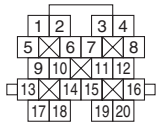

D: B137



B: B135



A: B134



WI-02322

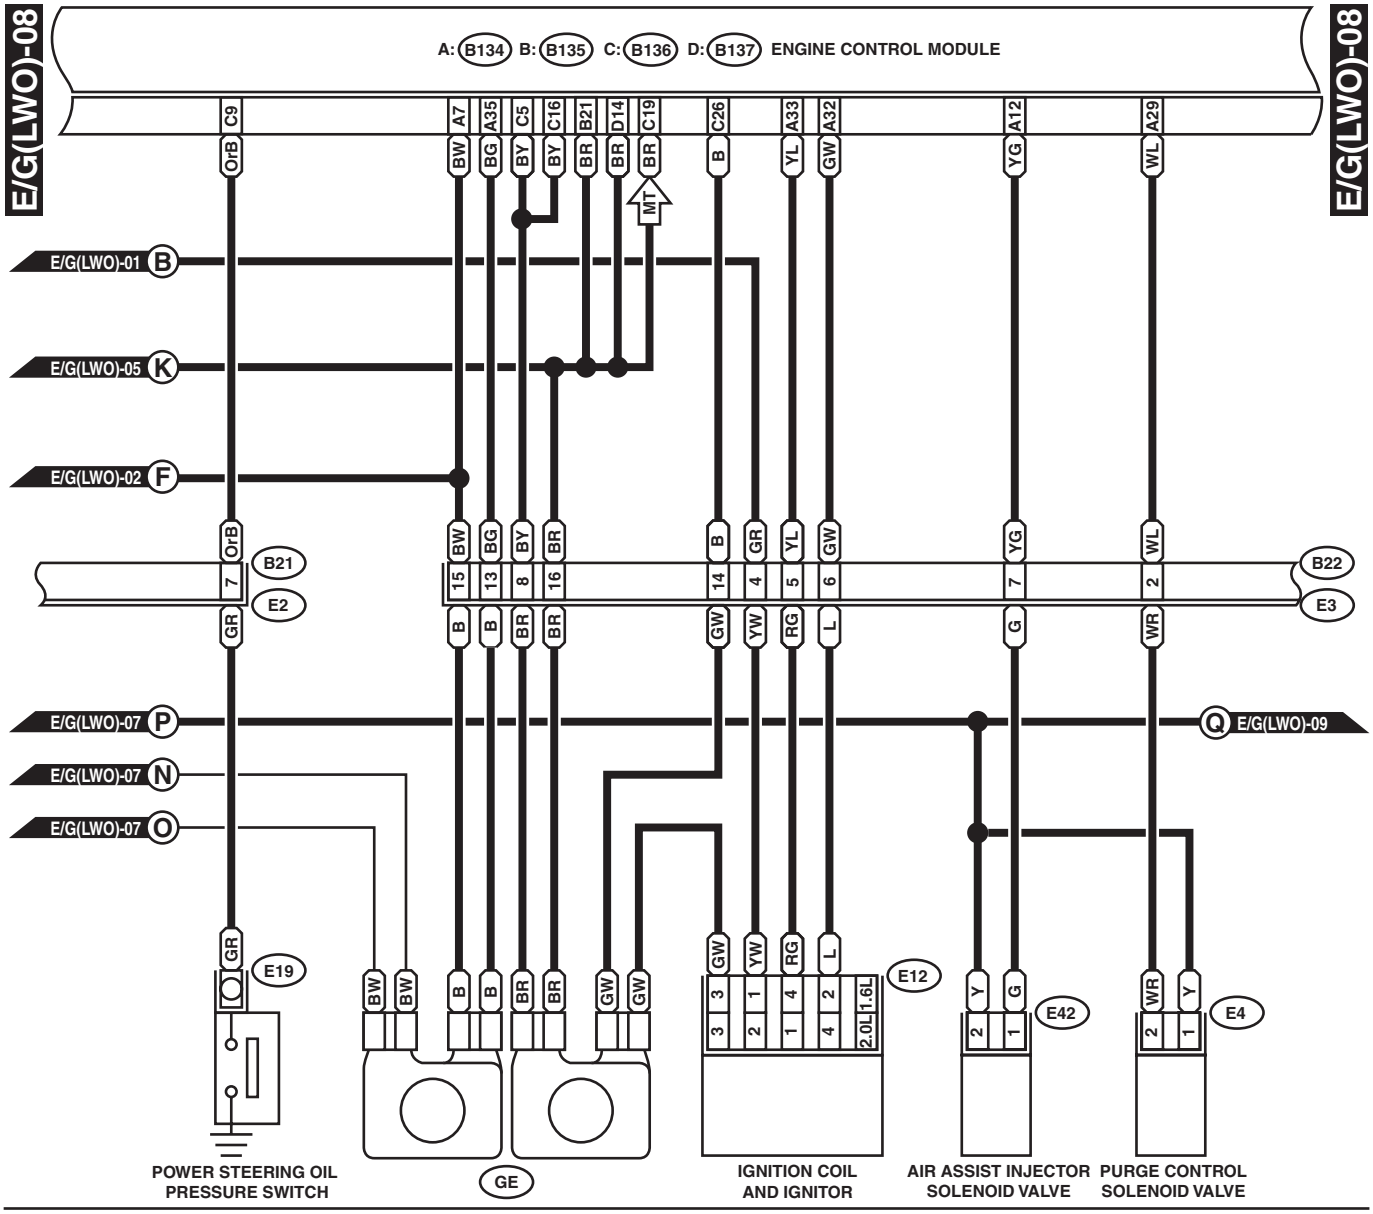
E/G(LWO)-08
A: B134 B: B135 C: B136 D: B137 ENGINE CONTROL MODULE
E/G(LWO)-08
C9 A7 A35 C5 C16 B21 D14 C19 C26 A33 A32 A12 A29
OrB BW BG BY BY BR BR BR B YL GW YG WL
MT
E/G(LWO)-01 B
E/G(LWO)-05 K
E/G(LWO)-02 F
B21
E2
B22
E3
E/G(LWO)-07 P
E/G(LWO)-07 N
E/G(LWO)-07 O
Q E/G(LWO)-09
E19
E12
E42
E4
POWER STEERING OIL PRESSURE SWITCH
GE
IGNITION COIL AND IGNITOR
AIR ASSIST INJECTOR SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE

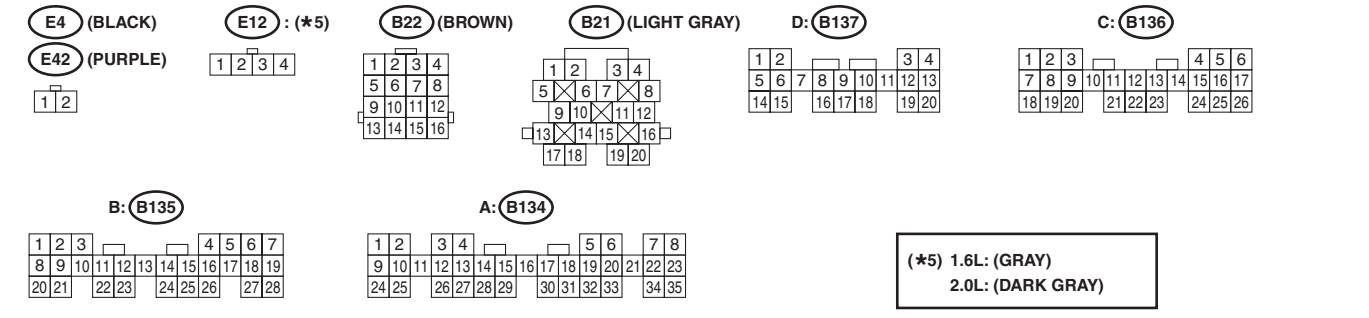
E4 (BLACK)
E42 (PURPLE)
E12 : (*5)
B22 (BROWN)
B21 (LIGHT GRAY)
D: B137
C: B136
B: B135
A: B134
(*5) 1.6L: (GRAY)
2.0L: (DARK GRAY)

WI-02323

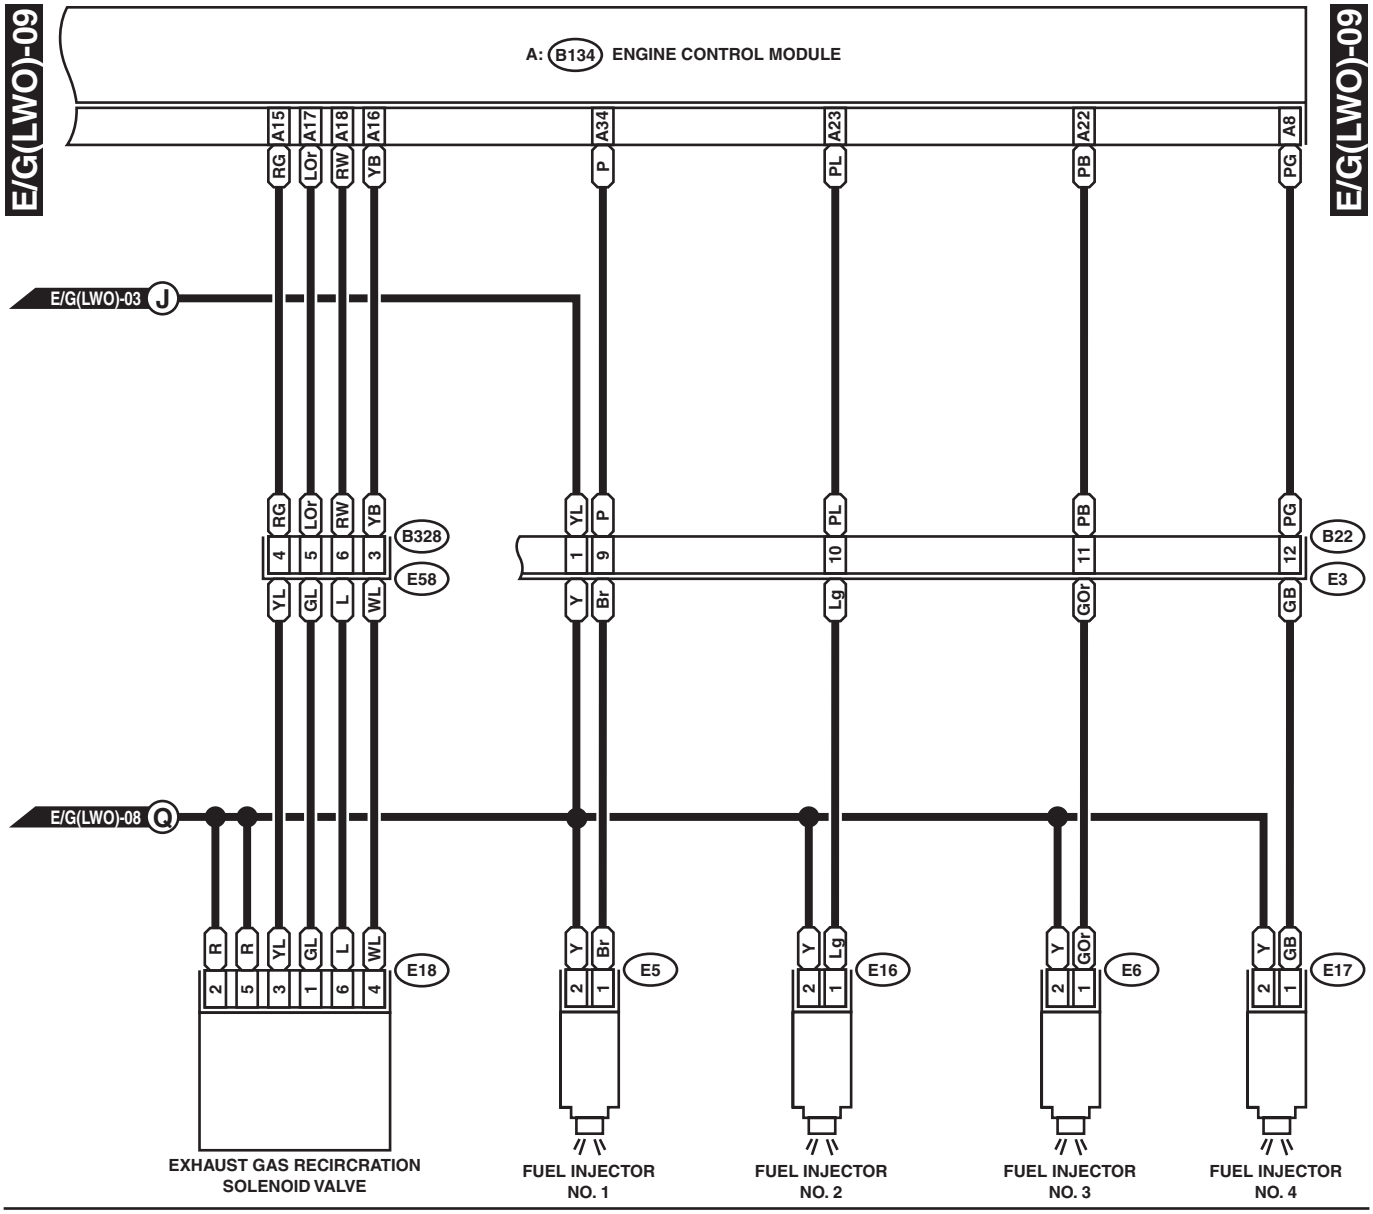

E5 (LIGHT GRAY)
E6 (LIGHT GRAY)
E16 (LIGHT GRAY)
E17 (LIGHT GRAY)

B328 (BLACK)
E18 (DARK GRAY)

B22 (BROWN)



A: B134



WI-02324

3. LHD TURBO MODEL

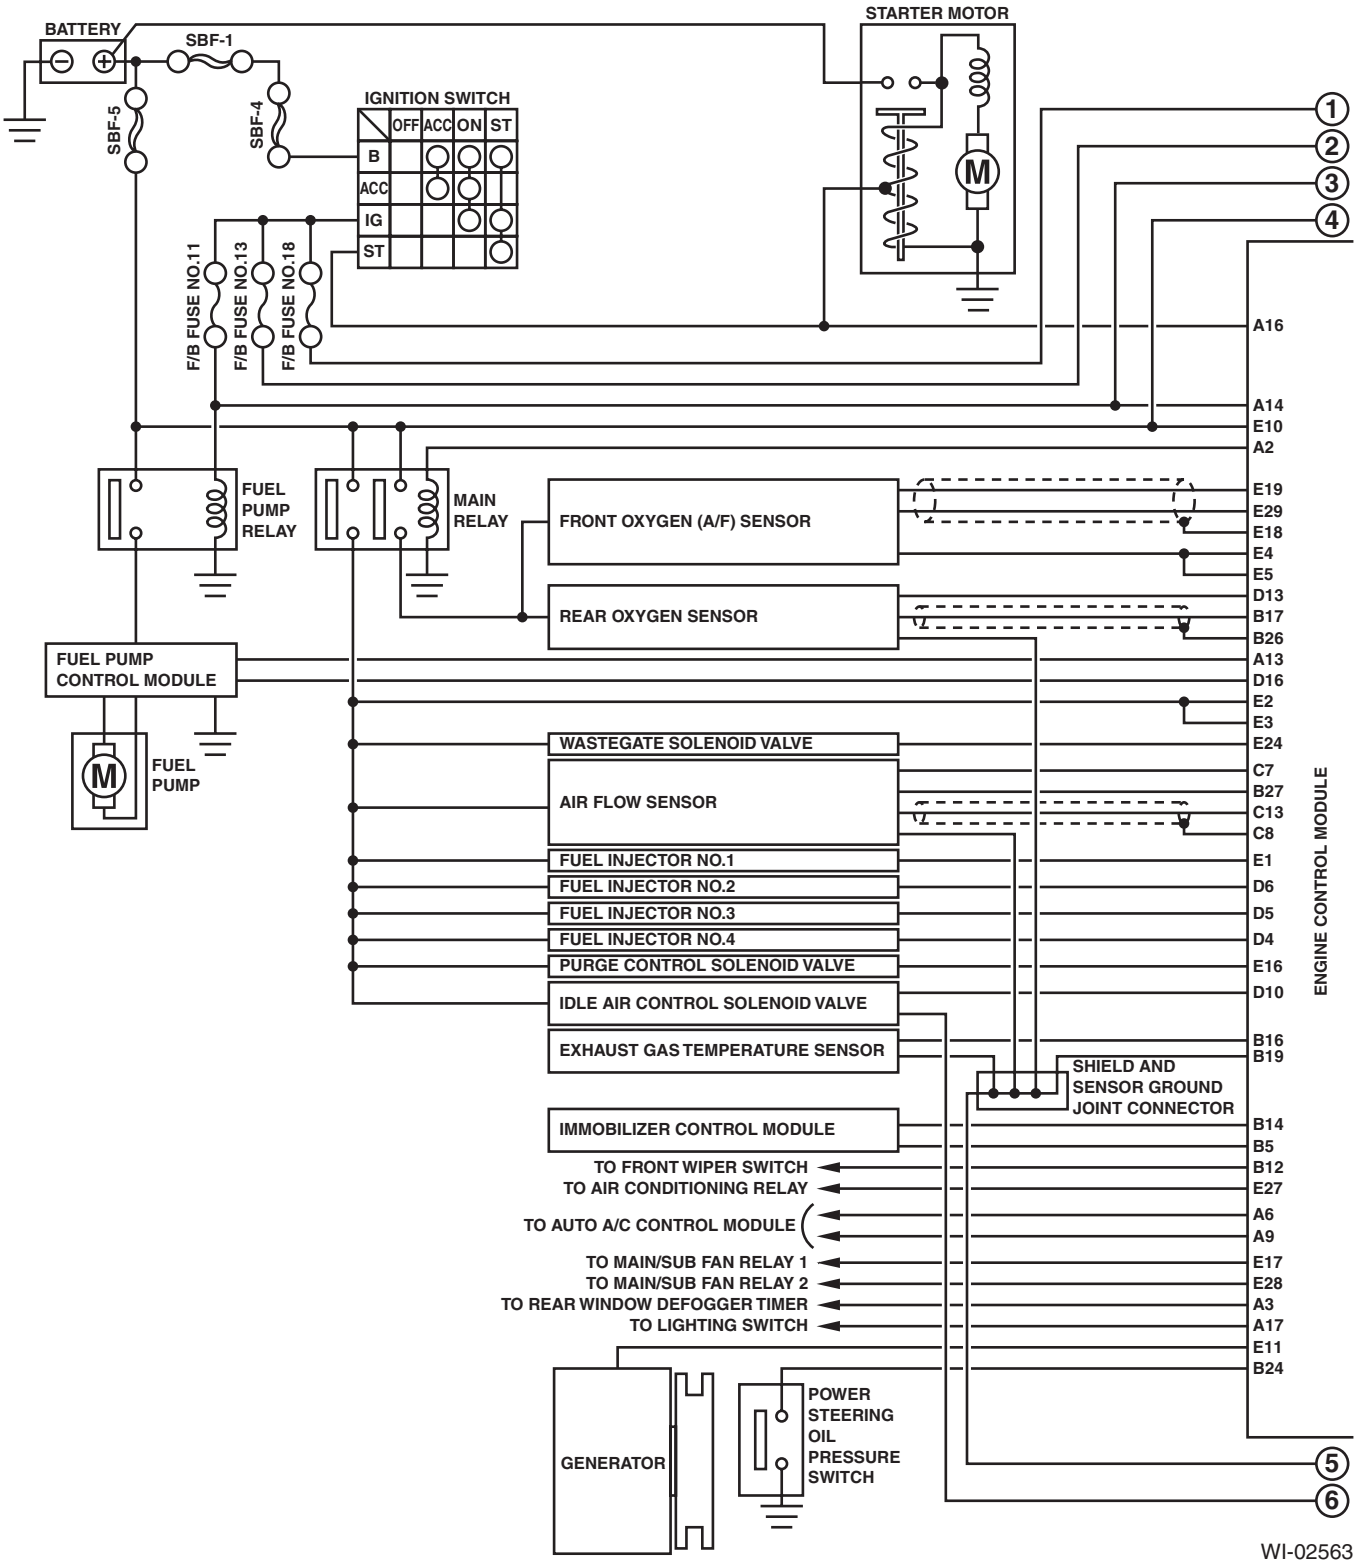

WI-02563

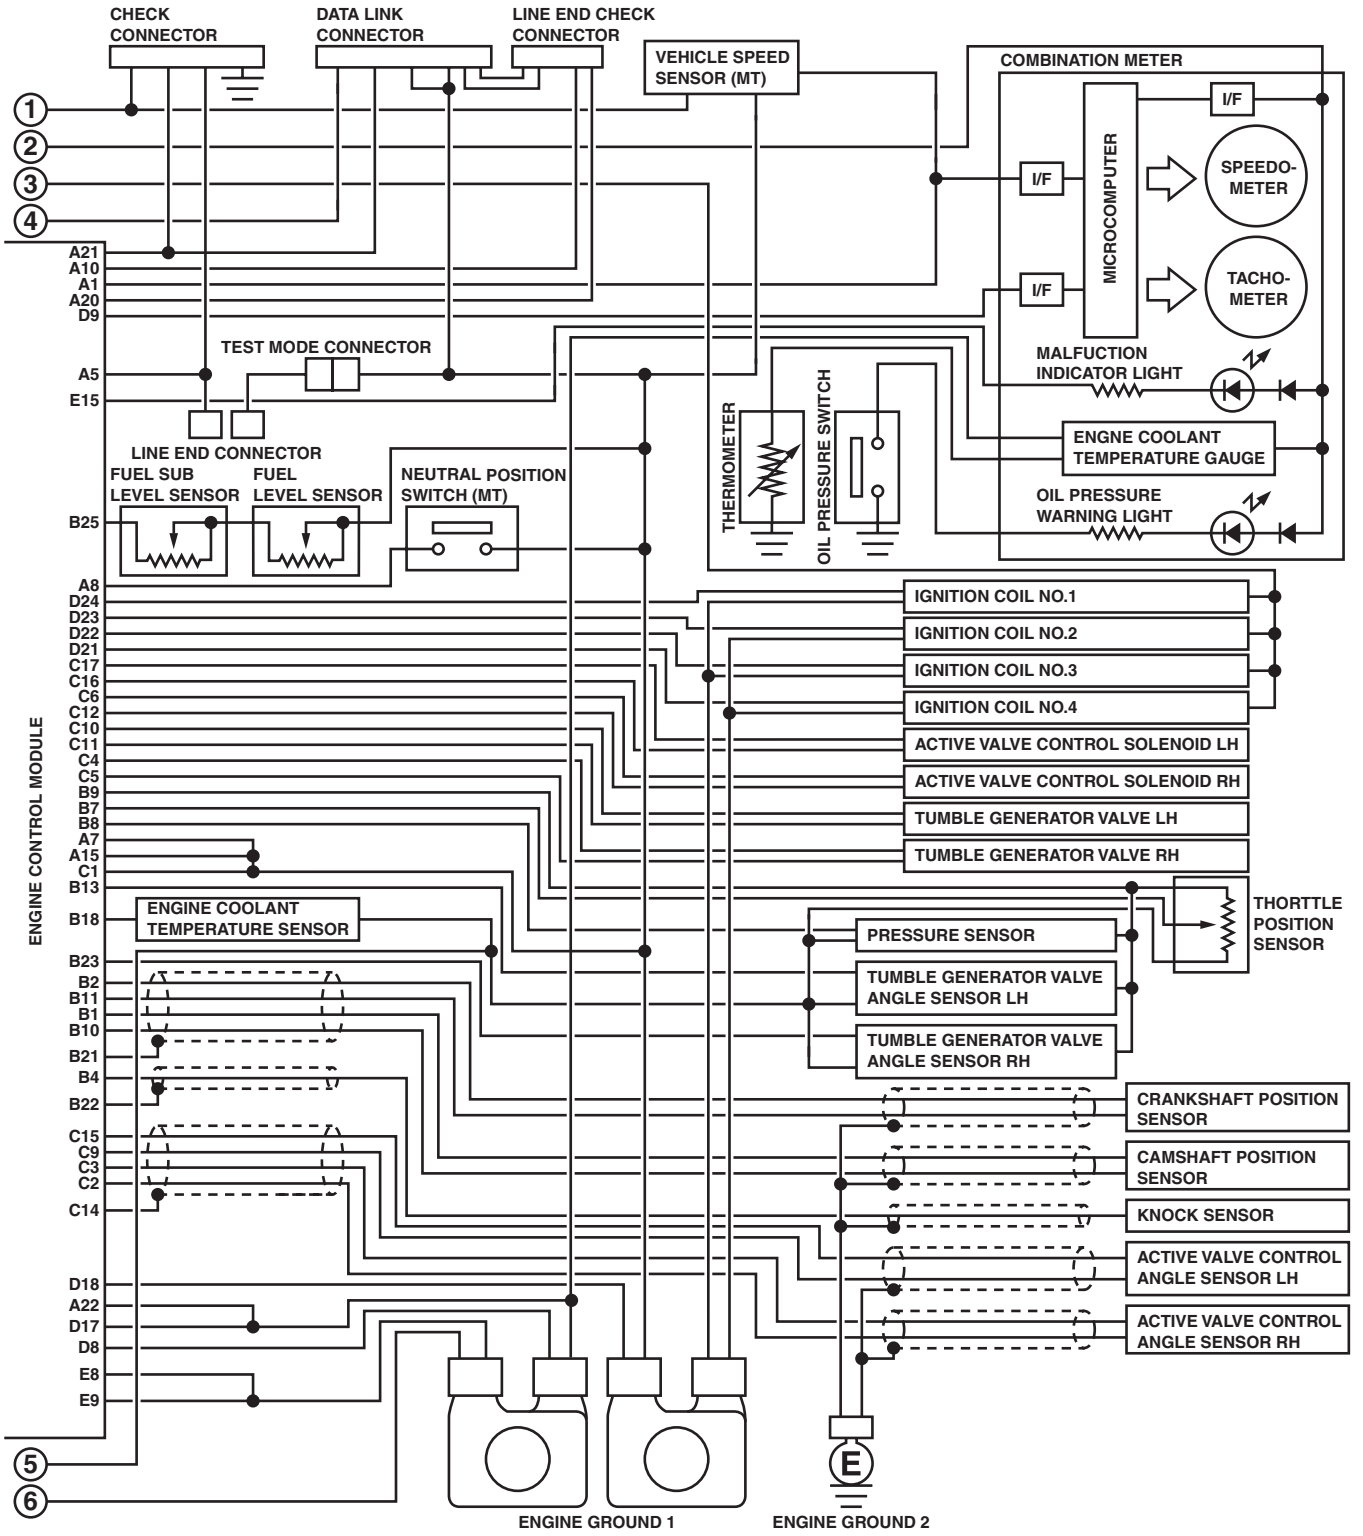
CHECK CONNECTOR
DATA LINK CONNECTOR
LINE END CHECK CONNECTOR
VEHICLE SPEED SENSOR (MT)
COMBINATION METER
I/F
MICROCOMPUTER
SPEEDO-METER
TACHO-METER
MALFUCTION INDICATOR LIGHT
ENGNE COOLANT TEMPERATURE GAUGE
OIL PRESSURE WARNING LIGHT
THERMOMETER
OIL PRESSURE SWITCH
TEST MODE CONNECTOR
LINE END CONNECTOR
FUEL SUB LEVEL SENSOR
FUEL LEVEL SENSOR
NEUTRAL POSITION SWITCH (MT)
ENGINE CONTROL MODULE
IGNITION COIL NO.1
IGNITION COIL NO.2
IGNITION COIL NO.3
IGNITION COIL NO.4
ACTIVE VALVE CONTROL SOLENOID LH
ACTIVE VALVE CONTROL SOLENOID RH
TUMBLE GENERATOR VALVE LH
TUMBLE GENERATOR VALVE RH
ENGINE COOLANT TEMPERATURE SENSOR
PRESSURE SENSOR
TUMBLE GENERATOR VALVE ANGLE SENSOR LH
TUMBLE GENERATOR VALVE ANGLE SENSOR RH
THORTTLE POSITION SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
ACTIVE VALVE CONTROL ANGLE SENSOR LH
ACTIVE VALVE CONTROL ANGLE SENSOR RH
ENGINE GROUND 1
ENGINE GROUND 2
E
1
2
3
4
5
6
A21
A10
A1
A20
D9
A5
E15
B25
A8
D24
D23
D22
D21
C17
C16
C6
C12
C10
C11
C4
C5
B9
B7
B8
A7
A15
C1
B13
B18
B23
B2
B11
B1
B10
B21
B4
B22
C15
C9
C3
C2
C14
D18
A22
D17
D8
E8
E9

WI-02564

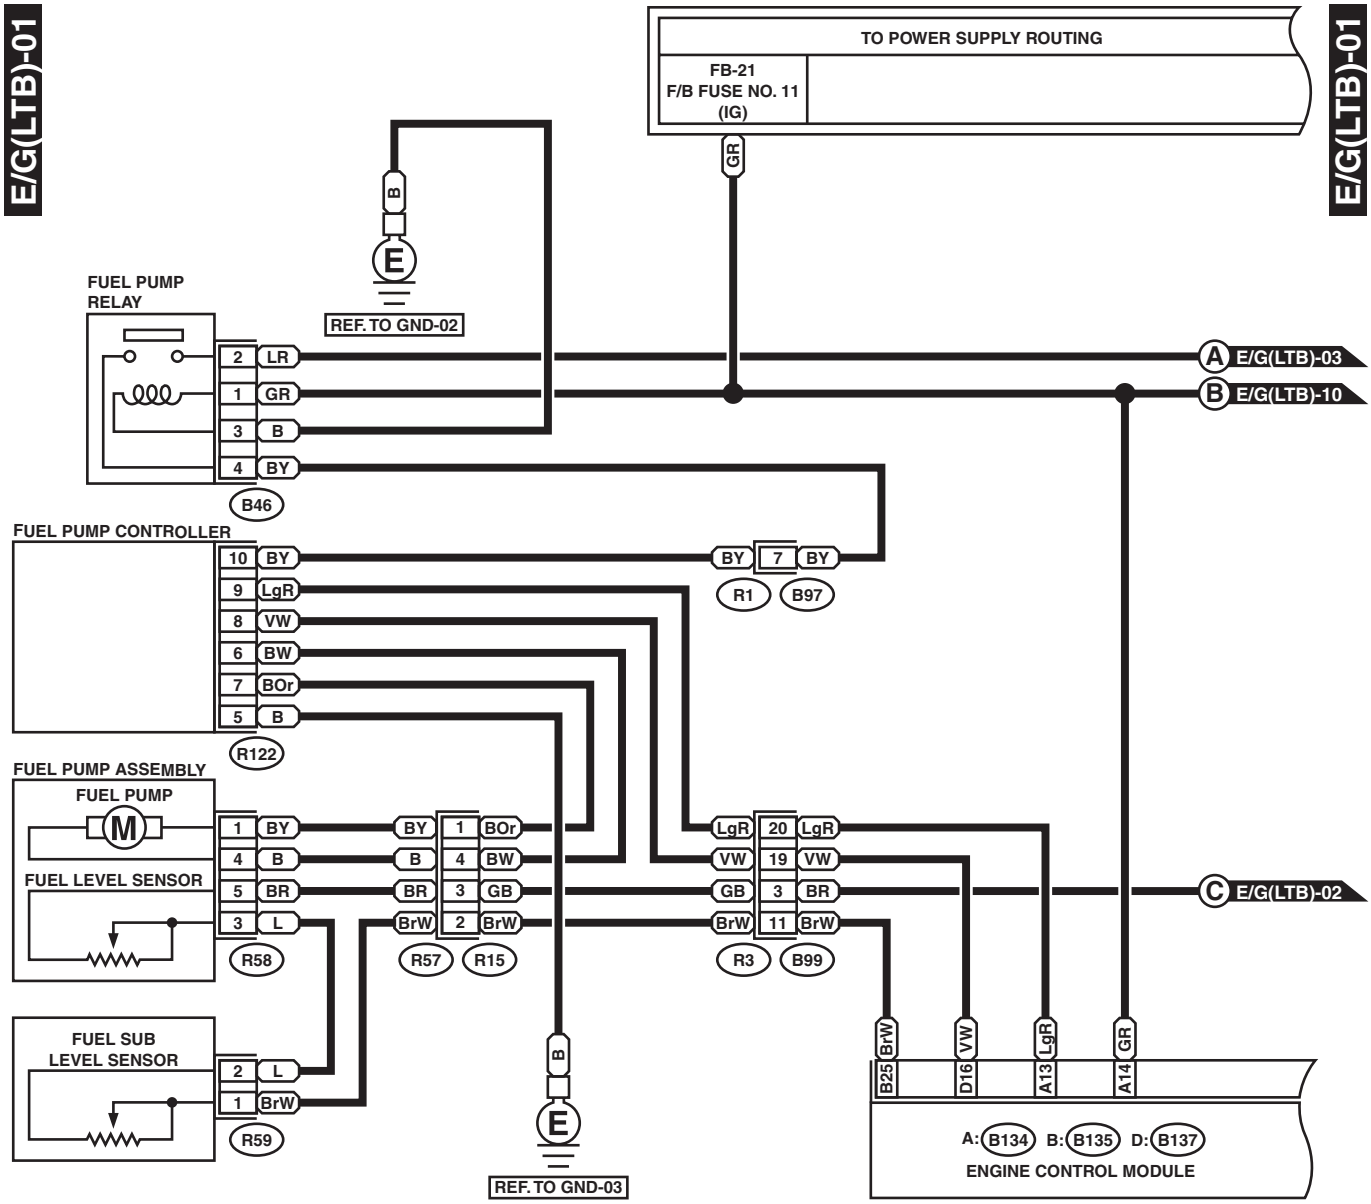
E/G(LTB)-01
E/G(LTB)-01
TO POWER SUPPLY ROUTING
FB-21
F/B FUSE NO. 11
(IG)
GR
B
E
REF. TO GND-02
FUEL PUMP
RELAY
2 LR
1 GR
3 B
4 BY
B46
A E/G(LTB)-03
B E/G(LTB)-10
FUEL PUMP CONTROLLER
10 BY
9 LgR
8 VW
6 BW
7 BOr
5 B
R122
BY 7 BY
R1 B97
FUEL PUMP ASSEMBLY
FUEL PUMP
M
FUEL LEVEL SENSOR
1 BY
4 B
5 BR
3 L
R58
BY 1 BOr
B 4 BW
BR 3 GB
BrW 2 BrW
R57 R15
LgR 20 LgR
VW 19 VW
GB 3 BR
BrW 11 BrW
R3 B99
C E/G(LTB)-02
FUEL SUB
LEVEL SENSOR
2 L
1 BrW
R59
B
E
REF. TO GND-03
BrW VW LgR GR
B25 D16 A13 A14
A: B134 B: B135 D: B137
ENGINE CONTROL MODULE

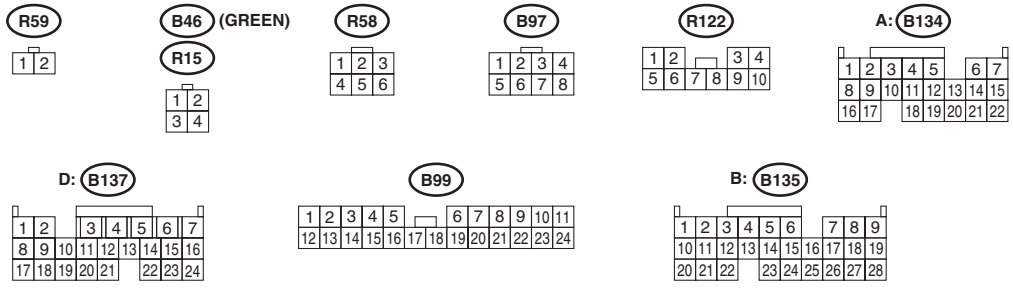
R59
B46 (GREEN)
R15
R58
B97
R122
A: B134
D: B137
B99
B: B135

WI-02325

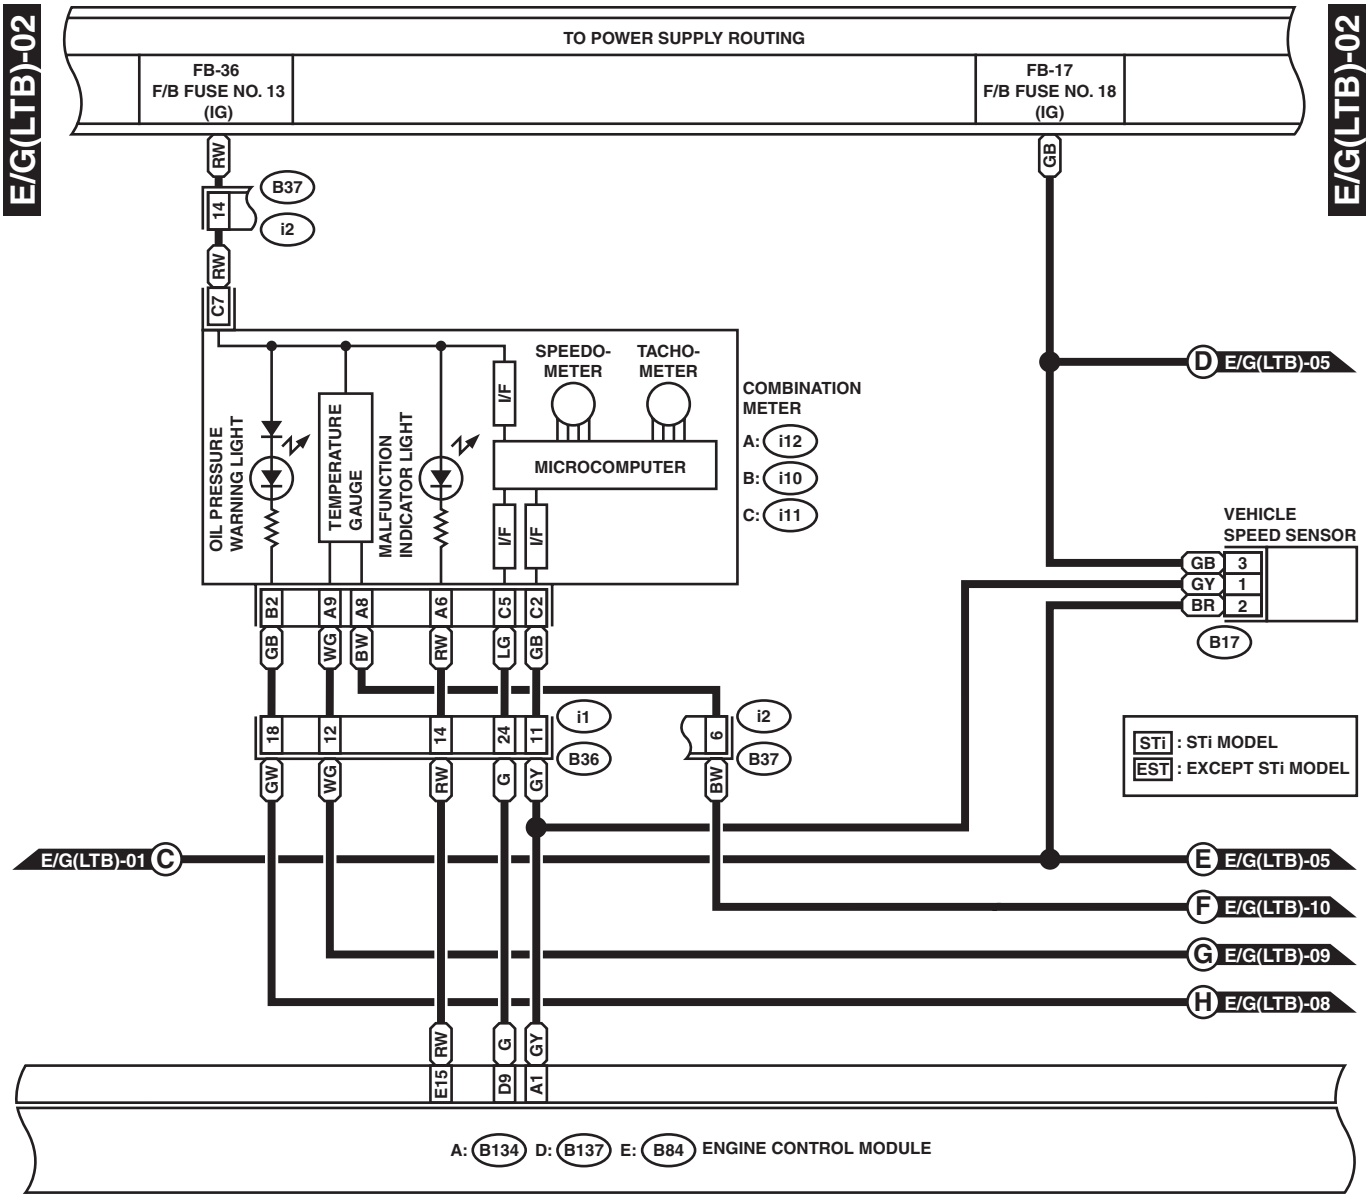
E/G(LTB)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO. 13
(IG)
FB-17
F/B FUSE NO. 18
(IG)
E/G(LTB)-02
RW
B37
14
i2
RW
C7
GB
SPEEDO-
METER
TACHO-
METER
COMBINATION
METER
A: i12
B: i10
C: i11
I/F
MICROCOMPUTER
I/F
I/F
OIL PRESSURE
WARNING LIGHT
TEMPERATURE
GAUGE
MALFUNCTION
INDICATOR LIGHT
D E/G(LTB)-05
VEHICLE
SPEED SENSOR
GB 3
GY 1
BR 2
B17
B2 A9 A8 A6 C5 C2
GB WG BW RW LG GB
18 12 14 24 11
i1
B36
6
i2
B37
GW WG RW G GY BW
STi : STi MODEL
EST : EXCEPT STi MODEL
E/G(LTB)-01 C
E E/G(LTB)-05
F E/G(LTB)-10
G E/G(LTB)-09
H E/G(LTB)-08
RW G GY
E15 D9 A1
A: B134 D: B137 E: B84 ENGINE CONTROL MODULE

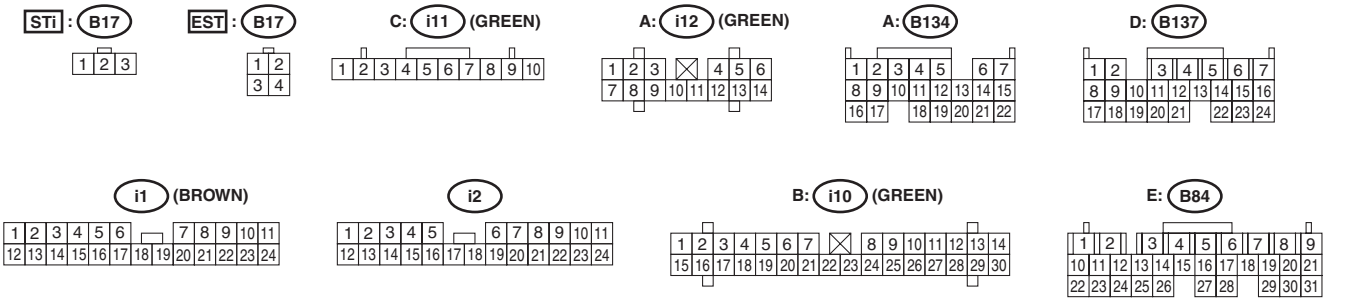
STi : B17
EST : B17
C: i11 (GREEN)
A: i12 (GREEN)
A: B134
D: B137
i1 (BROWN)
i2
B: i10 (GREEN)
E: B84

WI-02326

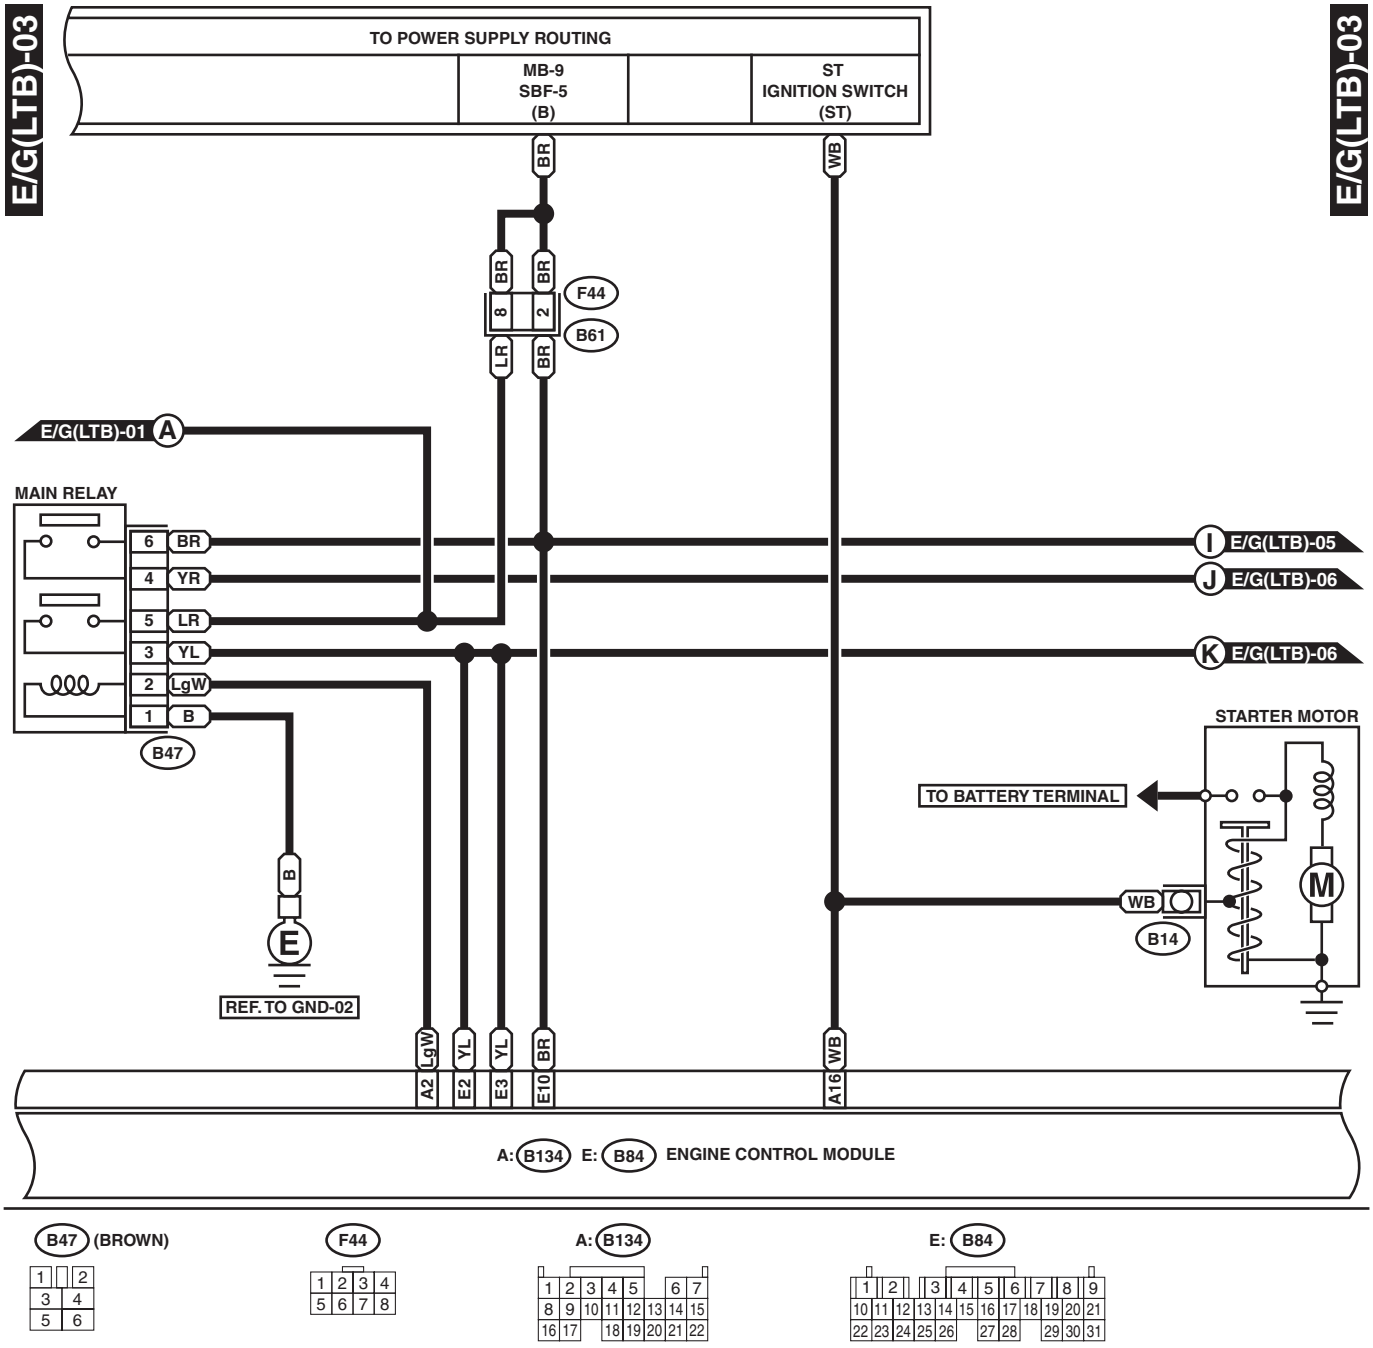
E/G(LTB)-03
E/G(LTB)-03
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
ST
IGNITION SWITCH
(ST)
BR
WB
BR
BR
8
2
F44
B61
LR
BR
E/G(LTB)-01 A
MAIN RELAY
6 BR
4 YR
5 LR
3 YL
2 LgW
1 B
B47
I E/G(LTB)-05
J E/G(LTB)-06
K E/G(LTB)-06
STARTER MOTOR
TO BATTERY TERMINAL
WB
B14
M
B
E
REF. TO GND-02
LgW
YL
YL
BR
WB
A2
E2
E3
E10
A16
A: B134 E: B84 ENGINE CONTROL MODULE
B47 (BROWN)
F44
A: B134
E: B84

WI-02327

E/G(LTB)-04

E/G(LTB)-04

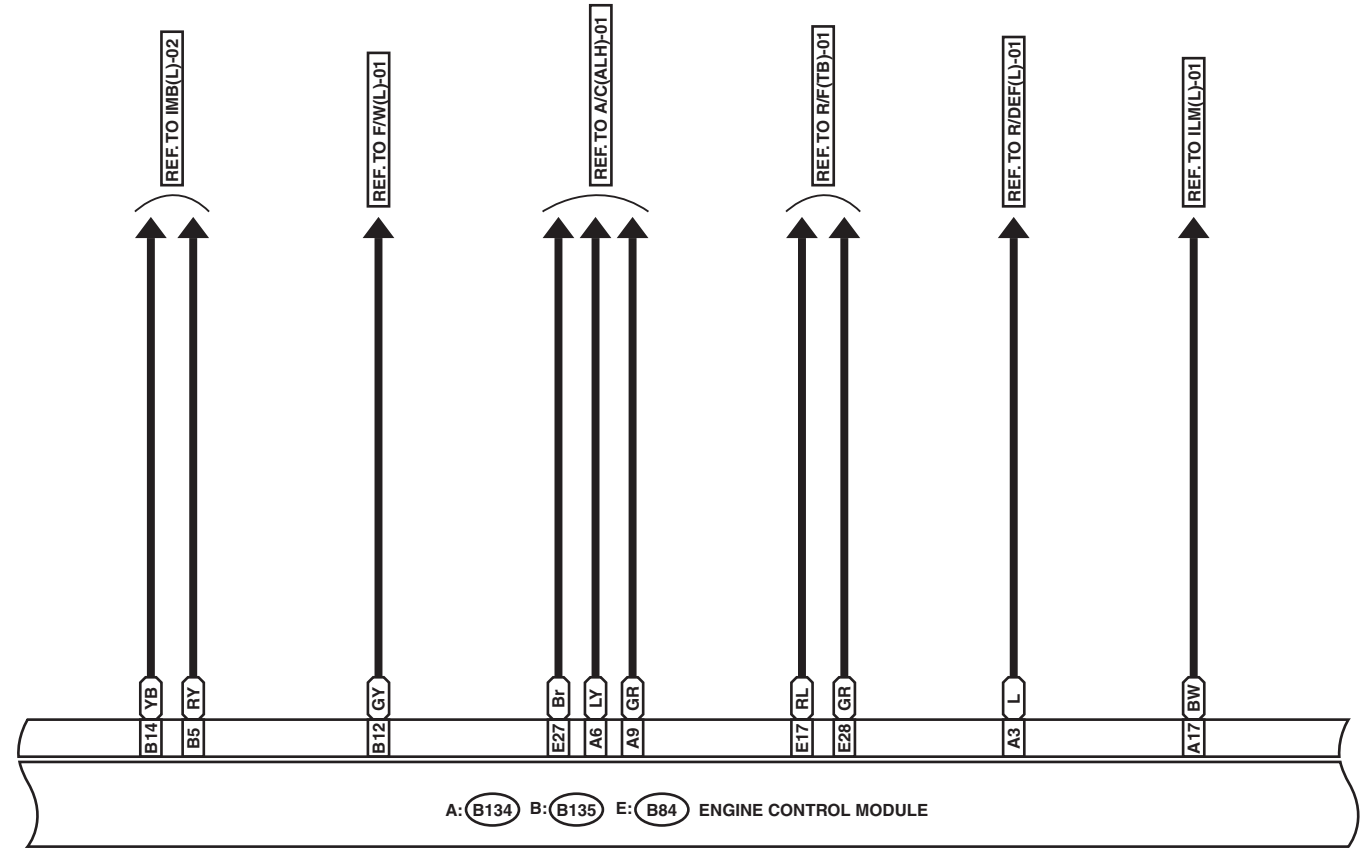

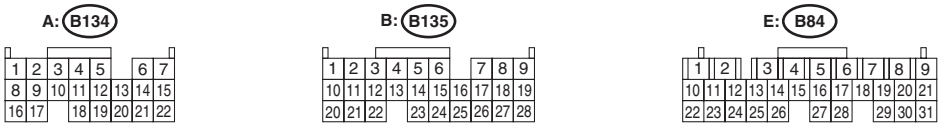

WI-02328

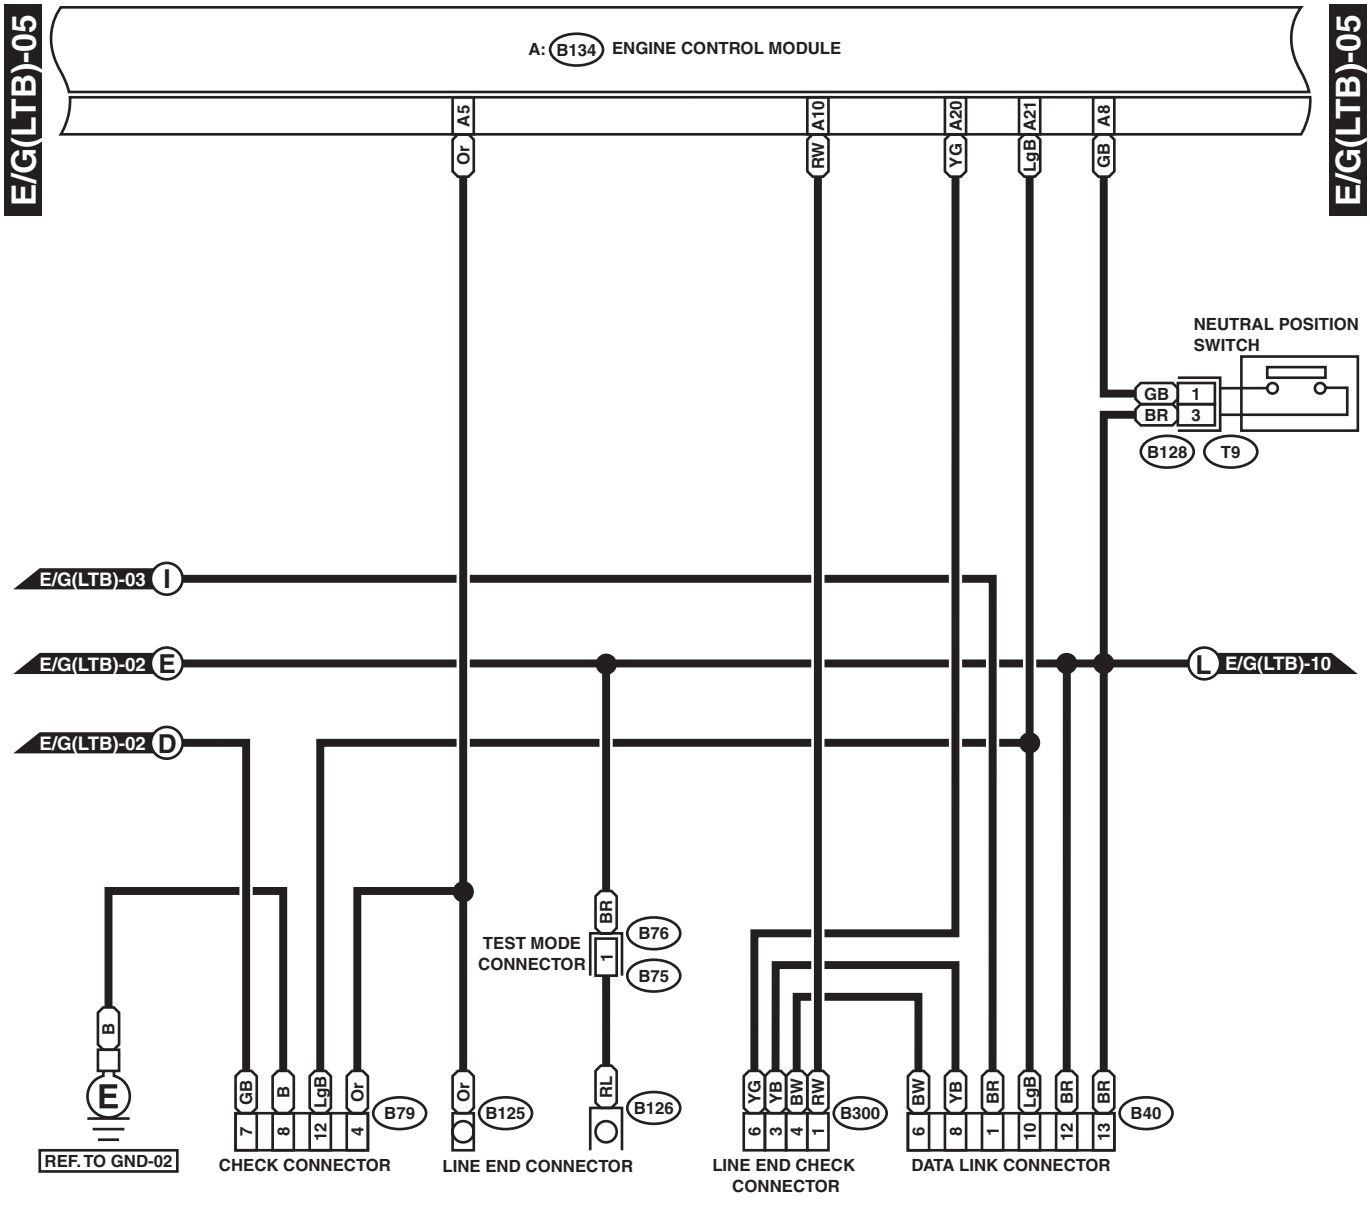
E/G(LTB)-05
A: B134 ENGINE CONTROL MODULE
E/G(LTB)-05
A5
A10
A20
A21
A8
Or
RW
YG
LgB
GB
NEUTRAL POSITION SWITCH
GB
BR
1
3
B128
T9
E/G(LTB)-03 I
E/G(LTB)-02 E
E/G(LTB)-02 D
L E/G(LTB)-10
B
E
REF. TO GND-02
GB
B
LgB
Or
B79
7
8
12
4
CHECK CONNECTOR
Or
B125
LINE END CONNECTOR
BR
1
B76
B75
TEST MODE CONNECTOR
RL
B126
YG
YB
BW
RW
B300
6
3
4
1
LINE END CHECK CONNECTOR
BW
YB
BR
LgB
BR
BR
B40
6
8
1
10
12
13
DATA LINK CONNECTOR

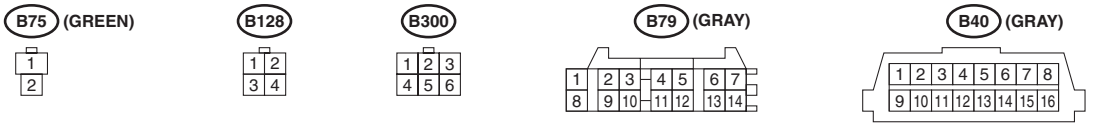
B75 (GREEN)
1
2
B128
1 2
3 4
B300
1 2 3
4 5 6
B79 (GRAY)
1 2 3 4 5 6 7
8 9 10 11 12 13 14
B40 (GRAY)
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16

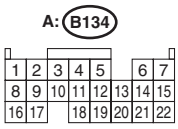
A: B134
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15
16 17 18 19 20 21 22

WI-02329

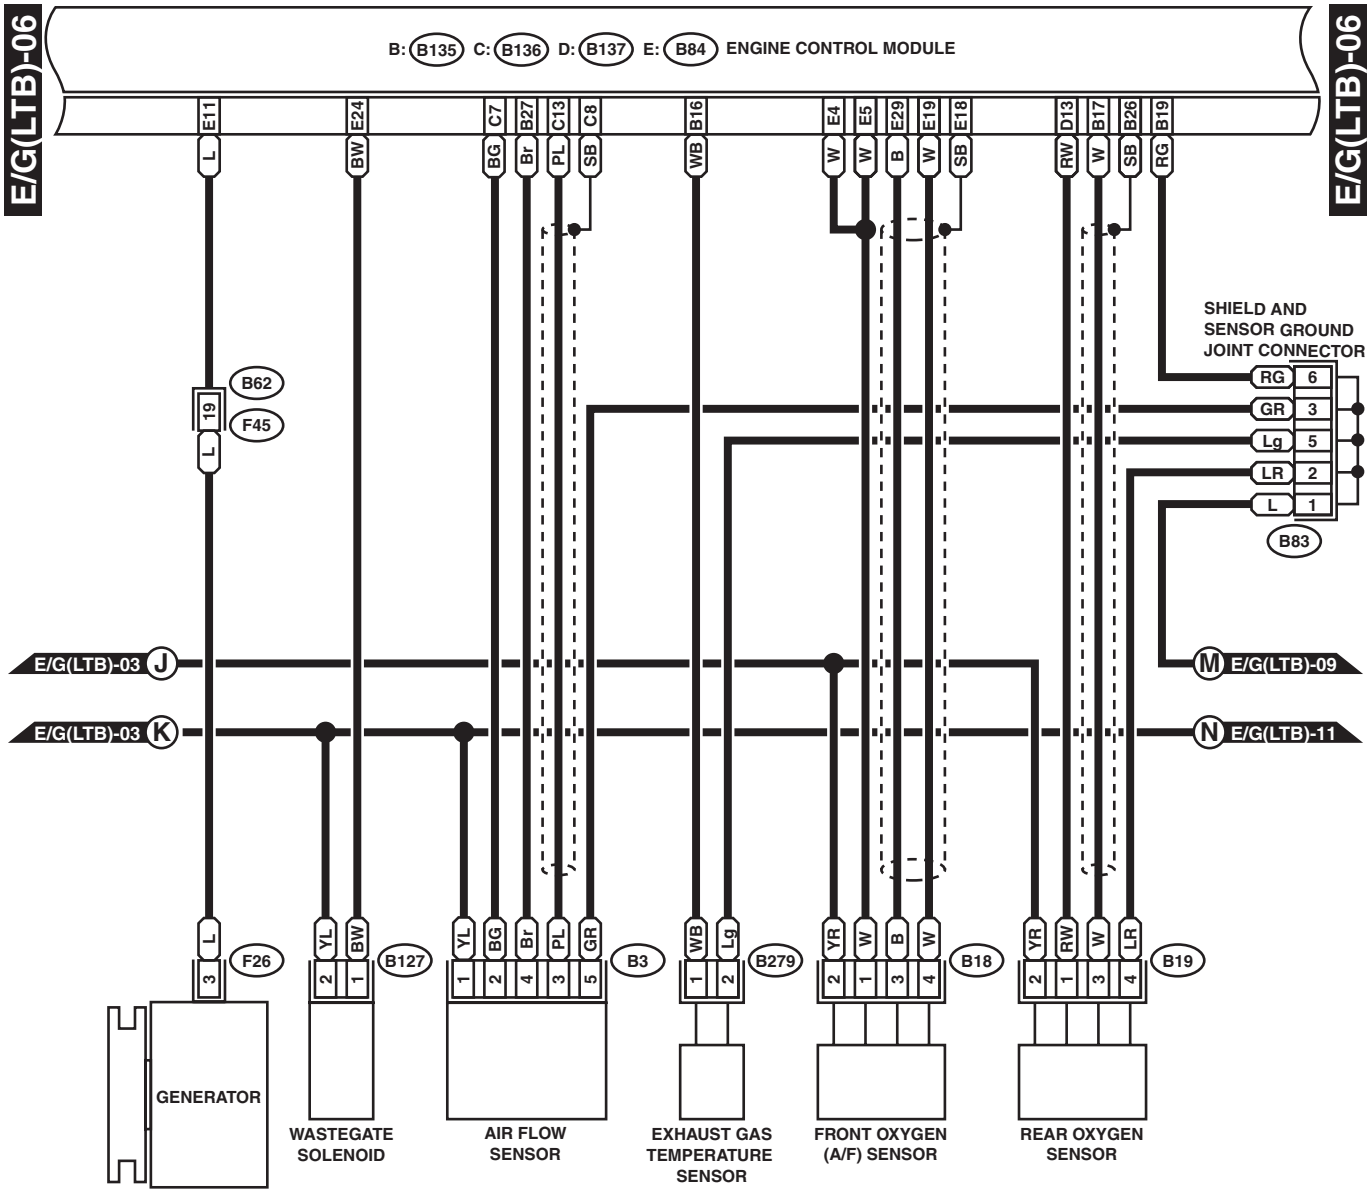
E/G(LTB)-06
B: B135 C: B136 D: B137 E: B84 ENGINE CONTROL MODULE
E/G(LTB)-06
E11 E24 C7 B27 C13 C8 B16 E4 E5 E29 E19 E18 D13 B17 B26 B19
L BW BG Br PL SB WB W W B W SB RW W SB RG
SHIELD AND SENSOR GROUND JOINT CONNECTOR
RG 6
GR 3
Lg 5
LR 2
L 1
B83
B62
19
F45
L
E/G(LTB)-03 J
E/G(LTB)-03 K
M E/G(LTB)-09
N E/G(LTB)-11
L F26 3
YL BW B127 2 1
YL BG Br PL GR B3 1 2 4 3 5
WB Lg B279 1 2
YR W B W B18 2 1 3 4
YR RW W LR B19 2 1 3 4
GENERATOR
WASTEGATE SOLENOID
AIR FLOW SENSOR
EXHAUST GAS TEMPERATURE SENSOR
FRONT OXYGEN (A/F) SENSOR
REAR OXYGEN SENSOR

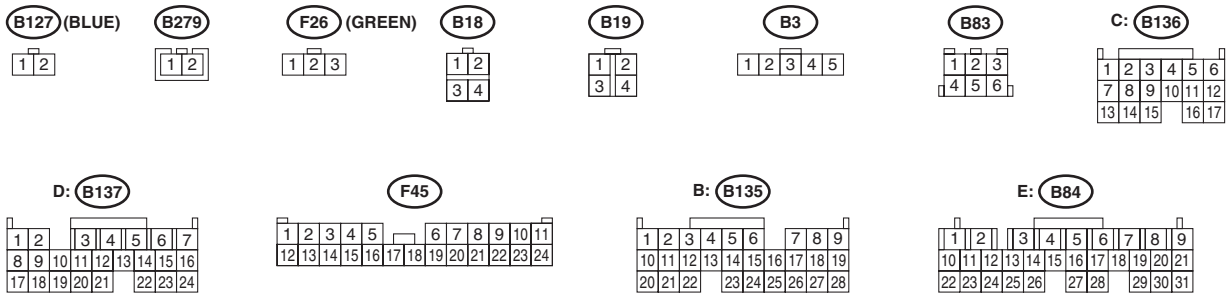
B127 (BLUE)
B279
F26 (GREEN)
B18
B19
B3
B83
C: B136
D: B137
F45
B: B135
E: B84

WI-02330

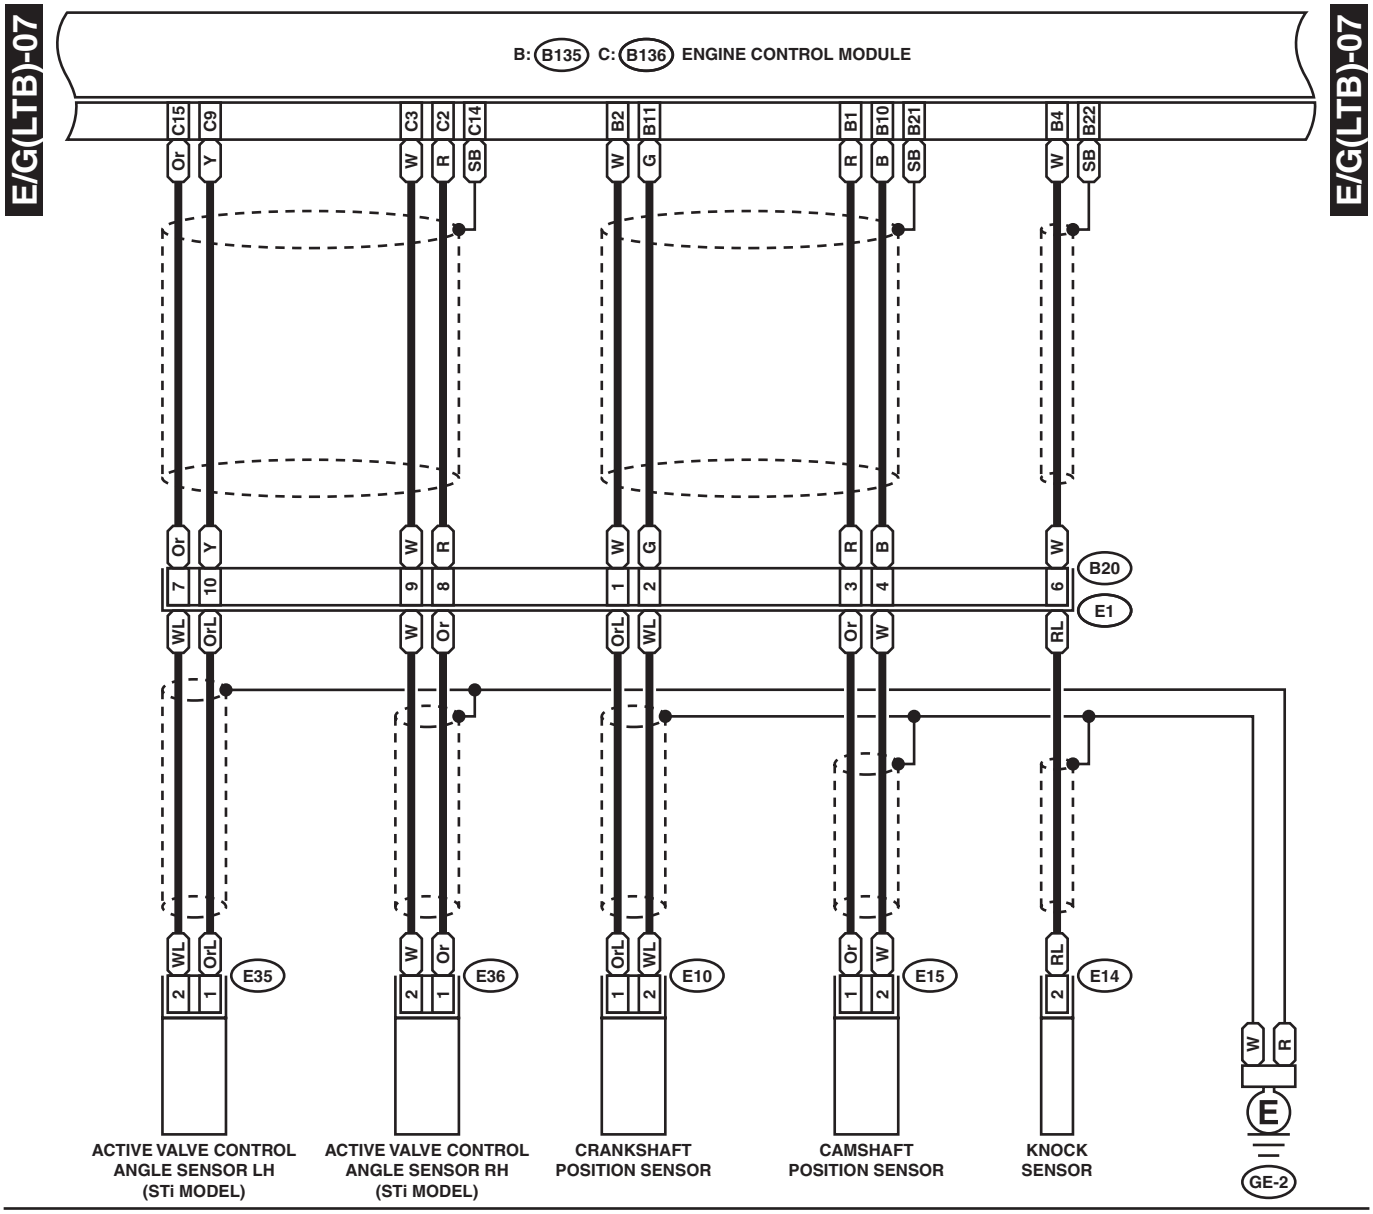

E10 (LIGHT GRAY)
E14 (*1)
E15 (LIGHT GRAY)
E35
E36

B20 (LIGHT GRAY)

C: B136

B: B135

(*1) STi MODEL : BROWN
EXCEPT STi MODEL : LIGHT GRAY

WI-02331

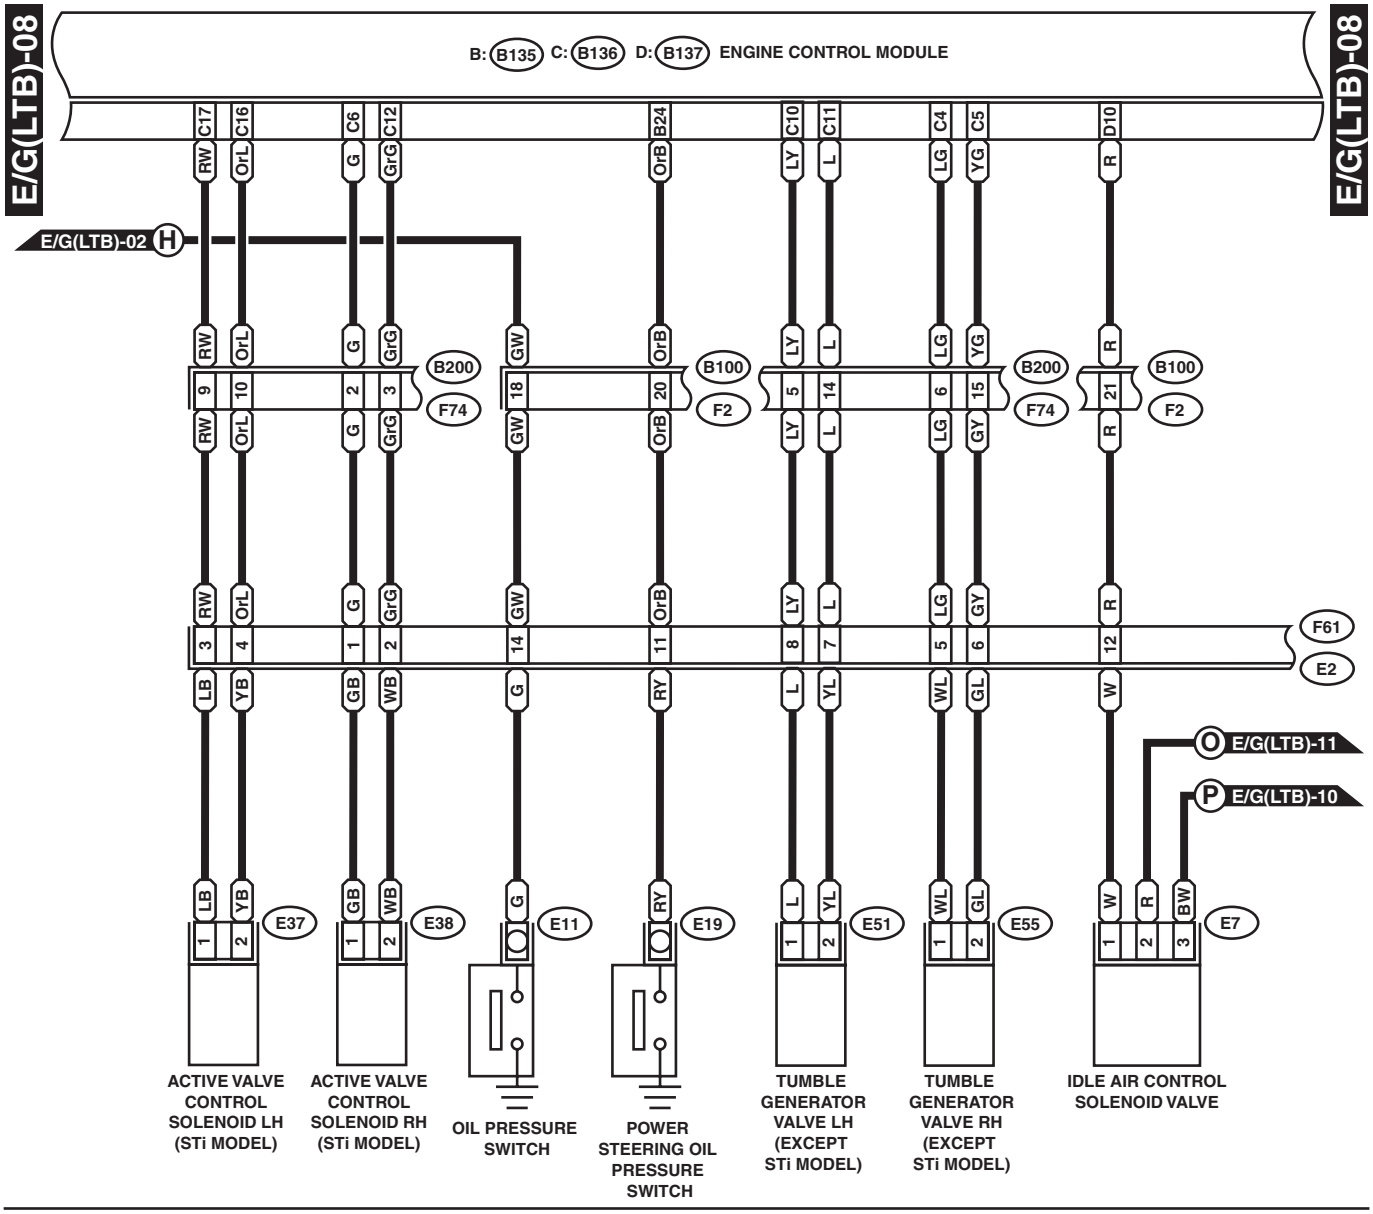
E/G(LTB)-08
B: B135 C: B136 D: B137 ENGINE CONTROL MODULE
E/G(LTB)-08
E/G(LTB)-02 H
B200
F74
B100
F2
F61
E2
O E/G(LTB)-11
P E/G(LTB)-10
E37
E38
E11
E19
E51
E55
E7
ACTIVE VALVE CONTROL SOLENOID LH (STi MODEL)
ACTIVE VALVE CONTROL SOLENOID RH (STi MODEL)
OIL PRESSURE SWITCH
POWER STEERING OIL PRESSURE SWITCH
TUMBLE GENERATOR VALVE LH (EXCEPT STi MODEL)
TUMBLE GENERATOR VALVE RH (EXCEPT STi MODEL)
IDLE AIR CONTROL SOLENOID VALVE

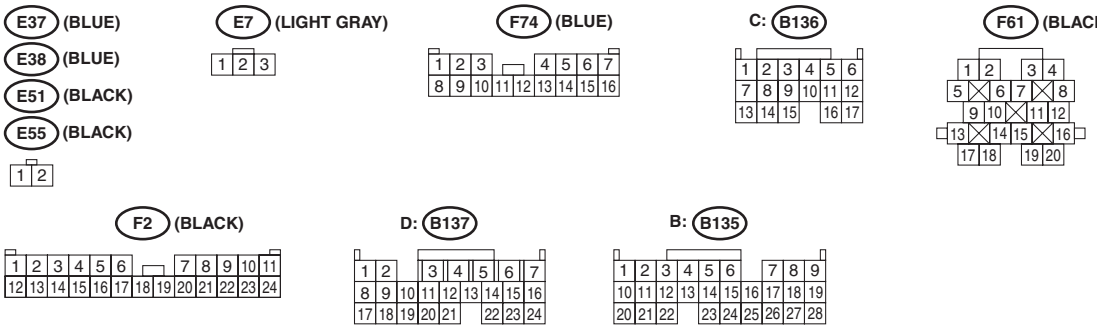
E37 (BLUE)
E38 (BLUE)
E51 (BLACK)
E55 (BLACK)
E7 (LIGHT GRAY)
F74 (BLUE)
C: B136
F61 (BLACK)
F2 (BLACK)
D: B137
B: B135

WI-02332

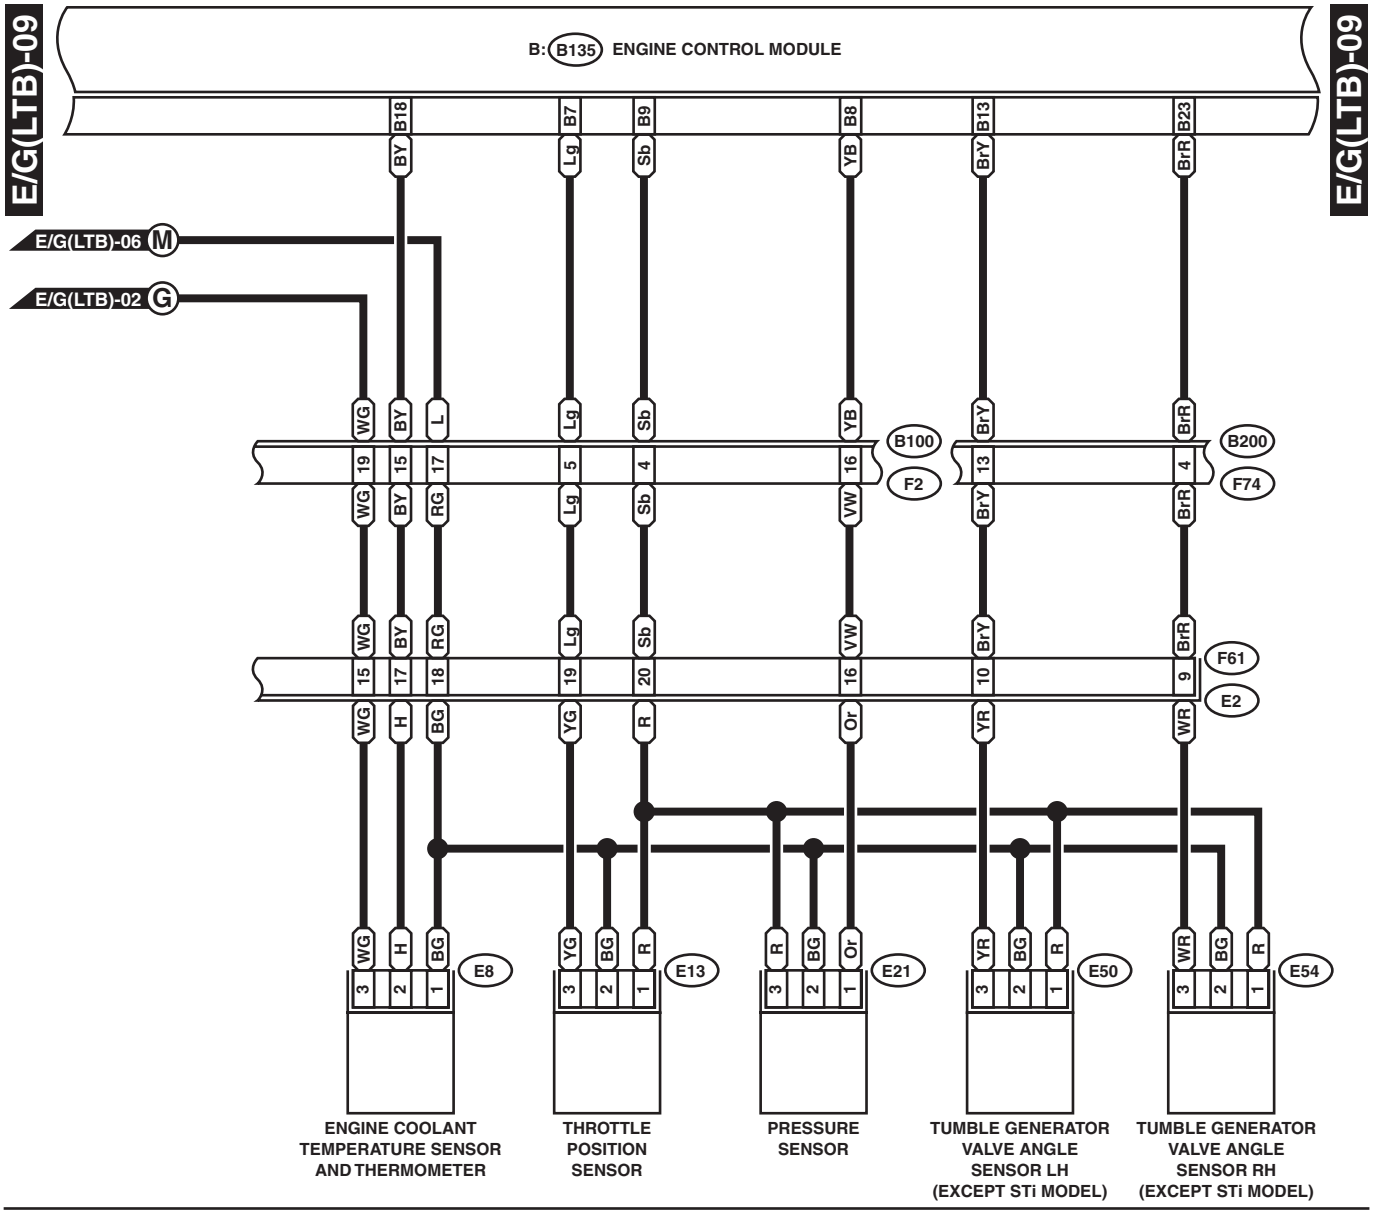
E/G(LTB)-09
E/G(LTB)-09
B: B135 ENGINE CONTROL MODULE
B18
B7
B9
B8
B13
B23
BY
Lg
Sb
YB
BrY
BrR
E/G(LTB)-06 M
E/G(LTB)-02 G
WG
BY
L
RG
B100
F2
B200
F74
19
15
17
5
4
16
13
VW
F61
E2
18
20
10
9
H
BG
YG
R
Or
YR
WR
E8
E13
E21
E50
E54
ENGINE COOLANT TEMPERATURE SENSOR AND THERMOMETER
THROTTLE POSITION SENSOR
PRESSURE SENSOR
TUMBLE GENERATOR VALVE ANGLE SENSOR LH (EXCEPT STi MODEL)
TUMBLE GENERATOR VALVE ANGLE SENSOR RH (EXCEPT STi MODEL)

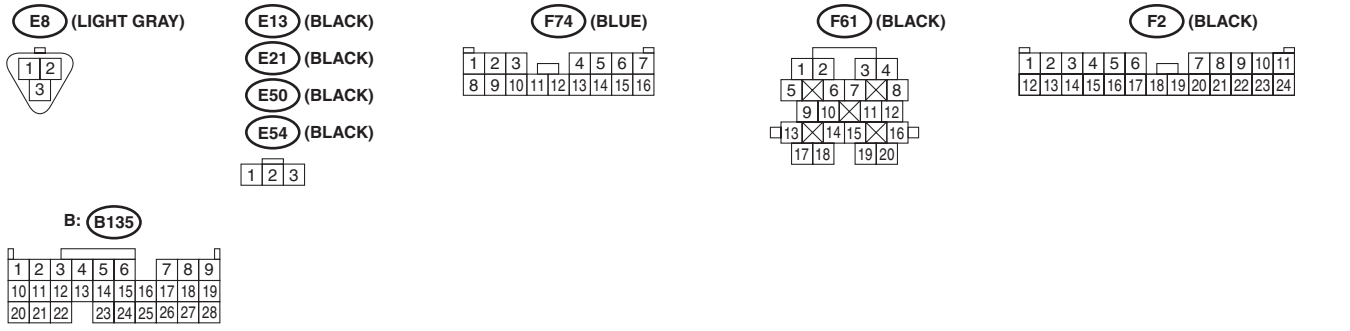
E8 (LIGHT GRAY)
E13 (BLACK)
E21 (BLACK)
E50 (BLACK)
E54 (BLACK)
F74 (BLUE)
F61 (BLACK)
F2 (BLACK)
B: B135

WI-02333

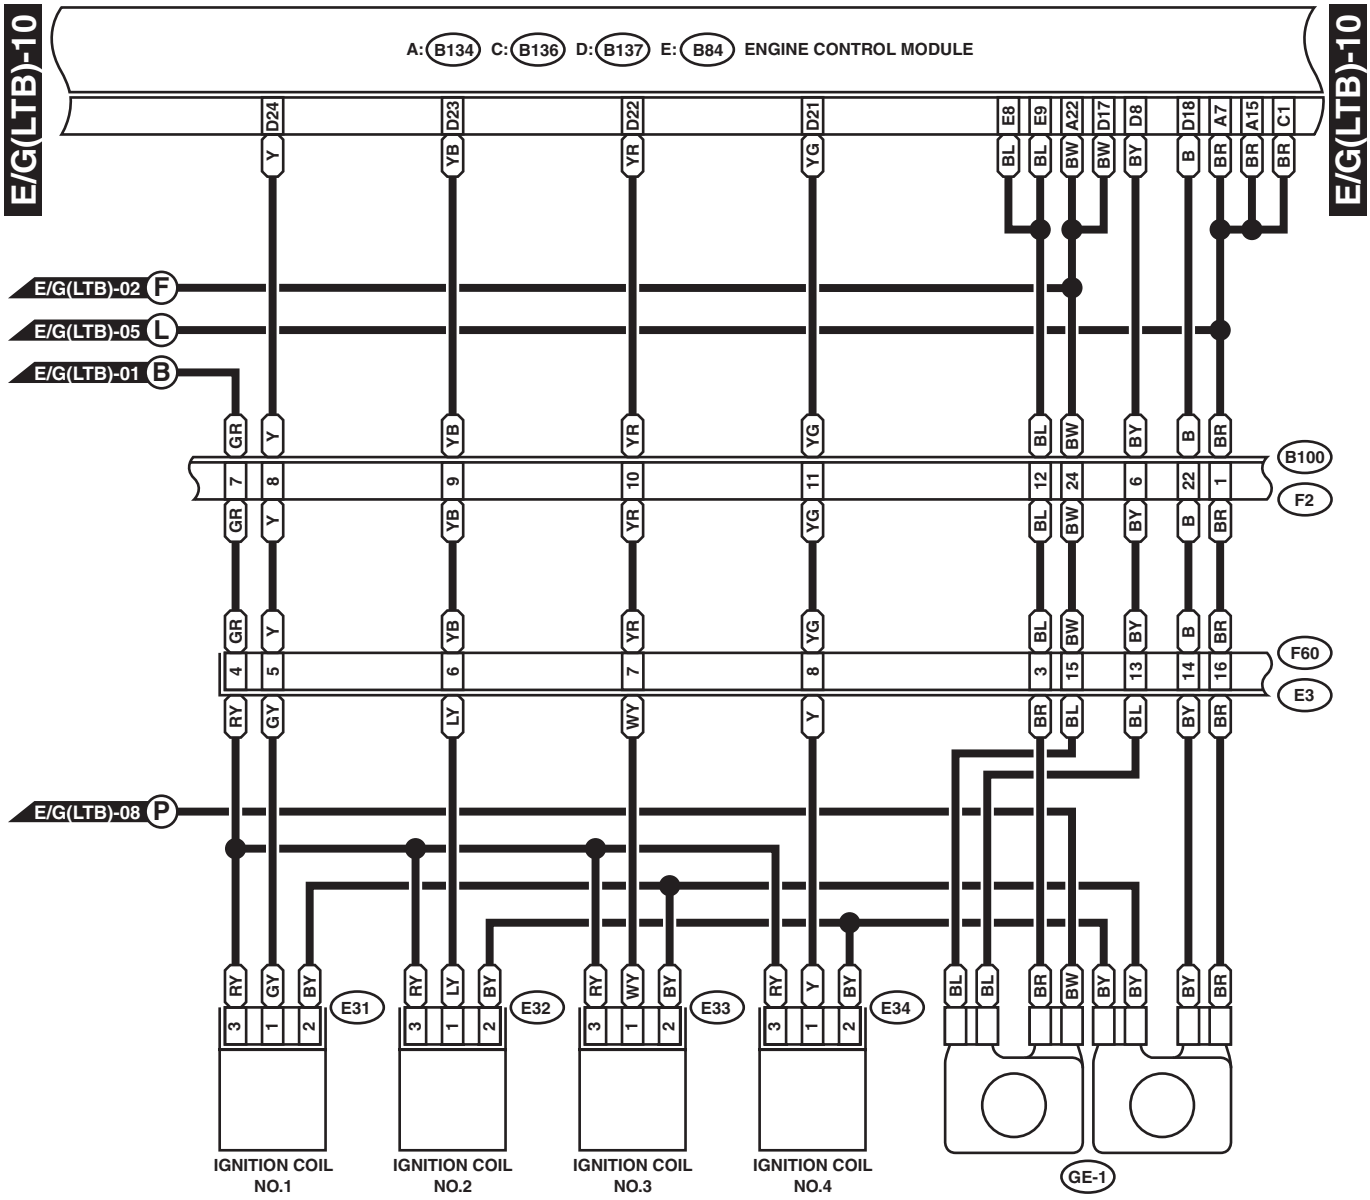
E/G(LTB)-10
A: B134 C: B136 D: B137 E: B84 ENGINE CONTROL MODULE
E/G(LTB)-10
D24 D23 D22 D21 E8 E9 A22 D17 D8 D18 A7 A15 C1
Y YB YR YG BL BL BW BW BY B BR BR BR
E/G(LTB)-02 F
E/G(LTB)-05 L
E/G(LTB)-01 B
B100
F2
F60
E3
E/G(LTB)-08 P
RY GY LY WY BR BL BL BY BR BL BW BY BY BR
E31 E32 E33 E34
IGNITION COIL NO.1
IGNITION COIL NO.2
IGNITION COIL NO.3
IGNITION COIL NO.4
GE-1

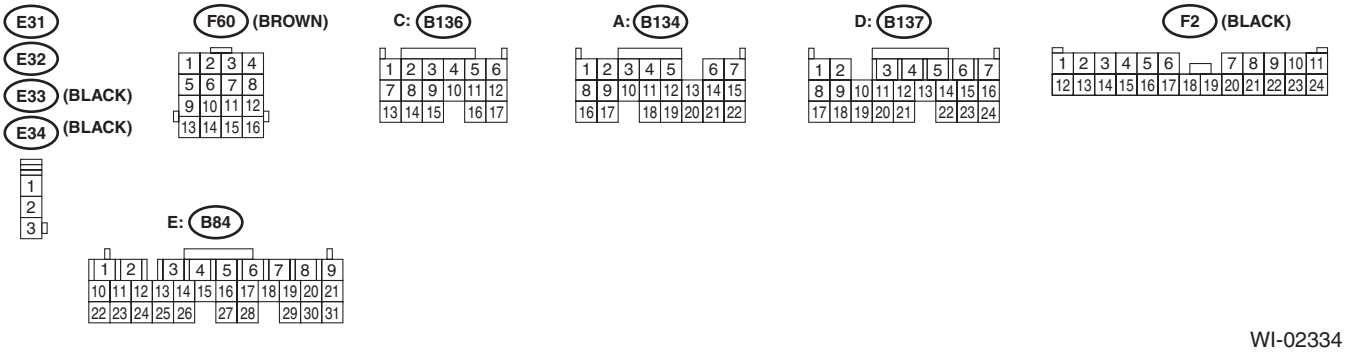
E31
E32
E33 (BLACK)
E34 (BLACK)
F60 (BROWN)
C: B136
A: B134
D: B137
F2 (BLACK)
E: B84

WI-02334

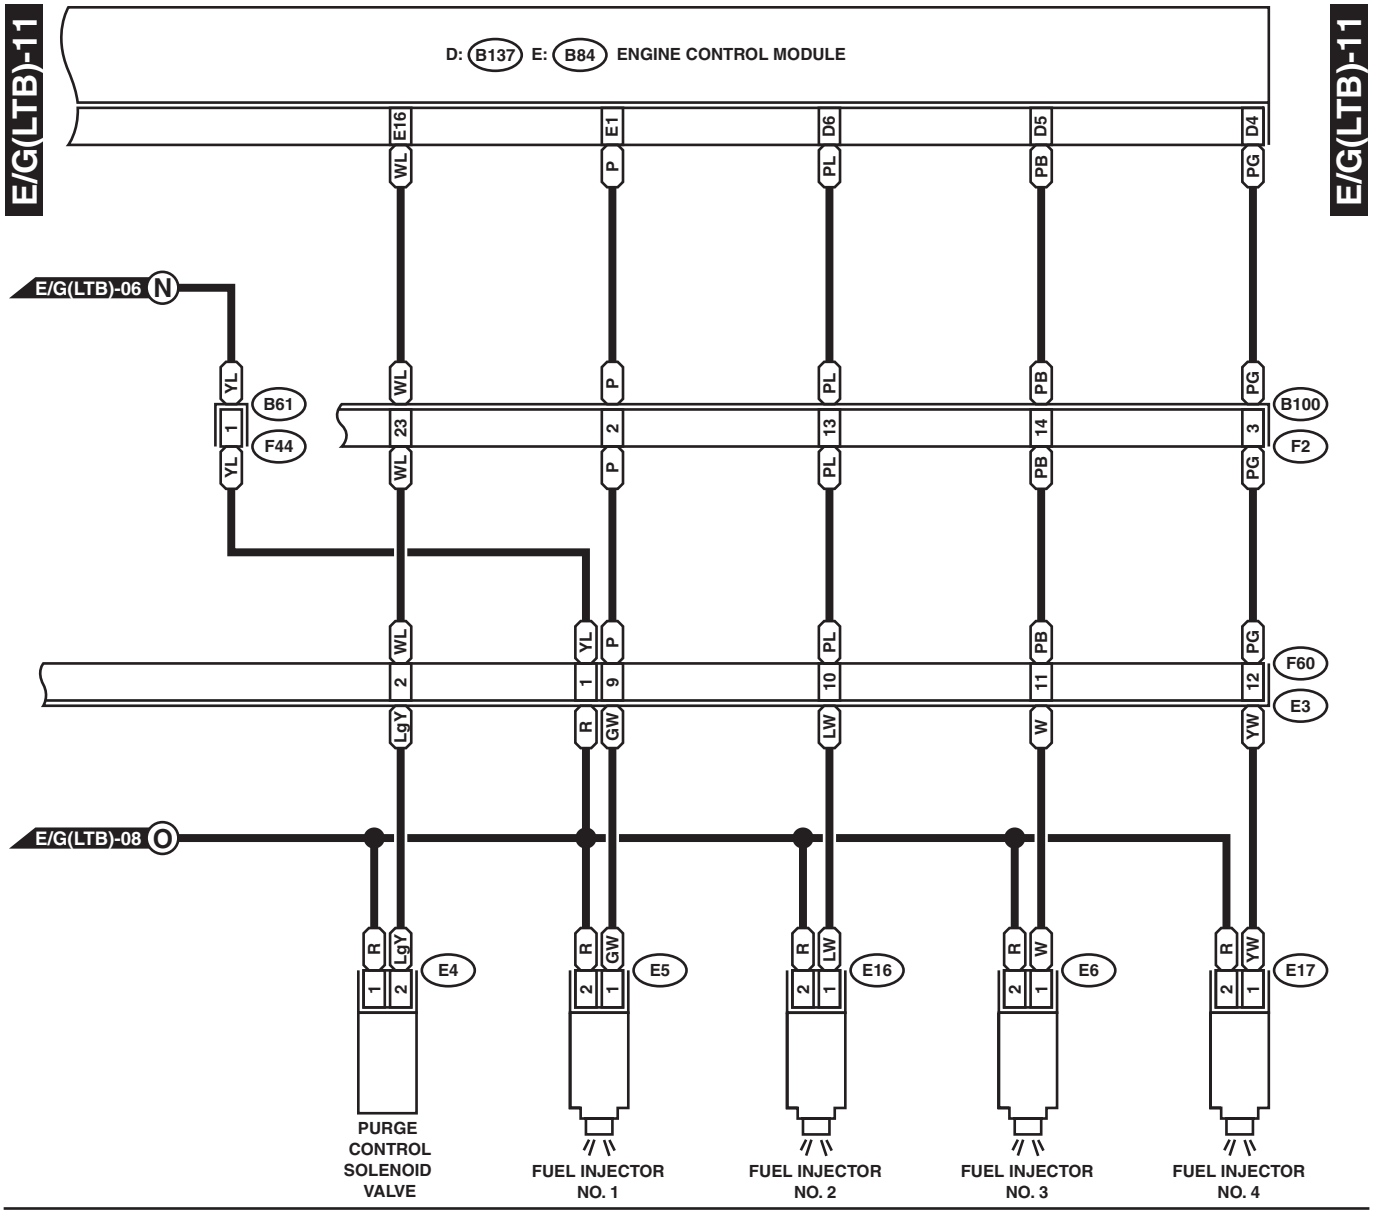
E/G(LTB)-11
E/G(LTB)-11
D: B137 E: B84 ENGINE CONTROL MODULE
E16
E1
D6
D5
D4
WL
P
PL
PB
PG
E/G(LTB)-06 N
B61
F44
B100
F2
F60
E3
E/G(LTB)-08 O
LgY
R
GW
LW
W
YW
E4
E5
E16
E6
E17
PURGE CONTROL SOLENOID VALVE
FUEL INJECTOR NO. 1
FUEL INJECTOR NO. 2
FUEL INJECTOR NO. 3
FUEL INJECTOR NO. 4

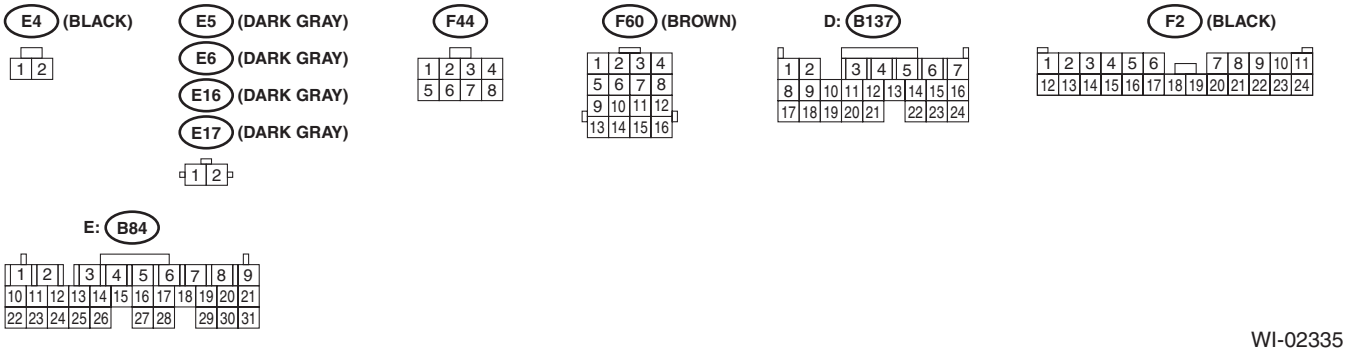
E4 (BLACK)
E5 (DARK GRAY)
E6 (DARK GRAY)
E16 (DARK GRAY)
E17 (DARK GRAY)
F44
F60 (BROWN)
D: B137
F2 (BLACK)
E: B84

WI-02335

4. RHD SOHC W/O OBD MODEL

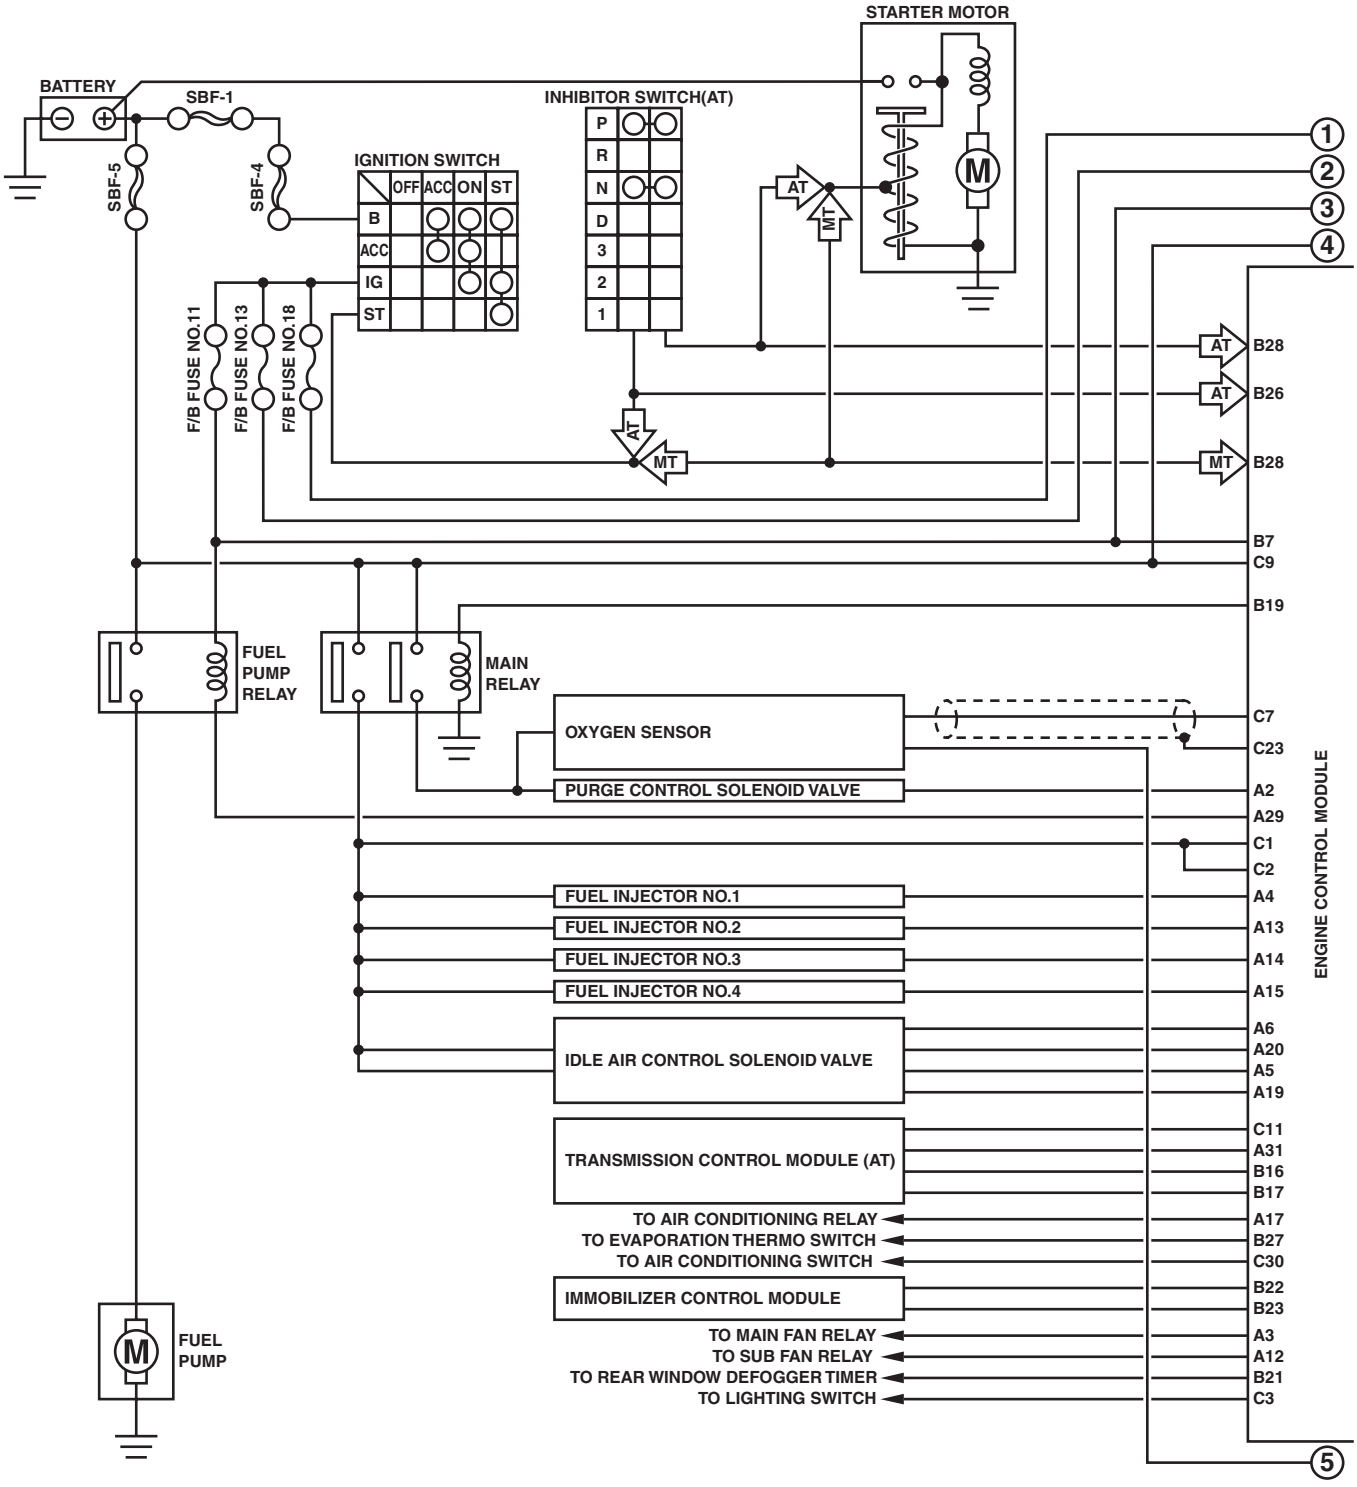

WI-02565

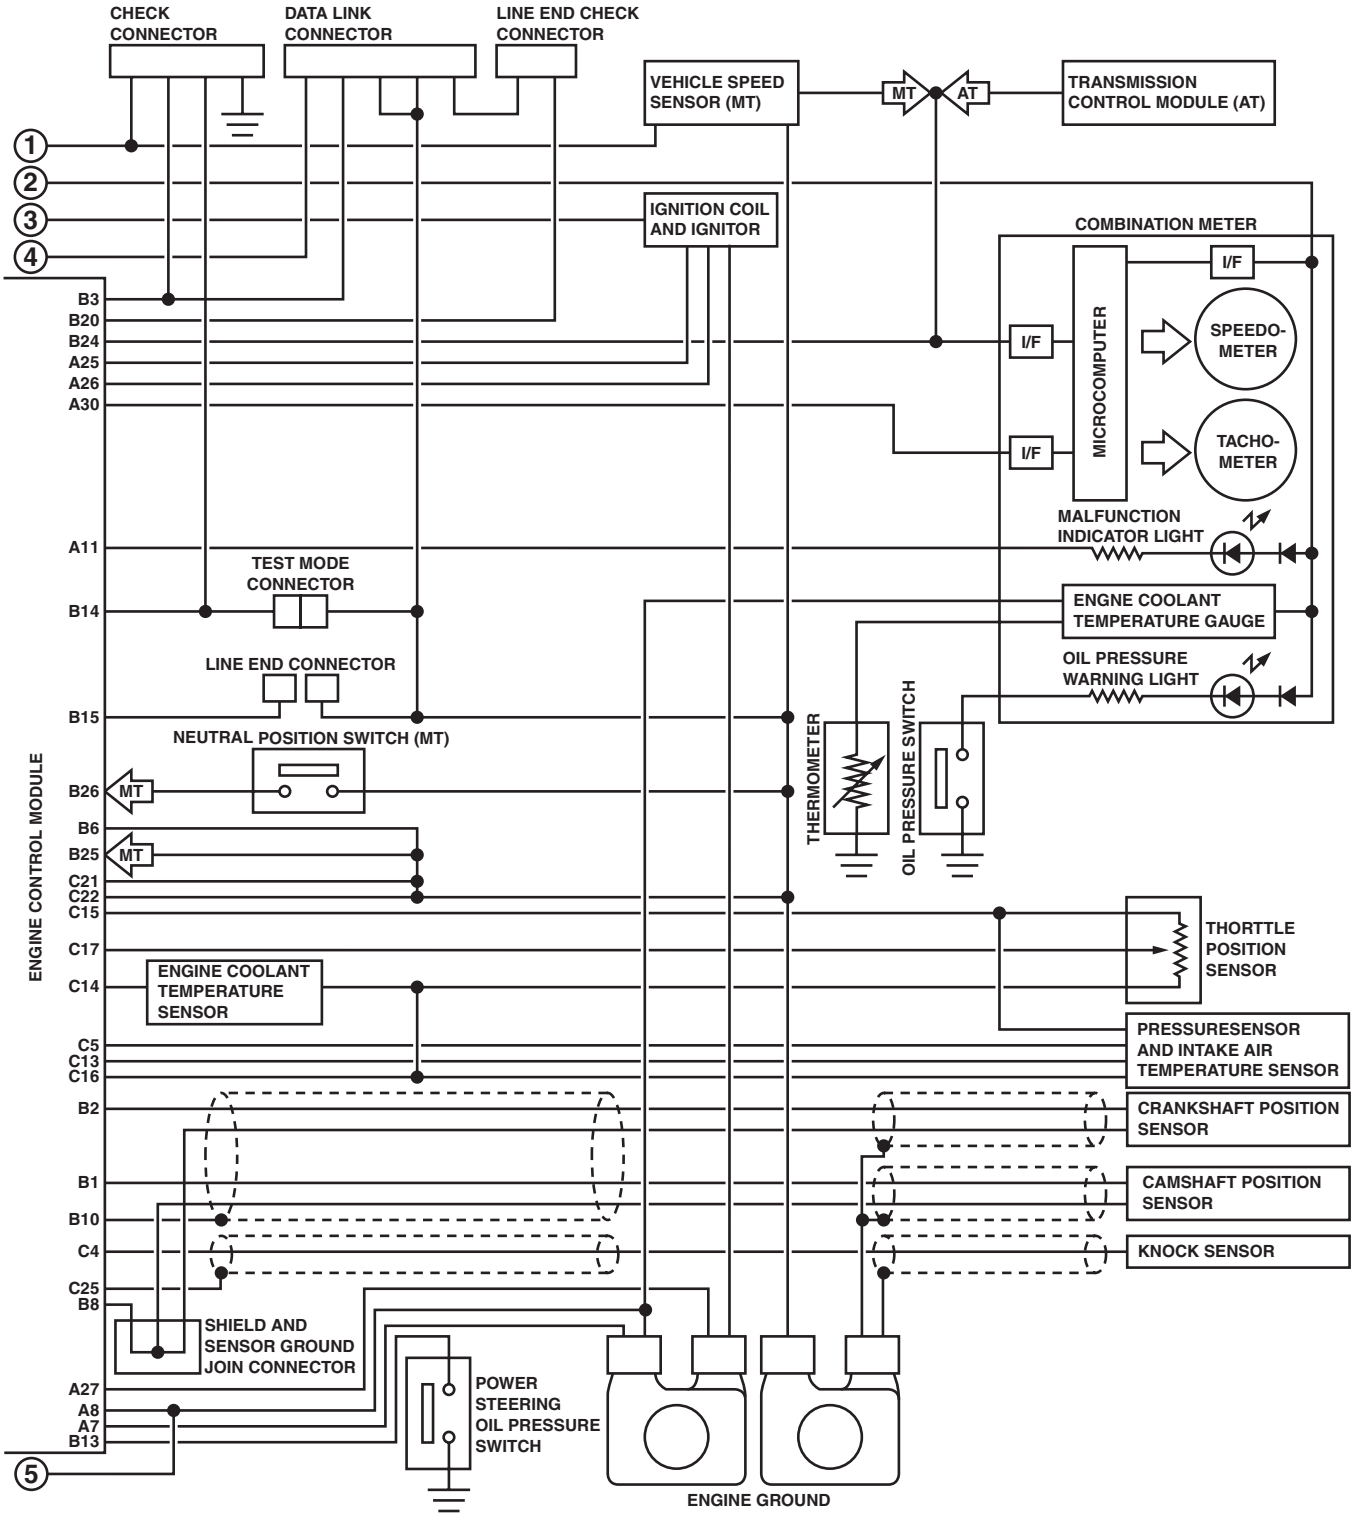
CHECK CONNECTOR
DATA LINK CONNECTOR
LINE END CHECK CONNECTOR
VEHICLE SPEED SENSOR (MT)
MT
AT
TRANSMISSION CONTROL MODULE (AT)
IGNITION COIL AND IGNITOR
COMBINATION METER
I/F
MICROCOMPUTER
SPEEDO-METER
TACHO-METER
MALFUNCTION INDICATOR LIGHT
ENGNE COOLANT TEMPERATURE GAUGE
OIL PRESSURE WARNING LIGHT
TEST MODE CONNECTOR
LINE END CONNECTOR
NEUTRAL POSITION SWITCH (MT)
THERMOMETER
OIL PRESSURE SWITCH
ENGINE CONTROL MODULE
THORTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
PRESSURESENSOR AND INTAKE AIR TEMPERATURE SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
SHIELD AND SENSOR GROUND JOIN CONNECTOR
POWER STEERING OIL PRESSURE SWITCH
ENGINE GROUND
1
2
3
4
5
B3
B20
B24
A25
A26
A30
A11
B14
B15
B26
B6
B25
C21
C22
C15
C17
C14
C5
C13
C16
B2
B1
B10
C4
C25
B8
A27
A8
A7
B13

WI-02566

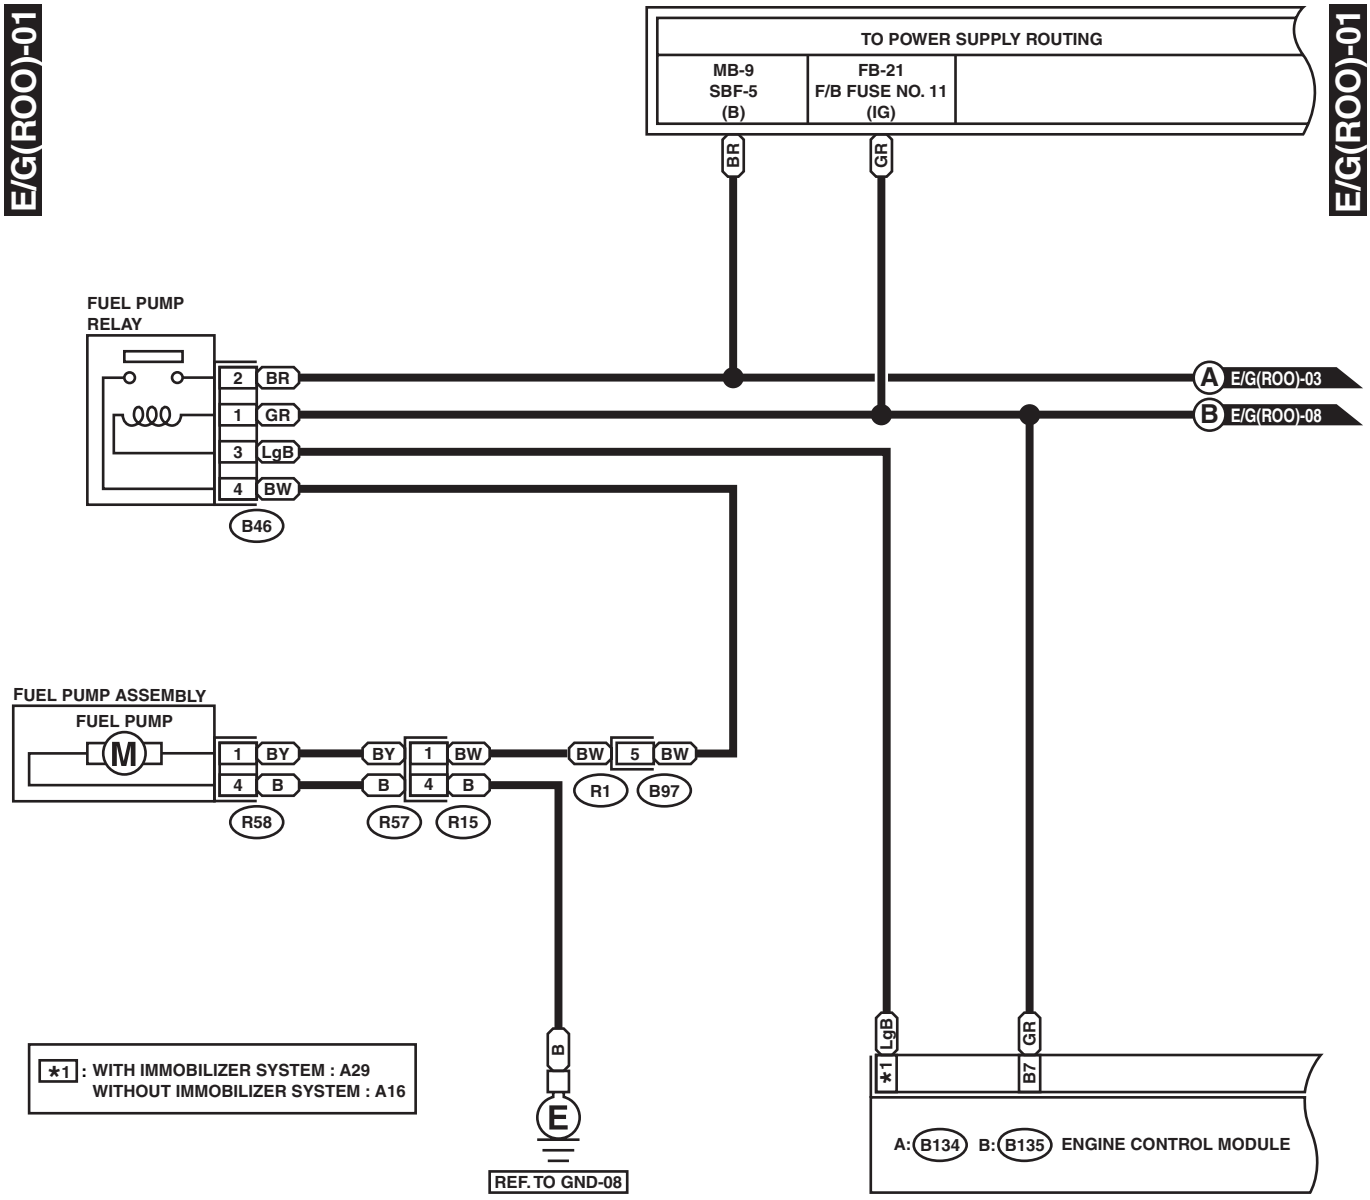
E/G(ROO)-01
E/G(ROO)-01
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
FB-21
F/B FUSE NO. 11
(IG)
BR
GR
FUEL PUMP
RELAY
2 BR
1 GR
3 LgB
4 BW
B46
A E/G(ROO)-03
B E/G(ROO)-08
FUEL PUMP ASSEMBLY
FUEL PUMP
M
1 BY
4 B
R58
BY
B
R57
1 BW
4 B
R15
BW
R1
5 BW
B97
B
E
REF. TO GND-08
*1 : WITH IMMOBILIZER SYSTEM : A29
WITHOUT IMMOBILIZER SYSTEM : A16
LgB
GR
*1
B7
A: B134 B: B135 ENGINE CONTROL MODULE
B46 (GREEN)
R15
R58
B97 (BLACK)
B: B135
A: B134

WI-02336

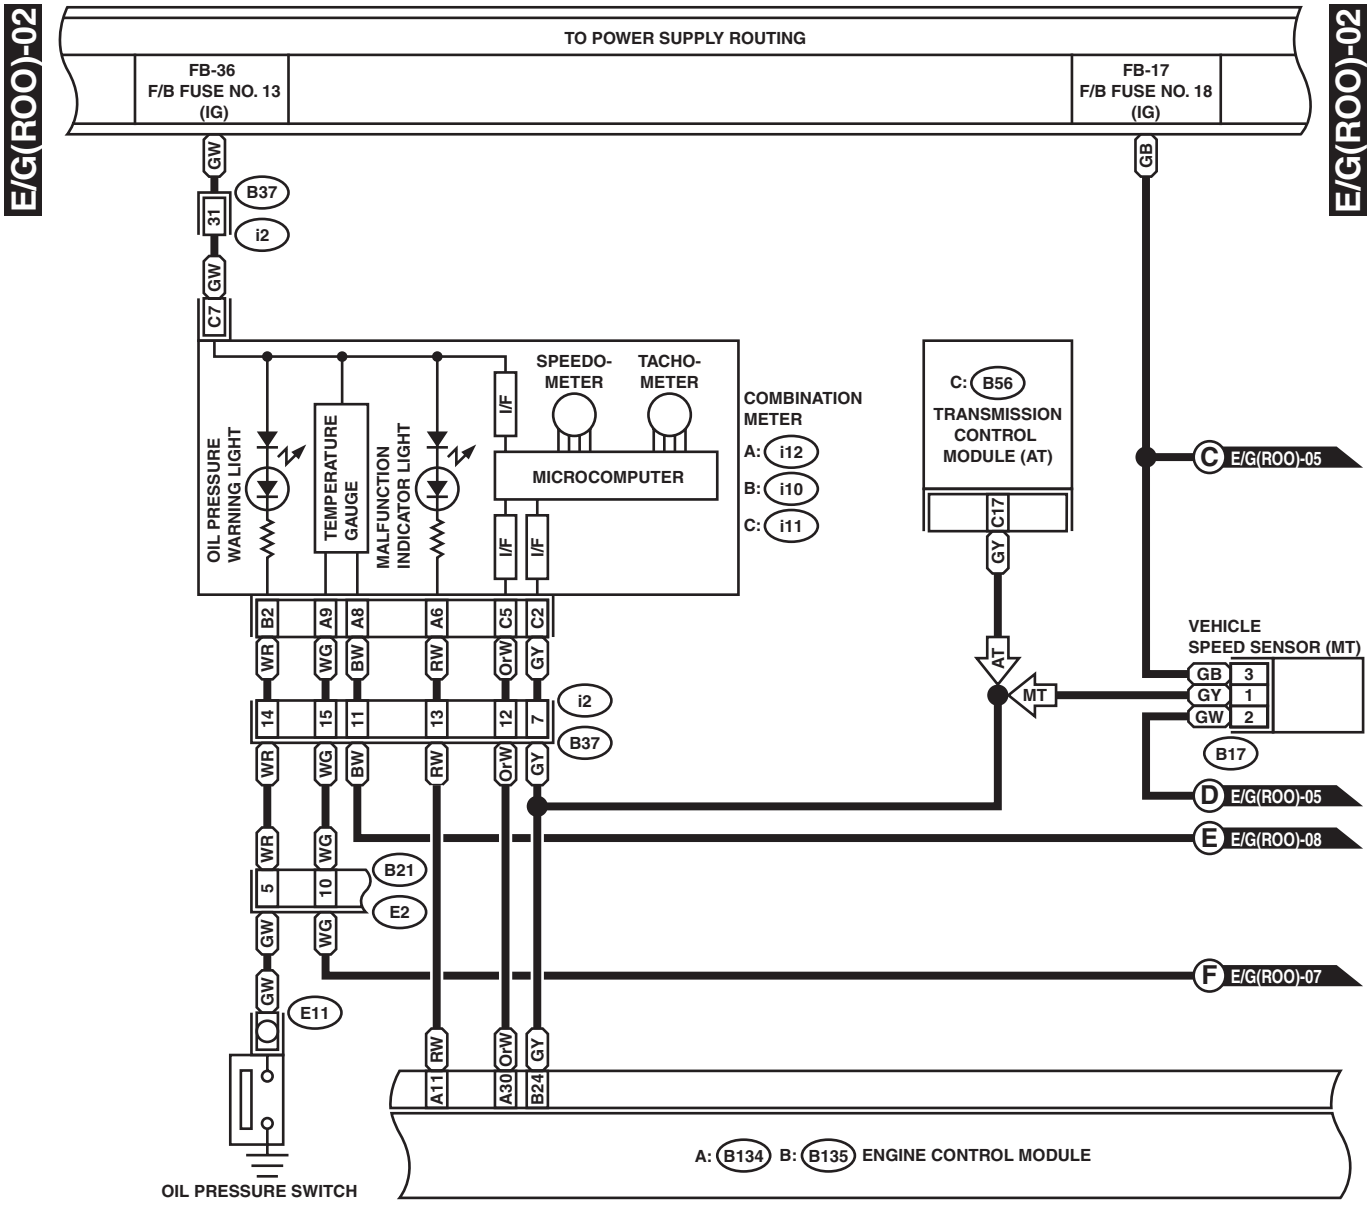
E/G(ROO)-02
E/G(ROO)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO. 13
(IG)
FB-17
F/B FUSE NO. 18
(IG)
GW
B37
31
i2
GW
C7
GB
SPEEDO-
METER
TACHO-
METER
COMBINATION
METER
A: i12
B: i10
C: i11
I/F
MICROCOMPUTER
I/F
I/F
OIL PRESSURE
WARNING LIGHT
TEMPERATURE
GAUGE
MALFUNCTION
INDICATOR LIGHT
C: B56
TRANSMISSION
CONTROL
MODULE (AT)
C17
GY
C E/G(ROO)-05
AT
MT
VEHICLE
SPEED SENSOR (MT)
GB 3
GY 1
GW 2
B17
D E/G(ROO)-05
E E/G(ROO)-08
F E/G(ROO)-07
B2 A9 A8 A6 C5 C2
WR WG BW RW OrW GY
14 15 11 13 12 7
i2
B37
WR WG BW RW OrW GY
WR WG
5 10
B21
E2
GW WG
GW
E11
RW OrW GY
A11 A30 B24
A: B134 B: B135 ENGINE CONTROL MODULE
OIL PRESSURE SWITCH

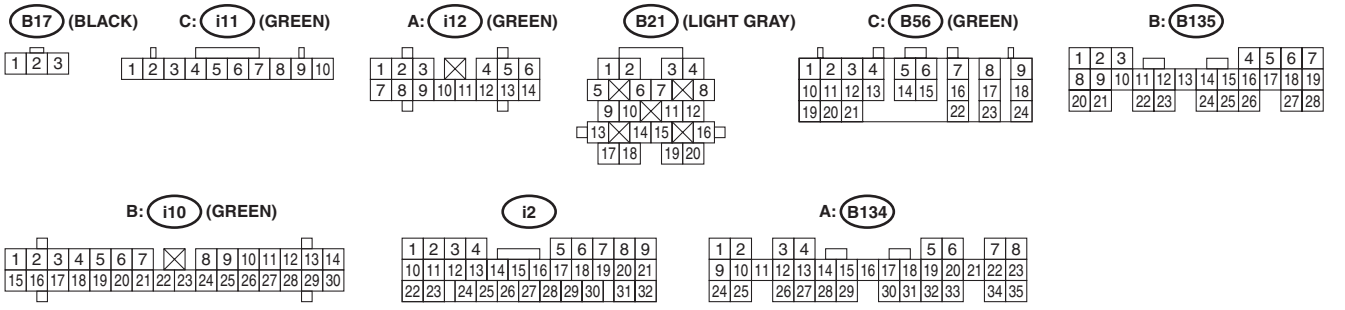
B17 (BLACK)
C: i11 (GREEN)
A: i12 (GREEN)
B21 (LIGHT GRAY)
C: B56 (GREEN)
B: B135
B: i10 (GREEN)
i2
A: B134

WI-02337

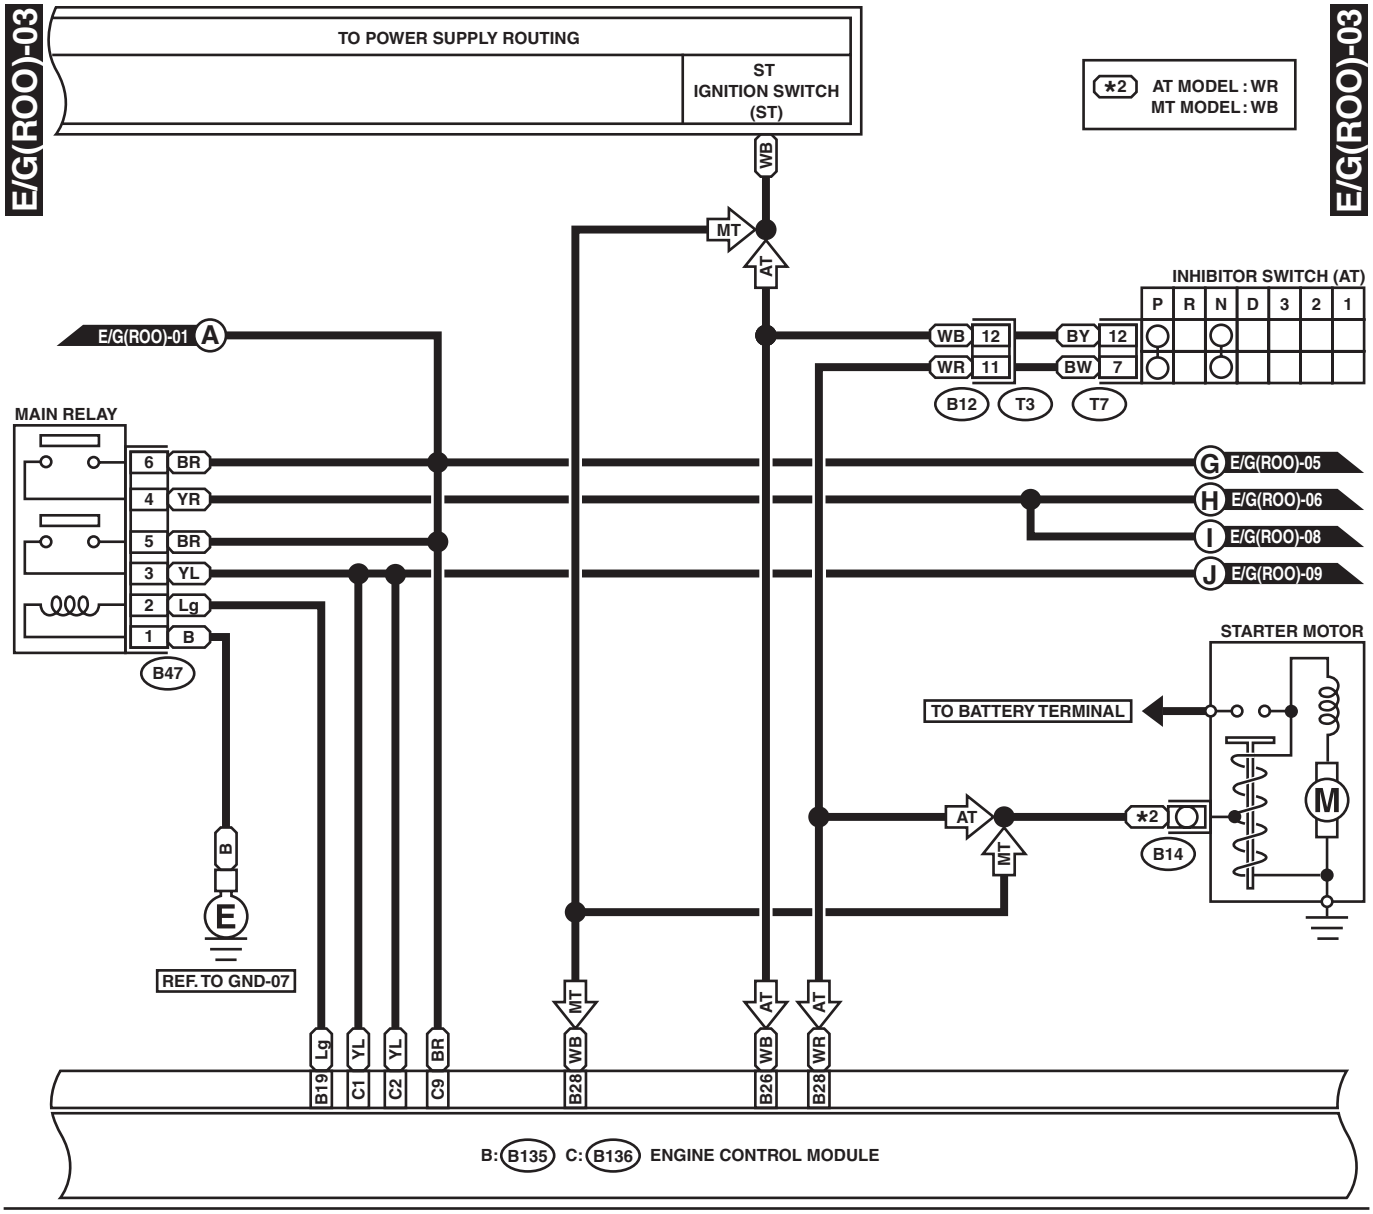
E/G(ROO)-03
TO POWER SUPPLY ROUTING
ST
IGNITION SWITCH
(ST)
*2 AT MODEL : WR
MT MODEL : WB
WB
MT
AT
INHIBITOR SWITCH (AT)
P R N D 3 2 1
E/G(ROO)-01 A
WB 12
WR 11
BY 12
BW 7
B12 T3 T7
MAIN RELAY
6 BR
4 YR
5 BR
3 YL
2 Lg
1 B
B47
G E/G(ROO)-05
H E/G(ROO)-06
I E/G(ROO)-08
J E/G(ROO)-09
STARTER MOTOR
TO BATTERY TERMINAL
M
AT
MT
*2
B14
B
E
REF. TO GND-07
Lg
YL
YL
BR
WB
WB
WR
B19
C1
C2
C9
B28
B26
B28
B: B135 C: B136 ENGINE CONTROL MODULE

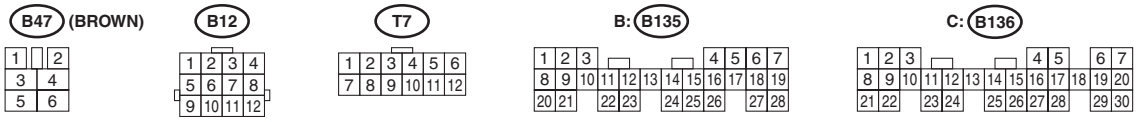
B47 (BROWN)
B12
T7
B: B135
C: B136

WI-02338

E/G(ROO)-04

E/G(ROO)-04

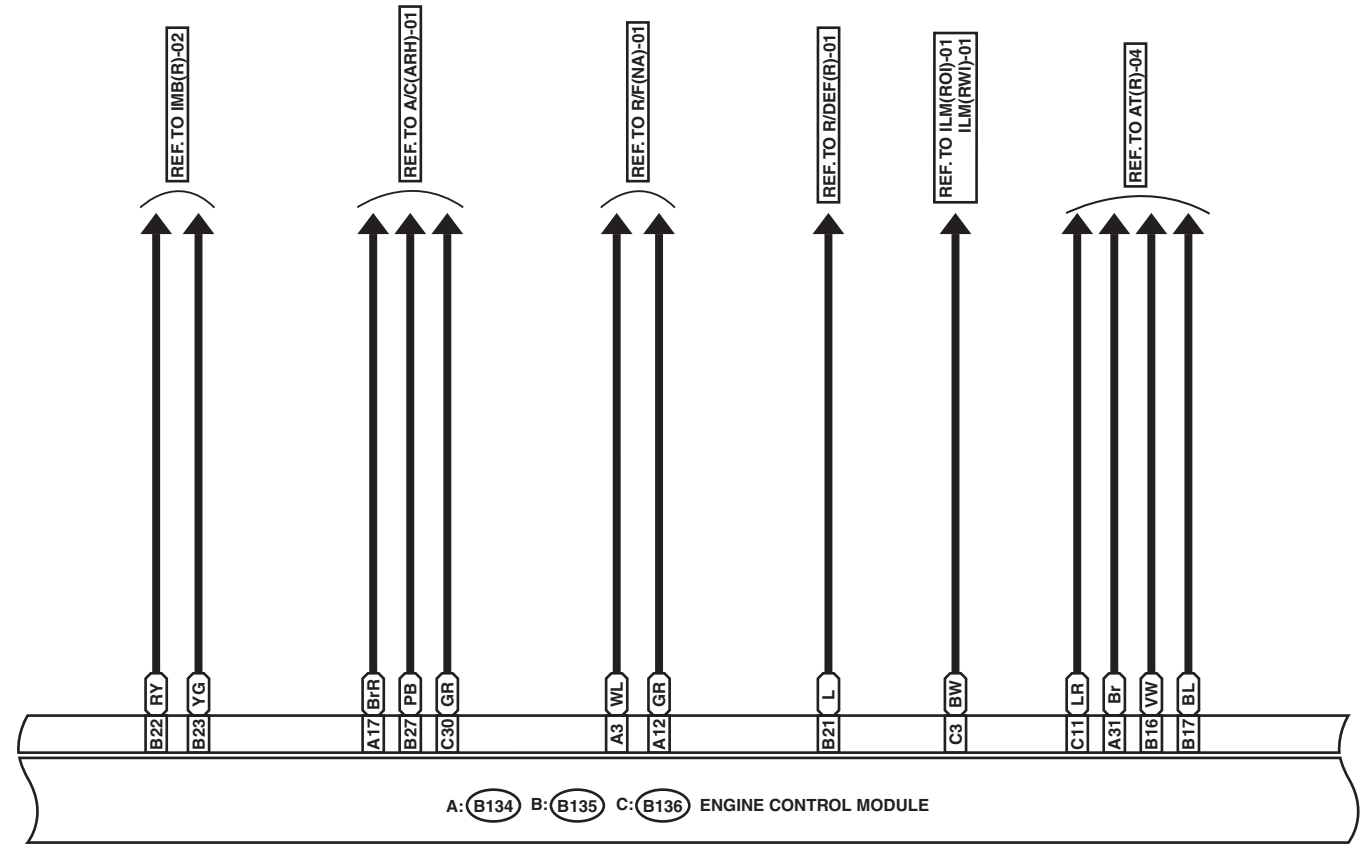



WI-02339

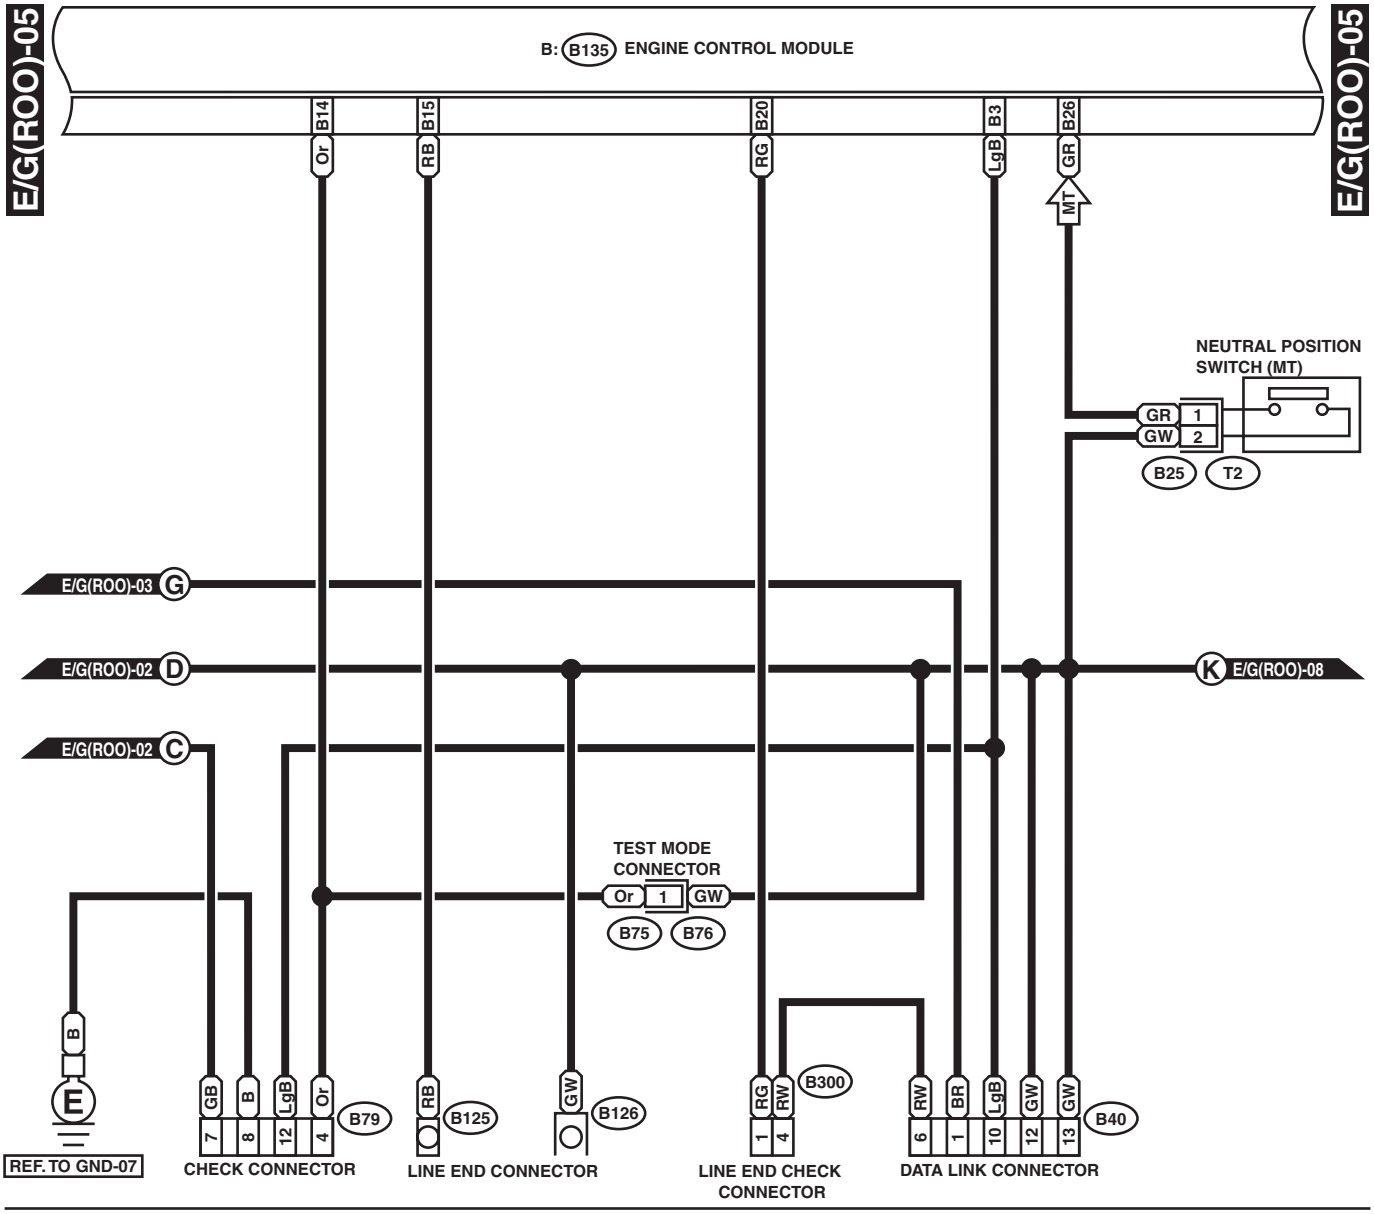
E/G(ROO)-05
B: B135 ENGINE CONTROL MODULE
E/G(ROO)-05
B14
B15
B20
B3
B26
Or
RB
RG
LgB
GR
MT
NEUTRAL POSITION SWITCH (MT)
GR 1
GW 2
B25
T2
E/G(ROO)-03 G
E/G(ROO)-02 D
K E/G(ROO)-08
E/G(ROO)-02 C
TEST MODE CONNECTOR
Or 1 GW
B75
B76
B
E
REF. TO GND-07
GB
B
LgB
Or
B79
7
8
12
4
CHECK CONNECTOR
RB
B125
LINE END CONNECTOR
GW
B126
RG
RW
B300
1
4
LINE END CHECK CONNECTOR
RW
BR
LgB
GW
GW
B40
6
1
10
12
13
DATA LINK CONNECTOR
B25 (BROWN)
1 2
B75 (GREEN)
1
2
B300
1 2 3
4 5 6
B79 (GRAY)
1 2 3 4 5 6 7
8 9 10 11 12 13 14
B40 (BLACK)
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
B: B135
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28

WI-02340

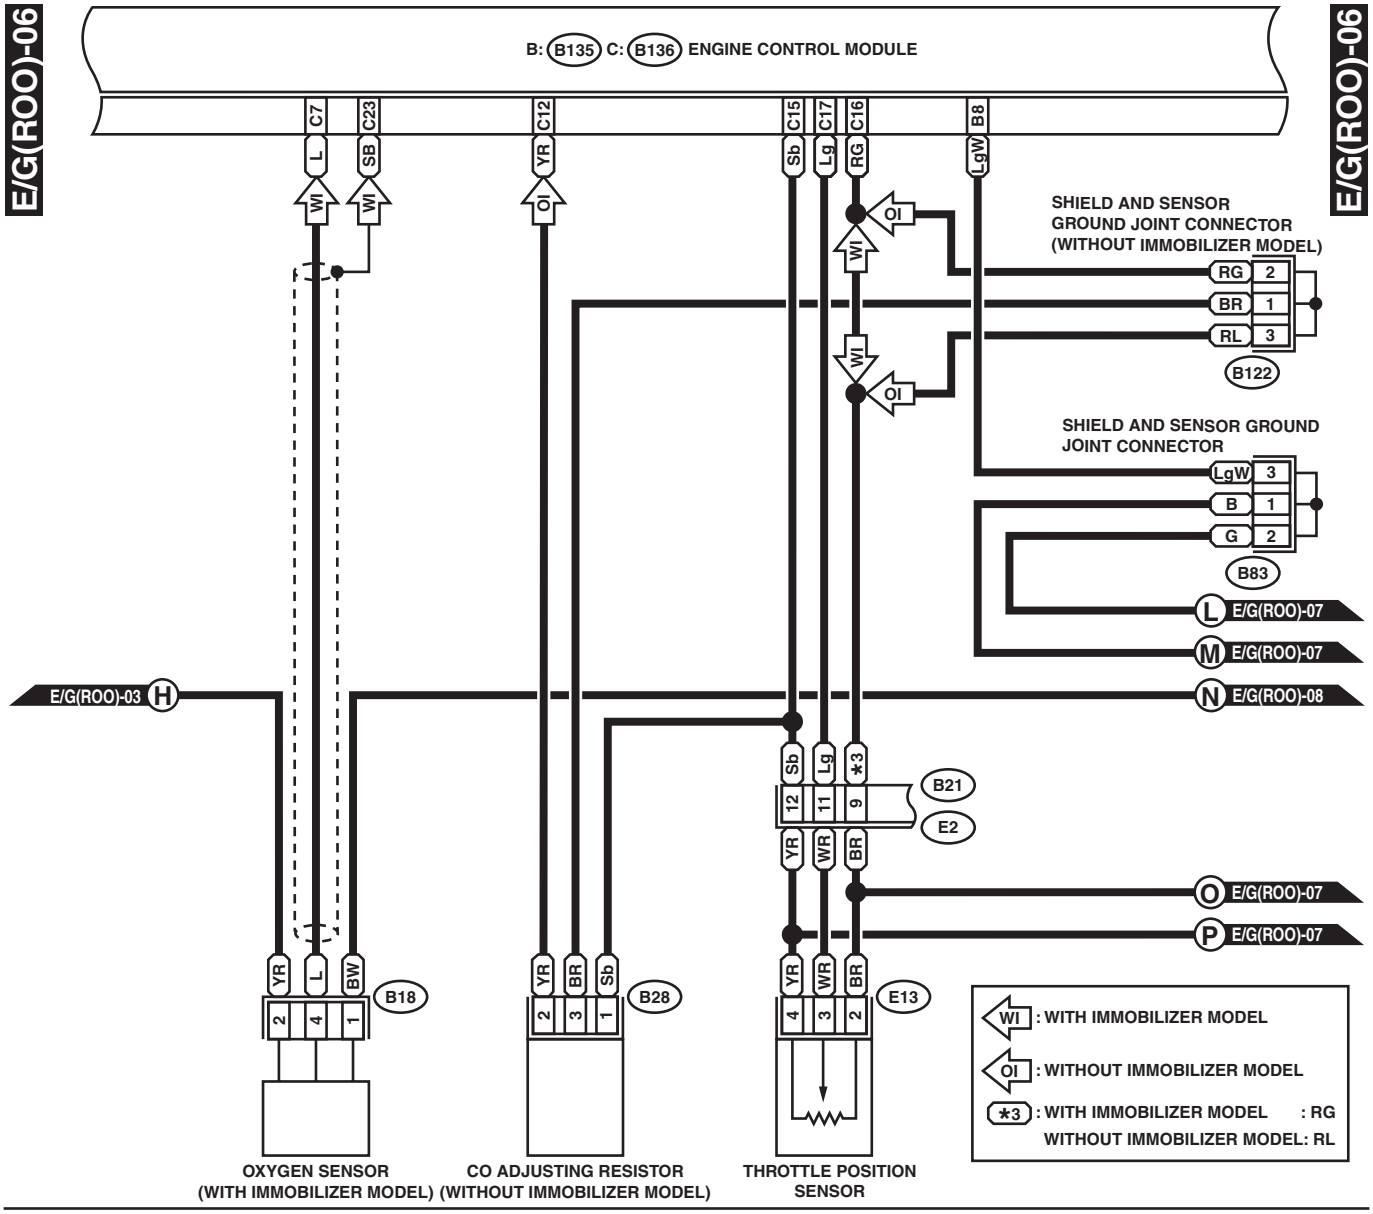
E/G(ROO)-06
E/G(ROO)-06
B: B135 C: B136 ENGINE CONTROL MODULE
C7
C23
C12
C15
C17
C16
B8
L
SB
YR
Sb
Lg
RG
LgW
WI
WI
OI
OI
WI
WI
OI
SHIELD AND SENSOR GROUND JOINT CONNECTOR (WITHOUT IMMOBILIZER MODEL)
RG 2
BR 1
RL 3
B122
SHIELD AND SENSOR GROUND JOINT CONNECTOR
LgW 3
B 1
G 2
B83
L E/G(ROO)-07
M E/G(ROO)-07
E/G(ROO)-03 H
N E/G(ROO)-08
Sb
Lg
*3
12
11
9
B21
E2
YR
WR
BR
O E/G(ROO)-07
P E/G(ROO)-07
YR
L
BW
B18
2
4
1
YR
BR
Sb
B28
2
3
1
YR
WR
BR
E13
4
3
2
WI : WITH IMMOBILIZER MODEL
OI : WITHOUT IMMOBILIZER MODEL
*3 : WITH IMMOBILIZER MODEL : RG
WITHOUT IMMOBILIZER MODEL: RL
OXYGEN SENSOR (WITH IMMOBILIZER MODEL)
CO ADJUSTING RESISTOR (WITHOUT IMMOBILIZER MODEL)
THROTTLE POSITION SENSOR

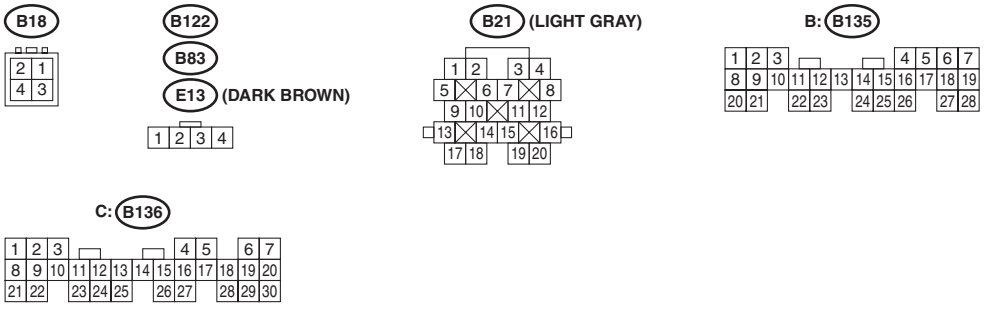
B18
2 1
4 3
B122
B83
E13 (DARK BROWN)
1 2 3 4
B21 (LIGHT GRAY)
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
B: B135
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28
C: B136
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30

WI-02341

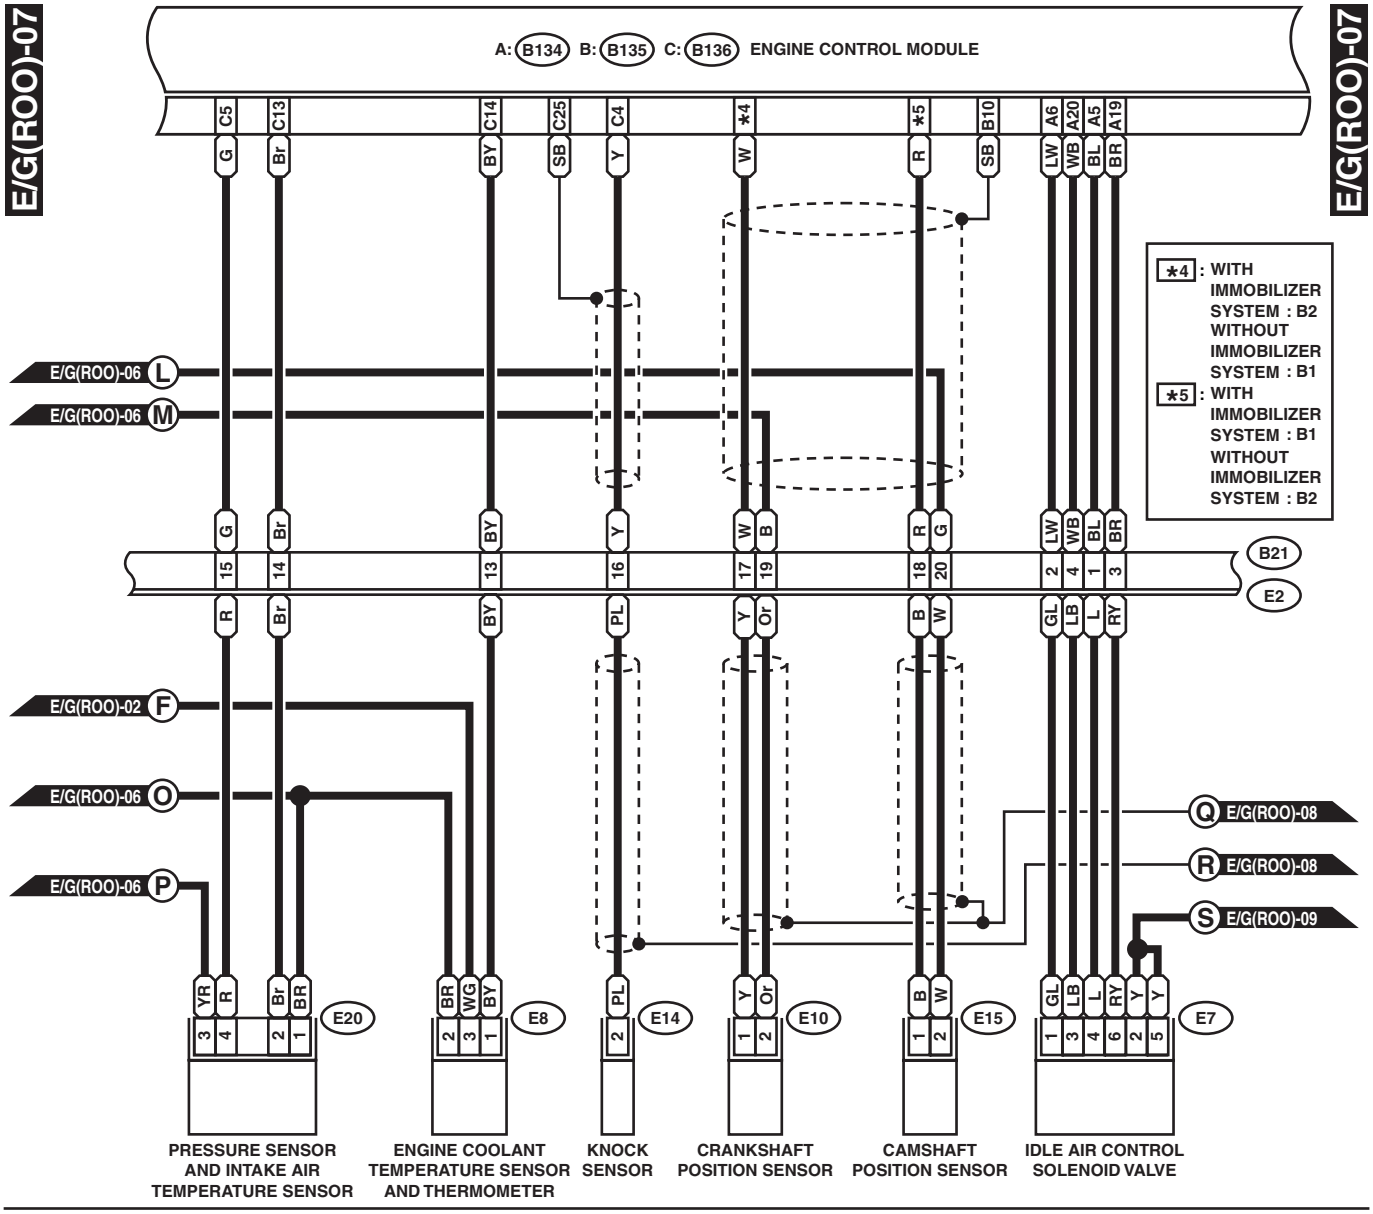
E/G(ROO)-07
E/G(ROO)-07
A: B134 B: B135 C: B136 ENGINE CONTROL MODULE
C5 C13 C14 C25 C4 ✱4 ✱5 B10 A6 A20 A5 A19
G Br BY SB Y W R SB LW WB BL BR
✱4 : WITH IMMOBILIZER SYSTEM : B2
WITHOUT IMMOBILIZER SYSTEM : B1
✱5 : WITH IMMOBILIZER SYSTEM : B1
WITHOUT IMMOBILIZER SYSTEM : B2
E/G(ROO)-06 L
E/G(ROO)-06 M
G Br BY Y W B R G LW WB BL BR
15 14 13 16 17 19 18 20 2 4 1 3
B21
E2
R Br BY PL Y Or B W GL LB L RY
E/G(ROO)-02 F
E/G(ROO)-06 O
E/G(ROO)-06 P
Q E/G(ROO)-08
R E/G(ROO)-08
S E/G(ROO)-09
YR R Br BR BR WG BY PL Y Or B W GL LB L RY Y Y
3 4 2 1 2 3 1 2 1 2 1 2 1 3 4 6 2 5
E20 E8 E14 E10 E15 E7
PRESSURE SENSOR AND INTAKE AIR TEMPERATURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR AND THERMOMETER
KNOCK SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
IDLE AIR CONTROL SOLENOID VALVE

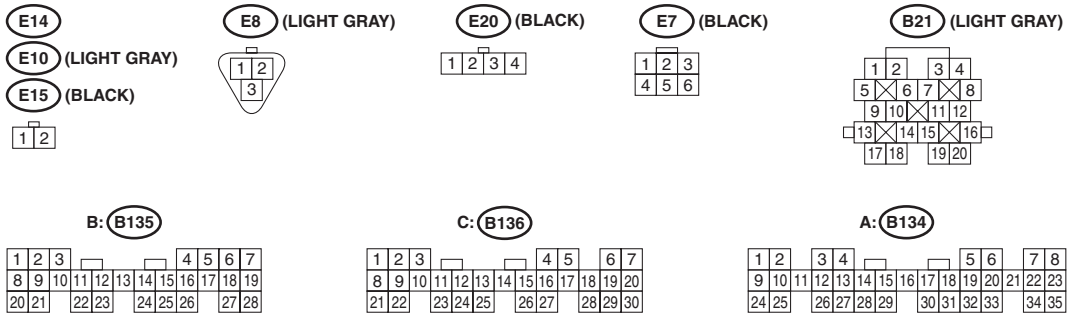
E14
E10 (LIGHT GRAY)
E15 (BLACK)
E8 (LIGHT GRAY)
E20 (BLACK)
E7 (BLACK)
B21 (LIGHT GRAY)
B: B135
C: B136
A: B134

WI-02342

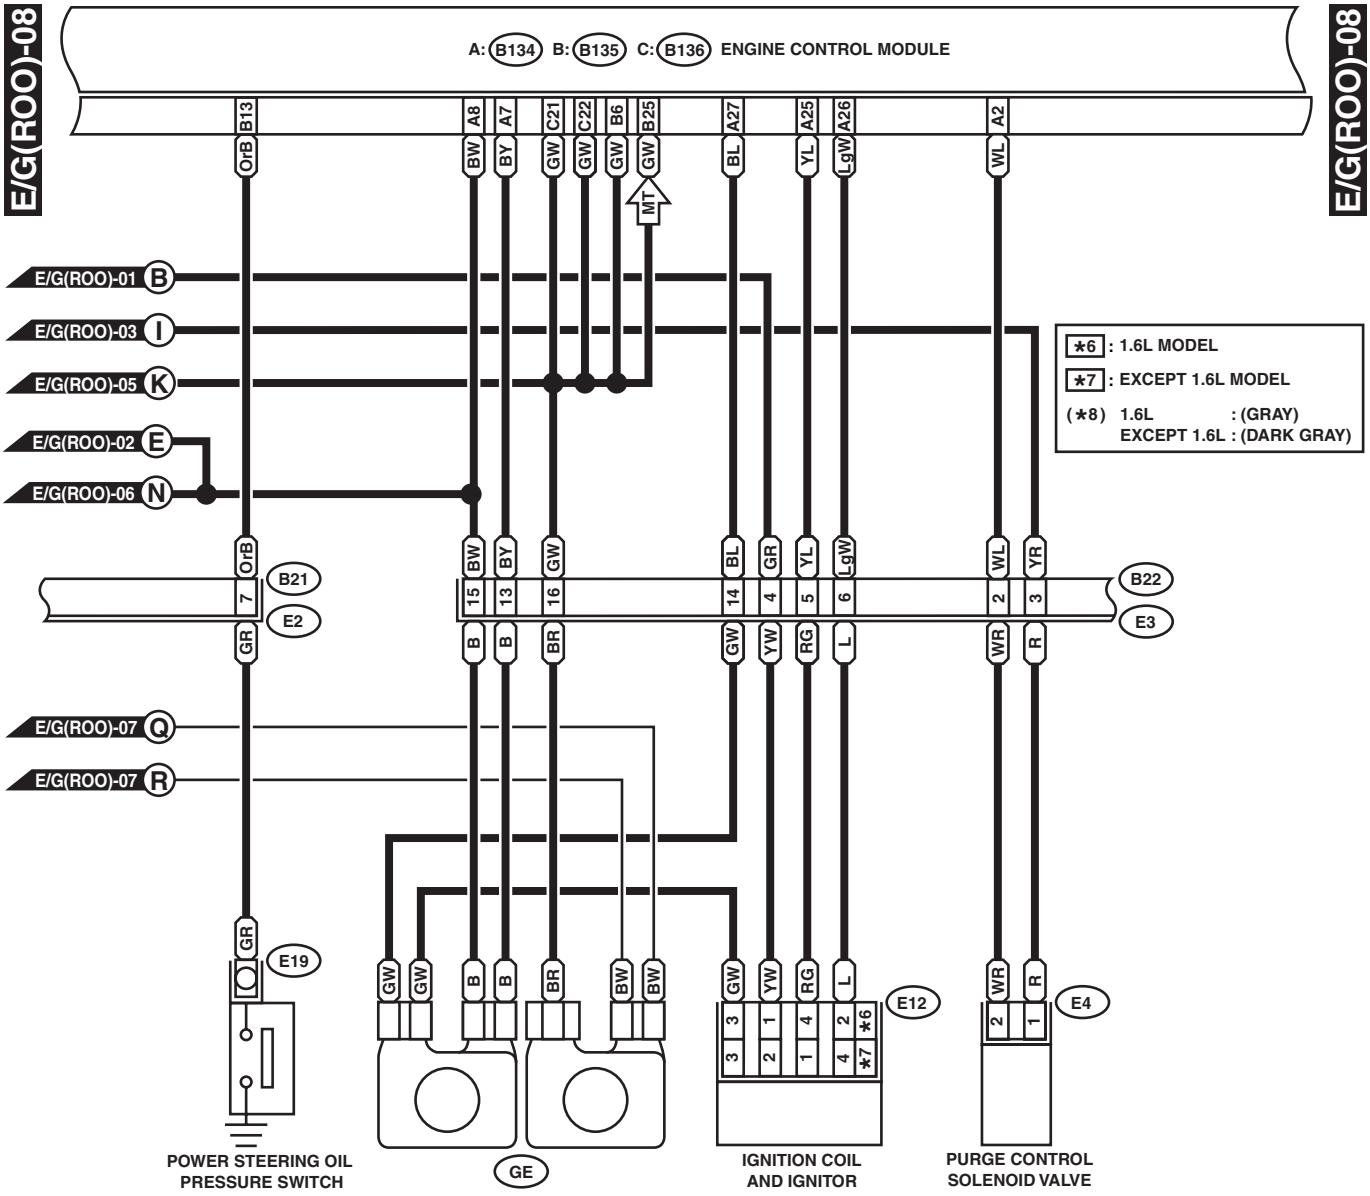
E/G(ROO)-08
A: B134 B: B135 C: B136 ENGINE CONTROL MODULE
E/G(ROO)-08
E/G(ROO)-01 B
E/G(ROO)-03 I
E/G(ROO)-05 K
E/G(ROO)-02 E
E/G(ROO)-06 N
E/G(ROO)-07 Q
E/G(ROO)-07 R
*6 : 1.6L MODEL
*7 : EXCEPT 1.6L MODEL
(*8) 1.6L : (GRAY)
EXCEPT 1.6L : (DARK GRAY)
B21
E2
B22
E3
E19
E12
E4
MT
GE
POWER STEERING OIL PRESSURE SWITCH
IGNITION COIL AND IGNITOR
PURGE CONTROL SOLENOID VALVE

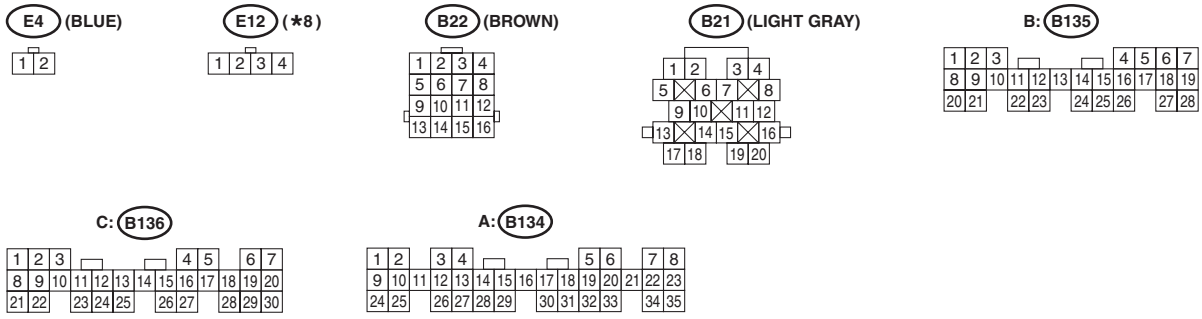
E4 (BLUE)
E12 (*8)
B22 (BROWN)
B21 (LIGHT GRAY)
B: B135
C: B136
A: B134

WI-02343

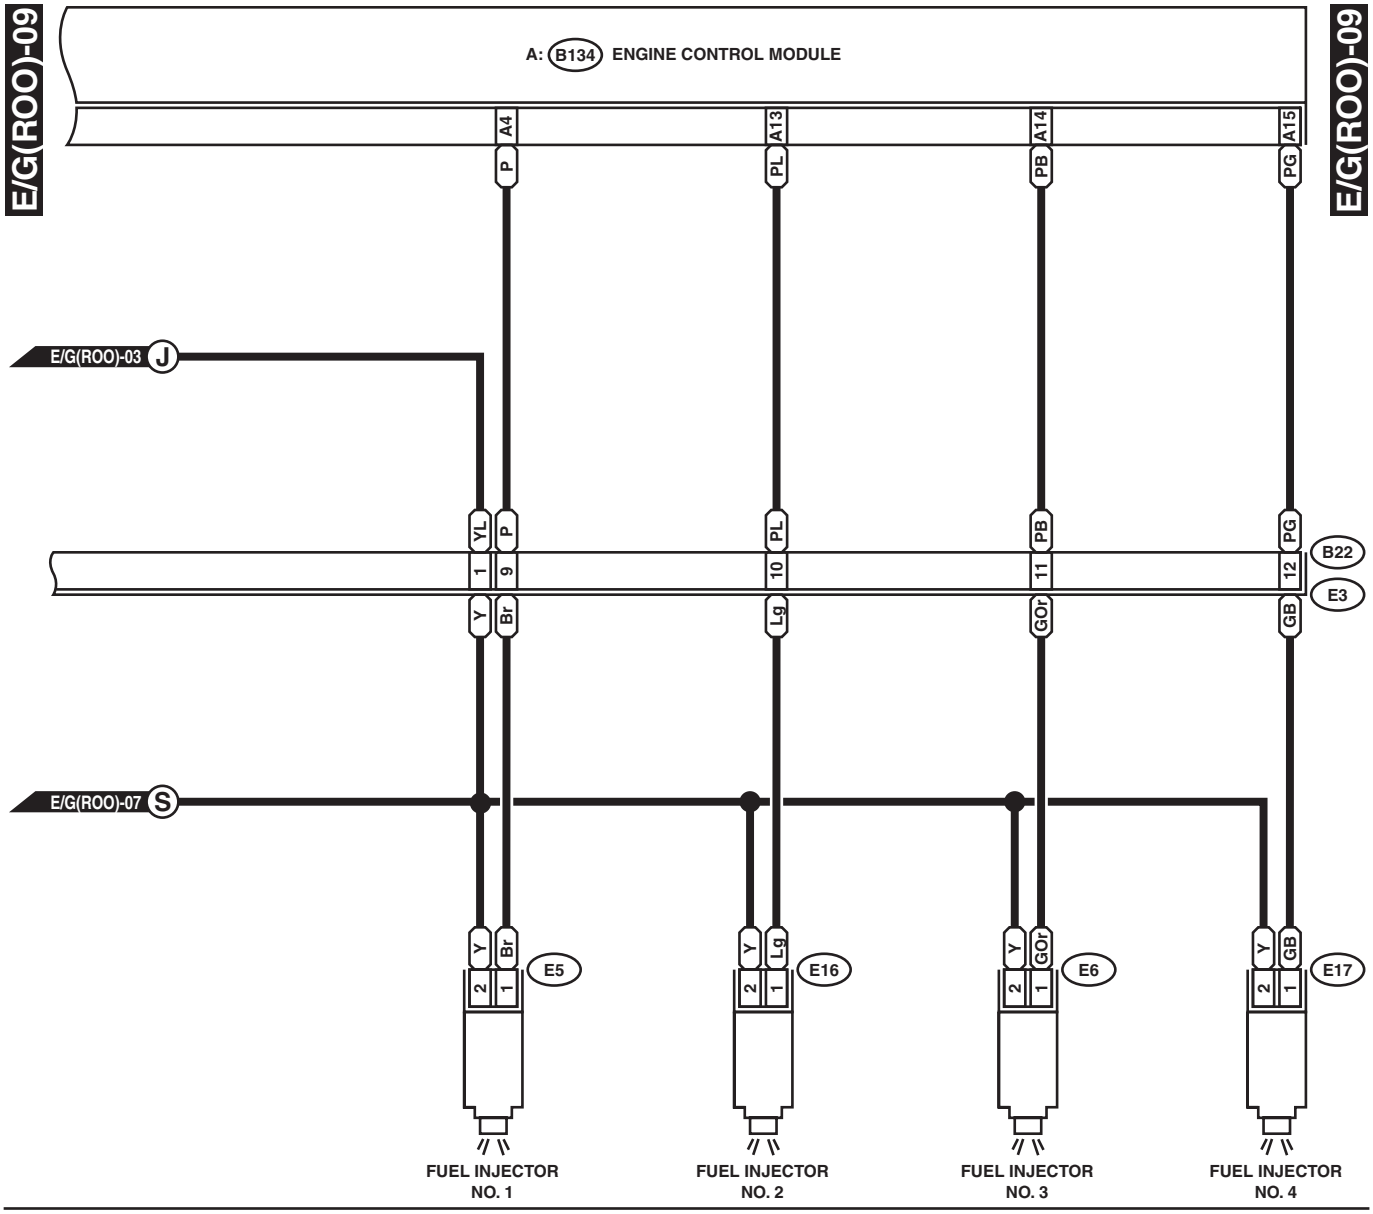

E5 (LIGHT GRAY)
E6 (LIGHT GRAY)
E16 (LIGHT GRAY)
E17 (LIGHT GRAY)

B22 (BROWN)



A: B134



WI-02344

5. RHD SOHC WITH OBD MODEL

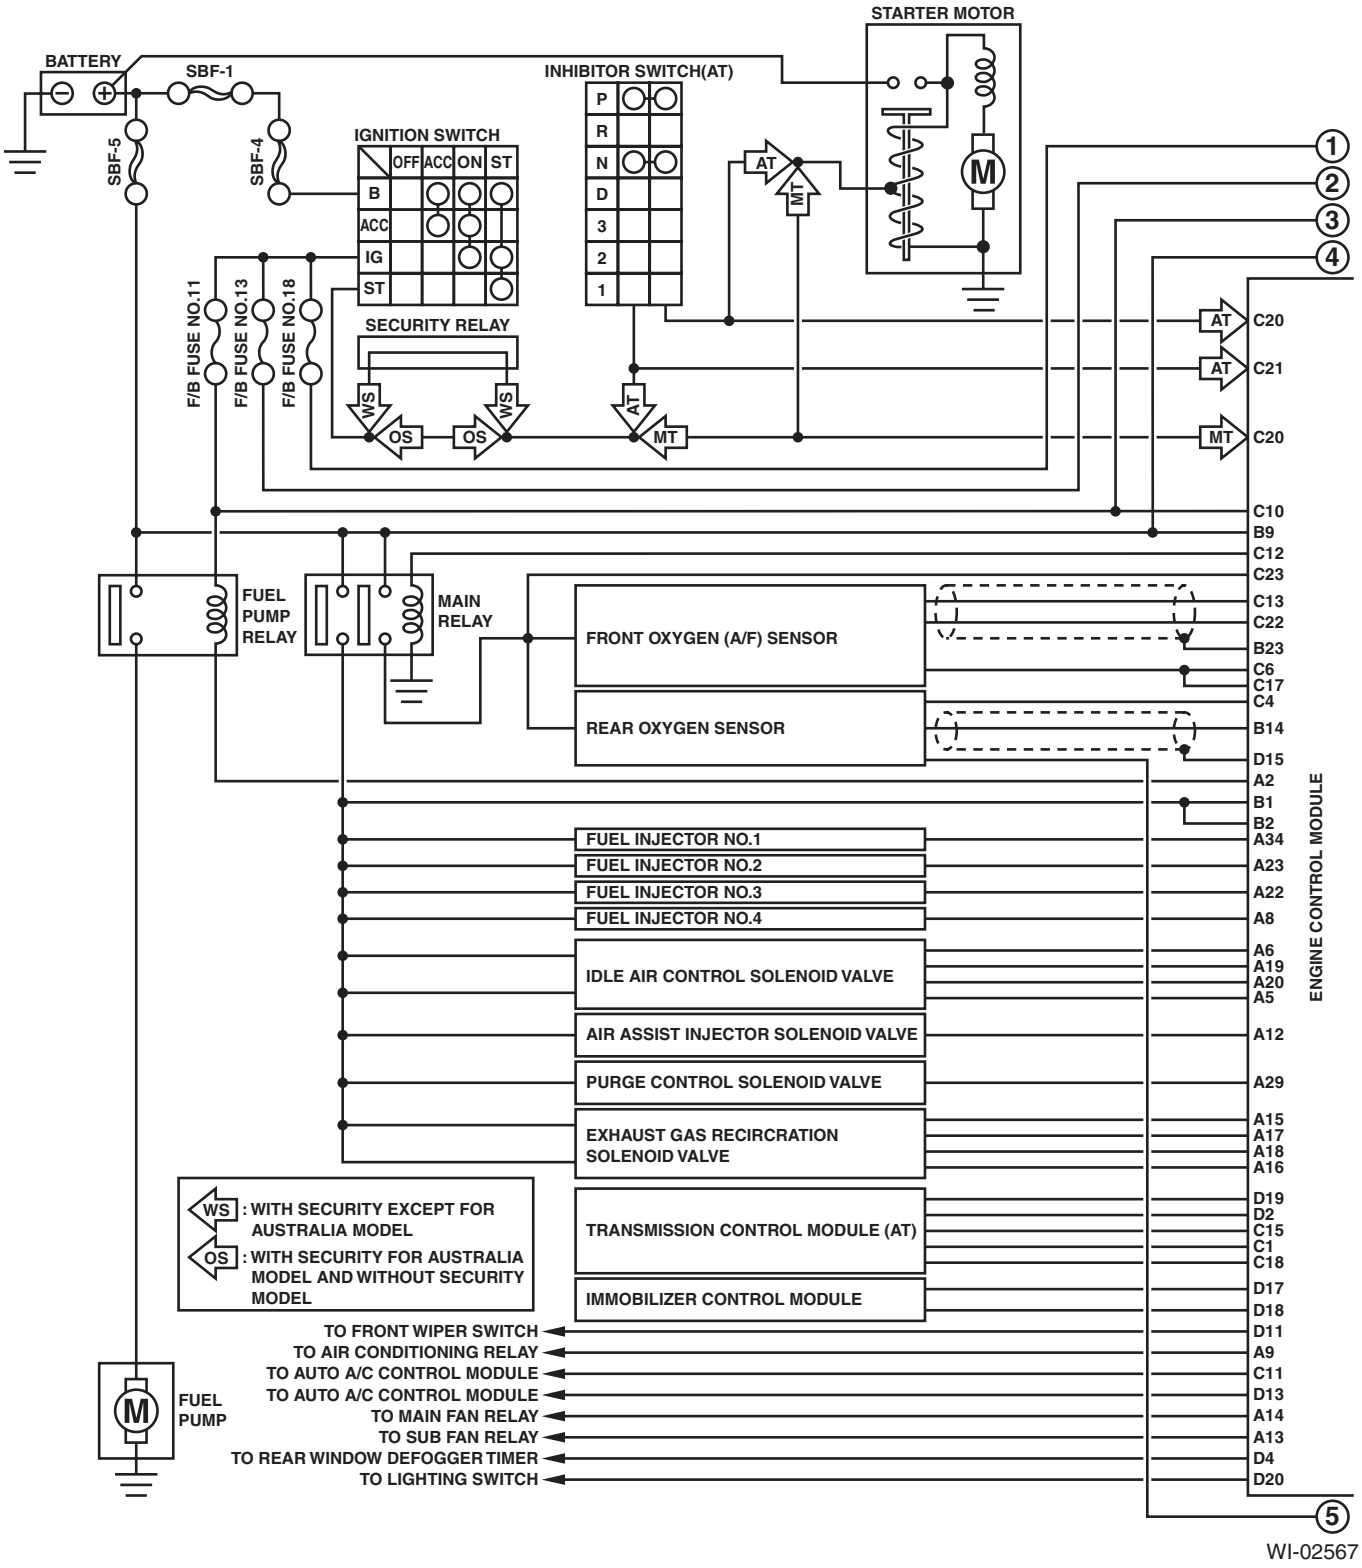

WI-02567

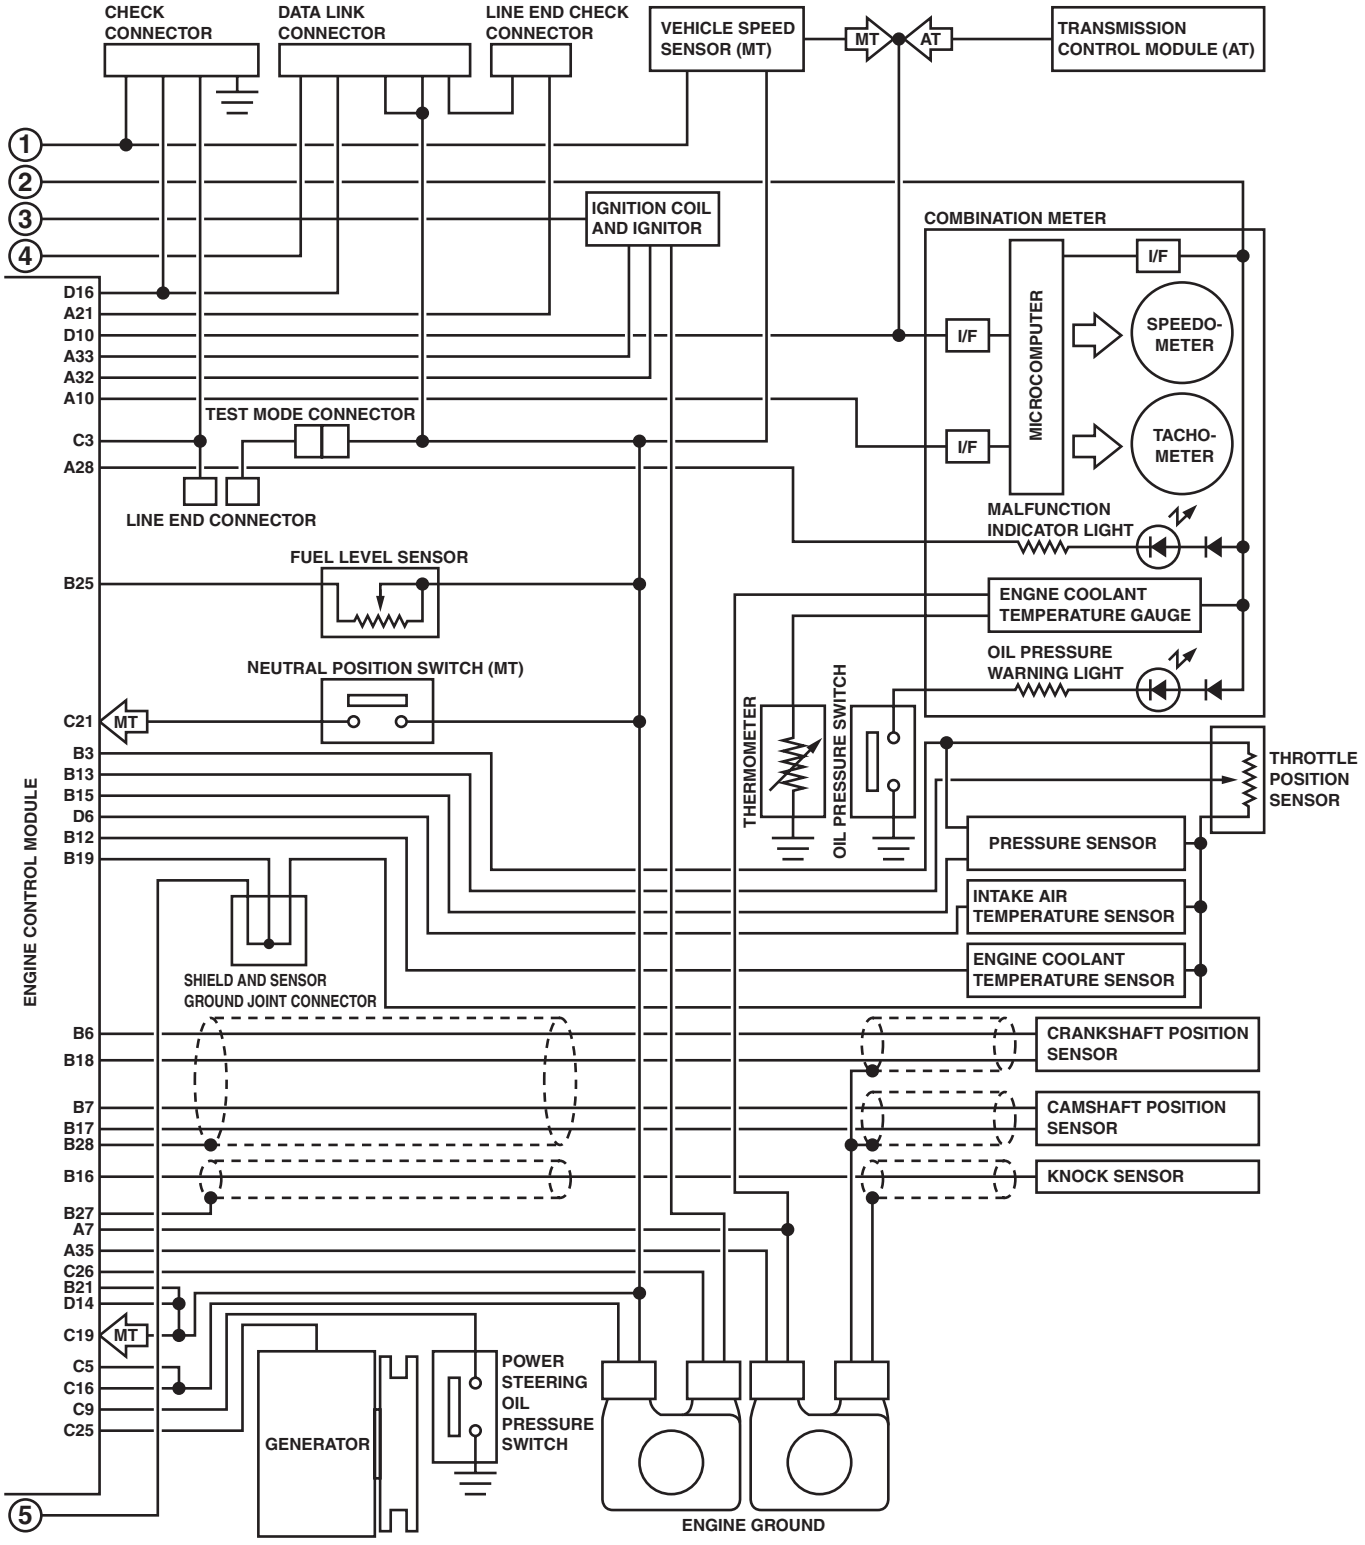
CHECK CONNECTOR
DATA LINK CONNECTOR
LINE END CHECK CONNECTOR
VEHICLE SPEED SENSOR (MT)
MT
AT
TRANSMISSION CONTROL MODULE (AT)
IGNITION COIL AND IGNITOR
COMBINATION METER
I/F
MICROCOMPUTER
SPEEDO-METER
TACHO-METER
MALFUNCTION INDICATOR LIGHT
ENGNE COOLANT TEMPERATURE GAUGE
OIL PRESSURE WARNING LIGHT
TEST MODE CONNECTOR
LINE END CONNECTOR
FUEL LEVEL SENSOR
NEUTRAL POSITION SWITCH (MT)
THERMOMETER
OIL PRESSURE SWITCH
THROTTLE POSITION SENSOR
PRESSURE SENSOR
INTAKE AIR TEMPERATURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
SHIELD AND SENSOR GROUND JOINT CONNECTOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
ENGINE CONTROL MODULE
GENERATOR
POWER STEERING OIL PRESSURE SWITCH
ENGINE GROUND
D16
A21
D10
A33
A32
A10
C3
A28
B25
C21
B3
B13
B15
D6
B12
B19
B6
B18
B7
B17
B28
B16
B27
A7
A35
C26
B21
D14
C19
C5
C16
C9
C25
1
2
3
4
5

WI-02568

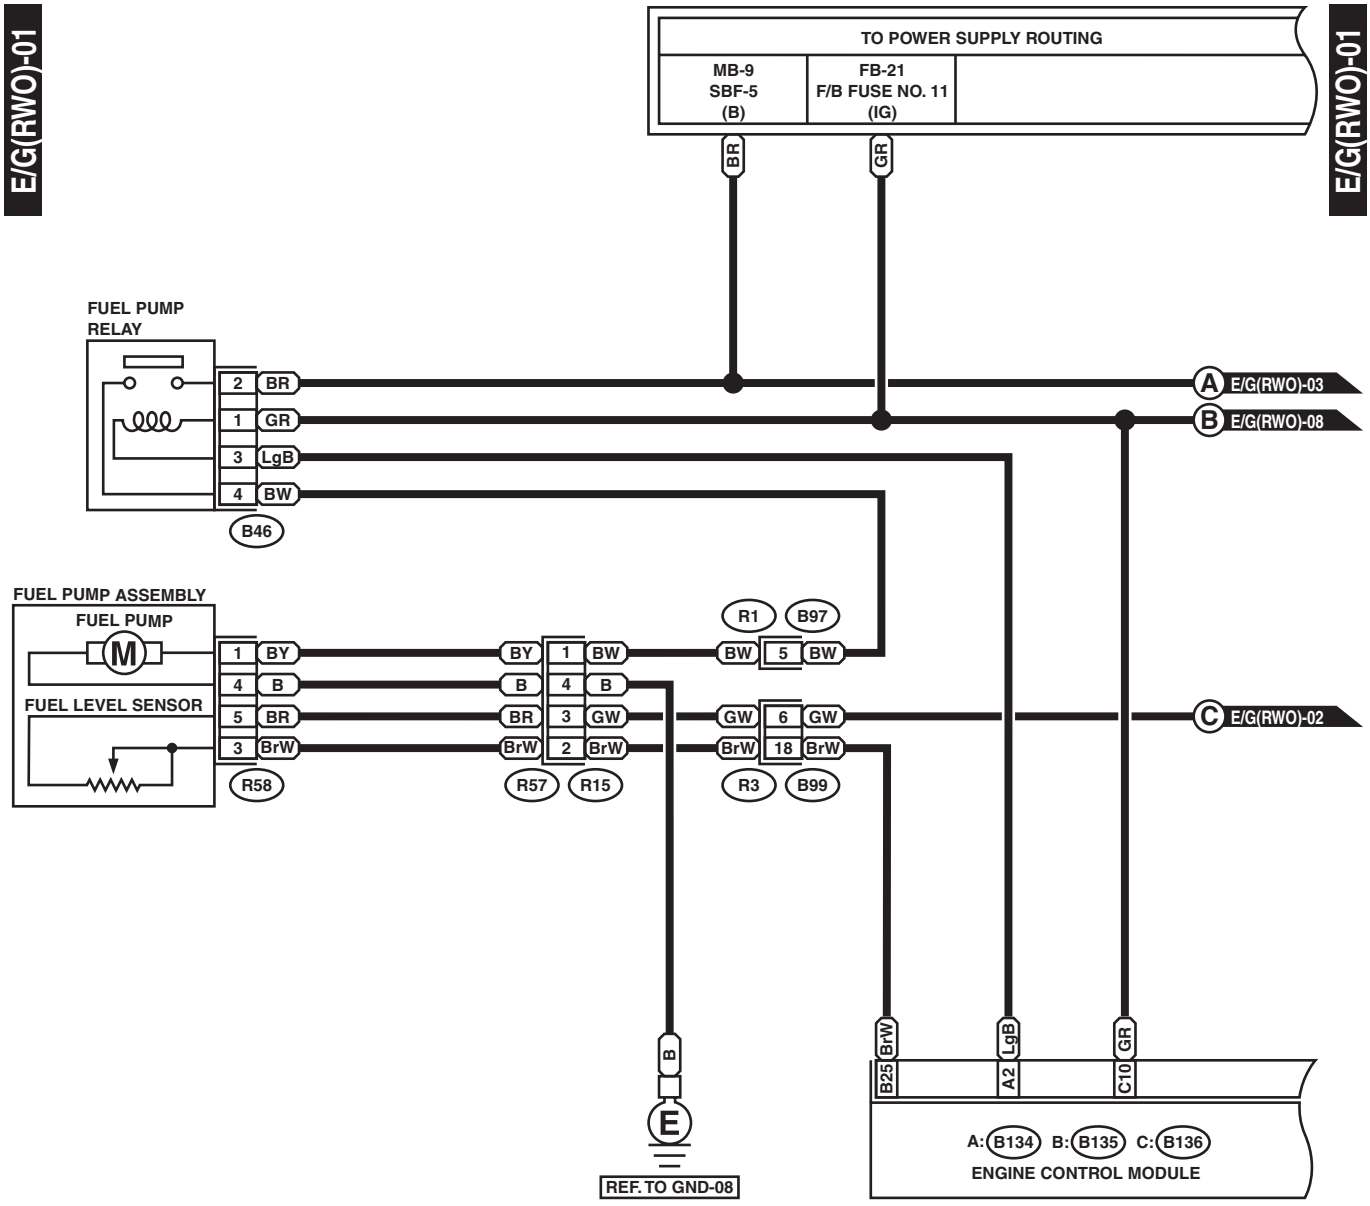
E/G(RWO)-01
E/G(RWO)-01
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
FB-21
F/B FUSE NO. 11
(IG)
BR
GR
FUEL PUMP
RELAY
2 BR
1 GR
3 LgB
4 BW
B46
A E/G(RWO)-03
B E/G(RWO)-08
FUEL PUMP ASSEMBLY
FUEL PUMP
FUEL LEVEL SENSOR
1 BY
4 B
5 BR
3 BrW
R58
BY 1 BW
B 4 B
BR 3 GW
BrW 2 BrW
R57
R15
R1
B97
BW 5 BW
GW 6 GW
BrW 18 BrW
R3
B99
C E/G(RWO)-02
B
E
REF. TO GND-08
BrW
LgB
GR
B25
A2
C10
A: B134 B: B135 C: B136
ENGINE CONTROL MODULE

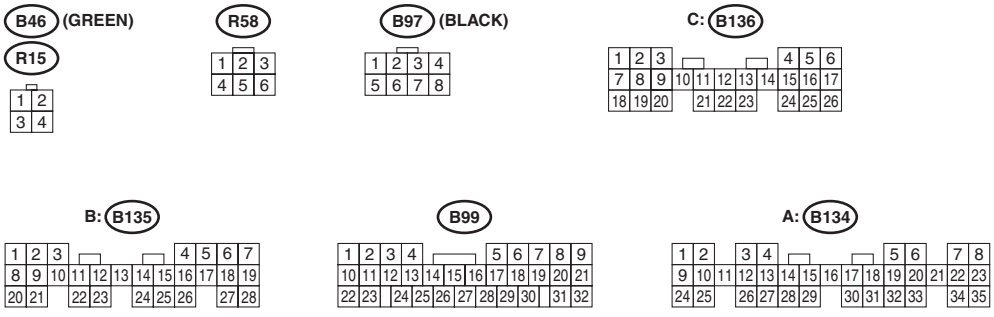
B46 (GREEN)
R15
R58
B97 (BLACK)
C: B136
B: B135
B99
A: B134

WI-02345

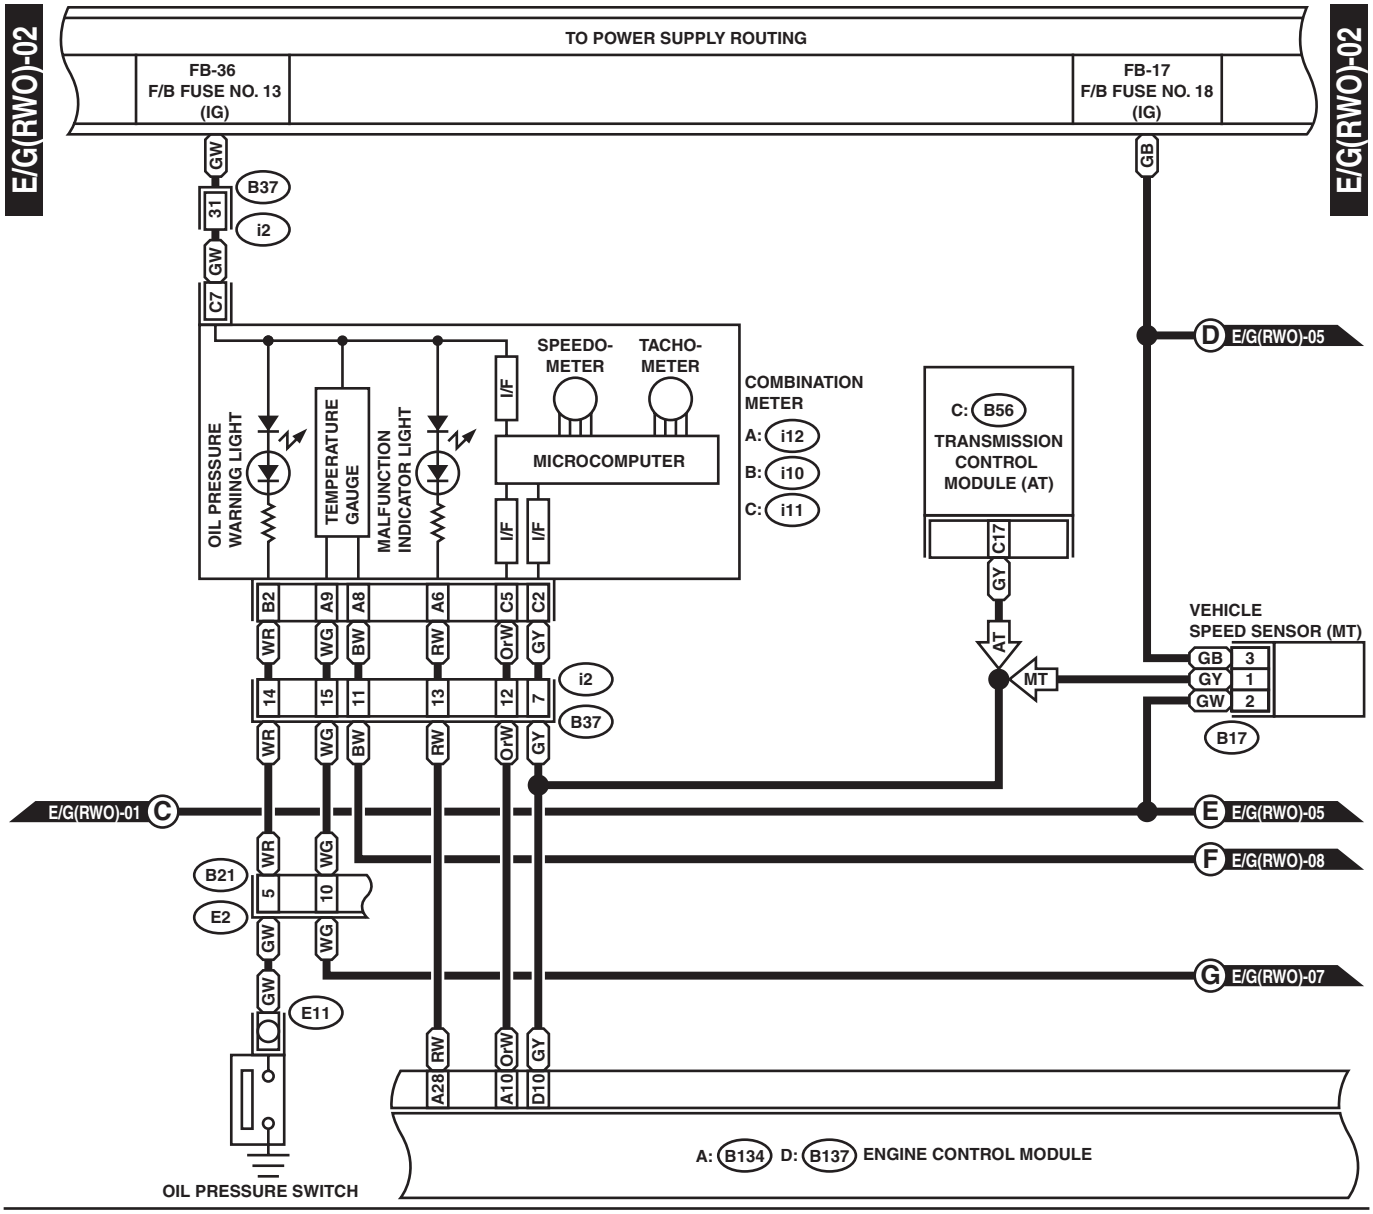
E/G(RWO)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO. 13
(IG)
FB-17
F/B FUSE NO. 18
(IG)
E/G(RWO)-02
GW
B37
31
i2
GW
C7
GB
D E/G(RWO)-05
SPEEDO-METER
TACHO-METER
COMBINATION METER
A: i12
B: i10
C: i11
I/F
MICROCOMPUTER
OIL PRESSURE WARNING LIGHT
TEMPERATURE GAUGE
MALFUNCTION INDICATOR LIGHT
C: B56
TRANSMISSION CONTROL MODULE (AT)
C17
GY
AT
MT
VEHICLE SPEED SENSOR (MT)
GB 3
GY 1
GW 2
B17
B2 A9 A8 A6 C5 C2
WR WG BW RW OrW GY
14 15 11 13 12 7
i2
B37
E/G(RWO)-01 C
E E/G(RWO)-05
F E/G(RWO)-08
G E/G(RWO)-07
B21
5 10
E2
E11
A28 A10 D10
A: B134 D: B137 ENGINE CONTROL MODULE
OIL PRESSURE SWITCH

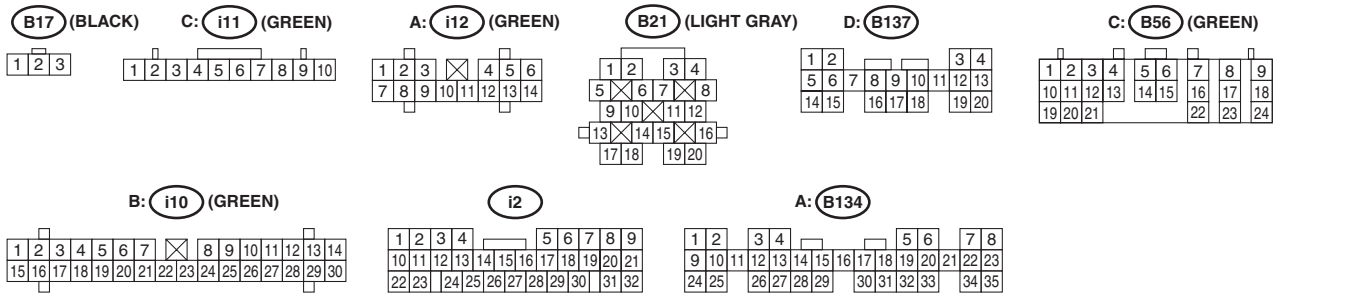
B17 (BLACK)
C: i11 (GREEN)
A: i12 (GREEN)
B21 (LIGHT GRAY)
D: B137
C: B56 (GREEN)
B: i10 (GREEN)
i2
A: B134

WI-02346

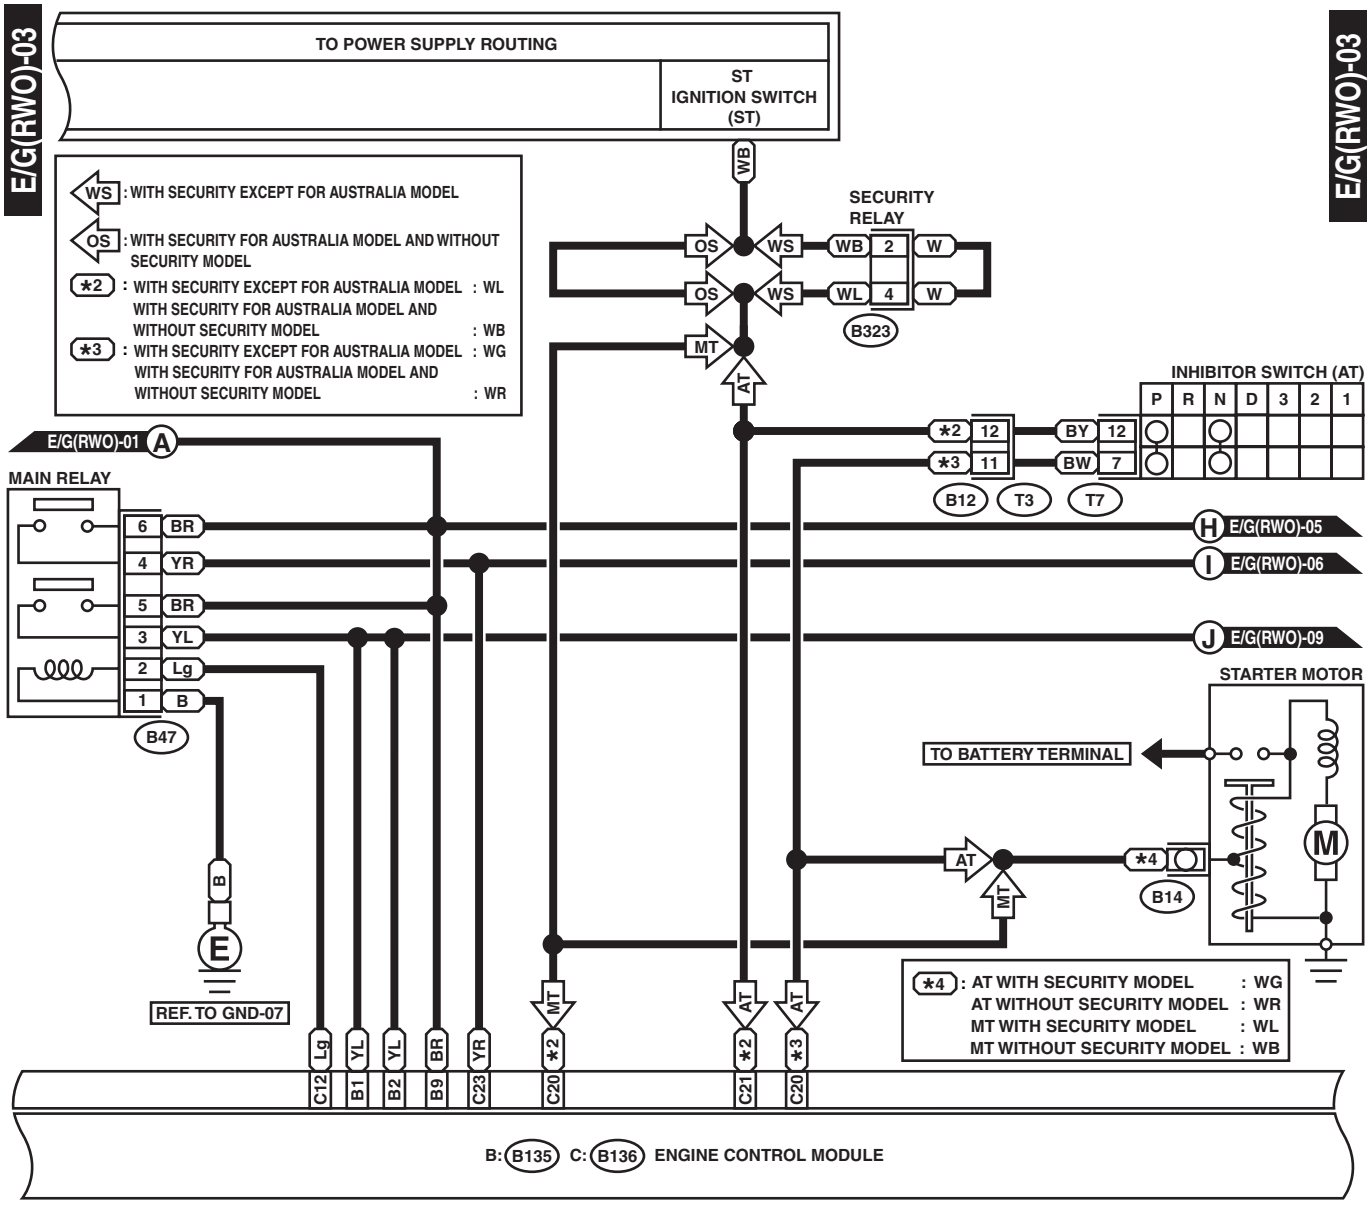
E/G(RWO)-03
E/G(RWO)-03
TO POWER SUPPLY ROUTING
ST
IGNITION SWITCH
(ST)
WS : WITH SECURITY EXCEPT FOR AUSTRALIA MODEL
OS : WITH SECURITY FOR AUSTRALIA MODEL AND WITHOUT SECURITY MODEL
*2 : WITH SECURITY EXCEPT FOR AUSTRALIA MODEL : WL
WITH SECURITY FOR AUSTRALIA MODEL AND WITHOUT SECURITY MODEL : WB
*3 : WITH SECURITY EXCEPT FOR AUSTRALIA MODEL : WG
WITH SECURITY FOR AUSTRALIA MODEL AND WITHOUT SECURITY MODEL : WR
SECURITY RELAY
B323
INHIBITOR SWITCH (AT)
P R N D 3 2 1
E/G(RWO)-01 A
MAIN RELAY
B47
B12
T3
T7
H E/G(RWO)-05
I E/G(RWO)-06
J E/G(RWO)-09
STARTER MOTOR
TO BATTERY TERMINAL
B14
REF. TO GND-07
*4 : AT WITH SECURITY MODEL : WG
AT WITHOUT SECURITY MODEL : WR
MT WITH SECURITY MODEL : WL
MT WITHOUT SECURITY MODEL : WB
B: B135 C: B136 ENGINE CONTROL MODULE
B323 (BLUE)
B47 (BROWN)
B12
T7
C: B136
B: B135

WI-02347

E/G(RWO)-04

E/G(RWO)-04

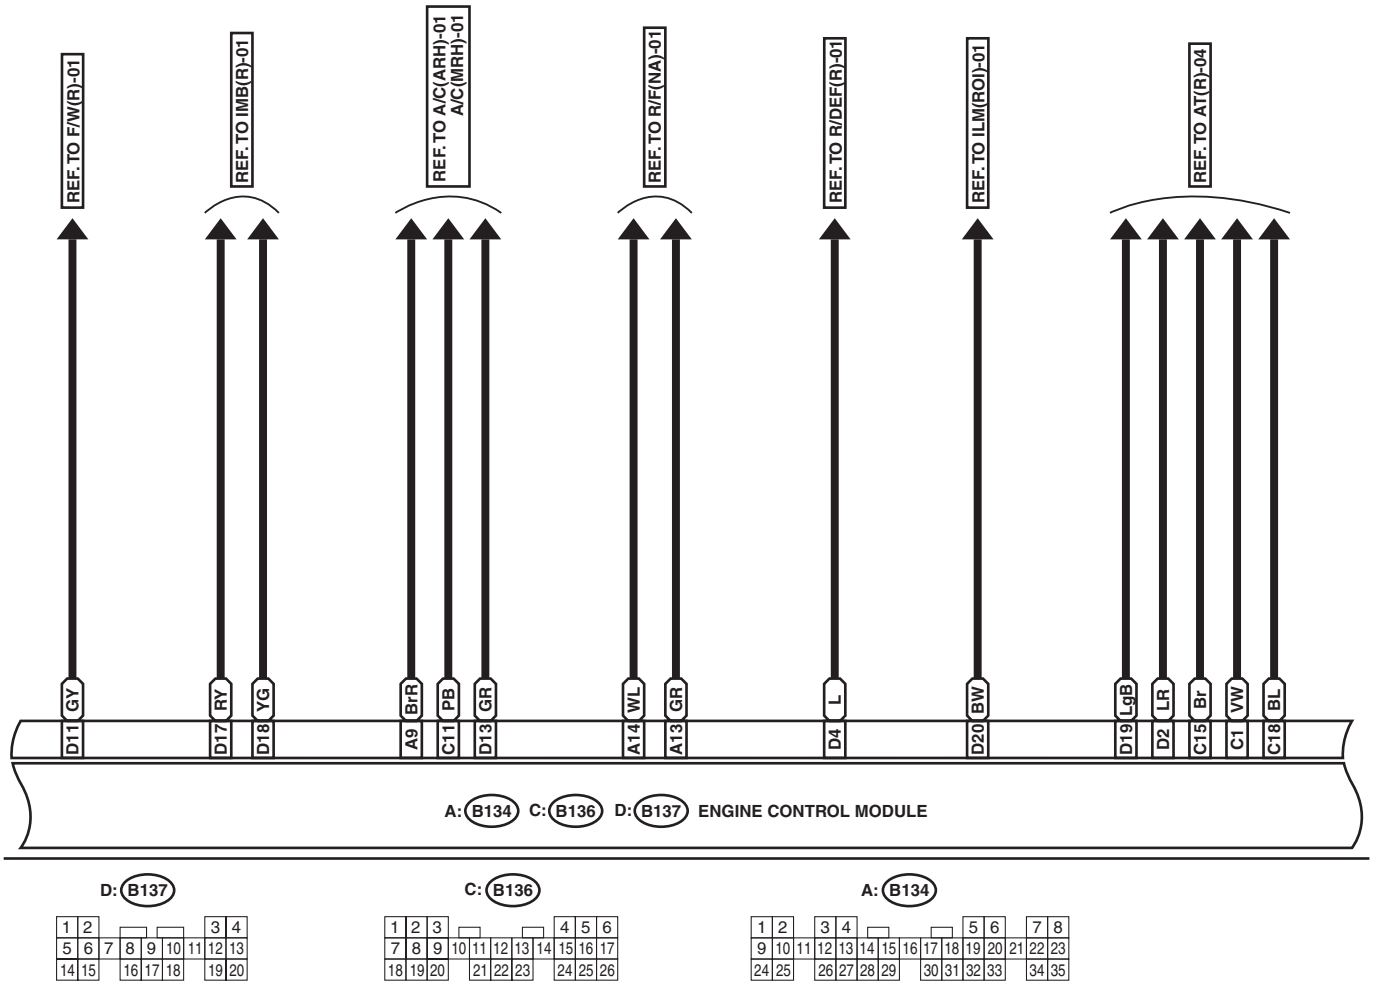

WI-02348

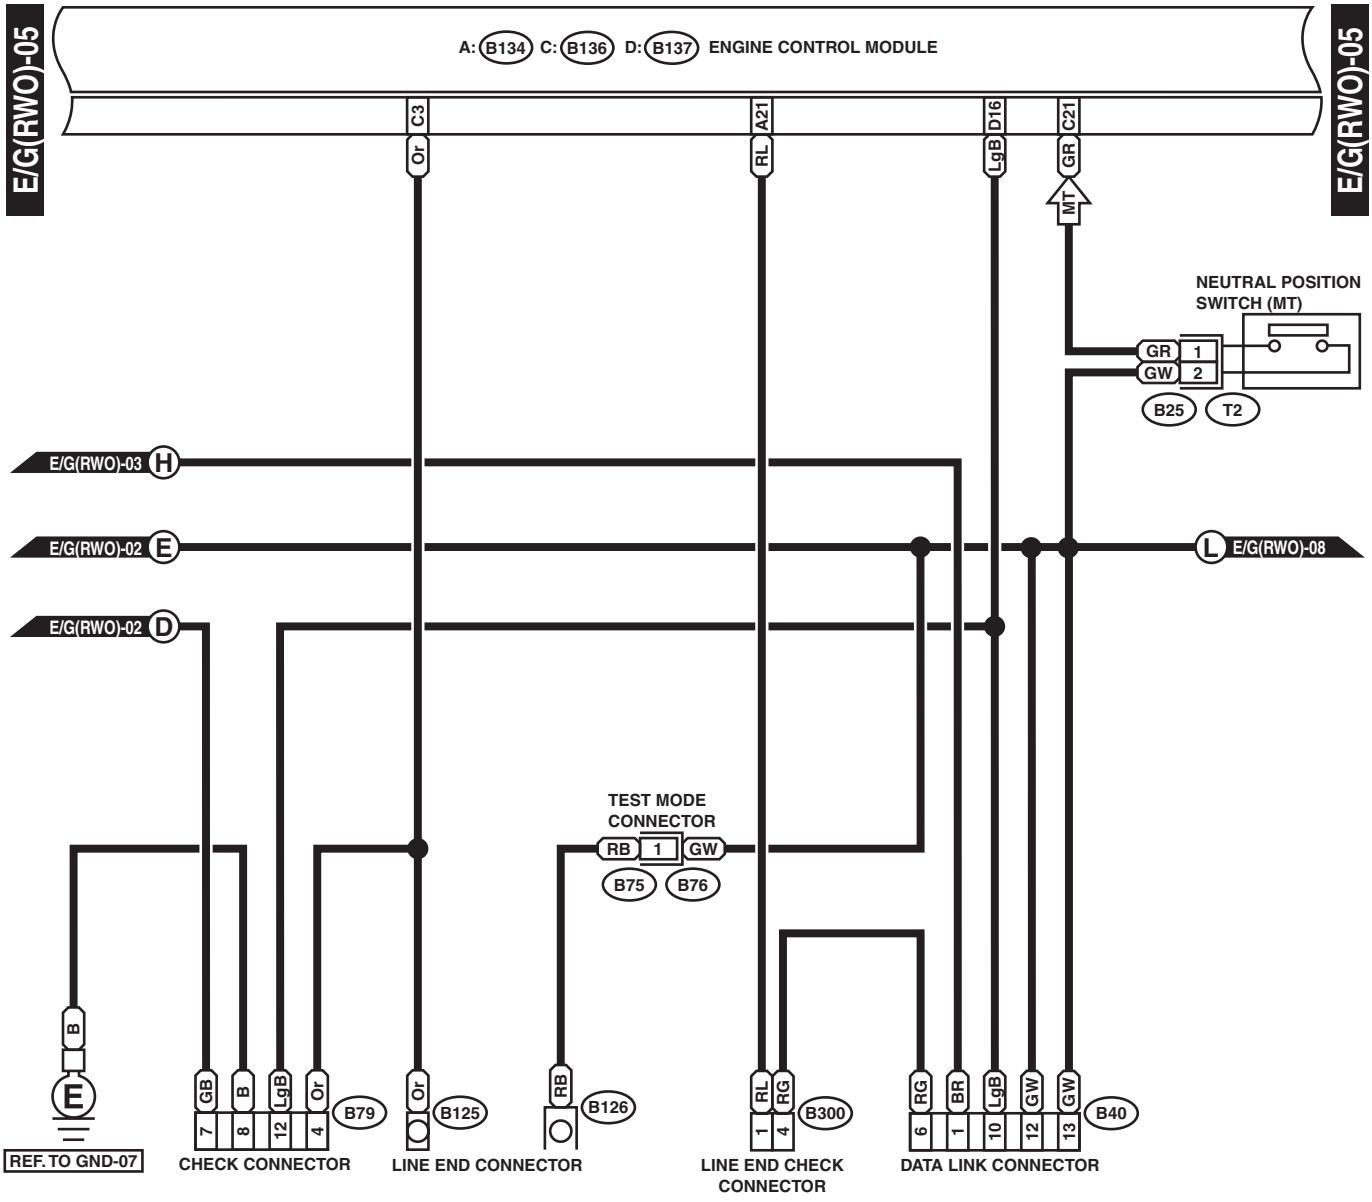
E/G(RWO)-05
A: B134 C: B136 D: B137 ENGINE CONTROL MODULE
E/G(RWO)-05
C3
A21
D16
C21
Or
RL
LgB
GR
MT
NEUTRAL POSITION SWITCH (MT)
GR 1
GW 2
B25
T2
E/G(RWO)-03 H
E/G(RWO)-02 E
E/G(RWO)-02 D
L E/G(RWO)-08
TEST MODE CONNECTOR
RB 1 GW
B75
B76
B
E
REF. TO GND-07
GB
B
LgB
Or
B79
CHECK CONNECTOR
Or
B125
LINE END CONNECTOR
RB
B126
RL
RG
B300
LINE END CHECK CONNECTOR
RG
BR
LgB
GW
GW
B40
DATA LINK CONNECTOR

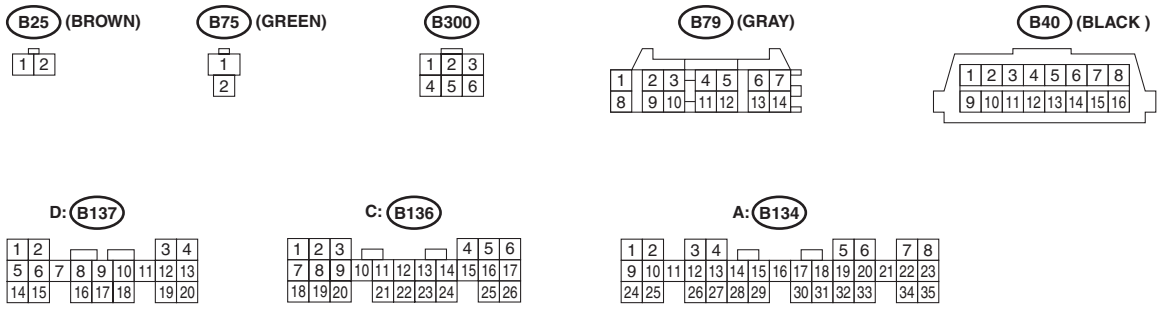
B25 (BROWN)
B75 (GREEN)
B300
B79 (GRAY)
B40 (BLACK)
D: B137
C: B136
A: B134

WI-02349

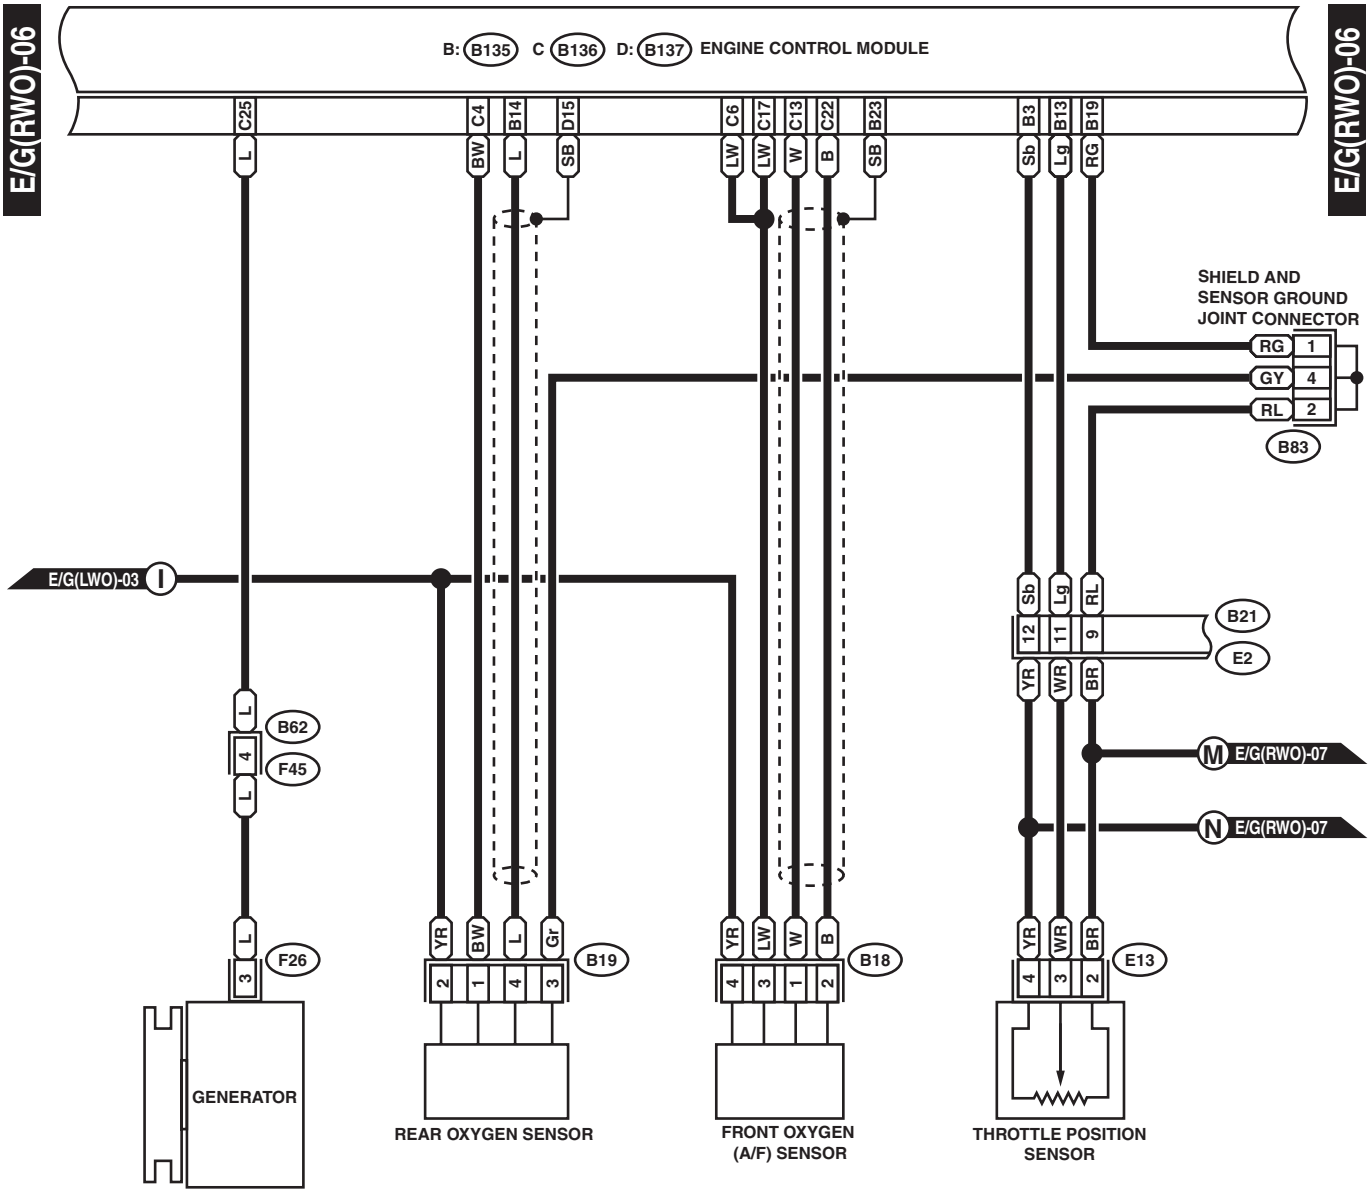
E/G(RWO)-06
B: B135 C B136 D: B137 ENGINE CONTROL MODULE
E/G(RWO)-06
C25
C4
B14
D15
C6
C17
C13
C22
B23
B3
B13
B19
L
BW
L
SB
LW
LW
W
B
SB
Sb
Lg
RG
SHIELD AND
SENSOR GROUND
JOINT CONNECTOR
RG 1
GY 4
RL 2
B83
E/G(LWO)-03 I
Sb
Lg
RL
12
11
9
B21
E2
YR
WR
BR
L
B62
4
F45
L
M E/G(RWO)-07
N E/G(RWO)-07
L
3
F26
YR
BW
L
Gr
2
1
4
3
B19
YR
LW
W
B
4
3
1
2
B18
YR
WR
BR
4
3
2
E13
GENERATOR
REAR OXYGEN SENSOR
FRONT OXYGEN
(A/F) SENSOR
THROTTLE POSITION
SENSOR

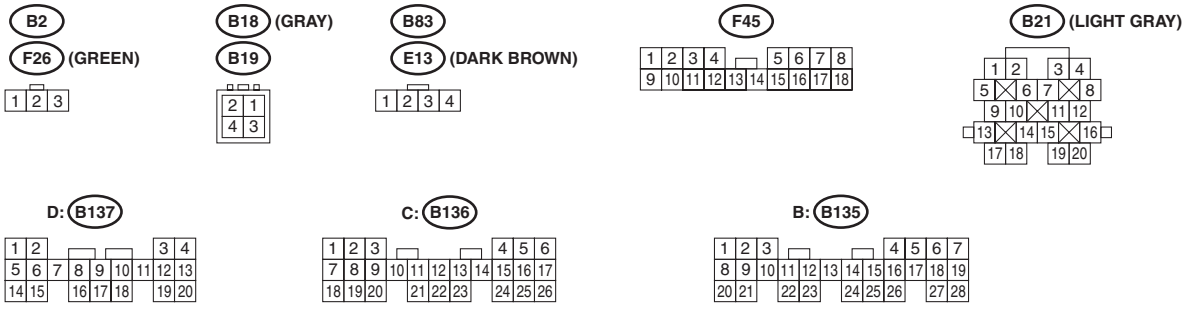
B2
F26 (GREEN)
1 2 3
B18 (GRAY)
B19
2 1
4 3
B83
E13 (DARK BROWN)
1 2 3 4
F45
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16 17 18
B21 (LIGHT GRAY)
1 2 3 4
5 6 7 8
9 10 11 12
13 14 15 16
17 18 19 20
D: B137
1 2 3 4
5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20
C: B136
1 2 3 4 5 6
7 8 9 10 11 12 13 14 15 16 17
18 19 20 21 22 23 24 25 26
B: B135
1 2 3 4 5 6 7
8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28

WI-02350

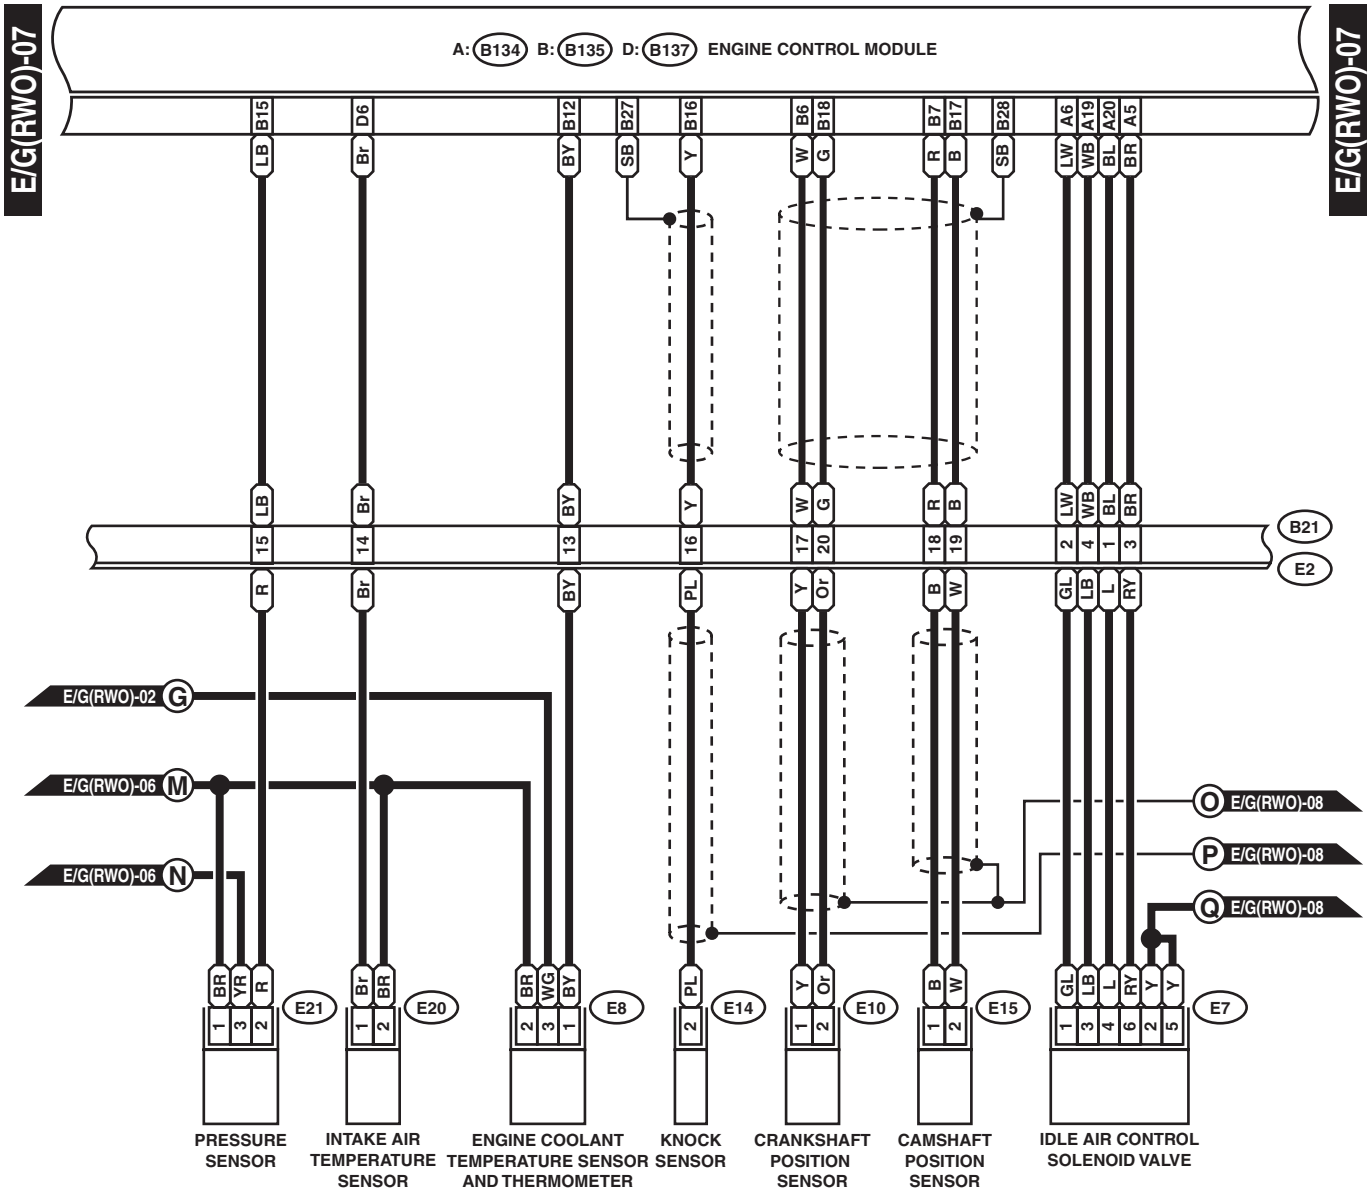
E/G(RWO)-07
A: B134 B: B135 D: B137 ENGINE CONTROL MODULE
E/G(RWO)-07
B21
E2
E/G(RWO)-02 G
E/G(RWO)-06 M
E/G(RWO)-06 N
O E/G(RWO)-08
P E/G(RWO)-08
Q E/G(RWO)-08
E21
E20
E8
E14
E10
E15
E7
PRESSURE SENSOR
INTAKE AIR TEMPERATURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR AND THERMOMETER
KNOCK SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
IDLE AIR CONTROL SOLENOID VALVE

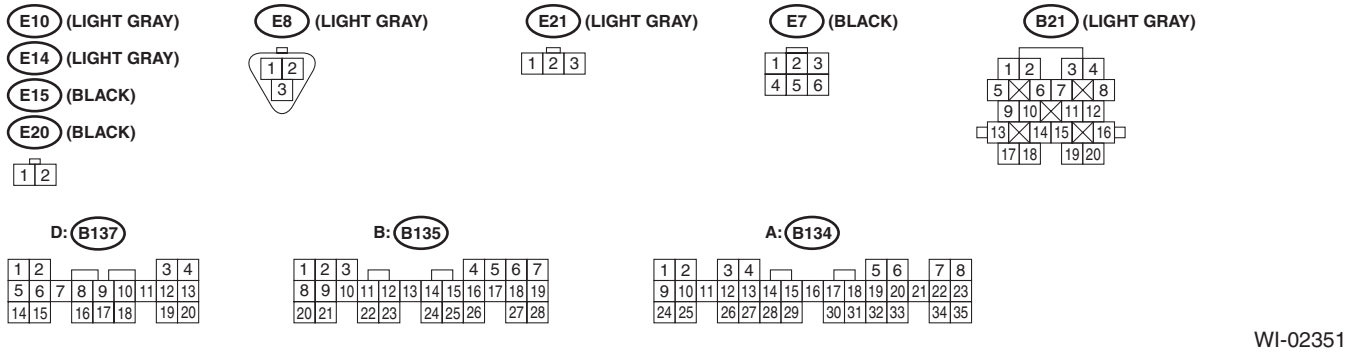
E10 (LIGHT GRAY)
E14 (LIGHT GRAY)
E15 (BLACK)
E20 (BLACK)
E8 (LIGHT GRAY)
E21 (LIGHT GRAY)
E7 (BLACK)
B21 (LIGHT GRAY)
D: B137
B: B135
A: B134

WI-02351

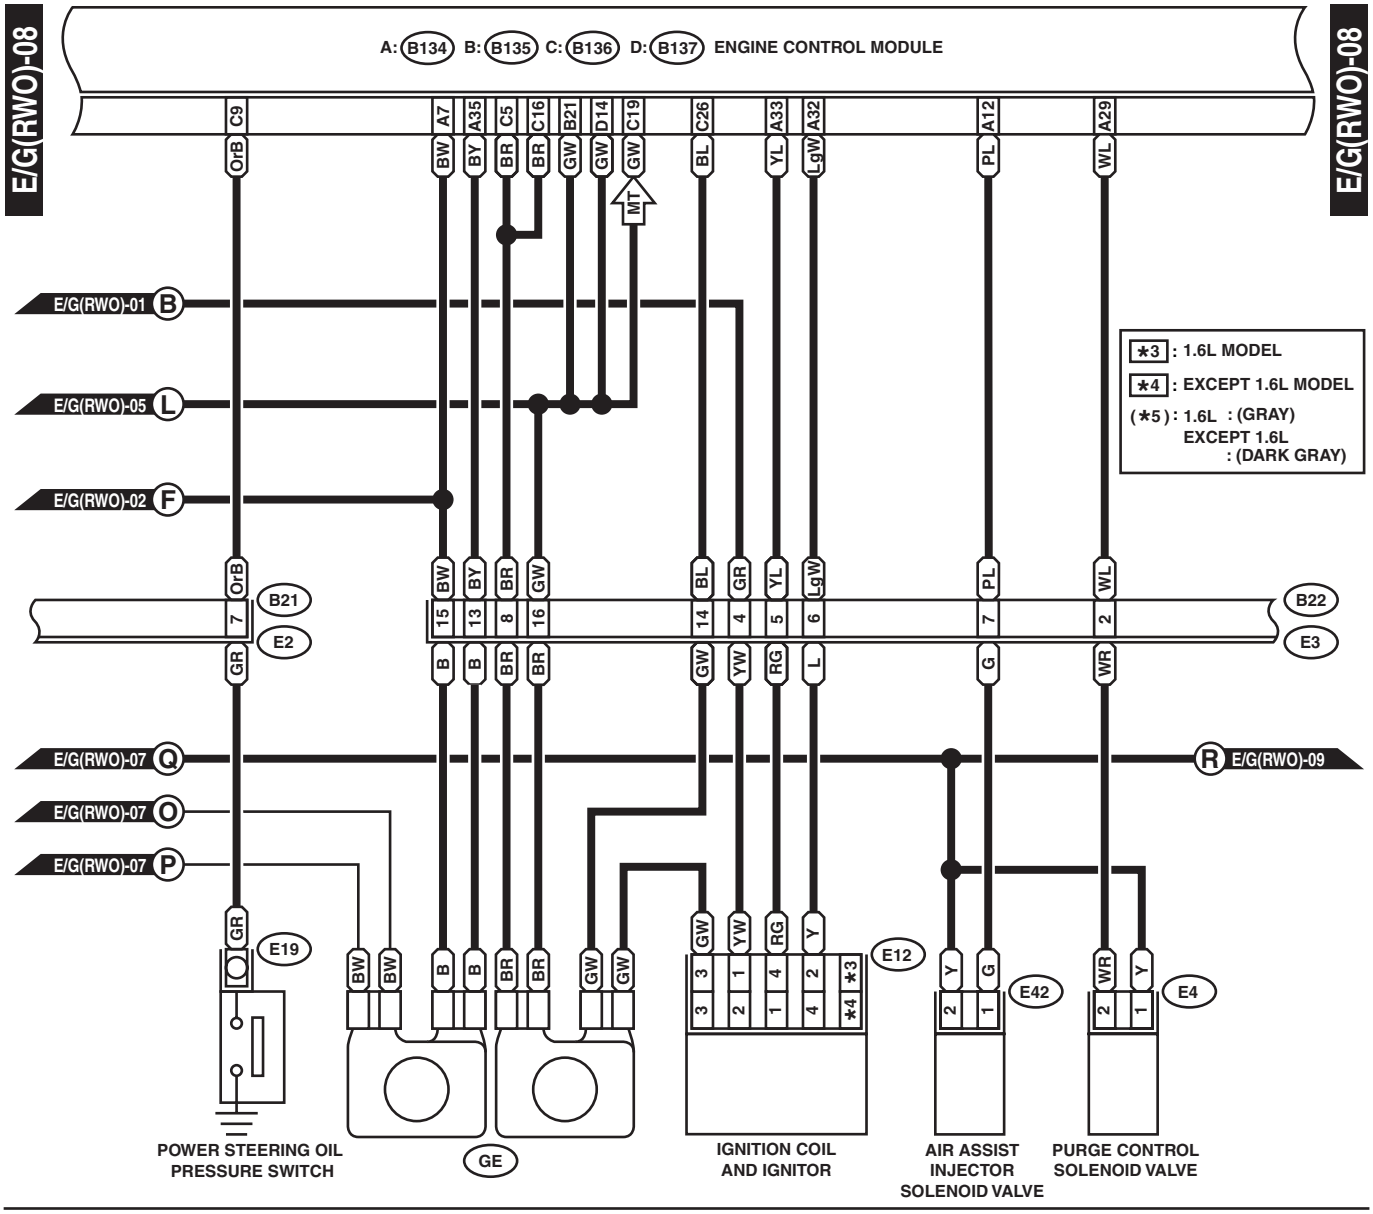
E/G(RWO)-08
A: B134 B: B135 C: B136 D: B137 ENGINE CONTROL MODULE
E/G(RWO)-08
E/G(RWO)-01 B
E/G(RWO)-05 L
E/G(RWO)-02 F
✱3 : 1.6L MODEL
✱4 : EXCEPT 1.6L MODEL
(✱5) : 1.6L : (GRAY)
EXCEPT 1.6L
: (DARK GRAY)
B21
E2
B22
E3
E/G(RWO)-07 Q
R E/G(RWO)-09
E/G(RWO)-07 O
E/G(RWO)-07 P
E19
E12
E42
E4
POWER STEERING OIL PRESSURE SWITCH
GE
IGNITION COIL AND IGNITOR
AIR ASSIST INJECTOR SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE

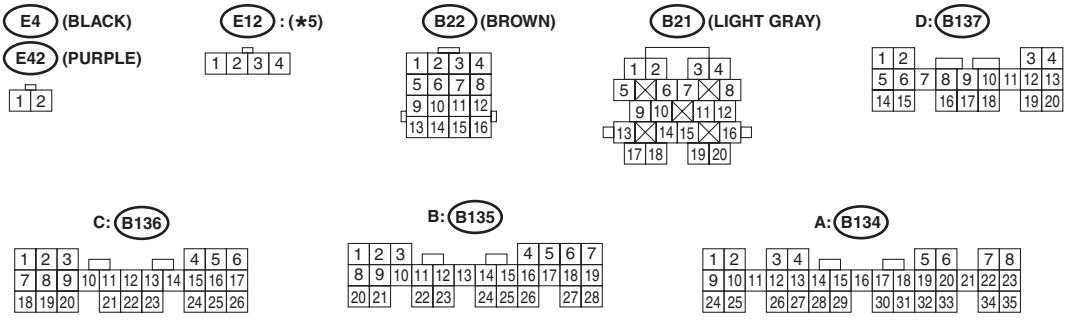
E4 (BLACK)
E42 (PURPLE)
E12 : (✱5)
B22 (BROWN)
B21 (LIGHT GRAY)
D: B137
C: B136
B: B135
A: B134

WI-02352

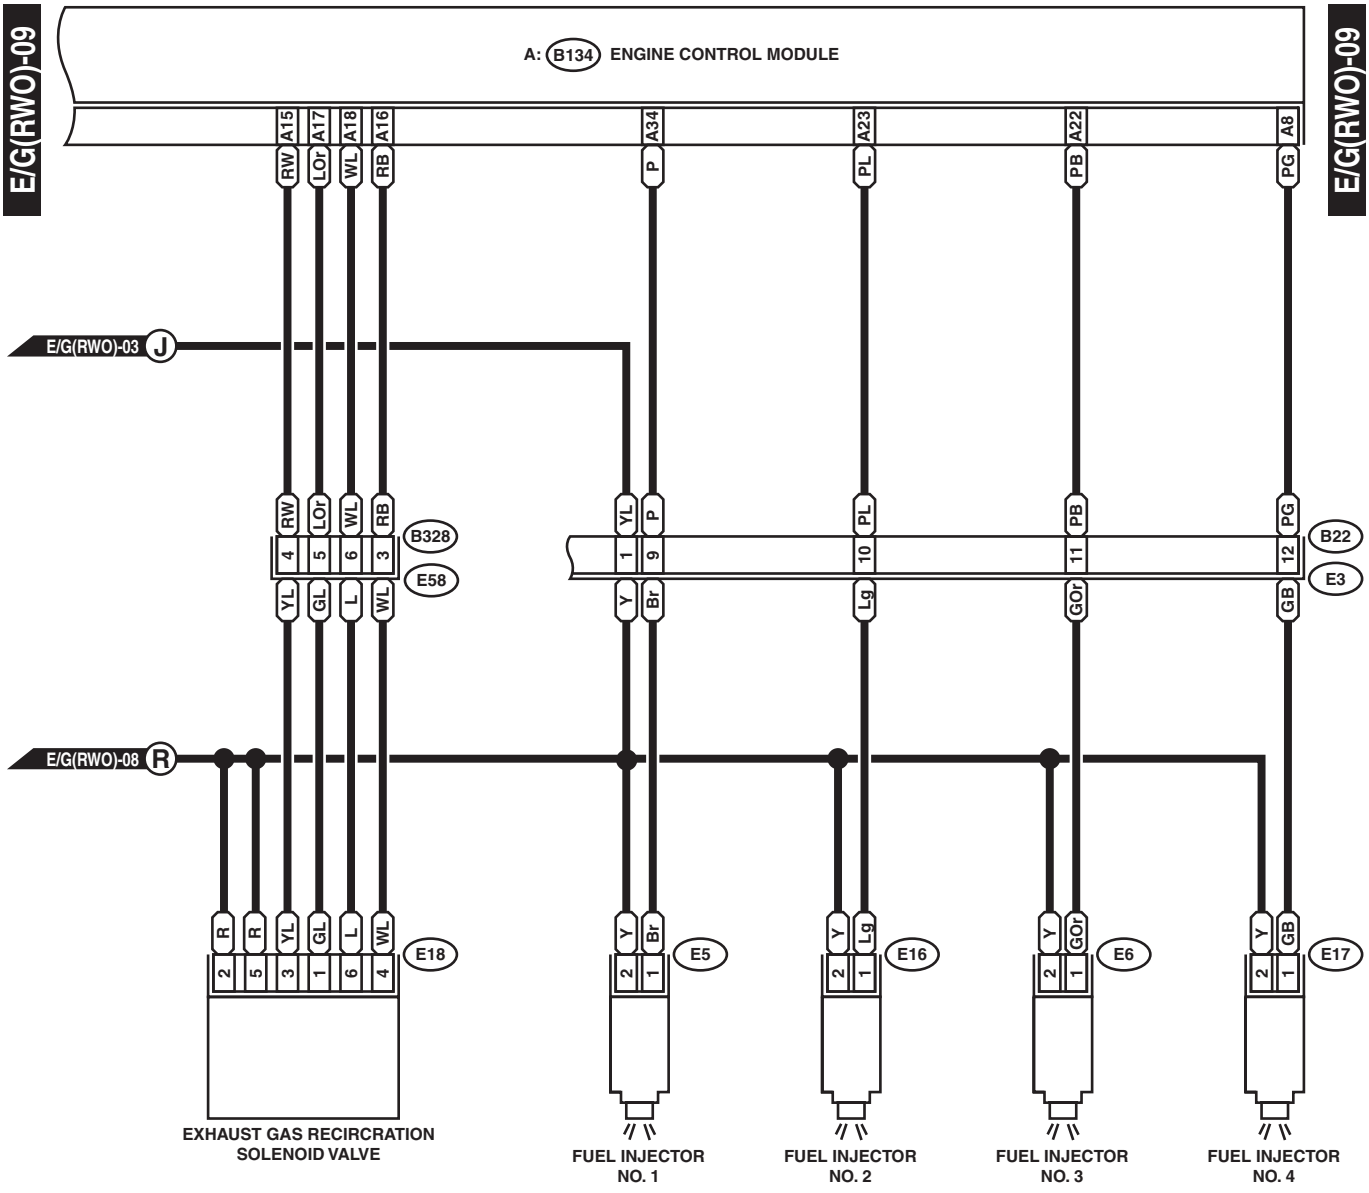

E5 (LIGHT GRAY)
E6 (LIGHT GRAY)
E16 (LIGHT GRAY)
E17 (LIGHT GRAY)

B328 (BLACK)
E18 (DARK GRAY)

B22 (BROWN)



A: B134



WI-02353

6. RHD DOHC TURBO MODEL

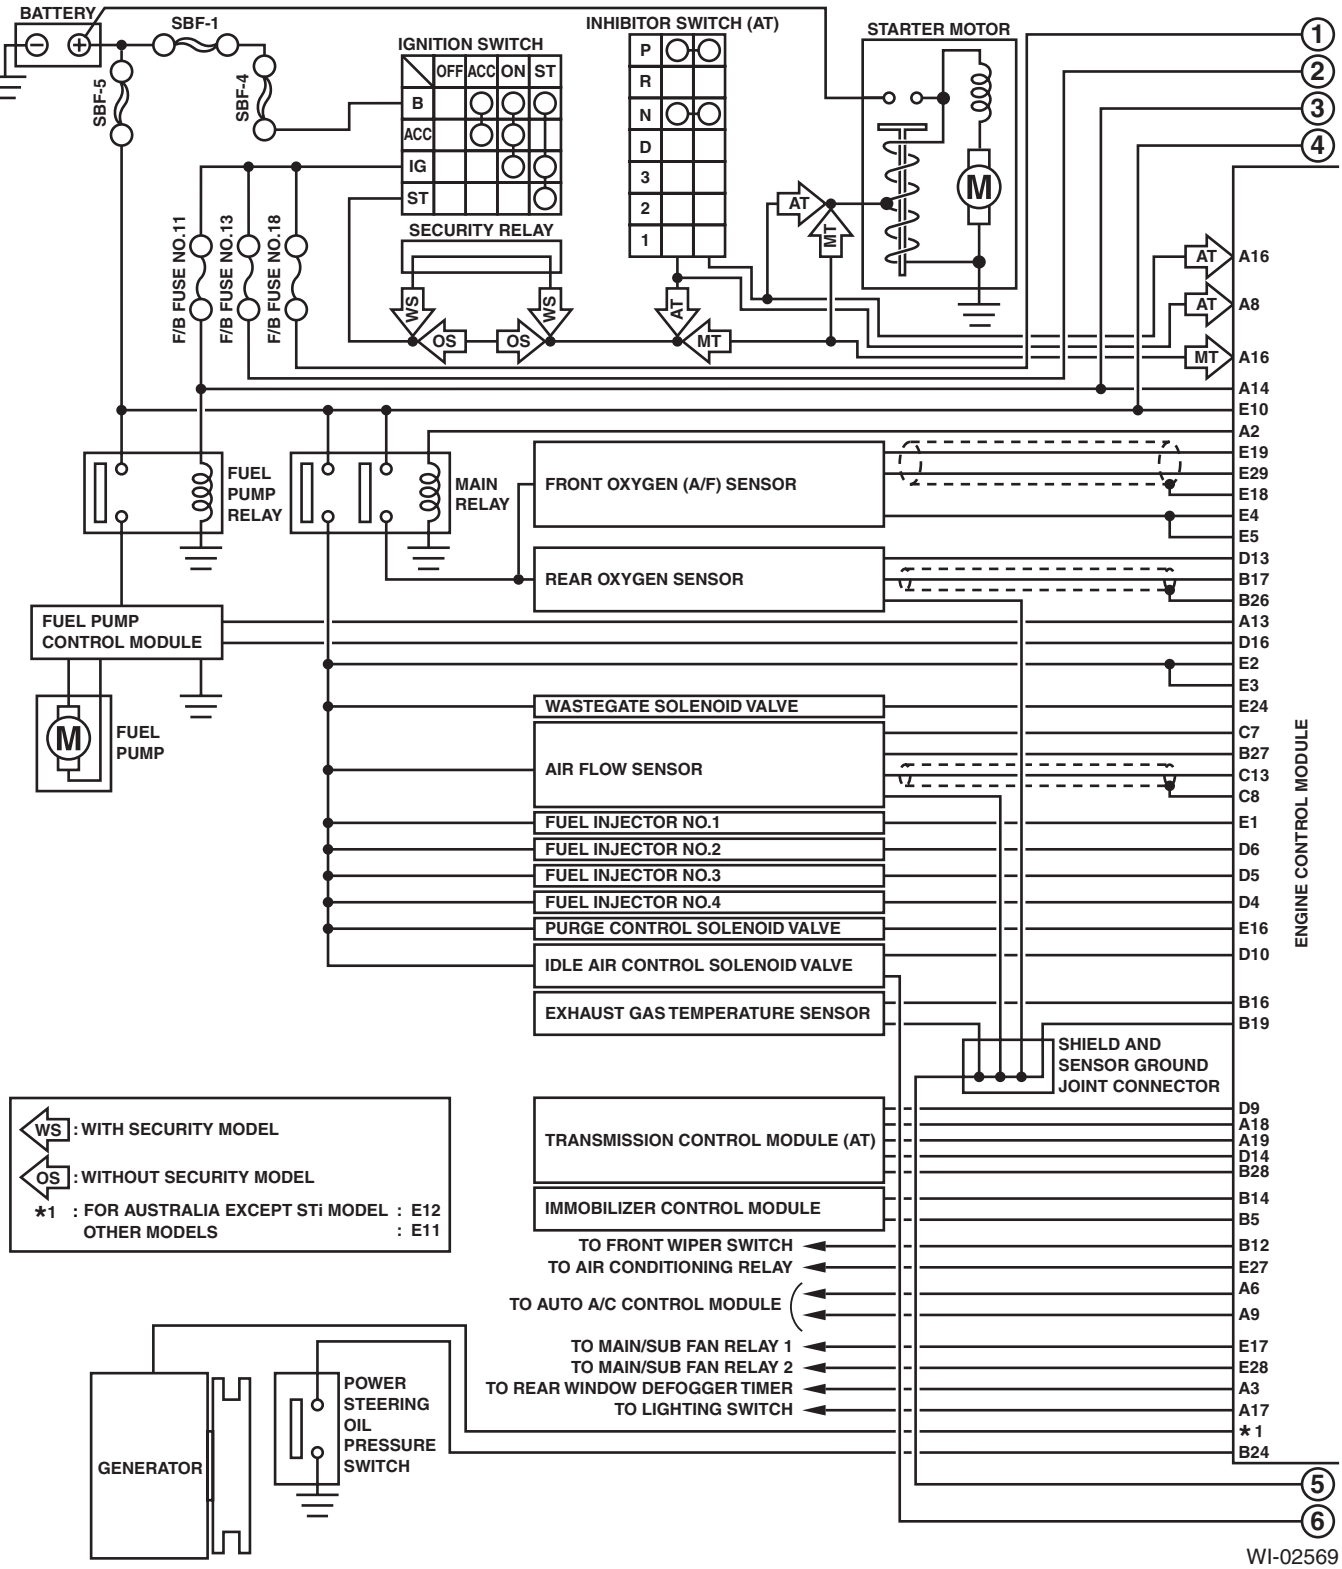

WI-02569

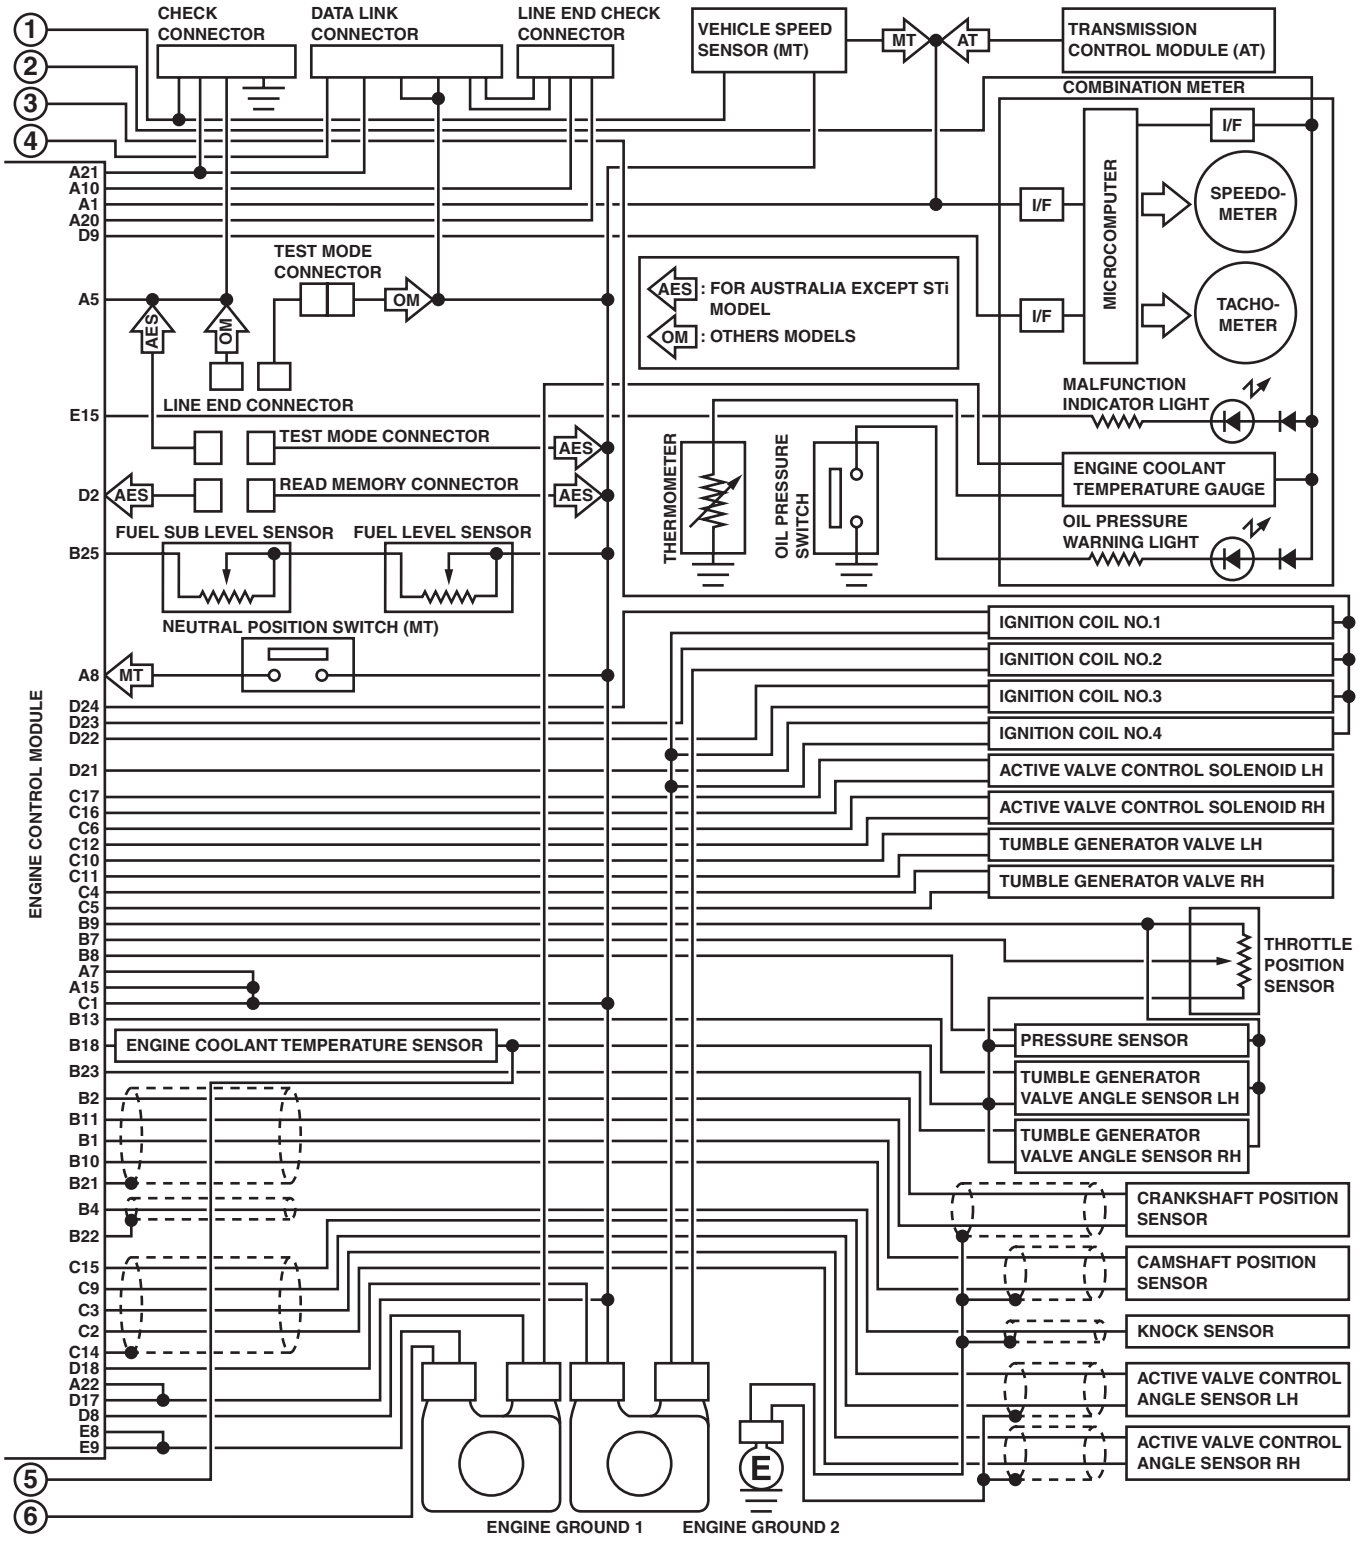
CHECK CONNECTOR
DATA LINK CONNECTOR
LINE END CHECK CONNECTOR
VEHICLE SPEED SENSOR (MT)
MT
AT
TRANSMISSION CONTROL MODULE (AT)
COMBINATION METER
I/F
MICROCOMPUTER
SPEEDO-METER
TACHO-METER
MALFUNCTION INDICATOR LIGHT
ENGINE COOLANT TEMPERATURE GAUGE
OIL PRESSURE WARNING LIGHT
TEST MODE CONNECTOR
AES : FOR AUSTRALIA EXCEPT STi MODEL
OM : OTHERS MODELS
LINE END CONNECTOR
READ MEMORY CONNECTOR
FUEL SUB LEVEL SENSOR
FUEL LEVEL SENSOR
NEUTRAL POSITION SWITCH (MT)
THERMOMETER
OIL PRESSURE SWITCH
ENGINE CONTROL MODULE
IGNITION COIL NO.1
IGNITION COIL NO.2
IGNITION COIL NO.3
IGNITION COIL NO.4
ACTIVE VALVE CONTROL SOLENOID LH
ACTIVE VALVE CONTROL SOLENOID RH
TUMBLE GENERATOR VALVE LH
TUMBLE GENERATOR VALVE RH
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
PRESSURE SENSOR
TUMBLE GENERATOR VALVE ANGLE SENSOR LH
TUMBLE GENERATOR VALVE ANGLE SENSOR RH
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
ACTIVE VALVE CONTROL ANGLE SENSOR LH
ACTIVE VALVE CONTROL ANGLE SENSOR RH
ENGINE GROUND 1
ENGINE GROUND 2
WI-02570

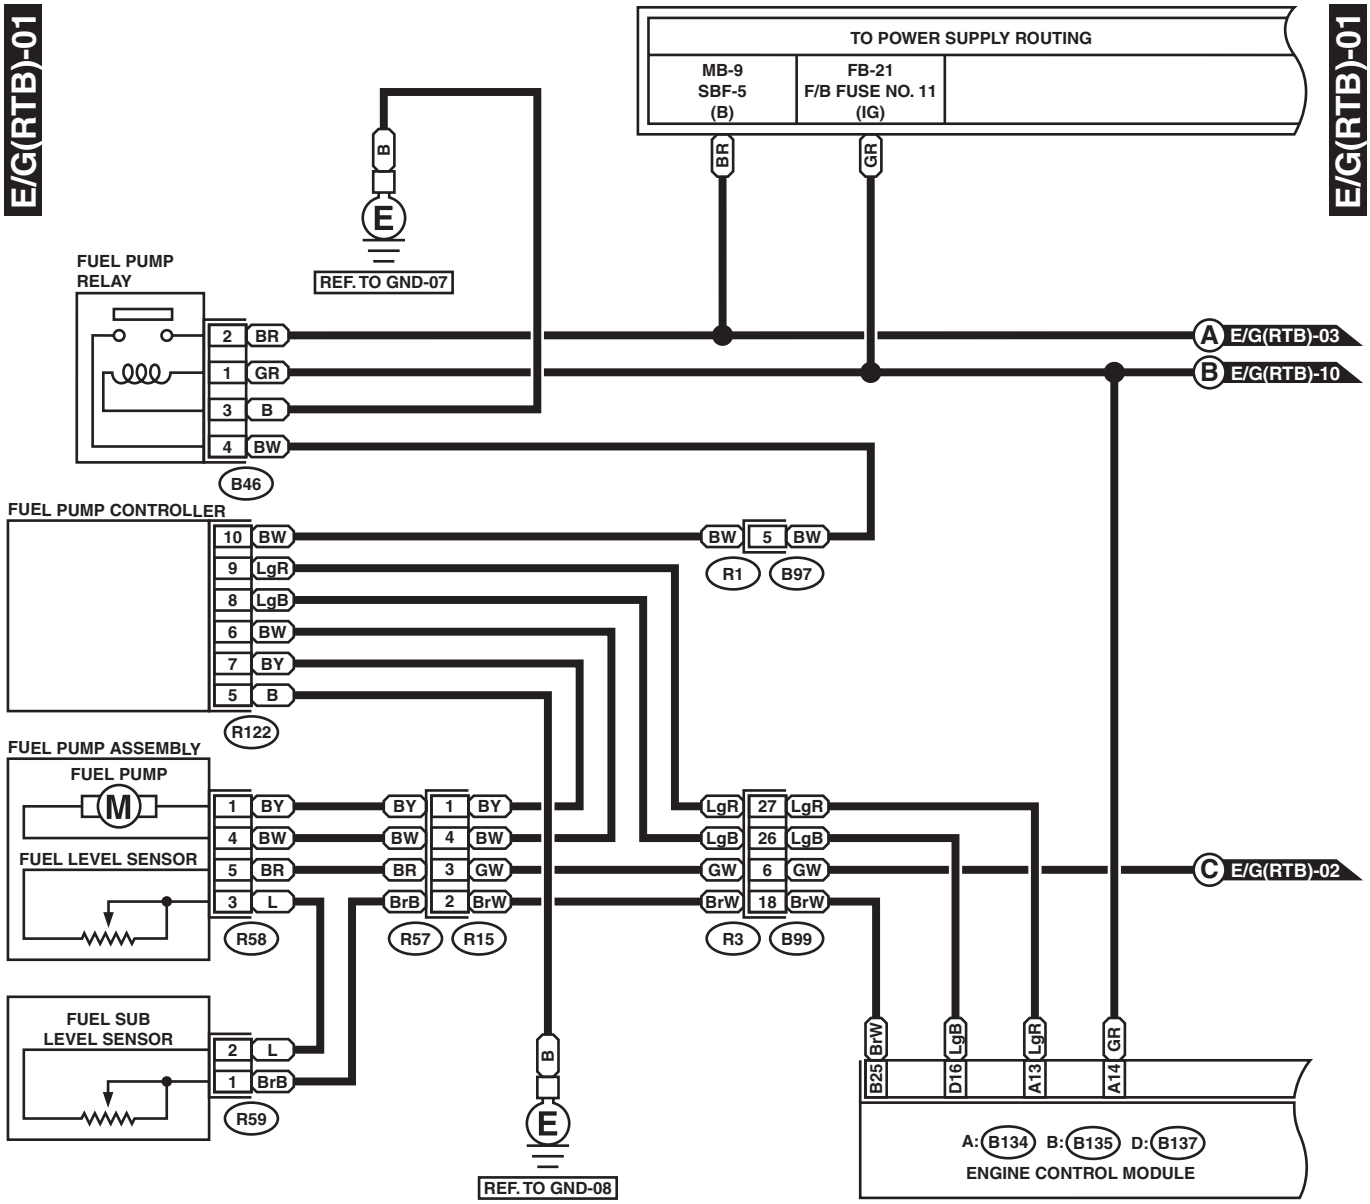
E/G(RTB)-01
E/G(RTB)-01
TO POWER SUPPLY ROUTING
MB-9
SBF-5
(B)
FB-21
F/B FUSE NO. 11
(IG)
BR
GR
B
E
REF. TO GND-07
FUEL PUMP
RELAY
2 BR
1 GR
3 B
4 BW
B46
A E/G(RTB)-03
B E/G(RTB)-10
FUEL PUMP CONTROLLER
10 BW
9 LgR
8 LgB
6 BW
7 BY
5 B
R122
BW 5 BW
R1 B97
FUEL PUMP ASSEMBLY
FUEL PUMP
FUEL LEVEL SENSOR
1 BY
4 BW
5 BR
3 L
R58
BY 1 BY
BW 4 BW
BR 3 GW
BrB 2 BrW
R57 R15
LgR 27 LgR
LgB 26 LgB
GW 6 GW
BrW 18 BrW
R3 B99
C E/G(RTB)-02
FUEL SUB
LEVEL SENSOR
2 L
1 BrB
R59
B
E
REF. TO GND-08
BrW LgB LgR GR
B25 D16 A13 A14
A: B134 B: B135 D: B137
ENGINE CONTROL MODULE
R59
B46 (GREEN)
R15
R58
B97 (BLACK)
R122
A: B134
D: B137
B: B135
B99

WI-02354

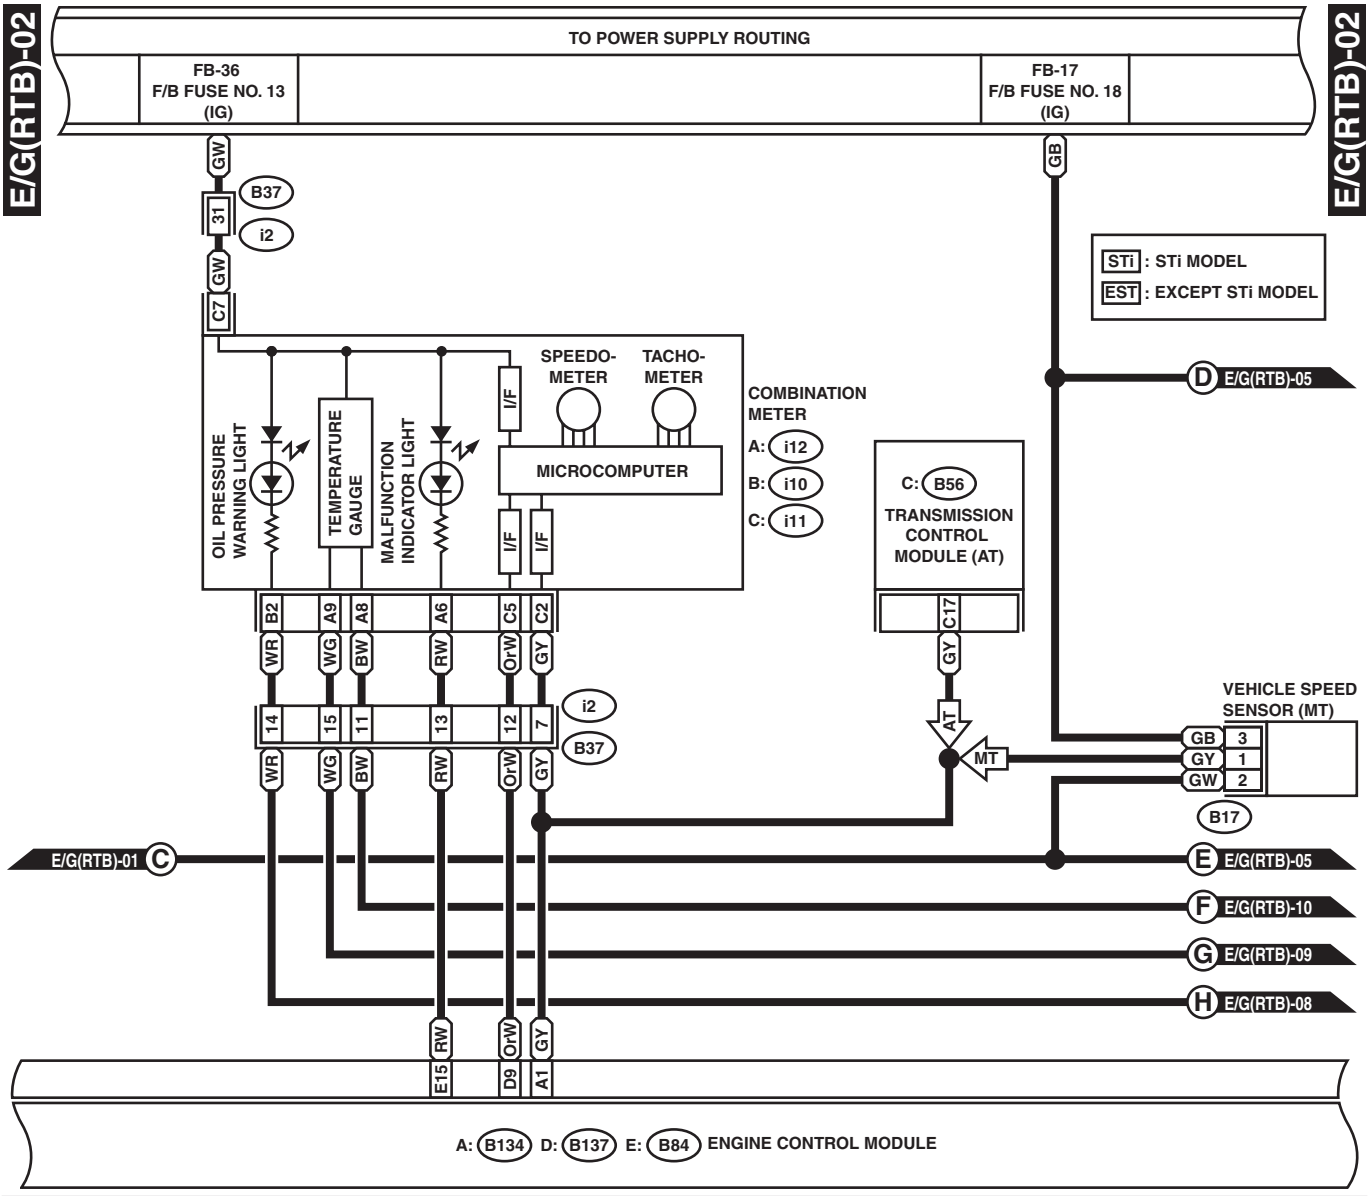
E/G(RTB)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO. 13
(IG)
FB-17
F/B FUSE NO. 18
(IG)
E/G(RTB)-02
GW
B37
31
i2
GW
C7
GB
STi : STi MODEL
EST : EXCEPT STi MODEL
D E/G(RTB)-05
SPEEDO-METER
TACHO-METER
COMBINATION METER
A: i12
B: i10
C: i11
I/F
MICROCOMPUTER
OIL PRESSURE WARNING LIGHT
TEMPERATURE GAUGE
MALFUNCTION INDICATOR LIGHT
C: B56
TRANSMISSION CONTROL MODULE (AT)
C17
GY
B2
A9
A8
A6
C5
C2
WR
WG
BW
RW
OrW
GY
14
15
11
13
12
7
i2
B37
AT
MT
VEHICLE SPEED SENSOR (MT)
GB 3
GY 1
GW 2
B17
E/G(RTB)-01 C
E E/G(RTB)-05
F E/G(RTB)-10
G E/G(RTB)-09
H E/G(RTB)-08
E15
D9
A1
A: B134 D: B137 E: B84 ENGINE CONTROL MODULE

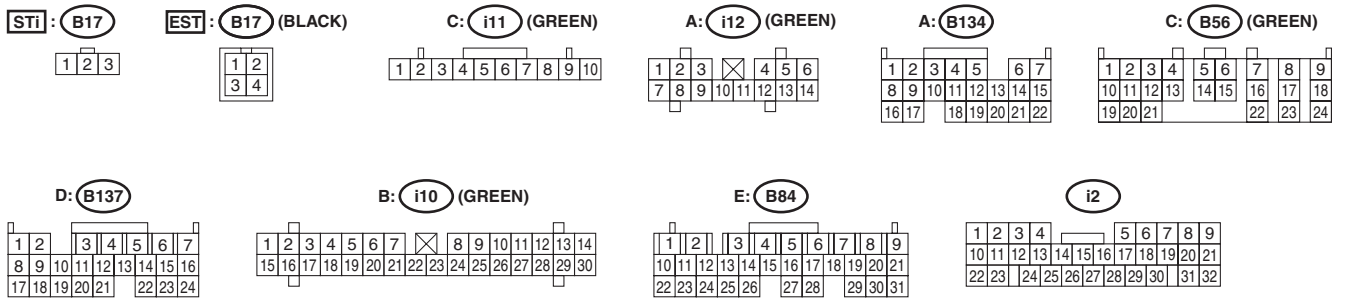
STi : B17
EST : B17 (BLACK)
C: i11 (GREEN)
A: i12 (GREEN)
A: B134
C: B56 (GREEN)
D: B137
B: i10 (GREEN)
E: B84
i2

WI-02355

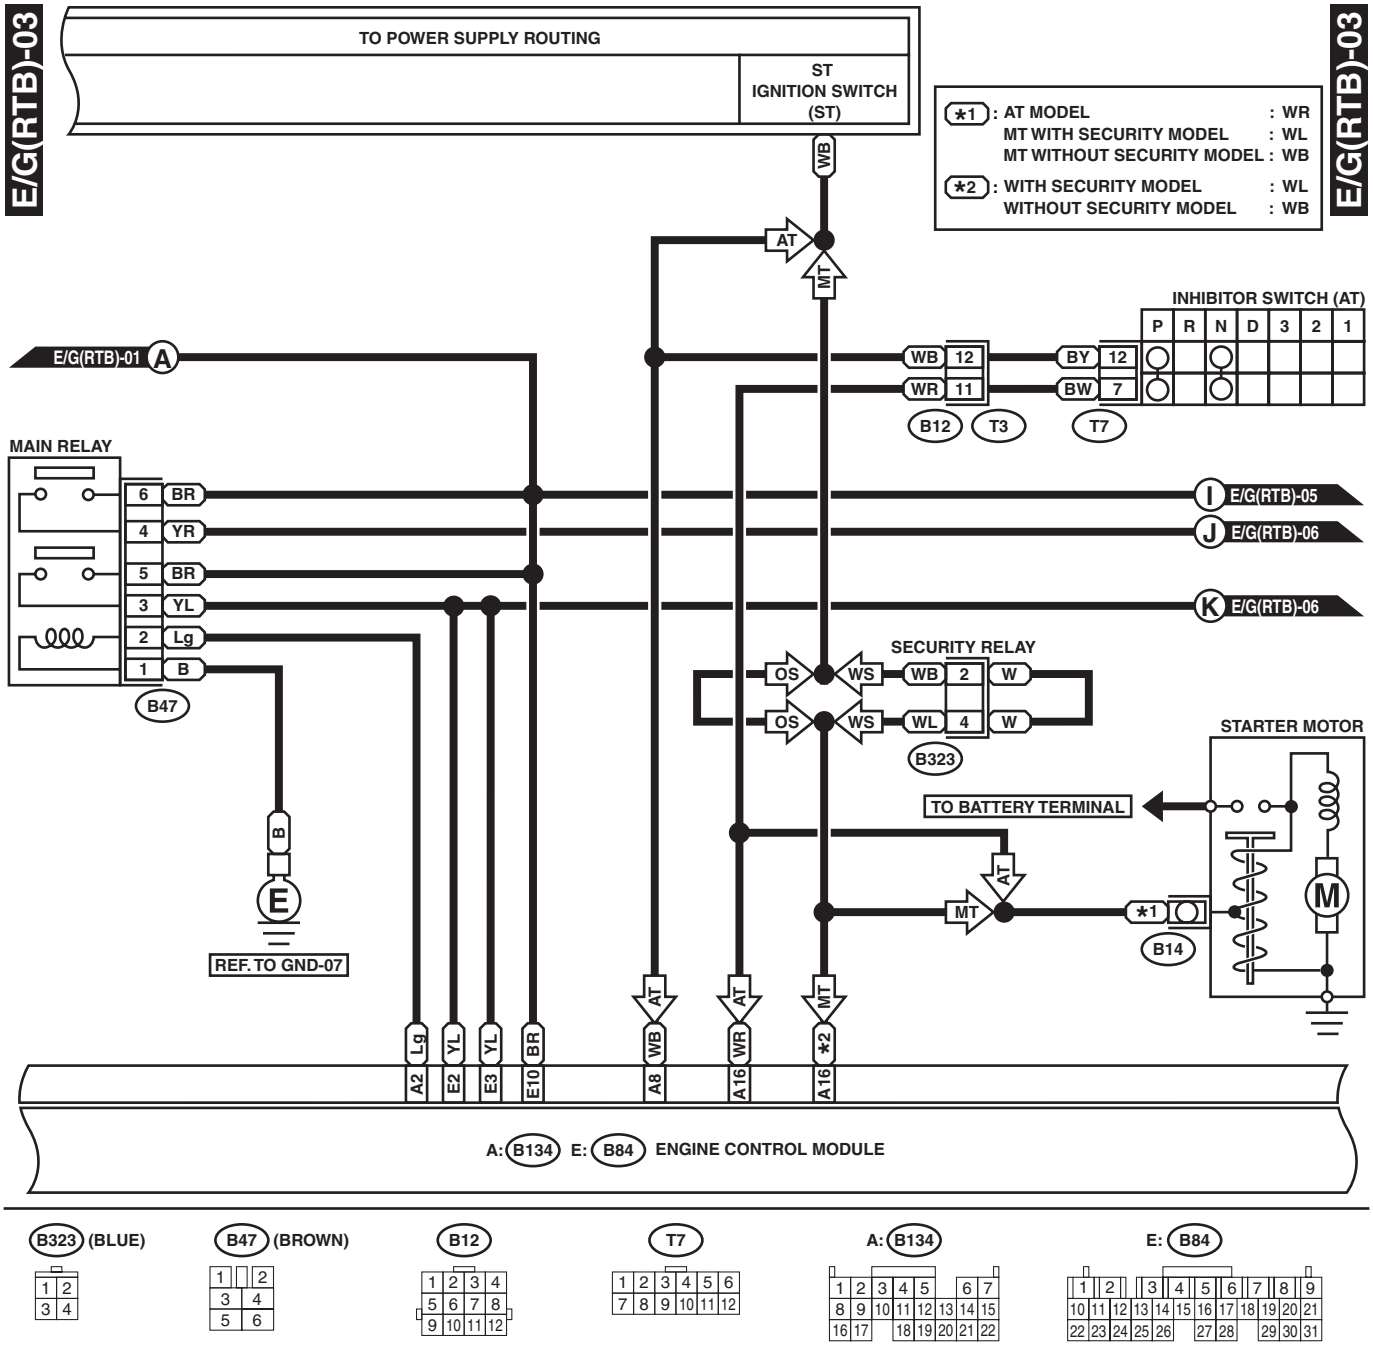

B323 (BLUE)

B47 (BROWN)

B12

T7

A: B134

E: B84

WI-02356

E/G(RTB)-04

E/G(RTB)-04

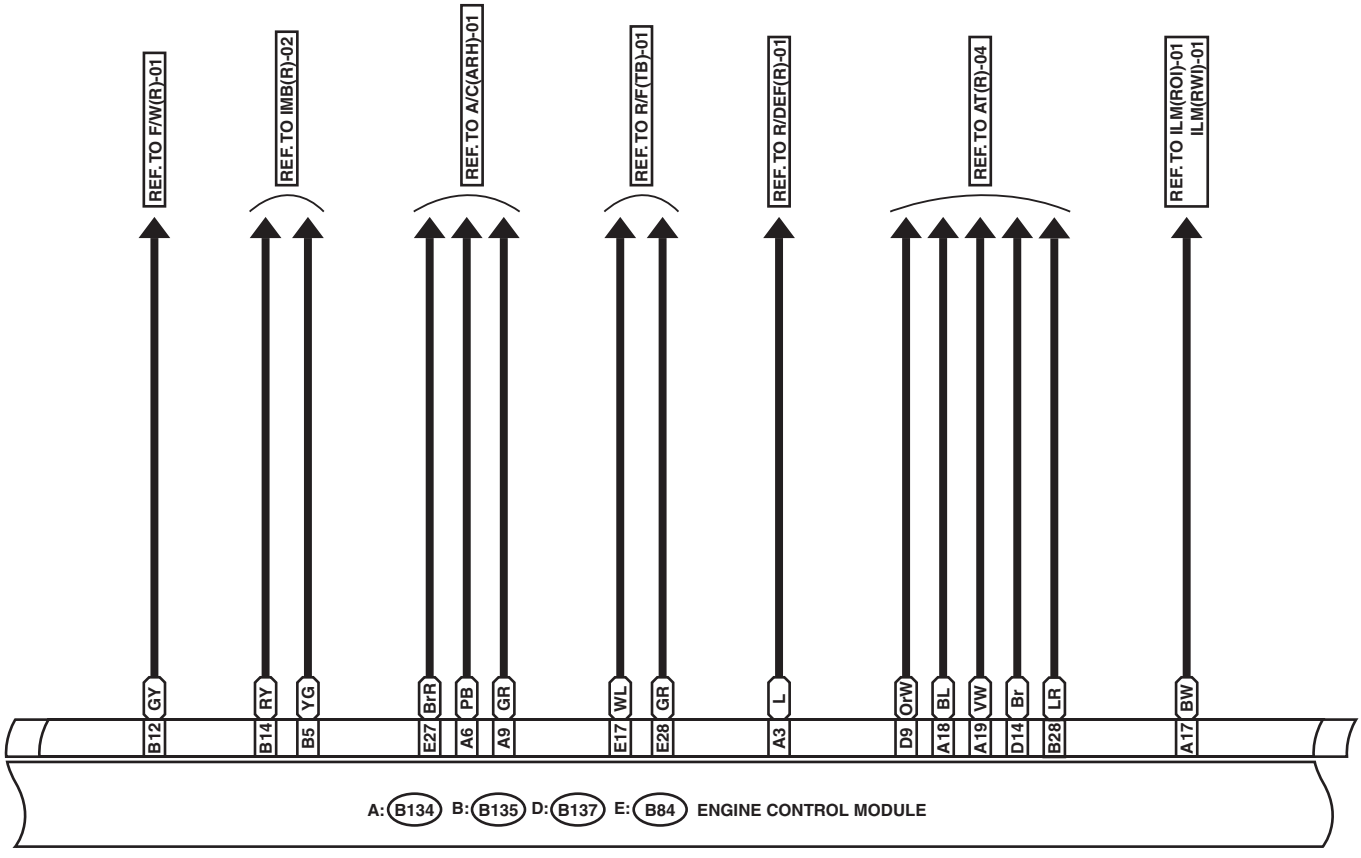

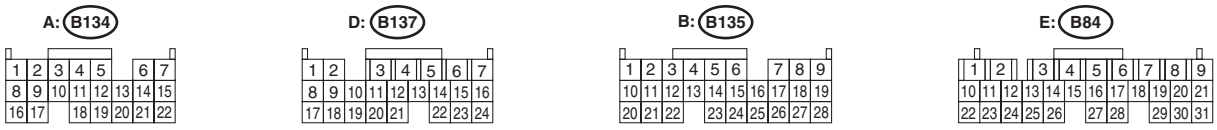

WI-02357

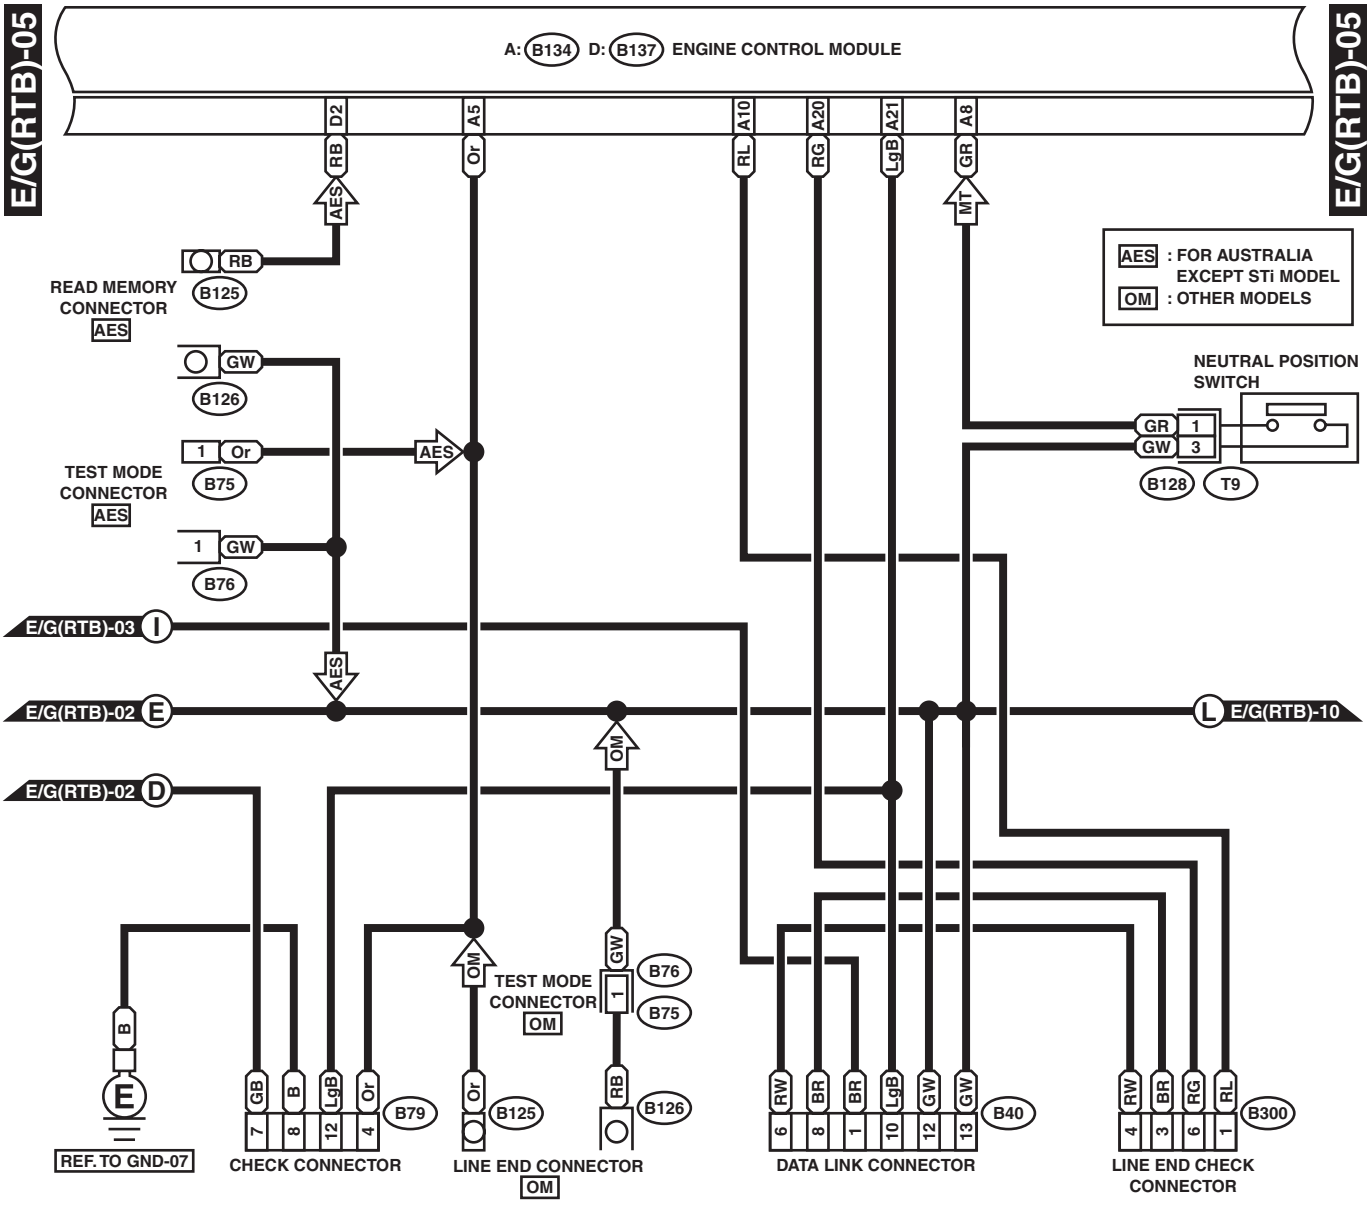
E/G(RTB)-05
A: B134 D: B137 ENGINE CONTROL MODULE
D2
A5
A10
A20
A21
A8
RB
Or
RL
RG
LgB
GR
AES
MT
AES : FOR AUSTRALIA EXCEPT STi MODEL
OM : OTHER MODELS
READ MEMORY CONNECTOR
AES
B125
GW
B126
TEST MODE CONNECTOR
AES
1 Or
B75
1 GW
B76
NEUTRAL POSITION SWITCH
GR 1
GW 3
B128
T9
E/G(RTB)-03 I
E/G(RTB)-02 E
E/G(RTB)-02 D
L E/G(RTB)-10
OM
TEST MODE CONNECTOR
OM
B
E
REF. TO GND-07
GB
B
LgB
Or
7
8
12
4
B79
CHECK CONNECTOR
Or
B125
LINE END CONNECTOR
OM
RB
B126
RW
BR
BR
LgB
GW
GW
6
8
1
10
12
13
B40
DATA LINK CONNECTOR
RW
BR
RG
RL
4
3
6
1
B300
LINE END CHECK CONNECTOR

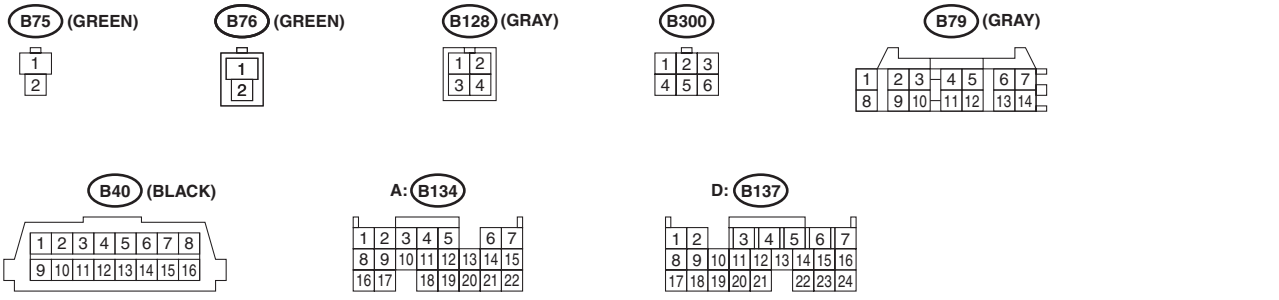
B75 (GREEN)
B76 (GREEN)
B128 (GRAY)
B300
B79 (GRAY)
B40 (BLACK)
A: B134
D: B137

WI-02358

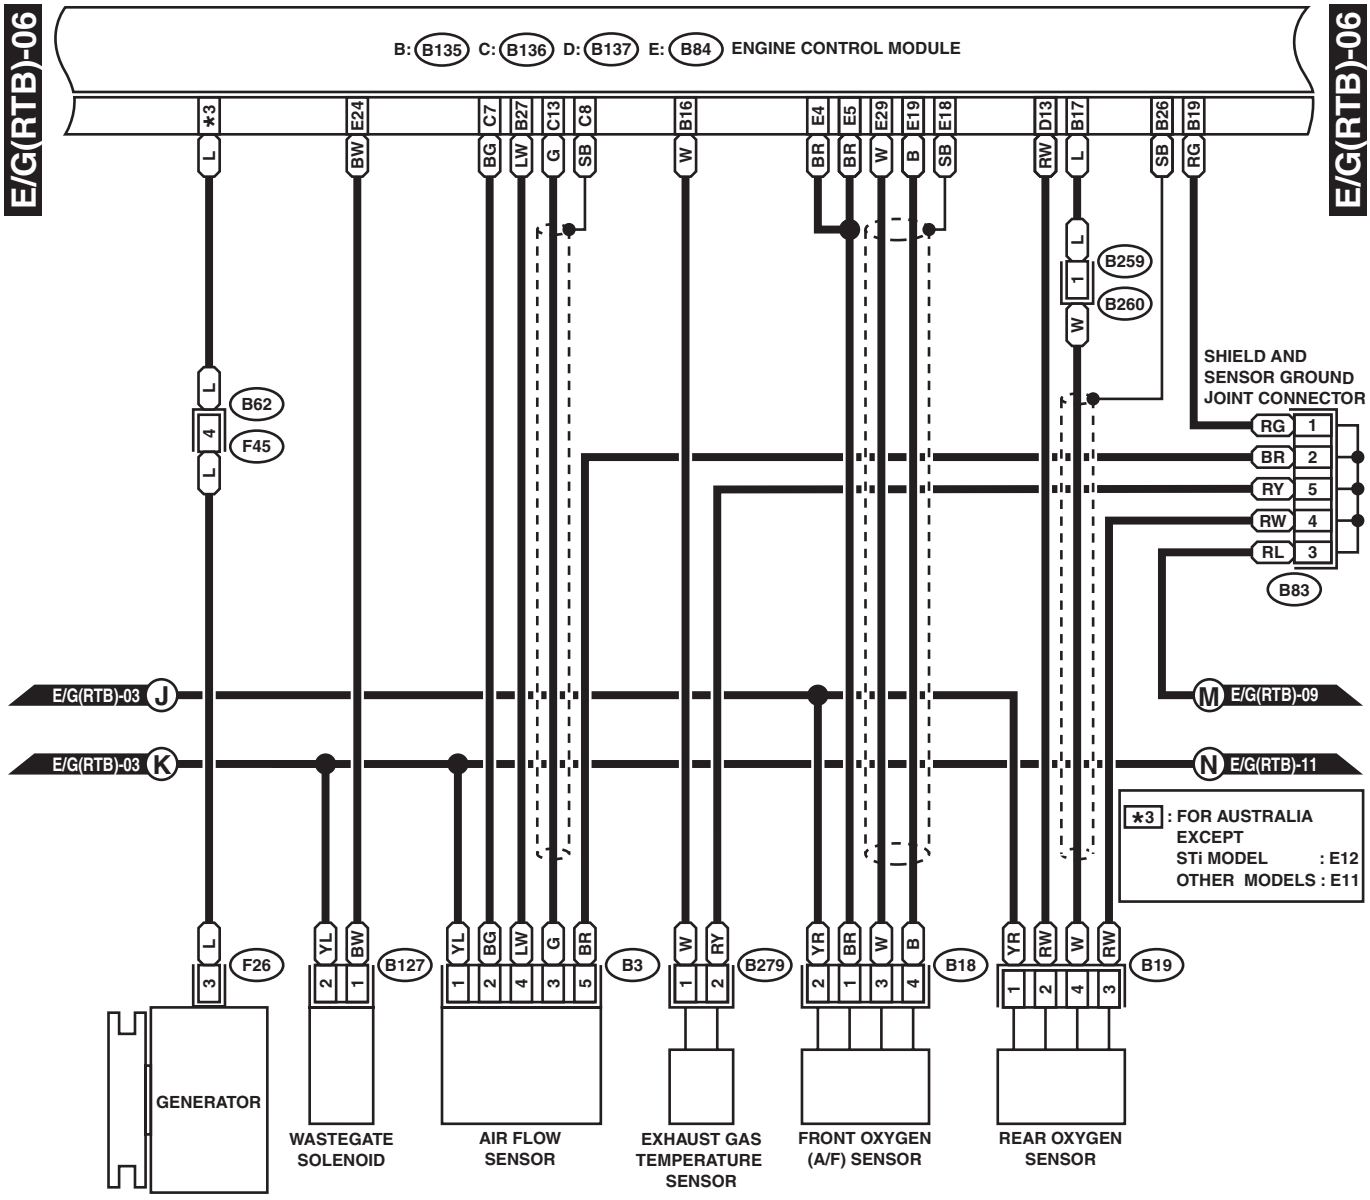
E/G(RTB)-06
B: B135 C: B136 D: B137 E: B84 ENGINE CONTROL MODULE
E/G(RTB)-06
*3
E24
C7
B27
C13
C8
B16
E4
E5
E29
E19
E18
D13
B17
B26
B19
L
BW
BG
LW
G
SB
W
BR
BR
W
B
SB
RW
L
SB
RG
B259
B260
B62
F45
SHIELD AND SENSOR GROUND JOINT CONNECTOR
RG 1
BR 2
RY 5
RW 4
RL 3
B83
E/G(RTB)-03 J
E/G(RTB)-03 K
M E/G(RTB)-09
N E/G(RTB)-11
*3 : FOR AUSTRALIA EXCEPT STi MODEL : E12
OTHER MODELS : E11
F26
B127
B3
B279
B18
B19
YL
BW
BG
LW
G
BR
W
RY
YR
BR
W
B
YR
RW
W
RW
GENERATOR
WASTEGATE SOLENOID
AIR FLOW SENSOR
EXHAUST GAS TEMPERATURE SENSOR
FRONT OXYGEN (A/F) SENSOR
REAR OXYGEN SENSOR

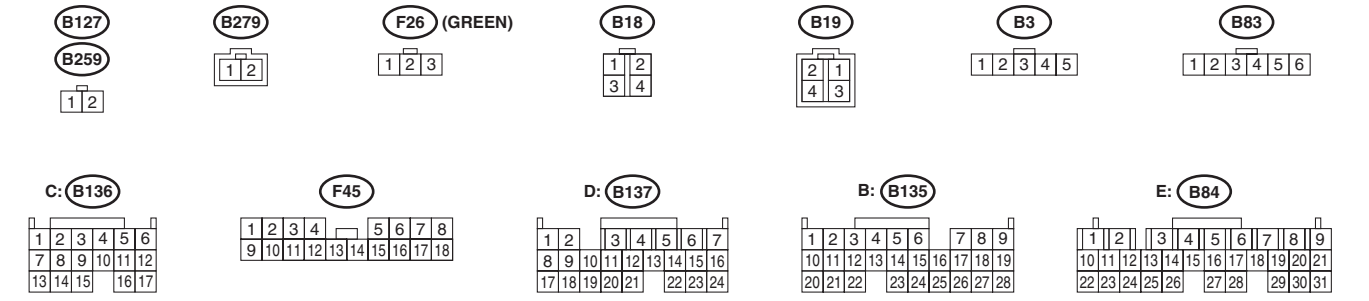
B127
B259
B279
F26 (GREEN)
B18
B19
B3
B83
C: B136
F45
D: B137
B: B135
E: B84

WI-02359

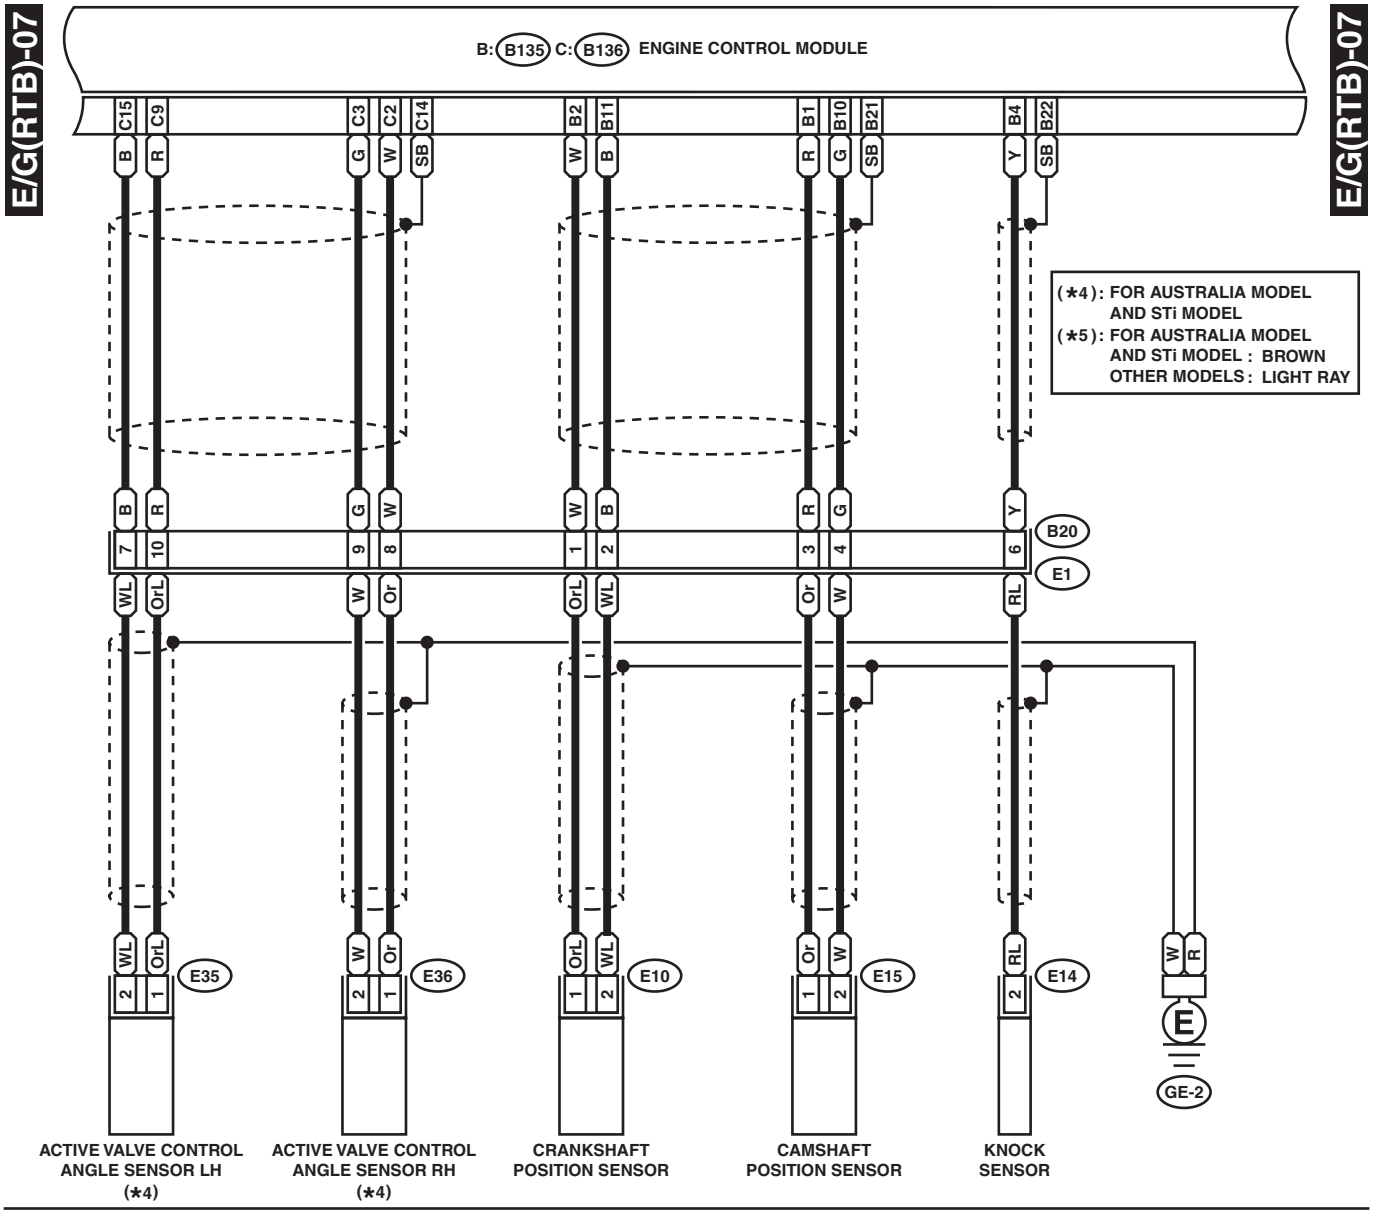

E10 (LIGHT GRAY)
E14 (*5)
E15 (LIGHT GRAY)
E35
E36

B20 (LIGHT GRAY)

C: B136



B: B135



WI-02360

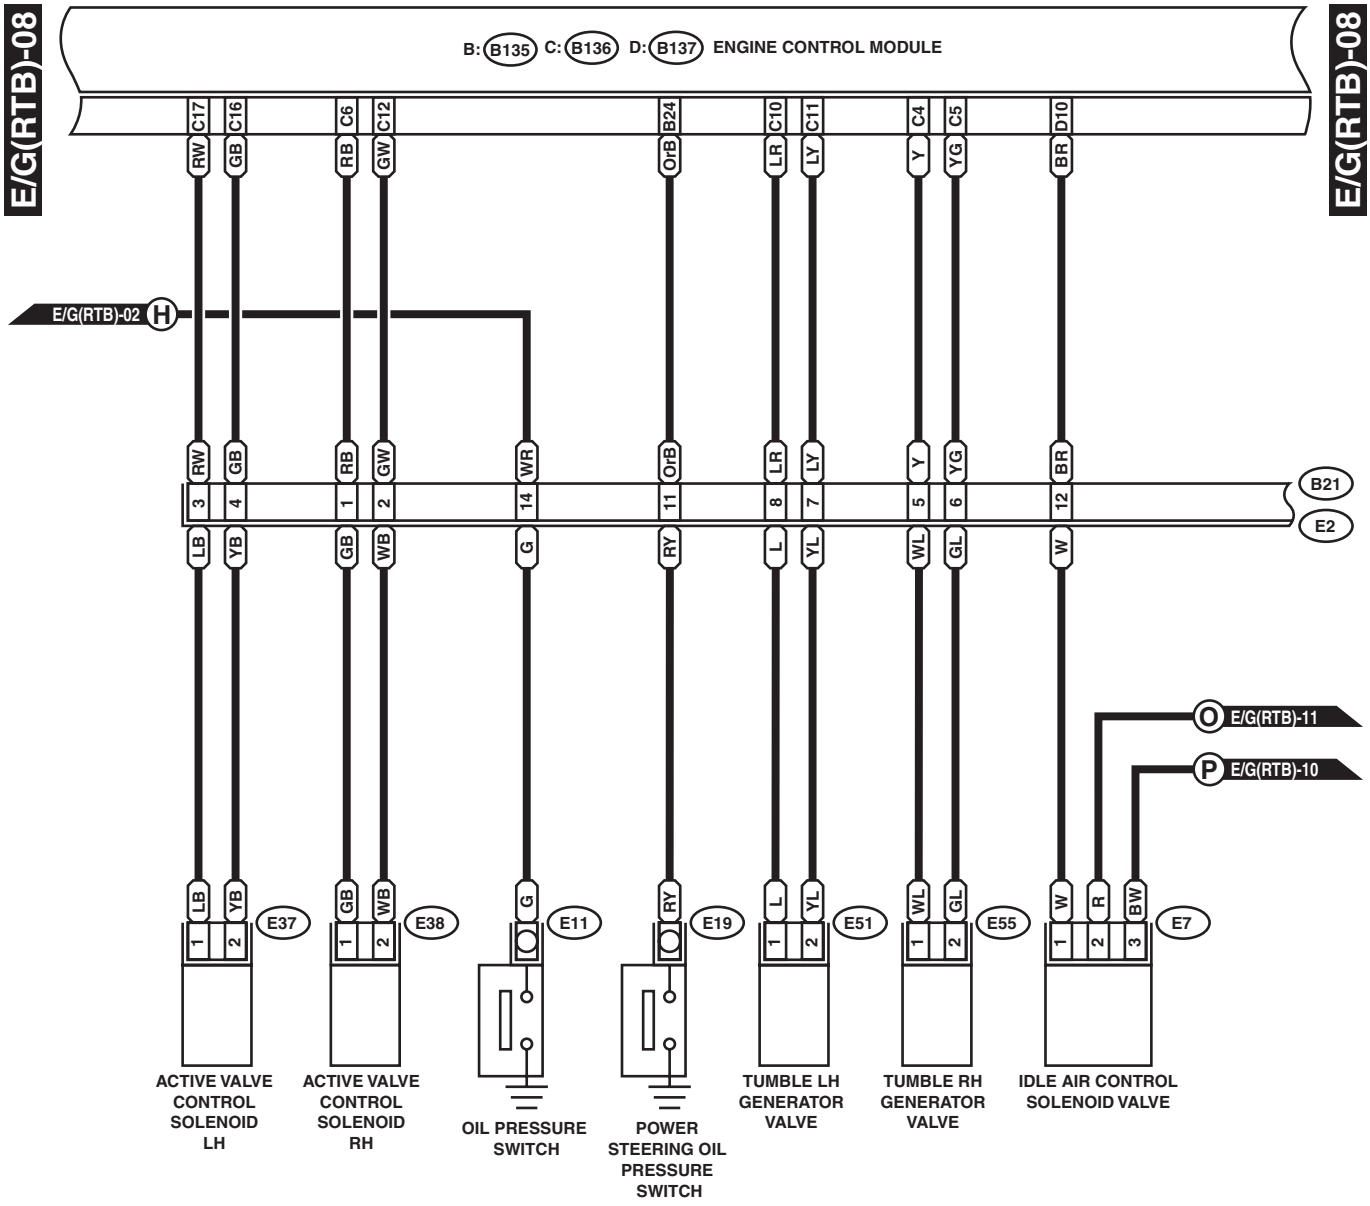
E/G(RTB)-08
E/G(RTB)-08
B: B135 C: B136 D: B137 ENGINE CONTROL MODULE
C17 C16 C6 C12 B24 C10 C11 C4 C5 D10
RW GB RB GW OrB LR LY Y YG BR
E/G(RTB)-02 H
B21
E2
3 4 1 2 14 11 8 7 5 6 12
LB YB GB WB G RY L YL WL GL W
O E/G(RTB)-11
P E/G(RTB)-10
R BW
E37 E38 E11 E19 E51 E55 E7
ACTIVE VALVE CONTROL SOLENOID LH
ACTIVE VALVE CONTROL SOLENOID RH
OIL PRESSURE SWITCH
POWER STEERING OIL PRESSURE SWITCH
TUMBLE LH GENERATOR VALVE
TUMBLE RH GENERATOR VALVE
IDLE AIR CONTROL SOLENOID VALVE
E37 (BLUE)
E38 (BLUE)
E51 (BLACK)
E55 (BLACK)
E7 (LIGHT RAY)
C: B136
B21 (BLACK)
D: B137
B: B135

WI-02361

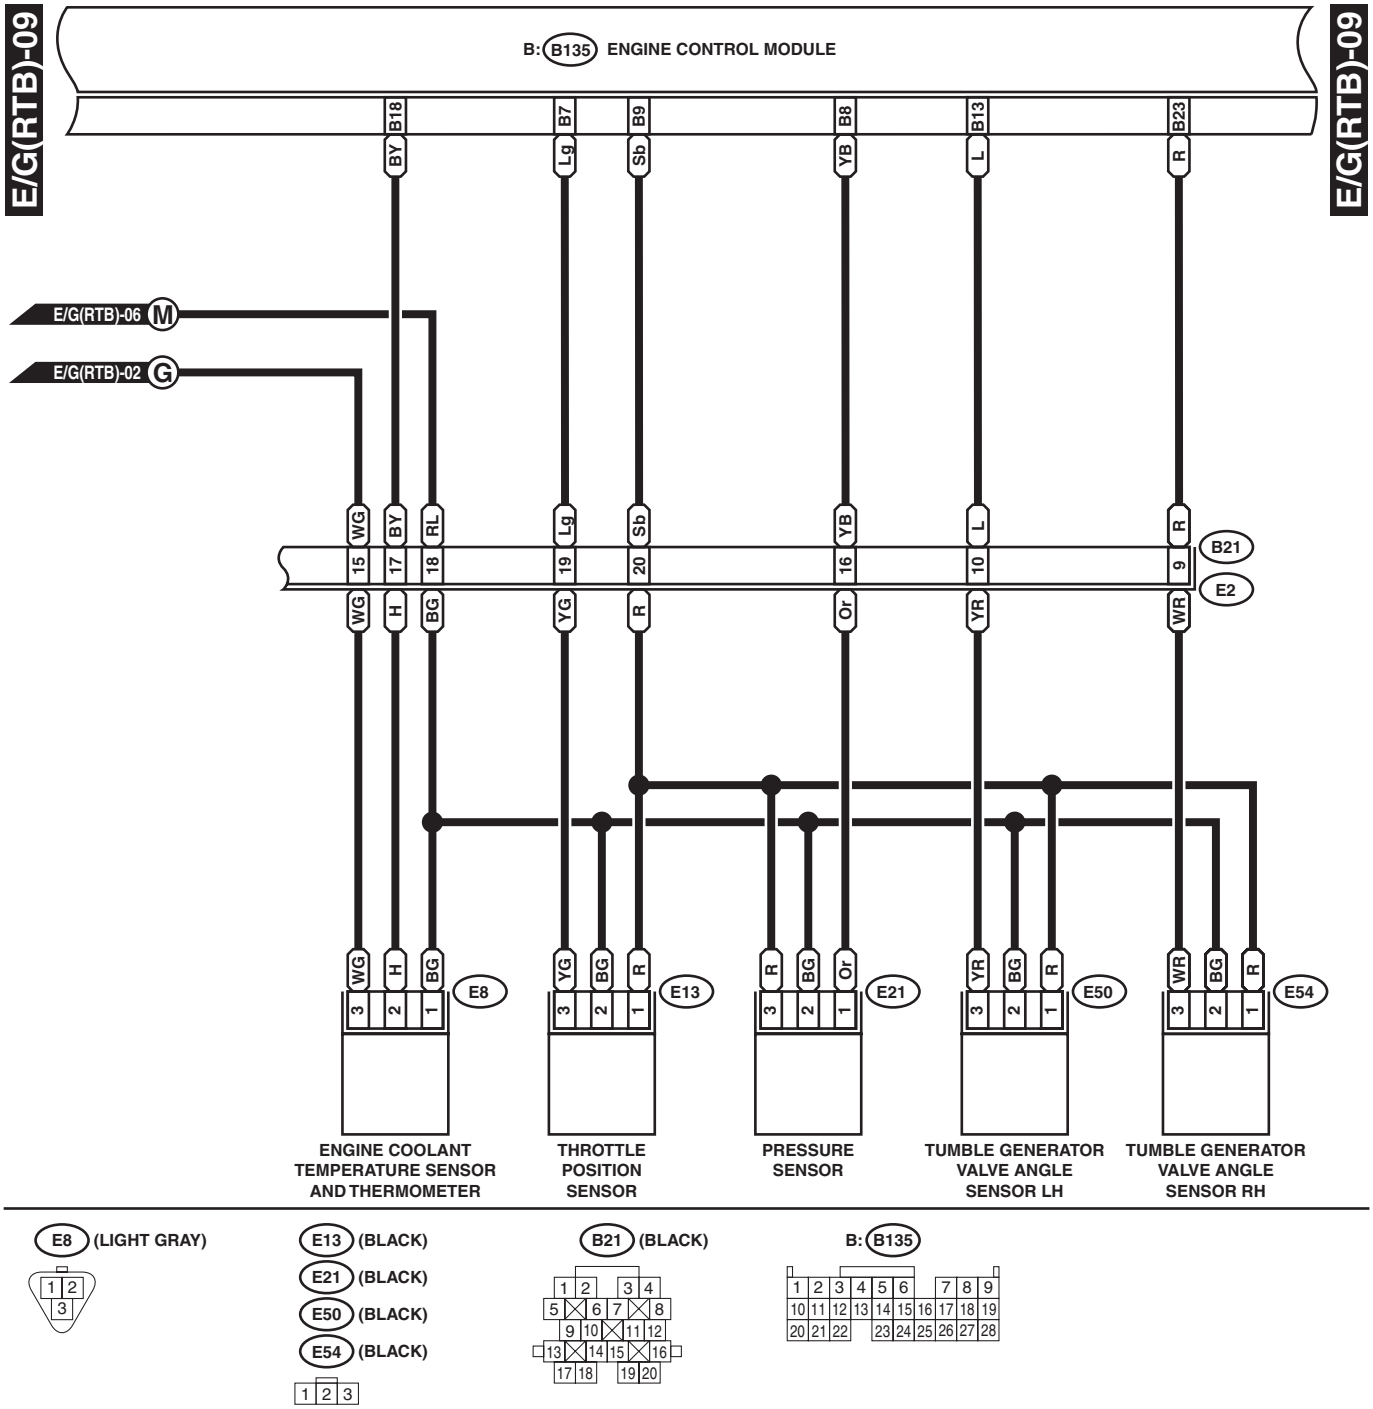
E/G(RTB)-09
E/G(RTB)-09
B: B135 ENGINE CONTROL MODULE
B18 BY
B7 Lg
B9 Sb
B8 YB
B13 L
B23 R
E/G(RTB)-06 M
E/G(RTB)-02 G
WG 15
BY 17
RL 18
Lg 19
Sb 20
YB 16
L 10
R 9
B21
E2
WG
H
BG
YG
R
Or
YR
WR
E8
E13
E21
E50
E54
ENGINE COOLANT TEMPERATURE SENSOR AND THERMOMETER
THROTTLE POSITION SENSOR
PRESSURE SENSOR
TUMBLE GENERATOR VALVE ANGLE SENSOR LH
TUMBLE GENERATOR VALVE ANGLE SENSOR RH
E8 (LIGHT GRAY)
E13 (BLACK)
E21 (BLACK)
E50 (BLACK)
E54 (BLACK)
B21 (BLACK)
B: B135

WI-02362

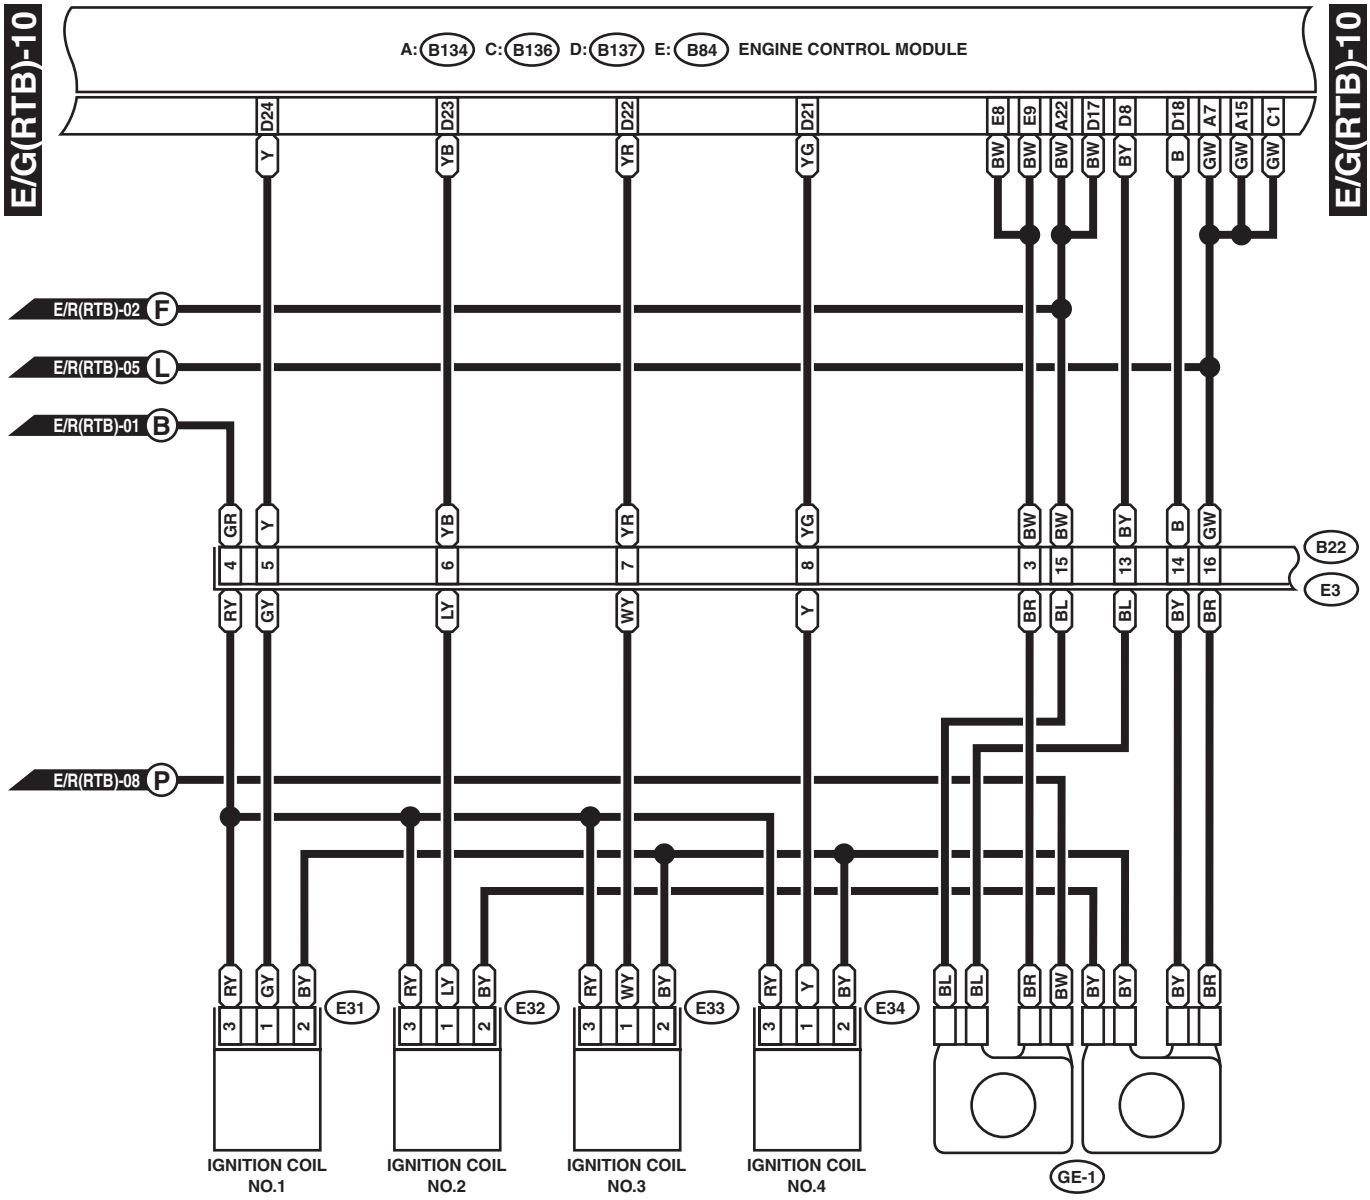
E/G(RTB)-10
A: B134 C: B136 D: B137 E: B84 ENGINE CONTROL MODULE
E/G(RTB)-10
D24 D23 D22 D21 E8 E9 A22 D17 D8 D18 A7 A15 C1
Y YB YR YG BW BW BW BW BY B GW GW GW
E/R(RTB)-02 F
E/R(RTB)-05 L
E/R(RTB)-01 B
GR Y YB YR YG BW BW BY B GW
4 5 6 7 8 3 15 13 14 16
B22
E3
RY GY LY WY Y BR BL BL BY BR
E/R(RTB)-08 P
RY GY BY E31
RY LY BY E32
RY WY BY E33
RY Y BY E34
BL BL BR BW BY BY BY BR
3 1 2
IGNITION COIL NO.1
IGNITION COIL NO.2
IGNITION COIL NO.3
IGNITION COIL NO.4
GE-1

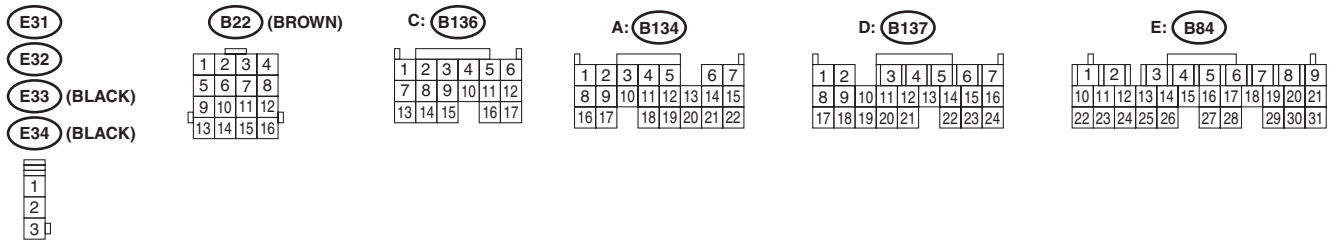
E31
E32
E33 (BLACK)
E34 (BLACK)
B22 (BROWN)
C: B136
A: B134
D: B137
E: B84

WI-02363

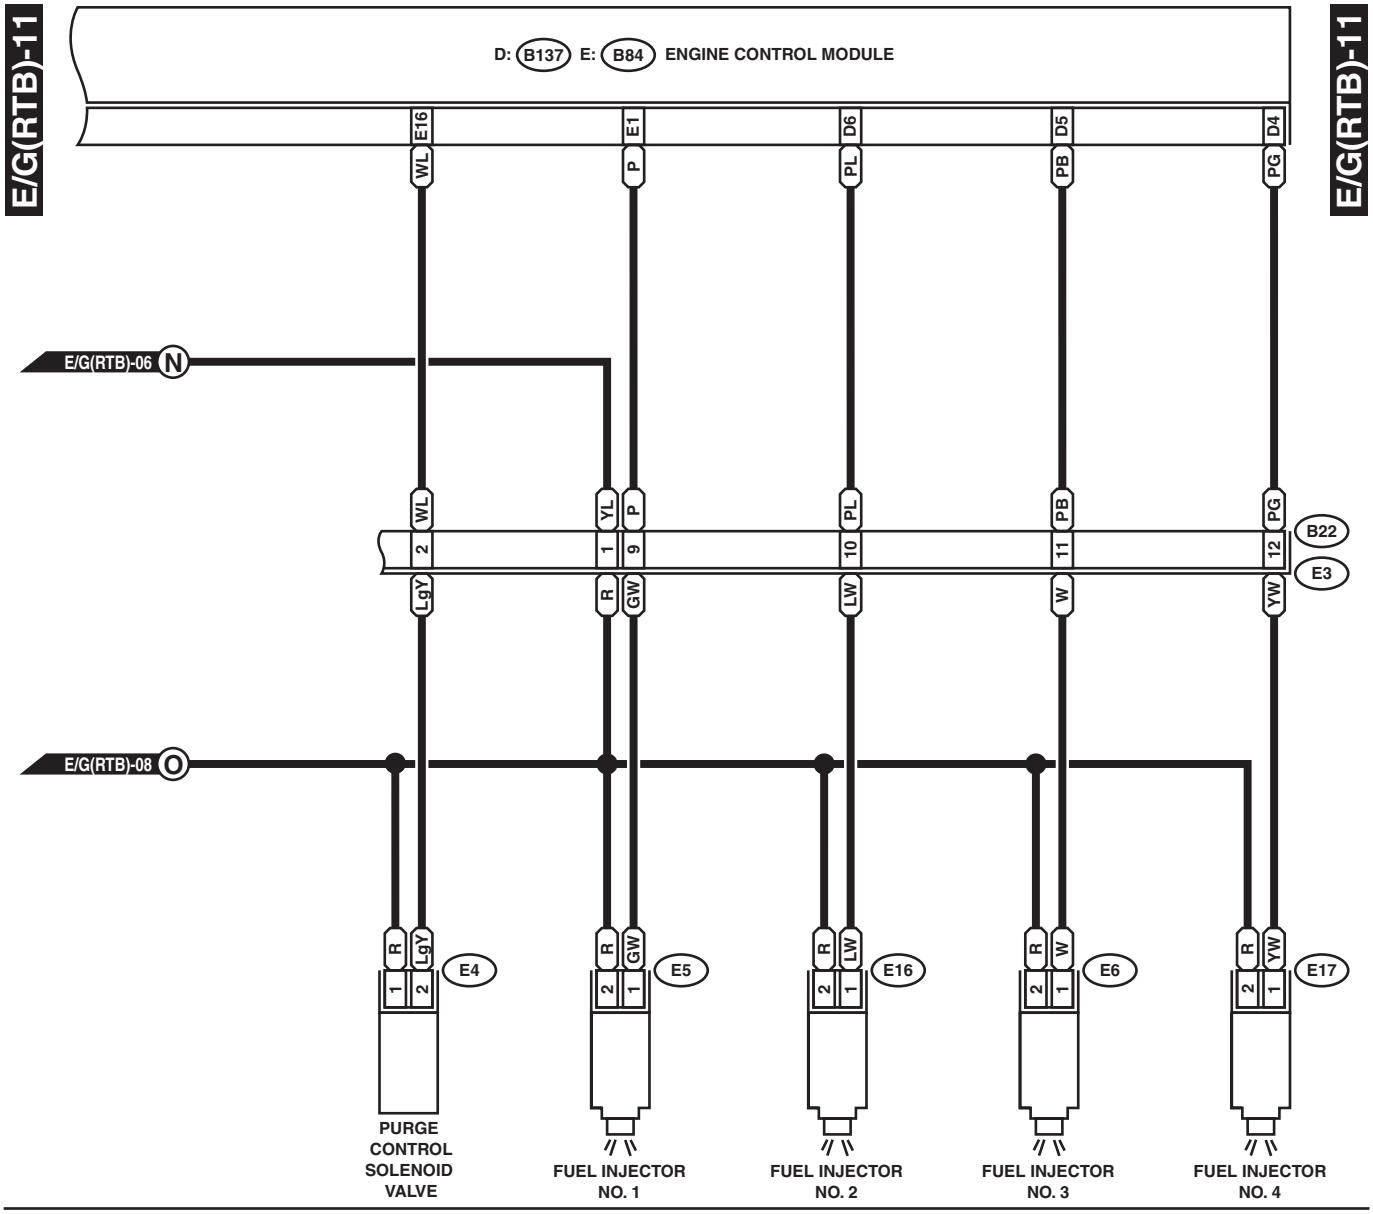

E4 (BLACK)

E5 (DARK GRAY)
E6 (DARK GRAY)
E16 (DARK GRAY)
E17 (DARK GRAY)

B22 (BROWN)

D: B137

E: B84

WI-02364

15.Fuel Gauge System

A: SCHEMATIC

1. LHD MODEL

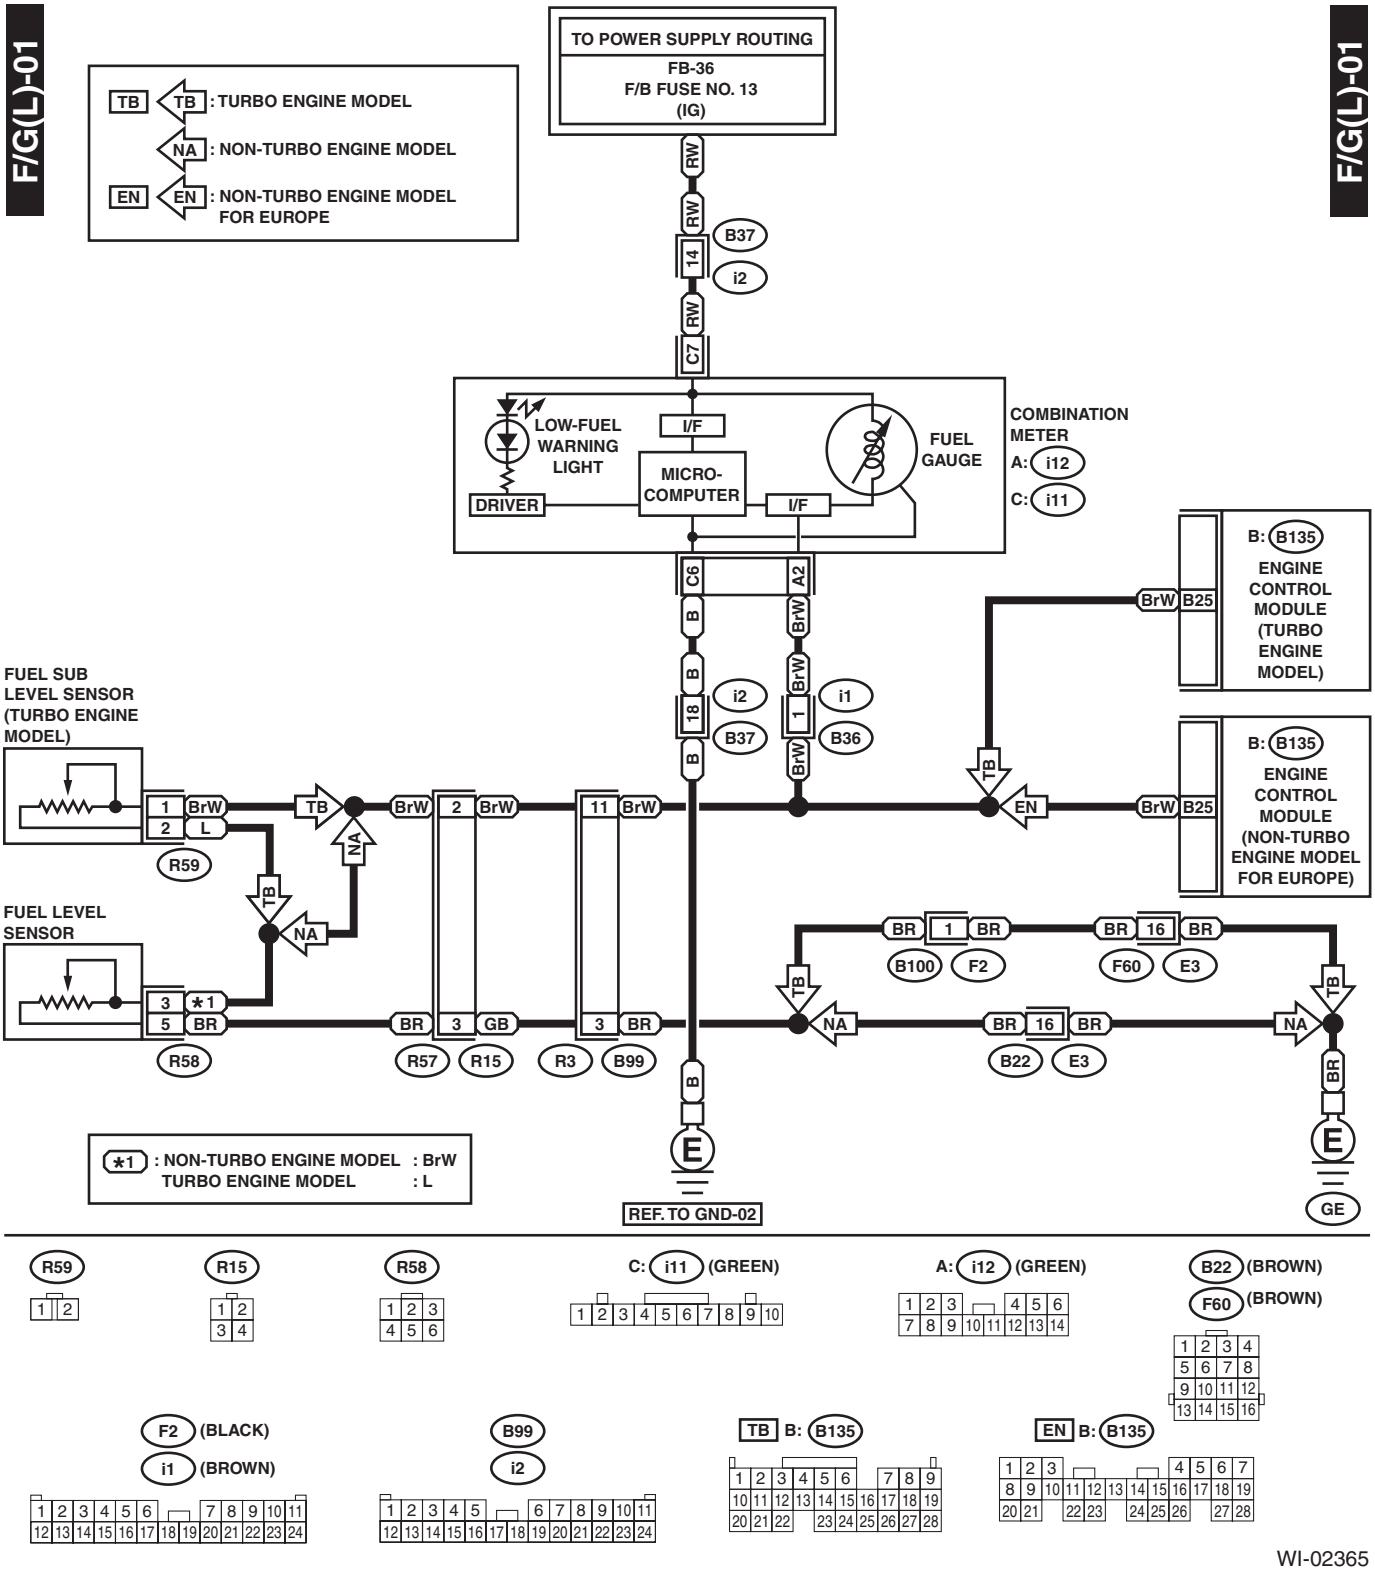

WI-02365

2. RHD MODEL

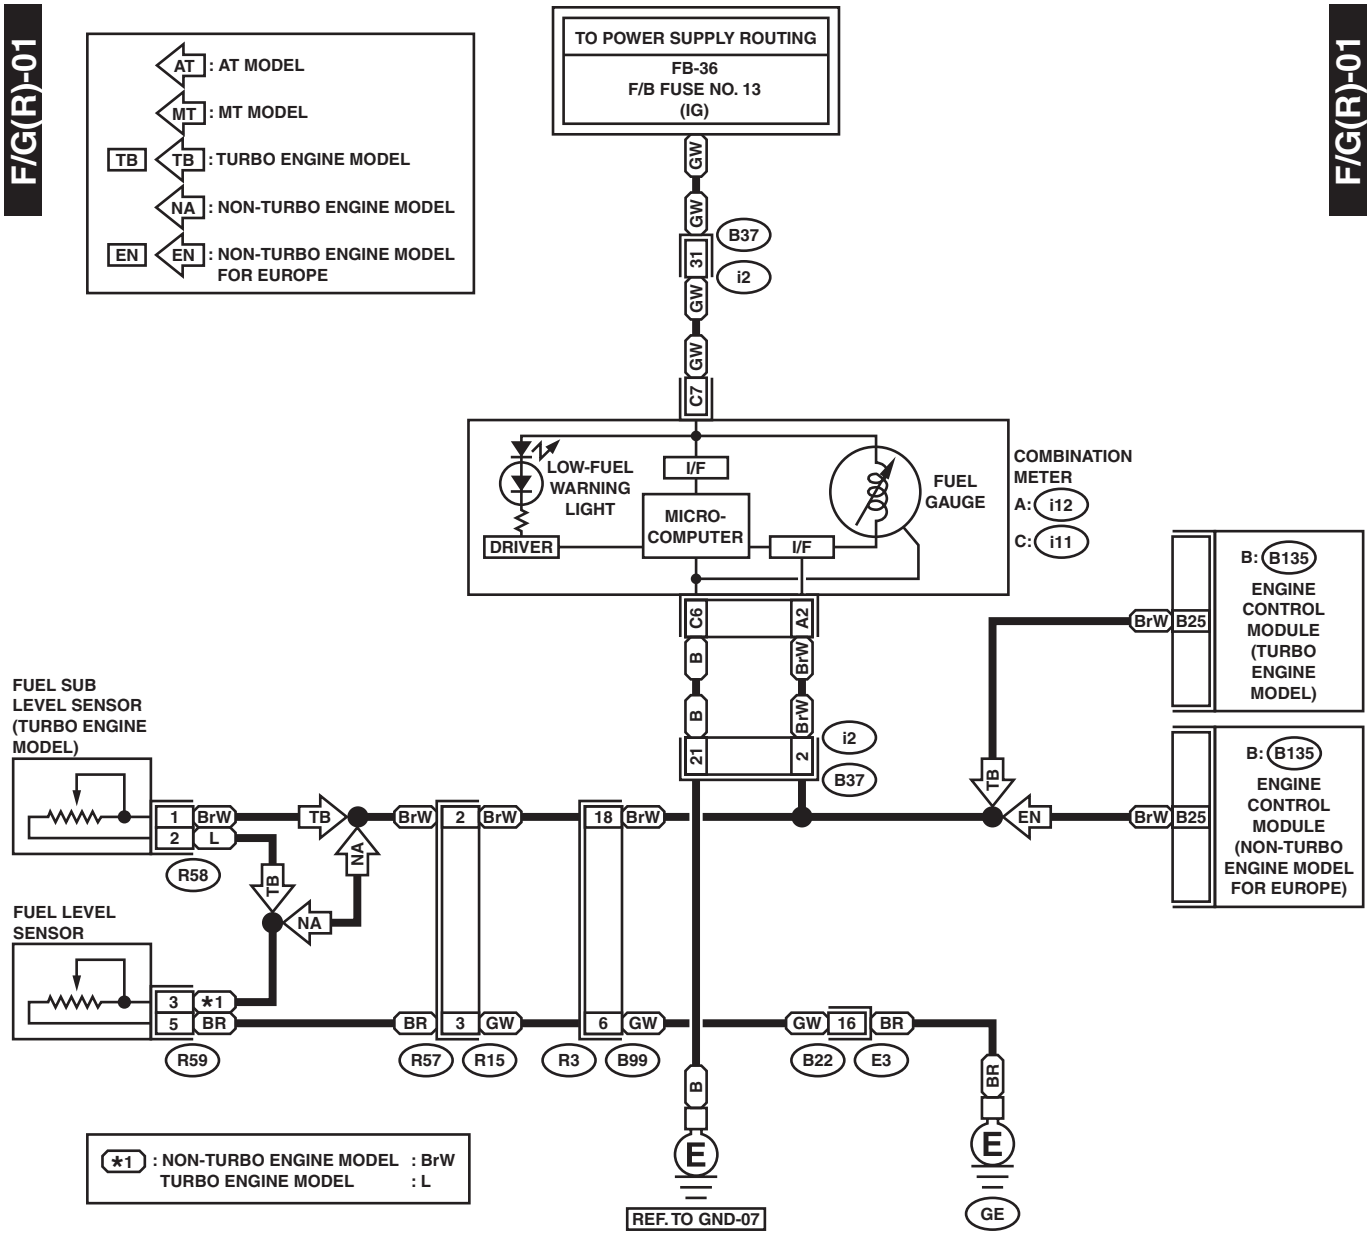

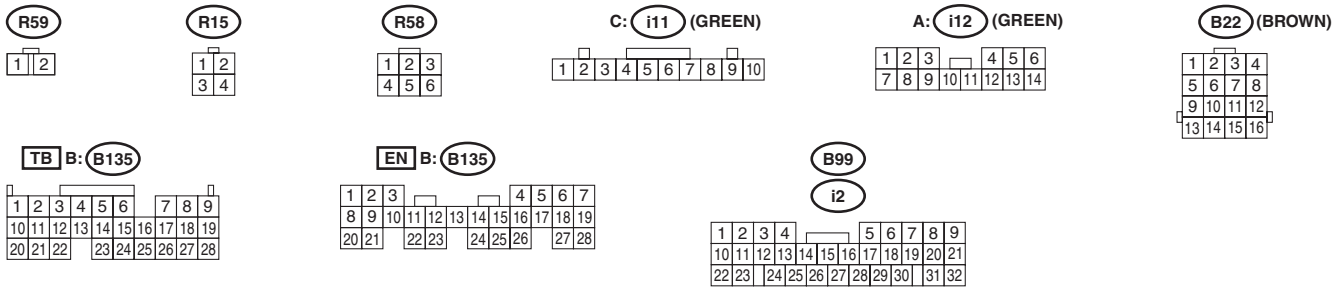

WI-02366

16.Full-Time Dual-Range System

A: SCHEMATIC

1. LHD MODEL

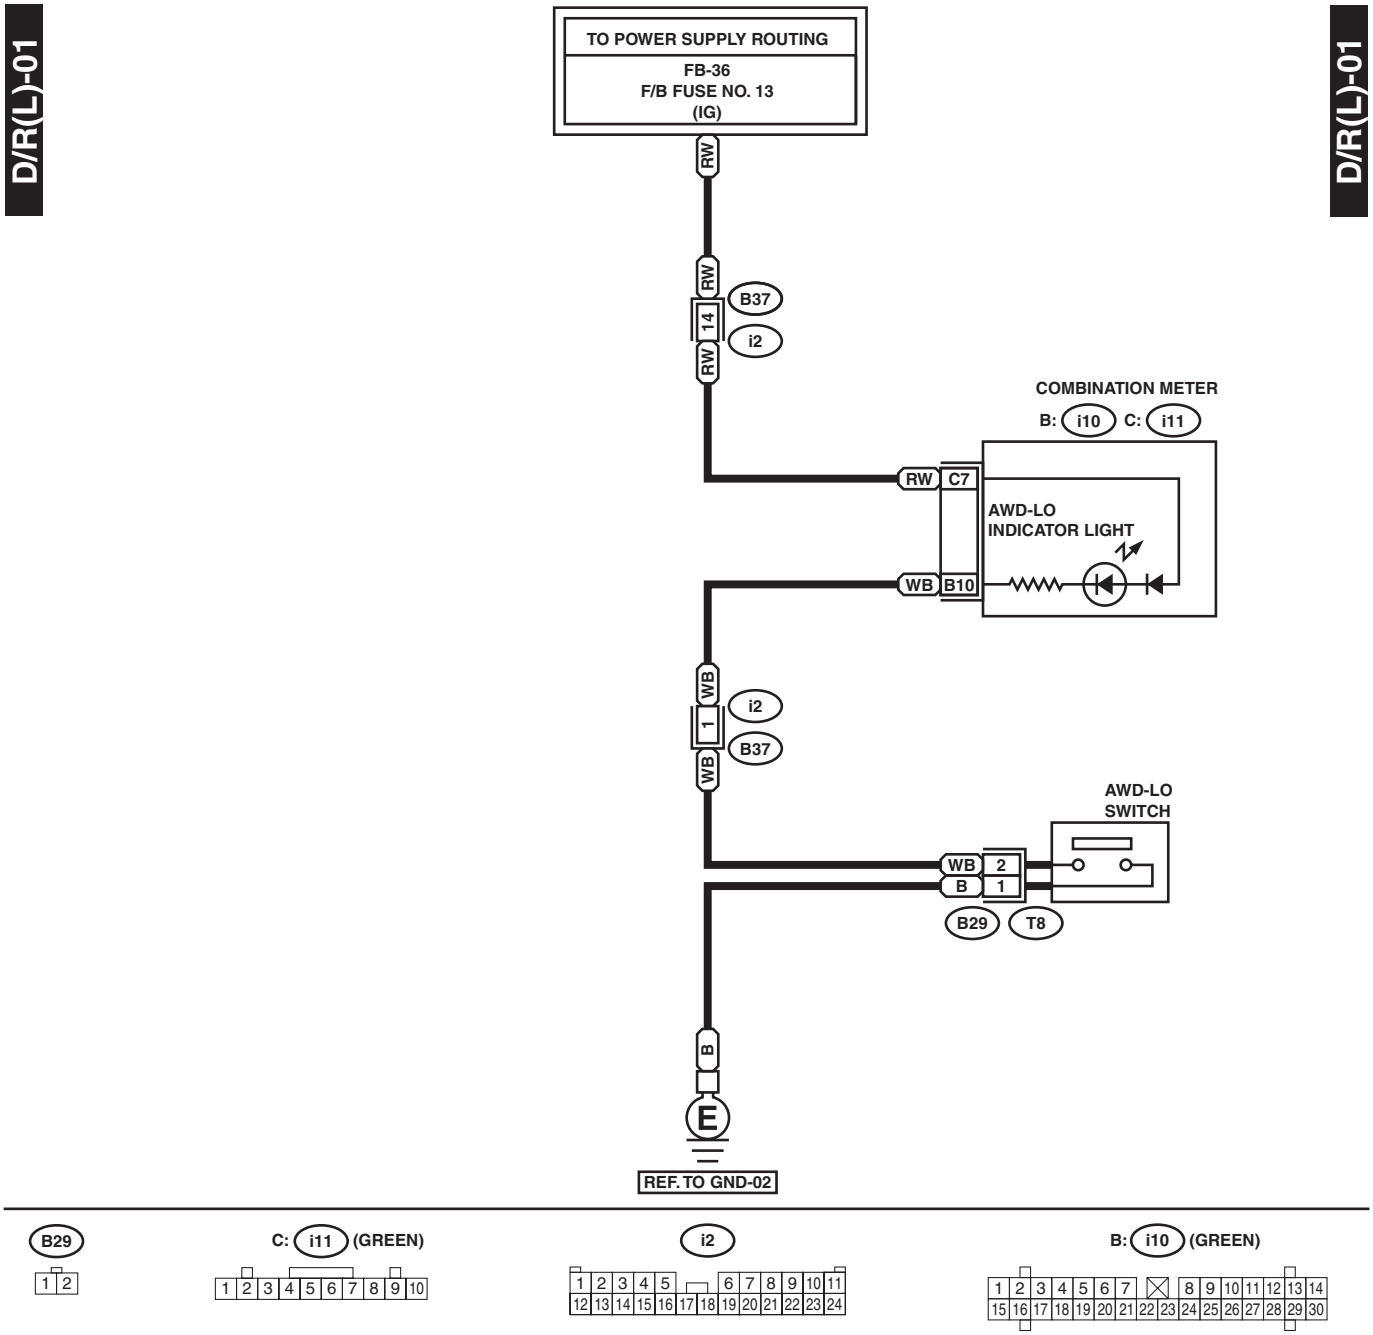

WI-02367

2. RHD MODEL

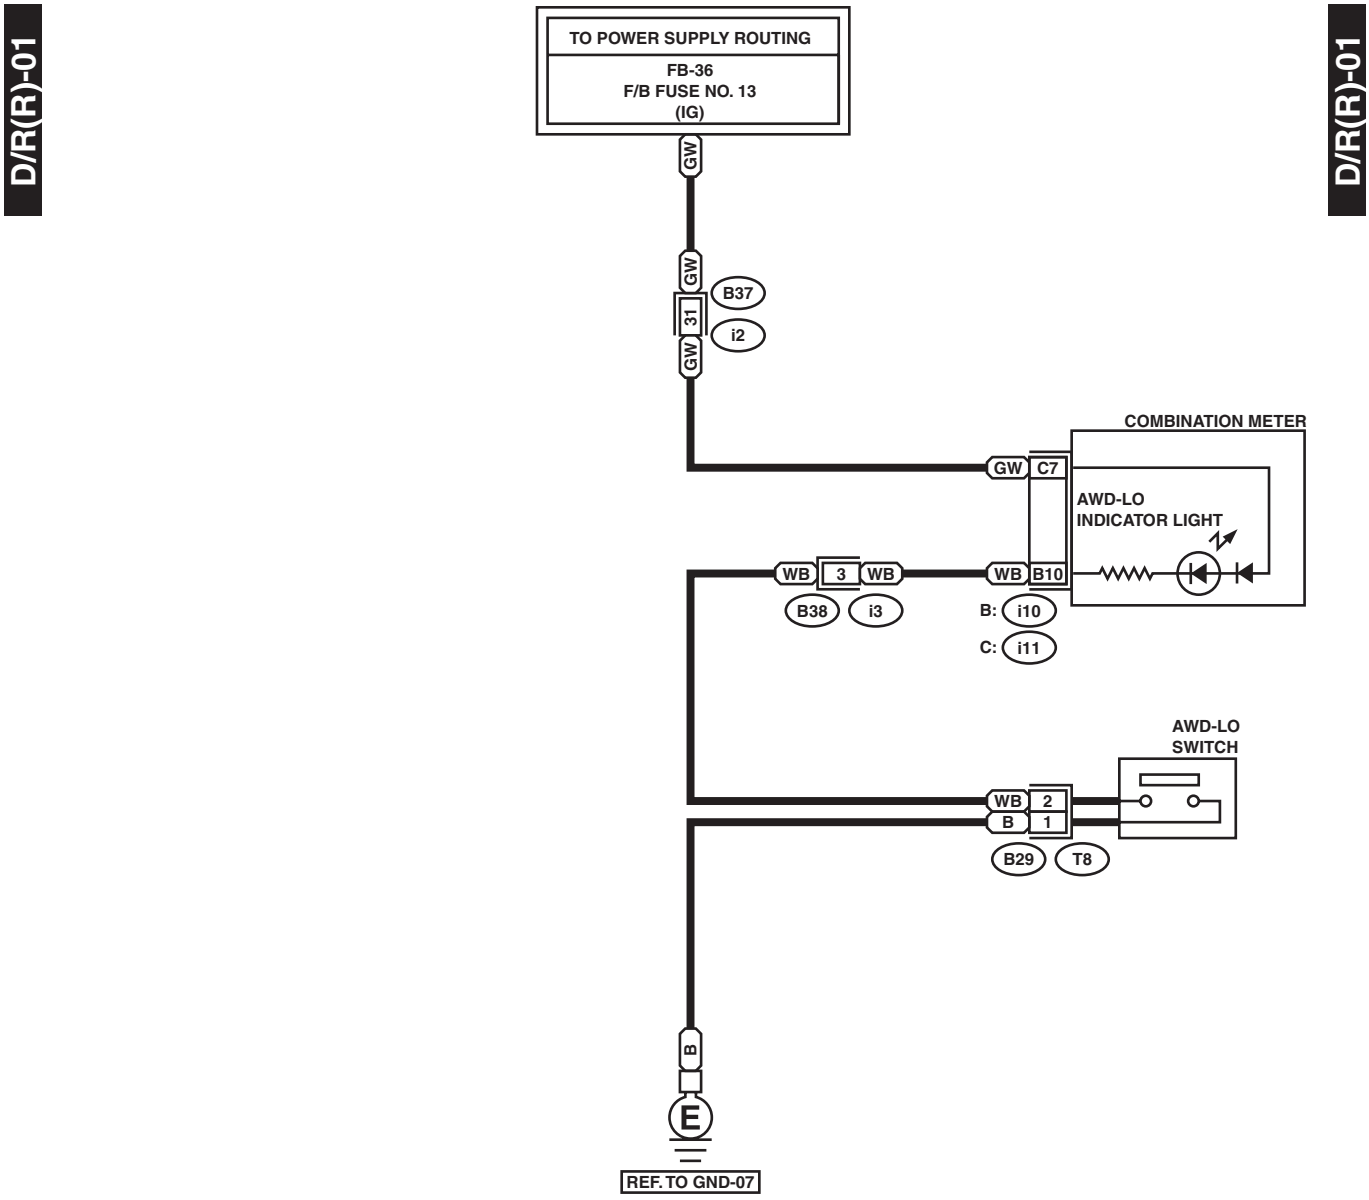

WI-02368

17.Front Accessory Power Supply System

A: SCHEMATIC

FAPS-01

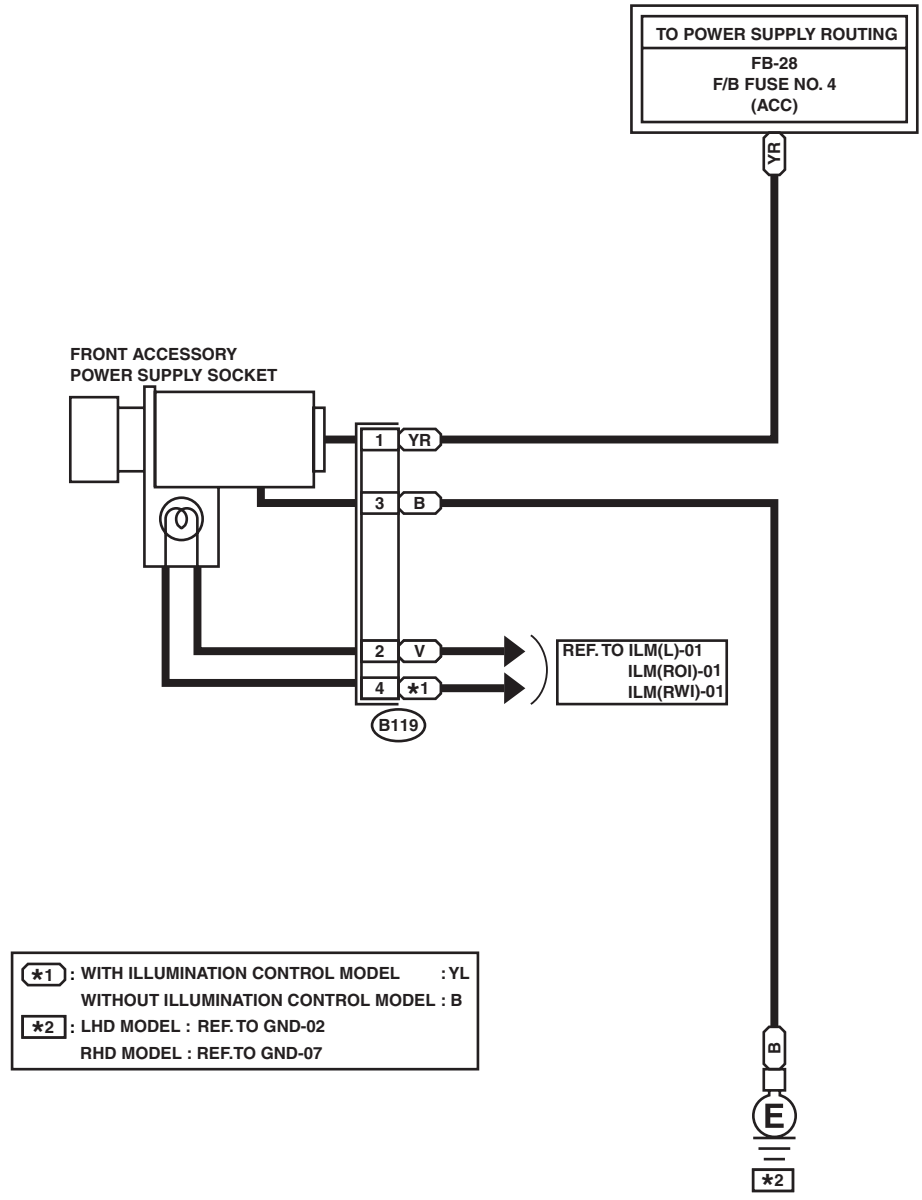



WI-02529

18.Headlight Beam Leveler System

A: SCHEMATIC

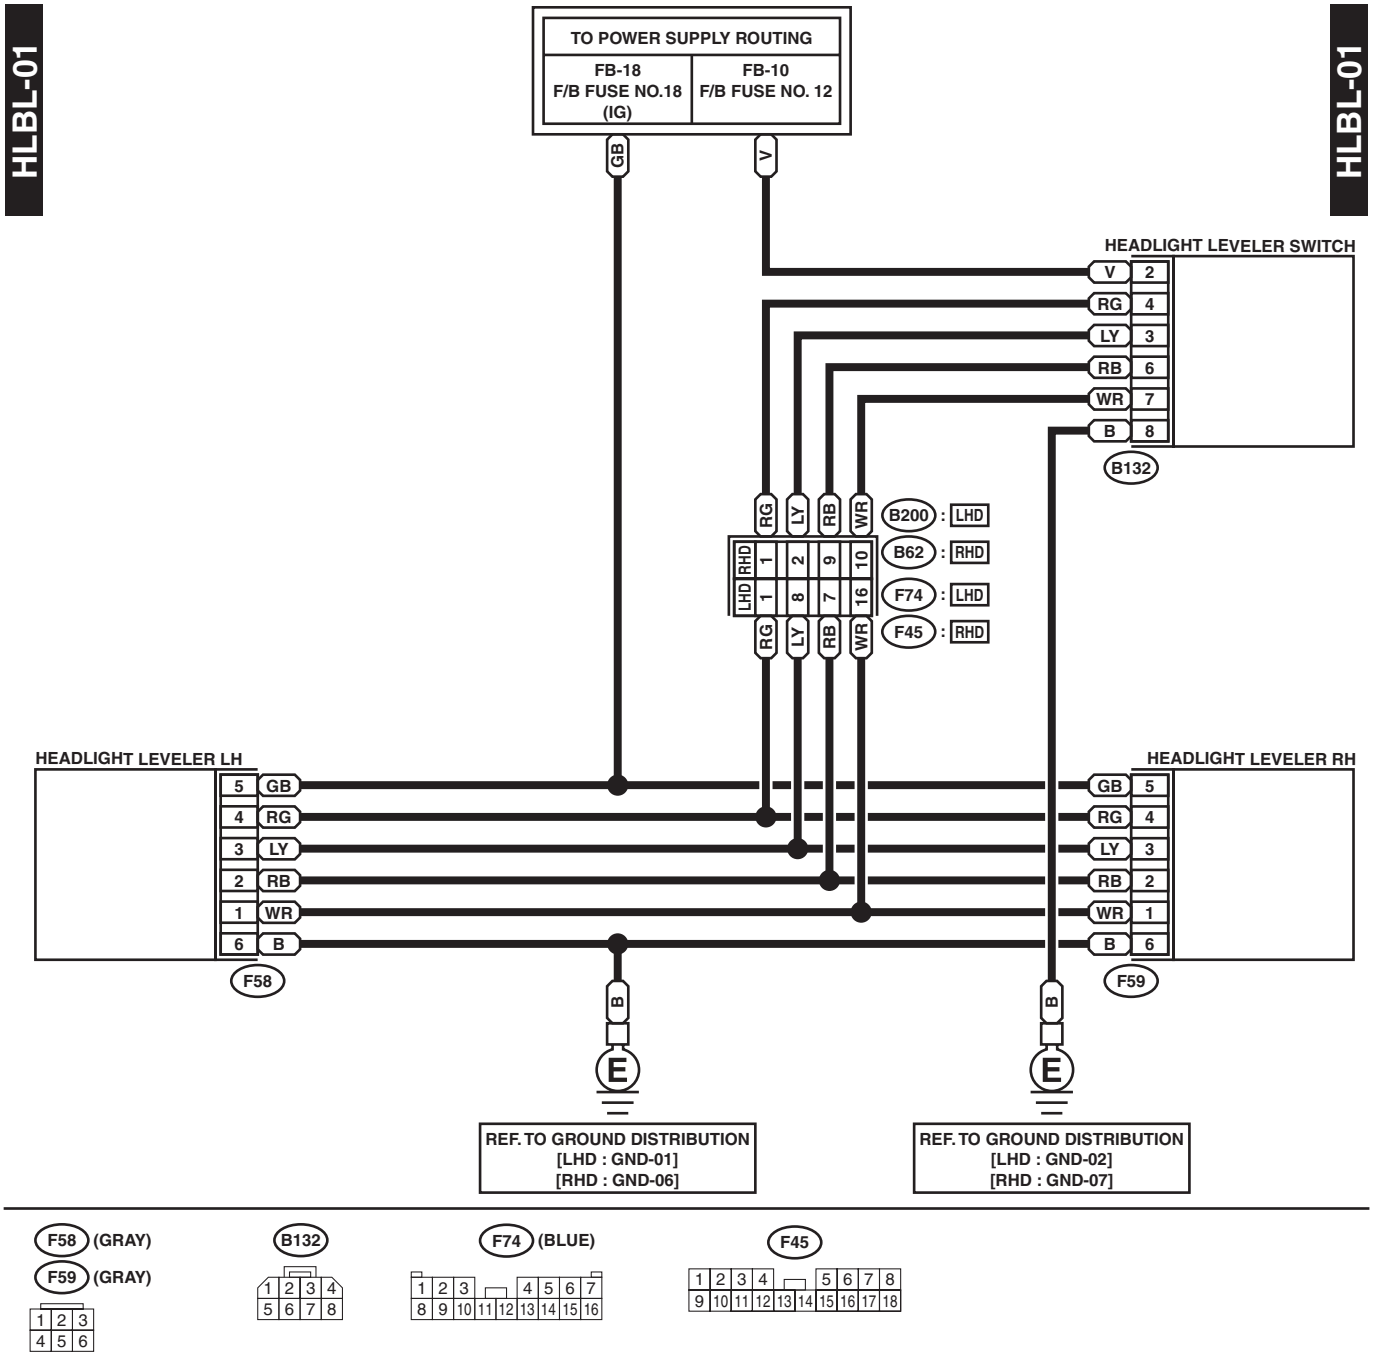

WI-02369

19.Horn System

A: SCHEMATIC

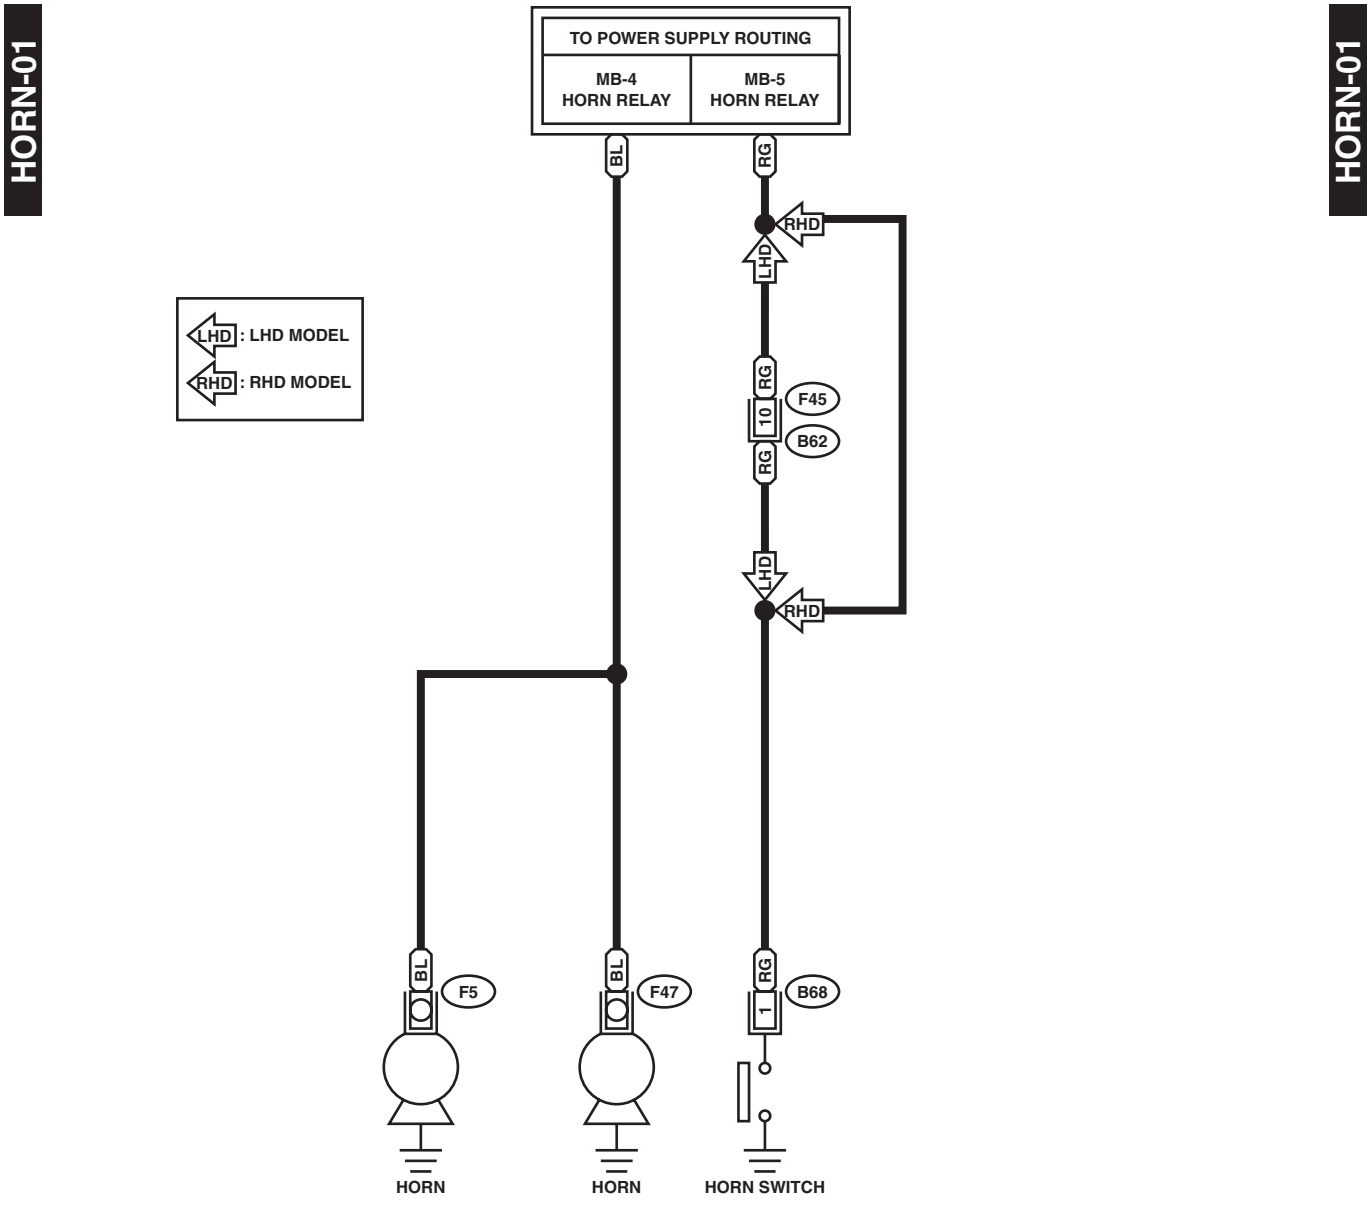



WI-02370

20.Immobilizer System

A: SCHEMATIC

1. LHD MODEL

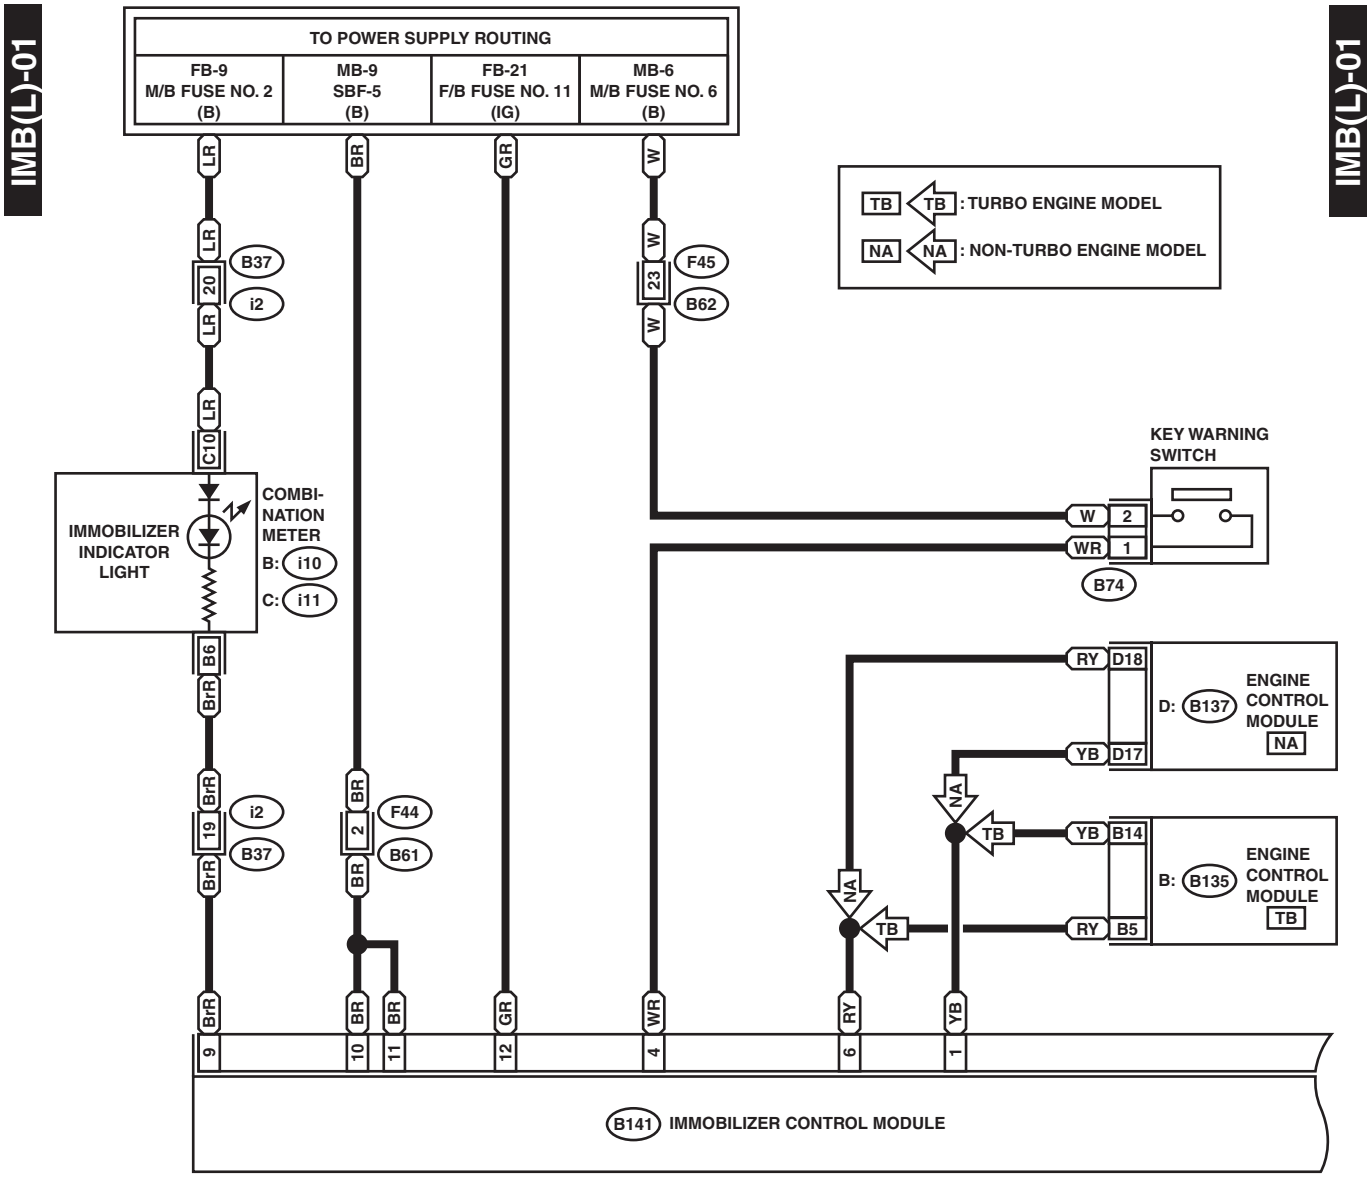

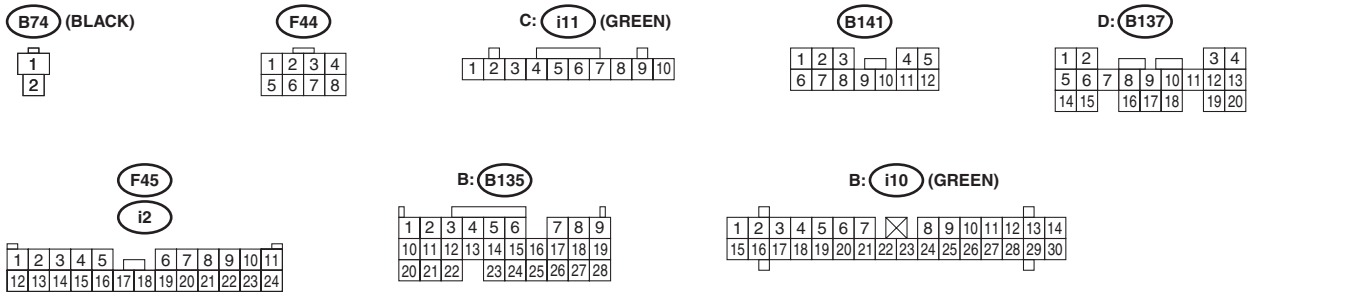

WI-02371

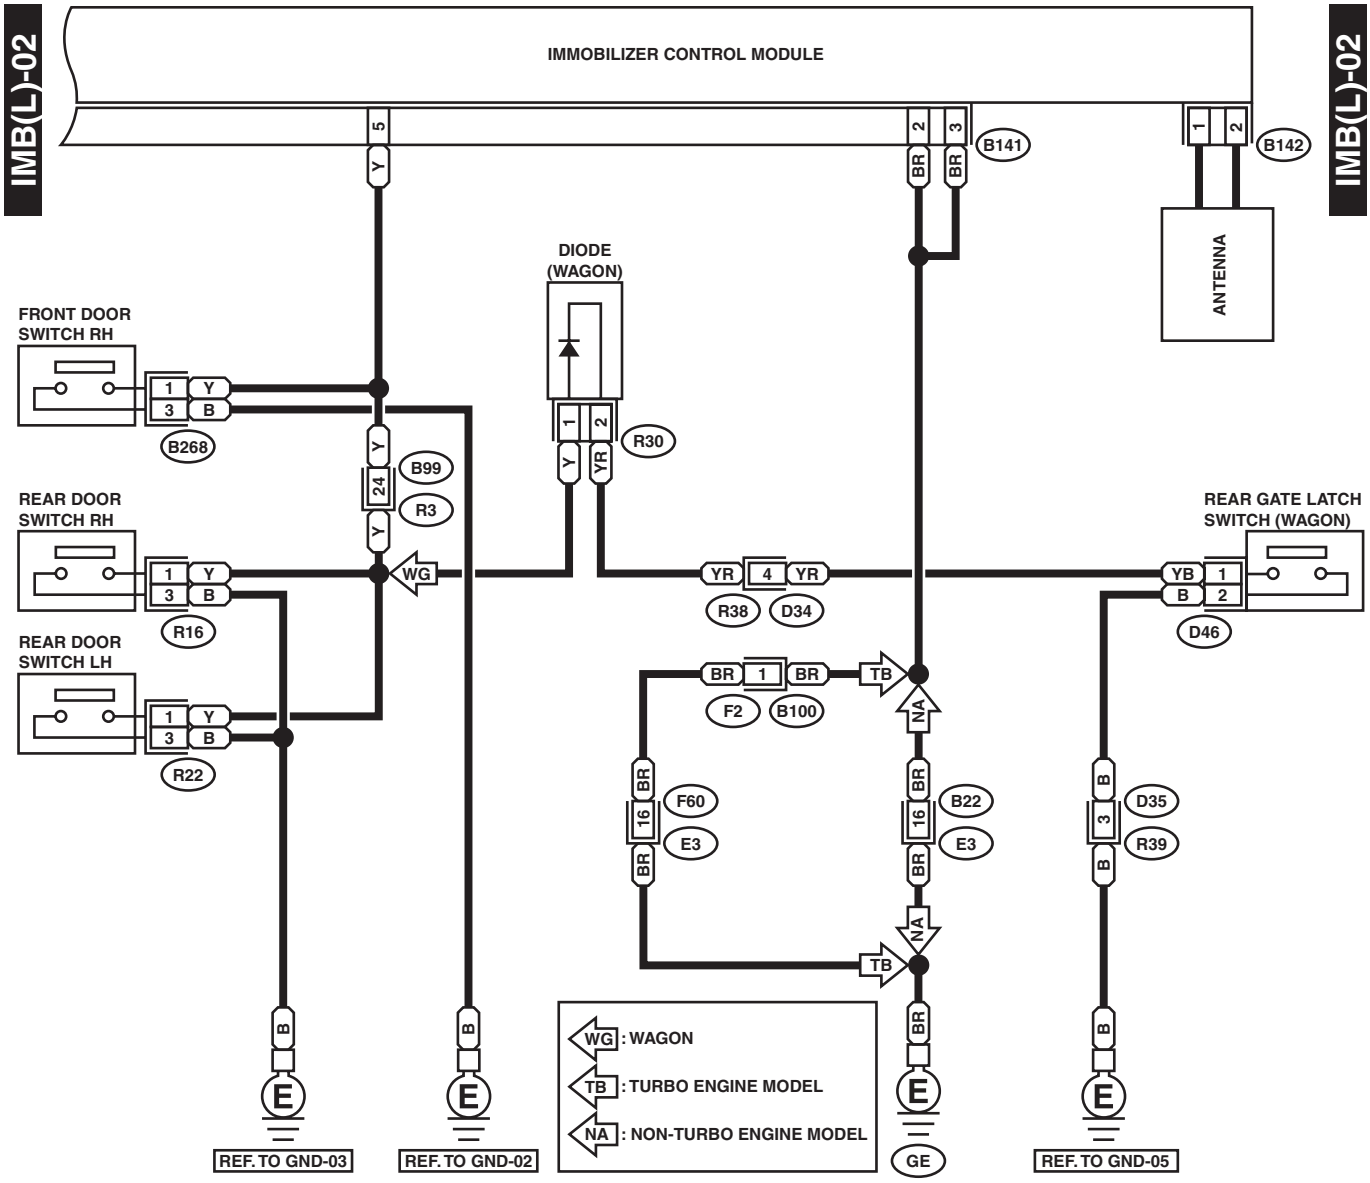
IMB(L)-02
IMMOBILIZER CONTROL MODULE
IMB(L)-02
B141
B142
ANTENNA
DIODE (WAGON)
R30
FRONT DOOR SWITCH RH
B268
B99
R3
REAR DOOR SWITCH RH
R16
REAR DOOR SWITCH LH
R22
REAR GATE LATCH SWITCH (WAGON)
D46
F2
B100
F60
E3
B22
D35
R39
WG : WAGON
TB : TURBO ENGINE MODEL
NA : NON-TURBO ENGINE MODEL
REF. TO GND-03
REF. TO GND-02
REF. TO GND-05
GE

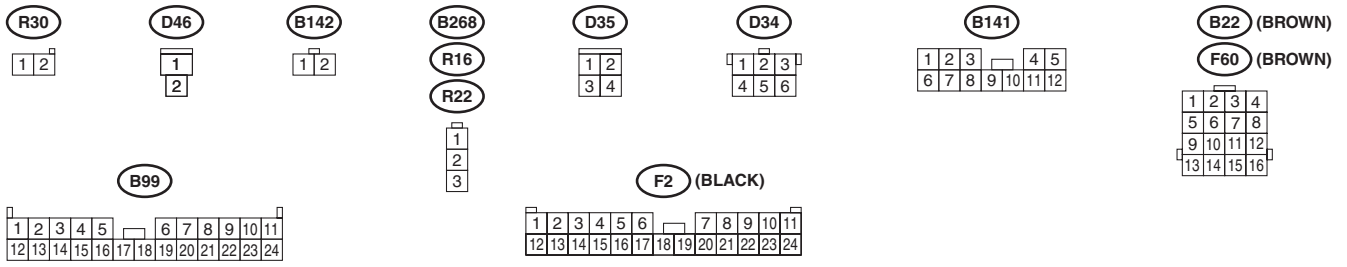
R30
D46
B142
B268
R16
R22
D35
D34
B141
B22 (BROWN)
F60 (BROWN)
B99
F2 (BLACK)

WI-02372

2. RHD MODEL

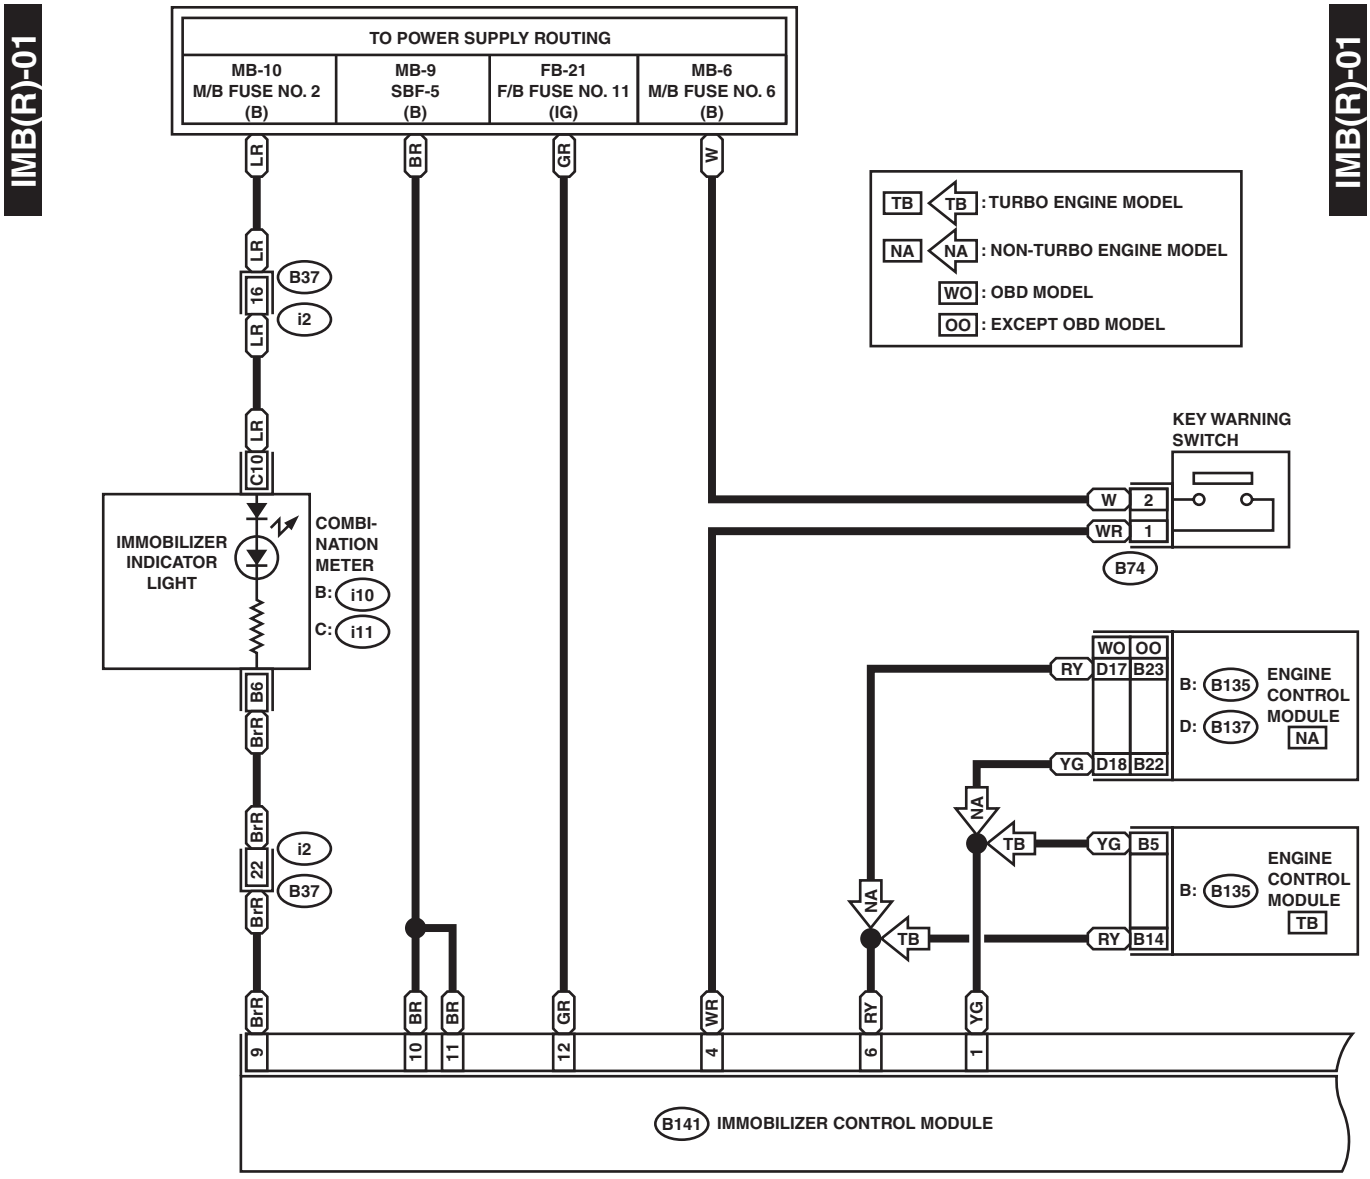

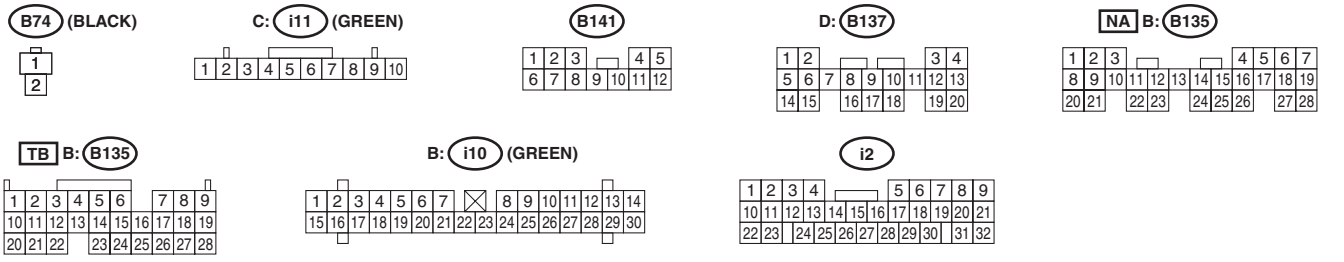

WI-02373

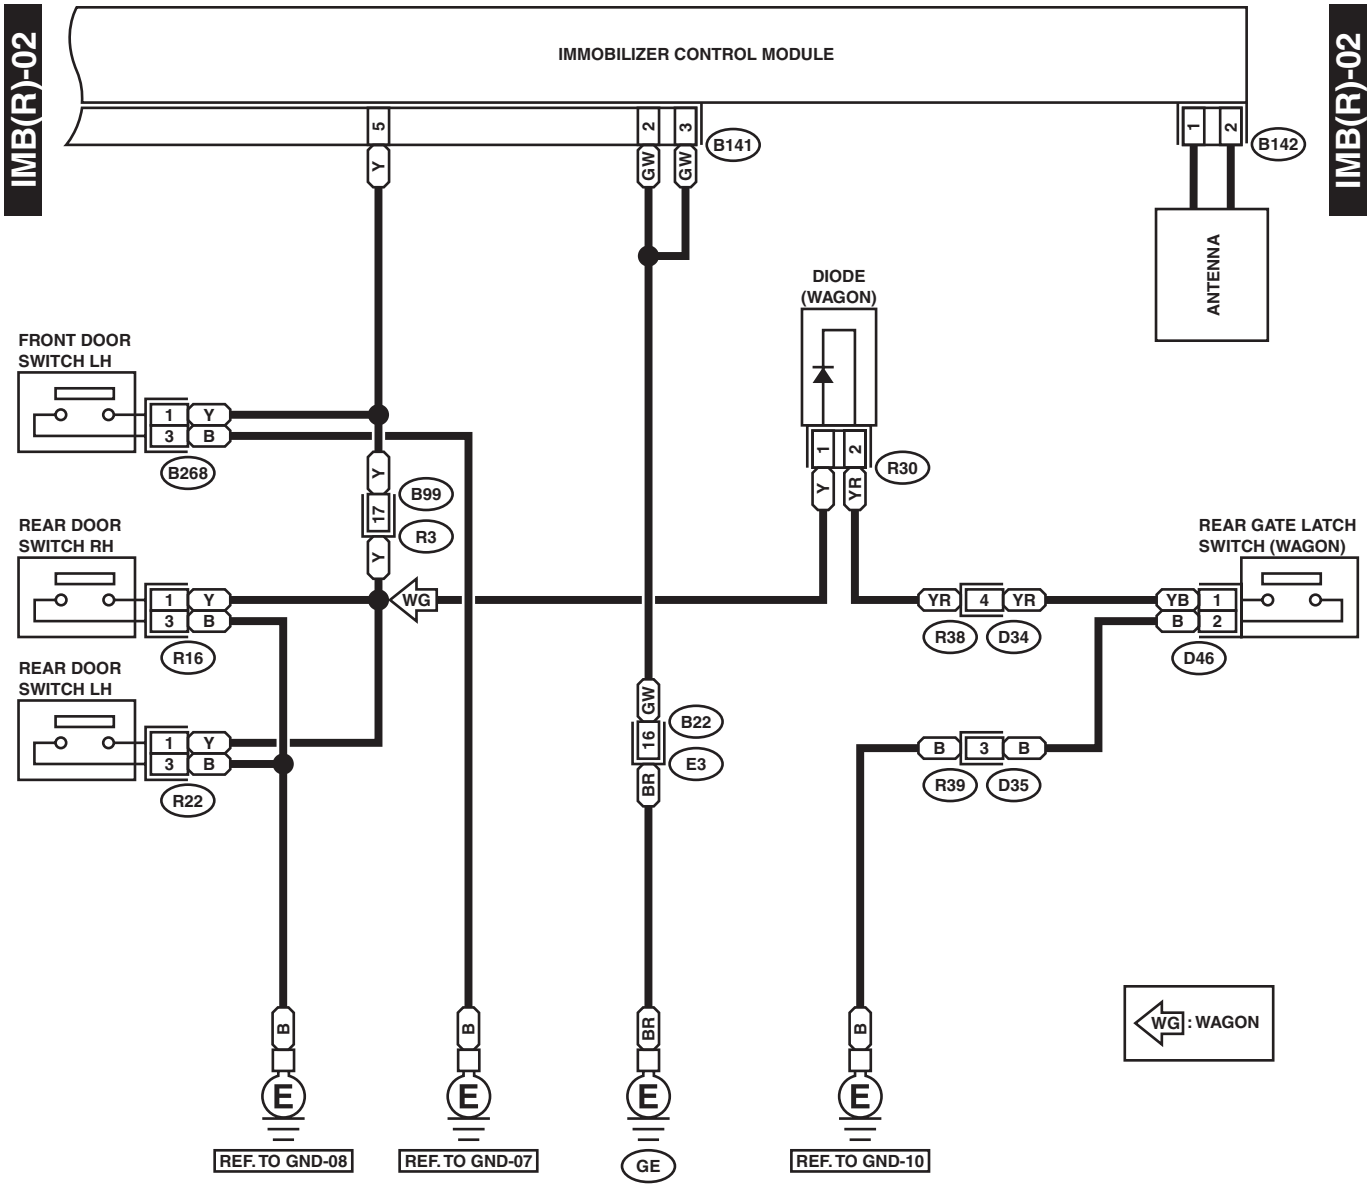
IMB(R)-02
IMMOBILIZER CONTROL MODULE
IMB(R)-02
B141
B142
ANTENNA
DIODE (WAGON)
R30
FRONT DOOR SWITCH LH
B268
B99
R3
REAR DOOR SWITCH RH
R16
REAR DOOR SWITCH LH
R22
WG
REAR GATE LATCH SWITCH (WAGON)
R38
D34
D46
B22
E3
R39
D35
WG : WAGON
REF. TO GND-08
REF. TO GND-07
GE
REF. TO GND-10

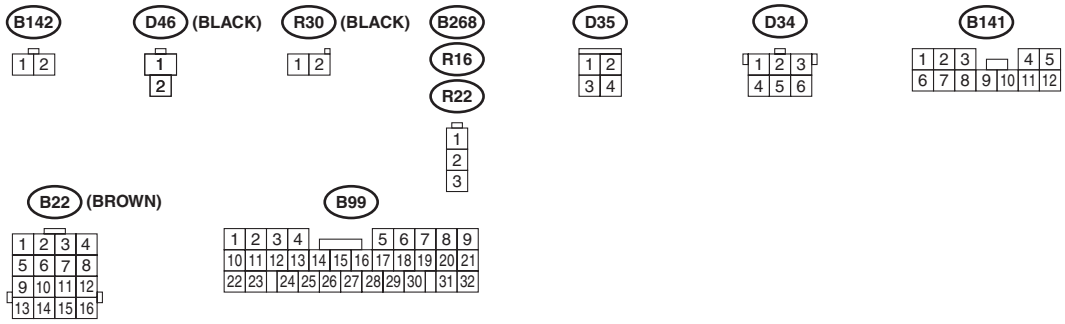
B142
D46 (BLACK)
R30 (BLACK)
B268
R16
R22
D35
D34
B141
B22 (BROWN)
B99

WI-02374

21.Keyless Entry System

A: SCHEMATIC

1. LHD MODEL

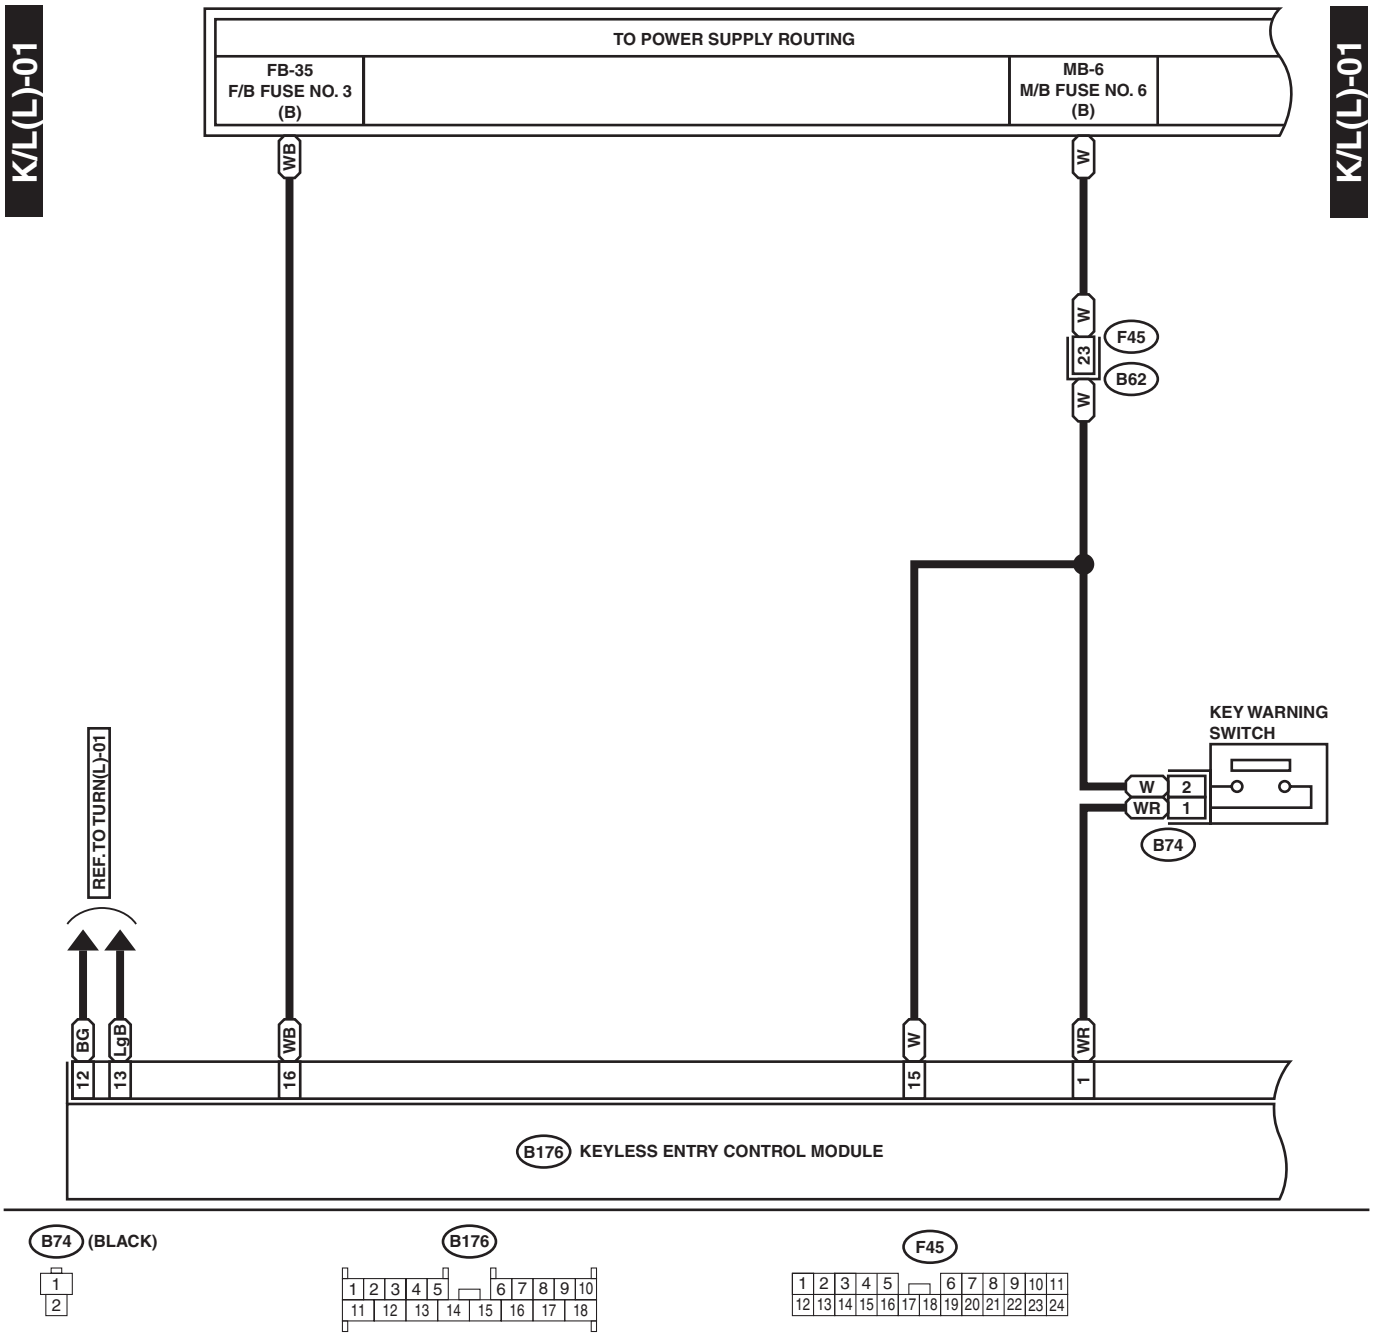

WI-02375

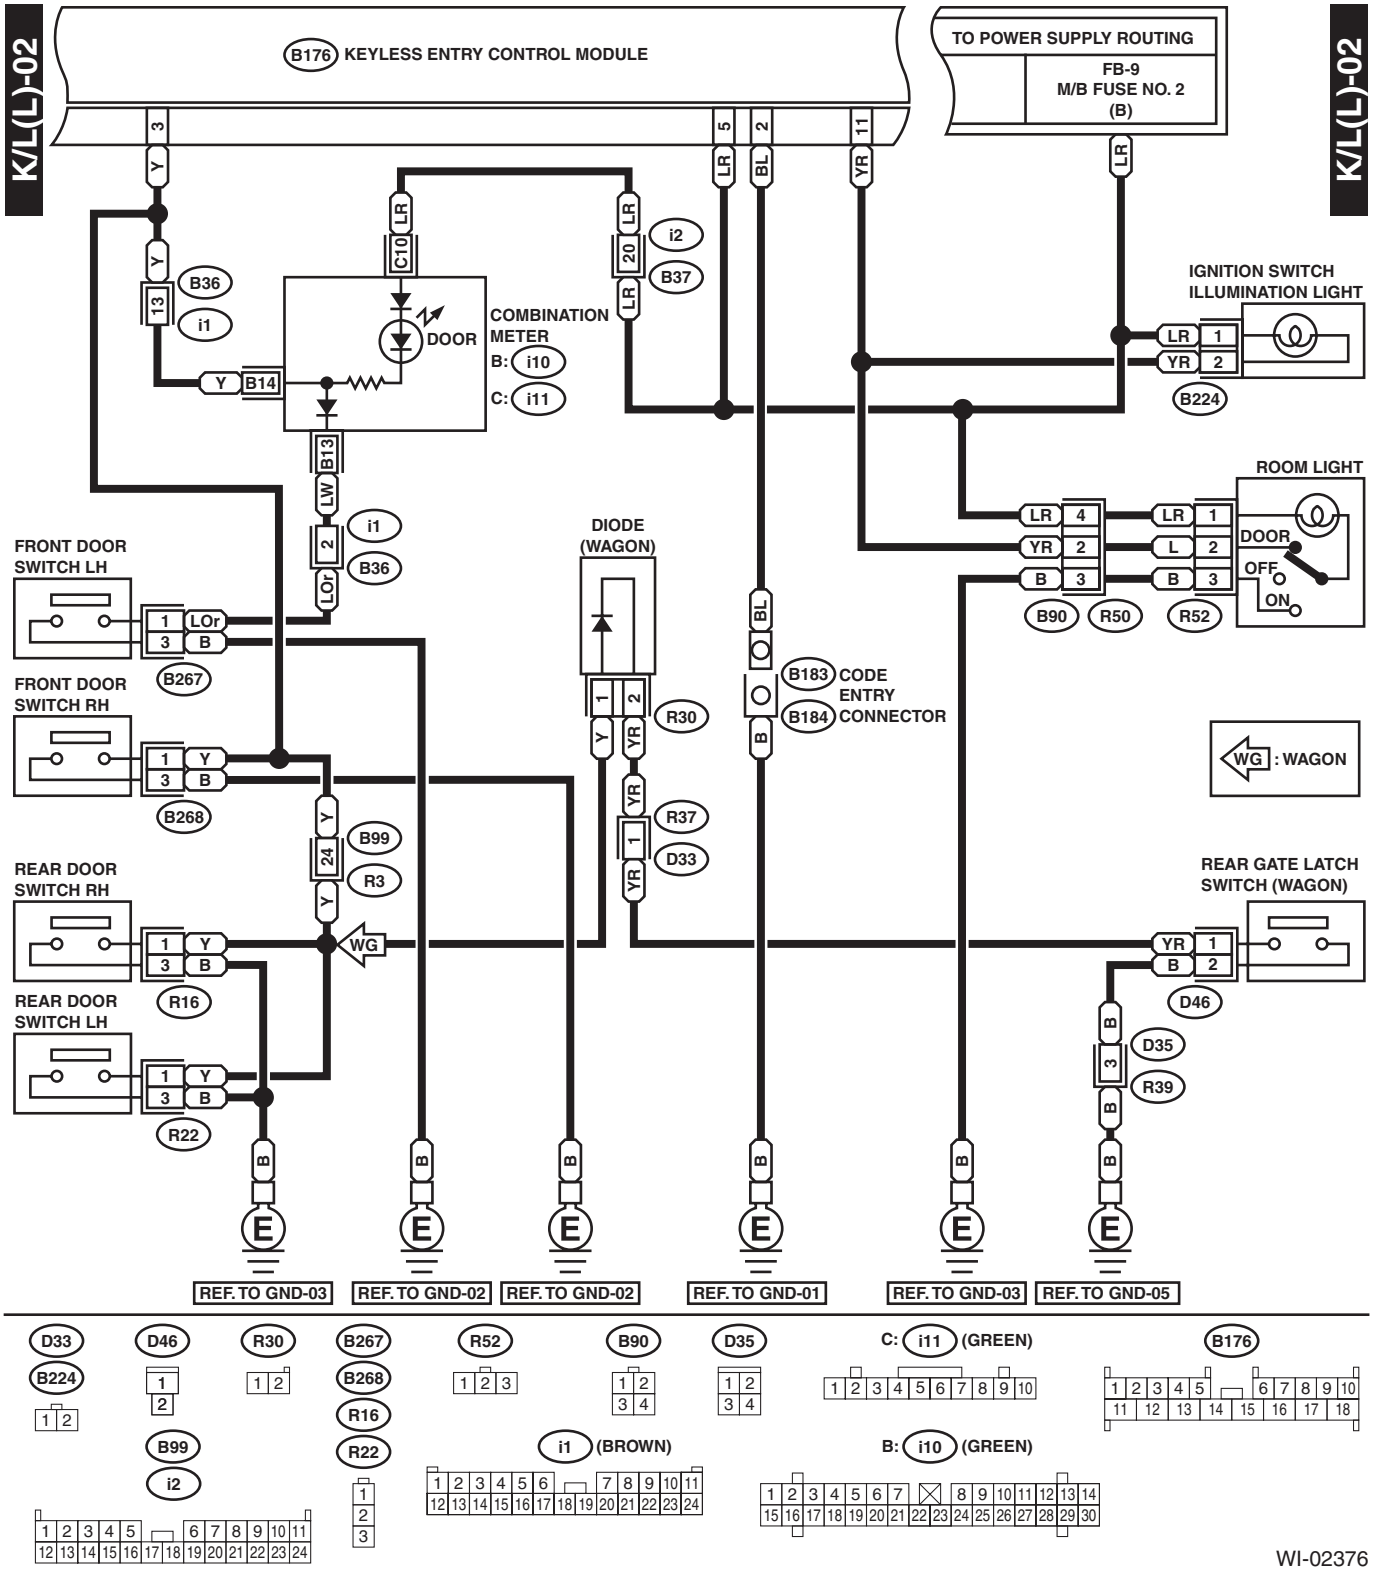
K/L(L)-02
B176 KEYLESS ENTRY CONTROL MODULE
TO POWER SUPPLY ROUTING
FB-9
M/B FUSE NO. 2
(B)
COMBINATION METER
DOOR
B: i10
C: i11
IGNITION SWITCH ILLUMINATION LIGHT
ROOM LIGHT
DOOR
OFF
ON
FRONT DOOR SWITCH LH
FRONT DOOR SWITCH RH
REAR DOOR SWITCH RH
REAR DOOR SWITCH LH
DIODE (WAGON)
B183 CODE ENTRY
B184 CONNECTOR
REAR GATE LATCH SWITCH (WAGON)
WG : WAGON
REF. TO GND-03
REF. TO GND-02
REF. TO GND-02
REF. TO GND-01
REF. TO GND-03
REF. TO GND-05
C: i11 (GREEN)
B: i10 (GREEN)
i1 (BROWN)

WI-02376

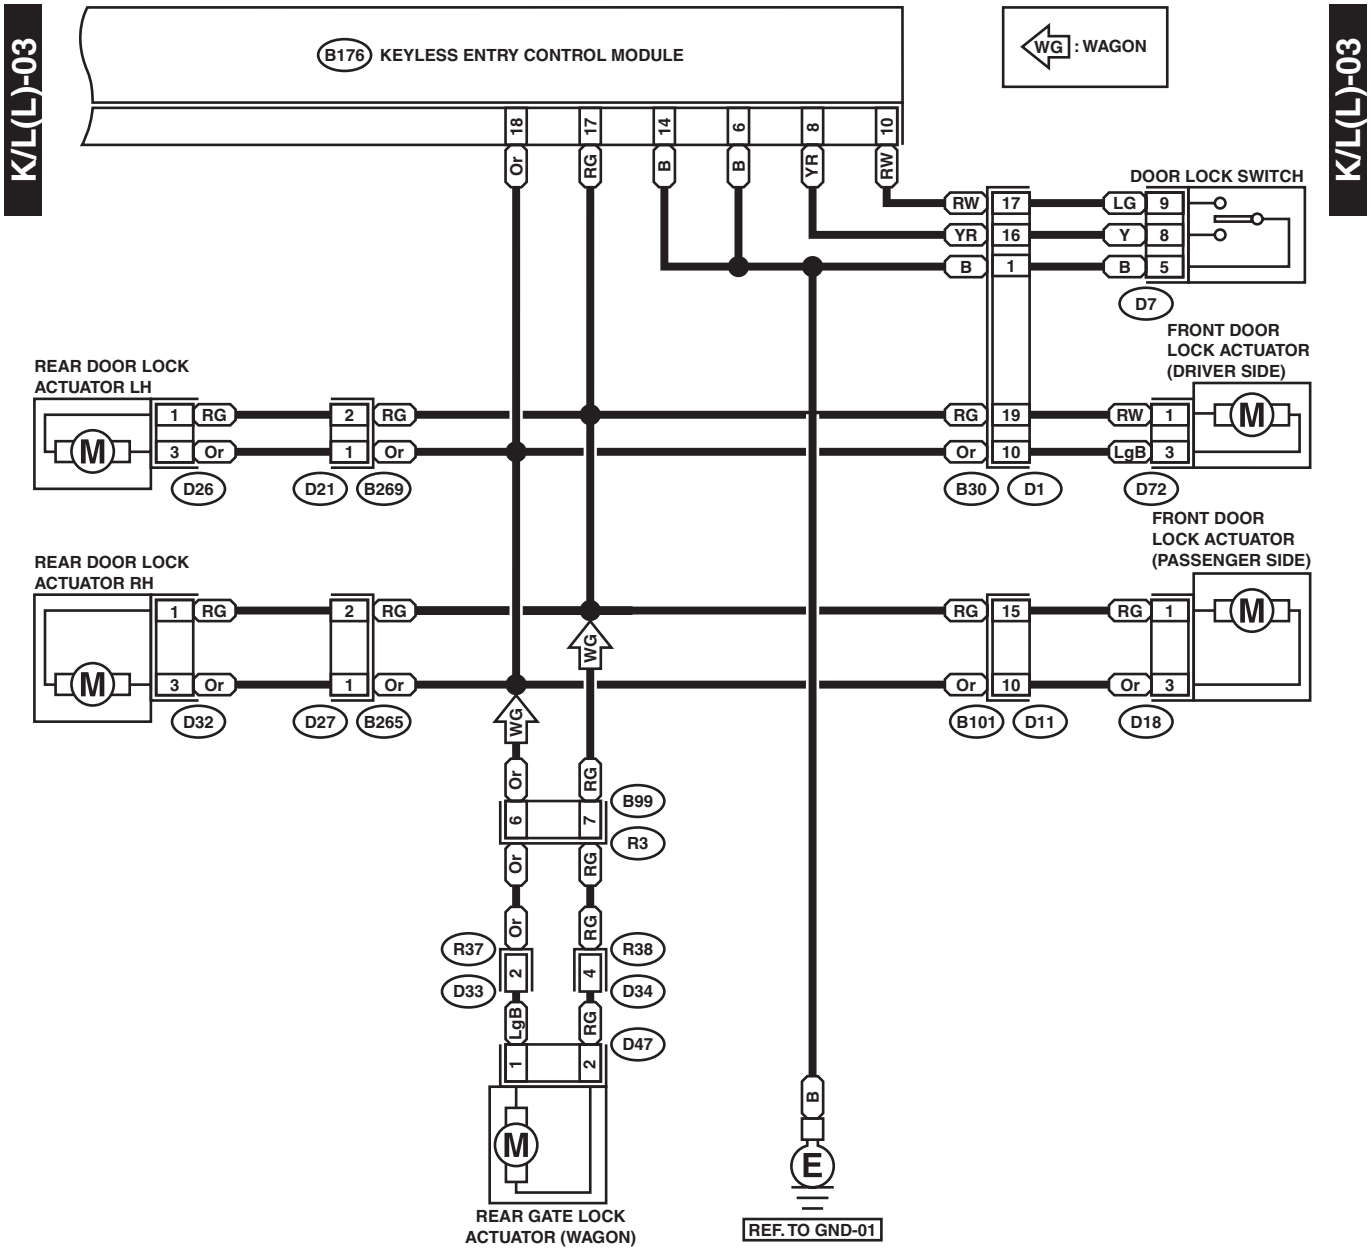
K/L(L)-03
K/L(L)-03
B176 KEYLESS ENTRY CONTROL MODULE
WG : WAGON
DOOR LOCK SWITCH
D7
REAR DOOR LOCK ACTUATOR LH
D26
D21
B269
FRONT DOOR LOCK ACTUATOR (DRIVER SIDE)
B30
D1
D72
REAR DOOR LOCK ACTUATOR RH
D32
D27
B265
FRONT DOOR LOCK ACTUATOR (PASSENGER SIDE)
B101
D11
D18
B99
R3
R37
R38
D33
D34
D47
REAR GATE LOCK ACTUATOR (WAGON)
REF. TO GND-01
D33
D47
D18
D26
D32
D72
D21
D27
D34
D7
B99
B176
D1
D11

WI-02377

2. RHD WITHOUT DOUBLE LOCK MODEL

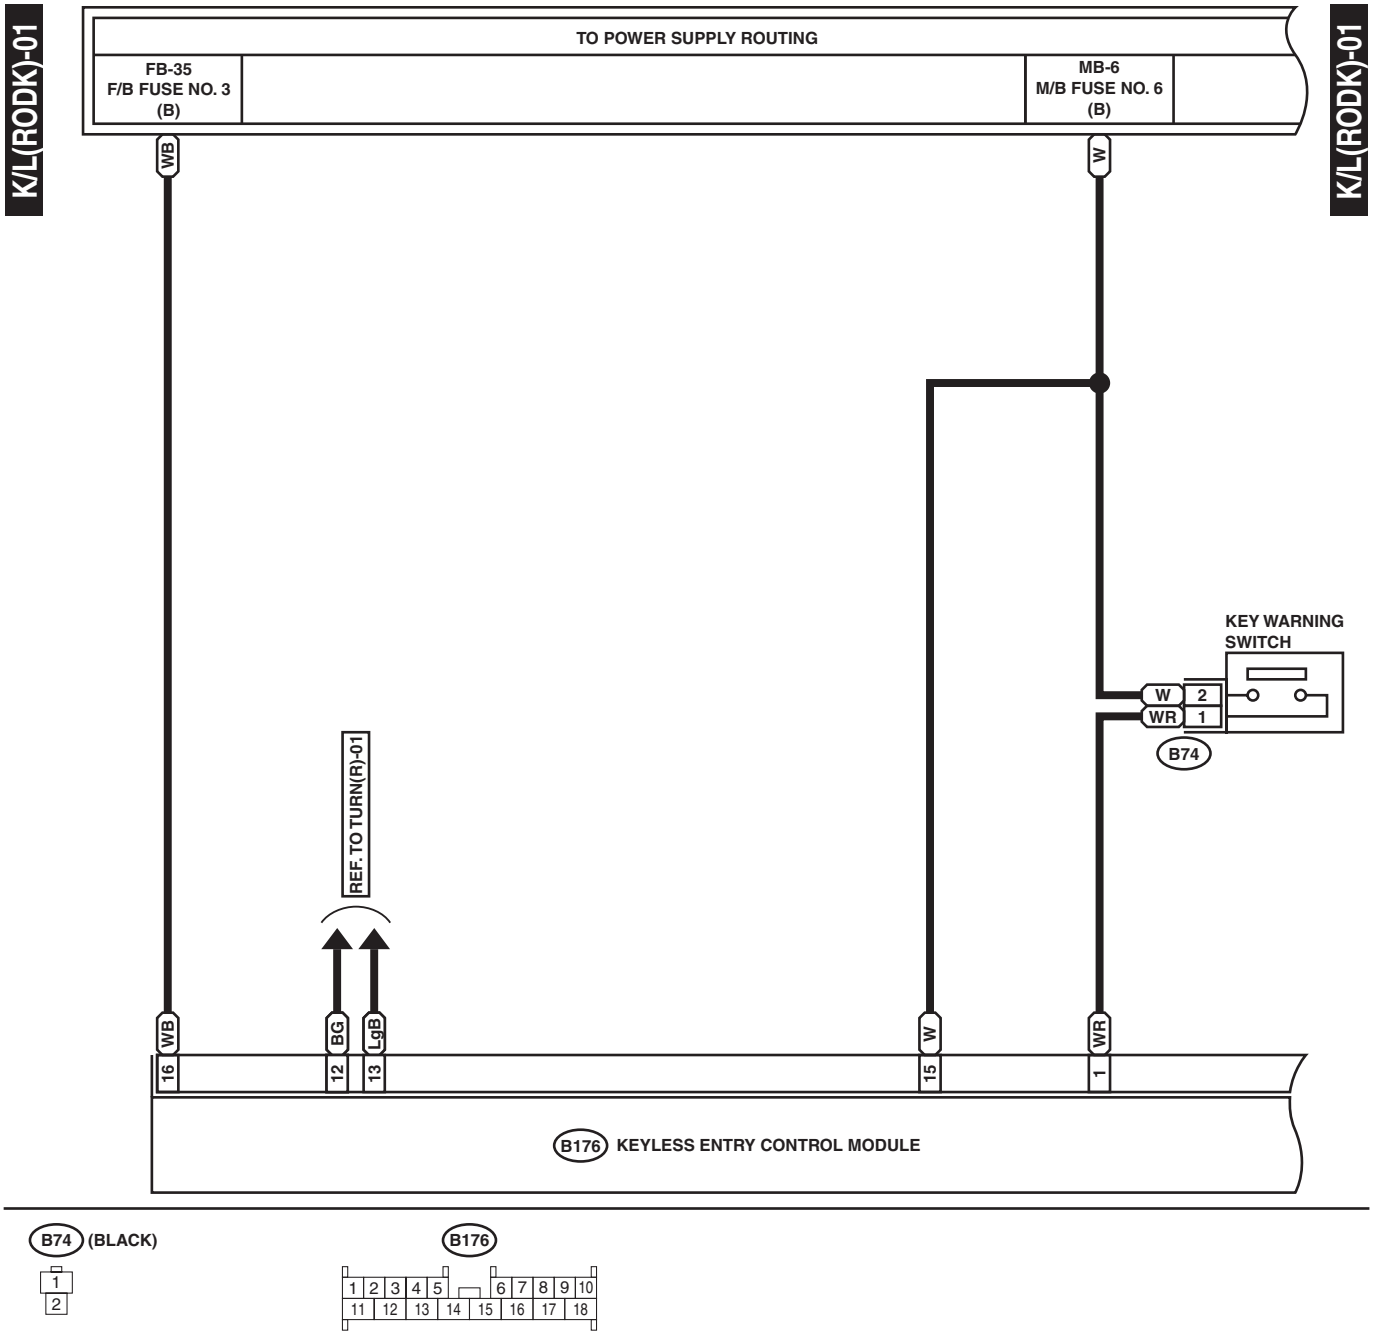

WI-02378

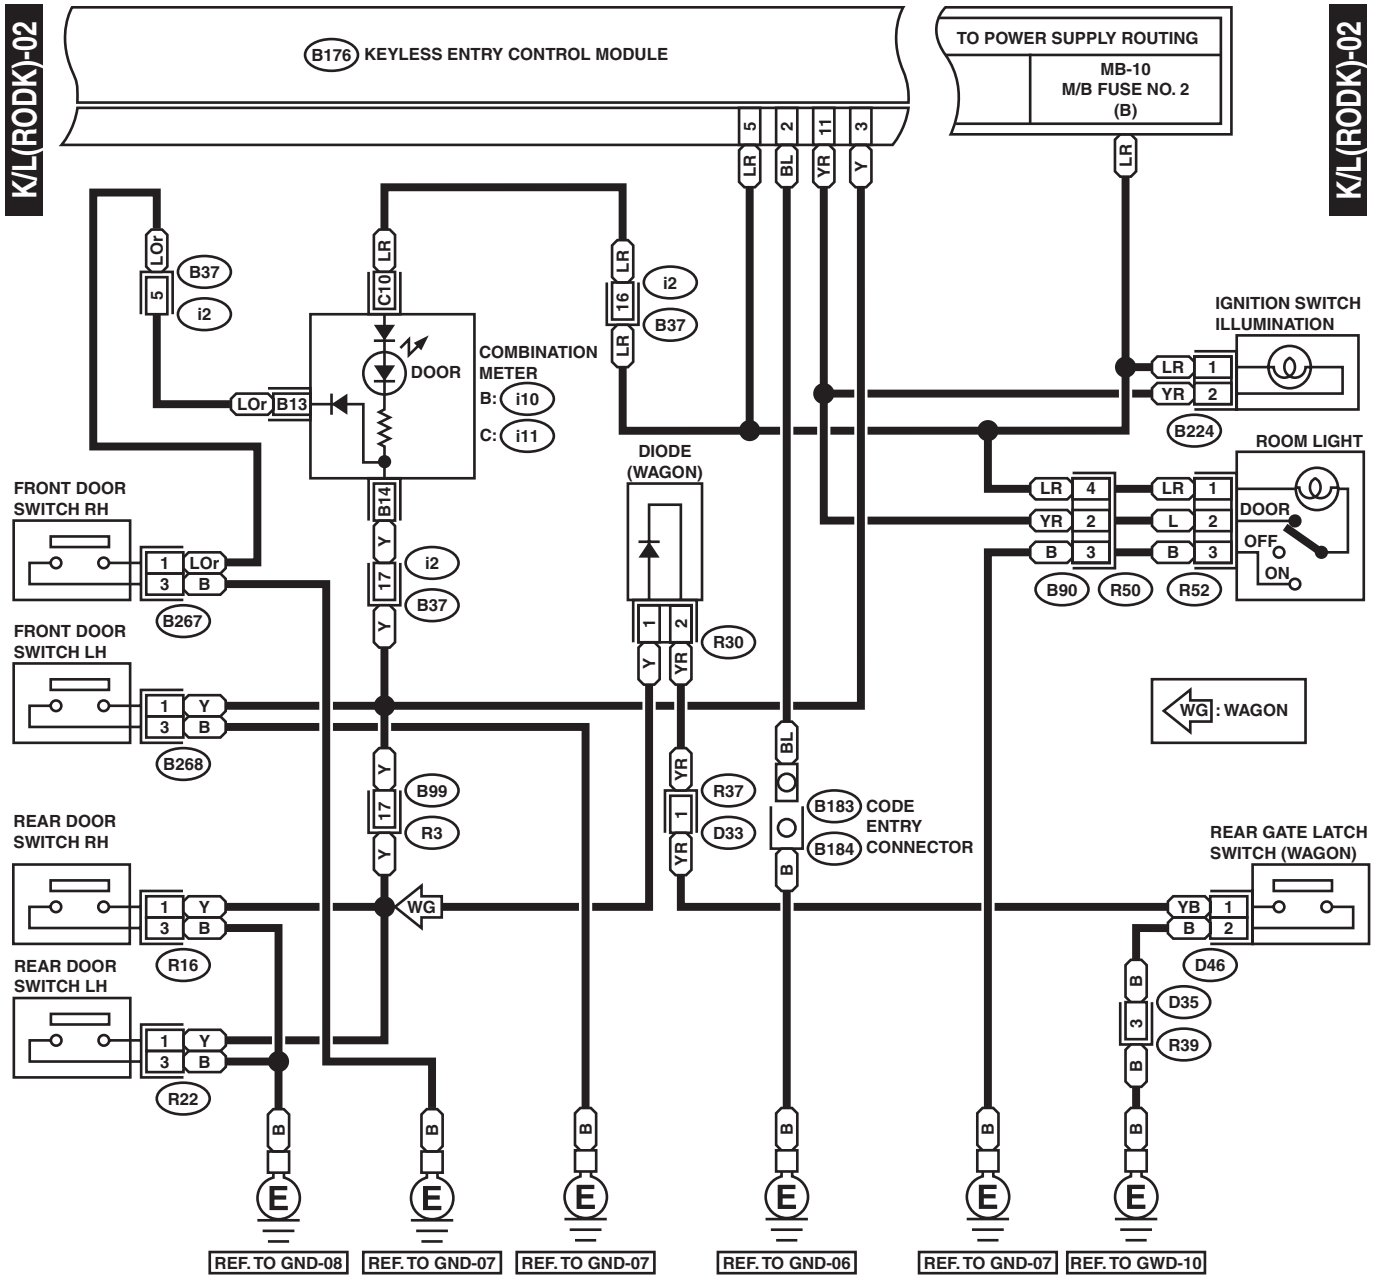
K/L(RODK)-02
B176 KEYLESS ENTRY CONTROL MODULE
TO POWER SUPPLY ROUTING
MB-10
M/B FUSE NO. 2
(B)
K/L(RODK)-02
COMBINATION METER
B: i10
C: i11
DOOR
IGNITION SWITCH ILLUMINATION
ROOM LIGHT
DOOR
OFF
ON
DIODE (WAGON)
FRONT DOOR SWITCH RH
FRONT DOOR SWITCH LH
REAR DOOR SWITCH RH
REAR DOOR SWITCH LH
REAR GATE LATCH SWITCH (WAGON)
B183 CODE ENTRY CONNECTOR
B184
WG : WAGON
REF. TO GND-08
REF. TO GND-07
REF. TO GND-07
REF. TO GND-06
REF. TO GND-07
REF. TO GWD-10

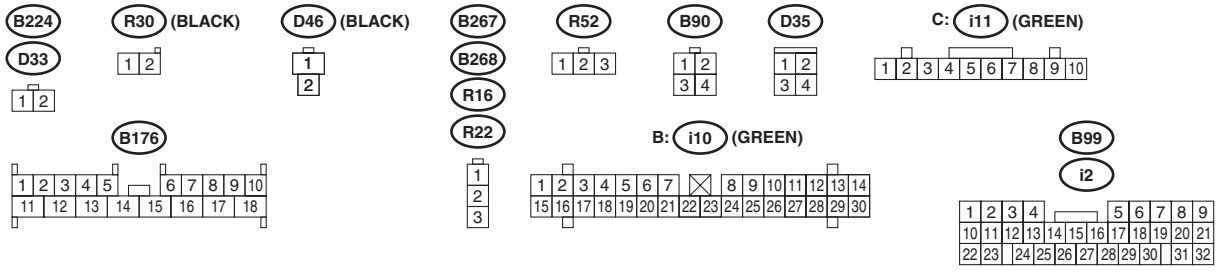
B224
D33
R30 (BLACK)
D46 (BLACK)
B267
B268
R16
R22
R52
B90
D35
C: i11 (GREEN)
B176
B: i10 (GREEN)
B99
i2

WI-02379

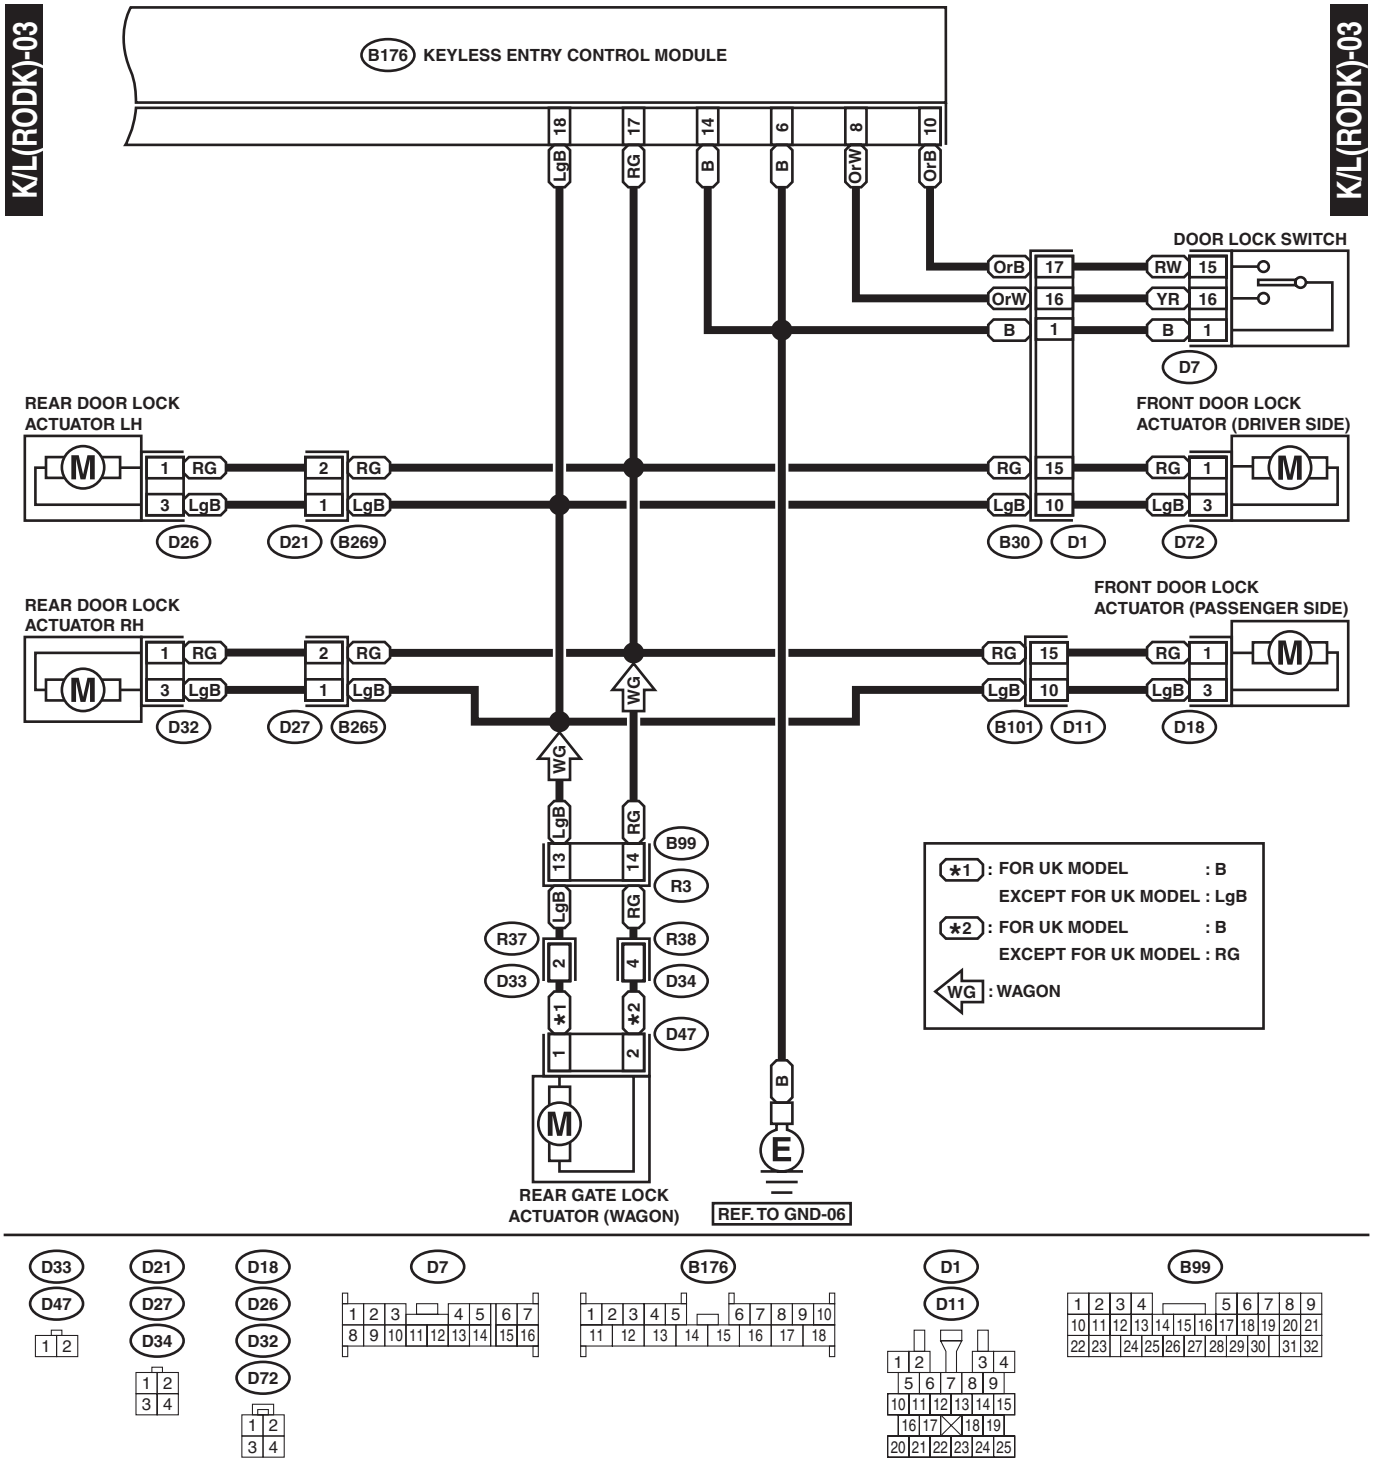
K/L(RODK)-03
K/L(RODK)-03
B176 KEYLESS ENTRY CONTROL MODULE
18 17 14 6 8 10
LgB RG B B OrW OrB
DOOR LOCK SWITCH
OrB 17
OrW 16
B 1
RW 15
YR 16
B 1
D7
REAR DOOR LOCK ACTUATOR LH
1 RG
3 LgB
2 RG
1 LgB
D26 D21 B269
FRONT DOOR LOCK ACTUATOR (DRIVER SIDE)
RG 15
LgB 10
RG 1
LgB 3
B30 D1 D72
REAR DOOR LOCK ACTUATOR RH
1 RG
3 LgB
2 RG
1 LgB
D32 D27 B265
FRONT DOOR LOCK ACTUATOR (PASSENGER SIDE)
RG 15
LgB 10
RG 1
LgB 3
B101 D11 D18
WG
LgB RG
13 14
B99
R3
R37 R38
D33 D34
2 4
*1 *2
D47
1 2
REAR GATE LOCK ACTUATOR (WAGON)
B
E
REF. TO GND-06
*1 : FOR UK MODEL : B
EXCEPT FOR UK MODEL : LgB
*2 : FOR UK MODEL : B
EXCEPT FOR UK MODEL : RG
WG : WAGON

D33
D47
D21
D27
D34
D18
D26
D32
D72
D7
B176
D1
D11
B99

WI-02380

3. RHD WITH DOUBLE LOCK MODEL

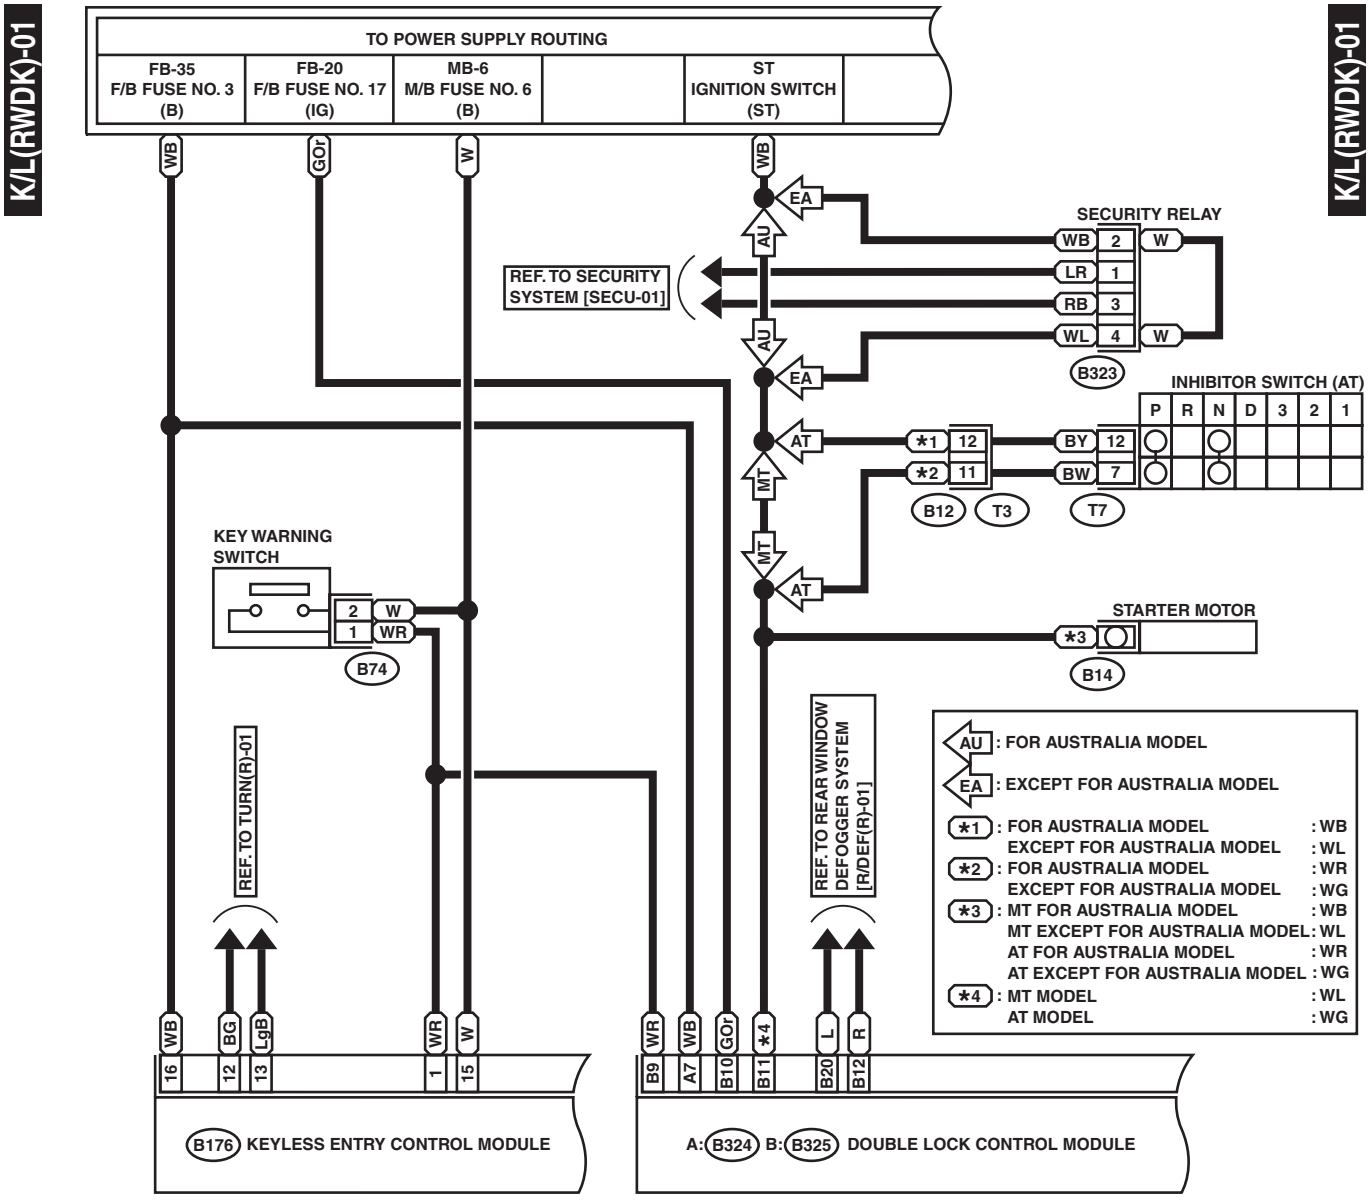

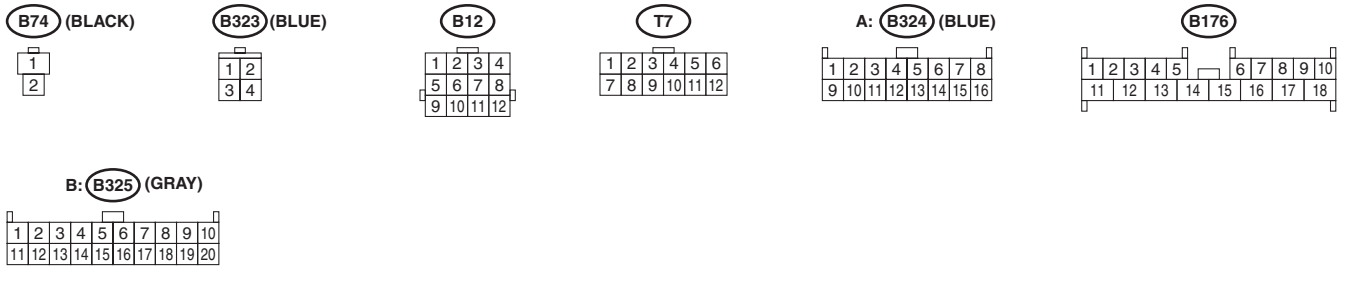

WI-02571

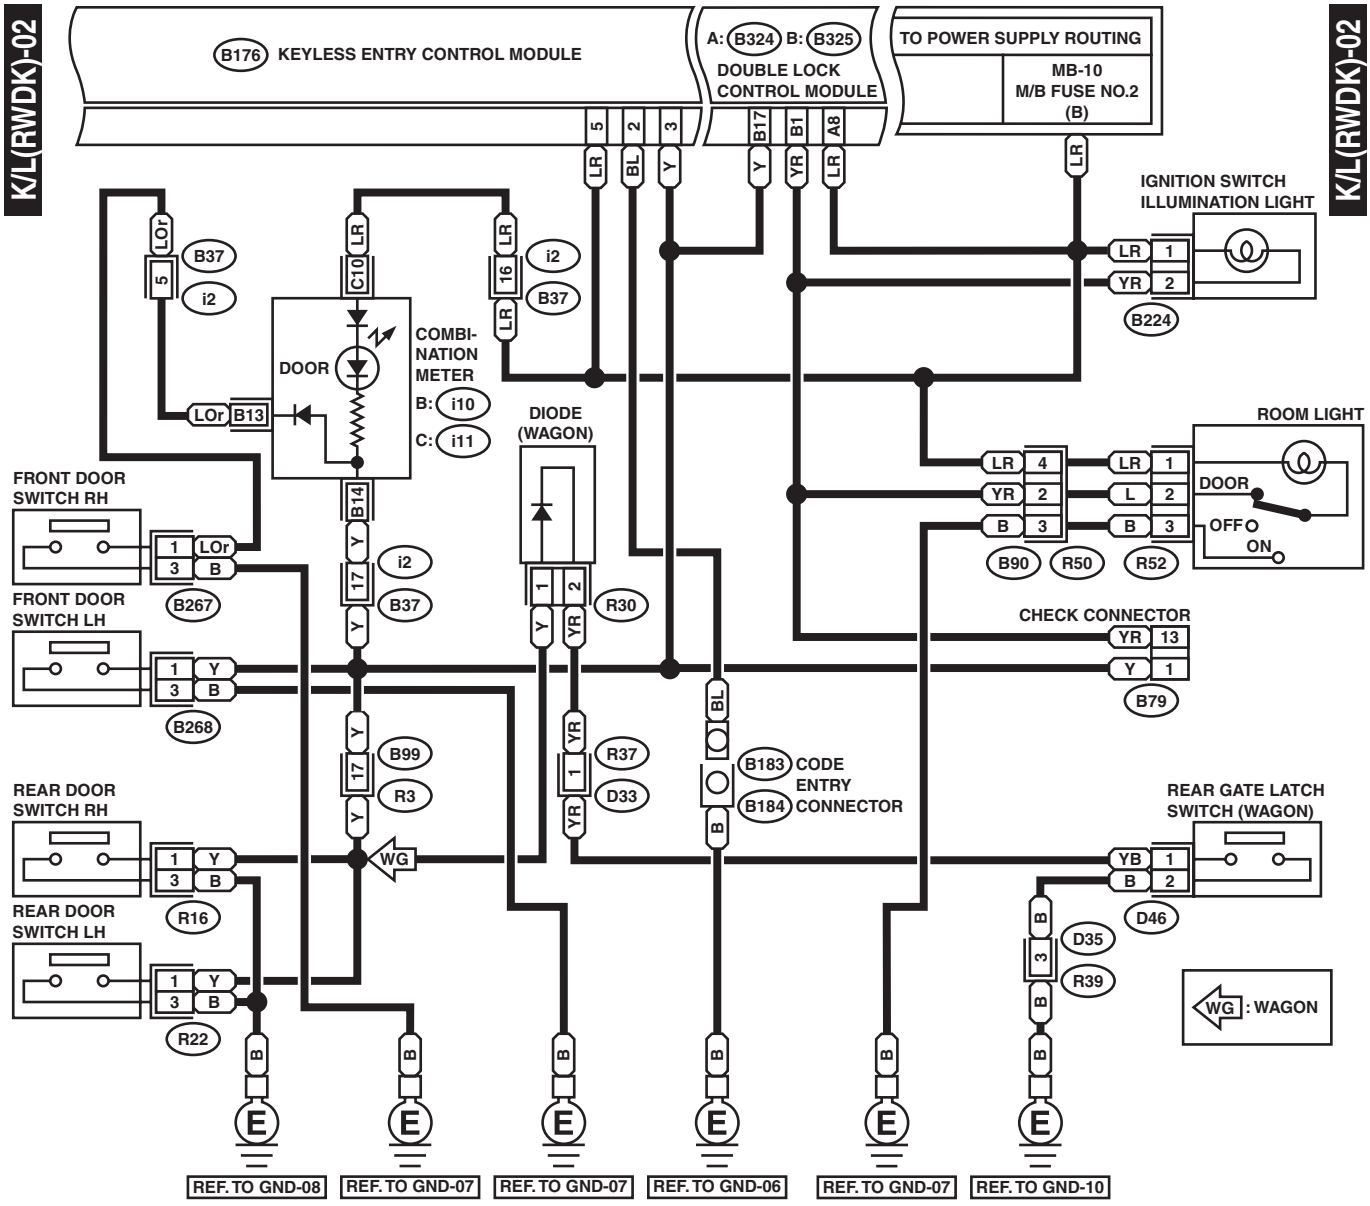
K/L(RWDK)-02
K/L(RWDK)-02
B176 KEYLESS ENTRY CONTROL MODULE
A: B324 B: B325
DOUBLE LOCK CONTROL MODULE
TO POWER SUPPLY ROUTING
MB-10 M/B FUSE NO.2 (B)
IGNITION SWITCH ILLUMINATION LIGHT
B224
COMBI-NATION METER
B: i10
C: i11
DOOR
DIODE (WAGON)
ROOM LIGHT
DOOR
OFF
ON
B90
R50
R52
FRONT DOOR SWITCH RH
B267
FRONT DOOR SWITCH LH
B268
CHECK CONNECTOR
B79
B99
R3
R37
D33
B183 CODE ENTRY
B184 CONNECTOR
REAR DOOR SWITCH RH
R16
REAR DOOR SWITCH LH
R22
REAR GATE LATCH SWITCH (WAGON)
D46
D35
R39
WG : WAGON
REF. TO GND-08
REF. TO GND-07
REF. TO GND-07
REF. TO GND-06
REF. TO GND-07
REF. TO GND-10

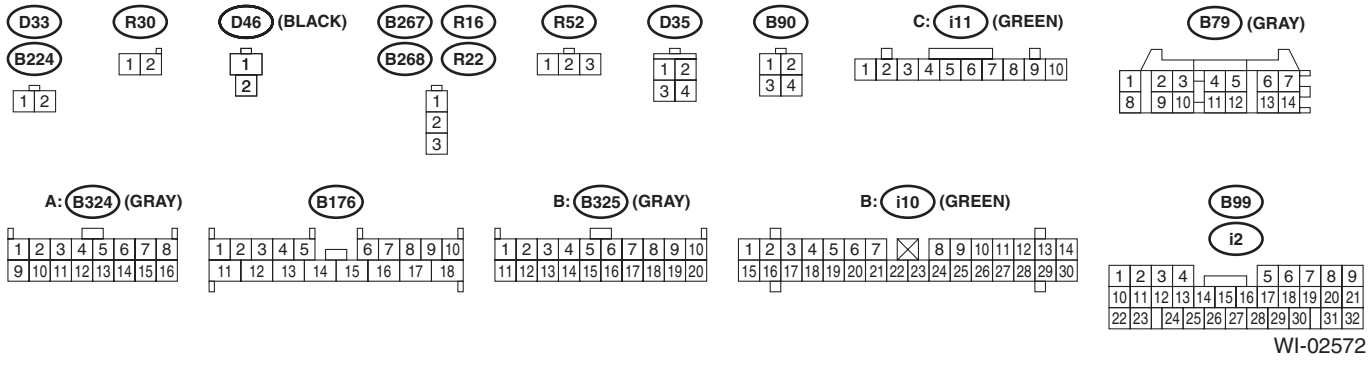
D33
B224
R30
D46 (BLACK)
B267
B268
R16
R22
R52
D35
B90
C: i11 (GREEN)
B79 (GRAY)
A: B324 (GRAY)
B176
B: B325 (GRAY)
B: i10 (GREEN)
B99
i2

WI-02572

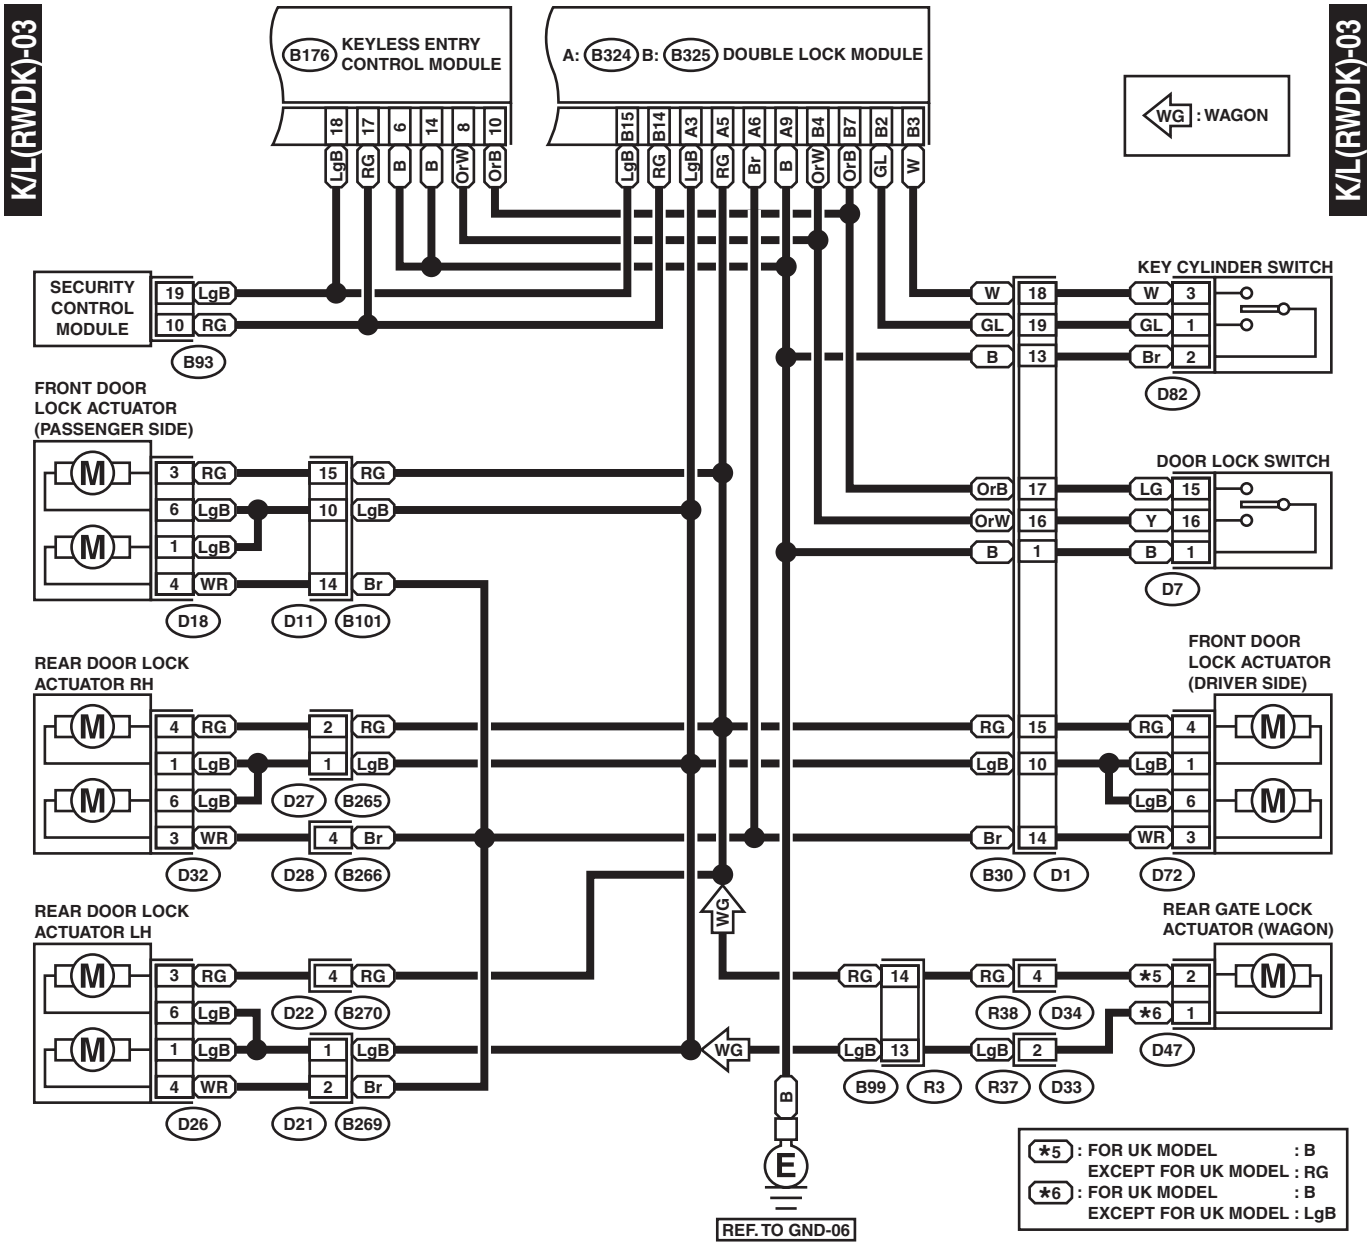
K/L(RWDK)-03
K/L(RWDK)-03
B176 KEYLESS ENTRY CONTROL MODULE
A: B324 B: B325 DOUBLE LOCK MODULE
WG : WAGON
SECURITY CONTROL MODULE
B93
KEY CYLINDER SWITCH
D82
FRONT DOOR LOCK ACTUATOR (PASSENGER SIDE)
D18
D11
B101
DOOR LOCK SWITCH
D7
REAR DOOR LOCK ACTUATOR RH
D27
B265
D32
D28
B266
FRONT DOOR LOCK ACTUATOR (DRIVER SIDE)
B30
D1
D72
REAR DOOR LOCK ACTUATOR LH
D22
B270
D26
D21
B269
REAR GATE LOCK ACTUATOR (WAGON)
R38
D34
D47
B99
R3
R37
D33
REF. TO GND-06
*5 : FOR UK MODEL : B
EXCEPT FOR UK MODEL : RG
*6 : FOR UK MODEL : B
EXCEPT FOR UK MODEL : LgB

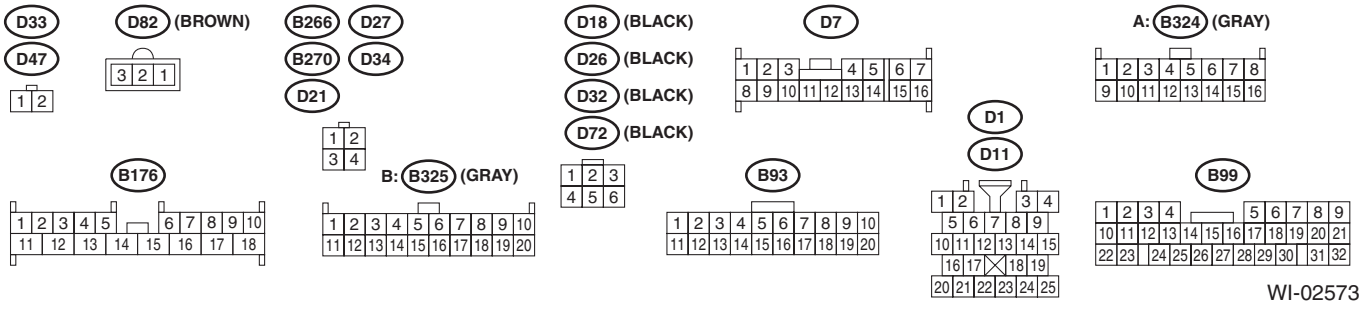
D33
D47
D82 (BROWN)
B266
D27
B270
D34
D21
D18 (BLACK)
D26 (BLACK)
D32 (BLACK)
D72 (BLACK)
D7
A: B324 (GRAY)
B176
B: B325 (GRAY)
B93
D1
D11
B99

WI-02573

22.Back-up Light System

A: SCHEMATIC

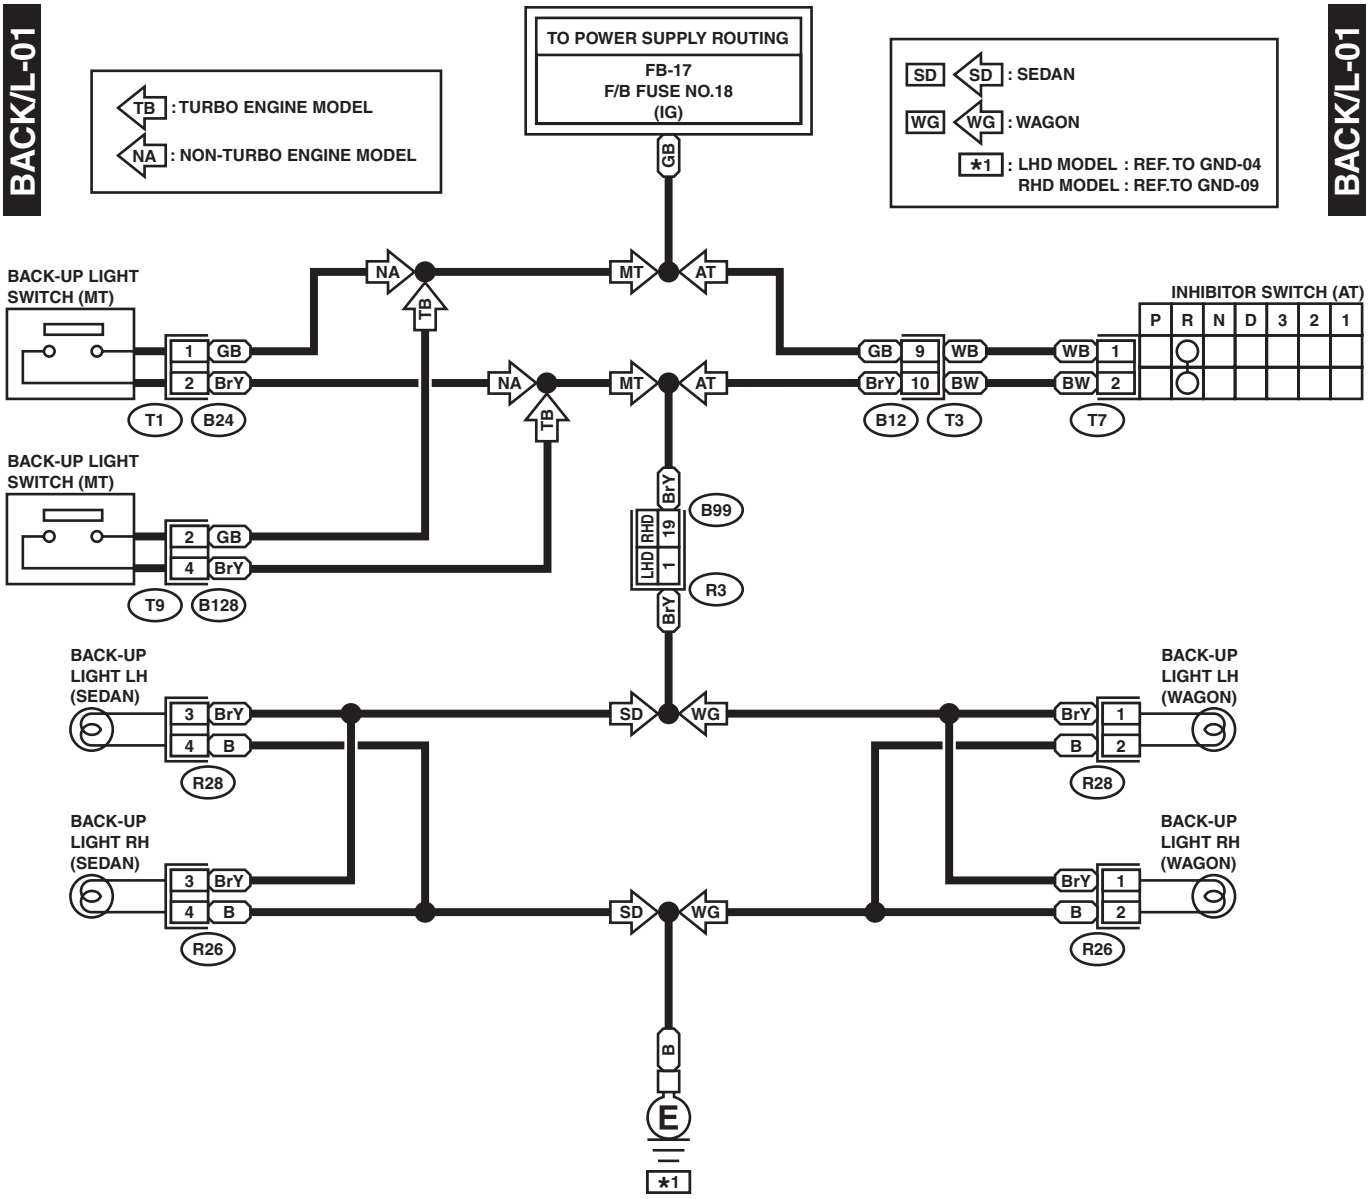

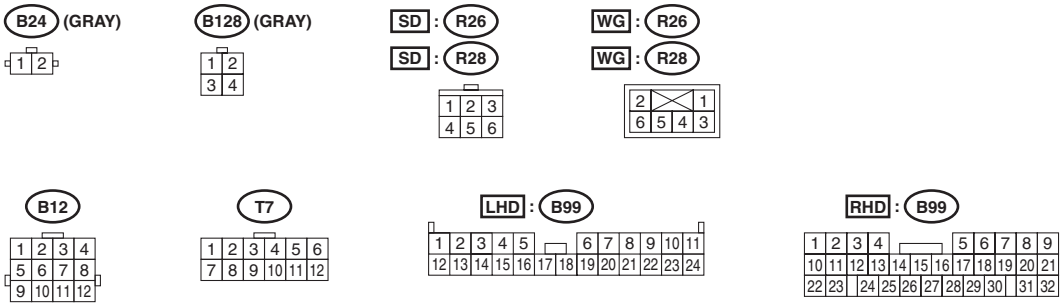

WI-02381

23.Clearance Light and Illumination Light System

A: SCHEMATIC

1. LHD MODEL

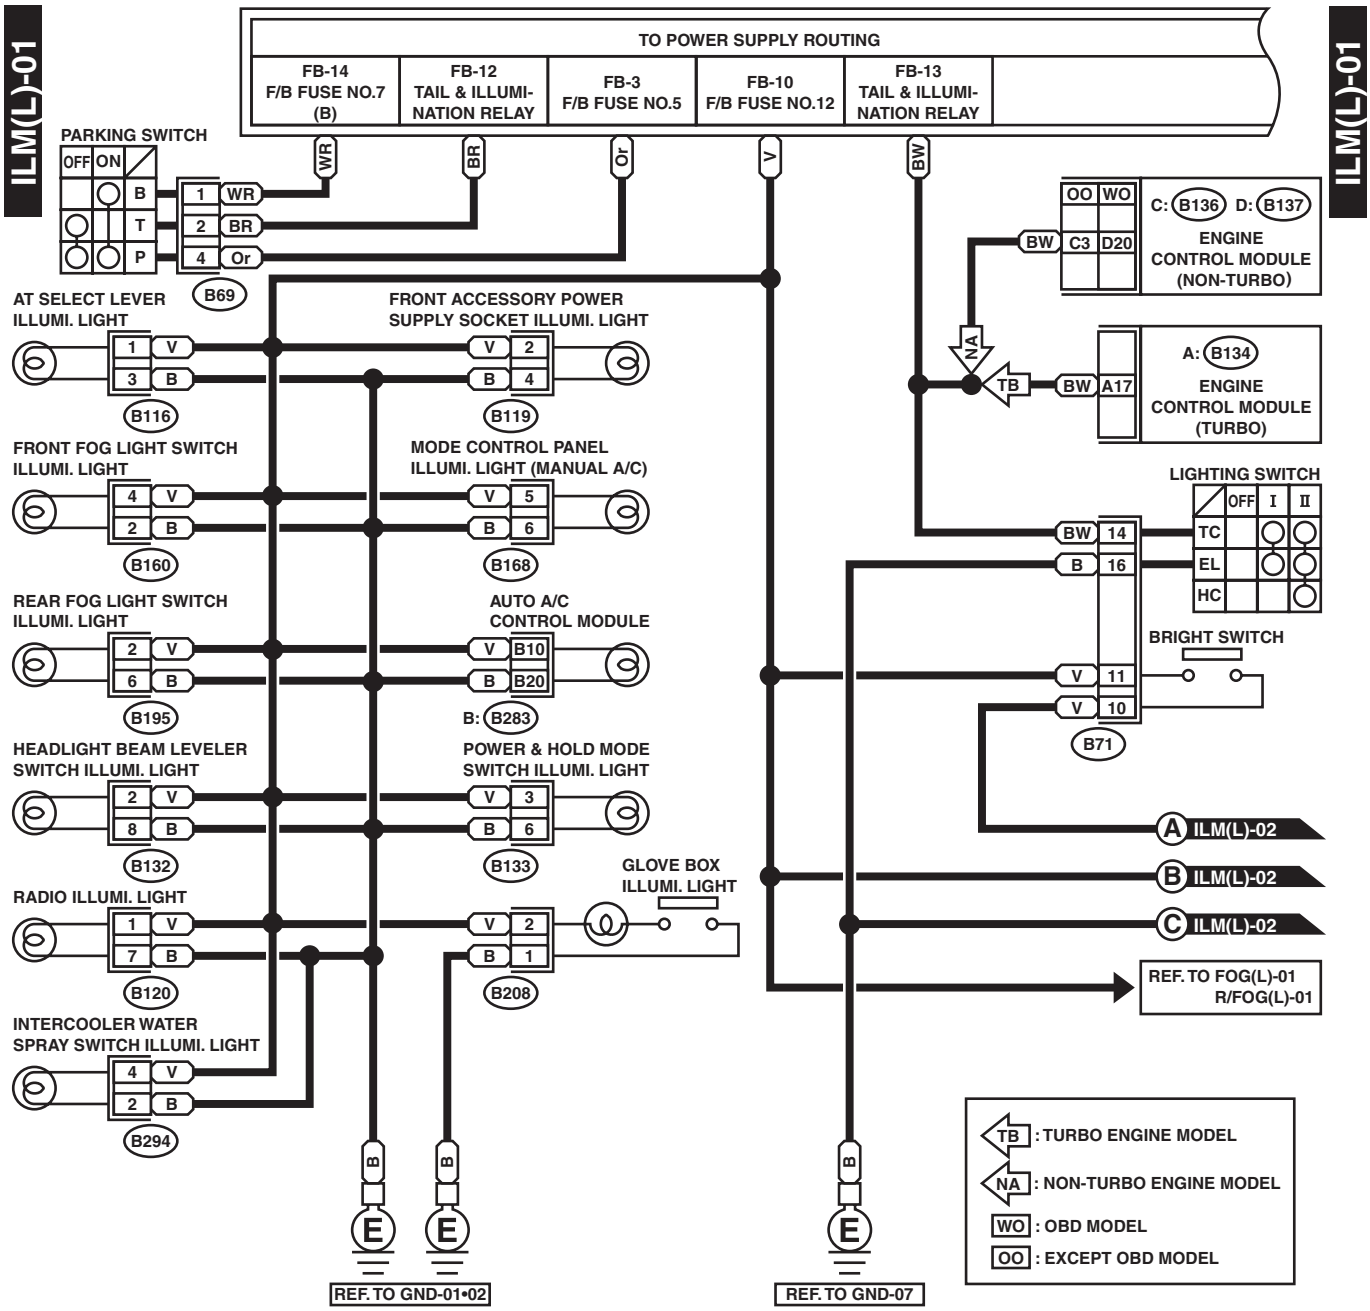

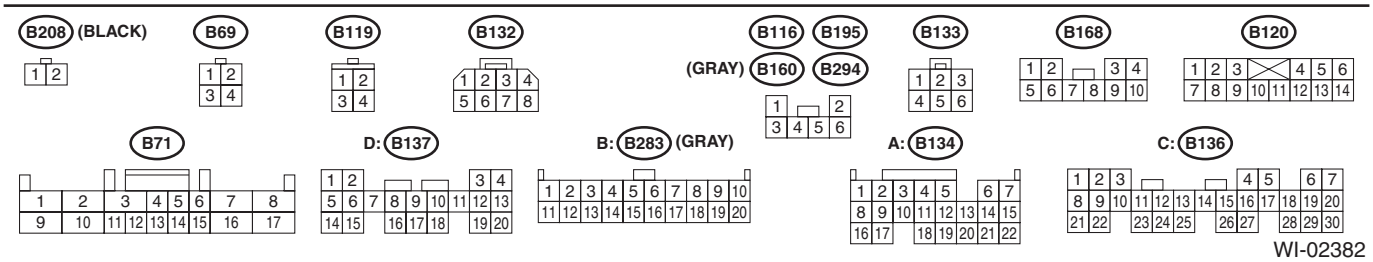

WI-02382

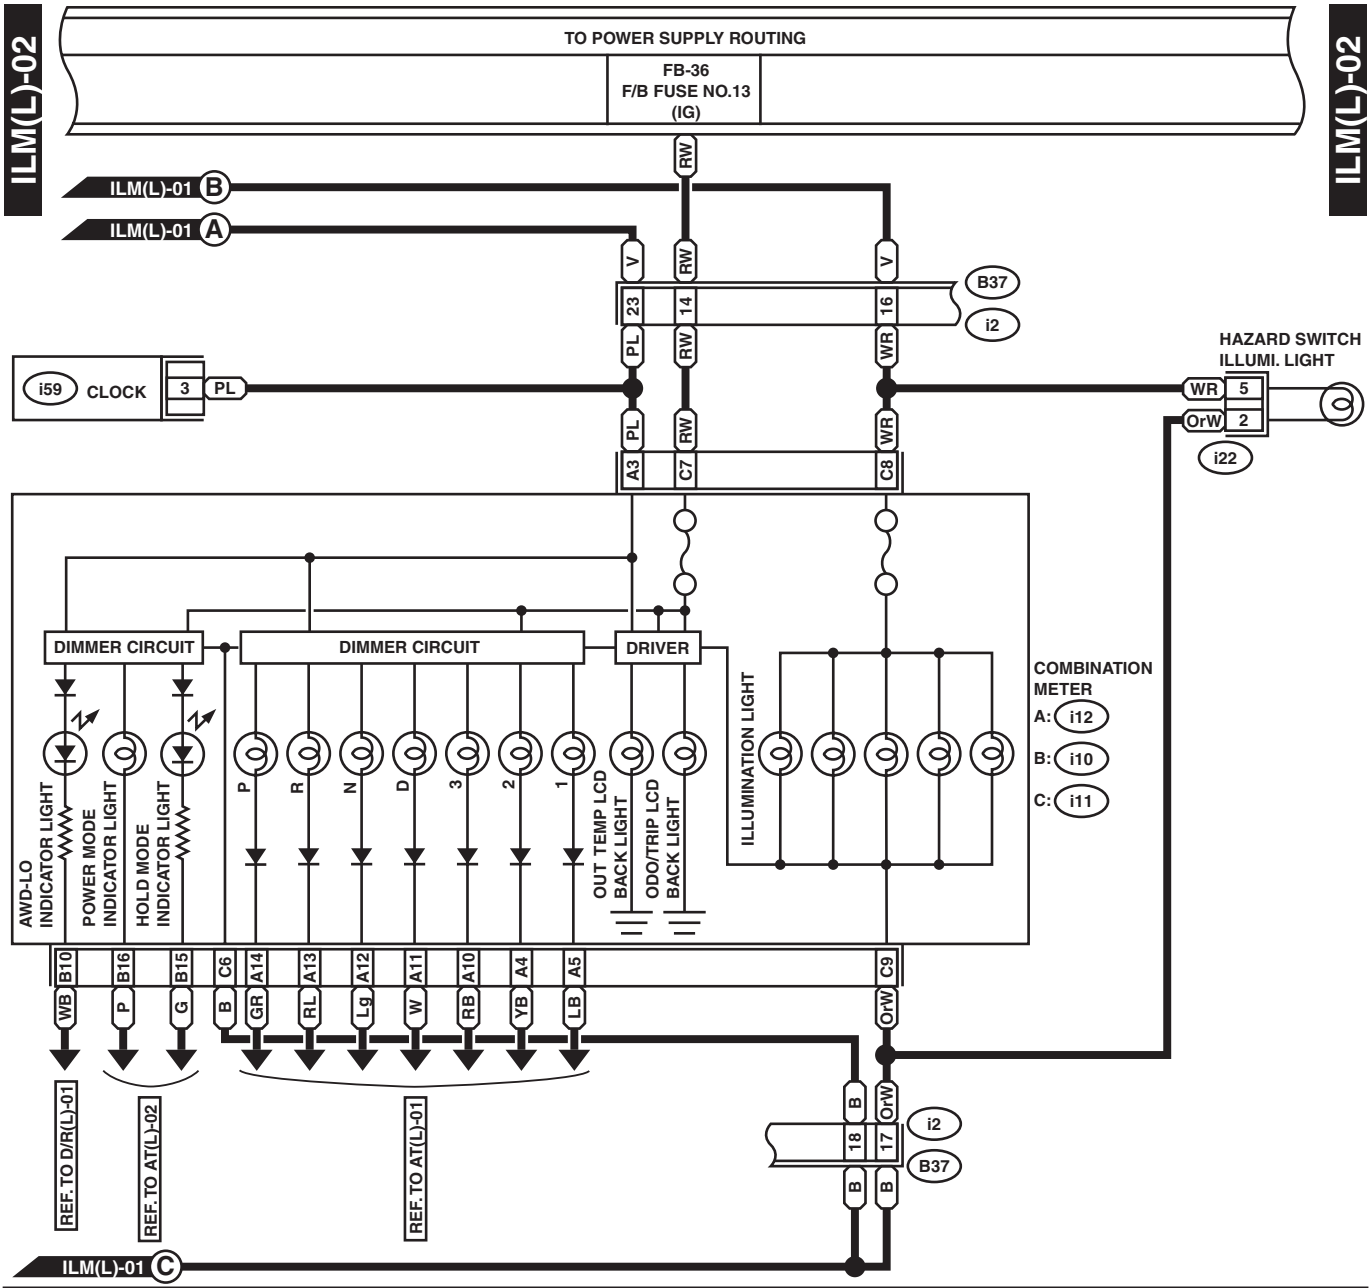
ILM(L)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO.13
(IG)
ILM(L)-01 B
ILM(L)-01 A
B37
i2
i59 CLOCK
HAZARD SWITCH
ILLUMI. LIGHT
i22
DIMMER CIRCUIT
DIMMER CIRCUIT
DRIVER
ILLUMINATION LIGHT
COMBINATION
METER
A: i12
B: i10
C: i11
AWD-LO
INDICATOR LIGHT
POWER MODE
INDICATOR LIGHT
HOLD MODE
INDICATOR LIGHT
OUT TEMP LCD
BACK LIGHT
ODO/TRIP LCD
BACK LIGHT
REF. TO D/R(L)-01
REF. TO AT(L)-02
REF. TO AT(L)-01
ILM(L)-01 C

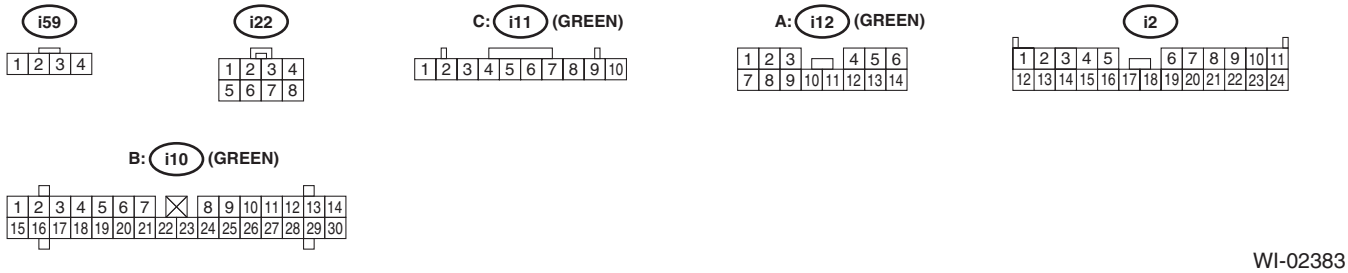
i59
i22
C: i11 (GREEN)
A: i12 (GREEN)
i2
B: i10 (GREEN)

WI-02383

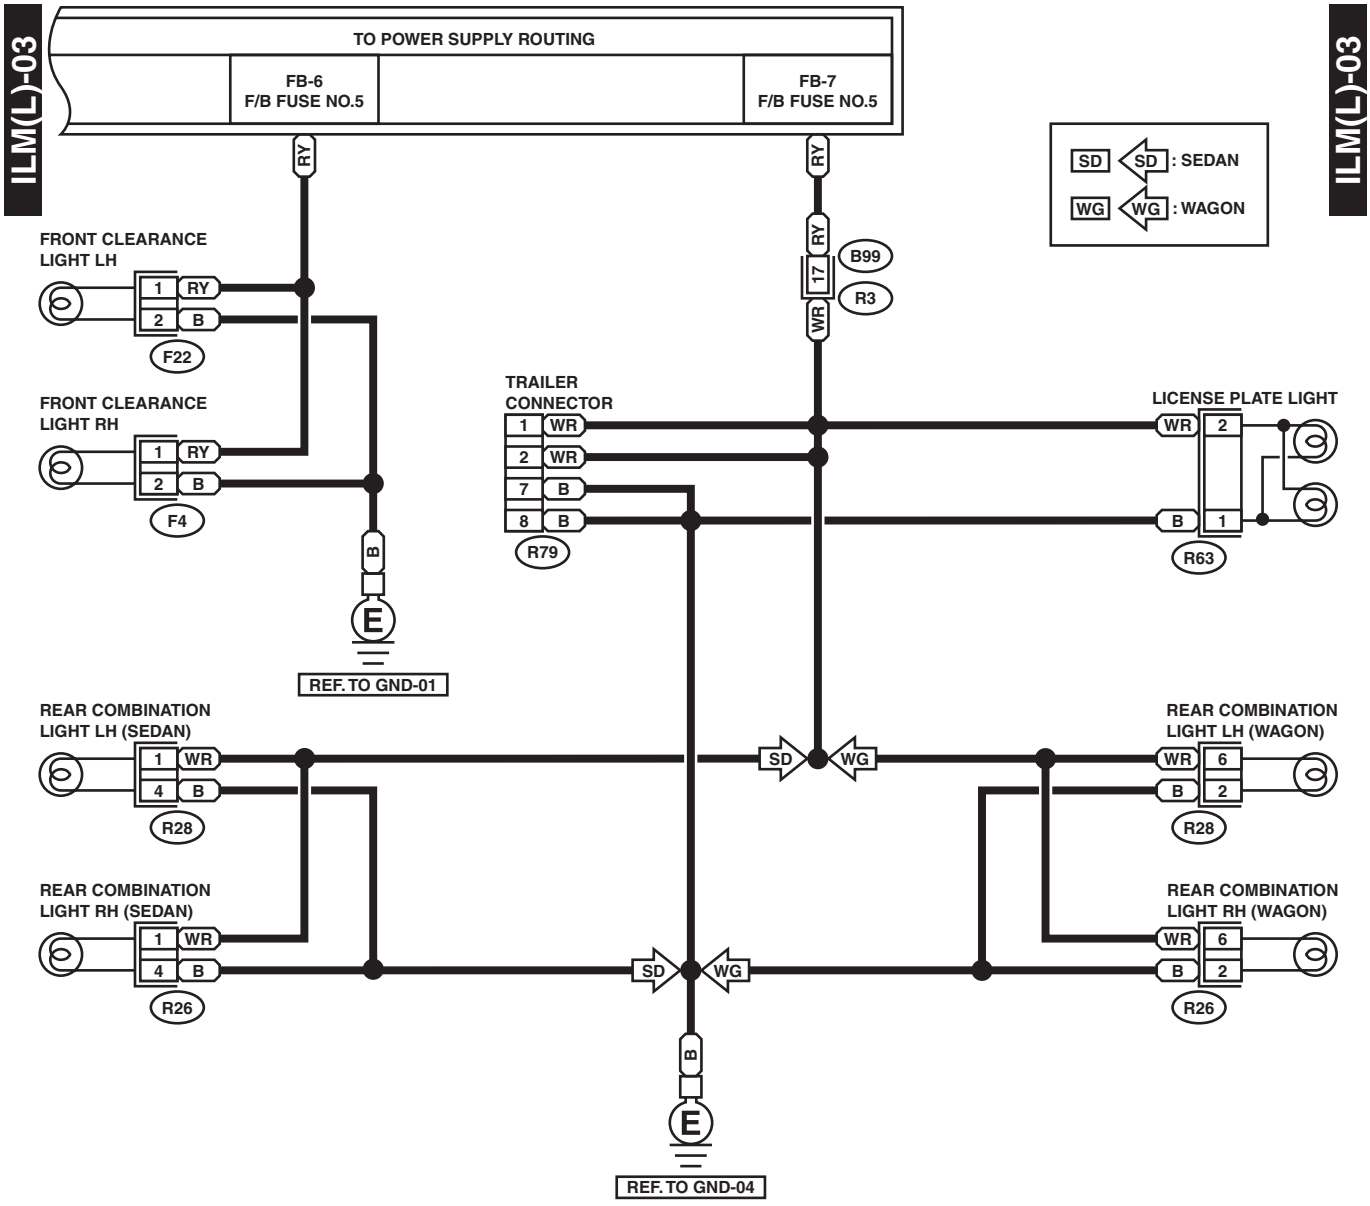
ILM(L)-03
ILM(L)-03
TO POWER SUPPLY ROUTING
FB-6
F/B FUSE NO.5
FB-7
F/B FUSE NO.5
SD : SEDAN
WG : WAGON
FRONT CLEARANCE LIGHT LH
FRONT CLEARANCE LIGHT RH
F22
F4
TRAILER CONNECTOR
R79
LICENSE PLATE LIGHT
R63
REF. TO GND-01
REAR COMBINATION LIGHT LH (SEDAN)
REAR COMBINATION LIGHT LH (WAGON)
REAR COMBINATION LIGHT RH (SEDAN)
REAR COMBINATION LIGHT RH (WAGON)
R28
R26
REF. TO GND-04
B99
R3

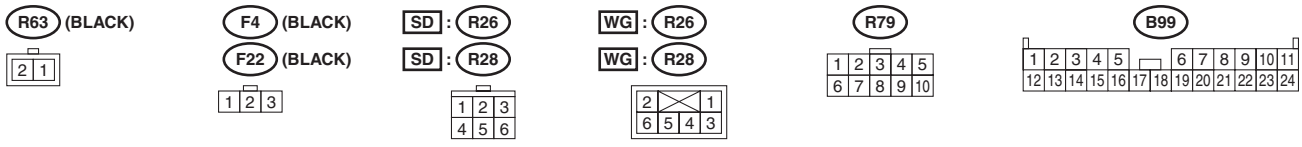
R63 (BLACK)
F4 (BLACK)
F22 (BLACK)
SD : R26
SD : R28
WG : R26
WG : R28
R79
B99

WI-02384

2. RHD WITHOUT ILLUMINATION CONTROL MODEL

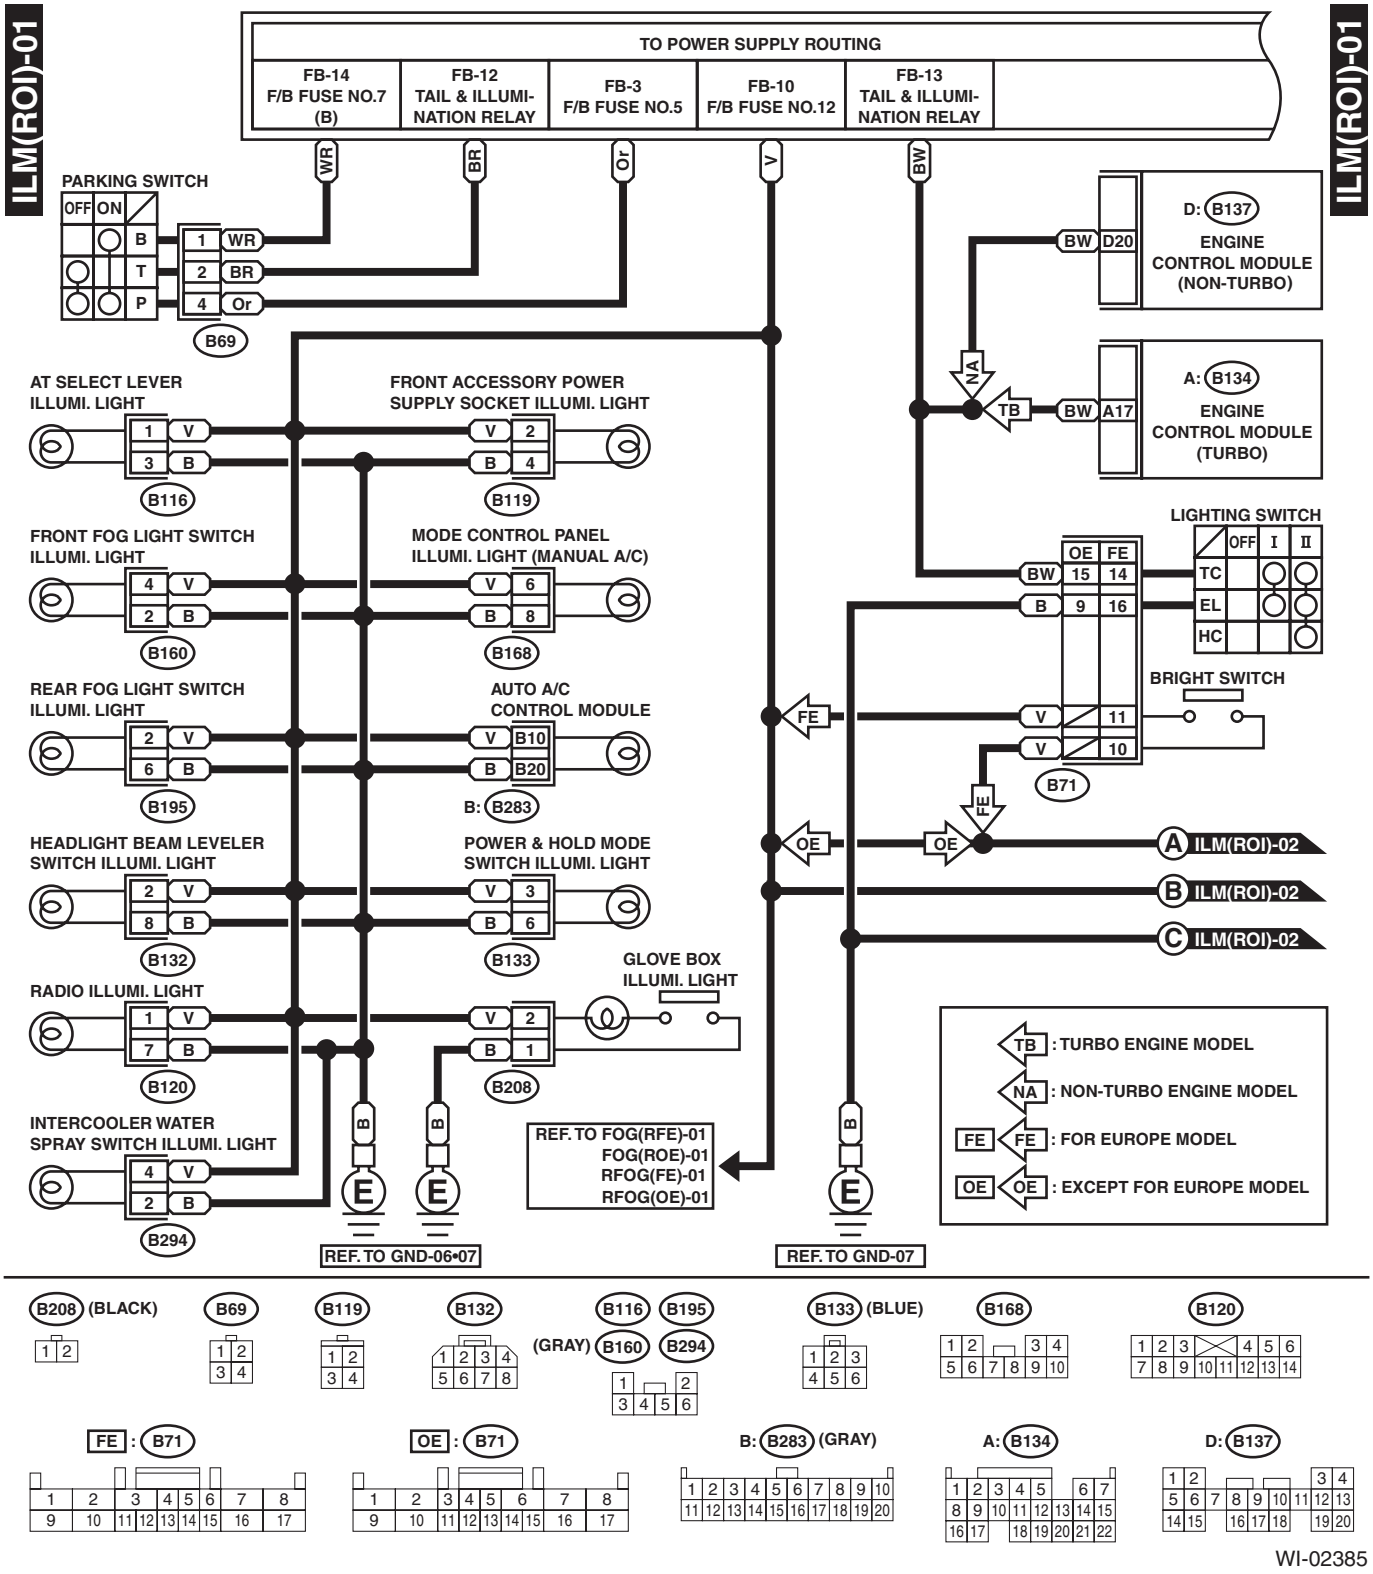

WI-02385

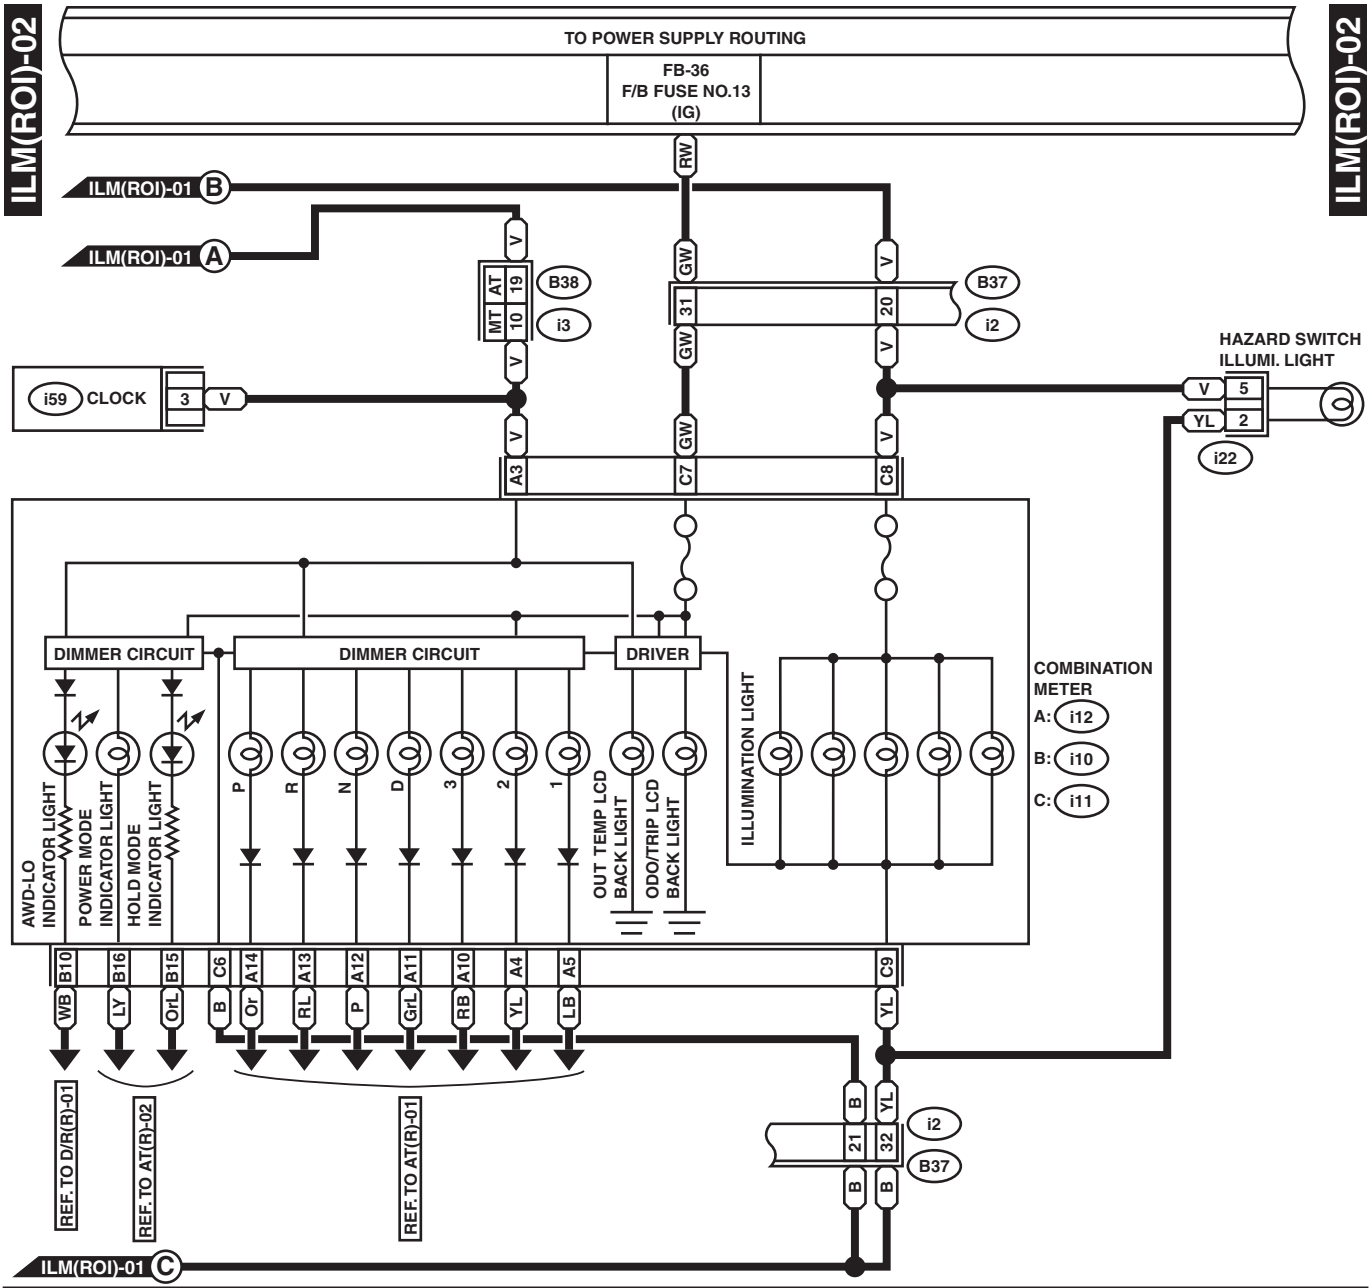
ILM(ROI)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO.13
(IG)
ILM(ROI)-02
ILM(ROI)-01 B
ILM(ROI)-01 A
RW
V
GW
B38
AT 19
MT 10
i3
B37
31
20
i2
i59 CLOCK
3
V
HAZARD SWITCH
ILLUMI. LIGHT
YL 2
5
i22
A3
C7
C8
DIMMER CIRCUIT
DIMMER CIRCUIT
DRIVER
COMBINATION
METER
A: i12
B: i10
C: i11
AWD-LO
INDICATOR LIGHT
POWER MODE
INDICATOR LIGHT
HOLD MODE
INDICATOR LIGHT
P
R
N
D
3
2
1
OUT TEMP LCD
BACK LIGHT
ODO/TRIP LCD
BACK LIGHT
ILLUMINATION LIGHT
B10
B16
B15
C6
A14
A13
A12
A11
A10
A4
A5
C9
WB
LY
OrL
B
Or
RL
P
GrL
RB
YL
LB
YL
REF. TO D/R(R)-01
REF. TO AT(R)-02
REF. TO AT(R)-01
B
YL
21
32
i2
B37
B
B
ILM(ROI)-01 C

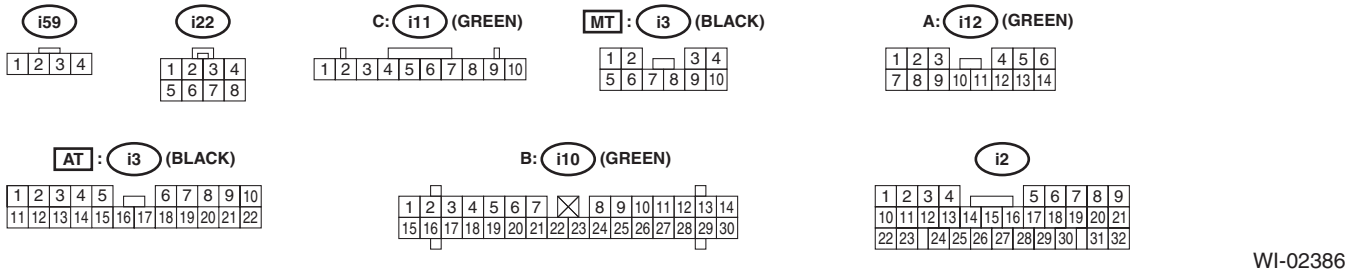
i59
i22
C: i11 (GREEN)
MT : i3 (BLACK)
A: i12 (GREEN)
AT : i3 (BLACK)
B: i10 (GREEN)
i2

WI-02386

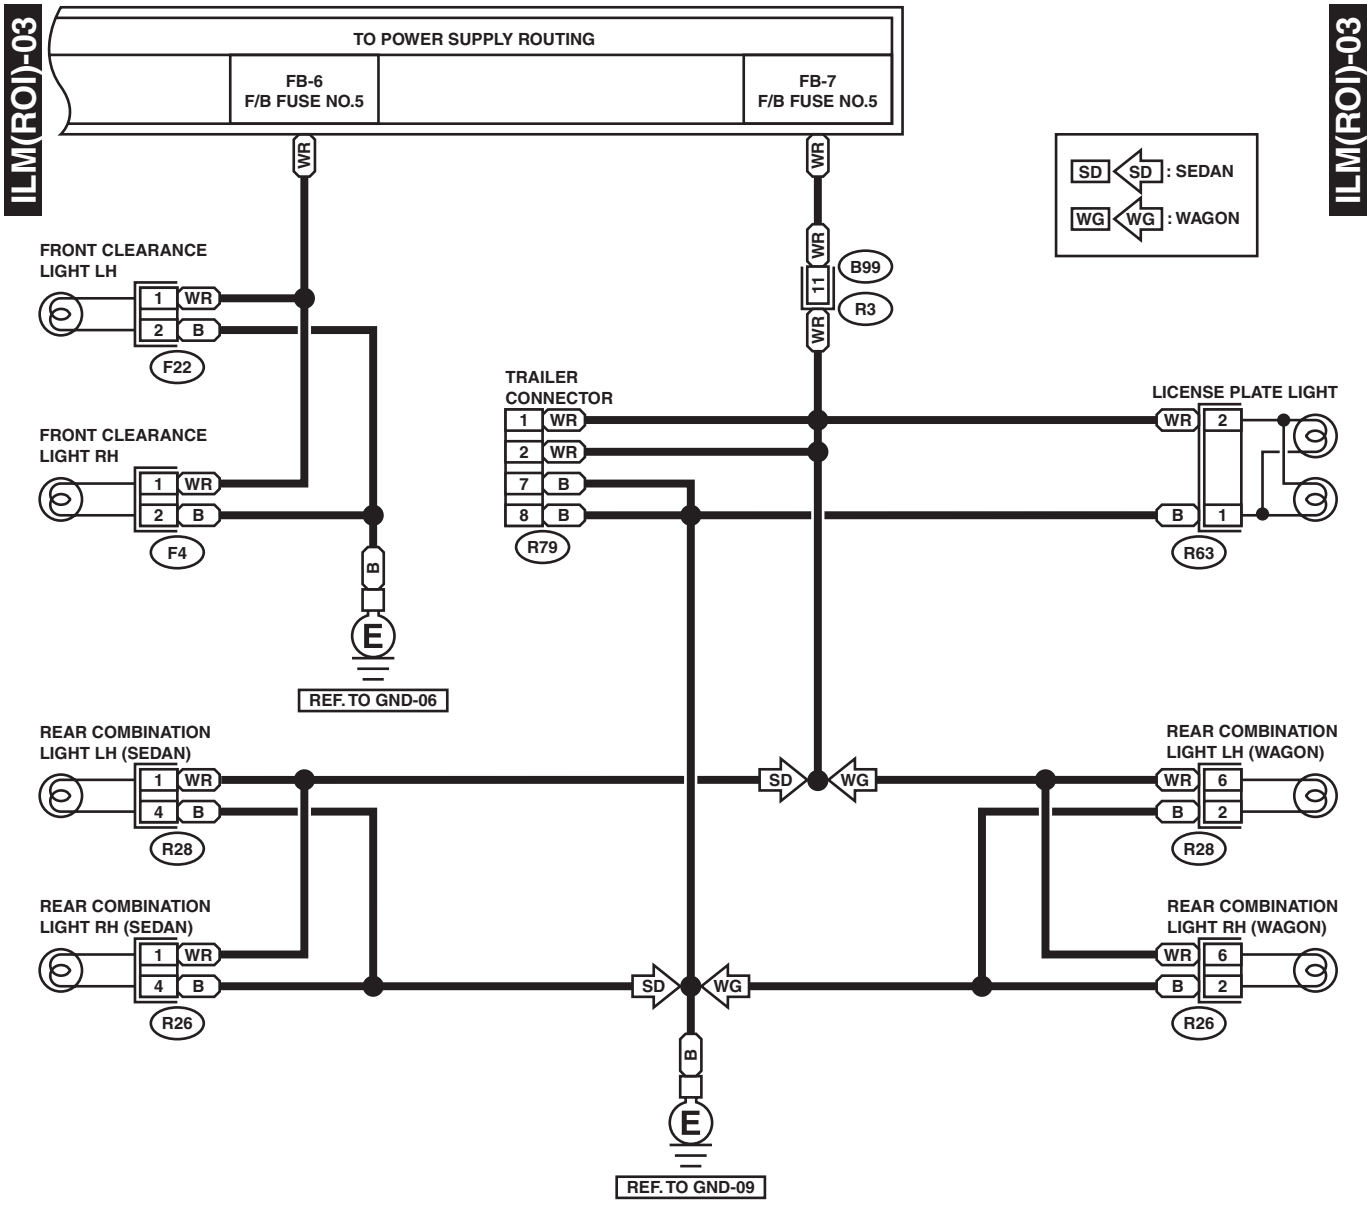

R63 (BLACK)

F4 (BLACK)
F22 (BLACK)

SD : R26
SD : R28

WG : R26 (BLACK)
WG : R28 (BLACK)



R79



B99



WI-02387

3. RHD WITH ILLUMINATION CONTROL EXCEPT FOR AUSTRALIA STi MODEL

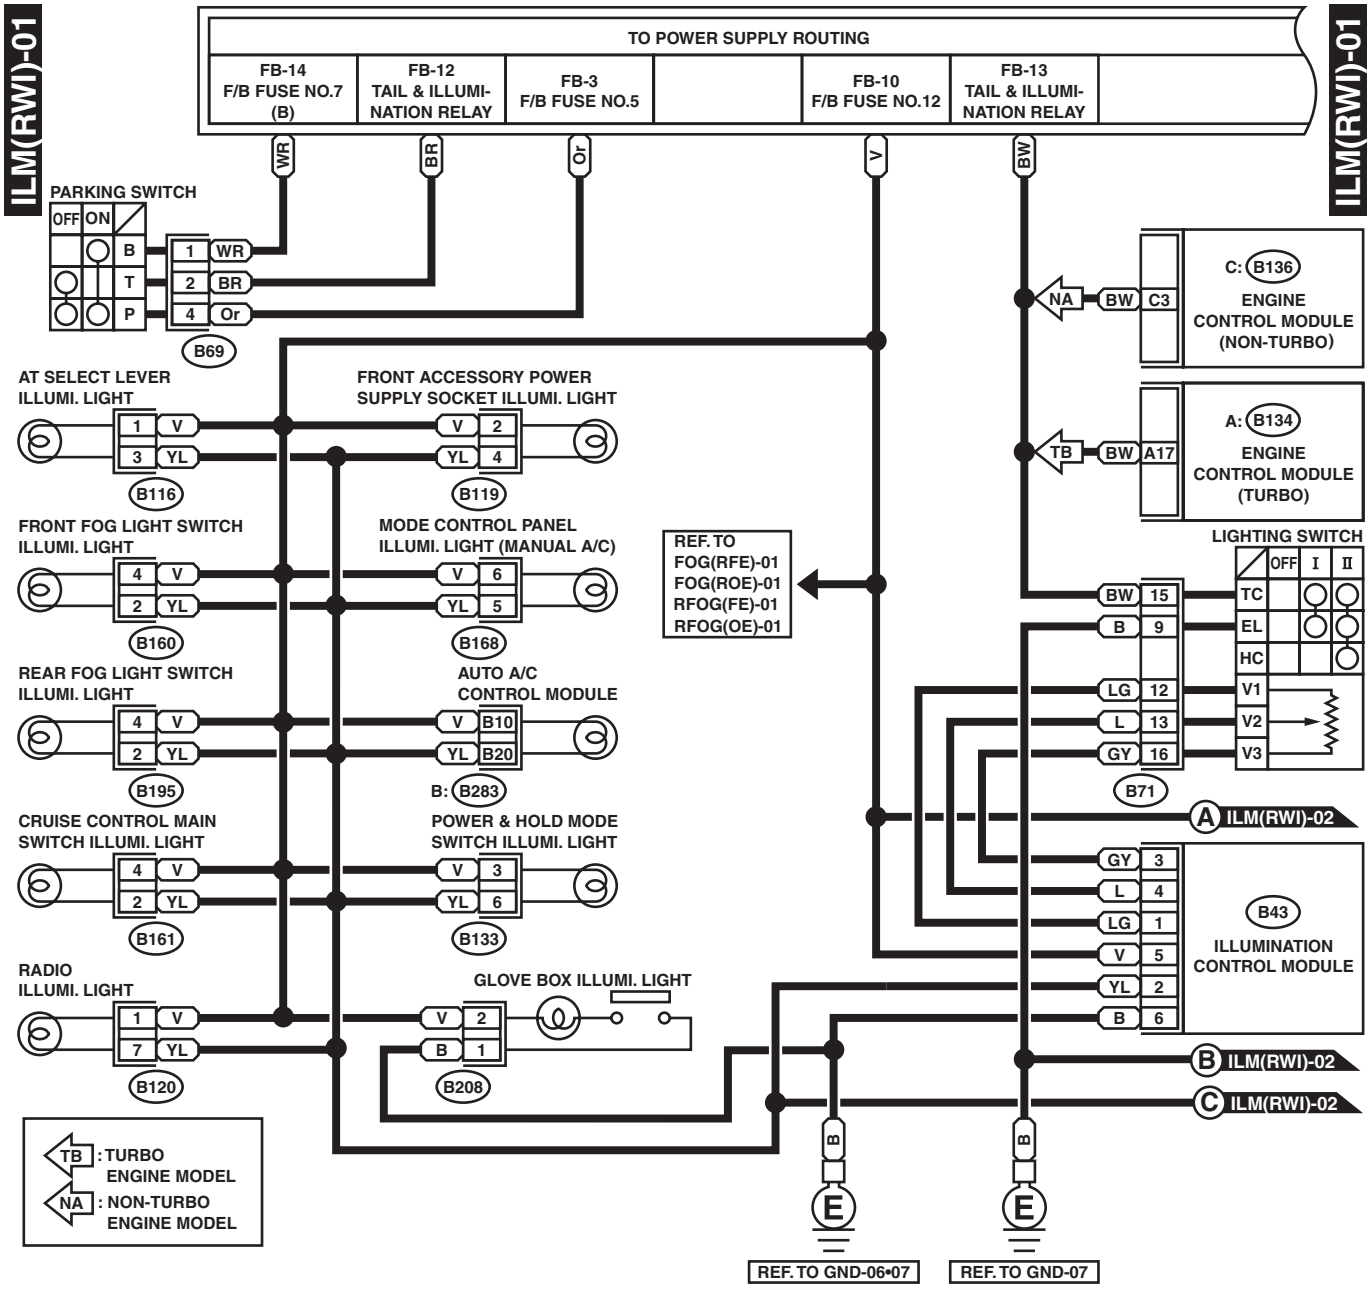

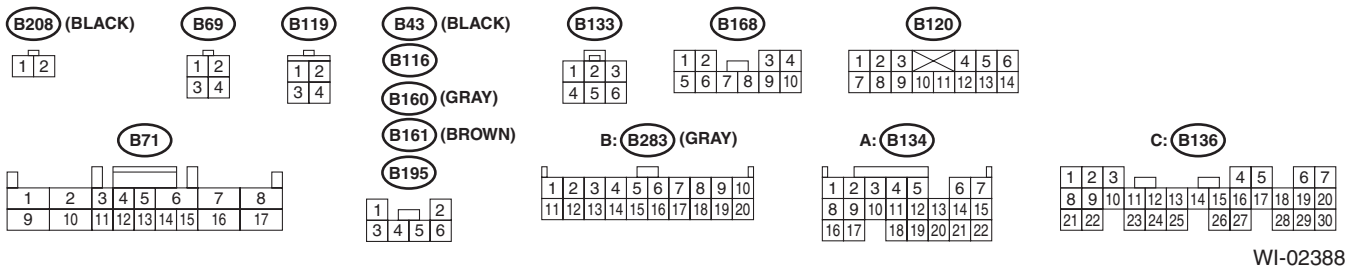

WI-02388

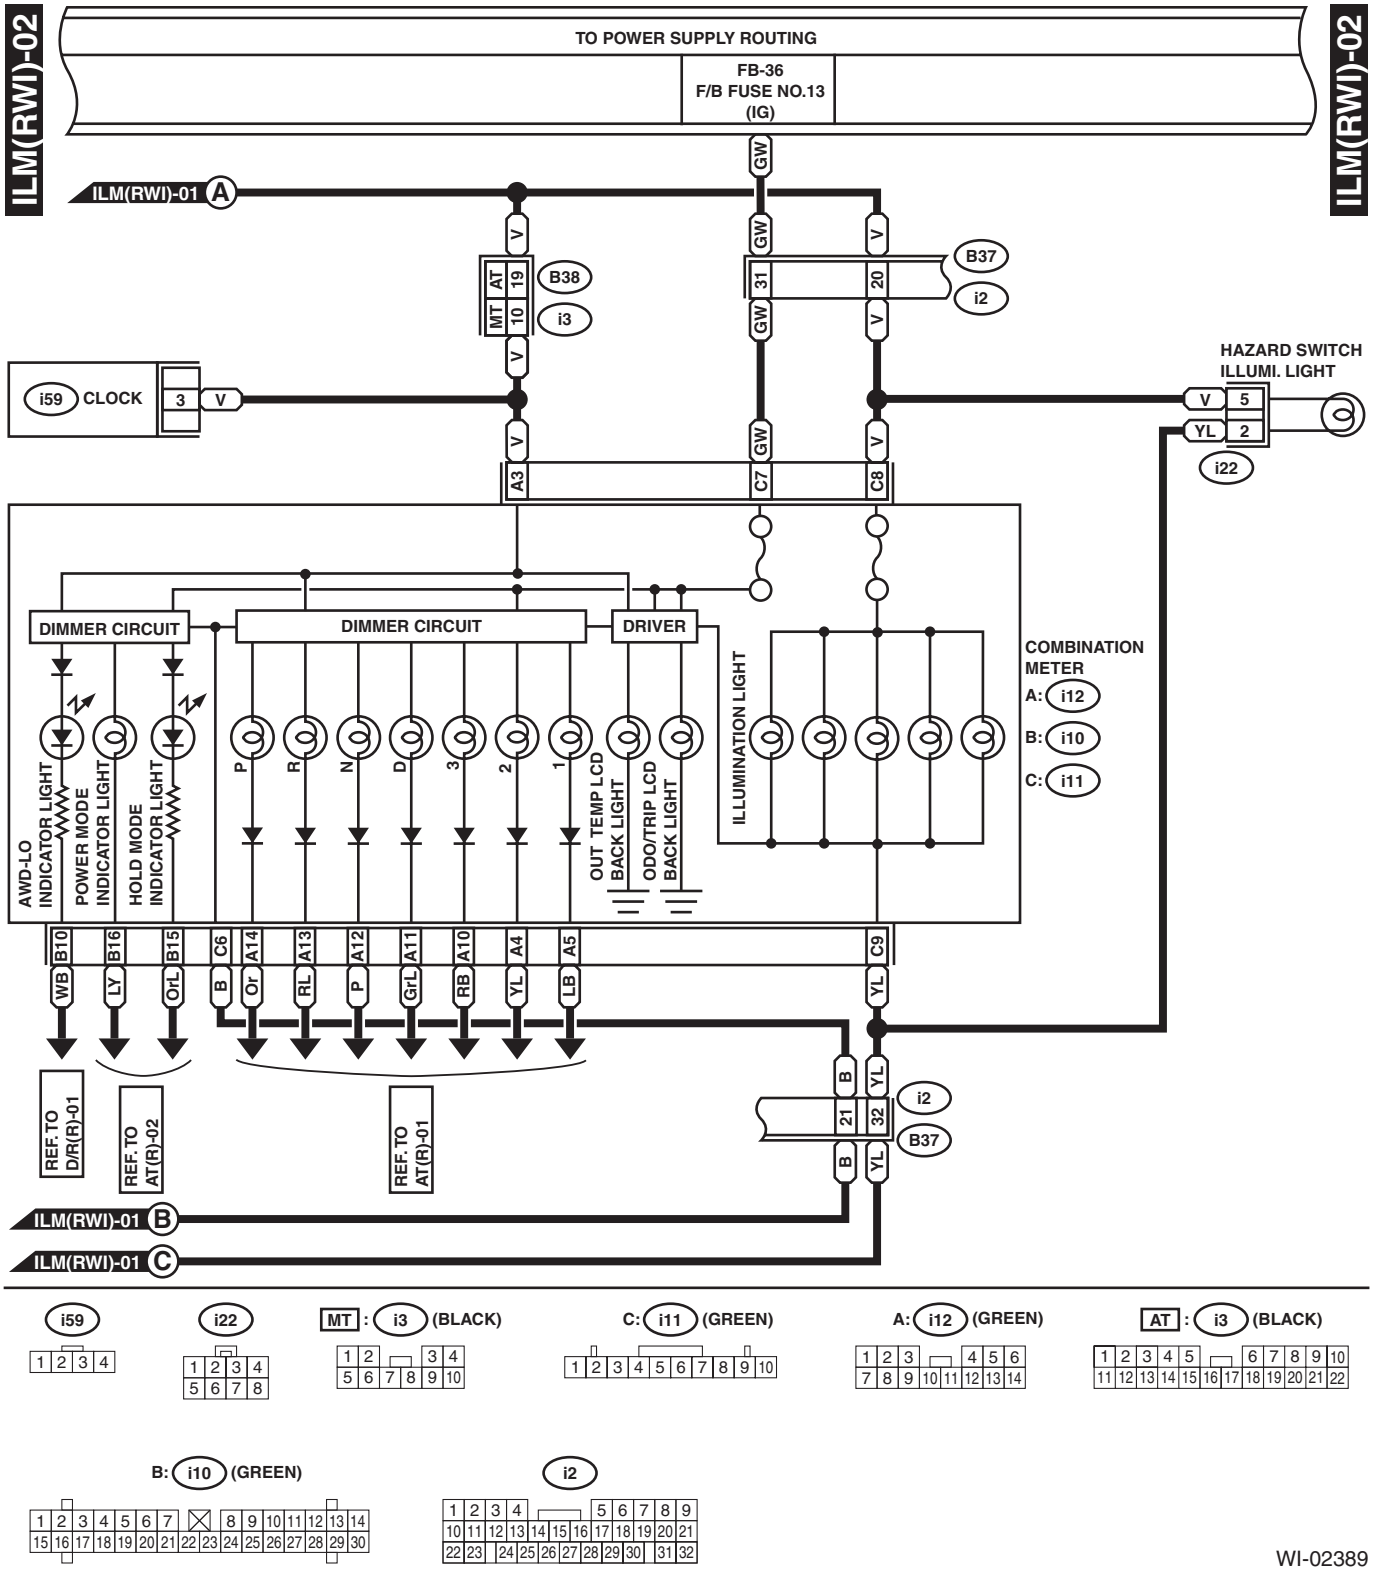
ILM(RWI)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO.13
(IG)
ILM(RWI)-02
ILM(RWI)-01 A
GW
V
B38
AT 19
MT 10
i3
B37
31
20
i2
i59 CLOCK
3
V
HAZARD SWITCH
ILLUMI. LIGHT
V 5
YL 2
i22
A3
C7
C8
DIMMER CIRCUIT
DIMMER CIRCUIT
DRIVER
COMBINATION
METER
A: i12
B: i10
C: i11
AWD-LO
INDICATOR LIGHT
POWER MODE
INDICATOR LIGHT
HOLD MODE
INDICATOR LIGHT
P
R
N
D
3
2
1
OUT TEMP LCD
BACK LIGHT
ODO/TRIP LCD
BACK LIGHT
ILLUMINATION LIGHT
B10
B16
B15
C6
A14
A13
A12
A11
A10
A4
A5
C9
WB
LY
OrL
B
Or
RL
P
GrL
RB
YL
LB
YL
REF.TO
D/R(R)-01
REF.TO
AT(R)-02
REF.TO
AT(R)-01
B
YL
21
32
i2
B37
B
YL
ILM(RWI)-01 B
ILM(RWI)-01 C

i59
i22
MT : i3 (BLACK)
C: i11 (GREEN)
A: i12 (GREEN)
AT : i3 (BLACK)
B: i10 (GREEN)
i2

WI-02389

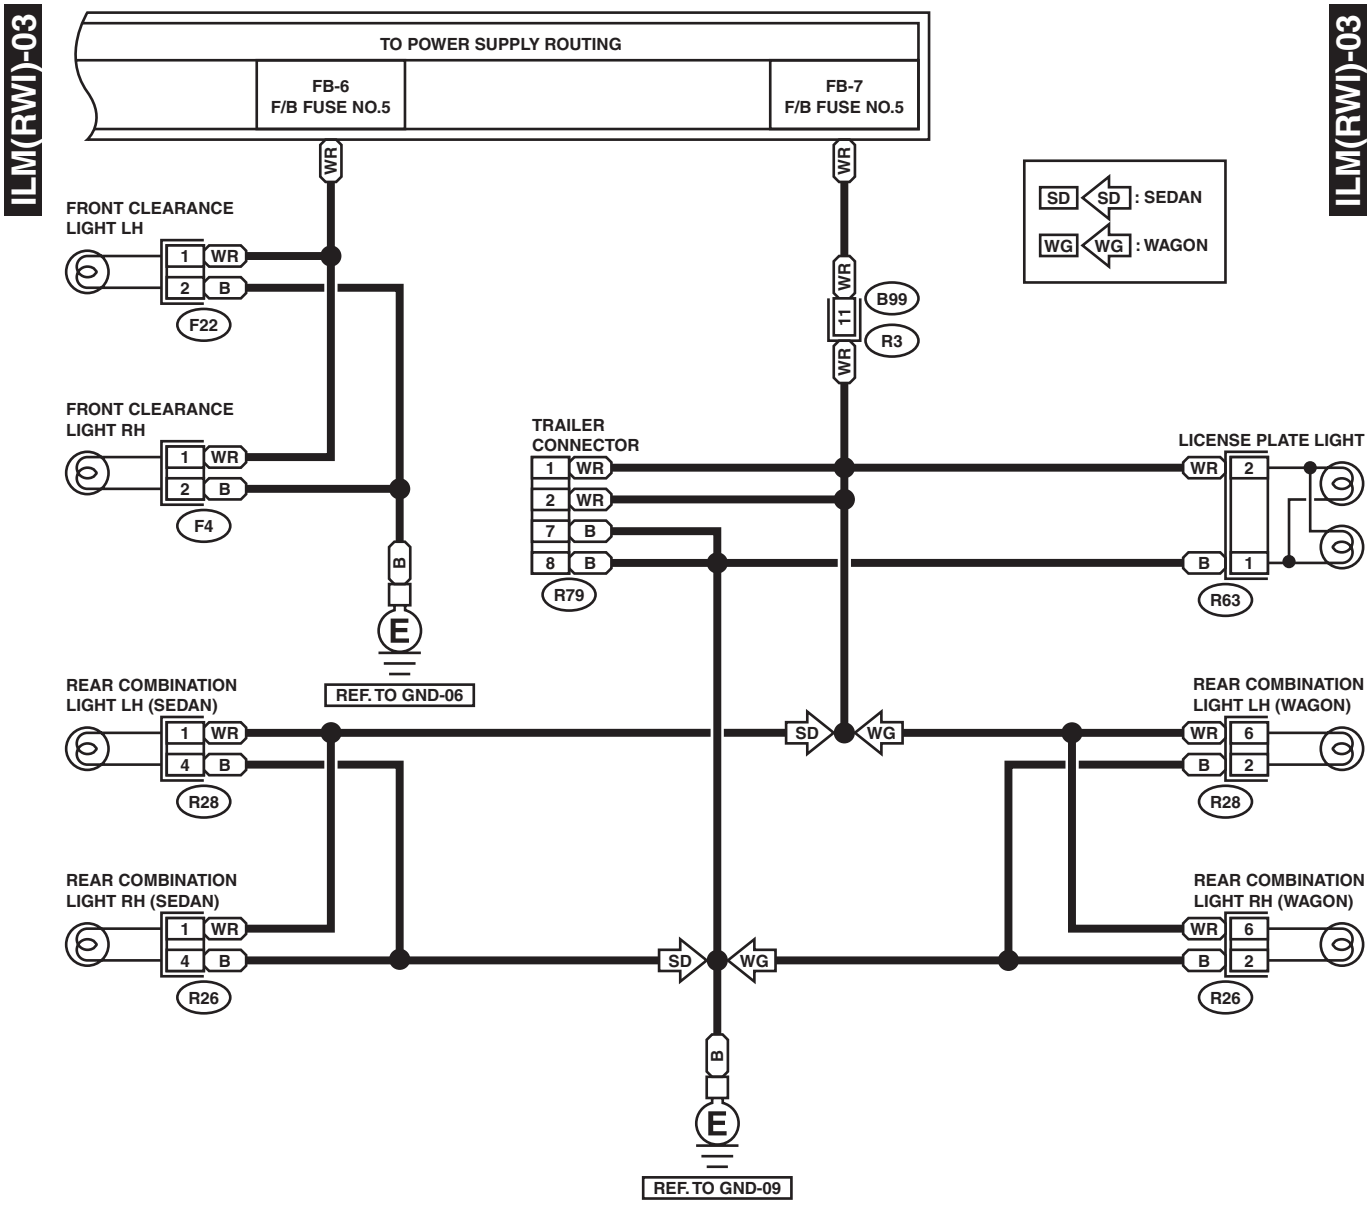

F4 (BLACK)
F22 (BLACK)

R63 (BLACK)

SD : R26
SD : R28

WG : R26 (BLACK)
WG : R28 (BLACK)



R79



B99



WI-02390

4. RHD FOR AUSTRALIA STi MODEL

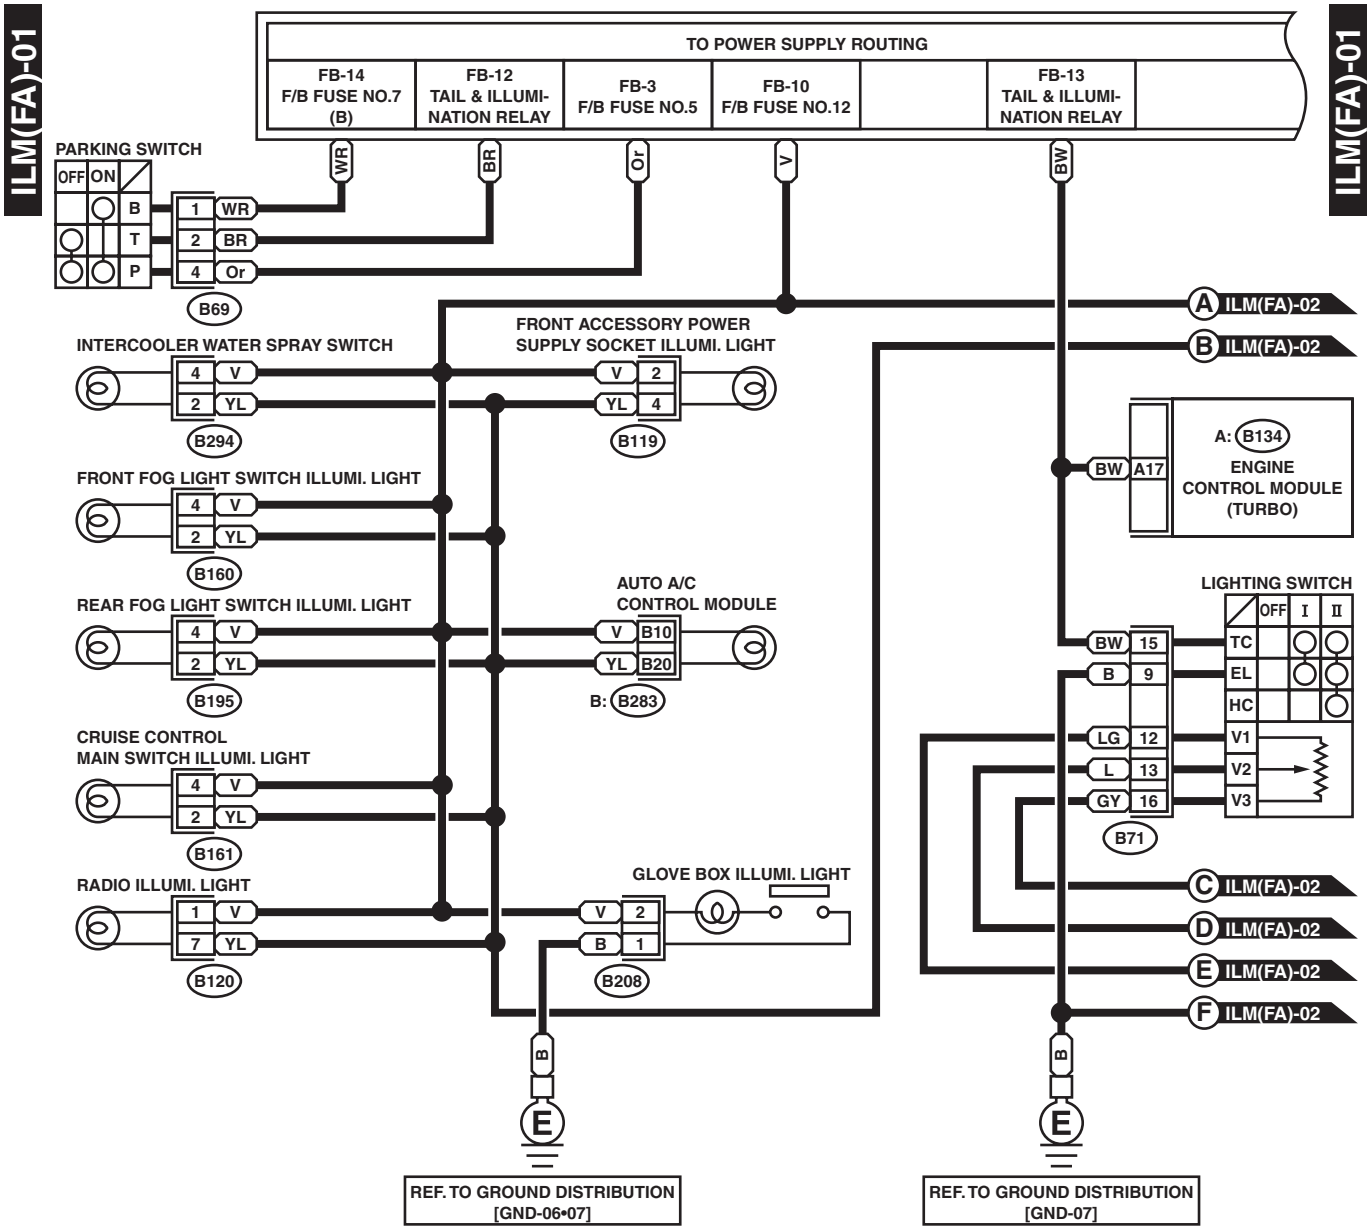

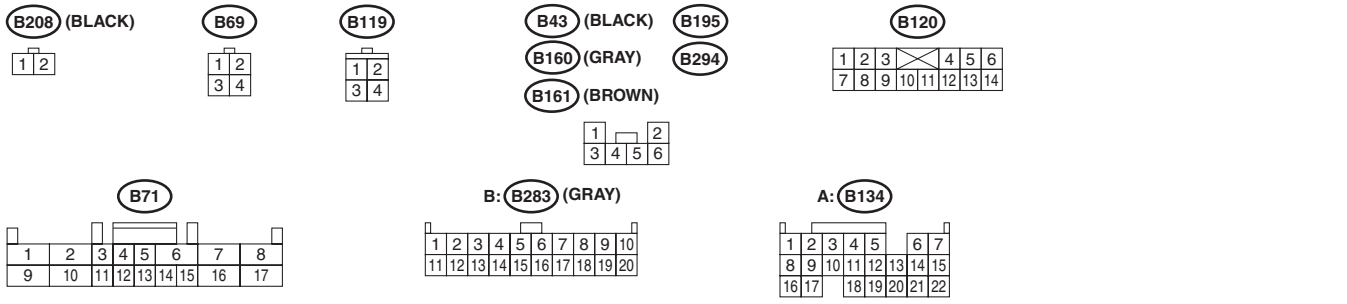

WI-02551

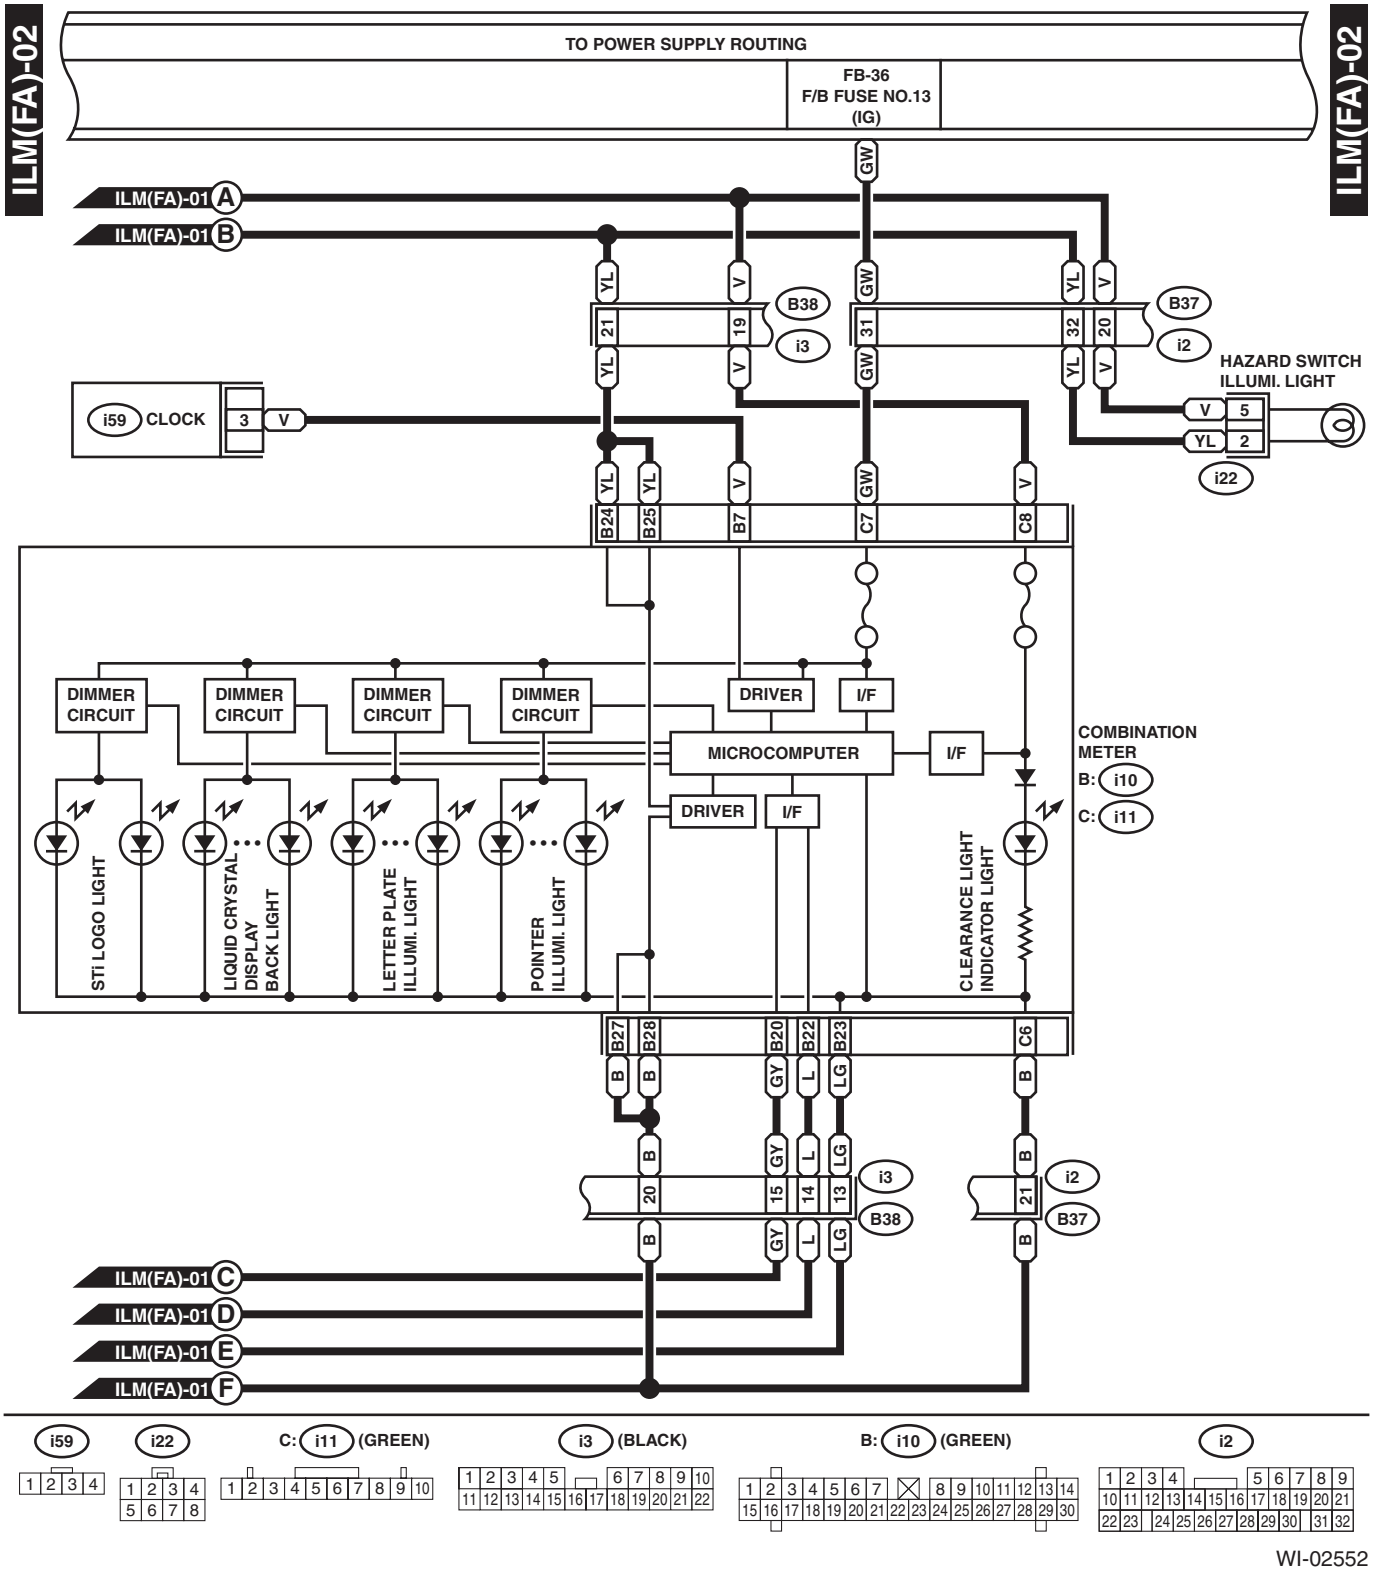
ILM(FA)-02
ILM(FA)-02
TO POWER SUPPLY ROUTING
FB-36
F/B FUSE NO.13
(IG)
ILM(FA)-01 A
ILM(FA)-01 B
ILM(FA)-01 C
ILM(FA)-01 D
ILM(FA)-01 E
ILM(FA)-01 F
i59 CLOCK
HAZARD SWITCH ILLUMI. LIGHT
i22
B38
i3
B37
i2
DIMMER CIRCUIT
DIMMER CIRCUIT
DIMMER CIRCUIT
DIMMER CIRCUIT
DRIVER
I/F
MICROCOMPUTER
I/F
DRIVER
I/F
COMBINATION METER
B: i10
C: i11
STI LOGO LIGHT
LIQUID CRYSTAL DISPLAY BACK LIGHT
LETTER PLATE ILLUMI. LIGHT
POINTER ILLUMI. LIGHT
CLEARANCE LIGHT INDICATOR LIGHT
B24 B25 B7 C7 C8
B27 B28 B20 B22 B23 C6
YL V GW B GY L LG

i59
i22
C: i11 (GREEN)
i3 (BLACK)
B: i10 (GREEN)
i2

WI-02552

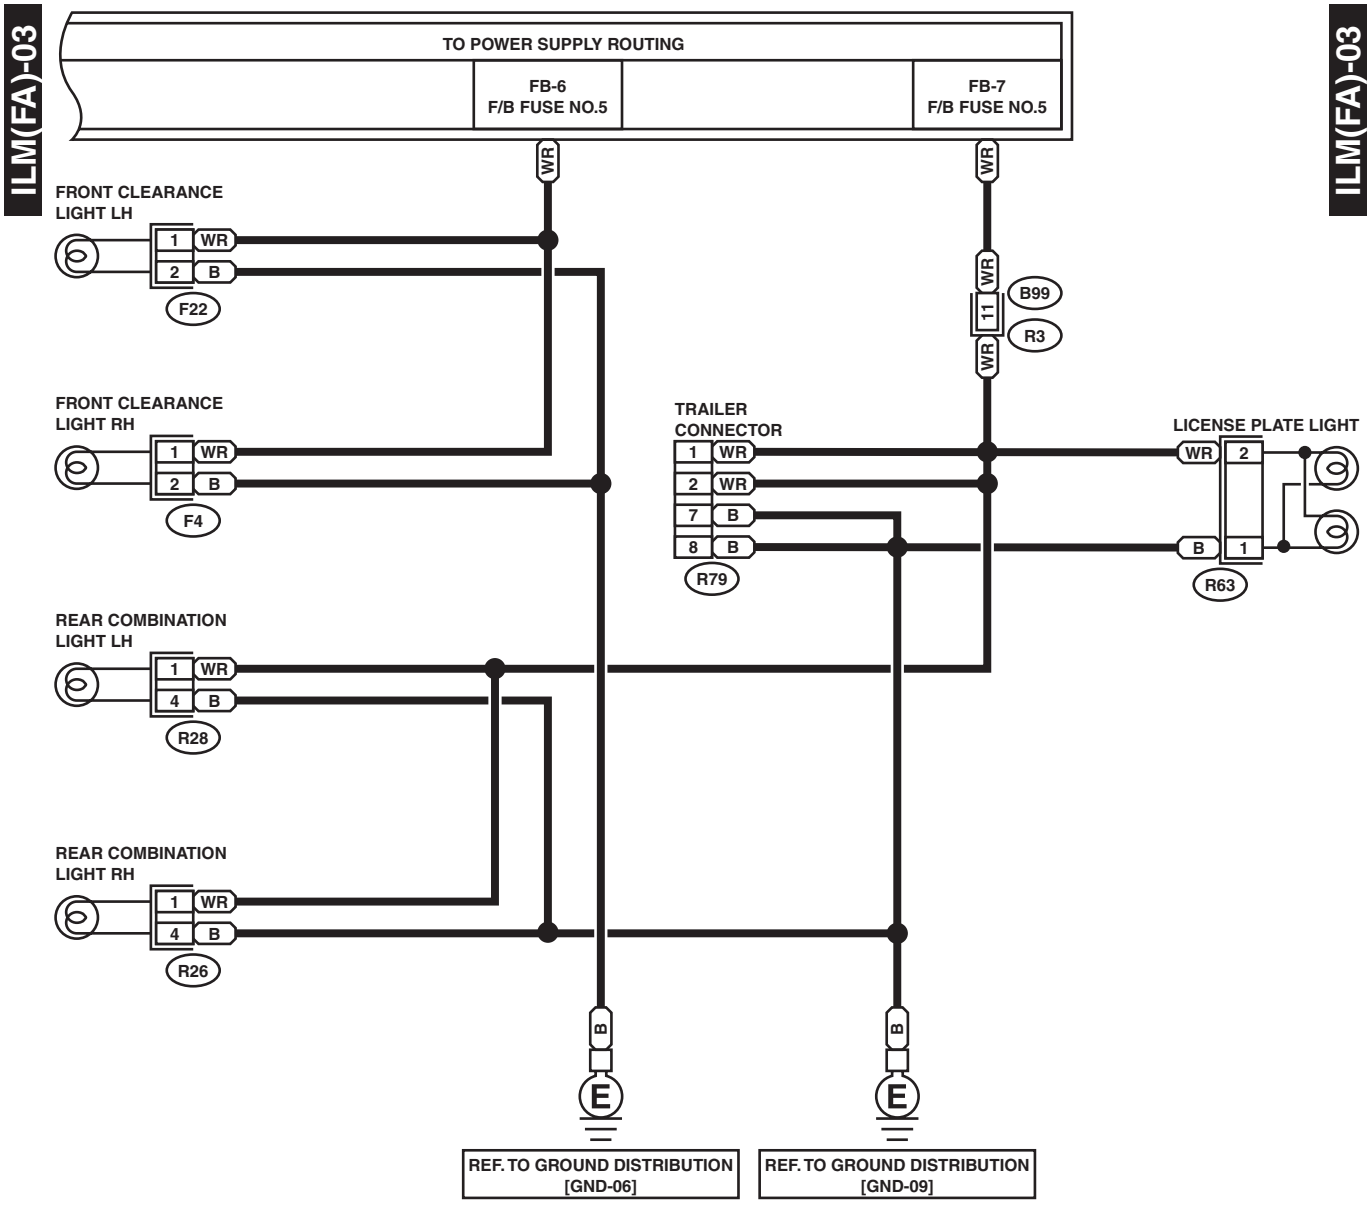

R63 (BLACK)

F4 (BLACK)
F22 (BLACK)

R26
R28

R79



B99



WI-02553

24.Front Fog Light System

A: SCHEMATIC

1. LHD MODEL

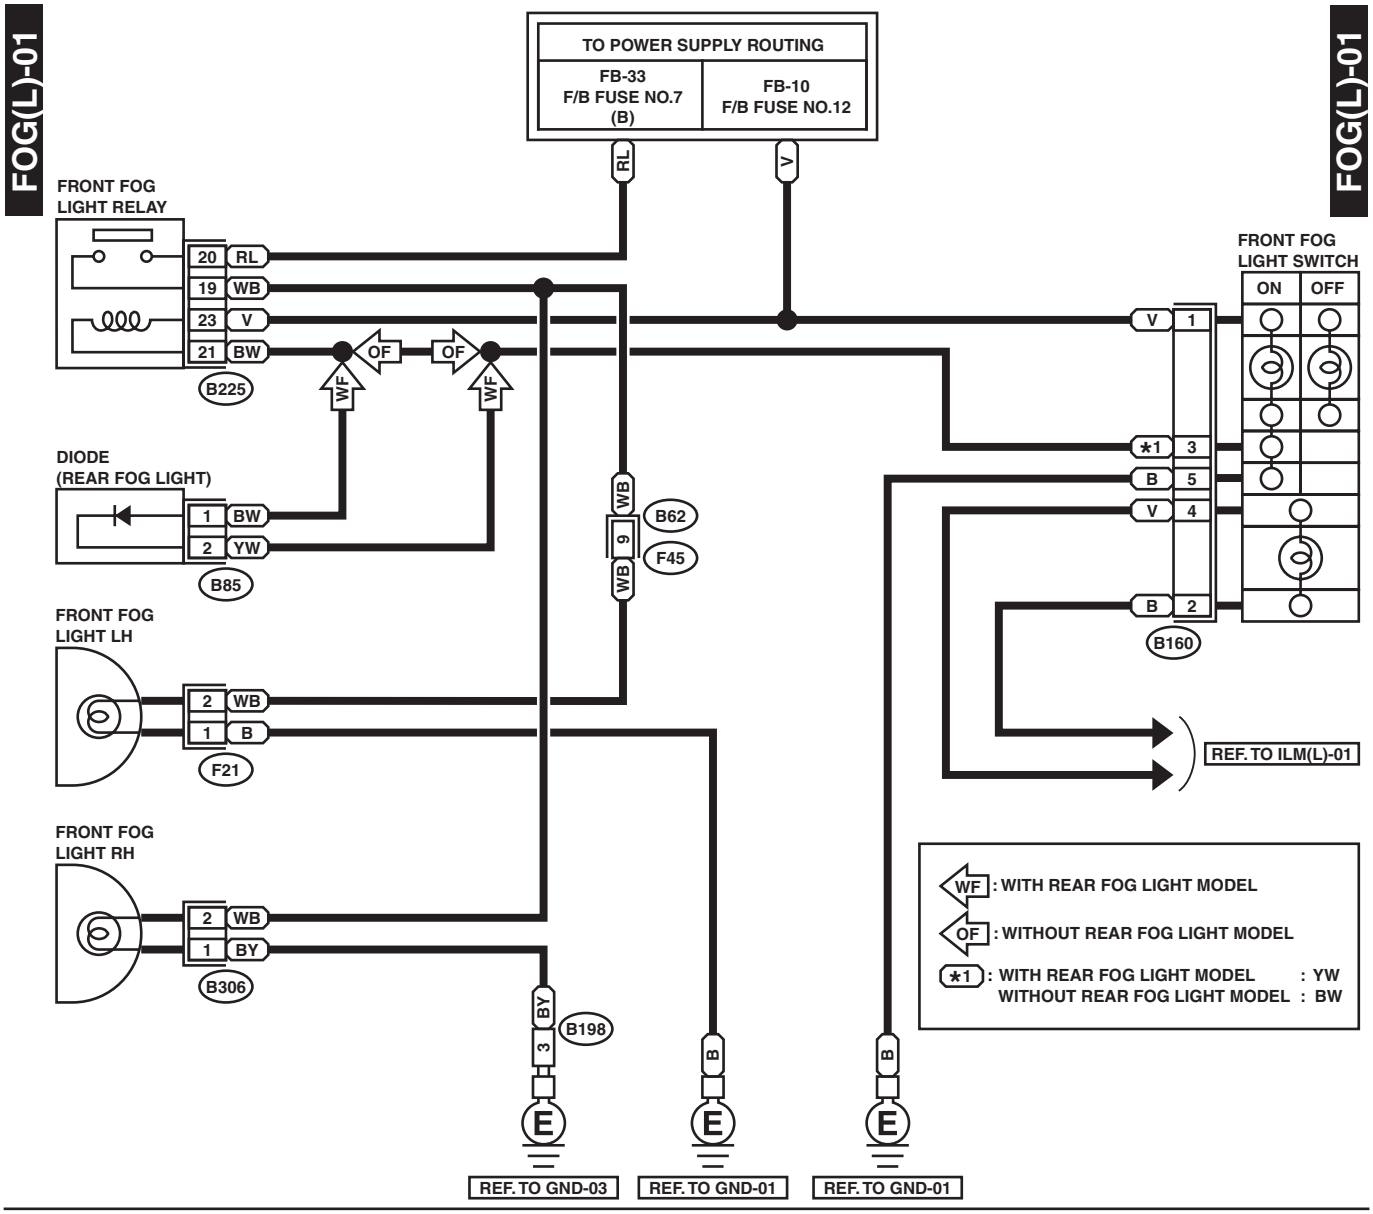

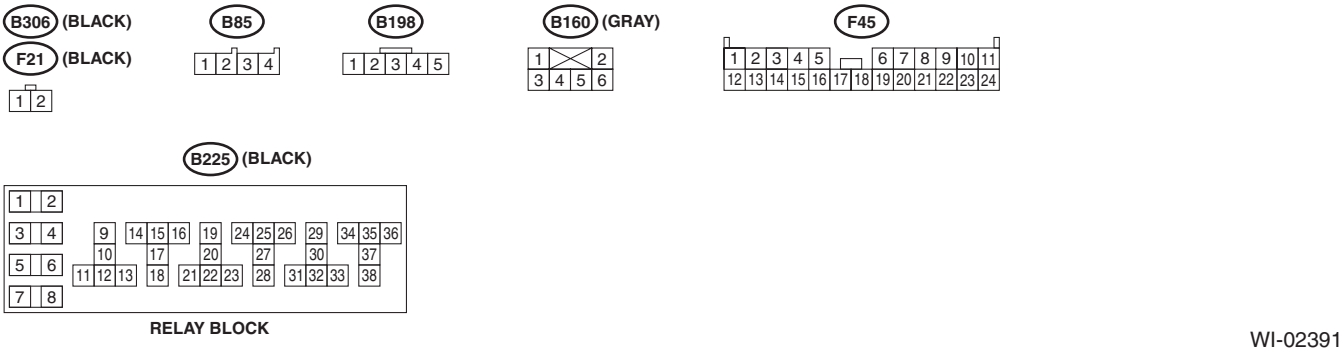

WI-02391

2. RHD FOR EUROPE MODEL

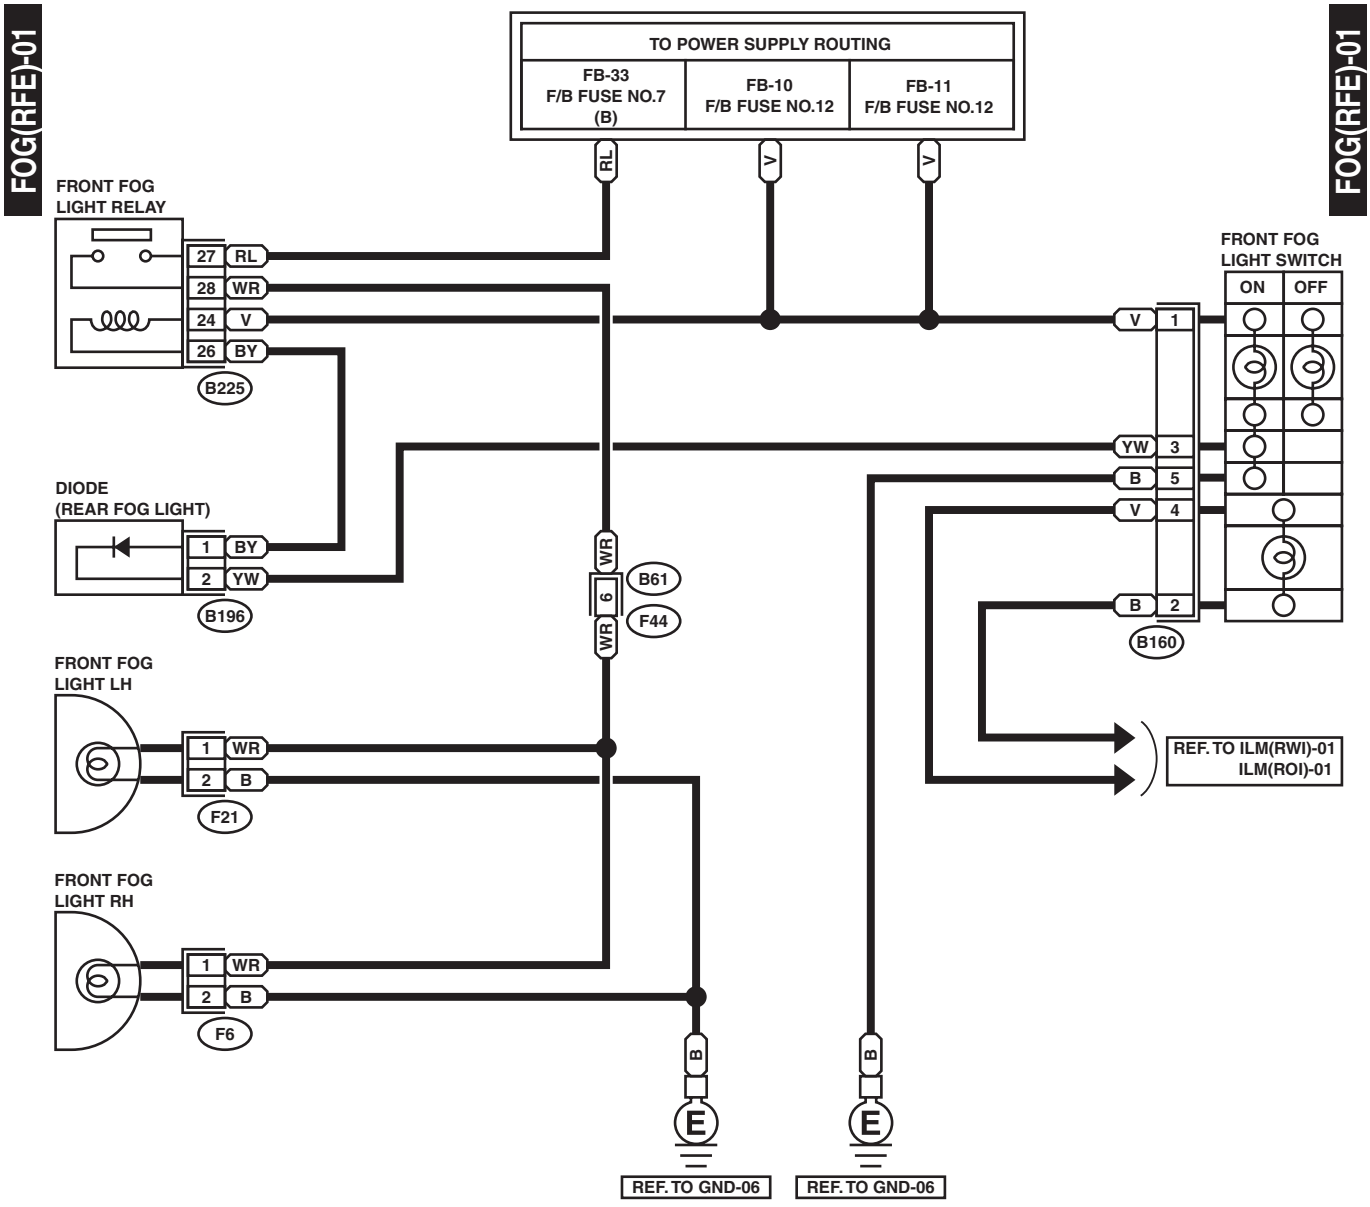

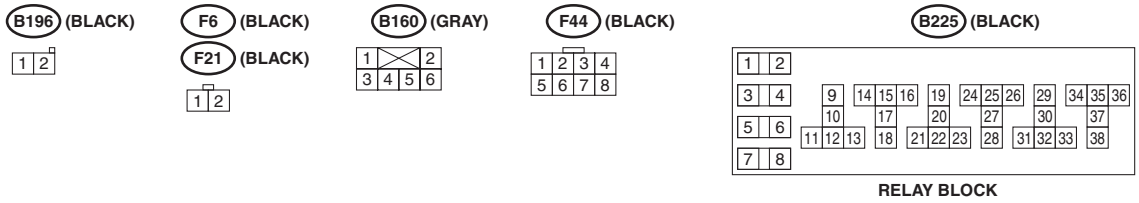

WI-02392

3. RHD EXCEPT FOR EUROPE MODEL

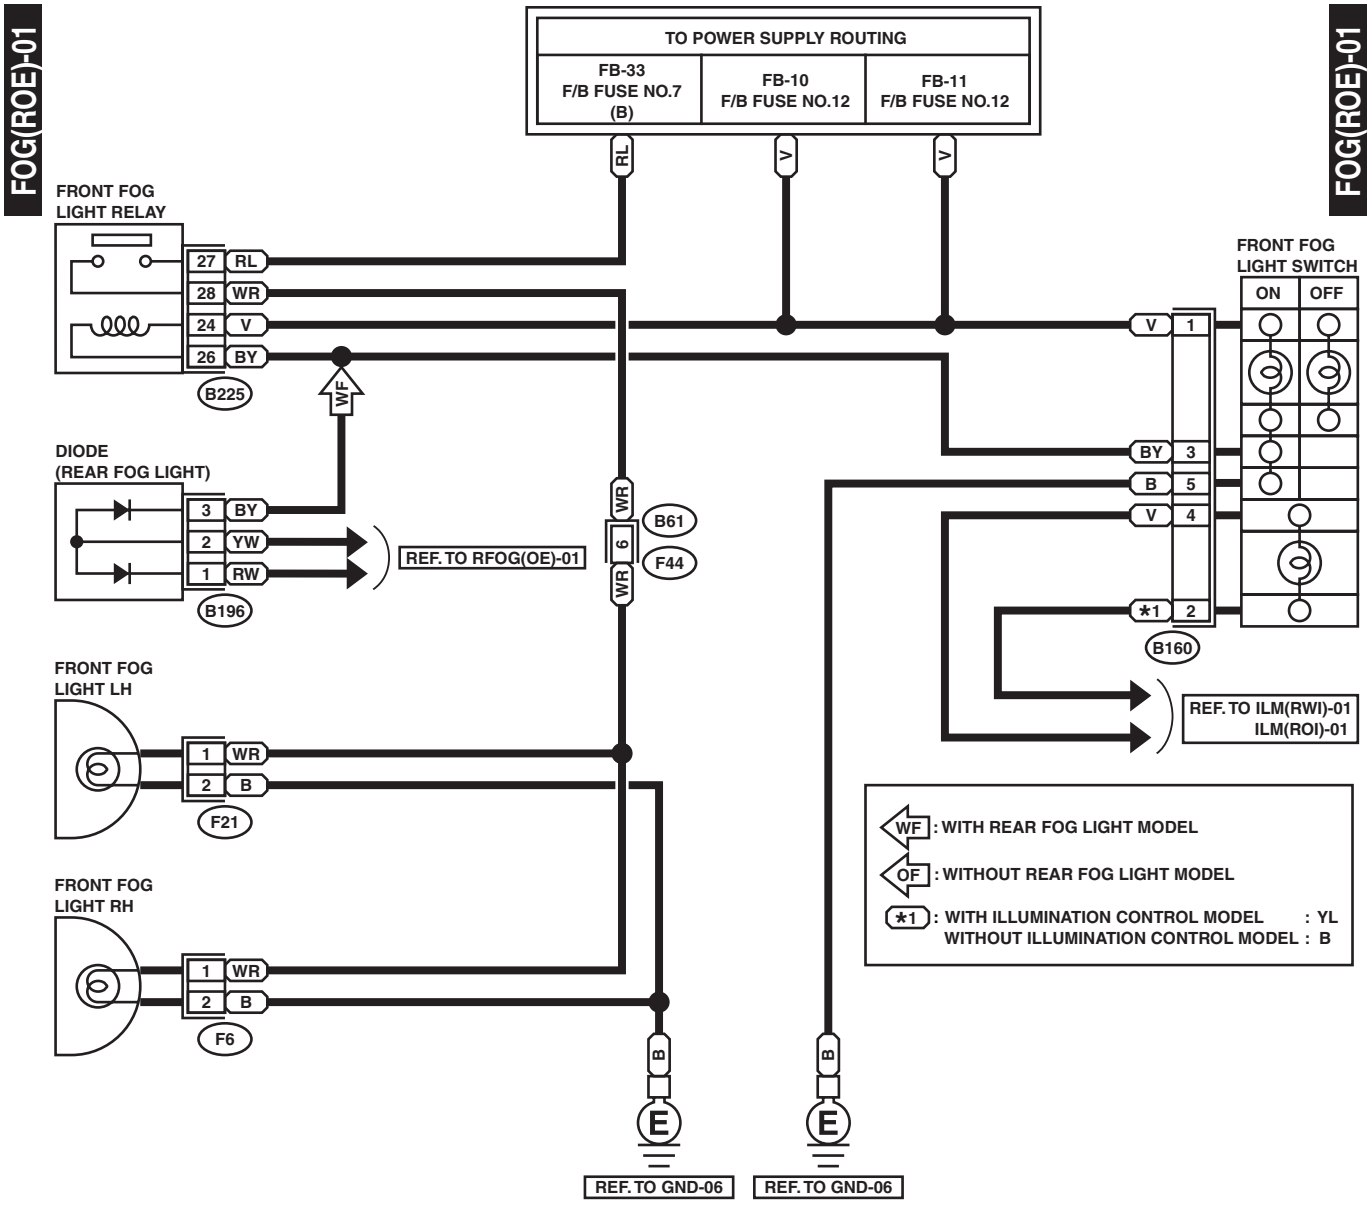

WI-02393

25.Headlight System

A: SCHEMATIC

1. LHD MODEL

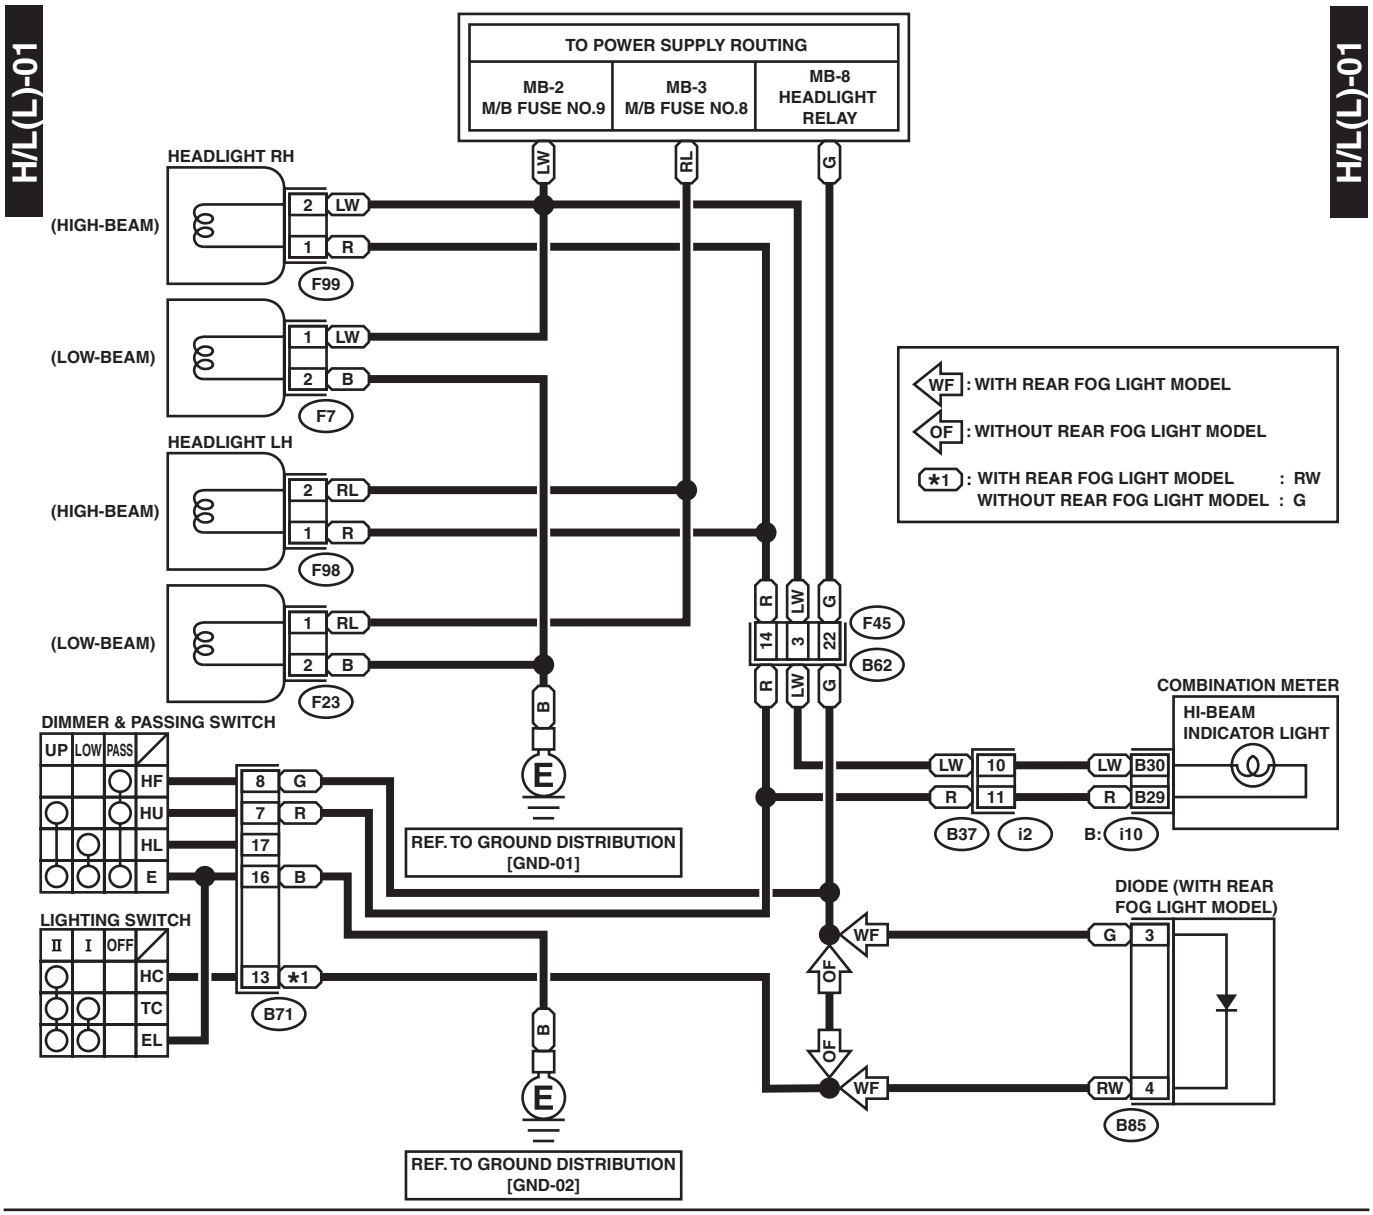

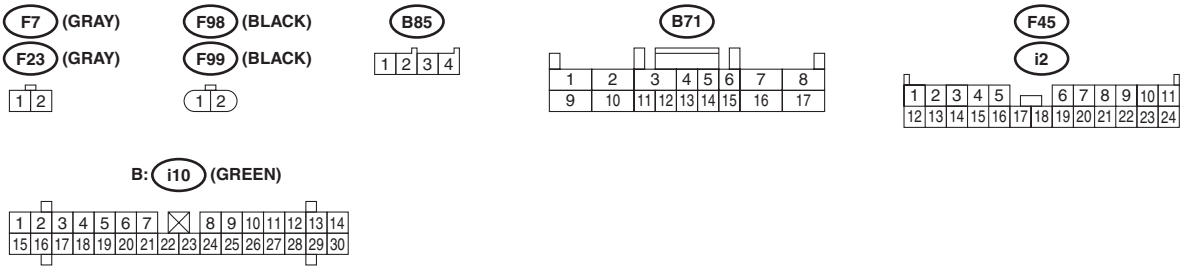

WI-02394

2. RHD MODEL

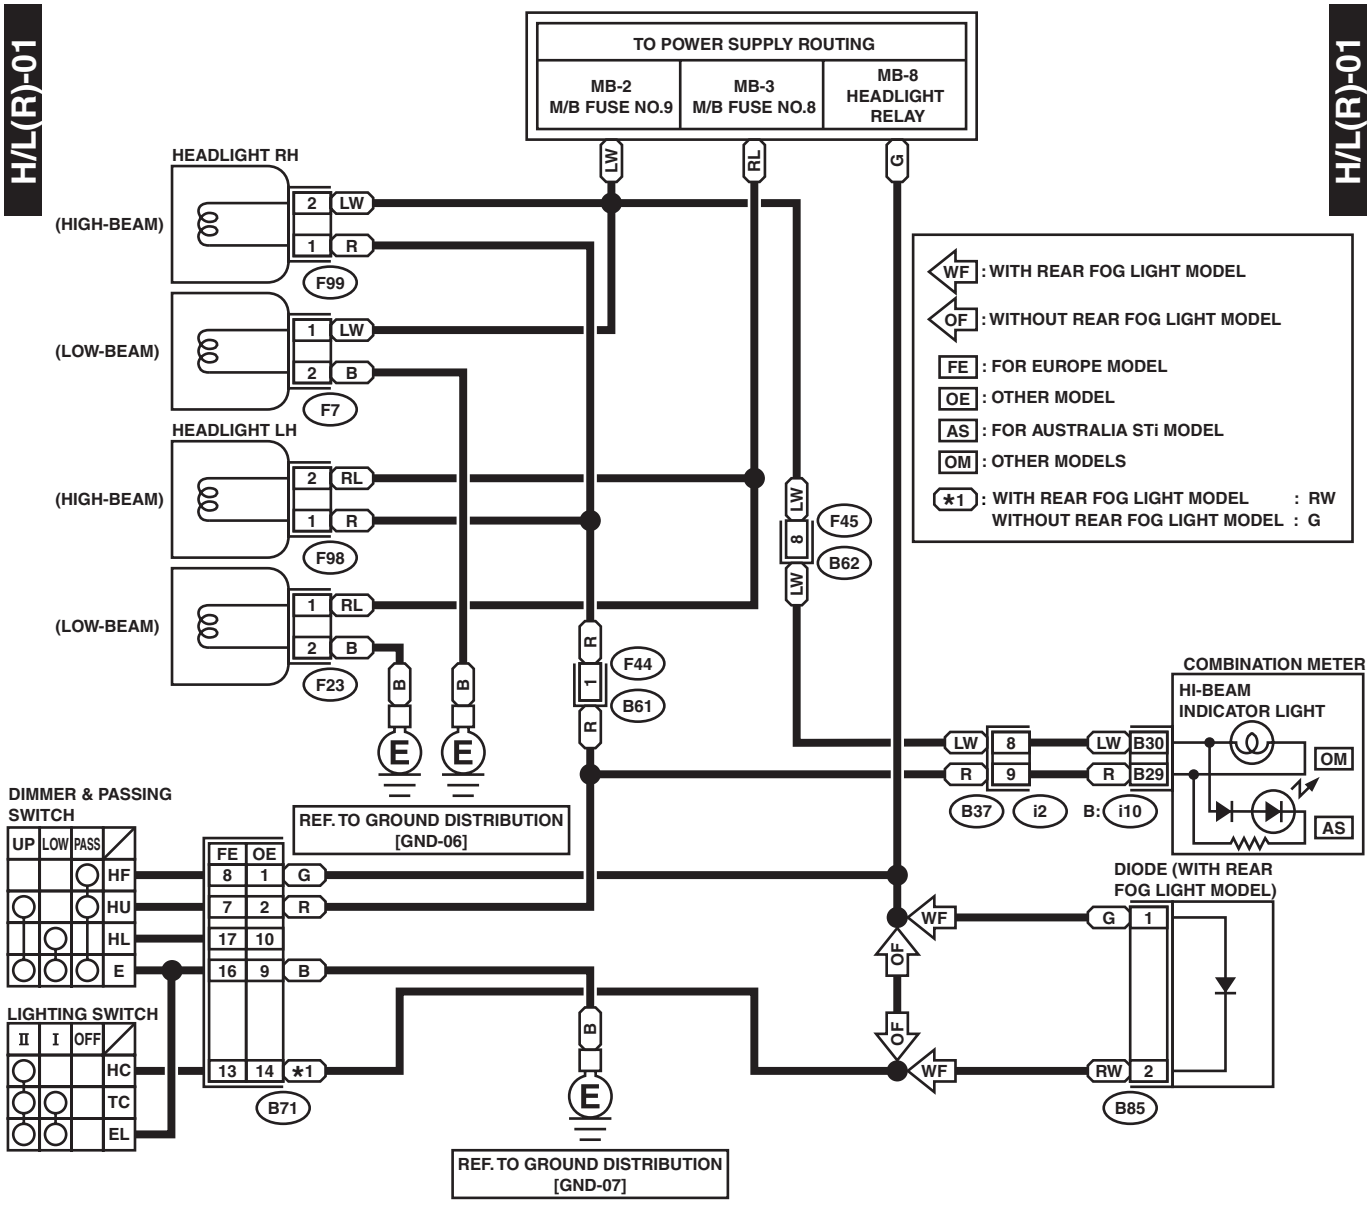

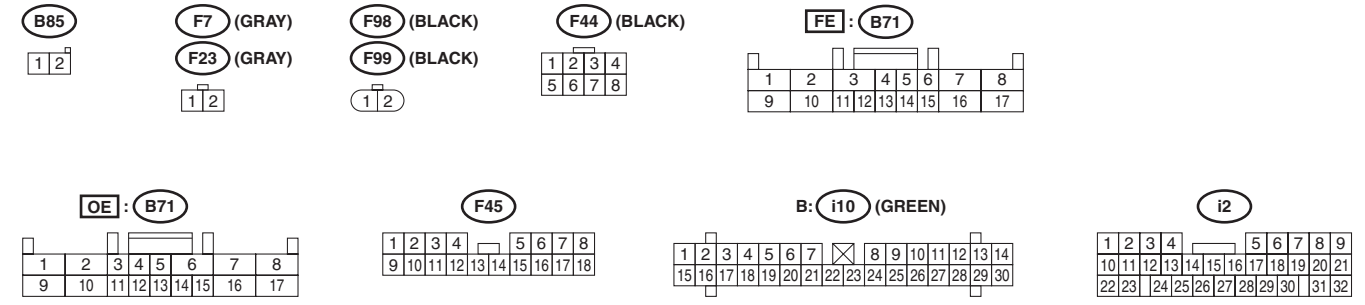

WI-02395

26.In Compartment Light System

A: SCHEMATIC

1. LHD MODEL

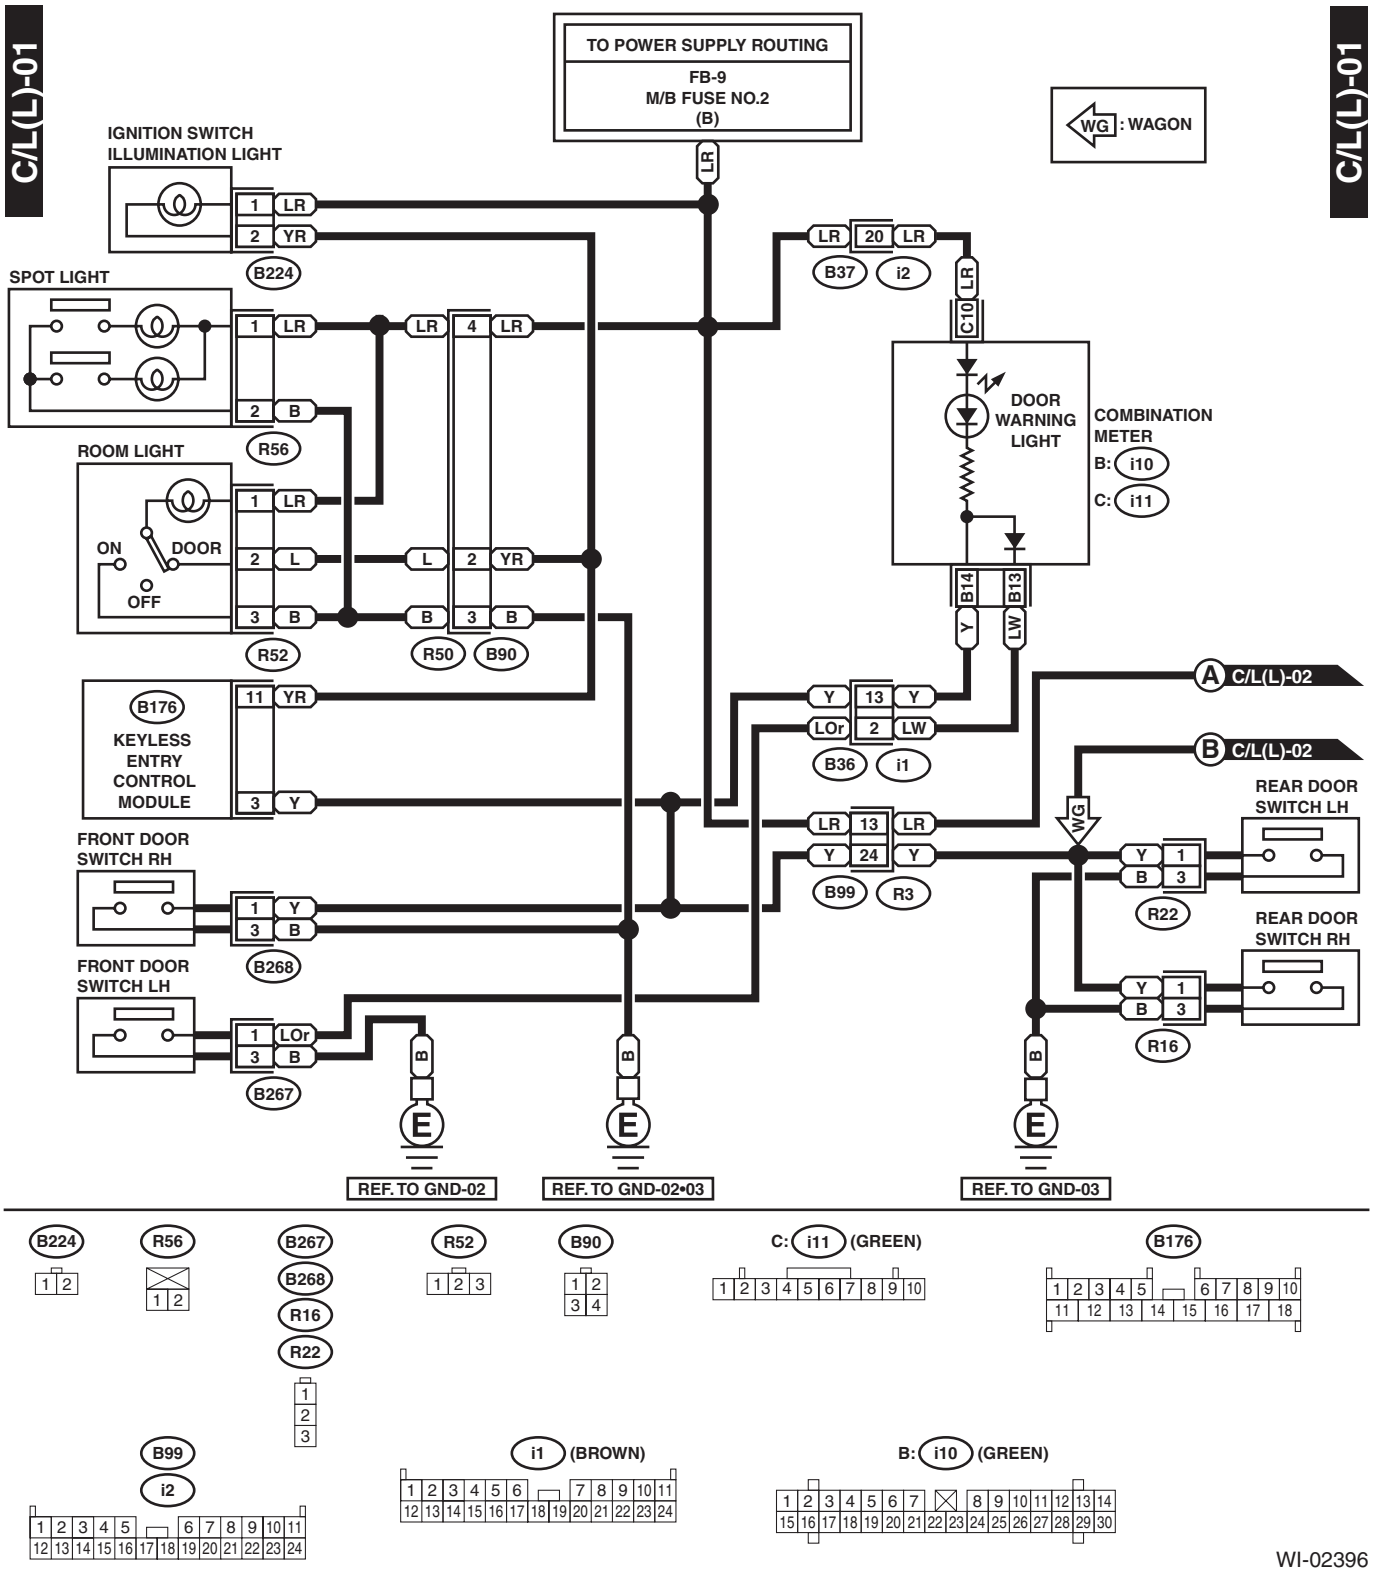

WI-02396

IN COMPARTMENT LIGHT SYSTEM

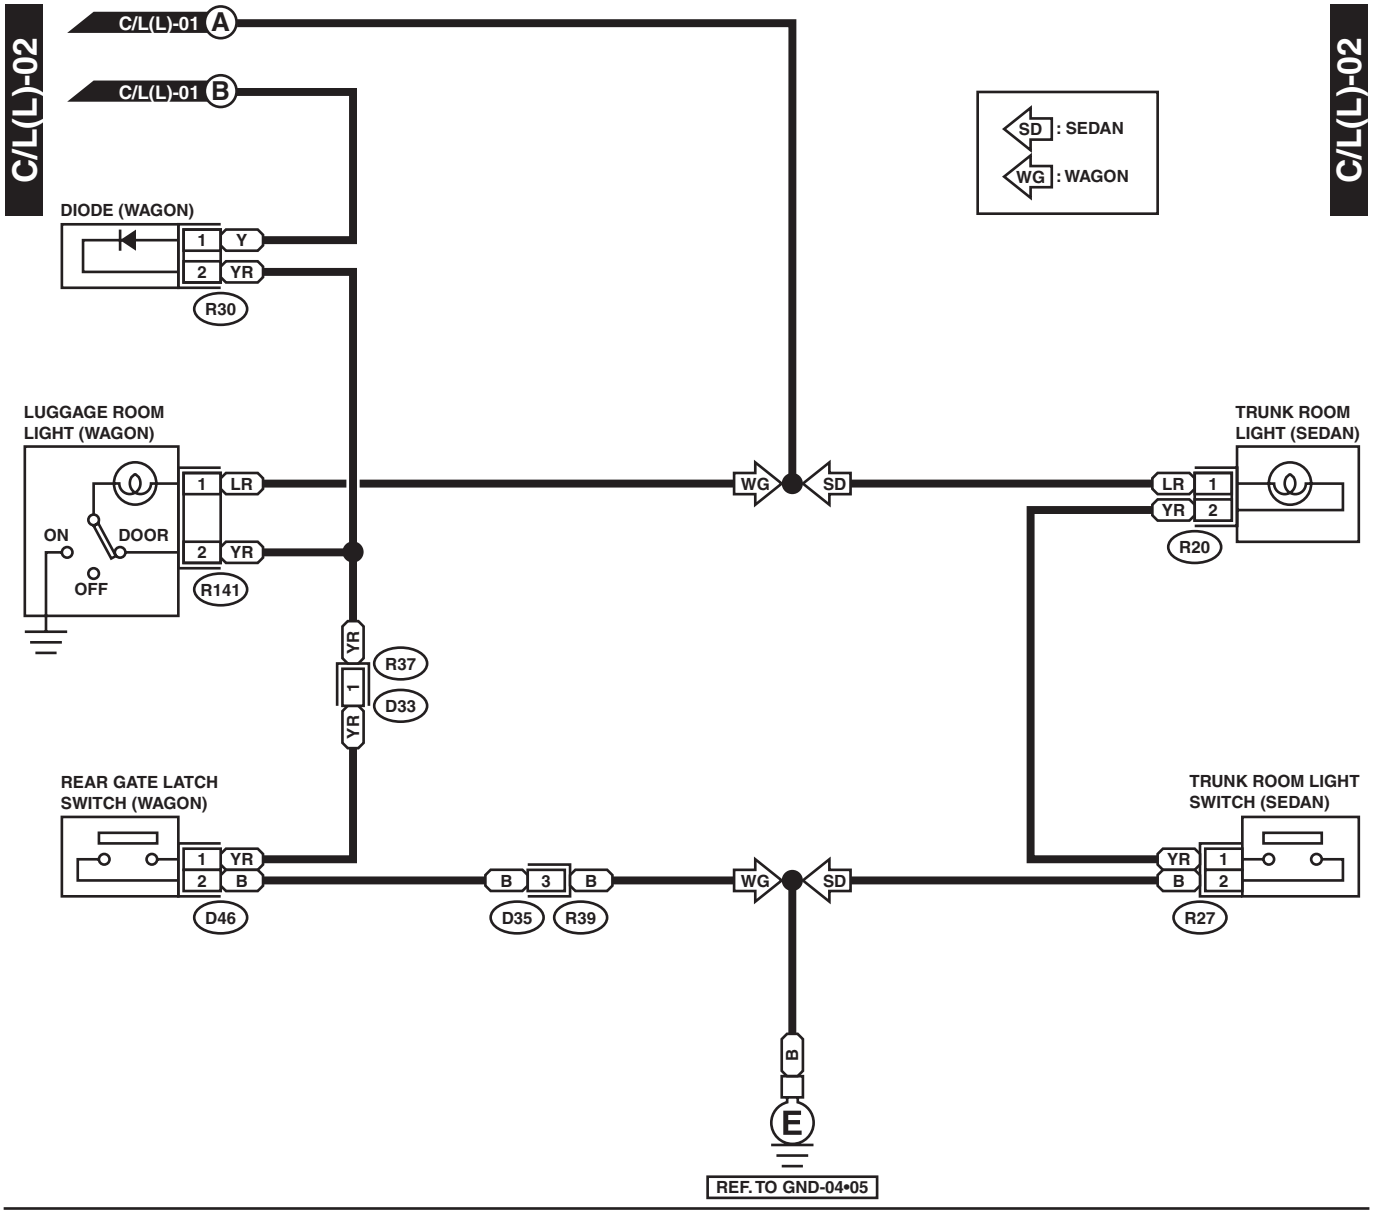

WI-02397

2. RHD MODEL

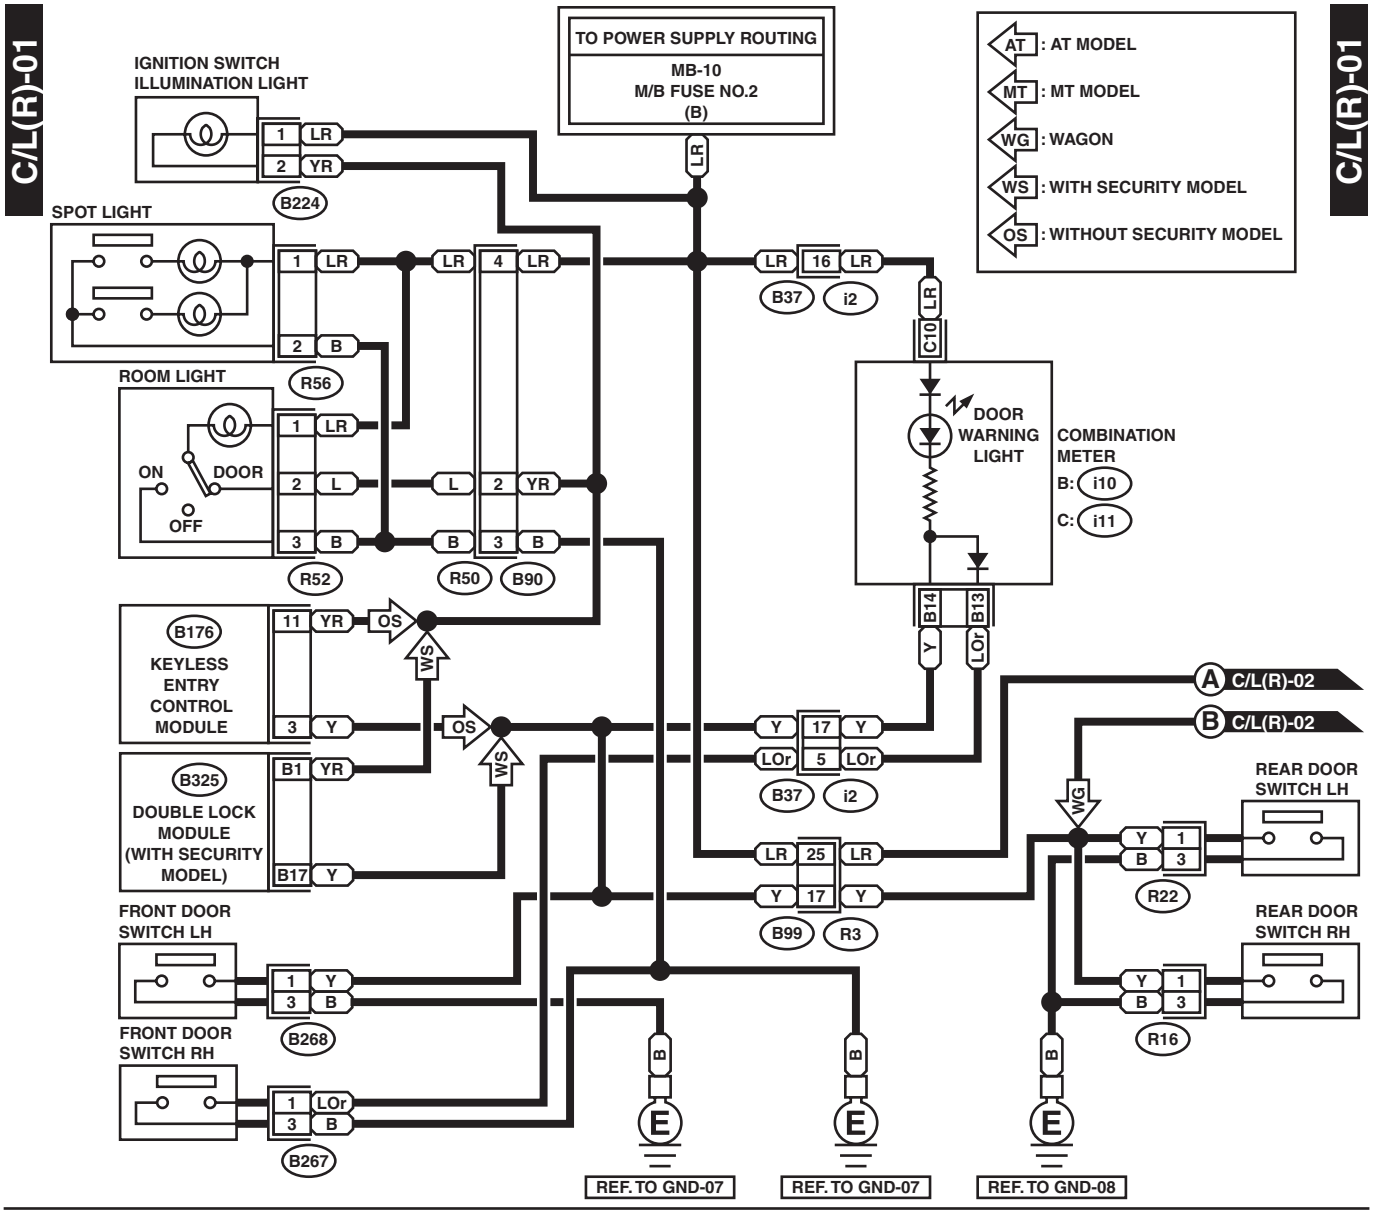

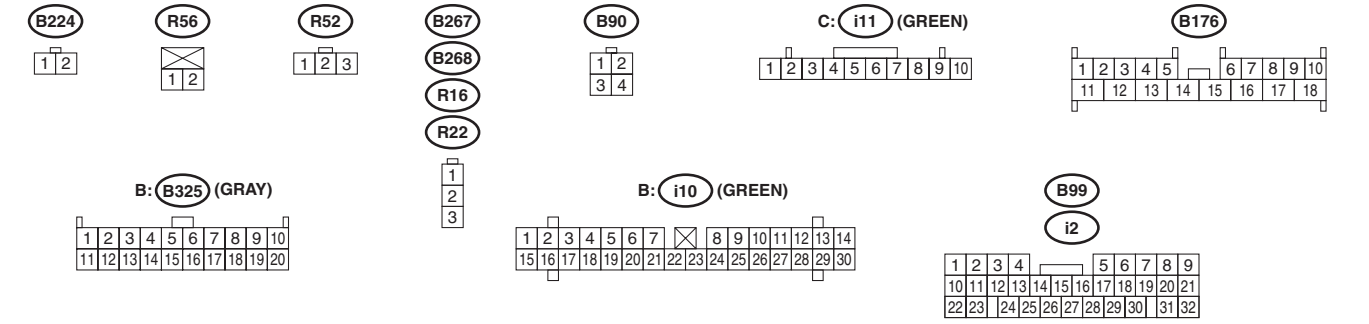

WI-02398

IN COMPARTMENT LIGHT SYSTEM

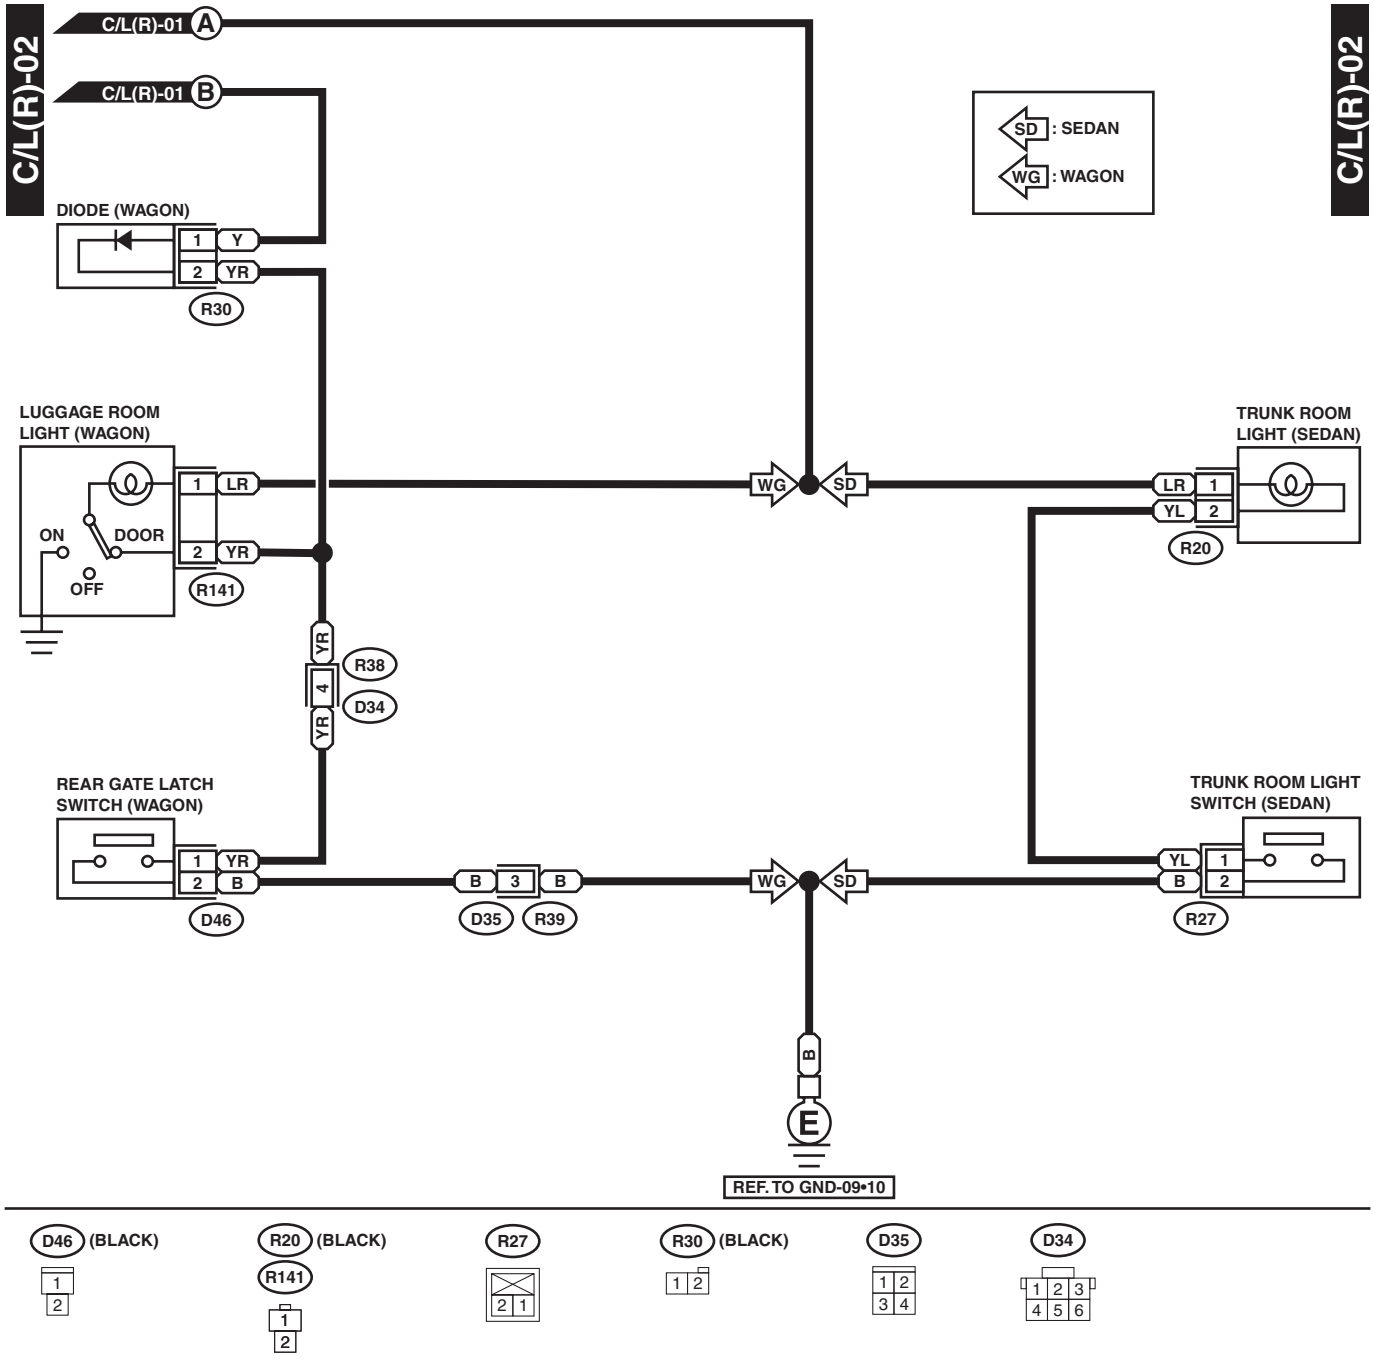

WI-02399

27.Stop Light System

A: SCHEMATIC

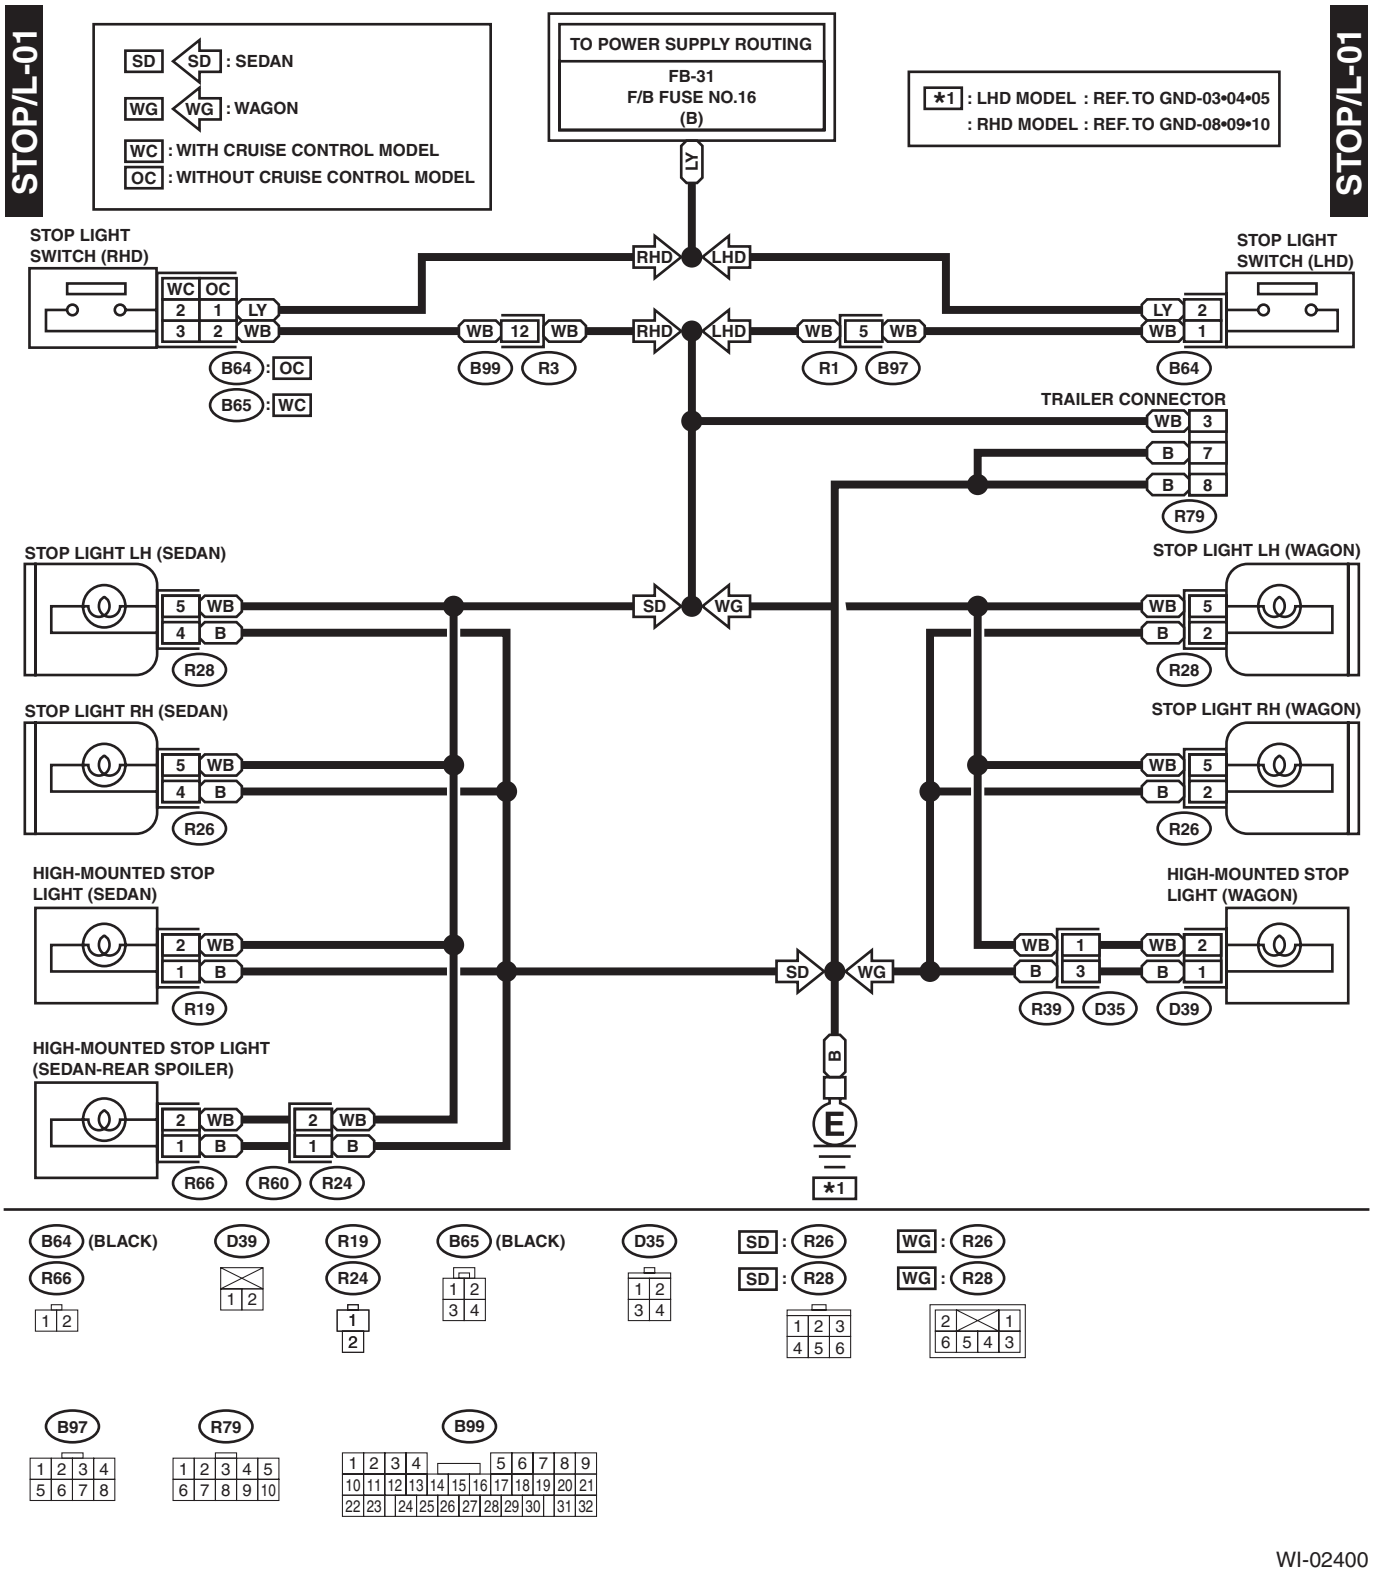

WI-02400

28.Turn Signal Light and Hazard Light System

A: SCHEMATIC

1. LHD MODEL

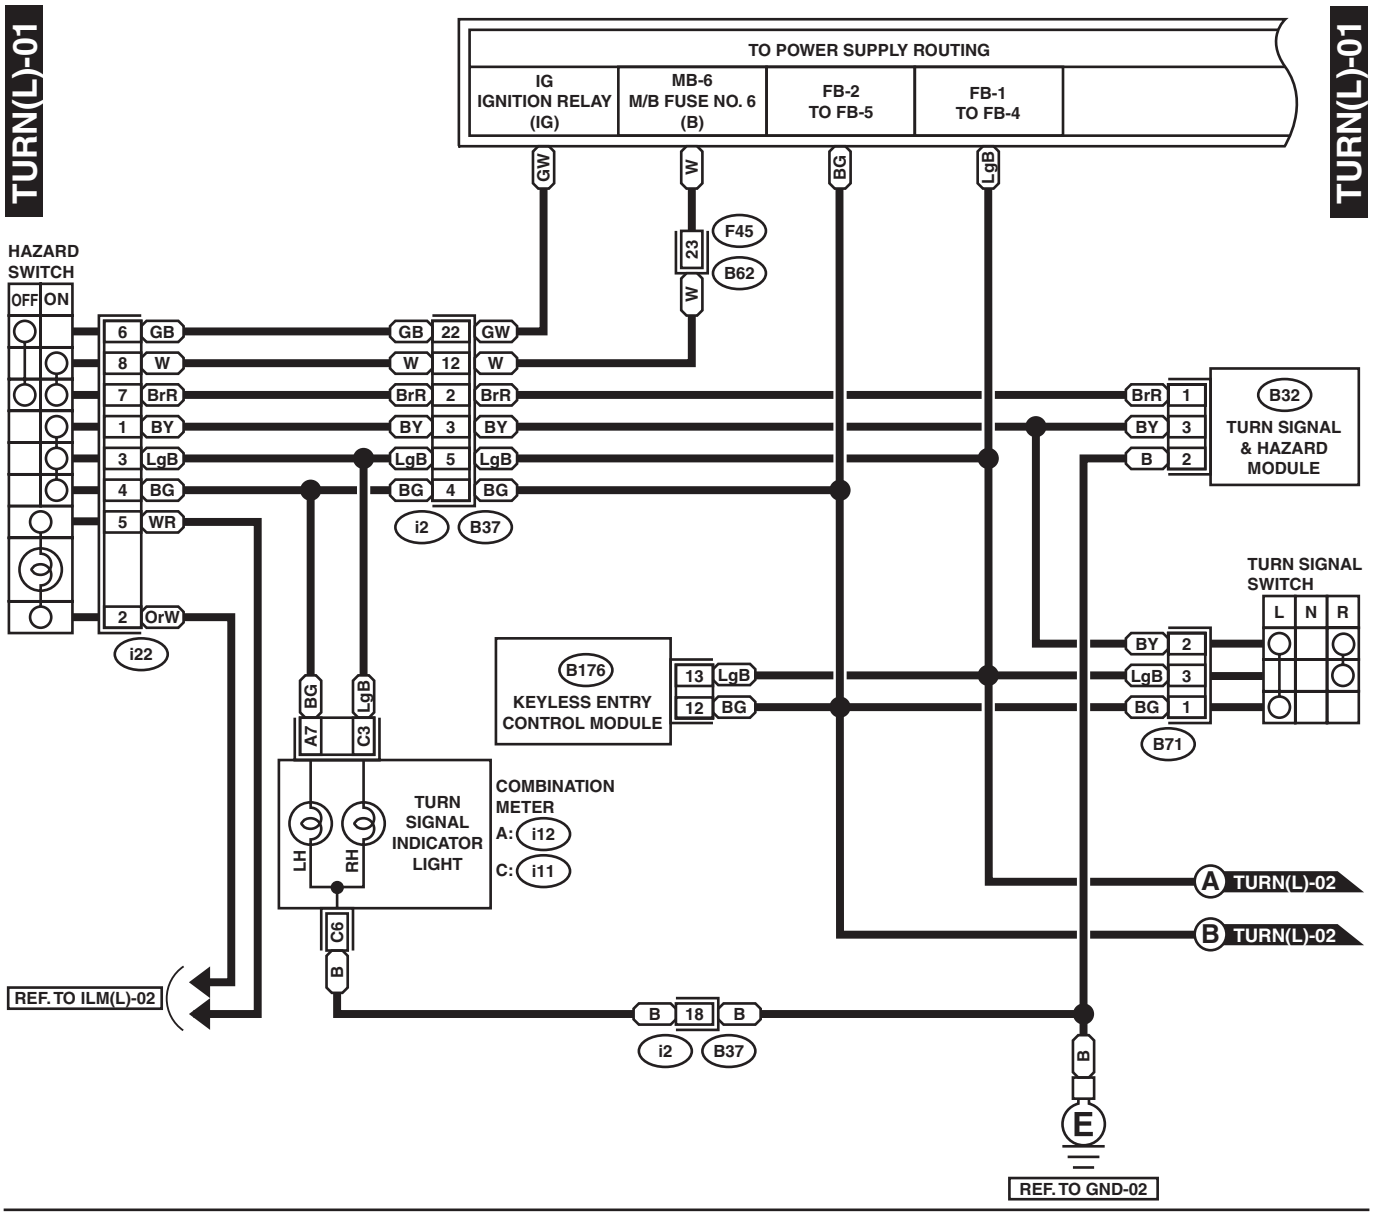

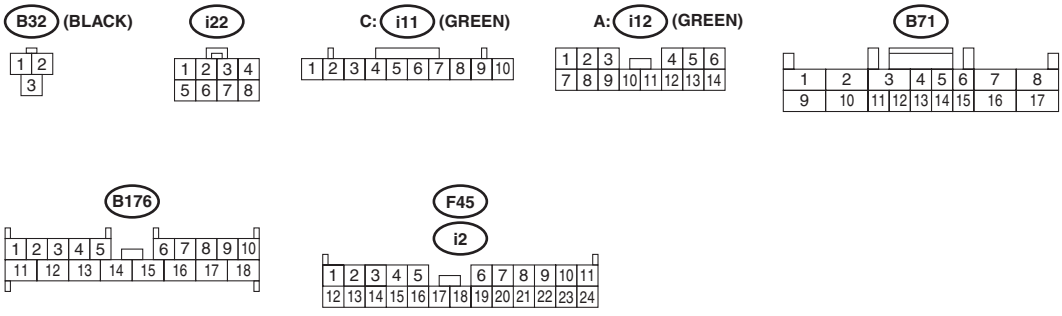

WI-02401

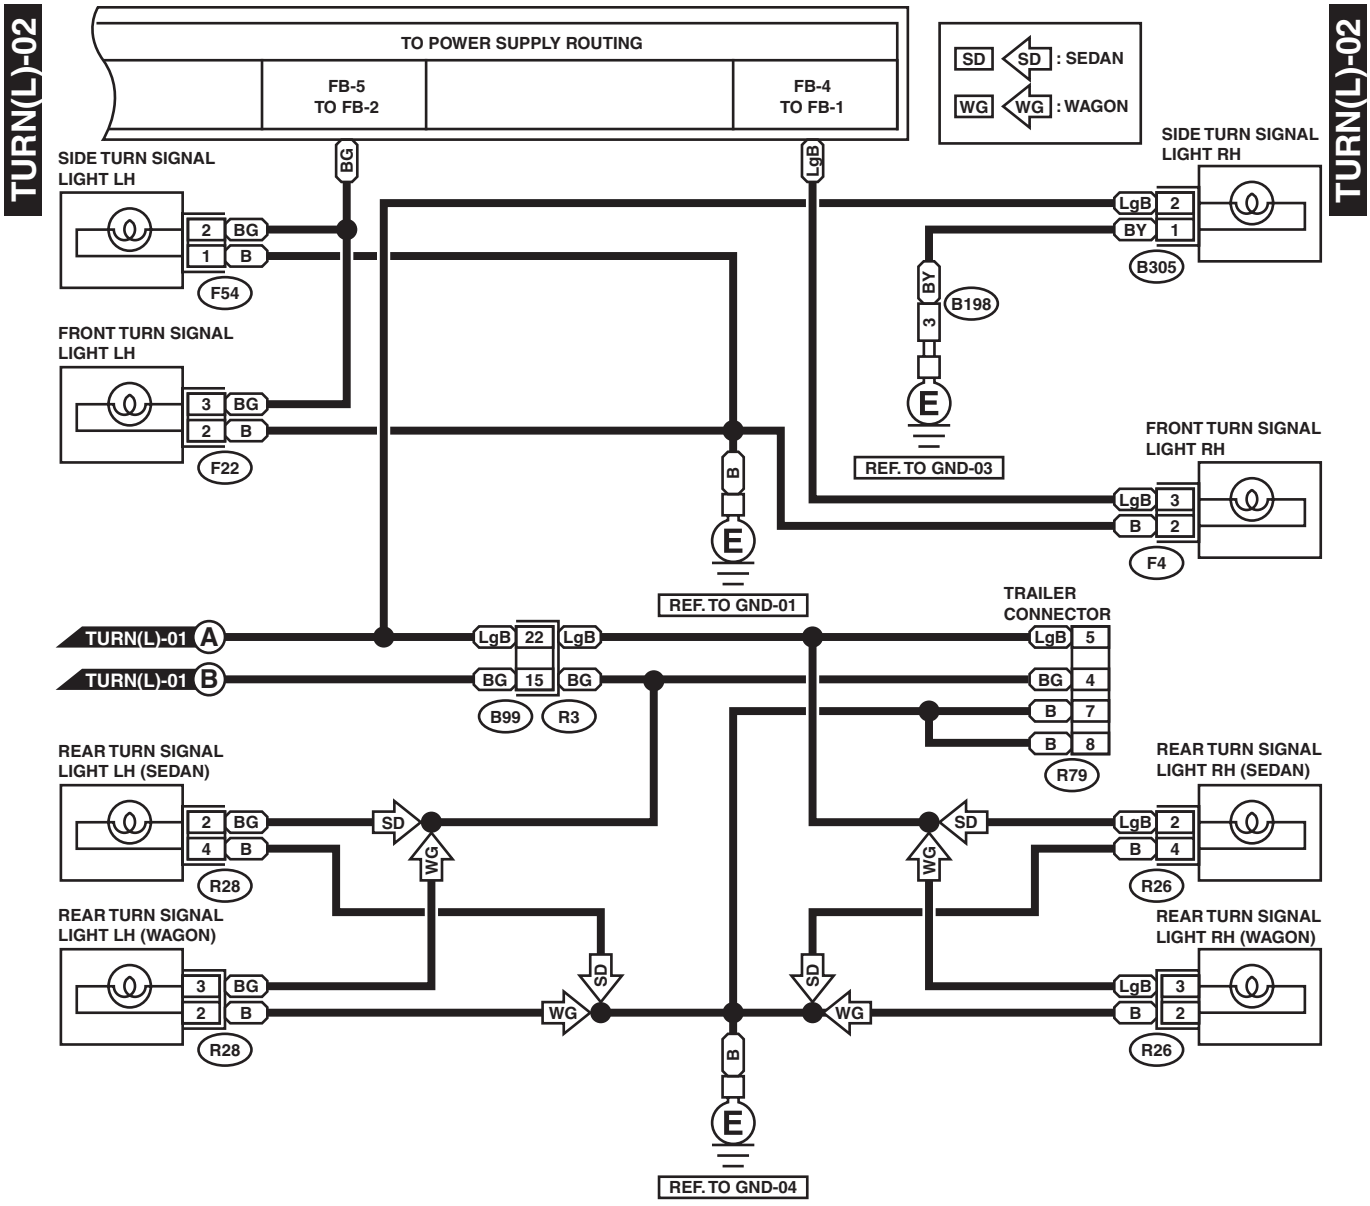
TURN(L)-02
TO POWER SUPPLY ROUTING
FB-5
TO FB-2
FB-4
TO FB-1
SD : SEDAN
WG : WAGON
SIDE TURN SIGNAL LIGHT LH
SIDE TURN SIGNAL LIGHT RH
FRONT TURN SIGNAL LIGHT LH
FRONT TURN SIGNAL LIGHT RH
F54
F22
F4
B305
B198
REF. TO GND-03
REF. TO GND-01
TRAILER CONNECTOR
TURN(L)-01 A
TURN(L)-01 B
B99
R3
R79
REAR TURN SIGNAL LIGHT LH (SEDAN)
REAR TURN SIGNAL LIGHT RH (SEDAN)
REAR TURN SIGNAL LIGHT LH (WAGON)
REAR TURN SIGNAL LIGHT RH (WAGON)
R28
R26
REF. TO GND-04

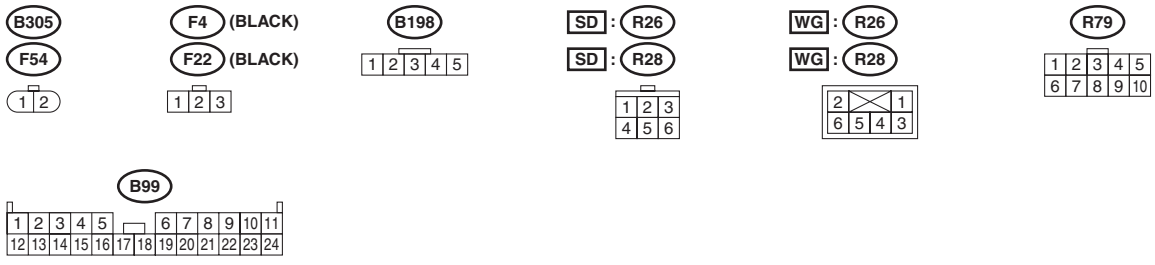
B305
F54
F4 (BLACK)
F22 (BLACK)
B198
SD : R26
SD : R28
WG : R26
WG : R28
R79

B99

WI-02402

2. RHD MODEL

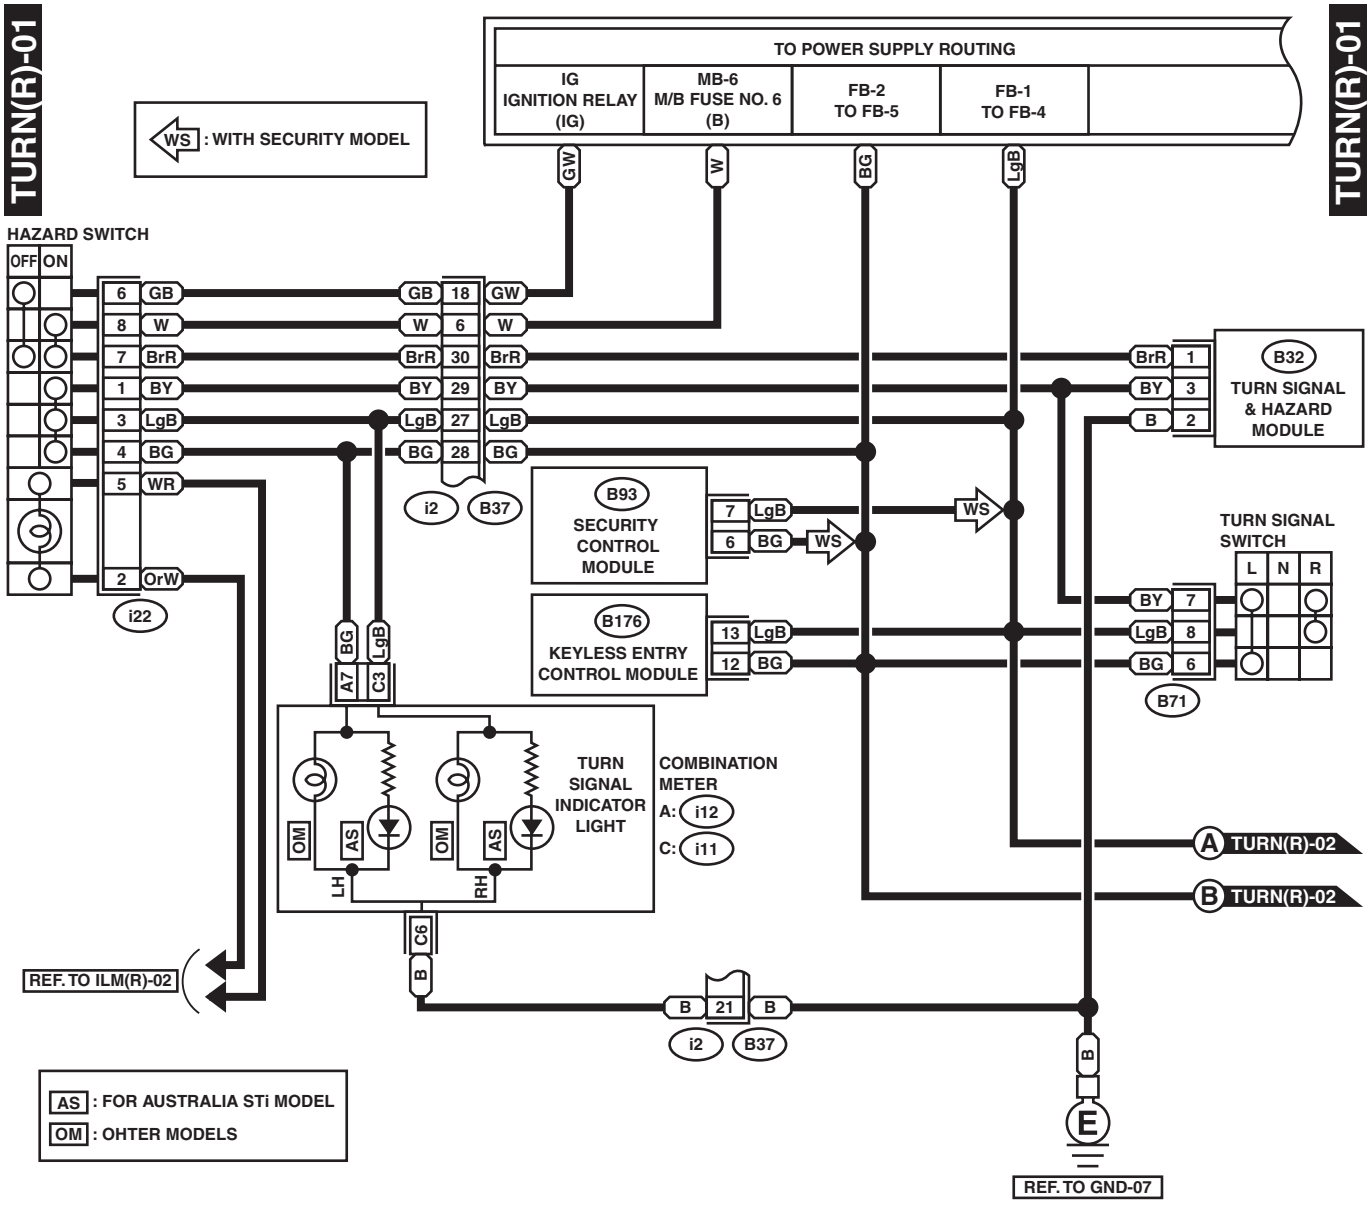

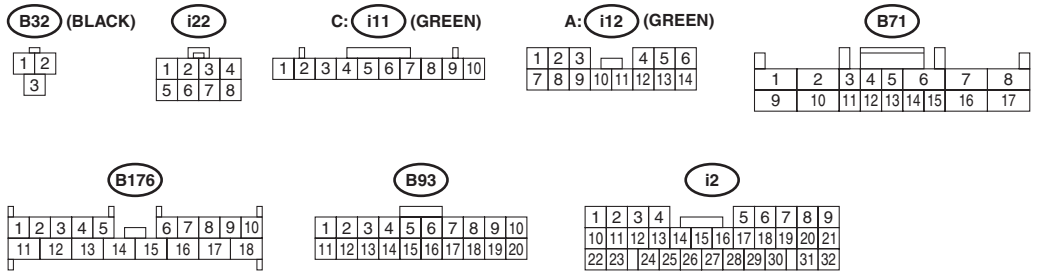

WI-02403

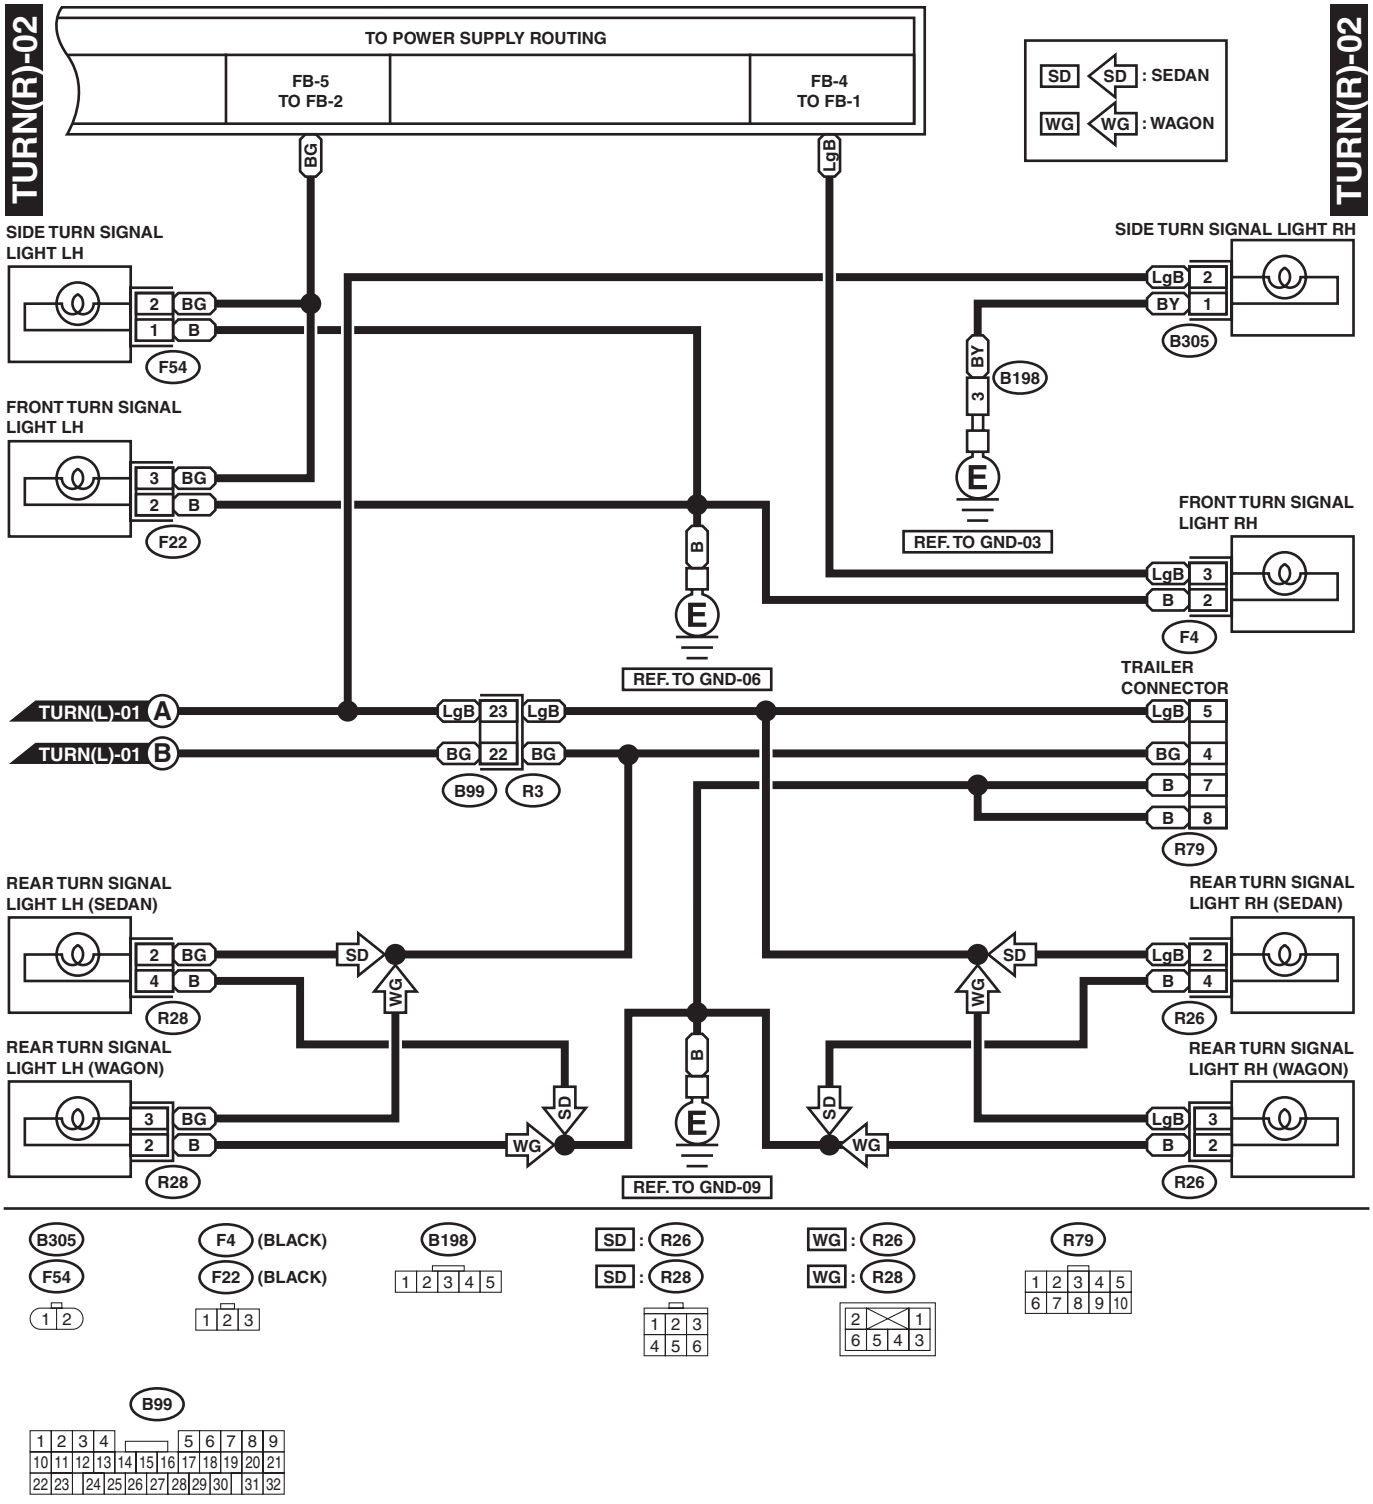
TURN(R)-02
TO POWER SUPPLY ROUTING
FB-5
TO FB-2
FB-4
TO FB-1
SD : SEDAN
WG : WAGON
TURN(R)-02
SIDE TURN SIGNAL LIGHT LH
SIDE TURN SIGNAL LIGHT RH
FRONT TURN SIGNAL LIGHT LH
FRONT TURN SIGNAL LIGHT RH
TRAILER CONNECTOR
REF. TO GND-03
REF. TO GND-06
REF. TO GND-09
TURN(L)-01 A
TURN(L)-01 B
REAR TURN SIGNAL LIGHT LH (SEDAN)
REAR TURN SIGNAL LIGHT RH (SEDAN)
REAR TURN SIGNAL LIGHT LH (WAGON)
REAR TURN SIGNAL LIGHT RH (WAGON)
F54
F22
F4
B305
B198
B99
R3
R79
R28
R26

B305
F54
F4 (BLACK)
F22 (BLACK)
B198
SD : R26
SD : R28
WG : R26
WG : R28
R79
B99

WI-02404

29.Oil Pressure Warning Light System

A: SCHEMATIC

1. LHD MODEL

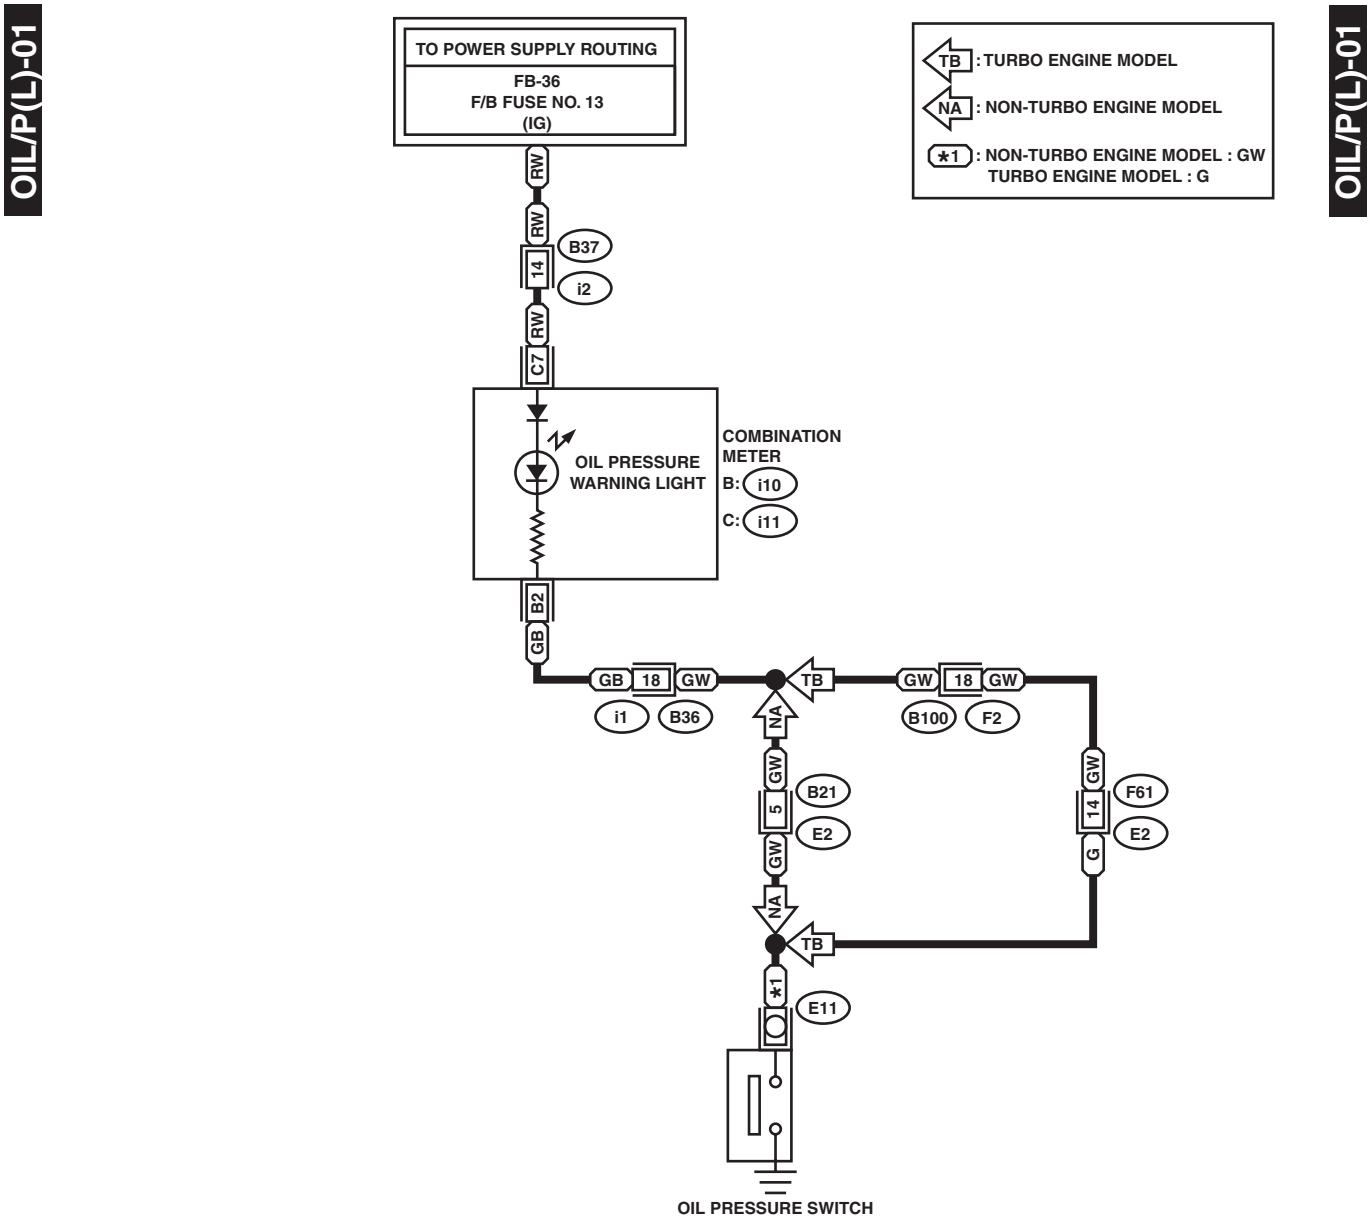

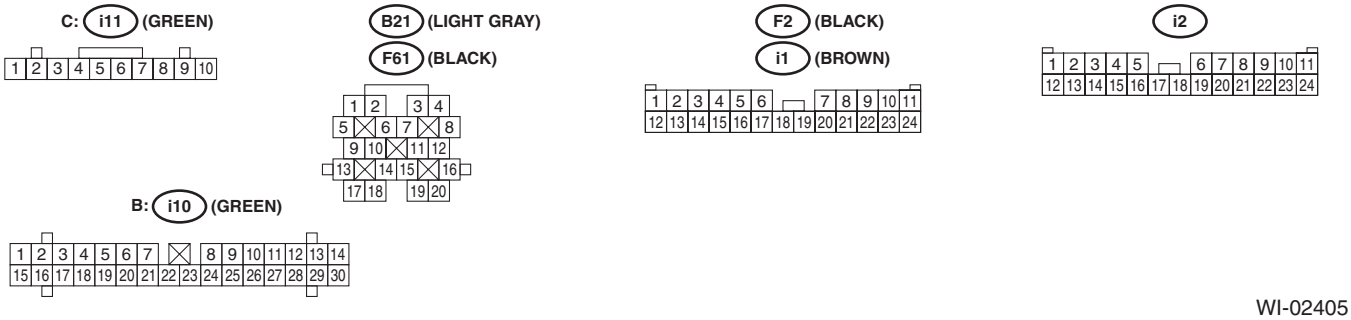

WI-02405

2. RHD MODEL

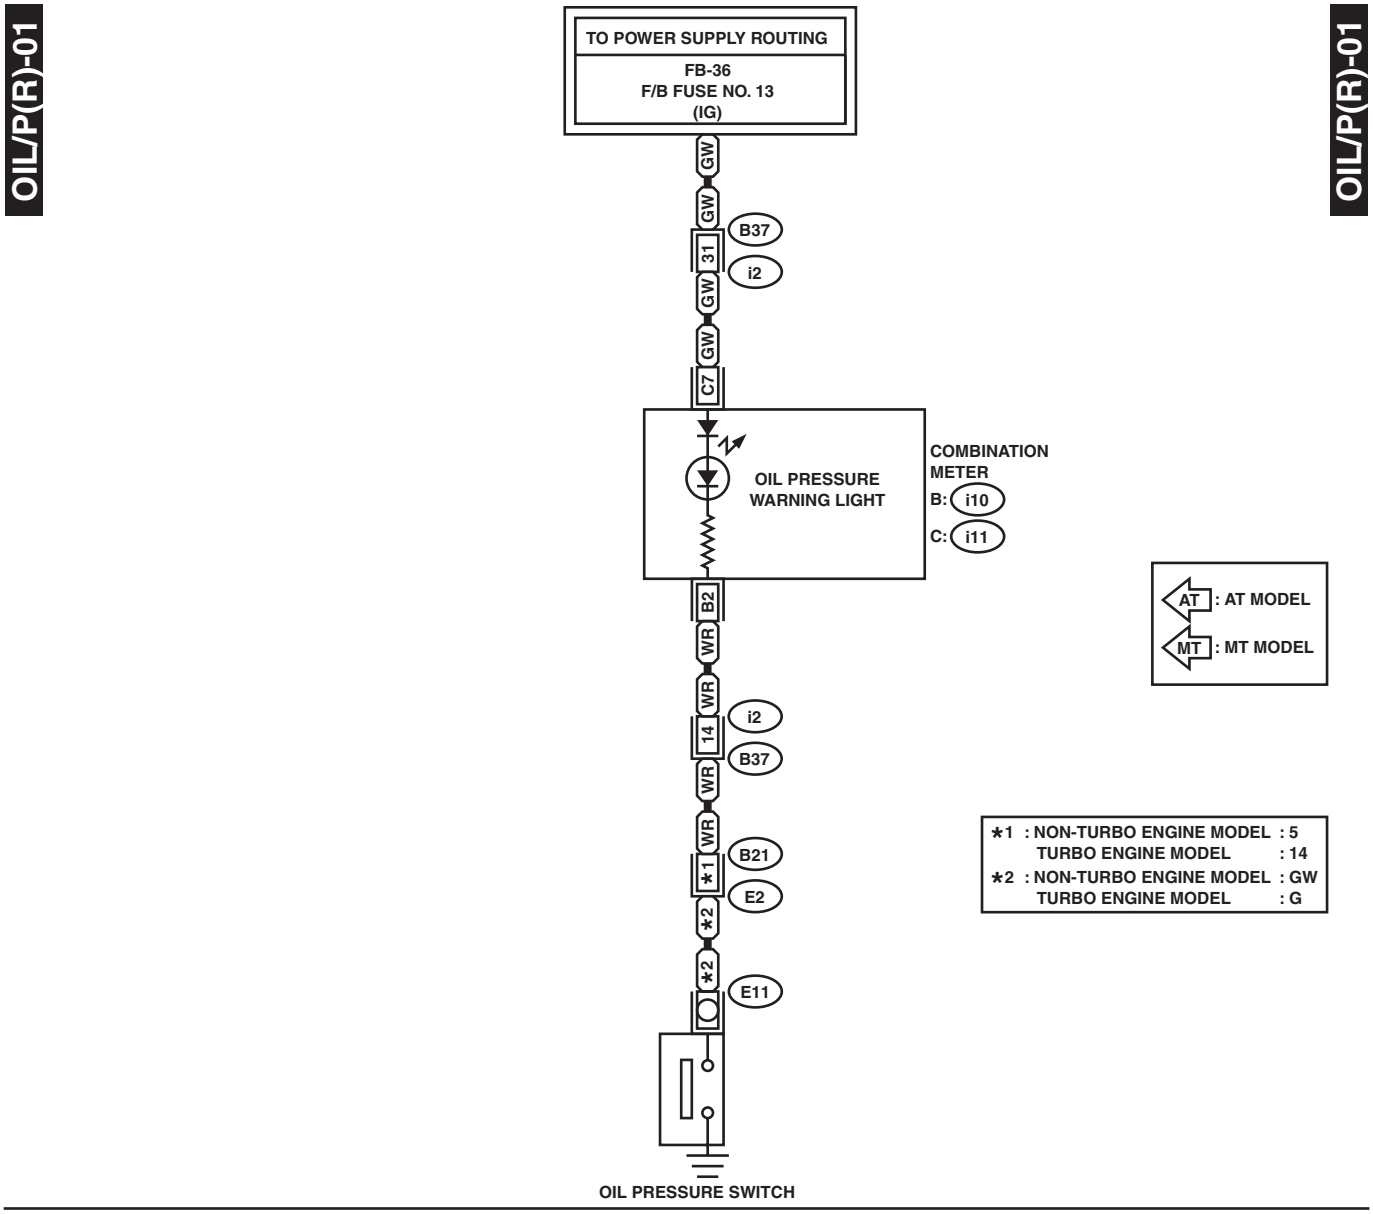

WI-02406

30.Outside Temperature Display System

A: SCHEMATIC

1. LHD MODEL

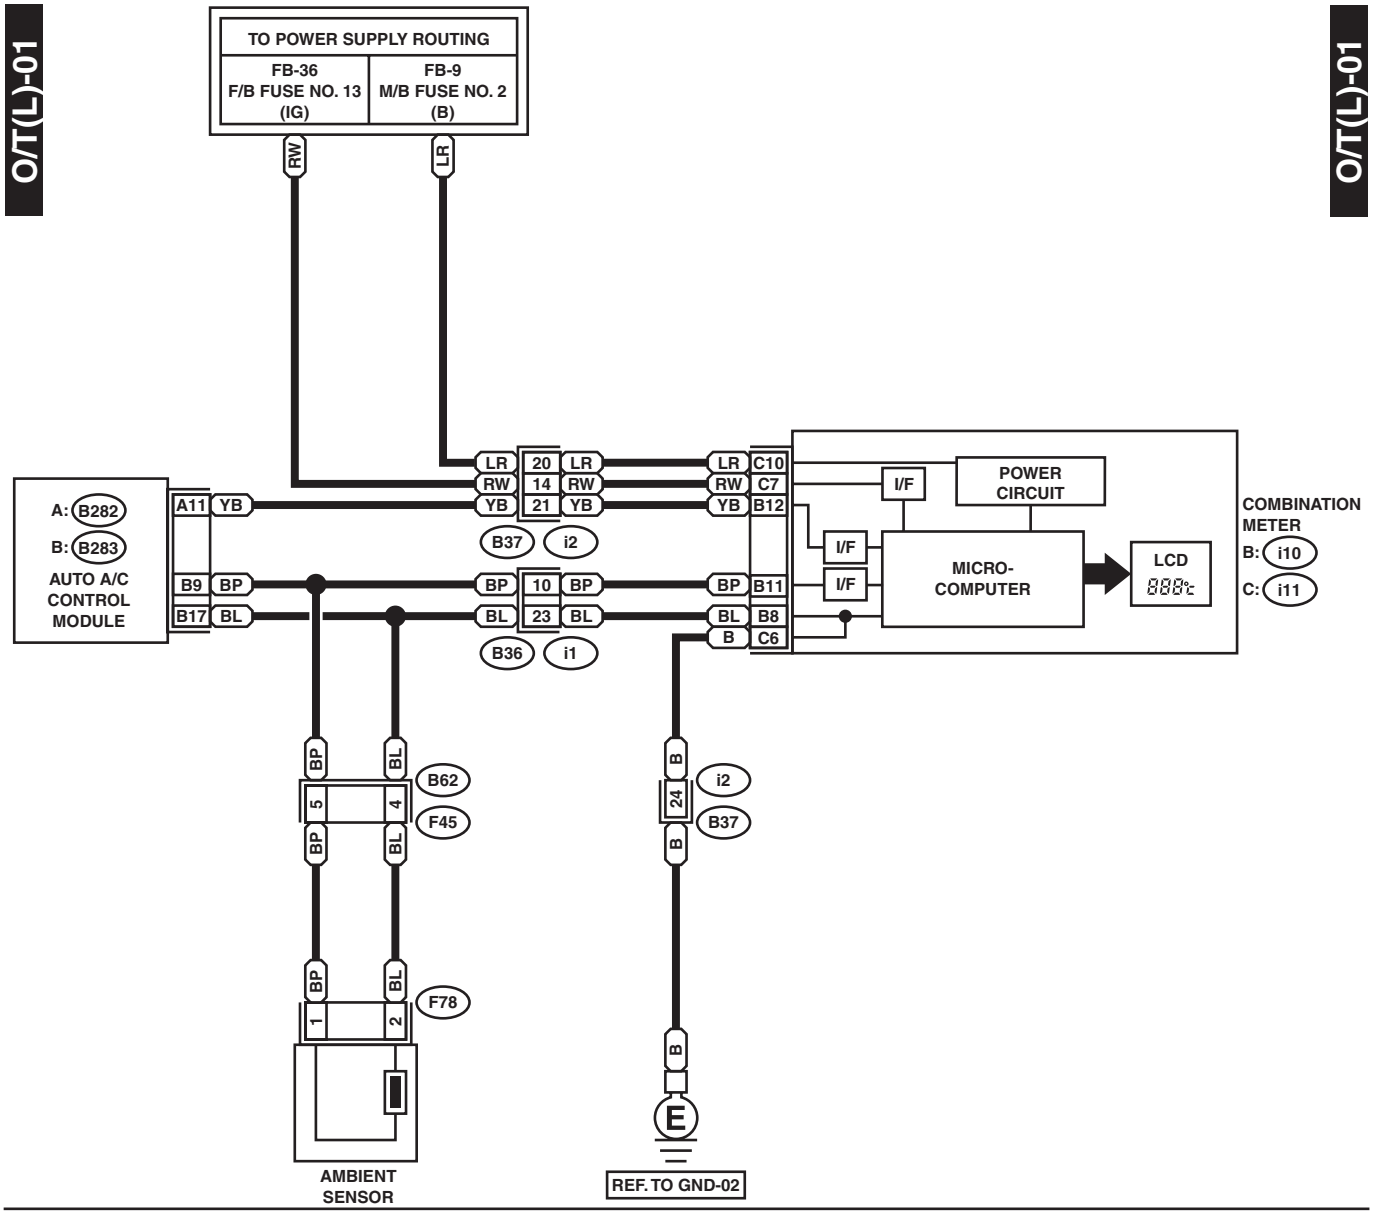

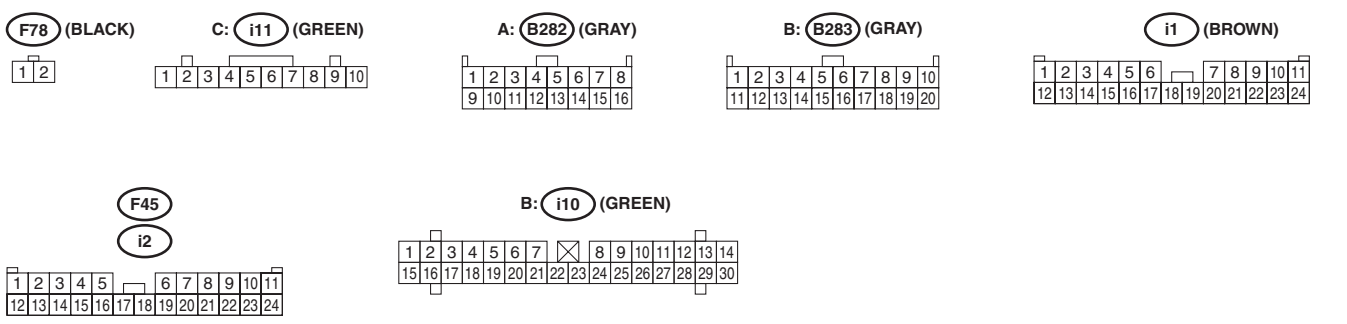

WI-02407

2. RHD MODEL

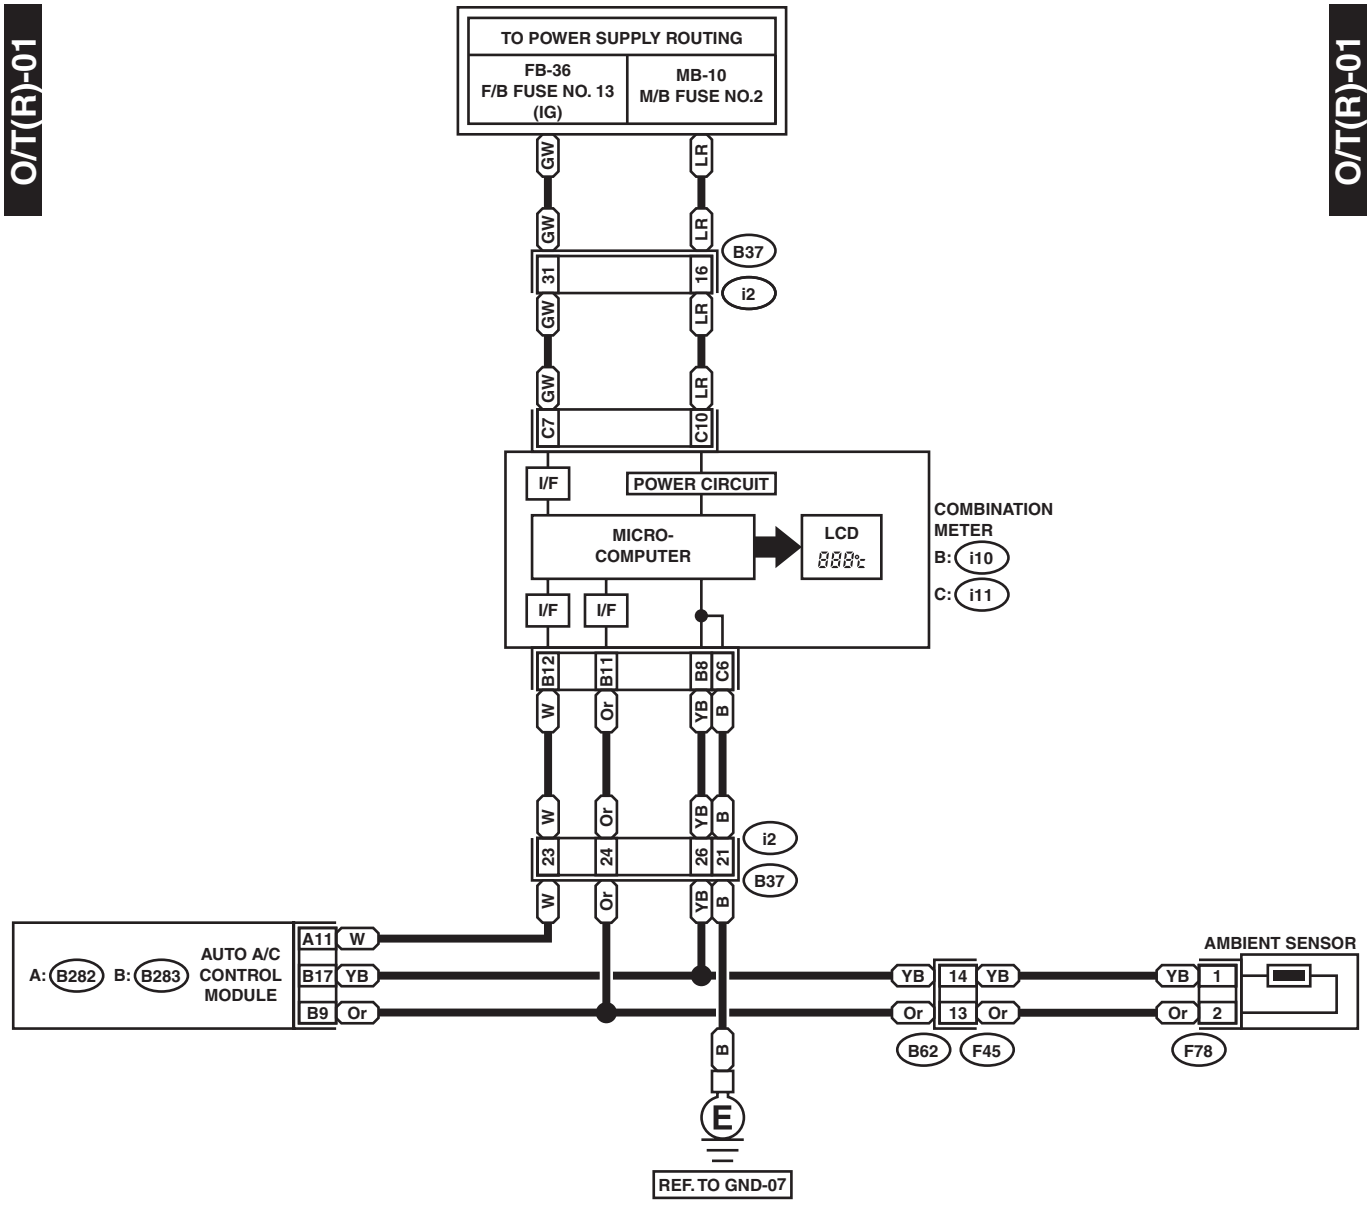

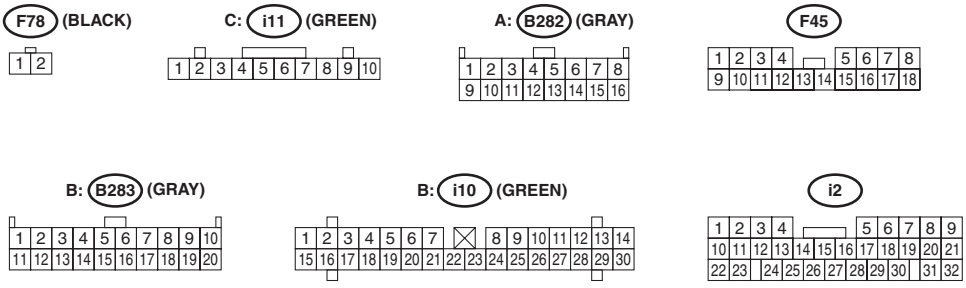

WI-02408

31.Parking Brake and Brake Fluid Level Warning System

A: SCHEMATIC

1. LHD MODEL

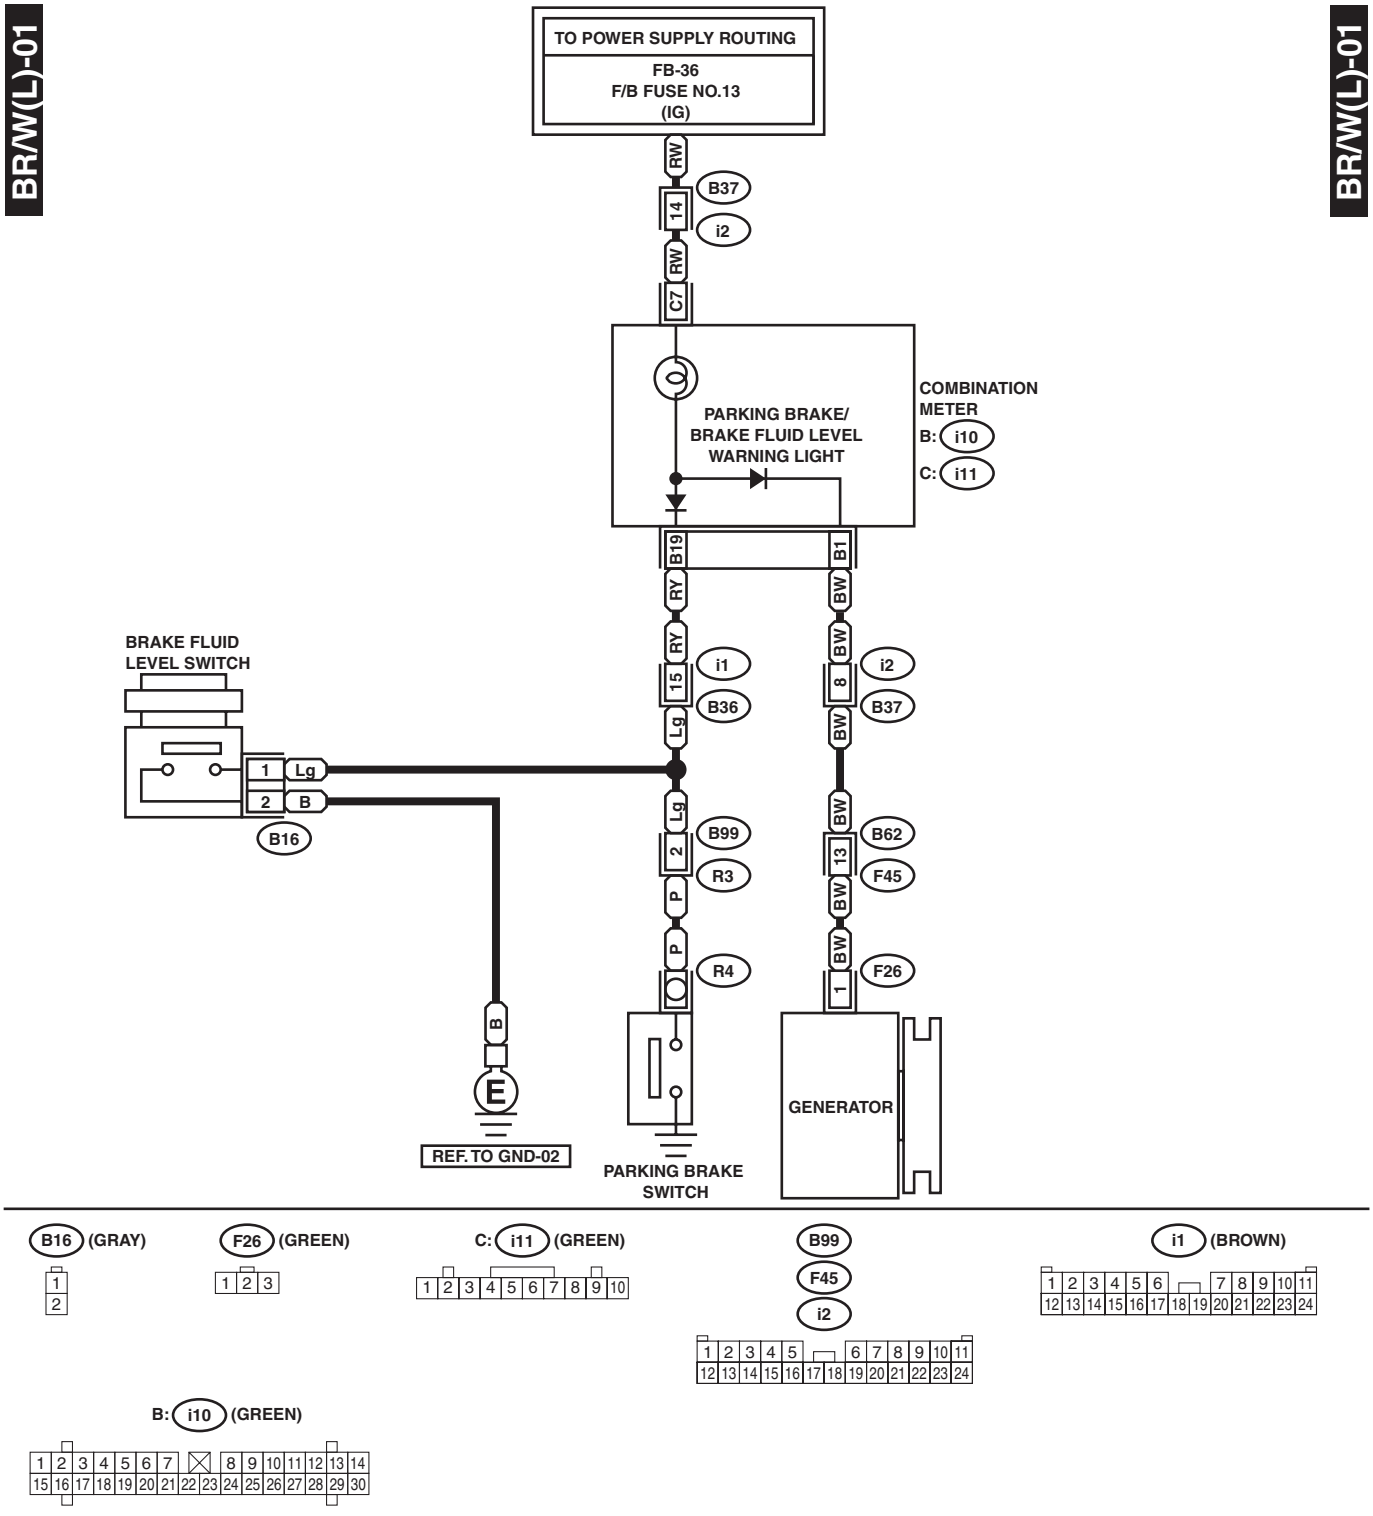

WI-02409

2. RHD MODEL

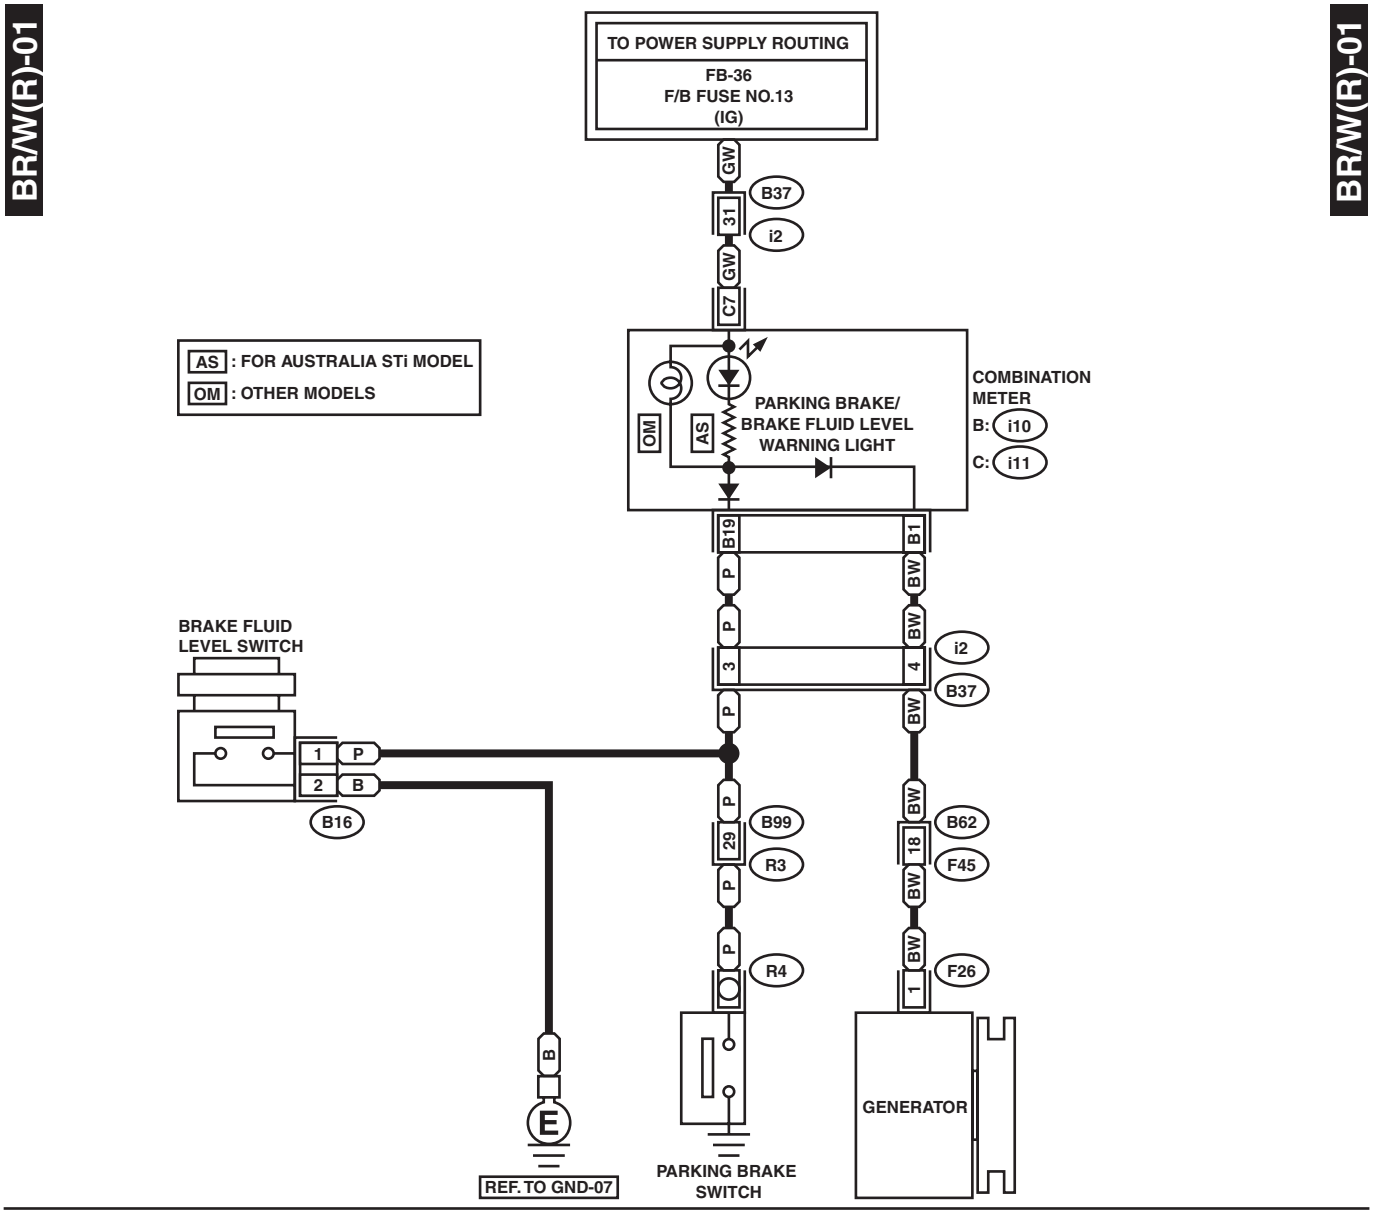

WI-02410

32.Power Window System

A: SCHEMATIC

1. LHD MODEL

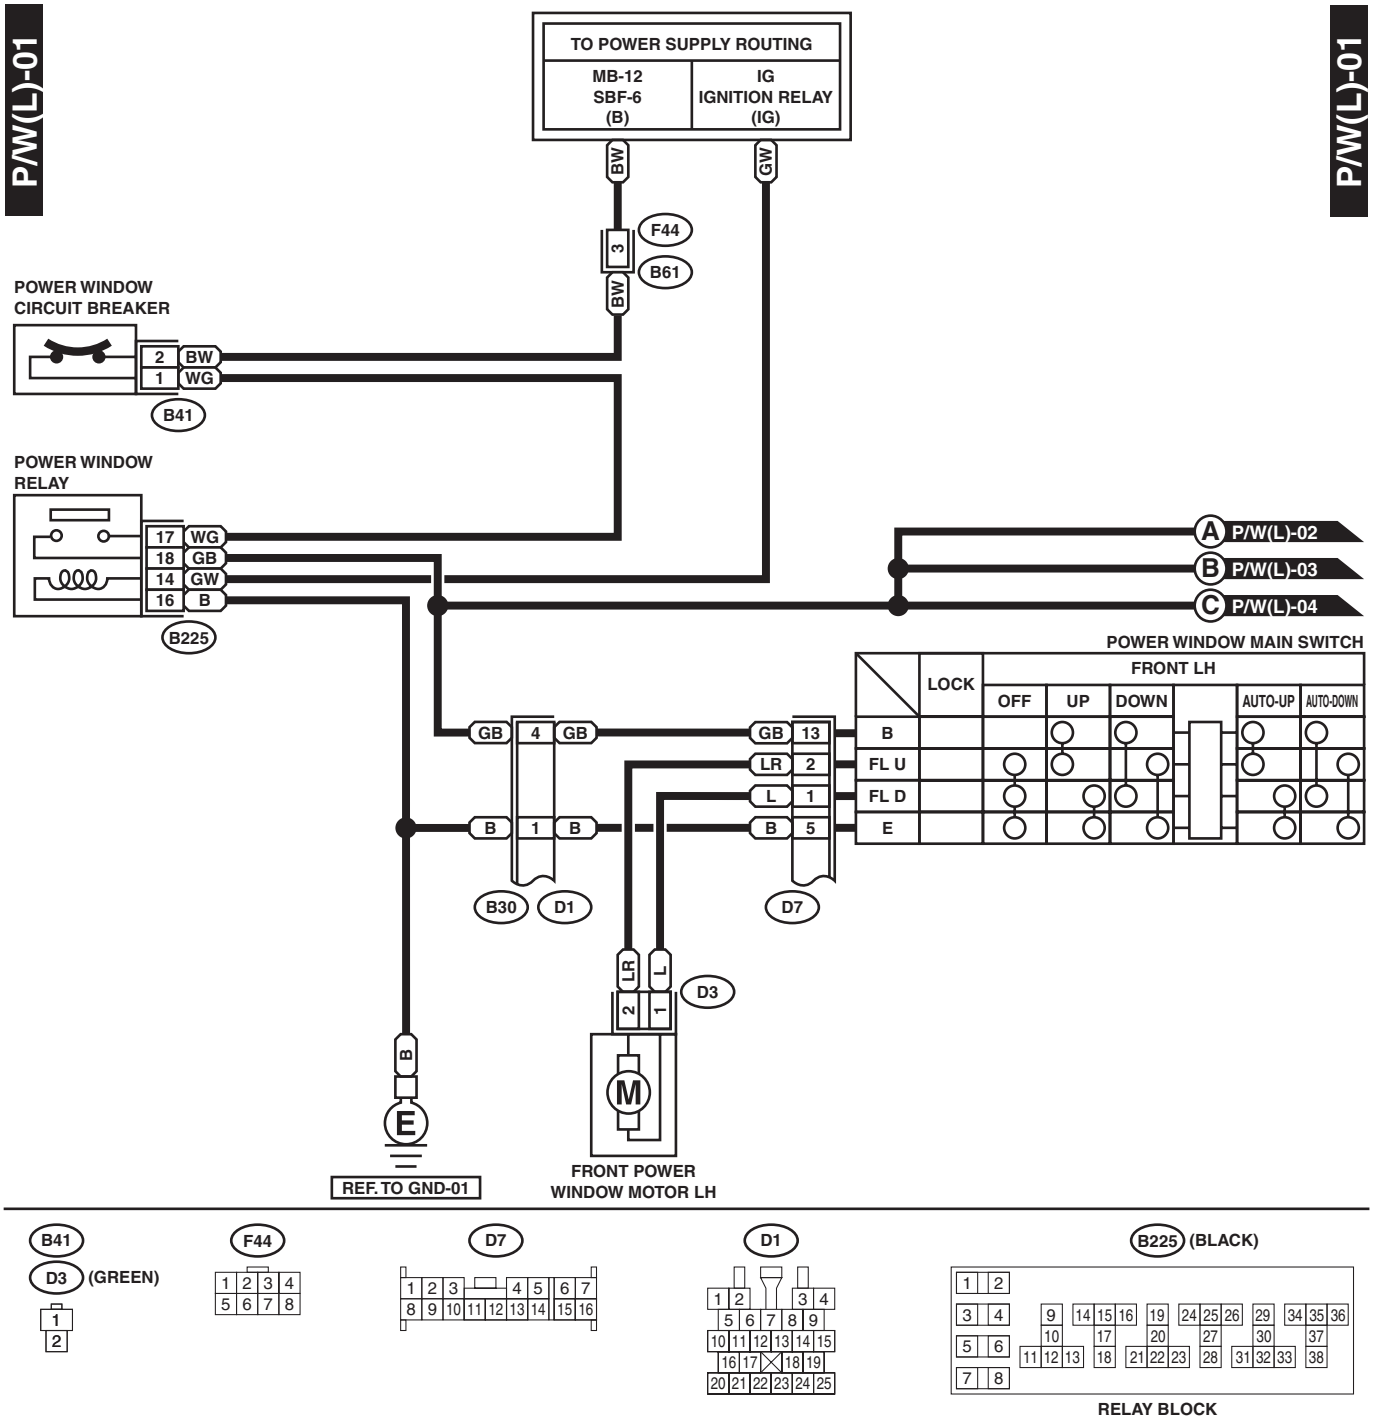

WI-02411

P/W(L)-02

P/W(L)-02

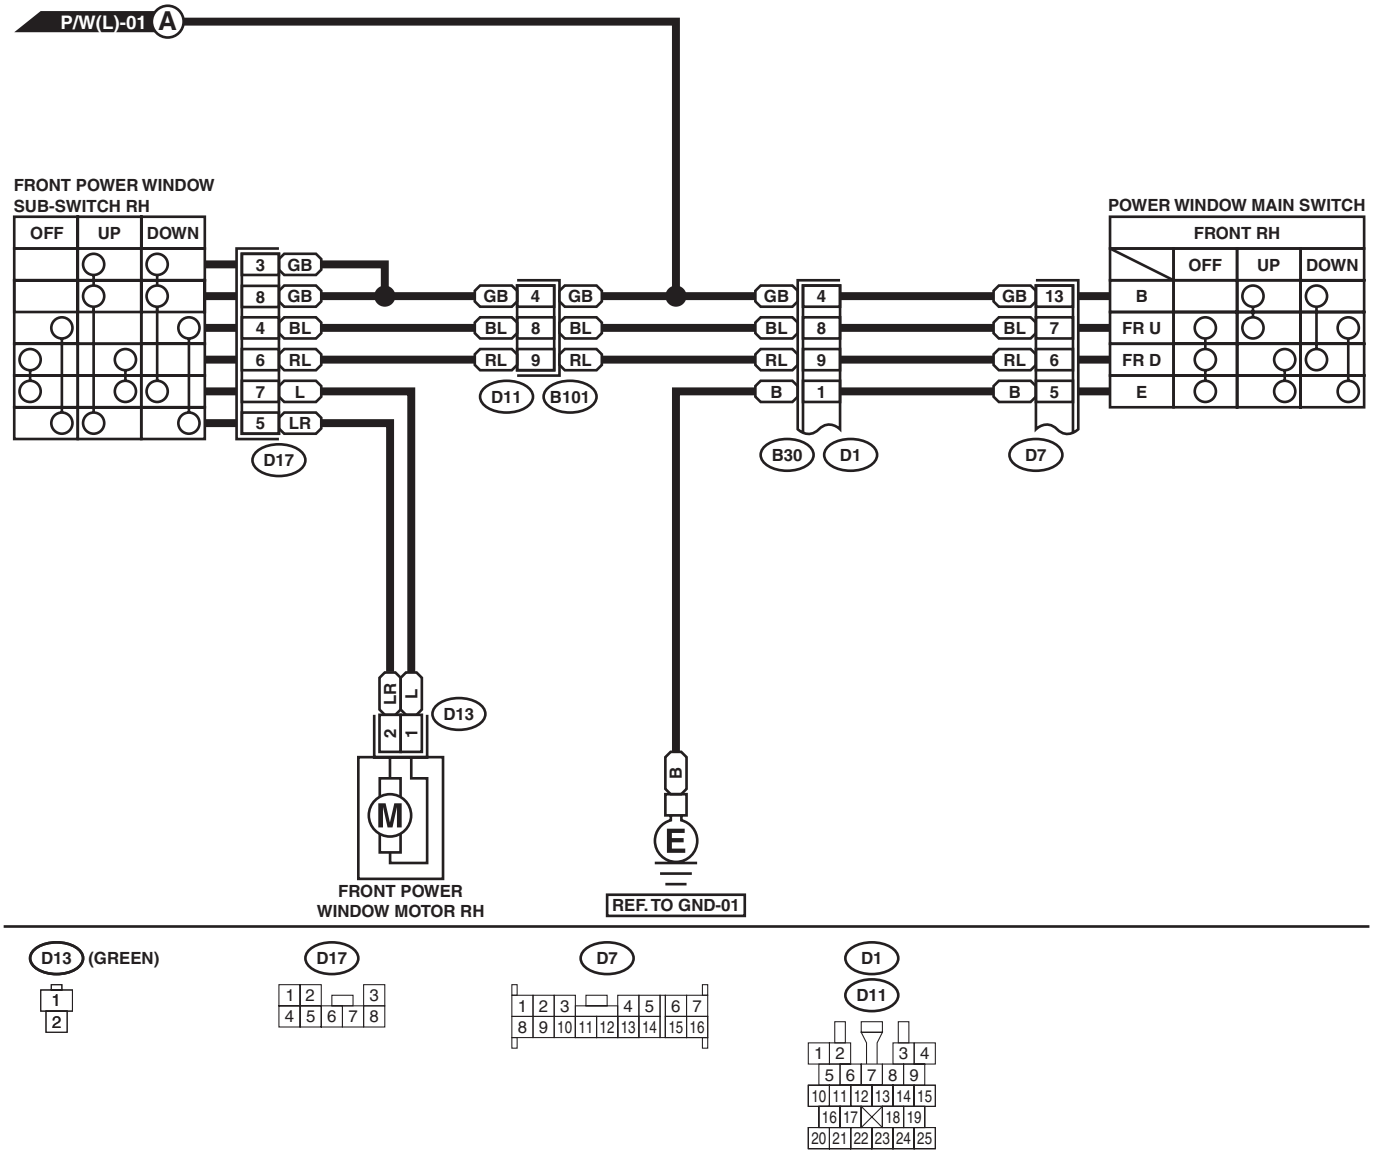

WI-02412

P/W(L)-03

P/W(L)-03

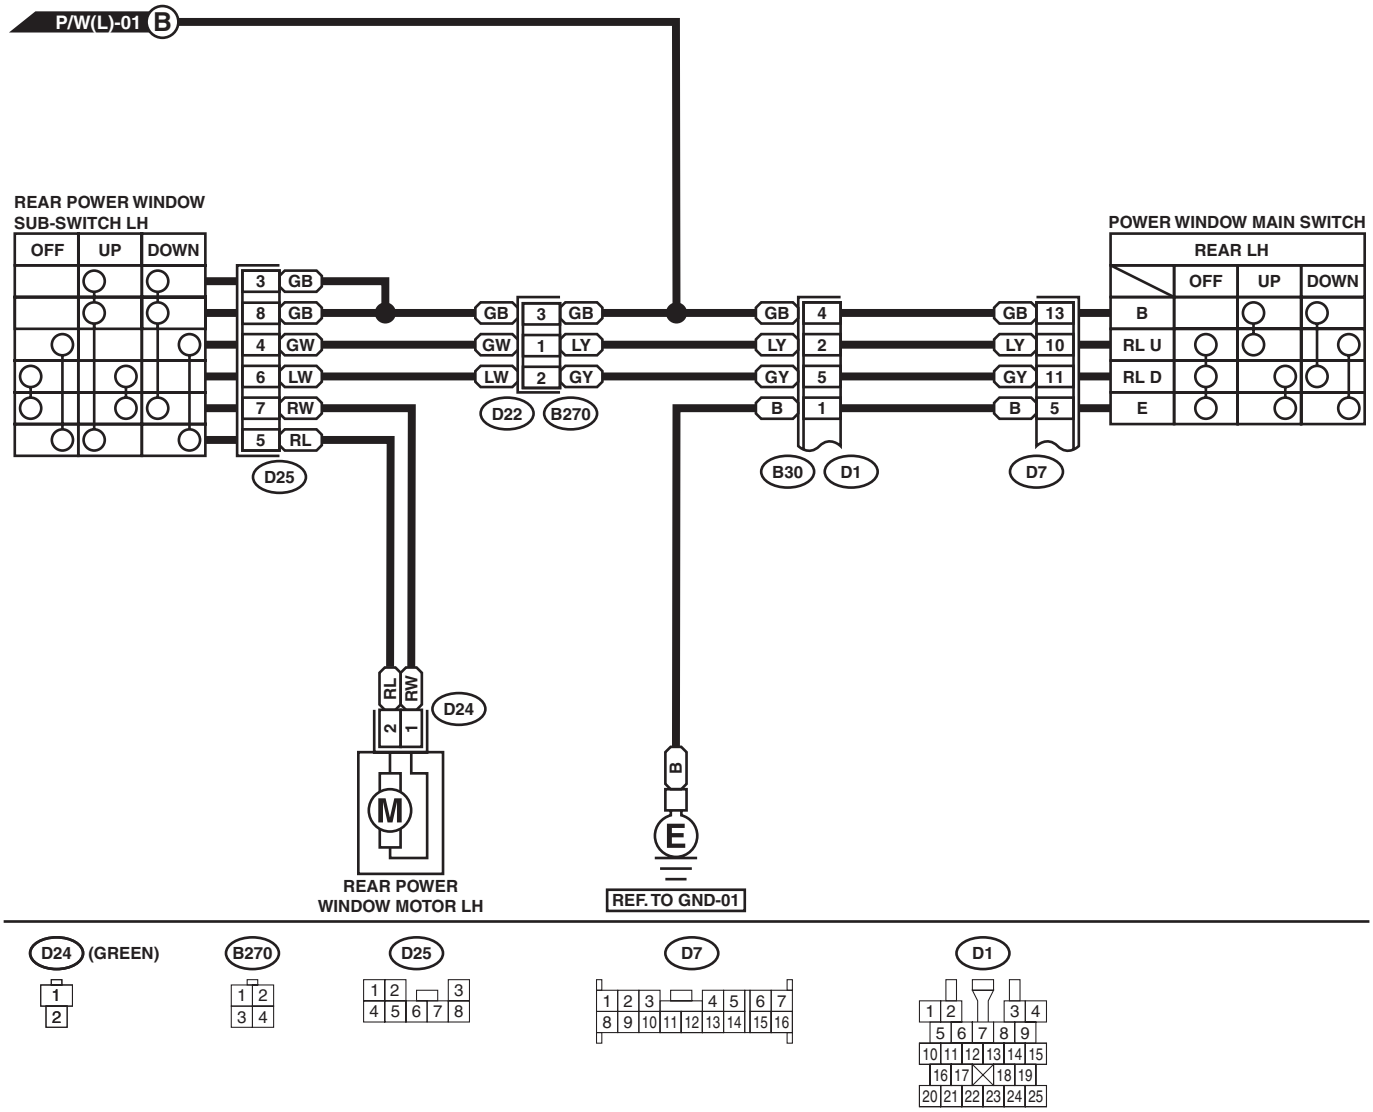

WI-02413

P/W(L)-04

P/W(L)-04

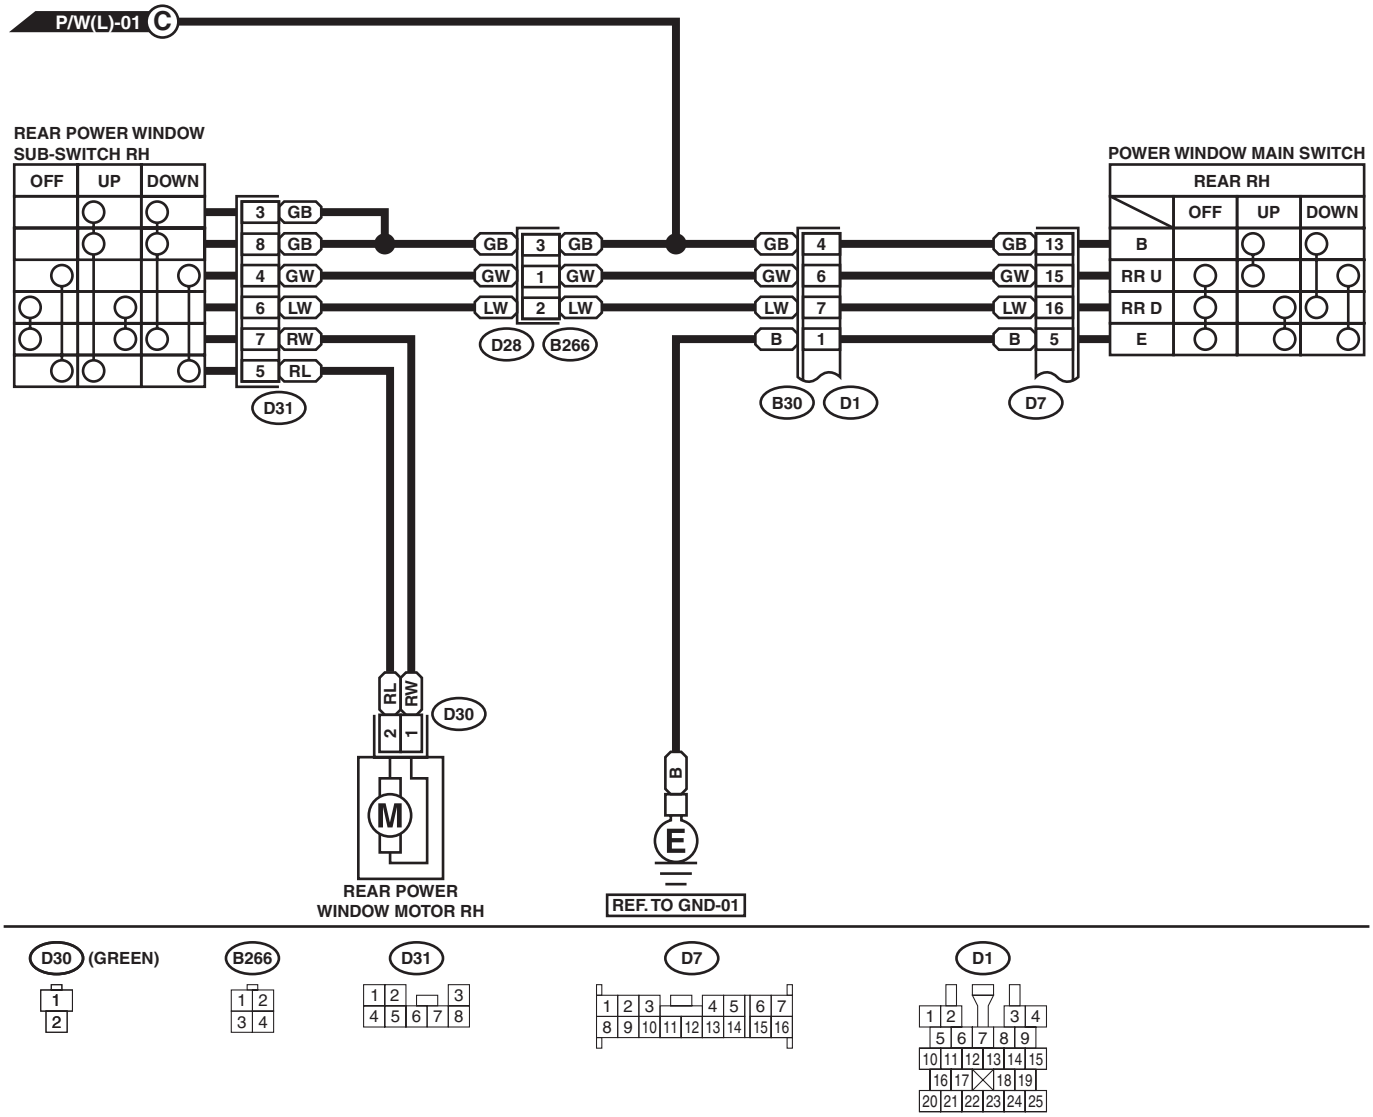

WI-02414

2. RHD MODEL

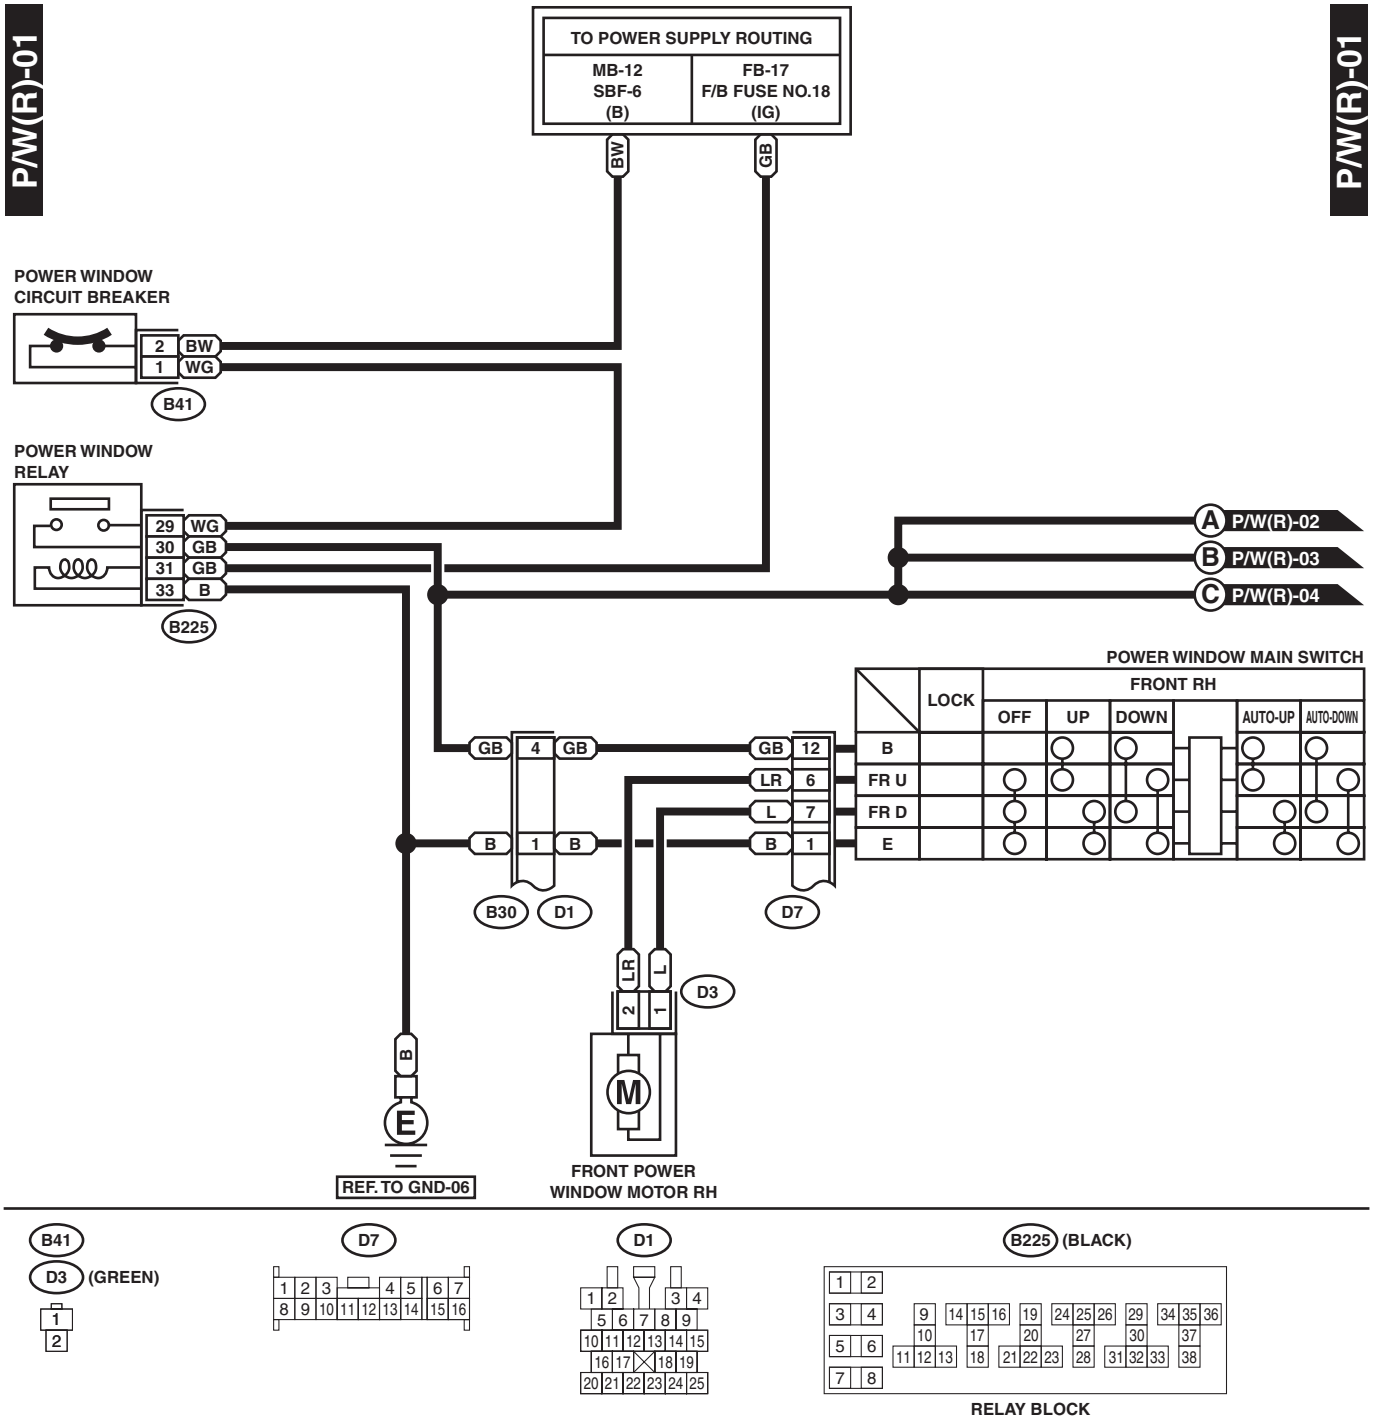

WI-02415

P/W(R)-02

P/W(R)-02

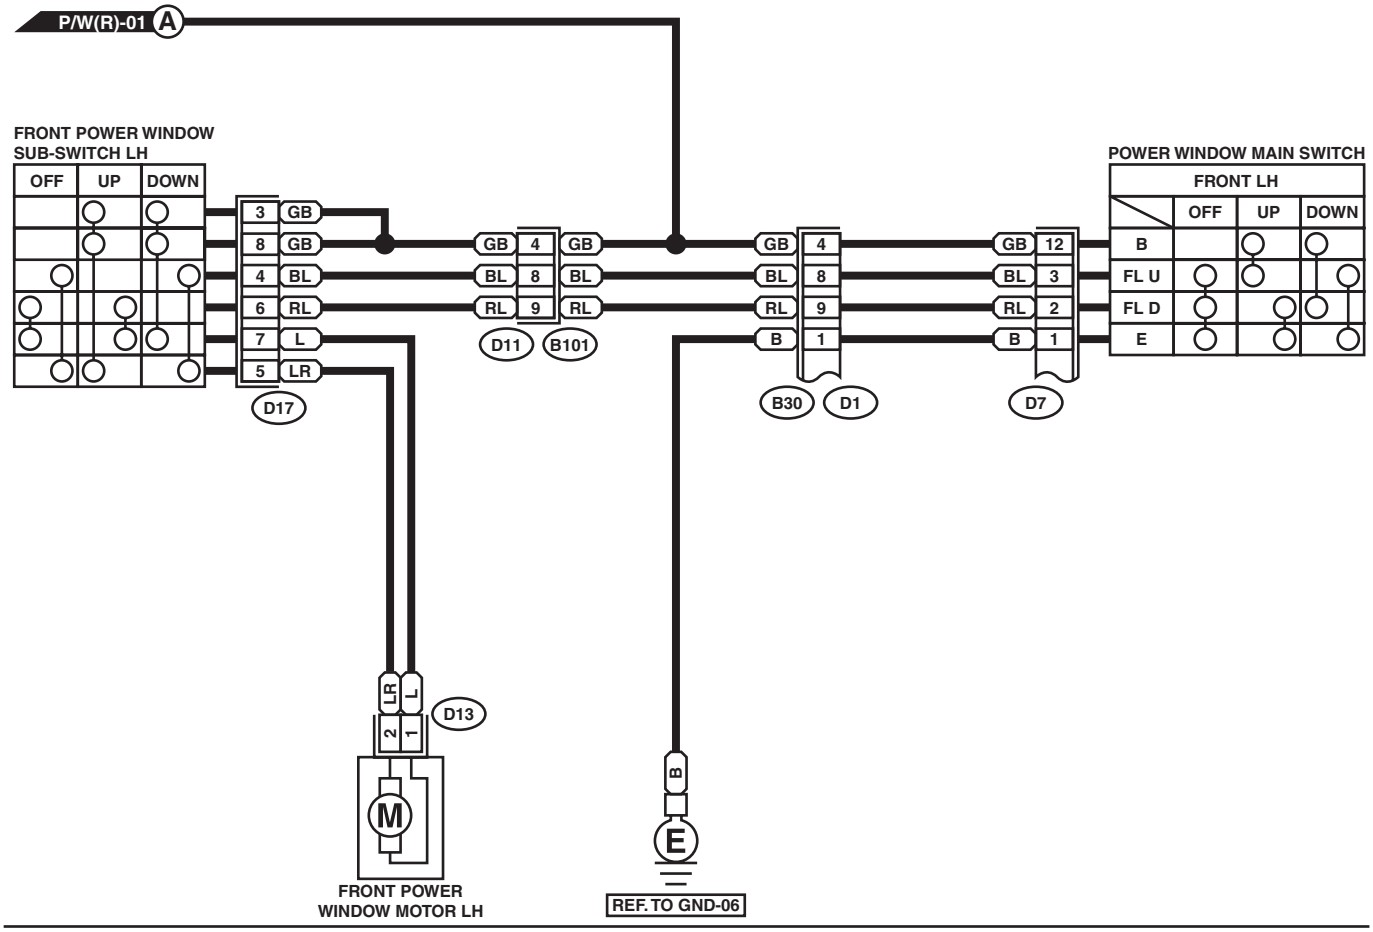

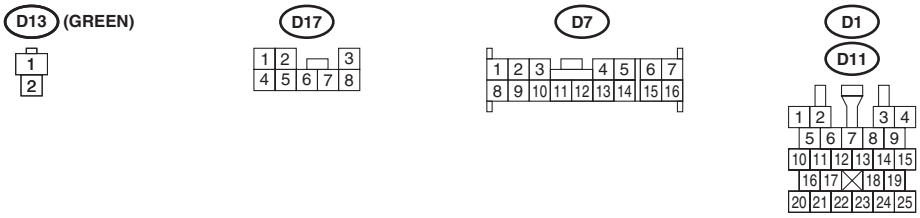

WI-02416

P/W(R)-03

P/W(R)-03

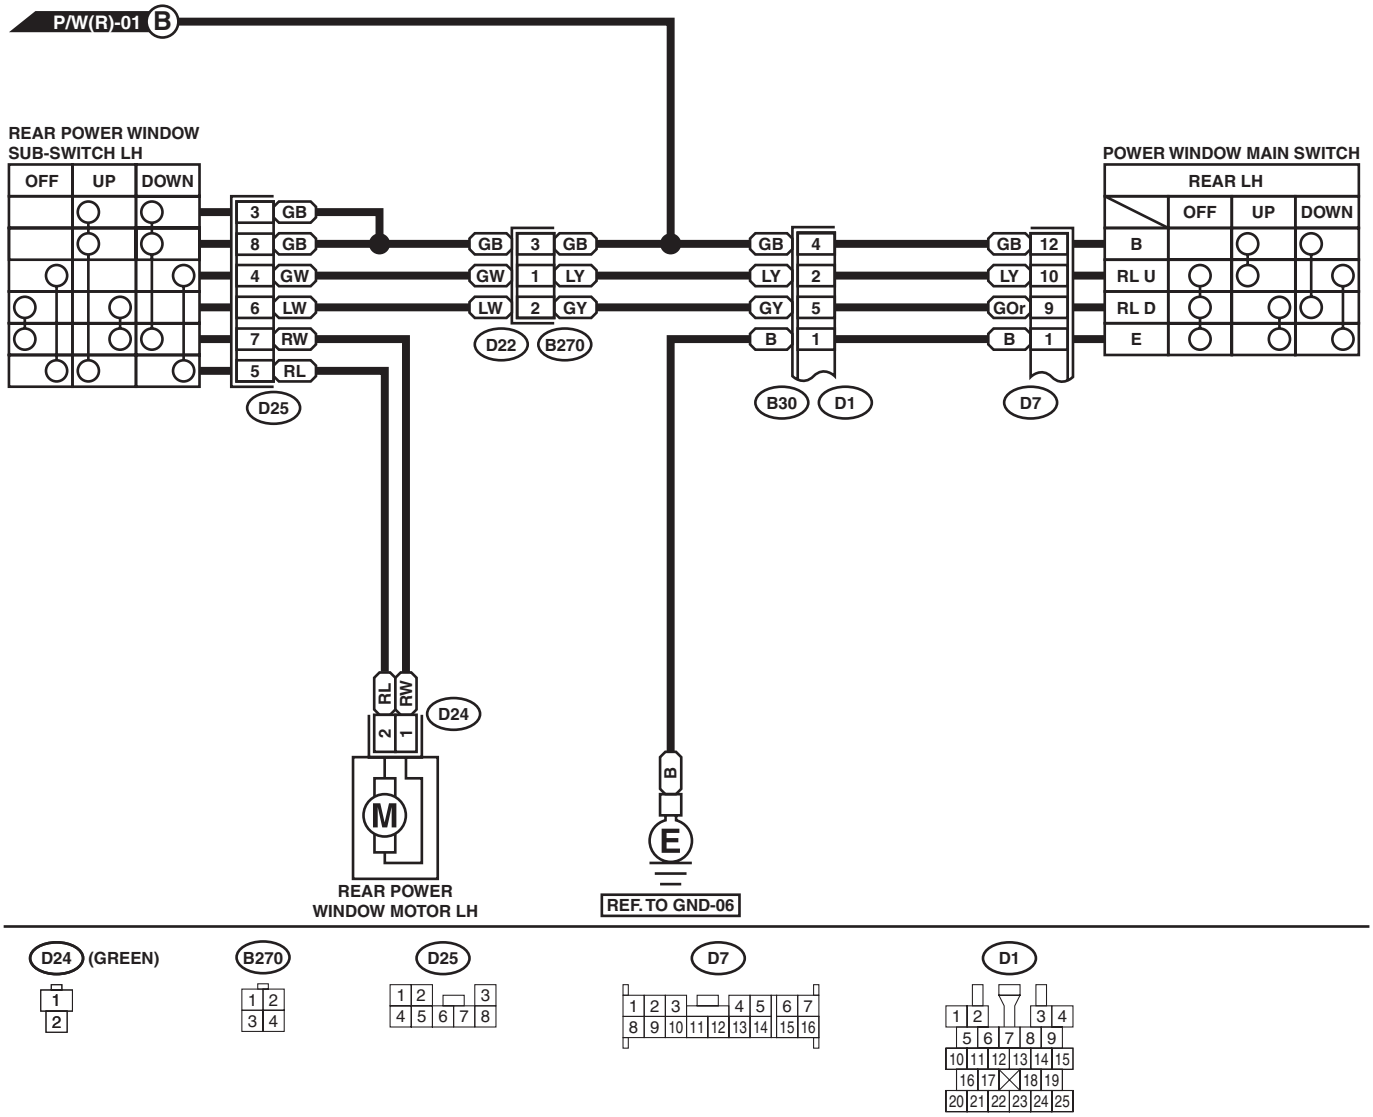

WI-02417

P/W(R)-04

P/W(R)-04

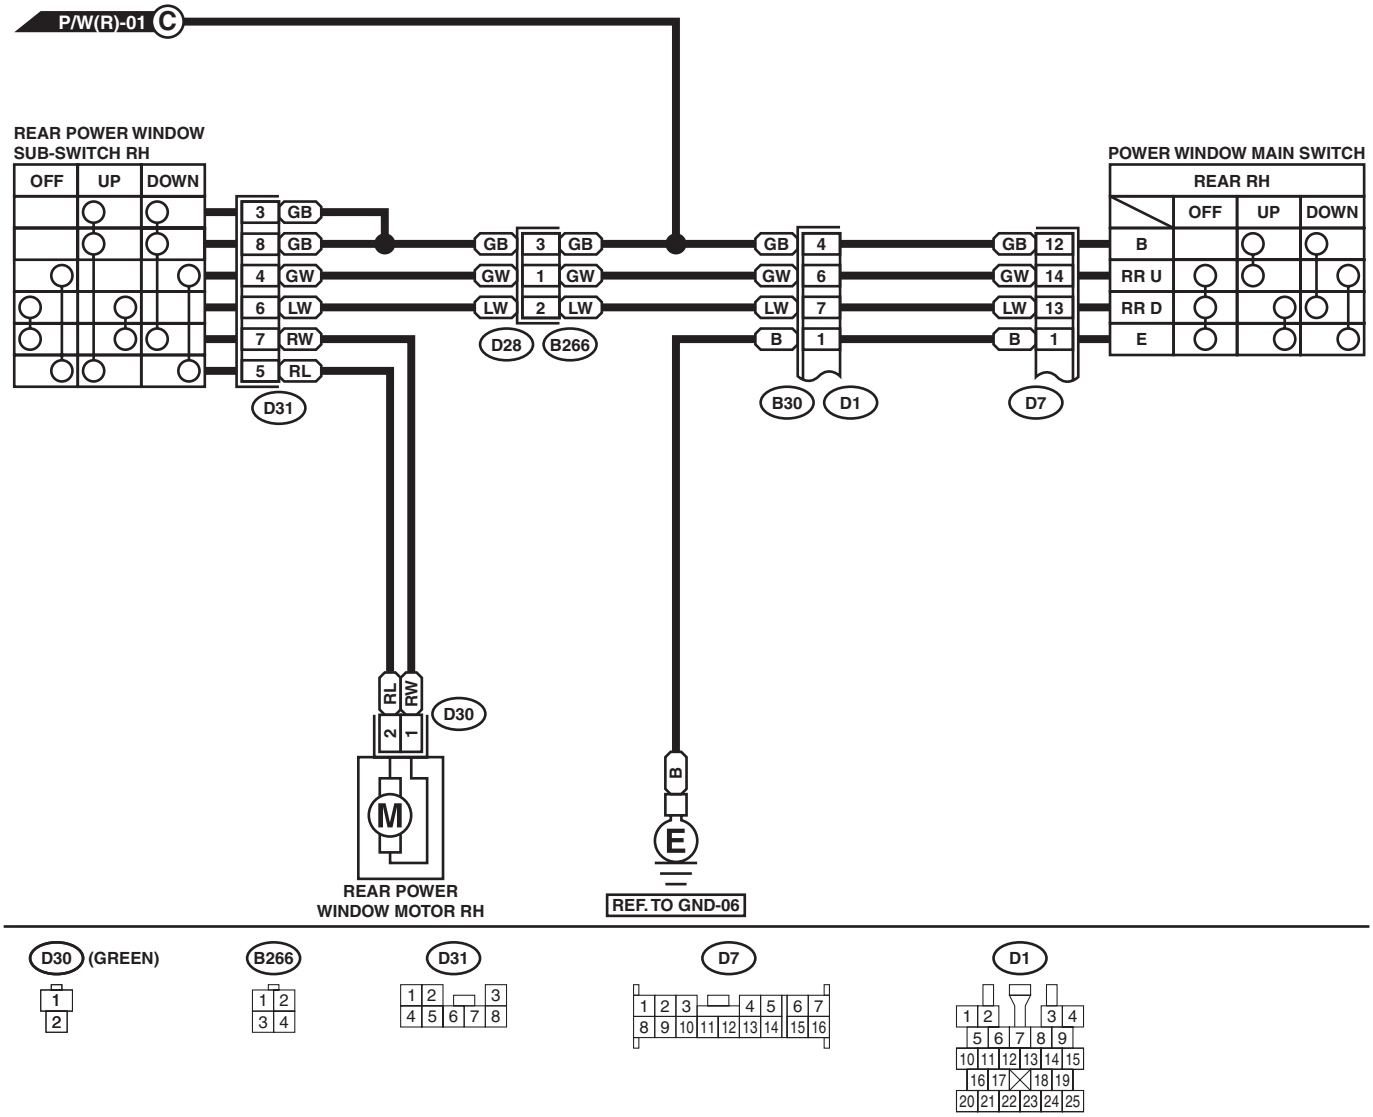

WI-02418

33.Radiator Fan System

A: SCHEMATIC

1. NON-TURBO ENGINE MODEL

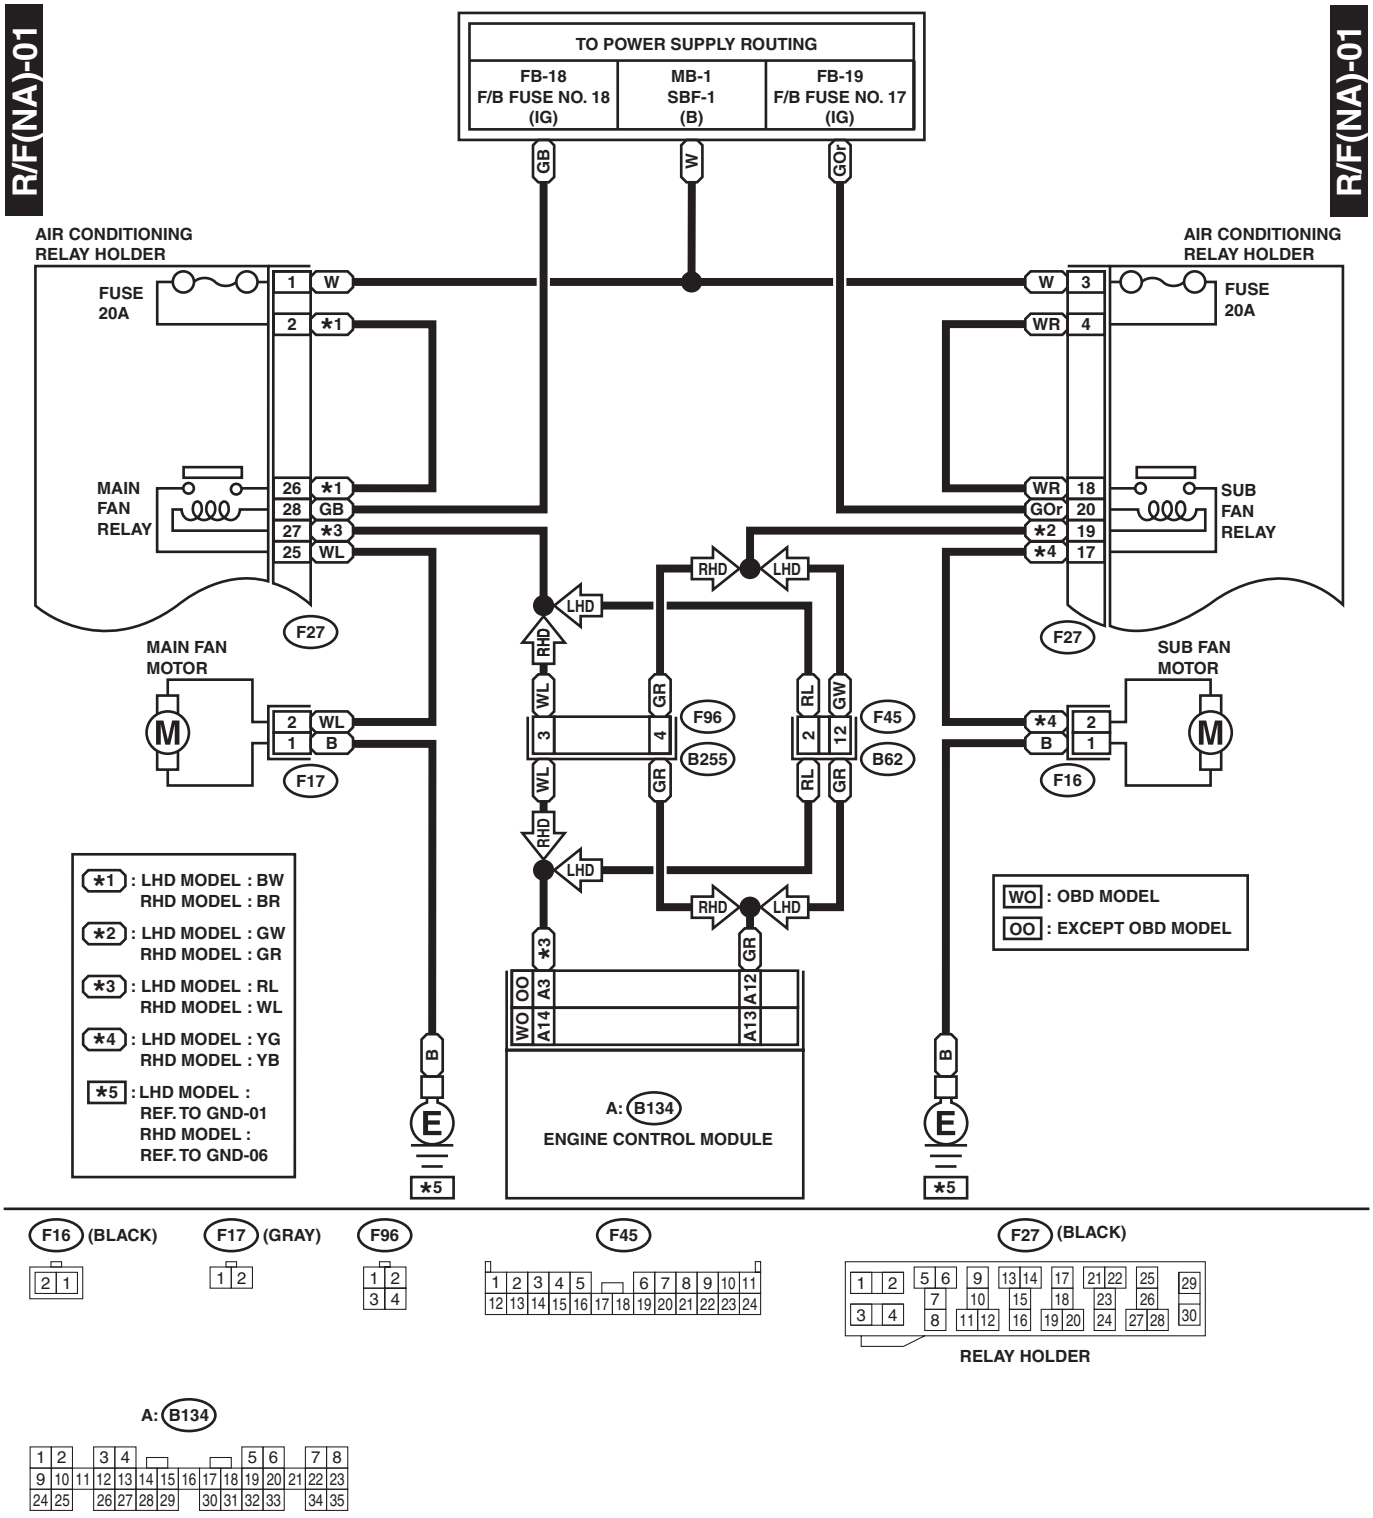

WI-02419

2. TURBO ENGINE MODEL

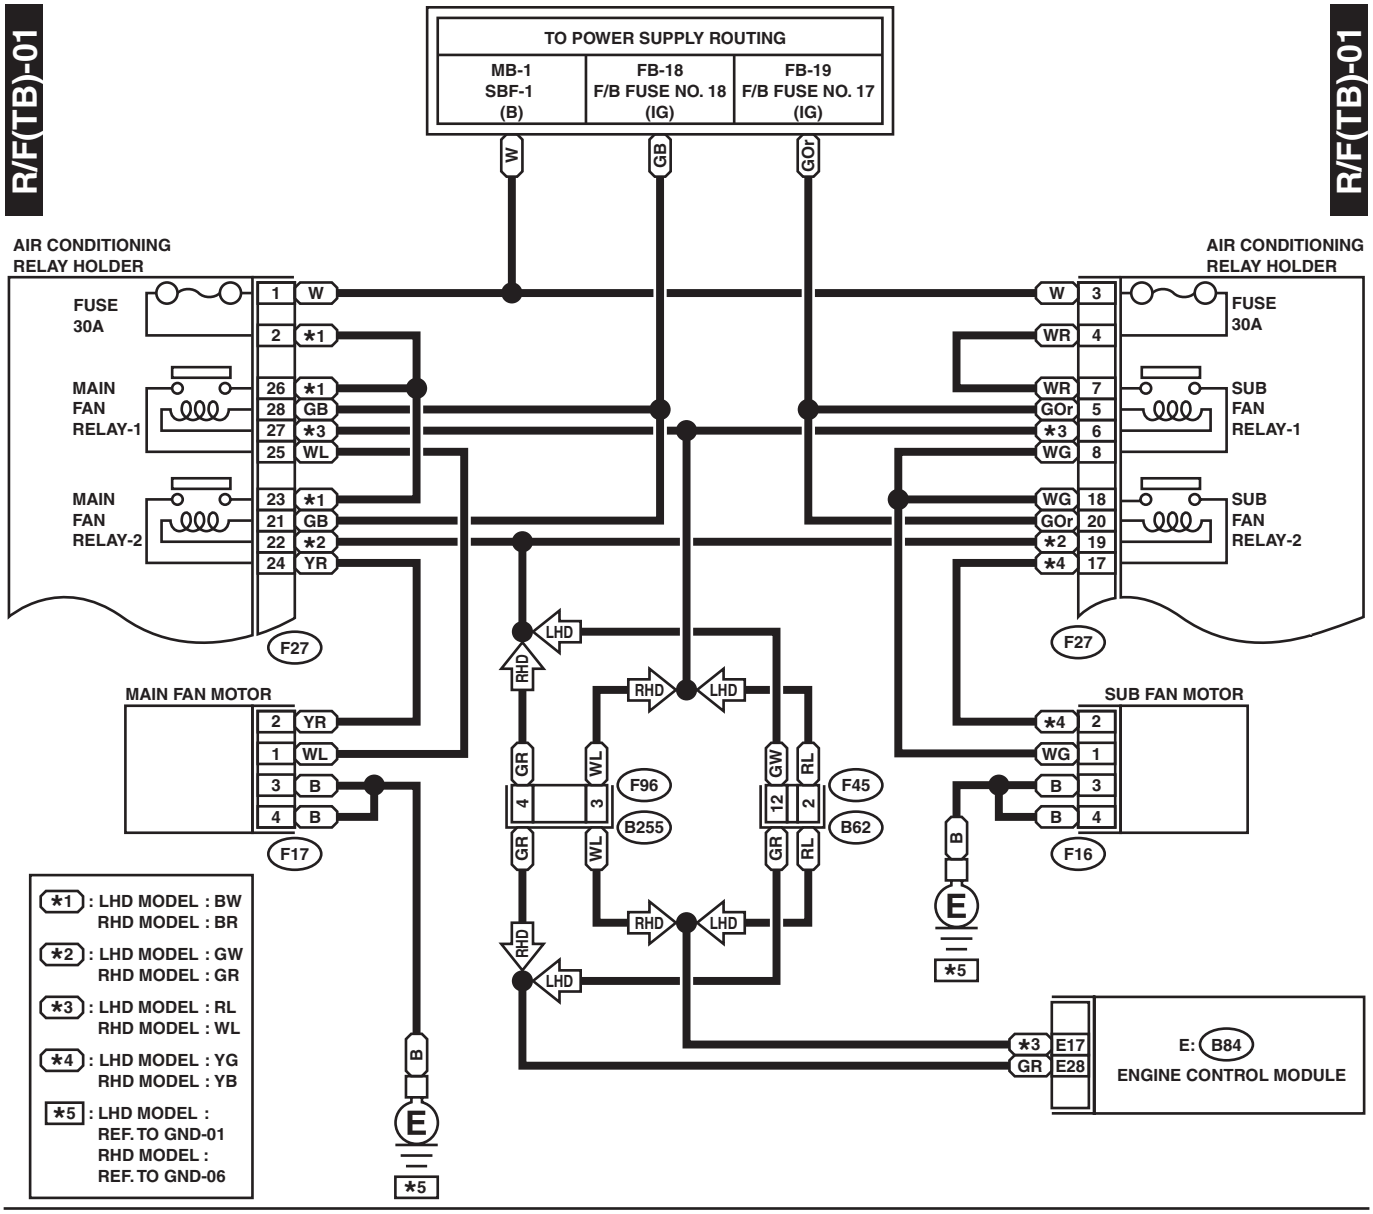

WI-02420

34.Rear Fog Light System

A: SCHEMATIC

1. LHD MODEL

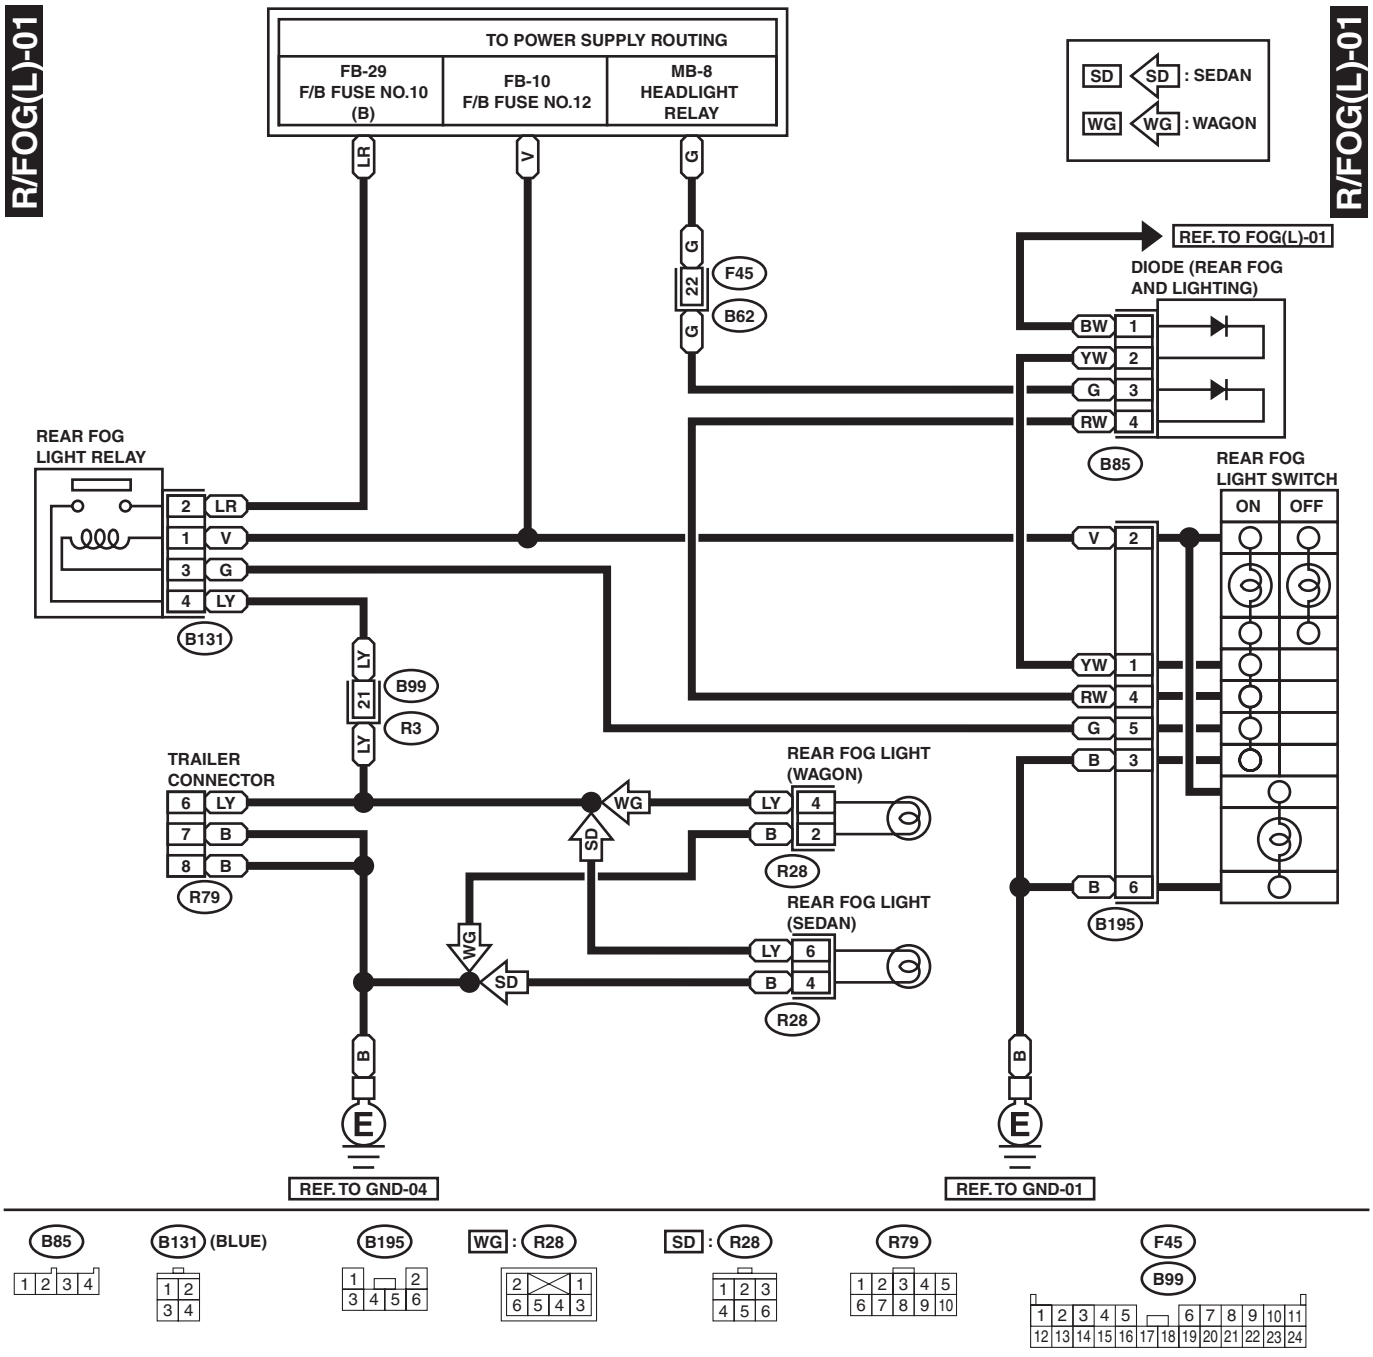

WI-02421

2. RHD FOR EUROPE MODEL

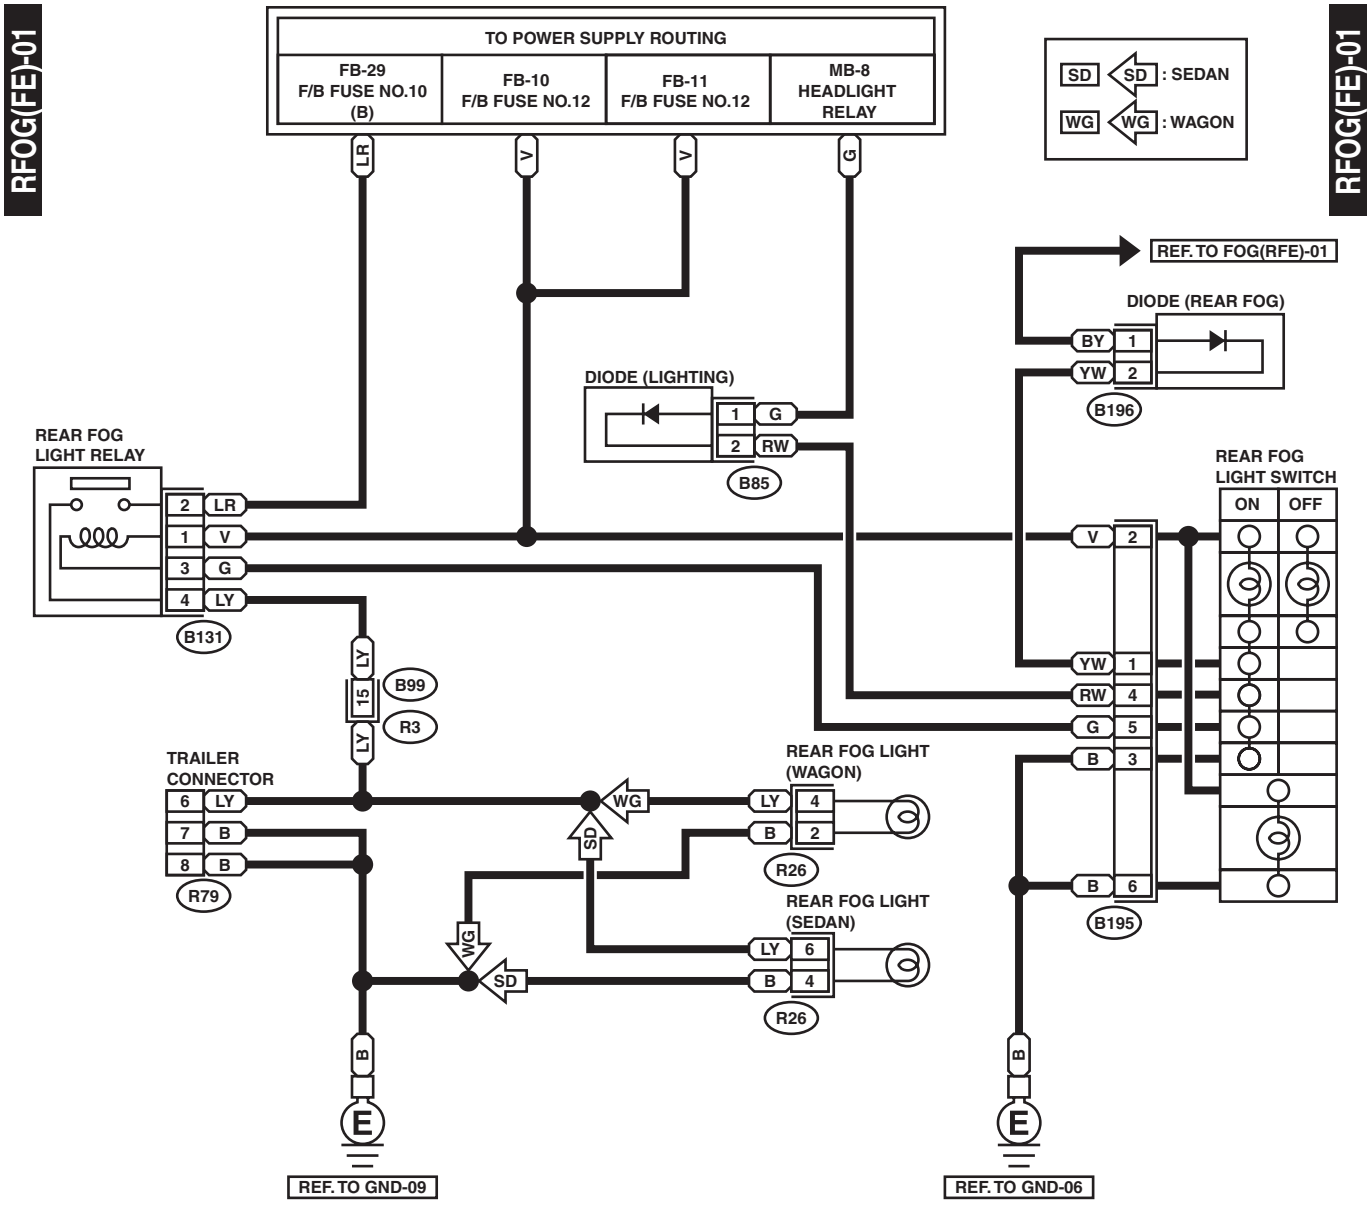

WI-02422

3. RHD EXCEPT FOR EUROPE MODEL

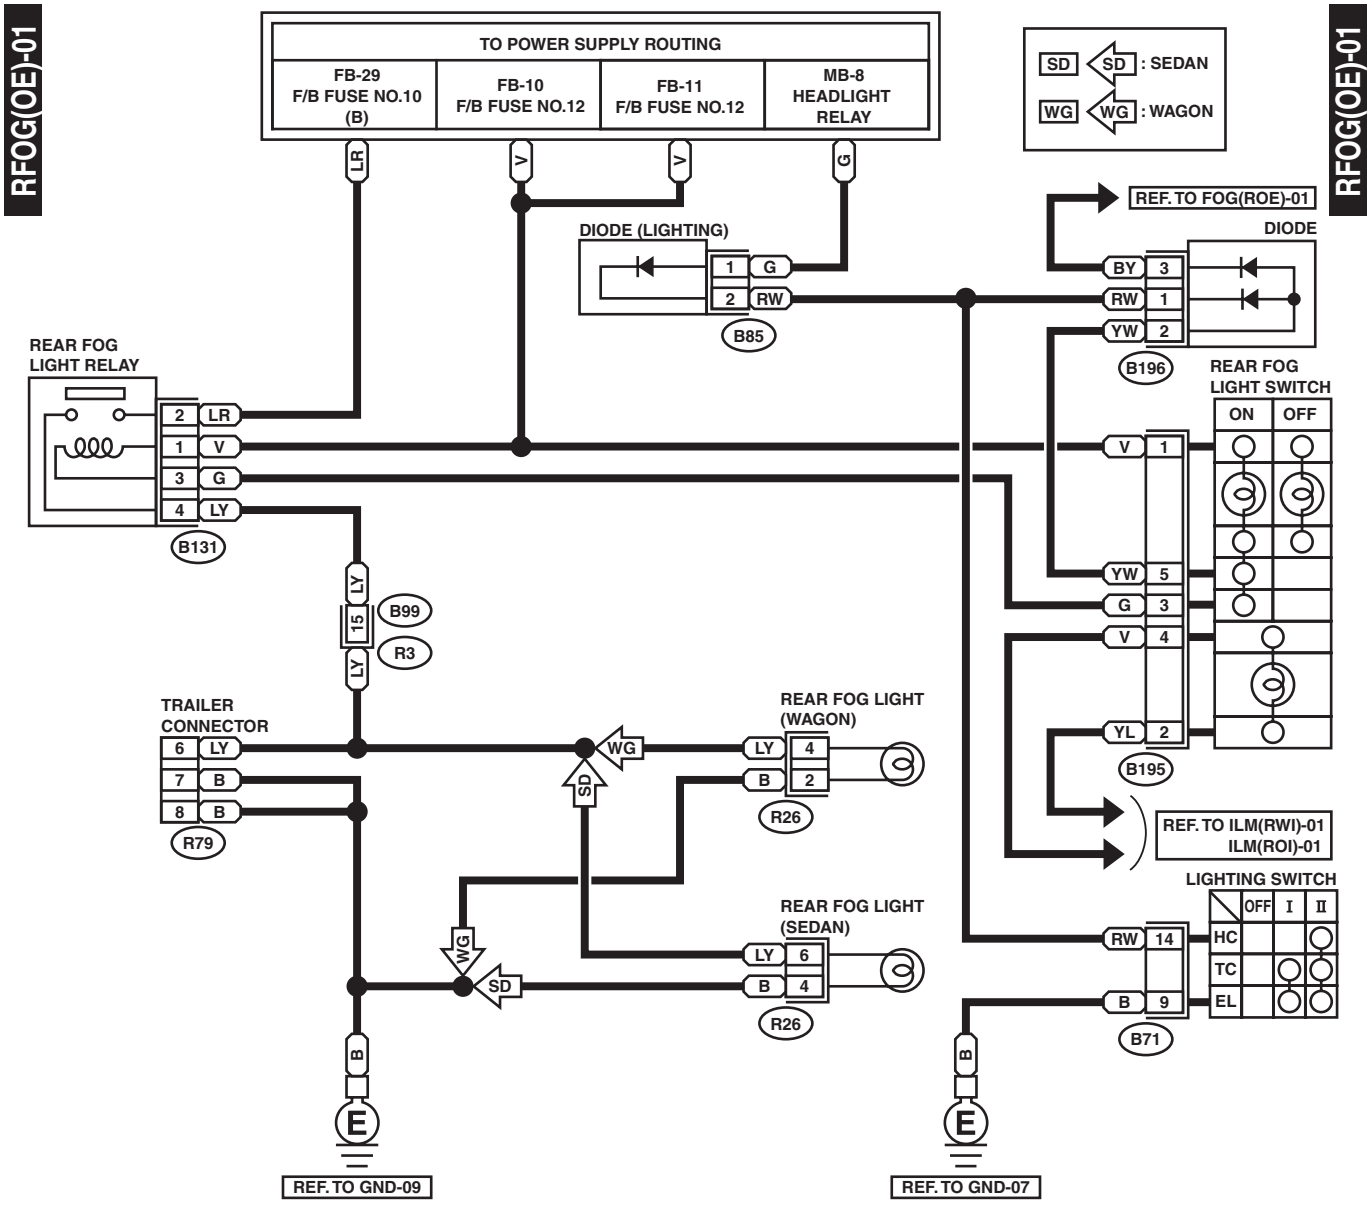

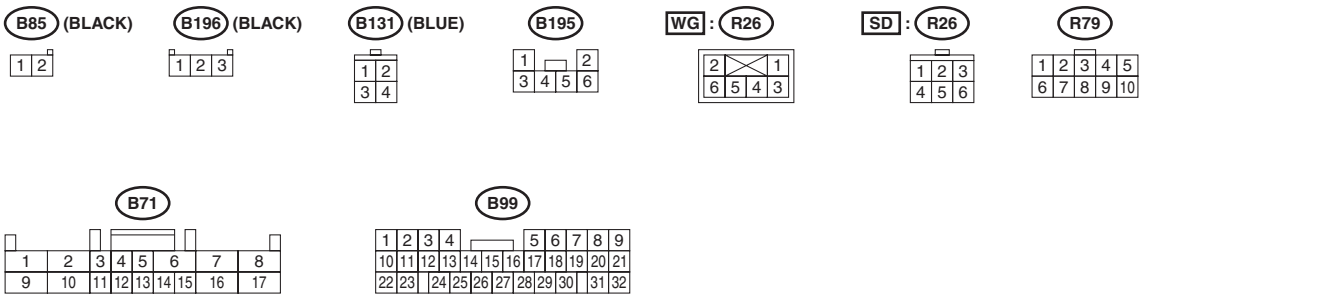

WI-02423

35.Rear Window Defogger System

A: SCHEMATIC

1. LHD MODEL

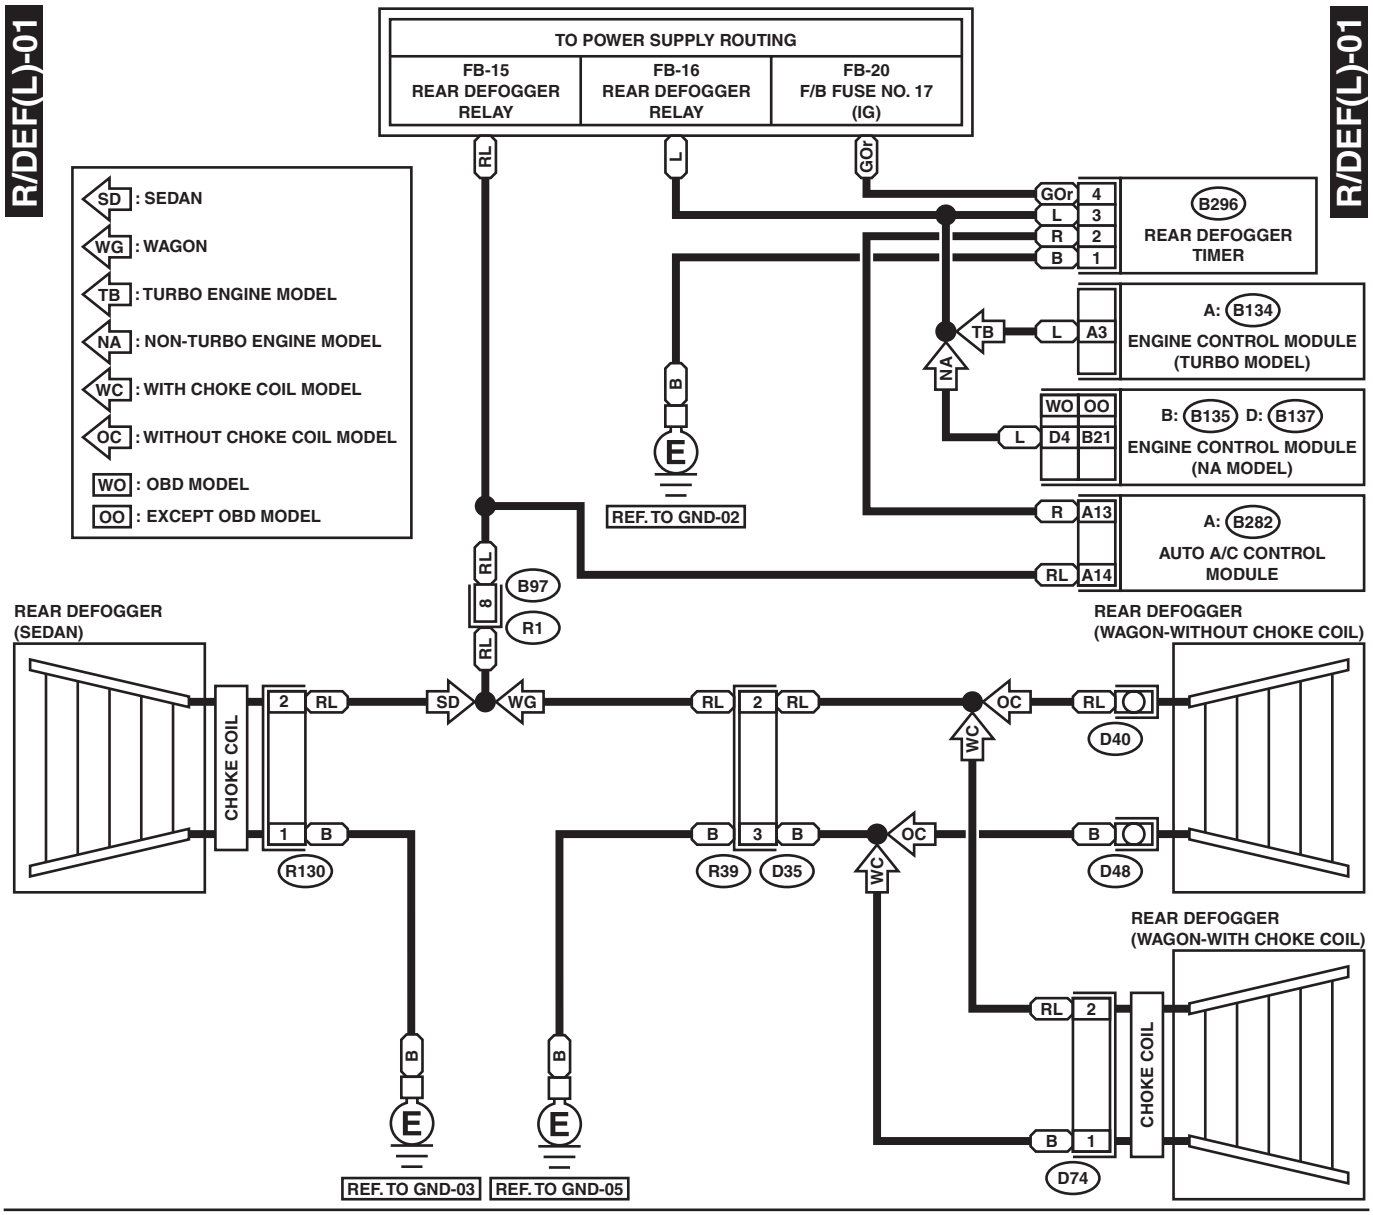

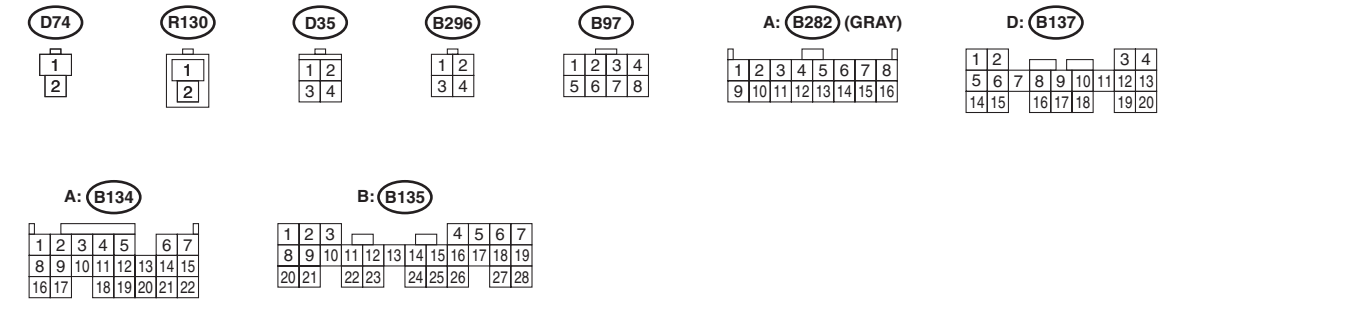

WI-02424

2. RHD MODEL

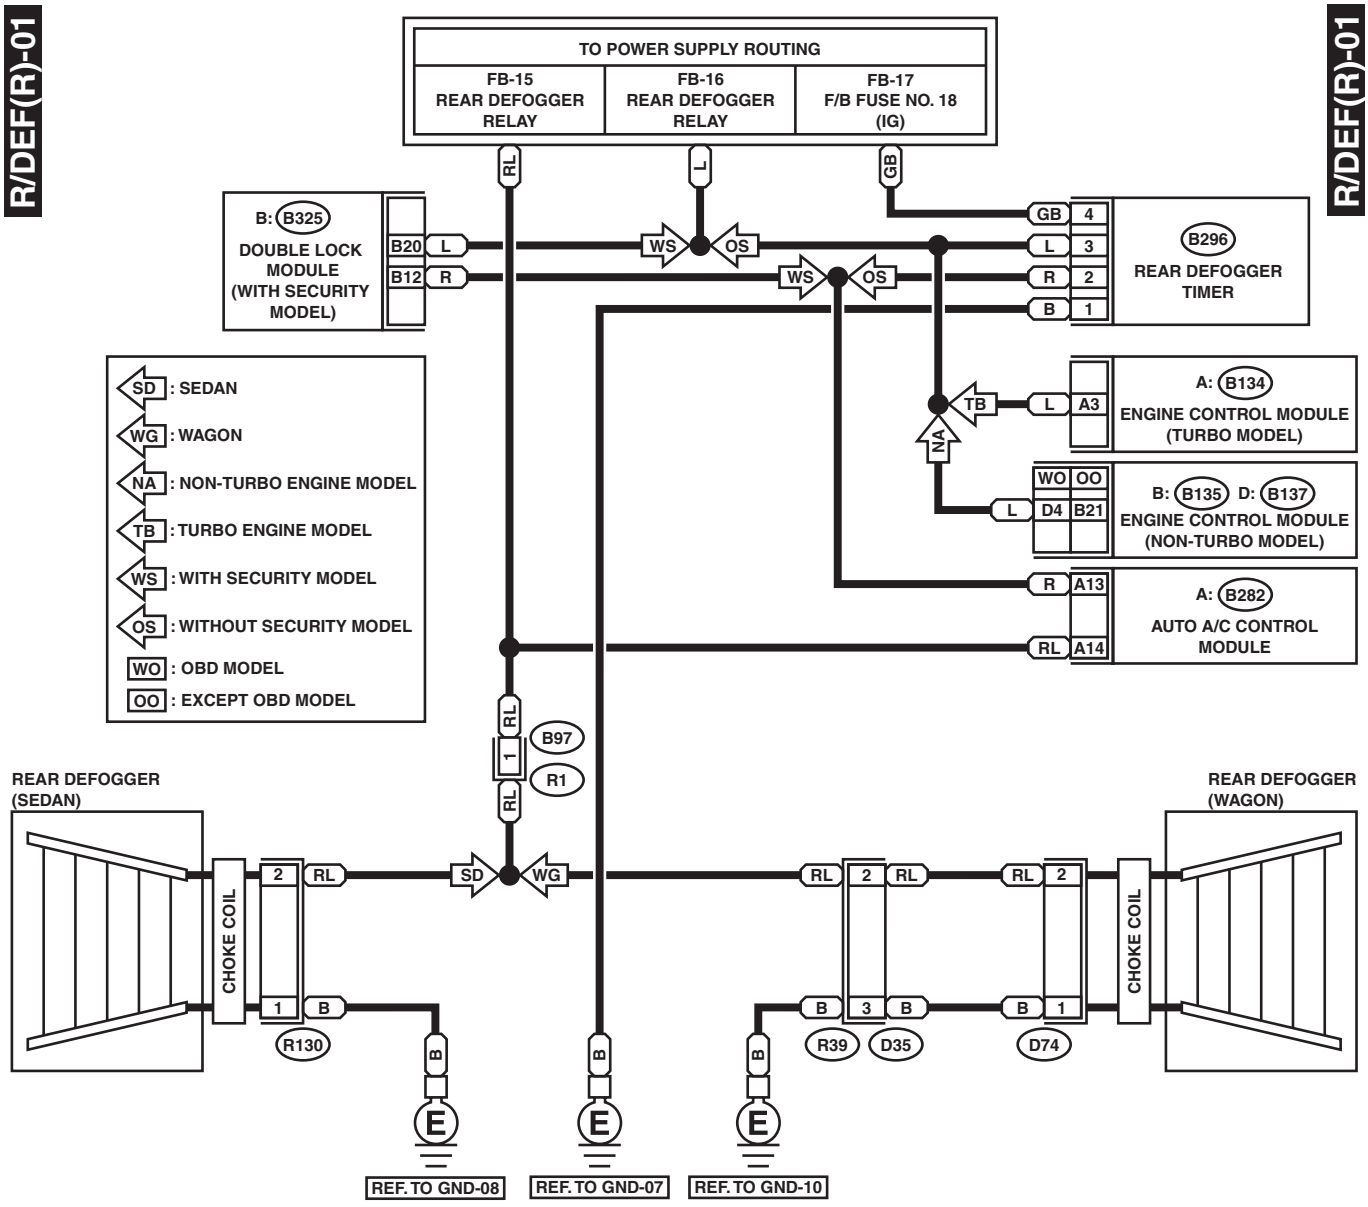

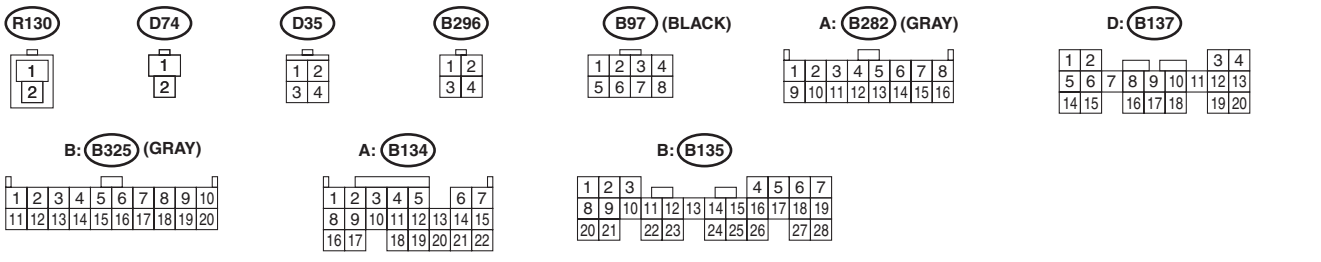

WI-02425

36.Remote Controlled Rearview Mirror System

A: SCHEMATIC

1. LHD MODEL

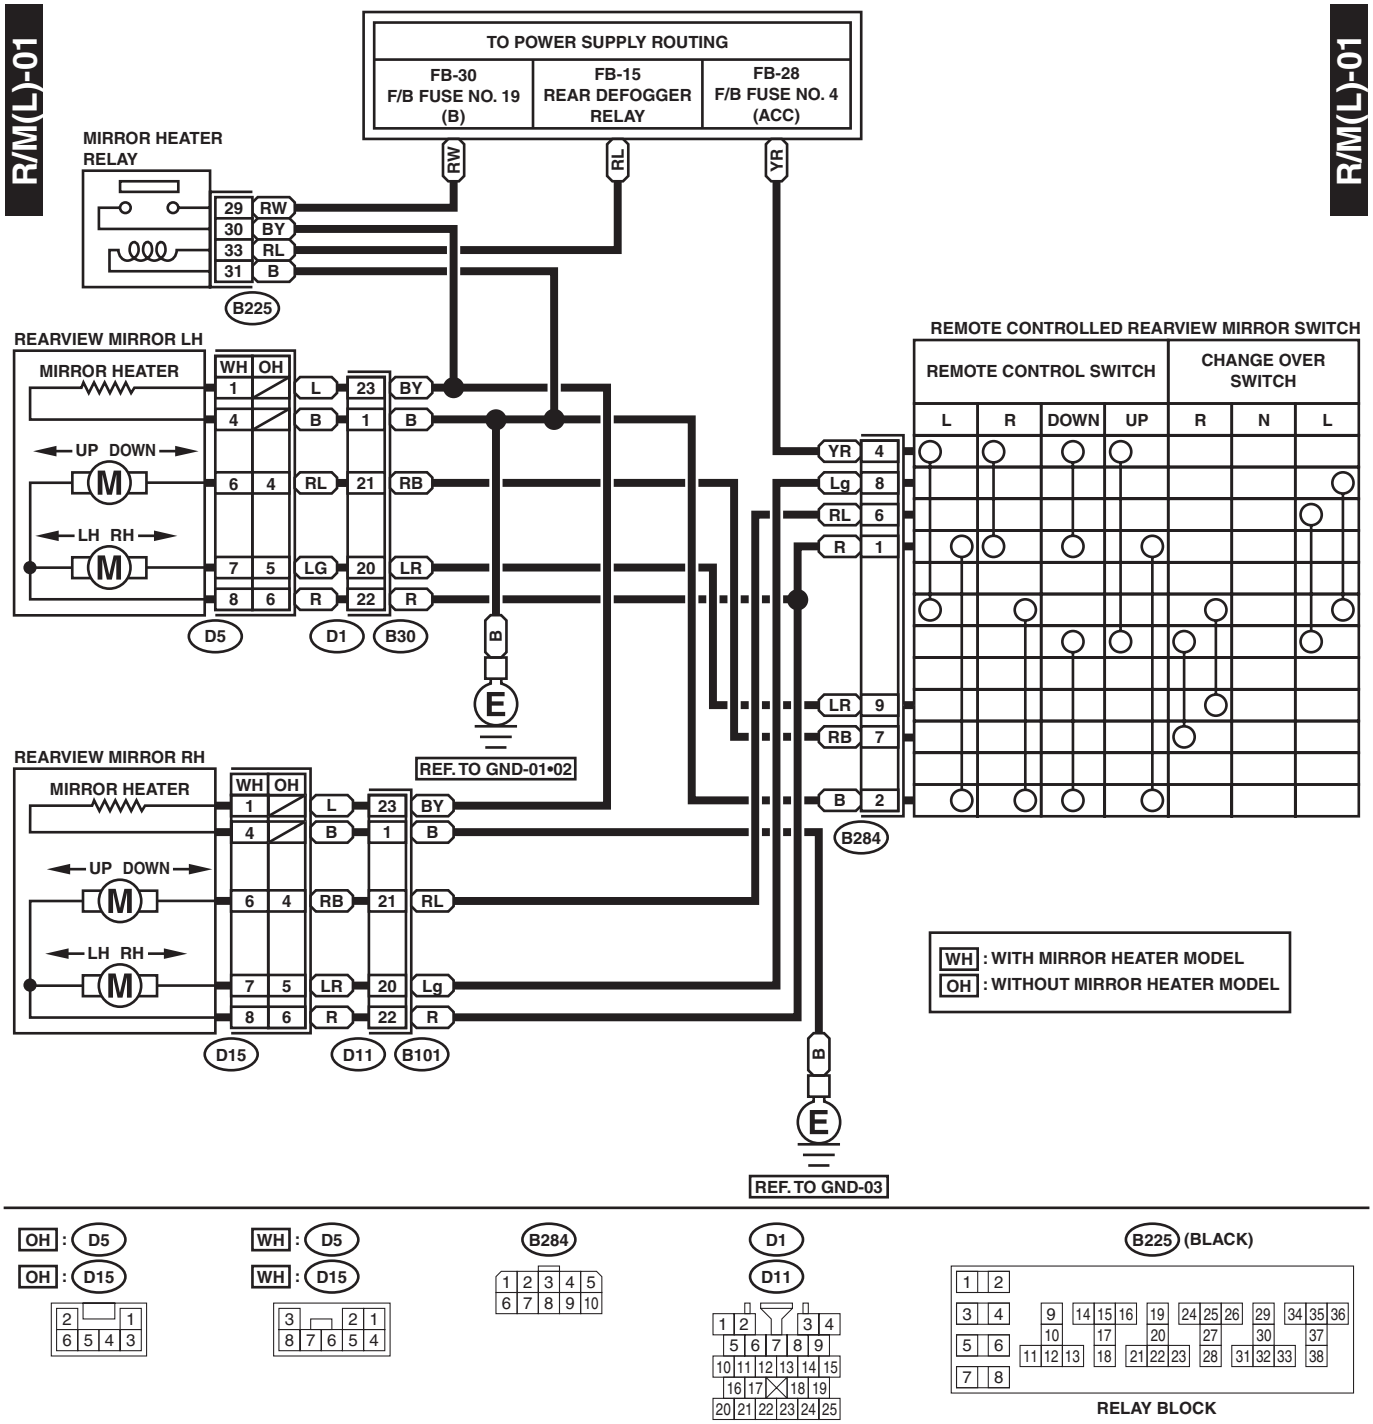

WI-02426

2. RHD MODEL

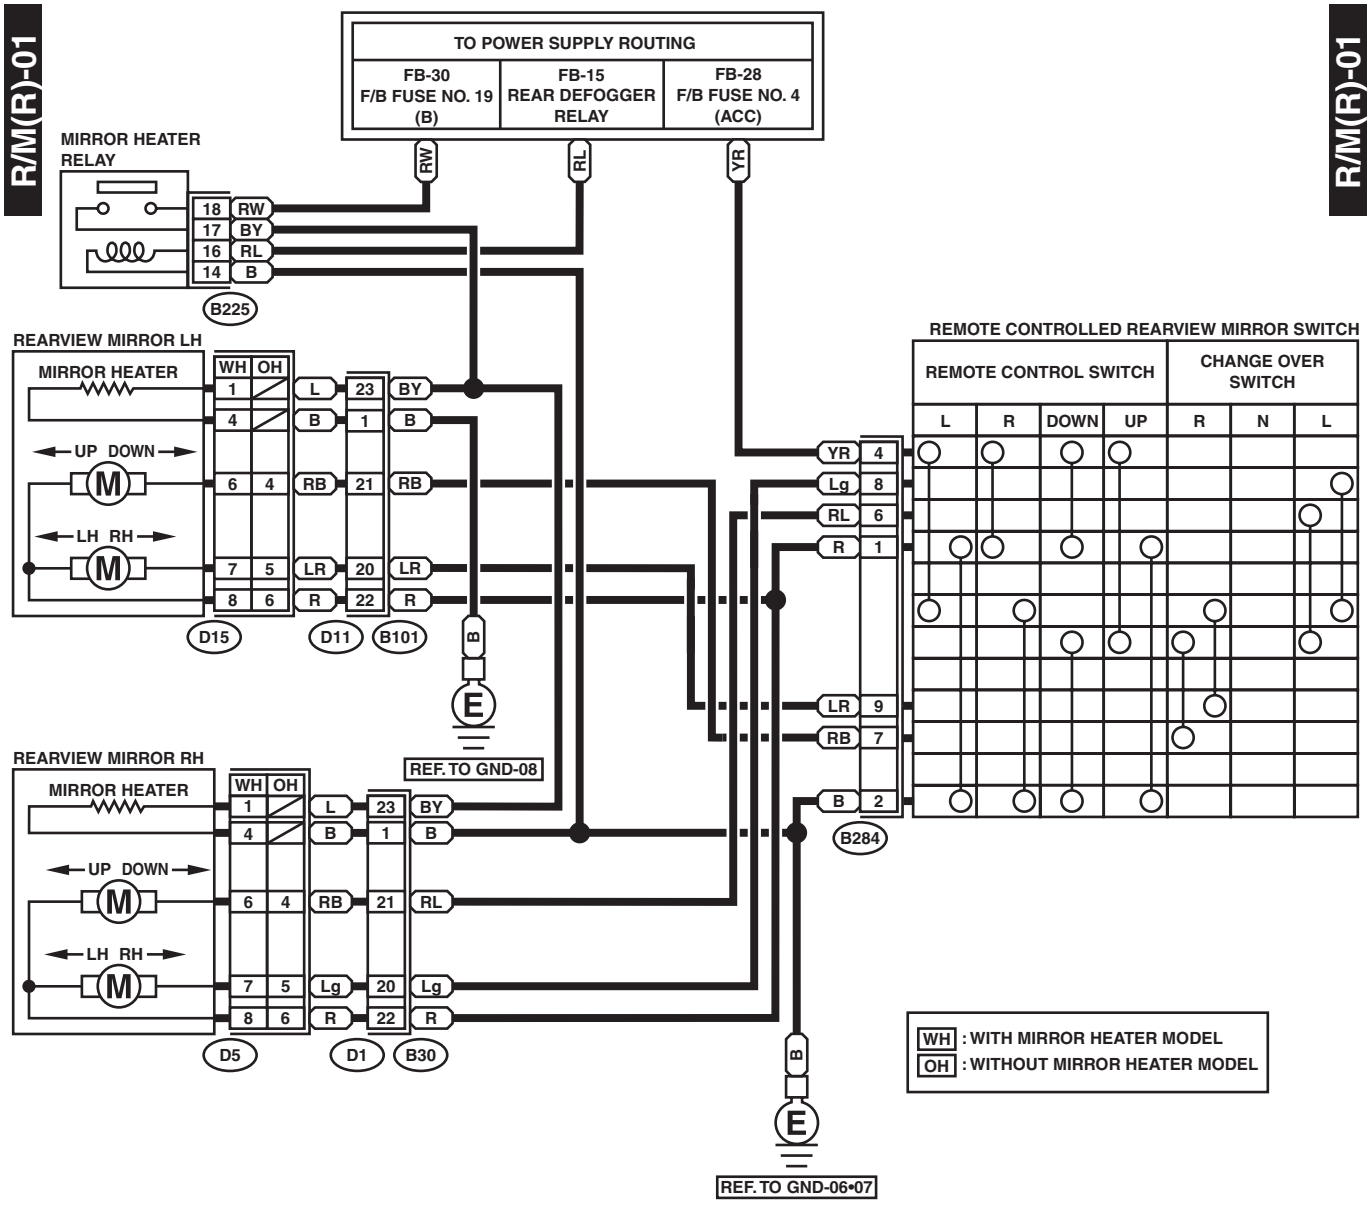

WI-02530

37.Seat Belt Warning System

A: SCHEMATIC

1. WITHOUT SEAT BELT TIMER MODEL

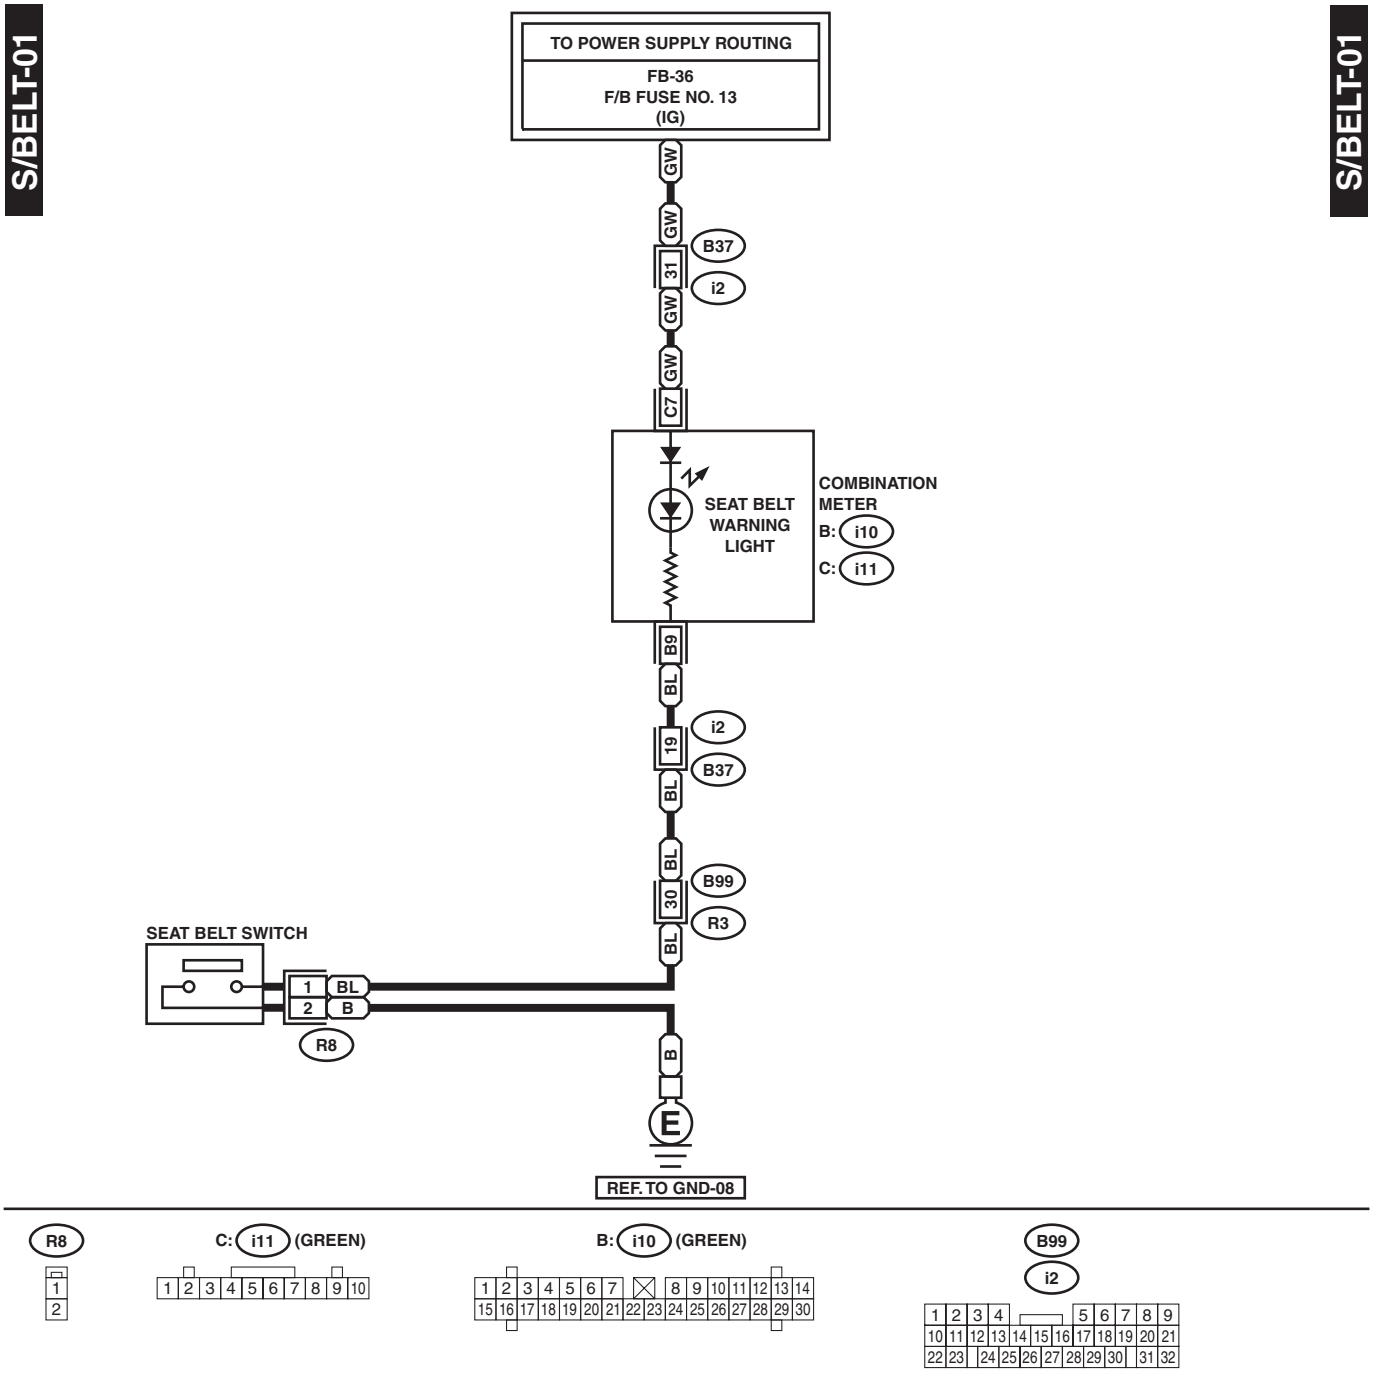

WI-02427

2. WITH SEAT BELT TIMER EXCEPT FOR EUROPE MODEL

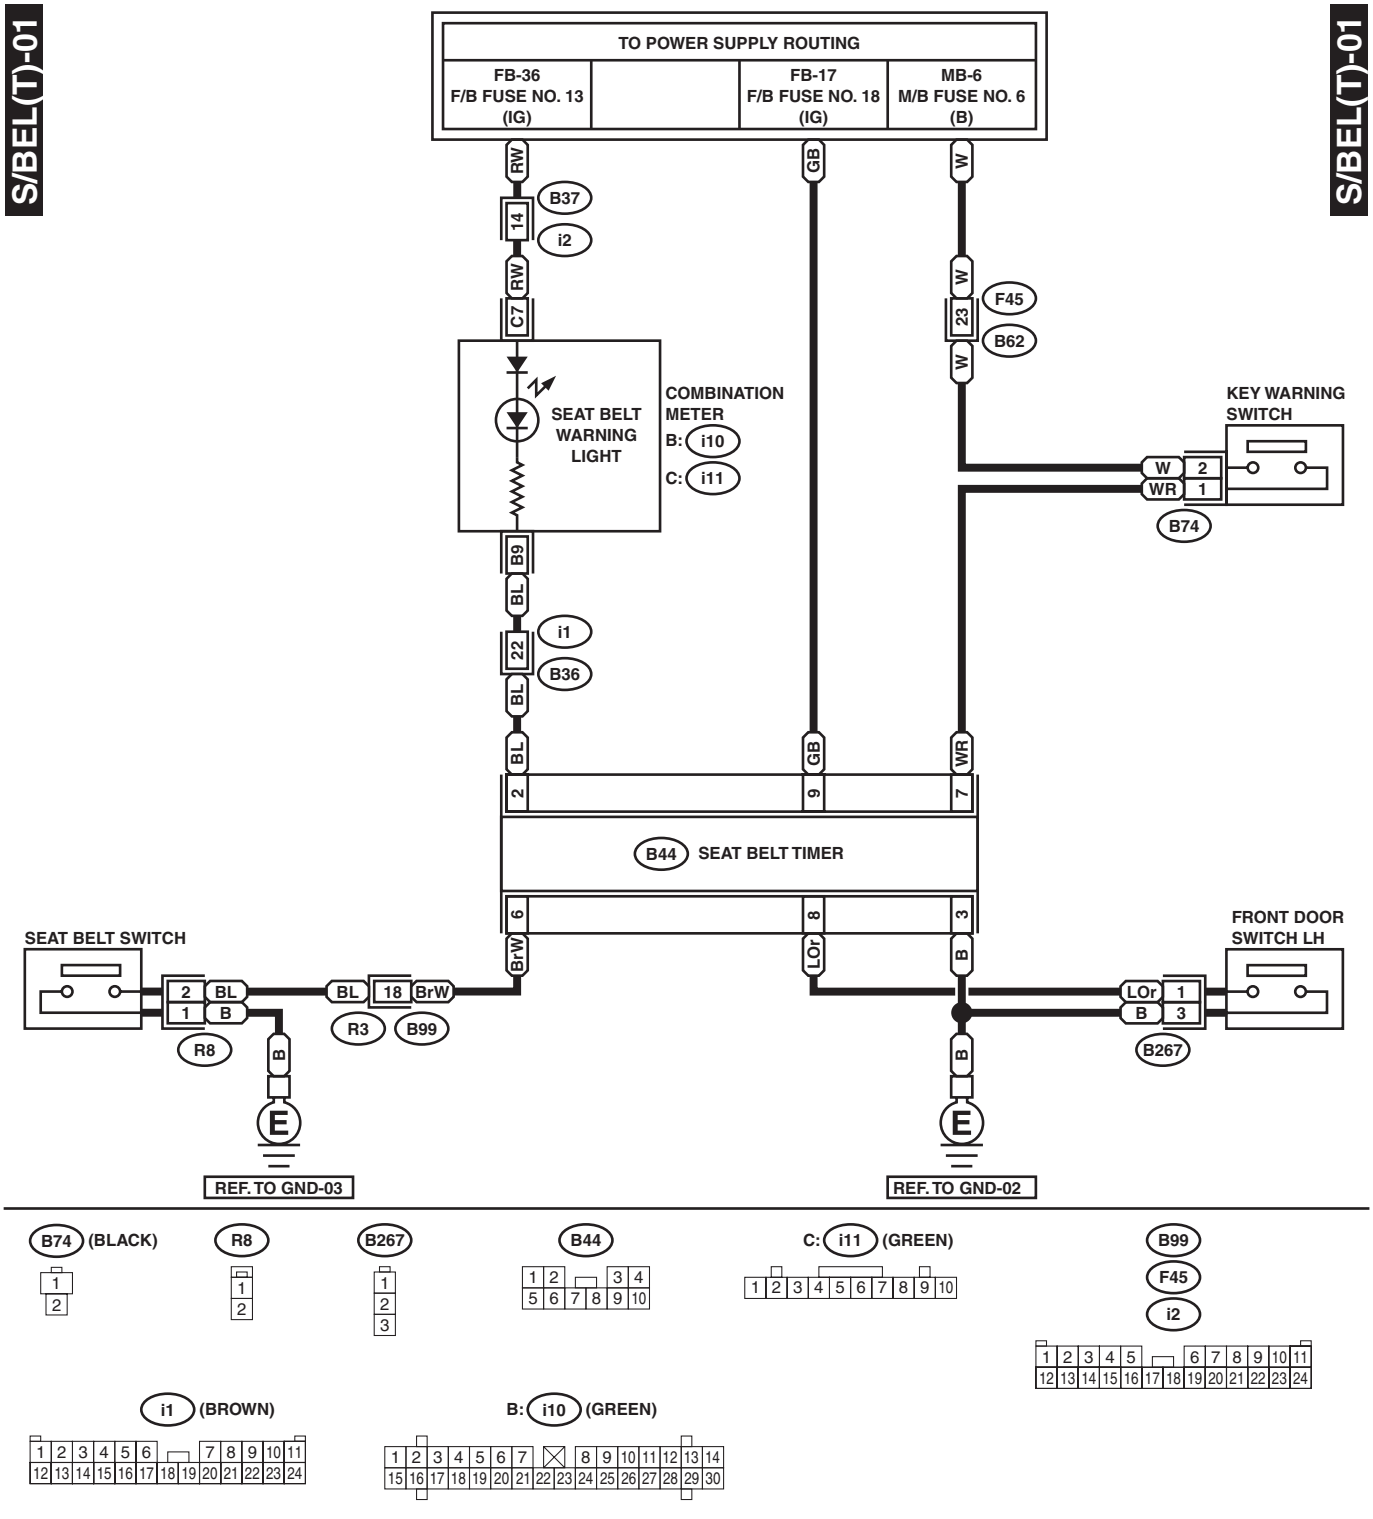

WI-02428

3. LHD FOR EUROPE MODEL

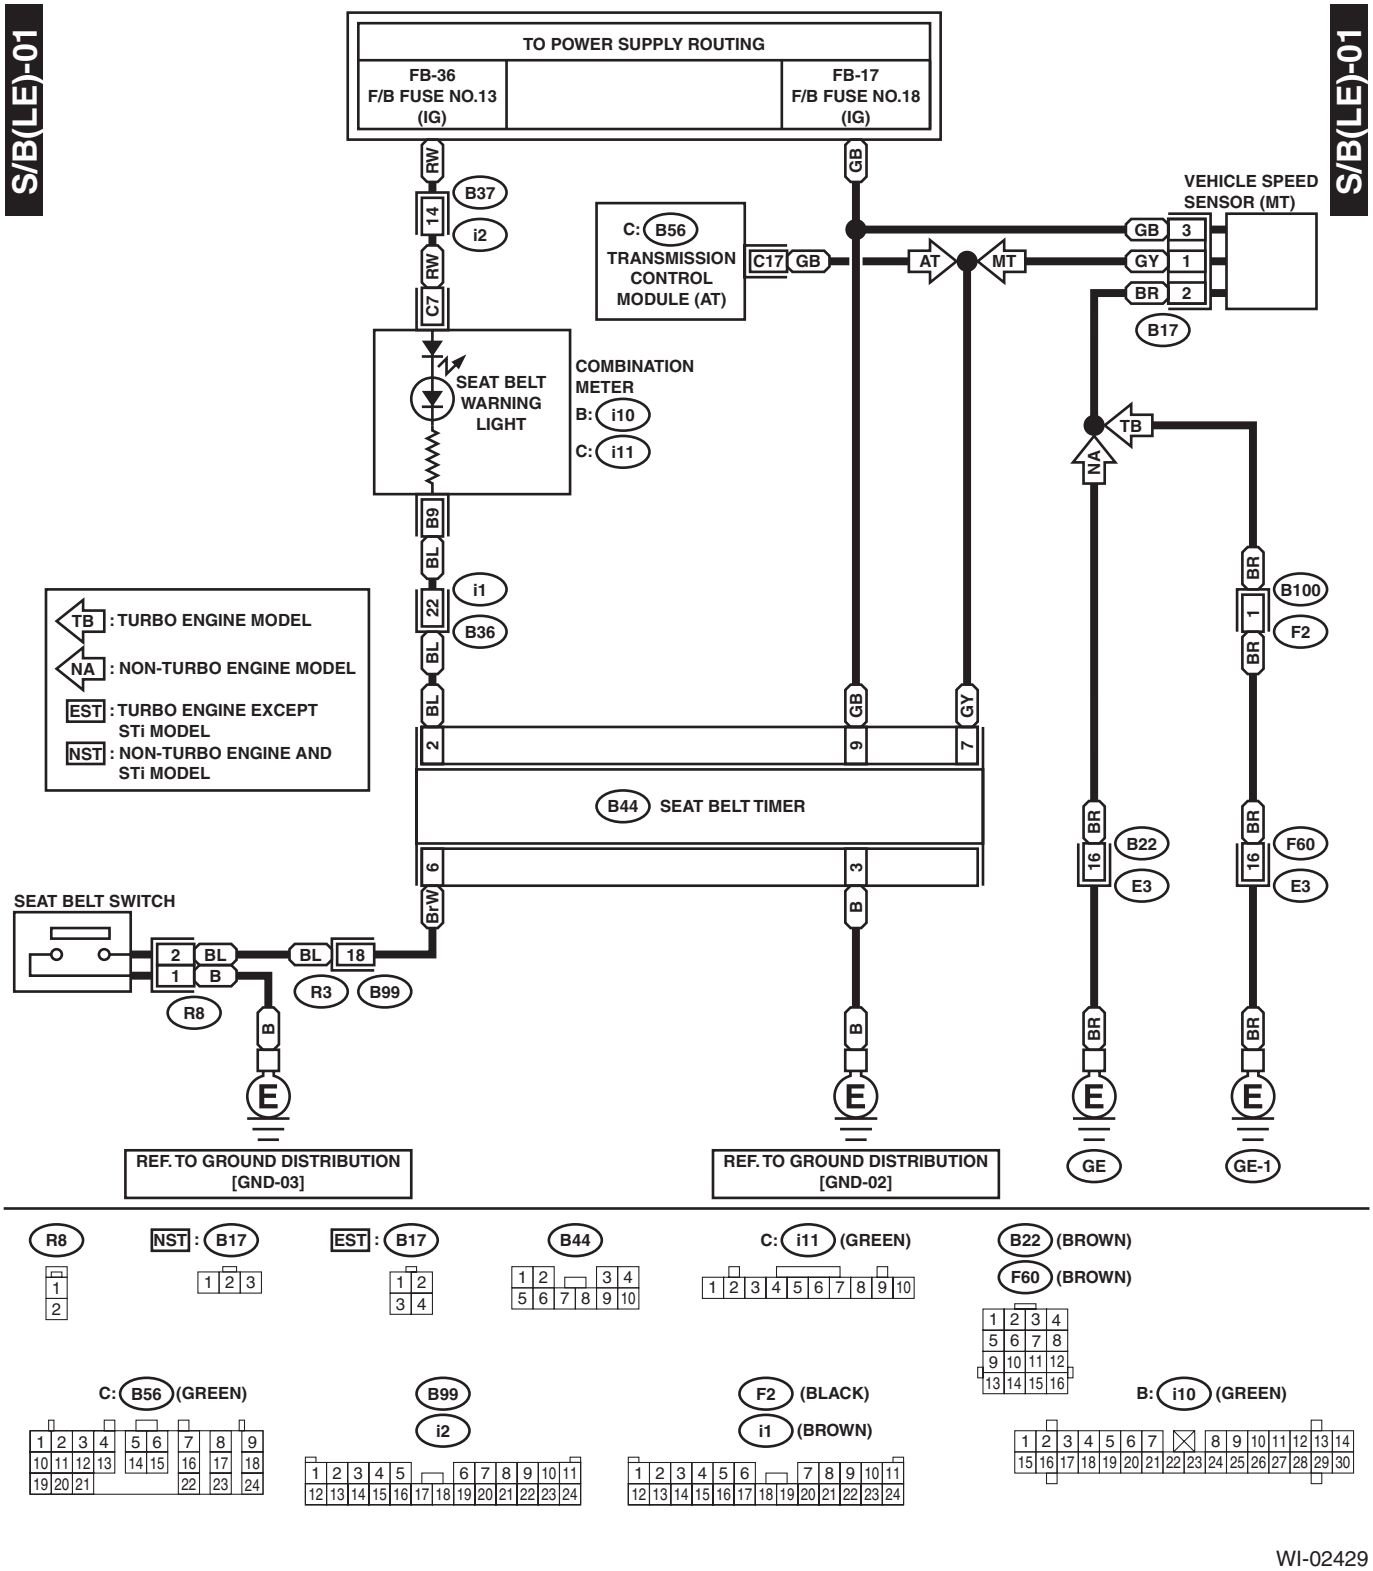

WI-02429

4. RHD FOR EUROPE MODEL

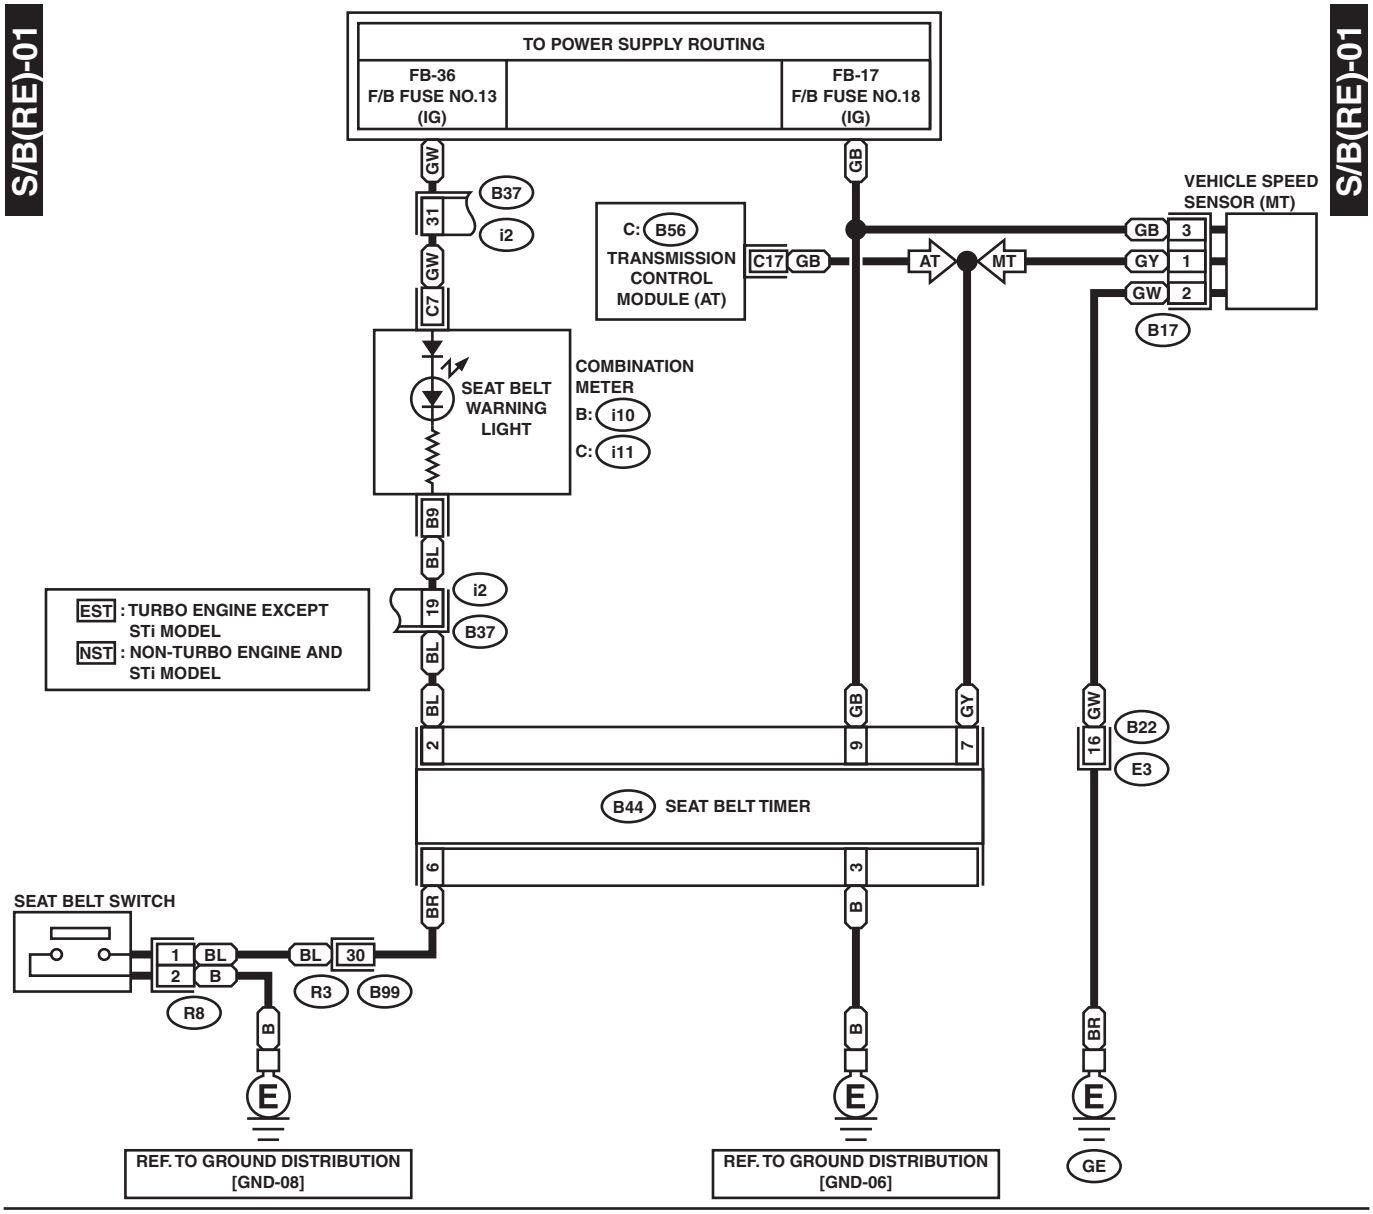

WI-02430

38.Seat Heater System

A: SCHEMATIC

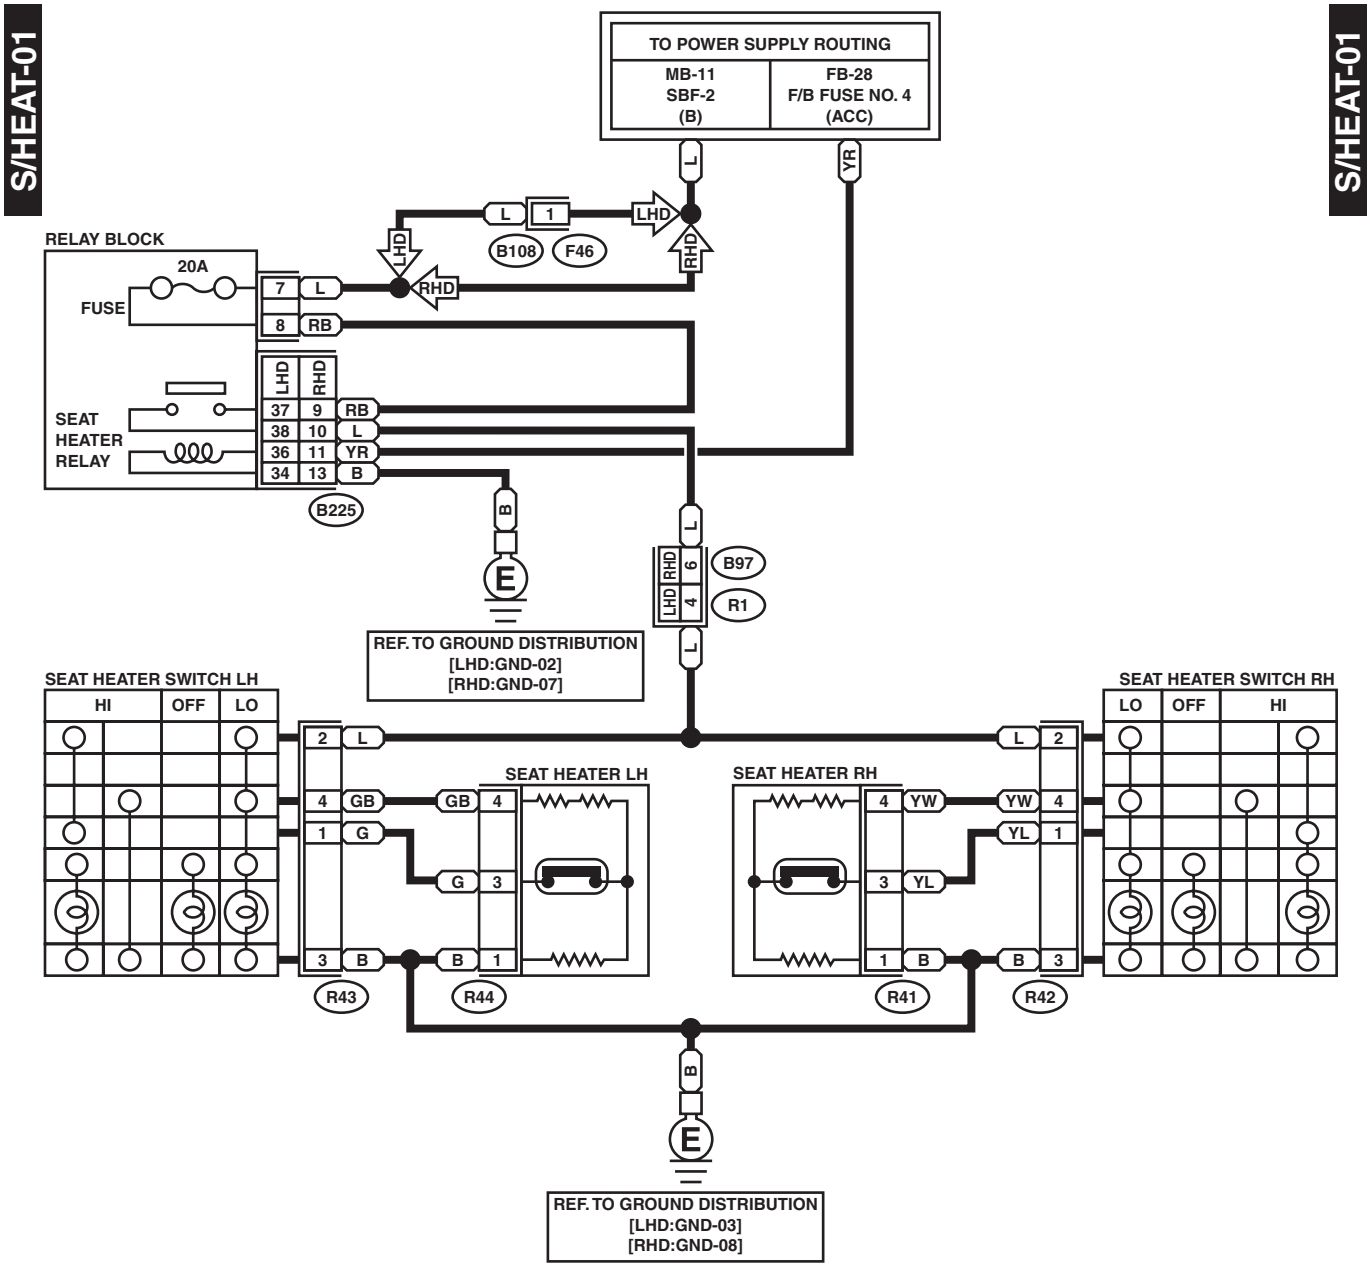

F46 (BLACK) R42

R41 (BLUE)
R43 (BLUE)
R44 (BLUE)

B97 LHD : (NON-COLORED)
RHD : (BLACK)

B225 (BLACK)

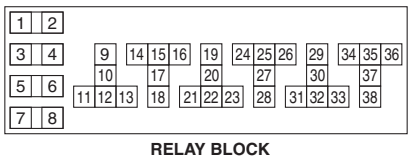

RELAY BLOCK

WI-02439

39.Security System

A: SCHEMATIC

1. WITHOUT SEAT BELT TIMER MODEL

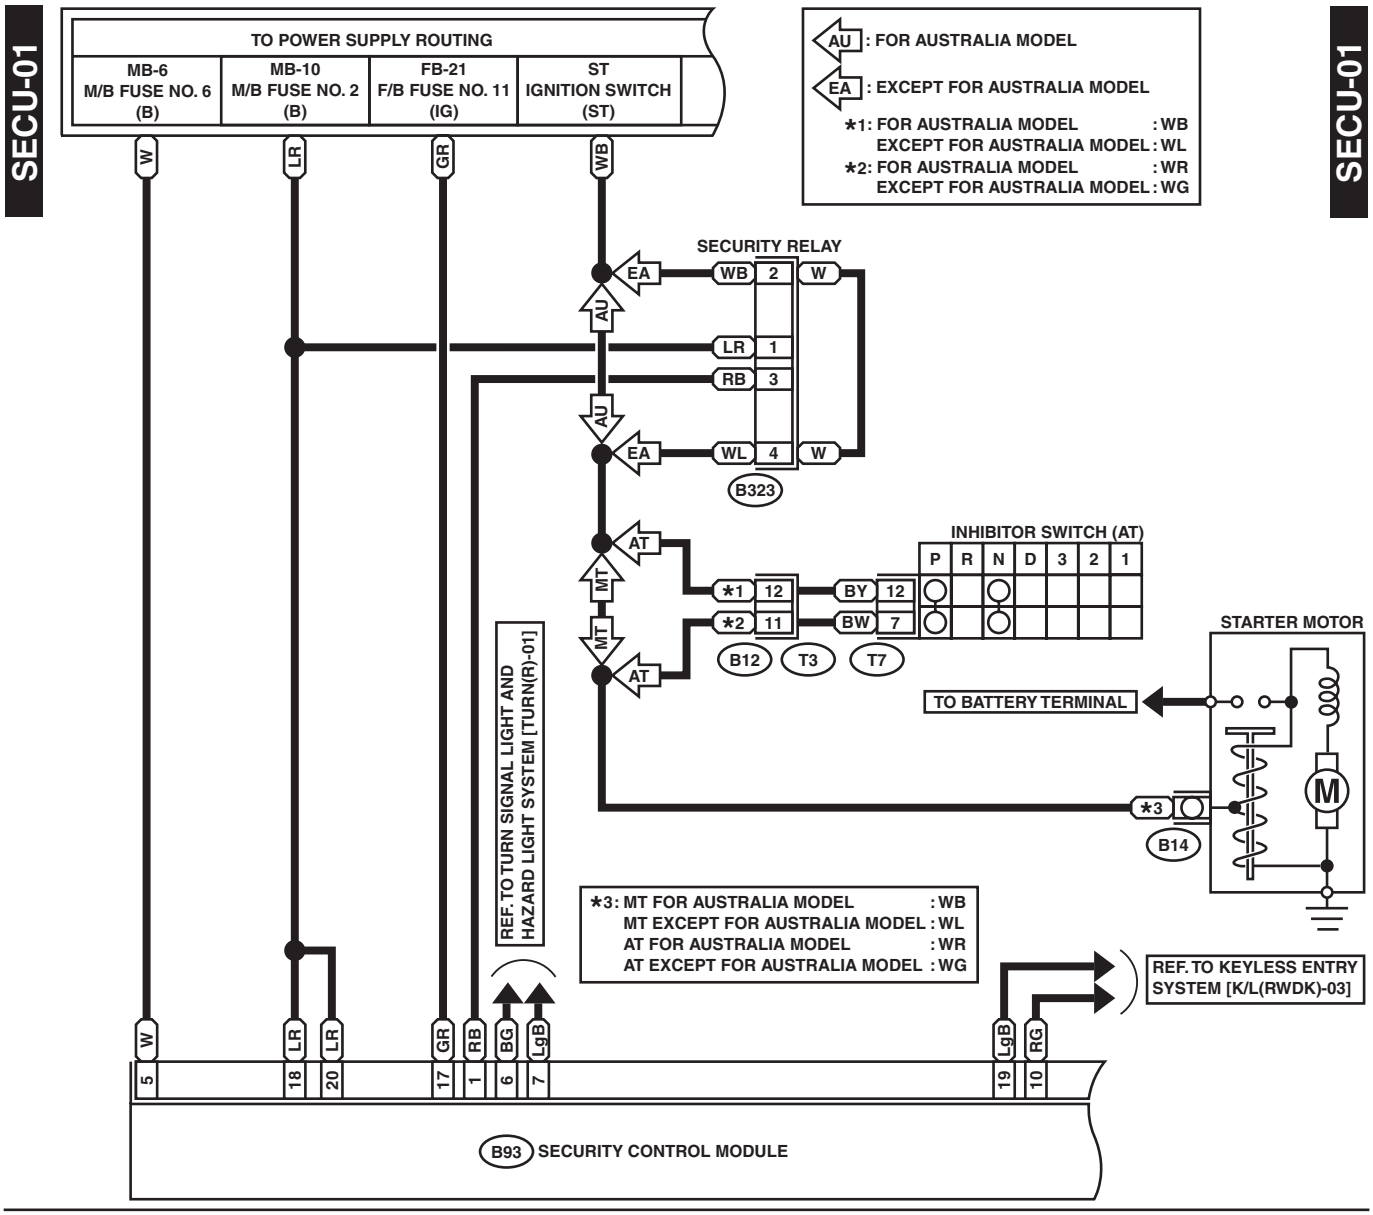

WI-02440

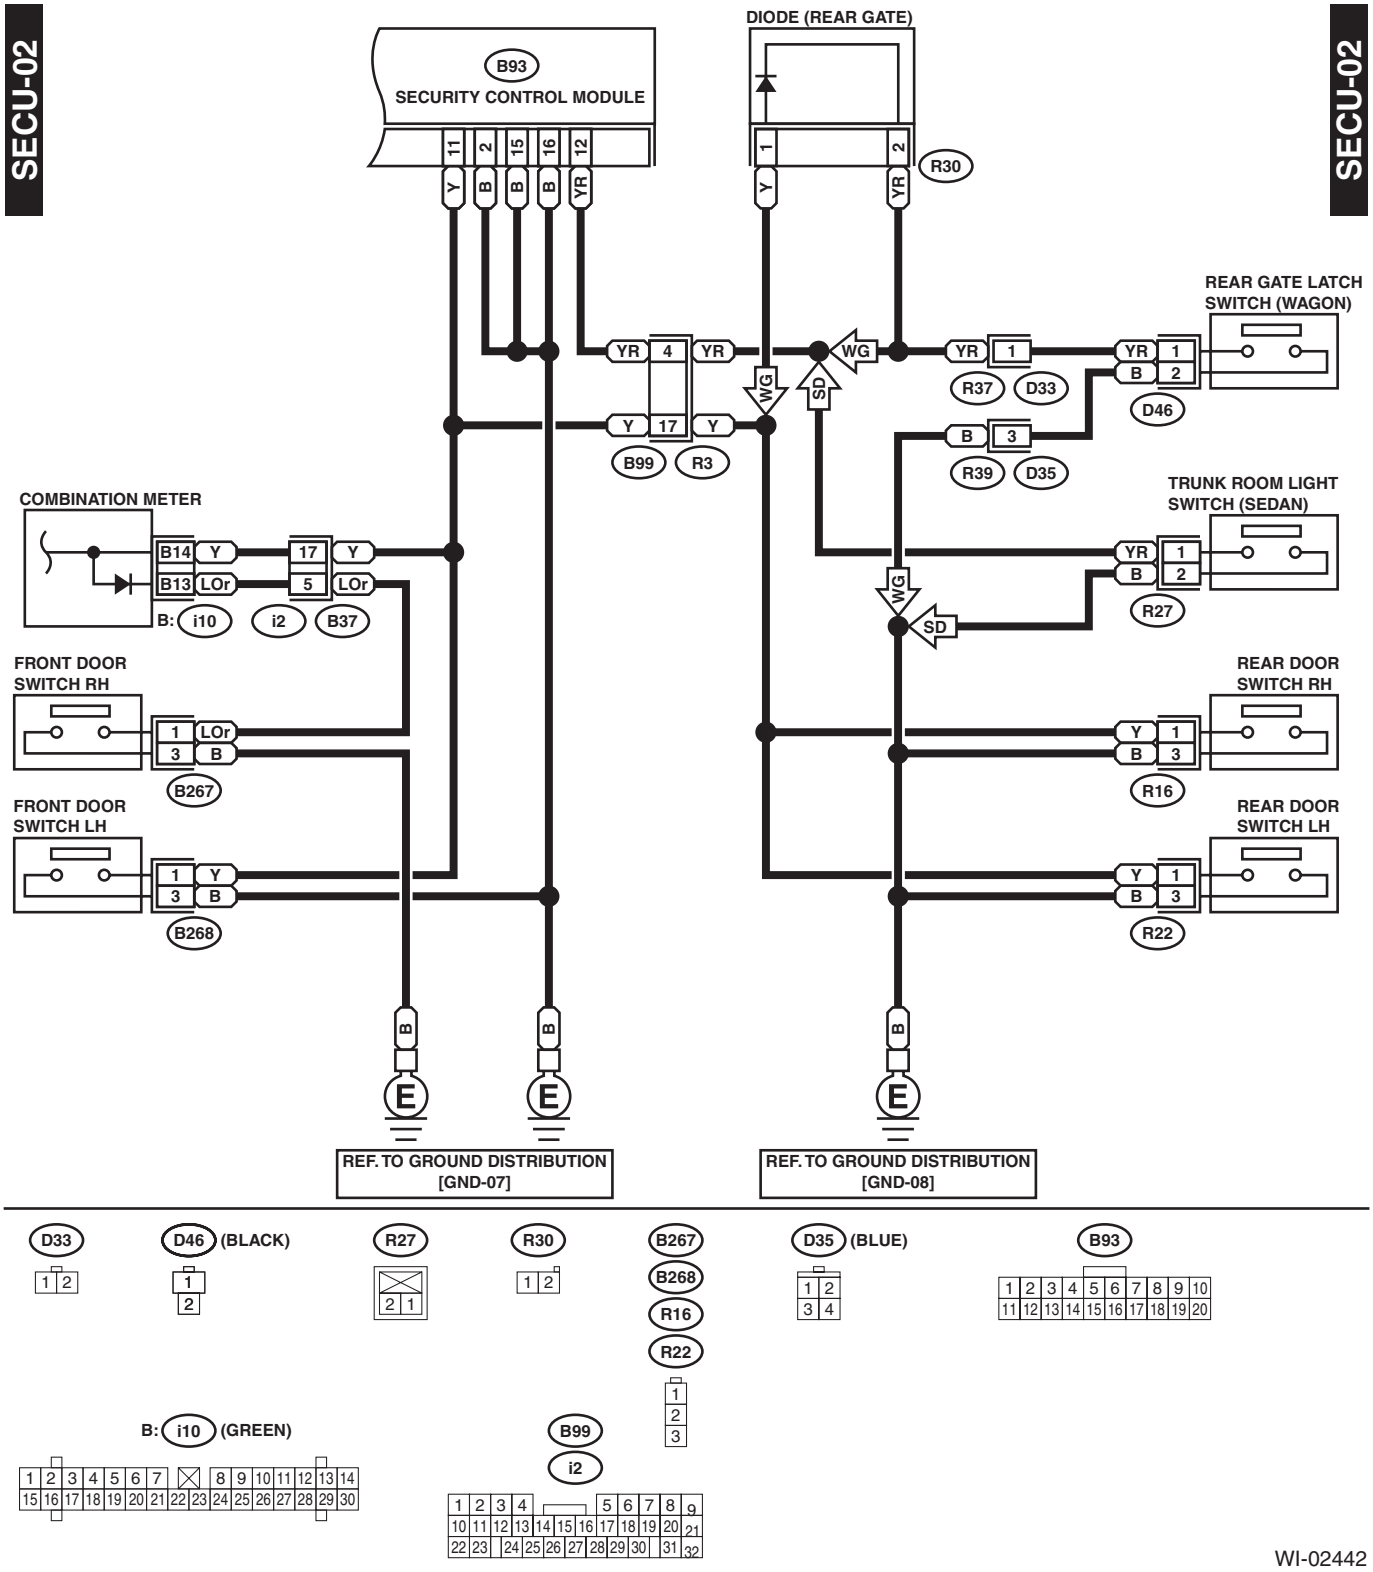
SECU-02
SECU-02
B93
SECURITY CONTROL MODULE
DIODE (REAR GATE)
R30
REAR GATE LATCH SWITCH (WAGON)
D46
R37
D33
B99
R3
B39
D35
COMBINATION METER
B14
B13
B:
i10
i2
B37
TRUNK ROOM LIGHT SWITCH (SEDAN)
R27
FRONT DOOR SWITCH RH
B267
REAR DOOR SWITCH RH
R16
FRONT DOOR SWITCH LH
B268
REAR DOOR SWITCH LH
R22
REF. TO GROUND DISTRIBUTION [GND-07]
REF. TO GROUND DISTRIBUTION [GND-08]
D33
D46 (BLACK)
R27
R30
B267
B268
R16
R22
D35 (BLUE)
B93
B: i10 (GREEN)
B99
i2
WI-02442

40.Starter System

A: SCHEMATIC

1. MT MODEL

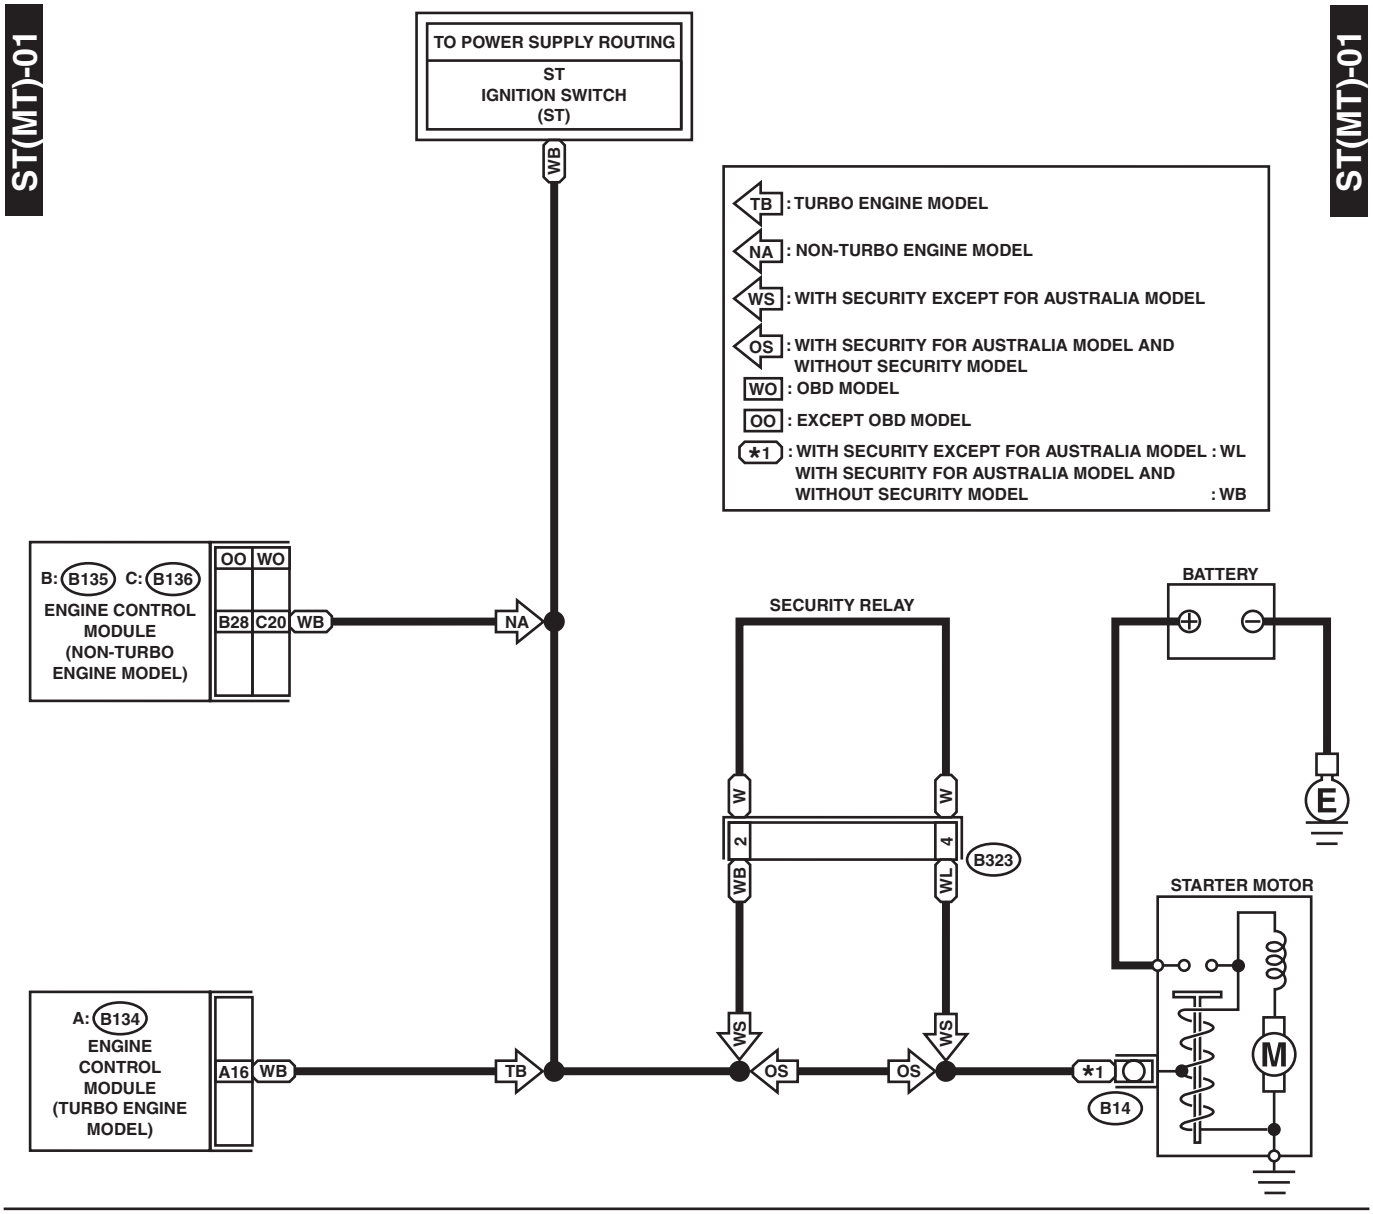

WI-02431

2. AT MODEL

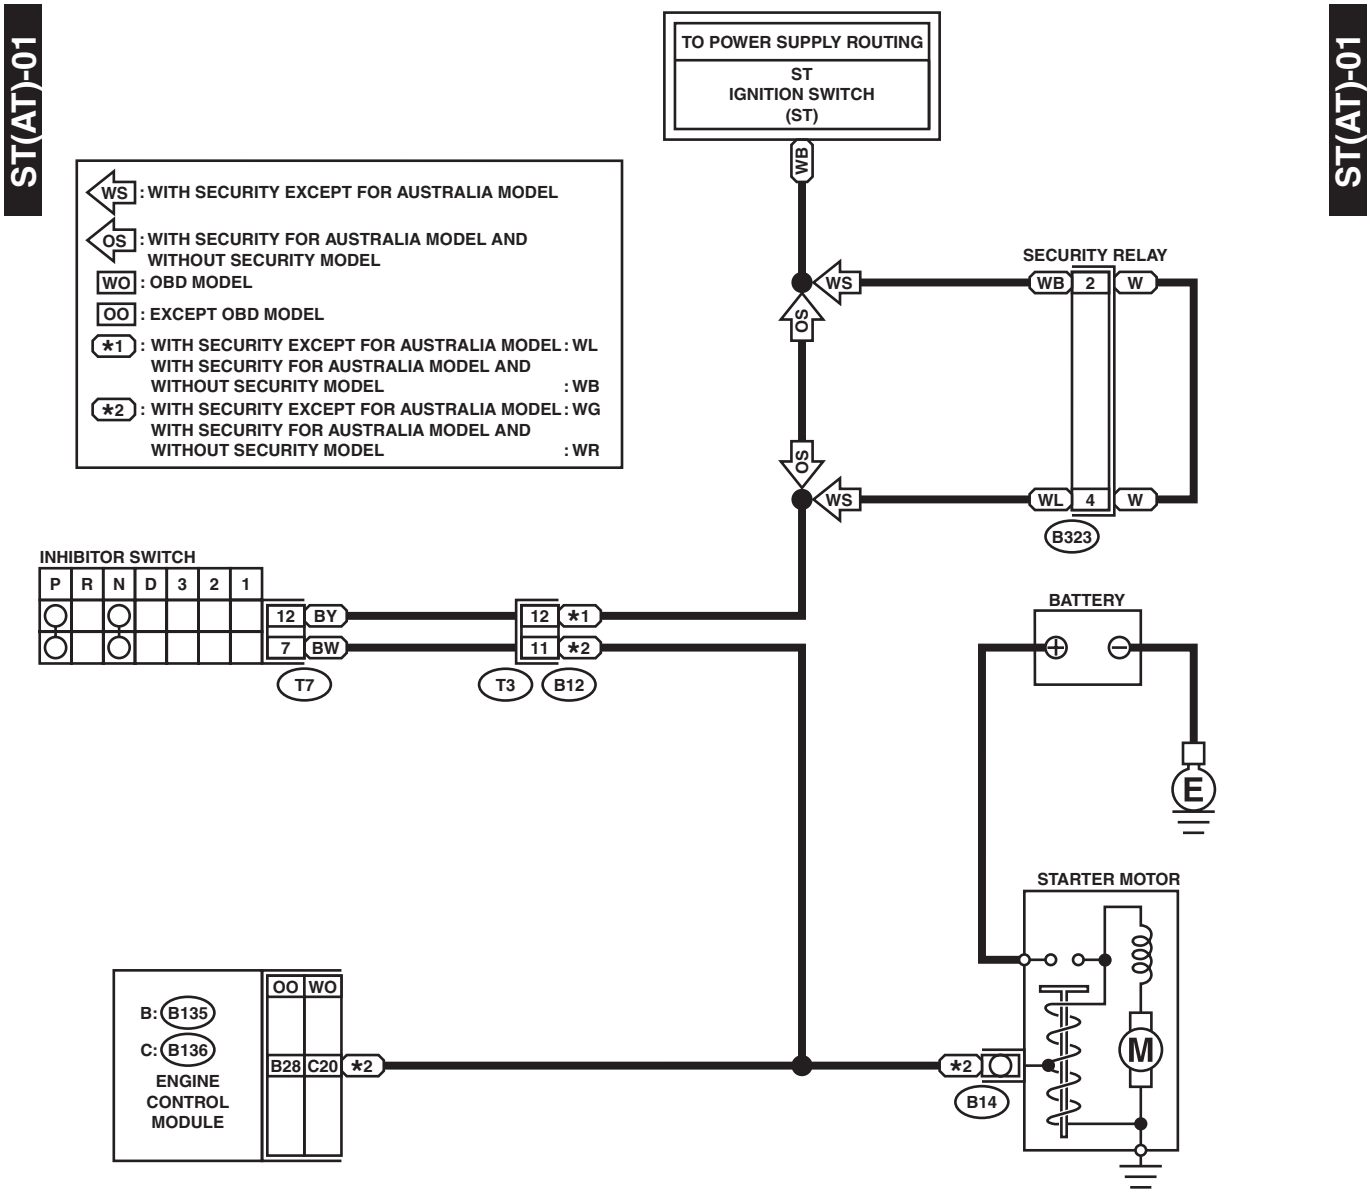

B323 (BLUE)

B12



T7



C: B136



B: B135



WI-02432

41.Sunroof System

A: SCHEMATIC

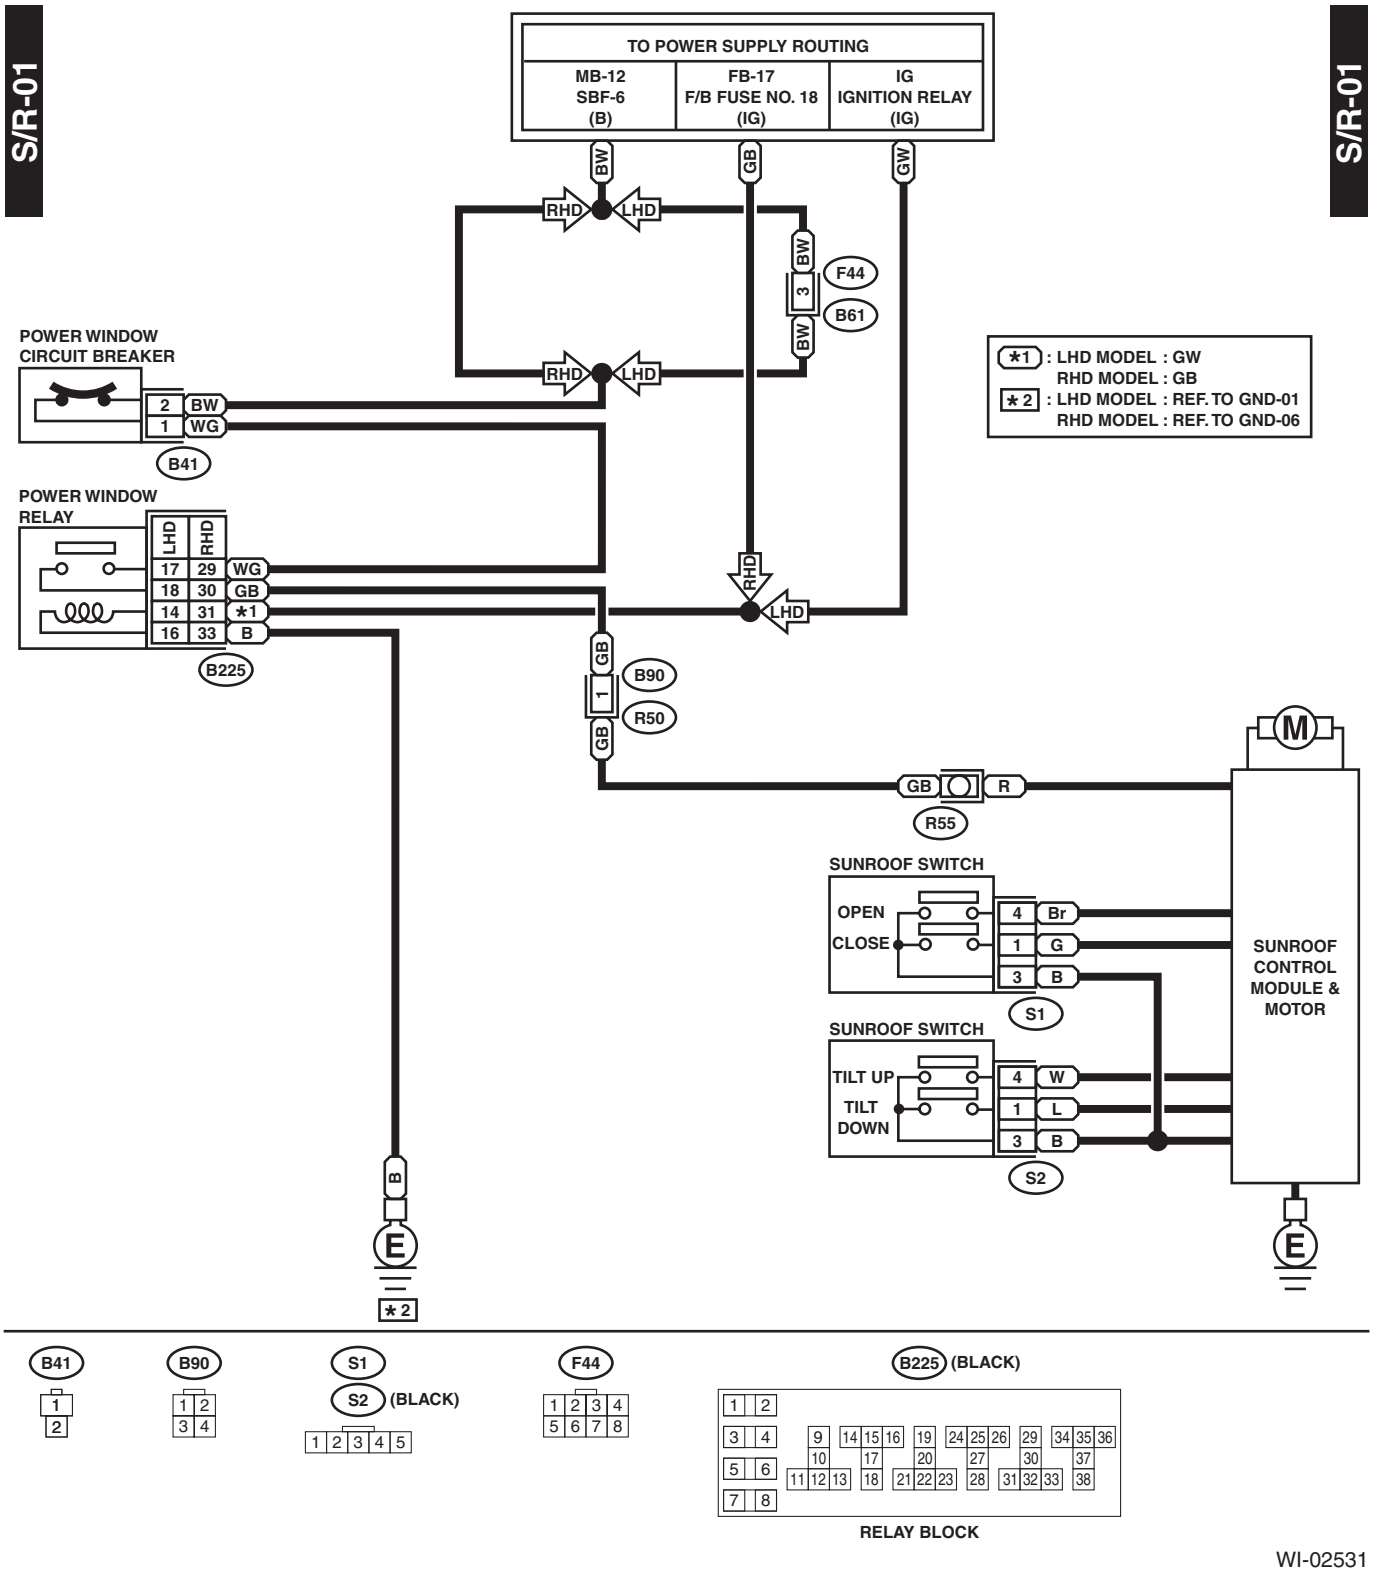

WI-02531

42.Wiper and Washer System (Front)

A: SCHEMATIC

1. LHD MODEL

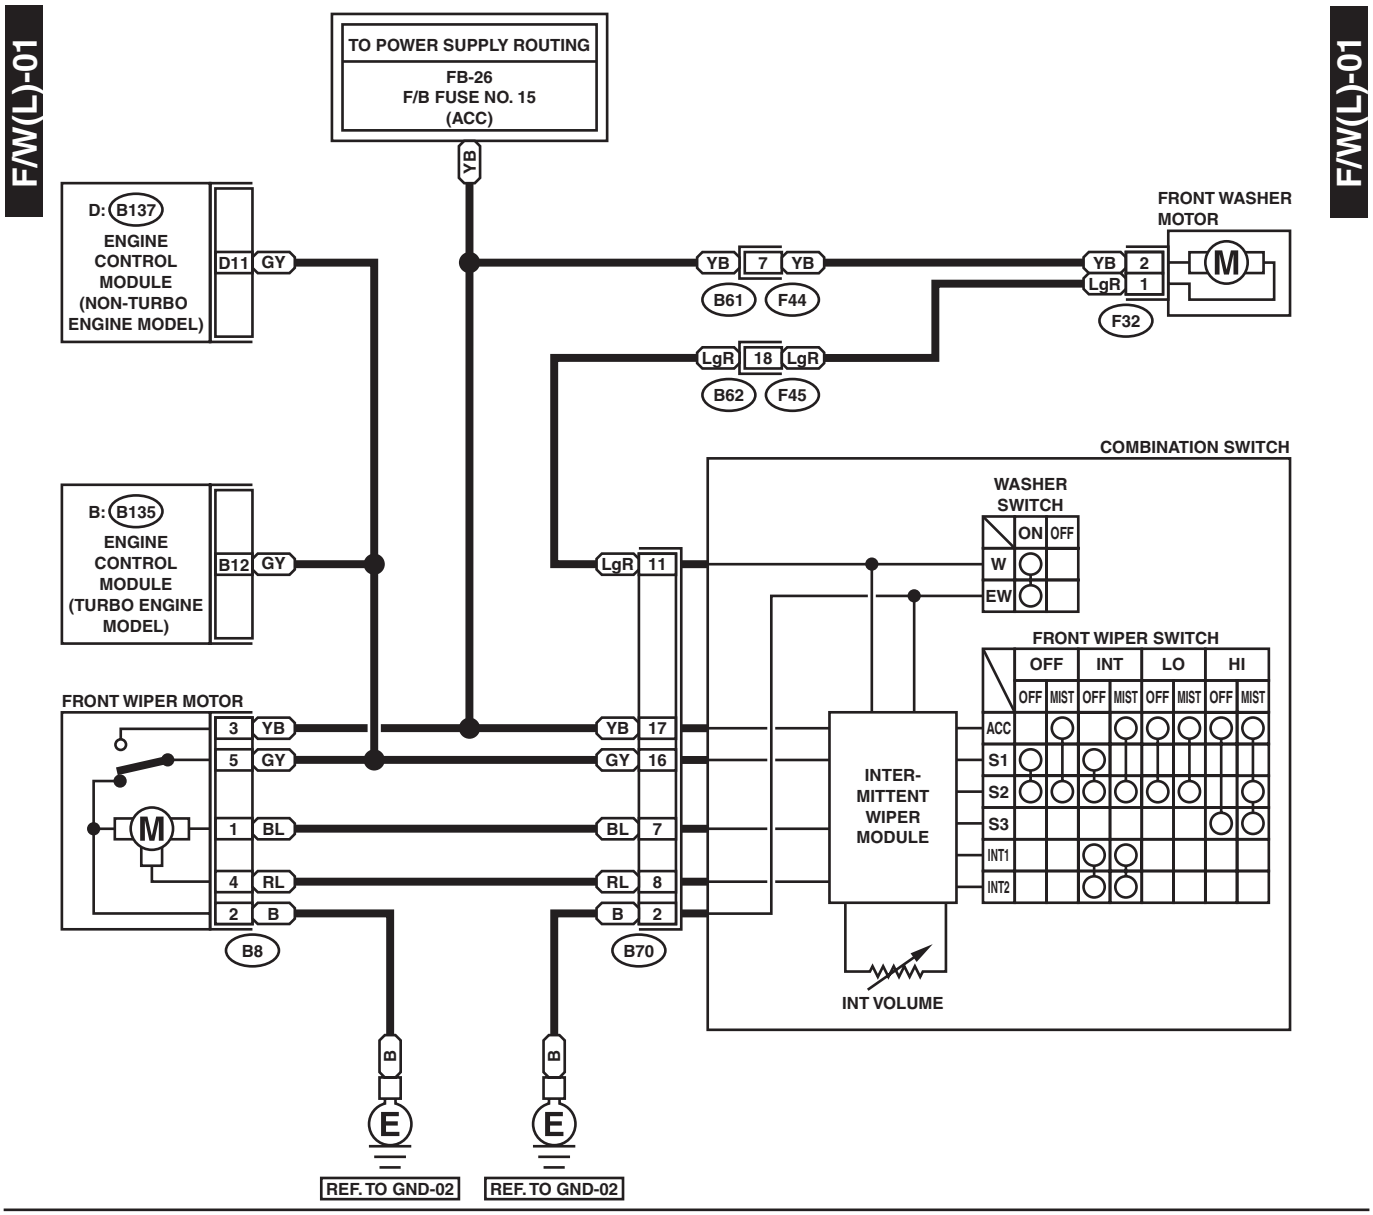

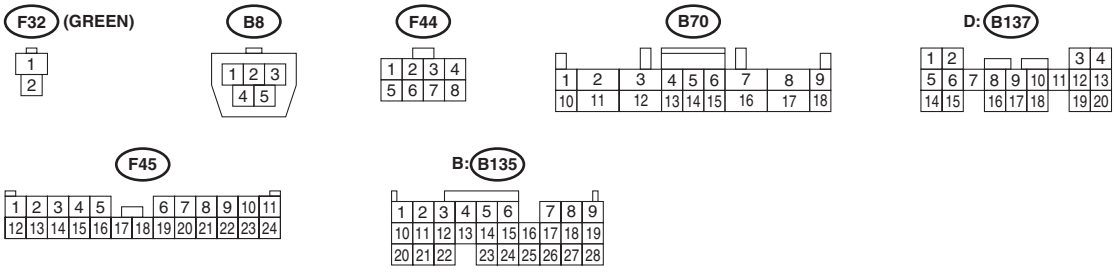

WI-02433

2. RHD MODEL

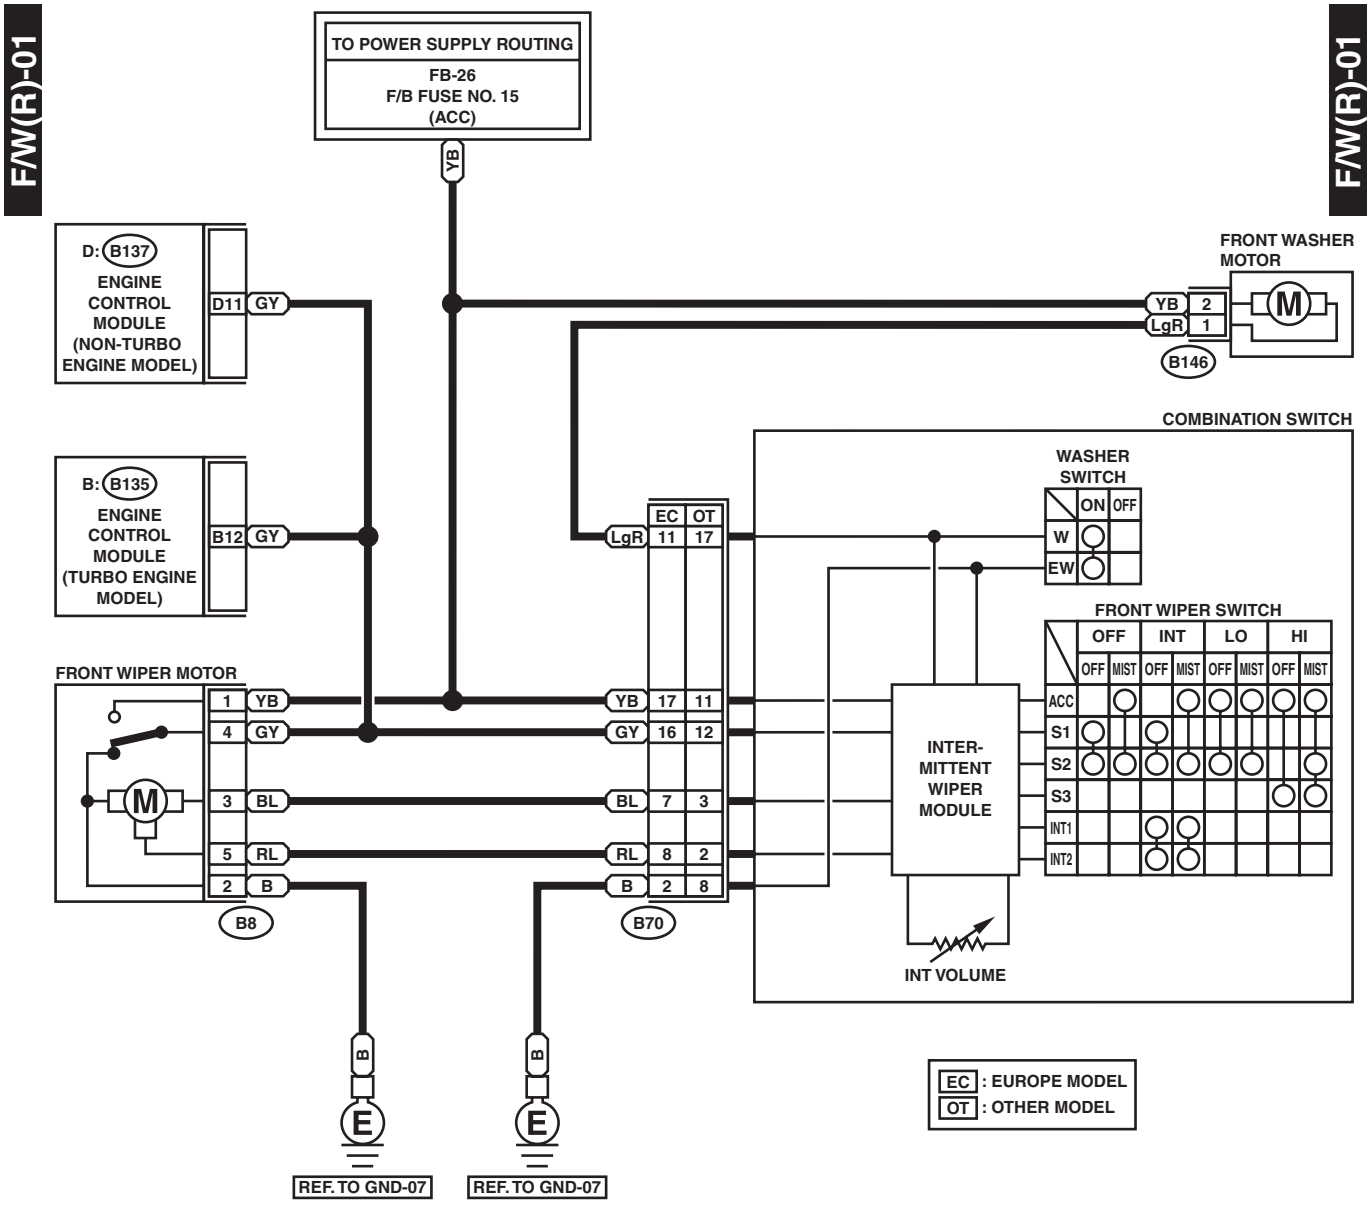

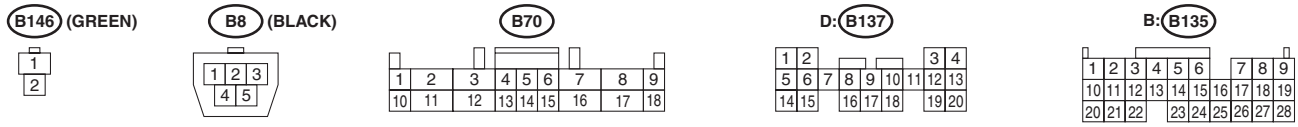

WI-02434

43.Wiper and Washer System (Rear)

A: SCHEMATIC

1. LHD MODEL

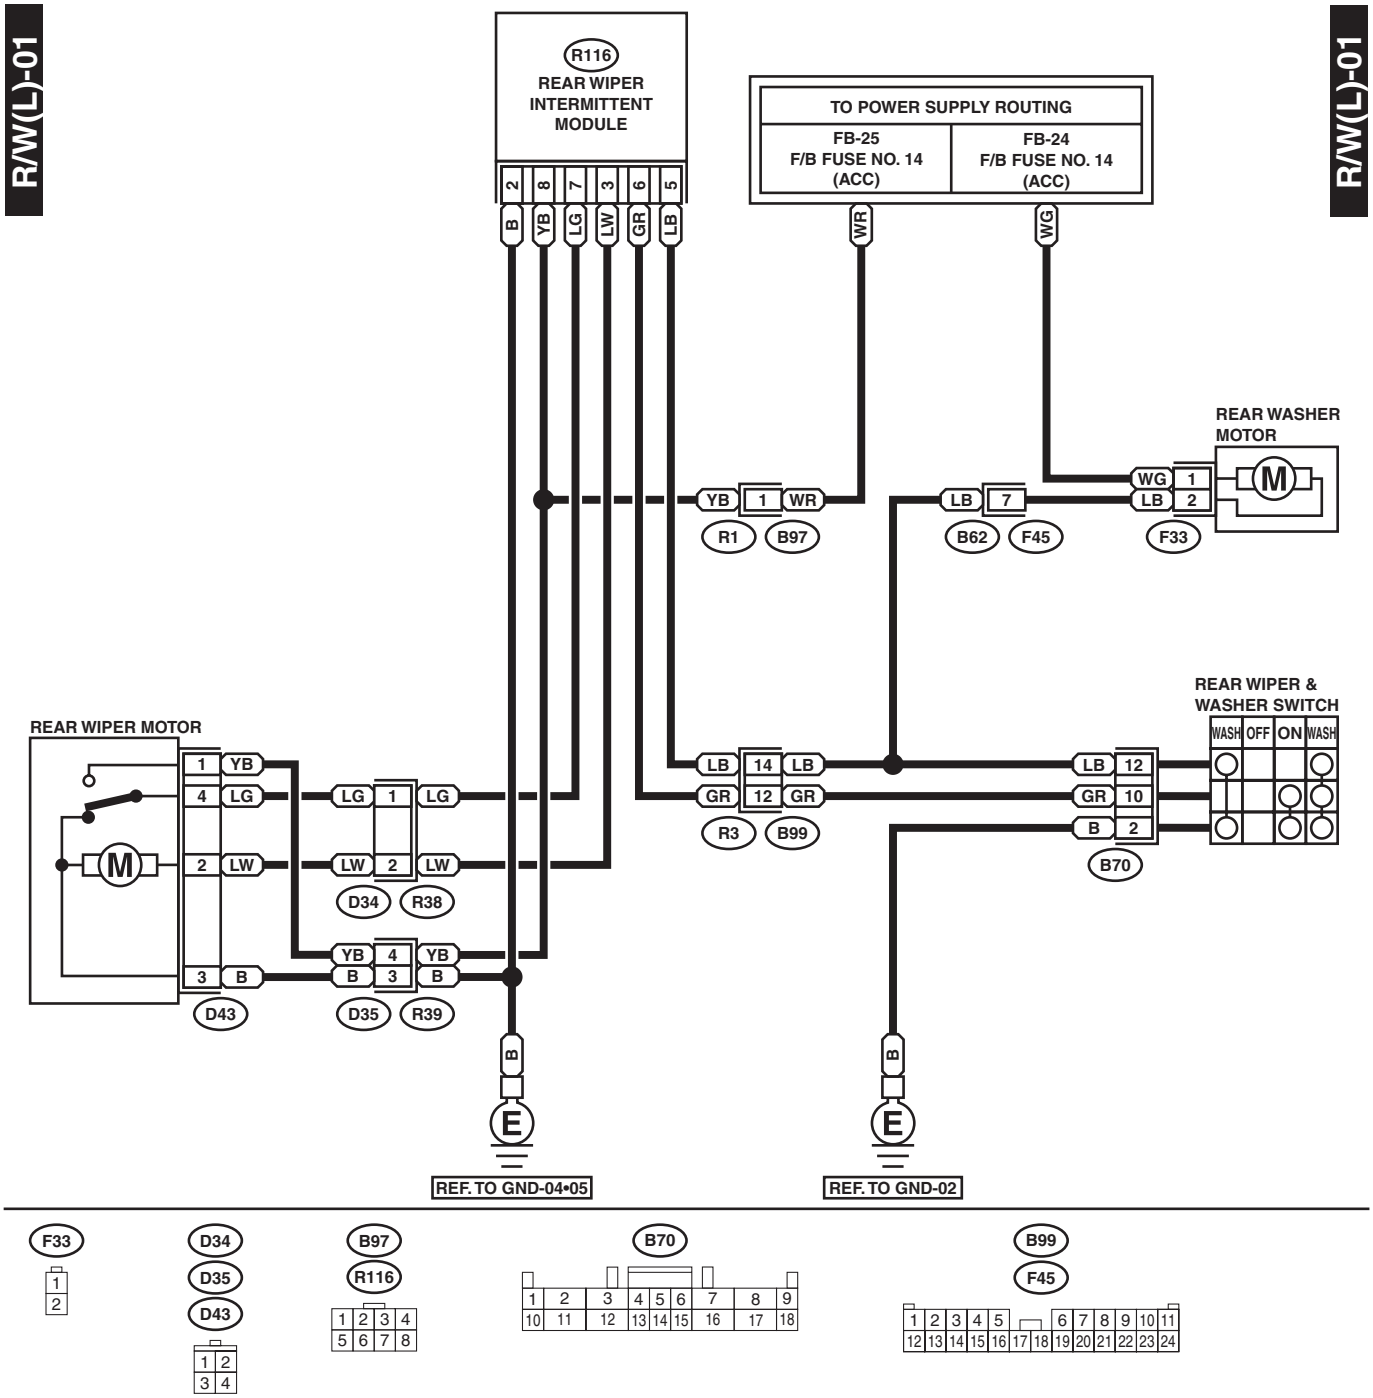

WI-02435

2. RHD MODEL

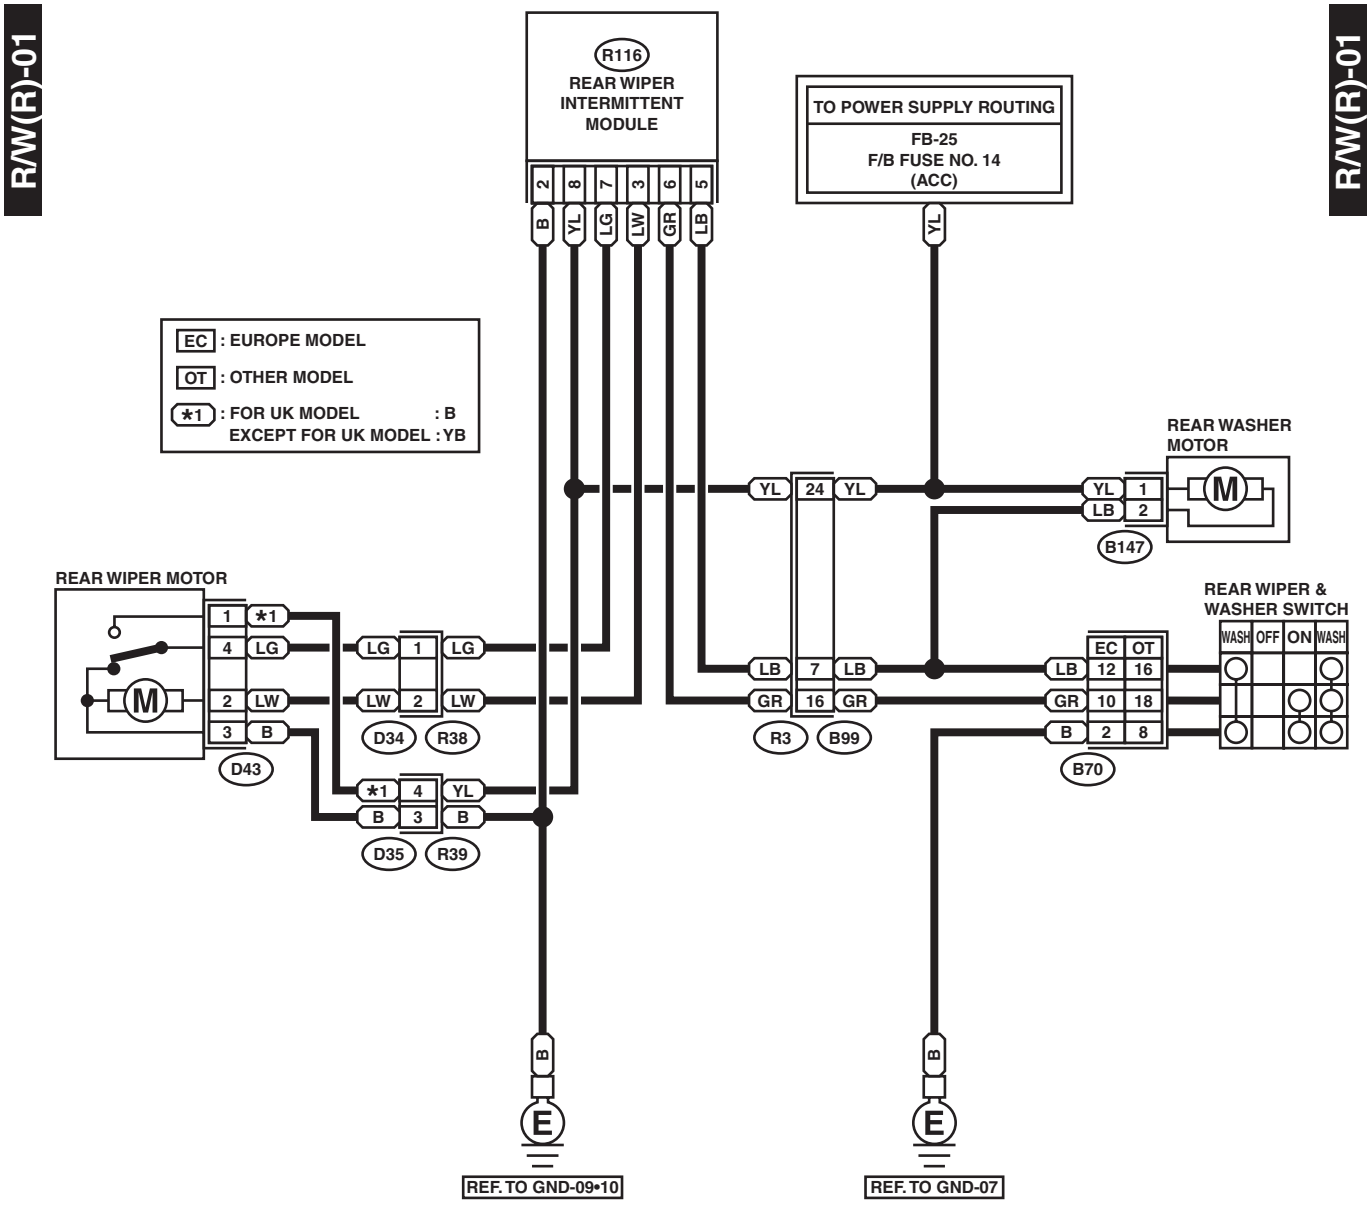

WI-02436

44.Intercooler Water Spray System

A: SCHEMATIC

1. LHD MODEL

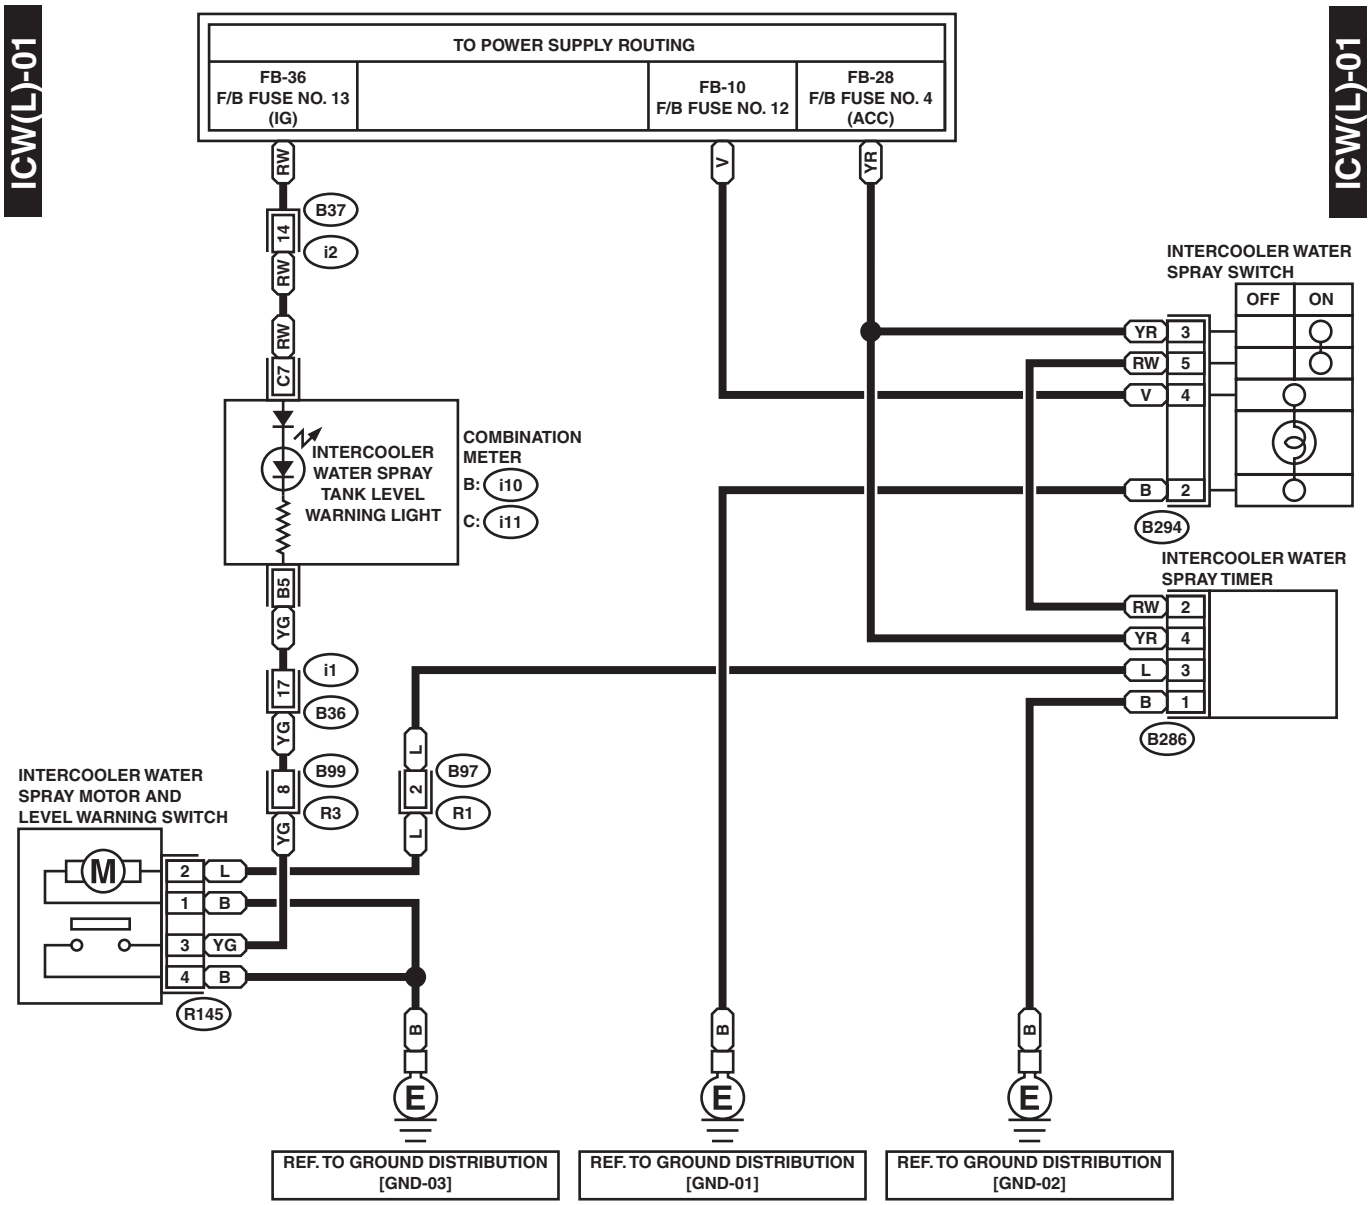

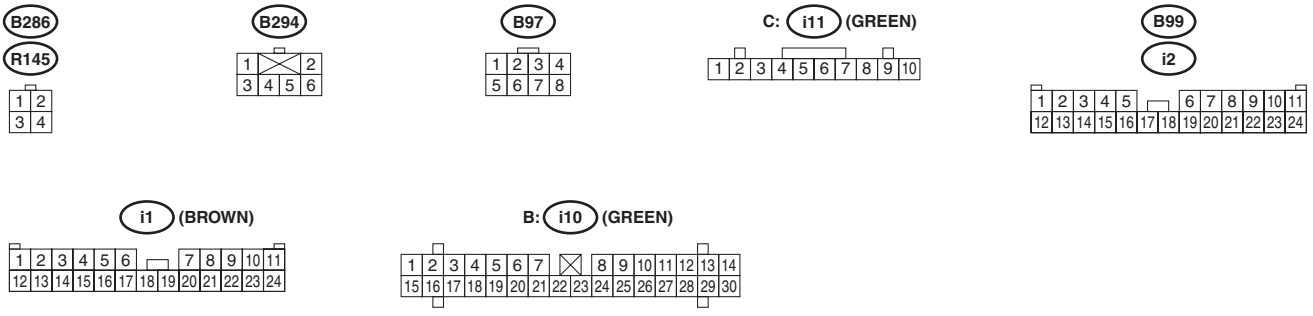

WI-02437

2. RHD MODEL

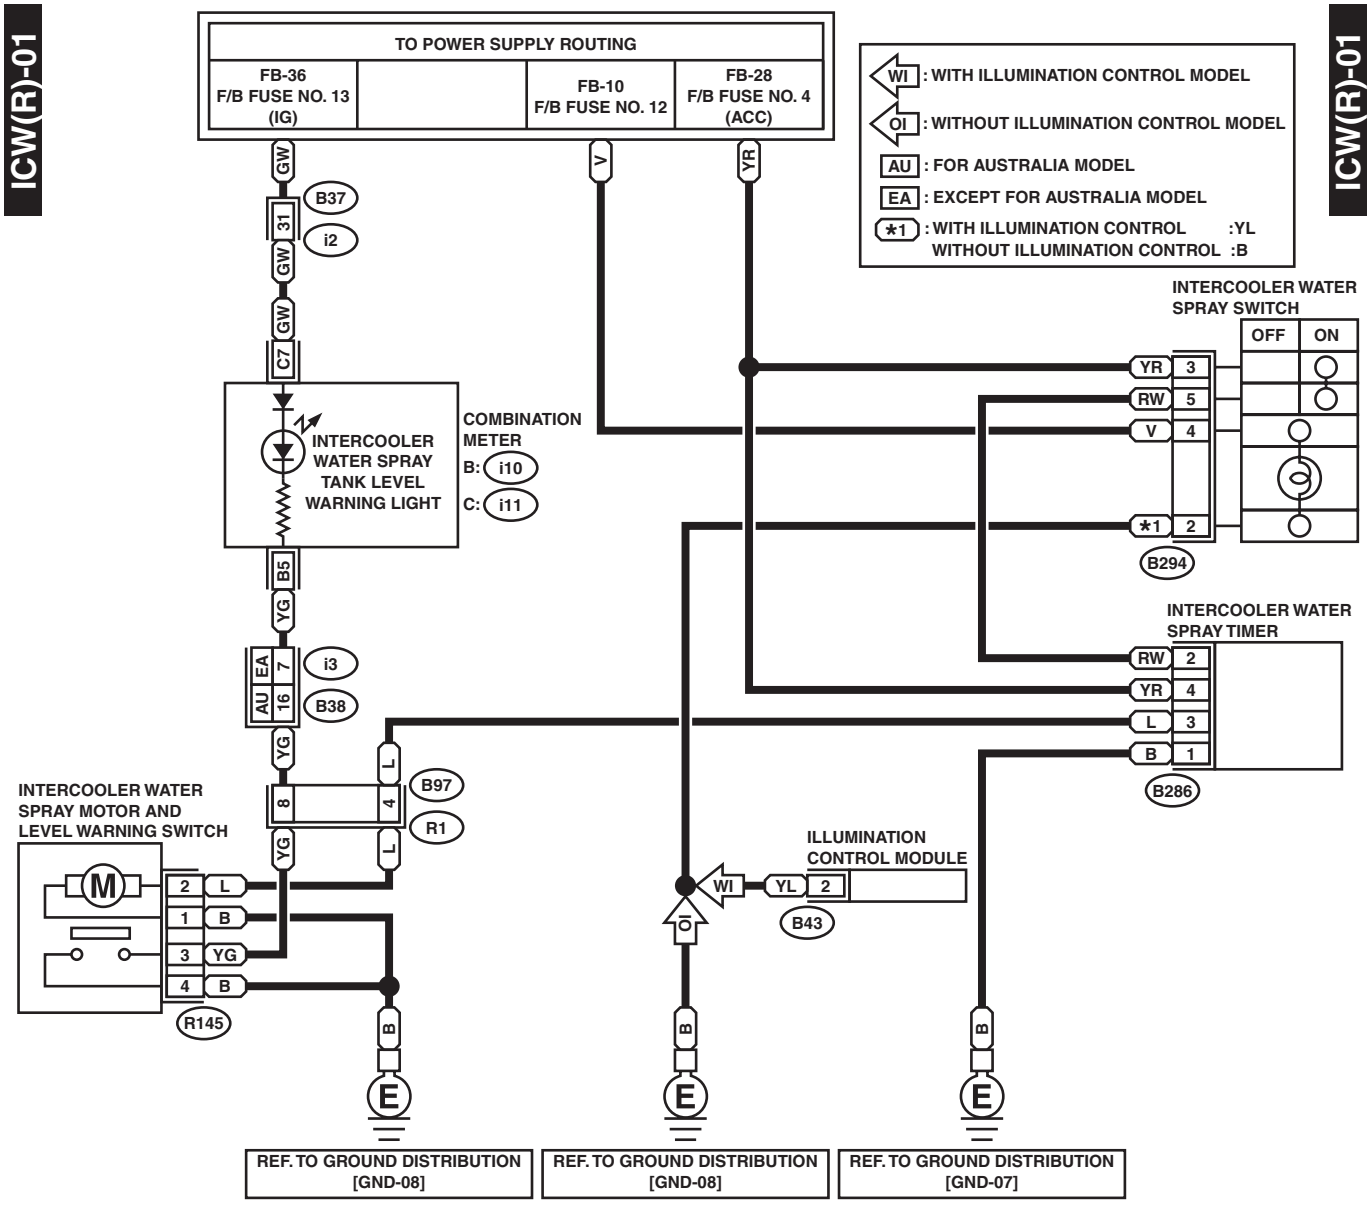

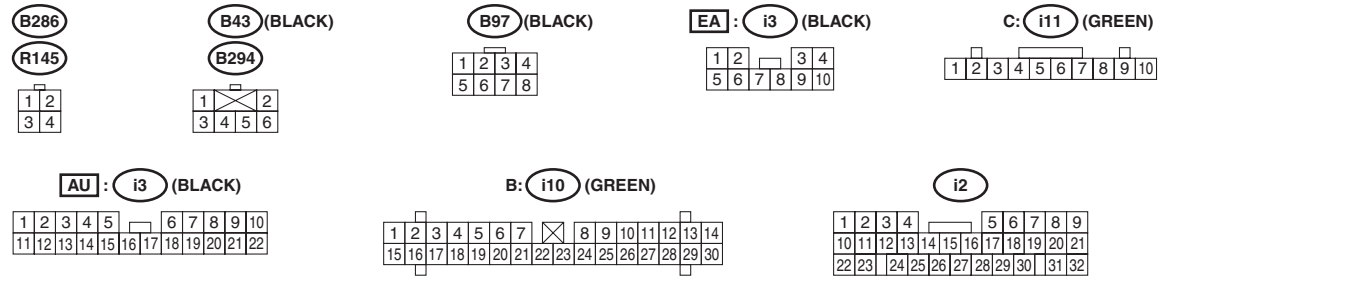

WI-02438

45.Harness Components Location

A: LOCATION

1. LHD MODEL

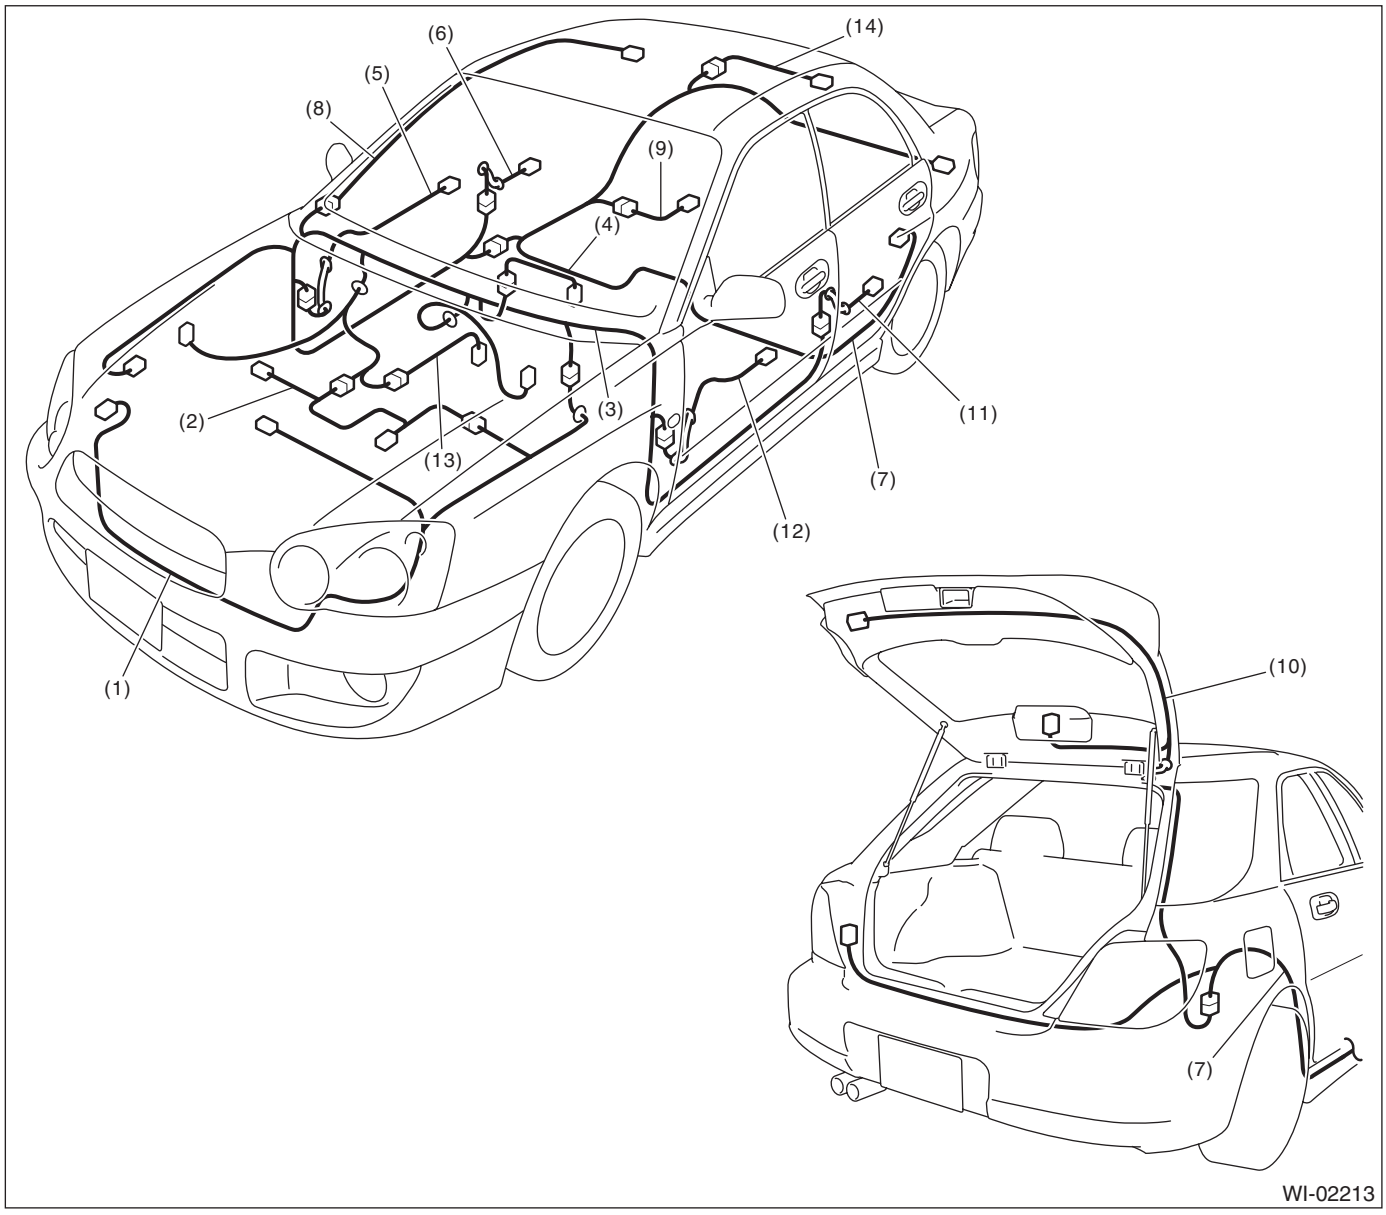

(1)	Front wiring harness	(6)	Rear door cord RH	(11)	Rear door cord LH
(2)	Engine wiring harness	(7)	Rear wiring harness	(12)	Front door cord LH
(3)	Bulkhead wiring harness	(8)	Roof cord	(13)	Transmission cord
(4)	Instrument panel wiring harness	(9)	Fuel tank cord	(14)	Trunk lid cord
(5)	Front door cord RH	(10)	Rear gate cord		

2. RHD MODEL

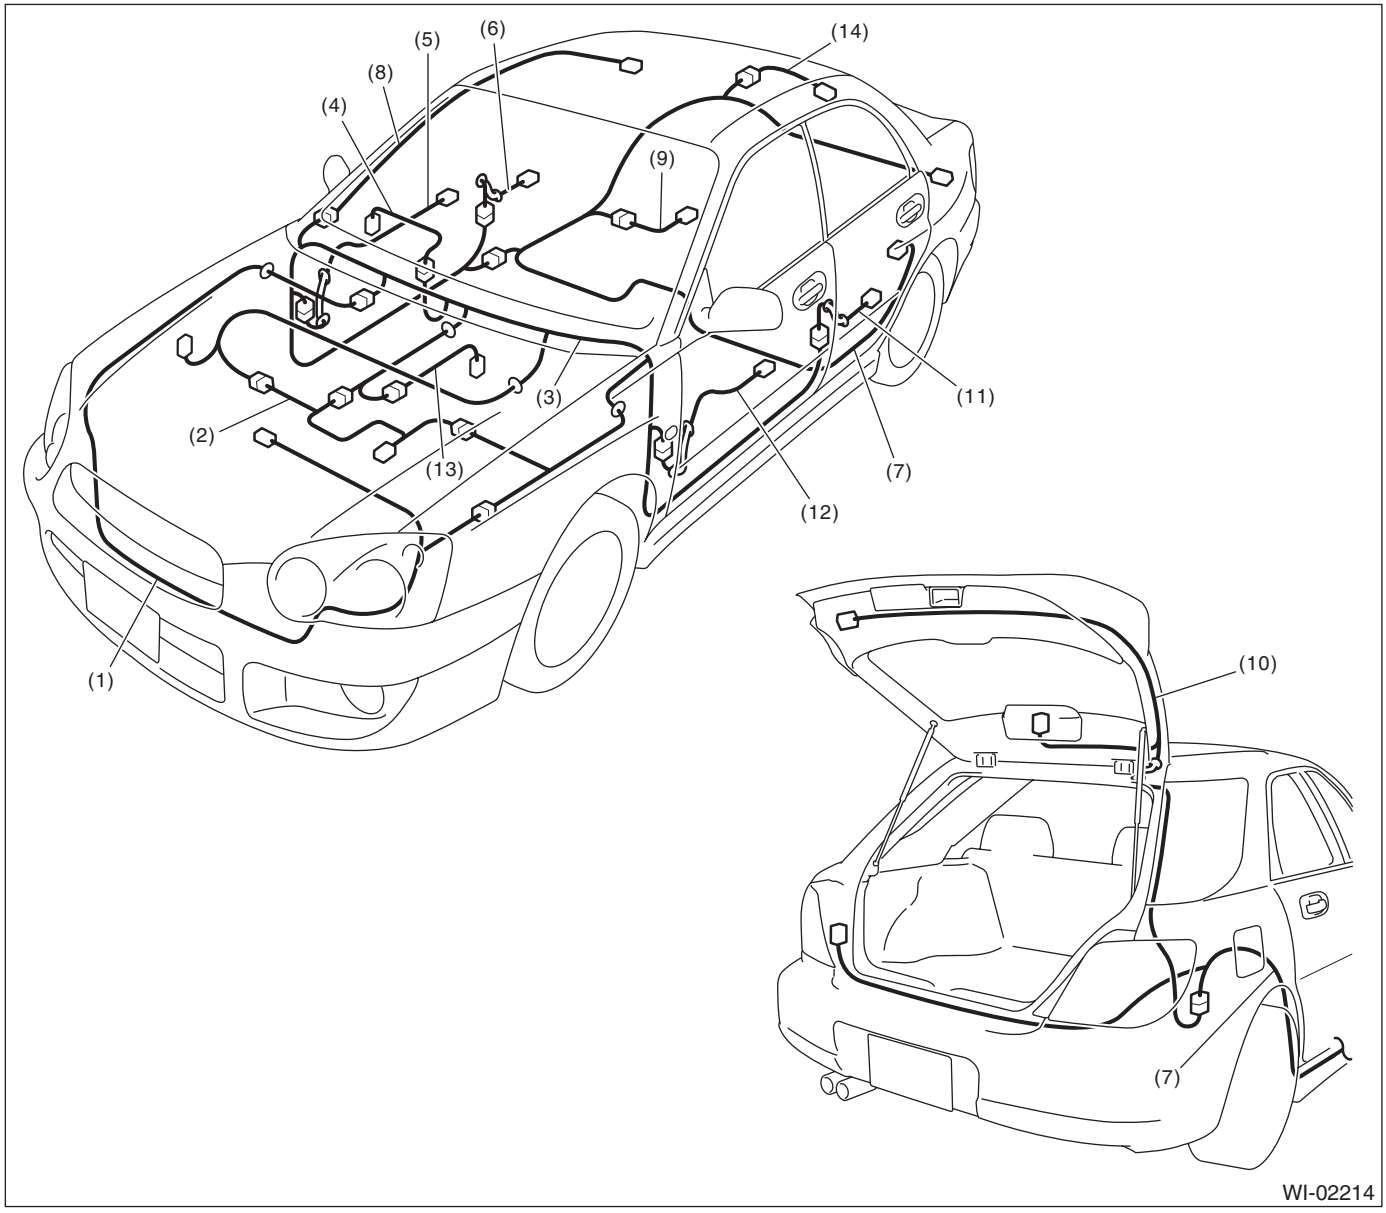

(1) Front wiring harness
(2) Engine wiring harness
(3) Bulkhead wiring harness
(4) Instrument panel wiring harness
(5) Front door cord RH
(6) Rear door cord RH
(7) Rear wiring harness
(8) Roof cord
(9) Fuel tank cord
(10) Rear gate cord
(11) Rear door cord LH
(12) Front door cord LH
(13) Transmission cord
(14) Trunk lid cord

46.Front Wiring Harness

A: LOCATION

1. LHD MODEL

• Front Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F2	24	Black	A-5	B100	Bulkhead wiring harness
F4	3	Black	B-1		Front clearance light RH and front turn signal light RH
F5	1	Black	D-3		Horn
F7	2	Gray	B-1		Headlight RH (Low beam)
F16	2	Black	C-1		Sub fan motor (Non-turbo model)
	4	Gray	C-1		Sub fan motor (Turbo model)
F17	2	Gray	D-3		Radiator main fan motor (Non-turbo model)
	4	Gray	D-3		Radiator main fan motor (Turbo model)
F21	2	Black	D-4		Front fog light LH
F22	3	Black	C-4		Front clearance light LH and front turn signal light LH
F23	2	Gray	C-4		Headlight LH (Low beam)
F24	1	Gray	B-3		A/C compressor
F25	1	★	B-2		Generator
F26	3	Green	B-2		
F27	30	Black	B-4		A/C relay holder
F32	2	Green	B-4		Front washer motor
F33	2	★	B-4		Rear washer motor
F34	4	Black	B-4		SBF holder
F35	2	Black	B-4		M/B
F36	3	★	B-4		
F37	6	Black	B-4		
F38	1	★	B-4		
F39	8	Black	B-4		
F40	9	Brown	B-5		F/B
F41	7	Gray	B-5		
F44	8	★	A-5	B61	Bulkhead wiring harness
F45	24	★	A-5	B62	Bulkhead wiring harness
F46	2	Black	A-5	B108	Bulkhead wiring harness
F47	1	Black	D-4		Horn
F54	2	★	B-5		Side turn signal light LH
F58	6	Gray	C-4		Headlight beam leveler LH
F59	6	Gray	B-1		Headlight beam leveler RH
F60	16	Brown	B-4	E3	Engine wiring harness (Turbo model)
F61	20	Black	B-4	E2	Engine wiring harness (Turbo model)
F68	4	Black	B-4		M/B
F74	16	Blue	A-5	B200	Bulkhead wiring harness
F78	2	Black	C-2		Ambient sensor
F79	2	Gray	B-4		A/C pressure switch
F94	2	Gray	B-4		ABS front sensor LH
F98	2	Black	C-4		Headlight LH (High beam)
F99	2	Black	B-1		Headlight RH (High beam)

★: Non-colored

• Front Sub Sensor Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB14	2	Yellow	B-4	AB13	Airbag wiring harness
AB18	2	Yellow	D-3		Front sub sensor

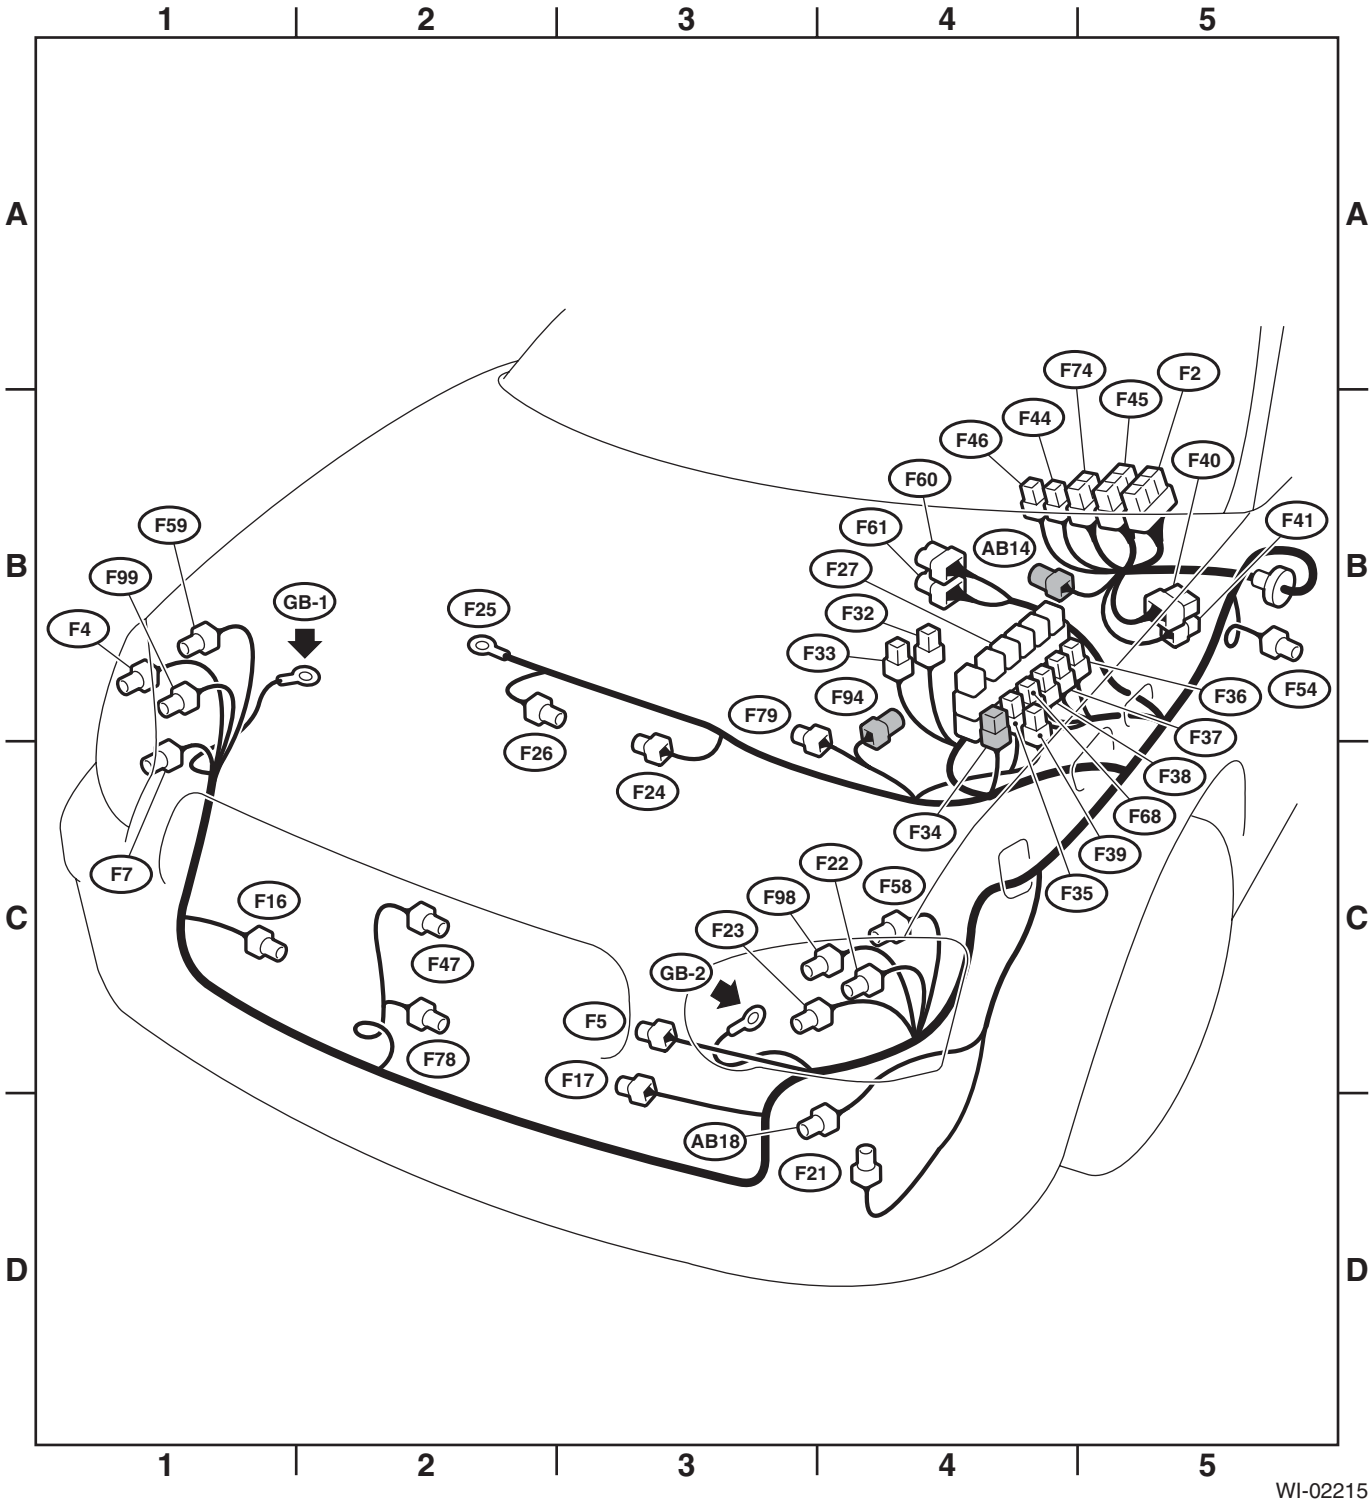

WI-02215

2. RHD MODEL

• Front Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F4	3	Black	B-1		Front clearance light RH and front turn signal light RH
F5	1	★	D-4		Horn
F6	2	★	C-1		Front fog light RH
F7	2	Gray	B-1		Headlight RH (Low beam)
F16	2	Black	C-1		Sub fan motor (Non-turbo model)
	4	Gray	C-1		Sub fan motor (Turbo model)
F17	2	Gray	D-3		Radiator main fan motor (Non-turbo model)
	4	Gray	D-3		Radiator main fan motor (Turbo model)
F21	2	★	D-4		Front fog light LH
F22	3	Black	C-4		Front clearance light LH and front turn signal light LH
F23	2	Gray	C-4		Headlight LH (Low beam)
F24	1	Gray	B-3		A/C compressor
F25	1	★	B-2		Generator
F26	3	Green	B-2		
F27	30	Black	B-4		A/C relay holder
F34	4	Black	B-4		SBF holder
F35	2	Black	B-4		M/B
F39	8	Black	B-4		
F41	7	Gray	A-2		F/B
F44	8	Black	A-3	B61	Bulkhead wiring harness
F45	18	★	A-2	B62	Bulkhead wiring harness
F47	1	★	D-4		Horn
F49	31	Black	B-1		ABS control module
F51	2	★	A-2		Side turn signal light RH
F58	6	Gray	C-4		Headlight beam leveler LH
F59	6	Gray	B-1		Headlight beam leveler RH
F62	8	Gray	C-1		Shield joint connector (ABS)
F73	1	★	C-1		ABS motor ground
F74	22	Black	A-3	B200	Bulkhead wiring harness (ABS)
F78	2	Black	C-2		Ambient sensor
F79	2	Gray	C-3		A/C pressure switch
F94	2	Gray	B-4		ABS front sensor LH
F95	2	Gray	B-2		ABS front sensor RH
F96	4	★	C-4	B255	Bulkhead wiring harness
F97	2	★	A-3		ABS condenser
F98	2	Black	C-4		Headlight LH (High beam)
F99	2	Black	B-1		Headlight RH (High beam)
★: Non-colored					

• Front Sub Sensor Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB14	2	Yellow	B-2	AB13	Airbag wiring harness
AB15	2	Yellow	C-1		Front sub sensor RH

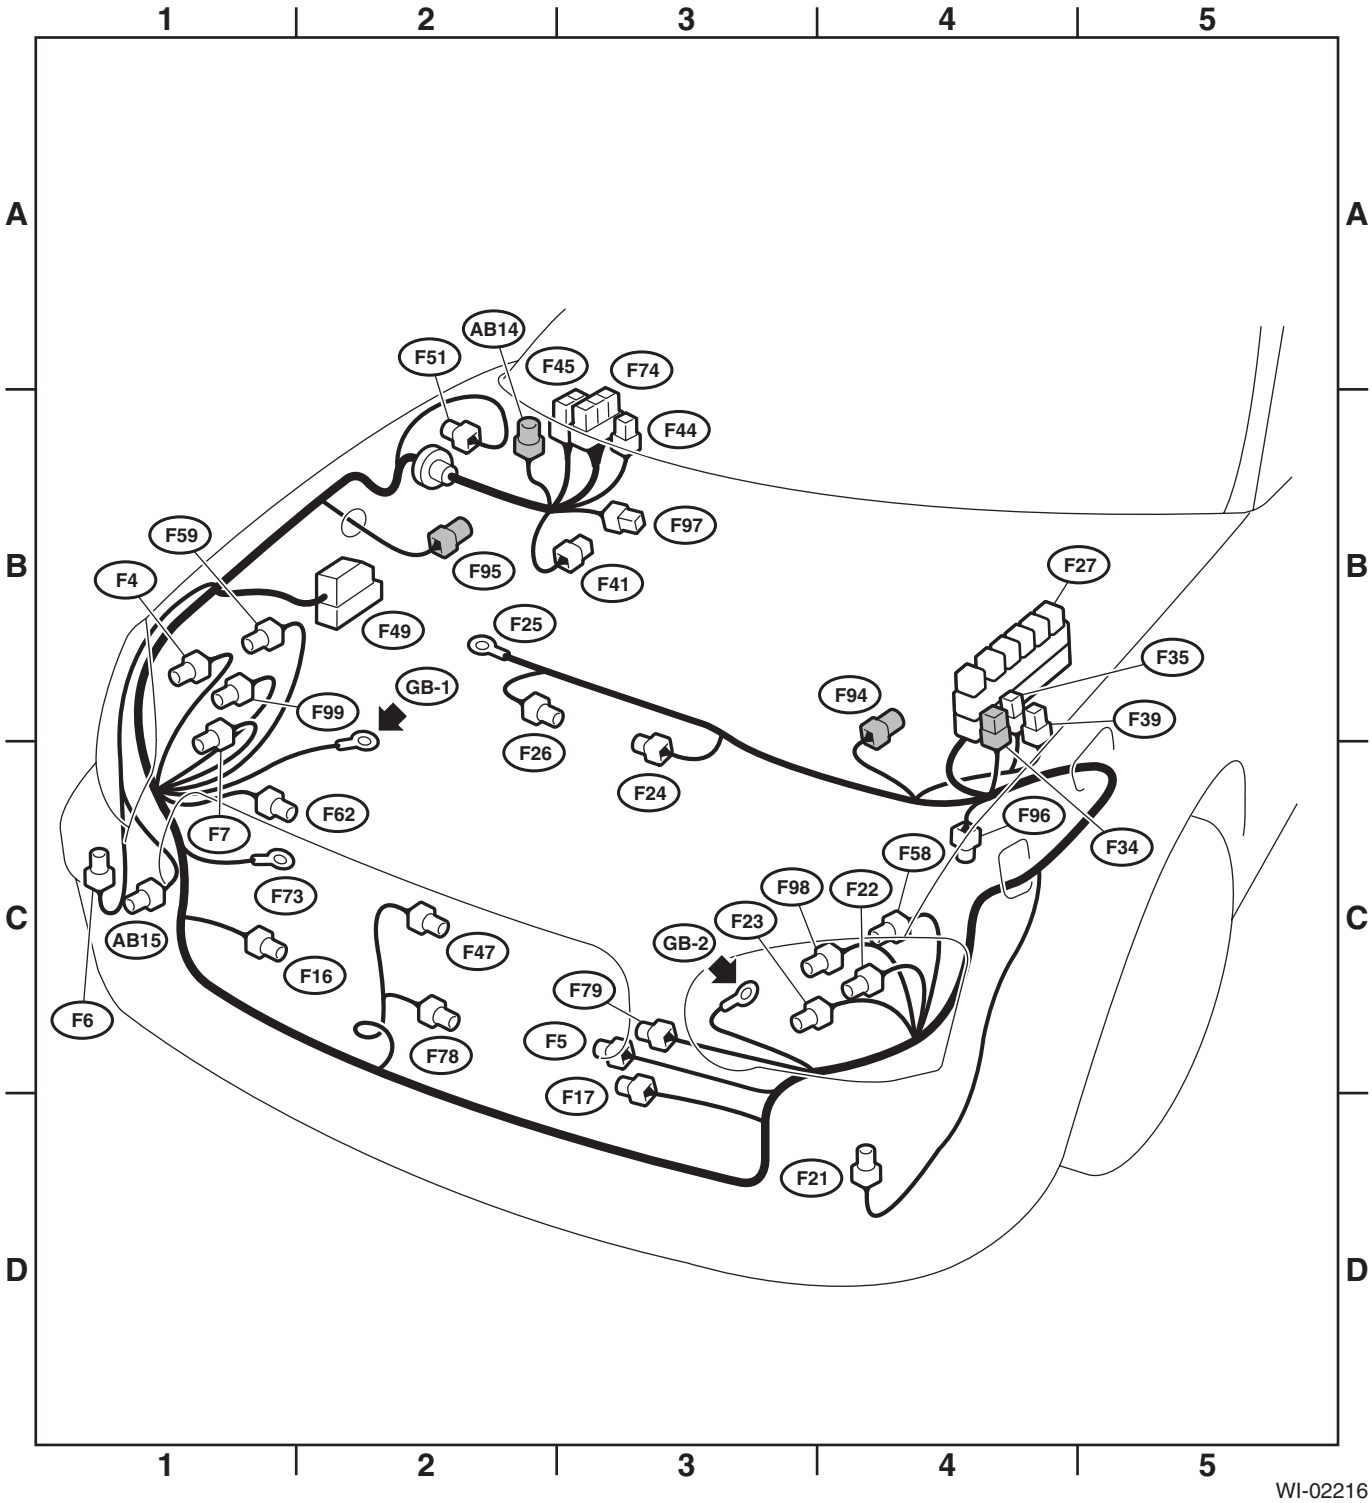

47.Bulkhead Wiring Harness (In Engine Room)

A: LOCATION

1. LHD NON-TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B8	5	Gray	A-4		Front wiper motor
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	Black	B-3		Starter (Magnet)
B15	2	Gray	B-2		ABS front sensor RH
B16	2	Gray	B-4		Brake fluid level switch
B17	3	★	B-3		Vehicle speed sensor (MT)
B18	4	★	B-2		Front oxygen (A/F) sensor (With OBD)
B19	4	★	B-2		Rear oxygen sensor (With OBD)
B21	20	Light gray	B-2	E2	Engine wiring harness
B22	16	Brown	B-2	E3	
B24	2	Gray	B-3	T1	Back-up light switch (MT)
B25	2	Brown	B-3	T2	Neutral position switch (MT)
B28	3	★	A-2		CO resistor
B29	2	★	B-3	T8	Lo (AWD) indicator light switch (MT)
B301	31	Black	B-1		ABS control module
B302	1	★	B-1		ABS motor ground
B303	8	Gray	B-1		Shield joint connector (ABS)
B305	2	★	A-2		Side turn signal light RH
B306	2	Black	C-1		Front fog light RH
B328	6	Black	B-2	E-58	Engine wiring harness
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB15	2	Yellow	C-1		Front sub sensor RH

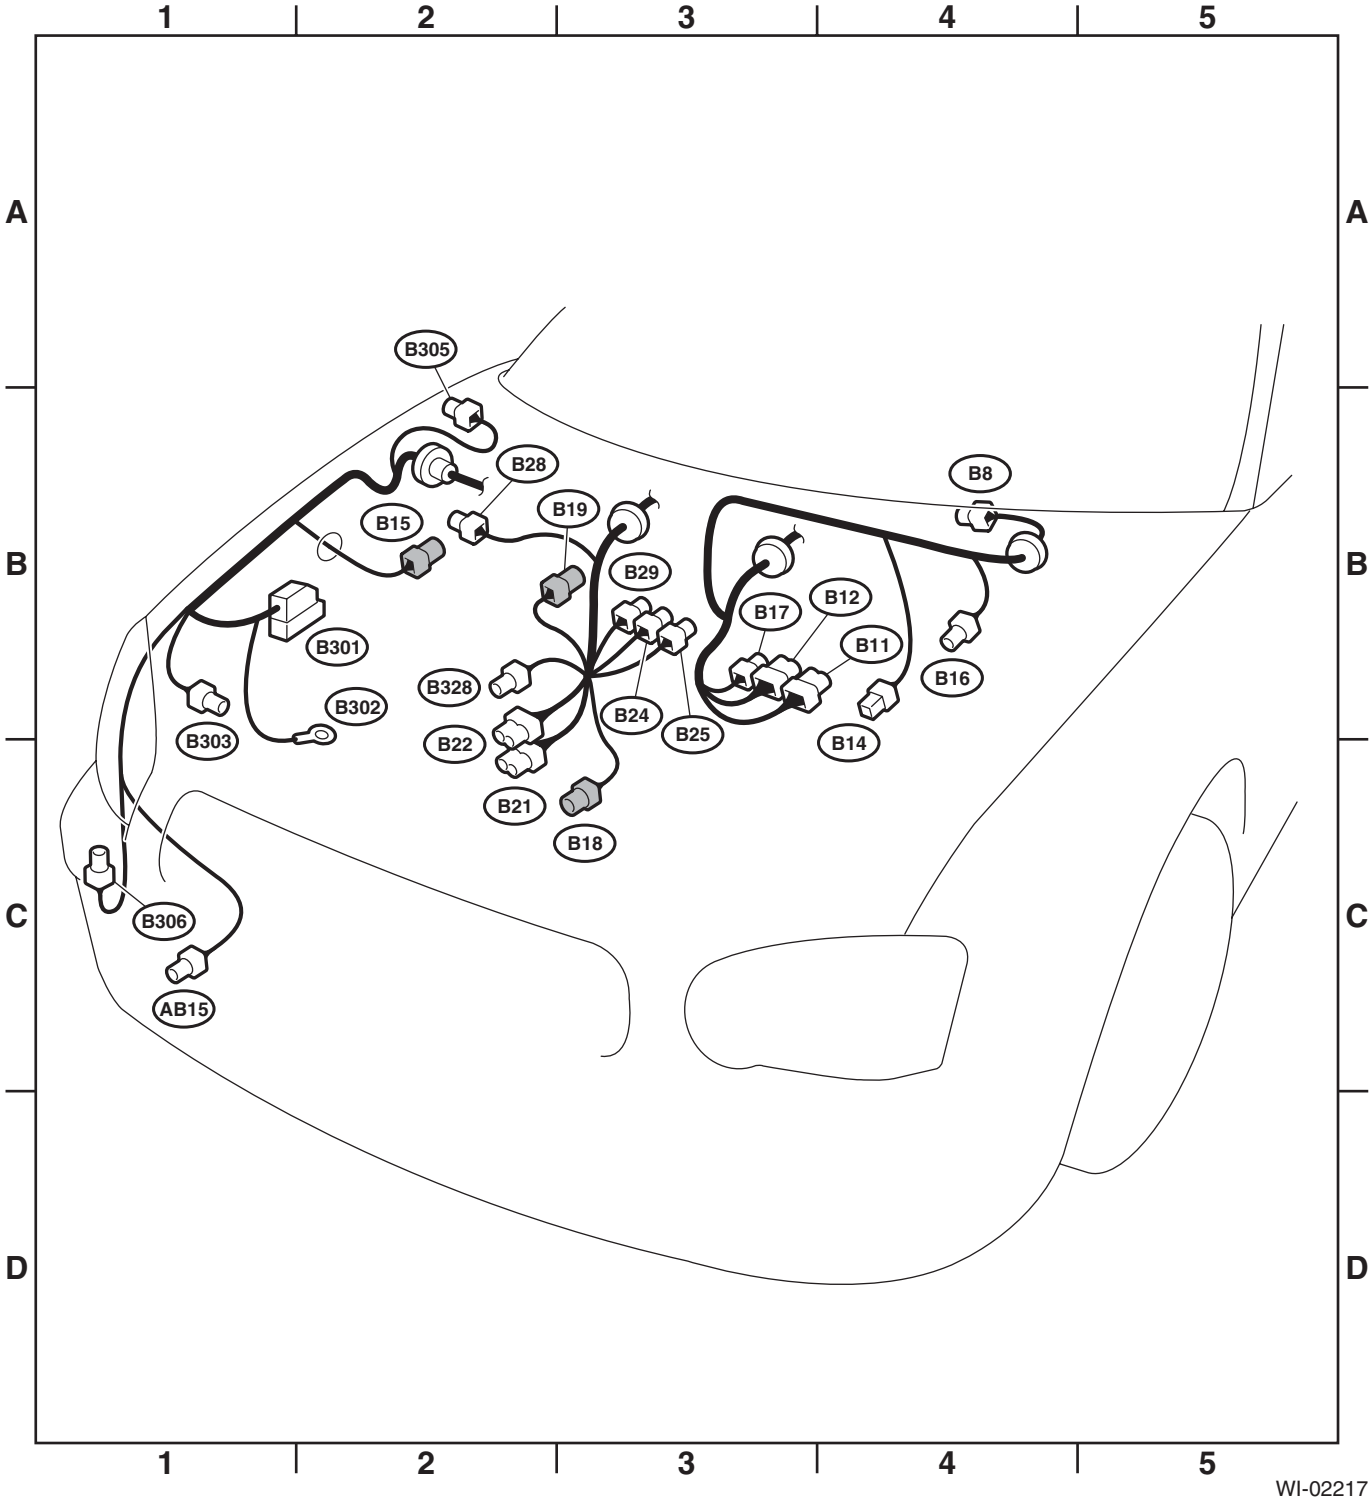

WI-02217

2. LHD TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	Gray	B-2		Mass air flow sensor
B8	5	★	A-4		Front wiper motor
B14	1	Black	B-4		Starter (Magnet)
B15	2	Gray	B-2		ABS front sensor RH
B16	2	Gray	B-4		Brake fluid level switch
B17	4	★	B-3		Vehicle speed sensor (Except STi model)
	3	★	B-3		Vehicle speed sensor (STi model)
B18	4	★	B-2		Front oxygen (A/F) sensor
B19	4	★	B-3		Rear oxygen sensor
B20	10	★	B-2	E1	Engine wiring harness
B127	2	Blue	B-2		Wastegate control solenoid valve
B128	4	★	B-3	T9	Transmission (MT)
B279	2	★	B-3		Exhaust temperature sensor
B301	31	Black	B-1		ABS control module
B302	1	★	B-1		ABS motor ground
B303	8	Gray	B-1		Shield joint connector (ABS)
B305	2	★	A-2		Side turn signal light RH
B306	2	Black	C-1		Front fog light RH
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB15	2	Yellow	C-1		Front sub sensor RH

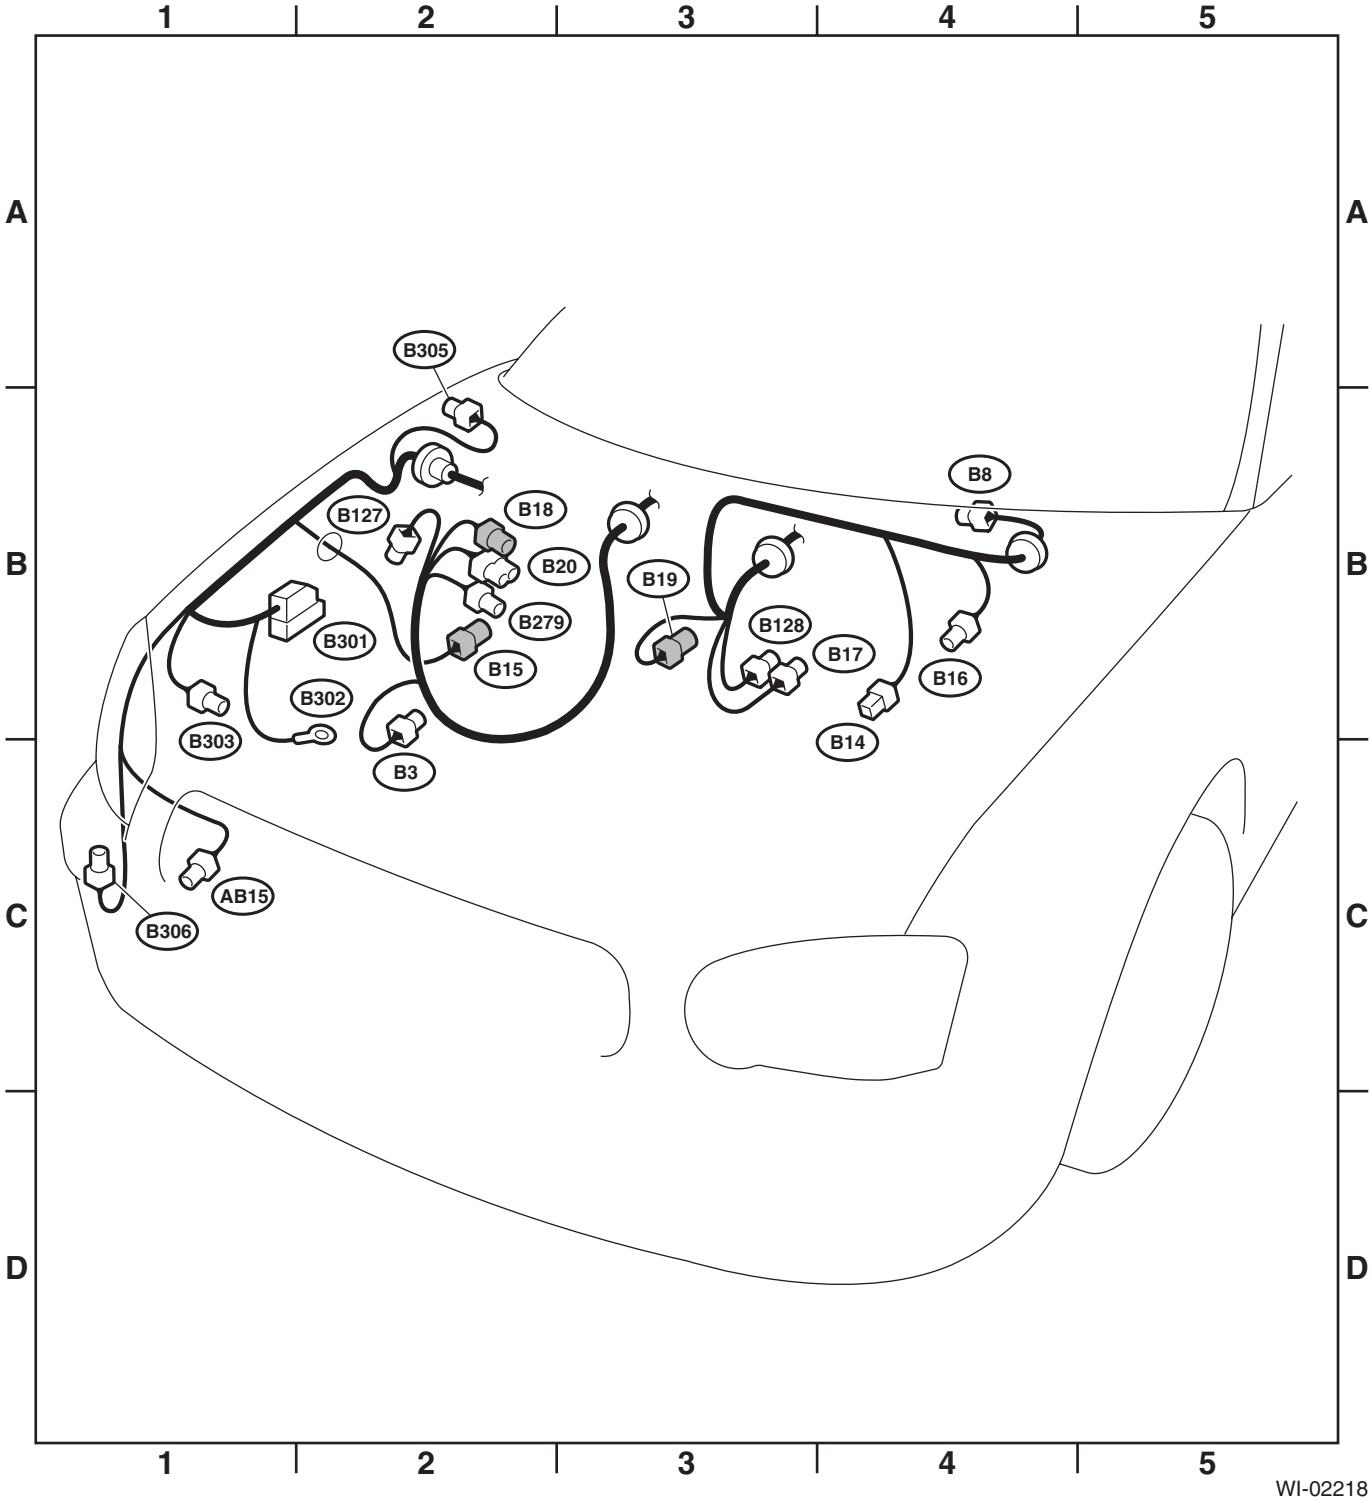

3. RHD NON-TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B7	6	Black	A-4		Cruise control actuator
B8	5	Black	A-3		Front wiper motor
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	Black	B-4		Starter (Magnet)
B16	2	Gray	A-3		Brake fluid level switch
B17	3	Black	B-3		Vehicle speed sensor (MT)
B18	4	★	B-3		Oxygen sensor (Catalytic converter equipped vehicle without OBD)
	4	★	B-3		Front oxygen (A/F) sensor (With OBD)
B19	4	★	B-3		Rear oxygen sensor (With OBD)
B21	20	Light gray	B-3	E2	Engine wiring harness
B22	16	Brown	B-3	E3	
B24	2	Gray	B-3	T1	Back-up light switch (MT)
B25	2	Brown	B-3	T2	Neutral position switch (MT)
B28	3	★	A-1		CO resistor (Without catalytic converter)
B29	2	★	B-3	T8	Lo (AWD) indicator light switch (MT)
B143	3	★	B-5		M/B
B144	6	Black	B-4		
B145	1	★	B-4		
B146	2	Green	B-4		Front washer motor
B147	2	★	B-4		Rear washer motor
B148	2	★	B-5		Side turn signal light LH
B186	4	Black	B-4		M/B
B255	4	★	C-4	F96	Front wiring harness
B328	6	Black	B-3	E58	Engine wiring harness

★: Non-colored

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB18	2	Yellow	D-4		Front sub sensor LH

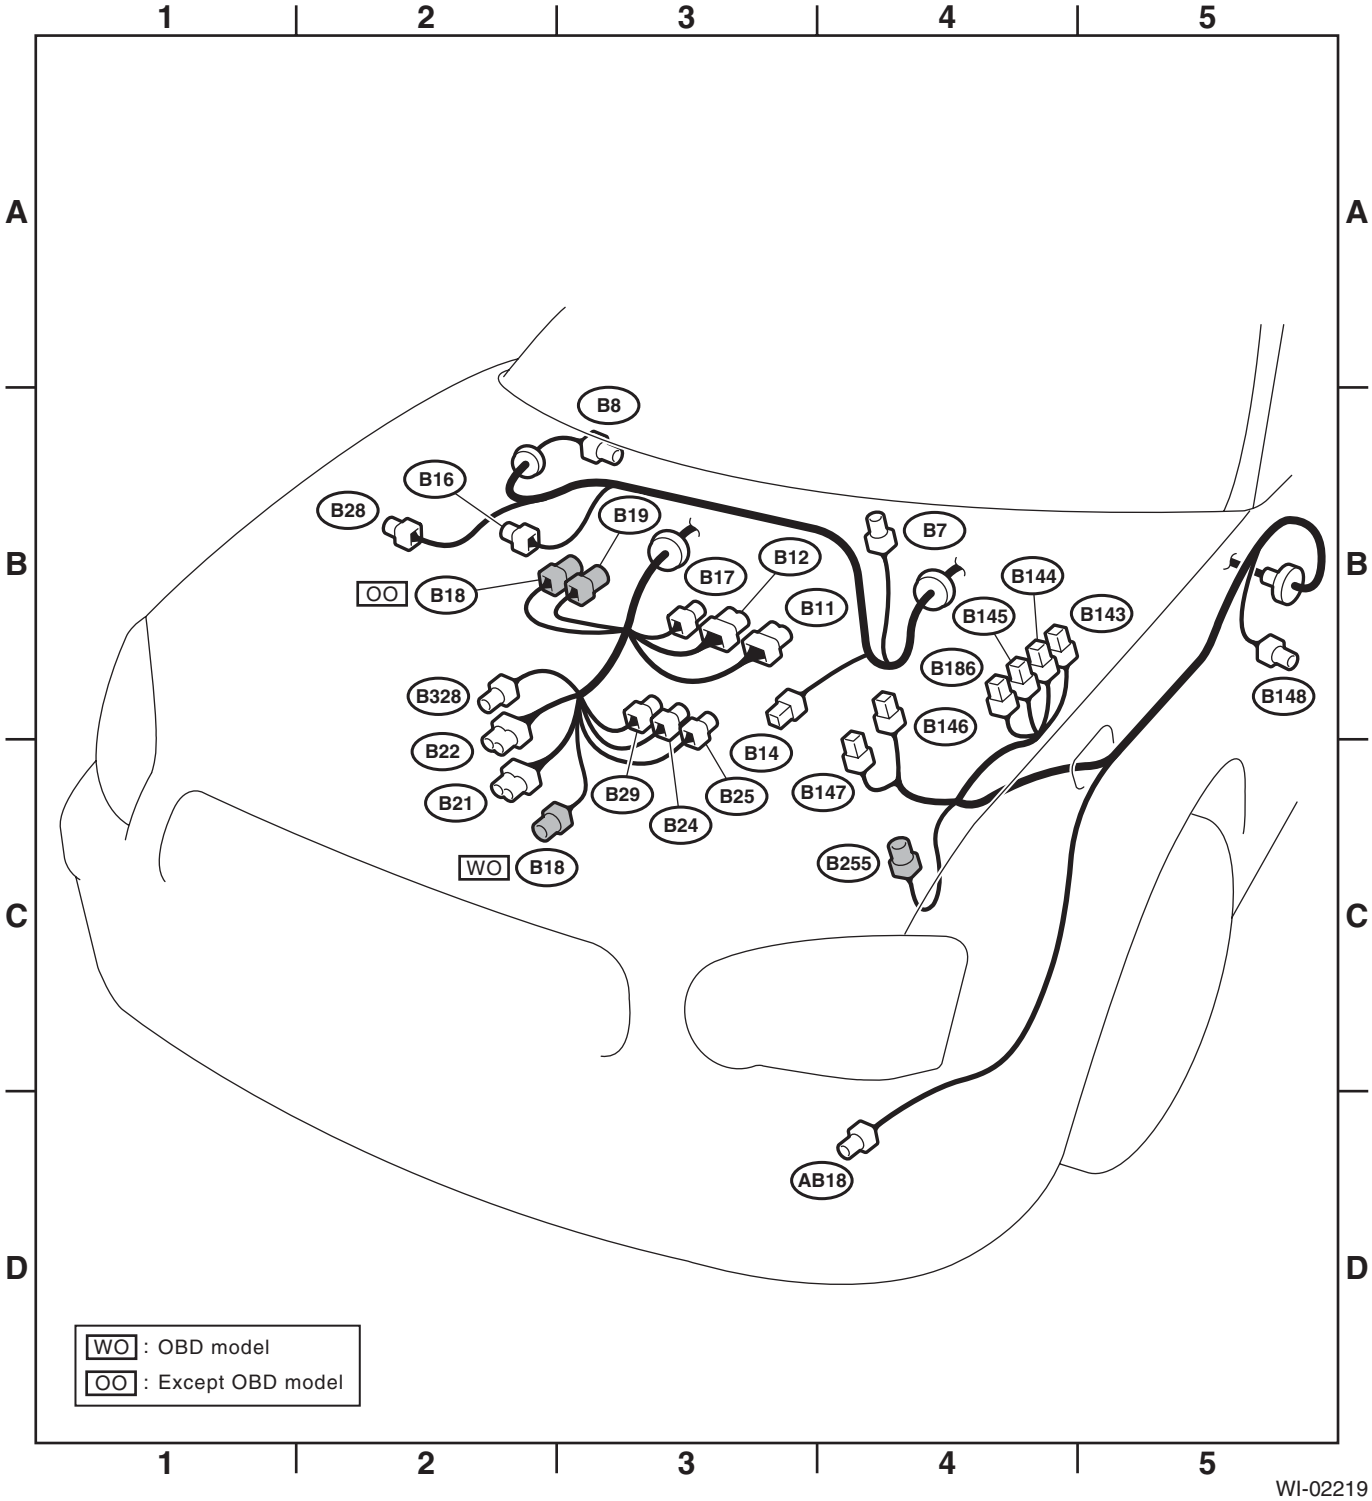

WI-02219

4. RHD TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	Black	B-2		Mass air flow sensor
B7	6	Black	A-4		Cruise control actuator
B8	5	Gray	A-3		Front wiper motor
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	Black	B-4		Starter (Magnet)
B16	2	Gray	A-3		Brake fluid level switch
B17	3	Black	B-3		Vehicle speed sensor (MT-STi model)
	4	Black	B-3		Vehicle speed sensor (Except for MT-STi model)
B18	4	★	A-2		Front oxygen (A/F) sensor
B19	4	★	B-3		Rear oxygen sensor
B20	10	★	B-2	E1	Engine wiring harness
B21	20	Black	B-4	E2	Engine wiring harness
B22	16	Brown	B-4	E3	
B127	2	★	B-2		Wastegate control solenoid valve
B128	4	Gray	B-3	T9	Transmission (MT)
B143	3	★	B-5		M/B
B144	6	Black	B-4		
B145	1	★	B-4		
B146	2	Green	B-4		Front washer motor
B147	2	★	B-4		Rear washer motor
B148	2	★	B-5		Side turn signal light LH
B186	4	Black	B-4		M/B
B255	4	★	C-4	F96	Front wiring harness (With ABS)
B279	2	★	B-2		Exhaust gas temperature sensor

★: Non-colored

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB18	2	Yellow	D-4		Front sub sensor LH

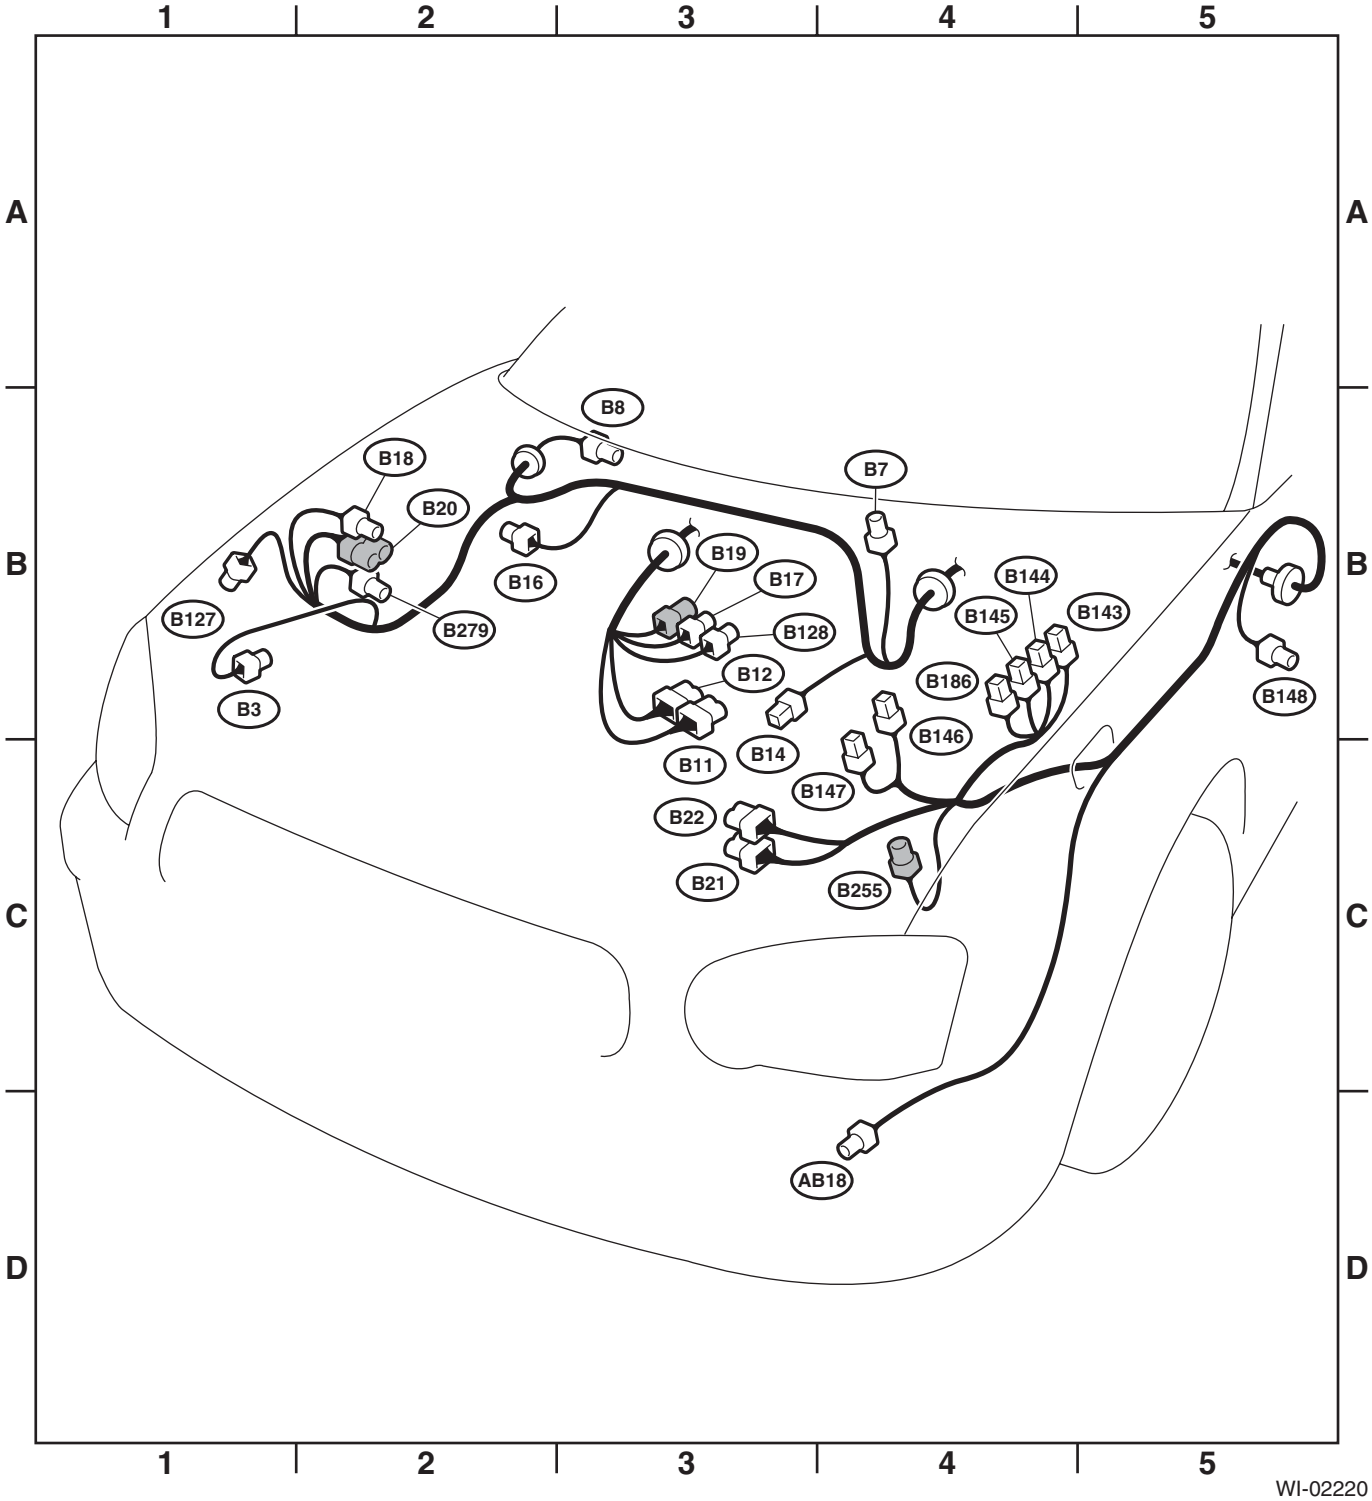

48. Bulkhead Wiring Harness (In Compartment)

A: LOCATION

1. LHD MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	D-1	D1	Front door cord LH
B31	6	Yellow	D-1	AB1	SRS (Airbag) harness
B32	3	Black	B-2		Turn & hazard module
B36	24	Brown	B-3	i1	Instrument panel wiring harness
B37	24	★	B-3	i2	
B40	16	Black	C-2		Data link connector
B41	2	★	D-1		Power window circuit breaker
B44	10	★	D-1		Seat belt warning module
B46	4	Green	B-5		Fuel pump relay
B47	6	Brown	B-5		Main relay
B50	4	★	C-1		Blower fan motor relay
B51	8	Blue	C-1		F/B
B52	7	★	D-1		
B53	12	Black	A-2		Shield joint connector (AT)
B54	24	★	A-3		Transmission control module
B55	24	Gray	A-3		
B56	24	Green	A-2		
B61	8	★	B-1	F44	Front wiring harness
B62	24	★	B-1	F45	
B64	2	Black	B-2		Stop light switch
B68	5	Black	C-3		Steering roll connector
B69	4	★	B-3		Combination switch
B70	18	★	B-3		
B71	17	★	C-3		
B72	4	Blue	C-3		Ignition switch
B74	2	Black	C-3		Key warning switch
B75	2	Green	C-2		Test mode connector
B76	2	Green	C-2		
B77	3	★	B-4		Mode actuator
B79	14	Gray	C-2		Check connector
B81	1×2	★	C-2		Diagnosis terminal (Ground)
B82	6	Black	C-2		Diagnosis connector
B83	6	★	C-4		Shield & sensor ground joint connector (E/G) (With OBD)
	8	★	C-4		Shield & sensor ground joint connector (E/G) (Without OBD)

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B84	31	★	B-4		Engine control module
B85	2	★	B-3		Diode (Rear fog light)
B87	2	★	B-5		Blower fan motor
B90	4	★	A-5	R50	Roof cord
B91	6	Black	B-4		FRESH/RECIRC actuator
B100	24	Black	B-1	F2	Front wiring harness
B101	25	★	B-4	D11	Front door cord RH
B108	2	★	B-1	F46	Front wiring harness
B116	6	★	D-4		Select lever illumination light
B119	4	★	C-4		Front accessory power supply socket
B120	14	★	B-4		Radio
B121		★	B-4		Audio ground
B125	1	Green	B-5	B126	Line end connector
	1	Black	C-2	B126	Read memory connector
B126	1	Green	B-5	B125	Line end connector
	1	Black	C-2	B125	Read memory connector
B129	2	Black	B-3		Kick down switch (AT)
B131	4	★	C-1		Rear fog light relay
B132	8	★	C-2		Head light beam leveler switch
B133	6	★	D-5		AT power mode & hold mode switch
B134	22	★	C-5		Engine control module (Turbo model)
	35	★	C-5		Engine control module (Non-turbo model)
B135	28	★	C-4		Engine control module (Turbo model)
	28	★	C-4		Engine control module (Non-turbo model)
B136	17	★	B-4		Engine control module (Turbo model)
	26	★	B-4		Engine control module (Non-turbo model)
	30	★	B-4		Engine control module (Non-turbo model)
B137	20	★	B-4		Engine control module (Non-turbo model)
	24	★	B-4		Engine control module (Turbo model)
B141	12	★	B-2		Immobilizer control module
B152	12	★	C-1		F/B
B158	10	Gray	D-1		F/B
B160	6	Gray	C-1		Front fog light switch
B176	18	★	C-4		Keyless entry control module

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B183	1	★	D-1	B184	Joint connector
B184	1	★	C-1	B183	
B195	6	★	C-1		Rear fog light switch
B198	5	★	C-5	GB-9	Ground joint connector
B200	16	Blue	B-1	F74	Front wiring harness
B208	2	Black	B-5		Glove box light
B224	2	★	C-3		Ignition switch illumination light
B225	8	Black	C-2		Fuse (Relay block)
	5	Black	C-2		Power window relay (Relay block)
	5	Black	C-2		Front fog light relay (Relay block)
	5	Black	C-2		Ignition relay (Relay block)
	5	Black	C-2		Mirror heater relay (Relay block)
	5	Black	C-2		Seat heater relay (Relay block)
B256	2	★	B-3		Evaporator sensor
B257	3	★	D-5		ABS lateral G sensor (STi model)
B261	6	★	D-5		Joint connector (ABS STi model)
B264	4	Red	C-1		ABS relay
B271	12	Blue	C-1		F/B
B275	4	★	B-4		Fan control amp.
B282	16	Gray	C-4		Auto A/C control module
B283	20	Gray	C-4		
B284	10	★	D-5		Remote control rear-view mirror switch
B286	4	★	B-5		Intercooler water spray timer
B292	3	★	D-5		ABS G sensor
B293	3	★	B-4		Air mix actuator (Auto A/C)
B294	6	★	C-2		Intercooler water spray switch
B296	4	★	B-2		Rear defogger timer
B300	6	★	C-2		Line end check connector
B304	2	Black	A-5		ABS condenser
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB1	6	Yellow	D-1	B31	Bulkhead wiring harness
AB3	28	Yellow	C-4		Airbag control module
AB4	2	Yellow	B-4		Inflator (Passenger's seat)
AB21	2	Yellow	C-3	AB26	Inflator (Driver's seat)

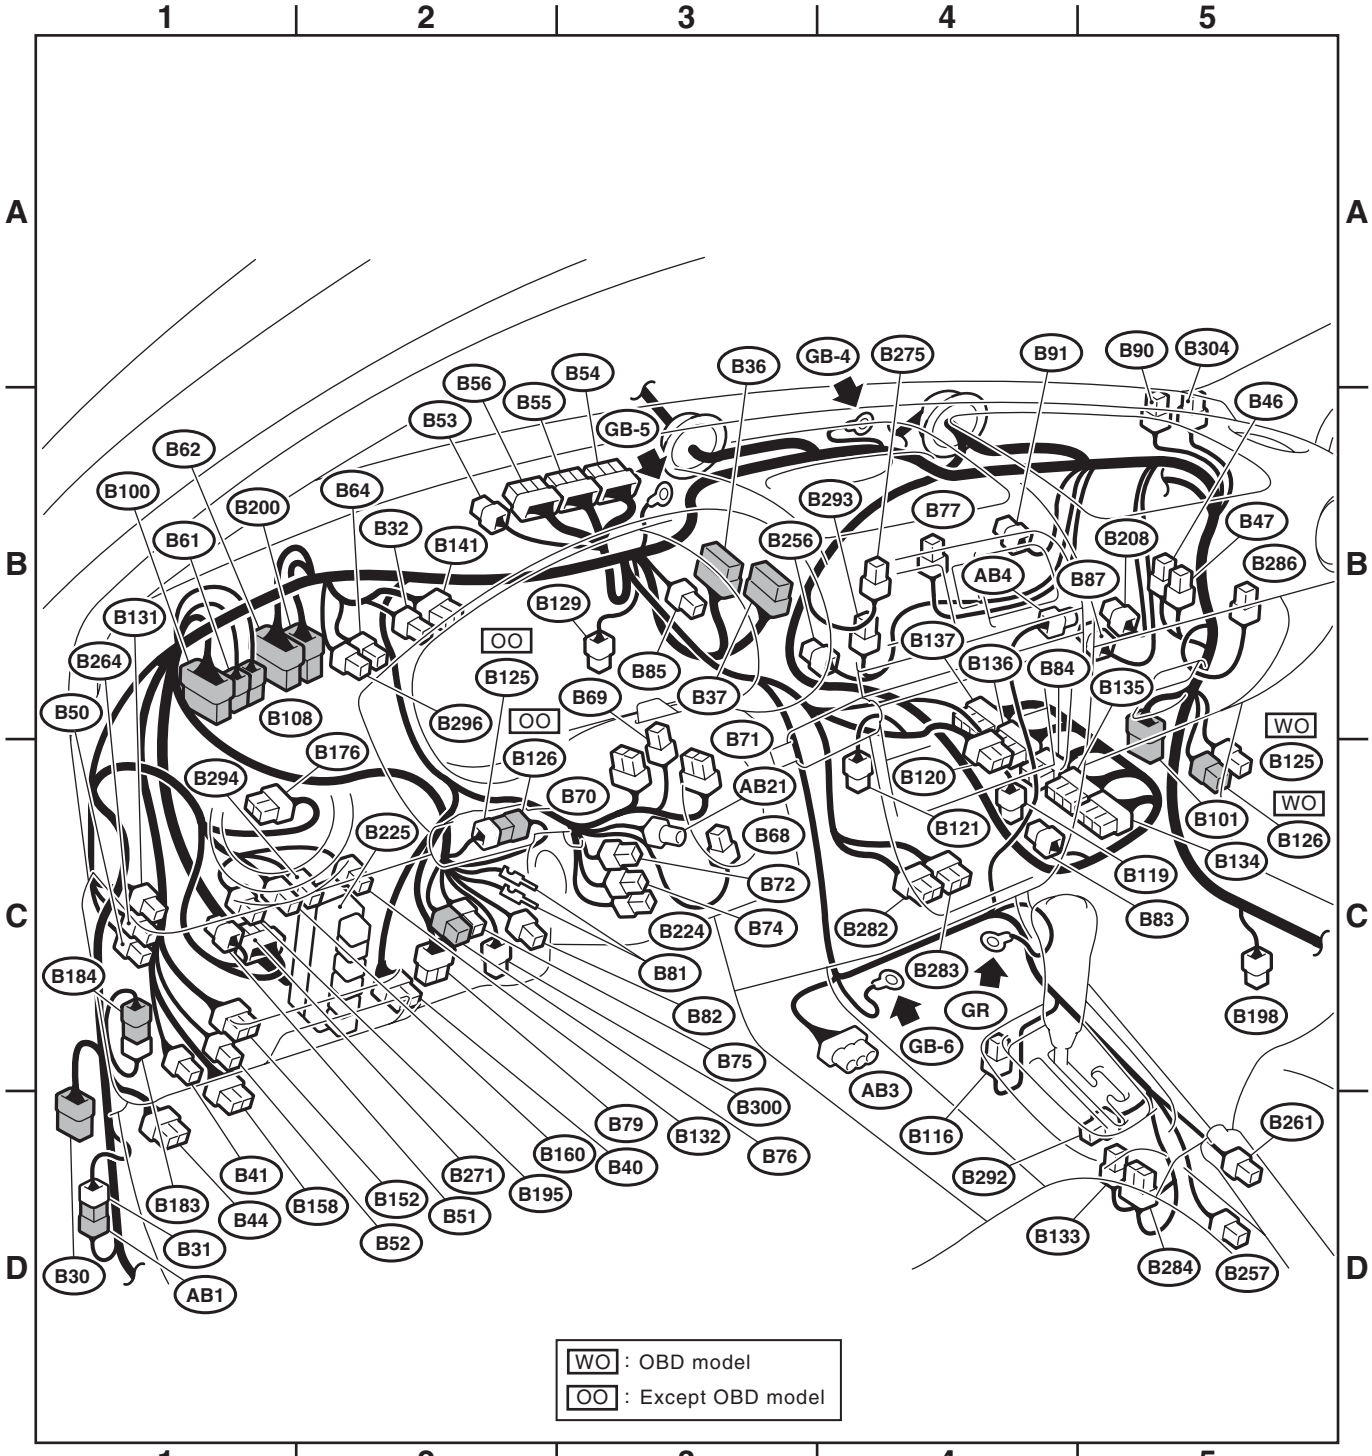

WI-02221

2. RHD MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	D-5	D1	Front door cord RH
B31	6	Yellow	D-5	AB1	SRS (Airbag) harness
B32	3	Black	B-4		Turn & hazard module
B37	32	★	B-3	i2	Instrument panel wiring harness
B38	10	Black	B-3	i3	Instrument panel wiring harness (Except for MT-STi model)
	22	Black	B-3	i3	Instrument panel wiring harness (AT and MT-STi model)
B40	16	Black	C-4		Data link connector
B41	2	★	D-5		Power window circuit breaker
B43	6	Black	C-2		Illumination control module
B44	10	★	D-5		Seatbelt warning module
B46	4	Green	B-1		Fuel pump relay
B47	6	★	B-1		Main relay
B50	4	★	C-5		Blower fan motor relay
B51	8	Blue	C-5		F/B
B52	7	★	D-5		
B53	12	Black	A-4		Shield joint connector (AT)
B54	24	★	A-3		Transmission control module
B55	24	Gray	A-3		
B56	24	Green	A-4		
B61	8	Black	B-5	F44	Front wiring harness
B62	18	★	B-5	F45	
B64	2	Black	C-4		Stop light switch
B65	4	Black	C-4		Stop&brake switch (With cruise control)
B68	5	Black	C-3		Cruise control sub switch
B69	4	★	B-3		Combination switch
B70	18	★	C-3		
B71	17	★	B-3		
B72	4	Blue	C-3		Ignition switch
B74	2	Black	C-3		Key warning switch
B75	2	Green	C-4	B76	Test mode connector
B76	2	Green	C-4	B75	
B77	3	★	B-2		Mode actuator
B79	14	Gray	C-4		Check connector
B81	1×2	★	C-4		Diagnosis terminal (Ground)
B82	6	Black	C-4		Diagnosis connector
B83	4	★	C-2		Shield & sensor ground joint connector (E/G) (Non-turbo model)
	6	Gray	C-2		Shield & sensor ground joint connector (E/G) (Turbo model)
B84	31	★	B-2		Engine control module
B85	2	Black	B-4		Diode (Lighting)
B87	2	★	B-1		Blower fan motor
B90	4	★	B-5	R50	Roof cord
B91	6	Black	B-2		FRESH/RECIRC actuator
B93	20	★	B-1		Security control module
B94	20	Black	D-5		Cruise control module
B101	25	★	B-1	D11	Front door cord LH
B107	2	★	A-3		Clutch switch (Cruise control)
B116	6	★	D-2		Select lever illumination light (AT)
B119	4	★	C-2		Front accessory power supply socket
B120	14	★	B-2		Radio
B121	1	★	B-2		Audio ground
B122	4	★	C-2		Shield & sensor ground joint connector (E/G) (Non-turbo model without immobilizer)
B125	1	Green	B-1	B126	Line end connector
	1	Black	C-4	B126	Read memory connector
B126	1	Green	B-1	B125	Line end connector
	1	Black	C-4	B125	Read memory connector
B129	2	Black	B-5		Kick down switch (AT)
B131	4	Blue	C-5		Rear fog light relay
B132	8	★	C-4		Head light beam leveler switch
B133	6	Blue	D-1		AT power mode & hold mode switch
B134	22	★	C-1		Engine control module (Turbo model)
	35	★	C-1		Engine control module (Non-turbo model)
B135	28	★	C-2		Engine control module (Turbo model)
	28	★	C-2		Engine control module (Non-turbo model)

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B136	17	★	B-2		Engine control module (Turbo model)
	26	★	B-2		Engine control module (Non-turbo with OBD model)
	30	★	B-2		Engine control module (Non-turbo without OBD model)
B137	20	★	B-2		Engine control module (Non-turbo model)
	24	★	B-2		Engine control module (Turbo model)
B141	12	★	B-3		Immobilizer control module
B152	12	★	C-5		F/B
B158	10	Gray	D-5		F/B
B159	9	Brown	C-5		F/B
B160	6	Gray	C-5		Front fog light switch
B161	6	Brown	C-4		Cruise control main switch
B176	18	★	C-5		Keyless entry control module
B183	1	★	D-5	B184	Joint connector
B184	1	★	C-5	B183	
B195	6	★	C-5		Rear fog light switch
B196	2	Black	B-4		Diode (Rear fog light - Except for Australia)
	3	Black	B-4		Diode (Rear fog light - For Australia)
B198	1	★	A-3	B199	Joint connection (Ground)
B199	1	★	B-3	B198	
B200	22	Black	B-5	F74	Front wiring harness
B208	2	★	B-1		Glove box light
B224	2	★	C-3		Ignition switch illumination light
B225	8	Black	C-4		Fuse (Relay block)
	5	Black	C-4		Power window relay (Relay block)
	5	Black	C-4		Front fog light relay (Relay block)
	5	Black	C-4		Ignition relay (Relay block)
	5	Black	C-4		Mirror heater relay (Relay block)
	5	Black	C-4		Seat heater relay (Relay block)
B237	6	Black	D-2		Sports shift switch
B256	2	★	B-2		Evaporator sensor
B257	3	Black	D-1		ABS lateral G sensor

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B259	2	★	C-1	B260	Oxygen sensor joint connector (Turbo model)
B260	2	★	C-1	B259	
B261	6	★	B-5		Joint connector (ABS-STi model)
B264	4	Pink	C-5		ABS relay
B271	12	Blue	C-5		F/B
B275	4	★	B-2		Fan control amp
B282	16	Gray	C-2		Auto A/C control module
B283	20	Gray	C-2		
B284	10	★	D-1		Remote control rear-view mirror switch
B286	4	★	B-1		Intercooler water spray timer
B292	3	Black	D-2		ABS G sensor
B293	3	★	B-2		Air mix actuator (Auto A/C)
B294	6	★	C-5		Intercooler water spray switch
B296	4	★	B-4		Rear defogger timer
B300	6	★	C-4		Line end check connector
B323	4	Blue	B-5		Security relay
B324	16	Gray	B-4		Double lock control module
B325	20	Gray	B-4		

★: Non-colored

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB1	6	Yellow	D-5	B31	Bulkhead wiring harness
AB3	28	Yellow	C-1		Airbag control module
AB4	2	Yellow	B-2		Inflator (Passenger's seat)
AB21	2	Yellow	C-3	AB26	Inflator (Driver's seat)

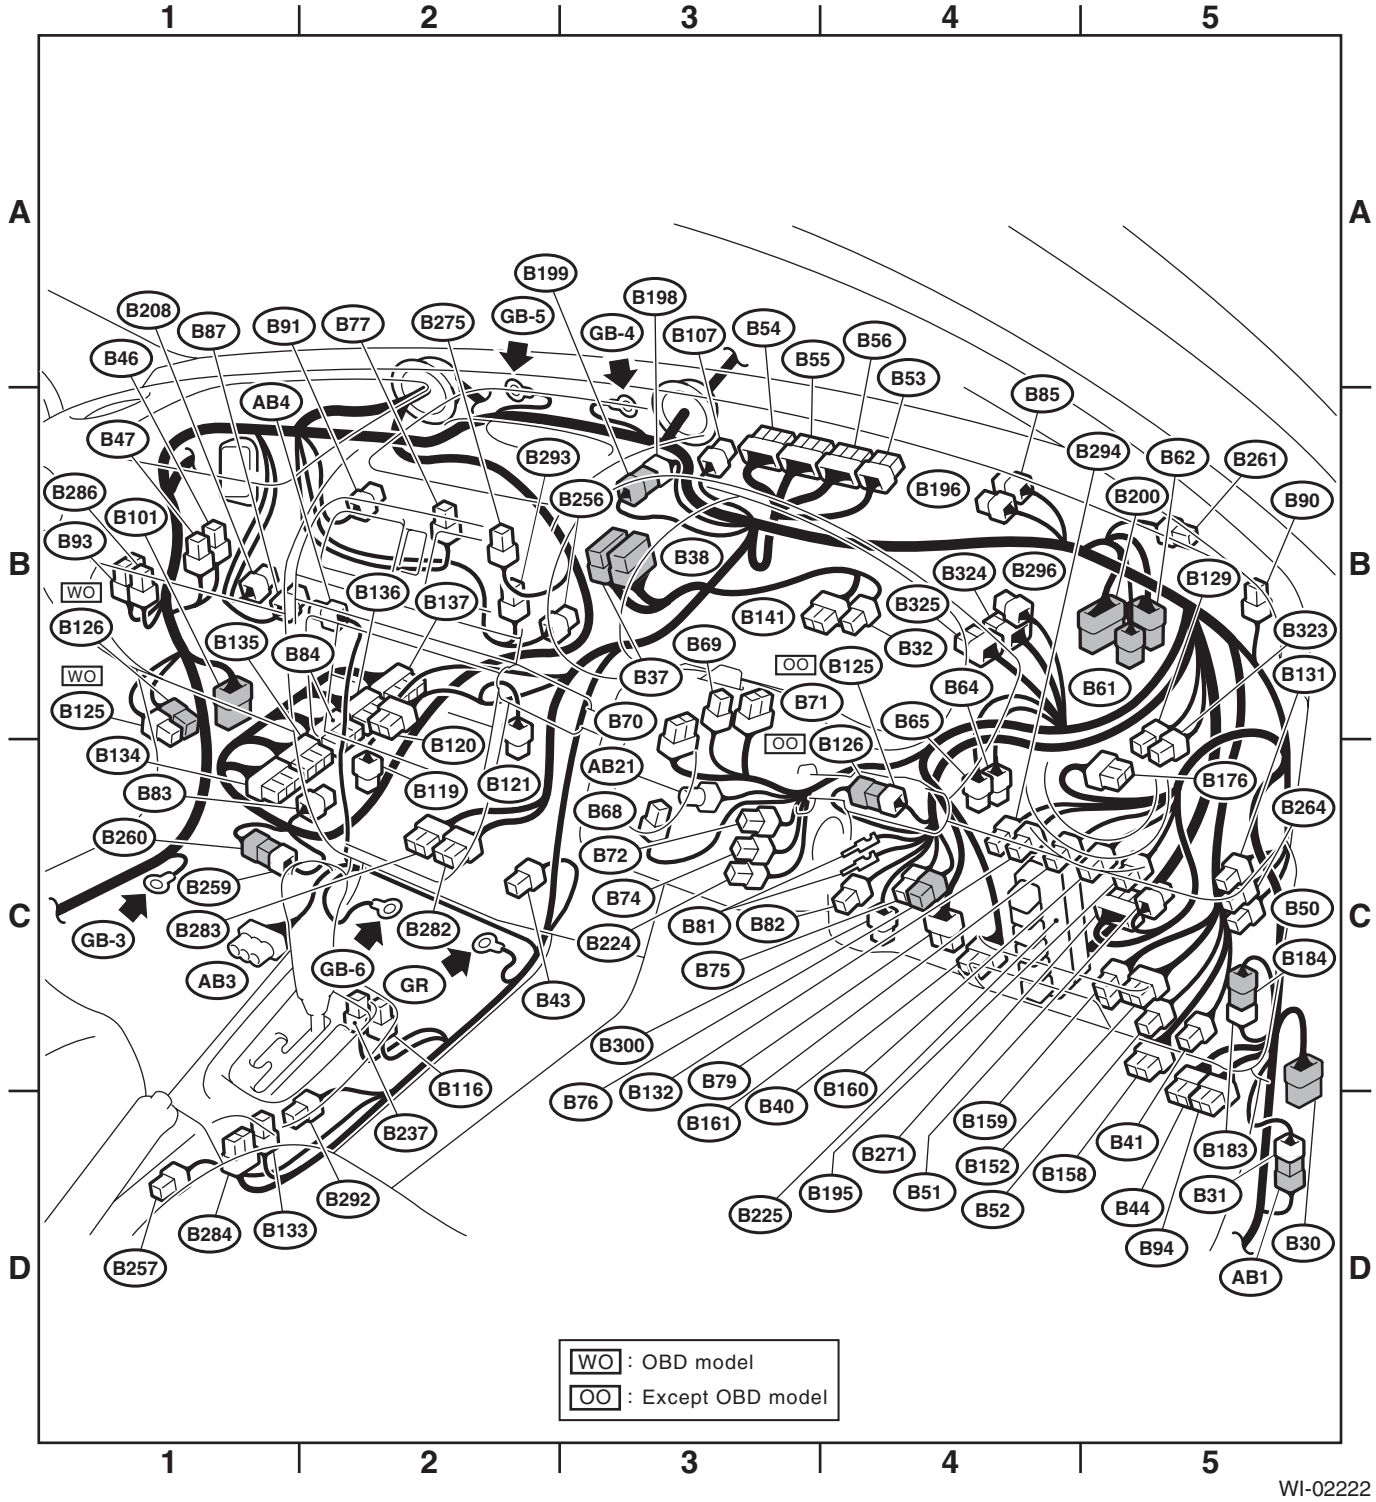

WI-02222

49.Engine Wiring Harness and Transmission Cord

A: LOCATION

1. SOHC W/O OBD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E2	20	Light gray	A-4	B21	Bulkhead wiring harness
E3	16	Brown	A-4	B22	Bulkhead wiring harness
E4	2	Blue	A-3		Purge control solenoid valve
E5	2	Light gray	A-2		Fuel injector No.1
E6	2	Light gray	A-2		Fuel injector No.3
E7	6	Black	A-2		Idle air control solenoid valve
E8	3	Light gray	A-3		Engine coolant temperature sensor and thermometer
E10	2	Light gray	B-3		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E12	4	Gray	B-2		Ignition coil and ignitor (1.6 L model)
		Dark gray	B-2		Ignition coil and ignitor (Except 1.6 L model)
E13	4	Dark brown	A-3		Throttle position sensor
E14	2	★	A-3		Knock sensor
E15	2	Black	B-4		Camshaft position sensor
E16	2	Light gray	B-4		Fuel injector No.2
E17	2	Light gray	B-4		Fuel injector No.4
E19	1	★	B-2		Power steering oil pressure switch
E20	4	Black	A-3		Pressure sensor and intake air temperature sensor
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray	D-2	B24	Bulkhead wiring harness (MT)
T2	2	Brown	D-2	B25	Bulkhead wiring harness (MT)
T3	12	★	D-4	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-4	B11	Bulkhead wiring harness (AT)
T8	2	★	D-2	B29	Bulkhead wiring harness (MT)
★: Non-colored					

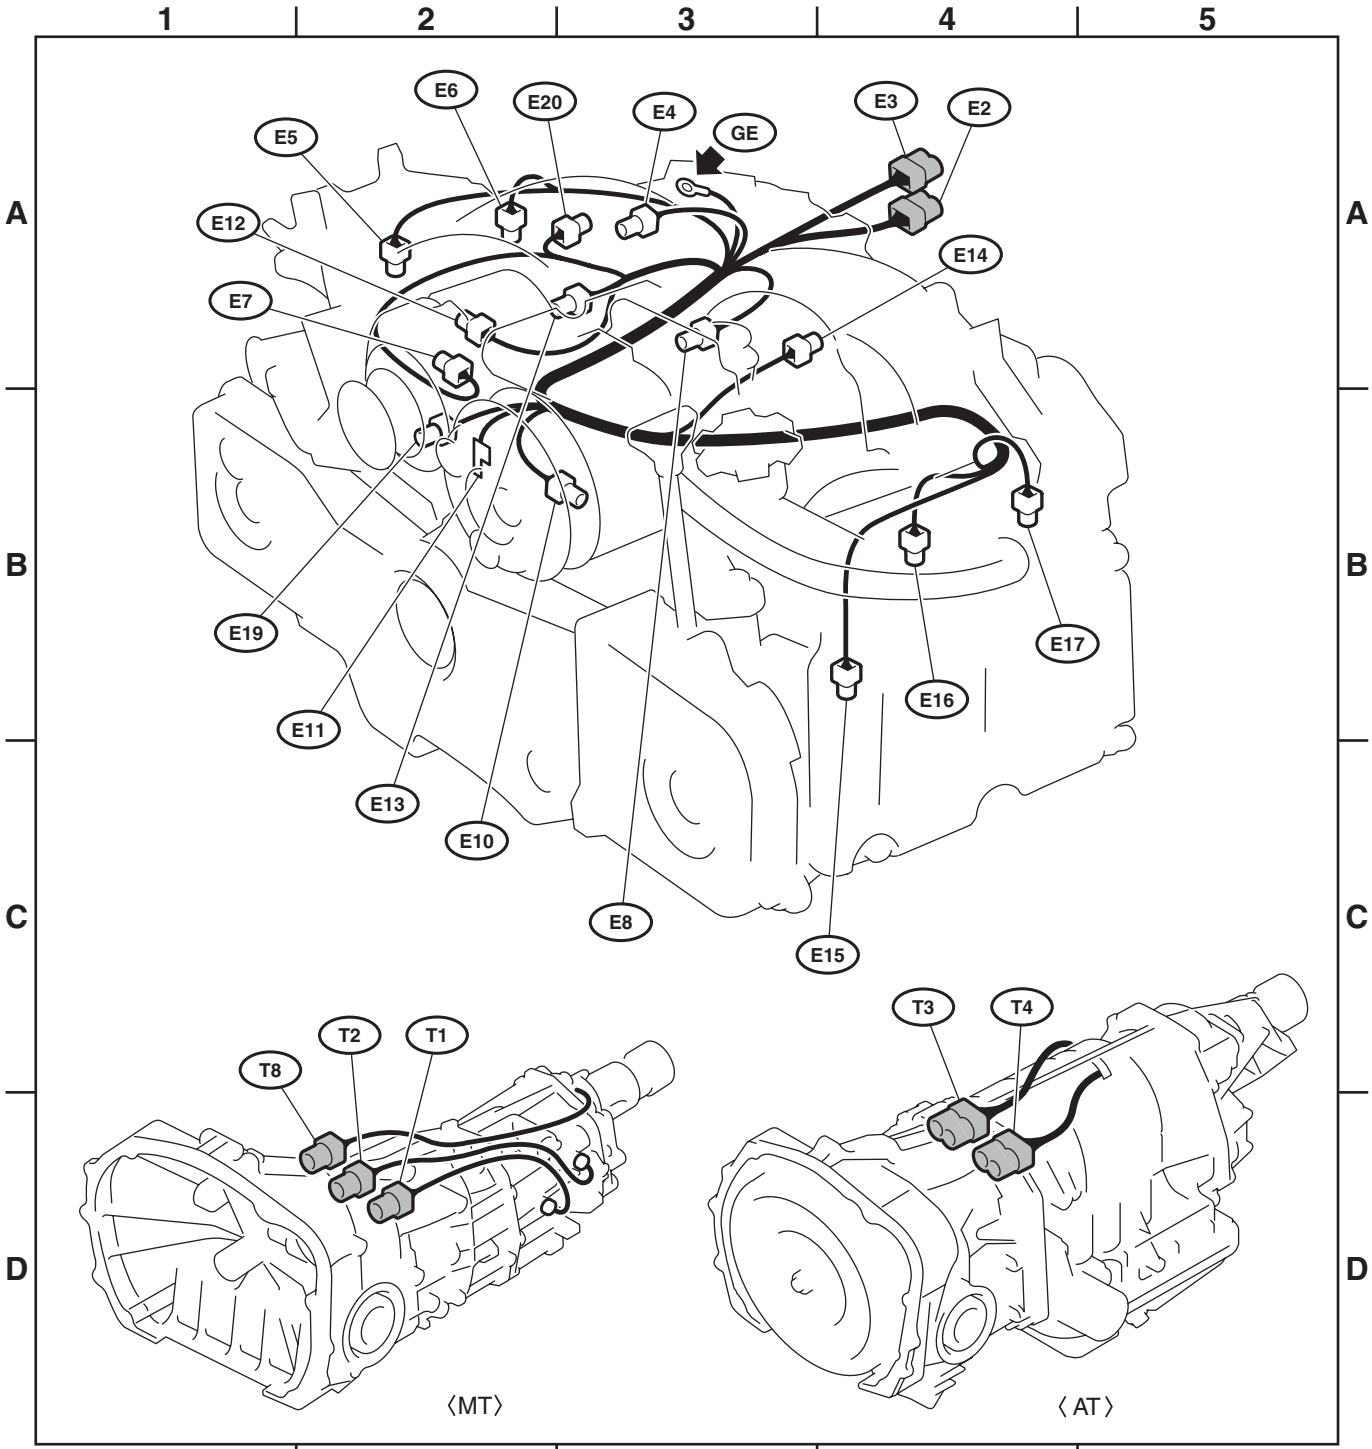
1
2
3
4
5
A
B
C
D
E6
E20
E4
GE
E3
E2
E5
E12
E14
E7
E19
E17
E16
E11
E13
E10
E8
E15
T8
T2
T1
T3
T4
〈MT〉
〈AT〉
WI-02223

2. SOHC MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E2	20	Light gray	A-4	B21	Bulkhead wiring harness
E3	16	Brown	A-4	B22	Bulkhead wiring harness
E4	2	Black	A-3		Purge control solenoid valve
E5	2	Light gray	A-2		Fuel injector No.1
E6	2	Light gray	A-2		Fuel injector No.3
E7	6	Black	A-2		Idle air control solenoid valve
E8	3	Light gray	A-3		Engine coolant temperature sensor and thermometer
E10	2	Light gray	B-3		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E12	4	Gray	A-2		Ignition coil and ignitor (1.6 L model)
		Dark gray	A-2		Ignition coil and ignitor (Except 1.6 L model)
E13	4	Dark brown	A-2		Throttle position sensor
E14	2	Light gray	A-4		Knock sensor
E15	2	Black	B-4		Camshaft position sensor
E16	2	Light gray	B-4		Fuel injector No.2
E17	2	Light gray	B-4		Fuel injector No.4
E18	6	Dark gray	A-4		Exhaust gas recirculation solenoid valve
E19	1	★	B-2		Power steering oil pressure switch
E20	2	Black	A-3		Intake air temperature sensor
E21	3	Light gray	A-3		Pressure sensor
E42	2	Purple	B-3		Air assist injector solenoid valve
E58	6	Black	A-4	B328	Bulkhead wiring harness
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray	D-2	B24	Bulkhead wiring harness (MT)
T2	2	Brown	D-2	B25	Bulkhead wiring harness (MT)
T3	12	★	D-4	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-4	B11	Bulkhead wiring harness (AT)
T8	2	★	D-2	B29	Bulkhead wiring harness (MT)
★: Non-colored					

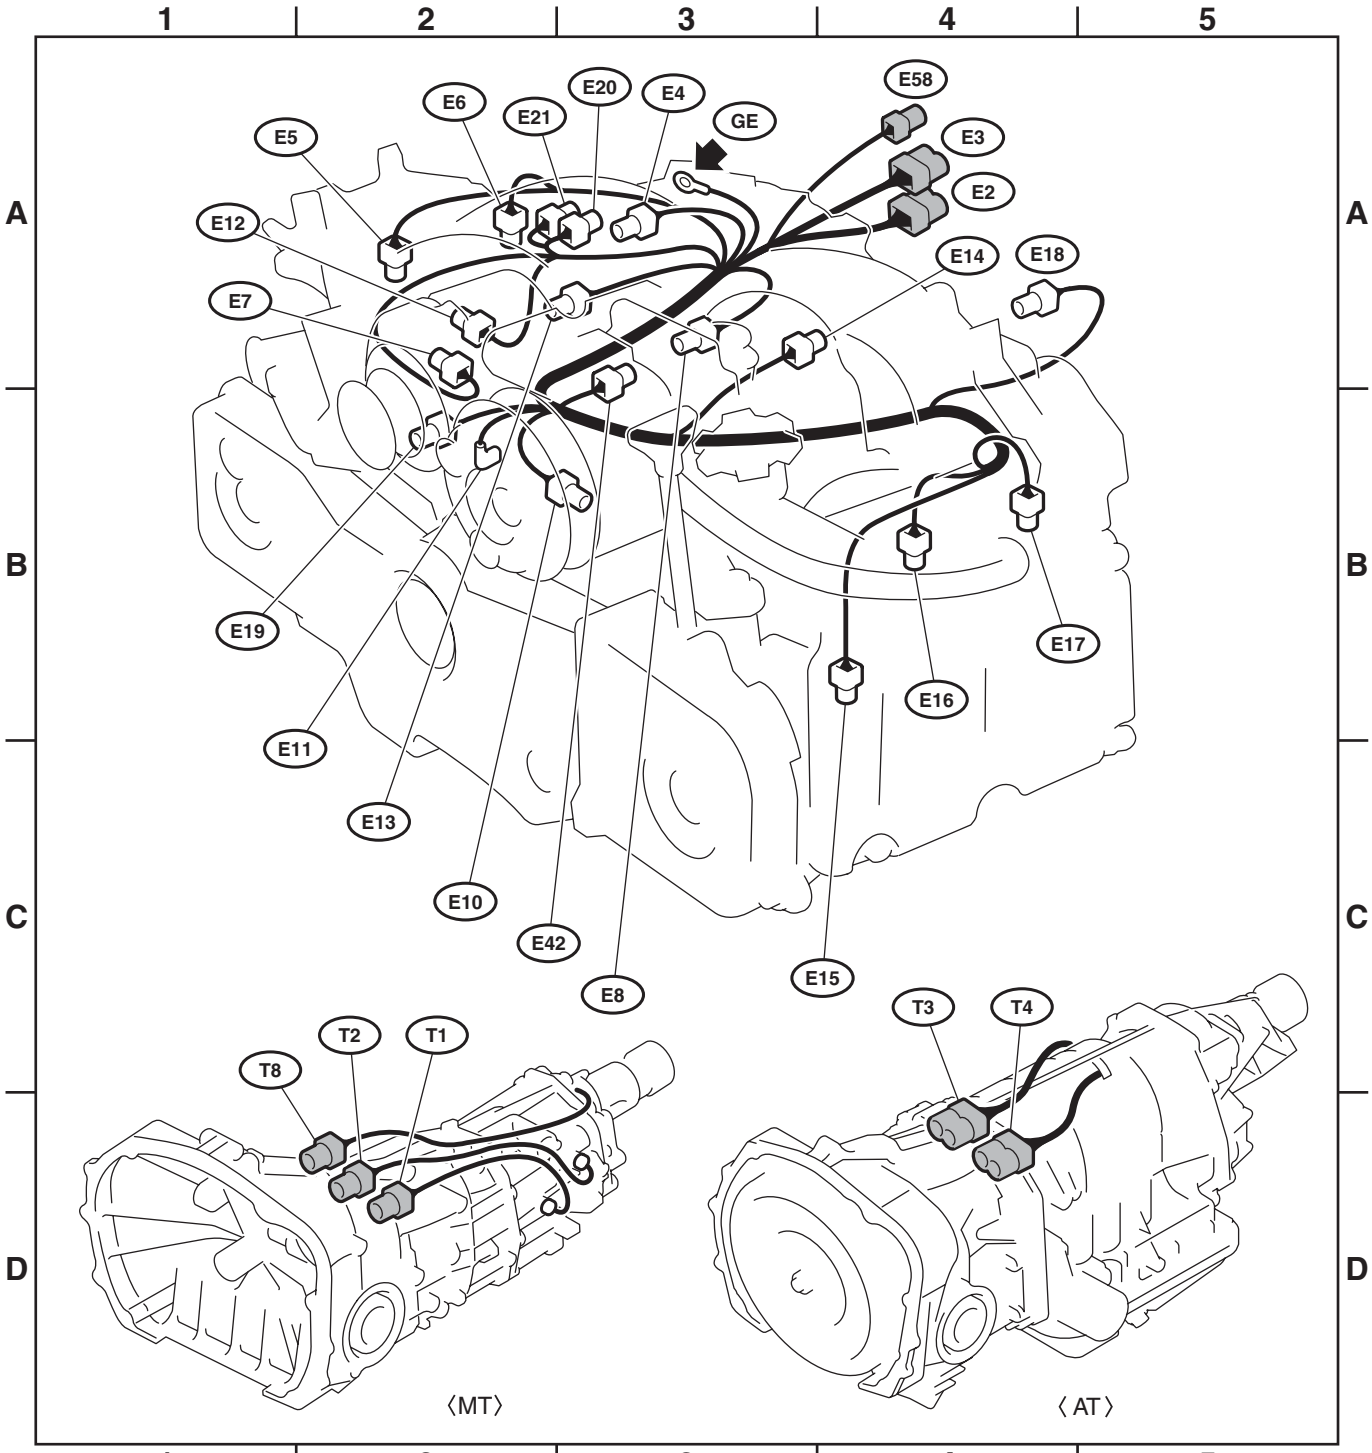
1
2
3
4
5
A
B
C
D
E58
E6
E21
E20
E4
GE
E5
E3
E2
E12
E14
E18
E7
E19
E17
E16
E11
E13
E10
E42
E8
E15
T3
T4
T2
T1
T8
〈MT〉
〈AT〉

WI-02224

3. DOHC TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E1	10	Light gray	A-2	B20	Bulkhead wiring harness
E2	20	Black	B-4	F61	Front wiring harness (LHD model)
				B21	Bulkhead wiring harness (RHD model)
E3	16	Brown	B-4	F60	Front wiring harness (LHD model)
				B22	Bulkhead wiring harness (RHD model)
E4	2	Black	B-3		Purge control solenoid valve
E5	2	Dark gray	A-2		Fuel injector No.1
E6	2	Dark gray	A-2		Fuel injector No.3
E7	3	Light gray	A-3		Idle air control solenoid valve
E8	3	Light gray	B-3		Engine coolant temperature sensor and thermometer
E10	2	Light gray	B-2		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E13	3	Black	A-3		Throttle position sensor
E14	2	Brown	A-4		Knock sensor (STi model and except for Australia STi-model)
	2	Light gray	A-4		Knock sensor (Except for STi model - except for Australia)
E15	2	Light gray	B-4		Camshaft position sensor
E16	2	Dark gray	B-4		Fuel injector No.2
E17	2	Dark gray	B-4		Fuel injector No.4
E19	1	Light gray	B-2		Power steering oil pressure switch
E21	3	Black	A-3		Pressure sensor
E31	3	★	B-2		Ignition coil No.1
E32	3	★	B-4		Ignition coil No.2
E33	3	Black	A-3		Ignition coil No.3
E34	3	Black	B-4		Ignition coil No.4
E35	2	★	A-4		Active valve control camshaft position sensor LH
E36	2	★	A-3		Active valve control camshaft position sensor RH
E37	2	Blue	B-3		Active valve control solenoid valve LH
E38	2	Blue	A-2		Active valve control solenoid valve RH
E50	3	Black	B-3		Tumble generator valve angle sensor LH
E51	2	Black	A-4		Tumble generator valve LH
E54	3	Black	A-3		Tumble generator valve angle sensor RH
E55	2	Black	A-2		Tumble generator valve RH
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T3	12	★	D-4	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-4	B11	Bulkhead wiring harness (AT)
T9	4	★	D-2	B128	Bulkhead wiring harness (MT)
★: Non-colored					

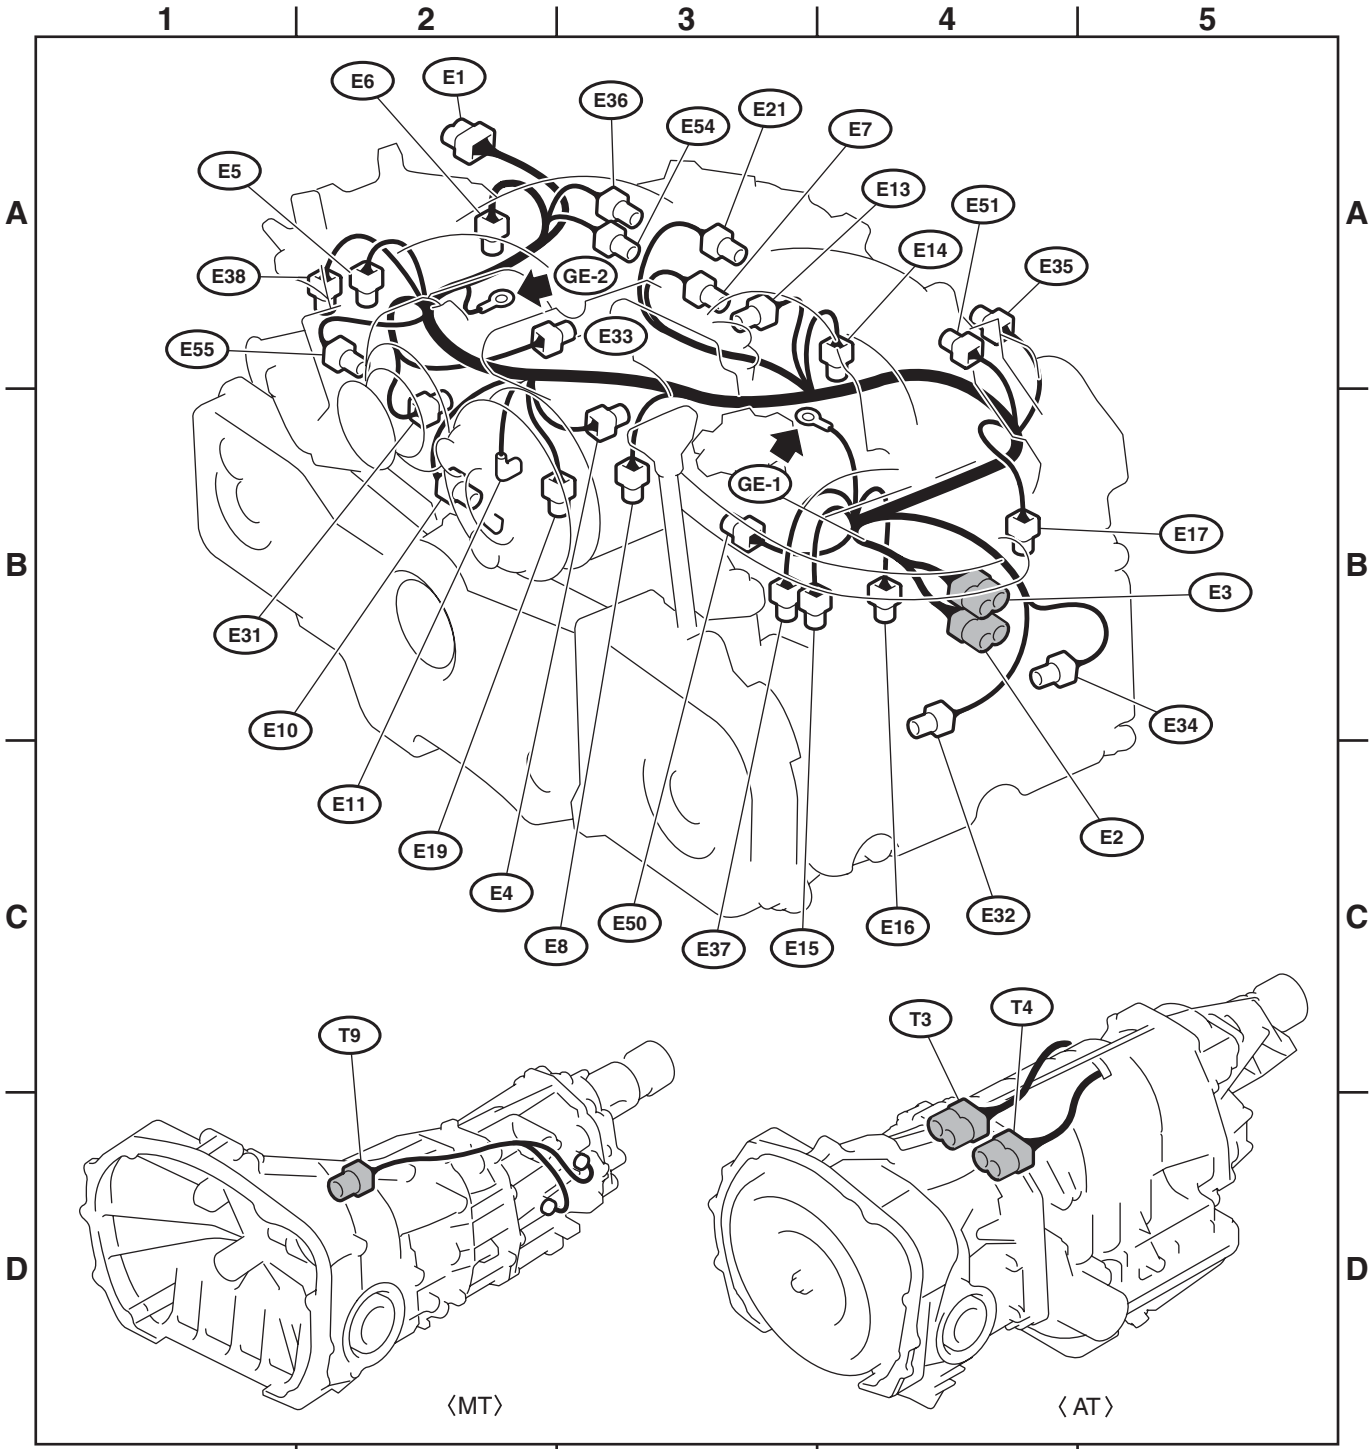
1
2
3
4
5
A
B
C
D
E6
E1
E36
E54
E21
E7
E5
E13
E51
E14
E35
E38
GE-2
E33
E55
GE-1
E17
E3
E31
E10
E34
E11
E2
E19
E4
E50
E8
E37
E15
E16
E32
T9
T3
T4
〈MT〉
〈 AT〉
WI-02225

50.Instrument Panel Wiring Harness

A: LOCATION

1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i1	24	Brown	C-3	B36	Bulkhead wiring harness
i2	24	★	C-3	B37	
i10	30	Green	B-2		Combination meter
i11	10	Green	B-3		
i12	14	Green	B-2		
i22	8	★	B-4		Hazard switch
i51	2	★	B-3		Sunload sensor
i59	4	★	B-3		Clock
★: Non-colored					

INSTRUMENT PANEL WIRING HARNESS

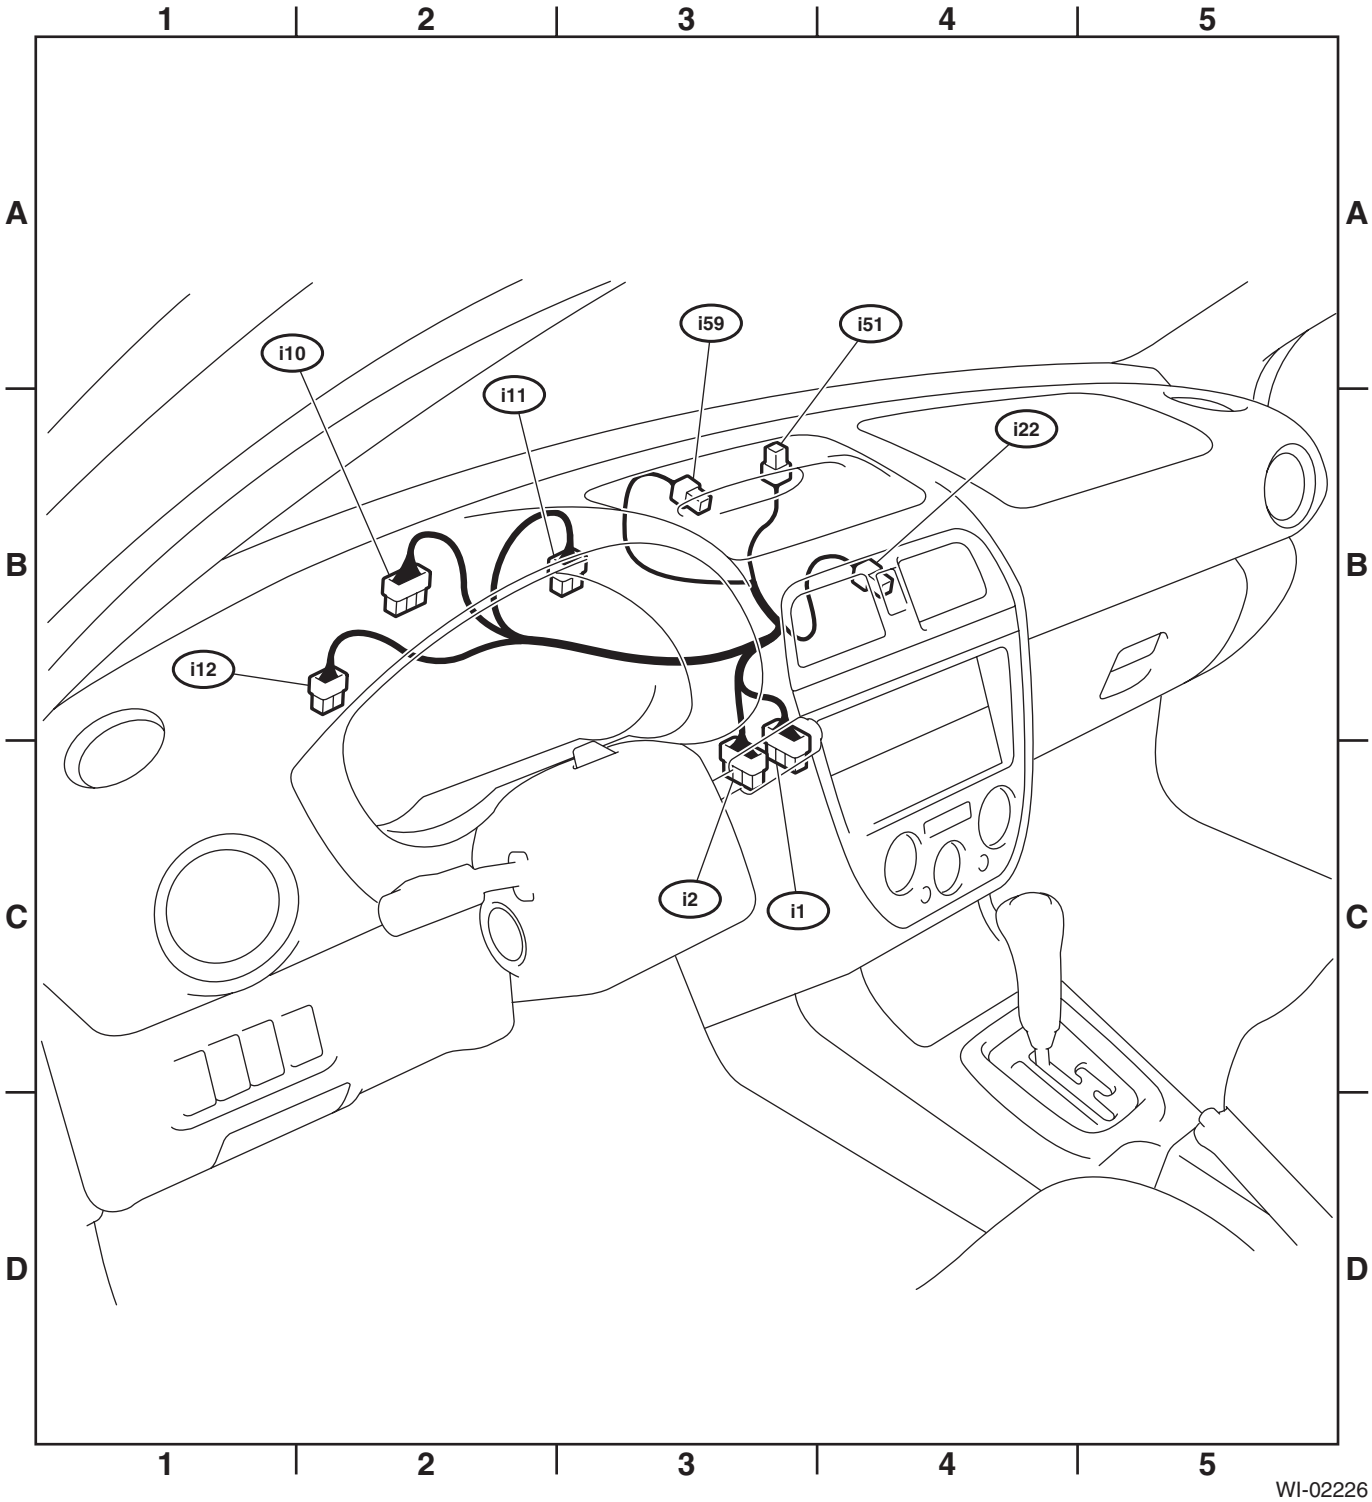

2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i2	32	★	C-3	B37	Bulkhead wiring harness
i3	10	Black	C-3	B38	Bulkhead wiring harness (MT-STi model except for Australia and New Zealand model)
	22	Black	C-3	B38	Bulkhead wiring harness (AT and MT-STi model for Australia and New Zealand model)
i10	30	Green	B-4		Combination meter
i11	10	Green	B-4		
i12	14	Green	B-3		
i22	8	★	B-2		Hazard switch
i51	2	★	B-3		Sunload sensor
i59	4	★	B-3		Clock
★: Non-colored					

INSTRUMENT PANEL WIRING HARNESS

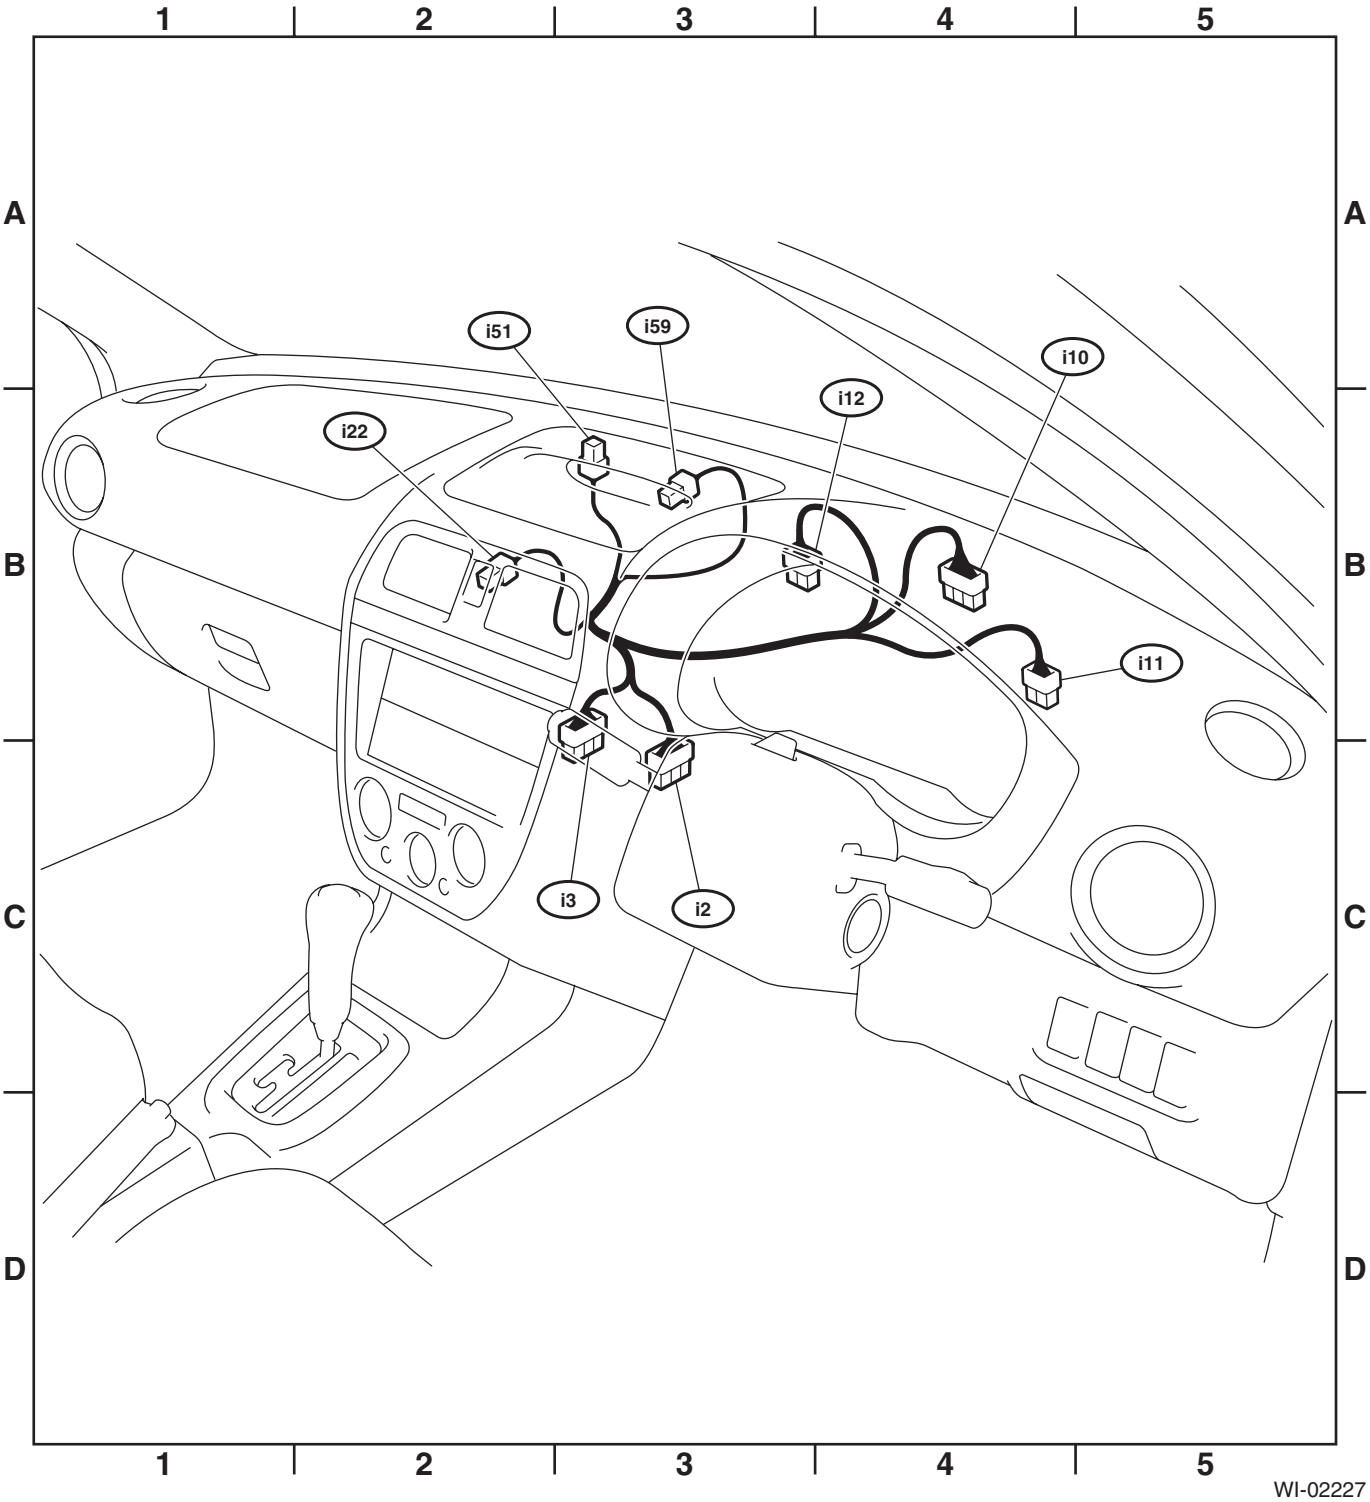

51. Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord

A: LOCATION

1. LHD MODEL

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★	B-2	B97	Bulkhead wiring harness
R3	24	★	B-2	B99	Bulkhead wiring harness
R4	1	Black	B-3		Parking brake switch
R8	2	★	C-4		Seat belt switch
R15	4	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R72	2	★	A-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH
R97	2	★	B-5		Antenna amp. (Sedan model)
★: Non-colored					

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★	B-2	R1	Rear wiring harness
B99	24	★	B-2	R3	Rear wiring harness
B265	4	★	A-2	D27	Rear door cord RH
B266	4	★	A-2	D28	Rear door cord RH
B267	3	★	C-4		Front door switch LH
B268	3	★	A-2		Front door switch RH
B269	4	★	B-5	D21	Rear door cord LH
B270	4	★	B-4	D22	Rear door cord LH
★: Non-colored					

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Sunroof
R56	2	★	A-3		Spot light
★: Non-colored					

• Fuel Tank Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	4	★	B-3	R15	Rear wiring harness
R58	6	★	A-4		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor (Turbo model)
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	B-2		Airbag control module
AB9	2	Yellow	C-4		Seat airbag module LH
AB10	4	Yellow	B-5		Side sensor LH
AB11	2	Yellow	B-2		Seat airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Yellow	C-4		Pretensioner LH
AB20	2	Yellow	B-2		Pretensioner RH

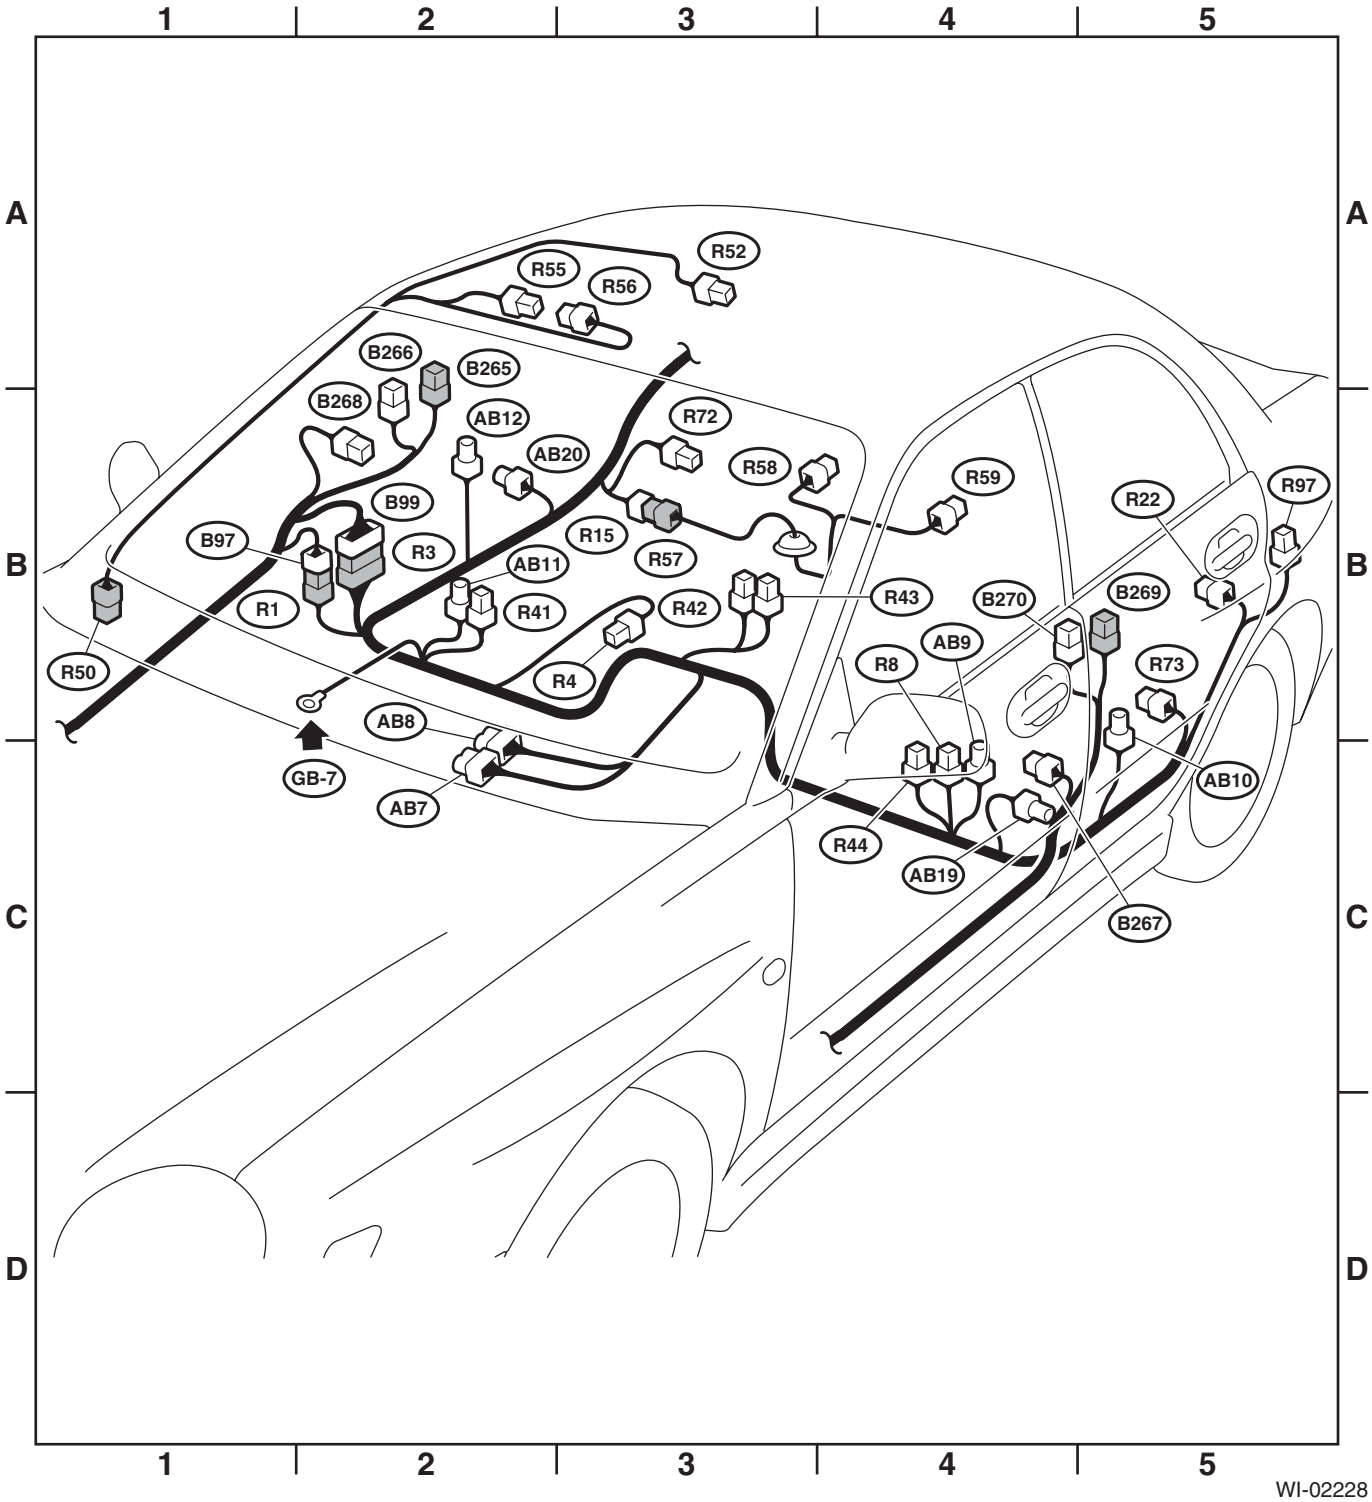
1
2
3
4
5
A
B
C
D
R52
R55
R56
B266
B265
B268
AB12
R72
AB20
R58
R59
R22
R97
B99
B97
R3
R15
R57
AB11
R43
B270
B269
R1
R41
R42
AB9
R8
R73
R50
R4
AB8
GB-7
AB7
AB10
R44
AB19
B267
WI-02228

2. RHD MODEL

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	Black	B-2	B97	Bulkhead wiring harness
R3	32	★	B-2	B99	Bulkhead wiring harness
R4	1	★	B-3		Parking brake switch
R8	2	★	B-2		Seat belt switch
R15	4	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R72	2	★	A-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH
R97	2	★	B-5		Antenna amp. (Sedan model)
★: Non-colored					

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	Black	B-2	R1	Rear wiring harness
B99	32	★	B-2	R3	Rear wiring harness
B265	4	★	A-2	D27	Rear door cord RH
B266	4	★	A-2	D28	Rear door cord RH
B267	3	★	A-2		Front door switch RH
B268	3	★	C-4		Front door switch LH
B269	4	★	B-5	D21	Rear door cord LH
B270	4	★	B-4	D22	Rear door cord LH
★: Non-colored					

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Sunroof
R56	2	★	A-3		Spot light
★: Non-colored					

• Fuel Tank Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	4	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor (Turbo and 2.5 L model)
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	C-2		Airbag control module
AB9	2	Yellow	C-4		Seat airbag module LH
AB10	4	Yellow	C-5		Side sensor LH
AB11	2	Yellow	B-2		Seat airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Yellow	C-4		Pretensioner LH
AB20	2	Yellow	B-2		Pretensioner RH

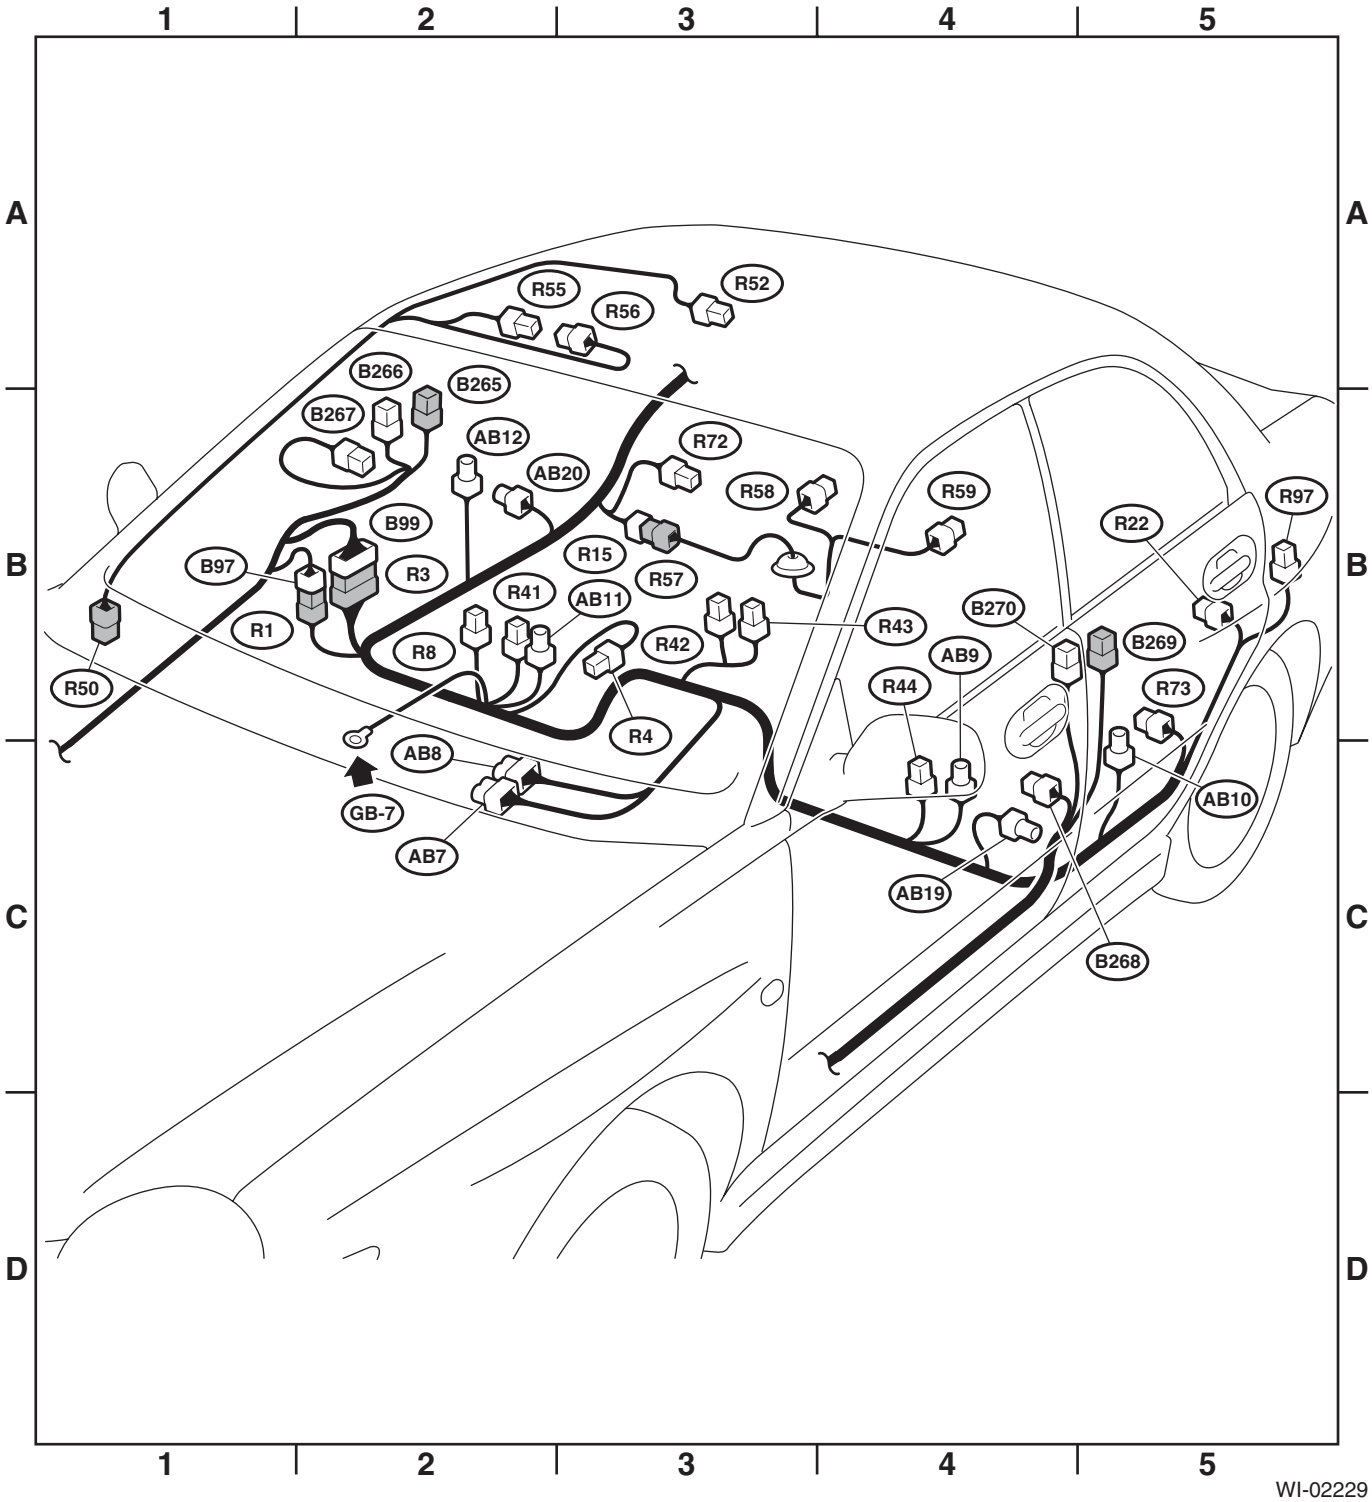
1
2
3
4
5
A
B
C
D
R55
R56
R52
B266
B265
B267
AB12
R72
AB20
R58
R59
R97
R22
B99
B97
R3
R15
R57
R41
AB11
R1
R8
R42
R43
B270
B269
AB9
R44
R73
R50
R4
AB8
GB-7
AB7
AB10
AB19
B268
WI-02229

52.Door Cord

A: LOCATION

1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D1	25	★	C-2	B30	Bulkhead wiring harness
D2	2	★	C-3		Front door speaker (Driver side)
D3	2	Black	C-3		Front power window motor (Driver side)
D4	2	Black	C-3		Front door tweeter (Driver side)
D5	6	★	C-3		Remote control rearview mirror (Without mirror heater)
	8	Black	C-3		Remote control rearview mirror (With mirror heater)
D7	16	★	C-4		Power window main switch
D8	2	Gray	C-4		Front door lock actuator LH (Without keyless entry)
D11	25	★	C-1	B101	Bulkhead wiring harness
D12	2	★	C-1		Front door speaker RH
D13	2	Green	B-2		Front power window motor RH
D14	2	★	B-1		Front door tweeter RH
D15	6	★	B-1		Remote control rearview mirror RH (Without mirror heater)
	8	Black	B-1		Remote control rearview mirror RH (With mirror heater)
D17	6	★	B-2		Front power window sub switch RH
D18	4	★	B-2		Front door lock actuator RH
D21	4	★	C-4	B269	Bulkhead wiring harness
D22	4	★	C-4	B270	Bulkhead wiring harness
D23	2	★	C-5		Rear door speaker LH
D24	2	Black	B-4		Rear power window motor LH
D25	8	★	B-5		Rear power window sub switch LH
D26	4	★	B-5		Rear door lock actuator LH
D27	4	★	B-2	B265	Bulkhead wiring harness
D28	4	★	B-2	B266	Bulkhead wiring harness
D29	2	★	B-2		Rear door speaker RH
D30	2	Black	A-2		Rear power window motor RH
D31	8	★	A-2		Rear power window sub switch RH
D32	4	★	A-3		Rear door lock actuator RH
D72	4	★	C-3		Front door lock actuator LH
★: Non-colored					

DOOR CORD

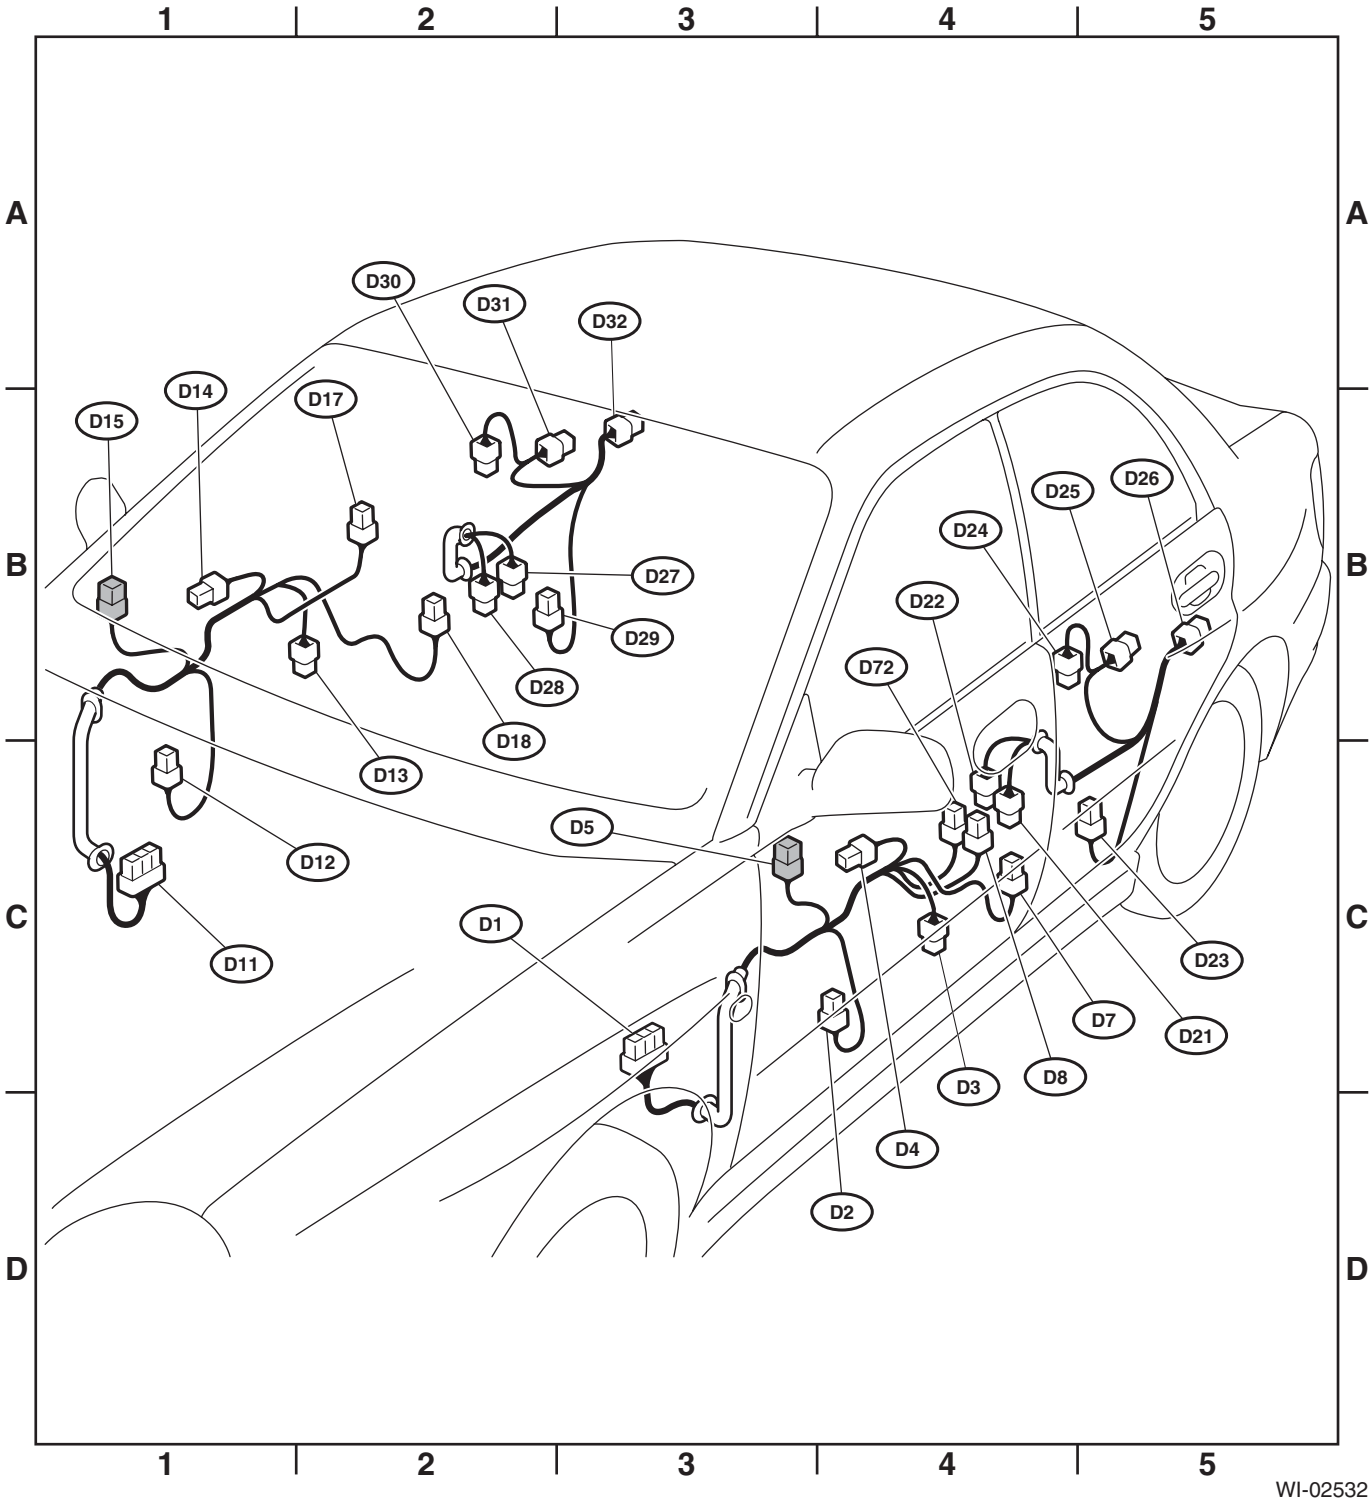
1
2
3
4
5
A
B
C
D
D30
D31
D32
D14
D15
D17
D27
D29
D28
D18
D13
D12
D11
D5
D1
D72
D22
D24
D25
D26
D23
D7
D21
D3
D8
D4
D2
WI-02532

2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D1	25	★	C-1	B30	Bulkhead wiring harness
D2	2	★	C-1		Front door speaker (Driver side)
D3	2	Black	B-2		Front power window motor (Driver side)
D4	2	★	B-1		Front door tweeter (Driver side)
D5	6	★	B-1		Remote control rearview mirror (Without mirror heater)
	8	Black	B-1		Remote control rearview mirror (With mirror heater)
D7	16	★	B-2		Power window main switch
D8	2	Gray	B-2		Front door lock actuator RH (Without keyless entry)
D11	25	★	D-3	B101	Bulkhead wiring harness
D12	2	★	D-4		Front door speaker LH
D13	2	Black	C-4		Front power window motor LH
D14	2	★	C-4		Front door tweeter LH
D15	6	★	C-4		Remote control rearview mirror LH (Without mirror heater)
	8	Black	C-3		Remote control rearview mirror LH (With mirror heater)
D17	8	★	C-4		Front power window sub switch LH
D18	4	★	C-4		Front door lock actuator LH (Without double lock)
	6	Black	C-4		Front door lock actuator LH (With double lock)
D21	4	★	C-4	B269	Bulkhead wiring harness
D22	4	★	C-4	B270	Bulkhead wiring harness
D23	2	★	C-5		Rear door speaker LH
D24	2	Black	B-5		Rear power window motor LH
D25	8	★	B-5		Rear power window sub switch LH
D26	4	★	B-5		Rear door lock actuator LH (Without double lock)
	6	Black	B-5		Rear door lock actuator LH (With double lock)
D27	4	★	B-2	B265	Bulkhead wiring harness
D28	4	★	B-2	B266	Bulkhead wiring harness
D29	2	★	B-3		Rear door speaker RH
D30	2	Black	A-2		Rear power window motor RH
D31	8	★	A-3		Rear power window sub switch RH
D32	4	★	A-3		Rear door lock actuator RH (Without double lock)
	6	Black	A-3		Rear door lock actuator RH (With double lock)
D72	4	★	B-2		Front door lock actuator RH (Without double lock)
	6	Black	B-2		Front door lock actuator RH (With double lock)
D82	3	Brown	B-2		Key cylinder switch
★: Non-colored					

DOOR CORD

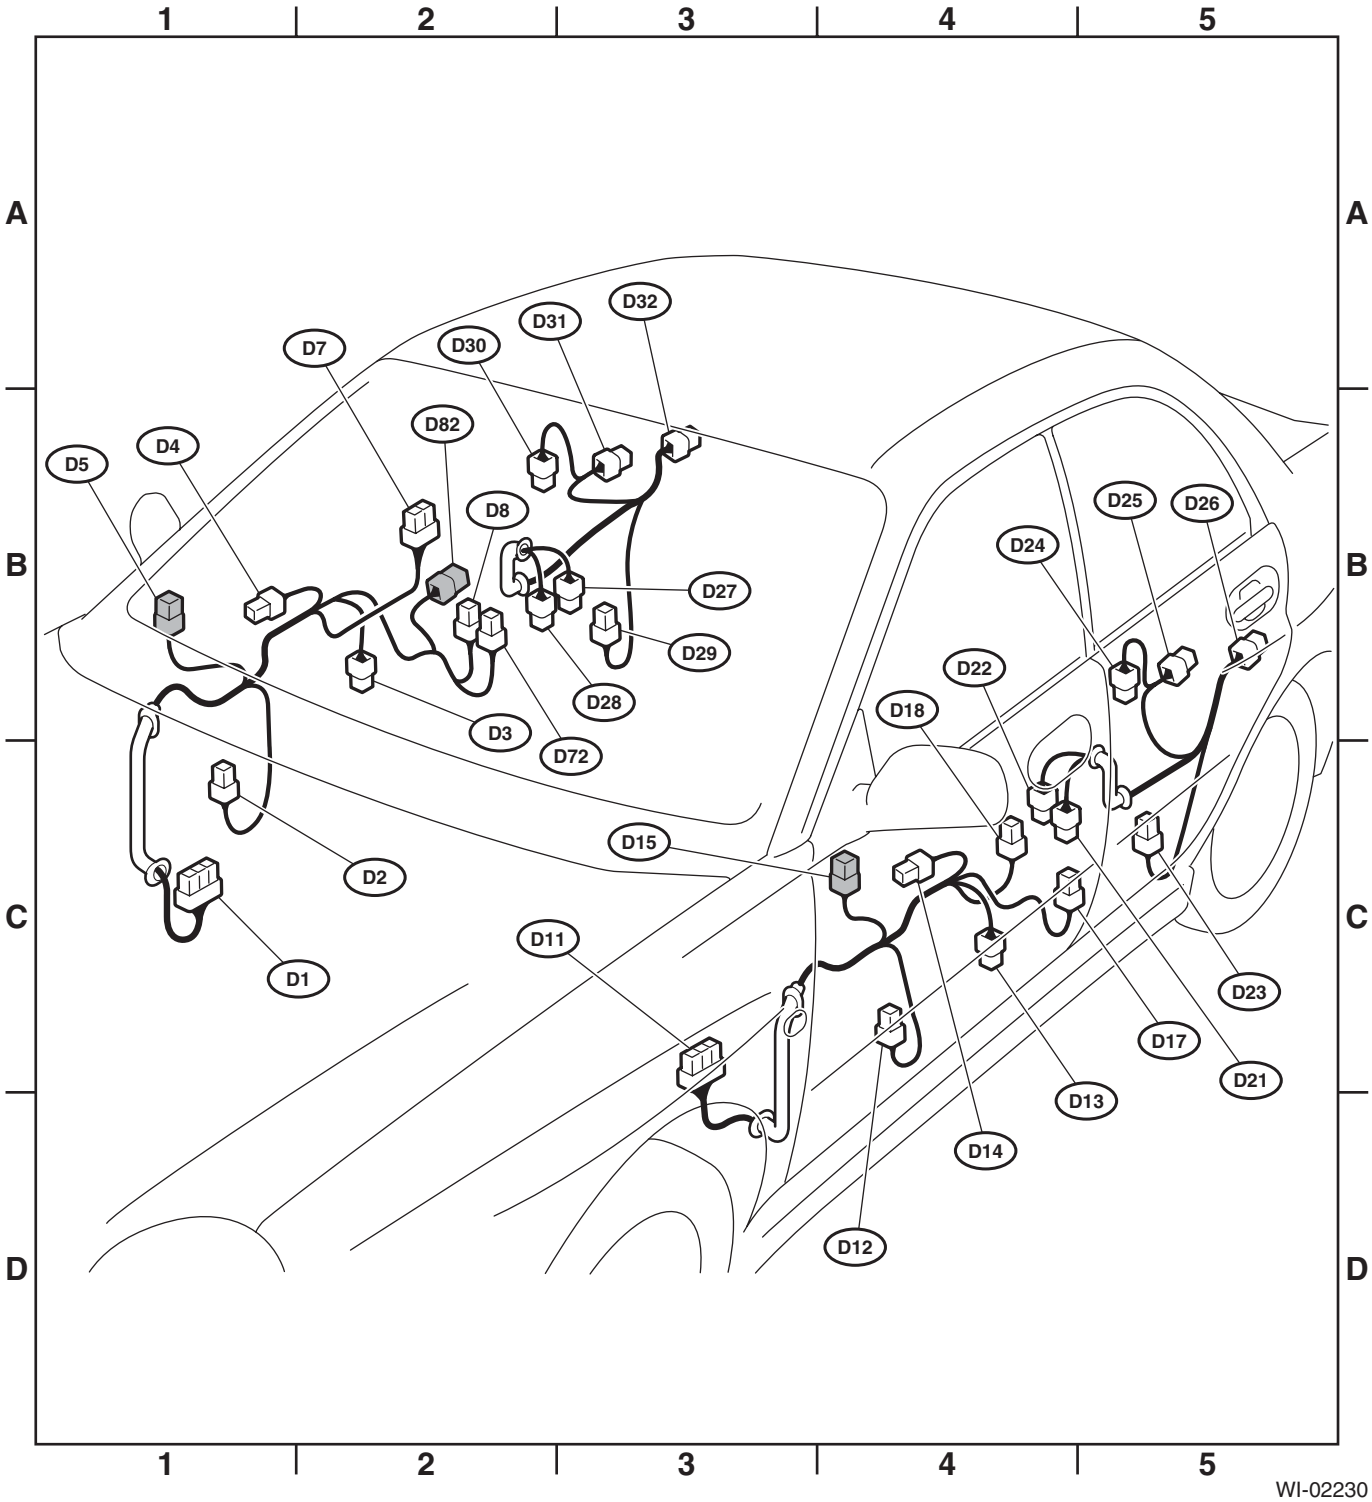
1
2
3
4
5
A
B
C
D
D1
D2
D3
D4
D5
D7
D8
D11
D12
D13
D14
D15
D17
D18
D21
D22
D23
D24
D25
D26
D27
D28
D29
D30
D31
D32
D72
D82
WI-02230

53.Rear Wiring Harness and Trunk Lid Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R16	3	★	C-5		Rear door switch RH
R17	1	Black	B-4		Rear defogger
R19	2	★	B-3		High-mounted stop light
R20	2	Black	B-3		Trunk room light
R24	2	★	B-4	R60	Trunk lid cord
R26	6	★	C-3		Rear combination light RH
R27	2	★	C-2		Trunk room light switch
R28	6	★	B-1		Rear combination light LH
R60	2	★	B-4	R24	Rear wiring harness
R63	2	Black	C-2		License plate light
R65	1	Black	A-2		Rear defogger
R66	2	★	C-3		High-mounted stop light (Rear spoiler)
R79	10	★	C-3		Trailer connector
R122	10	Black	C-4		Fuel pump control module (Turbo Model)
R130	2	★	B-4		Rear defogger choke coil
R145	4	★	C-3		Intercooler water spray motor
★: Non-colored					

REAR WIRING HARNESS AND TRUNK LID CORD

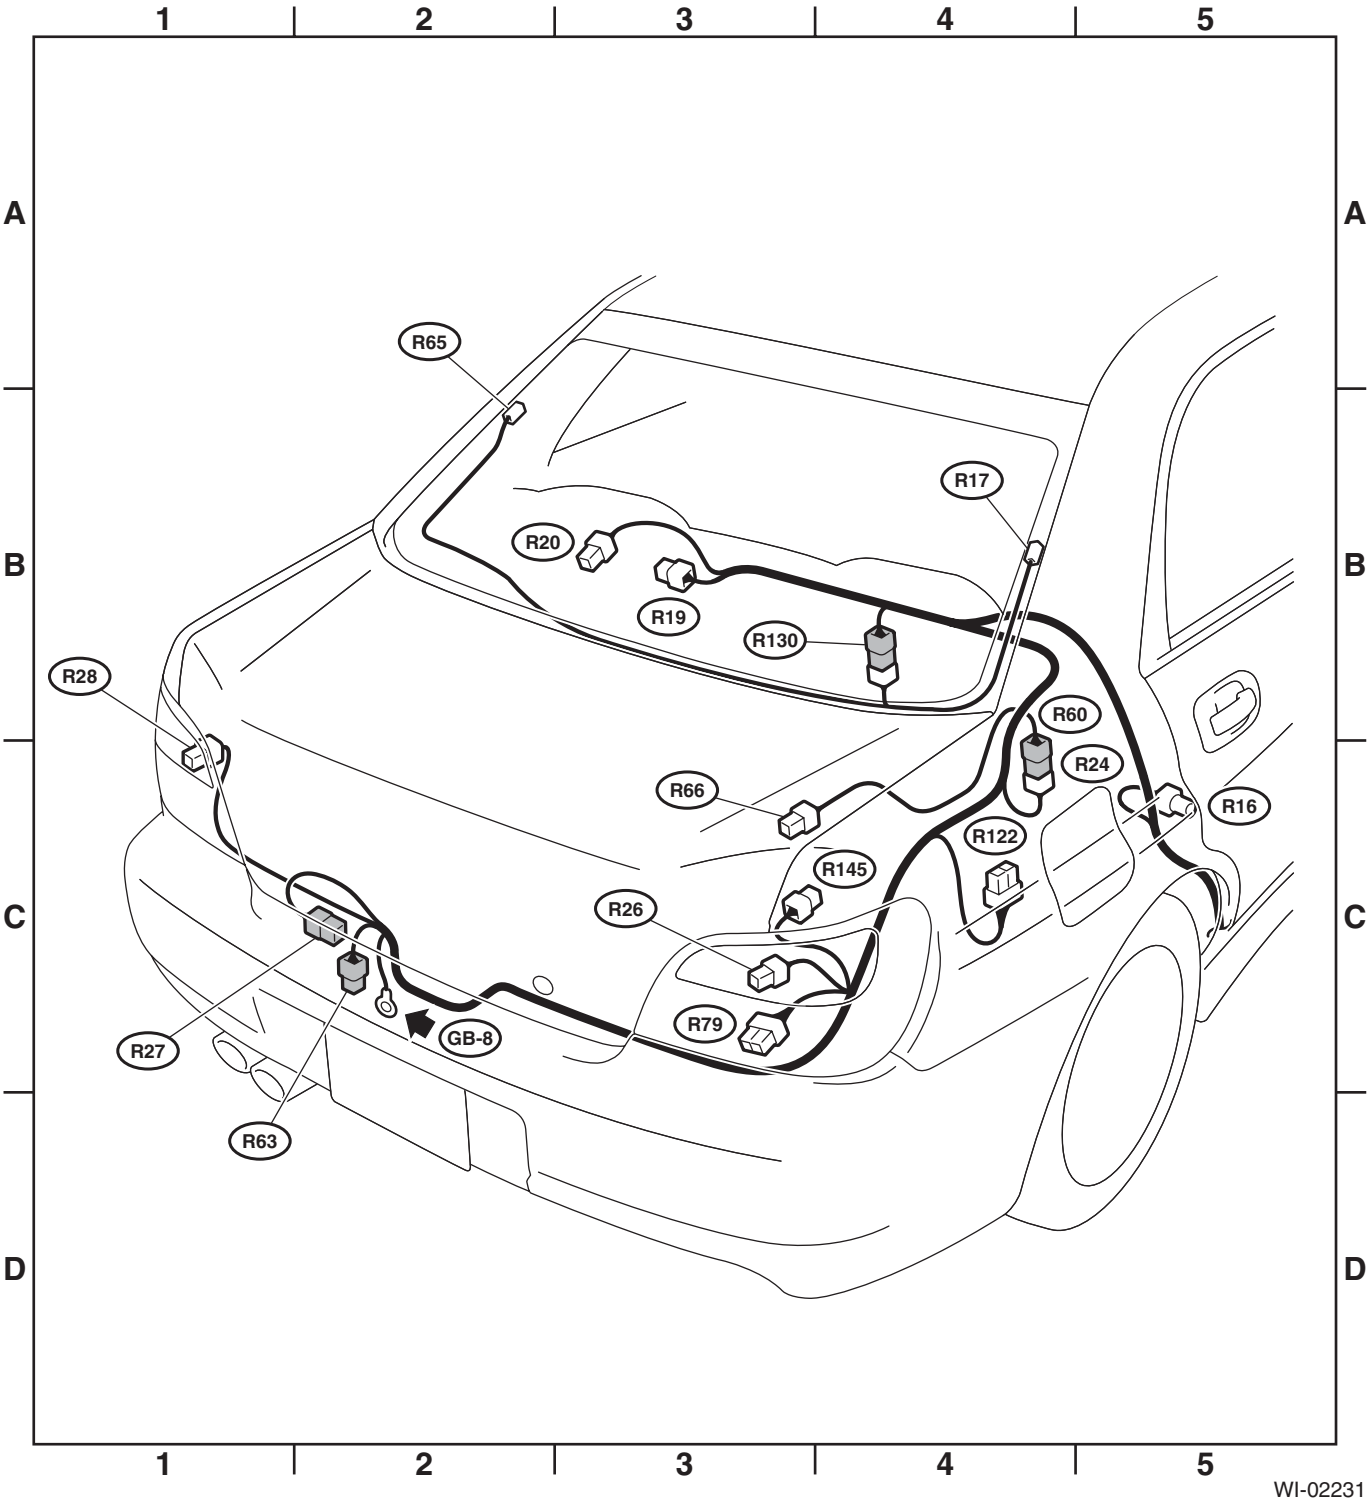

54.Rear Wiring Harness and Rear Gate Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R16	3	★	C-5		Rear door switch RH
R26	6	★	C-4		Rear combination light RH
R28	6	★	C-1		Rear combination light LH
R30	2	★	D-4		Diode (Luggage room light)
R37	2	★	D-4	D33	Rear gate cord
R38	4	★	D-4	D34	Rear gate cord
R39	4	Blue	D-4	D35	Rear gate cord
R63	2	Black	D-2		License plate light
R79	10	★	D-3		Trailer connector
R97	2	★	C-2		Antenna amp.
R116	8	★	C-4		Rear wiper intermittent module
R122	10	Black	C-4		Fuel pump control module (Turbo Model)
R141	2	★	C-3		Luggage room light
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D33	2	★	D-4	R37	Rear wiring harness
D34	4	★	D-4	R38	Rear wiring harness
D35	4	Blue	D-4	R39	Rear wiring harness
D39	2	★	B-3		High-mounted stop light
D43	4	★	A-2		Rear wiper motor
D46	2	Black	A-2		Rear gate latch switch
D47	2	★	A-3		Rear gate lock actuator cord
D74	2	★	A-4		Rear defogger choke coil
★: Non-colored					

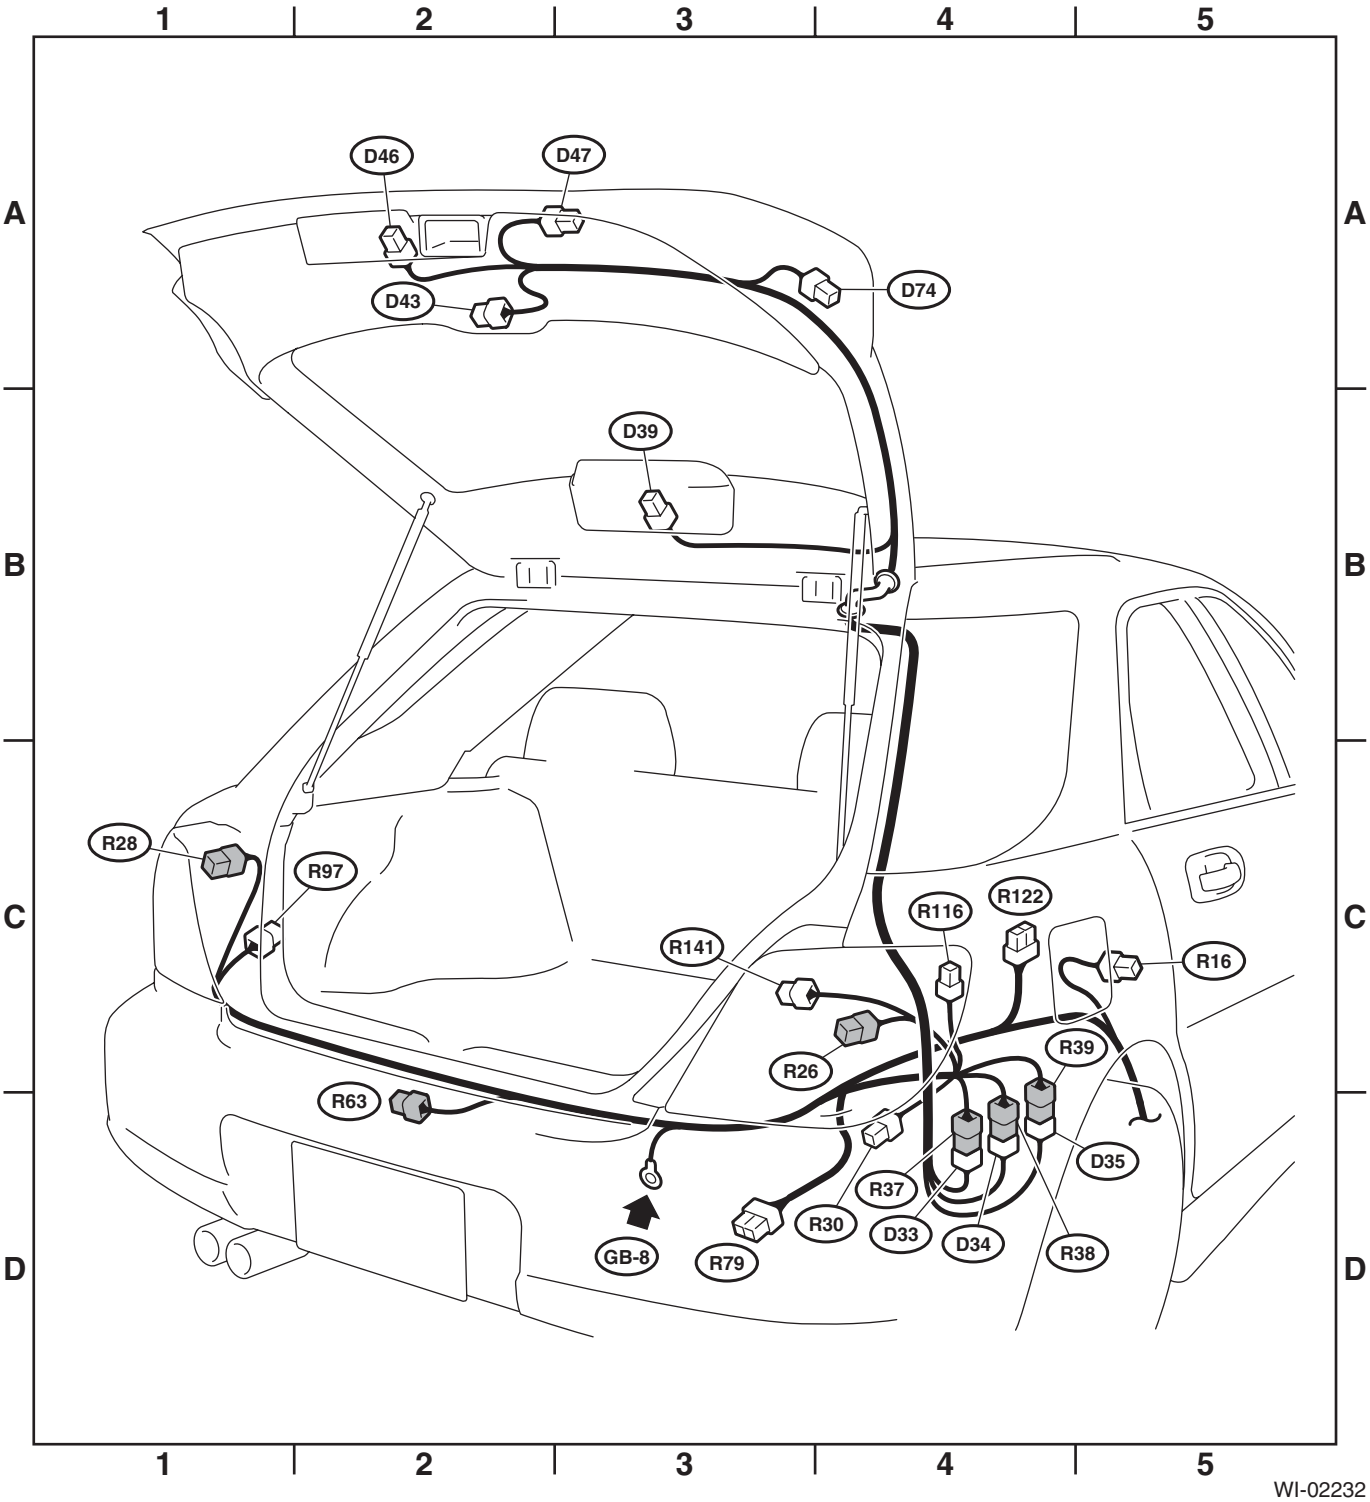
1
2
3
4
5
A
B
C
D
D46
D47
D43
D74
D39
R28
R97
R141
R116
R122
R16
R26
R39
R63
D35
R37
R30
D33
D34
R38
GB-8
R79
WI-02232