# AIR CONDITIONING

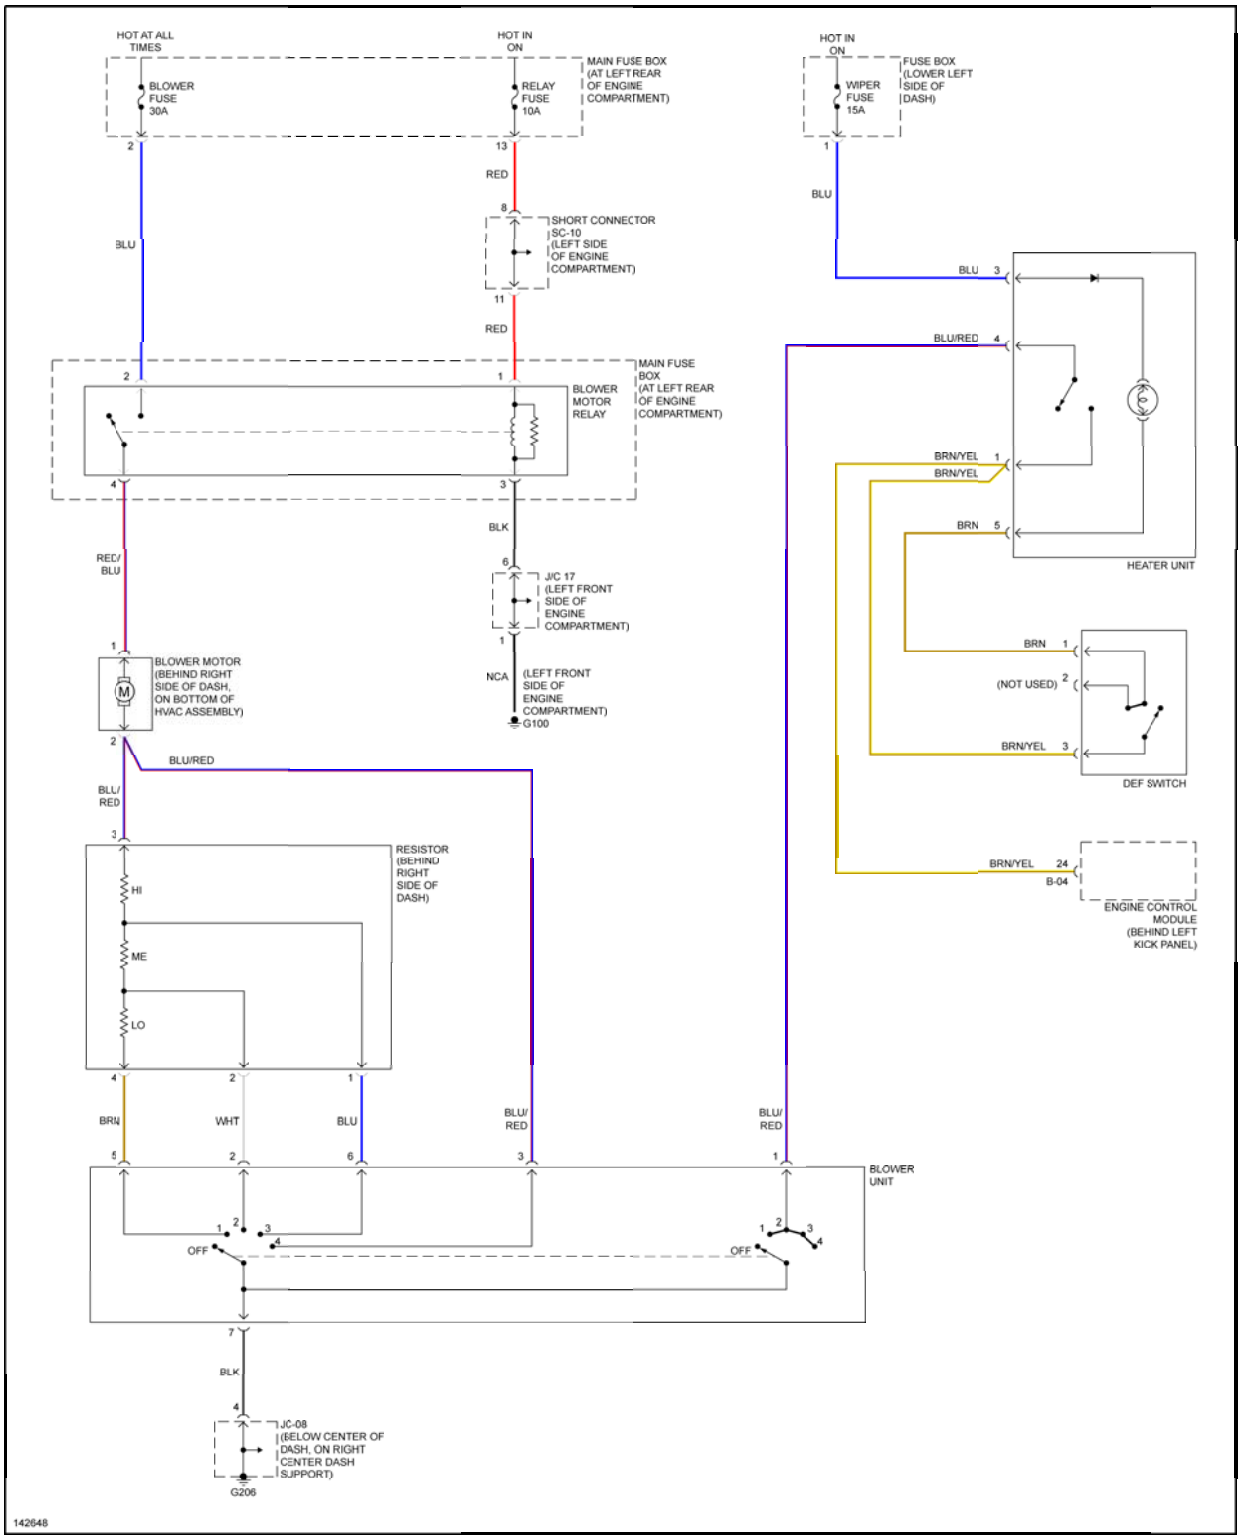
HOT AT ALL TIMES
HOT IN ON
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
BLOWER FUSE 30A
RELAY FUSE 10A
2
13
RED
8
SHORT CONNECTOR SC-10 (LEFT SIDE OF ENGINE COMPARTMENT)
11
RED
BLU
2
1
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
BLOWER MOTOR RELAY
4
3
BLK
RED/ BLU
6
J/C 17 (LEFT FRONT SIDE OF ENGINE COMPARTMENT)
1
NCA
(LEFT FRONT SIDE OF ENGINE COMPARTMENT)
G100
1
BLOWER MOTOR (BEHIND RIGHT SIDE OF DASH, ON BOTTOM OF HVAC ASSEMBLY)
2
BLU/RED
BLU/ RED
3
RESISTOR (BEHIND RIGHT SIDE OF DASH)
HI
ME
LO
4
2
1
BRN
WHT
BLU
5
2
6
BLU/ RED
3
BLU/ RED
1
BLOWER UNIT
OFF
OFF
7
BLK
4
J/C-08 (BELOW CENTER OF DASH, ON RIGHT CENTER DASH SUPPORT)
G206
HOT IN ON
FUSE BOX (LOWER LEFT SIDE OF DASH)
WIPER FUSE 15A
1
BLU
BLU
3
BLU/RED
4
BRN/YEL
1
BRN/YEL
BRN
5
HEATER UNIT
BRN
1
(NOT USED)
2
BRN/YEL
3
DEF SWITCH
BRN/YEL
24
B-04
ENGINE CONTROL MODULE (BEHIND LEFT KICK PANEL)
142648

**Fig. 1: Heater Circuit**

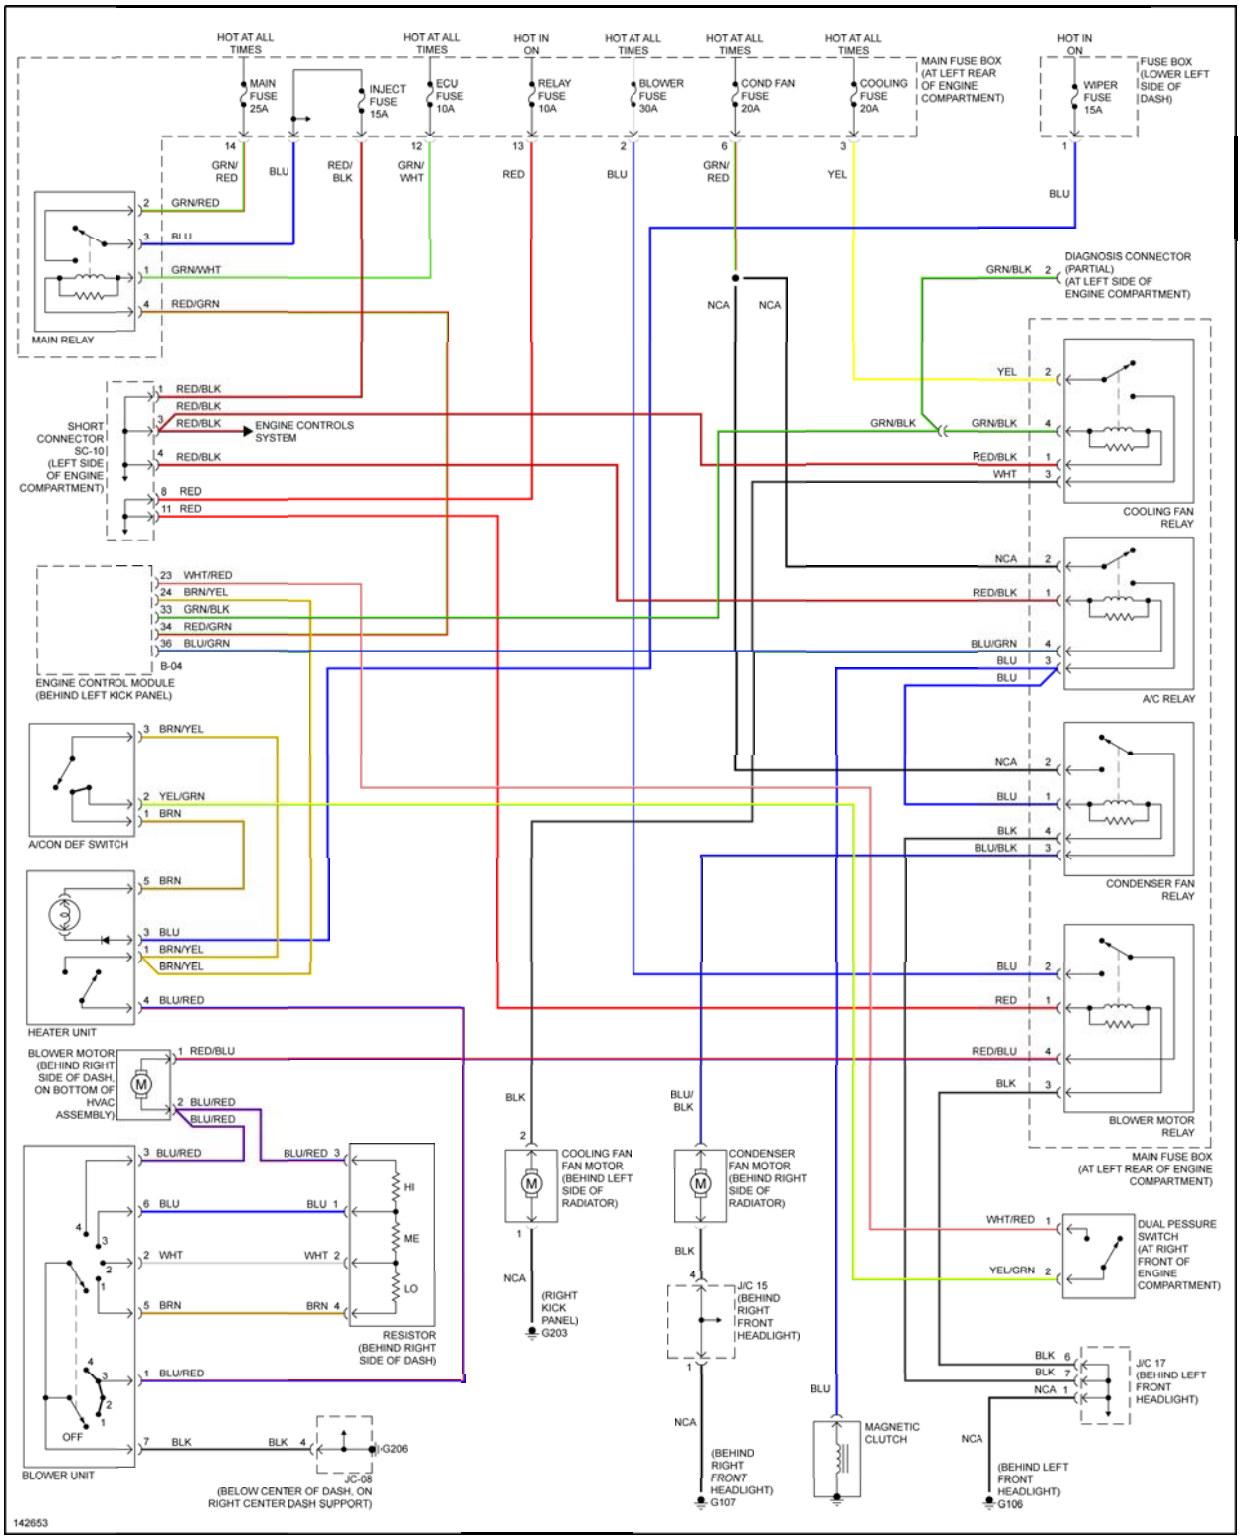
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT IN ON
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT IN ON
MAIN FUSE 25A
INJECT FUSE 15A
ECU FUSE 10A
RELAY FUSE 10A
BLOWER FUSE 30A
COND FAN FUSE 20A
COOLING FUSE 20A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
WIPER FUSE 15A
FUSE BOX (LOWER LEFT SIDE OF DASH)
MAIN RELAY
SHORT CONNECTOR SC-10 (LEFT SIDE OF ENGINE COMPARTMENT)
ENGINE CONTROLS SYSTEM
ENGINE CONTROL MODULE (BEHIND LEFT KICK PANEL)
B-04
A/CON DEF SWITCH
HEATER UNIT
BLOWER MOTOR (BEHIND RIGHT SIDE OF DASH, ON BOTTOM OF HVAC ASSEMBLY)
BLOWER UNIT
RESISTOR (BEHIND RIGHT SIDE OF DASH)
HI
ME
LO
OFF
JC-08
(BELOW CENTER OF DASH, ON RIGHT CENTER DASH SUPPORT)
G206
COOLING FAN FAN MOTOR (BEHIND LEFT SIDE OF RADIATOR)
(RIGHT KICK PANEL) G203
CONDENSER FAN MOTOR (BEHIND RIGHT SIDE OF RADIATOR)
J/C 15 (BEHIND RIGHT FRONT HEADLIGHT)
(BEHIND RIGHT FRONT HEADLIGHT) G107
MAGNETIC CLUTCH
DIAGNOSIS CONNECTOR (PARTIAL) (AT LEFT SIDE OF ENGINE COMPARTMENT)
COOLING FAN RELAY
A/C RELAY
CONDENSER FAN RELAY
BLOWER MOTOR RELAY
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
DUAL PESSURE SWITCH (AT RIGHT FRONT OF ENGINE COMPARTMENT)
J/C 17 (BEHIND LEFT FRONT HEADLIGHT)
(BEHIND LEFT FRONT HEADLIGHT) G106
NCA
142653

**Fig. 2: Manual A/C Circuit**

## ANTI-LOCK BRAKES

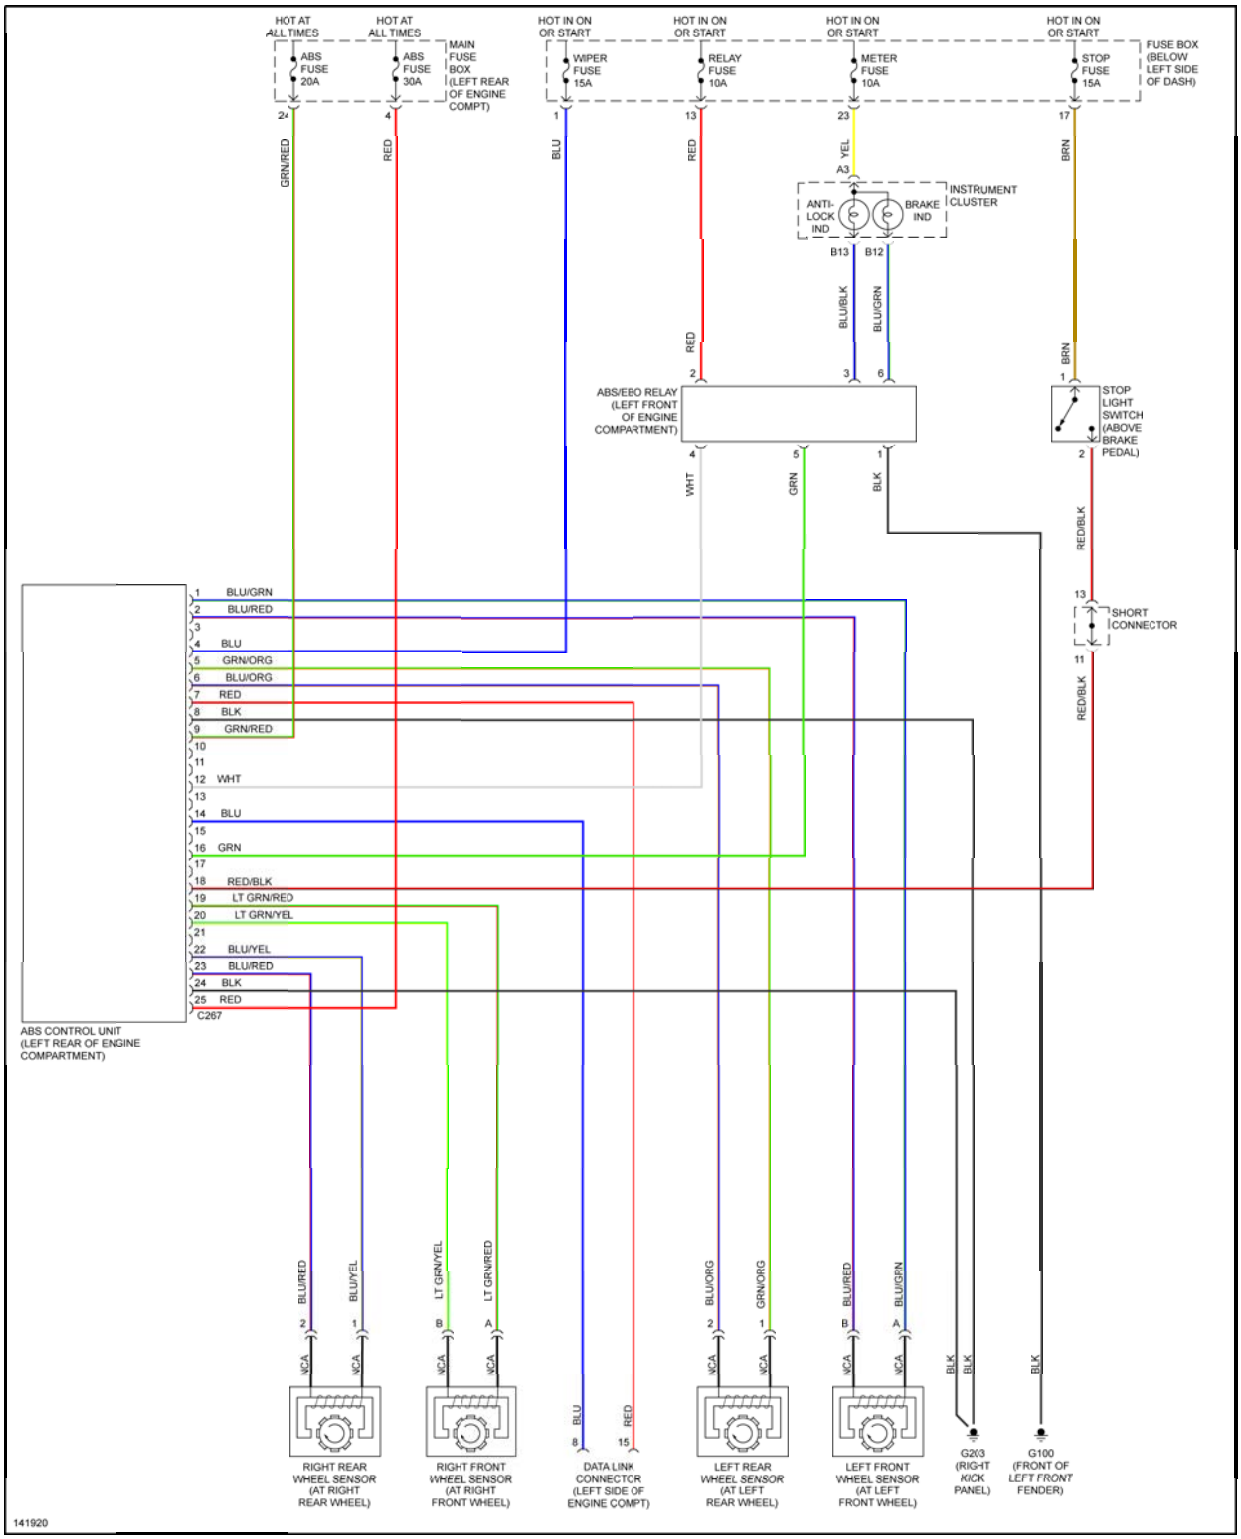
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT IN ON OR START
HOT IN ON OR START
HOT IN ON OR START
HOT IN ON OR START
ABS FUSE 20A
ABS FUSE 30A
MAIN FUSE BOX (LEFT REAR OF ENGINE COMPT)
WIPER FUSE 15A
RELAY FUSE 10A
METER FUSE 10A
STOP FUSE 15A
FUSE BOX (BELOW LEFT SIDE OF DASH)
INSTRUMENT CLUSTER
ANTI-LOCK IND
BRAKE IND
ABS/EBO RELAY (LEFT FRONT OF ENGINE COMPARTMENT)
STOP LIGHT SWITCH (ABOVE BRAKE PEDAL)
SHORT CONNECTOR
ABS CONTROL UNIT (LEFT REAR OF ENGINE COMPARTMENT)
C267
RIGHT REAR WHEEL SENSOR (AT RIGHT REAR WHEEL)
RIGHT FRONT WHEEL SENSOR (AT RIGHT FRONT WHEEL)
DATA LINK CONNECTOR (LEFT SIDE OF ENGINE COMPT)
LEFT REAR WHEEL SENSOR (AT LEFT REAR WHEEL)
LEFT FRONT WHEEL SENSOR (AT LEFT FRONT WHEEL)
G203 (RIGHT KICK PANEL)
G100 (FRONT OF LEFT FRONT FENDER)
141920

**Fig. 3: Anti-lock Brake Circuits**

## COMPUTER DATA LINES

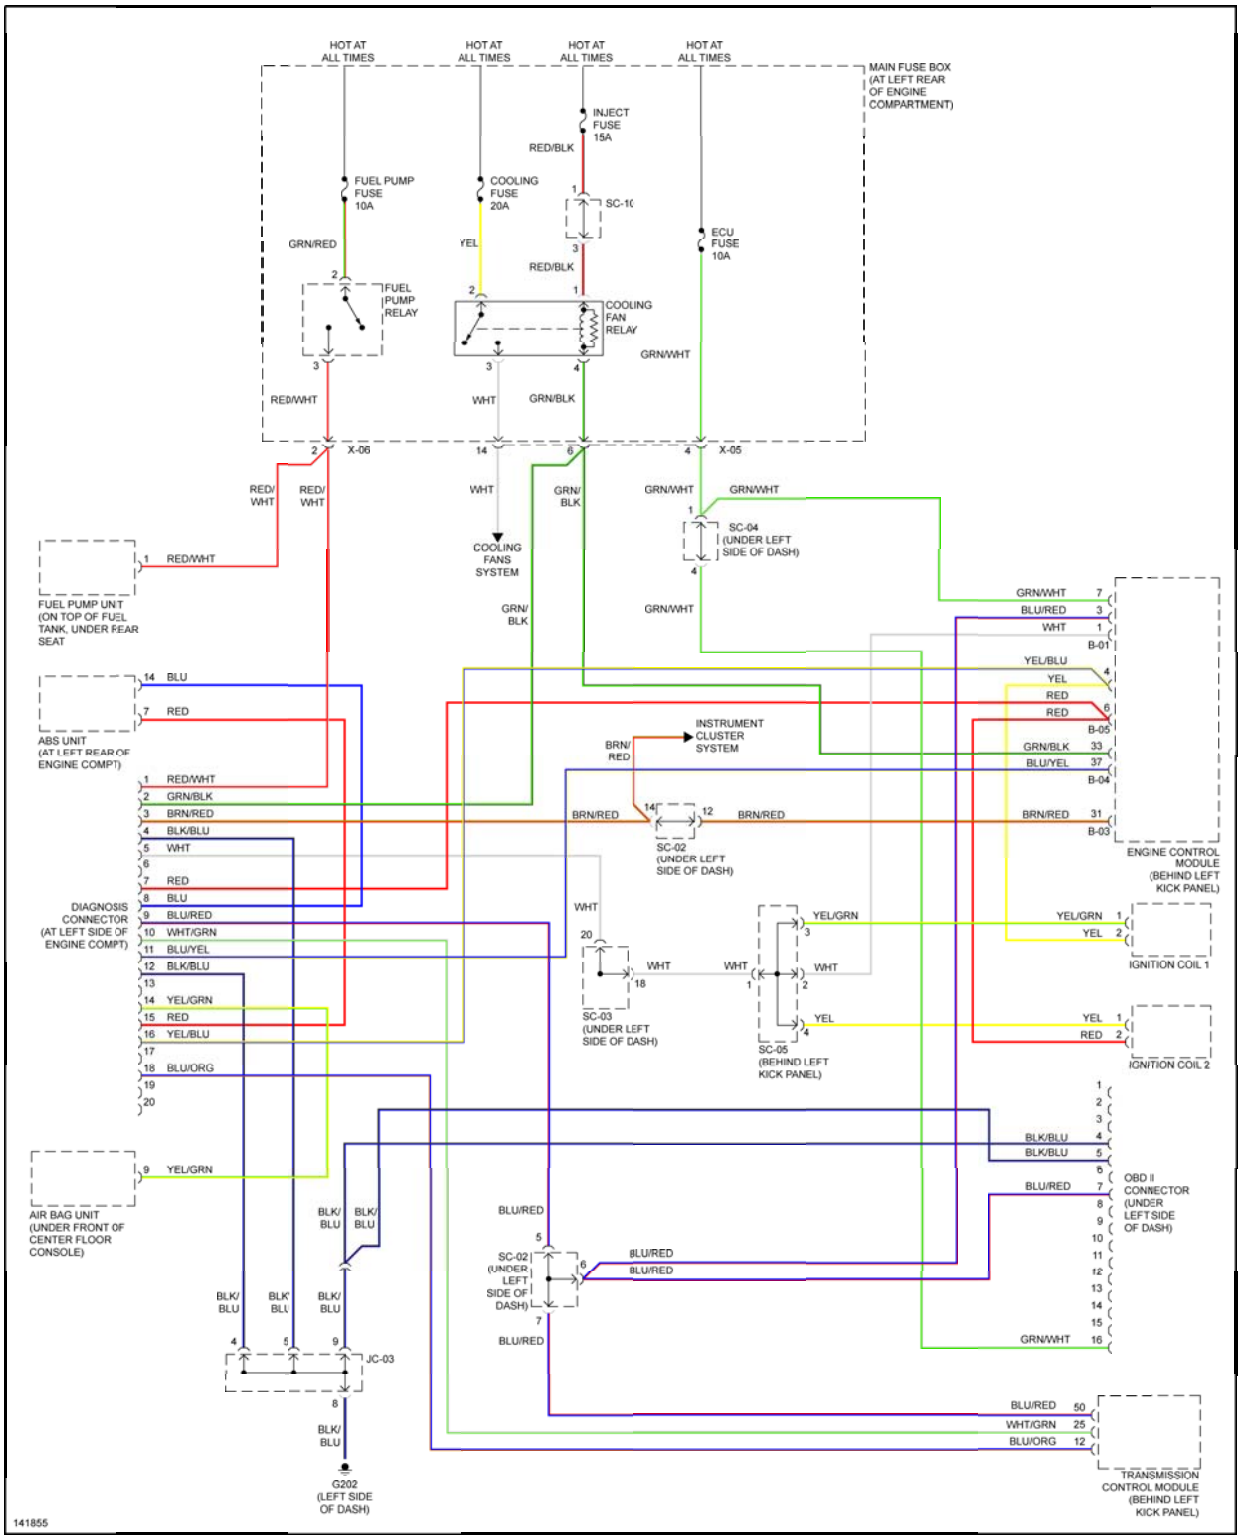
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT AT ALL TIMES
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
INJECT FUSE 15A
RED/BLK
FUEL PUMP FUSE 10A
COOLING FUSE 20A
ECU FUSE 10A
GRN/RED
YEL
RED/BLK
FUEL PUMP RELAY
COOLING FAN RELAY
GRN/WHT
RED/WHT
WHT
GRN/BLK
X-06
X-05
RED/ WHT
RED/ WHT
WHT
GRN/ BLK
GRN/WHT
GRN/WHT
COOLING FANS SYSTEM
SC-04 (UNDER LEFT SIDE OF DASH)
FUEL PUMP UNIT (ON TOP OF FUEL TANK, UNDER REAR SEAT)
RED/WHT
GRN/ BLK
GRN/WHT
ABS UNIT (AT LEFT REAR OF ENGINE COMPT)
BLU
RED
INSTRUMENT CLUSTER SYSTEM
BRN/ RED
RED/WHT
GRN/BLK
BRN/RED
BLK/BLU
WHT
RED
BLU
BRN/RED
BRN/RED
BRN/RED
SC-02 (UNDER LEFT SIDE OF DASH)
ENGINE CONTROL MODULE (BEHIND LEFT KICK PANEL)
GRN/WHT
BLU/RED
WHT
YEL/BLU
YEL
RED
RED
GRN/BLK
BLU/YEL
DIAGNOSIS CONNECTOR (AT LEFT SIDE OF ENGINE COMPT)
BLU/RED
WHT/GRN
BLU/YEL
BLK/BLU
YEL/GRN
RED
YEL/BLU
BLU/ORG
WHT
WHT
WHT
YEL/GRN
YEL
SC-03 (UNDER LEFT SIDE OF DASH)
SC-05 (BEHIND LEFT KICK PANEL)
YEL/GRN
YEL
IGNITION COIL 1
YEL
RED
IGNITION COIL 2
AIR BAG UNIT (UNDER FRONT OF CENTER FLOOR CONSOLE)
YEL/GRN
BLK/ BLU
BLK/ BLU
BLU/RED
BLK/BLU
BLK/BLU
OBD II CONNECTOR (UNDER LEFT SIDE OF DASH)
BLU/RED
SC-02 (UNDER LEFT SIDE OF DASH)
BLU/RED
BLU/RED
BLU/RED
GRN/WHT
BLK/ BLU
BLK/ BLU
BLK/ BLU
JC-03
BLK/ BLU
G202 (LEFT SIDE OF DASH)
BLU/RED
WHT/GRN
BLU/ORG
TRANSMISSION CONTROL MODULE (BEHIND LEFT KICK PANEL)
141855

**Fig. 4: Computer Data Lines**

## COOLING FAN

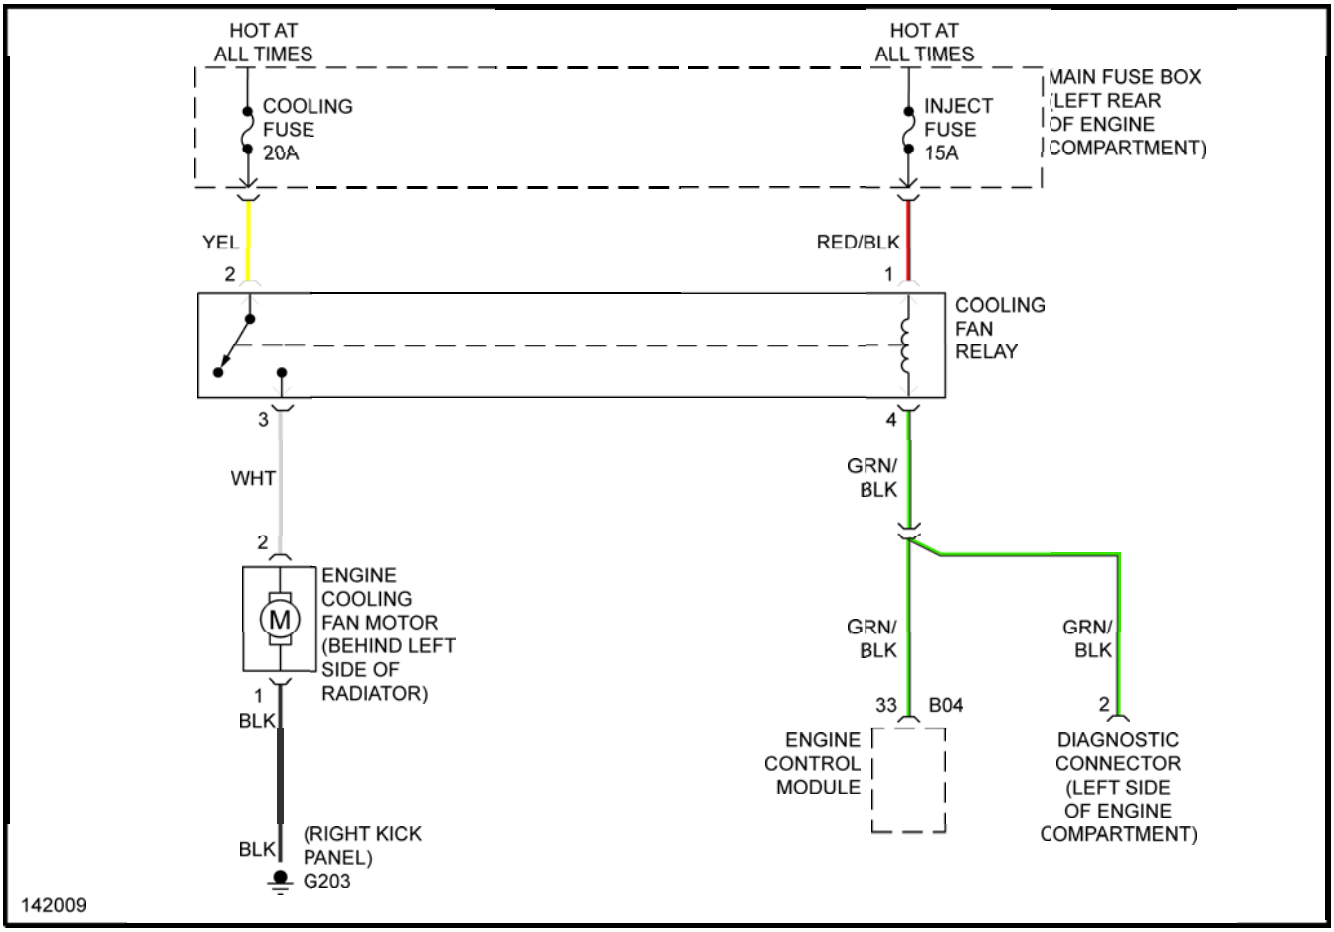
HOT AT ALL TIMES
HOT AT ALL TIMES
MAIN FUSE BOX (LEFT REAR OF ENGINE COMPARTMENT)
COOLING FUSE 20A
INJECT FUSE 15A
YEL
2
RED/BLK
1
COOLING FAN RELAY
3
4
WHT
GRN/ BLK
2
ENGINE COOLING FAN MOTOR (BEHIND LEFT SIDE OF RADIATOR)
M
GRN/ BLK
GRN/ BLK
1
BLK
33
B04
2
ENGINE CONTROL MODULE
DIAGNOSTIC CONNECTOR (LEFT SIDE OF ENGINE COMPARTMENT)
BLK
(RIGHT KICK PANEL)
G203
142009

**Fig. 5: Cooling Fan Circuit**

## DEFOGGERS

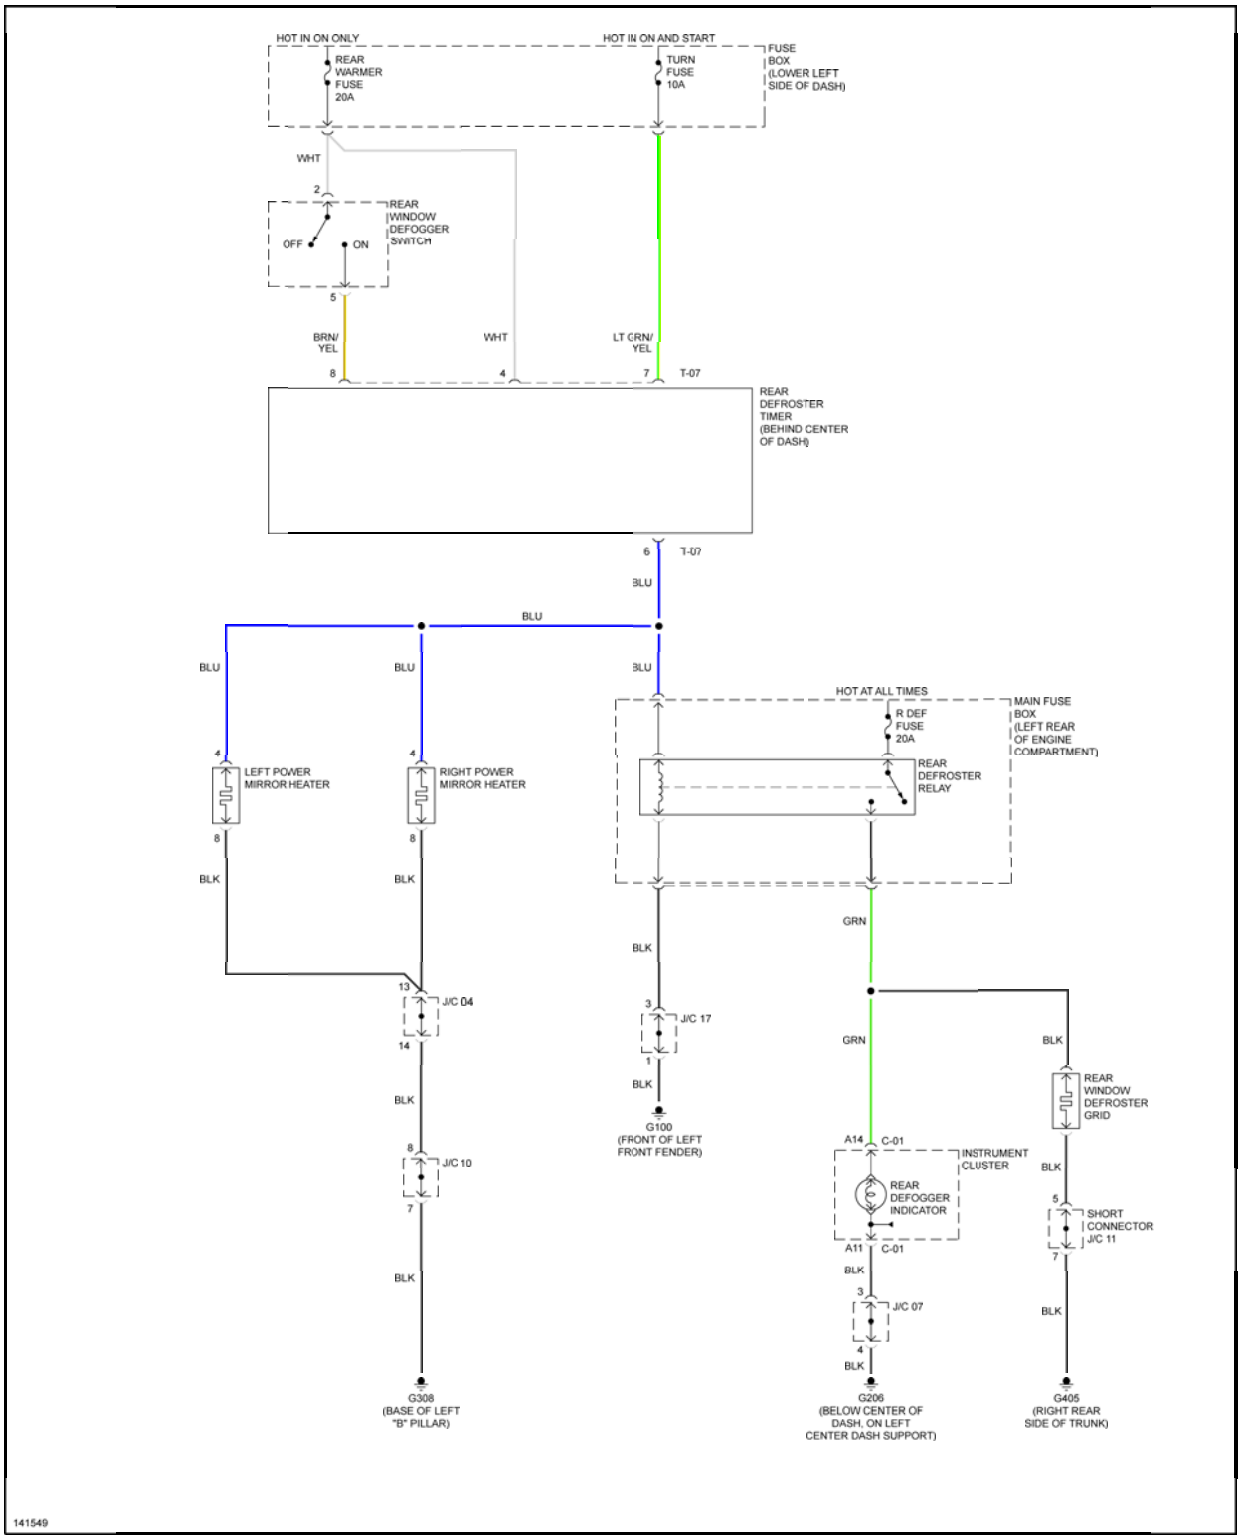
HOT IN ON ONLY
HOT IN ON AND START
REAR WARMER FUSE 20A
TURN FUSE 10A
FUSE BOX (LOWER LEFT SIDE OF DASH)
WHT
2
REAR WINDOW DEFOGGER SWITCH
OFF
ON
5
BRN/ YEL
WHT
LT GRN/ YEL
8
4
7
T-07
REAR DEFROSTER TIMER (BEHIND CENTER OF DASH)
6
T-07
BLU
BLU
BLU
BLU
HOT AT ALL TIMES
MAIN FUSE BOX (LEFT REAR OF ENGINE COMPARTMENT)
R DEF FUSE 20A
REAR DEFROSTER RELAY
LEFT POWER MIRROR HEATER
RIGHT POWER MIRROR HEATER
4
4
8
8
BLK
BLK
13
J/C 04
14
BLK
8
J/C 10
7
BLK
G308
(BASE OF LEFT "B" PILLAR)
BLK
3
J/C 17
1
BLK
G100
(FRONT OF LEFT FRONT FENDER)
GRN
GRN
A14
C-01
INSTRUMENT CLUSTER
REAR DEFOGGER INDICATOR
A11
C-01
BLK
3
J/C 07
4
BLK
G206
(BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
BLK
REAR WINDOW DEFROSTER GRID
BLK
5
SHORT CONNECTOR J/C 11
7
BLK
G405
(RIGHT REAR SIDE OF TRUNK)
141549

**Fig. 6: Defogger Circuit**

# ENGINE PERFORMANCE

**1.5L**

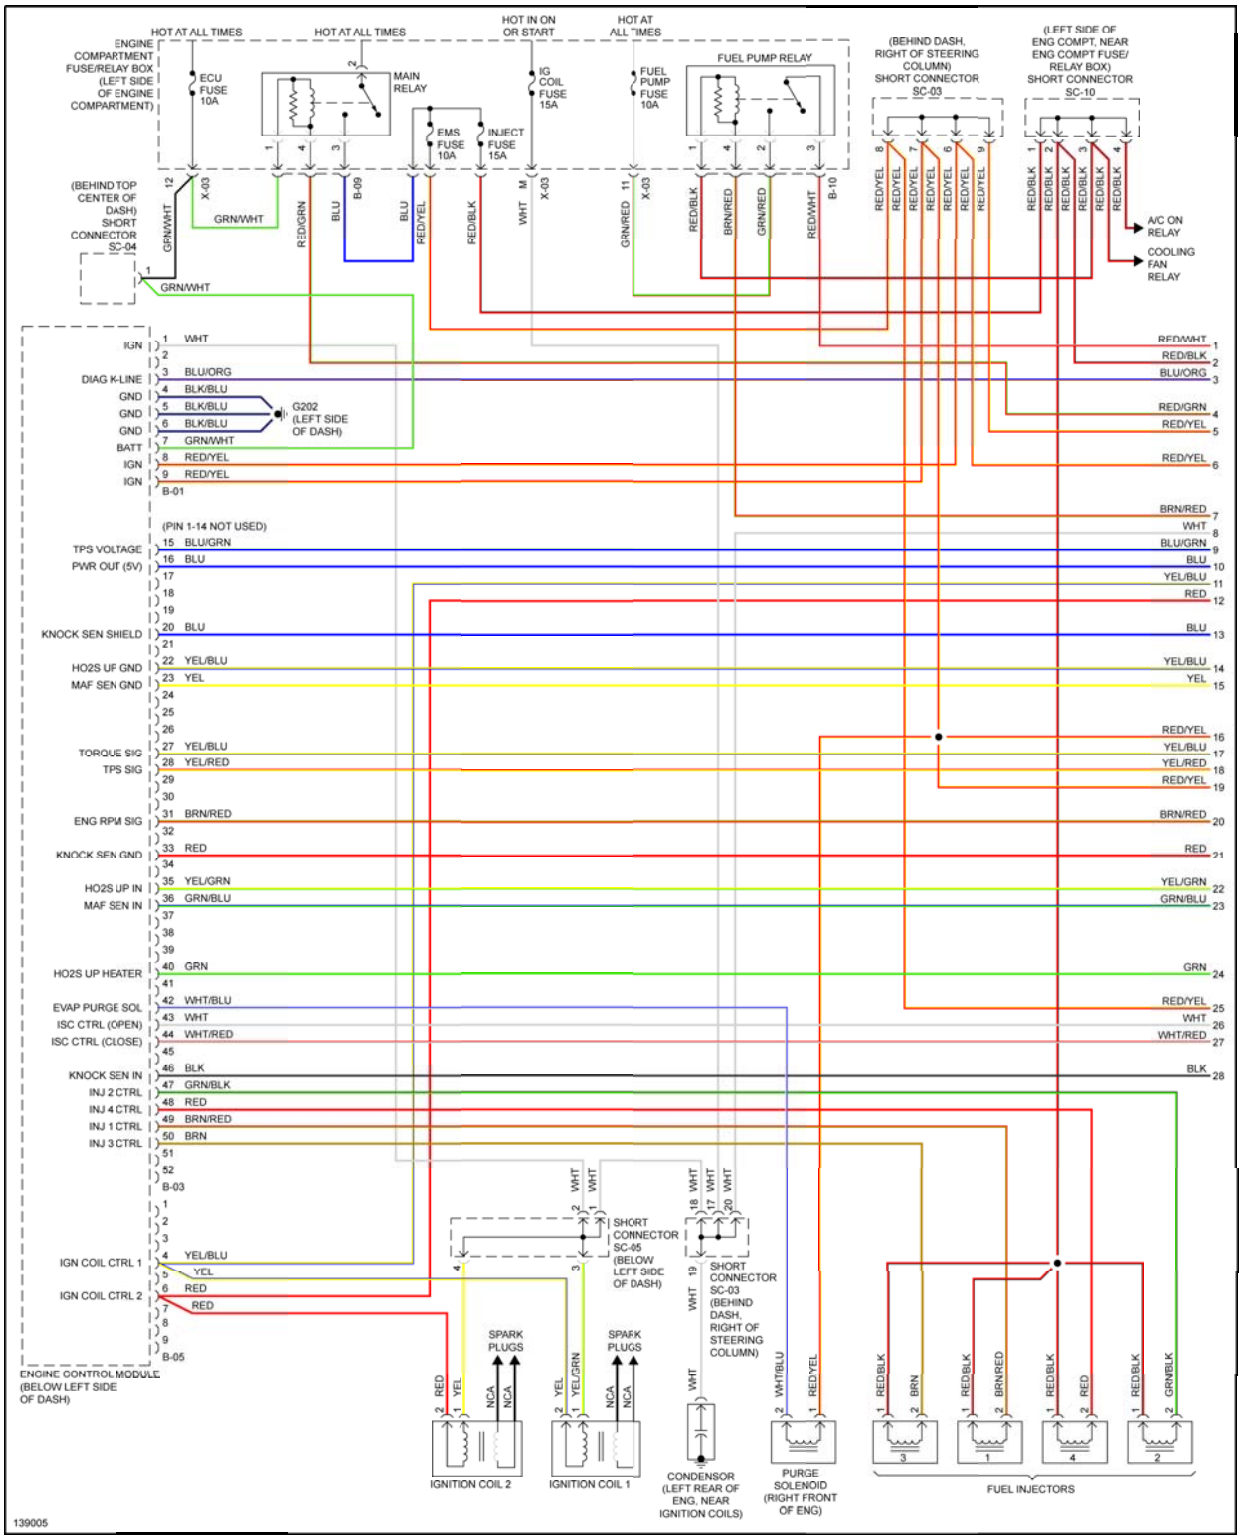
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT IN ON OR START
HOT AT ALL TIMES
ENGINE COMPARTMENT FUSE/RELAY BOX (LEFT SIDE OF ENGINE COMPARTMENT)
ECU FUSE 10A
MAIN RELAY
EMS FUSE 10A
INJECT FUSE 15A
IG COIL FUSE 15A
FUEL PUMP FUSE 10A
FUEL PUMP RELAY
(BEHIND DASH, RIGHT OF STEERING COLUMN) SHORT CONNECTOR SC-03
(LEFT SIDE OF ENG COMPT, NEAR ENG COMPT FUSE/ RELAY BOX) SHORT CONNECTOR SC-10
(BEHIND TOP CENTER OF DASH) SHORT CONNECTOR SC-04
A/C ON RELAY
COOLING FAN RELAY
IGN
DIAG K-LINE
GND
GND
GND
BATT
IGN
IGN
G202 (LEFT SIDE OF DASH)
B-01
(PIN 1-14 NOT USED)
TPS VOLTAGE
PWR OUT (5V)
KNOCK SEN SHIELD
HO2S LF GND
MAF SEN GND
TORQUE SIG
TPS SIG
ENG RPM SIG
KNOCK SEN GND
HO2S UP IN
MAF SEN IN
HO2S UP HEATER
EVAP PURGE SOL
ISC CTRL (OPEN)
ISC CTRL (CLOSE)
KNOCK SEN IN
INJ 2 CTRL
INJ 4 CTRL
INJ 1 CTRL
INJ 3 CTRL
B-03
IGN COIL CTRL 1
IGN COIL CTRL 2
B-05
ENGINE CONTROL MODULE (BELOW LEFT SIDE OF DASH)
SHORT CONNECTOR SC-45 (BELOW LEFT SIDE OF DASH)
SHORT CONNECTOR SC-03 (BEHIND DASH, RIGHT OF STEERING COLUMN)
SPARK PLUGS
SPARK PLUGS
IGNITION COIL 2
IGNITION COIL 1
CONDENSOR (LEFT REAR OF ENG, NEAR IGNITION COILS)
PURGE SOLENOID (RIGHT FRONT OF ENG)
FUEL INJECTORS
139005

**Fig. 7: 1.5L, Engine Performance Circuits (1 of 3)**

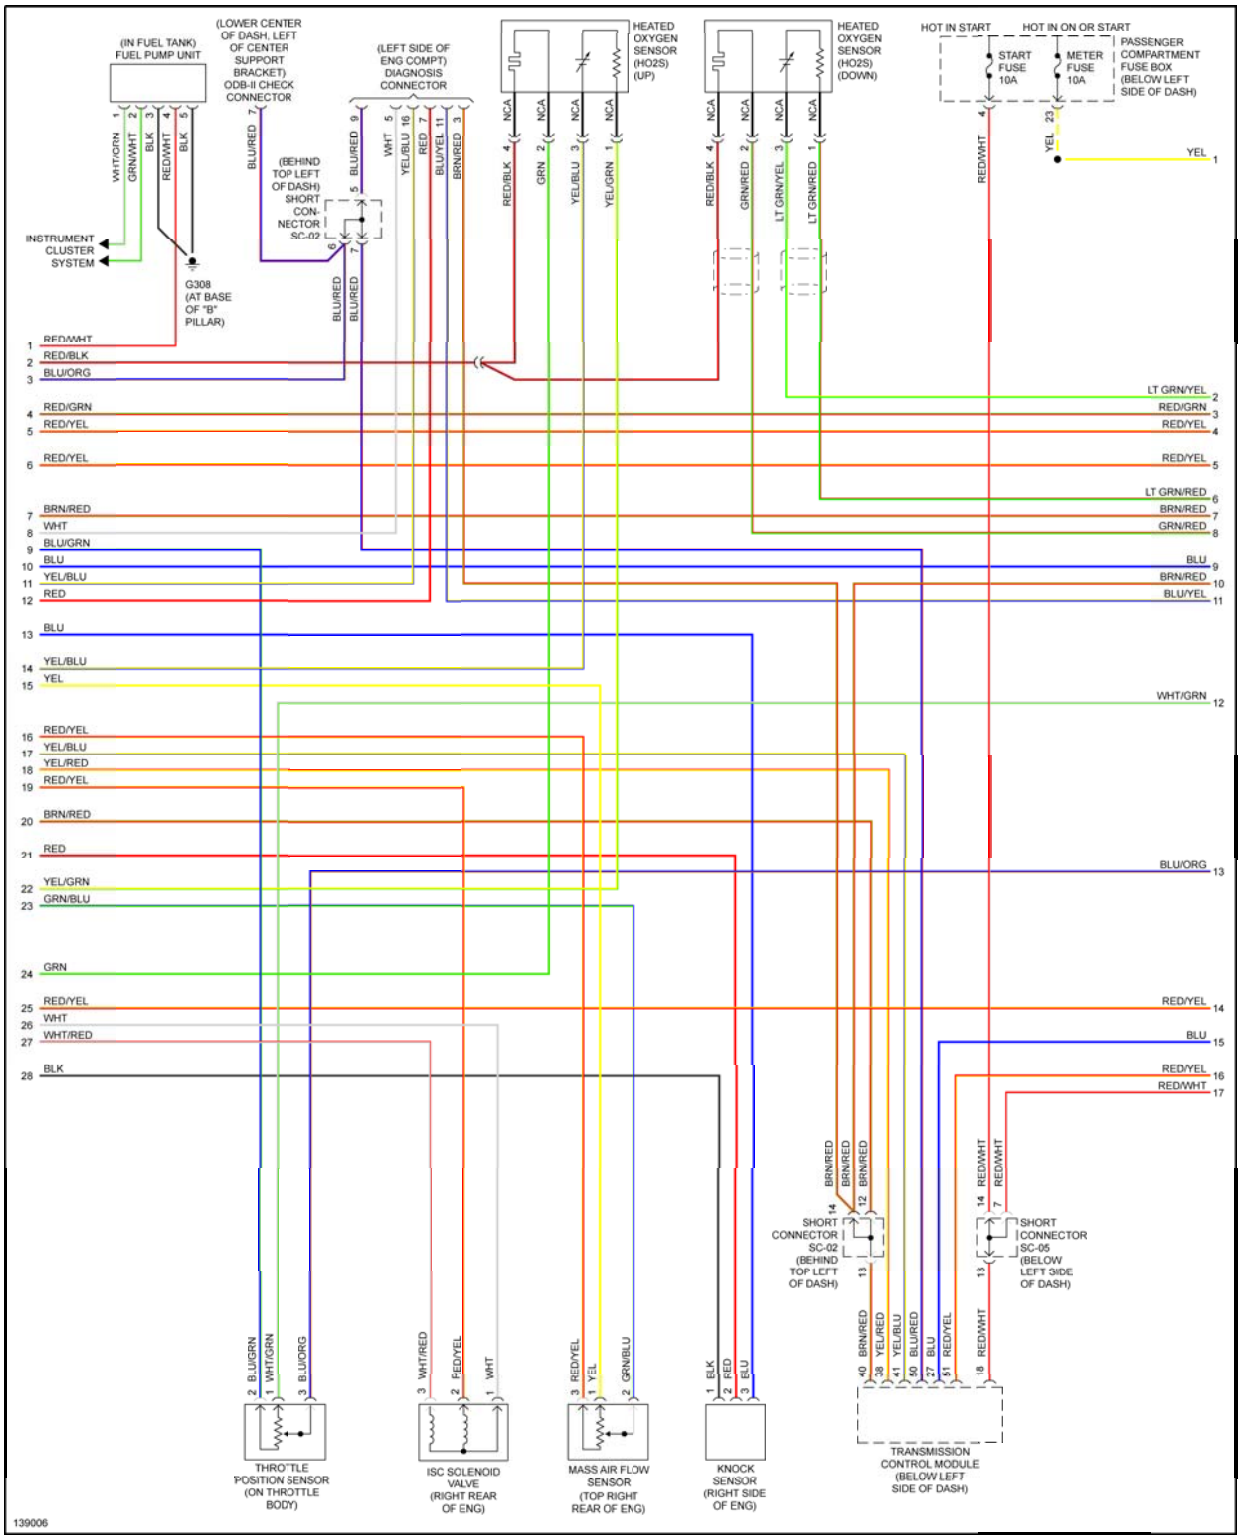
(IN FUEL TANK)
FUEL PUMP UNIT
(LOWER CENTER OF DASH, LEFT OF CENTER SUPPORT BRACKET)
ODB-II CHECK CONNECTOR
(LEFT SIDE OF ENG COMPT)
DIAGNOSIS CONNECTOR
HEATED OXYGEN SENSOR (HO2S) (UP)
HEATED OXYGEN SENSOR (HO2S) (DOWN)
HOT IN START
HOT IN ON OR START
START FUSE 10A
METER FUSE 10A
PASSENGER COMPARTMENT FUSE BOX (BELOW LEFT SIDE OF DASH)
(BEHIND TOP LEFT OF DASH) SHORT CONNECTOR SC-02
INSTRUMENT CLUSTER SYSTEM
G308 (AT BASE OF "B" PILLAR)
SHORT CONNECTOR SC-02 (BEHIND TOP LEFT OF DASH)
SHORT CONNECTOR SC-05 (BELOW LEFT SIDE OF DASH)
THROTTLE POSITION SENSOR (ON THROTTLE BODY)
ISC SOLENOID VALVE (RIGHT REAR OF ENG)
MASS AIR FLOW SENSOR (TOP RIGHT REAR OF ENG)
KNOCK SENSOR (RIGHT SIDE OF ENG)
TRANSMISSION CONTROL MODULE (BELOW LEFT SIDE OF DASH)
139006

**Fig. 8: 1.5L, Engine Performance Circuits (2 of 3)**

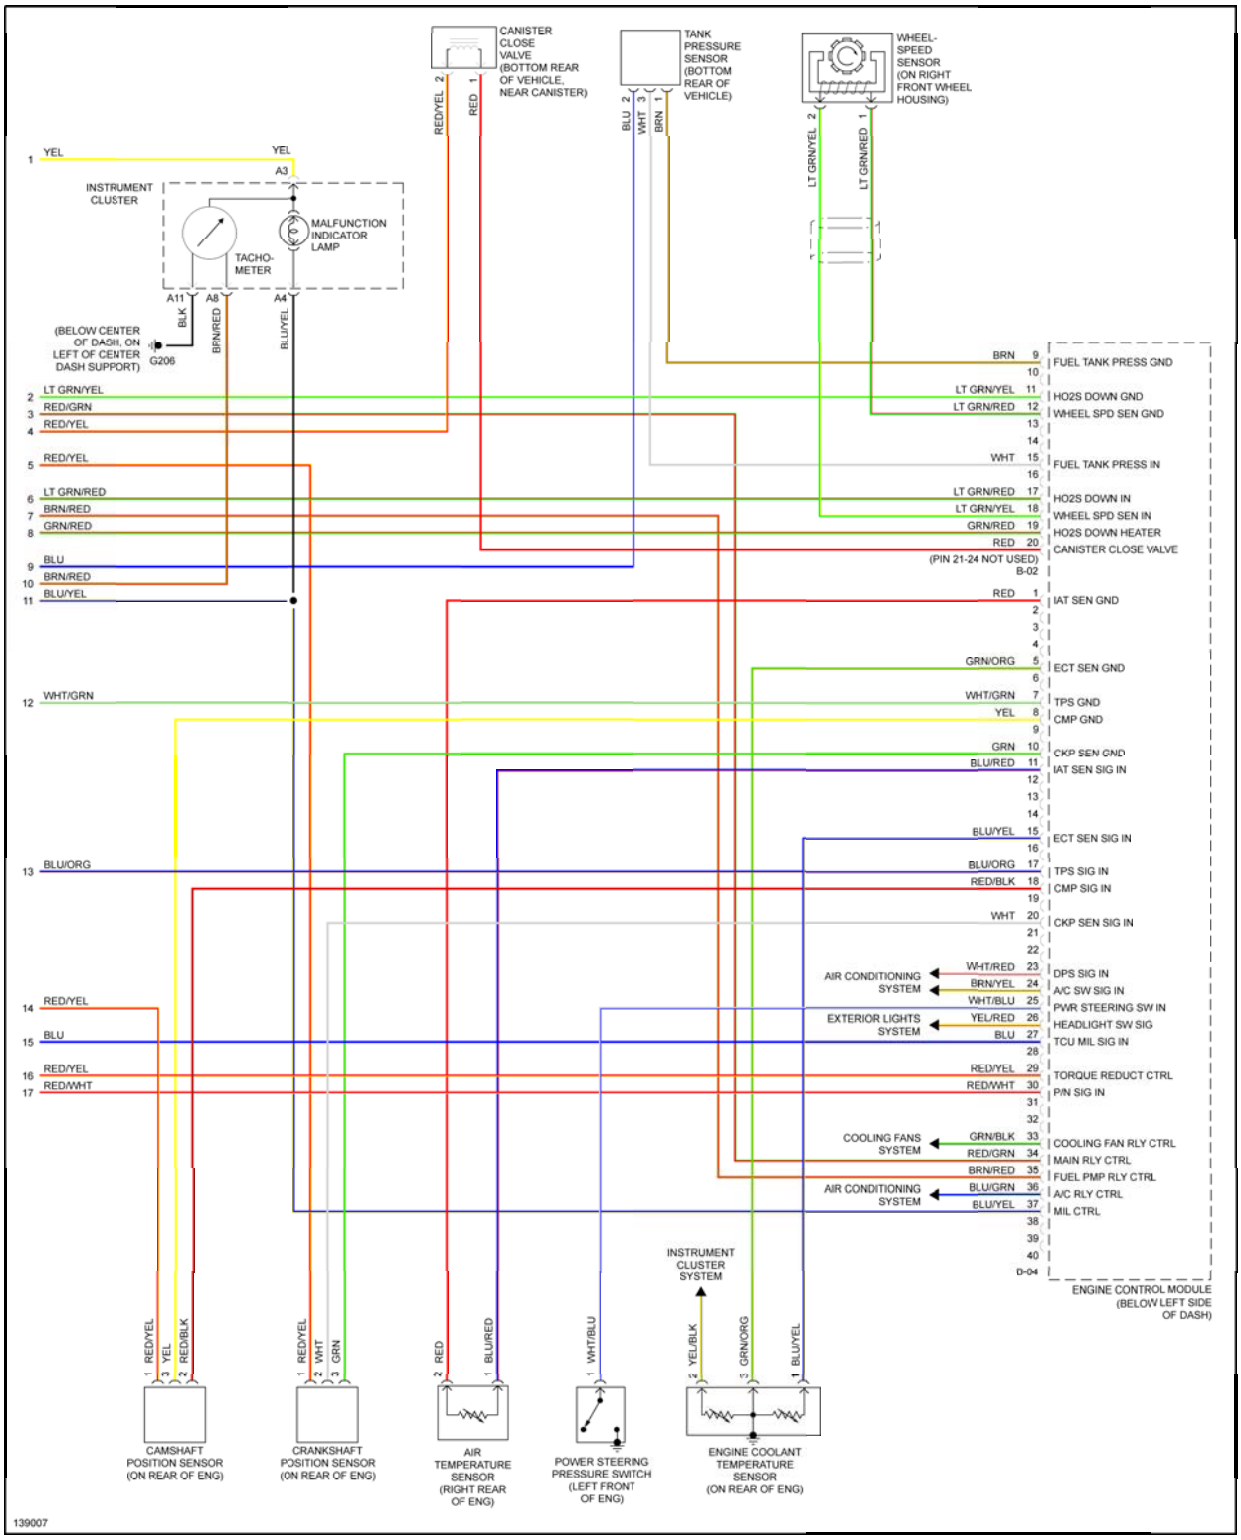
CANISTER CLOSE VALVE (BOTTOM REAR OF VEHICLE, NEAR CANISTER)
TANK PRESSURE SENSOR (BOTTOM REAR OF VEHICLE)
WHEEL-SPEED SENSOR (ON RIGHT FRONT WHEEL HOUSING)
INSTRUMENT CLUSTER
TACHO-METER
MALFUNCTION INDICATOR LAMP
(BELOW CENTER OF DASH, ON LEFT OF CENTER DASH SUPPORT)
G206
FUEL TANK PRESS GND
HO2S DOWN GND
WHEEL SPD SEN GND
FUEL TANK PRESS IN
HO2S DOWN IN
WHEEL SPD SEN IN
HO2S DOWN HEATER
CANISTER CLOSE VALVE
(PIN 21-24 NOT USED)
B-02
IAT SEN GND
ECT SEN GND
TPS GND
CMP GND
CKP SEN GND
IAT SEN SIG IN
ECT SEN SIG IN
TPS SIG IN
CMP SIG IN
CKP SEN SIG IN
AIR CONDITIONING SYSTEM
DPS SIG IN
A/C SW SIG IN
PWR STEERING SW IN
EXTERIOR LIGHTS SYSTEM
HEADLIGHT SW SIG
TCU MIL SIG IN
TORQUE REDUCT CTRL
P/N SIG IN
COOLING FANS SYSTEM
COOLING FAN RLY CTRL
MAIN RLY CTRL
FUEL PMP RLY CTRL
AIR CONDITIONING SYSTEM
A/C RLY CTRL
MIL CTRL
D-04
ENGINE CONTROL MODULE (BELOW LEFT SIDE OF DASH)
INSTRUMENT CLUSTER SYSTEM
CAMSHAFT POSITION SENSOR (ON REAR OF ENG)
CRANKSHAFT POSITION SENSOR (ON REAR OF ENG)
AIR TEMPERATURE SENSOR (RIGHT REAR OF ENG)
POWER STEERING PRESSURE SWITCH (LEFT FRONT OF ENG)
ENGINE COOLANT TEMPERATURE SENSOR (ON REAR OF ENG)
139007

**Fig. 9: 1.5L, Engine Performance Circuits (3 of 3)**

# EXTERIOR LIGHTS

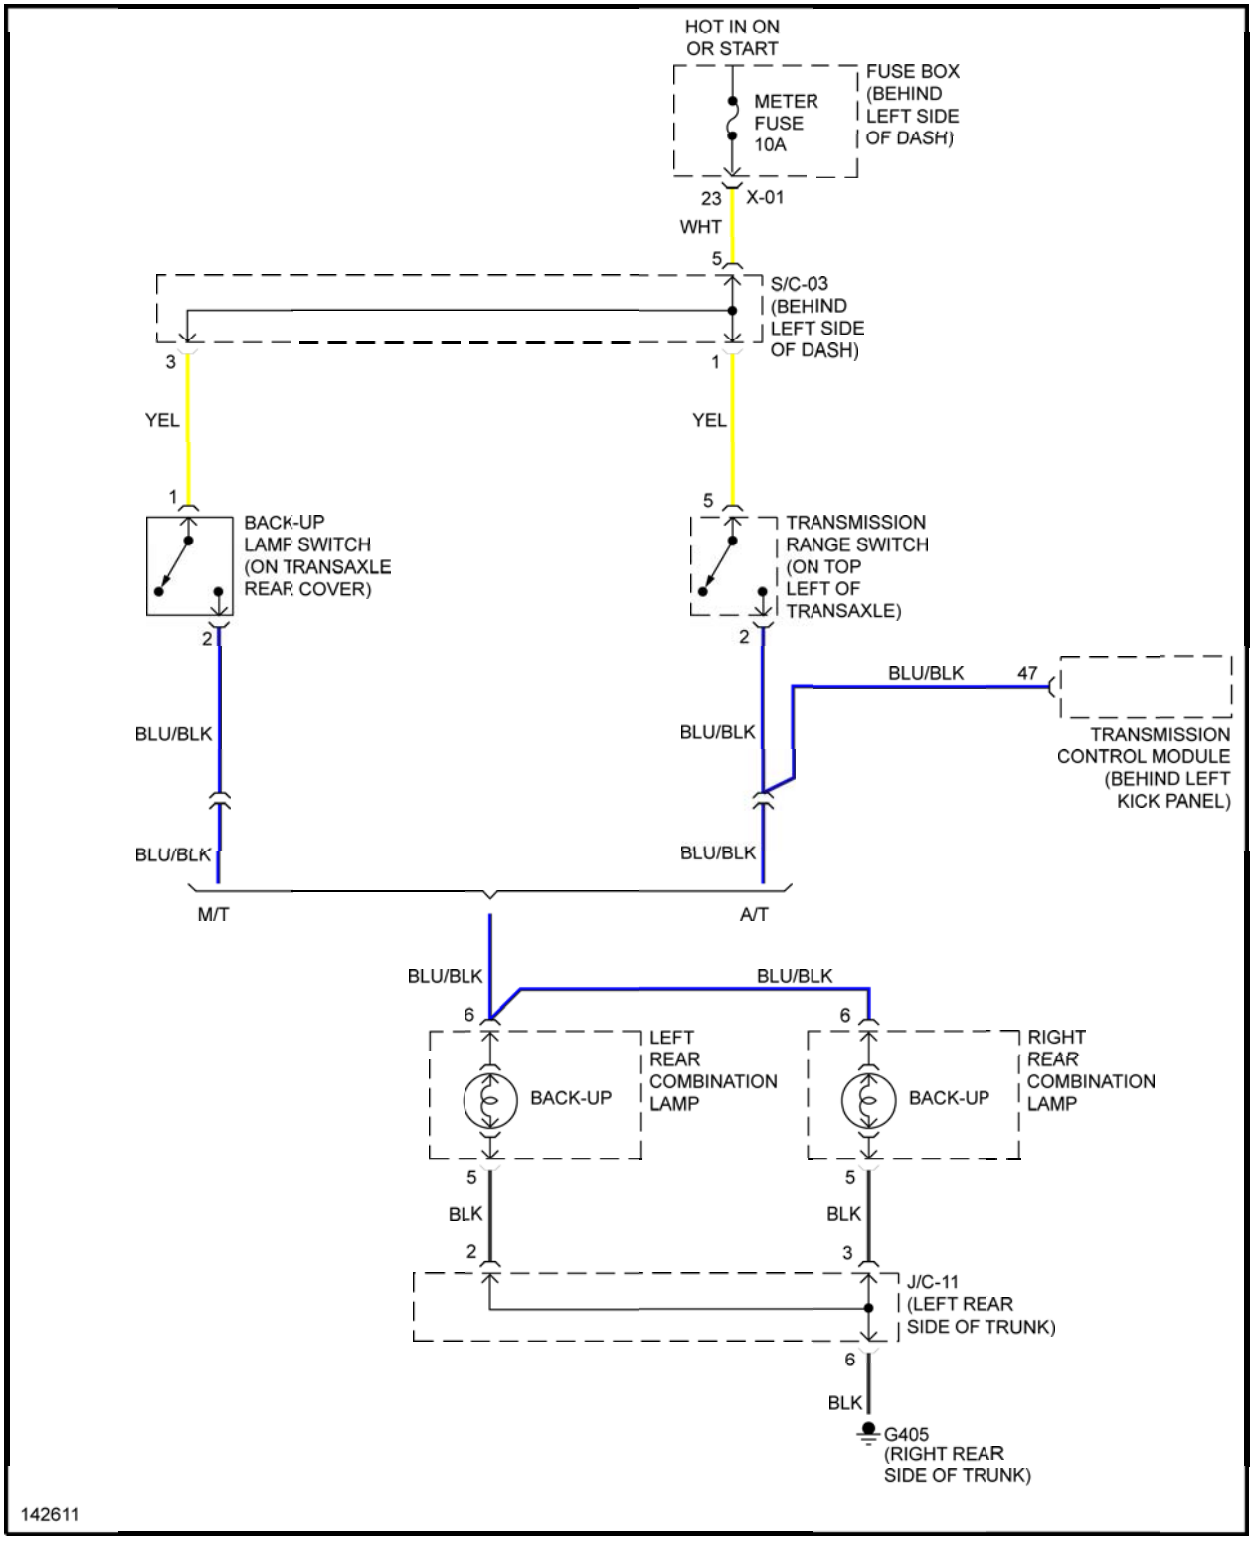
HOT IN ON OR START
METER FUSE 10A
FUSE BOX (BEHIND LEFT SIDE OF DASH)
23
X-01
WHT
5
S/C-03 (BEHIND LEFT SIDE OF DASH)
3
1
YEL
YEL
1
5
BACK-UP LAMP SWITCH (ON TRANSAXLE REAR COVER)
TRANSMISSION RANGE SWITCH (ON TOP LEFT OF TRANSAXLE)
2
2
BLU/BLK
47
TRANSMISSION CONTROL MODULE (BEHIND LEFT KICK PANEL)
BLU/BLK
BLU/BLK
BLU/BLK
BLU/BLK
M/T
A/T
BLU/BLK
BLU/BLK
6
6
BACK-UP
LEFT REAR COMBINATION LAMP
BACK-UP
RIGHT REAR COMBINATION LAMP
5
5
BLK
BLK
2
3
J/C-11 (LEFT REAR SIDE OF TRUNK)
6
BLK
G405 (RIGHT REAR SIDE OF TRUNK)
142611

**Fig. 10: Back-up Lamps Circuit**

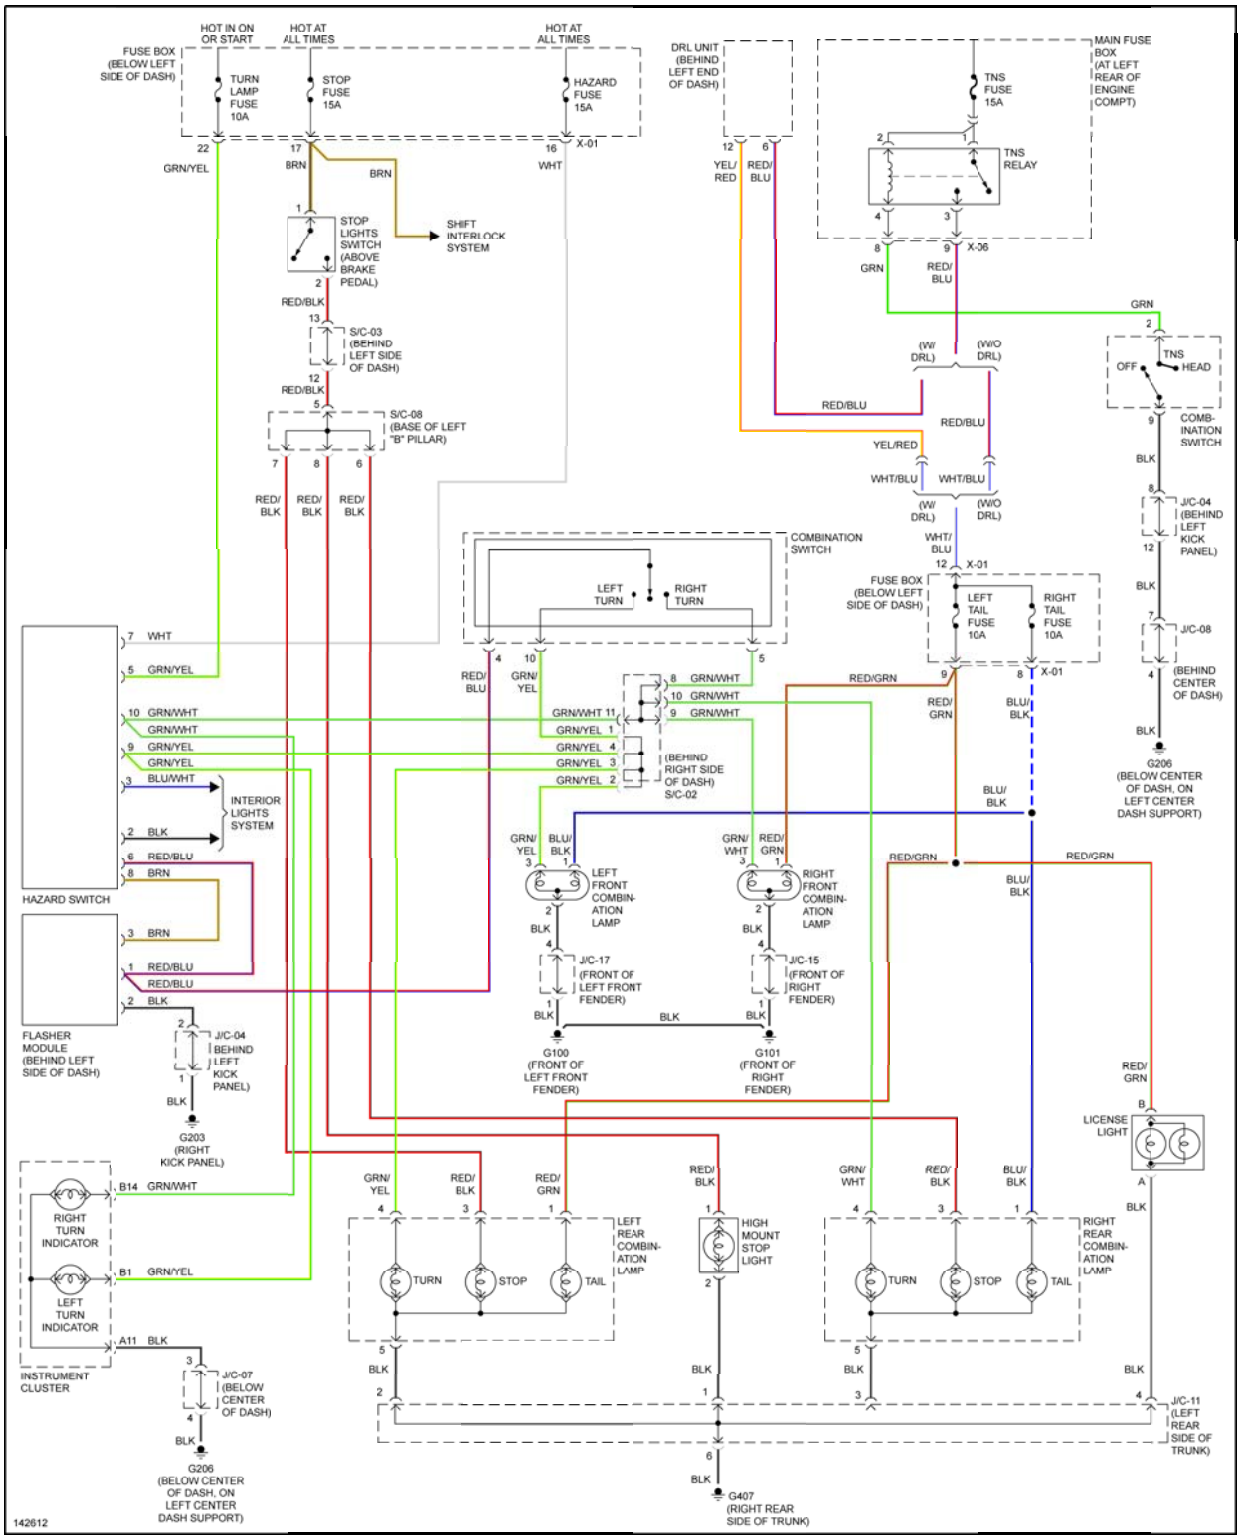
HOT IN ON OR START
HOT AT ALL TIMES
HOT AT ALL TIMES
FUSE BOX (BELOW LEFT SIDE OF DASH)
TURN LAMP FUSE 10A
STOP FUSE 15A
HAZARD FUSE 15A
22
17
16
X-01
GRN/YEL
BRN
BRN
WHT
STOP LIGHTS SWITCH (ABOVE BRAKE PEDAL)
SHIFT INTERLOCK SYSTEM
RED/BLK
S/C-03 (BEHIND LEFT SIDE OF DASH)
S/C-08 (BASE OF LEFT "B" PILLAR)
RED/BLK
RED/BLK
RED/BLK
DRL UNIT (BEHIND LEFT END OF DASH)
YEL/RED
RED/BLU
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
TNS FUSE 15A
TNS RELAY
X-06
GRN
RED/BLU
GRN
TNS
OFF
HEAD
COMBINATION SWITCH
(W/ DRL)
(W/O DRL)
RED/BLU
RED/BLU
YEL/RED
WHT/BLU
WHT/BLU
(W/ DRL)
(W/O DRL)
WHT/BLU
X-01
J/C-04 (BEHIND LEFT KICK PANEL)
J/C-08
(BEHIND CENTER OF DASH)
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
COMBINATION SWITCH
LEFT TURN
RIGHT TURN
FUSE BOX (BELOW LEFT SIDE OF DASH)
LEFT TAIL FUSE 10A
RIGHT TAIL FUSE 10A
X-01
RED/BLU
GRN/YEL
RED/GRN
RED/GRN
BLU/BLK
BLU/BLK
WHT
GRN/YEL
GRN/WHT
GRN/WHT
GRN/YEL
GRN/YEL
BLU/WHT
BLK
RED/BLU
BRN
HAZARD SWITCH
INTERIOR LIGHTS SYSTEM
(BEHIND RIGHT SIDE OF DASH) S/C-02
GRN/WHT
GRN/YEL
GRN/YEL
GRN/YEL
BRN
RED/BLU
RED/BLU
BLK
FLASHER MODULE (BEHIND LEFT SIDE OF DASH)
J/C-04 BEHIND LEFT KICK PANEL
G203 (RIGHT KICK PANEL)
LEFT FRONT COMBIN-ATION LAMP
RIGHT FRONT COMBIN-ATION LAMP
J/C-17 (FRONT OF LEFT FRONT FENDER)
J/C-15 (FRONT OF RIGHT FENDER)
G100 (FRONT OF LEFT FRONT FENDER)
G101 (FRONT OF RIGHT FENDER)
RED/GRN
BLU/BLK
RED/GRN
LICENSE LIGHT
B14 GRN/WHT
B1 GRN/YEL
A11 BLK
RIGHT TURN INDICATOR
LEFT TURN INDICATOR
INSTRUMENT CLUSTER
J/C-07 (BELOW CENTER OF DASH)
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
LEFT REAR COMBIN-ATION LAMP
HIGH MOUNT STOP LIGHT
RIGHT REAR COMBIN-ATION LAMP
TURN
STOP
TAIL
J/C-11 (LEFT REAR SIDE OF TRUNK)
G407 (RIGHT REAR SIDE OF TRUNK)
142612

**Fig. 11: Exterior Lamps Circuit**

## GROUND DISTRIBUTION

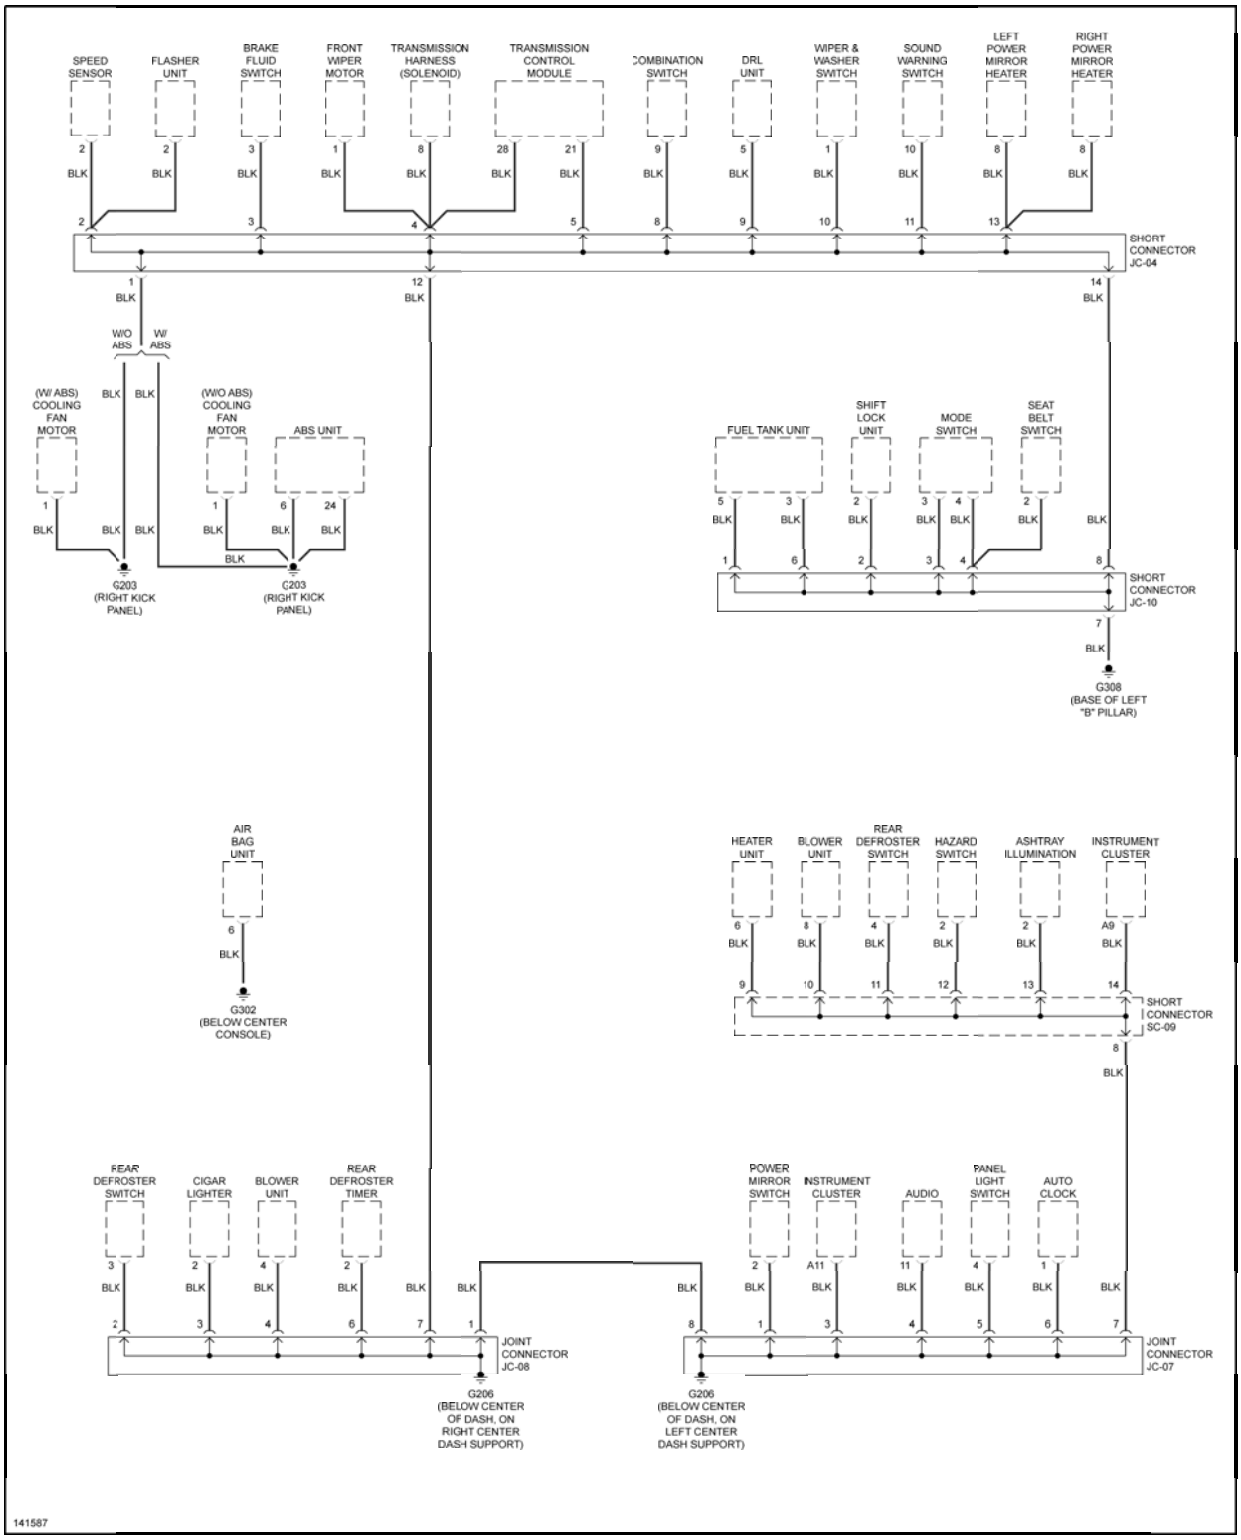
SPEED SENSOR
FLASHER UNIT
BRAKE FLUID SWITCH
FRONT WIPER MOTOR
TRANSMISSION HARNESS (SOLENOID)
TRANSMISSION CONTROL MODULE
COMBINATION SWITCH
DRL UNIT
WIPER & WASHER SWITCH
SOUND WARNING SWITCH
LEFT POWER MIRROR HEATER
RIGHT POWER MIRROR HEATER
SHORT CONNECTOR JC-04
W/O ABS
W/ ABS
(W/ ABS) COOLING FAN MOTOR
(W/O ABS) COOLING FAN MOTOR
ABS UNIT
G203 (RIGHT KICK PANEL)
G203 (RIGHT KICK PANEL)
FUEL TANK UNIT
SHIFT LOCK UNIT
MODE SWITCH
SEAT BELT SWITCH
SHORT CONNECTOR JC-10
G308 (BASE OF LEFT "B" PILLAR)
AIR BAG UNIT
G302 (BELOW CENTER CONSOLE)
HEATER UNIT
BLOWER UNIT
REAR DEFROSTER SWITCH
HAZARD SWITCH
ASHTRAY ILLUMINATION
INSTRUMENT CLUSTER
SHORT CONNECTOR SC-09
REAR DEFROSTER SWITCH
CIGAR LIGHTER
BLOWER UNIT
REAR DEFROSTER TIMER
JOINT CONNECTOR JC-08
G206 (BELOW CENTER OF DASH, ON RIGHT CENTER DASH SUPPORT)
POWER MIRROR SWITCH
INSTRUMENT CLUSTER
AUDIO
PANEL LIGHT SWITCH
AUTO CLOCK
JOINT CONNECTOR JC-07
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
141587

**Fig. 12: Ground Distribution Circuit (1 of 2)**

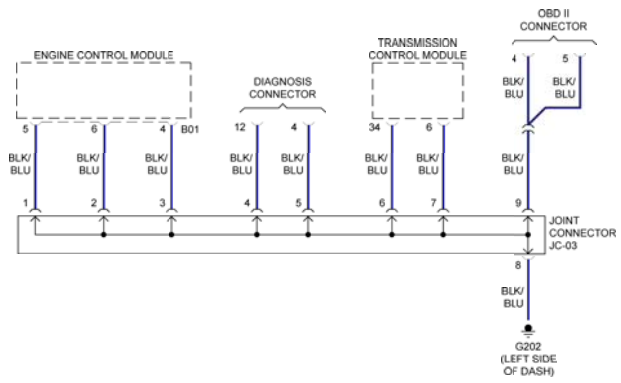
ENGINE CONTROL MODULE
DIAGNOSIS CONNECTOR
TRANSMISSION CONTROL MODULE
OBD II CONNECTOR
5
6
4
B01
12
4
34
6
4
5
BLK/ BLU
1
2
3
4
5
6
7
9
JOINT CONNECTOR JC-03
8
G202 (LEFT SIDE OF DASH)

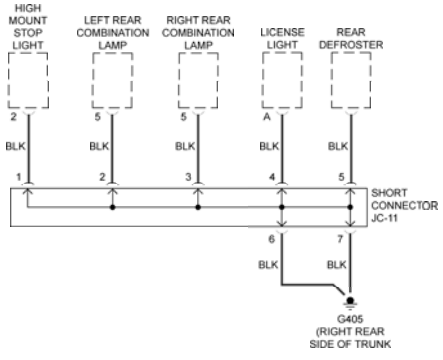
HIGH MOUNT STOP LIGHT
LEFT REAR COMBINATION LAMP
RIGHT REAR COMBINATION LAMP
LICENSE LIGHT
REAR DEFROSTER
2
5
5
A
BLK
1
2
3
4
5
SHORT CONNECTOR JC-11
6
7
G405 (RIGHT REAR SIDE OF TRUNK

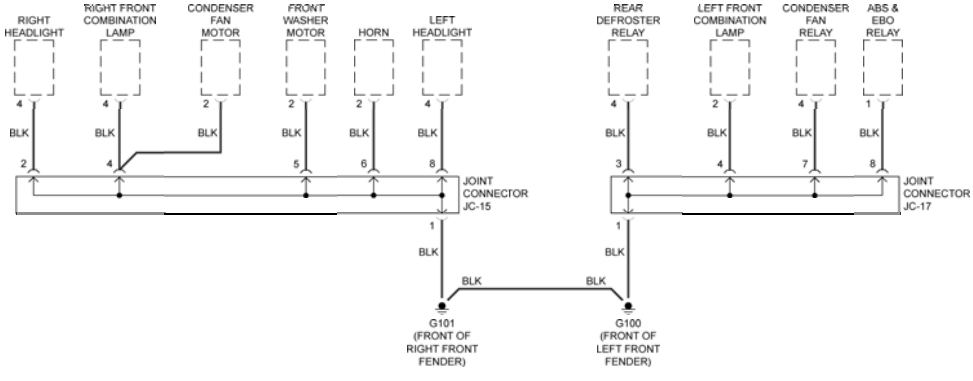
RIGHT HEADLIGHT
RIGHT FRONT COMBINATION LAMP
CONDENSER FAN MOTOR
FRONT WASHER MOTOR
HORN
LEFT HEADLIGHT
REAR DEFROSTER RELAY
LEFT FRONT COMBINATION LAMP
CONDENSER FAN RELAY
ABS & EBO RELAY
4
2
BLK
3
4
5
6
7
8
JOINT CONNECTOR JC-15
JOINT CONNECTOR JC-17
1
G101 (FRONT OF RIGHT FRONT FENDER)
G100 (FRONT OF LEFT FRONT FENDER)

141588

**Fig. 13: Ground Distribution Circuit (2 of 2)**

## HEADLIGHTS

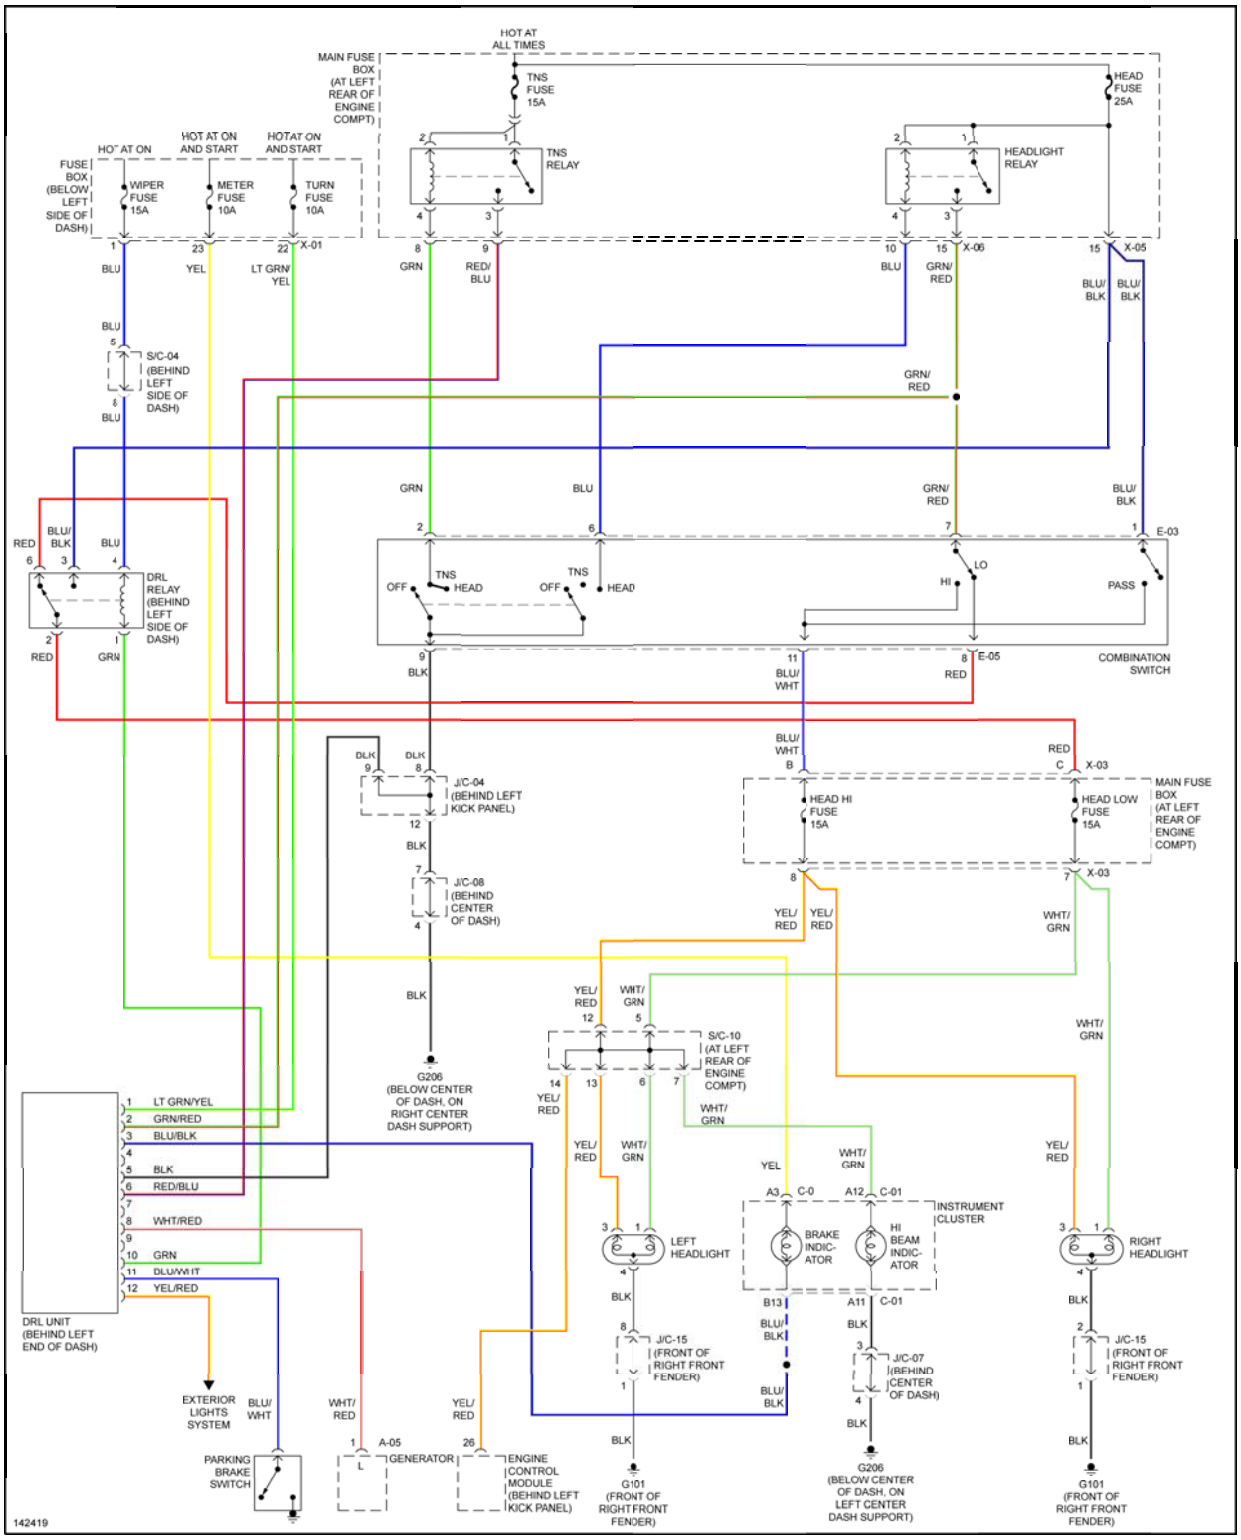
HOT AT ALL TIMES
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
TNS FUSE 15A
HEAD FUSE 25A
TNS RELAY
HEADLIGHT RELAY
FUSE BOX (BELOW LEFT SIDE OF DASH)
HOT AT ON
HOT AT ON AND START
HOT AT ON AND START
WIPER FUSE 15A
METER FUSE 10A
TURN FUSE 10A
X-01
X-05
X-06
S/C-04 (BEHIND LEFT SIDE OF DASH)
DRL RELAY (BEHIND LEFT SIDE OF DASH)
E-03
E-05
COMBINATION SWITCH
TNS
HEAD
LO
HI
PASS
OFF
J/C-04 (BEHIND LEFT KICK PANEL)
J/C-08 (BEHIND CENTER OF DASH)
HEAD HI FUSE 15A
HEAD LOW FUSE 15A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
G206 (BELOW CENTER OF DASH, ON RIGHT CENTER DASH SUPPORT)
S/C-10 (AT LEFT REAR OF ENGINE COMPT)
DRL UNIT (BEHIND LEFT END OF DASH)
LT GRN/YEL
GRN/RED
BLU/BLK
BLK
RED/BLU
WHT/RED
GRN
BLU/WHT
YEL/RED
EXTERIOR LIGHTS SYSTEM
PARKING BRAKE SWITCH
A-05 GENERATOR
ENGINE CONTROL MODULE (BEHIND LEFT KICK PANEL)
LEFT HEADLIGHT
RIGHT HEADLIGHT
INSTRUMENT CLUSTER
BRAKE INDICATOR
HI BEAM INDICATOR
J/C-15 (FRONT OF RIGHT FRONT FENDER)
J/C-07 (BEHIND CENTER OF DASH)
G101 (FRONT OF RIGHT FRONT FENDER)
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
142419

**Fig. 14: Headlight Circuit, W/ DRL**

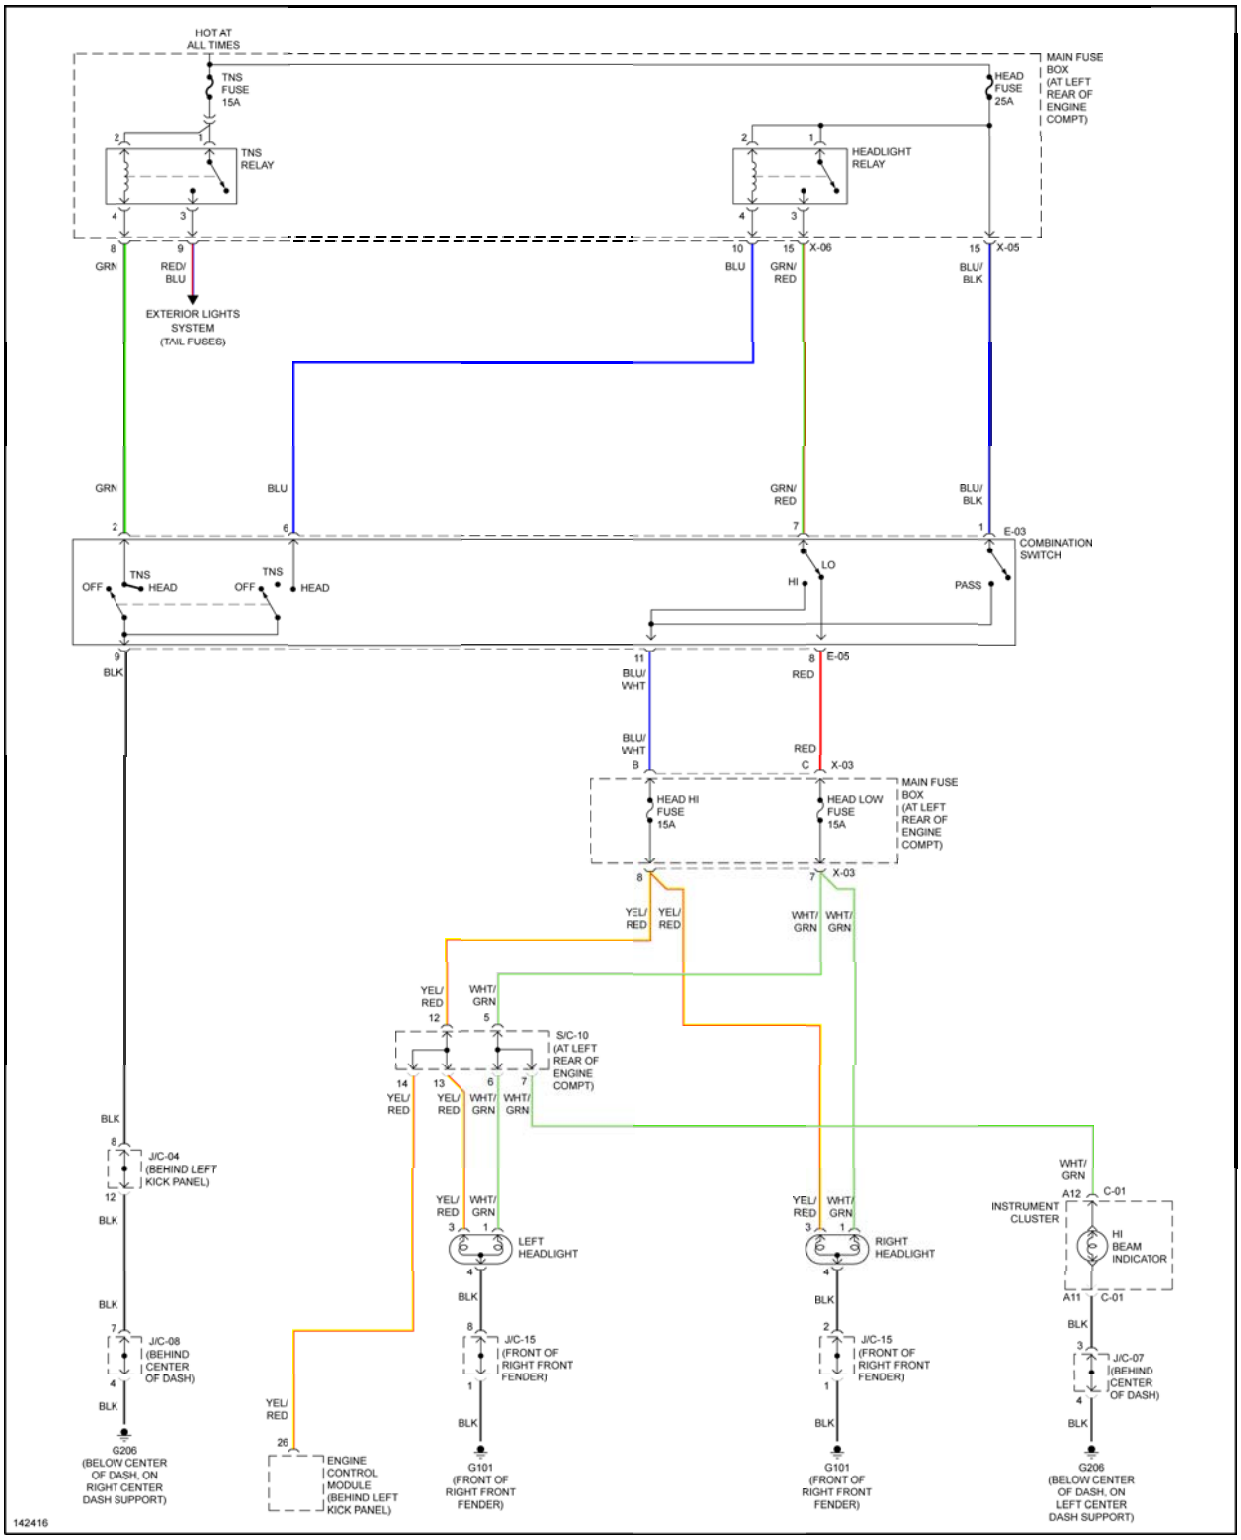
HOT AT ALL TIMES
TNS FUSE 15A
TNS RELAY
HEAD FUSE 25A
HEADLIGHT RELAY
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
EXTERIOR LIGHTS SYSTEM (TAIL FUSES)
X-06
X-05
COMBINATION SWITCH
E-03
OFF
TNS
HEAD
HI
LO
PASS
E-05
X-03
HEAD HI FUSE 15A
HEAD LOW FUSE 15A
S/C-10 (AT LEFT REAR OF ENGINE COMPT)
J/C-04 (BEHIND LEFT KICK PANEL)
J/C-08 (BEHIND CENTER OF DASH)
J/C-15 (FRONT OF RIGHT FRONT FENDER)
J/C-07 (BEHIND CENTER OF DASH)
LEFT HEADLIGHT
RIGHT HEADLIGHT
INSTRUMENT CLUSTER
HI BEAM INDICATOR
C-01
ENGINE CONTROL MODULE (BEHIND LEFT KICK PANEL)
G206 (BELOW CENTER OF DASH, ON RIGHT CENTER DASH SUPPORT)
G101 (FRONT OF RIGHT FRONT FENDER)
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
142416

**Fig. 15: Headlight Circuit, W/O DRL**

## HORN

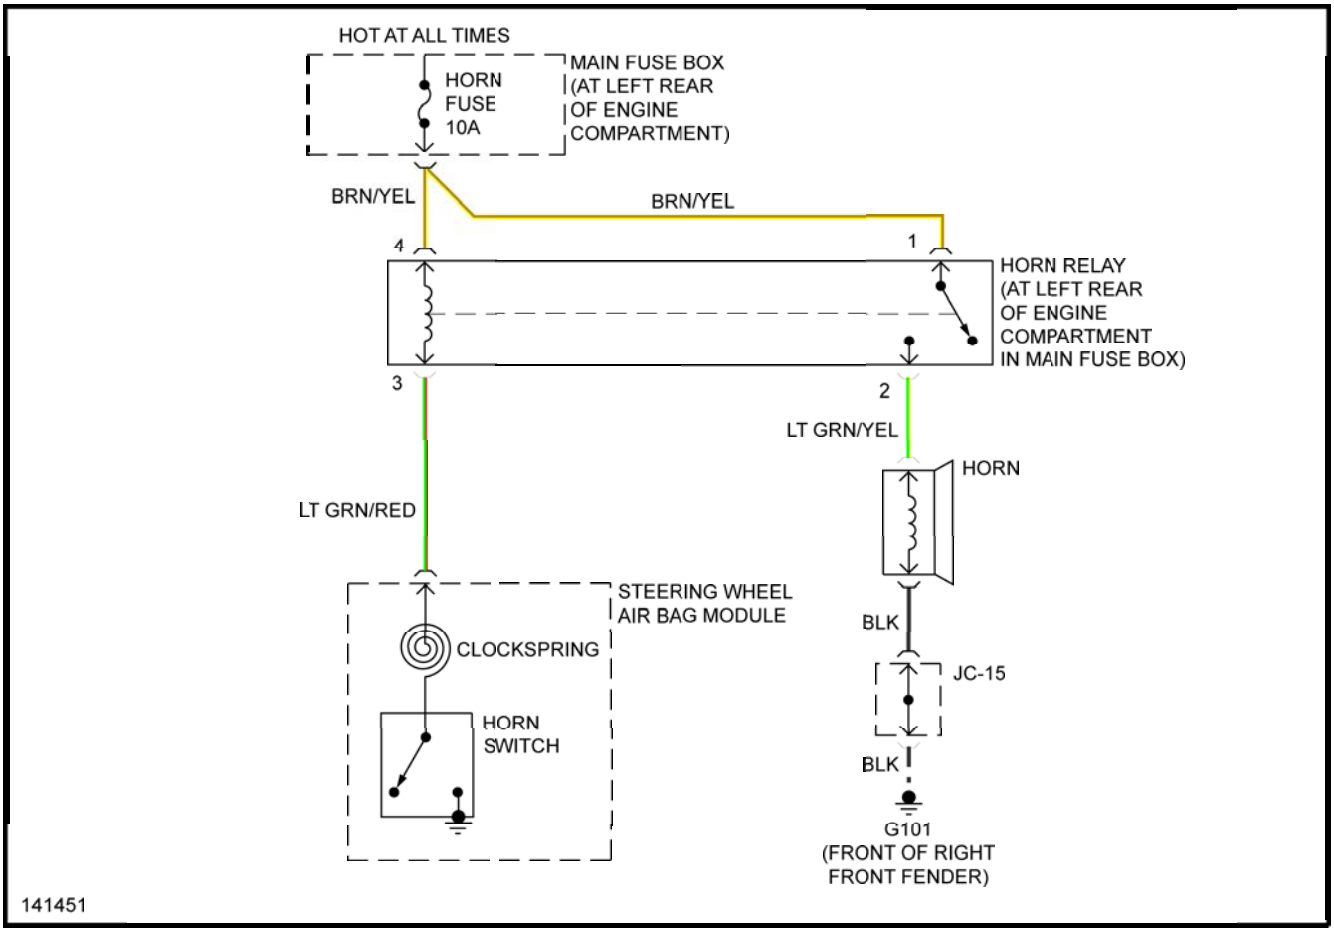
HOT AT ALL TIMES
HORN
FUSE
10A
MAIN FUSE BOX
(AT LEFT REAR
OF ENGINE
COMPARTMENT)
BRN/YEL
BRN/YEL
4
1
HORN RELAY
(AT LEFT REAR
OF ENGINE
COMPARTMENT
IN MAIN FUSE BOX)
3
2
LT GRN/YEL
HORN
LT GRN/RED
STEERING WHEEL
AIR BAG MODULE
CLOCKSPRING
HORN
SWITCH
BLK
JC-15
BLK
G101
(FRONT OF RIGHT
FRONT FENDER)
141451

**Fig. 16: Horn Circuit**

## INSTRUMENT CLUSTER

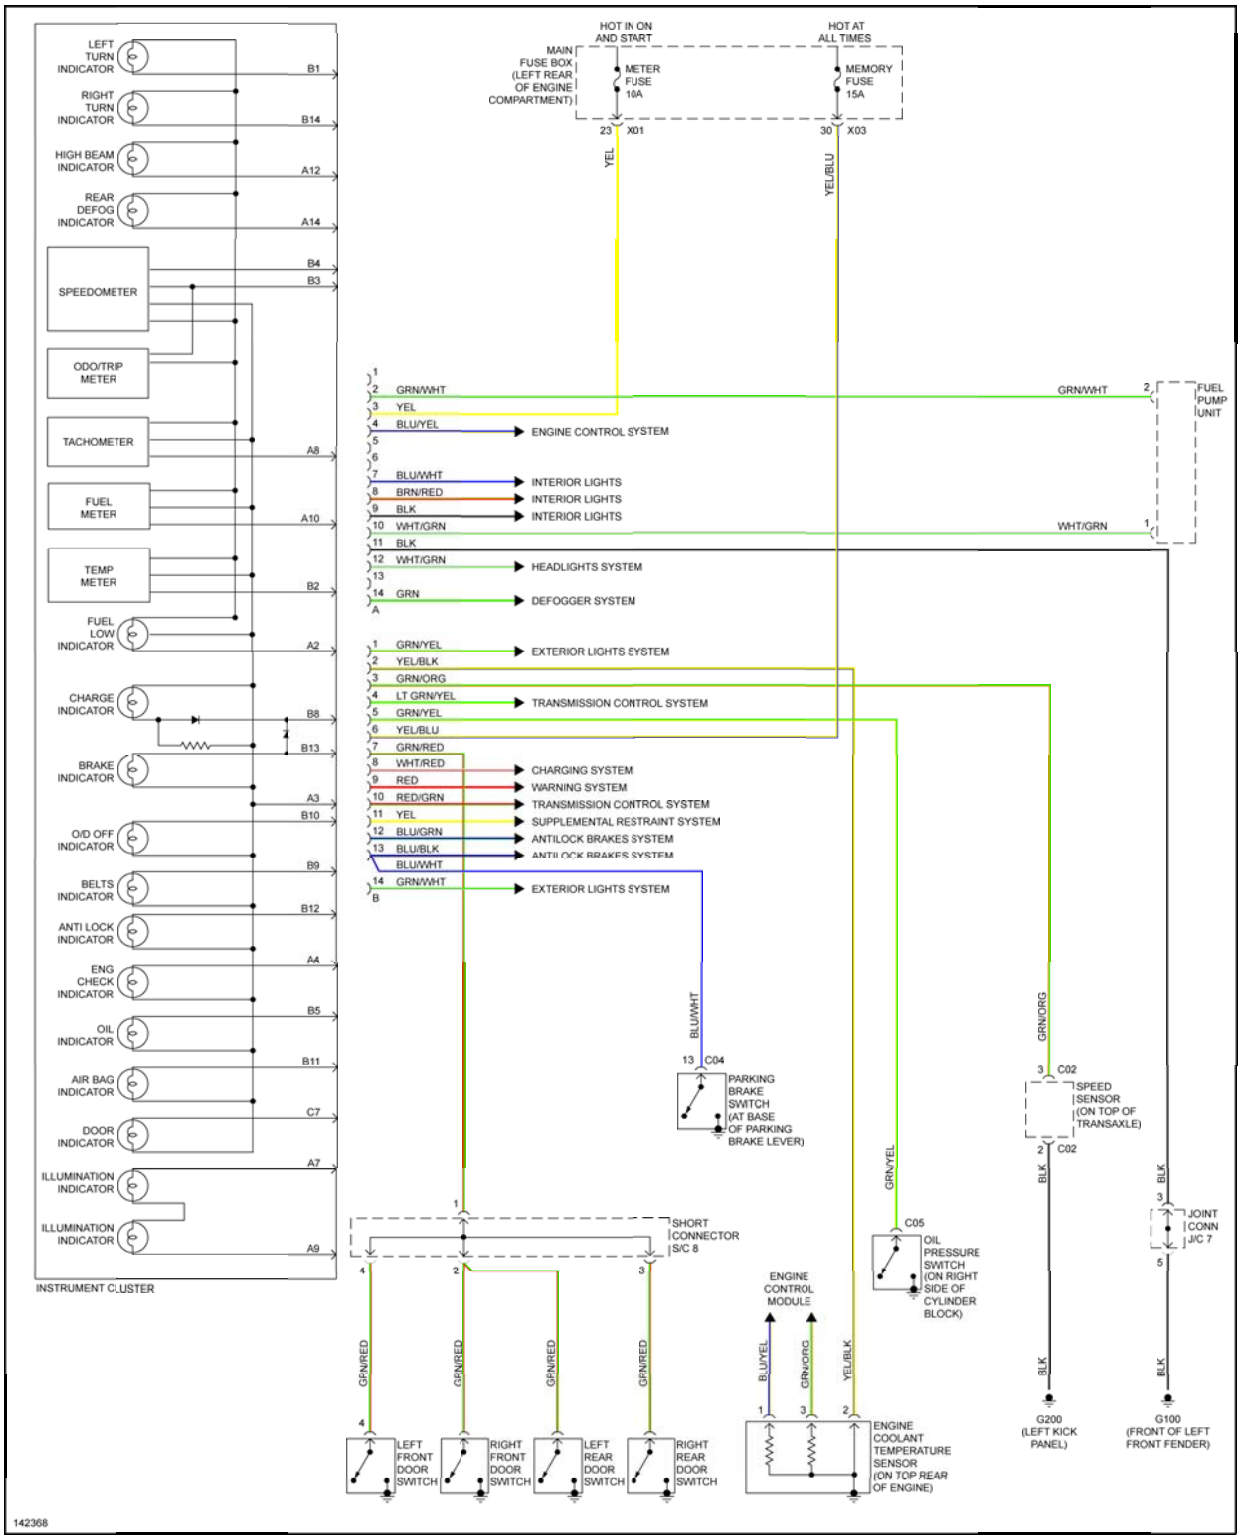
LEFT TURN INDICATOR
RIGHT TURN INDICATOR
HIGH BEAM INDICATOR
REAR DEFOG INDICATOR
SPEEDOMETER
ODO/TRIP METER
TACHOMETER
FUEL METER
TEMP METER
FUEL LOW INDICATOR
CHARGE INDICATOR
BRAKE INDICATOR
O/D OFF INDICATOR
BELTS INDICATOR
ANTI LOCK INDICATOR
ENG CHECK INDICATOR
OIL INDICATOR
AIR BAG INDICATOR
DOOR INDICATOR
ILLUMINATION INDICATOR
ILLUMINATION INDICATOR
INSTRUMENT CLUSTER
B1
B14
A12
A14
B4
B3
A8
A10
B2
A2
B8
B13
A3
B10
B9
B12
A4
B5
B11
C7
A7
A9
HOT IN ON AND START
HOT AT ALL TIMES
MAIN FUSE BOX (LEFT REAR OF ENGINE COMPARTMENT)
METER FUSE 10A
MEMORY FUSE 15A
23 X01
30 X03
YEL
YEL/BLU
GRN/WHT
YEL
BLU/YEL
ENGINE CONTROL SYSTEM
BLU/WHT
BRN/RED
BLK
INTERIOR LIGHTS
INTERIOR LIGHTS
INTERIOR LIGHTS
WHT/GRN
BLK
WHT/GRN
HEADLIGHTS SYSTEM
GRN
DEFOGGER SYSTEM
GRN/WHT
WHT/GRN
FUEL PUMP UNIT
GRN/YEL
YEL/BLK
GRN/ORG
LT GRN/YEL
GRN/YEL
YEL/BLU
GRN/RED
WHT/RED
RED
RED/GRN
YEL
BLU/GRN
BLU/BLK
BLU/WHT
GRN/WHT
EXTERIOR LIGHTS SYSTEM
TRANSMISSION CONTROL SYSTEM
CHARGING SYSTEM
WARNING SYSTEM
TRANSMISSION CONTROL SYSTEM
SUPPLEMENTAL RESTRAINT SYSTEM
ANTILOCK BRAKES SYSTEM
ANTILOCK BRAKES SYSTEM
EXTERIOR LIGHTS SYSTEM
BLU/WHT
C04
PARKING BRAKE SWITCH (AT BASE OF PARKING BRAKE LEVER)
GRN/ORG
C02
SPEED SENSOR (ON TOP OF TRANSAXLE)
C02
BLK
BLK
G200 (LEFT KICK PANEL)
BLK
JOINT CONN J/C 7
BLK
G100 (FRONT OF LEFT FRONT FENDER)
GRN/YEL
C05
OIL PRESSURE SWITCH (ON RIGHT SIDE OF CYLINDER BLOCK)
SHORT CONNECTOR S/C 8
GRN/RED
GRN/RED
GRN/RED
GRN/RED
LEFT FRONT DOOR SWITCH
RIGHT FRONT DOOR SWITCH
LEFT REAR DOOR SWITCH
RIGHT REAR DOOR SWITCH
ENGINE CONTROL MODULE
BLU/YEL
GRN/ORG
YEL/BLK
ENGINE COOLANT TEMPERATURE SENSOR (ON TOP REAR OF ENGINE)
142368

**Fig. 17: Instrument Cluster Circuit**

## INTERIOR LIGHTS

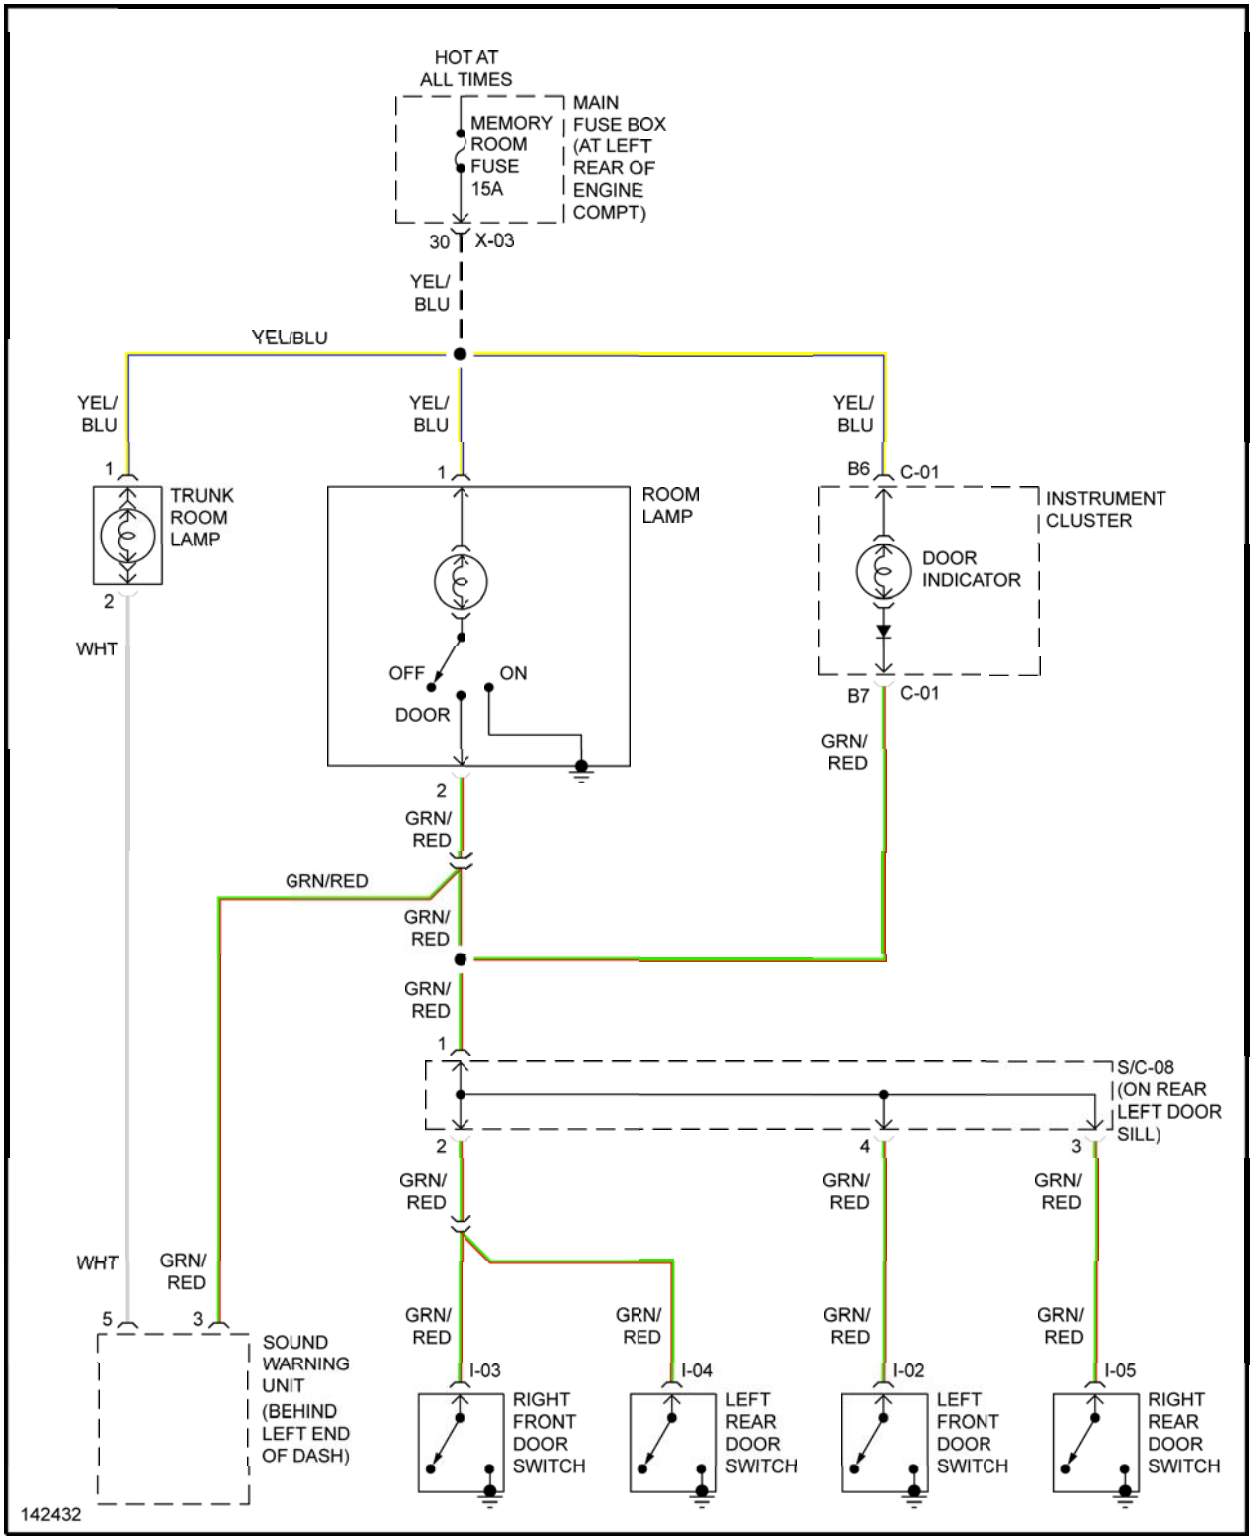
HOT AT ALL TIMES
MEMORY ROOM FUSE 15A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
30
X-03
YEL/BLU
YEL/BLU
YEL/BLU
YEL/BLU
YEL/BLU
1
TRUNK ROOM LAMP
2
WHT
1
ROOM LAMP
OFF
ON
DOOR
2
GRN/RED
B6
C-01
INSTRUMENT CLUSTER
DOOR INDICATOR
B7
C-01
GRN/RED
GRN/RED
GRN/RED
GRN/RED
1
S/C-08 (ON REAR LEFT DOOR SILL)
2
4
3
GRN/RED
GRN/RED
GRN/RED
WHT
GRN/RED
5
3
SOUND WARNING UNIT (BEHIND LEFT END OF DASH)
GRN/RED
GRN/RED
GRN/RED
GRN/RED
I-03
RIGHT FRONT DOOR SWITCH
I-04
LEFT REAR DOOR SWITCH
I-02
LEFT FRONT DOOR SWITCH
I-05
RIGHT REAR DOOR SWITCH
142432

**Fig. 18: Courtesy Lamps Circuit**

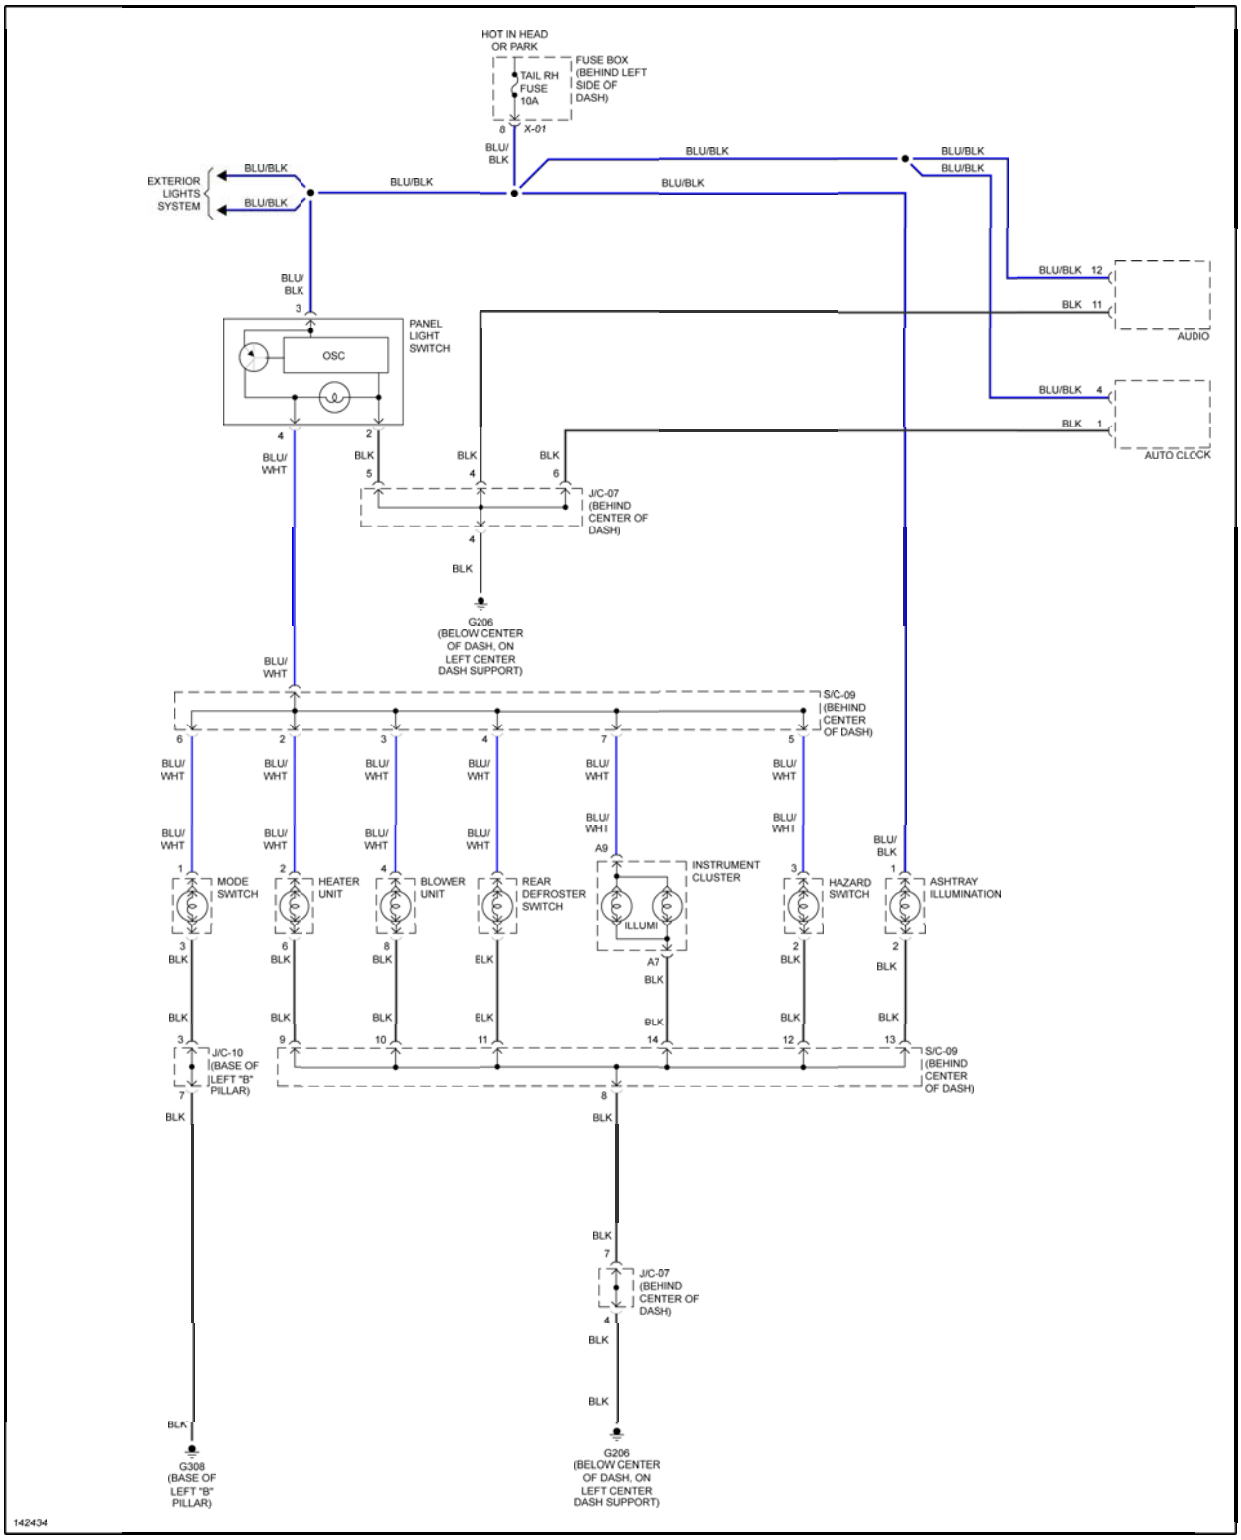
HOT IN HEAD OR PARK
FUSE BOX (BEHIND LEFT SIDE OF DASH)
TAIL RH FUSE 10A
X-01
EXTERIOR LIGHTS SYSTEM
BLU/BLK
BLU/ BLK
PANEL LIGHT SWITCH
OSC
AUDIO
AUTO CLOCK
J/C-07 (BEHIND CENTER OF DASH)
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
S/C-09 (BEHIND CENTER OF DASH)
MODE SWITCH
HEATER UNIT
BLOWER UNIT
REAR DEFROSTER SWITCH
INSTRUMENT CLUSTER
ILLUMI
HAZARD SWITCH
ASHTRAY ILLUMINATION
J/C-10 (BASE OF LEFT "B" PILLAR)
G308 (BASE OF LEFT "B" PILLAR)
BLK
BLU/ WHT
142434

**Fig. 19: Instrument Illumination Circuit**

## POWER DISTRIBUTION

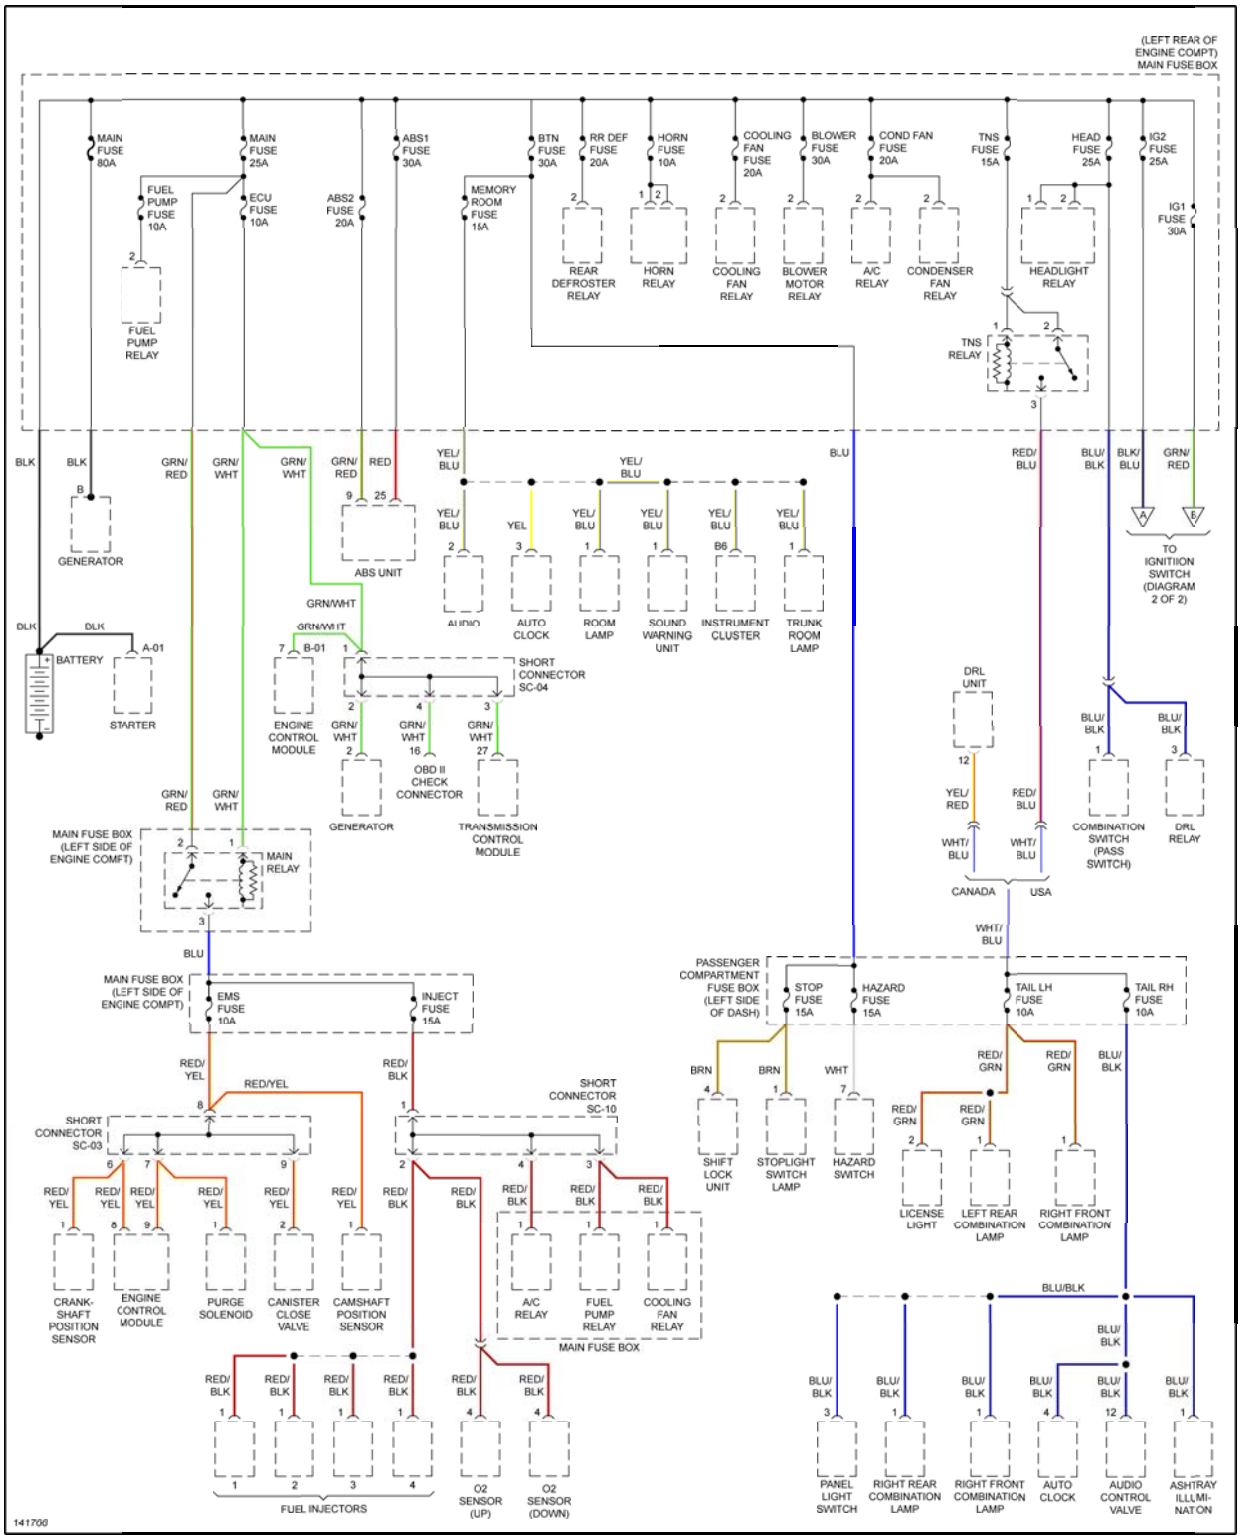
(LEFT REAR OF ENGINE COMPT) MAIN FUSE BOX
MAIN FUSE 80A
MAIN FUSE 25A
ABS1 FUSE 30A
BTN FUSE 30A
RR DEF FUSE 20A
HORN FUSE 10A
COOLING FAN FUSE 20A
BLOWER FUSE 30A
COND FAN FUSE 20A
TNS FUSE 15A
HEAD FUSE 25A
IG2 FUSE 25A
IG1 FUSE 30A
FUEL PUMP FUSE 10A
ECU FUSE 10A
ABS2 FUSE 20A
MEMORY ROOM FUSE 15A
FUEL PUMP RELAY
REAR DEFROSTER RELAY
HORN RELAY
COOLING FAN RELAY
BLOWER MOTOR RELAY
A/C RELAY
CONDENSER FAN RELAY
HEADLIGHT RELAY
TNS RELAY
GENERATOR
ABS UNIT
AUDIO
AUTO CLOCK
ROOM LAMP
SOUND WARNING UNIT
INSTRUMENT CLUSTER
TRUNK ROOM LAMP
TO IGNITION SWITCH (DIAGRAM 2 OF 2)
BATTERY
STARTER
ENGINE CONTROL MODULE
SHORT CONNECTOR SC-04
OBD II CHECK CONNECTOR
TRANSMISSION CONTROL MODULE
DRL UNIT
COMBINATION SWITCH (PASS SWITCH)
DRL RELAY
CANADA
USA
MAIN FUSE BOX (LEFT SIDE OF ENGINE COMPT)
MAIN RELAY
MAIN FUSE BOX (LEFT SIDE OF ENGINE COMPT)
EMS FUSE 10A
INJECT FUSE 15A
SHORT CONNECTOR SC-03
SHORT CONNECTOR SC-10
CRANK-SHAFT POSITION SENSOR
ENGINE CONTROL MODULE
PURGE SOLENOID
CANISTER CLOSE VALVE
CAMSHAFT POSITION SENSOR
A/C RELAY
FUEL PUMP RELAY
COOLING FAN RELAY
MAIN FUSE BOX
FUEL INJECTORS
O2 SENSOR (UP)
O2 SENSOR (DOWN)
PASSENGER COMPARTMENT FUSE BOX (LEFT SIDE OF DASH)
STOP FUSE 15A
HAZARD FUSE 15A
TAIL LH FUSE 10A
TAIL RH FUSE 10A
SHIFT LOCK UNIT
STOPLIGHT SWITCH LAMP
HAZARD SWITCH
LICENSE LIGHT
LEFT REAR COMBINATION LAMP
RIGHT FRONT COMBINATION LAMP
PANEL LIGHT SWITCH
RIGHT REAR COMBINATION LAMP
RIGHT FRONT COMBINATION LAMP
AUTO CLOCK
AUDIO CONTROL VALVE
ASHTRAY ILLUMI-NATION
141700

**Fig. 20: Power Distribution Circuit (1 of 2)**

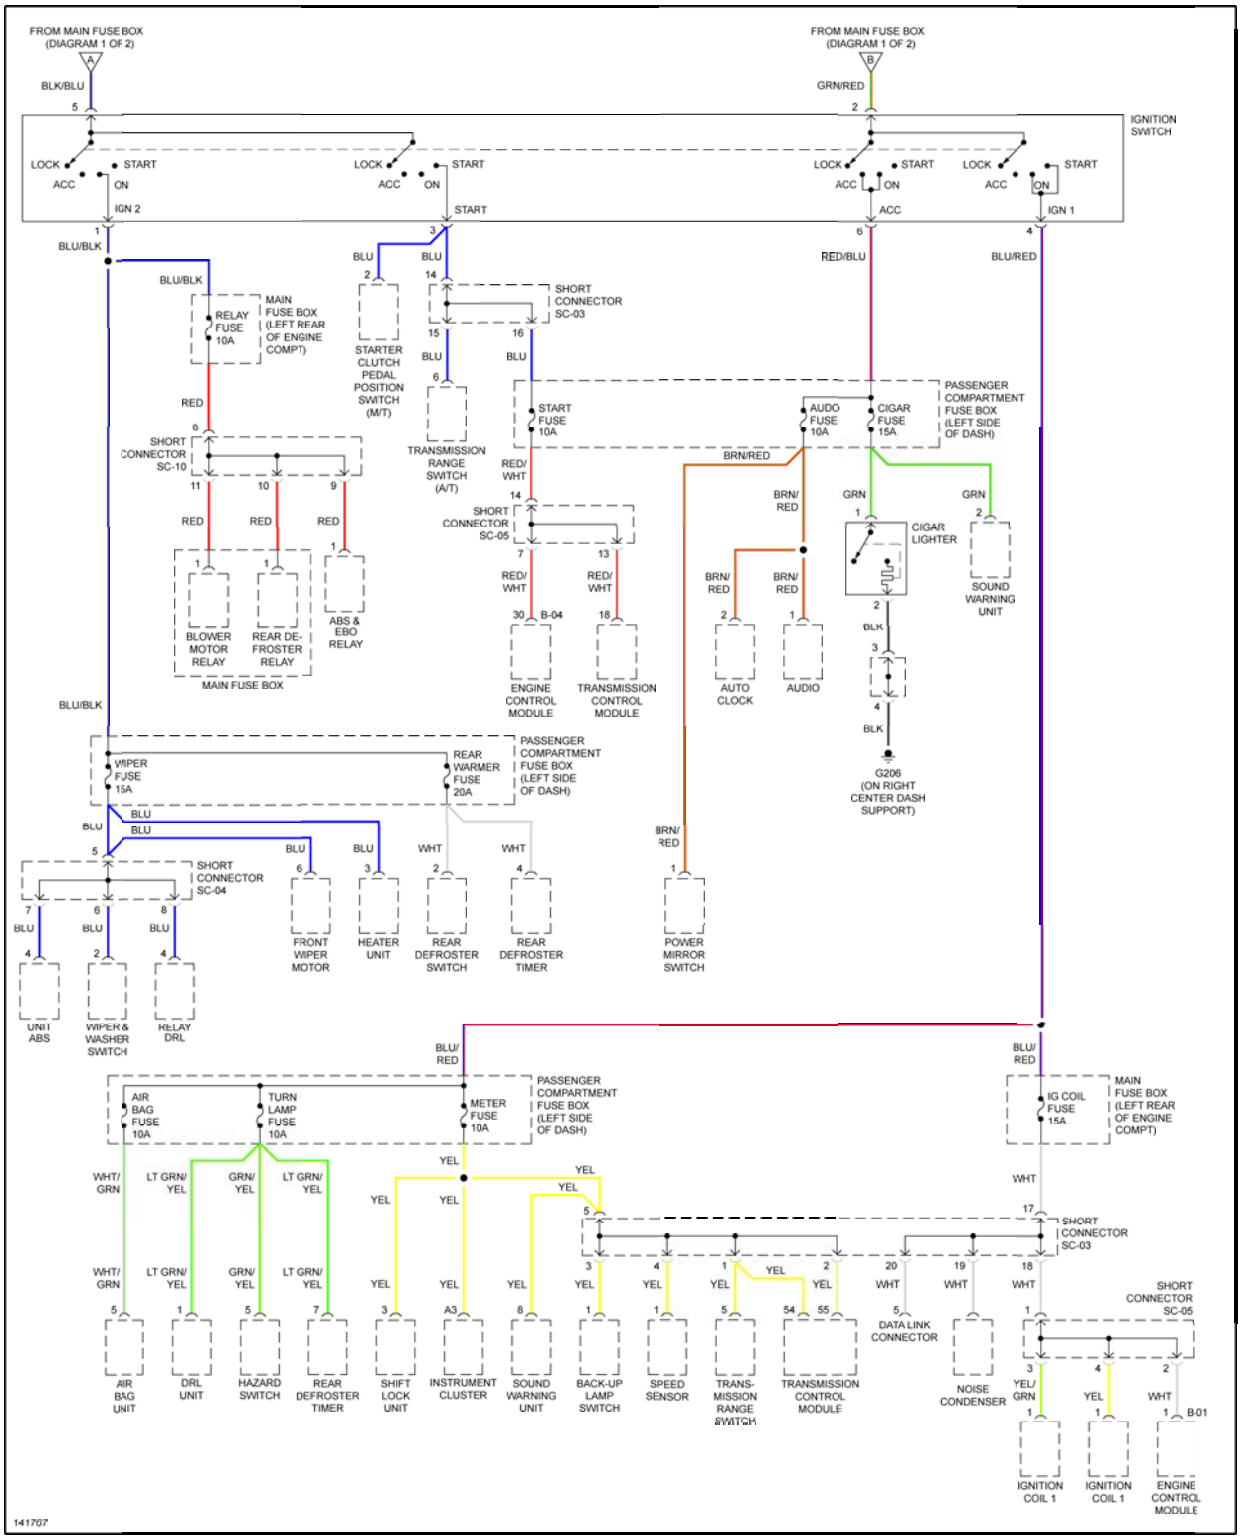
FROM MAIN FUSE BOX (DIAGRAM 1 OF 2)
A
BLK/BLU
5
FROM MAIN FUSE BOX (DIAGRAM 1 OF 2)
B
GRN/RED
2
IGNITION SWITCH
LOCK
ACC
START
ON
IGN 2
IGN 1
1
BLU/BLK
3
BLU
2
STARTER CLUTCH PEDAL POSITION SWITCH (M/T)
14
15
16
SHORT CONNECTOR SC-03
6
TRANSMISSION RANGE SWITCH (A/T)
6
RED/BLU
4
BLU/RED
MAIN FUSE BOX (LEFT REAR OF ENGINE COMPT)
RELAY
FUSE 10A
RED
8
SHORT CONNECTOR SC-10
11
10
9
BLOWER MOTOR RELAY
REAR DEFROSTER RELAY
ABS & EBC RELAY
START FUSE 10A
PASSENGER COMPARTMENT FUSE BOX (LEFT SIDE OF DASH)
AUDIO FUSE 10A
CIGAR FUSE 15A
BRN/RED
RED/WHT
SHORT CONNECTOR SC-05
7
13
30
B-04
18
ENGINE CONTROL MODULE
TRANSMISSION CONTROL MODULE
BRN/RED
BRN/RED
GRN
CIGAR LIGHTER
SOUND WARNING UNIT
AUTO CLOCK
AUDIO
BLK
G206 (ON RIGHT CENTER DASH SUPPORT)
WIPER FUSE 15A
REAR WARMER FUSE 20A
SHORT CONNECTOR SC-04
FRONT WIPER MOTOR
HEATER UNIT
REAR DEFROSTER SWITCH
REAR DEFROSTER TIMER
POWER MIRROR SWITCH
UNIT ABS
WIPER & WASHER SWITCH
RELAY DRL
AIR BAG FUSE 10A
TURN LAMP FUSE 10A
METER FUSE 10A
IG COIL FUSE 15A
WHT/GRN
LT GRN/YEL
GRN/YEL
YEL
WHT
17
SHORT CONNECTOR SC-03
AIR BAG UNIT
DRL UNIT
HAZARD SWITCH
REAR DEFROSTER TIMER
SHIFT LOCK UNIT
INSTRUMENT CLUSTER
SOUND WARNING UNIT
BACK-UP LAMP SWITCH
SPEED SENSOR
TRANS-MISSION RANGE SWITCH
TRANSMISSION CONTROL MODULE
DATA LINK CONNECTOR
NOISE CONDENSER
SHORT CONNECTOR SC-05
YEL/GRN
B-01
IGNITION COIL 1
IGNITION COIL 1
ENGINE CONTROL MODULE
141707

**Fig. 21: Power Distribution Circuit (2 of 2)**

## POWER MIRRORS

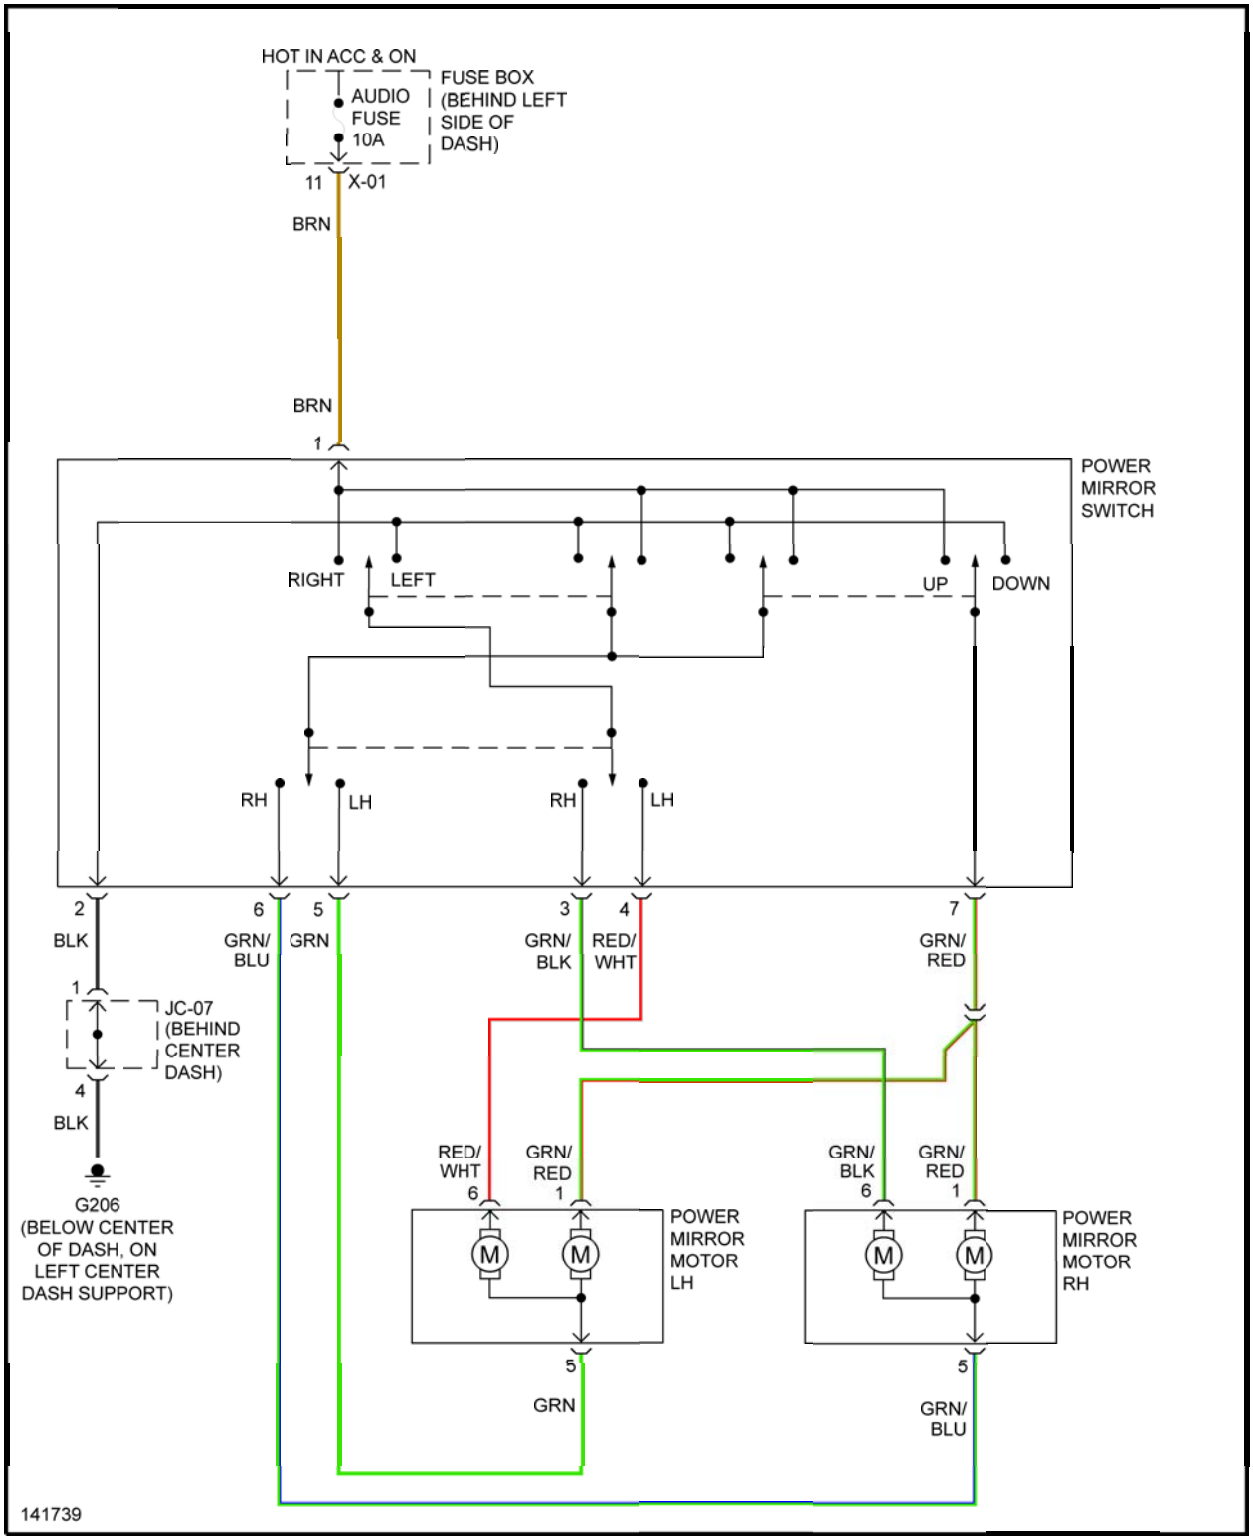
HOT IN ACC & ON
AUDIO FUSE 10A
FUSE BOX (BEHIND LEFT SIDE OF DASH)
11
X-01
BRN
BRN
1
POWER MIRROR SWITCH
RIGHT
LEFT
UP
DOWN
RH
LH
RH
LH
2
6
5
3
4
7
BLK
GRN/ BLU
GRN
GRN/ BLK
RED/ WHT
GRN/ RED
1
JC-07 (BEHIND CENTER DASH)
4
BLK
G206 (BELOW CENTER OF DASH, ON LEFT CENTER DASH SUPPORT)
RED/ WHT
6
GRN/ RED
1
GRN/ BLK
6
GRN/ RED
1
POWER MIRROR MOTOR LH
POWER MIRROR MOTOR RH
M
M
M
M
5
5
GRN
GRN/ BLU
141739

**Fig. 22: Power Mirror Circuit**

## RADIO

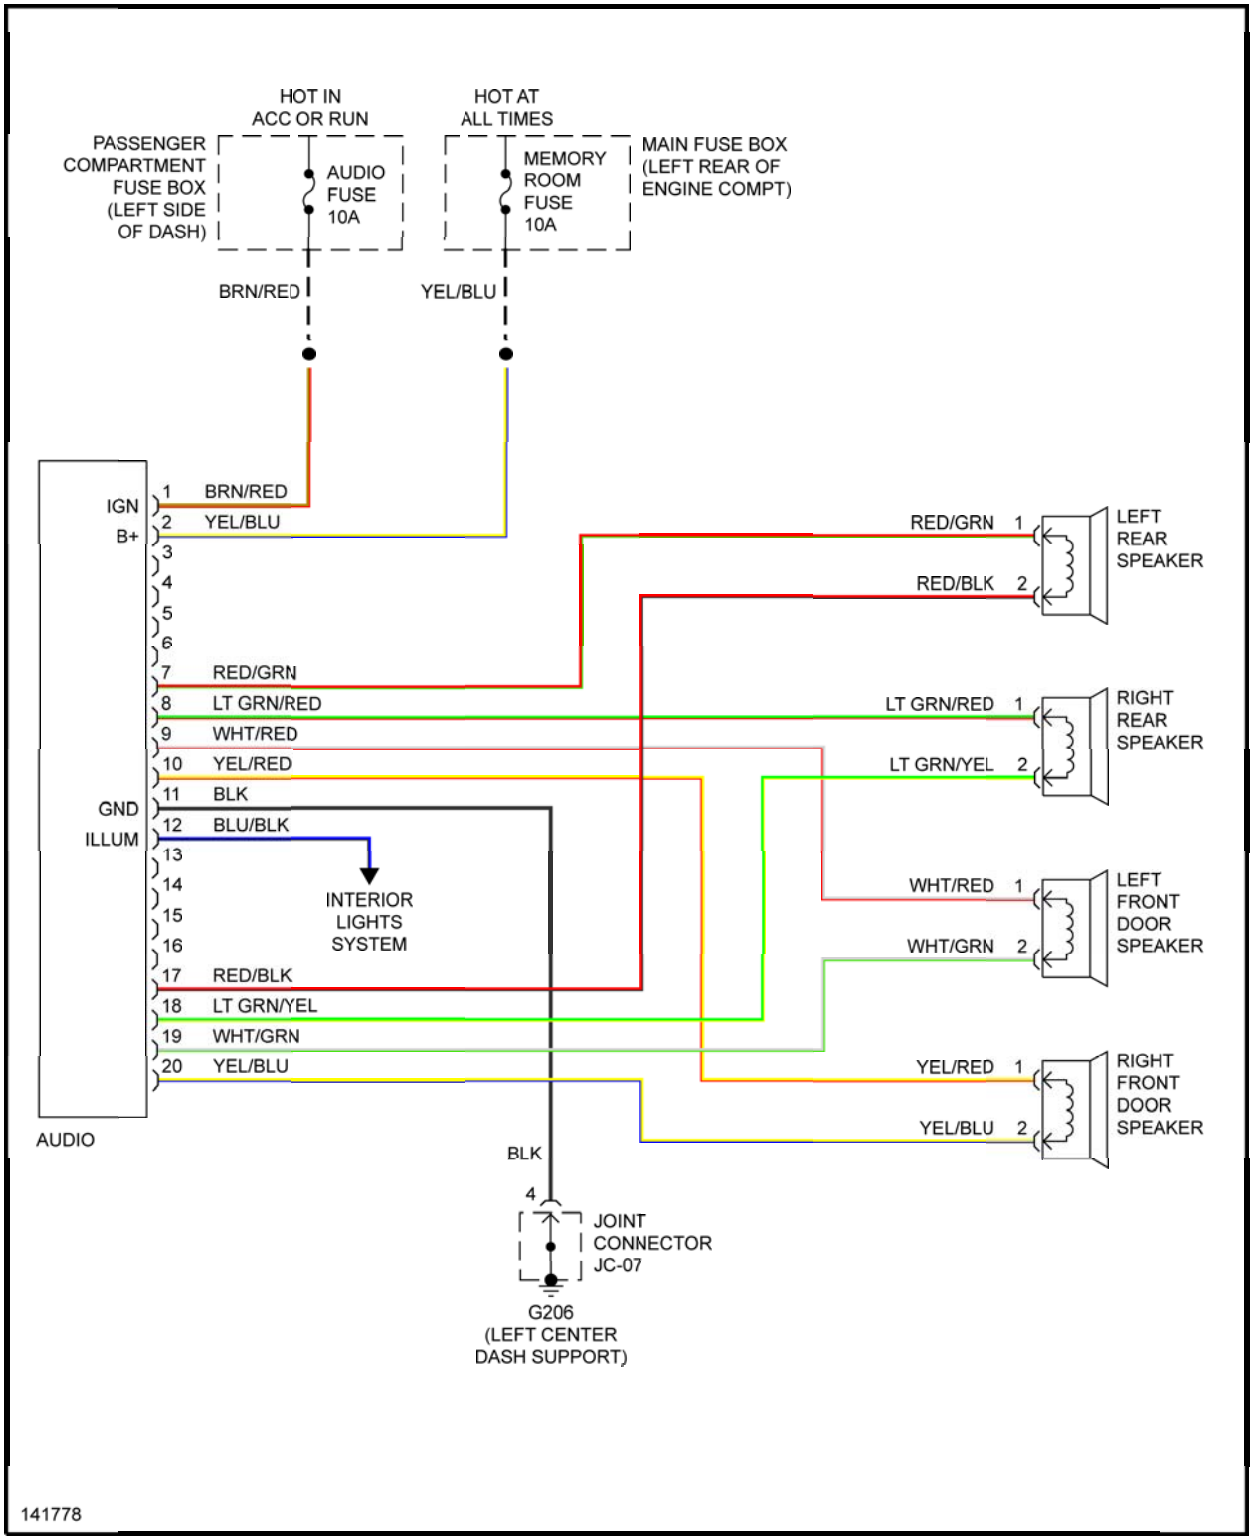
HOT IN
ACC OR RUN
HOT AT
ALL TIMES
PASSENGER
COMPARTMENT
FUSE BOX
(LEFT SIDE
OF DASH)
AUDIO
FUSE
10A
MEMORY
ROOM
FUSE
10A
MAIN FUSE BOX
(LEFT REAR OF
ENGINE COMPT)
BRN/RED
YEL/BLU
IGN
B+
GND
ILLUM
1 BRN/RED
2 YEL/BLU
3
4
5
6
7 RED/GRN
8 LT GRN/RED
9 WHT/RED
10 YEL/RED
11 BLK
12 BLU/BLK
13
14
15
16
17 RED/BLK
18 LT GRN/YEL
19 WHT/GRN
20 YEL/BLU
INTERIOR
LIGHTS
SYSTEM
AUDIO
RED/GRN 1
RED/BLK 2
LEFT
REAR
SPEAKER
LT GRN/RED 1
LT GRN/YEL 2
RIGHT
REAR
SPEAKER
WHT/RED 1
WHT/GRN 2
LEFT
FRONT
DOOR
SPEAKER
YEL/RED 1
YEL/BLU 2
RIGHT
FRONT
DOOR
SPEAKER
BLK
4
JOINT
CONNECTOR
JC-07
G206
(LEFT CENTER
DASH SUPPORT)
141778

**Fig. 23: Radio Circuits**

## SHIFT INTERLOCKS

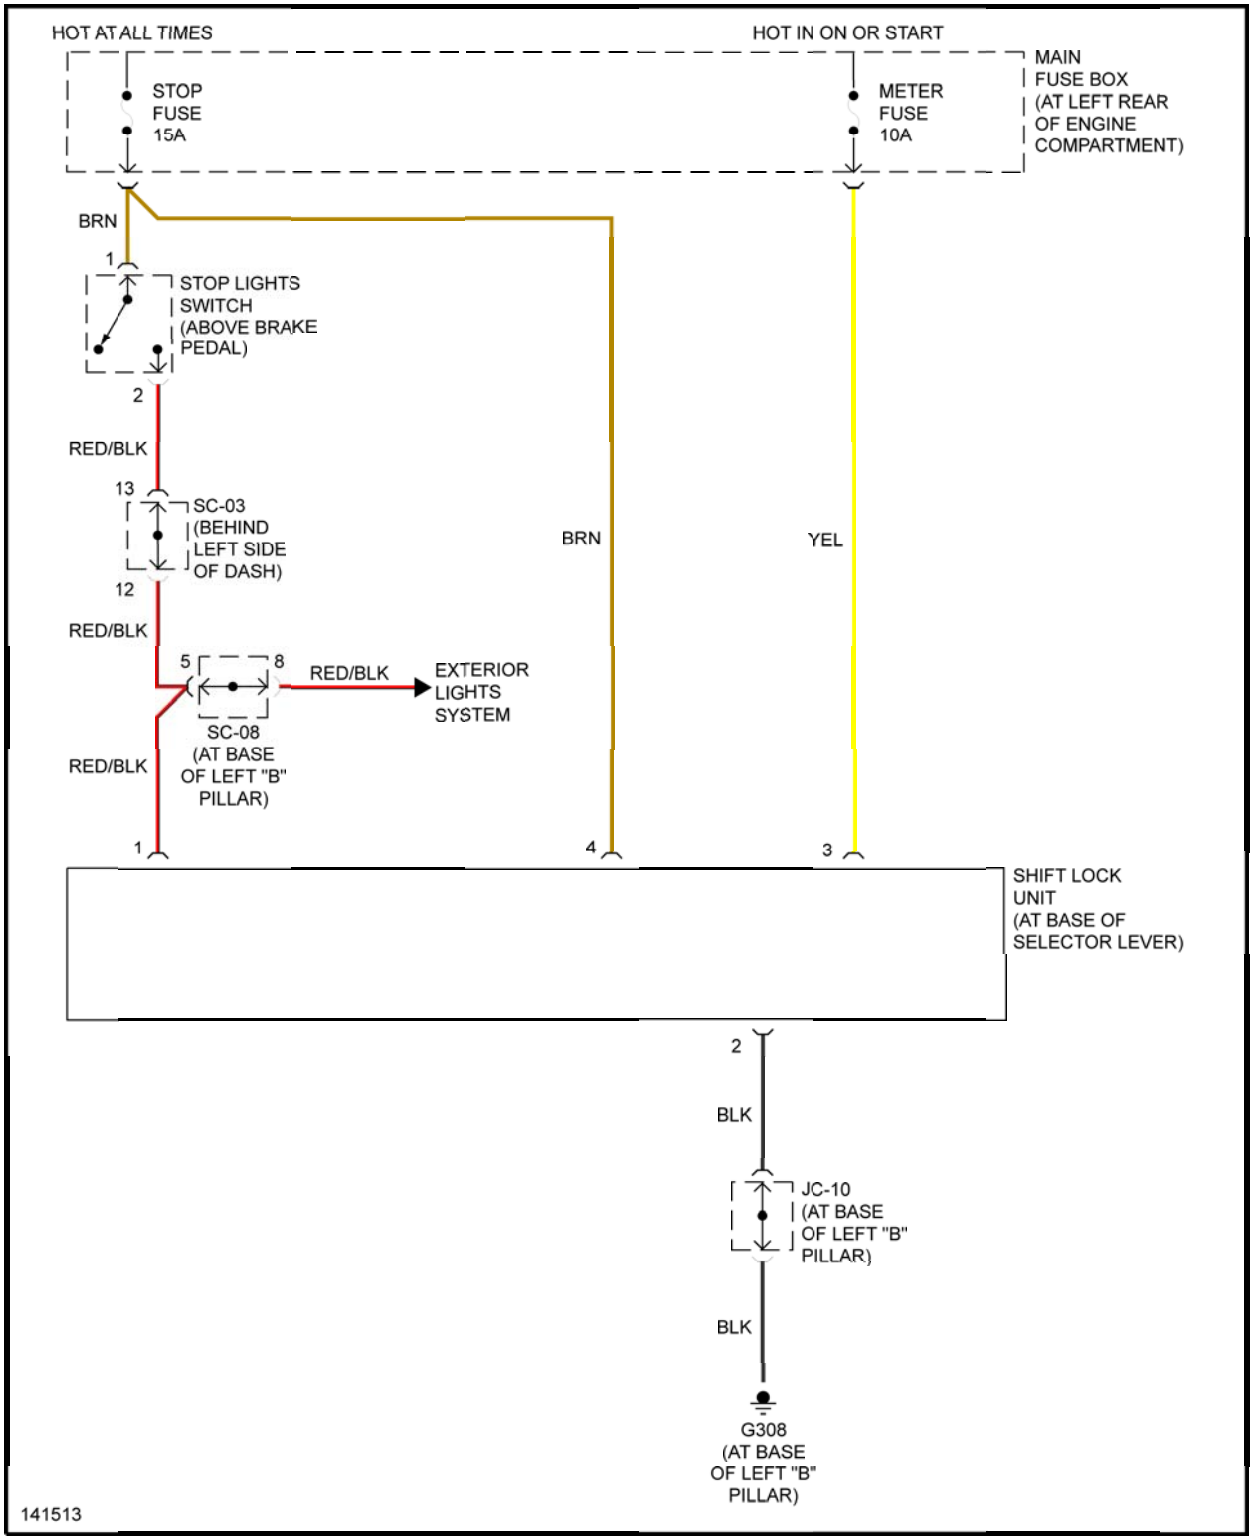
HOT AT ALL TIMES
HOT IN ON OR START
STOP FUSE 15A
METER FUSE 10A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
BRN
1
STOP LIGHTS SWITCH (ABOVE BRAKE PEDAL)
2
RED/BLK
13
SC-03 (BEHIND LEFT SIDE OF DASH)
12
RED/BLK
5
8
RED/BLK
EXTERIOR LIGHTS SYSTEM
SC-08 (AT BASE OF LEFT "B" PILLAR)
RED/BLK
BRN
YEL
1
4
3
SHIFT LOCK UNIT (AT BASE OF SELECTOR LEVER)
2
BLK
JC-10 (AT BASE OF LEFT "B" PILLAR)
BLK
G308 (AT BASE OF LEFT "B" PILLAR)
141513

**Fig. 24: Shift Interlock Circuit**

## STARTING/CHARGING

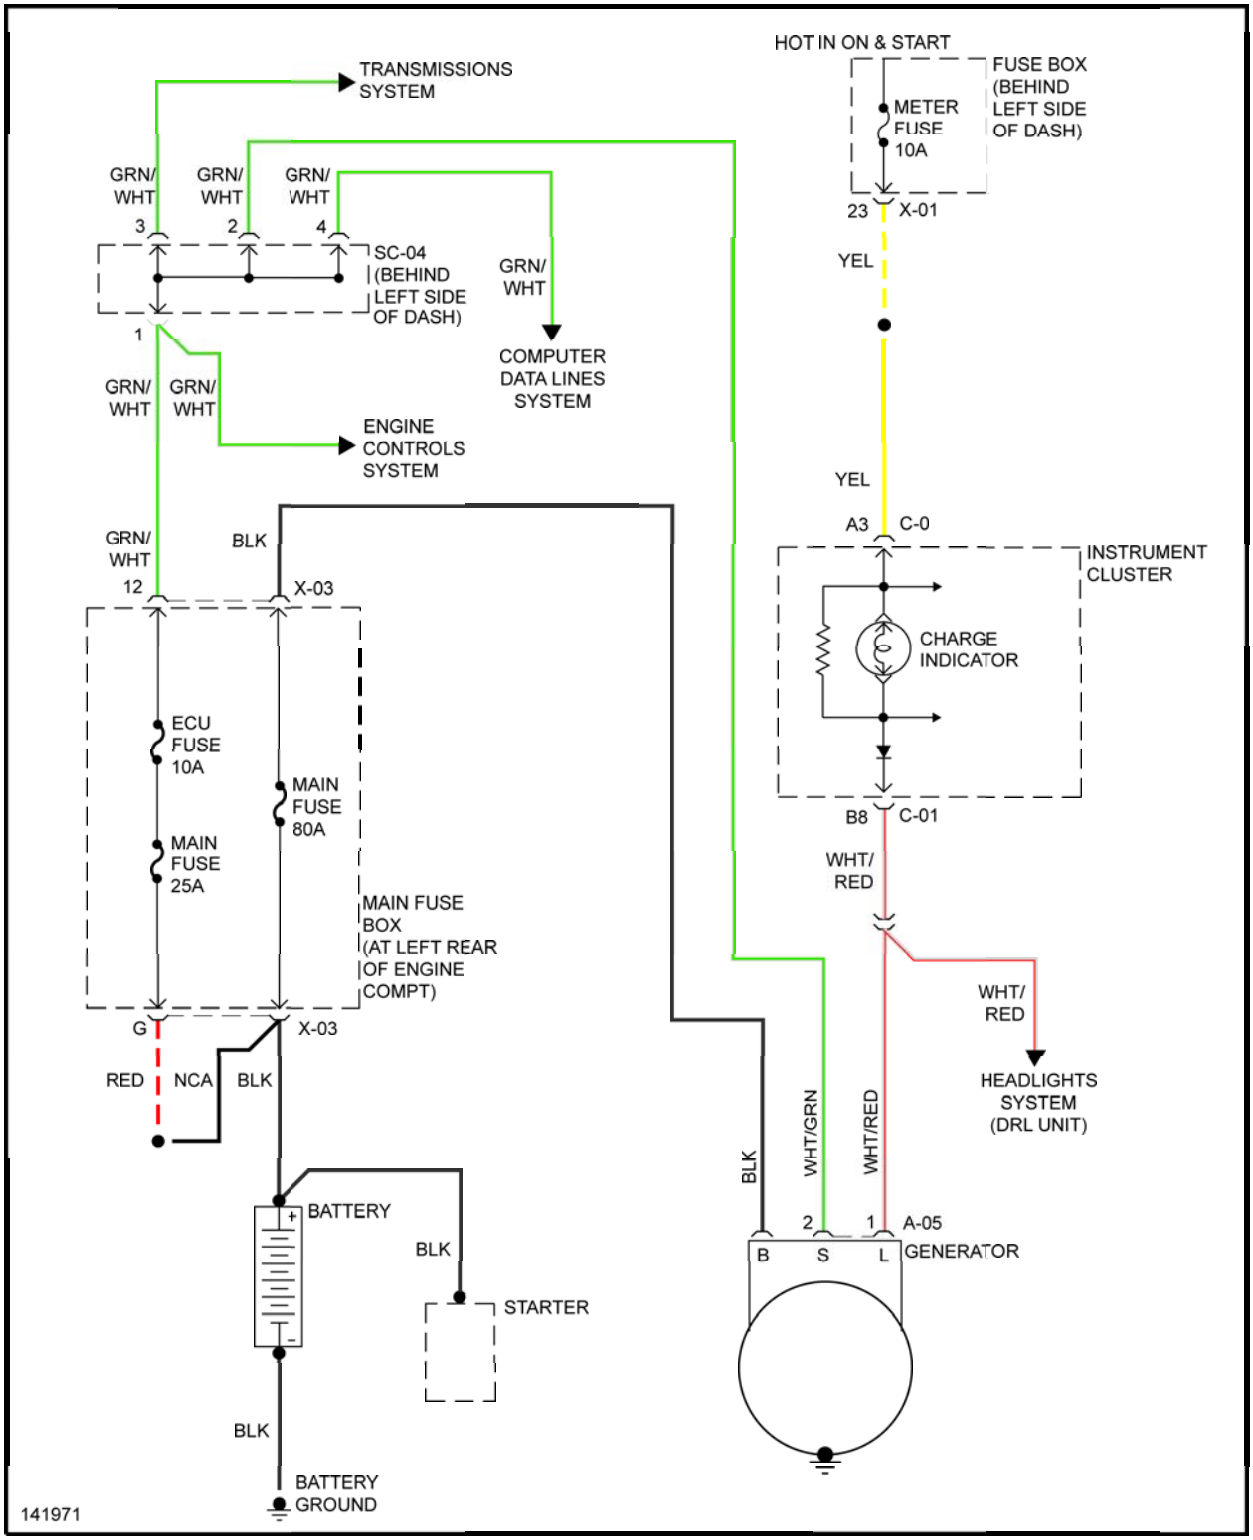
HOT IN ON & START
FUSE BOX (BEHIND LEFT SIDE OF DASH)
METER FUSE 10A
23
X-01
YEL
TRANSMISSIONS SYSTEM
GRN/ WHT
3
2
4
SC-04 (BEHIND LEFT SIDE OF DASH)
1
GRN/ WHT
COMPUTER DATA LINES SYSTEM
GRN/ WHT
GRN/ WHT
ENGINE CONTROLS SYSTEM
YEL
A3
C-0
INSTRUMENT CLUSTER
CHARGE INDICATOR
B8
C-01
WHT/ RED
GRN/ WHT
12
BLK
X-03
ECU FUSE 10A
MAIN FUSE 25A
MAIN FUSE 80A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
G
X-03
RED
NCA
BLK
WHT/ RED
HEADLIGHTS SYSTEM (DRL UNIT)
BLK
WHT/GRN
WHT/RED
2
1
A-05
B
S
L
GENERATOR
BATTERY
BLK
STARTER
BLK
BATTERY GROUND
141971

**Fig. 25: Charging Circuit**

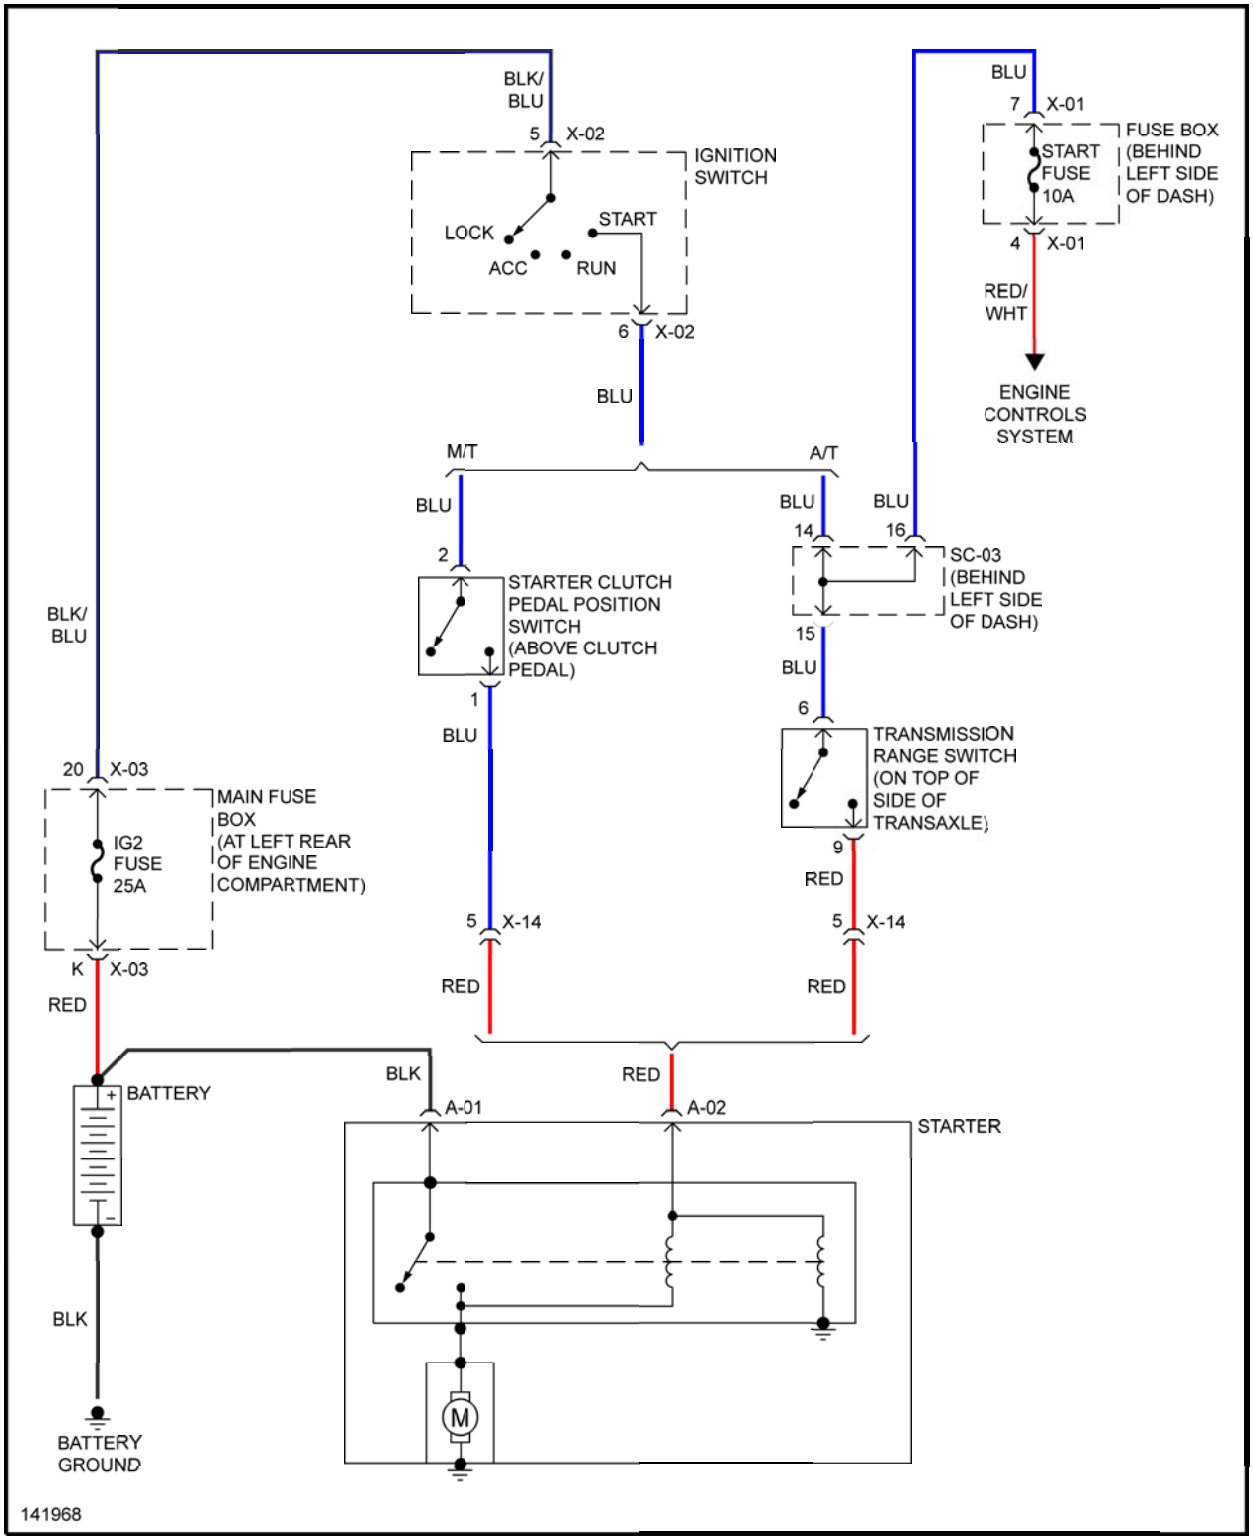
BLK/
BLU
5
X-02
IGNITION
SWITCH
LOCK
START
ACC
RUN
6
X-02
BLU
BLU
7
X-01
FUSE BOX
(BEHIND
LEFT SIDE
OF DASH)
START
FUSE
10A
4
X-01
RED/
WHT
ENGINE
CONTROLS
SYSTEM
M/T
A/T
BLU
2
STARTER CLUTCH
PEDAL POSITION
SWITCH
(ABOVE CLUTCH
PEDAL)
1
BLU
BLU
14
BLU
16
SC-03
(BEHIND
LEFT SIDE
OF DASH)
15
BLU
6
TRANSMISSION
RANGE SWITCH
(ON TOP OF
SIDE OF
TRANSAXLE)
9
RED
BLK/
BLU
20
X-03
MAIN FUSE
BOX
(AT LEFT REAR
OF ENGINE
COMPARTMENT)
IG2
FUSE
25A
K
X-03
RED
5
X-14
RED
5
X-14
RED
BLK
RED
BATTERY
+
-
A-01
A-02
STARTER
BLK
M
BATTERY
GROUND
141968

**Fig. 26: Starting Circuit**

## SUPPLEMENTAL RESTRAINTS

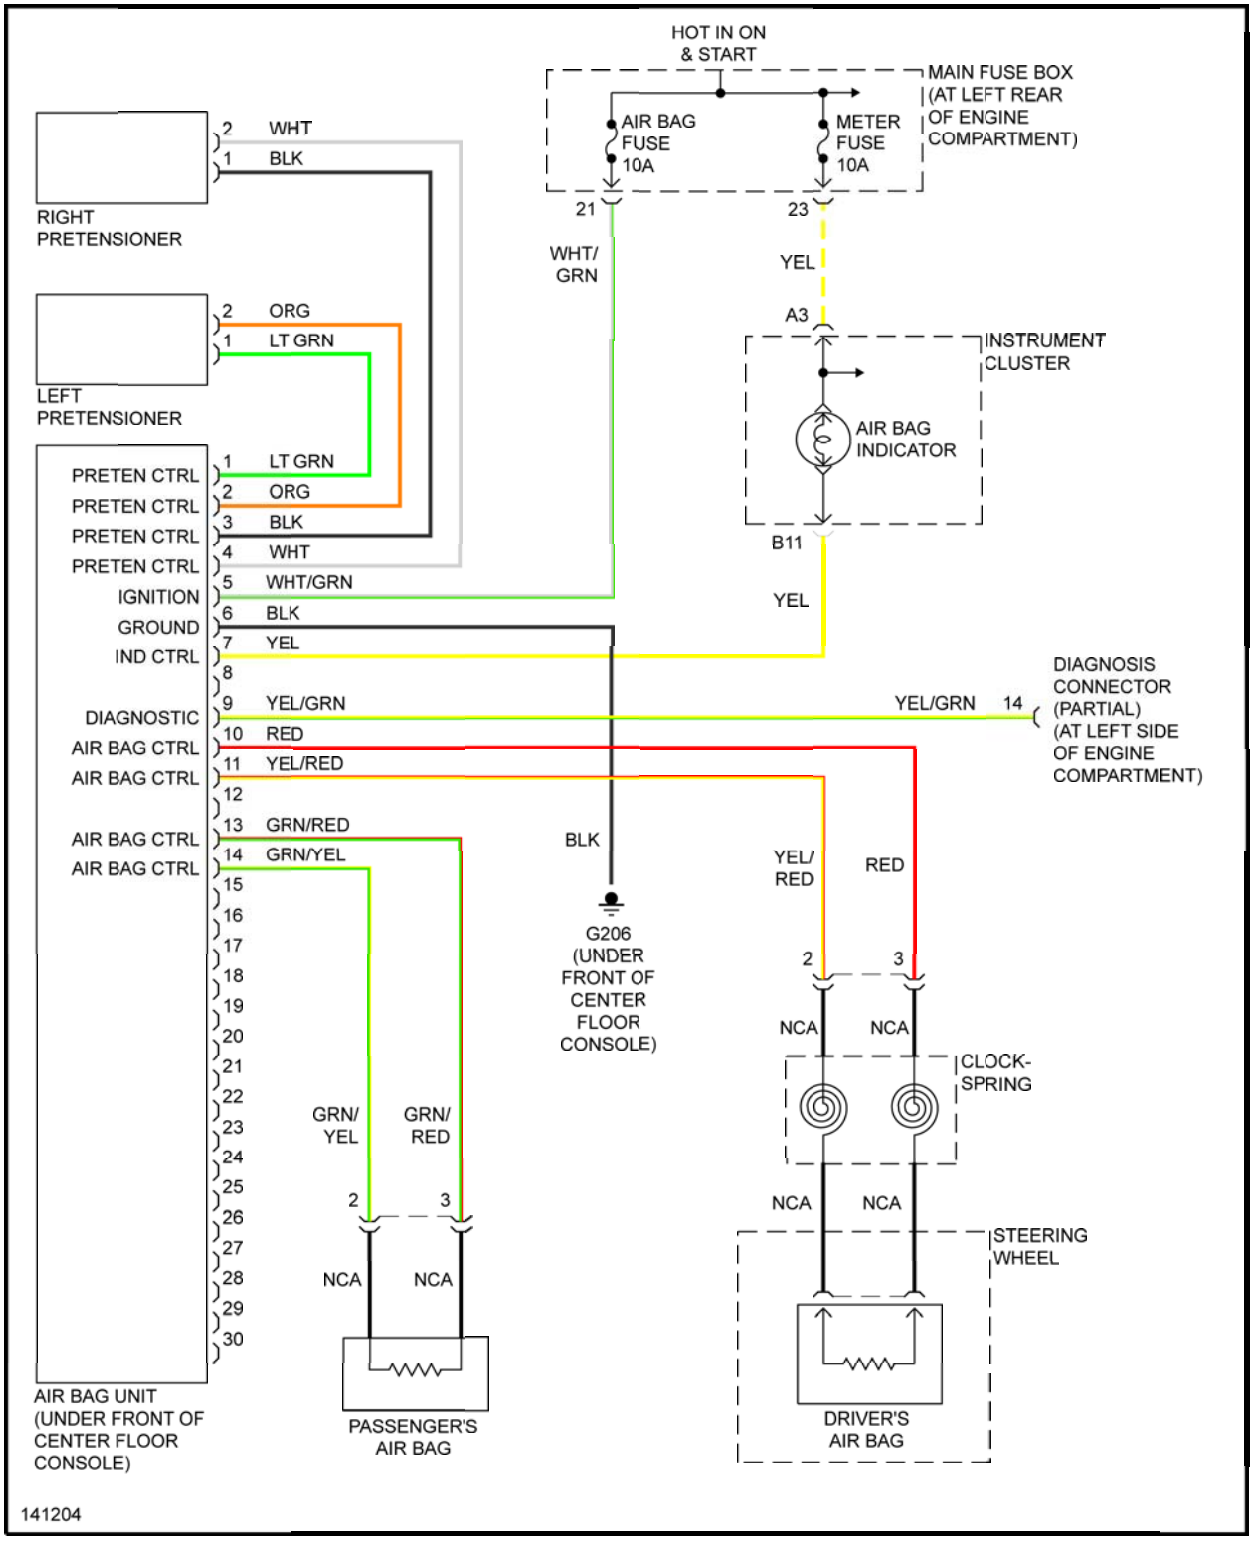
HOT IN ON & START
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPARTMENT)
AIR BAG FUSE 10A
METER FUSE 10A
21
23
WHT/ GRN
YEL
A3
INSTRUMENT CLUSTER
AIR BAG INDICATOR
B11
YEL
RIGHT PRETENSIONER
2 WHT
1 BLK
LEFT PRETENSIONER
2 ORG
1 LT GRN
PRETEN CTRL 1 LT GRN
PRETEN CTRL 2 ORG
PRETEN CTRL 3 BLK
PRETEN CTRL 4 WHT
IGNITION 5 WHT/GRN
GROUND 6 BLK
IND CTRL 7 YEL
8
DIAGNOSTIC 9 YEL/GRN
AIR BAG CTRL 10 RED
AIR BAG CTRL 11 YEL/RED
12
AIR BAG CTRL 13 GRN/RED
AIR BAG CTRL 14 GRN/YEL
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
YEL/GRN 14
DIAGNOSIS CONNECTOR (PARTIAL) (AT LEFT SIDE OF ENGINE COMPARTMENT)
BLK
G206 (UNDER FRONT OF CENTER FLOOR CONSOLE)
YEL/ RED
RED
2
3
NCA
NCA
CLOCK-SPRING
NCA
NCA
STEERING WHEEL
DRIVER'S AIR BAG
GRN/ YEL
GRN/ RED
2
3
NCA
NCA
PASSENGER'S AIR BAG
AIR BAG UNIT (UNDER FRONT OF CENTER FLOOR CONSOLE)
141204

**Fig. 27: Supplemental Restraint Circuit**

## WARNING SYSTEMS

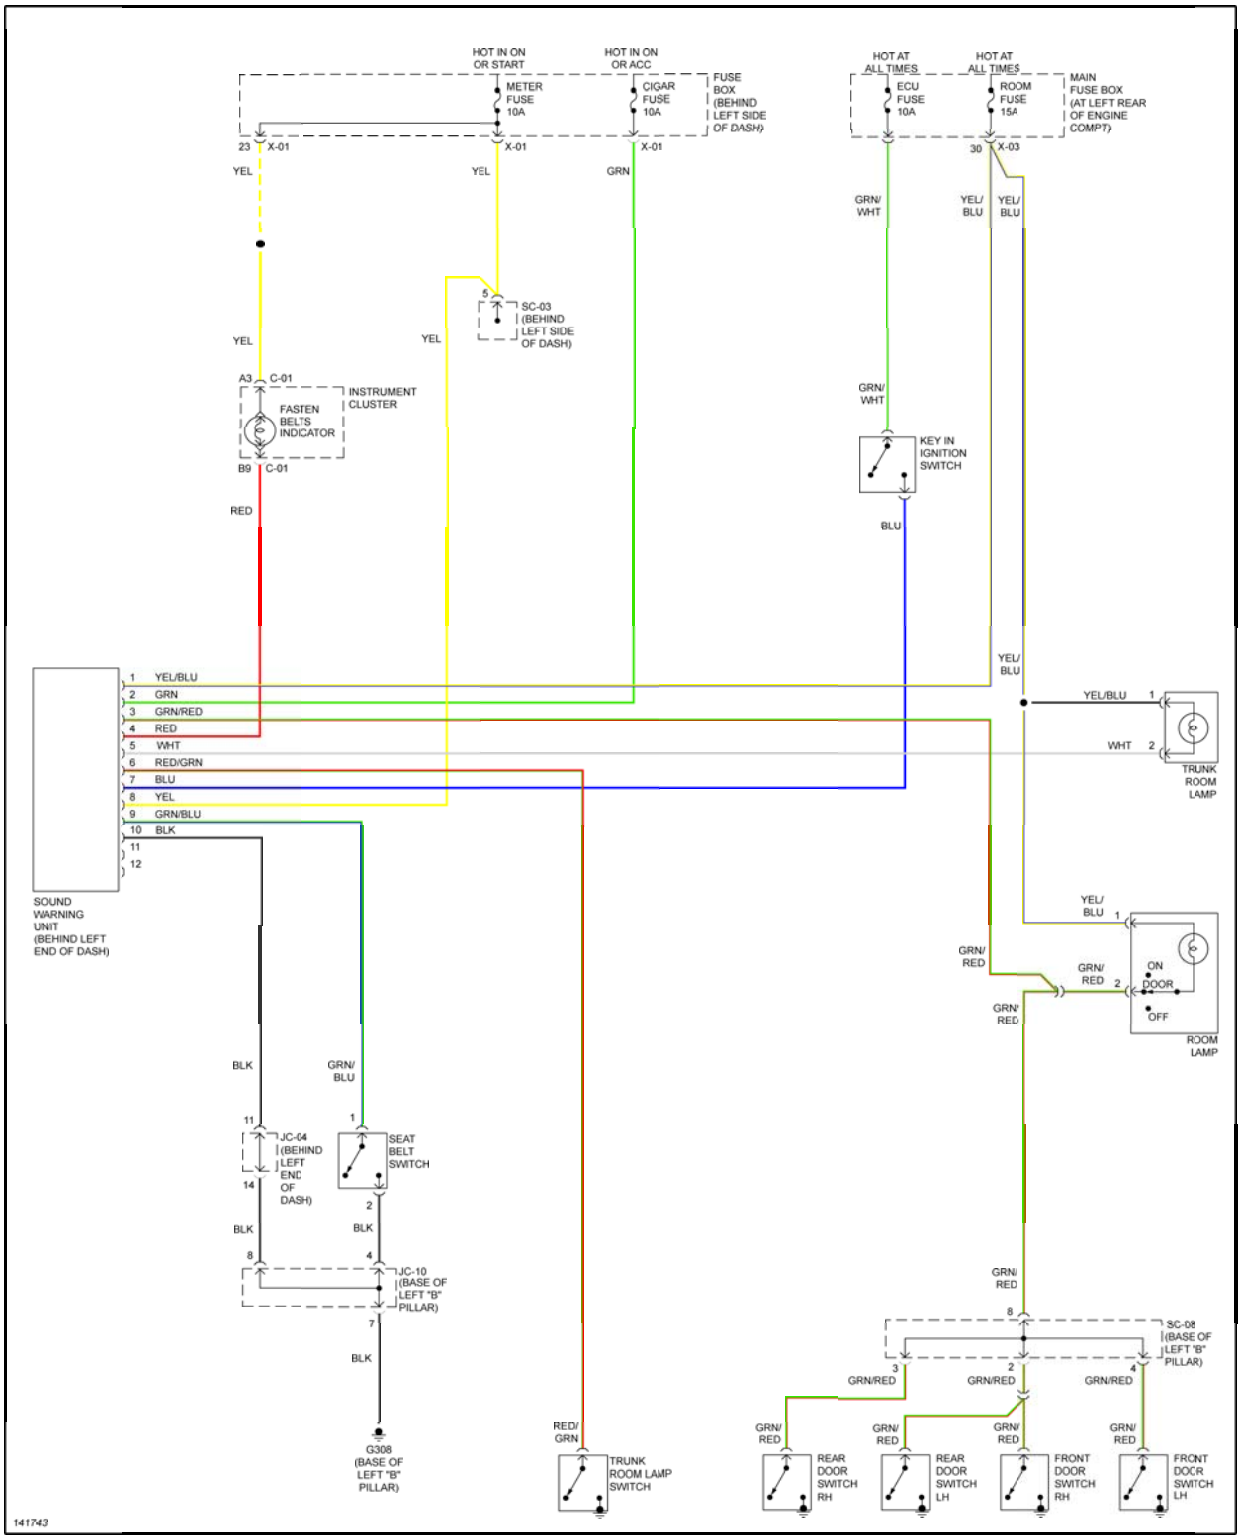
HOT IN ON OR START
HOT IN ON OR ACC
METER FUSE 10A
CIGAR FUSE 10A
FUSE BOX (BEHIND LEFT SIDE OF DASH)
HOT AT ALL TIMES
HOT AT ALL TIMES
ECU FUSE 10A
ROOM FUSE 15A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
23 X-01
X-01
X-01
30 X-03
YEL
YEL
GRN
GRN/ WHT
YEL/ BLU
YEL/ BLU
5
SC-03 (BEHIND LEFT SIDE OF DASH)
YEL
YEL
A3 C-01
INSTRUMENT CLUSTER
FASTEN BELTS INDICATOR
B9 C-01
RED
GRN/ WHT
KEY IN IGNITION SWITCH
BLU
YEL/ BLU
1 YEL/BLU
2 GRN
3 GRN/RED
4 RED
5 WHT
6 RED/GRN
7 BLU
8 YEL
9 GRN/BLU
10 BLK
11
12
SOUND WARNING UNIT (BEHIND LEFT END OF DASH)
YEL/BLU 1
WHT 2
TRUNK ROOM LAMP
YEL/ BLU 1
GRN/ RED
GRN/ RED 2
ON DOOR
OFF
GRN/ RED
ROOM LAMP
BLK
GRN/ BLU
11
JC-04 (BEHIND LEFT END OF DASH)
14
1
SEAT BELT SWITCH
2
BLK
BLK
8
4
JC-10 (BASE OF LEFT "B" PILLAR)
7
BLK
G308 (BASE OF LEFT "B" PILLAR)
RED/ GRN
TRUNK ROOM LAMP SWITCH
GRN/ RED
8
SC-08 (BASE OF LEFT "B" PILLAR)
3 GRN/RED
2 GRN/RED
4 GRN/RED
GRN/ RED
REAR DOOR SWITCH RH
GRN/ RED
REAR DOOR SWITCH LH
GRN/ RED
FRONT DOOR SWITCH RH
GRN/ RED
FRONT DOOR SWITCH LH
141743

**Fig. 28: Warning System Circuits**

## WIPER/WASHER

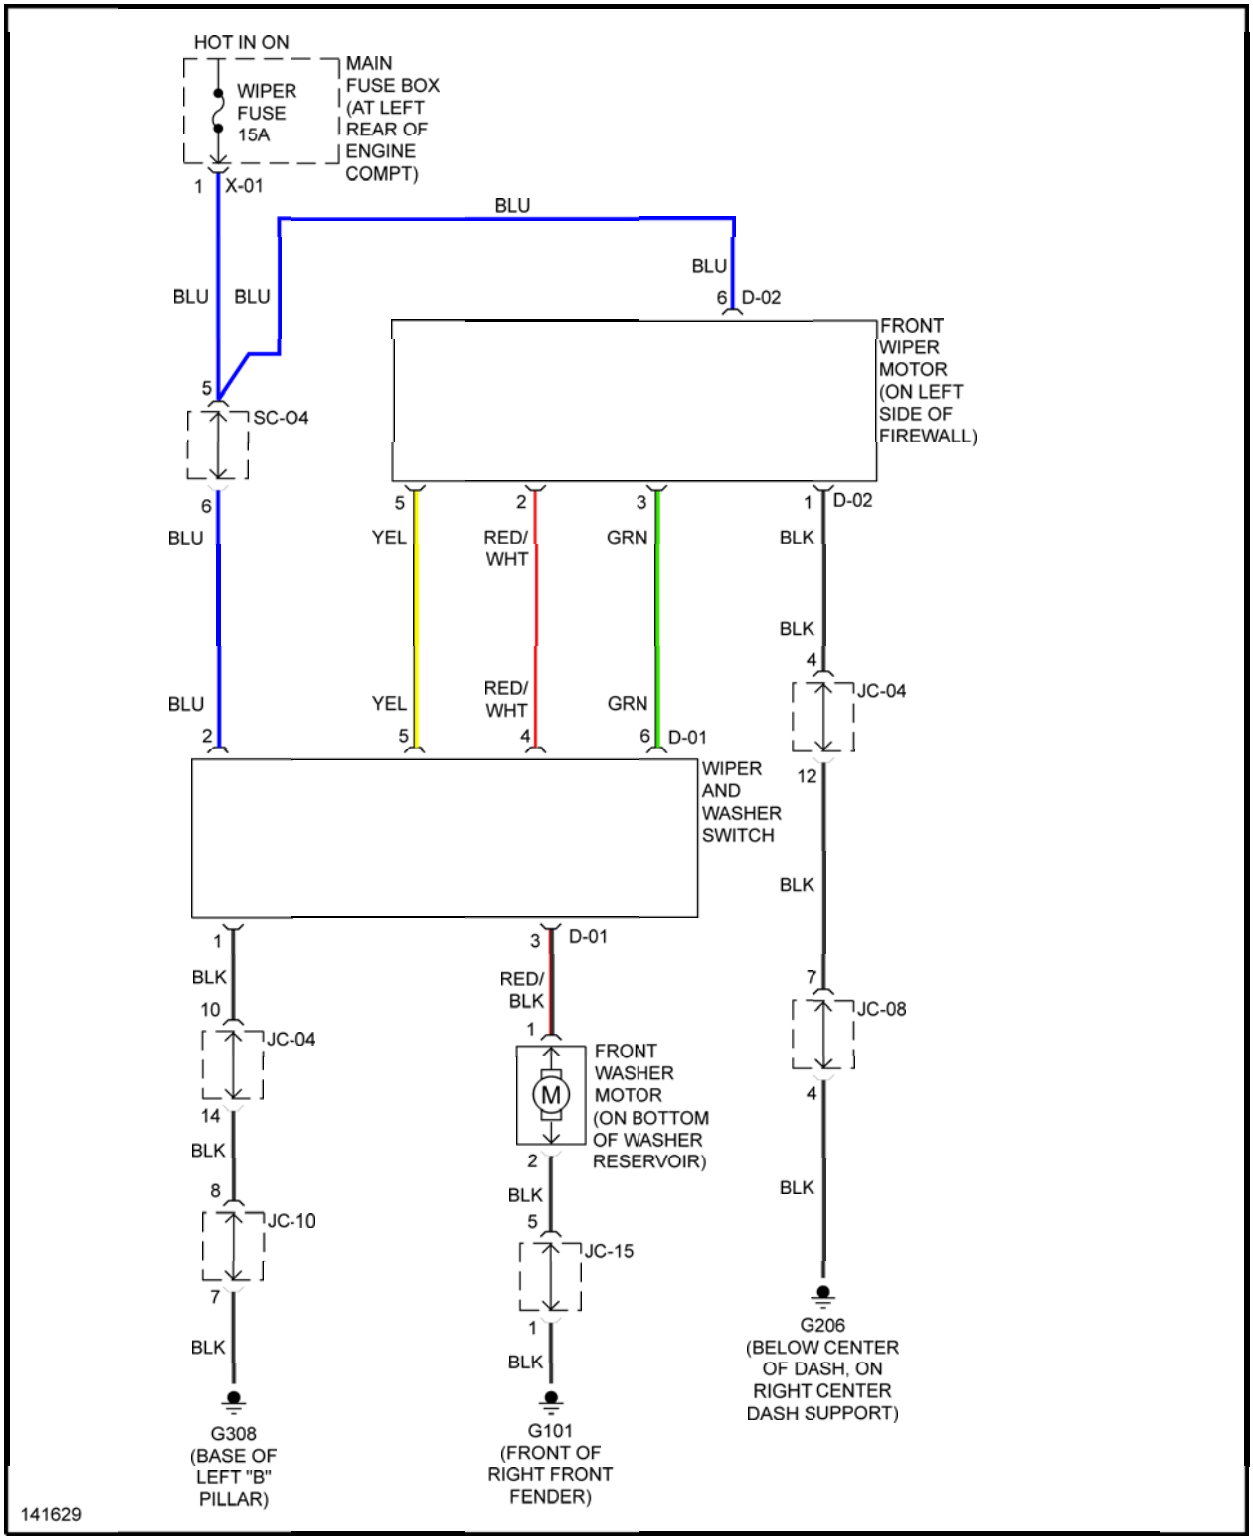
HOT IN ON
WIPER FUSE 15A
MAIN FUSE BOX (AT LEFT REAR OF ENGINE COMPT)
1
X-01
BLU
BLU
BLU
BLU
6
D-02
FRONT WIPER MOTOR (ON LEFT SIDE OF FIREWALL)
5
SC-04
6
BLU
5
YEL
2
RED/ WHT
3
GRN
1
D-02
BLK
BLK
4
JC-04
12
BLK
7
JC-08
4
BLK
BLU
2
YEL
5
RED/ WHT
4
GRN
6
D-01
WIPER AND WASHER SWITCH
1
BLK
10
JC-04
14
BLK
8
JC-10
7
BLK
G308 (BASE OF LEFT "B" PILLAR)
3
D-01
RED/ BLK
1
M
FRONT WASHER MOTOR (ON BOTTOM OF WASHER RESERVOIR)
2
BLK
5
JC-15
1
BLK
G101 (FRONT OF RIGHT FRONT FENDER)
G206 (BELOW CENTER OF DASH, ON RIGHT CENTER DASH SUPPORT)
141629

**Fig. 29: Wiper/Washer Circuit**