



pulsar
AS 200

pulsar
NS 200



CATÁLOGO DE PARTES

Mobil Super
4T Ultra

www.auteco.com.co
Línea gratuita nacional: 018000 520090



IRC *LLANTAS* *TECNOLOGÍA JAPONESA*



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
PULSAR 200 NS, PULSAR AS 200, PULSAR RS 200	DELANTERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		100/80-17		RX01	PISTERA	100/80-17-RX01-TL	10003160
		110/70-17		RX01	PISTERA	41070-1117-RX01/18	10020095
	TRASERA	130/70-17	IRC	RX01	PISTERA	41070-1317-RX01/18	10020115
PULSAR 220	DELANTERA	90/90X17	IRC	NF45	PISTERA TUBE LESS	41070-9017-NF45/18	10020217
				NF52TL	PISTERA TUBE LESS	90/90-17-NF52-TL	10029297
				NF42	PISTERA TUBE LESS	41070-9017-NF42/18	10020214
				NF46	PISTERA TUBE LESS	41070-9017-NF46/18	10020220
	TRASERA	110/70-17	IRC	RX01	PISTERA TUBE LESS	41070-1117-RX01/18	10020095
		130/70-17		RX01	PISTERA TUBE LESS	41070-1317-RX01/18	10020115
AVENGER 220	DELANTERA	120/80X17	IRC	NR57TL	PISTERA TUBE LESS	120/80-17-NR57-TL	10007401
	TRASERA	90/90X17		NF45	PISTERA	41070-9017-NF45/18	10020217
PULSAR 200, PULSAR 180 UG	DELANTERA	130/90X15	IRC	NR66	SPORT	130/90-15-NR66-TT	10008722
		2.75X17		NF53	PISTERA	41070-2717-NR53/18	10020143
		90/80X17		NR73	PISTERA	90/80-17-NR73-TT	10029270
		90/90X17		NF53	PISTERA	41070-9017-NF53/18	10020223
		100/80-17		NR73	PISTERA	41070-1017-NR73/18	10020077
		110/70-17		RX01	PISTERA	41070-1117-RX01/18	10020095
	TRASERA	130/70-17	IRC	RX01	PISTERA	41070-1317-RX01/18	10020115

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
PULSAR 135	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
		90/80-17		NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	110/80-17	IRC	NR53	PISTERA	41070-1117-NR53/18	10020089
		100/80X17		NR64	PISTERA	41070-1117-NR64/18	10020092
PULSAR 150	DELANTERA	90/90-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
	TRASERA	110/80-17		NF53	PISTERA TUBE LESS	90/90-17-NF53-TL	10029301
PULSAR NS 150, PULSAR AS 150	DELANTERA	90/80-17	IRC	NR48TL	PISTERA TUBE LESS	110/80-17-NR48-TL	10003355
	TRASERA	110/80-17		NR77UZ	PISTERA	90/80-17-NR77UZ-TL	10029272
PULSAR 180 (CLASSIC, DTS-i)	DELANTERA	2.75X18	IRC	NR48TL	PISTERA	110/80-17-NR48-TL	10003355
				NR21	SPORT	41070-2718-NR21/18	10020146
	TRASERA	3.00X18	IRC	NR53	PISTERA	41070-2718-NR53/18	10020149
				GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
DISCOVER 125 ST DISCOVER 125 DISCOVER 100 DISCOVER 135 KS/ES DISCOVER DTSI PULSAR 180 DTS-i TEC,BLACK, PULSAR II	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
		90/80-17		NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	3.00X17	IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
		100/80-17		NR73	PISTERA	41070-1017-NR73/18	10020077
		80/90-17		NR78YL	PISTERA	80/90-17-NR78Y-TT	10027758

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
DISCOVER 100M, DISCOVER 110	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	100/80X17		NR73	PISTERA	100/80-17-NR73-TT	10020077
DISCOVER 150ST-F	DELANTERA	100/80-17	IRC	NR73S	PISTERA	100/80-17-NR73S-TL	10003158
	TRASERA	80/90-17		NR73	PISTERA	80/90-17-NR73S-TL	10027755
PLATINO 125 5S, PLATINO 125, PLATINO CT, PLATINO 100 SPORT, PLATINO 110, XCD 125	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	90/80-17-NR73-TT	10029270
		2.75X17		NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
	TRASERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
BOXER CON RIN 17" BOXER BM 150, BOXER CT 100, BOXER BM 100	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	41070-9017-NR73TT/18	10029270
		90/90-17		NR53	PISTERA	41070-2717-NR53/18	10020143
		2.75X17		NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
	TRASERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
BOXER BM 100 CLASSIC ES	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
	TRASERA	3.00X17		NR1	SPORT	41070-3017-NR1/18	10020166
BOXER CON RIN 18" 4T, UG, K-TEC	DELANTERA	2.50X18		NR53	PISTERA	41070-2518-NR53/18	10020134
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
BOXER CON RIN 18" (S1D) CALIBER 115 WIND 125	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18	10020146
				NR53	PISTERA	41070-2718-NR53/18	10020149
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174
AVANTI	DELANTERA	2.50X17	IRC	TR1	TRIAL ROMBO	41070-2517-TR1/18	10020132
	TRASERA	2.75X17	IRC	NR2	SPORT	41070-2717-NR2/18	10020140
				NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
PLUS, CLASSIC, LEGEND	DELANTERA	3.50X10	IRC	MB-27	SPORT	41070-3510-27/18	10020183
	TRASERA						

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página **web: www.auteco.com.co** accediendo al link **repuestos**. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco-Kawasaki.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
Alvaro Enrique Carreño	ASESOR COMERCIAL	Magdalena Medio	314 701 17 85	acarreno@auteco.com.co
Andres Julian Giraldo	ASESOR COMERCIAL	Risaralda y Armenia	301 375 43 57	ajgiraldo@auteco.com.co
Bernardo De Jesus Muriel	ASESOR COMERCIAL	Cucuta	312 257 61 75	bmuriel@auteco.com.co
Carlos Humberto Tobon	ASESOR COMERCIAL	Nariño y Putumayo	310 447 36 11	ctobon@auteco.com.co
Carlos Mario Salazar	ASESOR COMERCIAL	Sucre	310 414 88 45	csalazar@auteco.com.co
Eliecer Zamora Vasquez	ASESOR COMERCIAL	Cali y Cauca	313 584 47 13	ezamora@auteco.com.co
Elkin Humberto Gallego	ASESOR COMERCIAL	Sur de Area Metropolitana de Medellín y Amazonas	310 436 25 98	egallego@auteco.com.co
Esmeralda Forero Acosta	ASESOR COMERCIAL	Zona Centro Bogota	313 585 22 07	eforero@auteco.com.co
Gustavo Adolfo Cantillo	ASESOR COMERCIAL	Atlántico	300 447 41 57	gcantillo@auteco.com.co
Hernan Alonso Pedraza	ASESOR COMERCIAL	Pueblos de Condinamarca	311 899 77 28	hpedraza@auteco.com.co
Ivano Alexy Villota Arteaga	ASESOR COMERCIAL	Sur de Huila y Caqueta	313 767 78 43	ivillota@auteco.com.co
Jaime Alfonso Villalba	ASESOR COMERCIAL	Bolivar	313 584 72 62	jvillalba@auteco.com.co
John Jairo Lopez	ASESOR COMERCIAL	Antioquia Norte	310 444 22 15	jlopez@auteco.com.co
Julio Mario Moterrosa	ASESOR COMERCIAL	Magdalena	313 585 60 28	jmonterrosa@auteco.com.co
Karen Lorena Candanoza	ASESOR COMERCIAL	Zona Sur Bogota	313 585 35 61	kcandanoza@auteco.com.co
Marlon Santiago Blandon	ASESOR COMERCIAL	Cordoba y Bajo Cauca	310 373 90 19	msblandon@auteco.com.co
Miguel Angel Guerrero	ASESOR COMERCIAL	Norte del Valle y Buenaventura	314 772 07 98	mgguerrero@auteco.com.co
Miguel Arturo Osorio Ruiz	ASESOR COMERCIAL	Cesar y Guajira	321 799 78 87	mosorio@auteco.com.co
Miller Fabian Acosta	ASESOR COMERCIAL	Zona Norte Bogota	313 585 98 37	macosta@auteco.com.co
Milton Cesar Olaya Carvajal	ASESOR COMERCIAL	Neiva y Norte Huila	310 436 27 42	molaya@auteco.com.co
Nestor Raul Adarve	ASESOR COMERCIAL	Antioquia Sur y Choco	310 436 26 89	nadarve@auteco.com.co
Oscar Alejandro Posada Villa	ASESOR COMERCIAL	Norte Area Metropolitana Medellin y San Andres	314 811 04 09	aposada@auteco.com.co
Rubén Dario Campo Cárdena	ASESOR COMERCIAL	Caldas y Norte de Risaralda	321 799 79 06	rcampo@auteco.com.co
Uberney Ortiz Velez	ASESOR COMERCIAL	Casanare, Vichada, Boyaca	313 672 73 37	uortiz@auteco.com.co
Willinton Franco Tobon	ASESOR COMERCIAL	Tolima	312 257 67 91	wfranco@auteco.com.co
William De Jesus Gutierrez	ASESOR COMERCIAL	Meta	310 407 40 72	wgutierrez@auteco.com.co
Wilson Sabogal	ASESOR COMERCIAL	Bucaramanga y Area Metropolitana	300 542 85 48	wsabogal@auteco.com.co
Herica Linares Riaño	ASESOR COMERCIAL BAJAJ	Bogota	301 247 71 10	hlinares@auteco.com.co
Jorge Mario Gil	ASESOR COMERCIAL BAJAJ	Medellin	313 672 73 53	jgil@auteco.com.co
Jorge Mario Maya Velez	ASESOR COMERCIAL BAJAJ	Medellin	312 258 93 84	jmaya@auteco.com.co
Meryce Alejandra Cortazar P.	ASESOR COMERCIAL BAJAJ	Cali	320 732 97 60	mcortazar@auteco.com.co
Pilar Katherine Garcia Tique	ASESOR COMERCIAL BAJAJ	Bogota	300 541 93 34	pgarcia@auteco.com.co
Raul De Jesus Foronda	ASESOR COMERCIAL BAJAJ	Santa Marta	312 850 45 74	rforonda@auteco.com.co
Richard Andres Muñoz	ASESOR COMERCIAL BAJAJ	Popayan	321 799 79 26	rmunoz@auteco.com.co
Yeesander Guzman Garcia	ASESOR COMERCIAL BAJAJ	Barranquilla	300 542 64 59	yguzman@auteco.com.co
Daniel Becerra Martinez	ASESOR COMERCIAL BOUTIQUE	Cali	300 542 43 98	dbecerra@auteco.com.co
German Alfredo Vivas	ASESOR COMERCIAL BOUTIQUE	Bogota	321 799 79 30	gvivas@auteco.com.co
Hilde Alexander Garcia Cano	ASESOR COMERCIAL BOUTIQUE	Medellin	321 641 50 63	hgarcia@auteco.com.co
Franz Caballero Castro	DESARROLLADOR UN RPTOS Y ACCS	BARRANQUILLA	301 375 25 32	fcaballero@auteco.com.co
Gonzalo Adolfo Saldarriaga	DESARROLLADOR UN RPTOS Y ACCS	MEDELLIN	310 406 88 74	gsaldarriaga@auteco.com.co
Gustavo Adolfo Corrales	DESARROLLADOR UN RPTOS Y ACCS	CALI	300 634 67 59	gcorrales@auteco.com.co
Gilberto Eduardo Ocampo	GERENTE REGIONAL ZONA SUR	GERENTE REGIONAL ZONA SUR	311 382 85 14	eocampo@auteco.com.co
Jhon Alexander Estrada Bello	GERENTE REGIONAL ZONA NORTE	GERENTE REGIONAL ZONA NORTE	311 737 37 48	jestrada@auteco.com.co
Jose Giovanni Suarez Martinez	GERENTE REGIONAL ZONA CENTRO	GERENTE REGIONAL ZONA CENTRO	320 766 49 45	jsuarez@auteco.com.co
Juan Guillermo Ospina	GERENTE COMERCIAL BAJAJ		313 767 78 36	jgospina@auteco.com.co
Laura Ocampo	COORDINADORA ALTA GAMA		320 682 09 64	locampo@auteco.com.co

SERVICIO AL CLIENTE

LINEA ÚNICA DE SERVICIO AL CLIENTE CANAL (4) 444 81 90

UN DE REPUESTOS y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO A CONCESIONARIO Y MAYORISTAS	JHONATAN ZAPATA	servicioadistribuidoresymayoristas@auteco.com.co	(4) 444 81 90 OPCION (2)	
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co		(4) 373 83 94
COORDINADOR SERVICIO POSTVENTA	LUIS G. RODRIGUEZ	lrodriguez@auteco.com.co		
GARANTÍAS	ALEJANDRO FERNÁNDEZ	garantias2@auteco.com.co		
DEVOLUCIONES - RECLAMOS	LEONARDO AGUDELO	devolucionesrptos@auteco.com.co		
MOTO FUERA DE RUTA	JONI HOLGUIN	motofueraderuta@auteco.com.co	3004243097	
LÍNEA DE ATENCIÓN AL CLIENTE				
POSCONSUMO BATERIAS	YUDY DUQUE	yduque@auteco.com.co		(4) 277 5117
CARTERA		cartera@auteco.com.co		(4) 306 81 54
VENTA MOTOS		pedidosmotos@auteco.com.co		(4) 372 62 95

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LÍNEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº	FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
1	TAPA CULATA	1	32	BOMBA FRENO DELANTERO	38
2	CULATA	2	33	CALIPER DELANTERO	39
3	VÁLVULAS	3	34	DISCO FRENO TRASERO	40
4	EJE DE LEVAS / TENSOR CADENILLA	4	35	BOMBA FRENO TRASERO	41
5	CILINDRO / PISTÓN	5	36	PEDAL FRENO	42
6	CIGÜEÑAL	6	37	MANUBRIO	43-44
7	TRANSMISIÓN	7-8	38	SUSPENSIÓN DELANTERA	45-46
8	SELECTOR DE CAMBIOS	9	39	CUBIERTAS RADIADOR	47
9	EJE DE CAMBIOS	10	40	SOPORTES CUBIERTAS TANQUE GASOLINA (PULSAR 200NS)	48
10	CARCASA DERECHA	11-12	40A	SOPORTES CUBIERTAS TANQUE GASOLINA (PULSAR AS200)	49
11	CARCASA IZQUIERDA	13	41	TANQUE DE GASOLINA / GRIFO GASOLINA	50-51
12	BOMBA DE AGUA / PIÑÓN BALANCEADOR	14	42	TORNILLOS TAPAS LATERALES / CUBIERTA SILLÍN	52
13	BOMBA DE ACEITE	15	43	VELOCÍMETRO	53
14	RADIADOR	16-17	44	CABLES	54
15	CUBIERTA CLUTCH	18-19	45	GUARDACADENA	55
16	CUBIERTA VOLANTE	20	46	FAROLA / CARENAJE (PULSAR 200NS)	56
17	CLUTCH	21	46A	FAROLA / CARENAJE (PULSAR AS200)	57
18	CARBURADOR	22	47	DIRECCIONALES	58
19	FILTRO DE AIRE	23	48	STOP (PULSAR 200NS)	59
20	SILENCIADOR	24	48A	STOP (PULSAR AS200)	60
21	MOTOR DE ARRANQUE / PLATO DE BOBINAS	25	49	EQUIPO ELÉCTRICO	61
22	C.D.I. / BOBINAS	26	50	HERRAMIENTAS / ACCESORIOS	62
23	SILLÍN	27	51	CUBIERTAS (PULSAR 200NS)	63
24	SOPORTES DE MOTOR	28	51A	CUBIERTAS (PULSAR 200AS)	64
25	CHASIS	29	52	CALCOMANÍAS (PULSAR 200NS)	65
26	BRAZO OSCILANTE / AMORTIGUADOR	30	52A	CALCOMANÍAS (PULSAR AS200)	66
27	REPOSAPIÉ CONDUCTOR	31-32	52B	CALCOMANÍAS Y ACCESORIOS PULSAR 200NS PRO	67-68
28	GUARDABARRO DELANTERO	33-34	53	CALCOMANÍAS Y ACCESORIOS PULSAR MANIA (PULSAR 200NS)	69-71
29	GATO CENTRAL / GATO LATERAL	35	54	CALCOMANÍAS Y ACCESORIOS COPA PULSAR 200 NS	72-73
30	LLANTAS / RINES	36		LISTA DE KITS	74-75
31	DISCO FRENO DELANTERO	37		INDICE DE REFERENCIAS	76-83

ÍNDICE DE GRÁFICOS

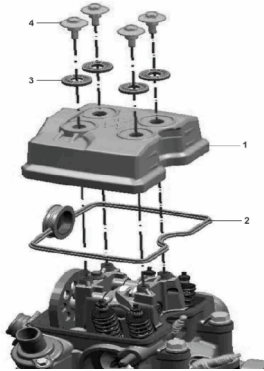


FIGURA N° 1: TAPA CULATA

PÁG. N°.
1

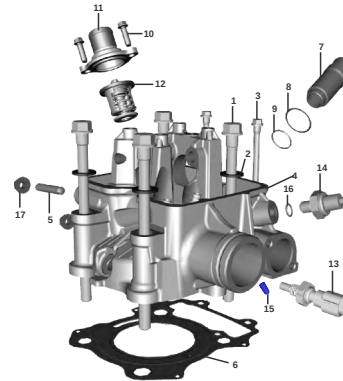


FIGURA N° 2: CULATA

PÁG. N°.
2

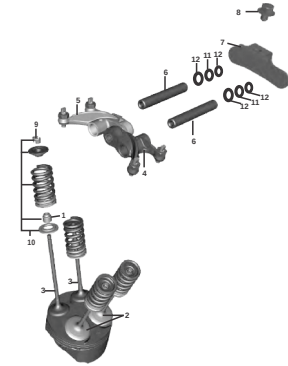


FIGURA N° 3: VÁLVULAS

PÁG. N°.
3

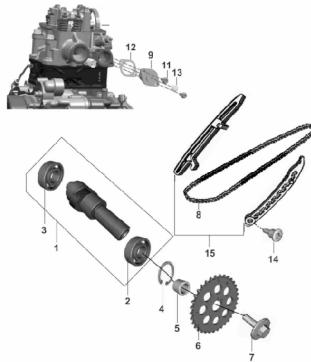


FIGURA N° 4: EJE DE LEVAS /
TENSOR CADENILLA

PÁG. N°.
4

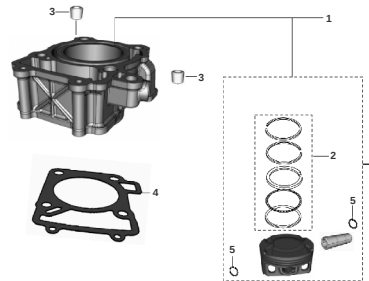


FIGURA N° 5: CILINDRO / PISTÓN

PÁG. N°.
5

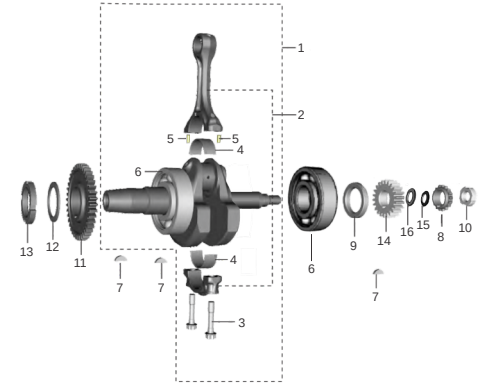


FIGURA N° 6: CIGÜEÑAL

PÁG. N°.
6

ÍNDICE DE GRÁFICOS

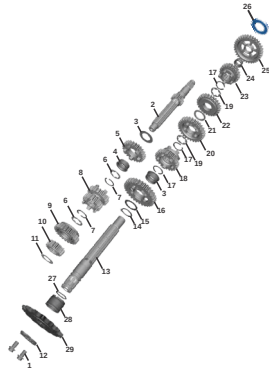


FIGURA N° 7: TRANSMISIÓN

PÁG. N°.
7 - 8

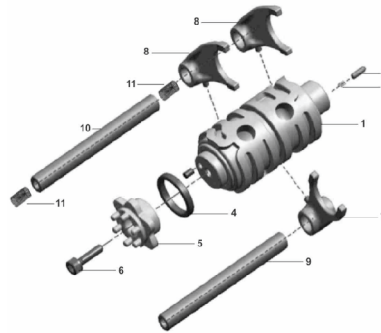


FIGURA N° 8: SELECTOR DE CAMBIOS

PÁG. N°.
9

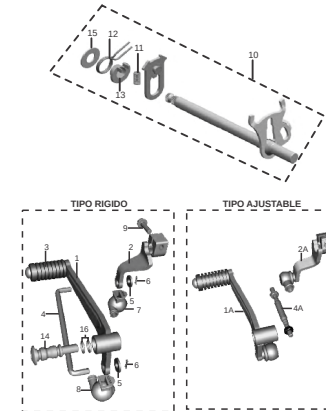


FIGURA N° 9: EJE DE CAMBIOS

PÁG. N°.
10

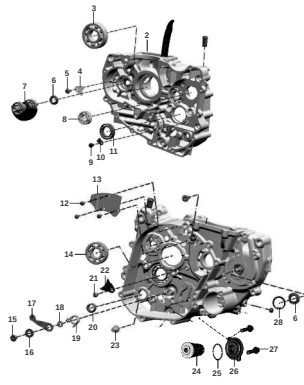


FIGURA N° 10: CARCASA DERECHA

PÁG. N°.
11 - 12

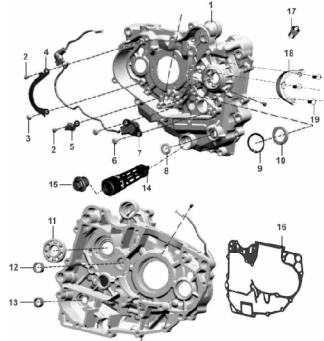


FIGURA N° 11: CARCASA IZQUIERDA

PÁG. N°.
13

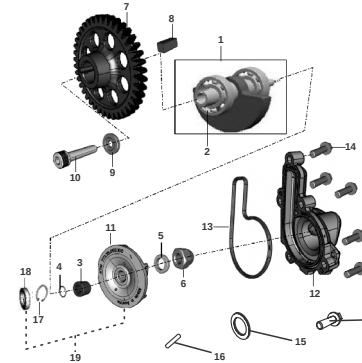


FIGURA N° 12: BOMBA DE AGUA /
PIÑÓN BALANCEADOR

PÁG. N°.
14

ÍNDICE DE GRÁFICOS

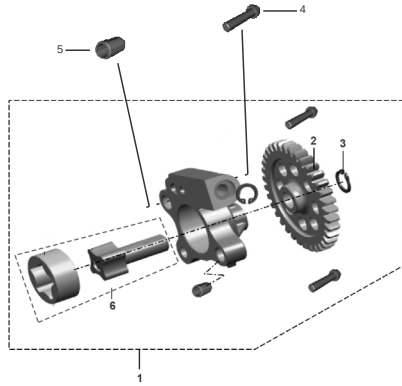


FIGURA N° 13: BOMBA DE ACEITE

PÁG. N°.
15

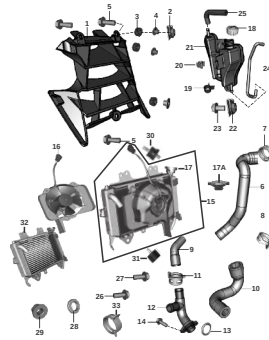


FIGURA N° 14: RADIADOR

PÁG. N°.
16 - 17

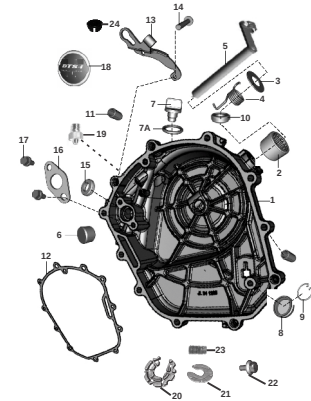


FIGURA N° 15: CUBIERTA CLUTCH

PÁG. N°.
18 - 19

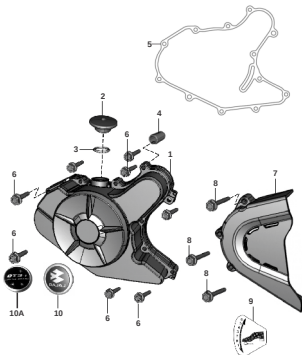


FIGURA N° 16: CUBIERTA VOLANTE

PÁG. N°.
20

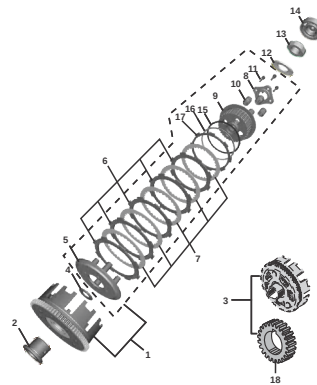


FIGURA N° 17: CLUTCH

PÁG. N°.
21

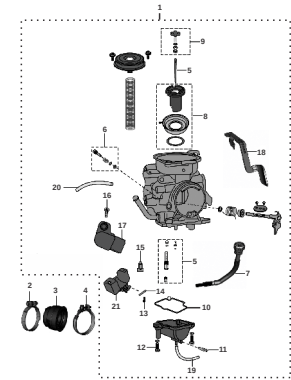


FIGURA N° 18: CARBURADOR

PÁG. N°.
22

ÍNDICE DE GRÁFICOS

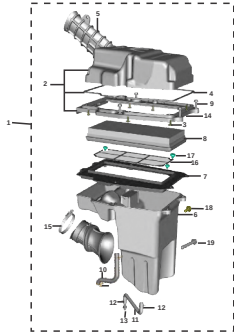


FIGURA N° 19: FILTRO DE AIRE

PÁG. N°.
23



FIGURA N° 20: SILENCIADOR

PÁG. N°.
24

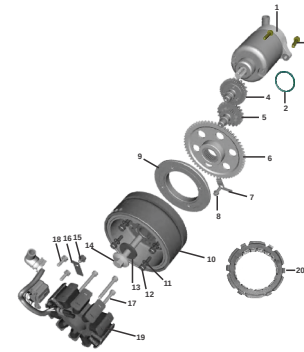


FIGURA N° 21: MOTOR DE ARRANQUE /
PLATO DE BOBINAS

PÁG. N°.
25

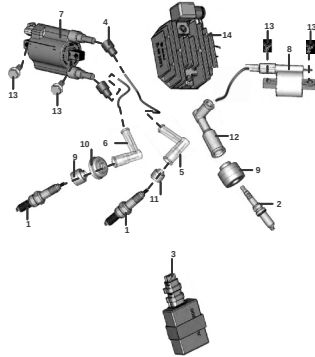


FIGURA N° 22: C.D.I. / BOBINAS

PÁG. N°.
26

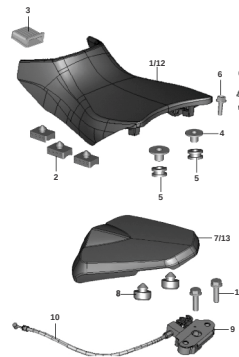


FIGURA N° 23: SILLÍN

PÁG. N°.
27

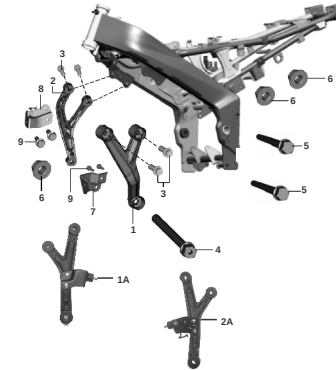


FIGURA N° 24: SOPORTES DE MOTOR

PÁG. N°.
28

ÍNDICE DE GRÁFICOS

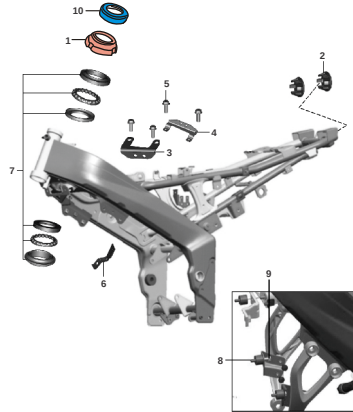


FIGURA N° 25: CHASIS

PÁG. N°.
29

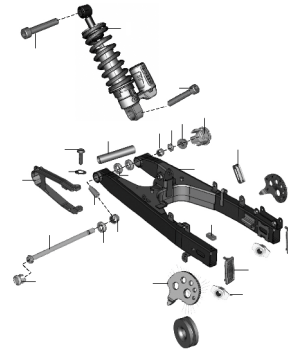


FIGURA N° 26: BRAZO OSCILANTE /
AMORTIGUADOR

PÁG. N°.
30

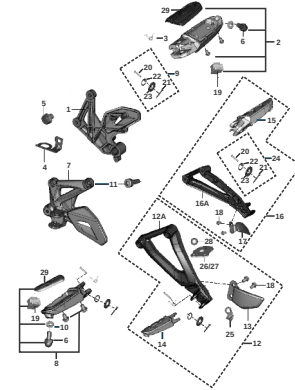


FIGURA N° 27: REPOSAPIÉ CONDUCTOR

PÁG. N°.
31 - 32

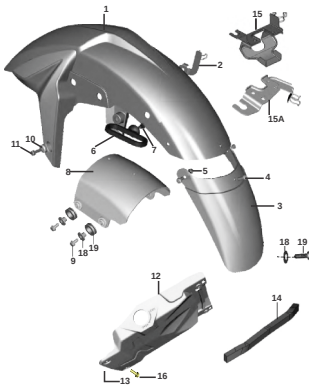


FIGURA N° 28: GUARDABARRO
DELANTERO

PÁG. N°.
33 - 34

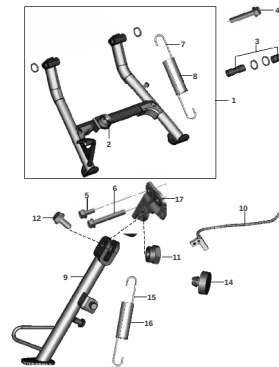


FIGURA N° 29: GATO CENTRAL / GATO
LATERAL

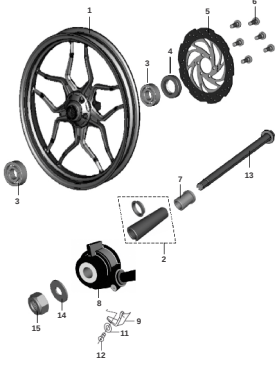
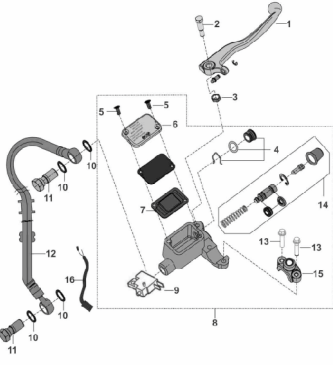
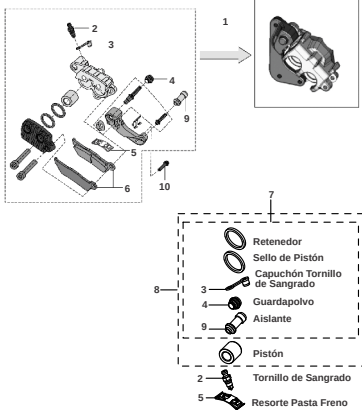
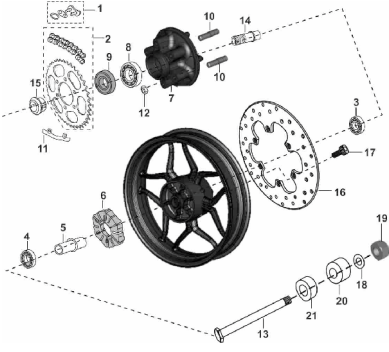
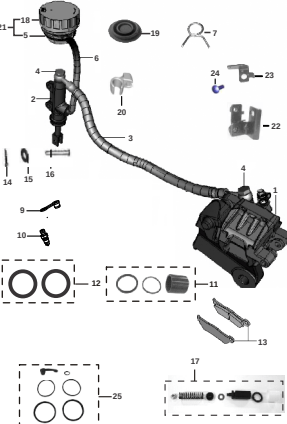
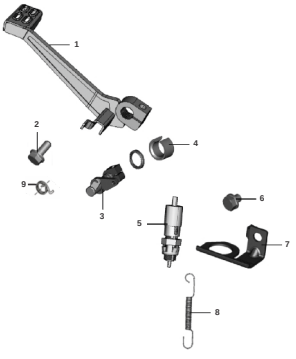
PÁG. N°.
35



FIGURA N° 30: LLANTAS / RINES

PÁG. N°.
36

ÍNDICE DE GRÁFICOS

	FIGURA N° 31: DISCO FRENO DELANTERO PÁG. N°. 37		FIGURA N° 32: BOMBA FRENO DELANTERO PÁG. N°. 38		FIGURA N° 33: CALIPER DELANTERO PÁG. N°. 39
	FIGURA N° 34: DISCO FRENO TRASERO PÁG. N°. 40		FIGURA N° 35: BOMBA FRENO TRASERO PÁG. N°. 41		FIGURA N° 36: PEDAL FRENO PÁG. N°. 42

ÍNDICE DE GRÁFICOS

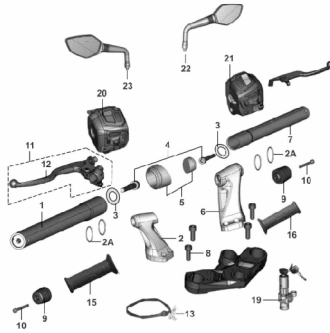


FIGURA N° 37: MANUBRIO

PÁG. N°.
43 - 44

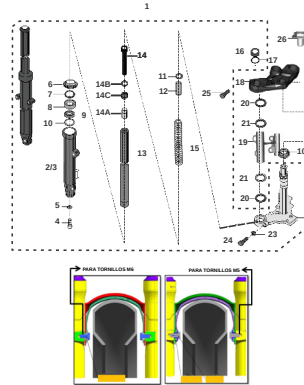


FIGURA N° 38: SUSPENSIÓN DELANTERA

PÁG. N°.
45 - 46

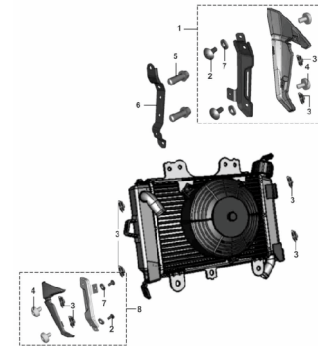


FIGURA N° 39: CUBIERTAS RADIADOR

PÁG. N°.
47

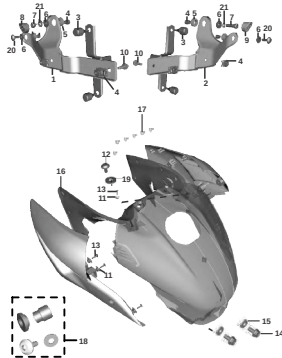


FIGURA N° 40: SOPORTES CUBIERTAS
TANQUE GASOLINA (PULSAR 200NS)

PÁG. N°.
48

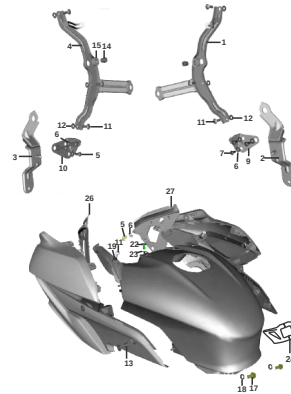


FIGURA N° 40A: SOPORTES CUBIERTAS
TANQUE GASOLINA (PULSAR AS200)

PÁG. N°.
49

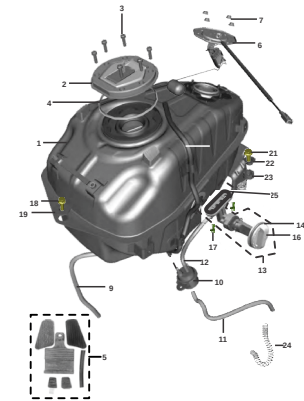
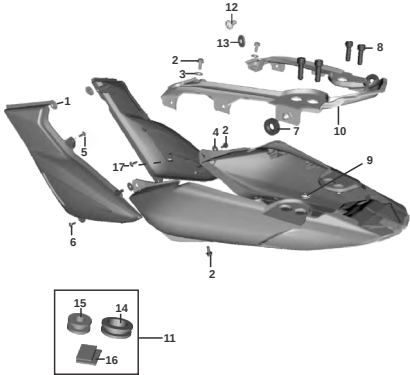
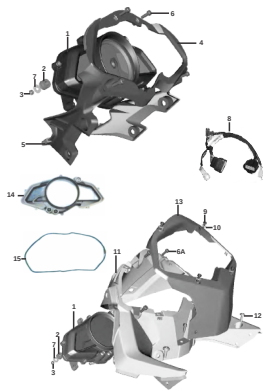
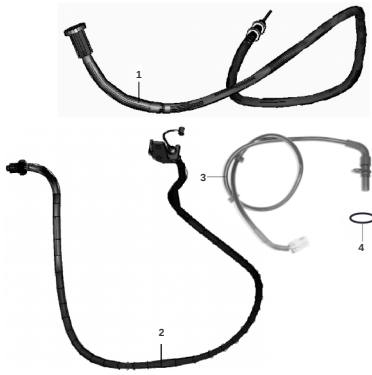
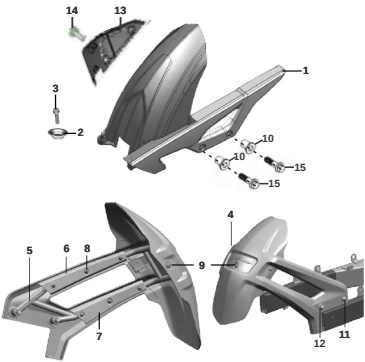
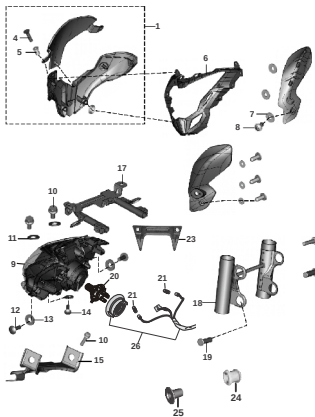
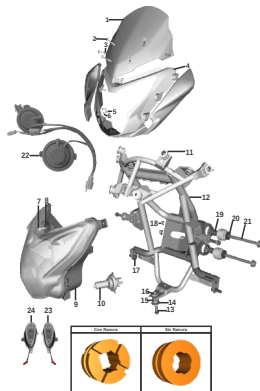


FIGURA N° 41: TANQUE DE GASOLINA /
GRIFO GASOLINA

PÁG. N°.
50 - 51

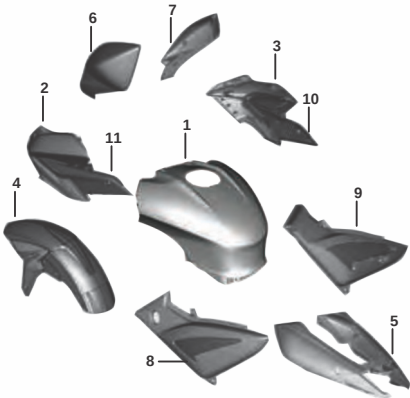
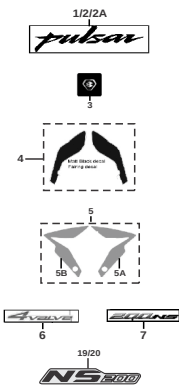
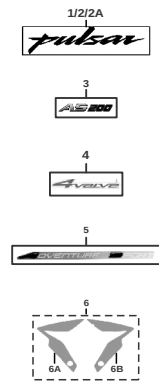
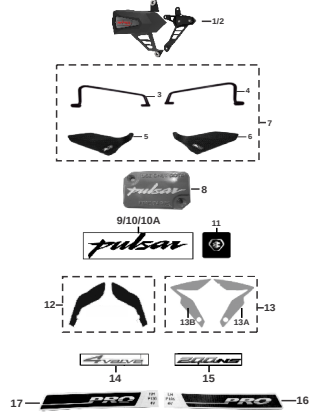
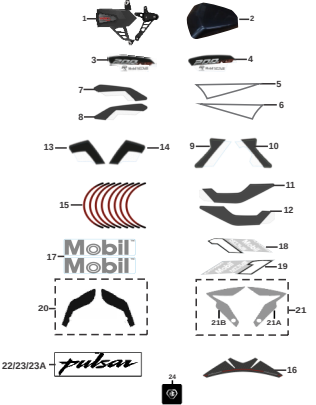
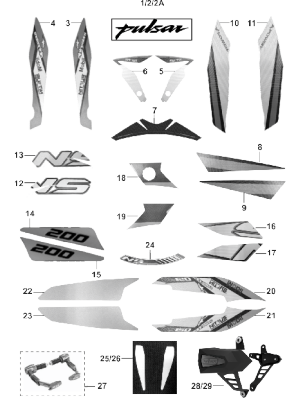
ÍNDICE DE GRÁFICOS

	FIGURA N° 42: TORNILLOS TAPAS LATERALES CUBIERTAS SILLÍN	PÁG. N°. 52		FIGURA N° 43: VELOCÍMETRO	PÁG. N°. 53		FIGURA N° 44: CABLES	PÁG. N°. 54
	FIGURA N° 45: GUARDACADENA	PÁG. N°. 55		FIGURA N° 46: FAROLA / CARENAJE (PULSAR 200NS)	PÁG. N°. 56		FIGURA N° 46A: FAROLA / CARENAJE (PULSAR AS200)	PÁG. N°. 57

ÍNDICE DE GRÁFICOS

FIGURA N° 47: DIRECCIONALES	FIGURA N° 48: STOP (PULSAR 200NS)	FIGURA N° 48A: STOP (PULSAR AS200)
FIGURA N° 49: EQUIPO ELÉCTRICO	FIGURA N° 50: HERRAMIENTAS / ACCESORIOS	FIGURA N° 51: CUBIERTAS (PULSAR 200NS)

ÍNDICE DE GRÁFICOS

					
FIGURA N° 51A: CUBIERTAS (PULSAR AS200)	PÁG. N°. 64	FIGURA N° 52: CALCOMANÍAS (PULSAR 200NS)	PÁG. N°. 65	FIGURA N° 52A: CALCOMANÍAS (PULSAR AS200)	PÁG. N°. 66
					
FIGURA N° 52B: CALCOMANÍAS Y ACCESORIOS PULSAR 200NS PRO	PÁG. N°. 67 - 68	FIGURA N° 53: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS)	PÁG. N°. 69-71	FIGURA N° 54: CALCOMANÍAS Y ACCESORIOS COPA PULSAR 200 NS	PÁG. N°. 72-73

This diagram shows an exploded view of a mechanical assembly, likely a pump or engine component. The central part is a main housing (1) with various ports and mounting points. Key components include:

- 1**: Main housing or block.
- 2**: A vertical rod or pin passing through the housing.
- 3**: A long vertical rod or pin.
- 4**: A small ring or O-ring.
- 5**: A small pin or screw.
- 6**: A large, dark, irregular gasket or seal.
- 7**: A long, dark, cylindrical component, possibly a shaft or pin.
- 8**: A small ring or O-ring.
- 9**: A small ring or O-ring.
- 10**: A small pin or screw.
- 11**: A cylindrical component with a flange, possibly a valve or plug.
- 12**: A small, dark, cylindrical component, possibly a pin or screw.
- 13**: A small, dark, cylindrical component, possibly a pin or screw.
- 14**: A small, dark, cylindrical component, possibly a pin or screw.
- 15**: A small, dark, cylindrical component, possibly a pin or screw.
- 16**: A small ring or O-ring.
- 17**: A small, dark, cylindrical component, possibly a pin or screw.





pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a carburetor. The main assembly is shown at the top left. The exploded components are numbered as follows:

- 1**: A black cylindrical component, likely a float valve or needle.
- 2**: A small black circular component, possibly a float or needle seat.
- 3**: A small black circular component, possibly a float or needle seat.
- 4**: A small black circular component, possibly a float or needle seat.
- 5**: A small black circular component, possibly a float or needle seat.
- 6**: A large black gear or flywheel.
- 7**: A small black circular component, possibly a float or needle seat.
- 8**: A long, thin black component, possibly a float or needle.
- 9**: A small black circular component, possibly a float or needle seat.
- 10**: A small black circular component, possibly a float or needle seat.
- 11**: A small black circular component, possibly a float or needle seat.
- 12**: A small black circular component, possibly a float or needle seat.
- 13**: A small black circular component, possibly a float or needle seat.
- 14**: A small black circular component, possibly a float or needle seat.
- 15**: A long, thin black component, possibly a float or needle.



pulsar
NS200-4S200

This diagram illustrates the assembly of a pressure washer lance. The main components are labeled as follows:

- 1**: The lance body, a long cylindrical tube with a trigger gun at one end and a mounting bracket at the other.
- 2**: A set of four O-rings used for sealing.
- 3**: A small cylindrical cap or plug.
- 4**: A black mounting bracket or handle.
- 5**: A small circular washer or spacer.
- 6**: A small cylindrical component, likely a pin or clip.

The diagram shows the lance body (1) with a cap (3) being inserted into its top. A bracket (4) is shown separately. A dashed box highlights the internal components: four O-rings (2), a washer (5), and a pin (6), which are used to assemble the trigger gun end of the lance.



pulsar
NS200-4S200

This diagram illustrates the exploded view of a mechanical assembly, with components numbered 1 through 16. The assembly is shown in a disassembled state to reveal its internal structure and the sequence of parts.

- Component 1:** The main housing or frame, shown in a dashed outline.
- Component 2:** A central shaft or axle passing through the housing.
- Component 3:** A small pin or screw used to secure the assembly.
- Component 4:** A central hub or bearing housing that supports the shaft.
- Component 5:** A small washer or spacer ring.
- Component 6:** A large, flanged bearing or housing component.
- Component 7:** A small pin or screw used to secure the assembly.
- Component 8:** A small washer or spacer ring.
- Component 9:** A small washer or spacer ring.
- Component 10:** A small gear or pinion.
- Component 11:** A large gear or pinion mounted on the shaft.
- Component 12:** A small washer or spacer ring.
- Component 13:** A small washer or spacer ring.
- Component 14:** A small gear or pinion.
- Component 15:** A small washer or spacer ring.
- Component 16:** A small gear or pinion.

The diagram shows the assembly of the main housing (1) around the central shaft (2). The shaft is supported by bearings (6) and a central hub (4). The shaft is also connected to a large gear (11) and a small gear (10). The assembly is secured with pins (3) and washers (5, 8, 9, 12, 13, 15, 16). The diagram uses dashed lines to indicate the assembly path and the relative positions of the components.



FIGURA N° 7: TRANSMISIÓN (1/2)

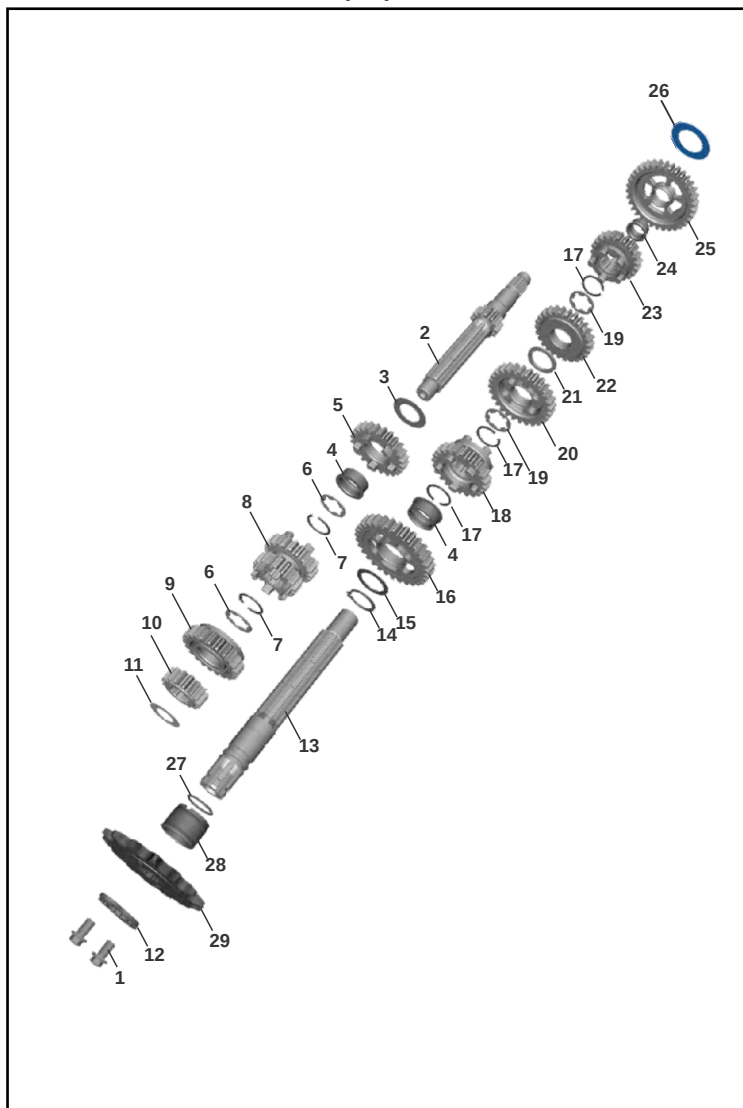


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	LAE00017	Tornillo M6x10L	2	2	
2	JG551027	Eje Caja (Clutch)	1	1	
3	39215811	Arandela Eje Caja	1	1	
4	JG551013	Buje Caja	2	2	
5	JG551213	Piñón Caja de 6a. (24T)	1	1	
6	JG551020	Arandela	2	2	
7	BF551037	Pin Seguridad	2	2	
8	JG551214	Piñón Múltiple Caja 3a & 4a (18/21T)	1	1	
9	JG551220	Piñón Caja de 5a. (22T)	1	1	
10	JG551227	Piñón de 2a. (15T)	1	1	
11	JG551022	Arandela	1	1	
12	JG551019	Arandela Sprocket	1	1	
13	JG551025	Eje Piñón Salida	1	1	
14	DH101235	Pin Piñón Caja	1	1	
15	39216611	Arandela Caja	1	1	
16	JG551228	Piñón de 2a. (31T)	1	1	
17	BF551037	Pin Seguridad	2	2	
18	JG551222	Piñón de 5a. (23T)	1	1	
19	JG551020	Arandela	2	2	
20	JG551223	Piñón Caja de 3a. (28T)	1	1	
21	JG551021	Arandela	1	1	
22	JG551215	Piñón Caja de 4a. (26T)	1	1	
23	JG551224	Piñón Caja de 6a. (22T)	1	1	
24	JG551000	Buje Caja	1	1	
25	JG551225	Piñón Caja de 1a. (34T)	1	1	

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 29. The assembly is shown in a disassembled state, with parts arranged in a diagonal line from bottom-left to top-right. The components include:

- 1:** A small pin or screw.
- 2:** A long shaft or axle.
- 3:** A small ring or washer.
- 4:** A small bush or sleeve.
- 5:** A gear or impeller.
- 6:** A small ring or washer.
- 7:** A small ring or washer.
- 8:** A gear or impeller.
- 9:** A small ring or washer.
- 10:** A small ring or washer.
- 11:** A small ring or washer.
- 12:** A small pin or screw.
- 13:** A long shaft or axle.
- 14:** A small ring or washer.
- 15:** A small ring or washer.
- 16:** A gear or impeller.
- 17:** A small ring or washer.
- 18:** A small ring or washer.
- 19:** A small ring or washer.
- 20:** A small ring or washer.
- 21:** A gear or impeller.
- 22:** A small ring or washer.
- 23:** A small ring or washer.
- 24:** A small ring or washer.
- 25:** A gear or impeller.
- 26:** A small ring or washer.
- 27:** A small ring or washer.
- 28:** A small ring or washer.
- 29:** A small pin or screw.



pulsar
NS200 - 4S200

An exploded view diagram of a mechanical assembly, likely a pump or motor component. The diagram shows 12 numbered parts: 1. A central cylindrical housing with multiple mounting holes and a flange. 2. A small pin or screw. 3. A small pin or screw. 4. A circular ring or gasket. 5. A flange or mounting plate with four holes. 6. A small pin or screw. 7. A curved bracket or support arm. 8. Two curved brackets or support arms. 9. A long, hollow cylindrical shaft. 10. A long, hollow cylindrical shaft. 11. A short, hollow cylindrical shaft. 12. A small pin or screw. Dashed lines indicate the assembly path for each component.



FIGURA N° 9: EJE DE CAMBIOS

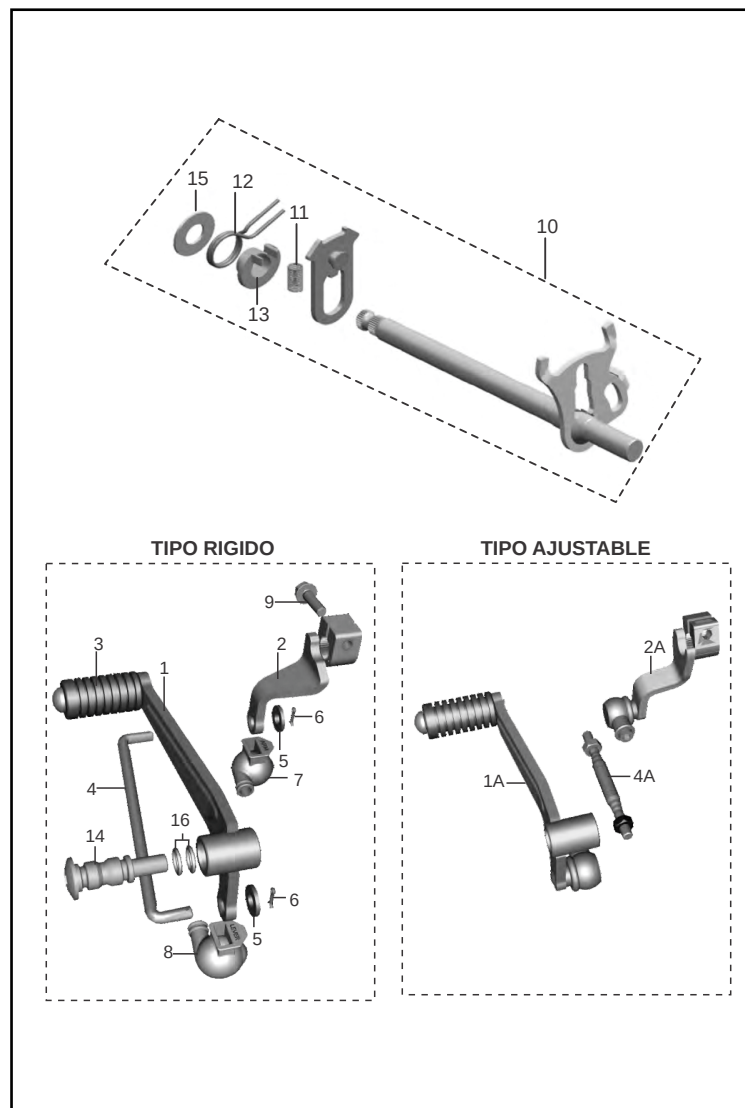


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL561401	Pedal Cambios	1	1	Tipo Rigido
1A	JL561205		1	1	Tipo Ajustable
2	JL561404	Leva Pedal Cambios	1	1	Para JL561401
2A	JL561206		1	1	Para JL561205
3	DH101509	Caucho Pedal Cambios	1	1	
4	JL561405	Eje Pedal Cambios	1	1	Para JL561401
4A	52JF0062		1	1	Para JL561205
5	JD561416	Arandela	2	2	Para JL561401
6	39080808	Pin	2	2	Para JL561401
7	JL561407	Guardapolvo	1	1	Para JL561401
8	JL561408	Guardapolvo	1	1	
9	39190204	Tornillo M6	1	1	
10	JG561200	Eje Cambios	1	-	
	DT561206		-	1	
11	JG561215	Resorte Leva Cambios	1	1	
12	JG561218	Resorte Eje Cambios	1	-	
	JG561232		-	1	
13	JG561217	Buje Eje Cambios	1	1	
14	JL561409	Tornillo	1	1	
15	JL561410	Arandela	1	1	
16	01100905	Anillo Retenedor	2	2	

FIGURA N° 10: CARCASA DERECHA (1/2)

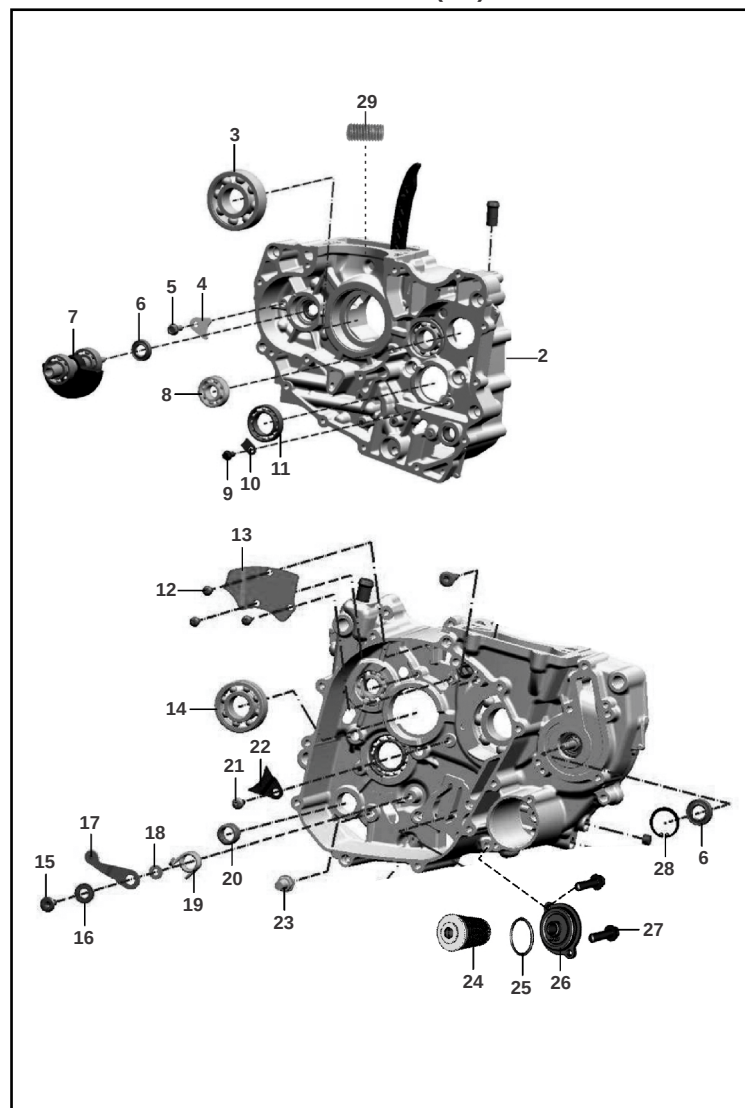


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL501003	Motor Completo	1	-	No Ilustrado
	JL501040		-	1	No Ilustrado
2	36JL0004	Carcasa Derecha	1	1	
3	39193120	Rodamiento Bolas Cigüeñal	1	1	
4	JG541046	Platina Balinera Carcasa	1	1	
5	LAD00077	Tornillo M6x16	1	1	
6	JG601007	Reten 12x24x5.5	2	2	
7	JU531213	Balanceador	1	-	Cuñero Con Guia
	JU531215		1	1	Cuñero Redondo
	JL531205		1	1	Cuñero Largo 15.5 mm.
8	39260220	Rodamiento Bolas 6202/HN3	1	1	
9	DH101383	Tornillo 6x12	1	1	
10	JG541059	Platina Balinera Carcasa	1	1	
11	39260120	Rodamiento Bolas	1	1	
12	LBB00006	Tornillo	3	3	
13	JU541005	Platina	1	1	
14	59200028	Rodamiento Bolas	1	1	
15	JG561204	Tornillo	1	1	
16	JG561205	Arandela	1	1	
17	JG561009	Leva Eje Cambios	1	1	
18	39200511	Arandela	1	1	
19	JG561226	Resorte	1	1	
20	39256220	Rodillo Eje Clutch 13x19x12	1	1	
21	39074601	Tornillo M6	1	1	
22	JG541045	Platina Balinera Carcasa	1	1	

This exploded view diagram illustrates the assembly of a motorcycle engine crankcase. The main components are the crankcase halves (2 and 3) and the crankshaft (7). The diagram shows the following parts and their assembly sequence:

- Top Cover (3)**: The upper half of the crankcase, which includes the timing cover (29).
- Bottom Cover (2)**: The lower half of the crankcase, which includes the main bearing housing (12) and the crankshaft support (13).
- Crankshaft (7)**: The central rotating component, shown with its connecting rod (15) and piston (16).
- Timing Components**: The timing chain (17) and timing sprockets (18, 19) are shown being installed onto the crankshaft and the timing cover.
- Bearing Components**: The main bearings (20, 21) and the crankpin bearing (22) are shown being installed onto the crankshaft and the main bearing housing.
- Sealing and Fastening Components**: The oil seal (23) is shown being installed onto the crankshaft. The oil pump (24) and its drive gear (25) are shown being installed onto the crankshaft. The oil pump cover (26) and its fastener (27) are shown being installed onto the oil pump.
- Other Components**: The timing cover (29) is shown being installed onto the top cover. The timing cover fastener (28) is shown being installed onto the timing cover.



pulsar
NS200-45200

FIGURA N° 11: CARCASA IZQUIERDA

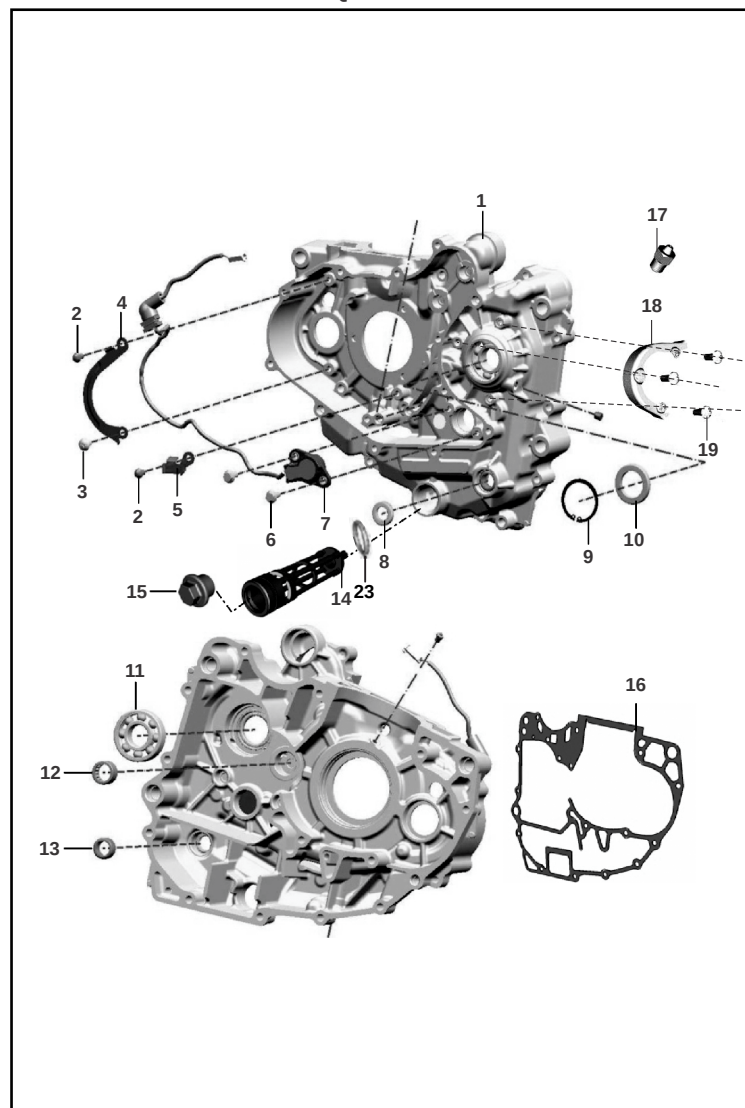


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	36JL0003	Carcasa Izquierda	1	1	
2	LAE00014	Tornillo	2	2	
3	DH101381	Tornillo	1	1	
4	JG541063	Platina Instalación Superior	1	1	
5	JG541044	Platina Instalación Inferior	1	1	
6	39177304	Tornillo M5x16	2	2	
7	JL351800	Swiche Neutra	1	1	
8	39104319	Retén Eje Cambios	1	1	
9	KEBA3715	Pin Seguridad Eje de Salida	1	1	
10	DG101456	Retén Eje de Salida	1	1	
11	59200006	Rodamiento Bolas Eje Salida	1	1	
12	JG541015	Rodamiento Agujas	1	1	
13	39256220	Rodamiento Agujas	1	1	
14	JG571024	Malla Filtro Aceite	1	1	
15	JA541048	Tapón Carcasa	1	1	
16	JG541041	Empaque Carcasa	1	1	
	36JL0014	Kit Empaques	1	1	Ref. Pág. N° 74
17	JG541074	Inyector Aceite	1	1	
18	JG541058	Protector Cadena	1	1	
19	KBBG0612	Tornillo Protector Cadena	3	3	
20	KAEQ0640	Tornillo	10	10	No Ilustrado
21	LAD00081	Tornillo	4	4	No Ilustrado
22	39218106	Buje Guía	4	4	No Ilustrado
23	LJA00004	Anillo Retenedor	1	1	

FIGURA N° 12: BOMBA DE AGUA / PIÑÓN BALANCEADOR

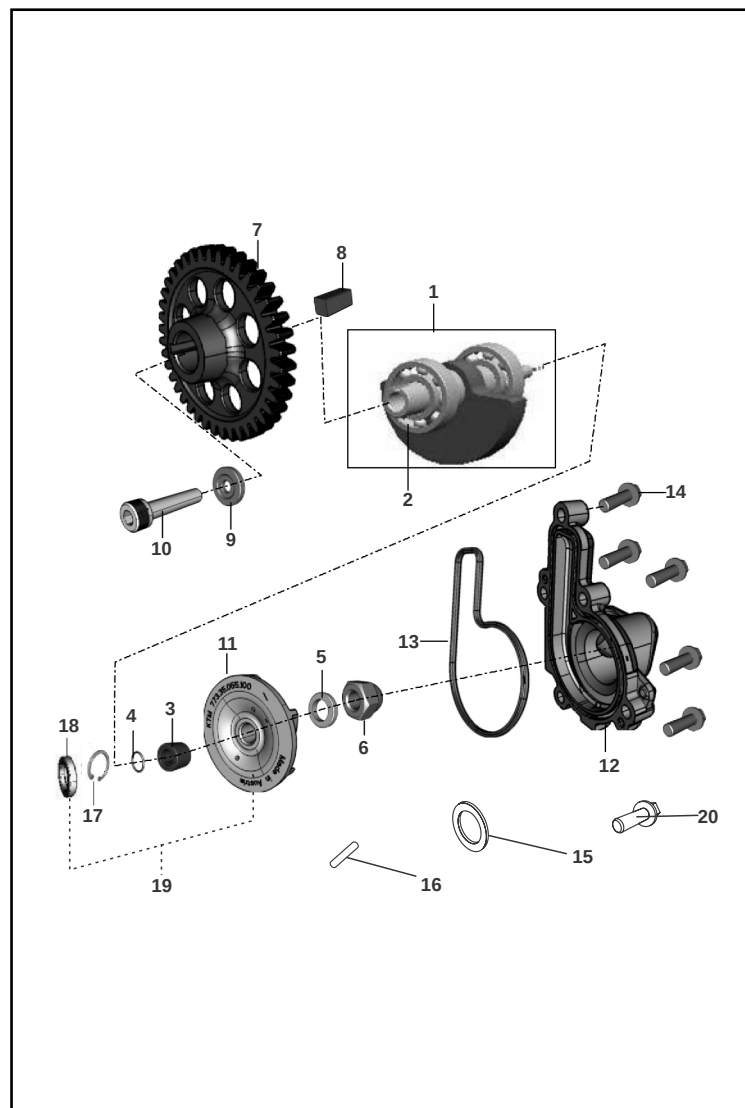


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JU531213	Balanceador	1	-	Cuñero con Guía
	JU531215		1	1	Cuñero Redondo
	JL531205		1	1	Cuñero Largo 15.5 mm.
2	59200036	Rodamiento Bolas	2	2	
3	JG531211	Buje Balanceador	1	-	Para JU531213
	JG531228		1	1	Para JU531215
	JL531203		1	1	Para JL531205
4	JG531212	Anillo Retenedor	1	-	Para JU531213
	JG531229		1	1	Para JU531215-JL531205
5	JG531215	Arandela	1	1	
6	JG601005	Tuerca Balanceador	1	1	
7	JG531207	Piñon Balanceador	1	1	
8	DS101154	Cuña Piñon Balanceador	1	1	
9	DH101048	Arandela Eje Levas	1	1	
10	DK101386	Tornillo M8x40	1	1	
11	JG601013	Turbina Bomba Agua	1	1	
12	JL601005	Tapa Bomba Agua	1	1	
13	JG601012	Anillo Retenedor Cubierta Bomba Agua	1	1	
14	KADQ0620	Tornillo	5	5	
15	39166511	Arandela	1	1	
16	39260607	Pin	2	2	
17	LEB00001	Pin de Seguridad	1	1	
18	JG601007	Retenedor 12x24x5.5	2	2	
19	36JL0039	Kit Retenes y Turbina	1	1	
20	KADQ0606	Tornillo	10	10	

This diagram shows an exploded view of a mechanical assembly. The components are labeled with numbers 1 through 6:

- 1**: The main housing or frame, shown as a central casting with mounting holes.
- 2**: A large gear or pulley with multiple teeth, positioned to the right of the housing.
- 3**: A small ring or O-ring, located between the gear and the housing.
- 4**: A long bolt or screw, positioned above the housing.
- 5**: A short bolt or screw, positioned to the left of the housing.
- 6**: A cylindrical component, possibly a bush or a bearing, positioned below the housing.

The assembly is shown in a disassembled state, with dashed lines indicating the relative positions and alignment of the parts.



pulsar
NS200-4S200

FIGURA N° 14: RADIADOR (1/2)

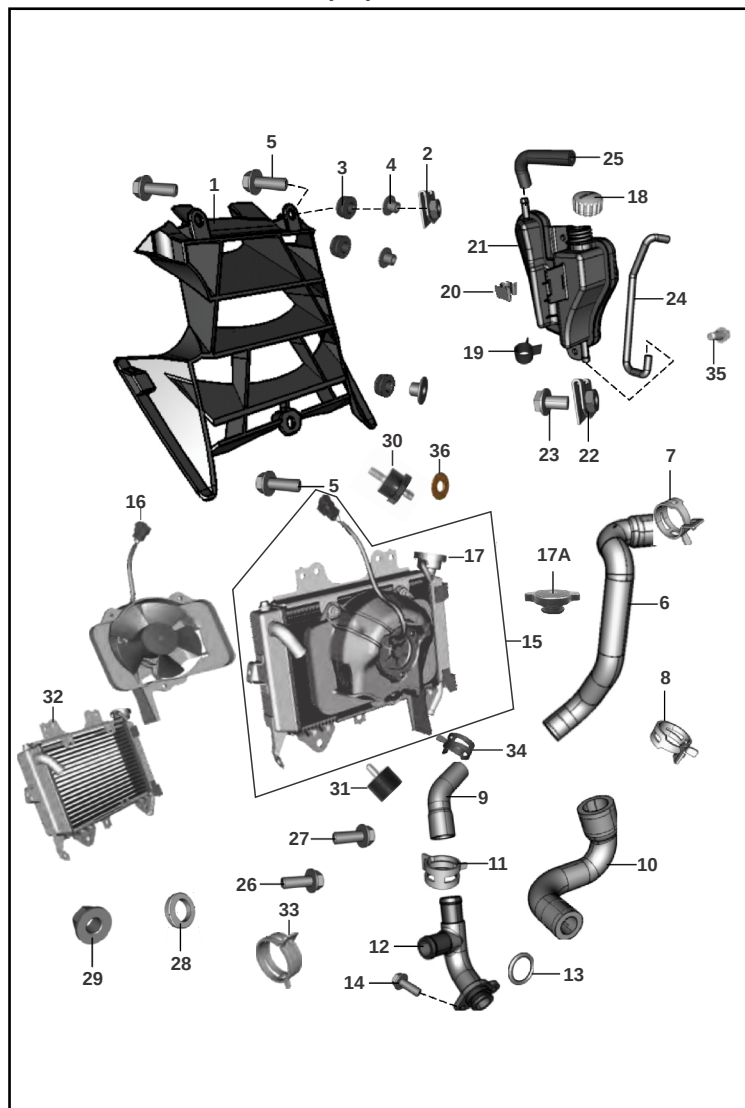


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL601210	Carenaje Radiador	1	1	
2	DJ181065	Tuerca M6	3	3	
3	JL181256	Antivibrante	3	3	
4	JW171015	Buje 8.2 mm.	3	3	
	JL601231	Buje 9.2 mm.	3	3	
5	KADA0616	Tornillo	3	3	
6	JL601000	Manguera Radiador	1	1	
7	JG601210	Abrazadera	1	1	
8	JG601209	Abrazadera	2	2	
9	JL601220	Manguera Radiador	1	1	
10	JL601219	Manguera Radiador	1	1	
11	JL601212	Abrazadera	1	1	
12	JL601208	Manguera Radiador	1	-	(Con Adapt. De 2.5 mm.)
	JL601228	Manguera Radiador	1	1	(Con Adapt. De 3.5 mm.)
13	JG601221	Anillo Retenedor	1	-	
	LJA00005		-	1	
14	39220404	Tornillo	2	2	
15	JL601200	Radiador Completo	1	-	Hasta Modelo 2014
	JL601238		1	1	Desde Modelo 2015
16	JY601235	Ventilador Radiador	1	1	
17	JG601229	Tapa Radiador	1	-	Plástica
17A	JG601235	Tapa Radiador	1	1	Metálica
18	JG601211	Tapa Tanque de Reserva	1	1	
19	JL601215	Abrazadera	2	2	
20	JG171029	Abrazadera Tanque de Reserva	3	3	

This exploded view diagram illustrates the assembly of a vehicle's engine and chassis components. The parts are numbered as follows:

- 1**: Main chassis frame.
- 2**: Bolt for the front suspension.
- 3**: Nut for the front suspension.
- 4**: Washer for the front suspension.
- 5**: Bolt for the rear suspension.
- 6**: Exhaust pipe.
- 7**: Exhaust flange.
- 8**: Exhaust hanger.
- 9**: Exhaust elbow.
- 10**: Exhaust elbow.
- 11**: Exhaust flange.
- 12**: Exhaust elbow.
- 13**: Washer for the exhaust elbow.
- 14**: Bolt for the exhaust elbow.
- 15**: Engine block.
- 16**: Fan assembly.
- 17**: Fan belt.
- 18**: Oil cap.
- 19**: Bolt for the oil cap.
- 20**: Nut for the oil cap.
- 21**: Bolt for the oil cap.
- 22**: Washer for the oil cap.
- 23**: Bolt for the oil cap.
- 24**: Exhaust pipe.
- 25**: Exhaust elbow.
- 26**: Bolt for the fan assembly.
- 27**: Nut for the fan assembly.
- 28**: Washer for the fan assembly.
- 29**: Bolt for the fan assembly.
- 30**: Bolt for the fan assembly.
- 31**: Nut for the fan assembly.
- 32**: Radiator.
- 33**: Washer for the radiator.
- 34**: Bolt for the radiator.
- 35**: Bolt for the exhaust flange.
- 36**: Washer for the exhaust flange.



pulsar
NS200-4S200

FIGURA N° 15: CUBIERTA CLUTCH (1/2)

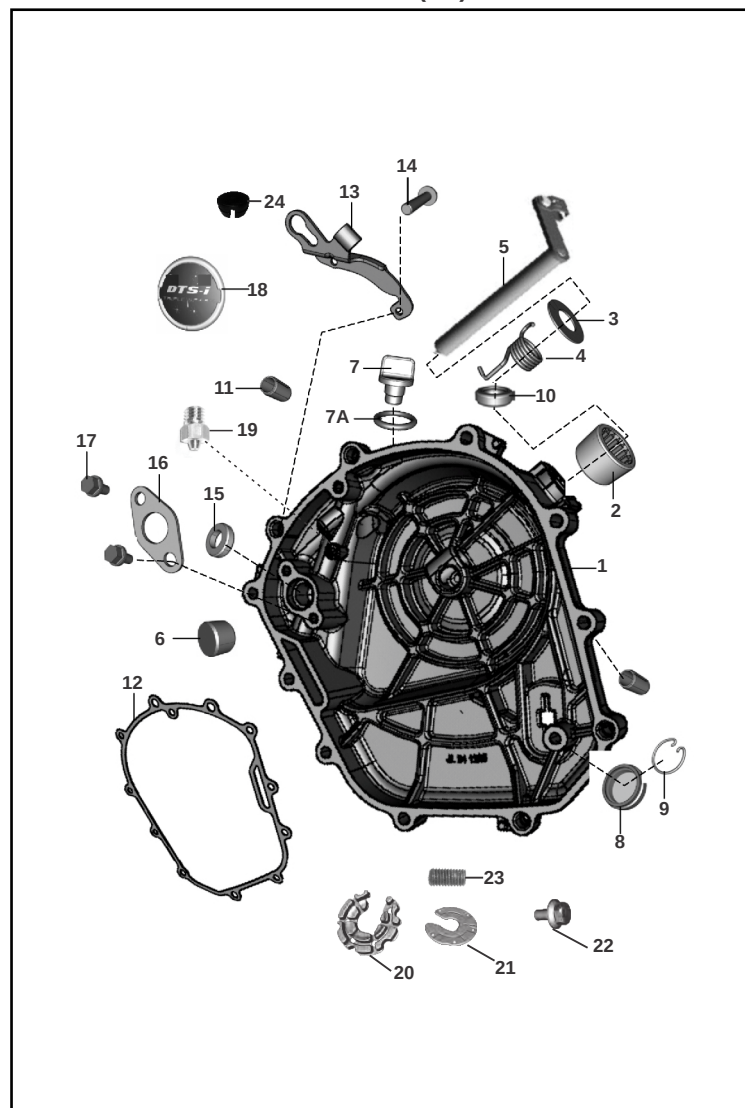


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	52JL0073	Cubierta Clutch	1	-	Dorada
	52JL0143		1	-	Dorado Oscuro
	DT541212	Cubierta Clutch	-	1	
2	39199020	Rodamiento Agujas	1	1	
3	LDB00020	Arandela	1	1	
4	JG551017	Resorte Eje Interno Clutch	1	1	
5	JG551015	Eje Interno Clutch	1	-	
	DT541019	Eje Interno Clutch	-	1	
6	JU551401	Empujador Clutch	1	1	
7	JG541230	Tapón Aceite	1	1	
7A	39153721	Anillo Retenedor	1	1	
8	DG101418	Visor Nivel Aceite	1	-	
	JL541227	Visor Nivel Aceite	-	1	
9	DS101215	Pin Seguridad	1		
	DH102117	Pin Seguridad	-	1	
10	39104119	Reten Eje Leva Clutch	1	1	
11	39099906	Pin Guía Carcasa	2	2	
12	JL541207	Empaque Carcasa Clutch	1	1	Ref. Pág. N° 74
	36JL0014	Kit Empaques	1	1	
13	JL541210	Soporte Cable Clutch	1	-	
	JL541246	Soporte Cable Clutch	-	1	
14	KADQ0630	Tornillo M6X30	11	-	
	KAEQ0630		-	11	
15	39104619	Reten Leva De Cambios	1	1	
16	JG541231	Arandela	1	1	
17	DH101383	Tornillo 6X12	2	2	

This diagram illustrates the exploded view of a motorcycle engine crankcase assembly. The central component is the crankcase (1), which features a cooling fan and a 'DTS-i' logo. Surrounding it are various parts including: a timing chain cover (2), a timing chain (3), a timing chain guide (4), a timing chain tensioner (5), a timing chain sprocket (6), a timing chain sprocket (7), a timing chain sprocket (7A), a timing chain sprocket (8), a timing chain sprocket (9), a timing chain sprocket (10), a timing chain sprocket (11), a timing chain sprocket (12), a timing chain sprocket (13), a timing chain sprocket (14), a timing chain sprocket (15), a timing chain sprocket (16), a timing chain sprocket (17), a timing chain sprocket (18), a timing chain sprocket (19), a timing chain sprocket (20), a timing chain sprocket (21), a timing chain sprocket (22), a timing chain sprocket (23), and a timing chain sprocket (24). The diagram uses dashed lines to show the assembly sequence and alignment of the parts.



pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a Bajaj Pulsar 150 engine. The central component is the engine block (1), which features a cooling fan. Key parts shown include:

- Top Cover (2)**: A black plastic cover for the top of the engine.
- Oil Seal (3)**: A circular seal that fits into the top of the engine block.
- Timing Chain (4)**: A chain used to synchronize the engine's valves and pistons.
- Valve Train Components (6)**: Several screws and shims used to adjust the valve clearance.
- Timing Cover (5)**: A large, irregularly shaped cover that protects the timing chain.
- Water Pump (7)**: A component that circulates coolant through the engine's cooling system.
- Water Pump Drive (8)**: A small gear or pulley that drives the water pump.
- Water Pump Housing (9)**: The outer casing for the water pump.
- Timing Cover Gasket (10)**: A circular gasket that seals the timing cover to the engine block.
- Timing Cover Mounting (10A)**: A circular component that secures the timing cover to the engine.

The diagram uses numbered callouts (1-10A) to identify each part, and dashed lines indicate the assembly sequence and fitment of the components.



pulsar
NS200-4S200

FIGURA N° 17: CLUTCH

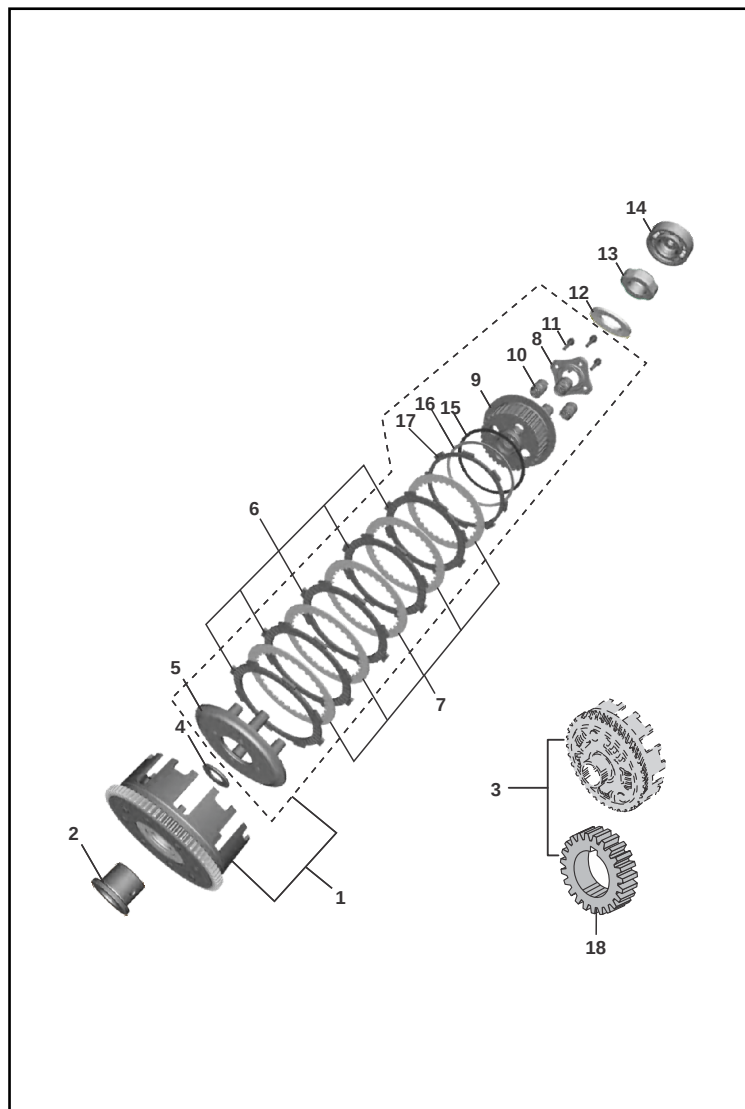


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JU551404	Clutch Completo	1	-	
	DT551400		-	1	
2	JG551427	Buje Corona Clutch	1	1	
3	36JL0005	Kit Corona y Piñon Primario	1	1	
4	JG551428	Arandela Corona Clutch	1	1	
5	JG551449	Porta Resortes Clutch	1	-	
	DT551402		-	1	
6	36JU0002	Kit Discos Clutch	1	1	
7	JG551447	Disco Separador Clutch	5	5	
8	JG551443	Porta Resortes Clutch	1	-	
	DT551401		-	1	
9	JU551406	Corona Interna Clutch	1	1	
10	JU551402	Resorte Clutch	4	-	
	DT551403		-	4	
11	JG551451	Tornillo 6x22	4	4	
12	39220011	Arandela Piñon Primario	1	1	
13	DH101648	Tuerca Clutch	1	1	
14	JG551423	Rodamiento Bolas	1	1	
15	DP101243	Arandela Anti-Brinco	1	1	
16	DP101114	Arandela Anti-Brinco	1	1	
17	DP101109	Disco Clutch	1	1	
18	JG551216	Piñon Primario	1	1	
19	36JL0091	Kit Anti-Brinco	1	1	Items: 10, 15, 16,17

FIGURA N° 18: CARBURADOR

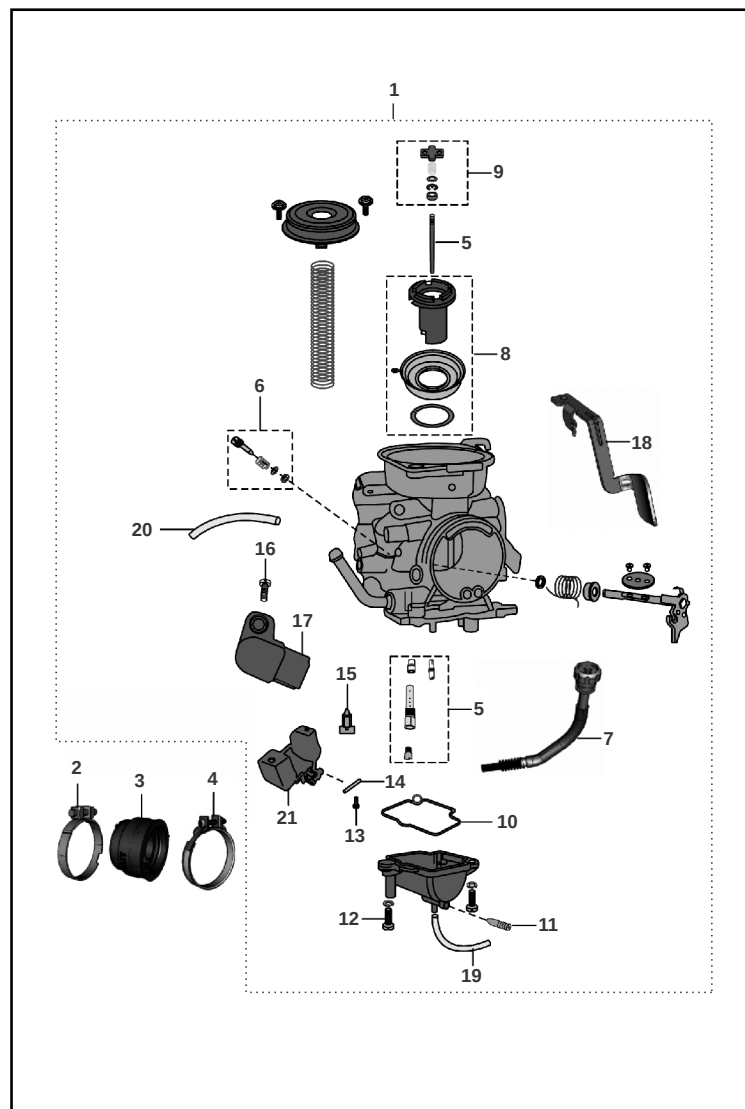


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL581201	Carburador	1	1	
2	JL581300	Abrazadera	1	1	
3	JL511016	Antivibrante	1	1	
4	JL581027	Abrazadera	1	1	
5	36JL0019	Kit Boquereles y Aguja Carburador	1	1	Ref. Pág. N° 74
6	36JL0020	Kit Tornillos Ajuste Carburador	1	1	Ref. Pág. N° 75
7	36JL0021	Cable Controlador Carburador	1	1	Ref. Pág. N° 75
8	36JL0022	Kit Válvula Carburador	1	1	
9	36JL0024	Kit Pines-arandela Carburador	1	1	Ref. Pág. N° 75
10	36JL0023	Kit Retenedores y Empaques	1	1	Ref. Pág. N° 75
11	JA581314	Tornillo Drenaje	1	1	
12	CB121042	Tornillo Taza Carburador	2	2	
13	DH121064	Tornillo	1	1	
14	DH121063	Pin Pasador Flota Carburador	1	1	
15	DK121047	Aguja Flota Carburador	1	1	
16	39178001	Tornillo M5	2	2	
17	JD351800	Posicionador Acelerador (TPS)	1	1	
18	JL581204	Leva Choke	1	1	
19	JL581205	Manguera Desfogue	1	1	
20	JL581206	Manguera Gasolina	1	1	
21	DK121045	Flota Carburador	1	1	

FIGURA N° 19: FILTRO DE AIRE

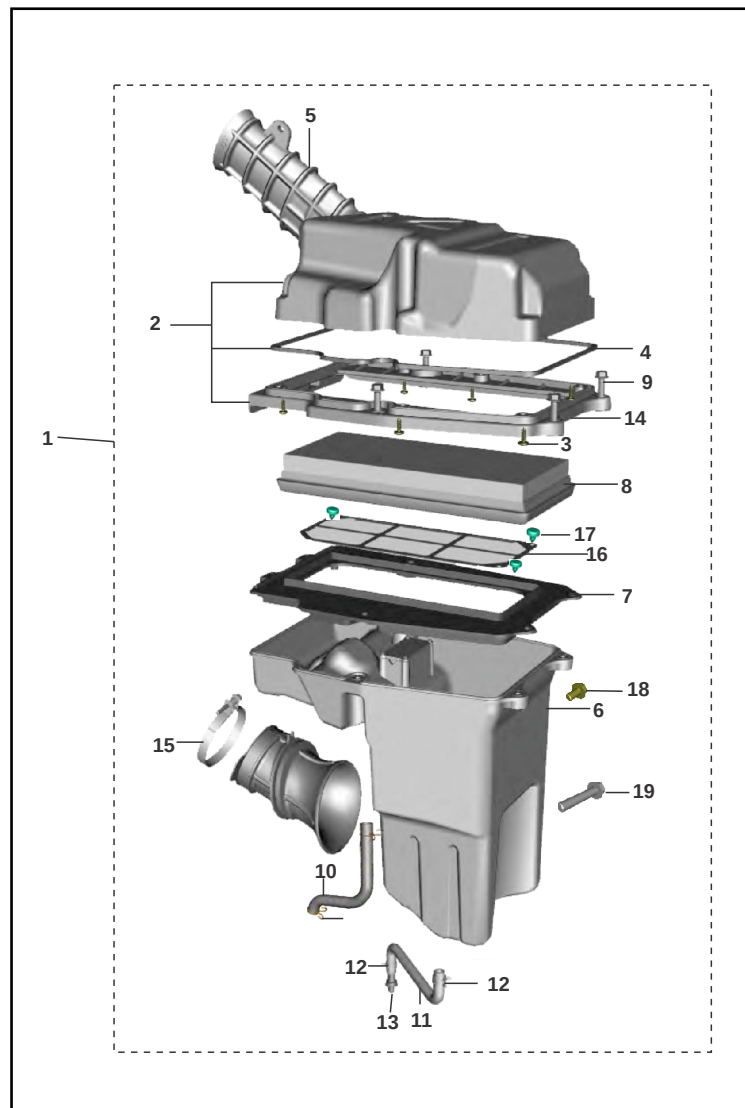


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL581000	Caja Filtro Aire Completo	1	-	
	JL581050		-	1	
2	JL581023	Tapa Caja Filtro Aire	1	1	
3	LBB00004	Tornillo	6	6	
4	JL581025	Empaque Caja Filtro Aire	1	1	
5	JL581007	Conducto Filtro Aire	1	1	
6	JL581024	Caja Filtro Aire Sola	1	1	
7	JL581018	Cubierta Inferior Filtro Aire	1	1	
8	JL581009	Filtro Aire	1	1	
9	KAEM0622	Tornillo	4	4	
10	JL581016	Manguera Desfogue	1	1	
11	JL581015	Manguera Desfogue Filtro Aire	1	1	
12	DG121002	Abrazadera	2	2	
13	DS121126	Tapón	1	1	
14	JL581022	Cubierta Superior Filtro Aire	1	1	
15	AP121064	Abrazadera	1	1	
16	JL581004	Rejilla Filtro Aire	1	1	
17	KBQA3506	Tornillo	3	3	
18	KADM0610	Tornillo 6x10	1	1	
19	KADA0630	Tornillo 6x30	1	1	
20	39023911	Arandela	2	-	No Ilustrado
	LDB00023		-	2	
21	JL581010	Conducto Filtro Aire	1	1	No Ilustrado

FIGURA N° 20: SILENCIADOR

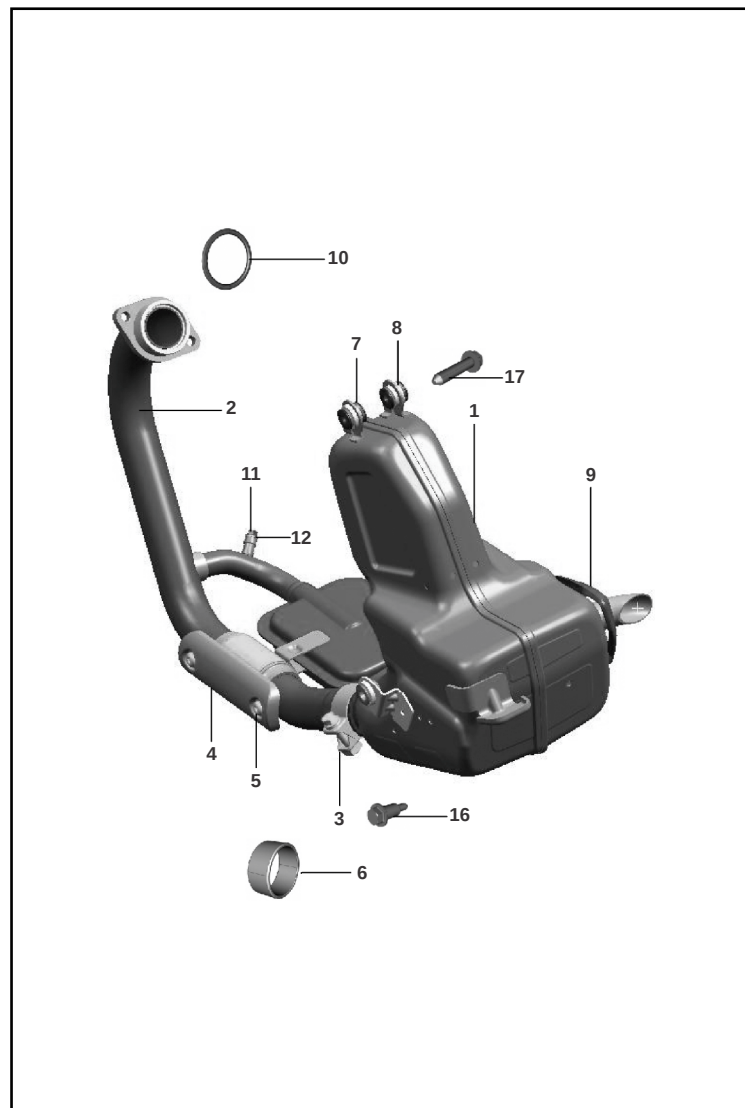


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL591052	Silenciador	1	1	
2	JL591048	Tubo Escape	1	1	
3	JG591038	Abrazadera	1	1	
4	JL591144	Protector Tubo Escape	1	1	
5	DH101607	Tornillo	4	4	
6	JG591039	Empaque Tubo Escape	1	1	
7	JG591096	Buje	4	4	
8	JG591097	Antivibrante	4	-	
9	JL591165		4	4	Desde Marzo 2014
10	JL591075	Protector Silenciador	1	1	
11	JG591070	Empaque Silenciador	1	1	
12	39275404	Tornillo	1	1	
13	39249211	Arandela	1	1	
14	JG591053	Antivibrante	4	4	No Ilustrado
15	KADQ0625	Tornillo M6	2	2	No Ilustrado
16	JG591088	Tuerca M6	2	2	No Ilustrado
17	JL591086	Tornillo	2	2	
18	JL591148	Tornillo Soporte Silenciador	2	-	
19	KADA0630		-	2	
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					
46					
47					
48					
49					
50					

FIGURA N° 21: MOTOR DE ARRANQUE / PLATO DE BOBINAS

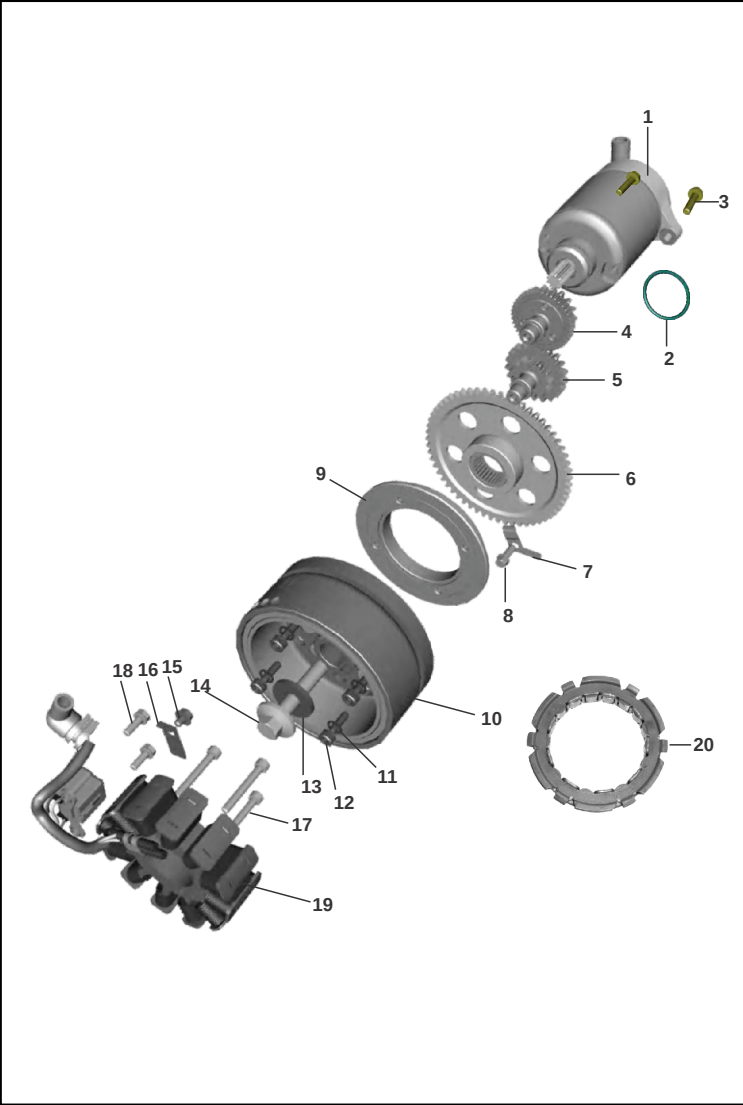


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL351600	Motor Arranque	1	1	
2	JA351627	Anillo Retenedor Arranque	1	1	
3	KADQ0625	Tornillo M6	1	1	
4	JG621413	Piñón Arranque	1	1	
5	JG621412	Piñón Arranque	1	1	
6	JG621417	Piñón Arranque	1	1	
7	JG541043	Platina Piñón Arranque	1	1	
8	39167294	Tornillo	1	1	
9	JG351019	Soporte Clutch de Una Vía	1	1	
10	JL351009	Volante Magneto	1	1	
11	39084914	Arandela	4	4	
12	DH101389	Tornillo 6x20	4	4	
13	39216511	Arandela	1	-	
14	LDB00010		-	1	
15	DH101396	Tornillo 10x30	1	1	
16	LAD00055	Tornillo M10x1.25x50L	1	1	
17	LAE00016	Tornillo	1	1	
18	DH101199	Platina	1	1	
19	DK101284	Tornillo	3	3	
20	LAE00010	Tornillo M5x13L	2	2	
21	JL351003	Plato de Bobinas	1	-	
22	JL351038		-	1	
23	JY551402	Clutch de Una Vía	1	1	
24					
25					
26					
27					
28					
29					
30					

This exploded view diagram illustrates the components of a 12V 1000W electric motor assembly. The parts are numbered as follows:

- 1**: Spark plug
- 2**: Spark plug
- 3**: Ignition switch
- 4**: Ignition coil
- 5**: Ignition coil
- 6**: Ignition coil
- 7**: Ignition coil
- 8**: Ignition coil
- 9**: Ignition coil
- 10**: Ignition coil
- 11**: Ignition coil
- 12**: Ignition coil
- 13**: Ignition coil
- 14**: Ignition coil



pulsar
NS200-4S200

This diagram illustrates the assembly of a motorcycle seat. The main components are labeled as follows:

- 1/12**: The main seat shell, shown in two views (top and side).
- 2**: Three small rectangular mounting brackets.
- 3**: A small rectangular component, likely a rear fender or tail section.
- 4**: A large circular mounting plate.
- 5**: Two sets of spacers or washers.
- 6**: Two long screws used for mounting.
- 7/13**: A side panel or backrest component.
- 8**: A small circular mounting plate.
- 9**: A complex mounting bracket or base plate.
- 10**: A long, flexible braided cable or hose.
- 11**: A short screw or bolt.



pulsar
NS200-4S200

This diagram shows an exploded view of a mechanical assembly. The main component is a large, dark, L-shaped bracket (1) with a curved top. It is surrounded by various smaller parts and fasteners, numbered 1 through 9. Dashed lines indicate the assembly path for several components. The parts include:

- 1**: The main L-shaped bracket.
- 1A**: A smaller bracket component.
- 2**: A small pin or bolt.
- 3**: A small pin or bolt.
- 4**: A long, thin rod or pin.
- 5**: A bolt with a hexagonal head.
- 6**: A hexagonal nut.
- 7**: A small bracket or plate.
- 8**: A small bracket or plate.
- 9**: A small pin or bolt.



pulsar
NS200-4S200

This diagram illustrates the assembly of a vehicle chassis component, likely a rear suspension or steering knuckle. The main assembly is shown in a perspective view, with various parts labeled with numbers 1 through 10. The components include:

- 1**: A blue O-ring or seal.
- 2**: A black plastic or metal bracket or bush.
- 3**: A black metal bracket or bush.
- 4**: A black metal bracket or bush.
- 5**: A black metal bracket or bush.
- 6**: A black metal bracket or bush.
- 7**: A black metal bracket or bush.
- 8**: A black metal bracket or bush.
- 9**: A black metal bracket or bush.
- 10**: A blue O-ring or seal.

The diagram shows the assembly of these components onto a main metal chassis part. An inset image in the bottom right corner provides a close-up view of the assembly area, showing the connection of parts 8 and 9 to the chassis.

[illegible]

[illegible]

pulsar
NS200-4S200

FIGURA N° 27: REPOSAPIÉ CONDUCTOR (1/2)

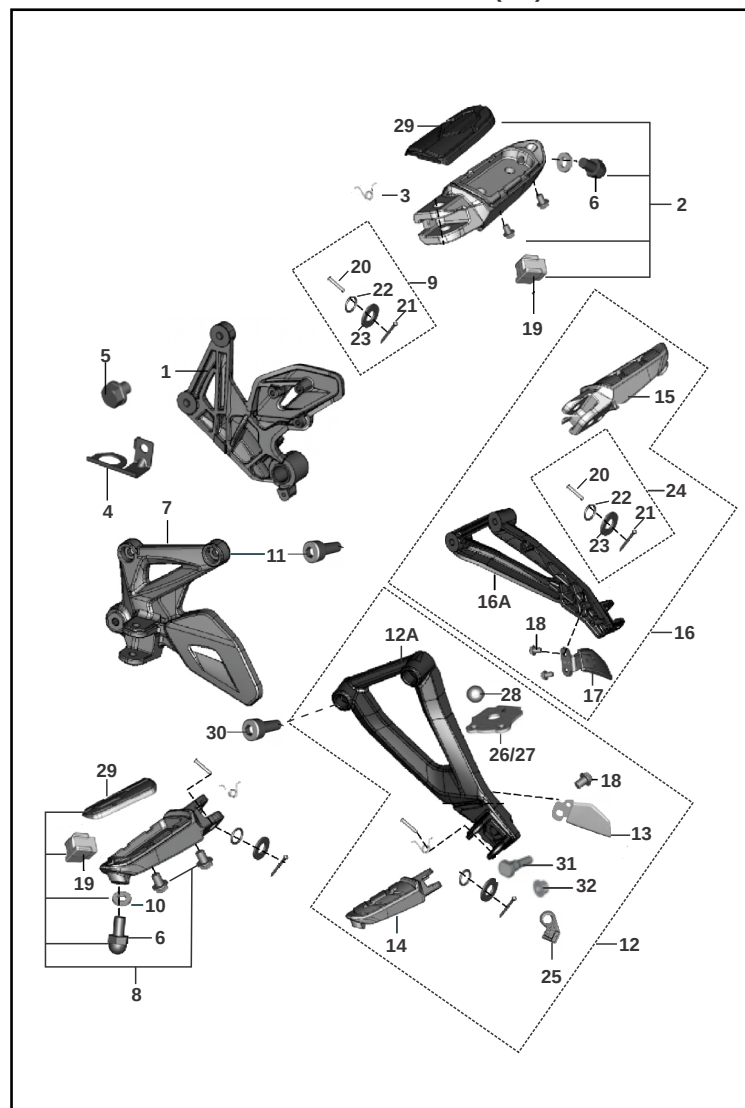


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL113002	Soporte Reposapie Conductor Der.	1	1	Gris Tornado
2	JL113007	Reposapie Conductor Derecho	1	-	Gris
	52JL0159		1	1	Gris Tornado
3	JL113012	Resorte	1	1	
4	JL113033	Platina Soporte Swiche Stop	1	1	
5	39247504	Tornillo	1	1	
6	DG161144	Tornillo	2	2	
7	JL113034	Soporte Reposapie Conductor Izq.	1	1	Para Pedal Cambios JL561401
	JL113057		1	-	Para Pedal Cambios JL561205
8	JL113000	Reposapie Conductor Izq.	1	-	Gris
	52JL0158		1	1	Gris Tornado
9	36JL0041	Kit Pines Reposapie Conductor	2	2	Ref. Pág. N° 75
10	LDA00013	Arandela	1	1	
11	KACA0820	Tornillo M8x20	4	4	
12	52JL0152	Soporte Rep. Pasajero Izq. Comp.	1	1	Gris Tornado
12A	JL113013	Soporte Rep. Pasajero Izq. Solo	1	-	Gris
13	JL113026	Protector Reposapie Pasajero Izq.	1	1	
14	JL113014	Reposapie Pasajero Izquierdo	1	-	Gris
	56JL0101		1	1	Gris Tornado
15	JL113016	Reposapie Pasajero Derecho	1	-	Gris
	56JL0201		1	1	Gris Tornado
16	52JL0153	Soporte Rep. Pasajero Der. Comp.	1	1	Gris Tornado
16A	JL113015	Soporte Rep. Pasajero Der. Solo	1	-	Gris
17	JL113027	Protector Reposapie Pasajero Der.	1	1	
18	39195404	Tornillo	4	4	
19	JL113028	Antivibrante Reposapie Conductor	2	2	

This exploded view diagram illustrates the assembly of a mechanical component, likely a robotic gripper or a similar precision tool. The parts are numbered 1 through 32. The diagram is organized into several sub-assemblies, each enclosed in a dashed-line box:

- Top Right Sub-assembly:** Includes parts 2, 3, 6, 19, and 29. Part 2 is the main housing, 3 is a pin, 6 is a bush, 19 is a small rectangular component, and 29 is a long, thin rod.
- Left Sub-assembly:** Includes parts 1, 4, 5, 7, 11, and 30. Part 1 is a large, complex bracket, 4 is a small plate, 5 is a pin, 7 is a smaller bracket, 11 is a pin, and 30 is a small cylindrical component.
- Bottom Left Sub-assembly:** Includes parts 6, 8, 10, 19, and 29. Part 6 is a bush, 8 is a pin, 10 is a small component, 19 is a small rectangular component, and 29 is a long, thin rod.
- Right Sub-assembly:** Includes parts 15, 16, 16A, 17, 18, 20, 21, 22, 23, 24, 26/27, 28, and 31. Part 15 is a long, thin rod, 16 and 16A are brackets, 17 is a pin, 18 is a small component, 20, 21, 22, and 23 are pins and washers, 24 is a small component, 26/27 is a small component, 28 is a pin, and 31 is a small component.
- Bottom Right Sub-assembly:** Includes parts 12, 13, 14, 25, 32, and 33. Part 12 is a large, complex bracket, 13 is a small component, 14 is a small component, 25 is a pin, 32 is a small component, and 33 is a small component.

The diagram shows the relative positions and assembly sequence of these parts, with dashed lines indicating the path of assembly.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a motorcycle fender assembly. The parts are numbered as follows:

- 1**: Main fender body.
- 2**: Small mounting bracket.
- 3**: Lower fender section.
- 4**: Bolt for lower section attachment.
- 5**: Washer for lower section attachment.
- 6**: Black rubber footpeg.
- 7**: Bolt for footpeg attachment.
- 8**: Small fender extension.
- 9**: Bolt for extension attachment.
- 10**: Washer for extension attachment.
- 11**: Nut for extension attachment.
- 12**: Rear fender bracket.
- 13**: Bolt for rear bracket attachment.
- 14**: Rear fender extension.
- 15**: Upper mounting bracket.
- 15A**: Alternative upper mounting bracket design.
- 16**: Yellow grease zerk.
- 18**: Bolt for rear bracket attachment.
- 19**: Nut for rear bracket attachment.



This exploded view diagram illustrates the components of a motorcycle fender assembly. The main parts are labeled as follows:

- 1**: Main fender body.
- 2**: Small mounting bracket.
- 3**: Lower fender section.
- 4**: Mounting bracket for the lower section.
- 5**: Bolt for the lower section.
- 6**: Black rubber footpeg.
- 7**: Mounting bracket for the footpeg.
- 8**: Small fender extension.
- 9**: Bolt for the extension.
- 10**: Bolt for the extension.
- 11**: Bolt for the extension.
- 12**: Mounting bracket for the lower section.
- 13**: Bolt for the lower section.
- 14**: Long mounting bracket.
- 15**: Mounting bracket.
- 15A**: Mounting bracket.
- 16**: Bolt for the lower section.
- 18**: Bolt for the lower section.
- 19**: Bolt for the lower section.



pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a mechanical component, likely a control lever or actuator. The main assembly is shown in a perspective view, with various sub-components and fasteners labeled with numbers 1 through 17. The components include:

- 1**: A long, curved metal arm or lever.
- 2**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 3**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 4**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 5**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 6**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 7**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 8**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 9**: A long, curved metal arm or lever, similar to component 1.
- 10**: A long, curved metal arm or lever, similar to component 1.
- 11**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 12**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 13**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 14**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 15**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 16**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.
- 17**: A small, dark, rectangular component, possibly a switch or sensor, mounted on the arm.

The diagram shows the assembly of these components into a single unit, with dashed lines indicating the alignment and fit of the parts.



pulsar
NS200-4S200

This diagram illustrates the assembly of a motorcycle wheel. It shows five numbered components: 1. A tire, 2. A valve stem, 3. A wheel rim, 4. A wheel hub, and 5. Another wheel rim. The components are arranged in an exploded view to show their relative positions and how they fit together.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a motorcycle wheel assembly. The parts are numbered as follows:

- 1**: The main wheel rim with spokes.
- 2**: A central axle component, shown in a dashed box with a small ring.
- 3**: A small ring or spacer, shown in two locations.
- 4**: A larger ring or spacer.
- 5**: A brake disc with a multi-vane design.
- 6**: Six small screws used to secure the brake disc.
- 7**: A small cylindrical component.
- 8**: A hub or axle end component.
- 9**: A small bracket or clip.
- 10**: A small pin or clip.
- 11**: A small pin or clip.
- 12**: A small pin or clip.
- 13**: A long axle shaft.
- 14**: A small ring or spacer.
- 15**: A small nut or washer.



pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a mechanical component, likely a door latch or actuator. The parts are numbered as follows:

- 1:** A long, curved metal arm.
- 2:** A small pin or bolt at the end of the arm.
- 3:** A small circular component, possibly a bush or washer.
- 4:** A small ring or clip.
- 5:** Two screws used to secure the internal components.
- 6:** A rectangular plate or cover.
- 7:** A small rectangular component, possibly a switch or sensor.
- 8:** The main housing or base of the assembly.
- 9:** A small rectangular component, possibly a switch or sensor.
- 10:** Two O-rings or seals.
- 11:** Two cylindrical components, possibly pins or bolts.
- 12:** A long, curved metal arm, similar to part 1.
- 13:** Two small pins or bolts.
- 14:** A long, rectangular component, possibly a spring or actuator.
- 15:** A small circular component, possibly a bush or washer.
- 16:** A small rectangular component, possibly a switch or sensor.

The diagram shows the relative positions and assembly sequence of these parts, with dashed lines indicating the path of assembly.



The diagram illustrates the assembly of a brake master cylinder. The main assembly area shows the master cylinder body (1) with various components being installed. A dashed box (8) contains a legend for the parts shown in the exploded view.

Legend:

- Retenedor
- Sello de Pistón
- Capuchón Tornillo de Sangrado
- Guardapolvo
- Aislante
- Pistón
- Tornillo de Sangrado
- Resorte Pasta Freno

Assembly Steps:

1. Install the master cylinder body (1).
2. Install the bleed screw (2).
3. Install the bleed screw cap (3).
4. Install the dust cap (4).
5. Install the brake paste spring (5).
6. Install the piston (6).
7. Install the piston seal (7).
8. Install the piston retainer (8).
9. Install the insulator (9).
10. Install the master cylinder body (10).



pulsar
NS200-4S200

FIGURA N° 34: DISCO FRENO TRASERO

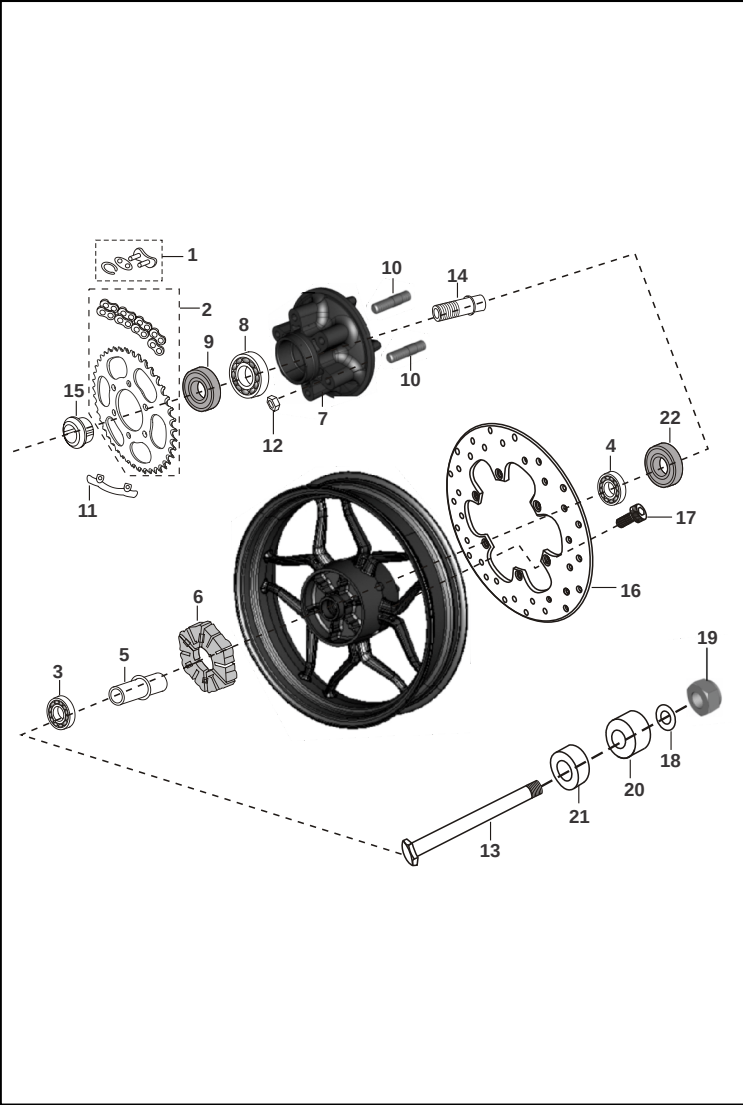


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	DK151036	Empate Cadena	1	1	
2	36JL0009	Kit Sprocket y Cadena	1	1	Ref. Pág. N° 74
3	39224120	Rodamiento Bolas Rin Trasero	1	-	
	KPBC6202		-	1	
4	39224220	Rodamiento Bolas Rin Trasero	1	-	
	KPBC6302		-	1	
5	JL131216	Buje	1	1	
6	JL131232	Caucho Campana	1	1	
7	JL131225	Porta Sprocket	1	1	
8	DK151013	Rodamiento Bolas Porta Sprocket	1	1	
9	DK151012	Reten Porta Sprocket	2	2	
10	LAA00019	Tornillo	6	6	
11	JL131226	Arandela Sprocket	3	3	
12	LCA00009	Tuerca	6	6	
13	JL131203	Eje Rueda Trasera	1	1	
14	DK151015	Buje Porta Sprocket	1	1	
15	JL131211	Buje	1	1	
16	JL131218	Disco Freno Trasero	1	-	Dorado
	52JL0142		1	1	Negro
17	39203804	Tornillo Disco Freno Trasero	6	6	
18	LDB00029	Arandela	2	2	
19	LCJ00002	Tuerca Eje Rueda Trasera	1	1	
20	DK151081	Buje Eje Rueda Trasera	1	1	
21	DK151082	Buje	1	1	
22	30151082	Retenedor (42-26-8)	1	1	

FIGURA N° 35: BOMBA FRENO TRASERO

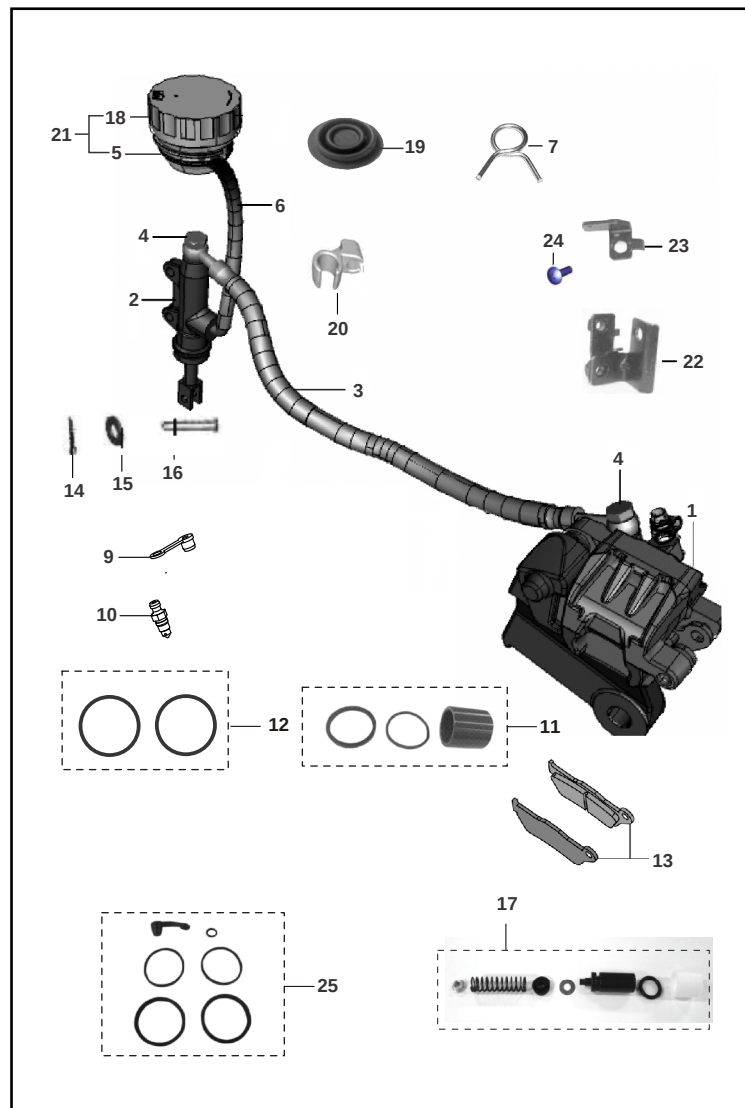


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	DK151083	Caliper Trasero	1	1	
2	DK151031	Bomba Freno Trasero	1	1	
3	JL131803	Manguera Freno Trasero	1	1	
4	DK151069	Tornillo Caliper	2	2	
5	JG131821	Tanque Bomba Freno Trasero	1	1	
6	JL131220	Manguera Tanque Reserva	1	1	
7	DK151063	Abrazadera	1	1	
8	DE191010	Arandela	4	4	
9	DE151047	Guardapolvo	1	1	
10	DE151046	Tornillo de Sangrado	1	1	
11	DK151088	Kit Pistón Bomba Freno	1	1	
12	DK151089	Kit Retenes Caliper	1	1	
13	DK151085	Pastas Freno Trasero	1	1	
14	30191038	Pin	1	1	
15	39019811	Arandela	1	1	
16	30191038	Pin	1	1	
17	DK151073	Kit Empaquetadura Bomba Freno	1	1	Incluye Pistón
	DK151074		1	1	No Incluye Pistón
18	DK151045	Tapa Tanque Líquido Frenos	1	1	
19	DK151072	Diafragma	1	1	
20	JL131877	Abrazadera Manguera Freno	1	1	
21	36JG0018	Tanque Bomba Freno con Tapa	1	1	
22	JL131841	Platina Soporte Tanque Líquido de Frenos	1	1	
23	JL131878	Platina Tapa Tanque Líquido de Frenos	1	1	
24	39242001	Tornillo Soporte platina	1	1	
25	DK151071	Kit Retenes, Anillo Retenedor y Tapón	1	1	

An exploded view diagram of a mechanical assembly. The components are numbered as follows:

- 1**: A long, angled metal arm with a control head at one end featuring four buttons and a circular mounting bracket at the other.
- 2**: A small hex bolt.
- 3**: A small black plastic or metal connector with a pin.
- 4**: A C-clamp.
- 5**: A vertical metal rod or pin with a threaded section at the bottom.
- 6**: A hex nut.
- 7**: A black L-shaped bracket with a circular hole.
- 8**: A coiled metal spring.
- 9**: A small metal pin or clip.



pulsar
NS200-4S200

FIGURA N° 37: MANUBRIO (1/2)

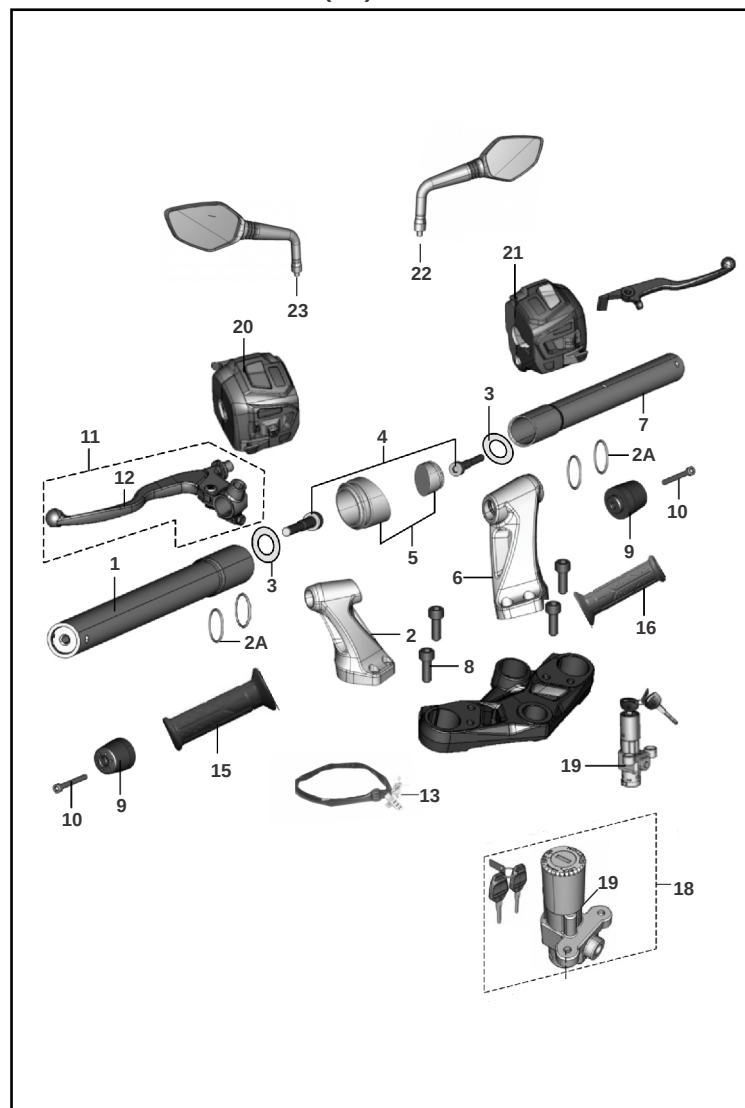


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL151021	Tubo Manubrio Izquierdo	1	1	
2	JL151026	Soporte Tubo Manubrio Izquierdo	1	-	Negro
	56JL315X		1	1	Negro Mate
2A	JL151038	Anillo Retenedor	4	4	
3	39118011	Arandela	2	-	
	KDBA0818		-	2	
4	LAC00020	Tornillo M8x1.25x55L	2	2	
5	JL151028	Tapón Soporte Tubo Manubrio	2	2	
6	JL151030	Soporte Tubo Manubrio Derecho	1	-	Negro
	56JL325X		1	1	Negro Mate
7	JL151034	Tubo Manubrio Derecho	1	1	
8	DG181008	Tornillo	4	4	
9	JL151035	Buje Manubrio	2	2	
10	39242704	Tornillo M6	2	2	
11	DJ191082	Soporte y Leva Clutch	1	-	
	JL161015		-	1	
12	DJ191083	Leva Clutch	1	-	
	JG161008		-	1	
13	DJ201246	Swiche Clutch	1	-	Tipo Diodo
	JL401411		-	1	
14	DD191015	Abrazadera	1	1	No Ilustrado
15	JL161003	Caucho Manillar Izquierdo	1	1	
16	JL161008	Caucho Manillar Derecho	1	-	
	DT161005			1	
17	DH191017	Tubo Int. Manillar Acelerador	1	1	No Ilustrado
18	JL151023	Seguro Dirección	1	-	
	DT232601		-	1	

This exploded view diagram illustrates the components of a motorcycle handlebar assembly. The parts are numbered as follows:

- 1**: Main handlebar tube.
- 2**: Left handgrip.
- 3**: Bar end cap.
- 4**: Right handgrip.
- 5**: Right handgrip mounting bracket.
- 6**: Right handgrip mounting bracket (alternative view).
- 7**: Long bar end cap.
- 8**: Small pin/bush.
- 9**: Small pin/bush.
- 10**: Small pin/bush.
- 11**: Left handgrip mounting bracket.
- 12**: Left handgrip mounting bracket (alternative view).
- 13**: Throttle cable.
- 14**: Throttle cable housing.
- 15**: Throttle cable housing (alternative view).
- 16**: Throttle cable housing (alternative view).
- 17**: Throttle cable housing (alternative view).
- 18**: Throttle cable housing (alternative view).
- 19**: Throttle cable housing (alternative view).
- 20**: Throttle cable housing (alternative view).
- 21**: Throttle cable housing (alternative view).
- 22**: Throttle cable housing (alternative view).
- 23**: Throttle cable housing (alternative view).

The diagram shows the assembly sequence for the handlebar, including the mounting of the handgrips, the bar end cap, and the throttle cable assembly.



pulsar
NS200-4S200

FIGURA N° 38: SUSPENSIÓN DELANTERA (1/2)

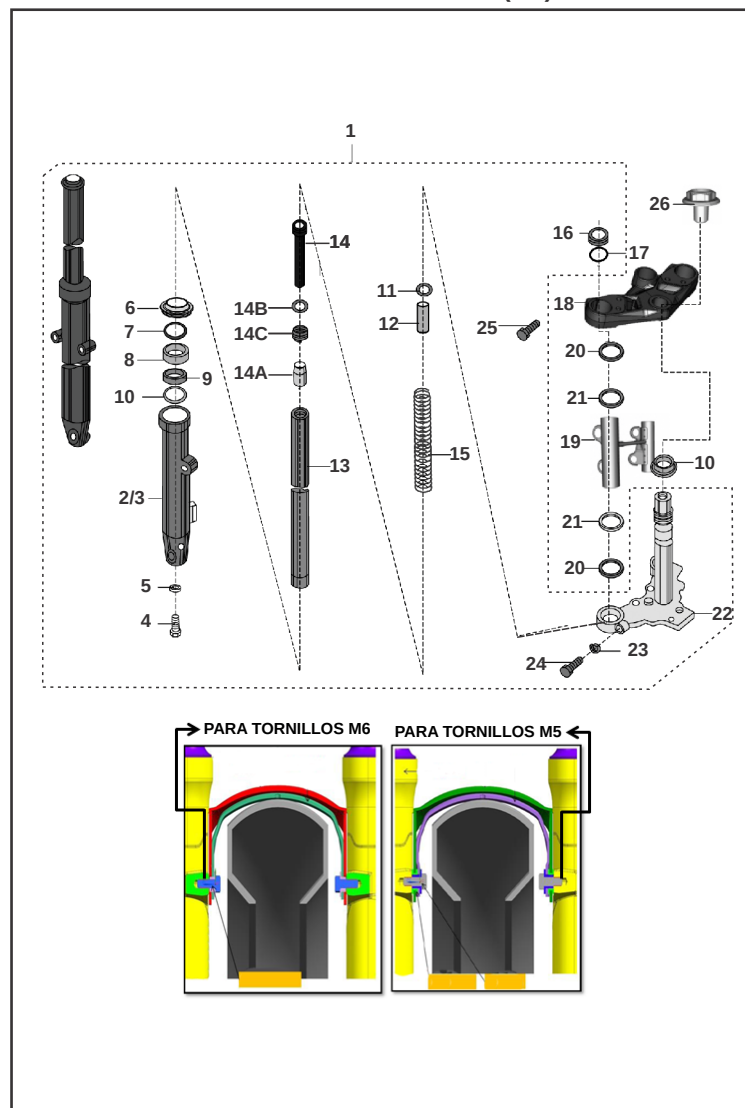


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL151024	Suspensión Delantera	1	1	Para Tornillo M6
	JL121005		1	-	Para Tornillo M5
2	JL151002	Camisa Tubo Telescópico Izq.	1	1	
3	JL151003	Camisa Tubo Telescópico Der.	1	1	
4	DK181006	Tornillo M10X1.5X35	2	2	
5	DK181007	Arandela	2	2	
6	DK181021	Guardapolvo	2	2	
7	DK181018	Arandela	2	2	
8	DK181019	Reten Tubo Telescópico	2	2	
9	DK181017	Buje Guía	2	2	
10	DK181020	Arandela	2	2	
11	DK181015	Arandela	2	2	
12	JL151012	Buje	2	2	
13	JL151004	Tubo Telescópico	2	2	
14	DK181010	Cilindro Tubo Telescópico	2	2	
14A	DK181009	Buje Cilindro Tubo Telescópico	2	2	
14B					
14C	DK181012	Pin Cilindro Tubo Telescópico	2	2	
	DK181013	Resorte	2	2	
15	JL121001	Resorte Suspensión	2	2	
16	DK181022	Tornillo Tubo Telescópico	2	2	
17	DK181023	Anillo Retenedor	2	2	
18	JL151032	Cabeza Espiga	1	-	Negra
	56JL335X		1	1	Negro Mate
19	JL181235	Soporte Farola	1	-	
20	JC181023	Antivibrante	4	-	

The diagram shows an exploded view of a mechanical assembly. The main assembly is shown on the left, with parts numbered 1 through 26. The exploded view shows the following components:

- 1: Main vertical assembly
- 2/3: Lower section of the main assembly
- 4, 5: Small screws/bushings at the bottom
- 6, 7, 8, 9, 10: O-rings and washers
- 11, 12: Small pins/bushings
- 13: Long central shaft
- 14, 14A, 14B, 14C: Various pins and washers
- 15: Coiled spring
- 16, 17: Small pins/bushings
- 18: Black plastic component
- 19: Metal bracket
- 20, 21: O-rings and washers
- 22: Base plate
- 23, 24: Screws/bushings for the base
- 25: Small pin/bushing
- 26: Top cap/screw

Below the exploded view, there are two diagrams showing the installation of the assembly into a yellow frame. The left diagram is labeled "PARA TORNILLOS M6" and the right diagram is labeled "PARA TORNILLOS M5". Both diagrams show the assembly being inserted into a slot in the frame, with the M6 version showing a different internal structure than the M5 version.



pulsar
NS200-4S200



pulsar
NS200-4S200

FIGURA N° 40: SOPORTES CUBIERTAS TANQUE GASOLINA (PULSAR 200NS)

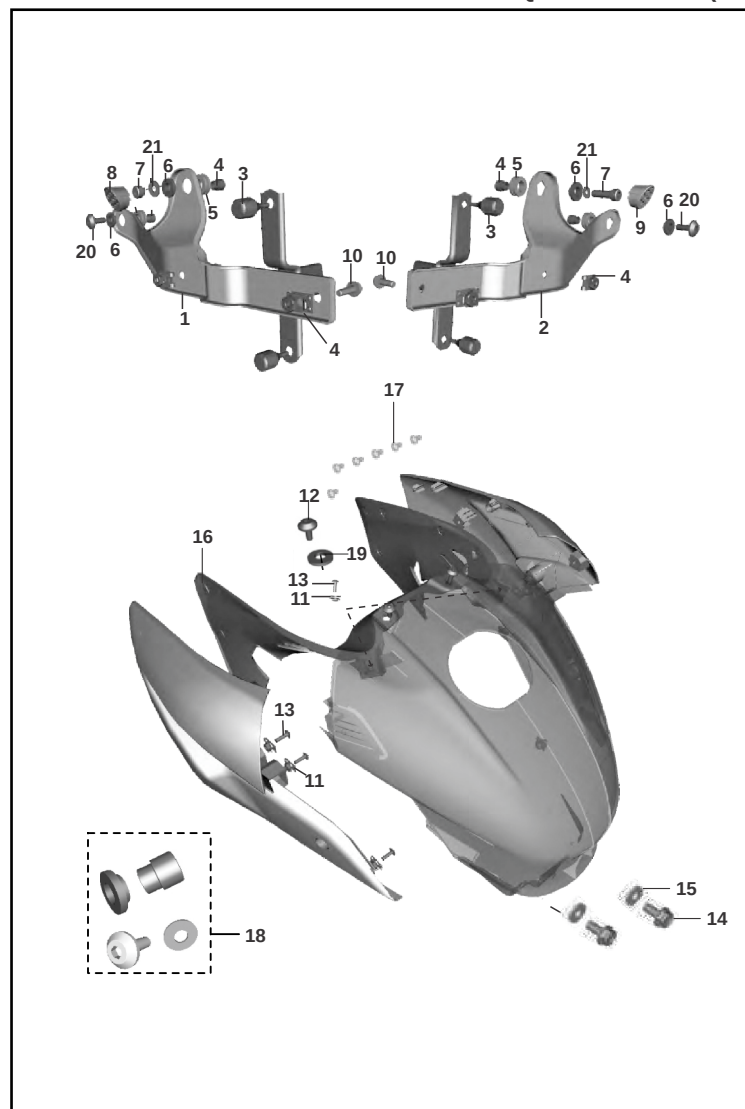


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL171023	Soporte Tapa Lateral Derecha	1	—	
	JL171099		1	-	
2	JL171022	Soporte Tapa Lateral Izquierda	1	—	
3	JL171057	Antivibrante	4	—	
4	JL171071	Buje Cubierta Tanque	8	—	
5	JL171024	Antivibrante	2	—	
6	JL171070	Antivibrante	8	—	
7	LAC00063	Tornillo M6	2	—	
8	JL171062	Rejilla Derecha	1	—	
9	JL171061	Rejilla Izquierda	1	—	
10	KADB0516	Tornillo M5x16	2	—	Negro
	39206004		2		Gris
11	DJ161229	Tuerca	16	—	
12	LAC00022	Tornillo M6x15	4	—	
13	KBUB0516	Tornillo M5x16	8	—	Negro
	39190701		8	-	Gris
14	KADA0512	Tornillo M5	2	—	
15	31161078	Arandela	2	-	
16	JL171048	Cubierta Central Tanque Gasolina	1	-	
17	39177802	Tornillo	12	-	
18	36JL0031	Kit Tornillos Tanque	1	-	Ref. Pag. N° 75
19	39178924	Arandela	2	-	
20	LAC00034	Tornillo M6x20	2		
21	39023911	Arandela	2	-	

FIGURA N° 40A: SOPORTES CUBIERTAS TANQUE GASOLINA (PULSAR AS200)

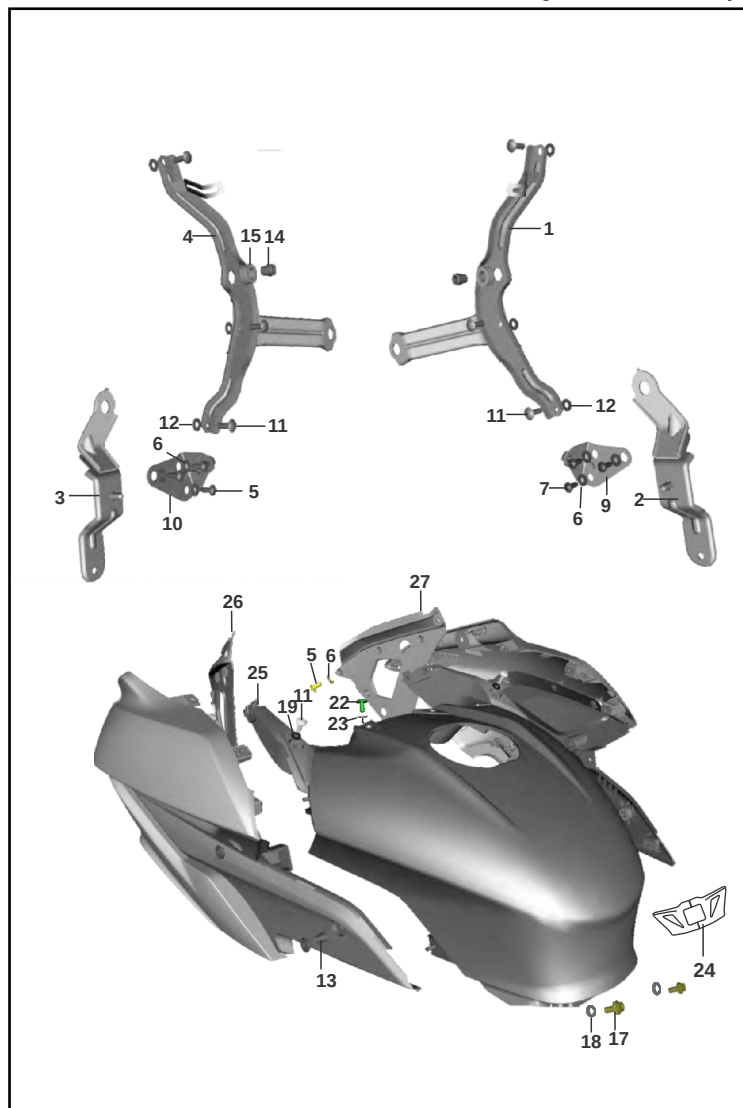


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL181449	Soporte Cubierta Tanque Izq.	-	1	
2	JL181447	Soporte Direccional Izquierdo	-	1	
3	JL181448	Soporte Direccional Derecho	-	1	
4	JL181450	Soporte Cubierta Tanque Der.	-	1	
5	39177802	Tornillo	-	12	
6	KDAA0408	Arandela	-	12	
7	LBR00002	Tornillo	-	6	
8	KDBA0512	Arandela	-	6	No Ilustrado
9	JL181456	Soporte Carenaje Izquierdo	-	1	No Ilustrado
10	JL181457	Soporte Carenaje Derecho	-	1	No Ilustrado
11	LBU00023	Tornillo	-	9	
12	KDBA0512	Arandela	-	3	
13	JL171070	Antivibrante	-	2	
14	JL171071	Buje Cubierta Tanque	-	2	
15	JL171024	Antivibrante	-	4	
16	KADA0630	Tornillo 6x30	-	2	No Ilustrado
17	KADA0512	Tornillo	-	4	
18	KDBB0512	Arandela	-	2	
19	LAC00063	Tornillo	-	2	
20	LAC00034	Tornillo 6x20	-	2	No Ilustrado
21	LDB00023	Arandela	-	4	No Ilustrado
22	LAC00022	Tornillo	-	2	
23	31161078	Arandela Nylon	-	2	
24	JL171078	Protector Tanque	-	1	Opcional
25	JL181439	Cubierta Central Tanque Gasolina	-	1	
26	JL181424	Cubierta Interna Carenaje Izq.	-	1	
27	JL181425	Cubierta Interna Carenaje Der.	-	1	

FIGURA N° 41: TANQUE DE GASOLINA / GRIFO GASOLINA (1/2)

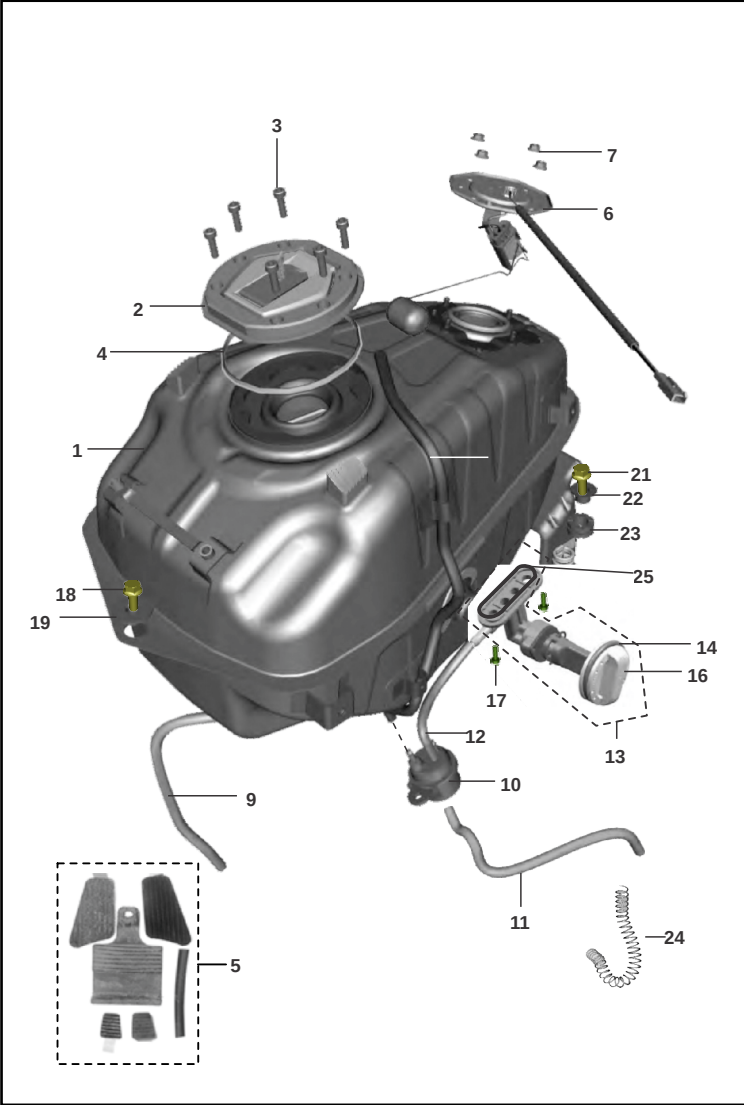


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL171044	Tanque de Gasolina	1	-	
		(Con Medidor en la Parte Inferior)			
	JL171081	Tanque de Gasolina	1	1	
		(Con Medidor en la Parte Superior)			
2	JL171600	Tapa Tanque Gasolina	1	-	Gris
	56JL0401		1	1	Gris Tornado
3	39238104	Tornillo Tapa Tanque Gasolina	6	-	
	KACB0516		-	6	
4	JL171049	Antivibrante Tapa Tanque Gas.	1	1	
5	36JL0012	Kit Antivibrantes Tanque Gasolina	1	1	
6	JL402600	Sensor Nivel de Gasolina	1	-	
		(Tanque de Gas. Con Medidor en la Parte Inf.)			
	JL402602	Sensor Nivel de Gasolina	1	1	
		(Tanque de Gas. Con Medidor en la Parte Sup.)			
6A	DK141028	Anillo Retenedor Sensor Nivel Gasolina	1	1	No Ilustrado
7	39248415	Tuerca M5	4	-	
	KCGA0505		-	4	
8	JL171037	Conducto Respiración	1	1	No Ilustrado
9	JL171063	Conducto Drenaje	1	1	
10	JL171802	Filtro de Gasolina	1	1	
11	JL171036	Conducto Gasolina (Carburador)	1	1	
12	JL171035	Conducto Gasolina (Tanque)	1	1	
13	JL171800	Grifo de Gasolina	1	1	
14	JL171060	Anillo Retenedor Perilla Grifo Gasolina	1	1	
15	JL171803	Pin Perilla Grifo Gasolina	1	1	No Ilustrado

This diagram illustrates the assembly of a fuel tank. The main components are labeled as follows:

- 1**: Fuel tank body
- 2**: Tank top cover
- 3**: Screws for the tank top cover
- 4**: Gasket for the tank top cover
- 5**: Gasket set (shown in an inset box)
- 6**: Fuel filler neck
- 7**: Fuel filler cap
- 8**: Fuel filler cap gasket
- 9**: Fuel filler neck gasket
- 10**: Fuel filler neck bracket
- 11**: Fuel filler neck hose
- 12**: Fuel filler neck hose clamp
- 13**: Fuel filler neck hose clamp bracket
- 14**: Fuel filler neck hose clamp bracket gasket
- 15**: Fuel filler neck hose clamp bracket
- 16**: Fuel filler neck hose clamp bracket gasket
- 17**: Fuel filler neck hose clamp bracket gasket
- 18**: Fuel filler neck hose clamp bracket gasket
- 19**: Fuel filler neck hose clamp bracket gasket
- 20**: Fuel filler neck hose clamp bracket gasket
- 21**: Fuel filler neck hose clamp bracket gasket
- 22**: Fuel filler neck hose clamp bracket gasket
- 23**: Fuel filler neck hose clamp bracket gasket
- 24**: Fuel filler neck hose clamp bracket gasket
- 25**: Fuel filler neck hose clamp bracket gasket



pulsar
NS200-AS200

Exploded view diagram of a motorcycle seat assembly. The diagram shows the following components and their assembly sequence:

- 1**: Main seat base.
- 2**: Screws used for mounting.
- 3**: Mounting bracket.
- 4**: Screws used for mounting.
- 5**: Screws used for mounting.
- 6**: Screws used for mounting.
- 7**: Wheel or roller.
- 8**: Screws used for mounting.
- 9**: Seat cushion.
- 10**: Mounting bracket.
- 11**: Mounting bracket (shown in inset).
- 12**: Screws used for mounting.
- 13**: Screws used for mounting.
- 14**: Mounting bracket (shown in inset).
- 15**: Mounting bracket (shown in inset).
- 16**: Mounting bracket (shown in inset).
- 17**: Screws used for mounting.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a motorcycle helmet assembly. The main assembly consists of a shell (1) with a chin bar (5) and a cheek pad (14). A liner (11) is shown below the shell. A chin strap (12) is attached to the chin bar. A communication system (8) is shown to the right. A rearview mirror (13) is attached to the back of the shell. A chin strap buckle (9) is shown. A chin strap webbing (10) is shown. A chin strap pad (6A) is shown. A chin strap pad (6) is shown. A chin strap pad (7) is shown. A chin strap pad (3) is shown. A chin strap pad (2) is shown. A chin strap pad (1) is shown. A chin strap pad (15) is shown.



pulsar
NS200-4S200

The diagram illustrates four different types of hoses used in automotive applications:

- 1:** A fuel hose with a clamp and a fuel line fitting.
- 2:** A fuel hose with a clamp and a fuel line fitting.
- 3:** A fuel hose with a clamp and a fuel line fitting.
- 4:** A fuel hose with a clamp and a fuel line fitting.



This exploded view diagram illustrates the assembly of a boat outboard motor. The components are numbered as follows:

- 1**: Main outboard motor housing.
- 2**: A small circular component, likely a propeller or a cap.
- 3**: A small bolt or screw.
- 4**: A smaller outboard motor housing or trim plate.
- 5**: A long metal bracket or support arm.
- 6**: A metal plate or support structure.
- 7**: A metal plate or support structure.
- 8**: A metal plate or support structure.
- 9**: A metal plate or support structure.
- 10**: A small circular component, likely a propeller or a cap.
- 11**: A metal plate or support structure.
- 12**: A metal plate or support structure.
- 13**: A metal plate or support structure.
- 14**: A small bolt or screw.
- 15**: A small bolt or screw.



FIGURA N° 46: FAROLA / CARENAJE (PULSAR 200NS)

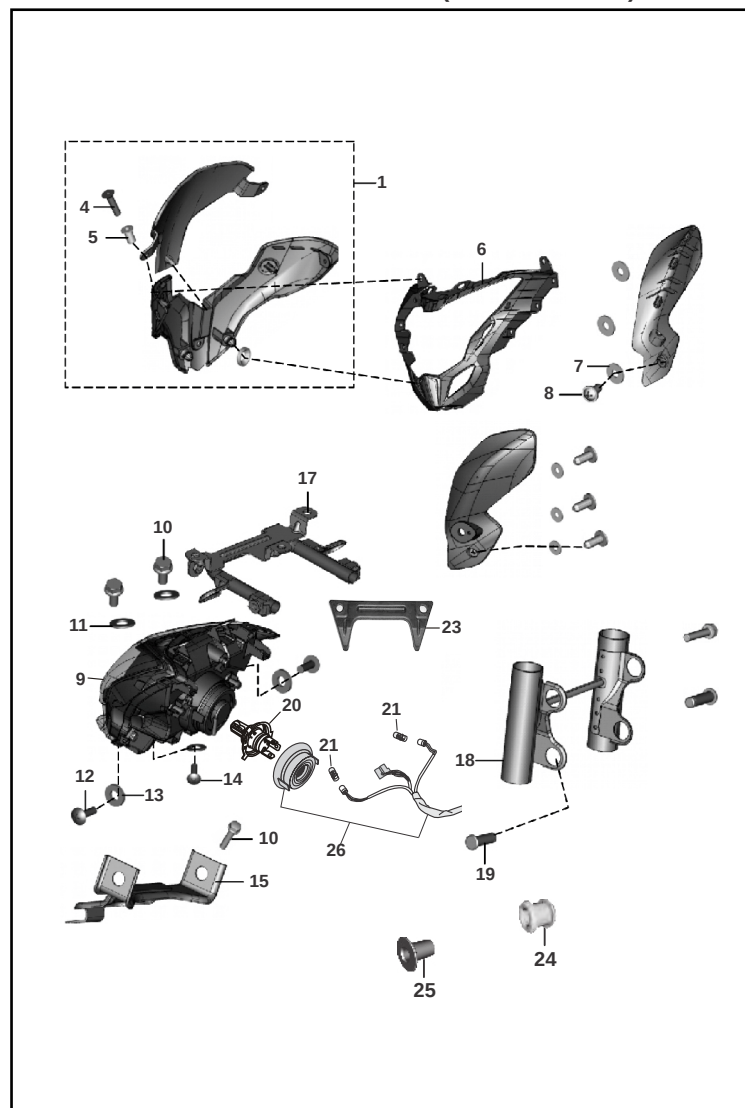


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL181008	Visor Carenaje	1	-	
2	JG181236	Tuerca M5	2	-	No Ilustrado
3	JG181235	Arandela	2	-	No Ilustrado
4	LBS00001	Tornillo M5x20Lx4.8	2	-	
5	JL181247	Antivibrante	2	-	
6	JL181203	Carenaje Farola	1	-	
7	LDA00007	Arandela	6	-	
8	LBR00002	Tornillo	6	-	
9	JL401012	Farola	1	-	
10	KADD0614	Tornillo	2	-	
11	39019811	Arandela	3	-	
12	KBUC0516	Tornillo M5x16Lx4.8	2	-	
13	39214124	Arandela	2	-	
14	39178101	Tornillo	1	-	
15	JL181236	Soporte Inferior	1	-	
16	JL181249	Antivibrante	1	-	No Ilustrado
17	JL181237	Soporte Superior	1	-	
18	JL181235	Soporte Farola	1	-	
19	KACB0835	Tornillo	4	-	
20	EC401030	Bombillo Farola 12V 60/55W	1	-	
21	DH191037	Bombillo Piloto 12V 3W	2	-	
22	36JL0017	Kit Tornillos Visor Carenaje	1	-	No Ilustrado
23	JL181283	Platina Plástica Farola	1	-	
24	PA181292	Antivibrante	4	-	
25	PA181293	Buje	4	-	
26	YJL02006	Instalación Farola	1	-	

FIGURA N° 46A: FAROLA / CARENAJE (PULSAR AS200)

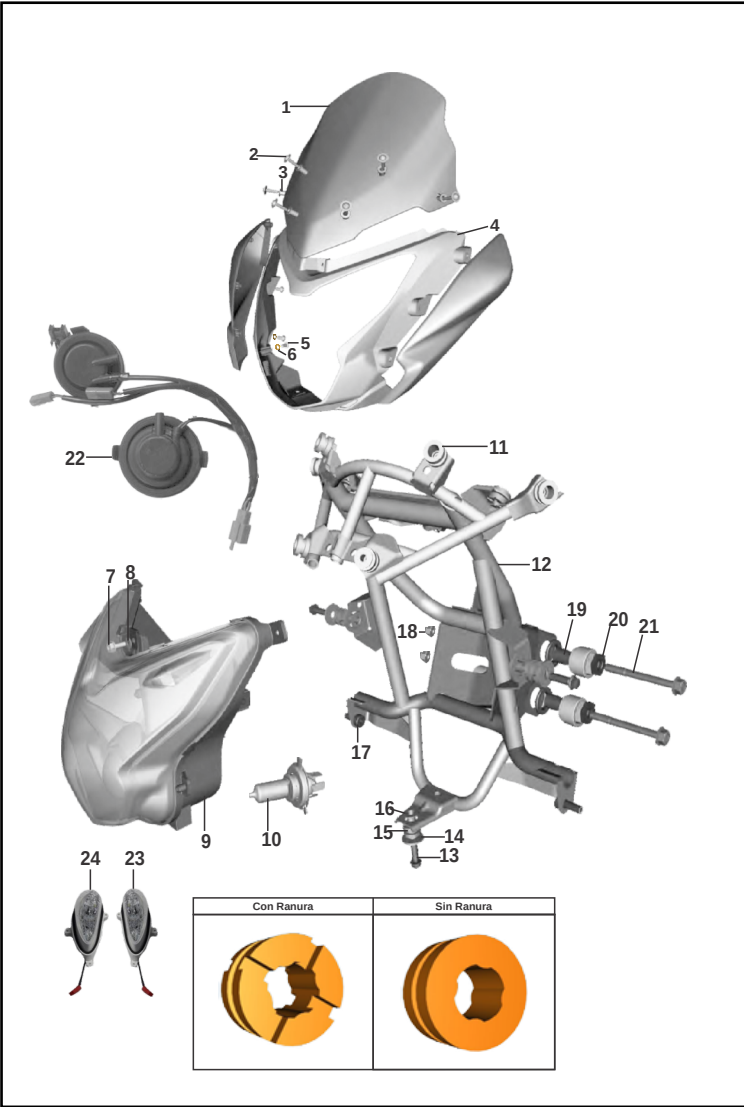


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL181426	Visor Carenade	-	1	
2	LBU00030	Tornillo 5x16	-	7	
3	JL181453	Antivibrante	-	7	
4	JL181417	Carenaje Farola	-	1	
5	LBR00002	Tornillo	-	10	
6	KDBA0512	Arandela	-	10	
7	KADC0616	Tornillo 6x14	-	1	
8	KDBA0613	Arandela	-	1	
9	JL401017	Farola	-	1	
10	DK201043	Bombillo Farola 12V 60/55W	-	1	
11	JL181245	Antivibrante	-	6	
12	JL181416	Soporte Farola	-	1	
13	KAEG0620	Tornillo	-	3	
14	39021111	Arandela 6 mm.	-	3	
15	DJ181064	Antivibrante	-	3	Con Ranura
	JL181029		-	3	Sin Ranura
16	DJ181029	Buje Soporte Carenade	-	3	
17	JD171801	Tornillo	-	2	
18	39253515	Tuerca	-	2	
19	DT181311	Espaciador	-	4	
20	DT181310	Arandela	-	4	
21	LAD00120	Tornillo M8x35	-	2	
22	YJL06003	Instalación Farola	-	1	
23	YJL06002	Luz Farola Izquierda	-	1	
24	YJL06001	Luz Farola Derecha	-	1	

This diagram illustrates the assembly of a three-point hitch. The central component is a heavy-duty metal frame (3) featuring a central pivot point and two side mounting points. The assembly includes three hydraulic cylinders (1, 2, 4) and three pins (5/7, 5/8, 6). Dashed lines indicate the following assembly sequence: 1. Pin 5/7 is inserted into the top of cylinder 1. 2. Pin 5/7 is inserted into the top of cylinder 2. 3. Pin 5/8 is inserted into the central pivot of the frame (3). 4. Pin 5/8 is inserted into the side mounting point of the frame (3). 5. Pin 6 is inserted into the bottom of cylinder 3. 6. Pin 6 is inserted into the bottom of cylinder 4. 7. Pin 6 is inserted into the bottom of cylinder 2.



pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a mechanical component, likely a motorized actuator or a specialized bracket. The parts are numbered 1 through 19. The main assembly consists of a base plate (1) with a motor (4) and a lever arm (2) attached. The lever arm (2) is connected to a handle (6) via a linkage system (3, 7, 8, 9, 10, 11, 12, 13, 14). A small bracket (19) is also shown. The diagram shows the relative positions and assembly sequence of the components.



pulsar
NS200-4S200

[illegible]

This diagram illustrates the components of a vehicle's electrical system, including:

- 1**: Main wiring harness.
- 1A**: Secondary wiring harness.
- 2**: Rectifier/Regulator unit.
- 3**: Long fuse block.
- 4**: Short fuse block.
- 7**: Battery.
- 8**: Alternator.
- 9**: Ignition switch.
- 10**: Ignition key.
- 11**: Starter motor.
- 12**: Starter solenoid.
- 13**: Starter relay.
- 14**: Starter cable.
- 15**: Starter housing.
- 16**: Starter motor assembly.
- 17**: Ignition switch assembly.
- 18**: Ignition switch key.
- 19**: Ignition switch housing.
- 20**: Starter solenoid terminal.
- 21**: Ignition switch assembly.



pulsar
NS200-45200



pulsar
NS200-4S200

This diagram illustrates the exploded view of a motorcycle headlight assembly. The components are numbered as follows:

- 1**: Main headlight housing with a lens.
- 2**: Lower mounting bracket or base plate.
- 3**: Upper mounting bracket or base plate.
- 4**: Small side mounting bracket.
- 5**: Small side mounting bracket.
- 6**: Side mounting bracket.
- 7**: Side mounting bracket.
- 8**: Side mounting bracket.
- 9**: Side mounting bracket.



pulsar
NS200-4S200

An exploded view diagram of a motorcycle fairing kit. The central component is the main front fairing (1), which is a large, curved plastic piece with a circular cutout for the headlight. Surrounding it are eleven other parts, each labeled with a number and a leader line: 2 (left side fairing), 3 (right side fairing), 4 (lower left side fairing), 5 (lower right side fairing), 6 (top left fairing), 7 (top right fairing), 8 (bottom left fairing), 9 (bottom right fairing), 10 (rear right fairing), 11 (rear left fairing), and 12 (headlight assembly, though not explicitly numbered in the image, it is implied by the context of the diagram).



pulsar
NS200-45200

FIGURA N° 52: CALCOMANÍAS (PULSAR 200NS)

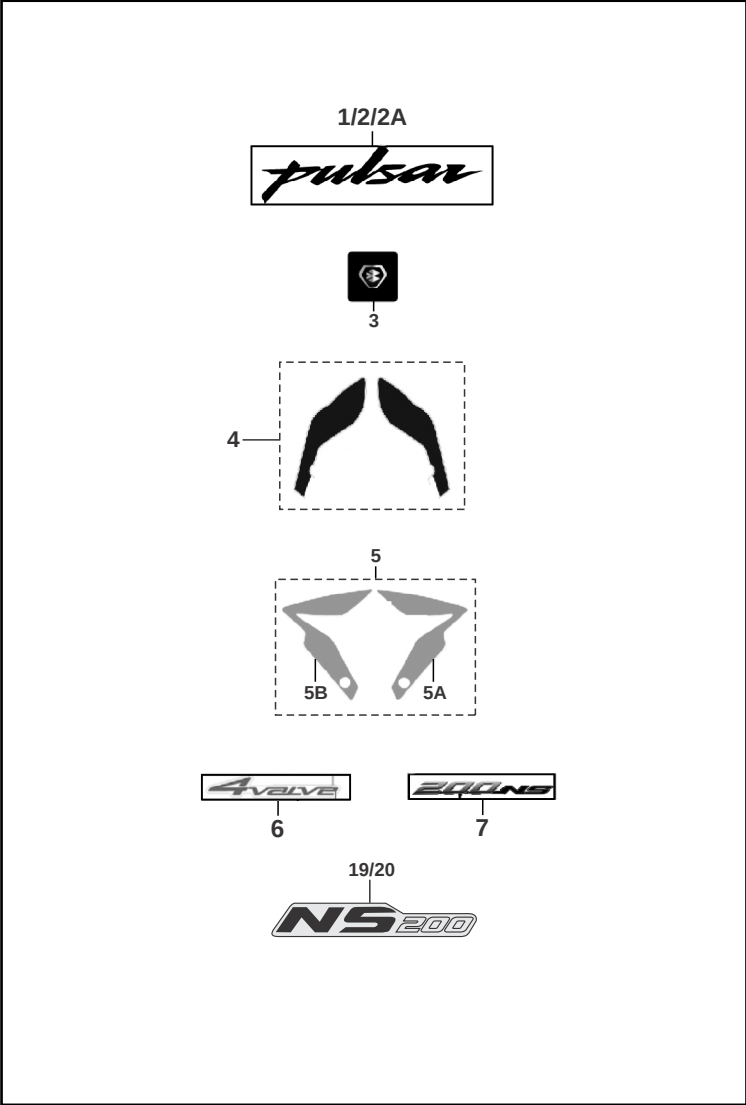


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL233004	Emblema "PULSAR" Derecho	1	-	Sin Borde
2	JL233003	Emblema "PULSAR" Izquierdo	1	-	Sin Borde
2A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	Con Bord Negro
3	JL233002	Calcomanía Logo Bajaj	1	-	
4	36JL0026	Kit Calcomanías Carenaje	1	-	
	KIT-472930/00		1	-	Integración Nal.
5	36JL0027	Kit Calcomanías Guardabarro Del.	1	-	Rojo Eclipse
	36JL0028		1	-	Azul
	36JL0029		1	-	Negro Nebulosa
	36JL0030		1	-	Amarilla
5A	4646/00	Calc. Guardabarro Del. Derecha	1	-	Amarilla
	4677/00		1	-	Rojo Eclipse
	4775/00		1	-	Blanco Celestial
	4929/00		1	-	Verde Lima
5B	4647/00	Calc. Guardabarro Del. Izquierda	1	-	Amarilla
	4678/00		1	-	Rojo Eclipse
	4776/00		1	-	Blanco Celestial
	4930/00		1	-	Verde Lima
6	JL233005	Calcomanía "4 Valve"	2	-	
7	JL233006	Calcomanía "200NS"	2	-	
	4725/00		2	-	Integración Nal
19	6636/00	Calcomanía Cubierta Tanque "NS200" Izq.	1	-	
20	6637/00	Calcomanía Cubierta Tanque "NS200" Der.	1	-	

```

graph TD
    A[1/2/2A] --> B[Pulsar]
    B --> C[AS200]
    C --> D[4-valve]
    D --> E[Adventure Sport]
    E --> F[6]
    F --> G[6A]
    F --> H[6B]
  
```



pulsar
NS200-4S200

FIGURA N° 52B: CALCOMANÍAS ACCESORIOS PULSAR 200NS PRO (1/2)

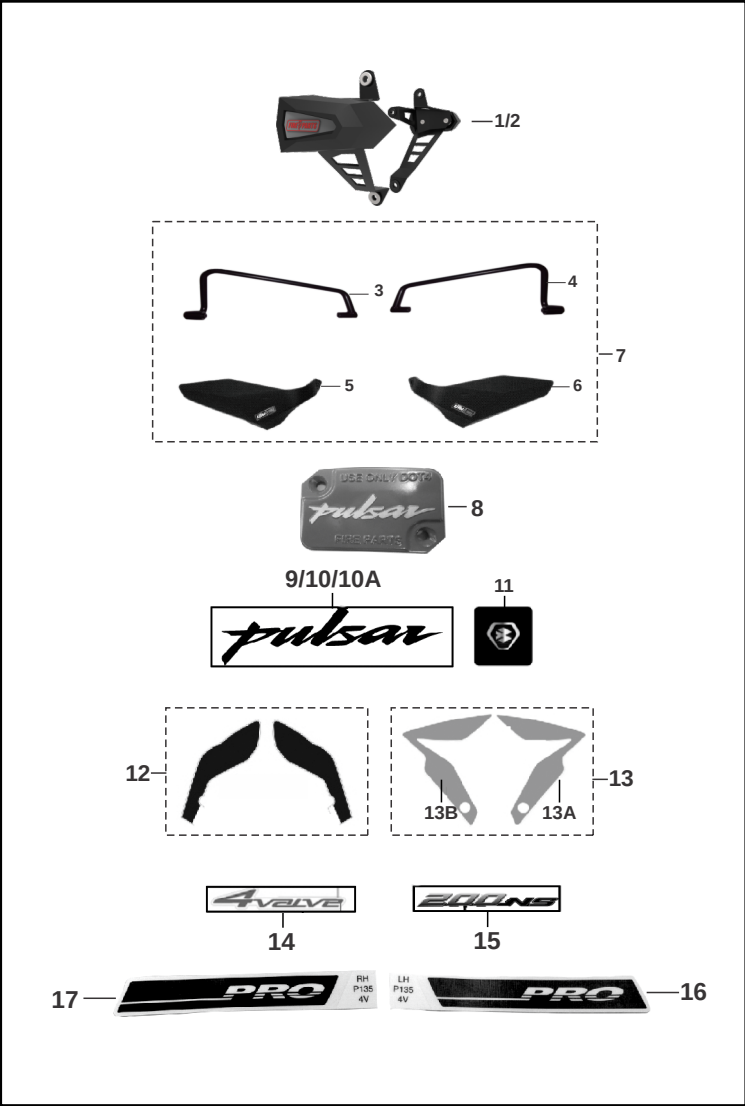


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	PN101.026	Slider Derecho	1	-	
2	PN101.027	Slider Izquierdo	1	-	
3	PN112.003	Protector Manos Izquierdo	1	-	
4	PN112.004	Protector Manos Derecho	1	-	
5	PN112.007	Cortaviento Izquierdo	1	-	
6	PN112.006	Cortaviento Derecho	1	-	
7	PN112.001	Kit Cortaviento Y Protector Manos	1	-	
8	PN100.096-OR	Tapa Bomba Freno Naranja	1	-	
	PN100.096-RD	Tapa Bomba Freno Roja	1	-	
	PN100.096-BL	Tapa Bomba Freno Azul	1	-	
9	JL233004	Emblema "PULSAR" Derecho	1	-	Sin Borde
10	JL233003	Emblema "PULSAR" Izquierdo	1	-	Sin Borde
10A	JL233003	Emblema "PULSAR" Izquierdo	1	-	Con Borde Negro
11	JL233002	Calcomanía Logo Bajaj	1	-	
12	36JL0026	Kit Calcomanías Carenaje	1	-	
	KIT-472930/00		1	-	Integración Nal.
13	36JL0027	Kit Calcomanías Guardabarro Del.	1	-	Rojo Eclipse
	36JL0029		1	-	Negro Nebulosa
13A	4775/00	Calc. Guardabarro Del. Derecha	1	-	Blanco Celestial
	4677/00		1	-	Rojo Eclipse
	5072/00		1	-	Naranja Volcano
13B	4776/00	Calc. Guardabarro Del. Izquierda	1	-	Blanco Celestial
	4678/00		1	-	Rojo Eclipse
	5073/00		1	-	Naranja Volcano
14	JL233005	Calcomanía "4 Valve"	2	-	
15	JL233006	Calcomanía "200NS"	2	-	
	4725/00		2	-	Integración Nal

Diagram illustrating the components of a motorcycle fairing kit, numbered 1 through 17:

- 1: Upper fairing assembly (includes a sub-assembly labeled 1/2).
- 2: Lower fairing assembly (includes a sub-assembly labeled 7).
- 3: Upper fairing bracket.
- 4: Lower fairing bracket.
- 5: Upper fairing panel.
- 6: Lower fairing panel.
- 7: Lower fairing assembly (includes a sub-assembly labeled 7).
- 8: Pulsar logo plate (includes a sub-assembly labeled 8).
- 9/10/10A: Pulsar logo plate (includes a sub-assembly labeled 9/10/10A).
- 11: Pulsar logo plate (includes a sub-assembly labeled 11).
- 12: Upper fairing panel (includes a sub-assembly labeled 12).
- 13: Lower fairing panel (includes a sub-assembly labeled 13).
- 13A: Lower fairing panel (includes a sub-assembly labeled 13A).
- 13B: Lower fairing panel (includes a sub-assembly labeled 13B).
- 14: 4 valve logo plate (includes a sub-assembly labeled 14).
- 15: 200NS logo plate (includes a sub-assembly labeled 15).
- 16: PRO logo plate (includes a sub-assembly labeled 16).
- 17: PRO logo plate (includes a sub-assembly labeled 17).



FIGURA N° 53: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS) (1/3)

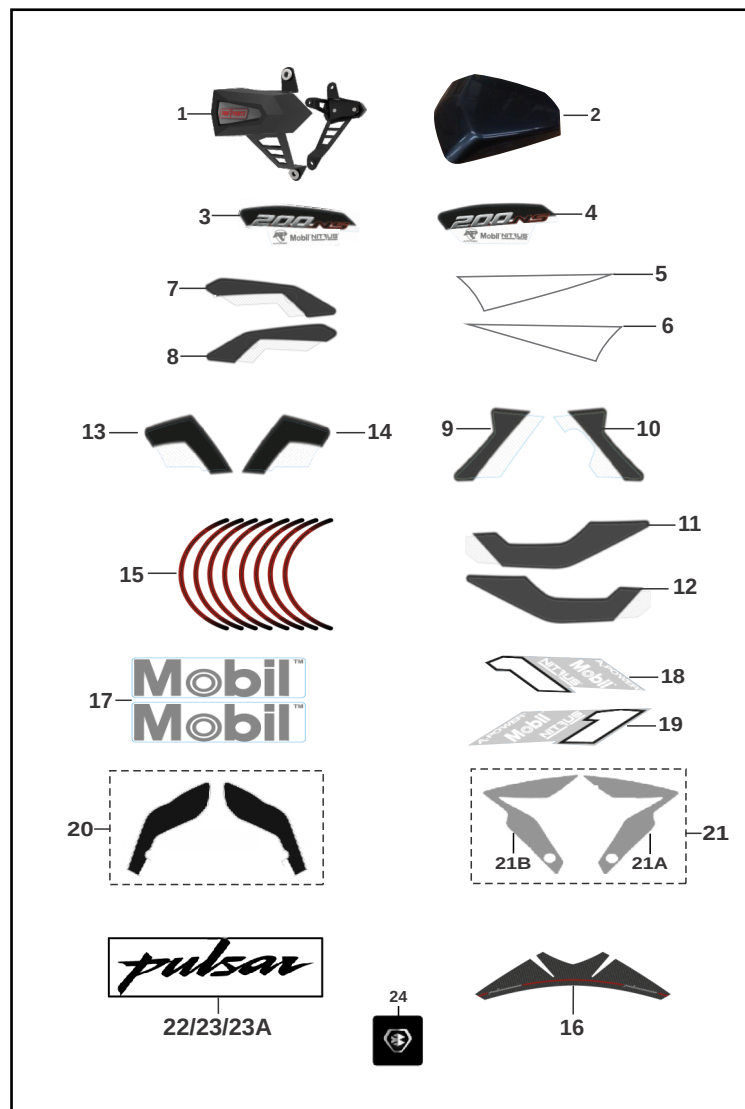


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	PN101.046-BL	Kit Sliders Nitrus	1	-	Azul
	PN101.046		1	-	Negro
	PN101.046-RD		1	-	Rojo
	PN101.046-OR		1	-	Naranja
2	743842/00	Solo Seat	1	-	
3	6463/00	Cal. Enfocador Lat. Sup. Derecha	1	-	Verde Neon
	6525/00		1	-	Naranja
	6514/00		1	-	Negro Nebulosa
4	6462/00	Cal. Enfocador Lat. Sup. Izquierda	1	-	Verde Neon
	6524/00		1	-	Naranja
	6513/00		1	-	Negro Nebulosa
5	6476/00	Cal. Enfocador Lateral Inferior Derecha	1	-	
6	6475/00	Cal. Enfocador Lateral Inferior Izquierda	1	-	
7	6465/00	Cal. Tanque Lateral Derecha	1	-	Verde Neon
	6527/00		1	-	Naranja
	6516/00		1	-	Negro Nebulosa
8	6464/00	Cal. Tanque Lateral Izquierda	1	-	Verde Neon
	6526/00		1	-	Naranja
	6515/00		1	-	Negro Nebulosa
9	6481/00	Cal. Lateral Inferior Derecha	1	-	Verde Neon
	6536/00		1	-	Naranja
	6535/00		1	-	Negro Nebulosa
10	6466/00	Cal. Lateral Inferior Izquierda	1	-	Verde Neon
	6528/00		1	-	Naranja
	6517/00		1	-	Negro Nebulosa
11	6468/00	Cal. Cola Superior Derecha	1	-	Verde Neon
	6530/00		1	-	Naranja
	6519/00		1	-	Negro Nebulosa

FIGURA N° 53: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS) (2/3)

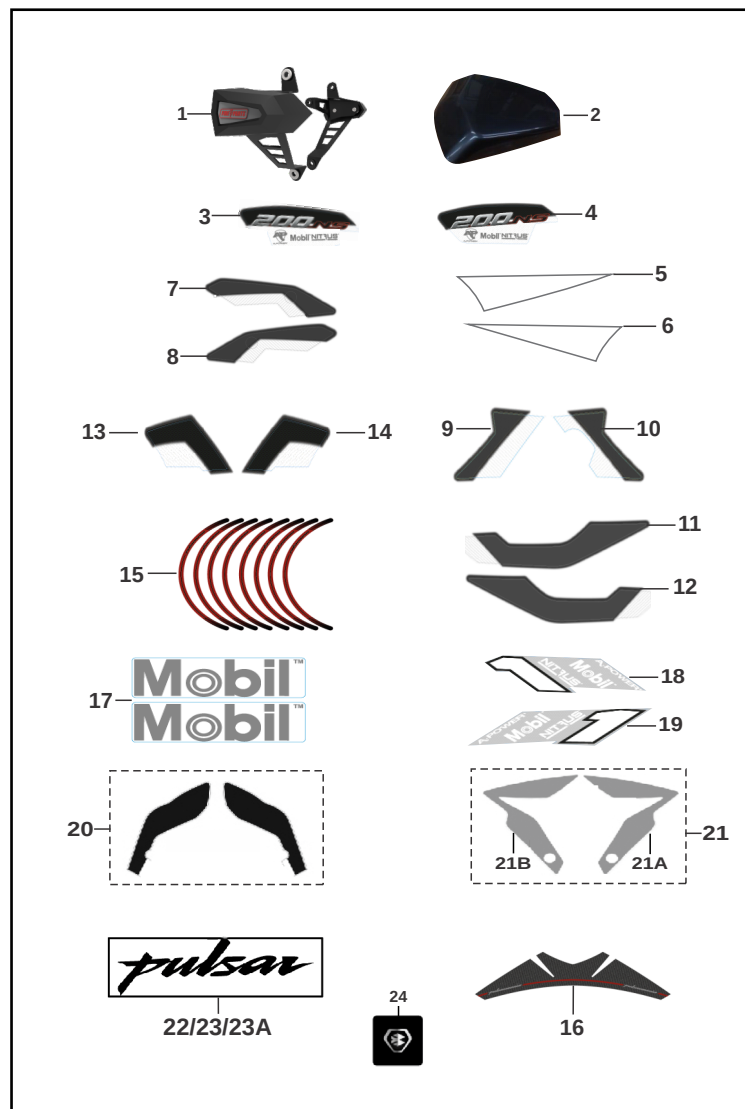


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
12	6467/00	Cal. Cola Superior Izquierda	1	-	Verde Neon
	6529/00		1	-	Naranja
12	6518/00	Cal. Cola Superior Izquierda	1	-	Negro Nebulosa
13	6470/00	Cal. Solo Seat Derecha	1	-	Verde Neon
	6532/00		1	-	Naranja
	6521/00		1	-	Negro Nebulosa
14	6469/00	Cal. Solo Seat Izquierda	1	-	Verde Neon
	6531/00		1	-	Naranja
	6520/00		1	-	Negro Nebulosa
15	6471/00	Cal. Rines	8	-	Verde Neon
	6533/00		8	-	Naranja
	6522/00		8	-	Rojo Eclipse
16	6472/00	Potector Tanque	1	-	Verde Neon
	6534/00		1	-	Naranja
	6523/00		1	-	Negro Nebulosa
17	6479/00	Cal. "MOBIL" Tijera	1	-	
	6480/00		1	-	
18	6478/00	Cal. Cola Inferior Derecha	1	-	
19	6477/00	Cal. Cola Inferior Izquierda	1	-	
20	36JL0026	Kit Calcomanias Carenaje	1	-	
	KIT-472930/00		1	-	
21	36JL0027	Kit Calcomanias Guardabarro Del.	1	-	Rojo Eclipse
	36JL0029		1	-	Negro Nebulosa
21A	4677/00	Calc. Guardabarro Del. Derecha	1	-	Rojo Eclipse
	6473/00		1	-	Azul Electrico
21B	4678/00	Calc. Guardabarro Del. Izquierda	1	-	Rojo Eclipse
	6474/00		1	-	Azul Electrico
22	JL233004	Emblema "PULSAR" Derecho	1	-	Sin Borde

1. Left side fairing with 'Pulsar' logo
2. Right side fairing
3. Front fairing with '200 RS' and 'Mobil 1' logos
4. Front fairing with '200 RS' and 'Mobil 1' logos
5. Left front fender
6. Right front fender
7. Left front fender
8. Right front fender
9. Left front fender
10. Right front fender
11. Left front fender
12. Right front fender
13. Left front fender
14. Right front fender
15. Left front fender
16. Right front fender
17. Mobil logo
18. Mobil logo
19. Mobil logo
20. Left front fender
21. Right front fender
22/23/23A. Pulsar logo
24. Pulsar logo



pulsar
NS200 - AS200

FIGURA N° 54: CALCOMANÍAS Y ACCESORIOS COPA PULSAR 200 NS (1/2)

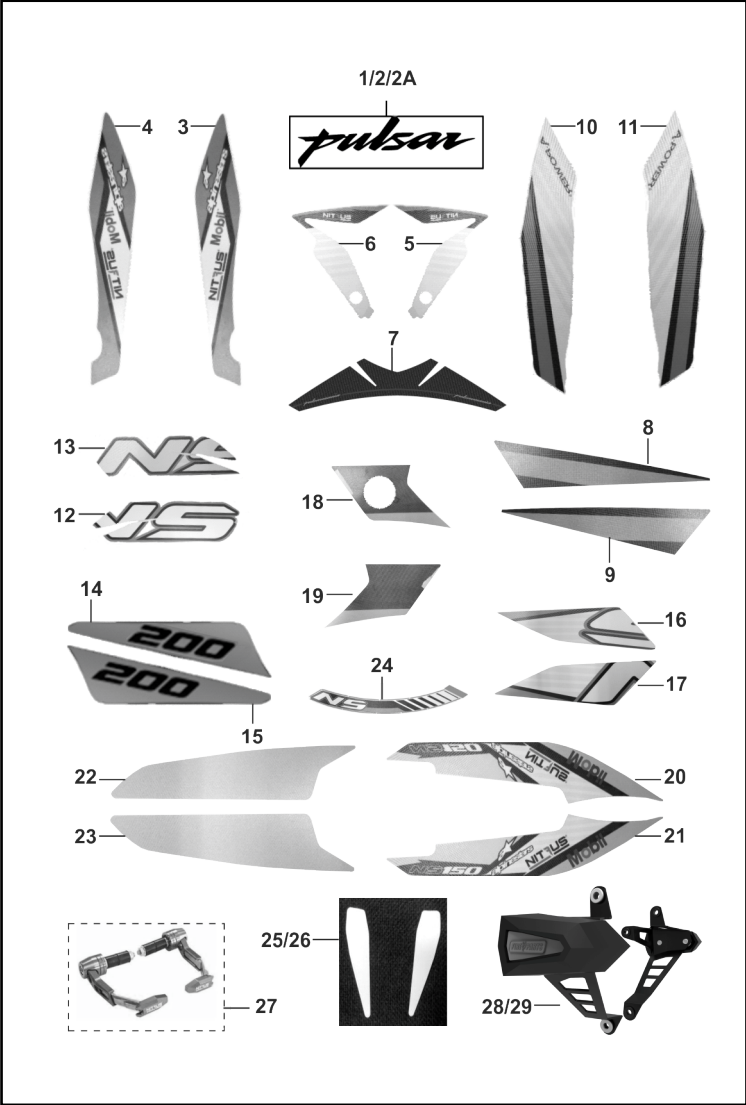


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.		OBSERVACIÓN
			NS	AS	
1	JL233004	Emblema "PULSAR" Derecho	1	-	Sin Borde
2	JL233003	Emblema "PULSAR" Izquierdo	1	-	Sin Borde
2A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	Con Borde Negro
3	20005513	Calcomanía Carenaje Izq.	1	-	
4	20005514	Calcomanía Carenaje Der.	1	-	
5	20005629	Calcomanía Guardabarro Del. Izq.	1	-	
6	20005630	Calcomanía Guardabarro Del. Der.	1	-	
7	20005644	Protector Tanque	1	-	
8	20005523	Cal. Cubierta Tanque Superior Izq.	1	-	
9	20005524	Cal. Cubierta Tanque Superior Der.	1	-	
10	20005515	Calcomanía Enfocador Sup. Izq.	1	-	
11	20005516	Calcomanía Enfocador Sup. Der.	1	-	
12	20005517	Calcomanía Enfocador Central Izq.	1	-	
13	20005518	Calcomanía Enfocador Central Der.	1	-	
14	20005586	Calcomanía Enfocador Inf. Izq.	1	-	
15	20005587	Calcomanía Enfocador Inf. Der.	1	-	
16	20005521	Cal. Cubierta Tanque Inferior Izq.	1	-	
17	20005522	Cal. Cubierta Tanque Inferior Der.	1	-	
18	20005525	Calcomanía Tapa Lateral Izquierda	1	-	
19	20005526	Calcomanía Tapa Lateral Derecha	1	-	
20	20005588	Calcomanía Cubierta Sillín Del. Izq.	1	-	
21	20005589	Calcomanía Cubierta Sillín Del. Der.	1	-	
22	20005529	Calcomanía Cubierta Sillín Tras. Izq.	1	-	
23	20005530	Calcomanía Cubierta Sillín Tras. Der.	1	-	
24	20005531	Calcomanía Rin	8	-	

1/2/2A

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25/26 27 28/29



pulsar
NS200-4S200

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36JL0009	Kit Sprocket y Cadena	DV101048	Piñón Delantero 14T	1
			JL141000	Cadena 520x108L (Con O´ring)	1
			JL131228	Sprocket 38T	1
2	36JL0011	Kit válvulas	39201719	Reten Válvula	1
			JF511215	Asiento Válvula	1
			JF511217	Resorte Válvula	1
			JF511214	Reten Válvula	1
			DG101029	Cuña Válvula	2
3	36JL0013	Kit Antivibrantes Sillín	NA	Antivibrantes Sillín	6
			DK211007	Antivibrante Delantero Sillín	1
4	36JL0014	Kit Empaques	JL541207	Empaque Carcasa Clutch	1
			JL541208	Empaque Cubierta Volante	1
			JL521002	Empaque Cilindro	1
			JL511022	Empaque Culata	1
			JG541041	Empaque Carcasa Izquierda	1
			CS101128	Empaque Tensor Cadenilla	1
			JL511001	Empaque Tapa Culata	1
			JG591070	Empaque Silenciador	1
5	36JL0015	Kit Pines Reposapie Pasajero	JD113019	Pin Pasador	1
			30141031	Anillo Retenedor	1
			39104011	Arandela	1
			39078408	Pin	1
6	36JL0019	Kit Boquereles y Aguja Carbuardor	NA	Difusor	1
			NA	Aguja de La Cortina	1
			NA	Pulverizador	1
			NA	Boquerel de Alta	1
			NA	Boquerel de Baja	1

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
7	36JL0020	Kit Tornillo Aire Carburador	NA	Tornillo Ajuste	1
			NA	Anillo Retén Tornillo Drenaje	1
			DH121086	Resorte	1
			DH121087	Arandela	1
			NA	Anillo Retén Tornillo Ajuste	1
8	36JL0023	Kit Retenedores	NA	Anillo Retén Taza Carburador	1
			DH121118	Anillo Retén Tornillo Drenaje	1
			DH121088	Anillo Retén Auto Choke	1
			NA	Anillo Retén Tornillo Ralentí	1
9	36JL0024	Kit Pines-Arandela Carburador	DD121056	Soporte Aguja Carburador	1
			NA	Resorte Aguja Carburador	1
			NA	Arandela Aguja Carburador	1
			NA	Pin Aguja Carburador	1
10	36JL0031	Kit Tornillos y Antivibrantes Tanque	JL171070	Antivibrante Cubierta tanque	4
			JL171071	Buje Cubierta Tanque	4
			39023911	Arandela	4
			LAC00034	Tornillo 6x20	2
11	36JL0041	Kit Pines Reposapie Conductor	NA	Pin Pasador	1
			30141031	Anillo Reténedor	1
			39104011	Arandela	1
			39078408	Pin	1

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
01100905	16	10
020243/00	1	35
020246/00	4	62
020247/00	3	62
020248/00	19	59
020982/00	10	60
020982/00	11	59
100/80-17-RX01-TL	1	36
1342800	1	36
1343100	5	36
20004740	5	66
20005513	3	72
20005514	4	72
20005515	10	72
20005516	11	72
20005517	12	72
20005518	13	72
20005521	16	72
20005522	17	72
20005523	8	72
20005524	9	72
20005525	18	72
20005526	19	72
20005529	22	72
20005530	23	72
20005531	24	72
20005586	14	72
20005587	15	72
20005588	20	72
20005589	21	72
20005629	5	72
20005630	6	72
20005644	7	72

PARTE No.	FIG. No.	PAG. No.
30101195	3	20
30101236	28	32
30141031	5	74
30141031	11	75
30141031	22	32
30151082	22	40
30191038	14	41
30191038	16	41
30191048	3	61
30201064	4	61
31101173	7	6
31161078	15	48
31161078	23	49
31201079	5	42
36DH1902	4	38
36JG0004	6	15
36JG0011	7	29
36JG0018	21	41
36JL0001	15	4
36JL0003	1	13
36JL0004	2	11
36JL0005	3	21
36JL0007	1	5
36JL0009	1	74
36JL0009	2	40
36JL0010	4	2
36JL0011	2	74
36JL0011	10	3
36JL0012	5	50
36JL0013	2	27
36JL0013	3	74
36JL0014	2	1
36JL0014	4	5

PARTE No.	FIG. No.	PAG. No.
36JL0014	4	74
36JL0014	5	20
36JL0014	6	2
36JL0014	12	4
36JL0014	12	18
36JL0014	16	13
36JL0015	5	74
36JL0015	24	32
36JL0016	11	52
36JL0017	22	56
36JL0019	5	22
36JL0019	6	74
36JL0020	6	22
36JL0020	7	75
36JL0021	7	22
36JL0022	8	22
36JL0023	8	75
36JL0023	10	22
36JL0024	9	22
36JL0024	9	75
36JL0025	1	35
36JL0026	4	65
36JL0026	12	67
36JL0026	20	70
36JL0027	5	65
36JL0027	13	67
36JL0027	21	70
36JL0028	5	65
36JL0029	5	65
36JL0029	6	66
36JL0029	13	67
36JL0029	21	70
36JL0030	5	65

PARTE No.	FIG. No.	PAG. No.
36JL0031	10	75
36JL0031	18	48
36JL0039	19	14
36JL0041	9	31
36JL0041	11	75
36JL0061	6	66
36JL0091	19	21
36-JU00-01-025/47	2	5
36-JU00-01-050/47	2	5
36-JU00-01-075/47	2	5
36-JU00-01-100/47	2	5
36-JU00-01-STD/47	2	5
36JU0001	2	5
36JU0002	6	21
36JU0036	1	6
39019811	11	56
39019811	15	41
39021111	4	60
39021111	14	57
39023911	3	52
39023911	10	75
39023911	13	33
39023911	20	23
39023911	21	48
39024211	17	34
39029115	3	53
39032615	5	33
39042215	11	35
39045411	11	30
39055302	12	30
39059417	4	4
39072211	4	52
39073212	28	17

PARTE No.	FIG. No.	PAG. No.
39074601	21	11
39078408	5	74
39078408	11	75
39078408	21	32
39080808	6	10
39084001	12	37
39084914	11	25
39090012	11	37
39099906	4	20
39099906	5	15
39099906	11	18
39104011	5	74
39104011	11	75
39104011	23	32
39104119	10	18
39104319	8	13
39104619	15	18
39105315	19	30
39105411	22	51
39105515	32	32
39106204	9	28
39118011	3	43
39122515	5	58
39128321	9	2
39150711	9	61
39153721	7A	18
39155104	27	17
39166511	15	14
39167204	5	47
39167294	8	25
39167304	10	2
39177304	6	13
39177602	12	52

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
39177802	5	49
39177802	17	48
39178001	16	22
39178101	6	52
39178101	14	56
39178924	19	48
39179104	3	55
39190204	9	10
39190701	1	60
39190701	13	48
39190701	15	59
39191304	11	27
39193120	3	11
39193120	6	6
39194104	4	35
39194304	2	52
39194304	16	33
39194304	21	51
39194404	5	29
39194404	13	26
39194404	14	61
39194604	5	35
39194604	9	33
39194604	18	51
39194404	23	17
39195404	18	31
39195604	3	28
39195604	10	61
39199020	2	18
39200511	18	11
39201719	1	3
39201719	2	74
39203804	17	40

PARTE No.	FIG. No.	PAG. No.
39206004	10	48
39206004	13	35
39213217	5	5
39214124	7	47
39214124	13	56
39215811	3	7
39216511	13	25
39216511	15	6
39216611	15	7
39218106	3	5
39218106	22	13
39220011	12	21
39220011	16	6
39220307	5	6
39220504	10	61
39220404	14	16
39224120	3	37
39224120	3	40
39224220	4	40
39238104	3	50
39242001	4	33
39242001	24	41
39242704	10	43
39244011	12	3
39246904	6	35
39247504	5	31
39247504	6	42
39248415	7	50
39249211	12	24
39253515	18	57
39256220	13	13
39256220	20	11
39260120	11	11

PARTE No.	FIG. No.	PAG. No.
39260220	8	11
39260607	3	9
39260607	16	14
39260801	15	2
39262921	8	2
39266921	10	4
39269920	16	2
39270411	36	17
39271115	29	17
39272315	6	28
39272315	11	62
39275404	11	24
40326E	12	27
40327E	13	27
41070-1317-RX01/18	5	36
4646/00	5A	65
4647/00	5B	65
4677/00	13A	67
4677/00	21A	70
4677/00	5A	65
4678/00	13B	67
4678/00	21B	70
4678/00	5B	65
4725/00	7	65
4725/00	15	67
4775/00	13A	67
4775/00	5A	65
4775/00	6B	66
4776/00	13B	67
4776/00	5B	65
4776/00	6A	66
4929/00	5A	65
4930/00	5B	65

PARTE No.	FIG. No.	PAG. No.
5070/00	16	68
5071/00	17	68
5072/00	13A	67
5073/00	13B	67
52JF0062	4A	10
52JL0072	17	35
52JL0073	1	18
52JL0141	5	37
52JL0142	16	40
52JL0143	1	18
52JL0145	1	20
52JL0152	12	31
52JL0153	16	31
52JL0156	1A	28
52JL0157	2A	28
52JL0158	8	31
52JL0159	2	31
52JL0207	1	20
56JL0101	14	31
56JL0201	15	31
56JL023G	2	59
56JL0401	2	50
56JL0601	1	28
56JL0701	2	28
56JL315X	2	43
56JL325X	6	43
56JL335X	18	45
59040048	2	42
59040048	10	39
59200006	11	13
59200028	14	11
59200036	2	14
59210019	4	54

PARTE No.	FIG. No.	PAG. No.
59210019	10	37
6462/00	4	69
6463/00	3	69
6464/00	8	69
6465/00	7	69
6466/00	10	69
6467/00	12	70
6468/00	11	69
6469/00	14	70
6470/00	13	70
6471/00	15	70
6472/00	16	70
6473/00	21A	70
6474/00	21B	70
6475/00	6	69
6476/00	5	69
6477/00	19	70
6478/00	18	70
6479/00	17	70
6480/00	17	70
6481/00	9	69
6513/00	4	69
6514/00	3	69
6515/00	8	69
6516/00	7	69
6517/00	10	69
6518/00	12	70
6519/00	11	69
6520/00	14	70
6521/00	13	70
6522/00	15	70
6523/00	16	70
6524/00	4	69

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
6525/00	3	69
6526/00	8	69
6527/00	7	69
6528/00	10	69
6529/00	12	70
6530/00	11	69
6531/00	14	70
6532/00	13	70
6533/00	15	70
6534/00	16	70
6535/00	9	69
6536/00	9	69
6636/00	19	65
6637/00	20	65
743842/00	2	69
AN111015	6	26
AP101236	3	4
AP121064	15	23
AP201025	18	61
BF551037	7	7
BF551037	17	7
CB121042	12	22
CS101128	4	74
CS101128	12	4
DD111011	11	26
DD111012	4	26
DD121056	9	75
DD141227	17	51
DD191015	14	43
DD201002	14	59
DE151043	9	39
DE151046	10	41
DE151047	3	39

PARTE No.	FIG. No.	PAG. No.
DE151047	9	41
DE191010	8	41
DE191010	10	38
DE191011	11	38
DE191028	7	38
DE191029	6	38
DE191033	15	38
DE191043	14	38
DF161102	12	35
DG101029	2	74
DG101029	9	3
DG101418	8	18
DG101456	10	13
DG121002	12	23
DG151005	4	37
DG151049	6	37
DG161124	2	35
DG161144	6	31
DG171015	17	30
DG171016	4	30
DG171018	5	30
DG171019	6	30
DG181008	8	43
DG181008	25	46
DH101048	9	14
DH101199	16	25
DH101235	14	7
DH101295	11	3
DH101381	3	13
DH101383	9	11
DH101383	17	18
DH101388	22	19
DH101389	12	25

PARTE No.	FIG. No.	PAG. No.
DH101392	14	4
DH101396	14	25
DH101509	3	10
DH101607	5	24
DH101648	13	21
DH102117	9	18
DH111013	9	26
DH111016	10	26
DH121063	14	22
DH121064	13	22
DH121086	7	75
DH121087	7	75
DH121088	8	75
DH121118	8	75
DH161146	16	35
DH161158	7	52
DH191006	9	42
DH191013	4	42
DH191017	17	43
DH191037	21	56
DJ161069	7	33
DJ161091	19	34
DJ161229	2	60
DJ161229	11	48
DJ161229	16	59
DJ181029	16	57
DJ181064	15	57
DJ181065	2	16
DJ181065	9	47
DJ181065	22	17
DJ191023	14	38
DJ191029	2	38
DJ191030	3	38

PARTE No.	FIG. No.	PAG. No.
DJ191031	5	38
DJ191056	8	38
DJ191057	1	38
DJ191082	11	43
DJ191083	12	43
DJ201072	18	59
DJ201108	16	38
DJ201109	9	38
DJ201173	9	52
DJ201246	13	43
DJ221019	1	62
DK101225	14	2
DK101284	17	25
DK101352	27	8
DK101386	10	14
DK111011	12	26
DK111028	1	26
DK121045	21	22
DK121047	15	22
DK141028	6A	50
DK151012	9	40
DK151013	8	40
DK151015	14	40
DK151026	2	36
DK151031	2	41
DK151036	1	40
DK151045	18	41
DK151063	7	41
DK151069	4	41
DK151071	25	41
DK151072	19	41
DK151073	17	41
DK151074	17	41

PARTE No.	FIG. No.	PAG. No.
DK151081	20	40
DK151082	21	40
DK151083	1	41
DK151085	13	41
DK151088	11	41
DK151089	12	41
DK181006	4	45
DK181007	5	45
DK181009	14A	45
DK181010	14	45
DK181012	14B	45
DK181013	14C	45
DK181015	11	45
DK181017	9	45
DK181018	7	45
DK181019	8	45
DK181020	10	45
DK181021	6	45
DK181022	16	45
DK181023	17	45
DK181025	23	46
DK181028	24	46
DK181075	1	29
DK181076	10	29
DK201043	10	57
DK211007	3	27
DK211007	3	74
DK221024	2	62
DL161015	16	52
DP101109	17	21
DP101114	16	21
DP101191	23	12
DP101243	15	21

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DP161145	10	60
DP161145	11	59
DS101154	8	14
DS101215	9	18
DS121126	13	23
DS141012	1	52
DS161125	6	33
DS161287	6	27
DS201025	19	61
DT113014	26	32
DT113015	27	32
DT113848	18	30
DT131832	15A	33
DT161005	16	43
DT181000	5	55
DT181310	20	57
DT181311	19	57
DT181414	4	55
DT181415	6	55
DT181434	10	33
DT181435	20	34
DT232601	18	43
DT402006	7	61
DT511242	4	3
DT511243	5	3
DT541019	5	18
DT541212	1	18
DT551400	1	21
DT551401	8	21
DT551402	5	21
DT551403	10	21
DT561206	10	10
DU101225	7	4

PARTE No.	FIG. No.	PAG. No.
DV101048	1	74
DV101048	29	8
EC401030	20	56
EC561023	2	9
FD211006	5	27
GH201012	6	58
JA113403	5	28
JA351627	2	25
JA541048	15	13
JA541233	2	20
JA581314	11	22
JB181223	5	53
JC101034	9	4
JC151020	8	37
JC181022	21	46
JC181023	20	45
JC201043	3	54
JC201046	9	37
JD113019	5	74
JD113019	20	32
JD171801	17	57
JD191006	8	27
JD351207	5	26
JD351800	17	22
JD401007	4	59
JD561416	5	10
JF401016	3	60
JF511207	7	3
JF511214	2	74
JF511215	2	74
JF511217	2	74
JF511228	1	4
JF531007	2	6

PARTE No.	FIG. No.	PAG. No.
JF531014	3	6
JG122028	2	55
JG131001	2	37
JG131821	5	41
JG161008	12	43
JG161010	1	38
JG171029	20	16
JG181235	3	56
JG181236	2	56
JG181238	2	53
JG181259	12	53
JG191008	4	27
JG232601	9	27
JG232606	10	27
JG351019	9	25
JG351209	2	26
JG351400	13	2
JG511021	3	1
JG511022	4	1
JG511046	5	2
JG511269	7	4
JG511270	13	4
JG531027	8	6
JG531031	9	6
JG531039	12	6
JG531040	13	6
JG531041	11	6
JG531207	7	14
JG531211	3	14
JG531212	4	14
JG531215	5	14
JG531220	2	4
JG531228	3	14

PARTE No.	FIG. No.	PAG. No.
JG531229	4	14
JG541015	12	13
JG541020	29	12
JG541021	19	19
JG541041	4	74
JG541041	16	13
JG541043	7	25
JG541044	5	13
JG541045	22	11
JG541046	4	11
JG541058	18	13
JG541059	10	11
JG541063	4	13
JG541068	1	2
JG541074	17	13
JG541230	7	18
JG541231	16	18
JG551000	24	7
JG551010	28	8
JG551013	4	7
JG551015	5	18
JG551017	4	18
JG551019	12	7
JG551020	6	7
JG551020	19	7
JG551021	21	7
JG551021	26	8
JG551022	11	7
JG551025	13	7
JG551027	2	7
JG551213	5	7
JG551214	8	7
JG551215	22	7

PARTE No.	FIG. No.	PAG. No.
JG551216	14	6
JG551216	18	21
JG551220	9	7
JG551222	18	7
JG551223	20	7
JG551224	23	7
JG551225	25	7
JG551227	10	7
JG551228	16	7
JG551423	14	21
JG551427	2	21
JG551428	4	21
JG551443	8	21
JG551447	7	21
JG551449	5	21
JG551451	11	21
JG561008	12	9
JG561009	17	11
JG561010	4	9
JG561011	1	9
JG561012	7	9
JG561013	8	9
JG561016	9	9
JG561200	10	10
JG561204	15	11
JG561205	16	11
JG561215	11	9
JG561215	11	10
JG561217	13	10
JG561218	12	10
JG561222	5	9
JG561225	10	9
JG561226	19	11

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JG561232	12	10
JG571014	24	12
JG571016	25	12
JG571018	2	15
JG571024	14	13
JG581014	8	29
JG581014	31	17
JG591038	3	24
JG591039	6	24
JG591053	13	24
JG591070	4	74
JG591070	10	24
JG591088	15	24
JG591096	7	24
JG591097	8	24
JG601005	6	14
JG601007	6	11
JG601007	18	14
JG601012	13	14
JG601013	11	14
JG601209	8	16
JG601210	7	16
JG601211	18	16
JG601221	13	16
JG601229	17	16
JG601234	34	17
JG601235	17A	16
JG621412	5	25
JG621413	4	25
JG621417	6	25
JL111054	4	28
JL111078	6	29
JL111081	3	29

PARTE No.	FIG. No.	PAG. No.
JL111082	4	29
JL111092	7	28
JL111093	8	28
JL111103	2	29
JL111109	18	30
JL113000	8	31
JL113002	1	31
JL113006	29	32
JL113007	2	31
JL113012	3	31
JL113013	12A	31
JL113014	14	31
JL113015	16A	31
JL113016	15	31
JL113020	26	32
JL113026	13	31
JL113027	17	31
JL113028	19	31
JL113032	27	32
JL113033	4	31
JL113033	7	42
JL113034	7	31
JL113036	25	32
JL113038	31	32
JL113057	7	31
JL113201	9	35
JL113207	7	35
JL113209	15	35
JL113210	3	35
JL113212	8	35
JL113400	1	28
JL113401	2	28
JL113800	2	59

PARTE No.	FIG. No.	PAG. No.
JL113803	6	59
JL113810	7	59
JL113811	8	59
JL113812	9	59
JL113824	21	61
JL113829	6	29
JL113834	2	33
JL121001	15	45
JL121005	1	45
JL122001	8	30
JL122002	7	30
JL122003	10	30
JL122004	13	30
JL122006	1	30
JL122008	14	30
JL122009	9	30
JL122013	3	30
JL122026	17	30
JL131000	7	37
JL131001	13	37
JL131004	1	37
JL131004	3	36
JL131005	5	37
JL131203	13	40
JL131209	4	36
JL131211	15	40
JL131216	5	40
JL131218	16	40
JL131220	6	41
JL131225	7	40
JL131226	11	40
JL131228	1	74
JL131232	6	40

PARTE No.	FIG. No.	PAG. No.
JL131802	12	38
JL131803	3	41
JL131804	1	39
JL131805	6	39
JL131806	2	39
JL131807	4	39
JL131811	2	33
JL131812	15	33
JL131825	5	39
JL131830	8	39
JL131831	7	39
JL131841	22	41
JL131877	20	41
JL131878	23	41
JL131918	8	38
JL141000	1	74
JL151002	2	45
JL151003	3	45
JL151004	13	45
JL151012	12	45
JL151021	1	43
JL151023	18	43
JL151024	1	45
JL151026	2	43
JL151028	5	43
JL151030	6	43
JL151032	18	45
JL151034	7	43
JL151035	9	43
JL151036	26	46
JL151037	22	46
JL151038	2A	43
JL161001	1	42

PARTE No.	FIG. No.	PAG. No.
JL161003	15	43
JL161006	8	42
JL161008	16	43
JL161010	3	42
JL161015	11	43
JL161200	2	54
JL161201	1	54
JL161206	1	54
JL171018	20	51
JL171019	19	51
JL171020	23	51
JL171022	2	48
JL171023	1	48
JL171024	5	48
JL171024	15	49
JL171035	12	50
JL171036	11	50
JL171037	8	50
JL171040	10	55
JL171044	1	50
JL171045	2	63
JL171046	3	63
JL171048	16	48
JL171049	4	50
JL171056	1	63
JL171057	3	48
JL171060	14	50
JL171061	9	48
JL171062	8	48
JL171063	9	50
JL171070	6	48
JL171070	10	75
JL171070	13	49

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL171071	4	48
JL171071	10	75
JL171071	14	49
JL171073	26	51
JL171078	24	49
JL171081	1	50
JL171085	24	51
JL171096	25	51
JL171099	1	48
JL171600	2	50
JL171800	13	50
JL171801	16	51
JL171802	10	50
JL171803	15	50
JL171825	1	64
JL181005	7	63
JL181006	5	55
JL181008	1	56
JL181012	5	64
JL181017	8	47
JL181019	1	47
JL181025	9	53
JL181029	15	57
JL181203	6	56
JL181205	1	55
JL181209	12	33
JL181211	8	63
JL181211	8	64
JL181212	9	63
JL181212	9	64
JL181214	10	52
JL181218	11	61
JL181219	15	52

PARTE No.	FIG. No.	PAG. No.
JL181220	14	52
JL181221	14	33
JL181224	15	30
JL181225	16	30
JL181226	8	47
JL181229	1	47
JL181232	6	47
JL181233	5	63
JL181234	4	63
JL181235	18	56
JL181235	19	45
JL181236	15	56
JL181237	17	56
JL181241	4	53
JL181245	11	57
JL181247	5	56
JL181249	16	56
JL181253	13	55
JL181256	3	16
JL181264	20	61
JL181283	23	56
JL181288	5	52
JL181401	1	33
JL181401	4	64
JL181401	6	63
JL181402	8	33
JL181405	3	33
JL181407	6	55
JL181408	7	55
JL181409	4	55
JL181410	12	55
JL181411	10	33
JL181416	12	57

PARTE No.	FIG. No.	PAG. No.
JL181417	4	57
JL181418	6	64
JL181419	7	64
JL181420	2	64
JL181421	3	64
JL181422	11	64
JL181423	10	64
JL181424	26	49
JL181425	27	49
JL181426	1	57
JL181427	11	53
JL181433	12	60
JL181437	13	53
JL181439	25	49
JL181447	2	49
JL181448	3	49
JL181449	1	49
JL181450	4	49
JL181453	3	57
JL181456	9	49
JL181457	10	49
JL181464	8	33
JL181465	1	33
JL181468	18	34
JL191001	1	27
JL191004	7	27
JL191008	25	73
JL191009	26	73
JL231201	3	62
JL231203	4	62
JL231404	5	62
JL231405	6	62
JL231600	23	44

PARTE No.	FIG. No.	PAG. No.
JL231601	22	44
JL232808	10	59
JL232811	8	60
JL233002	3	65
JL233002	11	67
JL233002	24	71
JL233003	2	65
JL233003	2	66
JL233003	2	72
JL233003	10	67
JL233003	23	71
JL233004	1	65
JL233004	1	66
JL233004	1	72
JL233004	9	67
JL233004	22	70
JL233005	4	66
JL233005	6	65
JL233005	14	67
JL233006	7	65
JL233006	15	67
JL233015	9	20
JL233153	5	66
JL233155	3	66
JL233239	10A	67
JL233239	23A	71
JL233239	2A	65
JL233239	2A	66
JL233239	2A	72
JL351003	19	25
JL351009	10	25
JL351038	19	25
JL351200	3	26

PARTE No.	FIG. No.	PAG. No.
JL351201	7	26
JL351202	8	26
JL351230	8	26
JL351232	7	26
JL351241	3	26
JL351600	1	25
JL351800	7	13
JL401002	1	59
JL401002	7	60
JL401003	3	58
JL401004	4	58
JL401005	1	58
JL401006	2	58
JL401012	9	56
JL401016	17	59
JL401017	9	57
JL401400	20	44
JL401401	21	44
JL401402	10	35
JL401403	19	44
JL401406	5	42
JL401409	20	44
JL401410	21	44
JL401411	13	43
JL401600	8	61
JL401602	8	61
JL401801	13	61
JL401803	12	61
JL402001	14	26
JL402007	14	26
JL402201	5	61
JL402202	6	61
JL402203	1	61

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL402208	17	61
JL402220	1A	61
JL402228	1A	61
JL402229	1	61
JL402400	1	53
JL402403	8	53
JL402405	1	53
JL402600	6	50
JL402602	6	50
JL403000	2	61
JL403600	14	35
JL501003	1	11
JL501040	1	11
JL511001	2	1
JL511001	4	74
JL511002	1	1
JL511006	4	3
JL511007	5	3
JL511009	3	2
JL511010	2	3
JL511011	3	3
JL511016	3	22
JL511022	4	74
JL511022	6	2
JL511029	11	2
JL511205	6	3
JL511219	7	2
JL511220	6	4
JL511221	5	4
JL511222	8	4
JL-5212-00-025/47	6	5
JL-5212-00-050/47	6	5
JL-5212-00-075/47	6	5

PARTE No.	FIG. No.	PAG. No.
JL-5212-00-100/47	6	5
JL-5212-00-STD/47	6	5
JL521002	4	5
JL521002	4	74
JL521200	6	5
JL531203	3	14
JL531205	1	14
JL531205	7	11
JL541202	1	20
JL541203	7	20
JL541207	12	18
JL541207	4	74
JL541208	4	74
JL541208	5	20
JL541210	13	18
JL541218	23	19
JL541221	26	12
JL541222	18	19
JL541223	10	20
JL541227	8	18
JL541230	20	19
JL541231	21	19
JL541237	26	12
JL541238	10A	20
JL541246	13	18
JL561205	1A	10
JL561206	2A	10
JL561401	1	10
JL561404	2	10
JL561405	4	10
JL561407	7	10
JL561408	8	10
JL561409	14	10

PARTE No.	FIG. No.	PAG. No.
JL561410	15	10
JL581000	1	23
JL581004	16	23
JL581007	5	23
JL581009	8	23
JL581010	21	23
JL581015	11	23
JL581016	10	23
JL581018	7	23
JL581022	14	23
JL581023	2	23
JL581024	6	23
JL581025	4	23
JL581027	4	22
JL581050	1	23
JL581201	1	22
JL581203	24	19
JL581204	18	22
JL581205	19	22
JL581206	20	22
JL581300	2	22
JL591048	2	24
JL591052	1	24
JL591075	9	24
JL591086	16	24
JL591144	4	24
JL591148	17	24
JL591165	8	24
JL601000	6	16
JL601005	12	14
JL601200	15	16
JL601208	12	16
JL601209	21	17

PARTE No.	FIG. No.	PAG. No.
JL601210	1	16
JL601212	11	16
JL601213	24	17
JL601214	25	17
JL601215	19	16
JL601216	30	17
JL601219	10	16
JL601220	9	16
JL601221	33	17
JL601225	12A	2
JL601227	24	17
JL601228	12	16
JL601231	4	16
JL601234	32	17
JL601235	21	17
JL601237	12	2
JL601238	15	16
JN351604	16	61
JU231205	12	62
JU231207	11	62
JU531021	4	6
JU531213	1	14
JU531213	7	11
JU531215	1	14
JU531215	7	11
JU541005	13	11
JU551401	6	18
JU551402	10	21
JU551404	1	21
JU551406	9	21
JU571000	1	15
JW171015	4	16
JW181236	3	47

PARTE No.	FIG. No.	PAG. No.
JY151011	26	46
JY181284	6	60
JY551402	20	25
JY601235	16	16
JZ401013	7	61
KACA0520	11	33
KACA0616	11	33
KACA0635	9	62
KACA0820	11	31
KACB0514	6	53
KACB0516	3	50
KACB0835	19	56
KADA0512	14	48
KADA0512	17	49
KADA0616	5	16
KADA0622	11	27
KADA0630	16	49
KADA0630	17	24
KADA0630	19	23
KADB0516	10	48
KADB0516	13	35
KADC0616	7	57
KADD0510	12	59
KADD0610	11	60
KADD0614	10	56
KADE0614	2	52
KADF0608	15	60
KADF0614	16	33
KADF0616	13	60
KADF0616	35	17
KADF0820	9	33
KADM0610	18	23
KADP0516	27	12

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
KADQ0606	20	14
KADQ0620	11	4
KADQ0620	14	14
KADQ0625	3	25
KADQ0625	14	24
KADQ0630	6	20
KADQ0630	14	18
KADQ0645	8	20
KAEA0608	6	42
KAEG0620	13	57
KAEM0622	9	23
KAEQ0620	10	2
KAEQ0620	11	4
KAEQ0630	6	20
KAEQ0630	14	18
KAEQ0640	20	13
KAEQ0645	8	20
KBBA0512	4	33
KBBA0514	3	59
KBBG0612	19	13
KBQA3506	17	23
KBUA0612	4	47
KBUA0612	6	52
KBUB0410	8	55
KBUB0512	2	47
KBUB0516	13	48
KBUC0516	12	56
KCAA0504	3	53
KCGA0505	7	50
KCGA1010	7	58
KCGD0505	13	59
KCGD0606	5	59
KCGD1010	8	58

PARTE No.	FIG. No.	PAG. No.
KDAA0408	6	49
KDAA0510	10	53
KDAA0510	17	34
KDBA0512	6	57
KDBA0512	8	49
KDBA0512	12	49
KDBA0613	8	57
KDBA0818	3	43
KDBB0512	18	49
KDBE0613	8	62
KEAA1110	3	15
KEAB1010	3	15
KEBA3715	9	13
KIT-472930/00	4	65
KIT-472930/00	12	67
KIT-472930/00	20	70
KPBC6202	3	37
KPBC6202	3	40
KPBC6302	4	40
LAA00019	10	40
LAC00008	14	55
LAC00016	30	32
LAC00017	7	62
LAC00019	2	30
LAC00020	4	43
LAC00022	12	48
LAC00022	22	49
LAC00024	6	9
LAC00029	10	62
LAC00034	10	75
LAC00034	20	48
LAC00034	20	49
LAC00035	8	52

PARTE No.	FIG. No.	PAG. No.
LAC00036	11	55
LAC00037	9	55
LAC00054	15	55
LAC00063	7	48
LAC00063	19	49
LAD00037	13	38
LAD00040	9	29
LAD00040	26	17
LAD00055	14	25
LAD00077	5	11
LAD00081	21	13
LAD00120	21	57
LAD00135	6	35
LAE00010	18	25
LAE00014	2	13
LAE00016	8	3
LAE00016	15	25
LAE00017	1	7
LAE00018	4	15
LBB00004	3	23
LBB00006	12	11
LBR00002	5	57
LBR00002	7	49
LBR00002	8	56
LBS00001	4	56
LBU00009	5	60
LBU00023	11	49
LBU00030	2	57
LCA00009	12	40
LCD00001	10	6
LCG00006	17	2
LCG00008	9	60
LCJ00002	15	37

PARTE No.	FIG. No.	PAG. No.
LCJ00002	19	40
LDA00007	7	56
LDA00007	13	52
LDA00008	2	2
LDA00013	10	31
LDB00007	7	53
LDB00010	13	25
LDB00020	3	18
LDB00023	3	52
LDB00023	13	33
LDB00023	14	60
LDB00023	20	23
LDB00023	21	49
LDB00029	14	37
LDB00029	18	40
LDH00002	12	6
LEB00001	17	14
LEB00001	28	12
LG001-TT	27	73
LJA00004	23	13
LJA00005	13	16
MF12V9-1A-AUTECO	15	61
PA181292	24	56
PA181293	25	56
PN100.096-BL	8	67
PN100.096-OR	8	67
PN100.096-RD	8	67
PN101.026	1	67
PN101.026	28	73
PN101.027	2	67
PN101.027	29	73
PN101.046	1	69
PN101.046-BL	1	69

[illegible]

FICHA TÉCNICA PULSAR NS200 - AS200



pulsar

NS200 - AS200

CARACTERÍSTICAS	UNIDAD
Motor :	4T, monocilíndrico, enfrida por líquido.
Diámetro x Carrera :	72.00mm x 49.00mm
Índice de compresión :	11:1
Potencia máxima :	23.2 HP @ 9.500 rpm
Torque máximo :	18.3 Nm @ 8.000rpm
Sistema de ignición :	CDI digital con microprocesador y TPS
Bujías :	Izq.-Der.:PRG6HCC
	Central: BOSCH YR5NE
Tolerancia de las bujías :	0.7 a 0.8 mm
Lubricación :	Bomba húmeda de aceite, forzada.
Arranque :	Eléctrico.
Transmisión :	Mecánica 6 velocidades.
FRENOS	
Freno delantero :	Disco hidráulico.
Freno trasero :	Disco hidráulico.
CAPACIDAD DEL TANQUE	
Lleno :	12 litros
Combustible :	Corriente
Reserva :	2.4 litros
Reserva utilizable :	2.2 litros
LLANTAS	
Llantas Delantera :	100/80 x 17 TUBELESS
Presión de aire Delantera :	25 PSI
Llanta Trasera :	130/70 x 17 TUBELESS
Presión de aire Trasera (solo) :	28 PSI
Presión Trasera (Con Parrillero) :	32 PSI
SISTEMA ELECTRICO	
Bombillo Farola :	55/60 W
Luz de Stop :	LED
Luces direccionales :	10 W
Indicadores del tablero :	LED
Velocímetro :	Display digital
Pito :	12 V DC
Batería :	12V - 8 Ah
DIMENSIONES	
Largo x Ancho x Alto :	2017 mm x 804 mm x 1195 mm (NS) 2070 mm x 804 mm x 1205 mm (AS)
Distancia entre ejes :	1363 mm
Altura al piso :	167 mm (Min.)
Peso en seco :	145 kg. (NS200) 153 kg. (AS200)





Línea Gratuita Nacional
01 8000 52 00 90
servicioalcliente@auteco.com.co
www.auteco.com.co



Mobil