

CATÁLOGO DE PARTES

DUKE 200



KTM



MRF ZAPPER C (ZC)



MRF



MRF ZAPPER FS (ZFS)

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.auteco.com.co accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco



DIRECTORIO TELEFÓNICO - DIVISIÓN REPUESTOS ASESORES COMERCIALES

NOMBRE	CARGO	CELULAR	TELÉFONOS DIRECTOS	CORREO ELECTRÓNICO
ALEJANDRO POSADA	ASESOR ORIGINALES	314 811 04 09	306 84 67	aposada@auteco.com.co
JORGE GIL	ASESOR ORIGINALES	313 672 73 53	306 84 71	jgil@auteco.com.co
JORGE MARIO MAYA	ASESOR ORIGINALES	312 258 93 84	306 84 75	jmaya@auteco.com.co
JOVANY CASTRO	ASESOR ORIGINALES	313 767 78 43	306 84 74	jcastro@auteco.com.co
HILDE ALEXANDER GARCÍA	ASESOR MOTOCARROS	321 641 50 63	306 84 88	hgarcia@auteco.com.co
RUBÉN DARIO CAMPO	ASESOR PAGO ANTICIPADO	321 799 79 06	306 84 04	rcampo@auteco.com.co
ALEXANDER GRAJALES	ASESOR COMERCIAL	310 373 90 19	306 84 73	agrajales@auteco.com.co
CARLOS H. TOBÓN	ASESOR COMERCIAL	310 447 36 11	306 84 63	ctobon@auteco.com.co
CARLOS SALAZAR	ASESOR COMERCIAL	310 414 88 45	306 84 65	csalazar@auteco.com.co
ELKIN GALLEGO	ASESOR COMERCIAL	310 436 25 98	306 84 64	egallego@auteco.com.co
GONZALO SILDARRIAGA	ASESOR COMERCIAL	310 406 88 74	306 84 60	gsaldarriaga@auteco.com.co
HECTOR A. VALENCIA	ASESOR COMERCIAL	310 447 36 52	306 84 61	hvalencia@auteco.com.co
HECTOR J. LOPEZ	ASESOR COMERCIAL	312 257 67 91	306 84 70	hlopez@auteco.com.co
JOHN JAIRO LÓPEZ	ASESOR COMERCIAL	310 444 22 15	306 84 62	jlopez@auteco.com.co
MAURICIO MEJÍA	ASESOR COMERCIAL	312 257 61 75	306 84 72	mmejia@auteco.com.co
NESTOR ADARVE	ASESOR COMERCIAL	310 436 26 89	306 84 68	nadarve@auteco.com.co
UBERNEY ORTIZ	ASESOR COMERCIAL	313 672 73 37	306 84 66	uortiz@auteco.com.co
WILLIAM GUTIERREZ	ASESOR COMERCIAL	310 407 40 72	306 84 69	wgutierrez@auteco.com.co

SERVICIO AL CLIENTE

LÍNEA ÚNICA DE SERVICIO AL CLIENTE CANAL (4) 444 81 90 ☎

DIVISIÓN REPUESTOS • FAX OFICINAS: 373 03 75

CORREOS ELECTRÓNICOS Y FAX:

ATENCIÓN EN:		E-MAIL	FAX
SERVICIO A DISTRIBUIDORES Y MAYORISTAS	WILLINGTON FRANCO	servicioadistribuidoresymayoristas@auteco.com.co	
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co	
FACTURACIÓN REPUESTOS	LEONARDO GARCÍA	facturacionrptos@auteco.com.co	(4) 373 83 94
GARANTÍAS	JONNY HOLGUÍN	garantiasrptos@auteco.com.co	
DEVOLUCIONES - RECLAMOS	YUDY DUQUE	devolucionesrptos@auteco.com.co	
MOTO FUERA DE RUTA	RICARDO CUARTAS	motofueraderuta@auteco.com.co	(4) 306 84 86

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81

Atención a clientes finales: LÍNEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
1	CARCASAS	1 - 2
2	CUBIERTA CLUTCH	3
3	BALANCEADOR	4
4	CULATA	5
5	CIGÜEÑAL	6
6	CLUTCH	7
7	TRANSMISIÓN I - EJE CLUTCH	8
8	TRANSMISIÓN II - EJE DE SALIDA	9
9	EJE DE CAMBIOS	10 - 11
10	BOMBA DE AGUA	12
11	SISTEMA DE REFRIGERACIÓN	13 - 14
12	VÁLVULAS	15 - 16
13	EJE DE LEVAS	17
14	CULATA	18
15	SISTEMA DE LUBRICACIÓN	19
16	SISTEMA DE ENCENDIDO	20
17	MOTOR DE ARRANQUE	21
18	CUERPO DE INYECCIÓN	22
19	SUSPENSIÓN DELANTERA	23

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
20	MANUBRIO	24
21	CHASIS	25 - 26
22	GATO LATERAL - GATO CENTRAL	27
23	BRAZO OSCILANTE	28
24	AMORTIGUADOR	29
25	SILENCIADOR	30
26	FILTRO DE AIRE	31
27	BOMBA DE GASOLINA	32
28	TANQUE DE GASOLINA - SILLÍN	33 - 34
29	GUARDABARROS - CUBIERTAS	35 - 36
30	CALCOMANÍAS	37
31	RUEDA DELANTERA	38
32	RUEDA TRASERA	39 - 40
33	EQUIPO ELÉCTRICO	41
34	BOMBA FRENO DELANTERO	42
35	BOMBA FRENO TRASERO	43
36	SISTEMA DE LUCES	44
37	VELOCÍMETRO - SWICHE DE ENCENDIDO	45
	ÍNDICE DE REFERENCIAS	46 - 50

ÍNDICE DE GRÁFICOS

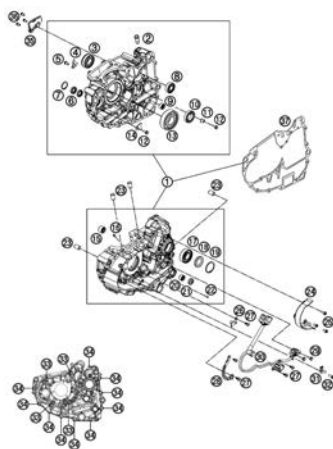


FIGURA N° 1: CARCASAS

PÁG. No.
1 - 2

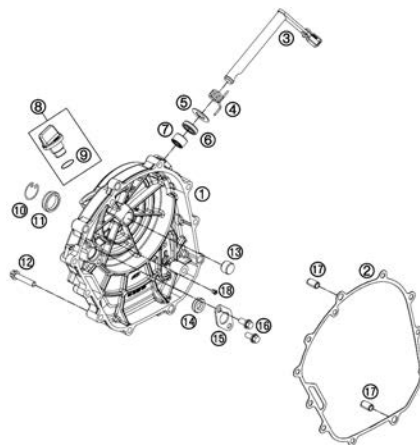


FIGURA N° 2: CUBIERTA CLUTCH

PÁG. No.
3

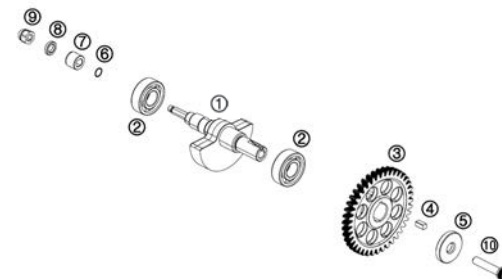


FIGURA N° 3: BALANCEADOR

PÁG. No.
4

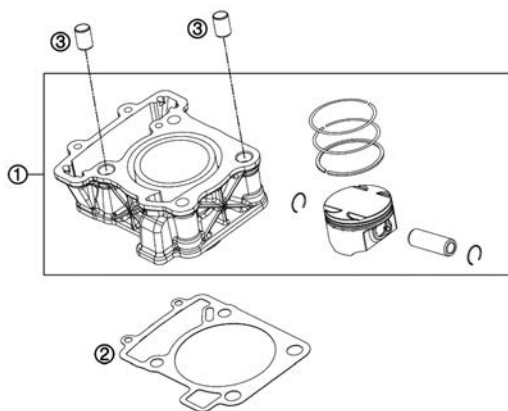


FIGURA N° 4 : CULATA

PÁG. No.
5

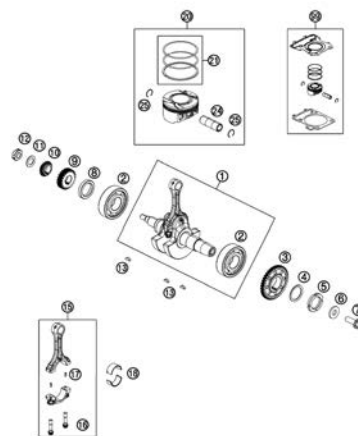


FIGURA N° 5: CIGÜEÑAL

PÁG. No.
6

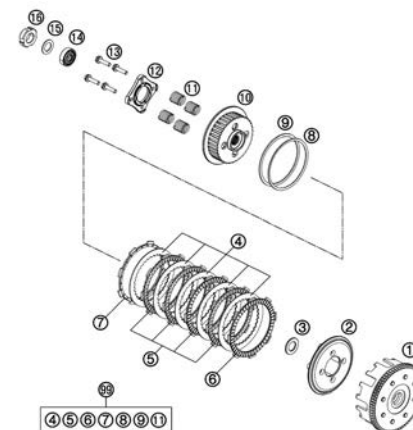
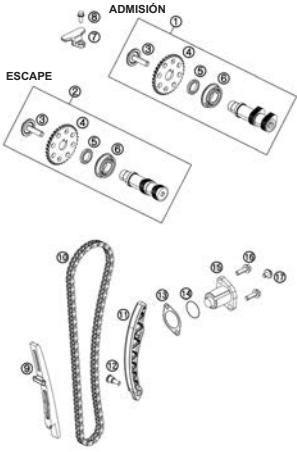
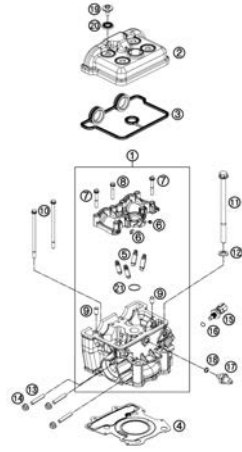
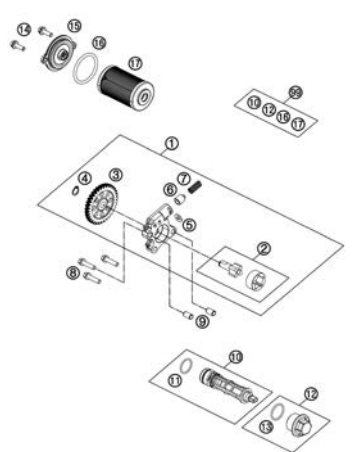
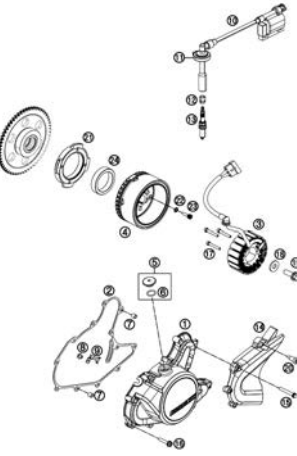
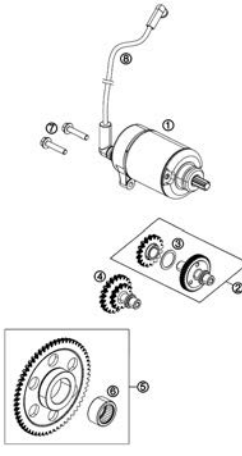
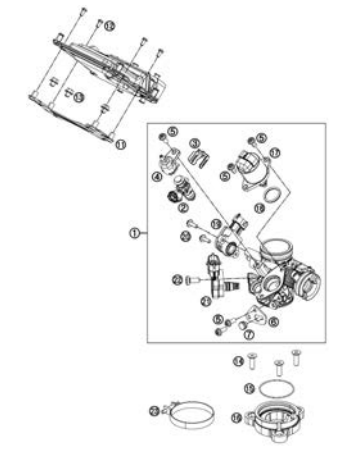


FIGURA N° 6: CLUTCH

PÁG. No.
7

ÍNDICE DE GRÁFICOS

		
FIGURA N° 13: EJE DE LEVAS	FIGURA N° 14: CULATA	FIGURA N° 15: SISTEMA DE LUBRICACIÓN
		
FIGURA N° 16: SISTEMA DE ENCENDIDO	FIGURA N° 17: MOTOR DE ARRANQUE	FIGURA N° 18: CUERPO DE INYECCIÓN

ÍNDICE DE GRÁFICOS

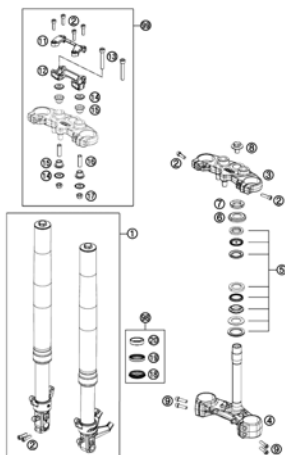


FIGURA N° 19: SUSPENSIÓN DELANTERA

PÁG. No.
23

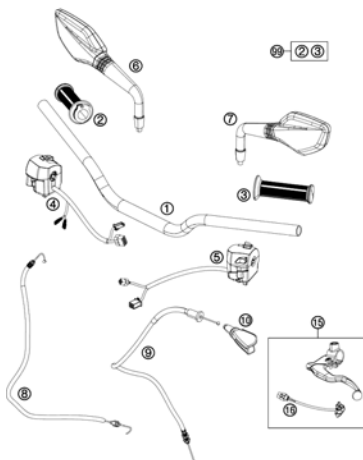


FIGURA N° 20: MANUBRIO

PÁG. No.
24

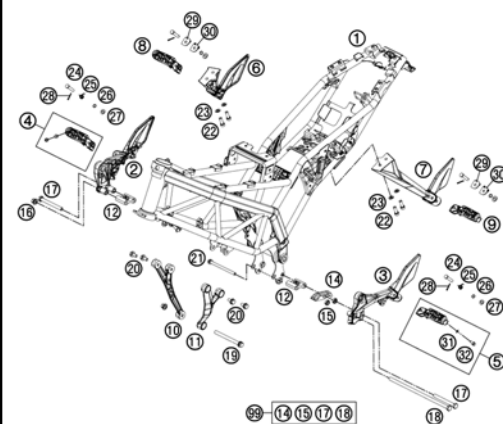


FIGURA N° 21: CHASIS

PÁG. No.
25 - 26

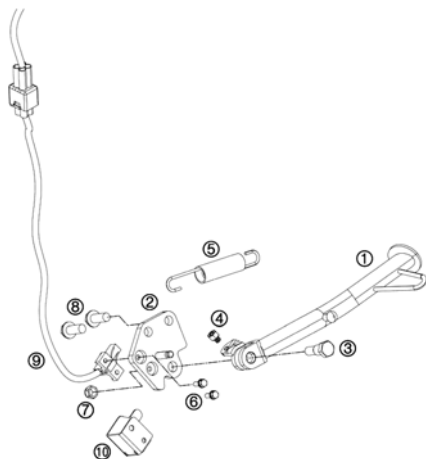


FIGURA N° 22: GATO LATERAL - GATO CENTRAL

PÁG. No.
27

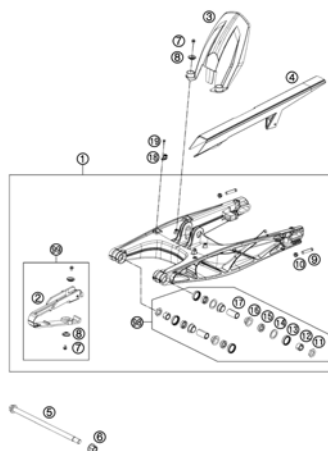


FIGURA N° 23: BRAZO OSCILANTE

PÁG. No.
28

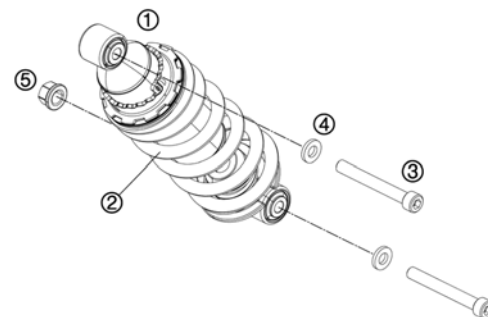


FIGURA N° 24: AMORTIGUADOR

PÁG. No.
29

ÍNDICE DE GRÁFICOS

FIGURA N° 25: SILENCIADOR	FIGURA N° 26: FILTRO DE AIRE	FIGURA N° 27: BOMBA DE GASOLINA
FIGURA N° 28: TANQUE DE GASOLINA - SILLÍN	FIGURA N° 29: GUARDABARROS - CUBIERTAS	FIGURA N° 30: CALCOMANIAS

ÍNDICE DE GRÁFICOS

FIGURA N° 31: RUEDA DELANTERA	PÁG. No. 38	FIGURA N° 32: RUEDA TRASERA	PÁG. No. 39 - 40	FIGURA N° 33: EQUIPO ELÉCTRICO	PÁG. No. 41
FIGURA N° 34: BOMBA FRENO DELANTERO	PÁG. No. 42	FIGURA N° 35: BOMBA FRENO TRASERO	PÁG. No. 43	FIGURA N° 36: SISTEMA DE LUCES	PÁG. No. 44

ÍNDICE DE GRÁFICOS

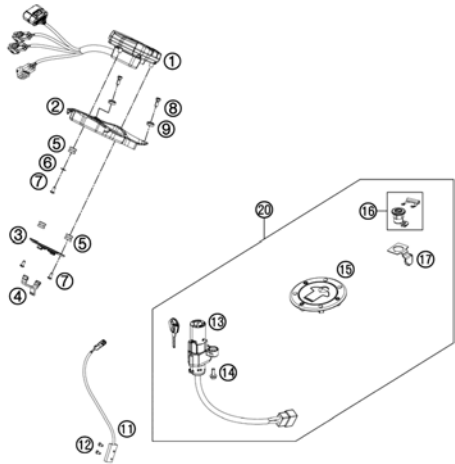


FIGURA N° 37: VELOCÍMETRO - SWICHE
DE ENCENDIDO

PÁG. No.
45

FIGURA N° 1: CARCASAS (1/2)

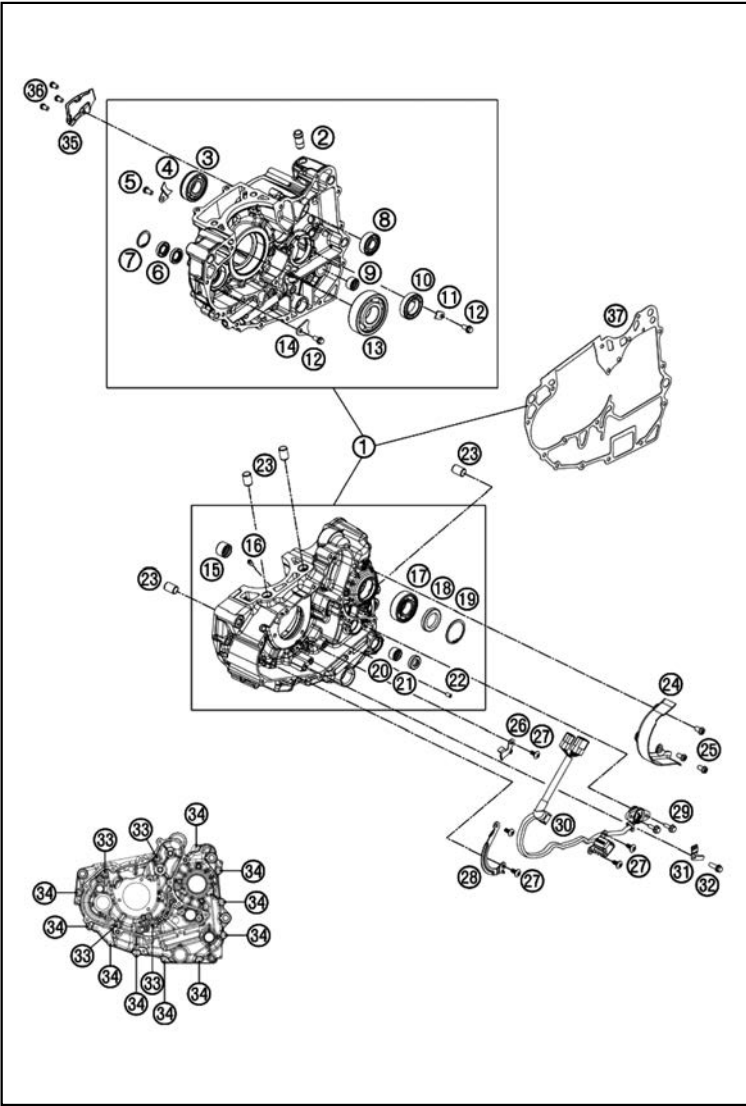


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.
1	90130000144	Kit Carcasas	1
2	90130022000	Conector	1
3	J625062040	Rodamiento Bolas 6204	1
4	90130004002	Platina	1
5	J005160123	Tornillo M6x12	1
6	J760122455	Retén Bomba Agua	2
7	J472025120	Pin de Seguridad 25x1.2	1
8	90130004003	Rodamiento Bolas 15x35x11	1
9	J618131912	Rodamiento Agujas HK1312	1
10	90130004004	Rodamiento Bolas	1
11	90130078000	Arandela	1
12	90130078001	Tornillo M6x22	2
13	90130082000	Rodamiento Bolas Cigüeñal	1
14	90130079000	Arandela	1
15	J618152114	Rodamiento Agujas	1
16	90130164000	Buje Aceite	1
17	J625062041	Rodamiento Bolas 6204Z/HN3	1
18	J760253706	Retén Eje de Salida 25x37x6	1
19	J472037150	Pin de Seguridad 37x1.5	1
20	J618131912	Rodamiento Agujas HK1312	1
21	90130003004	Retén 13x22x5.6	1
22	90130058000	Buje Aceite	1
23	90130003007	Pin Guía D14	4
24	90130047000	Protector Cadena	1
25	J005060123	Tornillo M6x12	3

This exploded view diagram illustrates the assembly of a 2-stroke engine. The components are numbered as follows:

- Top Section:** Shows the upper engine components, including the cylinder head (1), piston (2), piston pin (3), connecting rod (4), and crankshaft (5). Other parts include the cylinder (6), piston rings (7, 8), and various bolts and washers (9-14).
- Bottom Section:** Shows the lower engine components, including the crankcase (15), crankshaft (16), and connecting rod (17). Other parts include the crankcase cover (18), crankcase gasket (19), and various bolts and washers (20-22).
- Right Section:** Shows the engine housing (23) and the air filter (24). Other parts include the air filter element (25), air filter housing (26), and various bolts and washers (27-30).
- Bottom Left Section:** Shows the engine base (31) and the engine mounting bracket (32). Other parts include the engine base gasket (33) and engine base bolts (34).
- Bottom Right Section:** Shows the engine mounting bracket (35) and the engine mounting bolts (36).



This exploded view diagram illustrates the assembly of a motorcycle engine. The central component is the engine block (1), which features a cooling fan and internal mechanical parts. Surrounding it are various components: a long drive shaft (3) with a pin (4) and washers (5, 6, 7); a timing chain assembly (8, 9, 10, 11); a timing chain tensioner (12); a timing chain guide (13); a timing chain sprocket (14); a timing chain tensioner arm (15); a timing chain tensioner pin (16); a timing chain tensioner bracket (17); and a timing chain tensioner cover (18). The diagram uses numbered callouts to identify each part, facilitating the assembly process.



This exploded view diagram illustrates the assembly of a mechanical component. The parts are numbered as follows:

- 1**: A central shaft or pin with a cross-shaped base.
- 2**: Two circular washers or spacers, one positioned on each side of the central shaft.
- 3**: A large gear or sprocket with multiple teeth.
- 4**: A small pin or clip used to secure the gear.
- 5**: A circular plate or disc.
- 6**: A small circular washer or spacer.
- 7**: A small circular washer or spacer.
- 8**: A small circular washer or spacer.
- 9**: A small circular washer or spacer.
- 10**: A long pin or screw with a hexagonal head.





This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The central part is a main housing (1) with a central shaft and a piston rod. Surrounding it are various sub-assemblies and individual components:

- Top Assembly (20):** Includes a spring (21) and a cap (22) with screws (23, 24, 25).
- Right Assembly (99):** Includes a gasket (99), a spring (21), a cap (22), and a gasket (99).
- Left Assembly (15):** Includes a piston rod (15), a piston (17), and a piston pin (16).
- Bottom Assembly (18):** Includes a bracket (18) and a pin (13).
- Other Components:** Includes a gear (3), a pin (4), a washer (5), a nut (6), a bolt (7), a washer (8), a pin (9), a nut (10), a washer (11), a pin (12), a pin (13), a pin (14), a pin (15), a pin (16), a pin (17), a pin (18), a pin (19), a pin (20), a pin (21), a pin (22), a pin (23), a pin (24), a pin (25).



Exploded view diagram of a mechanical assembly. The diagram shows a central shaft assembly with gears and bearings, surrounded by various fasteners and components. The parts are numbered 1 through 16. A legend box at the bottom left contains the numbers 4, 5, 6, 7, 8, 9, and 11.

Legend box contents: 4, 5, 6, 7, 8, 9, 11



This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 17. The assembly sequence is as follows:

- Part 1** (Shaft) is the central component.
- Part 3** (Nut) and **Part 4** (Washer) are used to secure the shaft at one end.
- Part 5** (Bracket) is attached to the shaft.
- Part 6** (Housing) is the main outer casing.
- Part 7** (Seal) is installed on the shaft.
- Part 8** (Gear) is mounted on the shaft.
- Part 9** (Nut) and **Part 10** (Washer) are used to secure the gear assembly.
- Part 11** (Bracket) is attached to the gear assembly.
- Part 12** (Gear) is the output gear.
- Part 13** (Seal) is installed on the shaft.
- Part 14** (Gear) is mounted on the shaft.
- Part 15** (Nut) and **Part 16** (Washer) are used to secure the gear assembly.
- Part 17** (Bracket) is attached to the gear assembly.



FIGURA N° 8: TRANSMISIÓN II - EJE DE SALIDA

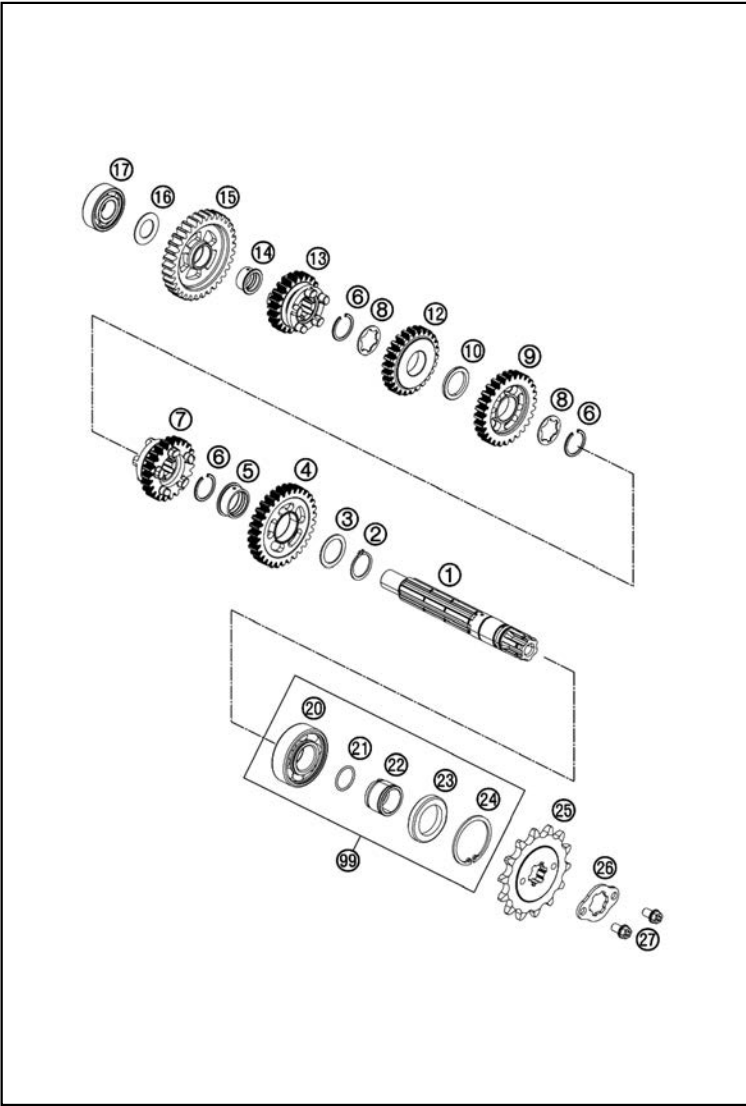


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.
1	90633010000	Eje Piñón Salida	1
2	J471020121	Pin de Seguridad 20x1.2	1
3	90133034000	Arandela Caja	1
4	90633012000	Piñón de 2a.	1
5	90133001003	Buje Eje Clutch	1
6	J471020122	Pin de Seguridad 20x1.2	3
7	90133015000	Piñón de 5a.	1
8	90633033000	Arandela Caja	2
9	90133013000	Piñón de 3a.	1
10	90633001007	Arandela Caja	1
12	90133014000	Piñón de 4a.	1
13	90133016000	Piñón de 6a.	1
14	90133001009	Buje Piñón de 1a.	1
15	90133011000	Piñón de 1a.	1
16	90133038000	Arandela	1
17	90130004003	Rodamiento Bolas 15x35x11	1
20	J625062041	Rodamiento Bolas 6204Z/HN3	1
21	J770017515	Anillo Retenedor 17.5x1.5	1
22	90133029003	Buje Piñón Salida	1
23	J760253706	Retén Eje de Salida 25x37x6	1
24	J472037150	Pin de Seguridad 37x1.5	1
25	90133029014	Piñón Salida 14T	1
26	90133029001	Arandela Piñón Salida	1
27	J025060106	Tornillo M6x10	2
99	00050000944	Kit Reparación Eje Salida	x
		X: Según se Requiera	

FIGURA N° 9: EJE DE CAMBIOS (1/2)

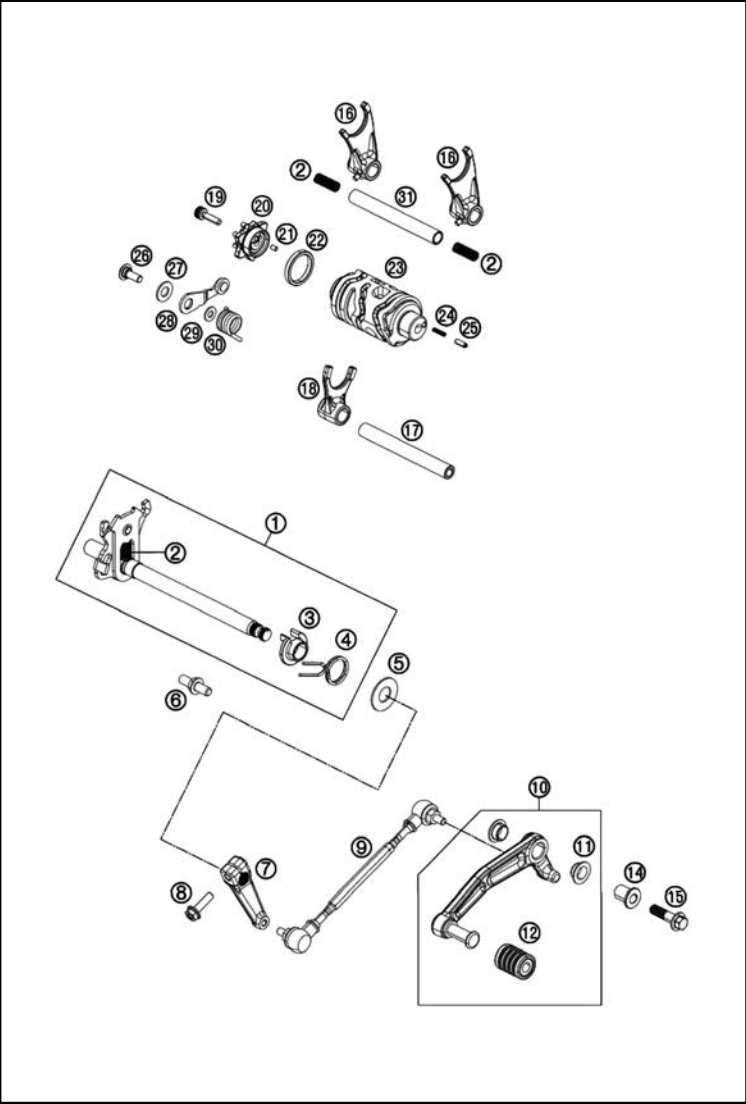


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90134005033	Eje Cambios	1
2	90134009000	Resorte Eje de Cambios	3
3	90134022000	Buje Eje Cambios	1
4	90134014000	Resorte Eje Cambios	1
5	90134050000	Arandela Pedal Cambios	1
6	90134016000	Guía Resorte	1
7	90634031010	Platina Pedal de Cambios	1
8	J025060223	Tornillo M6x22	1
9	90634040033	Posicionador de Cambios	1
10	90134031033	Pedal Cambios	1
11	90134036000	Buje Pedal Cambios	2
12	90134035000	Caucho Pedal Cambios	1
14	90134031003	Buje Pedal Cambios	1
15	J025080303S	Tornillo M8x30	1
16	90134002000	Horquilla Cambios	2
17	90134019000	Pasador Horquilla Cambios	1
18	90134001000	Horquilla Cambios	1
19	90134015003	Tornillo M6x20	1
20	90134015000	Arandela Eje Selector	1
21	90134013000	Pin Eje Selector	1
22	90134012002	Buje Eje Selector	1
23	90134012000	Eje Selector Cambios	1
24	90634012003	Resorte Eje Selector	1
25	90134012001	Tornillo Eje Selector	1
26	90134025000	Tornillo Leva Cambios	1

This exploded view diagram illustrates the assembly of a vehicle chassis component, likely a steering knuckle or suspension arm. The diagram shows the following parts and their assembly sequence:

- Top Section:** Components 16, 18, 31, 2, 23, 24, 25, 17, and 18 are shown at the top, including a long shaft (31) and various bushings and pins.
- Middle Section:** Components 19, 20, 21, 22, 26, 27, 28, 29, and 30 are shown in the middle, including a large bearing (20) and various small fasteners.
- Bottom Section:** Components 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, and 15 are shown at the bottom, including a large bracket (1), a long shaft (2), a steering knuckle (10), and various fasteners.

The diagram uses numbered callouts (1 through 31) to identify each individual part, showing their relative positions and how they fit together in the final assembly.



This diagram shows an exploded view of a mechanical assembly. On the left, a main assembly is shown with parts numbered 1 through 7. Part 1 is a central shaft or rod, 2 is a large circular component, 3 is a smaller circular component, 4 is a bolt, 5 is a nut, 6 is a washer, and 7 is a small pin. On the right, a separate component is shown, labeled 99, which is a large, irregularly shaped plate. This plate has a large circular opening in the center, labeled 2. To the right of the plate, a series of small components are shown, numbered 1 through 13, which appear to be a sequence of washers, spacers, and nuts used to secure the plate.



FIGURA N° 11: SISTEMA DE REFRIGERACIÓN (1/2)

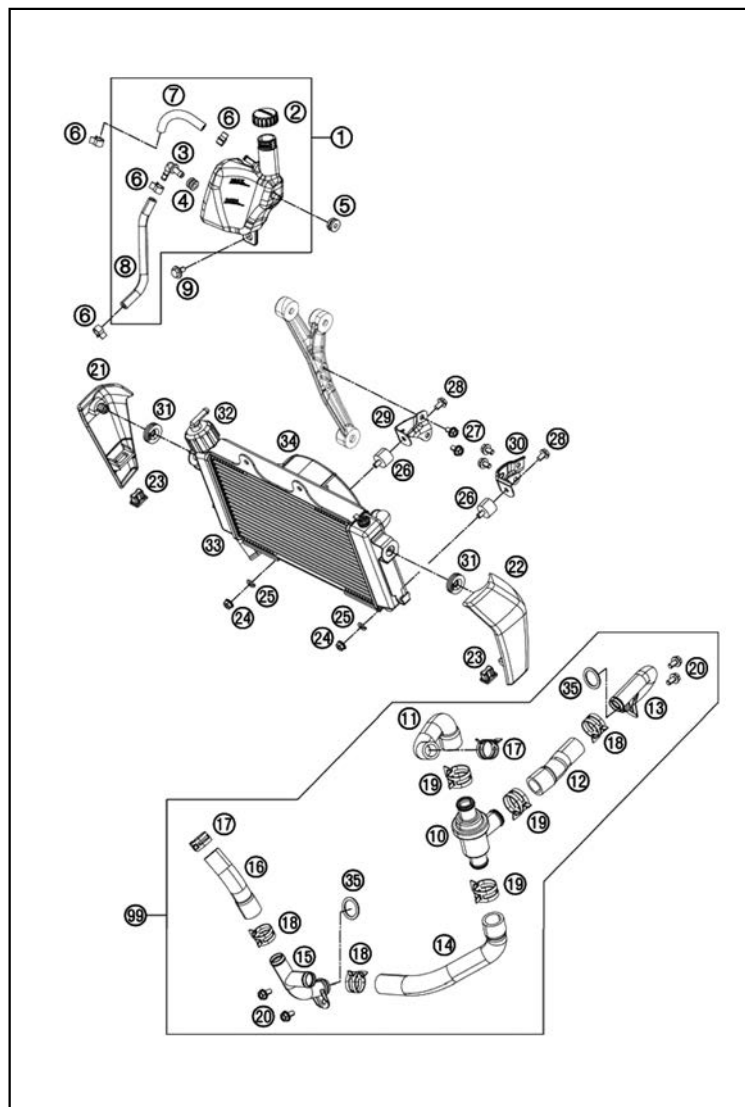


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90135065033	Tanque de Reserva	1
2	90135066000	Tapa Tanque Reserva	1
3	90135068000	Conector	1
4	90135069000	Antivibrante Tanque Reserva	1
5	90135065050	Antivibrante Tanque Reserva	1
6	90107018011	Abrazadera	4
7	90135067000	Manguera 6x10.5x80mm	1
8	90135067050	Manguera 6x10x154mm	1
9	90135074000	Tornillo M6x12	1
10	90135017000	Termostato	1
11	90135024020	Conector Termostato-Radiador	1
12	90135025000	Conector Termostato-Motor	1
13	90135090000	Manguera Radiador	1
14	90135024010	Conector Termostato-Manguera	1
15	90135026000	Manguera Radiador	1
16	90135024030	Manguera Radiador	1
17	90135020002	Abrazadera D24	2
18	90135020001	Abrazadera D26	3
19	90135020003	Abrazadera D28	3
20	J025060126	Tornillo Manguera Radiador M6x12	4
21	90108061000	Protector Radiador Derecho	1
22	90108060000	Protector Radiador Izquierdo	1
23	90108060002	Antivibrante Radiador	2
24	J926060000	Tuerca 6mm	4
25	J127060003	Arandela	4



FIGURA N° 12: VÁLVULAS (1/2)

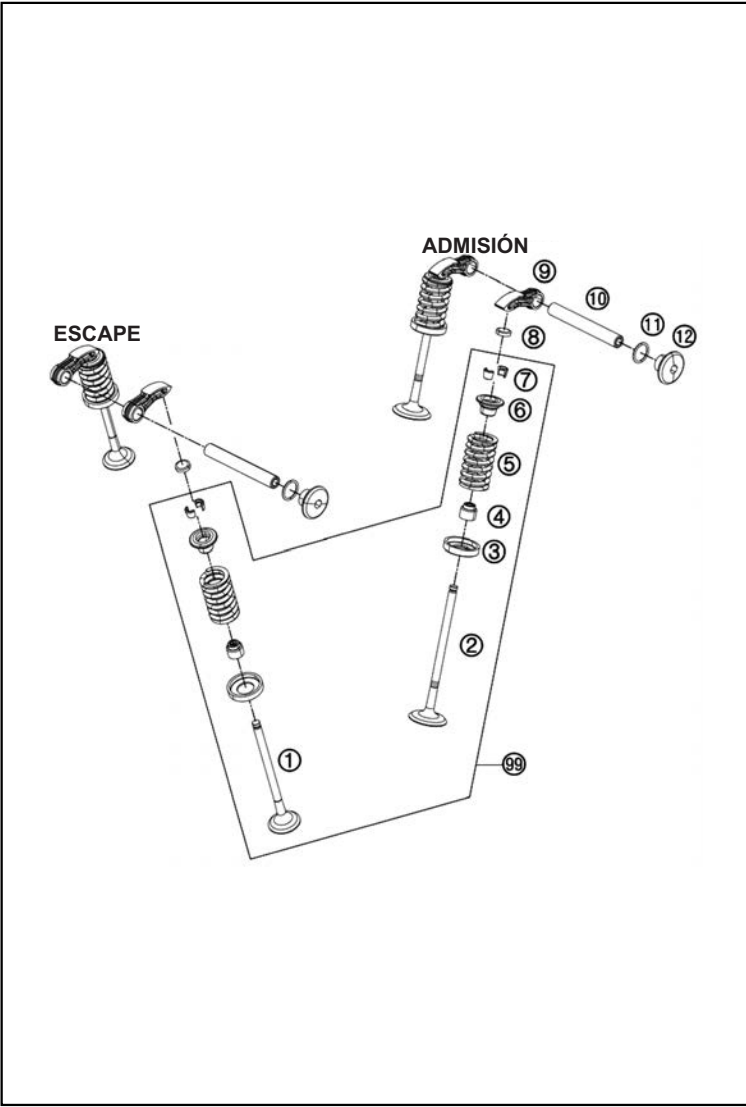


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.
1	90636031000	Válvula Escape	2
2	90636030000	Válvula Admisión	2
3	90136036000	Arandela Resorte Válvula	4
4	90136027000	Retén Válvula	4
5	90136028000	Resorte Válvula	4
6	90136032000	Arandela Resorte Válvula	4
7	90136033000	Cuña Válvula	8
8	90136035010	Kit Arandelas de Ajuste	x
	90136035200	Arandela Ajuste Válvula D=8.7/2.00	x
	90136035204	Arandela Ajuste Válvula D=8.7/2.04	x
	90136035208	Arandela Ajuste Válvula D=8.7/2.08	x
	90136035212	Arandela Ajuste Válvula D=8.7/2.12	x
	90136035216	Arandela Ajuste Válvula D=8.7/2.16	x
	90136035220	Arandela Ajuste Válvula D=8.7/2.20	x
	90136035224	Arandela Ajuste Válvula D=8.7/2.24	x
	90136035228	Arandela Ajuste Válvula D=8.7/2.28	x
	90136035232	Arandela Ajuste Válvula D=8.7/2.32	x
	90136035236	Arandela Ajuste Válvula D=8.7/2.36	x
	90136035240	Arandela Ajuste Válvula D=8.7/2.40	x
	90136035244	Arandela Ajuste Válvula D=8.7/2.44	x
	90136035248	Arandela Ajuste Válvula D=8.7/2.48	x
	90136035252	Arandela Ajuste Válvula D=8.7/2.52	x
	90136035256	Arandela Ajuste Válvula D=8.7/2.56	x
	90136035260	Arandela Ajuste Válvula D=8.7/2.60	x
	90136035264	Arandela Ajuste Válvula D=8.7/2.64	x
		X: Según se Requiera	

This diagram illustrates the assembly of a mechanical component, likely a valve train, showing two main sections: 'ESCAPE' (Exhaust) and 'ADMISIÓN' (Intake). The components are numbered 1 through 12, with a '99' label for the base plate.

- ESCAPE Section:** Shows the exhaust valve assembly. It includes a long stem (1), a circular disc (2), a spring (3), a small pin (4), a larger pin (5), a small pin (6), and a circular disc (7). A separate view shows the valve head (8) and its associated components (9, 10, 11, 12).
- ADMISIÓN Section:** Shows the intake valve assembly. It includes a long stem (1), a circular disc (2), a spring (3), a small pin (4), a larger pin (5), a small pin (6), and a circular disc (7). A separate view shows the valve head (8) and its associated components (9, 10, 11, 12).

The diagram is a technical exploded view showing the relationship between various parts of a mechanical assembly. The 'ESCAPE' and 'ADMISIÓN' labels indicate the exhaust and intake valves, respectively. The numbered parts (1-12) represent individual components like stems, discs, springs, and pins. The '99' label points to the main base plate.



Diagram illustrating the components of a timing belt assembly, numbered 1 through 17:

- 1**: Timing belt cover (top)
- 2**: Timing belt cover (bottom)
- 3**: Timing belt cover pin
- 4**: Timing belt cover gear
- 5**: Timing belt cover washer
- 6**: Timing belt cover seal
- 7**: Timing belt cover pin (top)
- 8**: Timing belt cover pin (bottom)
- 9**: Timing belt cover pin (left)
- 10**: Timing belt
- 11**: Timing belt guide
- 12**: Timing belt guide pin
- 13**: Timing belt guide pin (right)
- 14**: Timing belt guide pin (right)
- 15**: Timing belt guide pin (right)
- 16**: Timing belt guide pin (right)
- 17**: Timing belt guide pin (right)



FIGURA N° 14: CULATA

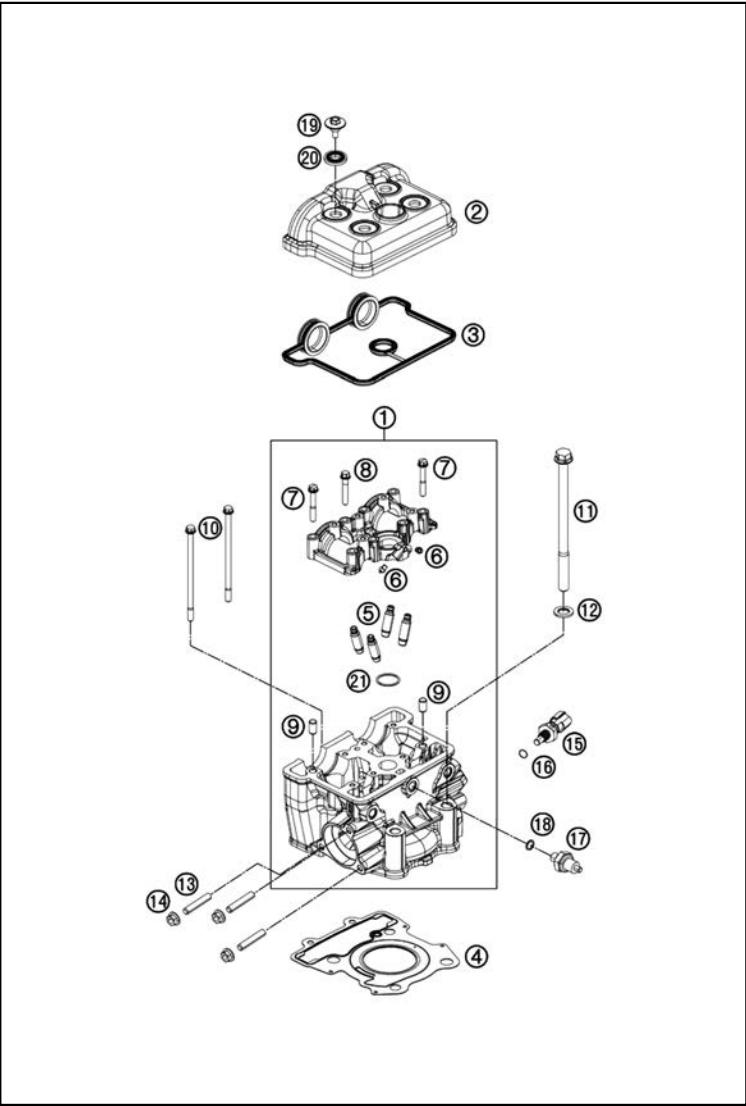


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90636020033	Culata	1
2	90136052000	Cubierta Culata	1
3	90136053000	Empaque Tapa Culata	1
4	90630036000	Empaque Culata	1
5	90136025000	Guía Válvula	4
6	90130064000	Boquerel Aceite	4
7	J025060402	Tornillo M6x40	2
8	J025060356	Tornillo M6x35	6
9	90130024000	Pin Guía 8x6.4x14mm	2
10	90136020005	Tornillo Culata M6	2
11	90136020003	Tornillos Culata 10x147.5	4
12	90130080000	Arandela	4
13	90136020001	Espárrago 8mm	3
14	90136038000	Tuerca 8mm	3
15	90135047000	Sensor de Temperatura	1
16	90135047001	Anillo Retenedor	1
17	90138091000	Sensor Presión Aceite	1
18	90138091001	Anillo Retenedor	1
19	90136052020	Tornillo Tapa Culata	4
20	90136052010	Sello Tapa Válvulas	4
21	J770023019	Anillo Retenedor 23.7x1.10	1

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The main assembly plate (1) features a central gear mechanism (3) and a mounting bracket (2). Various fasteners, including screws (14, 15, 16, 17) and a nut (99), are shown being installed into the plate. A cylindrical component (10) is shown being inserted into a slot on the plate, with a washer (11) and a nut (12) used to secure it. A small electrical connector (9) is also shown being attached to the side of the assembly.



FIGURA N° 16: SISTEMA DE ENCENDIDO

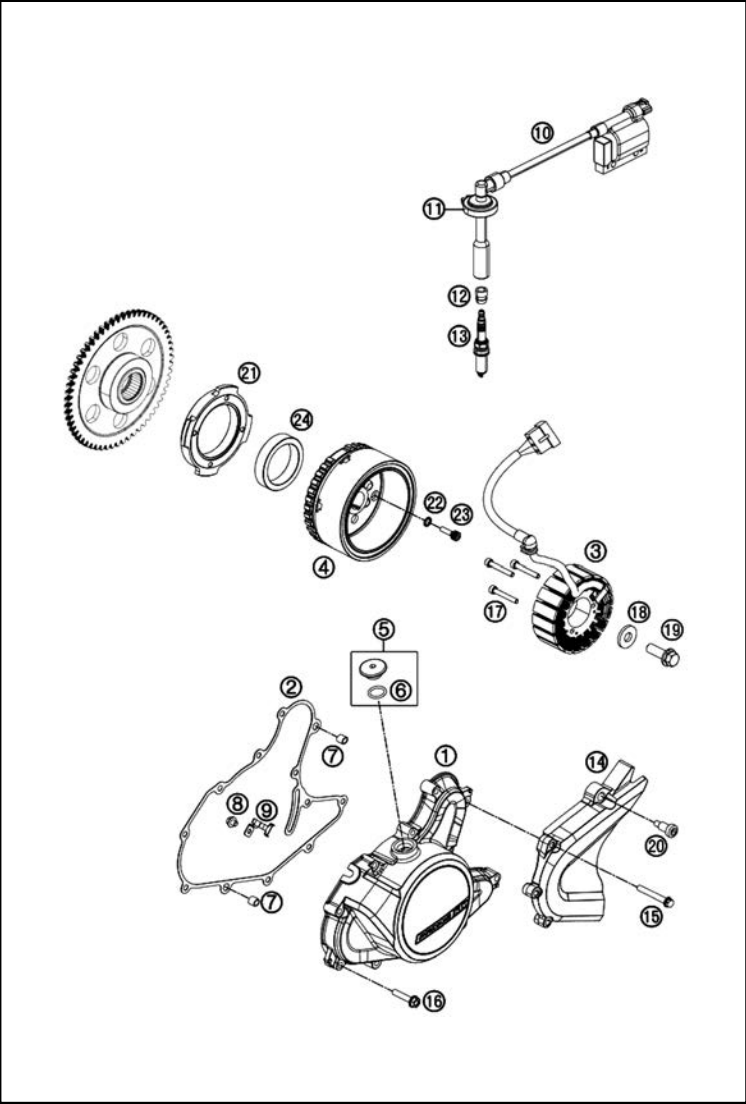


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90130002000	Cubierta Volante	1
2	90130040000	Empaque Tapa Volante	1
3	90139004000	Plato Bobinas	1
4	90639005000	Volante	1
5	90130002010	Tapón Cubierta Volante	1
6	J770015824	Anillo Retenedor 15.8x2.4	1
7	90130024000	Pin Guía 8x6.4x14mm	2
8	J025060083S	Tornillo M6x8	1
9	90139004002	Soporte Cable Plato Bobinas	1
10	90139090033	Bobina de Alta	1
11	90139090001	Empaque Capuchón Bujía	1
12	90139093001	Antivibrante Capuchón Bujía	1
13	90139093100	Bujía	1
14	90103096000	Guardacadena	1
15	J025060456	Tornillo M6x45	3
16	J025060306	Tornillo M6x30	9
17	J912050353S	Tornillo M5x35	3
18	90130028050	Arandela	1
19	90130028000	Tornillo 10x1.25x30	1
20	90104060050	Tornillo M6x24	1
21	90130001000	Soporte Piñón Libre de Clutch	1
22	90130001001	Tornillo Cilindro Volante M6x20	4
23	90130001002	Arandela	4
24	90140026000	Piñón Libre de Clutch	1

This diagram shows the exploded view of a motor assembly. The components are numbered as follows:

- 1**: The main motor housing.
- 2**: A small gear mounted on the motor's output shaft.
- 3**: A spacer ring that fits between the motor gear and the intermediate gear.
- 4**: An intermediate gear that meshes with both the motor gear and the output gear.
- 5**: A large output gear with eight mounting holes around its central hub.
- 6**: A small bush or sleeve that fits onto the shaft of the output gear.
- 7**: Two screws used to secure the output gear assembly.
- 8**: A flexible cable or hose attached to the side of the motor housing.







Exploded view diagram of a cable assembly. The components are numbered as follows:

- 1: Main cable assembly
- 2: Connector
- 3: Connector
- 4: Switch
- 5: Control unit
- 6: Handle
- 7: Handle
- 8: Cable
- 9: Cable
- 10: Probe
- 15: Sub-assembly
- 16: Cable

An inset shows a sub-assembly consisting of parts 15 and 16.



FIGURA N° 21: CHASIS (1/2)

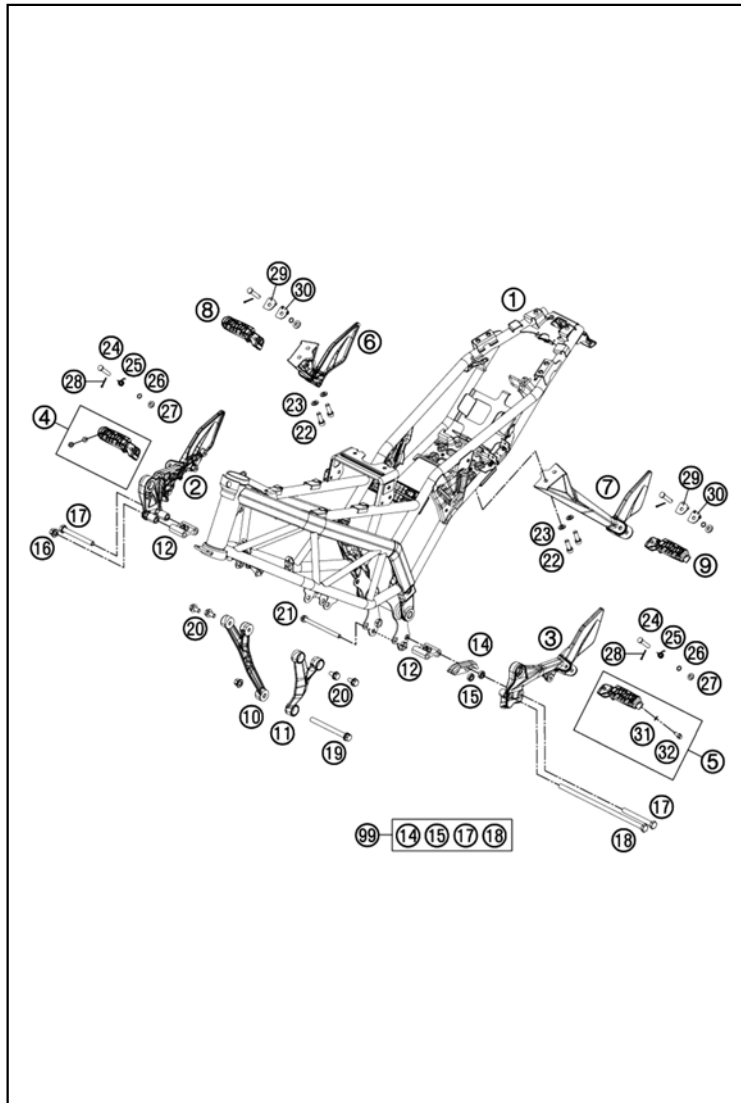


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90603001100	Chasis	1
2	90103039000	Soporte Reposapie Delantero Derecho	1
3	90103038000	Soporte Reposapie Delantero Izquierdo	1
4	90103041033	Reposapie Delantero Derecho	1
5	90103040033	Reposapie Delantero Izquierdo	1
6	90103049000	Soporte Reposapie Trasero Derecho	1
7	90103048000	Soporte Reposapie Trasero Izquierdo	1
8	90103051033	Reposapie Trasero Derecho	1
9	90103050033	Reposapie Trasero Izquierdo	1
10	90103006000	Soporte Motor Derecho	1
11	90103005000	Soporte Motor Izquierdo	1
12	90103038001	Tapón Soporte Reposapie	2
14	90104070000	Guía Cadena	1
15	90104066010	Espaciador Guía Cadena	2
16	90103038002	Tuerca 10mm	2
17	J025100926	Tornillo M10x1.25x92	2
18	J025102656	Tornillo M10x1.25x265	1
19	J025081103	Tornillo M10x110	1
20	J011080163	Tornillo M8x16	4
21	J027081053	Tornillo M8x105	1
22	J020080273	Tornillo M8x27	4
23	J125080003	Arandela	4
24	90103044000	Tornillo Reposapie	4
25	90103042000	Resorte Reposapie	2
26	J770009015	Anillo Retenedor 9x1.5	4

This diagram shows an exploded view of a mechanical assembly. The main frame is labeled 1. Various components are shown in their relative positions, indicated by dashed lines. The parts are numbered as follows:

- 1: Main frame
- 2: Upper bracket
- 3: Lower bracket
- 4: Component with pin 24
- 5: Component with pins 24, 25, 26, 27
- 6: Component with pin 23
- 7: Component with pin 23
- 8: Component with pin 29
- 9: Component with pin 29
- 10: Component with pin 20
- 11: Component with pin 20
- 12: Component with pin 17
- 13: Component with pin 17
- 14: Component with pin 15
- 15: Component with pin 15
- 16: Component with pin 17
- 17: Component with pin 17
- 18: Component with pin 17
- 19: Component with pin 19
- 20: Component with pin 20
- 21: Component with pin 21
- 22: Component with pin 22
- 23: Component with pin 23
- 24: Component with pin 24
- 25: Component with pin 25
- 26: Component with pin 26
- 27: Component with pin 27
- 28: Component with pin 28
- 29: Component with pin 29
- 30: Component with pin 30
- 31: Component with pin 31
- 32: Component with pin 32
- 99: Sub-assembly containing parts 14, 15, 17, and 18



This diagram illustrates the assembly of a cable system. The components are numbered as follows:


- 1**: A long, flexible cable with a connector at one end.
- 2**: A small, rectangular component, likely a connector or plug.
- 3**: A small, cylindrical component, possibly a pin or a small tube.
- 4**: A small, cylindrical component, possibly a pin or a small tube.
- 5**: A long, cylindrical component, possibly a tube or a cable.
- 6**: A small, cylindrical component, possibly a pin or a small tube.
- 7**: A small, cylindrical component, possibly a pin or a small tube.
- 8**: A small, cylindrical component, possibly a pin or a small tube.
- 9**: A small, cylindrical component, possibly a pin or a small tube.
- 10**: A small, rectangular component, likely a connector or plug.

The diagram shows the cable (1) connected to the connector (2). The connector (2) is then connected to the assembly of components 3, 4, 5, 6, 7, 8, and 9. The component (10) is shown separately, likely representing a final connection point or a separate part of the assembly.





FIGURA N° 24: AMORTIGUADOR

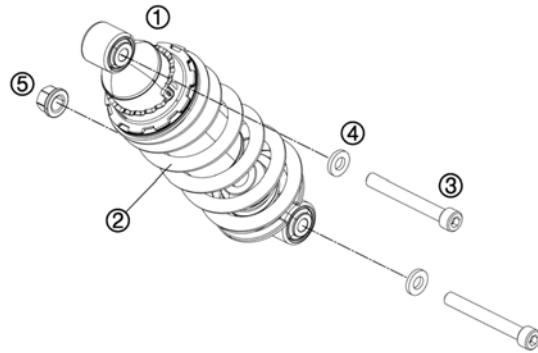[illegible]

This exploded view diagram illustrates the components of a vacuum cleaner motor assembly. The parts are numbered as follows:

- 1**: Main motor housing.
- 2**: Flexible extension tube.
- 3**: Motor head housing.
- 4**: O-ring for the extension tube.
- 5**: Power cord with a grounded plug.
- 6**: Motor shaft.
- 7**: Motor fan.
- 8**: Motor shaft.
- 9**: Motor fan.
- 10**: Motor shaft.
- 11**: Motor fan.
- 12**: Motor shaft.
- 13**: Motor head housing.
- 14**: Motor head housing.
- 15**: Motor head housing.
- 16**: Motor head housing.





This exploded view diagram illustrates the components of a washing machine pump assembly. The parts are numbered as follows:

- 1**: The main pump housing assembly, including the motor, impeller, and various internal seals and bearings.
- 2**: A large cylindrical component, likely a filter or a secondary pump housing, connected to the main assembly via a hose.
- 3**: A long, flexible hose that connects the main pump assembly to the cylindrical component.
- 4**: Two curved elbow connectors that join the hoses to the main pump assembly.
- 5**: A small, rectangular component, possibly a filter or a seal, located near the hose connection.
- 6**: Two small, rectangular components, likely filters or seals, located near the hose connection.
- 7**: A small, circular component, possibly a seal or a bearing.
- 8**: A small, cylindrical component, possibly a bearing or a seal.
- 9**: A small, rectangular component, possibly a filter or a seal, located near the hose connection.
- 10**: A large, oval-shaped component, likely a filter or a seal, located at the top of the assembly.



FIGURA N° 28: TANQUE DE GASOLINA - SILLIN (1/2)

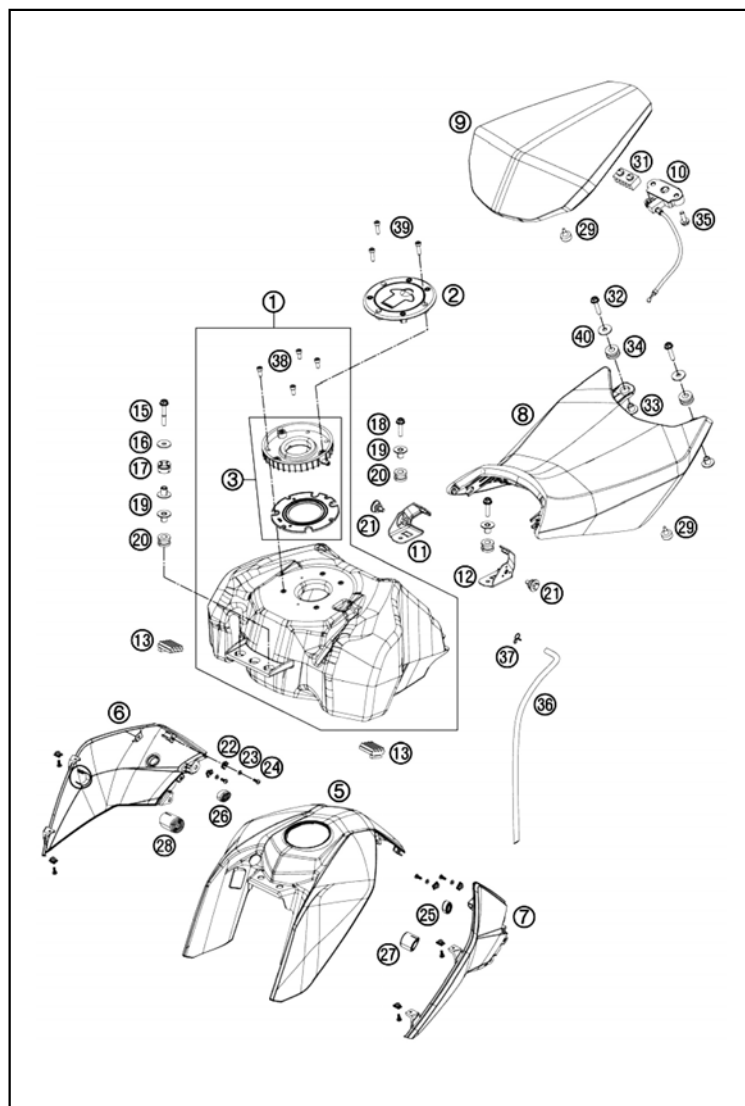


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90607013044	Tanque Gasolina	1
2	90607008000	Tapa Tanque	1
3	90607008044	Base y Empaque Tapa Tanque	1
5	9010804900004	Cubierta Tanque	1
6	9010805100047	Cubierta Tanque Gasolina Derecha	1
7	9010805000047	Cubierta Tanque Gasolina Izquierda	1
8	90107040000	Sillín	1
9	90107047000	Sillín Trasero	1
10	90107050000	Seguro Sillín	1
11	90107040020	Soporte Sillín Derecho	1
12	90107040010	Soporte Sillín Izquierdo	1
13	90107013003	Antivibrante Tanque Gasolina	2
15	J025060403	Tornillo M6x40	2
16	J126072220	Empaque	2
17	90107013004	Antivibrante Tanque Gasolina	2
18	J025060253	Tornillo M6x25	2
19	90107013005	Buje Tanque Gasolina	6
20	90107013006	Antivibrante Tanque Gasolina	4
21	90107040003	Tornillo	2
22	90108050001	Tuerca 5mm	8
23	J125050001	Empaque	4
24	J031050153	Tornillo M5x15	8
25	90107070000	Antivibrante Tanque Gasolina	1
26	90107071000	Antivibrante Tanque Gasolina	1
27	90107072000	Antivibrante Tanque Gasolina	1

This exploded view diagram illustrates the assembly of a motorcycle headlight. The components are numbered as follows:

- 1**: Main headlight housing assembly.
- 2**: Lens or cover plate.
- 3**: Internal mounting bracket or ring.
- 4**: Small fastener or pin.
- 5**: Side fairing or wing.
- 6**: Another side fairing or wing.
- 7**: Small side fairing or trim piece.
- 8**: Main headlight housing (alternative view).
- 9**: Lens or cover plate (alternative view).
- 10**: Mounting bracket.
- 11**: Small bracket or clip.
- 12**: Small bracket or clip.
- 13**: Small bracket or clip.
- 14**: Small bracket or clip.
- 15**: Small fastener or pin.
- 16**: Small fastener or pin.
- 17**: Small fastener or pin.
- 18**: Small fastener or pin.
- 19**: Small fastener or pin.
- 20**: Small fastener or pin.
- 21**: Small bracket or clip.
- 22**: Small fastener or pin.
- 23**: Small fastener or pin.
- 24**: Small fastener or pin.
- 25**: Small fastener or pin.
- 26**: Small fastener or pin.
- 27**: Small fastener or pin.
- 28**: Small fastener or pin.
- 29**: Small fastener or pin.
- 30**: Small fastener or pin.
- 31**: Small fastener or pin.
- 32**: Small fastener or pin.
- 33**: Small fastener or pin.
- 34**: Small fastener or pin.
- 35**: Small fastener or pin.
- 36**: Small fastener or pin.
- 37**: Small fastener or pin.
- 38**: Small fastener or pin.
- 39**: Small fastener or pin.
- 40**: Small fastener or pin.



FIGURA N° 29: GUARDABARROS - CUBIERTAS (1/2)

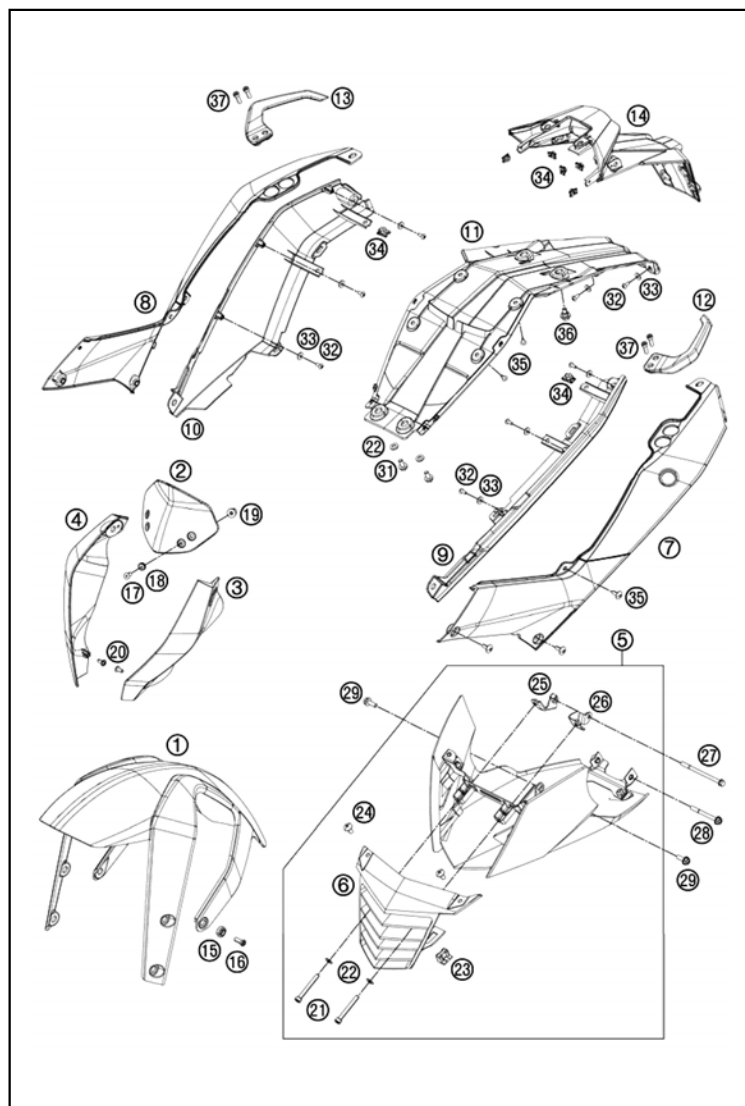


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	9010801000033	Guardabarro Delantero	1
2	90108008000	Visor Carenaje	1
3	9010800200004	Cubierta Izquierda Farola Naranja	1
4	9010800300004	Cubierta Derecha Farola Naranja	1
5	90608020044	Quilla Completa	1
6	90108021000	Cubierta Frontal	1
7	9010804100004	Cubierta Lateral Izquierda	1
8	9010804200004	Cubierta Lateral Derecha	1
9	90108043000	Cubierta Lateral Izquierda	1
10	90108044000	Cubierta Lateral Derecha	1
11	90108015010	Guardafango Trasero Interno	1
12	90112008033	Agarradera Pasajero Izquierda	1
13	90112009033	Agarradera Pasajero Derecha	1
14	90108015000	Guardafango Trasera	1
15	90108010050	Buje Guardafango Delantero	4
16	J912060163	Tornillo M6x16	4
17	J019050201	Tornillo M5x20	4
18	90108008050	Arandela	4
19	90108008060	Tuerca 5mm	4
20	J081050121	Tornillo Farola	2
21	J912060503	Tornillo M6x50	2
22	J125060003	Arandela	2
23	90108020001	Antivibrante Cubierta Frontal	2
24	90108020050	Tornillo	2
25	90108025000	Soporte Cubierta Frontal Derecha	1

This exploded view diagram illustrates the assembly of a vehicle's front end. The components are numbered as follows:

- 1**: Main front end structural frame.
- 2**: Small triangular plastic piece.
- 3**: Side fender panel.
- 4**: Side fender trim piece.
- 5**: Lower front bumper cover.
- 6**: Front grille assembly.
- 7**: Lower front bumper cover (alternative view).
- 8**: Side fender trim piece.
- 9**: Lower front bumper cover.
- 10**: Side fender trim piece.
- 11**: Main front end structural frame (alternative view).
- 12**: Side fender trim piece.
- 13**: Small plastic clip.
- 14**: Side fender trim piece.
- 15**: Small plastic clip.
- 16**: Small plastic clip.
- 17**: Small plastic clip.
- 18**: Small plastic clip.
- 19**: Small plastic clip.
- 20**: Small plastic clip.
- 21**: Bolt.
- 22**: Bolt.
- 23**: Bolt.
- 24**: Bolt.
- 25**: Bolt.
- 26**: Bolt.
- 27**: Bolt.
- 28**: Bolt.
- 29**: Bolt.
- 30**: Bolt.
- 31**: Bolt.
- 32**: Bolt.
- 33**: Bolt.
- 34**: Bolt.
- 35**: Bolt.
- 36**: Bolt.
- 37**: Bolt.



FIGURA N° 30: CALCOMANÍAS

[illegible]

This diagram shows the assembly of a wheel. The main wheel assembly is labeled 1. A separate hub component is labeled 2. A set of 12 valves is shown, with callouts 3, 4, 5, and 12 indicating different parts of the valve assembly. A long axle pin is labeled 6. A set of 99 valves is shown in a tray, with callouts 7, 8, and 99 indicating different parts of the valve assembly. A small circular component is labeled 10.



FIGURA N° 32: RUEDA TRASERA (1/2)

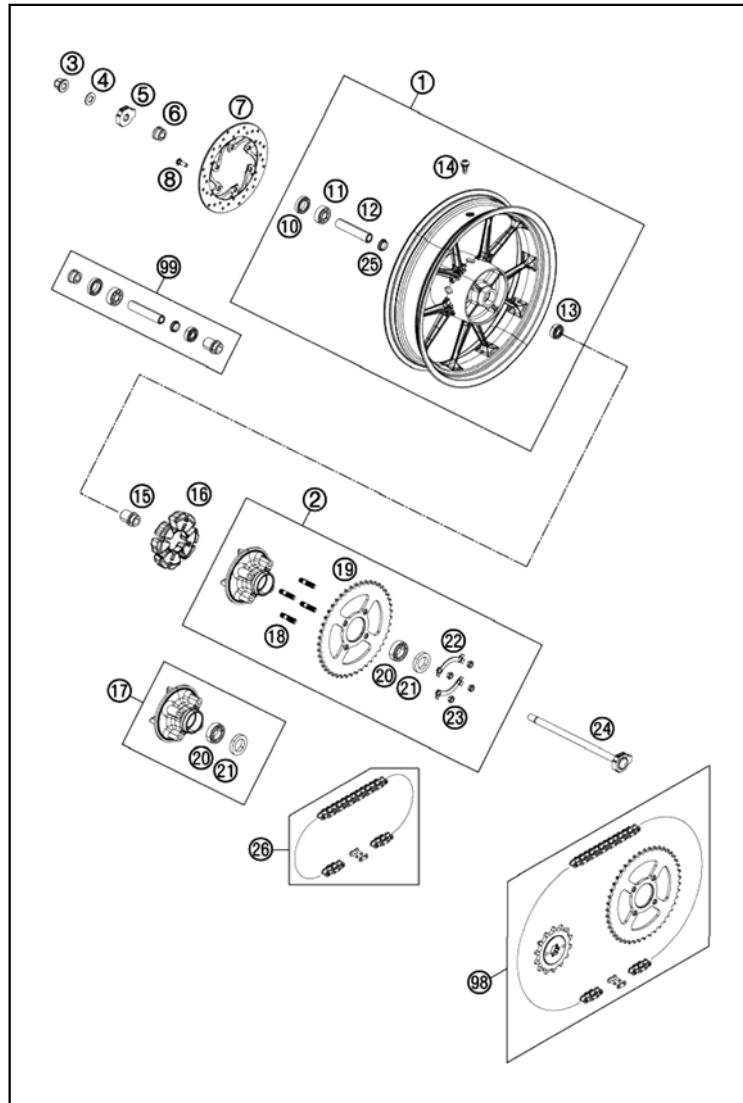


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.
1	90110001044	Rin Trasero 4.00x17	1
2	90610050033	Porta Sprocket Completo	1
3	90110086000	Buje Campana Trasero	1
4	90110087000	Arandela	1
5	90110084000	Tensor Cadena Derecho	1
6	90110013000	Buje Campana Trasero	1
7	90110060000	Disco Freno Trasero	1
8	90110062000	Tornillo Disco Freno Delantero	6
10	J760264208	Retén Campana Trasero	1
11	J625063020	Rodamiento Bolas 6302	1
12	90110011000	Buje Campana Trasera	1
13	J625062021	Rodamiento Bolas 6202	1
14	90109076000	Válvula Tubeless	1
15	90110054000	Buje Porta Sprocket	1
16	90110059000	Antivibrante Campana	1
17	90110050000	Antivibrante Campana Trasera	1
18	90110052050	Espárrago Sprocket	4
19	90610051043	Sprocket 43T	1
20	J625060050	Rodamiento Bolas 6005RS	1
21	J760304708	Retén Porta Sprocket	1
22	90110051002	Arandela	2
23	90110052000	Tornillo M10x1.25	4
24	90110085033	Eje Rueda Trasero	1
25	90109011001	Guardapolvo	1
26	78010167118	Cadena 118L	1

This exploded view diagram illustrates the assembly of a bicycle rear wheel. The components are numbered as follows:

- 1**: Rear wheel rim
- 2**: Rear hub
- 3**: Small pin
- 4**: Small pin
- 5**: Small pin
- 6**: Small pin
- 7**: Rear cassette body
- 8**: Small pin
- 9**: Small pin
- 10**: Small pin
- 11**: Small pin
- 12**: Small pin
- 13**: Small pin
- 14**: Rear cassette body
- 15**: Small pin
- 16**: Small pin
- 17**: Small pin
- 18**: Small pin
- 19**: Rear cassette body
- 20**: Small pin
- 21**: Small pin
- 22**: Small pin
- 23**: Small pin
- 24**: Rear axle
- 25**: Small pin
- 26**: Rear cassette body



This diagram illustrates the components of a vehicle wiring harness, numbered 1 through 24. The main harness (1) is shown with various connectors and wires. Other components include a horn (2), a fuse (3), a relay (4), a battery disconnect switch (5), a battery disconnect switch solenoid (6), a battery disconnect switch solenoid relay (7), a battery disconnect switch solenoid relay (8), a battery disconnect switch solenoid relay (9), a battery disconnect switch solenoid relay (10), a battery disconnect switch solenoid relay (11), a battery disconnect switch solenoid relay (12), a battery disconnect switch solenoid relay (13), a battery disconnect switch solenoid relay (14), a battery disconnect switch solenoid relay (15), a battery disconnect switch solenoid relay (16), a battery disconnect switch solenoid relay (17), a battery disconnect switch solenoid relay (18), a battery disconnect switch solenoid relay (19), a battery disconnect switch solenoid relay (20), a battery disconnect switch solenoid relay (21), a battery disconnect switch solenoid relay (22), and a battery disconnect switch solenoid relay (23).





FIGURA N° 35: BOMBA FRENO TRASERO

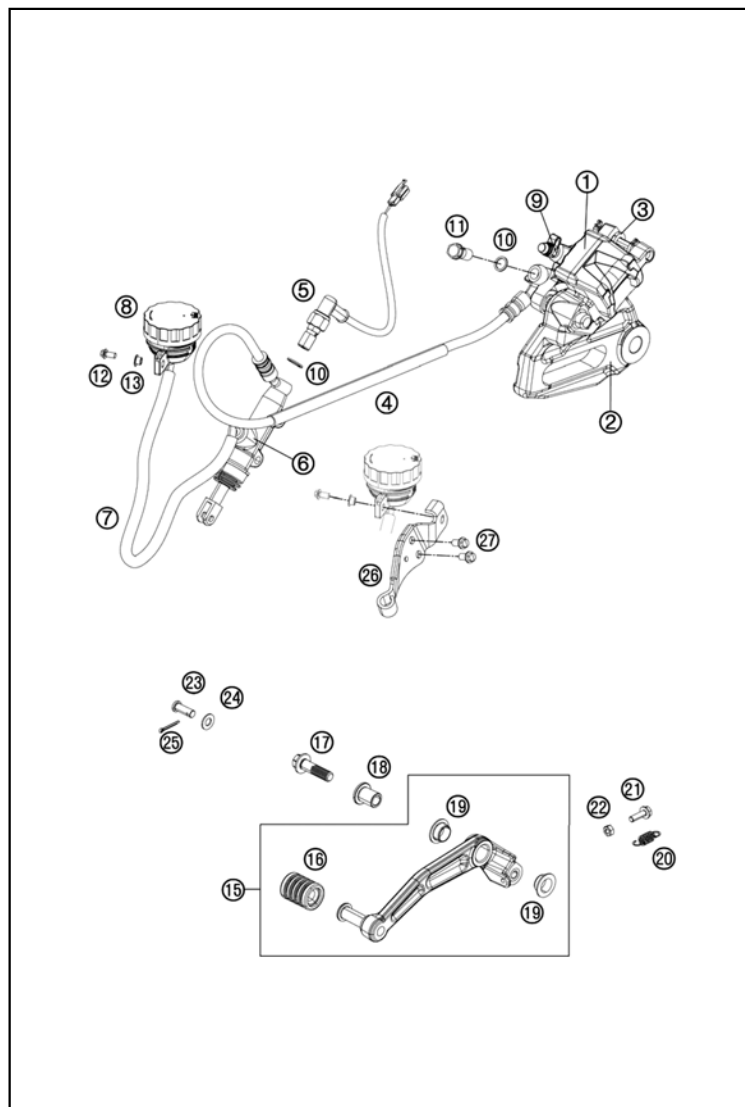


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90113080000	Caliper Trasero	1
2	90113075000	SopORTE Caliper	1
3	90113090000	Juego Pastas Freno Trasero	1
4	90113072000	Manguera Freno Trasero	1
5	90111051000	Swiche Stop	1
6	90113060000	Bomba Freno Trasero	1
7	90113069000	Manguera Freno	1
8	90113009000	Tanque Bomba Freno Trasero	1
9	90113121000	Tornillo de Sangrado	1
10	90113026000	Arandela	4
11	90113013000	Tornillo Manguera Freno	1
12	J025060163	Tornillo M6x16	1
13	90114060003	Buje	1
15	90113050033	Pedal Freno	1
16	90134035000	Caucho Pedal Freno	1
17	J025080303S	Tornillo M8x30	1
18	90134031003	Buje Pedal Freno	1
19	90134036000	Buje Pedal Freno	2
20	90113052000	Resorte Pedal Freno	1
21	J025060203	Tornillo M6x20	1
22	J934060003	Tuerca M6	1
23	90113057000	Pin Pedal Cambios	1
24	J125060003	Arandela	1
25	J094020153	Pin de Seguridad	1
26	90113068000	SopORTE Tanque Bomba Freno	1
27	J025060109	Tornillo M6x10	2

FIGURA N° 36: SISTEMA DE LUCES

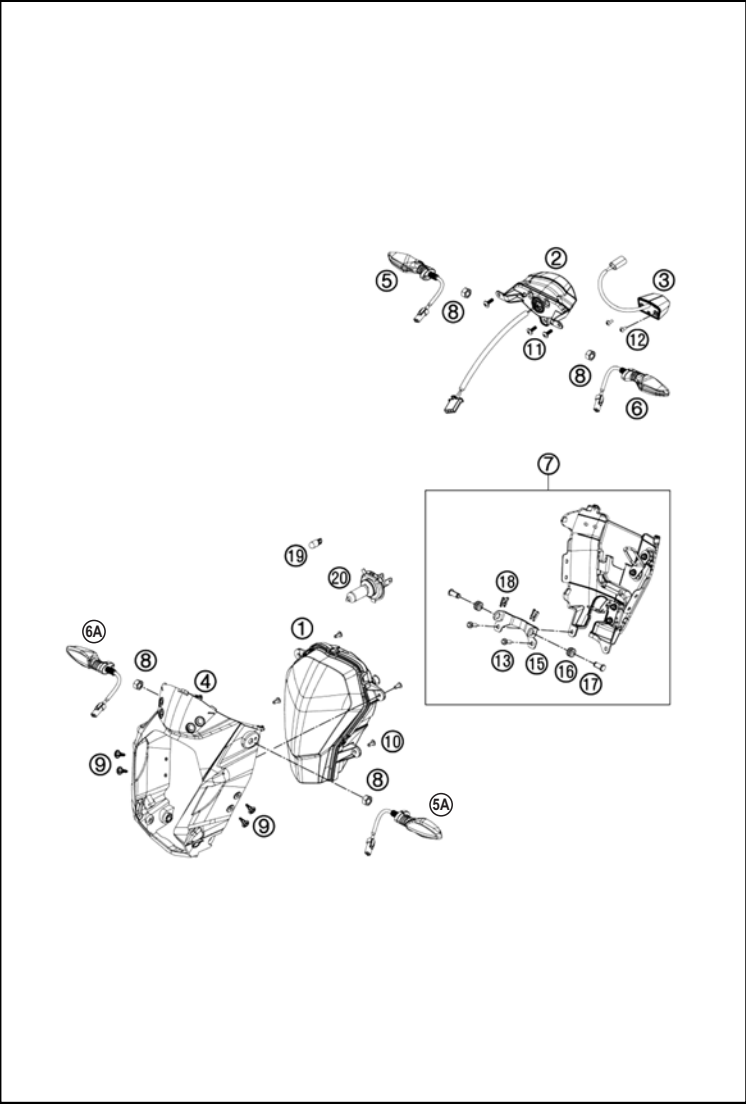


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.
1	90114001000	Farola Completo	1
2	90114040000	Stop	1
3	90114047000	Farola Luz Placa	1
4	90114062000	Carenaje Farola	1
5	90114025000	Direccional Trasera Derecha	1
5A	90114126000	Direccional Delantera Izquierda	1
6	90114026000	Direccional Trasera Izquierda	1
6A	90114125000	Direccional Delantera Derecha	1
7	90114064044	Cubierta Farola	1
8	90114030000	Tuerca	4
9	76503075100	Tornillo Soporte Farola	4
10	J081050121	Tornillo Farola	4
11	J031050153	Tornillo M5x15	3
12	J081040121	Tornillo M4x12	2
13	J025060163	Tornillo M6x16	2
15	90114064010	Soporte Cubierta Farola	1
16	90114064011	Antivibrante Cubierta Farola	2
17	J070080150	Tornillo Farola M8x1.5	2
18	90114064012	Pin Soporte Farola	2
19	49011435100	Bombillo 12V-5W	1
20	57111038000	Bombillo H4 12V- 60/55W	1

This diagram illustrates the exploded view of the front panel assembly for a microwave oven. The components are numbered as follows:

- 1**: Main front panel assembly with multiple control buttons.
- 2**: A long, thin rectangular component, likely a display or indicator light.
- 3**: A small rectangular component, possibly a switch or sensor.
- 4**: A small rectangular component, possibly a switch or sensor.
- 5**: A small rectangular component, possibly a switch or sensor.
- 6**: A small rectangular component, possibly a switch or sensor.
- 7**: A small rectangular component, possibly a switch or sensor.
- 8**: A small rectangular component, possibly a switch or sensor.
- 9**: A small rectangular component, possibly a switch or sensor.
- 10**: A small rectangular component, possibly a switch or sensor.
- 11**: A cable with a connector, likely for the display or indicator light.
- 12**: A cable with a connector, likely for the display or indicator light.
- 13**: A small rectangular component, possibly a switch or sensor.
- 14**: A small rectangular component, possibly a switch or sensor.
- 15**: A circular component, likely a turntable or a sensor.
- 16**: A small rectangular component, possibly a switch or sensor.
- 17**: A small rectangular component, possibly a switch or sensor.
- 18**: A small rectangular component, possibly a switch or sensor.
- 19**: A small rectangular component, possibly a switch or sensor.
- 20**: A small rectangular component, possibly a switch or sensor.



ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
00050000215	99	6
00050000944	99	9
00050002018	98	40
110/70R17-REVZ-FC-TL	13	38
150/60R17 REVZ-C-TL	27	40
43570204	20	23
43570623	19	23
43570624	18	23
49011435100	19	44
57111038000	20	44
75011088010	16	41
75011088015	17	41
75011088030	18	41
76503075100	9	44
78010167118	26	39
90101000010	98	23
90101000044	1	23
90101031001	9	23
90101032000	4	23
90101034035	3	23
90101036000	7	23
90101038000	11	23
90101039000	12	23
90101039010	99	23
90101040000	15	23
90101041000	16	23
90101042000	14	23
90101080044	5	23
90101086000	6	23
90101136000	8	23

PARTE No.	FIG. No.	PAG. No.
90102001000	1	24
90102010000	2	24
90102016000	10	24
90102021000	99	24
90102031000	15	24
90102039000	3	24
90102090000	9	24
90102091000	8	24
90102091050	14	41
90103005000	11	25
90103005001	30	14
90103006000	10	25
90103006001	29	14
90103023000	1	27
90103026000	2	27
90103027000	3	27
90103029000	4	27
90103038000	3	25
90103038001	12	25
90103038002	16	25
90103038002	10	30
90103039000	2	25
90103040001	31	26
90103040033	5	25
90103041033	4	25
90103042000	25	25
90103044000	24	25
90103048000	7	25
90103049000	6	25
90103050033	9	25

PARTE No.	FIG. No.	PAG. No.
90103051033	8	25
90103052000	29	26
90103053000	30	26
90103096000	14	20
90104010002	10	28
90104010002	5	29
90104010003	4	29
90104011000	2	29
90104030033	1	28
90104031000	16	28
90104032000	17	28
90104034000	15	28
90104034001	13	28
90104036000	14	28
90104037000	5	28
90104038000	6	28
90104040000	9	28
90104042000	11	28
90104046000	12	28
90104050000	3	28
90104060000	4	28
90104060001	20	28
90104060050	20	20
90104066000	2	28
90104066010	15	25
90104066110	99	28
90104067000	8	28
90104070000	14	25
90104070010	99	26
90104230010	98	28

PARTE No.	FIG. No.	PAG. No.
90105004000	4	30
90105005000	7	30
90105051000	6	30
90105068000	9	30
90105069000	16	30
90105084000	8	30
90105085000	13	30
90105090033	3	30
90106000001	8	31
90106000003	7	31
90106000004	10	31
90106002000	2	31
90106015000	5	31
90106027000	11	31
90106040000	3	31
90107013003	13	33
90107013004	17	33
90107013005	19	33
90107013006	20	33
90107013007	36	34
90107013008	37	34
90107018000	2	32
90107018010	3	32
90107018011	6	13
90107018011	6	32
90107018020	4	32
90107040000	8	33
90107040001	34	34
90107040002	33	34
90107040003	21	33

PARTE No.	FIG. No.	PAG. No.
90107040004	32	34
90107040010	12	33
90107040020	11	33
90107046000	29	34
90107046050	31	34
90107047000	9	33
90107050000	10	33
90107050050	16	45
90107050051	17	45
90107070000	25	33
90107071000	26	33
90107072000	27	33
90107073000	28	34
90107088000	1	32
90107088002	10	32
90107088050	7	32
9010800200004	3	35
9010800300004	4	35
90108008000	2	35
90108008050	18	35
90108008060	19	35
9010801000033	1	35
90108010050	15	35
90108015000	14	35
90108015010	11	35
90108015050	36	36
90108020001	23	35
90108020050	24	35
90108021000	6	35
90108025000	25	35

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
90108026000	26	36
9010804100004	7	35
9010804200004	8	35
90108043000	9	35
90108044000	10	35
9010804900004	5	33
90108050001	22	33
90108050001	34	36
9010805000047	7	33
9010805100047	6	33
90108060000	22	13
90108060001	31	14
90108060002	23	13
90108061000	21	13
90109001044	1	38
90109011000	5	38
90109011001	12	38
90109011001	25	39
90109012000	7	38
90109015000	99	38
90109060000	2	38
90109062000	10	38
90109076000	11	38
90109076000	14	39
90109081000	6	38
90109082000	8	38
90110001044	1	39
90110011000	12	39
90110013000	6	39
90110015000	99	40

PARTE No.	FIG. No.	PAG. No.
90110050000	17	39
90110051002	22	39
90110052000	23	39
90110052050	18	39
90110054000	15	39
90110059000	16	39
90110060000	7	39
90110062000	8	39
90110084000	5	39
90110085033	24	39
90110086000	3	39
90110087000	4	39
90111023000	30	2
90111034000	11	41
90111034010	12	41
90111035000	5	41
90111045000	9	27
90111045010	10	27
90111049000	16	24
90111050000	12	42
90111050050	13	42
90111051000	5	43
90111054000	24	41
90111058000	23	41
90111059000	8	21
90111059000	22	41
90111060000	2	41
90111066000	13	45
90111066044	20	45
90111070000	5	24

PARTE No.	FIG. No.	PAG. No.
90111074000	4	24
90111197000	15	41
90112008033	12	35
90112009033	13	35
90112040000	7	24
90112041000	6	24
90113001044	1	42
90113002000	2	42
90113009000	8	43
90113012000	3	42
90113013000	10	42
90113013000	11	43
90113015000	4	42
90113017000	7	42
90113018000	8	42
90113021000	6	42
90113026000	9	42
90113026000	10	43
90113030000	5	42
90113047000	18	28
90113050033	15	43
90113052000	20	43
90113057000	23	43
90113060000	6	43
90113068000	26	43
90113069000	7	43
90113072000	4	43
90113075000	2	43
90113080000	1	43
90113090000	3	43

PARTE No.	FIG. No.	PAG. No.
90113121000	9	43
90114001000	1	44
90114025000	5	44
90114026000	6	44
90114030000	8	44
90114040000	2	44
90114047000	3	44
90114060000	2	45
90114060002	9	45
90114060003	13	43
90114060050	5	45
90114062000	4	44
90114063000	3	45
90114063050	4	45
90114064010	15	44
90114064011	16	44
90114064012	18	44
90114064013	6	45
90114064044	7	44
90114068000	11	45
90114068001	12	45
90114069000	1	45
90114125000	6A	44
90114126000	5A	44
90130000144	1	1
90130001000	21	20
90130001001	22	20
90130001002	23	20
90130002000	1	20
90130002010	5	20

PARTE No.	FIG. No.	PAG. No.
90130003004	21	1
90130003005	26	2
90130003006	28	2
90130003007	23	1
90130003007	3	5
90130004002	4	1
90130004002	5	8
90130004003	8	1
90130004003	17	9
90130004004	10	1
90130004007	12	17
90130018003	8	6
90130018006	3	6
90130018007	4	6
90130018008	5	6
90130020000	8	3
90130022000	2	1
90130024000	17	3
90130024000	9	18
90130024000	9	19
90130024000	7	20
90130026002	15	3
90130026044	1	3
90130027000	2	3
90130028000	7	6
90130028000	19	20
90130028050	6	6
90130028050	18	20
90130029050	11	6
90130029050	15	7

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
90130035000	2	5
90130040000	2	20
90130047000	24	1
90130055000	3	4
90130055001	4	4
90130055004	7	4
90130055004	9	12
90130055006	8	4
90130055006	8	12
90130057050	5	4
90130058000	22	1
90130059000	10	4
90130064000	18	3
90130064000	6	18
90130078000	11	1
90130078001	12	1
90130078001	16	3
90130079000	14	1
90130080000	12	18
90130082000	13	1
90130082000	2	6
90130087000	6	31
90130087001	9	31
90130095000	11	3
90130095001	10	3
90130164000	16	1
90132001001	13	7
90132003000	2	7
90132006000	12	7
90132010000	4	7

PARTE No.	FIG. No.	PAG. No.
90132011000	5	7
90132019000	16	7
90132020000	3	7
90132024000	9	6
90132034000	8	7
90132035000	9	7
90132048004	4	3
90132048005	5	3
90132048033	3	3
90132050000	7	3
90132051000	6	3
90132054000	13	3
90132095000	14	7
90132111000	6	7
90132211000	7	7
90133001003	9	8
90133001003	5	9
90133001009	14	9
90133001011	3	8
90133003000	12	8
90133005000	14	8
90133006000	8	8
90133011000	15	9
90133013000	9	9
90133014000	12	9
90133015000	7	9
90133016000	13	9
90133029001	26	9
90133029003	22	9
90133029014	25	9

PARTE No.	FIG. No.	PAG. No.
90133032000	7	8
90133034000	3	9
90133038000	16	9
90134001000	18	10
90134002000	16	10
90134005033	1	10
90134009000	2	10
90134012000	23	10
90134012001	25	10
90134012002	22	10
90134013000	21	10
90134013000	5	12
90134014000	4	10
90134015000	20	10
90134015003	19	10
90134016000	6	10
90134019000	17	10
90134022000	3	10
90134023000	30	11
90134024033	28	11
90134025000	26	10
90134027000	14	3
90134030000	27	11
90134031003	14	10
90134031003	18	43
90134031033	10	10
90134035000	12	10
90134035000	16	43
90134036000	11	10
90134036000	19	43

PARTE No.	FIG. No.	PAG. No.
90134039000	29	11
90134050000	5	10
90134190000	31	11
90135001001	26	14
90135001001	12	31
90135010000	33	14
90135016000	32	14
90135017000	10	13
90135017010	99	14
90135020001	18	13
90135020002	17	13
90135020003	19	13
90135024010	14	13
90135024020	11	13
90135024030	16	13
90135025000	12	13
90135026000	15	13
90135041033	34	14
90135047000	15	18
90135047001	16	18
90135052000	1	12
90135053000	2	12
90135055000	3	12
90135055010	99	12
90135058000	9	4
90135058000	13	12
90135065033	1	13
90135065050	5	13
90135066000	2	13
90135067000	7	13

PARTE No.	FIG. No.	PAG. No.
90135067050	8	13
90135068000	3	13
90135069000	4	13
90135074000	9	13
90135090000	13	13
90136001000	9	17
90136002000	11	17
90136003000	15	17
90136003002	17	17
90136003003	13	17
90136009001	6	17
90136009002	5	17
90136009003	4	17
90136009004	3	17
90136013000	10	17
90136014017	10	6
90136018000	7	17
90136020001	13	18
90136020003	11	18
90136020005	10	18
90136025000	5	18
90136027000	4	15
90136028000	5	15
90136032000	6	15
90136033000	7	15
90136035010	8	15
90136035200	8	15
90136035204	8	15
90136035208	8	15
90136035212	8	15

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
90136035216	8	15
90136035220	8	15
90136035224	8	15
90136035228	8	15
90136035232	8	15
90136035236	8	15
90136035240	8	15
90136035244	8	15
90136035248	8	15
90136035252	8	15
90136035256	8	15
90136035260	8	15
90136035264	8	15
90136035268	8	16
90136035272	8	16
90136035276	8	16
90136035280	8	16
90136035284	8	16
90136035288	8	16
90136035292	8	16
90136035296	8	16
90136035300	8	16
90136035304	8	16
90136036000	3	15
90136038000	14	18
90136052000	2	18
90136052010	20	18
90136052020	19	18
90136053000	3	18
90136056000	10	16

PARTE No.	FIG. No.	PAG. No.
90136056001	12	16
90136060000	9	16
90138001000	3	19
90138001001	4	19
90138002044	2	19
90138007033	1	19
90138010001	6	19
90138010002	7	19
90138010003	5	19
90138015000	17	19
90138015010	99	19
90138015033	10	19
90138015050	12	19
90138015052	13	19
90138015060	15	19
90138091000	17	18
90138091001	18	18
90139004000	3	20
90139004002	9	20
90139090001	11	20
90139090033	10	20
90139093001	12	20
90139093100	13	20
90140001000	1	21
90140020002	31	2
90140022000	4	21
90140023033	2	21
90140023045	3	21
90140023060	3	21
90140023075	3	21

PARTE No.	FIG. No.	PAG. No.
90140023090	3	21
90140026000	24	20
90141002006	15	22
90141023001	3	22
90141023002	6	22
90141023003	7	22
90141023004	4	22
90141023005	5	22
90141029000	11	22
90141070000	19	22
90141070001	20	22
90141071000	21	22
90141071001	22	22
90141072000	17	22
90141072001	18	22
90141088000	7	41
90141088050	8	41
90141090000	5	30
90603001100	1	25
90603024000	5	27
90604010000	1	29
90605007033	2	30
90605083000	1	30
90606001044	1	31
90607008000	2	33
90607008000	15	45
90607008044	3	33
90607013044	1	33
90608020044	5	35
90608099000	1	37

PARTE No.	FIG. No.	PAG. No.
90610050033	2	39
90610051043	19	39
90611053000	20	41
90611057000	6	41
90611075000	1	41
90611097000	21	41
90611157000	19	41
90630007000	20	6
90630015000	15	6
90630015001	16	6
90630015002	17	6
90630015010	18	6
90630015011	18	6
90630015012	18	6
90630018000	1	6
90630030010	21	6
90630033000	24	6
90630036000	4	18
90630038000	1	5
90630039000	37	2
90630042000	35	2
90630057100	1	4
90630074000	25	6
90632001044	1	7
90632002000	10	7
90632005000	11	7
90632011010	99	7
90633001000	1	8
90633001004	16	8
90633001007	10	9

PARTE No.	FIG. No.	PAG. No.
90633002000	15	8
90633010000	1	9
90633012000	4	9
90633033000	10	8
90633033000	8	9
90634012003	24	10
90634031010	7	10
90634040033	9	10
90636009033	1	17
90636010033	2	17
90636020033	1	18
90636030000	2	15
90636030010	99	16
90636031000	1	15
90639005000	4	20
90640020000	5	21
90641001044	1	22
90641002000	16	22
90641002010	23	22
90641023000	2	22
J005040081	12	22
J005050106S	27	2
J005060123	25	1
J005060123	4	8
J005160123	5	1
J01008050S	11	42
J011050133	6	27
J011050133	19	28
J011050133	10	41
J011080163	20	25

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
J012100253S	8	27
J019050201	17	35
J020080273	2	23
J020080273	22	25
J020080273	37	36
J020100806	3	29
J021040003	33	36
J021060156	8	45
J022100643	13	23
J025050123	8	32
J025050163	29	2
J025050166	14	19
J025050503	21	28
J025060066	7	12
J025060083	7	28
J025060083S	8	20
J025060086	13	31
J025060103	27	14
J025060103	9	41
J025060106	27	9
J025060109	27	43
J025060123	15	31
J025060126	20	13
J025060143	8	17
J025060143	31	36
J025060146	14	30
J025060163	12	43
J025060163	13	44
J025060163	14	45
J025060183	29	36

PARTE No.	FIG. No.	PAG. No.
J025060203	35	34
J025060203	21	43
J025060206	4	12
J025060206	16	17
J025060223	8	10
J025060253	18	33
J025060253	13	41
J025060256	7	21
J025060256	15	30
J025060306	12	3
J025060306	16	20
J025060356	8	18
J025060402	7	18
J025060403	15	33
J025060406	34	2
J025060456	15	20
J025060603	28	36
J025060606	33	2
J025080203	4	41
J025080303S	15	10
J025080303S	17	43
J025081103	19	25
J025100926	17	25
J025102656	18	25
J026060083	28	14
J026060903	27	36
J027050063	13	22
J027081053	21	25
J027081103	11	30
J028060163	32	2

PARTE No.	FIG. No.	PAG. No.
J028060303S	8	19
J029060103S	32	26
J031050153	24	33
J031050153	11	44
J031050163	35	36
J070080150	17	44
J080414107	12	6
J081040121	32	36
J081040121	12	44
J081050121	20	35
J081050121	10	44
J081050121	7	45
J094018250	28	26
J094020153	25	43
J125050001	23	33
J125060003	22	35
J125060003	24	43
J125080003	23	25
J125080003	3	41
J125080004	27	26
J126072220	16	33
J126072220	40	34
J127060003	25	13
J471020121	2	9
J471020122	11	8
J471020122	6	9
J472025120	7	1
J472025120	11	12
J472037150	19	1
J472037150	24	9

PARTE No.	FIG. No.	PAG No.
J603061001	6	12
J618131912	9	1
J618131912	20	1
J618152114	15	1
J618152114	17	8
J618253216	6	21
J625060050	20	39
J625062021	4	38
J625062021	13	39
J625062030	2	4
J625062040	3	1
J625062040	6	8
J625062041	17	1
J625062041	20	9
J625063020	11	39
J760122455	6	1
J760122455	12	12
J760223508	3	38
J760253706	18	1
J760253706	23	9
J760264208	10	39
J760304708	21	39
J770007075	6	4
J770007075	10	12
J770009015	26	25
J770010015	14	17
J770010312	11	16
J770013824	9	3
J770015824	6	20
J770017515	21	9

[illegible]

FICHA TÉCNICA KTM 200 DUKE

CARACTERÍSTICA

UNIDAD

Motor :	4T, monocilíndrico, refrigerado por líquido
Diámetro x Carrera :	72.00mm x 49.00mm
Desplazamiento :	200 cc
Índice de compresión :	11.5 : 1
Potencia máxima :	25.5 HP @ 10000 rpm
Torque máximo :	19.5 Nm @ 8000 rpm
Sistema de ignición :	ECU
Bujía :	BOSCH VR 5 NE
Tolerancia de la bujía :	0.8 mm
Lubricación :	Bomba húmeda de aceite, forzada.
Arranque :	Eléctrico.
Transmisión :	6 velocidades.
Freno delantero :	Disco hidráulico.
Freno trasero :	Disco hidráulico.

CAPACIDAD DEL TANQUE

Lleno :	10.5 litros
Reserva :	1.5 litros

DIMENSIONES

Largo x Ancho x Alto :	1970 mm x 740 mm x 1274 mm
Distancia entre ejes :	1361 mm
Angulo de la direccion :	65°
Altura al piso :	170 mm (Min.)
Llantas Delantera :	110/70 x 17, M/C 54S TL tubeless
Trasera :	150/60 x 17, M/C 66S TL tubeless
Presión de aire Delantera :	29 PSI
Trasera (Solo) :	29 PSI
Trasera (Con Parrillero) :	32 PSI
Sistema Eléctrico :	12 Volts DC
Faro delantero :	H4 60/55 W
Luz de día :	5 W
Luz de Stop :	LED/LED
Luces direccionales :	LED
Indicadores del tablero :	LED
Velocímetro :	Display digital
Pito :	12 V DC
Batería :	12V - 8 Ah
Peso en seco :	125 kg.

DUKE 200





Línea Gratuita Nacional

01 8000 52 00 90

servicioalcliente@auteco.com.co

www.auteco.com.co

Medellín: 604 2511 • Bogotá: 744 8911

Cali: 487 9911 • Barranquilla: 386 0011