



PARTS CATALOGUE

RX100 (36L) OLD EDITION

RX100 (36L0) REVISED EDITION

RX100 (36L2) REVISED EDITION

RX100 (36L4) REVISED EDITION

RX100C (5RA1) REVISED EDITION

RX100/RX100C
PARTS CATALOGUE
©2001 by Yamaha Motor Co., Ltd.
1st Edition, Apr. 2001
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan

RX100/RX100C
CATALOGO DE REPUESTOS
©2001, Yamaha Motor Co., Ltd.
1ª edición, Abril. 2001
Reservados todos los derechos.
Se prohíbe expresamente toda reimpresión
o utilización no autorizada de este manual
sin el consentimiento por escrito de
Yamaha Motor Co., Ltd.
Impreso en Japón

FOREWORD

This Parts Catalogue is related to the parts for the model(s) in the below frame. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

RX100(36L/36L0/36L2/36L4),RX100C(5RA1)

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.
It is advisable that you make necessary corrections to the Parts Catalogue according to the Yamaha Parts News.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

“UR” Use specified parts number.

“UN” Use as many as needed.

“AP” Alternate Parts

“LM” Local Made (Parts need to be ordered locally)

“F#” Frame No. (Applicable machine No.)

3. Parts, which are to be supplied in an assembly, are listed with a dot(.) in front of the part name as shown below.

EXAMPLE

CARBURETOR ASSY

.JET, PILOT

.NOZZLE, MAIN

4. Number of component for assembly

The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

EXAMPLE



PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5-83310-60	FRONT FLASHER LIGHT ASSY	2	
115-83311-60	.BULB (6V-18W)	1	

5. Applicable colors of graphics are represented in the “REMARKS” as shown below.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4-24110-00-X5	FUEL TANK COMP.	1	MXR
3J1-24240-10	.GRAPHIC, FUEL TANK	1	FOR MXR

6. Applicable Serial No. and Color Code

Frame Serial No.
Engine Serial No.

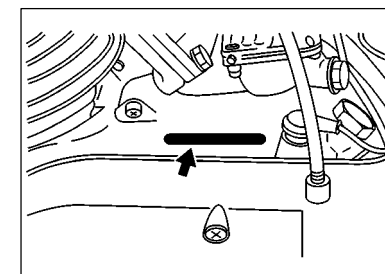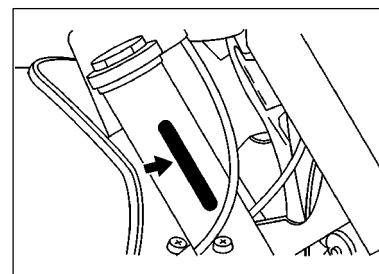

Model Code	Color Code	Color Name	Abbreviation
36L 36L0	00U8	MAXI MAROON	MM
	00H9	BLACK GOLD	BG
	009V	ADRIATIC CANDY BLUE	ACB
5RD1 5RD2	00H9	BLACK GOLD	BG
	009V	ADRIATIC CANDY BLUE	ACB
	0035	SILVER	SL
5RC1	0580	VIVID RED COCKTAIL 7	VRC7
	009V	ADRIATIC CANDY BLUE	ACB
	0036	WHITE	WW

7. Note that the illustration for reference in finding parts numbers, not to be used for assembling. When assembling, please use the applicable service manual.
8. The asterisk (*) before a reference number indicates modification items after the first edition.

PROLOGO

Este Catálogo de Repuestos corresponde a las piezas para el(los) modelo(s) del recuadro siguiente. Al formular el pedido de repuestos, se ruega citar este Catálogo de Repuestos y especificar correctamente los números de parte y los nombres de parte.

RX100(36L/36L0/36L2/36L4),RX100C(5RA1)

- Las modificaciones y agregados que se hayan realizado después de la edición de este Catálogo de Repuestos, serán anunciados en las Informaciones de Recambios Yamaha.
- Abreviaciones
En este. Catálogo de Repuestos se emplean las siguientes abreviaciones.
“UR” Usar el número de partes especificado
“UN” Usar la cantidad necesaria
“AP” Piezas sustitutivas
“LM” Fabricación local (Partes necesarias que se pedirán localmente)
“F#” No. de bastidor aplicable
- Las piezas suministradas como conjunto se describen con un punto (.) que precede al nombre de la pieza como se indica a continuación.

EJEMPLO

CONJUNTO CARBURADOR

.INYECTOR, piloto

.BOQUILLA, principal

- Cantidad de componentes de un conjunto
La numeración que aparece a la derecha de cada descripción, indica la cantidad de piezas por cada unidad de conjunto.

EJEMPLO

PIEZAS NO.	DESCRIPCION	CANT.	OBSERVACION
2F5-83310-60	ENSAMBLAJE DE LA LUZ	2	
115-83311-60	.BOMBILLA (6V-1 8W)	1	
1M1-83309-60	.REFLECTOR	1	



- Los colores de los componentes se indican como sigue en la columna de“OBSERVACIONES”.

EJEMPLO

PIEZAS NO.	DESCRIPCION	CANT.	OBSERVACION
2N4-24110-00-X5	COMP. DEL TANQUE	1	MXR
3J1-24240-10	.GRAFICO, DEL TANQUE	1	PARA MXR

- Números de Serie y Códigos de Color aplicables


No. de Serie del motor.
No. de Serie del bastidor

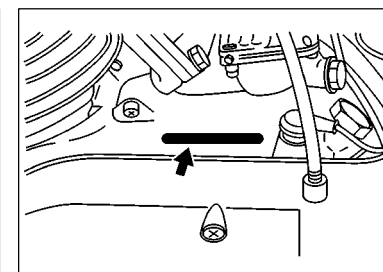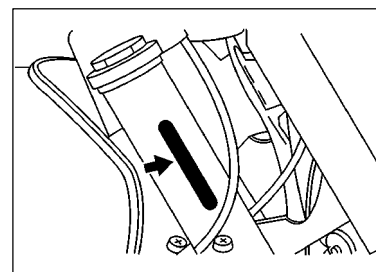

- Debe tenerse en cuenta que las ilustraciones sirven como guía para la búsqueda de las referencias y no deben usarse para el montaje. Durante el montaje, se recomienda usar el manual de Taller correspondiente.
- EL asterisco (*)antes del número de referencia indica los elementos modificados después de la primera edición.

Código de Color

Código de Modelo	Código de Color	Nombre del Color	Abreviación
36L 36L0	00U8	MAXI MAROON	MM
	00H9	BLACK GOLD	BG
	009V	ADRIATIC CANDY BLUE	ACB
5RD1 5RD2	00H9	BLACK GOLD	BG
	009V	ADRIATIC CANDY BLUE	ACB
	0035	SILVER	SL
	0580	VIVID RED COCKTAIL 7	VRC7
5RC1	009V	ADRIATIC CANDY BLUE	ACB
	0580	VIVID RED COCKTAIL 7	VRC7
	0360	WHITE	WW

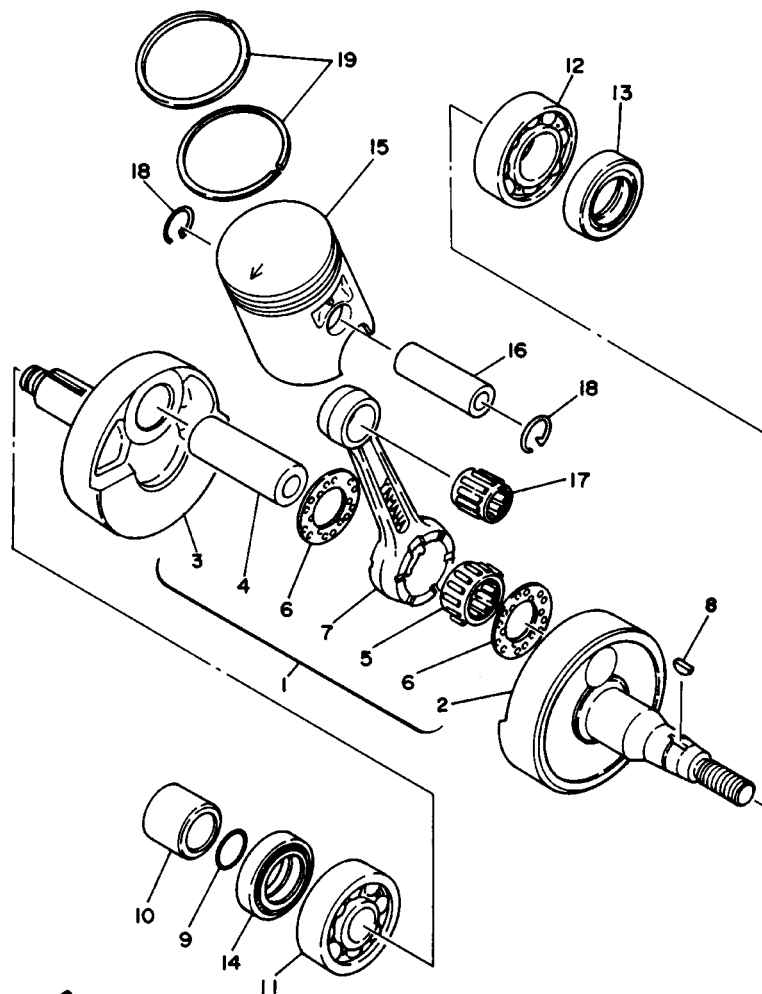


58X440-5020

FIG. 2 CRANKSHAFT. PISTON

CIGUENAL. PISTON

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E1400-00	CRANKSHAFT ASSY CIGUENAL COMPLETO	1	1	1	1	1	
2	36L-E1412-00	.CRANK 1 .MANIVELA 1	1	1	1	1	1	
3	36L-E1422-00	.CRANK 2 .MANIVELA 2	1	1	1	1	1	
4	36L-E1681-00	.PIN, CRANK 1 .PASADOR MANIVELA 1	1	1	1	1	1	
5	93310-422L0	.BEARING .COJINETE	1	1	1			
	93310-422Y1	.BEARING .COJINETE				1	1	
6	90209-22248	.WASHER .ARANDELA	2	2	2			
	90209-22071	.WASHER .ARANDELA				2	2	
7	36L-E1651-00	.ROD, CONNECTING .BIELA	1	1	1	1	1	
8	90280-03017	KEY, WOODRUFF CHAVETA WOODRUFF	1	1	1	1	1	
9	93210-18023	O-RING ANILLO O	1	1	1	1	1	
10	90387-205E9	COLLAR COLLAR	1	1	1	1	1	
11	93306-304Y2	BEARING COJINETE	1	1	1	1	1	
12	93306-205Y0	BEARING COJINETE	1	1	1	1	1	
13	93102-25807	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
14	93103-28800	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
15	36L-E1631-00	PISTON (STD) PISTON (STD)	1	1	1	1	1	
	36L-E1635-00	PISTON (0.25MM O/S) PISTON (0.25MM O/S)	1	1	1	1	1	AP
	36L-E1636-00	PISTON (0.50MM O/S) PISTON (0.50MM O/S)	1	1	1	1	1	AP
	36L-E1637-00	PISTON (0.75MM O/S) PISTON (0.75MM O/S)	1	1	1	1	1	AP
	36L-E1638-00	PISTON (1.00MM O/S) PISTON (1.00MM O/S)	1	1	1	1	1	AP
16	36L-E1633-00	PIN, PISTON PASADOR PISTON	1	1	1	1	1	
17	93310-21403	BEARING COJINETE	1	1	1			
	93310-214Y2	BEARING COJINETE				1	1	
18	93450-15090	CIRCLIP PRESILLA (ND)	2	2	2	2	2	
19	36L-E1603-00	PISTON RING SET (STD) JUEGO DE ANILLOS (STD)	1	1	1	1	1	
	36L-E1604-00	PISTON RING SET (0.25MM O/S) JUEGO DE ANILLOS (0.25MM O/S)	1	1	1	1	1	AP

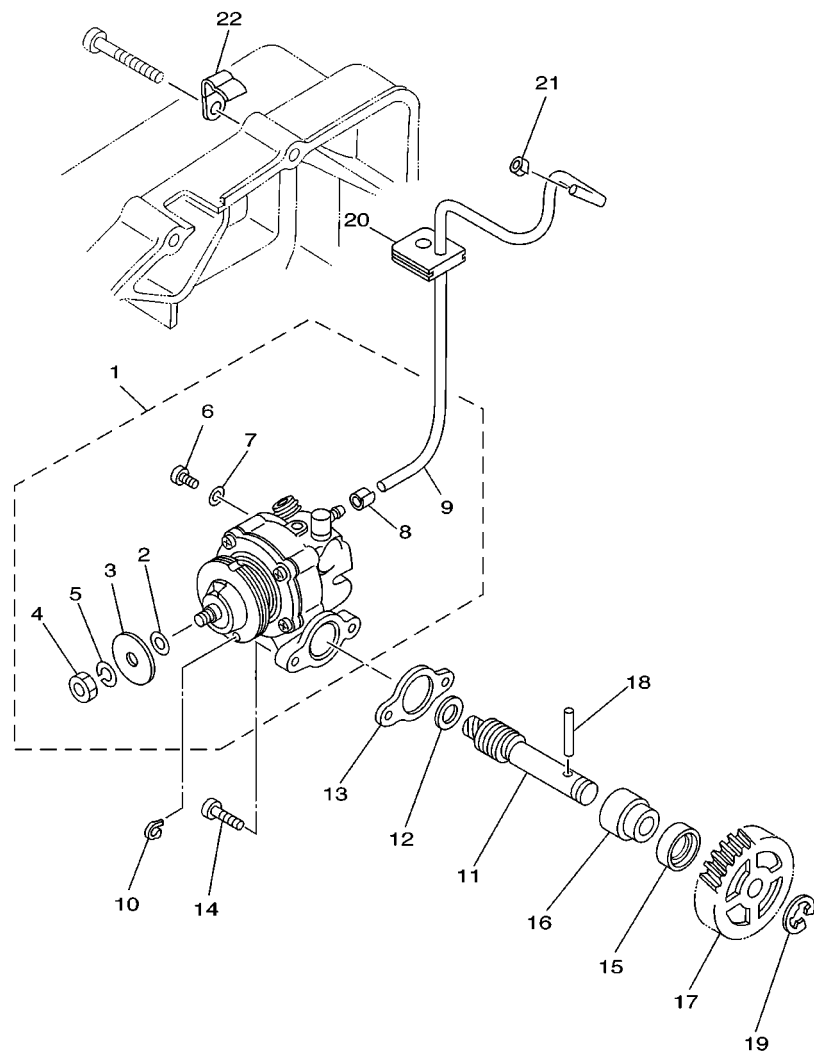


36L0470-4031

FIG. 3 OIL PUMP

BOMBA DE ACEITE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E3100-00	OIL PUMP ASSY BOMBA DE ACEITE COMPLETA	1	1	1	1	1	
2	36L-E3137-00-03	.SHIM, PLUNGER .CUNA EMBOLO	1	1	1	1	1	UR
	36L-E3137-00-05	.SHIM, PLUNGER .CUNA EMBOLO	1	1	1	1	1	UR
	36L-E3137-00-10	.SHIM, PLUNGER .CUNA EMBOLO	1	1	1	1	1	UR
3	36L-E3138-00	.PLATE, ADJUSTING .PLACA AJUSTADOR.(N.D)	1	1	1	1	1	
4	95380-05600	.NUT .TUERCA	1	1	1			
	95307-05600	.NUT .TUERCA				1	1	
5	92990-05100	.WASHER, SPRING .ARANDELA DE RESORTE	1	1	1			
	92907-05100	.WASHER, SPRING .ARANDELA DE RESORTE				1	1	
6	98980-04008	.SCREW, BIND .TORNILLO DE LIGAR	1	1	1			
	98907-04008	.SCREW, BIND .TORNILLO DE LIGAR				1	1	
7	90430-04004	.GASKET .EMPAQUE	1	1	1	1	1	
8	90468-02033	.CLIP .GRAMPA		1	1	1	1	
9	90445-05203	.HOSE (L330) .TUBO (L330)		1	1	1		
	90445-05266	.HOSE (L290) .TUBO (L290)				1	1	
10	36L-E3146-00	COVER, ADJUST PULLEY COBIERTA DE POLEA DE AJUSTE	1	1	1	1	1	
11	36L-E3175-01	SHAFT, WORM EJE DE SINFIN	1	1	1	1	1	
12	90201-08624	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
13	36L-E3116-00	GASKET, PUMP CASE EMPAQUE CAJA DE BOMBA	1	1	1	1	1	
14	98580-05014	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2	2	2			
	98507-05014	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				2	2	
15	93101-10806	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
16	36L-E3176-00	METAL, WORM SHAFT OUTER METAL EXT.DE EJE DE SINFIN	1	1	1	1	1	
17	36L-E3178-00	GEAR, PUMP DRIVE ENGRANAJE TRACC.DE BOMBA	1	1	1	1	1	
18	93603-22805	PIN, DOWEL PASADOR, DE ESPIGA	1	1	1	1	1	
19	93430-08810	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
20	36L-E3174-00	HOLDER, OIL PIPE SOSTEN TUBO DE ACEITE	1	1	1	1	1	

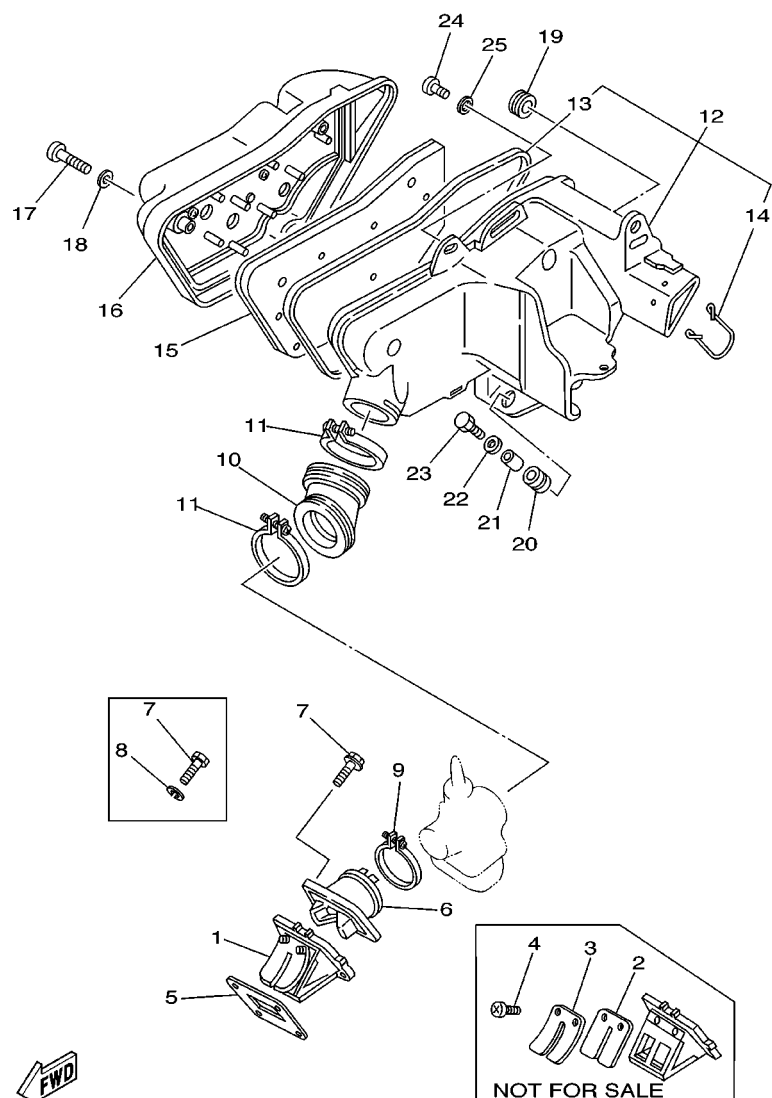

5RA1200-0041

FIG. 4 INTAKE

ADMISION

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E3610-00	REED VALVE ASSY VALVULA DE LENGUETA COMPLETA	1	1	1	1	1	
2	36L-E3613-00	.REED, VALVE .VALVULA DE LENGUETA	2					NOT FOR SALE
3	36L-E3616-00	.STOPPER, REED VALVE .TOPE DE VALVULA DE LENGUETA	2					NOT FOR SALE
4	98507-03008	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	4					NOT FOR SALE
5	36L-E3621-00	GASKET, VALVE SEAT EMPAQUE	1	1	1	1	1	
6	36L-E3565-00	JOINT, CARBURETOR UNION DE CARBURADOR	1	1	1	1	1	
7	97017-06025	BOLT PERNO	4					
	97507-06525	BOLT,WITH WASHER PERNO CON ARANDELA RONEDELLE		4	4	4	4	
8	92907-06600	WASHER, PLATE ARANDELA DE PLACA	4					
9	90460-43053	CLAMP, HOSE GRAMPA DE MANGUERA	1	1	1	1	1	
10	36L-E4453-00	JOINT, AIR CLEANER 1 UNION DE FILTRO DE AIRE	1	1	1	1	1	
11	90460-49058	CLAMP, HOSE GRAMPA DE MANGUERA	2					
	90460-51059	CLAMP, HOSE GRAMPA DE MANGUERA		2	2	2	2	
12	36L-E4401-10	AIR CLEANER CASE ASSY CAJA DE FILTRO DE AIRE COMPL.	1					
	36L-E4401-00	AIR CLEANER CASE ASSY CAJA DE FILTRO DE AIRE COMPL.		1	1	1	1	
13	36L-E4476-00	.SEAL .SELLO	1	1	1	1	1	
14	36L-E4424-00	.CLIP, CAP FITTING .PRESILLA ACCESORIO DE TAPA	1	1	1	1	1	
15	36L-E4451-00	ELEMENT, AIR CLEANER ELEMENTO DE FILTRO DE AIRE	1	1	1	1	1	
16	36L-E4402-00	CAP ASSY, AIR CLEANER TAPA COMPLETO FILTRO DE AIRE	1	1	1	1	1	
17	98507-06040	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	3	3	3	3	3	
18	92907-06200	WASHER ARANDELA	3	3	3	3	3	
19	90480-12053	GROMMET ANILLO PROTECTOR	1	1	1	1	1	
20	90480-14023	GROMMET ANILLO PROTECTOR	1	1	1			
	90480-14102	GROMMET ANILLO PROTECTOR				1	1	
21	90387-07390	COLLAR COLLAR	1	1	1	1	1	
22	90201-065F3	WASHER, PLATE ARANDELA DE PLACA	1					
	90201-06557	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	


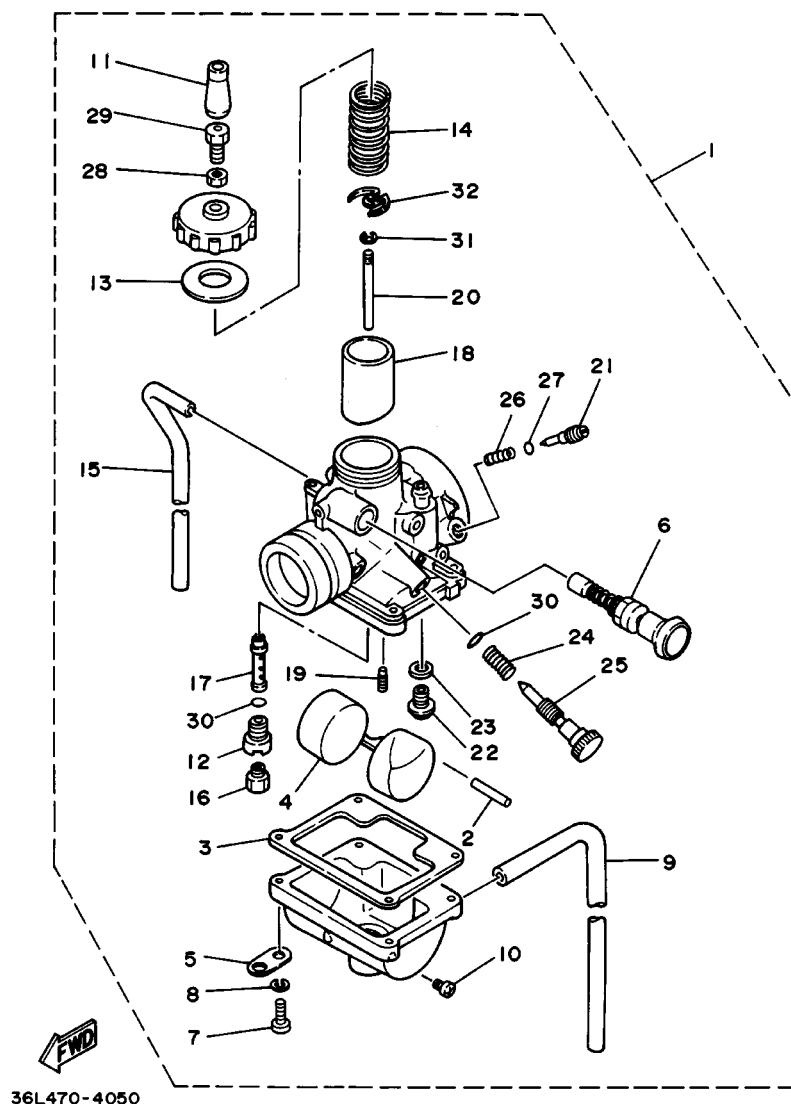


FIG. 5 CARBURETOR

CARBURADOR

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E4101-00	CARBURETOR ASSY 1 CARBURADOR COMPLETO 1	1	1	1	1	1	
2	36L-E4186-00	.PIN, FLOAT .PASADOR DE BOIA	1	1	1	1	1	
3	36L-E4184-00	.GASKET, FLOAT CHAMBER .EMPAQUE DE CAMARA DE BOIA	1	1	1	1	1	
4	36L-E4185-00	.FLOAT .FLOTADOR	1	1	1	1	1	
5	36L-E4146-00	.PLATE .PLACA	1	1	1	1	1	
6	36L-E4171-00	.PLUNGER, STARTER .EMBOLO DE ARRANQUE	1	1	1	1	1	
7	98511-04016	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	4					
	98517-04016	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		4	4	4	4	
8	92990-04100	.WASHER, SPRING .ARANDELA DE RESORTE	4	4	4	4	4	
9	36L-E4196-00	.PIPE .TUBO	1	1	1	1	1	
10	36L-E4191-00	.PLUG, DRAIN .TAPON DE LLAVE DE VACIADO	1	1	1	1	1	
11	36L-E4169-00	.CAP .FUNDA	1	1	1	1	1	
12	36L-E4145-00	.SETTER, NEEDLE JET .ESPREA	1	1	1	1	1	
13	36L-E4126-00	.GASKET .EMPAQUE	1	1	1	1	1	
14	36L-E4131-00	.SPRING, THROTTLE VALVE .RESORTE VALVULA DE ACELERACION	1	1	1	1	1	
15	36L-E4197-00	.PIPE .TUBO	1	1	1	1	1	
16	36L-E4143-23	.JET, MAIN (#115) .SURTIADOR, PRINCIPAL (#115)	1	1	1	1	1	
17	36L-E4141-28	.NOZZLE, MAIN .BOQUILLA PRINCIPAL	1	1	1	1	1	
18	36L-E4112-20	.VALVE, THROTTLE 1 .VALVULA DE ACELERACION 1	1	1	1	1	1	
19	36L-E4142-20	.JET, PILOT (#20) .SURTIADOR, PRINCIPAL (#20)	1	1	1			
	36L-E4142-00	.JET, PILOT (#20) .SURTIADOR, PRINCIPAL (#20)				1	1	
20	36L-E4116-02	.NEEDLE .AGUJA	1	1	1	1	1	
21	36L-E4123-00	.SCREW, AIR ADJUSTING .TORNILLO DE AJUSTE DE AIRE	1	1	1	1	1	
22	36L-E4190-20	.NEEDLE VALVE ASSY .VALVULA DE AGUJA COMPLETA	1	1	1	1	1	
23	36L-E4195-00	.WASHER, NEEDLE VALVE .ARANDELA DE VALVULA DE AGUJA	1	1	1	1	1	
24	36L-E4133-00	.SPRING, THROTTLE STOP .RESORTE TOPE DE ACELERACION	1	1	1	1	1	
25	36L-E4122-00	.SCREW, THROTTLE .TORNILLO DE OBTURACION	1	1	1	1	1	

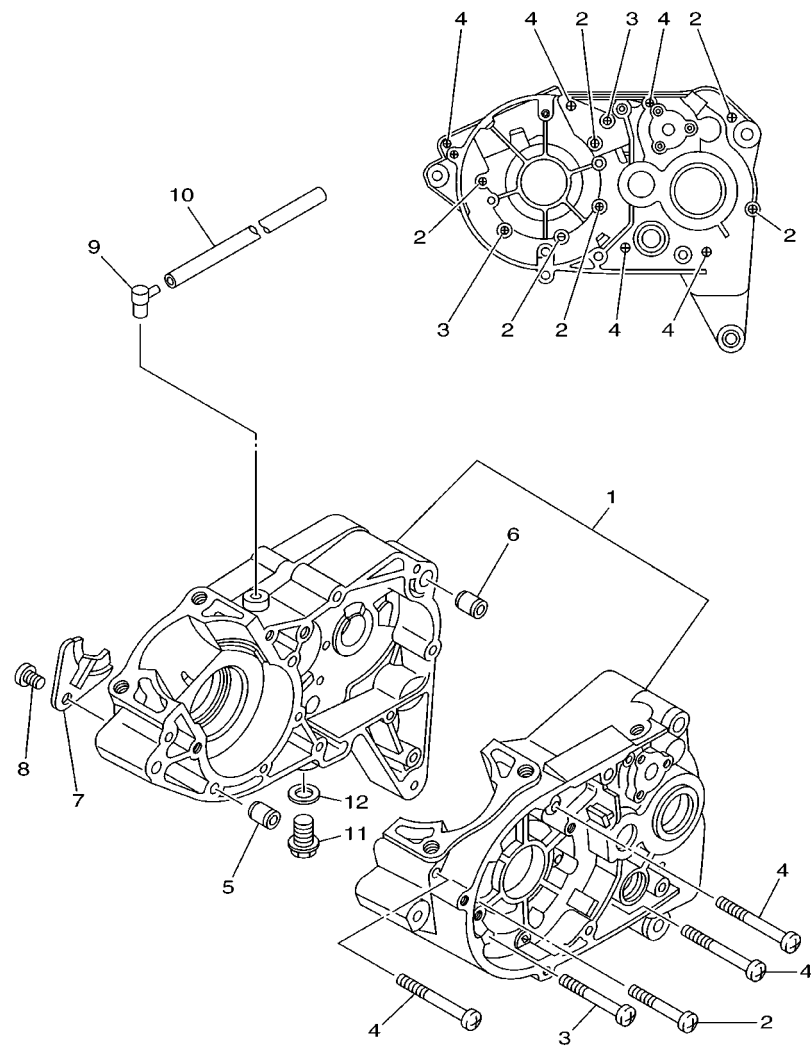

5JV1261-9070

FIG. 7 CRANKCASE

CARTER

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E5110-00	CRANKCASE ASSY 1 CARTER COMPLETO 1	1	1	1	1	1	
2	98580-06545	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	6	6	6			
	98507-06045	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				6	6	
3	98580-06555	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2	2	2			
	98507-06055	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				2	2	
4	98580-06565	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	5	5	5			
	98507-06065	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				5	5	
5	99530-10014	PIN, DOWEL PASADOR, DE ESPIGA	1					
	99530-10114	PIN, DOWEL PASADOR, DE ESPIGA		1	1	1	1	
6	99530-14016	PIN, DOWEL PASADOR, DE ESPIGA	1	1	1	1	1	
7	36L-E5128-00	HOLDER RETEN	1	1	1	1	1	
8	98501-08010	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1	1	1			
	98507-08010	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				1	1	
9	36L-E5371-00	BREATHING RESPIRADERO	1	1	1	1	1	
10	90446-07228	HOSE MANGUERA	1	1	1			
	90446-07009	HOSE MANGUERA				1	1	
11	90340-12005	PLUG, STRAIGHT SCREW TAPON DE TORNILLO RECTO	1	1	1	1	1	
12	90430-12207	GASKET EMPAQUE	1	1	1	1	1	

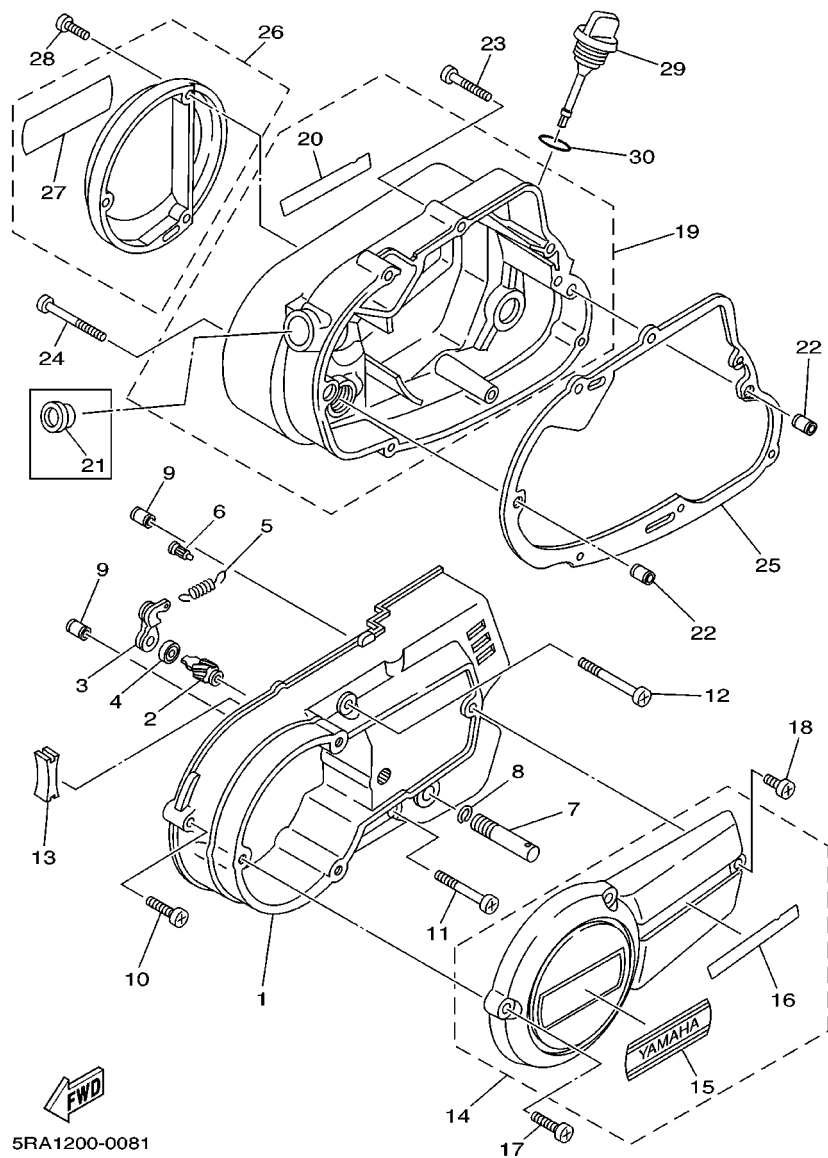


FIG. 8 CRANKCASE COVER 1

CUBIERTA DE CARTER 1

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E5411-00	COVER, CRANKCASE 1 CUBIERTA DE CARTER 1	1	1	1	1	1	
2	36L-E6341-00	SCREW, PUSH TORNILLO DE EMPUJE					1	1
3	36L-E6342-00	LEVER, PUSH PALANCA DE EMPUJE					1	1
4	93104-11806	OIL SEAL SELLO DE ACEITE					1	1
5	90506-10069	SPRING, TENSION RESORTE DE TENSION					1	1
6	36L-E6346-00	HOOK, SPRING GANCHO DE RESORTE					1	1
7	36L-E8188-00	AXLE, PAWL HOLDER EJE DE SOSTEN DE SUJETADOR	1	1	1	1	1	
8	93440-11029	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
9	99530-10014	PIN, DOWEL PASADOR, DE ESPIGA	2					
	99530-10114	PIN, DOWEL PASADOR, DE ESPIGA		2	2	2	2	
10	98580-06030	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2	2	2			
	98507-06030	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				2	2	
11	98580-06545	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1	1	1			
	98507-06045	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				1	1	
12	98580-06555	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1	1	1			
	98507-06055	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				1	1	
13	36L-E5357-00	GROMMET ANILLO PROTECTOR	1	1	1	1	1	
14	36L-E5420-00	GENERATOR COVER ASSY TAPA DE CARTER LATERAL	1	1	1	1	1	
15	36L-E5435-00	.EMBLEM .EMBLEMA	1	1	1	1	1	
16	36L-E5443-00	.EMBLEM .EMBLEMA	1	1	1	1	1	
17	98517-06025	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	3	3	3			
	98507-06025	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				3	3	
18	98580-06016	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1	1	1			
	98507-06016	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				1	1	
19	36L-WE542-00	COVER ASSY 2 TAPA DE CARTER DE RECHA	1	1	1	1	1	
20	36L-E5447-00	.EMBLEM .EMBLEMA	1	1	1	1	1	
21	90381-08803	BUSH, SOLID BUJE SOLIDO	1					


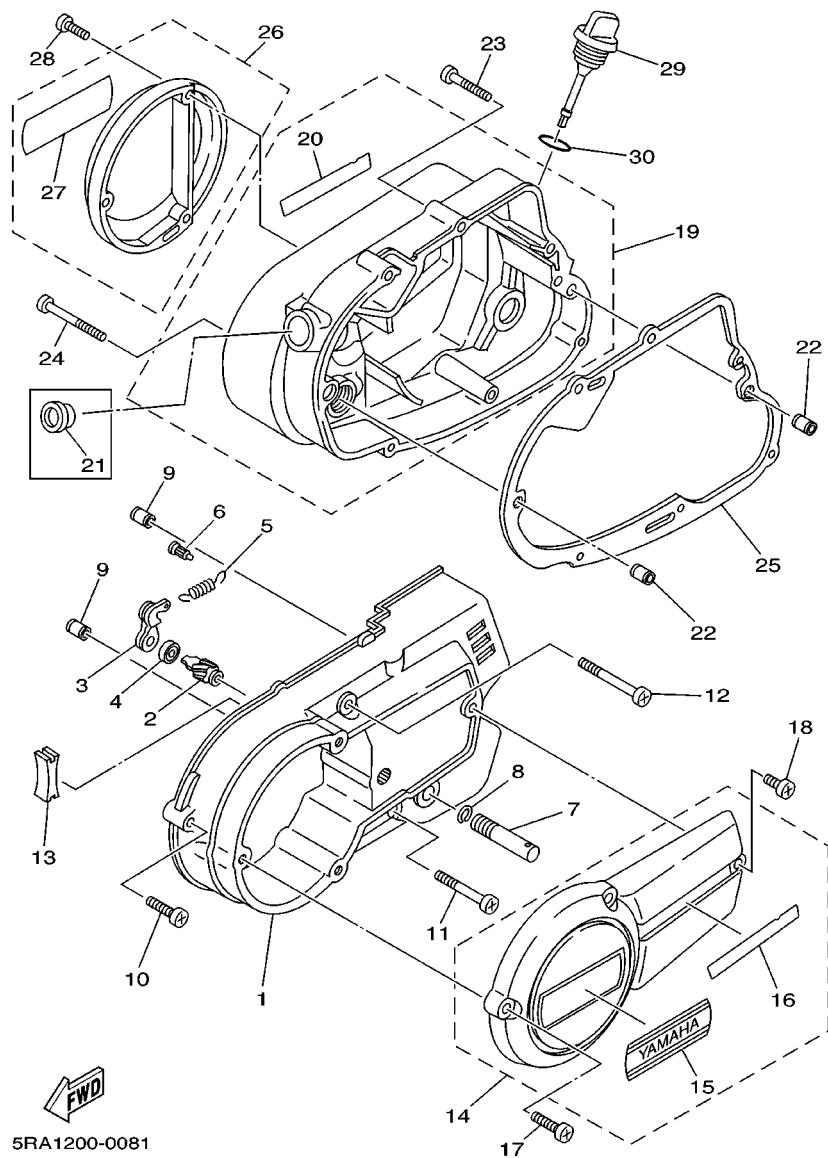


FIG. 8 CRANKCASE COVER 1

CUBIERTA DE CARTER 1

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36LO	36L2	36L4	5RA1	REMARKS OBSERVACION
22	99530-10014	PIN, DOWEL PASADOR, DE ESPIGA	2	2	2			
	99530-10114	PIN, DOWEL PASADOR, DE ESPIGA				2	2	
23	97885-06035	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	6	6	6			
	98507-06035	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				6	6	
24	98580-06555	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1	1	1			
	98507-06055	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				1	1	
25	36L-E5451-00	GASKET, CRANKCASE COVER 1 EMPAQ DE CUBIERTA DE CARTER	1	1	1	1	1	
26	36L-WE543-00	PUMP COVER ASSY CUBIERTA DE BOMBA DE ACEITE	1					
	36L-E5430-00	PUMP COVER ASSY CUBIERTA DE BOMBA DE ACEITE		1	1	1	1	
27	36L-E5435-00	EMBLEM EMBLEMA	1	1	1	1	1	
28	98517-06025	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	3	3	3			
	98507-06025	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				3	3	
29	36L-E5362-00	PLUG, OIL LEVEL TAPON DE NIVEL DE ACEITE	1	1	1	1	1	
30	93210-19809	O-RING ANILLO O	1	1	1	1	1	

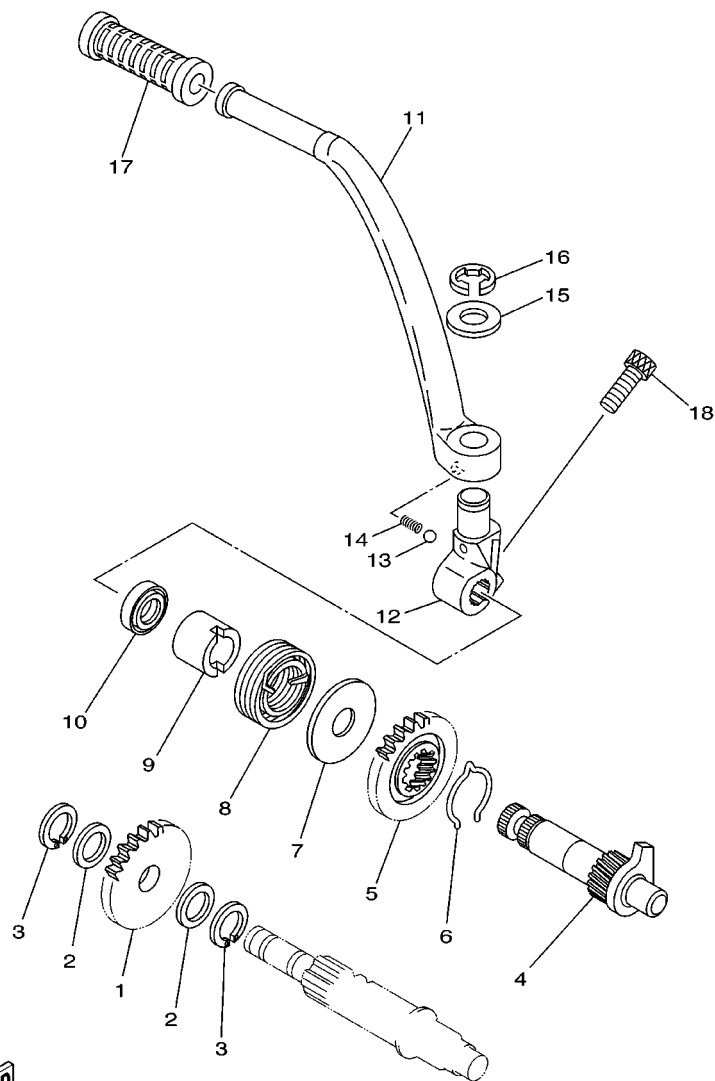

5RA1200-0091

FIG. 9 STARTER

ARRANQUE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E5651-00	GEAR, KICK IDLE ENGRENAJE NEUTRO DE ARRANQUE	1	1	1	1	1	
2	90201-15827	WASHER, PLATE ARANDELA DE PLACA	2	2	2	2	2	
3	93440-15802	CIRCLIP PRESILLA (ND)	2	2	2	2	2	
4	36L-E5660-00	KICK AXLE ASSY EJE DE PEDAL DE ARRAN.COMPLETO	1	1	1			
	36L-E5660-01	KICK AXLE ASSY EJE DE PEDAL DE ARRAN.COMPLETO					1	1
5	36L-E5641-00	GEAR, KICK ENGRANAJE PEDAL ARRANQUE	1	1	1	1	1	
6	90468-26048	CLIP GRAMPA	1	1	1	1	1	
7	36L-E5676-00	COVER, SPRING CUBIERTA DE RESORTE	1	1	1	1	1	
8	90508-26484	SPRING, TORSION RESORTE DE TORSION	1	1	1	1	1	
9	36L-E5666-00	SPACER ESPACIADOR	1	1	1	1	1	
10	93101-17807	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
11	36L-E5611-00	CRANK, KICK MANIVELA DE PEDAL DE ARRANQUE	1	1	1	1	1	
12	36L-E5621-00	BOSS, KICK CRANK COPA DE MANIVELA DE PEDAL	1	1	1	1	1	
13	93507-32819	BALL BOLA	1	1	1	1	1	
14	90501-12081	SPRING, COMPRESSION RESORTE DE COMPRESION	1	1	1	1	1	
15	90201-153A1	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
16	93430-10811	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
17	36L-E5618-00	COVER, KICK LEVER CUBIERTA PALANCA DE PEDAL	1	1	1	1	1	
18	91317-08025	BOLT PERNO	1	1	1	1	1	

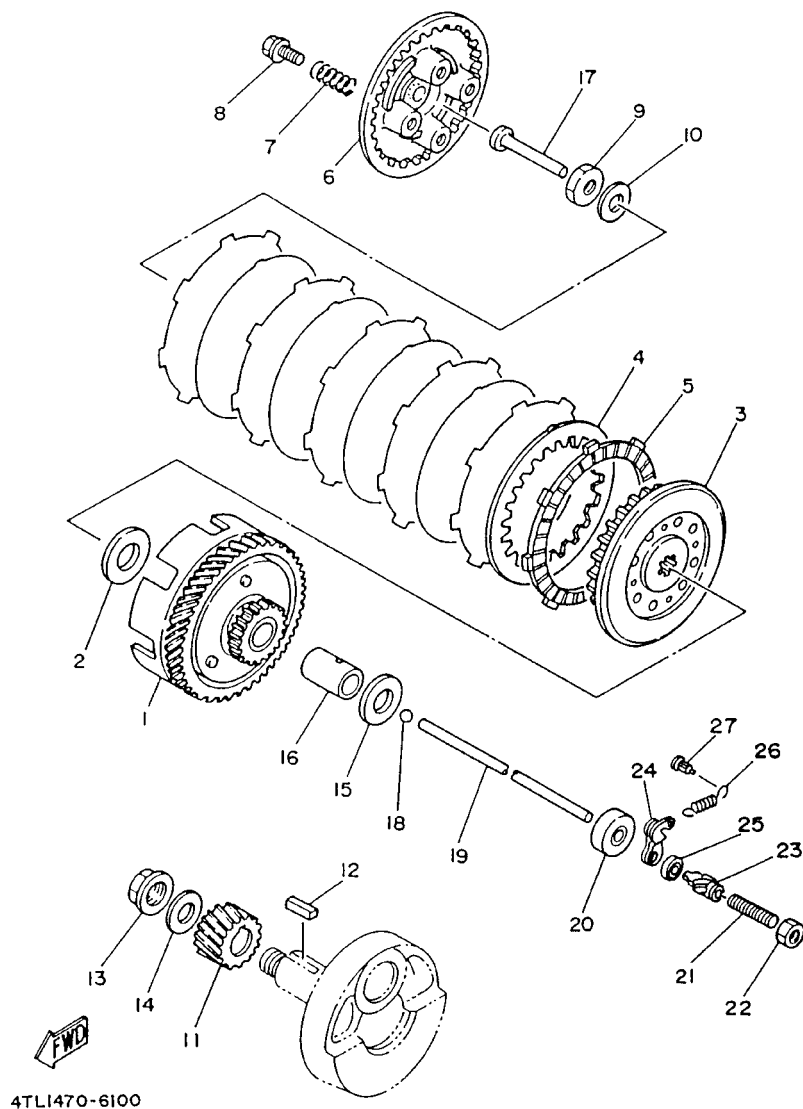


FIG. 10 CLUTCH

EMBRAGUE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E6150-00	PRIMARY DRIVEN GEAR COMP. ENGRANAJE TRACCION PRIM.COMPL.	1	1	1	1	1	
2	36L-E6154-00	PLATE, THRUST 1 PLACA 1	1	1	1	1	1	
3	36L-E6371-00	BOSS, CLUTCH COPA DE EMBRAGUE	1	1	1	1	1	
4	36L-E6324-00	PLATE, CLUTCH 1 PLACA DE EMBRAGUE	4	4	4	4	4	
5	36L-E6321-00	PLATE, FRICTION PLACA DE FRICCION	5	5	5	5	5	
6	36L-E6351-00	PLATE, PRESSURE 1 PLACA DE PRESION 1	1	1	1	1	1	
7	90501-20568	SPRING, COMPRESSION RESORTE DE COMPRESION	4	4	4	4	4	
8	90119-05020	BOLT, WITH WASHER PERNO CON ARANDELA	4	4	4	4	4	
9	90170-12060	NUT ANILLO EN O	1	1	1	1	1	
10	90208-12015	WASHER, CONICAL SPRING ARANDELA DE RESORTE CONICO	1	1	1	1	1	
11	36L-E6111-00	GEAR, PRIMARY DRIVE ENGRANAJE TRACC.PRIMARIA	1	1	1	1	1	
12	90282-05005	KEY, STRAIGHT CUNA RECTA	1	1	1	1	1	
13	90179-12813	NUT TUERCA	1					
	90179-12659	NUT TUERCA		1	1	1	1	
14	90208-12015	WASHER, CONICAL SPRING ARANDELA DE RESORTE CONICO	1	1	1	1	1	
15	90201-17558	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
16	90560-17147	SPACER ESPACIADOR	1	1	1	1	1	
17	36L-E6356-00	ROD, PUSH 1 VARILLA DE EMPUJE 1	1	1	1	1	1	
18	93503-16807	BALL BOLA	1					
	93503-16806	BALL BOLA		1	1	1	1	
19	36L-E6357-00	ROD, PUSH 2 VARILLA DE EMPUJE 2	1	1	1	1	1	
20	93109-05022	OIL SEAL SELLO DE ACEITE	1	1	1			
	93109-05804	OIL SEAL SELLO DE ACEITE				1	1	
21	90113-06013	BOLT, SET PERNO JUEGO	1	1	1	1	1	
22	95380-06600	NUT, HEXAGON ARANDELA	1	1	1			
	95307-06600	NUT TUERCA				1	1	
23	36L-E6341-00	SCREW, PUSH TORNILLO DE EMPUJE	1	1	1			

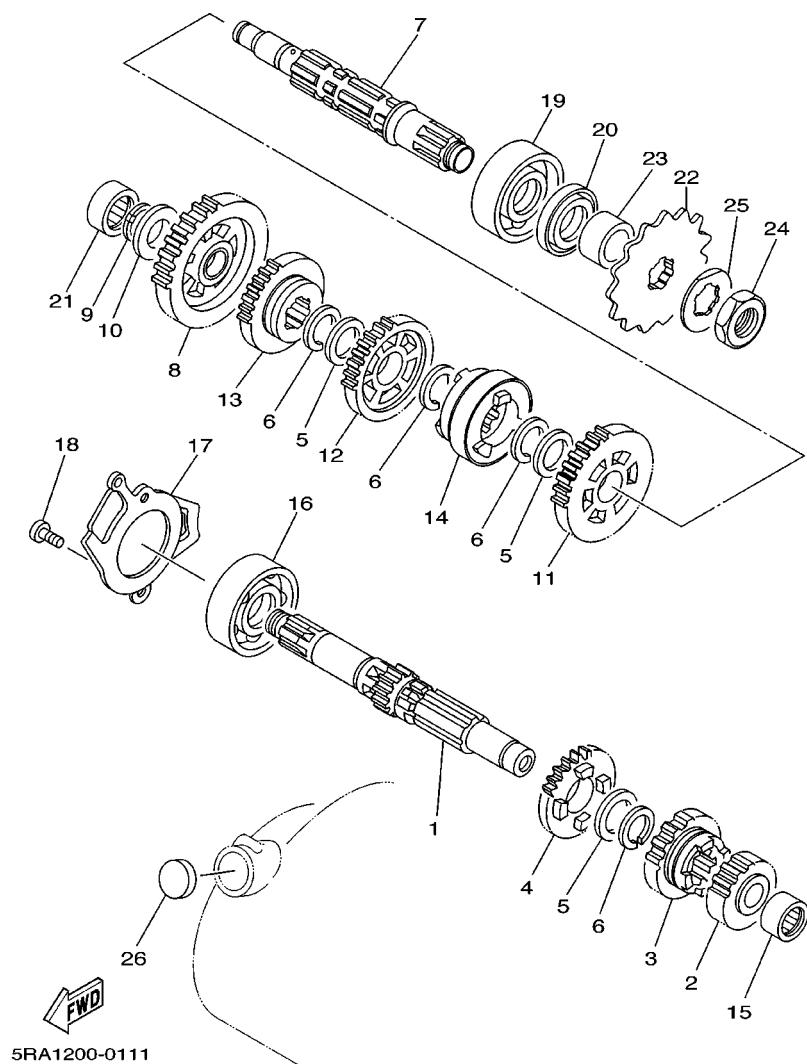


FIG. 11 TRANSMISSION

TRANSMISSION

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E7411-00	AXLE, MAIN EJE PRINCIPAL	1	1	1	1	1	
2	36L-E7121-00	GEAR, 2ND PINION ENGRANAJE DE PINON DE 2DA	1	1	1	1	1	
3	36L-E7131-00	GEAR, 3RD PINION ENGRANAJE PINON DE 3RA	1	1	1	1	1	
4	36L-E7141-00	GEAR, 4TH PINION ENGRANAJE PINON DE 4TA	1	1	1	1	1	
5	90201-20266	WASHER, PLATE (1.0T) ARANDELA, DE PLACA (1.0T)	3	3	3	3	3	
6	93410-20809	CIRCLIP PRESILLA (ND)	4	4	4	4	4	
7	36L-E7421-00	AXLE, DRIVE EJE DE TRACCION	1	1	1	1	1	
8	36L-E7211-10 36L-E7211-01	GEAR, 1ST WHEEL (43T) ENGRANAJE RUEDA DE 1DA (43T) GEAR, 1ST WHEEL (43T) ENGRANAJE RUEDA DE 1DA (43T)	1	1	1		1	
9	93440-15802	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
10	90201-15828	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
11	36L-E7221-00	GEAR, 2ND WHEEL ENGRANAJE RUEDA DE 2DA	1	1	1	1	1	
12	36L-E7231-00	GEAR, 3RD WHEEL ENGRANAJE RUEDA DE 3RA	1	1	1	1	1	
13	36L-E7241-00	GEAR, 4TH WHEEL ENGRANAJE DE RUEDA 4TA	1	1	1	1	1	
14	36L-E7285-00	CLUTCH, DOG ENGRENAGE DE ENGATE	1	1	1	1	1	
15	93311-315Y0	BEARING COJINETE	1	1	1	1	1	
16	93306-303Y1	BEARING COJINETE	1	1	1	1	1	
17	36L-E7471-00	PLATE, COVER PLACA DE CUBIERTA	1	1	1	1	1	
18	98511-06012 98507-06012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2	2	2		2	
19	93306-304Y1	BEARING COJINETE	1	1	1	1	1	
20	93102-26805	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
21	93311-315Y0	BEARING COJINETE	1	1	1	1	1	
22	36L-E7461-00 36L-E7461-50	SPROCKET, DRIVE (15T) CORONA (15T) SPROCKET, DRIVE (15T) CORONA (15T)	1	1	1		1	
23	90387-20491	COLLAR COLLAR	1	1	1	1	1	
24	90179-16226	NUT ANILLO EN O	1	1	1	1	1	


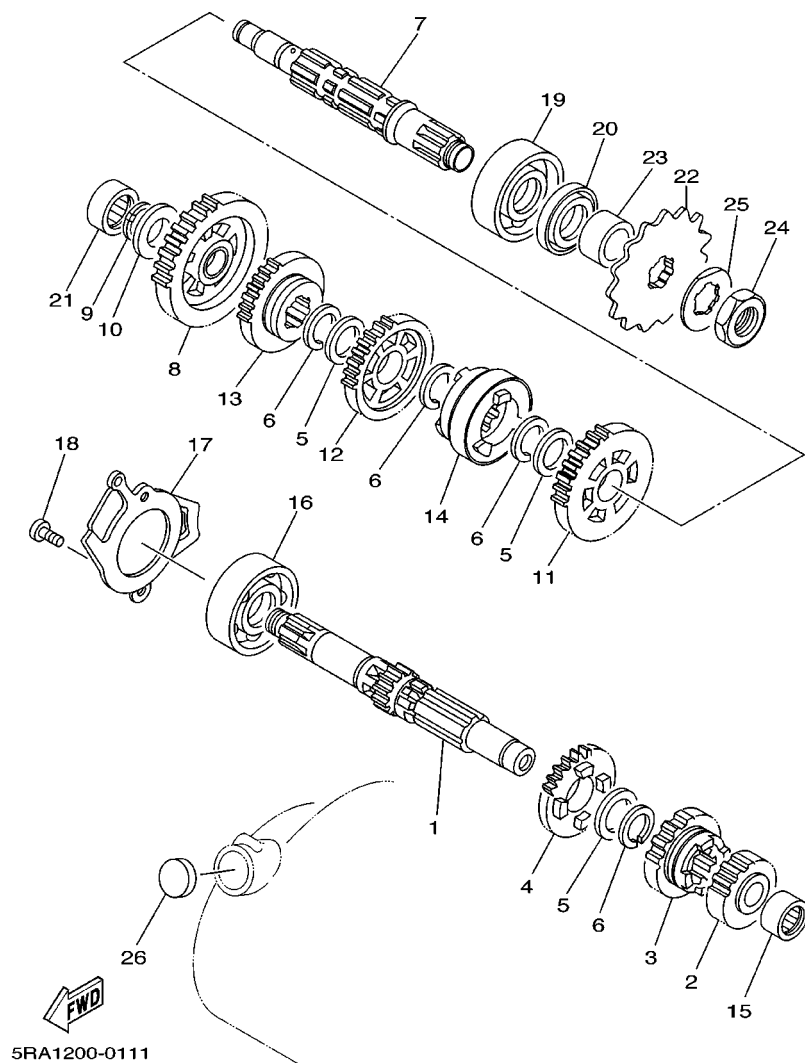


FIG. 11 TRANSMISSION

TRANSMISION

[illegible]

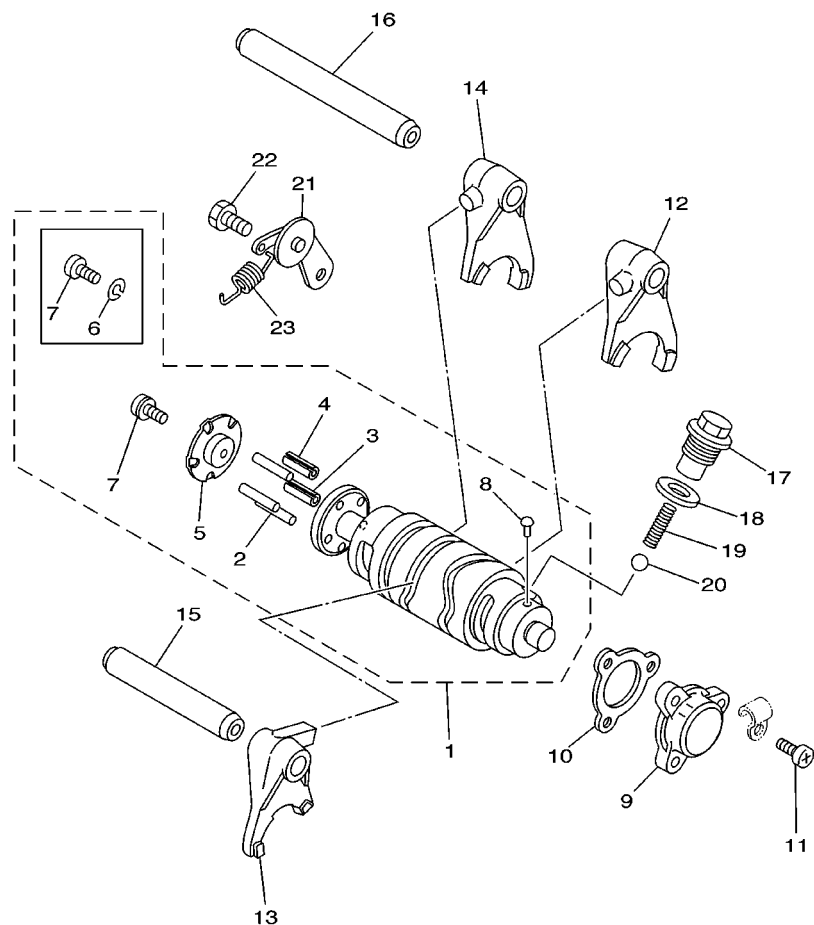


5RA1200-0120

FIG. 12 SHIFT CAM. FORK

LEVA DE CAMBIO. HORQ

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E8540-02	SHIFT CAM ASSY CAMBIO DE LEVA COMPLETO	1	1	1	1	1	
2	93604-22806	.PIN, DOWEL .PASADOR, DE ESPIGA	3	3	3	3	3	
3	91609-50016	.PIN, SPRING .PASADOR DE RESORTE	1	1	1	1	1	
4	91609-40016	.PIN, SPRING .PASADOR DE RESORTE	1	1	1	1	1	
5	36L-E8561-00	.PLATE, SIDE 1 .PLACA LATERAL 1	1	1	1	1	1	
6	92907-05100	.WASHER, SPRING .ARANDELA DE RESORTE	1					
7	98517-05012	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	1					
	97607-05112	.SCREW, PAN HEAD WITH WASHER .TORNILLO CAB CON PLANA C/ARAN		1	1	1	1	
8	36L-E8542-00	.POINT, NEUTRAL .PUNTO NEUTRO	1	1	1	1	1	
9	4TL-E8589-00	PLUG, BLIND TAPON CIEGO	1	1	1	1	1	
10	36L-E8579-00	GASKET, PLUG BLIND EMPAQUE TAPON CIEGO	1	1	1	1	1	
11	98517-06008	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	3	3	3			
	98507-06008	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				3	3	
12	3M5-18511-01	FORK, SHIFT 1 HORQUILLA DE CAMBIO 1	1	1	1			
	36L-E8511-00	FORK, SHIFT 1 HORQUILLA DE CAMBIO 1				1	1	
13	3M5-18512-00	FORK, SHIFT 2 HORQUILLA DE CAMBIO 2	1	1	1			
	36L-E8512-00	FORK, SHIFT 2 HORQUILLA DE CAMBIO 2				1	1	
14	3M5-18513-00	FORK, SHIFT 3 HORQUILLA DE CAMBIO 3	1	1	1			
	36L-E8513-00	FORK, SHIFT 3 HORQUILLA DE CAMBIO 3				1	1	
15	36L-E8531-00	BAR, SHIFT FORK GUIDE 1 BARRA GUIA HORQ. CAMBIO 1	1	1	1	1	1	
16	36L-E8535-00	BAR, SHIFT FORK GUIDE 2 BARRA GUIA HORQ. CAMBIO 2	1	1	1	1	1	
17	90109-14385	BOLT PERNO	1	1	1	1	1	
18	36L-E5353-00	GASKET, DRAIN EMPAQUE DE DRENAJE	1	1	1	1	1	
19	90501-10353	SPRING, COMPRESSION RESORTE DE COMPRESION	1	1	1	1	1	
20	93505-16814	BALL BOLA	1	1	1	1	1	
21	36L-E8140-00	STOPPER LEVER ASSY PALANCA DE TOPE COMPLETA	1	1	1	1	1	
22	90109-06001	BOLT PERNO	1	1	1	1	1	

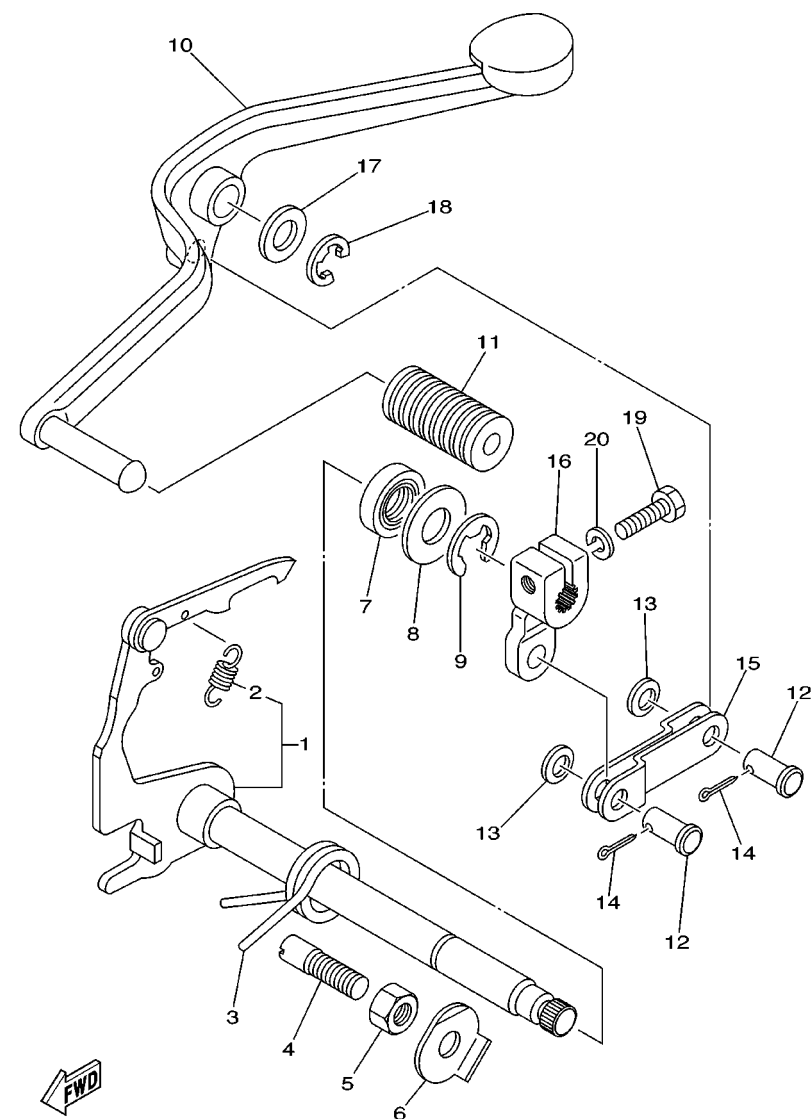

5RA1200-0130

FIG. 13 SHIFT SHAFT

EJE DE CAMBIO. PEDAL

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-E8101-00	SHIFT SHAFT ASSY EJE SELECTOR COMPLETO	1	1	1	1	1	
2	90506-08818	.SPRING, TENSION .RESORTE DE TENSION	1	1	1	1	1	
3	90508-32811	SPRING, TORSION RESORTE DE TORSION	1	1	1	1	1	
4	90149-08094	SCREW TORNILLO	1	1	1	1	1	
5	90170-08029	NUT ANILLO EN O.	1	1	1	1	1	
6	90215-08014	WASHER, LOCK ARANDELA DE SEGURO	1	1	1	1	1	
7	93109-14803	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
8	90201-14220	WASHER, PLATE ARANDELA DE PLACA	1					
	90201-14586	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	
9	93430-12812	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
10	36L-E8111-00	PEDAL, SHIFT PEDAL DE CAMBIO	1	1	1	1	1	
11	36L-E8113-00	COVER, SHIFT PEDAL CUBIERTA DE PEDAL DE CAMBIO	1	1	1	1	1	
12	90240-08013	PIN, CLEVIS PASADOR	2	2	2			
	90240-08053	PIN, CLEVIS PASADOR				2	2	
13	90201-08085	WASHER, PLATE ARANDELA DE PLACA	2	2	2	2	2	
14	91490-16020	PIN, COTTER PASADOR DE CHAVETA	2					
	91401-16012	PIN, COTTER PASADOR DE CHAVETA		2	2	2	2	
15	36L-E8115-00	ROD, SHIFT VARILLA DE CAMBIO	1	1	1	1	1	
16	36L-E8112-00	ARM, SHIFT BRAZO DE CAMBIO	1	1	1	1	1	
17	90201-12631	WASHER, PLATE ARANDELA DE PLACA	1					
	90201-122H2	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	
18	93430-10811	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
19	97017-06020	BOLT PERNO	1					
	97027-06020	BOLT PERNO		1	1	1	1	
20	92907-05100	WASHER, SPRING ARANDELA DE RESORTE	1					



5RA1200-0150


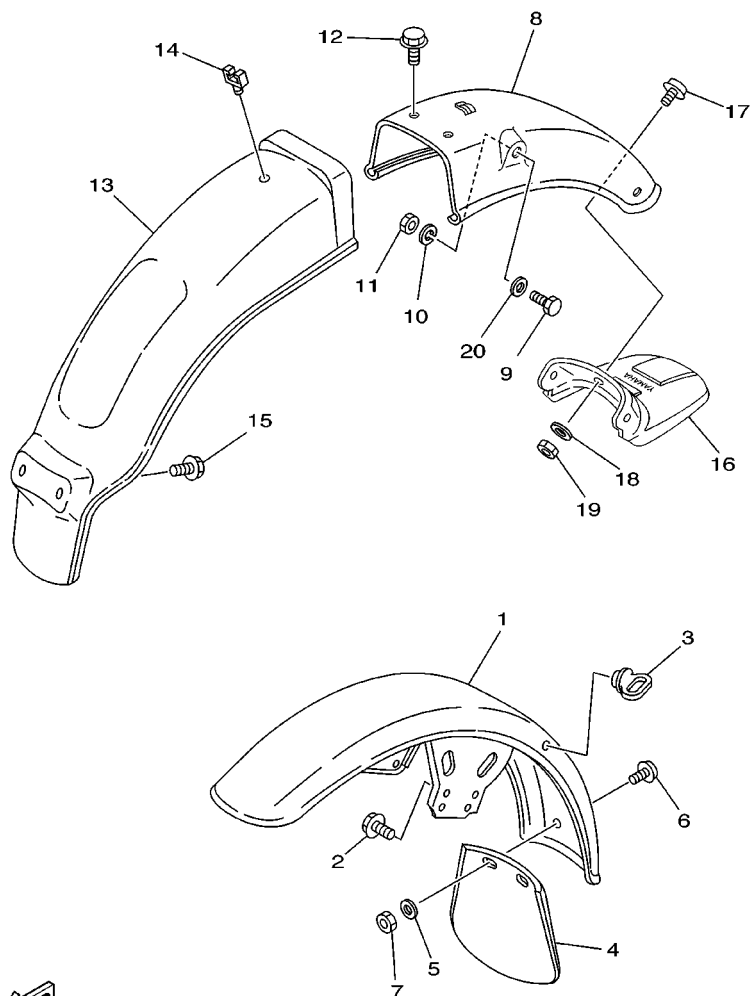


FIG. 15 FENDER

GUARDABARRO

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F1510-10	FRONT FENDER COMP. GUARDABARRO DELANTERO COMPLETO	1	1	1	1		CM
	4TL-F1510-00	FRONT FENDER COMP. GUARDABARRO DELANTERO COMPLETO					1	CM
2	95807-06016	BOLT, FLANGE CUBIERTA COMPL 2. GUIA DE AIR	4	4	4	4	4	
3	36L-F1518-00	HOLDER, CABLE SOSTEN DE CABLE	1	1	1	1	1	
4	36L-F1521-00	FLAP, FRONT FENDER CHARNELA DE GUARDABARRO	1	1	1	1	1	
5	90201-05725	WASHER, PLATE ARANDELA DE PLACA	2	2	2	2	2	
6	98517-05012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97607-05212	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
7	95307-05600	NUT TUERCA	2	2	2	2	2	
8	36L-F1610-10	REAR FENDER COMP. GUARDABARRO TRASERO COMPLETO	1	1	1	1		CM
	36L-F1610-00	REAR FENDER COMP. GUARDABARRO TRASERO COMPLETO					1	CM
9	97017-08020	BOLT PERNO	2	2	2			
	97007-08020	BOLT PERNO				2	2	
10	92907-08100	WASHER, SPRING ARANDELA DE RESORTE	2	2	2	2	2	
11	95337-08600	NUT TUERCA	2	2	2			
	95307-08600	NUT TUERCA				2	2	
12	95817-06012	BOLT, FLANGE PERNO, DE BRIDA	2	2	2			
	95807-06012	BOLT, FLANGE PERNO, DE BRIDA				2	2	
13	36L-F1629-00	GUARD, MUD GUARDAFANGO	1	1	1	1	1	
14	90464-08020	CLAMP GRAMPA	1	1	1	1	1	
15	90119-06056	BOLT, WITH WASHER PERNO CON ARANDELA	2	2	2	2	2	
16	36L-F1621-01	FLAP CHARNELA	1	1	1	1	1	
17	98507-05016	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN	3					
	97607-05216	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		3	3	3	3	
18	90201-05036	WASHER, PLATE ARANDELA DE PLACA	3	3	3	3	3	
19	95307-05600	NUT ANILLO EN O	3	3	3	3	3	
20	92907-08600	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	

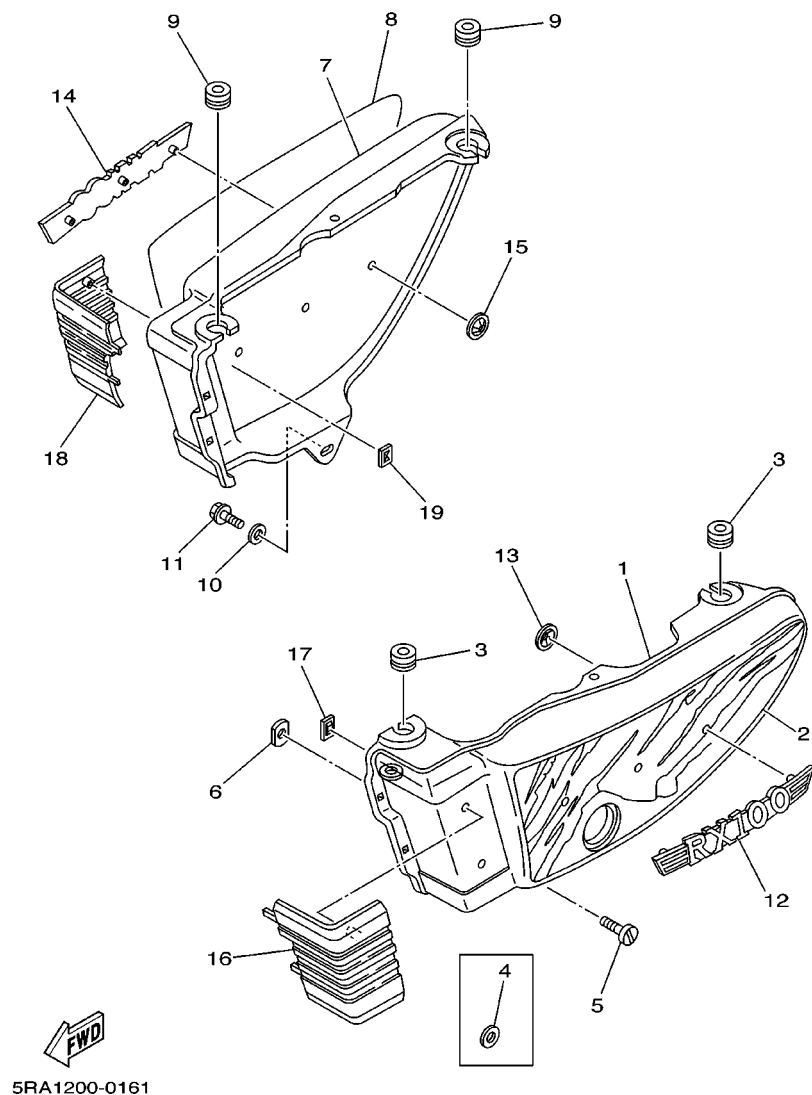

5RA1200-0161

FIG. 16 SIDE COVER

CUBIERTA LATERAL

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F1711-01-H6	COVER, SIDE 1 CUBIERTA LATERAL 1	1	1				UR MM
	36L-F1711-01-H9	COVER, SIDE 1 CUBIERTA LATERAL 1	1	1	1	1		UR BG
	36L-F1711-01-20	COVER, SIDE 1 CUBIERTA LATERAL 1	1	1				UR ACB
	36L-F1711-01-9V	COVER, SIDE 1 CUBIERTA LATERAL 1			1	1	1	UR ACB
	36L-F1711-01-35	COVER, SIDE 1 CUBIERTA LATERAL 1			1	1		UR SL
	36L-F1711-01-P1	COVER, SIDE 1 CUBIERTA LATERAL 1			1	1	1	UR VRC7
	36L-F1711-01-36	COVER, SIDE 1 CUBIERTA LATERAL 1					1	UR WW
2	36L-F173E-00	GRAPHIC 1 GRAFICO 1	1	1				UR FOR SL
	36L-F173E-10	GRAPHIC 1 GRAFICO 1	1	1				UR FOR BG
	36L-F173E-20	GRAPHIC 1 GRAFICO 1			1			UR FOR BG
	36L-F173E-30	GRAPHIC 1 GRAFICO 1			1			UR FOR VRC7
	36L-F173E-40	GRAPHIC 1 GRAFICO 1			1			UR FOR ACB
	36L-F173E-50	GRAPHIC 1 GRAFICO 1			1			UR FOR SL
	36L-F173E-60	GRAPHIC 1 GRAFICO 1				1		UR FOR BG
	36L-F173E-70	GRAPHIC 1 GRAFICO 1				1		UR FOR VRC7
	36L-F173E-80	GRAPHIC 1 GRAFICO 1				1		UR FOR ACB
	36L-F173E-90	GRAPHIC 1 GRAFICO 1				1		UR FOR SL
3	90480-12053	GROMMET ANILLO PROTECTOR	2	2	2	2	2	
4	90201-065F3	WASHER, PLATE ARANDELA DE PLACA	1					
5	90146-06009	SCREW, OVAL FILLISTER TORNILLO CABEZA OVAL RANURADA	1	1	1	1	1	
6	90179-06264	NUT ANILLO EN O	1	1	1	1	1	
7	36L-F1721-01-H6	COVER, SIDE 2 CUBIERTA LATERAL 2	1	1				UR MM
	36L-F1721-01-H9	COVER, SIDE 2 CUBIERTA LATERAL 2	1	1	1	1		UR BG
	36L-F1721-01-20	COVER, SIDE 2 CUBIERTA LATERAL 2	1	1				UR ACB
	36L-F1721-01-9V	COVER, SIDE 2 CUBIERTA LATERAL 2			1	1	1	UR ACB
	36L-F1721-01-35	COVER, SIDE 2 CUBIERTA LATERAL 2			1	1		UR SL
	36L-F1721-01-P2	COVER, SIDE 2 CUBIERTA LATERAL 2			1	1	1	UR VRC7

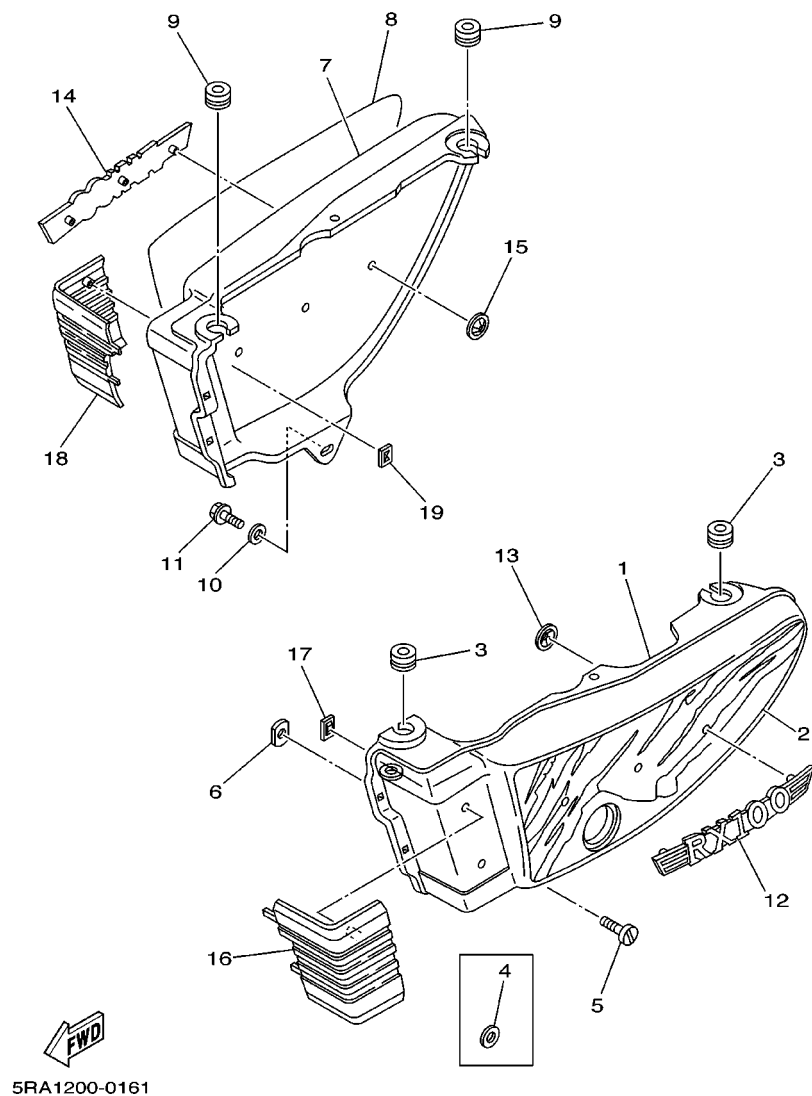


FIG. 16 SIDE COVER

CUBIERTA LATERAL

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
7	36L-F1721-01-36	COVER, SIDE 2 CUBIERTA LATERAL 2					1	UR WW
8	36L-F173F-00	GRAPHIC 2 GRAFICO 2	1	1				UR FOR SL
	36L-F173F-10	GRAPHIC 2 GRAFICO 2	1	1				UR FOR BG
	36L-F173F-20	GRAPHIC 2 GRAFICO 2			1			UR FOR BG
	36L-F173F-30	GRAPHIC 2 GRAFICO 2			1			UR FOR VRC7
	36L-F173F-40	GRAPHIC 2 GRAFICO 2			1			UR FOR ACB
	36L-F173F-50	GRAPHIC 2 GRAFICO 2			1			UR FOR SL
	36L-F173F-60	GRAPHIC 2 GRAFICO 2				1		UR FOR BG
	36L-F173F-70	GRAPHIC 2 GRAFICO 2				1		UR FOR VRC7
	36L-F173F-80	GRAPHIC 2 GRAFICO 2				1		UR FOR ACB
	36L-F173F-90	GRAPHIC 2 GRAFICO 2				1		UR FOR SL
9	90480-12053	GROMMET ANILLO PROTECTOR	2	2	2	2	2	
10	90201-065F3	WASHER, PLATE ARANDELA DE PLACA	1					
11	98507-06016	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1					
	90119-06843	BOLT PERNO		1	1	1	1	
12	36L-F1781-10	EMBLEM 1 EMBLEMA 1	1	1	1	1	1	
13	90183-04005	NUT, SPRING TUERCA DE RESORTE	3					
	90183-04012	NUT, SPRING TUERCA DE RESORTE		3	3	3	3	
14	36L-F1782-10	EMBLEM 2 EMBLEMA 2	1	1	1	1	1	
15	90183-04005	NUT, SPRING TUERCA DE RESORTE	3					
	90183-04012	NUT, SPRING TUERCA DE RESORTE		3	3	3	3	
16	36L-F1783-00	EMBLEM 3 EMBLEMA 3	1	1	1	1	1	
17	90183-06018	NUT, SPRING TUERCA DE RESORTE	2	2	2	2	2	
18	36L-F1784-00	EMBLEM 4 EMBLEMA 4	1	1	1	1	1	
19	90183-06018	NUT, SPRING TUERCA DE RESORTE	2	2	2	2	2	


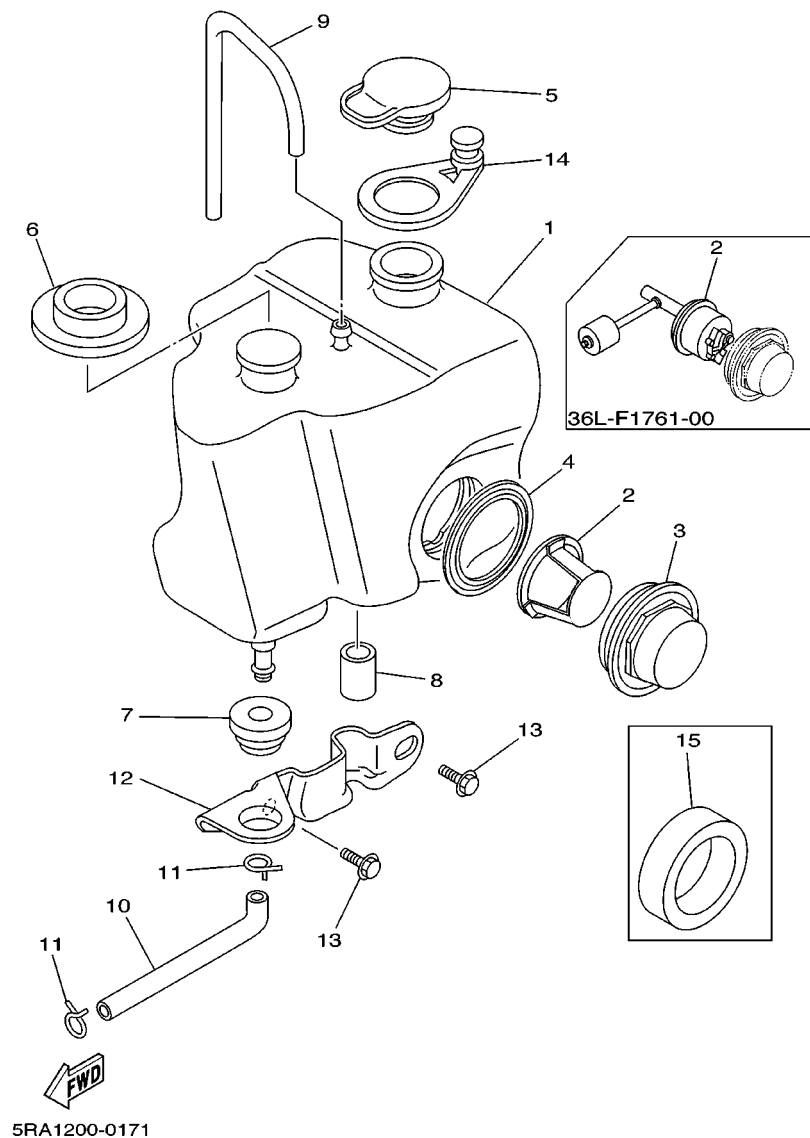


FIG. 17 OIL TANK

COMPONER Y PODER VARILLA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F1751-00	TANK, OIL DEPOSITO DE ACEITE	1	1	1	1	1	
2	36L-F1761-00	GAUGE, LEVEL MEDIDOR DE NIVEL	1					
	36L-F176A-00	REFLECTOR, LEVEL GAUGE REFLECTOR DE MEDIDOR DE NIVEL	1					
	36L-F176A-10	REFLECTOR, LEVEL GAUGE REFLECTOR DE MEDIDOR DE NIVEL		1	1	1	1	
3	36L-F1764-00	LENS, LEVEL GAUGE LENTE DE MEDIDOR DE NIVEL	1	1	1	1	1	
4	36L-F1763-00	GASKET, LEVEL GAUGE EMPAQ MEDIDOR DE NIVEL	1	1	1	1	1	
5	36L-F1771-00	BODY, CAP CUERPO DE TAPA	1	1	1	1	1	
6	90385-24028	BUSH BUJE	1	1	1	1	1	
7	90480-18171	GROMMET ANILLO PROTECTOR	1	1	1	1	1	
8	90385-08029	BUSH BUJE	1	1	1	1	1	
9	36L-F1745-00	PIPE, OIL TANK BREATHER TUBO RESP.DEPOS.DE ACEITE	1	1	1	1	1	
10	90445-09107	HOSE (L380) TUBO (L380)	1	1	1	1	1	
11	90467-08003	CLIP GRAMPA	2	2	2	2	2	
12	36L-F1155-00	BRACKET, OIL TANK SOPORTE DE DEPOSITO DE ACEITE	1	1	1	1	1	
13	95817-06012	BOLT, FLANGE CUBIERTA COMPL 2. GUIA DE AIR	2	2	2			
	95807-06012	BOLT, FLANGE CUBIERTA COMPL 2. GUIA DE AIR				2	2	
14	36L-F1776-00	BAND, TANK FITTING BANDA ACCESORIO DE DEPOSITO	1	1	1	1	1	
15	4TL-F1747-00	DAMPER AMORTIGUADOR	1					

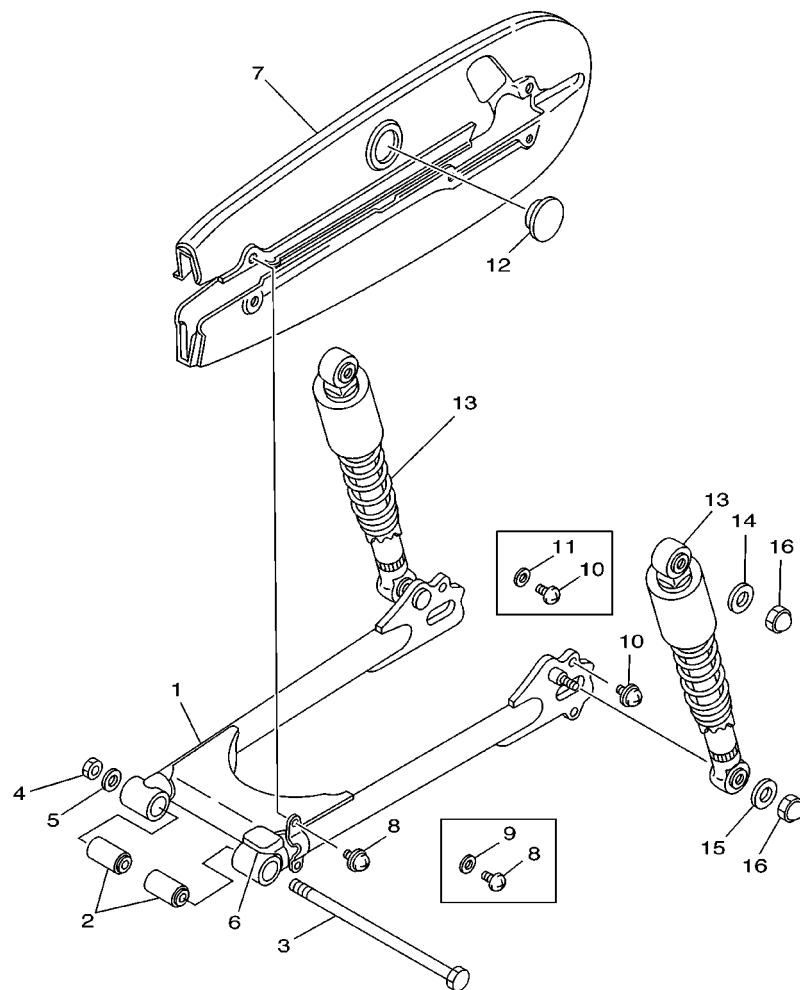


5RA1200-0181

FIG. 18 REAR ARM

BRAZO TRASERO

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F2110-10	REAR ARM COMP. BRAZO TRASERO COMPLETO	1	1	1	1	1	YB
2	36L-F2123-00	BUSH 1 BUJE	2	2	2	2	2	
3	36L-F2141-01	SHAFT, PIVOT EJE DE PIVOTE	1	1	1	1	1	
4	90170-12408	NUT TUERCA	1					
	90170-12065	NUT TUERCA		1	1	1	1	
5	92907-12200	WASHER ARANDELA	1	1	1	1	1	
6	36L-F2151-00	SEAL, GUARD SELLO DE GUARDA	1	1	1	1	1	
7	36L-F2310-10	CHAIN CASE ASSY CAJA DE CADENA COMPLETA	1	1	1			SL
	36L-F2310-20	CHAIN CASE ASSY CAJA DE CADENA COMPLETA				1	1	SL
8	98517-06012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97607-06212	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
9	92907-06600	WASHER, PLATE ARANDELA DE PLACA	2					
10	98507-06016	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97607-06216	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
11	92907-06600	WASHER, PLATE ARANDELA DE PLACA	2					
12	36L-F2315-00	CAP FUNDA	1	1	1	1	1	
13	36L-F2210-00	SHOCK ABSORBER ASSY, REAR AMORTIGUADOR TRASERO COMPLETO	2					YB
	36L-F2210-02	SHOCK ABSORBER ASSY, REAR AMORTIGUADOR TRASERO COMPLETO		2	2	2	2	
14	90201-14218	WASHER, PLATE ARANDELA DE PLACA	2	2	2	2	2	
15	90201-106F2	WASHER, PLATE ARANDELA DE PLACA	4	4	4	4	2	
16	90176-10073	NUT, CROWN TUERCA FIJADOR DE MANIBELA	4	4	4	4	4	



DIRECCION

28


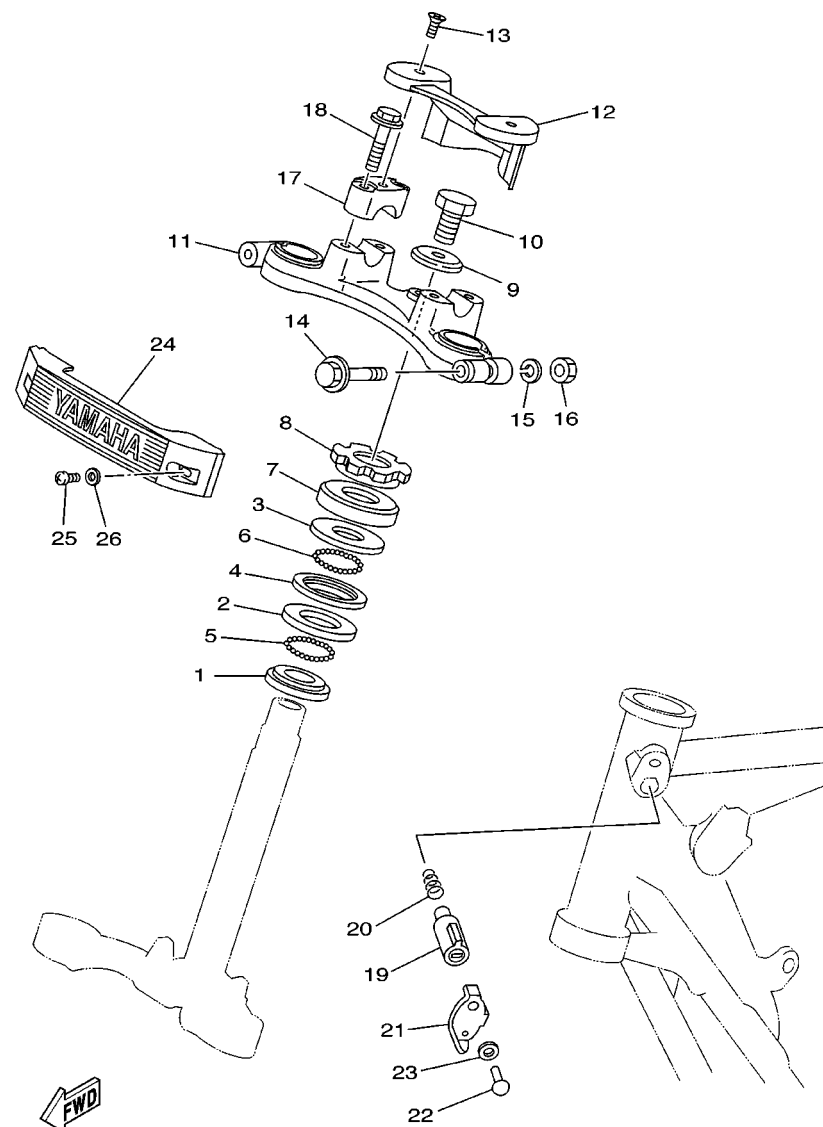


FIG. 19 STEERING

[illegible]

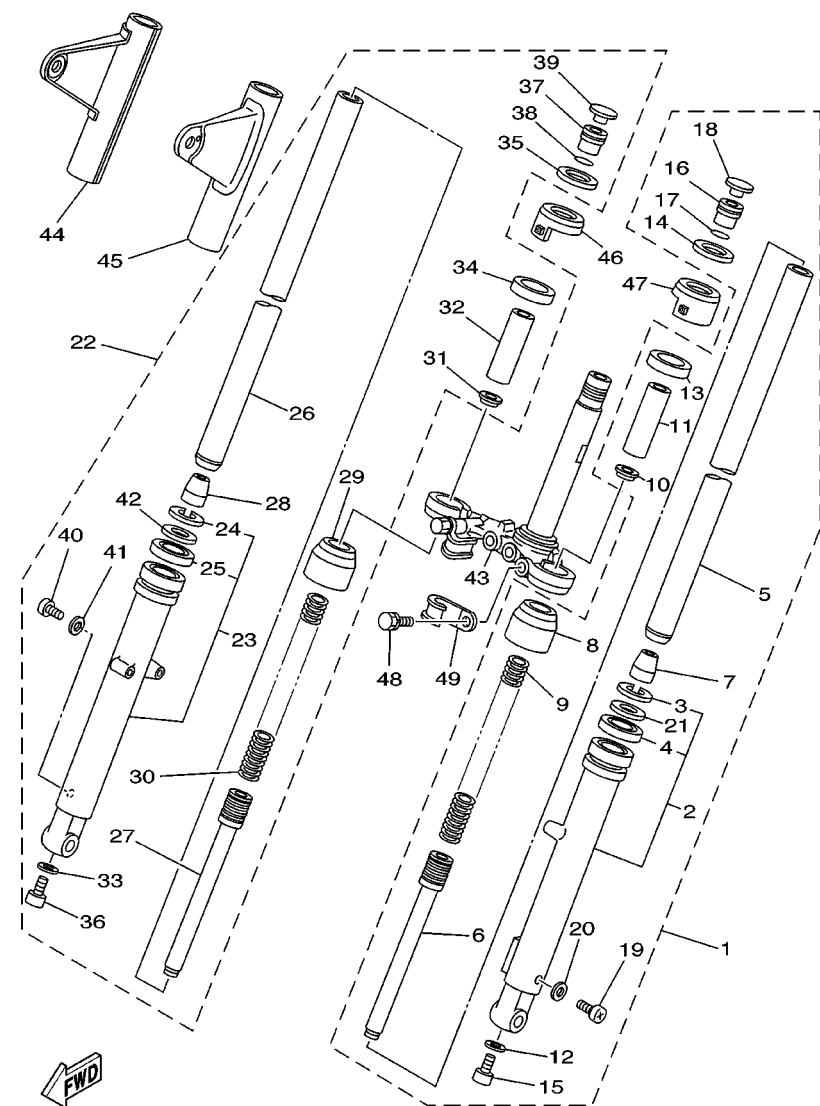


5RA1200-0201

FIG. 20 FRONT FORK

HORQUILLA DELANTERA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F3102-00	FRONT FORK ASSY (L.H) HORQUILLA DELANTERA COMPL. (MI)	1	1	1	1	1	
2	36L-F3106-00	..OUTER TUBE COMP. (L.H) ..TUBO EXTERIOR COMPLETO 1	1	1	1	1	1	
3	36L-F3156-00	..CLIP OIL SHEAL ..PALANCA CONTOROL DE BOMBA	1	1	1	1	1	
	36L-F3156-00	..RING, SNAP ..ANILLO DE ENGANCHE	1	1	1	1	1	
4	36L-F3145-00	..OIL SEAL ..SELLO DE ACEITE	1	1	1	1	1	
5	36L-F3110-00	..INNER TUBE COMP.1 ..TUBO INTERIOR COMPLETO 1	1	1	1	1	1	
6	36L-F3170-K0	..CYLINDER COMP., FRONT FORK ..CILINDRO COMPL DE HORQ DELAN	1	1	1			
	36L-F3170-00	..CYLINDER COMP., FRONT FORK ..CILINDRO COMPL DE HORQ DELAN				1	1	
7	36L-F3173-00	..SPINDLE, TAPER ..VASTAGO AHUSADO	1	1	1	1	1	
8	36L-F3144-00	..SEAL, DUST ..SELLO PARA POLVO	1	1	1	1	1	
9	36L-F3141-00	..SPRING, FRONT FORK ..RESORTE HORQUILLA DELANT.	1	1	1	1	1	
10	36L-F3146-00	..GUIDE, SPRING ..GUIA DE RESORTE	1	1	1	1	1	
11	36L-F3118-00	..SPACER ..ESPACIADOR	1	1	1	1	1	
12	36L-F3158-L0	..GASKET ..EMPAQUE	1	1	1	1	1	
13	36L-F3163-00	..GASKET ..EMPAQUE	1	1	1	1	1	
14	36L-F3116-00	..GUIDE, COVER LOWER ..GUIA DE CUBIERTA INFERIOR	1	1	1	1	1	
15	36L-F3181-50	..BOLT, HEXAGON SOCKET HEAD ..PERNO CABEZA EXAGONAL	1	1	1			
	36L-F3181-00	..BOLT, HEXAGON SOCKET HEAD ..PERNO CABEZA EXAGONAL				1	1	
16	36L-F3111-00	..BOLT,CAP PALANCA DE TERMINO DELANTERO	1	1	1	1	1	
17	36L-F3114-00	..GASKET ..EMPAQUE	1	1	1			
	36L-F3147-00	..O-RING ..ANILLO O				1	1	
18	36L-F3168-00	..CAP, FRONT FORK ..TAPA DE HORQUILLA DELANTERA	1	1	1	1	1	
19	36L-F3119-00	..PLUG, DRAIN ..TAPON DE LLAVE DE VACIADO	1	1	1	1	1	
20	36L-F3129-00	..GASKET, DRAIN PLUG ..EMPAQUE DE TAPON DRENAJE		1	1	1	1	
21	36L-F3165-00	..WASHER, FELT ..ARANDELA DE FIELTRO					1	1
22	36L-F3103-00	FRONT FORK ASSY (R.H) HORQUILLA DELANTERA COMPL. (MD)	1	1	1	1	1	
23	36L-F3107-00	..OUTER TUBE COMP. (R.H) ..TUBO EXTERIOR COMPLETO 2	1	1	1	1	1	

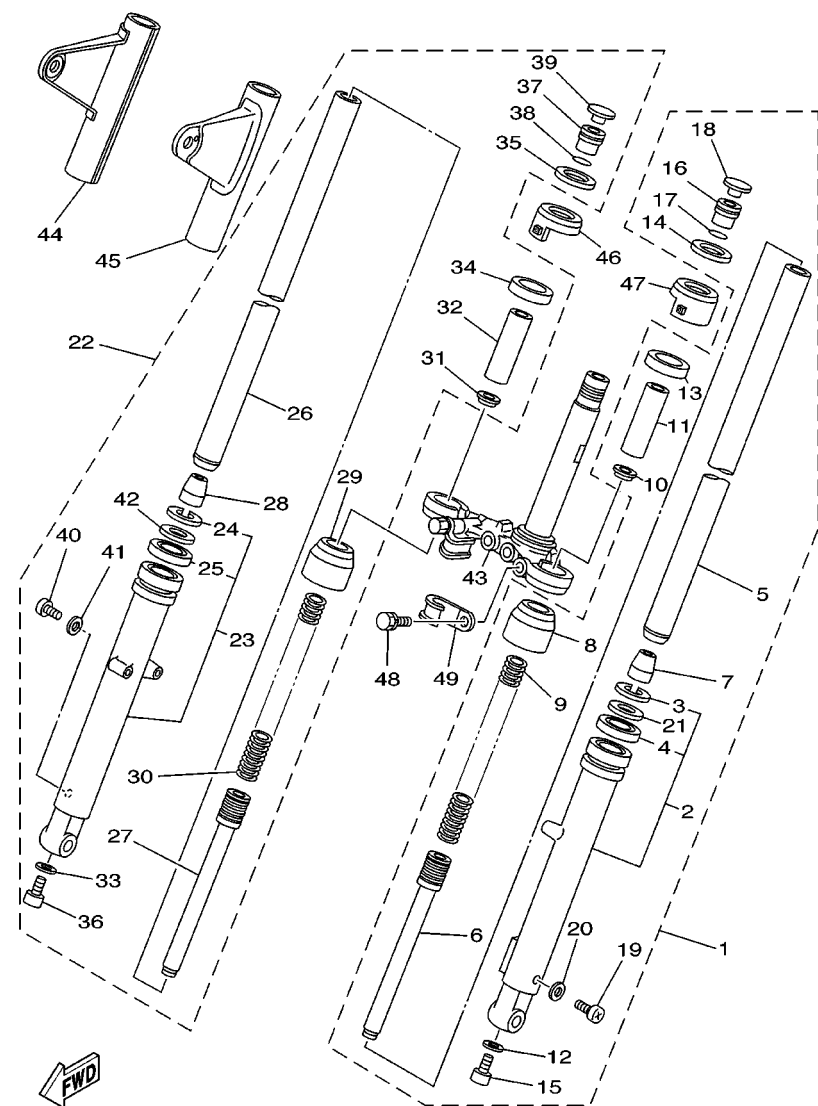


5RA1200-0201

FIG. 20 FRONT FORK

HORQUILLA DELANTERA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36LO	36L2	36L4	5RA1	REMARKS OBSERVACION
24	36L-F3156-00	CLIP,OIL SHEAL PALANCA CONTOROL DE BOMBA	1	1	1	1	1	
	36L-F3156-00	.RING, SNAP .ANILLO DE ENGANCHE	1	1	1	1	1	
	36L-F3156-00	.RING, SNAP .ANILLO DE ENGANCHE	1	1	1	1	1	
25	36L-F3145-00	.OIL SEAL .SELLO DE ACEITE	1	1	1	1	1	
	36L-F3145-00	.OIL SEAL .SELLO DE ACEITE	1	1	1	1	1	
26	36L-F3110-00	.INNER TUBE COMP.1 .TUBO INTERIOR COMPLETO 1	1	1	1	1	1	
27	36L-F3170-K0	.CYLINDER COMP., FRONT FORK .CILINDRO COMPL DE HORQ DELAN	1	1	1			
	36L-F3170-00	.CYLINDER COMP., FRONT FORK .CILINDRO COMPL DE HORQ DELAN					1	1
28	36L-F3173-00	.SPINDLE, TAPER .VASTAGO AHUSADO	1	1	1	1	1	
29	36L-F3144-00	.SEAL, DUST .SELLO PARA POLVO	1	1	1	1	1	
30	36L-F3141-00	.SPRING, FRONT FORK .RESORTE HORQUILLA DELANT.	1	1	1	1	1	
31	36L-F3146-00	.GUIDE, SPRING .GUIA DE RESORTE	1	1	1	1	1	
32	36L-F3118-00	.SPACER .ESPACIADOR	1	1	1	1	1	
33	36L-F3158-L0	.GASKET .EMPAQUE	1	1	1	1	1	
34	36L-F3163-00	.GASKET .EMPAQUE	1	1	1	1	1	
35	36L-F3116-00	.GUIDE, COVER LOWER .GUIA DE CUBIERTA INFERIOR	1	1	1	1	1	
36	36L-F3181-50	.BOLT, HEXAGON SOCKET HEAD .PERNO CABEZA EXAGONAL	1	1	1			
	36L-F3181-00	.BOLT, HEXAGON SOCKET HEAD .PERNO CABEZA EXAGONAL					1	1
37	36L-F3111-00	.BOLT,CAP .PLATA DE TERMINO DELANTERO	1	1	1	1	1	
38	36L-F3114-00	.GASKET .EMPAQUE	1	1	1			
	36L-F3147-00	.O-RING .ANILLO O					1	1
39	36L-F3168-00	.CAP, FRONT FORK .TAPA DE HORQUILLA DELANTERA	2	2	2	2	1	
40	36L-F3119-00	.PLUG, DRAIN .TAPON DE LLAVE DE VACIADO	1	1	1	1	1	
41	36L-F3129-00	.GASKET, DRAIN PLUG .EMPAQUE DE TAPON DRENAJE	1	1	1	1	1	
42	36L-F3165-00	.WASHER, FELT .ARANDELA DE FIELTRO					1	1
43	36L-F3340-K0	.UNDER BRACKET COMP. .SOPORTE INFERIOR COMPLETO	1	1	1	1	1	
44	36L-F3131-00	.COVER, UPPER 2 .CUBIERTA SUPERIOR 2	1	1	1	1	1	

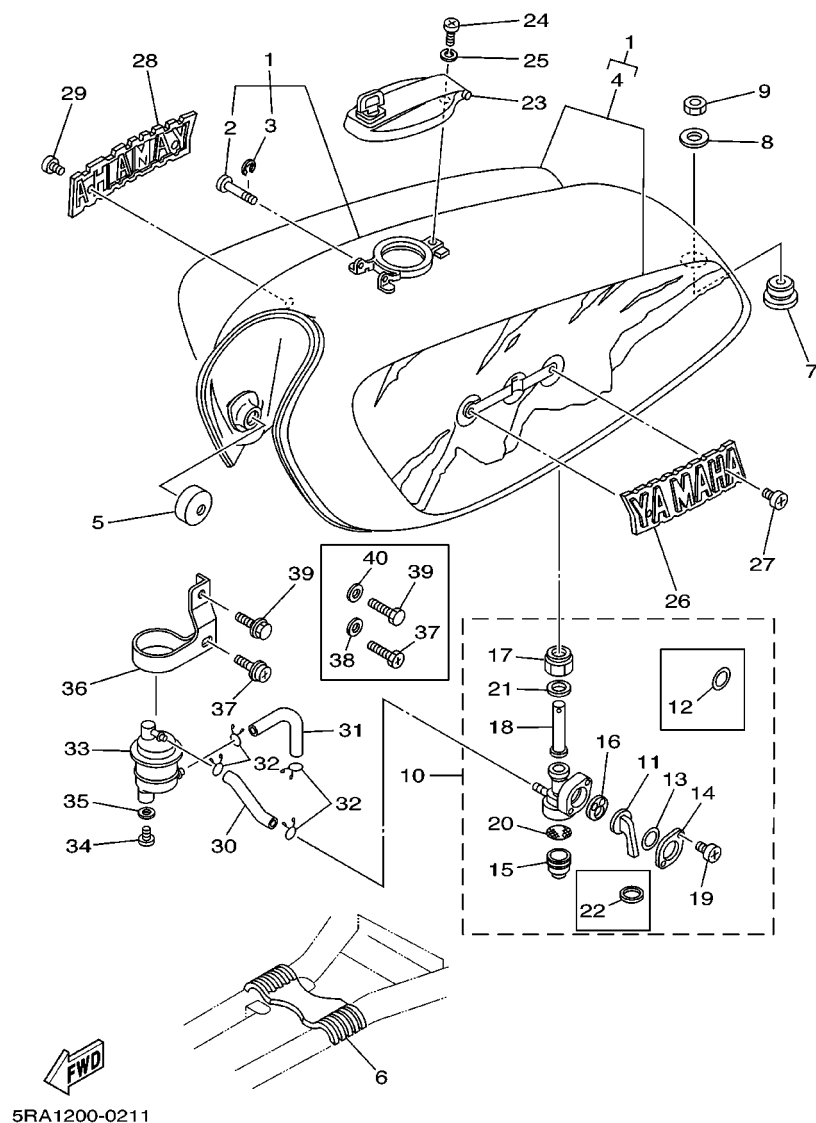

5RA1200-0211

FIG. 21 FUEL TANK

DEPOSITO DE COMBUSTIBLE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36F-F4100-00-H6	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.	1	1				UR MM
	36L-F4100-00-H9	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.	1	1				UR BG
	36L-F4100-00-20	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.	1	1				UR ACB
	36F-F4100-10-H9	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.			1			UR BG
	36L-F4100-10-P2	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.			1			UR VRC7
	36L-F4100-10-9V	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.			1			UR ACB
	36L-F4100-10-35	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.			1			UR SL
	36L-F4100-40	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.				1		UR BG
	36L-F4100-50	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.				1		UR VRC7
	36L-F4100-60	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.				1		UR ACB
	36L-F4100-70	FUEL TANK ASSY TANQUE COMBUSTIBLE COMPL.				1		UR SL
	36L-F4110-01-36	FUEL TANK COMP. DEPOSITO DE COMBUSTIBLE COMP.					1	UR WW
	36L-F4110-01-P2	FUEL TANK COMP. DEPOSITO DE COMBUSTIBLE COMP.					1	UR VRC7
	36L-F4110-01-9V	FUEL TANK COMP. DEPOSITO DE COMBUSTIBLE COMP.					1	UR ACB
2	90249-03123	.PIN .PASADOR					1	1
3	93430-02001	.CIRCLIP .PRESILLA (ND)					1	1
4	36L-F4240-00	.GRAPHIC SET. .JUEGO DE CALCOMANIAS.	1	1				UR FOR MM
	36L-F4240-30	.GRAPHIC SET. .JUEGO DE CALCOMANIAS.	1	1				UR FOR BG
	36L-F4240-40	.GRAPHIC SET. .JUEGO DE CALCOMANIAS.	1	1				UR FOR SL
	36L-F4240-50	.GRAPHIC SET .JUEGO DE CALCOMANIAS			1			UR FOR BG
	36L-F4240-60	.GRAPHIC SET .JUEGO DE CALCOMANIAS			1			UR FOR VRC7
	36L-F4240-70	.GRAPHIC SET .JUEGO DE CALCOMANIAS			1			UR FOR ACB
	36L-F4240-80	.GRAPHIC SET .JUEGO DE CALCOMANIAS			1			UR FOR SL
	36L-F4240-90	.GRAPHIC SET .JUEGO DE CALCOMANIAS				1		UR FOR BG
	36L-F4240-A0	.GRAPHIC SET .JUEGO DE CALCOMANIAS				1		UR FOR VRC7
	36L-F4240-B0	.GRAPHIC SET .JUEGO DE CALCOMANIAS				1		UR FOR ACB
4	36L-F4240-C0	.GRAPHIC SET .JUEGO DE CALCOMANIAS				1		UR FOR SL

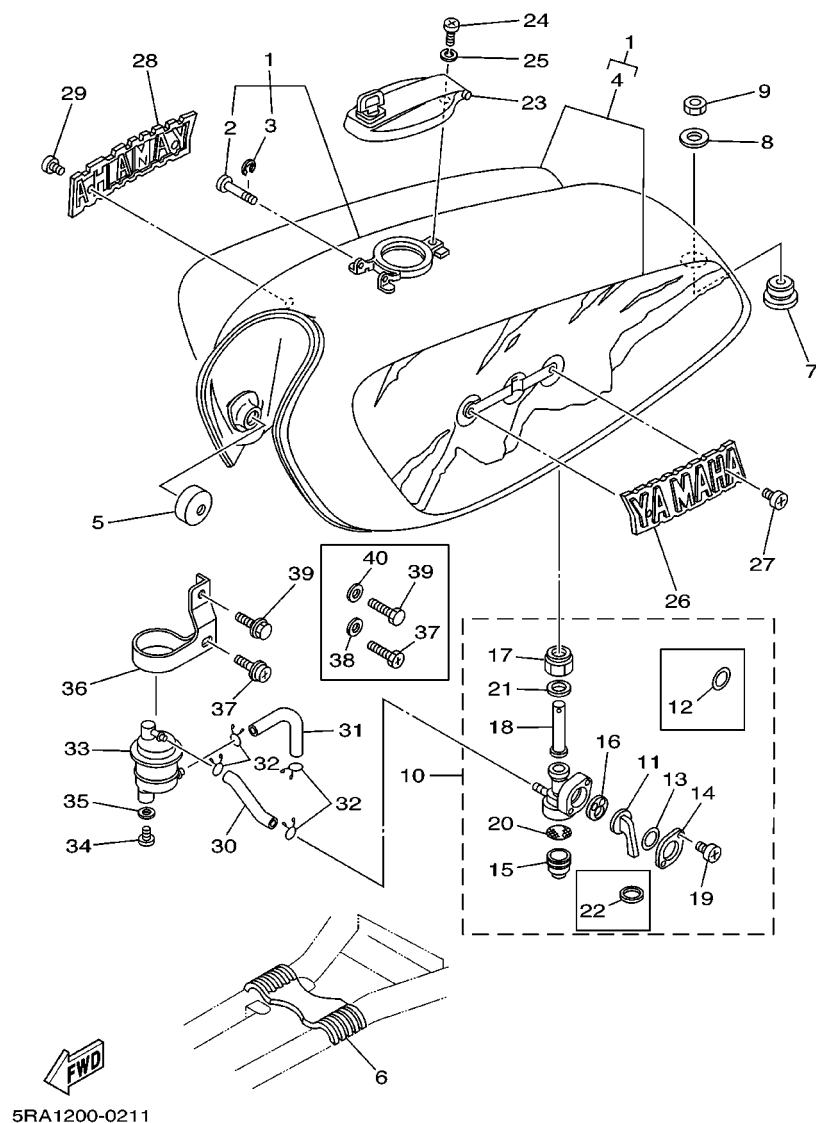


FIG. 21 FUEL TANK

DEPOSITO DE COMBUSTIBLE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
5	36L-F4181-00	DAMPER, LOCATING 1 AMORTIGUADOR DE UBICACION 1	2	2	2	2	2	
6	36L-F4182-00	DAMPER, LOCATING 2 AMORTIGUADOR DE UBICACION 2	1	1	1	1	1	
7	90480-25189	GROMMET ANILLO PROTECTOR	1	1	1	1	1	
8	90201-08612	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
9	95337-08600	NUT TUERCA	1	1	1			
	95307-08600	NUT TUERCA				1	1	
10	36L-F4500-01	FUEL COCK ASSY 1 GRIFO DE COMBUSTIBLE 1	1					
	36L-F4500-02	FUEL COCK ASSY 1 GRIFO DE COMBUSTIBLE 1		1	1	1	1	
11	36L-F4524-00	.LEVER, COCK .PALANCA DE GRIFO	1	1	1	1	1	
12	36L-F4576-00	.WASHER .ARANDELA	1					
13	36L-F4518-00	.WASHER, WAVE .ARANDELA ONDULADA	1	1	1	1	1	
14	36L-F4525-00	.PLATE, LEVER FITTING .PLACA ACCESORIA DE PALANCA	1	1	1	1	1	
15	36L-F4521-00	.CUP, FILTER .COPA DE FILTRO	1	1	1	1	1	
16	36L-F4523-00	.VALVE .VALVULA	1	1	1	1	1	
17	36L-F4531-00	.NUT .TUERCA	1	1	1	1	1	
18	36L-F4560-00	.FILTER ASSY .FILTRO COMPLETO		1	1	1	1	
19	36L-F4535-00	.SCREW, LEVER FITTING .TORNILLO ACCESORIO DE PALANC	2					
	98907-03008	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		2	2	2	2	
20	36L-F4515-00	.NET, FILTER 2 .RED DE FILTRO 2	1	1	1	1	1	
21	36L-F4532-V0	.GASKET .EMPAQUE	1					
	36L-F4532-01	.GASKET .EMPAQUE		1	1	1	1	
22	36L-F4522-V0	.GASKET .EMPAQUE	1					
23	36L-F4650-V1	CAP ASSY TAPA COMPLETA	1	1	1	1	1	
24	97607-05208	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1					
	98507-05008	SCREW, PAN HEAD TORNILLO CABEZA REDONDA		1	1	1	1	
25	92907-05600	.WASHER, PLATE ARANDELA DE PLACA	1					
25	92907-05100	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	

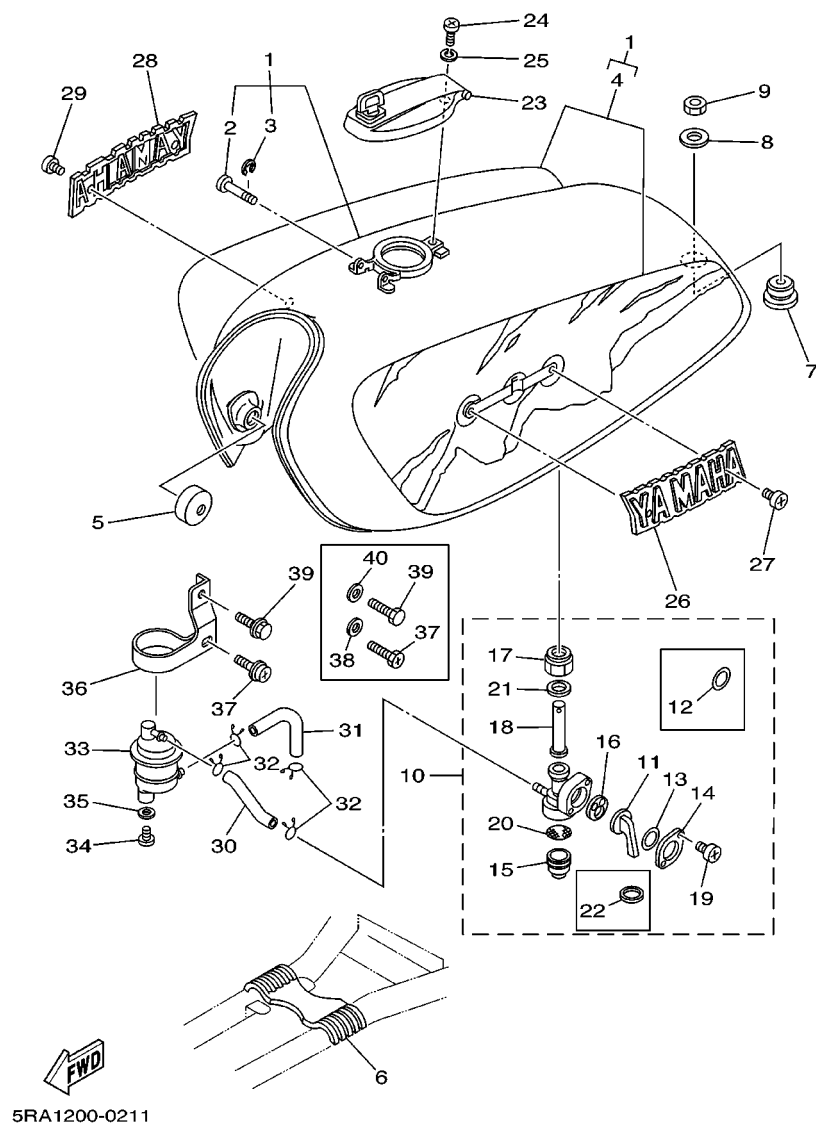


FIG. 21 FUEL TANK

DEPOSITO DE COMBUSTIBLE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36LO	36L2	36L4	5RA1	REMARKS OBSERVACION
26	36L-F4161-10	EMBLEM 1 EMBLEMA 1	1	1	1	1	1	
27	90152-04006	SCREW, COUNTERSUNK TORNILLO RANURADO	2	2	2	2	2	
28	36L-F4162-10	EMBLEM 2 EMBLEMA 2	1	1	1	1	1	
29	90152-04006	SCREW, COUNTERSUNK TORNILLO RANURADO	2	2	2	2	2	
30	90445-09264	HOSE (L72) TUBO (L72)	1					
	90445-09809	HOSE MANGUERA		1	1	1	1	
31	90445-09059	HOSE (L59) TUBO (L59)	1	1	1	1	1	
32	90467-08003	CLIP GRAMPA	4	4	4	4	4	
33	36L-F4560-01	FILTER ASSY FILTRO COMPLETO	1	1	1	1	1	
34	98907-05010	SCREW, BIND TORNILLO DE LIGAR	1					
	98507-05010	SCREW, PAN HEAD TORNILLO CABEZA REDONDA		1	1	1	1	
35	90202-04801	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
36	2YA-F4568-00	BAND, FILTER BANDA DE FILTO	1	1	1	1	1	
37	98507-05010	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1					
	97607-06212	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		1	1	1	1	
38	92907-05600	WASHER, PLATE ARANDELA DE PLACA	1					
39	97027-06012	BOLT PERNO	1					
	97507-06612	BOLT, WITH WASHER PERNO CON ARANDELA		1	1	1	1	
40	92907-06600	WASHER, PLATE ARANDELA DE PLACA	1					


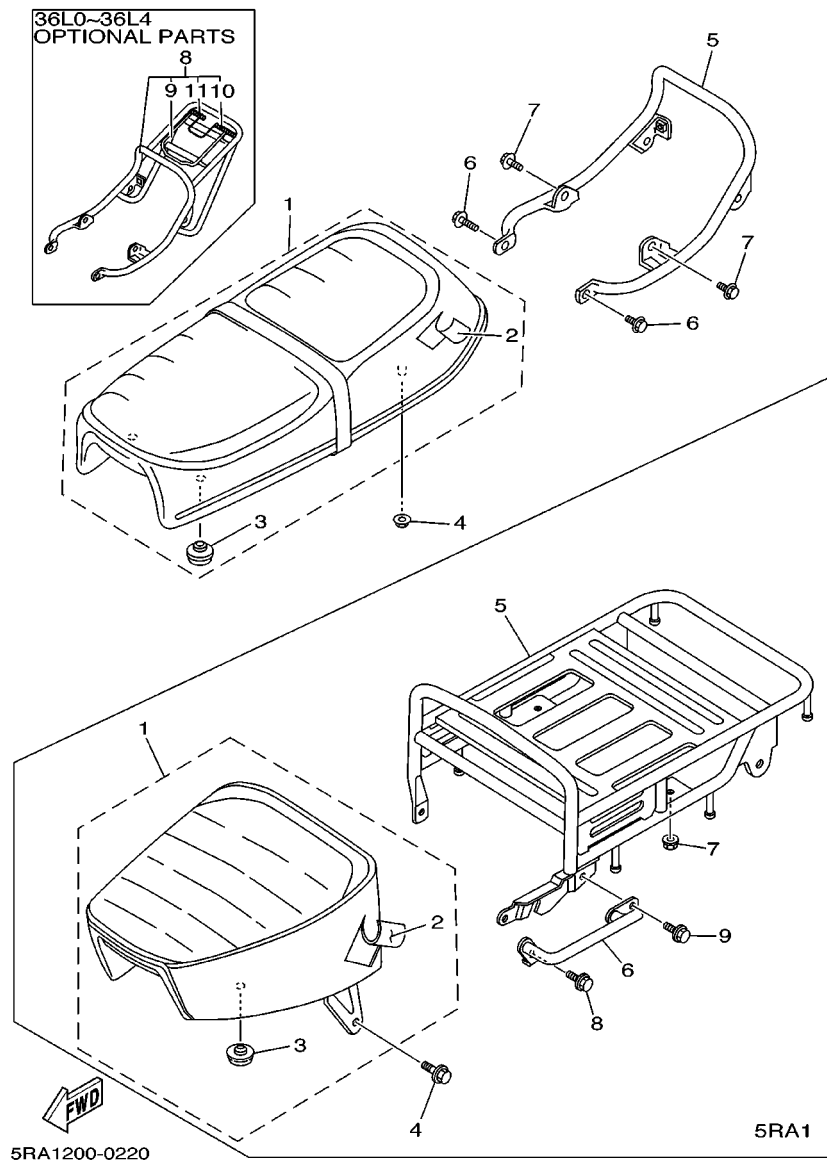


FIG. 22 SEAT

ASIENTO

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPCION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F4730-10	DOUBLE SEAT ASSY	1					
	36L-F4730-00	ASIENTO DOBLE COMPLETO		1	1	1		
	5RA-F4710-00	SINGLE SEAT ASSY					1	
		ASIENTO SIMPLE COMPLETO						
2	36L-F4731-00	.COVER, SEAT	1	1	1	1		
	5RA-F4731-00	.FUNDADE SILLIN					1	
		.COVER, SEAT						
		.FUNDADE SILLIN						
3	36L-F4741-00	.PAD, SEAT	4	4	4	4		
	5RA-F4741-00	.COJIN DE ASIENTO					2	
		.PAD, SEAT						
		.COJIN DE ASIENTO						
4	95707-08500	NUT, FLANGE	2	2	2	2		
	97007-08016	TUERCA DE BRIDA					2	
		BOLT						
		PERNO						
5	36L-F474A-00	ASSIST, GRIP	1	1	1	1		
	5RA-F4810-00	FIADOR DE EMPUNADURA					1	
		CARRIER ASSY						
		PORTADOR COMPLETO						
6	95817-06012	BOLT, FLANGE	2	2	2			
	95807-06016	PERNO, DE BRIDA				2		
	5RA-F4773-00	BOLT, FLANGE					1	
		PERNO, DE BRIDA						
		HANDLE, SEAT						
		MANIJA DE ASIENTO						
7	95817-08012	BOLT, FLANGE	2	2	2			
	95807-08012	PERNO, DE BRIDA				2		
	95807-08012	BOLT, FLANGE					2	
	95807-08012	PERNO, DE BRIDA						
	95707-08500	NUT, FLANGE						
		TUERCA DE BRIDA						
8	36L-F4831-00	SUB CARRIER	1	1	1	1		
	95807-06014	SUBPORTADOR					1	
		BOLT, FLANGE						
		PERNO, DE BRIDA						
9	36L-F4847-90	HOLDER 1	1	1	1			
	95807-08014	SOPORTE 1					1	
		BOLT, FLANGE						
		PERNO, DE BRIDA						
10	36L-F4393-00	SPRING	1	1	1	1		
		RESORTE						
11	36L-F4393-10	SPRING	1	1	1	1		
		RESORTE						

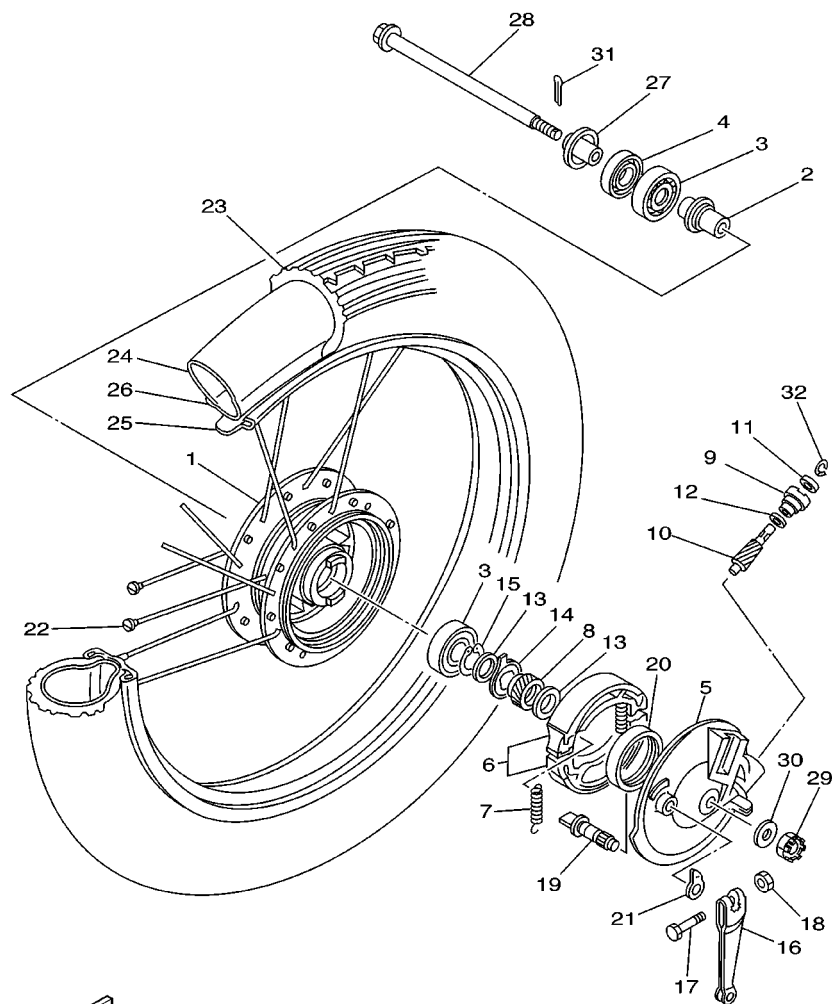

5RA1200-0231

FIG. 23 FRONT WHEEL

RUEDA DELANTERA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F5111-10	HUB, FRONT MASA DELANTERA	1	1	1	1	1	CLP
2	36L-WF512-00	SPACER ASSY BRIDA DE ESPACIADOR 1	1					
	90560-12814	SPACER ESPACIADOR		1	1	1	1	
3	93306-301Y3	BEARING COJINETE	2	2	2	2	2	
4	93102-18802	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
5	36L-F5121-10	PLATE, BRAKE SHOE PLACA DE ZAPATA DE FRENO	1	1	1	1	1	
6	36L-WF536-00	BRAKE SHOE SET JUEGO DE ZAPATA DE FRENO	2	2	2	1	1	
7	90506-17328	SPRING, TENSION RESORTE DE TENSION	2	2	2			
	90506-16036	SPRING, TENSION RESORTE DE TENSION				2	2	
8	36L-F5135-00	GEAR, DRIVE ENGRANAJE TRACCION	1	1	1	1		
	4TL-F5135-00	GEAR, DRIVE ENGRANAJE TRACCION					1	
9	36L-F5136-00	BUSH BUJE	1	1	1	1	1	
10	36L-F5138-00	GEAR, METER ENGRANAJE DE MEDIDOR	1	1	1	1		
	4TL-F5138-00	GEAR, METER ENGRANAJE DE MEDIDOR					1	
11	93104-07804	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
12	90201-07076	WASHER, PLATE ARANDELA DE PLACA	1	1	1	1	1	
13	90201-20269	WASHER, PLATE ARANDELA DE PLACA	2	2	2	2	2	
14	36L-F5149-00	CLUTCH, METER EMBRAGUE DE MEDIDOR	1	1	1	1	1	
15	93410-20808	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
16	36L-F5155-00	LEVER, CAMSHAFT 1 PALANCA DE ARBOL DE LEVAS	1	1	1	1	1	
17	90101-06278	BOLT PERNO	1	1	1	1	1	
18	95307-06600	NUT TUERCA	1	1	1	1	1	
19	36L-F5351-00	CAMSHAFT ARBOL DE LEVAS	1	1	1	1	1	
20	93105-47801	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
21	36L-F513A-00	PLATE, INDICATOR PLACA DE INDICADOR	1	1	1	1	1	
22	36L-F5304-01	SPOKE SET, REAR JUEGO DE RAYOS TRASEROS	1	1	1	1	1	
23	94125-18838	TIRE (2.50-18) NEUMATCO (2.50-18)	1	1	1	1		

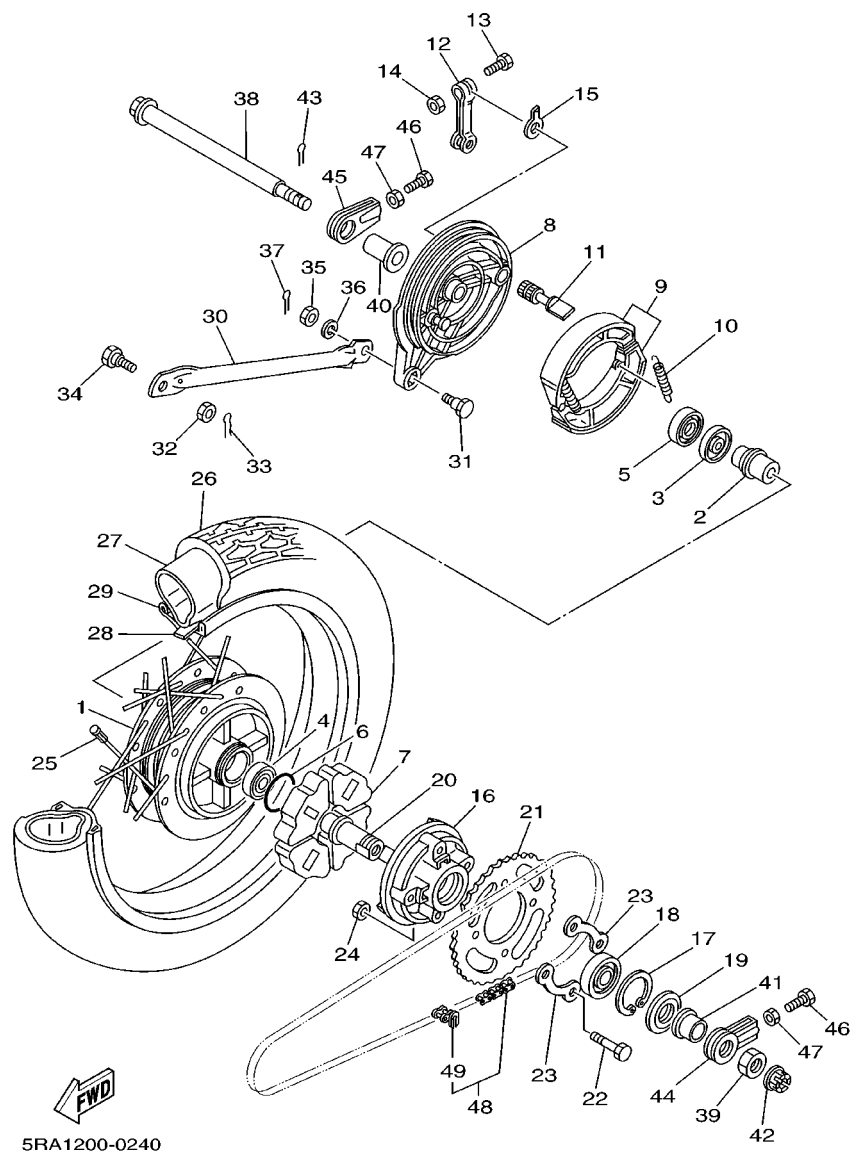


FIG. 24 REAR WHEEL

RUEDA TRASERA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F5311-10	HUB, REAR MASA TRASERA	1	1	1	1	1	
2	36L-WF512-10	SPACER ASSY BRIDA DE ESPACIADOR 1	1	1	1			
	90560-15136	SPACER ESPACIADOR				1	1	
3	93306-202Y0	BEARING COJINETE	1	1	1	1	1	
4	93306-202Y1	BEARING COJINETE	1	1	1	1	1	
5	93104-22805	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
6	93210-42807	O-RING ANILLO O	1	1	1	1	1	
7	36L-F5364-00	DAMPER AMORTIGUADOR	4	4	4	4	4	
8	36L-F5321-10	PLATE, BRAKE SHOE PLACA DE ZAPATA DE FRENO	1	1	1	1	1	CLP
9	36L-WF536-00	BRAKE SHOE SET JUEGO DE ZAPATA DE FRENO	2	2	2	1	1	
10	90506-17328	SPRING, TENSION RESORTE DE TENSION	2	2	2			
	90506-16036	SPRING, TENSION RESORTE DE TENSION				2	2	
11	36L-F5351-00	CAMSHAFT ARBOL DE LEVAS	1	1	1	1	1	
12	36L-F5355-00	LEVER, CAMSHAFT PALANCA DE ARBOL DE LEVAS	1	1	1	1	1	
13	90101-06278	BOLT PERNO	1	1	1	1	1	
14	95307-06600	NUT TUERCA	1	1	1	1	1	
15	36L-F533A-00	PLATE, INDICATOR PLACA DE INDICADOR	1	1	1	1	1	
16	36L-F5366-10	CLUTCH, HUB EMBRAGUE DE MASA	1	1	1	1	1	
17	93420-42801	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
18	93306-004Y0	BEARING COJINETE	1	1	1	1	1	
19	93106-26801	OIL SEAL SELLO DE ACEITE	1	1	1	1	1	
20	36L-F5387-01	AXLE, SPROCKET EJE DE CORONA	1	1	1	1	1	
21	36L-F5439-00	SPROCKET, DRIVEN (39T) TAPON CIEGO	1	1	1	1	1	
22	90109-08361	BOLT PERNO	4	4	4	4	4	
23	36L-F5412-00	WASHER ARANDELA	2	2	2	2	2	
24	90179-08639	NUT TUERCA	4	4	4			
	90179-08168	NUT TUERCA				4	4	

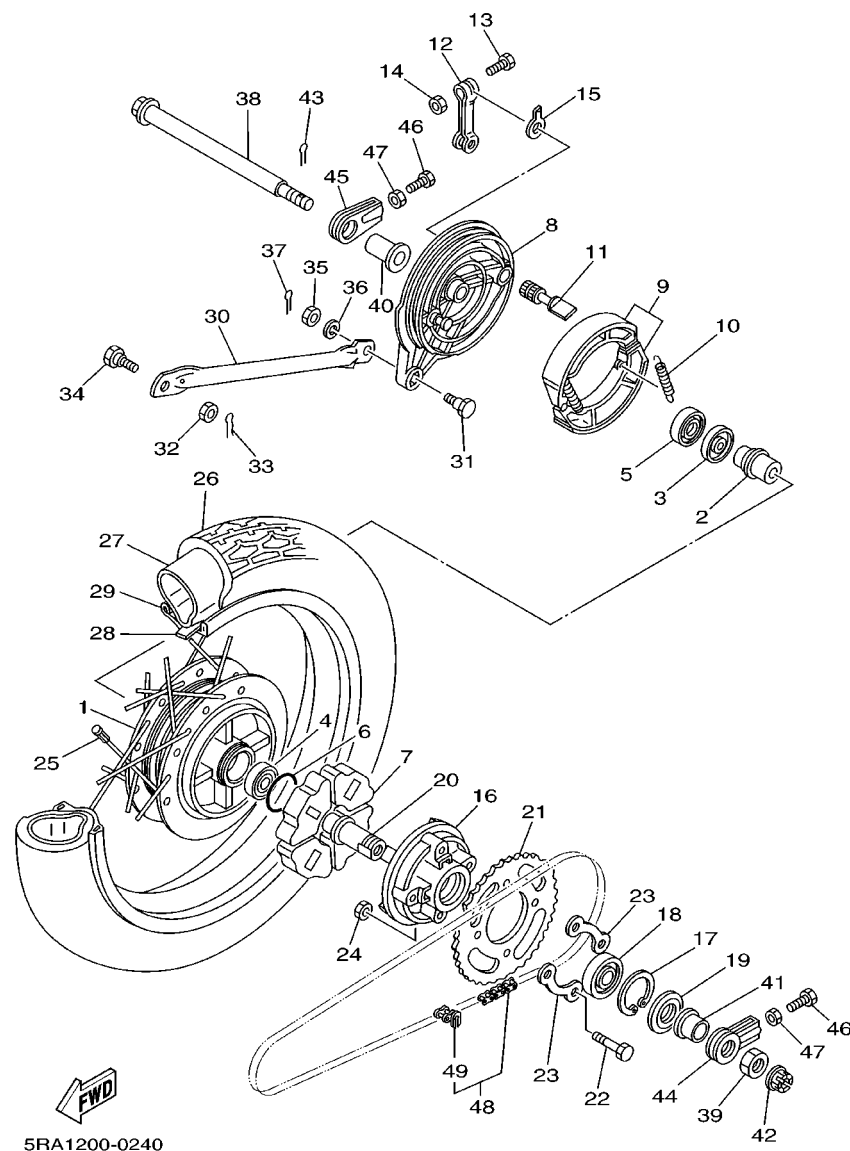


FIG. 24 REAR WHEEL

RUEDA TRASERA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
25	36L-F5304-01	SPOKE SET, REAR JUEGO DE RAYOS TRASEROS	1	1	1	1	1	
26	94127-18839	TIRE (2.75-18) NEUMATICO (2.75-18)	1	1	1	1		
	94130-18800	TIRE (3.00-18) NEUMATICO (3.00-18)					1	
27	94227-18824	TUBE (2.75-18) TUBO (2.75-18)	1	1	1	1	1	
28	94325-18822	BAND, RIM (2.50-18) BANDA DE ARO (2.50-18)	1	1	1	1	1	
29	94414-18832	RIM (1.40-18) ARO (1.40-18)	1	1	1	1		
	94414-18800	RIM (1.60-18) ARO (1.60-18)					1	
30	36L-F5371-00	BAR, TENSION BARRA DE TENSION	1	1	1	1	1	
31	90109-08063	BOLT PERNO	1	1	1	1	1	
32	95337-08600	NUT TUERCA	1	1	1			
	95307-08600	NUT TUERCA				1	1	
33	90468-10050	CLIP GRAMPA	1					
	90468-12007	CLIP GRAMPA		1	1	1	1	
34	90109-08368	BOLT PERNO	1	1	1	1	1	
35	95317-08700	NUT TUERCA	1					
	95307-08700	NUT TUERCA		1	1	1	1	
36	92907-08100	WASHER, SPRING ARANDELA DE RESORTE	2	2	2	2	2	
37	91401-20015	PIN, COTTER PASADOR DE CHAVETA	1	1	1	1	1	
38	36L-F5381-01	AXLE, WHEEL EJE DE RUEDA	1	1	1	1	1	
39	90170-20167	NUT TUERCA	1					
	90170-20224	NUT TUERCA		1	1	1	1	
40	90387-15425	COLLAR COLLAR	1	1	1			
	90387-158W7	COLLAR COLLAR				1	1	
41	90387-20165	COLLAR COLLAR	1	1	1			
	90387-208W8	COLLAR COLLAR				1	1	
42	90171-14056	NUT, CASTLE TUERCA ENTALLADA	1					
	90171-14020	NUT, CASTLE TUERCA ENTALLADA		1	1	1	1	

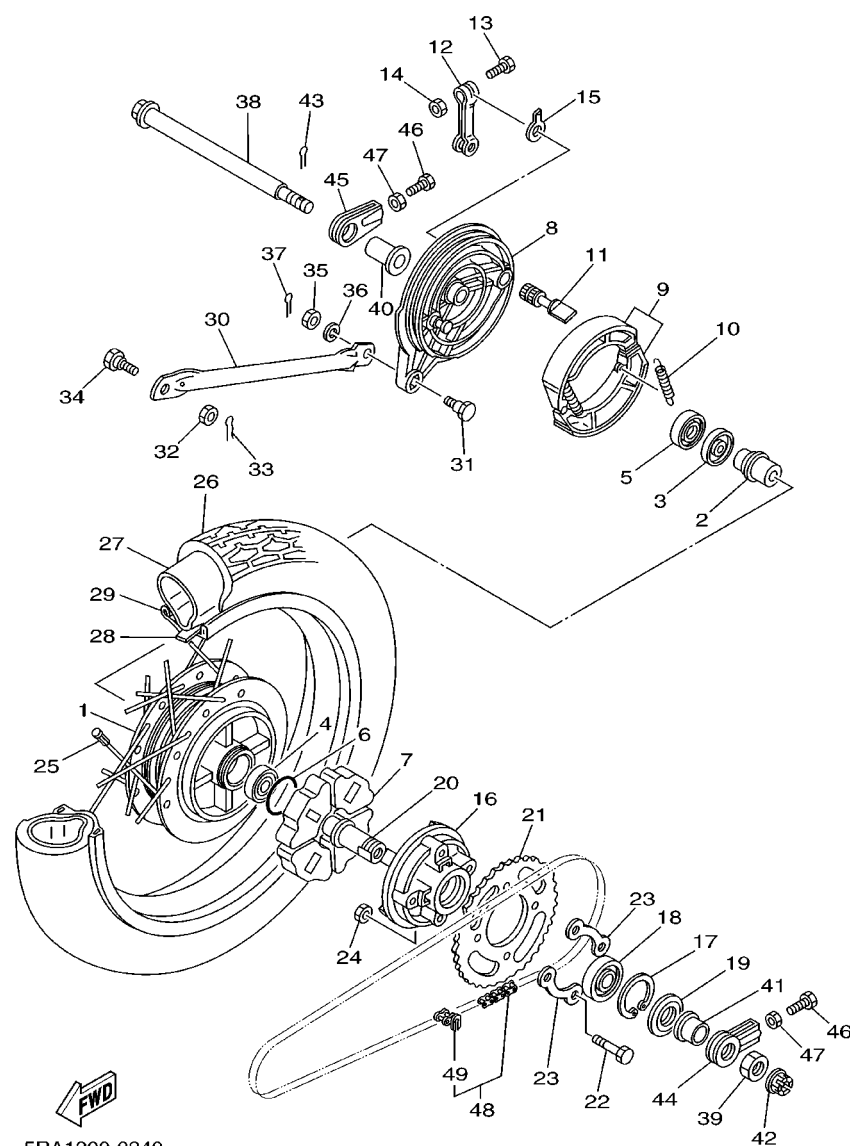


FIG. 24 REAR WHEEL

[illegible]

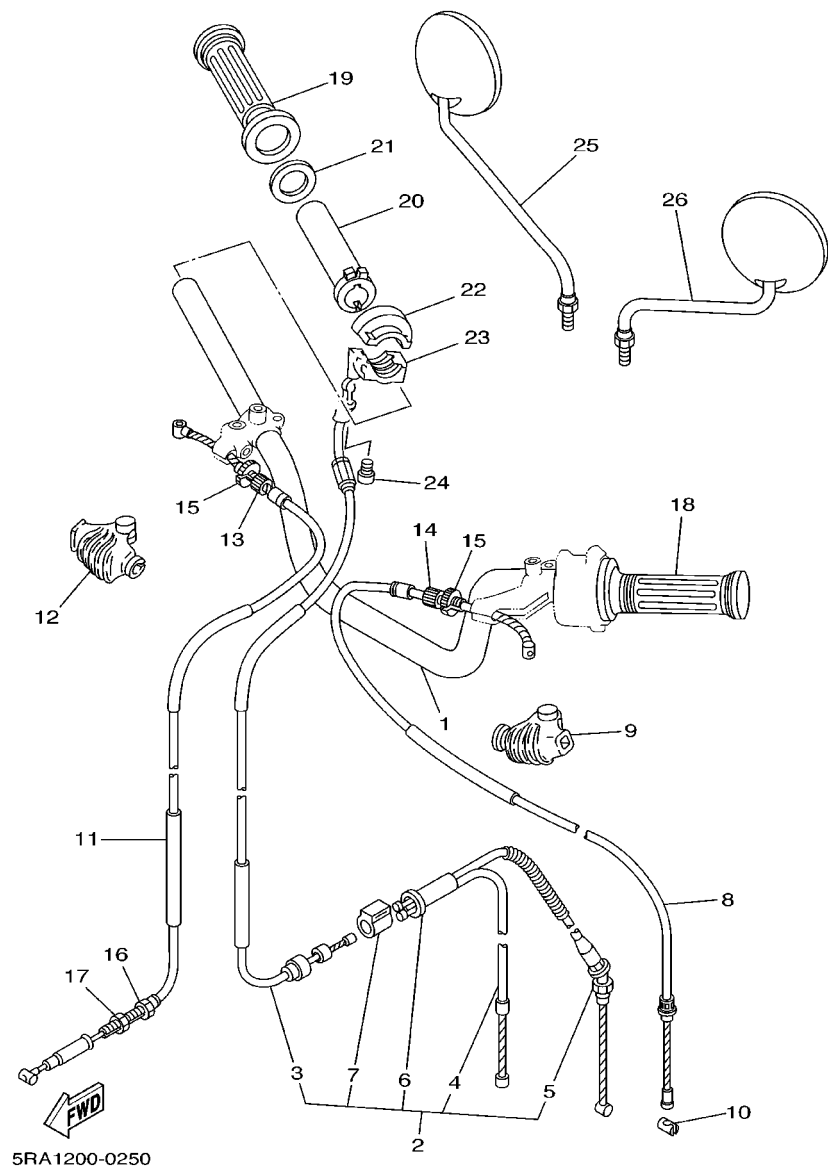


FIG. 25 STEERING HANDLE. CABLE MANUBRIO. CABLE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F6110-00	HANDLE COMP. MANUBRIO COMPLETE	1	1	1			
	36L-F6111-00	HANDLEBAR MANUBRIO				1	1	
2	36L-F6260-00	CABLE ASSY, THROTTLE & PUMP CABLE OBTURADOR Y BOMBA	1	1	1	1	1	
3	36L-F6311-00	.CABLE, THROTTLE 1 .CABLE DE ACELERADOR 1	1	1	1	1	1	
4	36L-F6312-00	.CABLE, THROTTLE 2 .CABLE DE ACELERADOR 2	1	1	1	1	1	
5	36L-F6321-00	.CABLE, PUMP .CABLE DE BOMBA	1	1	1	1	1	
6	36L-F6261-00	.CONNECTOR, CABLE .CONECTOR DE CABLE	1	1	1	1	1	
7	36L-F6268-00	.HOLDER, CABLE CONNECTOR .SOPORTE DE CABLE CONECTOR	1	1	1	1	1	
8	36L-F6335-00	CABLE, CLUTCH CABLE DE EMBRAGUE	1	1	1	1	1	
9	36L-F6372-00	COVER, HANDLE LEVER 1 CUBIERTA DE PALANCA DE MANUB 1	1	1	1	1	1	
10	36L-F6363-01	END, CABLE PIEZA EXTREMO DE CABLE	1	1	1	1	1	
11	36L-F6341-00	CABLE, BRAKE CABLE DE FRENO	1	1	1	1	1	
12	36L-F6372-00	COVER, HANDLE LEVER 1 CUBIERTA DE PALANCA DE MANUB 1	1	1	1	1	1	
13	90123-08013	BOLT PERNO	1	1	1	1	1	
14	90123-08046	BOLT PERNO	1	1	1	1	1	
15	90179-08148	NUT TUERCA	2	2	2	2	2	
16	90123-06010	BOLT PERNO	1	1	1	1	1	
17	90179-06143	NUT TUERCA	1	1	1	1	1	
18	36L-F6241-00	GRIP EMPUNADURA	1	1	1	1	1	
19	36L-F6242-00	GRIP (RIGHT) EMPUNADURA (MD)	1	1	1	1	1	
20	36L-F6243-00	TUBE, THROTTLE GUIDE TUBO DE GUIA DE OBTURADOR	1	1	1	1	1	
21	36L-F6249-00	RING, LEAF ANILLO DE FLEJE	1	1	1	1	1	
22	36L-F6281-00	CAP, GRIP UPPER TAPA DE EMPUNADURA SUPERIOR	1	1	1	1	1	
23	36L-F6282-00	CAP, GRIP LOWER TAPA DE EMPUNADURA INFERIOR	1	1	1	1	1	
24	98586-05016	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2	2	2			
	90157-05116	SCREW, PAN HEAD TORNILLO CABEZA REDONDA				2	2	
25	36L-F6290-00	REAR VIEW MIRROR ASSY (RIGHT) ESPEJO COMPLETO (DERECHO)	1	1	1	1	1	


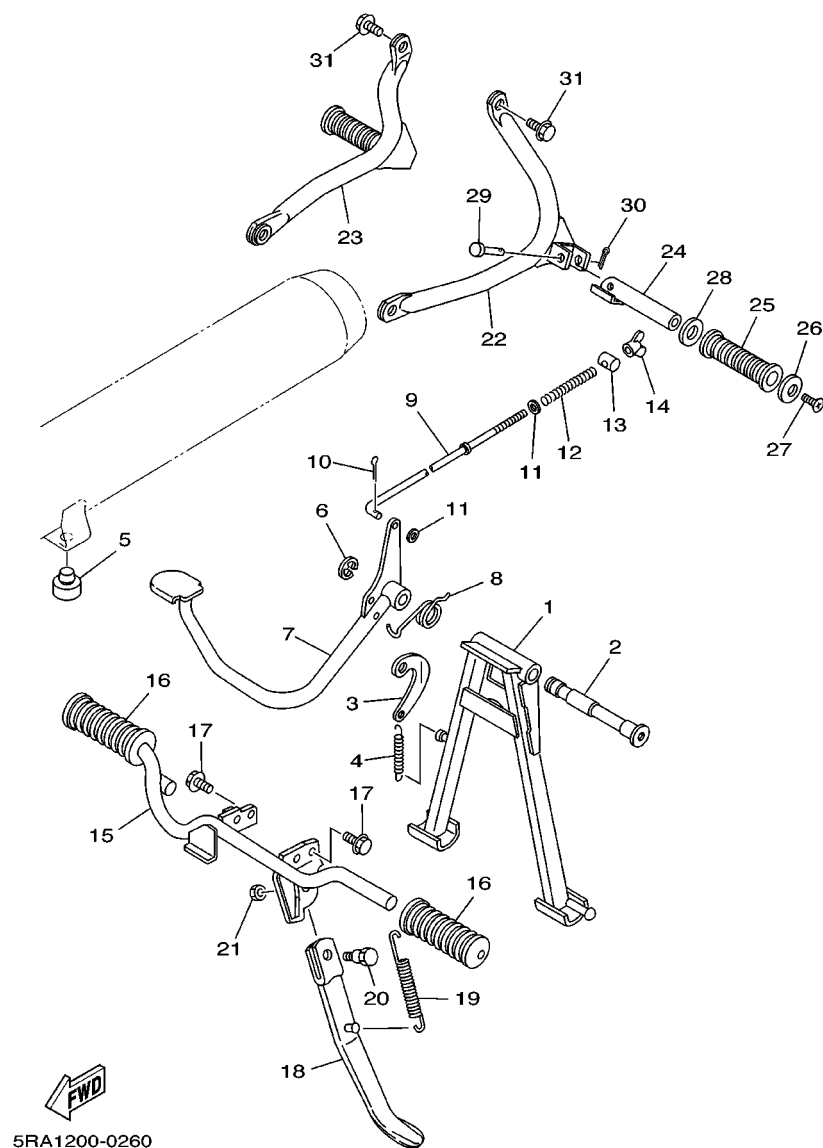


FIG. 26 STAND. FOOTREST

SOPORTE. APOYAPIE

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-F7111-00	STAND, MAIN PUNTAL PRINCIPAL	1	1	1	1		
	5RA-F7111-00	STAND, MAIN PUNTAL PRINCIPAL					1	
2	36L-F7112-00	SHAFT, MAIN STAND EJE DE PUNTAL PRINCIPAL	1	1	1	1	1	
3	36L-F7115-00	LINK, MAIN STAND CONEXION DE PUNTAL PRINCIPAL	1	1	1	1	1	
4	90506-29054	SPRING, TENSION RESORTE DE TENSION	1	1	1	1	1	
5	36L-F7114-00	STOPPER, MAIN STAND TOPE DE PUNTAL PRINCIPAL	1	1	1	1	1	
6	93430-12809	CIRCLIP PRESILLA (ND)	1	1	1	1	1	
7	36L-F7211-01	PEDAL, BRAKE PEDAL DE FRENO	1	1	1	1	1	
8	90508-32056	SPRING, TORSION RESORTE DE TORSION	1	1	1	1	1	
9	36L-F7231-00	ROD, BRAKE VARILLA DE FRENO	1	1	1	1	1	
10	91401-20015	PIN, COTTER PASADOR DE CHAVETA	1	1	1	1	1	
11	92907-06600	WASHER, PLATE ARANDELA DE PLACA	2	2	2	2	2	
12	90501-10245	SPRING, COMPRESSION RESORTE DE COMPRESION	1	1	1	1	1	
13	90249-12008	PIN PASADOR	1	1	1	1	1	
14	90175-06013	NUT, WING TUERCA MARIPOSA	1	1	1	1	1	
15	36L-F7411-00	FOOTREST 1 APOYAPIE 1	1	1	1	1	1	
16	36L-F7413-00	COVER, FOOTREST CUBIERTA DE APOYAPIE	2	2	2	2	2	
17	95817-08020	BOLT, FLANGE PERNO, DE BRIDA	2					
	95807-08020	BOLT, FLANGE PERNO, DE BRIDA		2	2	2	2	
18	36L-F7311-00	STAND, SIDE PUNTAL LATERAL	1	1	1	1		
	5RA-F7311-00	STAND, SIDE PUNTAL LATERAL					1	
19	90506-25047	SPRING, TENSION RESORTE DE TENSION	1	1	1	1	1	
20	90109-08032	BOLT PERNO	1	1	1	1		
	90109-08810	BOLT PERNO					1	
21	95317-08700	NUT TUERCA	1					
	95307-08700	NUT TUERCA		1	1	1	1	
22	36L-F7432-00	BRACKET 1 SOPORTE 1	1	1	1	1	1	

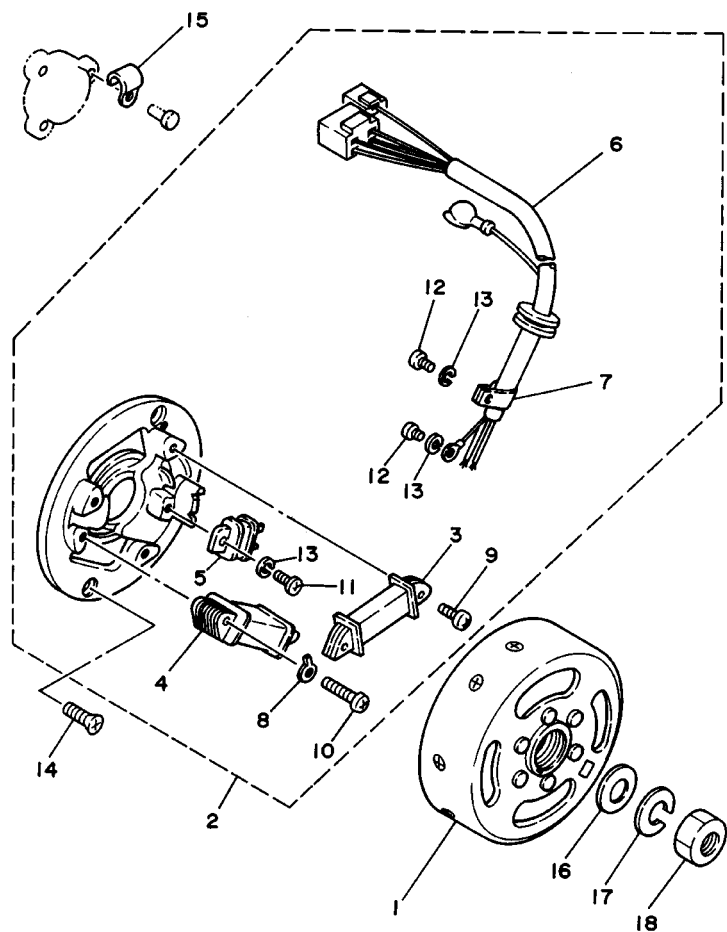

58X440-5310

FIG. 27 GENERATOR

GENERADOR

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H5550-00	ROTOR ASSY ROTOR COMPLETO	1					NA
	36L-H5550-V0	ROTOR ASSY ROTOR COMPLETO	1	1	1	1	1	
2	36L-H5560-00	BASE ASSY BASE COMPLETA	1					NA
	36L-H5560-V0	BASE ASSY BASE COMPLETA	1	1	1	1	1	
3	36L-H5520-00	.COIL, CHARGE .BOBINA DE CARGA	1					NA
	36L-H5520-V0	.COIL, CHARGE .BOBINA DE CARGA	1	1	1	1	1	
4	36L-H1313-00	.COIL, LIGHTING 1 .BOBINA DE ILUMINACION 1	1					NA
	36L-H1313-10	.COIL, LIGHTING 1 .BOBINA DE ILUMINACION 1	1					
	36L-H1313-V0	.COIL, LIGHTING 1 .BOBINA DE ILUMINACION 1		1	1	1	1	
5	36L-H5580-00	.COIL, PULSER .BOBINA DE PULSACION	1					NA
	36L-H5580-V0	.COIL, PULSER .BOBINA DE PULSACION	1	1	1	1	1	
6	36L-H131X-V0	.CORD ASSY .CORDON COMPLETO				1	1	
7	90461-05036	.CLAMP .GRAMPA				1	1	
8	36L-H5569-V0	.TERMINAL, EARTH 2 .TERMINAL A TIERRA	1	1	1	1	1	
9	98517-04012	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	2					
	97607-04016	.SCREW, PAN HEAD WITH WASHER .TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
10	98517-04025	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	2					
	98507-04030	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		2	2	2	2	
11	98580-04010	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	1					
	97607-04110	.SCREW, PAN HEAD WITH WASHER .TORNILLO CAB CON PLANA C/ARAN		1	1	1	1	
12	98507-04006	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	2					
	98517-04012	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		2	2	2	2	
13	92901-04100	.WASHER, SPRING .ARANDELA DE RESORTE	3					
	92907-05100	.WASHER, SPRING .ARANDELA DE RESORTE		3	3	3	3	
14	98707-06014	SCREW, FLAT HEAD TORNILLO CABEZA PLANA	2	2	2	2	2	
15	90462-05012	CLAMP GRAMPA	1	1	1	1	1	
16	90201-12535	WASHER, PLATE ARANDELA DE PLACA	1	1	1			

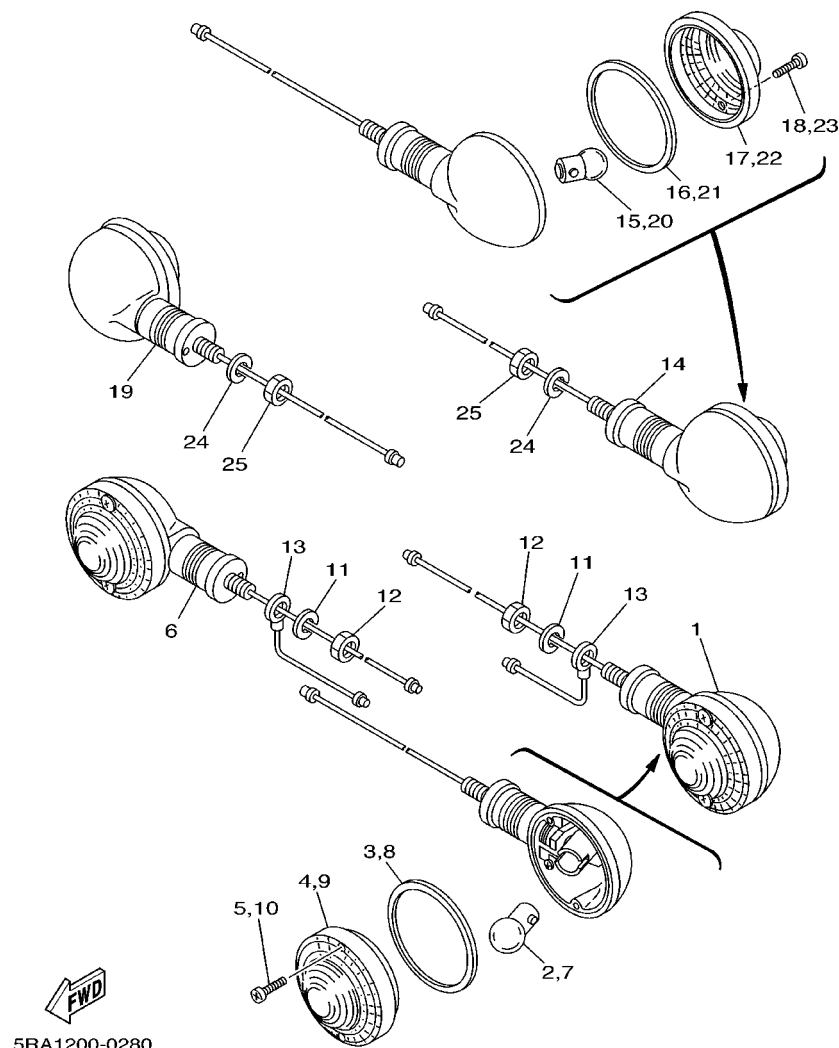


FIG. 28 FLASHER LIGHT

LUZ DE DESTELLADOR

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H3310-V0	FRONT FLASHER LIGHT ASSY 1 DESTELLADOR DE LUZ DELANT	2	1	1	1	1	
2	36L-H3311-V0	.BULB,FLASHER (6V-10W) .BOMBILLA DE DESTELLADOR	2	1	1	1	1	
3	36L-H3313-V0	.GASKET, FLASHER LENS .EMPAQUE DE LENTE DESTELLADOR	2	1	1	1	1	
4	36L-H3312-V0	.LENS, FLASHER .LENTE DE DESTELLADOR	2	1	1	1	1	
5	97706-30620	.SCREW, TAPPING .TORNILLO ENROSQUE HEMBRA	2					
	97807-04122	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	2	2	2	2	2	
6	36L-H3320-V0	FRONT FLASHER LIGHT ASSY 2 DESTELLADOR DE LUZ DELANT.2		1	1	1	1	
7	36L-H3311-V0	.BULB,FLASHER (6V-10W) .BOMBILLA DE DESTELLADOR		1	1	1	1	
8	36L-H3313-V0	.GASKET, FLASHER LENS .EMPAQUE DE LENTE DESTELLADOR		1	1	1	1	
9	36L-H3312-V0	.LENS, FLASHER .LENTE DE DESTELLADOR		1	1	1	1	
10	97807-04122	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		2	2	2	2	
11	92907-10100	WASHER, SPRING ARANDELA DE RESORTE		2	2	2	2	
12	95307-10600	NUT TUERCA		2	2	2	2	
13	36L-H3354-00	WIRE, EARTH LEAD 1 CABLE CONDUCTOR A TIERRA		2	2	2	2	
14	36L-H3330-V0	REAR FLASHER LIGHT ASSY 1 DESTELLADOR DE LUZ TRAS.COMPL.		2	1	1	1	
	5RA-H3330-00	REAR FLASHER LIGHT ASSY 1 DESTELLADOR DE LUZ TRAS.COMPL.					1	
15	36L-H3311-V0	.BULB,FLASHER (6V-10W) .BOMBILLA DE DESTELLADOR		2	1	1	1	
16	36L-H3313-V0	.GASKET, FLASHER LENS .EMPAQUE DE LENTE DESTELLADOR		2	1	1	1	
17	36L-H3312-V0	.LENS, FLASHER .LENTE DE DESTELLADOR		2	1	1	1	
18	97706-30620	.SCREW, TAPPING .TORNILLO ENROSQUE HEMBRA		2				
	97807-04122	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		2	2	2	2	
19	36L-H3340-V0	REAR FLASHER LIGHT ASSY 1 DESTELLADOR DE LUZ TRAS.COMPL.		1	1	1		
	5RA-H3340-00	FLASHER LIGHT ASSY 2 DESTELLADOR DE LUZ COML.					1	
20	36L-H3311-V0	.BULB,FLASHER (6V-10W) .BOMBILLA DE DESTELLADOR		1	1	1	1	
21	36L-H3313-V0	.GASKET, FLASHER LENS .EMPAQUE DE LENTE DESTELLADOR		1	1	1	1	
22	36L-H3312-V0	.LENS, FLASHER .LENTE DE DESTELLADOR		1	1	1	1	
23	97807-04122	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA		2	2	2	2	


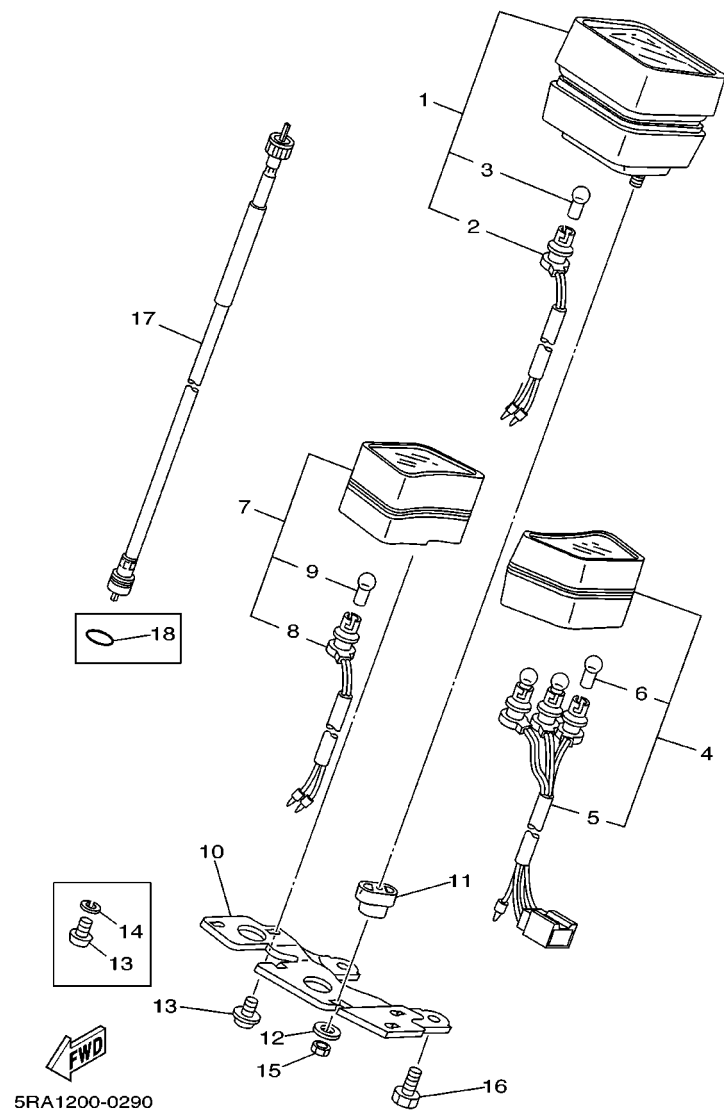


FIG. 29 METER

[illegible]

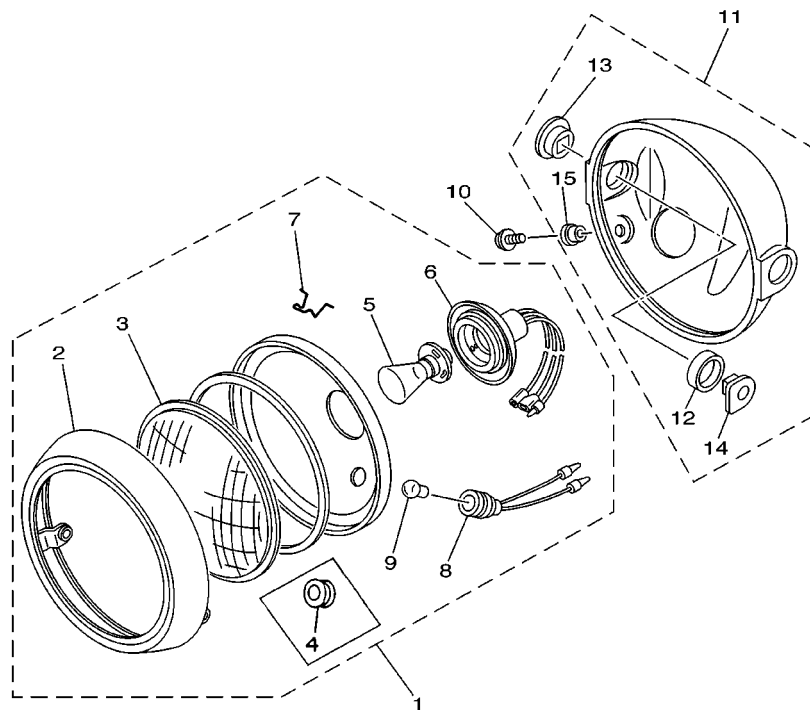


5RA1200-0301

FIG. 30 HEADLIGHT

FARO DELANTERO

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H4310-V0	HEADLIGHT UNIT ASSY UNIDAD FARO DELANTERO COMPLETO	1	1	1			
	36L-H4110-V0	HEADLIGHT UNIT ASSY UNIDAD FARO DELANTERO COMPLETO				1	1	
2	36L-H4115-V0	.RIM, HEADLIGHT .REBORDE, FAROL DELANTERO	1	1	1	1	1	
3	36L-H4121-V0	.LENS, HEADLIGHT .LENTES DE FARO DELANTERO	1	1	1			
	36L-H4121-00	.LENS, HEADLIGHT .LENTES DE FARO DELANTERO				1	1	
4	36L-H4154-V0	.GROMMET .ANILLO PROTECTOR	1	1	1			
5	36L-H4114-V0	.BULB, HEADLIGHT (6V 35/35W) AMPOLLETA DE FARO DELANTRO	1	1	1	1	1	
6	36L-H4140-V0	.SOCKET CORD ASSY .ENCASTRE DE CUERDA COMPL	1	1	1	1	1	
7	36L-H4124-V0	.SPRING, SET .JUEGO DE RESORTES	3	3	3	3	3	
8	36L-H4150-V0	.SOCKET CORD ASSY 2 .ENCASTRE DE CABLE COMPLETO 2	1	1	1	1	1	
9	36L-H4147-V0	.BULB,PILOT LIGHT (6V-3W) AMPOLLETA LUZ PILOTO (6V-3W)	1	1	1	1	1	
10	98517-05012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97601-05112	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
11	36L-H4130-V0	BODY ASSY, HEADLIGHT CUERPO COMPL FARO DELANTERO	1	1	1	1		
	5RA-H4130-00-36	BODY ASSY, HEADLIGHT CUERPO COMPL FARO DELANTERO					1	UR WW
	5RA-H4130-00-P1	BODY ASSY, HEADLIGHT CUERPO COMPL FARO DELANTERO					1	UR VRC7
	5RA-H4130-00-9V	BODY ASSY, HEADLIGHT CUERPO COMPL FARO DELANTERO					1	UR ACB
12	36L-H4163-V0	.DAMPER .AMORTIGUADOR	2	2	2	2	2	
13	36L-H4164-V0	.DAMPER .AMORTIGUADOR	2	2	2	2	2	
14	36L-H4145-V0	.COLLAR, BODY FITTING .COLLAR ACCESORIO DE CUERPO	2	2	2	2	2	
15	36L-H4127-V0	.WASHER, SPECIAL .ARANDELA ESPACIADOR	2	2	2	2	2	


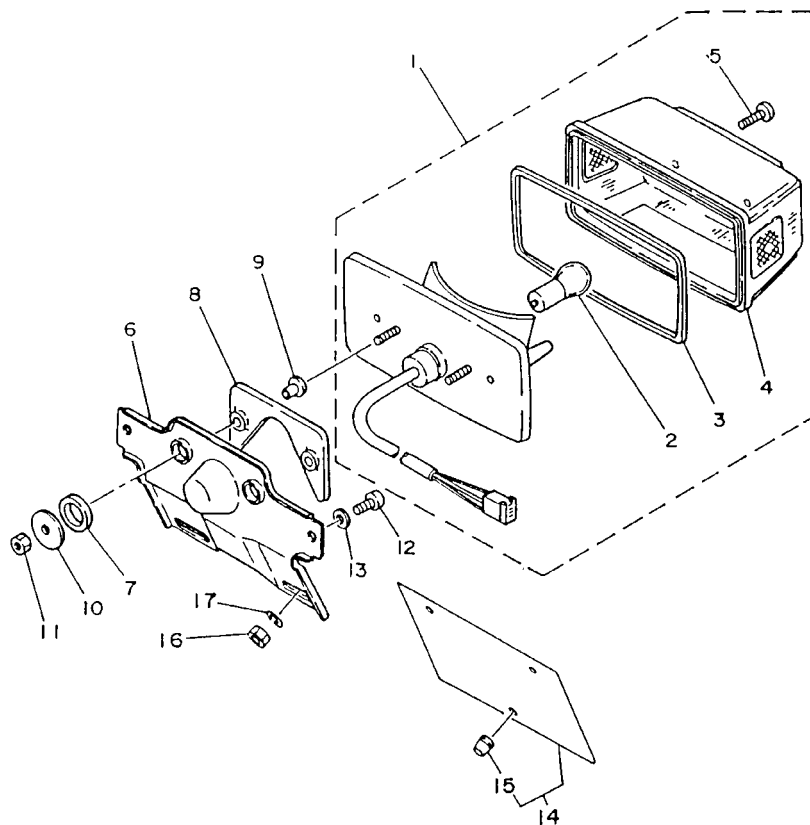


4TLI470-6310

FIG. 31 TAILLIGHT

LUZ DE COLA


REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H4710-V0	TAILLIGHT UNIT ASSY FARO TRASERO COMPLETO	1	1	1			
	36L-H4510-V0	TAILLIGHT UNIT ASSY FARO TRASERO COMPLETO				1		
	5RA-H4510-00	TAILLIGHT UNIT ASSY FARO TRASERO COMPLETO					1	
2	36L-H4514-V0	.BULB (6V-17/5.3W) .AMPOLLETA	1	1	1	1	1	
3	36L-H4523-V0	.GASKET, LENS .EMPAQUE LENTES	1	1	1	1	1	
4	36L-H4521-V0	.LENS, TAILLIGHT .LENTE DE FARO TRASERO	1	1	1	1	1	
5	97780-40120	.SCREW, TAPPING .TORNILLO ENROSQUE HEMBRA	1	1	1			
	97707-06020	.SCREW, TAPPING .TORNILLO ENROSQUE HEMBRA				2	2	
6	36L-H4551-V0	BRACKET, LICENCE SOPORTE DE LICENCIA	1	1	1	1		
	5RA-H4551-00	BRACKET, LICENCE SOPORTE DE LICENCIA					1	
7	36L-H4553-V0	DAMPER AMORTIGUADOR	2	2	2	2	2	
8	36L-H4542-V0	SEAT, BASE ASIENTO DE BASE	1	1	1	1	1	
9	36L-H4557-V0	COLLAR COLLAR	2	2	2	2	2	
10	36L-H4554-V0	WASHER, SPECIAL ARANDELA ESPACIADOR	2	2	2	2	2	
11	95317-06600	NUT TUERCA	2	2	2			
	95307-06600	NUT TUERCA				2	2	
12	98517-06012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	98507-06016	SCREW, PAN HEAD TORNILLO CABEZA REDONDA		2	2	2	2	
13	90201-065F3	WASHER, PLATE ARANDELA DE PLACA	2					
	92907-06100	WASHER, PLATE ARANDELA DE PLACA		2	2	2	2	
14	36L-H2588-00	PLATE PLACA	1	1	1			
15	36L-F8378-00	.PAD .COJIN	2	2	2			
16	95317-06600	NUT TUERCA	2	2	2			
17	92907-06100	WASHER, SPRING ARANDELA DE RESORTE	2	2	2			

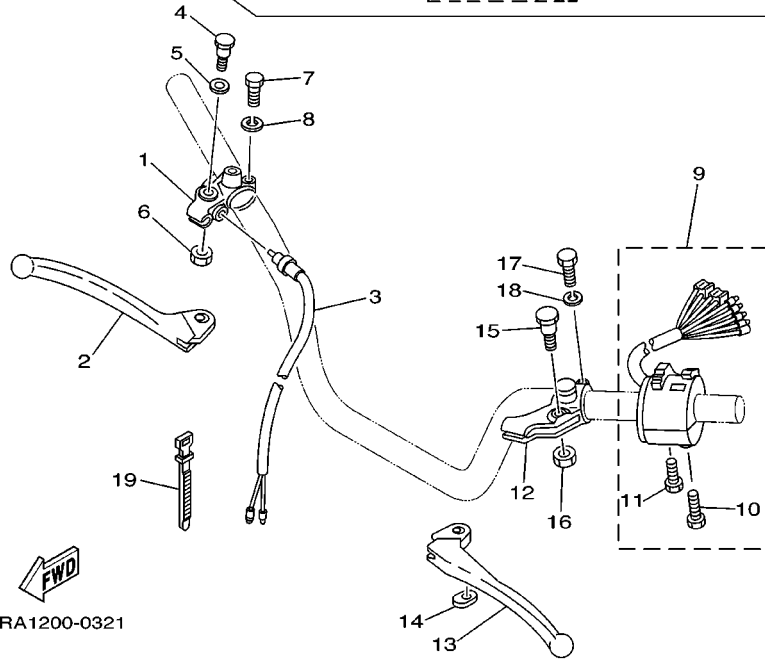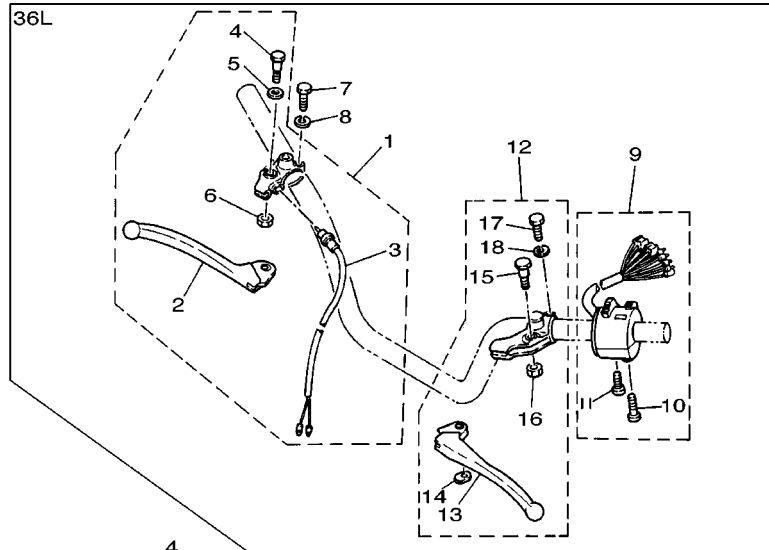

5RA1200-0321

FIG. 32 HANDLE SWITCH. LEVER INTERRUPTOR DE MANIJA. PALANCA

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H2920-V0	LEVER HOLDER ASSY (RIGHT) SOPORTE DE LEVA COMPLT.2	1	1	1			
	36L-H2921-V0	HOLDER, LEVER 2 SOPORTE DE LEVA 2				1	1	
2	36L-H3922-V0	.LEVER 2 .PALANCA	1					
	36L-H3922-V0	LEVER 2 PALANCA		1	1	1	1	
3	36L-H3980-V0	.FRONT STOP SWITCH ASSY .INTERRUP.PARADA DELANTERO	1					
	36L-H3980-V0	FRONT STOP SWITCH ASSY INTERRUP.PARADA DELANTERO		1	1	1	1	
4	36L-H3945-V0	.BOLT, LEVER .PERNO DE PALANCA	1					
	36L-H3945-V0	BOLT, LEVER PERNO DE PALANCA		1	1	1	1	
5	92990-06200	.WASHER, PLAIN .ARANDELA	1					
	90201-08085	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	
6	95701-06300	.NUT, NYLON .ARANDELA	1					
	95707-06300	NUT, FLANGE TUERCA DE BRIDA		1	1	1	1	
7	97004-06020	BOLT PERNO	1					
	97027-06020	BOLT PERNO		1	1	1	1	
8	92907-06100	WASHER, SPRING ARANDELA DE RESORTE	1	1	1	1	1	
9	36L-H3972-V0	SWITCH, HANDLE 4 INFERIOR DE MANIJA 4	1	1	1	1	1	
10	98507-05030	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	1	1	1	1	1	
11	98507-05035	.SCREW, PAN HEAD .TORNILLO CABEZA REDONDA	1	1	1	1	1	
12	36L-H2910-V0	LEVER HOLDER ASSY (LEFT) SOPORTE DE LEVA COMPLT.1	1	1	1			
	36L-H2911-V0	HOLDER, LEVER 1 SOPORTE DE LEVA 1					1	1
13	36L-H3912-V0	.LEVER 1 .PALANCA 1	1					
	36L-H3912-V0	LEVER 1 PALANCA 1		1	1	1	1	
14	36L-H3929-V0	.PLATE, SPRING .PLACA DE RESORTE	1					
	36L-H3929-V0	PLATE, SPRING PLACA DE RESORTE		1	1	1	1	
15	36L-H3945-V0	.BOLT, LEVER .PERNO DE PALANCA	1					
	36L-H3945-V0	BOLT, LEVER PERNO DE PALANCA		1	1	1	1	
16	95607-06100	.NUT, U .TUERCA U	1					



INTERRUPTOR DE MANIJA. PALANCA

54

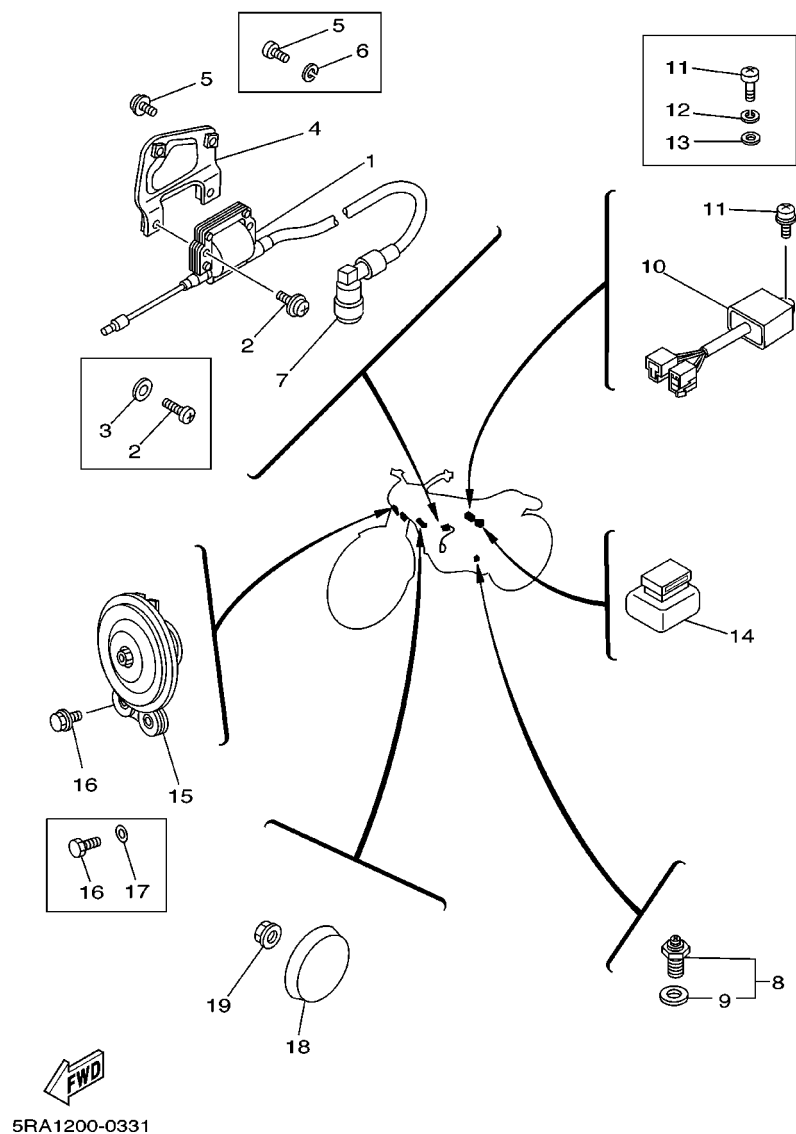


FIG. 33 ELECTRICAL 1

EQUIPO ELECTRICO 1

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H2310-00	IGNITION COIL ASSY BOBINA DE ENCENDIDO COMPLETA	1					
	36L-H2310-V0	IGNITION COIL ASSY BOBINA DE ENCENDIDO COMPLETA		1	1	1	1	
2	98517-06020	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97607-06120	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
3	92907-06100	WASHER, SPRING ARANDELA DE RESORTE	2					
4	36L-H2316-00	BRACKET, IGNITION COIL SOPORTE, BOBINA ENCENDIDO	1	1	1	1	1	
5	98507-06012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97607-06212	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
6	92907-06100	WASHER, SPRING ARANDELA DE RESORTE	2					
7	36L-H2370-V0	PLUG CAP ASSY TAPON DE BUJIA COMPLT	1	1	1	1	1	
8	36L-H2540-V1	NEUTRAL SWITCH ASSY INTERRUPTOR NEUTRAL COMPL	1	1	1	1	1	
9	36L-H258H-00	.GASKET .EMPAQUE	1	1	1			
	36L-H258H-V0	.GASKET .EMPAQUE				1	1	
10	36L-H5540-10	C.D.I. UNIT ASSY UNIDAD C.D.I. COMPLETA	1					
	36L-H5540-00	C.D.I. UNIT ASSY UNIDAD C.D.I. COMPLETA		1	1	1	1	
11	98517-06020	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1					
	97607-06120	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		1	1	1	1	
12	92907-06100	WASHER, SPRING ARANDELA DE RESORTE	1					
13	92907-06600	WASHER, PLATE ARANDELA DE PLACA	1					
14	36L-H3350-V0	FLASHER RELAY ASSY RELE DE DESTELLADOR COMPL.	1	1	1	1	1	
15	36L-H3371-V0	HORN BOCINA	1	1	1	1	1	
16	97017-06020	BOLT PERNO	2					
	90119-08843	BOLT PERNO		2	2	2	2	
17	90201-06697	WASHER, PLATE ARANDELA DE PLACA	2					
18	36L-H5110-V0	REFLECTOR ASSY REFLECTOR COMPLETO	2	2	2	2	2	
19	95707-05300	NUT, FLANGE TUERCA DE BRIDA	2	2	2	2	2	



5RA1200-0341

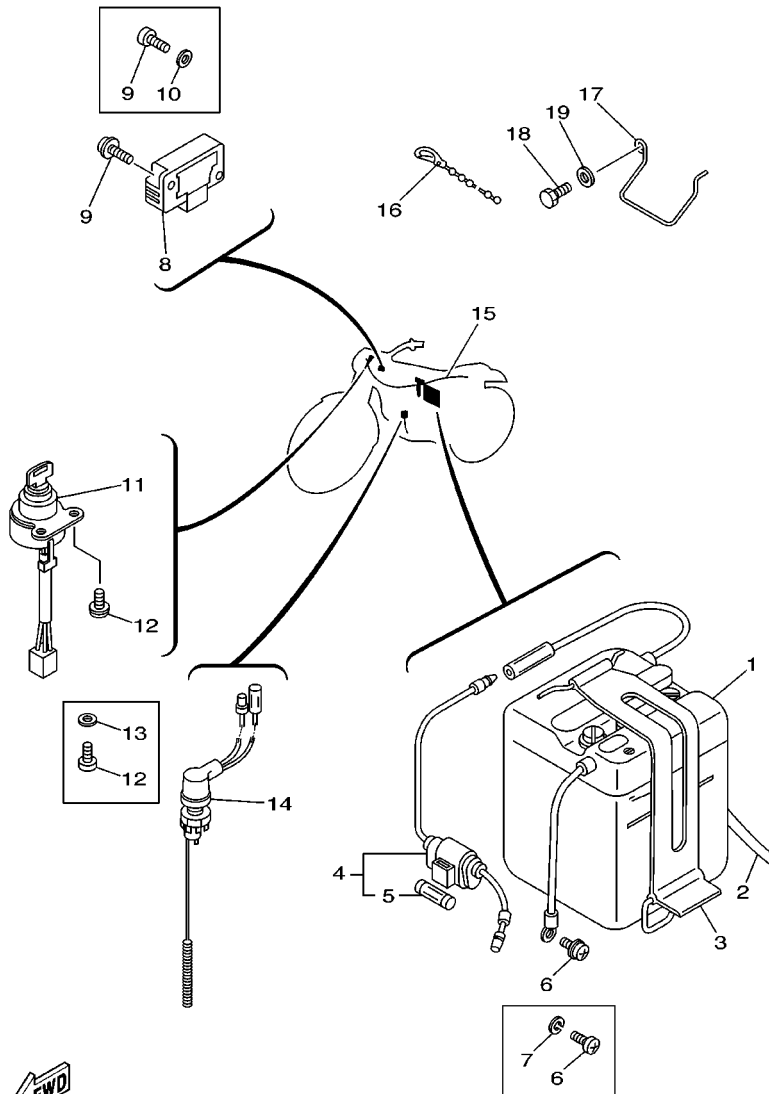


FIG. 34 ELECTRICAL 2

EQUIPO ELECTRICO 2

REF. NO.	PART NO. CODIGO NO.	DESCRIPTION DESCRIPTION	36L	36L0	36L2	36L4	5RA1	REMARKS OBSERVACION
1	36L-H2110-00	BATTERY ASSY BATERIA COMPLETA	1	1	1	1	1	
2	90445-08336	HOSE (L580) TUBO (L580)	1	1	1	1	1	
3	36L-H2131-00	BAND, BATTERY BANDA DE BATERIA	1	1	1	1	1	
4	36L-H2150-V0	FUSE HOLDER ASSY PORTA-FUSIBLES COMPLETO	1	1	1	1	1	
5	36L-H2151-V0	.FUSE .FUSIBLE	1	1	1	1	1	
6	98517-06012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	1					
	97607-06212	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		1	1	1	1	
7	92907-06600	WASHER, PLATE ARANDELA DE PLACA	1					
8	36L-H1960-V0	RECTIFIER & REGULATOR ASSY RECTIFICADOR Y REGULADOR	1	1	1	1	1	
9	98517-06012	SCREW, PAN HEAD TORNILLO CABEZA REDONDA	2					
	97607-05330	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
10	92907-06600	WASHER, PLATE ARANDELA DE PLACA	1					
11	36L-H2510-V1	MAIN SWITCH ASSY INTERRUPTOR PRINC.COMPLETO	1	1	1			
	36L-H2510-01	MAIN SWITCH ASSY INTERRUPTOR PRINC.COMPLETO				1	1	
12	97707-40610	SCREW, TAPPING TORNILLO ENROSQUE HEMBRA	2					
	97707-06510	SCREW, PAN HEAD WITH WASHER TORNILLO CAB CON PLANA C/ARAN		2	2	2	2	
13	92907-04100	WASHER, SPRING ARANDELA DE RESORTE	2					
14	36L-H2530-V0	STOP SWITCH ASSY INTERRUPTOR DE PARADA COMPLETO	1	1	1	1	1	
15	36L-H2590-00	WIRE HARNESS ASSY CONJUNTO DE CABLES	1	1	1	1	1	
16	90464-20031	CLAMP GRAMPA	3	3	3	3	3	
17	36L-H2594-00	CLAMP GRAMPA	1	1	1	1	1	
18	97007-06016	BOLT PERNO	1	1	1	1	1	
19	90201-06M08	WASHER, PLATE ARANDELA DE PLACA	1					
	92907-06600	WASHER, PLATE ARANDELA DE PLACA		1	1	1	1	

NUMERICAL INDEX
INDICE NUMERICO

PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.
36L-E1111-00	1 - 4	36L-E4133-00	5 - 24	36L-E5435-00	8 - 15	36L-E8140-00	12 - 21	36L-F173E-80	16 - 2	36L-F3118-00	20 - 32
36L-E1127-00	1 - 2	36L-E4134-00	5 - 26		8 - 27	36L-E8188-00	8 - 7	36L-F173E-90	16 - 2	36L-F3119-00	20 - 19
36L-E1128-00	1 - 3	36L-E4136-00	5 - 32	36L-E5443-00	8 - 16	36L-E8511-00	12 - 12	36L-F173F-00	16 - 8		20 - 40
36L-E1161-00	1 - 9	36L-E4137-00	5 - 31	36L-E5447-00	8 - 20	36L-E8512-00	12 - 13	36L-F173F-10	16 - 8	36L-F3121-00	20 - 45
36L-E1162-00	1 - 10	36L-E4141-28	5 - 17	36L-E5451-00	8 - 25	36L-E8513-00	12 - 14	36L-F173F-20	16 - 8	36L-F3122-00	20 - 47
36L-E1181-00	1 - 5	36L-E4142-00	5 - 19	36L-E5611-00	9 - 11	36L-E8531-00	12 - 15	36L-F173F-30	16 - 8	36L-F3129-00	20 - 20
36L-E1311-10	1 - 8	36L-E4142-20	5 - 19	36L-E5618-00	9 - 17	36L-E8535-00	12 - 16	36L-F173F-40	16 - 8		20 - 41
36L-E1351-00	1 - 11	36L-E4143-23	5 - 16	36L-E5621-00	9 - 12	36L-E8540-02	12 - 1	36L-F173F-50	16 - 8	36L-F3131-00	20 - 44
36L-E1400-00	2 - 1	36L-E4145-00	5 - 12	36L-E5641-00	9 - 5	36L-E8542-00	12 - 8	36L-F173F-60	16 - 8	36L-F3132-00	20 - 46
36L-E1412-00	2 - 2	36L-E4146-00	5 - 5	36L-E5651-00	9 - 1	36L-E8561-00	12 - 5	36L-F173F-70	16 - 8	36L-F3141-00	20 - 9
36L-E1422-00	2 - 3	36L-E4147-00	5 - 30	36L-E5660-00	9 - 4	36L-E8579-00	12 - 10	36L-F173F-80	16 - 8		20 - 30
36L-E1603-00	2 - 19	36L-E4147-10	5 - 27	36L-E5660-01	9 - 4	4TL-E8589-00	12 - 9	36L-F173F-90	16 - 8	36L-F3144-00	20 - 8
36L-E1604-00	2 - 19	36L-E4161-00	5 - 28	36L-E5666-00	9 - 9	36L-F1110-10	14 - 1	36L-F1745-00	17 - 9		20 - 29
36L-E1605-00	2 - 19	36L-E4169-00	5 - 11	36L-E5676-00	9 - 7	4TL-F1110-00	14 - 1	4TL-F1747-00	17 - 15	36L-F3145-00	20 - 4
36L-E1606-00	2 - 19	36L-E4171-00	5 - 6	36L-E6111-00	10 - 11	5RA-F1110-00	14 - 1	36L-F1751-00	17 - 1		20 - 25
36L-E1607-00	2 - 19	36L-E4184-00	5 - 3	36L-E6150-00	10 - 1	36L-F1155-00	17 - 12	36L-F176A-00	17 - 2	36L-F3146-00	20 - 10
36L-E1631-00	2 - 15	36L-E4185-00	5 - 4	36L-E6154-00	10 - 2	36L-F1308-V0	14 - 10	36L-F176A-10	17 - 2		20 - 31
36L-E1633-00	2 - 16	36L-E4186-00	5 - 2	36L-E6321-00	10 - 5	36L-F1398-V1	14 - 10	36L-F1761-00	17 - 2	36L-F3147-00	20 - 17
36L-E1635-00	2 - 15	36L-E4190-20	5 - 22	36L-E6324-00	10 - 4	36L-F1510-10	15 - 1	36L-F1763-00	17 - 4		20 - 38
36L-E1636-00	2 - 15	36L-E4191-00	5 - 10	36L-E6341-00	8 - 2	4TL-F1510-00	15 - 1	36L-F1764-00	17 - 3	36L-F3156-00	20 - 3
36L-E1637-00	2 - 15	36L-E4195-00	5 - 23		10 - 23	36L-F1518-00	15 - 3	36L-F1771-00	17 - 5		20 - 24
36L-E1638-00	2 - 15	36L-E4196-00	5 - 9	36L-E6342-00	8 - 3	36L-F1521-00	15 - 4	36L-F1776-00	17 - 14	36L-F3158-L0	20 - 12
36L-E1651-00	2 - 7	36L-E4197-00	5 - 15		10 - 24	36L-F1610-00	15 - 8	36L-F1781-10	16 - 12		20 - 33
36L-E1681-00	2 - 4	36L-E4401-00	4 - 12	36L-E6346-00	8 - 6	36L-F1610-10	15 - 8	36L-F1782-10	16 - 14	36L-F3163-00	20 - 13
36L-E3100-00	3 - 1	36L-E4401-10	4 - 12		10 - 27	36L-F1621-01	15 - 16	36L-F1783-00	16 - 16		20 - 34
36L-E3116-00	3 - 13	36L-E4402-00	4 - 16	36L-E6351-00	10 - 6	36L-F1629-00	15 - 13	36L-F1784-00	16 - 18	36L-F3165-00	20 - 21
36L-E3137-00-03	3 - 2	36L-E4424-00	4 - 14	36L-E6356-00	10 - 17	36L-F1711-01-H6	16 - 1	36L-F2110-10	18 - 1		20 - 42
36L-E3137-00-05	3 - 2	36L-E4451-00	4 - 15	36L-E6357-00	10 - 19	36L-F1711-01-H9	16 - 1	36L-F2123-00	18 - 2	36L-F3168-00	20 - 18
36L-E3137-00-10	3 - 2	36L-E4453-00	4 - 10	36L-E6371-00	10 - 3	36L-F1711-01-P1	16 - 1	36L-F2141-01	18 - 3		20 - 39
36L-E3138-00	3 - 3	36L-E4476-00	4 - 13	36L-E7121-00	11 - 2	36L-F1711-01-20	16 - 1	36L-F2151-00	18 - 6	36L-F3170-K0	20 - 6
36L-E3146-00	3 - 10	36L-E4611-00	6 - 1	36L-E7131-00	11 - 3	36L-F1711-01-35	16 - 1	36L-F2210-00	18 - 13		20 - 27
36L-E3174-00	3 - 20	36L-E4612-00	6 - 2	36L-E7141-00	11 - 4	36L-F1711-01-36	16 - 1	36L-F2210-02	18 - 13	36L-F3170-00	20 - 6
36L-E3175-01	3 - 11	36L-E4613-00	6 - 3	36L-E7211-01	11 - 8	36L-F1711-01-9V	16 - 1	36L-F2310-10	18 - 7		20 - 27
36L-E3176-00	3 - 16	36L-E4710-10	6 - 6	36L-E7211-10	11 - 8	36L-F1721-01-H6	16 - 7	36L-F2310-20	18 - 7	36L-F3173-00	20 - 7
36L-E3178-00	3 - 17	36L-E4710-20	6 - 6	36L-E7221-00	11 - 11	36L-F1721-01-H9	16 - 7	36L-F2315-00	18 - 12		20 - 28
36L-E3565-00	4 - 6	36L-E4713-00	6 - 10	36L-E7231-00	11 - 12	36L-F1721-01-P2	16 - 7	36L-F3102-00	20 - 1	36L-F3181-00	20 - 15
36L-E3610-00	4 - 1	36L-E4714-00	6 - 11	36L-E7241-00	11 - 13	36L-F1721-01-20	16 - 7	36L-F3103-00	20 - 22		20 - 36
36L-E3613-00	4 - 2	36L-E4753-00	6 - 7	36L-E7285-00	11 - 14	36L-F1721-01-35	16 - 7	36L-F3106-00	20 - 2	36L-F3181-50	20 - 15
36L-E3616-00	4 - 3	36L-E4753-20	6 - 7	36L-E7411-00	11 - 1	36L-F1721-01-36	16 - 7	36L-F3107-00	20 - 23		20 - 36
36L-E3621-00	4 - 5	36L-E5110-00	7 - 1	36L-E7421-00	11 - 7	36L-F1721-01-9V	16 - 7	36L-F3110-00	20 - 5	36L-F3318-40	20 - 49
36L-E4101-00	5 - 1	36L-E5128-00	7 - 7	36L-E7461-00	11 - 22	36L-F173E-00	16 - 2		20 - 26	36L-F3340-K0	20 - 43
36L-E4112-20	5 - 18	36L-E5353-00	12 - 18	36L-E7461-50	11 - 22	36L-F173E-10	16 - 2	36L-F3111-00	20 - 16	36L-F3346-01	20 - 48
36L-E4116-02	5 - 20	36L-E5357-00	8 - 13	36L-E7471-00	11 - 17	36L-F173E-20	16 - 2		20 - 37	36L-F3395-00	19 - 24
36L-E4122-00	5 - 25	36L-E5362-00	8 - 29	36L-E8101-00	13 - 1	36L-F173E-30	16 - 2	36L-F3114-00	20 - 17	36L-F3411-00	19 - 1
36L-E4123-00	5 - 21	36L-E5371-00	7 - 9	36L-E8111-00	13 - 10	36L-F173E-40	16 - 2		20 - 38	36L-F3411-10	19 - 3
36L-E4124-00	5 - 29	36L-E5411-00	8 - 1	36L-E8112-00	13 - 16	36L-F173E-50	16 - 2	36L-F3116-00	20 - 14	36L-F3412-00	19 - 2
36L-E4126-00	5 - 13	36L-E5420-00	8 - 14	36L-E8113-00	13 - 11	36L-F173E-60	16 - 2		20 - 35	36L-F3412-10	19 - 4
36L-E4131-00	5 - 14	36L-E5430-00	8 - 26	36L-E8115-00	13 - 15	36L-F173E-70	16 - 2	36L-F3118-00	20 - 11	36L-F3416-00	19 - 7

**NUMERICAL INDEX
INDICE NUMERICO**

PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.
36L-F3435-00	19 - 11	36L-F4532-01	21 - 21	36L-F5439-00	24 - 21	36L-H2151-V0	34 - 5	36L-H3530-V0	29 - 4	36L-H5550-V0	27 - 1
5RA-F3437-00	19 - 12	36L-F4535-00	21 - 19	36L-F6110-00	25 - 1	36L-H2310-V0	33 - 1	36L-H3557-V0	29 - 8	36L-H5550-00	27 - 1
36L-F3441-01	19 - 17	36L-F4560-00	21 - 18	36L-F6111-00	25 - 1	36L-H2310-00	33 - 1	36L-H3550-00	29 - 17	36L-H5560-V0	27 - 2
36L-F3441-10	19 - 17	36L-F4560-01	21 - 33	36L-F6241-00	25 - 18	36L-H2316-00	33 - 4	36L-H3582-V0	29 - 7	36L-H5560-00	27 - 2
36L-F3480-V1	19 - 19	2YA-F4568-00	21 - 36	36L-F6242-00	25 - 19	36L-H2370-V0	33 - 7	36L-H3912-V0	32 - 13	36L-H5569-V0	27 - 8
36L-F3484-00	19 - 21	36L-F4576-00	21 - 12	36L-F6243-00	25 - 20	36L-H2510-V1	34 - 11	36L-H3922-V0	32 - 2	36L-H5580-V0	27 - 5
36F-F4100-00-H6	21 - 1	36L-F4650-V1	21 - 23	36L-F6249-00	25 - 21	36L-H2510-01	34 - 11	36L-H3929-V0	32 - 14	36L-H5580-00	27 - 5
36F-F4100-10-H9	21 - 1	5RA-F4710-00	22 - 1	36L-F6260-00	25 - 2	36L-H2530-V0	34 - 14	36L-H3936-00	32 - 19	36L-WE542-00	8 - 19
36L-F4100-00-H9	21 - 1	36L-F4730-00	22 - 1	36L-F6261-00	25 - 6	36L-H2540-V1	33 - 8	36L-H3945-V0	32 - 4	36L-WE543-00	8 - 26
36L-F4100-00-20	21 - 1	36L-F4730-10	22 - 1	36L-F6268-00	25 - 7	36L-H258H-V0	33 - 9		32 - 15	36L-WF512-00	23 - 2
36L-F4100-10-P2	21 - 1	36L-F4731-00	22 - 2	36L-F6280-00	25 - 26	36L-H258H-00	33 - 9	36L-H3972-V0	32 - 9	36L-WF512-10	24 - 2
36L-F4100-10-35	21 - 1	5RA-F4731-00	22 - 2	36L-F6281-00	25 - 22	36L-H2588-00	31 - 14	36L-H3980-V0	32 - 3	36L-WF518-00	23 - 27
36L-F4100-10-9V	21 - 1	36L-F474A-00	22 - 5	36L-F6282-00	25 - 23	36L-H2590-00	34 - 15	36L-H4110-V0	30 - 1	36L-WF536-00	23 - 6
36L-F4100-40	21 - 1	36L-F4741-00	22 - 3	36L-F6290-00	25 - 25	36L-H2594-00	34 - 17	36L-H4114-V0	30 - 5		24 - 9
36L-F4100-50	21 - 1	5RA-F4741-00	22 - 3	36L-F6311-00	25 - 3	36L-H2910-V0	32 - 12	36L-H4115-V0	30 - 2	3M5-18511-01	12 - 12
36L-F4100-60	21 - 1	5RA-F4773-00	22 - 6	36L-F6312-00	25 - 4	36L-H2911-V0	32 - 12	36L-H4121-V0	30 - 3	3M5-18512-00	12 - 13
36L-F4100-70	21 - 1	5RA-F4810-00	22 - 5	36L-F6321-00	25 - 5	36L-H2920-V0	32 - 1	36L-H4121-00	30 - 3	3M5-18513-00	12 - 14
36L-F4110-01-P2	21 - 1	36L-F4831-00	22 - 8	36L-F6335-00	25 - 8	36L-H2921-V0	32 - 1	36L-H4124-V0	30 - 7	90101-06278	23 - 17
36L-F4110-01-36	21 - 1	36L-F4847-90	22 - 9	36L-F6341-00	25 - 11	36L-H3310-V0	28 - 1	36L-H4127-V0	30 - 15		24 - 13
36L-F4110-01-9V	21 - 1	36L-F5111-10	23 - 1	36L-F6363-01	25 - 10	36L-H3311-V0	28 - 2	36L-H4130-V0	30 - 11	90105-08099	14 - 2
36L-F4161-10	21 - 26	36L-F5118-00	23 - 27	36L-F6372-00	25 - 9		28 - 7	5RA-H4130-00-P1	30 - 11	90105-10006	19 - 10
36L-F4162-10	21 - 28	36L-F5121-10	23 - 5		25 - 12		28 - 15	5RA-H4130-00-36	30 - 11	90105-10040	14 - 4
36L-F4181-00	21 - 5	36L-F513A-00	23 - 21	36L-F7111-00	26 - 1		28 - 20	5RA-H4130-00-9V	30 - 11	90105-10089	14 - 3
36L-F4182-00	21 - 6	36L-F5135-00	23 - 8	5RA-F7111-00	26 - 1	36L-H3312-V0	28 - 4	36L-H4140-V0	30 - 6	90105-10849	14 - 3
36L-F4240-A0	21 - 4	4TL-F5135-00	23 - 8	36L-F7112-00	26 - 2		28 - 9	36L-H4145-V0	30 - 14	90109-06001	12 - 22
36L-F4240-B0	21 - 4	36L-F5136-00	23 - 9	36L-F7114-00	26 - 5		28 - 17	36L-H4147-V0	30 - 9	90109-08032	26 - 20
36L-F4240-C0	21 - 4	36L-F5137-00	23 - 32	36L-F7115-00	26 - 3		28 - 22	36L-H4150-V0	30 - 8	90109-08063	24 - 31
36L-F4240-00	21 - 4	36L-F5138-00	23 - 10	36L-F7211-01	26 - 7	36L-H3313-V0	28 - 3	36L-H4154-V0	30 - 4	90109-08361	24 - 22
36L-F4240-30	21 - 4	4TL-F5138-00	23 - 10	36L-F7231-00	26 - 9		28 - 8	36L-H4163-V0	30 - 12	90109-08368	24 - 34
36L-F4240-40	21 - 4	36L-F5149-00	23 - 14	36L-F7311-00	26 - 18		28 - 16	36L-H4164-V0	30 - 13	90109-08810	26 - 20
36L-F4240-50	21 - 4	36L-F5155-00	23 - 16	5RA-F7311-00	26 - 18		28 - 21	36L-H4310-V0	30 - 1	90109-14385	12 - 17
36L-F4240-60	21 - 4	36L-F5181-00	23 - 28	36L-F7411-00	26 - 15	36L-H3320-V0	28 - 6	36L-H4510-V0	31 - 1	90113-06013	10 - 21
36L-F4240-70	21 - 4	36L-F5304-01	23 - 22	36L-F7413-00	26 - 16	36L-H3330-V0	28 - 14	5RA-H4510-00	31 - 1	90116-08166	6 - 4
36L-F4240-80	21 - 4		24 - 25	36L-F743E-00	26 - 26	5RA-H3330-00	28 - 14	36L-H4514-V0	31 - 2	90116-08393	1 - 7
36L-F4240-90	21 - 4	36L-F5311-10	24 - 1	36L-F7431-02	26 - 24	36L-H3340-V0	28 - 19	36L-H4521-V0	31 - 4	90116-10278	1 - 13
36L-F4393-00	22 - 10	36L-F5321-10	24 - 8	36L-F7432-00	26 - 22	5RA-H3340-00	28 - 19	36L-H4523-V0	31 - 3	90119-05020	10 - 8
36L-F4393-10	22 - 11	36L-F533A-00	24 - 15	36L-F7433-02	26 - 25	36L-H3350-V0	33 - 14	36L-H4542-V0	31 - 8	90119-06056	15 - 15
36L-F4500-01	21 - 10	36L-F5351-00	23 - 19	36L-F7442-00	26 - 23	36L-H3354-00	28 - 13	36L-H4551-V0	31 - 6	90119-06843	16 - 11
36L-F4500-02	21 - 10		24 - 11	36L-F8100-10	14 - 12	36L-H3371-V0	33 - 15	5RA-H4551-00	31 - 6	90119-08811	29 - 16
36L-F4515-00	21 - 20	36L-F5355-00	24 - 12	36L-F8378-00	31 - 15	36L-H3509-V0	29 - 2	36L-H4553-V0	31 - 7	90119-08843	33 - 16
36L-F4518-00	21 - 13	36L-F5364-00	24 - 7	36L-H131X-V0	27 - 6	36L-H3510-V0	29 - 1	36L-H4554-V0	31 - 10	90123-06010	25 - 16
36L-F4521-00	21 - 15	36L-F5366-10	24 - 16	36L-H1313-V0	27 - 4	36L-H3516-V0	29 - 3	36L-H4557-V0	31 - 9	90123-08013	25 - 13
36L-F4522-V0	21 - 22	36L-F5371-00	24 - 30	36L-H1313-00	27 - 4		29 - 6	36L-H4710-V0	31 - 1	90123-08046	25 - 14
36L-F4523-00	21 - 16	36L-F5381-01	24 - 38	36L-H1313-10	27 - 4		29 - 9	36L-H5110-V0	33 - 18	90146-06009	16 - 5
36L-F4524-00	21 - 11	36L-F5387-01	24 - 20	36L-H1960-V0	34 - 8	36L-H3519-V0	29 - 10	36L-H5520-V0	27 - 3	90149-08094	13 - 4
36L-F4525-00	21 - 14	36L-F5388-00	24 - 44	36L-H2110-00	34 - 1	36L-H3520-V0	29 - 5	36L-H5520-00	27 - 3	90152-04006	21 - 27
36L-F4531-00	21 - 17	36L-F5389-00	24 - 45	36L-H2131-00	34 - 3	36L-H3523-V0	29 - 11	36L-H5540-00	33 - 10		21 - 29
36L-F4532-V0	21 - 21	36L-F5412-00	24 - 23	36L-H2150-V0	34 - 4	36L-H3524-00	29 - 12	36L-H5540-10	33 - 10	90153-08011	24 - 46

**NUMERICAL INDEX
INDICE NUMERICO**

PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.
90157-05116	25 - 24	90201-12178	27 - 16	90445-05266	3 - 9	90508-32811	13 - 3	92907-08100	15 - 10	93410-20809	11 - 6
90170-08029	13 - 5	90201-122H2	13 - 17	90445-08336	34 - 2	90560-12814	23 - 2		19 - 15	93420-42801	24 - 17
90170-12060	10 - 9	90201-12535	27 - 16	90445-09059	21 - 31	90560-15136	24 - 2		24 - 36	93430-02001	21 - 3
90170-12065	18 - 4	90201-12631	13 - 17	90445-09107	17 - 10	90560-17147	10 - 16	92907-08600	15 - 20	93430-08810	3 - 19
90170-12347	27 - 18	90201-14218	18 - 14	90445-09264	21 - 30	91317-08025	9 - 18	92907-10100	14 - 8	93430-10811	9 - 16
90170-12408	18 - 4	90201-14220	13 - 8	90445-09809	21 - 30	91401-16012	13 - 14		28 - 11		13 - 18
90170-20167	24 - 39	90201-14586	13 - 8	90446-07009	7 - 10		26 - 30		28 - 24	93430-12809	26 - 6
90170-20224	24 - 39	90201-153A1	9 - 15	90446-07228	7 - 10	91401-20015	24 - 37	92907-10200	23 - 30	93430-12812	13 - 9
90171-10004	23 - 29	90201-15827	9 - 2	90460-43053	4 - 9		26 - 10	92907-12100	27 - 17	93440-11029	8 - 8
90171-14020	24 - 42	90201-15828	11 - 10	90460-49058	4 - 11	91401-20020	23 - 31	92907-12200	18 - 5	93440-15802	9 - 3
90171-14056	24 - 42	90201-17558	10 - 15	90460-51059	4 - 11	91401-30030	24 - 43	92990-04100	5 - 8		11 - 9
90175-06013	26 - 14	90201-20266	11 - 5	90461-05036	27 - 7	91490-16020	13 - 14	92990-05100	3 - 5	93450-15090	2 - 18
90176-10073	18 - 16	90201-20269	23 - 13	90461-10071	3 - 22		26 - 30	92990-06200	32 - 5	93501-04805	19 - 5
90179-06143	25 - 17	90201-20279	26 - 28	90462-05012	27 - 15	91490-20025	23 - 31	92995-06100	32 - 18	93503-16806	10 - 18
90179-06264	16 - 6	90202-04801	21 - 35	90462-08070	3 - 22	91490-30030	24 - 43	93101-10806	3 - 15		19 - 6
90179-08148	25 - 15	90208-04029	19 - 23	90464-08020	15 - 14	91609-40016	12 - 4	93101-17807	9 - 10	93503-16807	10 - 18
90179-08168	24 - 24	90208-12015	10 - 10	90464-20031	34 - 16	91609-50016	12 - 3	93102-18802	23 - 4	93505-16814	12 - 20
90179-08639	24 - 24		10 - 14	90467-08003	17 - 11	92707-06030	14 - 11	93102-25807	2 - 13	93507-32819	9 - 13
90179-08823	1 - 6	90209-08050	14 - 9		21 - 32	92901-04100	27 - 13	93102-26805	11 - 20	93603-22805	3 - 18
	6 - 5	90209-10020	19 - 9	90468-02033	3 - 8	92907-04100	34 - 13	93103-28800	2 - 14	93604-22806	12 - 2
90179-10812	1 - 12	90209-10224	19 - 9		3 - 21	92907-04600	29 - 14	93104-07804	23 - 11	94125-18838	23 - 23
90179-12659	10 - 13	90209-22071	2 - 6	90468-10050	24 - 33	92907-05100	3 - 5	93104-11806	8 - 4	94127-18801	23 - 23
90179-12813	10 - 13	90209-22248	2 - 6	90468-12007	24 - 33		12 - 6		10 - 25	94127-18839	24 - 26
90179-16226	11 - 24	90215-08014	13 - 6	90468-26048	9 - 6		13 - 20	93104-22805	24 - 5	94130-18800	24 - 26
90179-25033	19 - 8	90215-16127	11 - 25	90480-12053	4 - 19		21 - 25	93105-47801	23 - 20	94225-18823	23 - 24
90183-04005	16 - 13	90240-06052	26 - 29		16 - 3		27 - 13	93106-26801	24 - 19	94227-18824	24 - 27
	16 - 15	90240-08013	13 - 12		16 - 9	92907-05200	19 - 26	93109-05022	10 - 20	94325-18822	23 - 25
90183-04012	16 - 13	90240-08053	13 - 12	90480-14023	4 - 20	92907-05600	21 - 25	93109-05804	10 - 20		24 - 28
	16 - 15	90249-03123	21 - 2	90480-14102	4 - 20		21 - 38	93109-14803	13 - 7	94414-18800	24 - 29
90183-06018	16 - 17	90249-12008	26 - 13	90480-18171	17 - 7	92907-06100	6 - 9	93210-14806	29 - 18	94414-18832	23 - 26
	16 - 19	90269-04003	19 - 22	90480-25189	21 - 7		31 - 13	93210-18023	2 - 9		24 - 29
90201-05036	15 - 18	90280-03017	2 - 8	90501-10245	26 - 12		31 - 17	93210-19809	8 - 30	94416-18800	23 - 26
90201-05725	15 - 5	90282-05005	10 - 12	90501-10353	12 - 19		32 - 8	93210-42807	24 - 6	94508-04110	24 - 48
90201-06M08	34 - 19	90338-19802	11 - 26	90501-12081	9 - 14		32 - 18	93306-004Y0	24 - 18	94568-04110	24 - 48
90201-065F3	4 - 22	90340-12005	7 - 11	90501-20568	10 - 7		33 - 3	93306-202Y0	24 - 3	94608-04001	24 - 49
	4 - 25	90381-08803	8 - 21	90502-09024	19 - 20		33 - 6	93306-202Y1	24 - 4	94608-24001	24 - 49
	16 - 4	90385-08029	17 - 8	90506-08818	13 - 2		33 - 12	93306-205Y0	2 - 12	94700-00812	1 - 1
	16 - 10	90385-24028	17 - 6	90506-09809	12 - 23	92907-06200	4 - 18	93306-301Y3	23 - 3	95307-05600	3 - 4
	31 - 13	90387-07390	4 - 21	90506-10069	8 - 5		4 - 8	93306-303Y1	11 - 16		15 - 7
90201-06557	4 - 22	90387-15425	24 - 40		10 - 26	92907-06600	18 - 9	93306-304Y1	11 - 19		15 - 19
	4 - 25	90387-158W7	24 - 40	90506-16036	23 - 7		18 - 11	93306-304Y2	2 - 11		29 - 15
90201-06697	33 - 17	90387-20165	24 - 41		24 - 10		21 - 40	93310-214Y2	2 - 17	95307-06600	10 - 22
90201-07076	23 - 12	90387-20491	11 - 23	90506-17328	23 - 7		26 - 11	93310-21403	2 - 17		23 - 18
90201-08085	13 - 13	90387-205E9	2 - 10		24 - 10		33 - 13	93310-422L0	2 - 5		24 - 14
	32 - 5	90387-208W8	24 - 41	90506-25047	26 - 19		34 - 7	93310-422Y1	2 - 5		31 - 11
90201-08612	21 - 8	90430-04004	3 - 7	90506-29054	26 - 4		34 - 10	93311-315Y0	11 - 15	95307-08600	15 - 11
90201-08624	3 - 12	90430-12207	7 - 12	90508-26484	9 - 8		34 - 19		11 - 21		19 - 16
90201-106F2	18 - 15	90445-05203	3 - 9	90508-32056	26 - 8	92907-08100	14 - 7	93410-20808	23 - 15		21 - 9

NUMERICAL INDEX
INDICE NUMERICO

PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.	PART NO. CODIGO NO.	REF. NO.
95307-08600	24 - 32	97007-06016	34 - 18	98507-04006	27 - 12	98517-06025	8 - 28				
95307-08700	24 - 35	97007-06025	4 - 23	98507-04010	29 - 13	98580-04010	27 - 11				
	24 - 47	97007-08016	22 - 4	98507-04030	27 - 10	98580-05014	3 - 14				
	26 - 21	97007-08020	15 - 9	98507-05008	21 - 24	98580-06016	8 - 18				
95307-10600	28 - 12	97013-06022	32 - 17	98507-05010	21 - 34	98580-06030	8 - 10				
	28 - 25	97017-06020	13 - 19		21 - 37	98580-06545	7 - 2				
95317-06600	31 - 11		33 - 16	98507-05014	3 - 14		8 - 11				
	31 - 16	97017-06025	4 - 7	98507-05016	15 - 17	98580-06555	7 - 3				
95317-08700	24 - 35		4 - 23	98507-05030	32 - 10		8 - 12				
	24 - 47	97017-08016	29 - 16	98507-05035	32 - 11		8 - 24				
	26 - 21	97017-08020	15 - 9	98507-06008	12 - 11	98580-06565	7 - 4				
95337-08600	15 - 11	97027-06012	21 - 39	98507-06012	11 - 18	98586-05016	25 - 24				
	19 - 16	97027-06020	13 - 19		33 - 5	98707-04012	19 - 13				
	21 - 9		32 - 7	98507-06016	4 - 24	98707-06014	27 - 14				
	24 - 32		32 - 17		8 - 18	98707-06016	26 - 27				
95380-05600	3 - 4	97507-06525	4 - 7		16 - 11	98707-06030	14 - 11				
95380-06600	10 - 22	97507-06612	21 - 39		18 - 10	98907-03008	21 - 19				
95607-06100	32 - 16	97601-05112	30 - 10		31 - 12	98907-04008	3 - 6				
95701-06300	32 - 6	97606-04112	29 - 13	98507-06025	8 - 17	98907-05010	21 - 34				
95707-05300	33 - 19	97607-04016	27 - 9		8 - 28	98980-04008	3 - 6				
95707-06300	32 - 6	97607-04110	27 - 11	98507-06030	8 - 10	99530-10014	7 - 5				
	32 - 16	97607-05112	12 - 7	98507-06035	8 - 23		8 - 9				
95707-08500	6 - 5	97607-05208	21 - 24	98507-06040	4 - 17		8 - 22				
	14 - 5	97607-05212	15 - 6	98507-06045	7 - 2	99530-10114	7 - 5				
	22 - 4	97607-05216	15 - 17		8 - 11		8 - 9				
	22 - 7	97607-05330	34 - 9	98507-06055	7 - 3		8 - 22				
95707-10500	14 - 6	97607-06120	33 - 2		8 - 12	99530-14016	7 - 6				
95807-06012	15 - 12		33 - 11		8 - 24						
	17 - 13	97607-06212	18 - 8	98507-06065	7 - 4						
95807-06014	22 - 8		21 - 37	98507-08010	7 - 8						
95807-06016	15 - 2		33 - 5	98511-04016	5 - 7						
	22 - 6		34 - 6	98511-06012	11 - 18						
95807-08012	22 - 7	97607-06216	6 - 8	98517-04012	27 - 9						
95807-08014	22 - 9		18 - 10		27 - 12						
95807-08016	6 - 12	97706-30620	28 - 5	98517-04016	5 - 7						
95807-08020	26 - 17		28 - 18	98517-04025	27 - 10						
	26 - 31	97707-06020	31 - 5	98517-05012	12 - 7						
95807-08035	19 - 18	97707-06510	34 - 12		15 - 6						
95807-08050	19 - 14	97707-40610	34 - 12		30 - 10						
95817-06012	15 - 12	97780-40120	31 - 5	98517-06008	12 - 11						
	17 - 13	97807-04122	28 - 5	98517-06012	6 - 8						
	22 - 6		28 - 10		18 - 8						
95817-08012	22 - 7		28 - 18		31 - 12						
95817-08016	6 - 12		28 - 23		34 - 6						
95817-08020	26 - 17	97885-06035	8 - 23		34 - 9						
	26 - 31	98501-08010	7 - 8	98517-06020	33 - 2						
95817-08030	19 - 18	98506-05010	19 - 25		33 - 11						
97004-06020	32 - 7	98507-03008	4 - 4	98517-06025	8 - 17						

CONTENTS

ENGINE

CYLINDER	1
CRANKSHAFT. PISTON	2
OIL PUMP	4
INTAKE	6
CARBURETOR	8
EXHAUST	10
CRANKCASE	11
CRANKCASE COVER 1	12
STARTER	14
CLUTCH	15
TRANSMISSION	17
SHIFT CAM. FORK	19
SHIFT SHAFT	21

CHASSIS

FRAME	22
FENDER	23
SIDE COVER	24
OIL TANK	26
REAR ARM	27
STEERING	28
FRONT FORK	30
FUEL TANK	33
SEAT	36
FRONT WHEEL	37
REAR WHEEL	39
STEERING HANDLE. CABLE	42
STAND. FOOTREST	44
GENERATOR	46

FLASHER LIGHT	48
METER	50
HEADLIGHT	51
TAILLIGHT	52
HANDLE SWITCH. LEVER	53
ELECTRICAL 1	55
ELECTRICAL 2	56

INDEX

NUMERICAL INDEX	57
-----------------------	----

CONTENIDO

MOTOR

CILINDRO	1
CIGUENAL. PISTON	2
BOMBA DE ACEITE	4
ADMISION	6
CARBURADOR	8
DESCARGA	10
CARTER	11
CUBIERTA DE CARTER 1	12
ARRANQUE	14
EMBRAGUE	15
TRANSMISION	17
LEVA DE CAMBIO. HORQ	19
EJE DE CAMBIO. PEDAL	21

SHASIS

CUADRO	22
GUARDABARRO	23
CUBIERTA LATERAL	24
COMPONER Y PODER VARILLA	26
BRAZO TRASERO	27
DIRECCION	28
HORQUILLA DELANTERA	30
DEPOSITO DE COMBUSTIBLE	33
ASIENTO	36
RUEDA DELANTERA	37
RUEDA TRASERA	39
MANUBRIO. CABLE	42
SOPORTE. APOYAPIE	44
GENERADOR	46

LUZ DE DESTELLADOR	48
MEDIDOR	50
FARO DELANTERO	51
LUZ DE COLA	52
INTERRUPTOR DE MANIJA. PALANCA	53
EQUIPO ELECTRICO 1	55
EQUIPO ELECTRICO 2	56

INDICE

INDICE NUMERICO	57
-----------------------	----