

SUZUKI

PARTS CATALOGUE

GS125

GS 125-2AK7

GS 125-2AK8



2008-2

1 TH EDITION

**INFORMATION
ILLUSTRATION INDEX**

1

**ENGINE
TRANSMISSION**

2

ELECTRICAL

3

BODY

4

PARTS NUMBER INDEX

5

GS 125-2AK7

GS 125-2AK8



PREFACIO

Cuando sea necesario reemplazar piezas en las MOTOCICLETAS de SUZUKI, sírvase usar Siempre las PIEZAS GENUINAS DE SUZUKI que han pasado una estricta inspección de calidad y rendimiento.

Este catálogo contiene todas las piezas de recambio para las SUZUKI GS125K7.GS125K8.

INSTRUCCIONES SOBRE EL USO DEL CATALOGO

1. DIMENSIONES

2. ABREVIATURAS

Las abreviaturas usadas son las siguientes:

AR	: Lo necesario	NT	: Numero de dientes
ASSY	: Conjunto	OPT	: Opcional
E.No.	: Numero de motor	OS	: Sobremedida
F.No.	: Numero de bastidor	STD	: Normalizado
D	: Diametro del material	T	: Espesor
ID	: Diametro interno	US	: Submedida
OD	: Diametro externo	W	: Ancho
L	: Longitud		
LH	: Lado izquierdo		
RH	: Lado derecho		

~100045: Hasta F. No. 100045

100046~: Desde F. No. 100046

12 x 34 x 5.6 Los numeros en la columna de "Observaciones" muestran las
T T T dimensiones de las piezas.
ID OD T (or W, L)

3. PIEZAS INTERNAS DEL CONJUNTO

Las piezas marcadas con un punto (.) antes de la denominación, forman parte de un conjunto.

4. NOTICIA DE MODIFICACIÓN

Se remitire un boletín en el caso de modificación de piezas, que incluye modificaciones de intercambiabilidad entre piezas nuevas y viejas.

5. NOTA

5-1. Hay ciertas diferencias entre las piezas de producción en serie y las de recambio por razones administrativas y por su uso común en otros modelos.

5-2. En cuanto a las mangueras de goma y los tubos de vinilo, sírvase usarlos cortando según la longitud mencionada en el catálogo o según la realmente requerida por el vehículo.

5-3. Debe observarse que las ilustraciones son para una rápida referencia del número de pieza y no para usarse como un manual de montaje; para ello emplee siempre el "MANUAL DE SERVICIO DE SUZUKI".


6. NUMERO DE SERIE DE MARCO O CHASIS

GS125-2AK7: LC6PCJK6 70802760~

➡ Si las conexiones del ramal eléctrico se encuentran bajo el tanque de combustible, a su motocicleta le corresponden las piezas marcadas con el código P71.


Favor confirmar con el Departamento de Repuestos antes de pedir la pieza.

FIG.1 (B-2) GASKET SET




GASKET SET

FIG.2 (B-3) CYLINDER HEAD

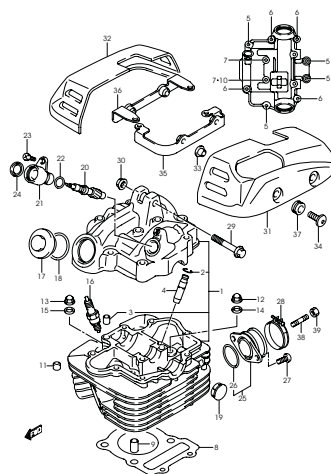


CYLINDER HEAD

FIG.3 (B-5) CYLINDER

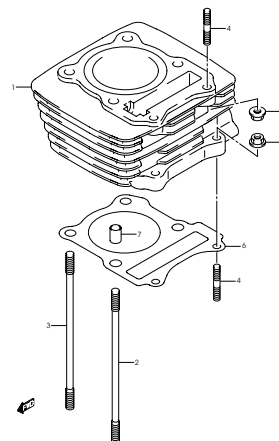


CYLINDER

FIG.4 (B-6) CRANKCASE

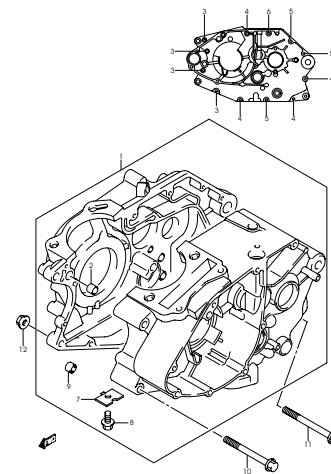


CRANKCASE

FIG.5 (B-7) CRANKCASE COVER

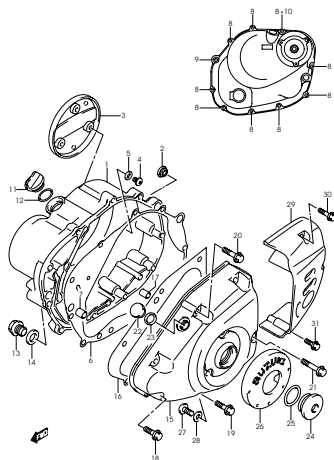


CRANKCASE COVER

FIG.6 (B-9) CRANKSHAFT

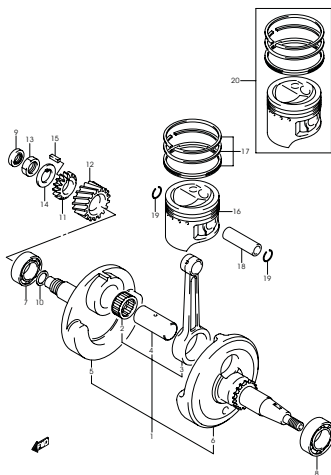


CRANKSHAFT

FIG.7 (B-11) STARTER CLUTCH

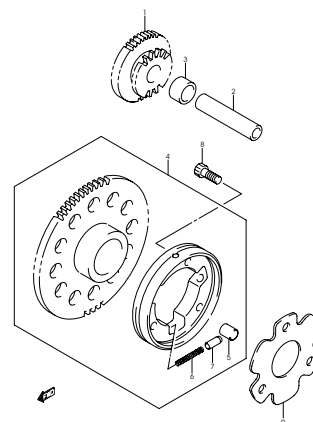


STARTER CLUTCH

FIG.8 (C-2) CAM SHAFT - VALVE

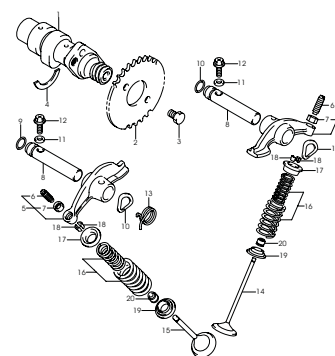


CAM SHAFT / VALVE

FIG.9 (C-3) CAM CHAIN

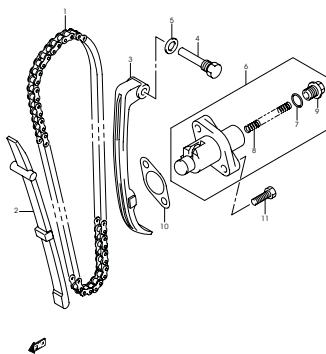


CAM CHAIN

FIG.10 (C-4) CARBURETOR

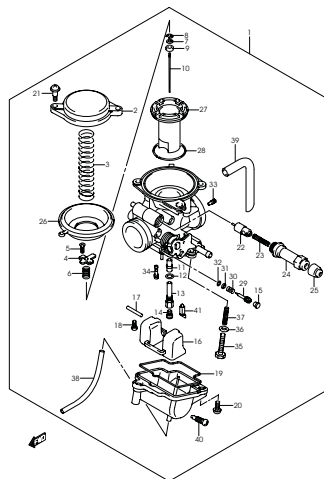


CARBURETOR

FIG.11 (C-6) AIR CLEANER

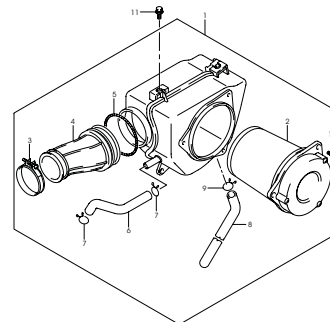


AIR CLEANER

FIG.12 (C-7) MUFFLER

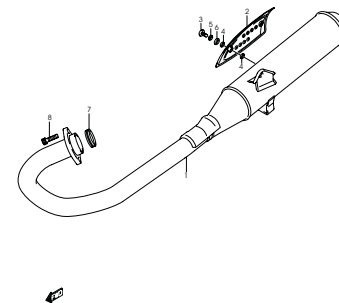


MUFFLER

FIG.13 (C-8) OIL PUMP

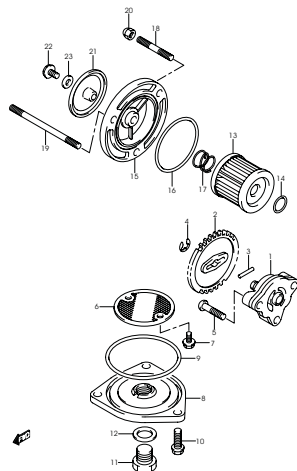


OIL PUMP

FIG.14 (D-2) CLUTCH

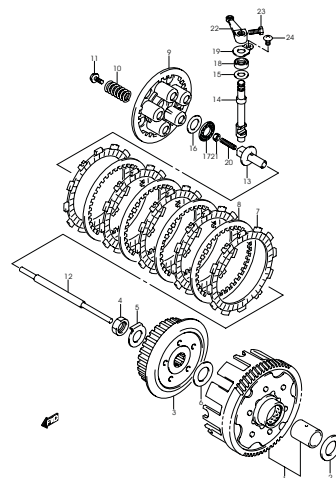


CLUTCH

FIG.15 (D-3) TRANSMISSION

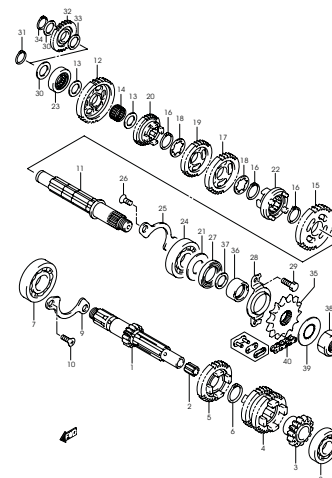


TRANSMISSION

FIG.16 (D-5) GEAR SHIFTING

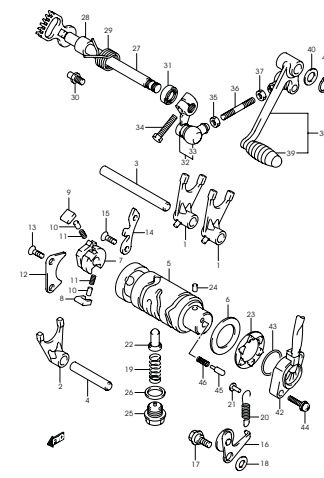


GEAR SHIFTING

FIG.17 (D-7) STARTING MOTOR (DENSO)

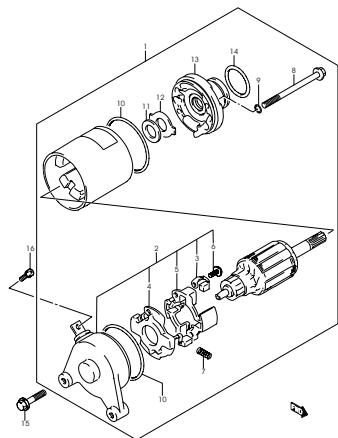


STARTING MOTOR

FIG.18 (D-8) MAGNETO

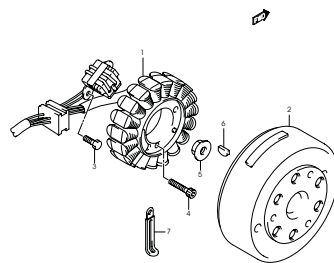


MAGNETO

FIG.19 (D-9) BATTERY

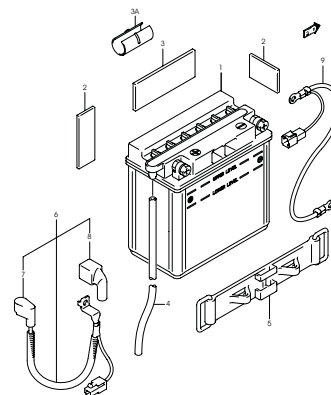


BATTERY

FIG.20 (D-10) ELECTRICAL

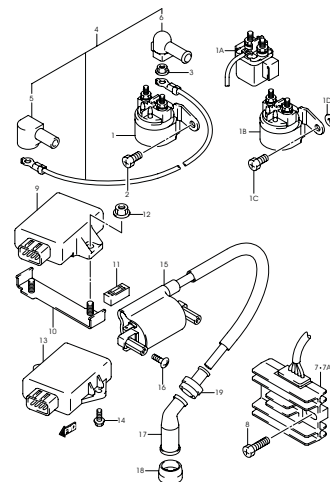


ELECTRICAL

FIG.21 (D-11) SPEEDOMETER

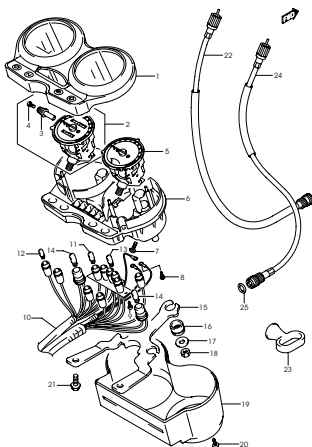


SPEEDOMETER

FIG.22 (E-2) HEADLAMP

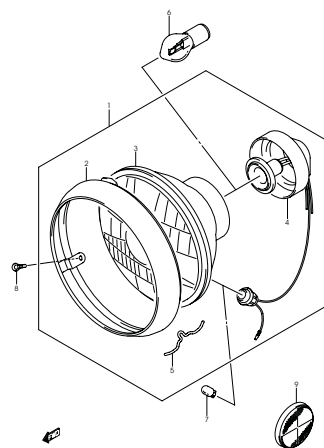


HEADLAMP

FIG.23 (E-3) TURN SIGNAL LAMP

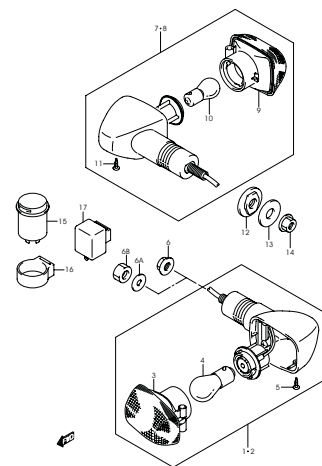


TURN SIGNAL LAMP

FIG.24 (E-4) REAR COMBINATION LAMP

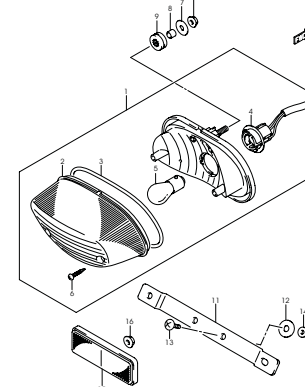


REAR COMBINATION LAMP

FIG.25 (E-5) WIRING HARNESS

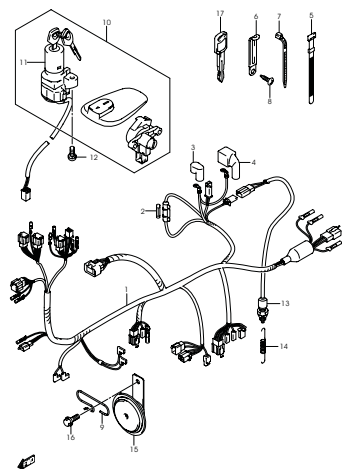


WIRING HARNESS

FIG.25A (E-6) HANDLESWITCH

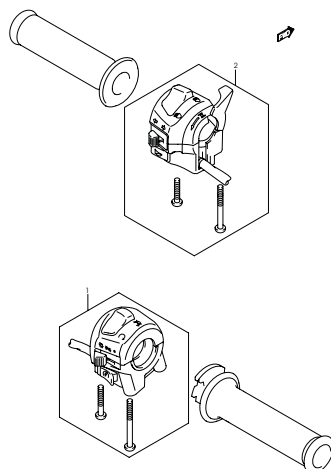


HANDLE SWITCH

FIG.26 (F-2) FRAME

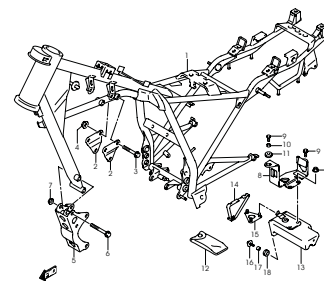


FRAME

FIG.27 (F-3) STAND

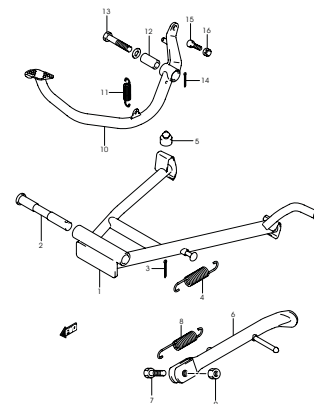


STAND

FIG.28 (F-4)FOOTREST

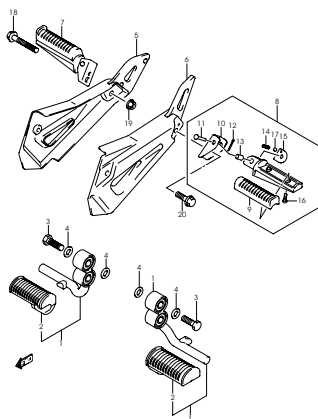


FOOTREST

FIG.29 (F-5) CARRIER (OPTIONAL)

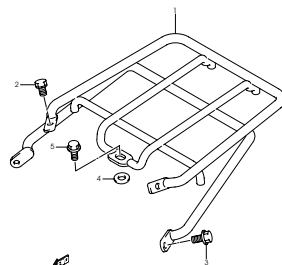


CARRIER

FIG.30 (F-6) FUEL TANK

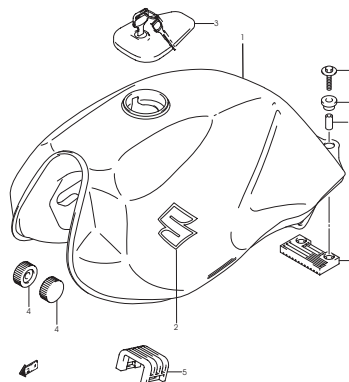


FUEL TANK

FIG.31 (F-7) FUEL COCK

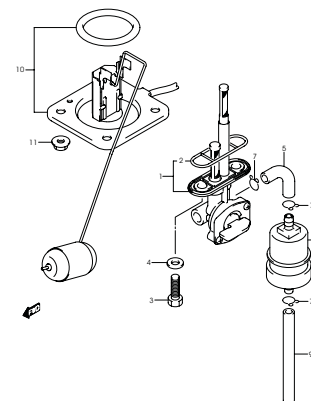


FUEL COCK

FIG.32 (F-8) FRAME COVER

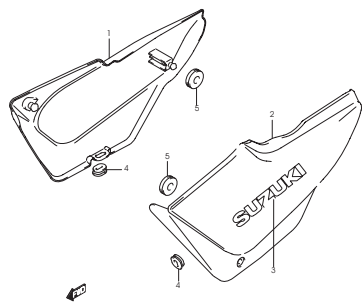


FRAME COVER

FIG.33 (F-9) HEADLAMP HOUSING

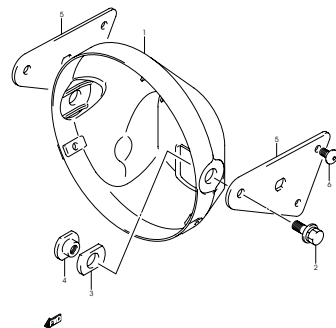


HEADLAMP HOUSING

FIG.34 (F-10) FRONT FENDER

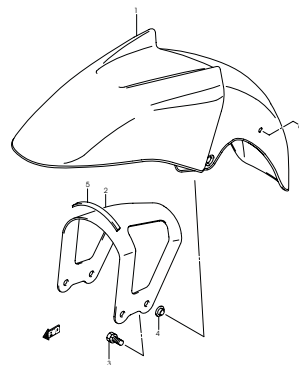


FRONT FENDER

FIG.35 (F-11) HANDLEBAR

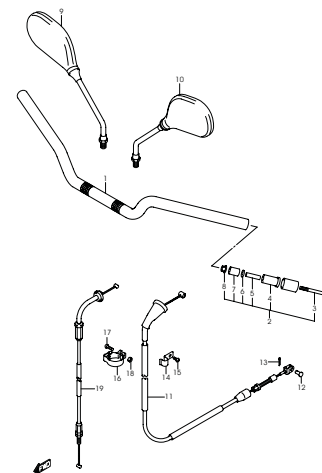


HANDLEBAR

FIG.36 (G-2) HANDLELEVER

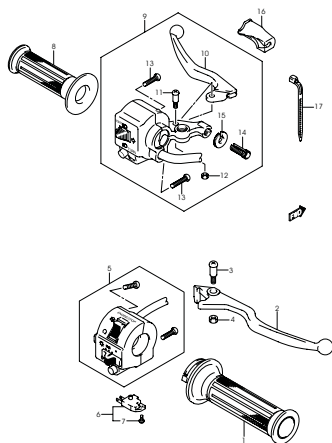


HANDLE LEVER

FIG.37 (G-3) REAR FENDER

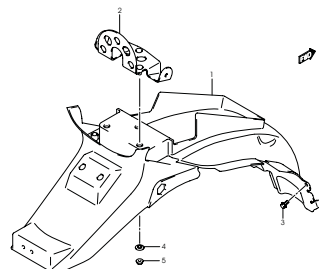


REAR FENDER

FIG.38 (G-4) LABEL

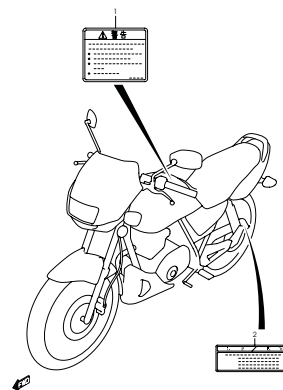


LABEL

FIG.39 (H-2) SEAT

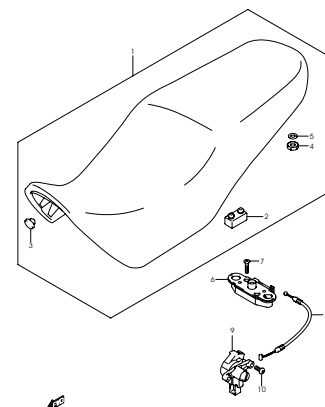


SEAT

FIG.40 (H-3) SEAT TAIL COVER

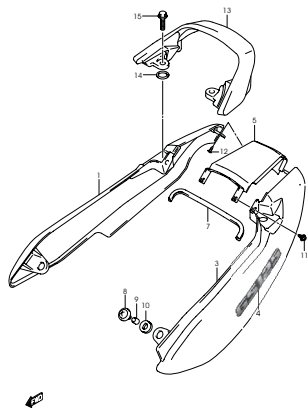


SEAT TAIL COVER

FIG.41 (H-4) FRONT DAMPER

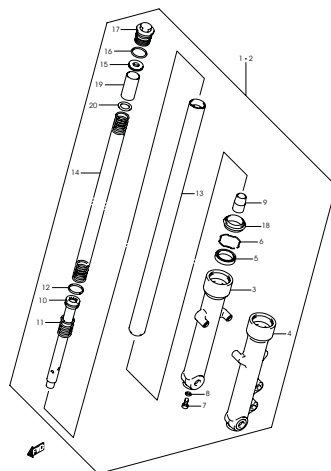


FRONT DAMPER

FIG.42 (H-5) STEERING STEM

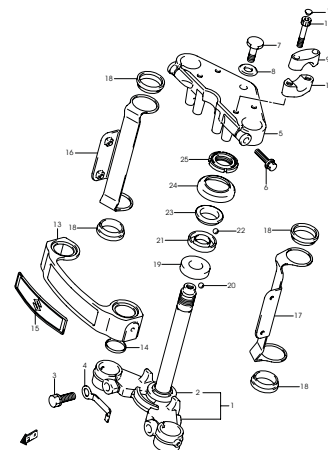


STEERING STEM

FIG.43 (I-2) FRONT WHEEL

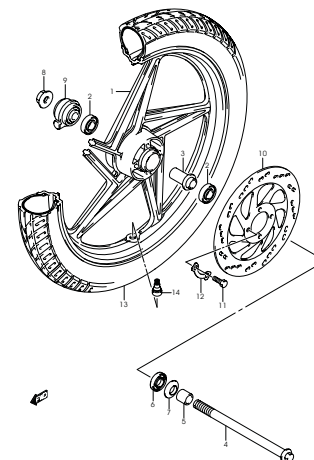


FRONT WHEEL

FIG.44 (I-3) FRONT CALIPER

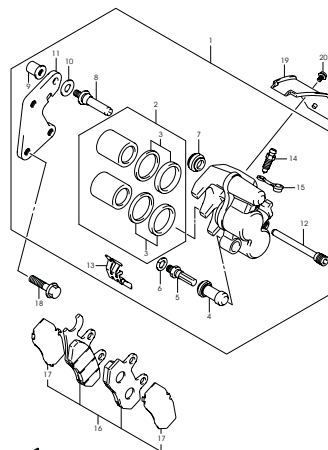


FRONT CALIPER

FIG.45A (I-4) FRONT MASTER CYLINDER

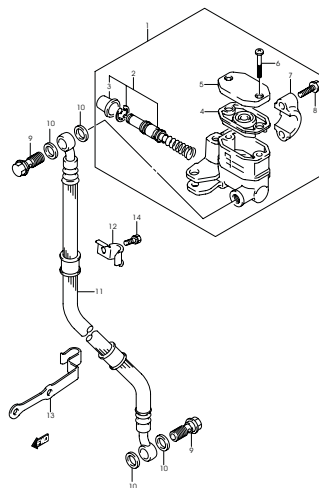


FRONT MASTER CYLINDER

FIG.46 (I-5) REAR SWING ARM

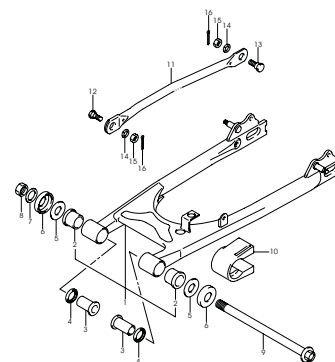


REAR SWINGARM

FIG.47 (I-6) CHAIN CASE

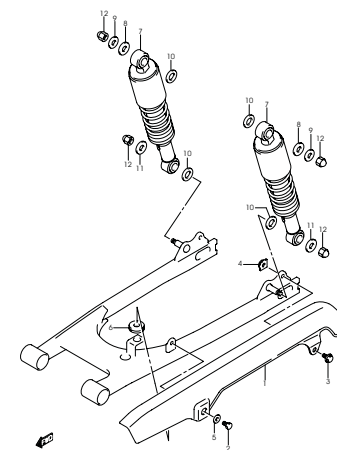

CHAIN CASE

FIG.48 (J-2) REAR WHEEL

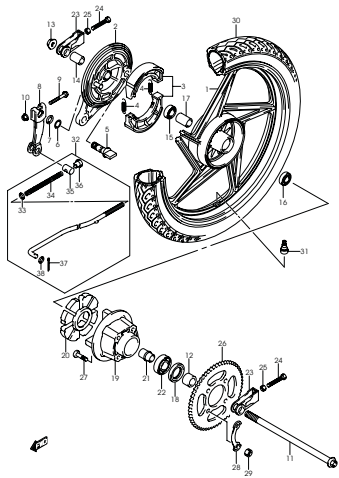

REAR WHEEL

FIG.1

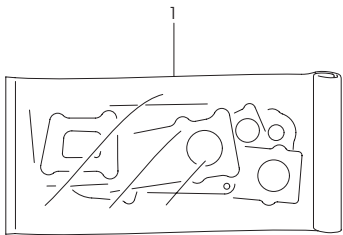


FIG.1 (B-2) GASKET SET

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	11402-12851	GASKET SET	1	OPT
2	11141-12F50	.GASKET CYLINDER HEAD	1	
3	11241-05311	.GASKET, CYLINDER (NA)	1	
4	11482-05311	.GASKET, CLUTCH COVER	1	
5	11483-05312	.GASKET, MAGNETO COVER	1	NOT SHOWN
6	12837-32410	.GASKET, TENSIONER ADJUSTER	1	NOT SHOWN
7	14181-14D00-000	.GASKET, EXHAUST PIPE	1	NOT SHOWN
8	09280-13004	.O RING (D:1.9,ID:13)	1	NOT SHOWN
9	09280-30001	.O RING (D:3,ID:29.5)	2	NOT SHOWN
10	09280-32006	.O RING (D:2.4,ID:31.7)	1	NOT SHOWN
11	09280-54001	.O RING (D:2.4,ID:52.6)	1	NOT SHOWN
12	09280-60005	.O RING	1	NOT SHOWN

FIG.2

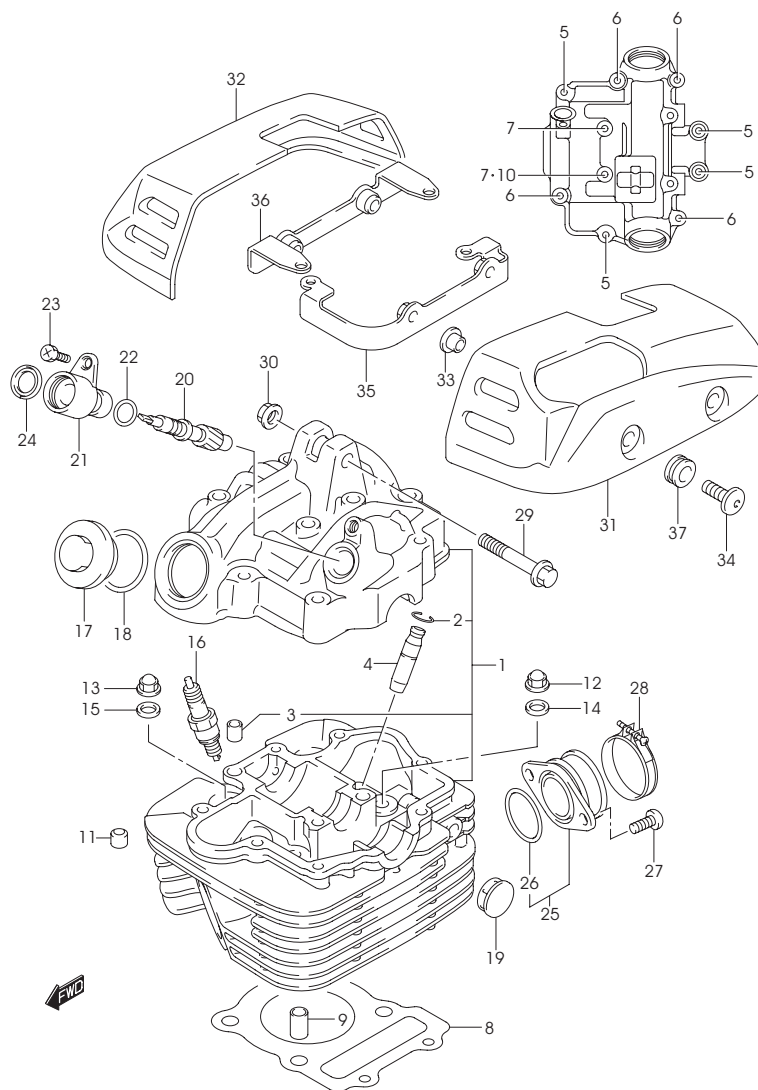


FIG.2 (B-3) CYLINDER HEAD

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	11100-12F50	HEAD ASSY, CYLINDER	1	
2	09381-10004	.RING, VALVE GUIDE	2	
3	09206-08001	.PIN	2	
4	11115-12F70	GUIDE, VALVE (OS:0.3)	2	OPT
5	01550-06357	BOLT (6X35)	4	
6	01550-06407	BOLT (6X40)	4	
7	01550-06607	BOLT (6X60)	2	
8	11141-12F50	GASKET, CYLINDER HEAD	1	
9	04211-11169	PIN, CYLINDER HEAD	2	
10	09168-06023	WASHER	1	
11	11151-45000	PAD, RUBBER	16	
12	09159-08049	NUT	2	
13	09159-08049	NUT	2	
14	09168-08032	GASKET (8.5X17X2.3)	2	
15	09168-08032	GASKET (8.5X17X2.3)	2	
16 -1	09482-00456	SPARK PLUG (NGK,CR8E)	1	
16 -2	09482-00578	SPARK PLUG (B8RC)	1	
16 -3	09482-00516	SPARK PLUG (NGK,CR7E)	1	OPT
16 -4	09482-00458-	SPARK PLUG (NGK,CR9E)	1	OPT
16 -5	09482-00515	SPARK PLUG (ND,U22ESR-N)	1	OPT
16 -6	09482-00459	SPARK PLUG (ND,U27ESR-N)	1	OPT
16 -7	09482-00577	SPARK PLUG (B7RC)	1	OPT
17	11175-18910	CAP, INSPECTION	2	
18	09280-30001	O RING (D:3.0,ID:29.5)	2	
19	09241-22002	PLUG, HEAD	1	
20	26431-05220-000	GEAR, TACHOMETER DRIVEN	1	
21	26441-49000	SLEEVE	1	
22	26451-45000	SEAL BAND	1	
23	09128-05101	SCREW	1	
24	09289-05002	OIL SEAL	1	
25	13101-053A0	PIPE ASSY, INTAKE	1	

FIG.2

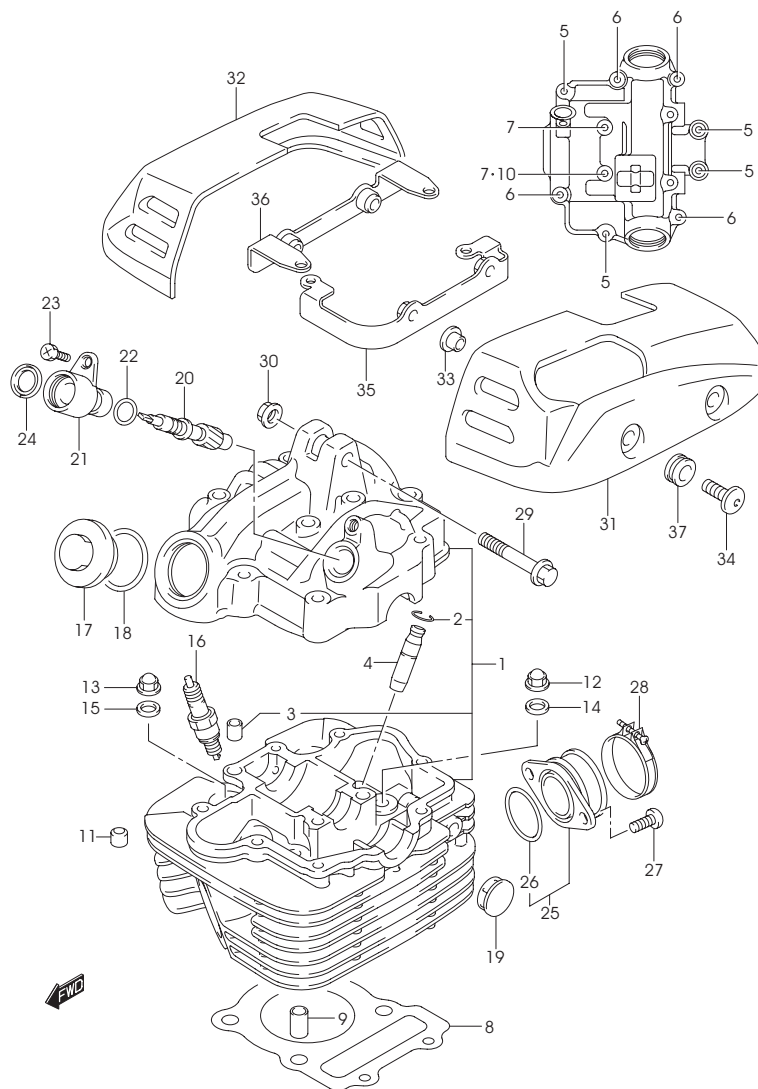


FIG.2 (B-4) CYLINDER HEAD

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
26	09280-32006	.O RING (D:2.4,ID:31.7)	1	
27	02122-06163	SCREW	2	
28	09402-46208	CLAMP	1	
29	09103-08081-	BOLT (8X50)	1	
30	08319-31088	NUT	1	
31	11171-12F50	CAP, CYLINDER HEAD COVER, LH	1	
32	11172-12F50	CAP, CYLINDER HEAD COVER, RH	1	
33	11177-12F50	SPACER, HEAD COVER CAP	4	
34	11178-12F50	BOLT	4	
35	11179-12F50	BRACKET, CYLINDER HEAD CAP, LH	1	
36	11179-12F60	BRACKET, CYLINDER HEAD CAP, RH	1	
37	11181-12F50	CUSHION, HEAD COVER CAP	4	

FIG.3

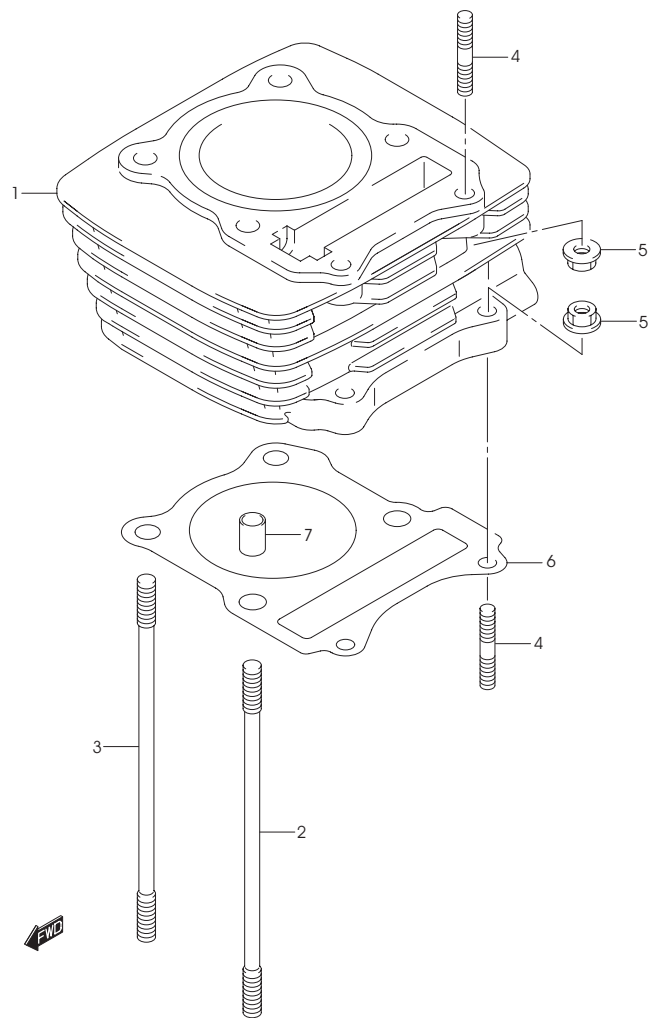


FIG.3 (B-5) CYLINDER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	11210-12F50-0F0	CYLINDER	1	
2	09140-10043	STUD BOLT (L:150)	2	
3	09108-08089	STUD BOLT (L:155)	2	
4	01421-06257	STUD BOLT (L:25)	4	
5	08316-10067	NUT	4	
6	11241-05311	GASKET, CYLINDER (NA)	1	
7	04211-11169	PIN (L:16)	2	

FIG.4

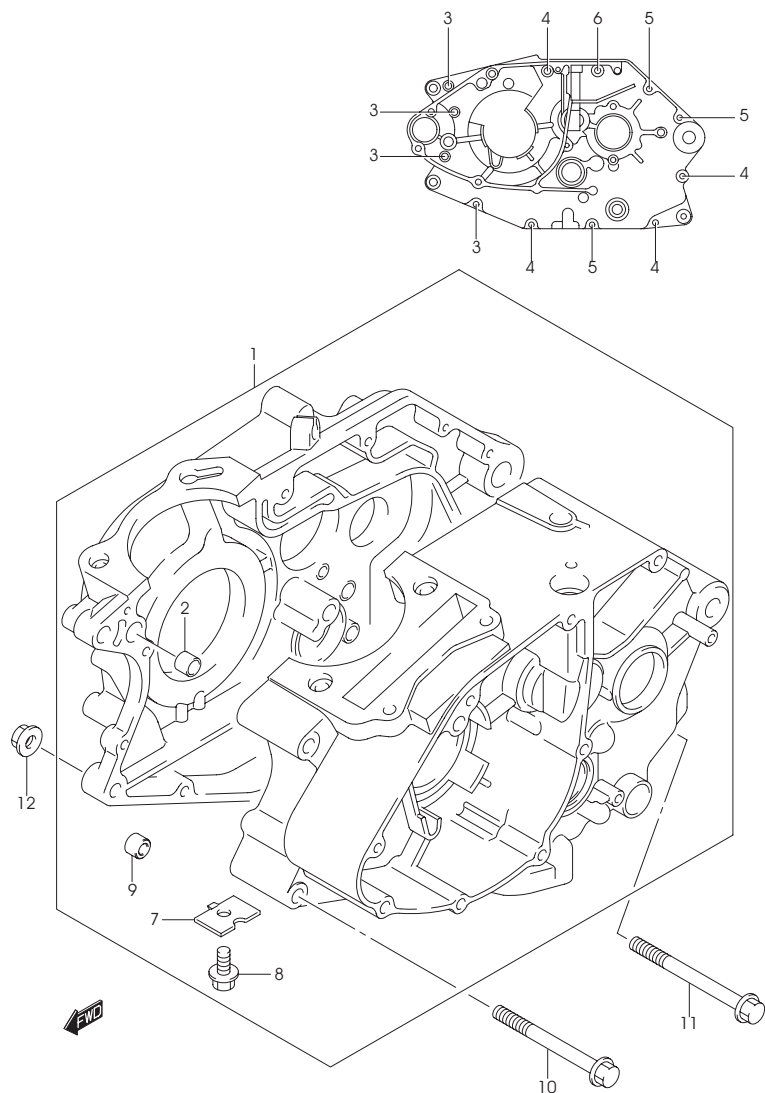


FIG.4 (B-6) CRANKCASE

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	11300-05380	CRANKCASE ASSY	1	
2	04211-13189	.PIN	2	
3	01547-06557	.BOLT (6X55)	4	
4	01547-06607	.BOLT (6X60)	4	
5	01547-06757	01547-06757-000	3	
6	01547-06857	.BOLT, CRANKCASE	1	
7	11319-05220	.PLATE	1	
8	01500-06103	.BOLT (6X10)	1	
9	11325-12F50	.SPACER, CRANKCASE BOLT	1	
10	09103-08016	BOLT (8X80)	2	
11	09103-08010	BOLT (8X88)	1	
12	08319-31088	NUT	3	

FIG.5

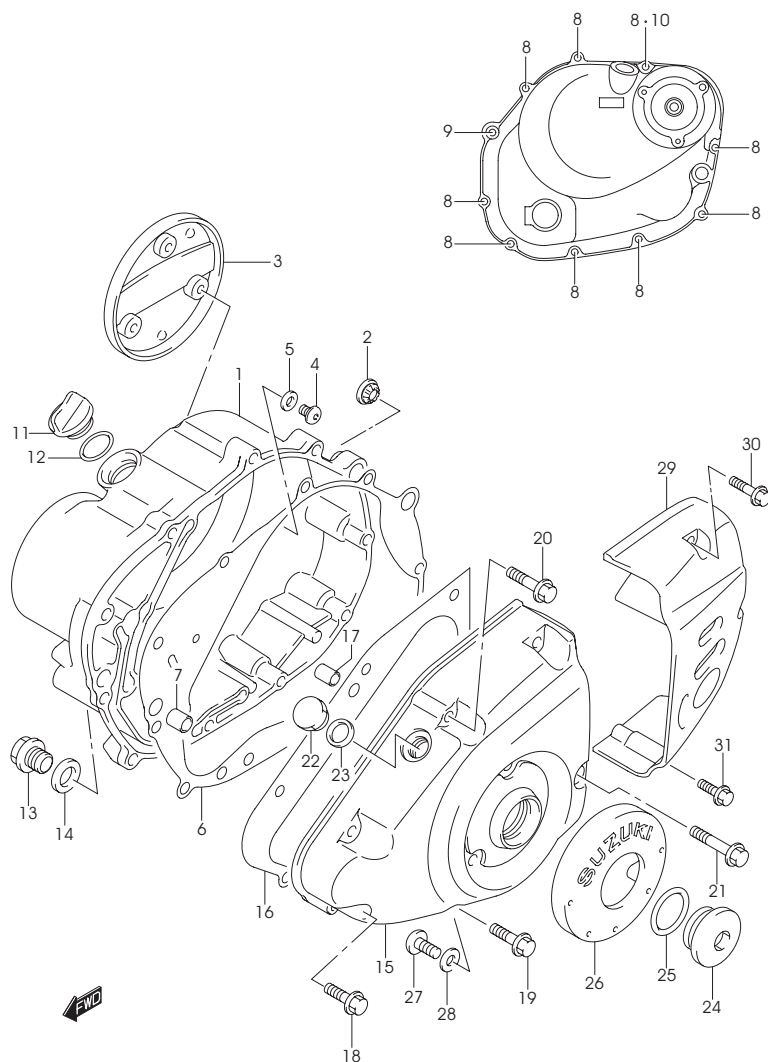


FIG.5 (B-7) CRANKCASE COVER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	11340-12F50	COVER, CLUTCH	1	
2	11971-45010	.LENS, OIL LEVEL	1	
3	11383-12F70	CAP, CLUTCH COVER	1	
4	02142-06123	BOLT, CLUTCH COVER CAP	3	
5	09168-06023	GASKET	3	
6	11482-05311	GASKET, CLUTCH COVER	1	
7	04211-13189	PIN	2	
8	01547-06307	BOLT (6X30)	9	
9	01547-06457	BOLT (6X45)	1	
10	09168-06023	GASKET	1	
11	09259-20007	PLUG, OIL FILLER	1	
12	09280-17003	O RING (D:3.1,ID:16.8)	1	
13	09247-14026	PLUG, OIL CHECK	1	
14	09168-14002	GASKET	1	
15	11351-12F50	COVER, MAGNETO	1	
16	11483-05312	GASKET, MAGNETO COVER	1	
17	04211-09129	PIN	1	
18	01547-06307	BOLT (6X30)	2	
19	01547-06357	BOLT (6X35)	2	
20	01547-06407	BOLT (6X40)	2	
21	01547-06507	BOLT (6X50)	1	
22	09247-12104	PLUG, T.D.C	1	
23	09168-12002	GASKET	1	
24	09259-26016-000	PLUG	1	
25	09280-22008	O RING (D:3.1,ID:22.7)	1	

FIG.5

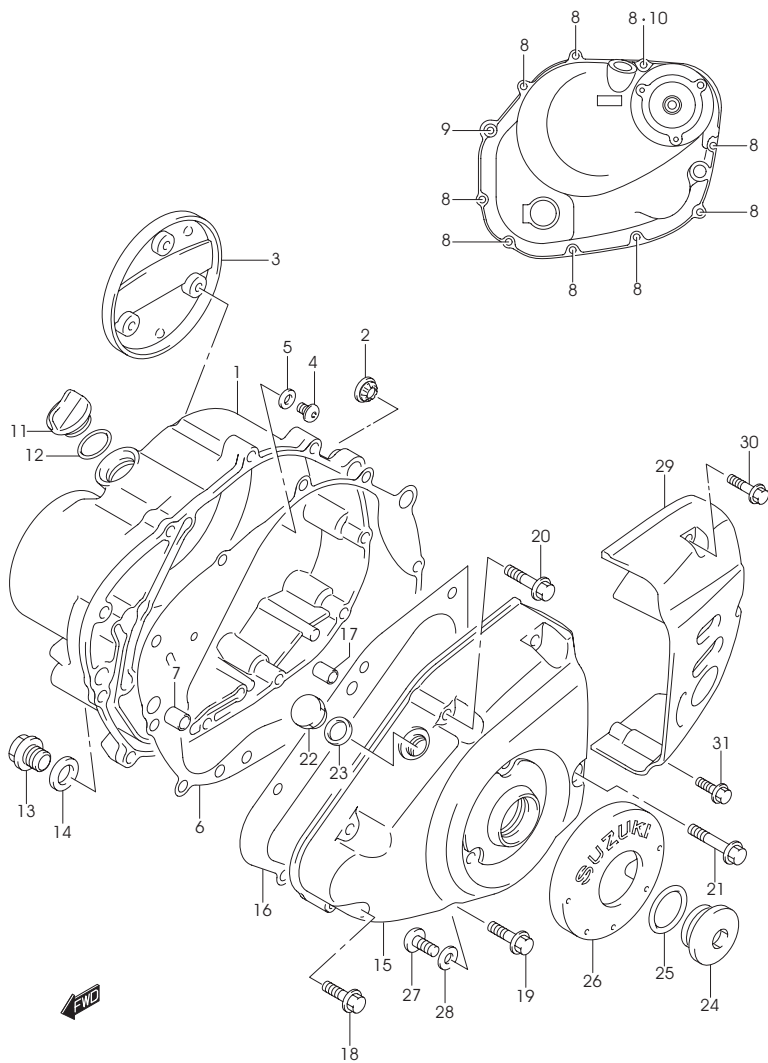


FIG.5 (B-8) CRANKCASE COVER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
26	11384-12F70	CAP, MAGNETO COVER	1	
27	11358-12F50	BOLT, MAGNETO COVER CAP	3	
28	09168-06023	GASKET	3	
29	11361-12F70	COVER, ENGINE SPROCKET	1	
30	01547-05357	BOLT	2	
31	01547-05257	BOLT	1	

FIG.6

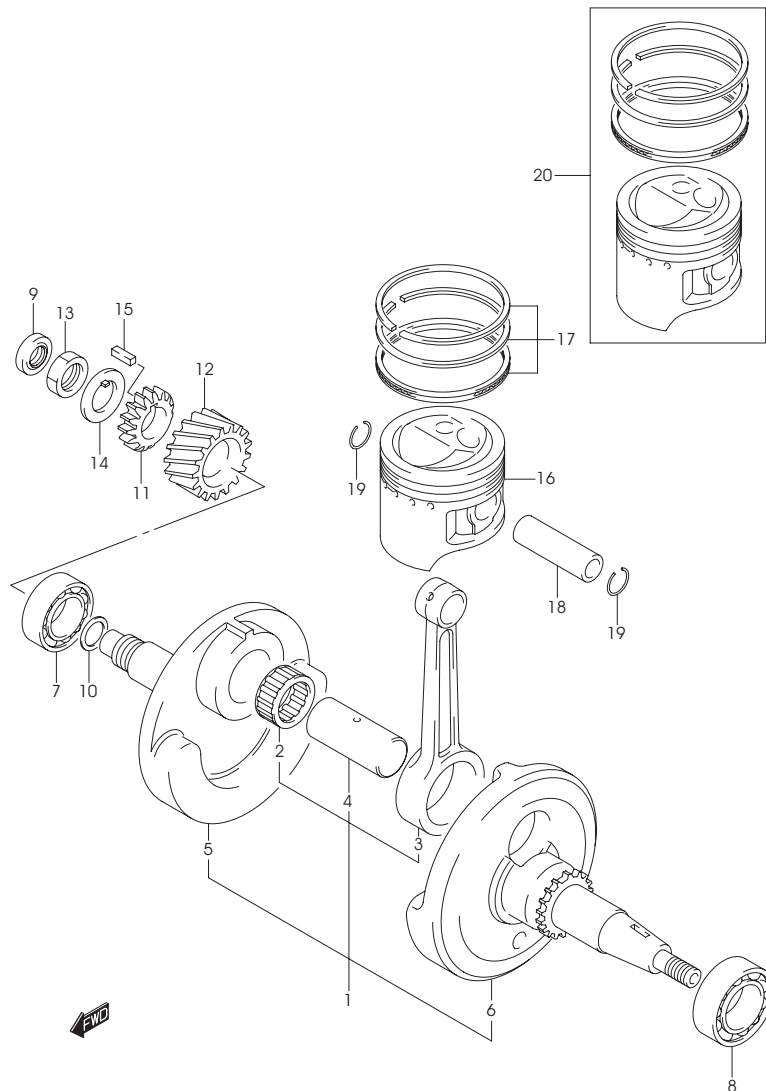


FIG.6 (B-9) CRANKSHAFT

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	12200-12FD1	CRANKSHAFT ASSY	1	
2	09263-28027-0B0	.BEARING (28X36X15.8)	1	
3	12161-12F80-0B0	.ROD, CONNECTING	1	
4	12211-05241	.PIN, CRANK	1	
5	12221-05220	.CRANKSHAFT, RH	1	
6	12261-12F50	.CRANKSHAFT, LH	1	
7	09262-28035	BEARING, RH (28X68X18)	1	
8	09262-35038	BEARING, LH (35X72X17)	1	
9	09282-12009	OIL SEAL, RH (12X21X7)	1	
10 -1	09181-28192	SHIM, CRANKSHAFT, RH (0.90)	1	
10 -2	09181-28193	SHIM, CRANKSHAFT, RH (0.95)	1	
10 -3	09181-28194	SHIM, CRANKSHAFT, RH (1.00)	1	
10 -4	09181-28197	SHIM, CRANKSHAFT, RH (1.05)	1	
10 -5	09181-28200	SHIM, CRANKSHAFT, RH (1.10)	1	
10 -6	09181-28202	SHIM, CRANKSHAFT, RH (1.15)	1	
10 -7	09181-28204	SHIM, CRANKSHAFT, RH (1.20)	1	
10 -8	09181-28207	SHIM, CRANKSHAFT, RH (1.25)	1	
10 -9	09181-28209	SHIM, CRANKSHAFT, RH (1.30)	1	
10 -10	09181-28022	SHIM, CRANKSHAFT, RH (1.35)	1	
10 -11	09181-28210	SHIM, CRANKSHAFT, RH (1.40)	1	
10 -12	09181-28023	SHIM, CRANKSHAFT, RH (1.45)	1	
10 -13	09181-28211	SHIM, CRANKSHAFT, RH (1.50)	1	
10 -14	09181-28024	SHIM, CRANKSHAFT, RH (1.55)	1	
10 -15	09181-28025	SHIM, CRANKSHAFT, RH (1.60)	1	
10 -16	09181-28026	SHIM, CRANKSHAFT, RH (1.65)	1	
10 -17	09181-28027	SHIM, CRANKSHAFT, RH (1.70)	1	
10 -18	09181-28028	SHIM, CRANKSHAFT, RH (1.75)	1	
10 -19	09181-28029	SHIM, CRANKSHAFT, RH (1.80)	1	

FIG.6

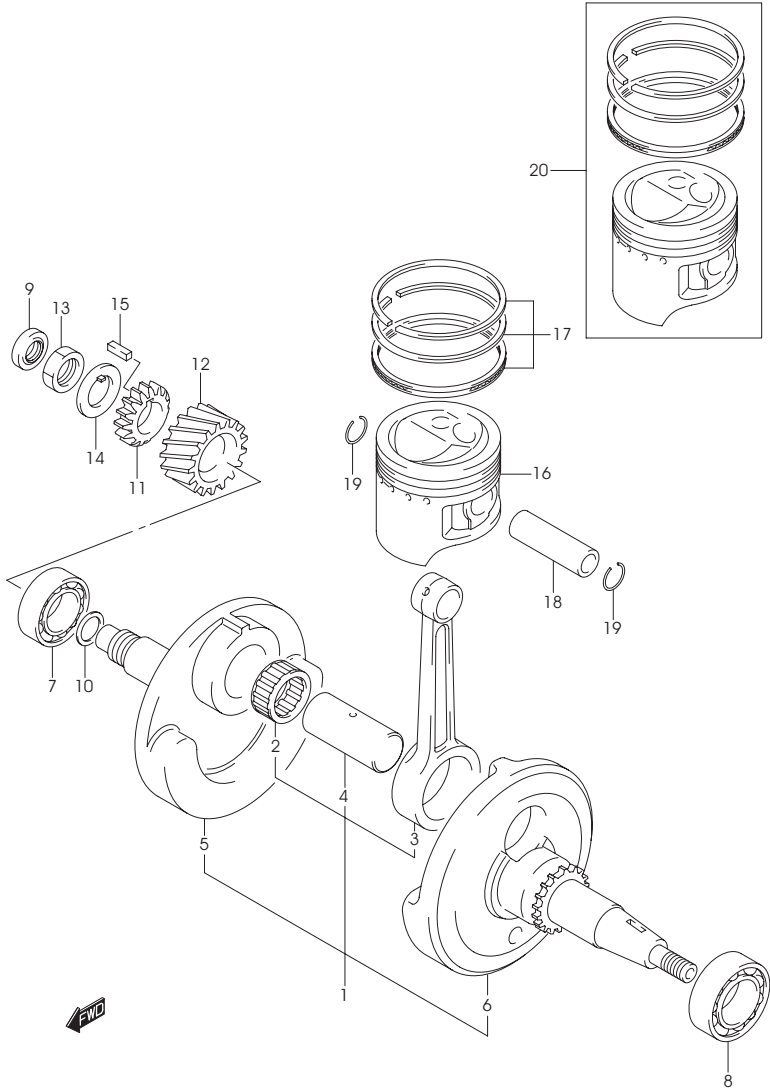
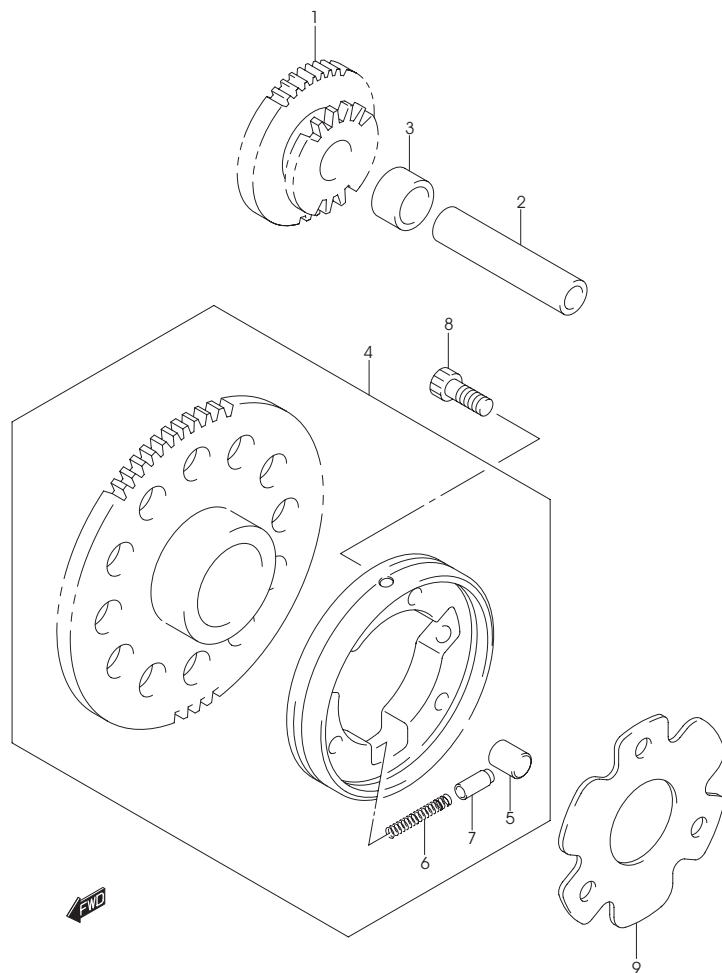


FIG.6 (B-10) CRANKSHAFT

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
11	16321-05220	GEAR, OIL PUMP DRIVE	1	
12	21111-05200-0C0	GEAR, PRIMARY DRIVE (NT:17)	1	
13	09140-16019	NUT	1	
14	09166-16012	LOCK WASHER	1	
15	09421-04004	KEY, GEAR	1	
16	12111-12F50-0F0	PISTON	1	
17	12140-16E00-000	RING SET, PISTON	1	
18	12151-12F00	PIN, PISTON	1	
19	09381-14001	CIRCLIP	2	
20	12100-12F50-050	PISTON SET (OS:0.5)	1	OPT

FIG.7

**FIG.7 (B-11) STARTER CLUTCH**

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	12611-05300	GEAR, STARTER IDLE	1	
2	09206-13003	PIN	1	
3	09180-13006	SPACER	1	
4	12600-12861	CLUTCH SET, STARTER	1	
5	09261-10003	.ROLLER	3	
6	09440-03013-000	.SPRING	3	
7	12633-05310-000	.PIECE	3	
8	07130-06163	BOLT	3	
9	12649-05300	SHIM	1	

FIG.8

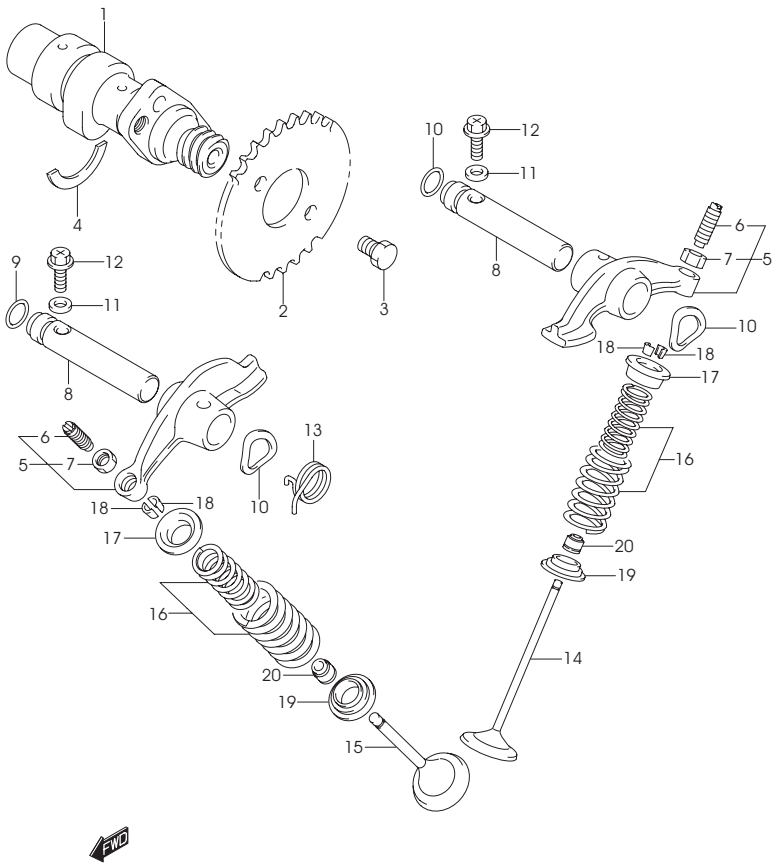


FIG.8 (C-2) CAM SHAFT - VALVE

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	12711-12F50-000	CAM SHAFT	1	
2	12741-12F70	SPROCKET	1	
3	09111-06032	BOLT (6X10.5)	2	
4	09390-22002	C RING	1	
5	12850-25C00	ARM, VALVE ROCKER	2	
6	12842-32411	.SCREW	2	
7	12843-32400	.NUT	2	
8	12861-05201	SHAFT, ROCKER ARM	2	
9	09280-09005	O RING (D:1.9,ID:8.6)	2	
10	09164-12025	WAVE WASHER	2	
11	09168-06023	GASKET	2	
12	02162-06257	BOLT	2	
13	09448-23002	SPRING, VALVE ROCKER ARM EXH	1	
14	12911-12F60	VALVE, INTAKE	1	
15	12912-12F60	VALVE, EXHAUST	1	
16	12920-12F50-000	SPRING SET, VALVE	2	
17 -1	12931-09400	RETAINER, SPRING	2	P71
17 -2	12931-09420	RETAINER, SPRING	2	P9
18	12932-27A10	COTTER, VALVE	4	
19	12933-39E00	SEAT, SPRING	2	
20	09289-05011	OIL SEAL	2	

FIG.9

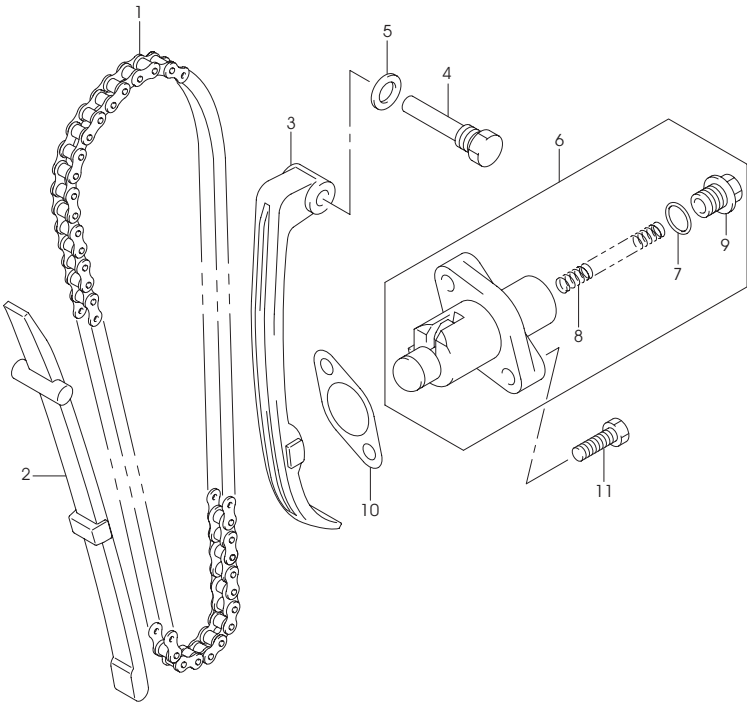


FIG.9 (C-3) CAM CHAIN

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	12760-12F60	CHAIN, CAM SHAFT DRIVE	1	100LE
2	12771-12F60	GUIDE, CAM CHAIN	1	
3	12811-12F60	TENSIONER, CAM CHAIN	1	
4	12812-32400	BOLT	1	
5	09168-08016	WASHER	1	
6	12830-12F50	ADJUSTER ASSY, TENSIONER	1	
7	12832-12F50	.O RING	1	
8	12833-12F50	.SPRING	1	
9	12834-12F50	.PLUG	1	
10	12837-32410	GASKET, TENSIONER ADJUSTER	1	
11	01500-06203-000	BOLT	2	


This exploded view diagram illustrates the assembly of a carburetor. The components are numbered as follows:

- 1**: Main carburetor body
- 2**: Air filter base
- 3**: Air filter spring
- 4**: Air filter gasket
- 5**: Air filter screw
- 6**: Air filter O-ring
- 7**: Jet needle
- 8**: Jet needle pin
- 9**: Jet needle spring
- 10**: Jet needle guide
- 11**: Jet needle
- 12**: Jet needle pin
- 13**: Jet needle spring
- 14**: Jet needle guide
- 15**: Jet needle
- 16**: Jet needle pin
- 17**: Jet needle spring
- 18**: Jet needle guide
- 19**: Jet needle
- 20**: Jet needle pin
- 21**: Jet needle spring
- 22**: Jet needle guide
- 23**: Jet needle
- 24**: Jet needle pin
- 25**: Jet needle spring
- 26**: Jet needle guide
- 27**: Jet needle
- 28**: Jet needle pin
- 29**: Jet needle spring
- 30**: Jet needle guide
- 31**: Jet needle
- 32**: Jet needle pin
- 33**: Jet needle spring
- 34**: Jet needle guide
- 35**: Jet needle
- 36**: Jet needle pin
- 37**: Jet needle spring
- 38**: Jet needle guide
- 39**: Jet needle
- 40**: Jet needle pin
- 41**: Jet needle spring

The diagram also includes a 'FWD' arrow pointing to the right, indicating the forward direction of assembly.

REF N°	PART N°	DESCRIPTION	Q`TY	REMARKS
1	13200-45F00	CARBURETOR ASSY	1	
2	13502H12F00H000	.DIAPHRAGM COVER ASSY	1	
3	13417H47E00H000	.SPRING	1	
4	13581-05F00	.PLATE	1	
5	13603-05F00	.SCREW	2	
6	13388-20E20	.SPRING	1	
7	13382-46E00	.WASHER	1	
8	13394-17E60	.E RING	1	
9	13574-05F00	.RING	1	
10	13383-054G0	.NEEDLE, JET (4DH41-2)	1	
11	09494-00907	.JET, NEEDLE (P-0)	1	
12	13246-43010	.O RING	1	
13	13385-05F00	.HOLDER, JET	1	
14	09491-22013	.JET, MAIN (110)	1	
15	13282-05G00	.CAP	1	
16	13240H12FG0H000	.FLOAT ASSY	1	
17	13254-20010	.PIN, FLOAT	1	
18	02112-04083	.SCREW	1	
19	13251H47E00H000	.GASKET, FLOAT BODY	1	
20	13601-05148	.SCREW	2	
21	13247-33E00	.SCREW	2	
22	13411-12F00	.PLUNGER ASSY	1	
23	13417-01010	.SPRING	1	
24	13418-053S0	.HOLDER, GUIDE	1	
25	13681-04010	.CAP	1	
26	13507-054G0	.DIAPHRAGM	1	
27	13500H48F00H000	.VALVE, PISTON	1	
28	13504-16E00	.RING	1	
29	13279H12F20H000	.ADJUSTER (2,5/8)	1	
30	13268-47070	.SPRING	1	
31	13291-29900	.WASHER	1	
32	13295-29900	.O RING	1	

FIG.10

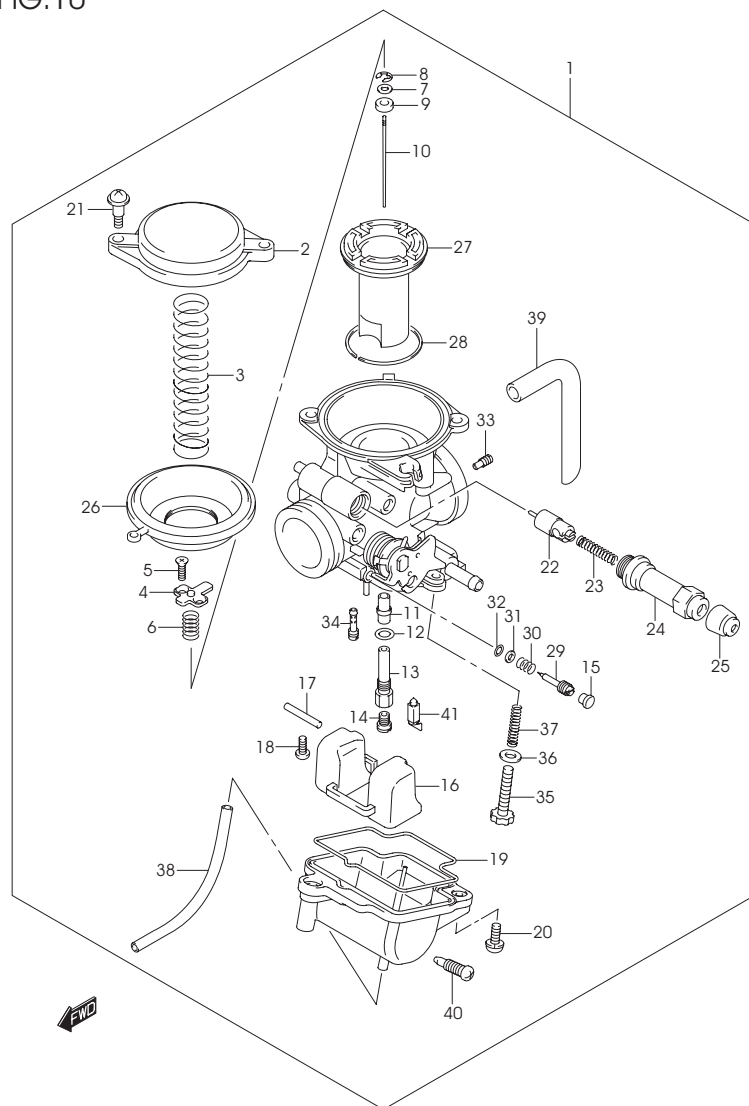**FIG.10 (C-5) CARBURETOR**

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
33	09493-25003-000	.JET, AIR (1.25)	1	
34	09492-12007-000	.JET, PILOT (12.5)	1	
35	13267H20E20H000	.SCREW, ADJUSTER	1	
36	13386-09410	.PACKING	1	
37	13268H054A0H000	.SPRING	1	
38	13683-28B10	.HOSE	1	
39	13684-053R0	.HOSE	1	
40	13247-13A00	.SCREW	1	
41	13370-054L0	.NEEDLE VALVE ASSY	1	

FIG.11

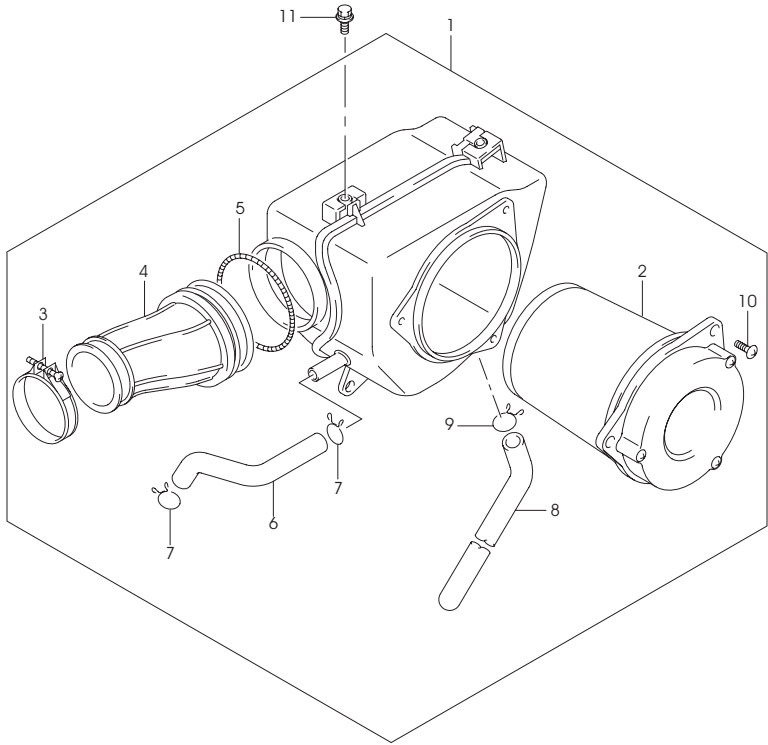


FIG.11 (C-6) AIR CLEANER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	13700-45F00-000	CLEANER ASSY, AIR	1	
2	13780H45F00H000	.FILTER	1	
3	09402-52208	.CLAMP	1	
4	13881H05390H000	.TUBE, OUTLET	1	
5	13826-45F00-000	.CLAMP	1	
6	13853-05300	.TUBE, BREATHER	1	
7	09401-14401	.CLIP	2	
8	13870-45F00	.TUBE, DRAIN	1	
9	09401-13409	.CIRCLIP	1	
10	02142-05127	.SCREW	3	
11	01580-06163	BOLT	3	



FIG.12

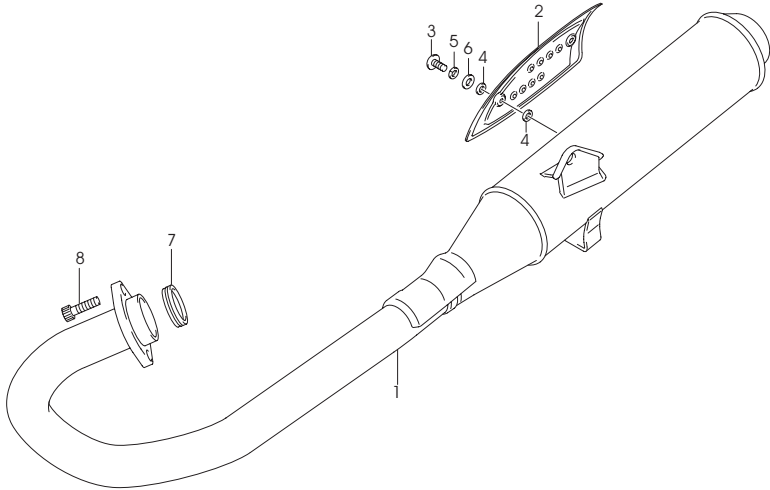


FIG.12 (C-7) MUFFLER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	14305-45F11	MUFFLER	1	
2	14790-45F10	COVER, MUFFLER BODY	1	
3	09139-06078	SCREW	2	
4	09168-06001	WASHER	4	
5	08321-01067	WASHER	2	
6	08322-01068	WASHER	4	
7	14181-14D00-000	GASKET, EXHAUST (NA)	1	
8	07130-08253	BOLT, EXHAUST PIPE	2	

FIG.13

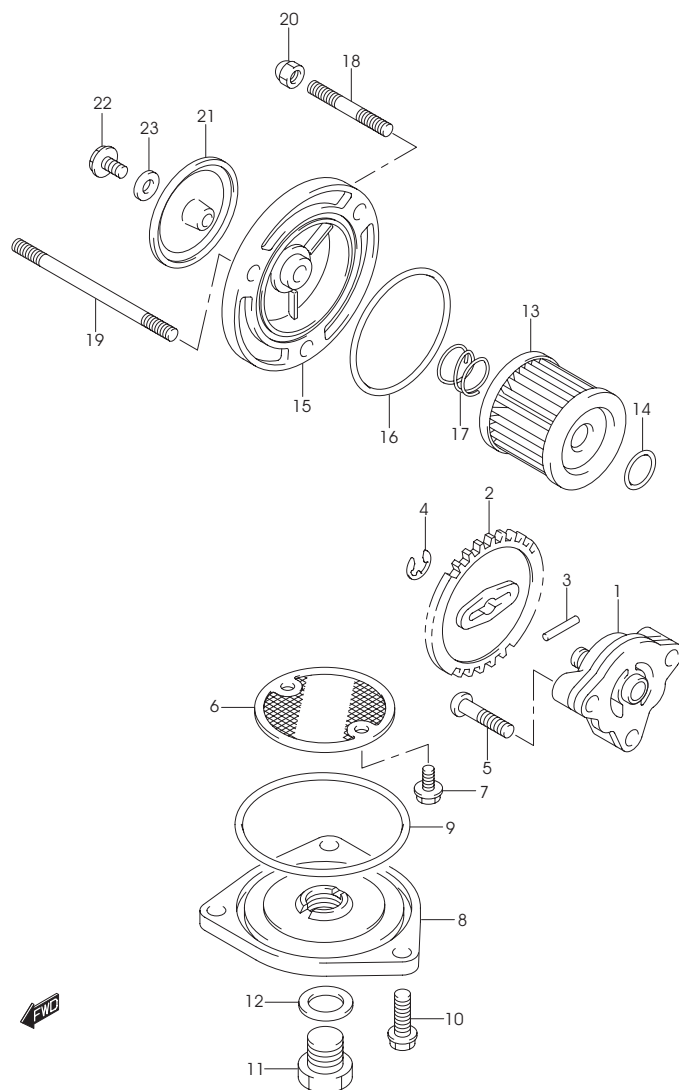


FIG.13 (C-8) OIL PUMP

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	21200-05880	GEAR ASSY, PRIMARY DRIVEN	1	NT:59
2	08211-20353	WASHER	1	
3	21411-05210-000	HUB, SLEEVE	1	
4	09140-16034	NUT	1	
5	09169-16003	LOCK WASHER	1	
6	08211-20352	WASHER, SLEEVE HUB THR	1	
7	21441-13A20-000	PLATE, DRIVE	5	
8	21451-19A00	PLATE, DRIVEN	4	
9	21462-14103	DISK, PRESSURE	1	
10	09440-15014	SPRING	5	
11	09116-05020	BOLT (5X16)	5	
12	23110-05220	ROD, PUSH	1	
13 -1	23121-38201	PIECE	1	P71
13 -2	23121-38210	PIECE	1	P9
14	23122-05200	CAM SHAFT	1	
15	09181-10195	WASHER (10X20X1.0)	1	
16	09160-15045	WASHER (15.5X28X1)	1	
17	09263-15003	THRUST BEARING (15X28X2)	1	
18	09282-10012	OIL SEAL (10X20X6)	1	
19	23117-05210	RETAINER, CLUTCH RELEASE	1	
20	09134-06010	SCREW	1	
21	09140-06023	NUT	1	
22	23271-46010	ARM, RELEASE	1	
23	01500-06167	BOLT	1	
24	02142-0610B	STOPPER, CLUTCH RELEASE	1	

FIG.14

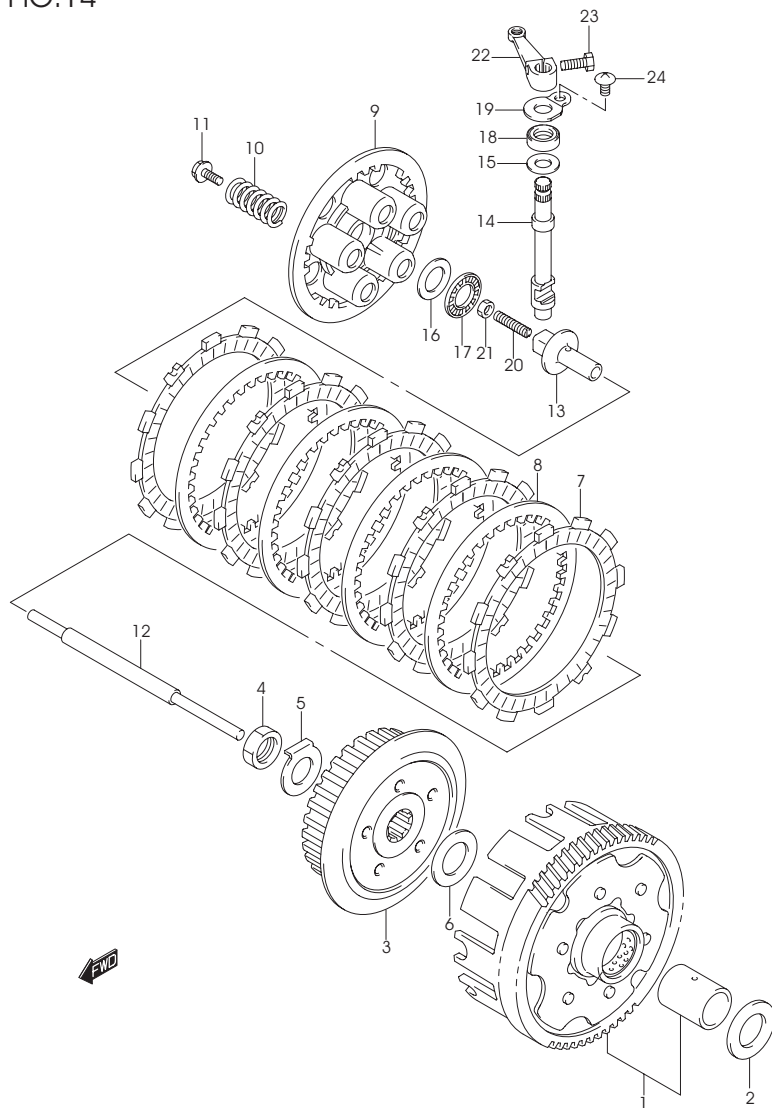


FIG.14 (D-2) CLUTCH

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	21200-05880	GEAR ASSY, PRIMARY DRIVEN	1	NT:59
2	08211-20353	WASHER	1	
3	21411-05210-000	HUB, SLEEVE	1	
4	09140-16034	NUT	1	
5	09169-16003	LOCK WASHER	1	
6	08211-20352	WASHER, SLEEVE HUB THR	1	
7	21441-13A20-000	PLATE, DRIVE	5	
8	21451-19A00	PLATE, DRIVEN	4	
9	21462-14103	DISK, PRESSURE	1	
10	09440-15014	SPRING	5	
11	09116-05020	BOLT (5X16)	5	
12	23110-05220	ROD, PUSH	1	
13	23121-38201	PIECE	1	
14	23122-05200	CAM SHAFT	1	
15	09181-10195	WASHER (10X20X1.0)	1	
16	09160-15045	WASHER (15.5X28X1)	1	
17	09263-15003	THRUST BEARING (15X28X2)	1	
18	09282-10012	OIL SEAL (10X20X6)	1	
19	23117-05210	RETAINER, CLUTCH RELEASE	1	
20	09134-06010	SCREW	1	
21	09140-06023	NUT	1	
22	23271-46010	ARM, RELEASE	1	
23	01500-06167	BOLT	1	
24	02142-0610B	STOPPER, CLUTCH RELEASE	1	

FIG.15

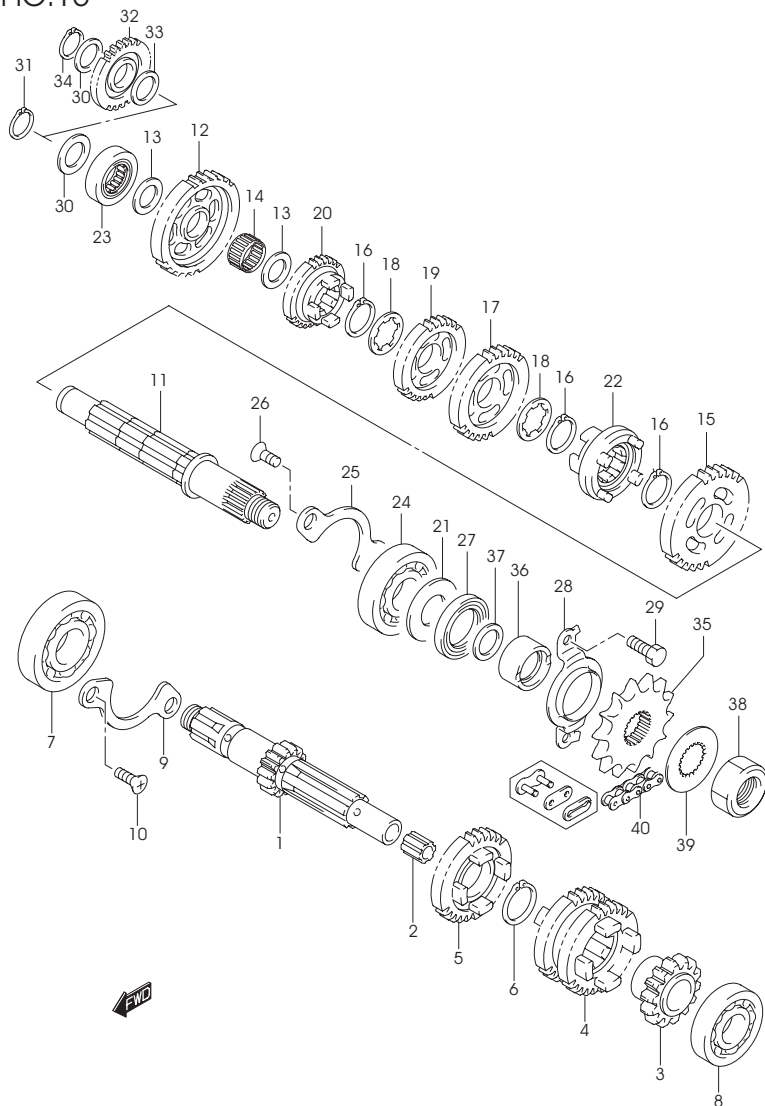


FIG.15 (D-3) TRANSMISSION

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	24121-05260-000	COUNTERSHAFT (NT:11)	1	
2	24125-38201	BUSH	1	
3	24221-05310	GEAR, 2ND DRIVE (NT:14)	1	
4	24231-05220-000	GEAR, 3/4 DRIVE (NT:19/21)	1	
5	24251-45F00	GEAR, 5TH DRIVE (NT:23)	1	
6	09380-20009	CIRCLIP	1	
7	09262-20069	BEARING, RH (20X47X14)	1	
8	08123-60027	BEARING, LH	1	
9	24741-05200	HOLDER, BEARING	1	
10	02122-0612A	SCREW	2	
11	24130-05370-000	DRIVE SHAFT	1	
12 -1	24311-05202	GEAR, 1ST DRIVEN (NT:33)	1	~04/10
12 -2	24310-05230	GEAR, 1ST DRIVEN (NT:33)	1	04/11~
13	08211-15251	WASHER	2	
14	09263-15023	BEARING (15X19X7.8)	1	
15	24320-05240	GEAR, 2ND DRIVEN (NT:26)	1	
16	09380-20009	CIRCLIP	3	
17	24331-05203	GEAR, 3RD DRIVEN (NT:26)	1	
18	09167-20011	WASHER (20.5X25X0.5)	2	
19	24341-45F00	GEAR, 4TH DRIVEN (NT:23)	1	
20	24351-45F00	GEAR, 5TH DRIVEN (NT:22)	1	
21	24359-05200	WASHER	1	
22	24421-05320	WHEEL	1	
23 -1	09263-15024	BEARING, RH (15X33X12)	1	~04/10
23 -2	09262-15031	BEARING, RH (15X35X11)	1	04/11~
24	09262-20069	BEARING, LH (20X47X14)	1	
25	24741-05200	HOLDER, BEARING	1	
26	02122-0612A	SCREW	2	
27	09283-27010	OIL SEAL, LH (27X40X6)	1	

FIG.15

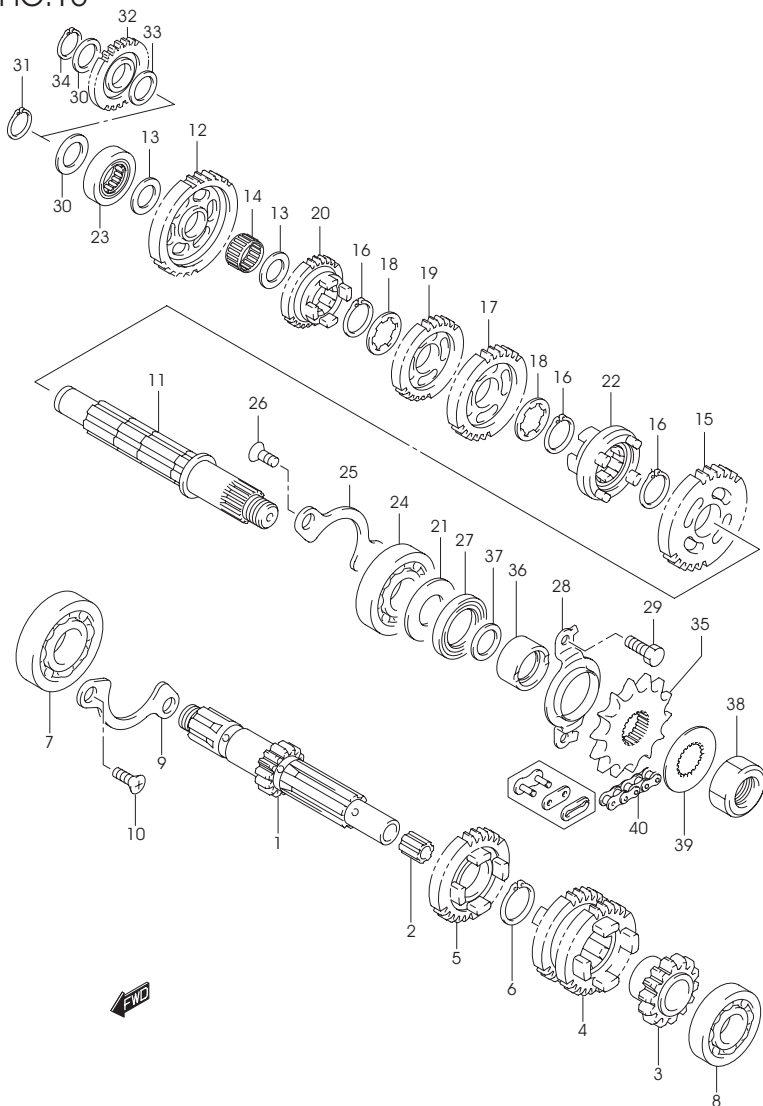


FIG.15 (D-4) TRANSMISSION

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
28	24751-05220	HOLDER, OIL SEAL	1	
29	01500-0610B	BOLT	2	
30	09181-15111	WASHER (15X20X1.0)	1	
31	08331-31156	CIRCLIP	1	
32	26260-05201	GEAR, KICK IDLE (NT:26)	1	
33	08211-15201	WASHER	2	
34	08331-3115A	CIRCLIP	1	
35	27511-41320-000	SPROCKET (NT:14)	1	
36	27531-05220	SPACER	1	
37	09280-19005	O RING (D:2.40,ID:19)	1	
38	09140-16017	NUT	1	
39	09167-20012	WASHER (18X38X0.8)	1	
40	27600-29B40-118	CHAIN (KMC 428H,118LE)	1	

FIG.16

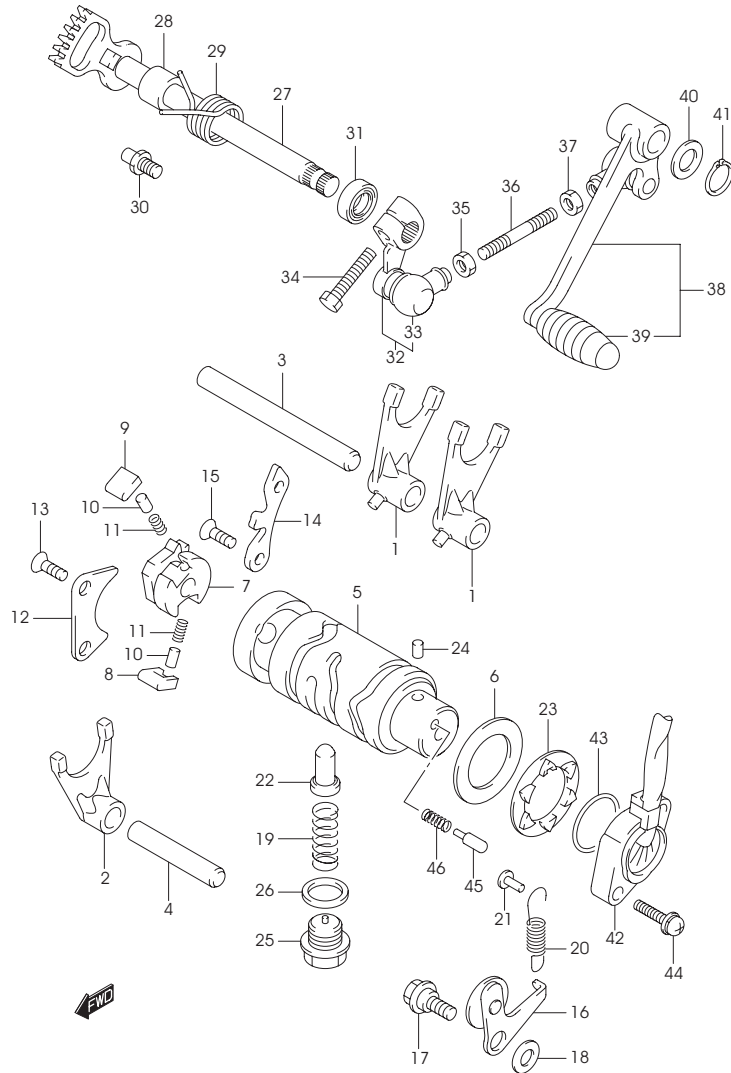


FIG.16 (D-5) GEAR SHIFTING

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
31	09285-12002	OIL SEAL (12X22X9)	1	
32	25520-47030	ARM, GEAR SHIFT SHAFT	1	
33	25526-47000	.COVER, DUST	1	
34	01500-06207	BOLT	1	
35	08310-00067	NUT, RH	1	
36	25525-12C10	ROD, GEAR SHIFT LINK	1	
37	09140-06025	NUT, LH	1	
38	25600-45F00	LEVER ASSY, GEAR SHIFTING	1	
39	25652-16500	.RUBBER	1	
40	09160-12011	WASHER (12.5X20X1.0)	1	
41	08331-3112A	CIRCLIP	1	
42 -1	37720-45F00-000	BASE ASSY, GEAR TERM	1	P71
42 -2	37720-45F10	BASE ASSY, GEAR TERM	1	P9
43	09280-26005	O RING (D:2.4,ID:26.2)	1	
44	02112-7520B	SCREW	2	
45	09209-05011	CONTACT	1	
46	09440-04024	SPRING	1	

FIG.16

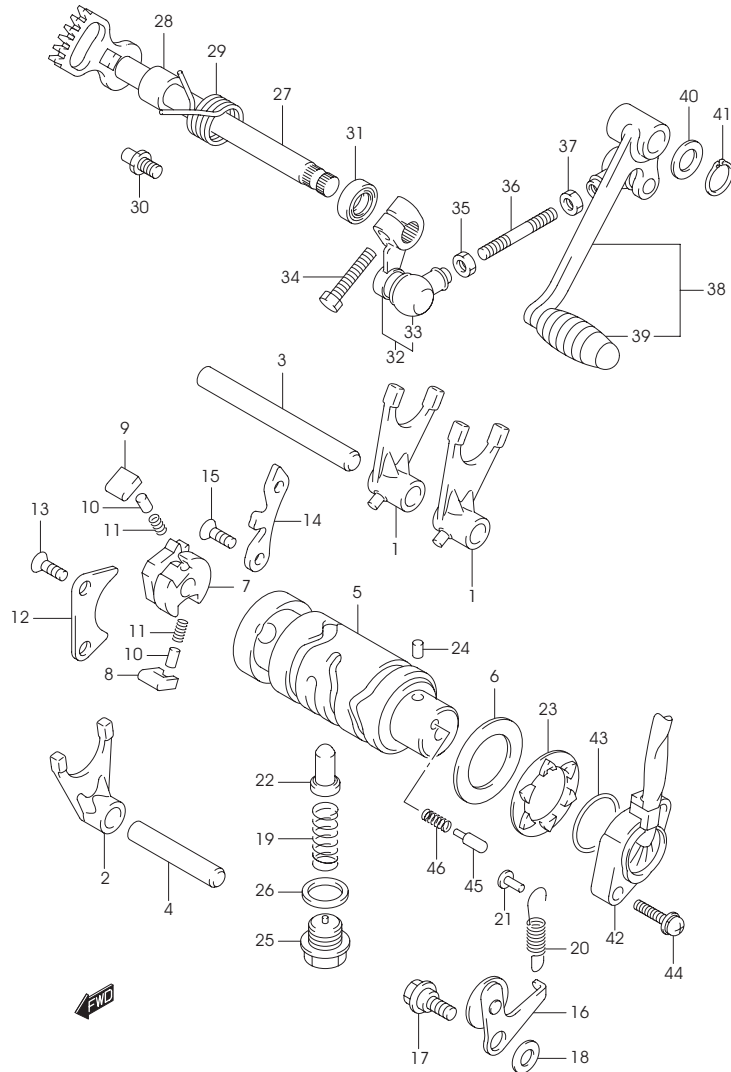


FIG.16 (D-6) GEAR SHIFTING

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
31	09285-12002	OIL SEAL (12X22X9)	1	
32	25520-47030	ARM, GEAR SHIFT SHAFT	1	
33	25526-47000	.COVER, DUST	1	
34	01500-06207	BOLT	1	
35	08310-00067	NUT, RH	1	
36	25525-12C10	ROD, GEAR SHIFT LINK	1	
37	09140-06025	NUT, LH	1	
38	25600-45F00	LEVER ASSY, GEAR SHIFTING	1	
39	25652-16500	.RUBBER	1	
40	09160-12011	WASHER (12.5X20X1.0)	1	
41	08331-3112A	CIRCLIP	1	
42 -1	37720-44700	BASE ASSY, GEAR TERM	1	~04/10
42 -2	37720-45F00-000	BASE ASSY, GEAR TERM	1	04/11~
43	09280-26005	O RING (D:2.4,ID:26.2)	1	
44	02112-7520B	SCREW	2	
45	09209-05011	CONTACT	1	
46	09440-04024	SPRING	1	

FIG.17

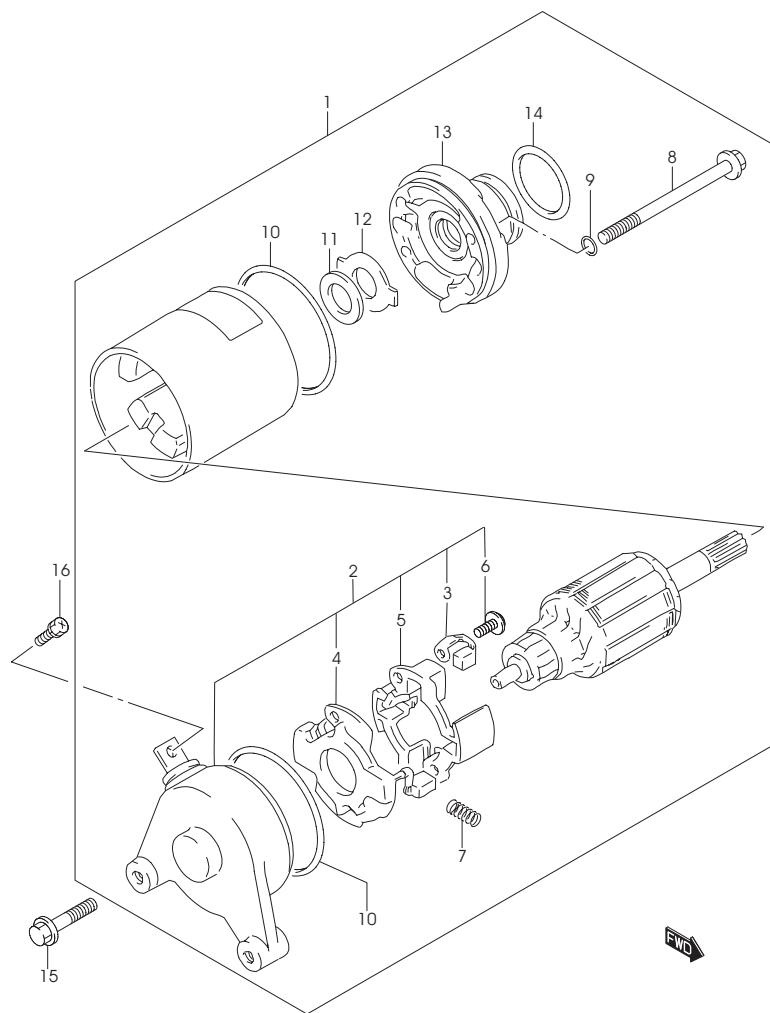


FIG.17 (D-7) STARTING MOTOR (DENSO)

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	31100-05530-000	MOTOR ASSY, STARTING	1	
2	31175-42A01	.FRAME ASSY, END	1	
3	31132-32C10	..BRUSH	2	
4	31130-32C20	..BRUSH SUB ASSY	1	
5	31133-32C10	..HOLDER, BRUSH	1	
6	31134-05530	..SCREW	2	
7	31135-32C10	..SPRING	4	
8	31281-32C10	..BOLT	2	
9	31156-38300	..O RING	2	
10	31264-32C10	..O RING	2	
11	31361-38300	..SHIM	1	
12	31361-32C10	..PLATE LOCK	1	
13	31150-06C00	..BRACKET	1	
14	09280-24003	..O RING (D:3,ID:24.5)	1	
15	01547-06307	BOLT	2	
16	09137-05004	SCREW	1	

FIG.18

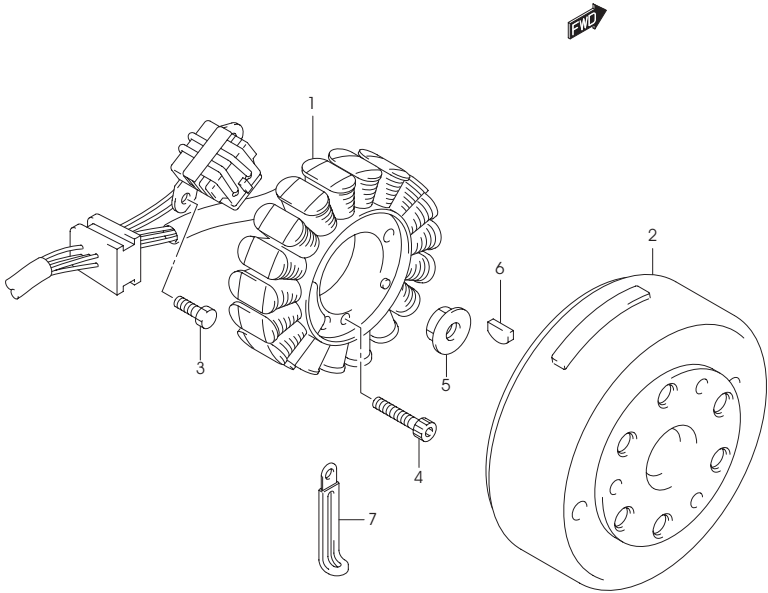


FIG.18 (D-8) MAGNETO

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	32101-12F40-000	STATOR ASSY	1	
2	32102-12F40-000	ROTOR, FLYWHEEL	1	
3	02112-0525B-000	SCREW, STATOR	3	
4	02142-0412B-000	SCREW, SENSOR	2	
5	08316-1010B-000	NUT	1	
6	08341-31039-000	KEY	1	
7	09404-06429-000	CLAMP (L:45)	1	

FIG.19

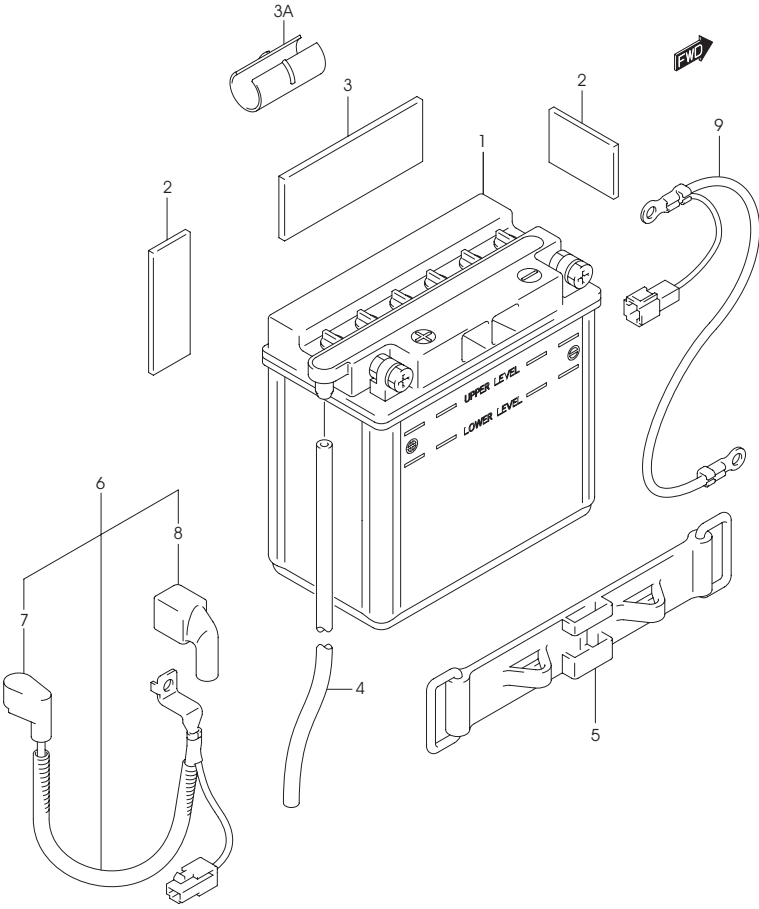


FIG.19 (D-9) BATTERY

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	33610-10310	BATTERY (CB7-A,12V,8AH)	1	
2	33652-38000	PROTECTOR (30X40X3)	4	
3	33652-28010	CUSHION (20X45X6)	1	
3A	33652-05310	PROTECTOR, BATTERY	1	
4	33680-16A10	HOSE, BATTERY EXHAUST	1	
5	33651-45F10-000	BAND	1	
6	33820-053A0	WIRE, BATTERY (+)	1	
6	33820-053B0	WIRE, BATTERY (+)	1	
7	31861-10D00	.CAP, STARTER RELAY	1	
7	31861-31500	.CAP, STARTER RELAY	1	
8	33624-43500	.CAP, BATTERY PLUS	1	
9	33860-05550	LEAD WIRE, BATTERY (-)	1	

FIG.20

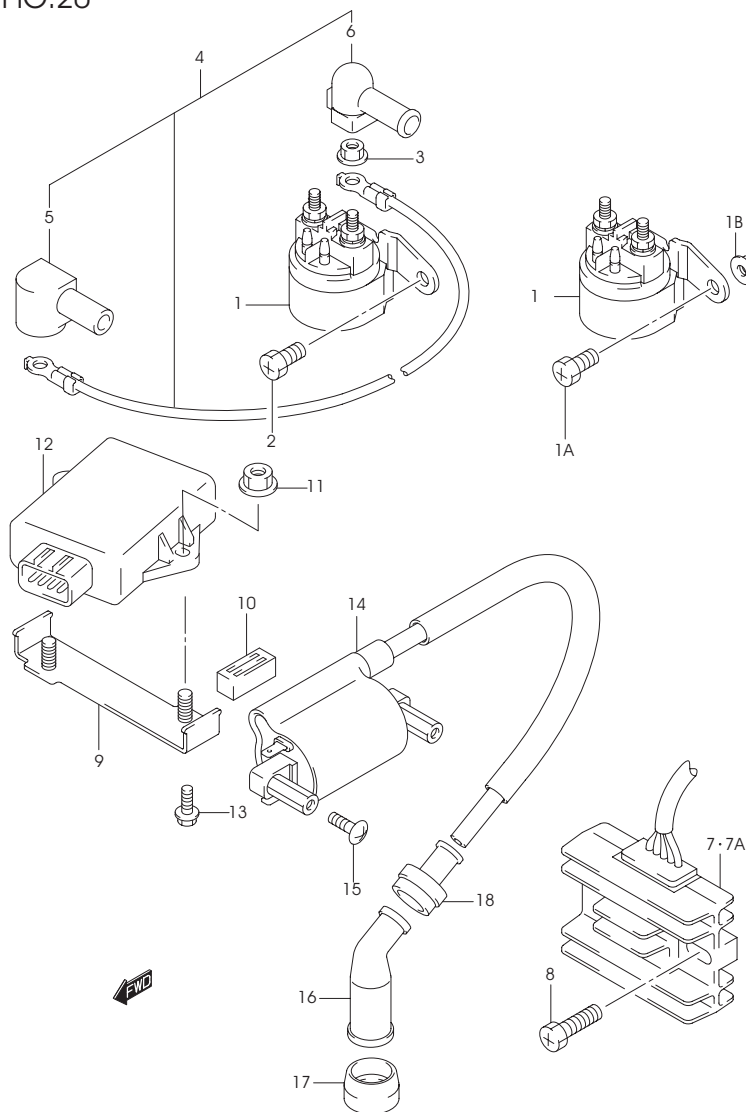


FIG.20 (D-10) ELECTRICAL

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	31800-49110-000	RELAY ASSY, STARTING MOTOR	1	
1A	09128-06004	SCREW	2	
1B	08361-3506A	NUT	2	
2 -1	09128-06044	SCREW (6X10)	2	P71
2 -2	09128-06004	SCREW (6X10)	2	P9
3	08361-35068	NUT	2	
4 -1	33810-05300	LEAD WIRE, STARTING MOTOR	1	
4 -2	33810-05310-000	LEAD WIRE, STARTING MOTOR	1	
5	31861-31500	.CAP, STARTER RELAY TERMINAL	1	
6	31861-06C00	.CAP, STARTER MOTOR	1	
7	32800-29B00	RECTIFIER, REGULATOR	1	
7A	32800-22D20	RECTIFIER, ASSY	1	
8	09128-06006	BOLT (5X20)	2	
9	32931-053B0	BRACKET, IGNITER	1	
10	32980-05300	CUSHION	2	
11	08316-1006B	NUT	2	
12	32900-053A0-000	IGNITER ASSY	1	
13	01550-0616B	SCREW, IGNITER	2	
14	33410-05360	COIL ASSY, IGNITION	1	
15	02142-0510B	SCREW	2	
16	33510-43010	CAP, SPARK PLUG	1	
17	33541-38210	SEAL, SPARK PLUG	1	
18	33542-38B00	SEAL, HIGH TENSION CORD	1	

FIG.21

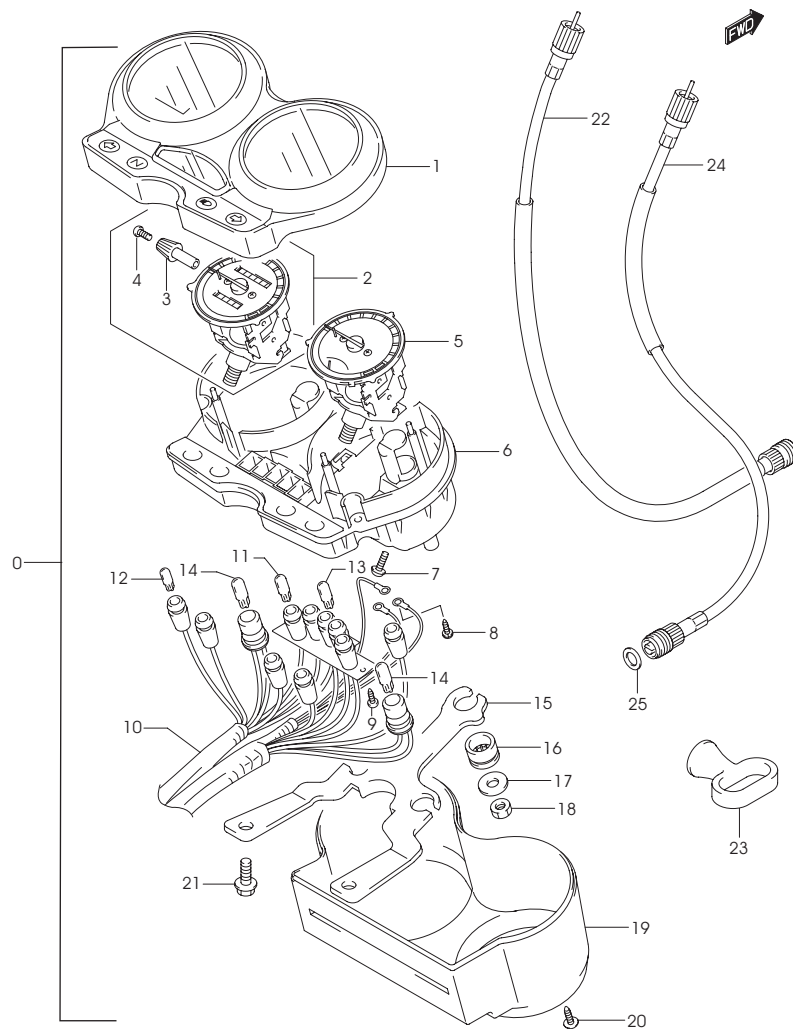


FIG.21 (D-11) SPEEDOMETER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
0	34100-45F60	SPEEDOMETER ASSY	1	
1 -1	34150-34G10	CASE, UPPER	1	P71
1 -2	34150-34G30	CASE, UPPER	1	P9
2	34110-34G30	SPEEDO METER	1	
3	34124-34G10	.NOB	1	
4	02112-03063	.SCREW	2	
5 -1	34210-34G10	TACHOMETER	1	P71
5 -2	34210-34G30	TACHOMETER	1	P9
6 -1	34111-34G10	CASE, LOWER	1	P71
6 -2	34111-34G30	CASE, LOWER	1	P9
7	02112-04083	SCREW	6	
8	34383-09400	SCREW	2	
9	09132-03017	SCREW (3X14)	2	
10 -1	34173-34G10	CORD ASSY	1	
10 -2	34173-45F60	CORD ASSY	1	P9
11	09471-12071	BULB (14V 12W,T4)	4	FOR GEAR POSITION
12	09471-12077	BULB (12V 1.7W,T6.5)	4	FOR INDICATOR
13	09471-12077	BULB (12V 1.7W,T6.5)	2	FOR METER
14	09471-12082	BULB (12V 3.4W,T10)	2	FOR METER
15	34950-34G10	BRACKET	1	
16	34191-34G10	CUSHION	2	
17	08322-01063	LOCK WASHER	2	
18	08310-00063	NUT	2	
19	34152-34G10	COVER	1	
20	03541-05103	SCREW	2	
21	01550-0812B	BOLT	2	
22 -1	34910-45F00	CABLE ASSY, SPEEDOMETER	1	K8
22 -2	34910-45F01	CABLE ASSY, SPEEDOMETER	1	K8/P9
23	58621-45F00	GUIDE, SPEED CABLE	1	
24	34940-05380	CABLE ASSY, TACHOMETER	1	K8
25	34943-05500	SEAL, TACHOMETER CABLE OIL	1	

FIG.22

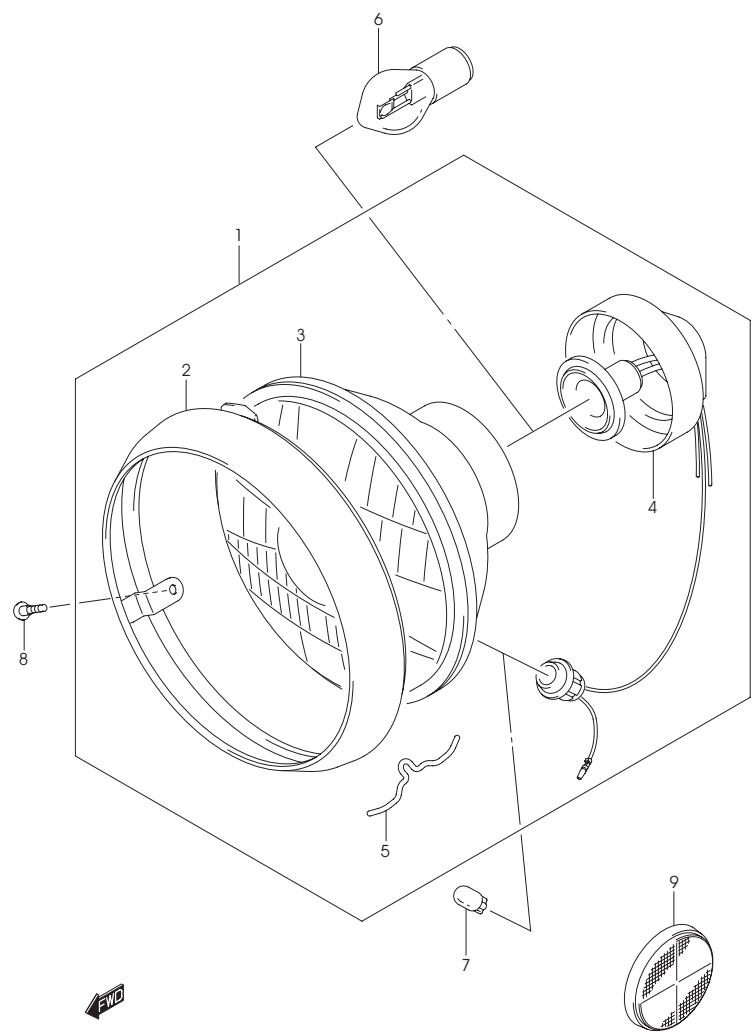


FIG.22 (E-2) HEADLAMP

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	35100-29B60-999	HEADLAMP ASSY	1	
2	35111-29B60	.RIM	1	
3	35121-29B60	.UNIT	1	
4	35171-29B60	.CORD ASSY	1	
5	35172-29B60	.SPRING	3	
6	09471-12020-000	BULB (12V35/35W)	1	
7	09471-12081	BULB (12V5W)	1	
8	35181-45F10	SCREW, HEADLAMP	2	
9	35950-04H11	REFLECTOR ASSY, FRONT SIDE	2	

FIG.23

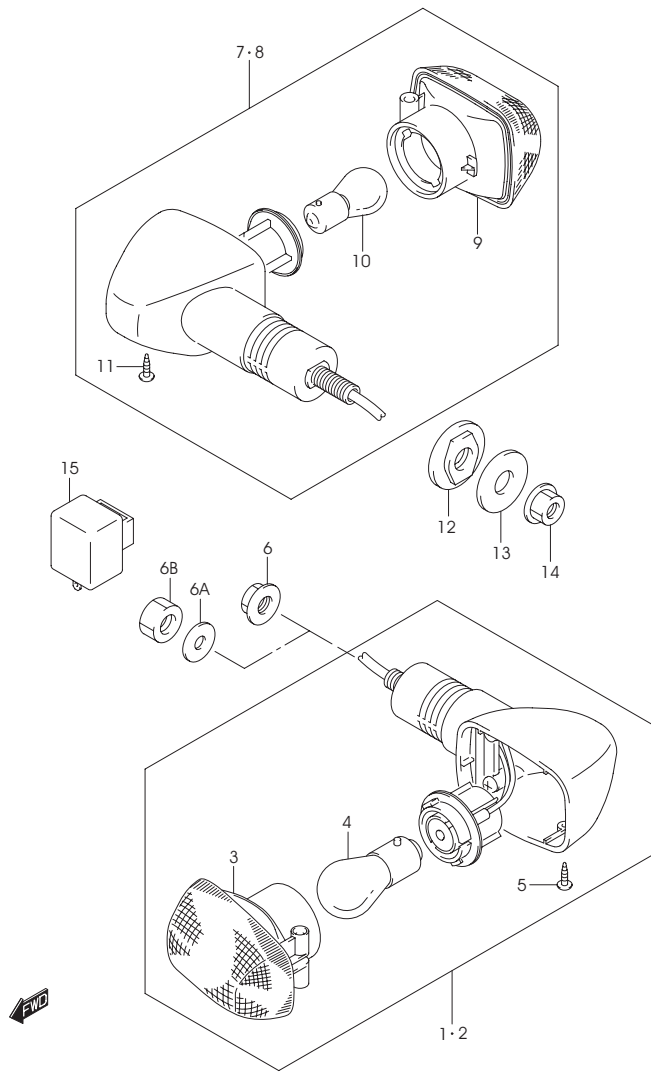


FIG.23 (E-3) TURN SIGNAL LAMP

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	35601-45F00	LAMP ASSY, FRONT, RH	1	
2	35602-45F00	LAMP ASSY, FRONT, LH	1	
3	35652-45F00	.LENS	2	
4	09471-12045-000	.BULB (12V,21W)	2	
5	03211-0416A	.SCREW	2	
6	08316-1010B	NUT	2	
6A	09160-10501	WASHER (10.5X30X2.3)	2	
6B	08310-0010B	NUT	2	
7	35603-28D10	LAMP ASSY, REAR, RH	1	
8	35604-28D10	LAMP ASSY, REAR, LH	1	
9	35652-45F00	.LENS	2	
10	09471-12045-000	.BULB (12V,21W)	2	
11	03211-0416A	.SCREW	2	
12	35695-17C00	SPACER, REAR	2	
13	09160-10501	WASHER (10.5X30X2.3)	2	
14	08316-1010B	NUT	2	
15	38610-31320	RELAY ASSY, TURN SIGNAL	1	

FIG.24

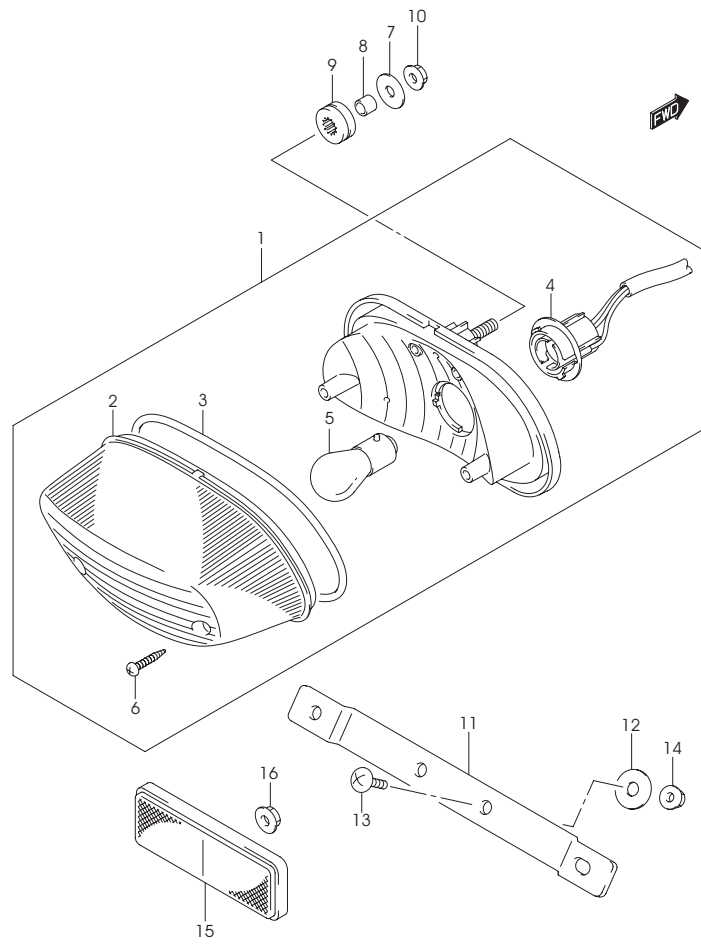


FIG.24 (E-4) REAR COMBINATION LAMP

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	35710-45F00	LAMP ASSY, REAR COMB	1	
2	35712-45F00	.LENS	1	
3	35713-28D00	.GASKET	1	
4	35718-45F00	.SOCKET & CORD	1	
5	09471-12128-000	.BULB (12V21/5W)	1	
6	03211-04203	.SCREW	2	
7	09160-06088	WASHER (6.5X20X1.6)	3	
8	09180-06285	SPACER (6.5X10X9)	3	
9	09320-09009	CUSHION	3	
10	08316-1006B	NIT	3	
11	35927-05320	BRACKET, LICENSE PLATE	1	
12	09160-06088	WASHER (6.5X20X1.6)	2	
13	02142-0616A	SCREW	2	
14	08310-0006A	NUT	2	
15	35970-04H01	REFLEX REFLECTOR ASSY, REAR	1	
16	08316-1005B	NUT	1	

FIG.25

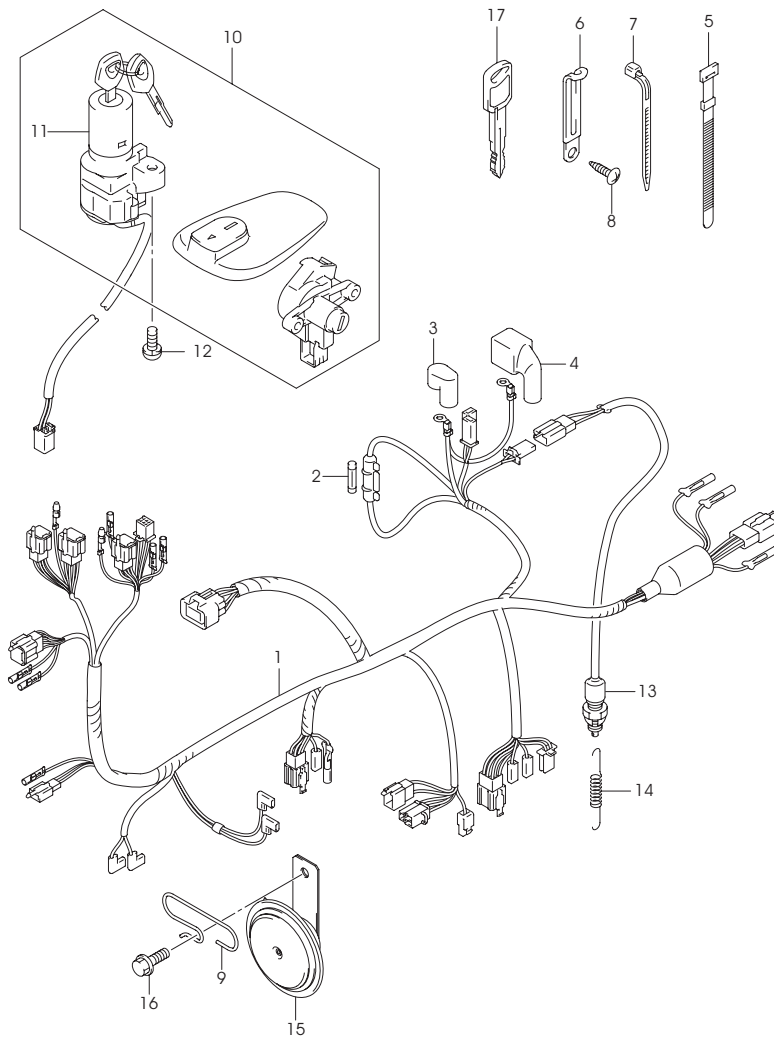


FIG.25 (E-5) WIRING HARNESS

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1 -1	36610-45F60	WIRING HARNESS	1	
1 -2	36610-45F00	WIRING HARNESS	1	P71
2	09481-15001	.FUSE (15A)	1	
3	31861-10D00	.CAP, STARTER RELAY	1	
4	33624-43500	.CAP, BATTERY PLUS	1	
5	09407-12402	CLAMP (L:120)	2	
6	09404-06431	CLAMP (L:80)	3	
7 -1	09407-14403	CLAMP (L:125)	8	
7 -2	09407-18402	CLAMP (L:165)	4	
7 -3	09407-25401	CLAMP (L:235)	1	
8	03541-0410B	SCREW	1	
9	36619-37300	CLAMP	1	
10	37101-01880	LOCK SET	1	
11 -1	37100-01D81	.LOCK ASSY, STEERING	1	P71
11 -2	37100-45F00	.LOCK ASSY, STEERING	1	P9
12	02112-3620B	BOLT	2	
13	37740-12F00	SWITCH, ASSY, STOP LAMP	1	
14	09443-06012	SPRING	1	
15	38500-055D1	HORN ASSY	1	
16	01550-0816B	BOLT	2	
17	37146-45F00	KEY, BLANK	1	OPT

FIG.25A

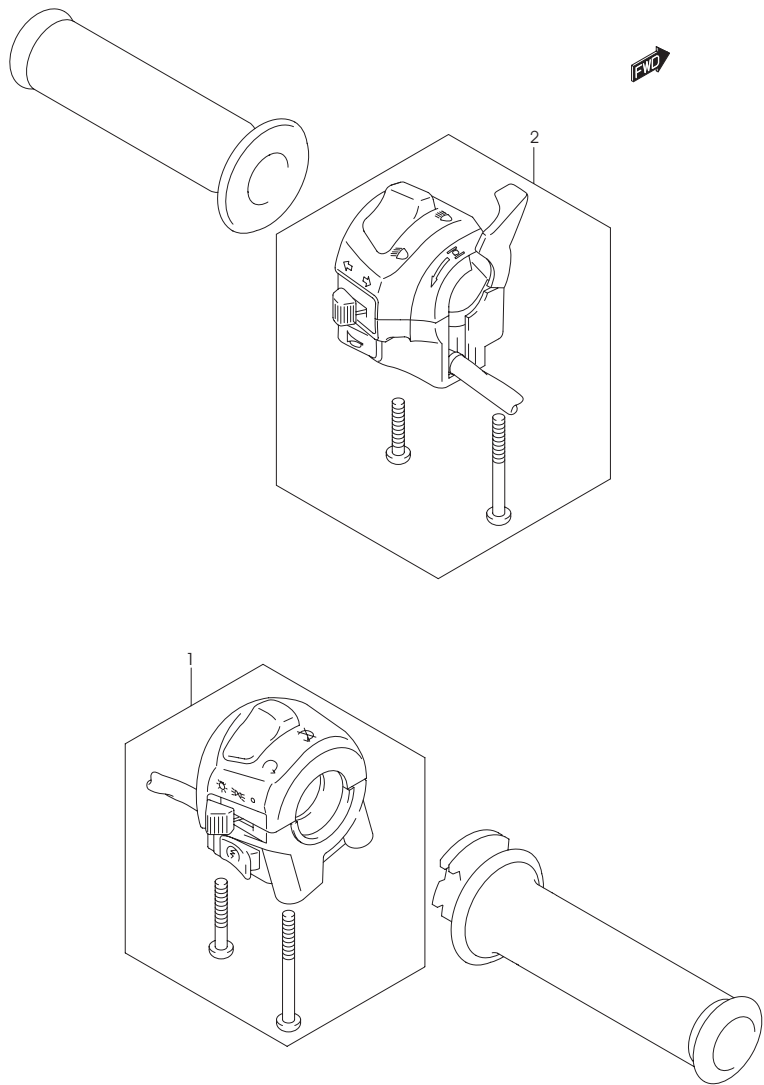


FIG.25A (E-6) HANDLESWITCH

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1 -1	37200-28G20	SWITCH ASSY, HANDLE, R	1	P71
1 -2	37200-45F60	SWITCH ASSY, HANDLE, R	1	P9
2 -1	37400-05300	SWITCH ASSY, HANDLE, L	1	P71
2 -2	37400-45F60	SWITCH ASSY, HANDLE, L	1	P9

FIG.26

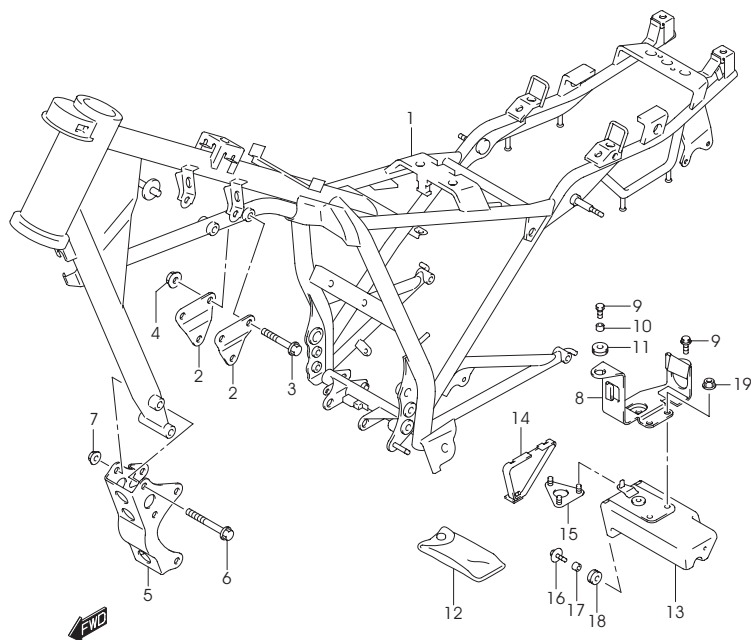


FIG.26 (F-2) FRAME

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	41100-45FE0	FRAME	1	
2	41991-05300	PLATE, UPPER	2	
3	09103-08081	BOLT	2	
4	08319-31088	NUT	2	
5	41992-05300	PLATE, LOWER	1	
6	01550-08653	BOLT, LOWER	2	
7	08319-31088	NUT	2	
8	41540-05300	HOLDER, BATTERY	1	
9	09116-06168	BOLT, REAR	2	
10	09180-06038	SPACER	2	
11	09320-08021	CUSHION	2	
12	96510-45F10	TOOL ASSY	1	
13	47431-05300	BOX, TOOL	1	
14	47432-05300	CAP	1	
15	47440-05301	PLATE	1	
16	09116-06168	BOLT	1	
17	09180-06038	SPACER	1	
18	09320-08021	CUSHION	1	
19	08316-10063	NUT	3	

FIG.27

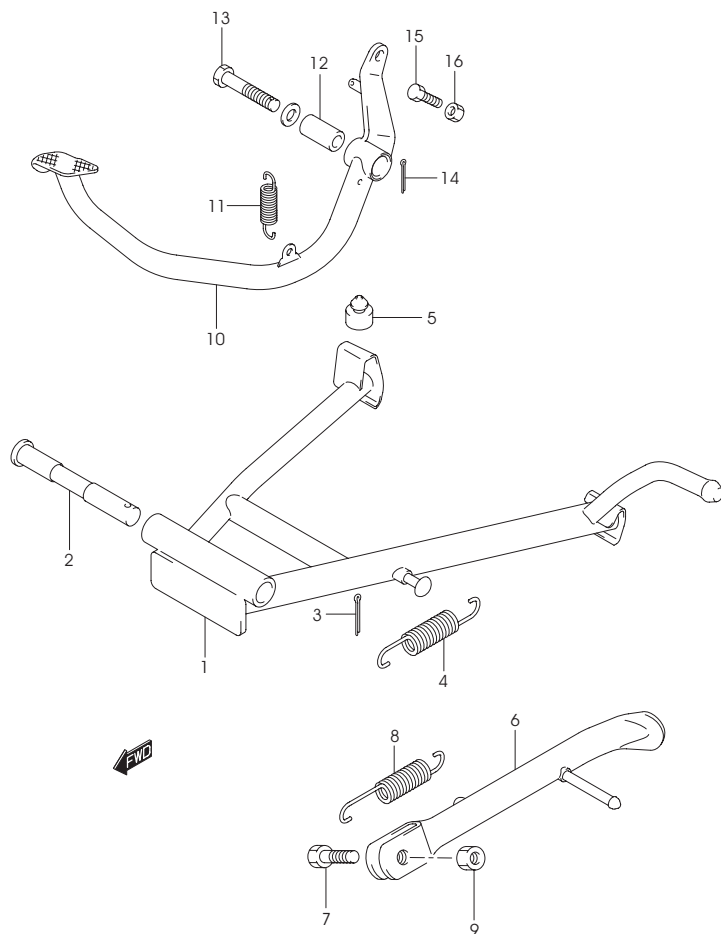


FIG.27 (F-3) STAND

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	42100-45F00	STAND, CENTER	1	
2	42211-36504	SHAFT	1	
3	04111-25248	COTTER PIN	1	
4	09443-18006	SPRING	1	
5	42278-45F00	CUSHION	1	
6	42310-45F00	STAND, PROP	1	
7	09100-10501	BOLT	1	
8	09443-17007	SPRING	1	
9	09140-10043	NUT	1	
10 -1	43110-45F00	PEDAL, BRAKE	1	P71
10 -2	43110-45F01	PEDAL, BRAKE	1	P9
11	09443-14015	SPRING	1	
12	43231-05302	SPACER	1	
13	43213-45F00-000	BOLT	1	
14	04111-20208	COTTER PIN	1	
15	43159-45F00	BOLT	1	
16	08310-00063	NUT	1	

FIG.28

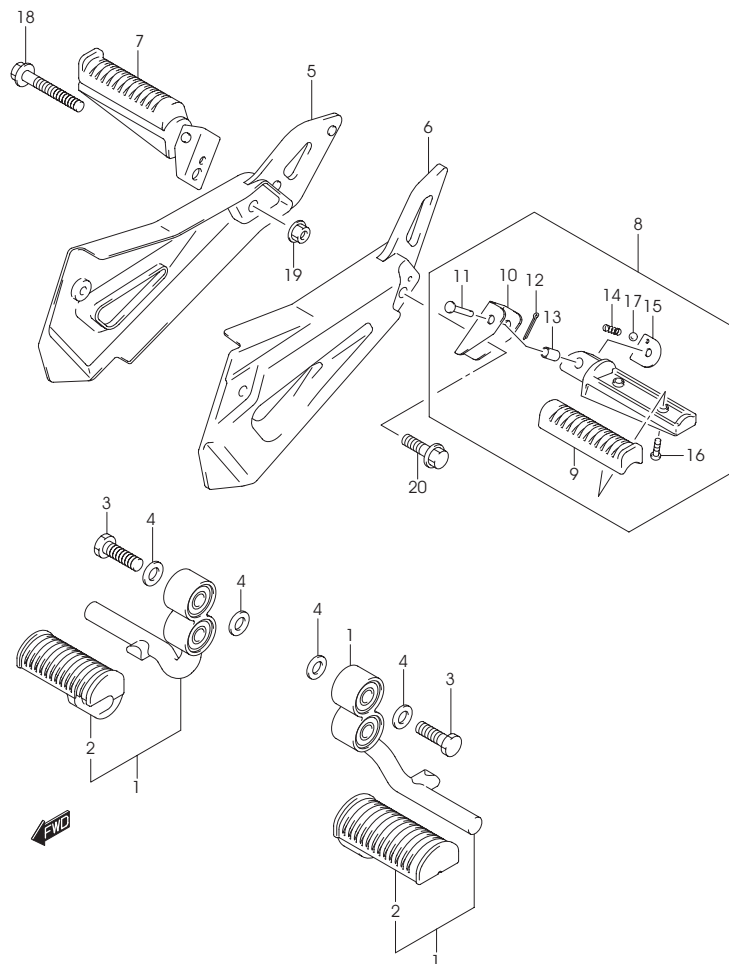


FIG.28 (F-4) FOOTREST

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	43501-45F00	FOOTREST ASSY, FRONT	2	
2	43551-36500	.RUBBER	2	
3	43539-45F00	BOLT	4	
4	09160-10124	WASHER	8	
5	43811-45F00	COVER, RH	1	
6	43821-45F01	COVER, LH	1	
7	43600-45F00	FOOTREST, PILLION RH	1	
8	43700-45F00	FOOTREST, PILLION LH	1	
9	43550-45F00	.RUBBER	2	
10	43621-45F00	.HOLDER	2	
11	09200-06040	.PIN	2	
12	04111-16146	.COTTER PIN	2	
13	43611-45F00	.SPACER	2	
14	43613-45F00	.SPRING	2	
15	43614-45F00	.PLATE	2	
16	02112-05143	.SCREW	4	
17	06111-08003	.STOPPER	2	
18	01550-10503	BOLT, RH	1	
19	08316-10103	NUT, RH	1	
20	01550-10303	BOLT, LH	1	

FIG.29

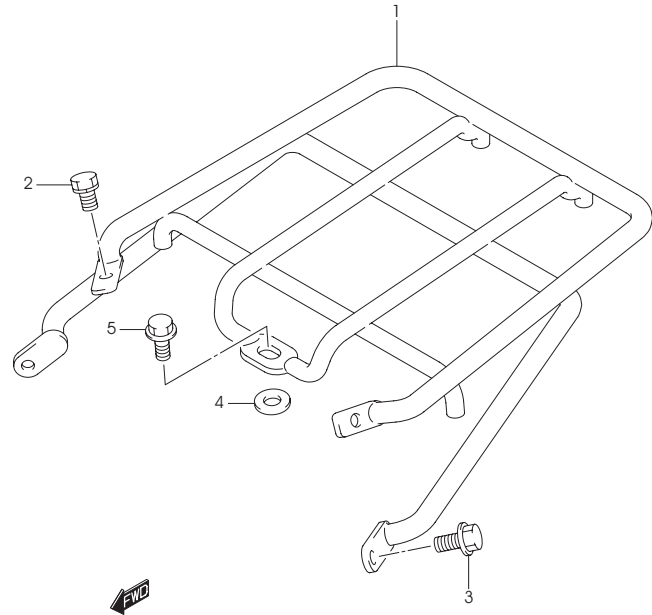


FIG.29 (F-5) CARRIER (OPTIONAL)

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	46310-45F01	CARRIER, REAR	1	
2	01570-06123	BOLT, UPPER	2	
3	01550-06163	BOLT, LOWER	2	
4	46149-45F00	WASHER, REAR	1	
5	01550-06163	BOLT, REAR	1	

FIG.30

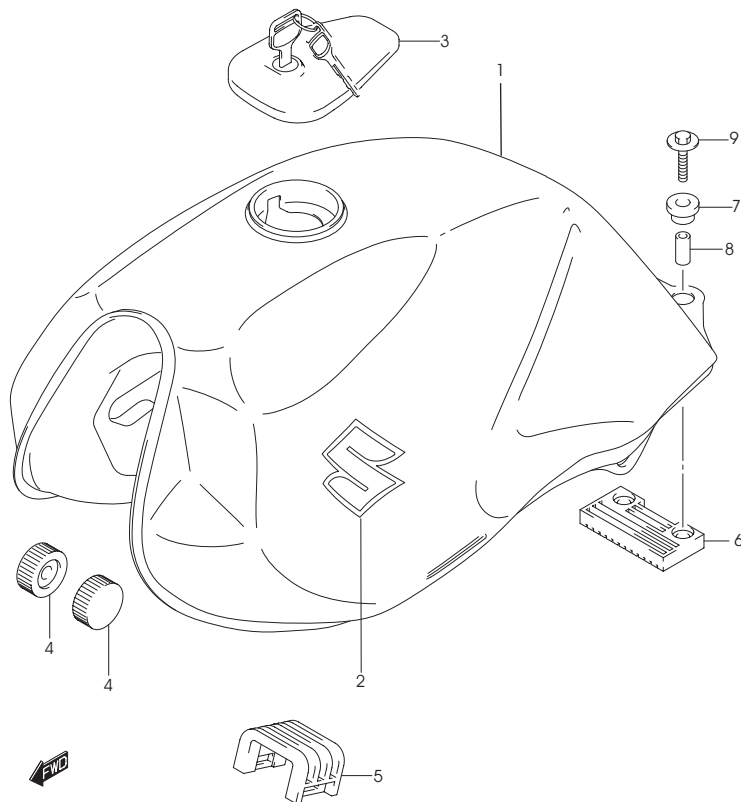


FIG.30 (F-6) FUEL TANK

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	44100-45F10-YHP	TANK ASSY, FUEL (BLACK)	1	
2	68111-18G20	.EMBLEM "S"	2	
2 -1	68111C18G20H000	.EMBLEM "S"	2	OPT NAC
3	44200-45FB0	CAP SET, FUEL	1	
4	09329-10016	CUSHION, FRONT	2	
5	44541-38200	CUSHION, UPPER FRONT	1	
6	44542-38300	CUSHION, UPPER REAR	1	
7	09320-10022	CUSHION REAR, NO.2	2	
8	09180-06067	SPACER	2	
9	09116-06084	BOLT	2	

FIG.31

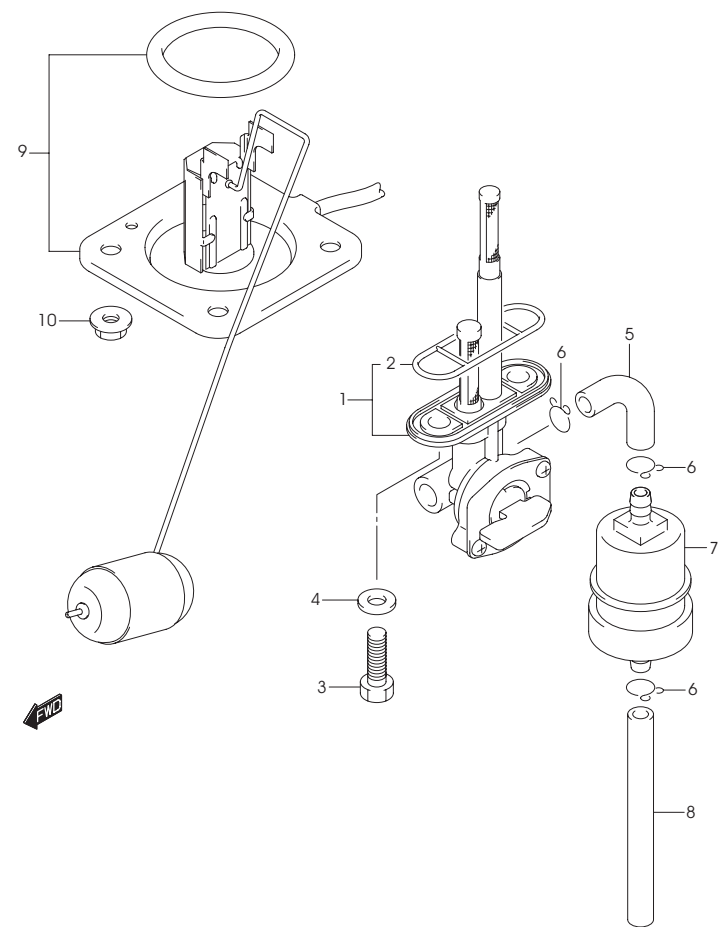


FIG.31 (F-7) FUEL COCK

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	44300-45F10	COCK ASSY, FUEL	1	
2	44348-87420	.O RING, JOINT	1	
3	09128-06006	BOLT	2	
4	09168-06026	GASKET	2	
5	44421-45F10	HOSE, FUEL (UPPER)	1	
6	09401-08401	CLIP	4	
7	44330-45F10	FILTER, FUEL	1	
8	44422-45F10	HOSE, FUEL LOWER	1	
9	34810-45F00	GAUGE ASSY, FUEL LEVEL	1	
10	08316-10068	NUT	4	

FIG.32

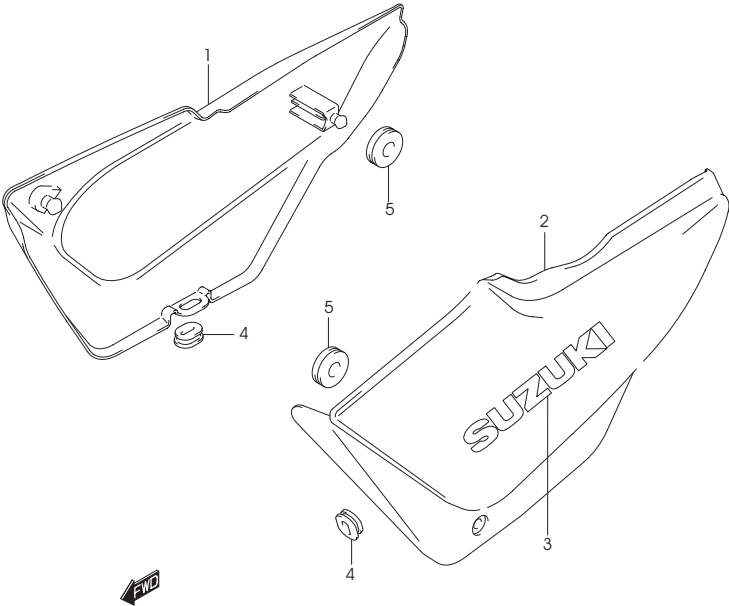


FIG.32 (F-8) FRAME COVER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	47111-45F00-YHP	COVER, FRAME RH (BLACK)	1	
2	47211-45F00-YHP	COVER, FRAME LH (BLACK)	1	
3	68150C31CB0HGRS	TAPE SET	2	
4	09320-03004	CUSHION, LOWER RH	2	
5	09320-08018	CUSHION	4	

FIG.33

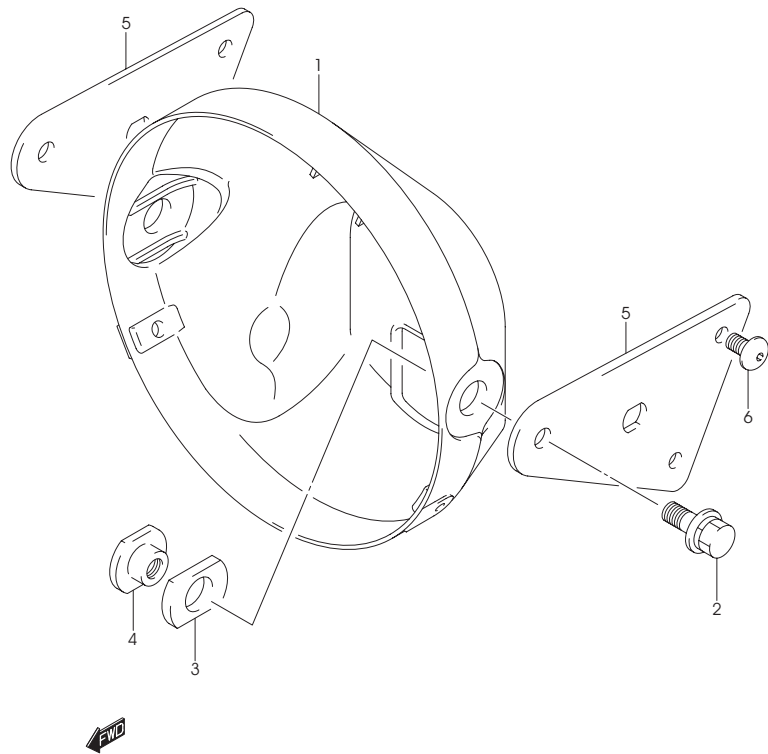


FIG.33 (F-9) HEADLAMP HOUSING

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	51811-45F20	HOUSING, HEADLAMP	1	
2	01264-08207	BOLT	2	
3	51827-45F10	CUSHION	2	
4	51825-45F10	NUT	2	
5	51851-45F10	PLATE	2	
6	51859-45F10	BOLT	4	

FIG.34

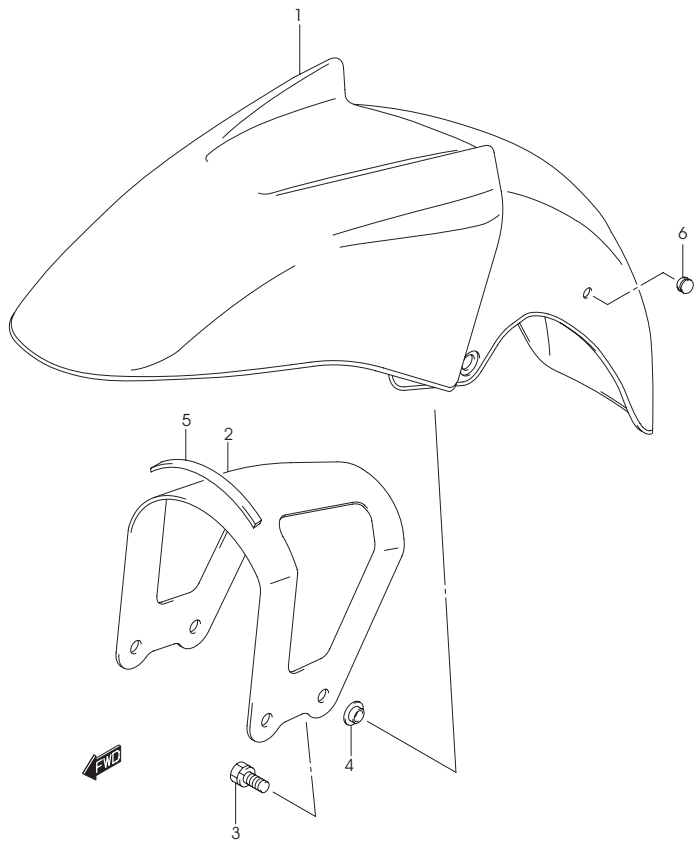


FIG.34 (F-10) FRONT FENDER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	53111-45F01-YHP	FENDER, FRONT (BLACK)	1	
2	53112-45F01	BRACE	1	
3	01570-08163	BOLT	4	
4	09169-08034	WASHER	4	
5	53145-45F10	CUSHION	1	
6	53149-45F00	CAP	1	

FIG.35

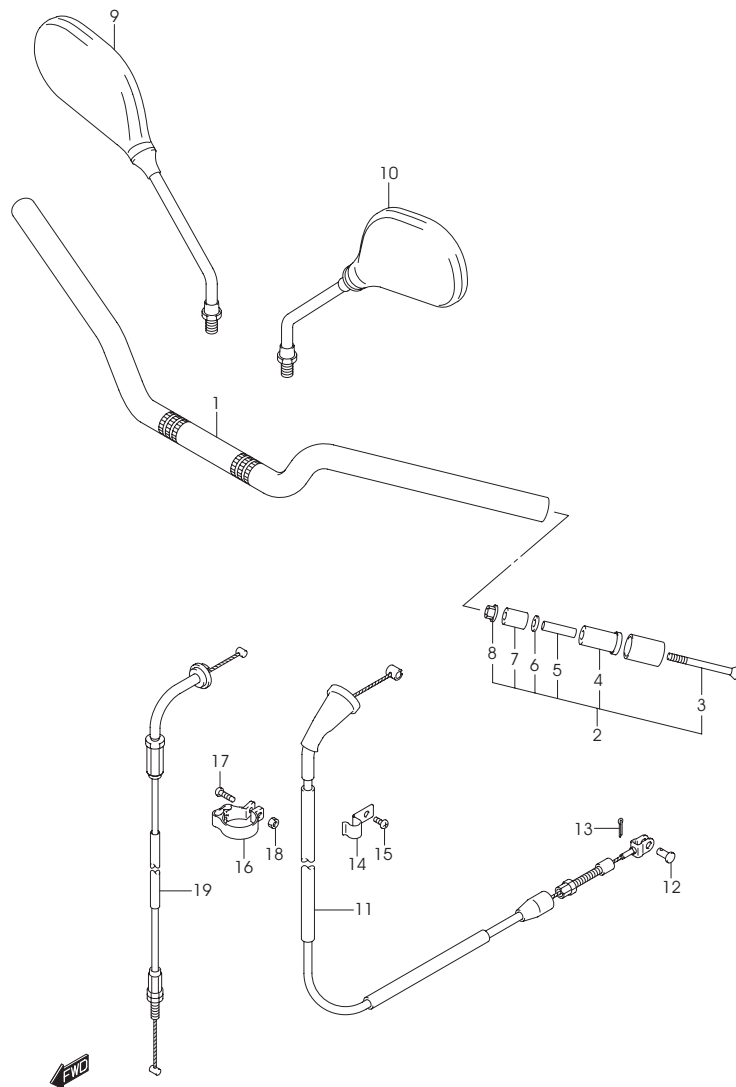


FIG.35 (F-11) HANDLEBAR

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	56111-45F51	HANDLEBAR	1	
2	56200-28840	BALANCER SET	2	
3	09127-06018	.SCREW	2	
4 -1	56272-12FH0	.EXPANDER	2	P71
4 -2	56272-45F00	.EXPANDER	2	P9
5	56276-17D00	.SPACER	2	
6	09160-06126	.WASHER	2	
7	56272-44500	.EXPANDER	2	
8	09159-06024	.NUT	2	
9	56500-45F10	MIRROR ASSY, REAR VIEW RH	1	
10	56600-45F10	MIRROR ASSY, REAR VIEW LH	1	
11	58200-45F40	CABLE ASSY, CLUTCH	1	
12	09200-06004	PIN	1	
13	04111-20158	COTTER PIN	1	
14	58626-37400	CLAMP, NO.1	1	
15	02112-16103	SCREW	1	
16 -1	36651-45F00	CLAMP, NO.2	1	P71
16 -2	36651-055J0	CLAMP, NO.2	1	P9
17	02112-05163	SCREW	1	
18	08310-00053	NUT	1	
19	58300-45F40	CABLE ASSY, THROTTLE	1	

FIG.36

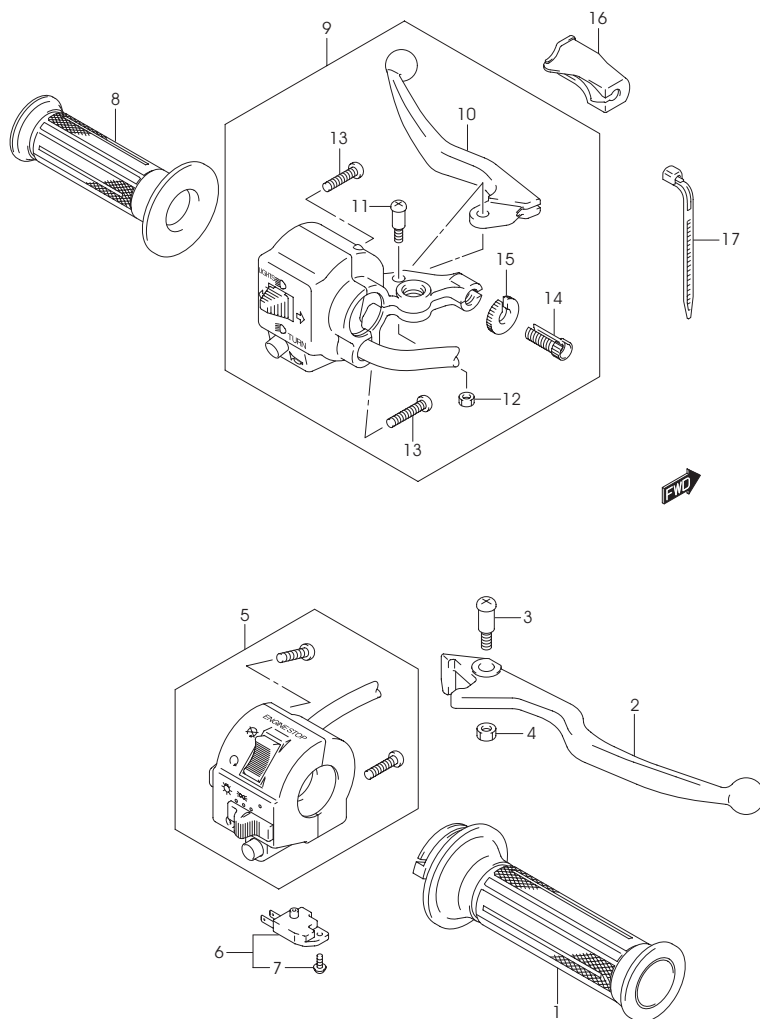


FIG.36 (G-2) HANDLE LEVER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	57110-28G10	GRIP, THROTTLE	1	
2	57421-13001	LEVER, BRAKE (BLACK)	1	
3	09111-06075	SCREW	1	
4	08319-21063	NUT	1	
5 -1	37200-45F10	SWITCH ASSY, HANDLE RH	1	P71
5 -2	37200-45F60	SWITCH ASSY, HANDLE RH	1	P9
6	57460-17C01	SWITCH ASSY, STOP	1	
7	57465-17C00	.SCREW	1	
8	57211-22D01	GRIP, LH	1	
9	57500-45FA0	LEVER ASSY, CLUTCH	1	
10	57621-45FA0	.LEVER, CLUTCH	1	
11	57431-45F00	.BOLT	1	
12	08319-21057	.NUT	1	
13	02112-05207	.SCREW	1	
14 -1	57441-45F10-000	.ADJUSTER	1	
14 -2	57441-45F00	.ADJUSTER	1	P9
15 -1	57442-45F10-000	.NUT	1	
15 -2	57442-45F00	.NUT	1	P9
16	57661-31000	COVER, CLUTCH LEVER	1	
17	09407-12402	CLAMP (L:120)	2	

FIG.37

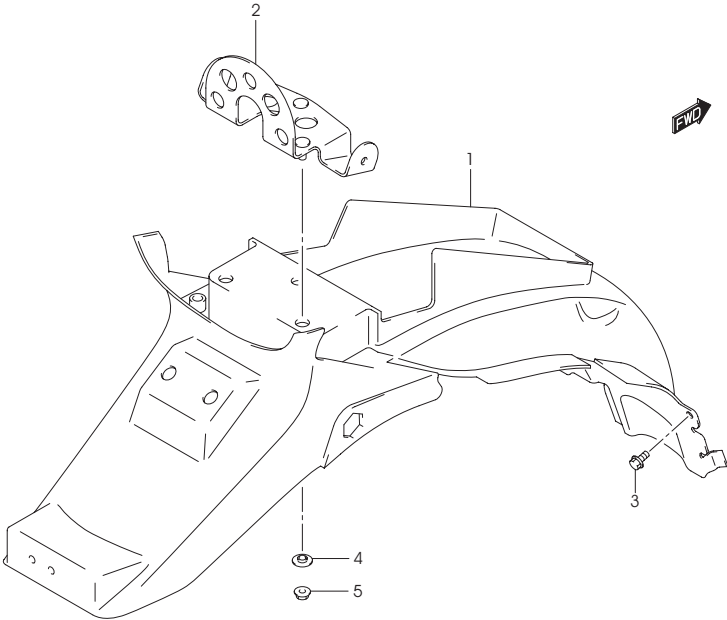


FIG.37 (G-3) REAR FENDER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	63111-45F00	FENDER, REAR	1	
2	63120-45F10	BRACKET, REAR LAMP	1	
3	09118-06067	BOLT, REAR FENDER	4	
4	61315-45F00	WASHER	3	
5	08316-10063	NUT	3	

FIG.38

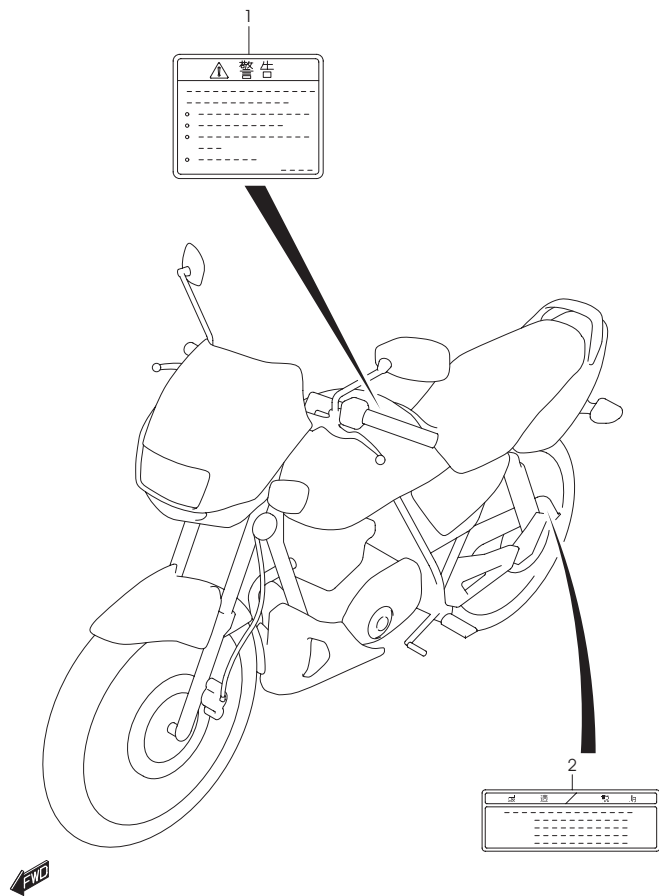


FIG.38 (G-4) LABEL

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	68319-45F10	LABEL, GENERAL WARNING	1	
2	68332-45F00	LABEL, TIRE INFORMATION	1	
3	99011-05380-029	MANUAL, OWNER'S	1	

FIG.39

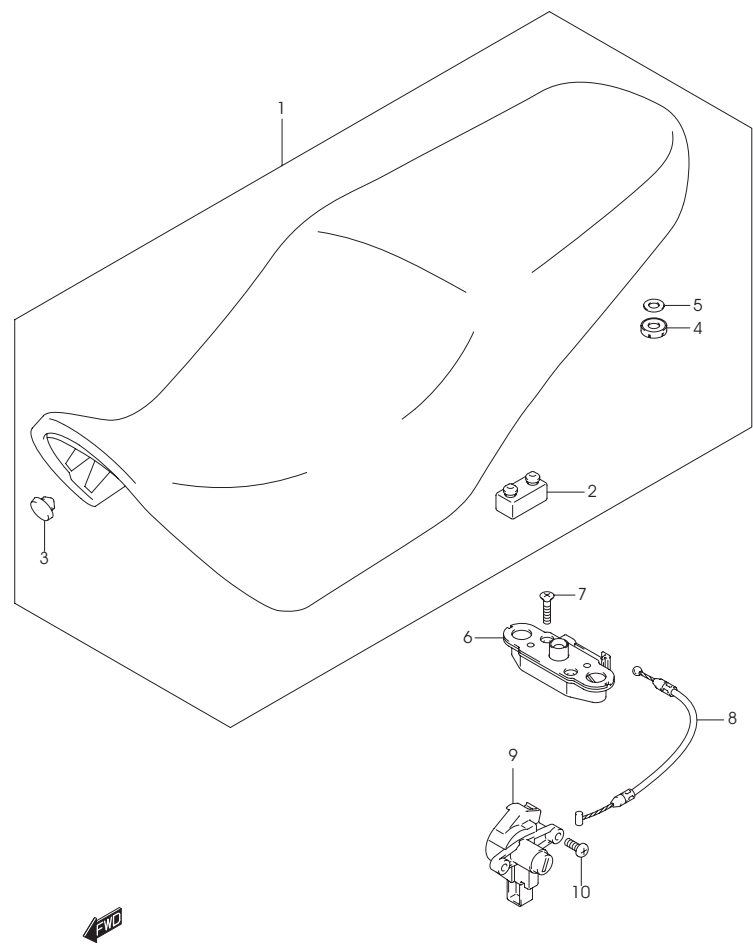


FIG.39 (H-2) SEAT

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	45100-45F00	SEAT ASSY	1	
2	45149-45F00	.CUSHION	4	
3	09329-10001	.CUSHION	1	
4	45213-13601	.CUSHION	2	
5	08322-01103	.WASHER	2	
6 -1	45220-45F00	BRACKET, SEAT SUPPORT	1	P71
6 -2	45220-45F01	BRACKET, SEAT SUPPORT	1	P9
7	02122-06303	SCREW	2	
8	45280-45F00	CABLE SEAT LOCK	1	
9	95700-28D00	LOCK ASSY, SEAT	1	
10	09139-06164	SCREW (6X14)	2	

FIG.40

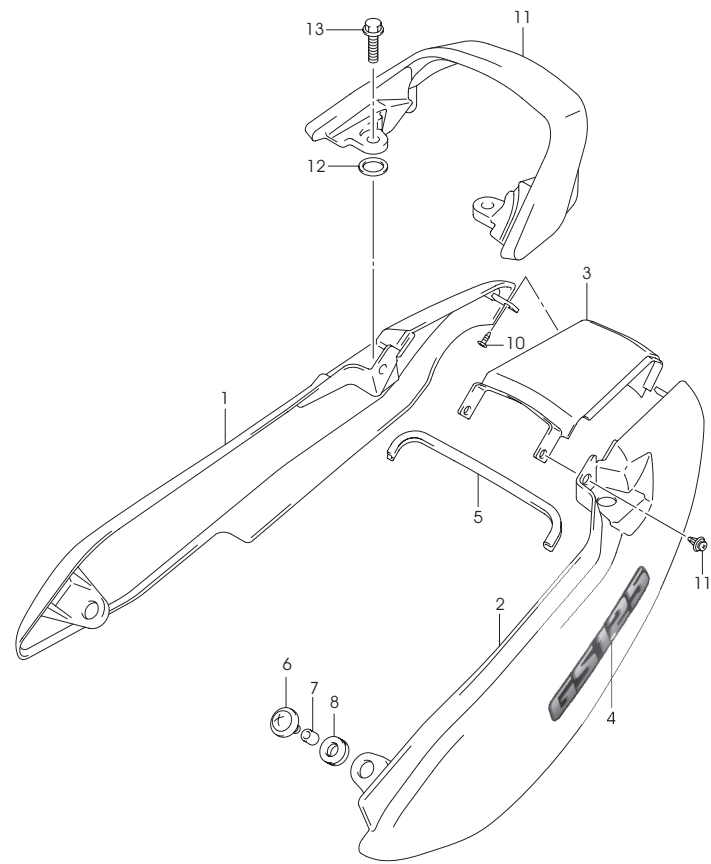
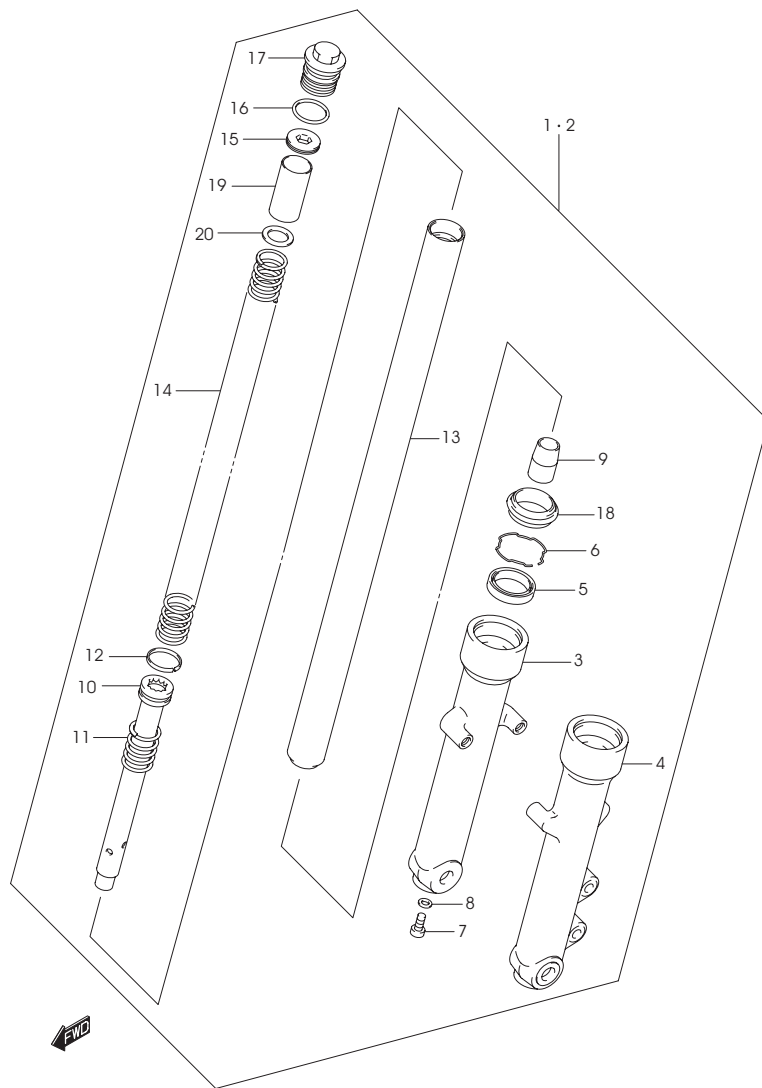


FIG.40 (H-3) SEAT TAIL COVER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	45511-45F00-YHP	COVER, SEAT TAIL RH (BLACK)	1	
2	45512-45F00-YHP	COVER, SEAT TAIL LH (BLACK)	1	
3	45513-43F10-YHP	COVER, SEAT TAIL CENTER (BLACK)	1	
4	68131C45F20H000	TAPE SET , TAIL COVER	2	
5	45515-45F00	CUSHION, SEAT TAIL COVER	1	
6	45521-45F00	SCREW, SEAT TAIL COVER FRONT	2	
7	09180-06263	SPACER, SEAT TAIL COVER FRONT	2	
8	09320-08047	CUSHION, SEAT TAIL COVER FRONT	2	
9	09409-06322	CLIP, SEAT TAIL COVER REAR	2	
10	03541-0412A	SCREW, SEAT TAIL COVER REAR	2	
11	46211-45F10-YGC	HANDLE, PILLION RIDER	1	
12	46212-45F00	CUSHION, PILLION HANDLE	2	
13	01580-0835B	BOLT	2	

FIG.41

**FIG.41 (H-4) FRONT DAMPER**

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	51103-45F40	DAMPER ASSY, FRONT FORK RH	1	
2	51104-45F40	DAMPER ASSY, FRONT FORK LH	1	
3	51130-45F40	.TUBE, OUTER RH	1	
4	51140-45F40	.TUBE, OUTER LH	1	
5	51153-45F40	.OIL SEAL	2	
6	51156-45F40	.RING, OIL SEAL STOPPER	2	
7	51147-45F40	.BOLT	2	
8	51148-45F40	.GASKET	2	
9	51195-45F40	.PIECE, OIL LOCK	2	
10	51146-45F40	.CYLINDER	2	
11	51177-45F40	.SPRING, REBOUND	2	
12	51182-45F40	.RING	2	
13	51110-45F40	.TUBE, INNER	2	
14	51171-45F40	.SPRING, MAIN	2	
15	51178-45F40	.PLUG	2	
16	51117-45F40	.O RING	2	
17	51189-45F40	.CAP	2	
18	51173-45F40	.SEAL, DUST	2	
19	51176-45F40	.SPACER	2	
20	51192-45F40	.WASHER	2	

FIG.42

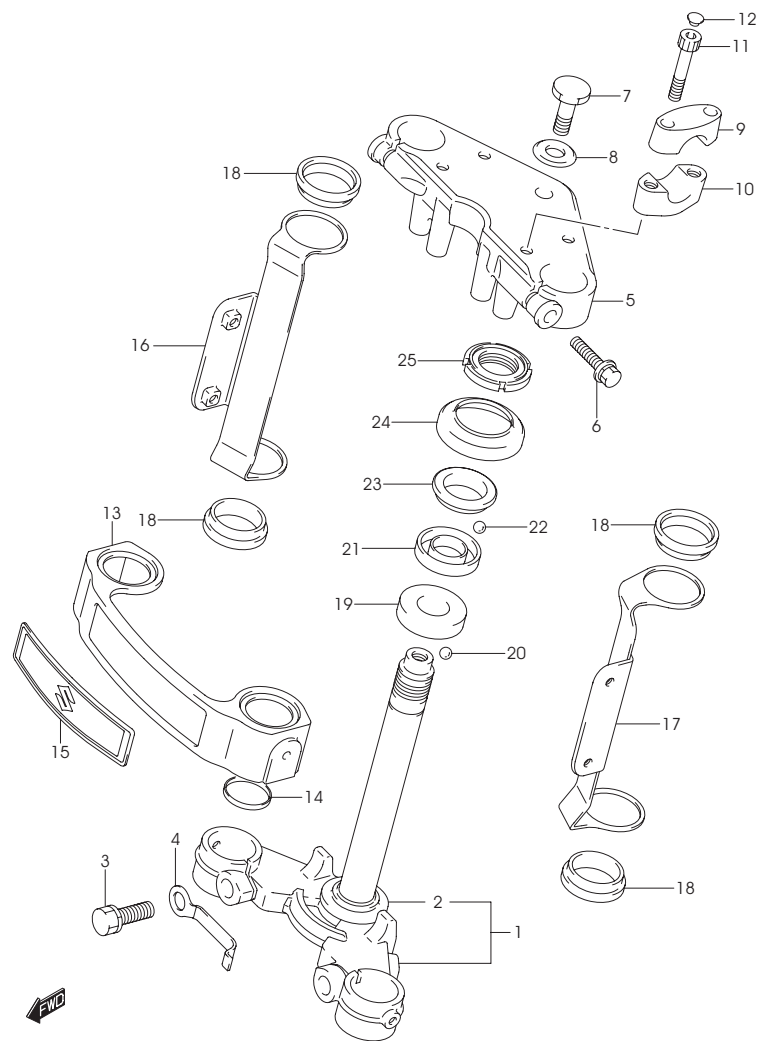


FIG.42 (H-5) STEERING STEM

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	51410-45F00	STEM, STEERING	1	
2	51621-33001	RACE, OUTER LOWER	1	
3	01570-1235B	BOLT, STEM	2	
4	51455-45F10	CLAMP	1	
5	51311-45F10	HEAD, STEERING STEM	1	
6	01580-0840B	BOLT, HEAD	2	
7	51351-05300	BOLT, STEM HEAD	1	
8	51356-05300	WASHER, STEM HEAD	1	
9	56211-45F10	HOLDER, HANDLE UPPER	2	
10	56221-45F10	HOLDER, HANDLE LOWER	2	
11	07130-0845B	BOLT	4	
12	09250-06011	CAP	4	
13	51871-05301	COVER, FRONT FORK	1	
14	51872-45F10	SPACER, COVER	2	
15	68211-38300	EMBLEM, FRONT FORK COVER	1	
16	51530-45F10	BRACKET, HEADLAMP RH	1	
17	51540-45F10	BRACKET, HEADLAMP LH	1	
18	51553-29311	DAMPER, HEADLAMP BRACKET	4	
19	51611-33002	RACE, INNER LOWER	1	
20	06111-08003	STEEL BALL, LOWER	18	
21	51611-20002	RACE, INNER UPPER	1	
22	06111-06003	STEEL BALL, UPPER	22	
23	51621-28000	RACE, OUTER UPPER	1	
24	51643-25001	DUST SEAL	1	
25	51631-28000	NUT, STEERING STEM	1	

This exploded view diagram illustrates the assembly of a motorcycle wheel. The components are numbered as follows:

- 1**: Wheel rim
- 2**: Wheel nut
- 3**: Wheel axle
- 4**: Wheel hub
- 5**: Wheel nut
- 6**: Wheel nut
- 7**: Wheel nut
- 8**: Wheel nut
- 9**: Wheel nut
- 10**: Wheel disc
- 11**: Wheel nut
- 12**: Wheel nut
- 13**: Wheel nut
- 14**: Wheel nut

The diagram shows the wheel rim (1) with a tire mounted on it. The wheel disc (10) is shown separately, with arrows indicating its position relative to the rim. The wheel hub (4) is shown at the bottom, with arrows indicating its position relative to the rim. The wheel nut (2) is shown at the top, with arrows indicating its position relative to the rim. The wheel axle (3) is shown in the center, with arrows indicating its position relative to the rim. The wheel nut (11) is shown at the bottom right, with arrows indicating its position relative to the rim. The wheel nut (12) is shown at the bottom left, with arrows indicating its position relative to the rim. The wheel nut (13) is shown at the bottom center, with arrows indicating its position relative to the rim. The wheel nut (14) is shown at the bottom right, with arrows indicating its position relative to the rim. The wheel nut (6) is shown at the bottom left, with arrows indicating its position relative to the rim. The wheel nut (7) is shown at the bottom center, with arrows indicating its position relative to the rim. The wheel nut (5) is shown at the bottom right, with arrows indicating its position relative to the rim. The wheel nut (8) is shown at the top left, with arrows indicating its position relative to the rim. The wheel nut (9) is shown at the top center, with arrows indicating its position relative to the rim.

REF N°	PART N°	DESCRIPTION	Q`TY	REMARKS
1	54111-45F10	WHEEL, FRONT (18X1.60)	1	
2	08133-63017-000	BEARING	2	
3	54731-45F00	SPACER	1	
4	54711-05310	AXLE, FRONT	1	
5	54741-45F00	SPACER, LH	1	
6	54742-45F00-000	SEAL, FRONT HUB	1	
7	54892-45F00-000	COVER, FRONT HUB DUST SEAL	1	
8	08319-3112A	NUT	1	
9	54061H36400H000	BOX ASSY, SPEEDOMETER GEAR	1	
10	59211-05500	DISC, FRONT BRAKE	1	
11	09100-08140	BOLT (8X28)	4	
12	09169-08019	WASHER	2	
13	55100-45F00	TIRE, FRONT (2.75-18 4PR)	1	
14	43130-45F00	VALVE ASSY, WHEEL RIM	1	

FIG.44

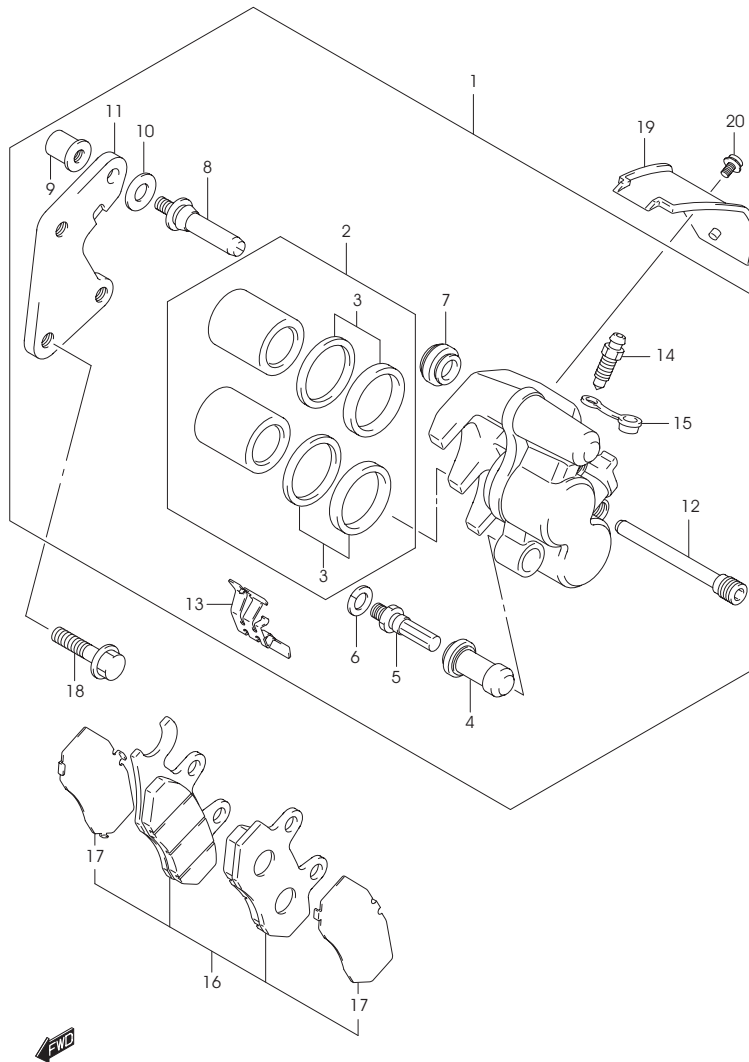


FIG.44 (I-3) FRONT CALIPER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	59300-05500-999	CALIPER ASSY, FRONT LH	1	
2	59300-05860	.PISTON SET	1	
3	59100-05810	..SEAL SET, PISTON	1	
4	59313-05700	.CAP, BUSH DUST	1	
5	59306-05700	.PIN, GUIDE NO.2	1	
6	59308-05700	.WASHER, GUIDE PIN	1	
7	59312-05700	.BOOT, GUIDE NO.1	1	
8	59305-05700	.PIN, GUIDE NO.1	1	
9	59355-05700	.NUT	1	
10	59307-05700	.WASHER, GUIDE P IN NO.1	1	
11	59351-05700	.CARRIER, CALIPER L	1	
12	69141-05700	.PIN, PAD	2	
13	59315-05700	.SPRING, PAD	1	
14	59121-18410	.BLEEDER	1	
15	55156-66310	.CAP, BLEEDER	1	
16	59300-05840	PAD & SHIM SET	1	
17	59371-05700	.SHIM, PAD	2	
18	01550-08303	BOLT	2	
19	59313-13001	PROTECTOR, CALIPER	1	
20	02112-7512B	SCREW	1	

FIG.45

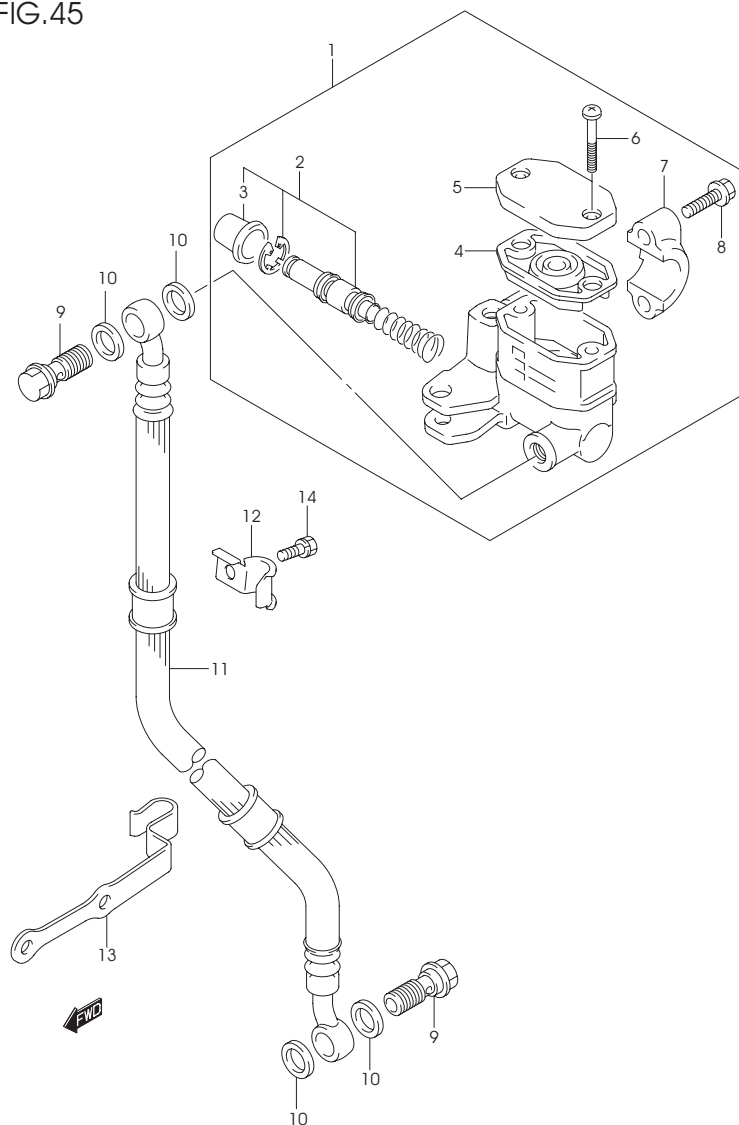


FIG.45 (I-4) FRONT MASTER CYLINDER

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	59600-053B1	CYLINDER ASSY, FRONT MASTER	1	
2	59600-45880	.PISTON/CUP SET	1	
3	59666-44300	..BOOT	1	
4	59667-053B0	.DIAPHRAGM	1	
5	59669-053B0	.CAP, RESERVOIR	1	
6	02112-04355	.SCREW, RESERVOIR	2	
7	59671-053A1	.HOLDER	1	
8	01547-0625B	.BOLT	2	
9	09360-10039	BOLT (10X1.00X22)	2	
10	09161-10009	WASHER	4	
11	59480-45F31	HOSE, BRAKE	1	
12	59246-45F01	CLAMP, BRAKE HOSE	1	
13	59268-45F00	CLAMP, BRAKE HOSE NO.2	1	
14	01570-0612B	BOLT	1	

FIG.46

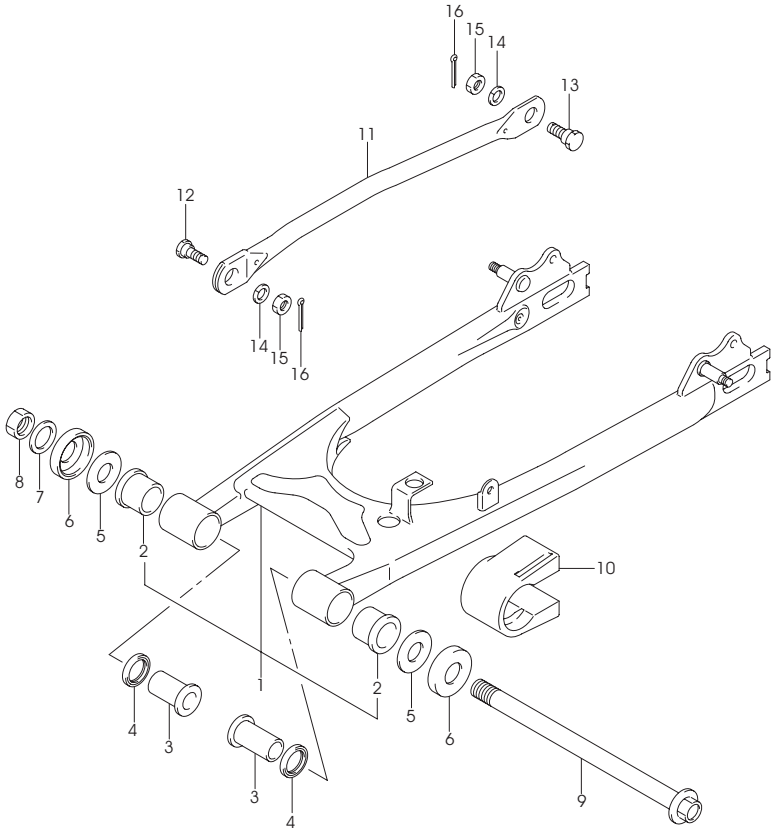


FIG.46 (I-5) REAR SWINGING ARM

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	61000-45F21-YGA	SWINGING ARM ASSY, REAR	1	
2	61261-05340	.BUSH	2	
3	61251-05300	SPACER, ARM PIVOT	2	
4	09283-20031	OIL SEAL (20X27X5)	4	
5	08211-14321	WASHER	2	
6	61262-05300	COVER, ARM PIVOT	2	
7	08322-0114B	WASHER	1	
8	08319-2114A	NUT	1	
9	61211-45F10	SHAFT, PIVOT	1	
10	61273-05300	BUFFER, CHAIN TOUCH DEFENSE	1	
11	64310-45FA0	TORQUE LINK, REAR	1	
12	09111-08012	BOLT, FRONT (8X22.5)	1	
13	09111-08013	BOLT, REAR (8X26.5)	1	
14	09162-08008	LOCK WASHER	2	
15	09140-08008	NUT	2	
16	04111-2020A	COTTER PIN	2	

FIG.47

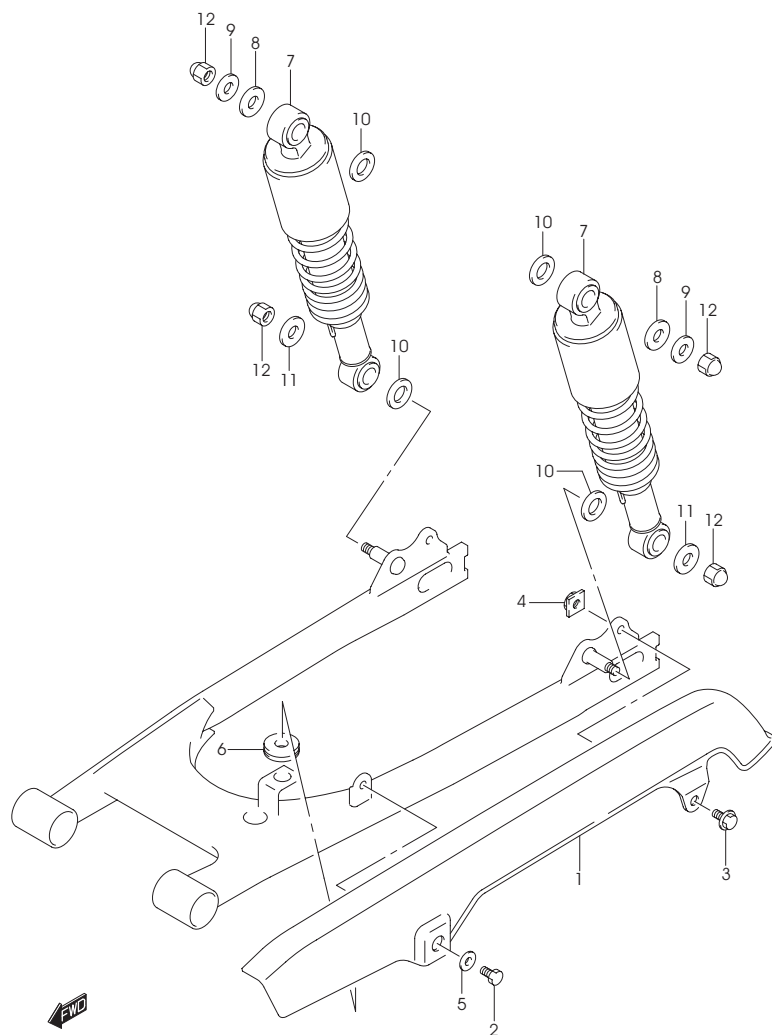


FIG.47 (I-6) CHAIN CASE

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	61311-13001	CASE, CHAIN	1	
2	01500-06103	BOLT, FRONT	1	
3	01570-06123	BOLT, REAR	1	
4	61316-43000	NUT, REAR	1	
4	61316-45FA0	NUT, REAR	1	
5	61315-45F00	WASHER	1	
6	09320-08018	CUSHION, INNER	1	
7	62100-45F21	ABSORBER ASSY, REAR SHOCK	2	
8	09160-10093	WASHER, UPPER	2	
9	09160-10033	WASHER, UPPER NO.2	2	
10	62145-45F00	WASHER, INNER	4	
11	09160-10127	WASHER, LOWER	2	
12	08313-10107	NUT	4	

FIG.48

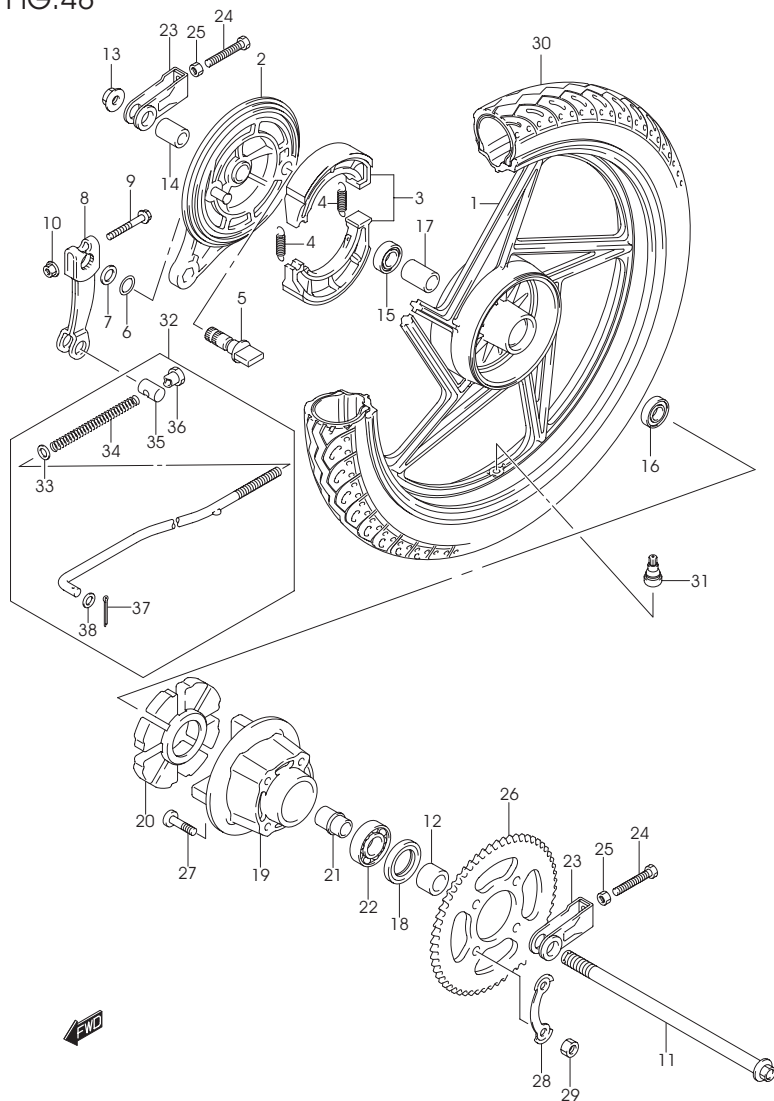


FIG.48 (J-2) REAR WHEEL

REF N°	PART N°	DESCRIPTION	Q'TY	REMARKS
1	64150-45F10	WHEEL, REAR (MT1.85X18)	1	
2	64210-45FA0-000	PANEL, REAR BRAKE ANCHOR	1	
3	54400-45811	SHOE SET, BRAKE	1	
4	55421-45F00	SPRING	2	
5	54441-45FA0	CAM, BRAKE	1	
6	09280-14011	O RING (ID:13.8,D:2.50)	1	
7	09160-14055	WASHER	1	
8	64451-45FA0	LEVER, BRAKE CAM	1	
9	01550-0635B	BOLT	1	
10	08316-1006A	NUT	1	
11	64711-05330	AXLE, REAR	1	
12	09180-15042	SPACER, LH (15X28X19)	1	
13	08319-3114A	NUT	1	
14	09180-15002	SPACER, RH (15X22X33)	1	
15	08144-63027	BEARING, RH	1	
16	08143-62027	BEARING, LH	1	
17	09180-15011	SPACER, HUB (15.3X21.7X63)	1	
18	09285-28001	OIL SEAL (28X47X7)	1	
19	64610-05301	DRUM, SPROCKET MOUNTING	1	
20	64651-38300-000	SHOCK ABSORBER, WHEEL	1	
21	64733-05301	RETAINER, DRUM	1	
22	09262-20069	BEARING (20X47X14)	1	

This exploded view diagram illustrates the assembly of a motorcycle wheel and hub. The components are numbered as follows:

- Wheel Assembly:** Includes the tire (30), rim (1), spokes (17), and a hub cap (3).
- Hub and Bearings:** Features the main hub (2), bearings (4), and a central axle (11).
- Brake Components:** Shows the brake disc (5), brake pads (13, 14), and the brake caliper (10).
- Chain Drive Components:** Includes the chain (32), chain links (33, 34, 35, 36), and the chain guide (37).
- Other Parts:** Includes a fender (16), a bolt (31), a nut (38), and a small pin (39).

The diagram is a technical line drawing showing the spatial relationship between these parts for assembly.

REF N°	PART N°	DESCRIPTION	Q`TY	REMARKS
23	61410-36002	ADJUSTER, CHAIN	2	
24	09104-08034	BOLT (8X50)	2	
25	08310-00087	NUT	2	
26	64511-45F00	SPROCKET, REAR (NT:45)	1	
27	09119-08043	BOLT (8X33)	4	
28	09169-08012	WASHER	2	
29	08310-0008B	NUT	4	
30	65100-45F00	TIRE, REAR, 90/90-18 4P.R.	1	
31	43130-45F00	VALVE ASSY, WHEEL RIM	1	
32	43300-45F10	ROD ASSY, REAR BRAKE	1	
33	08322-0106B	.WASHER	1	
34	09440-09004	.SPRING	1	
35	09209-11002	.PIN	1	
36	09150-06010	.NUT	1	
37	04111-2015A	.COTTER PIN	1	
38	08322-0106B	.WASHER	1	



PARTS NUMBER INDEX

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
10000		12140-16E00	6-17	13246-43010	10-12
		12151-12F00	6-18	13247-13A00	10-40
		12161-12F60-0B0	6-3	13247-33E00	10-21
		12161-12F80-0B0	6-3	13251-47E00	10-19
11100-12F50	2-1	12200-12FC1	6-1	13254-20010	10-17
11100-12F70	2-1	12200-12FD1	6-1	13267-20E20	10-35
11115-12F70	2-4	12211-05241	6-4	13268-054A0	10-37
11141-05202	1-2	12221-05220	6-5	13268-47070	10-30
11141-12F50	1-2	12261-05320	6-6	13279-12F20	10-29
11141-12F50	2-8	12261-12F50	6-6	13282-05G00	10-15
11151-45000	2-11	12600-12861	7-4	13291-29900	10-31
11171-12F50	2-31	12611-05300	7-1	13295-29900	10-32
11172-12F50	2-32	12633-05310	7-7	13370-054L0	10-41
11175-18910	2-17	12649-05300	7-9	13382-46E00	10-7
11177-12F50	2-33	12711-12F50	8-1	13383-054G0	10-10
11178-12F50	2-34	12741-05210	8-2	13385-05F00	10-13
11179-12F50	2-35	12741-12F70	8-2	13386-09410	10-36
11179-12F60	2-36	12760-12F60	9-1	13388-20E20	10-6
11181-12F50	2-37	12771-12F60	9-2	13394-17E60	10-8
11210-12F50-0F0	3-1	12811-12F60	9-3	13411-12F00	10-22
11241-05311	1-3	12812-32400	9-4	13417-01010	10-23
11241-05311	3-6	12830-12F50	9-6	13417-47E00	10-3
11300-05380	4-1	12832-12F50	9-7	13418-053S0	10-24
11319-05220	4-7	12833-12F50	9-8	13500-48F00	10-27
11325-12F50	4-9	12834-12F50	9-9	13502-12F00	10-2
11340-12F50	5-1	12837-32410	1-6	13504-16E00	10-28
11351-12F50	5-15	12837-32410	9-10	13507-054G0	10-26
11358-12F50	5-27	12842-32411	8-6	13574-05F00	10-9
11361-12F70	5-29	12843-32400	8-7	13581-05F00	10-4
11383-12F70	5-3	12850-25C00	8-5	13601-05148	10-20
11384-12F70	5-26	12861-05201	8-8	13603-05F00	10-5
11402-12851	1-1	12911-12F60	8-14	13681-04010	10-25
11482-05211	1-4	12912-12F60	8-15	13683-28B10	10-38
11482-05211	5-6	12920-12F50	8-16	13684-053R0	10-39
11482-05311	1-49	12931-09400	8-17	13700-45F00	11-1
11483-05312	1-5	12932-27A10	8-18	13780-45F00	11-2
11483-05312	5-16	12933-39E00	8-19	13826-45F00	11-5
11971-45010	5-2	13101-053A0	2-25	13853-05300	11-6
12100-12F50-050	6-20	13200-45F00	10-1	13870-45F00	11-8
12111-12F50-0F0	6-16	13240-12FG0	10-16	13881-05390	11-4

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
14181-14D00	1-7	24359-05200	15-21	31100-05510	17-1
14181-14D00	12-7	24421-05320	15-22	31130-32C20	17-4
14305-45F11	12-1	24741-05200	15-9	31132-32C10	17-3
14790-45F10	12-2	24741-05200	15-25	31133-32C10	17-5
16321-05220	6-11	24751-05220	15-28	31135-32C10	17-7
16331-12F00	13-2	25221-08300	16-1	31150-06C00	17-13
16400-05201	13-1	25231-05201	16-2	31156-38300	17-9
16510-05240	13-13	25310-05340	16-5	31175-42A01	17-2
16512-12F50	13-15	25322-31310	16-7	31264-32C10	17-10
16520-05202	13-6	25322-31320	16-7	31281-32C10	17-8
16523-05200	13-8	25323-34201	16-8	31361-32C10	17-12
16584-12F70	13-21	25324-34201	16-9	31361-38300	17-11
20000		25331-30001	16-12	31800-49110	20-1
		25341-05200	16-14	31861-06C00	20-6
		25350-44A00	16-16	31861-10D00	19-7
		25351-30020	16-22	31861-10D00	25-3
21111-05200-0C0	6-12	25381-45400	16-23	31861-31500	19-7
21200-05880	14-1	25411-16701	16-3	31861-31500	20-5
21411-05210	14-3	25421-35410	16-4	32101-12F30	18-1
21441-13A20	14-7	25510-05220	16-27	32101-12F40	18-1
21451-19A00	14-8	25520-47030	16-32	32102-12F30	18-2
21462-14103	14-9	25525-12C10	16-36	32102-12F40	18-2
23110-05220	14-12	25526-47000	16-33	32800-22D20	20-7A
23110-05220	14-12	25600-45F00	16-38	32800-29B00	20-7
23117-05210	14-19	25652-16500	16-39	32900-053A0	20-13
23121-38201	14-13	25671-01020	16-30	32900-053K0	20-9
23122-05200	14-14	26260-05201	15-32	32931-053B0	20-10
23271-46010	14-22	26260-05210	15-32	32980-05300	20-11
24121-05260	15-1	26431-05220	2-20	33410-05360	20-15
24125-38201	15-2	26441-49000	2-21	33510-43010	20-17
24130-05370	15-11	26451-45000	2-22	33541-38210	20-18
24221-05310	15-3	27511-41320	15-35	33542-38B00	20-19
24231-05220	15-4	27531-05220	15-36	33610-10310	19-1
24251-45F00	15-5	27600-29B40-118	15-40	33624-43500	19-8
24310-05230	15-12			33624-43500	25-4
24311-05202	15-12			33651-45F10	19-5
24320-05240	15-15	30000		33652-05310	19-3A
24331-05203	15-17			33652-28010	19-3
24341-45F00	15-19			33652-38000	19-2
24351-45F00	15-20			33680-16A10	19-4

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
33810-05300	20-4	36619-37300	25-9	43611-45F00	28-13
33810-05310	20-4	36651-45F00	35-16	43613-45F00	28-14
33820-053A0	19-6	37100-01D80	25-11	43614-45F00	28-15
33820-053B0	19-6	37101-01880	25-10	43621-45F00	28-10
33860-05550	19-9	37146-45F00	25-17	43700-45F00	28-8
34110-34G30	21-2	37200-28G20	25A-1	43811-45F00	28-5
34111-34G10	21-6	37200-45F10	36-5	43821-45F01	28-6
34124-34G10	21-3	37400-05300	25A-2	44100-45F10-YHP	30-1
34150-34G10	21-1	37720-44700	16-42	44200-45FB0	30-3
34152-34G10	21-19	37720-45F00	16-42	44300-45F10	31-1
34173-34G10	21-10	37740-12F00	25-13	44330-45F10	31-8
34191-34G10	21-16	38500-055D1	25-15	44348-87420	31-2
34210-34G10	21-5	38610-31320	23-17	44421-45F10	31-5
34383-09400	21-8	38610-45F00	23-15	44421-45F30	31-6
34810-45F00	31-10	38616-45F00	23-16	44422-45F10	31-9
34910-45F00	21-22			44541-38200	30-5
34940-05380	21-24	40000		44542-38300	30-6
34943-05500	21-25			45100-45F00	39-1
34950-34G10	21-15			45149-45F00	39-2
35100-29B60-999	22-1			45213-13601	39-4
35111-29B60	22-2	41100-45FE0	26-1	45220-45F00	39-6
35121-29B60	22-3	41540-05300	26-8	45280-45F00	39-8
35171-29B60	22-4	41991-05300	26-2	45511-45F00-YHP	40-1
35172-29B60	22-5	41992-05300	26-5	45512-45F00-YHP	40-2
35181-45F10	22-8	42100-45F00	27-1	45513-45F10-YHP	40-3
35601-45F00	23-1	42211-36504	27-2	45515-45F00	40-5
35602-45F00	23-2	42278-45F00	27-5	45521-45F00	40-6
35603-28D10	23-7	42310-45F00	27-6	46149-45F00	29-4
35604-28D10	23-8	43110-45F00	27-10	46211-45F10-YGC	40-11
35652-45F00	23-3	43130-45F00	43-14	46212-45F00	40-12
35652-45F00	23-9	43130-45F00	48-31	46310-45F01	29-1
35695-17C00	23-12	43159-45F00	27-15	47111-45F00-YHP	32-1
35710-45F00	24-1	43213-45F00	27-13	47211-45F00-YHP	32-2
35712-45F00	24-2	43231-05302	27-12	47431-05300	26-13
35713-28D00	24-3	43300-45F10	48-32	47432-05300	26-14
35718-45F00	24-4	43501-45F00	28-1	47440-05301	26-15
35927-05320	24-11	43539-45F00	28-3	50000	
35950-04H11	22-9	43550-45F00	28-9		
35970-04H01	24-15	43551-36500	28-2		
36610-45F00	25-1	43600-45F00	28-7		

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
51103-45F40	41-1	51872-45F10	42-14	58621-45F00	21-23
51104-45F40	41-2	51872-45F104	2-15	58626-37400	35-14
51110-45F40	41-13	53111-45F01-YHP	34-1	59100-05810	44-3
51117-45F40	41-16	53112-45F01	34-2	59121-18410	44-14
51130-45F40	41-3	53145-45F10	34-5	59211-05500	43-10
51140-45F40	41-4	53149-45F00	34-6	59246-45F01	45-12
51146-45F40	41-10	54111-45F00-YGD	43-1	59268-45F00	45-13
51147-45F40	41-7	54400-45810	48-3	59300-05500-999	44-1
51148-45F40	41-8	54441-45FA0	48-5	59300-05840	44-16
51153-45F40	41-5	54600-36410	43-9	59300-05860	44-2
51156-45F40	41-6	54711-05310	43-4	59305-05700	44-8
51171-45F40	41-14	54731-45F00	43-3	59306-05700	44-5
51173-45F40	41-18	54741-45F00	43-5	59307-05700	44-10
51176-45F40	41-19	54742-45F00	43-6	59308-05700	44-6
51177-45F40	41-11	54892-45F00	43-7	59312-05700	44-7
51178-45F40	41-15	55100-45F00	43-13	59313-05700	44-4
51182-45F40	41-12	55156-66310	44-15	59313-13001	44-19
51189-45F40	41-17	55421-45F00	48-4	59315-05700	44-13
51192-45F40	41-20	56111-45F51	35-1	59351-05700	44-11
51195-45F40	41-9	56200-28840	35-2	59355-05700	44-9
51311-45F10	42-5	56211-45F10	42-9	59371-05700	44-17
51351-05300	42-7	56221-45F10	42-10	59480-45F31	45-11
51356-05300	42-8	56272-12FH0	35-4	59600-053B1	45-1
51410-45F00	42-1	56272-44500	35-7	59600-45880	45-2
51455-45F10	42-4	56276-17D00	35-5	59666-44300	45-3
51530-45F10	42-16	56500-45F10	35-9	59667-053B0	45-4
51540-45F10	42-17	56600-45F10	35-10	59669-053B0	45-5
51553-29311	42-18	57110-28G10	36-1	59671-053A1	45-7
51611-20002	42-21	57211-22D01	36-8	60000	
51611-33002	42-19	57421-13001	36-2		
51621-28000	42-23	57431-45F00	36-11		
51621-33001	42-2	57441-45F10	36-14		
51631-28000	42-25	57442-45F10	36-15	61000-45F21-YGA	46-1
51643-25001	42-24	57460-17C01	36-6	61211-45F10	46-9
51811-45F20	33-1	57465-17C00	36-7	61251-05300	46-3
51825-45F10	33-4	57500-45FA0	36-9	61261-05340	46-2
51827-45F10	33-3	57621-45FA0	36-10	61262-05300	46-6
51851-45F10	33-5	57661-31000	36-16	61273-05300	46-10
51859-45F10	33-6	58200-45F40	35-11	61311-13001	47-1
51871-05301	42-13	58300-45F40	35-19	61315-45F00	37-4

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
61315-45F00	47-5	01264-08207	33-2	01570-06123	29-2
61316-43000	47-4	01421-06163	2-38	01570-06123	47-3
61316-45FA0	47-4	01421-06257	3-4	01570-08163	34-3
61410-36002	48-23	01500-0610B	15-29	01570-1235B	42-3
62100-45F21	47-7	01500-06103	4-8	01580-06163	11-11
62145-45F00	47-10	01500-06103	47-2	01580-0835B	40-13
63111-45F00	37-1	01500-06167	14-23	01580-0840B	42-6
63120-45F10	37-2	01500-06203	9-11	02112-03063	21-4
64150-45F00-YGD	48-1	01500-06207	16-34	02112-04083	10-18
64210-45FA0	48-2	01547-05257	5-31	02112-04083	21-7
64310-45FA0	46-11	01547-05357	5-30	02112-04355	45-6
64451-45FA0	48-8	01547-06203	13-10	02112-05143	28-16
64511-45F00	48-26	01547-0625B	45-8	02112-05163	35-17
64610-05301	48-19	01547-06307	5-8	02112-05207	36-13
64651-38300	48-20	01547-06307	5-18	02112-0525B	18-3
64711-05330	48-11	01547-06307	17-15	02112-06253	13-5
64733-05301	48-21	01547-06357	5-19	02112-16103	35-15
65100-45F00	48-30	01547-06407	5-20	02112-34123	17-6
68111-18G20	30-2	01547-06457	5-9	02112-3620B	25-12
68150C31CB0HGRS	32-3	01547-06507	5-21	02112-7512B	44-20
68131C45F20H000	40-4	01547-06557	4-3	02112-75123	13-7
68211-38300	42-15	01547-06607	4-4	02112-7520B	16-44
68319-45F10	38-1	01547-06757	4-5	02122-0612A	15-10
68332-45F00	38-2	01547-06757	4-6	02122-0612A	15-26
69141-05700	44-12	01547-06857	4-6	02122-0612A	16-13
		01550-0616B	20-14	02122-0612A	16-15
		01550-06163	29-3	02122-06163	2-27
		01550-06163	29-5	02122-06303	39-7
90000		01550-0635B	48-9	02142-0412B	18-4
		01550-06353	48-9	02142-0510B	20-16
		01550-06357	2-5	02142-05127	11-10
		01550-06407	2-6	02142-0610B	14-24
95700-28D00	39-9	01550-06607	2-7	02142-06123	5-4
96510-45F10	26-12	01550-0812B	21-21	02142-06123	13-22
99011-05380-029	38-3	01550-0816B	25-16	02142-0616A	24-13
		01550-08303	44-18	02162-06257	8-12
00000		01550-08653	26-6	03211-0416A	23-5
		01550-10303	28-20	03211-0416A	23-11
		01550-10503	28-18	03211-04203	24-6
		01570-0612B	45-14	03541-0410B	25-8

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
03541-0412A	40-10	08313-10107	47-12	09103-08081	2-29
03541-05103	21-20	08316-1005B	24-16	09103-08081	26-3
04111-16146	28-12	08316-1006A	48-10	09104-08034	48-24
04111-2015A	48-37	08316-1006B	20-12	09108-06128	13-18
04111-20158	35-13	08316-1006B	24-10	09108-06133	13-19
04111-20208	27-14	08316-10063	26-19	09108-08062	3-2
04111-20208	46-16	08316-10063	37-5	09108-08089	3-3
04111-25248	27-3	08316-10067	3-5	09111-06032	8-3
04211-09129	5-17	08316-10068	31-11	09111-06054	16-17
04211-11169	2-9	08316-1010B	18-5	09111-06075	36-3
04211-11169	3-7	08316-1010B	23-6	09111-08012	46-12
04211-13189	4-2	08316-1010B	23-14	09111-08013	46-13
04211-13189	5-7	08316-10103	28-19	09116-05020	14-11
04221-04069	16-24	08319-21057	36-12	09116-06084	30-9
06111-06003	42-22	08319-21063	36-4	09116-06168	26-9
06111-08003	28-17	08319-2114A	46-8	09116-06168	26-16
06111-08003	42-20	08319-31088	2-30	09118-06067	37-3
07130-06163	7-8	08319-31088	4-12	09119-08043	48-27
07130-08253	12-8	08319-31088	26-4	09127-06018	35-3
07130-0845B	42-11	08319-31088	26-7	09128-05101	2-23
08123-60027	15-8	08319-3112A	43-8	09128-06004	20-1A
08133-63017	43-2	08319-3114A	48-13	09128-06006	20-8
08143-62027	48-16	08321-01067	12-5	09128-06006	31-3
08144-63027	48-15	08322-0106B	48-33	09128-06044	20-2
08211-06141	16-18	08322-0106B	48-38	09132-03017	21-9
08211-14321	46-5	08322-01063	21-17	09134-06010	14-20
08211-15201	15-33	08322-01068	12-6	09137-05004	17-16
08211-15251	15-13	08322-01103	39-5	09139-06078	12-3
08211-20352	14-6	08322-0114B	46-7	09139-06164	39-10
08211-20353	14-2	08331-3112A	16-41	09140-06023	14-21
08310-00053	35-18	08331-3115A	15-34	09140-06025	16-37
08310-0006A	24-14	08331-31156	15-31	09140-08008	46-15
08310-00063	21-18	08332-11063	13-4	09140-10043	27-9
08310-00063	27-16	08341-31039	18-6	09140-16017	15-38
08310-00067	16-35	08361-3506A	20-1B	09140-16019	6-13
08310-00068	2-39	08361-35068	20-3	09140-16034	14-4
08310-0008B	48-29	09100-08140	43-11	09150-06014	48-36
08310-00087	48-25	09100-10501	27-7	09159-06024	35-8
08310-0010B	23-6B	09103-08010	4-11	09159-08049	2-12
08313-10067	13-20	09103-08016	4-10	09159-08049	2-13

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
09160-06088	24-7	09180-06263	40-7	09247-14043	13-11
09160-06088	24-12	09180-06285	24-8	09250-06011	42-12
09160-06126	35-6	09180-12068	16-28	09259-20007	5-11
09160-10033	47-9	09180-13006	7-3	09259-26016	5-24
09160-10124	28-4	09180-15002	48-14	09261-02001	13-3
09160-10093	47-8	09180-1501	48-17	09261-05003	16-10
09160-10127	47-11	09180-15042	48-12	09261-10003	7-5
09160-10501	23-6A	09181-10195	14-15	09262-15031	15-23
09160-10501	23-13	09181-15111	15-30	09262-20069	15-7
09160-12011	16-40	09181-25251	16-6	09262-20069	15-24
09160-14055	48-7	09181-28022	6-10	09262-20069	48-22
09160-15045	14-16	09181-28023	6-10	09262-28035	6-7
09161-10009	45-10	09181-28024	6-10	09262-35038	6-8
09162-08008	46-14	09181-28025	6-10	09263-15003	14-17
09164-12025	8-10	09181-28026	6-10	09263-15023	15-14
09166-06012	6-14	09181-28027	6-10	09263-15024	15-23
09167-20011	15-18	09181-28028	6-10	09263-28027-0B0	6-2
09167-20012	15-39	09181-28029	6-10	09280-09005	8-9
09168-06001	12-4	09181-28192	6-10	09280-13004	1-8
09168-06023	2-10	09181-28193	6-10	09280-13004	13-14
09168-06023	5-5	09181-28194	6-10	09280-14011	48-6
09168-06023	5-10	09181-28197	6-10	09280-17003	5-12
09168-06023	5-28	09181-28200	6-10	09280-19005	15-37
09168-06023	8-11	09181-28202	6-10	09280-22008	5-25
09168-06023	13-23	09181-28204	6-10	09280-24003	17-14
09168-06026	31-4	09181-28207	6-10	09280-26005	16-43
09168-08016	9-5	09181-28209	6-10	09280-30001	1-9
09168-08032	2-14	09181-28210	6-10	09280-30001	2-18
09168-08032	2-15	09181-28211	6-10	09280-32006	1-10
09168-12002	5-23	09200-06004	35-12	09280-32006	2-26
09168-14002	5-14	09200-06040	28-11	09280-54001	1-11
09168-14002	13-12	09206-08001	2-3	09280-54001	13-16
09168-14002	16-26	09206-13003	7-2	09280-60005	1-12
09169-08012	48-28	09209-05011	16-45	09280-54001	13-16
09169-08019	43-12	09209-11002	48-35	09280-60005	13-9
09169-08034	34-4	09223-04001	16-21	09282-10012	14-18
09169-16003	14-5	09241-22002	2-19	09282-12009	6-9
09180-06038	26-10	09247-12104	5-22	09283-20031	46-4
09180-06038	26-17	09247-14013	16-25	09283-27010	15-27
09180-06067	30-8	09247-14026	5-13	09285-12002	16-31

PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°	PART N°	FIG N°.-REF N°
09285-28001	48-18	09443-06012	25-14		
09289-05002	2-24	09443-08044	16-20		
09289-05011	8-20	09443-14015	27-11		
09320-03004	32-4	09443-17007	27-8		
09320-08018	32-5	09443-18006	27-4		
09320-08018	47-6	09444-26013	16-29		
09320-08021	26-11	09448-23002	8-13		
09320-08021	26-18	09471-12020	22-6		
09320-08047	40-8	09471-12045	23-4		
09320-09009	24-9	09471-12045	23-10		
09320-10022	30-7	09471-12077	21-11		
09329-10001	39-3	09471-12077	21-12		
09329-10016	30-4	09471-12077	21-13		
09360-10039	45-9	09471-12081	22-7		
09380-20009	15-6	09471-12082	21-14		
09380-20009	15-16	09471-12128	24-5		
09381-10004	2-2	09481-15001	25-2		
09381-14001	6-19	09482-00456	2-16		
09390-22002	8-4	09482-00458	2-16		
09401-08401	31-7	09482-00459	2-16		
09401-13409	11-9	09482-00515	2-16		
09401-14401	11-7	09482-00516	2-16		
09402-46208	2-28	09482-00577	2-16		
09402-52208	11-3	09482-00578	2-16		
09404-06429	18-7	09491-22013	10-14		
09404-06431	25-6	09492-12007	10-34		
09407-12402	25-5	09493-25003	10-33		
09407-12402	36-17	09494-00907	10-11		
09407-14403	25-7				
09407-18402	25-7				
09407-25401	25-7				
09409-06322	40-9				
09421-04004	6-15				
09440-03013	7-6				
09440-04003	16-11				
09440-04024	16-46				
09440-09004	48-34				
09440-11016	16-19				
09440-15014	14-10				
09440-18002	13-17				

SUZUKI

GS125K7-K8

PARTS CATALOGUE

1 TH Edicion

Publicado en Febrero de 2008

©2008 **Suzuki Motor de Colombia S.A**

Este **CATALOGO DE PARTES** no puede ser reproducido en forma parcial o total sin autorizacion de **SUZUKI MOTOR DE COLOMBIA S.A.**

SUZUKI MOTOR DE COLOMBIA S.A

Departamento de Repuestos

**Diseño y Desarrollo de Catalogos de Partes Simón Marín Sánchez smarin@suzuki.com.co.
Km 15 via Pereira-Cartago (Pereira - Risaralda - Colombia) 3139626-3139627**

Prohibida su reproducción ©

1

**INFORMATION
ILLUSTRATION INDEX**

2

**ENGINE
TRANSMISSION**

3

ELECTRICAL

4

BODY

5

PARTS NUMBER INDEX

SUZUKI MOTOR DE COLOMBIA S.A



9900BC20086H020

