



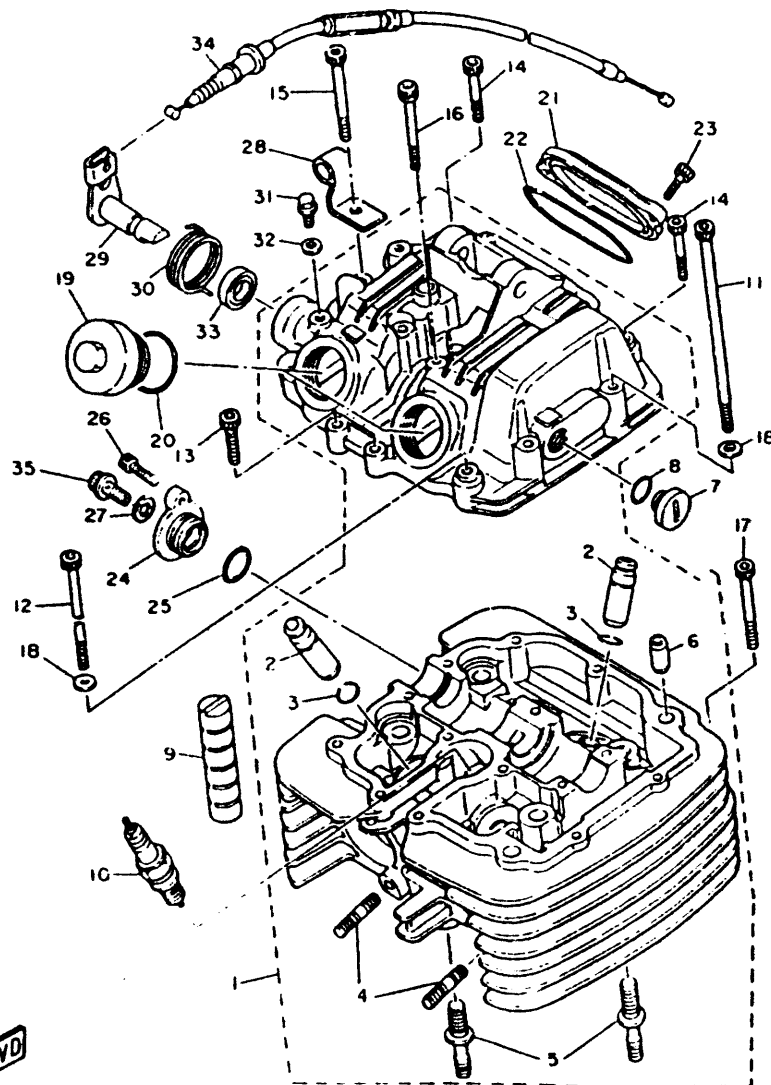

5CH3300-0010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	3TB-11101-02	CYLINDER HEAD ASSY	1	
2	4H7-11133-11	GUIDE, intake valve	4	
3	93440-12052	CIRCLIP	4	
4	90116-06475	BOLT, stud	4	
5	90116-10378	BOLT, stud	2	
6	99530-10116	PIN, dowel	2	
7	90340-14068	PLUG, straight screw	1	
8	93210-13657	O-RING	1	
9	583-11127-00	ABSORBER 3	2	
10	94701-00241	PLUG, spark (NGK DPR8EA-9)	1	
11	91317-06125	BOLT	2	
12	91317-06115	BOLT	1	
13	91317-06025	BOLT	4	
14	91317-06010	BOLT	2	
15	91317-06055	BOLT	6	
16	90109-063E9	BOLT	1	
17	91317-06050	BOLT	1	
18	92907-06600	WASHER, plate	3	
19	1L9-11186-00	COVER, cylinder head side 2	2	
20	93210-32172	O-RING	2	
21	5Y1-11187-00	COVER, cylinder head side 3	1	
22	93210-62523	O-RING	1	
23	91317-06018	BOLT	2	
24	3TB-12215-01	CAP, tensioner case	1	
25	93210-19522	O-RING	1	
26	91317-06020	BOLT	1	
27	90430-06192	GASKET	1	
28	1JK-12283-00	BRACKET, decompression	1	

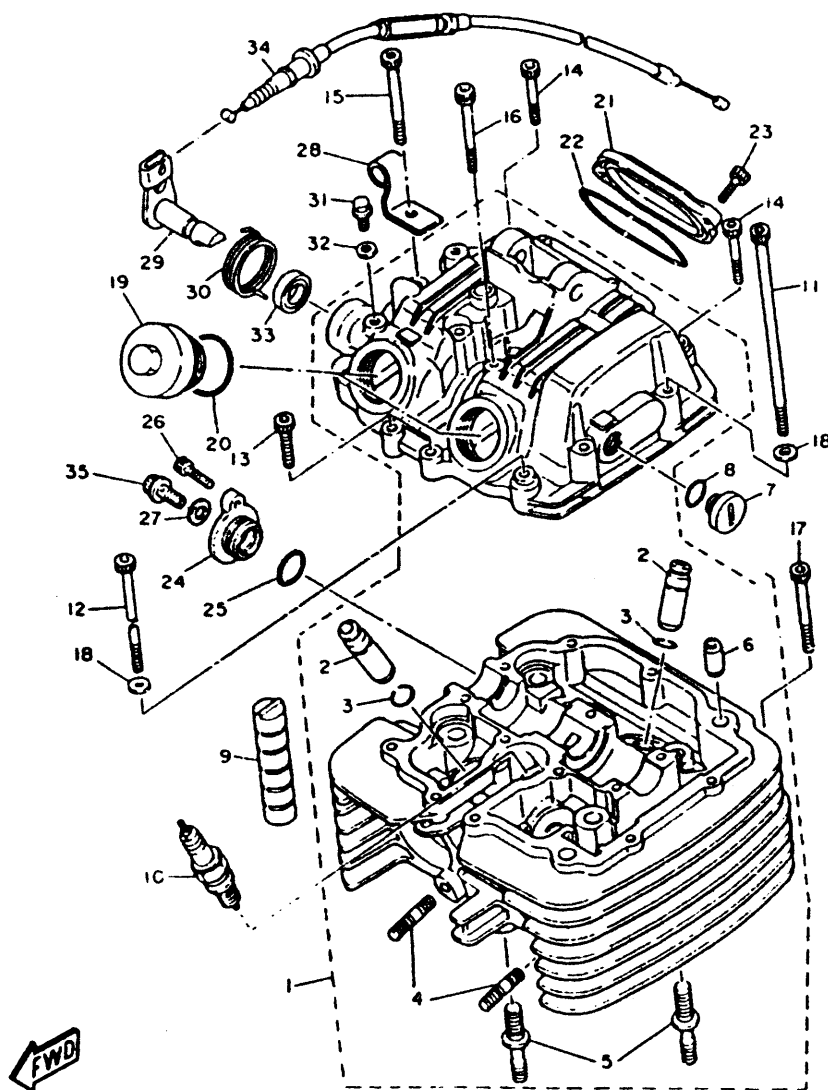

5CH3300-0010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	1A-12288-00	CAM, decompression	1	
30	9608-18551	SPRING, torsion	1	
31	9809-06418	BOLT	1	
32	9830-06014	GASKET	1	
33	9302-12106	OIL SEAL	1	
34	2W-12292-00	CABLE, decompression	1	
35	9801-06001	BOLT, union	1	

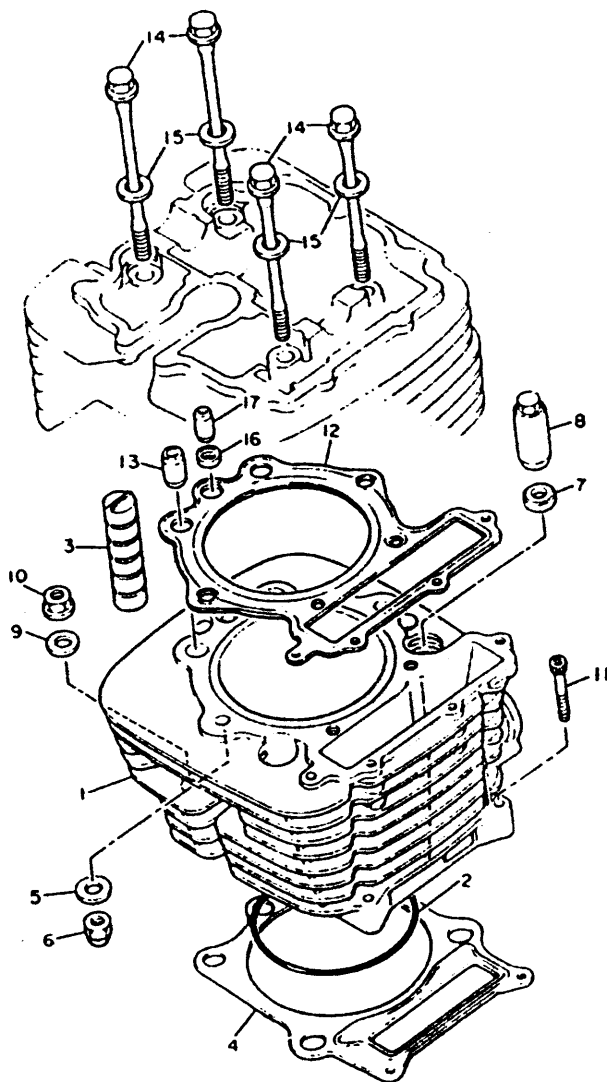


FIG. 2 CYLINDER

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	3TB-11310-00	CYLINDER	1	
2	93210-98473	O-RING	1	
3	583-11127-00	ABSORBER 3	2	
4	1VJ-11351-00	GASKET, cylinder	1	
5	90201-080L8	WASHER, plate	2	
6	90176-08026	NUT, crown	2	
7	90201-10590	WASHER, plate	2	
8	90179-10201	NUT	2	
9	90201-10124	WASHER, plate	2	
10	90179-10279	NUT	2	
11	91317-06035	BOLT	2	
12	2KF-11181-01	GASKET, cylinder head 1	1	
13	99530-12016	PIN, dowel	2	
14	90105-08505	BOLT, washer based	4	
15	90201-085L3	WASHER, plate	4	
16	90430-08178	GASKET	1	
17	99530-08016	PIN, dowel	1	



21Y280-8020

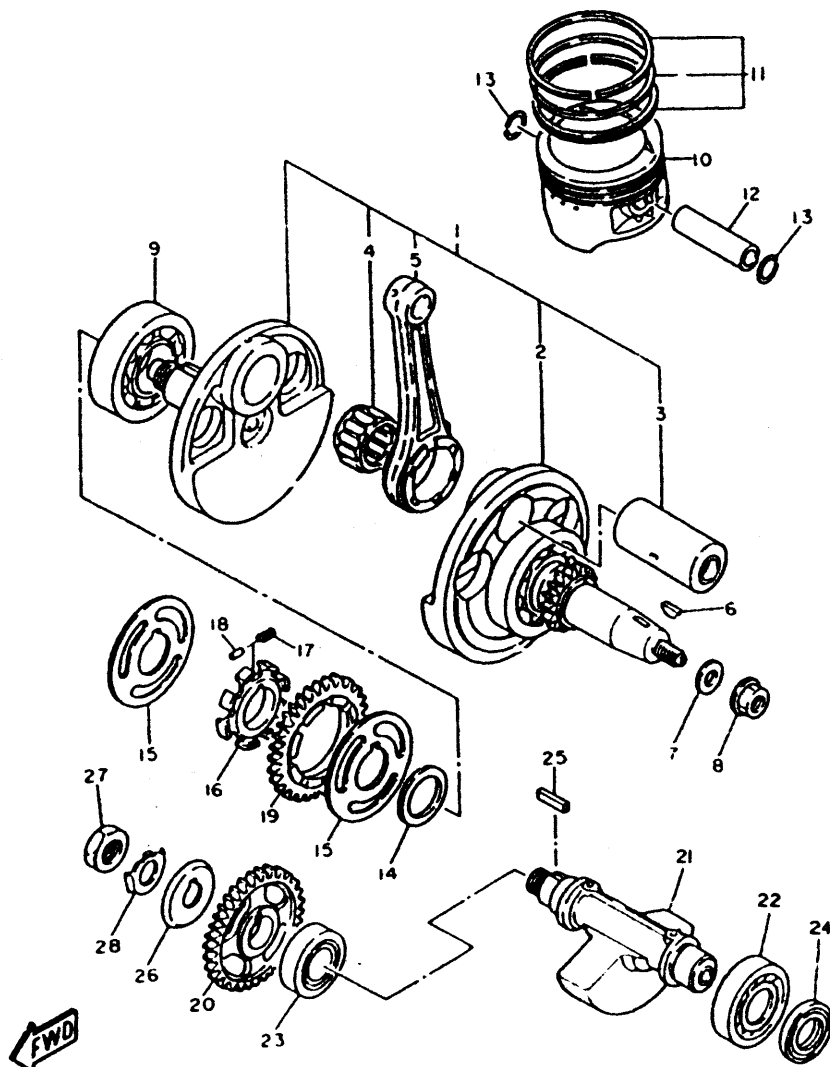


FIG. 3 CRANKSHAFT. PISTON

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-11400-00	CRANKSHAFT ASSY	1	
2	5CH-W1141-00	- CRANK 1	1	
3	1VJ-11681-00	- PIN, crank 1	1	
4	93310-635D4	- BEARING, cylindrical	1	
5	3TB-11651-00	- ROD, connecting	1	
6	90280-16053	KEY, woodruff	1	
7	90201-14226	WASHER, plate	1	
8	90179-14317	NUT	1	
9	93306-30702	BEARING (B6307)	1	
10	3TB-11631-00-Y0	PISTON (STD)	1	URRC
10	3TB-11636-00	PISTON (0.50MM O/S)	1	AP
10	3TB-11638-00	PISTON (1.00MM O/S)	1	AP
11	34L-11610-00	PISTON RING SET (STD)	1	URRC
11	34L-11610-20	PISTON RING SET (0.50MM O/S)	1	AP
11	34L-11610-40	PISTON RING SET (1.00MM O/S)	1	
12	1JK-11633-01	PIN, piston	1	
13	93450-24028	CIRCLIP	2	
14	90201-301F4	WASHER, plate	1	
15	34K-11565-02	WASHER, bearing cover	2	
16	5Y1-11496-01	BOSS, buffer	1	
17	90501-22721	SPRING, compression	8	
18	93605-10090	PIN, dowel	4	
19	2JT-11536-00	GEAR, drive	1	
20	5Y1-11531-00	GEAR, balance wt 44t	1	
21	34K-11454-00	WEIGHT 1	1	
22	93306-30525	BEARING (B6305)	1	
23	93306-30534	BEARING	1	
24	93101-25106	OIL SEAL	1	

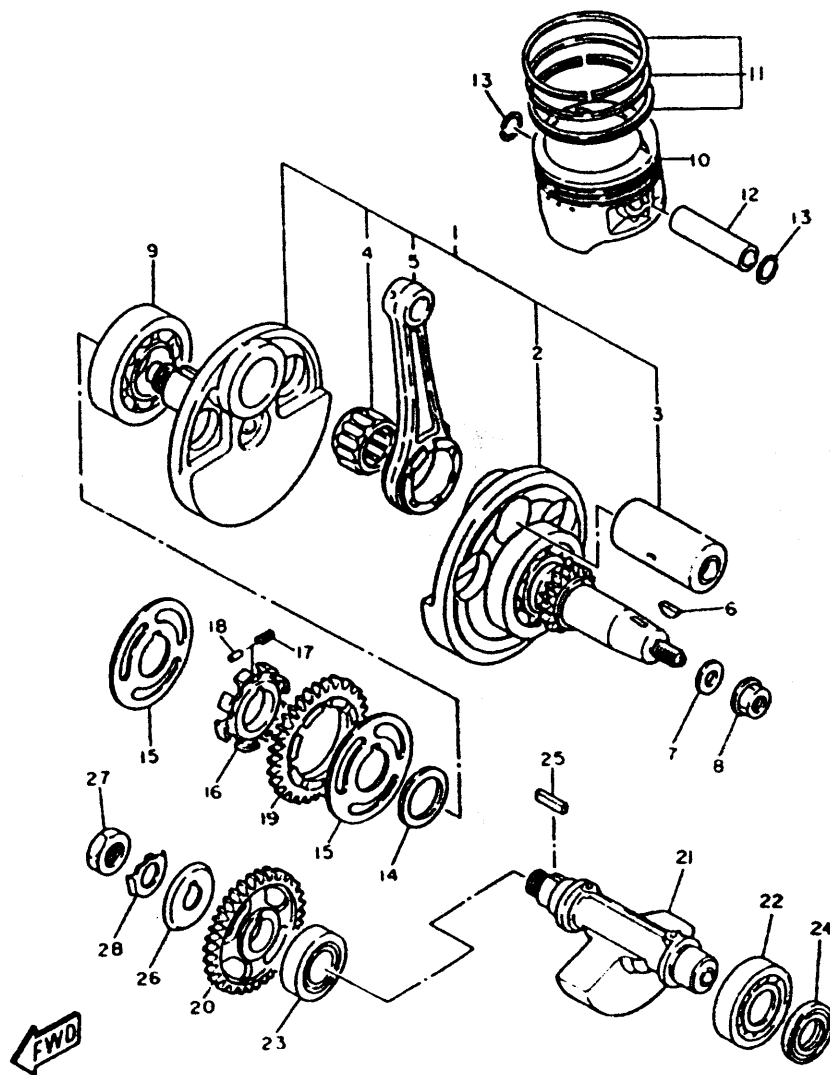


FIG. 3 CRANKSHAFT. PISTON

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
25	90282-05013	KEY, straight	1	
26	34K-11145-00	PLATE, breath	1	
27	90170-16343	NUT	1	
28	90215-16242	WASHER, lock	1	

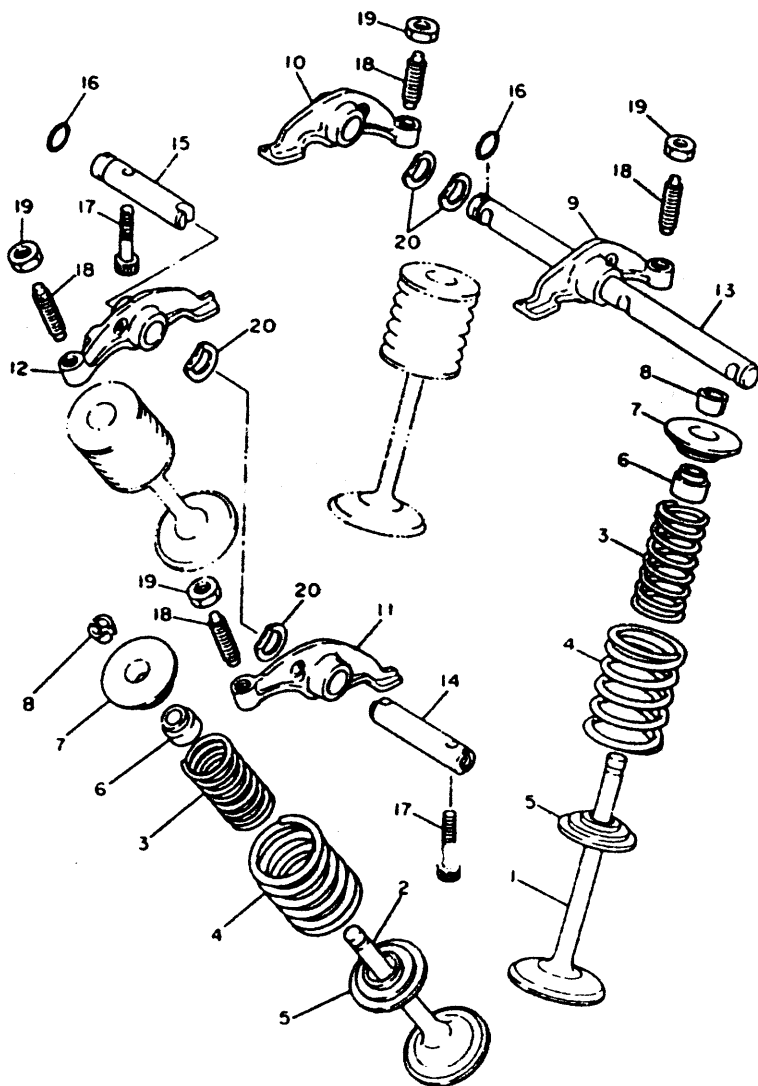


FIG. 4 VALVE

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	1VJ-12111-00	VALVE, intake	2	
2	1VJ-12121-00	VALVE, exhaust	2	
3	5Y1-12113-00	SPRING, valve inner	4	
4	5Y1-12114-00	SPRING, valve outer	4	
5	4H7-12116-00	SEAT, valve spring	4	
6	1J7-12119-01	SEAL, valve stem	4	
7	2F3-12117-00	RETAINER, valve spring	4	
8	1J7-12118-00	COTTER, valve	8	
9	34K-12151-00	ARM, valve rocker	1	
10	34K-12161-00	ARM, valve rocker 2	1	
11	34K-12162-00	ARM, valve rocker 3	1	
12	34K-12163-00	ARM, valve rocker 4	1	
13	2NX-12146-00	SHAFT, rocker	1	
14	2NX-12156-00	SHAFT, rocker 2	1	
15	2NX-12166-00	SHAFT, rocker 3	1	
16	93210-00521	O-RING	2	
17	90109-063E8	BOLT	2	
18	2NX-12159-00	SCREW, valve adjusting	4	
19	90170-06128	NUT	4	
20	90206-12075	WASHER, wave	4	

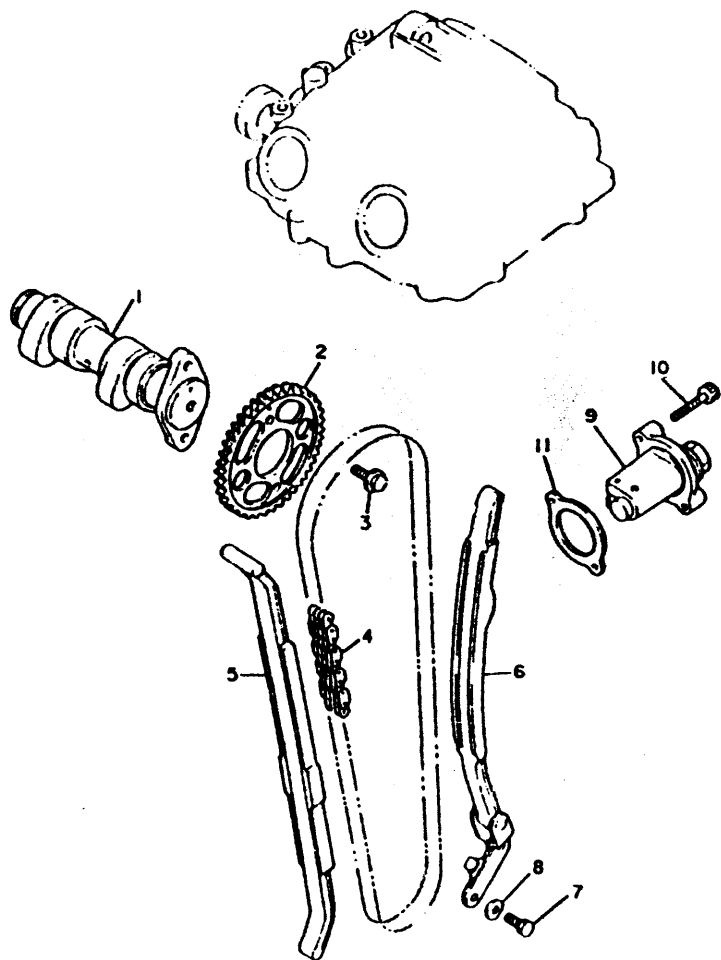


FIG. 5 CAMSHAFT. CHAIN

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	1JK-12171-00	CAMSHAFT 1	1	
2	3TB-12176-00	SPROCKET, cam chain	1	
3	90105-07342	BOLT, washer based	2	
4	94590-27126	CHAIN	1	
5	34K-12231-00	GUIDE, stopper 1	1	
6	34K-12241-00	GUIDE, stopper 2	1	
7	97027-06016	BOLT	2	
8	92907-06600	WASHER, plate	2	
9	3TB-12210-00	TENSIONER ASSY, cam chain	1	
10	91317-06025	BOLT	2	
11	4DW-12213-00	GASKET, tensioner case	1	



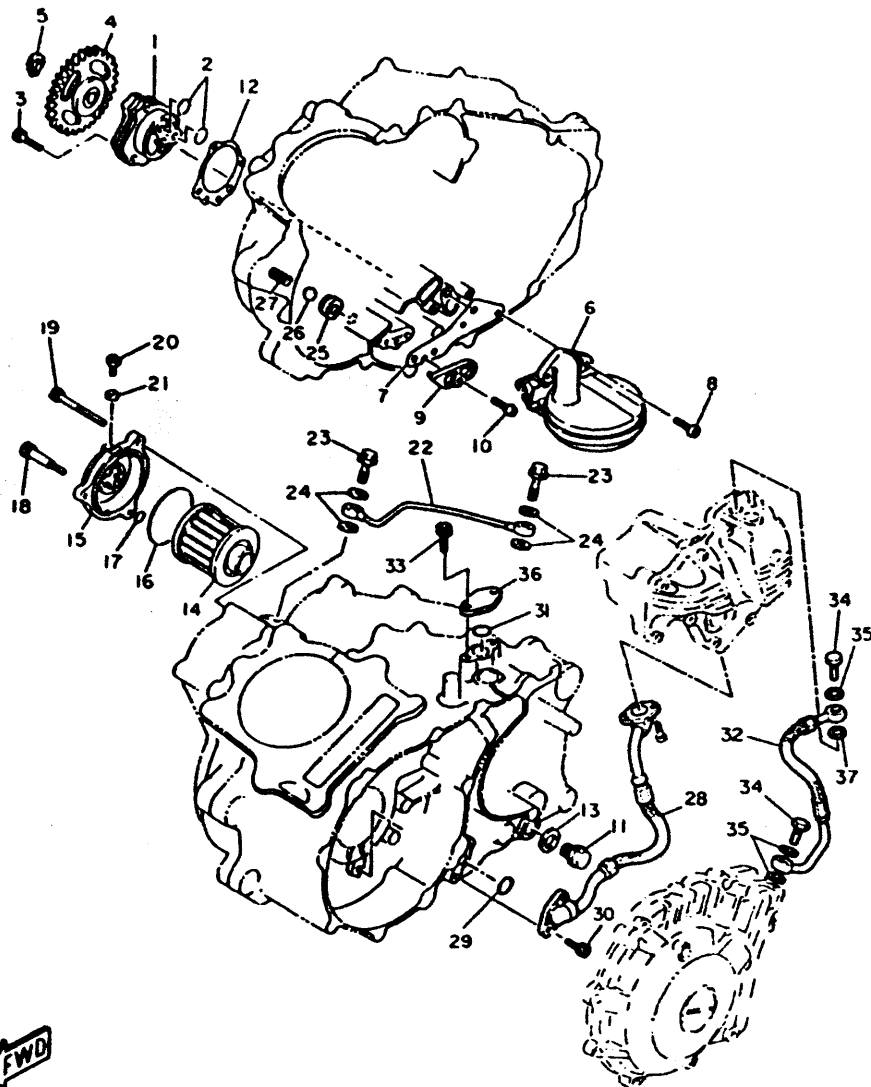


FIG. 6 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	3AJ-13300-01	OIL PUMP ASSY	1	
2	93210-13361	O-RING	2	
3	91317-06035	BOLT, hexagon socket head	3	
4	3AJ-13325-00	GEAR, pump driven	1	
5	99009-11400	CIRCLIP	1	
6	5Y1-W1343-00	STRAINER COMP.	1	
7	4DW-13415-00	SEAL, oil strainer	1	
8	98507-06016	SCREW, pan head	2	
9	5Y1-15427-01	COVER, cap 2	1	
10	98507-06016	SCREW, pan head	1	
11	90340-14132	PLUG	1	
12	3SX-13329-00	GASKET, pump cover	1	
13	214-11198-01	GASKET	1	
14	4X7-13440-01	ELEMENT ASSY, oil cleaner	1	
15	4PT-13447-00	COVER, oil element	1	
16	93210-64297	O-RING	1	
17	93210-07135	O-RING	1	
18	90109-06419	BOLT	1	
19	91317-06080	BOLT	2	
20	90149-05110	SCREW	1	
21	90430-05126	GASKET	1	
22	3AJ-13161-01	PIPE, delivery 1	1	
23	90401-08133	BOLT, union	2	
24	90430-08204	GASKET	4	
25	583-13113-00	SEAT, check ball	1	
26	93503-08007	BALL	1	
27	90501-043E0	SPRING, compression	1	
28	5CH-E3464-00	HOSE, oil 1	1	

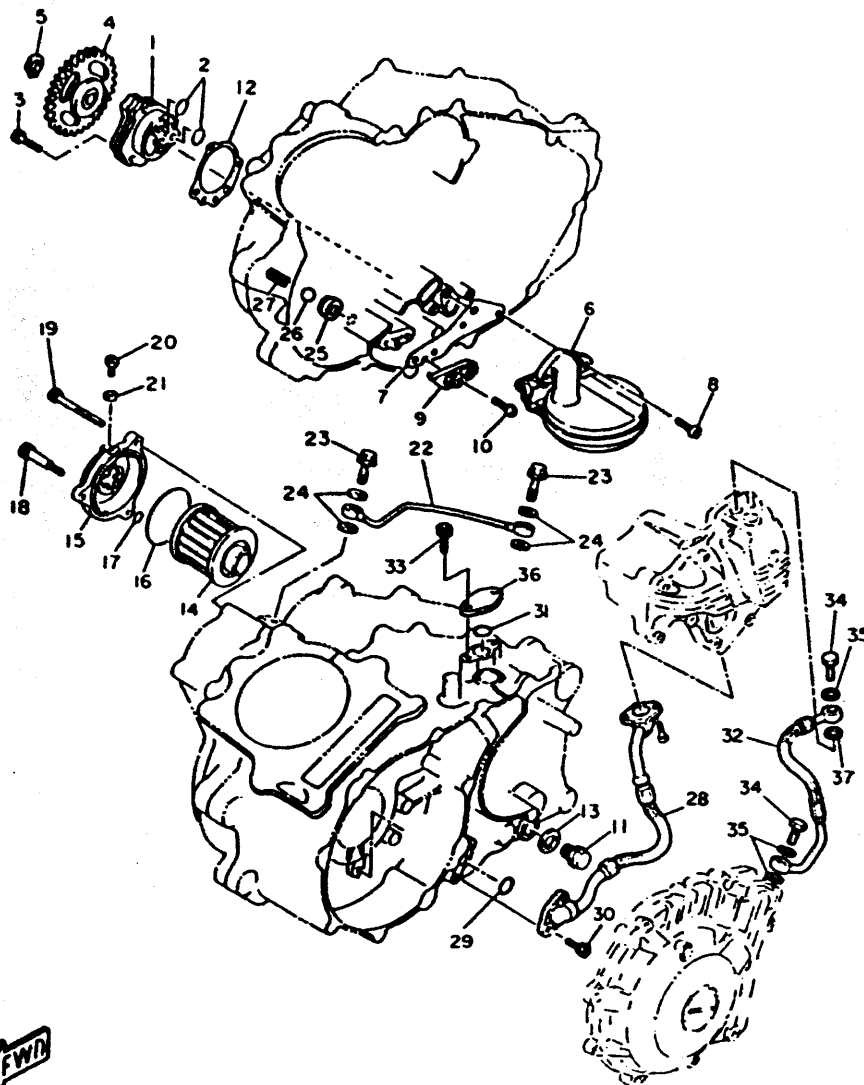


FIG. 6 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	93210-100A9	O-RING	1	
30	9131M-06016	BOLT	2	
31	93210-15171	O-RING	1	
32	5CH-E3465-00	HOSE, oil 2	1	
33	91317-06016	BOLT, hexagon socket head	2	
34	4SU-F2255-01	BOLT, union	2	
35	90201-128H5	WASHER, plain	3	
36	5CH-13455-00	PLUG	1	
37	90201-12X00	WASHER, plain	1	


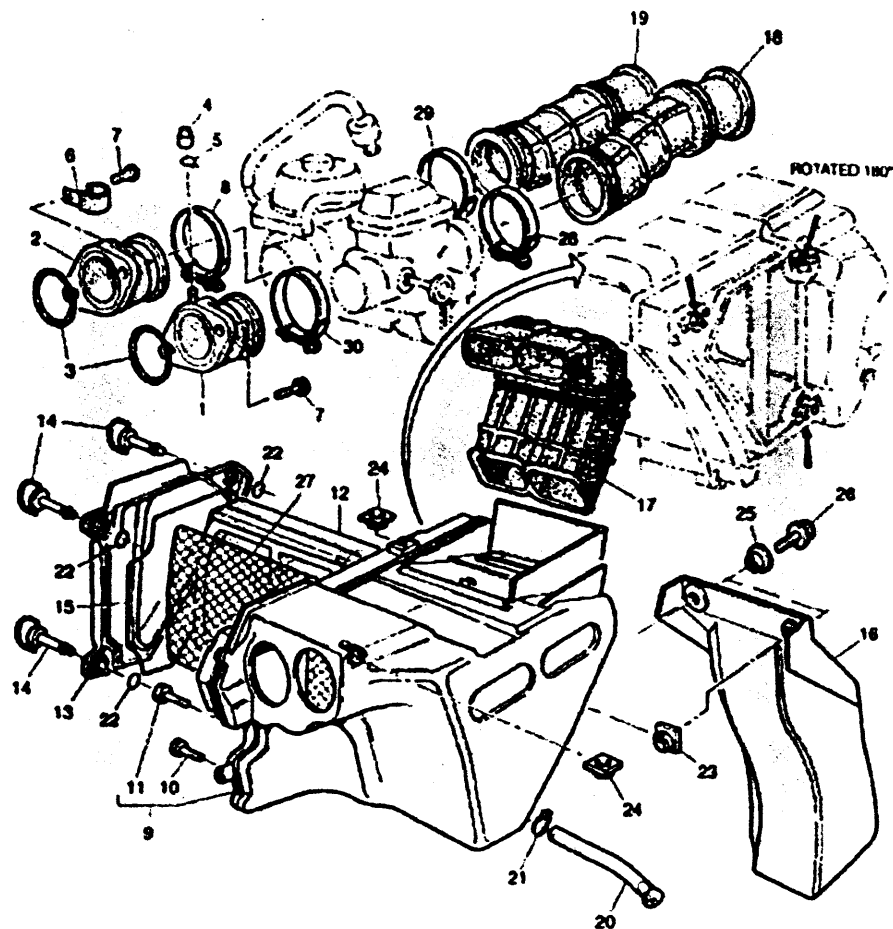


FIG. 7 INTAKE

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-13586-00	JOINT, carburetor 1	1	
2	1VJ-13598-00	JOINT, carburetor 2	1	
3	93210-36769	O-RING	2	
4	16G-13569-00	PLUG, blind	1	
5	90467-10039	CLIP	1	
6	90465-08028	CLAMP	1	
7	91317-06020	BOLT	4	
8	90460-46206	CLAMP, hose	1	
9	5CH-W6401-00	AIR FILTER CASE COMP.	1	
10	90167-03X01	SCREW, tapping	3	
11	90167-03X00	SCREW, tapping	1	
12	5CH-E4450-00	ELEMENT ASSY AIR CLEANER	1	
13	5CH-E4412-00	CAP, cleaner comp.	1	
14	4GY-28386-00	HEAD	3	
15	5CH-E4462-00	SEAL	1	
16	5CH-F1621-00	FLAP	1	
17	5CH-E4437-00	DUCT	1	
18	5CH-E4453-00	JOINT AIR CLEANER 1	1	
19	5CH-E4454-00	JOINT AIR CLEANER 2	1	
20	5CH-E443E-00	PIPE, drain	1	
21	90467-14839	CLIP	1	
22	93210-05X00	O-RING	3	
23	5CH-F1736-00	NUT, plate	2	
24	5CH-F1736-00	NUT, plate	2	
25	90387-062M9	COLLAR	2	
26	9581L-06016	BOLT, fig.	2	
27	5CH-E445A-02	NET, flame arrester 2	1	
28	90460-51059	CLAMP, hose	1	




REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	90460-58124	CLAMP, hose	1	
30	90460-49293	CLAMP, hose	1	

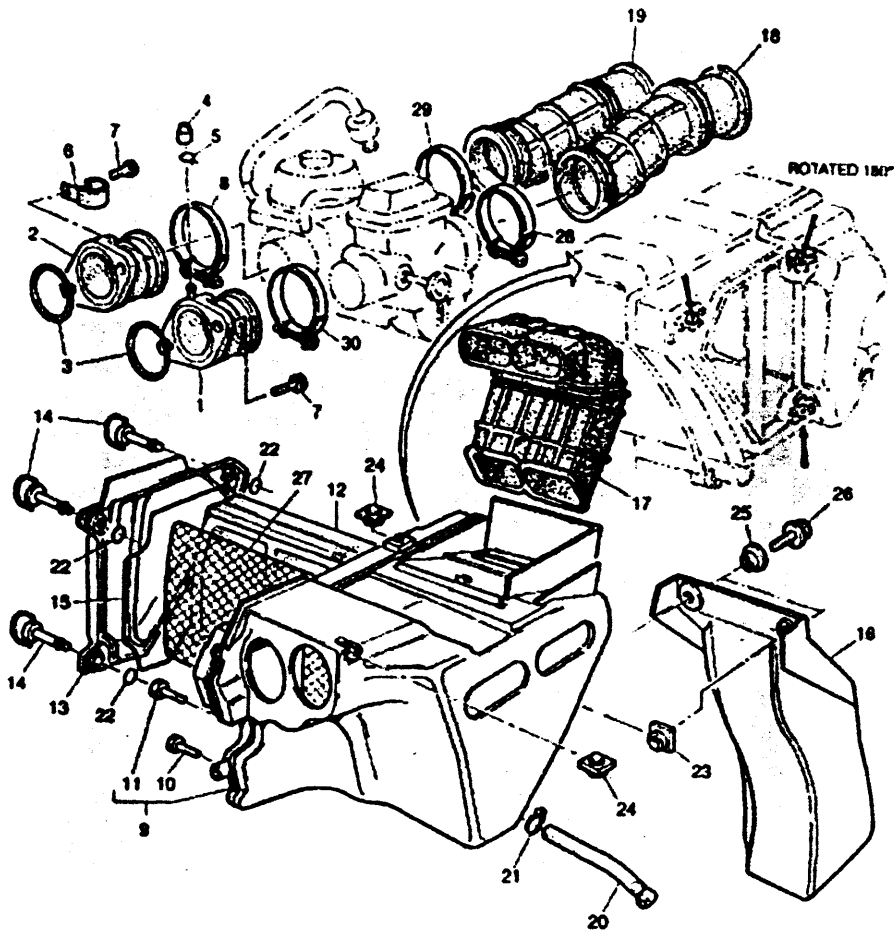

5CH1300-7072

FIG. 8 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-14301-02	CARBURETOR ASSY 1	1	
2	2JN-14198-00	- GASKET	1	
3	360-24512-00	- GASKET	1	
4	2JN-14385-00	- FLOAT	1	
5	689-14386-00	- PIN, float	1	
6	5Y1-14384-00	- GASKET, float chamber	1	
7	4PT-14325-00	- SCREW, pan head	1	
8	98501-04014	- SCREW, pan head	6	
9	92902-04100	- WASHER, spring	6	
10	1JK-14357-00	- COLLAR	1	
11	214-24535-00	- SCREW, lever fitting	2	
12	5Y1-14752-00	- SEAL	2	
13	2NX-14131-00	- SPRING, throttle valve	1	
14	5Y1-14356-00	- WASHER, spring	1	
15	5Y1-14358-10	- NUT	1	
16	5Y1-14536-00	- GASKET	1	
17	98501-04010	- SCREW, pan head	2	
18	5Y1-14216-00	- SCREW	1	
19	30X-14358-00	- NUT	1	
20	5Y1-14115-00	- PLUG, screw	1	
21	5CH-14149-00	- PIPE	2	
22	3GV-14940-00	- DIAPHRAGM, assy	1	
23	2JN-14293-00	- COVER 1	1	
24	5CH-14291-10	- BRACKET	1	
25	1JK-14397-00	- O-RING	1	
26	92990-04100	- WASHER, spring	1	
27	1JK-14286-00	- SPRING	1	
28	7FK-14394-00	- VALVE, drain	1	

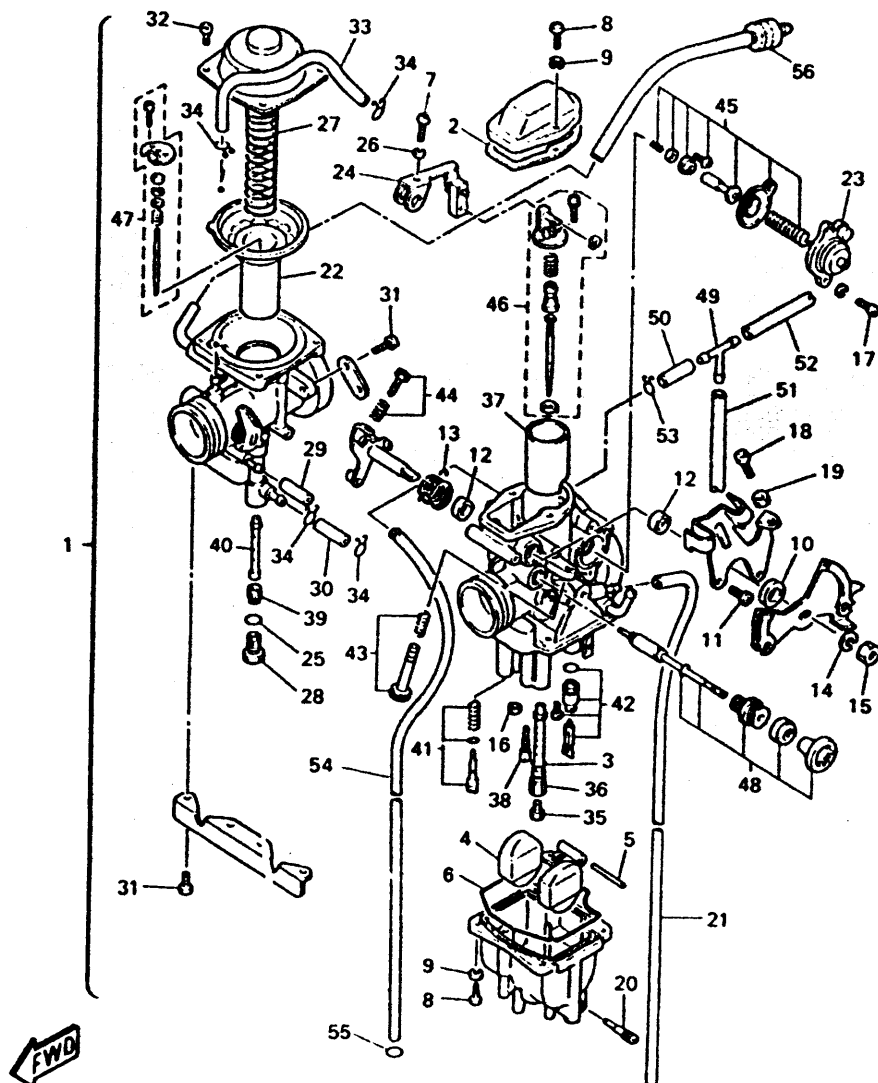

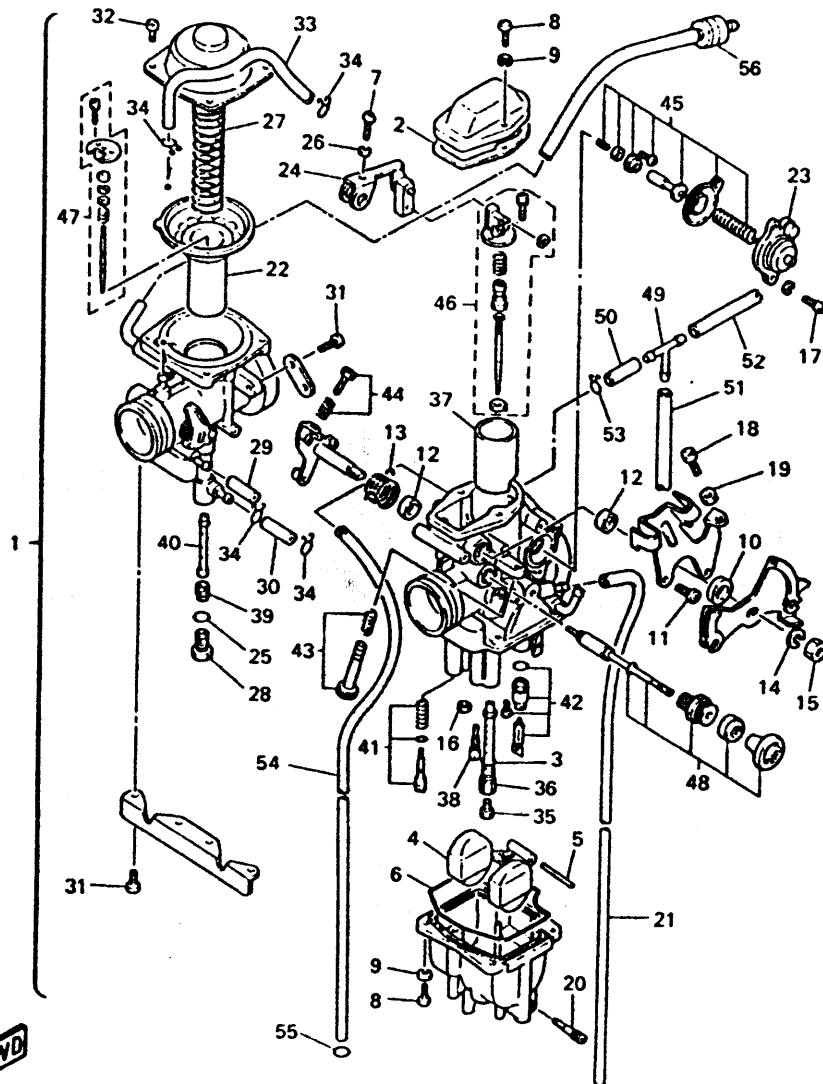


FIG. 8 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	5Y1-14349-00	· PIPE	1	
30	30X-14148-00	· PIPE	1	
31	98501-05010	· SCREW, pan head	6	
32	214-24535-00	· SCREW, lever fitting	4	
33	5Y1-14149-00	· PIPE	1	
34	5Y1-14159-00	· CLIP	4	
35	288-14343-75	· JET, main (#150)	1	UR. STD.
35	288-14343-73	· JET, main (#145)	1	
35	288-14343-78	· JET, main (#155)	1	
36	2KF-14341-00	· NOZZLE, main	1	
37	5CH-14313-40	· VALVE, throttle 2	1	
38	43F-14342-27	· JET, pilot (#54)	1	
39	30X-14343-65	· JET, main (#130)	1	
40	1JK-14355-00	· NOZZLE, main 2	1	
41	51Y-14105-00	· PILOT SCREW SET	1	
42	2JN-14107-00	· NEEDLE VALVE SET	1	
43	2NX-1490K-00	· STOP SCREW SET	1	
44	2NX-14103-00	· THROTTLE SCREW SET	1	
45	1JK-1490A-00	· DIAPHRAGM SET, 1	1	
46	5CH-1490J-10	· NEEDLE SET	1	
47	5CH-1490J-00	· NEEDLE SET	1	
48	2KF-1410A-00	· STARTER SET	1	
49	90413-07007	· WAY 3	1	
50	5CH-14148-00	· HOSE	1	
51	5CH-1414C-00	· HOSE	1	
52	3YF-14148-00	· PIPE	1	
53	3YF-14159-00	· CLIP	1	
54	5CH-E4197-00	PIPE	1	

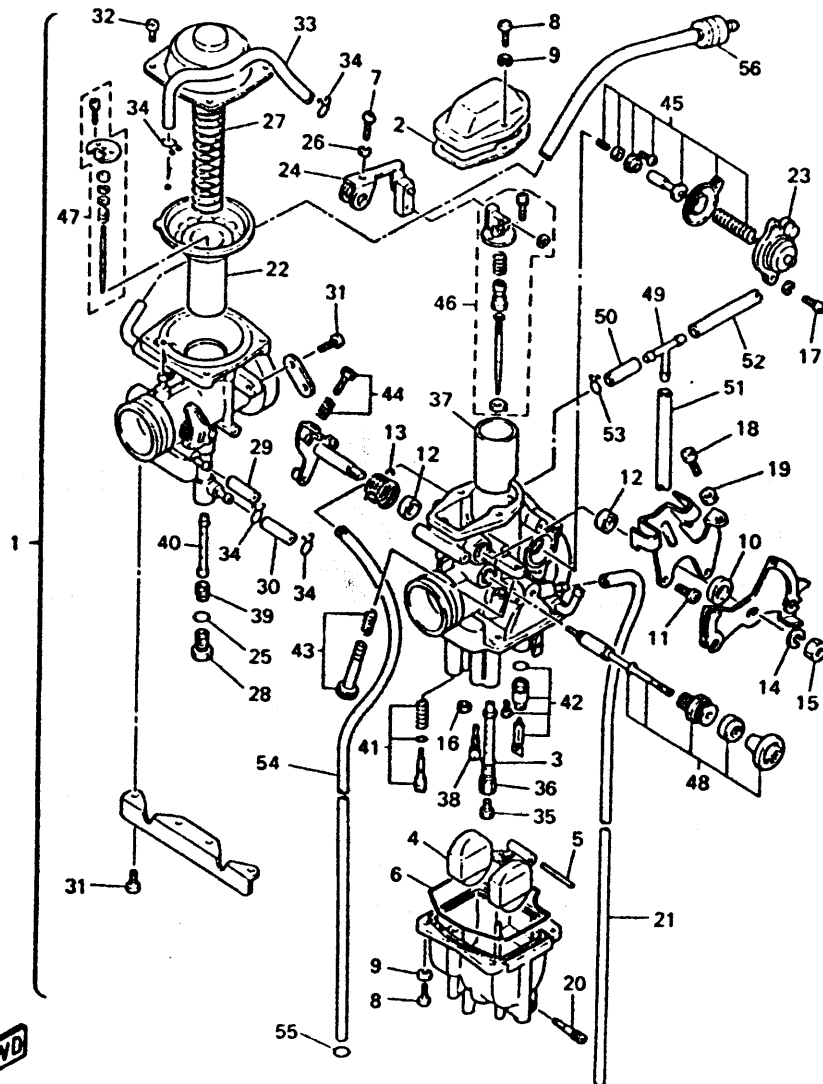


FIG. 8 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
55	93210-16200	O-RING		
56	3TD-14197-7	PIPE 1		

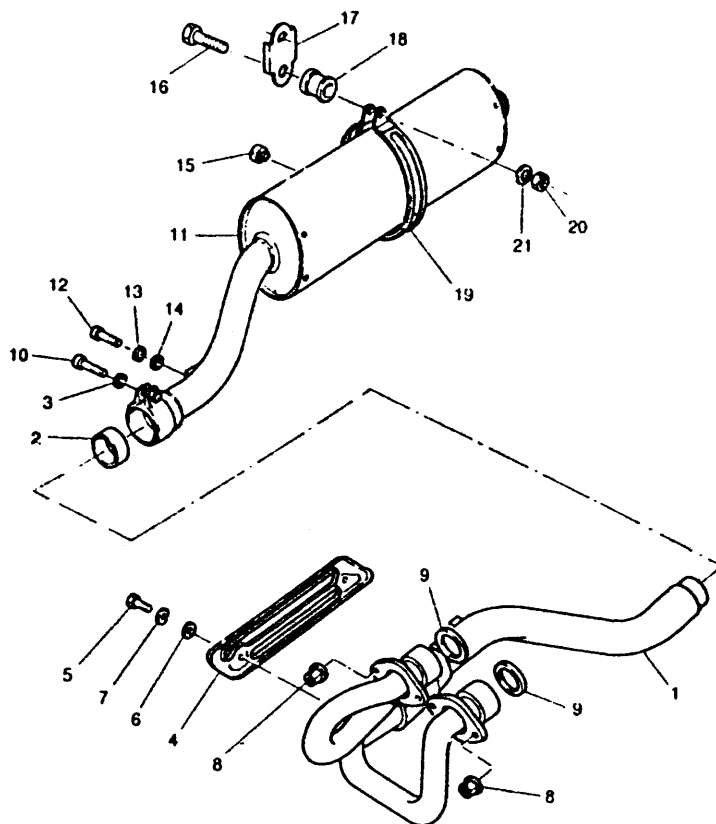


FIG. 9 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-E4611-00	EXHAUST PIPE ASSY 1	1	
2	3YF-14755-00	GASKET, silencer	1	
3	92990-08600	WASHER, plain	1	
4	5CH-E4628-00	PROTECTOR, exhaust pipe	1	
5	90164-06017	SCREW, tapping	2	
6	4BD-14766-00	WASHER	4	
7	90206-06090	WASHER, wave	2	
8	90179-06668	NUT	4	
9	3YF-14613-01	GASKET, exhaust pipe	2	
10	91380-08030	BOLT, hexagon socket head	1	
11	5CH-E4711-01	MUFFLER 1	1	
12	91380-08020	BOLT, hexagon socket head	1	
13	92990-08100	WASHER, spring	1	
14	5CH-E4766-00	WASHER, plain	1	
15	4GV-F7114-00	STOPPER, main stand	1	
16	9581L-08045	BOLT, fig.	1	
17	5CH-F1445-01	STAY, muffler 1	1	
18	5CH-E4763-00	SPACER	1	
19	5CH-E4782-00	BAND, silencer	1	
20	90185-08838	NUT, self locking	1	
21	9290L-08200	WASHER, plain	1	



5CH1300-7090

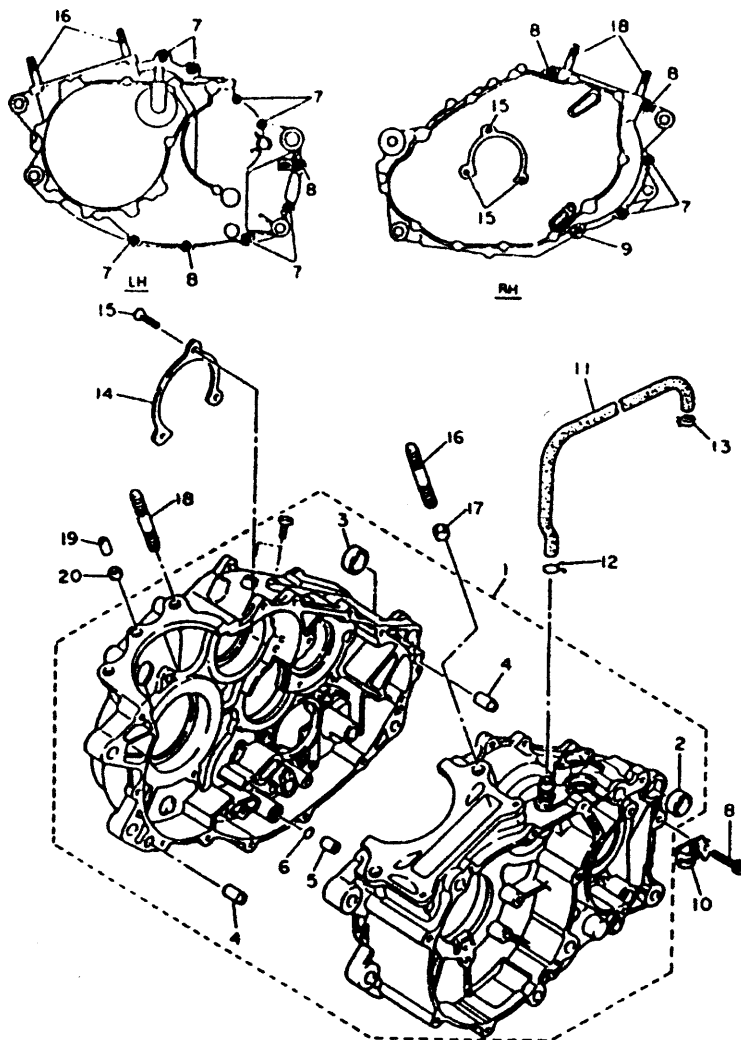


FIG. 10 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	4PT-15100-00	CRANKCASE ASSY	1	
2	90387-17783	· COLLAR	1	
3	90387-16782	· COLLAR	1	
4	99530-12016	· PIN, dowel	2	
5	99510-08016	· PIN, dowel	1	
6	93210-07135	· O-RING	1	
7	91317-06030	BOLT, hexagon socket head	9	
8	91317-06045	BOLT	4	
9	91317-06060	BOLT	1	
10	90465-08344	CLAMP	1	
11	5CH-E1166-00	PIPE, breather 1	1	
12	90467-14015	CLIP	1	
13	90467-17128	CLIP	1	
14	5Y1-15383-00	PLATE, bearing cover	1	
15	98707-06012	SCREW, flat head	3	
16	90116-10506	BOLT, stud	2	
17	99530-14016	PIN, dowel	2	
18	90116-10263	BOLT, stud	2	
19	99530-08016	PIN, dowel	1	
20	90430-08178	GASKET	1	



5CH1300-7101

C 3

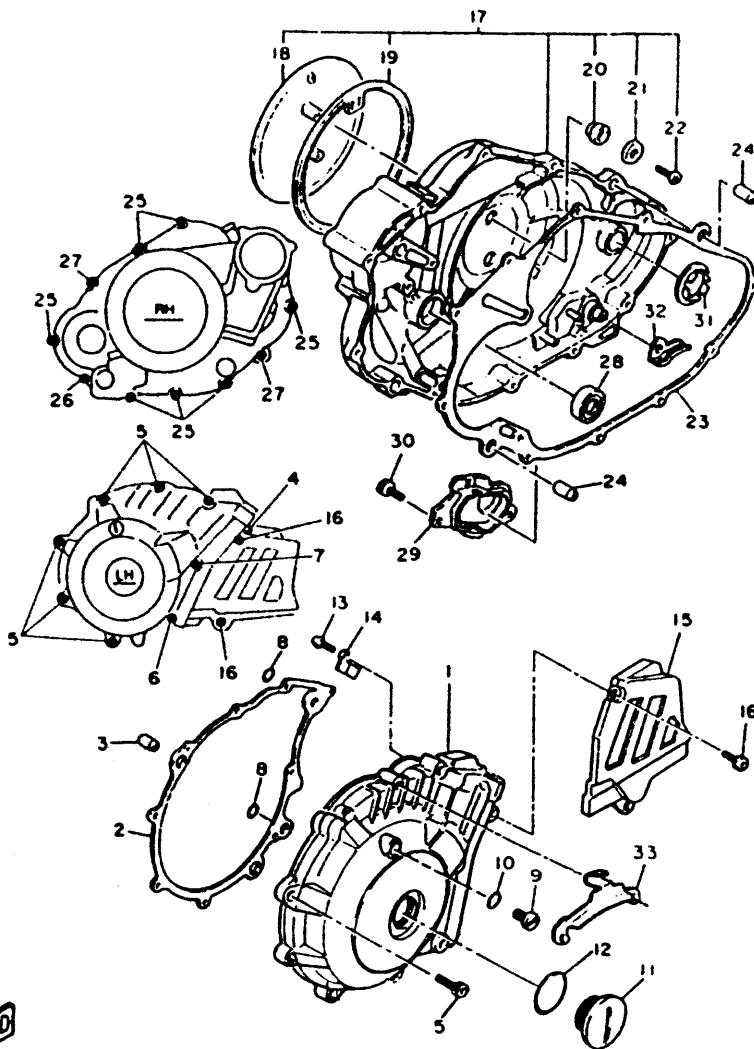


FIG. 11 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-15411-00	COVER, crankcase 1	1	UR. COMPETITION SILVER
2	4DW-15451-00	GASKET, crankcase cover 1	1	
3	99530-12016	PIN, dowel	2	
4	91317-06030	BOLT	1	
5	91317-06025	BOLT	6	
6	91317-06050	BOLT	1	
7	91317-06050	BOLT	1	
8	93210-13361	O-RING	2	
9	90340-08014	PLUG, straight screw	1	UR. COMPETITION SILVER
10	90430-08143	O-RING	1	
11	90340-36076	PLUG, straight screw	1	UR. COMPETITION SILVER
12	93210-357A3	O-RING	1	
13	98507-06012	SCREW, pan head	1	
14	90462-16102	CLAMP	1	
15	5CH-E5421-10	COVER, crankcase, 2	1	UR. COMPETITION SILVER
16	9131M-06016	BOLT	2	
17	4PT-15430-00	CRANKCASE COVER ASSY 3	1	UR. COMPETITION SILVER
18	4PT-15418-00	- COVER, chain case	1	
19	1JK-15449-00	- RING, rubber	1	
20	1JK-15486-00	- GROMMET	2	
21	90209-05279	- WASHER	2	
22	98507-05010	- SCREW, pan head	2	
23	4DW-15462-00	GASKET, crankcase cover 3	1	
24	99530-12016	PIN, dowel	2	
25	91317-06025	BOLT	7	
26	91317-06030	BOLT, hexagon socket head	1	
27	91317-06035	BOLT	2	
28	93101-14092	OIL SEAL (S7-14-25-5.5-1-HS)	1	



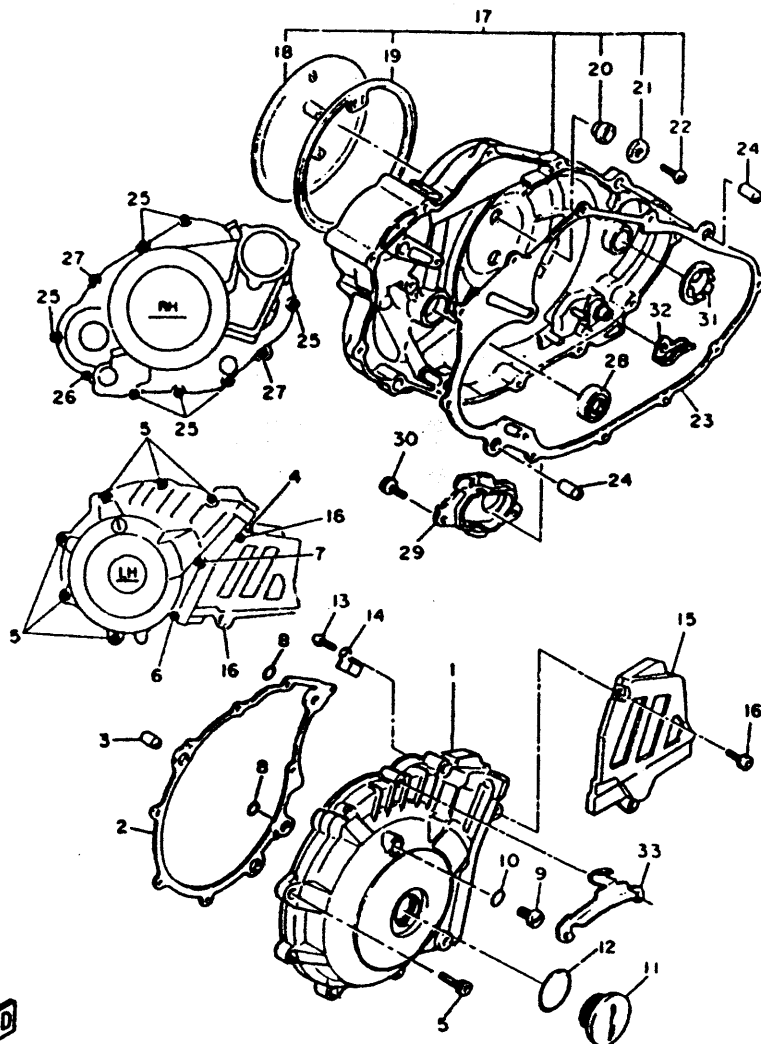


FIG. 11 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	1JK-15417-00	COVER, cap	1	
30	91317-06016	BOLT	2	
31	5Y1-15645-00	SHIM, kick shaft	1	
32	5Y1-1562F-01	PLATE, decompression	1	
33	4GV-E5441-00	HOLDER, clutch hub	1	




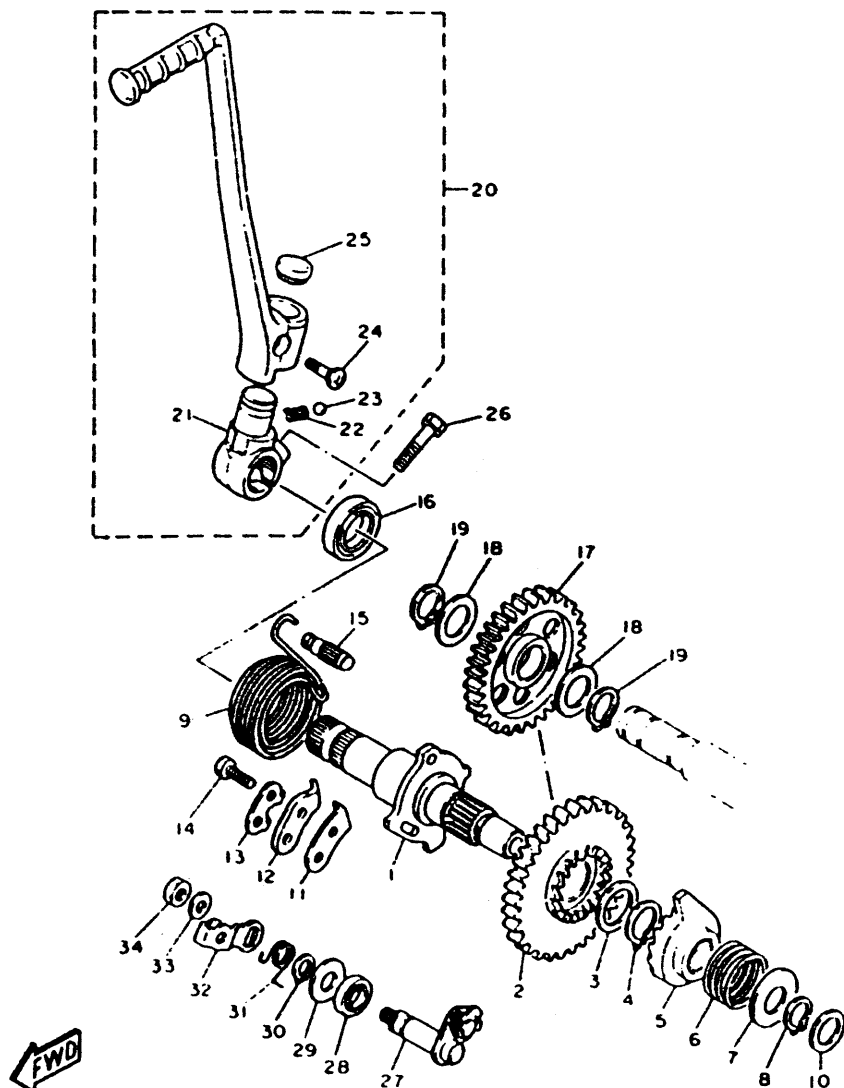


FIG. 12 STARTER

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5Y1-15660-01	KICK AXLE ASSY	1	
2	34K-15641-00	GEAR, kick (35T)	1	
3	90201-20685	WASHER, plate (0.5T)	1	
4	93410-20038	CIRCLIP	1	
5	5Y1-15671-01	WHEEL, ratchet	1	
6	90501-16107	SPRING, compression	1	
7	90201-155K6	WASHER, plate	1	
8	99009-15400	CIRCLIP	1	
9	90508-32529	SPRING, torsion	1	
10	90201-15701	WASHER, plate (1.0T)	1	
11	2NX-15668-00	STOPPER	1	
12	2NX-15674-00	GUIDE, ratchet wheel	1	
13	214-15686-00	WASHER, lock	1	
14	97027-06016	BOLT	2	
15	248-15668-00	STOPPER	1	
16	93102-20108	OIL SEAL	1	
17	5Y1-15651-01	GEAR, kick idle	1	
18	90201-20276	WASHER, plate (1.0T)	2	
19	99009-20400	CIRCLIP	2	
20	5Y1-15620-02	KICK CRANK ASSY	1	
21	5Y1-15621-01	BOSS, kick crank	1	
22	90501-12081	SPRING, compression	1	
23	93507-32009	BALL	1	
24	90152-06010	SCREW, countersunk	1	
25	90336-18038	PLUG, taper	1	
26	9701L-08030	BOLT	1	
27	3Y1-1561A-02	DECOMPRESSION LEVER ASSY	1	
28	93102-10207	OIL SEAL (SD 10-21-5 HS)	1	

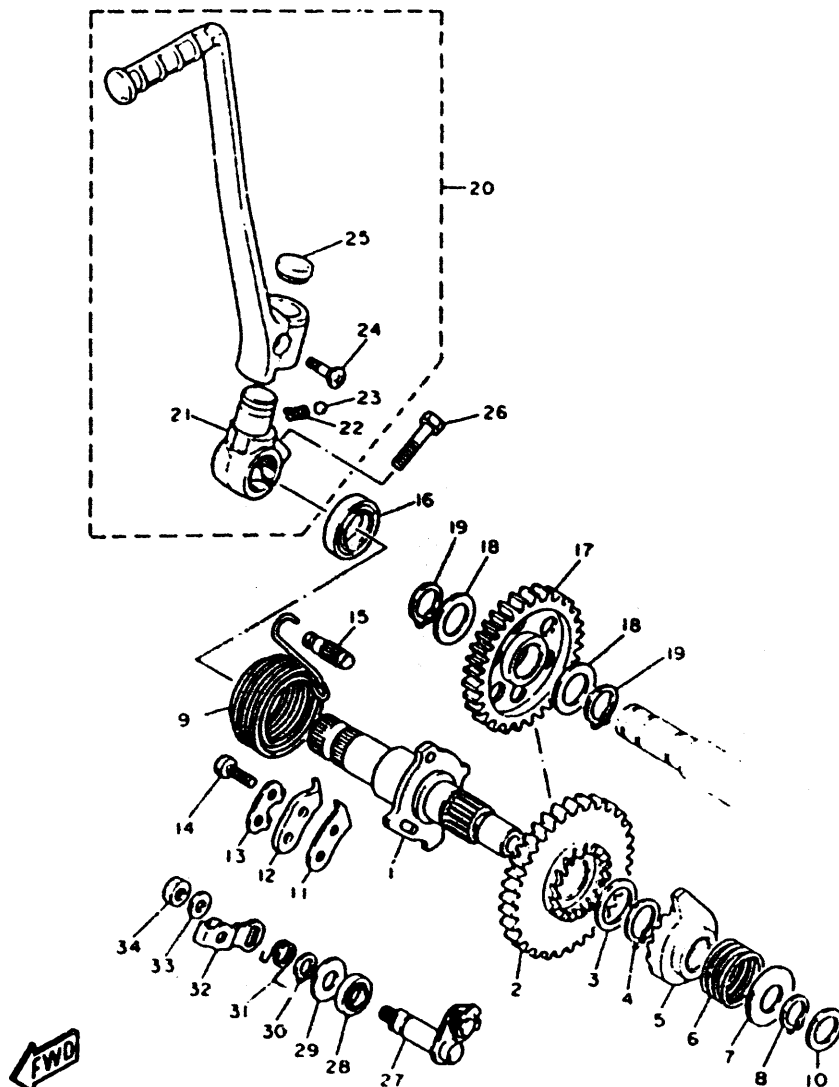

2KF300-7120

FIG. 12 STARTER

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
29	90201-10135	WASHER, plate	1	
30	99009-10400	CIRCLIP	1	
31	90508-14524	SPRING, torsion	1	
32	5Y1-1561G-00	LEVER, cable	1	
33	92907-06600	WASHER, plate	1	
34	95317-06700	NUT	1	

C 7



2RW381-7130

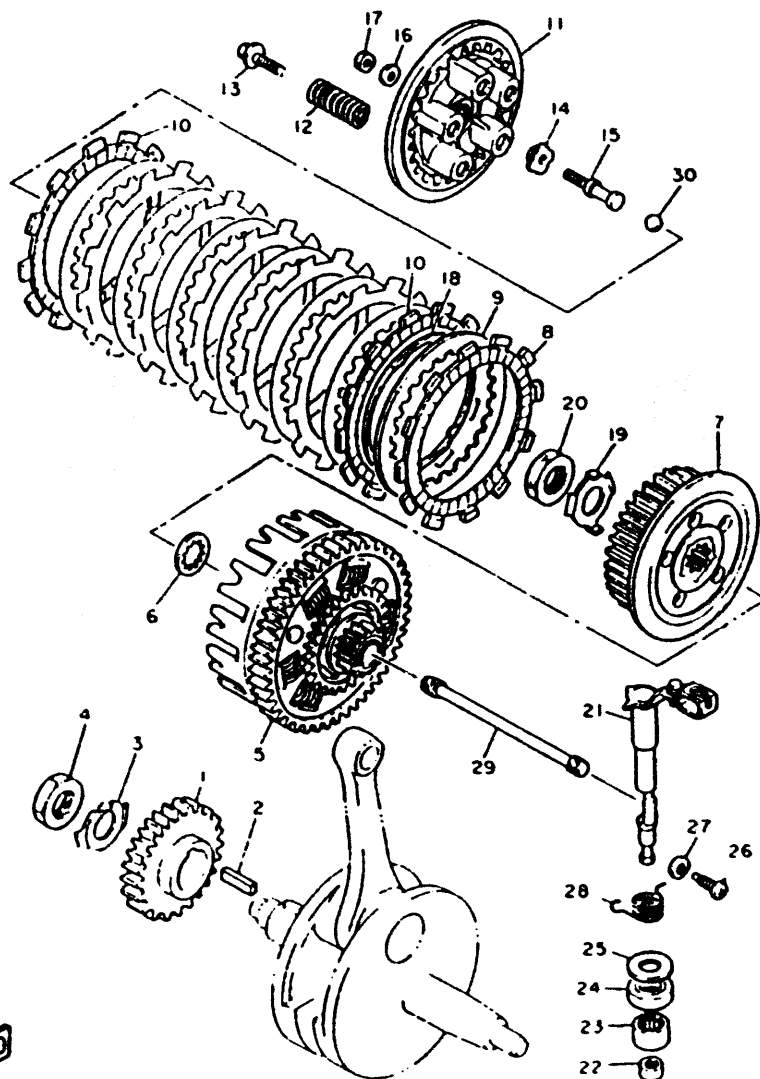


FIG. 13 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	34K-16111-00	GEAR, primary drive (31T)	1	
2	90282-07042	KEY, straight	1	
3	90215-20197	WASHER, lock	1	
4	90170-20274	NUT	1	
5	34K-16150-00	PRIMARY DRIVEN GEAR COMP.	1	
6	2JN-16154-00	PLATE, thrust 1	1	
7	2JN-16371-00	BOSS, clutch	1	
8	5Y1-16321-00	PLATE, friction	6	
9	30X-16325-00	PLATE, clutch 2	7	
10	5Y1-16331-01	PLATE, friction 2	2	
11	5Y1-16351-00	PLATE, pressure 1	1	
12	90501-26148	SPRING, compression	5	
13	90159-06016	SCREW, with washer	5	
14	1W1-16358-01	PLATE, push	1	
15	5Y1-16358-00	ROD, push 1	1	
16	92907-06200	WASHER, plain	1	
17		NUT	1	
18		SPRING, clutch boss	1	
19		WASHER, lock	1	
20		NUT	1	
21	46V-16380-01	PUSH LEVER ASSY	1	
22	93317-11020	BEARING, cylindrical	1	
23	93315-11720	BEARING, cylindrical	1	
24	93102-17148	OIL SEAL	1	
25	90201-17327	WASHER, plate	1	
26	90149-08067	SCREW	1	
27	90430-08119	GASKET	1	
28	90508-144A3	SPRING, torsion	1	

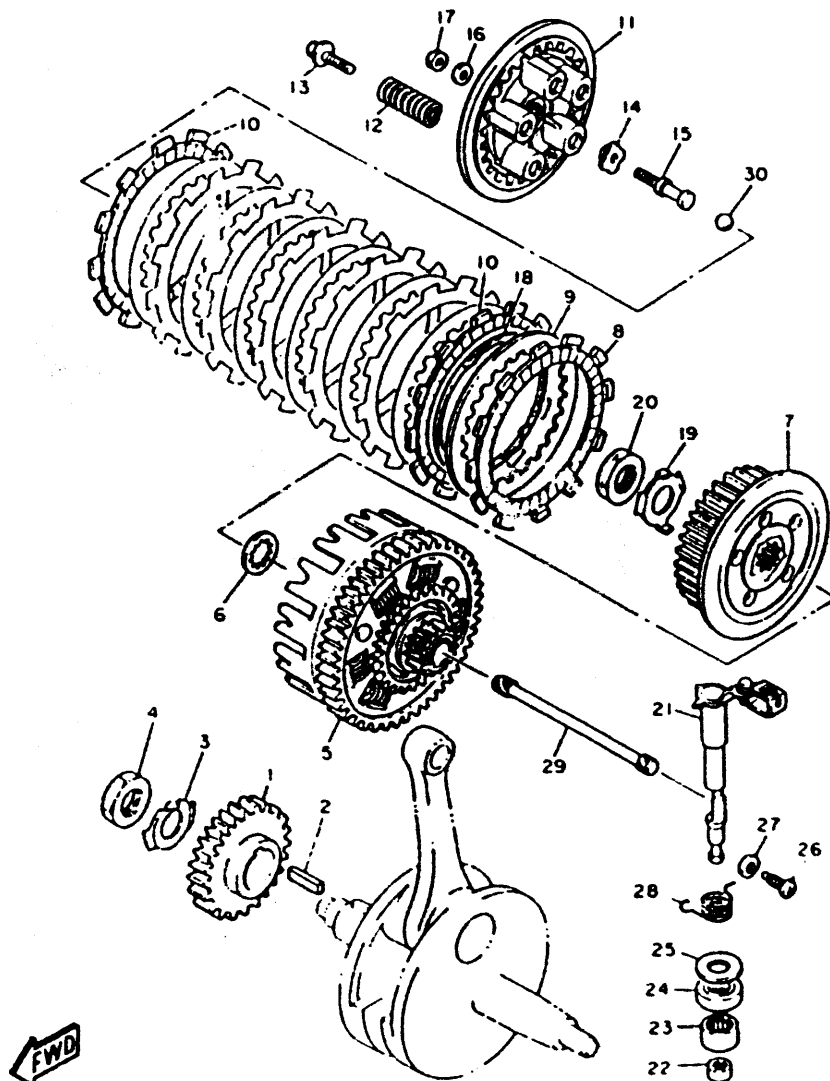


FIG. 13 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	5Y1-16357-00	ROD, push 2	1	
30	93515-32029	BALL	1	

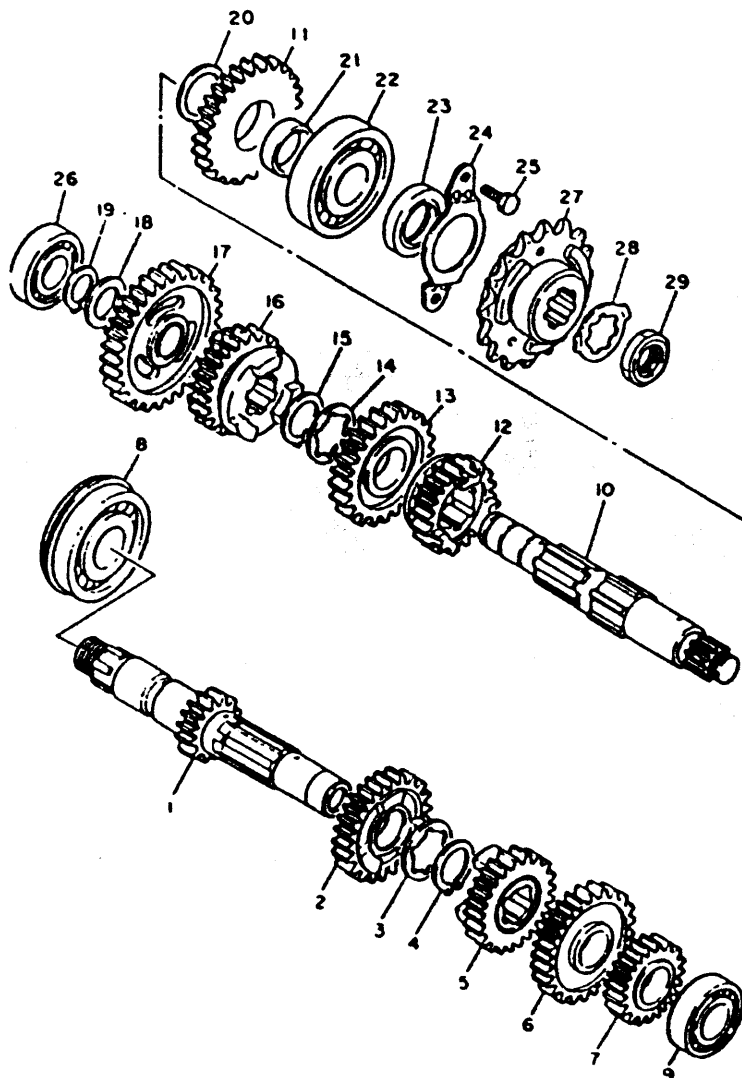


FIG. 14 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	2NX-17411-00	AXLE, main (13T)	1	
2	34K-17141-00	GEAR, 4th pinion (22T)	1	
3	90209-22191	WASHER	1	
4	93440-25084	CIRCLIP	1	
5	1VJ-17131-00	GEAR, 3rd pinion (20T)	1	
6	3YP-17151-01	GEAR, 5th pinion (24T)	1	
7	34K-17121-01	GEAR, 2nd pinion (17T)	1	
8	93306-30540	BEARING (6305NRX1C3)	1	
9	93306-00431	BEARING	1	
10	3YP-17402-00	DRIVE AXLE ASSY (22T)	1	
11	3YP-17221-00	GEAR, 2nd wheel (27T)	1	
12	3YP-17251-01	GEAR, 5th wheel (19T)	1	
13	1VJ-17231-00	GEAR, 3rd wheel (24T)	1	
14	90209-22191	WASHER	1	
15	93440-25084	CIRCLIP	1	
16	55U-17241-00	GEAR, 4th wheel (21T)	1	
17	34K-17211-00	GEAR, 1st wheel (30T)	1	
18	90201-20276	WASHER, plate (1.0T)	1	
19	99009-20400	CIRCLIP	1	
20	90201-275P2	WASHER, plate	1	
21	90560-25376	SPACER	1	
22	93306-30535	BEARING	1	
23	93102-25226	OIL SEAL	1	
24	5Y1-17471-00	PLATE, cover	1	
25	97027-06014	BOLT	2	
26	93306-00426	BEARING	1	
27	2NX-17460-01	SPROCKET, drive (15T)	1	
28	90215-23265	WASHER, lock	1	

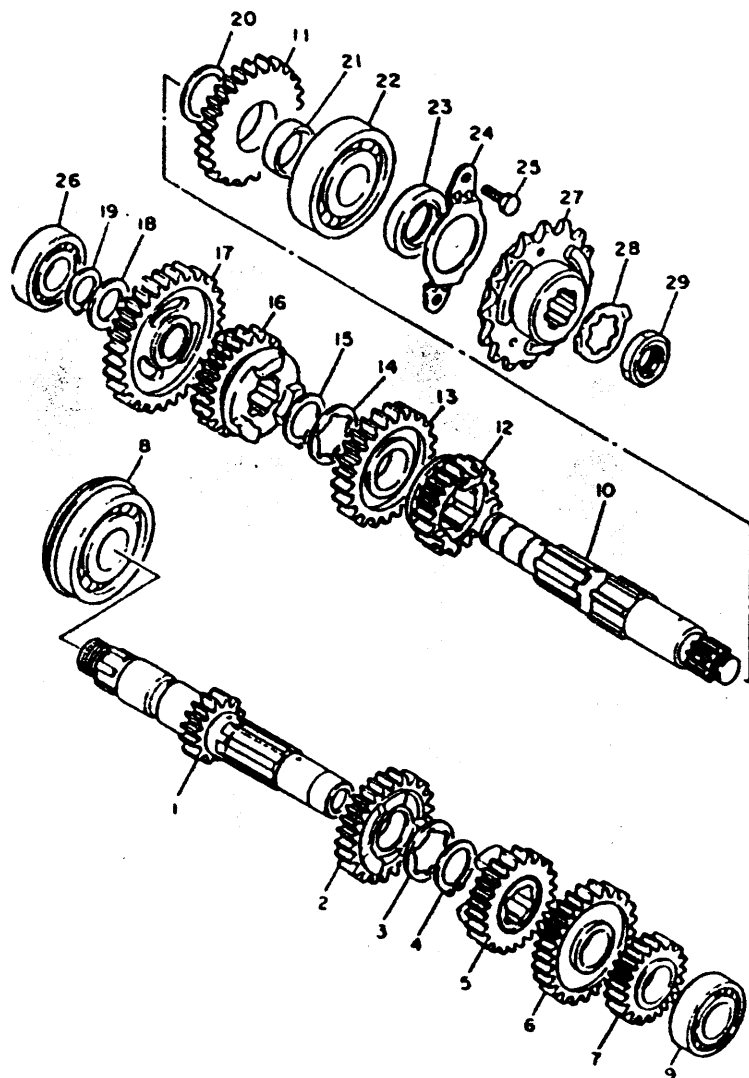


FIG. 14 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	90179-18552	NUT	1	

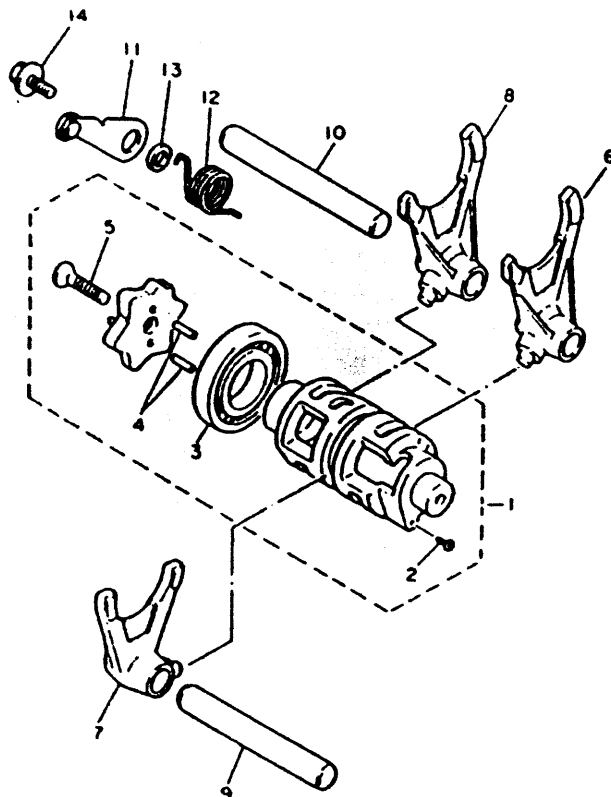


FIG. 15 SHIFT CAM. FORK

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	3YF-18540-00	SHIFT CAM ASSY	1	
2	136-18542-00	• POINT, neutral	1	
3	93316-00501	• BEARING, cylindrical	1	
4	93604-10011	• PIN, dowel	2	
5	90151-06017	• SCREW, countersunk	1	
6	4PT-18511-00	FORK, shift 1	1	
7	4PT-18512-00	FORK, shift 2	1	
8	4PT-18513-00	FORK, shift 3	1	
9	3YF-18531-00	BAR, shift fork guide 1	1	
10	3XV-18535-00	BAR, shift fork guide 2	1	
11	2KF-18140-00	STOPPER LEVER ASSY	1	
12	90508-26691	SPRING, torsion	1	
13	90387-063F7	COLLAR	1	
14	90159-06078	SCREW, with washer	1	



2KF300-7150

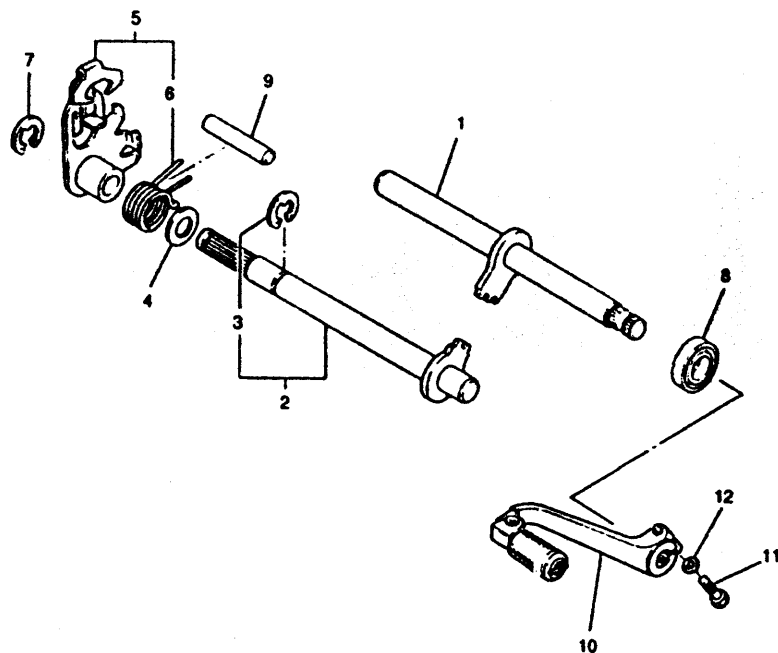


FIG. 16 SHIFT SHAFT

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	43F-18102-02	SHIFT SHAFT ASSY 2	1	
2	5Y1-18101-02	SHIFT SHAFT ASSY	1	
3	99001-10600	- CIRCLIP	1	
4	90201-12474	WASHER, plate	1	
5	34K-18120-00	SHIFT LEVER ASSY	1	
6	90508-29629	- SPRING, torsion	1	
7	99001-09600	CIRCLIP	1	
8	93102-12106	SEAL	1	
9	93608-33046	PIN, dowel	1	
10	34K-18110-02	SHIFT PEDAL ASSY	1	
11	9701L-06025	BOLT, hex.	1	
12	9290L-06600	WASHER, plain	1	



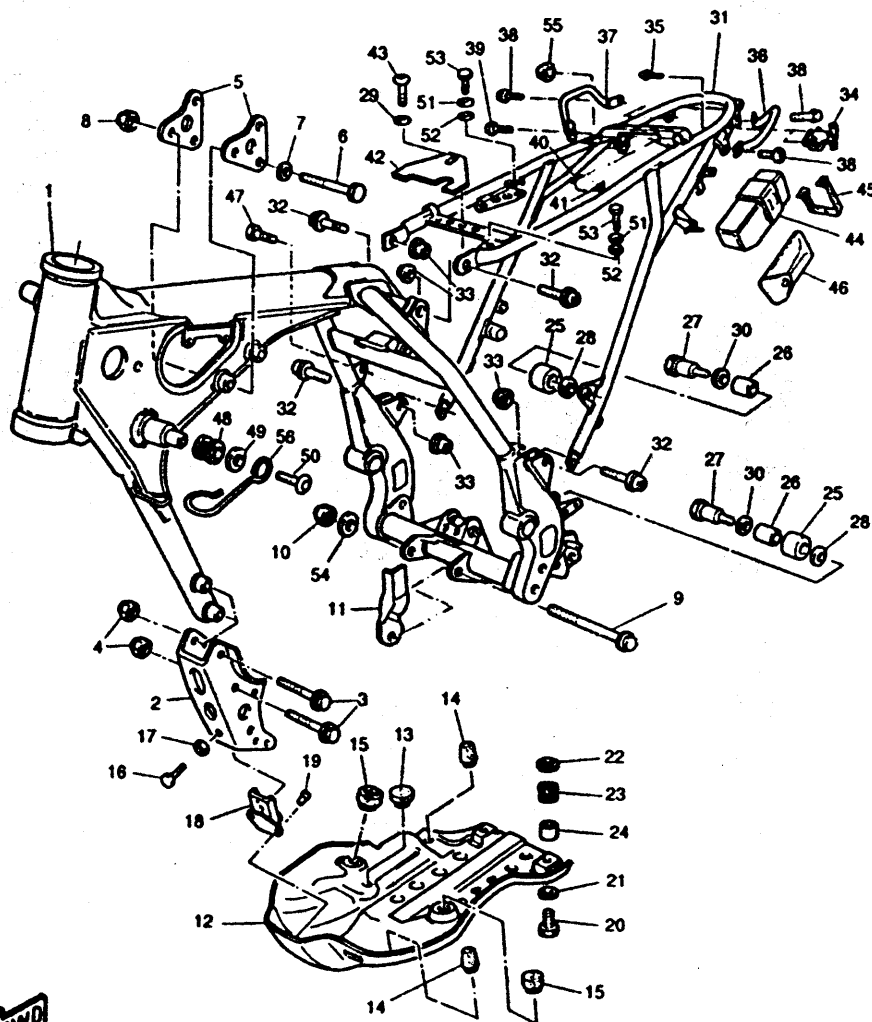


FIG. 17 FRAME

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F1110-00-T9	FRAME COMP.	1	UR. COMPETITION SILVER
2	4GV-F1316-00-T9	STAY, E/G	1	UR. COMPETITION SILVER
3	95817-10070	BOLT, flange	4	
4	95607-10200	NUT, U	4	
5	4GV-F1315-00	STAY, E/G 2	1	
6	97017-10080	BOLT, hex.	3	
7	92907-10100	WASHER, spring	3	
8	95607-10200	NUT, self-locking	3	
9	95817-10110	BOLT, flg.	1	
10	95607-10200	NUT, self-locking	1	
11	4GV-F176E-00	PLATE	1	
12	5CH-F1471-00	PROTECTOR, E/G	1	
13	2J5-21732-00	SEAL 1	1	
14	4N0-27114-00	STOPPER, main stand	2	
15	34L-21435-00	DAMPER, rubber	2	
16	97007-08018	BOLT, hex.	1	
17	92907-08100	WASHER, spring	1	
18	34L-21488-00	DAMPER, 2	1	
19	90267-48079	RIVET, blind	2	
20	97007-06020	BOLT, hex.	2	
21	92907-06100	WASHER, spring	2	
22	90201-06X04	WASHER, plate	2	
23	90480-14229	GROMMET	2	
24	90387-060A7	COLLAR	2	
25	30X-22178-00	TENSIONER	2	
26	4V4-22184-00	BUSH	2	
27	90109-08705	BOLT	2	
28	90201-13202	WASHER, plate	2	



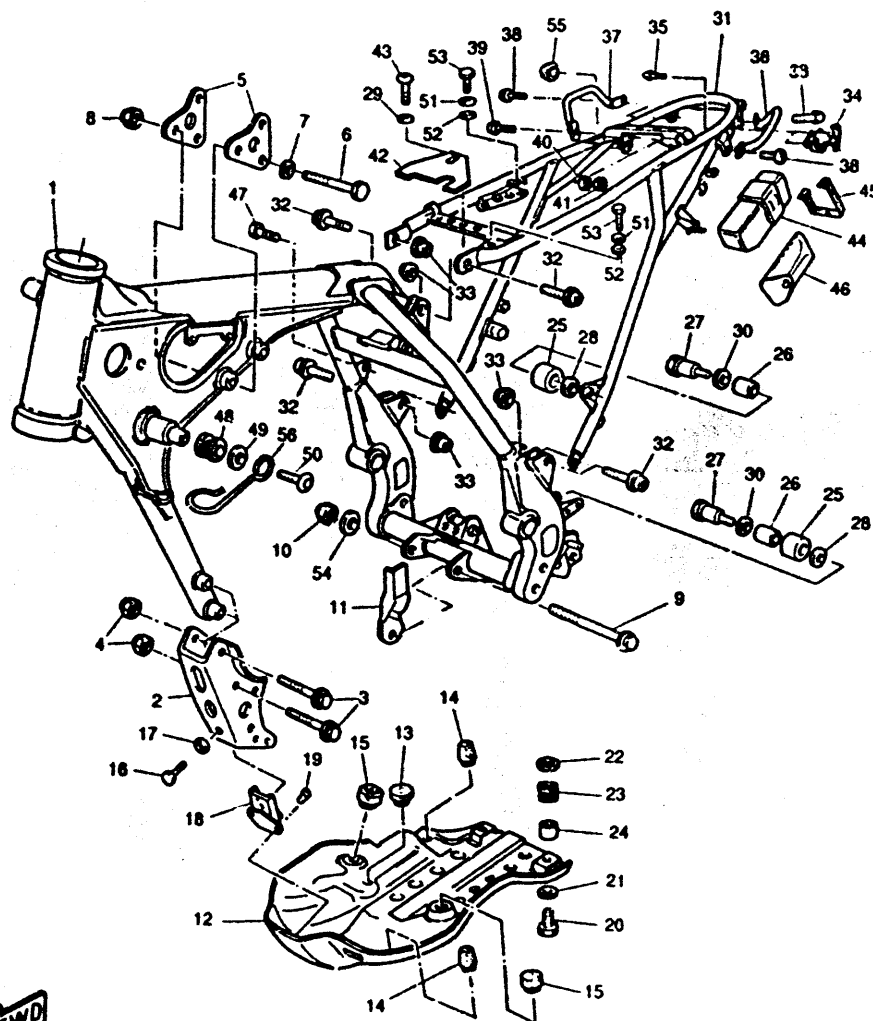


FIG. 17 FRAME

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	9290L-06200	WASHER, plain	1	
30	90201-08753	WASHER, plate	2	
31	5CH-F1190-00-T9	RR. FRAME COMP.	1	UR. COMPETITION SILVER
32	9G109-087F1	BOLT	4	
33	90179-08X03	NUT, fig.	4	
34	5CH-F1308-00	HELPER, hanger assy	1	
35	5CH-H252V-00	SCREW, special	2	
36	5CH-F127A-00-T9	HANDLE, standing	1	UR. COMPETITION SILVER
37	5CH-F1275-00-T9	STAY, rear	1	UR. COMPETITION SILVER
38	90111-08808	BOLT	3	
39	9581L-08025	BOLT, flange	1	
40	9290L-08200	WASHER, plain	1	
41	90185-08838	NUT, self-locking	1	
42	5CH-F1397-10	GUIDE, wire harness	1	
43	9581L-06012	BOLT, fig.	1	
44	4GY-21107-00	TOOL, box comp.	1	
45	120-82131-00	BAND	1	
46	5CH-F8100-01	TOOL, kit	1	
47	9581L-06016	BOLT, fig.	1	
48	3SH-F4181-00	DAMPER, locating 1	2	
49	9C201-098E7	WASHER, plate	2	
50	9201N-08020	BOLT, button head	2	
51	9290L-06100	WASHER, spring	2	
52	9290L-05200	WASHER, plain	2	
53	9701L-06016	BOLT, hex.	2	
54	90204-10803	WASHER, spring	1	
55	5CH-F1717-00	DAMPER, side cover	1	
56	5CH-F1161-00	HOLDER, wire	1	



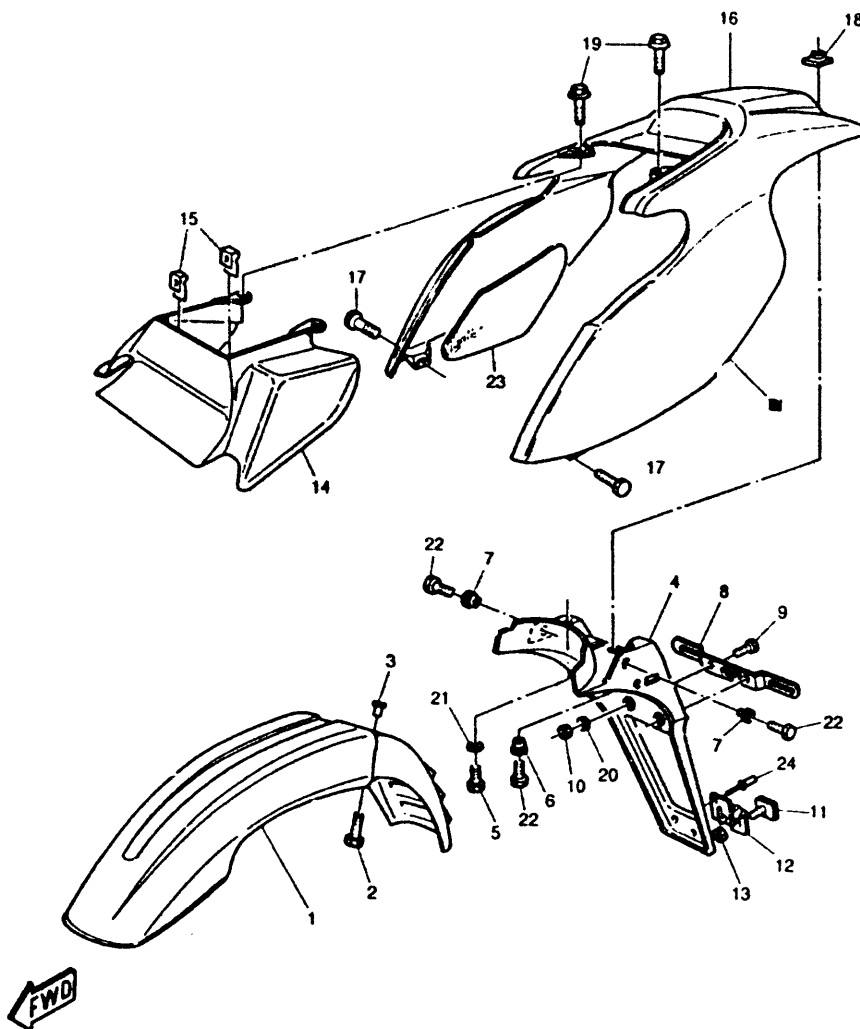


FIG. 18 FENDER

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F1511-10	FENDER, front	1	UR.DPBSE
2	90119-06097	BOLT, with washer	4	
3	90387-062M9	COLLAR	4	
4	5CH-F1685-01	BRACKET, licence	1	
5	9701L-06020	BOLT, hex.	1	
6	90387-062M9	COLLAR	1	
7	90387-06X01	COLLAR	2	
8	3SH-H4551-00	BRACKET, licence	1	
9	9581M-06020	BOLT, flange	2	
10	9571L-06300	NUT, nylon	2	
11	5CH-H5130-00	REAR REFLECTOR ASSY	1	
12	5CH-H5132-00	BRACKET, reflector	1	
13	90185-06837	NUT, self-locking	1	
14	5CH-F219X-00	COVER	1	
15	5CH-F177L-00	PLATE, spring	2	
16	5CH-F1610-10	REAR FENDER COMP.	1	UR.DPBSE
17	9581L-06012	BOLT, flg.	2	
18	5CH-F1736-00	NUT, plate	1	
19	9581L-06016	BOLT, flg.	2	
20	9290L-06200	WASHER, plain	2	
21	9290L-06200	WASHER, plain	1	
22	9131L-06016	BOLT, hexagon socket head	3	
23	5CH-F174A-00	INSULATOR, cover side	1	
24	90267-48X00	RIVET, blind	2	

NOTE: ■ COLORED - ROUGH MATERIAL

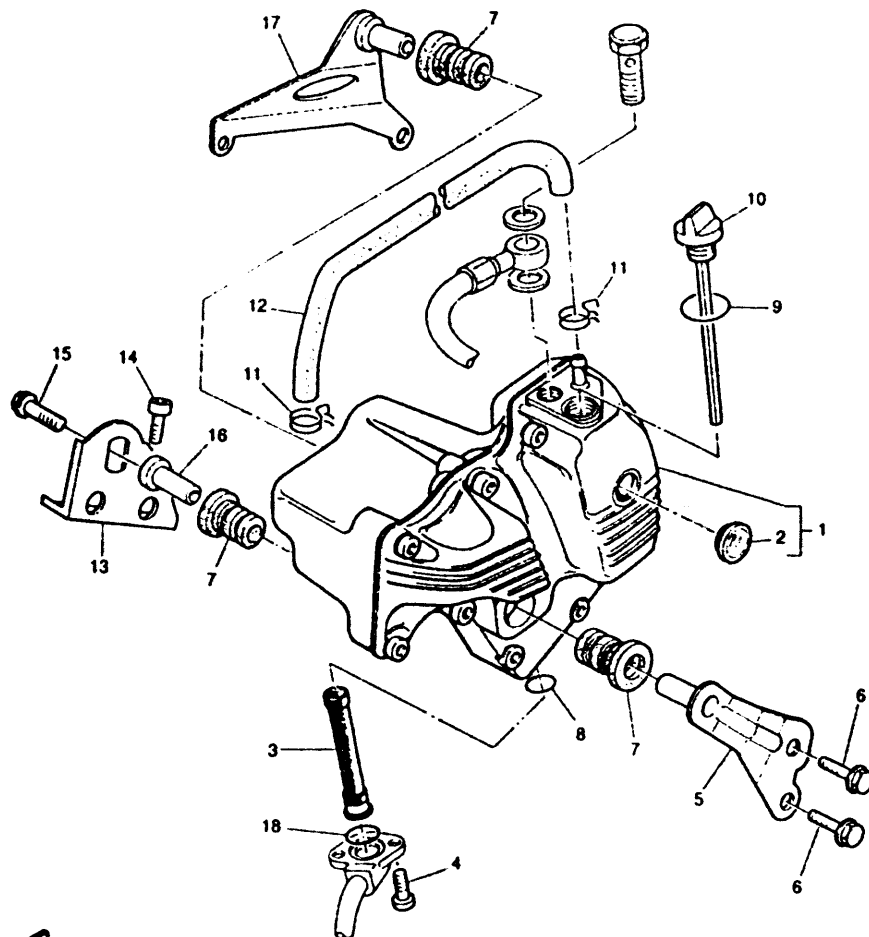


FIG. 19 OIL TANK

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F1750-00-38	OIL TANK ASSY	1	UR. CLEAR
2	2H7-15361-00	GAUGE, level	1	
3	5CH-F1756-00	NET, filter	1	
4	9131M-06016	BOLT, hexagon socket head	2	
5	5CH-F172E-00	STAY, side cover 1	1	
6	9581L-06012	BOLT, flg.	2	
7	4SU-F1773-00	GROMMET	3	
8	93210-16X01	O-RING	1	
9	93210-218D5	O-RING	1	
10	4SU-F1761-00	GAUGE, level	1	
11	90467-12X01	CLIP	2	
12	5CH-F1745-00	PIPE, oil tank breather	1	
13	5CH-F174E-00	STAY, side cover 2	1	
14	9131L-06012	BOLT, hexagon socket head	2	
15	9581M-06020	BOLT, flg.	1	
16	5CH-F1769-00	COLLAR, union screw	1	
17	5CH-F175V-00	BRACKET 3	1	
18	93210-100A9	O-RING	1	



5CH1300-7191

D 3

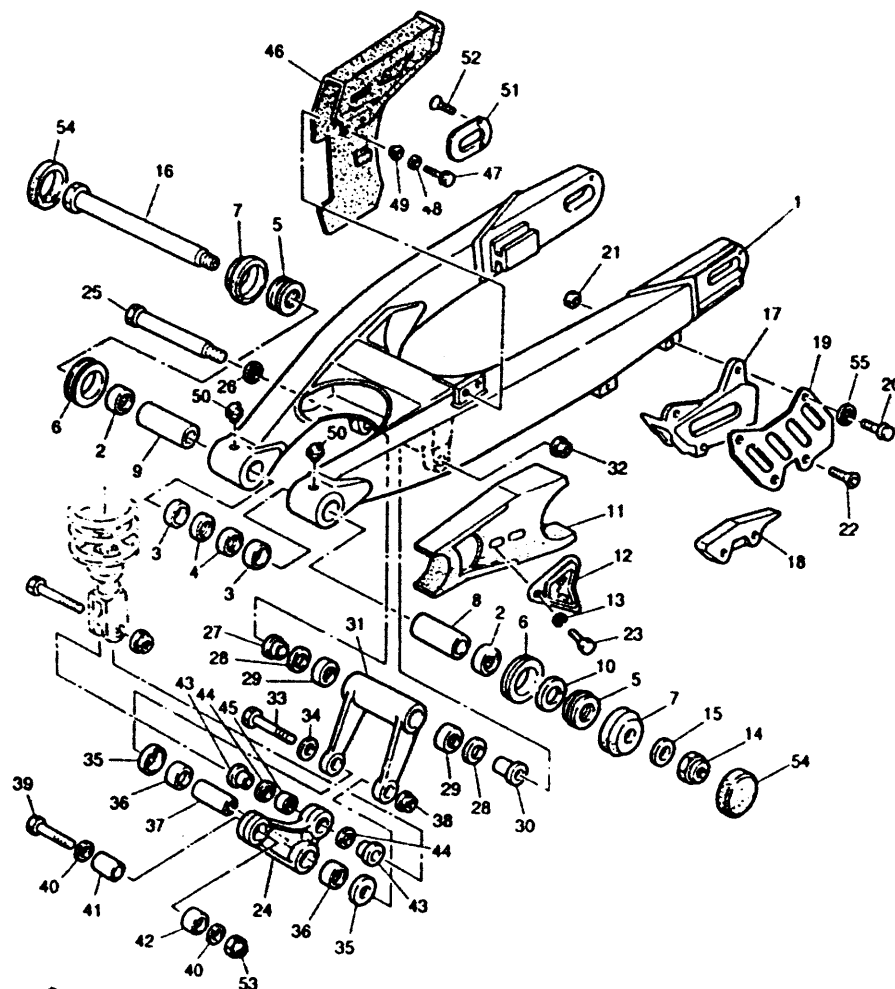


FIG. 20 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F2110-00	RR. ARM COMP.	1	
2	93317-22237	BEARING, cylindrical	2	
3	90380-22111	BUSH	2	
4	93106-22019	OIL, seal (DC 22-28-8)	2	
5	93342-22208	BEARING	2	
6	93108-35004	OIL, seal (35-41-8)	2	
7	3R4-22129-00	COVER, thrust 2	2	
8	1VJ-22123-00	BUSH, 1	1	
9	90380-16127	BUSH, solid	1	
10	156-22127-00	SHIM	2	UN
11	4GV-F2151-00	SEAL, guard	1	
12	4GV-F2156-00	WASHER, plate	1	
13	9290L-06100	WASHER, spring	2	
14	90185-14070	NUT, self-locking	1	
15	90201-15238	WASHER, plate	1	
16	1VJ-22141-00	SHAFT, pivot	1	
17	3XP-22199-03	SUPPORT, chain	1	
18	3JD-22147-00	PROTECTOR, chain	1	
19	3JD-22128-00	COVER, thrust 1	1	
20	9701L-06030	BOLT, hexagon	2	
21	90185-06830	NUT, self-locking	2	
22	90151-06805	SCREW, countersunk	2	
23	95024-06020	BOLT, flange	2	
24	5CH-F217A-00	ARM, relay	1	
25	90109-10469	BOLT	1	
26	90201-14222	WASHER, plate	1	
27	90387-147G7	COLLAR	1	
28	93109-20076	OIL, seal	2	

FWD

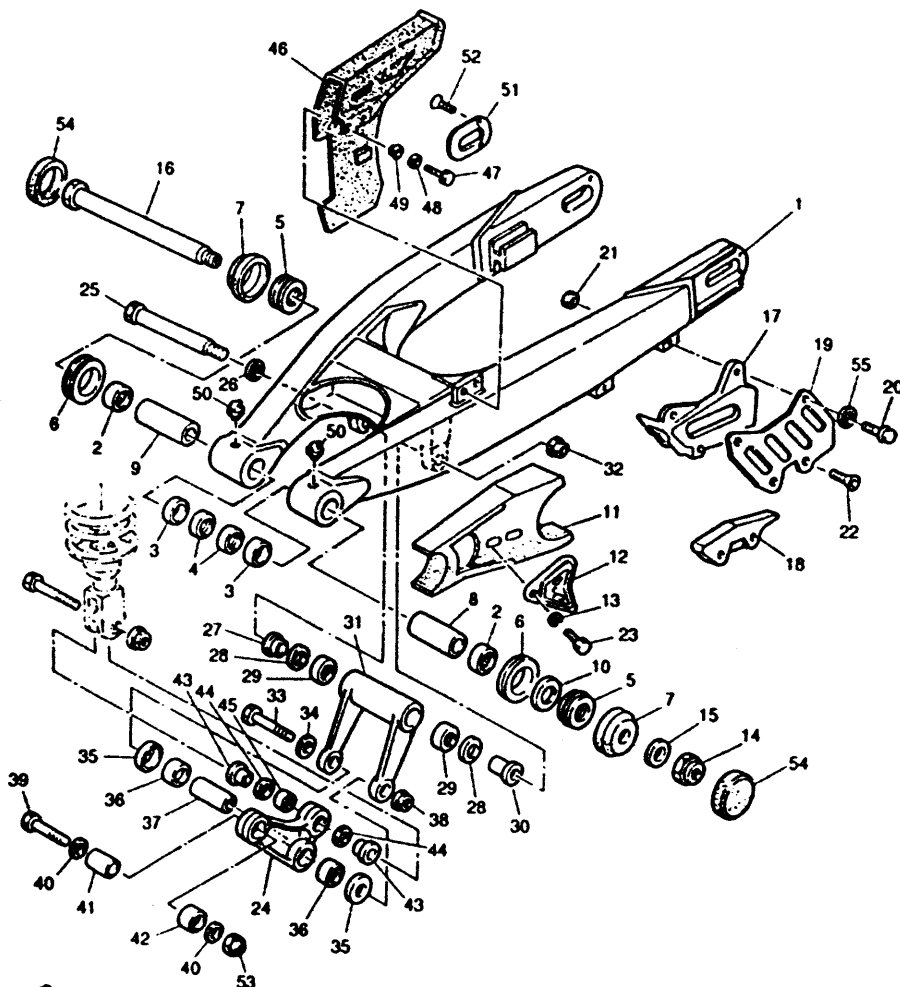


FIG. 20 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	93315-32053	BEARING, cylindrical	2	
30	90387-1412W	COLLAR	1	
31	SCH-F217F-00	ROD, connecting 1	1	
32	95607-12200	NUT, U	1	
33	90109-104G8	BOLT	1	
34	90201-120A5	WASHER, plate	1	
35	23X-22129-00	COVER, thrust 2	2	
36	93317-21746	BEARING, cylindrical	2	
37	90387-1212V	COLLAR	1	
38	95607-10200	NUT, U	1	
39	90109-10554	BOLT	1	
40	93109-17071	OIL, seal	2	
41	90387-123Y4	COLLAR	1	
42	93315-31750	BEARING, cylindrical	1	
43	90387-128T7	COLLAR	2	
44	3JE-22475-00	SEAL, dust	2	
45	93399-999T4	BEARING	1	
46	4GV-F2311-00	CASE, chain	1	
47	9701M-06016	BOLT, hex.	2	
48	9290M-06100	WASHER, spring	2	
49	90387-062M9	COLLAR	2	
50	93700-06005	NIPPLE, grease	2	
51	3XJ-22355-00	PATCH A	2	
52	90151-04048	SCREW, countersunk	2	
53	95607-10200	NUT, U	1	
54	3LD-2219X-01	COVER	2	
55	9290L-06600	WASHER, plain	2	



5CH1300-7201

D5

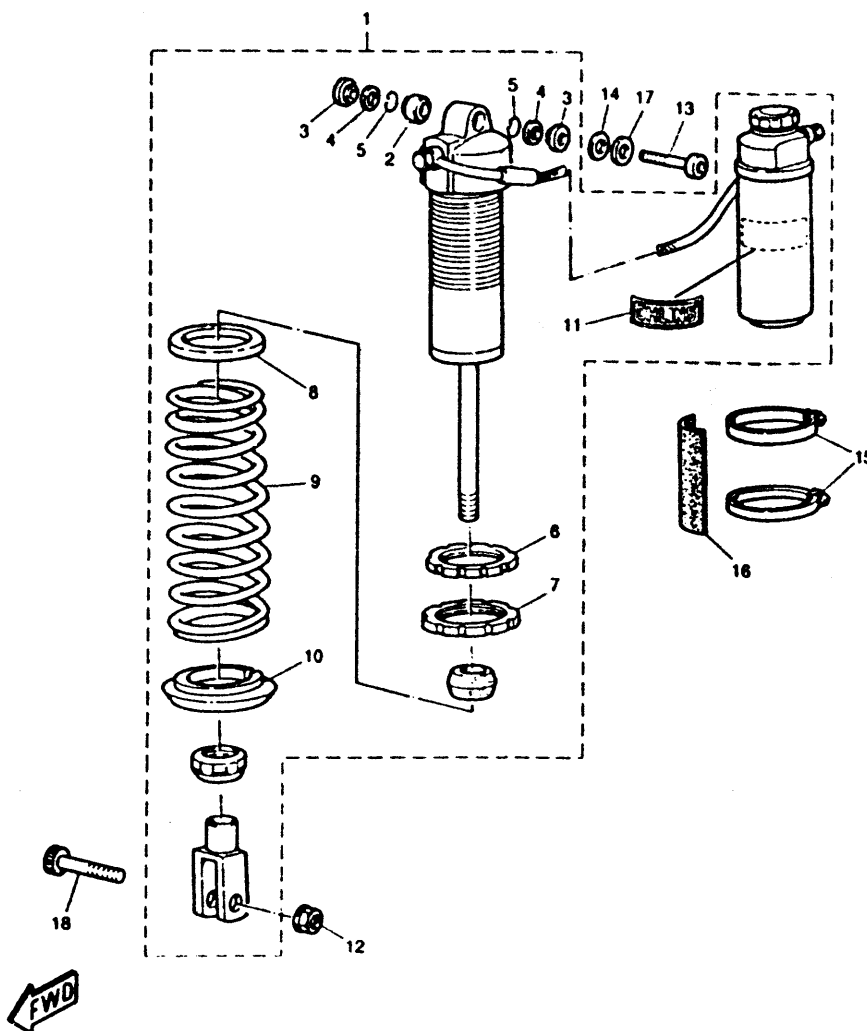


FIG. 21 REAR SUSPENSION

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	5CH-F2210-00	RR. SHOCK ABSORBER	1	
2	5CH-F2216-00	BUSH	1	
3	4GV-F2253-00	COLLAR	2	
4	4GV-F2217-00	DAMPER, rr. shock absorber	2	
5	5CH-F2474-00	SEAL, ring	2	
6	5CH-F2224-00	GUIDE, spring 2	1	
7	5CH-F2213-00	SEAT, spring upper	1	
8	4GV-F2223-00	SEAT, spring lower	1	
9	5CH-F2212-00	SPRING (K = 6,5)	1	(STD)
9	5CH-F2212-10	SPRING (K = 6,9)	1	AP
10	4GV-F2214-00	GUIDE, spring 1	1	
11	5CH-F118E-00	EMBLEM	1	
12	95607-10200	NUT, U	1	
13	5CH-F2125-00	BOLT	1	
14	9290L-12100	WASHER, spring	1	
15	5CH-F2262-00	HOLDER, sub-tank	2	
16	5CH-F2261-00	DAMPER, sub-tank	1	
17	9290M-12200	WASHER, plain	1	
18	90109-104G7	BOLT	1	

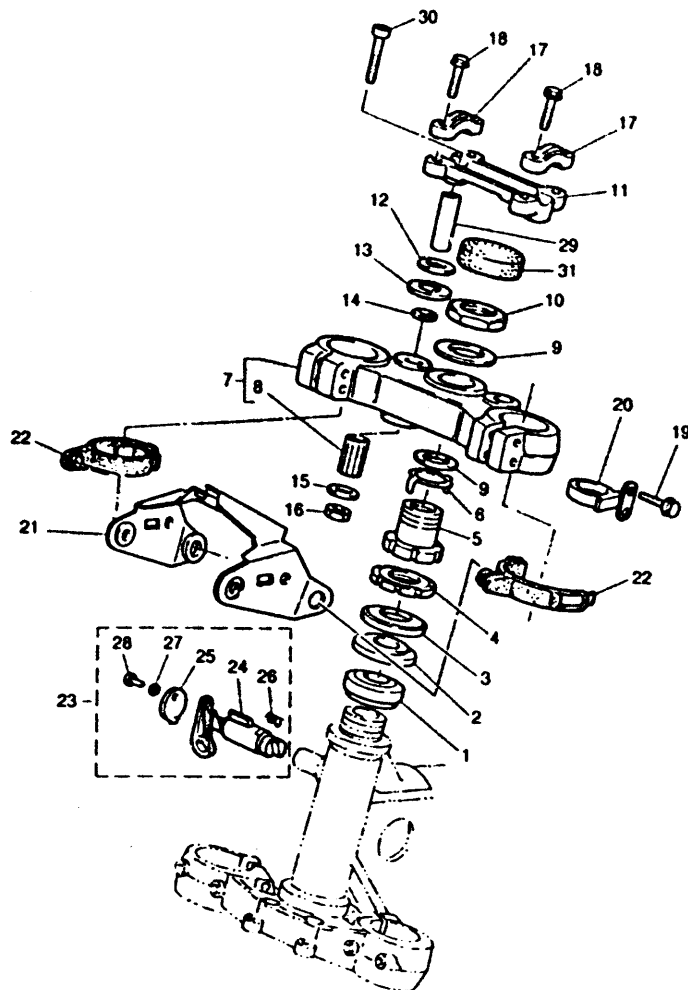


FIG. 22 STEERING

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	93332-00078	BEARING	1	
2	93332-00068	BEARING	1	
3	2HG-23416-00	COVER, ball race 2	1	
4	90179-28602	NUT	1	
5	90179-28603	NUT	1	
6	3SP-23418-00	WASHER, special	1	
7	5CH-WF341-00-T9	CROWN, handle assy	1	UR. COMPETITION SILVER
8	307-22123-00	BUSH, 1	2	
9	90201-365M5	WASHER, plate	2	
10	90170-36394	NUT	1	
11	5CH-F3442-00-T9	HOLDER, handle lower	1	UR. COMPETITION SILVER
12	90201-128N5	WASHER, plate	2	
13	90202-14077	WASHER, plate	2	
14	90387-121E8	COLLAR	2	
15	90201-100A1	WASHER, plate	2	
16	5CH-F3453-00	NUT, fitting 1	2	
17	5CH-F3441-00-T9	HOLDER, handle upper	2	UR. COMPETITION SILVER
18	95027-08035	BOLT, flange	4	
19	9502L-08040	BOLT, flange	4	
20	3R4-23317-00	HOLDER, cable	1	
21	5CH-F3174-00	STAY, head light	1	
22	5CH-F3489-01	BAND	2	
23	5CH-F3408-00	STEERING LOCK	1	
24	5CH-F3482-00	BODY & KEY, steering lock	1	
25	5CH-F3484-00	CAP, handle lock	1	
26	5CH-F348G-00	SPRING, pin action	1	
27	5CH-F3486-00	STAY, plate	1	
28	5CH-F3483-10	RIVET	1	



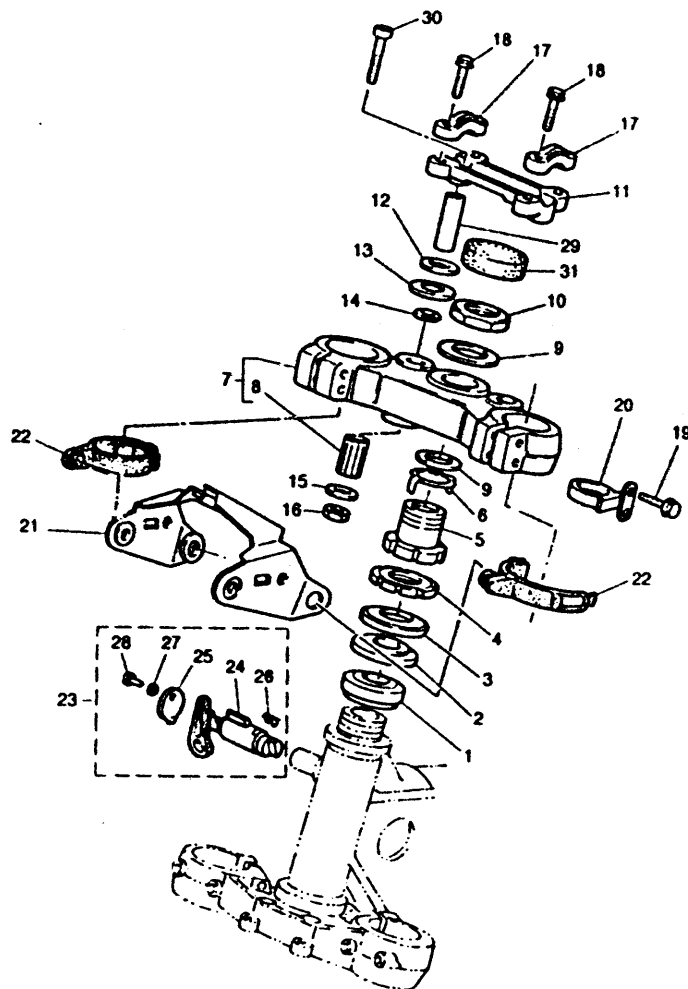


FIG. 22 STEERING

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
29	SCH-F3448-00	SPACER	2	
30	SCH-F3436-06	BOLT	2	
31	SCH-F319U-10	CAP	1	



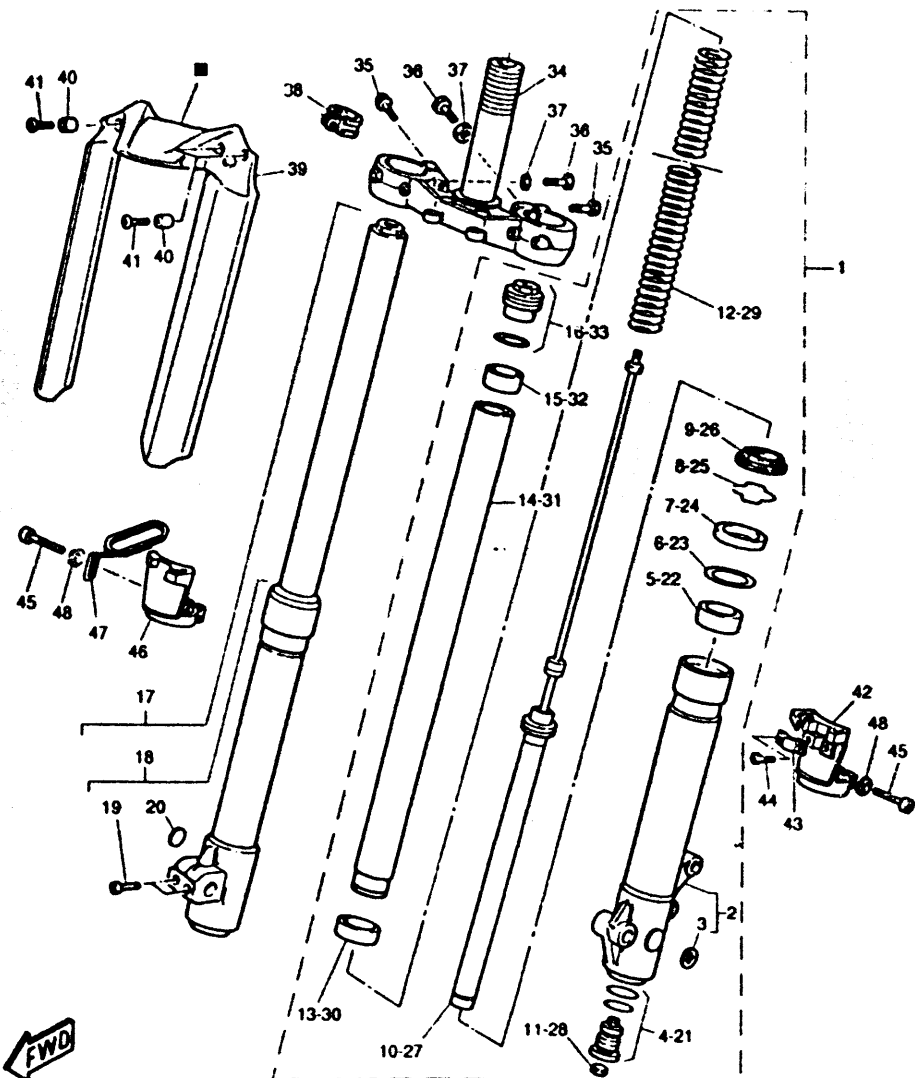


FIG. 23 FRONT FORK

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	5CH-F3102-00	FR. FORK ASSY (L.H.)	1	
2	5CH-F3126-00	- TUBE, outer 1	1	
3	5CH-F3108-00	- EMBLEM	1	
4	5CH-F316A-00	- VALVE, comp.	1	
5	5CH-F3125-00	- METAL, slide	1	
6	5CH-F3146-00	- WASHER, oil seal	1	
7	5CH-F3145-00	- OIL, seal	1	
8	4GV-F3153-00	- RING, snap	1	
9	5CH-F3144-00	- SEAL, dust	1	
10	5CH-F3170-00	- CYLINDER COMP., front fork	1	
11	4GV-F312G-00	- PLUG	1	
12	5CH-F3141-00	- SPRING, front fork	1	
13	5CH-F3135-00	- METAL, slide 2	1	
14	5CH-F3110-00	- INNER, tube assy 1	1	
15	5CH-F3118-00	- SPACER	1	
16	5CH-F3111-00	- BOLT, cap	1	
17	5CH-F3103-01	FR. FORK ASSY (R.H.)	1	
18	5CH-F3136-01	- TUBE, outer 2	1	
19	9131L-06020	- BOLT, hexagon socket head	2	
20	5CH-F3108-00	- EMBLEM	1	
21	5CH-F31-A-00	- VALVE, comp.	1	
22	5CH-F3125-00	- METAL, slide	1	
23	5CH-F3146-00	- WASHER, oil seal	1	
24	5CH-F3145-00	- OIL, seal	1	
25	4GV-F3153-00	- RING, snap	1	
26	5CH-F3144-00	- SEAL, dust	1	

NOTE: ■ COLORED - ROUGH MATERIAL

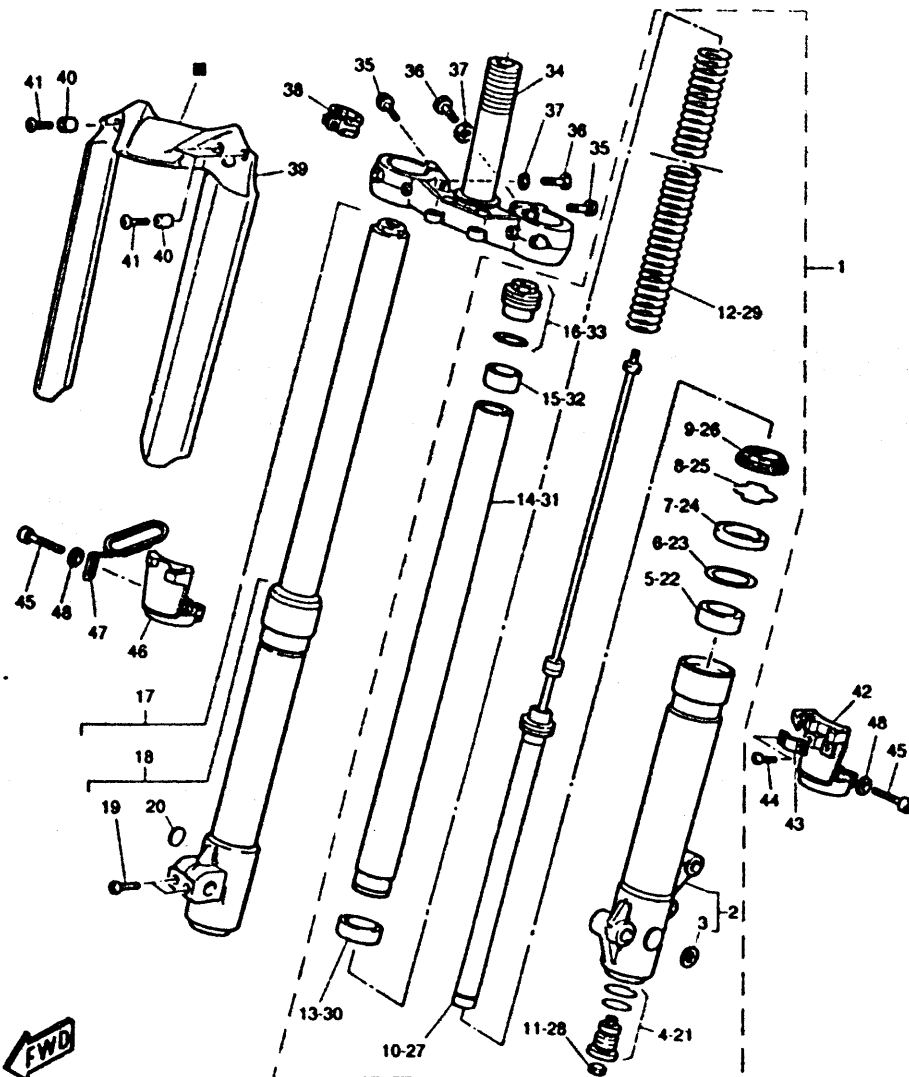


FIG. 23 FRONT FORK

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
27	5CH-F3170-00	- CYLINDER COMP., front fork	1	
28	4GV-F3126-00	- PLUG	1	
29	5CH-F3141-00	- SPRING, front fork	1	
30	5CH-F3135-00	- METAL, slide 2	1	
31	5CH-F3110-00	- INNER, tube assy	1	
32	5CH-F3118-00	- SPACER	1	
33	5CH-F3111-00	- BOLT, cap	1	
34	5CH-F3340-00	UNDER BRACKET COMP.	1	
35	9502L-08040	BOLT, flange (small)	4	
36	9701L-08016	BOLT, hex.	2	
37	9531L-08600	NUT, hex.	2	
38	5CH-F3389-00	GUIDE, wire	1	
39	5CH-F3472-00	PROTECTOR	1	UR. PURPLISH WHITE SOLID1
40	90387-05X02	COLLAR	4	
41	9850L-05012	SCREW, pan head (+)	4	
42	5CH-F314F-00	PROTECTOR, guide comp. 1	1	
43	5CH-F314E-00	COVER, hose	1	
44	9850L-05016	SCREW, pan head (+)	2	
45	9131L-05040	BOLT, hex. socket head	4	
46	5CH-F314G-00	PROTECTOR, guide comp. 2	1	
47	5CH-F3318-00	HOLDER, wire 1	1	
48	9290L-05600	WASHER, plain	4	

NOTE: ■ COLORED - ROUGH MATERIAL



D 11

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F4110-01-P3	FUEL TANK COMP.	1	UR.DPBMC
2	□	- EMBLEMS	1	
3	5CH-F4135-00	CLAMP, 1	1	
4	5CH-F4610-00	CAP, assy	1	
5	5CH-F4312-00	PIPE, 2	1	
6	9701L-06016	BOLT, hex.	1	
7	9290L-06100	WASHER, spring	1	
8	34X-24186-01	WASHER, special	1	
9	4GV-F4182-00	DAMPER, locating 2	1	
10	5CH-F416F-00	INSULATOR, fuel tank 1	1	
11	5CH-F416G-00	INSULATOR, fuel tank 2	1	
12	5CH-F4500-01	FUEL COCK ASSY	1	
13	93210-118C7	- O-RING	1	
14	90202-05193	WASHER, plate	2	
15	9850L-06014	SCREW, pan head (+)	2	
16	5CH-F4311-00	PIPE, fuel 1	1	
17	90467-11832	CLIP	1	
18	90467-12835	CLIP	1	
19	90387-06X09	COLLAR	1	
20	5CH-F4123-00	SCREW, cap nut	1	

- 38 -

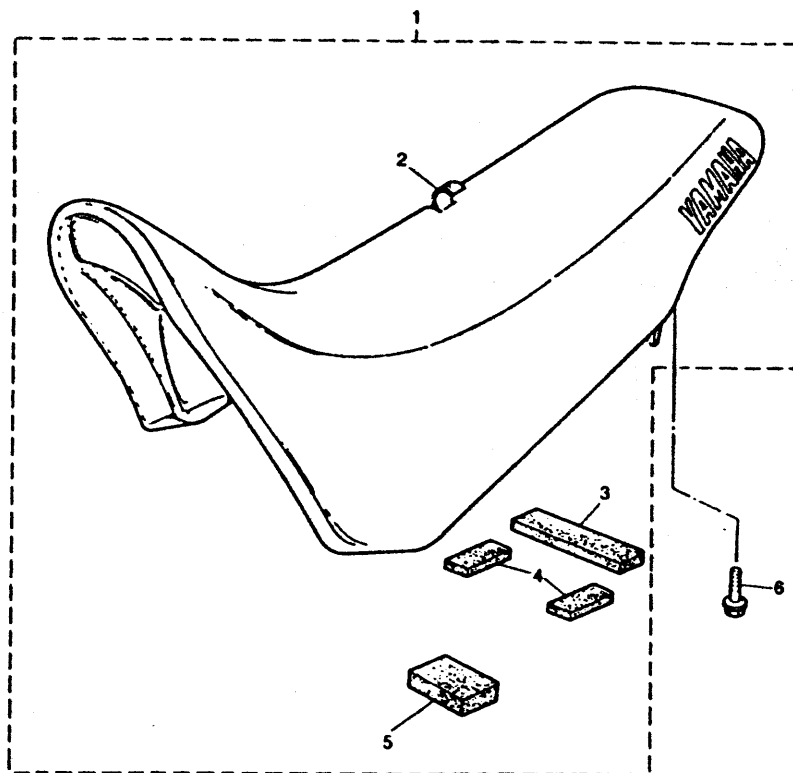


FIG. 25 SEAT

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	5CH-F4770-21	SEMI-DOUBLE SEAT ASSY	1	UR.DPBSE
2	5CH-F4731-20	COVER, seat	1	UR.DPBSE
3	5CH-F4723-00	DAMPER, seat	1	
4	5CH-F4724-00	DAMPER, seat	2	
5	4SU-F8372-00	DAMPER	1	
6	9581L-06016	BOLT, flg.	2	



9CH4300-1250

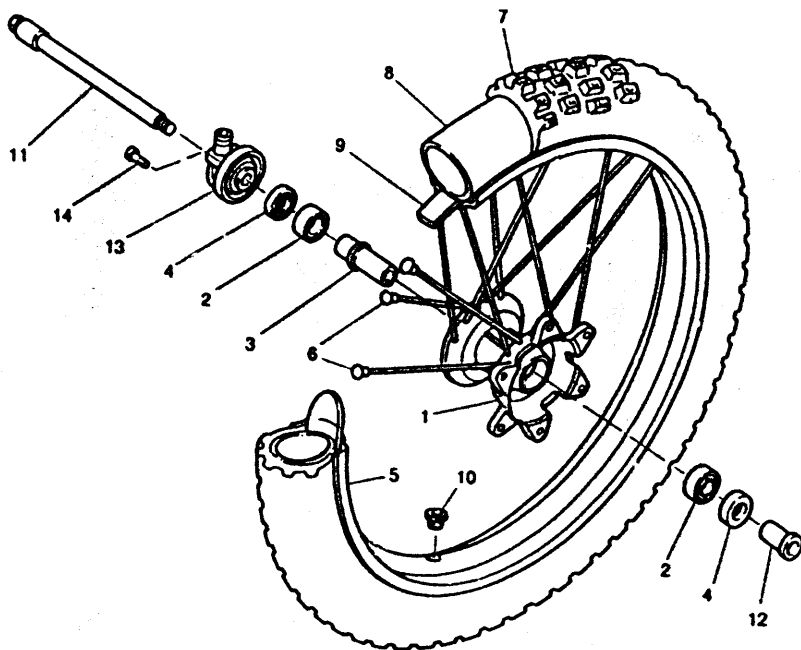


FIG. 26 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	4GV-F5111-00	HUB, front	1	
2	93306-003Y6	BEARING	2	
3	4GV-F5117-00	SPACER, bearing	1	
4	93106-22032	OIL, seal	2	
5	94418-21587	RIM (1.85 x 21")	1	
6	5CH-F5104-10	SPOKE, set front	1	
7	94109-218J5	TIRE (90/90-21") MT21	1	UR. PIRELLI
8	94209-21892	TUBE (3.00-21") MA	1	UR. PIRELLI
9	94309-21853	BAND, rim	1	
10	5CH-F5188-00	CAP	1	
11	5CH-F5181-00	AXLE, wheel	1	
12	90387-173Y0	COLLAR	1	
13	4GV-25190-00	GEAR UNIT ASSY	1	
14	9850M-05014	SCREW, pan head (+)	1	


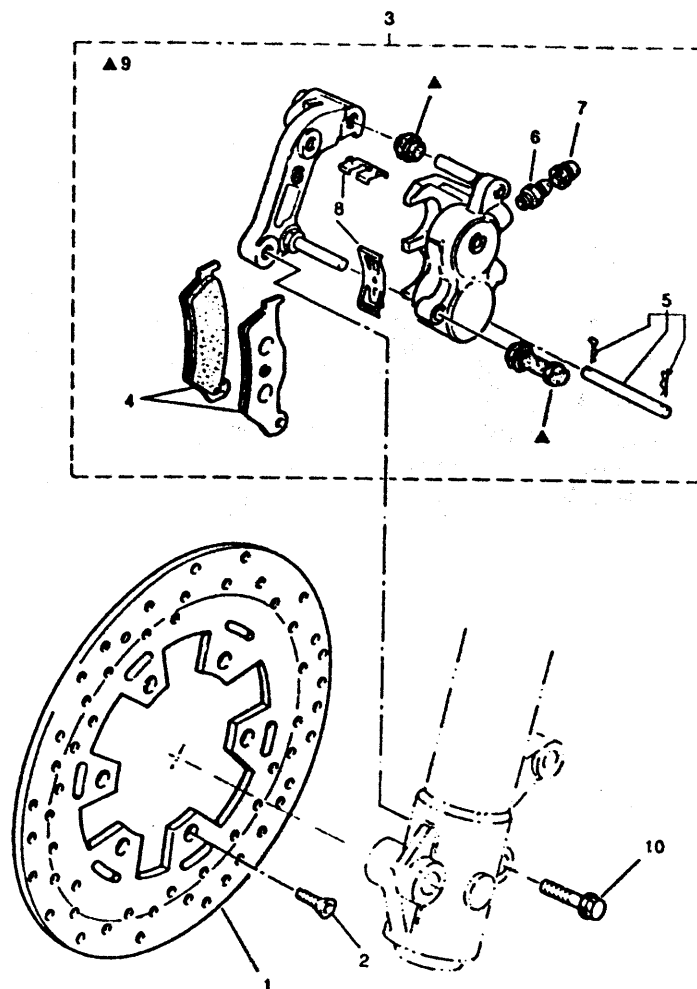


FIG. 27 FRONT BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	4GV-F582T-00	DISC, brake (left)	1	
2	90149-06327	SCREW	6	
3	5CH-F580T-00	CALIPER ASSY (left)	1	
4	4GV-F5911-00	- PAD, caliper 2	1	U.R.STD.
4	5CH-F5911-00	- PAD, caliper2	1	AP
5	4GV-F5924-10	- PIN, pad	1	
6	4DL-F5824-00	- SCREW, bleed	1	
7	4DL-F5917-00	- BOOT, caliper	1	
8	4GV-F5919-20	- SUPPORT, pad	1	
9	4GV-F5917-00	- BOOT, caliper	1	
10	90105-08659	BOLT, washer based	2	

FWD

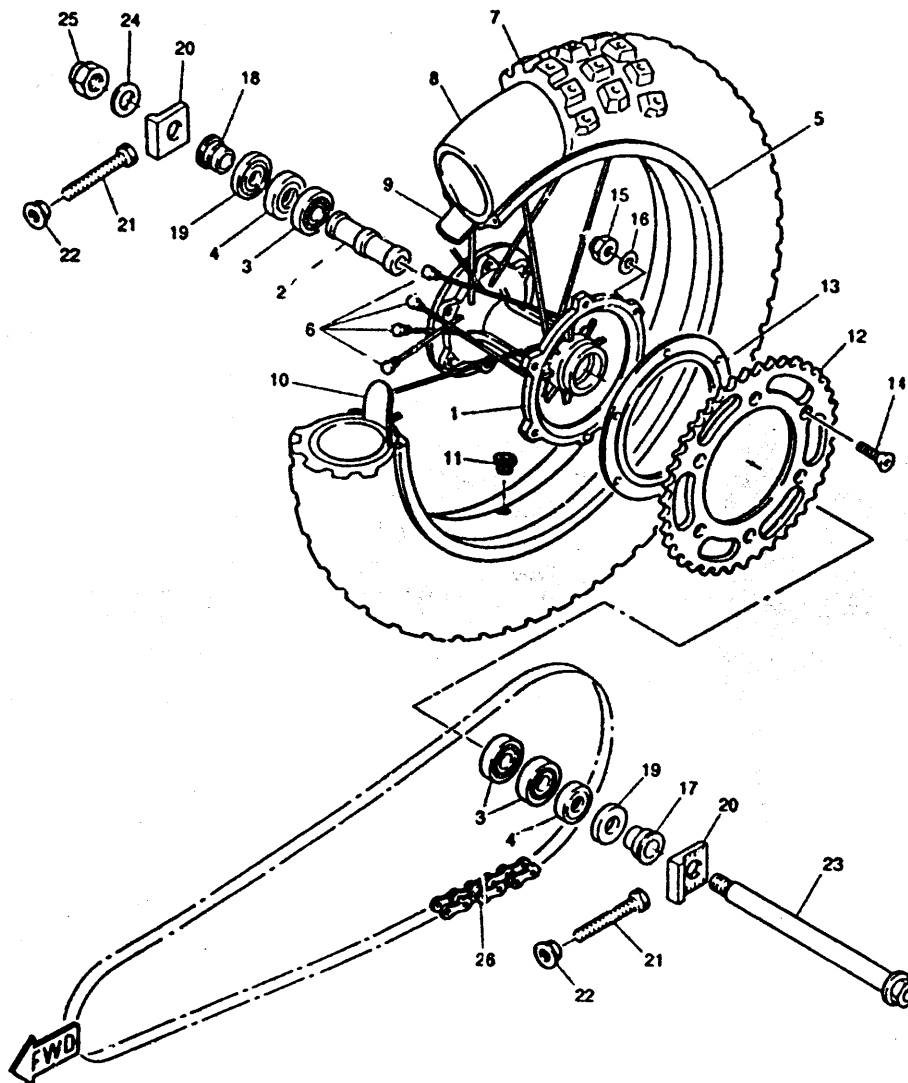

5CH1300-7280

FIG. 28 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	4EW-25311-00	HUB, rear	1	
2	4EW-25317-00	SPACER, bearing	1	
3	93306-00418	BEARING	3	
4	93106-28023	OIL SEAL	2	
5	94425-18495	RIM (2.50 x 18")	1	
6	5CH-F5304-10	SPOKE SET, rear	1	
7	94113-18X00	TIRE (130/90-18") MT21	1	UR. PIRELLI
8	94214-18891	TUBE (4.50/5.10-18") MD18	1	UR. PIRELLI
9	94314-18554	BAND, rim (4.00-18")	1	
10	4GV-F5394-10	SPACER, bead	1	
11	5CH-F5188-00	CAP	1	
12	5CH-F5444-00	SPROCKET, driven (44T)	1	
13	4GV-F5414-00	SPACER	1	
14	90109-085F2	BOLT	6	
15	9561L-08100	NUT, U	6	
16	90201-086P8	WASHER, plate	6	
17	90387-200Y2	COLLAR	1	
18	90387-203V0	COLLAR	1	
19	4V4-25367-00	COVER, hub dust	2	
20	3SP-25388-00	PULLER, chain 1	2	
21	90101-08777	BOLT	2	
22	95707-08500	NUT, flange	2	
23	3XP-25381-00	AXLE, wheel	1	
24	90201-204M9	WASHER, plate	1	
25	90185-18104	NUT, self-locking	1	
26	9456X-00112	CHAIN	1	

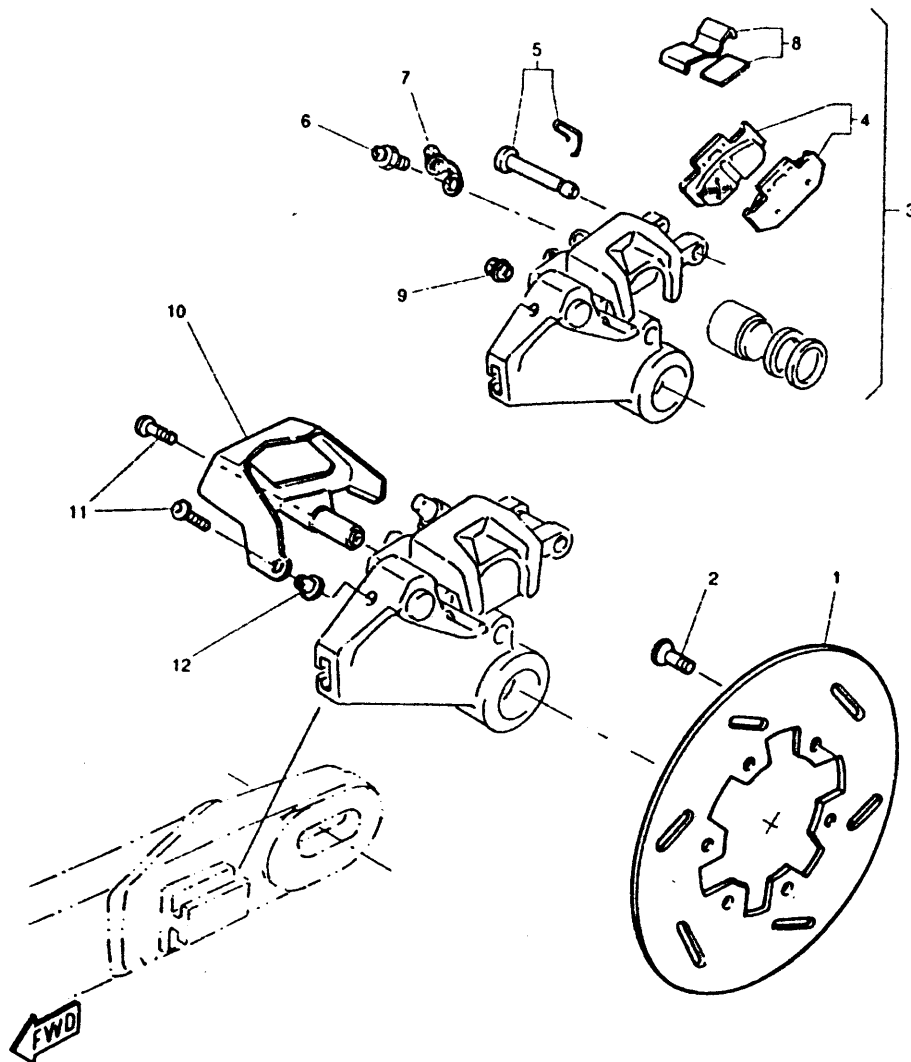


FIG. 29 REAR BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	4GV-F582W-00	DISC, rear brake 2	1	
2	90149-06327	SCREW	6	
3	5CH-F580W-00	CALIPER ASSY, rear 2	1	
4	4GV-F5811-00	PAD, caliper 2	1	
5	4GV-F5924-01	PIN, pad	1	
6	3SH-F5824-00	SCREW, bleed	1	
7	3SH-F5825-00	CAP	1	
8	4GV-F5919-10	SUPPORT, pad	1	
9	4GV-F5917-00	BOOT, caliper	1	
10	5CH-F7491-00	PROTECTOR	1	
11	9201L-06012	BOLT, button head	2	
12	90387-06X01	COLLAR	1	

5CH1300-7290

E 2

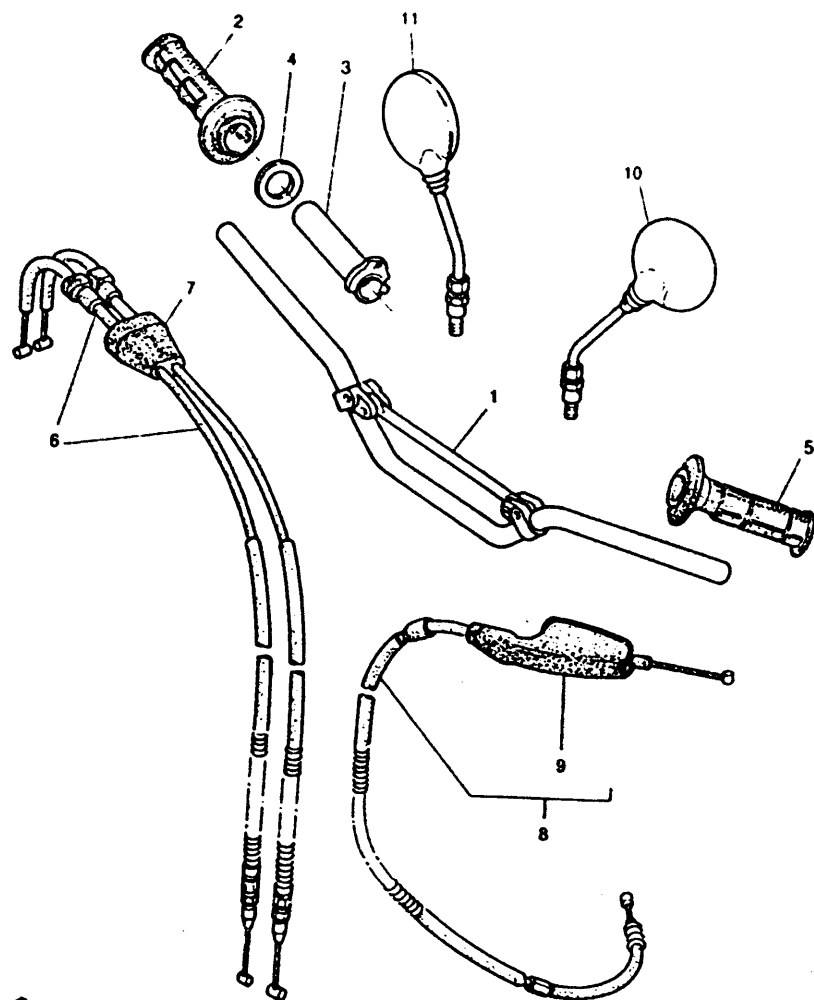


FIG. 30 STEERING HANDLE, CABLE

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F6111-00	HANDLEBAR	1	
2	5CH-F6242-00	GRIP (R.H.)	1	
3	4GV-F6243-00	TUBE, throttle guide	1	
4	4GV-F6249-00	RING, leaf	1	
5	5CH-F6241-00	GRIP (L.H.)	1	
6	5CH-F6302-00	THROTTLE CABLE ASSY	1	
7	4GV-F6316-00	- BOOT, throttle	1	
8	5CH-F6335-10	CABLE, clutch	1	
9	4GV-F6339-00	- BOOT	1	
10	5CH-F6280-00	REAR VIEW MIRROR ASSY LEFT	1	
11	5CH-F6290-00	REAR VIEW MIRROR ASSY RIGHT	1	



5CH1300-7300

E3

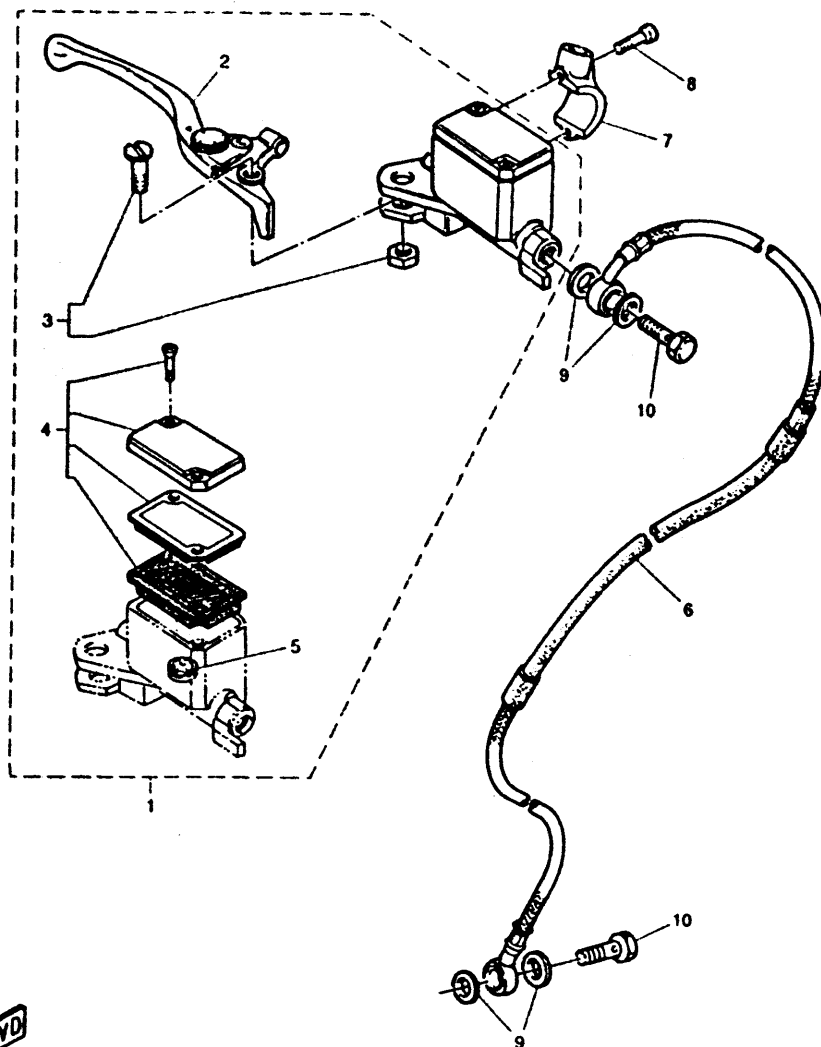


FIG. 31 FRONT MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-F583T-00	MASTER CYLINDER ASSY	1	
2	5CH-H3922-00	LEVER 2	1	
3	5CH-F589F-00	BOLT, lever	1	
4	5CH-F5893-00	RESERVOIR CAP ASSY	1	
5	4GV-F589A-00	COVER, dust	1	
6	5CH-F5872-00	HOSE, brake 1	1	
7	5CH-F5867-00	BRACKET, master cylinder	1	
8	9131M-06025	BOLT, hexagon socket head	2	
9	90201-10X01	WASHER, plate	4	
10	90401-10X00	BOLT, union	2	

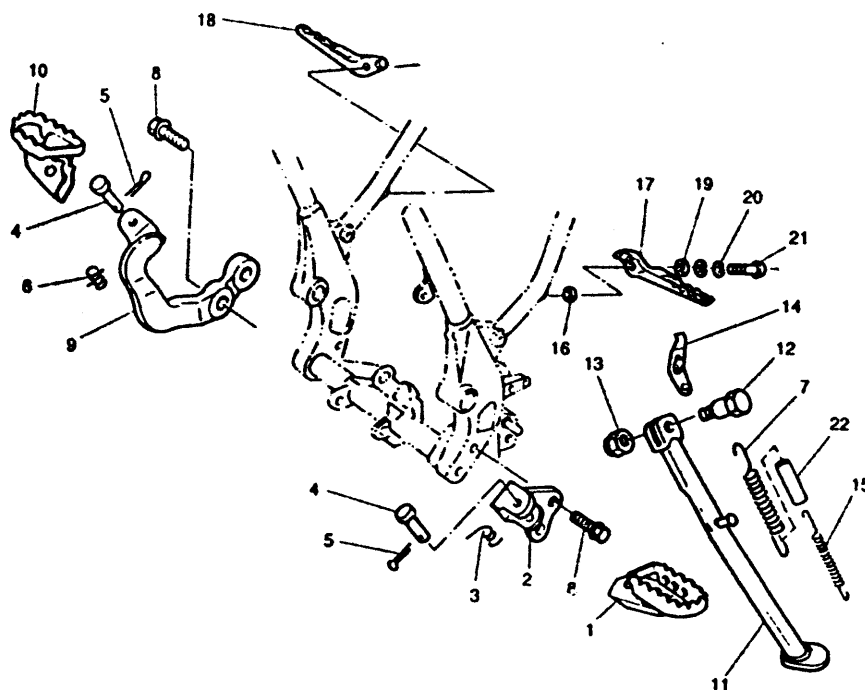


FIG. 32 STAND, FOOTREST

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	4DA-27411-00	FOOTREST, 1	1	
2	5CH-F7412-00	BRACKET, 1	1	
3	90508-28777	SPRING, torsion	1	
4	90240-10101	PIN, clevis	2	
5	91401-25020	PIN, cotter	2	
6	90508-284A7	SPRING, torsion	1	
7	90508-32845	SPRING, tension	1	
8	95827-10030	BOLT, flg.	3	
9	5CH-F7422-00	BRACKET, 2	1	
10	4GY-27421-00	FOOTREST, 2	1	
11	5CH-F7311-00-33	STAND, side	1	UR.YAMAHA BLACK
12	90105-12616	BOLT, flg.	1	
13	90185-12119	NUT, self-locking	1	
14	4GV-F7315-10	LINK	1	
15	90508-20846	SPRING, tension	1	
16	90201-083P5	WASHER, plate	2	
17	4GV-F7431-00	FOOTREST, rr. 1	1	
18	4GV-F7441-00	FOOTREST, rr. 2	1	
19	90201-108M3	WASHER, plate	2	
20	90504-18005	SPRING, compression	2	
21	90109-085F5	BOLT	2	
22	4LW-F7351-00	GUIDE, side stand	1	



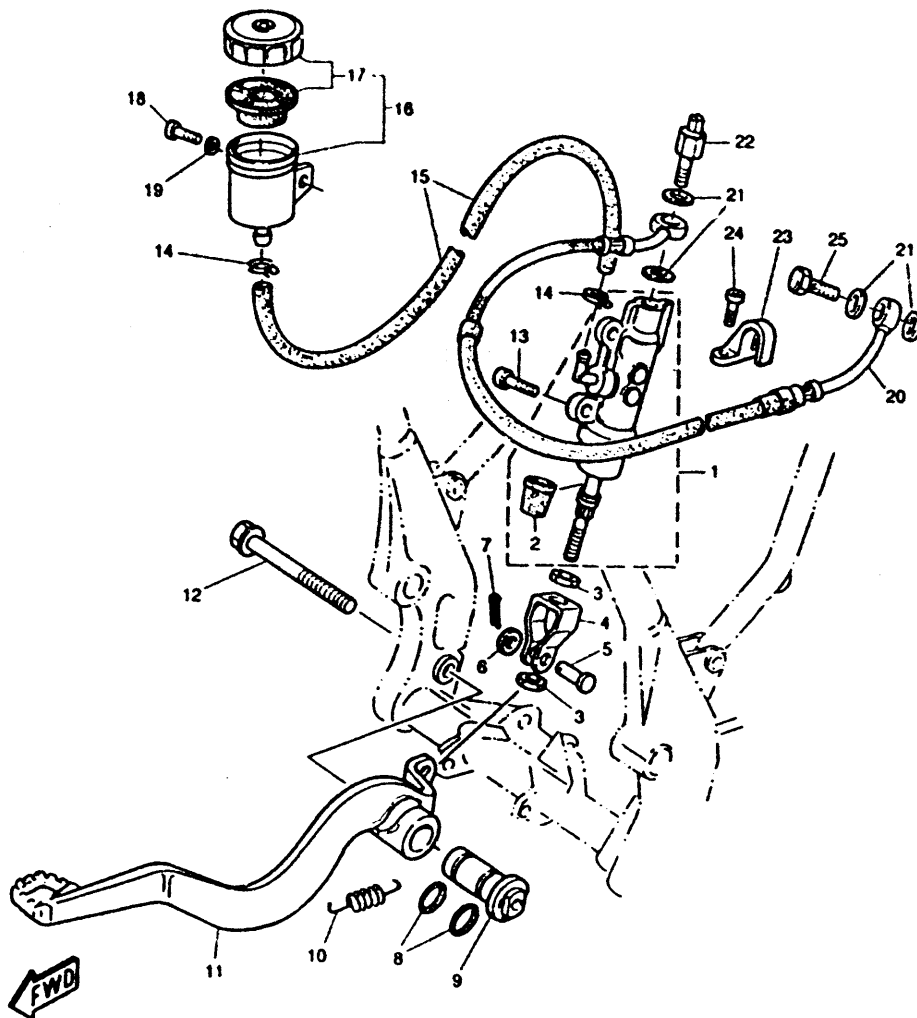


FIG. 33 REAR MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	4GV-F583V-00	REAR MASTER CYLINDER	1	
2	4GV-F5862-00	BOOT, master cylinder	1	
3	9530L-08700	NUT, hex.	2	
4	4GV-F7222-00	JOINT	1	
5	90240-08124	PIN	1	
6	90201-08083	WASHER, plain	1	
7	91401-16012	PIN, split	1	
8	93210-13016	O-RING	2	
9	4GV-F7213-01	COLLAR	1	
10	90506-18838	SPRING	1	
11	4GV-F7200-02	PEDAL, brake	1	
12	95817-10085	BOLT, flg.	1	
13	4GV-F7217-00	BOLT	2	
14	90467-11832	CLIP	2	
15	5CH-F5895-00	HOSE, reserve	1	
16	3SH-F5804-00	TANK, reserve	1	
17	3SH-F5852-50	CAP, reservoir	1	
18	9131M-06020	BOLT, hexagon socket head	1	
19	9290M-06600	WASHER, plain	1	
20	5CH-F5873-00	HOSE, brake 2	1	
21	90201-10X01	WASHER, plain	4	
22	4DL-H2530-00	REAR STOP SWITCH ASSY	1	
23	2VM-25976-00	HOLDER, brake hose 2	2	
24	90167-04814	SCREW, tapping	4	
25	90401-10X00	BOLT, union	1	

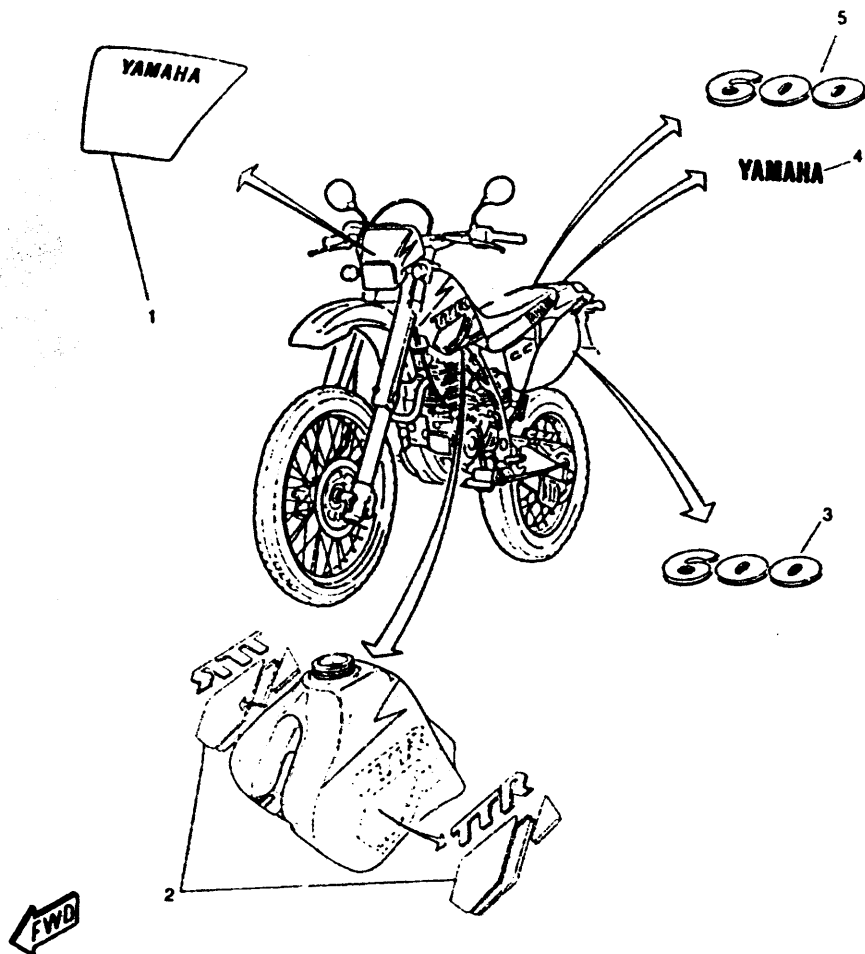


FIG. 34 GRAPHIC, EMBLEM

REF. NO.	PART NO.	DESCRIPTION	Q. TY	REMARKS
1	5CH-F8368-30	EMBLEM,	1	
2	5CH-F4240-20	GRAPHIC, fuel tank set	1	
3	5CH-F1782-00	EMBLEM, 2	1	
4	99241-00080	EMBLEM, Yamaha	1	
5	5CH-F1783-00	EMBLEM, 3	1	

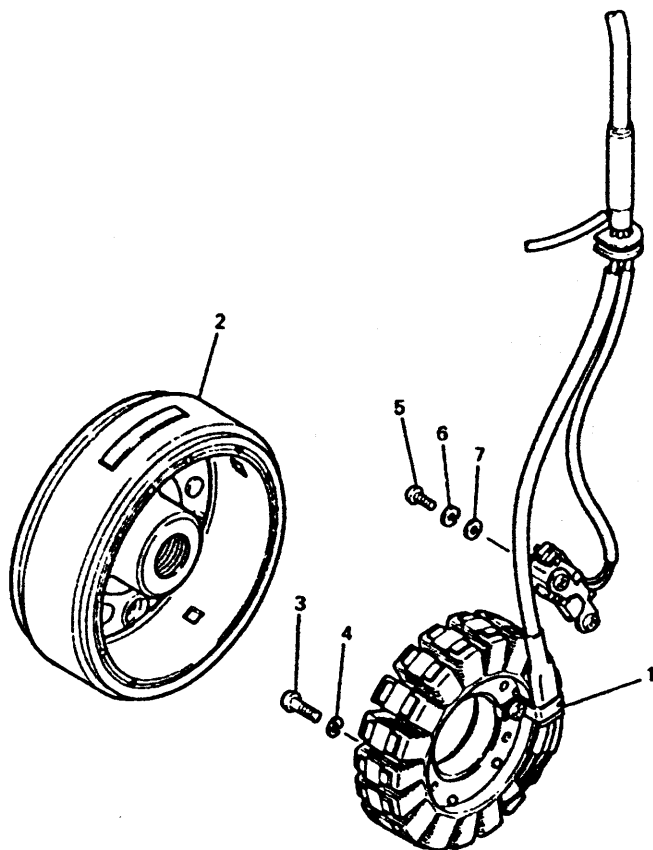


FIG. 35 GENERATOR

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-81410-00	STATOR, assy	1	
2	5CH-81450-00	ROTOR, assy	1	
3	98507-06030	SCREW, pan head (+)	3	
4	92907-06100	WASHER, plain	3	
5	98507-05016	SCREW, pan head (+)	2	
6	92907-05100	WASHER, spring	2	
7	92907-05600	WASHER, plain	2	



5CH1300-7351

E 8

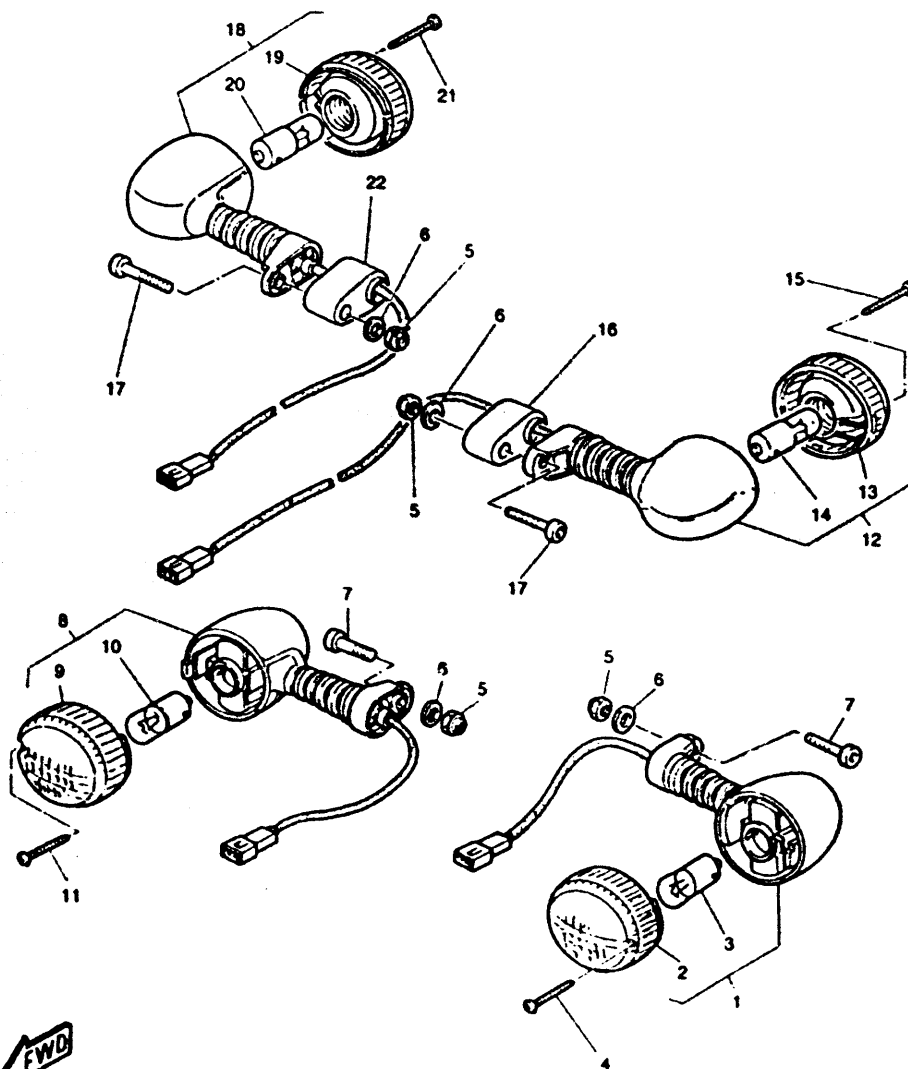


FIG. 36 FLASHER LIGHT

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-H3310-10	FR. FLASHER LIGHT ASSY 1	1	
2	5CH-H3332-10	- LENS, flasher	1	
3	5CH-H3311-00	- BULB, flasher 12V-10W	1	L.M.
4	90167-02X00	- SCREW, pan head tapping(+)	1	
5	9571L-06300	NUT, nylon	4	
6	9290L-06200	WASHER, plain	4	
7	9131M-06020	BOLT, hexagon socket head	2	
8	5CH-H3320-10	FR. FLASHER LIGHT ASSY 2	1	
9	5CH-H3322-10	- LENS, flasher	1	
10	5CH-H3311-00	- BULB, flasher 12V-10W	1	L.M.
11	90167-02X00	- SCREW, pan head tapping(+)	1	
12	5CH-H3330-10	RR. FLASHER LIGHT ASSY 1	1	
13	5CH-H3322-10	- LENS, flasher	1	
14	5CH-H3311-00	- BULB, flasher 12V-10W	1	L.M.
15	90167-02X00	- SCREW, pan head tapping(+)	1	
16	5CH-H3318-00	- STAY, flasher1	1	
17	9131M-06050	BOLT, socket head	2	
18	5CH-H3340-10	RR. FLASHER LIGHT ASSY 2	1	
19	5CH-H3332-10	- LENS, flasher	1	
20	5CH-H3311-00	- BULB, flasher 12V-10W	1	L.M.
21	90167-02X00	- SCREW, pan head tapping(+)	1	
22	5CH-H3318-00	- STAY, flasher1	1	



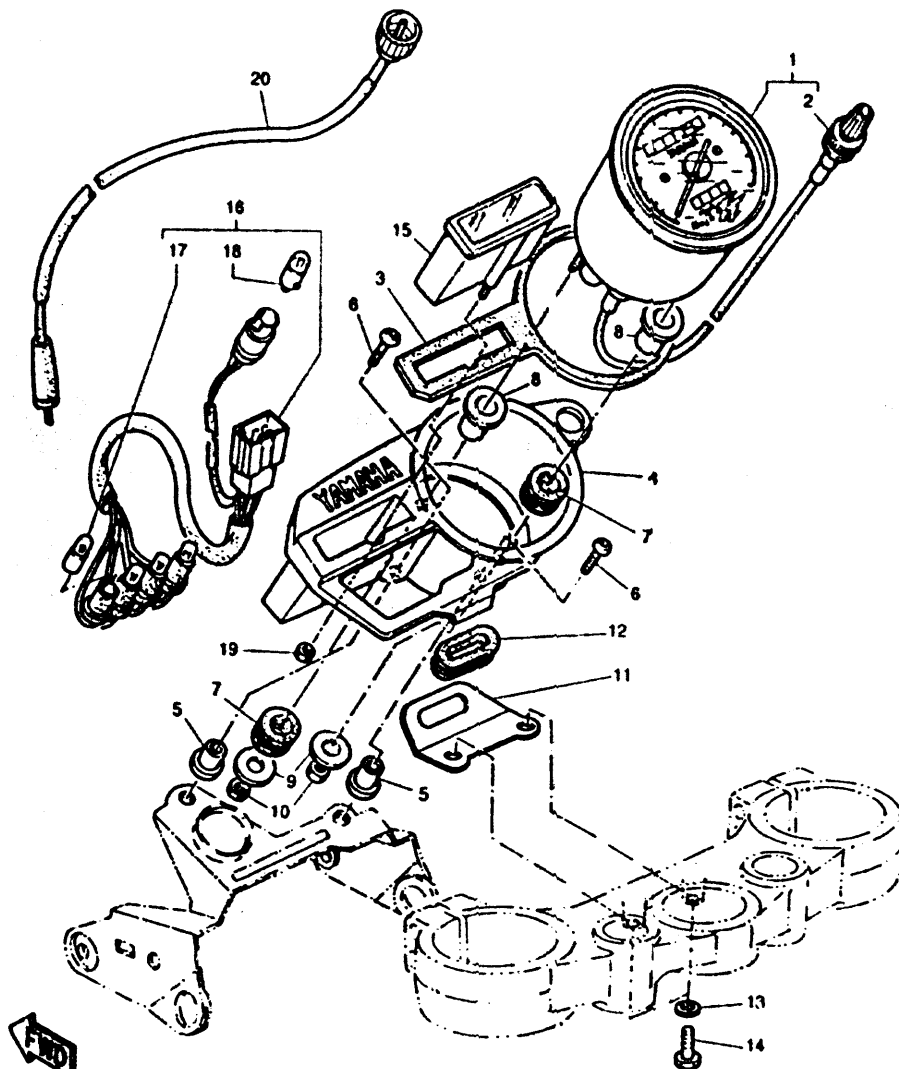


FIG. 37 METER

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-H3570-10	SPEEDOMETER ASSY	1	
2	5CH-H3578-00	· KNOB, tripmeter	1	
3	5CH-H3513-00	DAMPER	1	
4	5CH-H3519-00	BRACKET, meter	1	
5	90387-06X00	COLLAR	2	
6	9201L-06016	BOLT, button head	2	
7	5CH-H3523-00	DAMPER	2	
8	90387-05X01	COLLAR	2	
9	9290L-05200	WASHER, plain	2	
10	90179-05X02	NUT, nylon	2	
11	5CH-H3548-00	BRACKET, meter 1	1	
12	5CH-H3592-00	DAMPER	1	
13	9290L-06100	WASHER, spring	2	
14	9701L-06014	BOLT, hex.	2	
15	4GV-H3587-00	BODY, pilot box	1	
16	5CH-H3520-00	SOCKET, cord assy	1	
17		· BULB (12V-1.2W)	4	L.M.
18		· BULB (12V-3W)	1	L.M.
19	4GV-H354L-00	NUT, shaft support	1	
20	5CH-H3550-10	SPEEDOMETER CABLE ASSY	1	

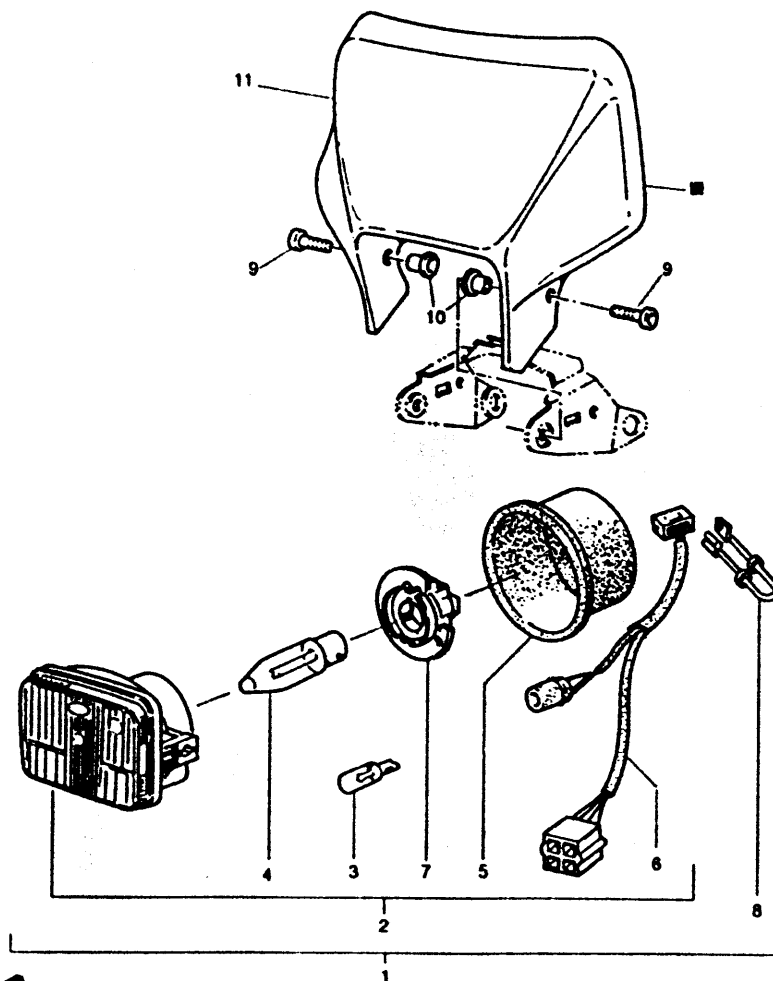


FIG. 38 HEADLIGHT

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-H430A-00	HEADLIGHT UNIT COMP.	1	
2	5CH-H4310-10	HEADLIGHT UNIT ASSY	1	
3		BULB (12V-5W)	1	L.M.
4		BULB H4 (12V-55/60 W)	1	L.M.
5	4LW-H4397-00	COVER, socket	1	
6	5CH-H4312-10	SOCKET	1	
7	4LW-H4393-00	HOLDER, bulb	1	
8	5CH-H4348-00	WIRE, lead 1	1	
9	9581L-06016	BOLT, flg.	2	
10	903R7-06X02	COLLAR	2	
11	5CH-F8351-20	BODY, cowling	1	UR. DP8SE

NOTE: ■ COLORED - ROUGH MATERIAL

FWD

5CH1300-7381

E 11

- 52 -

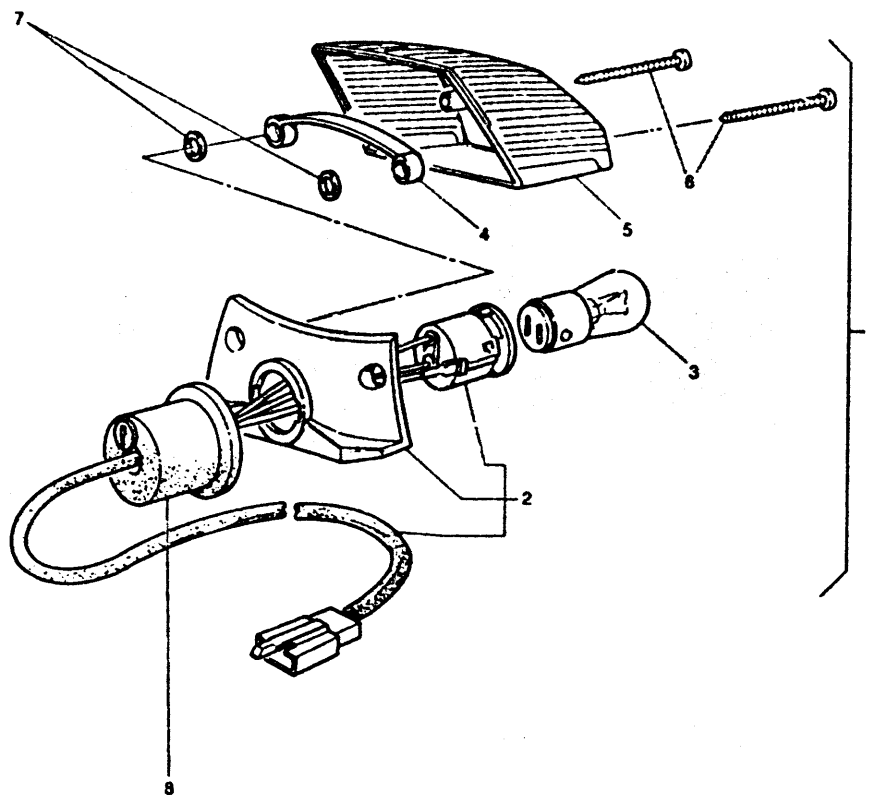


FIG. 39 TAILLIGHT

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-H4700-00	TAIL LIGHT ASSY	1	
2	5CH-H4720-00	BASE ASSY	1	
3	2VW-H4714-00	BULB 12V-5/21W	1	L.M.
4	5CH-H4731-00	REFLECTOR, tail light	1	
5	5CH-H4721-00	LENS, tail	1	
6	5CH-H4725-00	SCREW, lens fitting	2	
7	5CH-H4722-00	WASHER	2	
8	5CH-H4736-00	DAMPER, tail	1	



5CH1300-7380

E 12

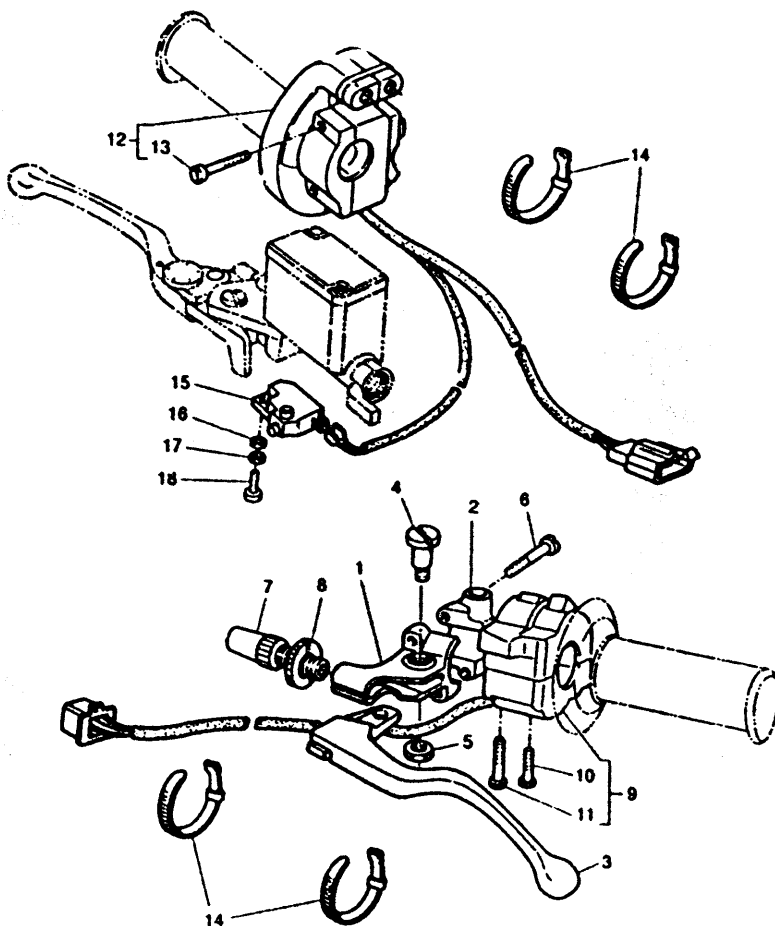


FIG. 40 HANDLE SWITCH, LEVER

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-H2911-10	HOLDER, lever 1	1	
2	5CH-H2913-00	HOLDER, lever lower 1	1	
3	5CH-H3912-10	LEVER 1	1	
4	5CH-H3925-00	SCREW, lever fitting	1	
5	5CH-H3916-00	NUT, lever fitting	1	
6	9131M-06025	BOLT, hexagon socket head	2	
7	90123-08X00	BOLT	1	
8	90179-08X01	NUT	1	
9	5CH-83972-00	SWITCH, handle 4	1	
10	98507-05030	- SCREW, pan head (+)	1	
11	98507-05040	- SCREW, pan head (+)	1	
12	5CH-H397A-00	SWITCH CASE ASSY	1	
13	9850M-05016	- SCREW, pan head (+)	2	
14	437-83936-01	BAND, switch cord	4	
15	3FY-83980-00	FRONT STOP SWITCH ASSY	1	
16	9290L-04600	WASHER, plain.	1	
17	9290L-04100	WASHER, spring	1	
18	9650L-04012	SCREW, pan head (+)	1	

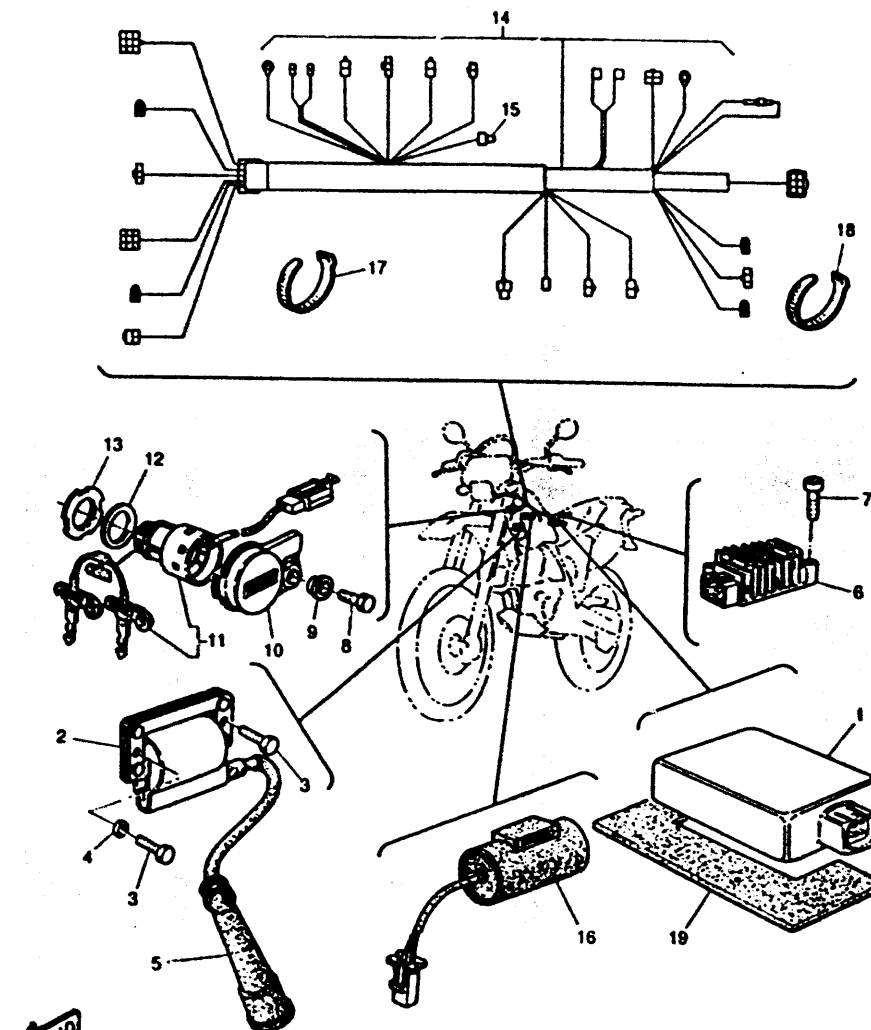


FIG. 41 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-85540-01	CDI UNIT ASSY	1	
2	5CH-82310-00	IGNITION COIL ASSY	1	
3	9701L-06320	BOLT, hex.	2	
4	9290L-06600	WASHER, plain	1	
5	371-82370-00	PLUG CAP ASSY	1	
6	3TJ-81960-02	RECTIFIER & REGULATOR ASSY	1	
7	9201L-06025	BOLT, button head	2	
8	9701L-06016	BOLT, hex.	1	
9	903A7-06X01	COLLAR	1	
10	5CH-H2528-00	COVER, main switch	1	
11	5CH-H2501-00	MAIN SWITCH STEERING LOCK	1	
12	5CH-H2558-00	WASHER	1	
13	5CH-H2517-00	WASHER, special	1	
14	5CH-H2590-01	WIRE, harness	1	
15	3WP-81980-00	DIODE	1	
16	3TC-81965-00	CONDENSER, smoothing	1	
17	2AJ-F3192-50	BAND	2	
18	4GV-H3936-00	BAND, switch cord	6	
19	5CH-H235Y-00	DAMPER, unit	1	



8CH1300-7410

E 14

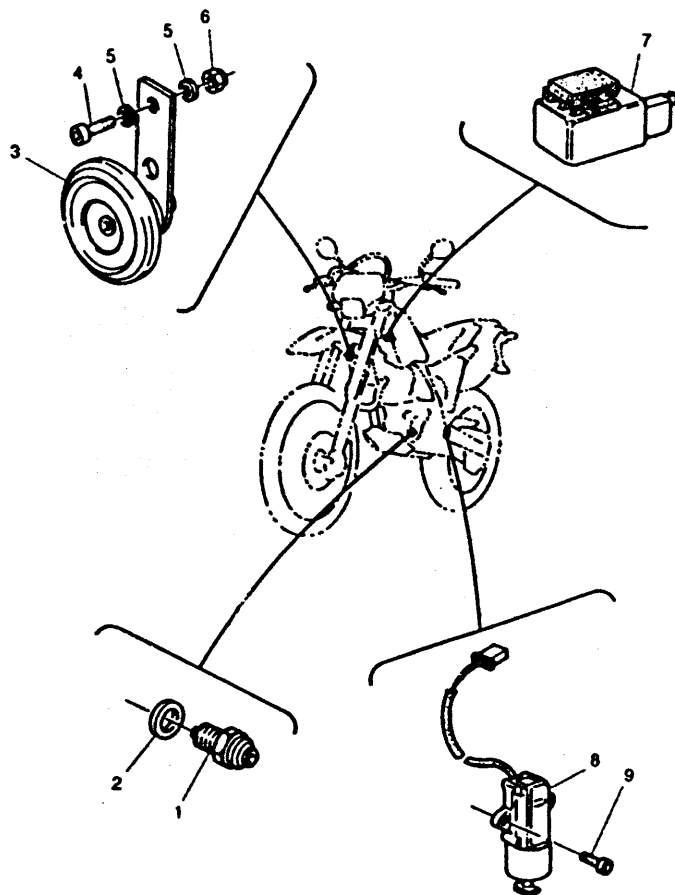


FIG. 42 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	4KM-82540-00	NEUTRAL SWITCH ASSY	1	
2	90430-10148	GASKET	1	
3	4SU-H3371-00	HORN	1	
4	9131L-06012	BOLT, hexagon socket head	1	
5	9290L-06600	WASHER, plain	2	
6	90183-06837	NUT, self-locking	1	
7	4GY-83350-00	FLASHER, relay assy	1	
8	3LD-82566-50	SW/ITCH, side stand	1	
9	90110-05835	BOLT, hexagon socket head	2	



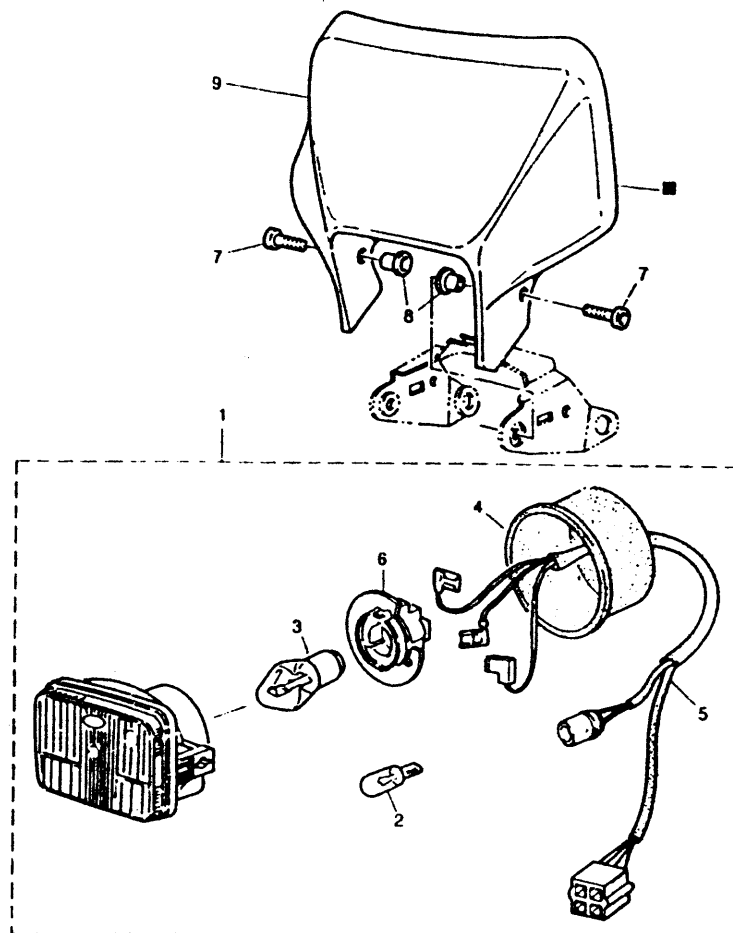


FIG. 43 HEADLIGHT (ONLY FOR AUSTRALIAN MARKET)

REF. NO.	PART NO.	DESCRIPTION	Q.TY	REMARKS
1	5CH-H4310-00	HEADLIGHT UNIT ASSY	1	
2		- BULB (12V-5W)	1	L.M.
3		- BULB (12V-35/35W)	1	L.M.
4	4GV-H4397-00	- COVER	1	
5	5CH-H4312-00	- SOCKET	1	
6	4GV-H4393-00	- HOLDER, bulb	1	

NOTE: ■ COLORED - ROUGH MATERIAL

