

Reparalotu.com



Leganza

Leganza

⑧ MODEL

This column indicates, Transaxle type, Trim level.

■ MODEL CHART

LEVEL(TRIM LEVEL)	T/A(TRANSAXLE)
S X : 2.0SOHC CDX : 2.0DOHC	M : MANUAL T/A A : AUTOMATIC T/A (4-SPD)

"LEVEL" column indicates the expression of applicable trim level.

S : Standard equipment.

O : Option equipment.


A : Available equipment for the special package according to the area regulation.

- : Not applied

⑨ OPTION

This column indicates option code.
refer to "VI.OPTION CODE TABLE"

ex) ○ ○ ○ ○

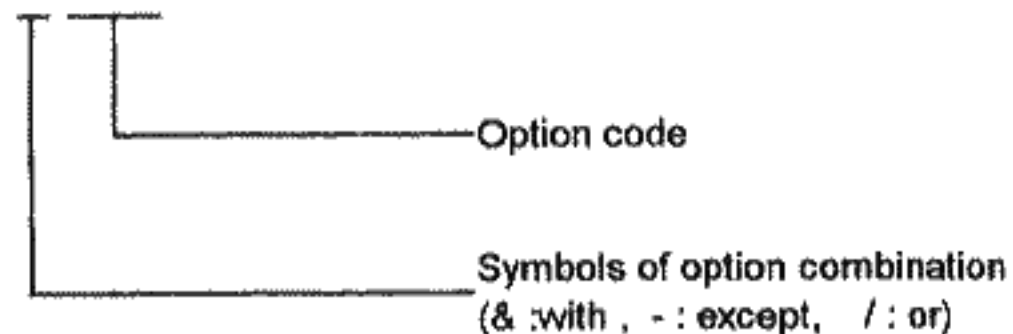**⑩ L/R**

This column indicates mounting position of part.

LH : Left hand side

RH : Right hand side

⑪ Q'TY

This column indicates the quantity required per sub-group.

The quantity are normally shown by numeric or by symbol as belows.

A : As required quantity.

⑫ EFFECTIVE DATE

This column indicates effective " date " in production.
It is shown by giving the year, month and day or start of production(S.O.P)

⑬ REMARKS


Supplementary or reference information is given in this column.
(contents)
Specification, Use, Type, Applicable country etc.

⑭ PART IDENTIFICATION CODE


This column indicates part identification code that is marked with two characters.
Parts identification code will help you in discriminating the parts easily.
but, all parts will not always carry the part identification code.

1**ENGINE**

- | | |
|-----------------------------------|--------------------------------------|
| 1112 ENGINE UNIT(2.0SOHC) | 1652 RADIATOR HOSE & PIPE(2.0SOHC) |
| 1113 ENGINE UNIT(2.0DOHC) | 1653 RADIATOR HOSE & PIPE(2.0DOHC) |
| 1121 SHORT ENGINE | 1682 THERMOSTAT(2.0SOHC) |
| 1130 BELT SYSTEM | 1683 THERMOSTAT(2.0DOHC) |
| 1142 REPAIR KIT(2.0SOHC) | 1691 OIL COOLER PIPE(4-SPEED A/T,ZF) |
| 1143 REPAIR KIT(2.0DOHC) | 1712 IGNITION CABLE(2.0SOHC) |
| 1211 ENGINE BLOCK | 1713 IGNITION CABLE(2.0DOHC) |
| 1221 CRANKSHAFT & PISTON | 1741 ALTERNATOR UNIT |
| 1231 OIL PAN & PUMP | 1752 ALTERNATOR MOUNT(2.0SOHC) |
| 1241 ENGINE OIL VENTILATION | 1753 ALTERNATOR MOUNT(2.0DOHC) |
| 1312 CYLINDER HEAD(2.0SOHC) | 1761 STARTER |
| 1313 CYLINDER HEAD(2.0DOHC) | 1910 ENGINE MOUNT |
| 1322 CAM SUPPORT & SHAFT(2.0SOHC) | |
| 1323 CAM SUPPORT & SHAFT(2.0DOHC) | |
| 1332 TIMING COVER(2.0SOHC) | |
| 1333 TIMING COVER(2.0DOHC) | |
| 1610 RADIATOR | |
| 1630 COOLING FAN | |

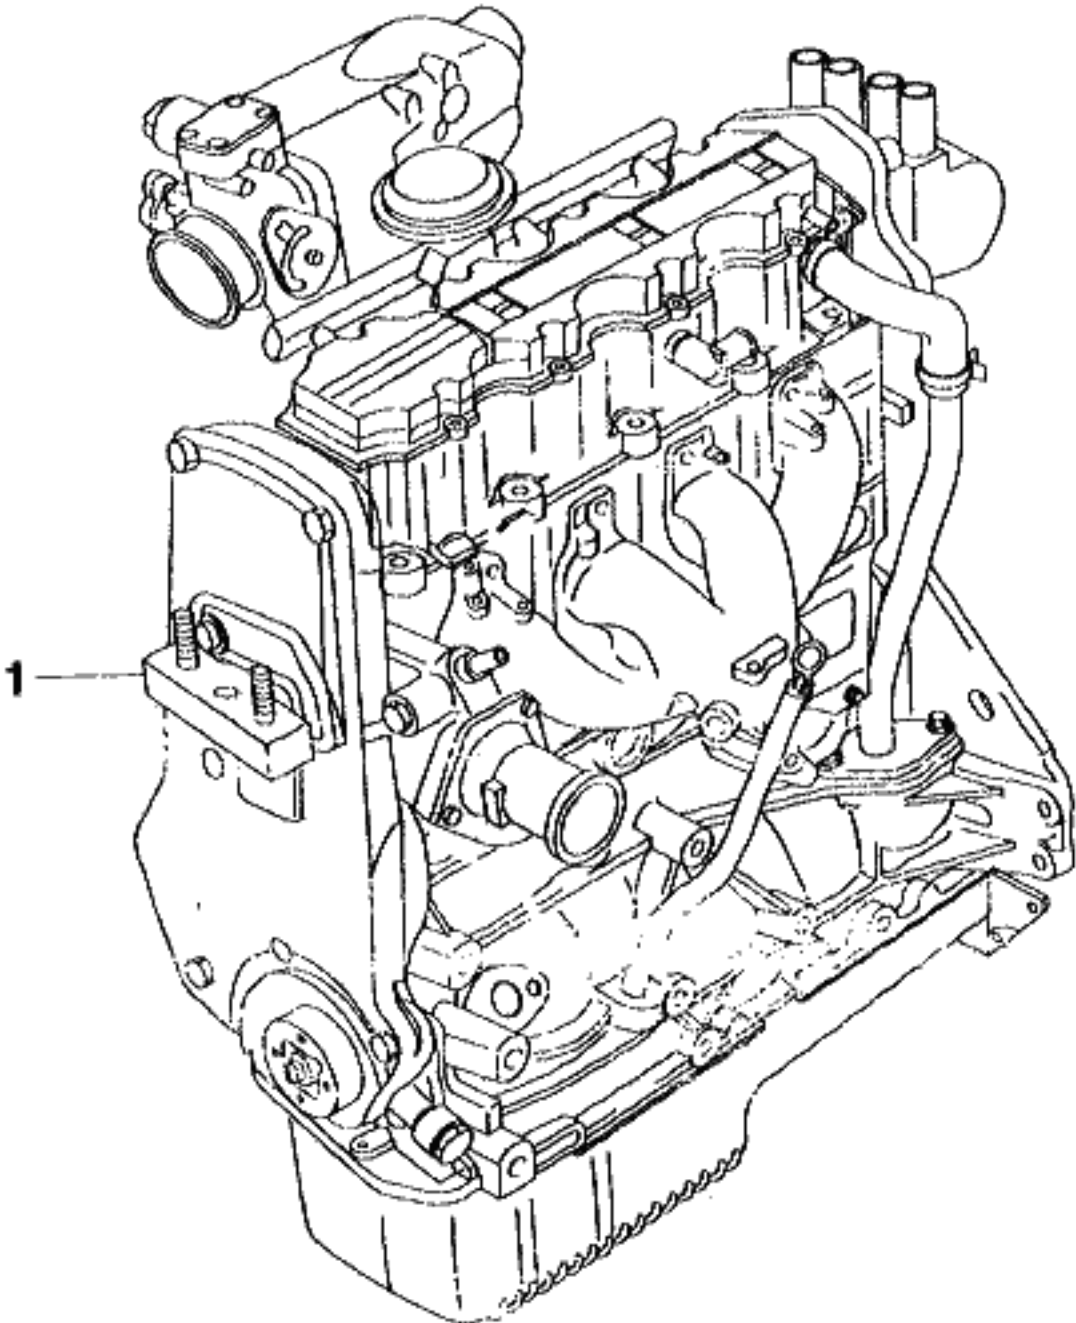


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)ENGINE A					(F)MOTEUR					
	92062580	(D)MOTOR	M	S .	8NN4/NN6		1				3J	
	92062581		A	O .	8NN4/NN6		1				3K	
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

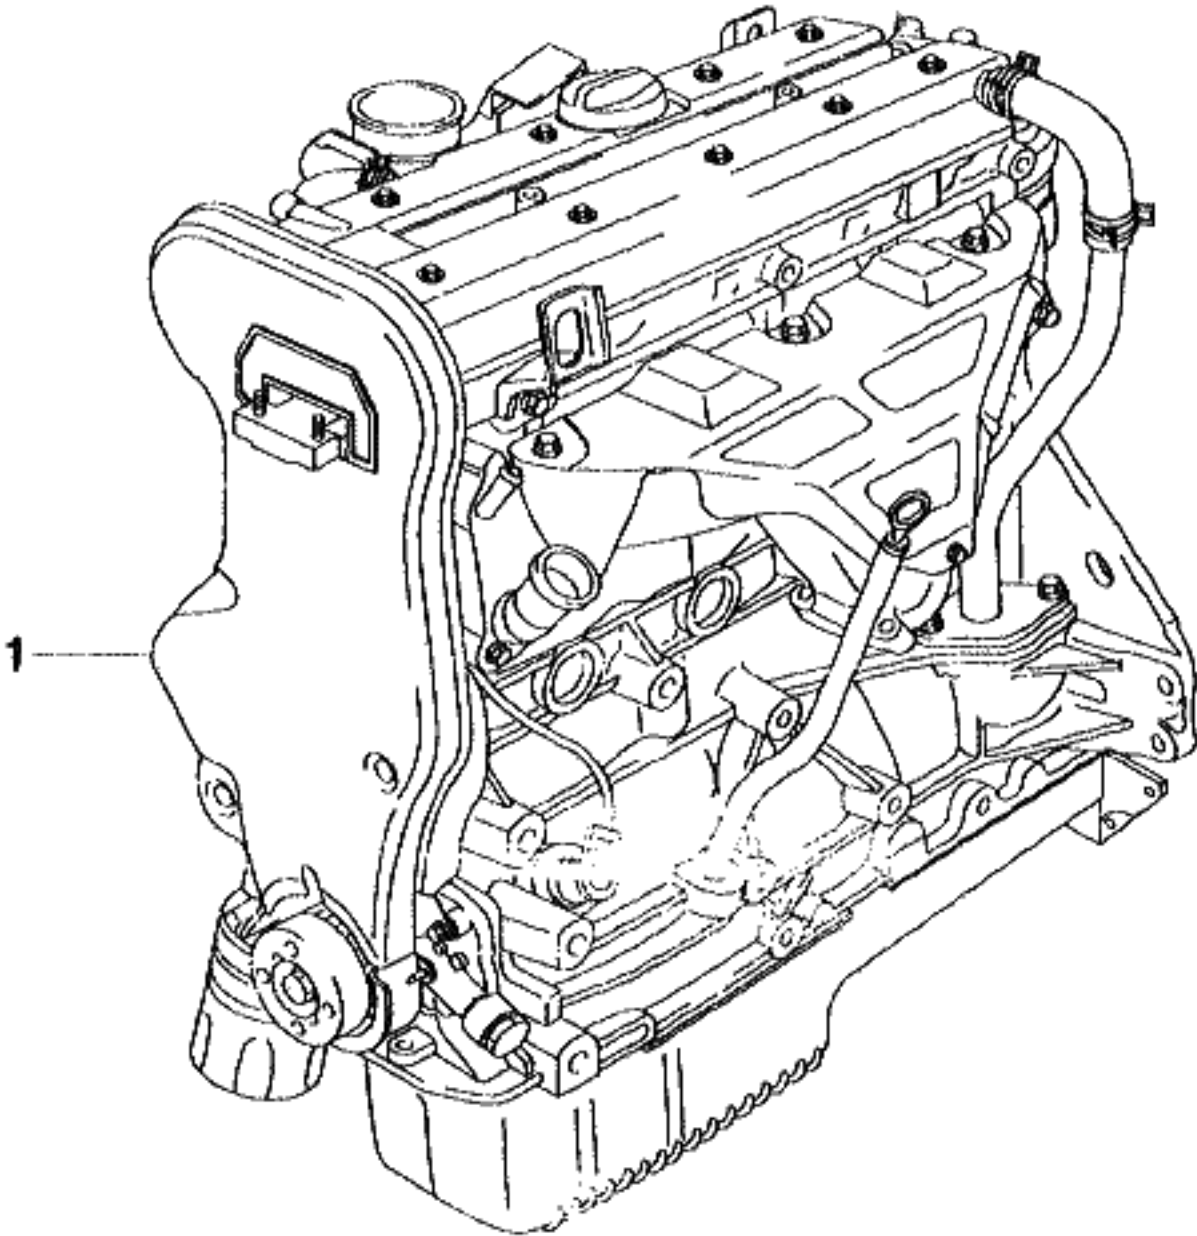


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)ENGINE A (D)MOTOR				(F)MOTEUR (S)MOTOR					
	92062532	M	O	S	&NN4/NN6-XBR		1				CN
	92062533	A	O	O	&NN4/NN6-XBR		1				CP
	92064206	M	A	A	&KL9&NN6&XBR		1				E7
	92064207	A	A	A	&KL9&NN6&XBR		1				E8
	92062659	M	A	A	&NN7		1				FS
	92062660	A	A	A	&NN7		1				FT
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

1

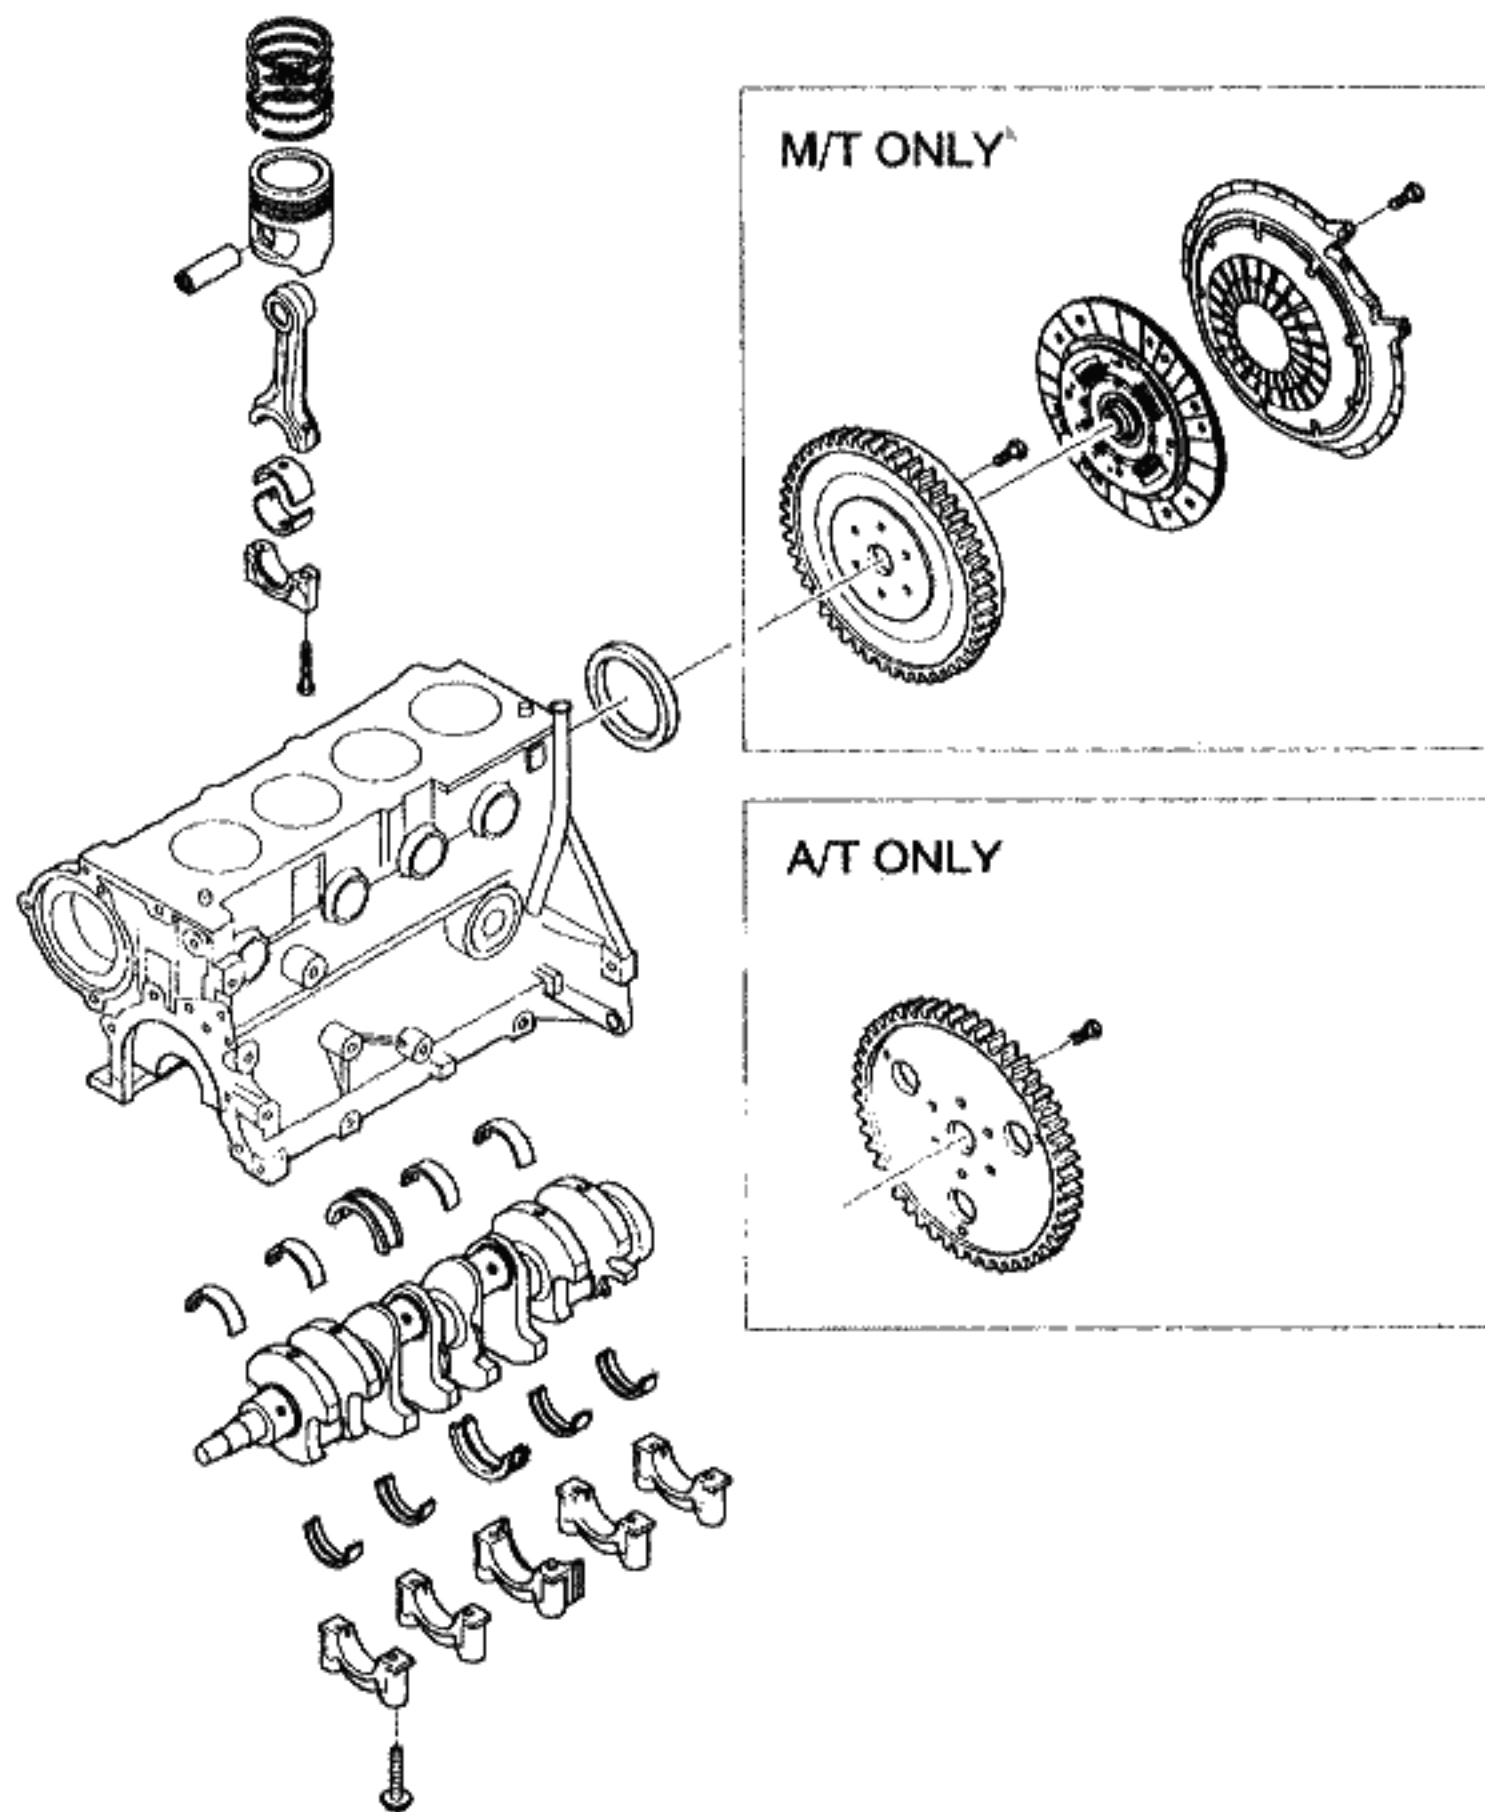


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SHORT BLOCK A (D)KURZ BLOCK				(F)BLOC COURT (S)BLOQUE CORTO					
	92063733	M	S	.			1				
	92063734	A	O	.			1				
	92063438	M	O	S	&L88		1				
	92063439	A	O	O	&L88		1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

1130 BELT SYSTEM

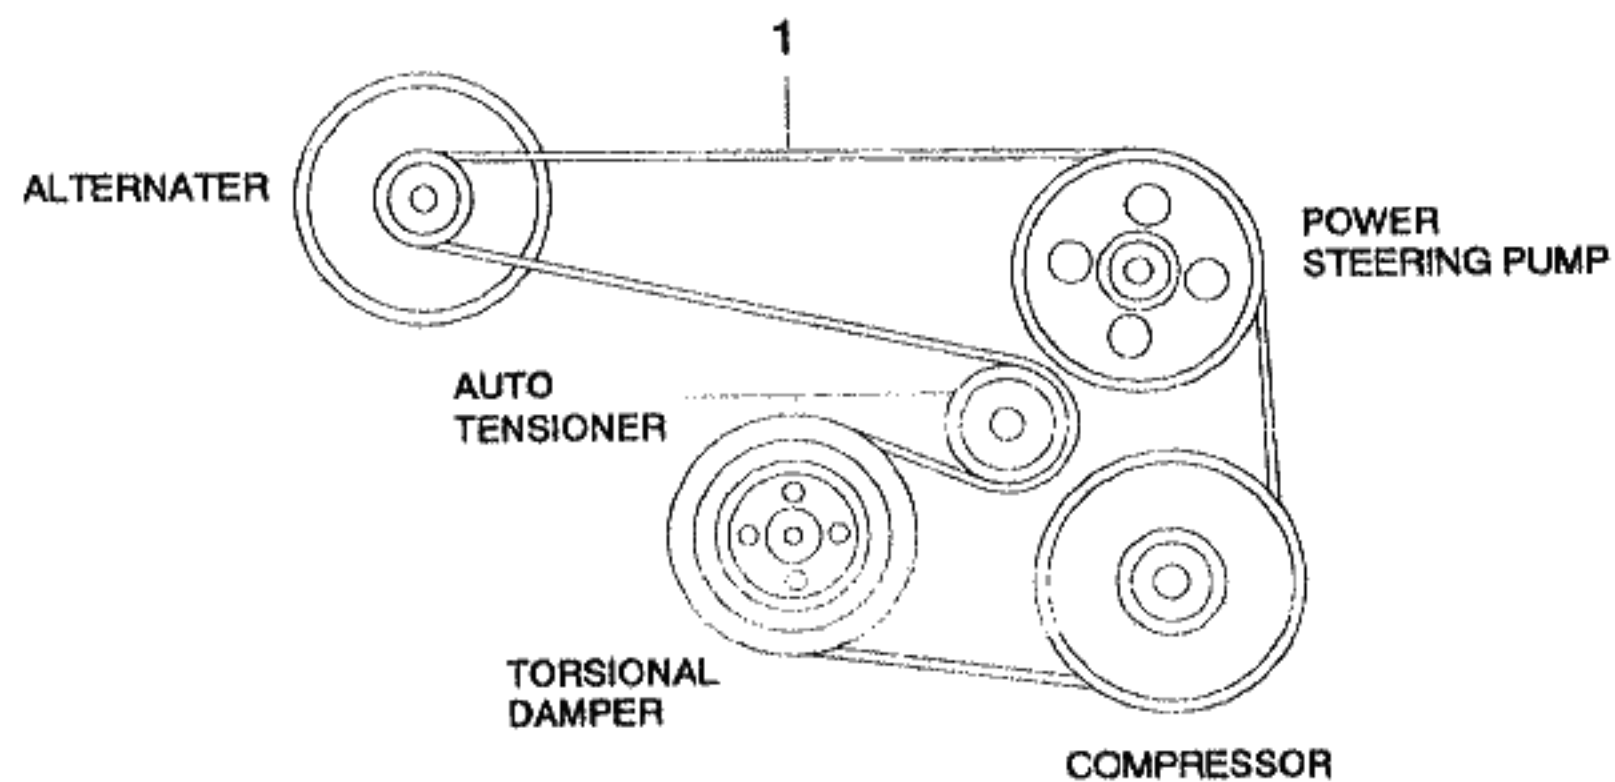

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01] 96350327 96350548	(E)BELT-ACCESSORY (D)GURT					(F)COURROIE (S)CORREA 1			NOT APPLIED		
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

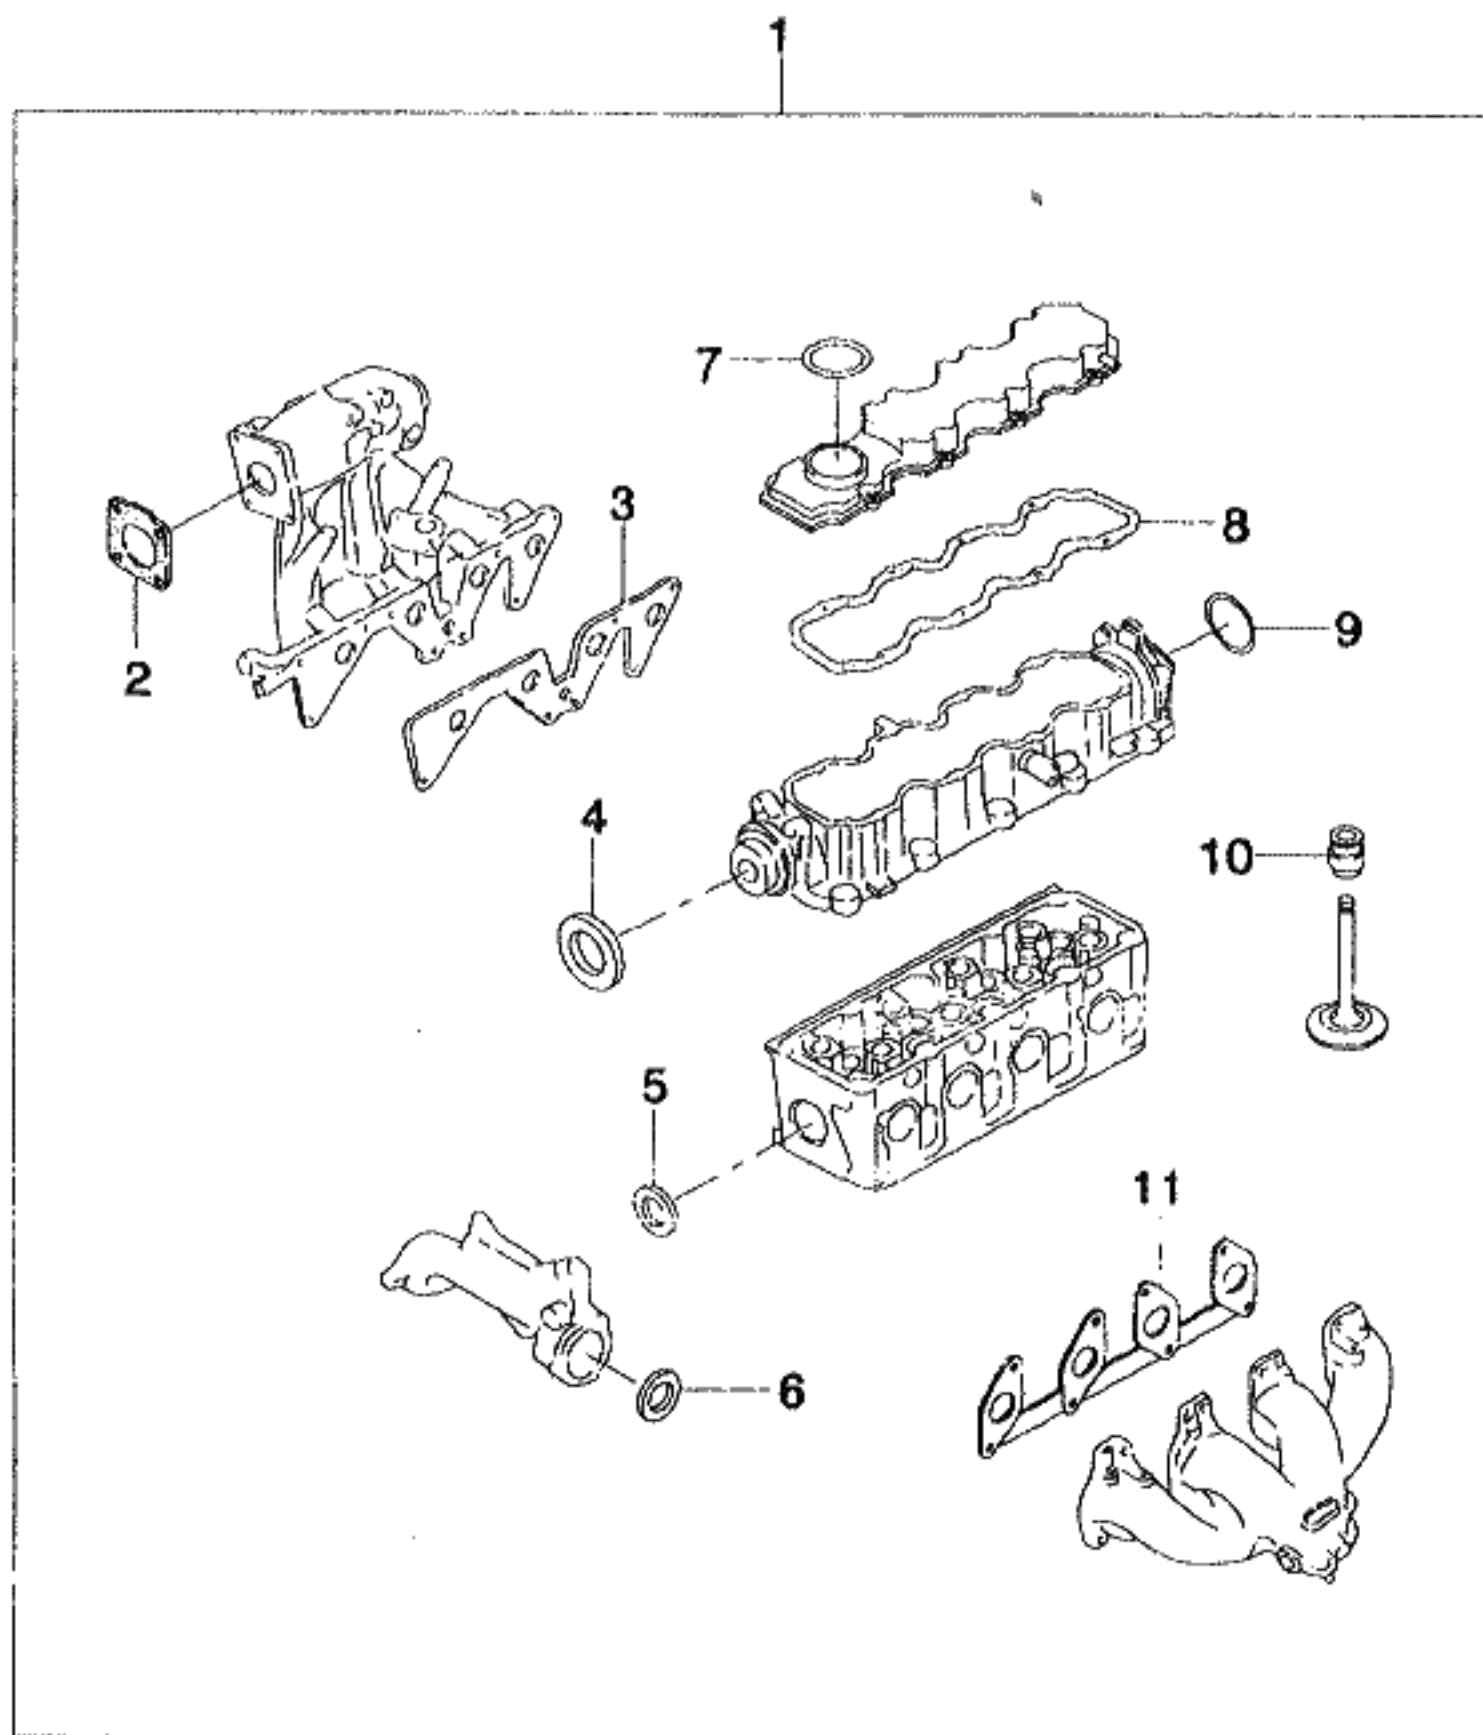

KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]	92061696		S	(E)GASKET KIT (D)DICHTUNG		(F)JOINT (S)JUNTA				
[02]	92060513		S	(E)GASKET-THROTTLE BODY (D)DICHTUNG,DROSSEL KÖRPER		(F)JOINT (S)JUNTA				
[03]	92060514		S	(E)GASKET-INTAKE MANIFOLD (D)DICHTUNG,SAMMELLEITUNG		(F)JOINT (S)JUNTA-COLECTOR DE				
[04]	90280463		S	(E)RING-SHAFT SEAL (D)DICHTUNG		(F)JOINT (S)SELLO				
[05]	90118437		S	(E)RING-SEAL THERMO HOUSING (D)RING,DICHTUNG		(F)ANNEAU-JOINT (S)ANILLO-SELLO				
[06]	90220436		S	(E)RING-THERMOSTAT CAP (D)RING,THERMOSTAT KAPPE		(F)ANNEAU (S)ANILLO-TAPA DE			TERMOSTATO	
[07]	90448217		S	(E)GASKET-OIL FILLER (D)DICHTUNG		(F)JOINT (S)JUNTA				
[08]	90467661		S	(E)GASKET-COVER TO SUPPORT (D)DICHTUNG		(F)JOINT (S)JUNTA				
[09]	01972943		S	(E)RING-IGN COIL SUPT MTG (D)RING		(F)ANNEAU (S)ANILLO				
[10]	90215296		S	(E)SEAL-VALVE STEM (D)DICHTUNG,VENTIL STIEL		(F)JOINT-TIGE DE SOUPAPE (S)SELLO-TALLO DE VALVULA				


LEVEL

S X = 2.0 SOHC



CDX = 2.0 DOHC

T/A(TRANSAXLE)



 M = MANUAL T/A
 A = AUTOMATIC T/A
 . = COMMON

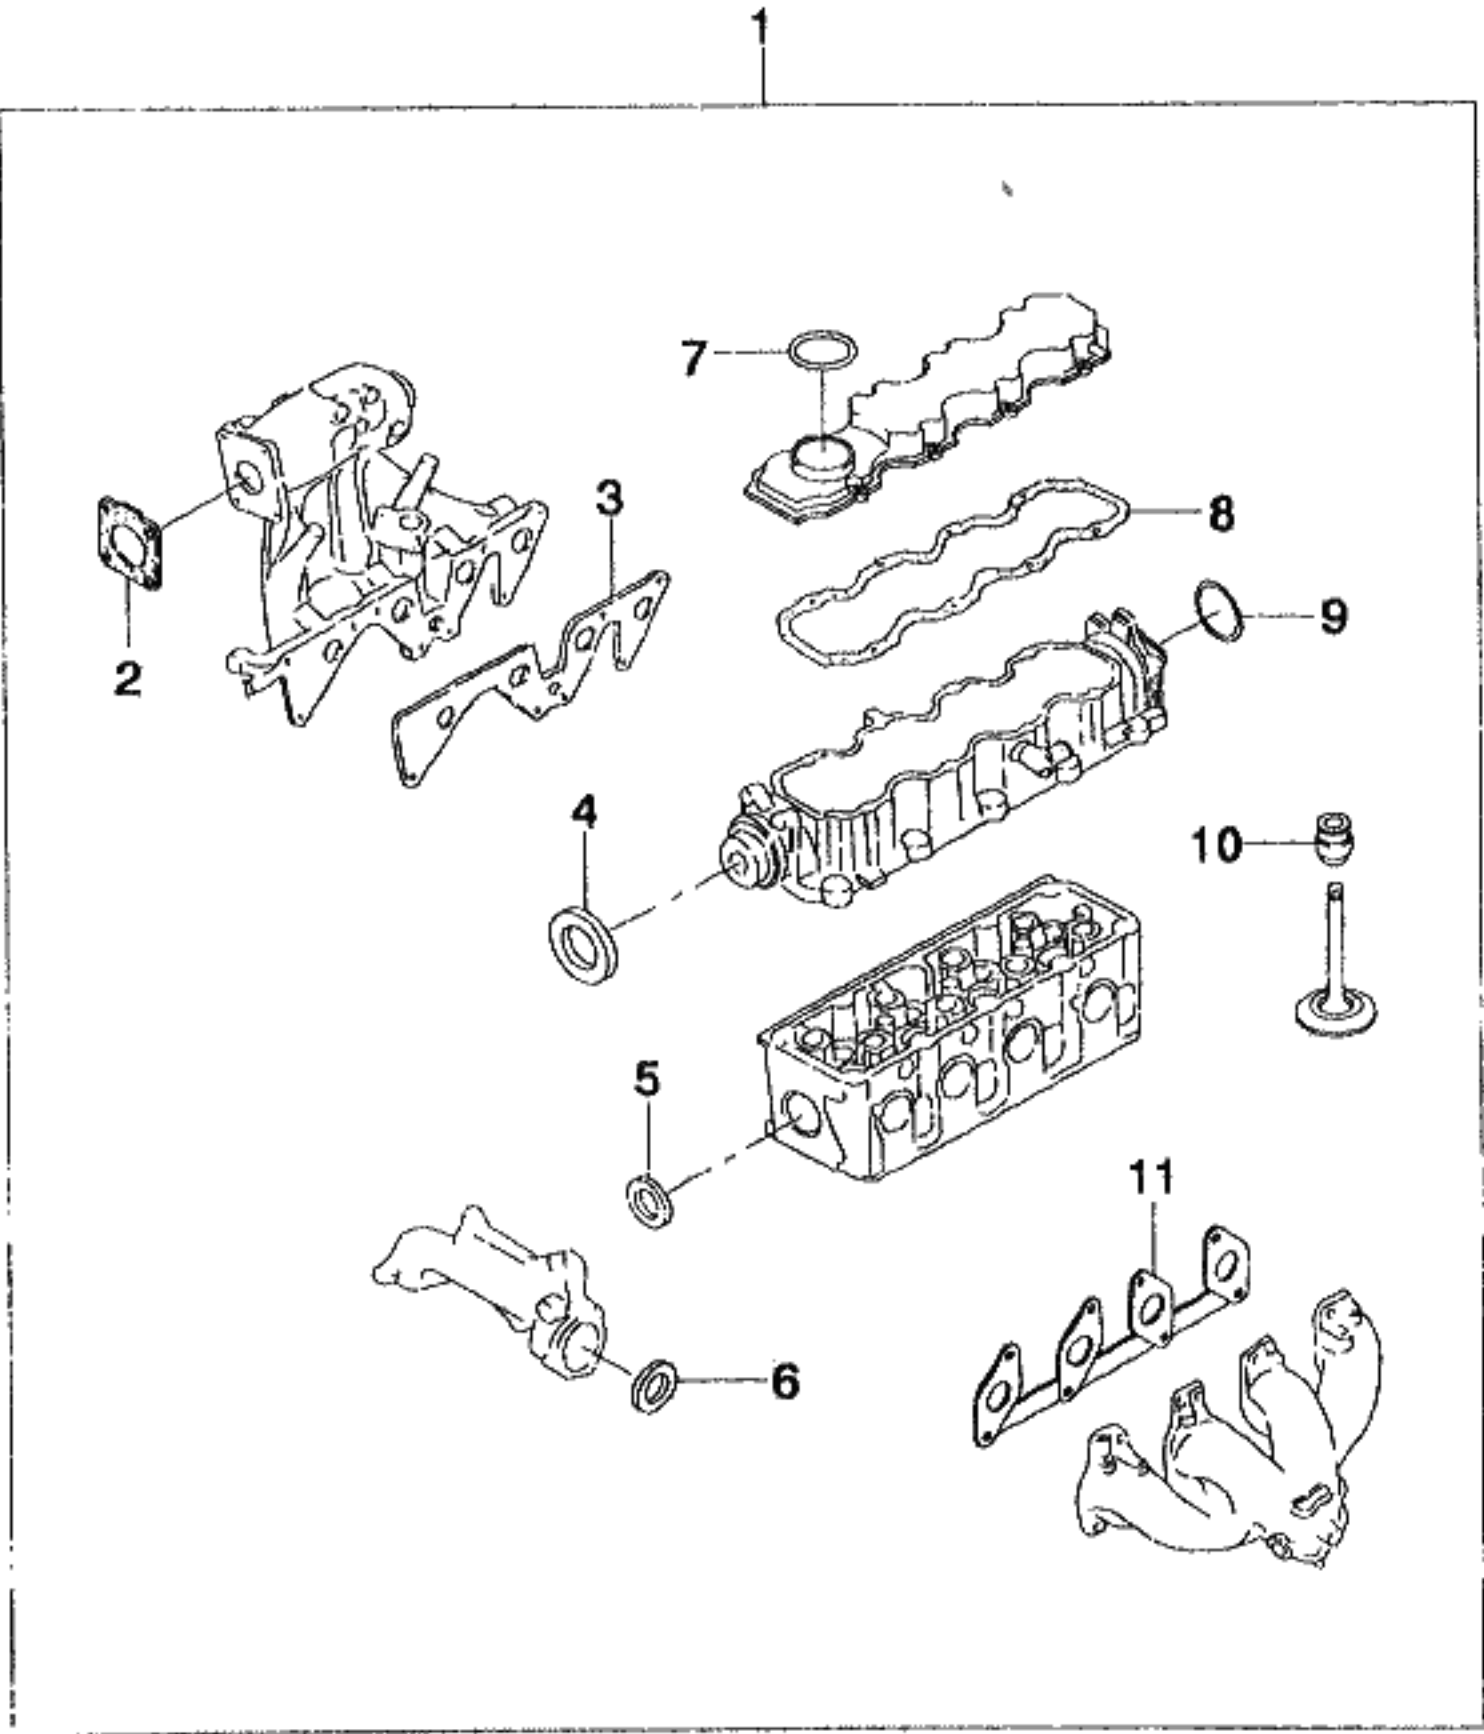



KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 92060515	(E)GASKET-EXH MANIFOLD (D)DICHTUNG	S				(F)JOINT (S)JUNTA 1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

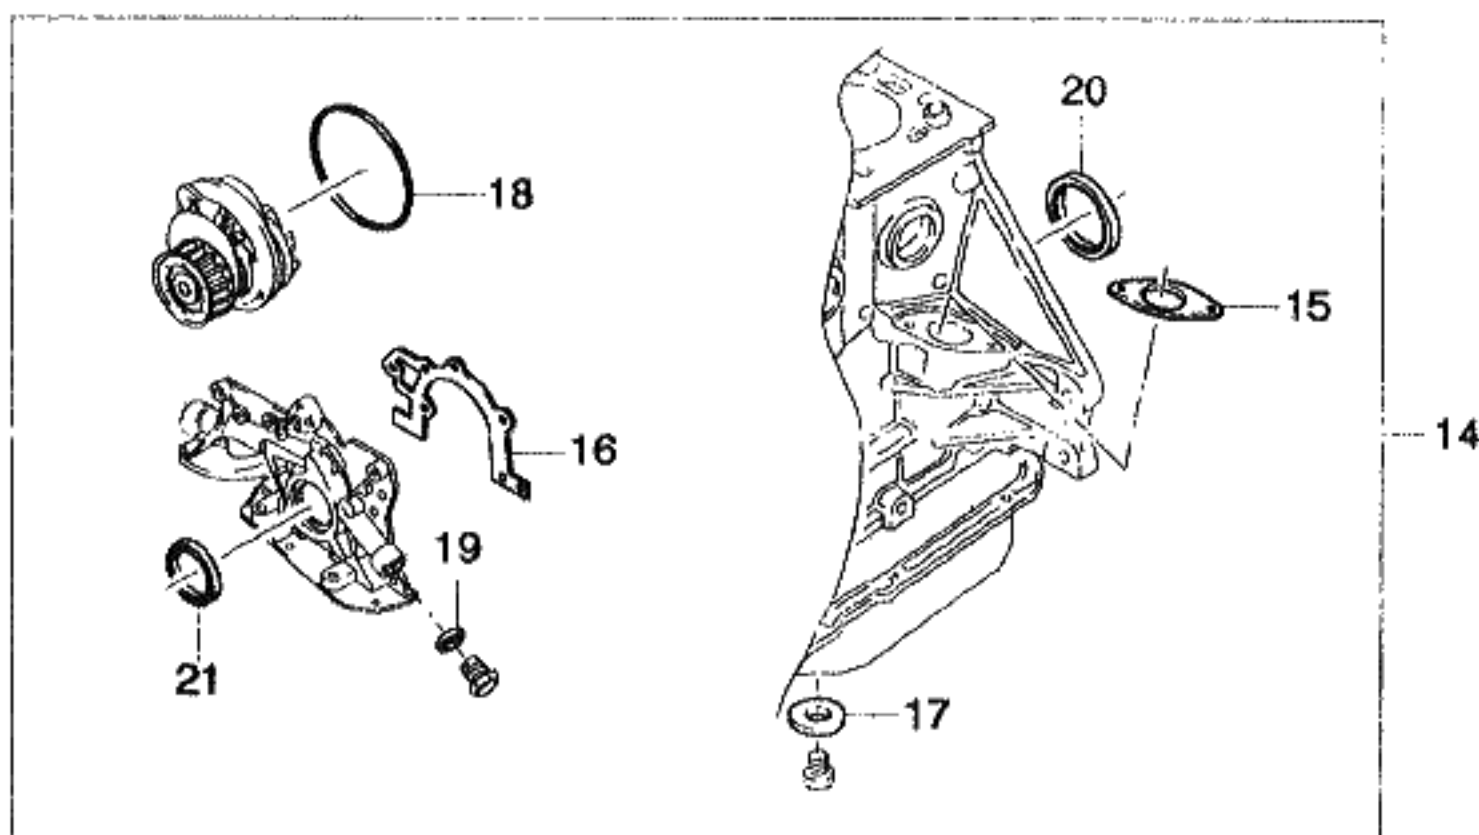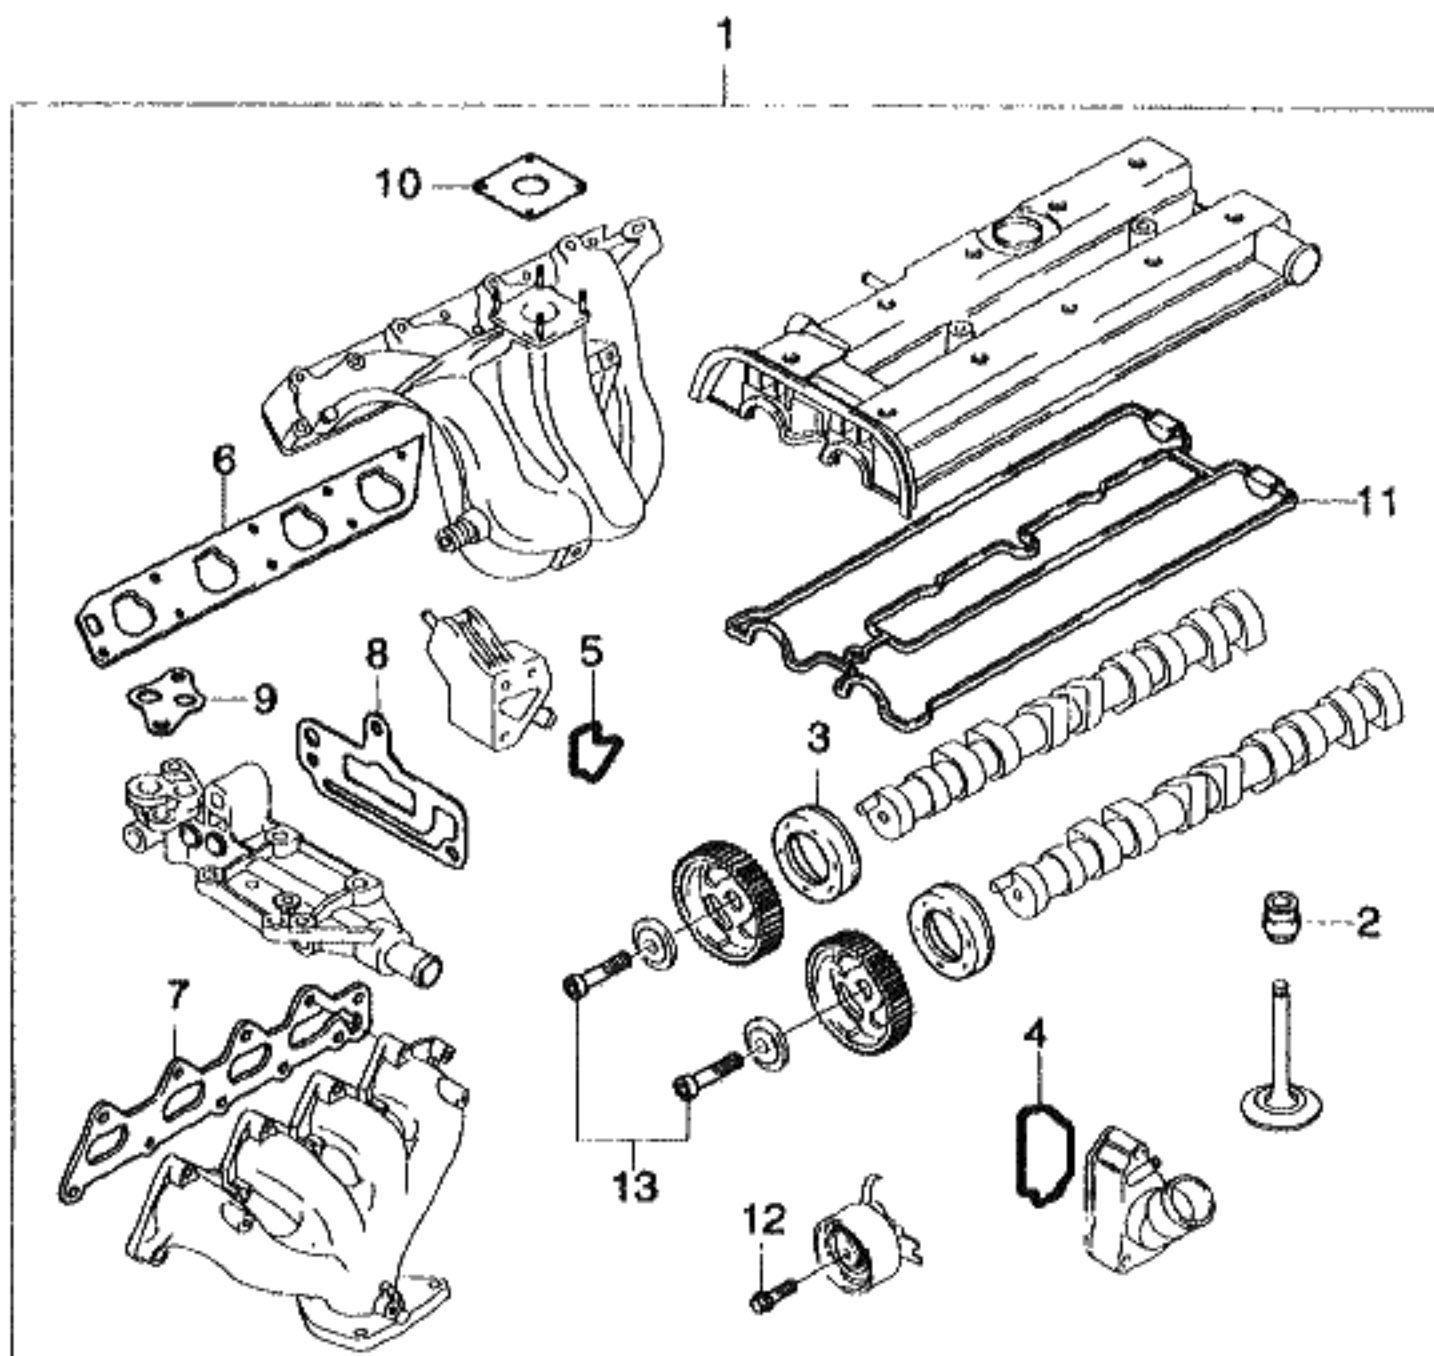


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
			S X	C D X						
[01]	(E)GASKET KIT-ENG OVERHAUL (D)DICHTUNG					(F)JOINT (S)JUNTA				
92062023			O S	&NN4/NN6		1			NOT APPLIED	
92064383			A A	&NN7		1			INCL.#2~13	
92064384									INCL.#2~13	
[02]	(E)SEAL A-VALVE STEM (D)DICHTUNG,VENTIL STIEL					(F)JOINT-TIGE DE SOUPAPE (S)SELLO-TALLO DE VALVULA				
90410741			O S			16				
[03]	(E)RING-SHAFT SEAL (D)DICHTUNG					(F)JOINT (S)SELLO				
90280463			O S			2				
[04]	(E)RING-THERMOSTAT (D)RING					(F)ANNEAU (S)ANILLO				
90411950			O S			1				
[05]	(E)SEAL-BYPASS HOUSING (D)DICHTUNG					(F)JOINT (S)SELLO				
90411954			O S			1				
[06]	(E)GASKET-INTAKE MANIFOLD (D)DICHTUNG,SAMMELLEITUNG					(F)JOINT (S)JUNTA-COLECTOR DE				
90412459			O S			1				
[07]	(E)GASKET-EXHAUST MANIFOLD (D)DICHTUNG,SAMMELLEITUNG					(F)JOINT (S)JUNTA-COLECTOR DE ESCAPE				
92063309			O S	&NN4/NN6		1				
92063157			A A	&NN7		1				
[08]	(E)GASKET-EGR & IGN ADAPTER (D)DICHTUNG					(F)JOINT (S)JUNTA				
92063245			O S			1				
[09]	(E)SEAL-EGR,RETURN FLOW (D)DICHTUNG					(F)JOINT (S)JUNTA				
92061674			O S			1				
LEVEL					T/A(TRANSAXLE)					
S X = 2.0 SOHC					M = MANUAL T/A					
CDX = 2.0 DOHC					A = AUTOMATIC T/A					
					. = COMMON					

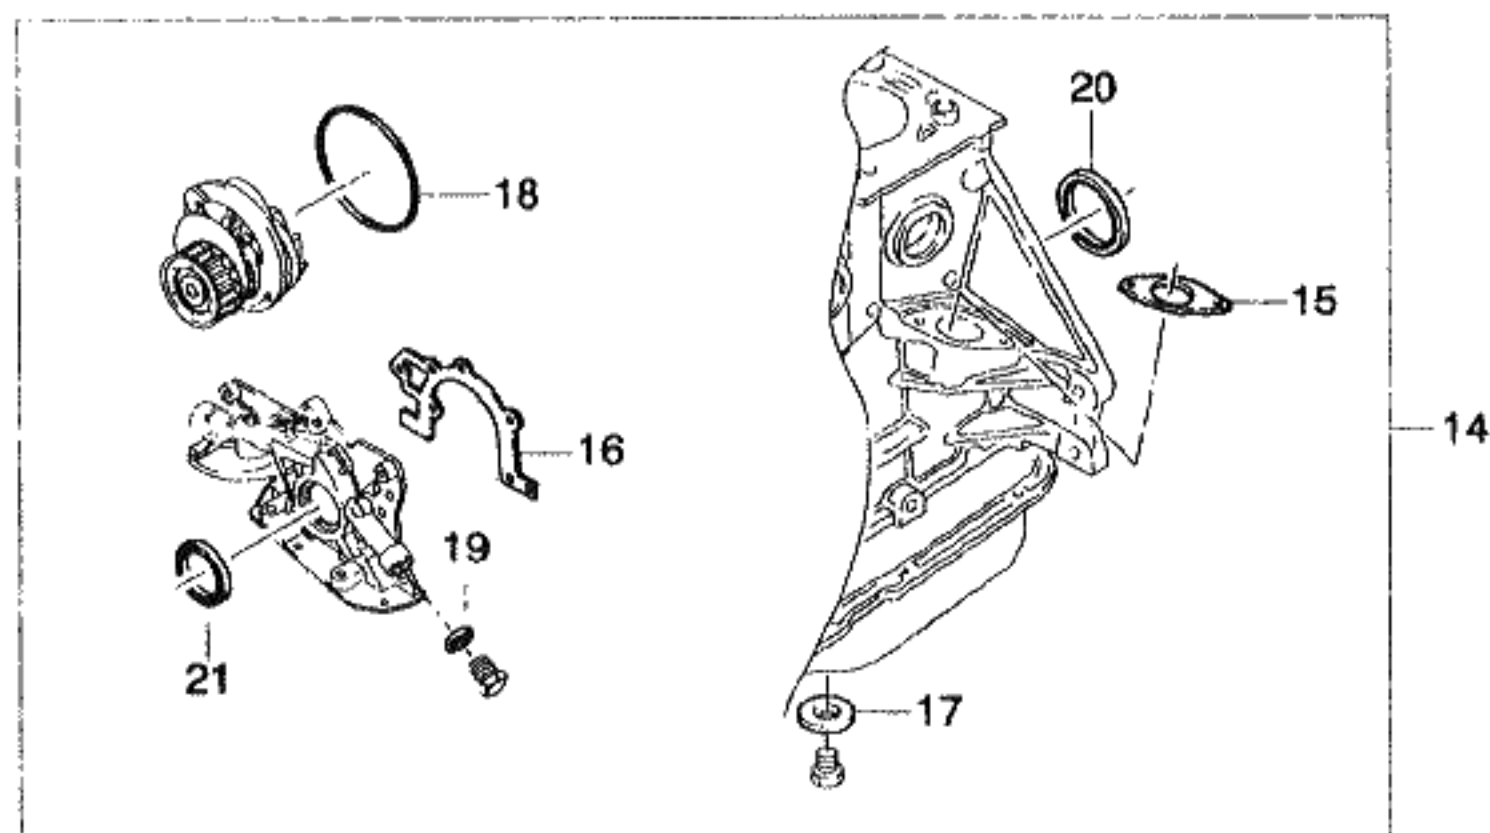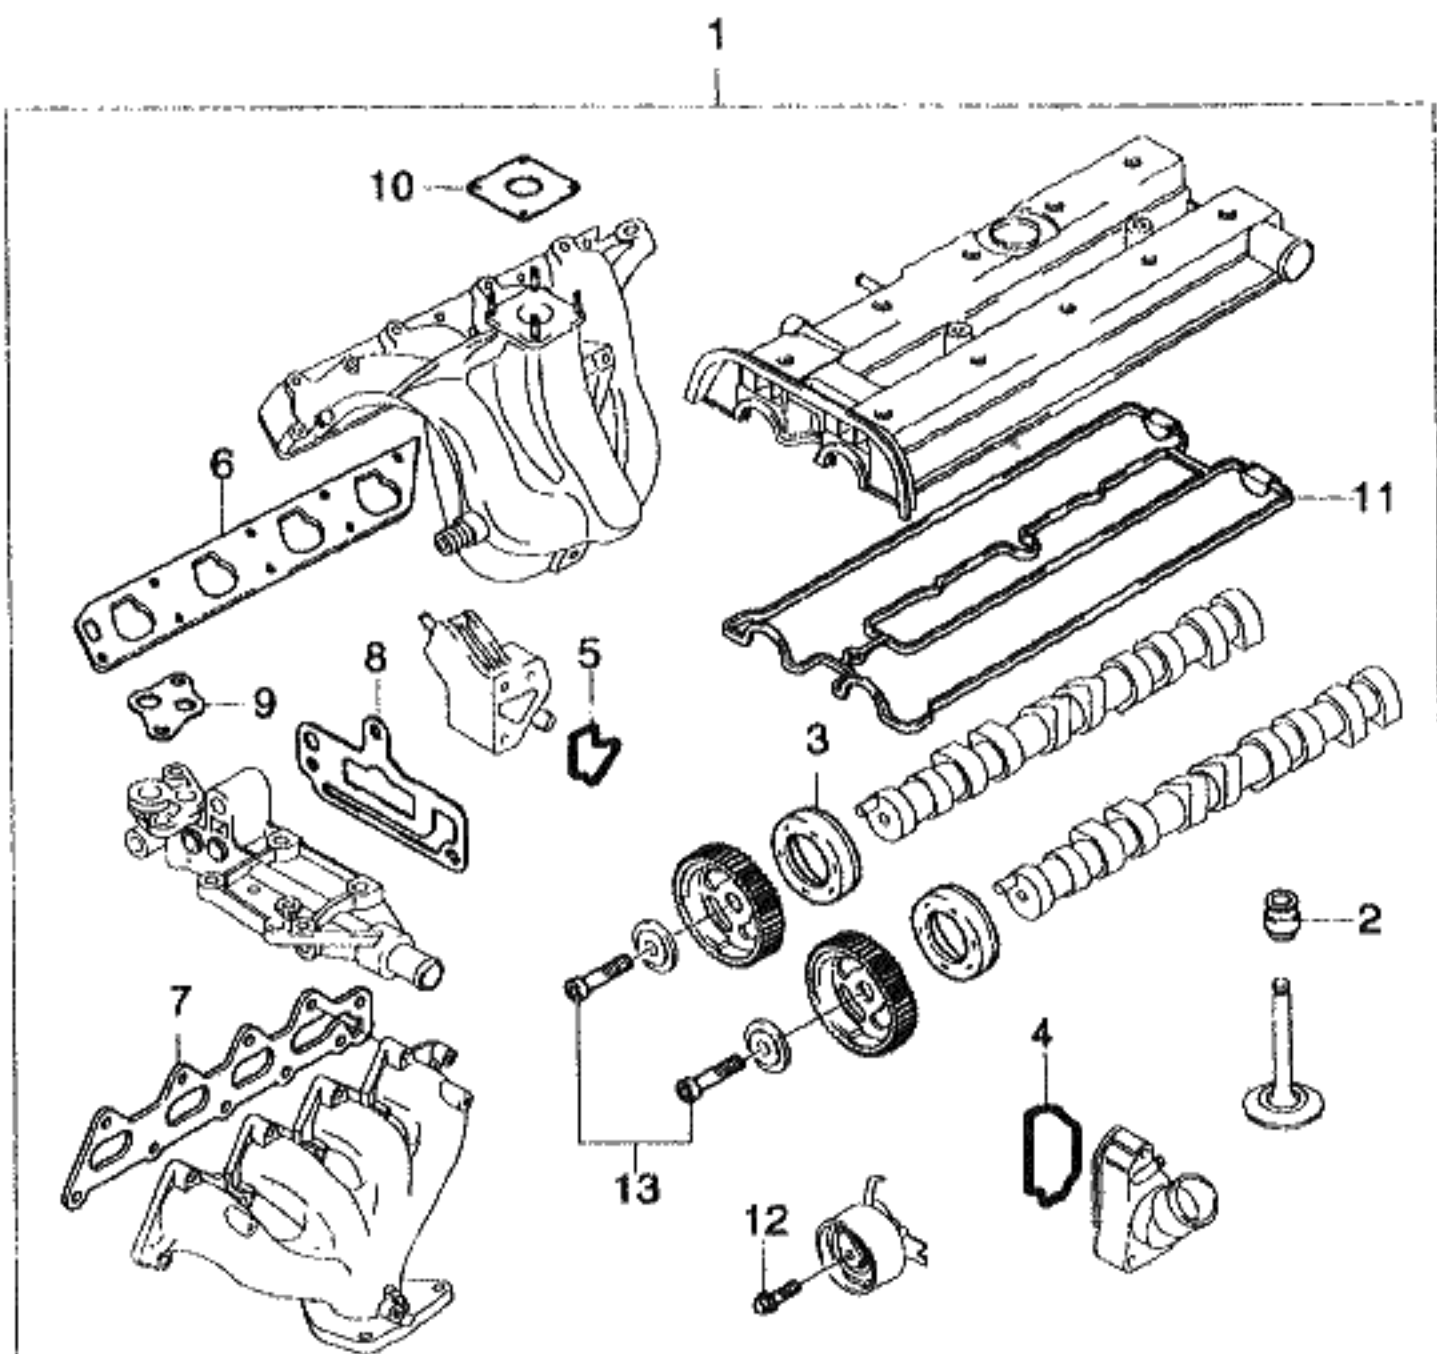


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10] 90412686	(E)GASKET-THROTTLE BODY (D)DICHTUNG				(F)JOINT (S)JUNTA	1					
	[11] 90501944	(E)GASKET-CAM COVER HOOD (D)DICHTUNG				(F)JOINT-CARTER (S)JUNTA	1					
	[12] 11084141	(E)SCREW (D)SCHRAUBE				(F)BOULON (S)PERNO	1					
	[13] 90466737	(E)BOLT-GEAR TO CAMSHAFT (D)SCHRAUBE				(F)BOULON (S)PERNO	2					
	[14] 92061971	(E)GASKET KIT-ENG OVERHAUL (D)DICHTUNGS-SATZ,ÜBERHOLUN			&L76/L88	(F)JEU DE JOINTS (S)JUEGO DE JUNTA	1			INCL.#15~21		
	[15] 90500571	(E)GASKET-ENG VENTILATION (D)DICHTUNG,MOTOR BELÜFTUNG			&L76/L88	(F)JOINT-VENTILATION MOTEUR (S)JUNTA	1					
	[16] 92060519	(E)GASKET-OIL PUMP (D)DICHTUNG			&L76/L88	(F)JOINT (S)JUNTA	1					
	[17] 11023589	(E)GASKET-OIL PAN DRAIN PLUG (D)DICHTUNG			&L76/L88	(F)JOINT (S)JUNTA	1					
	[18] 90322506	(E)RING-SEAL,WATER PUMP (D)DICHTUNG			&L76/L88	(F)JOINT (S)SELLO	1					
	[19] 11093042	(E)RING-SEAL (D)RING,ÖLPUMPE DICHTUNG			&L76/L88	(F)ANNEAU (S)ANILLO-SELLO	1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

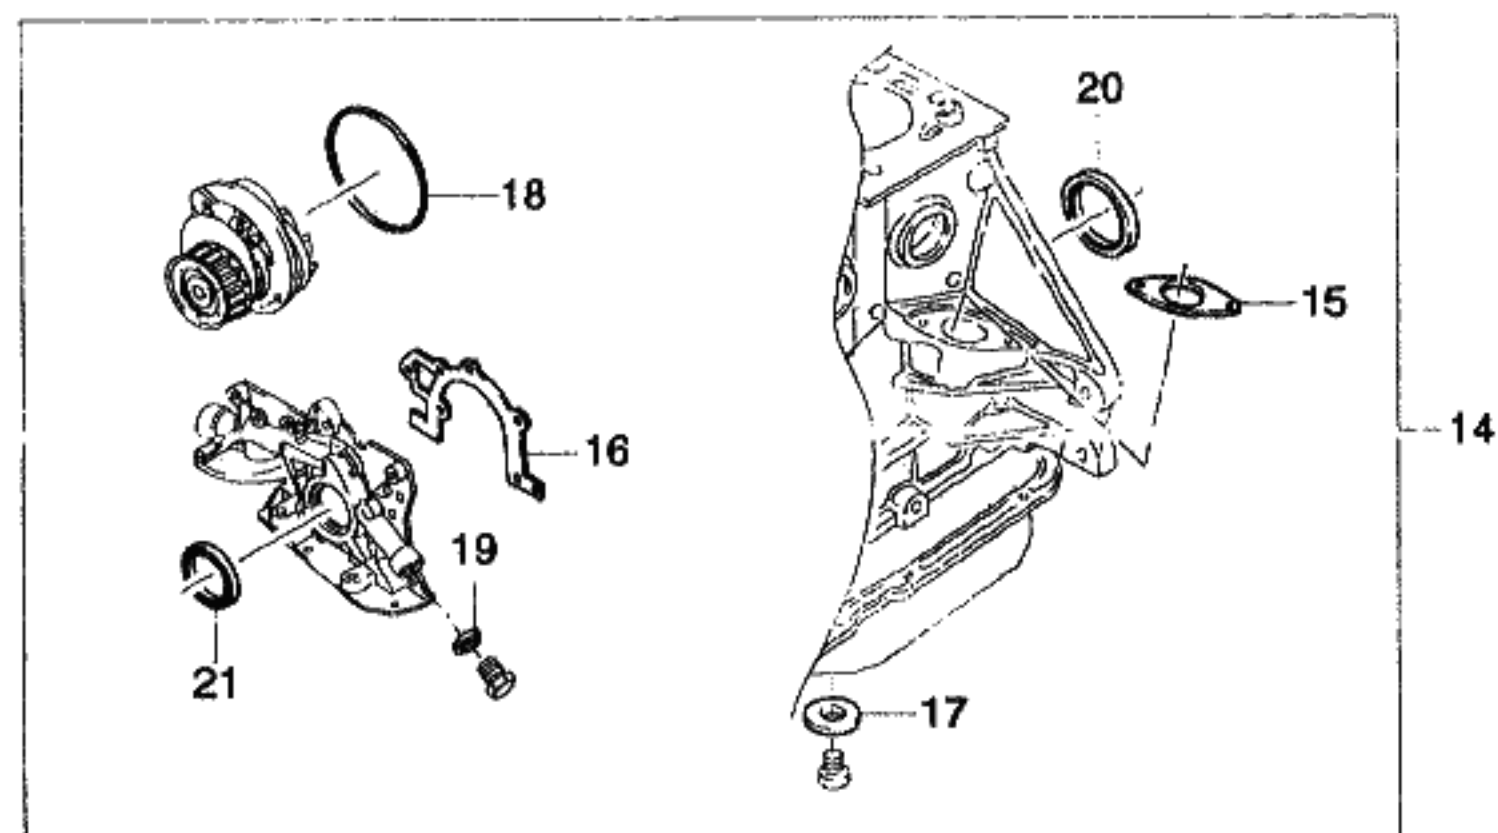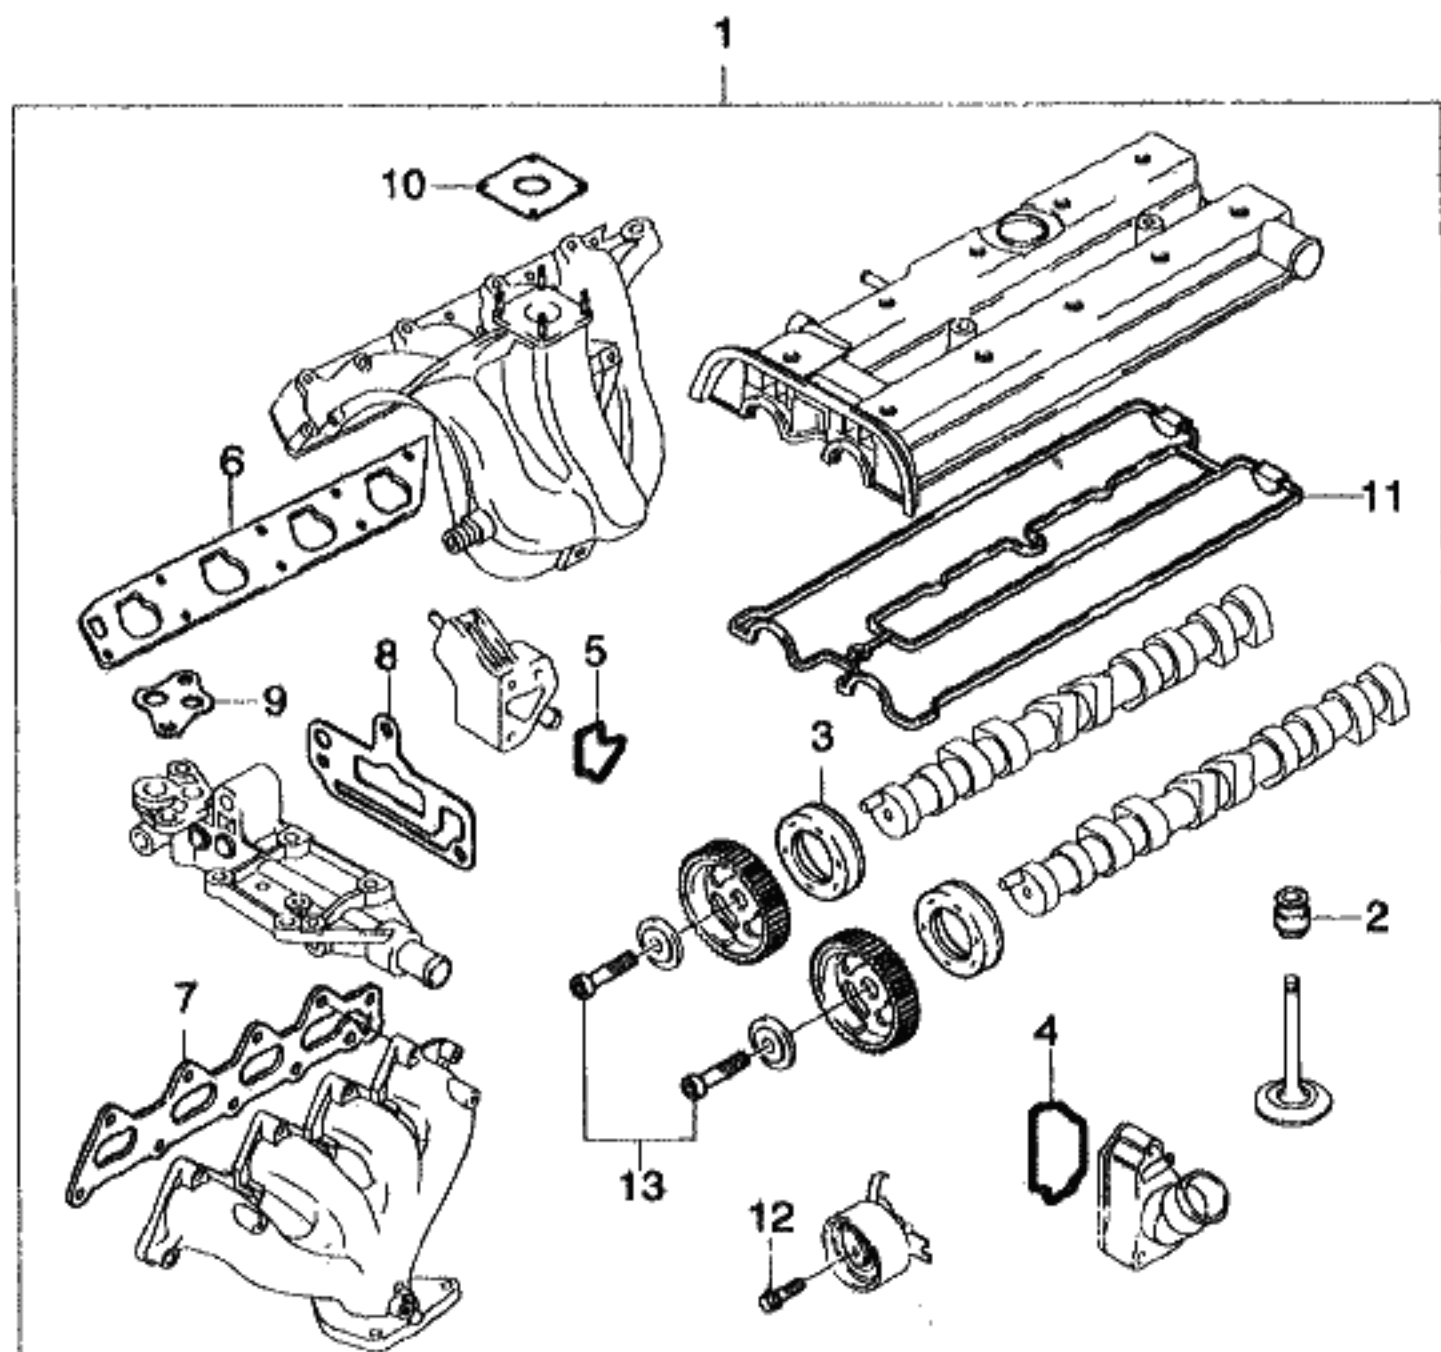

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[20] 90298408	(E)SEAL-CRANKSHAFT RR (D)DICHTUNG	S	S	&L76/L88		(F)JOINT (S)SELLO 1				
	[21] 90183572	(E)RING-SEAL,OIL PUMP (D)DICHTUNG	S	S	&L76/L88		(F)JOINT (S)SELLO 1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

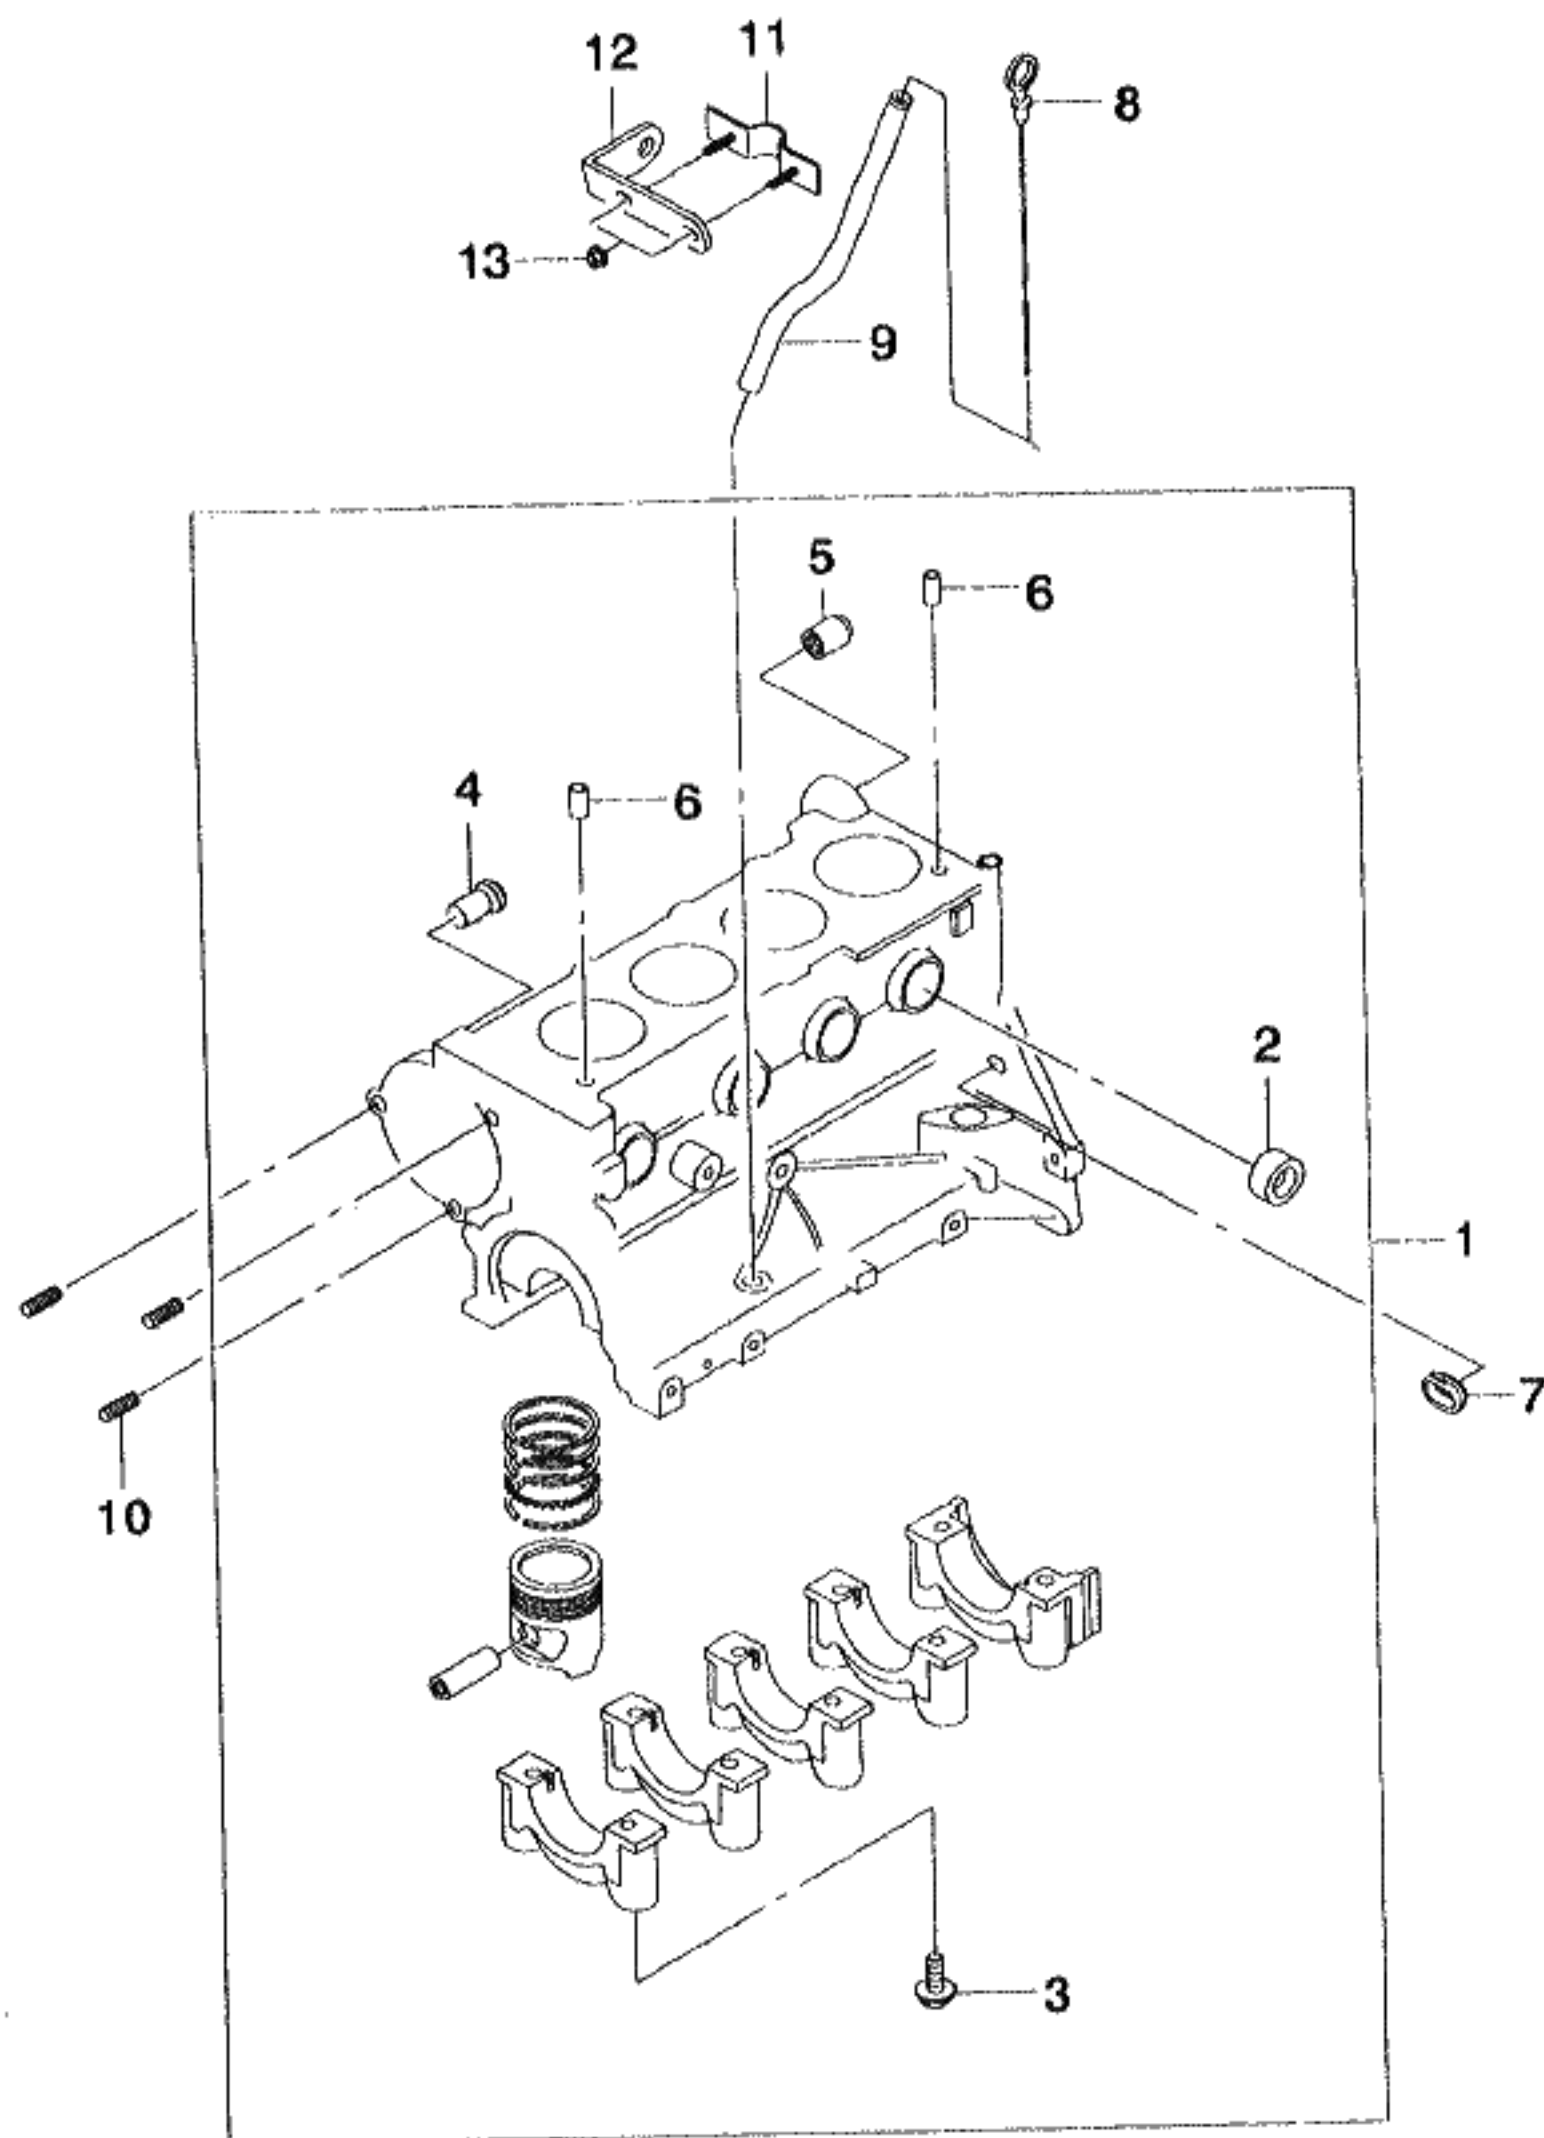


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)BLOCK A-CYLINDER (D)BLOCK,ZYLINDER				(F)BLOC-CYLINDRE (S)BLOQUE-CILINDRO						
	92063732	S				1						
	92063427	O	S	&L88		1						
	[02]	(E)CAP (D)DECKEL				(F)CHAPEAU (S)TAPA						
	11056093	S	S			7				34mm		
	11070803	S	S			A				O/S,36mm		
	[03]	(E)BOLT-CRANKSHAFT CAP (D)SCHRAUBE				(F)BOULON (S)PERNO						
	90502412	S	S			10						
	[04]	(E)NECK-WATER INLET (D)HALS,WASSERLEITUNG				(F)COU-ENTREE EAU (S)CUELLO-ENTRADA DE AGUA						
	90128407	S	S			1						
	[05]	(E)SLEEVE-CLUTCH HOUSING (D)HÜLSE,KUPPLUNG GEHÄUSE				(F)CHEMISE (S)MANGA-CARTER DE EMBRAGUE						
	90108591	S	S			2						
	[06]	(E)SLEEVE (D)HÜLSE,KUPPLUNG GEHÄUSE				(F)CHEMISE (S)MANGA-CARTER DE EMBRAGUE						
	90144241	S	S			2						
	[07]	(E)CAP-CYLINDER BLOCK (D)DECKEL				(F)CHAPEAU (S)TAPA						
	96351041	S	S			1						
	[08]	(E)STICK-OIL LEVEL GAUGE (D)MEßSTAB,ÖL PEGEL				(F)JAUGE (S)VARILLA-MEDIDOR						
	92062803	S	S			1						
	[09]	(E)TUBE-OIL LEVEL STICK (D)ROHRLEITUNG,MEßSTAB				(F)TUYAU-JAUGE EN BATON (S)TUBO-VARILLA DE MEDIDOR						
	92062836									NOT APPLIED		
	92064172	S	S			1						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

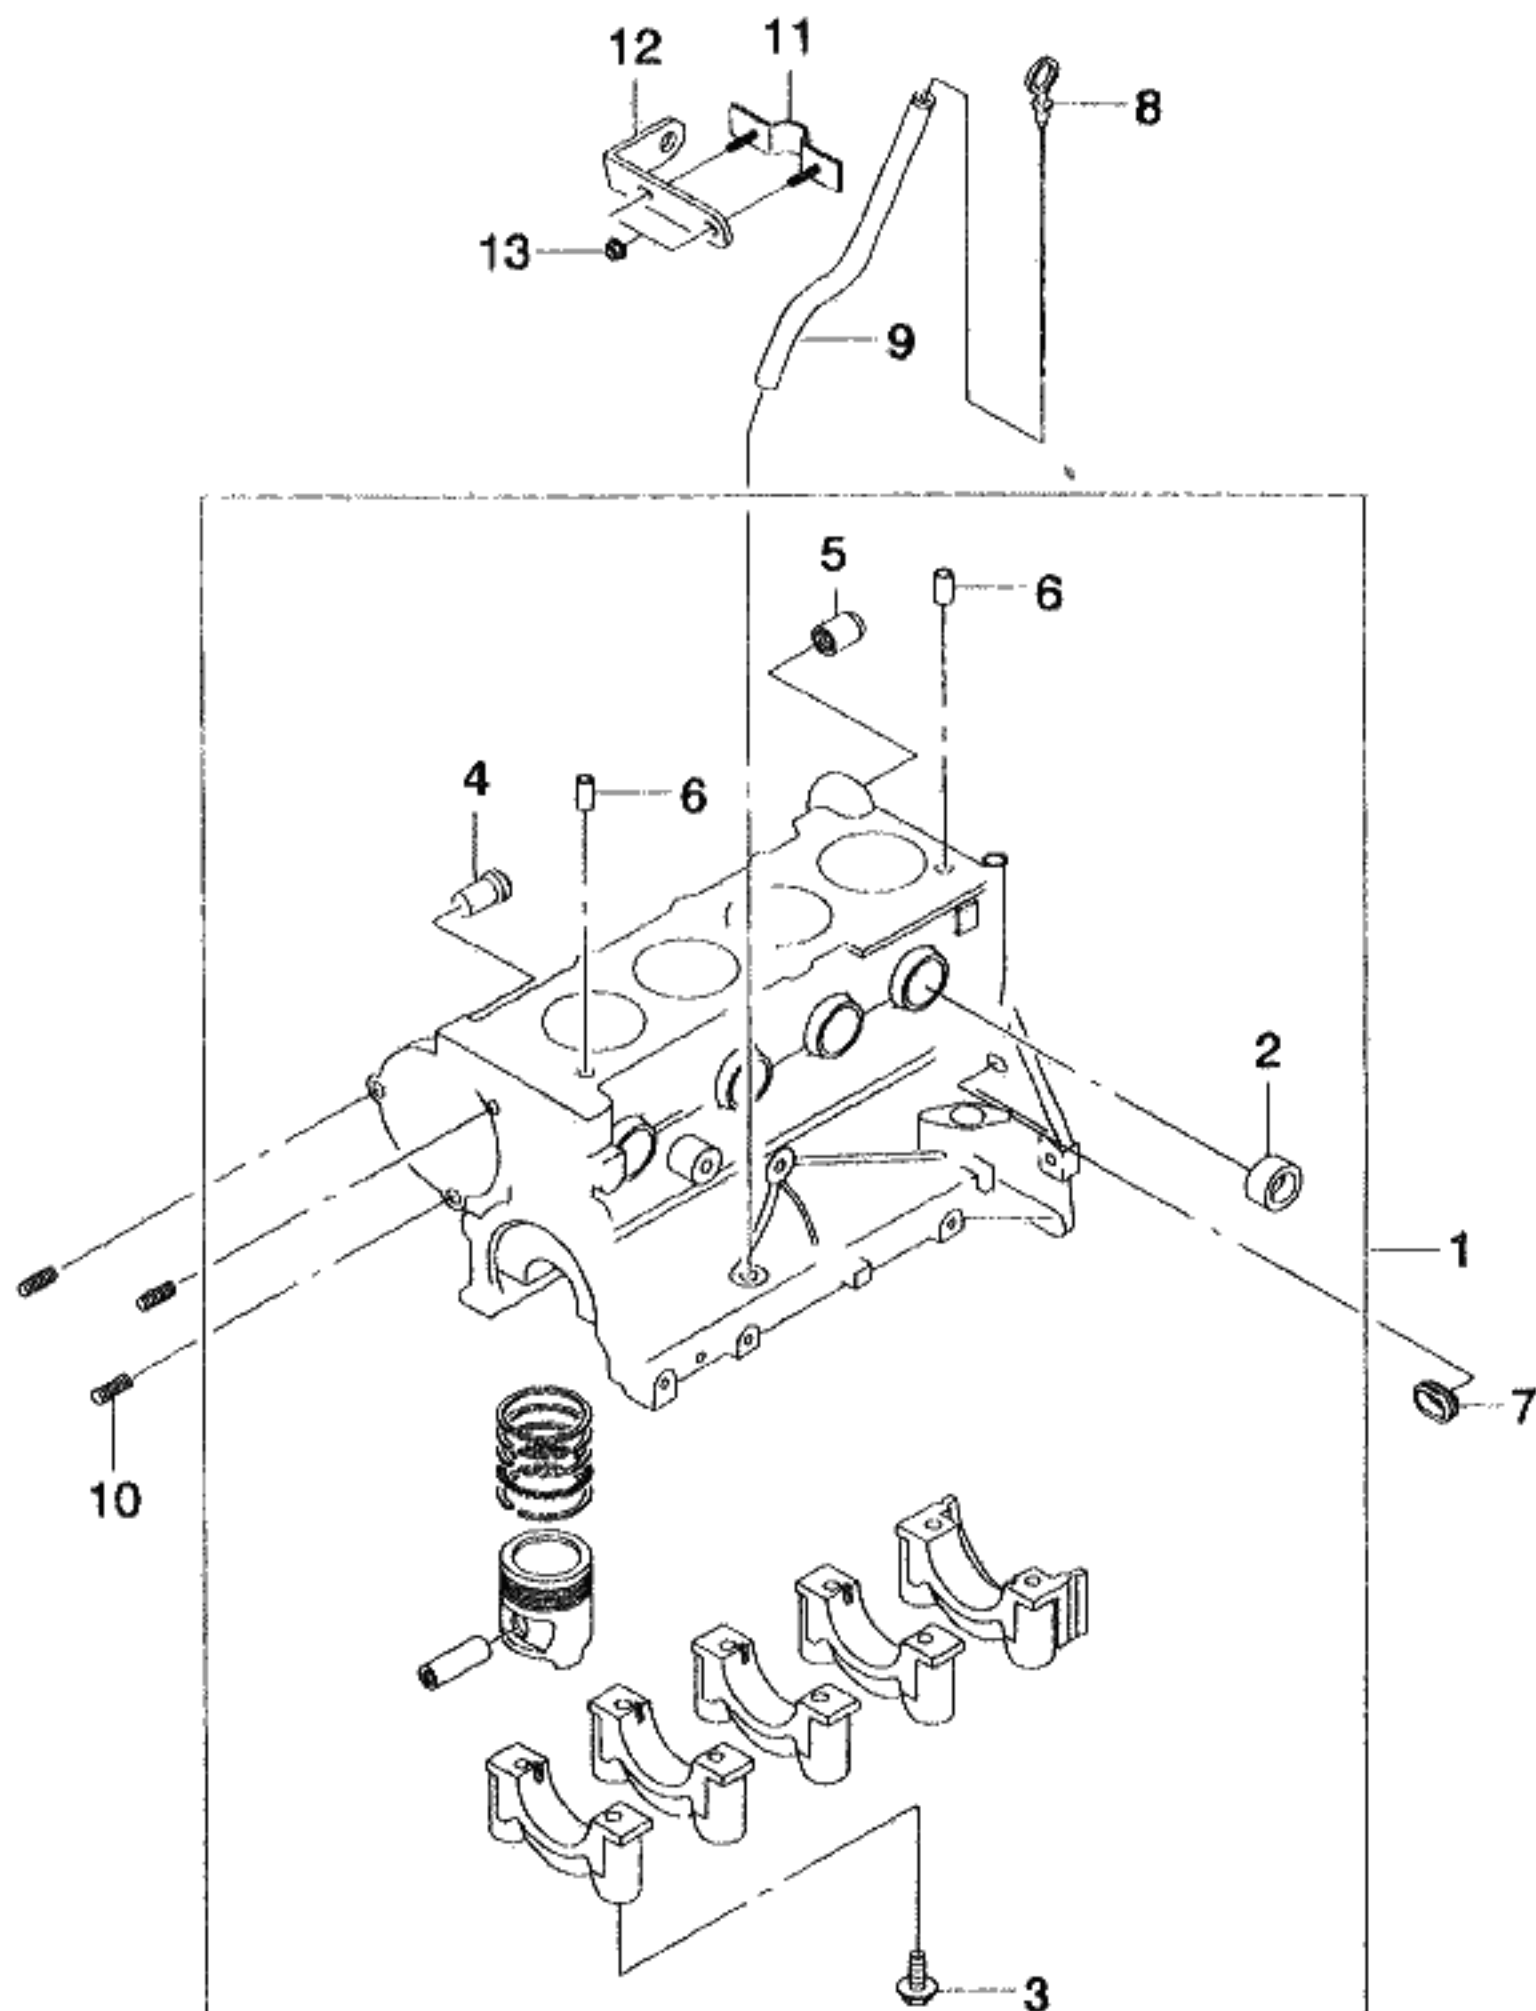


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 11056321 09246-14001	(E)PLUG (D)STÖPSEL . S S					(F)BOUCHON (S)TAPON 4			NOT APPLIED	
	[11] 96352759	(E)BRACKET-GUIDE TUBE (D)TRÄGER . S S					(F)SUPPORT (S)SOPORTE 1				
	[12] 96352760	(E)BRACKET-SUB GUIDE TUBE (D)TRÄGER . S S					(F)SUPPORT (S)SOPORTE 1				
	[13] 08316-15065	(E)NUT-HEXAGON (D)MUTTER . S S					(F)ECROU (S)TUERCA 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


1221 CRANK SHAFT & PISTON

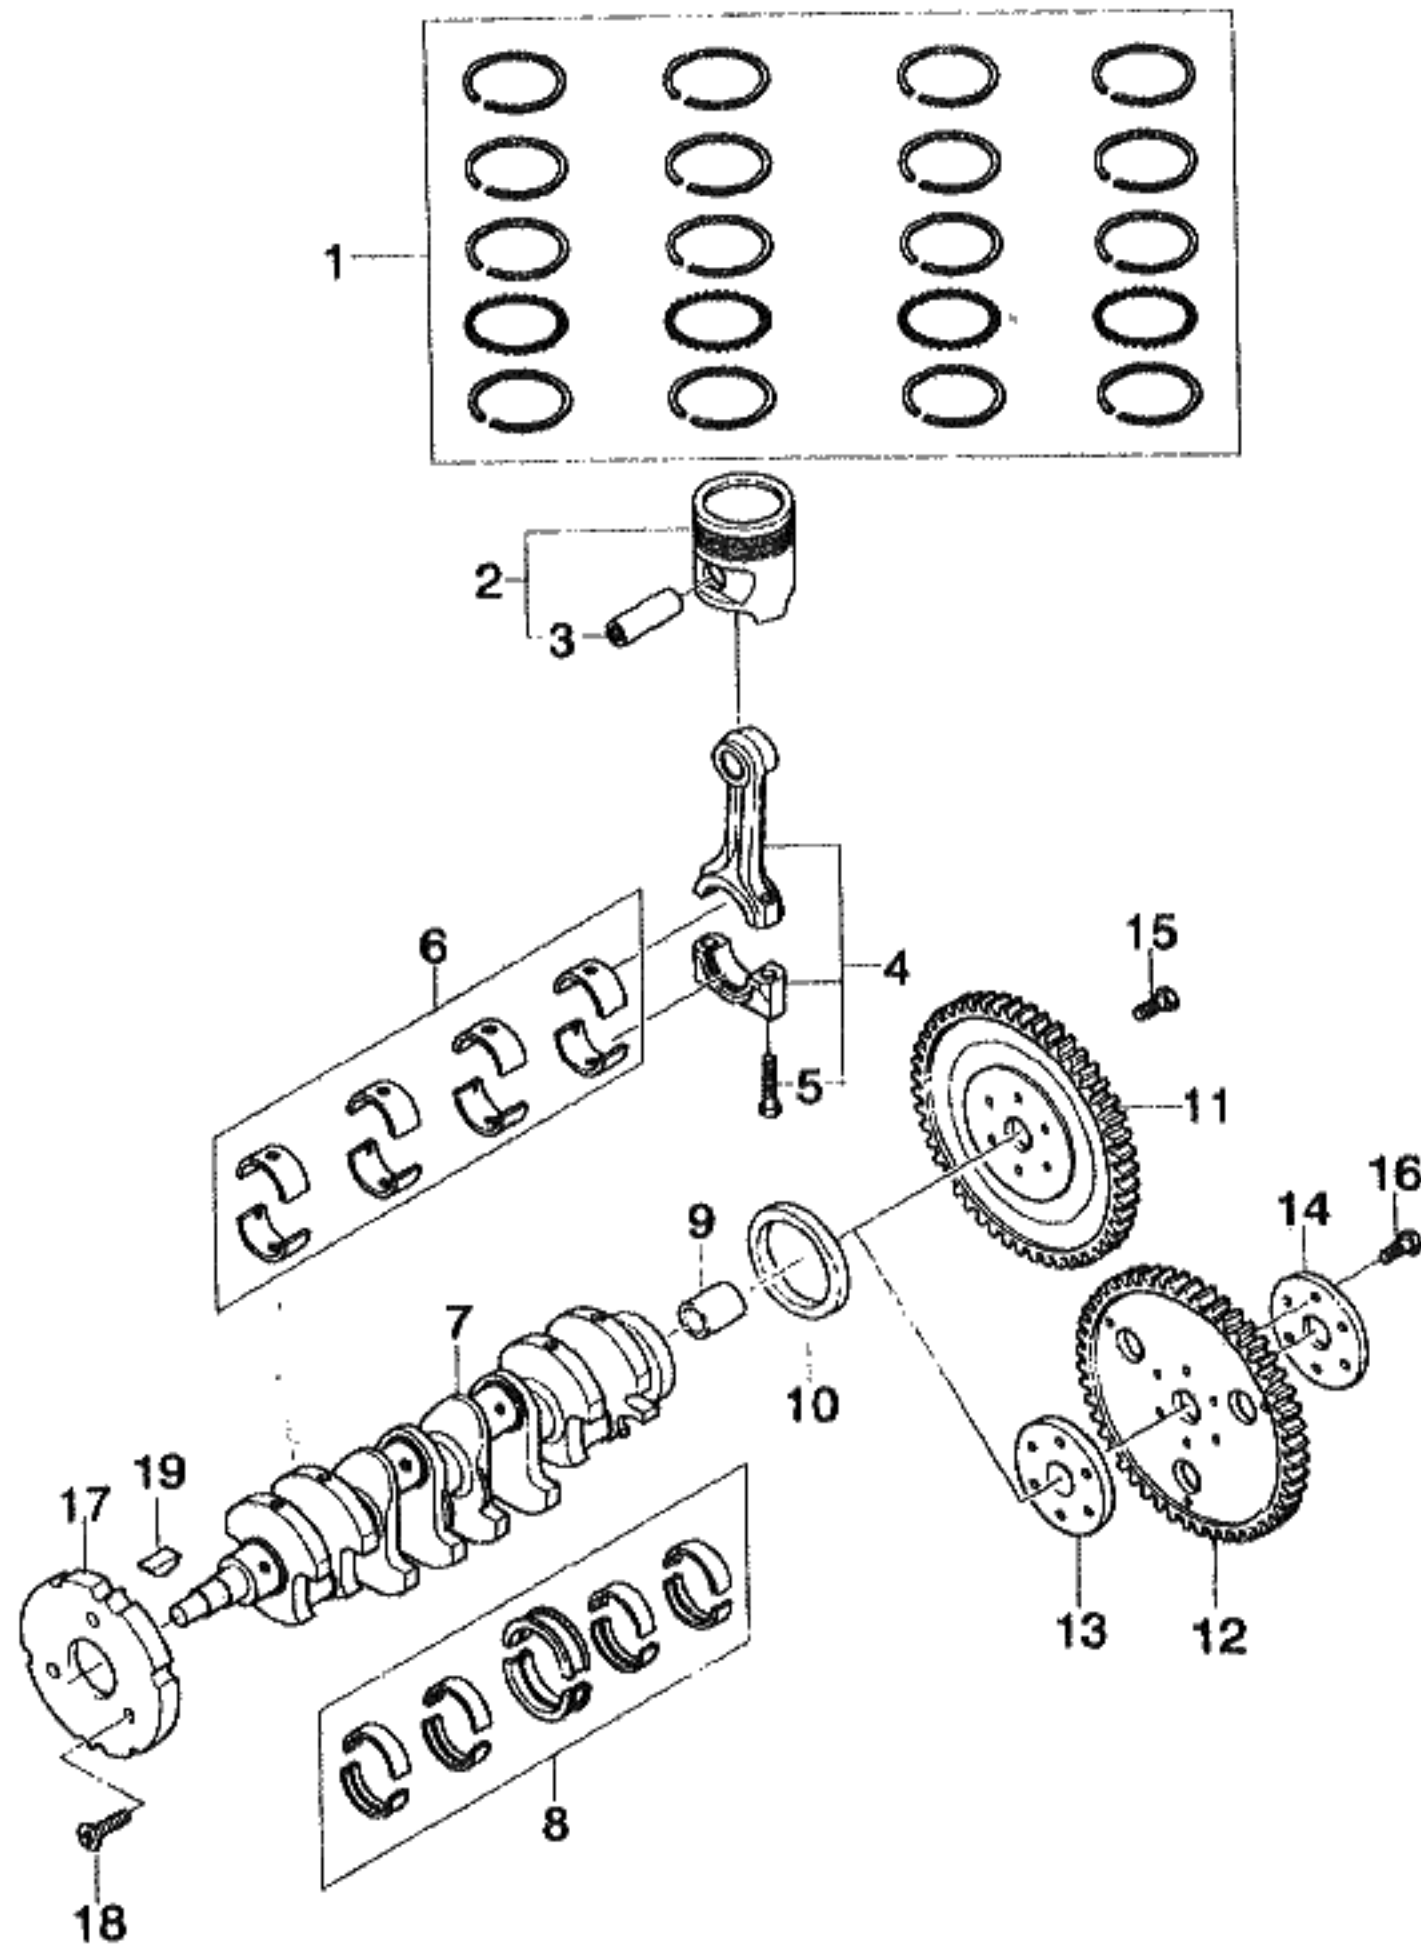


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)RING KIT-PISTON (D)RING SATZ,KOLBEN						(F)JEU DE SEGMENTS-PISTON (S)JUEGO DE ANILLOS-PISTON				
	92029793	.	S	.			1			STD		
	92029795	.	S	.			1			O/S(0.50)		
	92062027	.	O	S	&L88		1			STD		
	92062028	.	O	S	&L88		1			O/S(0.50)		
	[02]	(E)PISTON & PIN A (D)KOLBEN&STIFT						(F)PISTON&BROCHE (S)PISTON Y PASADOR				
	92061386	.	S	.			4			STD		
	92061387	.	S	.			4			O/S(0.01mm)		
	92061388	.	S	.			4			O/S(0.02mm)		
	92061702	.	S	.			4			O/S(0.50mm)		
	90501058	.	O	S	&L88		4			STD		
	90501059	.	O	S	&L88		4			O/S(0.01mm)		
	90501060	.	O	S	&L88		4			O/S(0.02mm)		
	90501072	.	O	S	&L88		4			O/S(0.50mm)		
	[03]	(E)PIN-PISTON (D)STIFT,KOLBEN						(F)BROCHE-PISTON (S)PASADOR-PISTON				
	90231775	.	S	.			4					
	90500453	.	O	S	&L88		4					
	[04]	(E)ROD A-CONNECTING (D)STAB,VERBINDUNGS						(F)BIELLE-BIELLE (S)VARILLA-CONECTANDO				
	90285434									NOT APPLIED		
	90530426	.	S	S			4					
	[05]	(E)BOLT-CON ROD (D)SCHRAUBE						(F)BOULON (S)PERNO				
	90281736	.	S	S			8					
	[06]	(E)BEARING SET-CON ROD (D)KUGELLAGER						(F)ROULEMENT (S)COJINETE				
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A = COMMON							

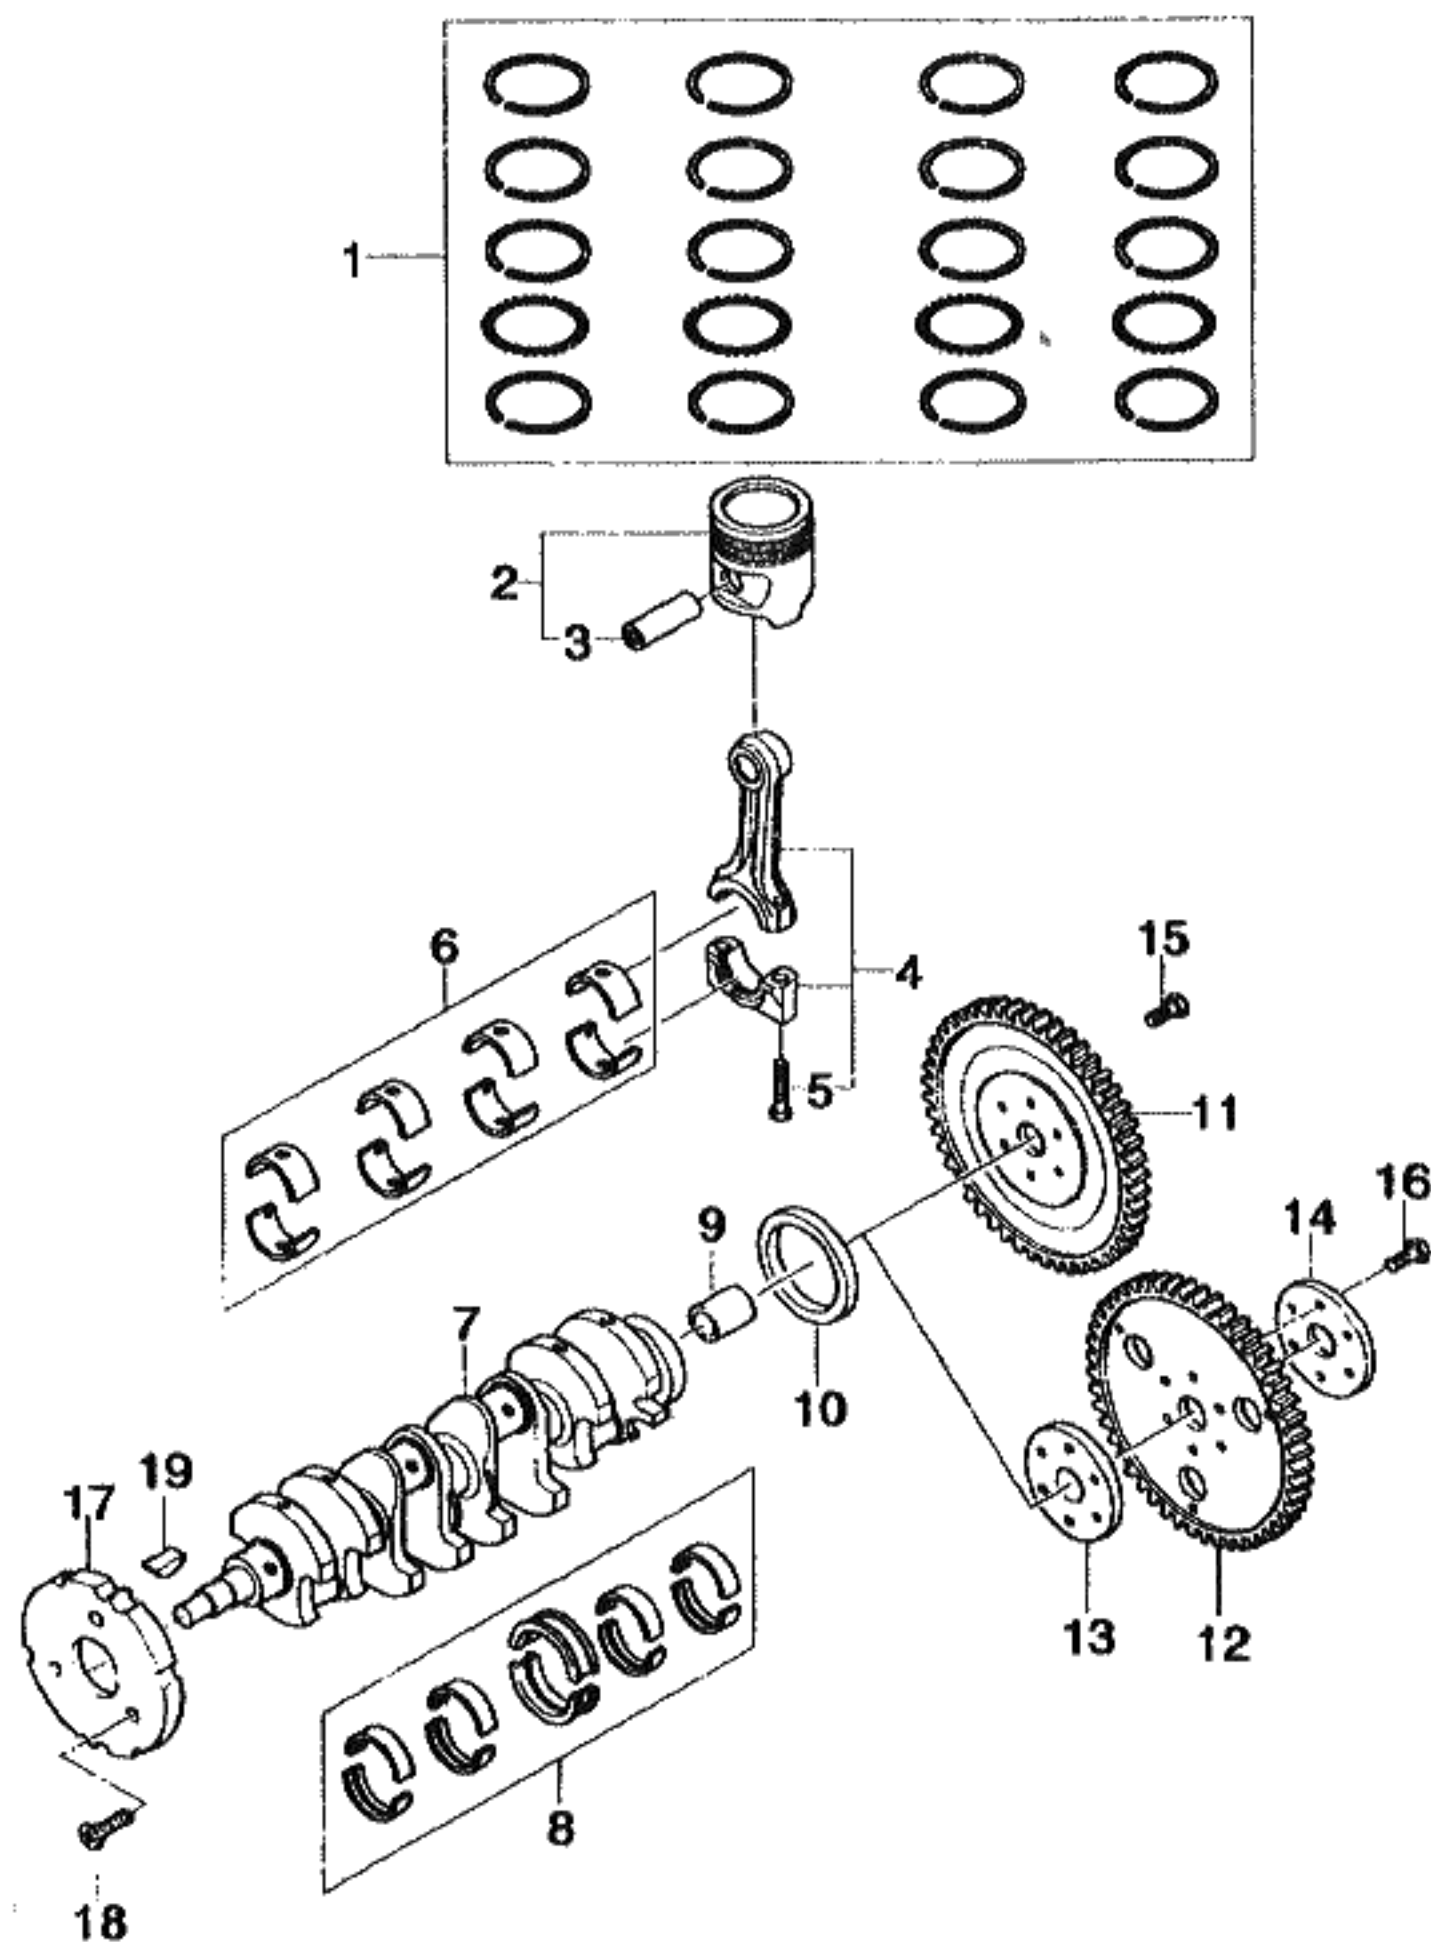

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	92028817	.	S	S			1			STD	
	92028818	.	S	S			1			U/S(0.25mm)	
	92028819	.	S	S			1			U/S(0.50mm)	
	[07]		(E)CRANKSHAFT (D)KURBELWELLE				(F)VILEBREQUIN (S)CIGUEÑAL				
	90500608	.	S	S			1				
	[08]		(E)BEARING SET-CRANKSHAFT (D)KUGELLAGER STELLUNG				(F)JEU DE ROULEMENT (S)JUEGO DE COJINETE				
	92061197	.	S	S			1			STD	
	92061199	.	S	S			1			U/S(0.25mm)	
	92061200	.	S	S			1			U/S(0.50mm)	
	[09]		(E)SLEEVE (D)HÜLSE,NADEL				(F)CHEMISE-AIGUILLE (S)MANGA-AGUJA				
	90096047	.	S	S			2				
	[10]		(E)SEAL-CRANKSHAFT RR (D)DICHTUNG,KURBELWELLE				(F)JOINT-VILEBREQUIN,ARRIERE (S)SELLO-CIGUEÑAL,TRASERO				
	90298408	.	S	S			1				
	[11]		(E)FLYWHEEL A (D)SCHWUNGRAD				(F)VOLANT D'ENTRAINEMENT (S)VOLANTE				
	90466130	M	S	S			1				
	[12]		(E)PLATE A-FLEXIBLE (D)PLATTE,FLEXIBEL				(F)PLAQUE-FLEXIBLE (S)PLACA-FLEXIBLE				
	92062768	A	O	O			1				
	[13]		(E)SPACER-FLEXIBLE PLATE (D)DISTANZSTÜCK				(F)ENTRETOISE (S)ESPACIADOR				
	92063305	A	O	O			1				
	[14]		(E)REINFORCING-DISC (D)VERSTÄRKUNG				(F)RENFORCEMENT (S)REFUERZO				
	90236778	A	O	O			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

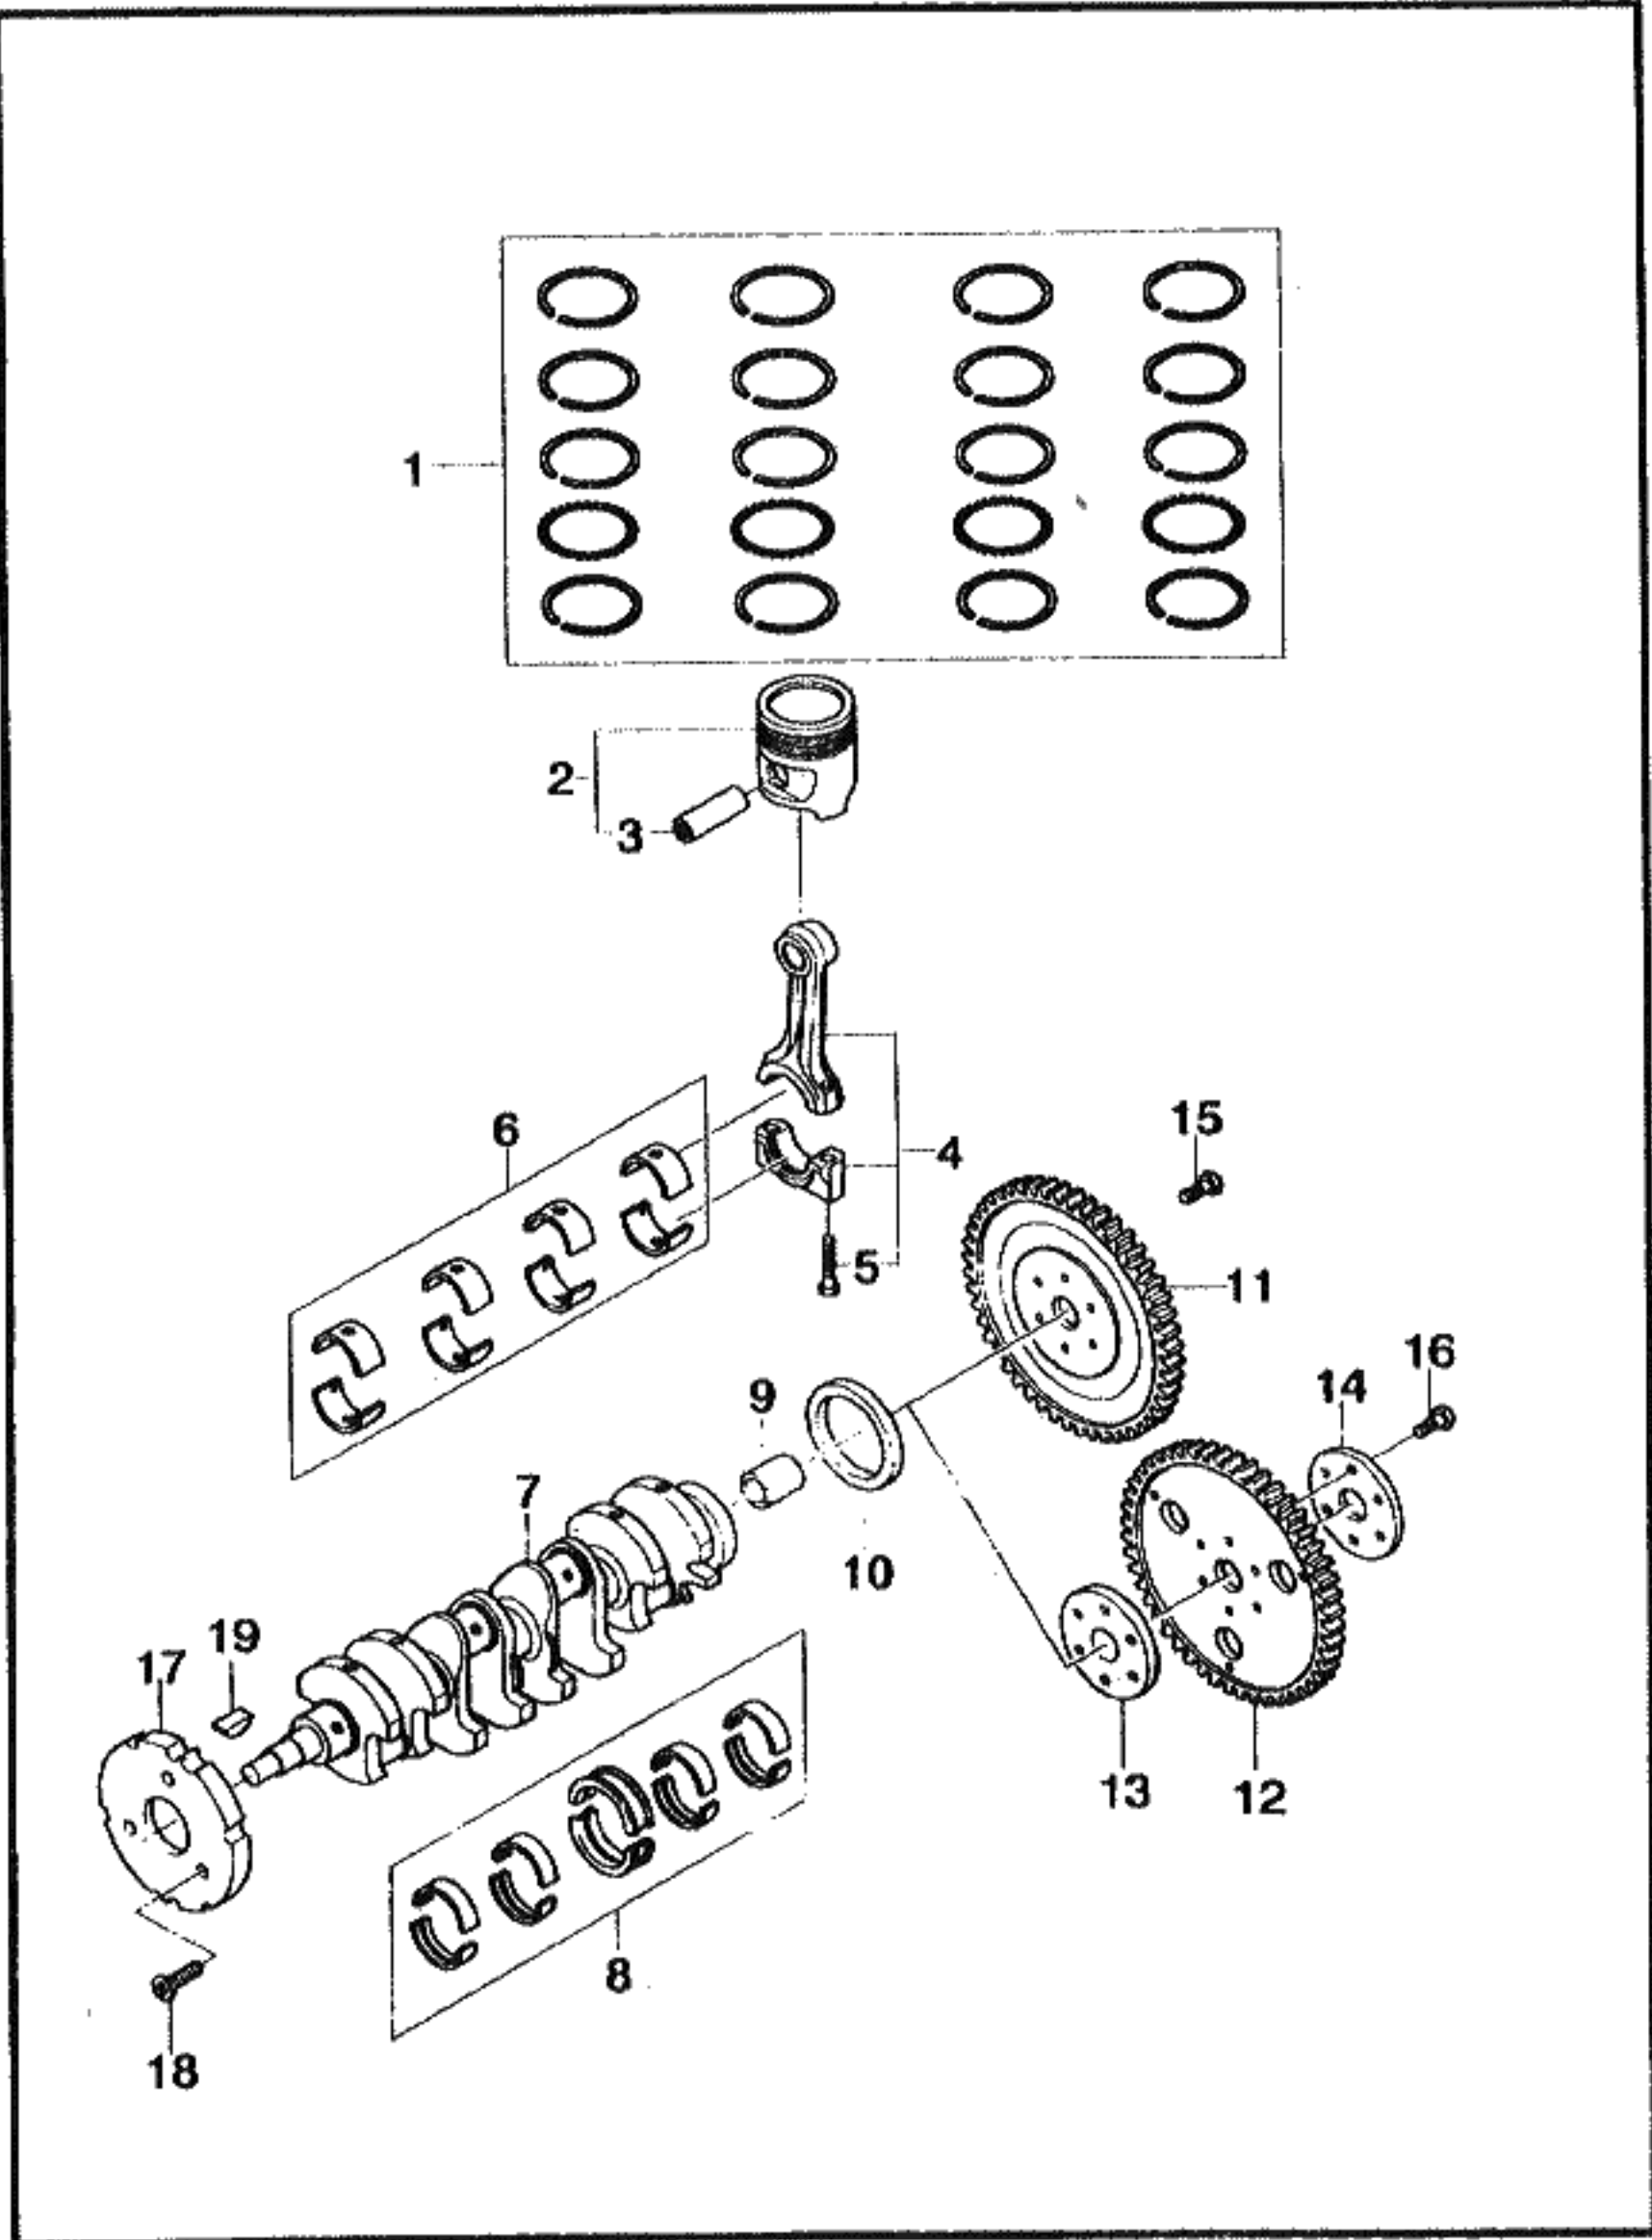


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[15] 90285303	(E)BOLT-FLYWHEEL (D)SCHRAUBE,SCHWUNGRAD M	S	S		(F)BOULON (S)PERNO-VOLANTE 6					
	[16] 90236536	(E)BOLT-FLEXIBLE PLATE (D)SCHRAUBE,BIEGSAME PLATTE A	O	O		(F)BOULON-PLAQUE FLEXIBLE (S)PERNO-PLACA FLEXIBLE 6					
	[17] 90265094	(E)DISC-TRANSMITTER (D)SCHEIBE . S	S			(F)DISQUE (S)DISCO 1					
	[18] 90280051	(E)COUNTERSUNK (D)SCHRAUBE . S	S			(F)VIS (S)TORNILLO 3					
	[19] 11010612	(E)KEY-WOODRUFF (D)SCHLÜSSEL . S	S			(F)CLE (S)LLAVE 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

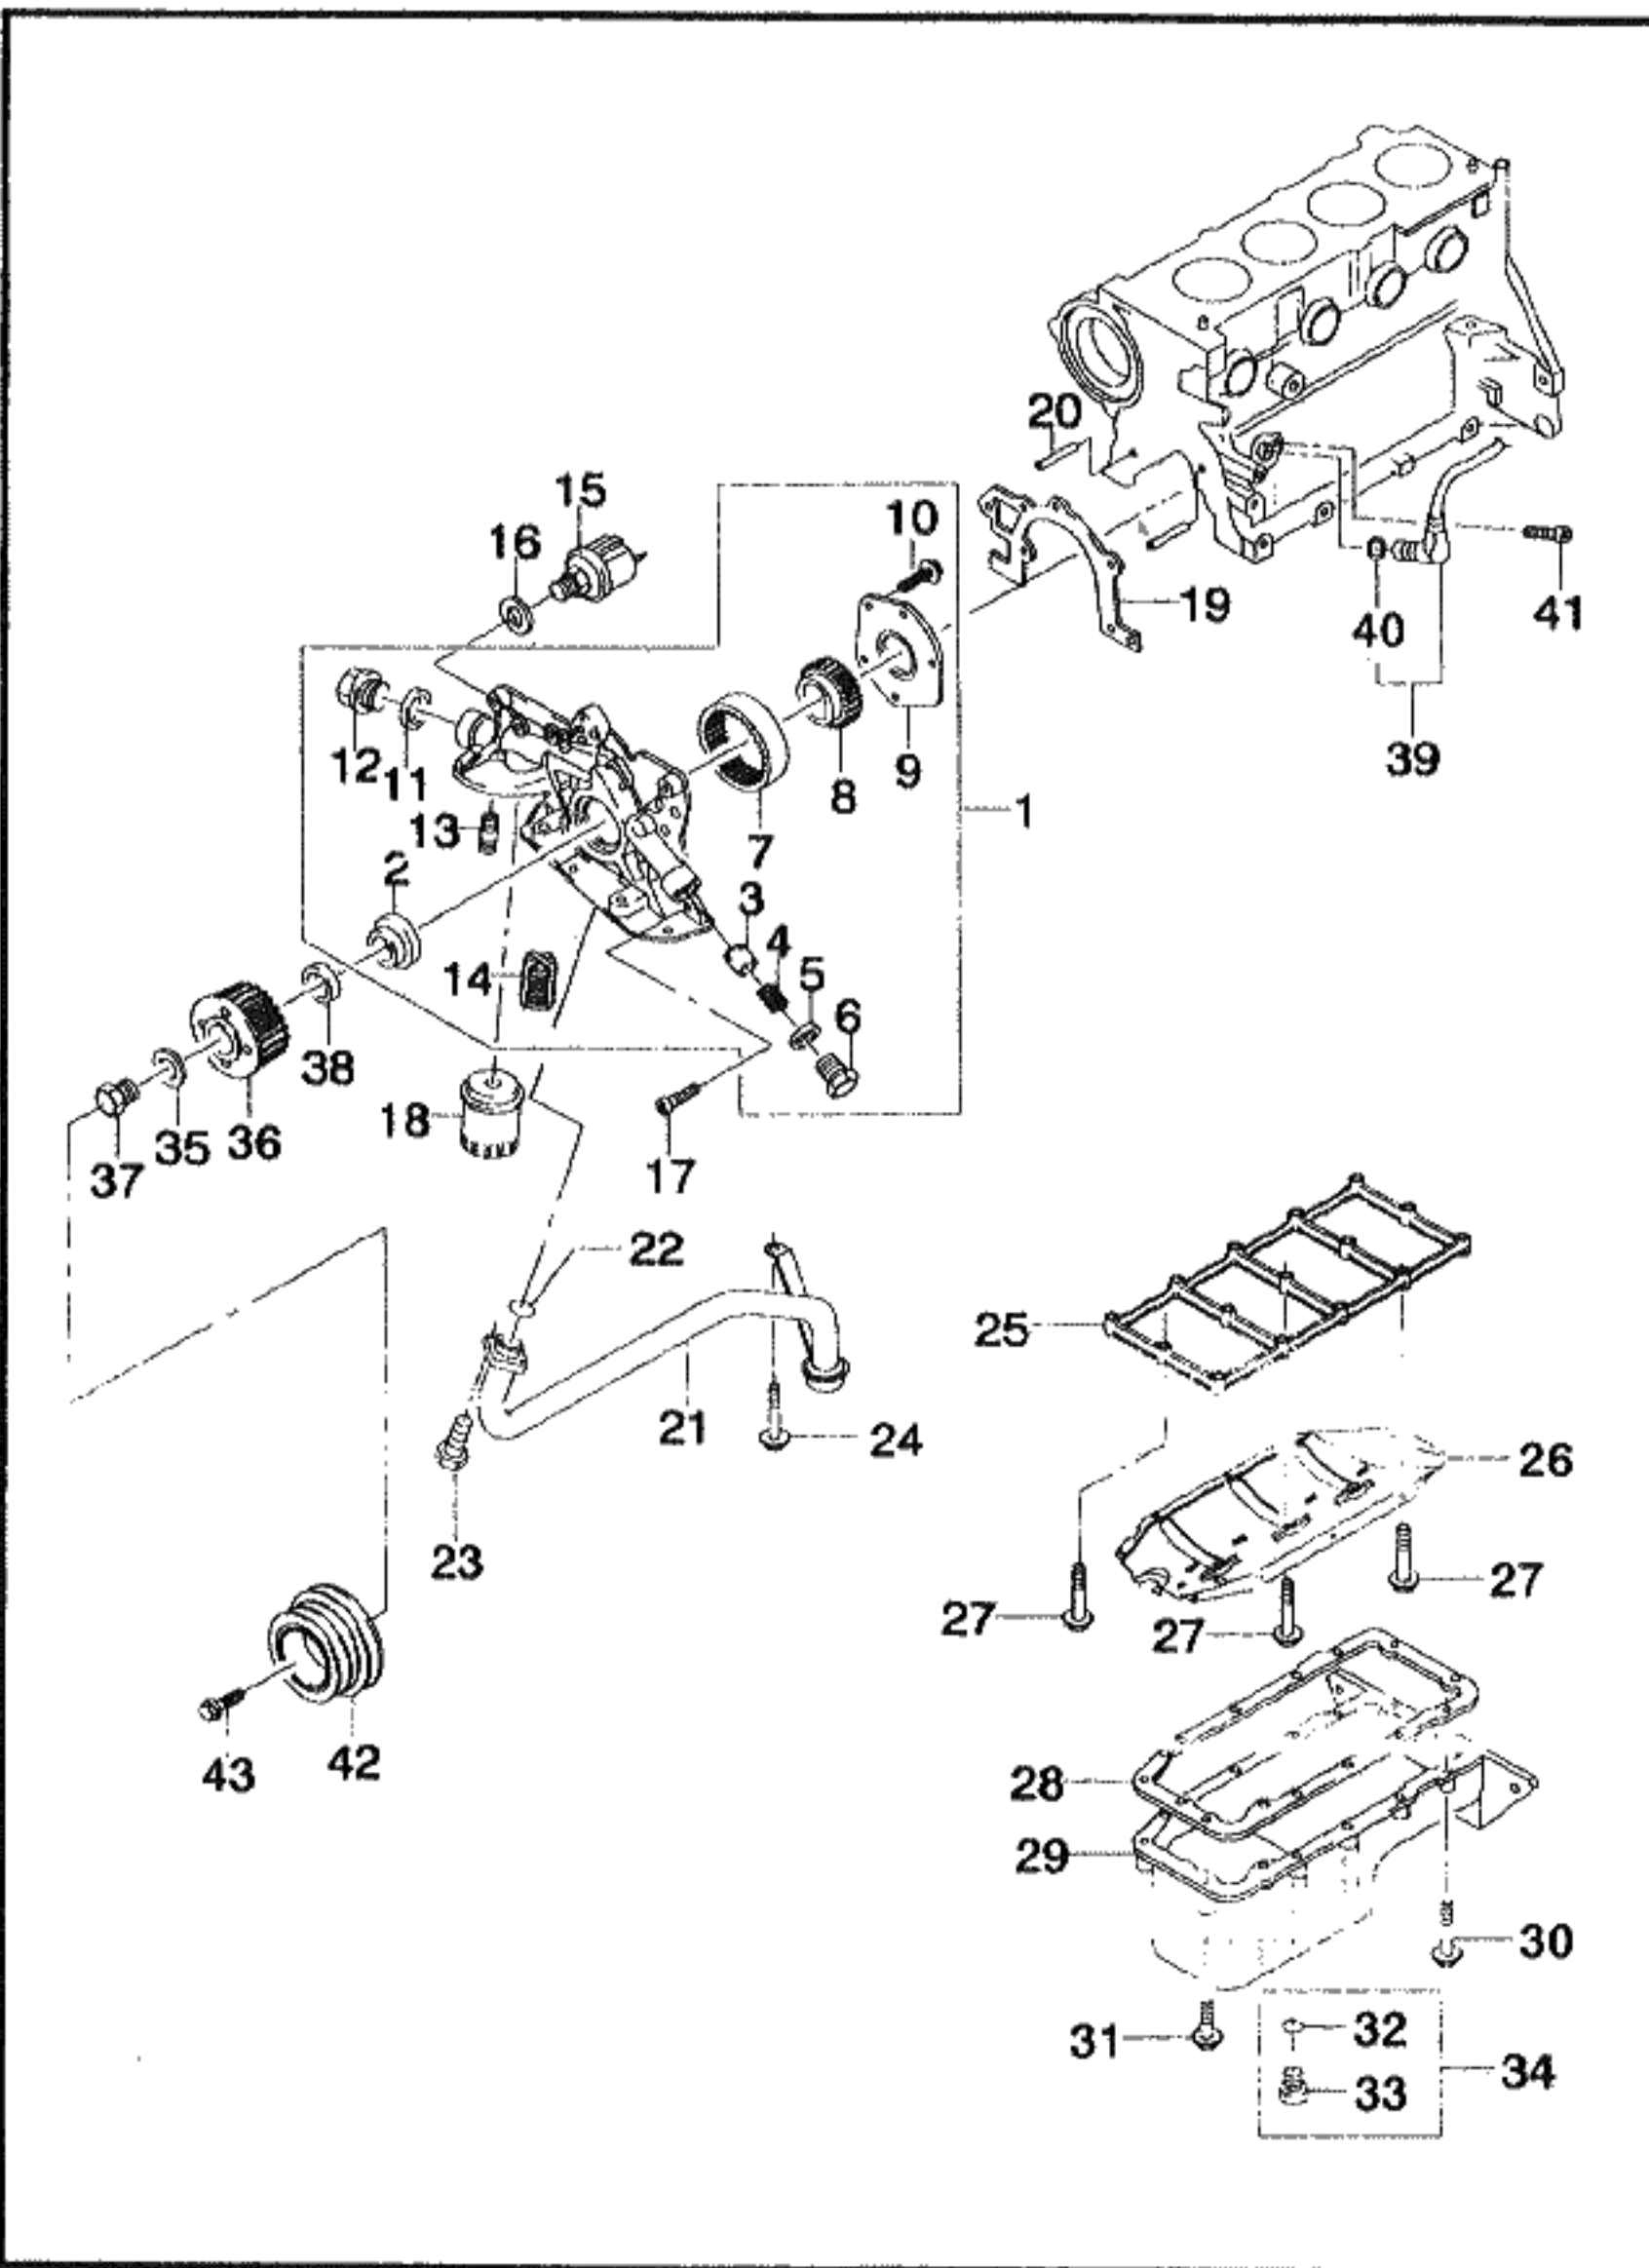


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)PUMP A-OIL (D)PUMPE,ÖL					(F)POMPE-HUILE (S)BOMBA-ACEITE			NOT APPLIED	
	90499157										
	90570925		S	S			1				
	[02]	(E)RING-SEAL,OIL PUMP (D)DICHTUNG					(F)JOINT (S)SELLO				
	90183572		S	S			1				
	[03]	(E)PLUNGER-PRESS RELIEF VLV (D)TAUCHER					(F)PISTON PLONGEUR (S)EMBOLO				
	90530592		S	S			1				
	[04]	(E)SPRING (D)FEDERUNG					(F)RESSORT (S)RESORTE				
	03448847		S	S			1				
	[05]	(E)RING-SEAL (D)RING,ÖLPUMPE DICHTUNG					(F)ANNEAU (S)ANILLO-SELLO				
	11093042		S	S			1				
	[06]	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN					(F)BOUCHON-VIS (S)TAPON-TORNILLO				
	03448834		S	S			1				
	[07]	(E)GEAR-OIL PUMP (D)GETRIEBE,ÖLPUMPE					(F)ENGRENAGE-POMPE A HUILE (S)ENGRANAJE-BOMBA DE ACEITE				
	90156197		S	S			1				
	[08]	(E)GEAR-RING OIL PUMP (D)RING GETRIEBE,ÖLPUMPE					(F)ENGRENAGE (S)ENGRANAJE DE ANILLO				
	90156198		S	S			1				
	[09]	(E)COVER-OIL PUMP (D)DECKEL,ÖLPUMPE					(F)CARTER-POMPE A HUILE (S)CUBIERTA-BOMBA DE ACEITE				
	90106431		S	S			1				
	[10]	(E)SCREW (D)SCHRAUBE					(F)VIS (S)TORNILLO				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

1231 OIL PAN & PUMP

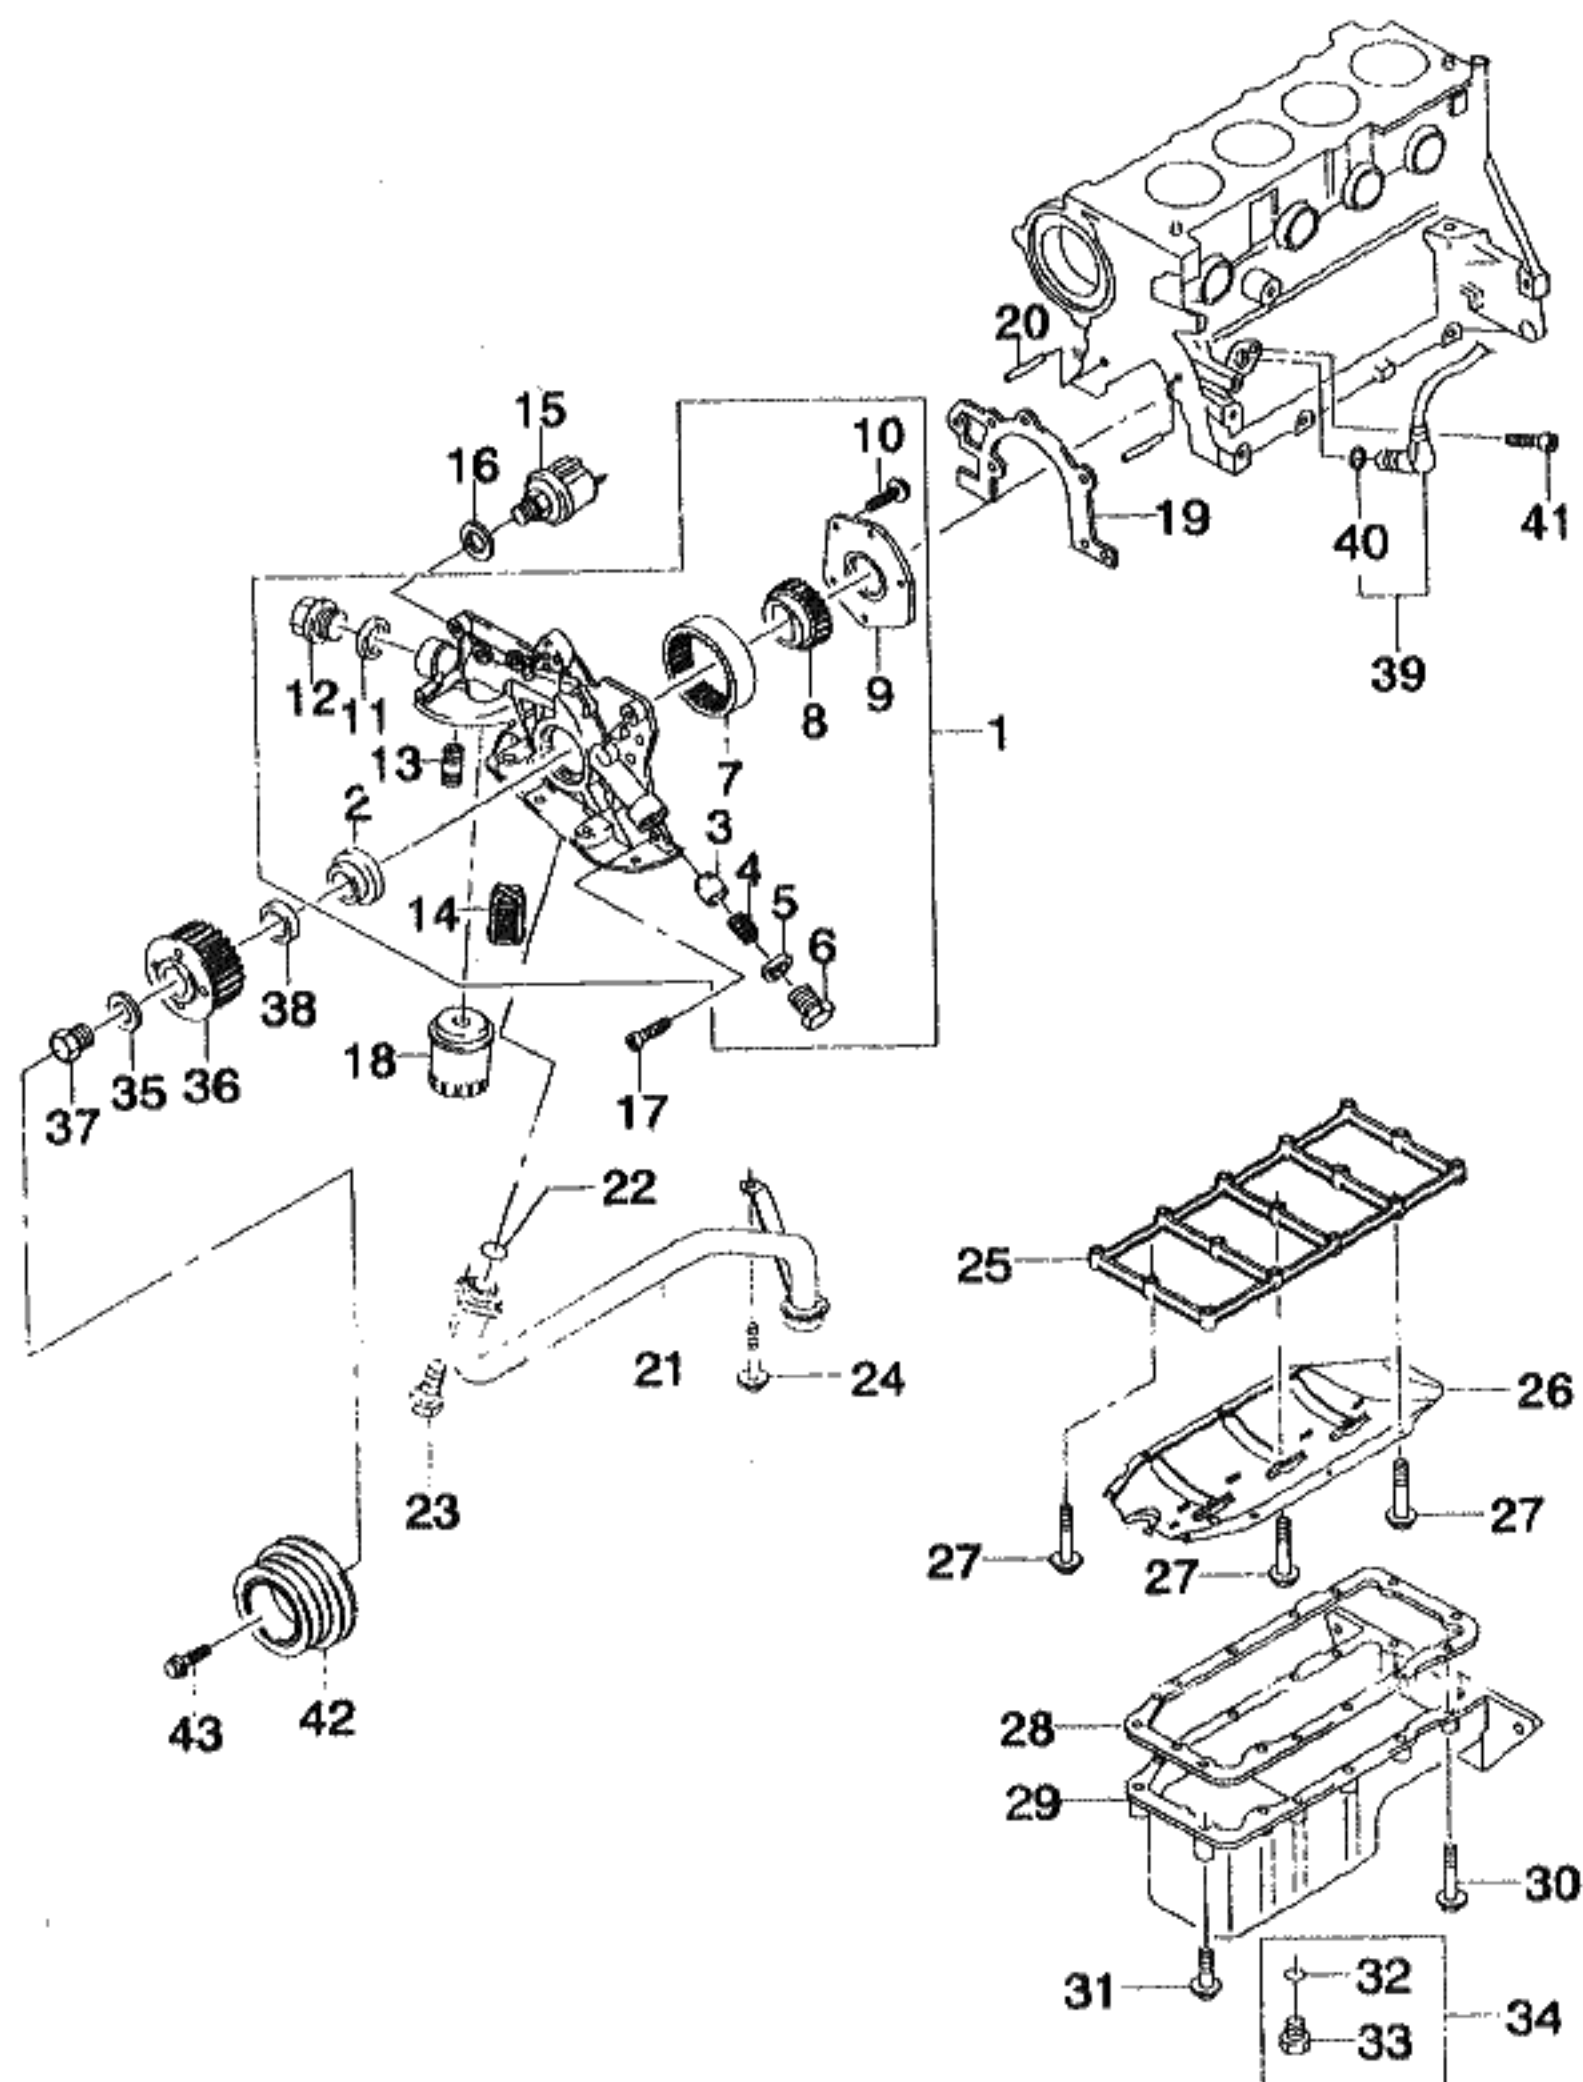


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	11085861	.	S	S			5				
	[11]		(E)SEAL-OIL DUCT PLUG				(F)JOINT				
			(D)DICHTUNG,ÖL-LEITUNG				(S)SELLO				
	92061013	.	S	S			1				
	[12]		(E)PLUG-OIL DUCT OUTLET				(F)BOUCHON				
			(D)SCHRAUBE				(S)TORNILLO				
	11039122	.	S	S			1				
	[13]		(E)PIECE-CONNECTING				(F)PIECE-DE CONNEXION				
			(D)TEIL,VERBINDUNGS				(S)PIEZA-CONEXION				
	90144360	.	S	S			1				
	[14]		(E)VALVE A-BYPASS				(F)SOUPAPE-DERIVATION				
			(D)VENTIL,ÜBERGANG				(S)VALVULA-BY PASS				
	90136113	.	S	S			1				
	[15]		(E)SWITCH A-OIL PRESSURE				(F)COMMUTATEUR				
			(D)SCHALTER,ÖL DRUCK				(S)INTERRUPTOR				
	90336039	.	S	S			1				
	[16]		(E)WASHER-PLAIN				(F)RONDELLE				
			(D)DICHTUNGSRING				(S)ARANDELA				
	09160-14003	.	S	S			1				
	[17]		(E)SCREW				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	11084961	.	S	S			6				
	[18]		(E)FILTER-OIL				(F)FILTRE-HUILE				
			(D)FILTER,ÖL				(S)FILTRO-ACEITE				
	94797406	.	S	S			1				
	[19]		(E)GASKET-OIL PUMP				(F)JOINT-POMPE A HUILE				
			(D)DICHTUNG,ÖLPUMPE				(S)JUNTA-BOMBA DE ACEITE				
	92060519	.	S	S			1				
	[20]		(E)SLEEVE				(F)CHEMISE-POMPE A HUILE				
			(D)HÜLSE,ÖLPUMPE				(S)MANGA-BOMBA DE ACEITE				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

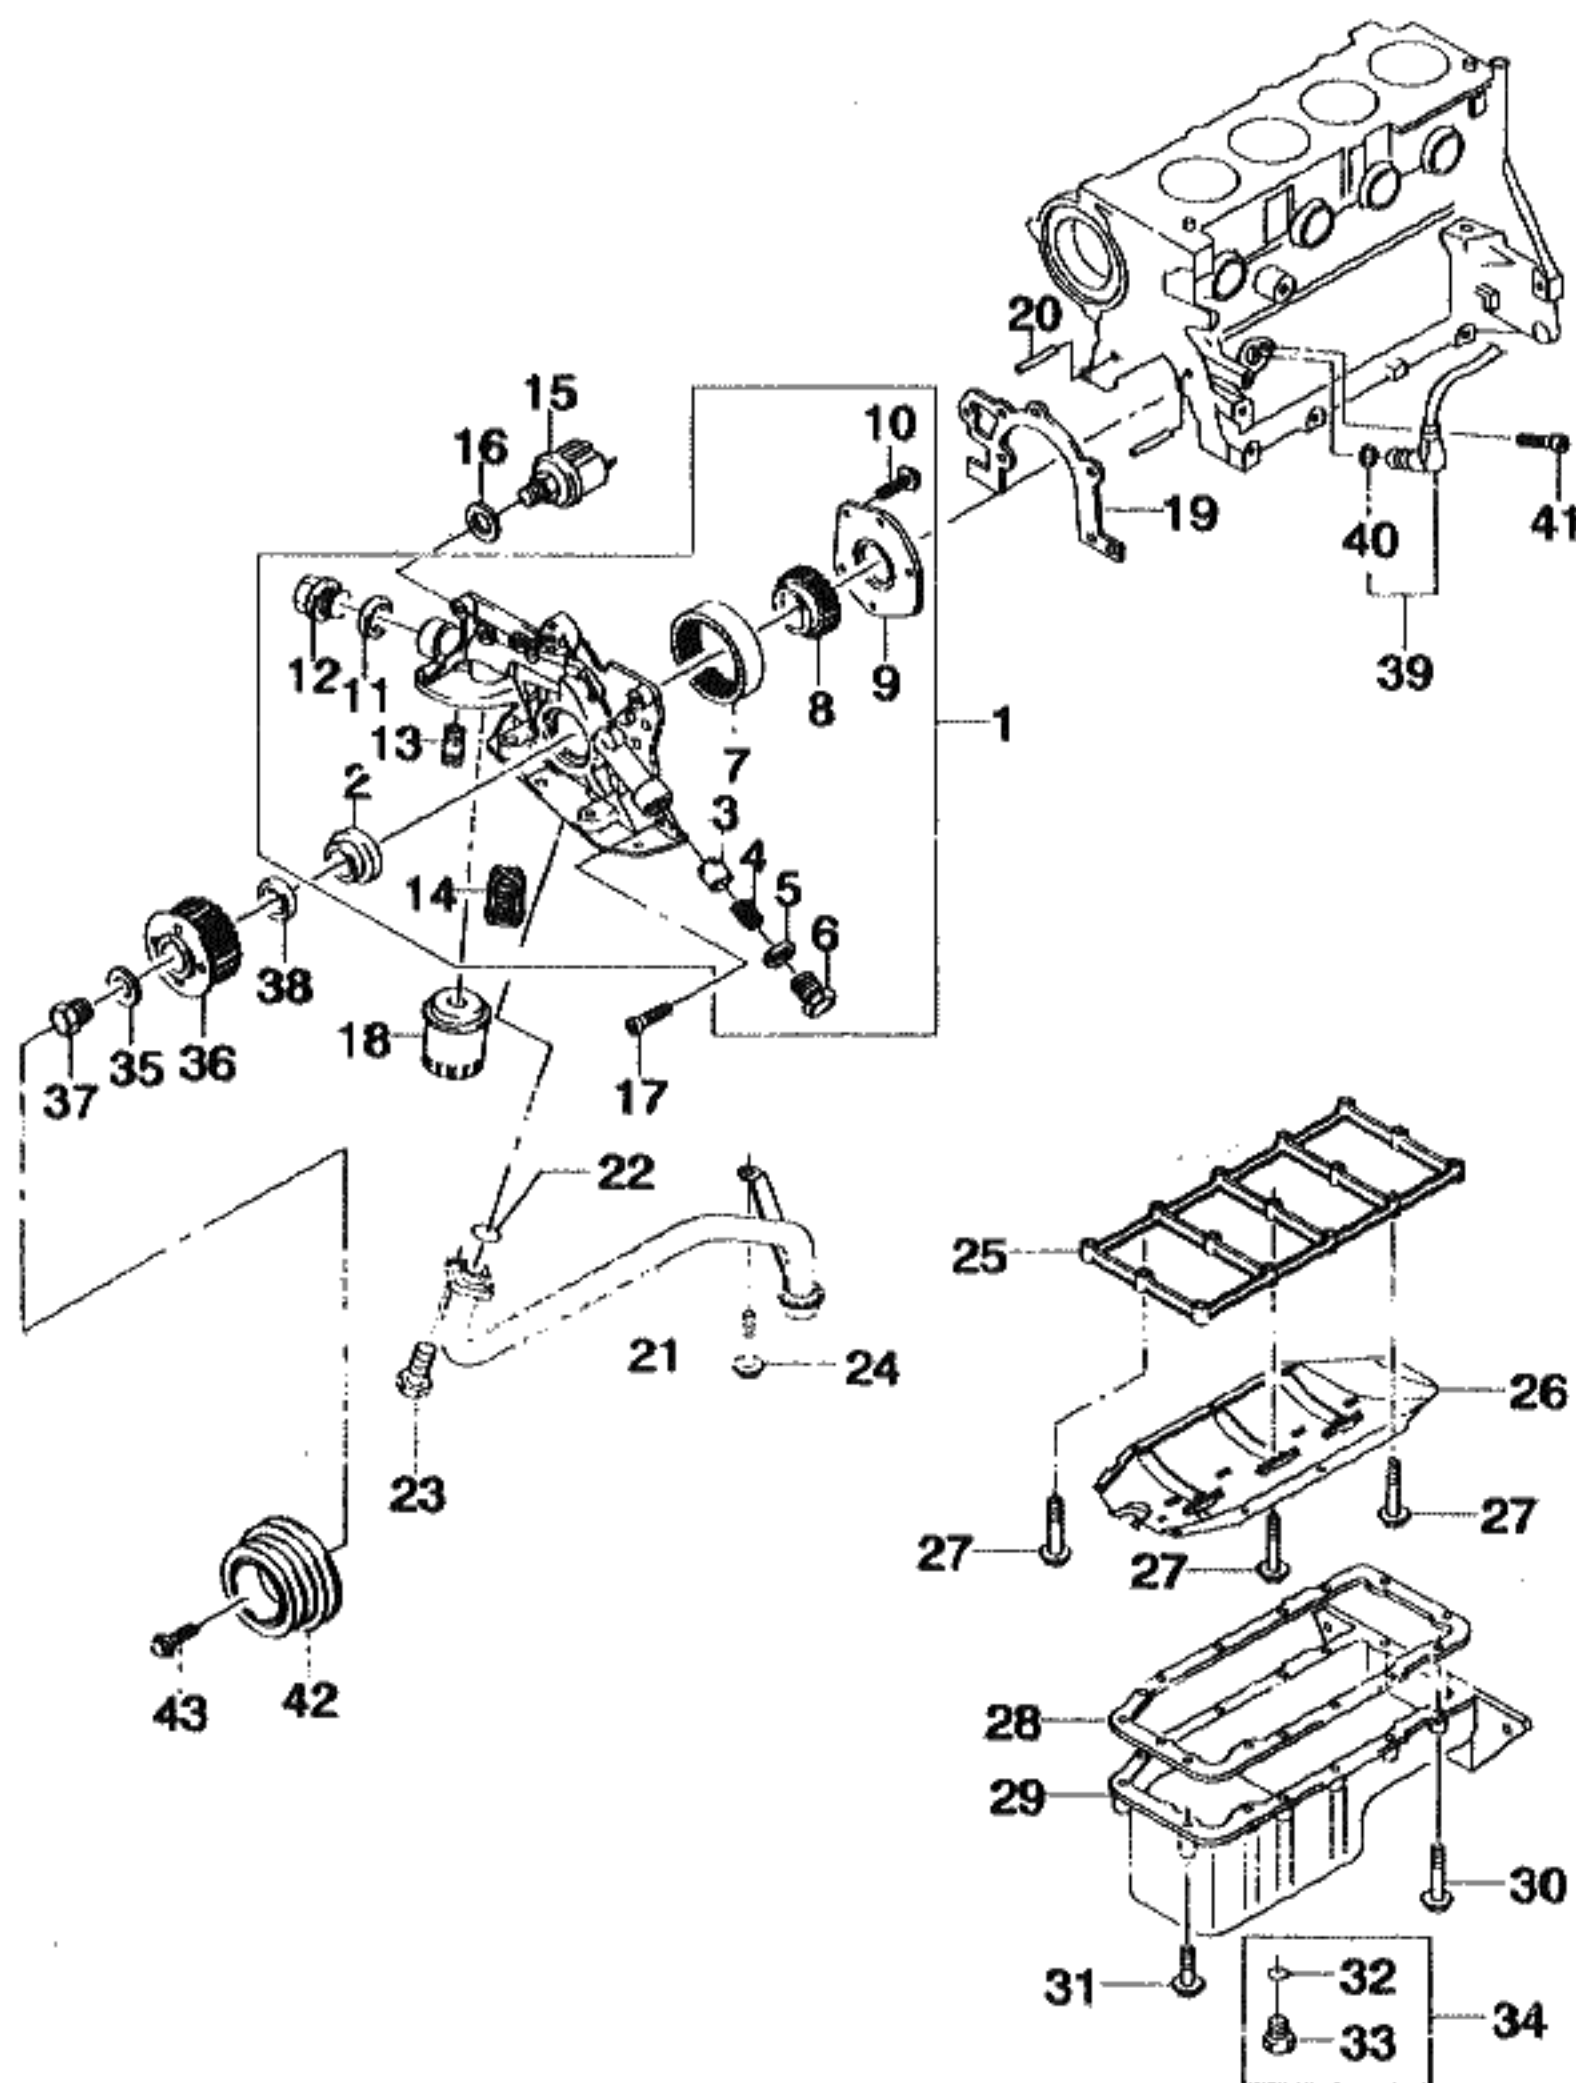


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	90096047	.	S	S			2				
	[21]				(E)PIPE-OIL SUCTION (D)ROHR,ÖL SAUG			(F) TUYAU-ASPIRATION HUILE (S) TUBERIA-SUCCION DE ACEITE			
	92063598	.	S	S			1				
	[22]				(E)RING-SEAL (D)RING,ÖLPUMPE DICHTUNG			(F) ANNEAU (S) ANILLO-SELLO			
	90190637	.	S	S			1				
	[23]				(E)BOLT (D)SCHRAUBE			(F) BOULON (S) PERNO			
	11055131	.	S	S			2				
	[24]				(E)BOLT (D)SCHRAUBE			(F) BOULON (S) PERNO			
	11096921	.	S	S			1				
	[25]				(E)BRIDGE-BEARING (D)BRÜCKEN			(F) PONT (S) PUENTE			
	92062931									NOT APPLIED	
	90501900	.	S	S			1				
	[26]				(E)SCRAPER-OIL PAN (D)KRATZER			(F) GRATTOIR (S) RASPADOR			
	92062795	.	S	S			1				
	[27]				(E)SCREW (D)SCHRAUBE			(F) BOULON (S) PERNO			
	11096481	.	S	S			14				
	[28]				(E)GASKET-OIL PAN (D)DICHTUNG,ÖL-PFANNE			(F) JOINT-CARTER D'HUILE (S) JUNTA			
	92062934									NOT APPLIED	
	90467759	.	S	S			1				
	[29]				(E)PAN A-OIL (D)PFANNE,ÖL			(F) CARTER-HUILE (S) RECIPIENTE-ACEITE			
	92063880	.	S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

1231 OIL PAN & PUMP

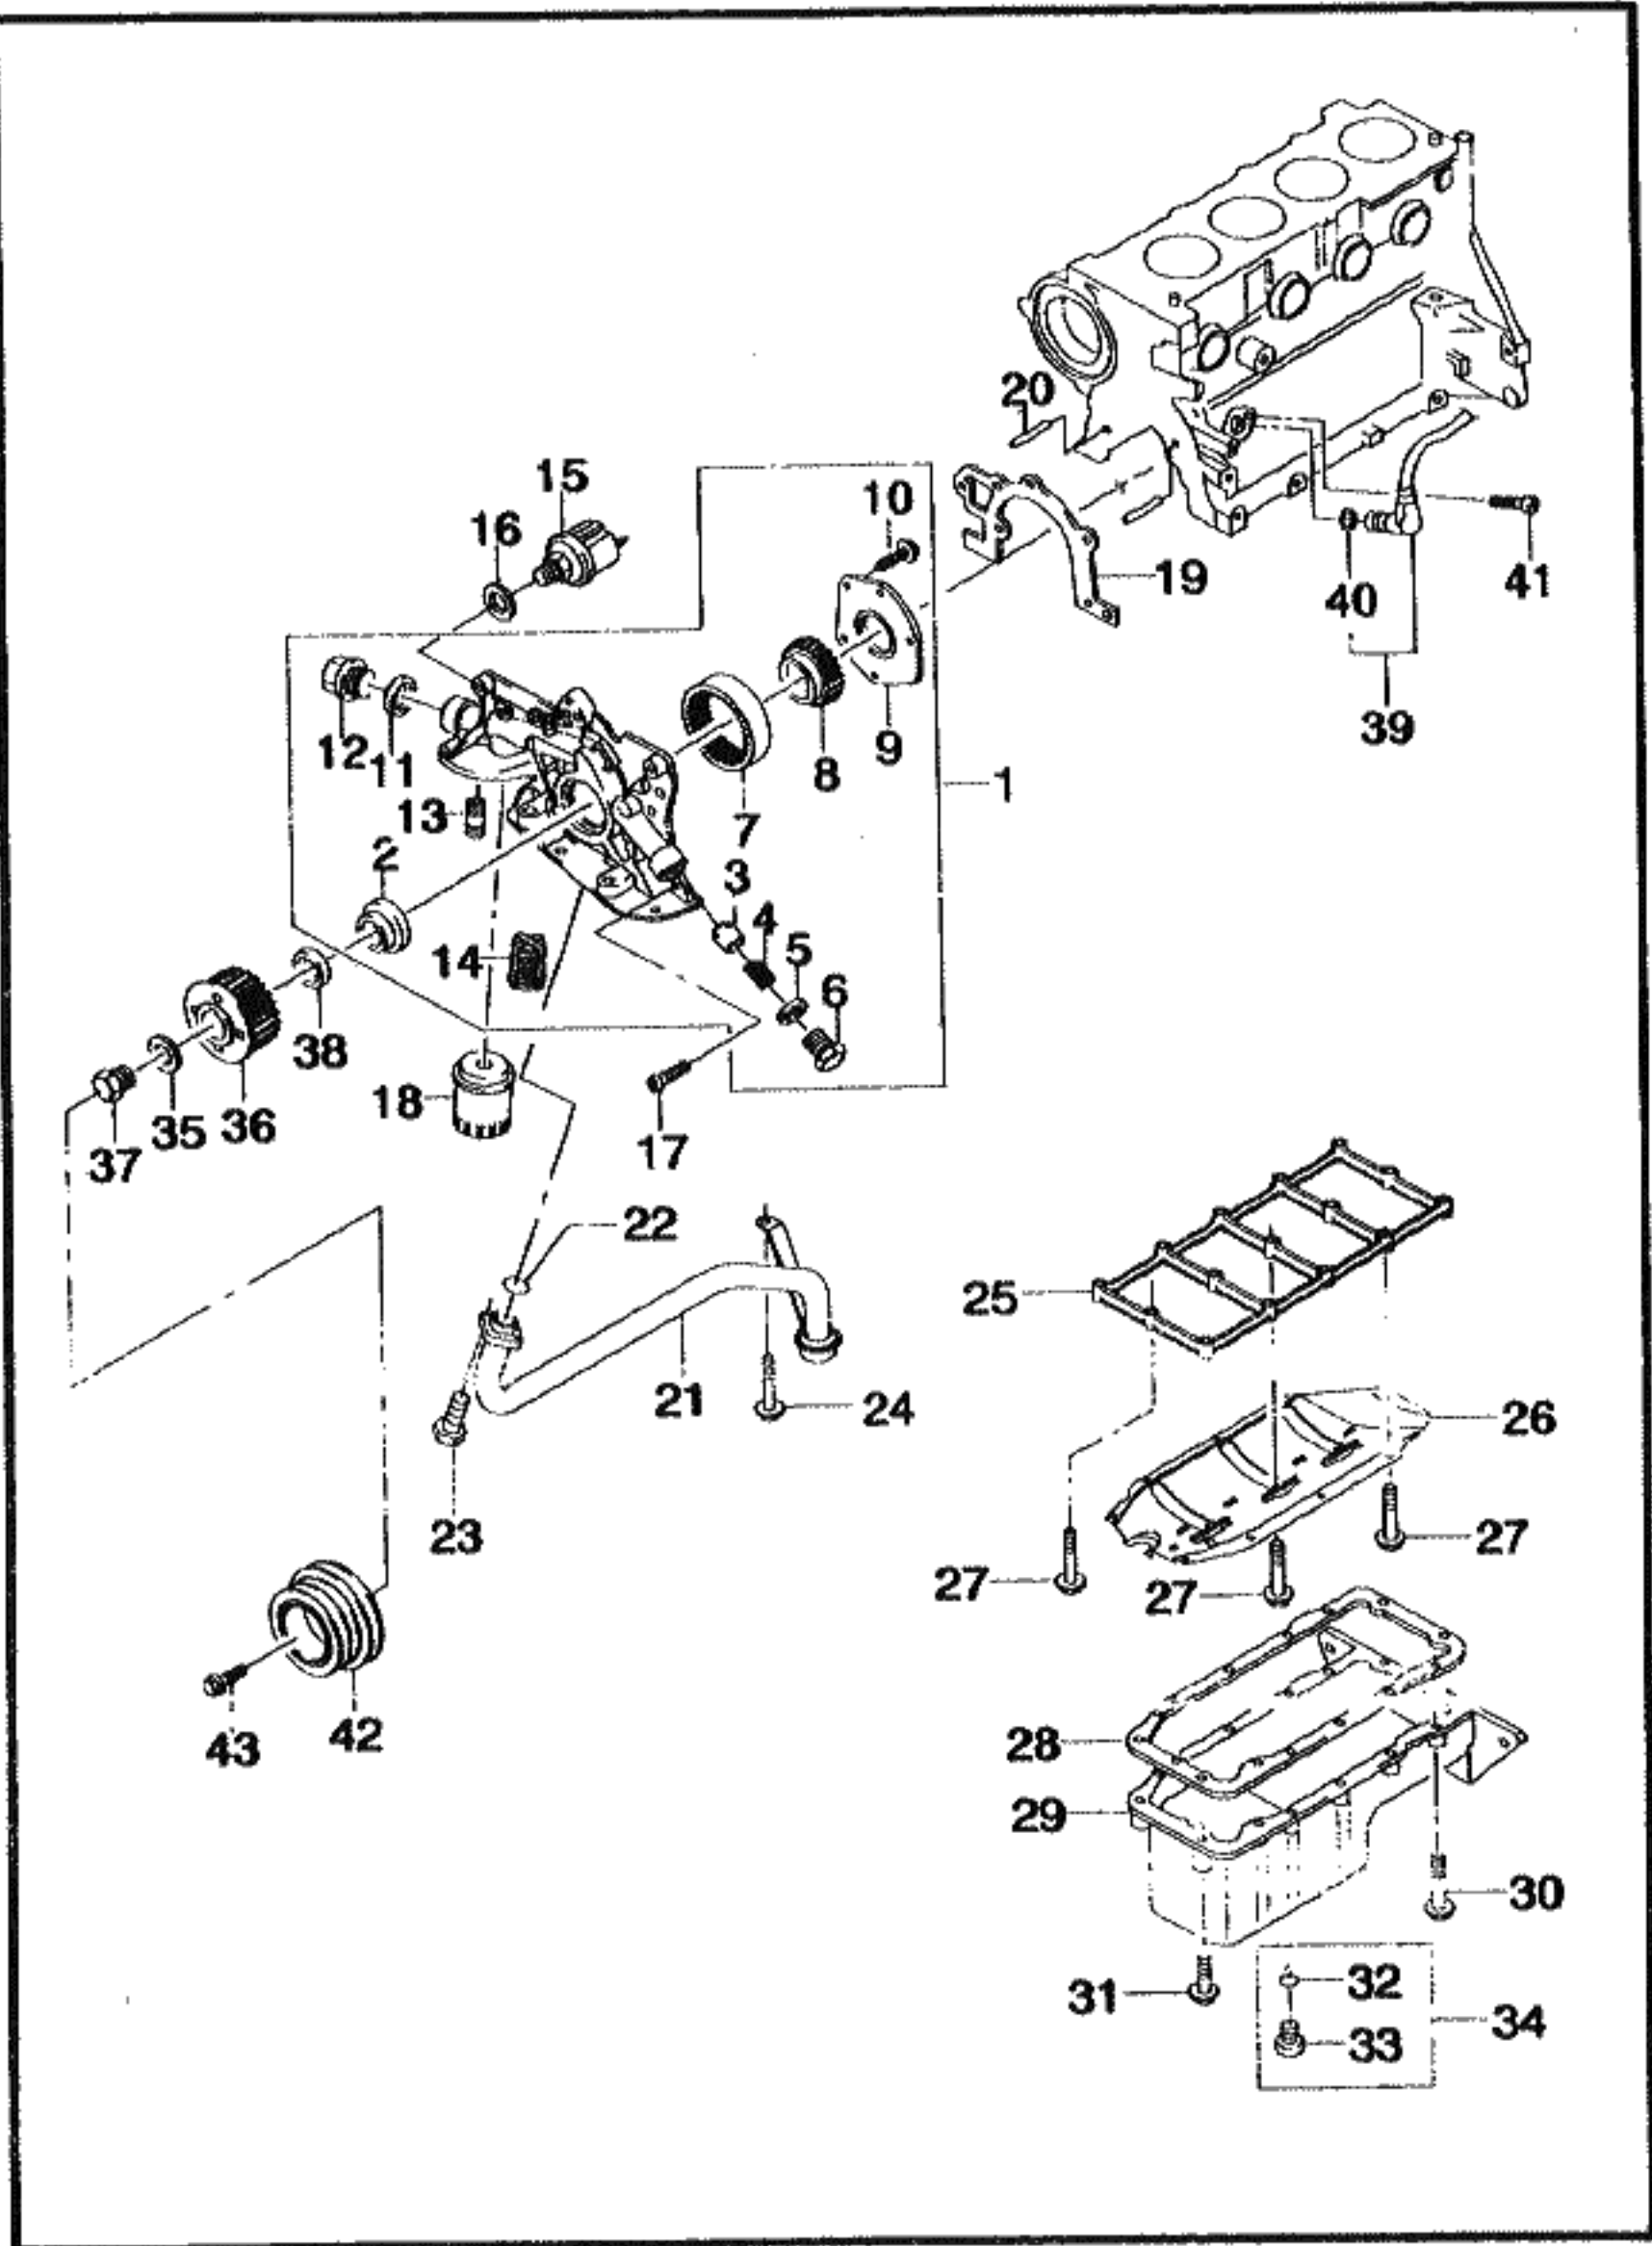


KEY NO.				PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		T / A	LEVEL					FROM	TO				
			S X	C D X									
	[30] 92063103	(E)SCREW (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 2							
	[31] 11096481	(E)SCREW (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 12							
	[32] 09160-14003	(E)WASHER-SEAL (D)DICHTUNGSRING . S S				(F)RONDELLE (S)ARANDELA 1							
	[33] 90409376	(E)PLUG-DRAIN (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 1							
	[34] 92018518	(E)OIL DRAIN PLUG-PACKAGE (D)STÖPSEL . S S				(F)BOUCHON (S)TAPON 1							
	[35] 92023395	(E)WASHER (D)DICHTUNGSRING . S S				(F)RONDELLE (S)ARANDELA 1							
	[36] 90411795	(E)GEAR-CRANKSHAFT (D)GETRIEBE,KURBELWELLE . S S				(F)ENGRENAGE-VILEBREQUIN (S)ENGRANAJE-CIGÜEÑAL 1							
	[37] 11085931	(E)SCREW (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 1							
	[38] 90156055	(E)WASHER-GEAR (D)DICHTUNGSRING . S S				(F)RONDELLE (S)ARANDELA 1							
	[39] 10456515	(E)SENSOR A-CRANKSHAFT (D)O RING . S S				(F)JOINT TORIQUE (S)ANILLO EN O 1							
LEVEL						T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

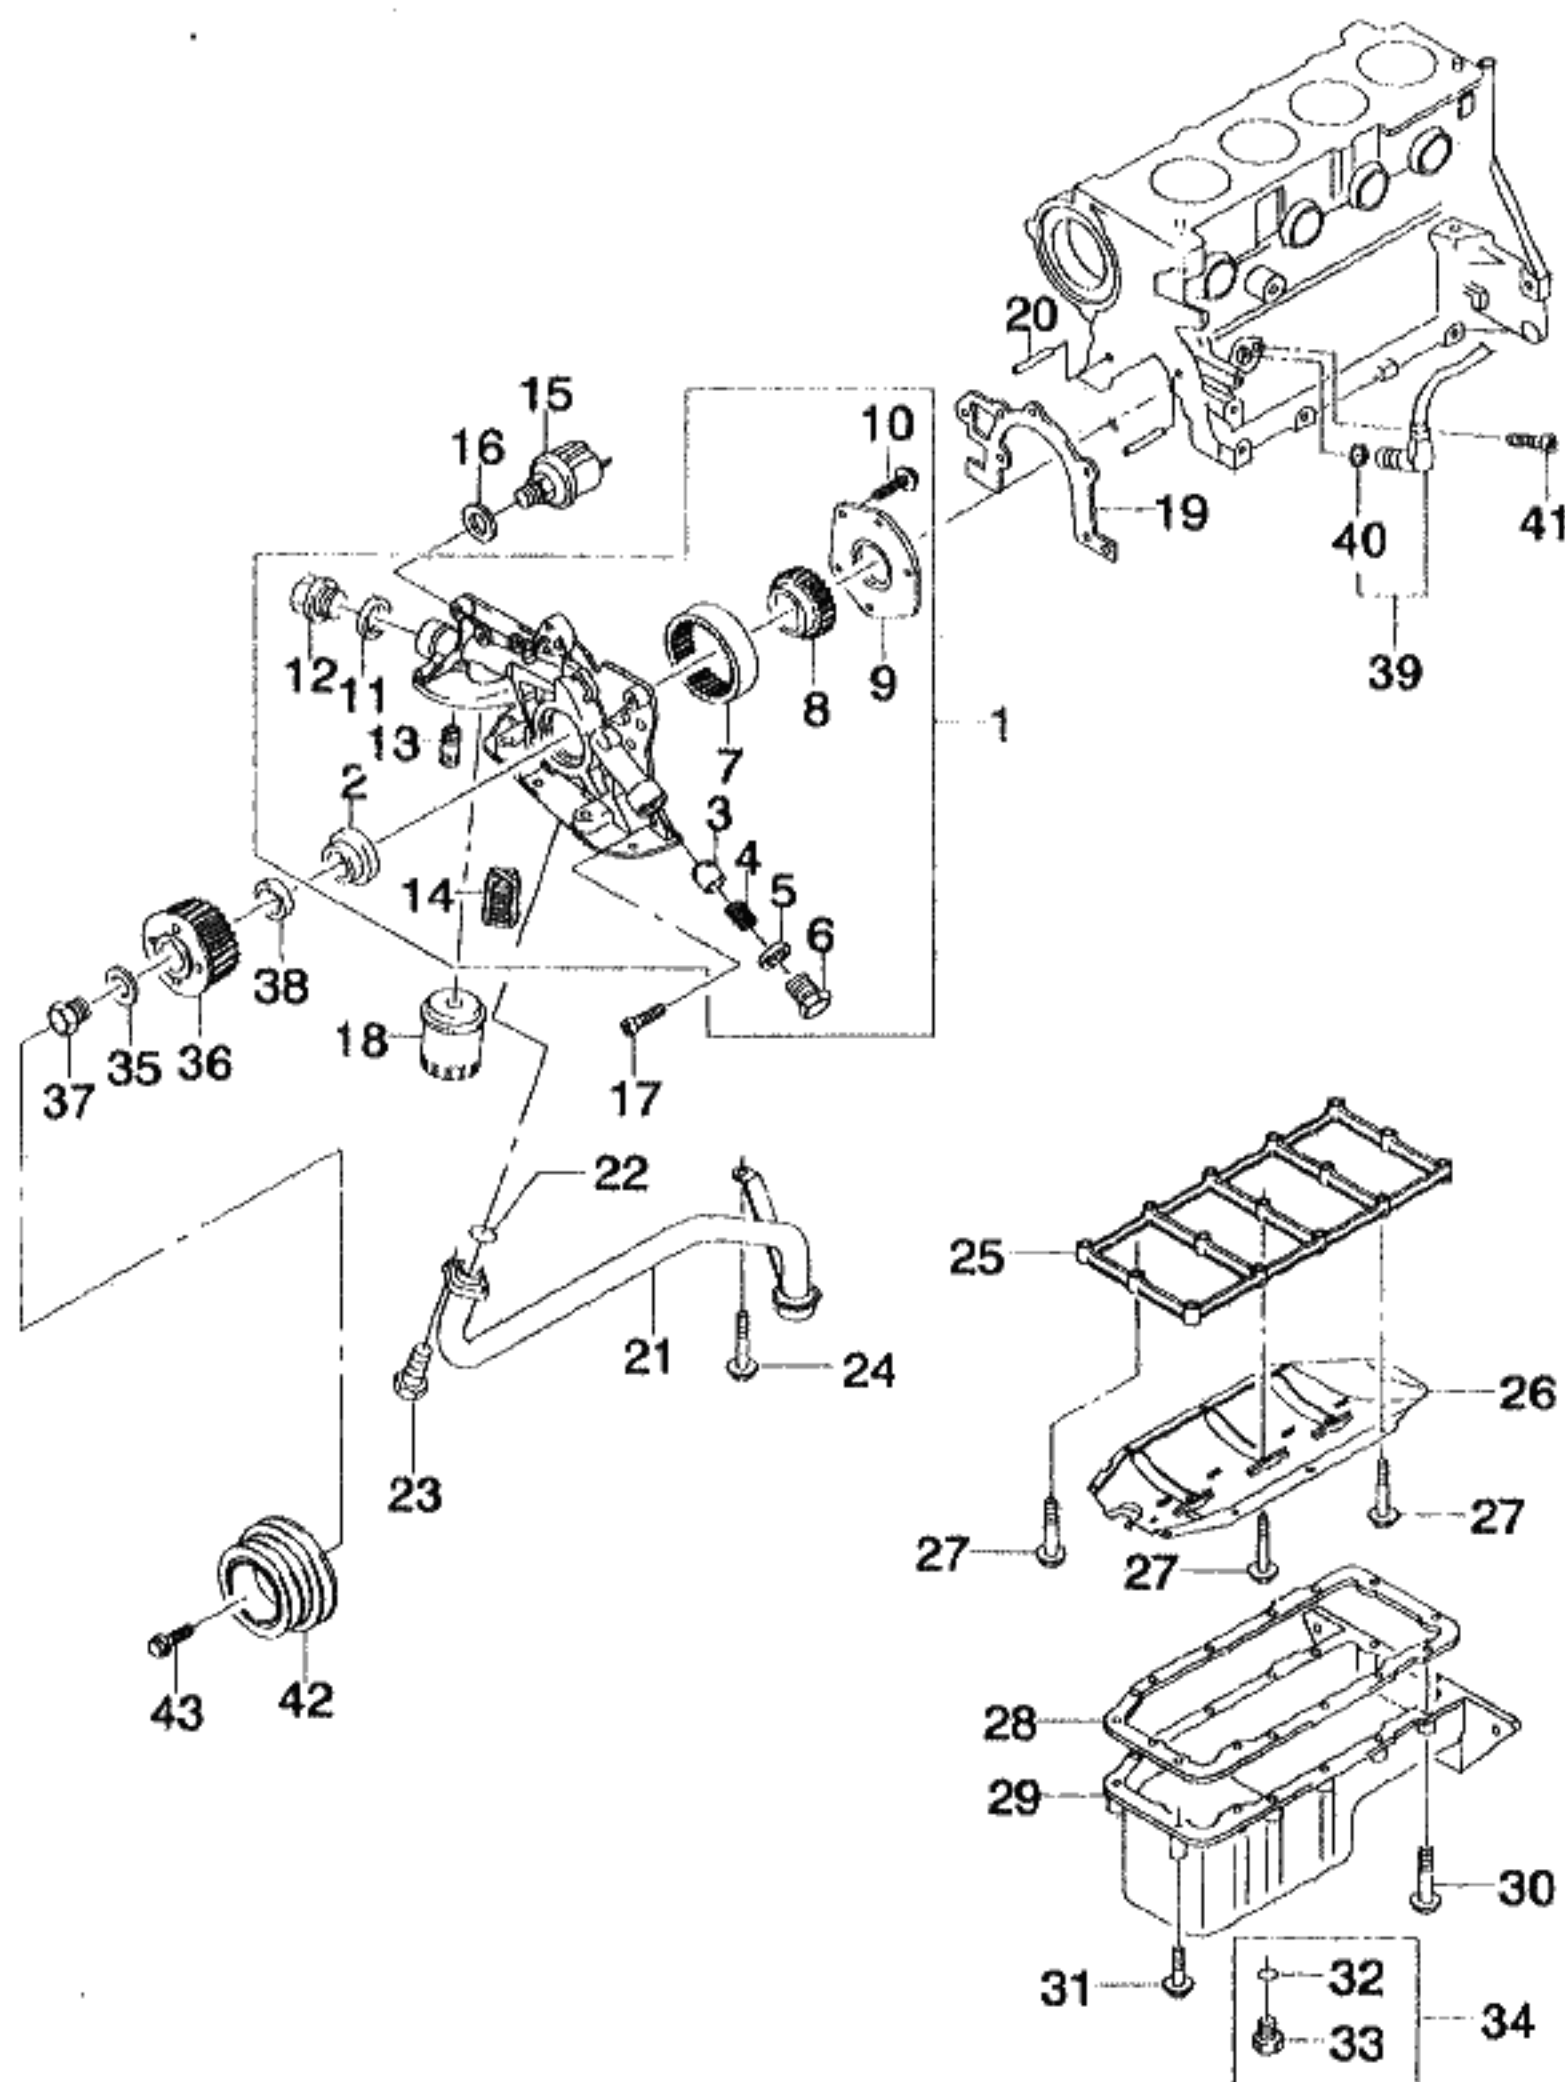


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[40] 10473965	(E)O RING (D)O RING . S S					(F)JOINT TORIQUE (S)ANILLO EN O 1				
	[41] 11093971	(E)BOLT (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 1				
	[42] 96350547	(E)DAMPER A-TORSIONAL (D)ROLLE,KURBELWELLE . S S					(F)POULIE-VILEBREQIN (S)POLEA-CIGUEÑAL 1				
	[43] 07130-08165	(E)BOLT-HEXAGON (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 4				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


1241 ENGINE OIL VENTILATION

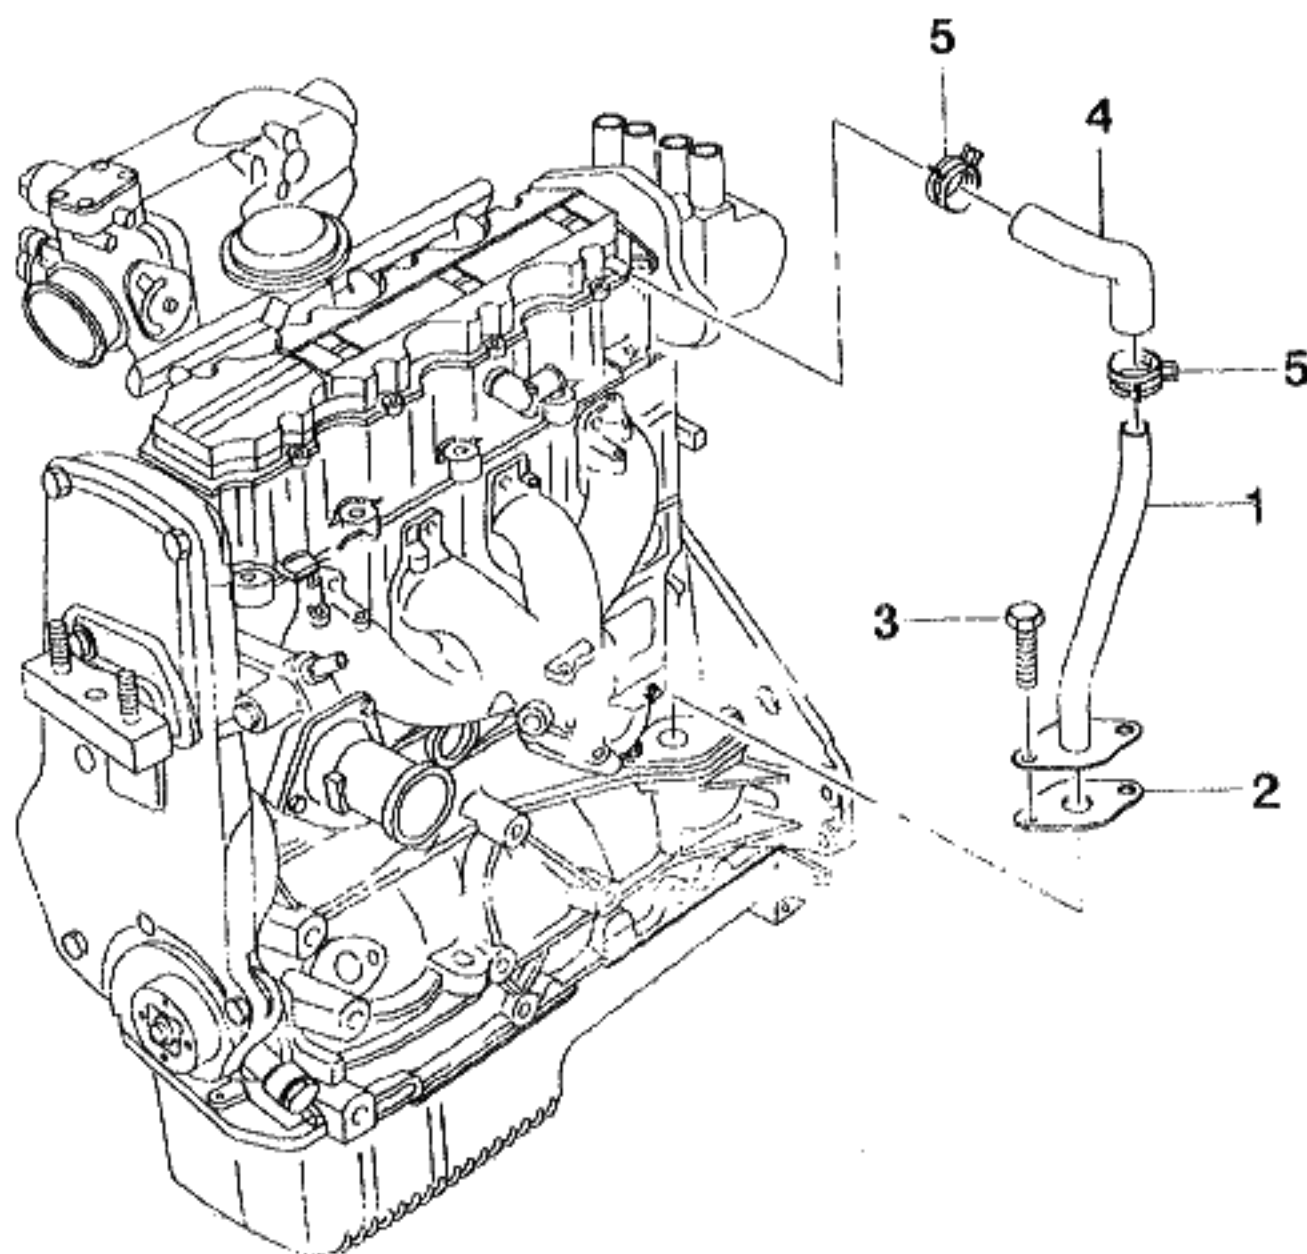


KEY NO.				PART NAME							
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) PIPE A-ENGINE VENTILATION (D) ROHR, MOTOR BELÜFTUNG				(F) TUYAU-VENTILATION MOTEUR (S) TUBERIA-VENTILACION					
	90410190	. S .				1					
	92062804	. O S	&L88			1					
	[02]	(E) GASKET-ENG VENTILATION (D) DICHTUNG, MOTOR BELÜFTUNG				(F) JOINT-VENTILATION MOTEUR (S) JUNTA					
	90500571	. S S				1					
	[03]	(E) SCREW (D) SCHRAUBE				(F) VIS (S) TORNILLO					
	11052951	. S S				2					
	[04]	(E) HOSE-ENG VENTILATION (D) SCHLAUCH, MOTOR BELÜFTUNG				(F) TUYAU-VENTILATION MOTEUR (S) MANGUERA-VENTILACION					
	90409617	. S .				1					
	90411945	. O S	&L88			1					
	[05]	(E) CLAMP (D) KLAMMER				(F) PINCE (S) ABRAZADERA					
	90467971	. S S				1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

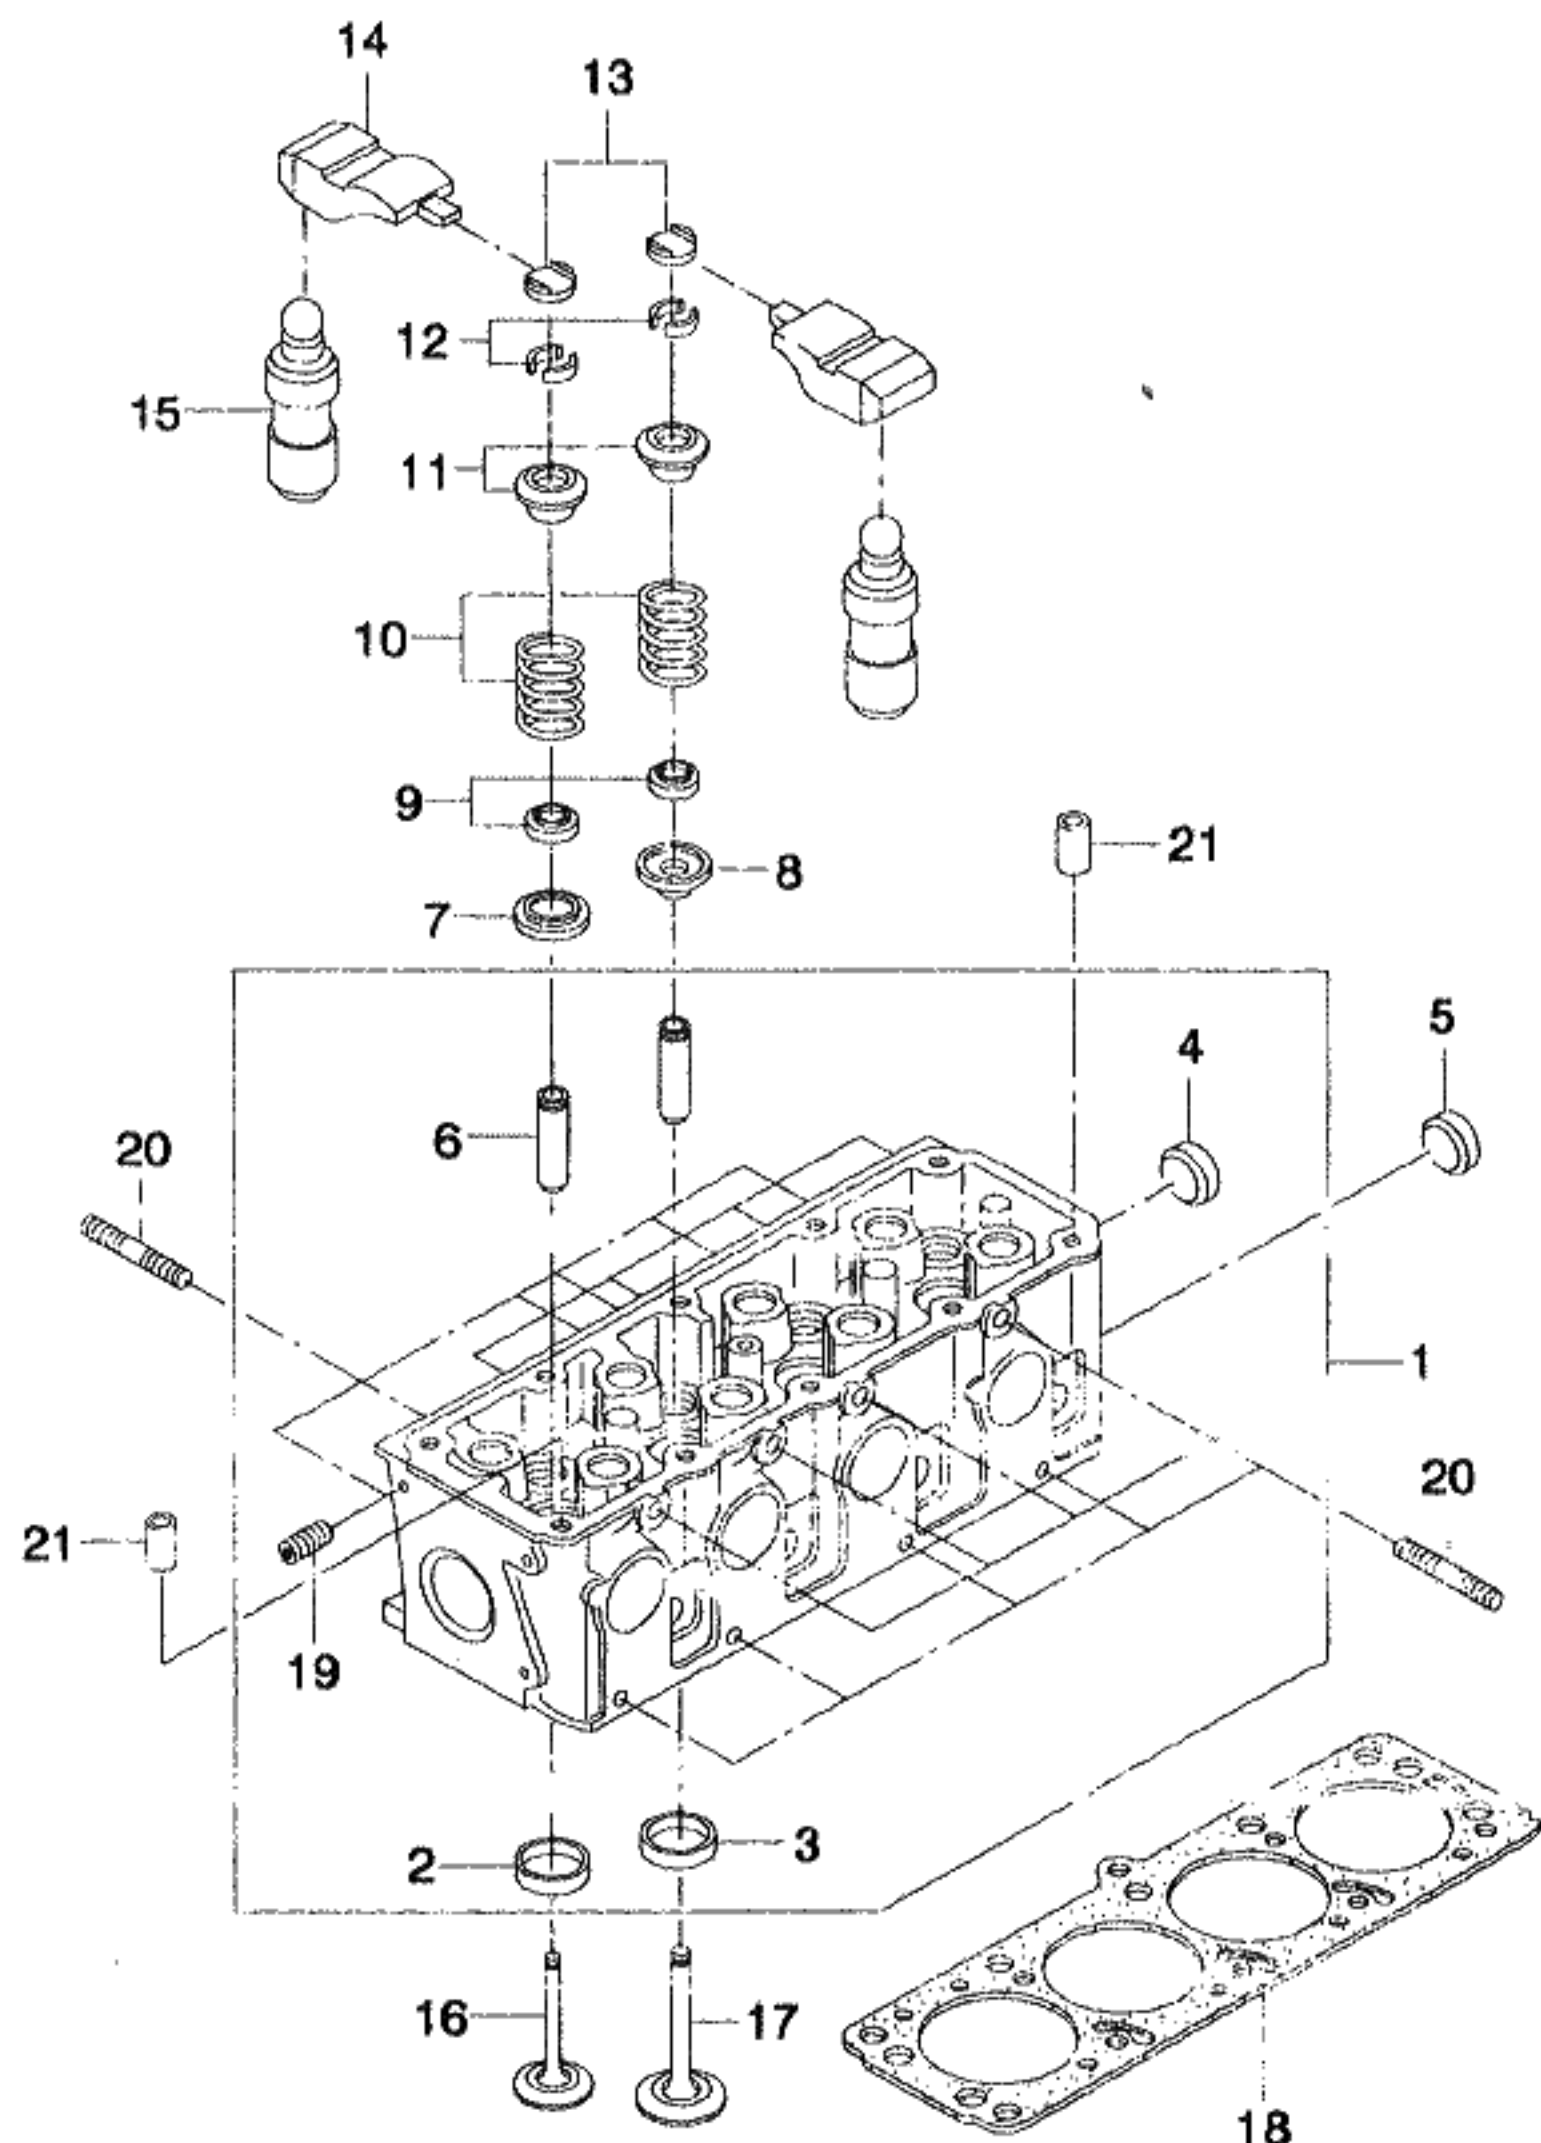


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]	90280028	(E)HEAD-CYLINDER (D)ZYLINDERKOPF	S			(F)CULASSE-CYLINDRE (S)CABEZA-CILINDRO	1				
[02]	90233708	(E)RING-EXH VLV SEAT INSERT (D)RING, VENTIL SITZ EINSATZ	S			(F)ANNEAU (S)ANILLO	4			STD	
	90233709		S				4			OIS	
[03]	90233712	(E)RING-INT VLV SEAT INSERT (D)RING	S			(F)ANNEAU (S)ANILLO	4			STD	
	90233713		S				4			OIS	
[04]	11072963	(E)PLUG-WATER JACKET (D)STÖPSEL, WASSER MANTEL	S			(F)BOUCHON-JAQUETTE EAU (S)TAPON	1			30mm	
[05]	11044142	(E)CAP (D)DECKEL	S			(F)CHAPEAU (S)TAPA	1			STD	
	11084312		S				1			OIS	
[06]	90108699	(E)GUIDE-VALVE (D)FÜHRING, VENTIL	S			(F)GUIDE-SOUPAPE (S)GUIA-VALVULA	8			STD	
	96108700		S				8			OIS	
[07]	90106266	(E)CAP-VALVE ROTARY (D)DECKEL, ABGASVENTIL DREHTE	S			(F)CHAPEAU (S)TAPA-ROTATORIO	4				
[08]	90128720	(E)SEAT-INTAKE VALVE SPRING (D)SITZ, EINLAß VENTIL	S			(F)SIEGE (S)ASIENTO-RESORTE	4				
[09]		(E)SEAL-VALVE STEM (D)DICHTUNG, VENTIL STIEL				(F)JOINT-TIGE DE SOUPAPE (S)SELLO-TALLO DE VALVULA					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

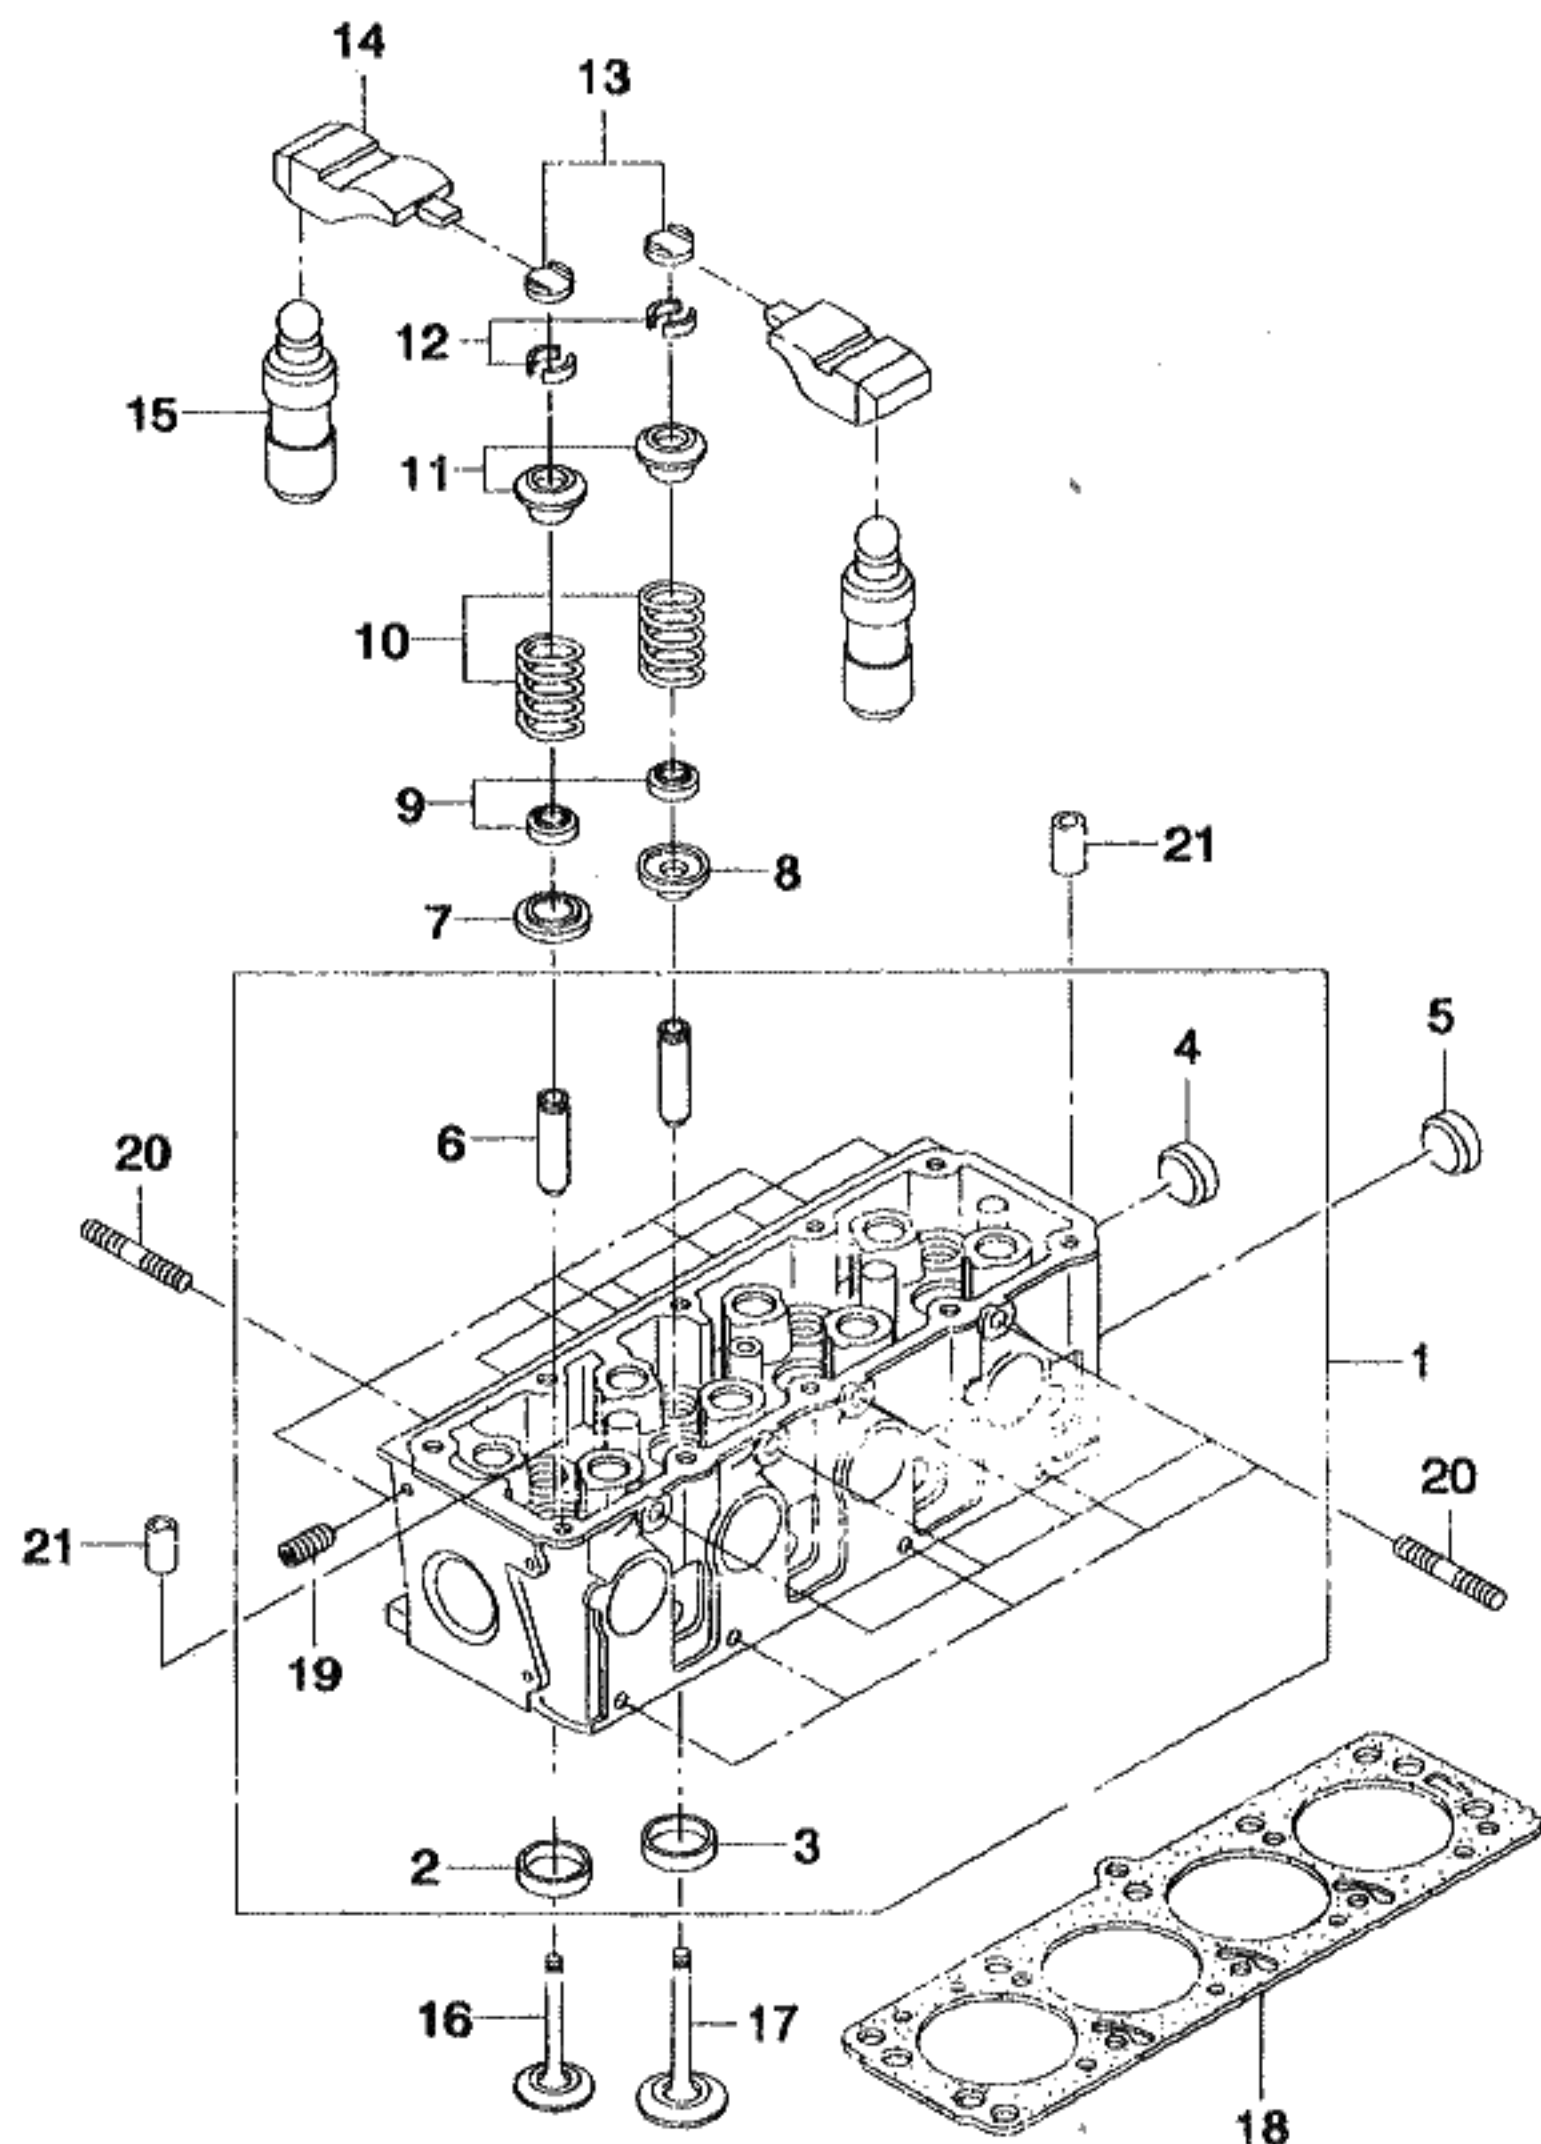


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	90215296	.	S	.	(E)SPRING-VALVE (D)FEDERUNG,VENTIL		8			(F)RESSORT-SOUPAPE (S)RESORTE-VALVULA	
	[10]										
	90410315	.	S	.	(E)CAP-VALVE SPRING (D)DECKEL,VENTIL-FEDERUNG		8			(F)CHAPEAU (S)TAPA-RESORTE DE VALVULA	
	[11]										
	90169987	.	S	.	(E)RETAINER-VALVE SPRING (D)HALTER,VENTIL FEDERUNG		8			(F)ARRETOIR (S)RETENEDOR	
	[12]										
	90076732	.	S	.	(E)PIECE-VALVE THRUST (D)TEIL,SCHUB		16			(F)PIECE-BUTEE DE SOUPAPE (S)PIEZA-EMPUJE VALVULA	
	[13]										
	90076745	.	S	.	(E)LIFTER-CAM FOLLOWER (D)HEBER,NOCKEN ANHÄNGER		8			(F)LEVIER-SATELLITE DE CAME (S)LEVANTADOR	
	[14]										
	05233315	.	S	.	(E)FOLLOWER-CAM (D)ANHÄNGER,NOCKE		8			(F)SATELLITE-CAME (S)SEGUIDOR-LEVA	
	[15]										
	90409194	.	S	.	(E)VALVE-EXHAUST (D)VENTIL,ABGAS		8			(F)SOUPAPE-ECHARPEMENT (S)VALVULA-ESCAPE	
	[16]										
	90323757	.	S	.			4			STD	
	90323759	.	S	.			4			O/S(0.15)	
	90323760	.	S	.			4			O/S(0.25)	
	[17]				(E)VALVE-INTAKE (D)VENTIL,EINLAß					(F)SOUPAPE-ADMISSION (S)VALVULA-ENTRADA	
	90220121	.	S	.			4			STD	
	90220123	.	S	.			4			O/S(0.15)	
	90220124	.	S	.			4			O/S(0.25)	
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

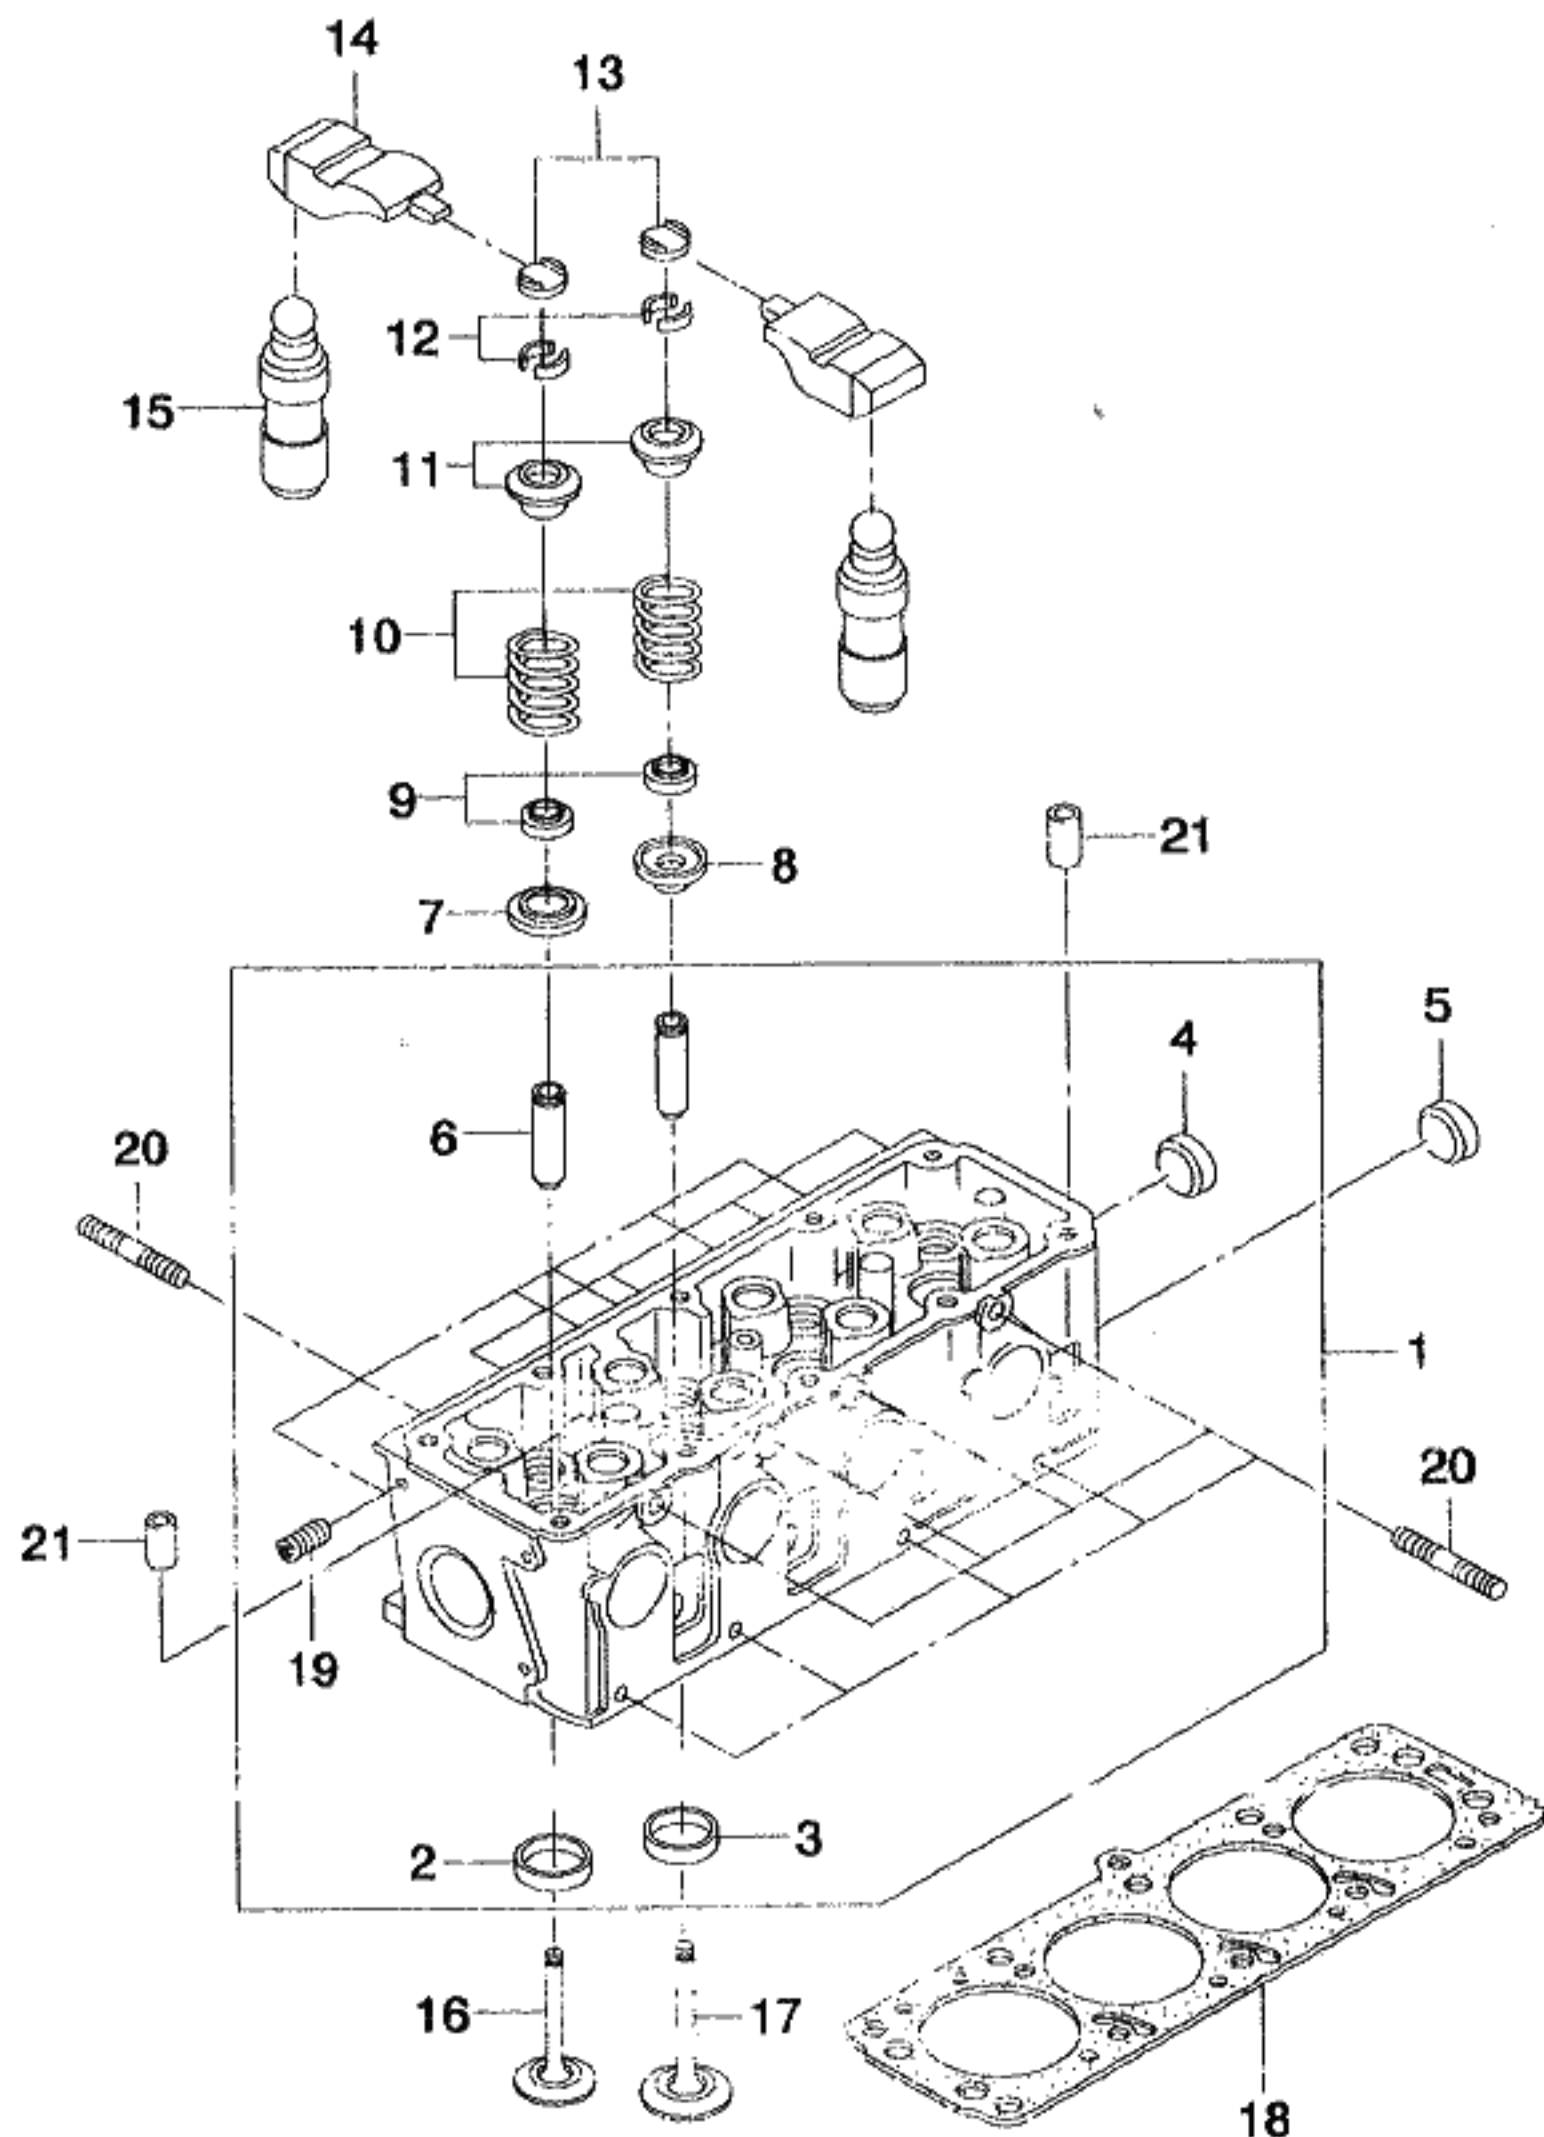


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[18] 92062330	(E)GASKET-CYLINDER HEAD (D)DICHTUNG,ZYLINDERKOPF . S .			(F)JOINT-CULASSE CYLINDRE (S)JUNTA 1						
	[19] 09246-10001	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN . S .			(F)BOUCHON-VIS (S)TAPON-TORNILLO 4						
	[20] 90106924	(E)BOLT-STUD (D)STIFTSCHRAUBE . S .			(F)BOULON-TETON (S)PERNO-ESPIGA 17						
	[21] 90144241	(E)SLEEVE (D)HÜLSE,KUPPLUNG GEHÄUSE . S .			(F)CHEMISE (S)MANGA-CARTER DE EMBRAGUE 2						
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

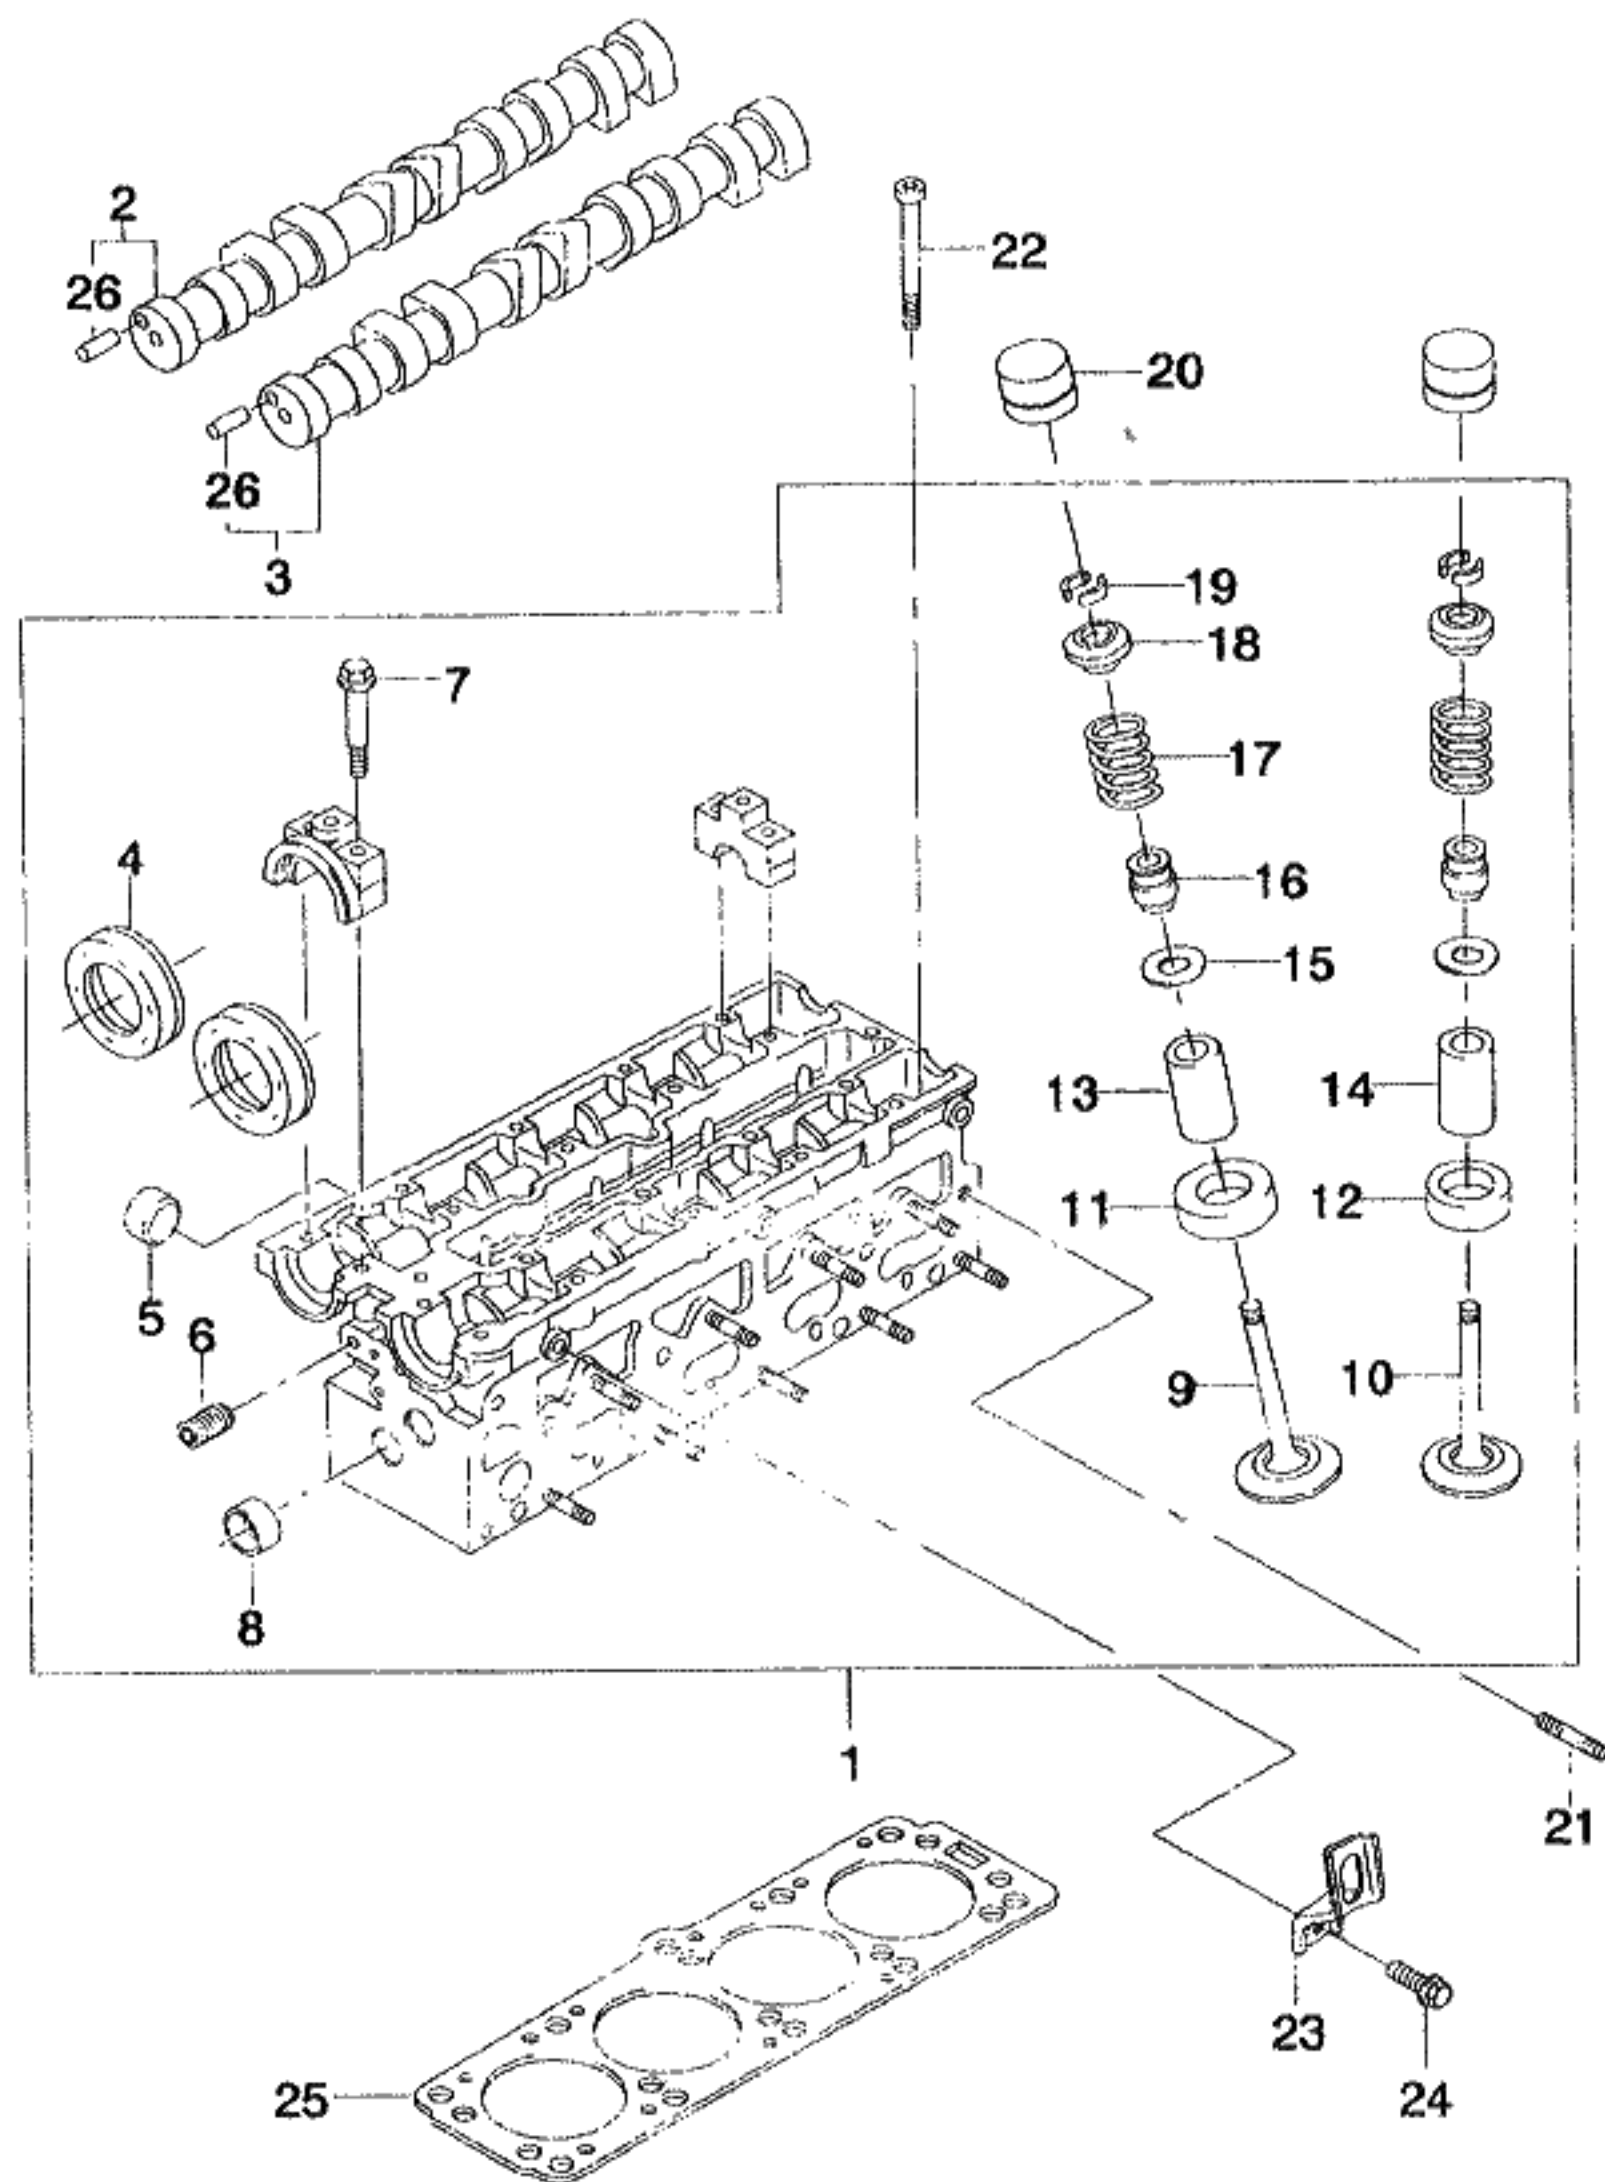


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 92062029	(E) HEAD A-CYLINDER (D) ZYLINDERKOPF . O S				(F) CULASSE-CYLINDRE (S) CABEZA-CILINDRO 1					
	[02] 90529062	(E) CAMSHAFT A-INTAKE (D) NOCKENWELLE . O S				(F) ARBRE A CAMES (S) CIGUEÑAL 1					
	[03] 90529063	(E) CAMSHAFT A-EXHAUST (D) NOCKENWELLE . O S				(F) ARBRE A CAMES (S) CIGUEÑAL 1					
	[04] 90280463	(E) RING-SHAFT SEAL (D) DICHTUNG . O S				(F) JOINT (S) SELLO 1					
	[05] 11062402 11071923	(E) PLUG-WATER JACKET (D) STÖPSEL, WASSER MANTEL . O S . O S				(F) BOUCHON-JAQUETTE EAU (S) TAPON 2 A				18mm O/S	
	[06] 09246-10001	(E) PLUG-SCREW (D) STÖPSEL, SCHRAUBEN . O S				(F) BOUCHON-VIS (S) TAPON-TORNILLO 4					
	[07] 11093781	(E) SCREW (D) SCHRAUBE . O S				(F) VIS (S) TORNILLO 20					
	[08] 90502542 11094191	(E) PLUG-WATER (D) STÖPSEL . O S . O S				(F) BOUCHON (S) TAPON 3 A				24mm O/S	
	[09] 90412277 90412278	(E) VALVE-INTAKE (D) VENTIL, EINLAß . O S . O S				(F) SOUPAPE-ADMISSION (S) VALVULA-ENTRADA 8 A				STD O/S(0.075)	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

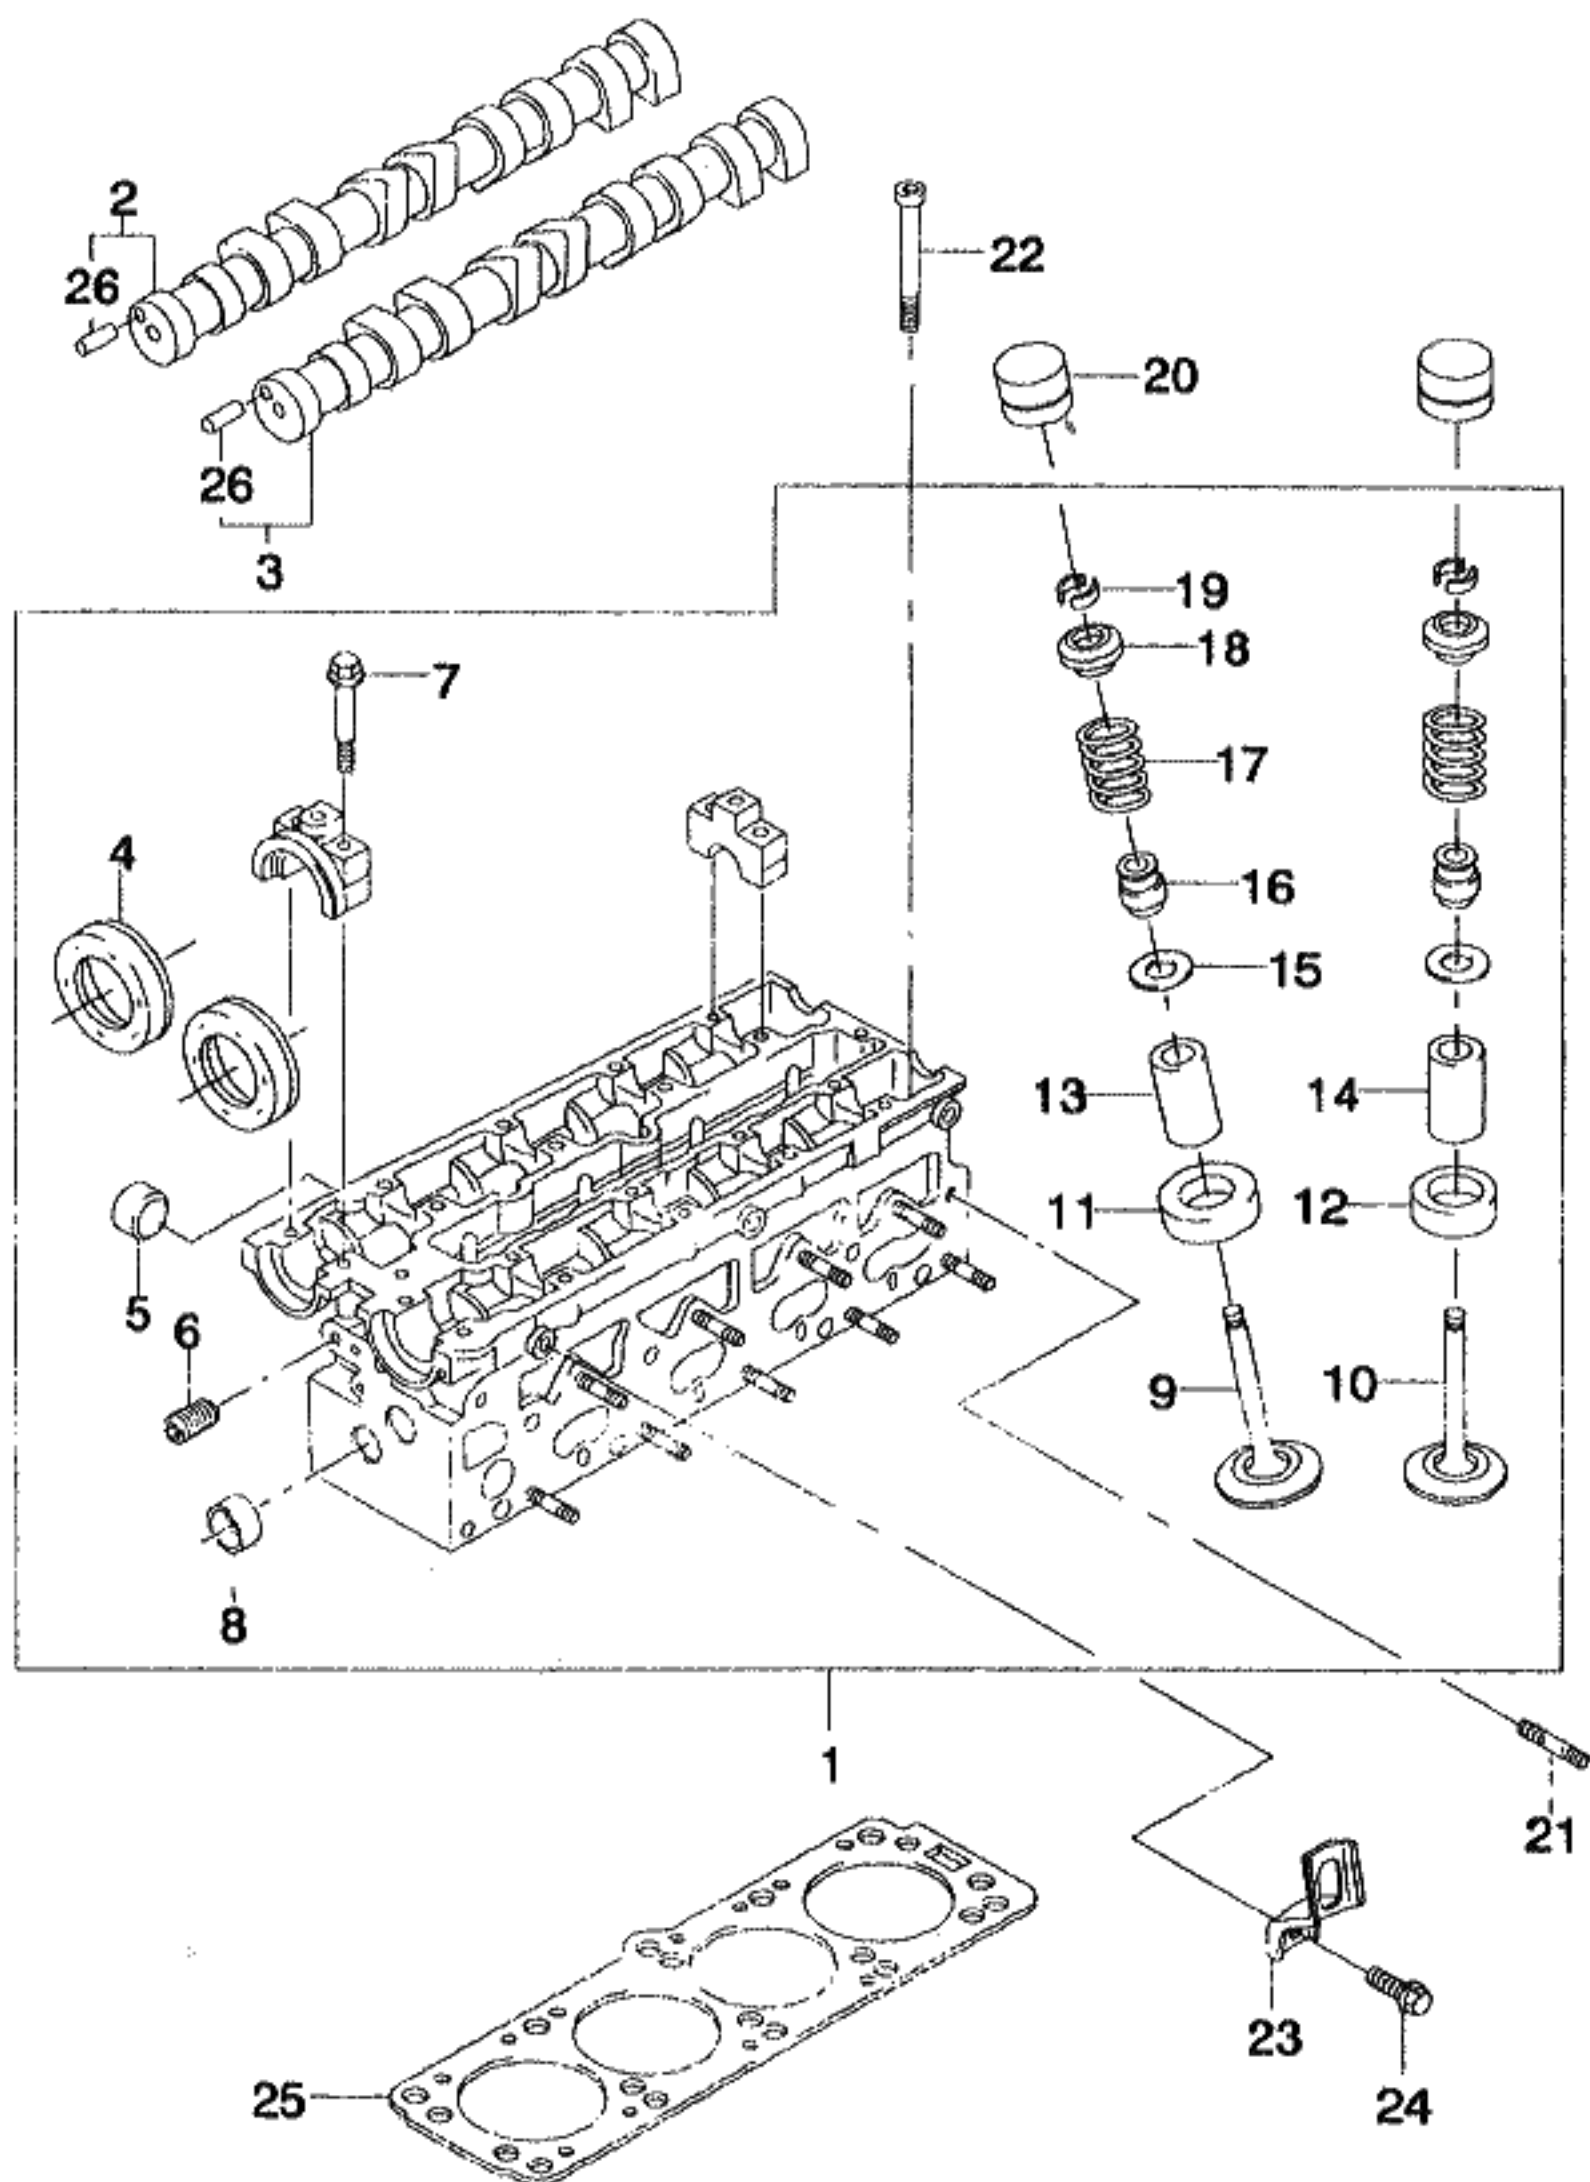


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	90412279	.	O	S			A			O/S(0.150)	
	[10]				(E) VALVE-EXHAUST (D) VENTIL, ABGAS		(F) SOUPAPE-ECHAPPEMENT (S) VALVULA-ESCAPE				
	90410813	.	O	S			8			STD	
	90410814	.	O	S			A			O/S(0.075)	
	90410815	.	O	S			A			O/S(0.150)	
	[11]				(E) RING-INT VLV SEAT INSERT (D) RING		(F) ANNEAU (S) ANILLO				
	90502081	.	O	S			8			STD	
	90528686	.	O	S			A			O/S	
	[12]				(E) RING-EXH VLV SEAT INSERT (D) RING		(F) ANNEAU (S) ANILLO				
	90502082	.	O	S			8			STD	
	90528687	.	O	S			A			O/S	
	[13]				(E) GUIDE-INTAKE (D) FÜHRING, VENTIL		(F) GUIDE-SOUPAPE (S) GUIA-VALVULA				
	90502079	.	O	S			8			STD	
	90528683	.	O	S			A			O/S(0.20)	
	90528685	.	O	S			A			O/S(0.40)	
	[14]				(E) GUIDE-EXHAUST (D) FÜHRING, VENTIL		(F) GUIDE-SOUPAPE (S) GUIA-VALVULA				
	90502080	.	O	S			8			STD	
	90528684	.	O	S			A			O/S(0.20)	
	90528688	.	O	S			A			O/S(0.40)	
	[15]				(E) SEAT-VALVE SPRING (D) SITZ		(F) SIEGE (S) ASIEN-RESORTE				
	90410740	.	O	S			16				
	[16]				(E) SEAL A-VALVE STEM (D) DICHTUNG, VENTIL STIEL		(F) JOINT-TIGE DE SOUPAPE (S) SELLO-TALLO DE VALVULA				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

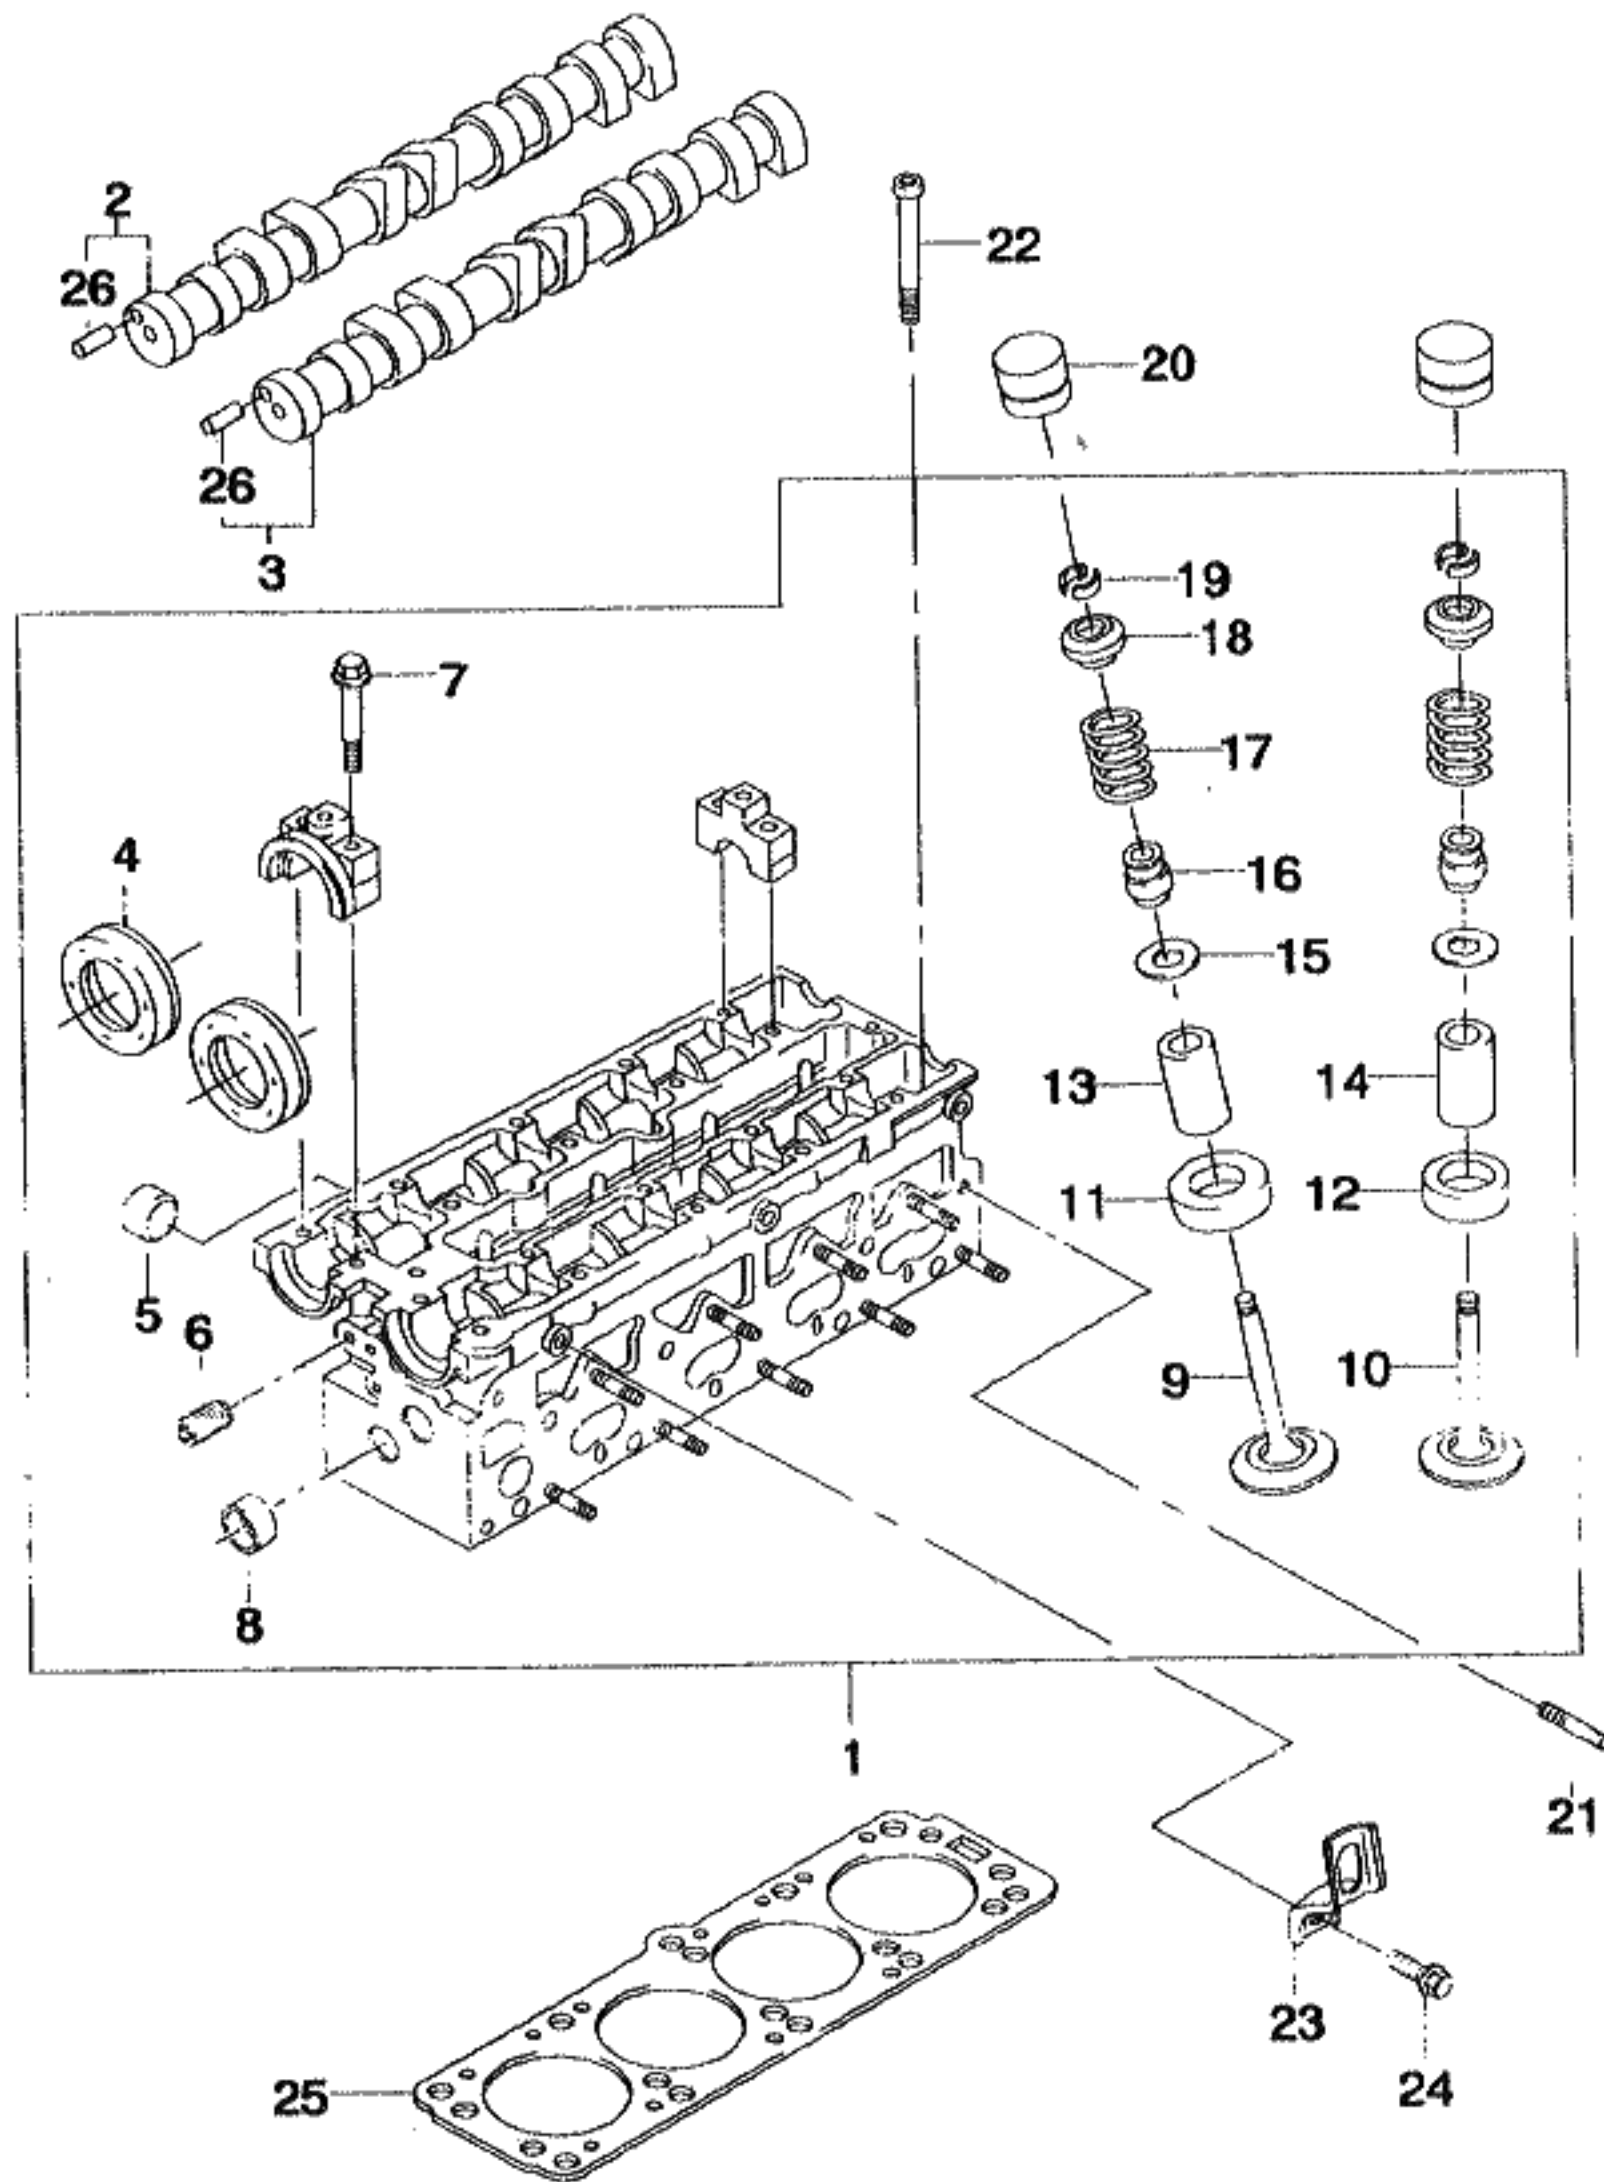


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL								
			S X	C D X							
	90410741	.	O	S			16				
	[17]				(E)SPRING-VALVE (D)FEDERUNG, VENTIL		(F)RESSORT-SOUPAPE (S)RESORTE-VALVULA				
	90448050	.	O	S			16				
	[18]				(E)CAP-VALVE (D)DECKEL		(F)CHAPEAU (S)TAPA				
	90354649	.	O	S			16				
	[19]				(E)RETAINER-VALVE CAP (D)HALTER, FEDERUNG		(F)ARRETOIR-RESSORT (S)RETENEDOR-RESORTE				
	90354648	.	O	S			32				
	[20]				(E)ADJUSTER-TAPPET (D)EINSTELLVORRICHTUNG		(F)AJUSTEUR (S)AJUSTADOR				
	90502514	.	O	S			16				
	[21]				(E)BOLT-STUD (D)STIFTSCHRAUBE		(F)BOULON-TETON (S)PERNO-ESPIGA				
	90106924	.	O	S			10				
	[22]				(E)BOLT-CYLINDER HEAD (D)SCHRAUBE, ZYLINDERKOPF		(F)BOULON-CULASSE (S)PERNO-TAPA DE CILINDRO				
	90466480	.	O	S			10				
	[23]				(E)BRACKET-ENGINE LIFTING (D)TRÄGER, MOTORENHEBER		(F)SUPPORT-LEVAGE DE MOTEUR (S)SOPORTE-LEVANTE DE MOTOR				
	90501844	.	O	S			2				
	[24]				(E)BOLT-BRACKET TO ENGINE (D)SCHRAUBE		(F)BOULON (S)PERNO				
	11093601	.	O	S			2				
	[25]				(E)GASKET-CYLINDER HEAD (D)DICHTUNG, ZYLINDERKOPF		(F)JOINT-CULASSE CYLINDRE (S)JUNTA				
	92062605	.	O	S			1				
	[26]				(E)PIN-CAMSHAFT GEAR (D)STIFT		(F)BROCHE (S)PASADOR				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

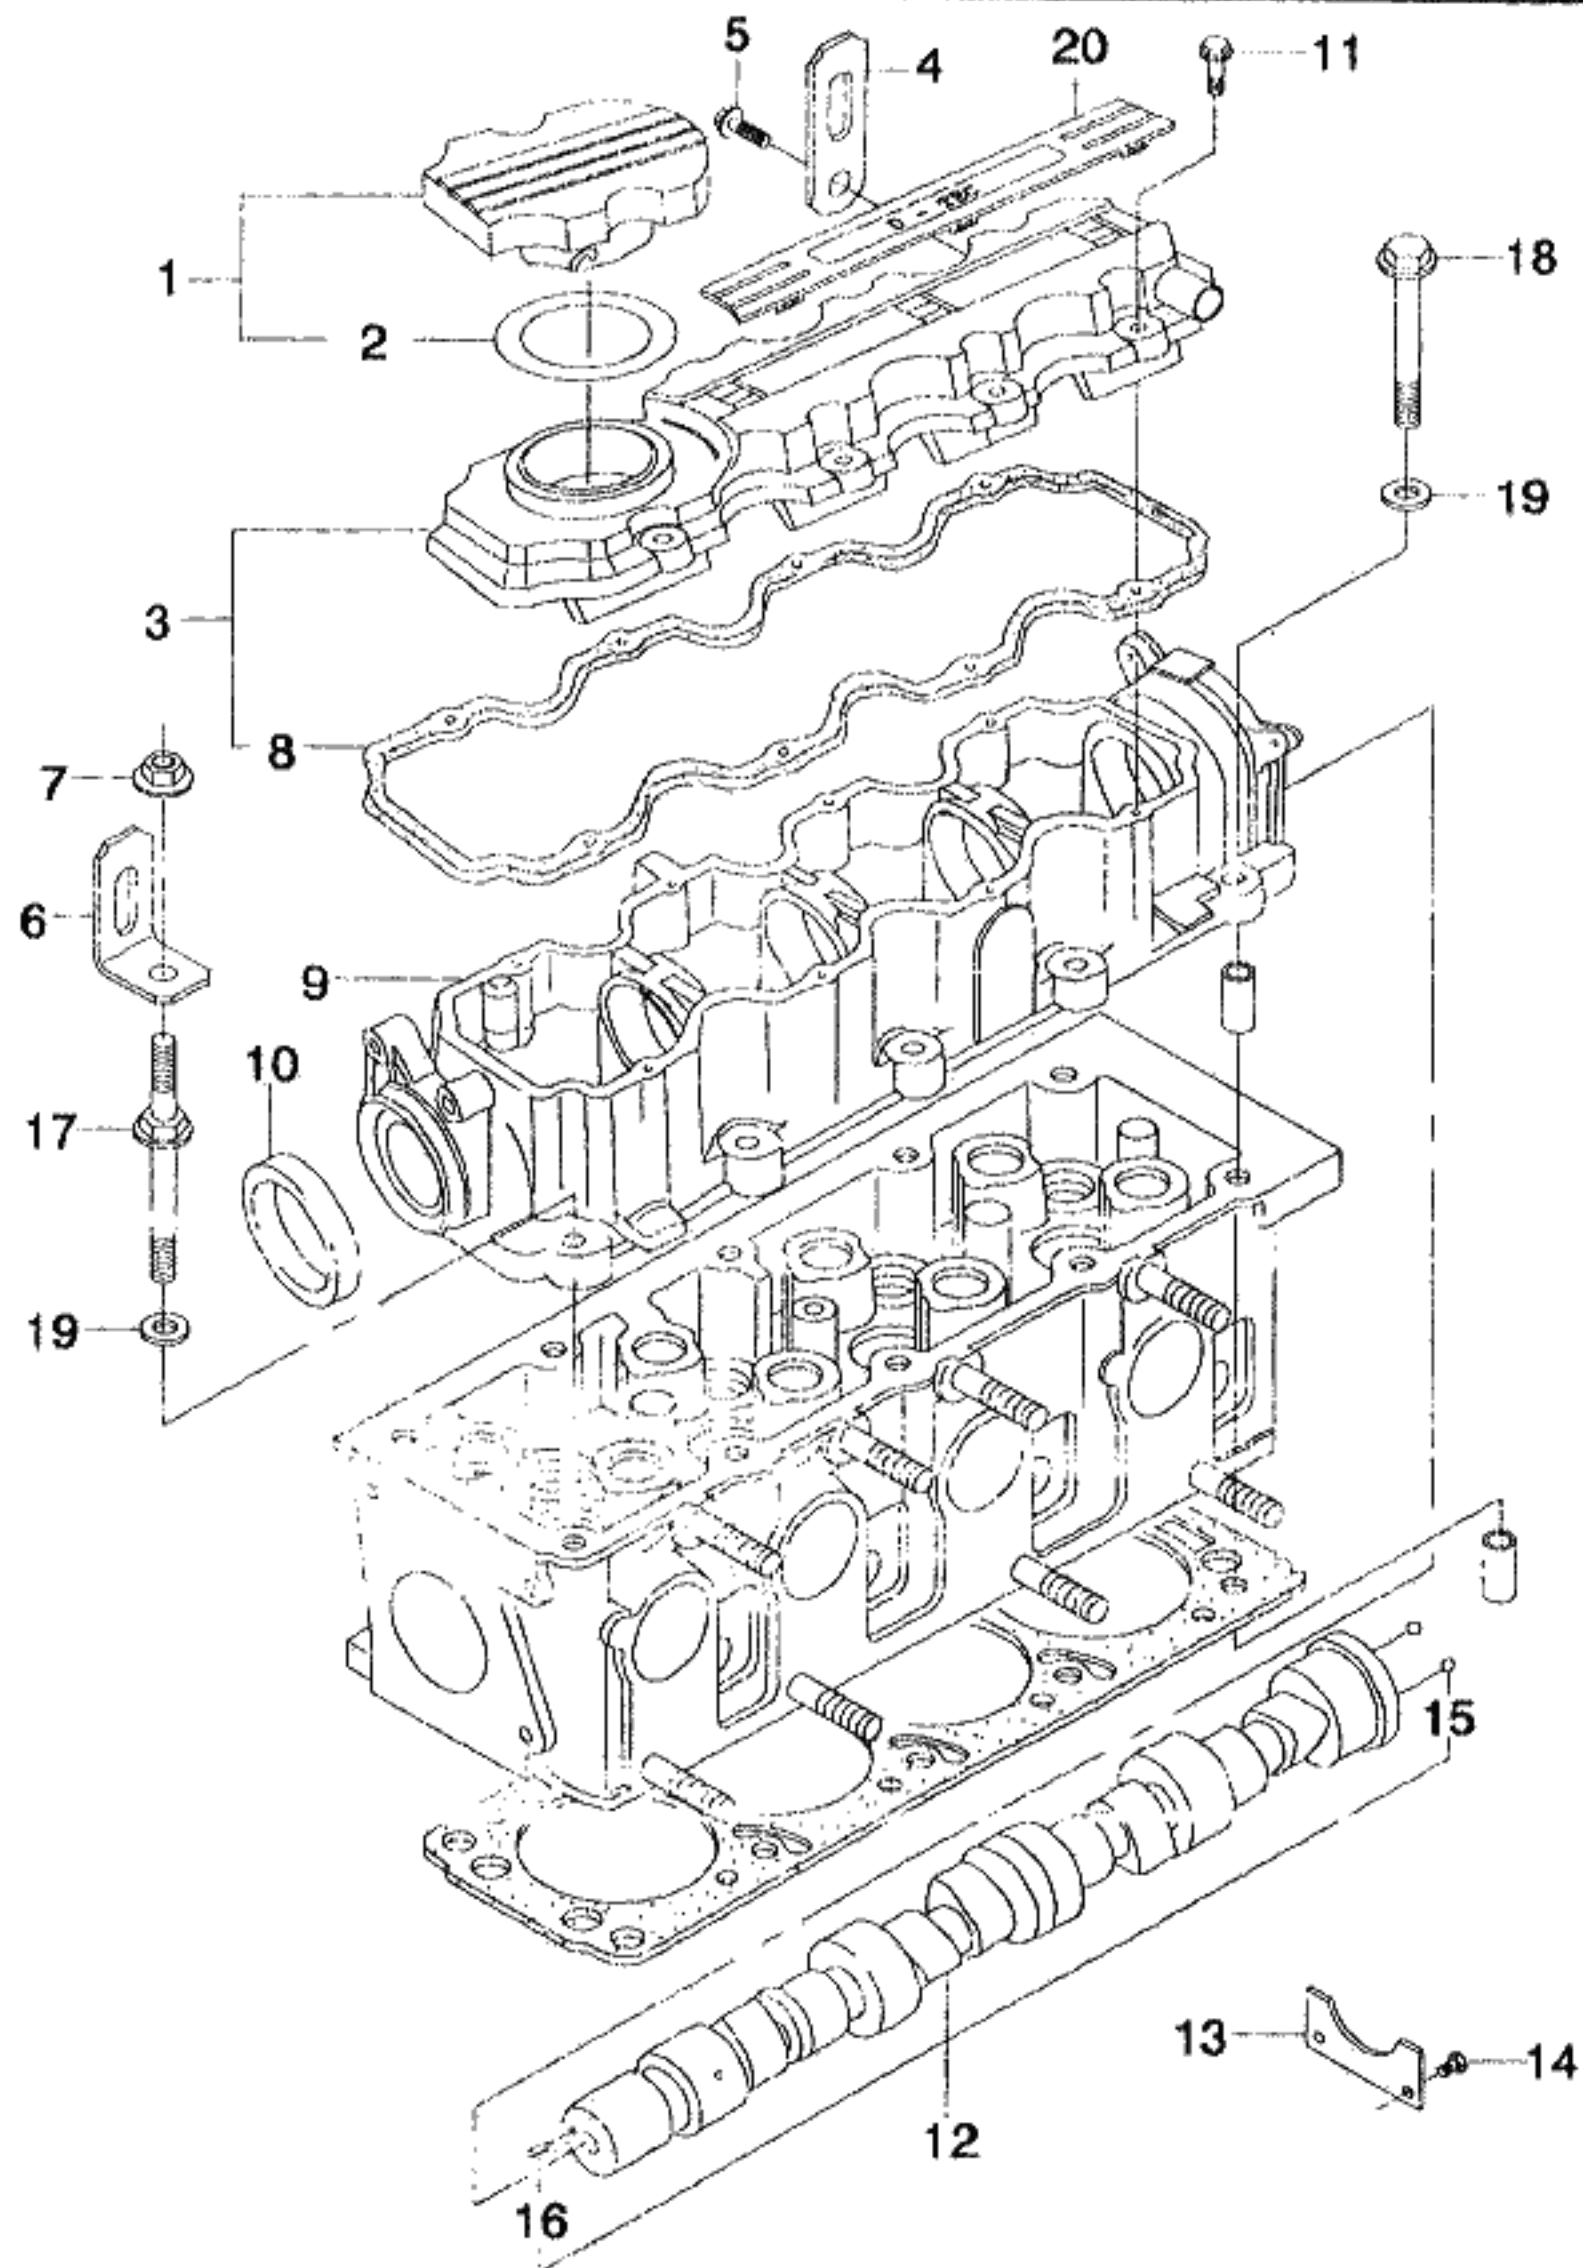


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	90501111	.	O	S			2					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

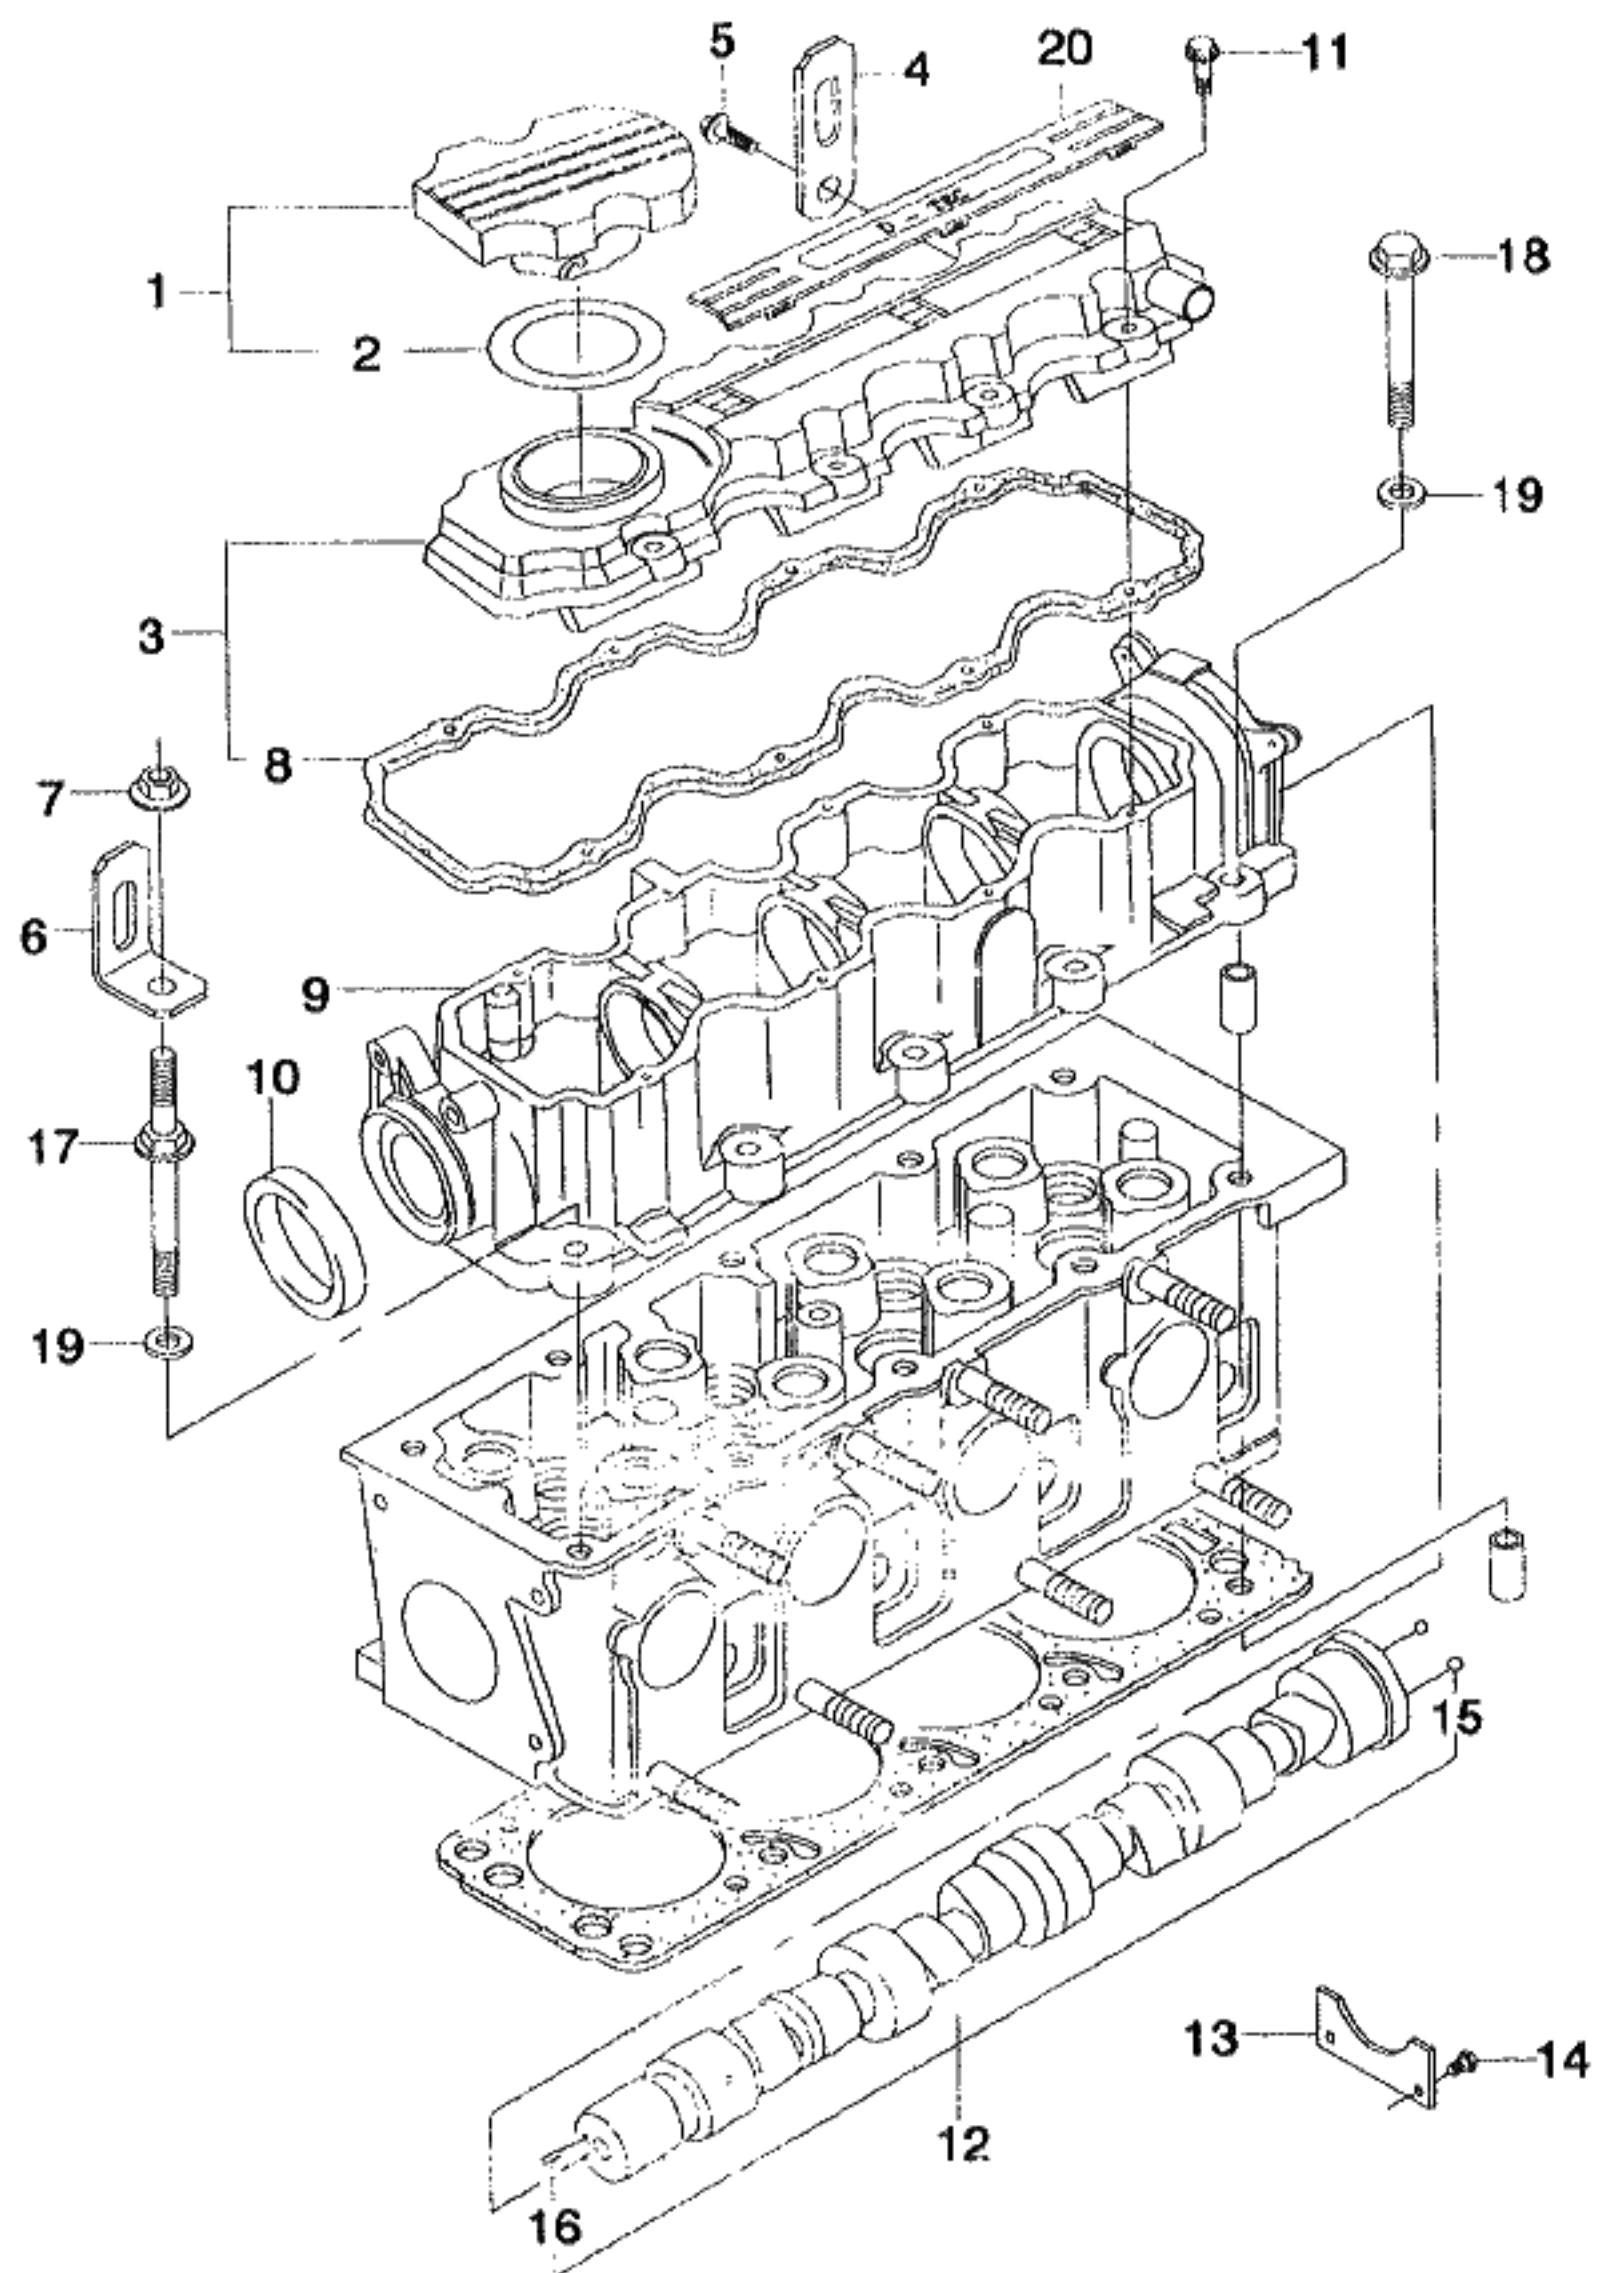


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 90467648	(E)CAP-OIL FILLER (D)DECKEL S				(F)CHAPEAU (S)TAPA 1					
	[02] 90448217	(E)GASKET-OIL FILLER (D)DICHTUNG S				(F)JOINT (S)JUNTA 1					
	[03] 90467642	(E)COVER A-CAMSHAFT SUPPORT (D)DECKEL NOCKENWELLE-TRÄGE S				(F)CARTER (S)CUBIERTA 1					
	[04] 90156902	(E)BRACKET-ENG LIFT,RR (D)TRÄGER S				(F)SUPPORT (S)SOPORTE 1					
	[05] 11051922	(E)BOLT (D)SCHRAUBE S				(F)BOULON (S)PERNO 1					
	[06] 90323004	(E)BRACKET-ENG LIFT,FR (D)TRÄGER S				(F)SUPPORT (S)SOPORTE 1					
	[07] 11013127	(E)NUT (D)MUTTER S				(F)ECROU (S)TUERCA 1					
	[08] 90467661	(E)GASKET-COVER TO SUPPORT (D)DICHTUNG S				(F)JOINT (S)JUNTA 1					
	[09] 90467878	(E)SUPPORT-CAMSHAFT (D)TRÄGER,NOCKENWELLE S				(F)SUPPORT-ARBRE A CAMES (S)SOPORTE-ARBOL DE LEVA 1					
	[10] 90280463	(E)RING-SHAFT SEAL (D)DICHTUNG S				(F)JOINT (S)SELLO 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

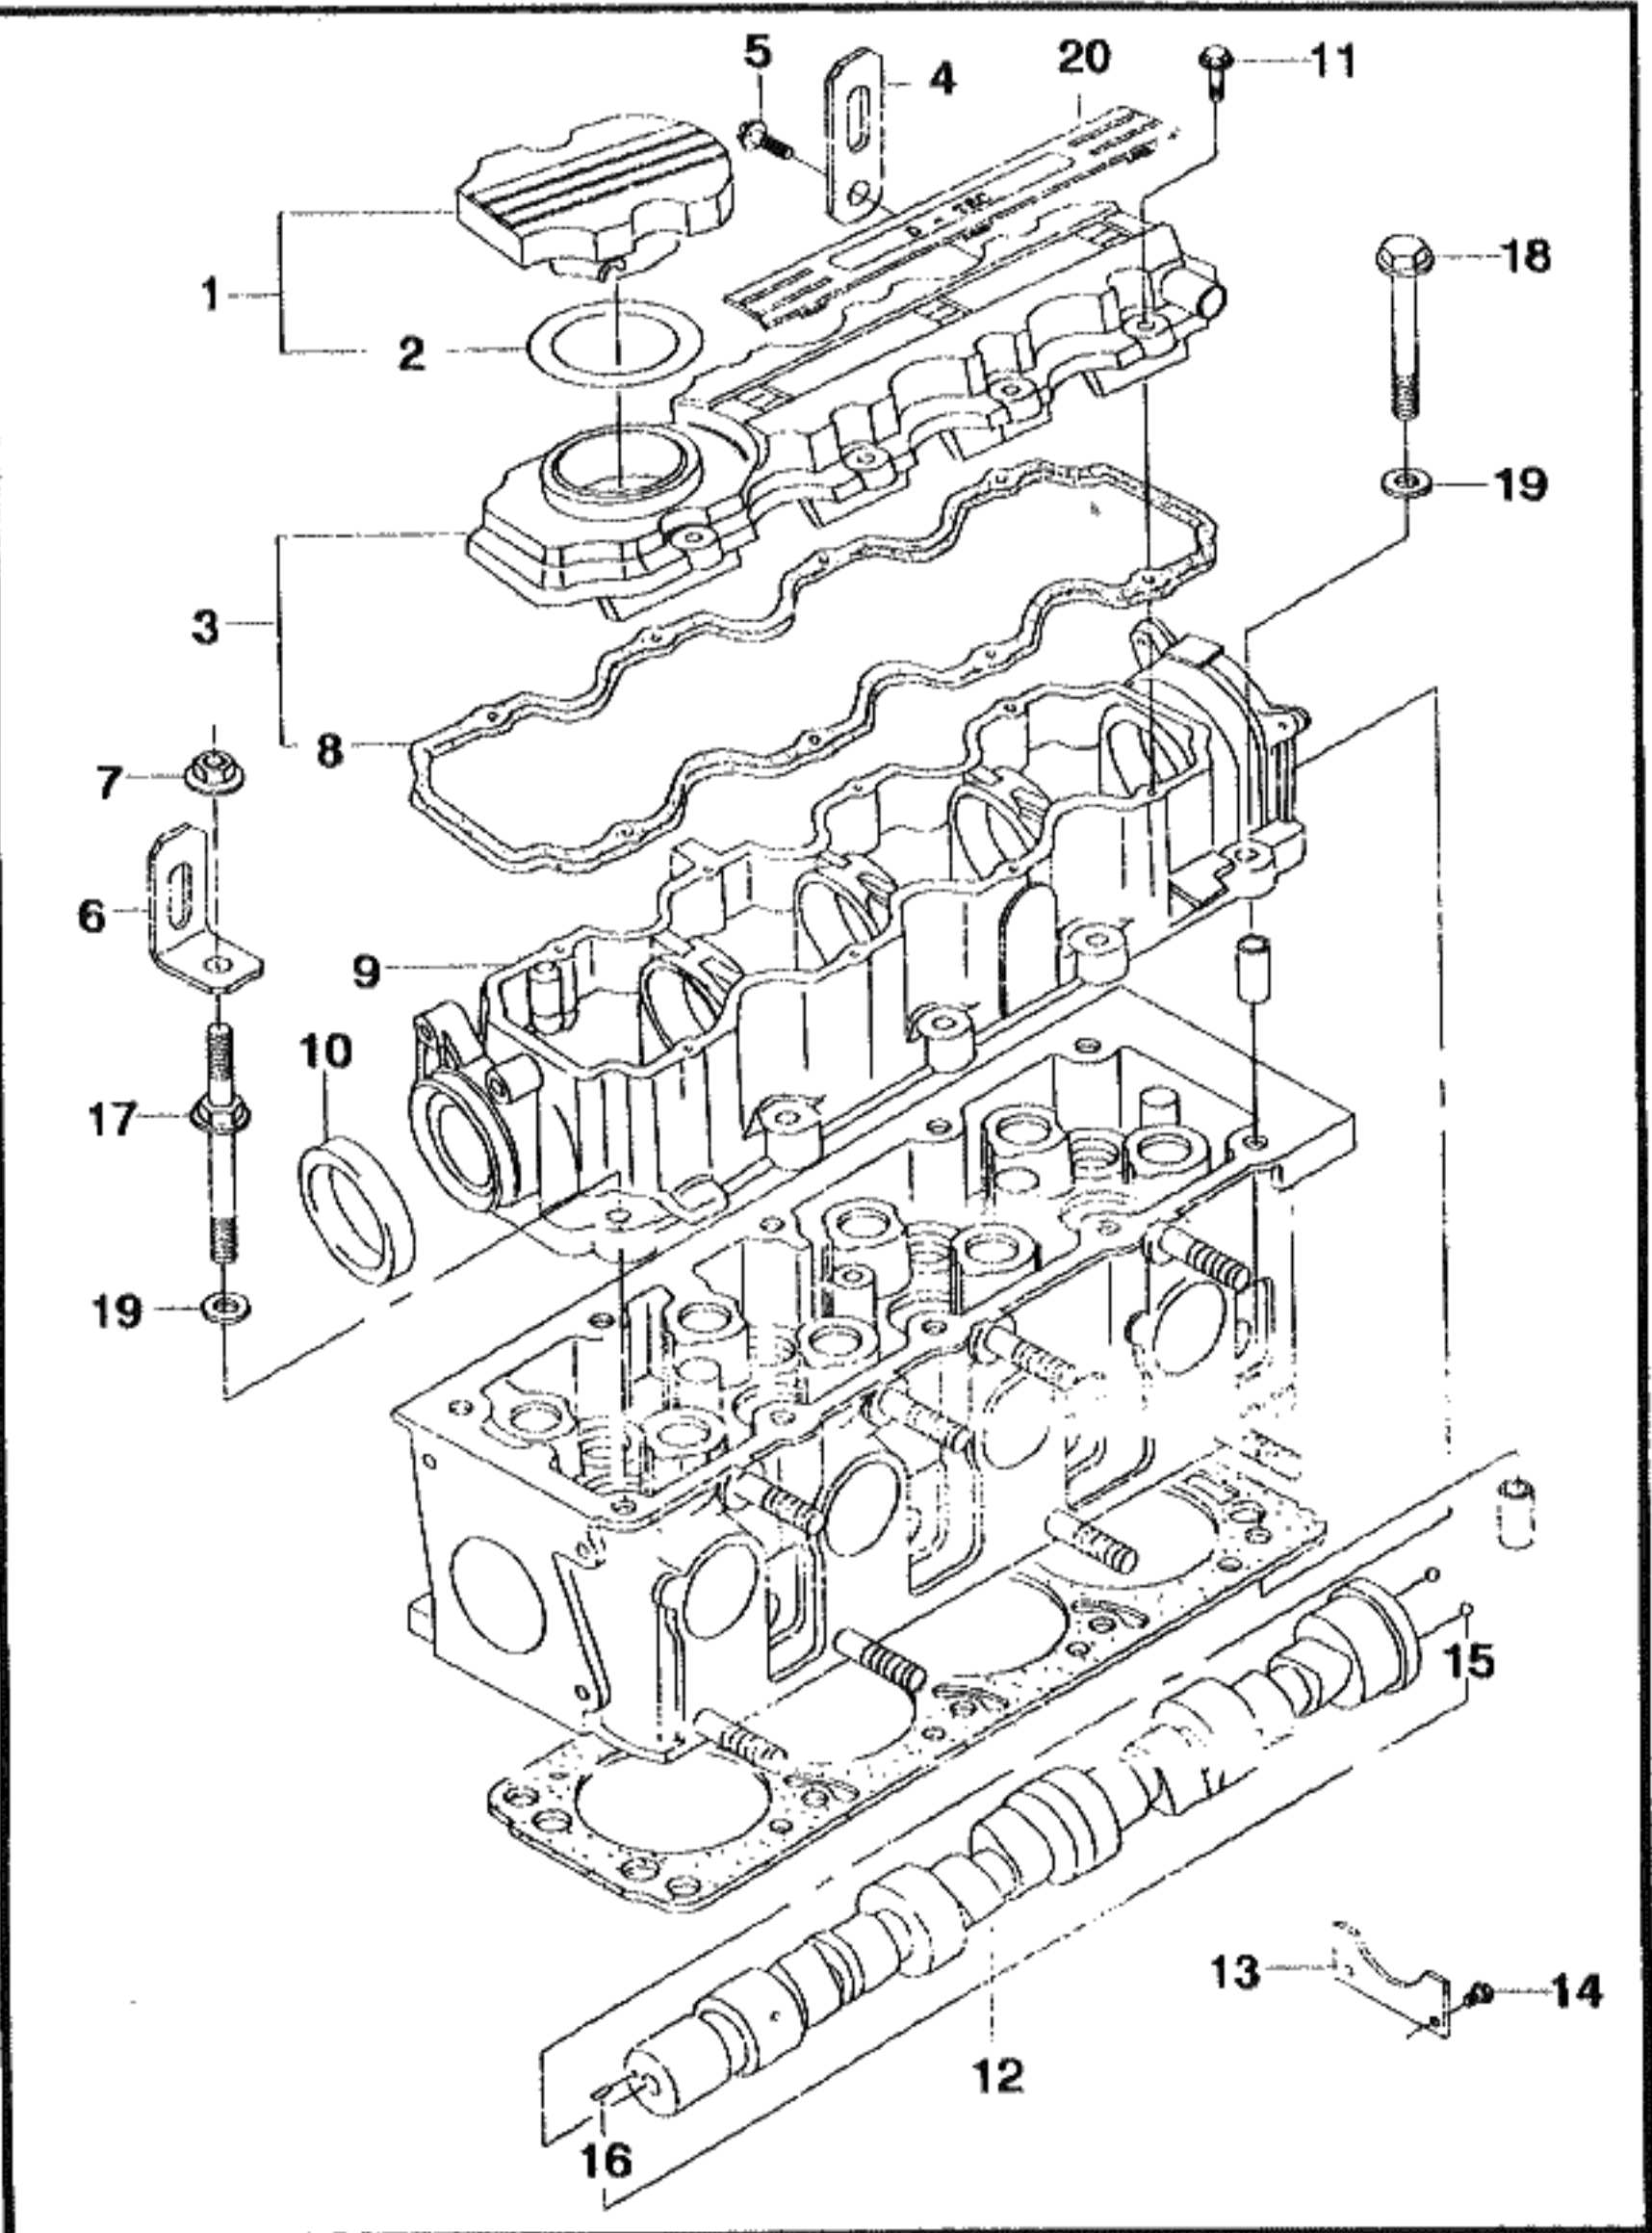


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] 11068795	(E)BOLT (D)SCHRAUBE S				(F)BOULON (S)PERNO 8				NOT APPLIED		
	[12] 90448712 90448714	(E)CAMSHAFT (D)NOCKENWELLE S				(F)ARBRE A CAMES (S)CIGUEÑAL 1						
	[13] 90233647	(E)PLATE-CAMSHAFT PRESSURE (D)PLATTE,KURBELWELLE DRUCK S				(F)PLAQUE (S)PLACA 1						
	[14] 90264407	(E)SCREW-RETAINER (D)SCHRAUBE,HALTER S				(F)VIS-ARRETIOR (S)TORNILLO-RETENEDOR 2						
	[15] 11011286	(E)BALL (D)KUGEL S				(F)BOULE (S)BOLA 2						
	[16] 11055129	(E)PIN-DOWEL (D)STIFT,DÜBEL S				(F)BROCHE-GOUJON (S)PASADOR-CLAVIJA 1						
	[17] 92061632	(E)BOLT-CYLINDER HEAD (D)SCHRAUBE,ZYLINDERKOPF S				(F)BOULON-CULASSE (S)PERNO-TAPA DE CILINDRO 3						
	[18] 90325498	(E)BOLT-CYLINDER HEAD (D)SCHRAUBE,ZYLINDERKOPF S				(F)BOULON-CULASSE (S)PERNO-TAPA DE CILINDRO 7						
	[19] 90325497	(E)WASHER (D)DICHTUNGSRING S				(F)RONDELLE (S)ARANDELA 10						
	[20]	(E)COVER-CENTER (D)DECKEL				(F)COUVERTURE (S)CUBIERTA						
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

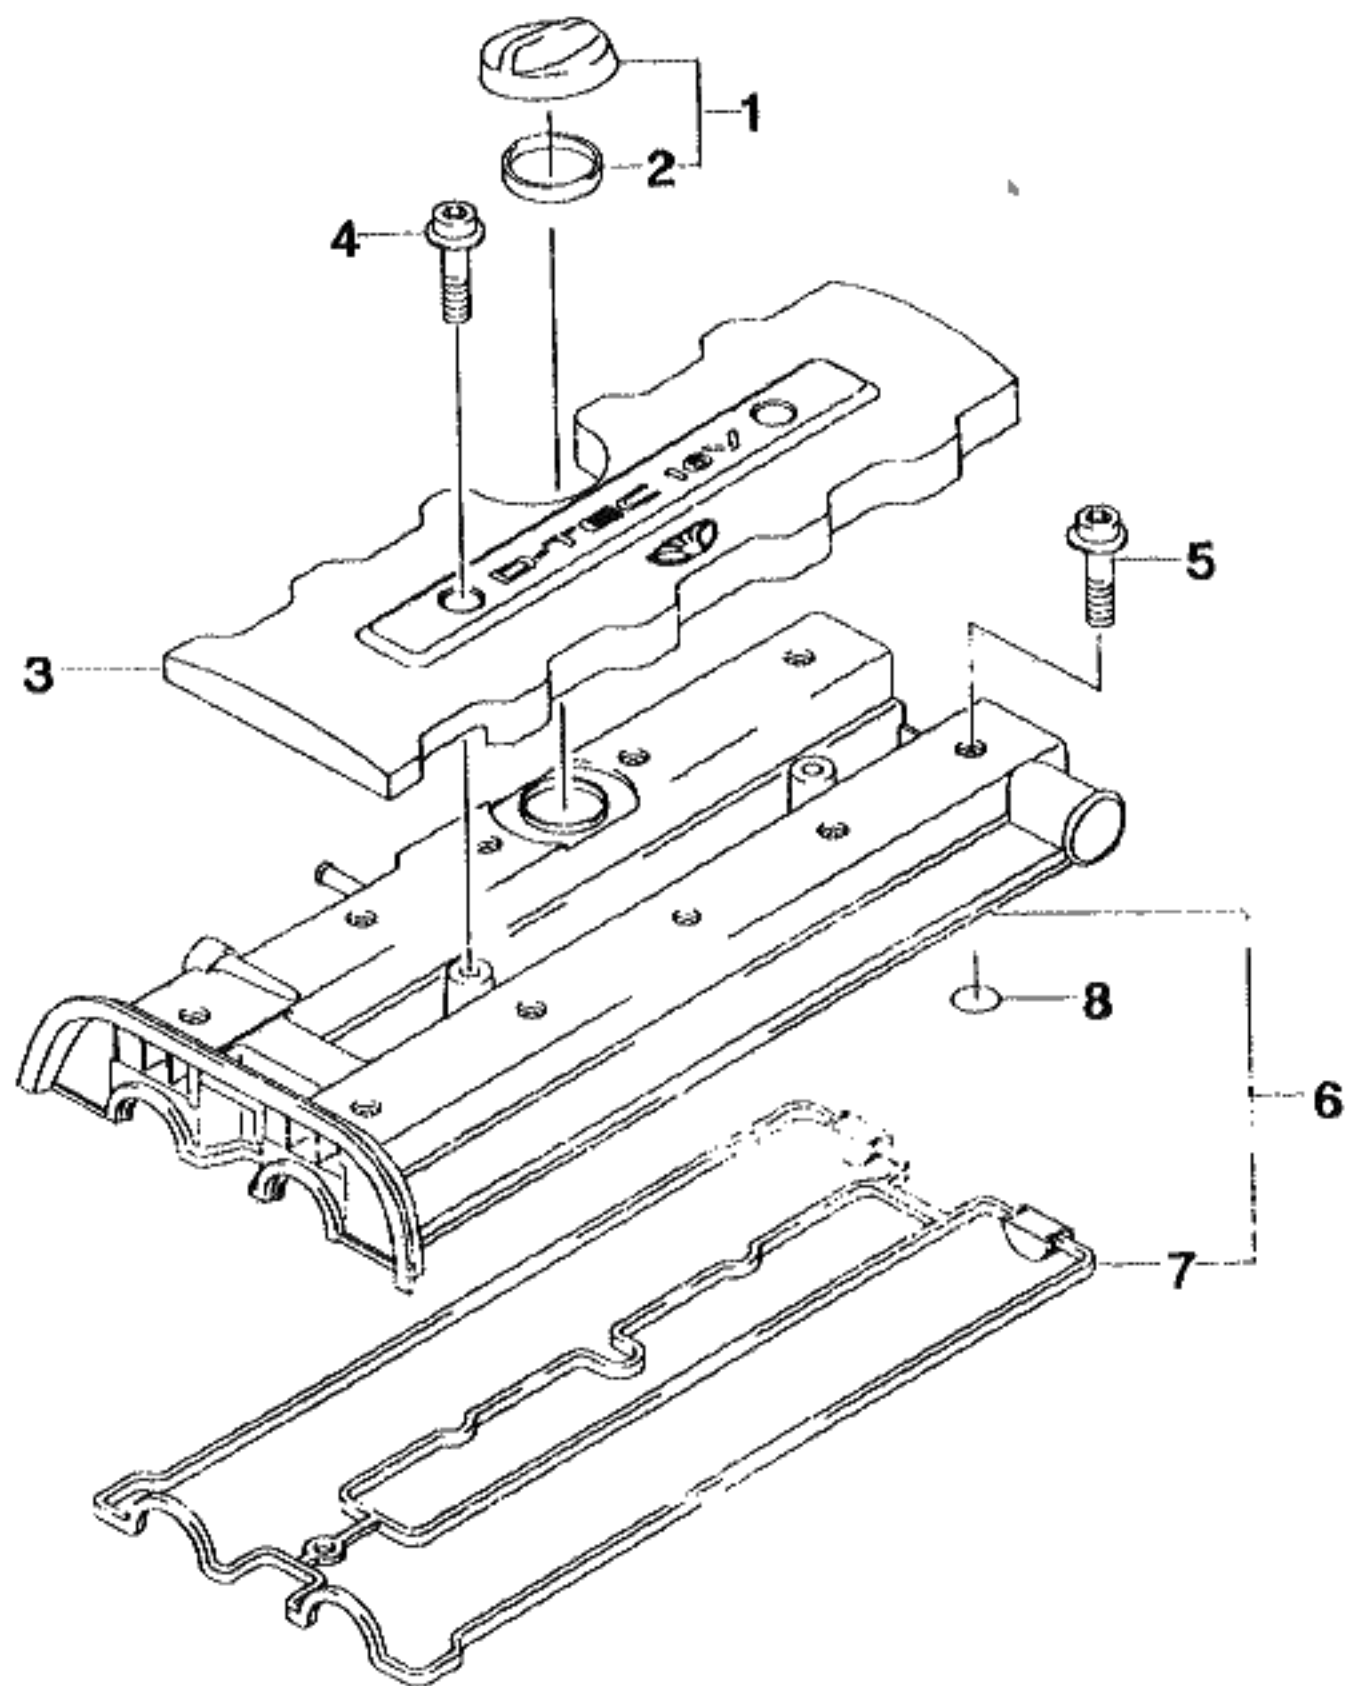

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01] 92062504	(E)CAP A-OIL FILLER (D)DECKEL	.	O S			(F)CHAPEAU (S)TAPA					
	[02] 90448217	(E)GASKET-OIL FILLER (D)DICHTUNG	.	O S			(F)JOINT (S)JUNTA					
	[03] 96351546	(E)COVER-SPARK PLUG (D)DECKEL KERZENZÜNDER	.	O S			(F)CARTER-BOUGIE (S)CUBIERTA-BUJIAS					
	[04] 07120-06255	(E)BOLT-HEXAGON (D)SCHRAUBE	.	O S			(F)BOULON (S)PERNO					
	[05] 11080681	(E)SCREW (D)SCHRAUBE	.	O S			(F)VIS (S)TORNILLO					
	[06] 92062396	(E)HOOD A-CYLINDER HEAD (D)HAUBE	.	O S			(F)CAPOT (S)TAPA					
	[07] 90501944	(E)GASKET-CAM COVER HOOD (D)DICHTUNG	.	O S			(F)JOINT (S)JUNTA					
	[08] 90411826	(E)O RING-HOOD (D)O RING	.	O S			(F)JOINT TORIQUE (S)ANILLO EN O					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

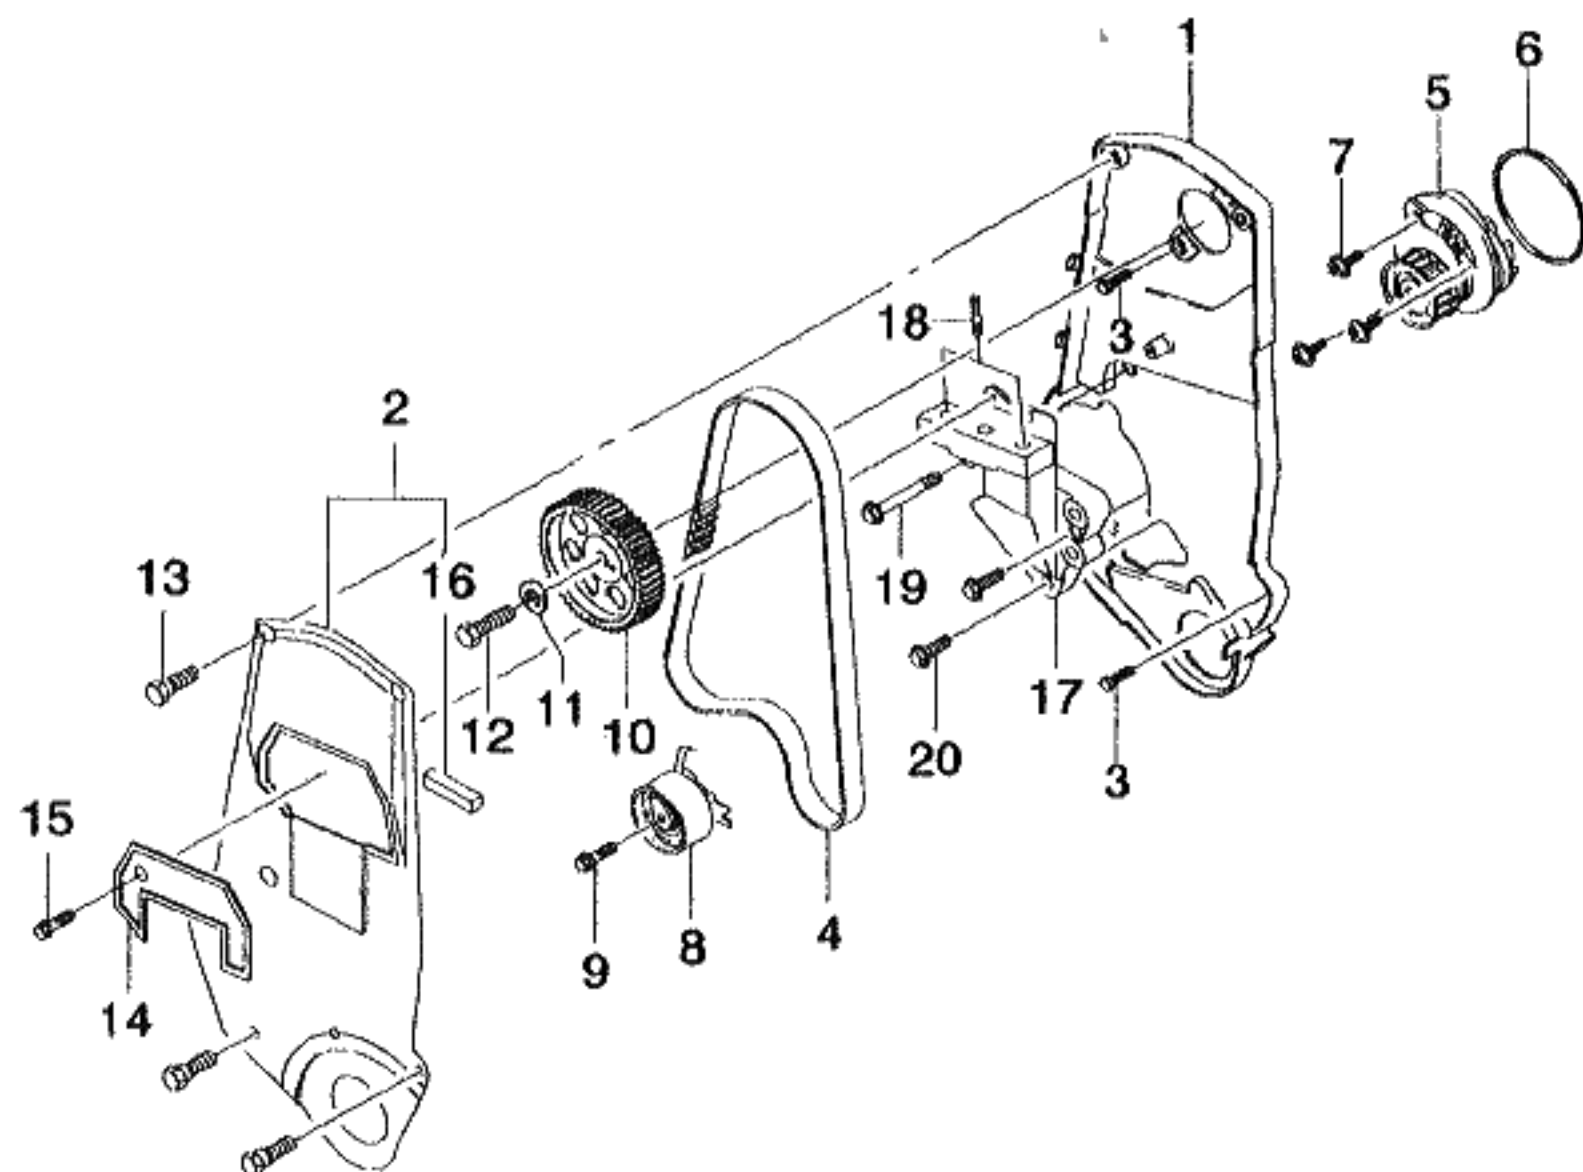


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 92062785	(E)HOOD-RR TIMING BELT (D)HAUBE,ZÜNDFOLGEGURT . S .			(F)CAPOT (S)TAPA-CORREA DISTRIBUCION 1						
	[02] 92063088	(E)HOOD-FR TIMING BELT (D)HAUBE,VORNE . S .			(F)CAPOT-AVANT (S)TAPA-FRENTE 1						
	[03] 90265761	(E)SCREW (D)SCHRAUBE . S .			(F)VIS (S)TORNILLO 4						
	[04] 92063918	(E)BELT-TIMING TOOTH (D)GURT,ZÜNDFOLGESTEUERUNG . S .			(F)COURROIE (S)CORREA-DISTRIBUCION 1						
	[05] 90466344	(E)PUMP A-WATER (D)PUMPE,WASSER . S .			(F)POMPE-EAU (S)BOMBA-AGUA 1						
	[06] 90322506	(E)RING-SEAL,WATER PUMP (D)DICHTUNG . S .			(F)JOINT (S)SELLO 1						
	[07] 90298530	(E)SCREW-WATER PUMP (D)SCHRAUBE . S .			(F)VIS (S)TORNILLO 3						
	[08] 90530124	(E)TENSIONER-TIMING (D)SPANNUNG . S .			(F)TENDEUR-COURROIE (S)TENSOR 1						
	[09] 11084141	(E)SCREW (D)SCHRAUBE . S .			(F)VIS (S)TORNILLO 1						
	[10] 90411765	(E)GEAR-CAMSHAFT (D)GETRIEBE,NOCKENWELLE . S .			(F)ENGRENAGE-ARBRE A CAMES (S)ENGRANAJE-ARBOL DE LEVAS 1						
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

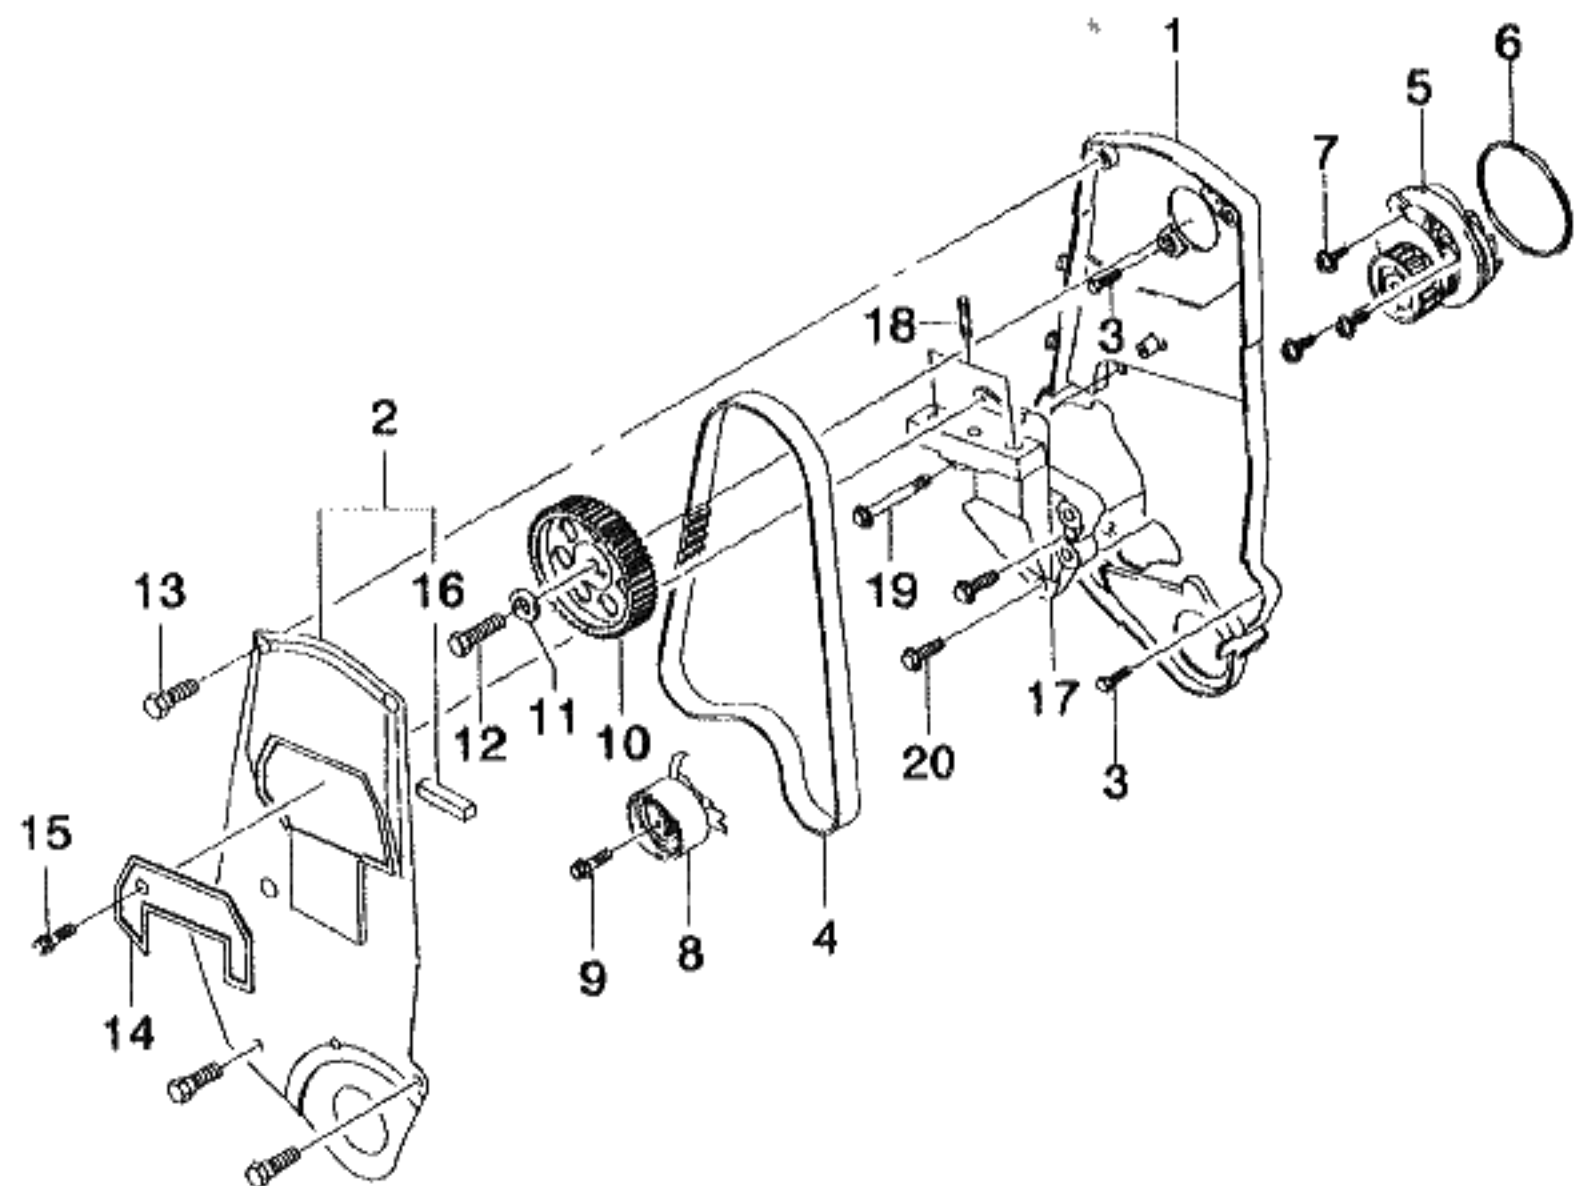


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 90067443	(E) WASHER-GEAR TO CAMSHAFT (D) DICHTUNGSRING		S		(F) RONDELLE (S) ARANDELA	1				
	[12] 11073823	(E) SCREW-GEAR TO CAMSHAFT (D) SCHRAUBE		S		(F) VIS (S) TORNILLO	1				
	[13] 11087874	(E) SCREW (D) SCHRAUBE		S		(F) VIS (S) TORNILLO	5				
	[14] 92062782	(E) COVER-ROLLER AXIS HOLE (D) DECKEL		S		(F) COUVERCLE (S) CUBIERTA	1				
	[15] 92061165	(E) SCREW (D) SCHRAUBE		S		(F) VIS (S) TORNILLO	1				
	[16] 92062874	(E) SEAL (D) DICHTUNG		S		(F) JOINT (S) SELLO	1				
	[17] 92062786	(E) SUPPORT-TORQUE AXIS (D) TRÄGER		S		(F) SUPPORT (S) SOPORTE	1				
	[18] 92062895	(E) BOLT-STUD (D) STIFTSCHRAUBE		S		(F) BOULON-TETON (S) PERNO-ESPIGA	2				
	[19] 11063534	(E) BOLT-TORQ ROLL AXIS (D) SCHRAUBE		S		(F) BOULON (S) PERNO	1				
	[20] 11067761	(E) SCREW (D) SCHRAUBE		S		(F) VIS (S) TORNILLO	2				

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

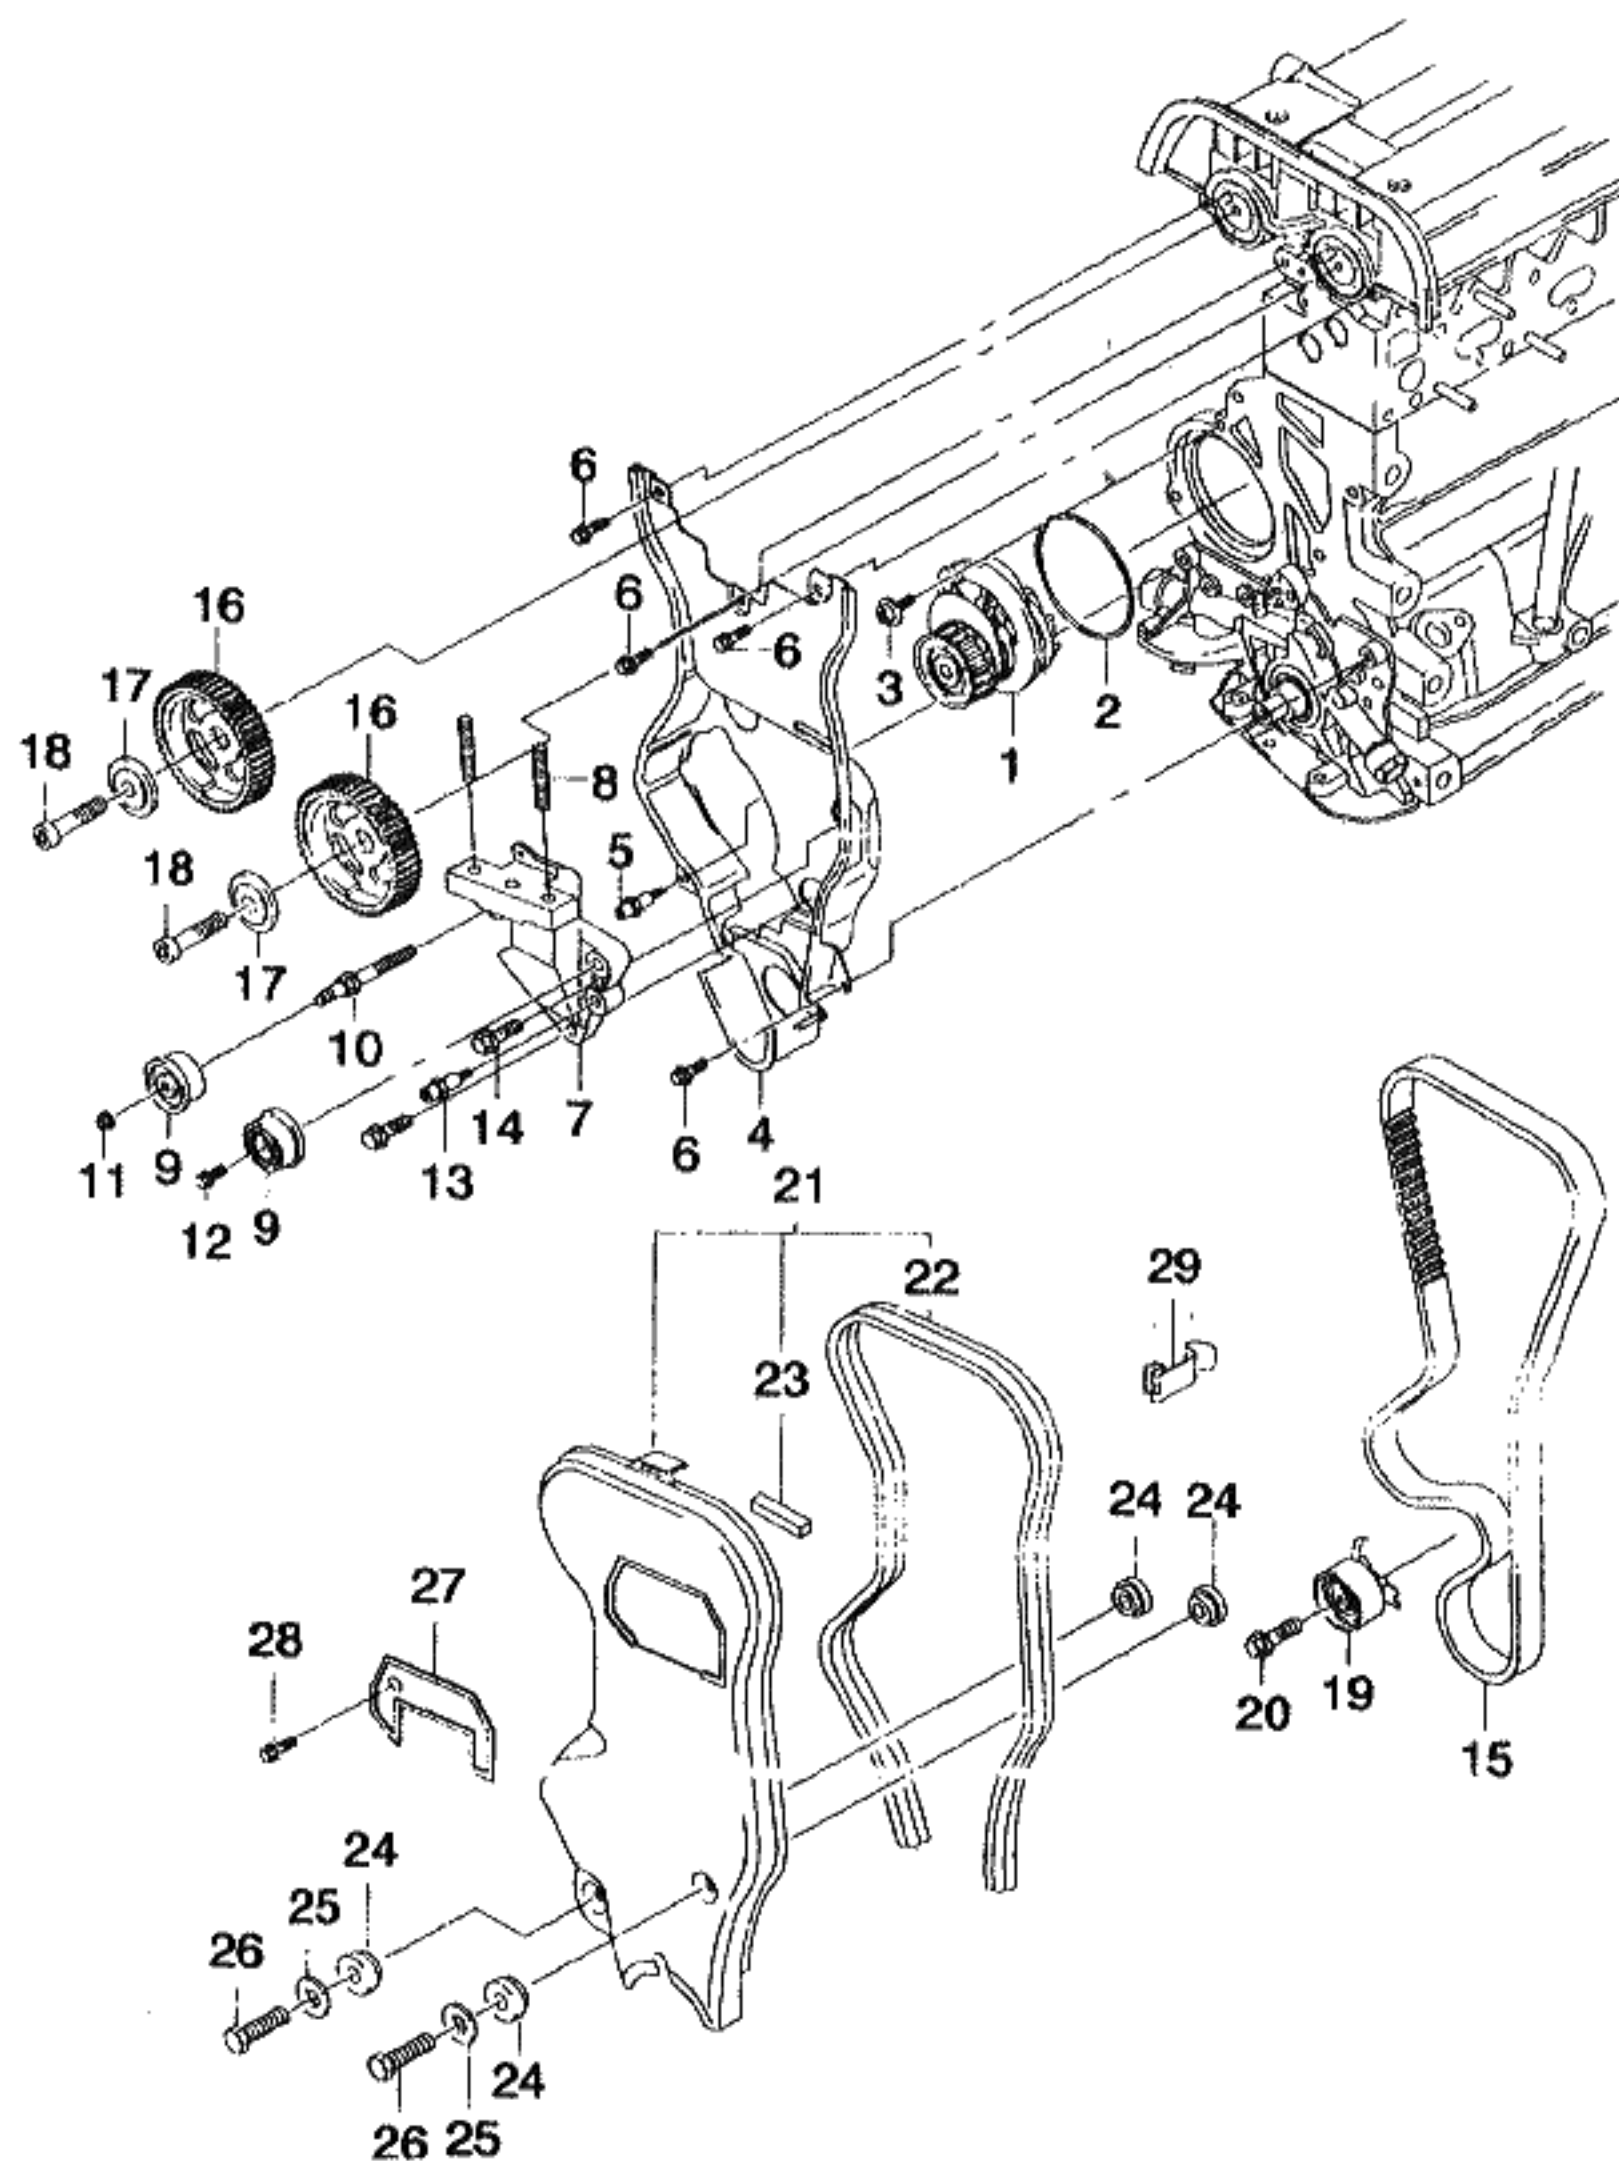


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 90466343	(E)PUMP A-WATER (D)PUMPE, WASSER . O S				(F)POMPE-EAU (S)BOMBA-AGUA 1					
	[02] 90322506	(E)RING-SEAL, WATER PUMP (D)DICHTUNG . O S				(F)JOINT (S)SELLO 1					
	[03] 90298530	(E)SCREW-WATER PUMP (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 3					
	[04] 92063246	(E)COVER A-CAM BELT, RR (D)HAUBE . O S				(F)CAPOT (S)TAPA 1					
	[05] 90352197	(E)BOLT-HOOD TO TORQUE (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 1					
	[06] 90233279	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 4					
	[07] 92062374	(E)SUPPORT-TORQ ROLL AXIS (D)TRÄGER . O S				(F)SUPPORT (S)SOPORTE 1					
	[08] 92062895	(E)BOLT-STUD (D)STIFTSCHRAUBE . O S				(F)BOULON-TETON (S)PERNO-ESPIGA 2					
	[09] 90411782	(E)ROLLER A-GUIDE (D)ROLLE . O S				(F)ROULEAU (S)RODILLO 2					
	[10] 92062894	(E)BOLT-TORQ ROLL AXIS (D)SCHRAUBE . O S				(F)BOULON (S)PERNO 1					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

1333 TIMING COVER(2.0DOHC)

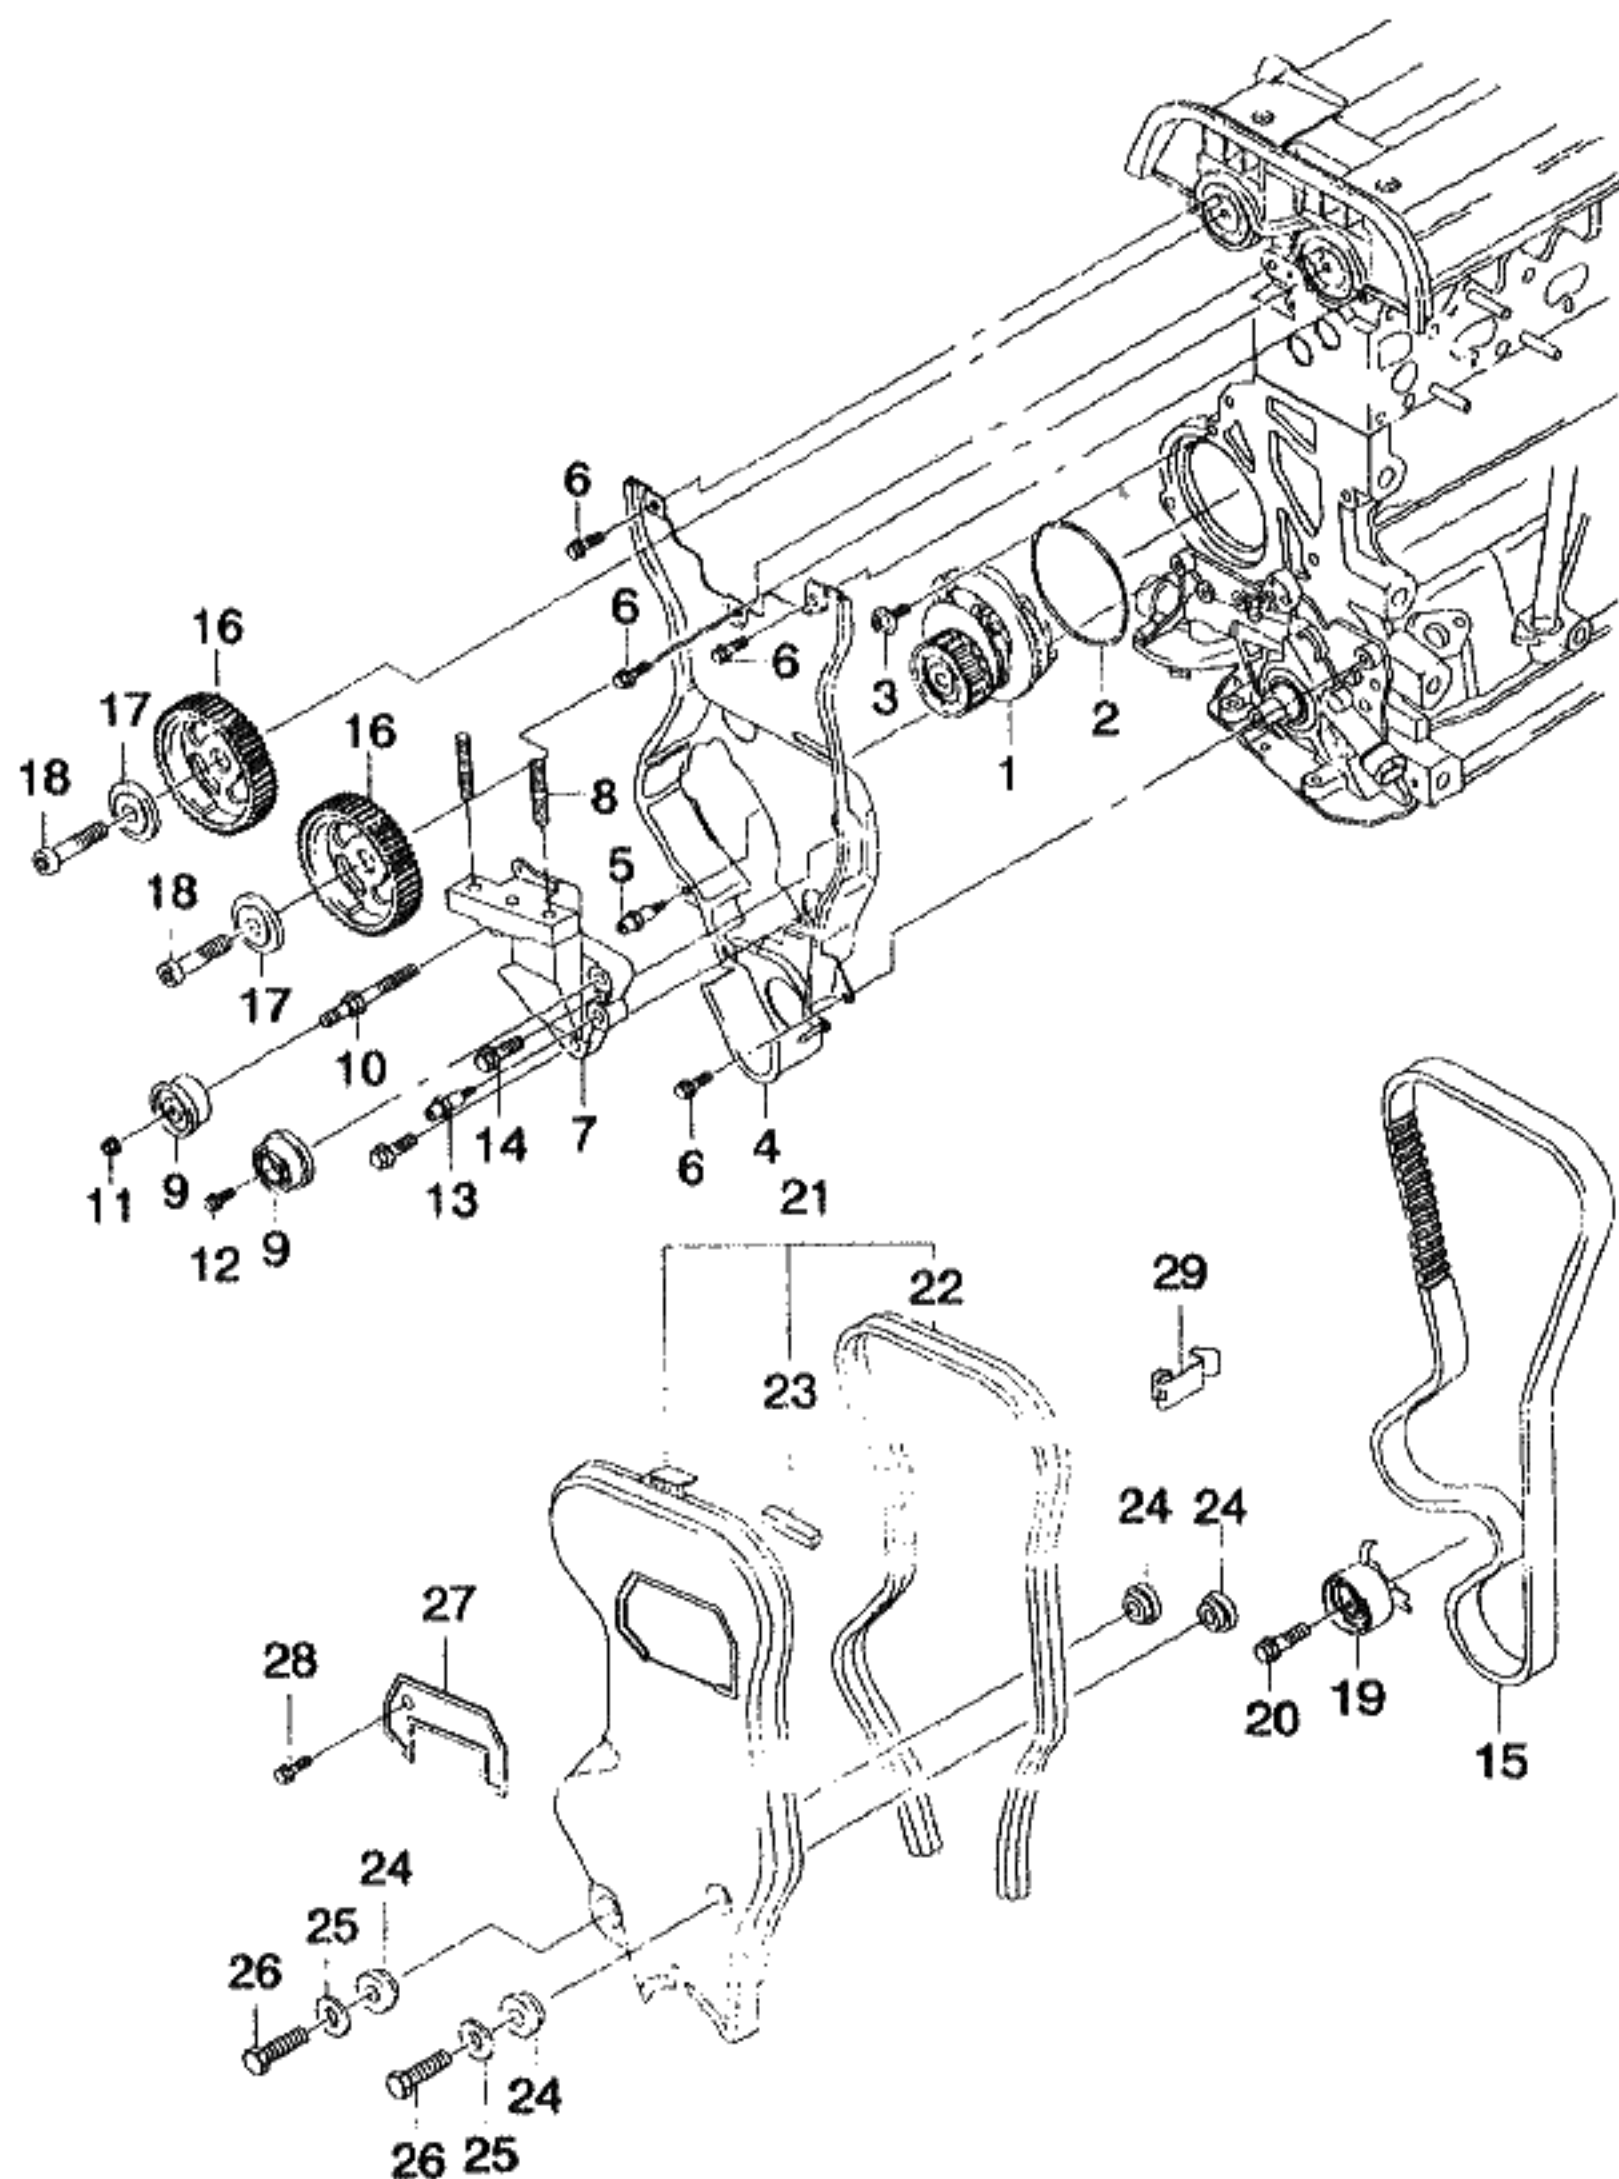


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] 11082413	(E)NUT (D)MUTTER . O S				(F)ECROU (S)TUERCA 1						
	[12] 11090683	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 1						
	[13] 90352197	(E)BOLT-HOOD TO TORQUE (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 1						
	[14] 11067761	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 2						
	[15] 92063917	(E)BELT-CAMSHAFT DRIVE (D)GURT . O S				(F)COURROIE (S)CORREA 1						
	[16] 90411776	(E)GEAR-CAMSHAFT (D)GETRIEBE,NOCKENWELLE . O S				(F)ENGRENAGE-ARBRE A CAMES (S)ENGRANAJE-ARBOL DE LEVAS 2						
	[17] 90108392	(E)WASHER-GEAR TO CAMSHAFT (D)DICHTUNGSRING . O S				(F)RONDELLE (S)ARANDELA 2						
	[18] 90466737	(E)BOLT-GEAR TO CAMSHAFT (D)SCHRAUBE . O S				(F)BOULON (S)PERNO 2						
	[19] 90530126	(E)TENSIONER-TIMING (D)SPANNUNG . O S				(F)TENDEUR-COURROIE (S)TENSOR 1						
	[20] 11084141	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 1						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

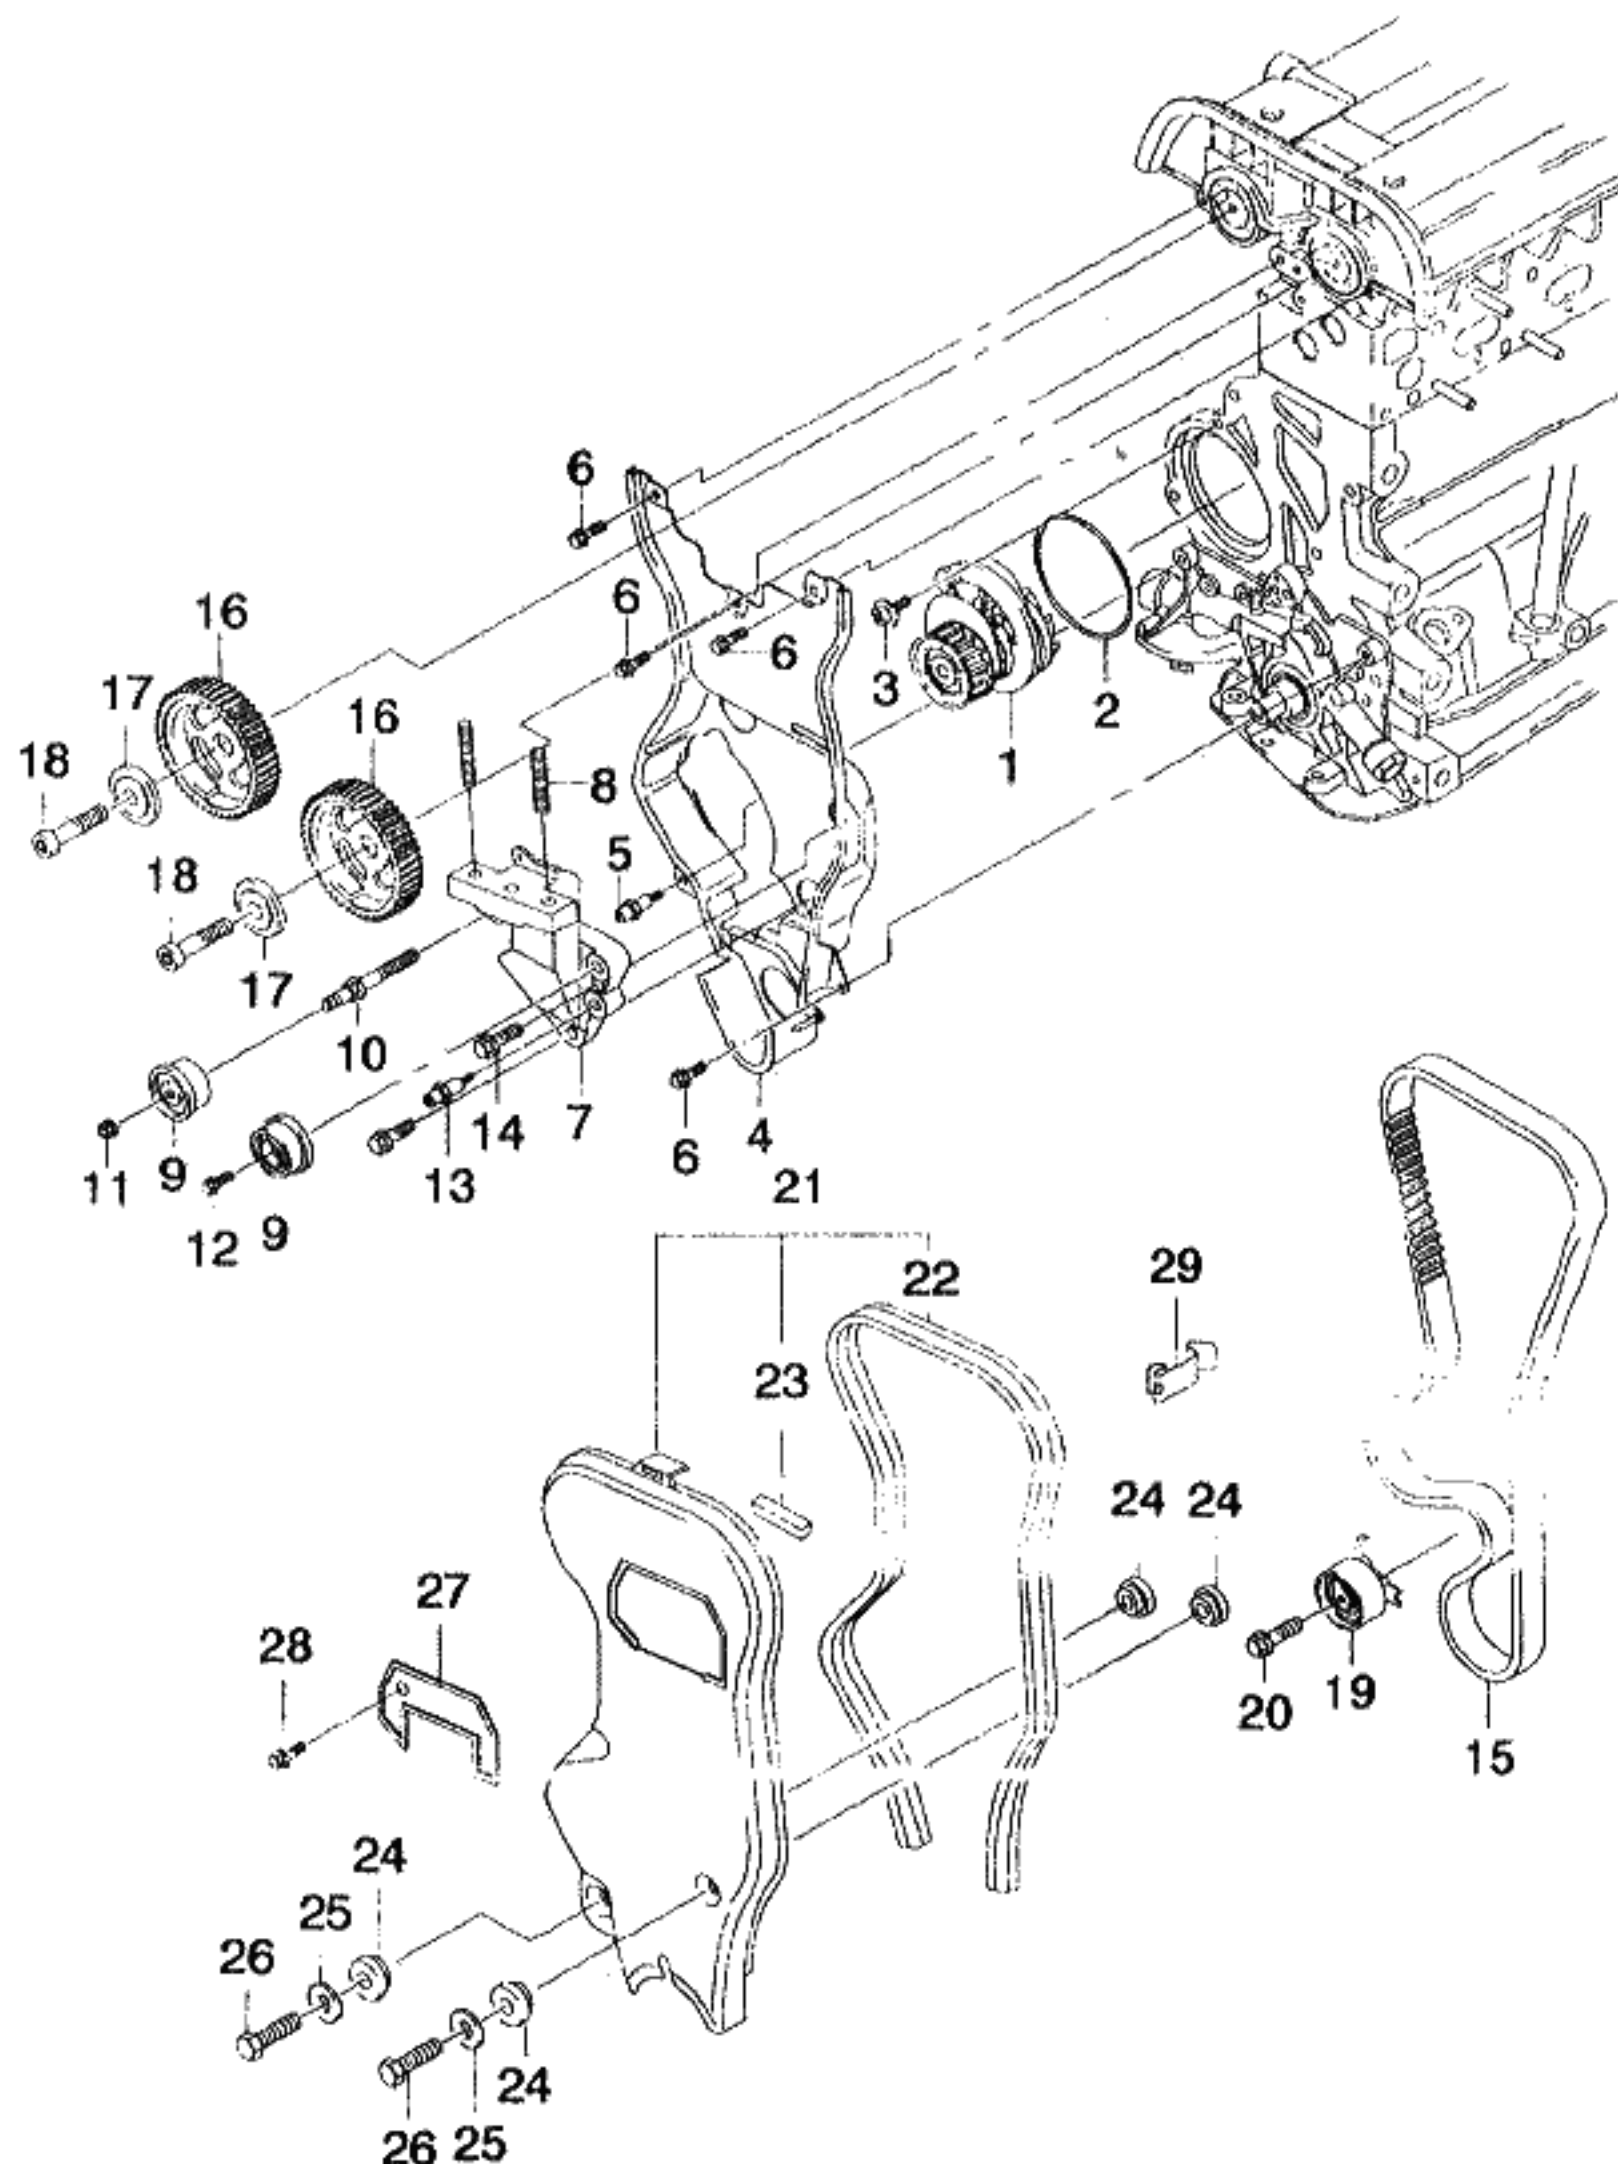


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[21] 92063084	(E)COVER A-CAM BELT,FR (D)HAUBE . O S			(F)CAPOT (S)TAPA 1						
	[22] 90411612	(E)GASKET-CAM BELT FR (D)DICHTUNG . O S			(F)JOINT (S)JUNTA 1						
	[23] 92062874	(E)SEAL (D)DICHTUNG . O S			(F)JOINT (S)SELLO 1						
	[24] 90233881	(E)DAMPER-FR CVR TO RR CVR (D)DÄMPFER . O S			(F)AMORTISSEUR (S)AMORTIGUADOR 2						
	[25] 90220983	(E)WASHER-FR CVR TO RR CVR (D)DICHTUNGSRING . O S			(F)RONDELLE (S)ARANDELA 2						
	[26] 11027773	(E)BOLT (D)SCHRAUBE . O S			(F)BOULON (S)PERNO 2						
	[27] 92062782	(E)COVER-ROLLER AXIS HOLE (D)DECKEL . O S			(F)COUVERCLE (S)CUBIERTA 1						
	[28] 92061165	(E)SCREW (D)SCHRAUBE . O S			(F)VIS (S)TORNILLO 1						
	[29] 92063861	(E)CLIP (D)KLEMME . O S			(F)ATTACHE (S)GRAPA 1						
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


1610 RADIATOR

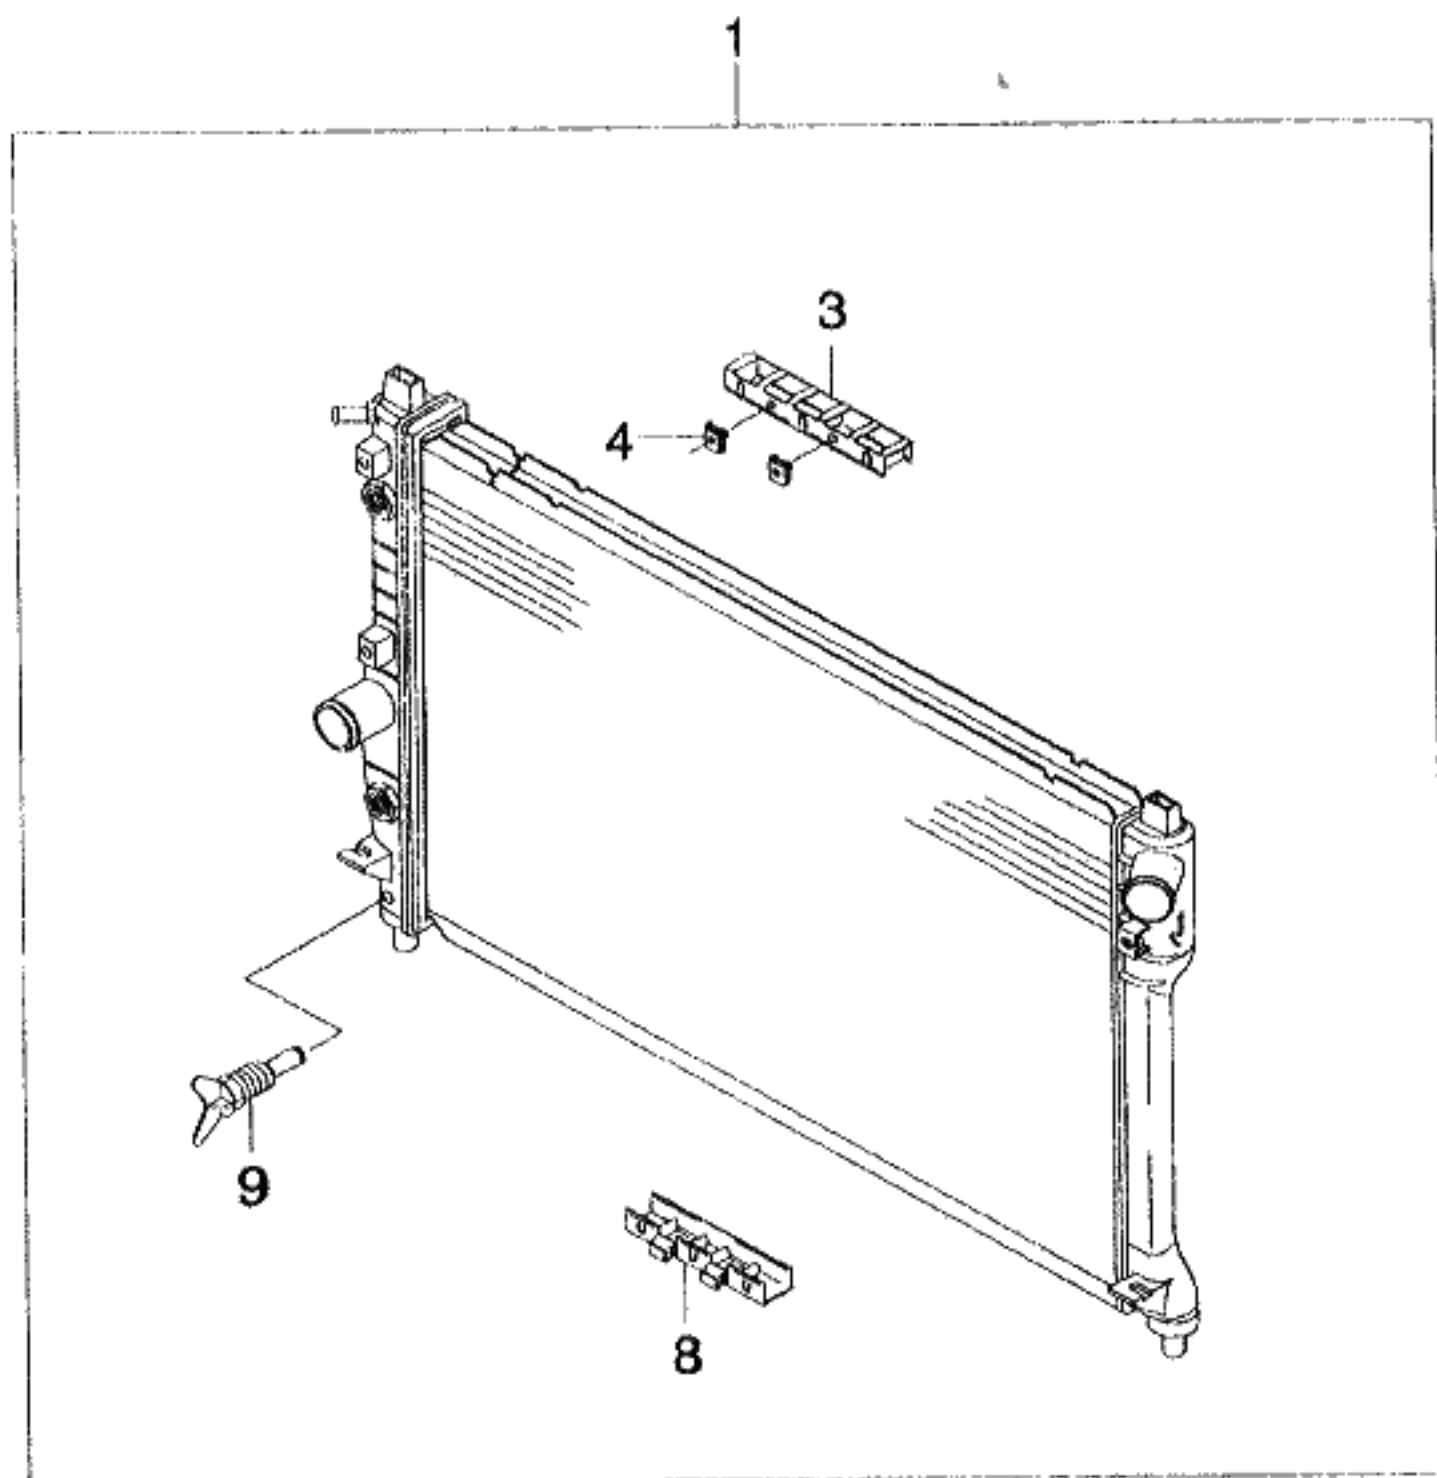


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)RADIATOR A (D)KÜHLER					(F)RADIATEUR (S)RADIADOR				
	96351102	M	S	S			1				BB
	96351103	A	O	O			1				BA
	[03]	(E)BRACKET-SHROUD MOUNT,UPR (D)TRÄGER,HÜLLE-MONTAGE,OBE					(F)SUPPORT (S)SOPORTE-MONTAJE DE				
	620580		S	S			1				
	[04]	(E)CLIP-SHROUD (D)KLEMME					(F)ATTACHE (S)GRAPA				
	620579		S	S			2				
	[08]	(E)BRACKET-SHROUD MOUNT,LWR (D)TRÄGER,HÜLLE-MONTAGE					(F)SUPPORT (S)SOPORTE-MONTAJE DE				
	620581		S	S			1				
	[09]	(E)DRAIN COCK (D)ABFLUßHAHN					(F)ROBINET-VIDANGE (S)GRIFO-DRENAJE				
	620820		S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

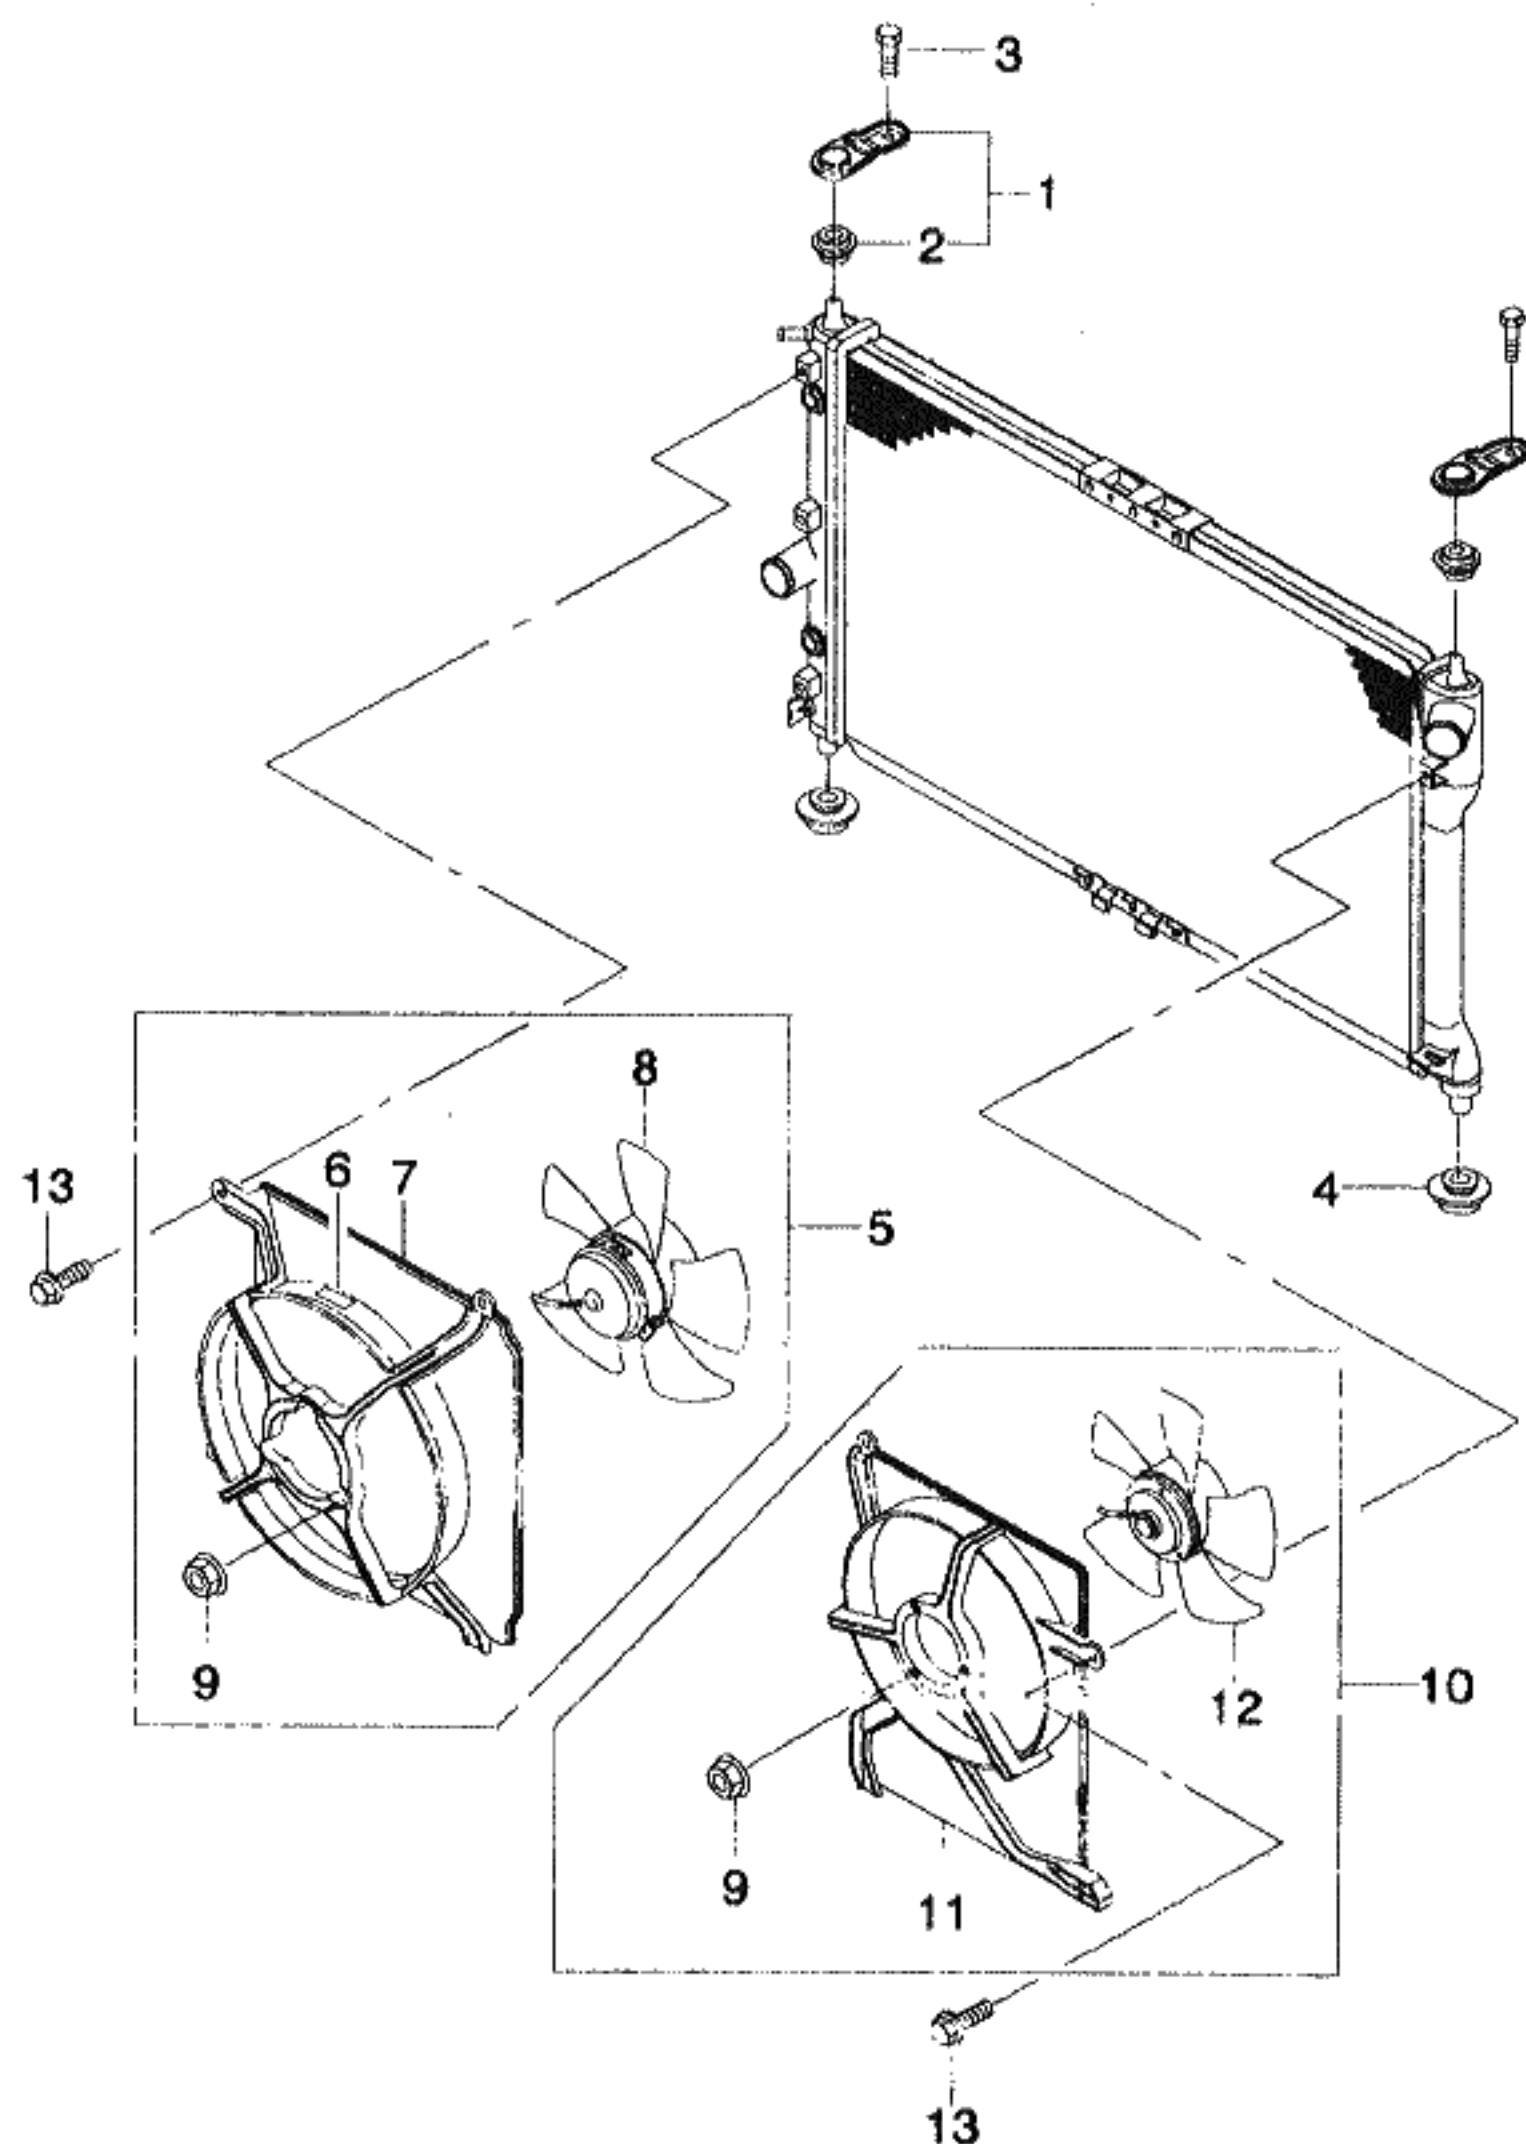

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96351811	(E)BRACKET A-RADIATOR,UPPER (D)TRÄGER	S	S		(F)SUPPORT (S)SOPORTE	2				
	[02] 96351101	(E)BUMPER-RADIATOR,UPPER (D)STOßSTANGE	S	S		(F)PARE-CHOC (S)PARACHOQUES	2				
	[03] 02647-06165	(E)BOLT-HEXAGON (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	2				
	[04] 96184140	(E)BUMPER-RADIATOR,LOWER (D)STOßSTANGE	S	S		(F)PARE-CHOC (S)PARACHOQUES	2				
	[05] 96184136	(E)BLOWER A-MAIN (D)BLÄSER	S	S		(F)VENTILATEUR (S)VENTILADOR	1				
	[06] 96144699	(E)STICKER-COOLING FAN (D)ETIKETT	S	S		(F)VIGNETTE (S)ETIQUETA ADHESIVA	1				
	[07] EV03005	(E)SHROUD (D)MANTEL,KÜHLER	S	S		(F)BOUCLIER-RADIATEUR (S)CUBIERTA-RADIADOR	1				
	[08] EV50001	(E)BLOWER A (D)BLÄSER	S	S		(F)VENTILATEUR (S)VENTILADOR	1				
	[09] FF01036	(E)NUT (D)MUTTER	S	S		(F)ECROU (S)TUERCA	A				
	[10] 96184988	(E)BLOWER A-AUXILIARY (D)BLÄSER ZUSATZ	S	S		(F)VENTILATEUR-AUXILIAIRE (S)VENTILADOR-AUXILIAR	1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

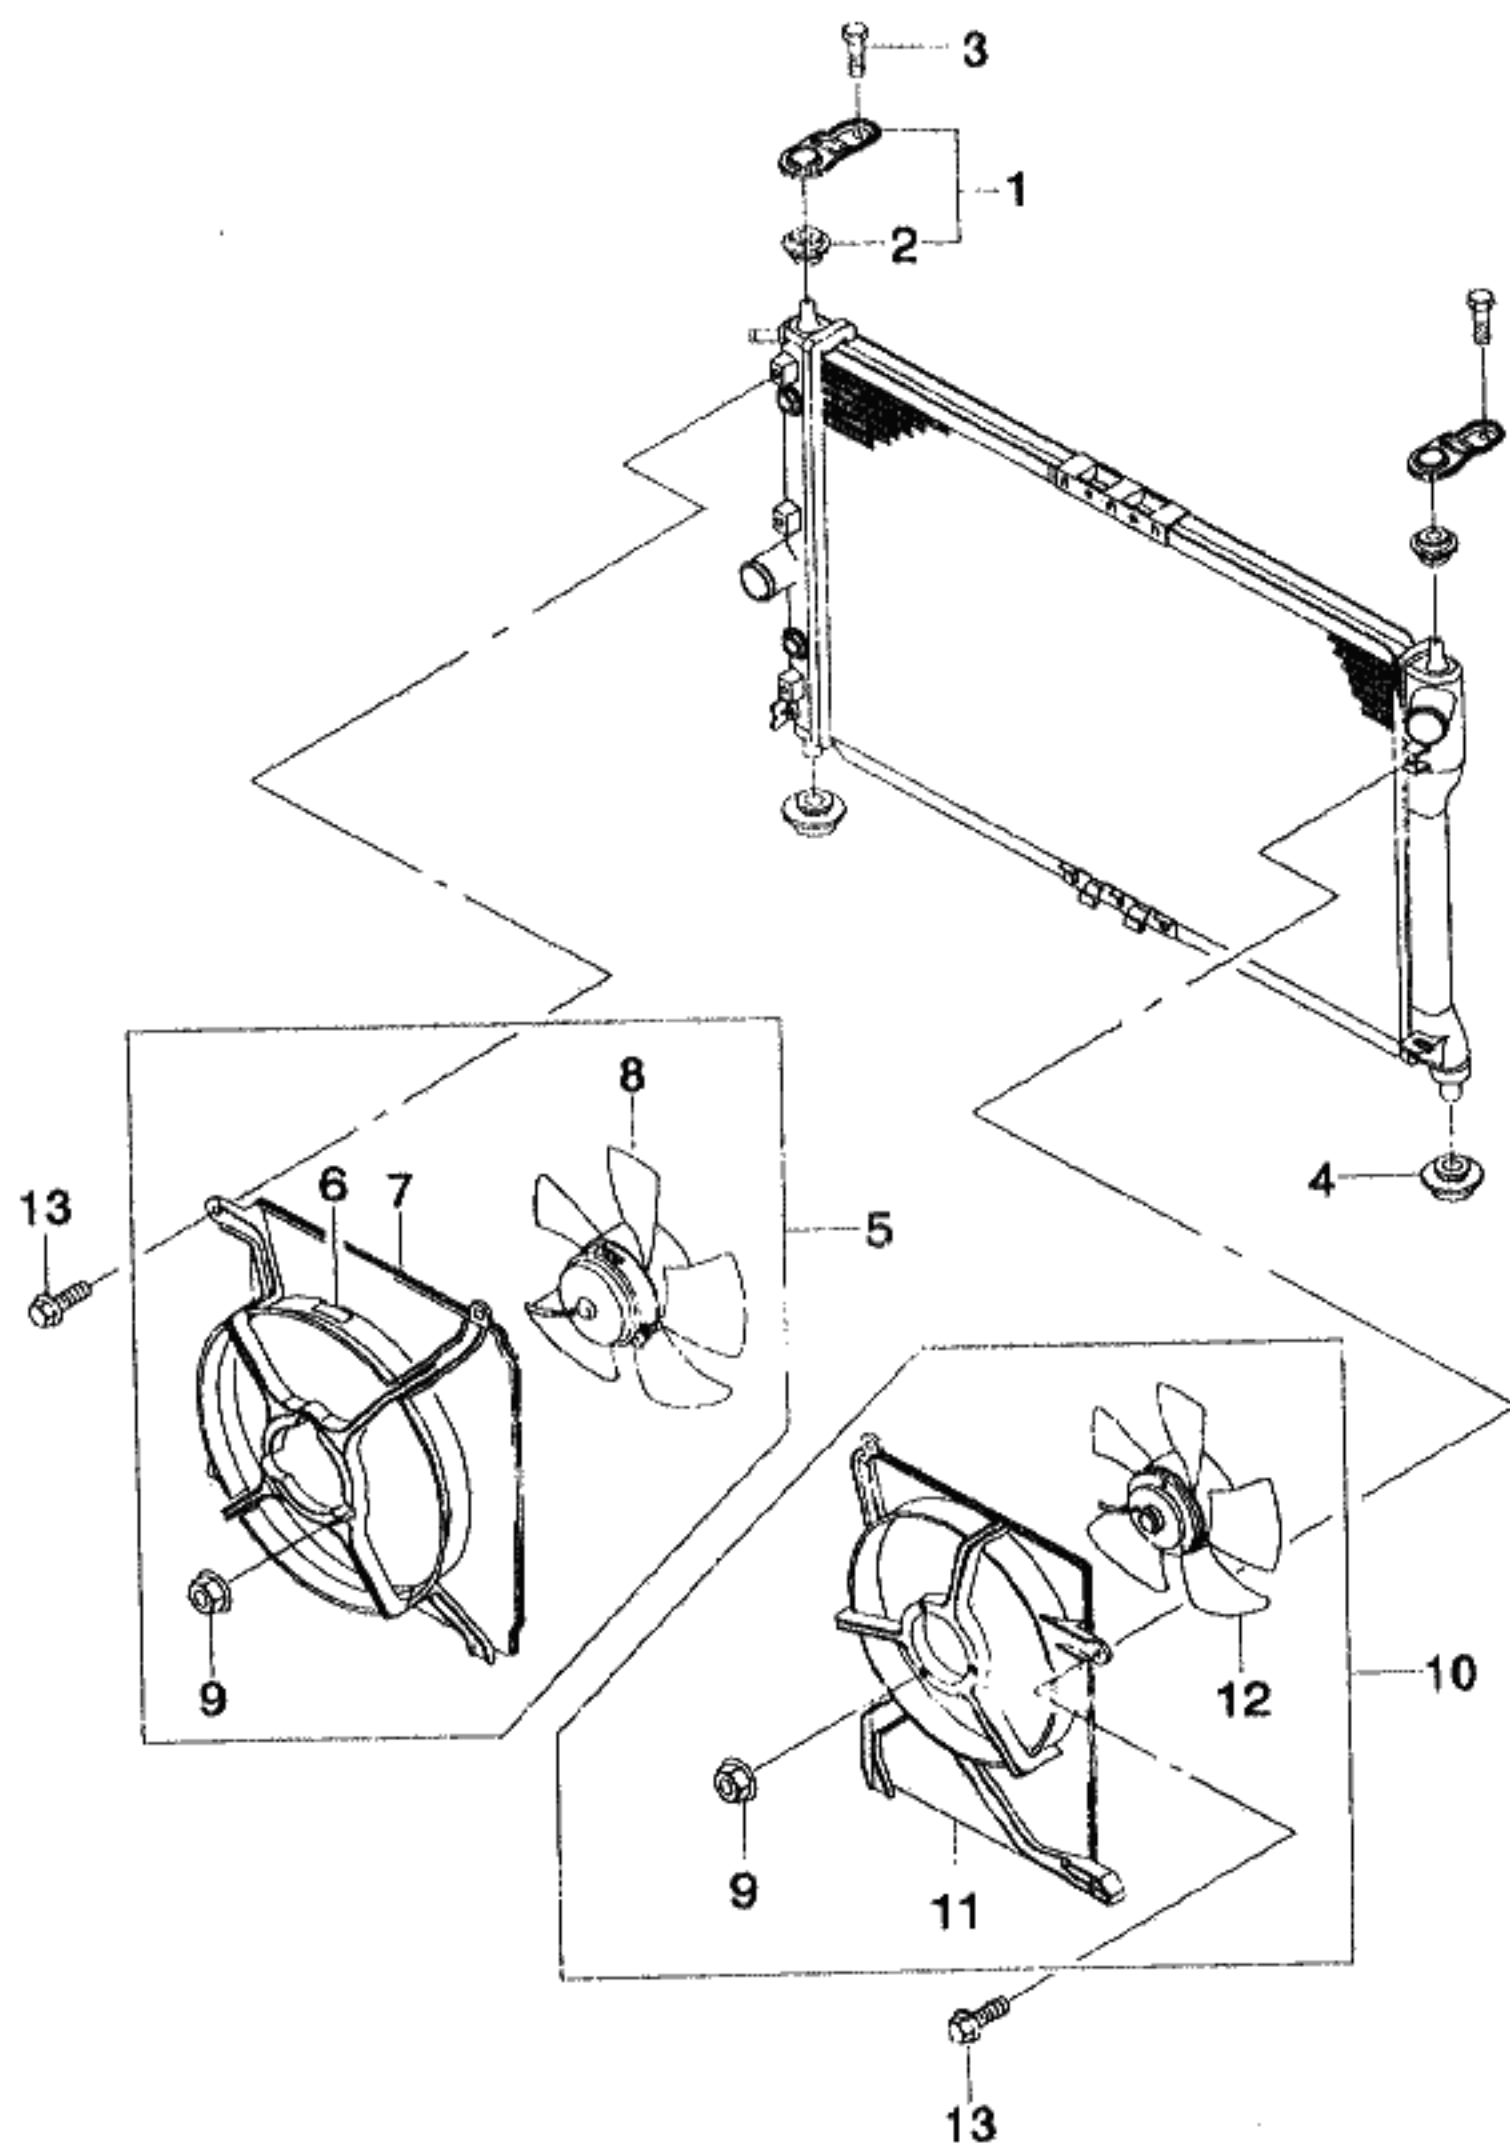

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] EW03003	(E)SHROUD (D)MANTEL KÜHLER	S	S				(F)BOUCLIER-RADIATEUR (S)CUBIERTA-RADIADOR	1			
	[12] EW50001	(E)BLOWER (D)BLÄSER	S	S				(F)VENTILATEUR (S)VENTILADOR	1			
	[13] 01117-06203	(E)BOLT-HEXAGON (D)SCHRAUBE	S	S				(F)BOULON (S)PERNO	5			
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

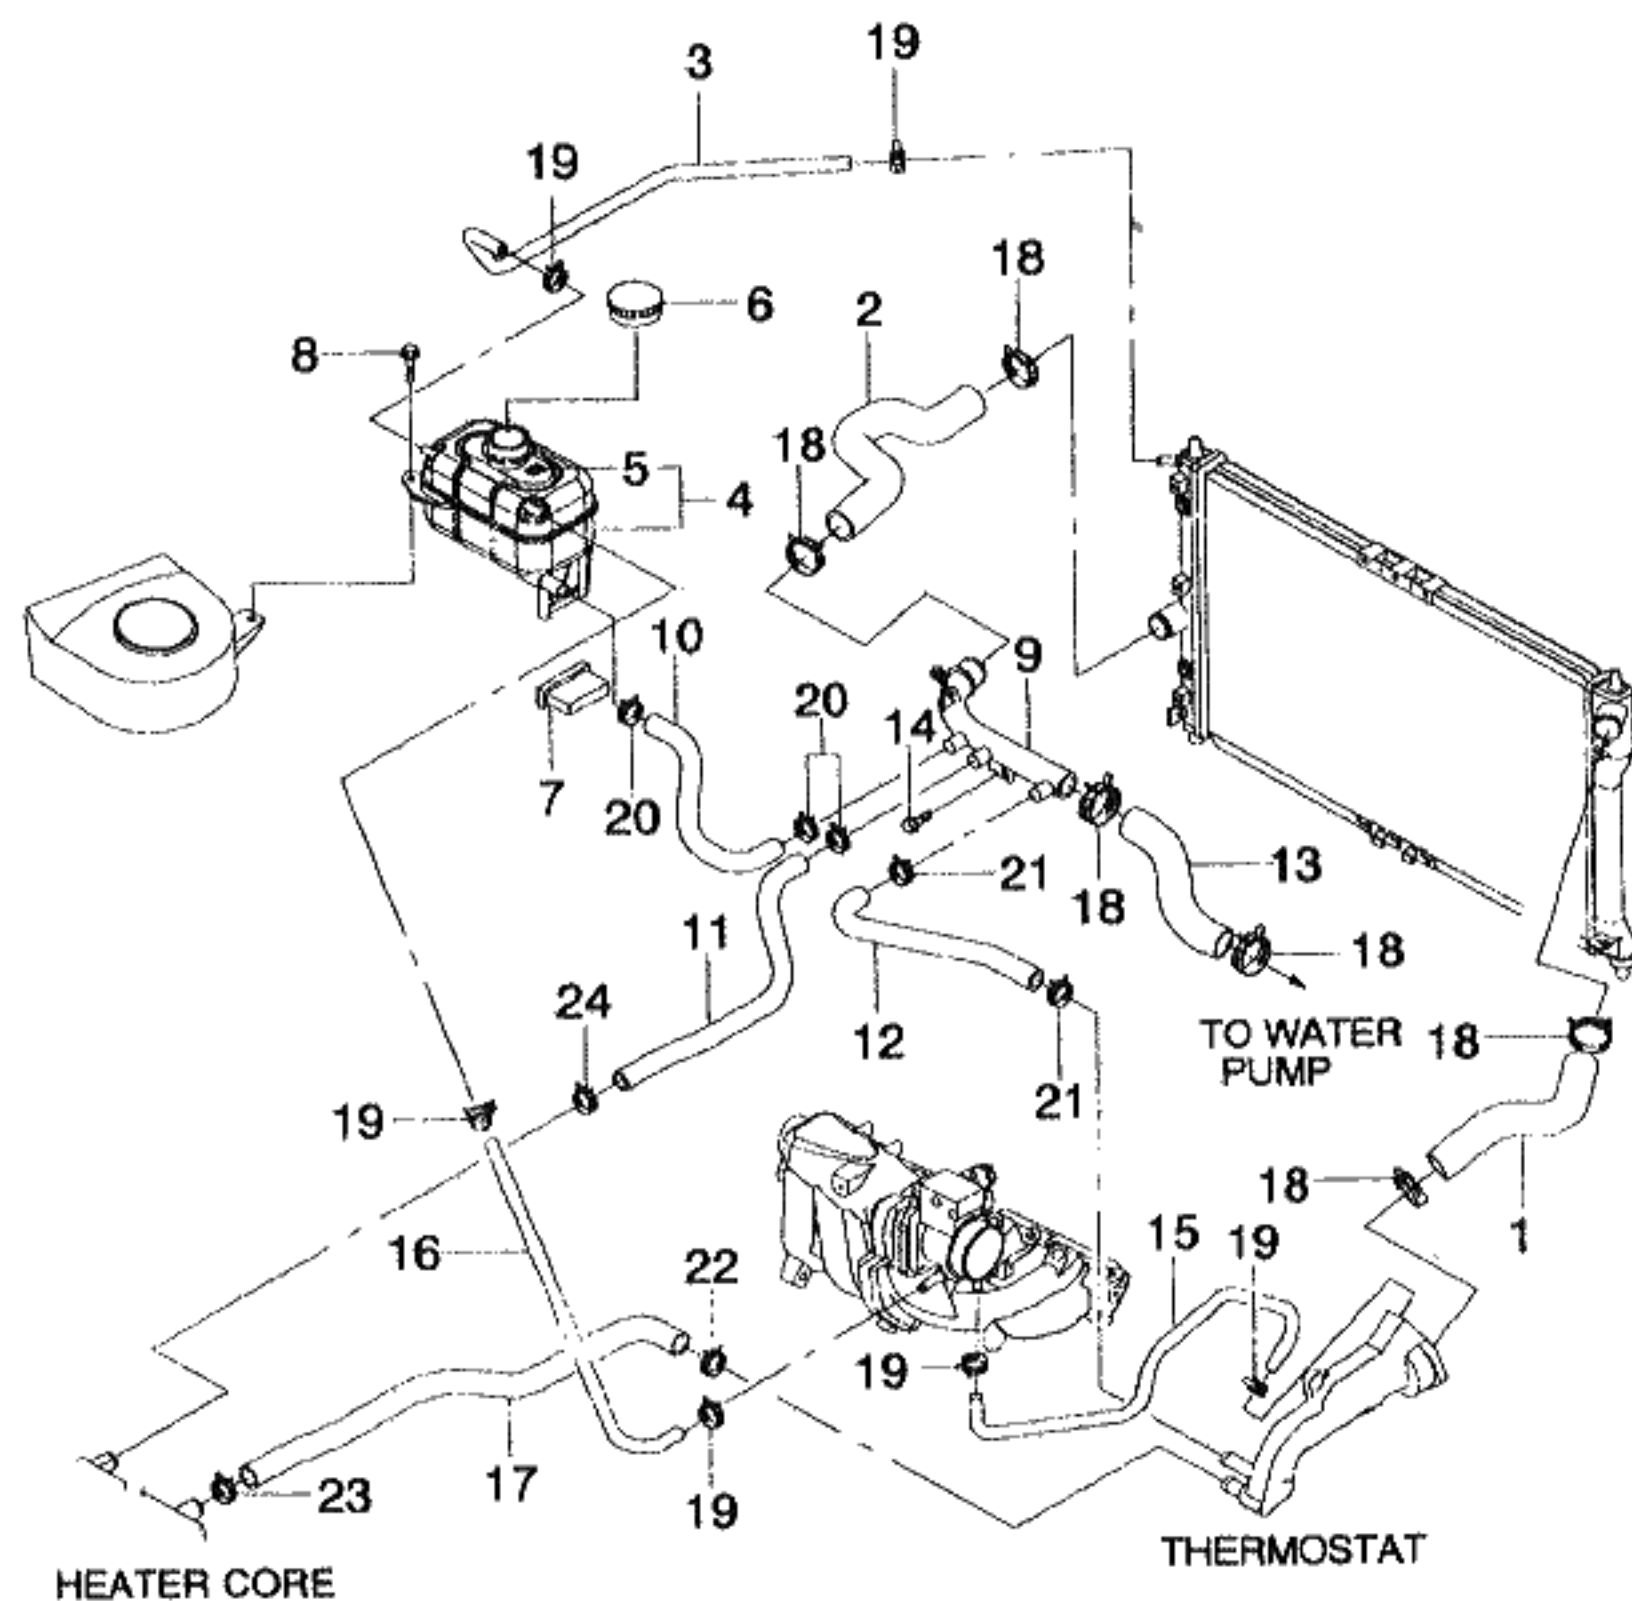

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 96181465	(E)HOSE- ELBOW UPPER (D)SCHLAUCH,BOGEN,OBEN S				(F)TUYAU-COUDE,HAUT (S)MANGUERA-CODO,SUPERIOR 1				VS	
	[02] 96351834	(E)HOSE-RADIATOR,LOWER (D)SCHLAUCH,BOGEN,UNTEN S				(F)TUYAU-COUDE,BAS (S)MANGUERA-CODO,INFERIOR 1					
	[03] 96181469	(E)HOSE-RADIATOR,SURGE TANK (D)SCHLAUCH,BOGEN S				(F)TUYAU-COUDE (S)MANGUERA-CODO 1					
	[04] 96351105	(E)TANK-SURGE,WATER (D)TANK,ÜBERFLUß S				(F)RESERVOIR-TROP-PLEIN (S)TANQUE-SOBRE CARGA 1					
	[05] 96144700	(E)STICKER-SURGE TANK (D)ETIKETT S				(F)VIGNETTE (S)ETIQUETA ADHESIVA 1					
	[06] 96351578	(E)CAP-SURGE TANK,WATER (D)DECKEL,ÜBERFLUßTANK S				(F)CHAPEAU (S)TAPA-TANQUE DE ARRANQUE 1					
	[07] 96308188	(E)MOUNTING-SURGE TANK (D)MONTAGE-TANK,ÜBERFLUß S				(F)MONTAGE-RESERVOIR (S)MONTAJE-TANQUE-SOBRE 1					
	[08] 01514-06203	(E)BOLT-FLANGE (D)SCHRAUBE S				(F)BOULON (S)PERNO 1					
	[09] 96351108	(E)PIPE-WATER (D)ROHR S				(F)TUYAU (S)TUBERIA 1					
	[10] 96181471	(E)HOSE-SURGE TANK TO PIPE (D)SCHLAUCH,ÜBERFLUßTANK S				(F)TUYAU (S)MANGUERA 1					


LEVEL

S X = 2.0 SOHC


CDX = 2.0 DOHC

T/A(TRANSAXLE)


M = MANUAL T/A
A = AUTOMATIC T/A
= COMMON

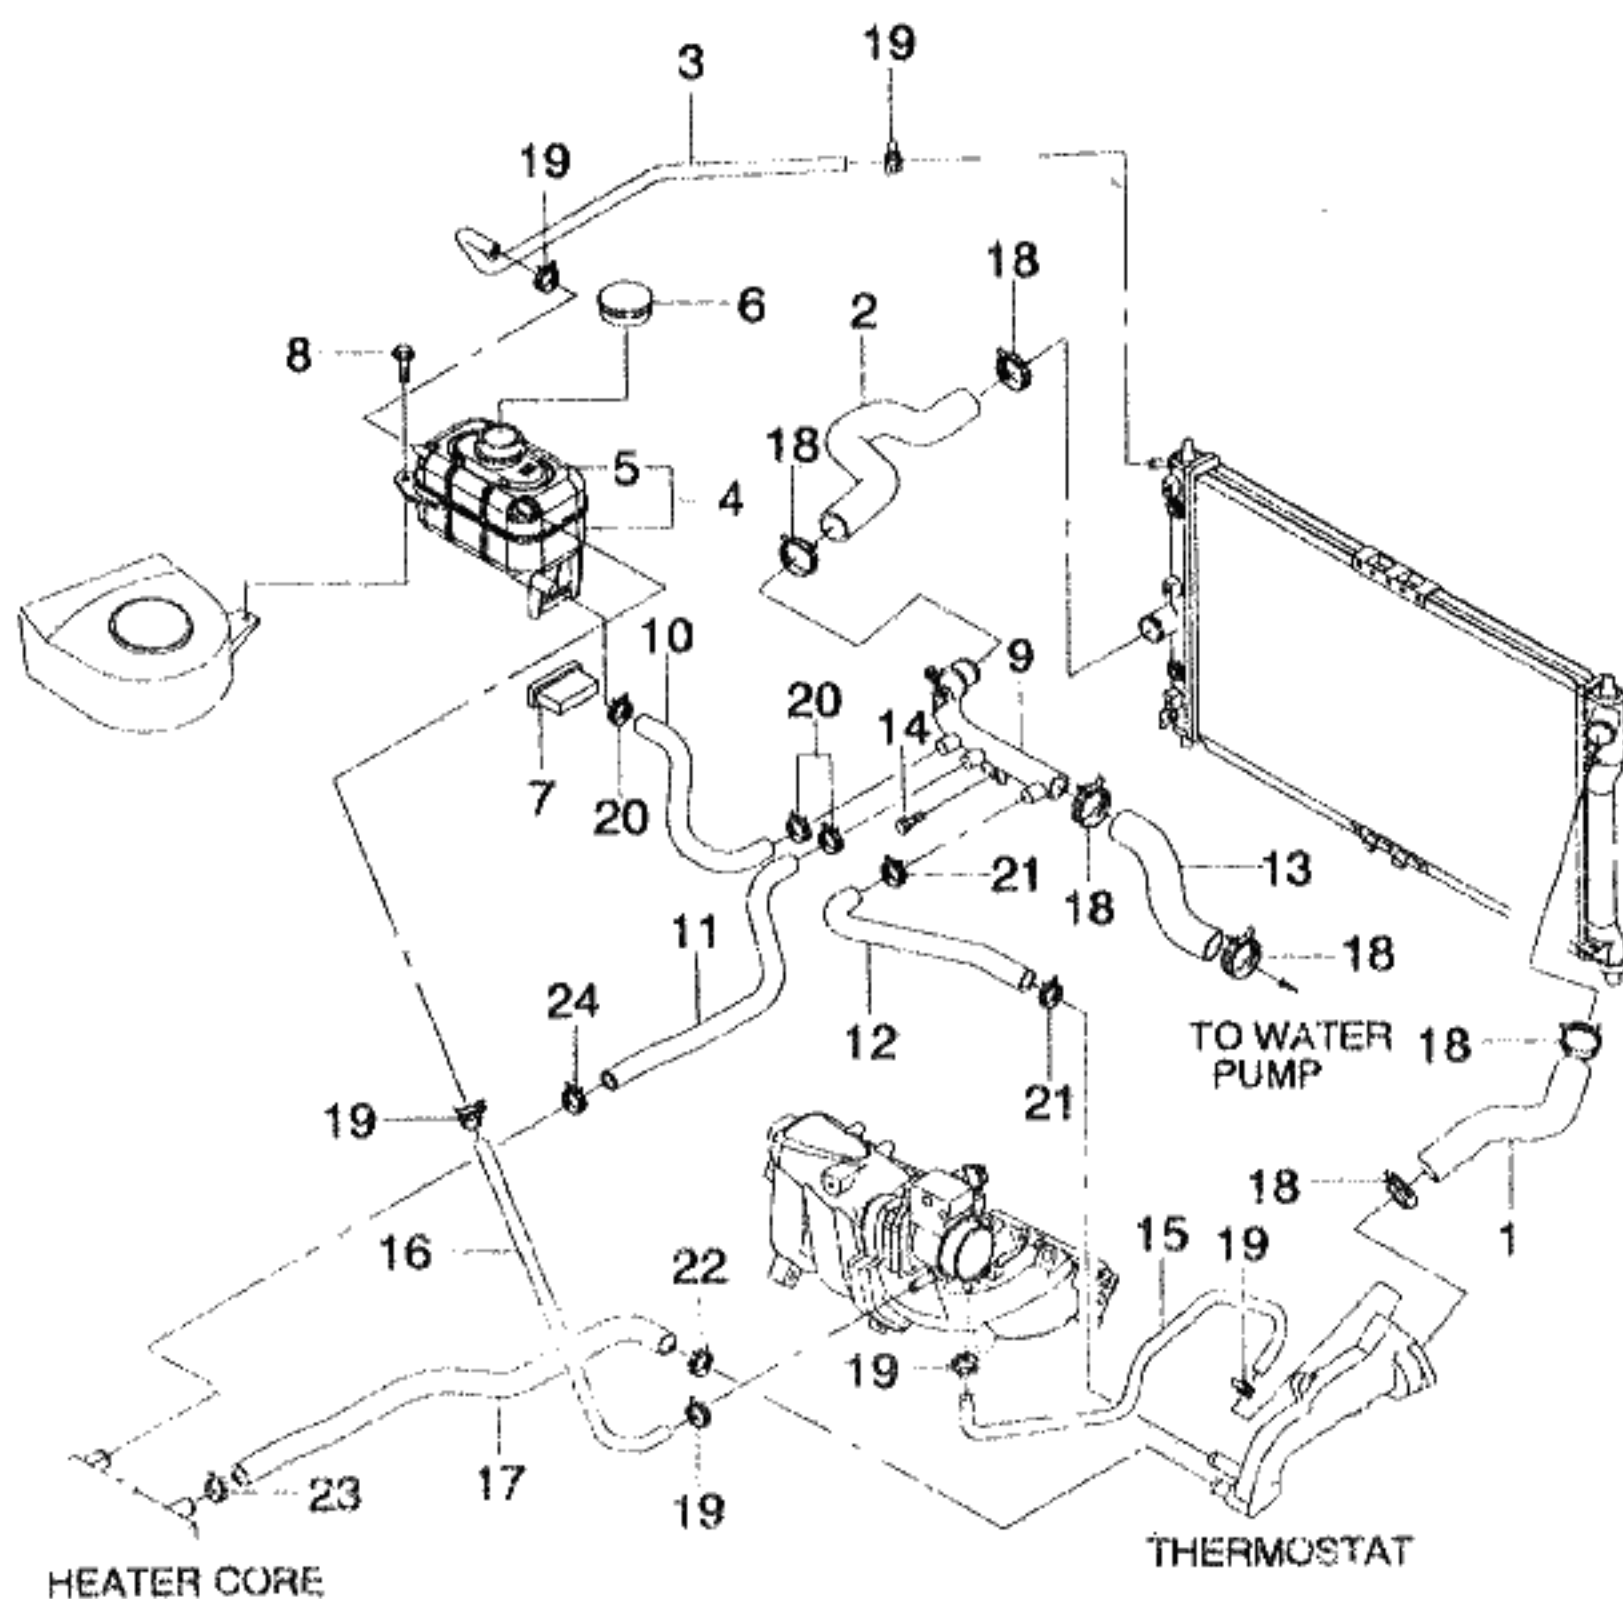


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	[11]	(E)HOSE-HEATER,RETURN (D)RÜCK-SCHLAUCH,HEIZUNG				(F)TUYAU-RETOUR CHAUFFAGE (S)MANGUERA-CALENTADOR						
	96211759	.	S	.		1					FC	
	96207504	.	S	.		1					FD	
	[12]	(E)HOSE-BYPASS (D)SCHLAUCH				(F)TUYAU (S)MANGUERA						
	96181473	.	S	.		1						
	[13]	(E)HOSE-PIPE TO WATER PUMP (D)SCHLAUCH				(F)TUYAU (S)MANGUERA						
	96184371	.	S	.		1						
	[14]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO						
	01137-08165	.	S	.		2						
	[15]	(E)HOSE-T/BODY FEEDING (D)SCHLAUCH,DROSSEL KÖRPER				(F)TUYAU (S)MANGUERA						
	96184972	.	S	.		1						
	[16]	(E)HOSE-T/BODY,RETURN (D)SCHLAUCH,DROSSEL KÖRPER				(F)TUYAU (S)MANGUERA						
	96351109	.	S	.		1						
	[17]	(E)HOSE-HEATER,FEEDING (D)SCHLAUCH,HEIZUNG ZUFUHR				(F)TUYAU (S)MANGUERA-CALENTADOR					FA	
	96207407	.	S	.		1						
	[18]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09401-38401	.	S	.		2						
	[19]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09401-15401	.	S	.		2						
	[20]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

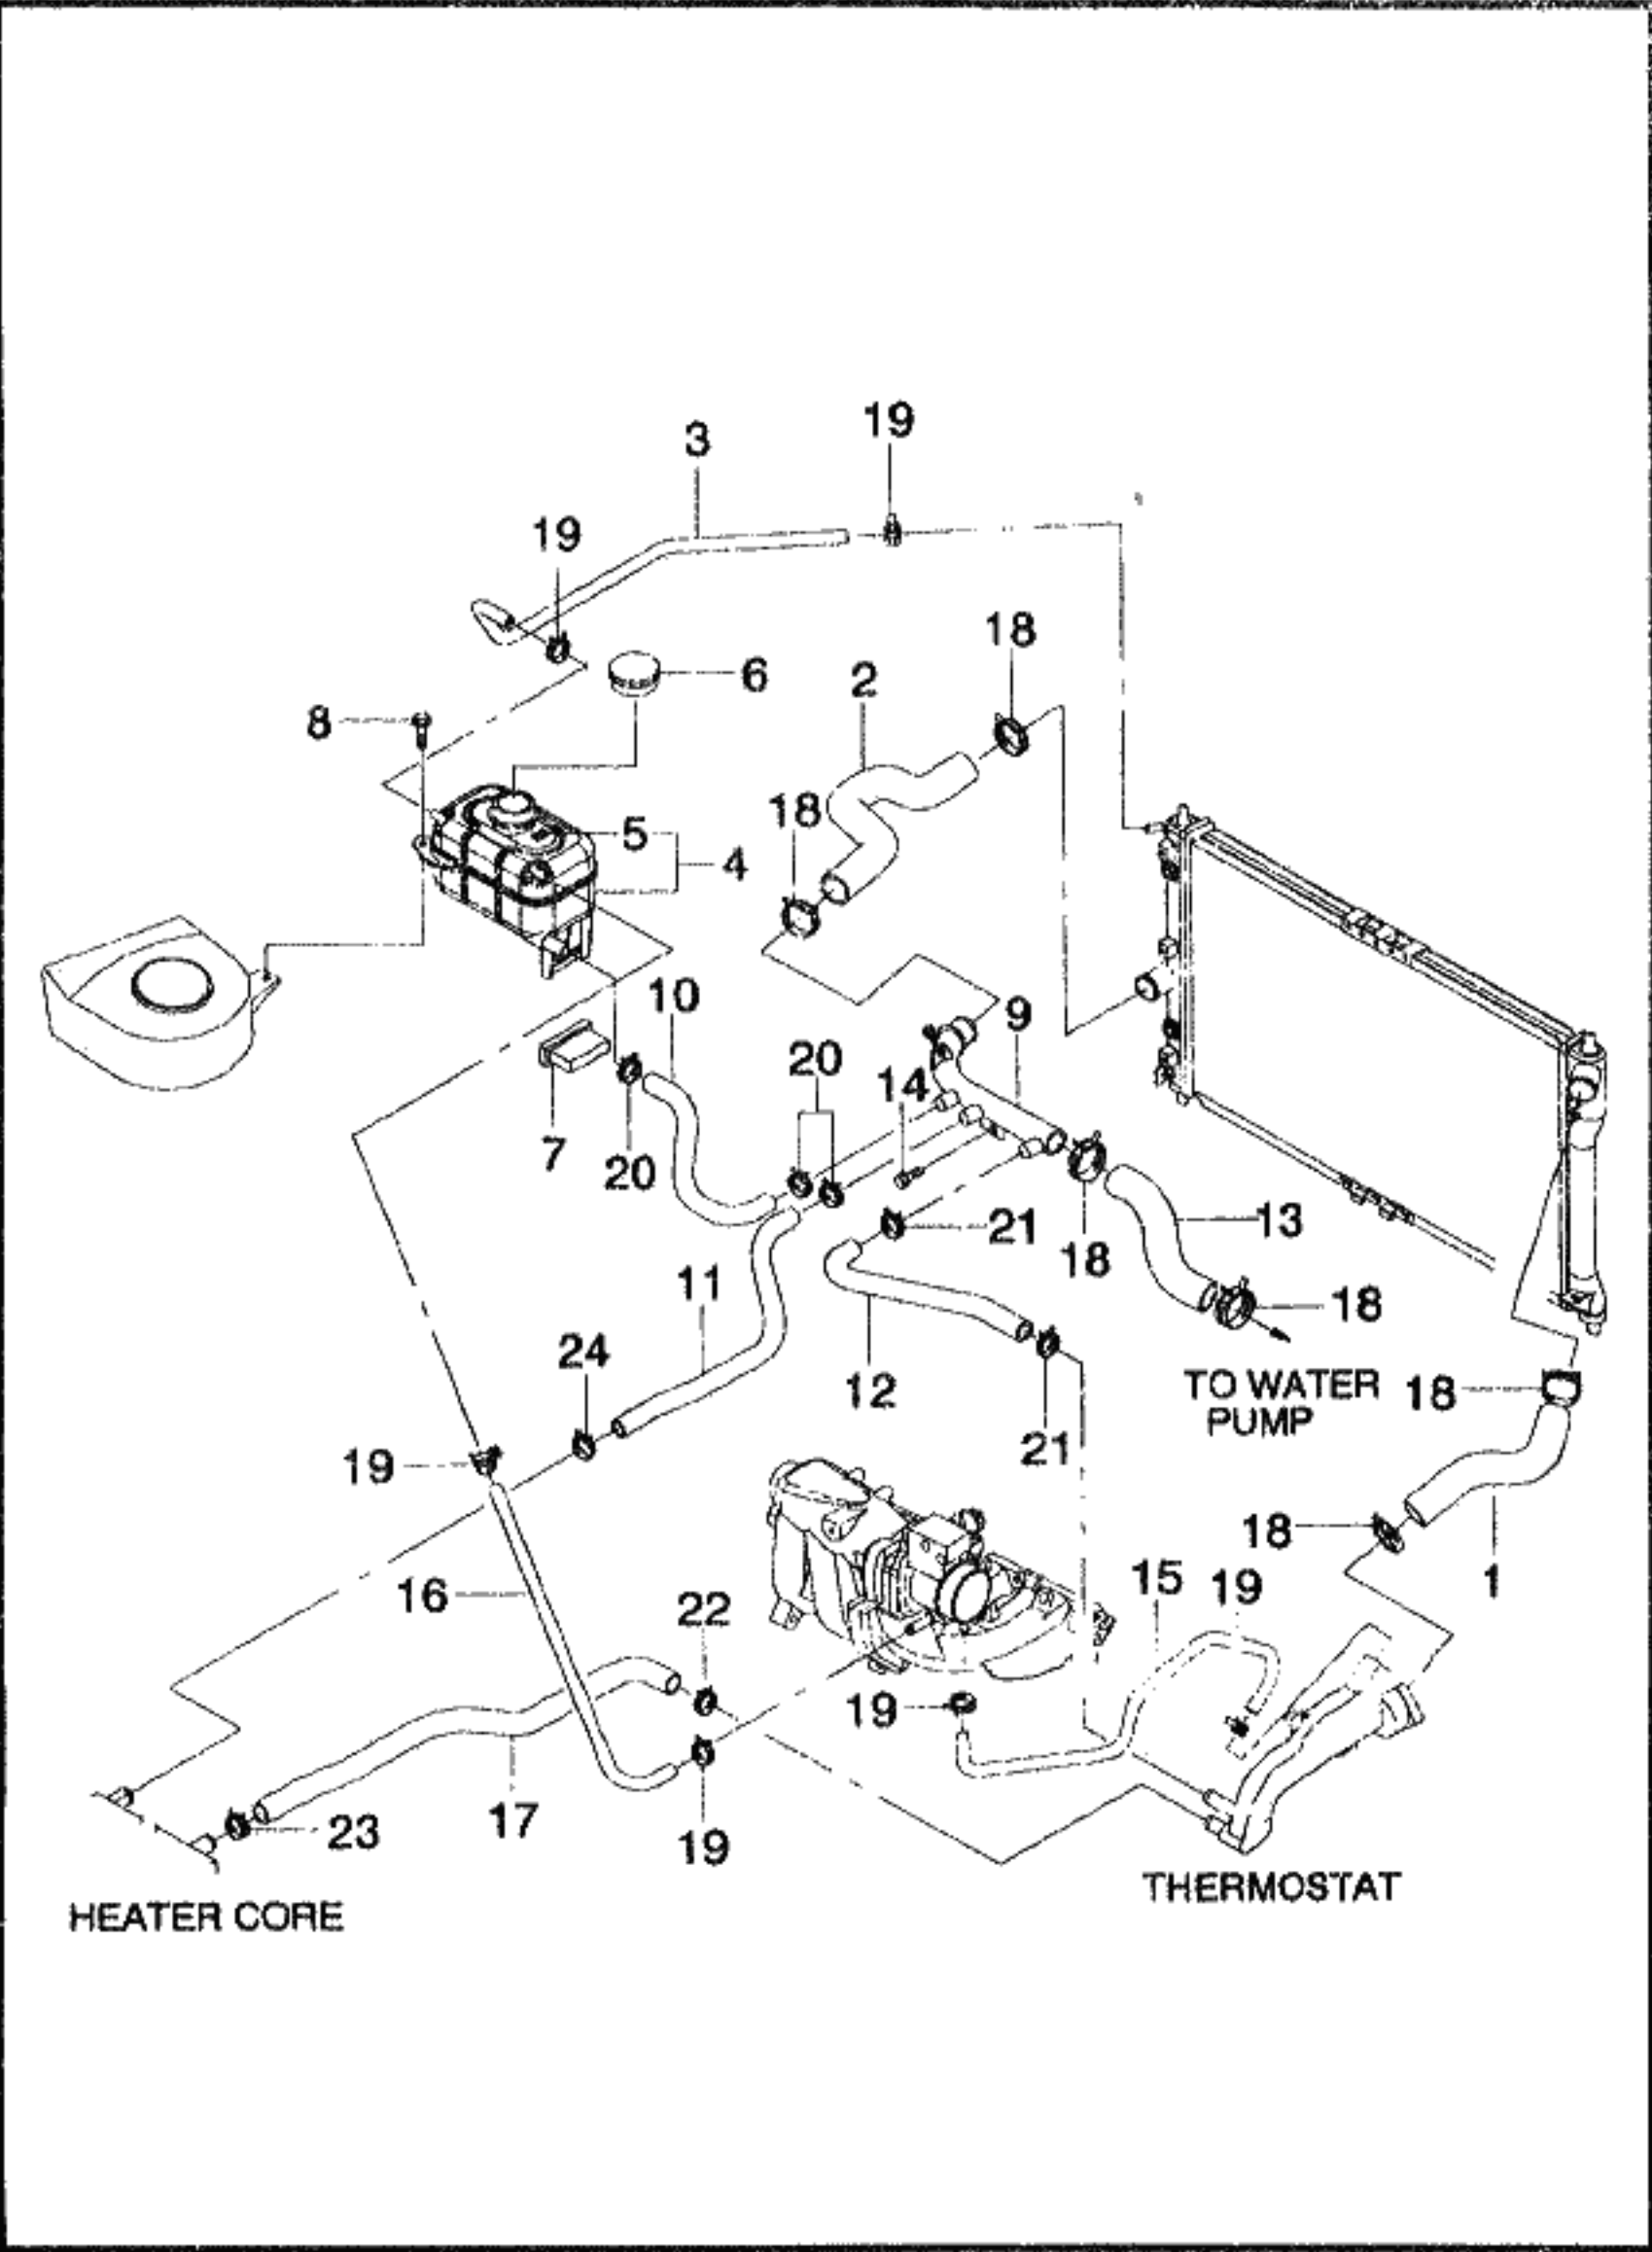

KEY NO.			PART NAME								
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	09401-22401 [21]	.	S	.			2			NOT APPLIED	
			(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA				
	09401-23401										
	09401-23402	.	S	.			2				
			(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA				
	[22]										
	09401-23402	.	S	.			1				
			(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA				
	[23]										
	09401-27404	.	S	.			1				
			(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA				
	[24]										
	09401-25404	.	S	.			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

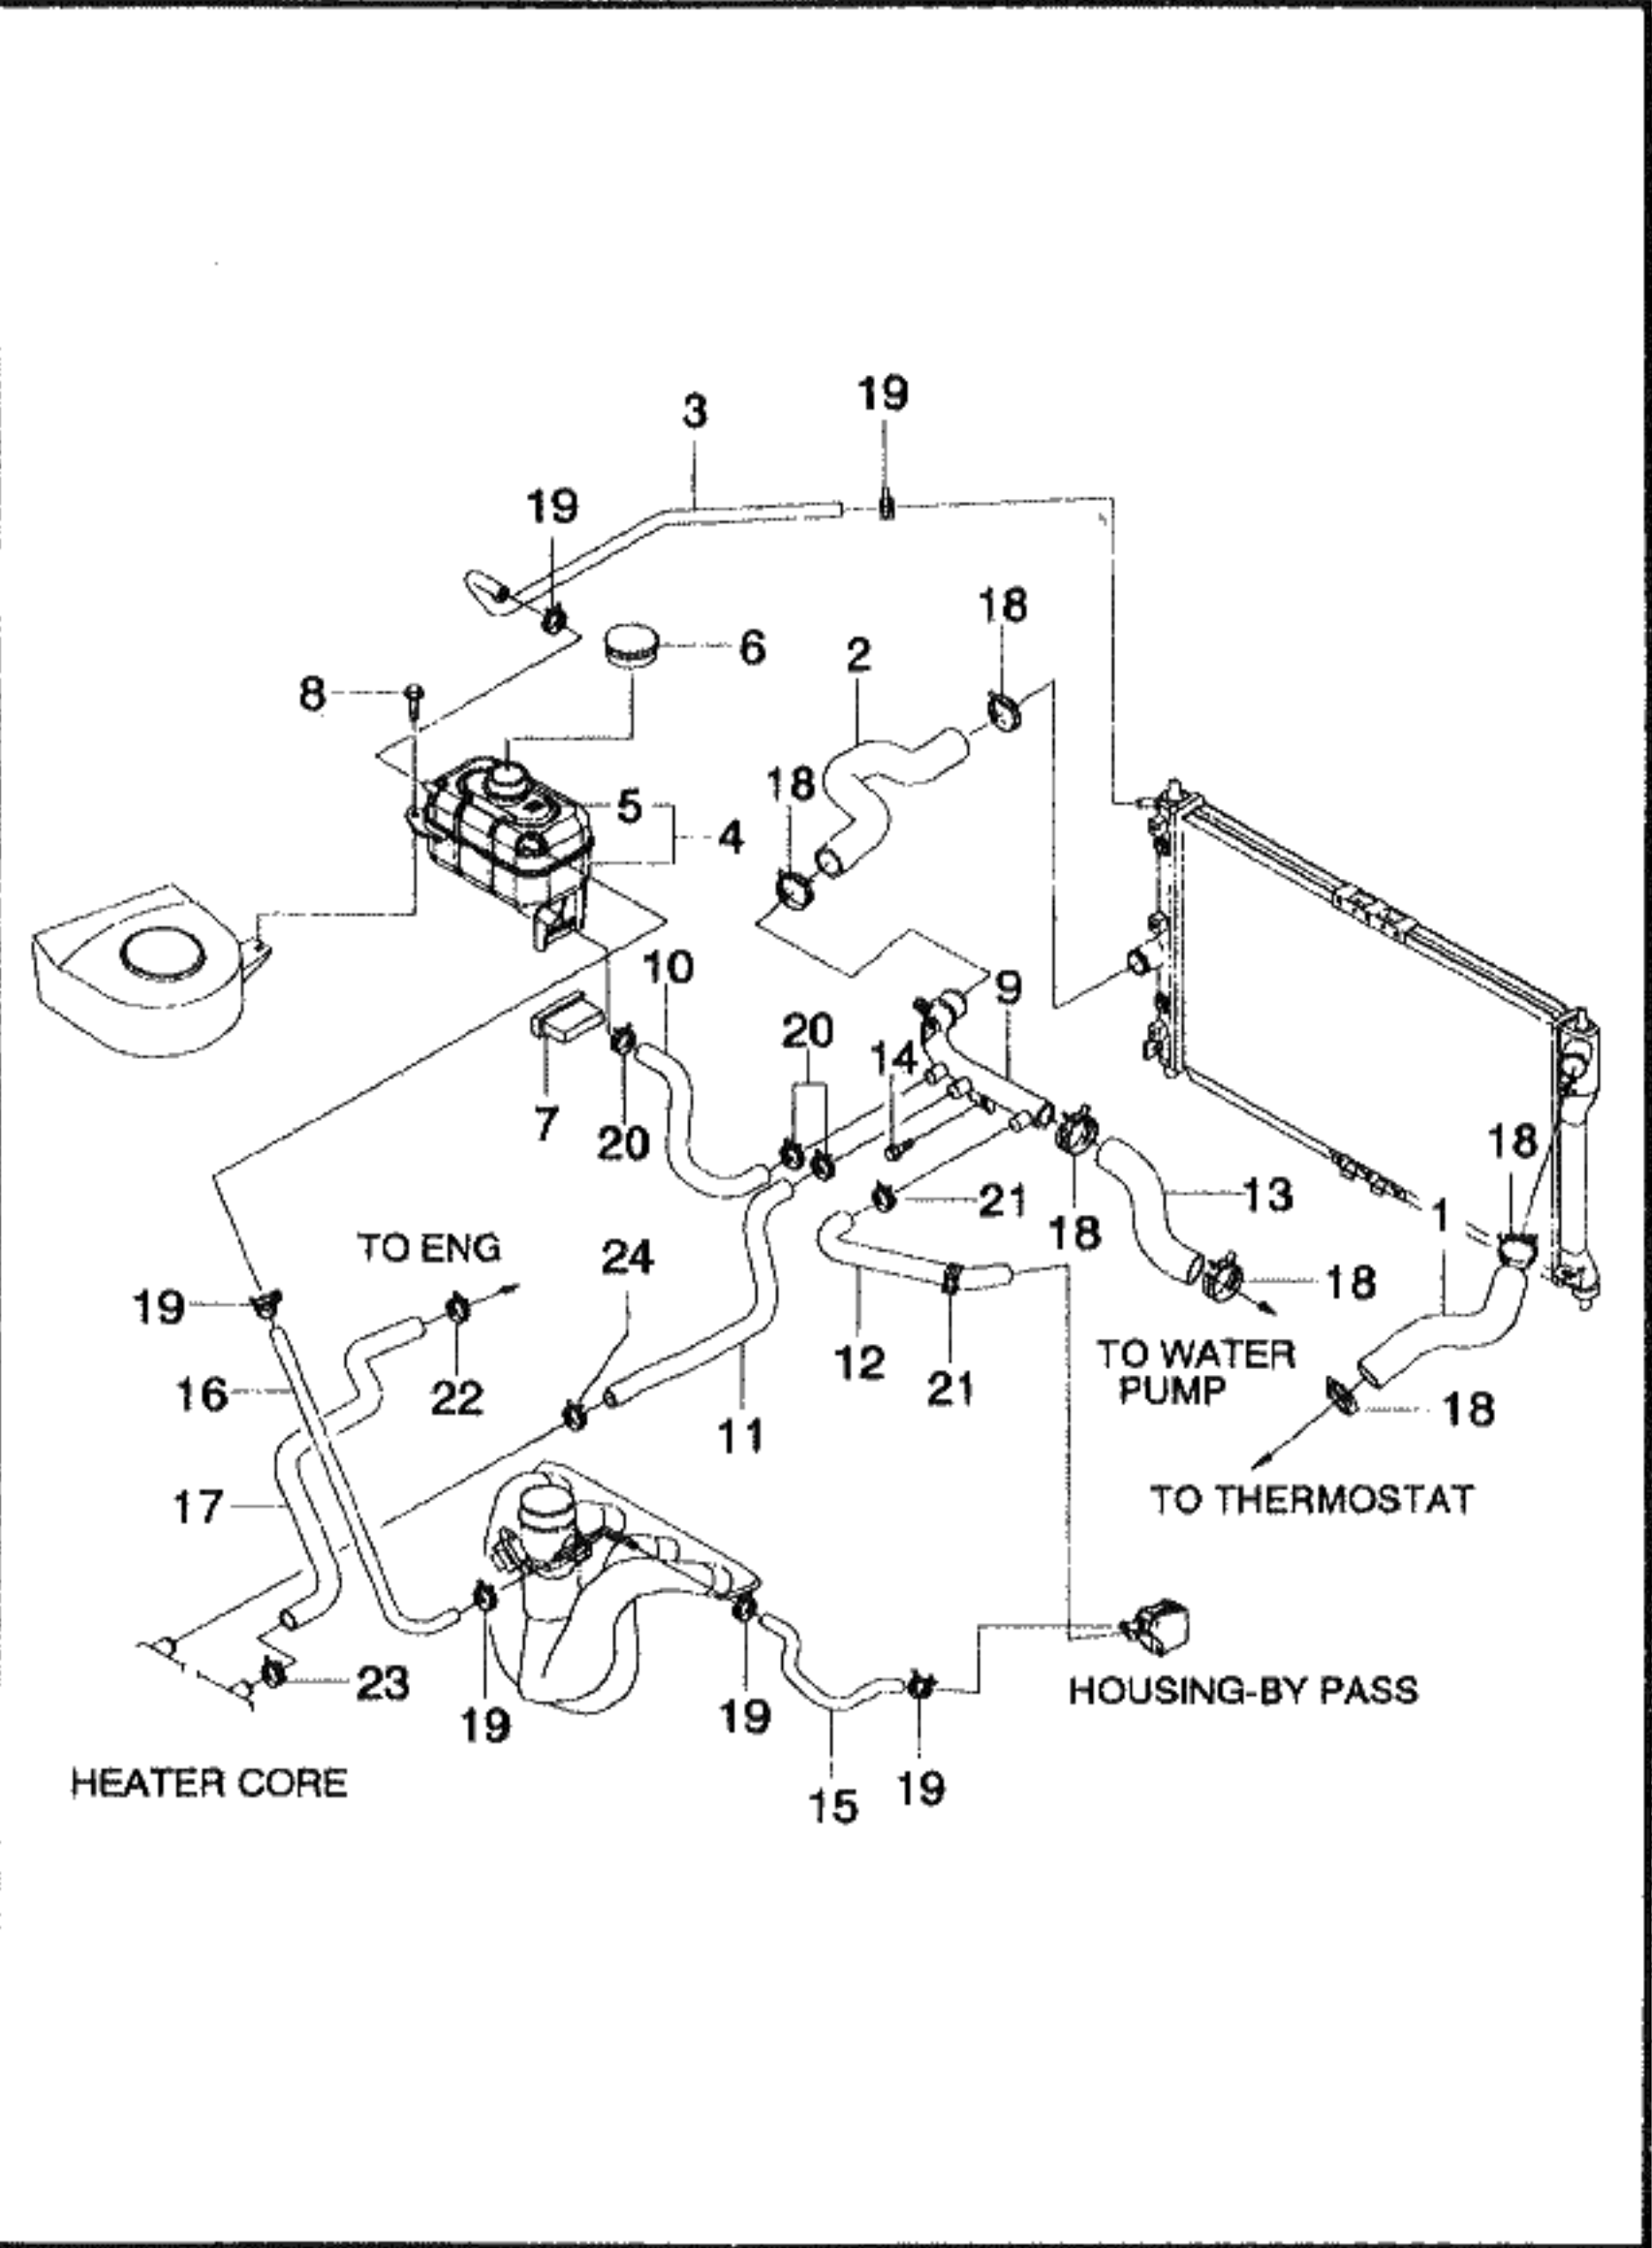

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96181466	(E)HOSE-RADIATOR,UPPER (D)SCHLAUCH,BOGEN,OBEN . O S				(F)TUYAU-COUDE,HAUT (S)MANGUERA-CODO,SUPERIOR 1				VD	
	[02] 96351834	(E)HOSE-RADIATOR,LOWER (D)SCHLAUCH,BOGEN,UNTEN . O S				(F)TUYAU-COUDE,BAS (S)MANGUERA-CODO,INFERIOR 1					
	[03] 96181469	(E)HOSE-RADIATOR,SURGE TANK (D)SCHLAUCH,BOGEN . O S				(F)TUYAU-COUDE (S)MANGUERA-CODO 1					
	[04] 96351105	(E)TANK-SURGE,WATER (D)TANK,ÜBERFLUß . O S				(F)RESERVOIR-TROP-PLEIN (S)TANQUE-SOBRE CARGA 1					
	[05] 96144700	(E)STICKER-SURGE TANK (D)ETIKETT . O S				(F)VIGNETTE (S)ETIQUETA ADHESIVA 1					
	[06] 96351578	(E)CAP-SURGE TANK,WATER (D)DECKEL,ÜBERFLUßTANK . O S				(F)CHAPEAU (S)TAPA-TANQUE DE ARRANQUE 1					
	[07] 96308188	(E)MOUNTING-SURGE TANK (D)MONTAGE-TANK,ÜBERFLUß . O S				(F)MONTAGE-RESERVOIR (S)MONTAJE-TANQUE-SOBRE 1					
	[08] 01514-06203	(E)BOLT-FLANGE (D)SCHRAUBE . O S				(F)BOULON (S)PERNO 1					
	[09] 96313300	(E)PIPE-WATER (D)ROHR . O S				(F)TUYAU (S)TUBERIA 1					
	[10] 96181471	(E)HOSE-SURGE TANK TO PIPE (D)SCHLAUCH,ÜBERFLUßTANK . O S				(F)TUYAU (S)MANGUERA 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

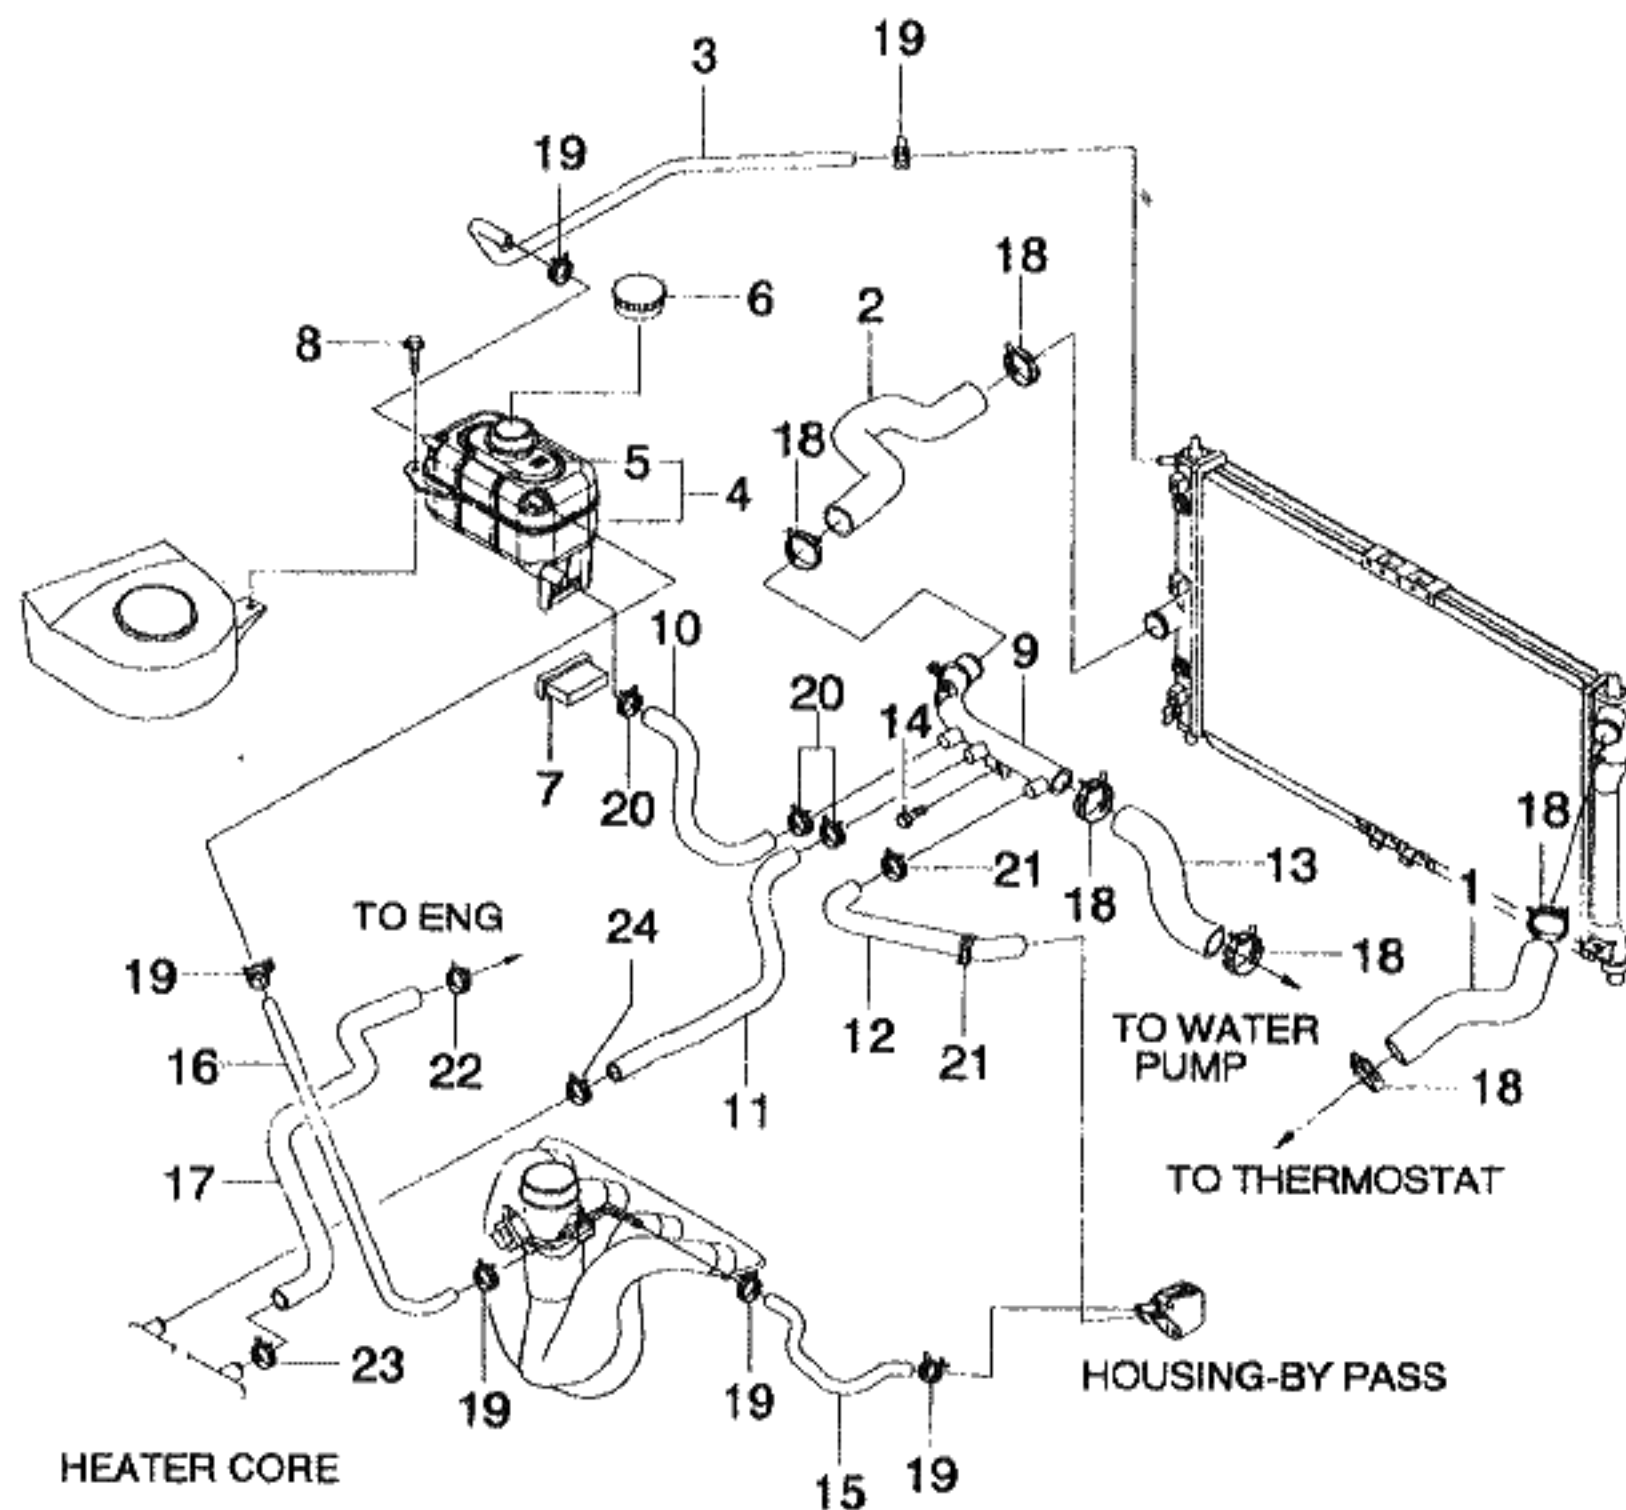

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11]	(E)HOSE-HEATER,RETURN (D)RÜCK-SCHLAUCH,HEIZUNG				(F)TUYAU-RETOUR CHAUFFAGE (S)MANGUERA-CALENTADOR					
	96211759	.	O	S		1					FC
	96207504	.	O	S		1					FD
	[12]	(E)HOSE-BYPASS (D)SCHLAUCH				(F)TUYAU (S)MANGUERA					
	96184370	.	O	S		1					
	[13]	(E)HOSE-PIPE TO WATER PUMP (D)SCHLAUCH				(F)TUYAU (S)MANGUERA					
	96184371	.	O	S		1					
	[14]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	01137-08165	.	O	S		2					
	[15]	(E)HOSE-T/BODY,FEEDING (D)SCHLAUCH,DROSSEL KÖRPER				(F)TUYAU (S)MANGUERA					
	96184860	.	O	S		1					
	[16]	(E)HOSE-T/BODY,RETURN (D)SCHLAUCH,DROSSEL KÖRPER				(F)TUYAU (S)MANGUERA					
	96351109	.	O	S		1					
	[17]	(E)HOSE-HEATER,FEEDING (D)SCHLAUCH,HEIZUNG ZUFUHR				(F)TUYAU (S)MANGUERA-CALENTADOR					
	96207408	.	O	S		1					FB
	[18]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09401-38401	.	O	S		6					
	[19]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09401-15401	.	O	S		6					
	[20]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A



CDX = 2.0 DOHC

A = AUTOMATIC T/A


. = COMMON

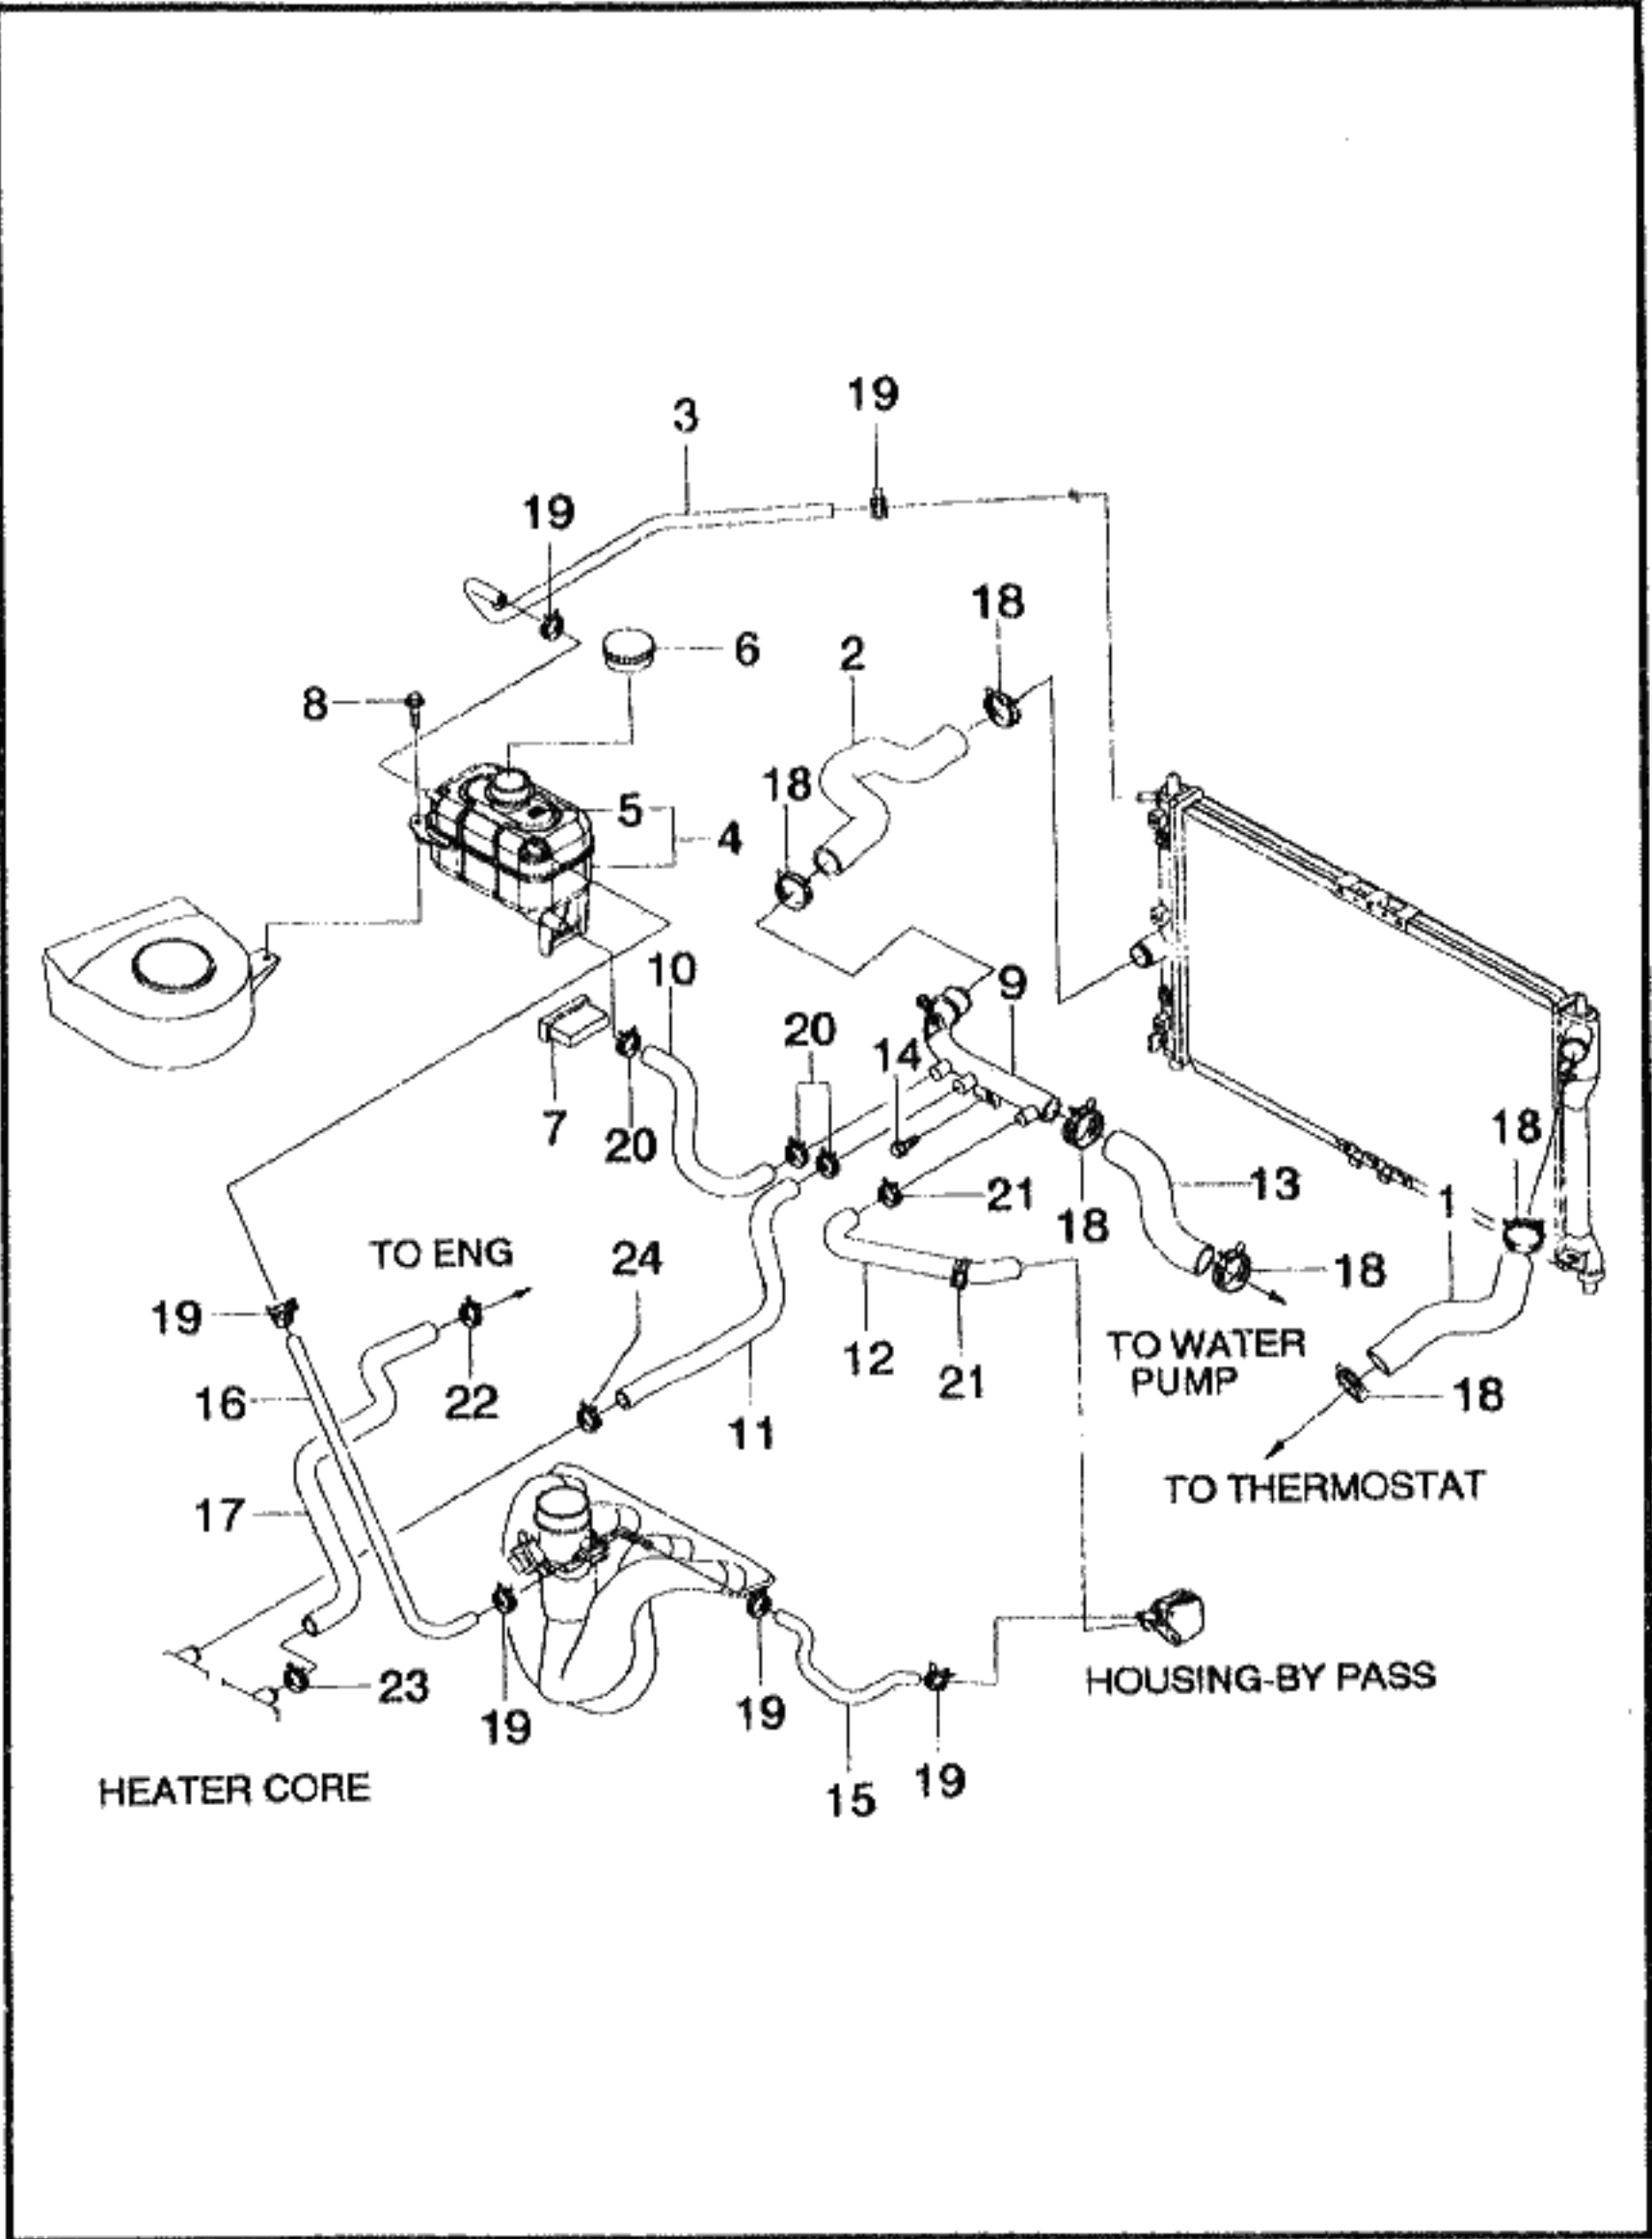


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09401-22401	.	O	S			4			NOT APPLIED		
	[21]		(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09401-23401											
	09401-23402	.	O	S			2					
	[22]		(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09401-23402	.	O	S			1					
	[23]		(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09401-27404	.	O	S			1					
	[24]		(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09401-25404	.	O	S			1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

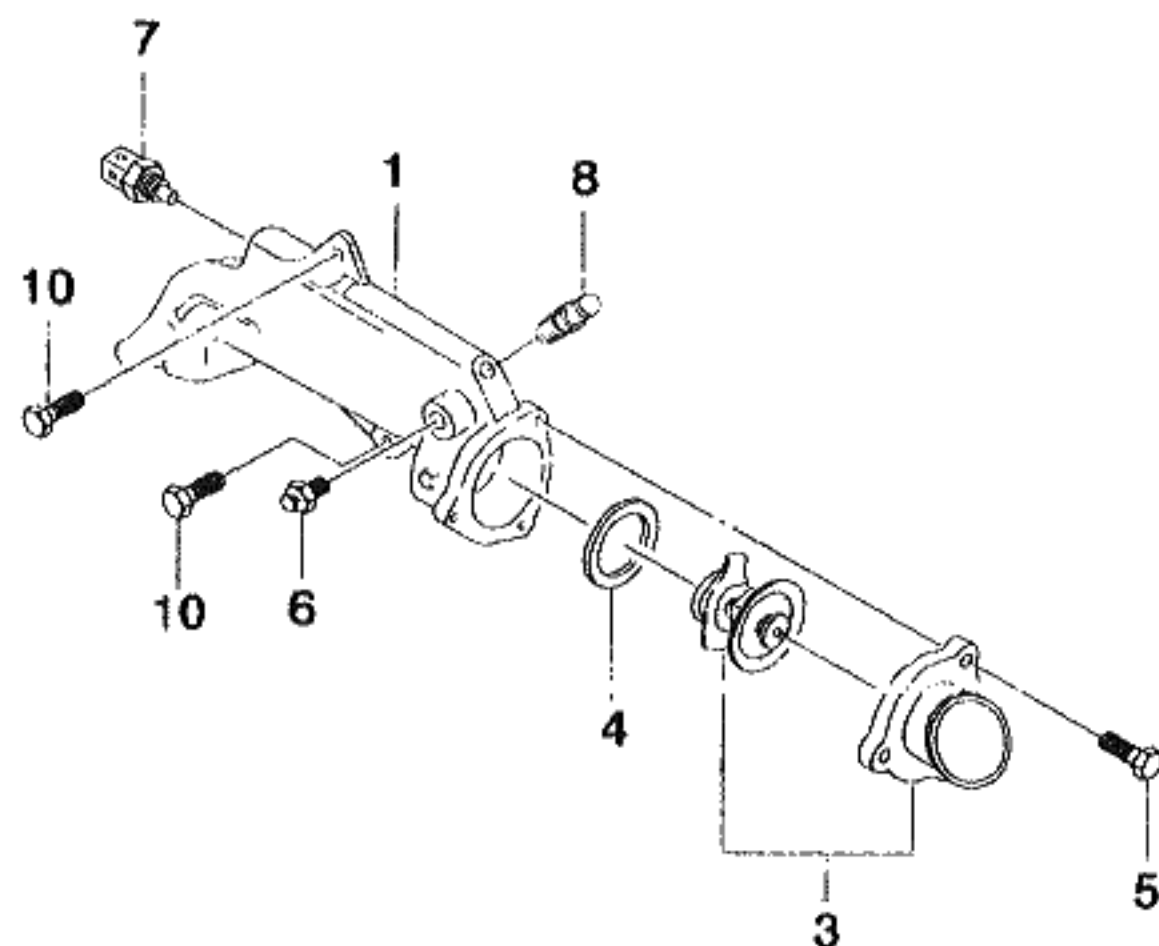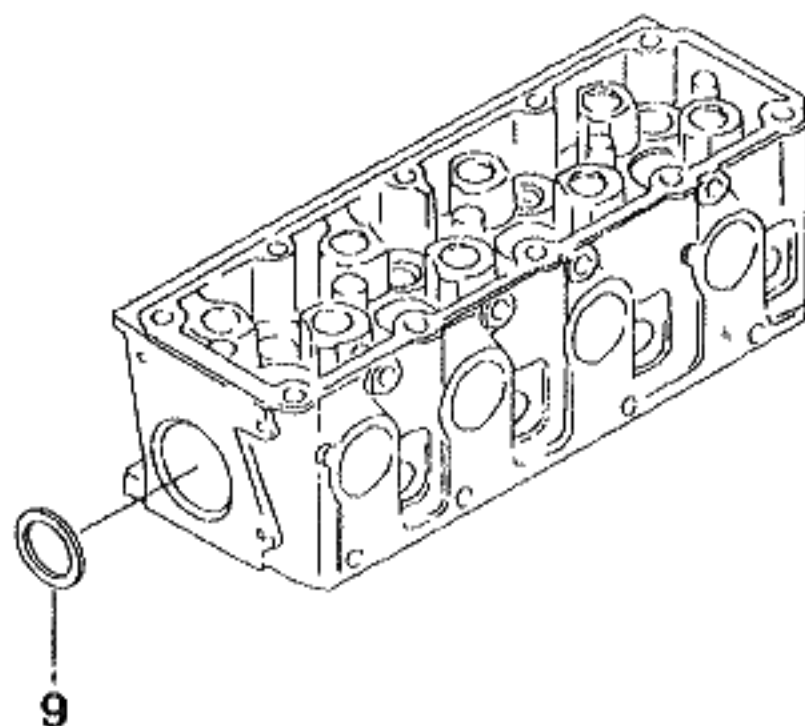

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 90280746	(E)HOUSING-THERMOSTAT (D)GEHÄUSE, THERMOSTAT	.	S	.	(F)LOGEMENT-THERMOSTAT (S)CARCASA-TERMOSTATO	1				
	[03] 92061279	(E)THERMOSTAT A (D)THERMOSTAT	.	S	.	(F)THERMOSTAT (S)TERMOSTATO	1				
	[04] 90220436	(E)RING-THERMOSTAT CAP (D)RING, THERMOSTAT KAPPE	.	S	.	(F)ANNEAU (S)ANILLO-TAPA DE TERMOSTATO	1				
	[05] 11013351	(E)BOLT (D)SCHRAUBE	.	S	.	(F)BOULON (S)PERNO	3				
	[06] 92061480	(E)SENSOR-TEMPERATURE GAUGE (D)SENSOR, TEMPERATUR	.	S	.	(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA	1				
	[07] 12191170	(E)SENSOR-WATER TEMP (D)SENSOR, TEMPERATUR	.	S	.	(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA	1				
	[08] 90122748	(E)CONNECTOR-BYPASS BODY (D)VERBINDUNG	.	S	.	(F)CONNECTEUR (S)CONECTOR	1				
	[09] 90118437	(E)RING-SEAL THERMO HOUSING (D)RING, DICHTUNG	.	S	.	(F)ANNEAU-JOINT (S)ANILLO-SELLO	1				
	[10] 11042896	(E)BOLT-THERMO HOUSING (D)SCHRAUBE	.	S	.	(F)BOULON (S)PERNO	2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

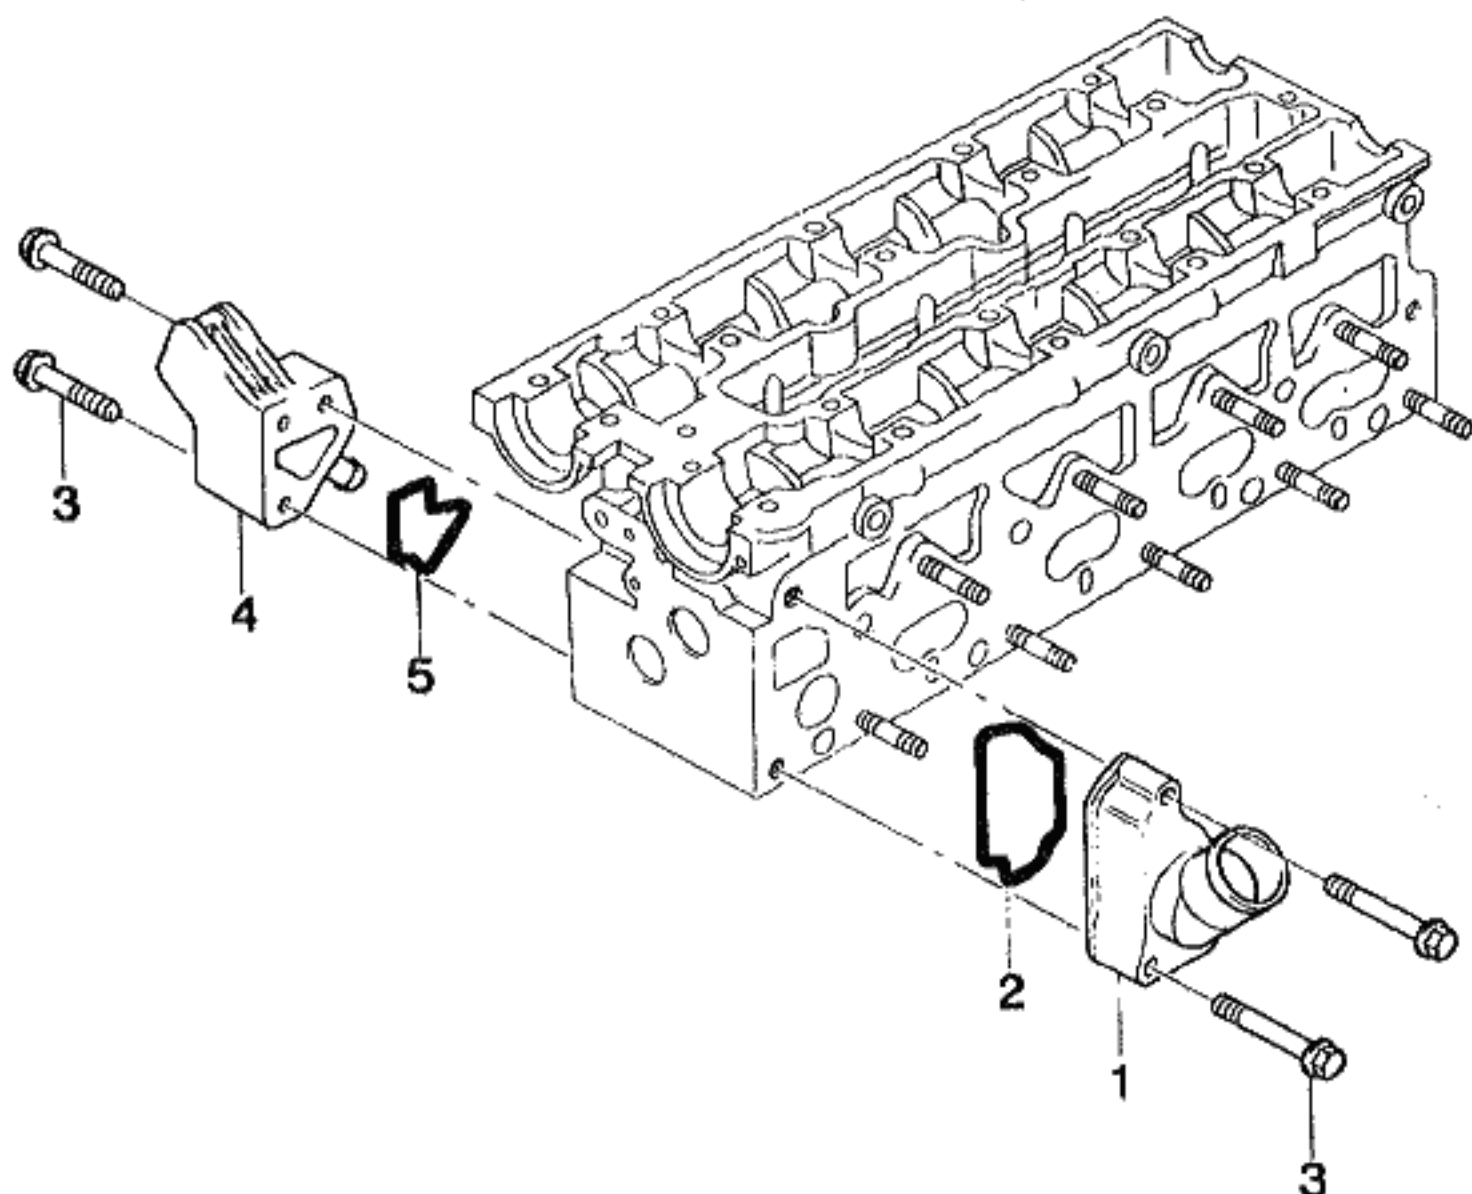

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 92062728	(E)THERMOSTAT A (D)THERMOSTAT . O S				(F)THERMOSTAT (S)TERMOSTATO 1					
	[02] 90411950	(E)RING-THERMOSTAT (D)RING . O S				(F)ANNEAU (S)ANILLO 1					
	[03] 90411951	(E)BOLT-THERMOSTAT (D)SCHRAUBE . O S				(F)BOULON (S)PERNO 4					
	[04] 92063156	(E)HOUSING A-BYPASS (D)GEHÄUSE, THERMOSTAT . O S				(F)LOGEMENT-THERMOSTAT (S)CARCASA-TERMOSTATO 1					
	[05] 90411954	(E)SEAL-BYPASS HOUSING (D)DICHTUNG . O S				(F)JOINT (S)SELLO 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

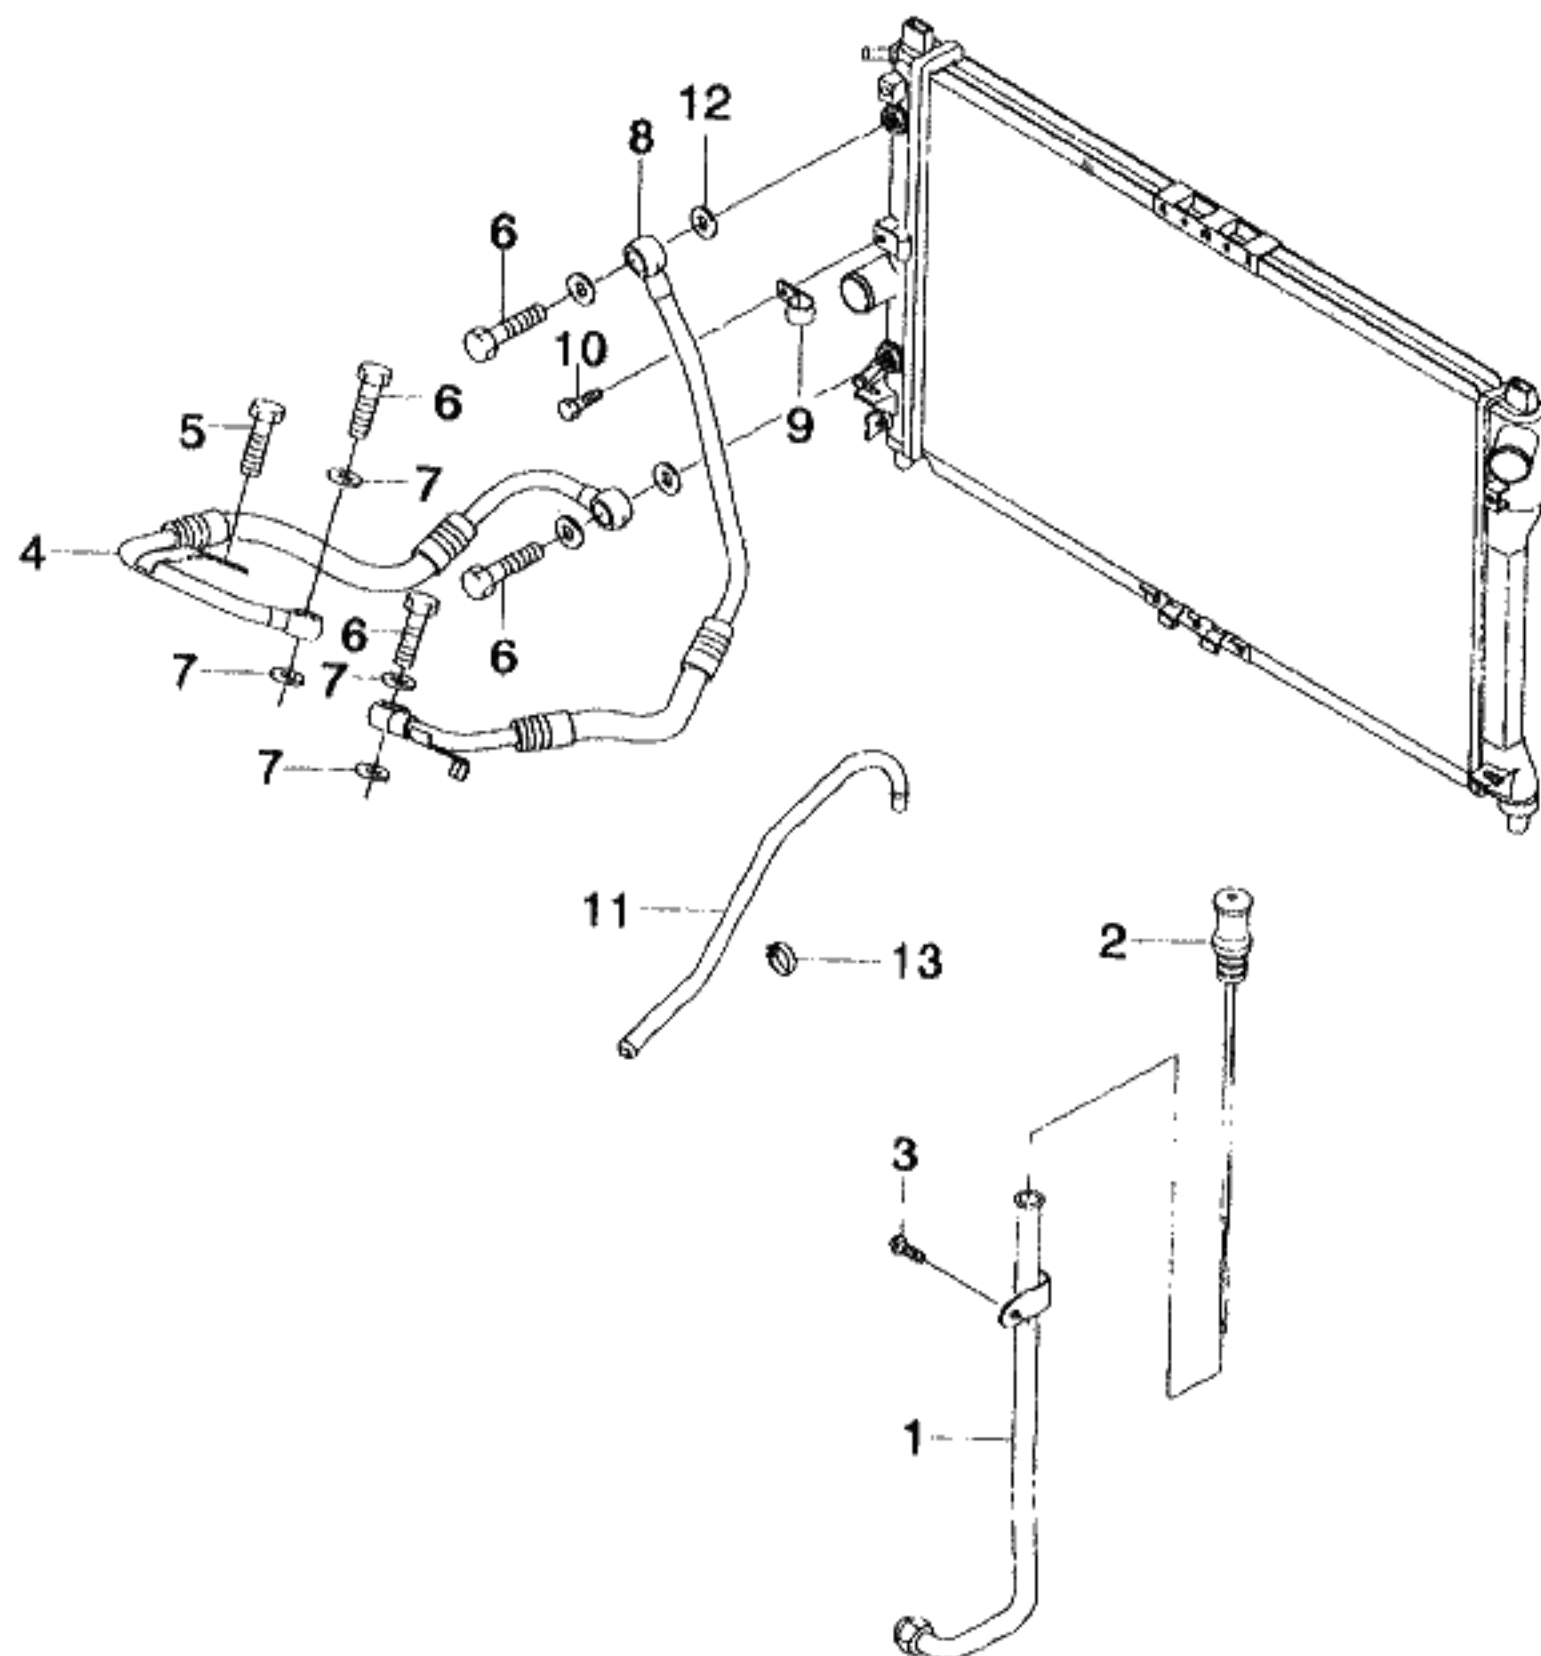

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01] 96210143	(E)TUBE A-OIL FILLER (D)ROHRLEITUNG A O O				(F)TUYAU (S)TUBO 1						
	[02] 96240855	(E)STICK A-GAUGE (D)MEßSTAB, ÖL PEGEL A O O				(F)JAUGE-JAUGE (S)VARILLA-MEDIDOR 1						
	[03] 02627-08203	(E)BOLT-HEXAGON (D)SCHRAUBE A O O				(F)BOULON (S)PERNO 1						
	[04] 96233632 O 96255931	(E)PIPE A-OIL COOLER,INLET (D)ROHR A O O A O O				(F)TUYAU (S)TUBERIA 1 1 970710		970709				
	[05] 01107-06123	(E)BOLT-HEXAGON (D)SCHRAUBE A O O				(F)BOULON (S)PERNO 1						
	[06] 09360-14005	(E)BOLT-UNION (D)SCHRAUBE A O O				(F)BOULON (S)PERNO 1						
	[07] 09160-14004	(E)WASHER-PLAIN (D)DICHTUNGSRING A O O				(F)RONDELLE (S)ARANDELA 4						
	[08] 96233631	(E)PIPE A-OIL COOLER,OUTLET (D)ROHR A O O				(F)TUYAU (S)TUBERIA 1						
	[09] 96232868	(E)CLIP-OIL COOLER (D)KLEMME A O O				(F)ATTACHE (S)GRAPA 1						
	[10]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO						

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A


CDX = 2.0 DOHC

A = AUTOMATIC T/A


. = COMMON

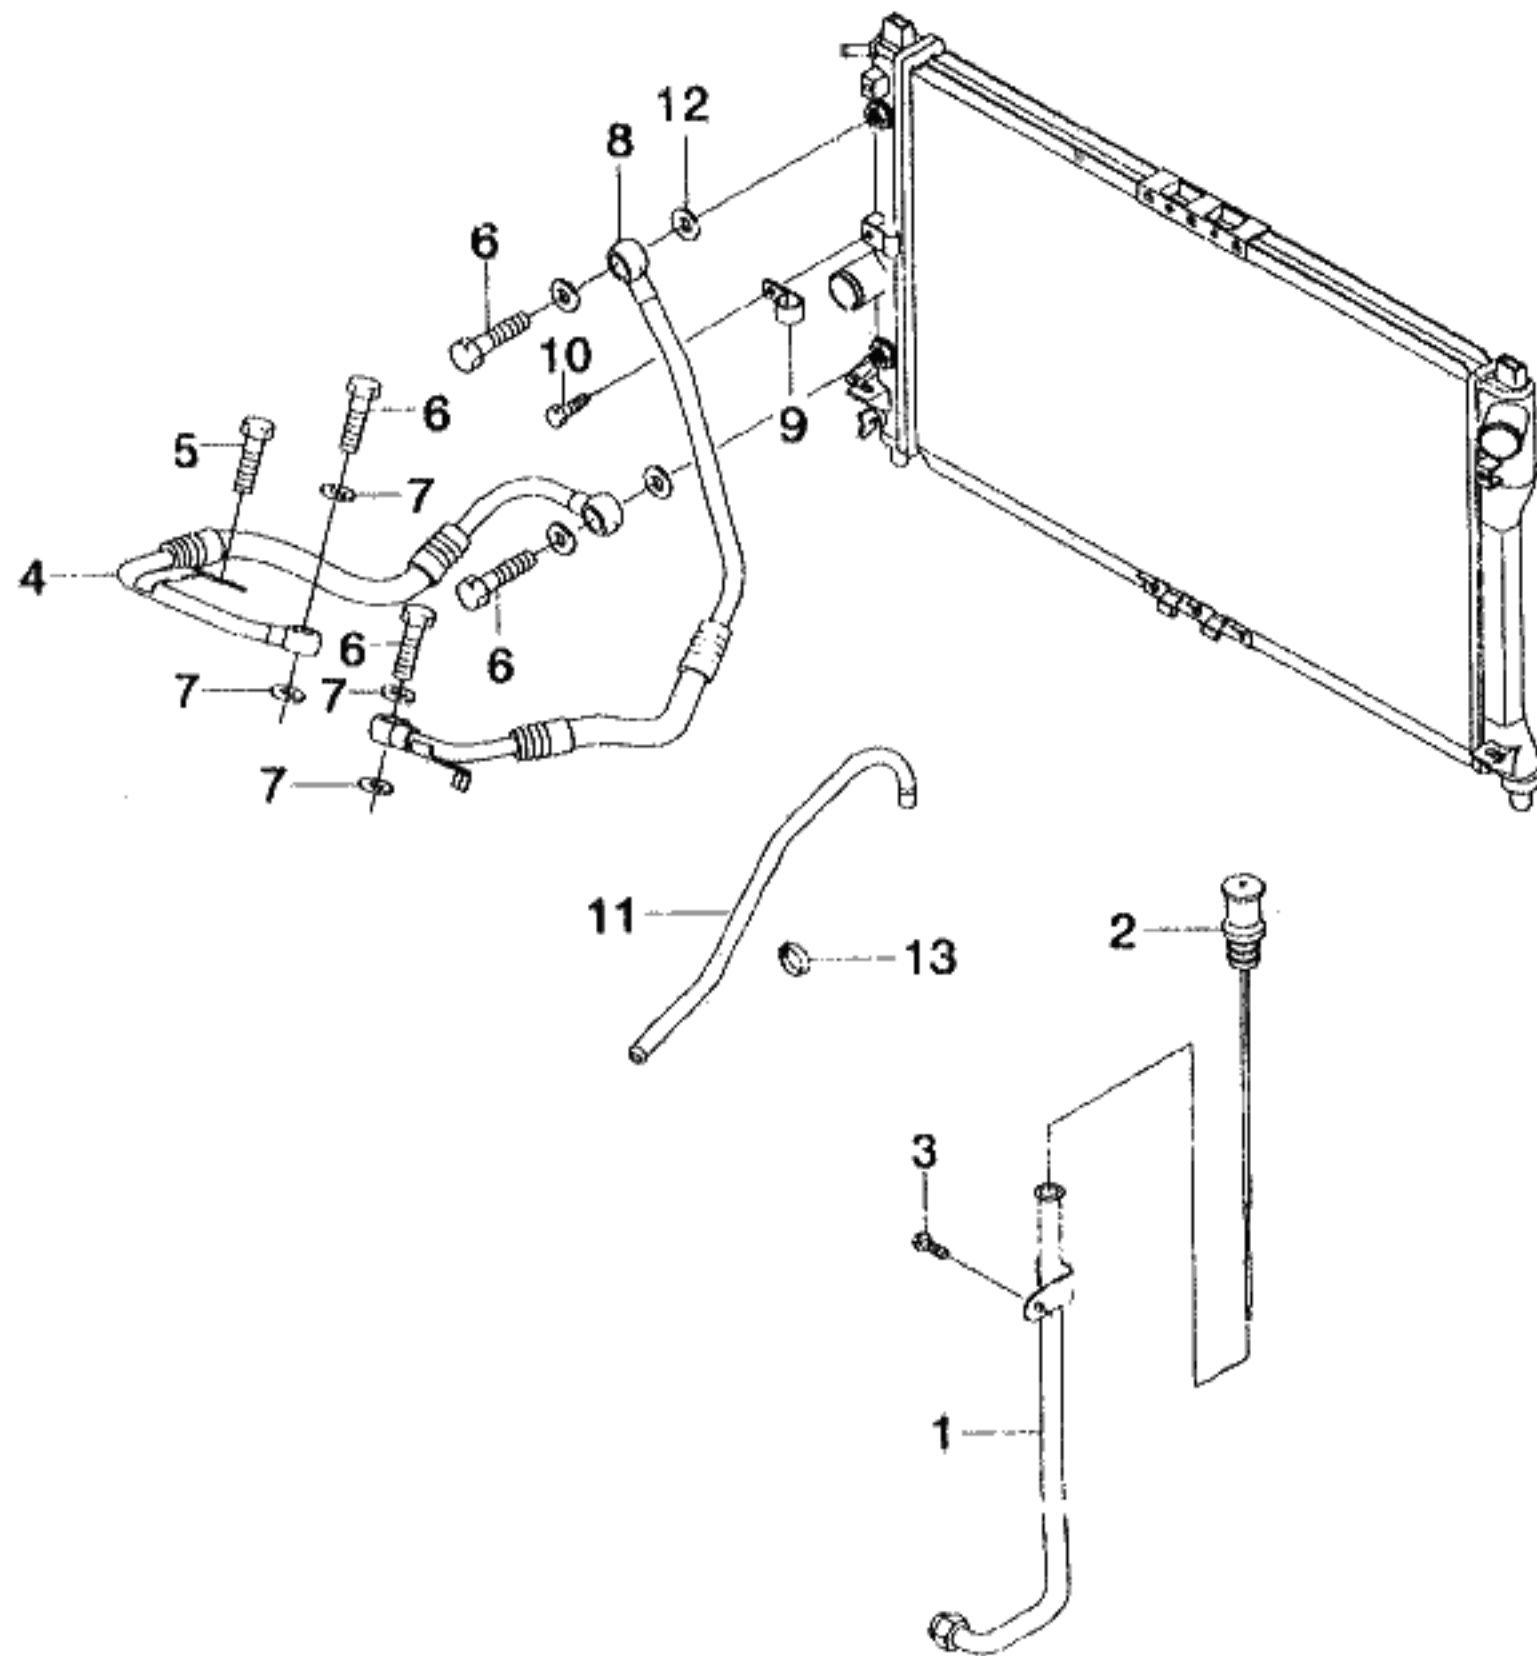


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	01114-06123	A	O	O			1					
	[11]				(E)HOSE-BREATHER (D)SCHLAUCH,BELÜFTUNG					(F)TUYAU-RENIFLARD (S)MANGUERA-RESPIRADOR		
	96240848	A	O	O			1					
	[12]				(E)WASHER-PLAIN (D)DICHTUNGSRING					(F)RONDELLE (S)ARANDELA		
	09160-14006	A	O	O			4					
	[13]				(E)CLIP (D)KLEMME					(F)ATTACHE (S)GRAPA		
	09408-00020	A	O	O			1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

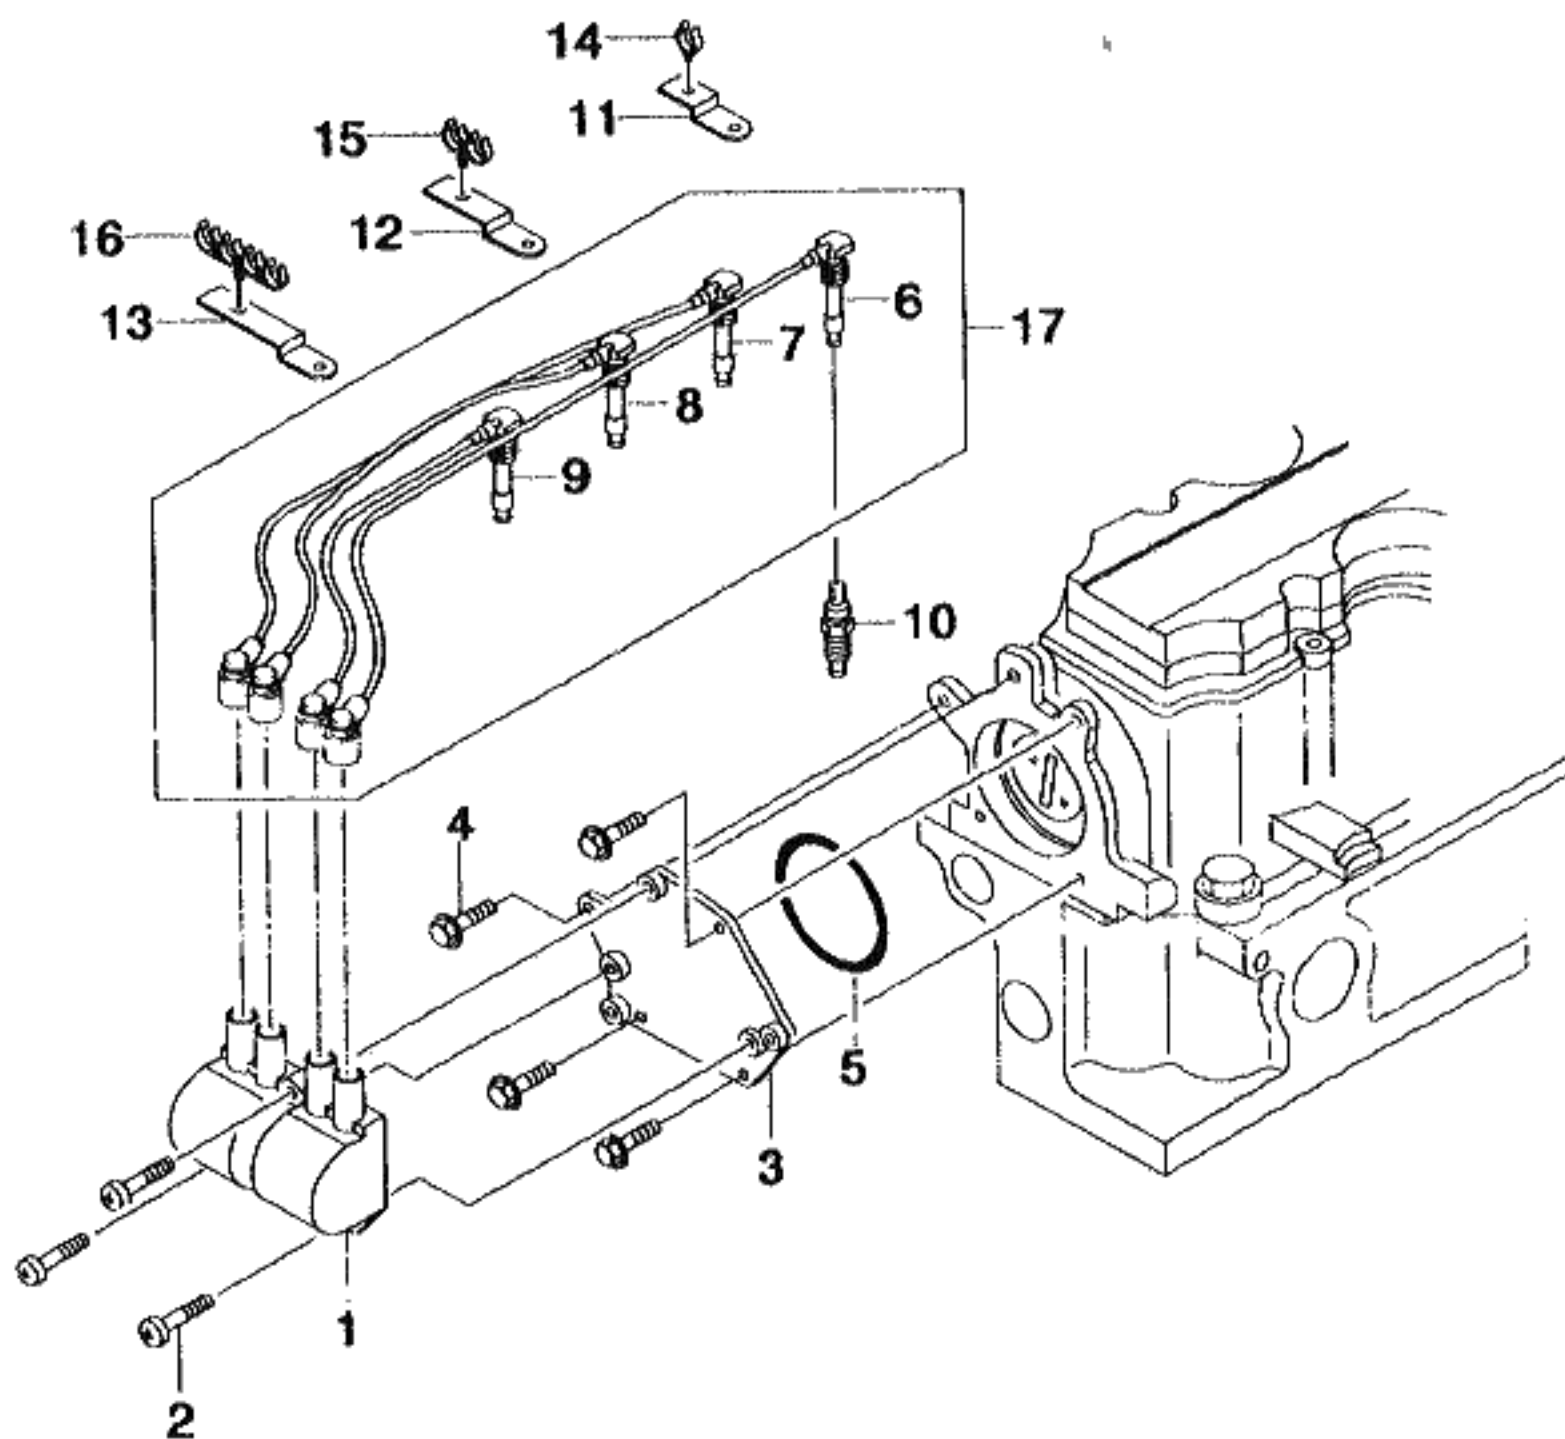

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 96350585	(E) COIL A-DIRECT IGNITION (D) WICKLUNG, ZÜNDUNG . S .			(F) BOBINE-ALLUMAGE (S) BOBINA-ARRANQUE 1						
	[02] 92063426	(E) SCREW-IGN COIL TO SUPT (D) SCHRAUBE . S .			(F) BOULON (S) PERNO 3						
	[03] 92062953	(E) SUPPORT-IGN COIL MTG (D) TRÄGER . S .			(F) SUPPORT (S) SOPORTE 1						
	[04] 11092011	(E) SCREW-IGN COIL SUPT MTG (D) SCHRAUBE, ZÜNDUNGSSCHALTE . S .			(F) VIS-COMMUTATEUR ALLUMAGE (S) TORNILLO 4						
	[05] 01972943	(E) RING-IGN COIL SUPT MTG (D) RING . S .			(F) ANNEAU (S) ANILLO 1						
	[06] 90461358	(E) WIRE-HIGH TENSION NO 1 (D) KLEMME . S .			(F) ATTACHE (S) SUJETADOR-ALAMBRE 1						
	[07] 92063383	(E) WIRE-HIGH TENSION NO 2 (D) KLEMME . S .			(F) ATTACHE (S) SUJETADOR-ALAMBRE 1						
	[08] 90461360	(E) WIRE-HIGH TENSION NO 3 (D) KLEMME . S .			(F) ATTACHE (S) SUJETADOR-ALAMBRE 1						
	[09] 90461360	(E) WIRE-HIGH TENSION NO 4 (D) KLEMME . S .			(F) ATTACHE (S) SUJETADOR-ALAMBRE 1						
	[10] 25108076	(E) PLUG-SPARK (D) ZÜNDKERZE . S .			(F) BOUGIE (S) TAPON-BUJIA 4						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

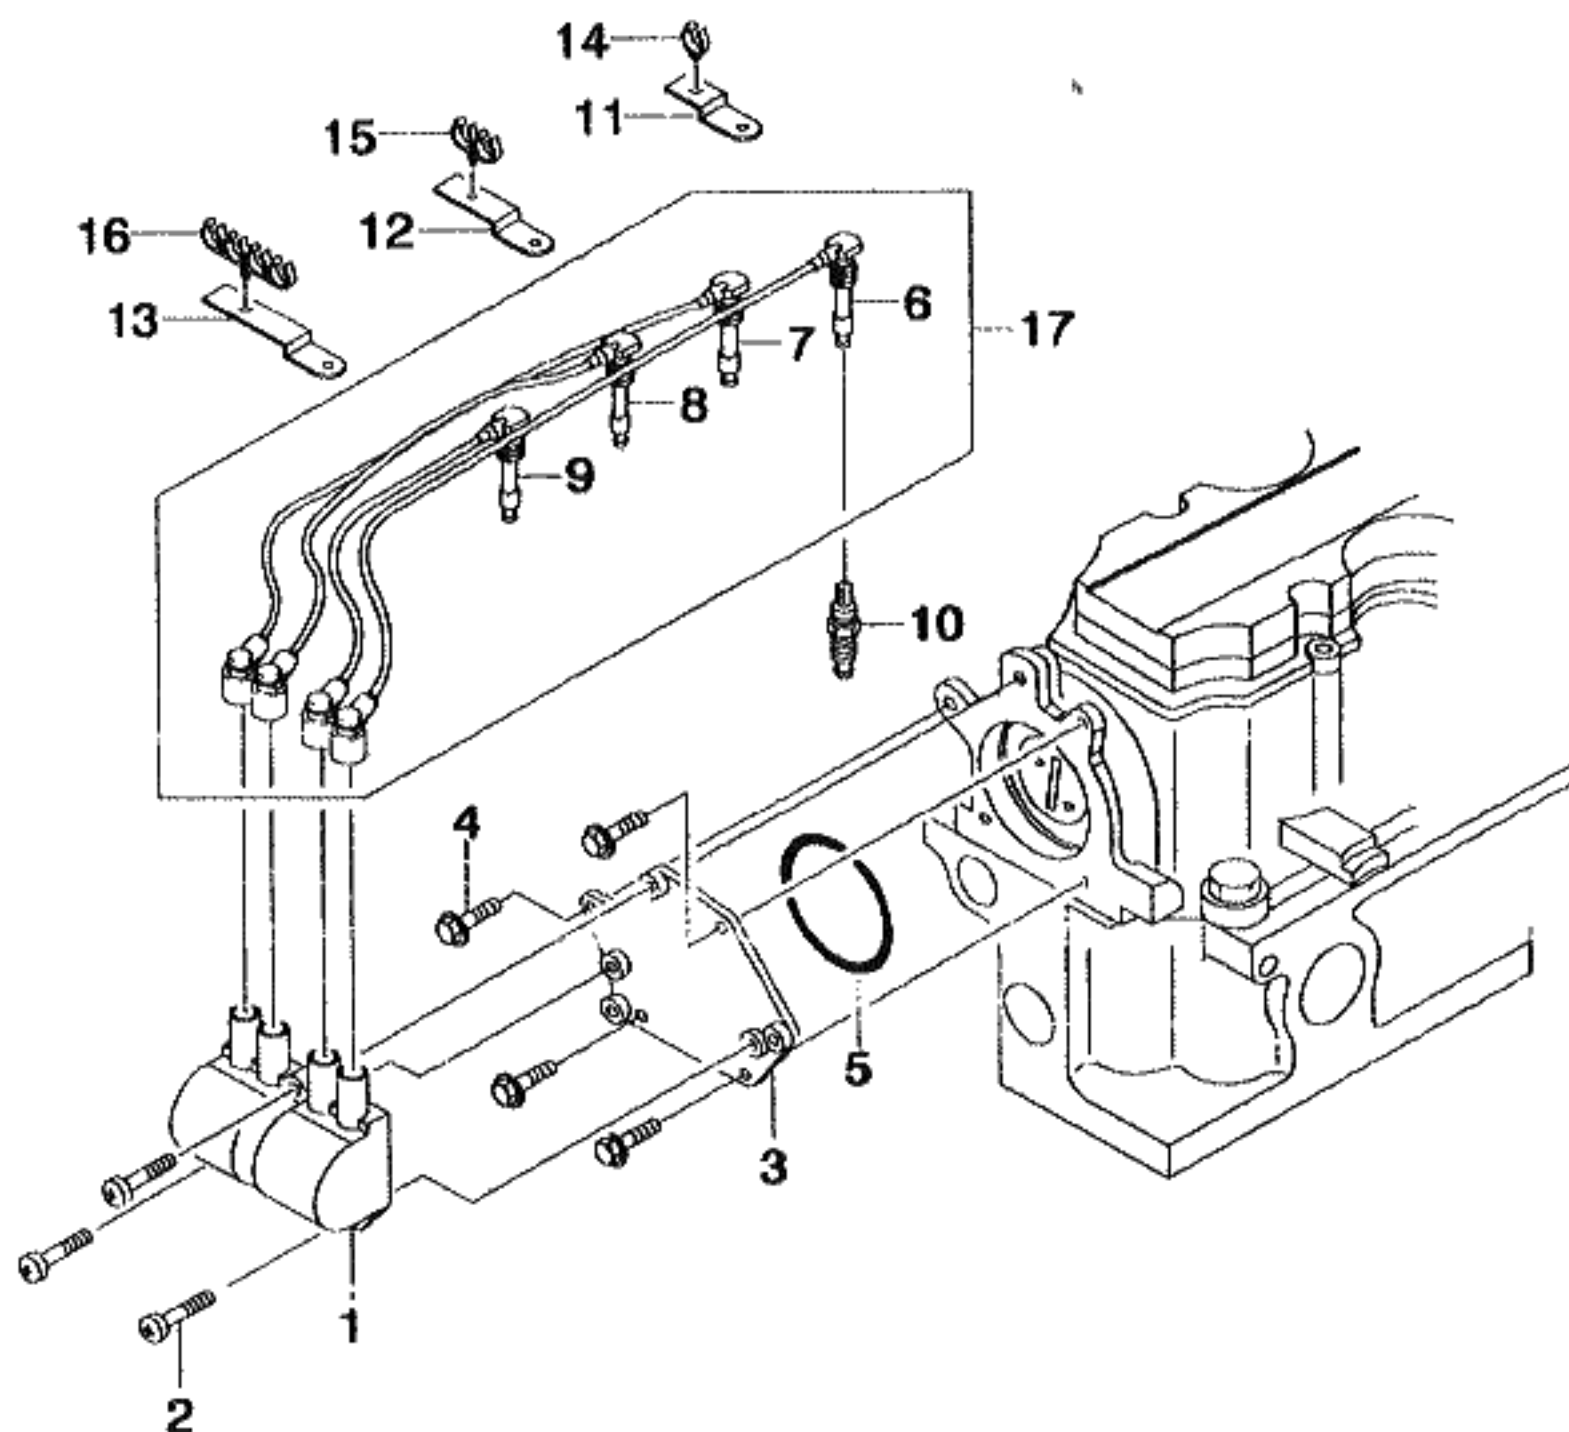


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 90460630	(E)BRACKET-WIRE,1 (D)TRÄGER	S			(F)SUPPORT (S)SOPORTE	1				
	[12] 90460631	(E)BRACKET-WIRE,2 (D)TRÄGER	S			(F)SUPPORT (S)SOPORTE	1				
	[13] 90493625	(E)BRACKET-WIRE,3 (D)TRÄGER	S			(F)SUPPORT (S)SOPORTE	1				
	[14] 90320343	(E)CLIP-WIRE 1WAY (D)KLEMME	S			(F)ATTACHE (S)GRAPA	1				
	[15] 90320344	(E)CLIP-WIRE 2WAY (D)KLEMME	S			(F)ATTACHE (S)GRAPA	1				
	[16] 90341384	(E)CLIP-WIRE 4WAY (D)KLEMME	S			(F)ATTACHE (S)GRAPA	1				
	[17] 96207001 S1712001	(E)WIRE SET-HIGH TENSION (D)VERDRAHTUNG,HOCHSPANNUN	S			(F)TROUSSE CABLES (S)JUEGO DE ALAMBRE	1			NOT APPLIED	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

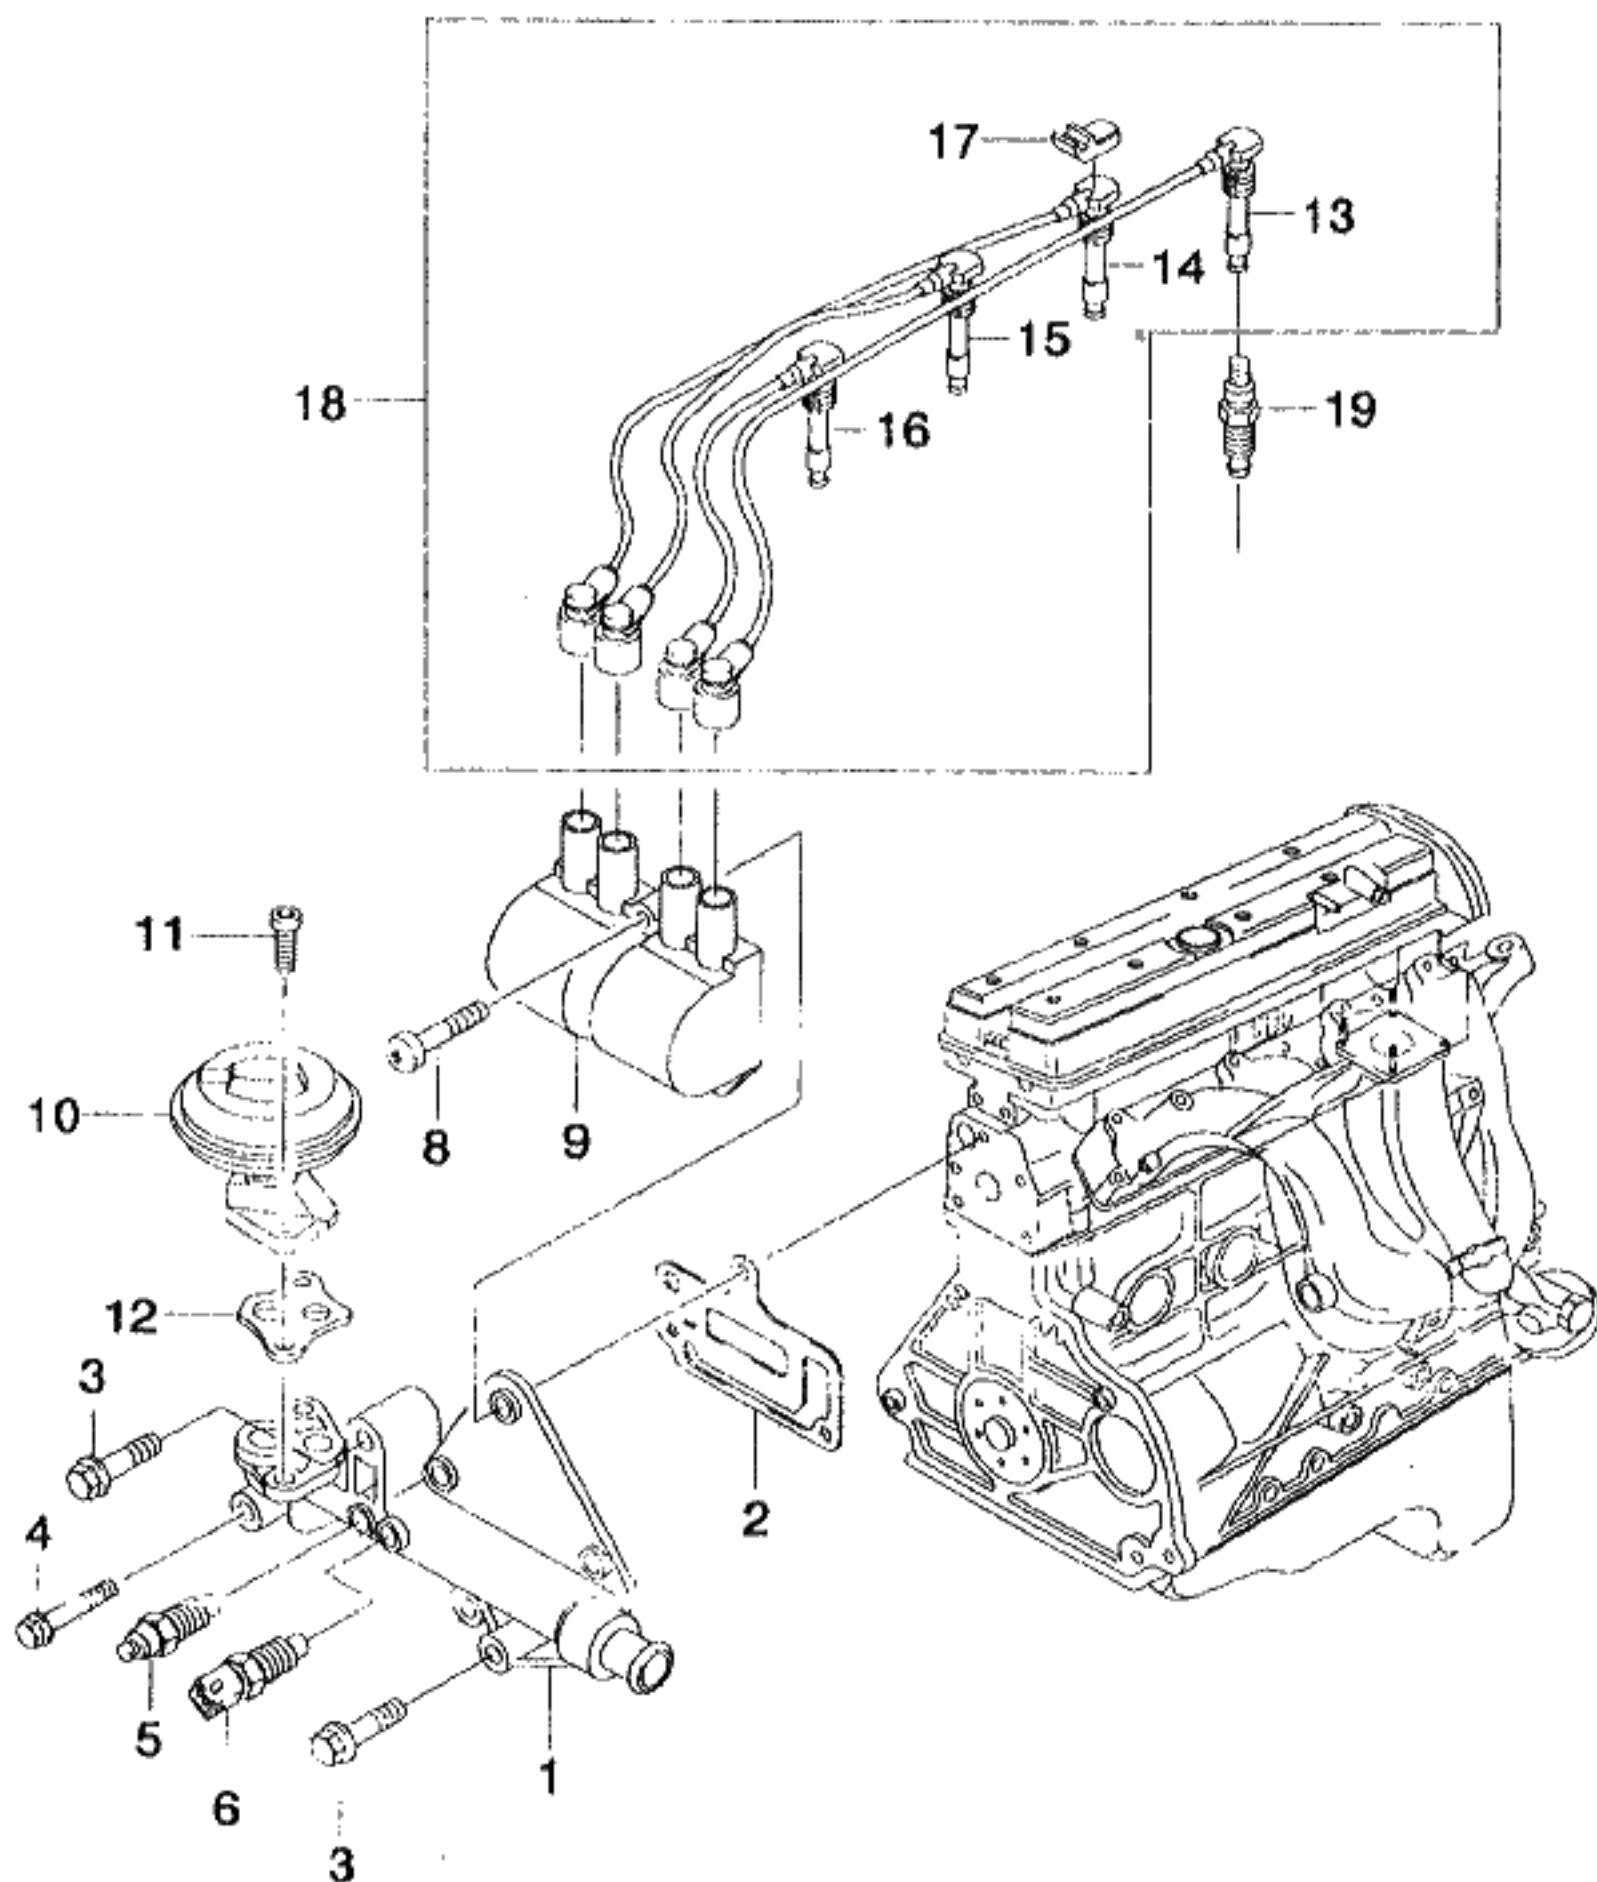


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)ADAPTER-EGR VALVE (D)ADAPTER				(F)ADAPTATEUR (S)ADAPTADOR					
	92063144	. O S				1					
	[02]	(E)GASKET-EGR & IGN ADAPTER (D)DICHTUNG				(F)JOINT (S)JUNTA					
	92063245	. O S				1					
	[03]	(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO					
	11094031	. O S				2					
	[04]	(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO					
	11093801	. O S				1					
	[05]	(E)SENSOR-TEMPERATURE GAUGE (D)SENSOR,TEMPERATUR				(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA					
	96177604	. O S				1					
	[06]	(E)SENSOR-WATER TEMP (D)SENSOR,TEMPERATUR				(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA					
	12191170	. O S				1					
	[08]	(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO					
	11086661	. O S				3					
	[09]	(E)COIL A-DIRECT IGNITION (D)WICKLUNG,ZÜNDUNG				(F)BOBINE-ALLUMAGE (S)BOBINA-ARRANQUE					
	96350585	. O S				1					
	[10]	(E)VALVE A-EGR (D)VENTIL				(F)SOUPAPE (S)VALVULA					
	17092164	. O S				1					
	[11]	(E)SCREW (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	11052951	. O S				1					


LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

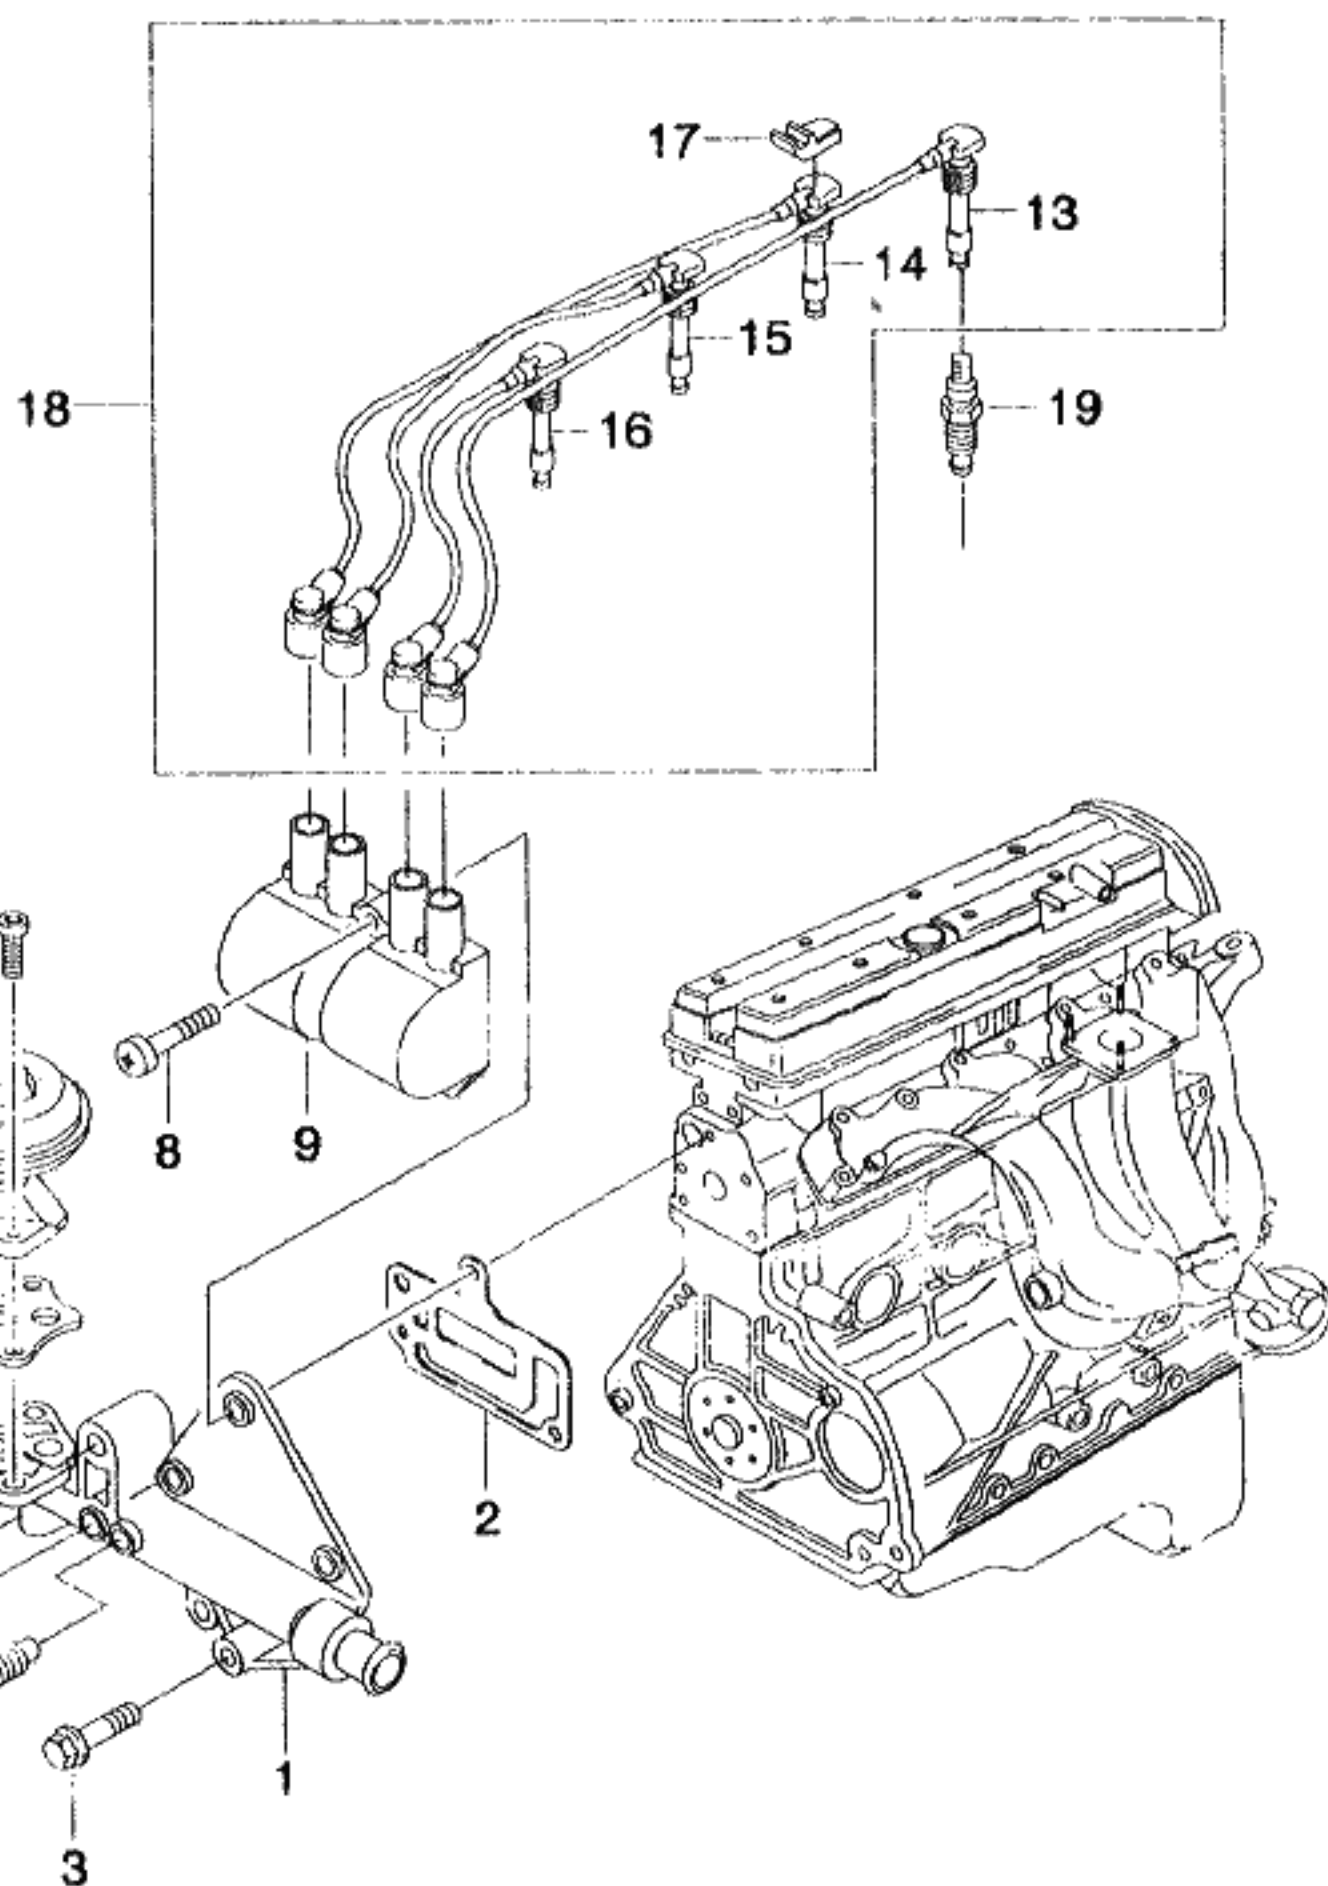

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[12] 92061674	(E)SEAL-EGR,RETURN FLOW (D)DICHTUNG				(F)JOINT (S)SELLO	1				
	[13] 92062321	(E)WIRE-HIGH TENSION NO 1 (D)VERDRAHTUNG				(F)CABLES (S)ALAMBRE	1				
	[14] 90450814	(E)WIRE-HIGH TENSION NO 2 (D)VERDRAHTUNG				(F)CABLES (S)ALAMBRE	1				
	[15] 90449692	(E)WIRE-HIGH TENSION NO 3 (D)VERDRAHTUNG				(F)CABLES (S)ALAMBRE	1				
	[16] 90449693	(E)WIRE-HIGH TENSION NO 4 (D)VERDRAHTUNG				(F)CABLES (S)ALAMBRE	1				
	[17] 90378423	(E)PULLER-WIRE (D)KLAMMER-VERDRAHTUNG				(F)PINCE-CABLES (S)ABRAZADERA-ALAMBRE	1				
	[18] 96190263	(E)WIRE SET-HIGH TENSION (D)VERDRAHTUNG,HOCHSPANNUN				(F)TROUSSE CABLES (S)JUEGO DE ALAMBRE	1				
	[19] 0242229606	(E)PLUG-SPARK (D)ZÜNDKERZE				(F)BOUGIE (S)TAPON-BUJIA	4				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

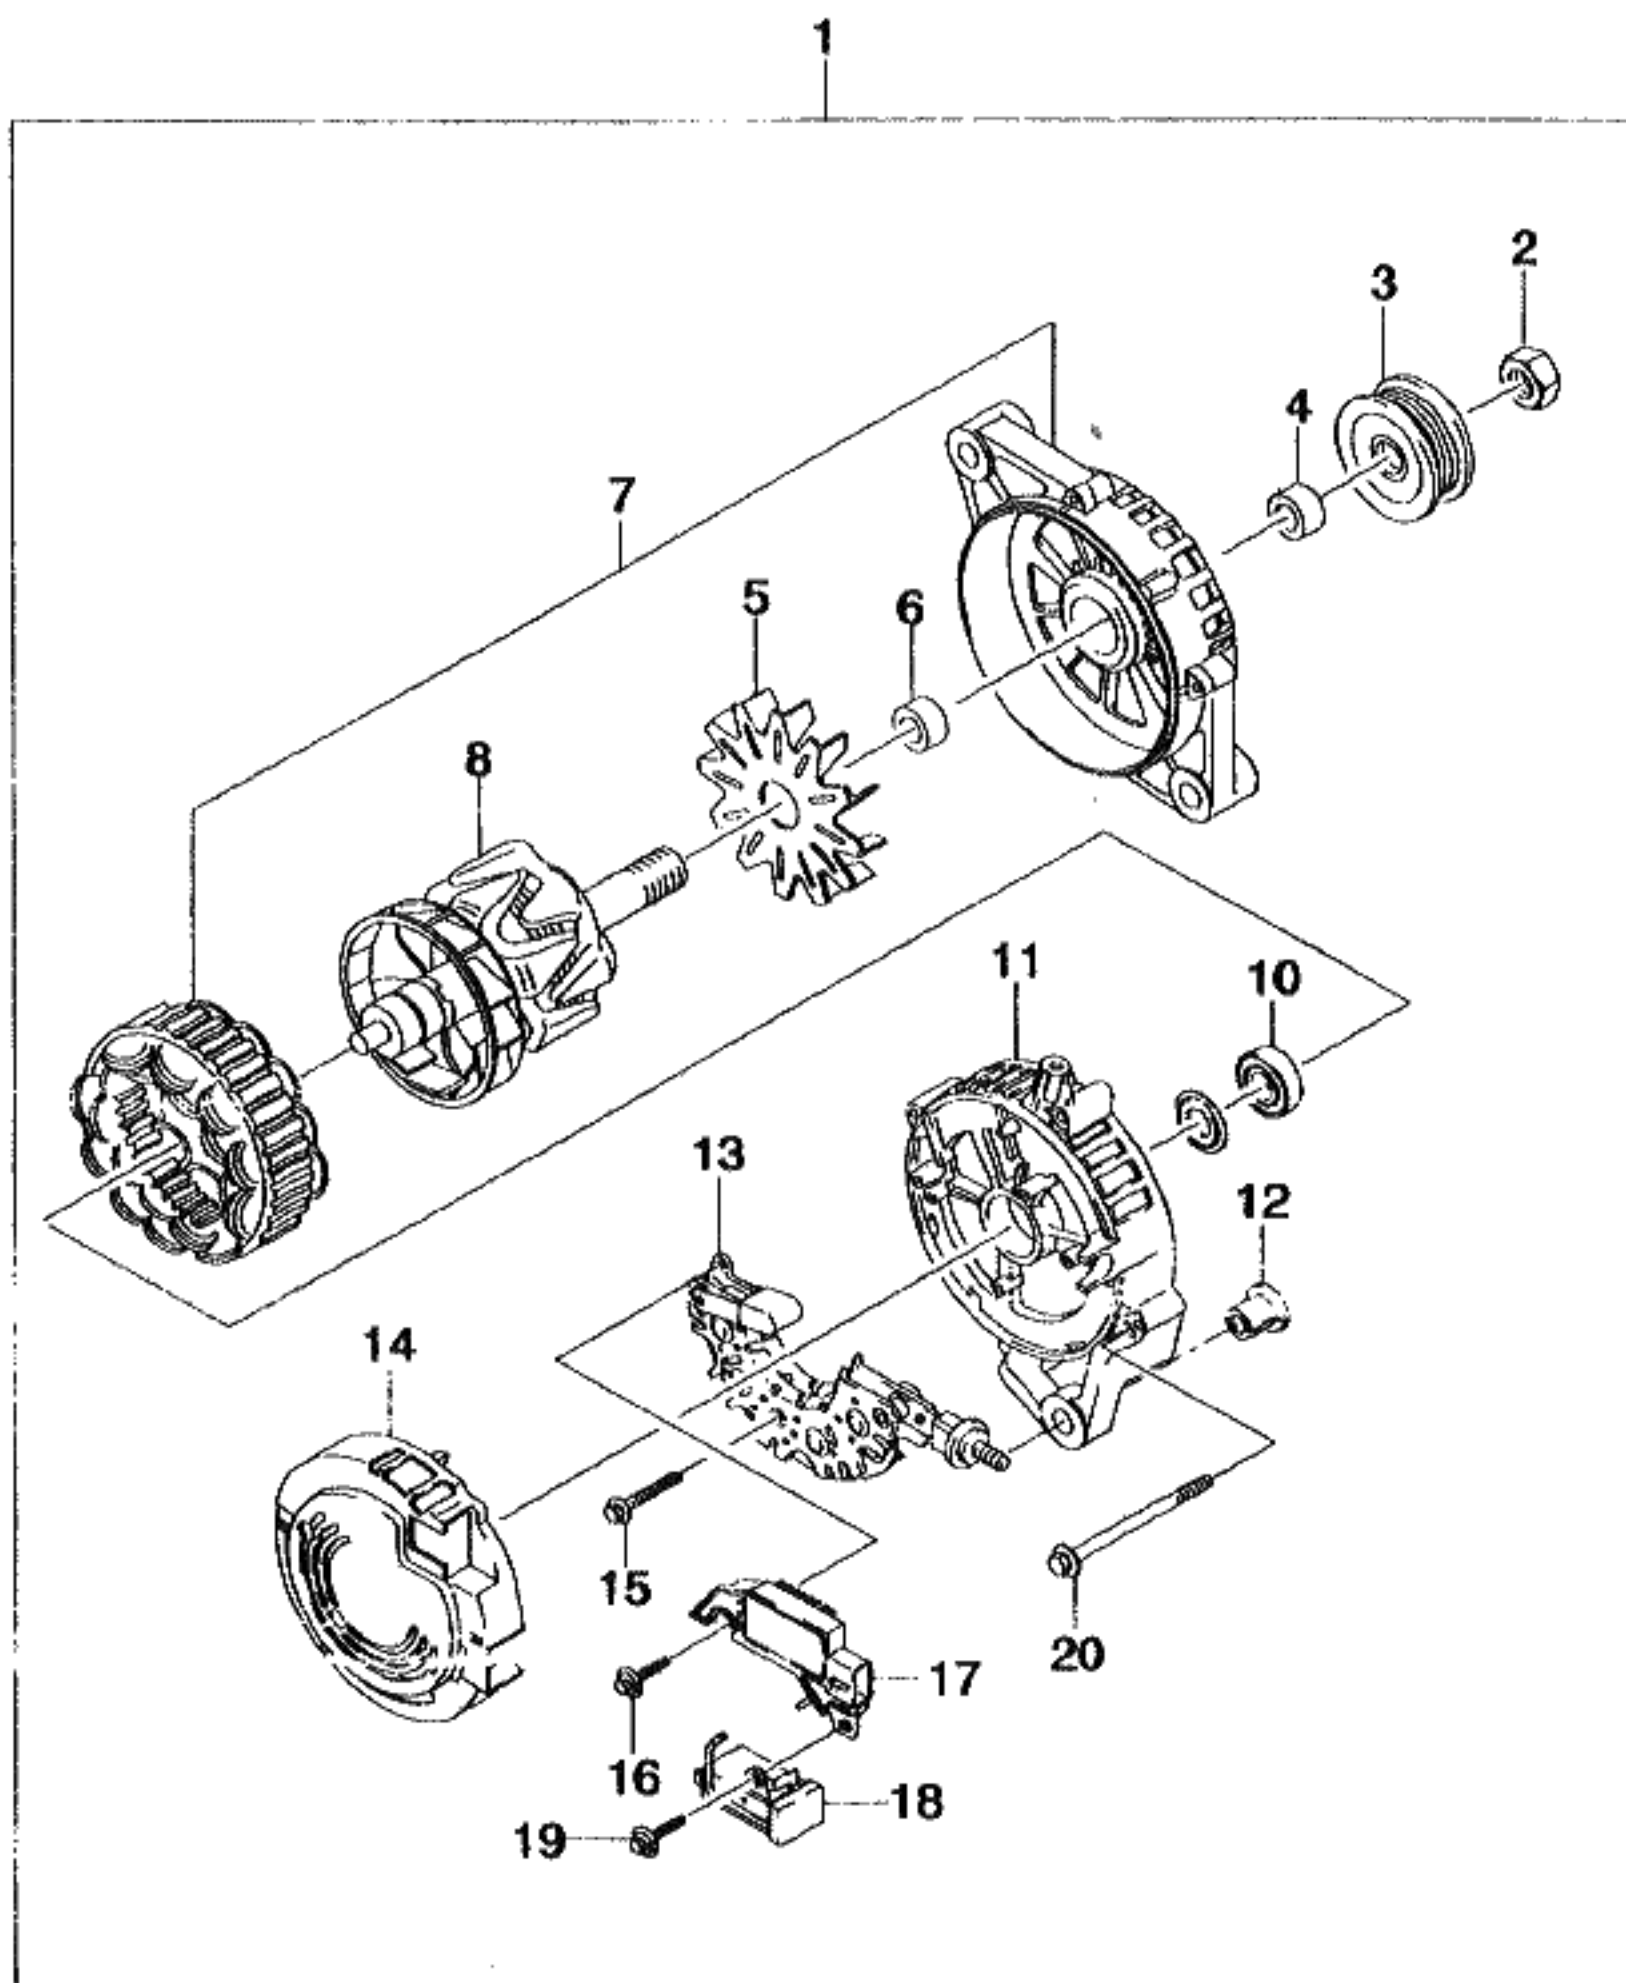

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / Q T Y R Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL								
			S X	C D X							
[01] 96206871	(E)ALTERNATOR A (D)WECHSELSTROMGENERATOR . S S				(F)ALTERNATEUR (S)ALTERNADOR 1			12V,95A	VA		
[02] 01911324	(E)NUT (D)MUTTER . S S				(F)ECROU (S)TUERCA 1						
[03] 210745	(E)PULLEY (D)ROLLE . S S				(F)POULIE (S)POLEA 1						
[04] 210937	(E)COLLAR (D)KRAGEN . S S				(F)COLLIER (S)CASQUILLO 1			LARGE			
[05] 211103	(E)FAN (D)BLÄSER . S S				(F)VENTILATEUR (S)VENTILADOR 1						
[06] 210768	(E)COLLAR (D)KRAGEN . S S				(F)COLLIER (S)CASQUILLO 1			SMALL			
[07] 211146	(E)FRAME & STATOR (D)RAHMEN . S S				(F)CADRE (S)ARMADURA 1						
[08] 210755	(E)ROTOR (D)DREHTEIL . S S				(F)ROTOR (S)ROTOR 1						
[10] 210938	(E)BEARING-BALL (D)KUGELLAGER . S S				(F)ROULEMENT-BILLE (S)COJINETE DE BOLAS 1						
[11] 210993	(E)FRAME-SLIP RING END (D)RAHMEN,SCHLEIFRAD-ENDE . S S				(F)CADRE (S)ARMADURA 1						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

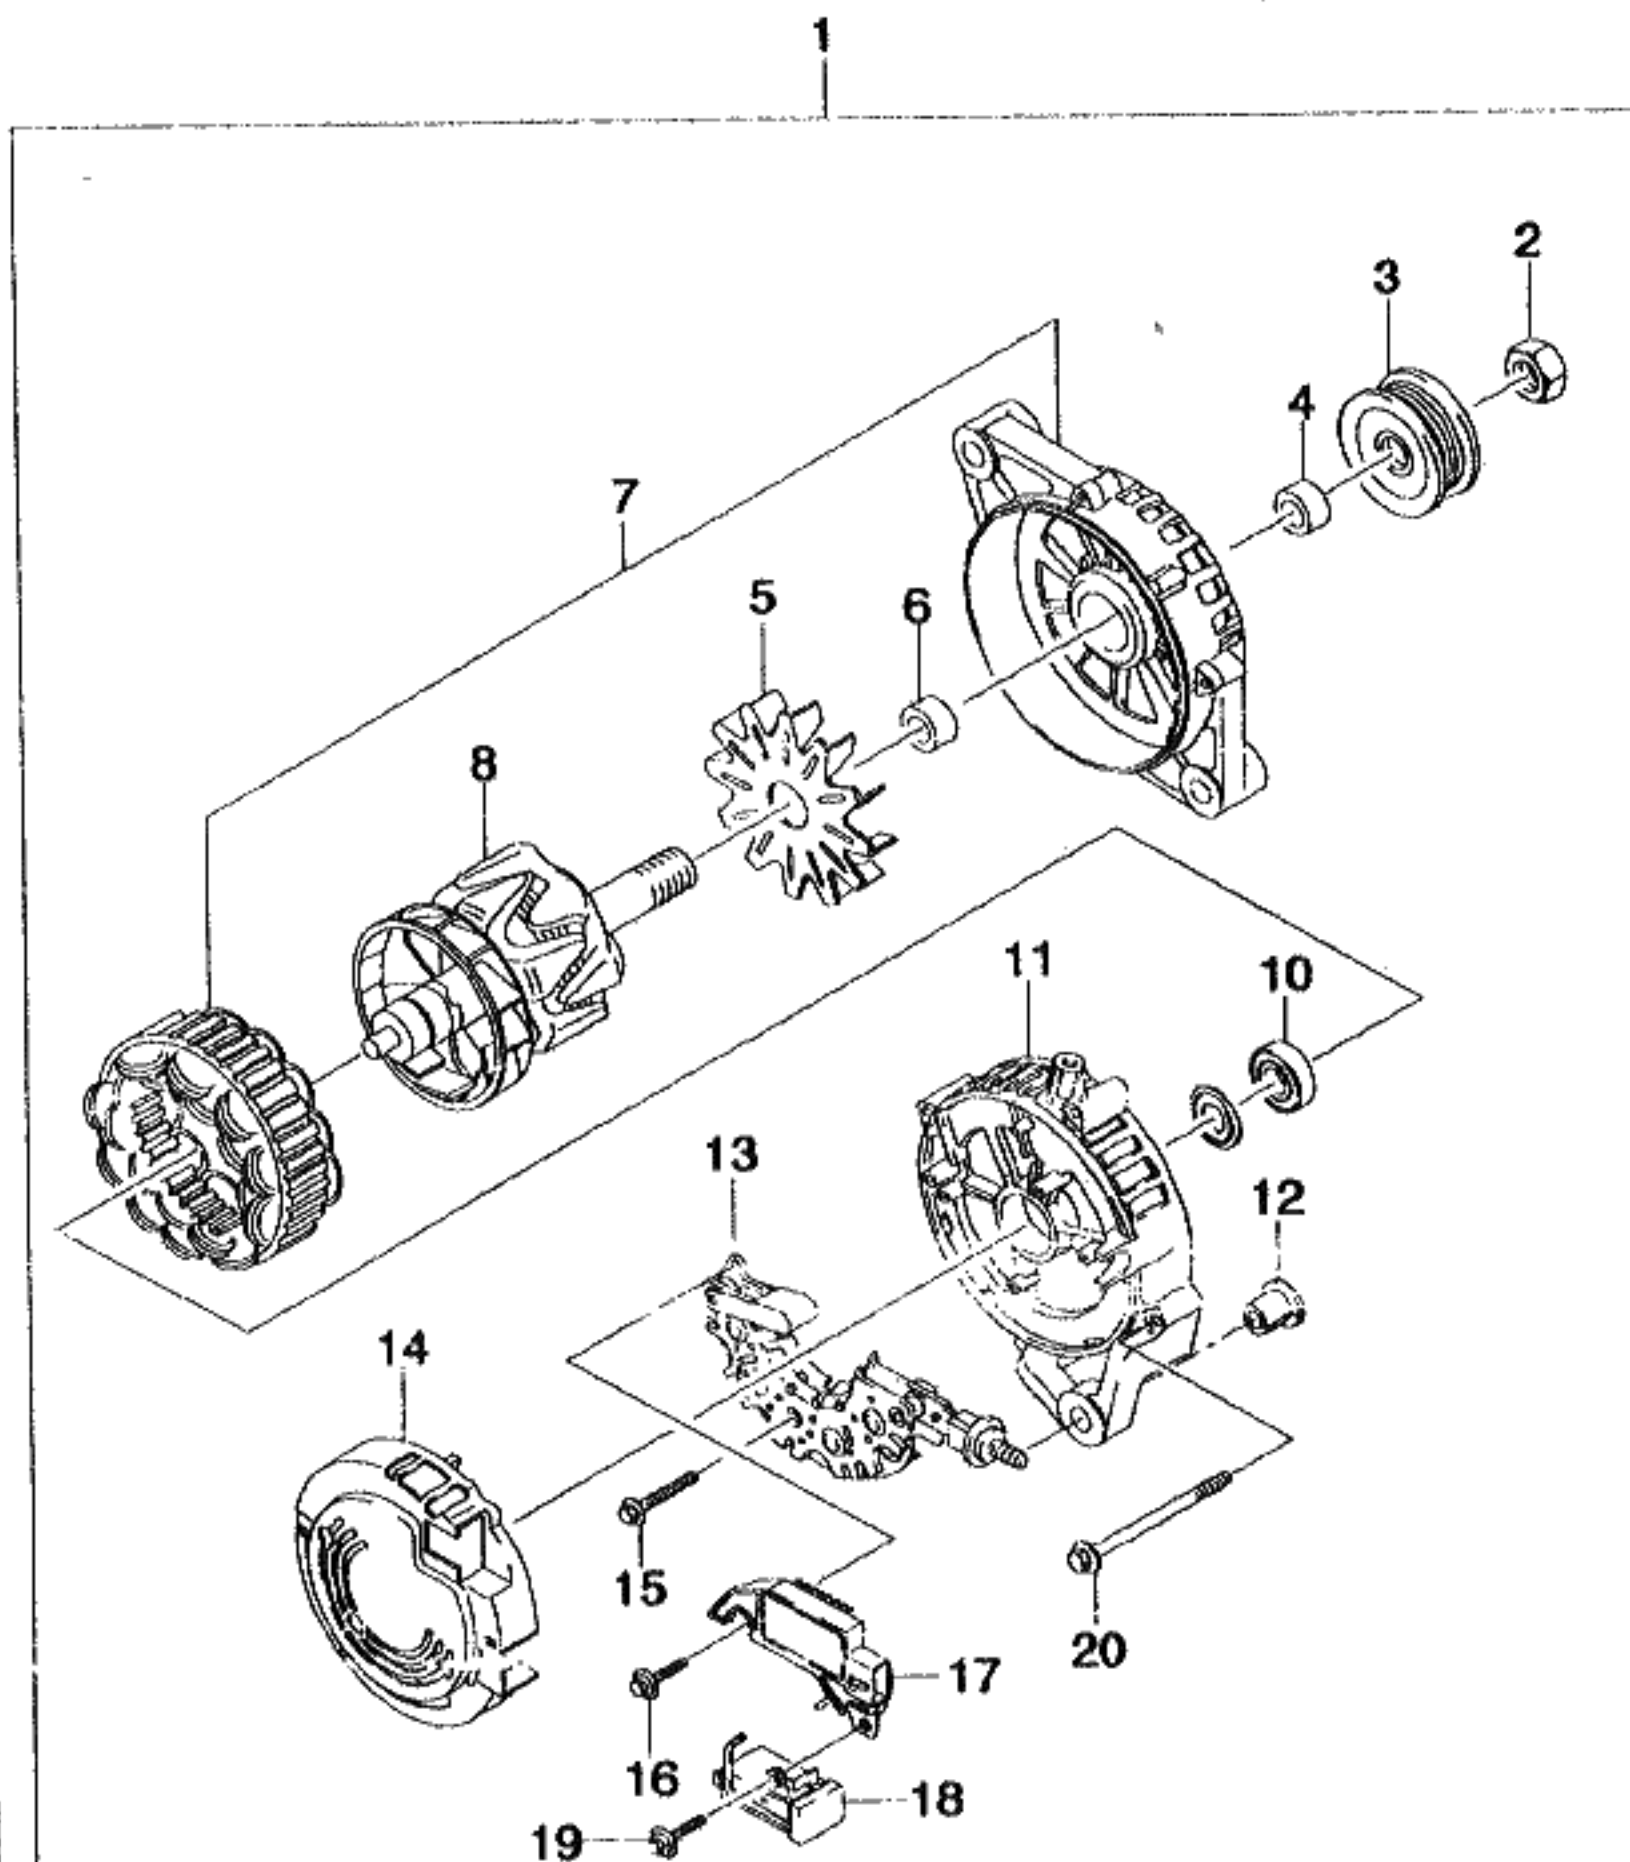

KEY NO.			PART NAME							
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL							
			S X				C D X			
	[12]	(E) BUSH (D) LAGERFUTTER			(F) MANCHON (S) BUJE DE BOQUILLA					
	210769	. S S			1					
	[13]	(E) RECTIFIER (D) RICHTER			(F) RECTIFICATEUR (S) RECTIFICADOR					
	268500	. S S			1					
	[14]	(E) COVER (D) DECKEL			(F) CARTER (S) CUBIERTA					
	210990	. S S			1					
	[15]	(E) SCREW (D) SCHRAUBE			(F) VIS (S) TORNILLO					
	210788	. S S			3					
	[16]	(E) SCREW (D) SCHRAUBE			(F) VIS (S) TORNILLO					
	01989650	. S S			1					
	[17]	(E) REGULATOR (D) REGULADOR			(F) REGULATEUR (S) REGULADOR					
	271520	. S S			1					
	[18]	(E) BRUSH (D) BÜRSTE			(F) BALAI (S) ESCOBILLA					
	210748	. S S			1					
	[19]	(E) SCREW (D) SCHRAUBE			(F) VIS (S) TORNILLO					
	01989681	. S S			1					
	[20]	(E) BOLT (D) SCHRAUBE			(F) BOULON (S) PERNO					
	10473999	. S S			4					


LEVEL

S X = 2.0 SOHC


CDX = 2.0 DOHC

T/A (TRANSAXLE)


 M = MANUAL T/A
 A = AUTOMATIC T/A
 . = COMMON

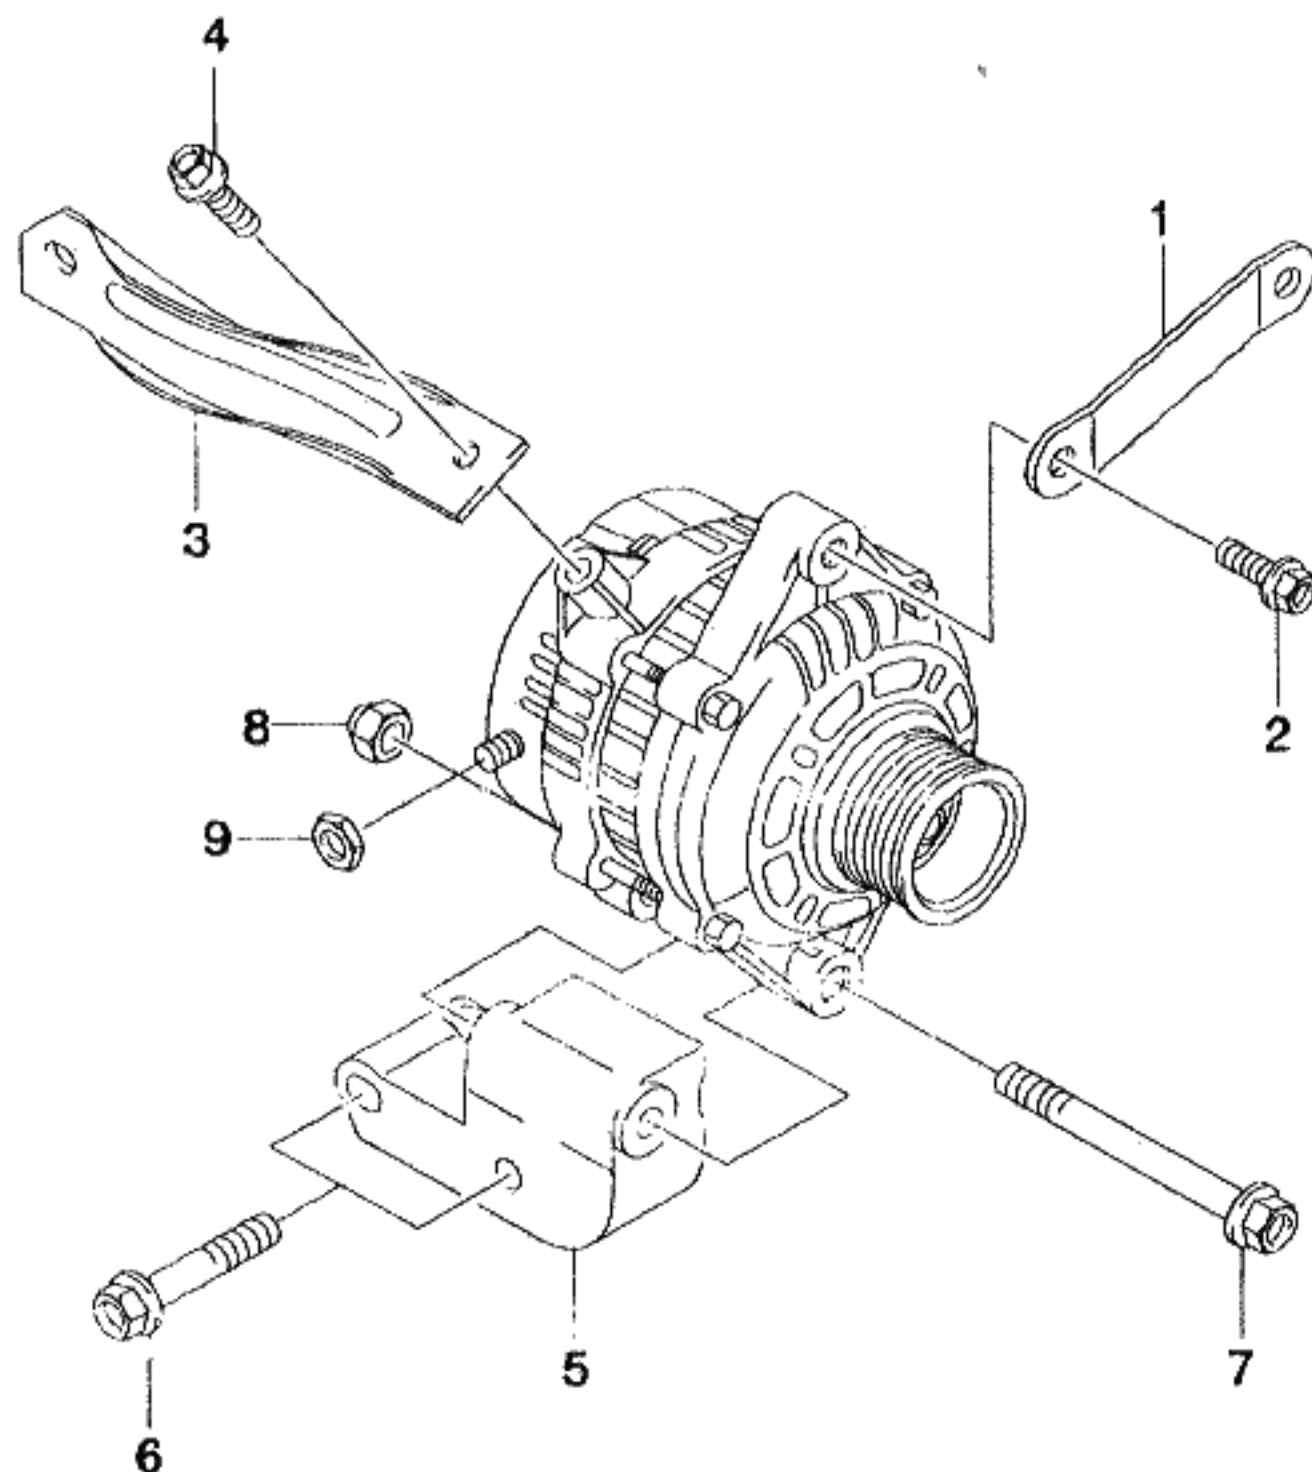


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96350296	(E)SHACKLE-ALTERNATOR (D)SCHIENE . S .				(F)SUPPORT-ALTERNATEUR (S)REFUERZO-ALTERNADOR 1					
	[02] 01510-08255	(E)BOLT-FLANGE (D)SCHRAUBE . S .				(F)BOULON (S)PERNO 2					
	[03] 96350295	(E)SUPPORT-ALTERNATOR (D)TRÄGER . S .				(F)SUPPORT-ALTERNATEUR (S)SOPORTE-ALTERNADOR 1					
	[04] 09103-08006	(E)BOLT-FLANGE (D)SCHRAUBE . S .				(F)BOULON (S)PERNO 1					
	[05] 96183219	(E)BRACKET-ALTERNATOR (D)TRÄGER . S S				(F)SUPPORT-ALTERNATEUR (S)SOPORTE-ALTERNADOR 1					
	[06] 09103-10023	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[07] 09103-10018	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 1					
	[08] 08316-18105	(E)NUT-FLANGE (D)MUTTER . S S				(F)ECROU (S)TUERCA 1					
	[09] 08316-28083	(E)NUT-FLANGE (D)MUTTER . S S				(F)ECROU (S)TUERCA 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

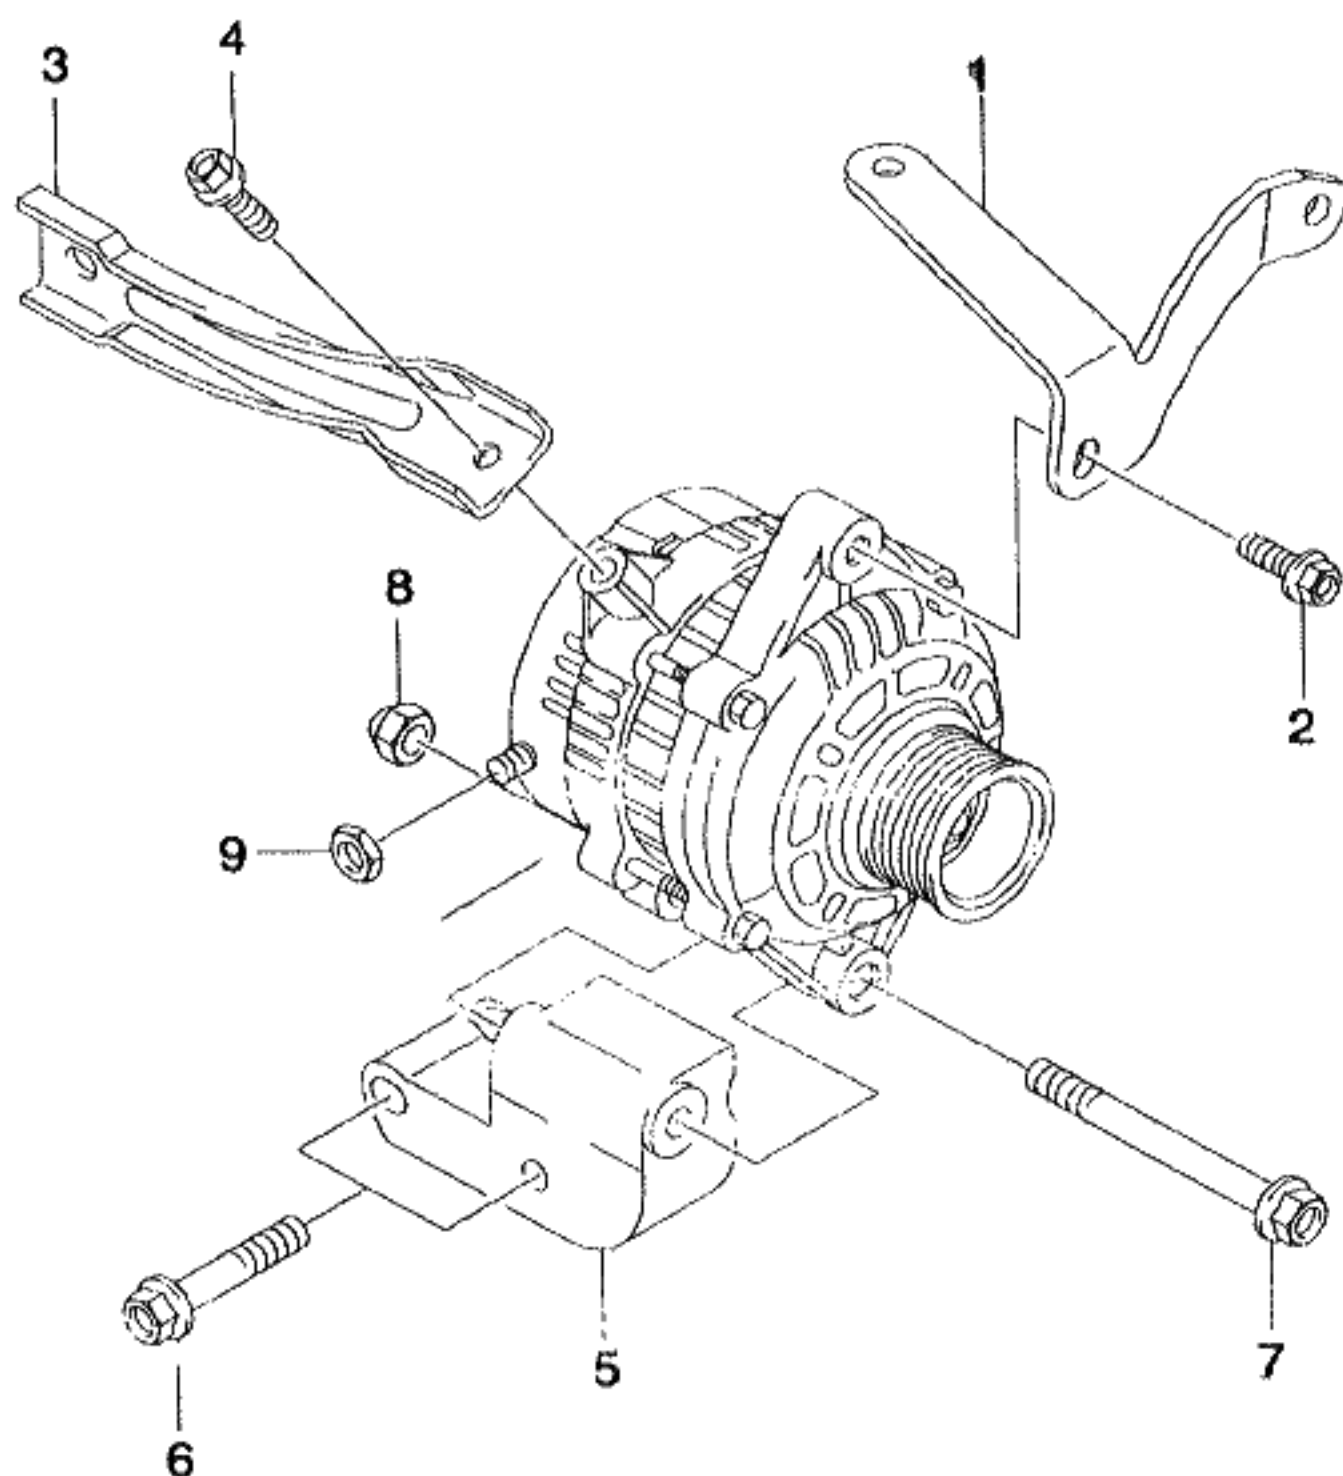

KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X								C D X
	[01] 96183948	(E)SHACKLE-ALTERNATOR (D)SCHIENE			(F)SUPPORT-ALTERNATEUR (S)REFUERZO-ALTERNADOR						
	[02] 09103-08006	(E)BOLT-FLANGE (D)SCHRAUBE			(F)BOULON (S)PERNO						
	[03] 96183950	(E)SUPPORT-ALTERNATOR (D)TRÄGER			(F)SUPPORT-ALTERNATEUR (S)SOPORTE-ALTERNADOR						
	[04] 09103-08006	(E)BOLT-FLANGE (D)SCHRAUBE			(F)BOULON (S)PERNO						
	[05] 96183219	(E)BRACKET-ALTERNATOR (D)TRÄGER			(F)SUPPORT-ALTERNATEUR (S)SOPORTE-ALTERNADOR						
	[06] 09103-10023	(E)BOLT-FLANGE (D)SCHRAUBE			(F)BOULON (S)PERNO						
	[07] 09103-10018	(E)BOLT-FLANGE (D)SCHRAUBE			(F)BOULON (S)PERNO						
	[08] 08316-18105	(E)NUT-FLANGE (D)MUTTER			(F)ECROU (S)TUERCA						
	[09] 08316-28083	(E)NUT-FLANGE (D)MUTTER			(F)ECROU (S)TUERCA						
LEVEL		T/A(TRANSAXLE)									
S X = 2.0 SOHC CDX = 2.0 DOHC		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON									

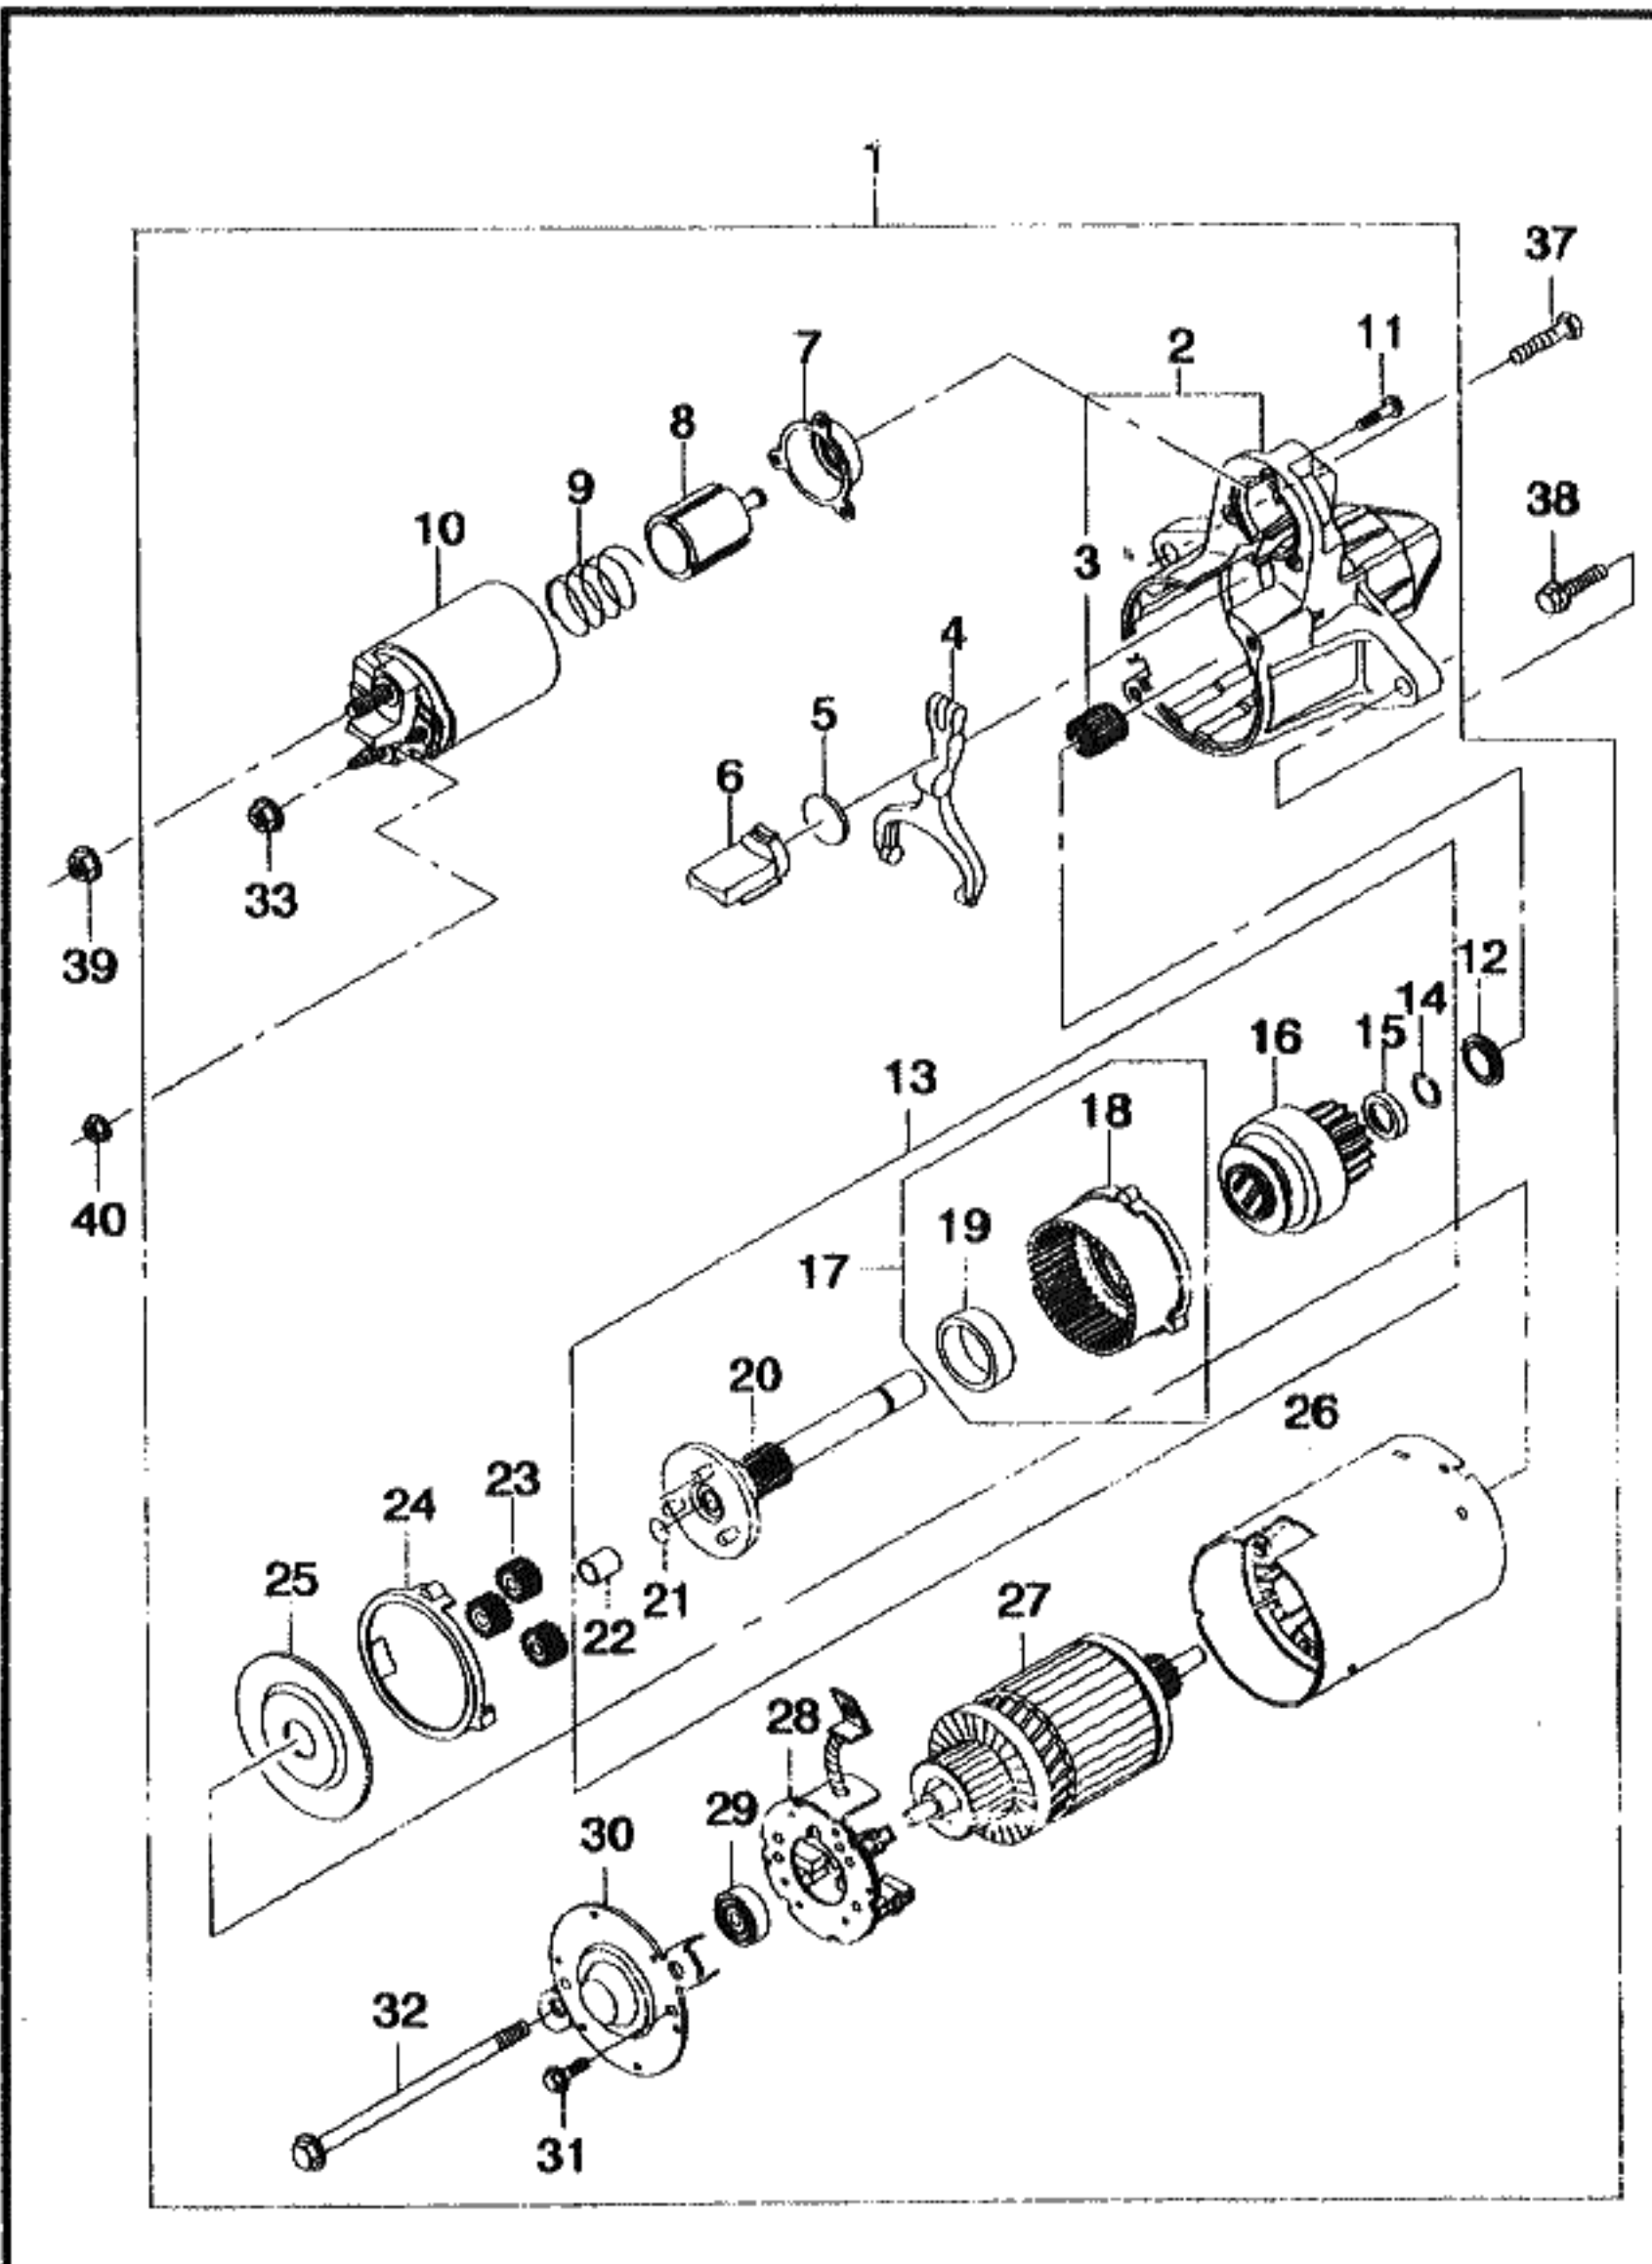


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 96208785	(E)MOTOR A-STARTER (D)ANLASSER . S S				(F)DEMARREUR (S)ARRANQUE 1			1.4KW	SM	
	[02] 111434	(E)HOUSING-STARTER (D)GEHÄUSE,ANLASSER . S S				(F)LOGEMENT-DEMARREUR (S)CARCASA-ARRANQUE 1					
	[03] 110526	(E)BUSH (D)LAGERFUTTER . S S				(F)MANCHON (S)BUJE DE BOQUILLA 1					
	[04] 10476003	(E)LEVER (D)HEBEL . S S				(F)LEVIER (S)PALANCA 1					
	[05] 10475061	(E)PLATE (D)PLATTE . S S				(F)PLAQUE (S)PLACA 1					
	[06] 111392	(E)PLUG (D)STÖPSEL . S S				(F)BOUCHON (S)TAPON 1					
	[07] 110645	(E)GASKET (D)DICHTUNG . S S				(F)JOINT (S)JUNTA 1					
	[08] 110974	(E)PLUNGER (D)TAUCHER . S S				(F)PISTON PLONGEUR (S)EMBOLO 1					
	[09] 110976	(E)SPRING (D)FEDERUNG . S S				(F)RESSORT (S)RESORTE 1					
	[10] 110977	(E)SOLENOID (D)SOLENOID . S S				(F)SOLENOIDE (S)SELENOIDE 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

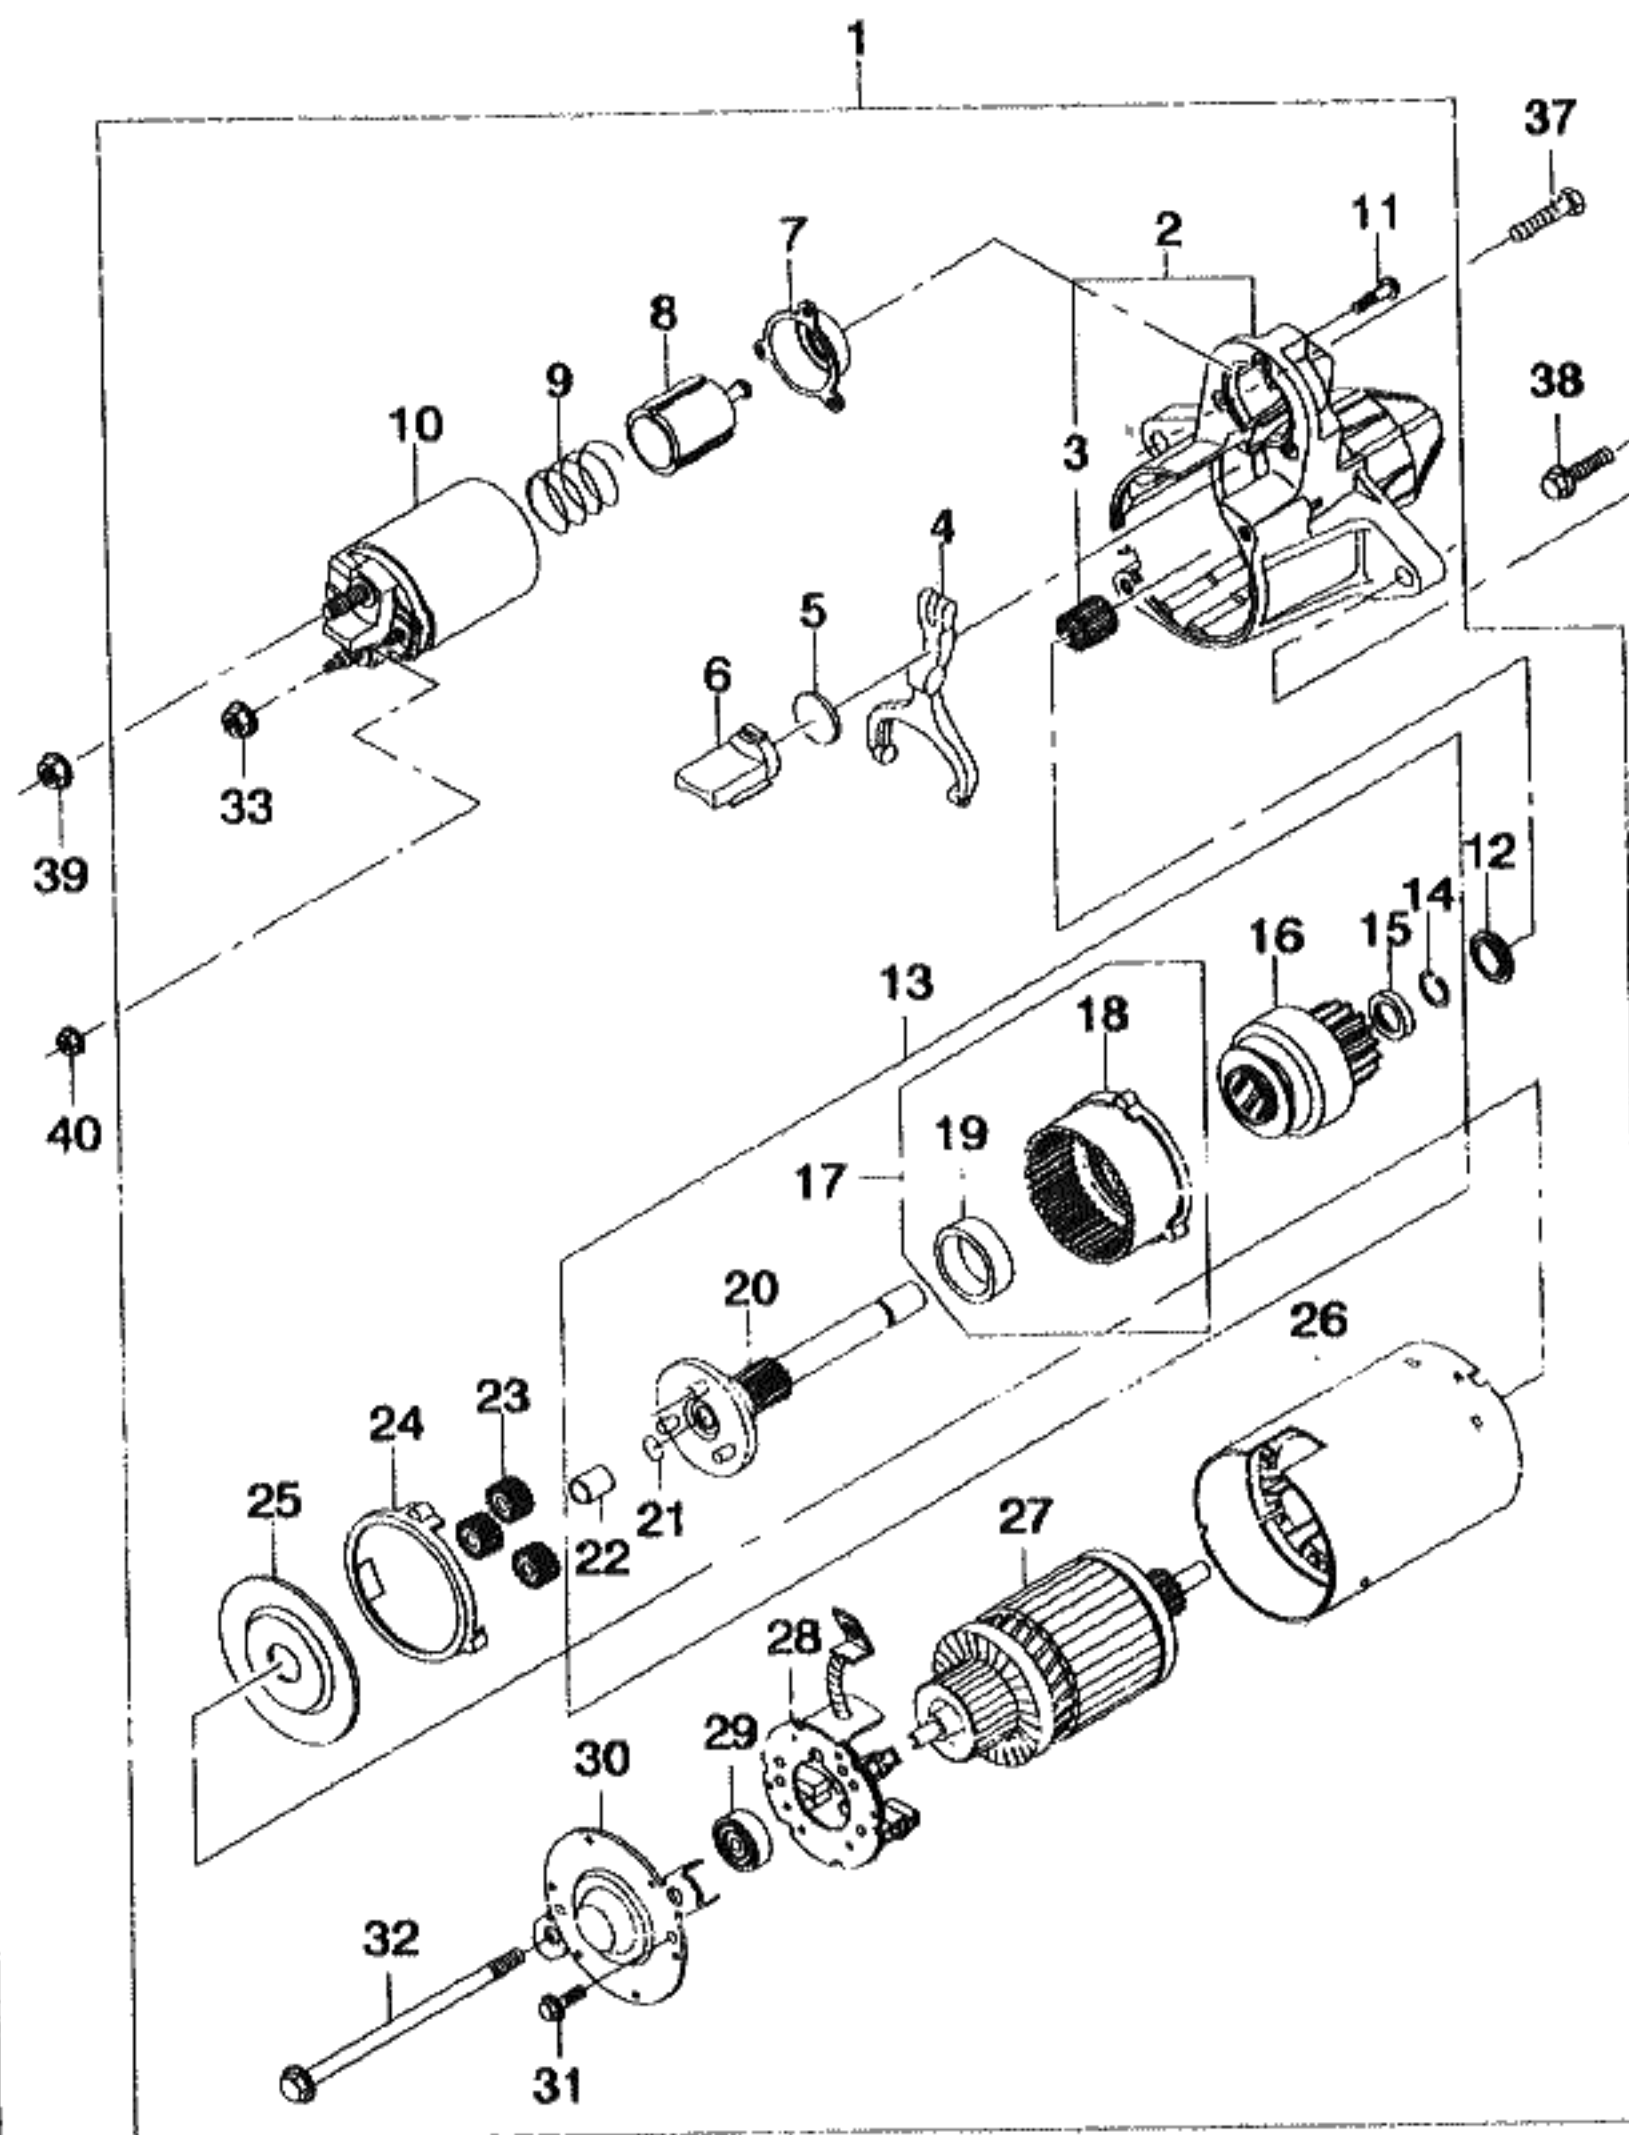


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] 10475056	(E)SCREW (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 3					
	[12] 10477310	(E)COLLAR (D)KRAGEN . S S					(F)COLLIER (S)CASQUILLO 1					
	[13] 10475969	(E)DRIVE&SHAFT (D)ANTRIEB&SPINDEL . S S					(F)ENTRAINEMENT&ARBRE (S)IMPULSADOR&EJE 1					
	[14] 01927848	(E)RING-LOCKING (D)RING . S S					(F)ANNEAU (S)ANILLO 1					
	[15] 111058	(E)PINION-STOP (D)RITZEL,STOPP . S S					(F)PIGNON-ARRET (S)PIÑON-TOPE 1					
	[16] 10475974	(E)DRIVE A (D)ANTRIEB . S S					(F)ENTRAINEMENT (S)IMPULSADOR 1					
	[17] 10475976	(E)GEAR A (D)GETRIEBE . S S					(F)ENGRENAGE (S)ENGRANAJE 1					
	[18] 10475978	(E)GEAR (D)GETRIEBE . S S					(F)ENGRENAGE (S)ENGRANAJE 1					
	[19] 10475977	(E)BUSH (D)LAGERFUTTER . S S					(F)MANCHON (S)BUJE DE BOQUILLA 1					
	[20] 10475970	(E)SHAFT (D)SPINDEL . S S					(F)ARBRE (S)EJE 1					


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

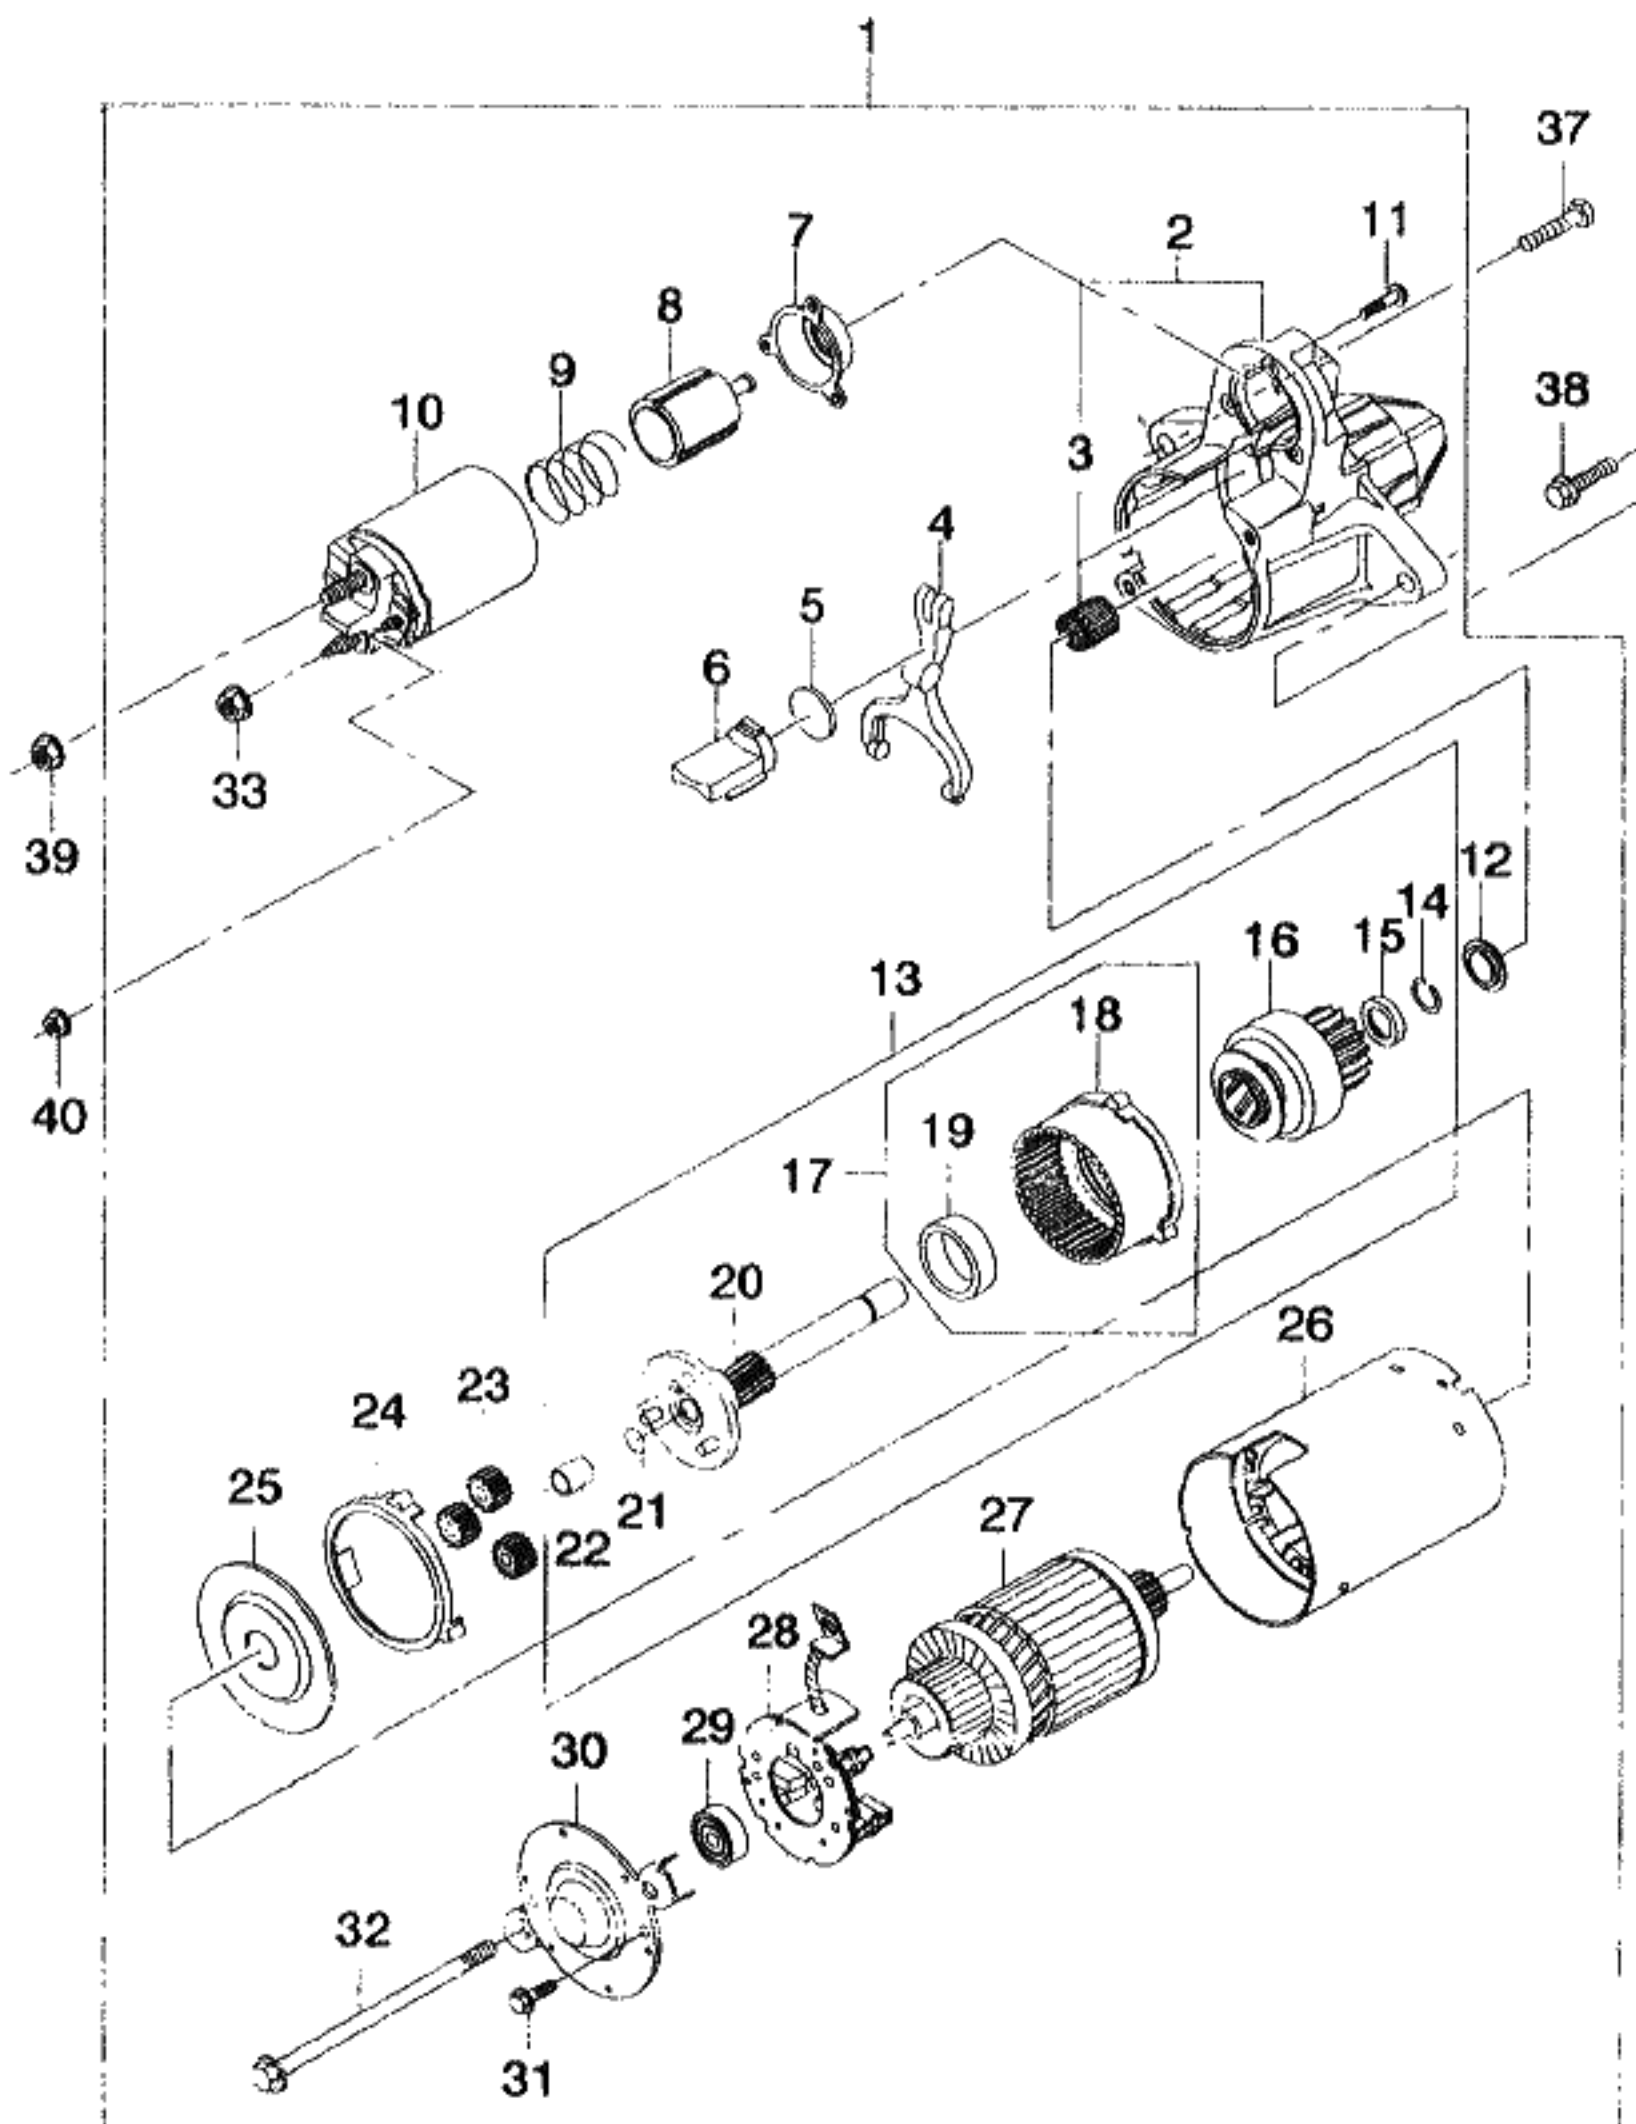


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[21] 01989917	(E)WASHER (D)DICHTUNGSRING . S S					(F)RONDELLE (S)ARANDELA 1				
	[22] 10475972	(E)BUSH (D)LAGERFUTTER . S S					(F)MANCHON (S)BUJE DE BOQUILLA 1				
	[23] 10475979	(E)GEAR (D)GETRIEBE . S S					(F)ENGRENAGE (S)ENGRANAJE 3				
	[24] 10476005	(E)CUSHION (D)POLSTER . S S					(F)COUSSIN (S)COJIN 1				
	[25] 10476004	(E)SHIELD (D)KUGELLAGER . S S					(F)ROULEMENT-BILLE (S)COJINETE DE BOLAS 1				
	[26] 111422	(E)FRAME-FIELD (D)RAHMEN,FELD . S S					(F)CADRE-CHAMP (S)ARMADURA-CAMPO 1				
	[27] 10475990	(E)ARMATURE (D)ARMATUR . S S					(F)ARMATURE (S)ARMADURA 1				
	[28] 10476006	(E)HOLDER-BRUSH (D)BEHÄLTER,BÜRSTE . S S					(F)MONTURE-BALAI (S)RETENEDOR-CEPILLO 1				
	[29] 09440924	(E)BEARING-BALL (D)KUGELLAGER . S S					(F)ROULEMENT-BILLE (S)COJINETE DE BOLAS 1				
	[30] 10468555	(E)FRAME-COMMUTATOR END (D)RAHMEN,KOMMUTATOR ENDE . S S					(F)CADRE (S)ARMADURA 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

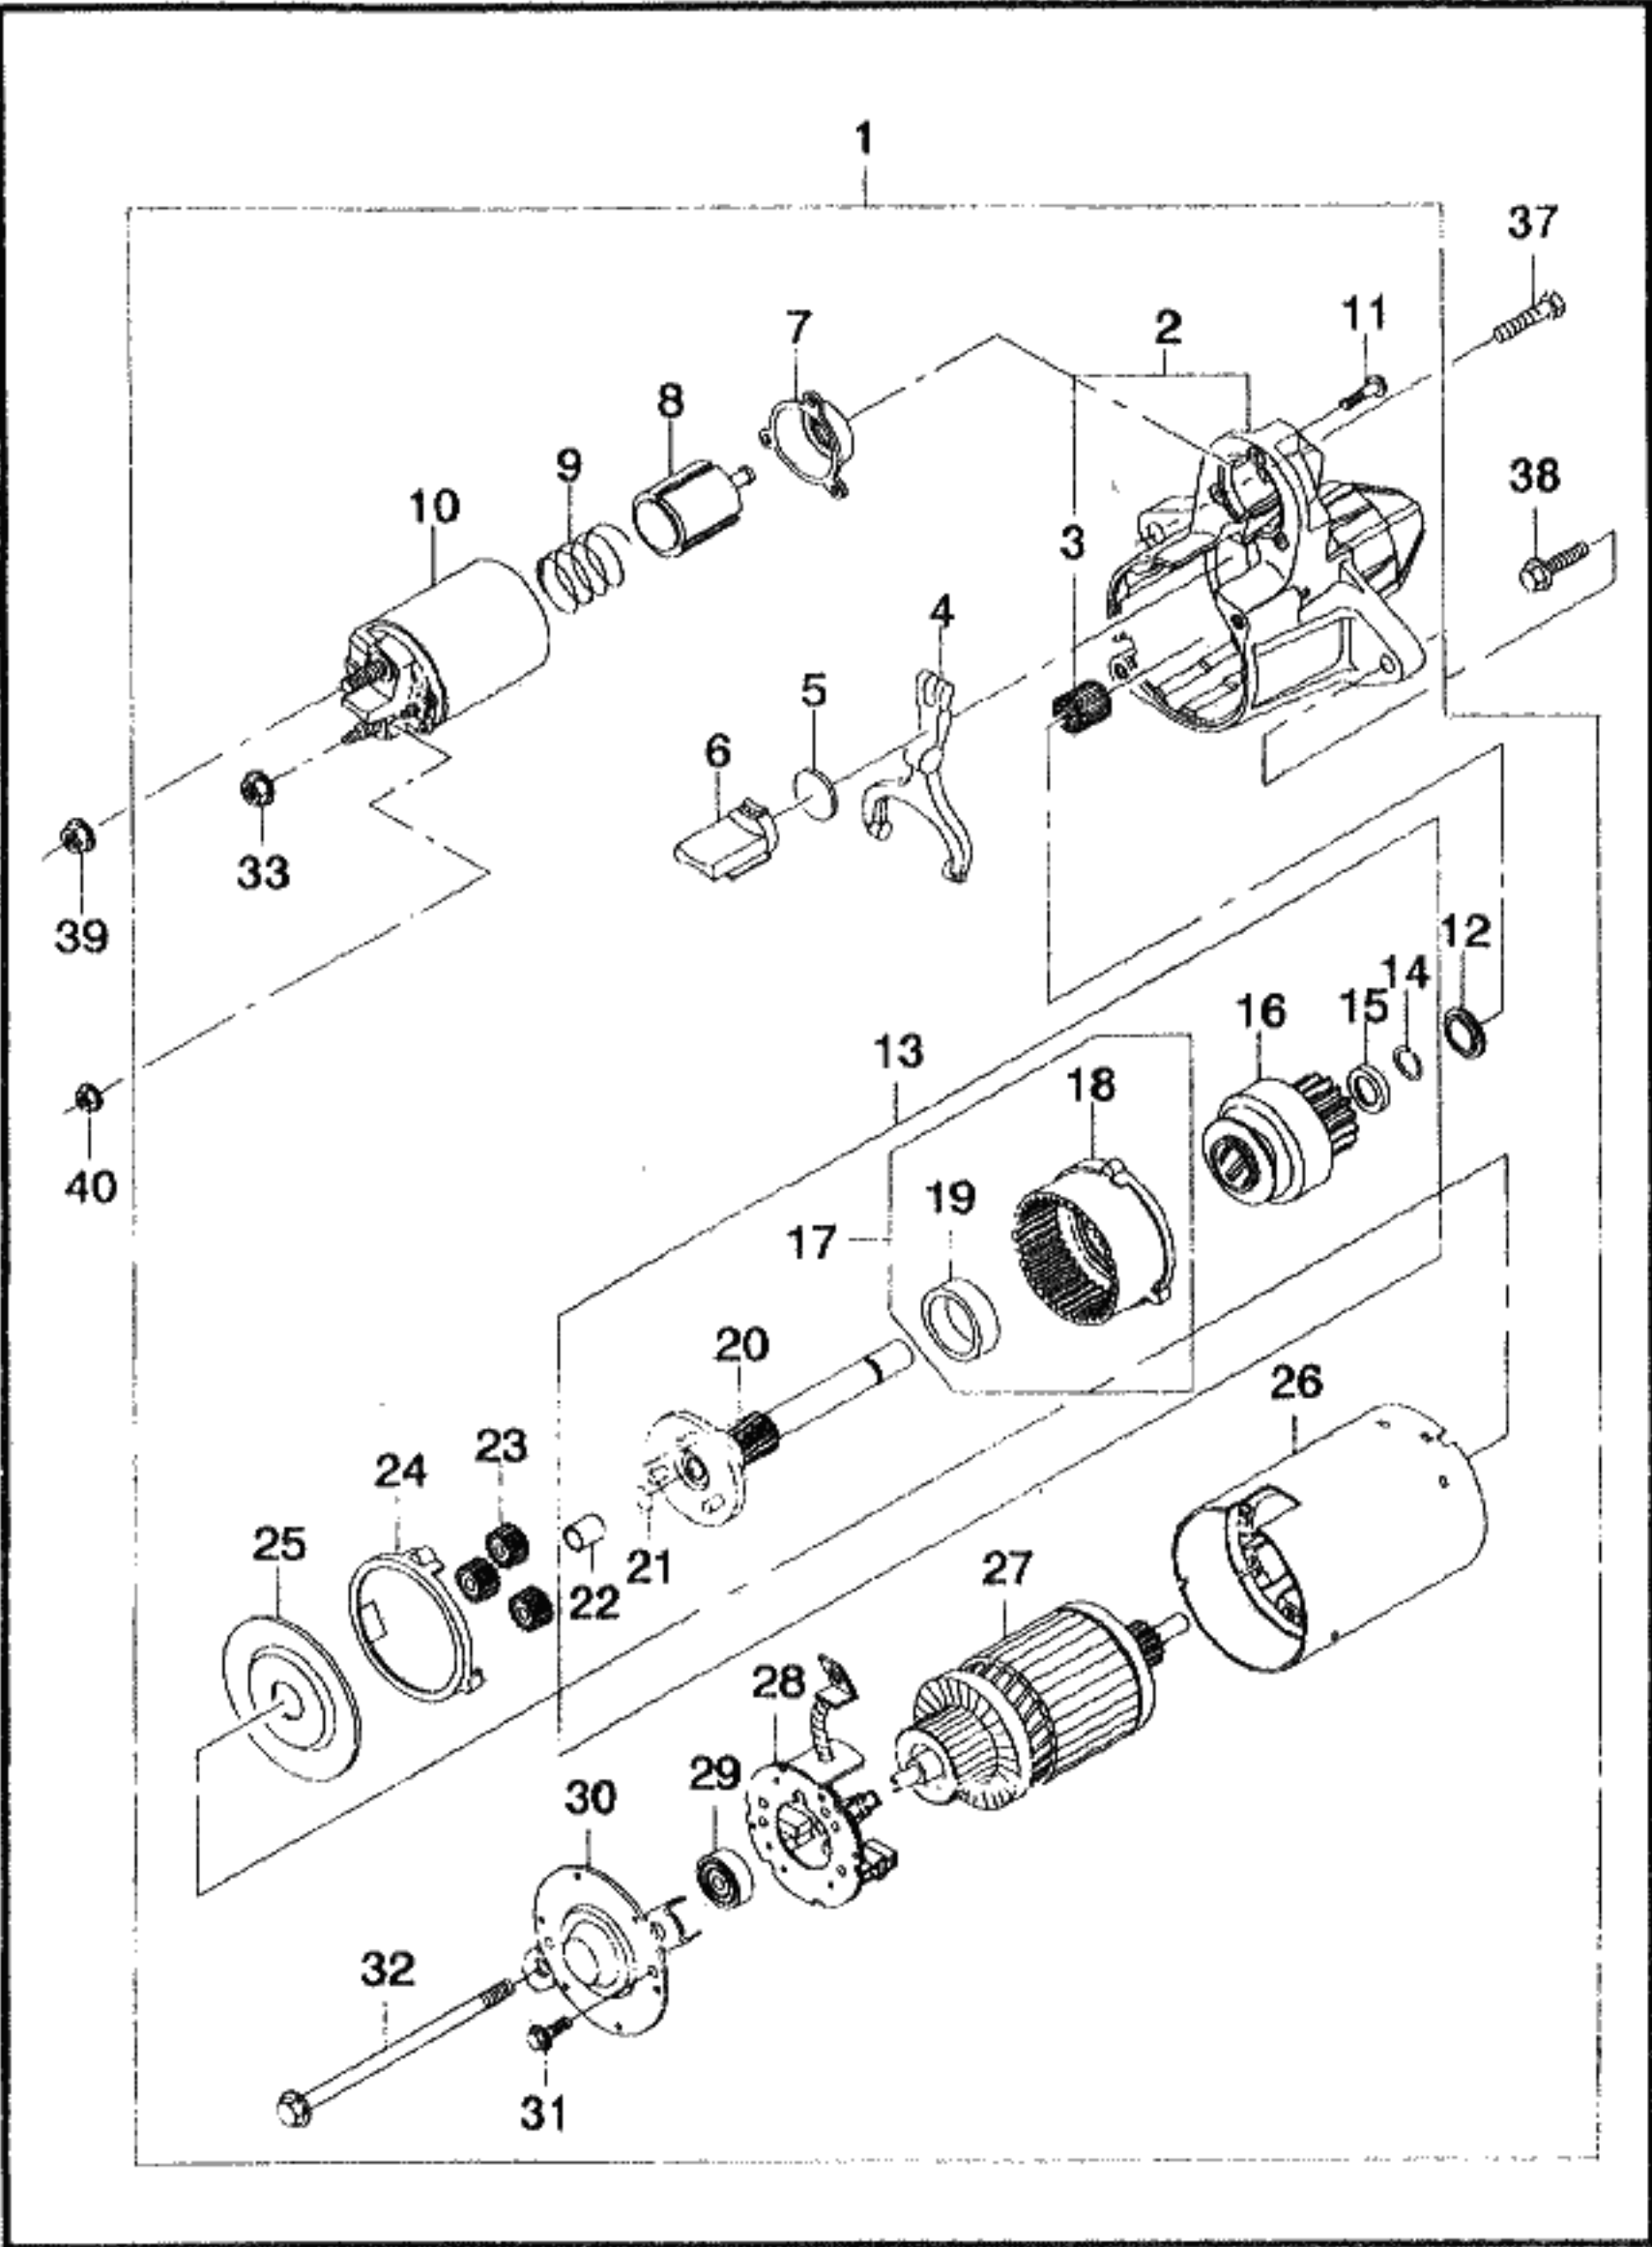


KEY NO.				PART NAME							
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[31] 10497256	(E)SCREW (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 1					
	[32] 10476002	(E)BOLT (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[33] 110720	(E)NUT (D)MUTTER . S S				(F)ECROU (S)TUERCA 1					
	[37] 09100-12012	(E)BOLT-HEXAGON (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 1					
	[38] 09103-10040	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 1					
	[39] 08316-28083	(E)NUT-FLANGE (D)MUTTER . S S				(F)ECROU (S)TUERCA 1					
	[40] 08316-28063	(E)NUT-FLANGE (D)MUTTER . S S				(F)ECROU (S)TUERCA 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

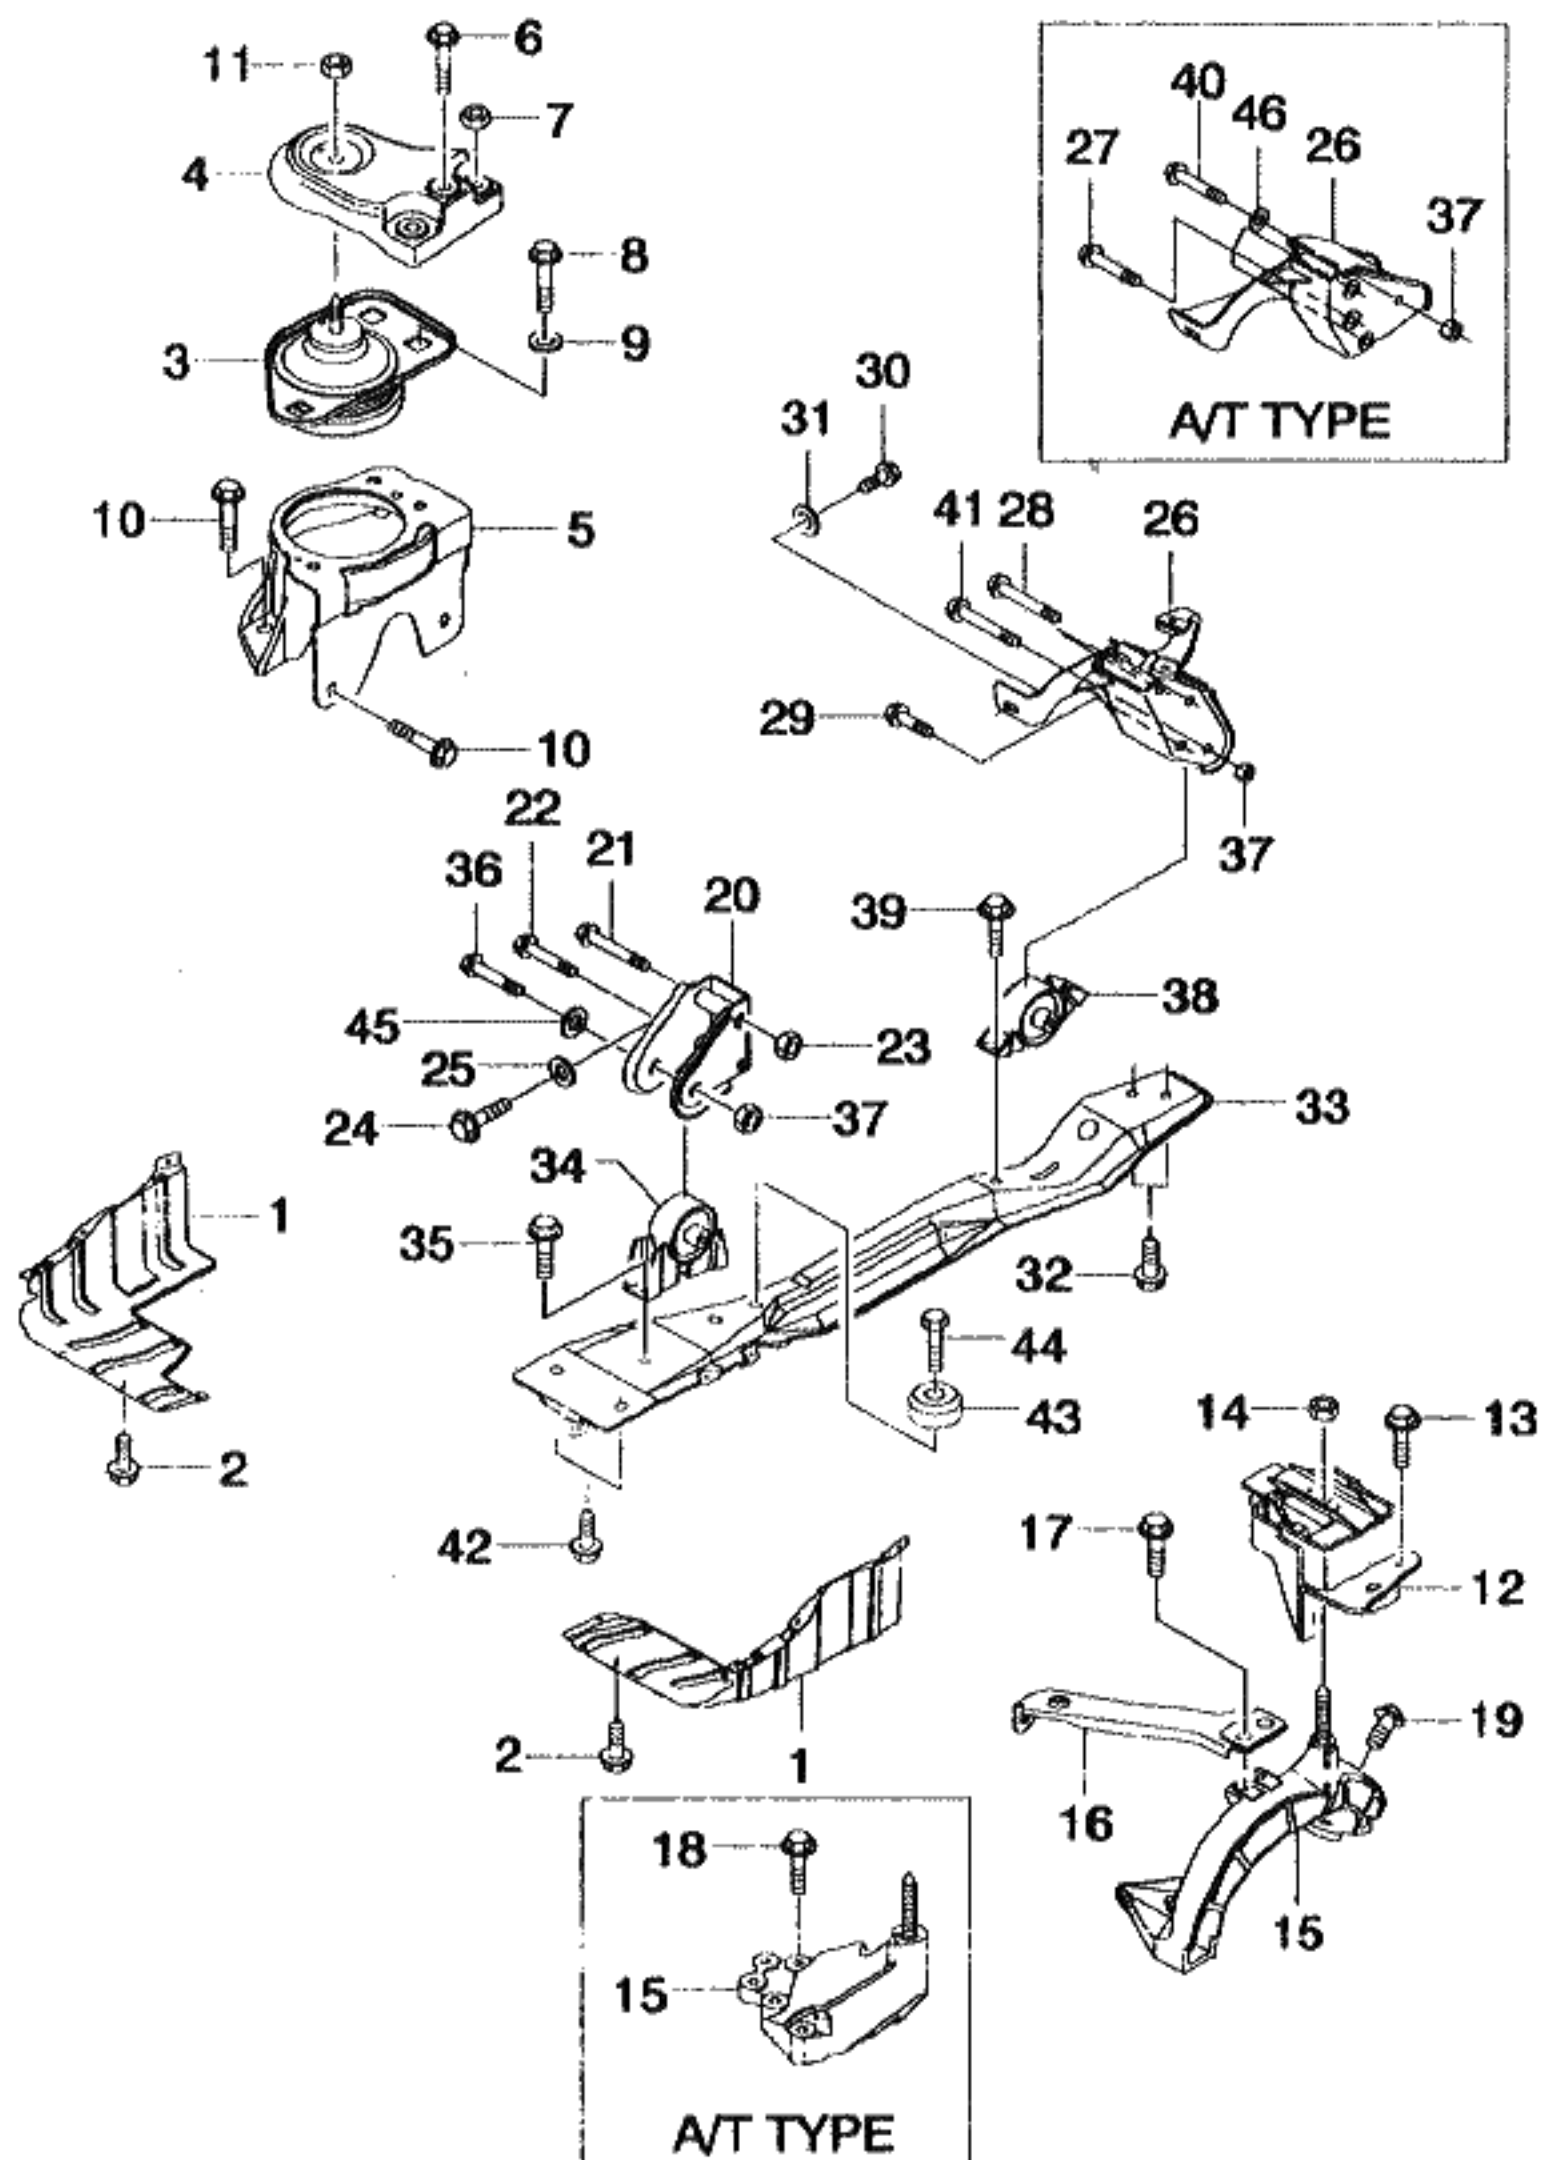

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)DEFLECTOR-WATER (D)WASSERSCHUTZ-FLÜGEL				(F)DEFLECTEUR-EAU (S)DEFLECTOR-AGUA					
	96207591	.	S	S		LH	1				
	96211758	.	S	S		RH	1				
	[02]	(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09119-06017	.	S	S		12		970803			
O	09116-06025	.	S	S		12		970804			
	[03]	(E)HYDROMOUNT (D)MONTAGE-MOTOR				(F)MONTAGE-MOTEUR (S)MONTAJE-MOTOR					
	96183258	.	S	S		RH	1				HA
	[04]	(E)BRACKET-ENGINE MOUNT (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96183260	.	S	S		RH	1				
	[05]	(E)BRACKET A-ENG MTG,BODY (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96221999	.	S	S		RH	1				
	[06]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09103-10058	.	S	S		1					
	[07]	(E)NUT (D)MUTTER				(F)ECROU (S)TUERCA					
	09159-10015	.	S	S		2					
	[08]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO					
	02800-08253	.	S	S		3					
	[09]	(E)WASHER-PLAIN (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
	09160-08009	.	S	S		3					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

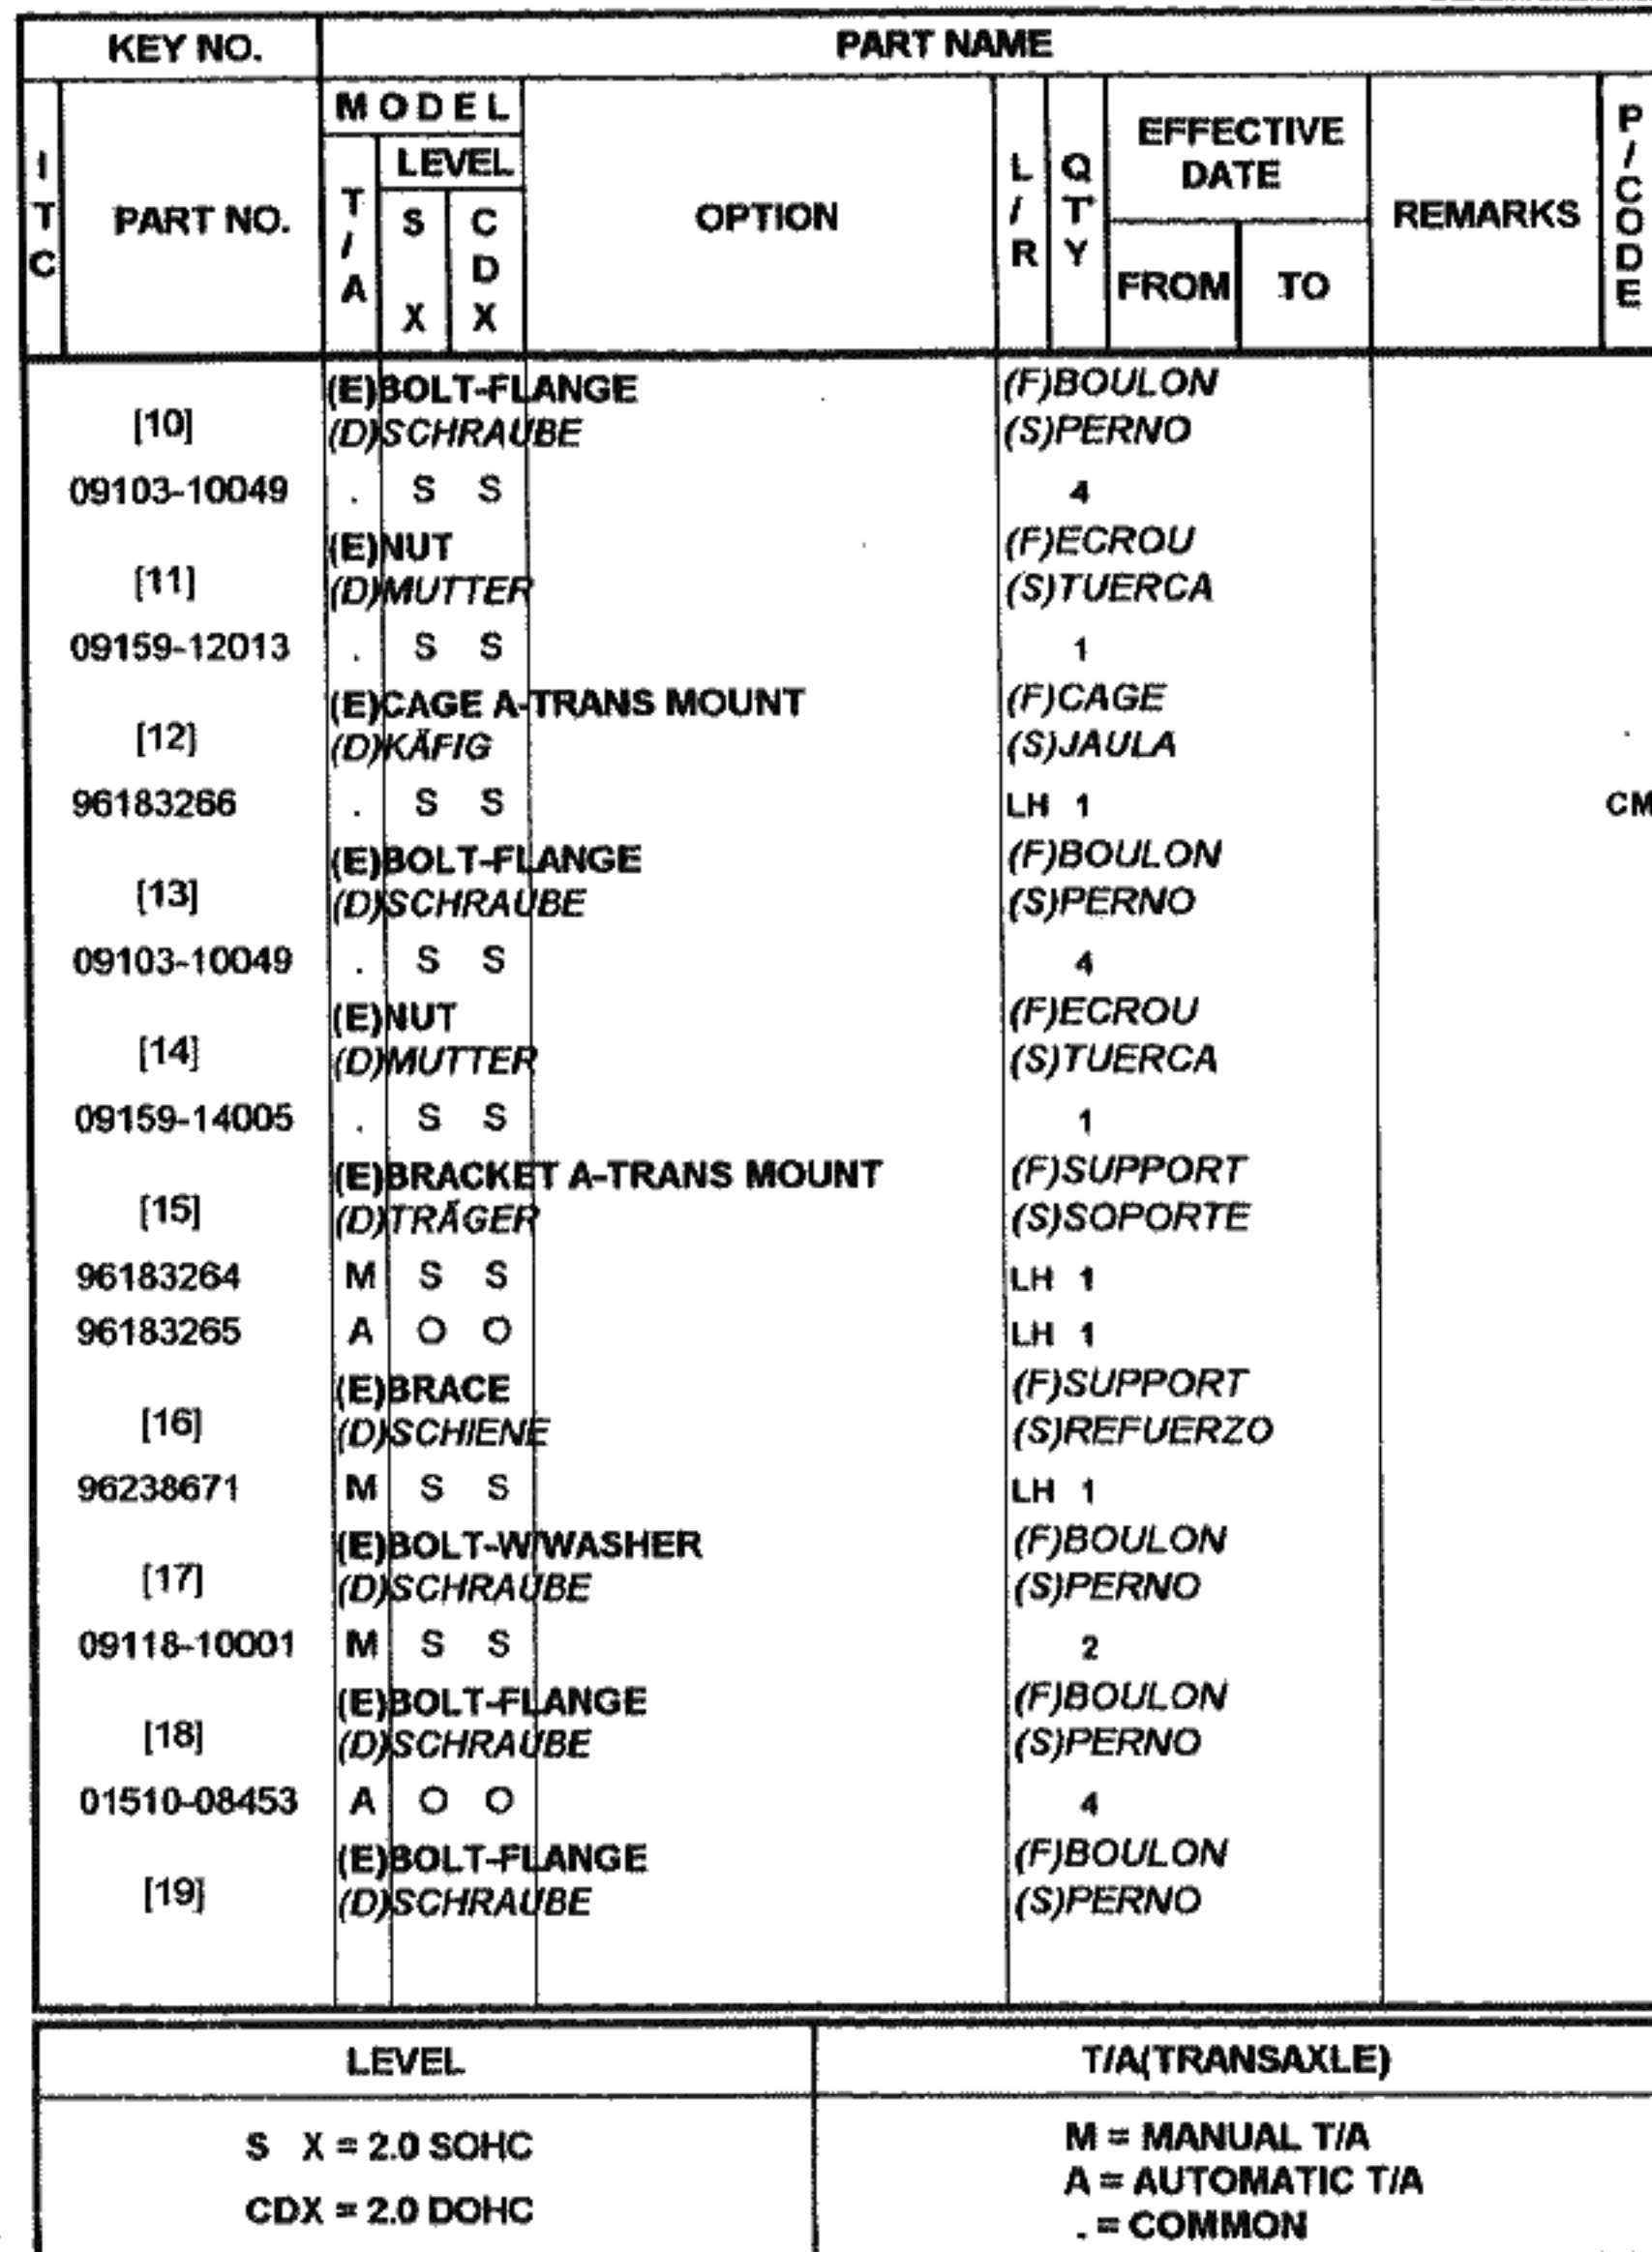


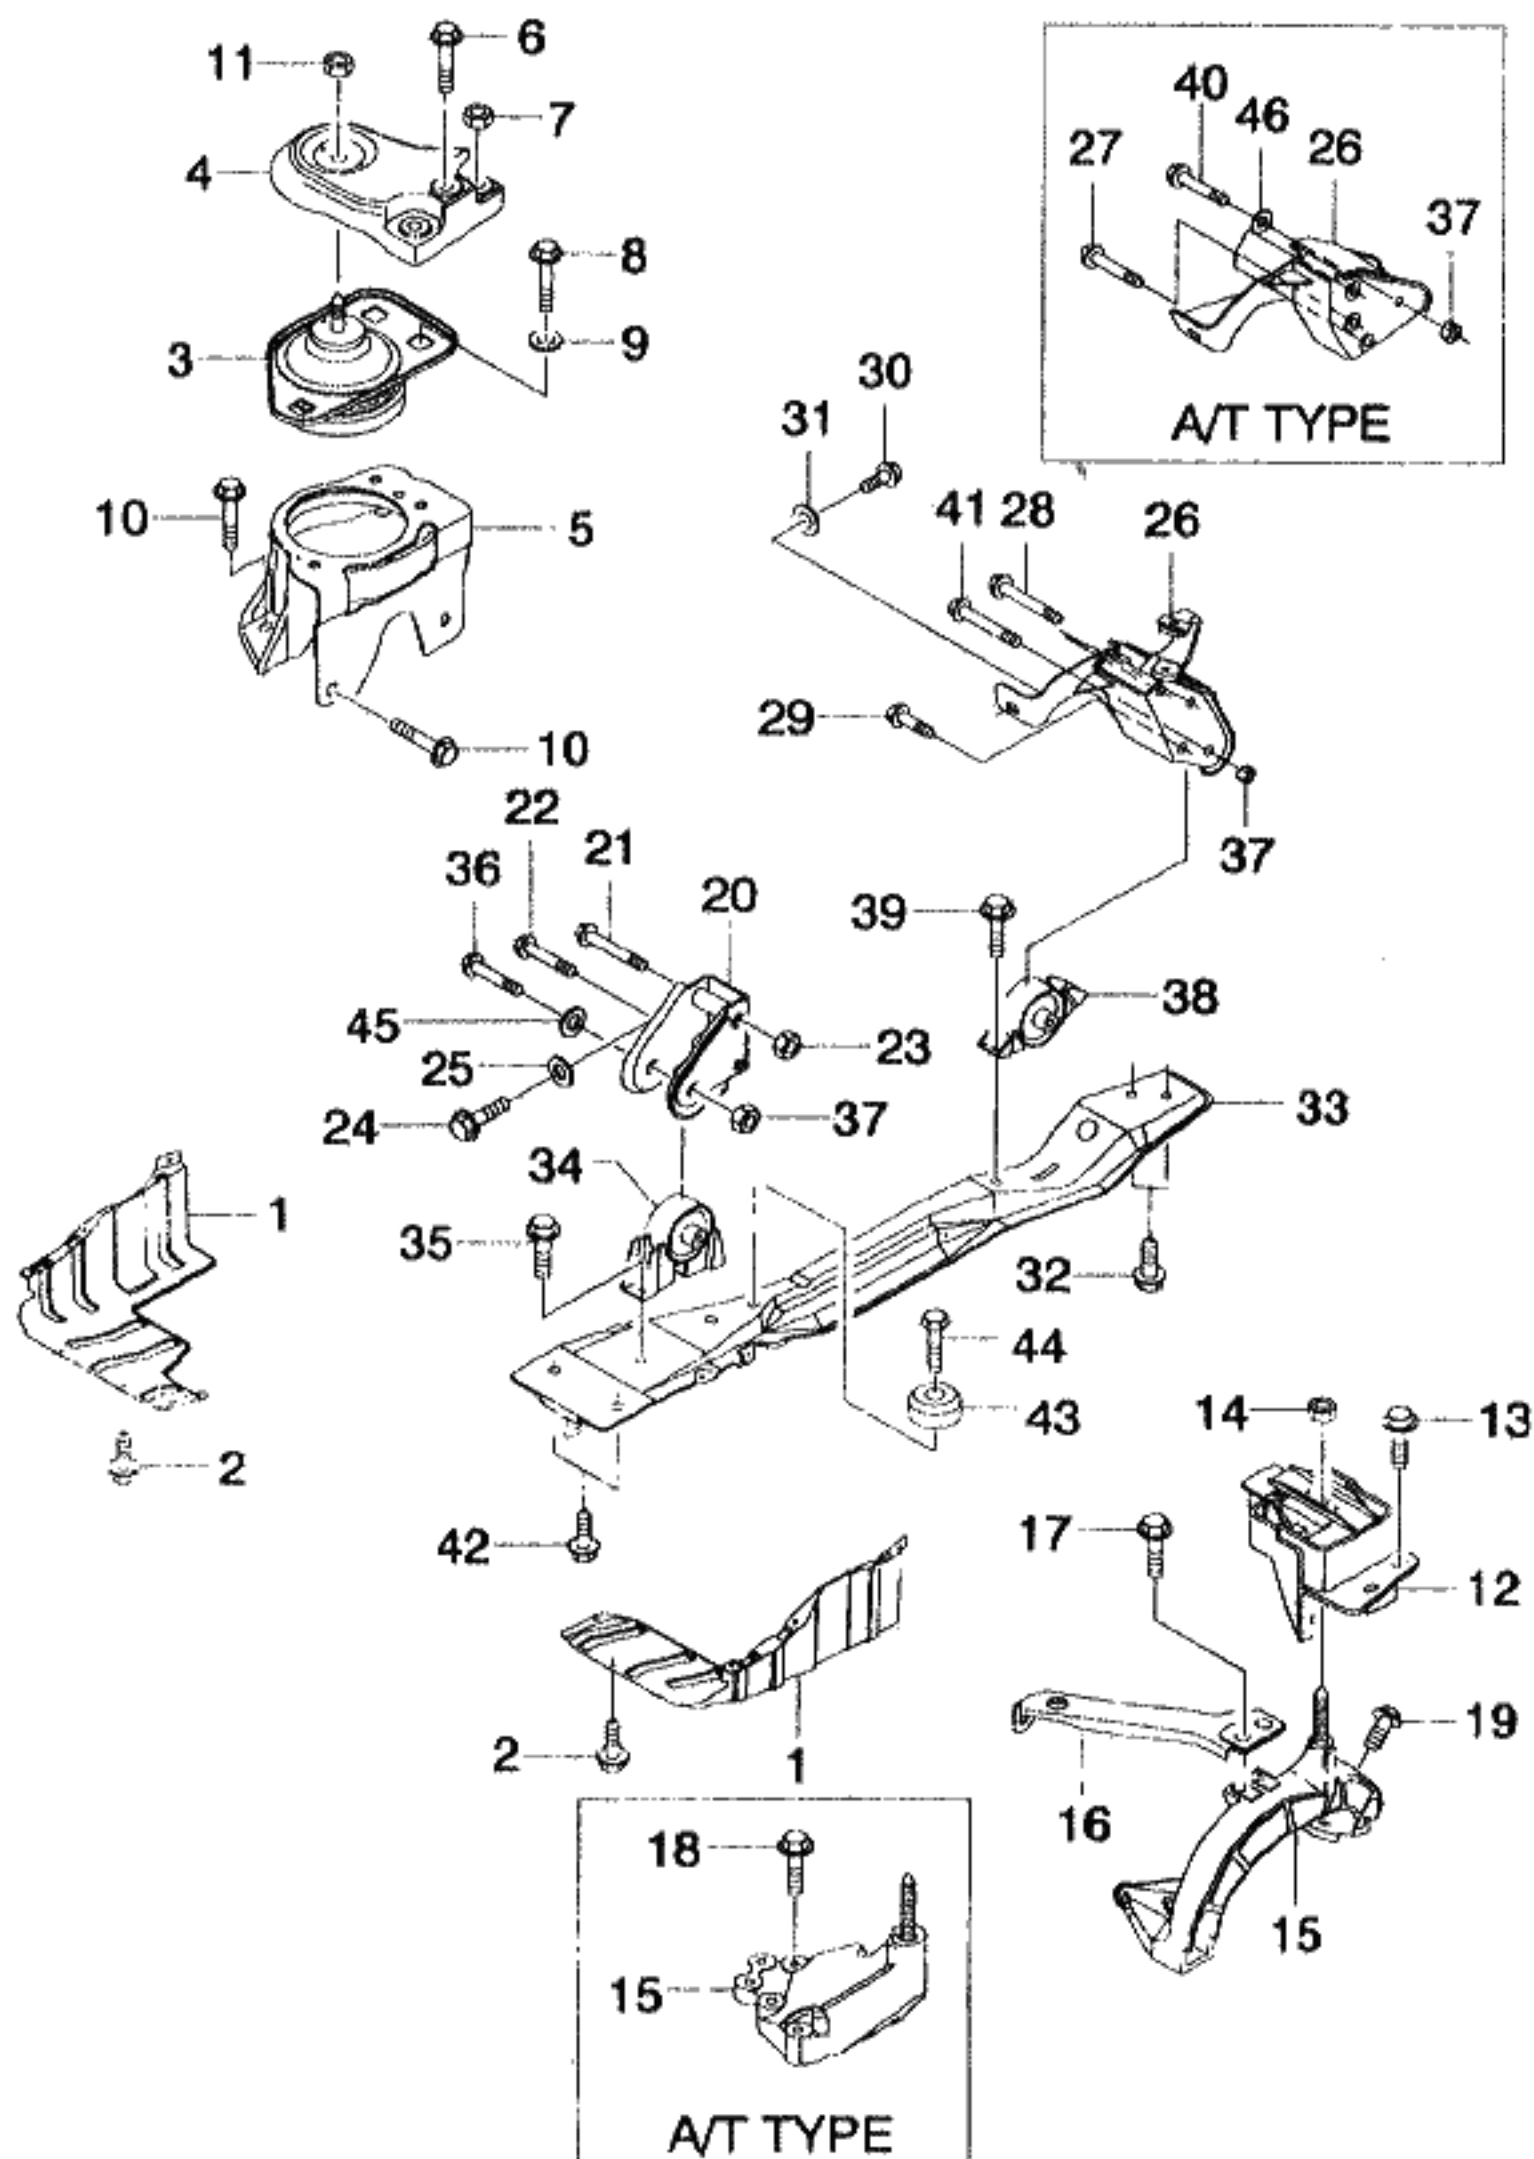


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	09103-10054	M	S	S	(E)BRACKET A-ENG MTG,FR (D)TRÄGER		6	(F)SUPPORT (S)SOPORTE				
	[20]											
	96182455	.	S	S	(E)BOLT-FLANGE (D)SCHRAUBE		1	(F)BOULON (S)PERNO				
	[21]											
	09103-12024	.	S	S	(E)BOLT-FLANGE (D)SCHRAUBE		1	(F)BOULON (S)PERNO				
	[22]											
	09103-12025	.	S	S	(E)NUT (D)MUTTER		1	(F)ECROU (S)TUERCA				
	[23]											
	09159-12009	.	S	S	(E)BOLT-FLANGE (D)SCHRAUBE		1	(F)BOULON (S)PERNO				
	[24]											
	09103-10050	.	S	S	(E)WASHER-PLAIN (D)DICHTUNGSRING		1	(F)RONDELLE (S)ARANDELA				
	[25]											
	09160-10001	.	S	S	(E)BRACKET A-TRANS MTG,RR (D)TRÄGER		1	(F)SUPPORT (S)SOPORTE				
	[26]											
	96223532	M	S	S	(E)BOLT-FLANGE (D)SCHRAUBE		1	(F)BOULON (S)PERNO				
	96182468	A	O	O								
	[27]				(E)BOLT-FLANGE (D)SCHRAUBE		1	(F)BOULON (S)PERNO				
	09103-10035	A	O	O								
	[28]				(E)BOLT-FLANGE (D)SCHRAUBE		3	(F)BOULON (S)PERNO				
	09103-12047	M	S	S								
							2					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

1910 ENGINE MOUNT

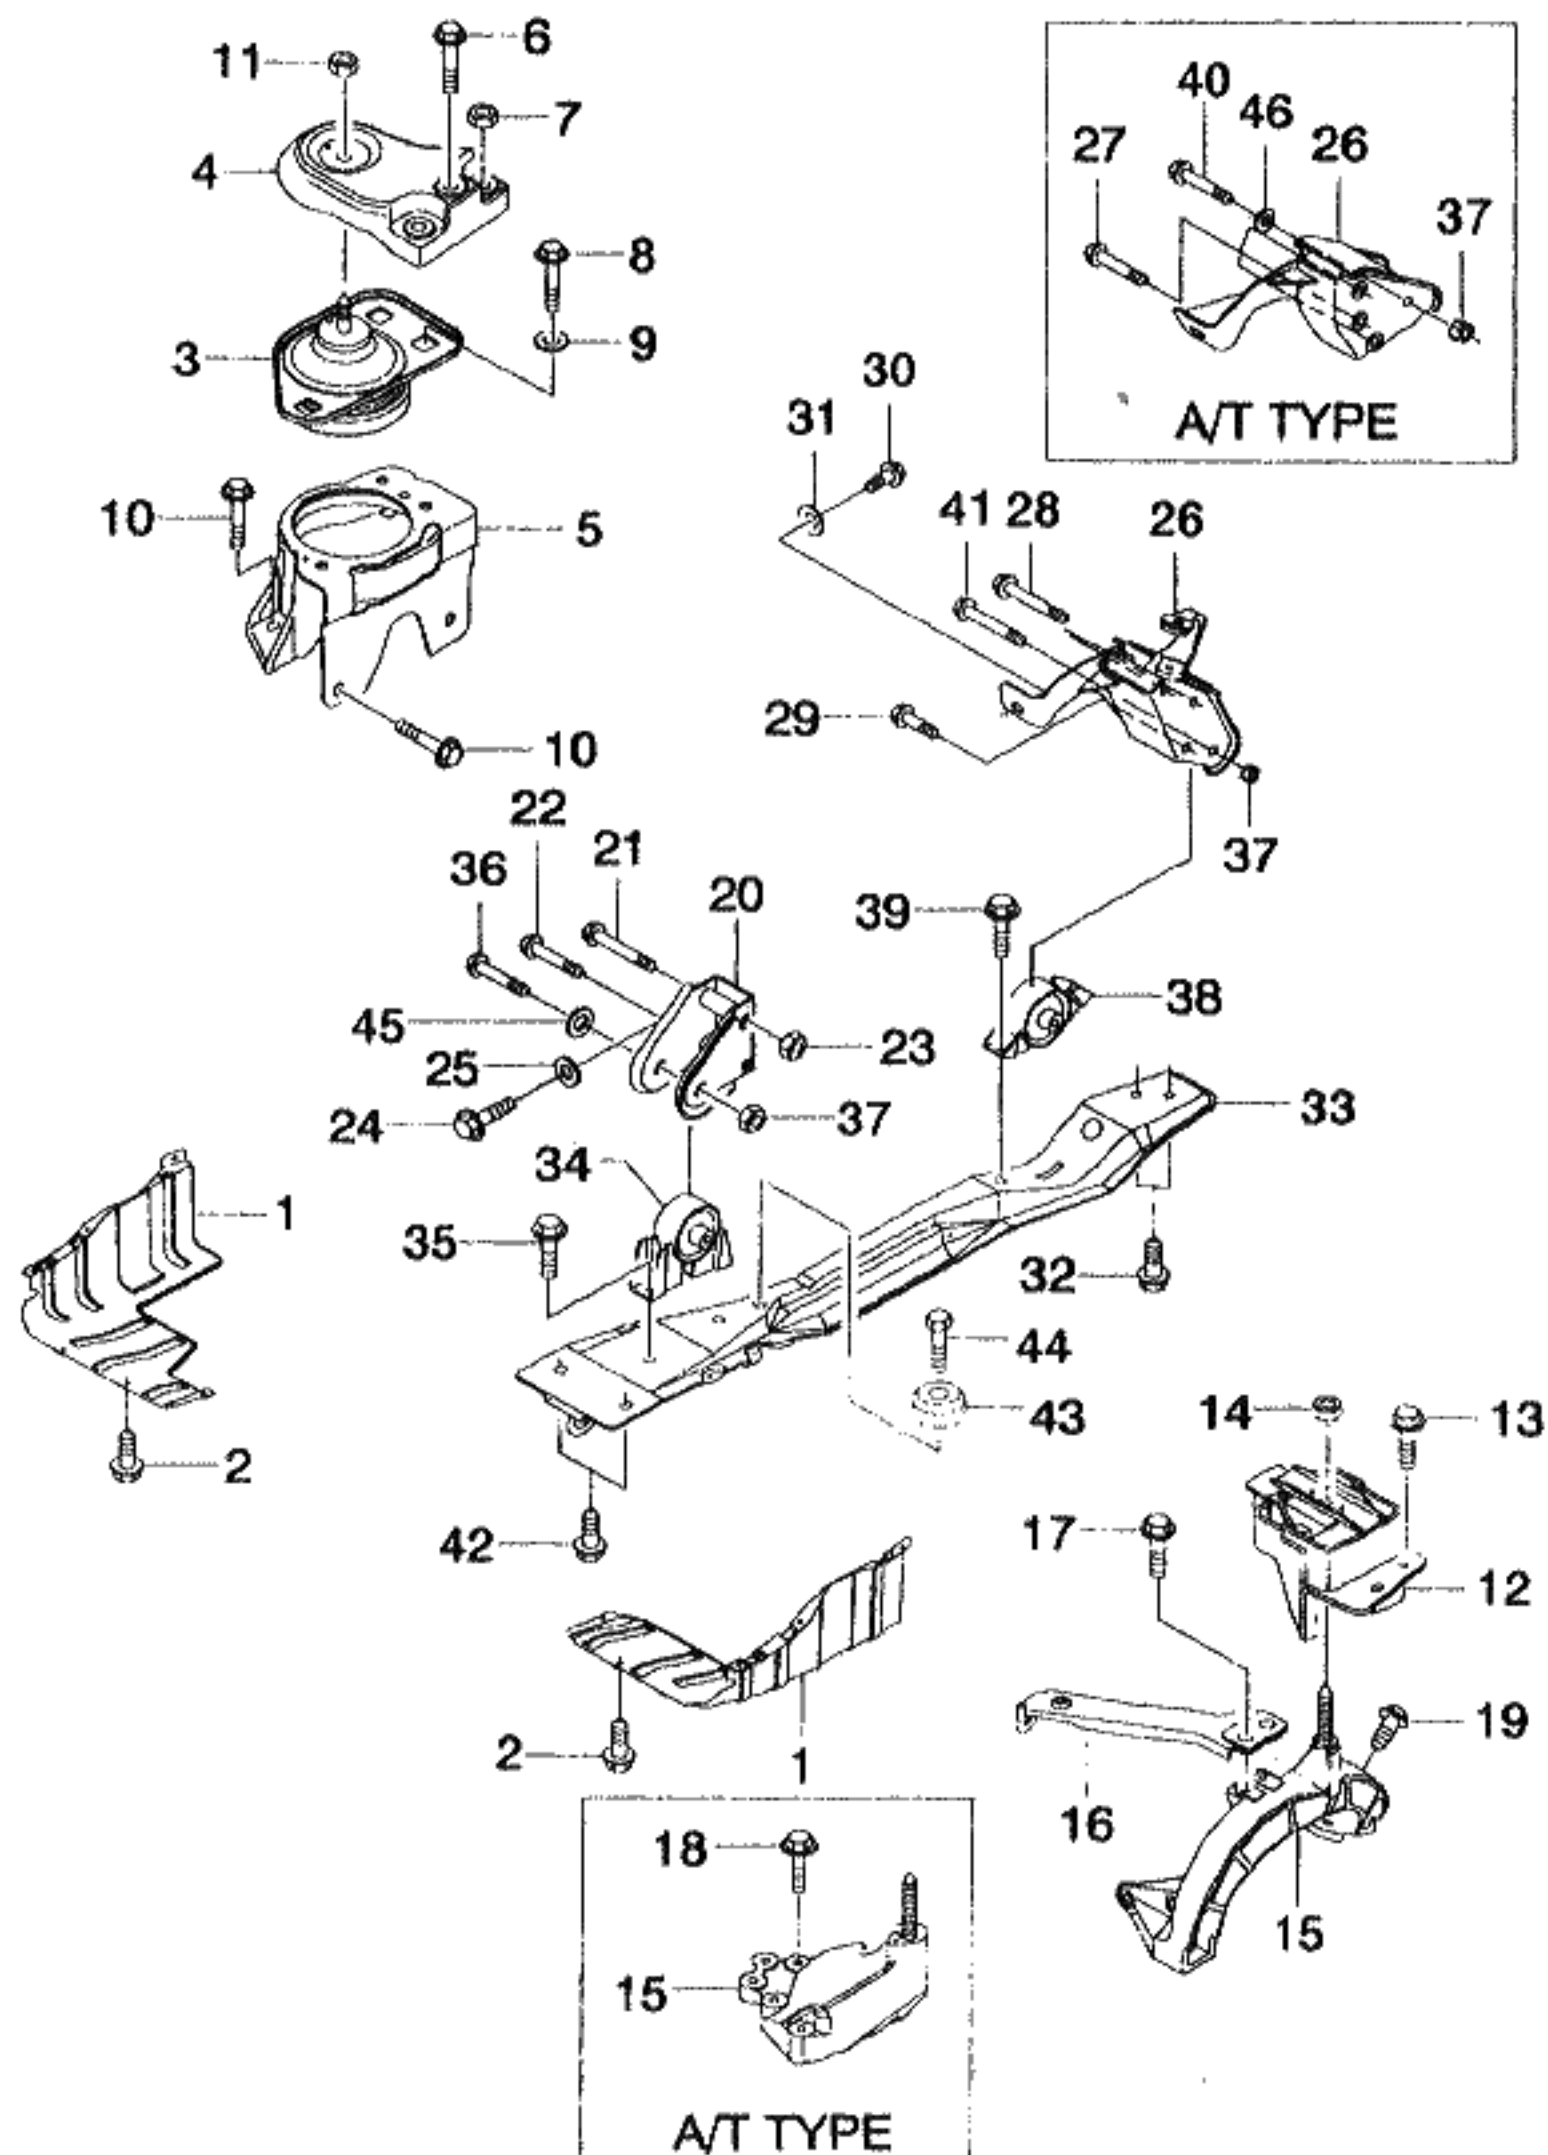


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[29] 09103-12018	(E)BOLT-FLANGE (D)SCHRAUBE M	S	S		(F)BOULON (S)PERNO 1					
	[30] 09103-10050	(E)BOLT-FLANGE (D)SCHRAUBE . S	S	S		(F)BOULON (S)PERNO 1					
	[31] 09160-10001	(E)WASHER-PLAIN (D)DICHTUNGSRING . S	S	S		(F)RONDELLE (S)ARANDELA 1					
	[32] 09103-12026	(E)BOLT-FLANGE (D)SCHRAUBE . S	S	S		(F)BOULON (S)PERNO 2					
	[33] 96207640	(E)CENTER MEMBER A-FR SUSP (D)CENTRE . S	S	S		(F)CENTRE (S)ESFERA 1					
	[34] 96182448	(E)BRACKET A-DAMP BUSH,FR (D)TRÄGER . S	S	S		(F)SUPPORT (S)SOPORTE 1					VF
	[35] 09103-10055	(E)BOLT-FLANGE (D)SCHRAUBE . S	S	S		(F)BOULON (S)PERNO 2					
	[36] 09103-12036	(E)BOLT-FLANGE (D)SCHRAUBE . S	S	S		(F)BOULON (S)PERNO 1					
	[37] 09159-12012	(E)NUT (D)MUTTER . S	S	S		(F)ECROU (S)TUERCA 1					
	[38] 96182459	(E)BRACKET A-DAMP BUSH,RR (D)TRÄGER . S	S	S		(F)SUPPORT (S)SOPORTE 1					VR
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

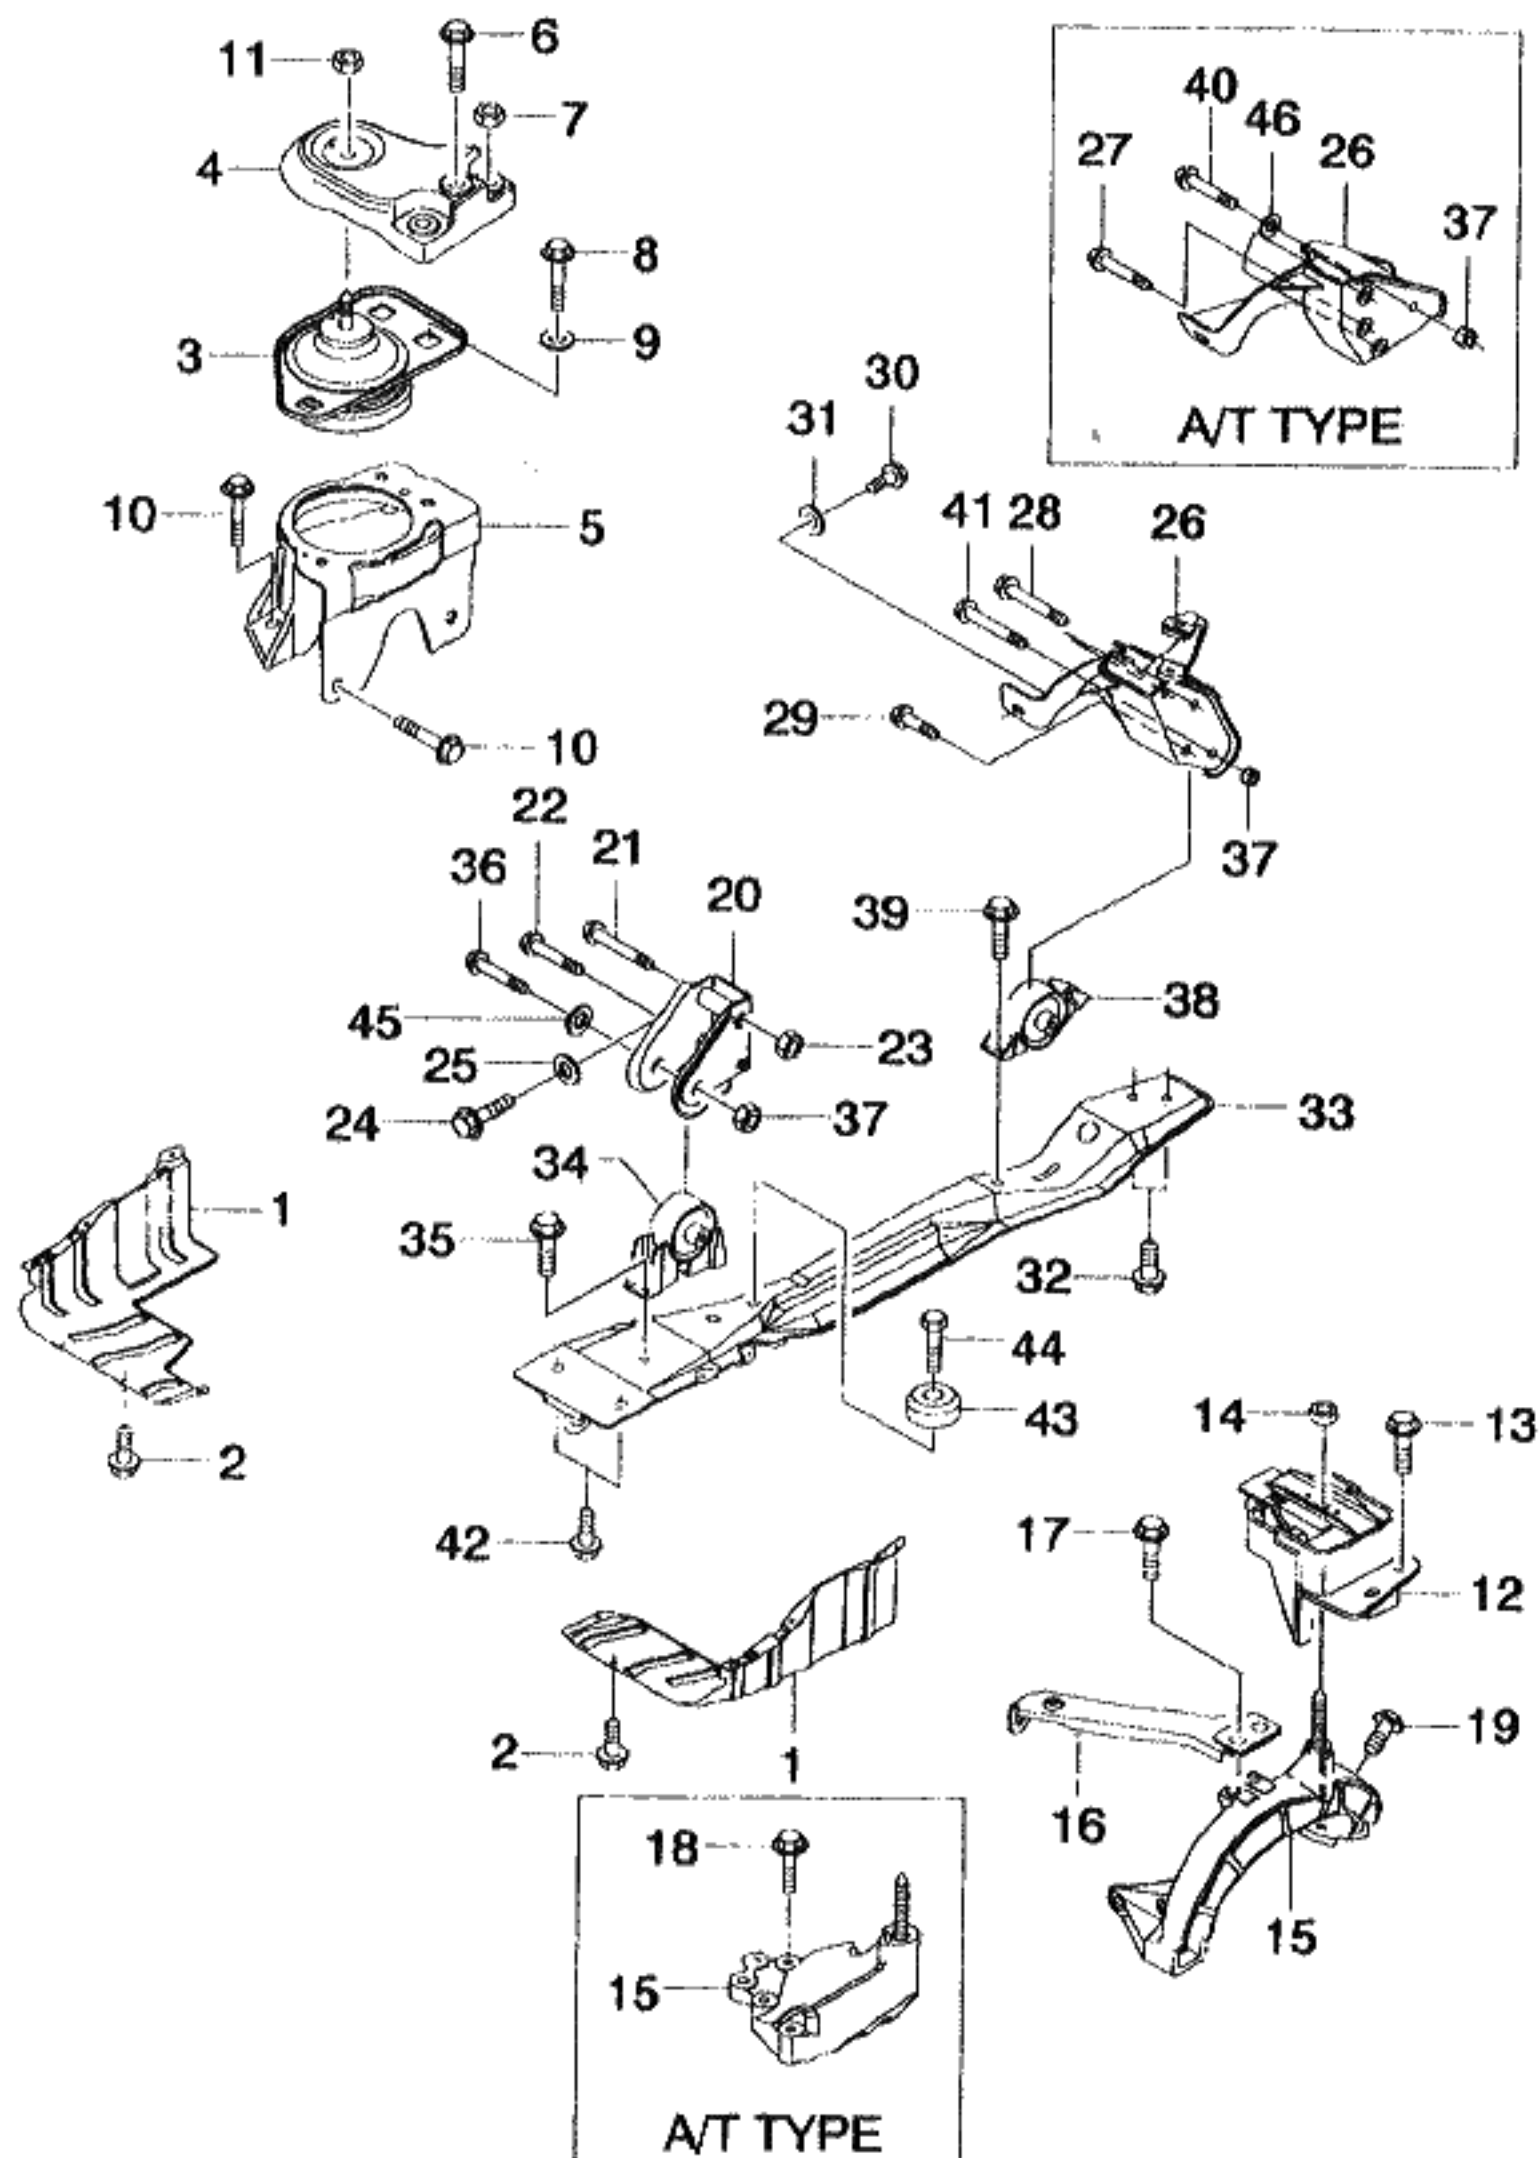


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[39] 09103-10055	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[40] 09103-12037	(E)BOLT-FLANGE (D)SCHRAUBE A O O				(F)BOULON (S)PERNO 1					
	[41] 09103-12038	(E)BOLT-FLANGE (D)SCHRAUBE M S S				(F)BOULON (S)PERNO 1					
	[42] 09103-12026	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[43] 96244027	(E)ABSORBER-CTR MBR DYNAMIC (D)STOßDÄMPFER . S S				(F)AMORTISSEUR (S)AMORTIGUADOR-CHOQUE 1					
	[44] 01107-10503	(E)BOLT-HEXAGON (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 1					
	[45] 09160-12010	(E)WASHER-PLAIN (D)DICHTUNGSRING . S S				(F)RONDELLE (S)ARANDELA 1					
	[46] 09160-12010	(E)WASHER-PLAIN (D)DICHTUNGSRING A O O				(F)RONDELLE (S)ARANDELA 1					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

2**FUEL & ENGINE CONTROL**

- 2110 FUEL TANK
- 2120 FUEL LINE
- 2130 CANISTER & FUEL VACUUM I
- 2212 FUEL INJECTION(2.0SOHC)
- 2213 FUEL INJECTION(2.0DOHC)
- 2410 AIR INTAKE SYSTEM I
- 2411 AIR INTAKE SYSTEM II
- 2420 THROTTLE BODY
- 2432 INTAKE MANIFOLD(2.0SOHC)
- 2433 INTAKE MANIFOLD(2.0DOHC)
- 2442 EXHAUST MANIFOLD(2.0SOHC)
- 2443 EXHAUST MANIFOLD(2.0DOHC)
- 2452 VACUUM HOSE(2.0SOHC)
- 2453 VACUUM HOSE(2.0DOHC)
- 2460 EXHAUST PIPE LINE I
- 2510 EMISSION CONTROL

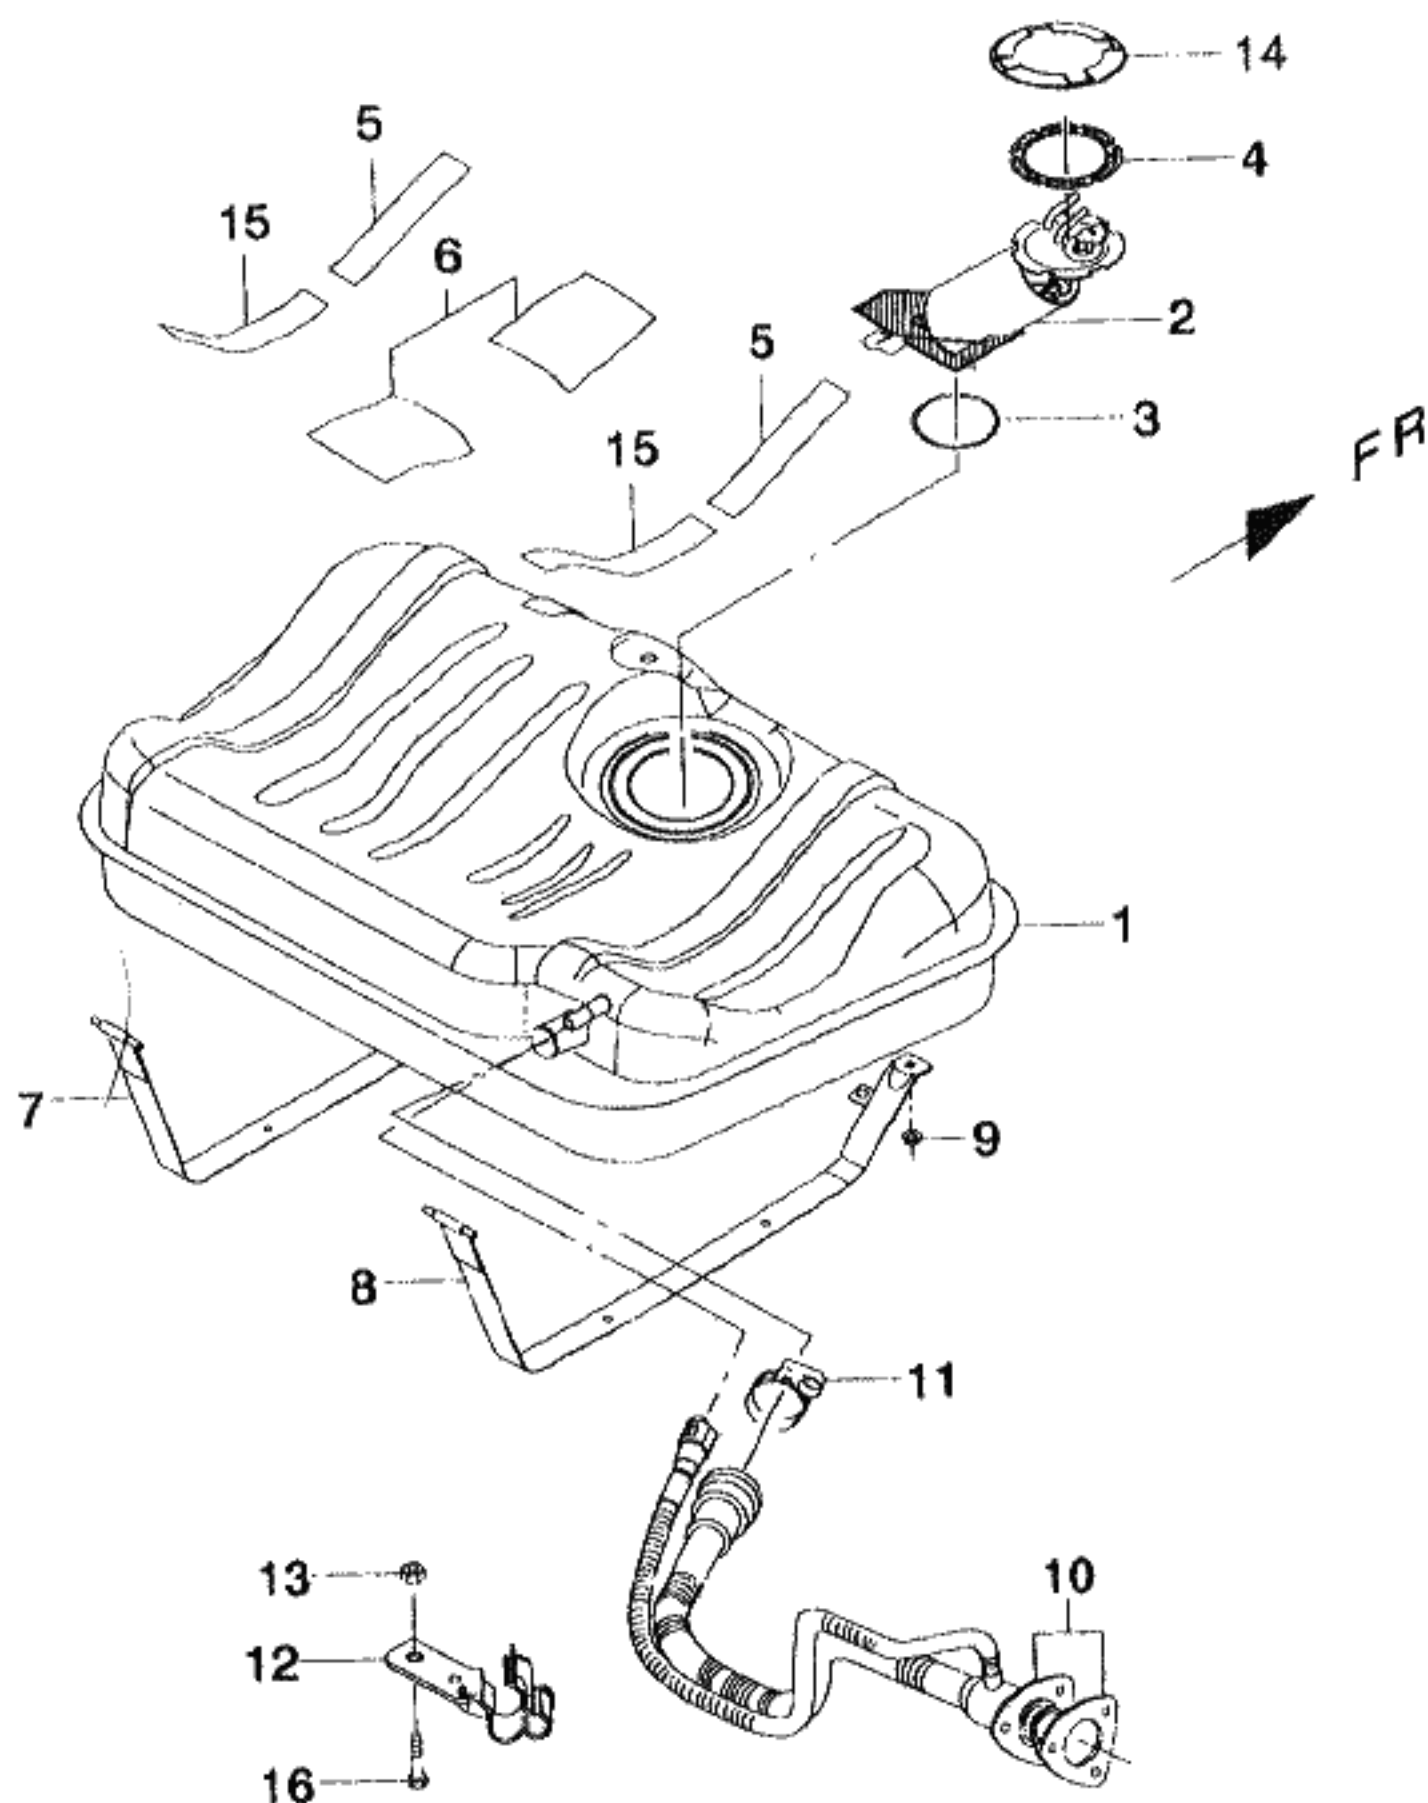


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	[01]	(E)TANK A-FUEL (D)TANK,BENZIN					(F)RESERVOIR-CARBURANT (S)TANQUE-COMBUSTIBLE					
	96351819	. S S					1					
	[02]	(E)MODULE A-FUEL PUMP (D)MODUL					(F)MODULE (S)MODULO					
	96351053	. S S	-XBR				1				VA	
	96255744	. A A	&XBR				1				VD	
	[03]	(E)O RING-FPM (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O					
	96183170	. S S					1					
	[04]	(E)RING-LOCKING,FPM (D)RING,DICHTUNG					(F)ANNEAU-JOINT (S)ANILLO-SELLO					
	96183169	. S S					1					
	[05]	(E)DEADENER-SIDE,TANK (D)ENDSTÜCK					(F)ASSOURDISSEUR (S)AMORTIGUADOR					
	96181905									NOT APPLIED		
	96352422	. S S					2					
	[06]	(E)DEADENER-CENTER TANK (D)ENDSTÜCK					(F)ASSOURDISSEUR (S)AMORTIGUADOR					
	96181906									NOT APPLIED		
	96352424	. S S					2					
	[07]	(E)STRAP A-FUEL TANK (D)BAND,BENZINTANK					(F)BRETELLE (S)BRIDA					
	96184426	. S S					LH 1					
	[08]	(E)STRAP A-FUEL TANK (D)BAND,BENZINTANK					(F)BRETELLE (S)BRIDA					
	96184427	. S S					RH 1					
	[09]	(E)NUT-FLANGE (D)MUTTER					(F)ECROU (S)TUERCA					
	08316-28082	. S S					2					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							



KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10]	(E)TUBE A-FUEL FILLER (D)ROHRLEITUNG,BENZIN TANKEN				(F)TUYAU (S)TUBO-LLENAR COMBUSTIBLE					
	96181958	S	S	&NN4		1					FC
	96183695	A	A	&NN6/NN7		1					FA
	[11]	(E)CLAMP-FUEL FILLER (D)KLAMMER				(F)PINCE (S)ABRAZADERA					
	96313240	S	S	&NN4/NN6/NN7		1					
	[12]	(E)BRACKET-FILLER,FUEL (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96351712	S	S			1					
	[13]	(E)NUT (D)MUTTER				(F)ECROU (S)TUERCA					
	09159-06001	S	S			1					
	[14]	(E)COVER A-FUEL TANK HOLE (D)DECKEL				(F)CARTER (S)CUBIERTA					
	96245793	S	S			1					
	[15]	(E)DEADNER-RR SIDE,TANK (D)ENDSTÜCK				(F)ASSOURDISSEUR (S)AMORTIGUADOR					
	96352423	S	S			2					
	[16]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	09136-04008	S	S			3					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

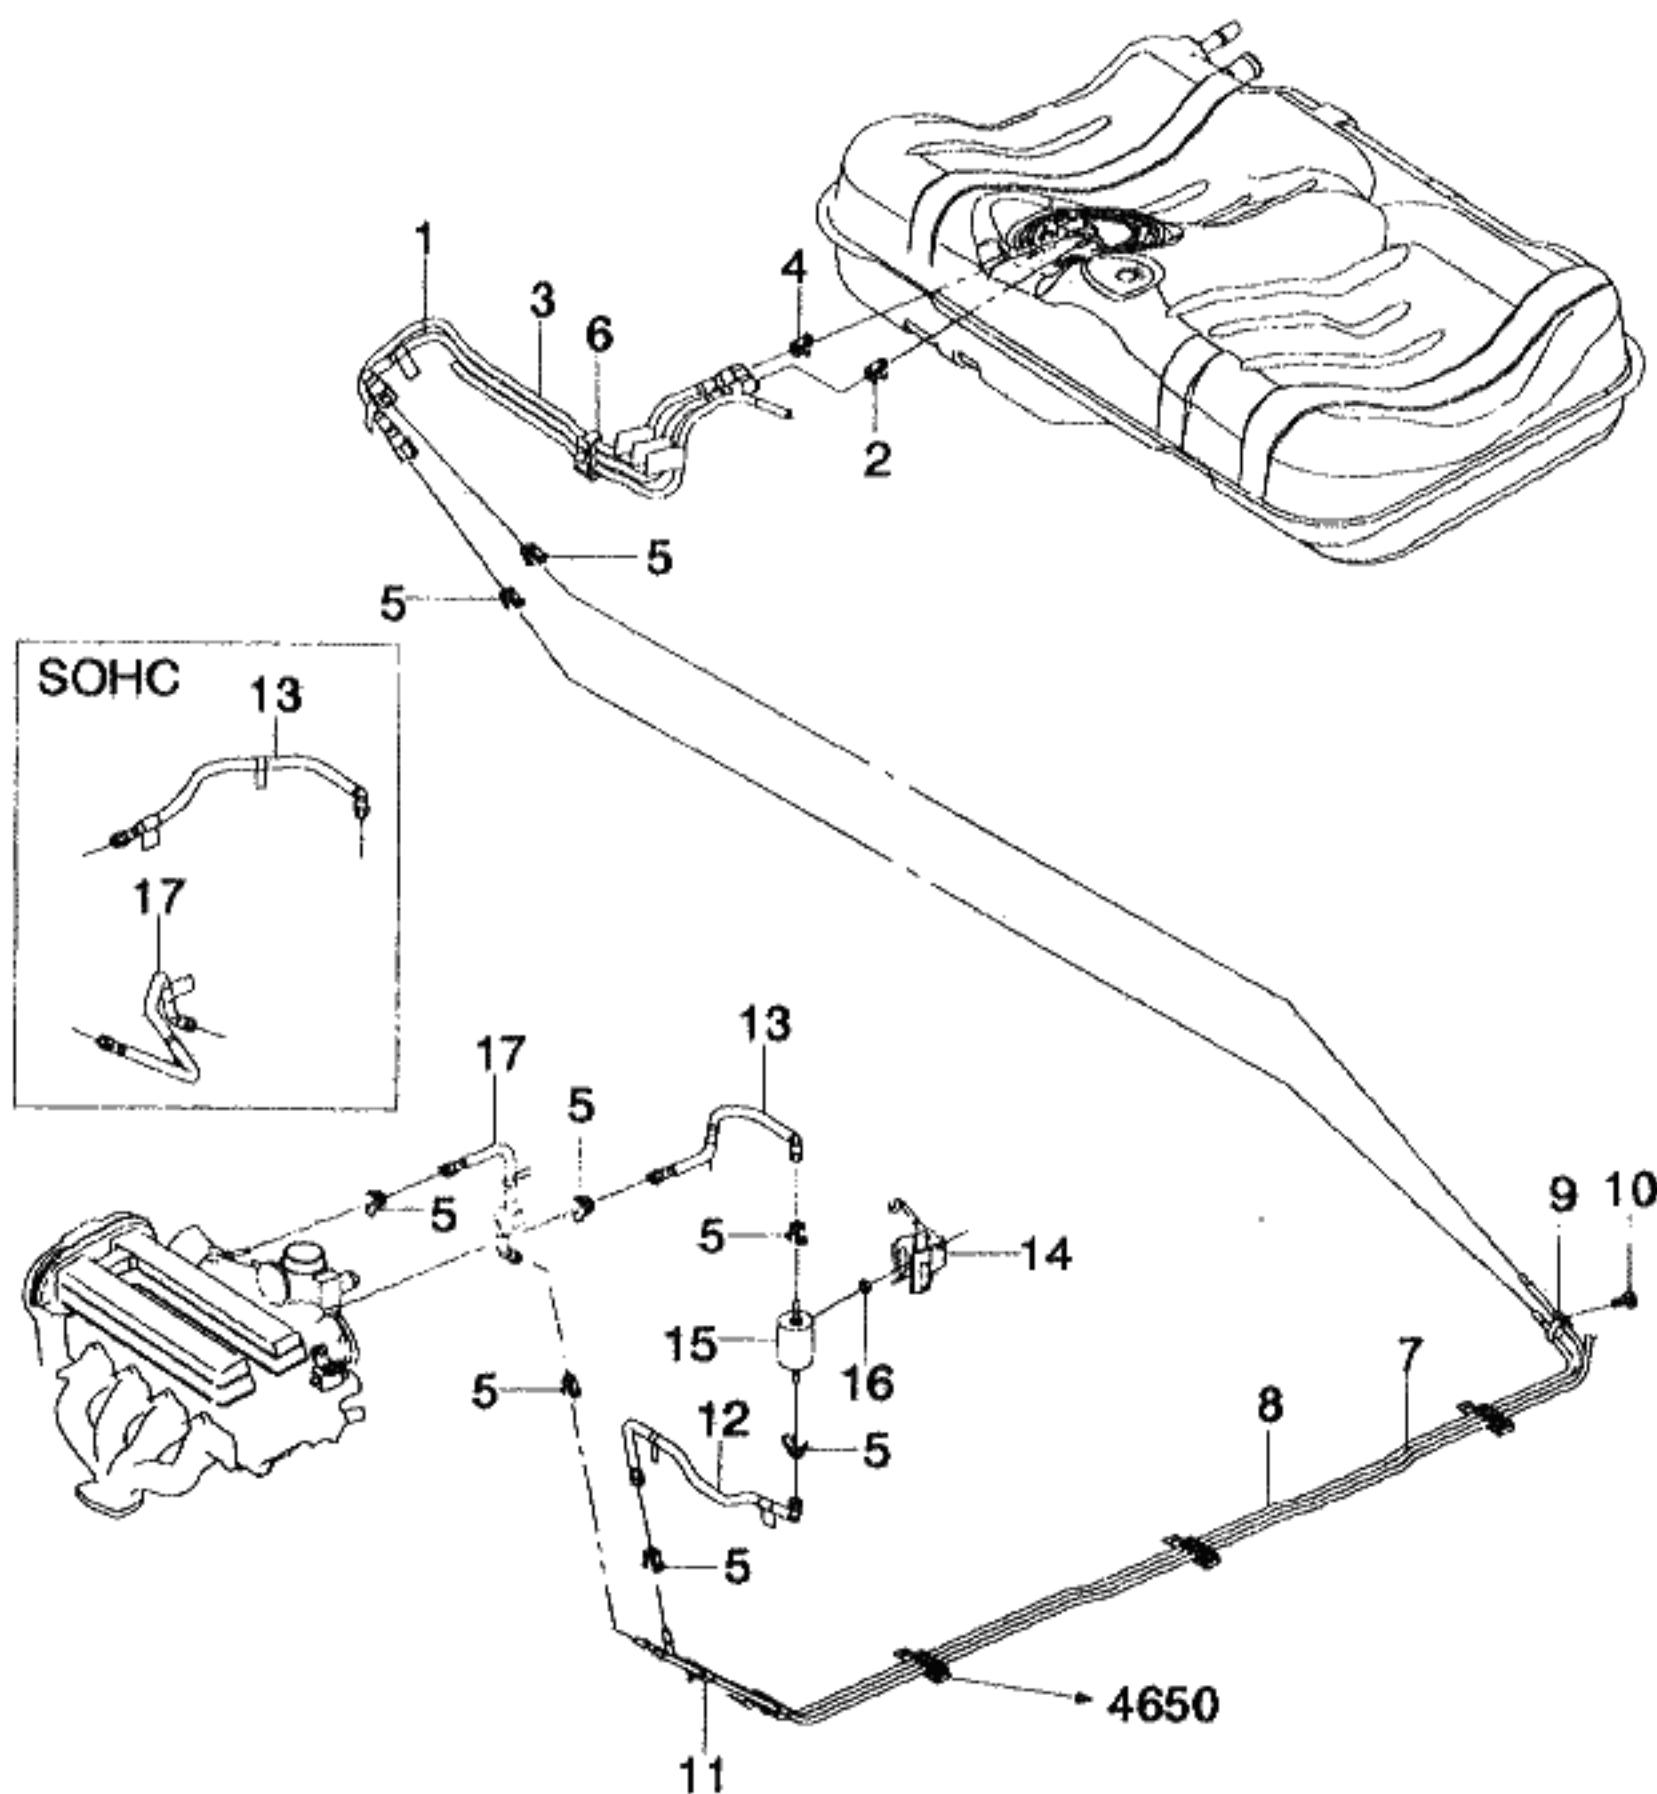

KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	Q / T / Y	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]	96351093		S S	(E)TUBE-FEEDING,RR (D)ROHRLEITUNG		(F)TUYAU (S)TUBO			INCL.#2,5	
[02]	HP-9P-86019		S S	(E)RETAINER (D)FEDERUNG		(F)RESSORT (S)RETENEDOR			3/8inch	
[03]	96351095		S S	(E)TUBE-RETURN,RR (D)TUYAU		(F)ROHRLEITUNG (S)TUBO			INCL.#4,5	
[04]	HP-8S-87012 Y HP-8P-87012		S S	(E)RETAINER (D)FEDERUNG		(F)RESSORT (S)RETENEDOR			1/4inch 1/4inch	
[05]	HP-9P-86020		S S	(E)RETAINER (D)FEDERUNG		(F)RESSORT (S)RETENEDOR			5/16inch	
[06]	96351199		S S	(E)CLIP A-FUEL (D)KLEMME		(F)ATTACHE (S)GRAPA				
[07]	96183684 96352583		S S -XBR A A &XBR	(E)PIPE-FEEDING,INTERM (D)ROHR,BENZIN-ZUFUHR		(F)TUYAU (S)TUBERIA-ALIMENTACION				
[08]	96183685 96352584		S S -XBR A A &XBR	(E)PIPE-RETURN,INTERM (D)ROHR		(F)TUYAU (S)TUBERIA				
[09]	96351736		S S	(E)BRACKET-PIPE,FUEL (D)TRÄGER		(F)SUPPORT (S)SOPORTE				

LEVEL


T/A(TRANSAXLE)

S X = 2.0 SOHC


M = MANUAL T/A
A = AUTOMATIC T/A
. = COMMON

CDX = 2.0 DOHC


2120 FUEL LINE

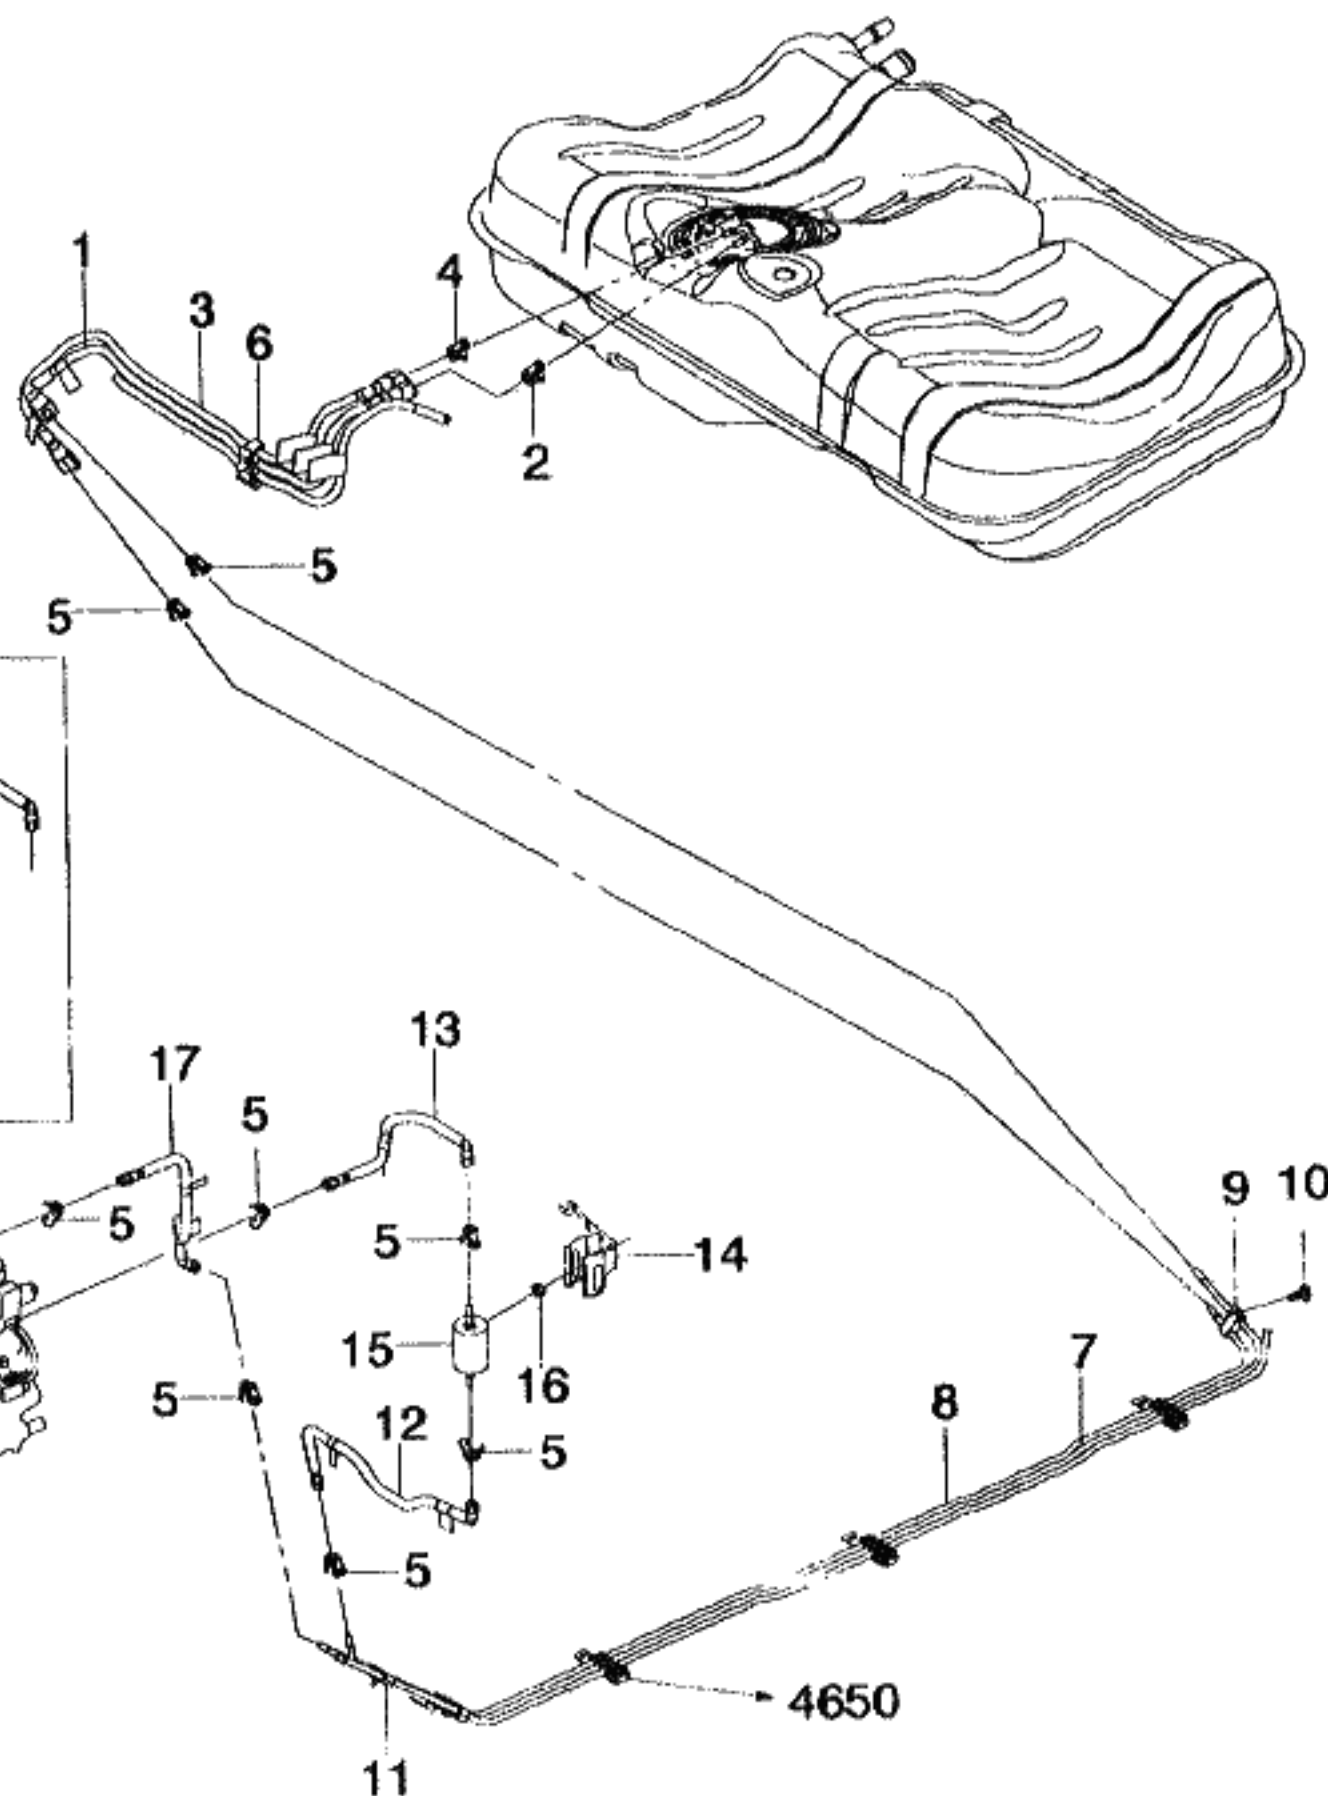


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[10] 09138-06027	(E)SCREW-MACHINE (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	1				
	[11] 09408-00046	(E)CLIP (D)KLEMME	S	S		(F)ATTACHE (S)GRAPA	1				
	[12] 96181951	(E)TUBE-FEEDING, FILTER RR (D)TUYAU	S	S		(F)ROHRLEITUNG (S)TUBO	1			INCL.#5	
	[13] 96181949 96181952	(E)TUBE-FEEDING, FILTER FR (D)TUYAU	S			(F)ROHRLEITUNG (S)TUBO	1			INCL.#5	
			O	S	&L88		1			INCL.#5	
	[14] 96352261	(E)BRACKET A-FUEL FILTER (D)TRÄGER	S	S		(F)SUPPORT (S)SOPORTE	1				
	[15] 25121074	(E)FILTER-FUEL (D)FILTER, BENZIN	S	S		(F)FILTRE-CARBURANT (S)FILTRO-COMBUSTIBLE	1				
	[16] 09159-06001	(E)NUT (D)MUTTER	S	S		(F)ECROU (S)TUERCA	1				
	[17] 96181953 96351091	(E)TUBE-RETURN,FR (D)TUYAU	S			(F)ROHRLEITUNG (S)TUBO	1			INCL.#5	
			O	S	&L88		1			INCL.#5	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

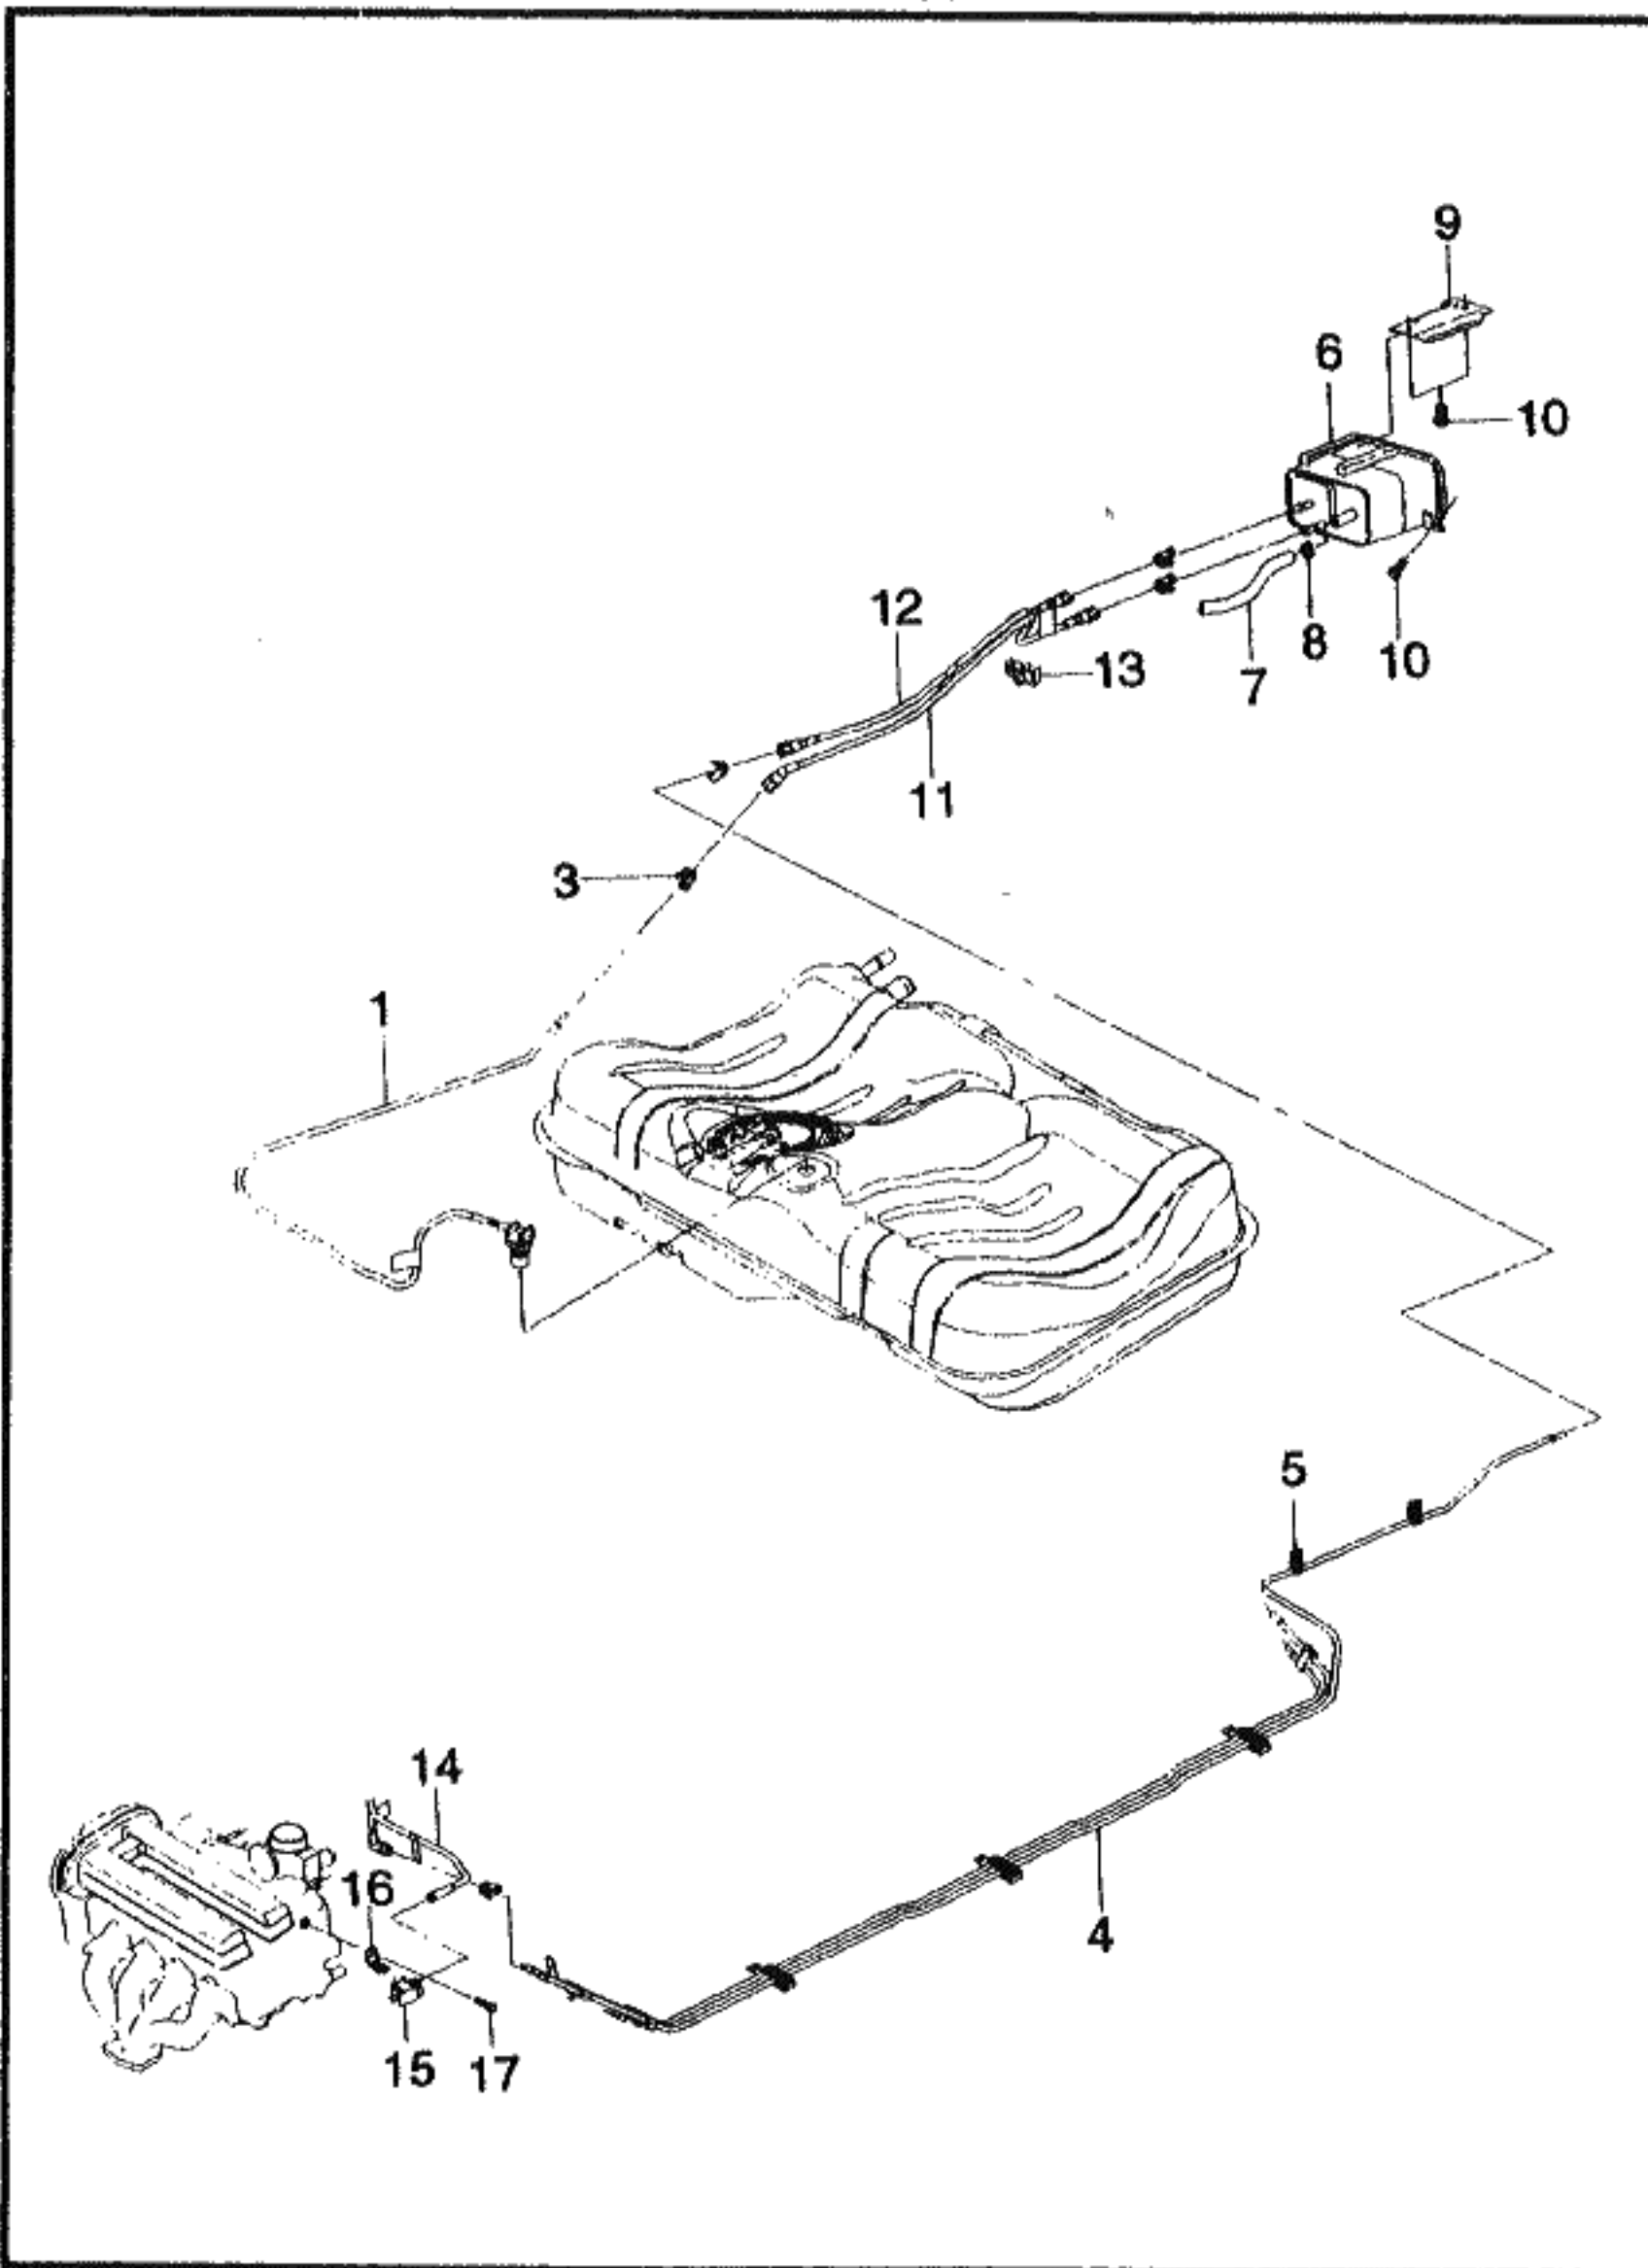

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96351553	(E)TUBE A-VAPOR,RETURN VLV (D)TUYAU	S	S		(F)ROHRLEITUNG (S)TUBO	1				
	[03] HP-9P-86020	(E)RETAINER (D)FEDERUNG	S	S		(F)RESSORT (S)RETENEDOR	A			5/16inch	
	[04] 96183686 96352585	(E)PIPE-PURGE,INTERM (D)ROHR,AUSSTOß	S	S	-XBR A A &XBR	(F)TUYAU-PURGE (S)TUBERIA-PURGAR	1 1				
	[05] 09408-00045	(E)CLIP (D)KLEMME	S	S		(F)ATTACHE (S)GRAPA	2				
	[06] 96181415	(E)CANISTER A (D)KANISTER,BENZIN-DAMPF	S	S		(F)BOITE-VAPEURS CARBURANT (S)BOTE-COMBUSTIBLE Y VAPOR	1			0.85L	
	[07] 96351958	(E)HOSE-AIR VENT CANISTER (D)SCHLAUCH,KANISTER	S	S		(F)TUYAU-VENTILATION BOITE (S)MANGUERA	1				
	[08] 09401-15403	(E)CLIP (D)KLEMME	S	S		(F)ATTACHE (S)GRAPA	1				
	[09] 96184721	(E)BRACKET-GUIDE,CANISTER (D)TRÄGER,KANISTER	S	S		(F)SUPPORT-BOITE METALLIQUE (S)SOPORTE-BOTE	1				
	[10] 09138-06027	(E)SCREW-MACHINE (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	3				
	[11]	(E)TUBE-VAPOR,CANISTER (D)TUYAU				(F)ROHRLEITUNG (S)TUBO					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

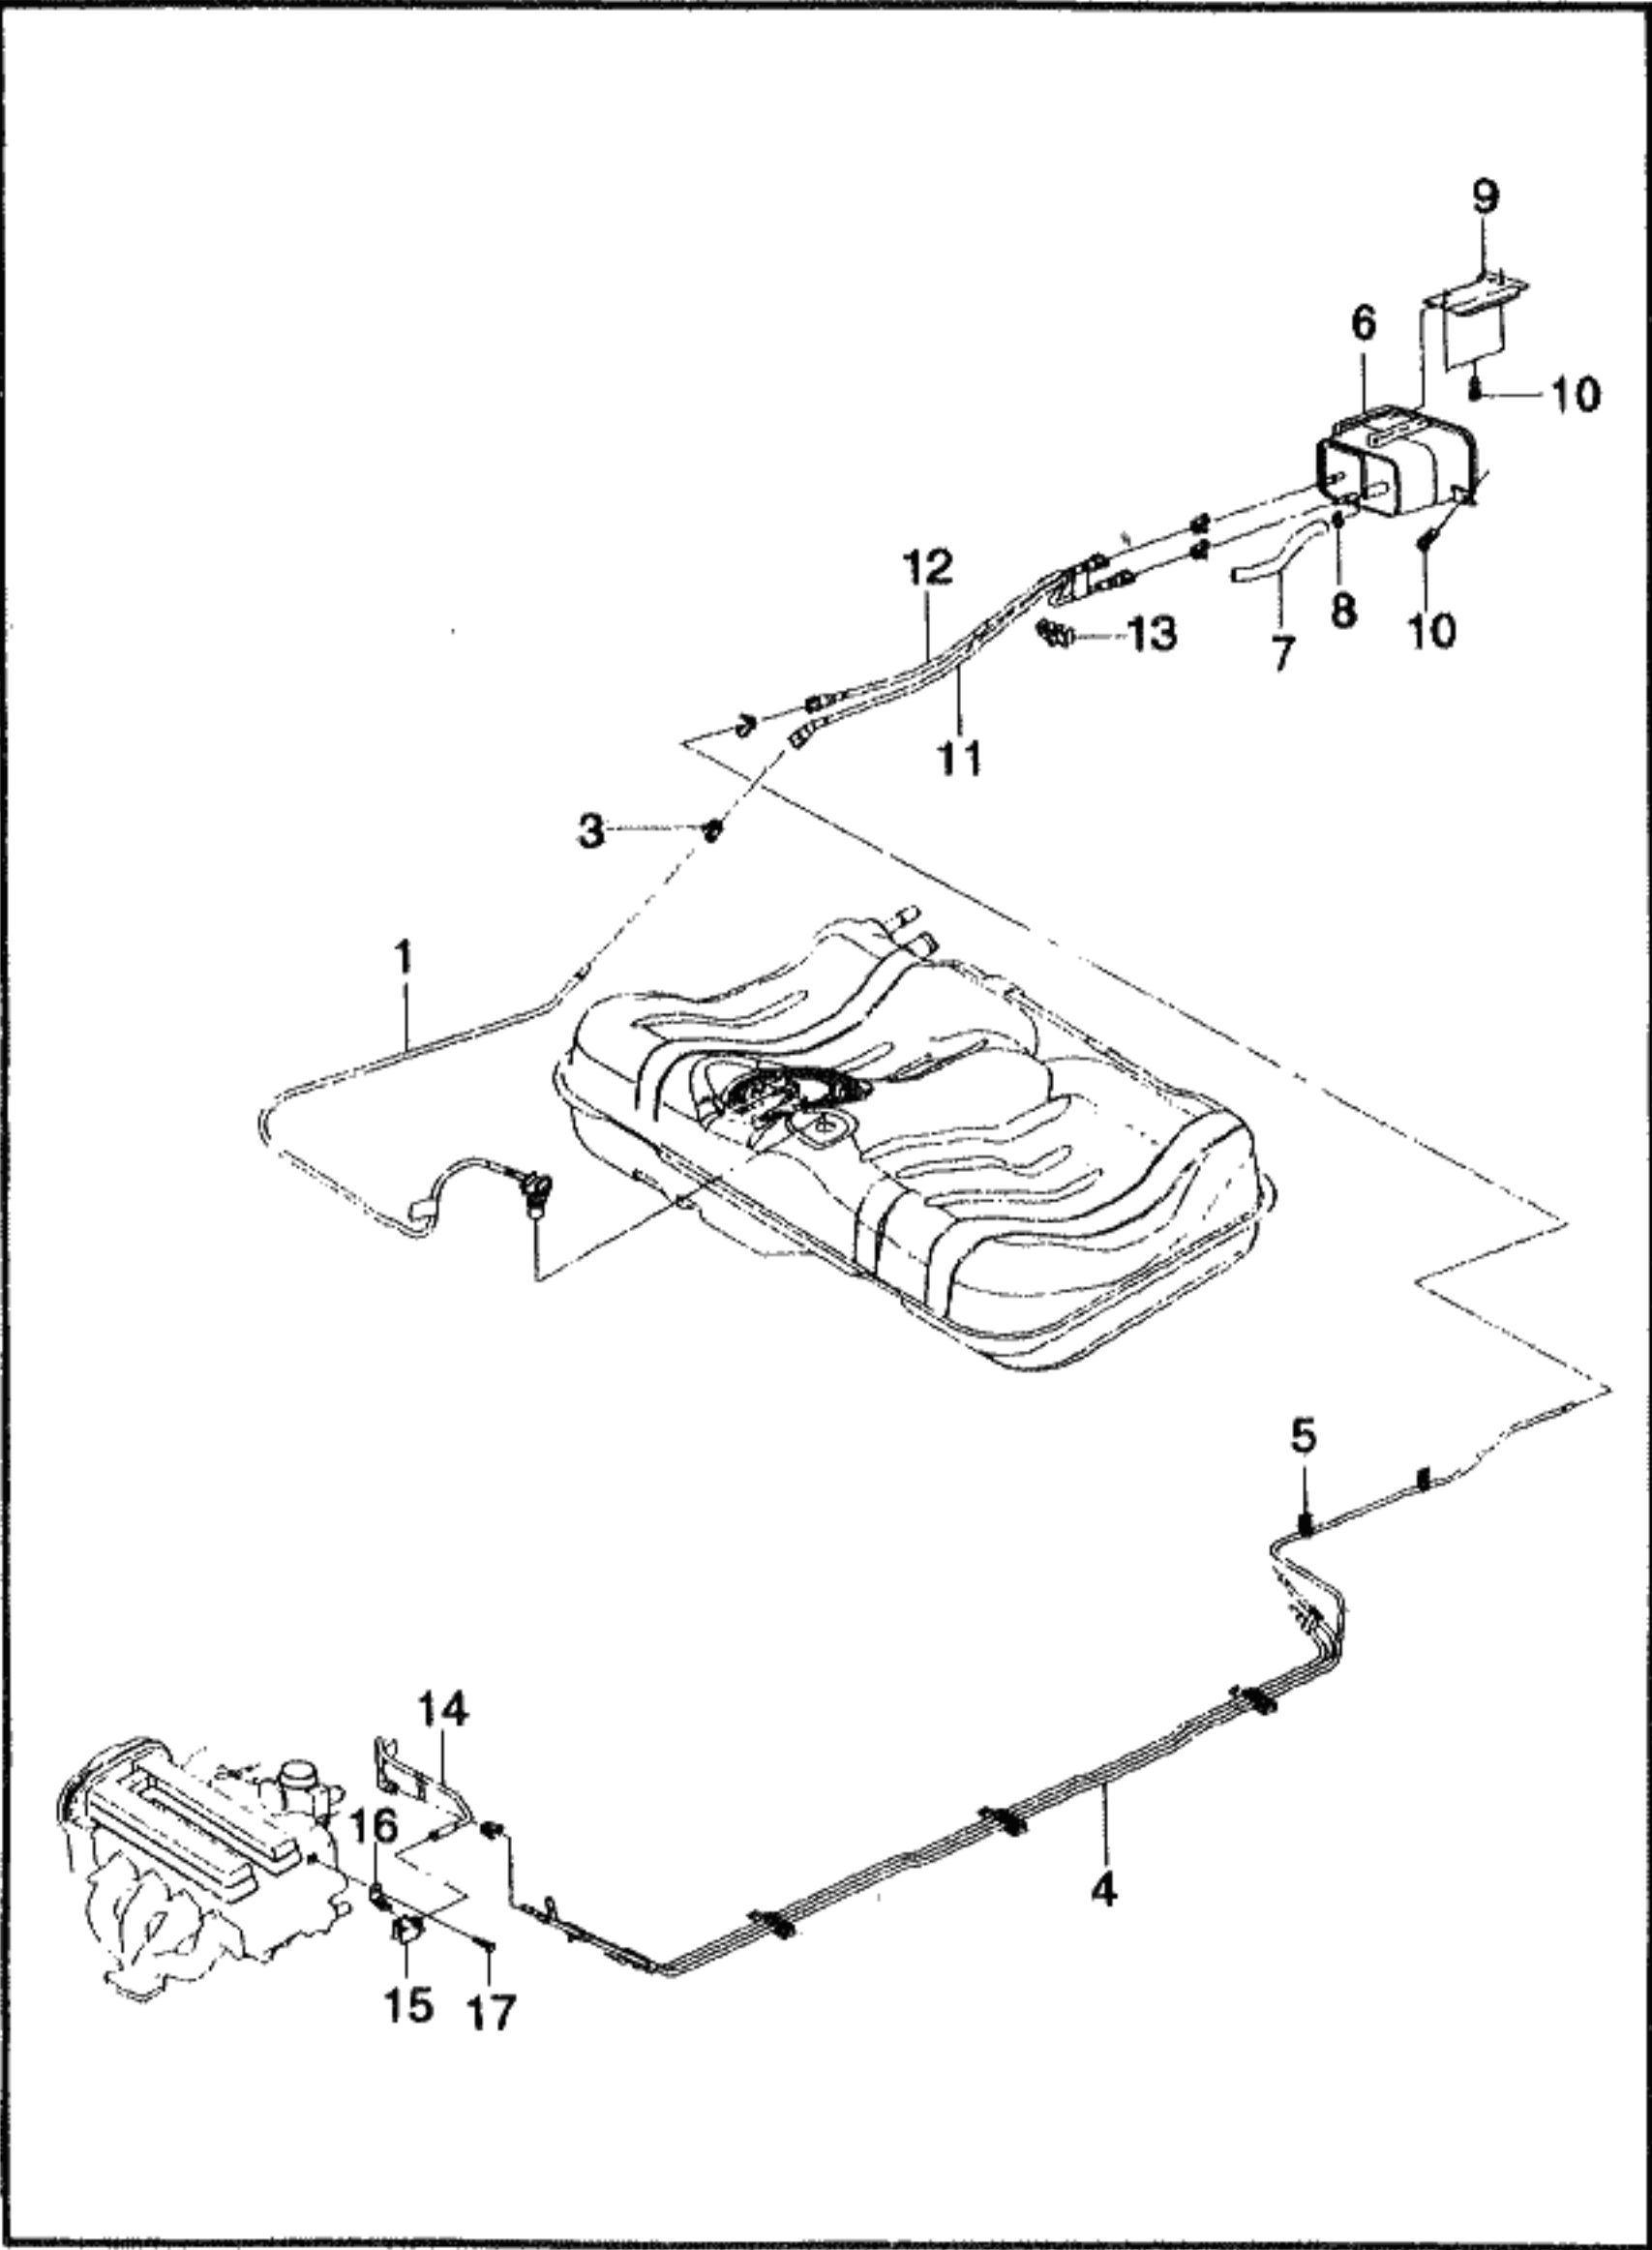


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96183700	.	S	S		1				INCL.#3	
	[12]		(E)TUBE-PURGE,RR			(F)TUYAU OU TUBE					
			(D)ROHRLEITUNG			(S)TUBO					
	96181955	.	S	S		1				INCL.#3	
	[13]		(E)CLIP			(F)ATTACHE					
			(D)KLEMME			(S)GRAPA					
	09408-00047	.	S	S		1					
	[14]		(E)TUBE A-PURGE,FR			(F)TUYAU OU TUBE					
			(D)ROHRLEITUNG			(S)TUBO					
	96351558	.	S	.		1				INCL.#3	
	96351554	.	O	S & L88		1				INCL.#3	
	[15]		(E)VALVE-PCV			(F)SOUPAPE					
			(D)VENTIL			(S)VALVULA					
	96311368	.	S	.		1					
	1997210	.	O	S & L88		1					
	[16]		(E)BRACKET-PCV			(F)SUPPORT					
			(D)TRÄGER			(S)SOPORTE					
	90466271	.	S	.		1					
	92063158	.	O	S & L88		1					
	[17]		(E)BOLT			(F)BOULON					
			(D)SCHRAUBE			(S)PERNO					
	11093971	.	S	.		1					
	11042402	.	O	S & L88		1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

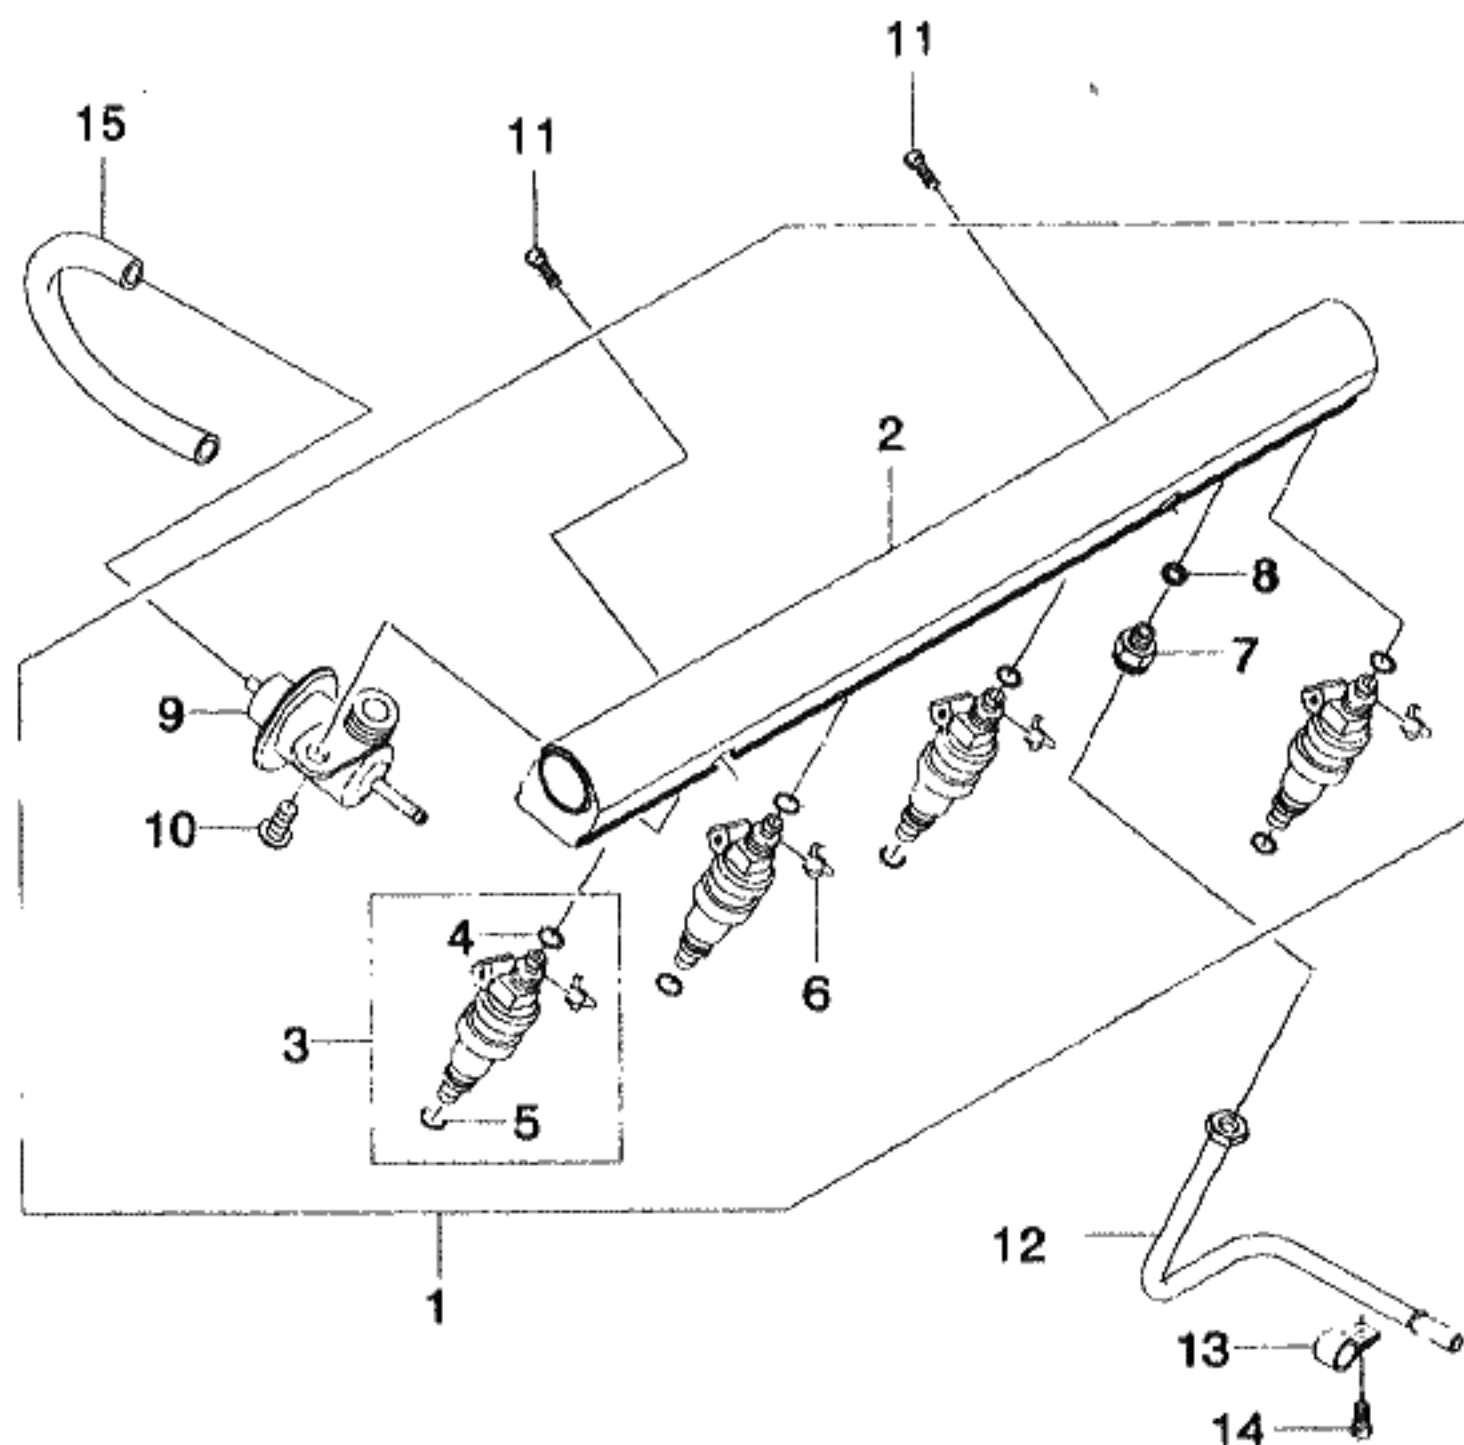


KEY NO.			PART NAME							
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL				FROM	TO		
			S X							
	[01] 96184418	(E)RAIL A-FUEL (D)SCHIENE,BENZIN . S .			(F)RAIL-CARBURANT (S)RIEL-COMBUSTIBLE 1					
	[02] 96130278	(E)RAIL A-FUEL (D)SCHIENE,BENZIN . S .			(F)RAIL-CARBURANT (S)RIEL-COMBUSTIBLE 1					
	[03] 17120262	(E)INJECTOR A-FUEL (D)EINSPRITZE,BENZIN . S .			(F)INJECTEUR-CARBURANT (S)INYEctor-COMBUSTIBLE 4					
	[04] 05235032	(E)O RING-INJECTOR TO FUEL (D)O RING . S .			(F)JOINT TORIQUE-INJECTEUR (S)ANILLO EN O-INYEctor 4					
	[05] 17108225	(E)O RING (D)O RING,EINSPRITZER . S .			(F)JOINT TORIQUE-INJECTEUR (S)ANILLO EN O-INYEctor 4					
	[06] 17101829	(E)CLIP-FUEL INJECTOR (D)KLEMME . S .			(F)ATTACHE (S)GRAPA 4					
	[07] 96130610	(E)CONNECTOR-FUEL RAIL (D)VERBINDUNG . S .			(F)CONNECTEUR (S)CONECTOR 1					
	[08] 17075288	(E)GASKET-FUEL FITTING (D)DICHTUNG . S .			(F)JOINT (S)JUNTA 1					
	[09] 96184231	(E)REGULATOR-PRESSURE (D)REGULATOR . S .			(F)REGULATEUR (S)REGULADOR 1					
	[10] 9034906100	(E)SCREW-REGULATOR (D)SCHRAUBE . S .			(F)VIS (S)TORNILLO 1					

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON


2212 FUEL INJECTION(2.0SOHC)

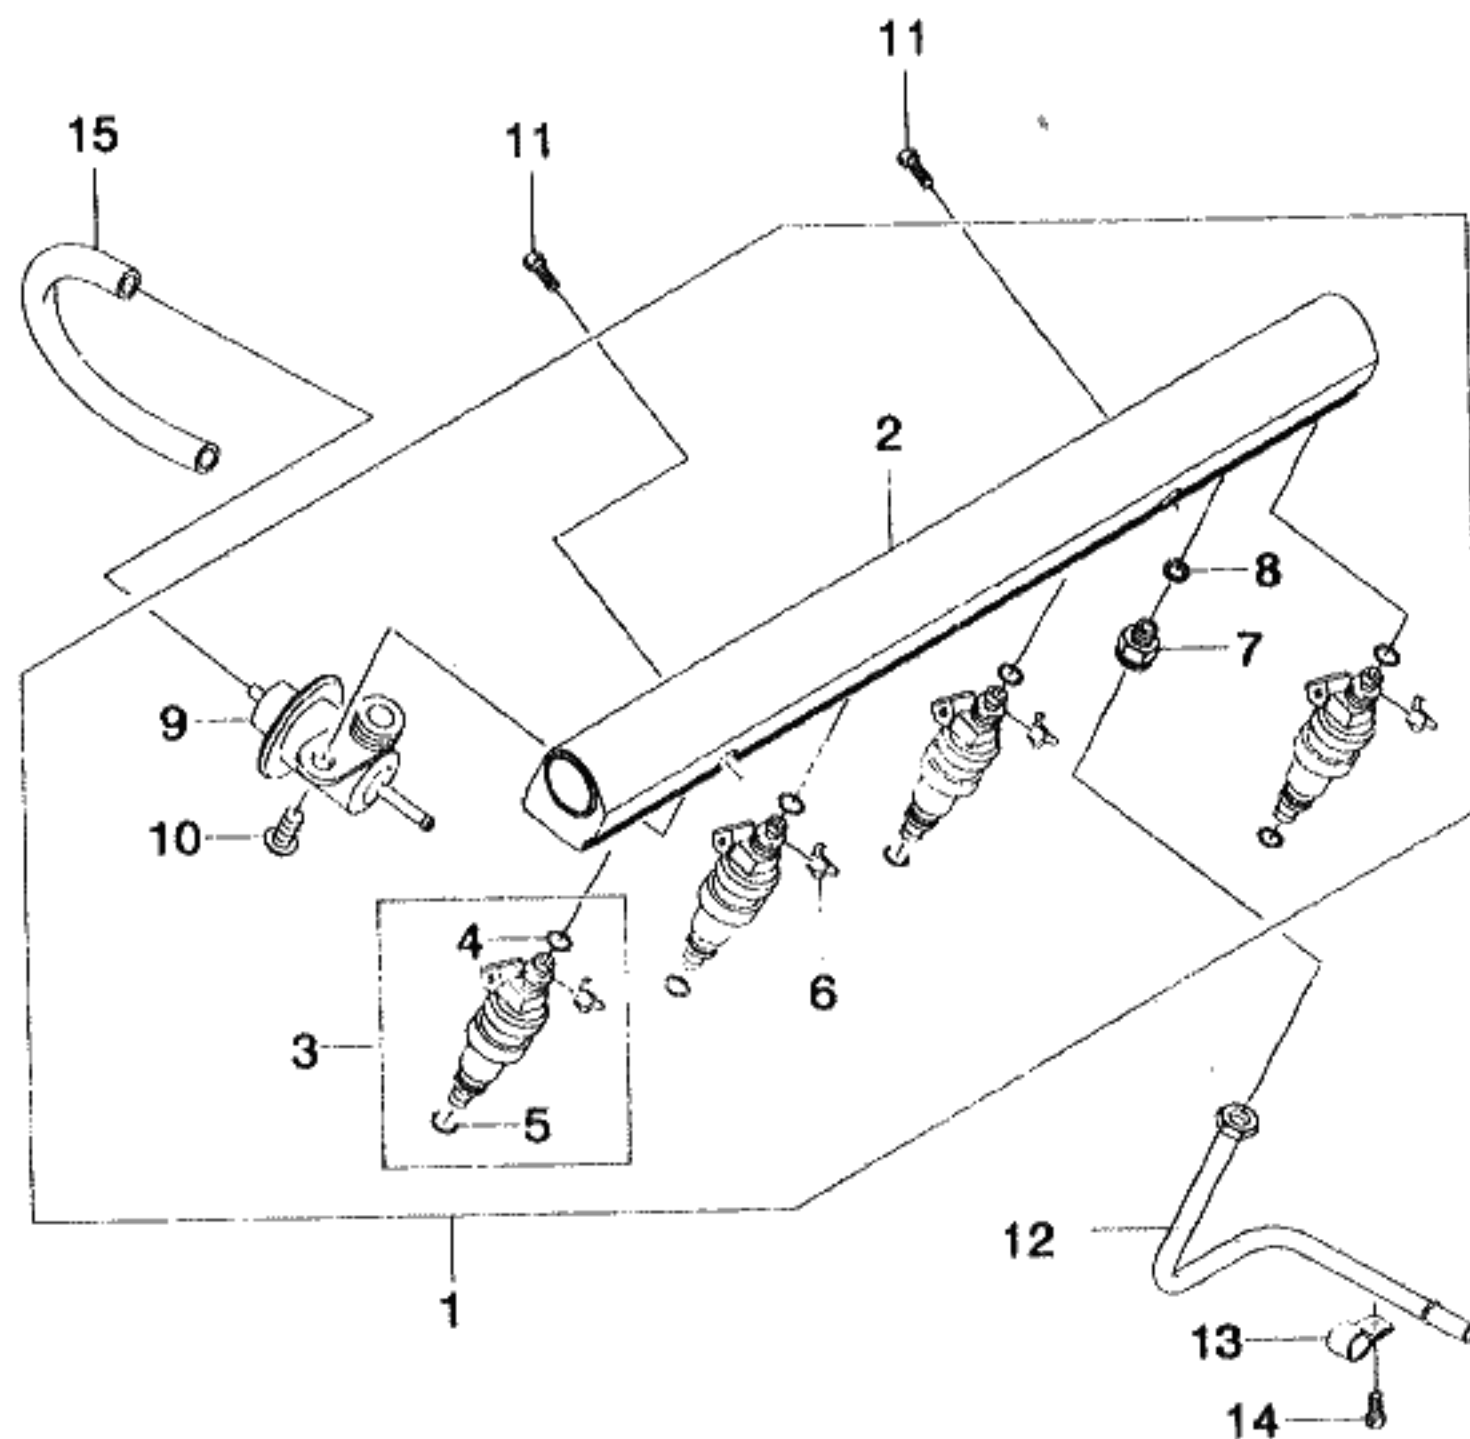


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] 92060795	(E)SCREW (D)SCHRAUBE	S			(F)VIS (S)TORNILLO	2					
	[12] 96183312	(E)PIPE A-ADAPTOR FEEDING (D)ROHR	S			(F)TUYAU (S)TUBERIA	1					
	[13] 9095248220	(E)CLIP-PIPE (D)KLEMME	S			(F)ATTACHE (S)GRAPA	1					
	[14] 01130-06129	(E)BOLT-FULE PIPE (D)SCHRAUBE	S			(F)BOULON (S)PERNO	1					
	[15] 92063752	(E)HOSE-REGULATOR VACUUM (D)SCHLAUCH,DROSSEL KÖRPER	S			(F)TUYAU (S)MANGUERA	1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

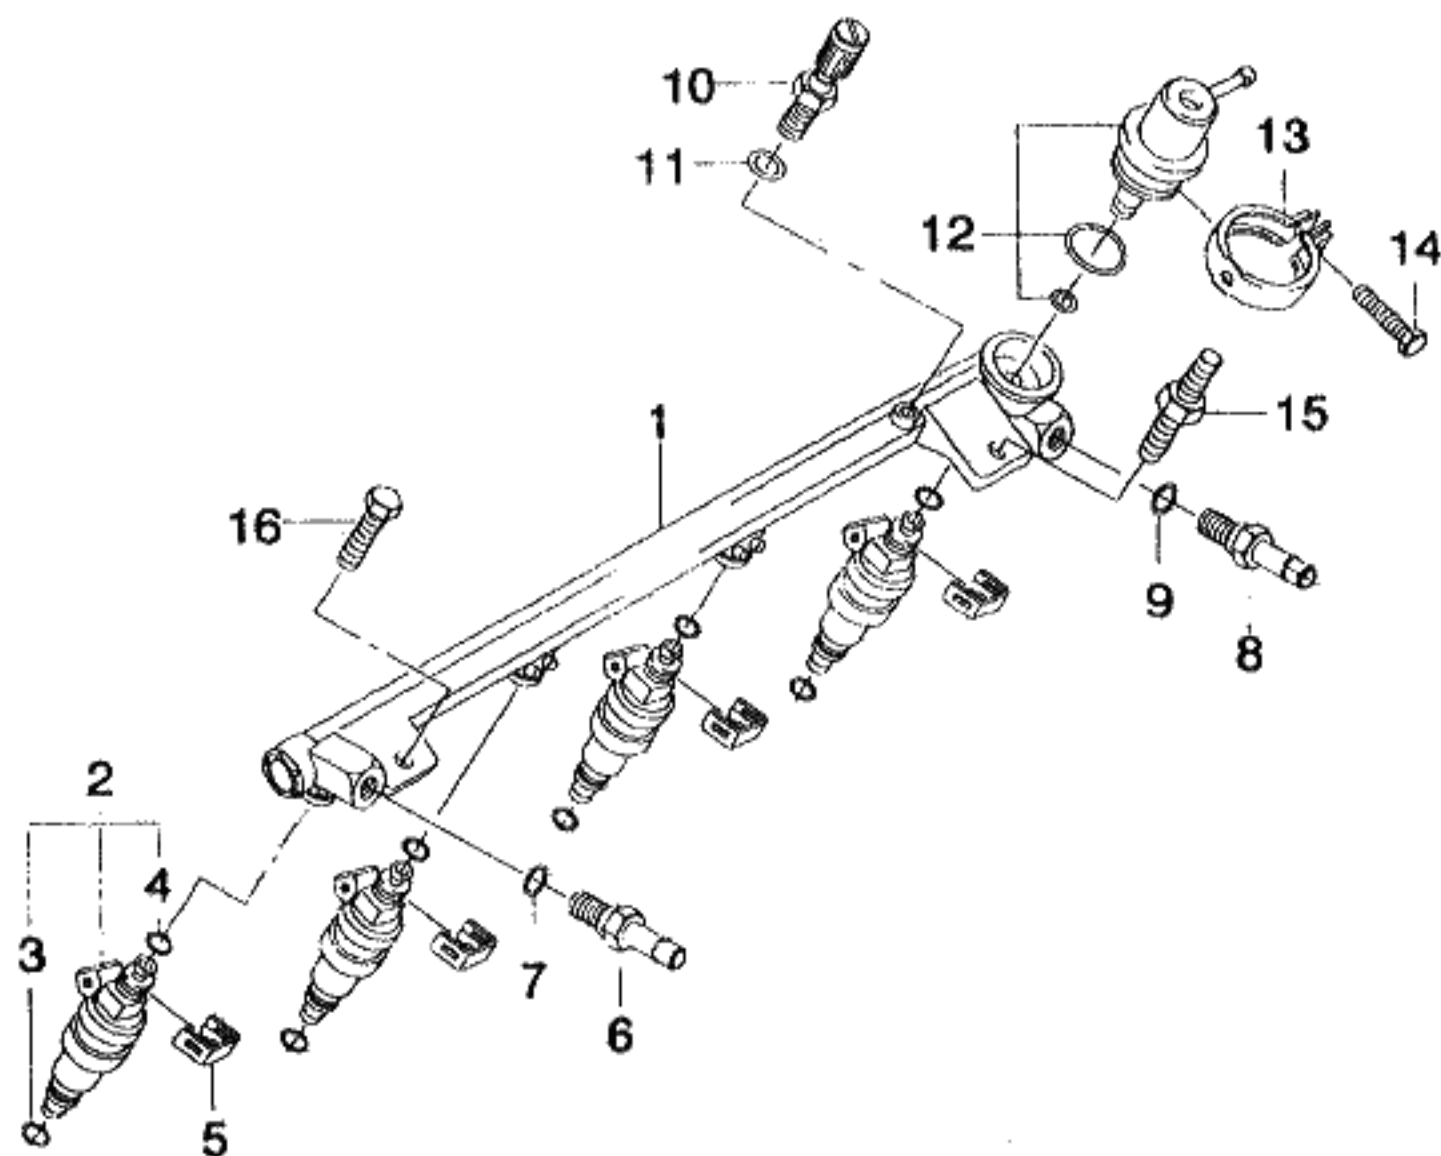

KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]	90411551		S	(E)RAIL-FUEL (D)SCHIENE,BENZIN		1			(F)RAIL-CARBURANT (S)RIEL-COMBUSTIBLE	
[02]	17120683 17125694D		S A	(E)INJECTOR A-FUEL (D)EINSPRITZE,BENZIN		4 4			(F)INJECTEUR-CARBURANT (S)INJECTOR-COMBUSTIBLE	
[03]	17108225		S	(E)O RING (D)DICHTUNG		4			(F)JOINT (S)SELLO	
[04]	05235032		S	(E)O RING-INJECTOR TO FUEL (D)O RING		4			(F)JOINT TORIQUE-INJECTEUR (S)ANILLO EN O-INJECTOR	
[05]	92062876		S	(E)CLIP-INJECTOR (D)KLEMME		4			(F)ATTACHE (S)GRAPA	
[06]	92063008		S	(E)CONNECTOR-FUEL FEED (D)VERBINDUNG		1			(F)CONNECTEUR (S)CONECTOR	
[07]	11066422		S	(E)SEAL-FUEL FEED CONNECTOR (D)DICHTUNG		1			(F)JOINT (S)SELLO	
[08]	92063009		S	(E)CONNECTOR-FUEL RETURN (D)VERBINDUNG		1			(F)CONNECTEUR (S)CONECTOR	
[09]	11056391		S	(E)SEAL-FUEL RETURN CONNECT (D)DICHTUNG		1			(F)JOINT (S)SELLO	
[10]			S	(E)VALVE-PRESSURE RELIEF (D)VENTIL,HOCHDRUCK LÖSUNG		1			(F)SOUPAPE (S)VALVULA	
		LEVEL			T/A(TRANSAXLE)					
		S X = 2.0 SOHC CDX = 2.0 DOHC			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

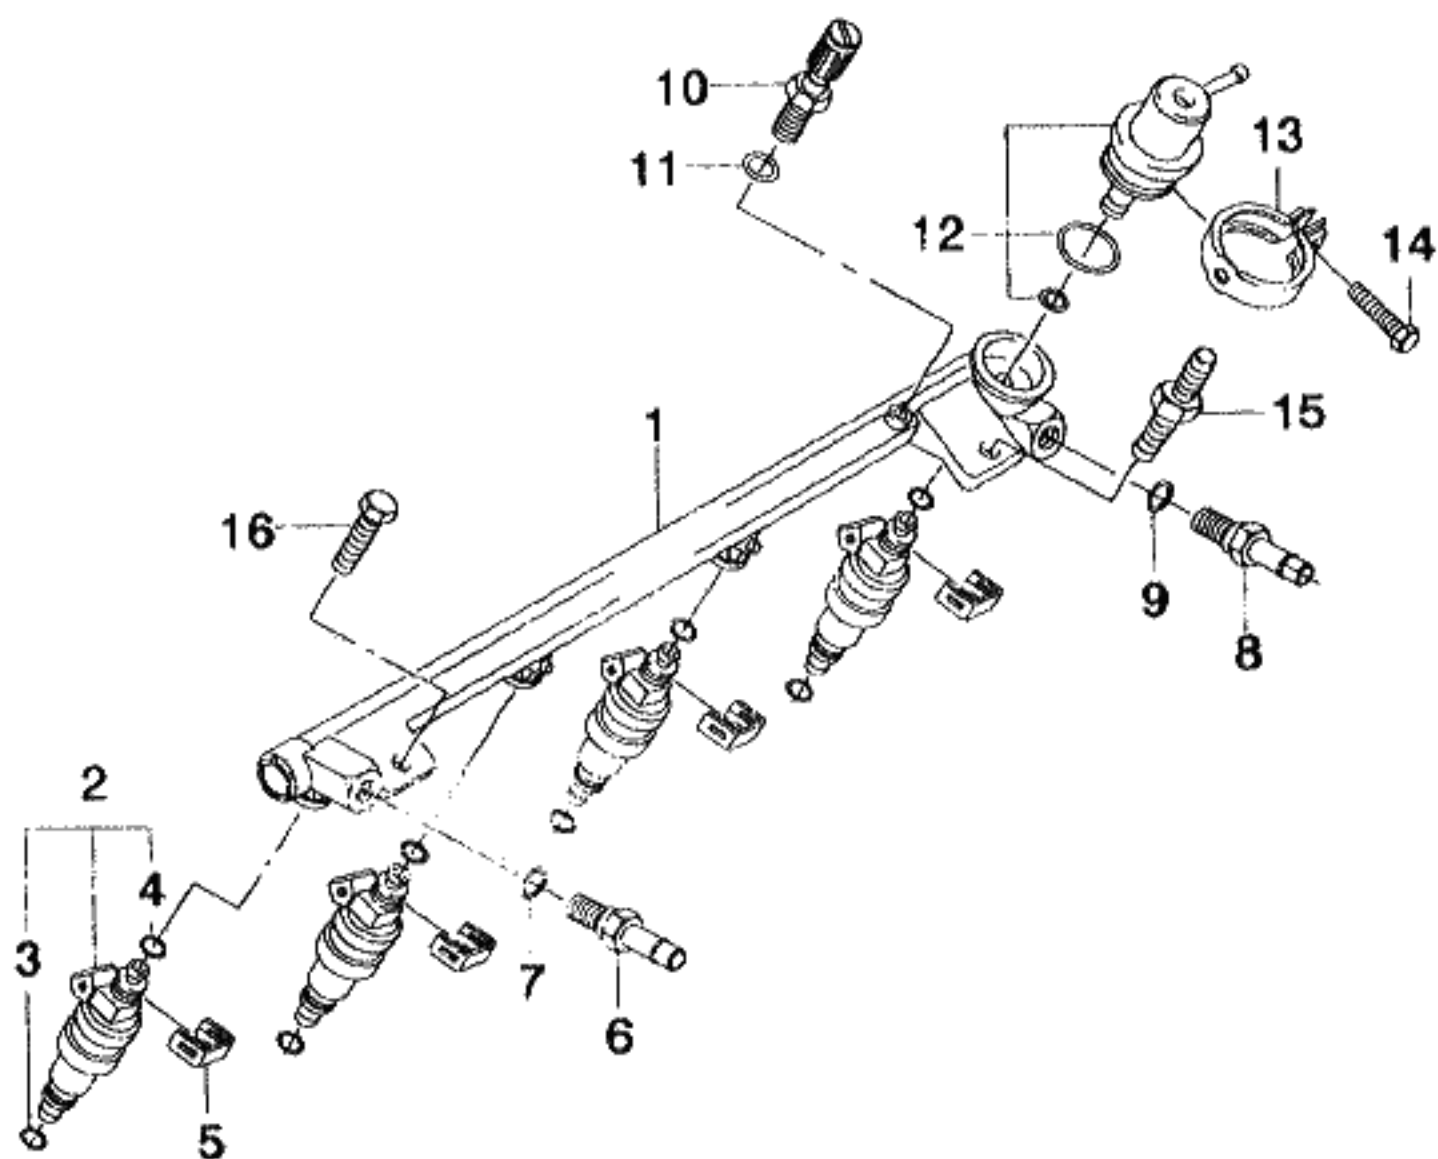


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	90448751	.	O	S			1				
	[11]				(E)WASHER-VALVE (D)DICHTUNGSRING		(F)RONDELLE (S)ARANDELA				
	90354618	.	O	S			1				
	[12]				(E)REGULATOR A-FUEL PRESSURE (D)REGULATOR,BENZIN DRUCK		(F)REGULATEUR (S)REGULADOR				
	90411542	.	O	S			1				
	[13]				(E)CLAMP-REGULATOR (D)KLAMMER		(F)PINCE (S)ABRAZADERA				
	90469475	.	O	S			1				
	[14]				(E)SCREW-CLAMP (D)SCHRAUBE		(F)VIS (S)TORNILLO				
	11097861	.	O	S			1				
	[15]				(E)STUD-FUEL RAIL (D)STEG		(F)TOURILLON (S)TRAVESAÑO				
	90325554	.	O	S			1				
	[16]				(E)SCREW (D)SCHRAUBE		(F)VIS (S)TORNILLO				
	11055137	.	O	S			1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

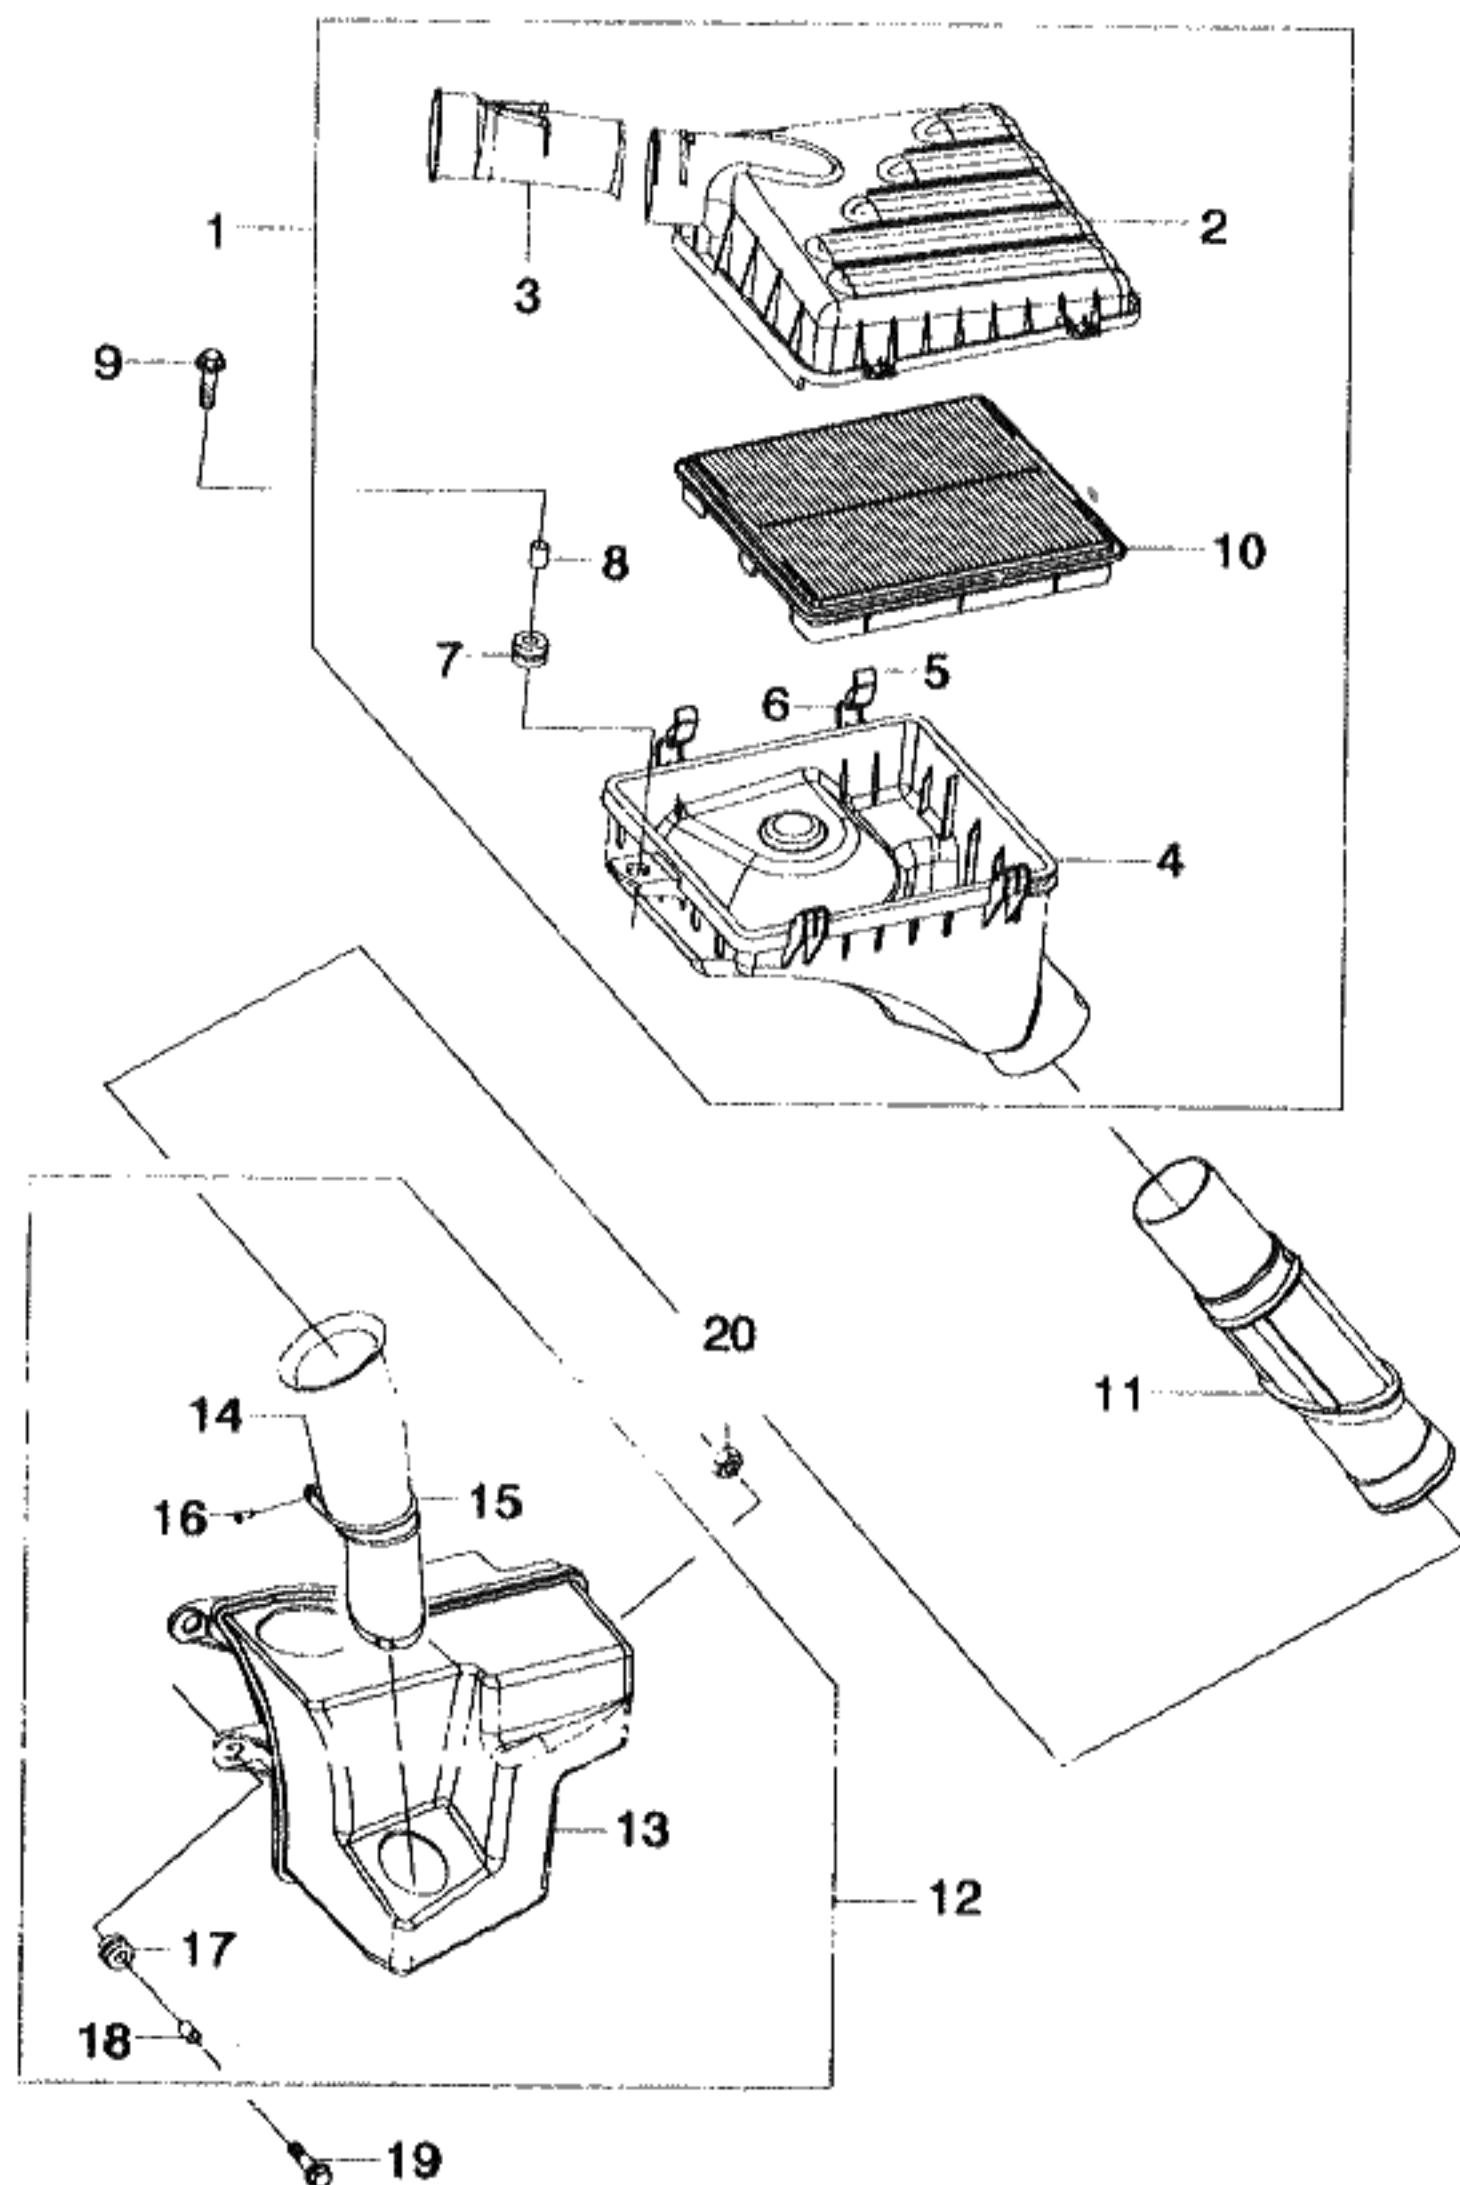


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]	96181454	.	S S	(E) CLEANER A-AIR (D) LUFTREINIGUNG		1			(F) PURIFICATEUR D'AIR (S) FILTRO DEL AIRE	
[02]	96181509	.	S S	(E) BODY-AIR CLEANER, UPPER (D) KAROSSERIE, LUFTREINIGUNG		1			(F) CORPS-PURIFICATEUR D'AIR (S) CARROCERIA-FILTRO DE AIRE	
[03]	96184828	.	S S	(E) JOINT-AIR CLEANER HOSE (D) GLIED		1			(F) JOINT (S) UNION	
[04]	96181510	.	S S	(E) BODY-AIR CLEANER, LOWER (D) KAROSSERIE, LUFTREINIGUNG		1			(F) CORPS-PURIFICATEUR D'AIR (S) CARROCERIA-FILTRO DE AIRE	
[05]	17219PR33000	.	S S	(E) CLIP (D) KLEMME		2		970708	(F) ATTACHE (S) GRAPA	
[06]	Y 96255753	.	S S	(E) CLIP WIRE (D) KLEMME		2		970709	(F) ATTACHE (S) GRAPA	
[07]	17217PY33000	.	S S	(E) ISOLATOR-AIR CLEANER (D) ISOLATOR, LUFTREINIGUNG		2		970708	(F) ISOLATEUR-FILTRE A AIR (S) AISLADOR-FILTRO DEL AIRE	
[08]	96303067 96351042	.	S S	(E) SPACER-ISOLATOR (D) DISTANZSTÜCK, ISOLATOR		2			(F) ENTRETOISE-ISOLATEUR (S) ESPACIADOR-AISLADOR	NOT APPLIED
[09]	96300905	.	S S	(E) BOLT-W/WASHER (D) SCHRAUBE		2			(F) BOULON (S) PERNO	
	09116-06014	.	S S			2				
LEVEL					T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A = COMMON					



2410 AIR INTAKE SYSTEM(I)

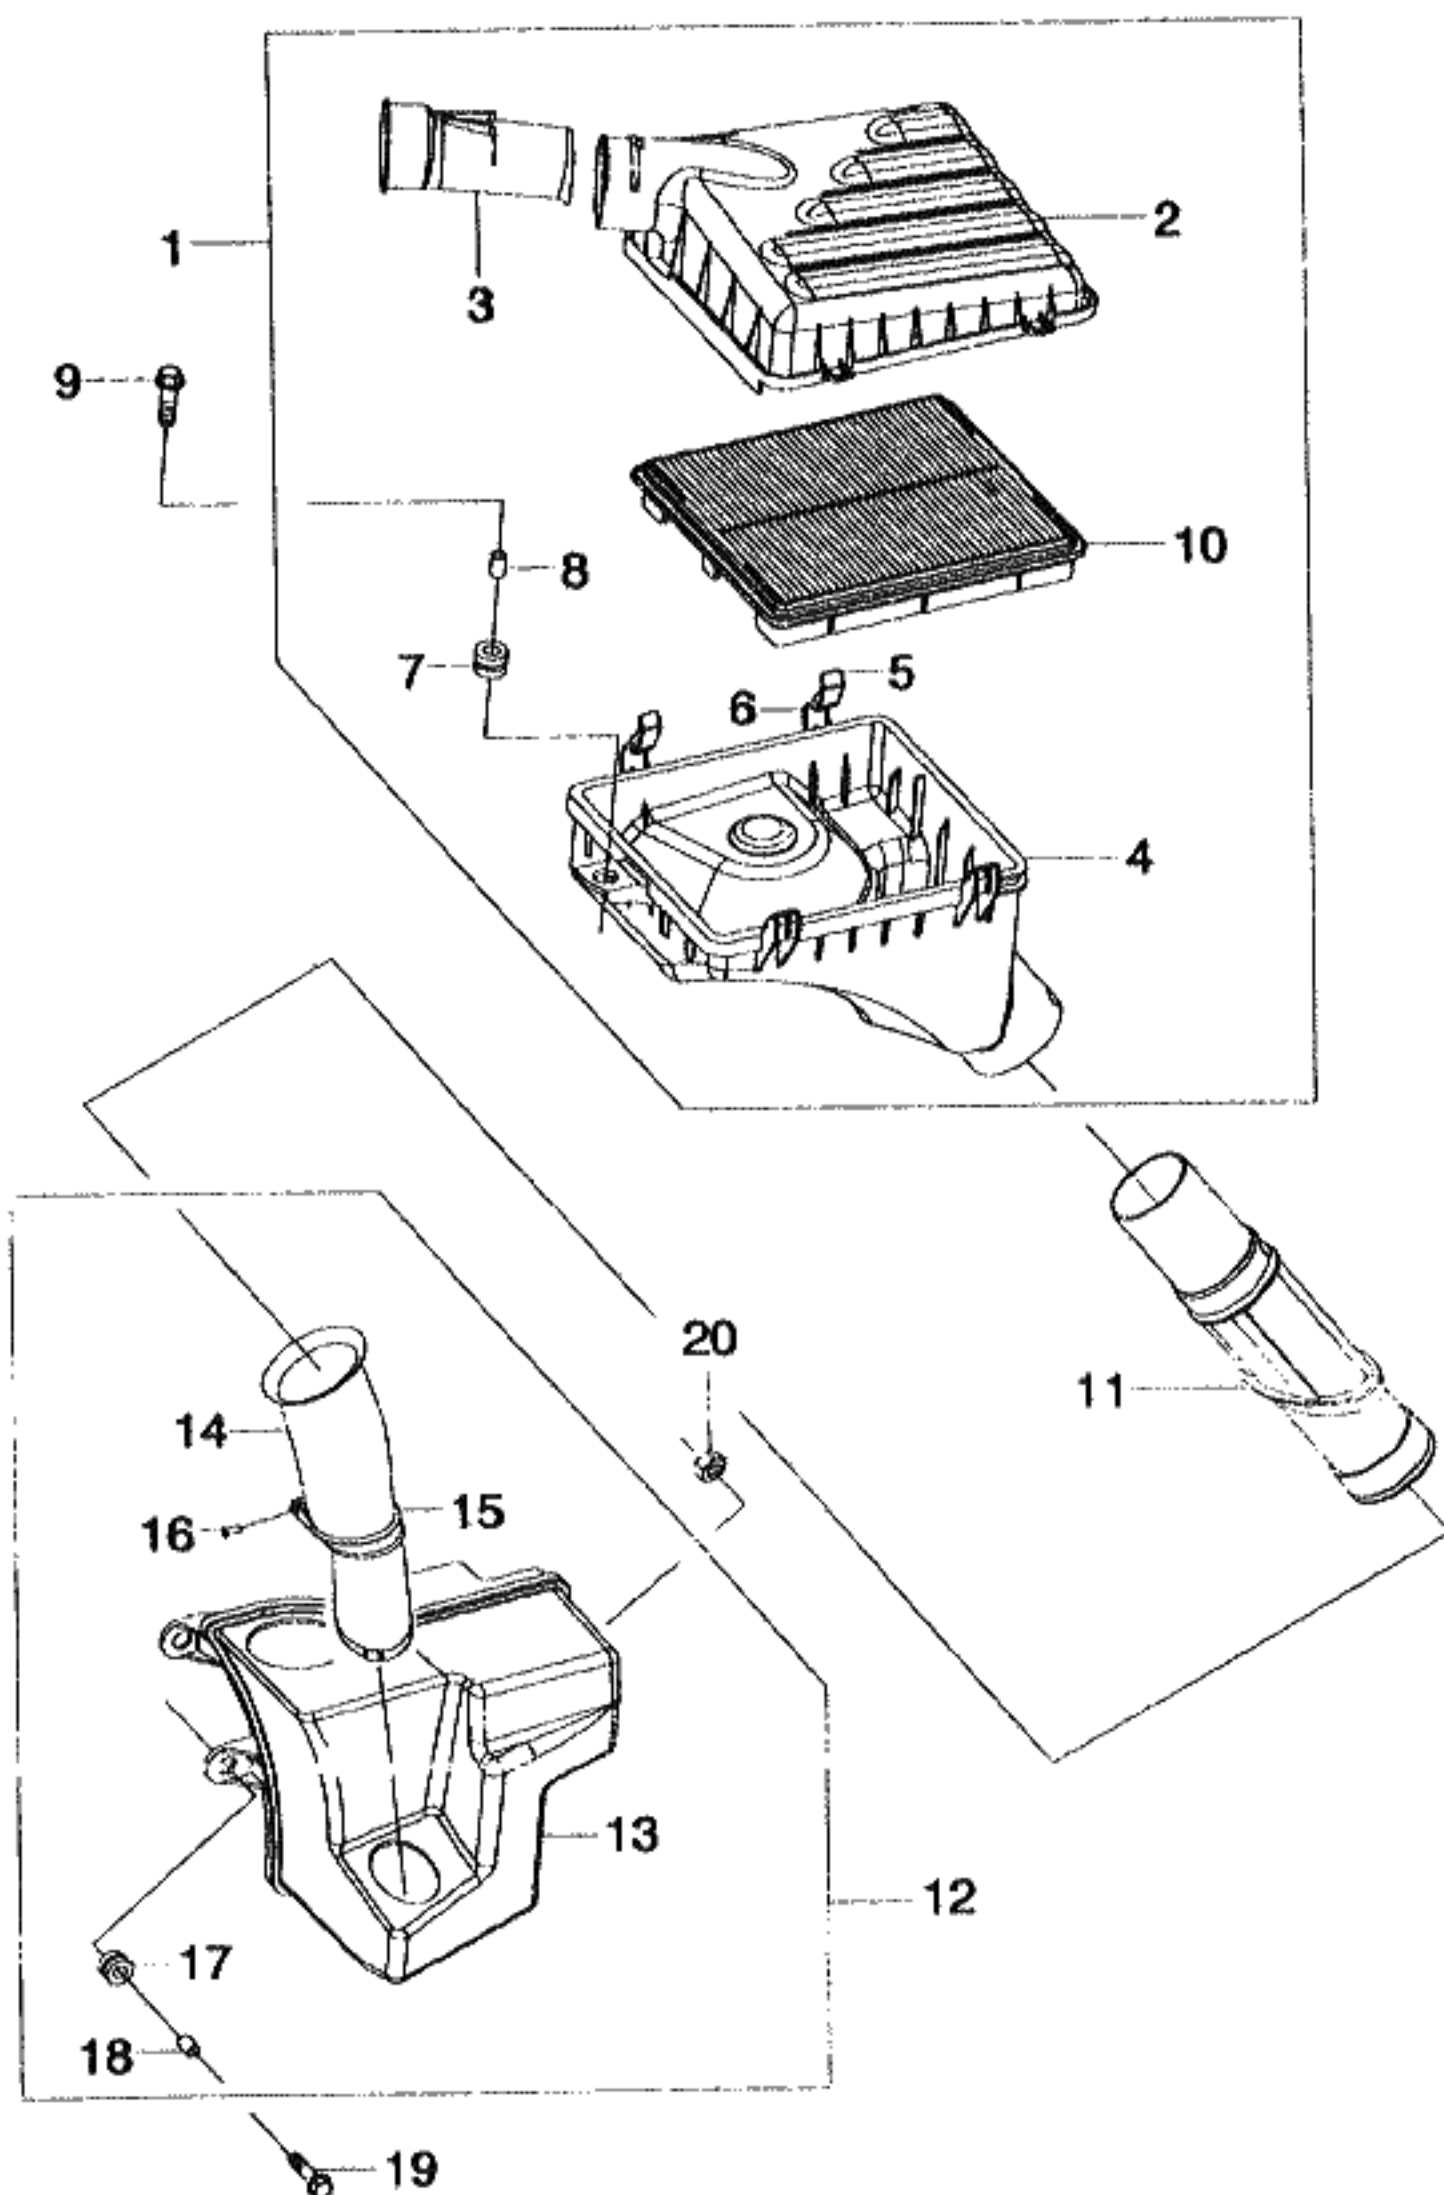



KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10]	(E)ELEMENT A-AIR CLEANER (D)ELEMENT,LUFTREINUGUNG					(F)ELEMENT-FILTRE A AIR (S)ELEMENTO-FILTRO DEL AIRE					
	96351225	S	S				1					
	[11]	(E)HOSE A-AIR CLEANER,INLET (D)SCHLAUCH,LUFTREINIGUNG					(F)TUYAU-FILTRE A AIR, SORTIE (S)MANGUERA-FILTRO DE AIRE					
	96184829	S	S				1					
	[12]	(E)RESONATOR A (D)RESONATOR					(F)RESONATEUR (S)RESONADOR					
	96181460	S	S				1					
	[13]	(E)RESONATOR (D)RESONATOR					(F)RESONATEUR (S)RESONADOR					
	96181520	S	S				1					
	[14]	(E)SNORKEL-AIR CLEANER (D)SCHLAUCH					(F)TUYAU (S)MANGUERA					
	96181457	S	S				1					
	[15]	(E)CLIP-RESONATOR (D)KLEMME					(F)ATTACHE (S)GRAPA					
	96351677	S	S				1					
	[16]	(E)SCREW-CR MACHINE (D)SCHRAUBE					(F)VIS (S)TORNILLO					
	02146-05165	S	S				2					
	[17]	(E)ISOLATOR-AIR CLEANER (D)ISOLATOR,LUFTREINIGUNG					(F)ISOLATEUR-FILTRE A AIR (S)AISLADOR-FILTRO DEL AIRE					
	96351042	S	S				3					
	[18]	(E)SPACER-ISOLATOR (D)DISTANZSTÜCK,ISOLATOR					(F)ENTRETOISE-ISOLATEUR (S)ESPACIADOR-AISLADOR					
	96300905	S	S				3					
	[19]	(E)BOLT-W/WASHER (D)SCHRAUBE					(F)BOULON (S)PERNO					
	09116-06014	S	S				2					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

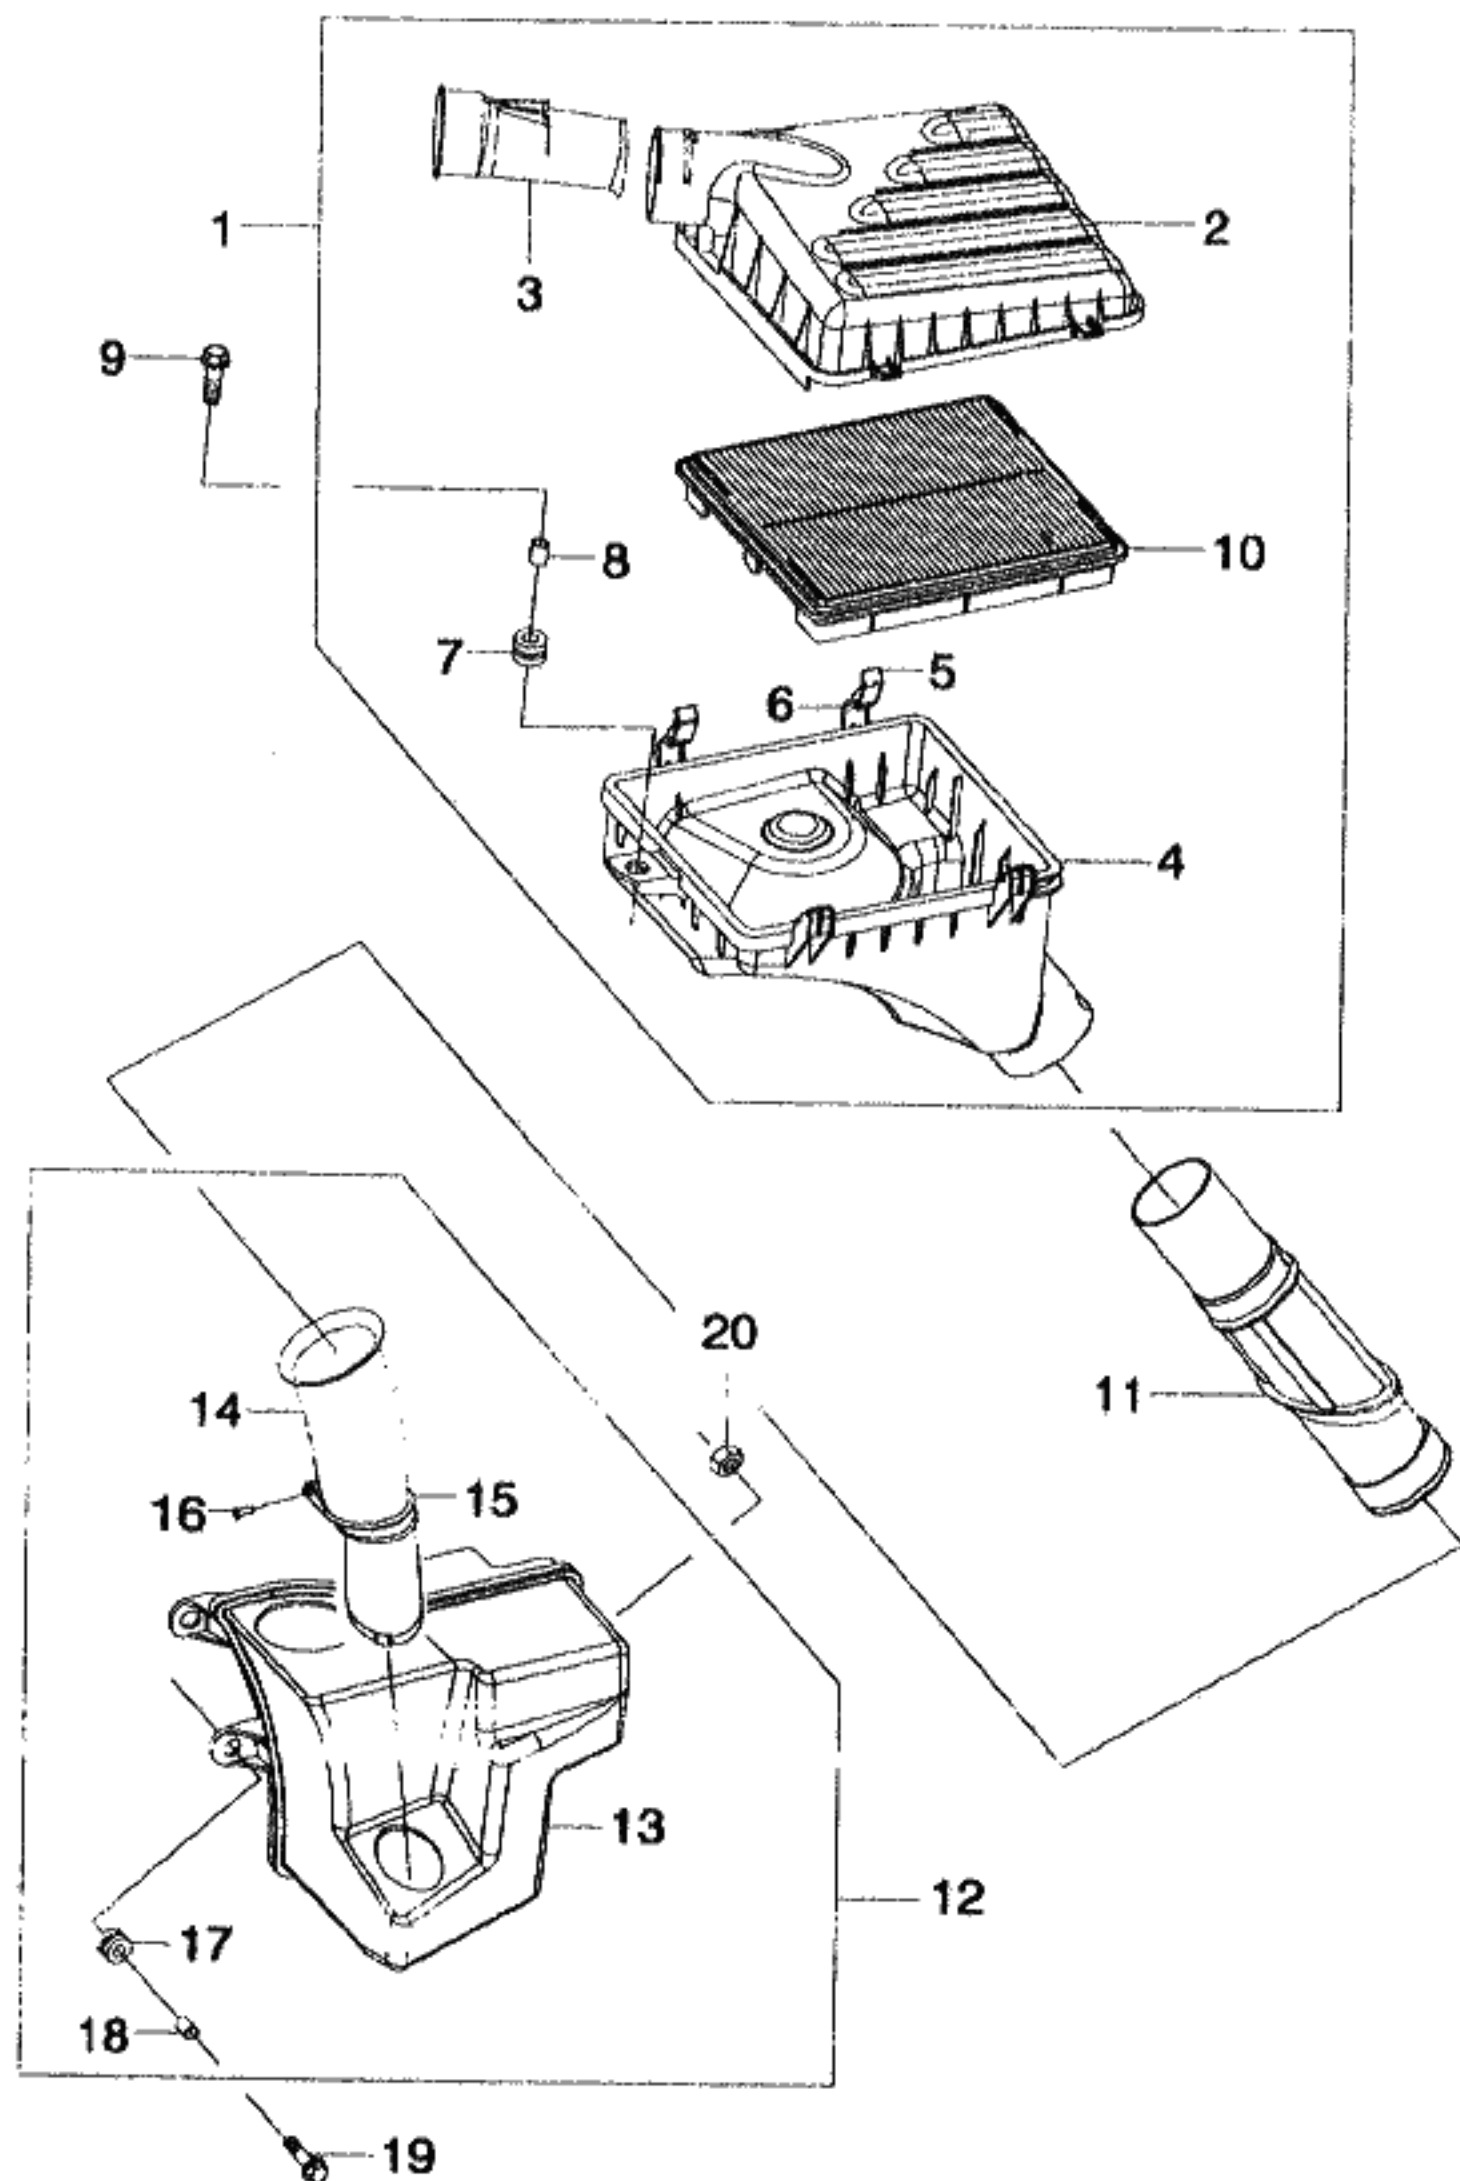


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20] 09159-06001	(E)NUT (D)MUTTER . S S					(F)ECROU (S)TUERCA 1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

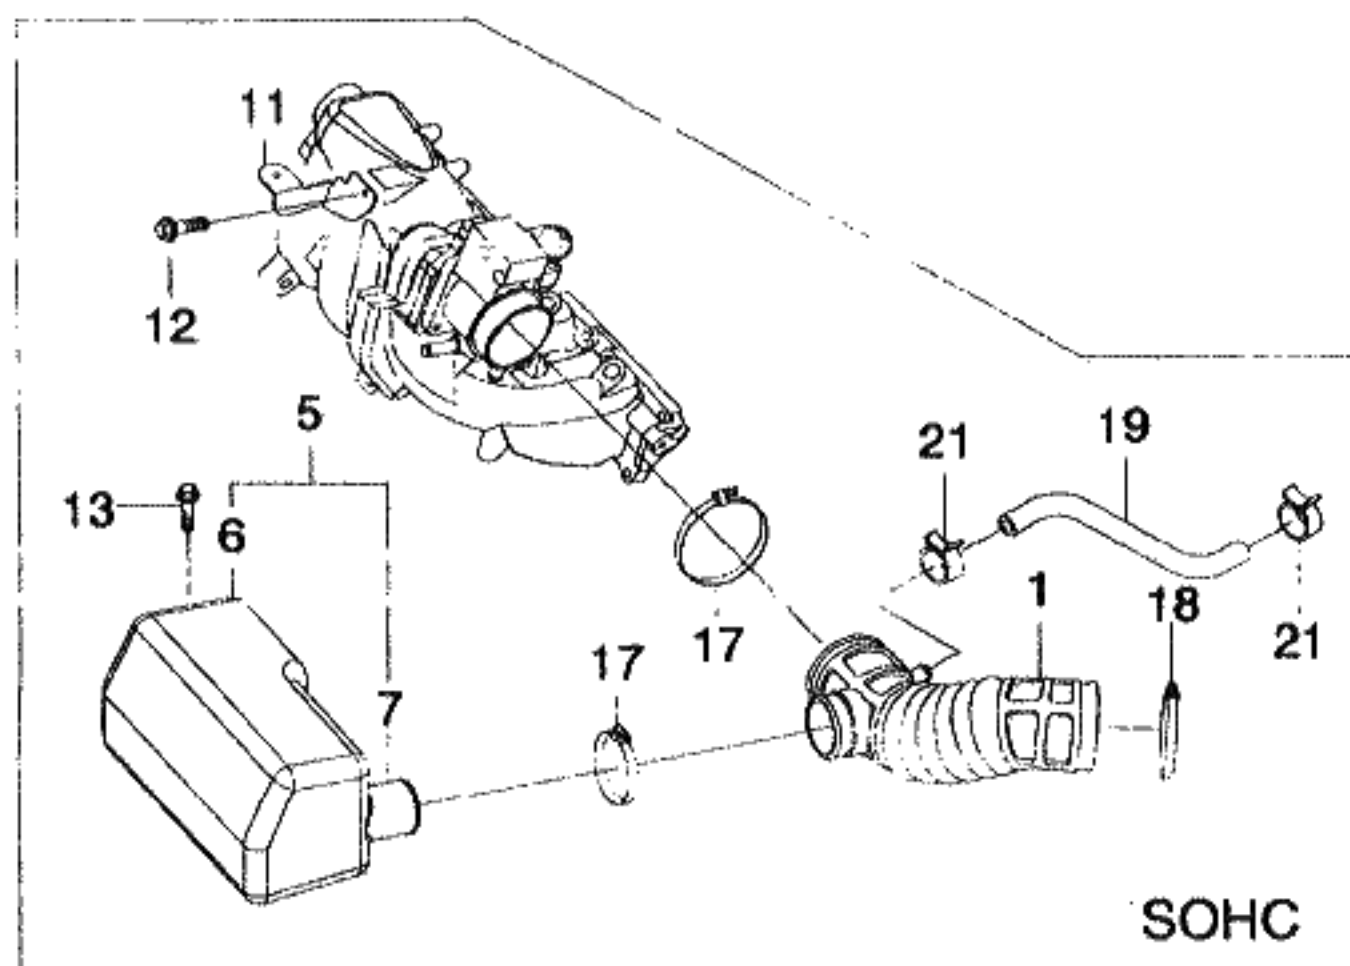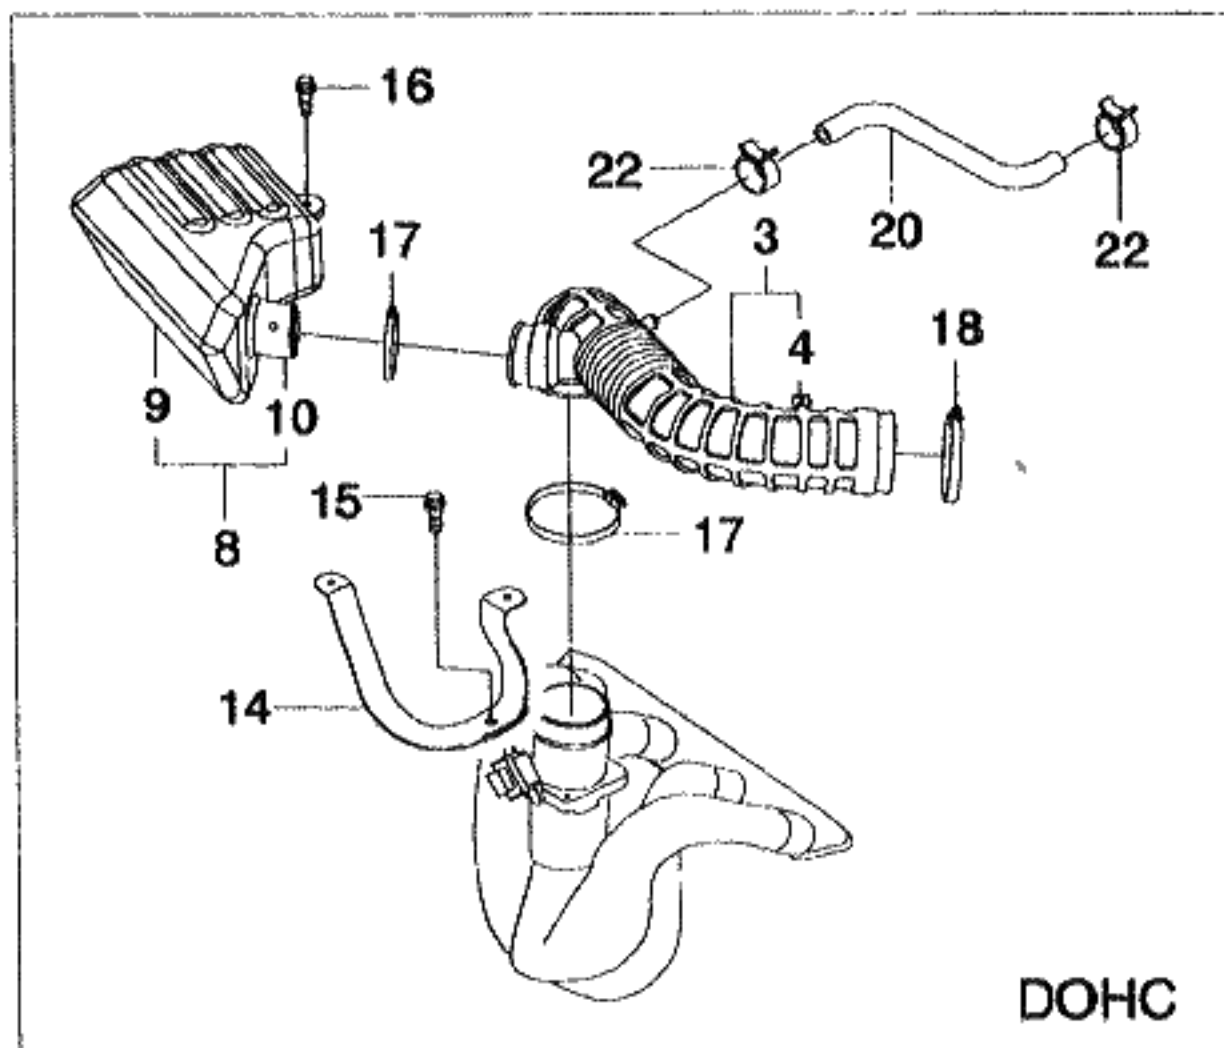


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96351525	(E)HOSE A-AIR CLEANER,OUTLET (D)SCHLAUCH,LUFTREINIGUNG	S			(F)TUYAU-FILTRE A AIR, SORTIE (S)MANGUERA-FILTRO DE AIRE	1				VS
	[03] 96181462	(E)HOSE A-AIR CLEANER,OUTLET (D)SCHLAUCH,LUFTREINIGUNG	O	S		(F)TUYAU-FILTRE A AIR, SORTIE (S)MANGUERA-FILTRO DE AIRE	1				VD
	[04] 96183228	(E)SENSOR A-TEMPERATURE,AIR (D)SENSOR,TEMPERATUR	O	S		(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA	1				
	[05] 96181463	(E)RESONATOR A-AUXILIARY (D)RESONATOR,ZUSATZ	S			(F)RESONATEUR-AUXILIAIRE (S)RESONADOR-AUXILIAR	1				VS
	[06] 96351776	(E)RESONATOR-AUXILIARY (D)RESONATOR,ZUSATZ	S			(F)RESONATEUR-AUXILIAIRE (S)RESONADOR-AUXILIAR	1				
	[07] 96351777	(E)NECK-AUXILIARY RESONATOR (D)HALS-RESONATOR	S			(F)COU-RESONATEUR (S)CUELLO-RESONADOR	1				
	[08] 96181464	(E)RESONATOR A-AUXILIARY (D)RESONATOR,ZUSATZ	O	S		(F)RESONATEUR-AUXILIAIRE (S)RESONADOR-AUXILIAR	1				VD
	[09] 96351742	(E)RESONATOR-AUXILIARY (D)RESONATOR,ZUSATZ	O	S		(F)RESONATEUR-AUXILIAIRE (S)RESONADOR-AUXILIAR	1				
	[10] 96351743	(E)NECK-AUXILIARY RESONATOR (D)HALS-RESONATOR	O	S		(F)COU-RESONATEUR (S)CUELLO-RESONADOR	1				
	[11] 96351782	(E)BRACKET A-AUX RESONATOR (D)TRÄGER	S			(F)SUPPORT (S)SOPORTE	1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

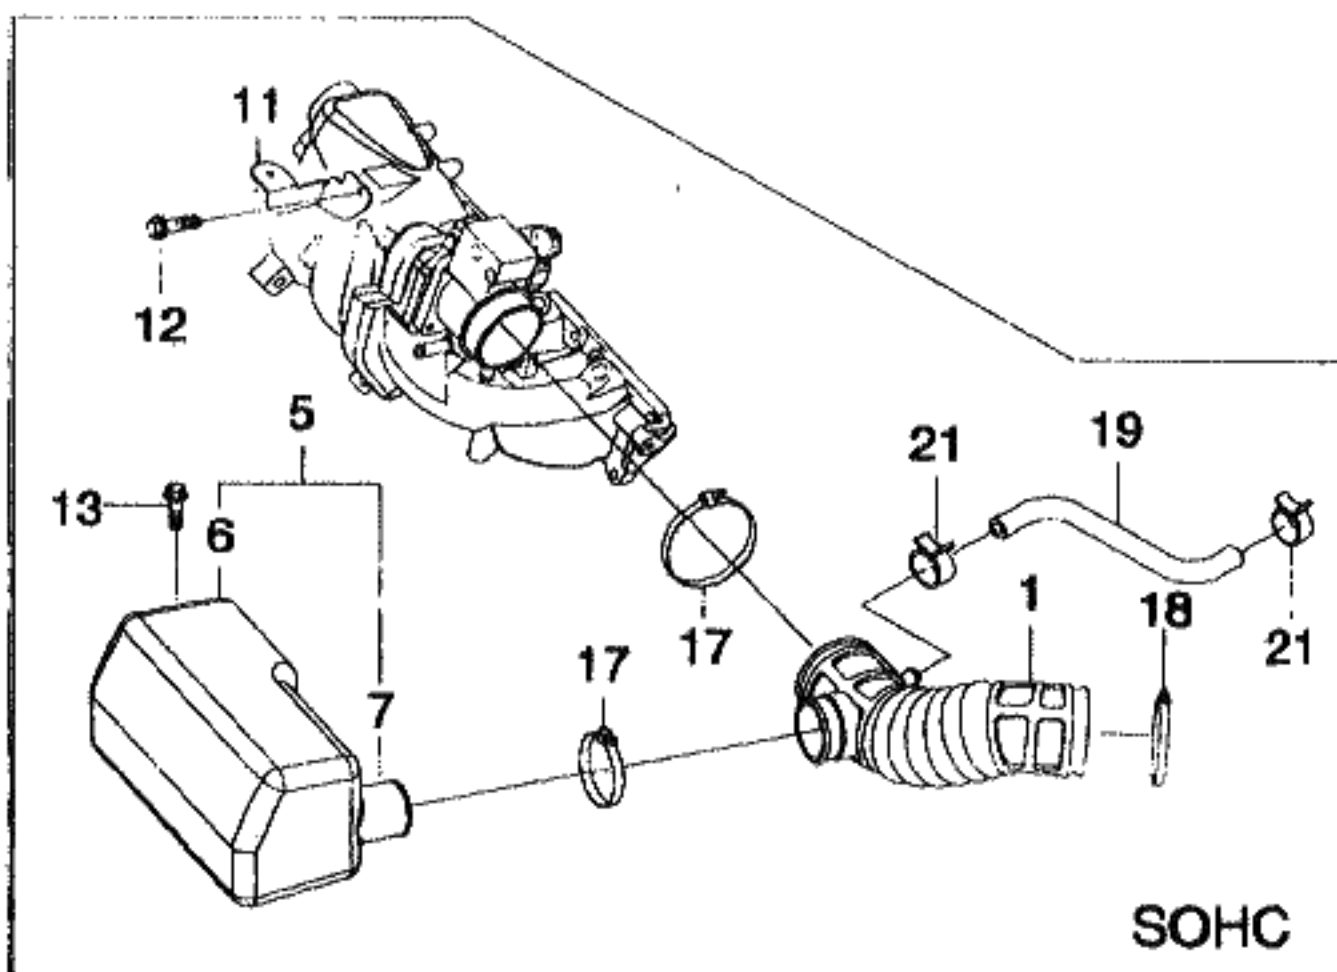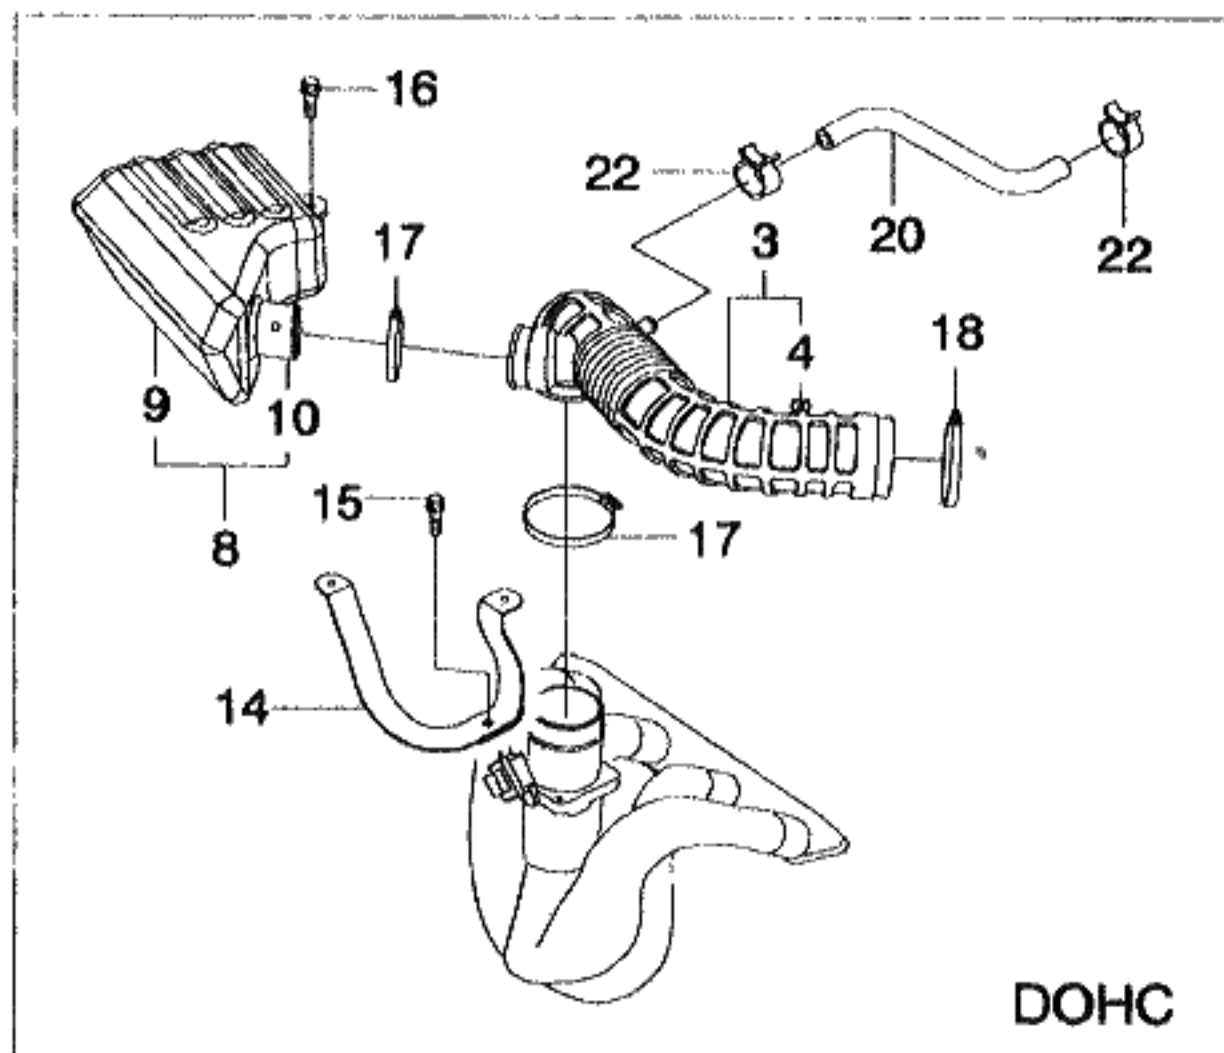


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[12]	(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09116-06022	. S .				1	970803				
	Y 01517-06125	. S .				1	970804				
	[13]	(E)NUT-CAP (D)MUTTER				(F)ECROU (S)TUERCA					
	09145-06005	. S .				1	970803				
	Y 08316-15065	. S .				1	970804				
	[14]	(E)BRACKET A-AUX RESONATOR (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96351784	. O S				1					
	[15]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09100-08003	. O S				1					
	[16]	(E)NUT-CAP (D)MUTTER				(F)ECROU (S)TUERCA					
	09145-06005	. O S				2	970803				
	Y 08316-15065	. O S				2	970804				
	[17]	(E)CLAMP (D)KLAMMER				(F)PINCE (S)ABRAZADERA					
	09402-60501	. S S				1					
	[18]	(E)CLAMP (D)KLAMMER				(F)PINCE (S)ABRAZADERA					
	09402-80501	. S S				2					
	[19]	(E)HOSE-BREATHER (D)SCHLAUCH,BELÜFTUNG				(F)TUYAU-RENIPLARD (S)MANGUERA-RESPIRADOR					
	96352119	. S .				1					
	[20]	(E)HOSE-BREATHER (D)SCHLAUCH,BELÜFTUNG				(F)TUYAU-RENIPLARD (S)MANGUERA-RESPIRADOR					
	96183946	. O S				1					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

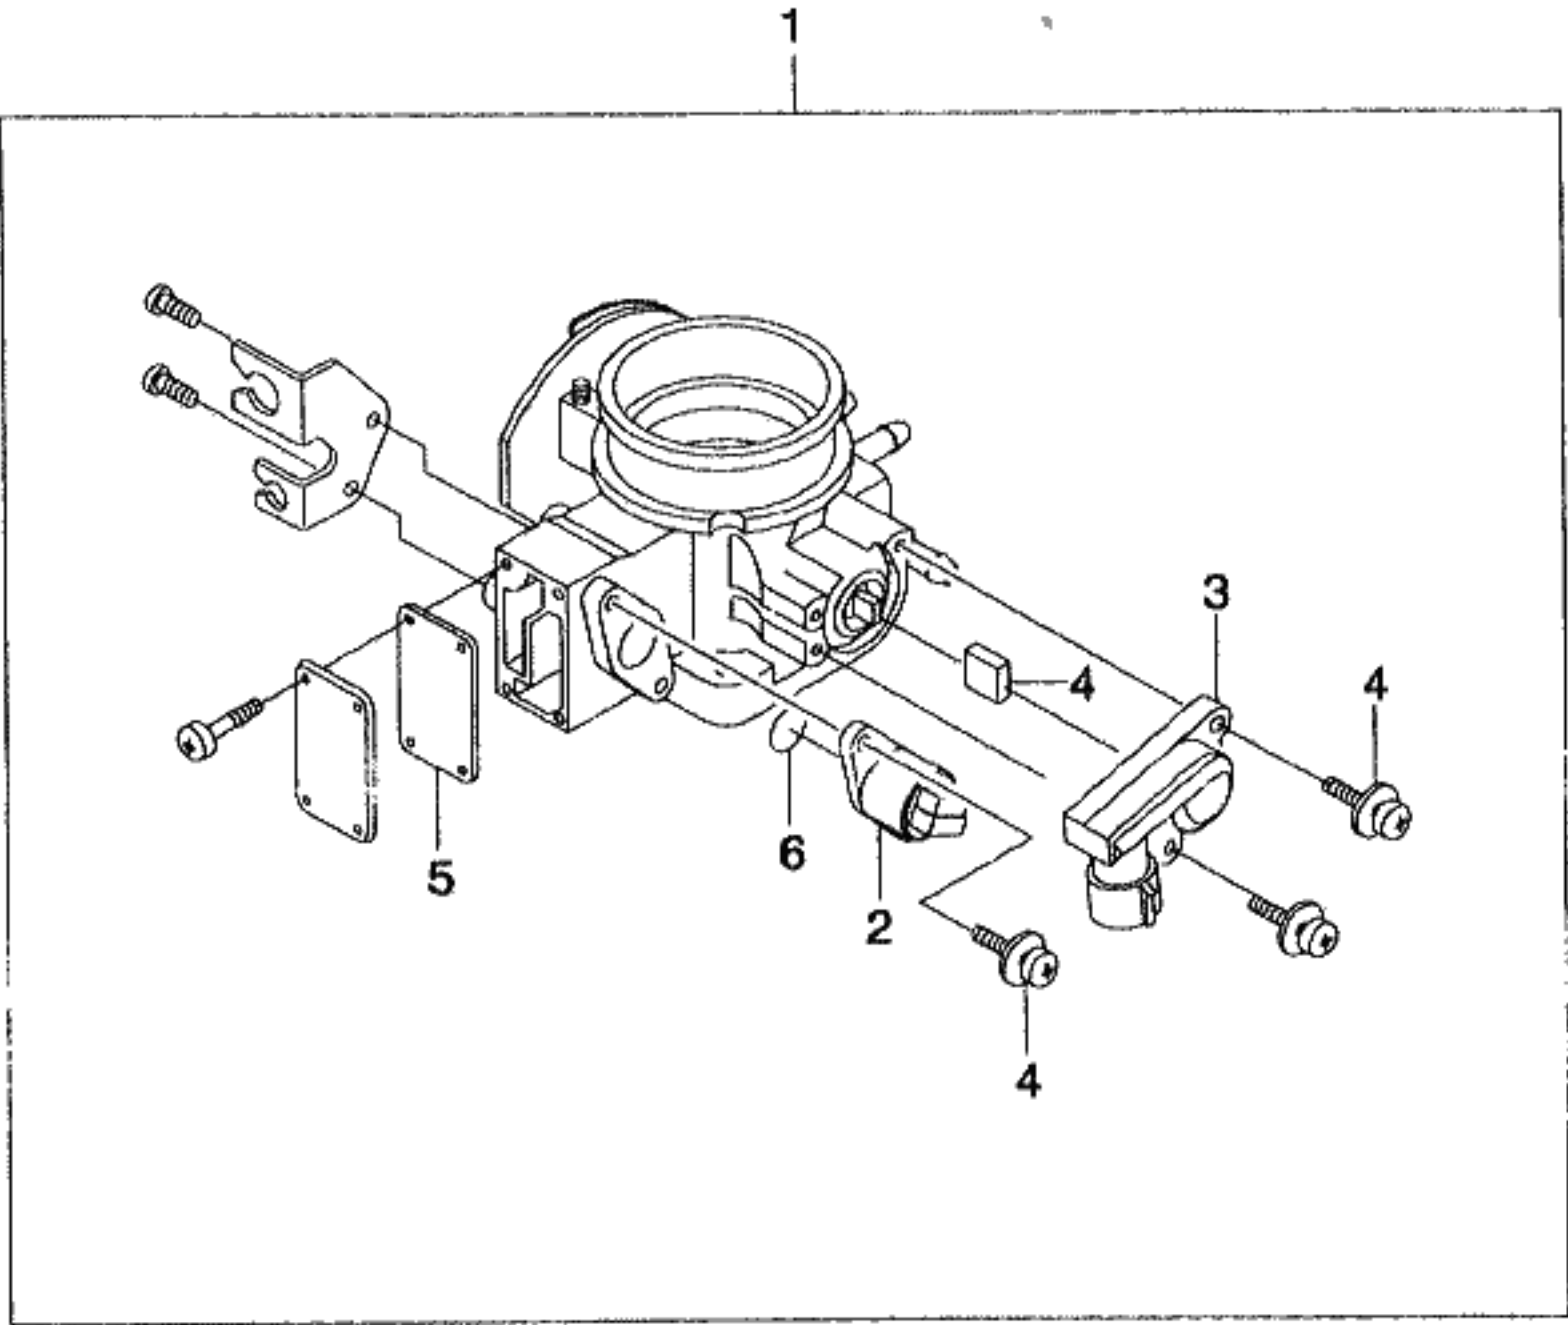

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)BODY A-THROTTLE (D)KAROSSERIE,GASHEBEL						(F)CORPS-COMMANDE DES GAZ (S)CARROCERIA-ESTRANGULADO			
	92063373	S					1				
	92062317	M	O	S	&L88		1				
	92062878	A	O	O	&L88		1				
	[02]	(E)MOTOR-IACV (D)MOTOR,IACV						(F)MOTEUR (S)MOTOR-IACV			
	92061898	S	S				1				
	[03]	(E)SENSOR-THROTTLE POSITION (D)SENSOR,DROSSEL STELLUNG						(F)DETECTEUR (S)SENSOR			
	17106681	S	S				1				
	[04]	(E)KIT-IACV & THROTTLE (D)IAD&DROSSELKLAPPNSATZ						(F)CORPS (S)KIT VALVULA AIRE			
	VS22067	S	S				1				
	[05]	(E)GASKET-COVER PLATE (D)DICHTUNG						(F)JOINT (S)JUNTA			
	VS21896	S	S				1				
	[06]	(E)O RING (D)O-RING						(F)JOINT TORIQUE (S)ANILLO EN O			
	17082049	S	S				1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

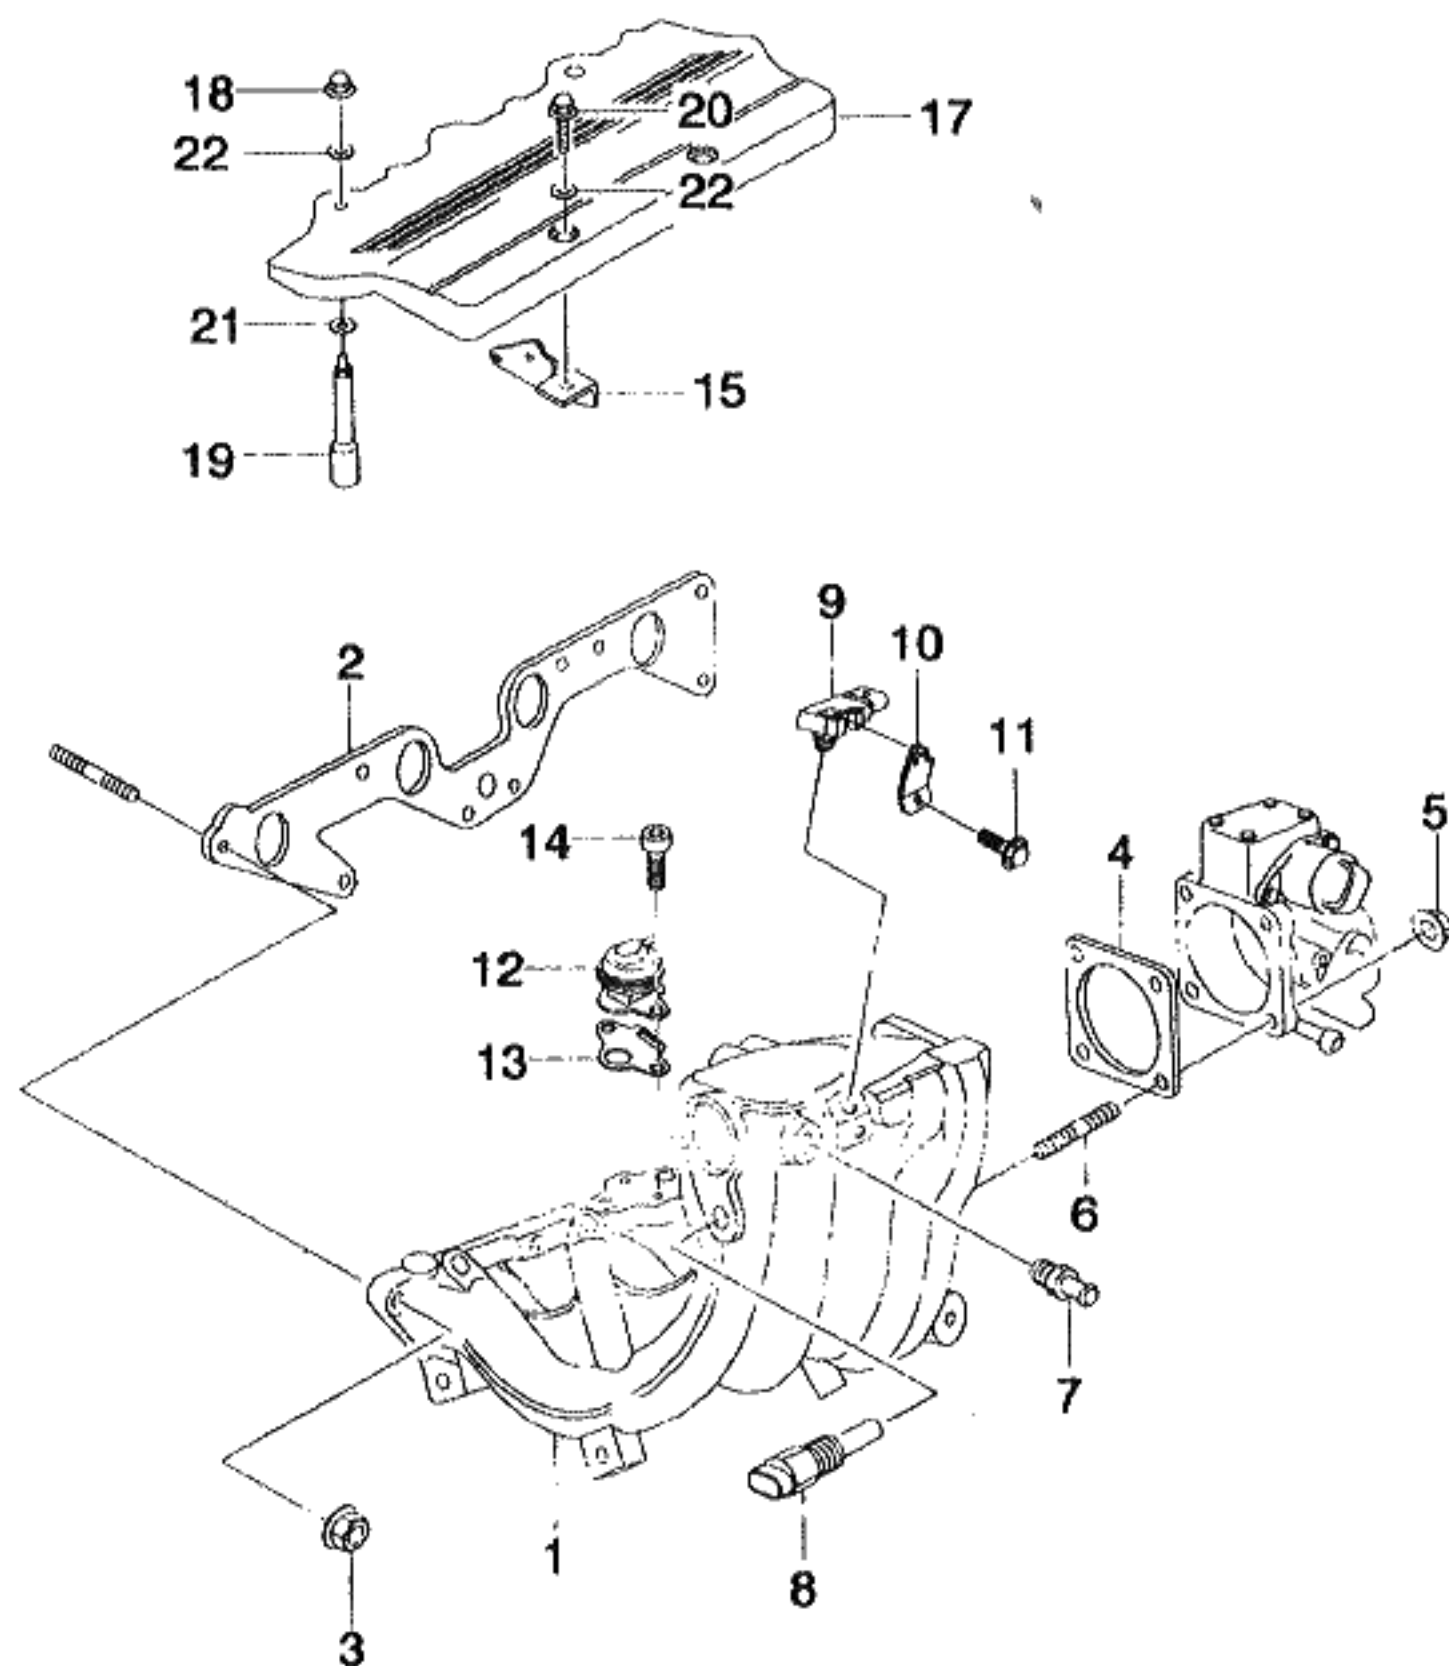


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96351192	(E)MANIFOLD A-INTAKE (D)SAMMELLEITUNG,EINLAß	.	S	.			(F)COLLECTEUR-ADMISSION (S)COLECTOR-ENTRADA	1		
	[02] 92060514	(E)GASKET-INTAKE MANIFOLD (D)DICHTUNG,SAMMELLEITUNG	.	S	.			(F)JOINT (S)JUNTA-COLECTOR DE	1		
	[03] 11082413	(E)NUT (D)MUTTER	.	S	.			(F)ECROU (S)TUERCA	9		
	[04] 92060513	(E)GASKET-THROTTLE BODY (D)DICHTUNG,DROSSEL KÖRPER	.	S	.			(F)JOINT (S)JUNTA	1		
	[05] 11094423	(E)NUT (D)MUTTER	.	S	.			(F)ECROU (S)TUERCA	4		
	[06] 11083711	(E)BOLT-STUD (D)STIFTSCHRAUBE	.	S	.			(F)BOULON-TETON (S)PERNO-ESPIGA	4		
	[07] SP3360	(E)CONNECTOR-VACUUM (D)VERBINDUNG	.	S	.			(F)CONNECTEUR (S)CONECTOR	1		
	[08] 25037388	(E)SENSOR-AIR TEMPERATURE (D)SENSOR,TEMPERATUR	.	S	.			(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA	1		
	[09] 16212460	(E)SENSOR A-MAP (D)SENSOR	.	S	.			(F)DETECTEUR (S)SENSOR	1		
	[10] 92063372	(E)BRACKET-MAP SENSOR (D)TRÄGER	.	S	.			(F)SUPPORT (S)SOPORTE	1		
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

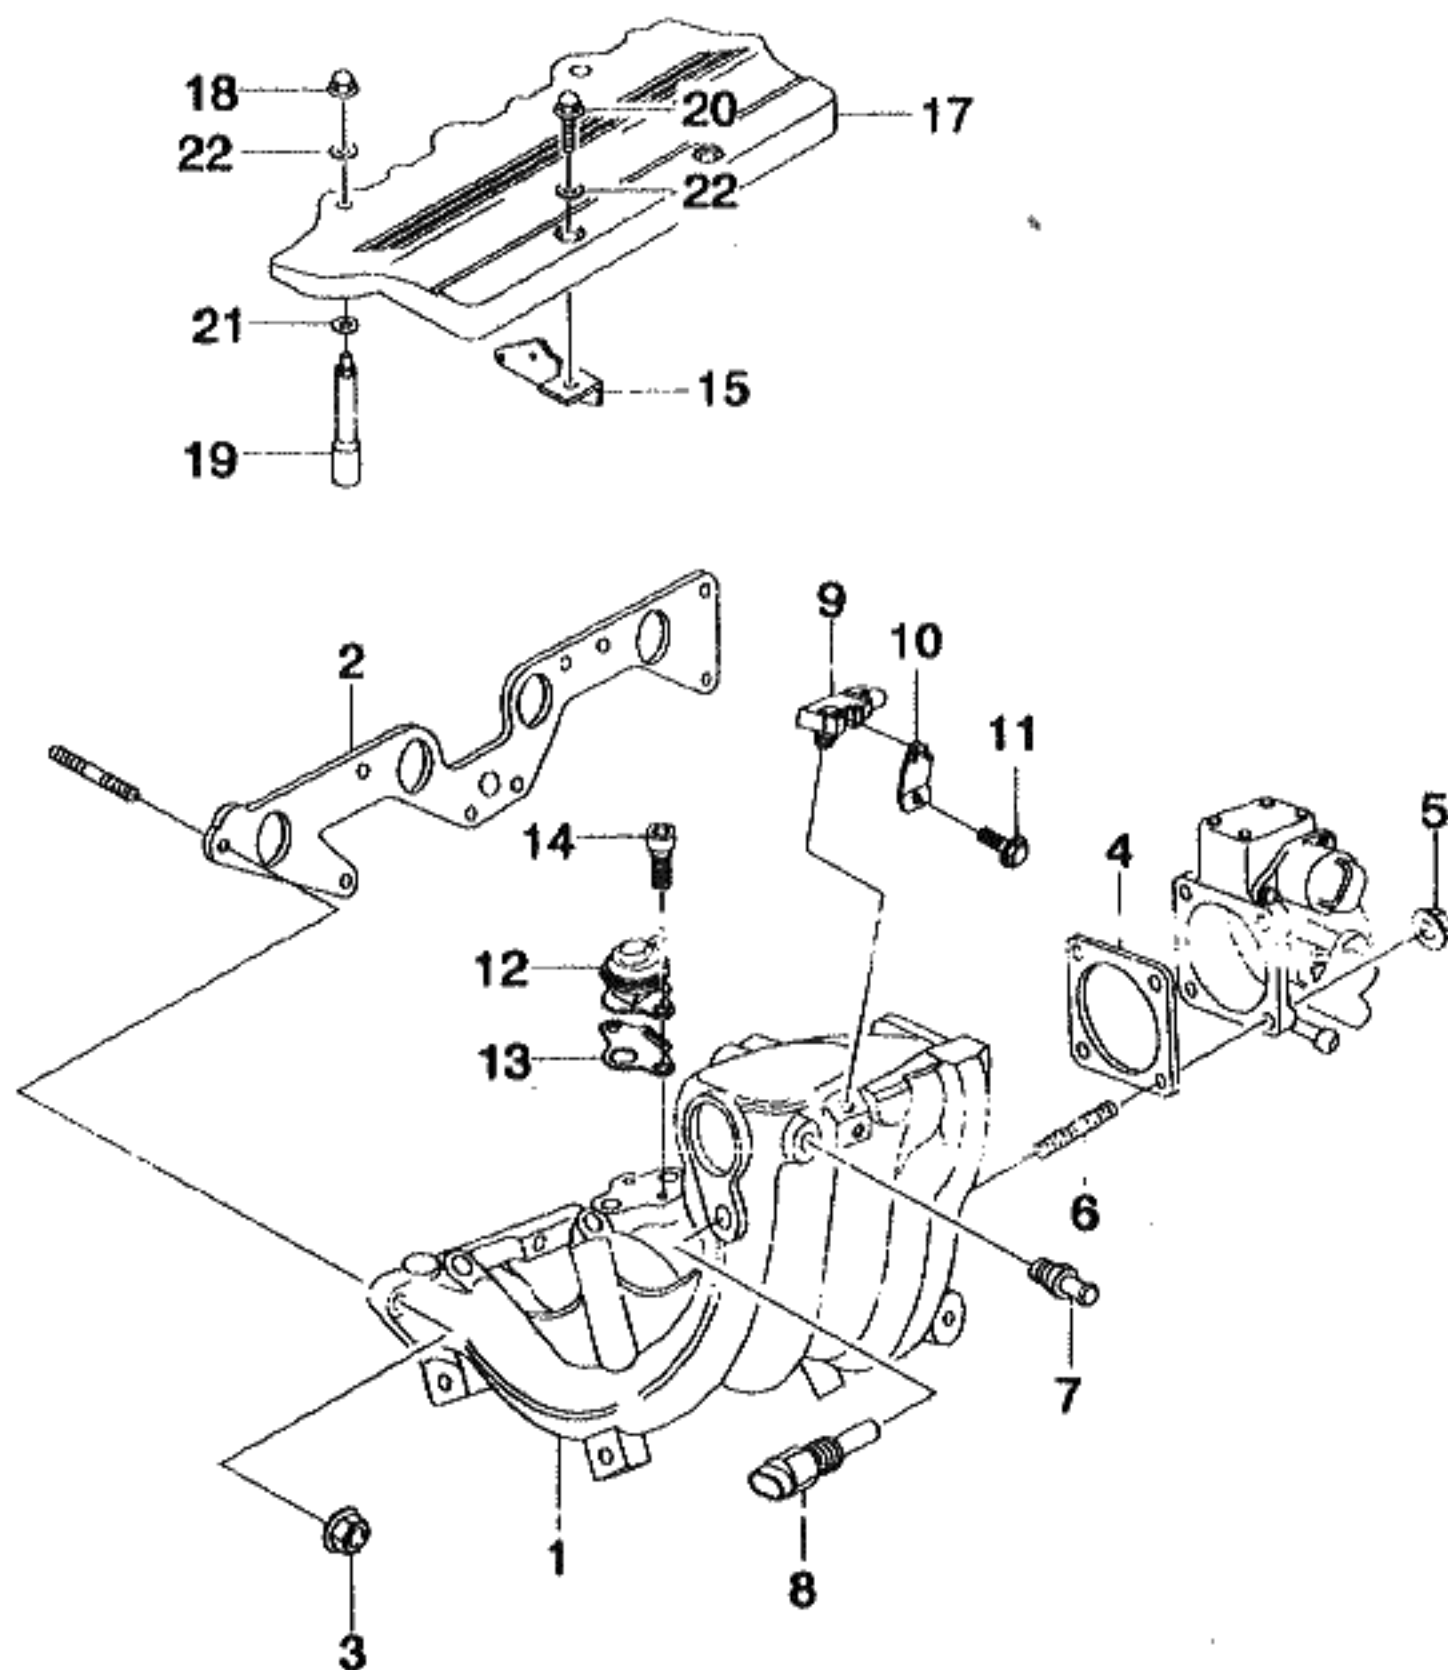


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] 11093971	(E)BOLT (D)SCHRAUBE . S .					(F)BOULON (S)PERNO 1					
	[12] 17091160 17091159	(E)VALVE A-EGR (D)VENTIL M S . A O .					(F)SOUPAPE (S)VALVULA 1 1					
	[13] 92061674	(E)SEAL-EGR, RETURN FLOW (D)DICHTUNG . S .					(F)JOINT (S)SELLO 1					
	[14] 11052951	(E)SCREW (D)SCHRAUBE . S .					(F)VIS (S)TORNILLO 1					
	[15] 96351795	(E)BRACKET-ENGINE COVER (D)TRÄGER . S .					(F)SUPPORT (S)SOPORTE 1					
	[16] 01517-06125	(E)BOLT-FLANGE (D)SCHRAUBE . S .					(F)BOULON (S)PERNO 2					
	[17] 96351818	(E)COVER-ENGINE HARNESS (D)DECKEL . S .					(F)CARTER (S)CUBIERTA 1					
	[18] 09145-06005	(E)NUT-CAP (D)MUTTER . S .					(F)ECROU (S)TUERCA 2					
	[19] 96351794	(E)ADAPTER-ENGINE COVER (D)ADAPTER . S .					(F)ADAPTATEUR (S)ADAPTADOR 2					
	[20]	(E)BOLT-CROWN (D)SCHRAUBE					(F)BOULON (S)PERNO					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

2432 INTAKE MANIFOLD(2.0SOHC)

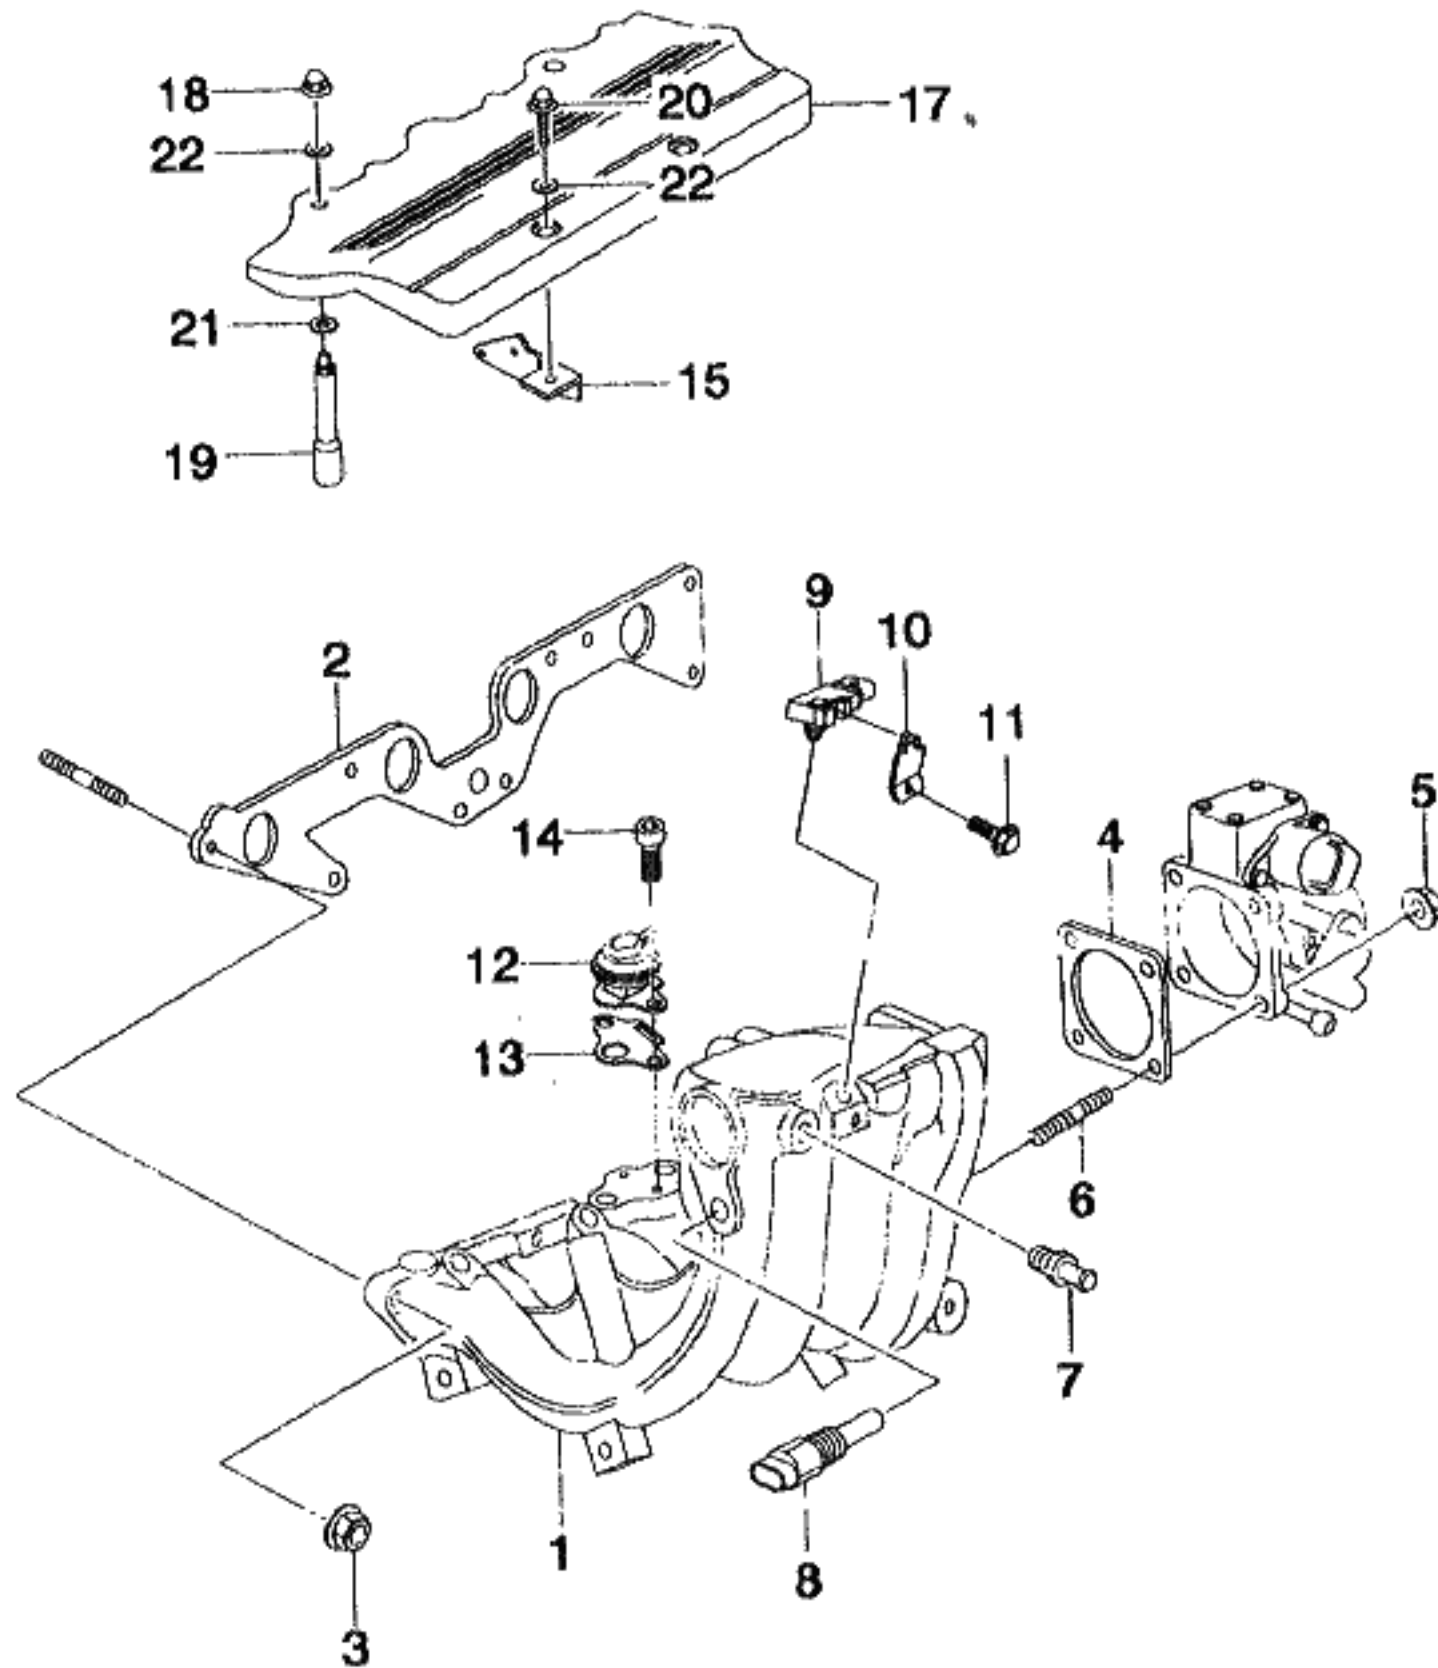

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09104-06001	.	S	.			2					
	[21]		(E)WASHER-PLAIN				(F)RONDELLE					
			(D)DICHTUNGSRING				(S)ARANDELA					
	09160-06003	.	S	.			2					
	[22]		(E)WASHER-PLAIN				(F)RONDELLE					
			(D)DICHTUNGSRING				(S)ARANDELA					
	08322-11065	.	S	.			4					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

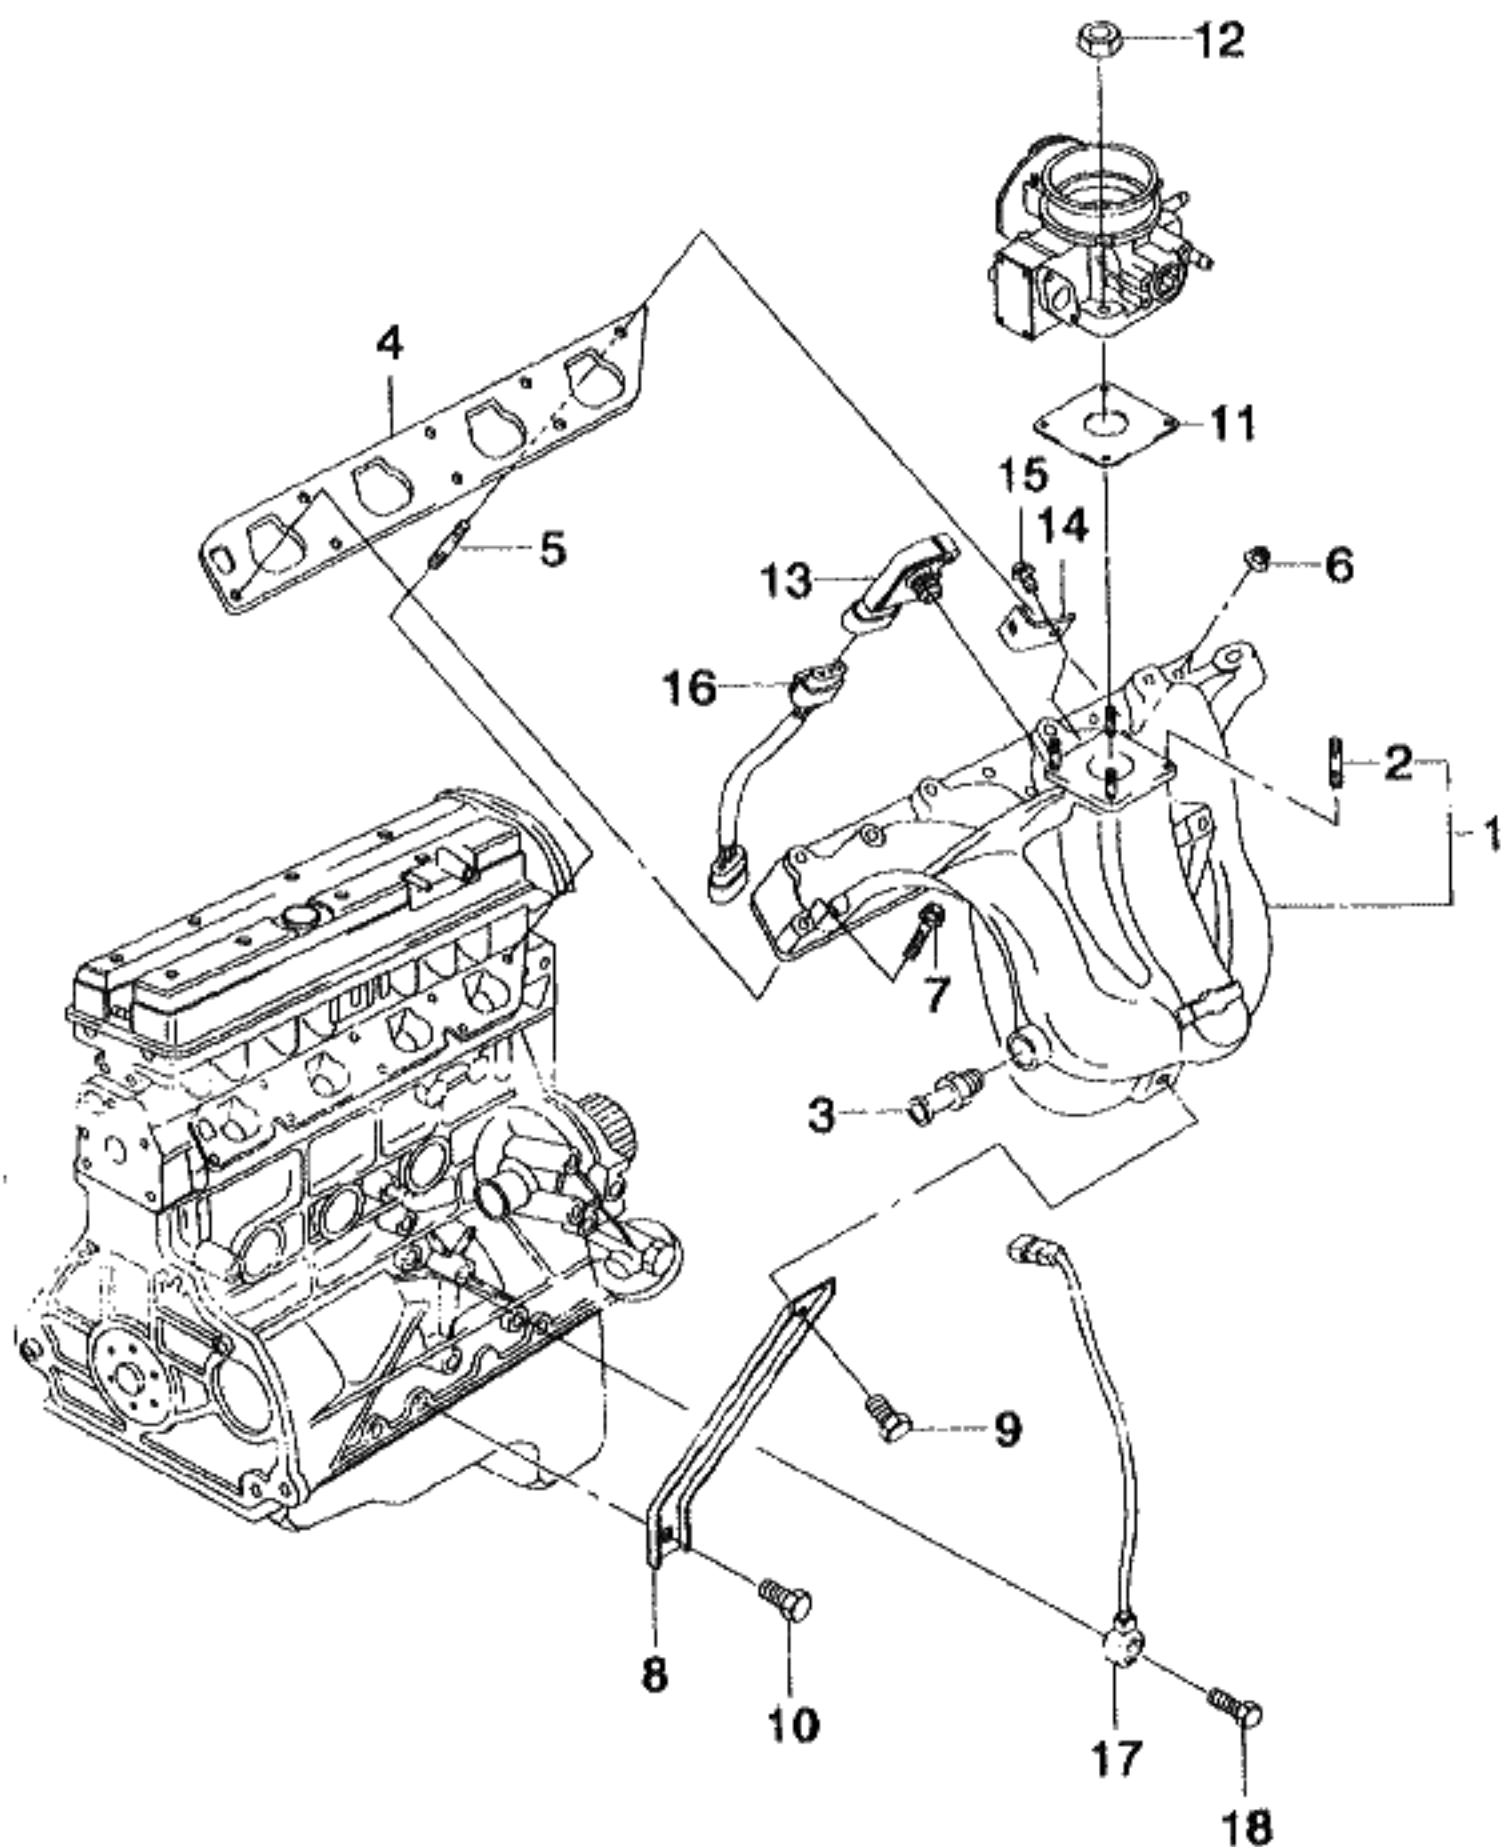


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01] 92063630	(E)MANIFOLD A-INTAKE (D)SAMMELLEITUNG,EINLAß . O S				(F)COLLECTEUR-ADMISSION (S)COLECTOR-ENTRADA 1						
	[02] 11075291	(E)STUD-THROTTLE BODY (D)STEG . O S				(F)TOURILLON (S)TRAVESAÑO 4						
	[03] SP3360	(E)CONNECTOR-VACUUM (D)VERBINDUNG . O S				(F)CONNECTEUR (S)CONECTOR 1						
	[04] 90412459	(E)GASKET-INTAKE MANIFOLD (D)DICHTUNG,SAMMELLEITUNG . O S				(F)JOINT (S)JUNTA-COLECTOR DE 1						
	[05] 90106924	(E)BOLT-STUD (D)STEG,ABGAS SAMMELLEITUNG . O S				(F)TOURILLON (S)TRAVESAÑO-COLECTOR 7						
	[06] 11082413	(E)NUT (D)MUTTER . O S				(F)ECROU (S)TUERCA 7						
	[07] 11091511	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 1						
	[08] 90411554	(E)SUPPORT-INTAKE MANIFOLD (D)TRÄGER,SAMMELLEITUNG . O S				(F)SUPPORT (S)SOPORTE 1						
	[09] 11051927	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 2						
	[10] SP3679	(E)SCREW (D)SCHRAUBE . O S				(F)VIS (S)TORNILLO 1						

LEVEL


S X = 2.0 SOHC
CDX = 2.0 DOHC

T/A(TRANSAXLE)


M = MANUAL T/A
A = AUTOMATIC T/A
. = COMMON

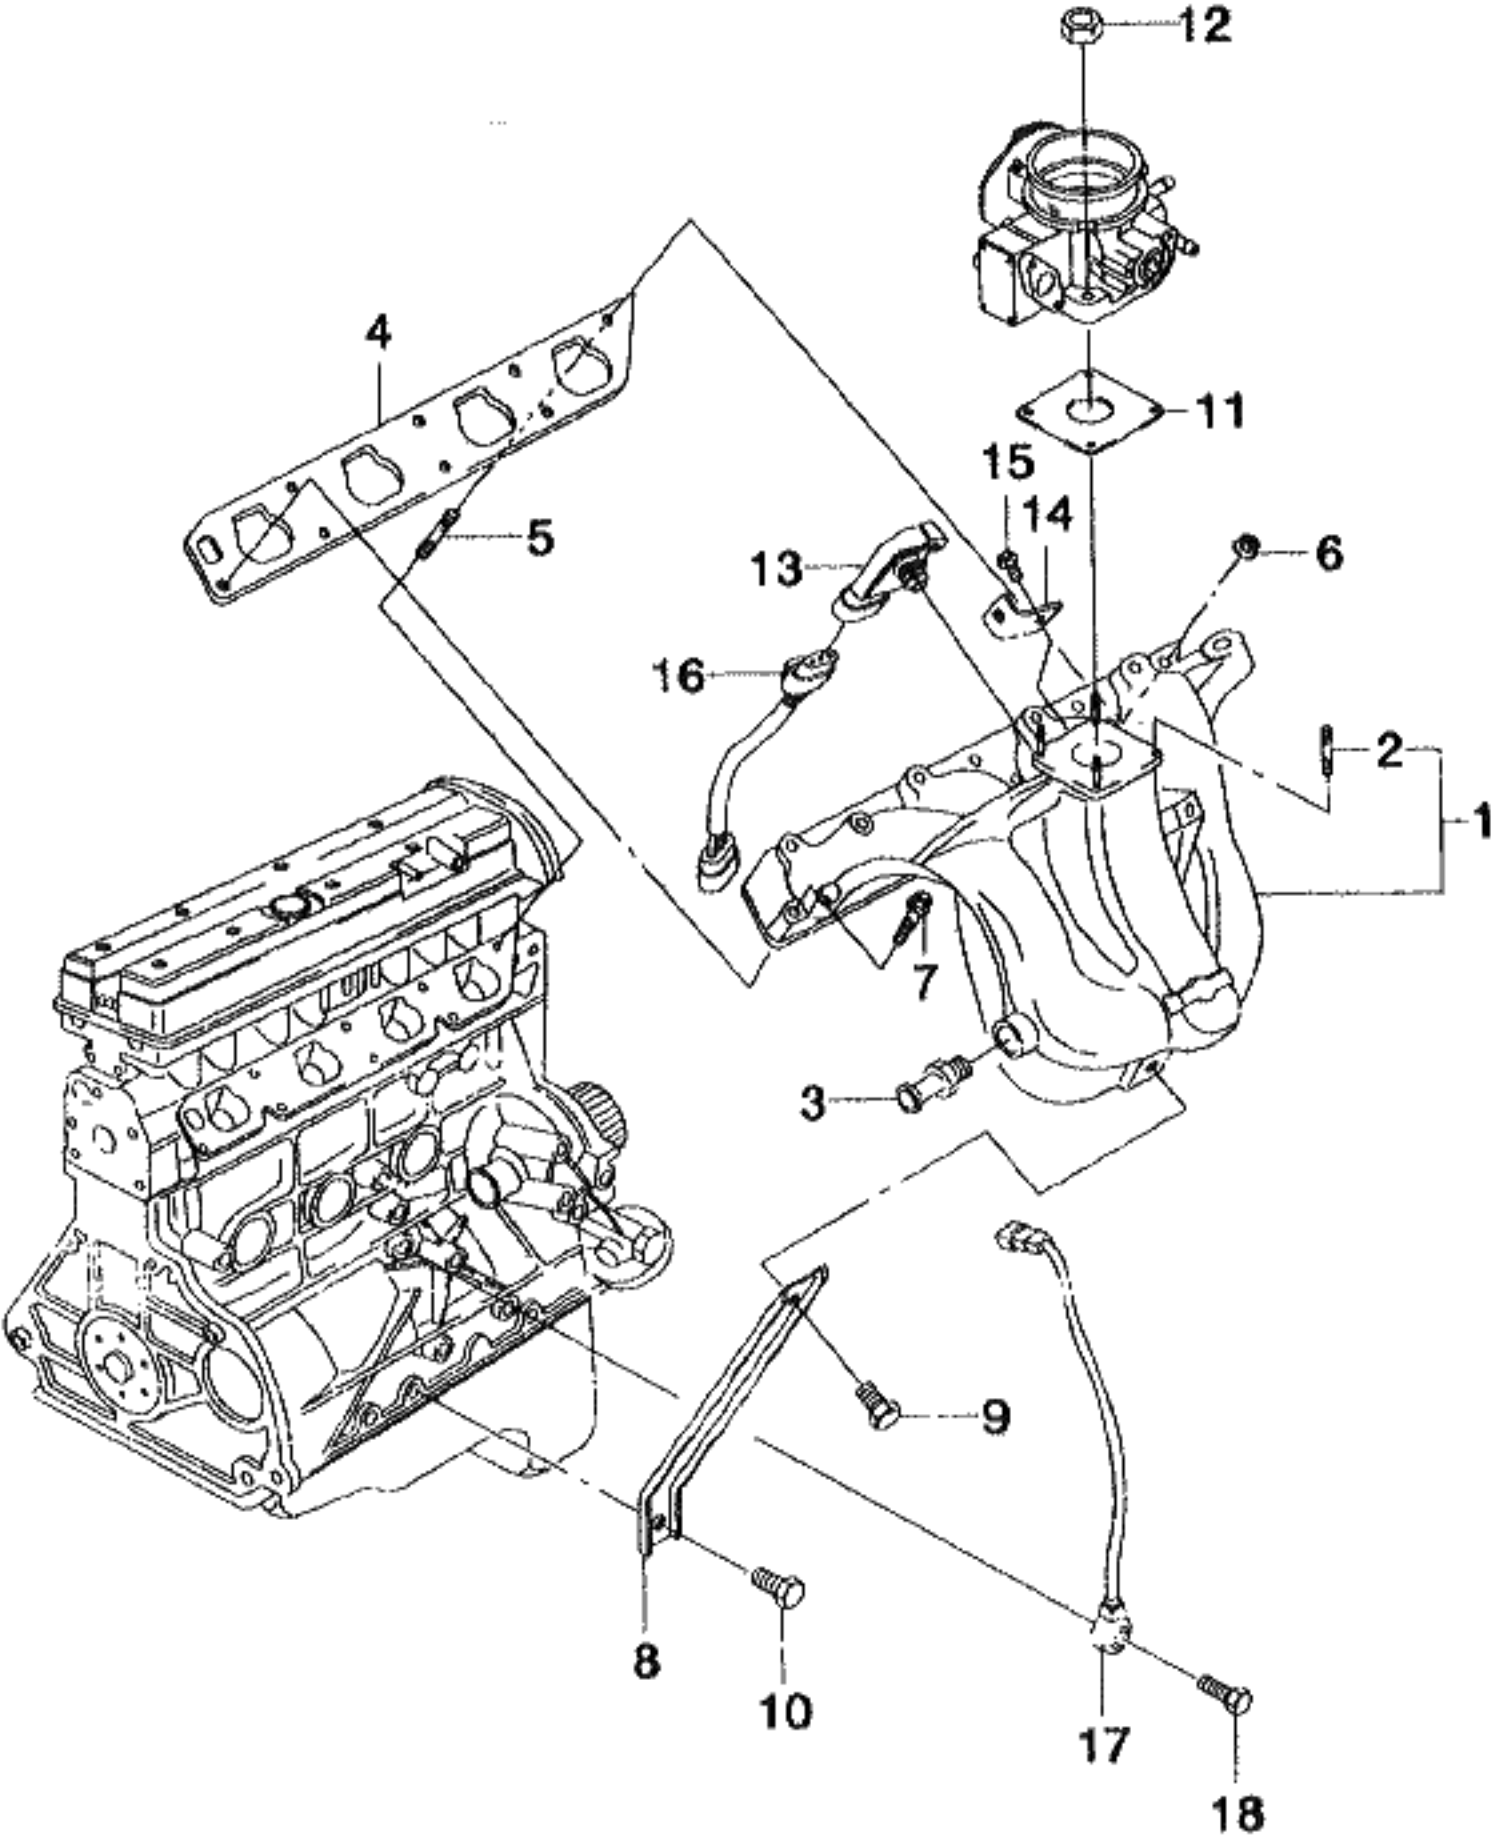

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 90412686	(E)GASKET-THROTTLE BODY (D)DICHTUNG,DROSSEL KÖRPER	.	O	S		(F)JOINT (S)JUNTA				
	[12] 11094423	(E)NUT (D)MUTTER	.	O	S		(F)ECROU (S)TUERCA				
	[13] 16212460	(E)SENSOR A-MAP (D)SENSOR	.	O	S		(F)DETECTEUR (S)SENSOR				
	[14] 92063497	(E)BRACKET-MAP SENSOR (D)TRÄGER	.	O	S		(F)SUPPORT (S)SOPORTE				
	[15] 11093971	(E)BOLT (D)SCHRAUBE	.	O	S		(F)BOULON (S)PERNO				
	[16] 92062893	(E)HARNESS A-MAP SENSOR (D)VERDRAHTUNG	.	O	S		(F)CABLAGE (S)INSTALACION ELECTRICA				
	[17] 10456240	(E)SENSOR-KNOCK (D)SENSOR	.	O	S		(F)DETECTEUR (S)SENSOR				
	[18] 92063265	(E)BOLT-KNOCK SENSOR (D)SCHRAUBE	.	O	S		(F)BOULON (S)PERNO				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

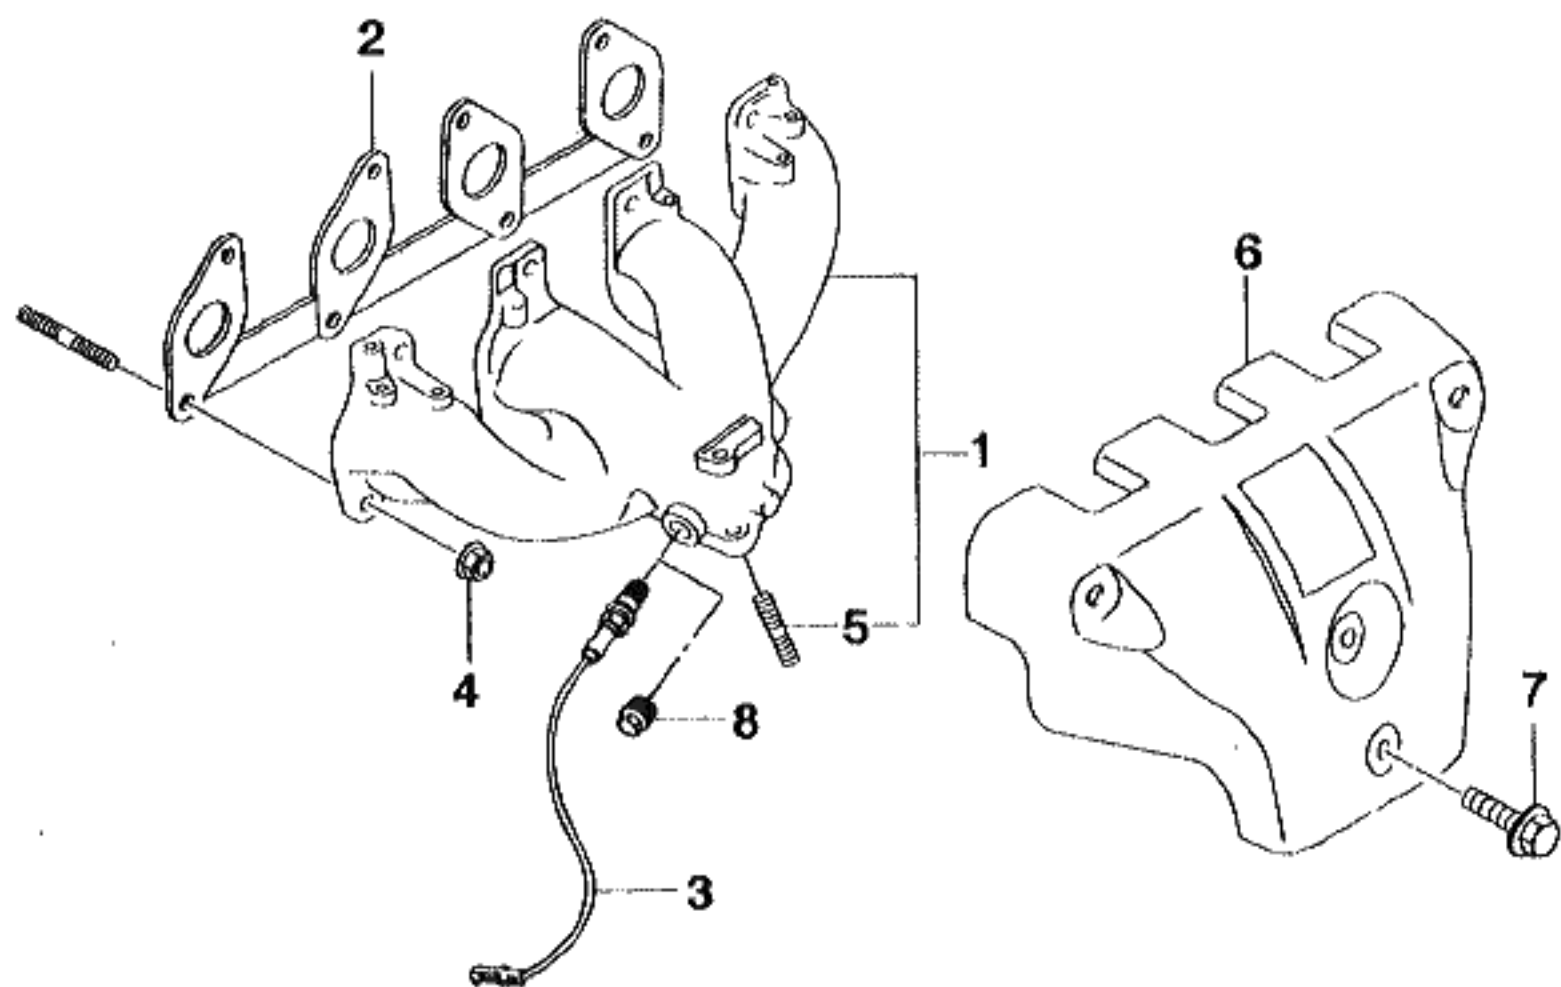

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 92062891	(E)MANIFOLD A-EXHAUST (D)SAMMELLEITUNG,ABGAS . S .			(F)COLLECTEUR-ECHAPPEMENT (S)COLECTOR-ESCAPE 1						
	[02] 92060515	(E)GASKET-EXH MANIFOLD (D)DICHTUNG . S .			(F)JOINT (S)JUNTA 1						
	[03] 25162753	(E)SENSOR A-EXHAUST GAS (D)SENSOR,ABGAS BELÜFTUNG . A . &NN6			(F)DETECTEUR (S)SENSOR-OXIGENO DEL ESCAPE 1						
	[04] 11082413	(E)NUT (D)MUTTER . S .			(F)ECROU (S)TUERCA 10						
	[05] 92063487	(E)BOLT-STUD (D)STEG,ABGAS ROHR . S .			(F)TOURILLON (S)TRAVESAÑO-TUBO DE ESCAPE 3						
	[06] 96351488	(E)SHIELD A-HEAT,EXH M/FOLD (D)HEIZSCHUTZTEIL . S .			(F)BOUCLIER THERMIQUE (S)ESCUDO REFRACTARIO 1						HE
	[07] 01180-08162	(E)BOLT-HEXAGON (D)SCHRAUBE . S .			(F)BOULON (S)PERNO 4						
	[08] 96100183	(E)BOLT-O2 SENSOR PORT (D)SCHRAUBE . S . &NN4			(F)BOULON (S)PERNO 1						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

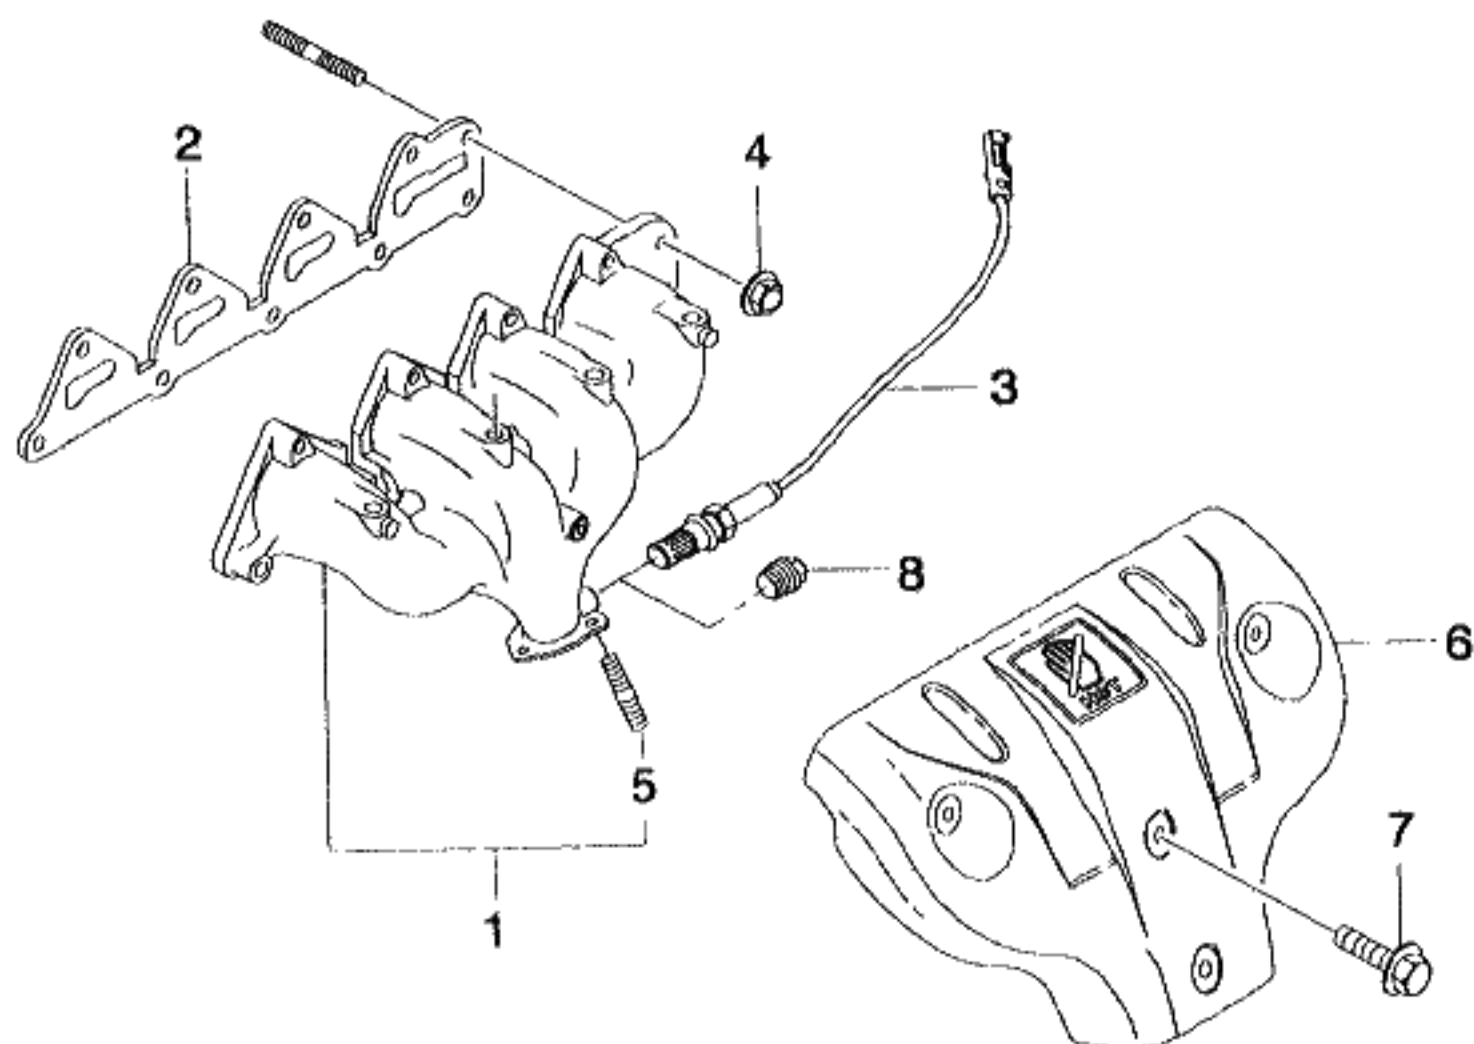

KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	[01]	(E)MANIFOLD A-EXHAUST (D)SAMMELLEITUNG,ABGAS					(F)COLLECTEUR-ECHAPPEMENT (S)COLECTOR-ESCAPE					
	92063564		O	S			1					
	[02]	(E)GASKET-EXHAUST MANIFOLD (D)DICHTUNG,SAMMELLEITUNG					(F)JOINT (S)JUNTA-COLECTOR DE ESCAPE					
	92063309		O	S	&NN4/NN6		1					
	92063157		A	A	&NN7		1					
	[03]	(E)SENSOR A-EXHAUST GAS (D)SENSOR,ABGAS BELÜFTUNG					(F)DETECTEUR (S)SENSOR-OXIGENO DEL ESCAPE					
	25162753		A	A	&NN6		1					
	[04]	(E)NUT (D)MUTTER					(F)ECROU (S)TUERCA					
	11082413		O	S			10					
	[05]	(E)BOLT-STUD (D)STEG,ABGAS ROHR					(F)TOURILLON (S)TRAVESAÑO-TUBO DE ESCAPE					
	92063487		O	S			3					
	[06]	(E)SHIELD A-HEAT,EXH M/FOLD (D)HEIZSCHUTZTEIL					(F)BOUCLIER THERMIQUE (S)ESCUDO REFRACTARIO					
	96351339		O	S			1				MF	
	[07]	(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO					
	01180-08162		O	S			4					
	[08]	(E)BOLT-O2 SENSOR PORT (D)SCHRAUBE					(F)BOULON (S)PERNO					
	96100183			S	&NN4		1					

LEVEL

T/A(TRANSAXLE)

S X = 2.0 SOHC

M = MANUAL T/A



CDX = 2.0 DOHC

A = AUTOMATIC T/A

. = COMMON


TO CAMSHAFT
SUPPORT COVER

TO VALVE - PCV

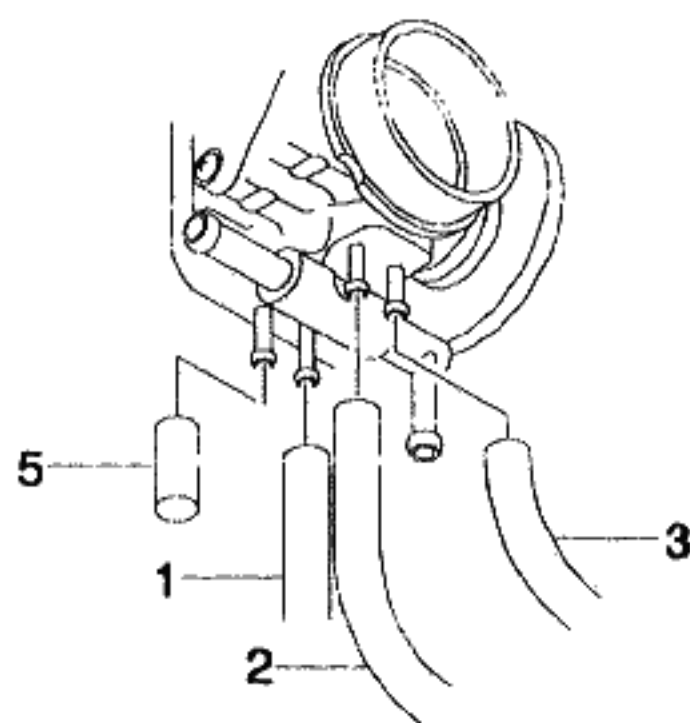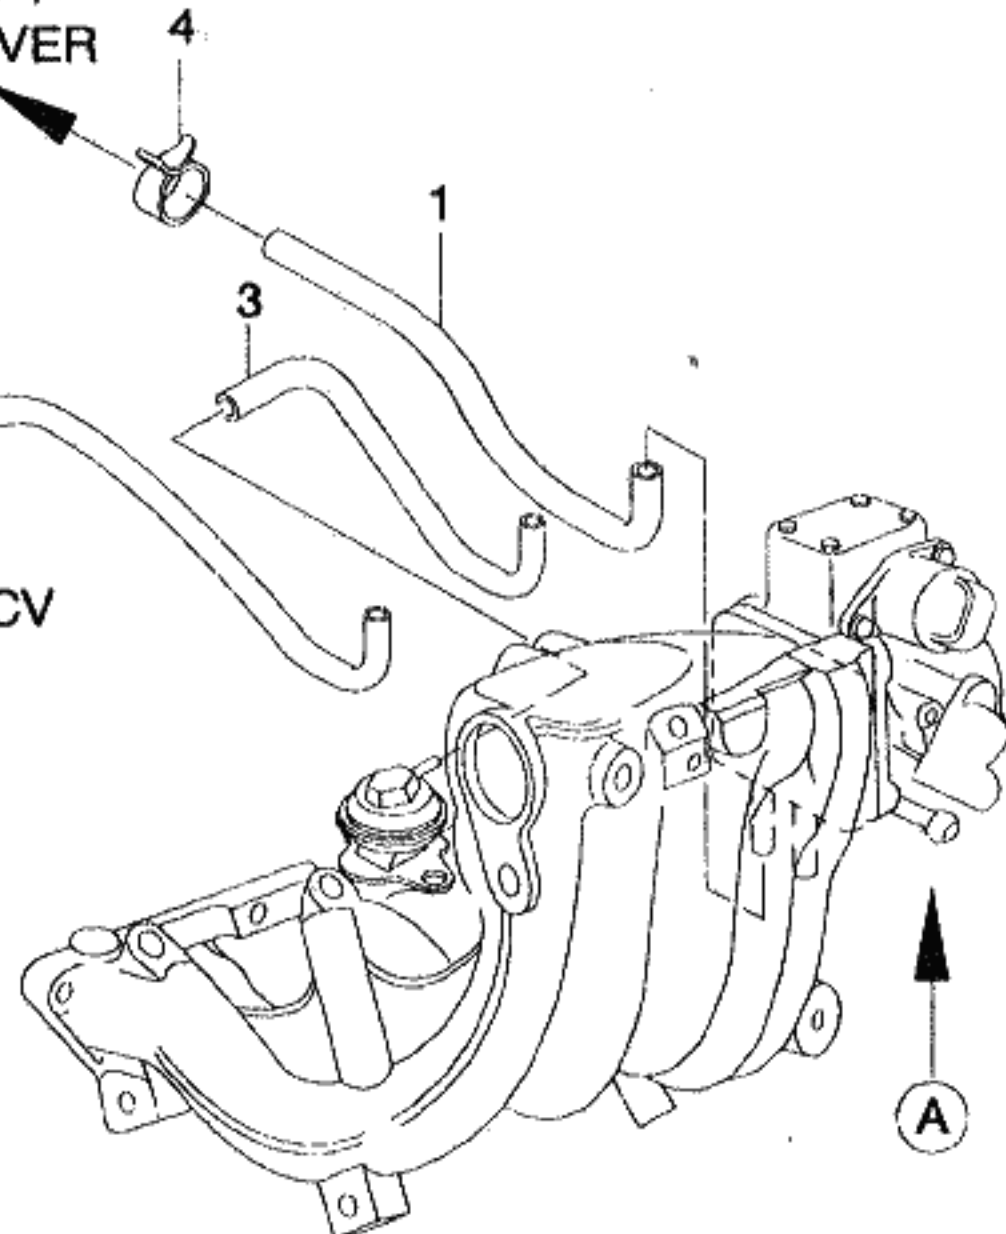


VIEW "A"

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 92063380	(E)HOSE-T/BODY TO CAM COVER (D)SCHLAUCH,DROSSEL KÖRPER				(F)TUYAU (S)MANGUERA	1			NOT APPLIED	
	[02] 90467459	(E)HOSE-FUEL VAPOR (D)SCHLAUCH,DROSSEL KÖRPER				(F)TUYAU (S)MANGUERA	1				
	[03] 92063381 90144112	(E)HOSE-EGR VALVE (D)SCHLAUCH				(F)TUYAU (S)MANGUERA					
	[04] 90467519	(E)CLAMP (D)KLAMMER				(F)PINCE (S)ABRAZADERA	2				
	[05] 90194032	(E)CAP-T/BODY PIPE CLOSING (D)DECKEL				(F)CHAPEAU (S)TAPA	1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

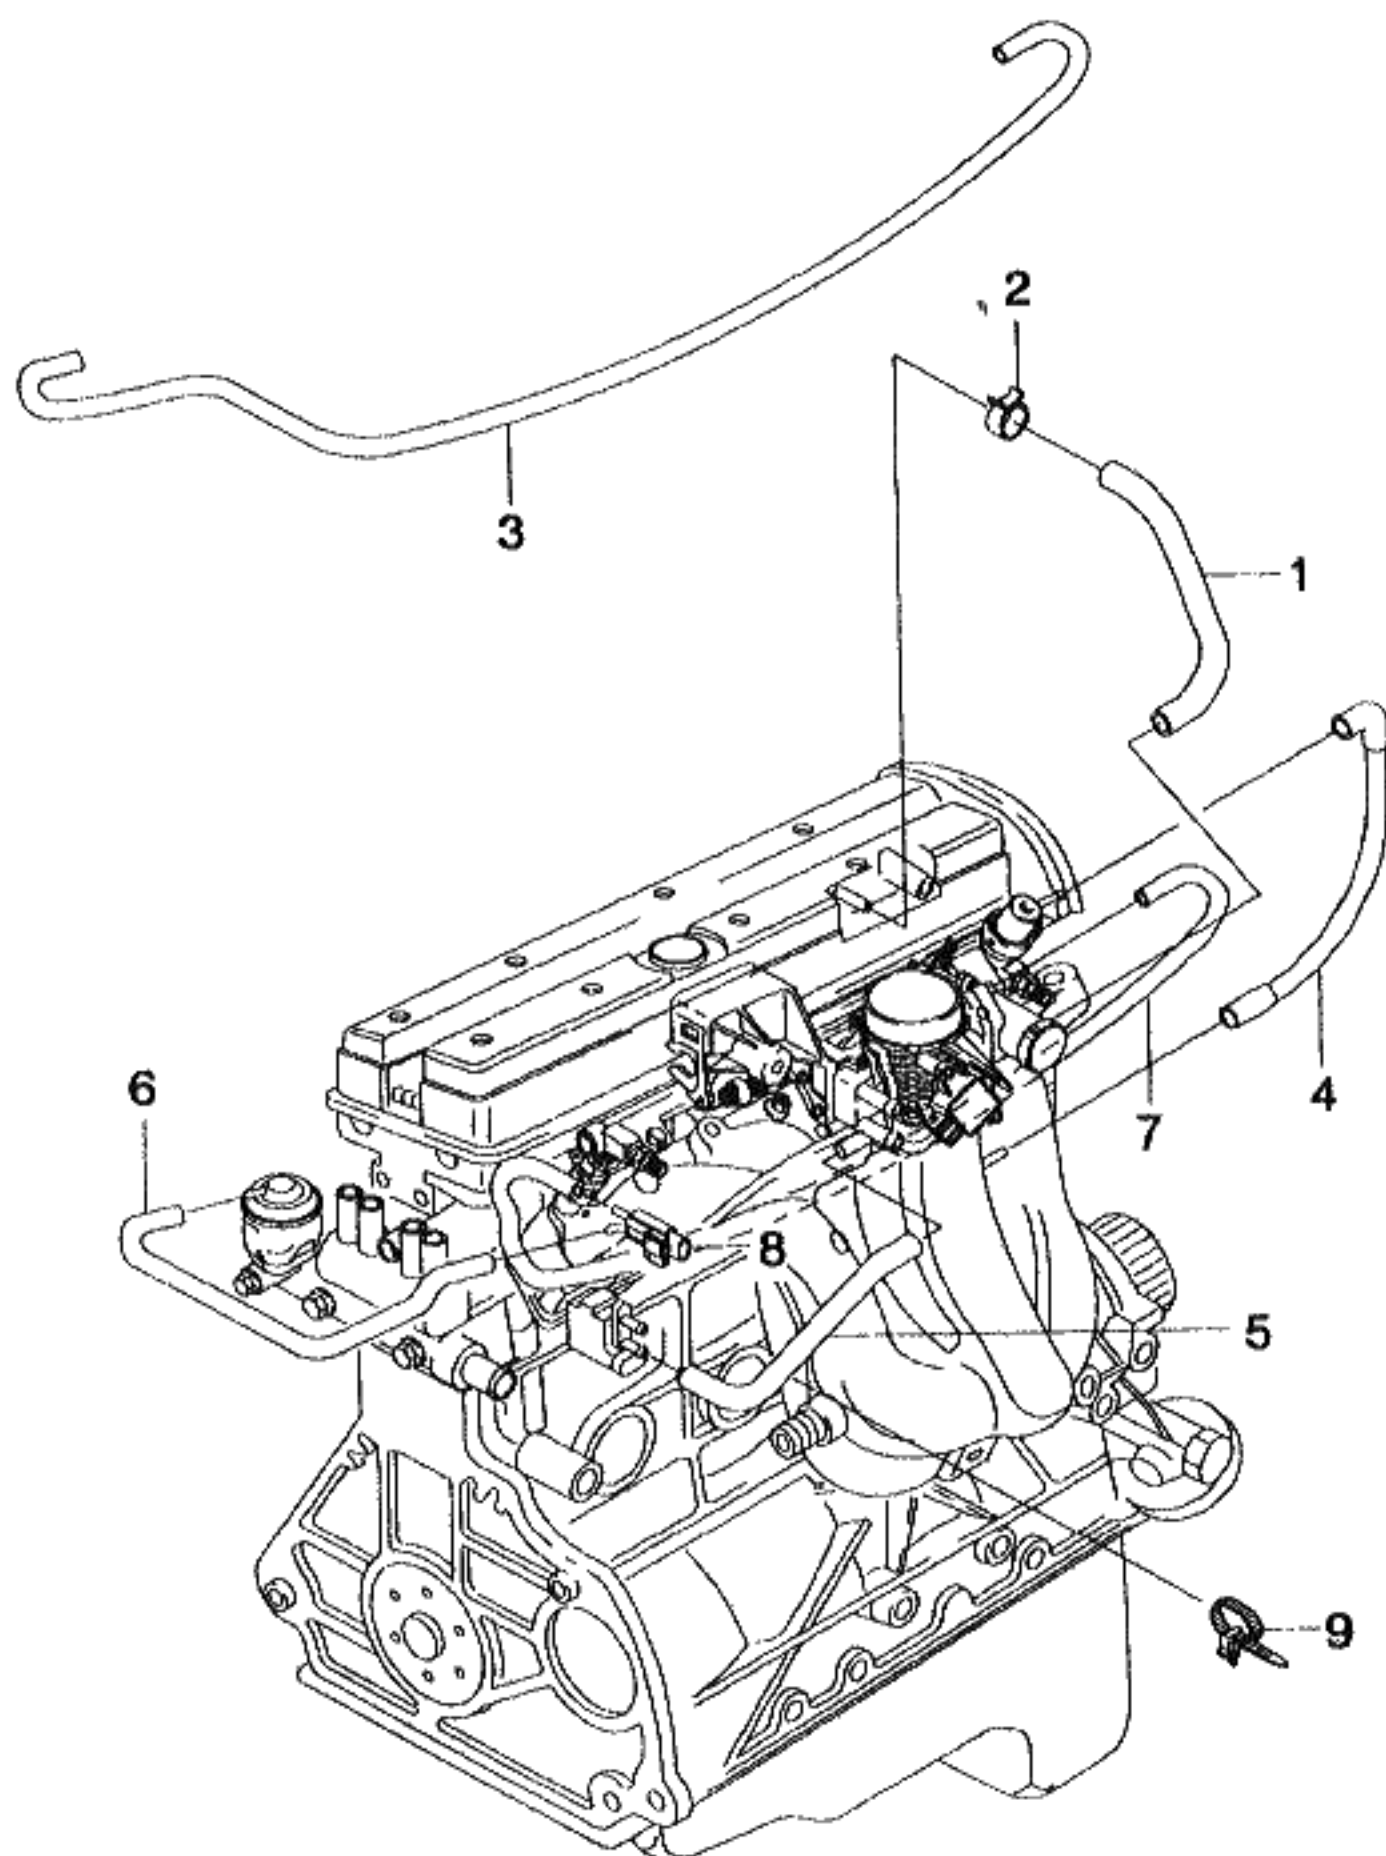


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 92062839	(E)HOSE-T/BODY TO CYL HEAD (D)SCHLAUCH				(F)TUYAU (S)MANGUERA	1				
	[02] 92063133	(E)CLAMP-ENG VENT HOSE (D)KLAMMER				(F)PINCE (S)ABRAZADERA	1				
	[03] 92062770	(E)HOSE-EGR TO INT MANIFOLD (D)SCHLAUCH				(F)TUYAU (S)MANGUERA	1				
	[04] 90499109	(E)HOSE-INTAKE MANIFOLD (D)SCHLAUCH				(F)TUYAU (S)MANGUERA	1				
	[05] 92063338	(E)HOSE-FUEL VAPOR VALVE (D)SCHLAUCH				(F)TUYAU (S)MANGUERA	1				
	[06] 92063337	(E)HOSE-EGR TO SOLENOID VLV (D)SCHLAUCH				(F)TUYAU (S)MANGUERA	1				
	[07] 92063336	(E)HOSE-T/BODY TO SOLENOID V (D)SCHLAUCH				(F)TUYAU (S)MANGUERA	1				
	[08] 96350601	(E)VALVE A-EGR,SOLENOID (D)VENTIL				(F)SOUPAPE (S)VALVULA	1				
	[09] 09286974	(E)STRAP-MOUNTING (D)BAND				(F)BRETTELLE (S)BRIDDA	1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

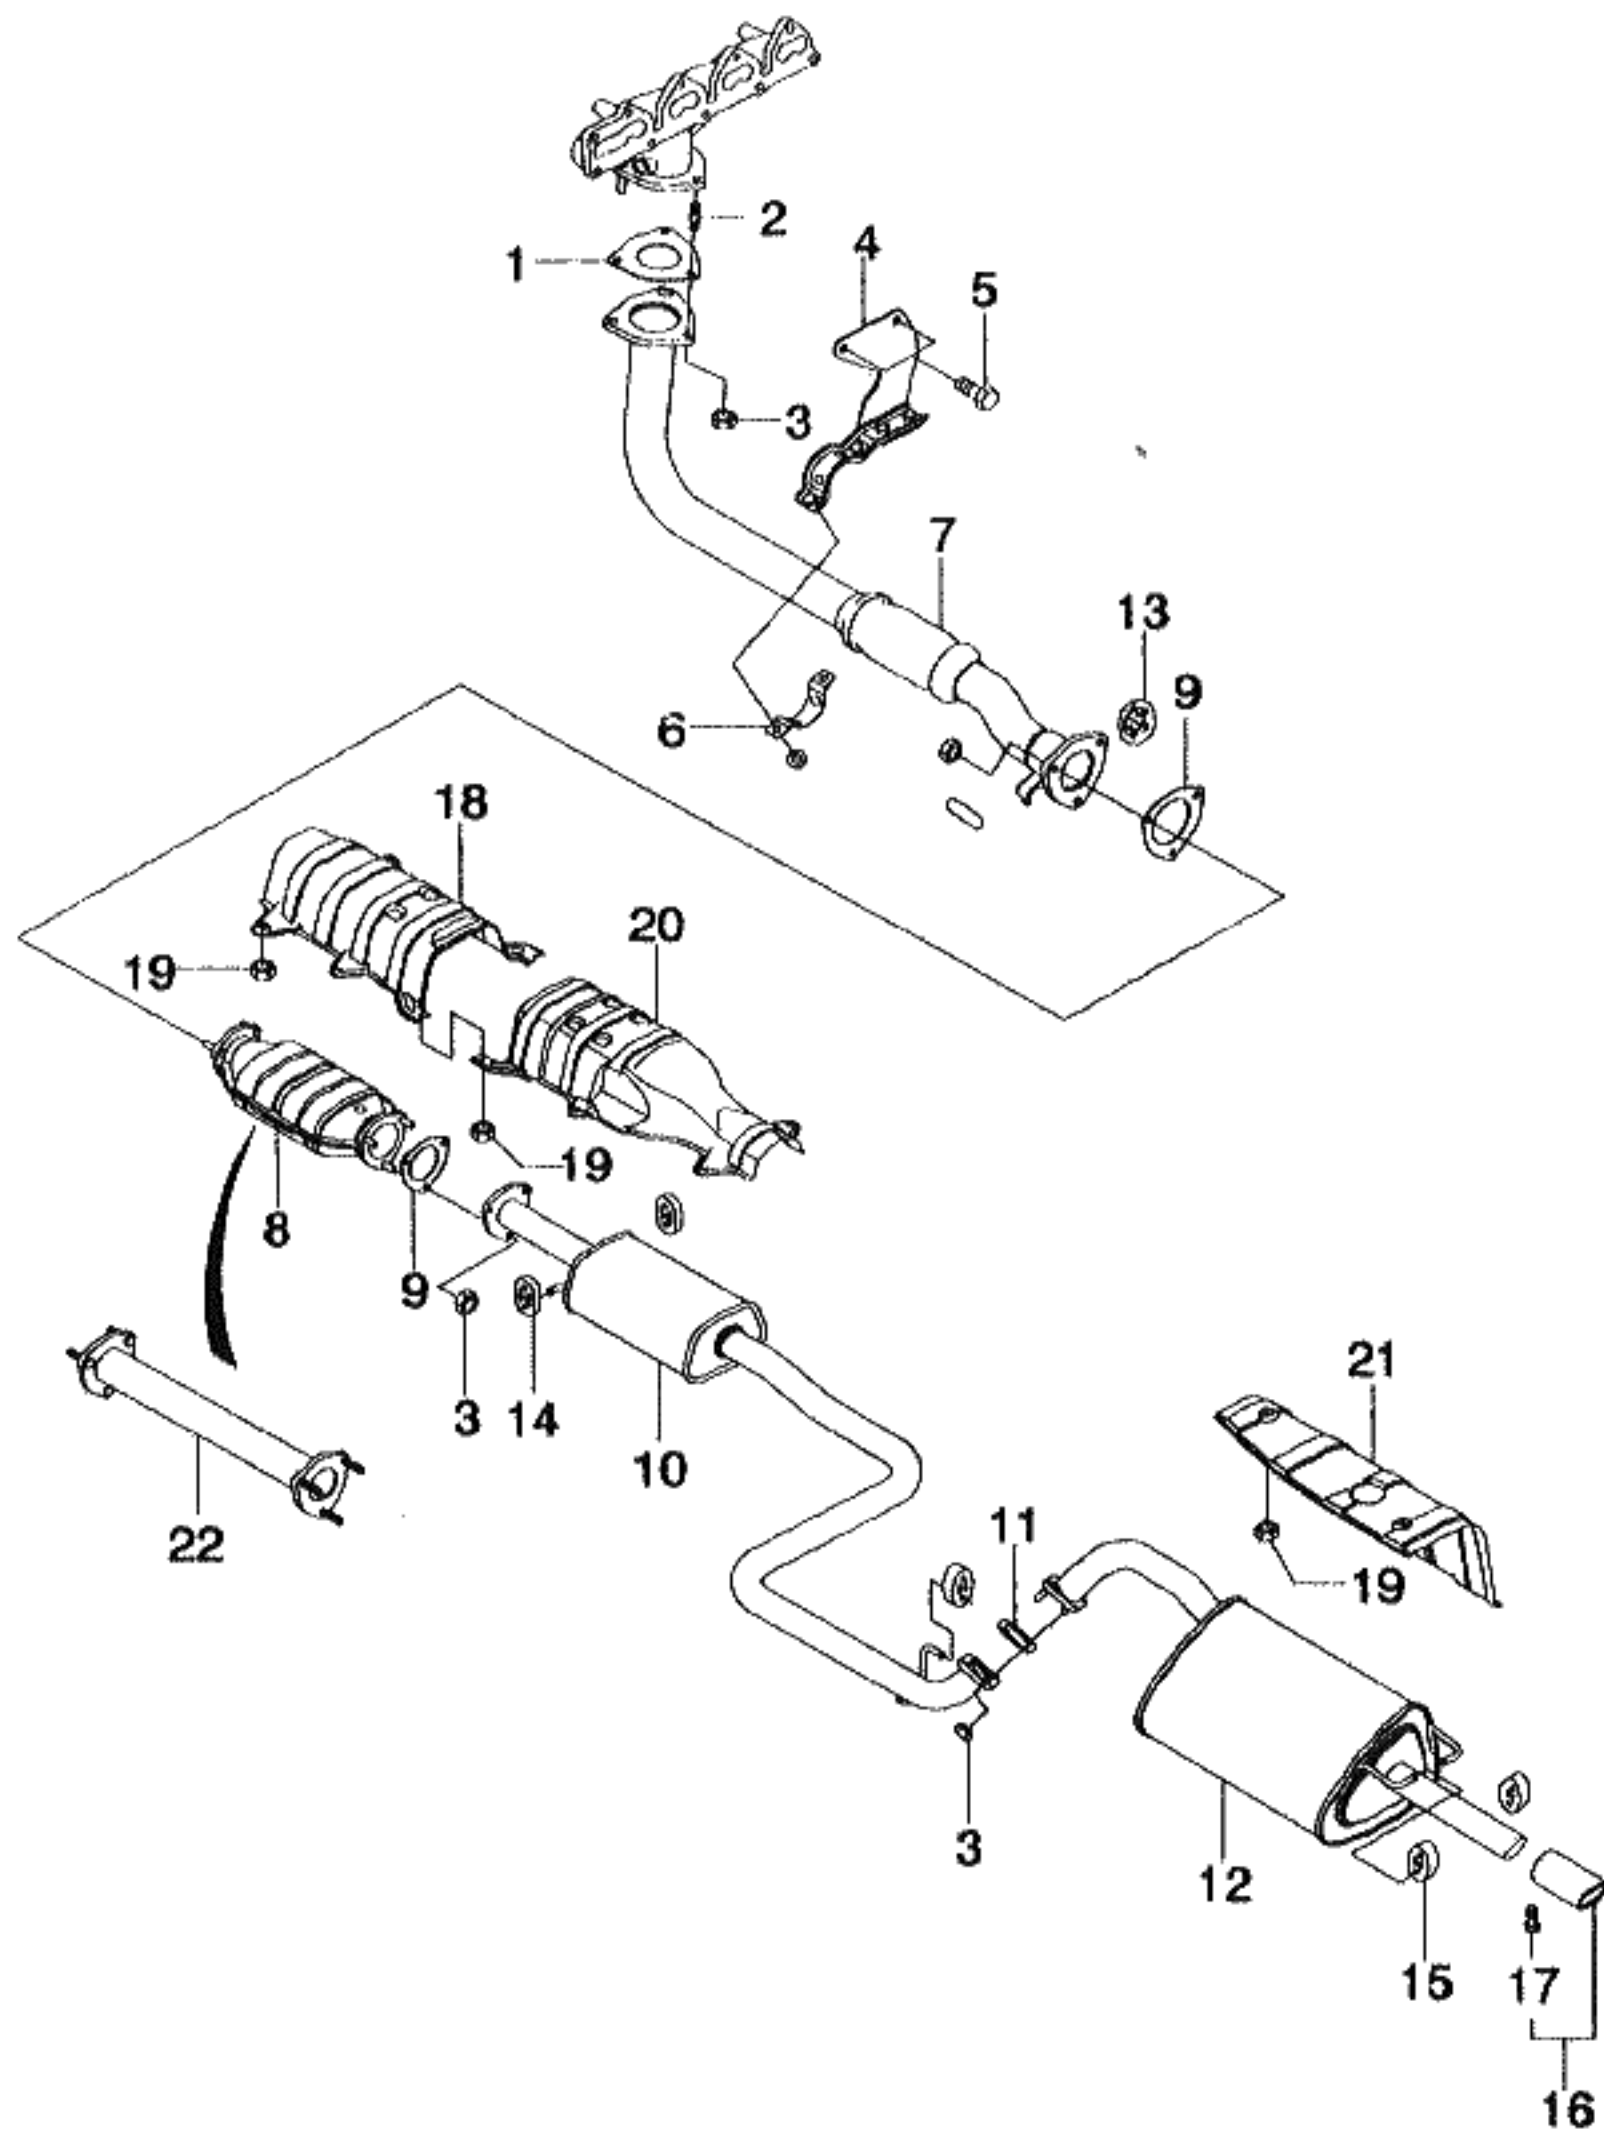


KEY NO.		PART NAME										P / CODE
I T C	PART NO.	MODEL			OPTION	L / R	Q / T / Y	EFFECTIVE DATE		REMARKS		
		T / A	S X	C D X				FROM	TO			
	[01] 96184655	(E) GASKET-EXHAUST,FR PIPE (D) DICHTUNG	S	S		(F) JOINT (S) JUNTA	1					
	[02] 92063487	(E) BOLT-STUD (D) STEG,ABGAS ROHR	S	S		(F) TOURILLON (S) TRAVESAÑO-TUBO DE ESCAPE	3					
	[03] 08311-38102	(E) NUT-HEXAGON (D) MUTTER	S	S		(F) ECROU (S) TUERCA	3					
	[04] 96351544	(E) BRACKET A-UPPER,EXH,FR (D) TRÄGER	S	S		(F) SUPPORT (S) SOPORTE	1					
	[05] 09116-10001 O 09117-10003	(E) BOLT-W/WASHER (D) SCHRAUBE	S	S		(F) BOULON (S) PERNO	2	970803				
	[06] 96351545	(E) BRACKET-LOWER,EXHAUST,FR (D) TRÄGER	S	S		(F) SUPPORT (S) SOPORTE	1					
	[07] 96181340	(E) PIPE A-FR,EXHAUST (D) ROHR,ABGAS VORNE	S	S		(F) TUYAU (S) TUBERIA-ESCAPE	1				VA	
	[08] 96351532 96350081 96351206 96350080	(E) CONVERTER A-CATALYTIC (D) KATALYSATOR	S			(F) CONVERTISSEUR-CATALYTIQUE (S) CONVERTIDOR-CATALITICO	1			NOT APPLIED	KV	
			O	S	&L88		1				KD	
			A	A	&NN7		1				EO	
	[09]	(E) GASKET-CONVERTER,CATAL (D) DICHTUNG				(F) JOINT-CONVERTISSEUR VATAL (S) JUNTA-CONVERTIDOR VATAL						

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON



2460 EXHAUST PIPE LINE

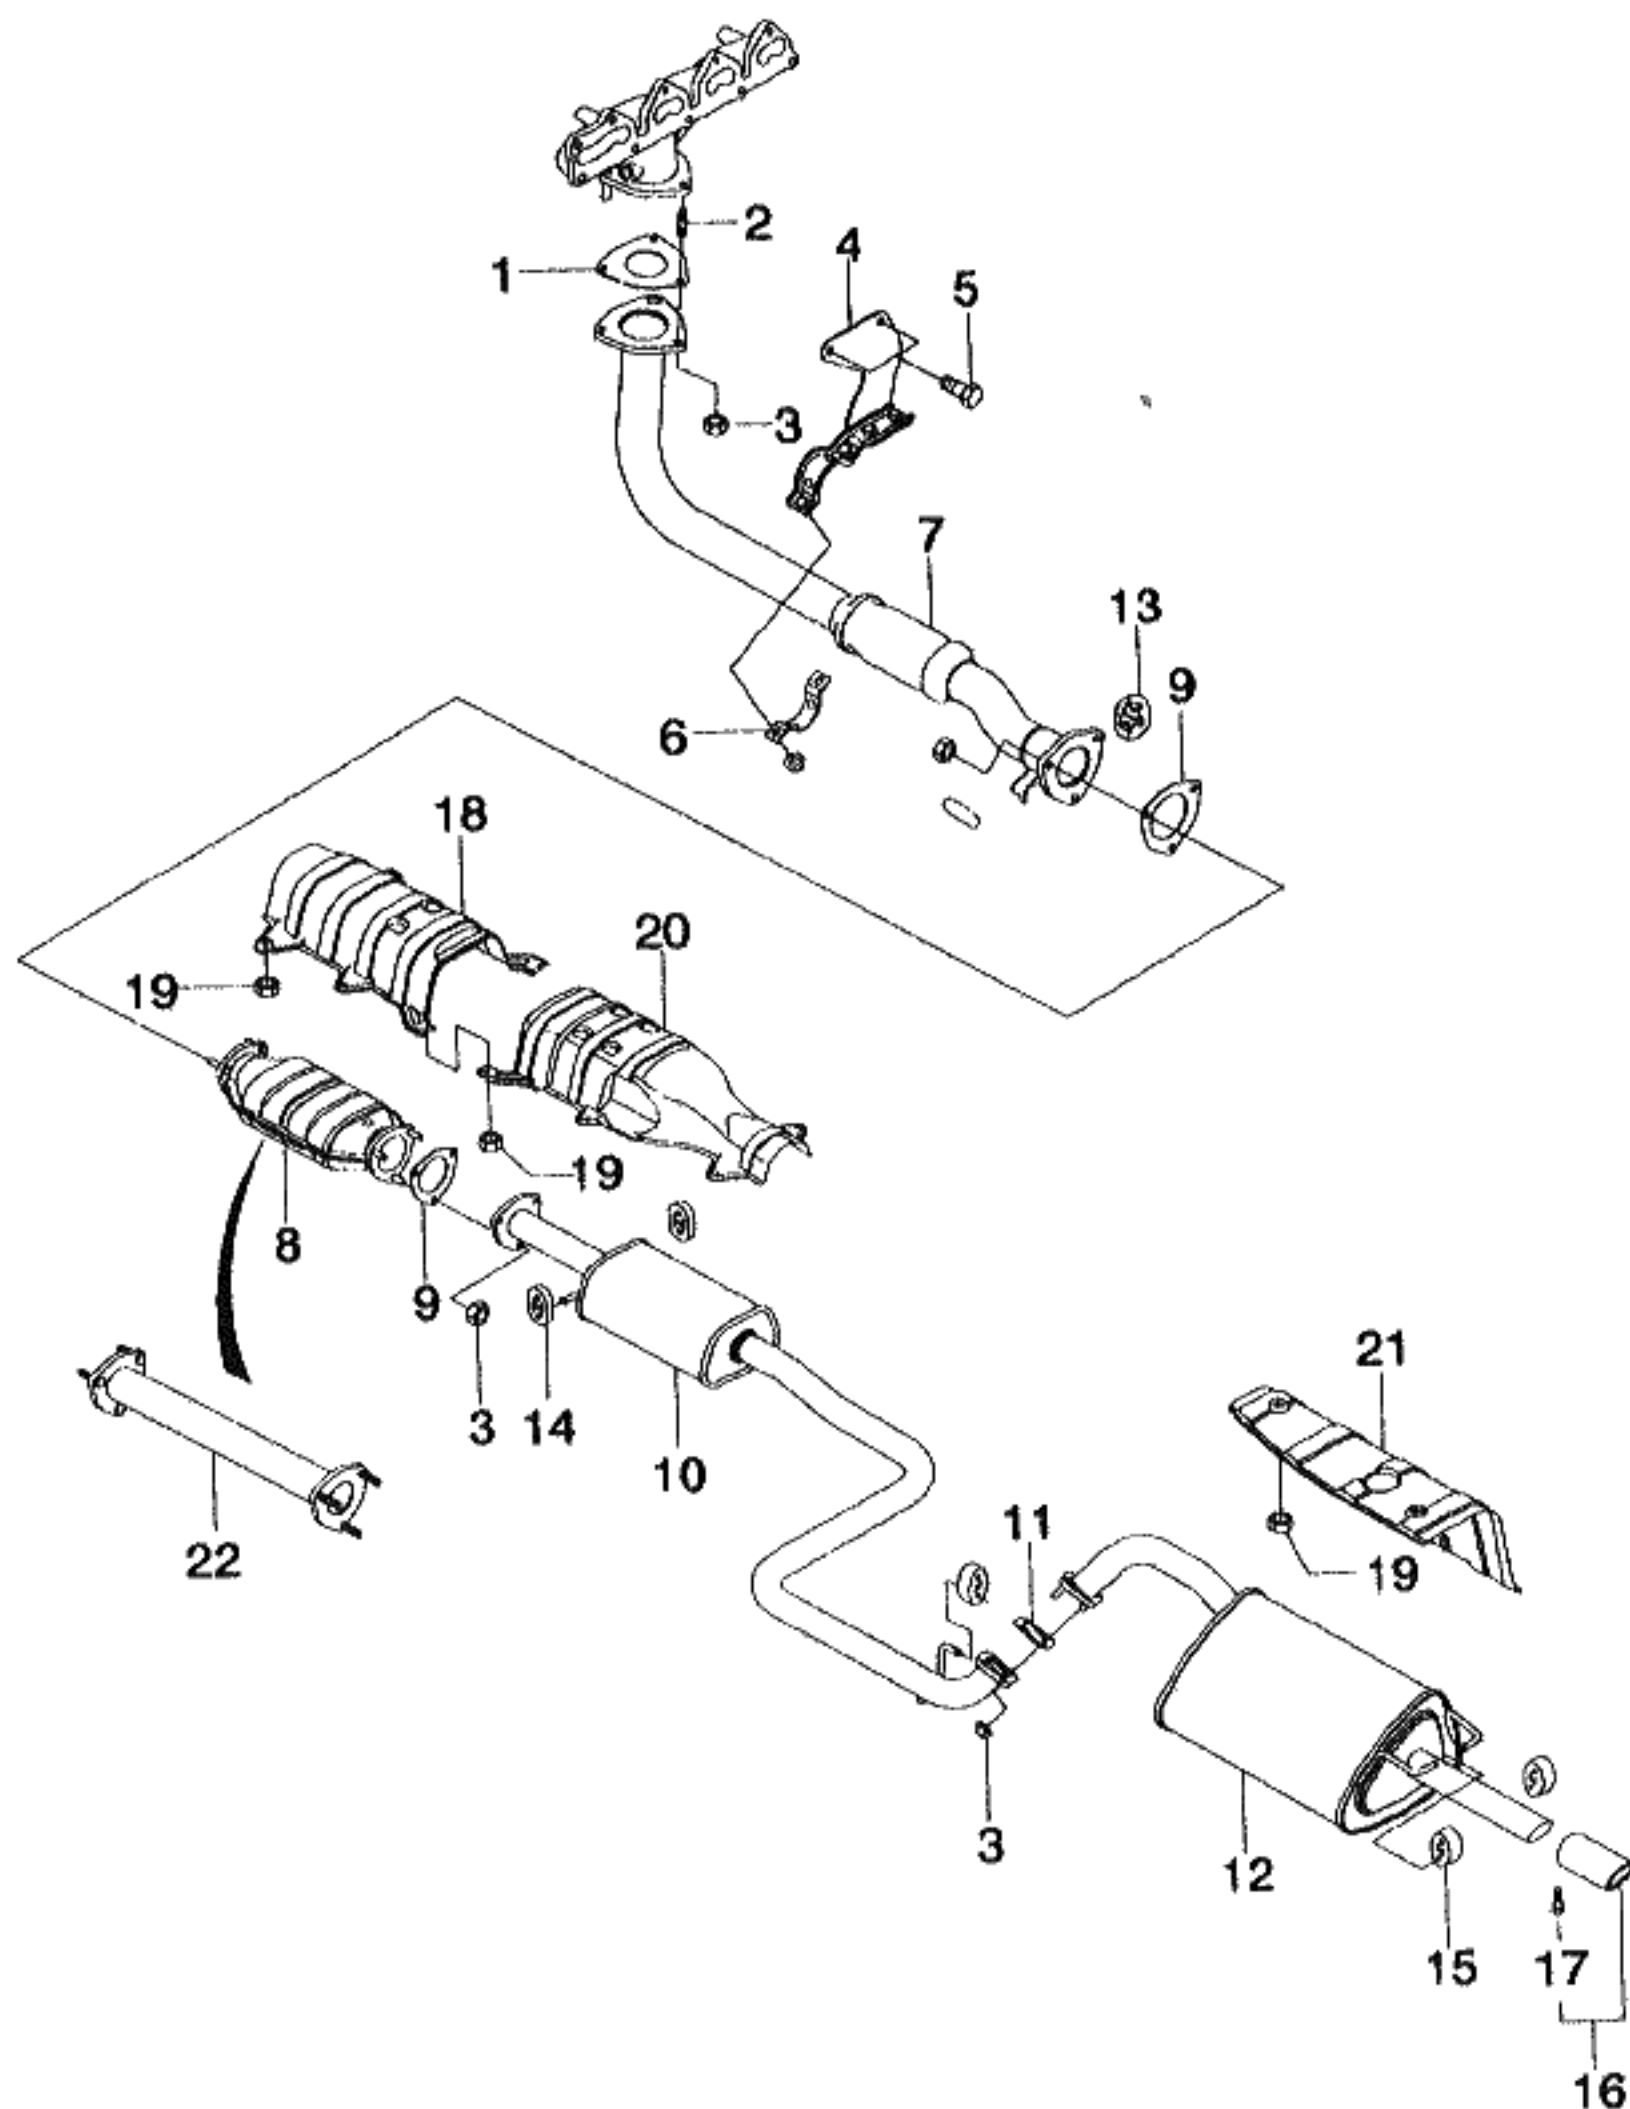


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	96350814	.	S	S	(E)MUFFLER A-EXHAUST FR (D)AUSPUFFTOPF,VORNE		2			(F)POT D'ECHAPPEMENT (S)SILENCIADOR-ESCAPE-DELAN	
	[10]										
	96181350	.	S	S	(E)GASKET-RR MUFFLER (D)DICHTUNG		1			(F)JOINT (S)JUNTA	VC
	[11]										
	96181581	.	S	S	(E)MUFFLER A-EXHAUST,RR (D)AUSPUFFTOPF,HINTEN		1			(F)POT D'ECHAPPEMENT (S)SILENCIADOR-ESCAPE	
	[12]										
	96181352	.	S	S	(E)HANGER-RUBBER,RING (D)GUMMIAUFHAENGER		1			(F)SUPPORT (S)PERCHA	VE
	[13]										
	96351182	.	S	S	(E)HANGER-RUBBER (D)GUMMIAUFHAENGER		2			(F)SUPPORT (S)PERCHA	
	[14]										
	96351183	.	S	S	(E)RUBBER-HANGER (D)GUMMI		2			(F)CAOUTCHOUC (S)GOMA	
	[15]										
	96351529	.	S	S	(E)TRIM A-RING,EXHAUST (D)RING,AUSPUFF-VERZIERUNG		3			(F)ANNEAU (S)ANILLO-ADORNO	
	[16]										
	96184414	.	S	S	(E)BOLT-HEXAGON (D)SCHRAUBE		1			(F)BOULON (S)PERNO	TA
	[17]										
	01107-06125	.	S	S	(E)SHIELD-CATAL CONVER,PROTV (D)SCHILD,KATALYSATOR		1			(F)BOUCLIER-PROTECTION (S)ESCUDO-PROTECTOR	
	[18]										
	96182128	.	S	S	(E)NUT (D)MUTTER		1			(F)ECROU (S)TUERCA	
	[19]										
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

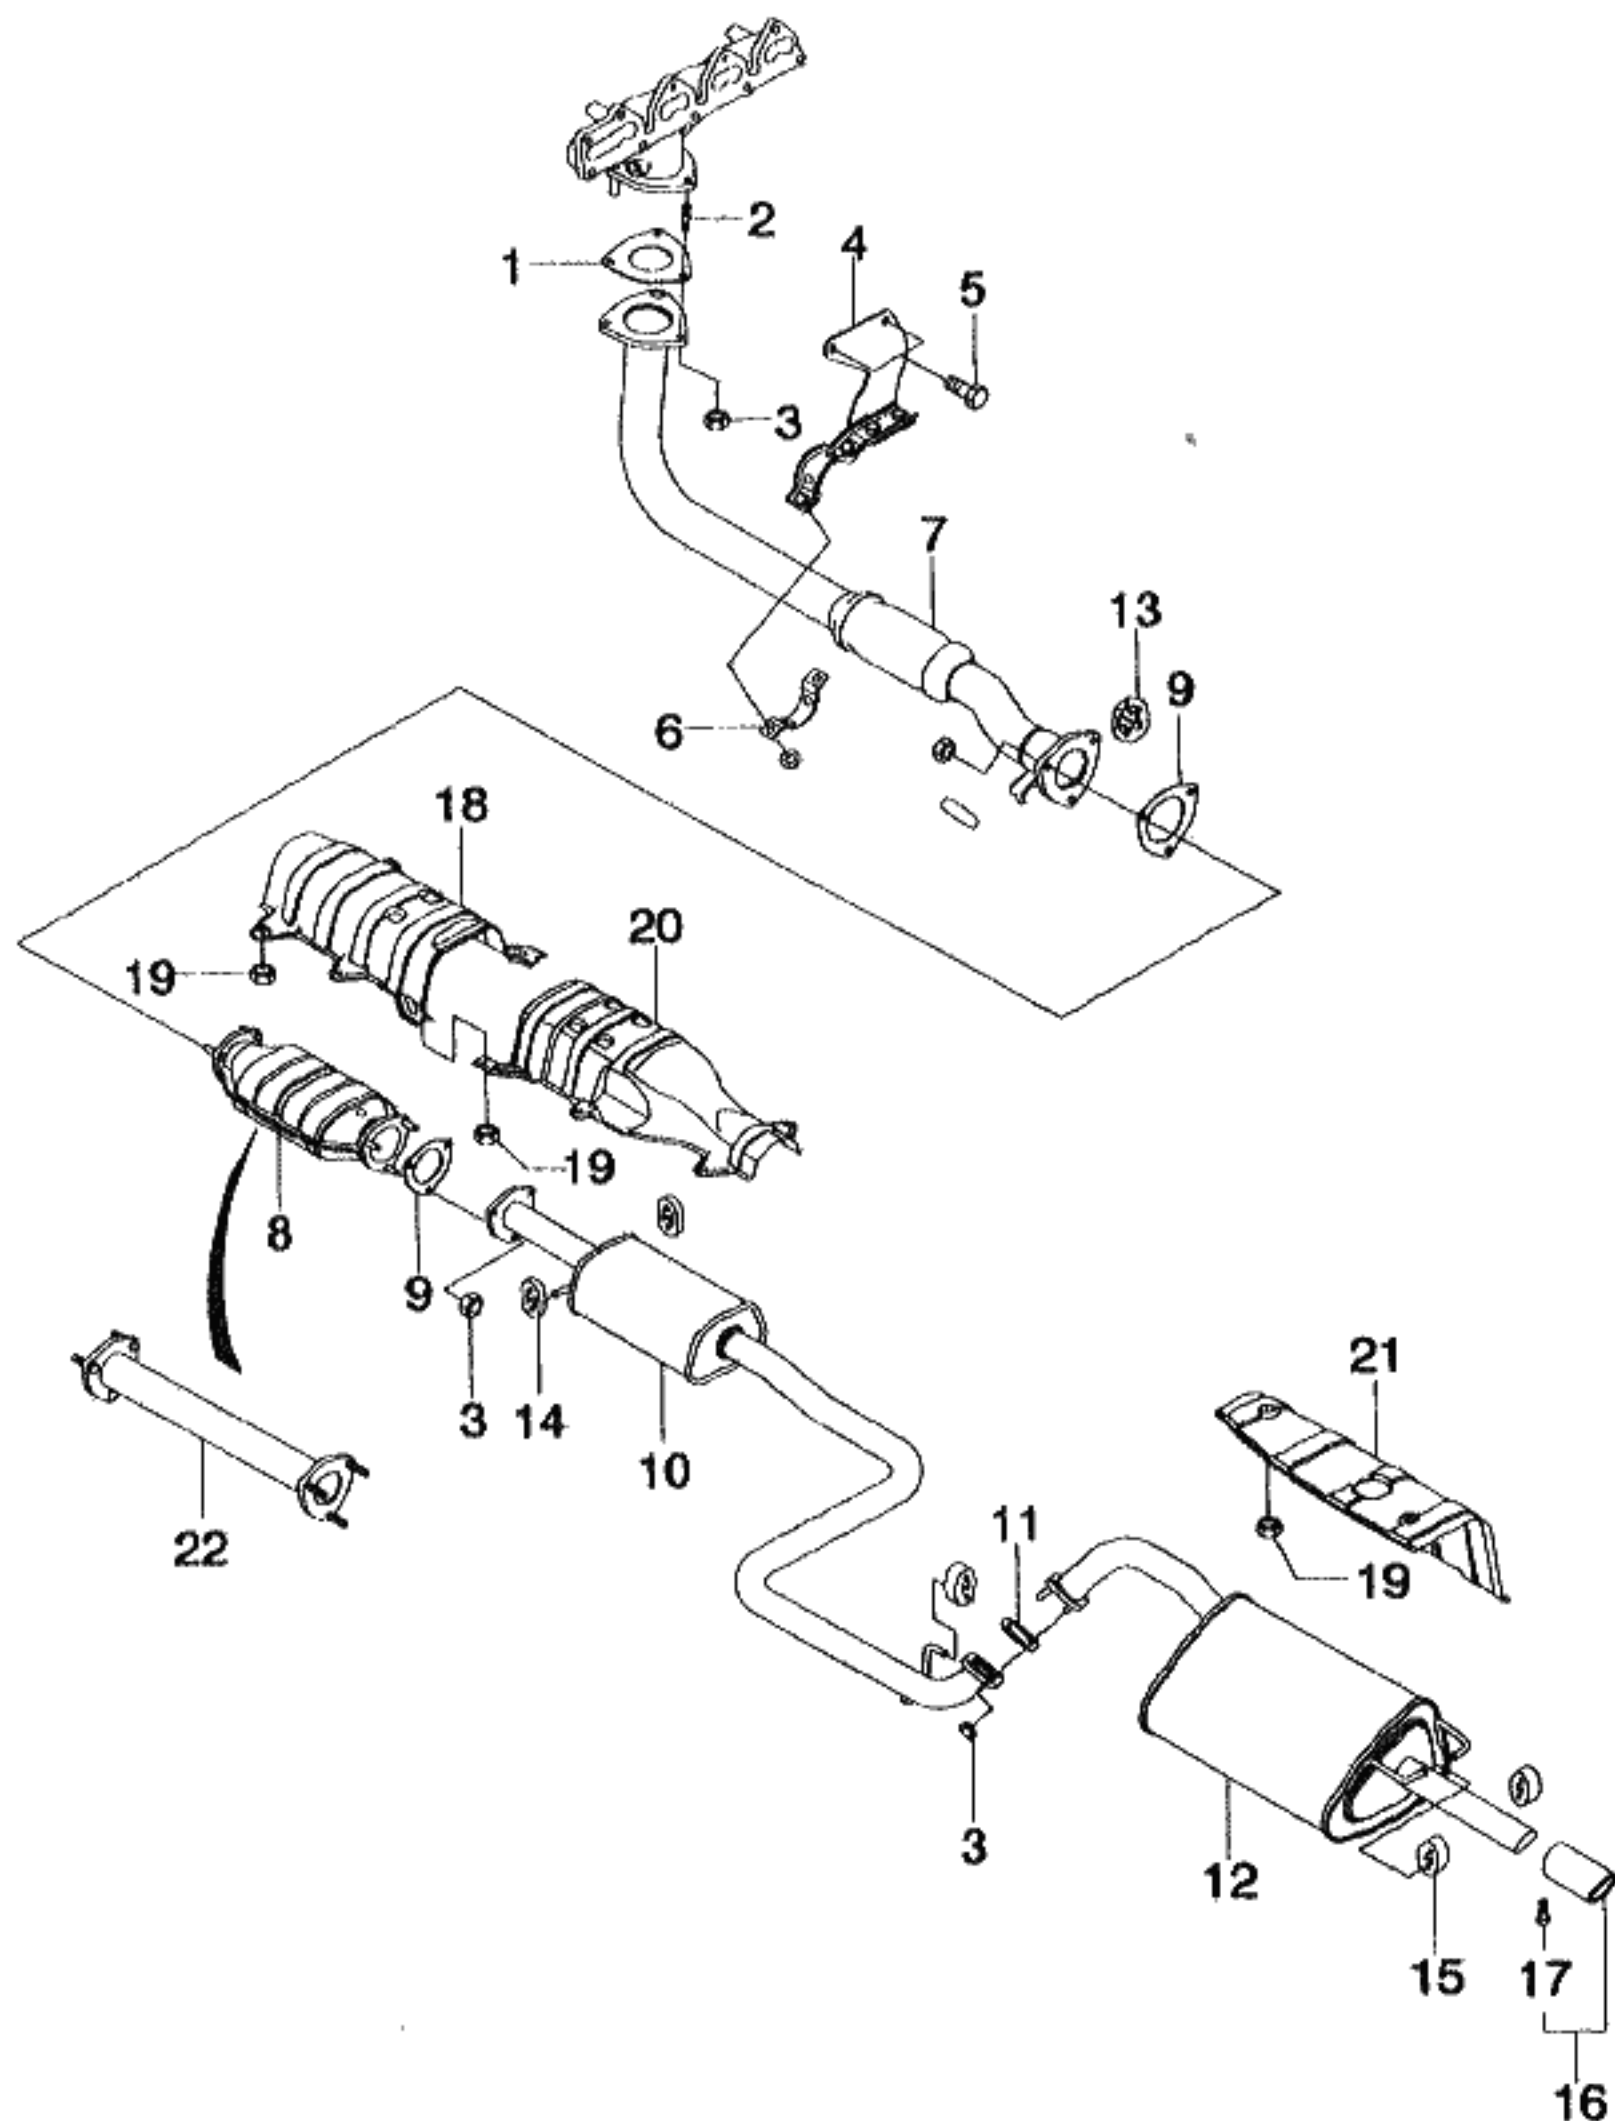

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	09159-05002	.	S	S			4				
	[20]				(E)SHIELD-PROTV,MUFFLER,FR (D)SCHILD,SCHALLDÄMPFER		(F)BOUCLIER-PROTECTION (S)ESCUDO-PROTECTOR				
	96182126	.	S	S			1				
	[21]				(E)SHIELD-PROTV,MUFFLER,RR (D)SCHILD,SCHALLDÄMPFER		(F)BOUCLIER-PROTECTION (S)ESCUDO-PROTECTOR				
	96182130	.	S	S			1				
	[22]				(E)PIPE A-EXHAUST,CONNECTOR (D)ROHR		(F)TUYAU (S)TUBERIA				
	96351601	.	S	S	&NN4		1				EA
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

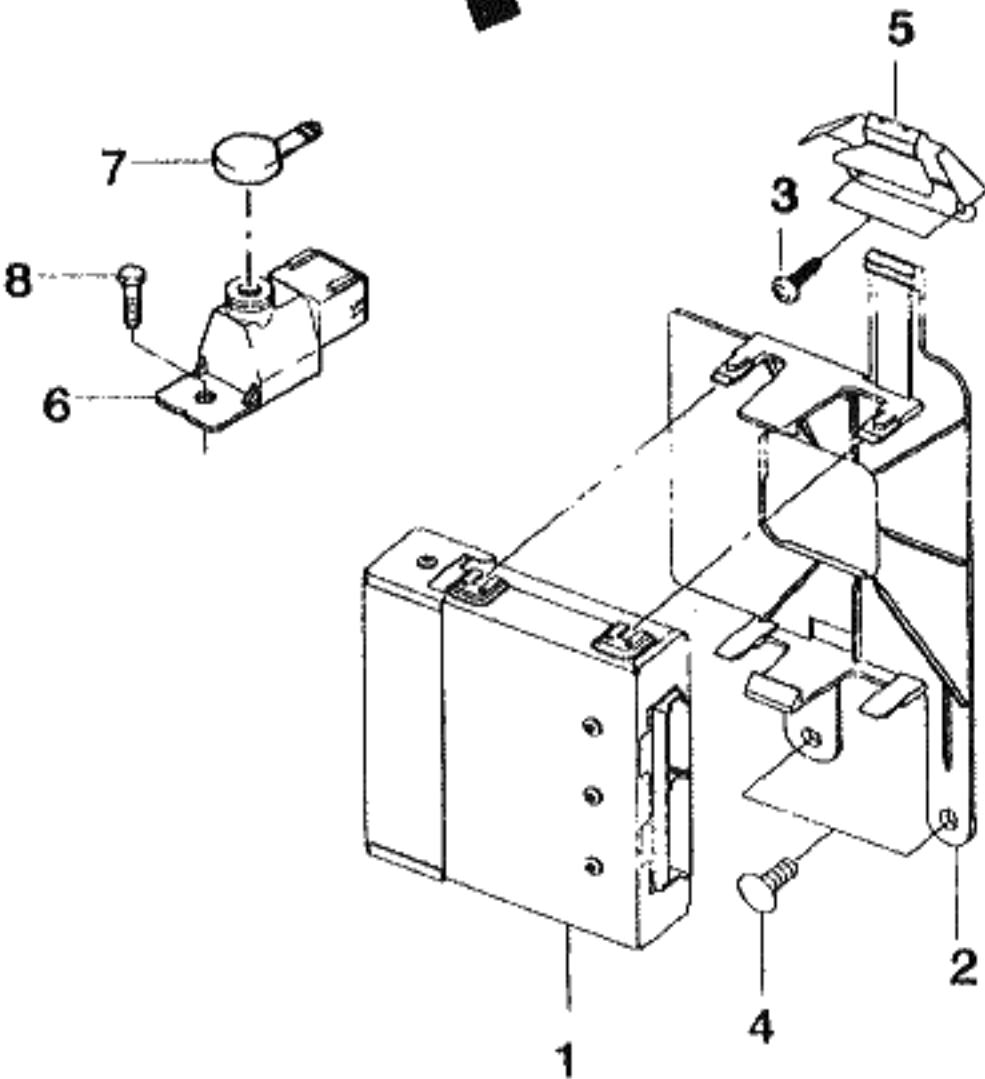
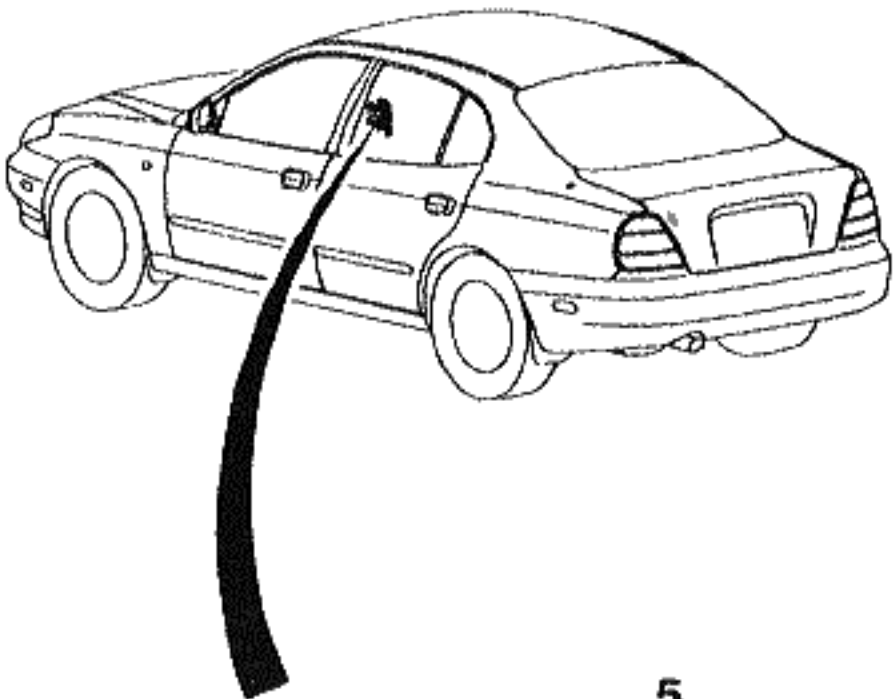


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)ECM (D)STEUERUNGS-EINHEIT					(F)UNITE DE CONTROLE (S)UNIDAD DE CONTROL				
	16247309	M	S	.	&L76&NN4		1				1C
	16247319	A	O	.	&L76&NN4		1				3C
	16248339	M	A	.	&L76&NN4&UM1		1				2C
	16248349	A	A	.	&L76&NN4&UM1		1				4C
	16269699	M	A	.	&L76&EC1&NN4		1				5G
	16269709	A	A	.	&L76&EC1&NN4		1				6G
	16269799	M	A	.	&L76&NN4&XHA		1				7G
	16269809	A	A	.	&L76&NN4&XHA		1				8G
	16269659	M	A	.	&L76&NN4&XCA		1				8D
	16269669	A	A	.	&L76&NN4&XCA		1				9D
	16248299	M	A	.	&L76&NN6		1				9C
	16248319	A	A	.	&L76&NN6		1				2D
	16248309	M	A	.	&L76&NN6&UM1		1				1D
	16248329	A	A	.	&L76&NN6&UM1		1				3D
	16269619	M	A	.	&L76&NN6&EC2		1				1G
	16269629	A	A	.	&L76&NN6&EC2		1				2G
	16269739	M	A	.	&L76&NN6&EC1		1				3G
	16269749	A	A	.	&L76&NN6&EC1		1				4G
	16246419	M	O	S	&L88&NN4		1				5C
	16246429	A	O	O	&L88&NN4		1				7C
	16248419	M	A	A	&L88&NN4&UM1		1				6C
	16248429	A	A	A	&L88&NN4&UM1		1				8C
	16269719	M	A	A	&L88&NN4&EC1		1				3J
	16269729	A	A	A	&L88&NN4&EC1		1				4J
	16269819	M	A	A	&L88&NN4&XHA		1				5J
	16269829	A	A	A	&L88&NN4&XHA		1				6J
	16269679	M	A	A	&L88&NN4&XCA		1				7J
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

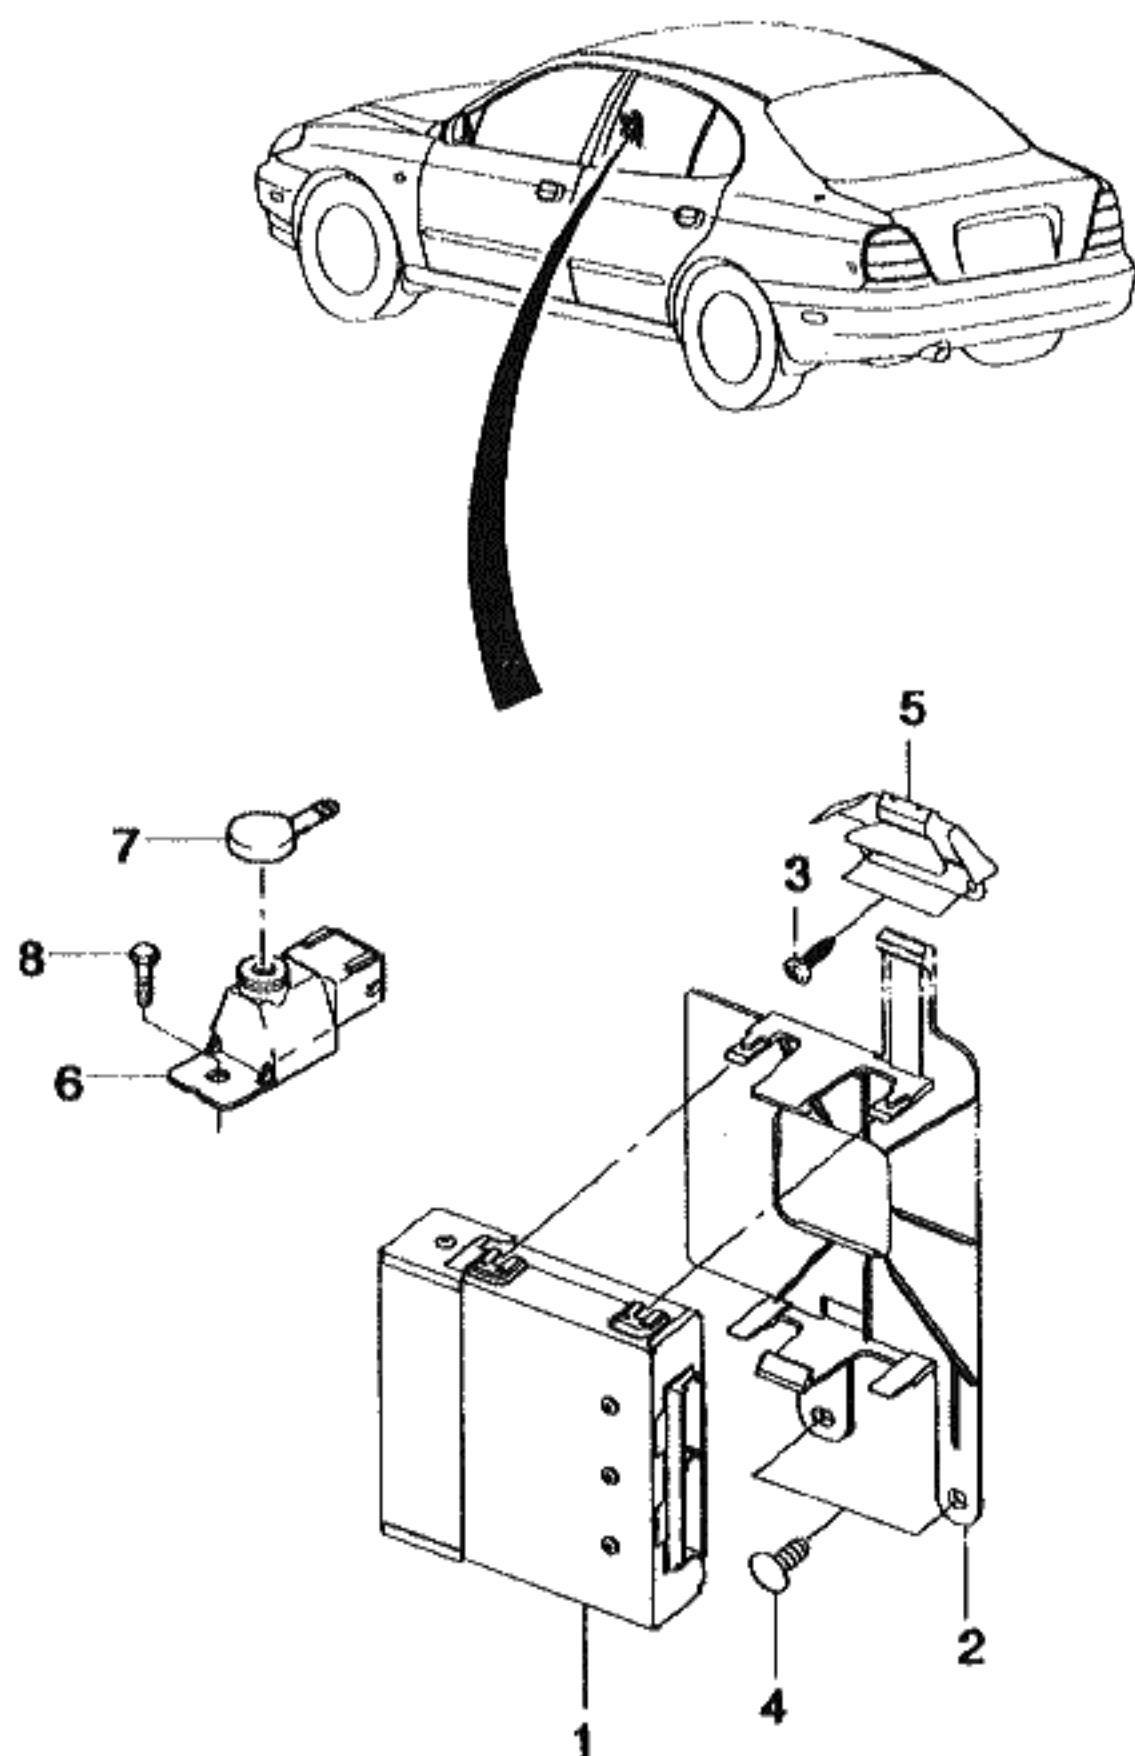

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	16269689	A	A	A	&L88&NN4&XCA		1				8J
	16246379	M	A	A	&L88&NN6		1				9K
	16246389	A	A	A	&L88&NN6		1				2L
	16248399	M	A	A	&L88&NN6&UM1		1				1L
	16248409	A	A	A	&L88&NN6&UM1		1				3L
	16269759	M	A	A	&L88&NN6&EC1		1				9G
	16269769	A	A	A	&L88&NN6&EC1		1				1H
	16269779	M	A	A	&L88&NN6&XHA		1				2H
	16269789	A	A	A	&L88&NN6&XHA		1				3H
	16269639	M	A	A	&L88&NN6&EC2		1				4H
	16269649	A	A	A	&L88&NN6&EC2		1				5H
	16246439	M	A	A	&L88&KL9&NN6		1			FOR BRAZIL	6H
	16246449	A	A	A	&L88&KL9&NN6		1			FOR BRAZIL	7H
	16246399	M	A	A	&L88&NN7		1				3E
	16246409	A	A	A	&L88&NN7		1				4E
	16246989	M	A	A	&L88&NN7&UM1		1				1E
	16246999	A	A	A	&L88&NN7&UM1		1				2E
	16269839	M	A	A	&L88&NN7&EC2		1				8H
	16269849	A	A	A	&L88&NN7&EC2		1				1J
	16269859	M	A	A	&L88&NN7&EC2&UM1		1				9H
	16269869	A	A	A	&L88&NN7&EC2&UM1		1				2J
	[02]	(E)BRACKET-ECM,ENGINE (D)TRÄGER					(F)SUPPORT (S)SOPORTE				
	96206956	.	S	S			1				
	[03]	(E)SCREW-TAPPING (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	03160-48163	.	S	S			2				
	[04]	(E)CLIP (D)KLEMME					(F)ATTACHE (S)GRAPA				

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

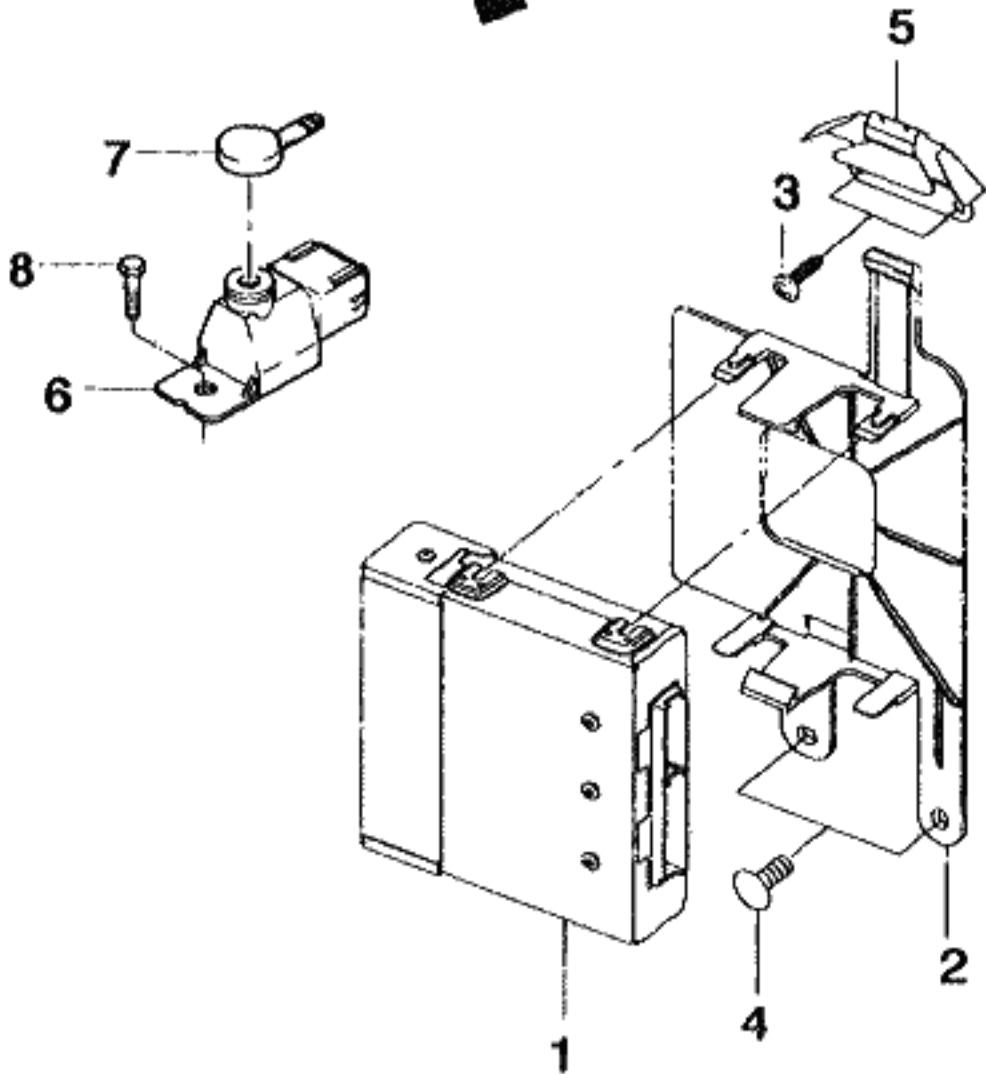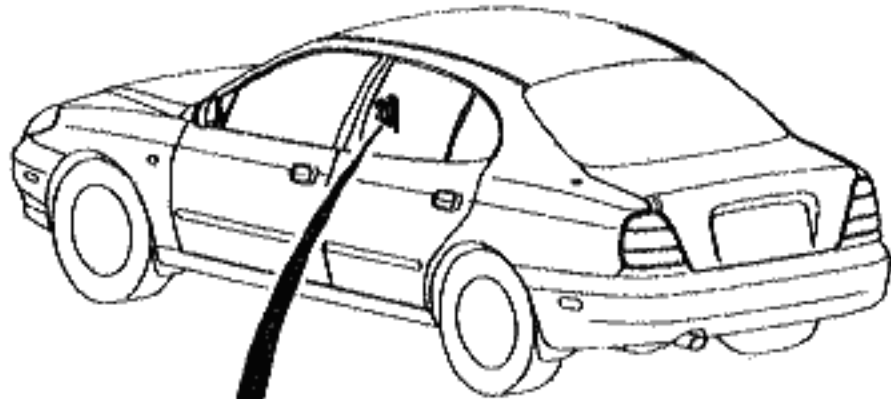


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	09409-05321	.	S	S			2				
	[05]				(E)GUIDE-BRACKET,ECM (D)FÜHRING		(F)GUIDE (S)GUIA				
	96206962	.	S	S			1				
	[06]				(E)CO POTENTIOMETER (D)MODUL		(F)MODULE (S)MODULO				
	90306761	.	S	S	&NN4		1				
	[07]				(E)CAP-ANTI TAMPER (D)DECKEL GRIFF		(F)CHAPEAU (S)TAPA-AYUDA DE ASIMIENTO				
	90243777	.	S	S	&NN4		1				
	[08]				(E)BOLT-FLANGE (D)SCHRAUBE		(F)BOULON (S)PERNO				
	01517-06163	.	S	S	&NN4		1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


3**CLUTCH & TRANSAXLE**

3110 CLUTCH COVER & DISC
3120 HYDRAULIC CLUTCH
3130 CLUTCH PEDAL
3210 MANUAL TRANSAXLE
3220 TRANSAXLE RELATED PARTS
3230 TRANSAXLE GEAR
3240 REVERSE & COUNTER GEAR
3250 BEARING PLATE
3260 GEARSHIFT COVER & FORK
3270 DIFFERENTIAL GEAR
3510 AUTO TRANSAXLE(ZF)
3520 TORQUE CONVERTER & HOUSING
3521 TRANSAXLE HOUSING
3522 OIL PUMP & C CLUTCH
3523 OIL PAN & ACCESSORIES
3524 SPUR GEAR & SIDE COVER
3525 MAIN VALVE LEVER & PARKING
3530 B CLUTCH & BRAKE BAND


3531 INPUT SHAFT & A CLUTCH
3533 MOTOR GEAR & PLANETARY DRIVE
3534 FLY WHEEL & OUTPUT SHAFT
3540 GOVERNOR & SIDE SHAFT
3550 DIFFERENTIAL & SPEEDMETER
3560 VALVE BODY
3910 GEARSHIFT CONTROL(5-SPD,M/T)
3921 GEARSHIFT CONTROL(4-SPEED A/T,ZF)

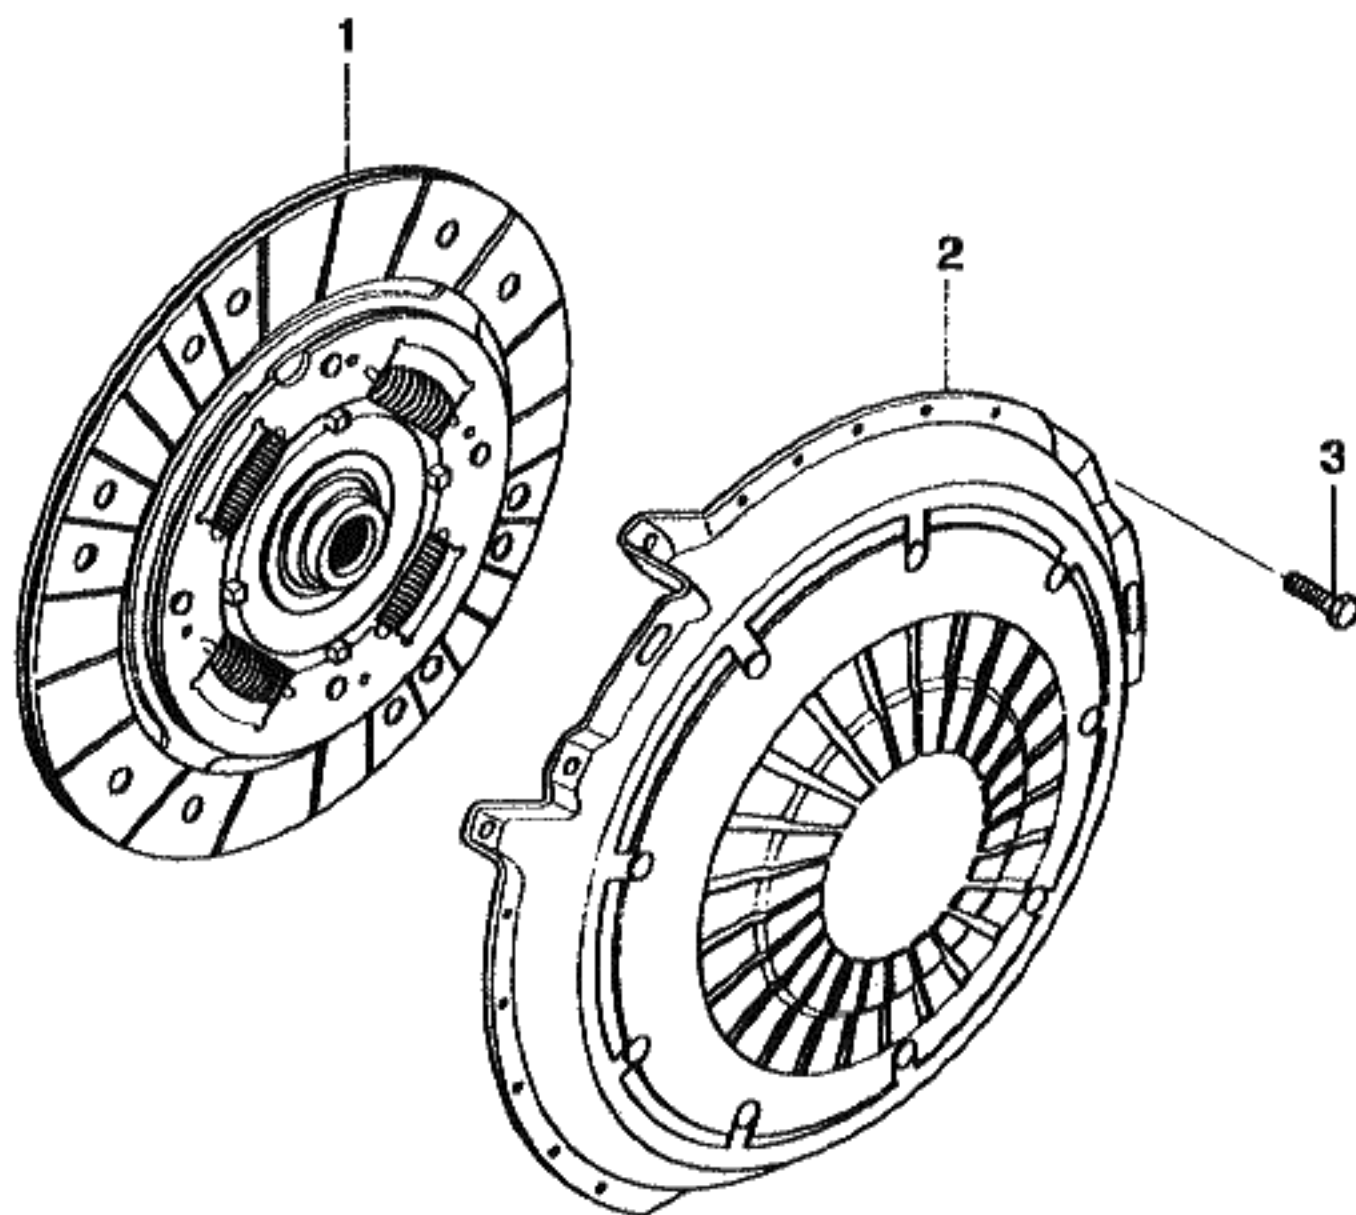


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)DISC-CLUTCH (D)SCHEIBE,KUPPLUNG					(F)DISQUE-EMBAYAGE (S)DISCO-EMBRAGUE				
	96181969	M	S	.			1				
	96183203	M	O	S	&L88		1				
	[02]	(E)COVER-CLUTCH (D)DECKEL,KUPPLUNG					(F)CARTER-EMBAYAGE (S)CUBIERTA-EMBRAGUE				
	96184541	M	S	.			1				
	96182695	M	O	S	&L88		1				
	[03]	(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO				
	09100-07001	M	S	S			6				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

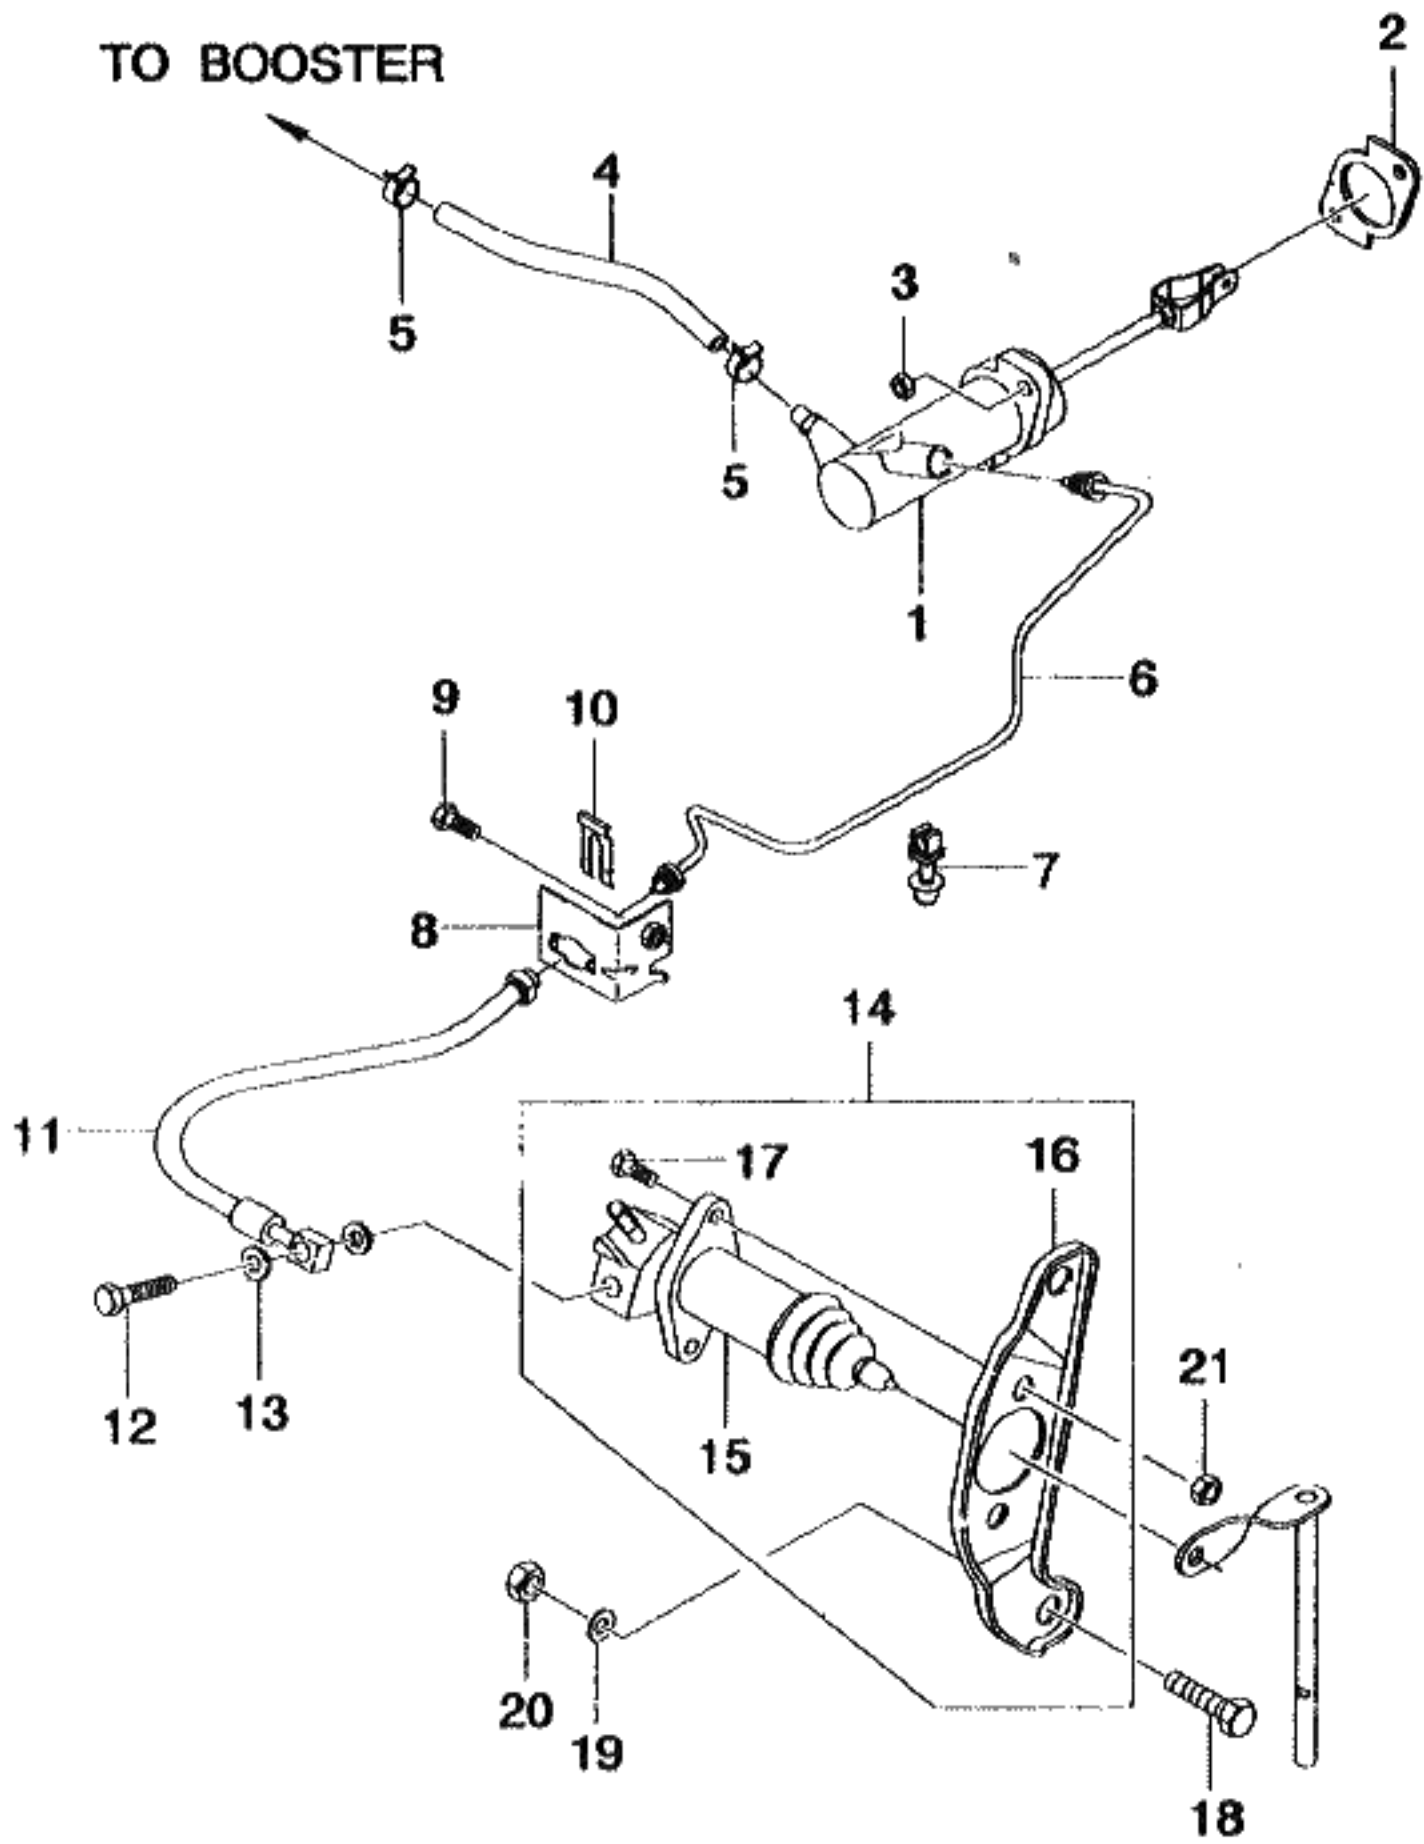


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96229375	(E) MASTER CYLINDER A-CLUTCH (D) ZYLINDER, HAUPT	M	S	S		(F) CYLINDRE-MAITRE (S) CILINDRO-MAESTRO	1			
	[02] 96184061	(E) GASKET-PEDAL UNIT CLUTCH (D) DICHTUNG	M	S	S		(F) JOINT (S) JUNTA	1			
	[03] 08311-18083	(E) NUT-HEXAGON (D) MUTTER	M	S	S		(F) ECROU (S) TUERCA	2			
	[04] 96184486	(E) HOSE A-RESERVOIR TANK (D) SCHLAUCH, BEHÄLTER	M	S	S		(F) TUYAU-RESERVOIR (S) MANGUERA-RESERVA	1			
	[05] 09401-13401	(E) CLIP (D) KLEMME	M	S	S		(F) ATTACHE (S) GRAPA	2			
	[06] 96183199 96250209	(E) PIPE A-MASTER CYLINDER (D) ROHR, HYDRAULIK KUPPLUNG	M	S	S		(F) TUYAU (S) TUBERIA	1			NOT APPLIED
	[07] 08984900 96180752	(E) CLIP (D) KLEMME	M	S	S		(F) ATTACHE (S) GRAPA	1			NOT APPLIED
	[08] 96184539	(E) CLAMP-HOSE CLUTCH (D) KLAMMER	M	S	S		(F) PINCE (S) ABRAZADERA	1			
	[09] 09116-06024 O 09116-06026	(E) BOLT-W/WASHER (D) SCHRAUBE	M	S	S		(F) BOULON (S) PERNO	1	970531		
			M	S	S			1	970601		
LEVEL						T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

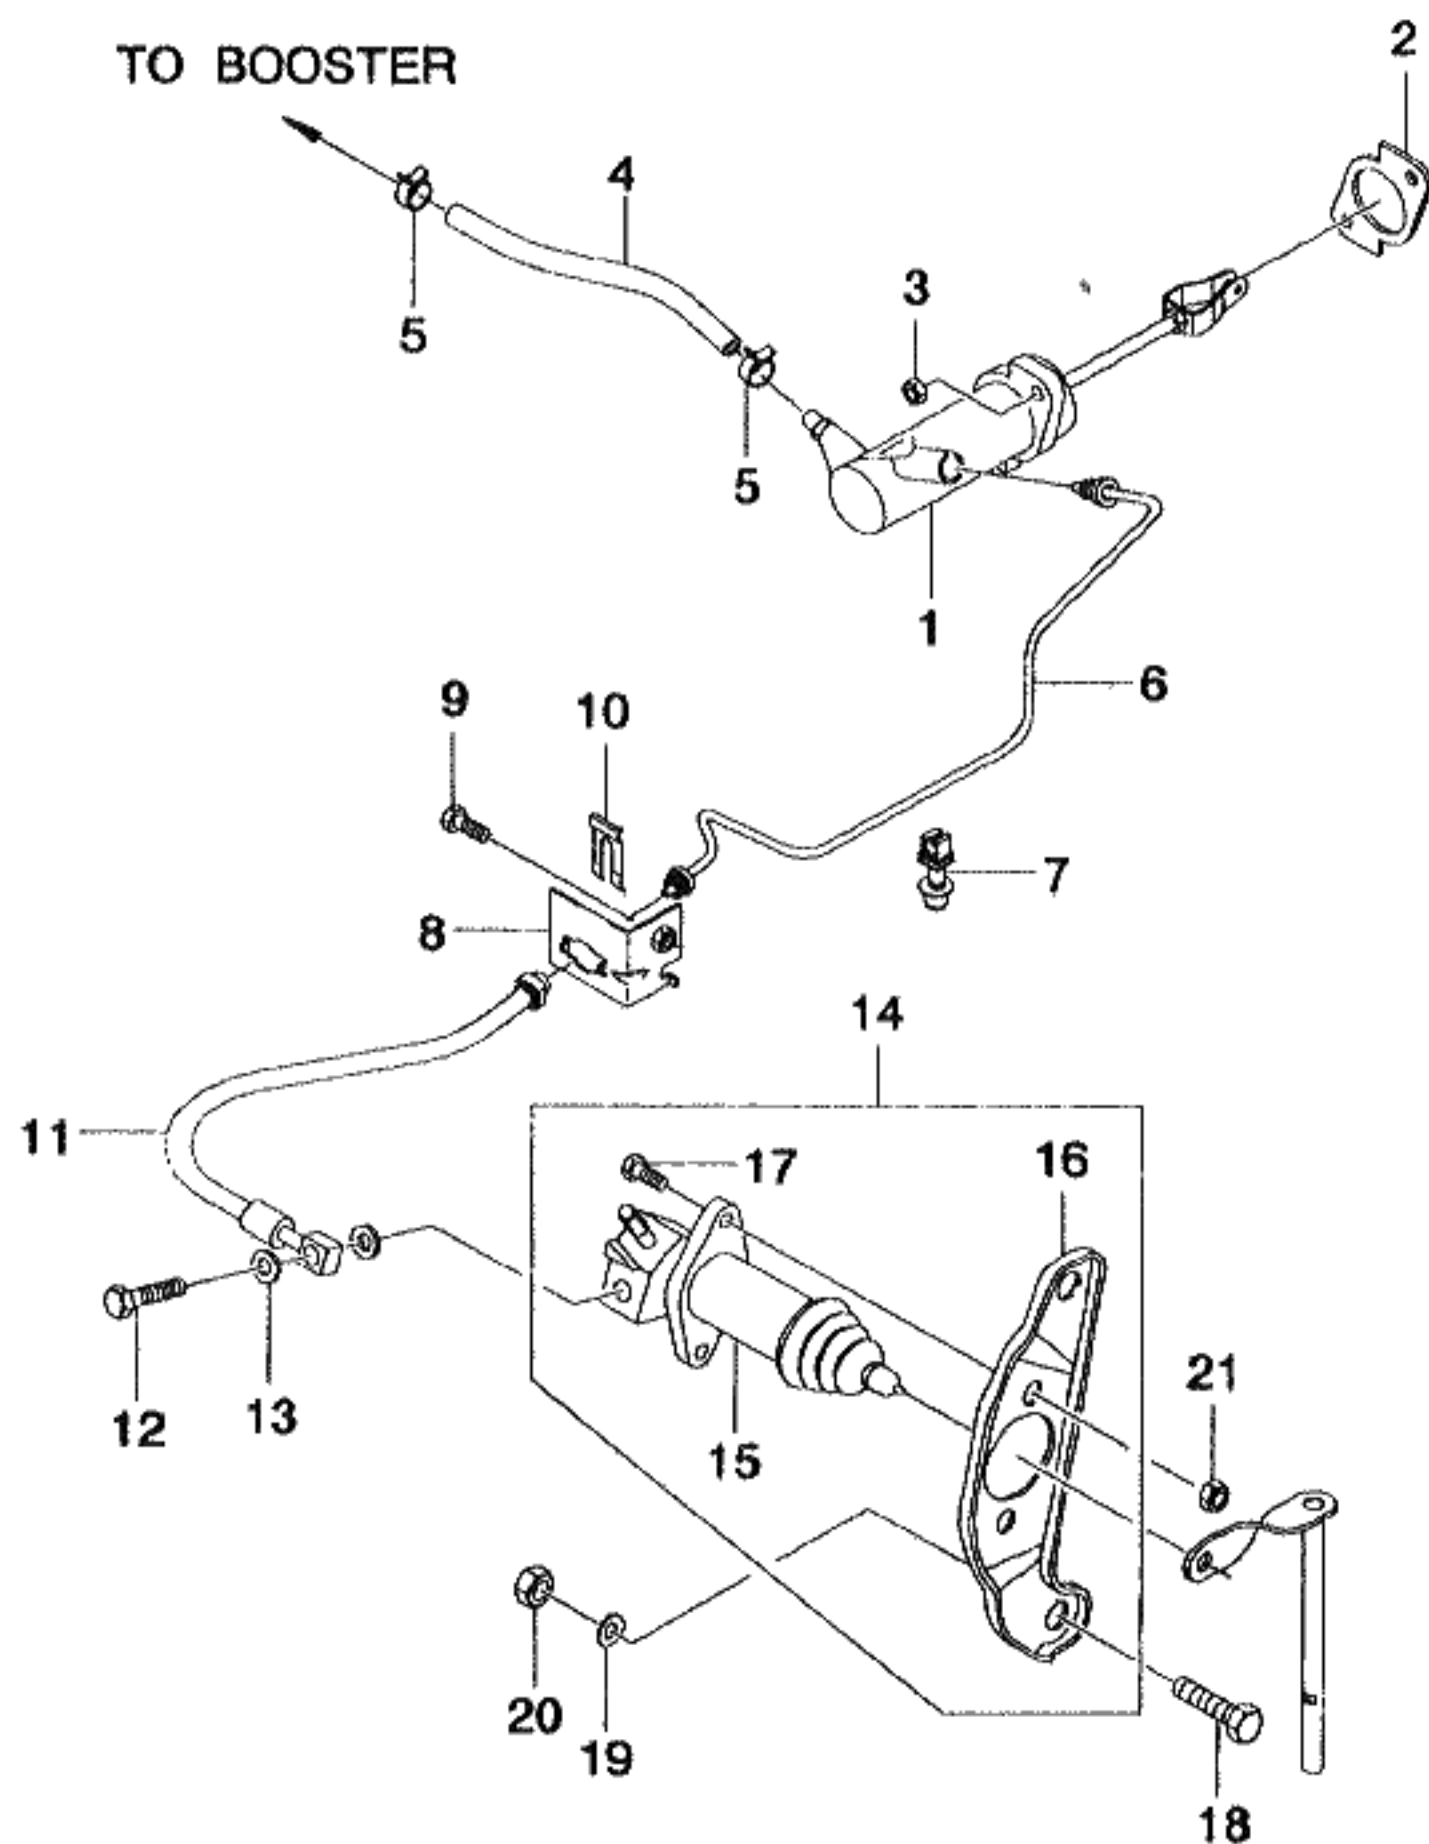


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10] 96144733	(E)CLIP (D)KLEMME M	S	S			(F)ATTACHE (S)GRAPA 1					
	[11] 96183201	(E)HOSE A-HYD CLUTCH (D)SCHLAUCH M	S	S			(F)TUYAU (S)MANGUERA 1					
	[12] 09360-10001	(E)BOLT-UNION (D)SCHRAUBE M	S	S			(F)BOULON (S)PERNO 1					
	[13] 09160-10002	(E)WASHER-PLAIN (D)DICHTUNGSRING M	S	S			(F)RONDELLE (S)ARANDELA 2					
	[14] 96243476	(E)CYLINDER A-CLUTCH RELEASE (D)ZYLINDER,LÖSUNG M	S	S			(F)CYLINDRE-RELACHE (S)CILINDRO-LIBERAR 1					
	[15] 96159109	(E)CYLINDER -CLUTCH RELEASE (D)ZYLINDER,LÖSUNG M	S	S			(F)CYLINDRE-RELACHE (S)CILINDRO-LIBERAR 1					
	[16] 96243477	(E)BRACKET-CLU RELEASE CYL (D)TRÄGER M	S	S			(F)SUPPORT (S)SOPORTE 1					
	[17] 09106-08001	(E)BOLT-CROWN (D)SCHRAUBE M	S	S			(F)BOULON (S)PERNO 2					
	[18] 09100-12001	(E)BOLT-HEXAGON (D)SCHRAUBE M	S	S			(F)BOULON (S)PERNO 1					
	[19] 08321-31123	(E)WASHER-SPRING (D)DICHTUNGSRING M	S	S			(F)RONDELLE (S)ARANDELA 1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

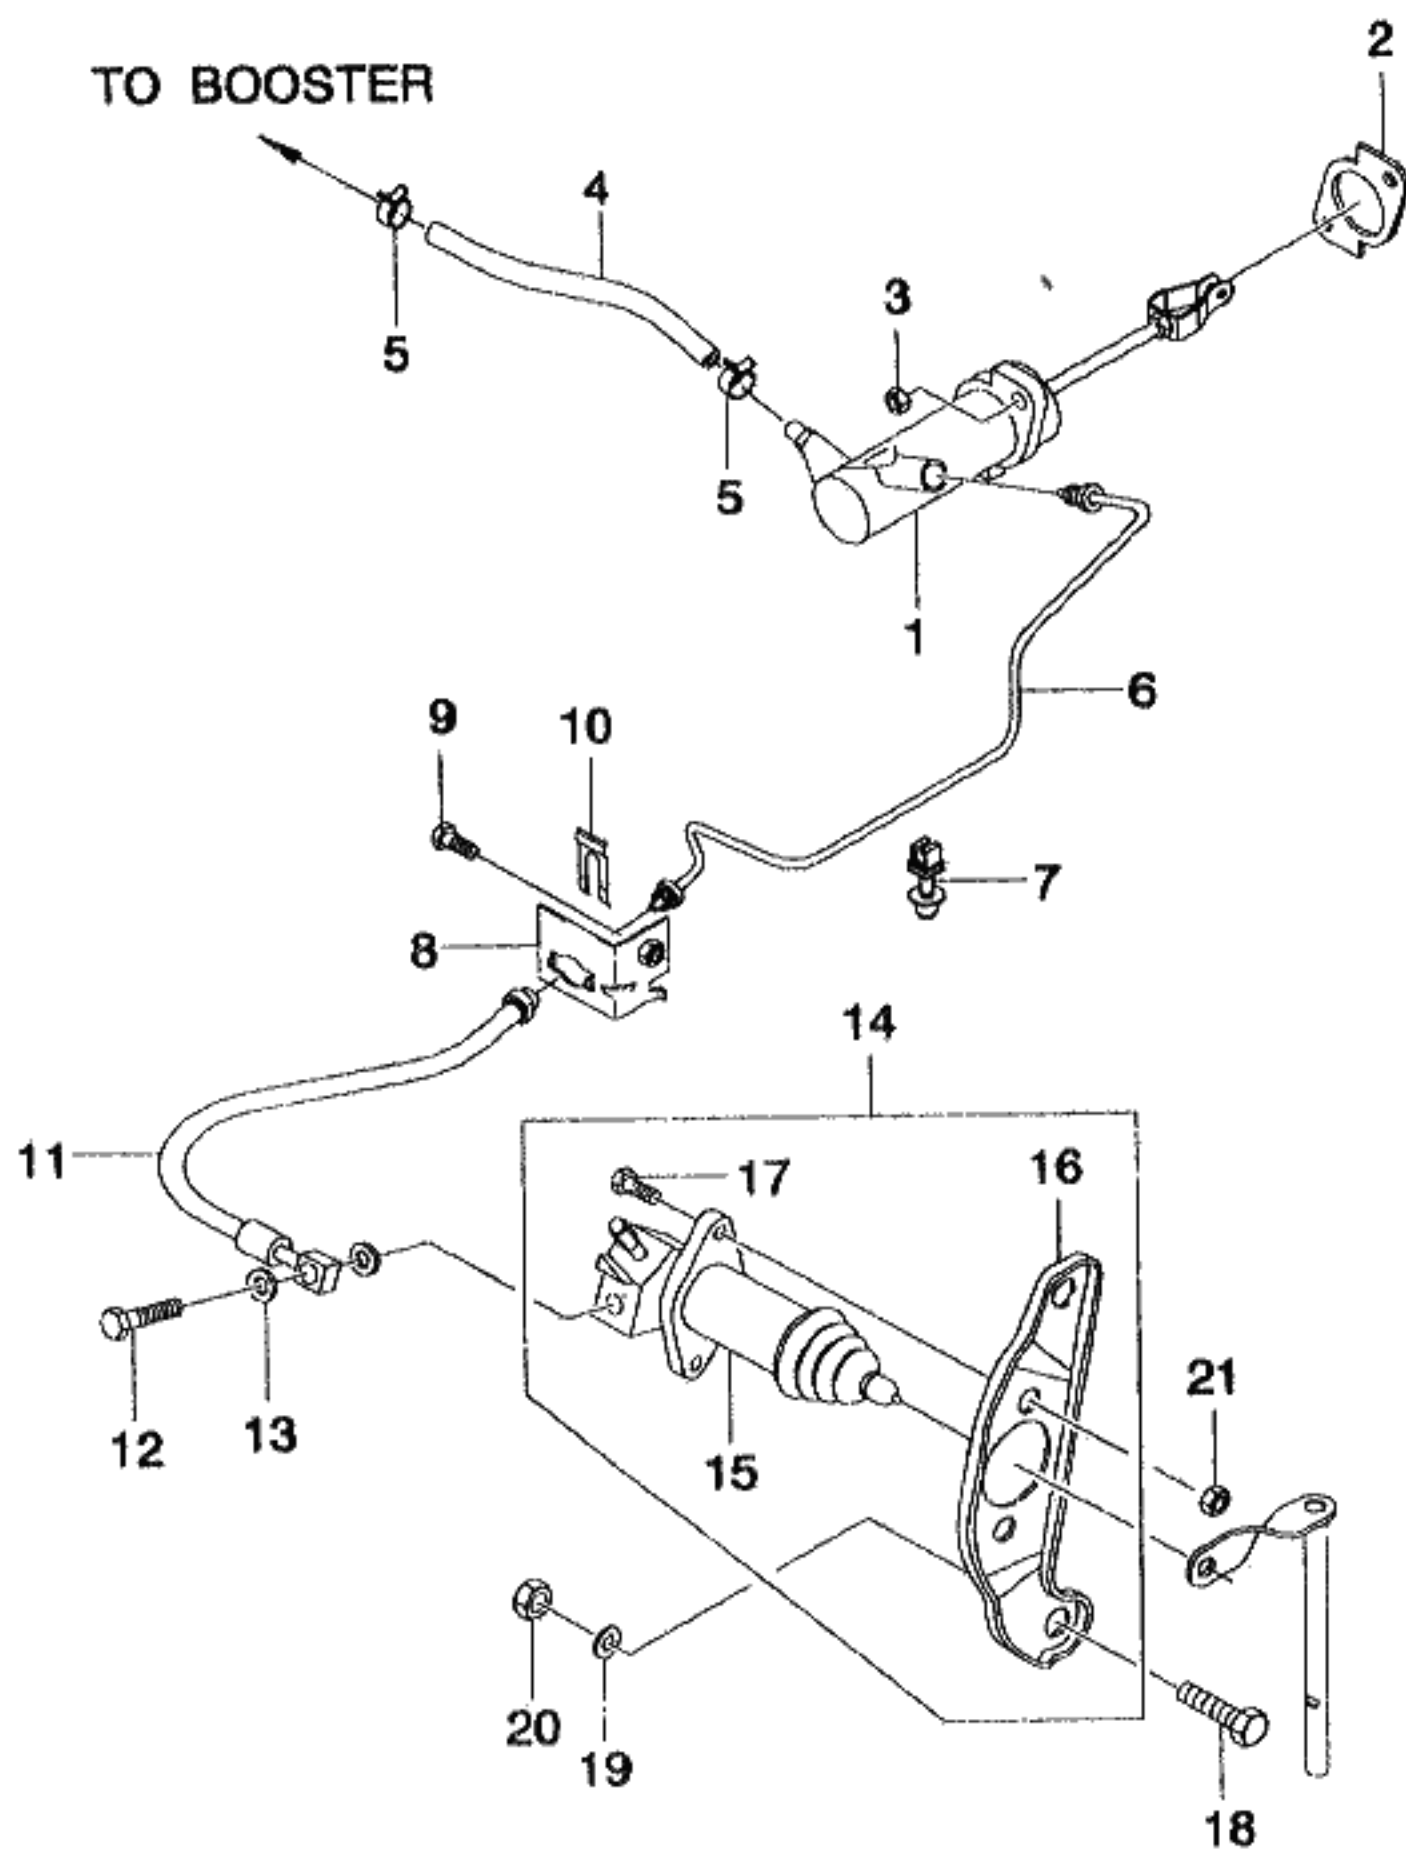


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[20] 08322-11123	(E)WASHER-PLAIN (D)DICHTUNGSRING M	S	S			(F)RONDELLE (S)ARANDELA 1					
	[21] 08311-18123	(E)NUT-HEXAGON (D)MUTTER M	S	S			(F)ECROU (S)TUERCA 1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

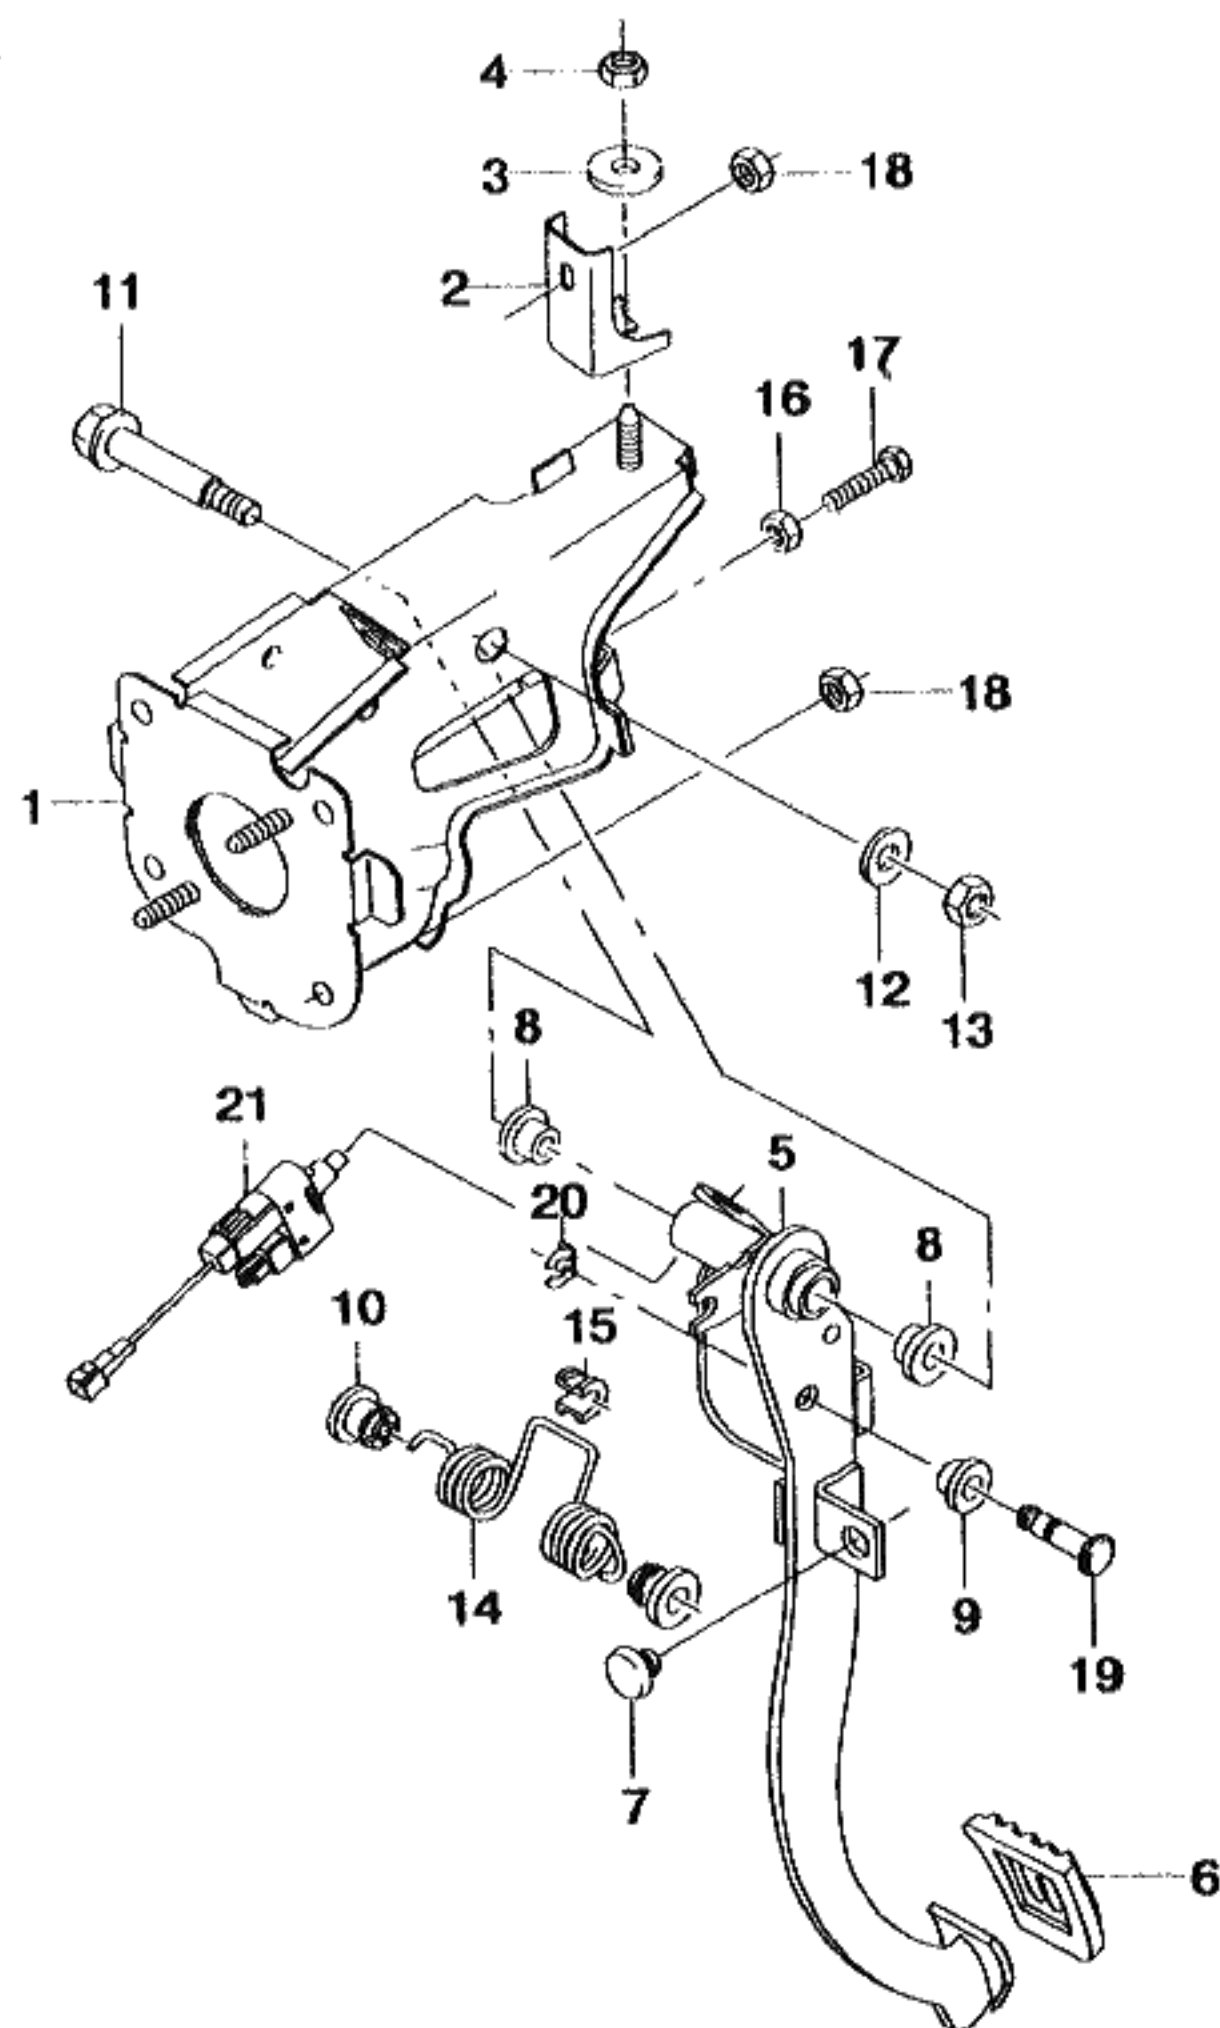


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E)BRACE A-PEDAL,CLUTCH (D)SCHIENE,KUPPLUNGSPEDAL				(F)SUPPORT-MONTAGE PEDALE (S)REFUERZO					
96183927		M	S	S		1					
96183928		M	A	A	&K30	1					
[02]		(E)BRACKET-BRACE PEDAL (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
96184051		M	S	S		1					
[03]		(E)WASHER-PLAIN (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
09160-08004		M	S	S		1					
[04]		(E)NUT-HEXAGON (D)MUTTER				(F)ECROU (S)TUERCA					
08311-18083		M	S	S		1					
[05]		(E)PEDAL A-CLUTCH (D)PEDAL,KUPPLUNG				(F)PEDALE-EMBAYAGE (S)PEDAL-EMBRAGUE					
96183192		M	S	S		1					
96183359		M	A	A	&K30	1					
[06]		(E)COVER-PEDAL PLATE (D)DECKEL				(F)COUVERTURE (S)CUBIERTA					
90105172		M	S	S		1					
[07]		(E)BUFFER-CLUTCH PEDAL (D)STOßSCHEIBE				(F)TAMPON-PEDALE (S)AMORTIGUADOR					
96157634		M	S	S		2					
[08]		(E)BUSH (D)LAGERFUTTER				(F)MANCHON (S)BUJE-PEDAL DEL EMBRAGUE					
09306-14001		M	S	S		2					
[09]		(E)BUSH (D)LAGERFUTTER				(F)MANCHON (S)BUJE-PEDAL DEL EMBRAGUE					
09306-10003		M	S	S		1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

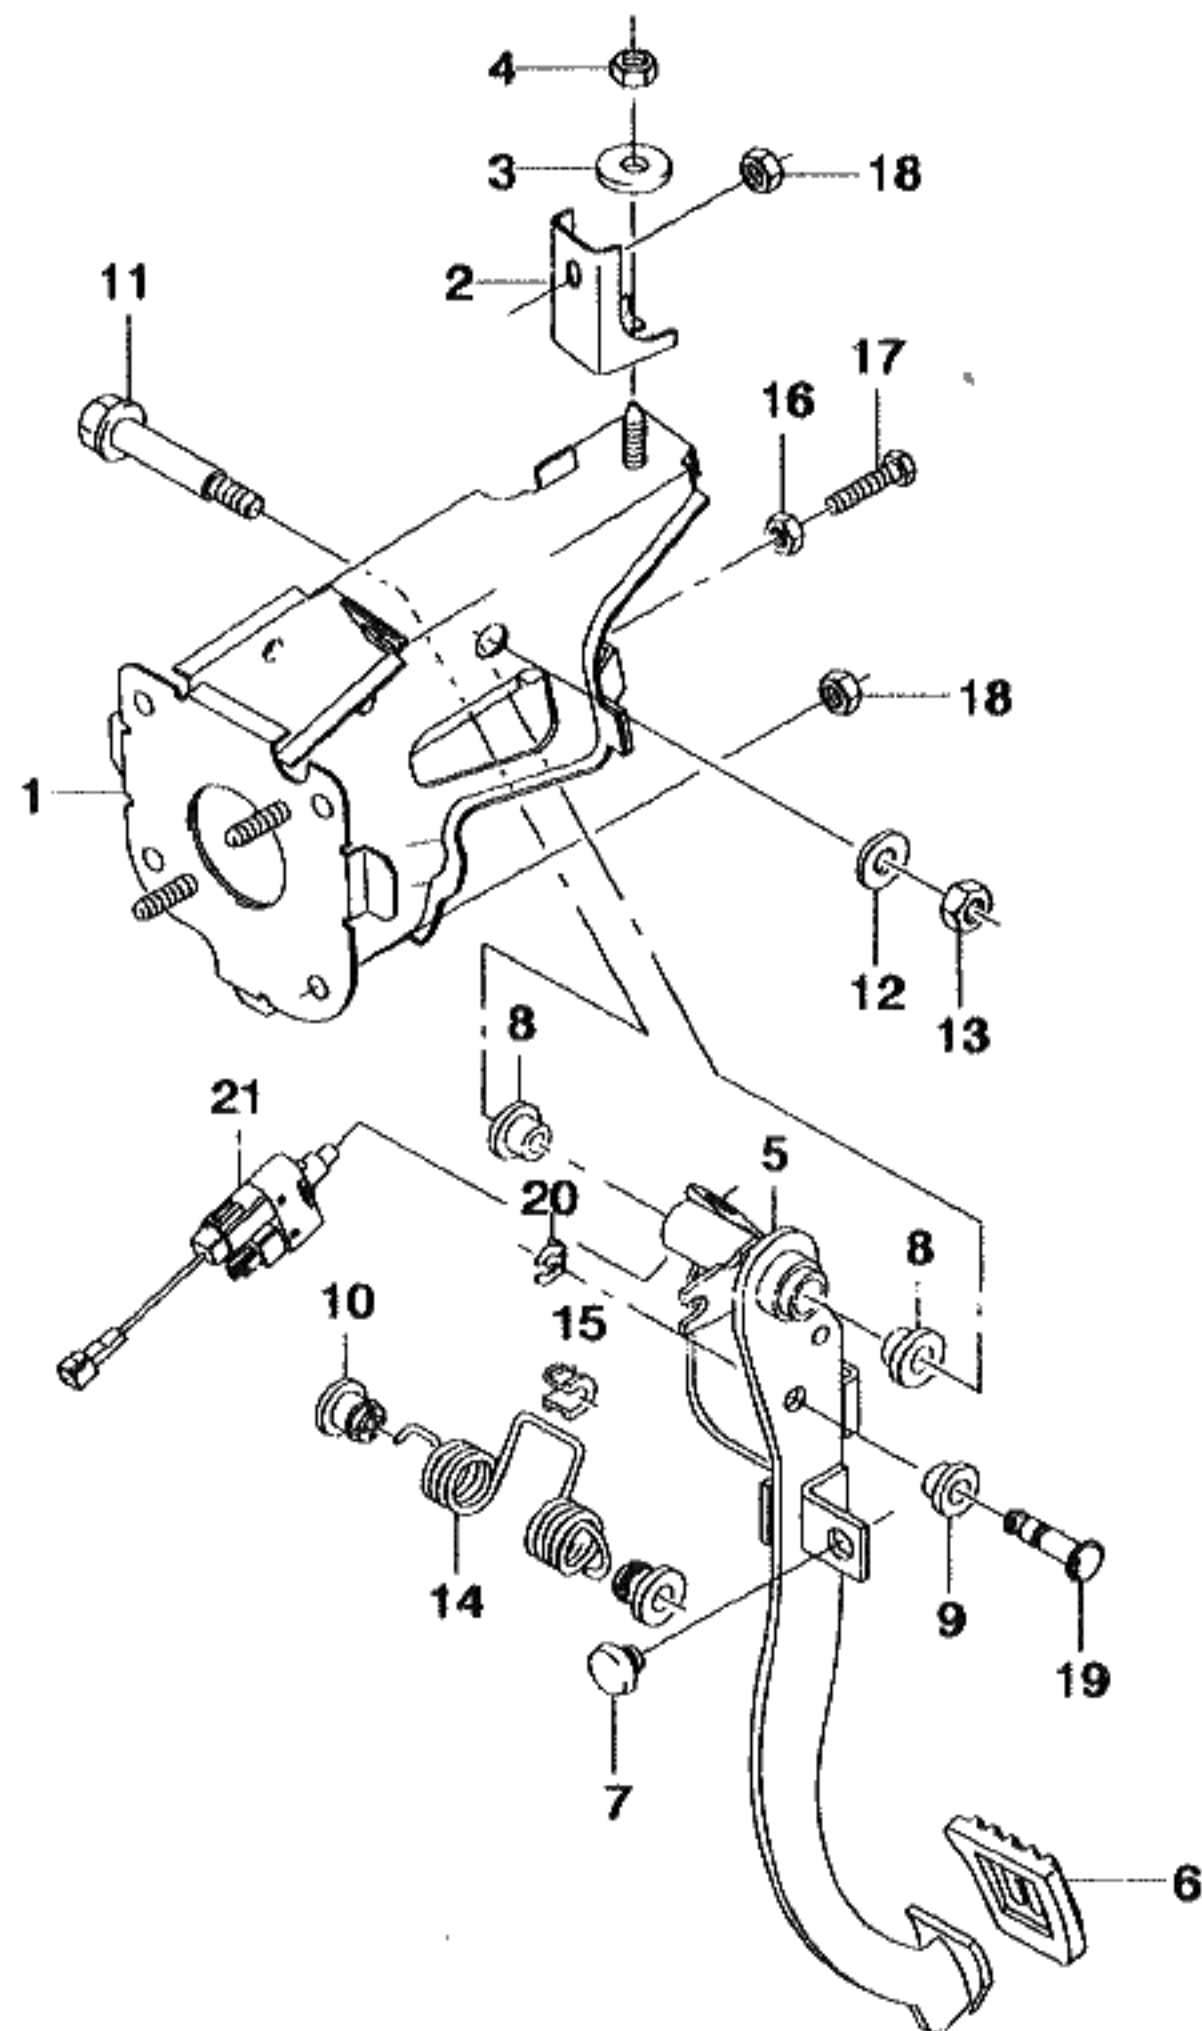


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10] 96184537	(E) BUSH-TURN OVER SPRING (D) LAGERFUTTER M	S	S		(F) MANCHON (S) BUJE DE BOQUILLA 2						
	[11] 96183932	(E) SHAFT-PEDAL CLUTCH (D) SPINDEL, PEDAL MONTAGE M	S	S		(F) ARBRE-MONTAGE PEDALE (S) EJE-MONTAJE DE PEDAL 1						
	[12] 08321-31103	(E) WASHER-SPRING (D) DICHTUNGSRING M	S	S		(F) RONDELLE (S) ARANDELA 1						
	[13] 09159-10002	(E) NUT (D) MUTTER M	S	S		(F) ECROU (S) TUERCA 1						
	[14] 96184060	(E) SPRING-TURN OVER (D) FEDERUNG, RÜCK M	S	S		(F) RESSORT-RETOUR (S) RESORTE-REGRESO 1						
	[15] 96184050	(E) BUSH (D) LAGERFUTTER M	S	S		(F) MANCHON (S) BUJE DE BOQUILLA 1						
	[16] 08310-22083	(E) NUT-HEXAGON (D) MUTTER M	S	S		(F) ECROU (S) TUERCA 1						
	[17] 01107-08303	(E) BOLT-HEXAGON (D) SCHRAUBE M	S	S		(F) BOULON (S) PERNO 1						
	[18] 08361-15083	(E) NUT-W/WASHER (D) MUTTER M	S	S		(F) ECROU (S) TUERCA 5						
	[19] 96232975	(E) PIN (D) STIFT M	S	S		(F) BROCHE (S) PASADOR 1						
LEVEL					T/A (TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

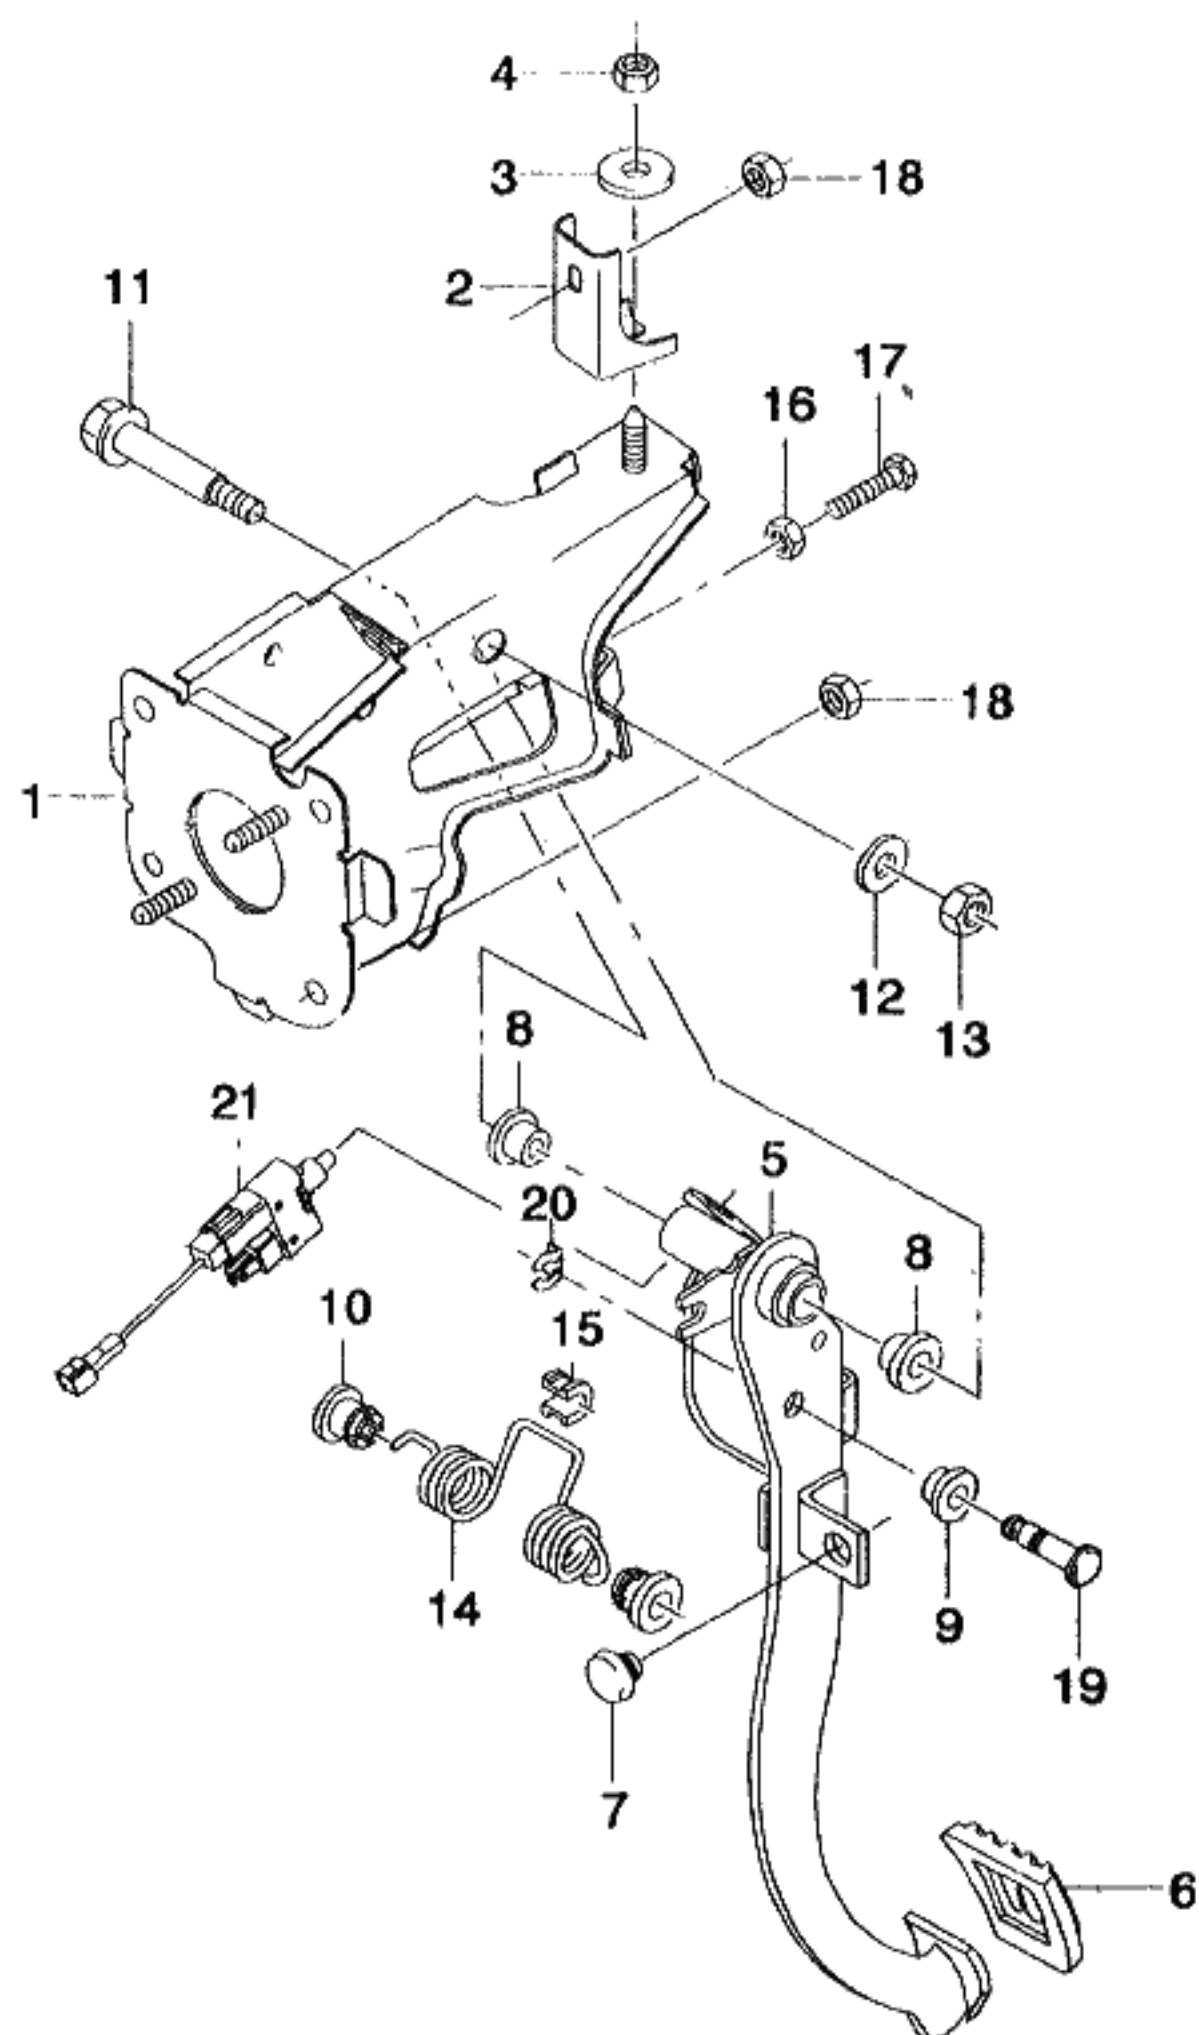


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[20] 08332-21089	(E)RING-RETAINING E TYPE (D)RING,HALTER M	S	S			1	(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR				
	[21] 96215605	(E)SWITCH A-CLUTCH,NEU START (D)SCHALTER M	A	A	&K30		1	(F)COMMUTATEUR (S)INTERRUPTOR				
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

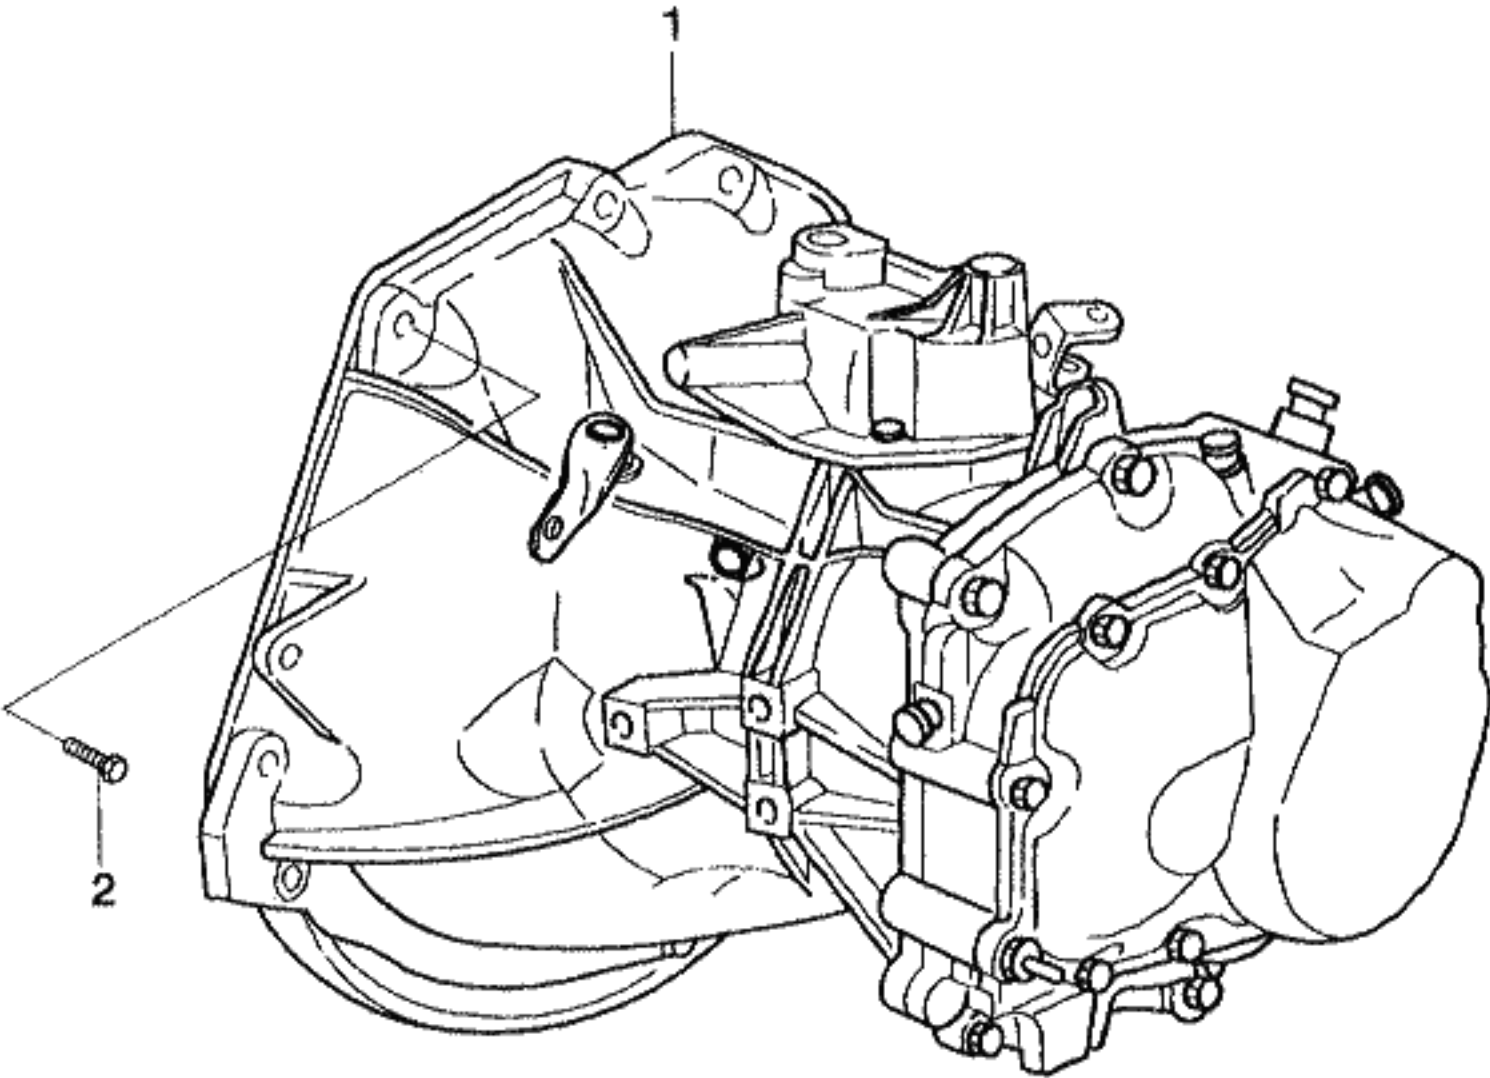


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)TRANSAXLE A (D)ANTRIEB, GANGSCHALTUNG				(F)TRANSMISSION (S)EJE TRANSVERSAL					
	96243096	M	S	.	&G39		1				MF
	96350523	M	O	S	&FQ4		1				FC
	[02]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09100-12002	M	S	S			4				
	09100-12014	M	S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

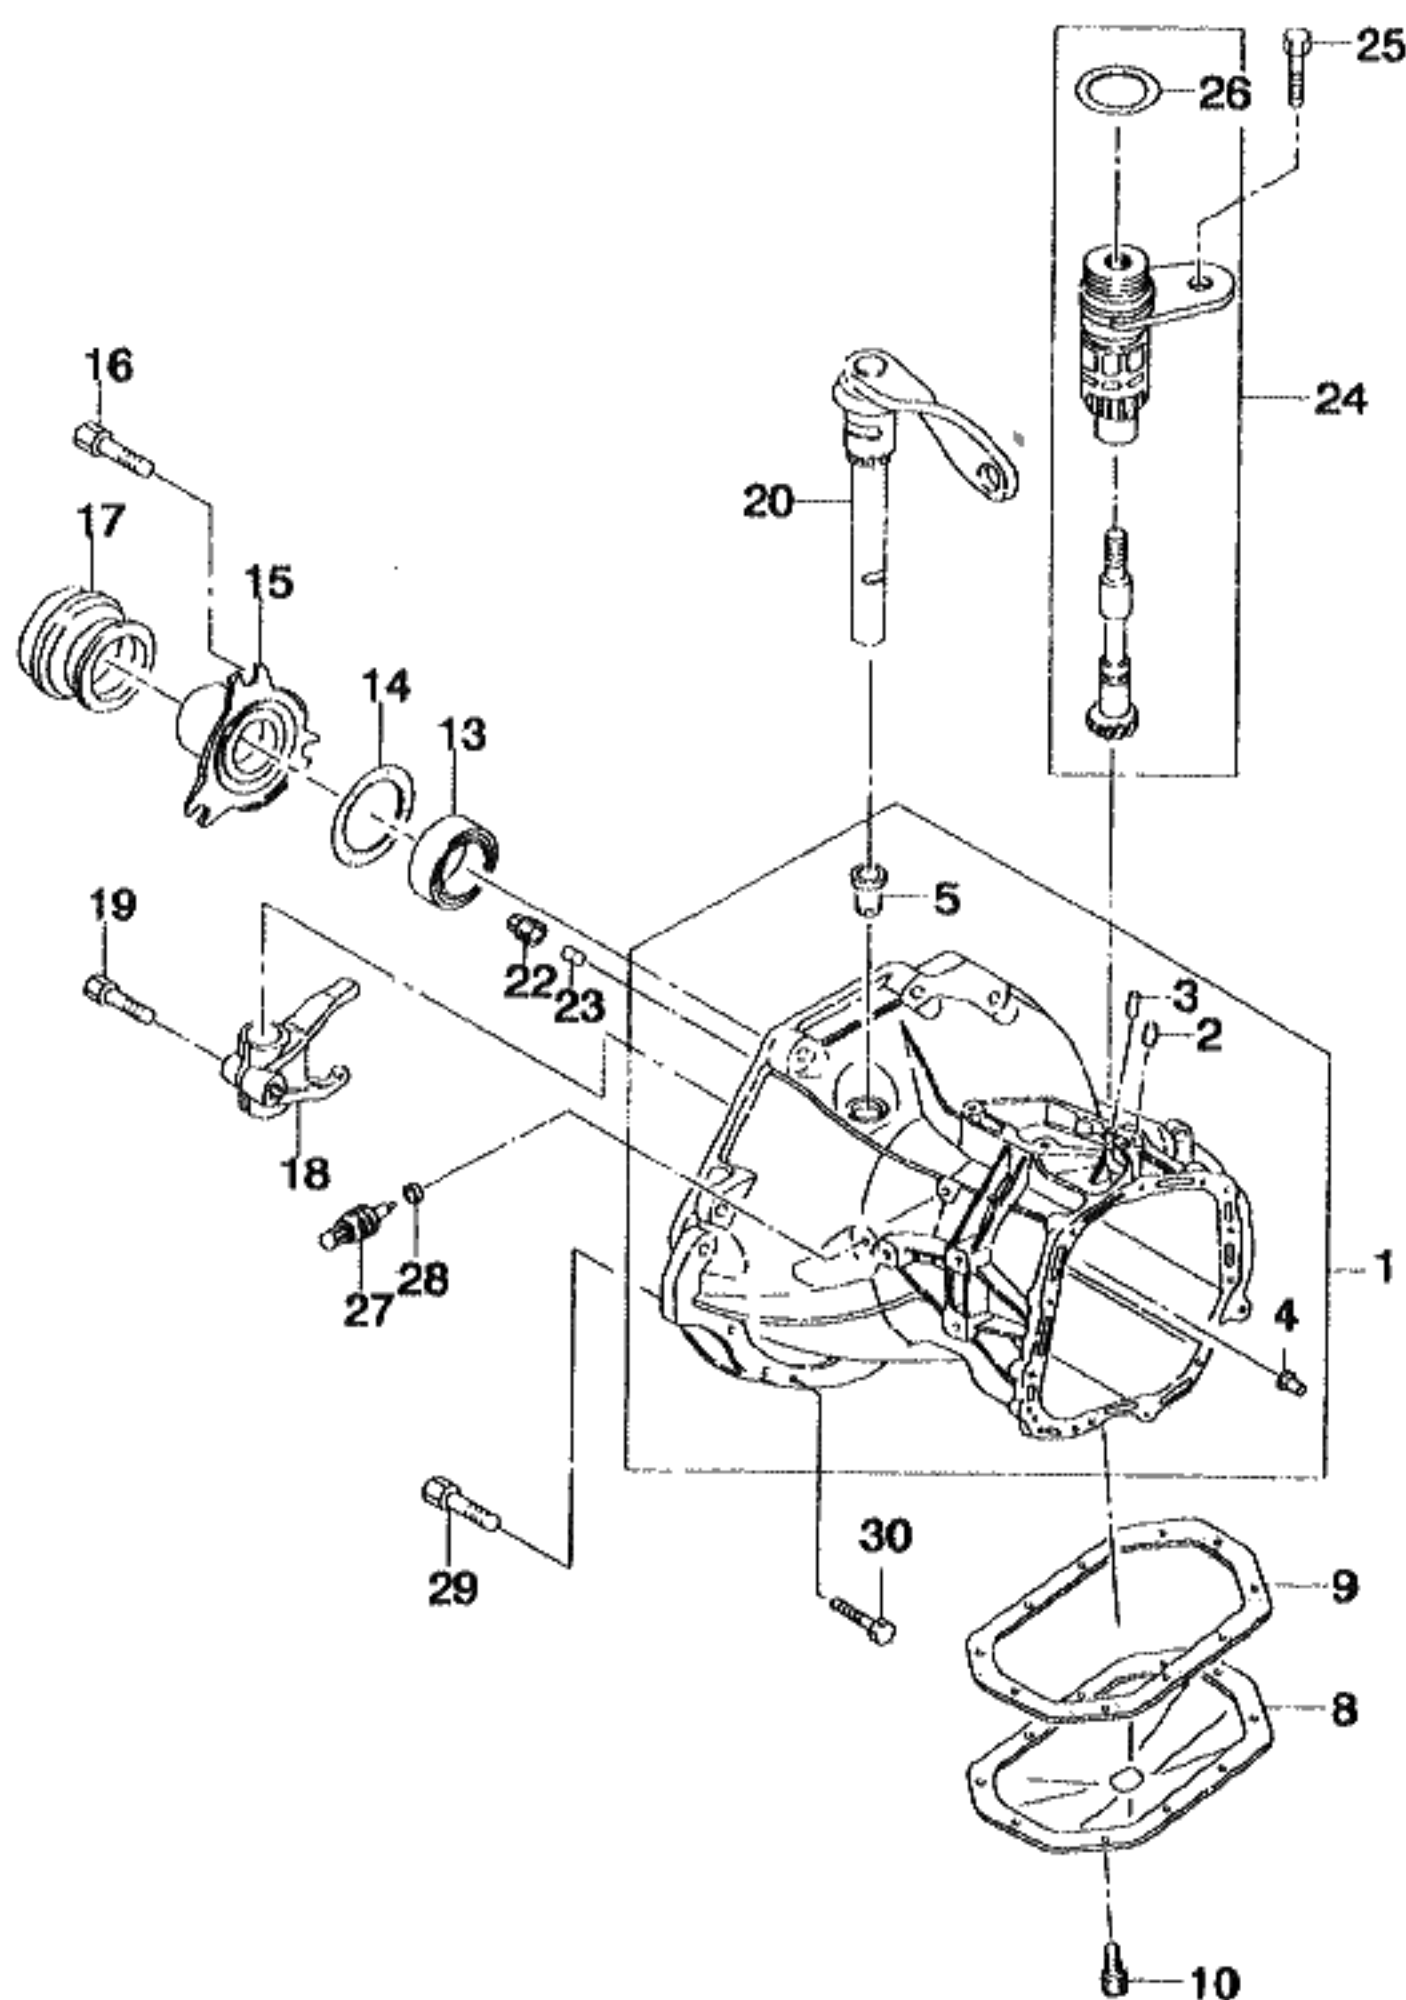


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]	A96216453	(E)CASE A-TRANSAXLE (D)KASTEN,ANTRIEB	M	S	S		(F)CARTER-TRANSMISSION (S)CAJA-EJE TRANSVERSAL	1			
[02]	90147339	(E)PIN-DOWEL (D)STIFT,DÜBEL	M	S	S		(F)BROCHE-GOUJON (S)PASADOR-CLAVIJA	1			
[03]	90343316	(E)PIN-DOWEL (D)STIFT,DÜBEL	M	S	S		(F)BROCHE-GOUJON (S)PASADOR-CLAVIJA	2			
[04]	90121130	(E)SLEEVE-MAINSHAFT OIL DUCT (D)HÜLSE	M	S	S		(F)CHEMISE (S)MANGA	1			
[05]	90305912	(E)BUSH-CLUTCH SHAFT (D)LAGERFUTTER	M	S	S		(F)MANCHON-ARBRE (S)BUJE-EJE DEL EMBRAGUE	2			
[08]	90305635	(E)COVER-DIFFERENTIAL GEAR (D)DECKEL	M	S	S		(F)CARTER (S)CUBIERTA	1			
[09]	96179241	(E)GASKET-DIFF GEAR COVER (D)DICHTUNG	M	S	S		(F)JOINT (S)JUNTA	1			
[10]	09103-08028	(E)BOLT-FLANGE (D)SCHRAUBE	M	S	S		(F)VIS (S)TORNILLO	10			
[13]	90182168	(E)RING-SHAFT SEAL (D)RING,STAB DICHTUNG	M	S	S		(F)ANNEAU-JOINT D'ARBRE (S)ANILLO-BROCHE DE EJE	1			
[14]	90112258	(E)O RING (D)O RING	M	S	S		(F)JOINT TORIQUE (S)ANILLO EN O	1			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

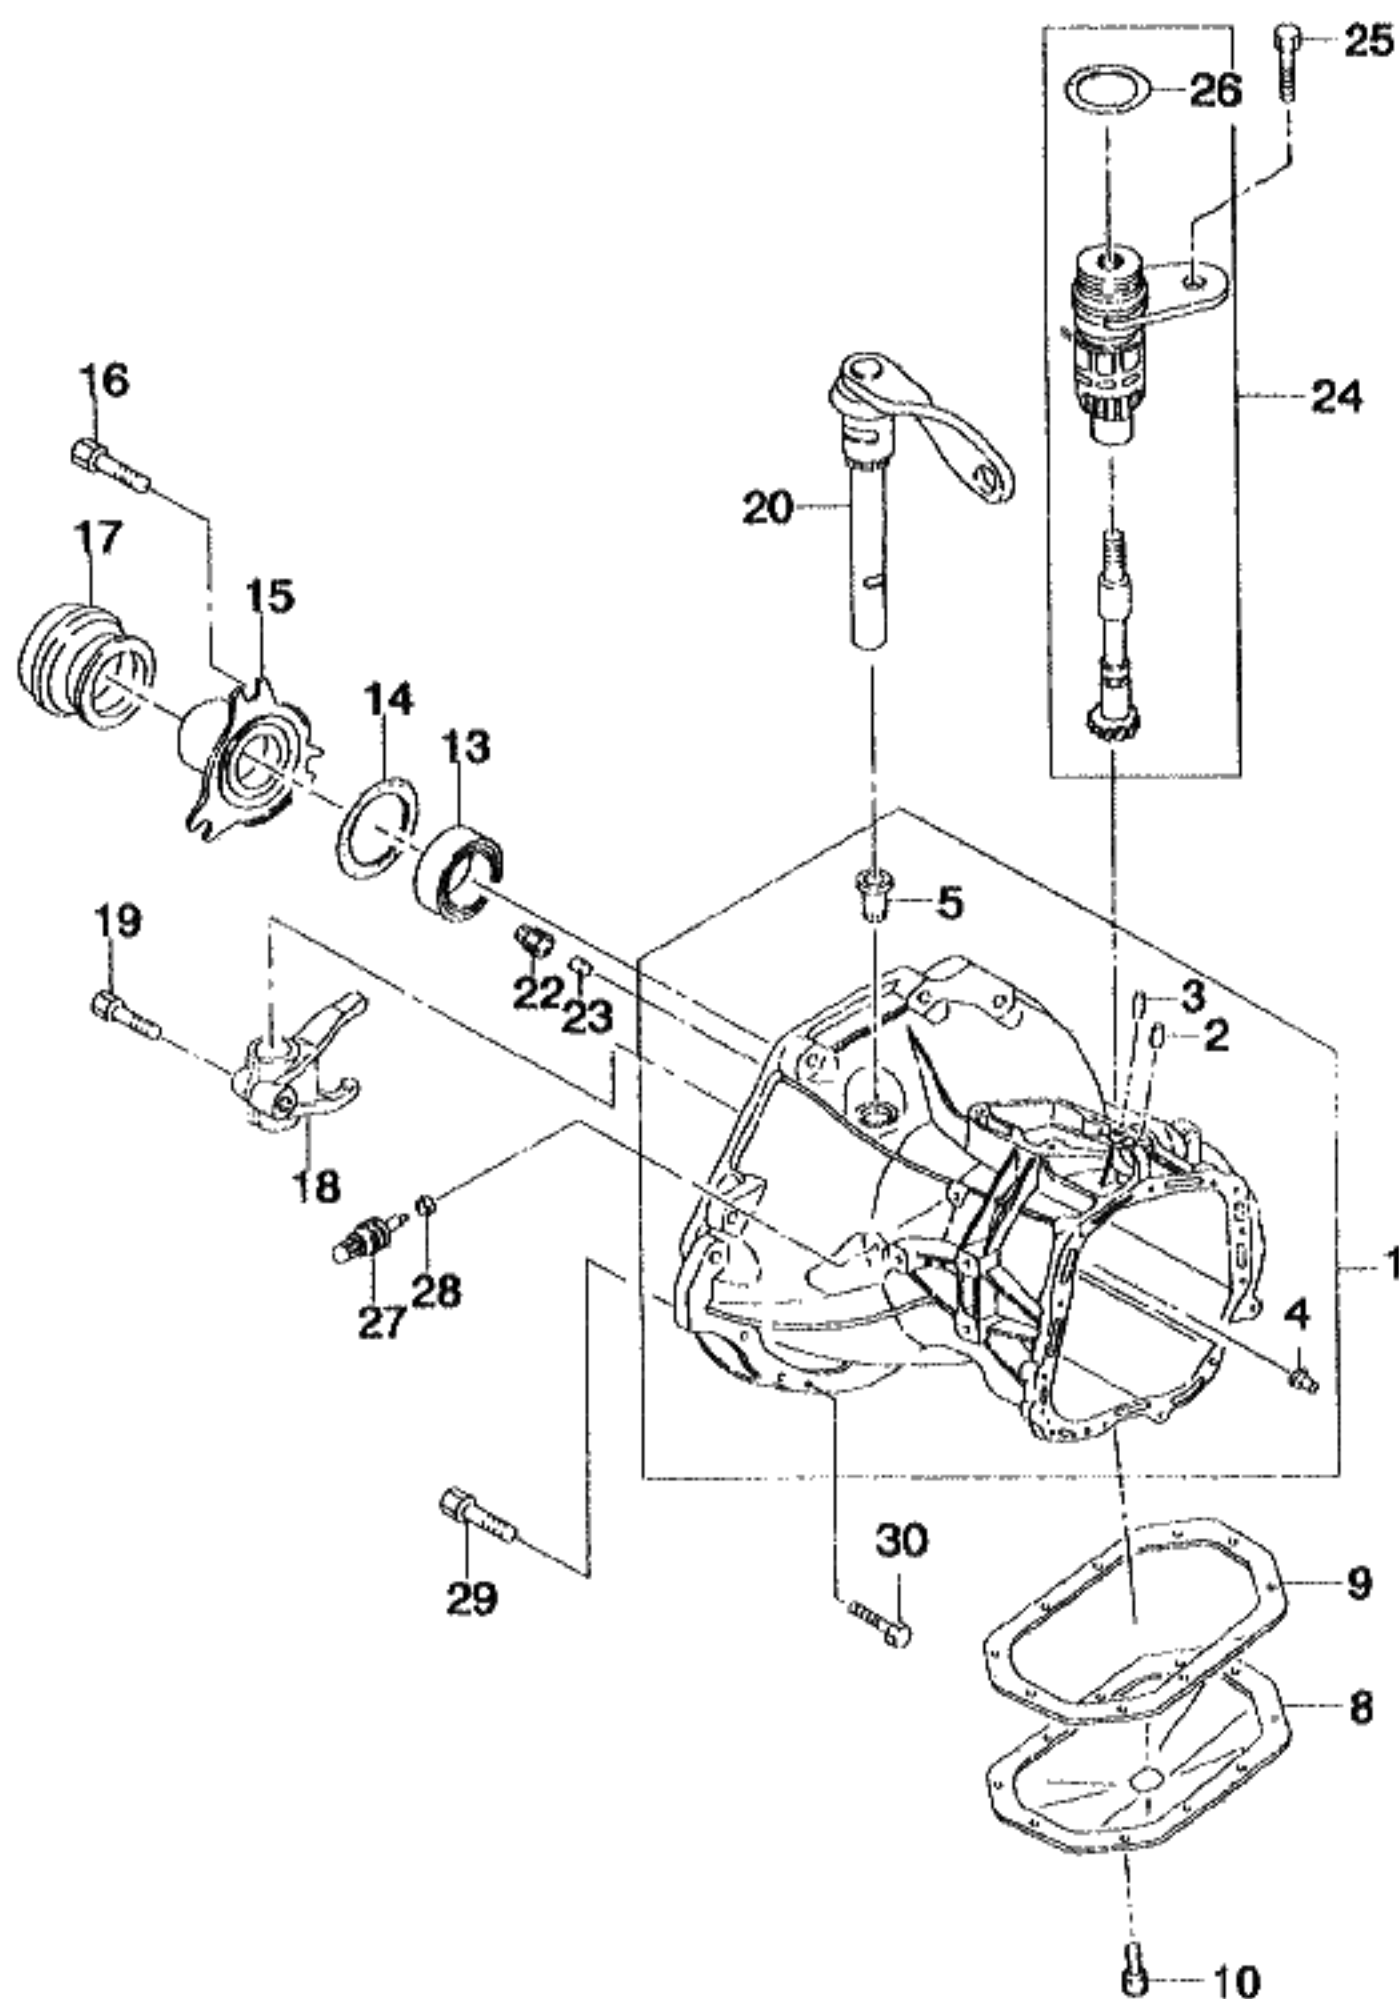

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[15] 90112325	(E)GUIDE-THRUST BEARING (D)FÜHRING,STOß LAGER	M	S	S			(F)GUIDE-ROULEMENT DE BUTEE (S)GUIA-COJINETE DE EMPUJE	1		
	[16] 09100-06004	(E)BOLT-HEXAGON (D)SCHRAUBE	M	S	S			(F)VIS (S)TORNILLO	3		
	[17] 90251210	(E)BEARING-CLUTCH THRUST (D)KUGELLAGER,KUPPLUNG	M	S	S			(F)ROULEMENT (S)COJINETE-EMPUJAR	1		
	[18] 90372766	(E)FORK-CLUTCH RELEASE (D)GABEL,KUPPLUNG LÖSUNG	M	S	S			(F)FOURCHETTE (S)HORQUILLA-LIBERACION	1		
	[19] 09100-08020	(E)BOLT-HEXAGON (D)SCHRAUBE,GABEL	M	S	S			(F)VIS-FOURCHETTE (S)TORNILLO-HORQUILLA	1		
	[20] 96144874	(E)LEVER-RELEASE (D)HEBEL,LÖSUNG	M	S	S			(F)LEVIER-RELACHE (S)PALANCA-SOLTAR (LIBERAR)	1		
	[22] 09246-18003	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN	M	S	S			(F)BOUCHON-VIS (S)TAPON-TORNILLO	1		
	[23] 03449250	(E)MAGNET (D)MAGNET	M	S	S			(F)AIMANT (S)IMAN	1		
	[24] 90375764	(E)GEAR A-DRIVEN WORM (D)GETRIEBE	M	S	S			(F)ENGRENAGE (S)ENGRANAJE-SINFIN	1		
	[25] 09100-06003	(E)BOLT-HEXAGON (D)SCHRAUBE	M	S	S			(F)VIS (S)TORNILLO	1		
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

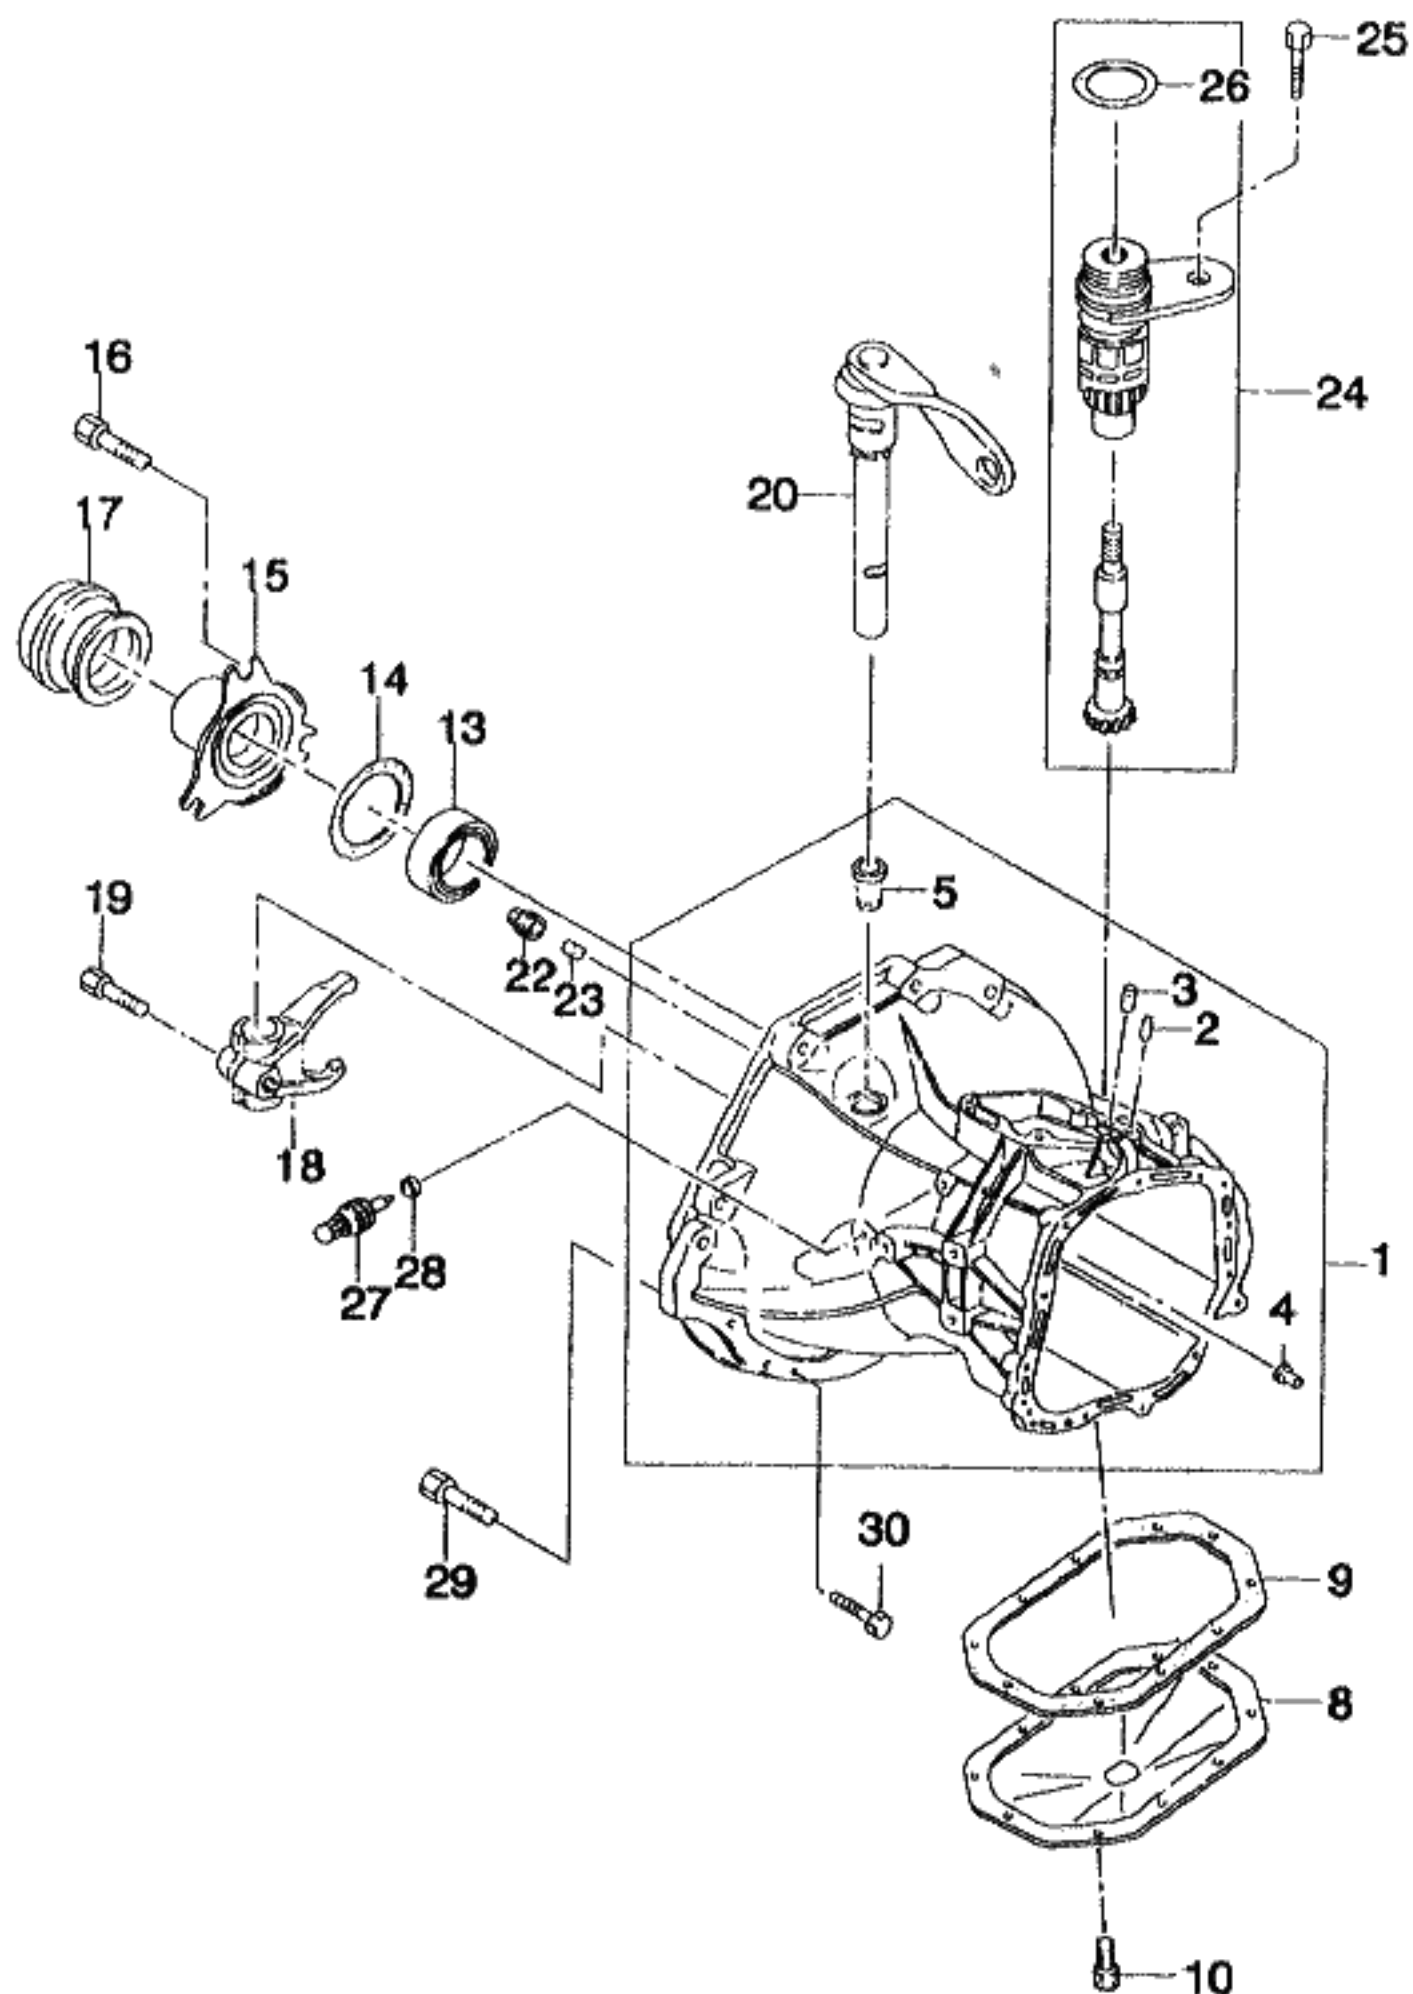


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[26] 09280-17001	(E)O RING (D)O RING M	S	S			(F)JOINT TORIQUE (S)ANILLO EN O 2					
	[27] 96192077	(E)SWITCH A-BACK UP LIGHT (D)SCHALTER,RÜCKGANGS-LAMPE M	S	S			(F)COMMUTATEUR (S)INTERRUPTOR 1					
	[28] 09160-12003	(E)WASHER-PLAIN (D)DICHTUNGSRING M	S	S			(F)RONDELLE (S)ARANDELA 1					
	[29] 09103-10009	(E)BOLT-FLANGE (D)SCHRAUBE M	S	S			(F)BOULON (S)PERNO 2					
	[30] 09103-10032	(E)BOLT-FLANGE (D)SCHRAUBE M	S	S			(F)BOULON (S)PERNO 1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

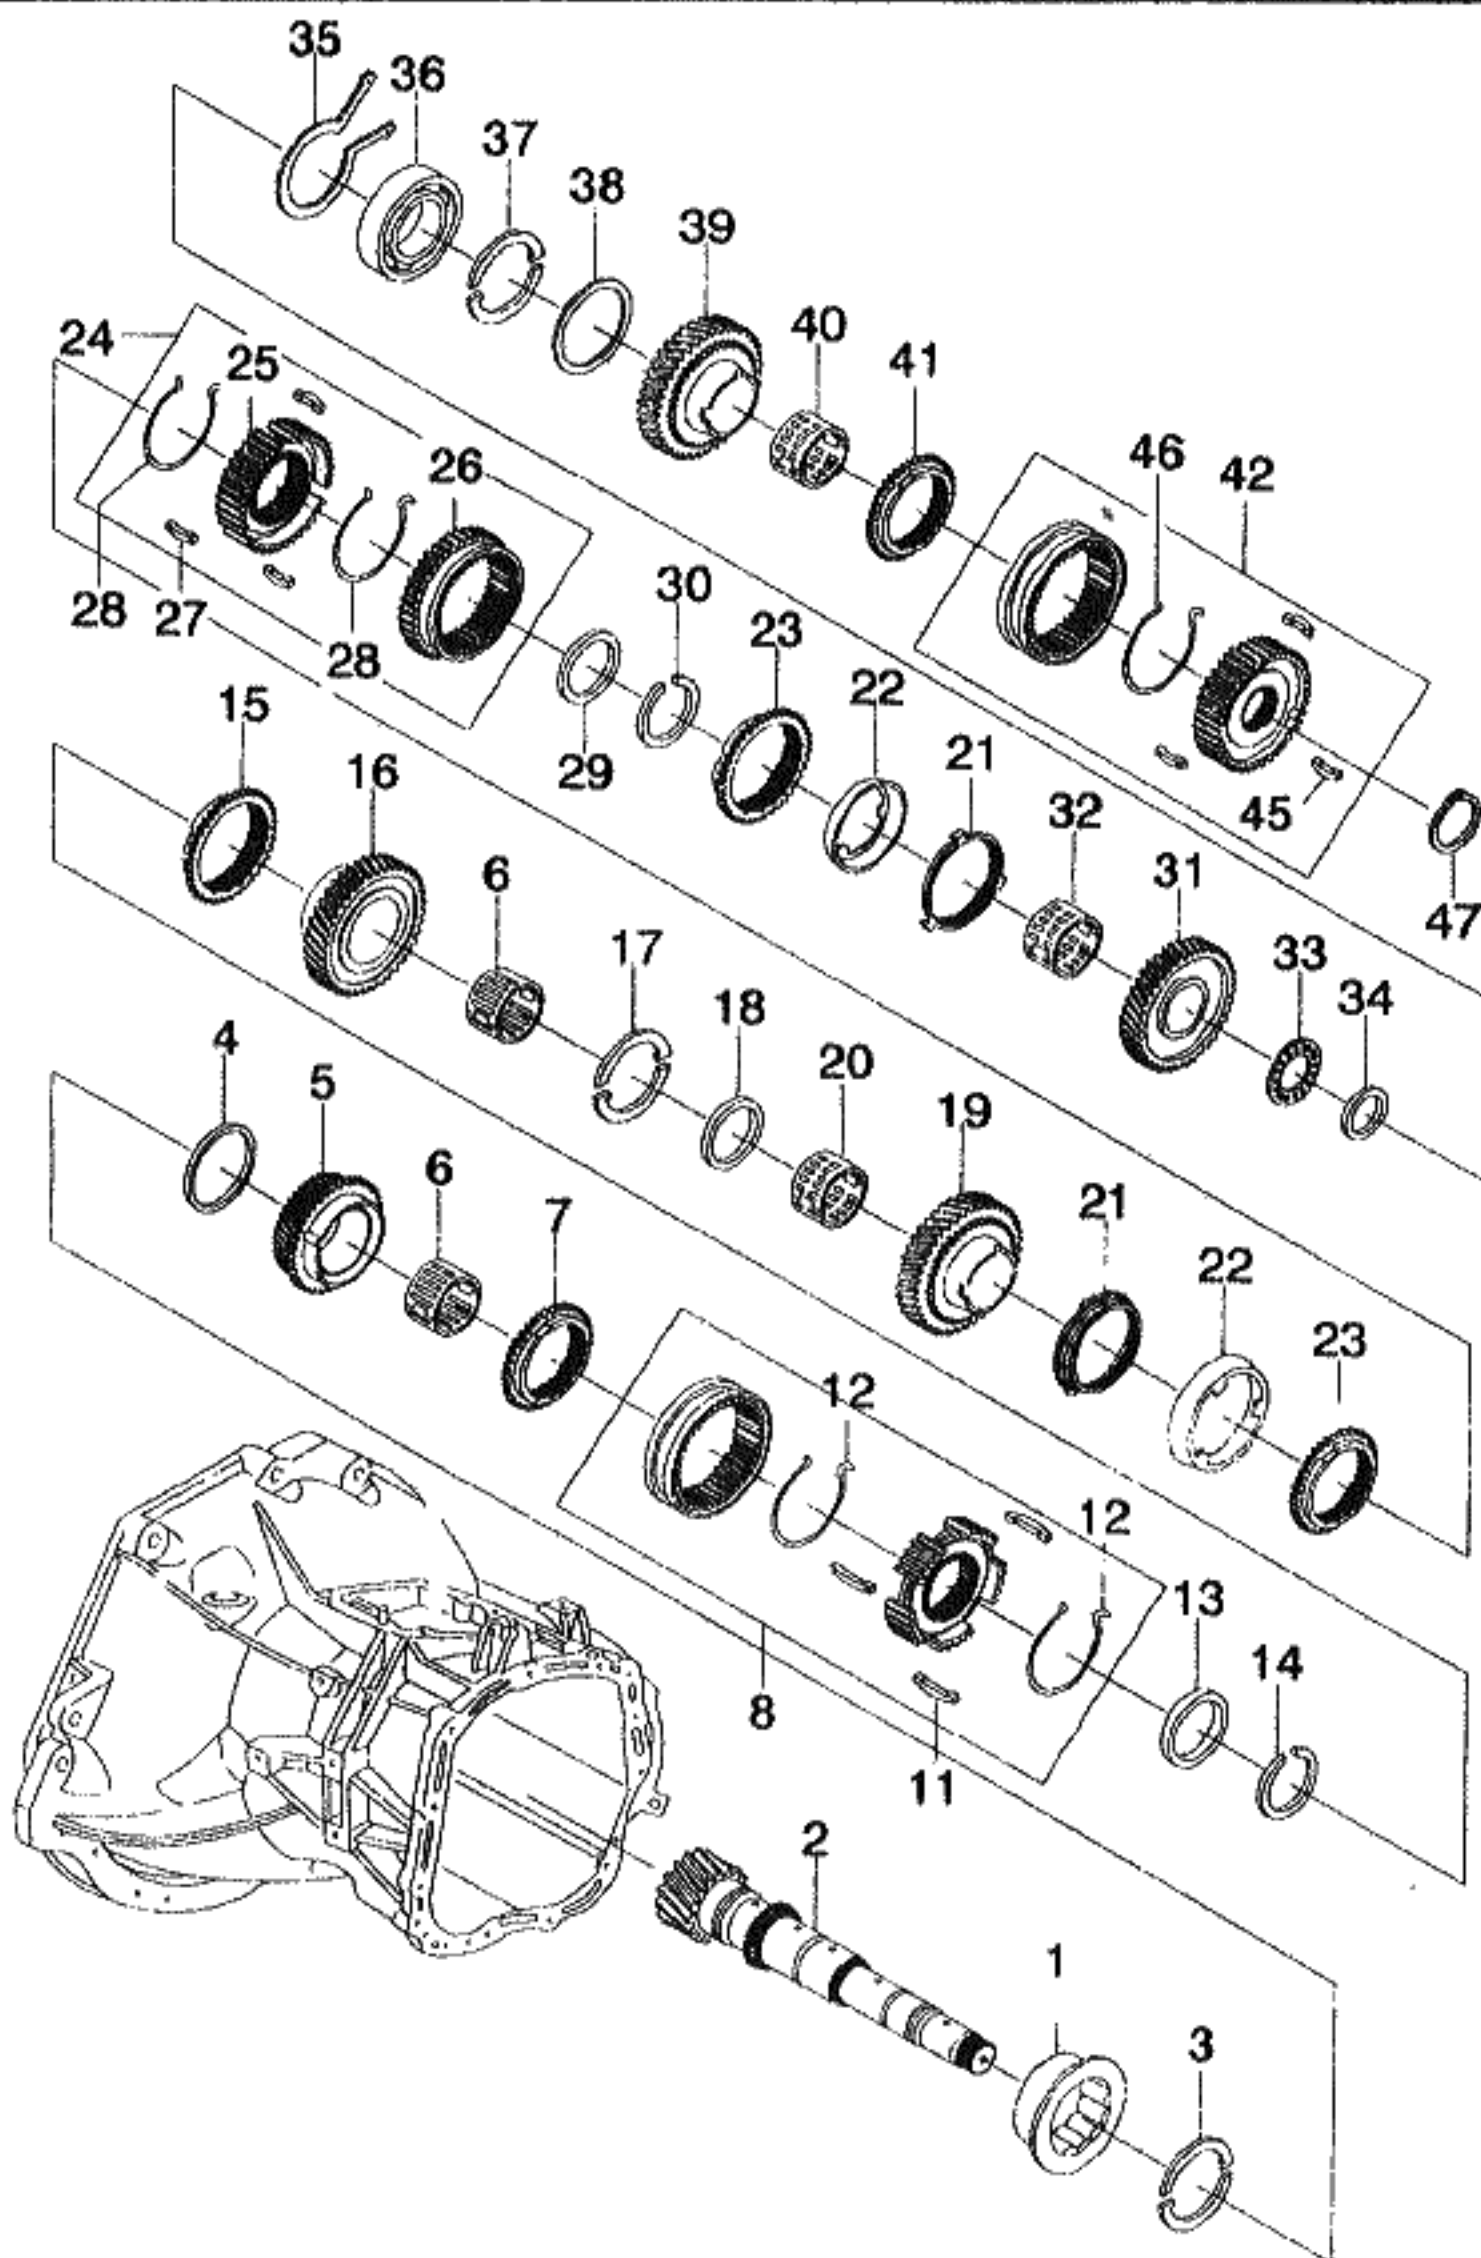


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 90373802	(E) BEARING-ROLLER (D) ROLLENLAGER	M	S	S		1	(F) ROULEMENT-ROULEAU (S) COJINETE-RUEDECILLA			
	[02] A96242686 A96350515 A96251738	(E) SHAFT A-TRANSAXLE MAIN (D) SPINDEL, HAUPT, ANTRIEB	M	S	.		1	(F) ARBRE-PRINCIPAL (S) EJE-PRINCIPAL		NOT APPLIED	
	[03] 90199104	(E) WASHER-MAIN SHAFT THRUST (D) DICHTUNGSRING	M	S	S		2	(F) RONDELLE (S) ARANDELA			
	[04] 90112228	(E) RING-WASHER RETAINING (D) RING, DICHTUNG HALTER	M	S	S		1	(F) ANNEAU (S) ANILLO			
	[05] A96237744 A96180903	(E) GEAR A-4TH SPEED (D) GETRIEBE 4. GANG	M	S	.		1	(F) ENGRENAGE-4EME VITESSE (S) ENGRANAJE-4TA VELOCIDAD			
	[06] 90147685	(E) CAGE-NEEDLE (D) KÄFIG NADEL	M	S	S		2	(F) CAGE-AIGUILLE (S) JAULA-AGUJA			
	[07] 90304685 96182360	(E) RING-SYNCHRONIZING (D) RING, SYNCHRONISIERUNGS	M	S	.		2	(F) ANNEAU-SYNCHRONISATION (S) ANILLO-SINCRONIZADOR			
	[08] K90236634 Y A90236634 K96182075	(E) SLEEVE A-SHIFT (D) HÜLSE, 5. GANG-SCHALTUNG	M	S	.		1	(F) CHEMISE-CHANGEMENT (S) MANGA-CAMBIO			
LEVEL			T/A (TRANSAXLE)								
S X = 2.0 SOHC CDX = 2.0 DOHC			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON								


3230 TRANSAXLE GEAR

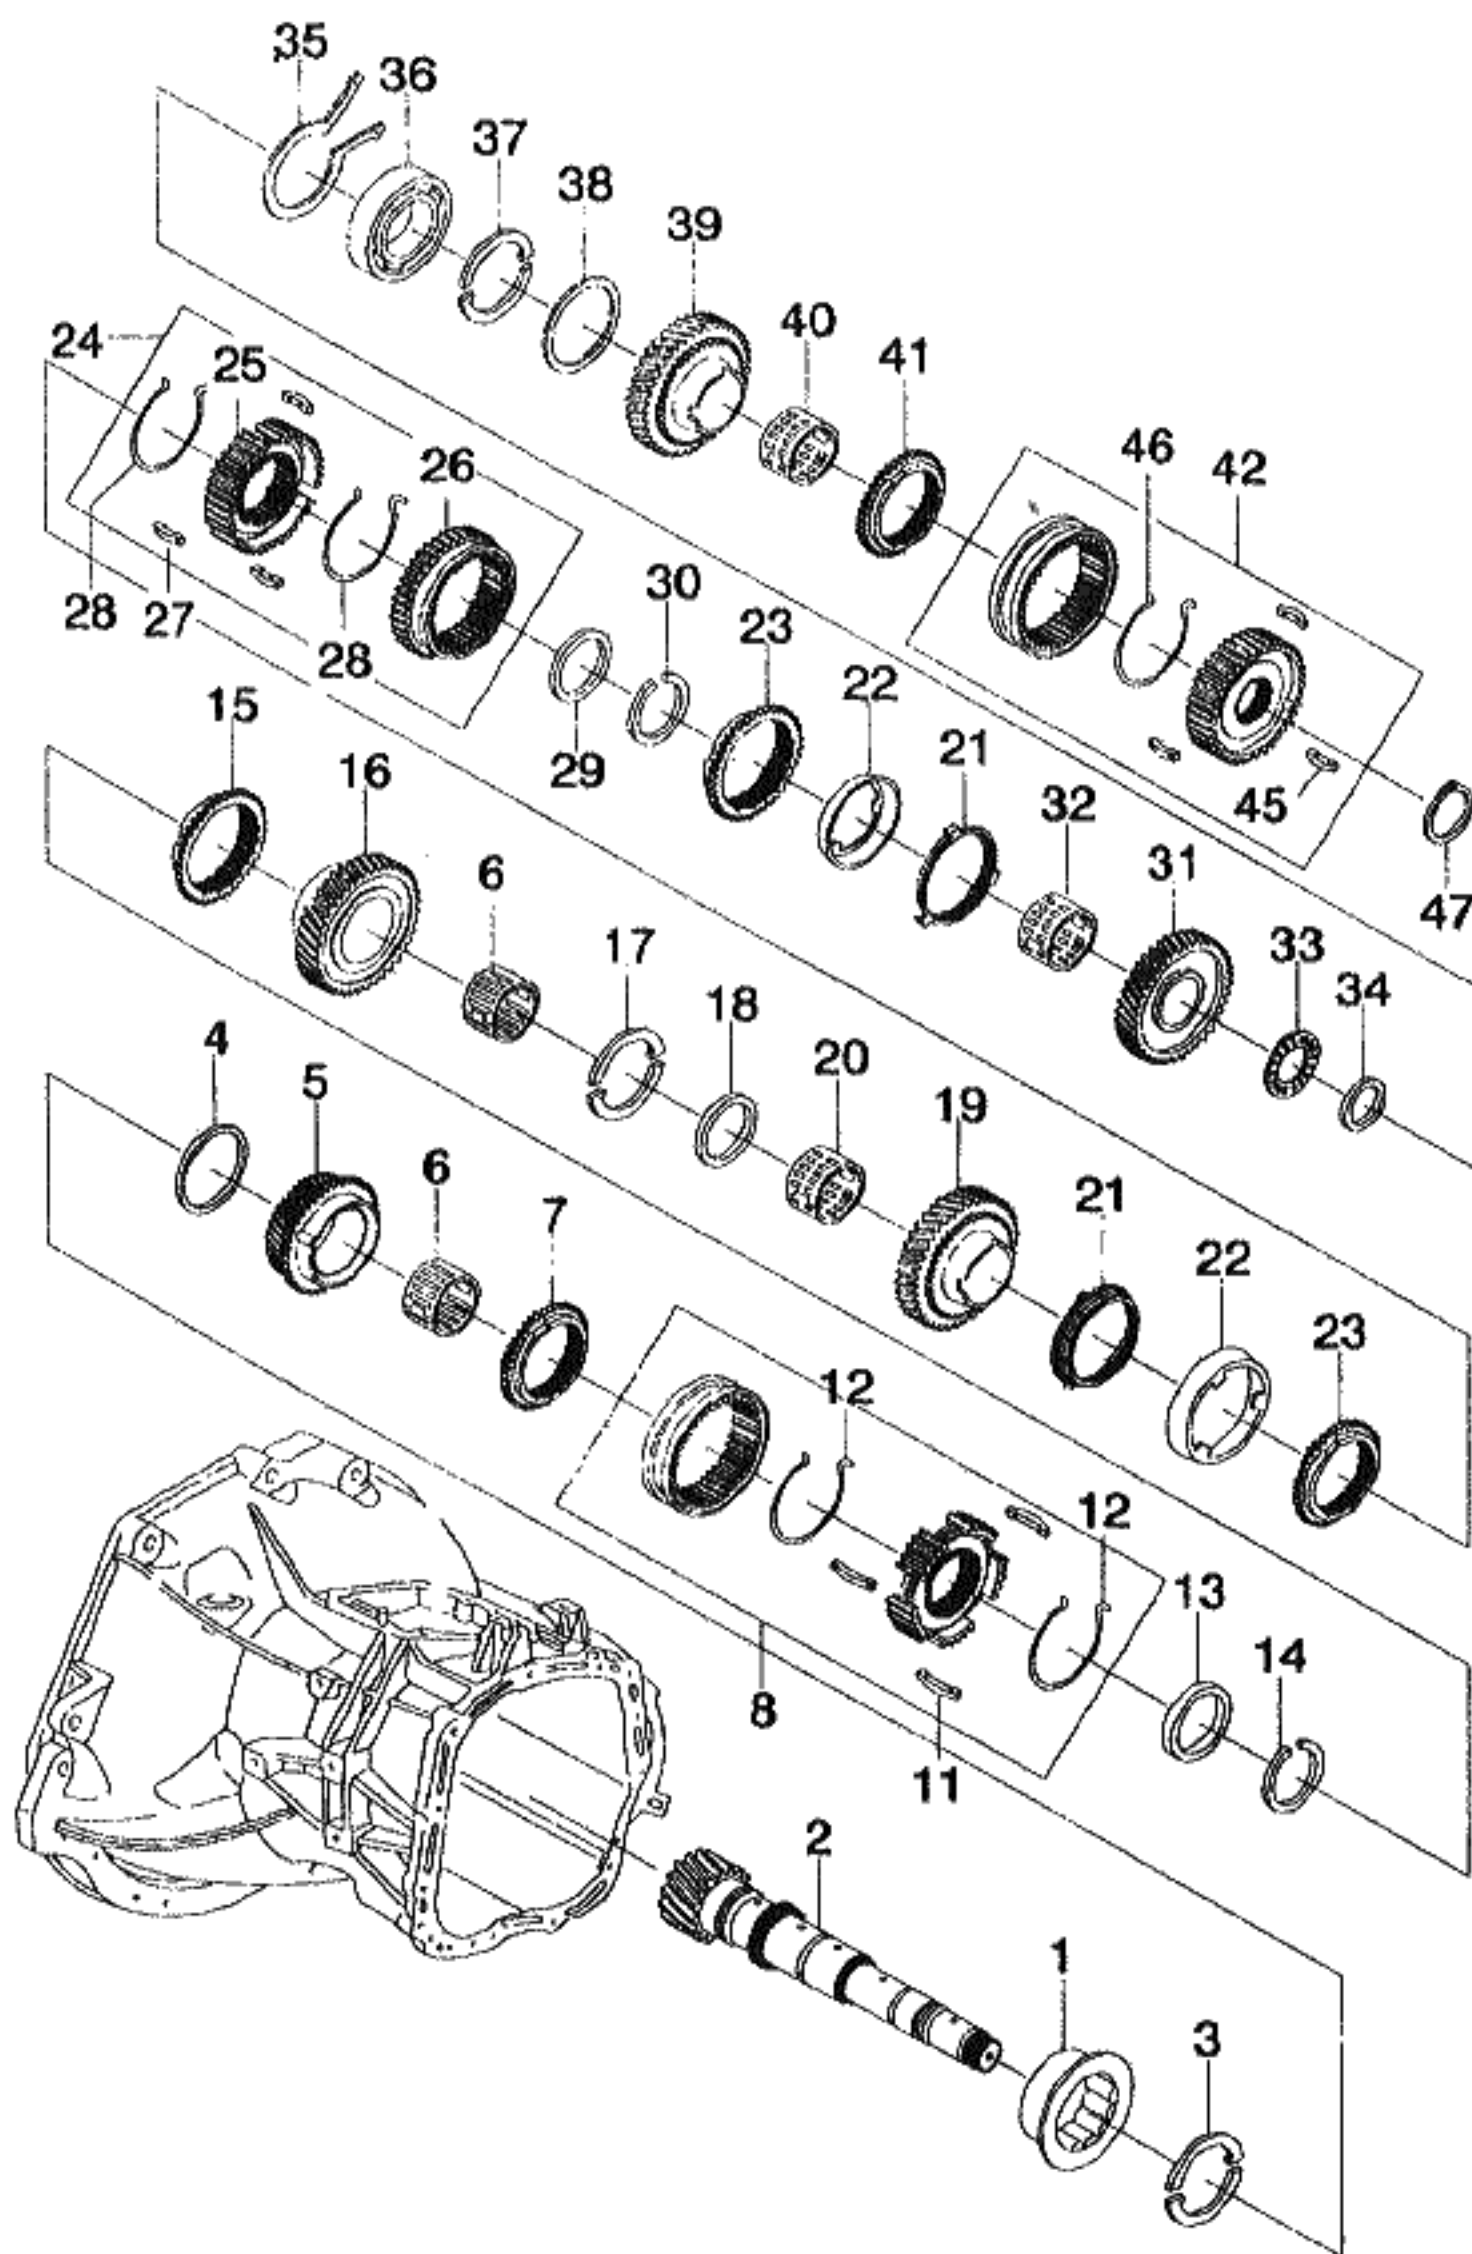

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
Y	A96182075	M	O	S	&L88		1				
	[11]				(E)KEY-SYNCHRONIZER (D)SCHLÜßEL, SYNCHRONISATOR		(F)CLE-SYNCHRONISATEUR (S)LLAVE-SINCRONIZADOR				
	90199973	M	S	.			3				
	96180875	M	O	S	&L88		3				
	[12]				(E)SPRING-3&4TH SYNCHRO (D)FEDERUNG, SYNCHRONISATOR		(F)RESSORT (S)RESORTE-SINCRONIZADOR 3/4				
	90250023	M	S	.			2				
	96227530	M	O	S	&L88		2				
	[13]				(E)WASHER-CLUTCH GEAR (D)DICHTUNGSRING		(F)RONDELLE (S)ARANDELA				
	09160-38001	M	S	S			1				
	[14]				(E)CIRCLIP (D)RUND-KLEMME		(F)CIRCLIP (S)GRAPA CIRCULAR				
	90373021	M	S	S			1				
	[15]				(E)RING-SYNCHRONIZING (D)RING, SYNCHRONISIERUNGS		(F)ANNEAU-SYNCHRONISATION (S)ANILLO-SINCRONIZADOR				
	90304685	M	S	.			1				
	96182360	M	O	S	&L88		1				
	[16]				(E)GEAR A-3RD SPEED (D)GETRIEBE, 3. GANG		(F)ENGRENAGE-3EME VITESSE (S)ENGRANAJE-3RA VELOCIDAD				
	A96237742	M	S	.			1				
	A96180901	M	O	S	&L88		1				
	[17]				(E)WASHER-MAIN SHAFT THRUST (D)DICHTUNGSRING		(F)RONDELLE (S)ARANDELA				
	90199644	M	S	S			2				
	[18]				(E)RING-WASHER RETAINING (D)RING, DICHTUNG HALTER		(F)ANNEAU (S)ANILLO				
	90112228	M	S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

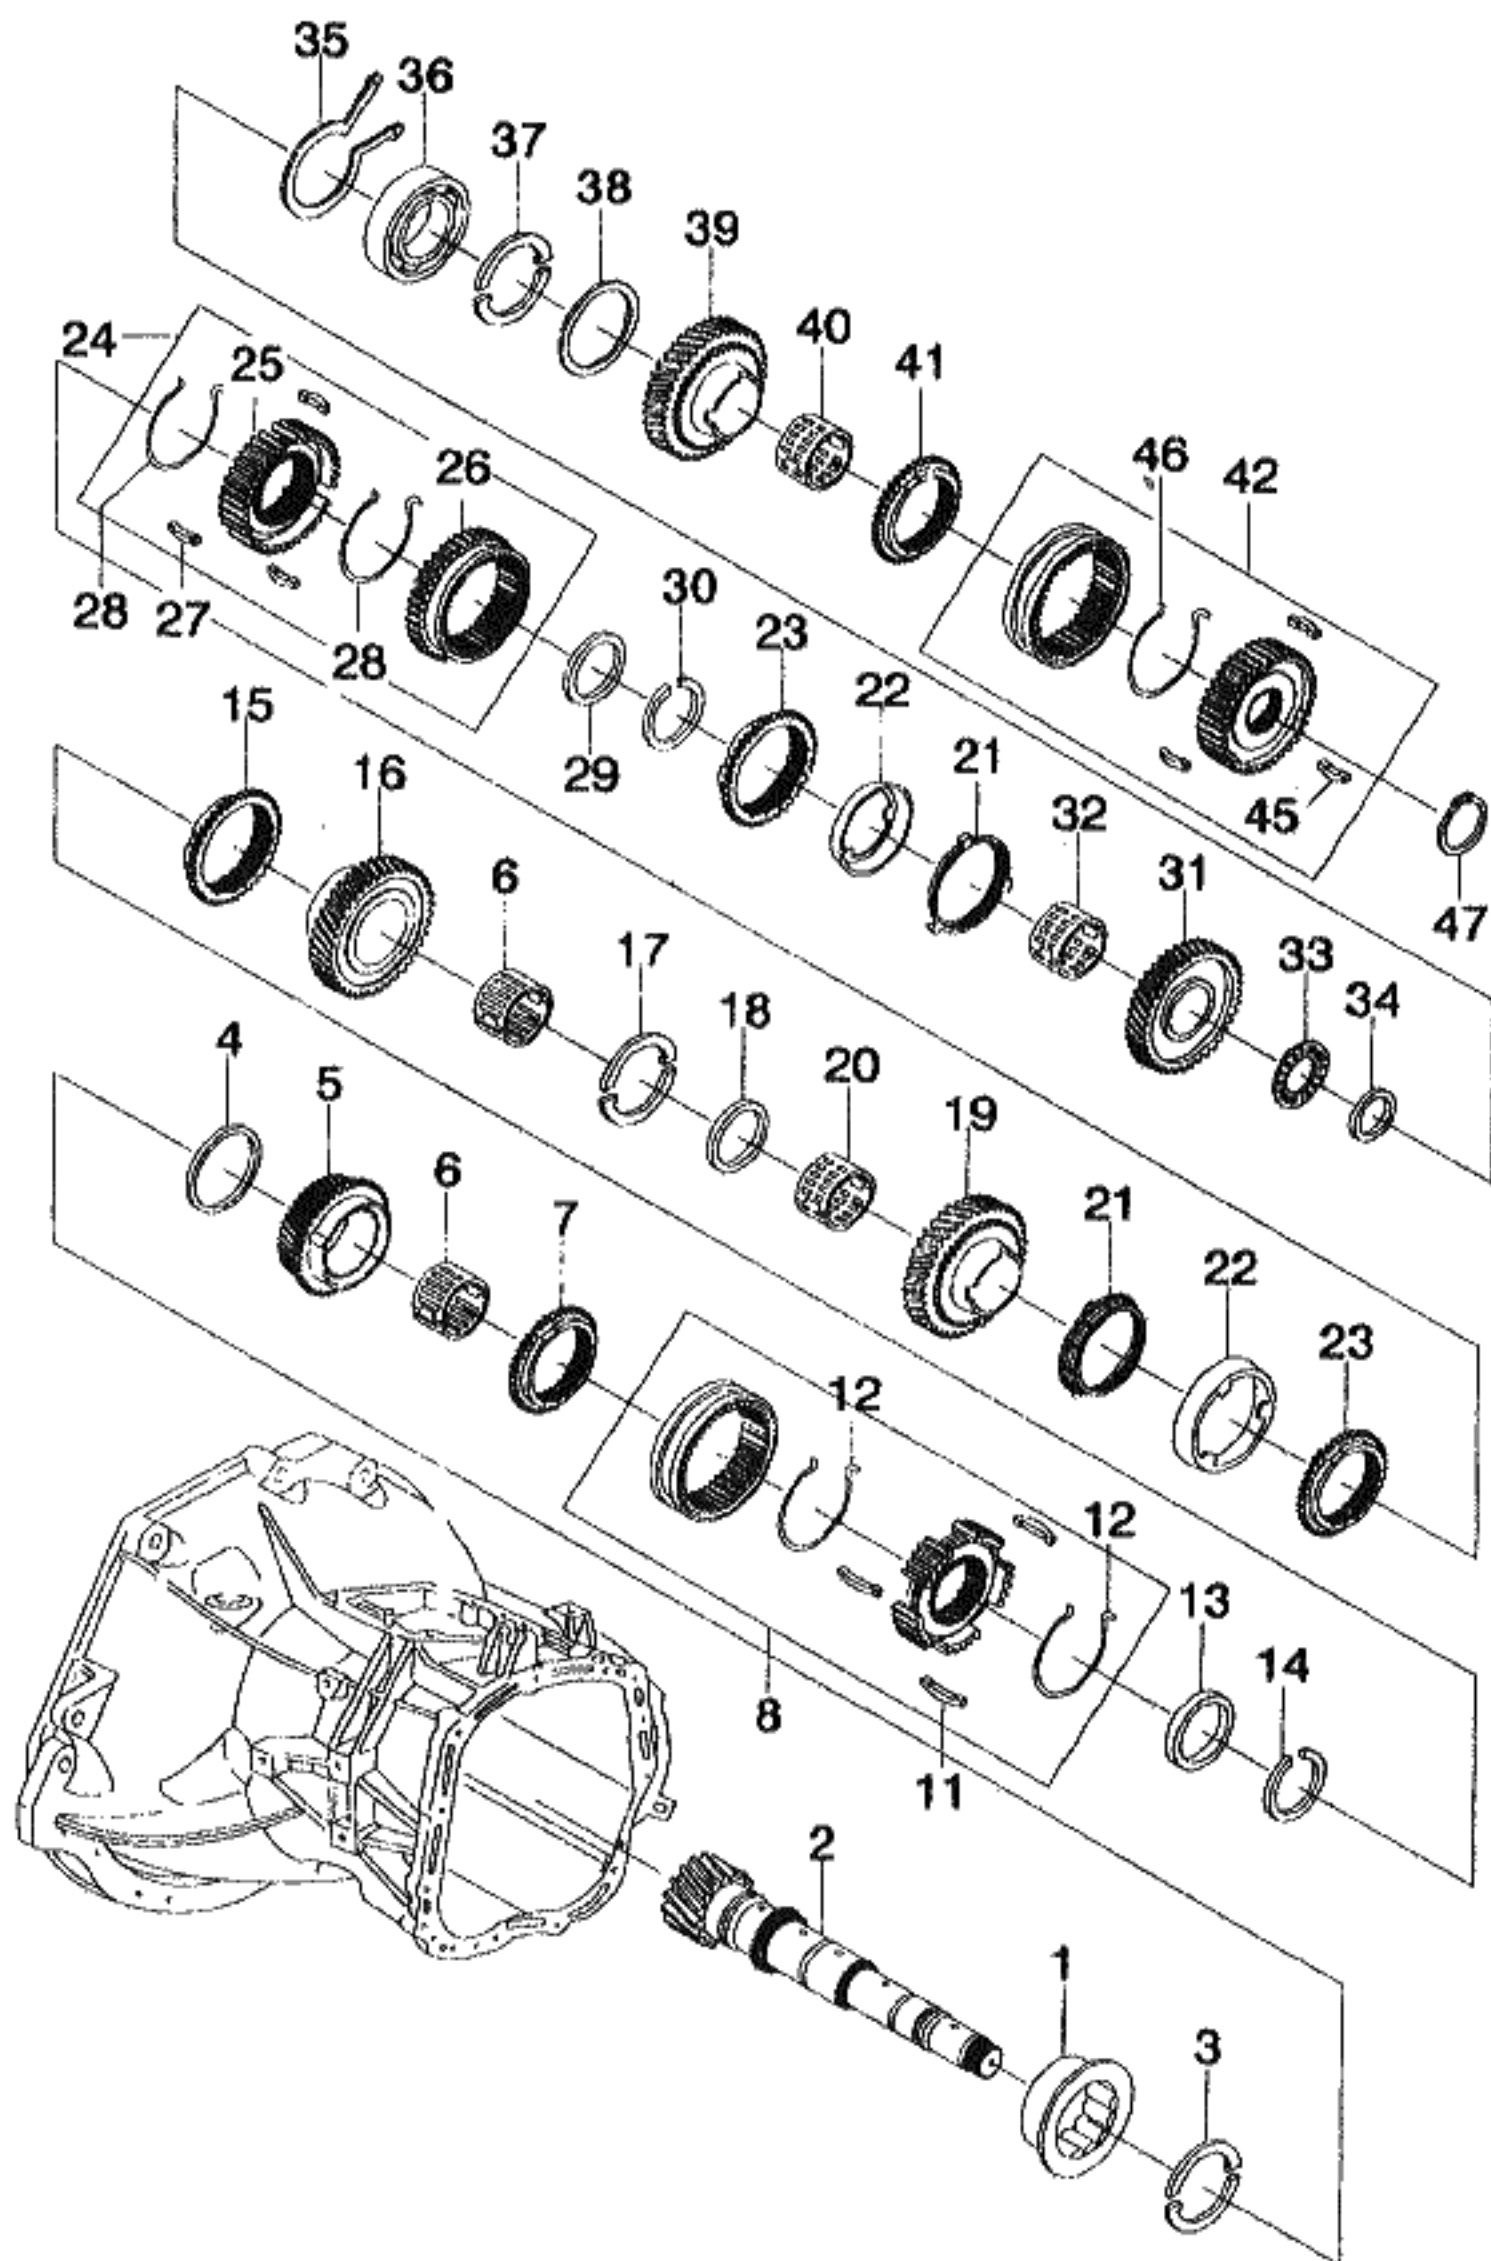

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[19]	(E)GEAR A-2ND SPEED (D)GETRIEBE,2.GANG						(F)ENGRENAGE-2EME VITESSE (S)ENGRANAJE-2DA VELOCIDAD			
	A96237740	M	S	.			1				
	A96182376	M	O	S	&L88		1				
	[20]	(E)CAGE-NEEDLE (D)KÄFIG NADEL						(F)CAGE-AIGUILLE (S)JAULA-AGUJA			
	90373750	M	S	S			1				
	[21]	(E)RING-INSIDE SYNCHRONIZER (D)RING,3 KEGEL ZWISCHEN						(F)ANNEAU (S)ANILLO-INTERMEDIO			
	90305938	M	S	S			2				
	[22]	(E)RING-3 CONE INTERMEDIATE (D)RING,3 KEGEL ZWISCHEN						(F)ANNEAU (S)ANILLO-INTERMEDIO			
	90250034	M	S	S			2				
	[23]	(E)RING-OUTSIDE SYNCHRONIZER (D)RING,SYNCHRONISATOR						(F)ANNEAU (S)ANILLO-SINCROIZADOR			
	90305939	M	S	S			2				
	[24]	(E)GEAR A-SLIDING (D)GETRIEBE						(F)ENGRENAGE-GLISSANT (S)ENGRANAJE-DESLIZADO			
	90236633	M	S	.			1				
	96182391	M	O	S	&L88		1				
	[25]	(E)PIECE-GUIDE 1ST&2ND SPEED (D)TEIL,FÜHRUNGS						(F)PIECE-GUIDE (S)PIEZA-GUIA			
	90250028	M	S	S			1				
	[26]	(E)GEAR-SLIDING TO REVERSE (D)GLEITGETRIEBE,RÜCKWÄRTS						(F)ENGRENAGE (S)ENGRANAJE			
	90250026	M	S	.			1				
	96182390	M	O	S	&L88		1				
	[27]	(E)KEY-1ST&2ND SYNCHRONIZER (D)SCHLÜßEL,SYNCHRONISATOR						(F)CLE-SYNCHRONISATEUR (S)LLAVE-SINCROIZADOR			
	90199019	M	S	S			3				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

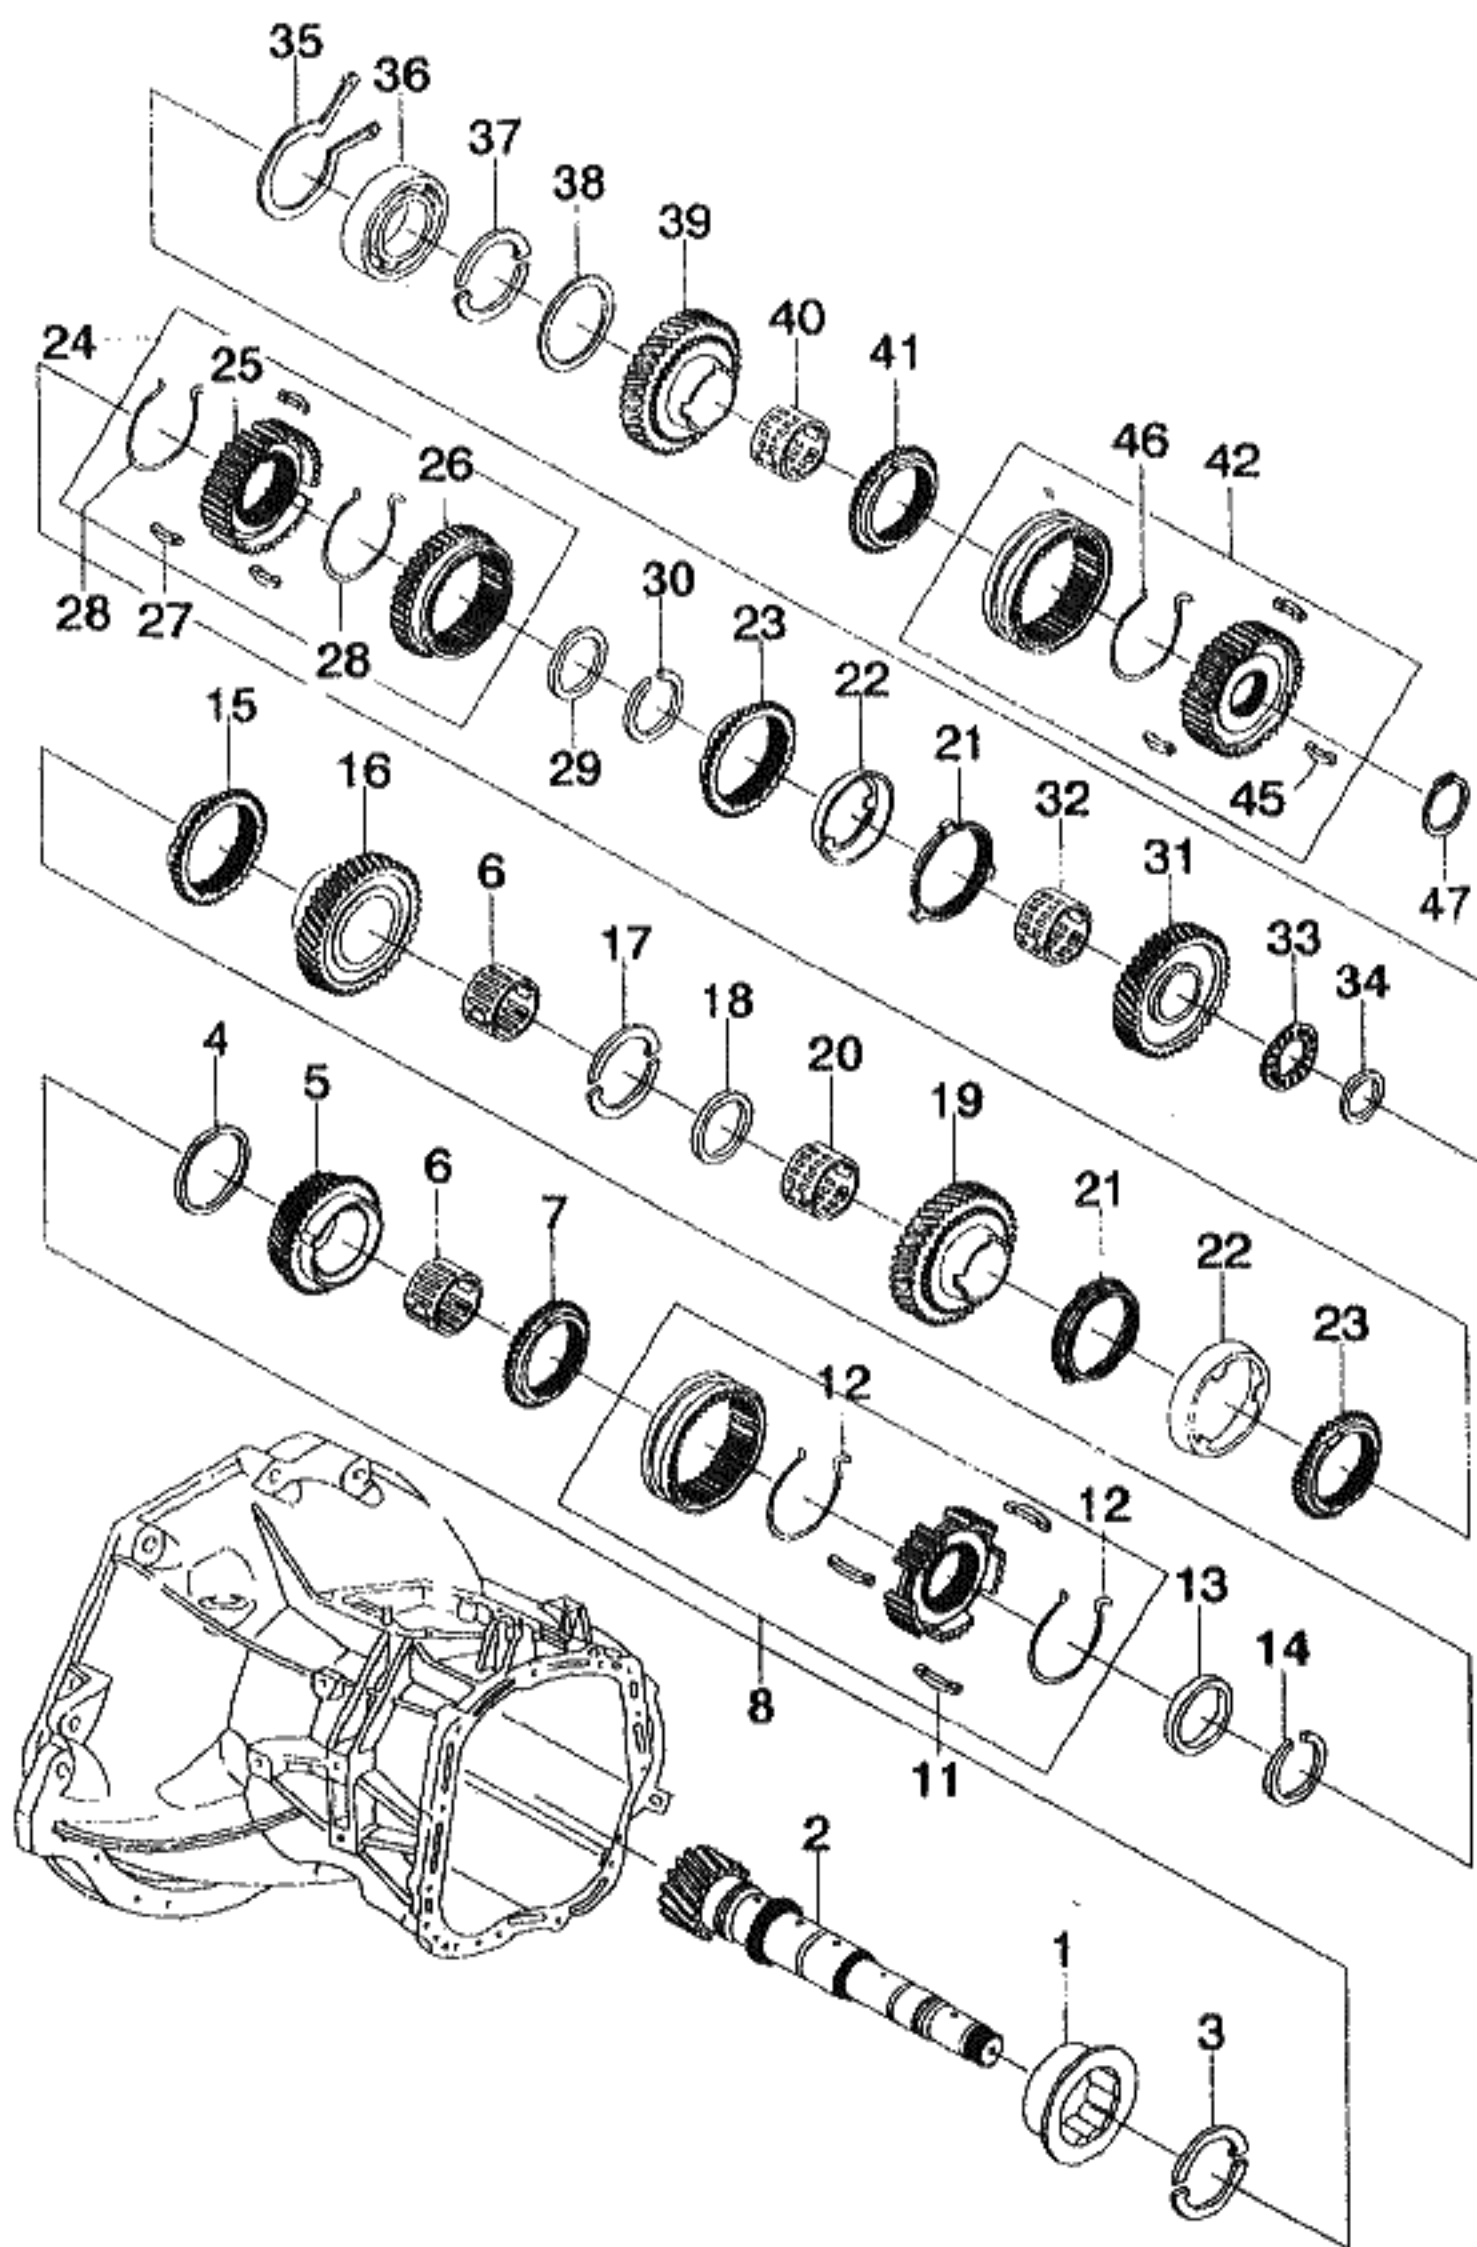

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[28] 90250029	(E)SPRING-1ST&2ND SYNCHRO (D)FEDERUNG,SYNCHRONISATOR	M	S	S			(F)RESSORT (S)RESORTE	2		
	[29] 09160-33007	(E)WASHER-THRUST (D)DICHTUNGSRING,SCHUB	M	S	S			(F)RONDELLE-BUTEE (S)ARANDELA-IMPULSO	1		
	[30] 90142582	(E)CIRCLIP (D)RUND-KLEMME	M	S	S			(F)CIRCLIP (S)GRAPA CIRCULAR	1		
	[31] 90334381 96182373	(E)GEAR A-1ST SPEED (D)GETRIEBE,1.GANG	M	S	.			(F)ENGRENAGE-1ERE VITESSE (S)ENGRANAJE-1RA VELOCIDAD	1		
			M	O	S	&L88			1		
	[32] 90373752	(E)CAGE-NEEDLE (D)KÄFIG NADEL	M	S	S			(F)CAGE-AIGUILLE (S)JAULA-AGUJA	1		
	[33] 90373751	(E)CAGE-NEEDLE (D)KÄFIG NADEL	M	S	S			(F)CAGE-AIGUILLE (S)JAULA-AGUJA	1		
	[34] 90142561	(E)DISC-MAINSHAFT (D)SCHEIBE,HAUPTSTANGE	M	S	S			(F)DISQUE (S)DISCO-EJE PRINCIPAL	1		
	[35] 90373019	(E)RING-RETAINING (D)RING,HALTER	M	S	S			(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR	1		
	[36] 96108006 96182977	(E)BEARING-GROOVE BALL (D)KUGELLAGER	M	S	.			(F)ROULEMENT-BILLE A SILLONS (S)COJINETE-BOLA DE RANURA	1		
			M	O	S	&L88			1		

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON


LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A
A = AUTOMATIC T/A
. = COMMON


CDX = 2.0 DOHC

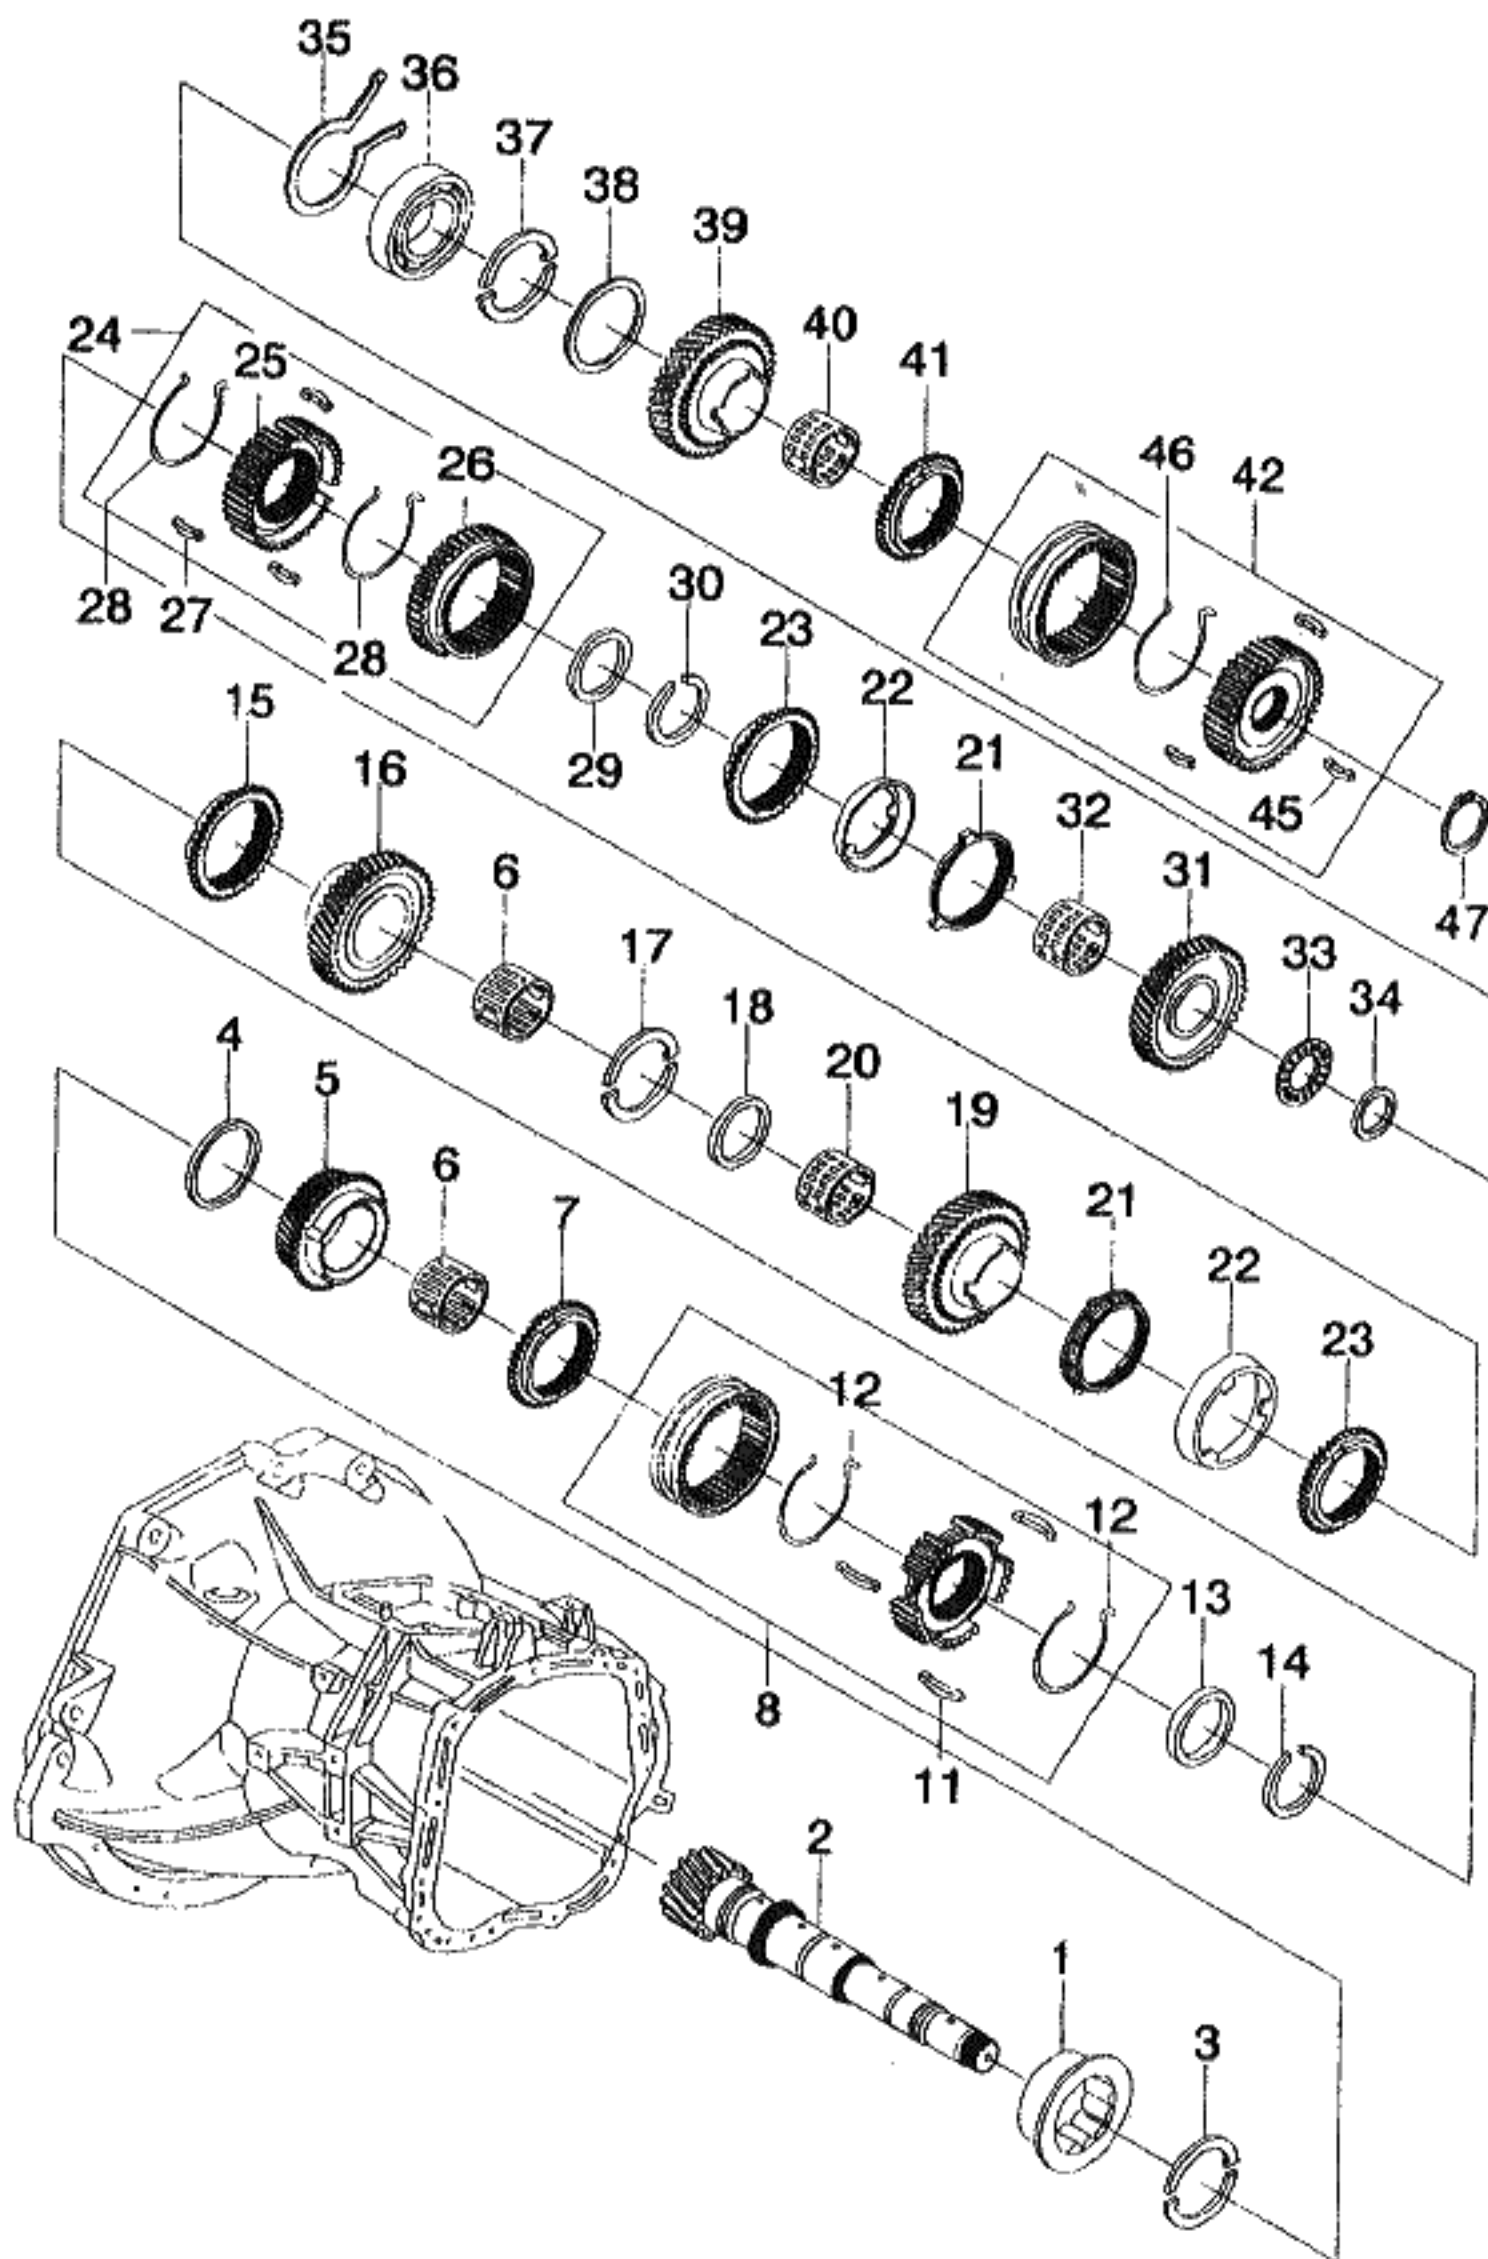


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[37] 90223614	(E)WASHER-MAIN SHAFT THRUST (D)DICHTUNGSRING	M	S	S		(F)RONDELLE (S)ARANDELA	2			
	[38] 90142139	(E)RING-RETAINING (D)RING,HALTER	M	S	S		(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR	1			
	[39] A96237746 A96180905	(E)GEAR A-5TH SPD TRANSAXLE (D)GETRIEBE,5.GANG ANTRIEB	M	S	.		(F)ENGRENAGE (S)ENGRANAJE-CAJA CAMBIOS	1			
	[40] 90373748	(E)CAGE-NEEDLE (D)KÄFIG NADEL	M	S	S		(F)CAGE-AIGUILLE (S)JAULA-AGUJA	1			
	[41] 90304686 96180876	(E)RING-SYNCHRONIZING (D)RING,SYNCHRONISIERUNGS	M	S	.		(F)ANNEAU-SYNCHRONISATION (S)ANILLO-SINCROIZADOR	1			
	[42] K90142140 Y A90142140 K96182076 Y A96182076	(E)SLEEVE A-5TH SPEED SHIFT (D)HÜLSE	M	S	.		(F)CHEMISE (S)MANGA-CAMBIO	1			
	[45] 90142143 96180879	(E)KEY-5TH SPD SYNCHRONIZER (D)SCHLÜßEL,SYNCHRONISATOR	M	S	.		(F)CLE-SYNCHRONISATEUR (S)LLAVE-SINCROIZADOR	3			
	[46] 90157546	(E)SPRING-5TH SPD SYNCHRO (D)FEDERUNG,5.GANG SYNCHRO	M	S	.		(F)RESSORT-5EME VIT SYNCHRO (S)RESORTE	1			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

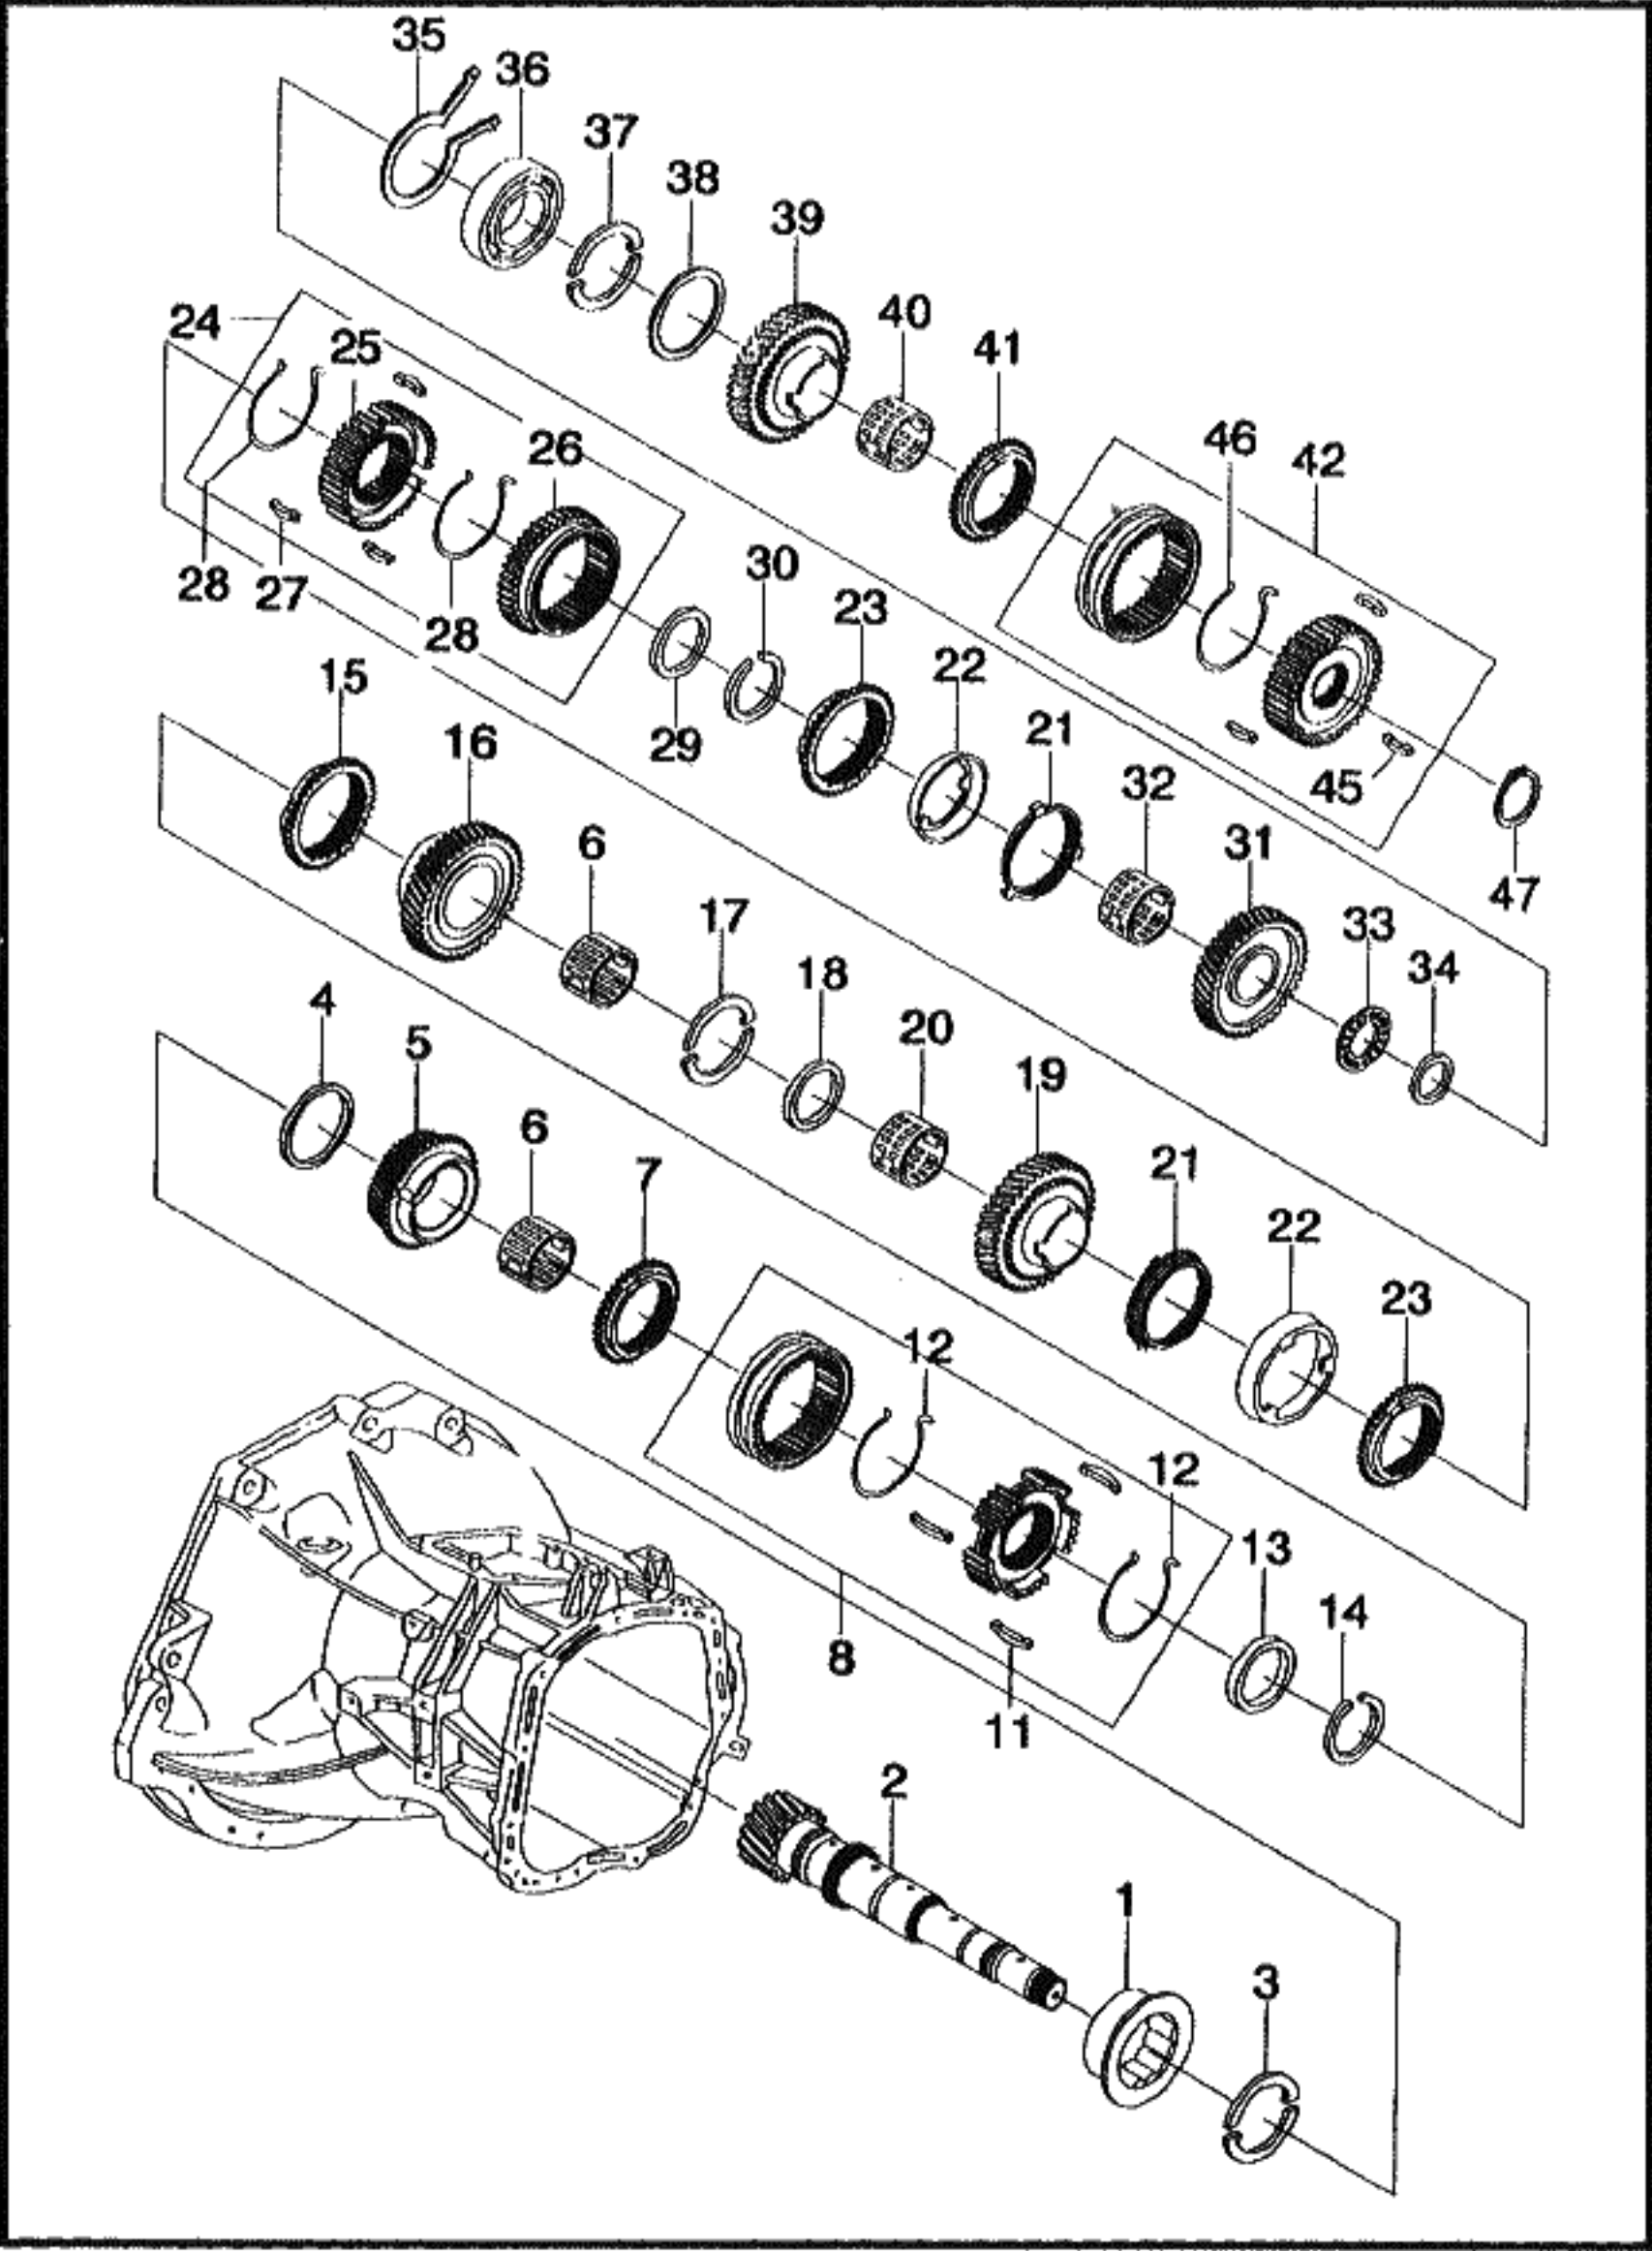

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96227531	M	O	S	&L88		1					
	[47]				(E)RING-RETAINING							
	90373017	M	S	S	(D)RING,HALTER		1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

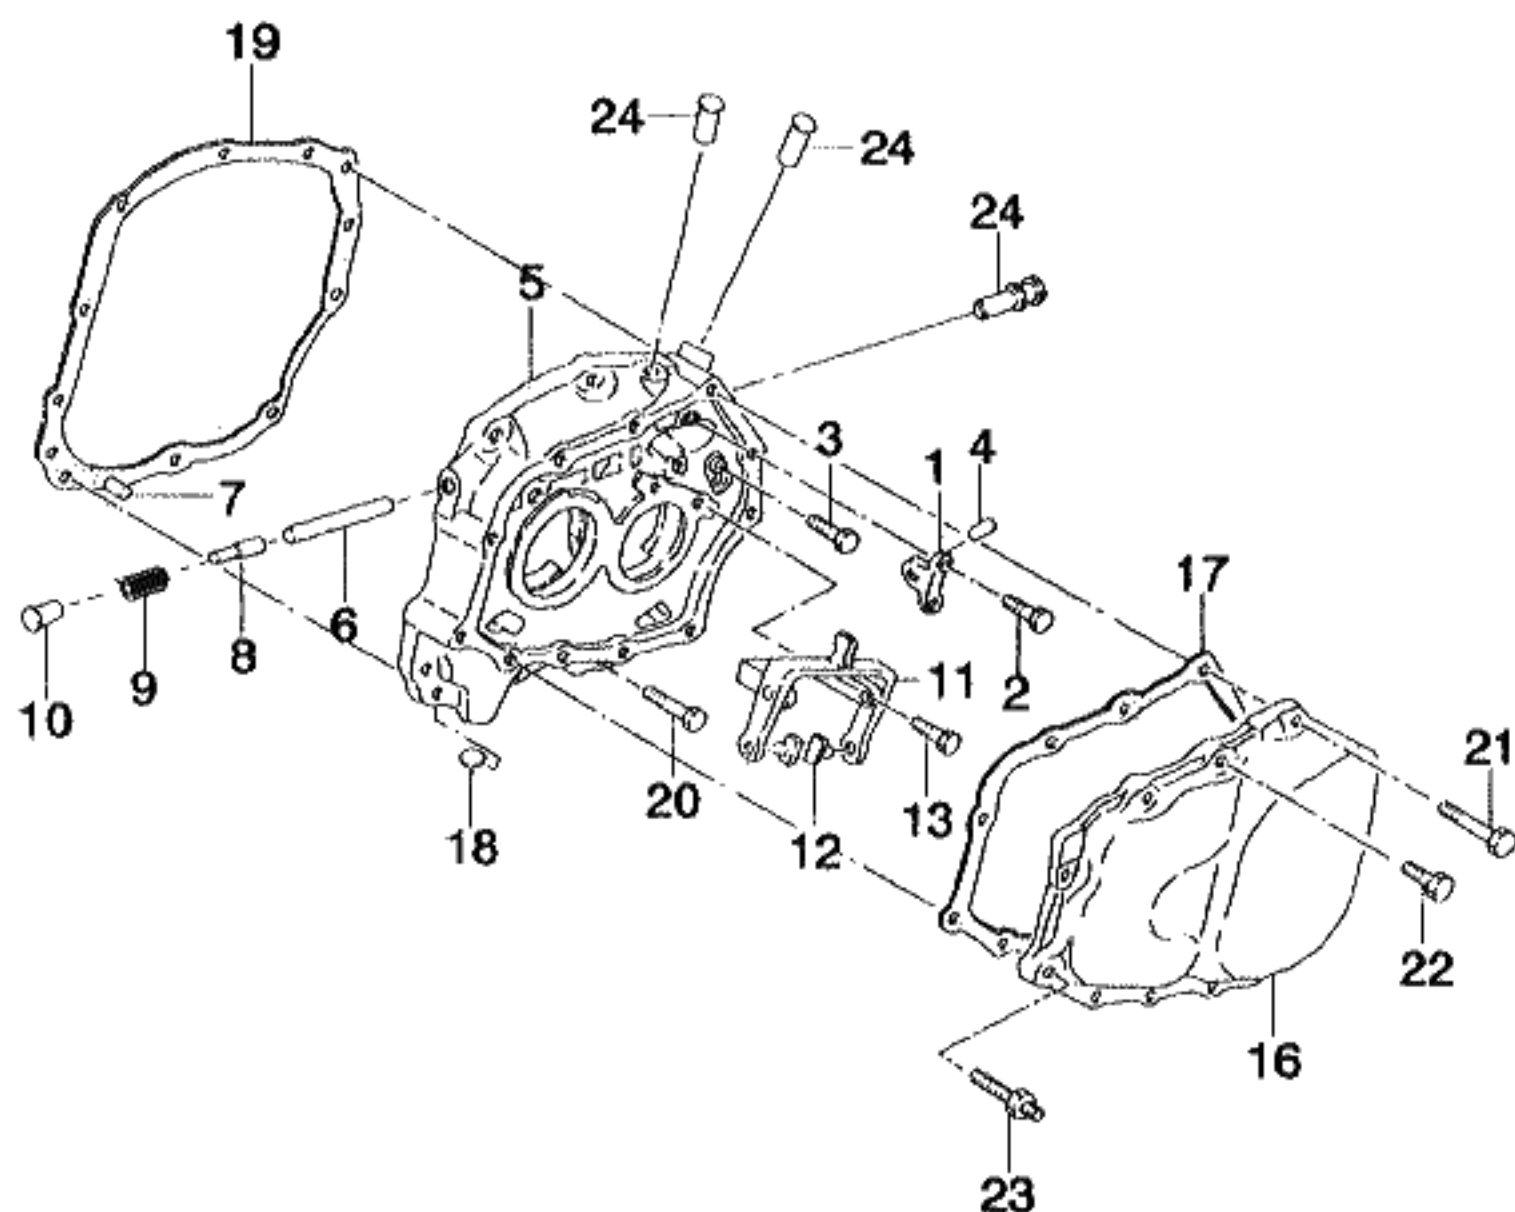


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 90147084	(E) BRIDGE-STRAIN BOLT (D) BRÜCKEN-SPANNUNGSSCHRAU M	S	S		(F) PONT-BOULON DE TAMIS (S) PUENTE-PERNO DE TENSION 1					
	[02] 09106-06003	(E) BOLT-CROWN (D) SCHRAUBE M	S	S		(F) VIS (S) TORNILLO 2					
	[03] 09106-06004	(E) BOLT-CROWN (D) SCHRAUBE M	S	S		(F) VIS (S) TORNILLO 2					
	[04] 90086156	(E) BOLT-GEARSHIFT STRAIN ROD (D) SCHRAUBE M	S	S		(F) BOULON (S) PERNO 1					
	[05] 96180859	(E) PLATE-BEARING (D) PLATTE, LAGER M	S	S		(F) PLAQUE-ROULEMENT (S) PLACA-COJINETE 1					
	[06] 90032052	(E) BOLT-GEARSHIFT STRAIN ROD (D) SCHRAUBE M	S	S		(F) BOULON (S) PERNO 1					
	[07] 90343317	(E) PIN-DOWEL (D) STIFT, DÜBEL M	S	S		(F) BROCHE-GOUJON (S) PASADOR-CLAVIJA 2					
	[08] 90189977	(E) PIN-BLOCKING (D) STIFT, BLOCKIER M	S	S		(F) BROCHE-DE BLOCAGE (S) PASADOR-BLOQUEADOR 3					
	[09] 90125326	(E) SPRING-COMPRESSION (D) FEDERUNG, VERDICHUNG M	S	S		(F) RESSORT-COMPRESSION (S) RESORTE-COMPRESION 3					
	[10] 90092564	(E) PLUG (D) STÖPSEL M	S	S		(F) BOUCHON (S) TAPON 1					
LEVEL					T/A (TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

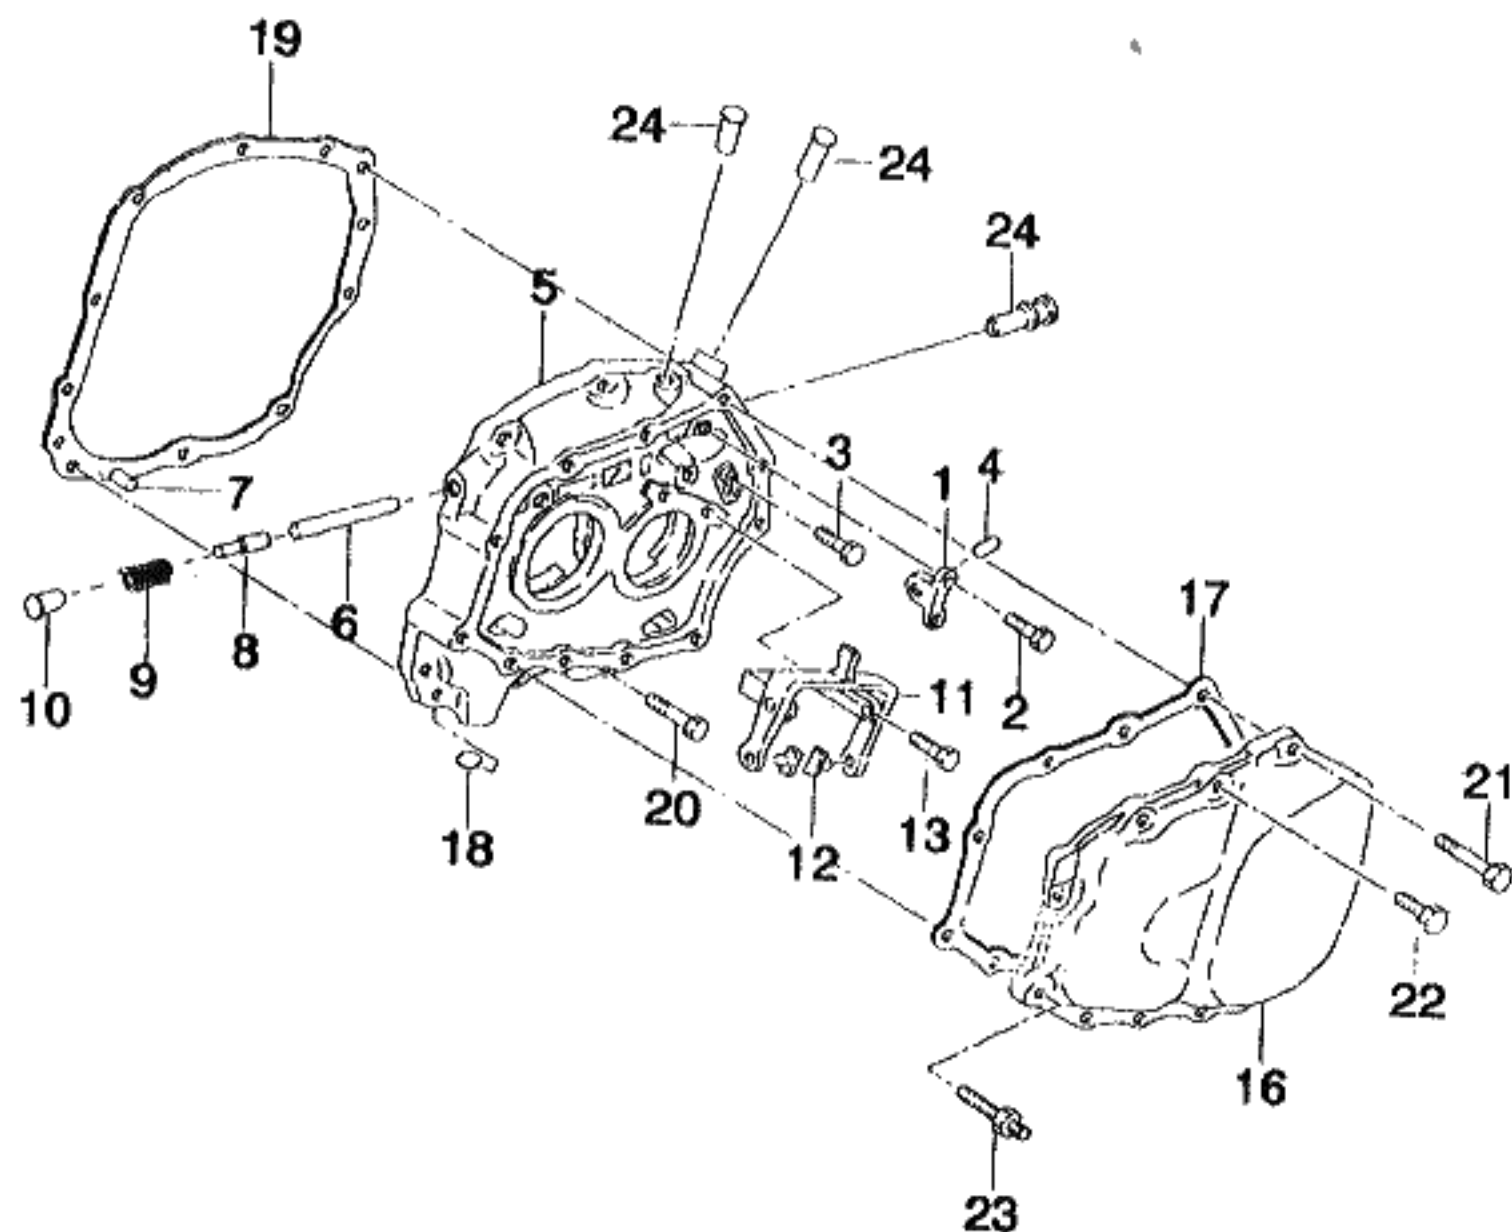


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11]	(E)FORK A-GEARSHIFT SLIDING (D)GABEL, GANGSCHALTUNG, GLEIT				(F)FOURCHETTE (S)HORQUILLA-DESLIZADOR						
	90342057	M	S			1						
	96180884	M	O	S	&L88	1						
	[12]	(E)SHOE-GEARSHIFT (D)SCHUH, GANGSCHALTUNG				(F)SABOT-CHANGEMENT (S)ZAPATA-PALANCA DE CAMBIOS						
	96305524	M	S	S		2						
	96180886	M	S	S		2						
	[13]	(E)BOLT-CROWN (D)SCHRAUBE				(F)VIS (S)TORNILLO						
	09106-08004	M	S	S		2						
	[16]	(E)COVER-TRANSAXLE (D)DECKEL, ANTRIEB				(F)CARTER-TRANSMISSION (S)CUBIERTA-EJE TRANSVERSAL						
	96175844	M	S	S		1						
	[17]	(E)GASKET-TRANSAXLE COVER (D)DICHTUNG, ANTRIEB DECKEL				(F)JOINT (S)JUNTA						
	96179238	M	S	S		1						
	[18]	(E)MAGNET (D)MAGNET				(F)AIMANT (S)IMAN						
	08957605	M	S	S		1						
	[19]	(E)GASKET-BEARING PLATE (D)DICHTUNG, LAGER PLATTE				(F)JOINT-PLAQUE DE ROULEMENT (S)JUNTA-PLACA DE COJINETE						
	96179244	M	S	S		1						
	[20]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)VIS (S)TORNILLO						
	09100-08016	M	S	S		5						
	[21]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)VIS (S)TORNILLO						
	09100-08018	M	S	S		5						


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

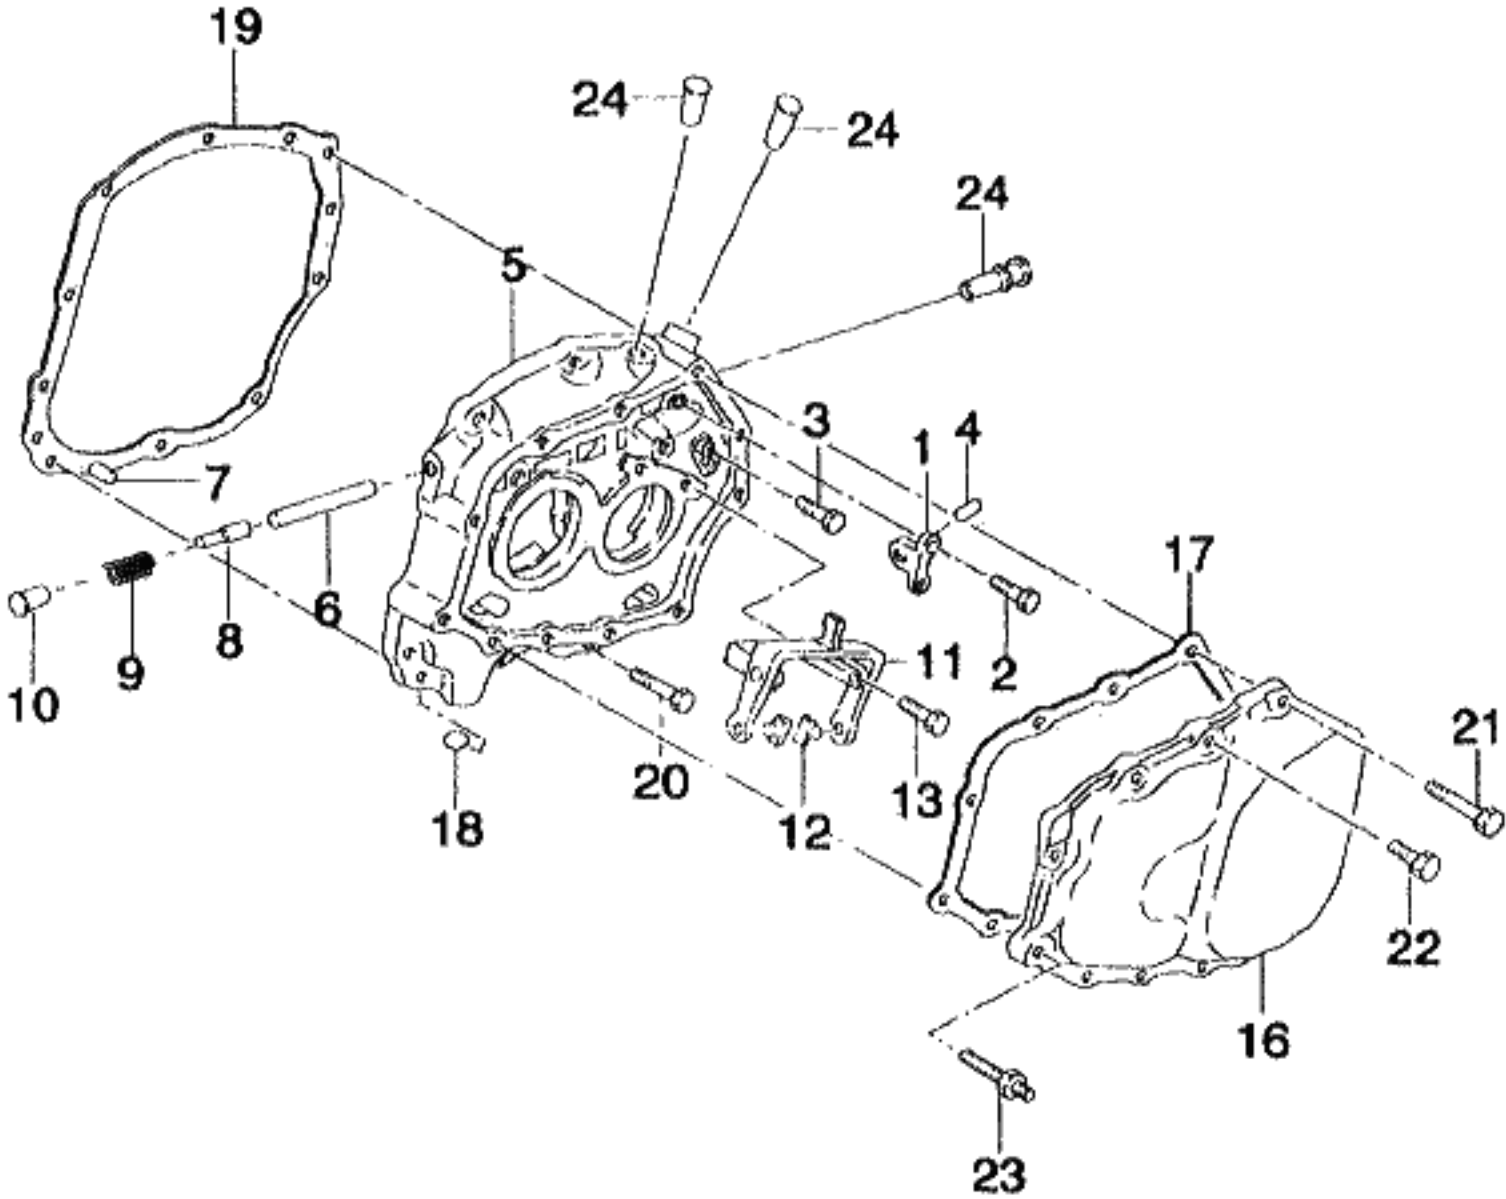


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[22] 09100-07002	(E)BOLT-HEXAGON (D)SCHRAUBE M	S	S		(F)VIS (S)TORNILLO 5						
	[23] 90168610	(E)SCREW (D)SCHRAUBE M	S	S		(F)VIS (S)TORNILLO 1						
	[24] 90375062	(E)SLEEVE-DETENT (D)HÜLSE,RÜCK-HALTER M	S	S		(F)CHEMISE-DETENTE (S)MANGA-SEGURO 3						
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

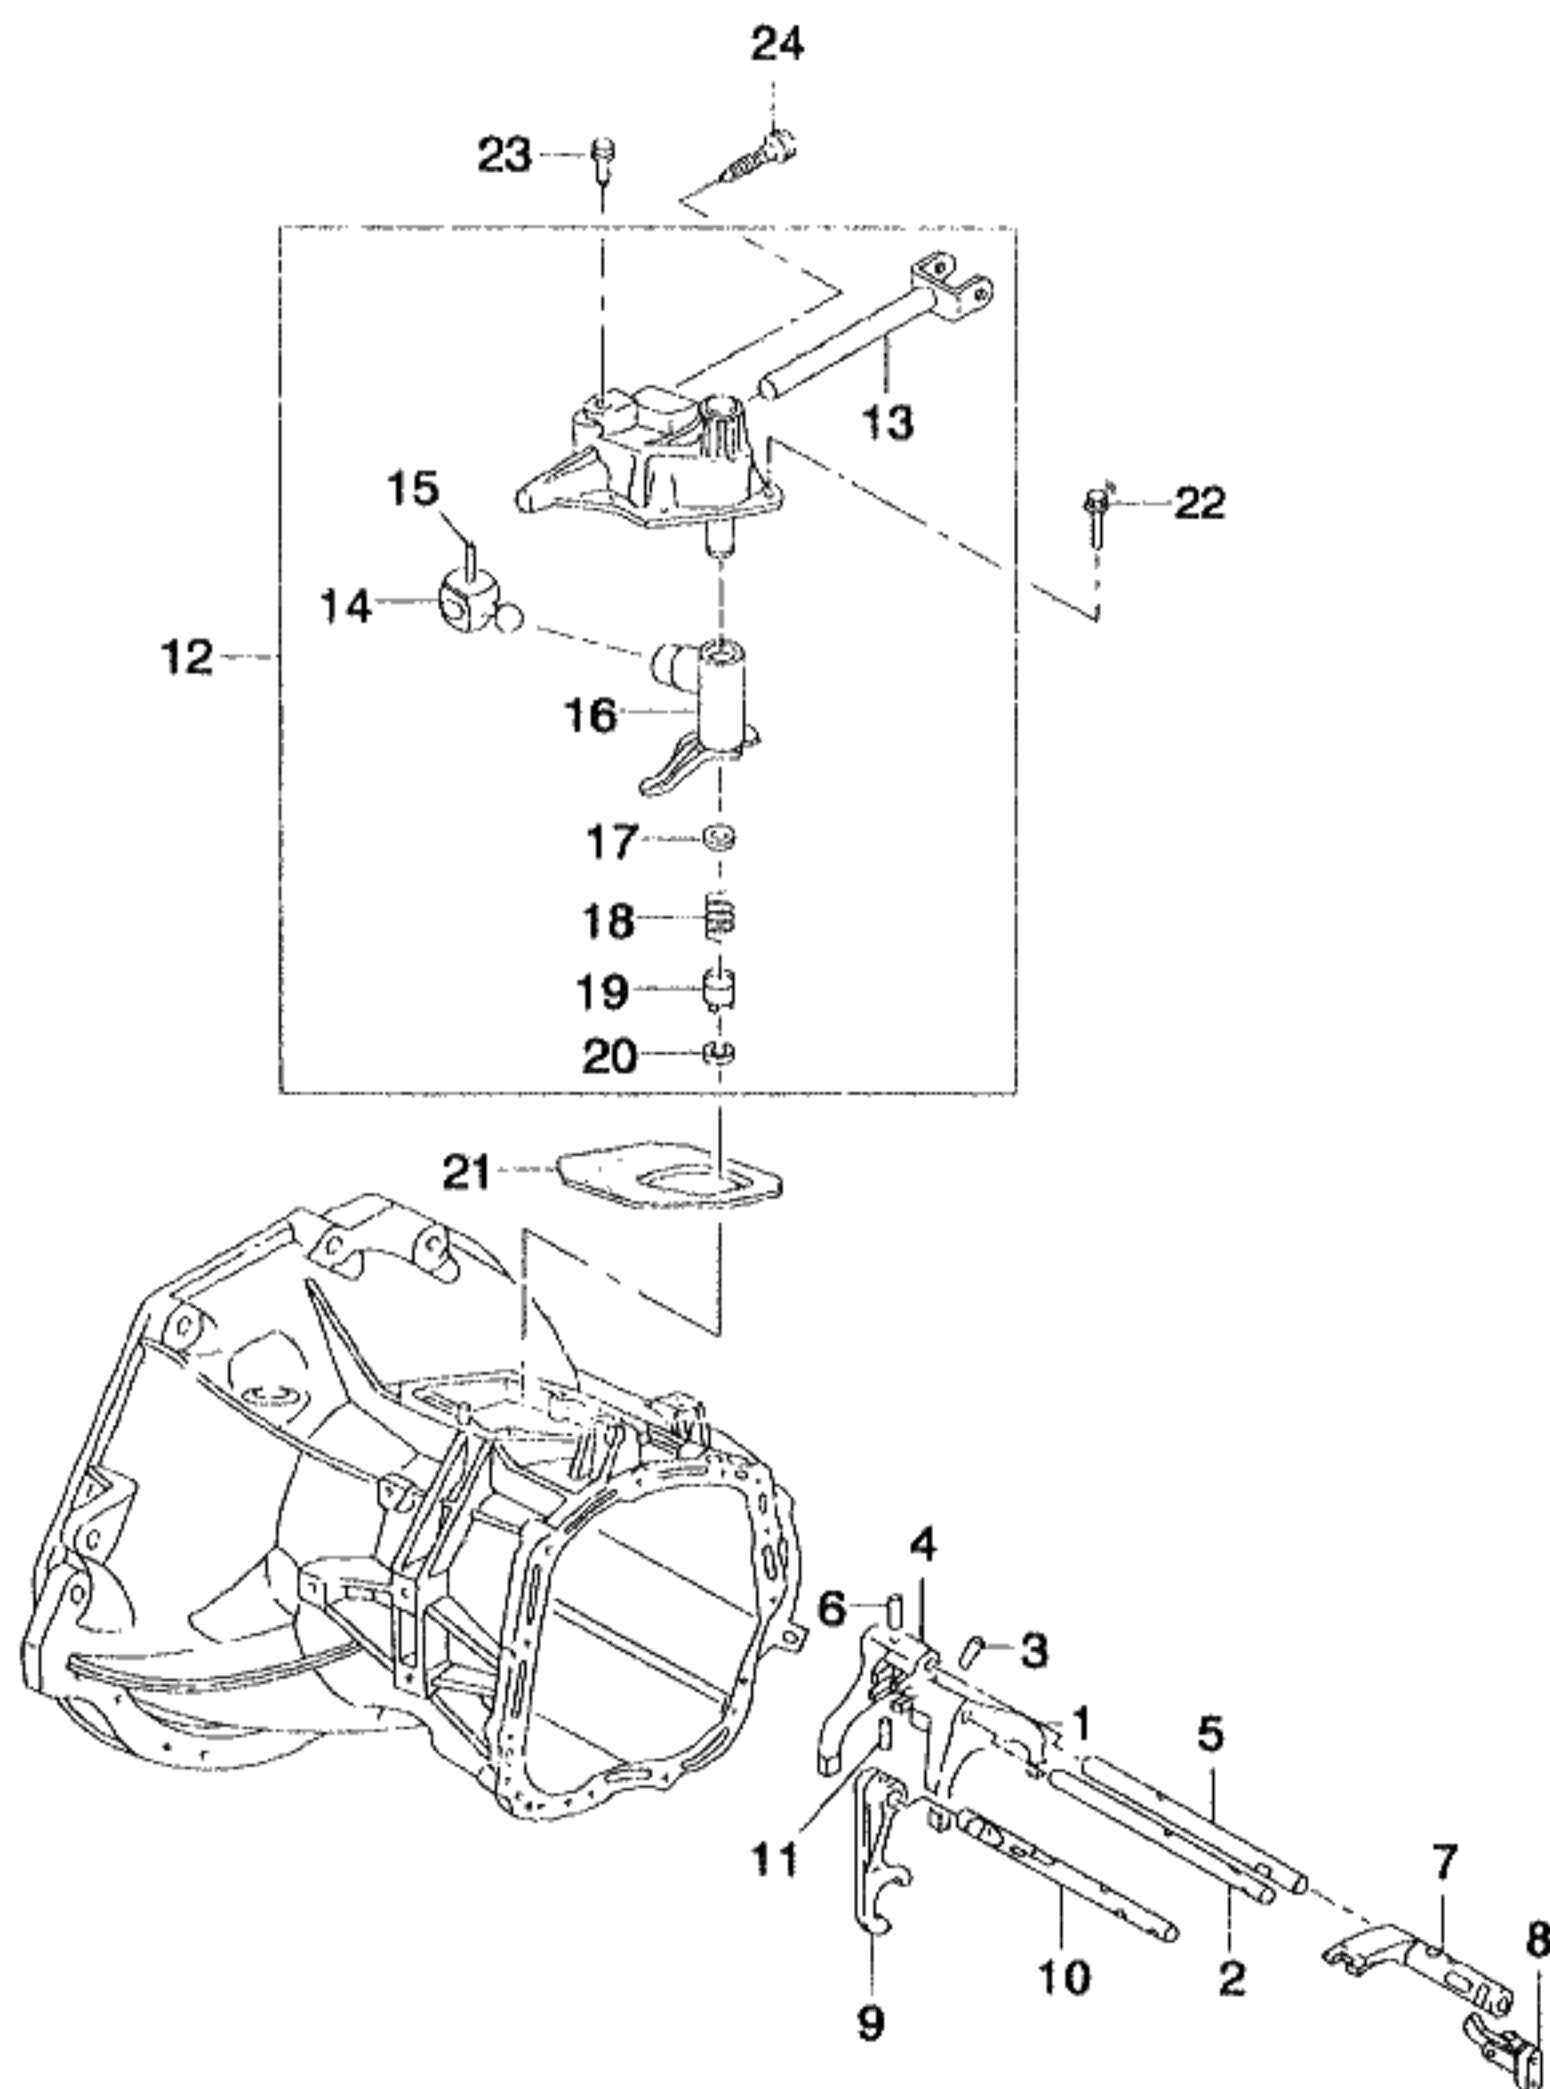

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
[01]	96180849	(E)FORK-1ST&2ND GEAR SHIFT (D)GABEL, 1. &2. GANGSCHALTUNG	M	S	S		(F)FOURCHETTE (S)HORQUILLA-CAMBIOS	1				
[02]	90375059	(E)ROD-1ST&2ND GEAR SHIFT (D)STAB, 1. &2. GANGSCHALTUNG	M	S	.		(F)TRINGLE (S)VARILLA-PALANCA DE CAMBIO	1				
	90334192		M	O	S &L88			1				
[03]	11054212	(E)PIN-COILED (D)STIFT,GEWICKELT	M	S	S		(F)BROCHE-BOUDIN (S)PASADOR-ENROSCADO	1				
[04]	96180851	(E)FORK-3RD&4TH GEAR SHIFT (D)GABEL, 3. &4. GANGSCHALTUNG	M	S	.		(F)FOURCHETTE (S)HORQUILLA-CAMBIOS	1				
	96182393		M	O	S &L88			1				
[05]	90375060	(E)ROD-3RD&4TH GEAR SHIFT (D)STRABE 3. &4. GANGSCHALTUNG	M	S	S		(F)ROUTE (S)VIA-PALANCA DE CAMBIOS	1				
[06]	11054212	(E)PIN-COILED (D)STIFT,GEWICKELT	M	S	S		(F)BROCHE-BOUDIN (S)PASADOR-ENROSCADO	1				
[07]	96180854	(E)PIECE-5TH SPEED ENGAGING (D)TEIL,BETÄTIGUNGS	M	S	.		(F)PIECE-ENGAGEMENT (S)PIEZA-ENGRANAR	1				
	90375041		M	O	S &L88			1				
[08]	90142154	(E)PAWL-GEAR SHIFT ROD (D)SPERRHACKEN	M	S	S		(F)CLIQUET (S)RETEN	1				
[09]	96180853	(E)FORK-GEAR SHIFT REVERSE (D)GABEL	M	S	.		(F)FOURCHETTE-MARCHE (S)HORQUILLA-CAMBIO	1				
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

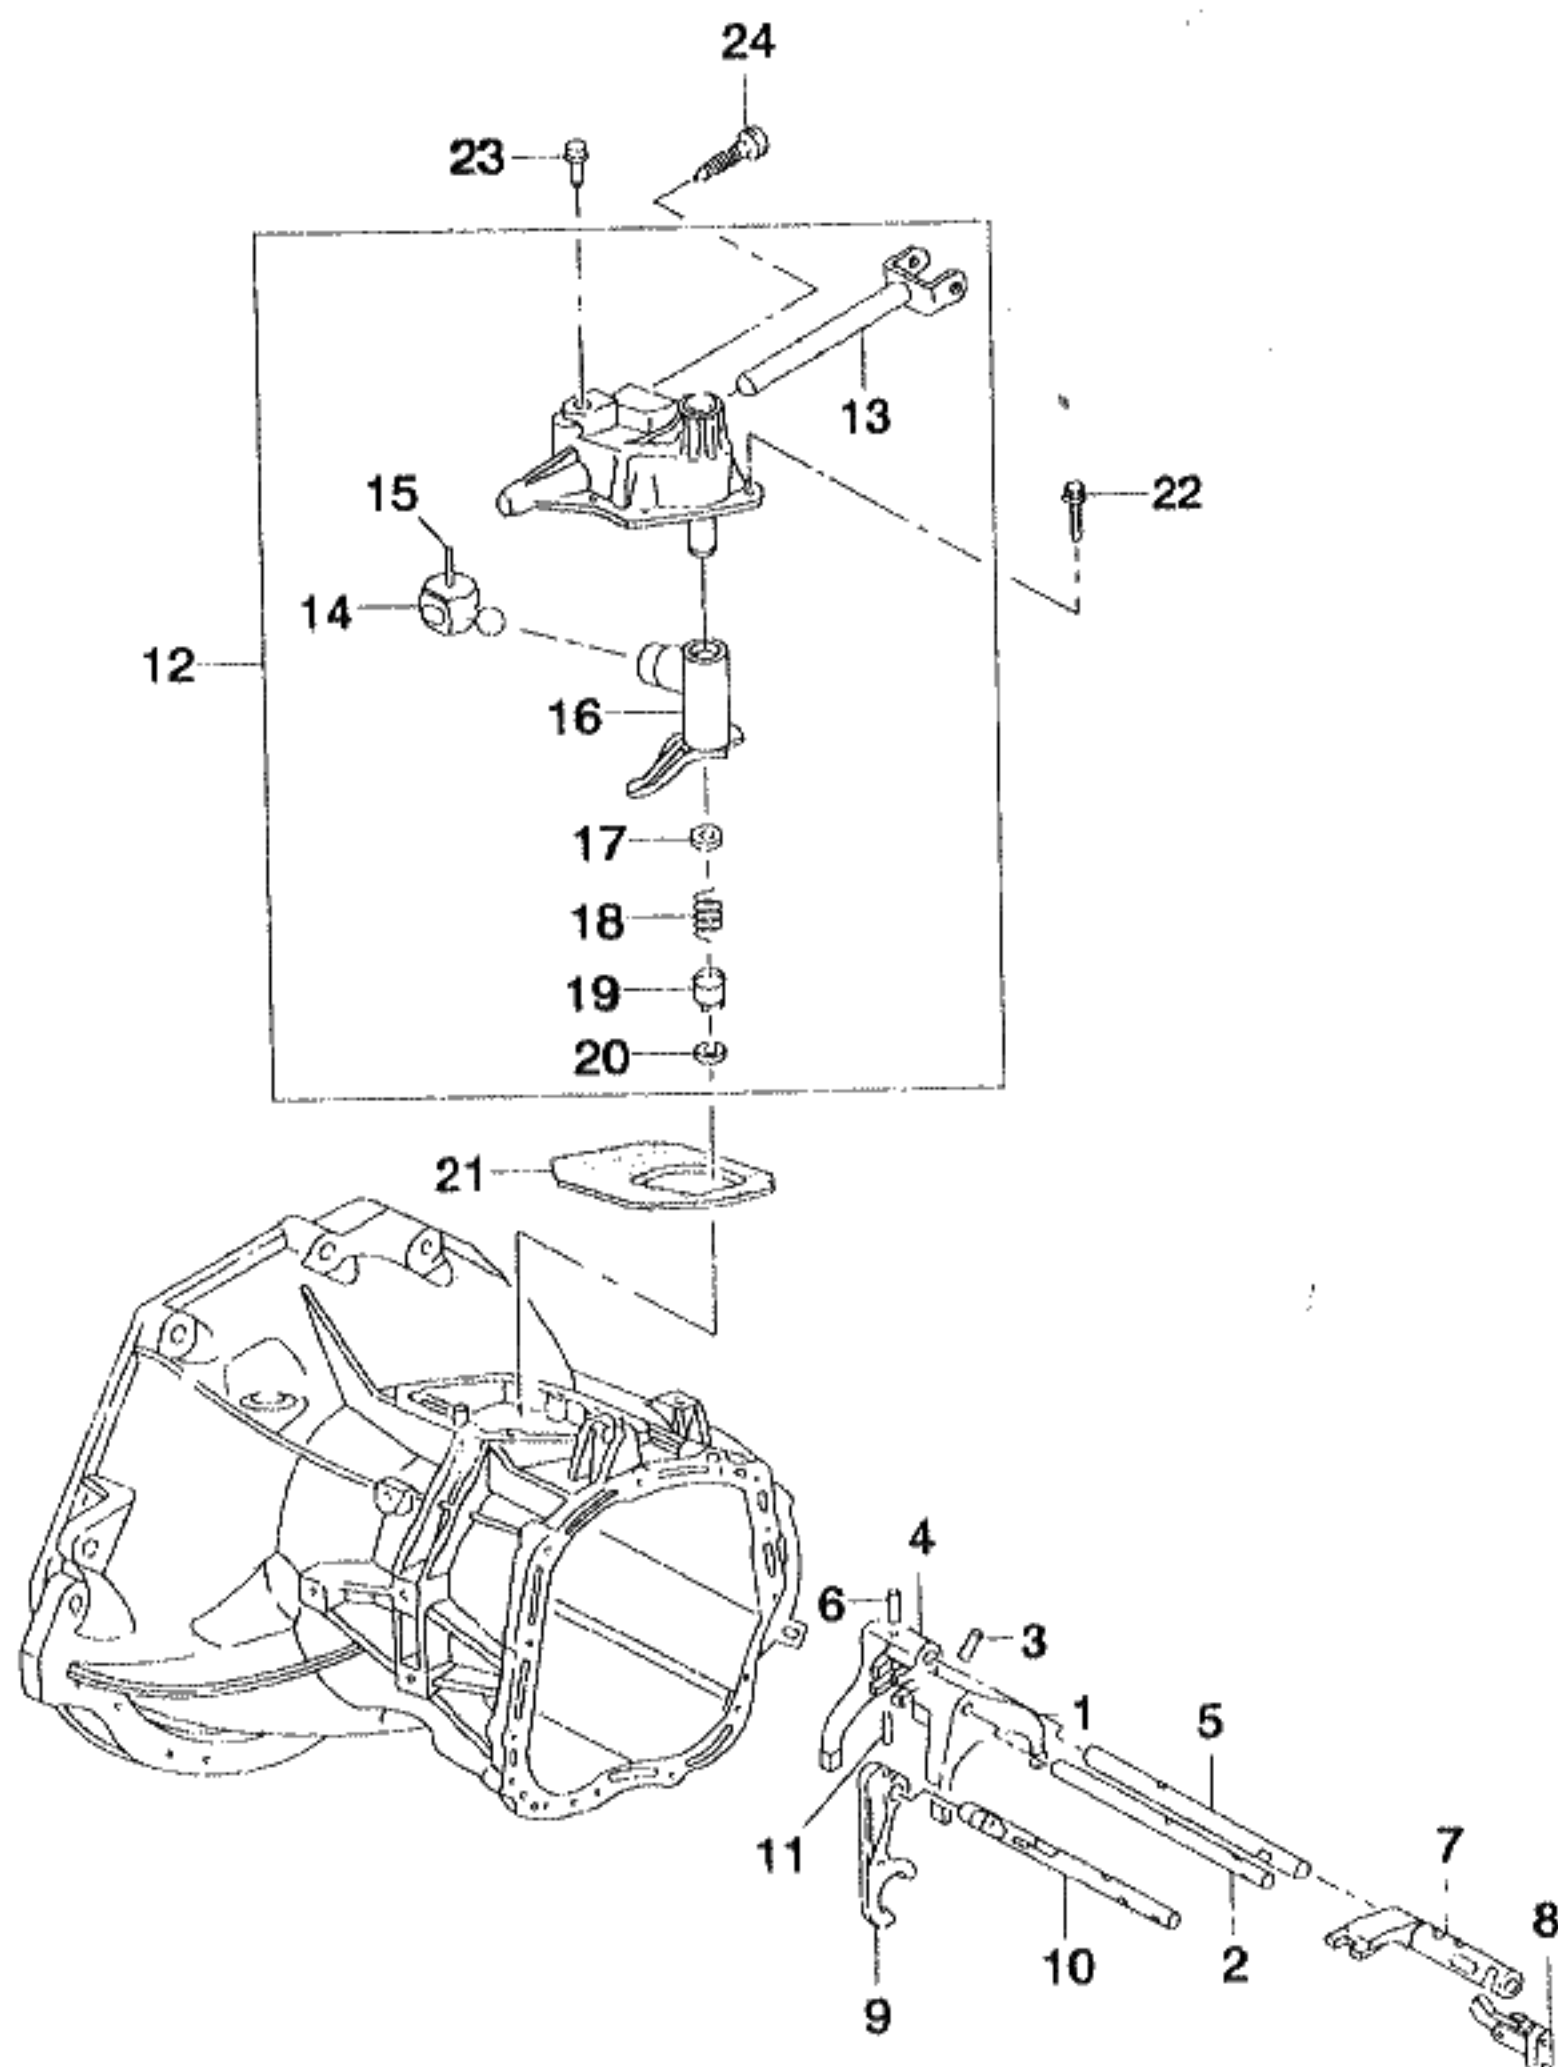


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	90199518	M	O	S	&L88		1					
	[10]	(E)	ROD-REVERSE GEAR SHIFT				(F)	TRINGLE				
		(D)	STAB				(S)	VARILLA-PALANCA DE CAMBIO				
	90334195	M	S	S			1					
	[11]	(E)	PIN-COILED				(F)	BROCHE-BOUDIN				
		(D)	STIFT,GEWICKELT				(S)	PASADOR-ENROSCADO				
	11054212	M	S	S			1					
	[12]	(E)	COVER A-GEAR SHIFT				(F)	CARTER				
		(D)	DECKEL GANGSCHALTUNG				(S)	CUBIERTA				
	90374314	M	S	S			1					
	[13]	(E)	ROD A-GEAR SHIFT				(F)	TRINGLE				
		(D)	STAB,GANGSCHALTUNG				(S)	VARILLA-PALANCA DE CAMBIO				
	90147931	M	S	S			1					
	[14]	(E)	FINGER-SHIFT				(F)	DOIGT-CHANGEMENT				
		(D)	FINGER,SCHALTUNG				(S)	DEDO-CAMBIOS				
	90157060	M	S	S			1					
	[15]	(E)	PIN-COILED				(F)	BROCHE-BOUDIN				
		(D)	STIFT,GEWICKELT				(S)	PASADOR-ENROSCADO				
	11054212	M	S	S			1					
	[16]	(E)	LEVER-GEAR SHIFT INTER				(F)	LEVIER				
		(D)	HEBEL,GANGSCHALTUNG				(S)	PALANCA				
	96179218	M	S	S			1					
	[17]	(E)	PLATE-GUARD				(F)	PLAQUE-GARDE				
		(D)	PLATTE,SCHUTZ				(S)	PLACA-GUARDIA				
	90142132	M	S	S			1					
	[18]	(E)	SPRING-COMPRESSION				(F)	RESSORT-COMPRESSION				
		(D)	FEDERUNG,VERDICHUNG				(S)	RESORTE-COMPRESION				
	90170121	M	S	S			1					
	[19]	(E)	BUSH-GEAR SHIFT COVER				(F)	MANCHON				
		(D)	LAGERFUTTER				(S)	BUJE				
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC					M = MANUAL T/A							
CDX = 2.0 DOHC					A = AUTOMATIC T/A							
					. = COMMON							

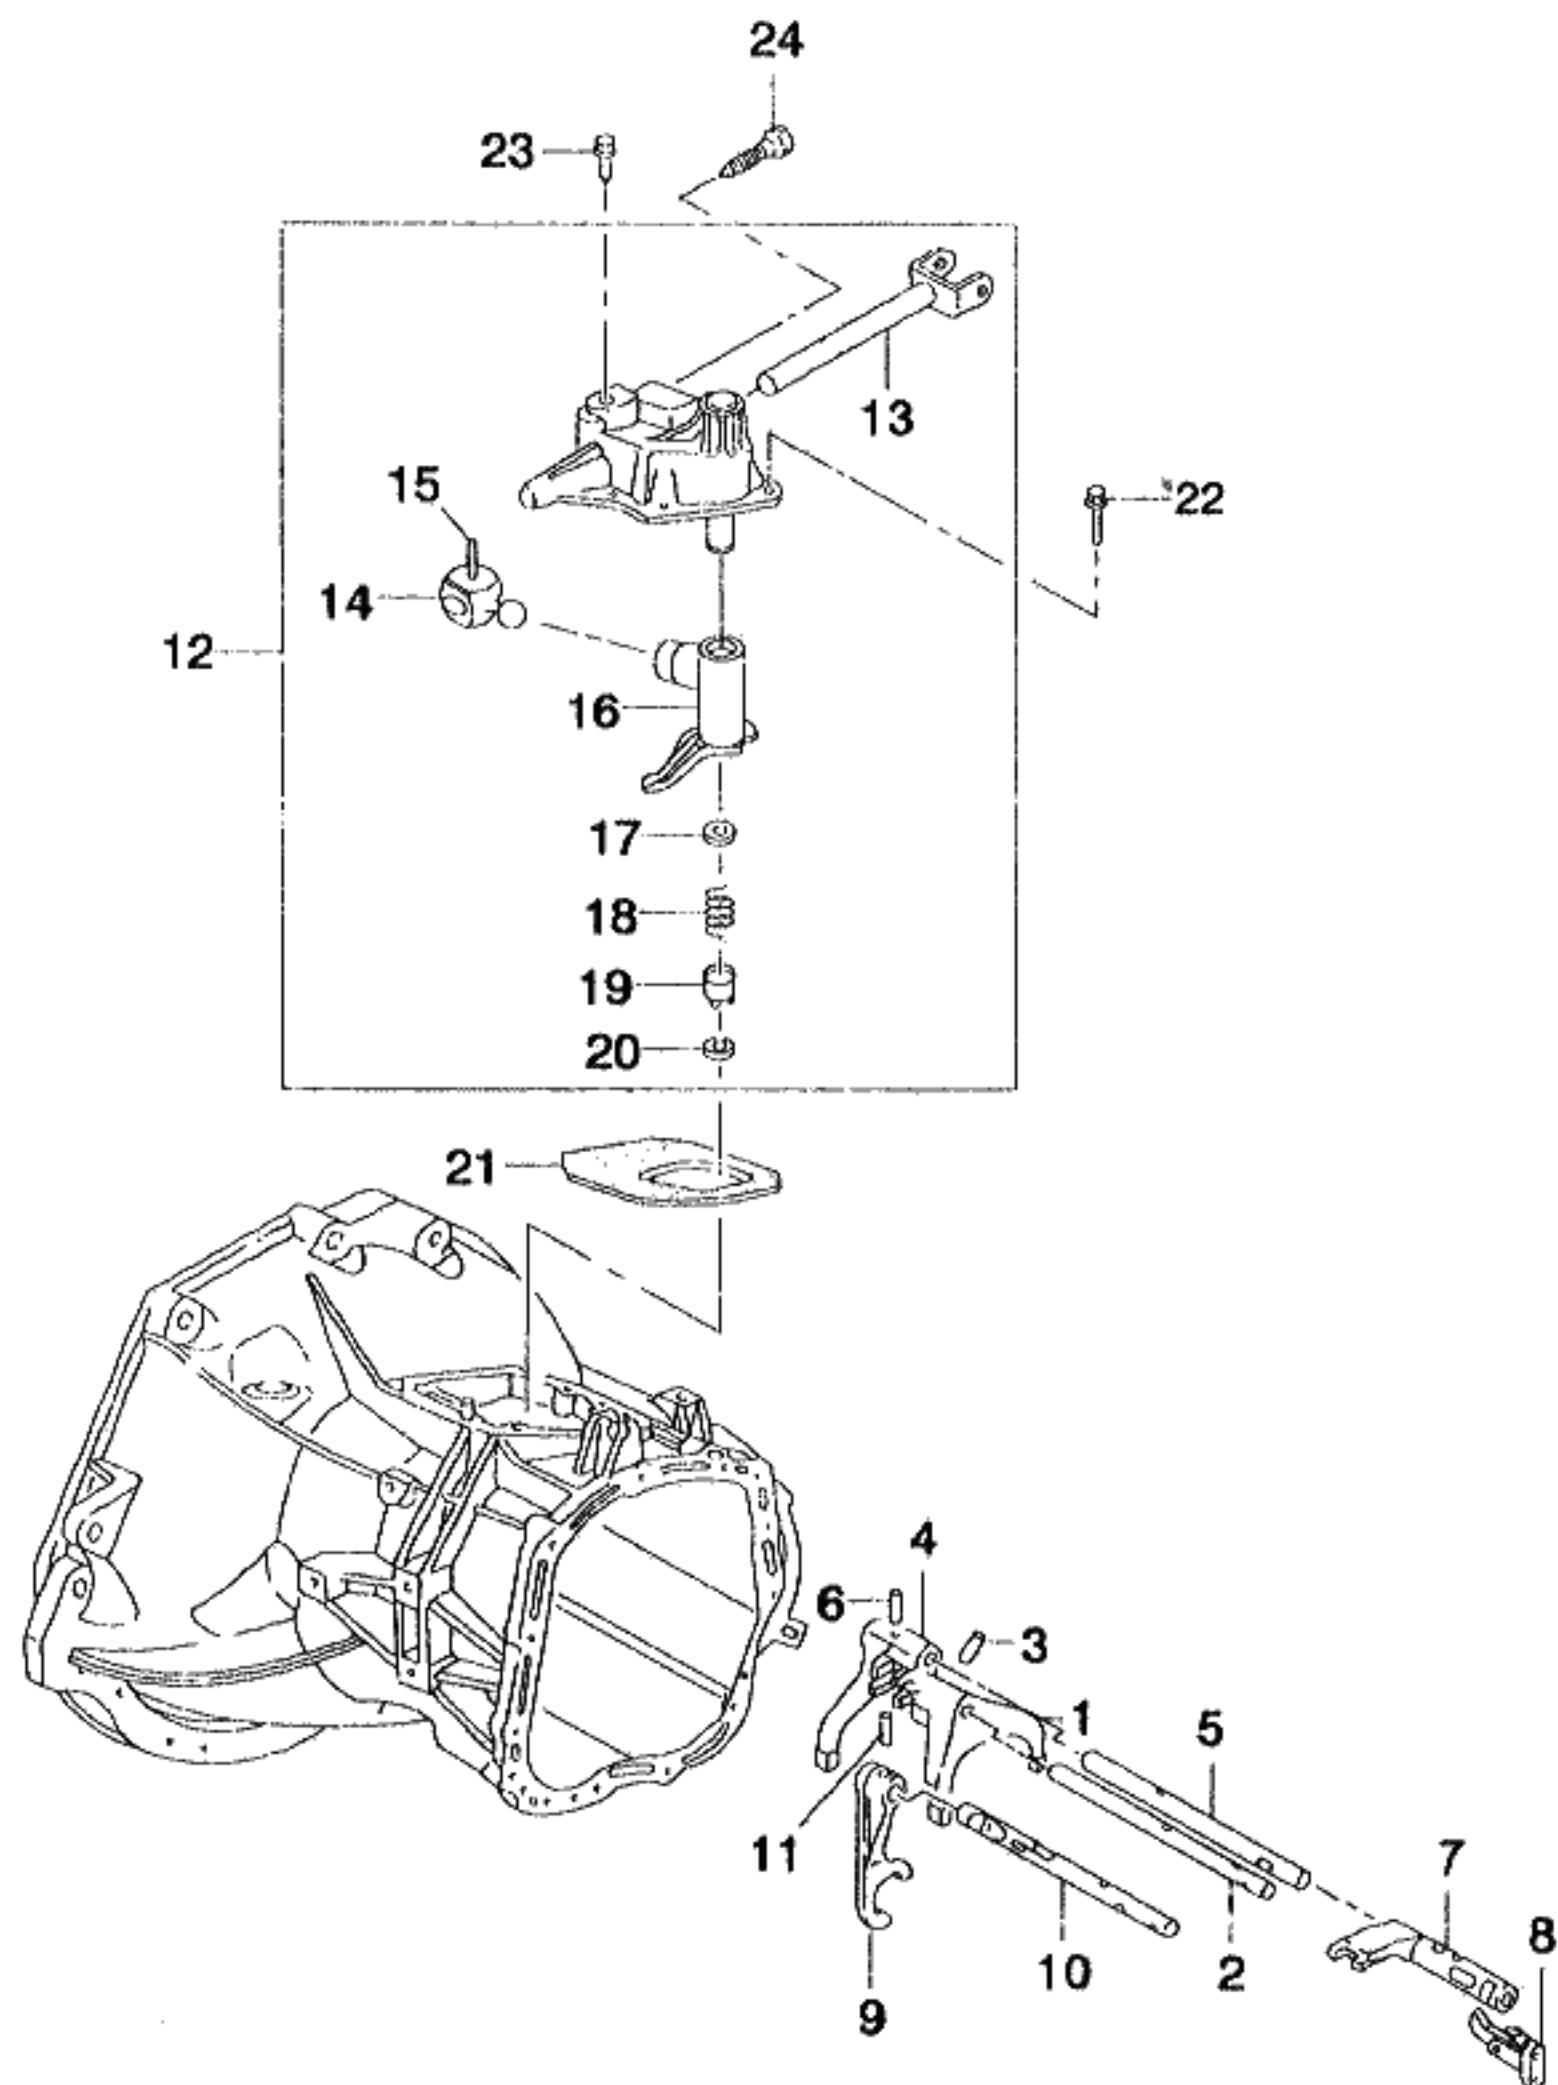


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	90223591	M	S	S		1					
	[20]	(E)RING-RETAINING				(F)ANNEAU-DE RETENTION					
		(D)RING,HALTER				(S)ANILLO-RETENEDOR					
	90223590	M	S	S		1					
	[21]	(E)GASKET-GEAR SHIFT COVER				(F)JOINT					
		(D)DICHTUNG				(S)JUNTA					
	96179248	M	S	S		1					
	[22]	(E)BOLT-HEXAGON				(F)VIS					
		(D)SCHRAUBE				(S)TORNILLO					
	09100-07003	M	S	S		4					
	[23]	(E)PLUG-GEAR SHIFT COVER				(F)BOUCHON					
		(D)STÖPSEL				(S)TAPON					
	96180917	M	S	S		1					
	[24]	(E)PLUG-OIL FILLER				(F)BOUCHON					
		(D)STÖPSEL,ÖL ZUFUHR				(S)TAPON-LLENAR ACEITE					
	90086885	M	S	S		1					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

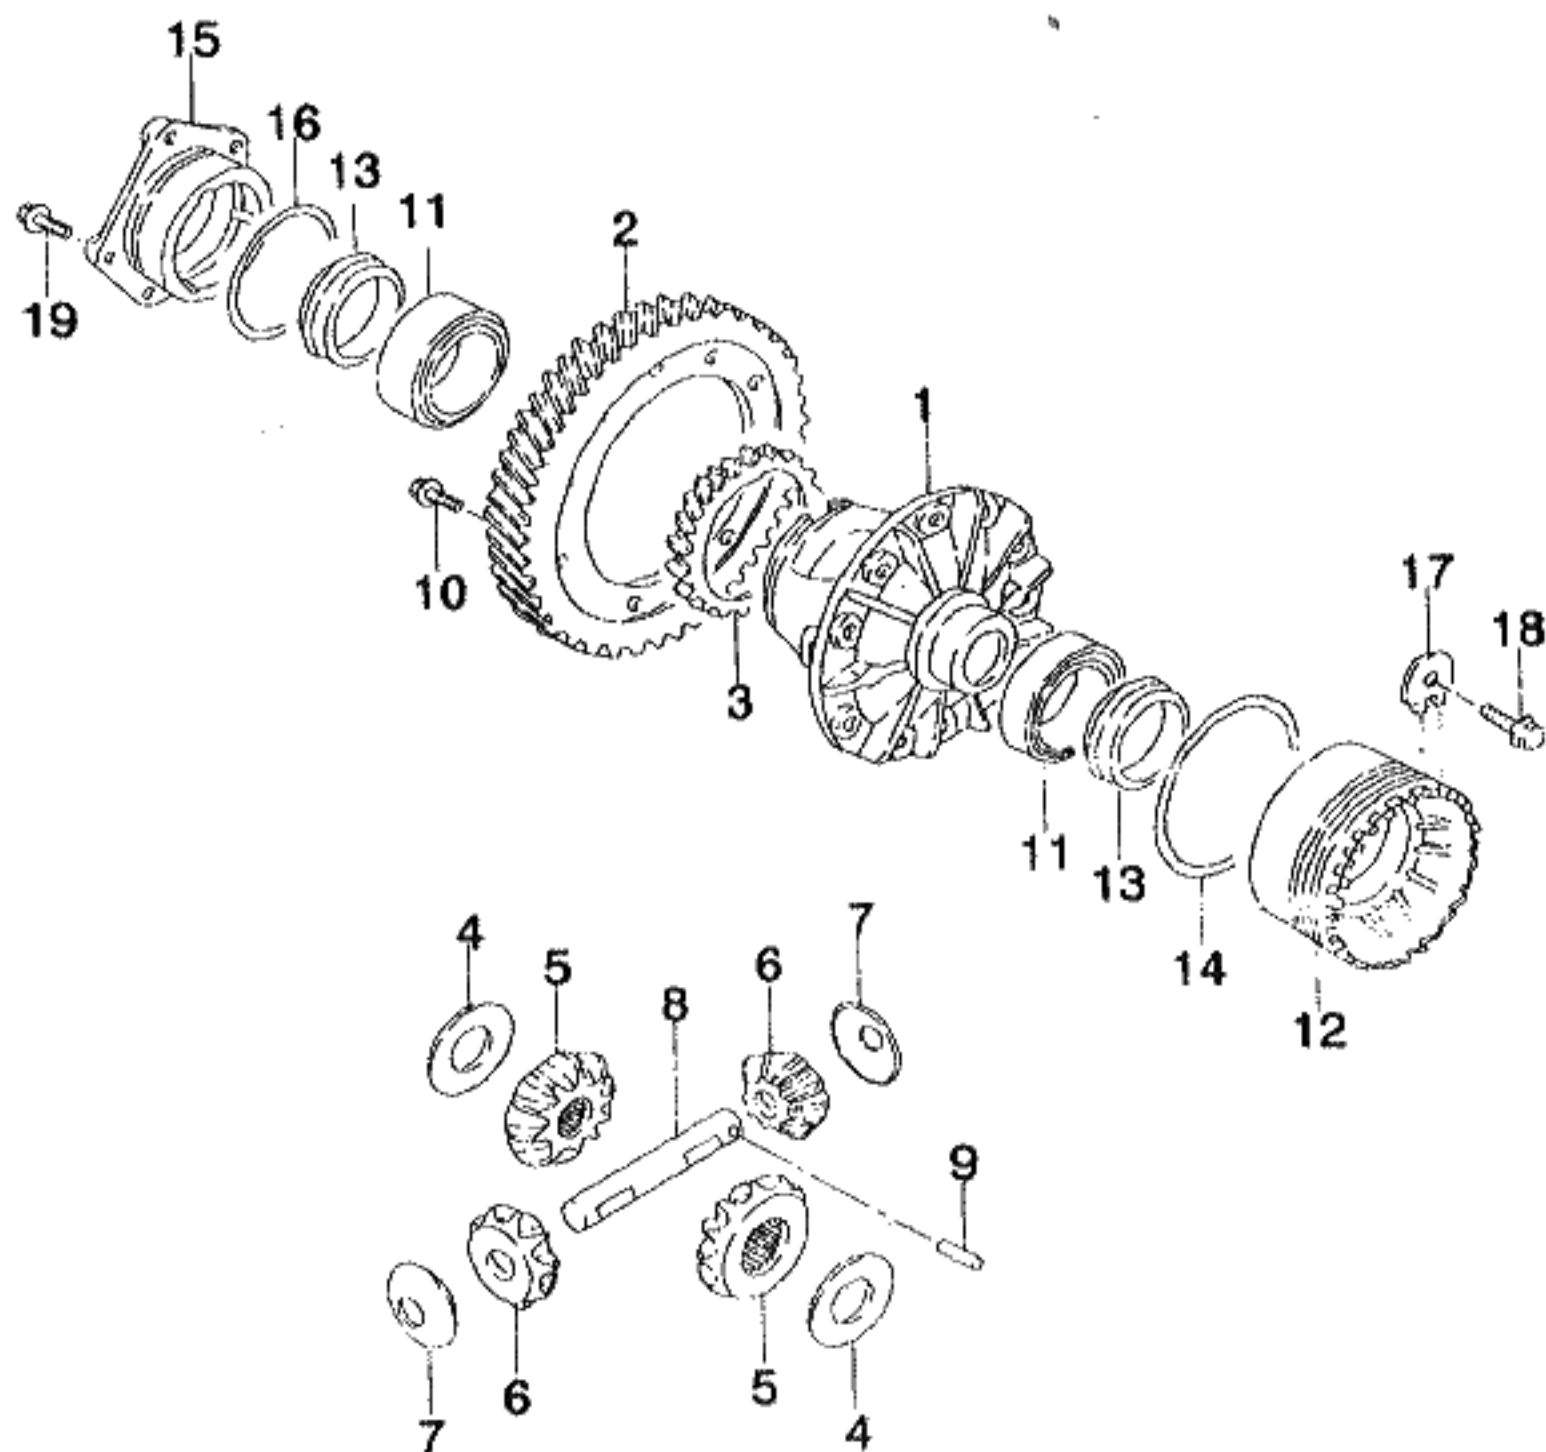

KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	[01]	(E)HOUSING-DIFFERENTIAL GEAR (D)GEHÄUSE				(F)LOGEMENT (S)CARCASA						
	96169394	M	S	S		1						
	[02]	(E)GEAR-HELICAL DIFFERENTIAL (D)AUSGLEICHSGETRIEBE				(F)ENGRENAGE-HELICOIDAL (S)ENGRANAJE						
	96242699	M	S	.		1						
	96225538									NOT APPLIED		
	96251719	M	O	S	&L88	1						
	[03]	(E)GEAR-DRIVEN WORM (D)GETRIEBE				(F)ENGRENAGE (S)ENGRANAJE						
	90125064	M	S	S		1						
	[04]	(E)WASHER-SIDE GEAR THRUST (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA						
	14040531	M	S	S		2						
	[05]	(E)GEAR-AXLE SHAFT BEVEL (D)GETRIEBE,ABSCHRÄGUNG				(F)ENGRENAGE (S)ENGRANAJE-BISEL						
	96183738	M	S	.		2						
	96251723	M	O	S	&L88	2						
	[06]	(E)GEAR-BEVEL DIFFERENTIAL (D)GETRIEBE				(F)ENGRENAGE (S)ENGRANAJE						
	96183739	M	S	.		2						
	96251722	M	O	S	&L88	2						
	[07]	(E)DISC-BEVEL GEAR (D)SCHEIBE,KEGELRADGETRIEBE				(F)DISQUE-ENGRENAGE BISEAUTE (S)DISCO-ENGRANAJE BISEL						
	00463061	M	S	S		2						
	[08]	(E)SHAFT-DIFFERENTIAL GEAR (D)SPINDEL,AUSGLEICHSGETRIEB				(F)ARBRE (S)EJE-ENGRANAJE DIFERENCIAL						
	90372053	M	S	S		1						
	[09]	(E)PIN-DIFFERENTIAL SPRING (D)STIFT,AUSGLEICHSGETRIEBE				(F)BROCHE (S)PASADOR						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

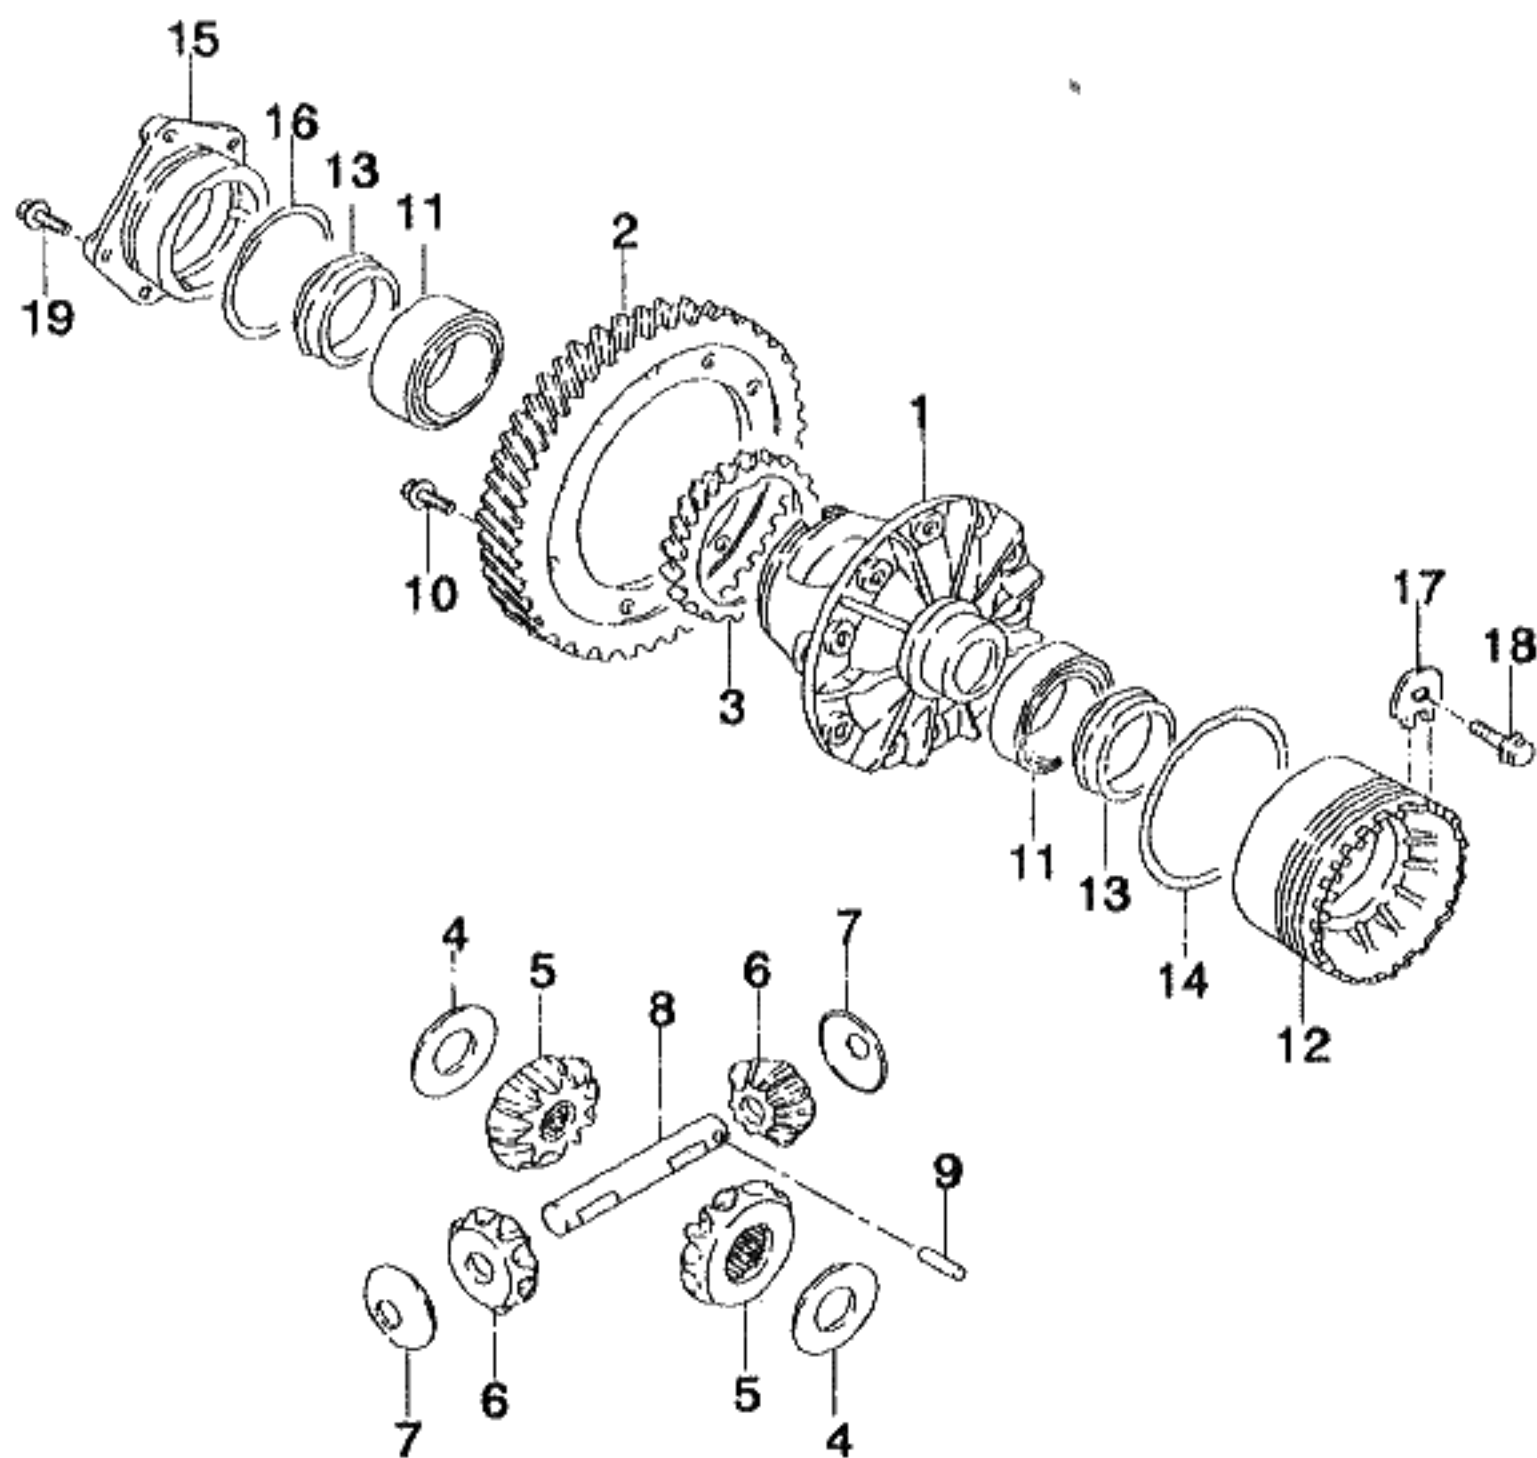

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	96169094	M	S	S		1					
	[10]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	09103-10057	M	S	S		10					
	[11]	(E)BEARING-TAPERED ROLLER (D)ROLLENLAGER,ZUGESPITZT				(F)ROULEMENT-ROULEAU FUSELE (S)COJINETE-RODILLO REDUCIDO					
	96108125	M	S	S		2					
	[12]	(E)RING-DIFFERENTIAL BEARING (D)RING,AUSGLEICH-S-LAGER				(F)ANNEAU (S)ANILLO					
	90121689	M	S	S		1					
	[13]	(E)RING-SHAFT SEAL (D)RING,STAB DICHTUNG				(F)ANNEAU-JOINT D'ARBRE (S)ANILLO-BROCHE DE EJE					
	90182166	M	S	S		1					
	[14]	(E)O RING-DIFFERENTIAL (D)O RING,AUSGLEICHSGETRIEBE				(F)JOINT TORIQUE (S)ANILLO EN O-DIFERENCIAL					
	90111402	M	S	S		1					
	[15]	(E)FLANGE-DIFF GEAR BEARING (D)FLANSCH				(F)FLASQUE (S)PESTAÑA					
	90121695	M	S	S		1					
	[16]	(E)O RING (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	90129521	M	S	S		1					
	[17]	(E)PLATE-LOCKING (D)PLATTE,VERRIEGELUNG				(F)PLAQUE-VERROUILLAGE (S)PLACA-CIERRE					
	90079853	M	S	S		1					
	[18]	(E)SCREW (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	09116-06029	M	S	S		1					
	[19]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)VIS (S)TORNILLO					

LEVEL


T/A(TRANSAXLE)

S X = 2.0 SOHC

M = MANUAL T/A


CDX = 2.0 DOHC

A = AUTOMATIC T/A
= COMMON

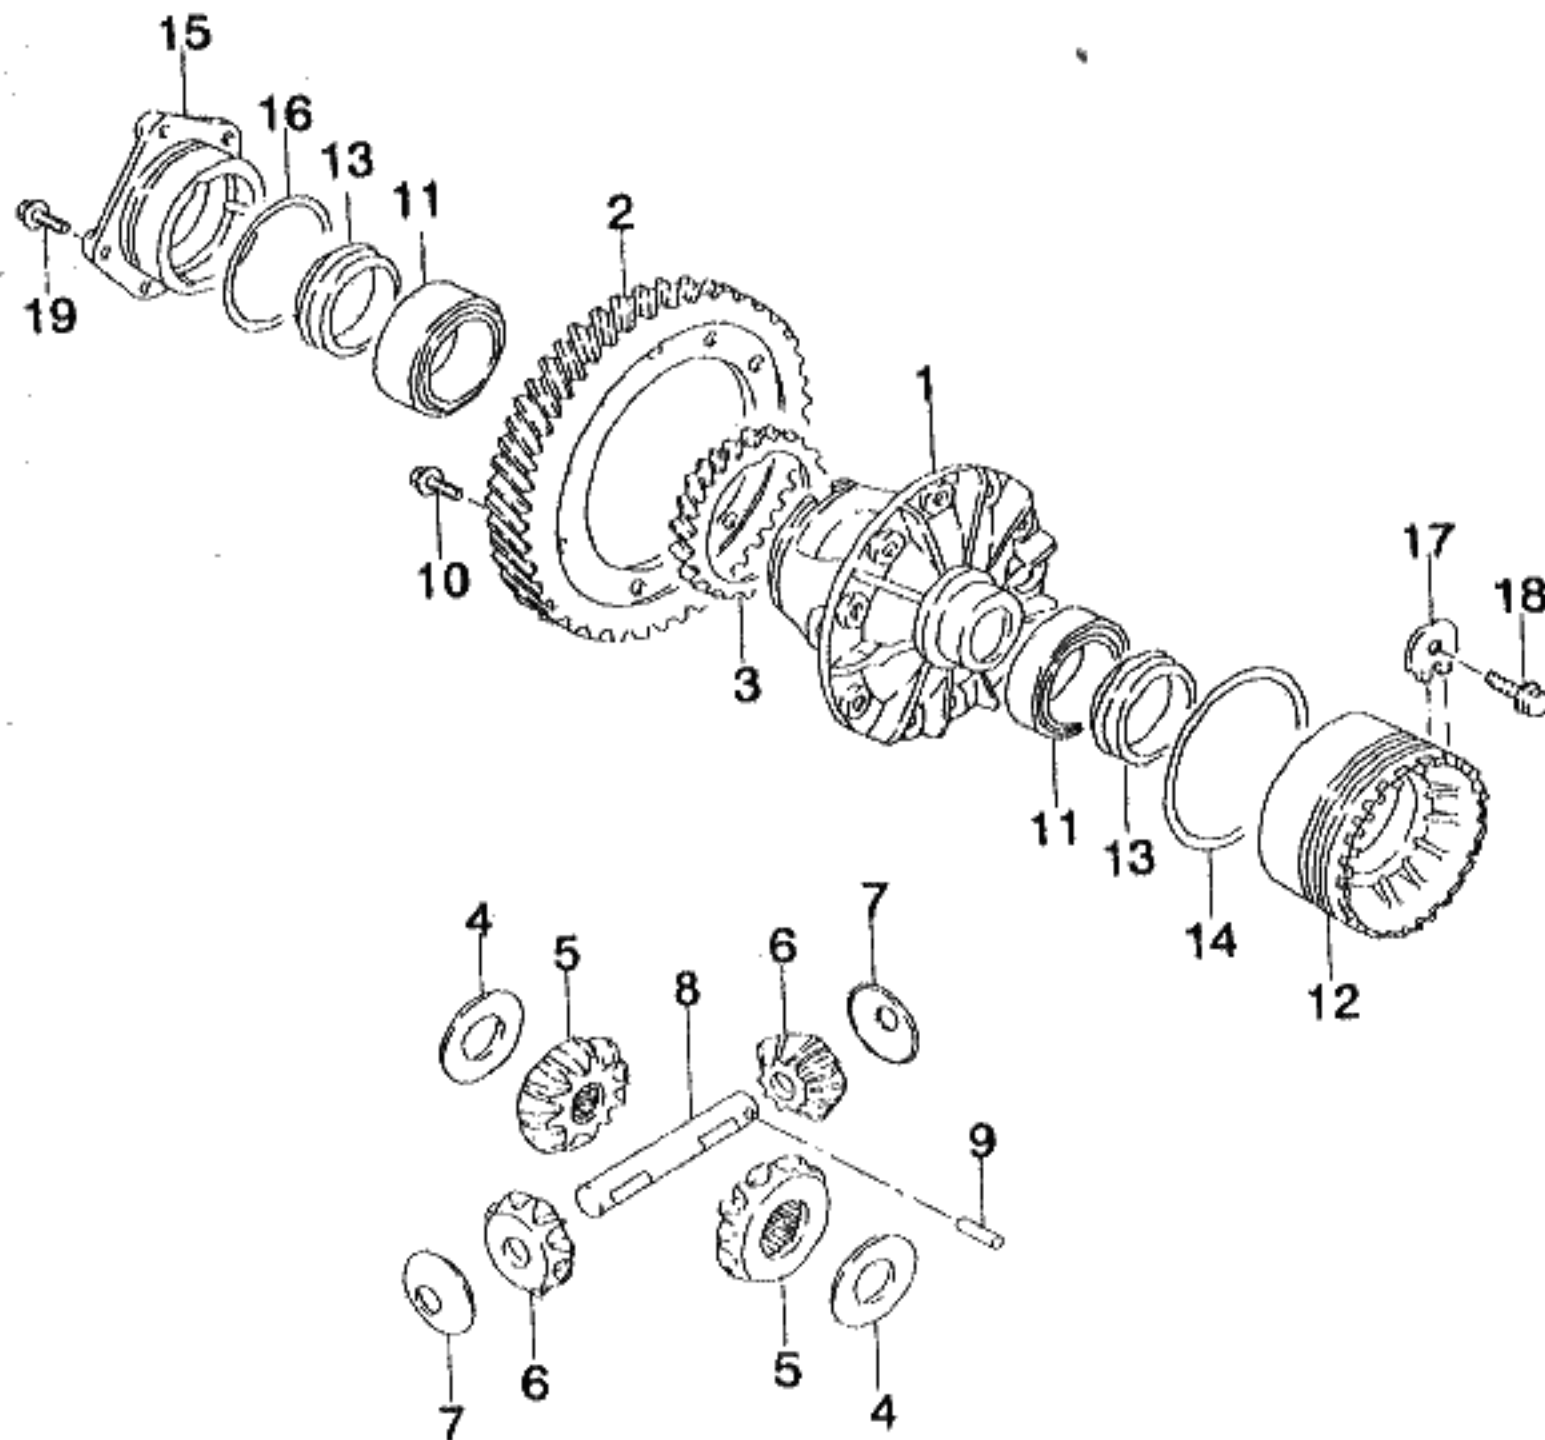


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	09103-08026	M	S	S			5				

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A , = COMMON

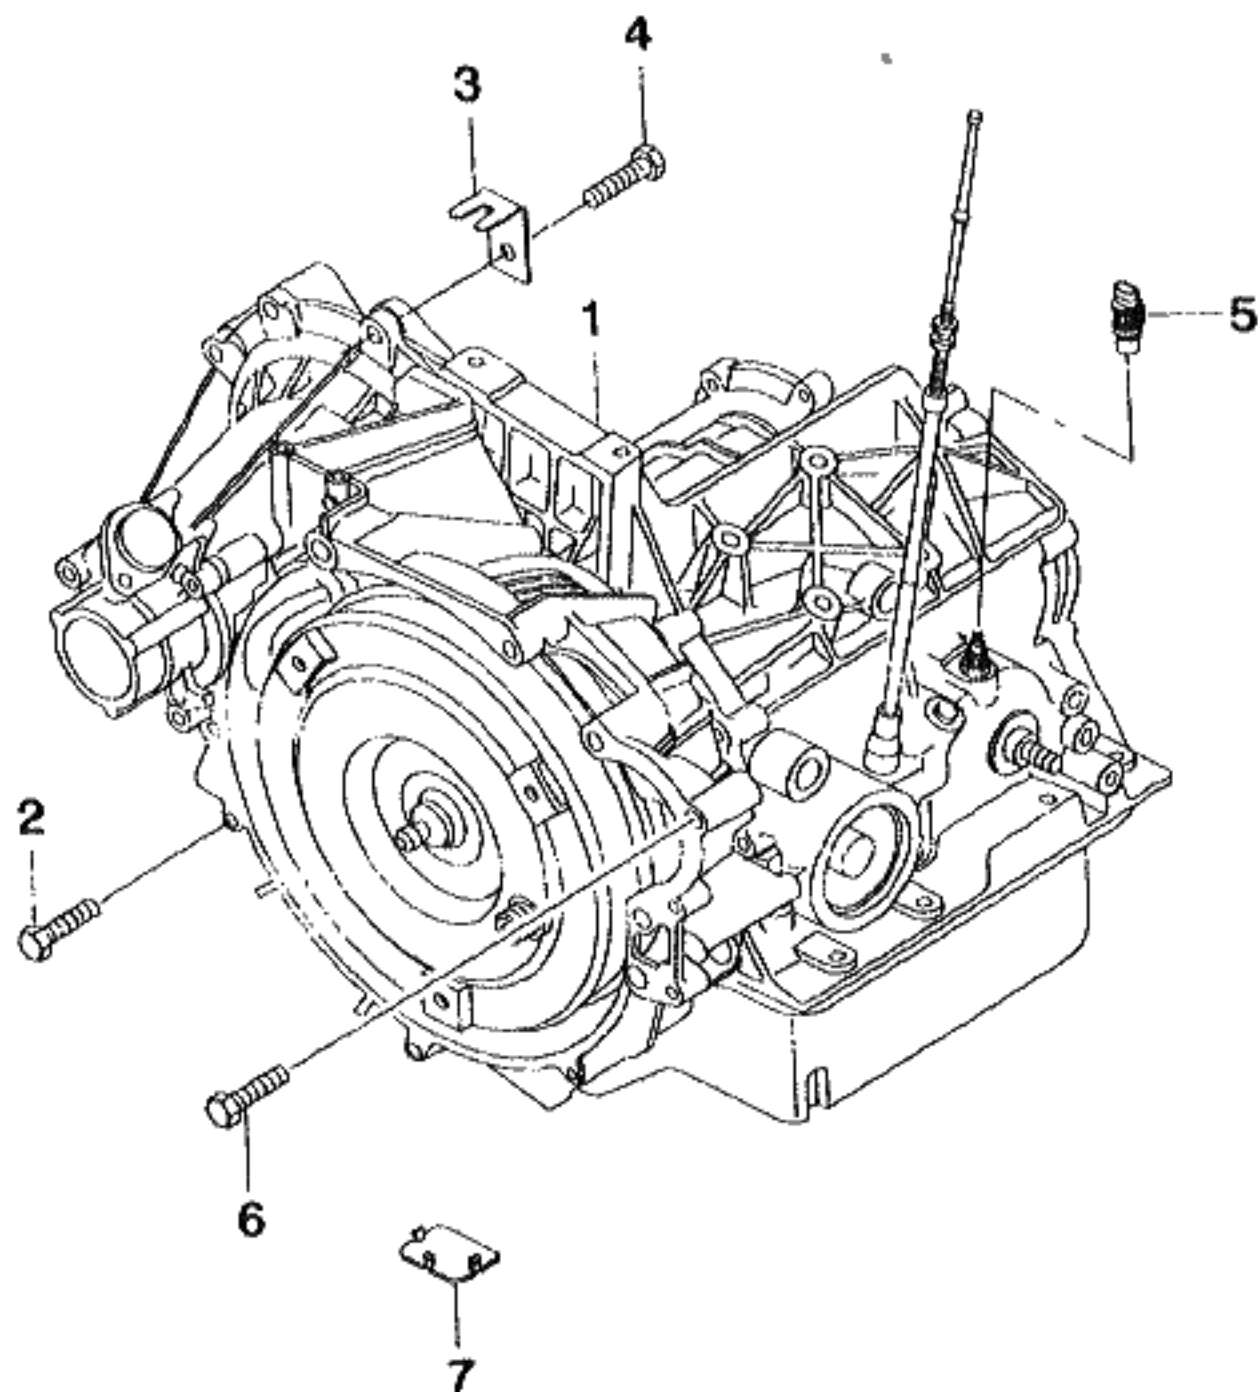


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)TRANSAXLE A-AUTOMATIC (D)ANTRIEB,AUTOMATISCH				(F)TRANSMISSION-AUTOMATIQUE (S)EJE TRANSVERSAL					
	96214803	A	O	.	&GS6&L76		1			ZF	VB
	96233429	A	O	.	&GS6&L76		1			DPI	VB
	96182741	A	O	O	&GS7&L88		1			ZF	VC
	96233430	A	O	O	&GS7&L88		1			DPI	VC
	[02]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09100-10001	A	O	O			3				
	[03]	(E)BRACKET-O2 SENSOR (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96249884	A	O	O			1				
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09100-12012	A	O	O			1				
	[05]	(E)SENSOR A-DISTANCE (D)SENSOR,ENTFERNUNG				(F)DETECTEUR-DISTANCE (S)SENSOR-DISTANCIA					
	96190708	A	O	O			1				T6
	[06]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09100-12002	A	O	O			4				
	[07]	(E)GROMMET (D)ÖSE				(F)VIROLE (S)AISLANTE					
	96232537	A	O	O			1				

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC	M = MANUAL T/A
CDX = 2.0 DOHC	A = AUTOMATIC T/A
	. = COMMON

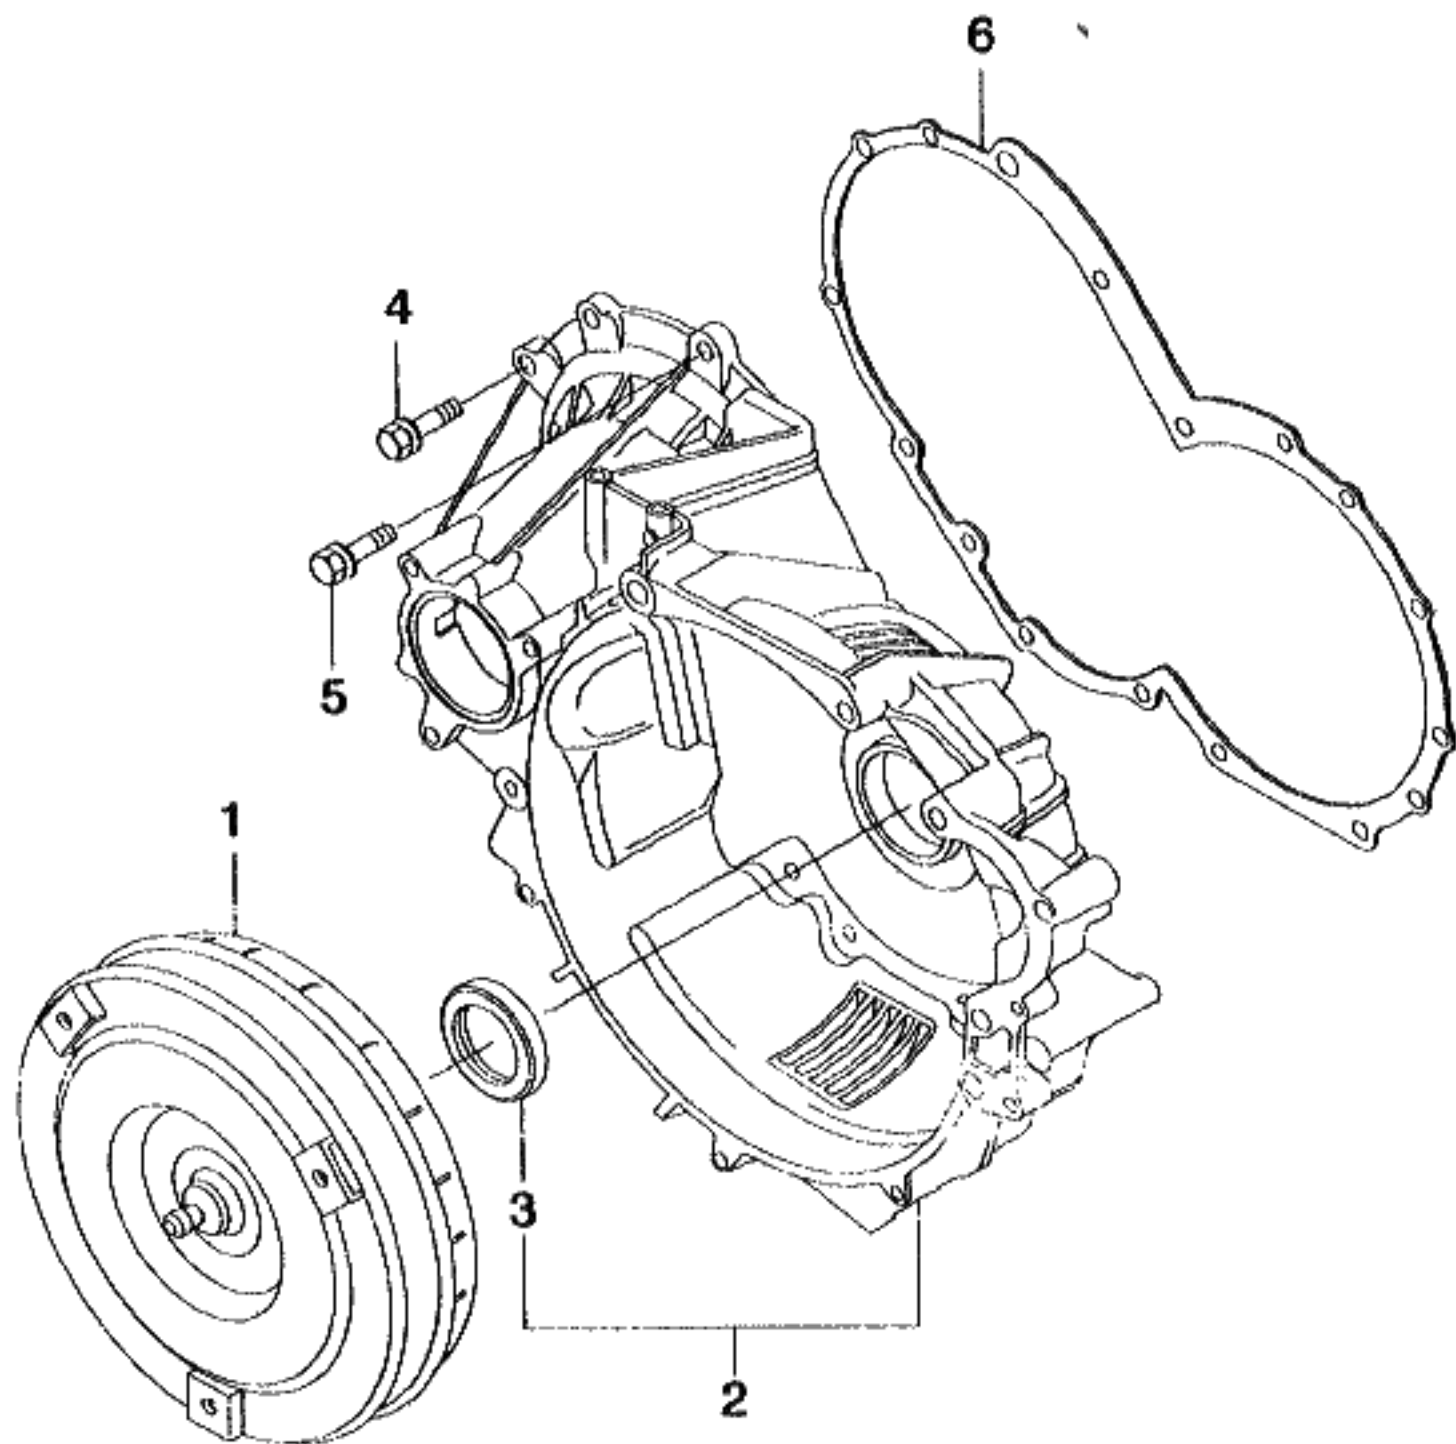

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)CONVERTER A (D)DREHMOMENT					(F)CONVERTISSEUR (S)CONVERTIDOR				
	0501005333	A	O	.			1				
	0501005404	A	O	O	&L88		1				
	[02]	(E)BELL-CONVERTER (D)KASTEN,ANTRIEB					(F)CARTER-TRANSMISSION (S)CAJA-EJE TRANSVERSAL				
	1036322092									NOT APPLIED	
	1036122031	A	O	O			1				
	[03]	(E)SEAL-SHAFT (D)DICHTUNG					(F)JOINT (S)SELLO				
	0734310298	A	O	O			1			40x52x7	
	[04]	(E)SCREW (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	0636024006	A	O	O			1				
	[05]	(E)SCREW-HEXAGON (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	0636024510	A	O	O			1				
	[06]	(E)GASKET (D)DICHTUNG					(F)JOINT (S)JUNTA				
	0750112022	A	O	O			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

3521 TRANSAXLE HOUSING

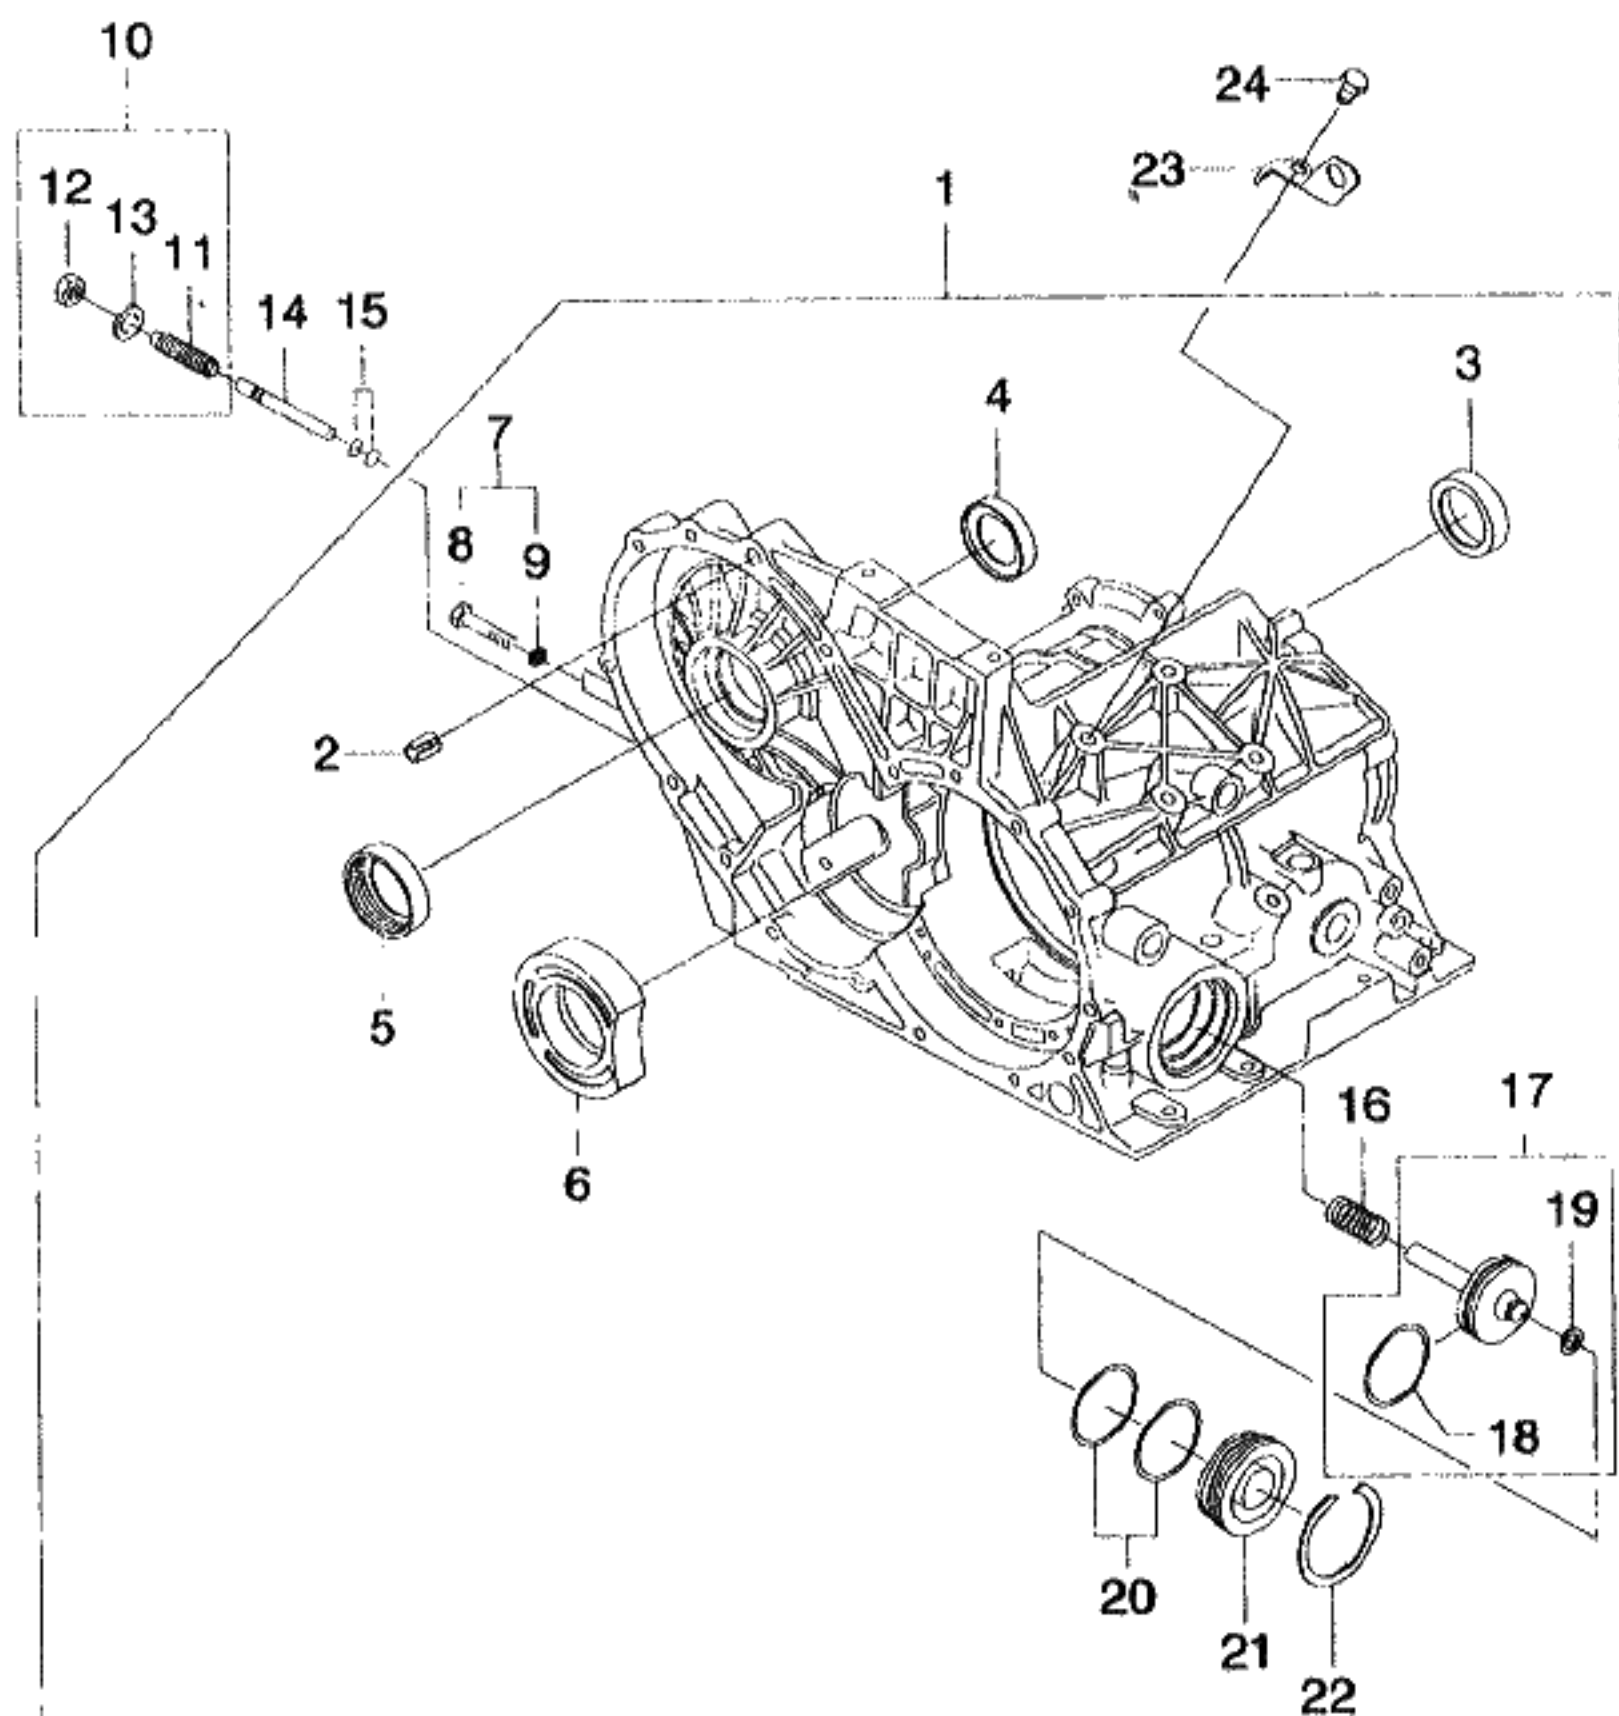

KEY NO.				PART NAME							
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)HOUSING A-TRANSAXLE (D)GEHÄUSE,ANTRIEB				(F)LOGEMENT-TRANSMISSION (S)CARCASA-EJE					
	1036101062	A	O			1					
	1036101848									NOT APPLIED	
	1036101063	A	O	O	&L88	1					
	[02]	(E)BUSH (D)LAGERFUTTER				(F)MANCHON (S)BUJE DE BOQUILLA					
	0730062725	A	O	O		1				T=16.30	
	[03]	(E)RING-OUTER (D)RING				(F)ANNEAU (S)ANILLO					
	0735295027	A	O	O		1				63.0x13.5	
	[04]	(E)SEAL-SHAFT (D)DICHTUNG				(F)JOINT (S)SELLO					
	0734319343	A	O	O		1				40x58x10	
	[05]	(E)RING-OUTER (D)RING				(F)ANNEAU (S)ANILLO					
	0735295027	A	O	O		1				63.0x13.5	
	[06]	(E)BEARING-OUTER RING (D)KUGELLAGER				(F)ROULEMENT (S)CONJINETE					
	1036309319	A	O	O		1					
	[07]	(E)SCREW-CAP (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0768042286	A	O	O		2				M8	
	[08]	(E)SCREW-CAP (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0736101106	A	O	O		1				M8	
	[09]	(E)RING-USIT (D)RING				(F)ANNEAU (S)ANILLO					
	0630050030	A	O	O		1				U 8.7x14x1	

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A


CDX = 2.0 DOHC

A = AUTOMATIC T/A


. = COMMON

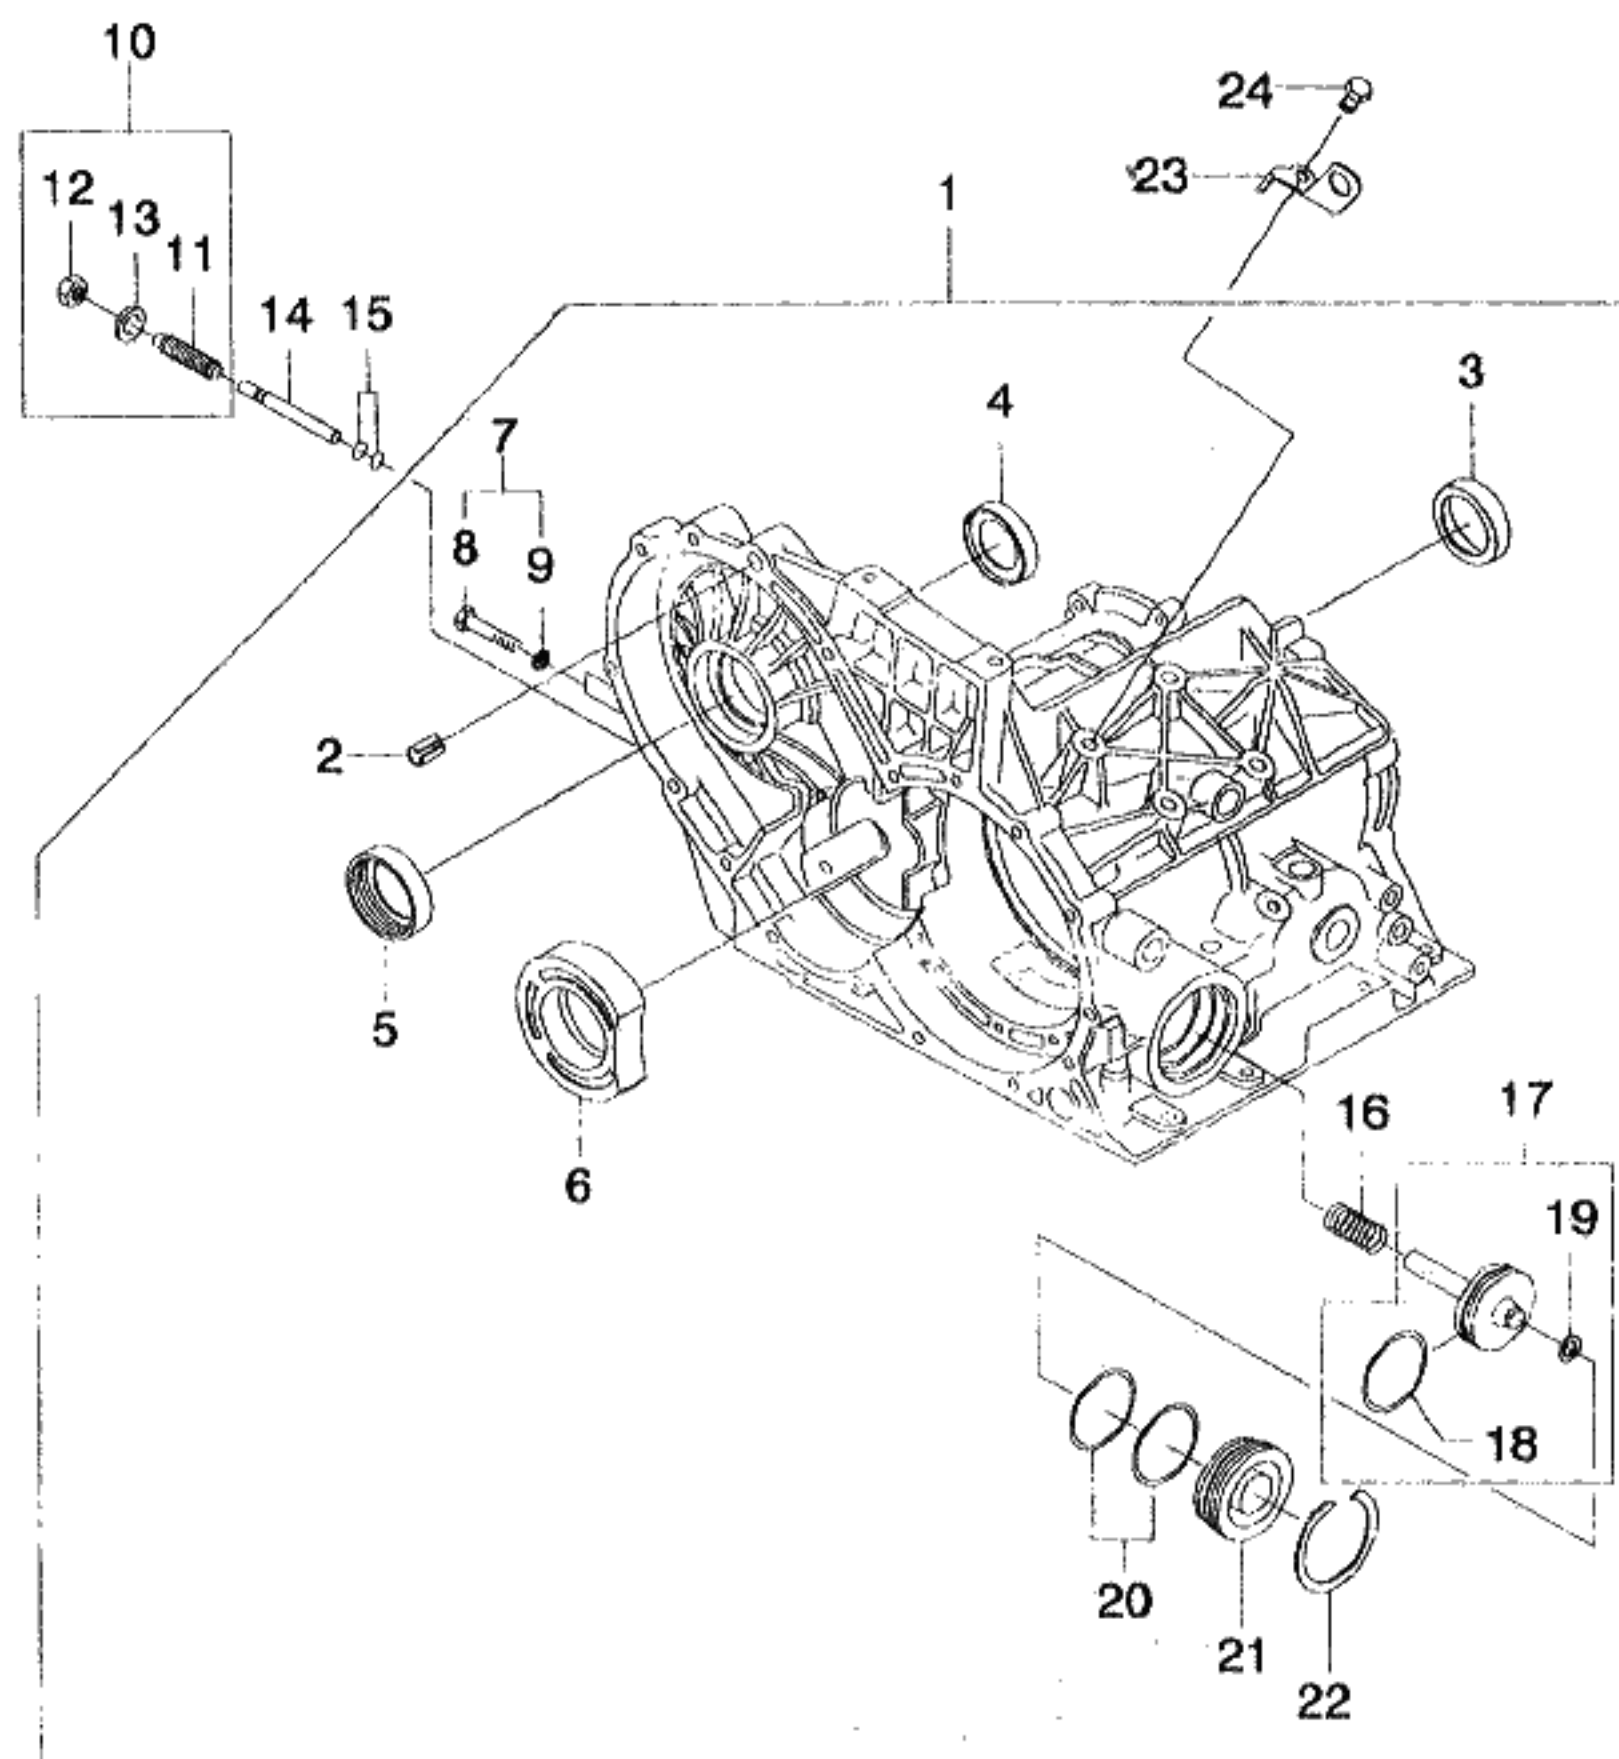

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 0768135200	(E)BOLT-W/NUT (D)SCHRAUBE A O O				(F)BOULON (S)PERNO 1			M14x1,5		
	[11] 1050331025	(E)SCREW-ADJUSTER (D)SCHRAUBE A O O				(F)VIS (S)TORNILLO 1			M14x1,5		
	[12] 0737006092	(E)NUT (D)MUTTER A O O				(F)ECROU (S)TUERCA 1			M14x1,5		
	[13] 0630302047	(E)WASHER-SPRING (D)DICHTUNGSRING A O O				(F)RONDELLE (S)ARANDELA 1			B14		
	[14] 1036331101	(E)PIN (D)STIFT A O O				(F)BROCHE (S)PASADOR 1					
	[15] 0734313072	(E)O RING (D)O RING A O O				(F)JOINT TORIQUE (S)ANILLO EN O 2					
	[16] 0732042205 0732042572	(E)SPRING-COMPRESSION (D)FEDERUNG, VERDICHUNG A O A O O &L88				(F)RESSORT-COMPRESSION (S)RESORTE-COMPRESION 1 1					
	[17] 1036231014	(E)PISTON (D)KOLBEN A O O				(F)PISTON (S)PISTON 1					
	[18] 0734313023	(E)O RING (D)O RING A O O				(F)JOINT TORIQUE (S)ANILLO EN O 1					
	[19]	(E)WASHER-LOCKING (D)DICHTUNGSRING,KONTER				(F)RONDELLE-VERROUILLAGE (S)ARANDELA-DE CIERRE					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

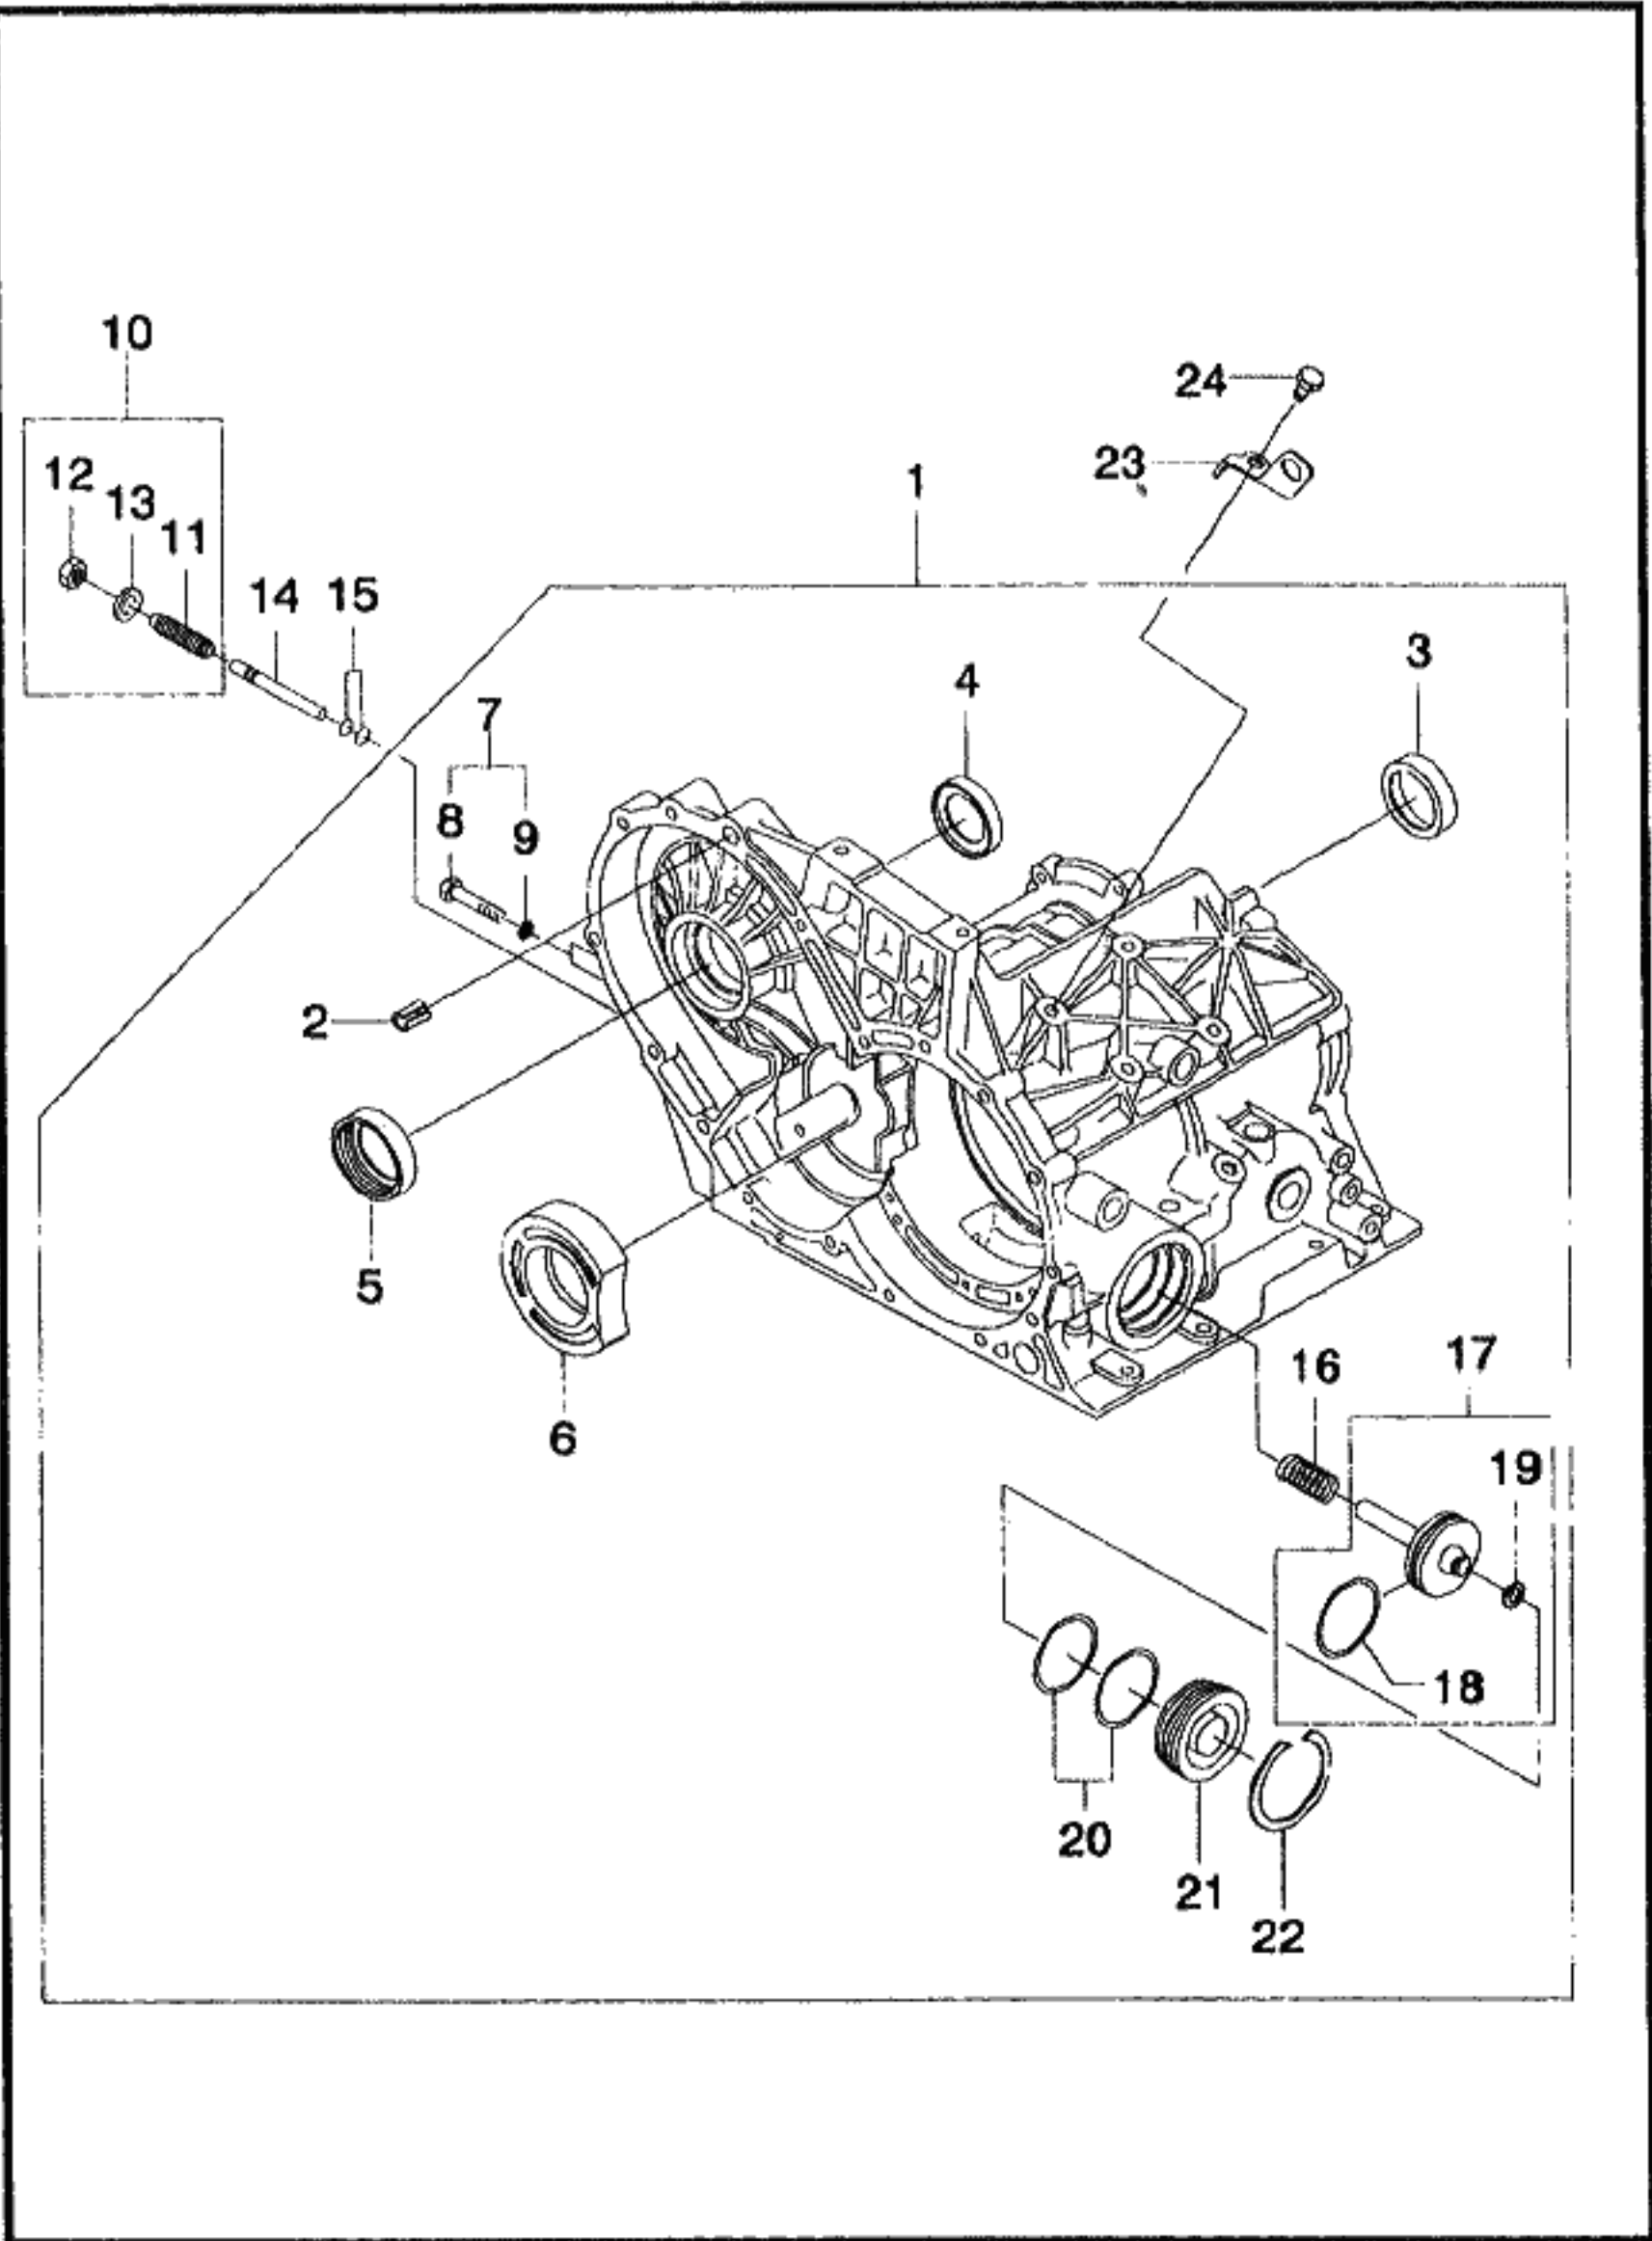


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	0630531205	A	O	O			1				
	[20]	(E)O RING					(F)JOINT TORIQUE				
		(D)O RING					(S)ANILLO EN O				
	1043317001	A	O	O			2				
	[21]	(E)COVER					(F)CARTER				
		(D)DECKEL					(S)CUBIERTA				
	1036331067	A	O	O			1				
	[22]	(E)RING-SNAP					(F)ANNEAU-PRESSION D'ARBRE				
		(D)RING, STAB DRUCK					(S)ANILLO-DE PRESION				
	0730513231	A	O	O			1				
	[23]	(E)SHACKLE					(F)BRIDES				
		(D)HALTER					(S)GRILLETE				
	1036301187	A	O	O			1				
	[24]	(E)SCREW					(F)VIS				
		(D)SCHRAUBE					(S)TORNILLO				
	0768022333	A	O	O			1			M8x16	
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC						M = MANUAL T/A					
CDX = 2.0 DOHC						A = AUTOMATIC T/A					
						. = COMMON					

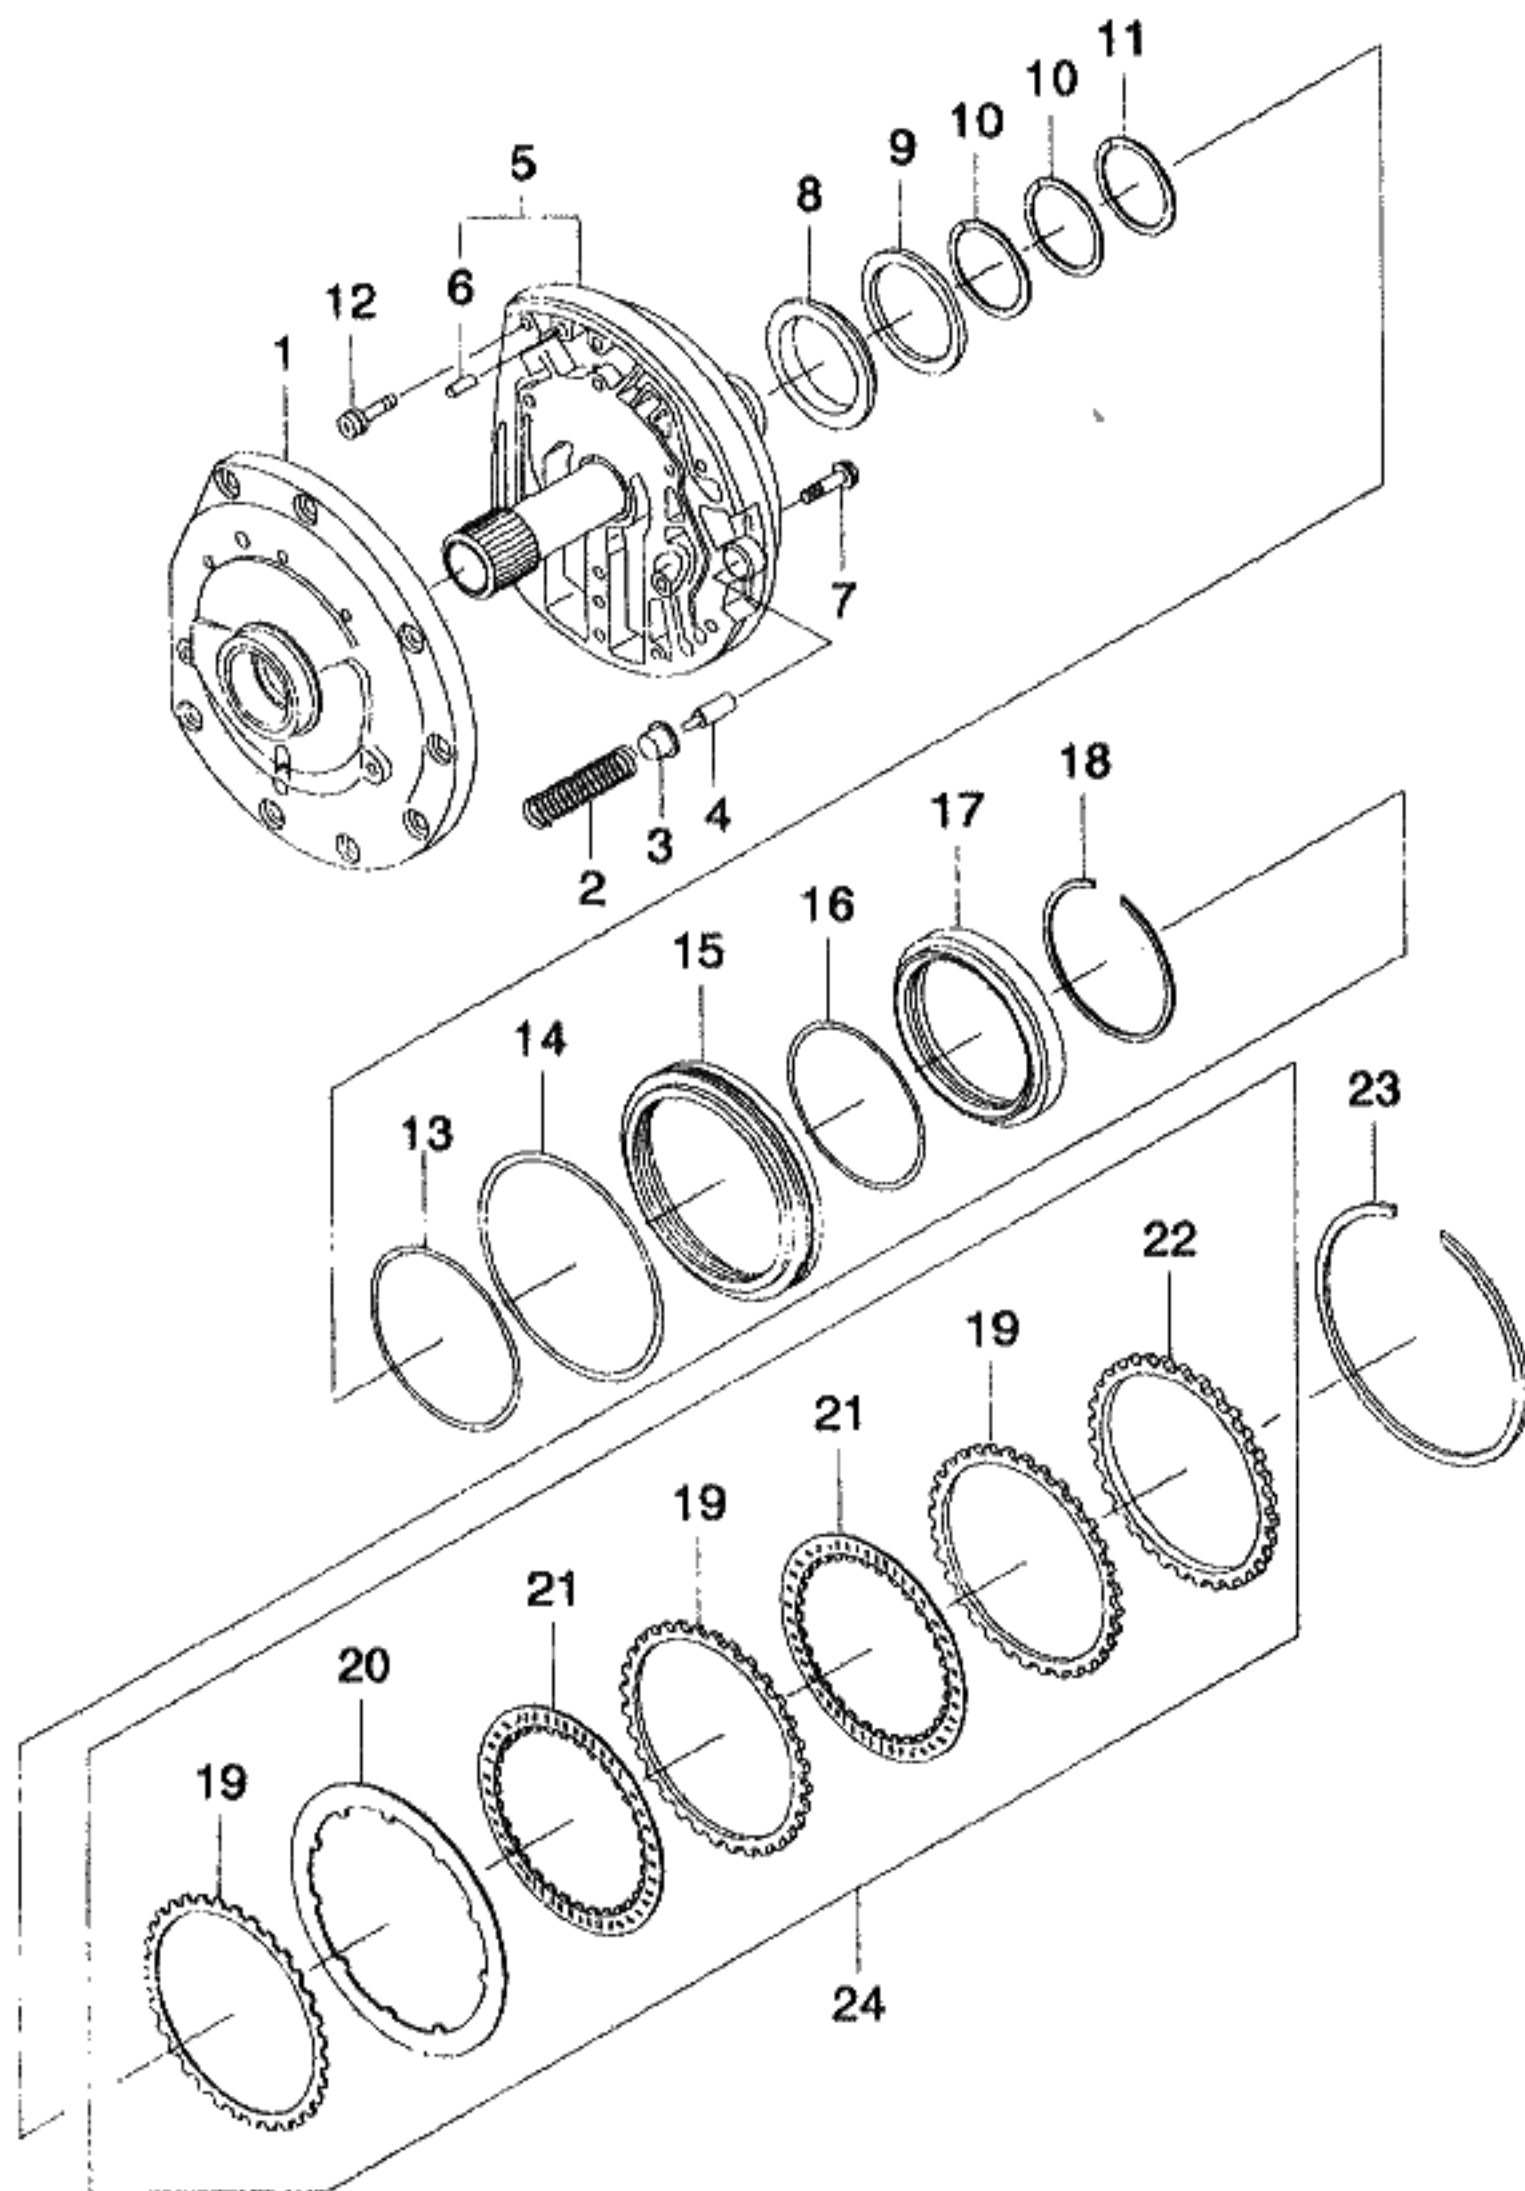


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)HOUSING A-PUMP (D)GEHÄUSE				(F)LOGEMENT (S)CARCASA					
	1036219016	A	O	O		1					
	[02]	(E)SPRING-COMPRESSOR (D)FEDERUNG				(F)RESSORT (S)RESORTE					
	0732041815	A	O	O		1					
	[03]	(E)CAP (D)DECKEL				(F)CHAPEAU (S)TAPA					
	1036322085	A	O	O		1					
	[04]	(E)VALVE (D)VENTIL				(F)SOUPAPE (S)VALVULA					
	1036322033	A	O	O		1					
	[05]	(E)PLATE-INTERM (D)PLATTE				(F)PLAQUE (S)PLACA					
	1036210012	A	O	O		1					
	[06]	(E)CYLINDRICAL PIN (D)STIFT				(F)BROCHE (S)PASADOR					
	0731201555	A	O	O		2				M6x16	
	[07]	(E)SCREW-CAP (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0768041239	A	O	O		6				M6x20	
	[08]	(E)DISC-ANGLE (D)SCHEIBE				(F)DISQUE (S)DISCO					
	0501314642	A	O	O		1					
	[09]	(E)WASHER (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
	0730150581	A	O	O		1				T=3.40	
	0730150580	A	O	O		1				T=3.20	
	0730150579	A	O	O		1				T=3.00	
	0730150578	A	O	O		1				T=2.80	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

3522 OIL PUMP & C CLUTCH

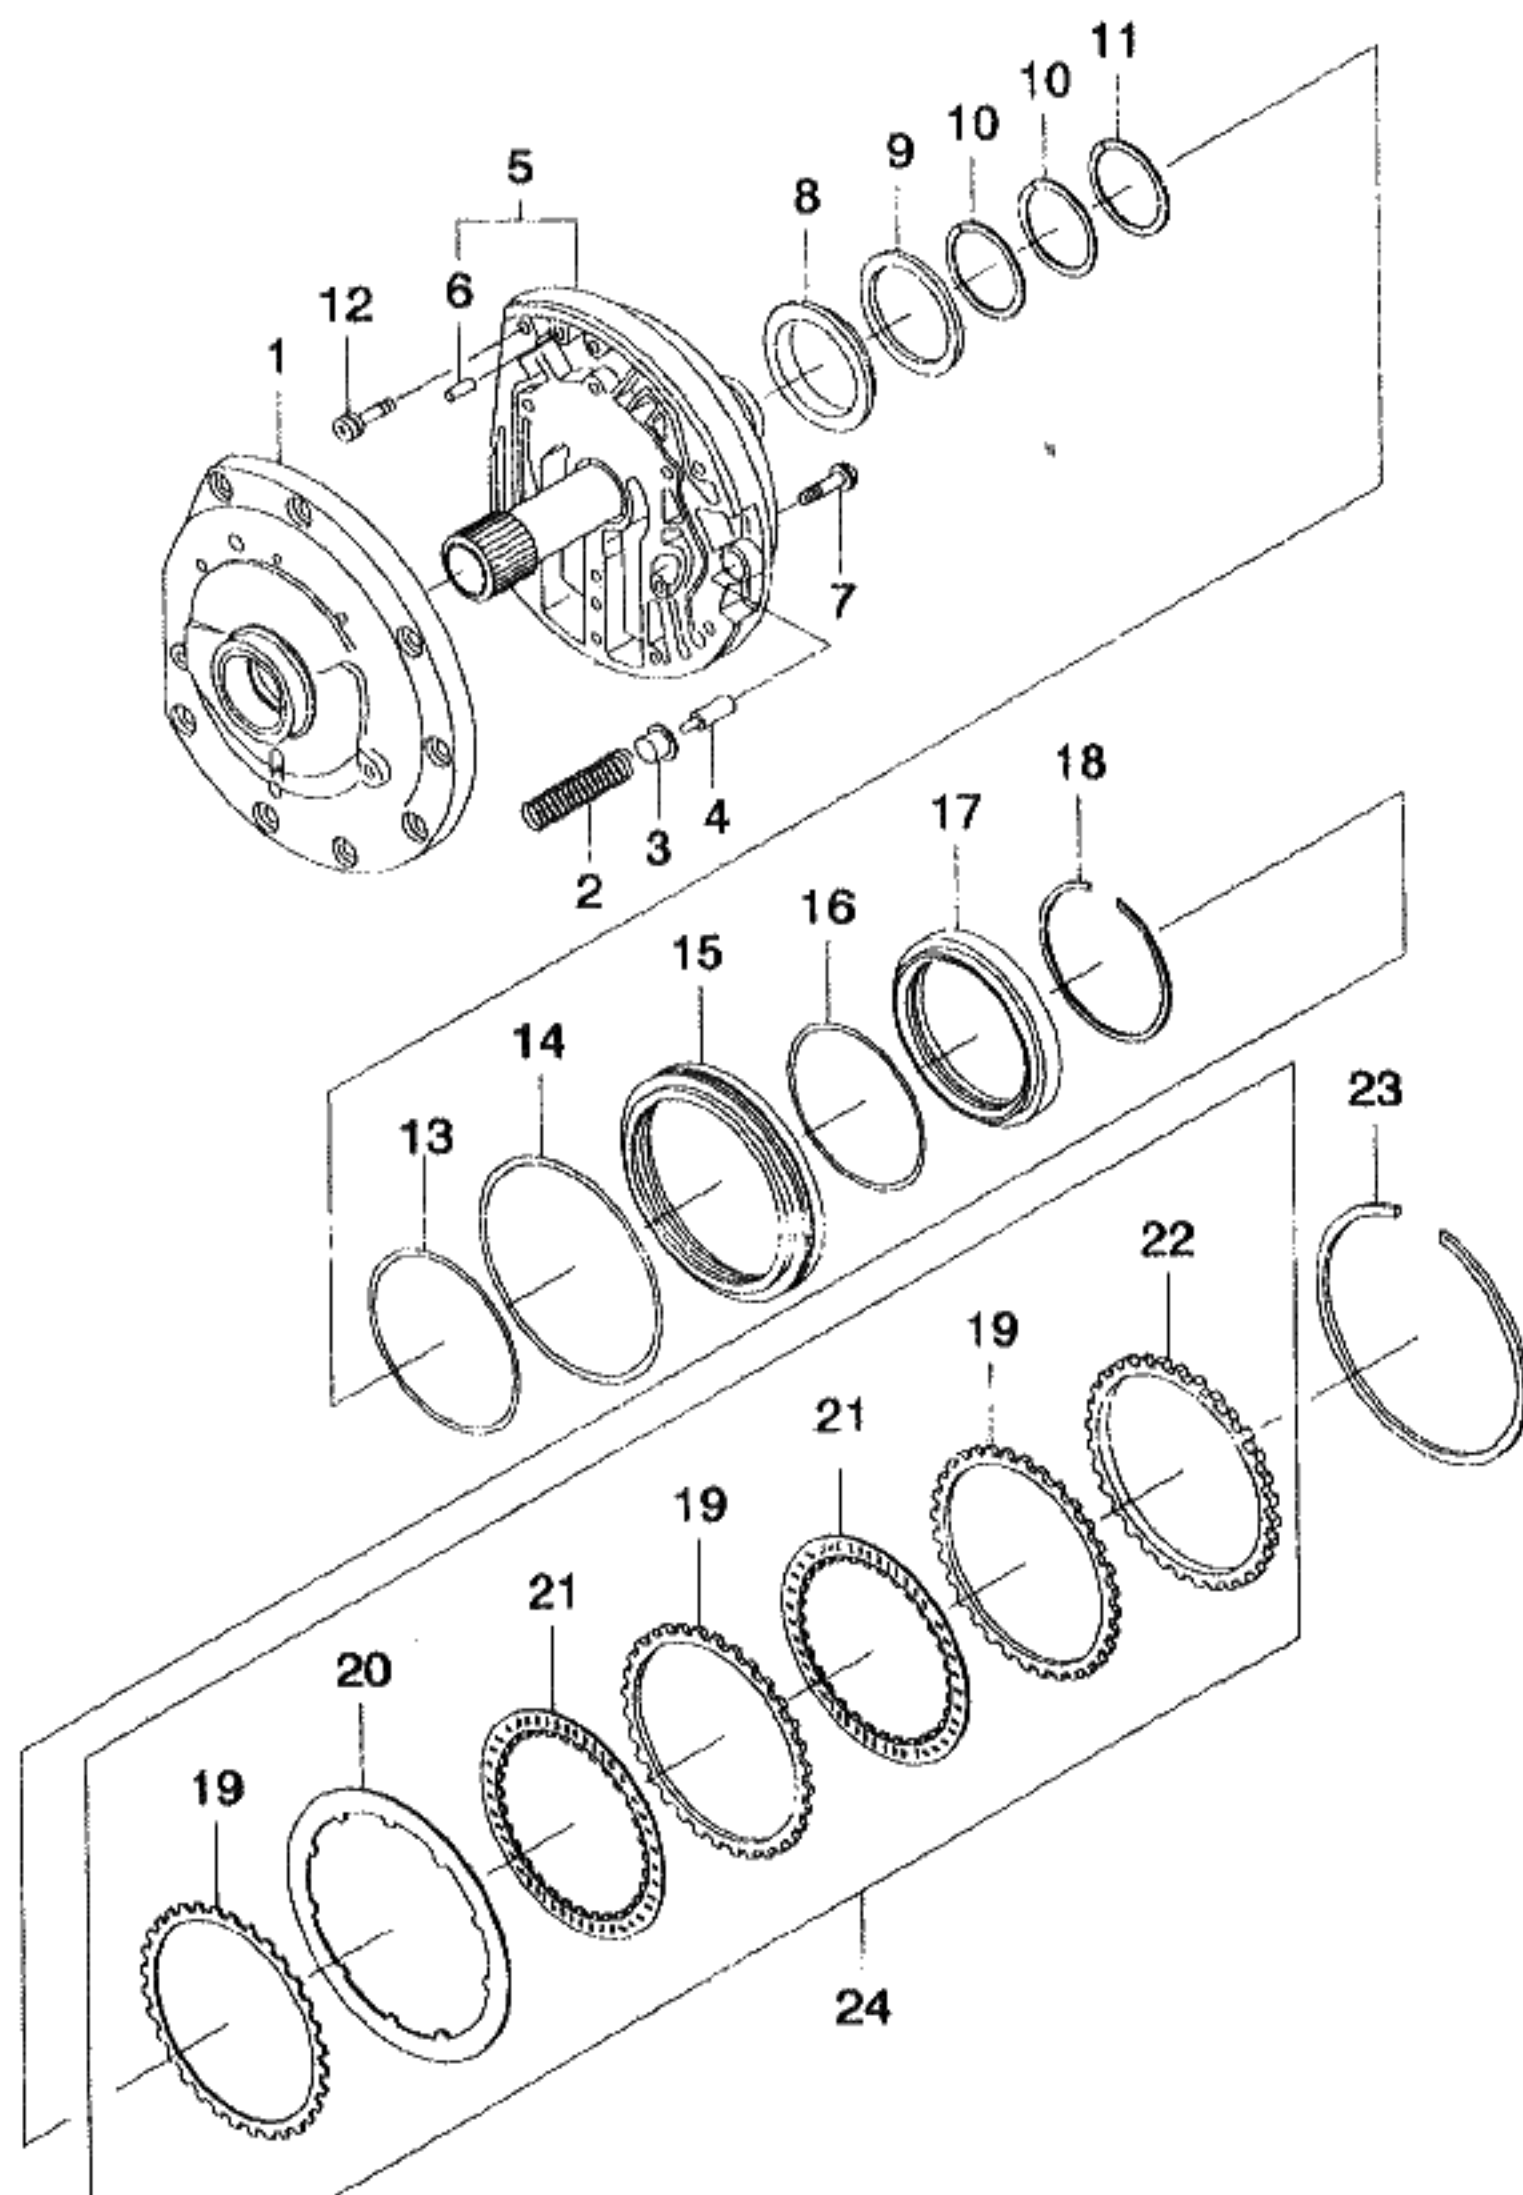

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	0730150577	A	O	O			1			T=2.60		
	0730150576	A	O	O			1			T=2.40		
	0730150575	A	O	O			1			T=2.20		
	0730150574	A	O	O			1			T=2.00		
	0730150573	A	O	O			1			T=1.80		
	0730150572	A	O	O			1			T=1.60		
	0730150571	A	O	O			1			T=1.40		
	0730150570	A	O	O			1			T=1.20		
	0730150569	A	O	O			1			T=1.00		
	[10]	(E)RING-PISTON (D)RING					(F)ANNEAU (S)ANILLO					
	0734401213	A	O	O			2			48.3x52x2.5		
	[11]	(E)RING-PISTON (D)RING					(F)ANNEAU (S)ANILLO					
	0734401155	A	O	O			1			44.6x48x2.0		
	[12]	(E)SCREW-CAP (D)SCHRAUBE					(F)VIS (S)TORNILLO					
	0768041223	A	O	O			7			M6x35		
	[13]	(E)O RING (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O					
	0734313017	A	O	O			1					
	[14]	(E)O RING (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O					
	0734313007	A	O	O			1					
	[15]	(E)PISTON (D)KOLBEN					(F)PISTON (S)PISTON					
	1036331028	A	O	O			1					
	[16]	(E)O RING (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A = COMMON							

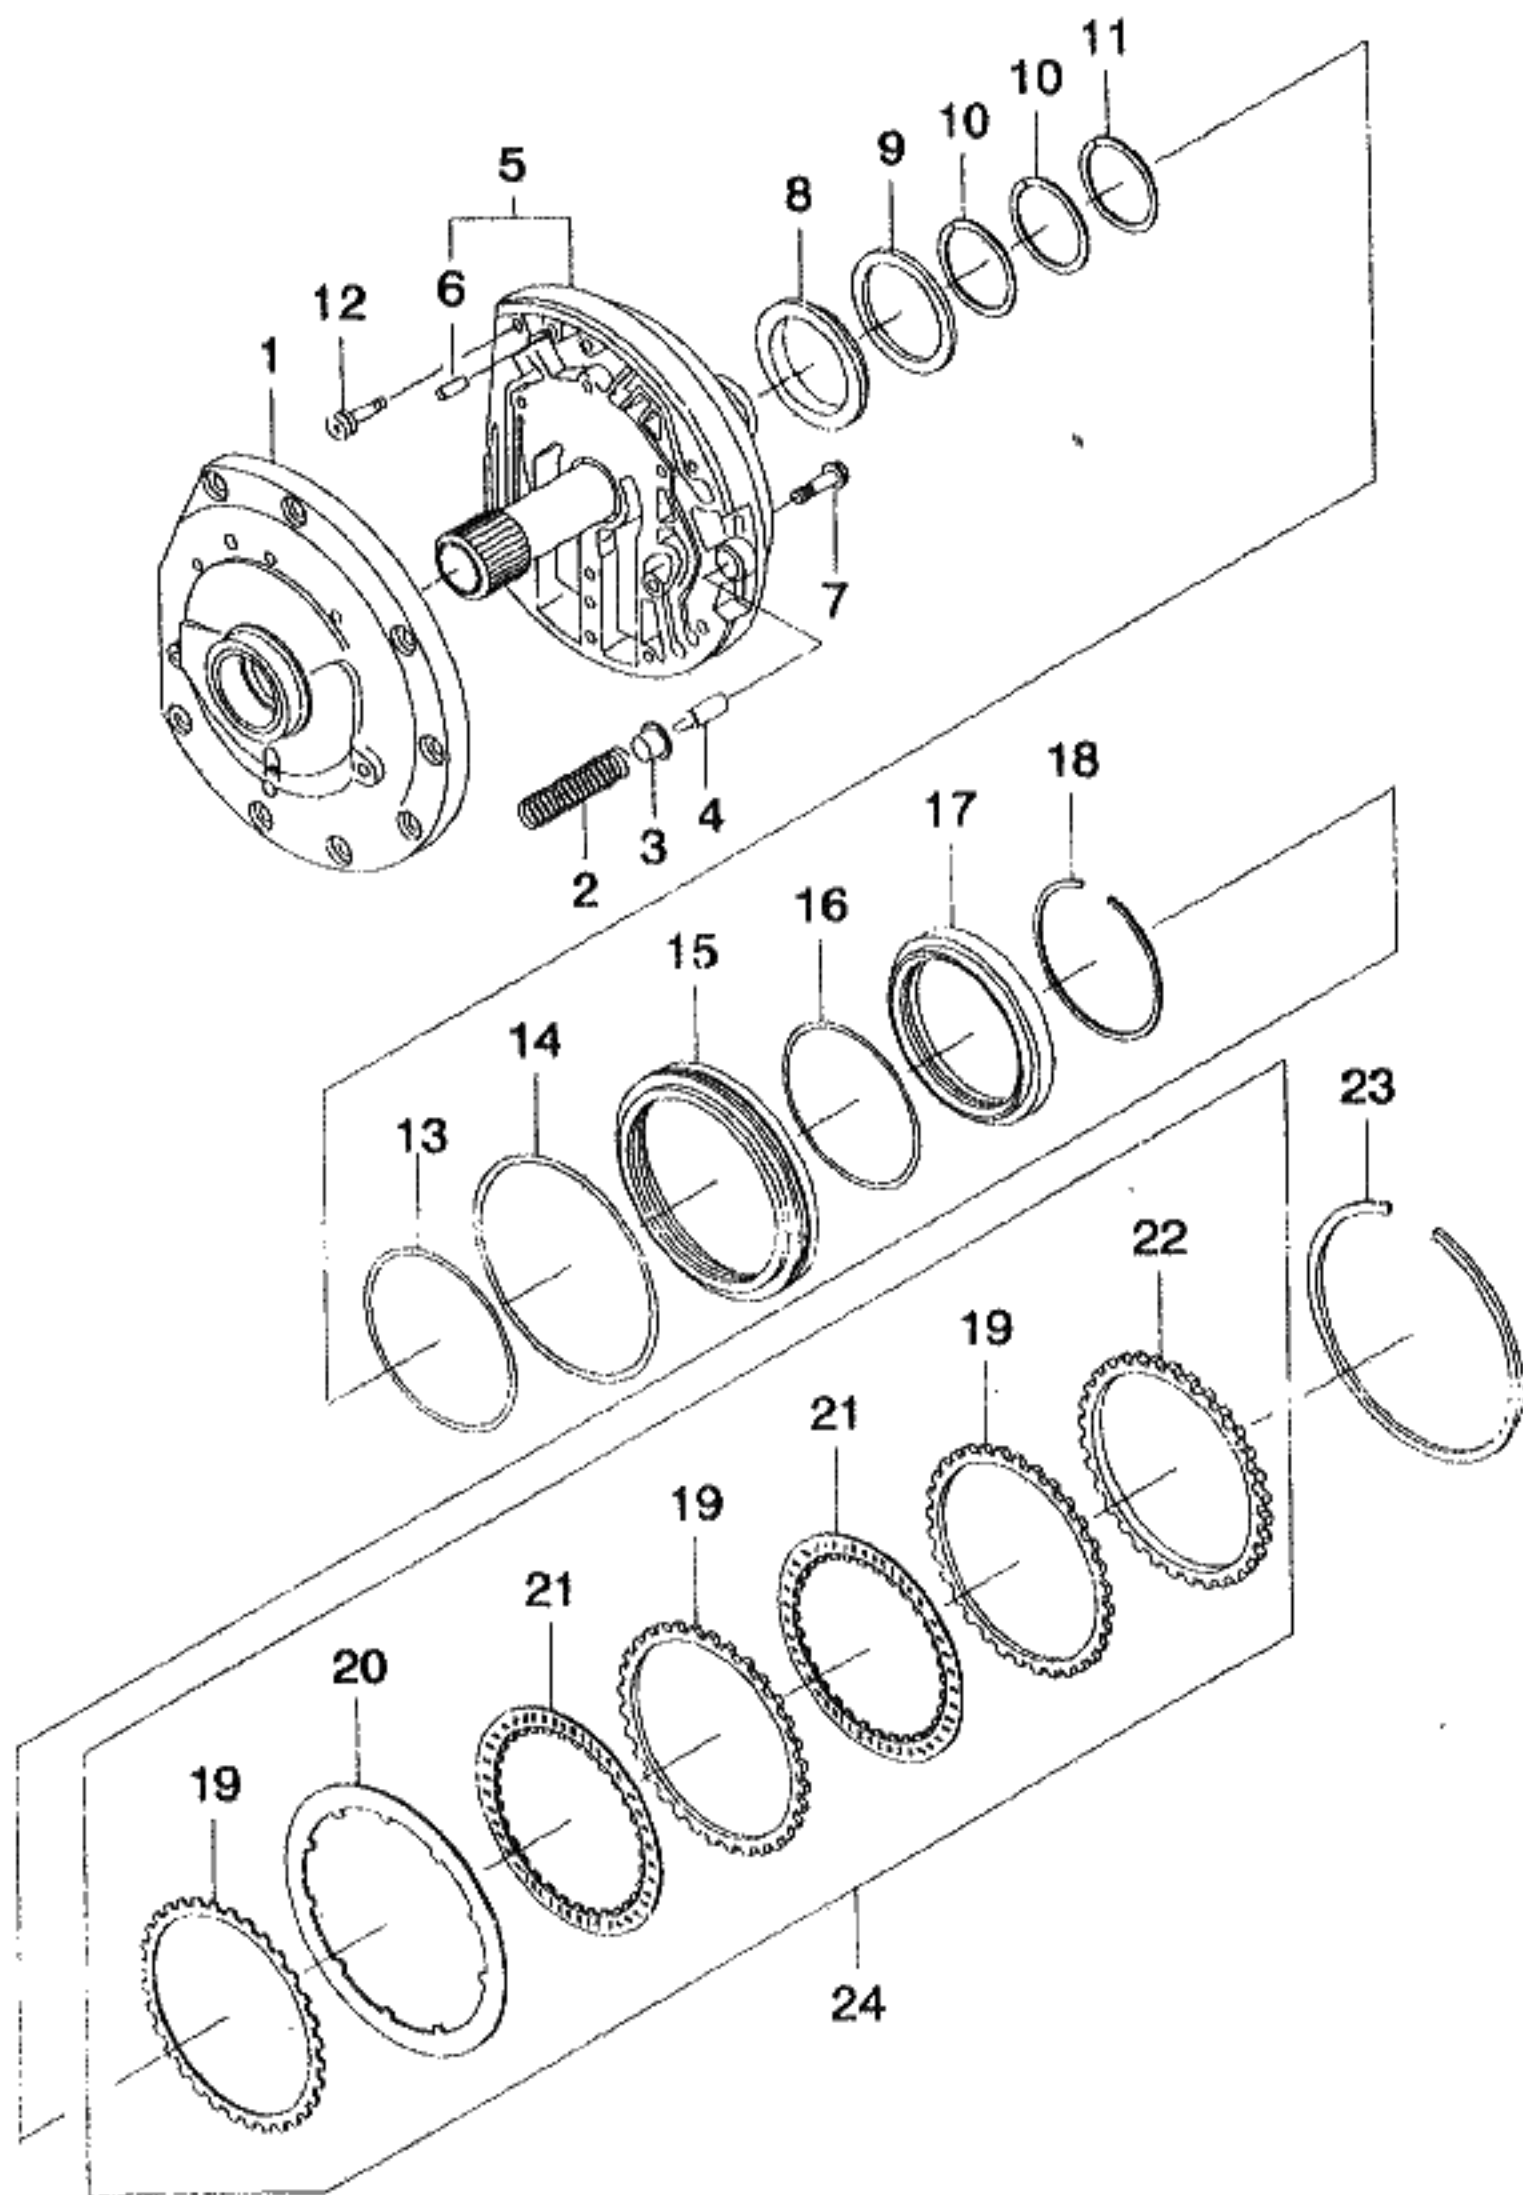

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	0734313026	A	O	O			1					
	[17]	(E)RING-INTERM					(F)ANNEAU					
		(D)RING					(S)ANILLO					
	1036331060	A	O	O			1					
	[18]	(E)RING-SNAP					(F)ANNEAU-PRESSION D'ARBRE					
		(D)RING,STAB DRUCK					(S)ANILLO-DE PRESION					
	0730513314	A	O	O			1			T=1.50		
	[19]	(E)DISC-CLUTCH OUTER					(F)CARTER & DISQUE					
		(D)KUPPLUNG-DECKEL&DISK					(S)EMBRAGUE-CUBIERTA Y DISCO					
	1036302015	A	O	O			3			T=1.80		
	[20]	(E)SPRING-CUP					(F)RESSORT					
		(D)FEDERUNG					(S)RESORTE					
	1036331096	A	O	O			1					
	[21]	(E)LIN-CLUTCH DISC					(F)PLAQUE-EMBRAYAGE A DISQUE					
		(D)PLATTE,SCHEIBEN-KUPPLUNG					(S)PLACA-EMBRAGUE DISCO					
	1036202018	A	O	O			3					
	[22]	(E)DISC END					(F)DISQUE					
		(D)SCHEIBE					(S)DISCO					
	1036302061	A	O	O			1					
	[23]	(E)RING-SNAP					(F)ANNEAU-PRESSION D'ARBRE					
		(D)RING,STAB DRUCK					(S)ANILLO-DE PRESION					
	0730513220	A	O	O			1			T=2.00		
	0730513212	A	O	O			1			T=1.80		
	0730513219	A	O	O			1			T=1.60		
	0730513211	A	O	O			1			T=1.40		
	0730513210	A	O	O			1			T=1.20		
	0730513218	A	O	O			1			T=1.00		
	[24]	(E)C CLUTCH SET					(F)'C' EMBRAYAGE					
		(D)'C' KUPPLUNG					(S)'C' EMBRAGUE					
	S3522001	A	O	O			1					

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A


CDX = 2.0 DOHC

A = AUTOMATIC T/A

= COMMON

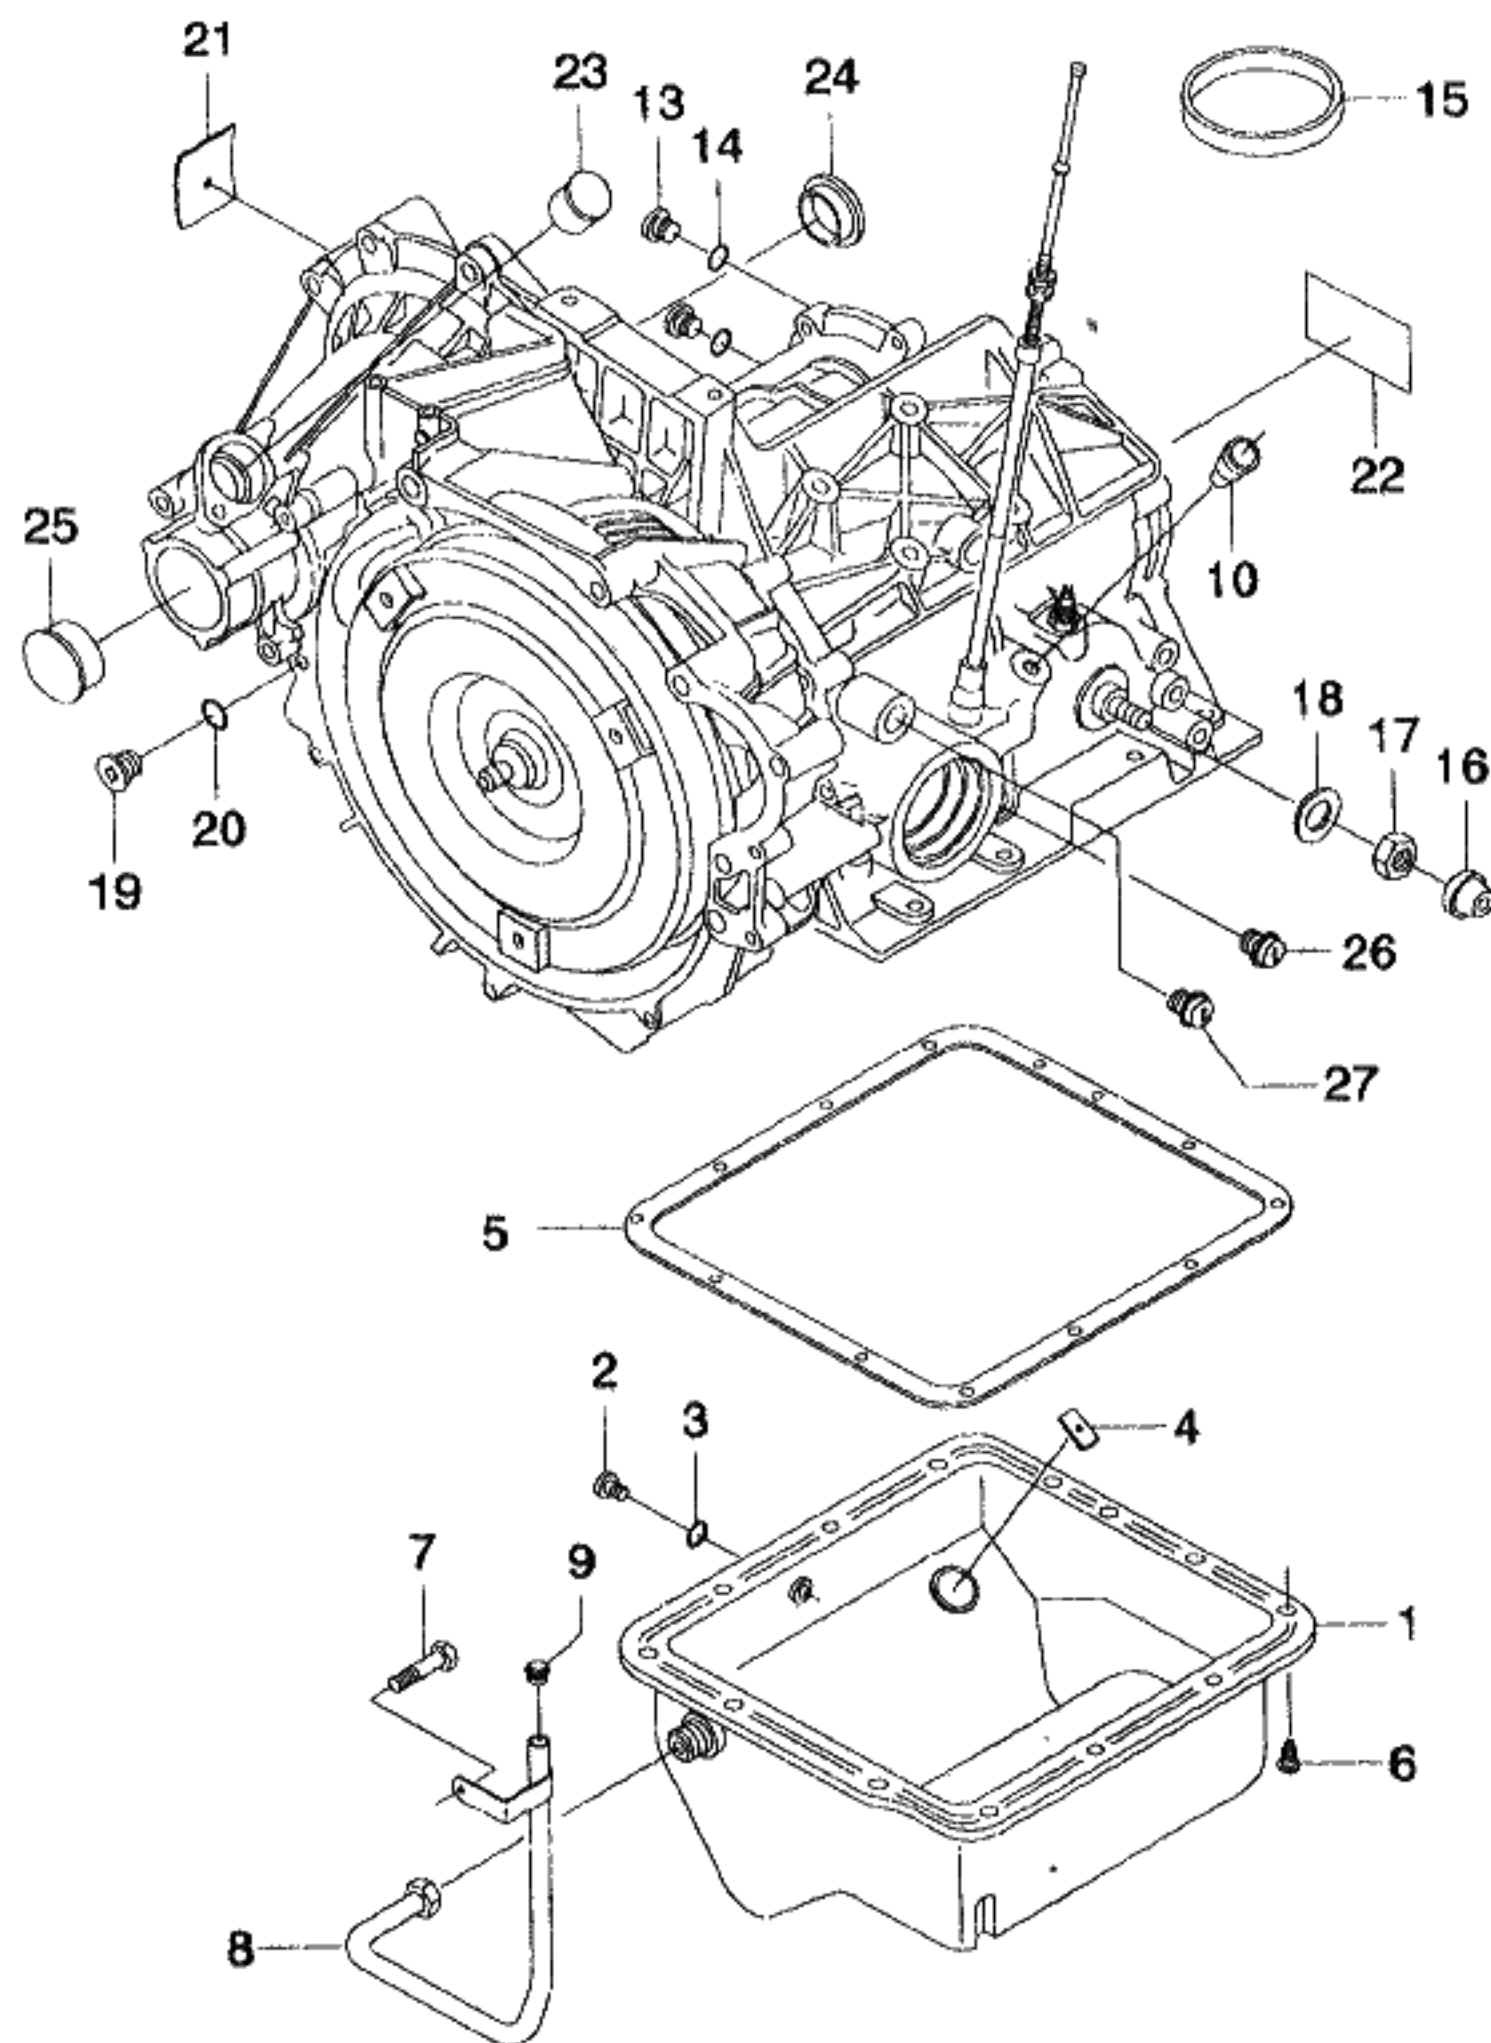


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 1036201009	(E)PAN A-OIL (D)PFANNE ÖL A	O	O		(F)CARTER-HUILE (S)RECIPIENTE-ACEITE 1					
	[02] 0636302053	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN A	O	O		(F)BOUCHON-VIS (S)TAPON-TORNILLO 1			M10x1		
	[03] 0730150764	(E)RING-SEALING (D)RING A	O	O		(F)ANNEAU (S)ANILLO 1			T=1.20		
	[04] 1043301036	(E)MAGNET (D)MAGNET A	O	O		(F)AIMANT (S)IMAN 1					
	[05] 1036301182	(E)GASKET (D)DICHTUNG A	O	O		(F)JOINT (S)JUNTA 1					
	[06] 0736101189	(E)SCREW-CAP (D)SCHRAUBE A	O	O		(F)VIS (S)TORNILLO 13			M6		
	[07] 0636024009	(E)SCREW-HEXAGON (D)SCHRAUBE A	O	O		(F)VIS (S)TORNILLO 1					
	[08] 96210143	(E)TUBE A-OIL FILLER (D)TUYAU A	O	O		(F)ROHRLEITUNG (S)TUBO 1					
	[09] 0637900025	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN A	O	O		(F)BOUCHON-VIS (S)TAPON-TORNILLO 1					
	[10] 1036390004	(E)PIPE-BREATHER (D)ROHR A	O	O		(F)TUYAU (S)TUBERIA 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

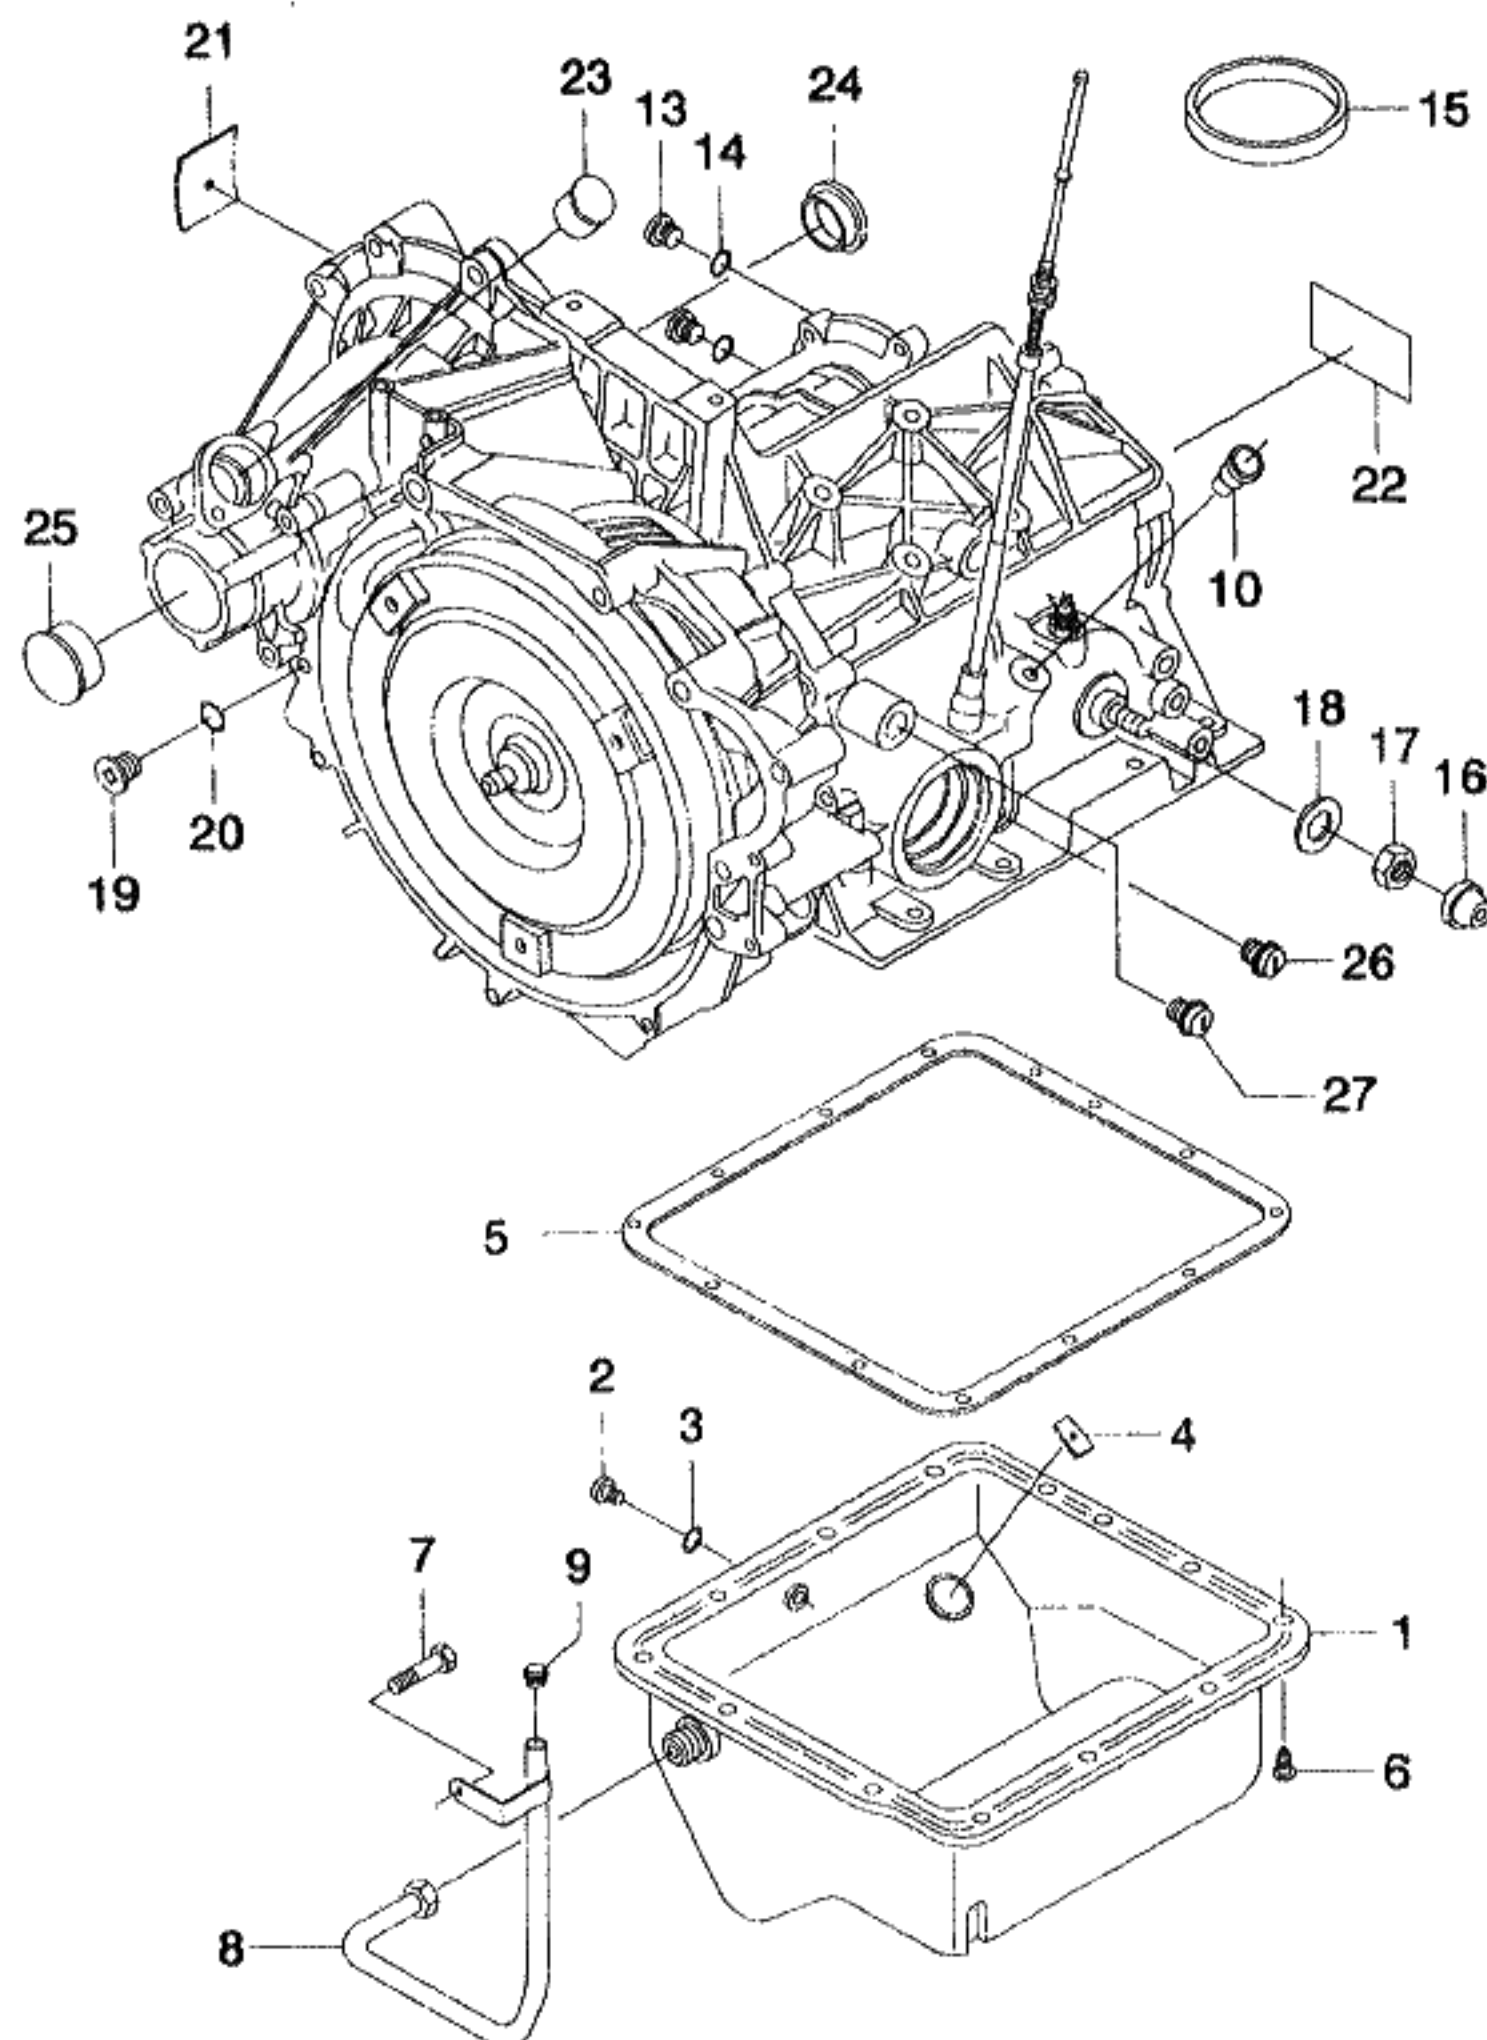


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[13]	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN				(F)BOUCHON-VIS (S)TAPON-TORNILLO					
	0636302053	A	O	O		1				M10x1	
	[14]	(E)RING-SEALING (D)RING				(F)ANNEAU (S)ANILLO					
	0730150764	A	O	O		1				T=1.20	
	[15]	(E)RING (D)RING				(F)ANNEAU (S)ANILLO					
	1043306040	A	O	O		1					
	[16]	(E)PLUG (D)STÖPSEL				(F)BOUCHON (S)TAPON					
	0637900027	A	O	O		1					
	[17]	(E)NUT-HEXAGON (D)MUTTER				(F)ECROU (S)TUERCA					
	0637011041	A	O	O		1				M8x1	
	[18]	(E)WASHER (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
	0630003032	A	O	O		1					
	[19]	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN				(F)BOUCHON-VIS (S)TAPON-TORNILLO					
	0636302053	A	O	O		1				M10x1	
	[20]	(E)RING-SEALING (D)RING				(F)ANNEAU (S)ANILLO					
	0730150764	A	O	O		1				T=1.20	
	[21]	(E)PLATE-TYPE (D)PLATTE				(F)PLAQUE (S)PLACA					
	1036301051	A	O	O		1					
	[22]	(E)LABEL-STICK ON (D)ETIKETT				(F)ÉTIQUETTE (S)ETIQUETA					
	1050301263	A	O	O		1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


3523 OIL PAN & ACCESSORIES

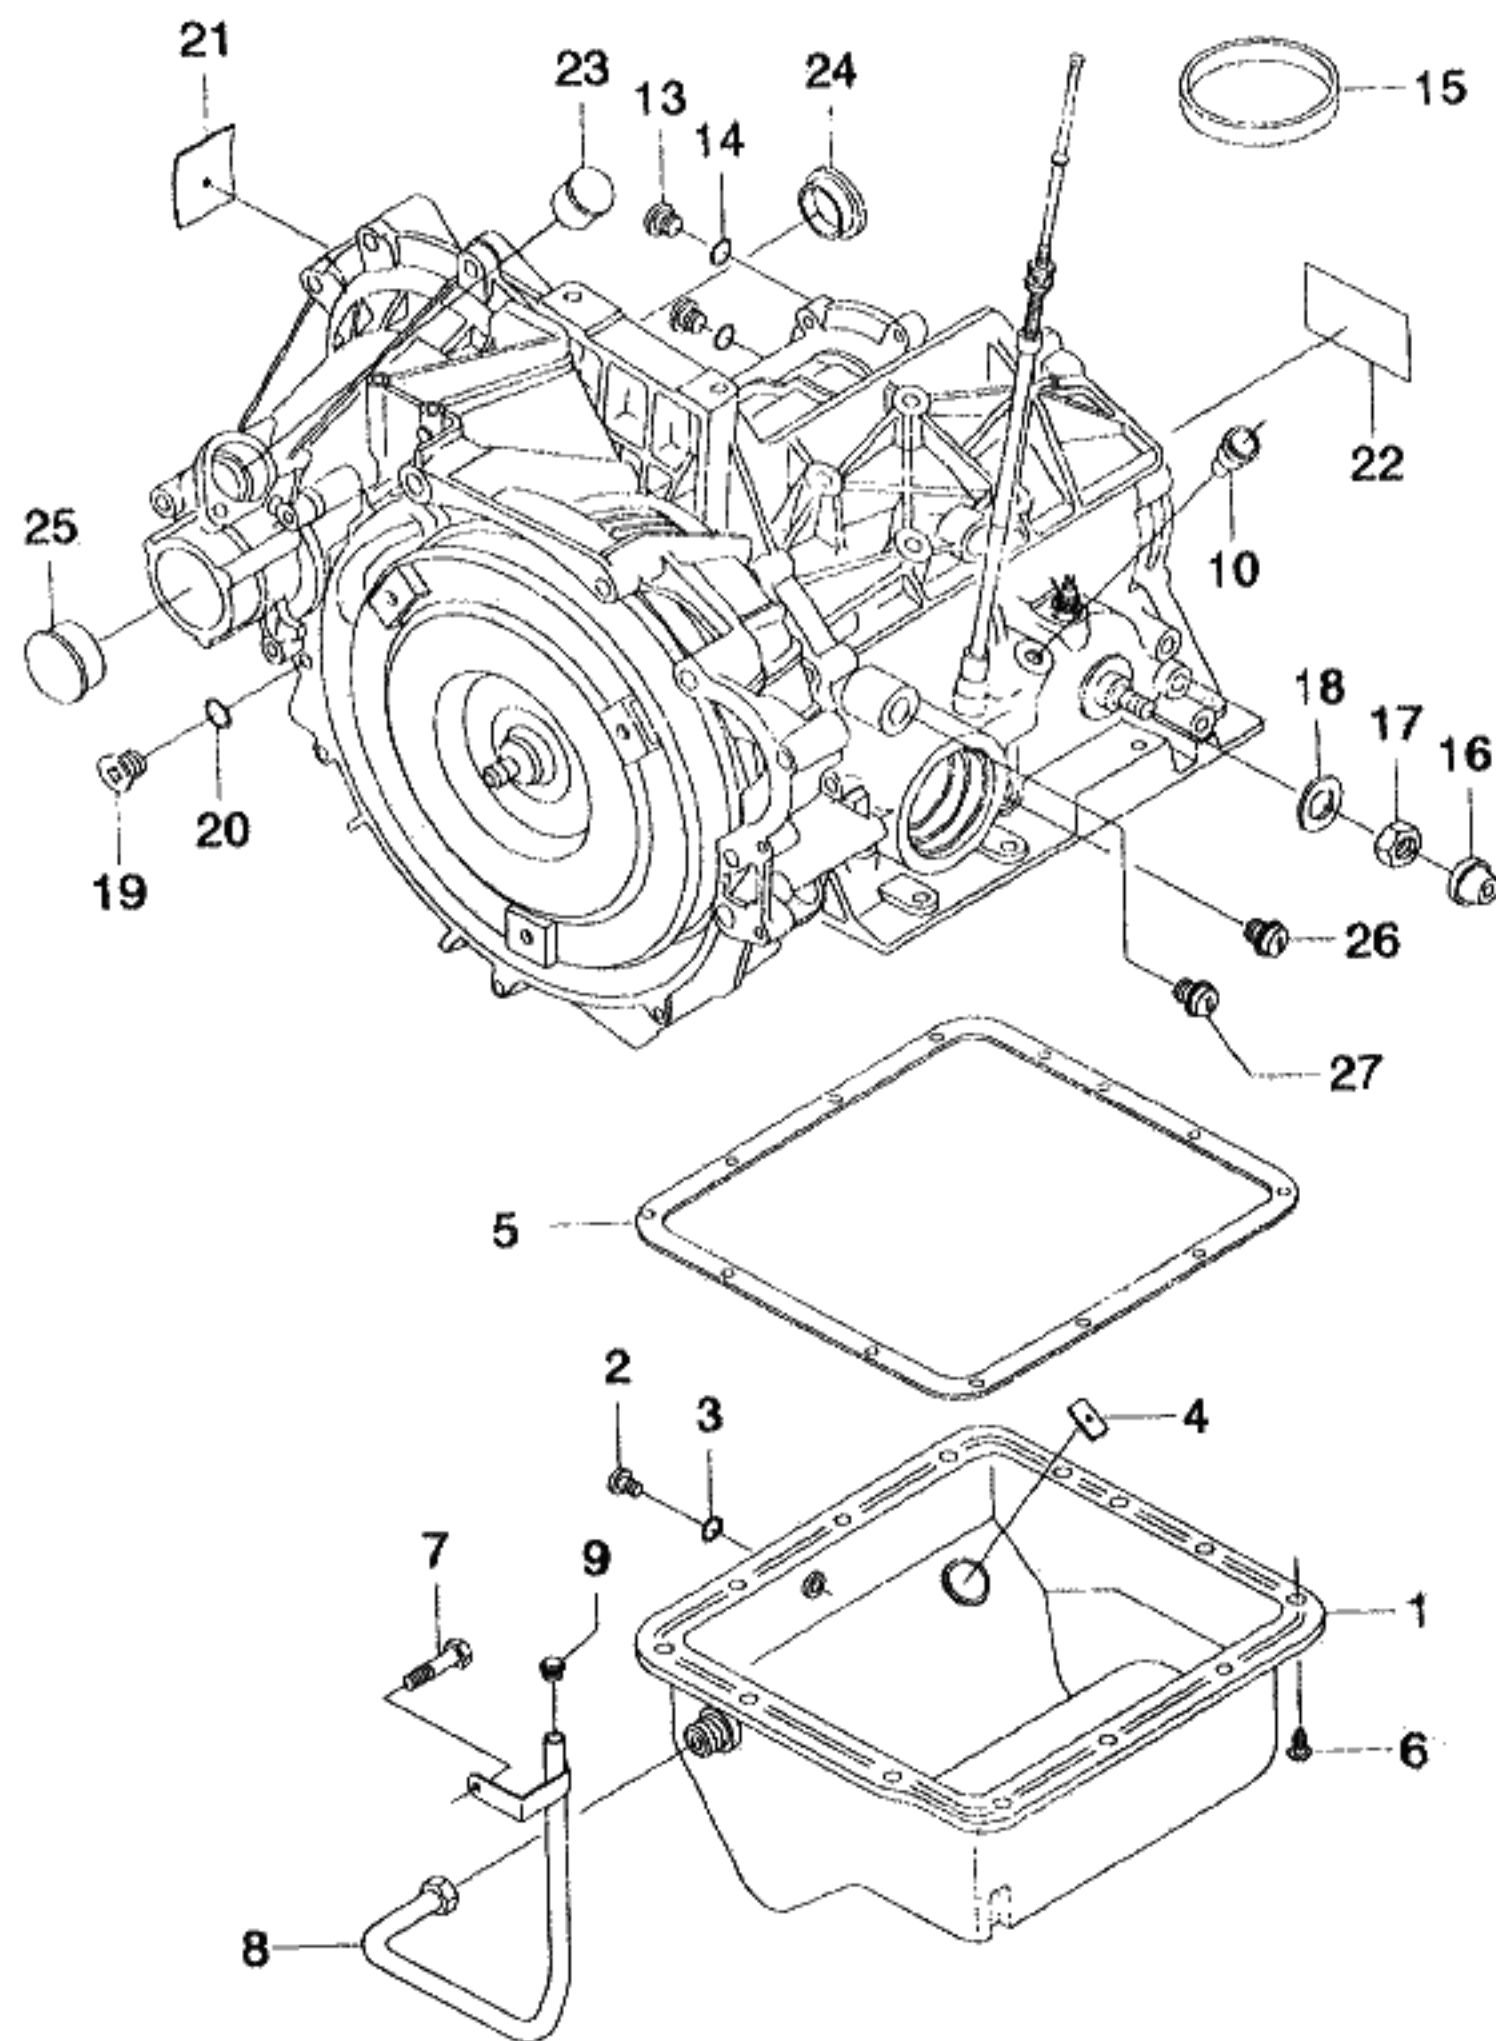


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[23] 0637900105	(E)SLEEVE-PROTECT (D)HÜLSE A O O				(F)CHEMISE (S)MANGA 1			Z18x20		
	[24] 0501314065	(E)PLUG (D)STÖPSEL A O O				(F)BOUCHON (S)TAPON 1					
	[25] 0637900038	(E)PLUG (D)STÖPSEL A O O				(F)BOUCHON (S)TAPON 1					
	[26] 0637900025	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN A O O				(F)BOUCHON-VIS (S)TAPON-TORNILLO 1			M14x1.5		
	[27] 0637900025	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN A O O				(F)BOUCHON-VIS (S)TAPON-TORNILLO 1			M14x1.5		
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

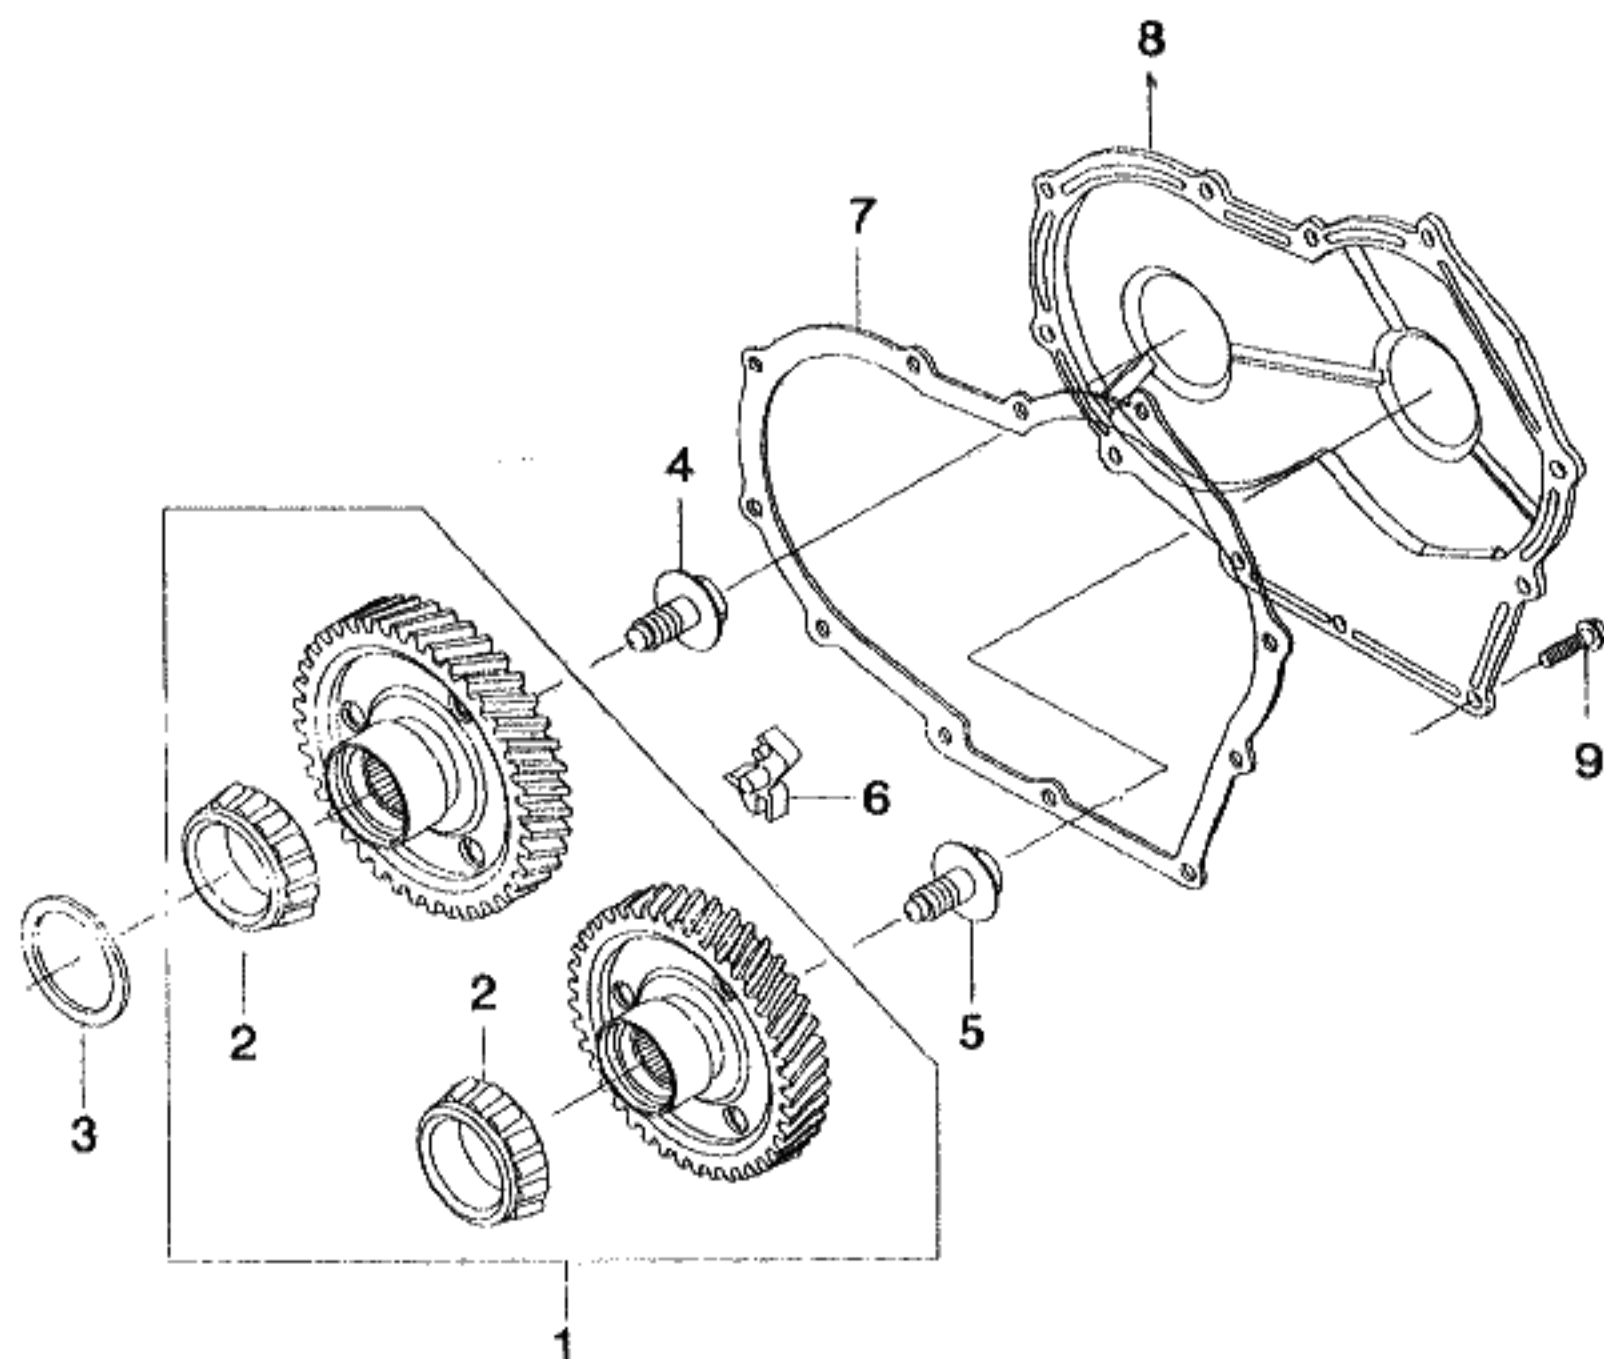


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)GEAR A-SUPR (D)GETRIEBE				(F)ENGRENAGE (S)ENGRANAJE					
	1036209128	A	O	.		1				Z46/53	
	1036209127	A	O	O & L88		1				Z46/53	
	[02]	(E)BEARING-INNER RING (D)KUGELLAGER				(F)ROULEMENT (S)CONJINETE					
	0735370117	A	O	O		2				38.0x17.0	
	[03]	(E)WASHER (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
	0730107263	A	O	O		1				T=1.95	
	0730106542	A	O	O		1				T=1.90	
	0730106541	A	O	O		1				T=1.85	
	0730106540	A	O	O		1				T=1.80	
	0730106539	A	O	O		1				T=1.75	
	0730106538	A	O	O		1				T=1.70	
	0730106537	A	O	O		1				T=1.65	
	0730106536	A	O	O		1				T=1.60	
	0730106535	A	O	O		1				T=1.55	
	0730106534	A	O	O		1				T=1.50	
	0730106533	A	O	O		1				T=1.45	
	0730106532	A	O	O		1				T=1.40	
	0730106531	A	O	O		1				T=1.35	
	0730106530	A	O	O		1				T=1.30	
	0730106529	A	O	O		1				T=1.25	
	0730106528	A	O	O		1				T=1.20	
	0730106527	A	O	O		1				T=1.15	
	0730106526	A	O	O		1				T=1.10	
	0730106525	A	O	O		1				T=1.05	
	0730106524	A	O	O		1				T=1.00	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

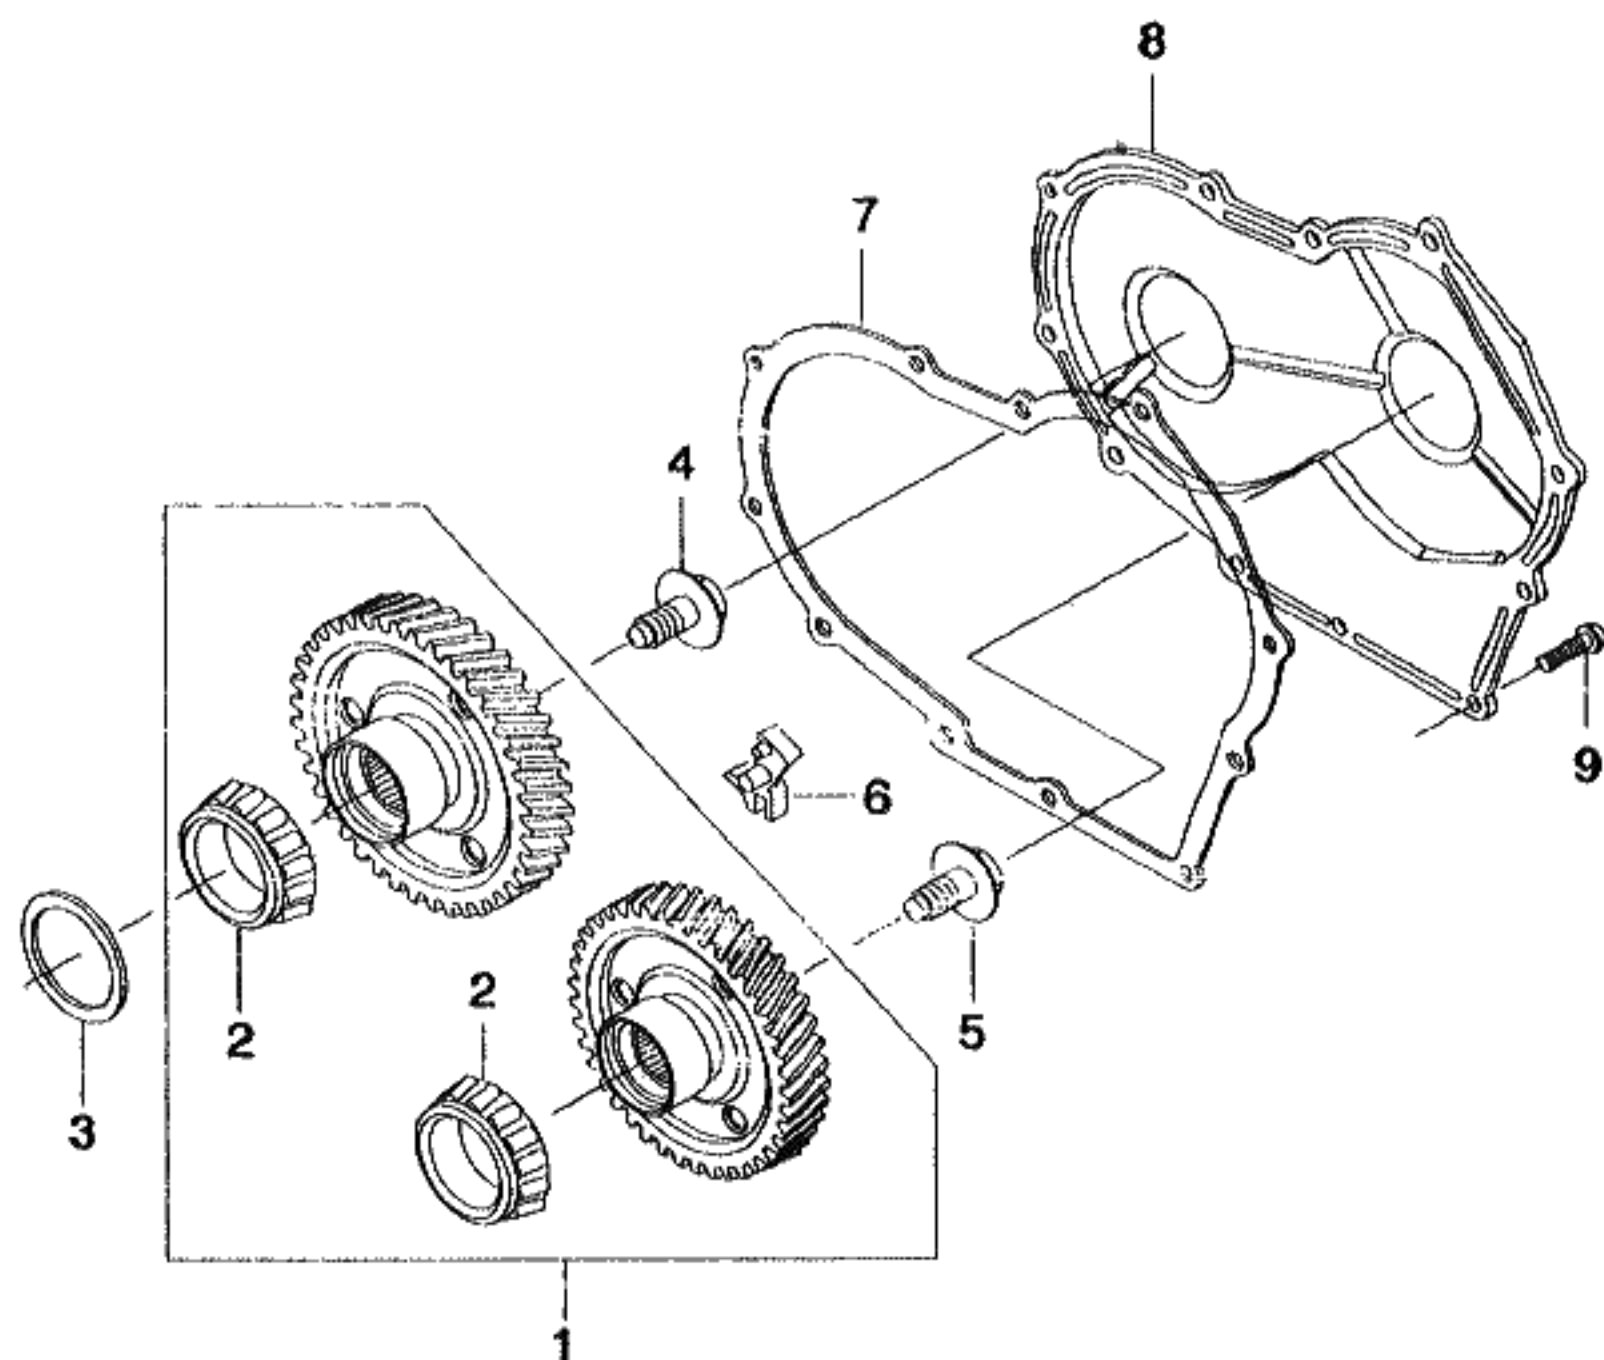


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[04] 0768045201	(E)SCREW (D)SCHRAUBE A	O	O			(F)VIS (S)TORNILLO 1			M14x1.5	
	[05] 0768045205	(E)SCREW (D)SCHRAUBE A	O	O			(F)VIS (S)TORNILLO 1			M14x1.5	
	[06] 1036309146 1036309145	(E)ROD-WIPER (D)STAB A	O	.			(F)TRINGLE (S)VARILLA 1				
			A	O	O & L88		1				
	[07] 1036309323	(E)GASKET (D)DICHTUNG A	O	O			(F)JOINT (S)JUNTA 1				
	[08] 1036209054	(E)COVER-FR (D)DECKEL A	O	O			(F)CARTER (S)CUBIERTA 1				
	[09] 0768041279	(E)SCREW-CAP (D)SCHRAUBE A	O	O			(F)VIS (S)TORNILLO 1			M6x15	
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

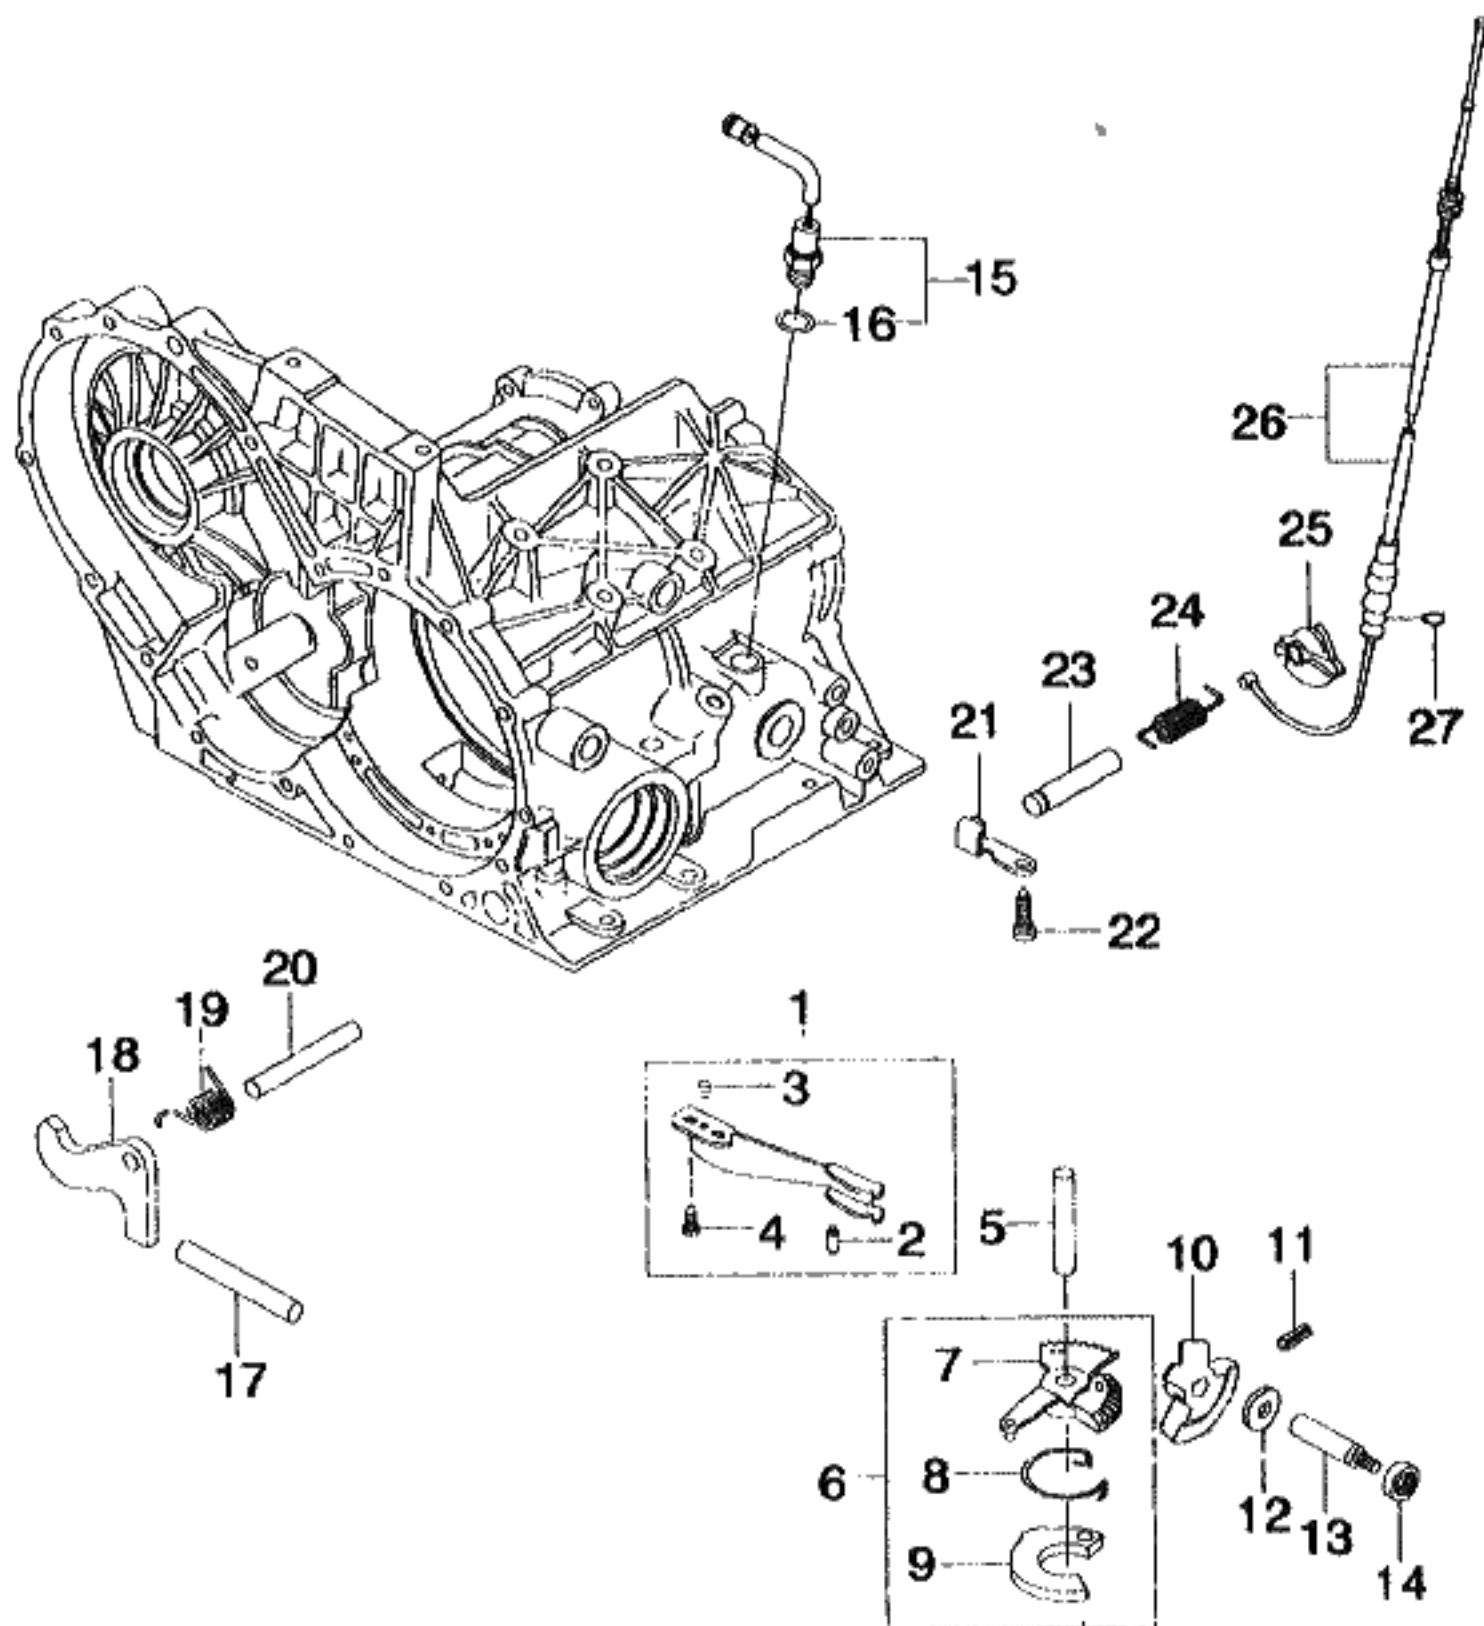


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)SPRING-DETENT (D)FEDERUNG,RÜCKHALTER					(F)RESSORT-DETENTE (S)RESORTE-SEGURO				
	1036201021	A	O	O			1				
	[02]	(E)ROLLER (D)ROLLE					(F)ROULEAU (S)RODILLO				
	0301306014	A	O	O			1				
	[03]	(E)PIN (D)STIFT					(F)BROCHE (S)PASADOR				
	1036306021	A	O	O			1				
	[04]	(E)SCREW-CAP (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	0768041279	A	O	O			2			M6x15	
	[05]	(E)PIN (D)STIFT					(F)BROCHE (S)PASADOR				
	1036306003	A	O	O			1				
	[06]	(E)DISC-DETENT (D)SCHEIBE					(F)DISQUE (S)DISCO				
	1036201022	A	O	O			1				
	[07]	(E)DISC-DETENT (D)SCHEIBE					(F)DISQUE (S)DISCO				
	1050206068	A	O	O			1				
	[08]	(E)CLAMP-SPRING (D)KLAMMER					(F)PINCE (S)ABRAZADERA				
	1036324005	A	O	O			1				
	[09]	(E)CAM-LOCKING (D)KURBEL					(F)CAME (S)LEVA				
	1036324021	A	O	O			1				
	[10]	(E)CAM (D)KURBEL					(F)CAME (S)LEVA				
	1036306057	A	O	O			1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

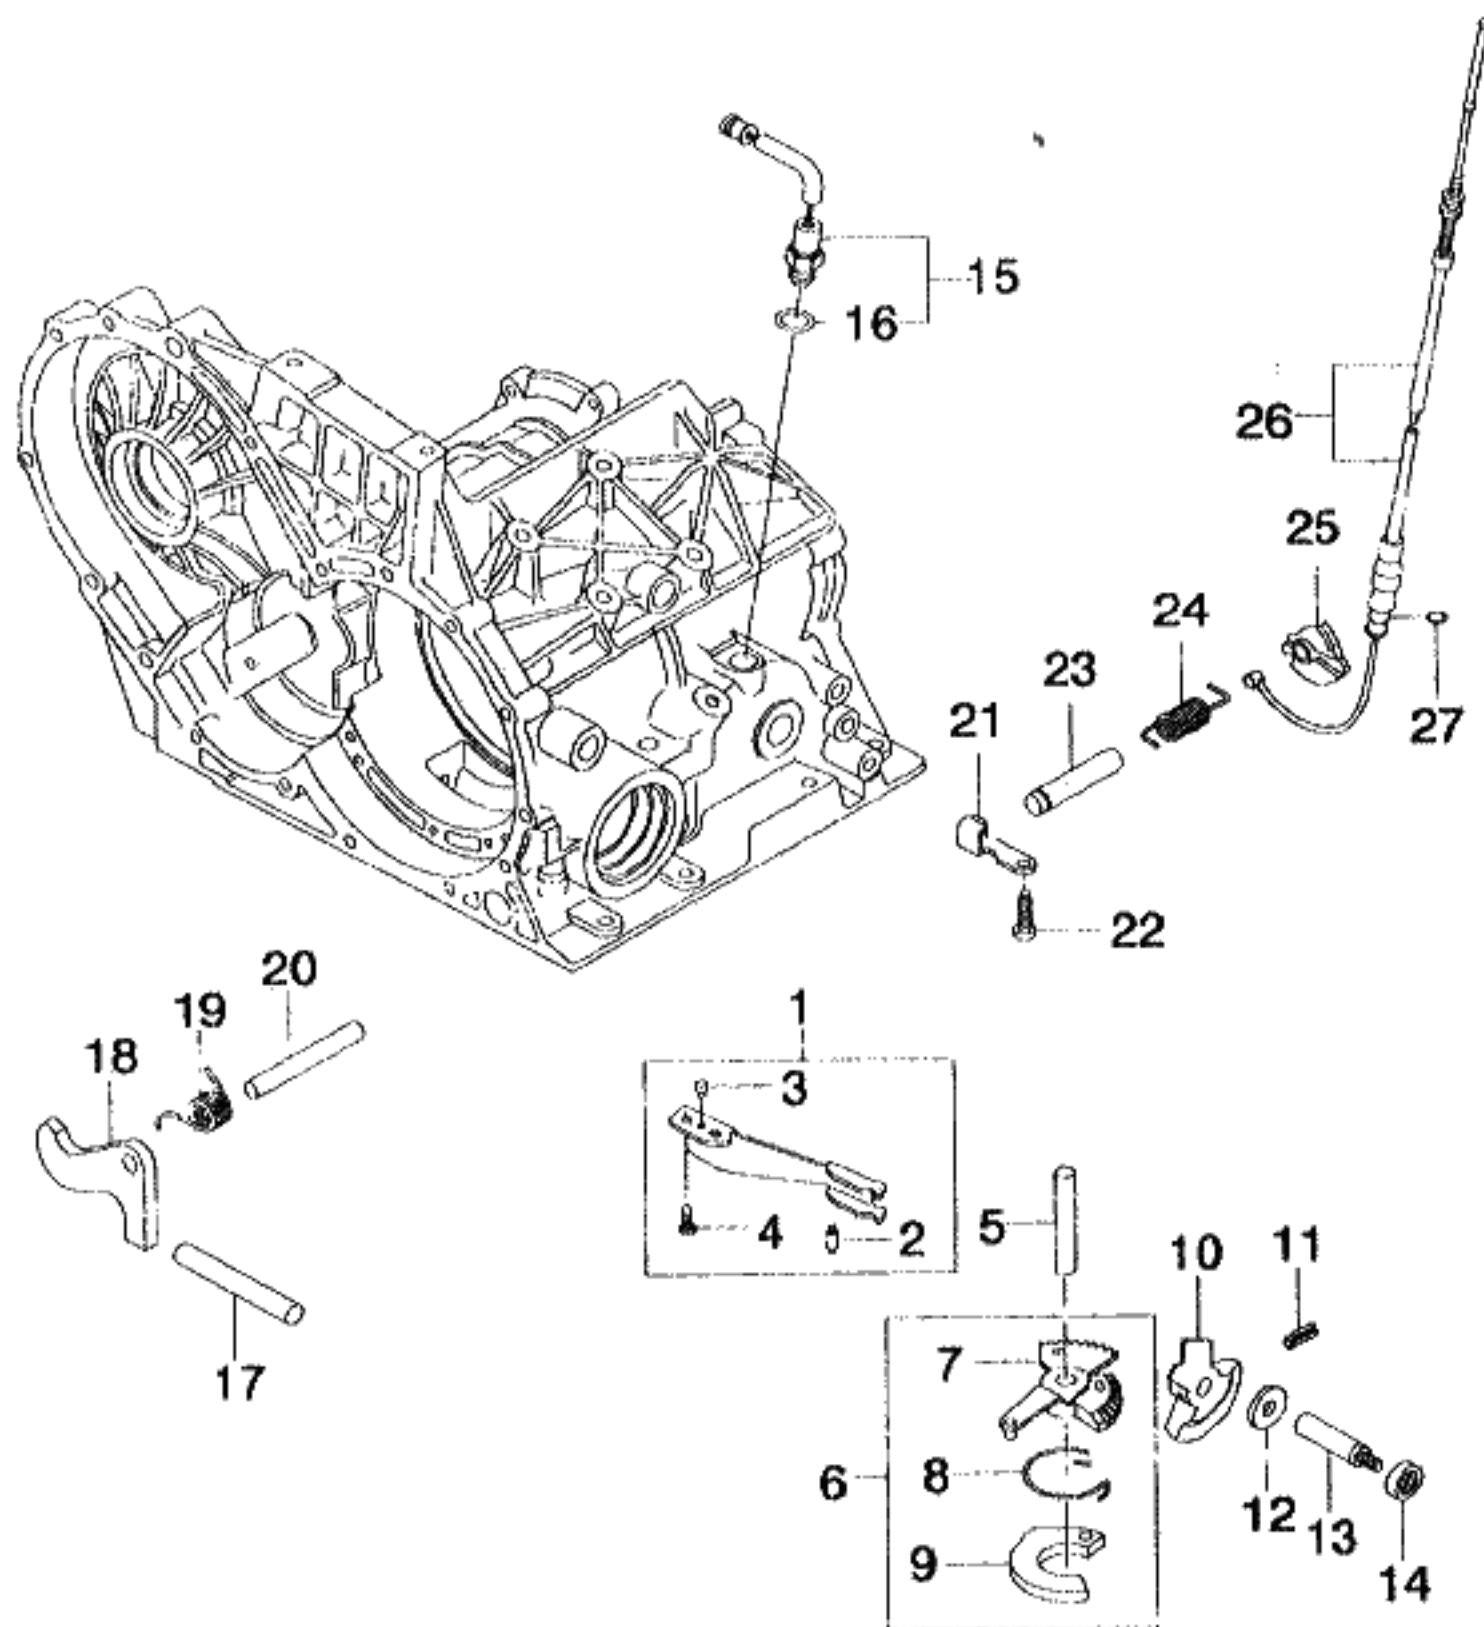


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[11]	(E)PIN-SLOT (D)STIFT					(F)BROCHE (S)PASADOR				
	0631329052	A	O	O			1			5x28	
	[12]	(E)WASHER (D)DICHTUNGSRING					(F)RONDELLE (S)ARANDELA				
	1036306046	A	O	O			1			T=1.90	
	1036306045	A	O	O			1			T=1.80	
	1036306044	A	O	O			1			T=1.70	
	1036306043	A	O	O			1			T=1.60	
	1036306042	A	O	O			1			T=1.50	
	1036306041	A	O	O			1			T=1.40	
	1036306040	A	O	O			1			T=1.30	
	1036306039	A	O	O			1			T=1.20	
	1036306038	A	O	O			1			T=1.10	
	1036306037	A	O	O			1			T=1.00	
	1036306028	A	O	O			1			T=0.90	
	1036306027	A	O	O			1			T=0.80	
	1036306026	A	O	O			1			T=0.70	
	1036306025	A	O	O			1			T=0.60	
	1036306024	A	O	O			1			T=0.50	
	[13]	(E)SHAFT-SELECTOR (D)SPINDEL					(F)ARBRE (S)EJE				
	1036306019	A	O	O			1				
	[14]	(E)SEAL-SHAFT (D)DICHTUNG					(F)JOINT (S)SELLO				
	0634300040	A	O	O			1			12x22x7	
	[15]	(E)SWITCH (D)SCHALTER					(F)COMMUTATEUR (S)INTERRUPTOR				
	0768300360	A	O	O			1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

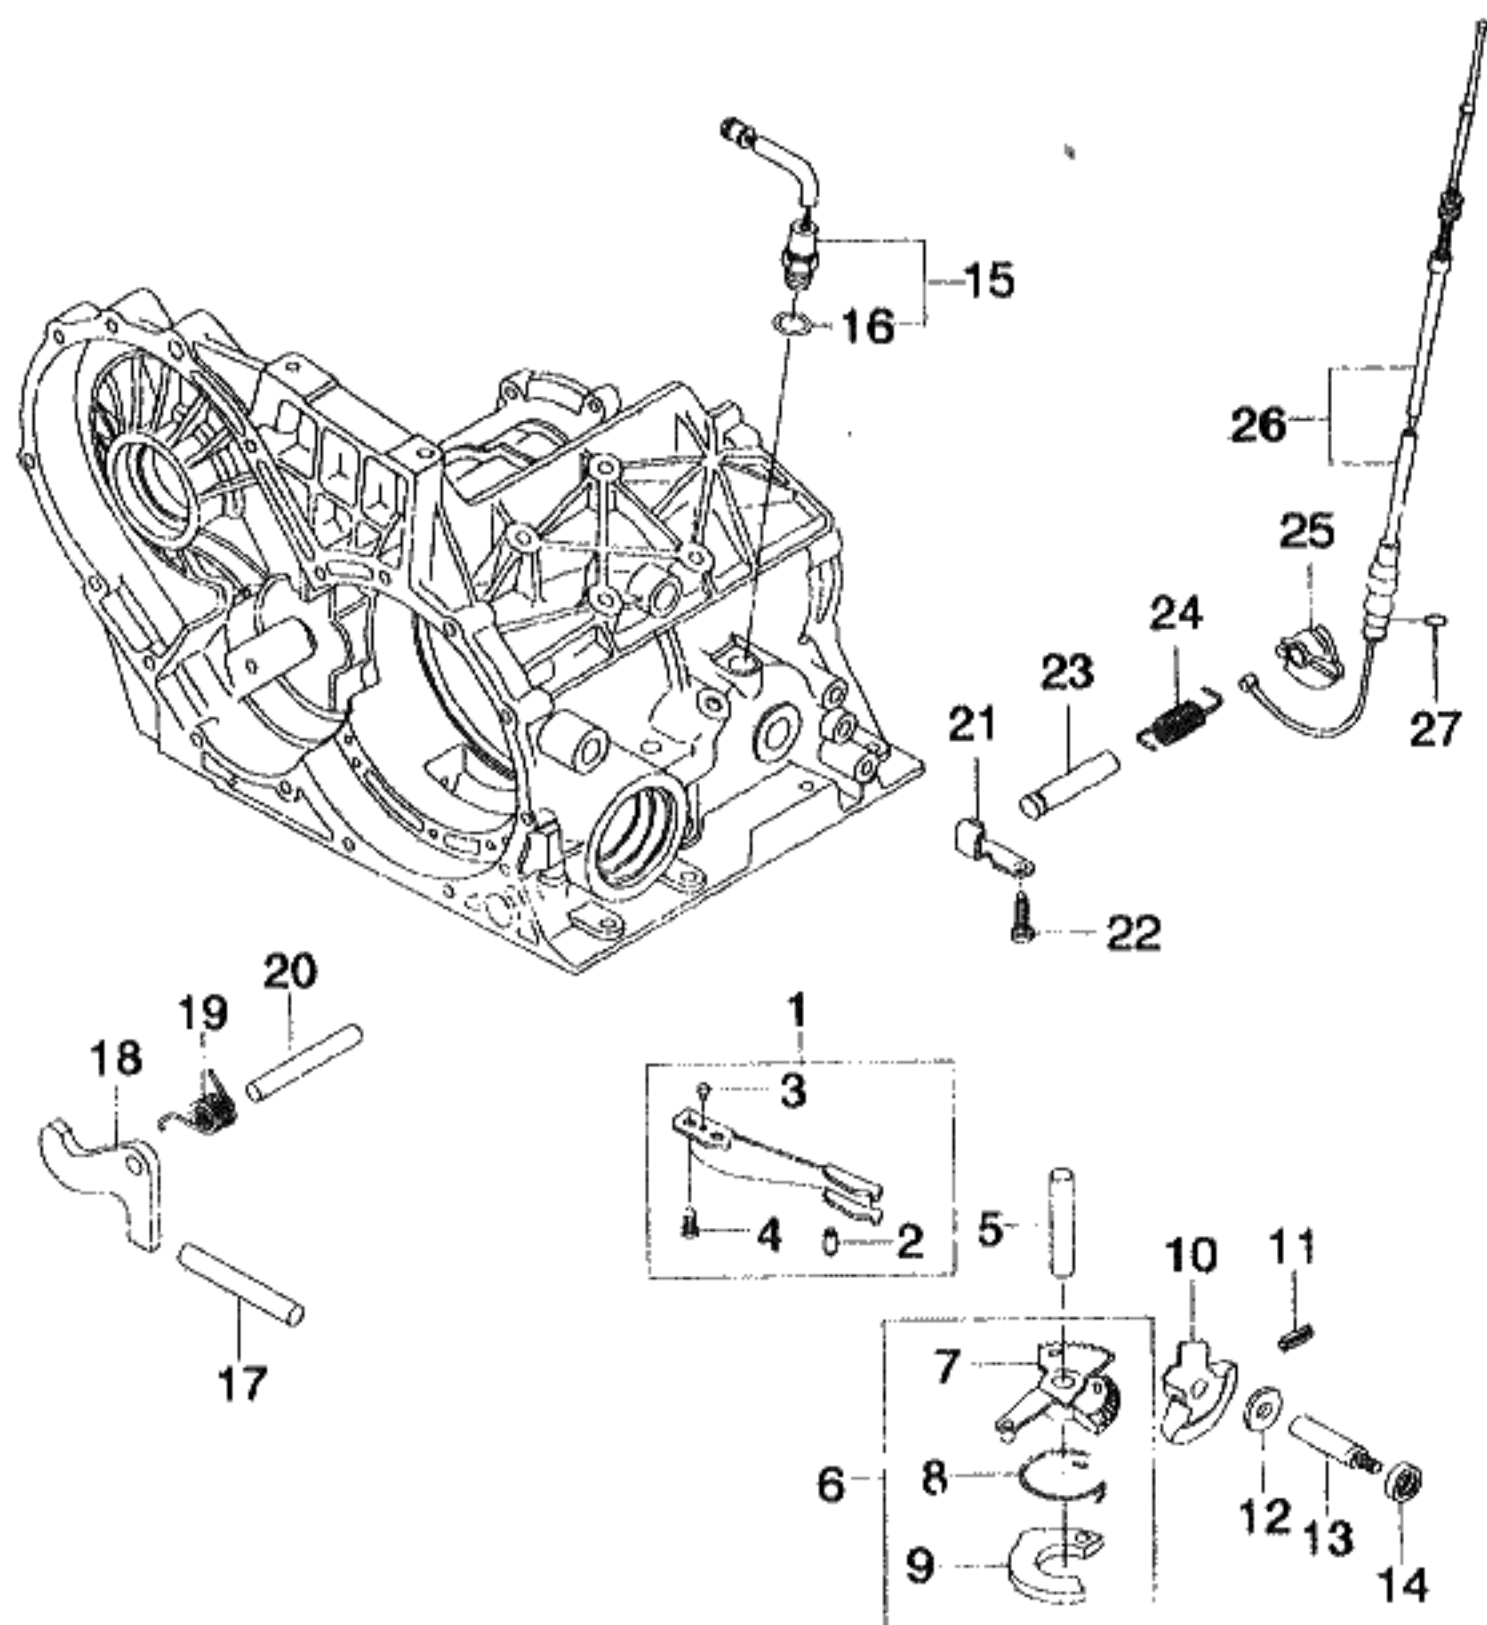

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[16]	(E)RING-SEALING (D)RING				(F)ANNEAU (S)ANILLO					
	0730150302	A	O	O		1				T=2.00	
	0730150160	A	O	O		1				T=1.80	
	0730150219	A	O	O		1				T=1.60	
	0730150220	A	O	O		1				T=1.40	
	[17]	(E)LINK-DRAW (D)VERBINDUNG				(F)ACOUPLEMENT (S)ENLACE					
	1036324018	A	O	O		1					
	[18]	(E)PAWL (D)SPERRHACKEN				(F)CLIQUET (S)RETEN					
	1036324002	A	O	O		1					
	[19]	(E)SPRING-LEG (D)FEDERUNG,BEIN				(F)RESSORT-JAMBE (S)RESORTE-PIERNA					
	1036301162	A	O	O		1					
	[20]	(E)PIN (D)STIFT				(F)BROCHE (S)PASADOR					
	1036324019	A	O	O		1					
	[21]	(E)PLATE-FIXING (D)PLATTE				(F)PLAQUE (S)PLACA					
	1036306015	A	O	O		1					
	[22]	(E)SCREW-CAP (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0768041279	A	O	O		1				M6x15	
	[23]	(E)AXLE (D)ACHSE				(F)PONT (S)EJE					
	1050306007	A	O	O		1					
	[24]	(E)SPRING-LEG (D)FEDERUNG,BEIN				(F)RESSORT-JAMBE (S)RESORTE-PIERNA					
	1036306034	A	O	O		1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

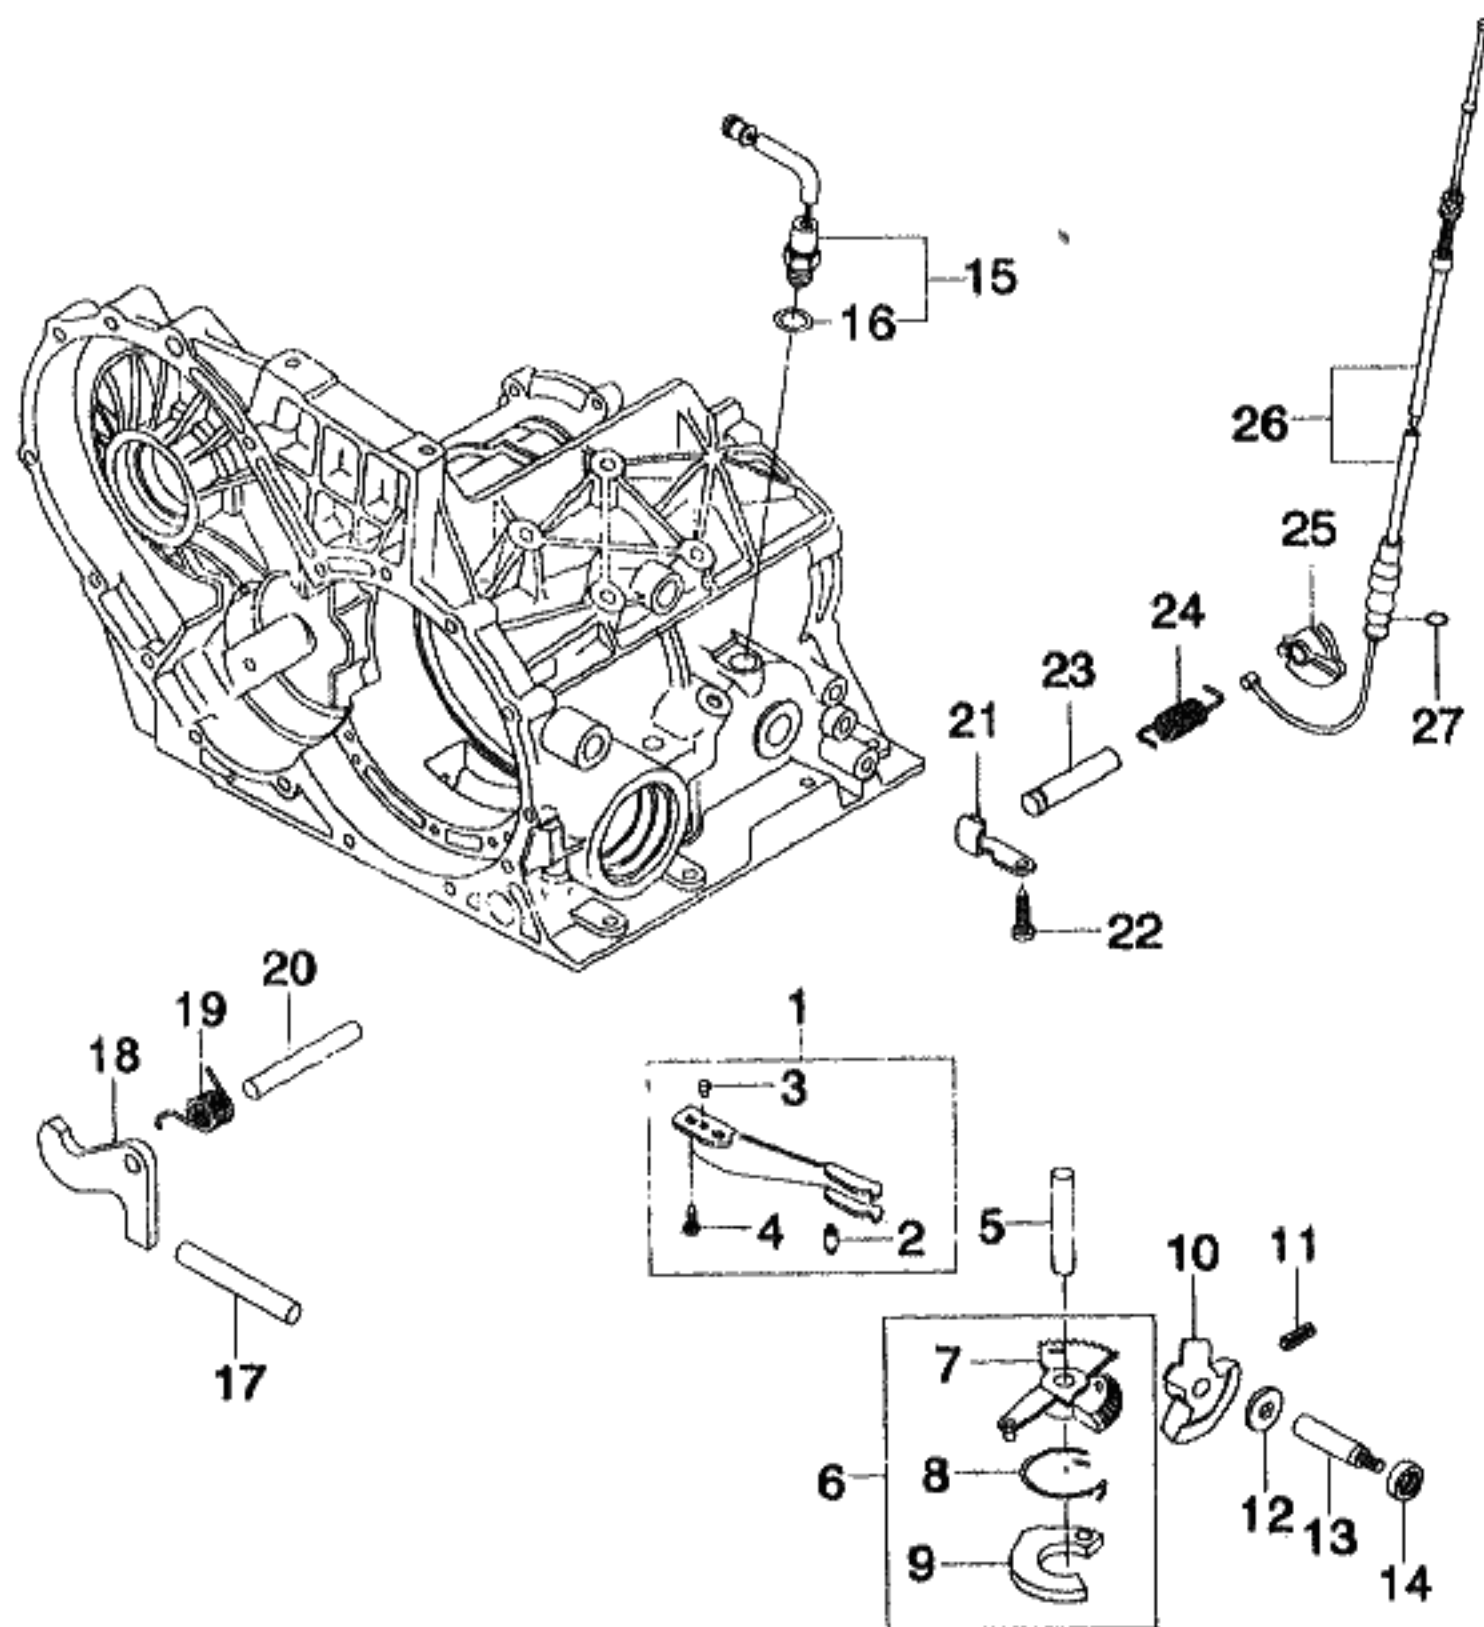

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[25] 1043206042	(E) THROTTLE CAM A (D) KURBEL A O O					(F) CAME (S) LEVA 1				
	[26] 1036201033 1036201030	(E) CABLE-THROTTLE VALVE (D) KABEL A O . A O O		&L88			(F) CABLE (S) CABLE 1 1				
	[27] 0734313158	(E) O RING (D) O RING A O O					(F) JOINT TORIQUE (S) ANILLO EN O 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

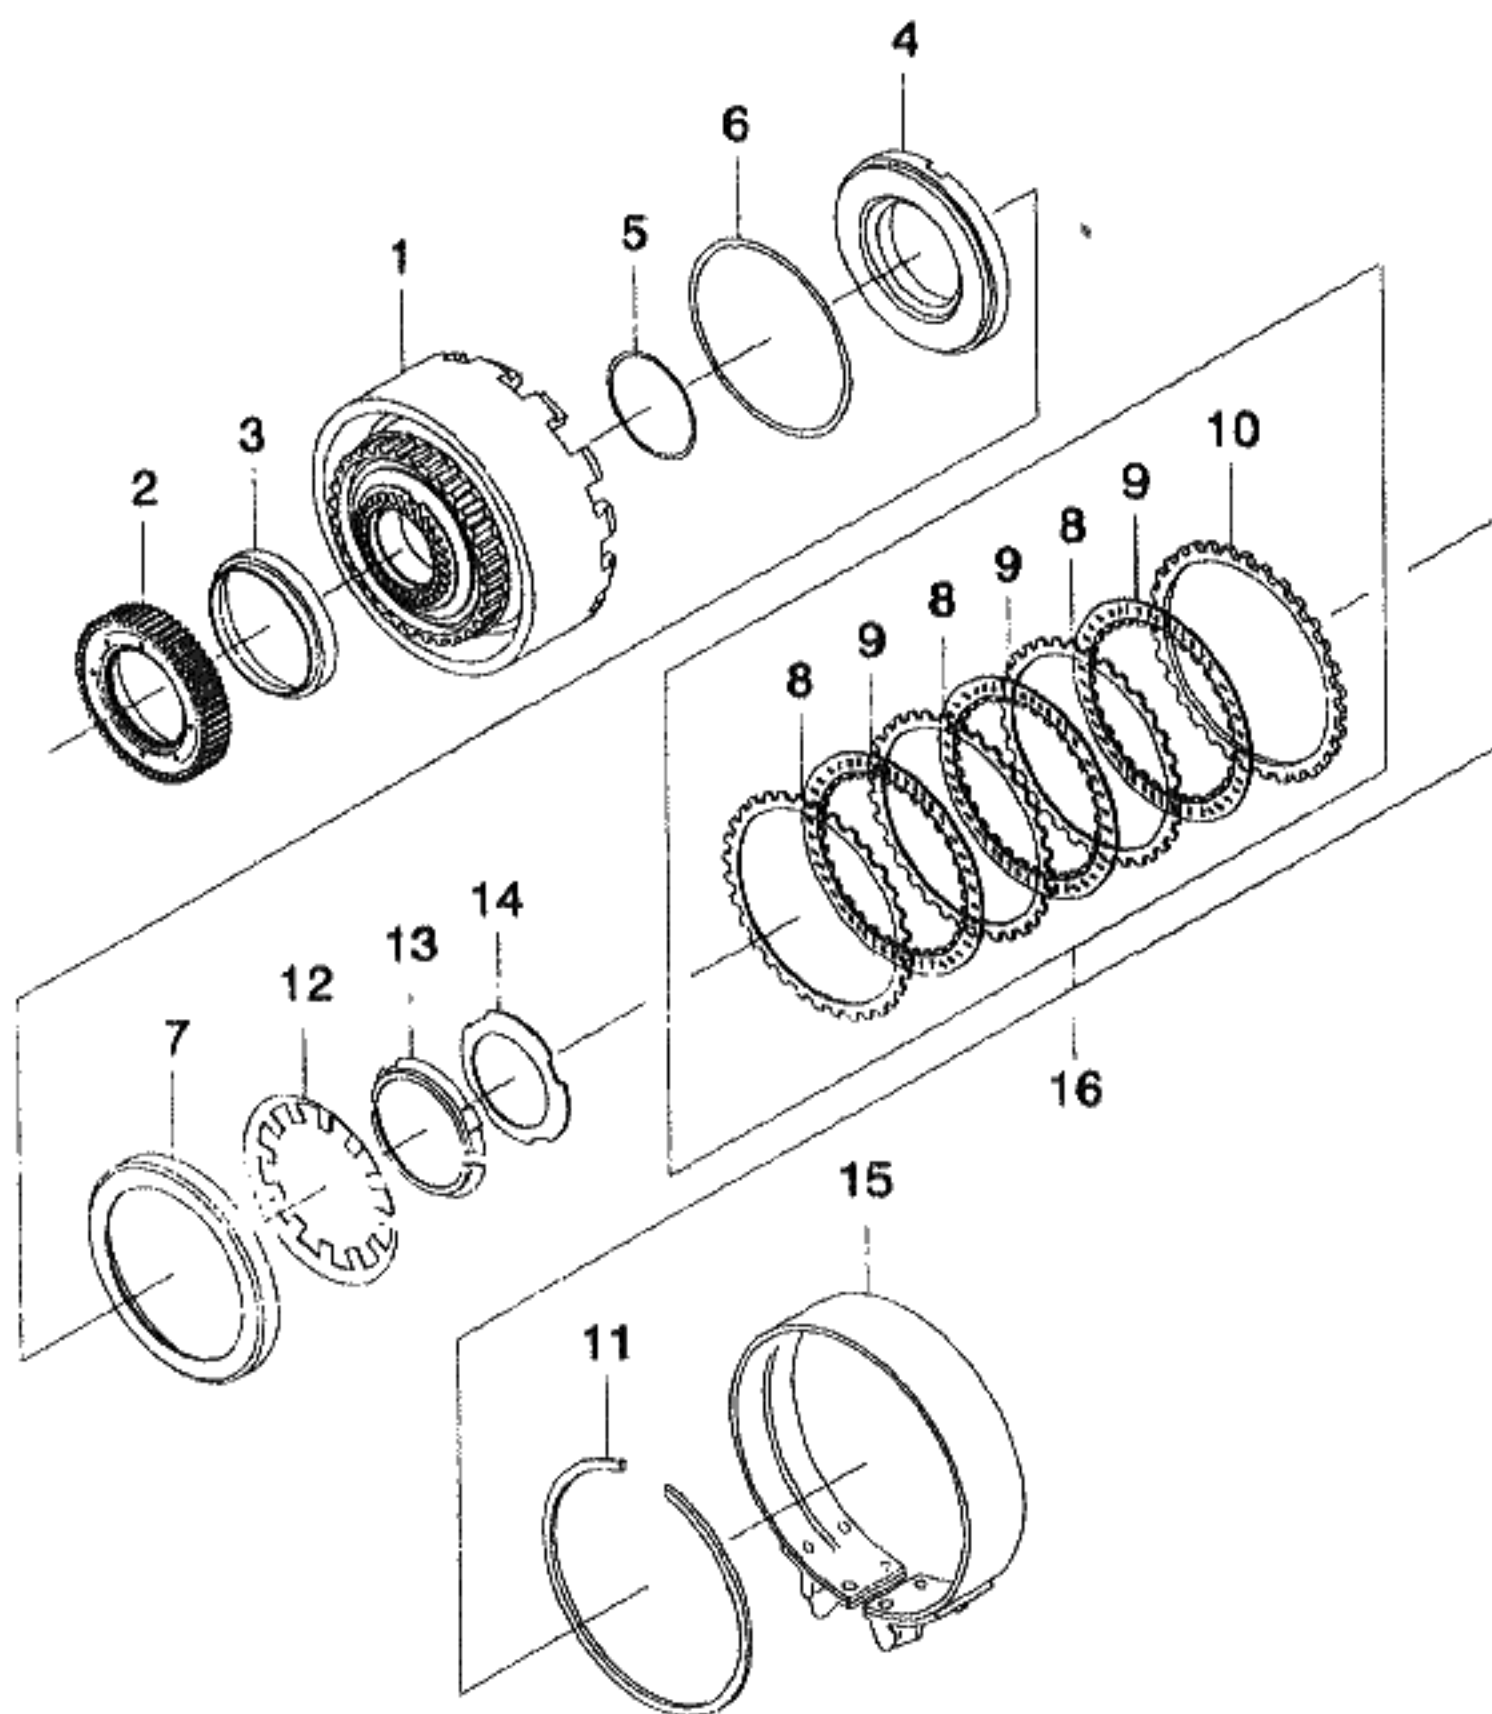

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)CYLINDER A (D)ZYLINDER				(F)CYLINDRE (S)CILINDRO					
	1036231028	A	O	O		1					
	[02]	(E)FREE WHEEL A (D)PLATTE				(F)PLAQUE (S)PLACA					
	1036231041	A	O	O		1					
	[03]	(E)RING-STOP (D)RING				(F)ANNEAU (S)ANILLO					
	1036331087	A	O	O		1					
	[04]	(E)PISTON (D)KOLBEN				(F)PISTON (S)PISTON					
	1036231022	A	O	O		1					
	[05]	(E)O RING (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	0734313011	A	O	O		1					
	[06]	(E)O RING (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	0734313019	A	O	O		1					
	[07]	(E)PLATE-PRESSURE (D)PLATTE,DRUCK				(F)PLAQUE-PRESSION (S)PLACA-PRESION					
	1036331081	A	O	O		1					
	[08]	(E)DISC-CLUTCH OUTER (D)KUPPLUNG-DECKEL&DISK				(F)CARTER & DISQUE (S)EMBRAGUE-CUBIERTA Y DISCO					
	1036302015	A	O	O		3				T=1.80	
	[09]	(E)LIN-CLUTCH DISC (D)PLATTE,SCHEIBEN-KUPPLUNG				(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO					
	1036202028	A	O	O		3					
	[10]	(E)DISC-END (D)SCHEIBE				(F)DISQUE (S)DISCO					
	1036302016	A	O	O		1				T=4.50	

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A


CDX = 2.0 DOHC

A = AUTOMATIC T/A

. = COMMON

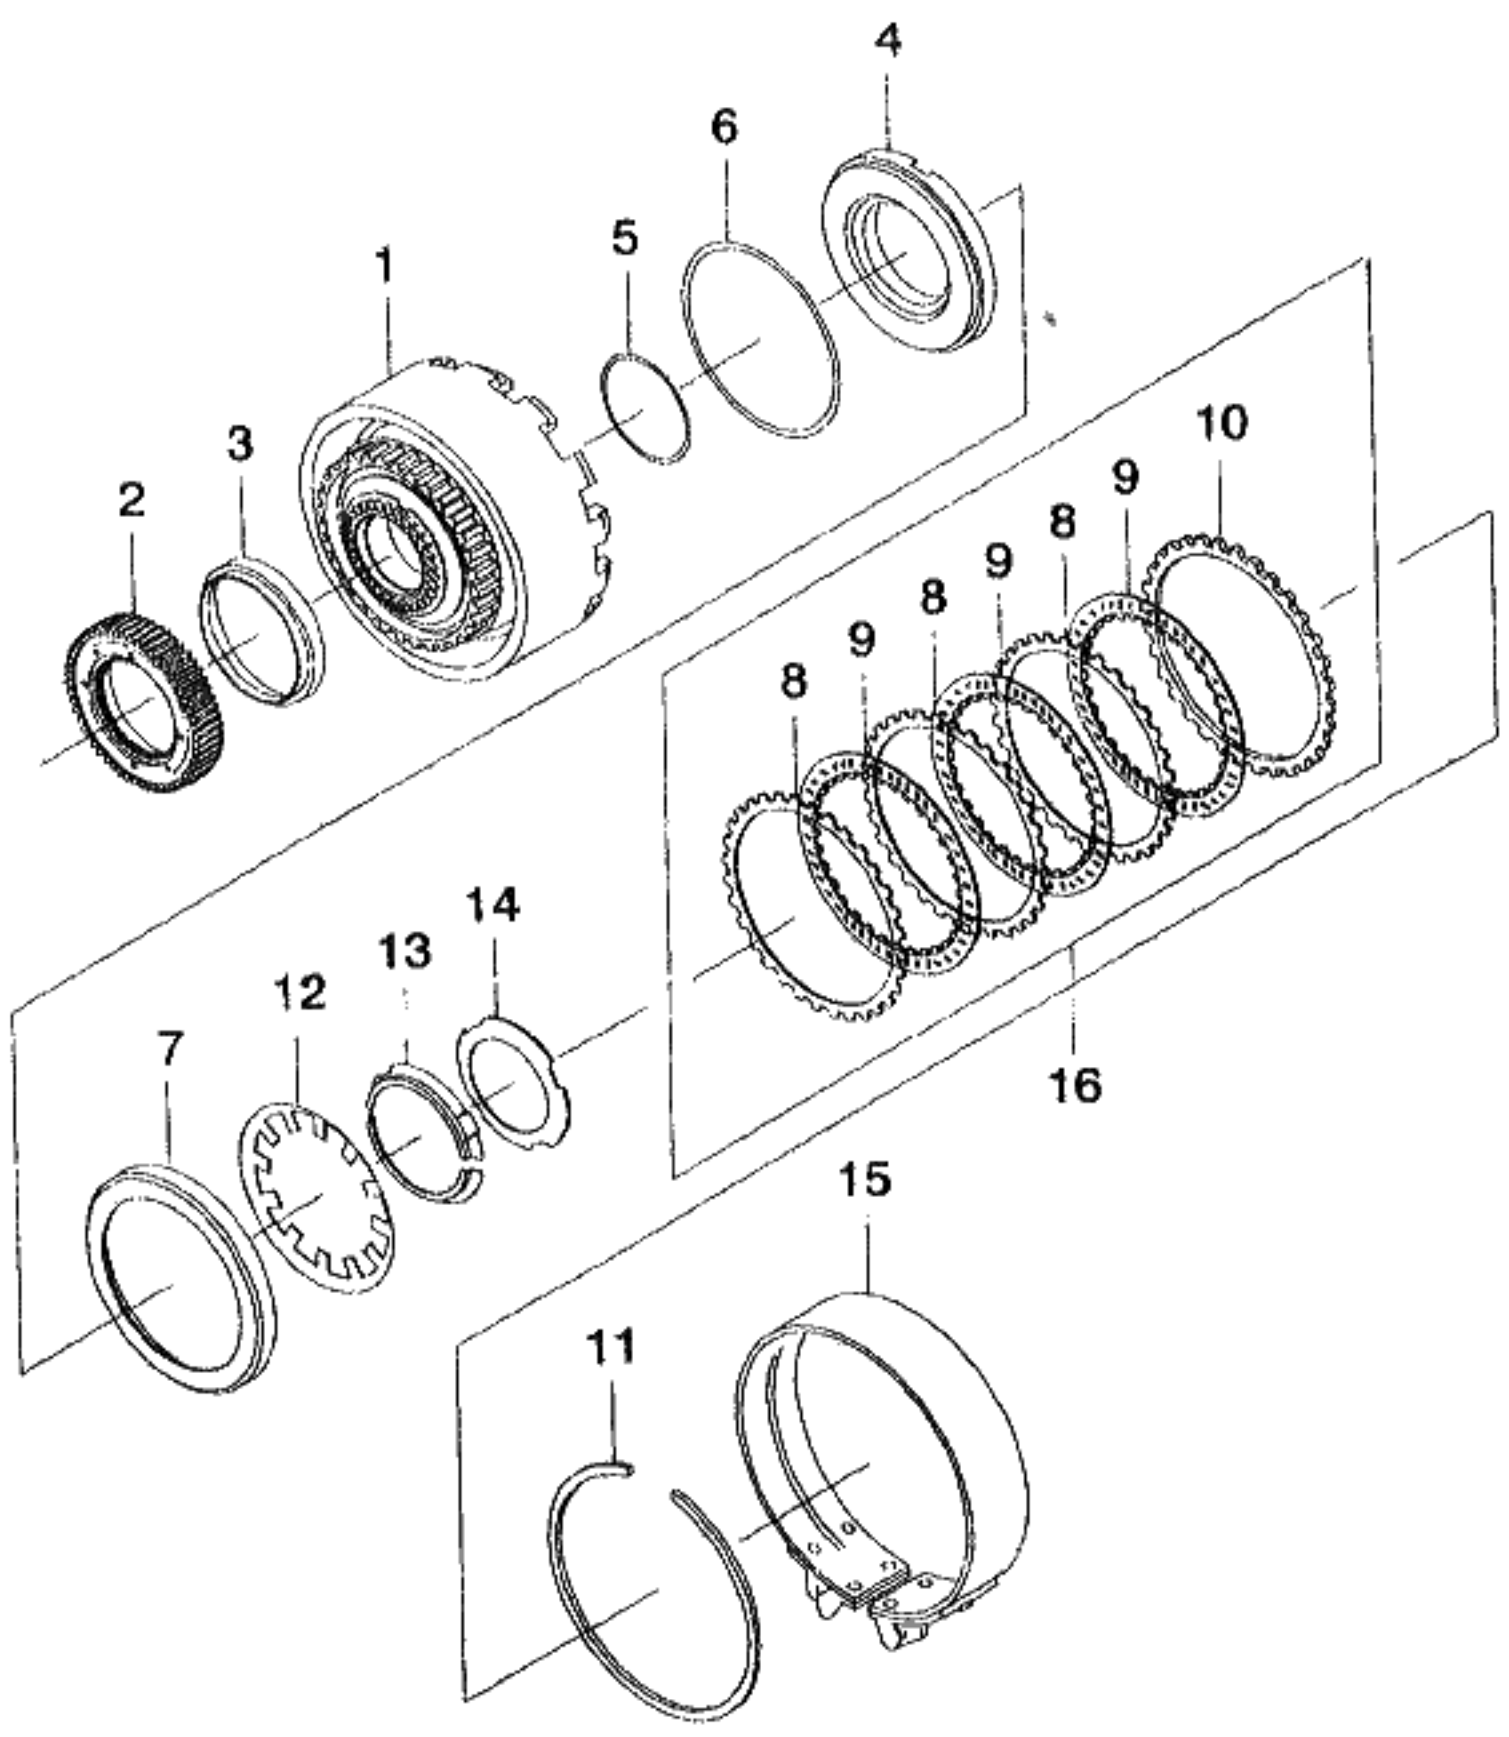


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 0730513211	(E)RING-SNAP (D)RING, STAB DRUCK	A	O	O		1			T=1.40	
	[12] 1036331048	(E)SPRING-CUP (D)FEDERUNG	A	O	O		1				
	[13] 1036331040	(E)RING-STOP (D)RING	A	O	O		1				
	[14] 0501313733	(E)WASHER-THRUST (D)DICHTUNGSRING, SCHUB	A	O	O		1				
	[15] 0501208833	(E)BAND A-BRAKE (D)BAND, BREMSE	A	O	O		1				
	[16] S3530001	(E)B CLUTCH SET (D)'B' KUPPLUNG	A	O	O		1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

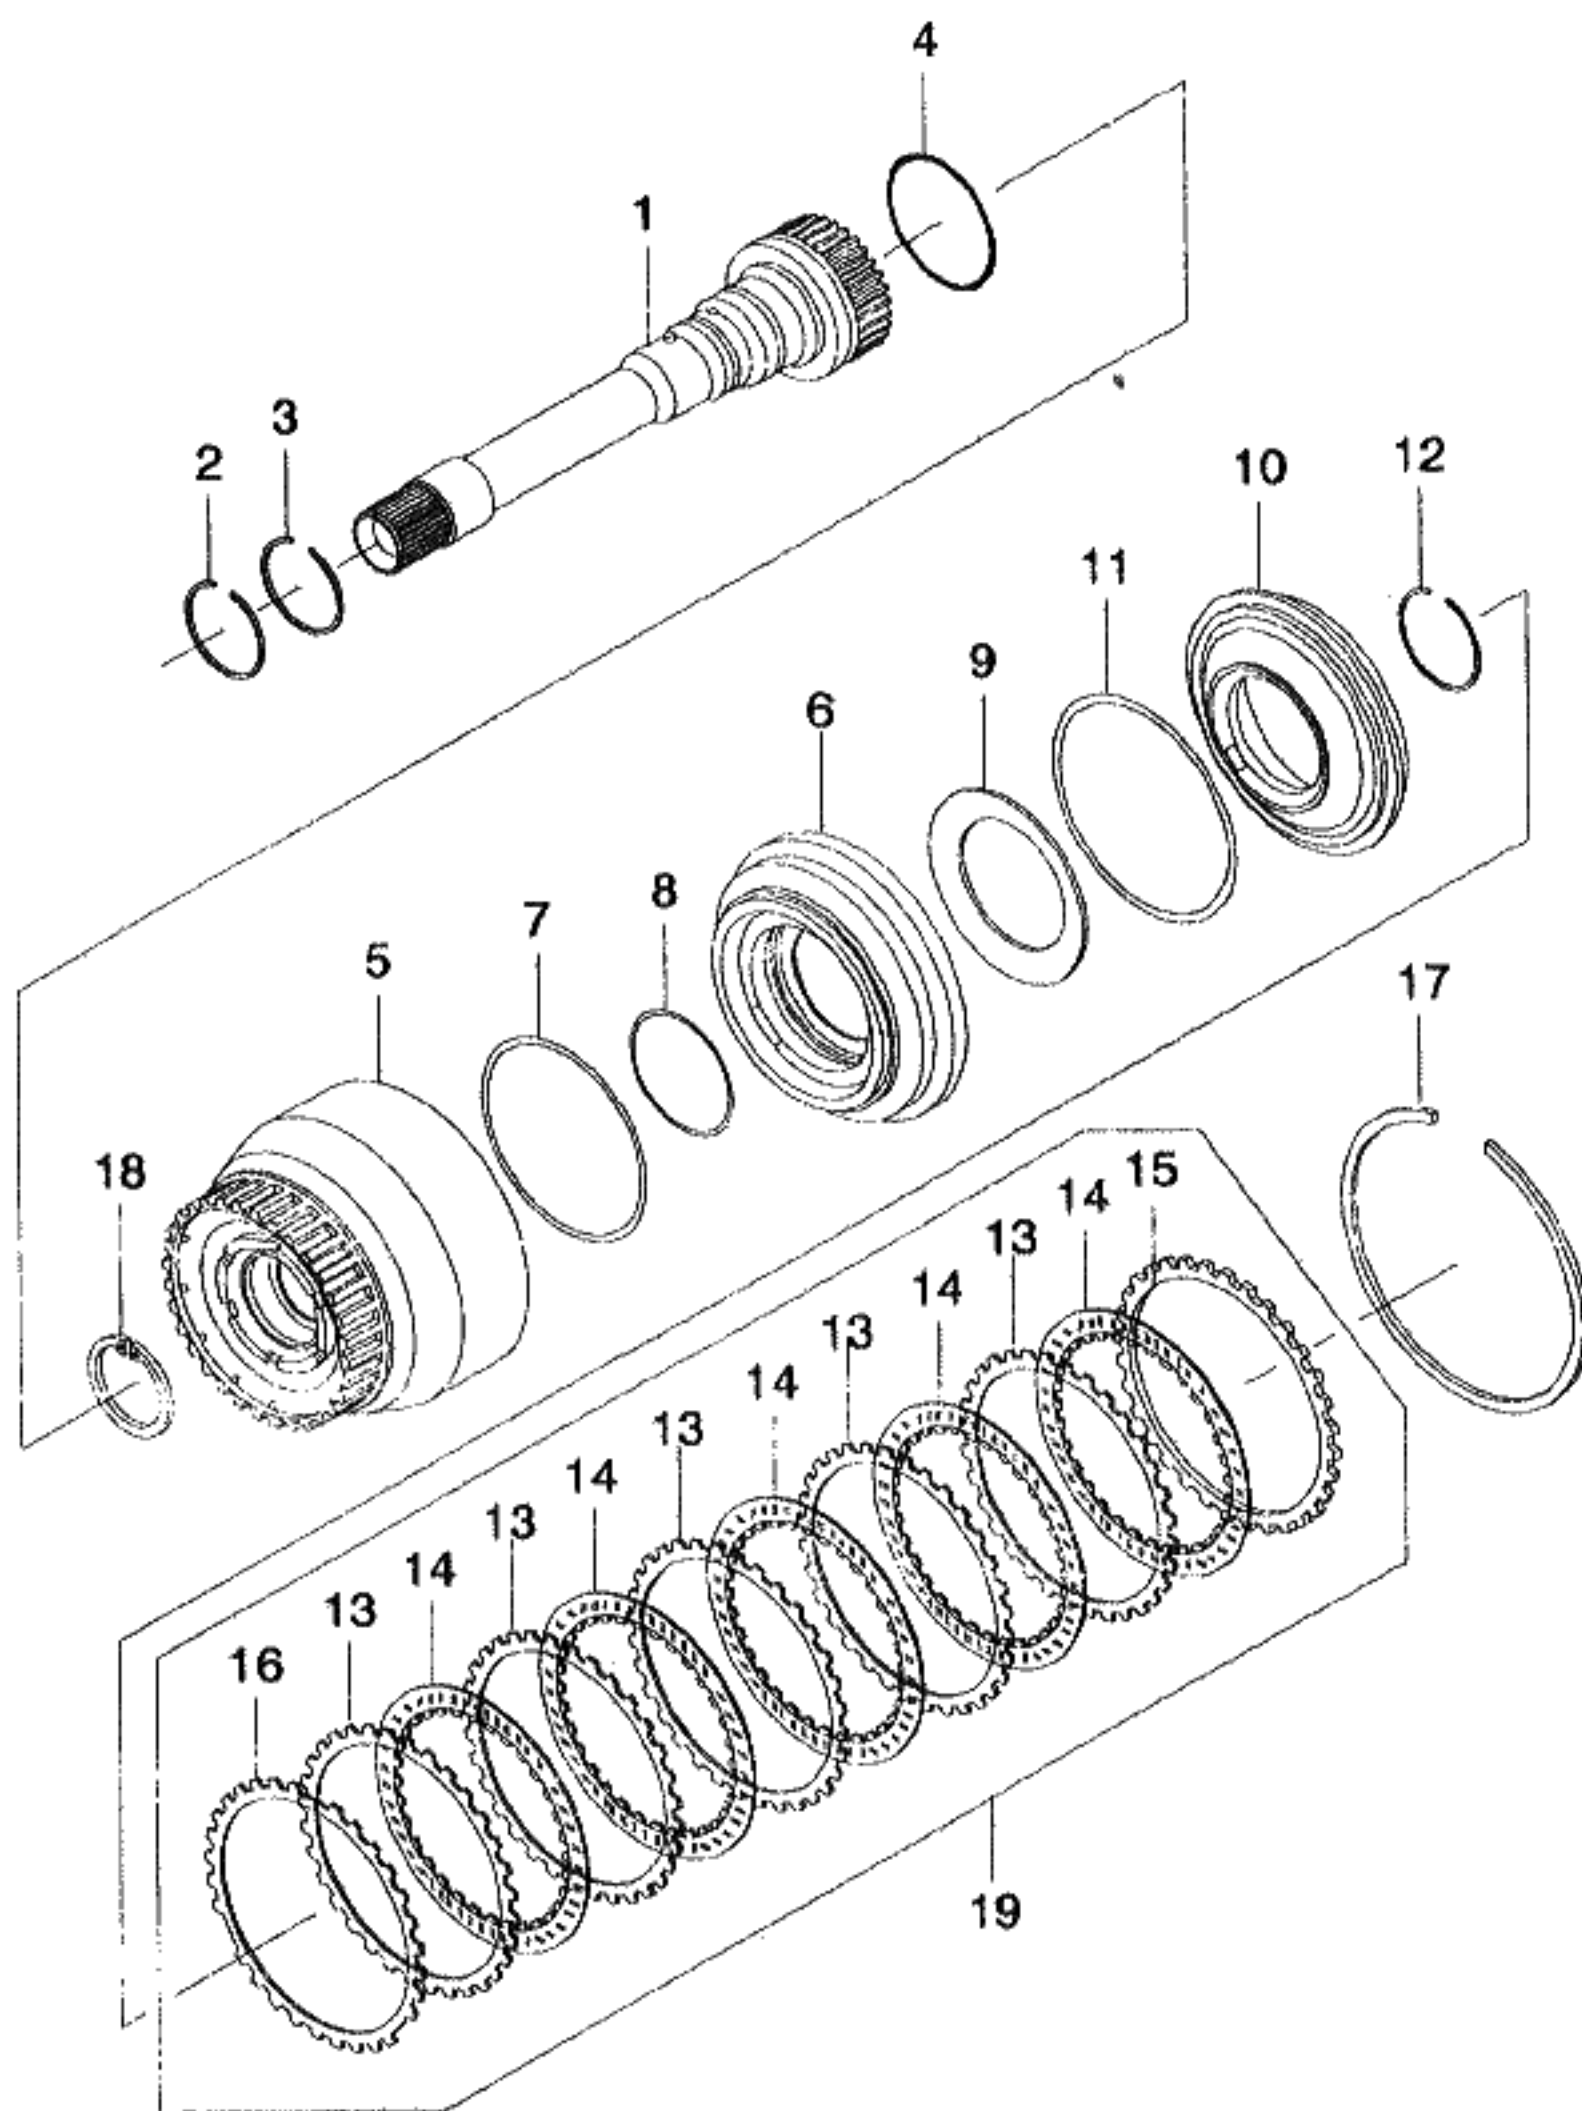



KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 1036202033	(E)SHAFT A-TURBINE (D)SPINDEL A O O				(F)ARBRE (S)EJE 1					
	[02] 0734401160	(E)RING-PISTON (D)RING A O O				(F)ANNEAU (S)ANILLO 1				25.8x28x2.0	
	[03] 0734401146	(E)RING-PISTON (D)RING A O O				(F)ANNEAU (S)ANILLO 1				26.8x29x2.0	
	[04] 0734313068	(E)O RING (D)O RING A O O				(F)JOINT TORIQUE (S)ANILLO EN O 1					
	[05] 1036302062	(E)CYLINDER A (D)ZYLINDER A O O				(F)CYLINDRE (S)CILINDRO 1					
	[06] 1036302035	(E)PISTON (D)KOLBEN A O O				(F)PISTON (S)PISTON 1					
	[07] 0734313027	(E)O RING (D)O RING A O O				(F)JOINT TORIQUE (S)ANILLO EN O 1					
	[08] 0734313025	(E)O RING (D)O RING A O O				(F)JOINT TORIQUE (S)ANILLO EN O 1					
	[09] 1036302043	(E)SPRING-CUP (D)FEDERUNG A O O				(F)RESSORT (S)RESORTE 1					
	[10] 1036302037	(E)OIL DAM (D)STÖPSEL A O O				(F)BOUCHON (S)TAPON 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

3531 INPUT SHAFT & A CLUTCH

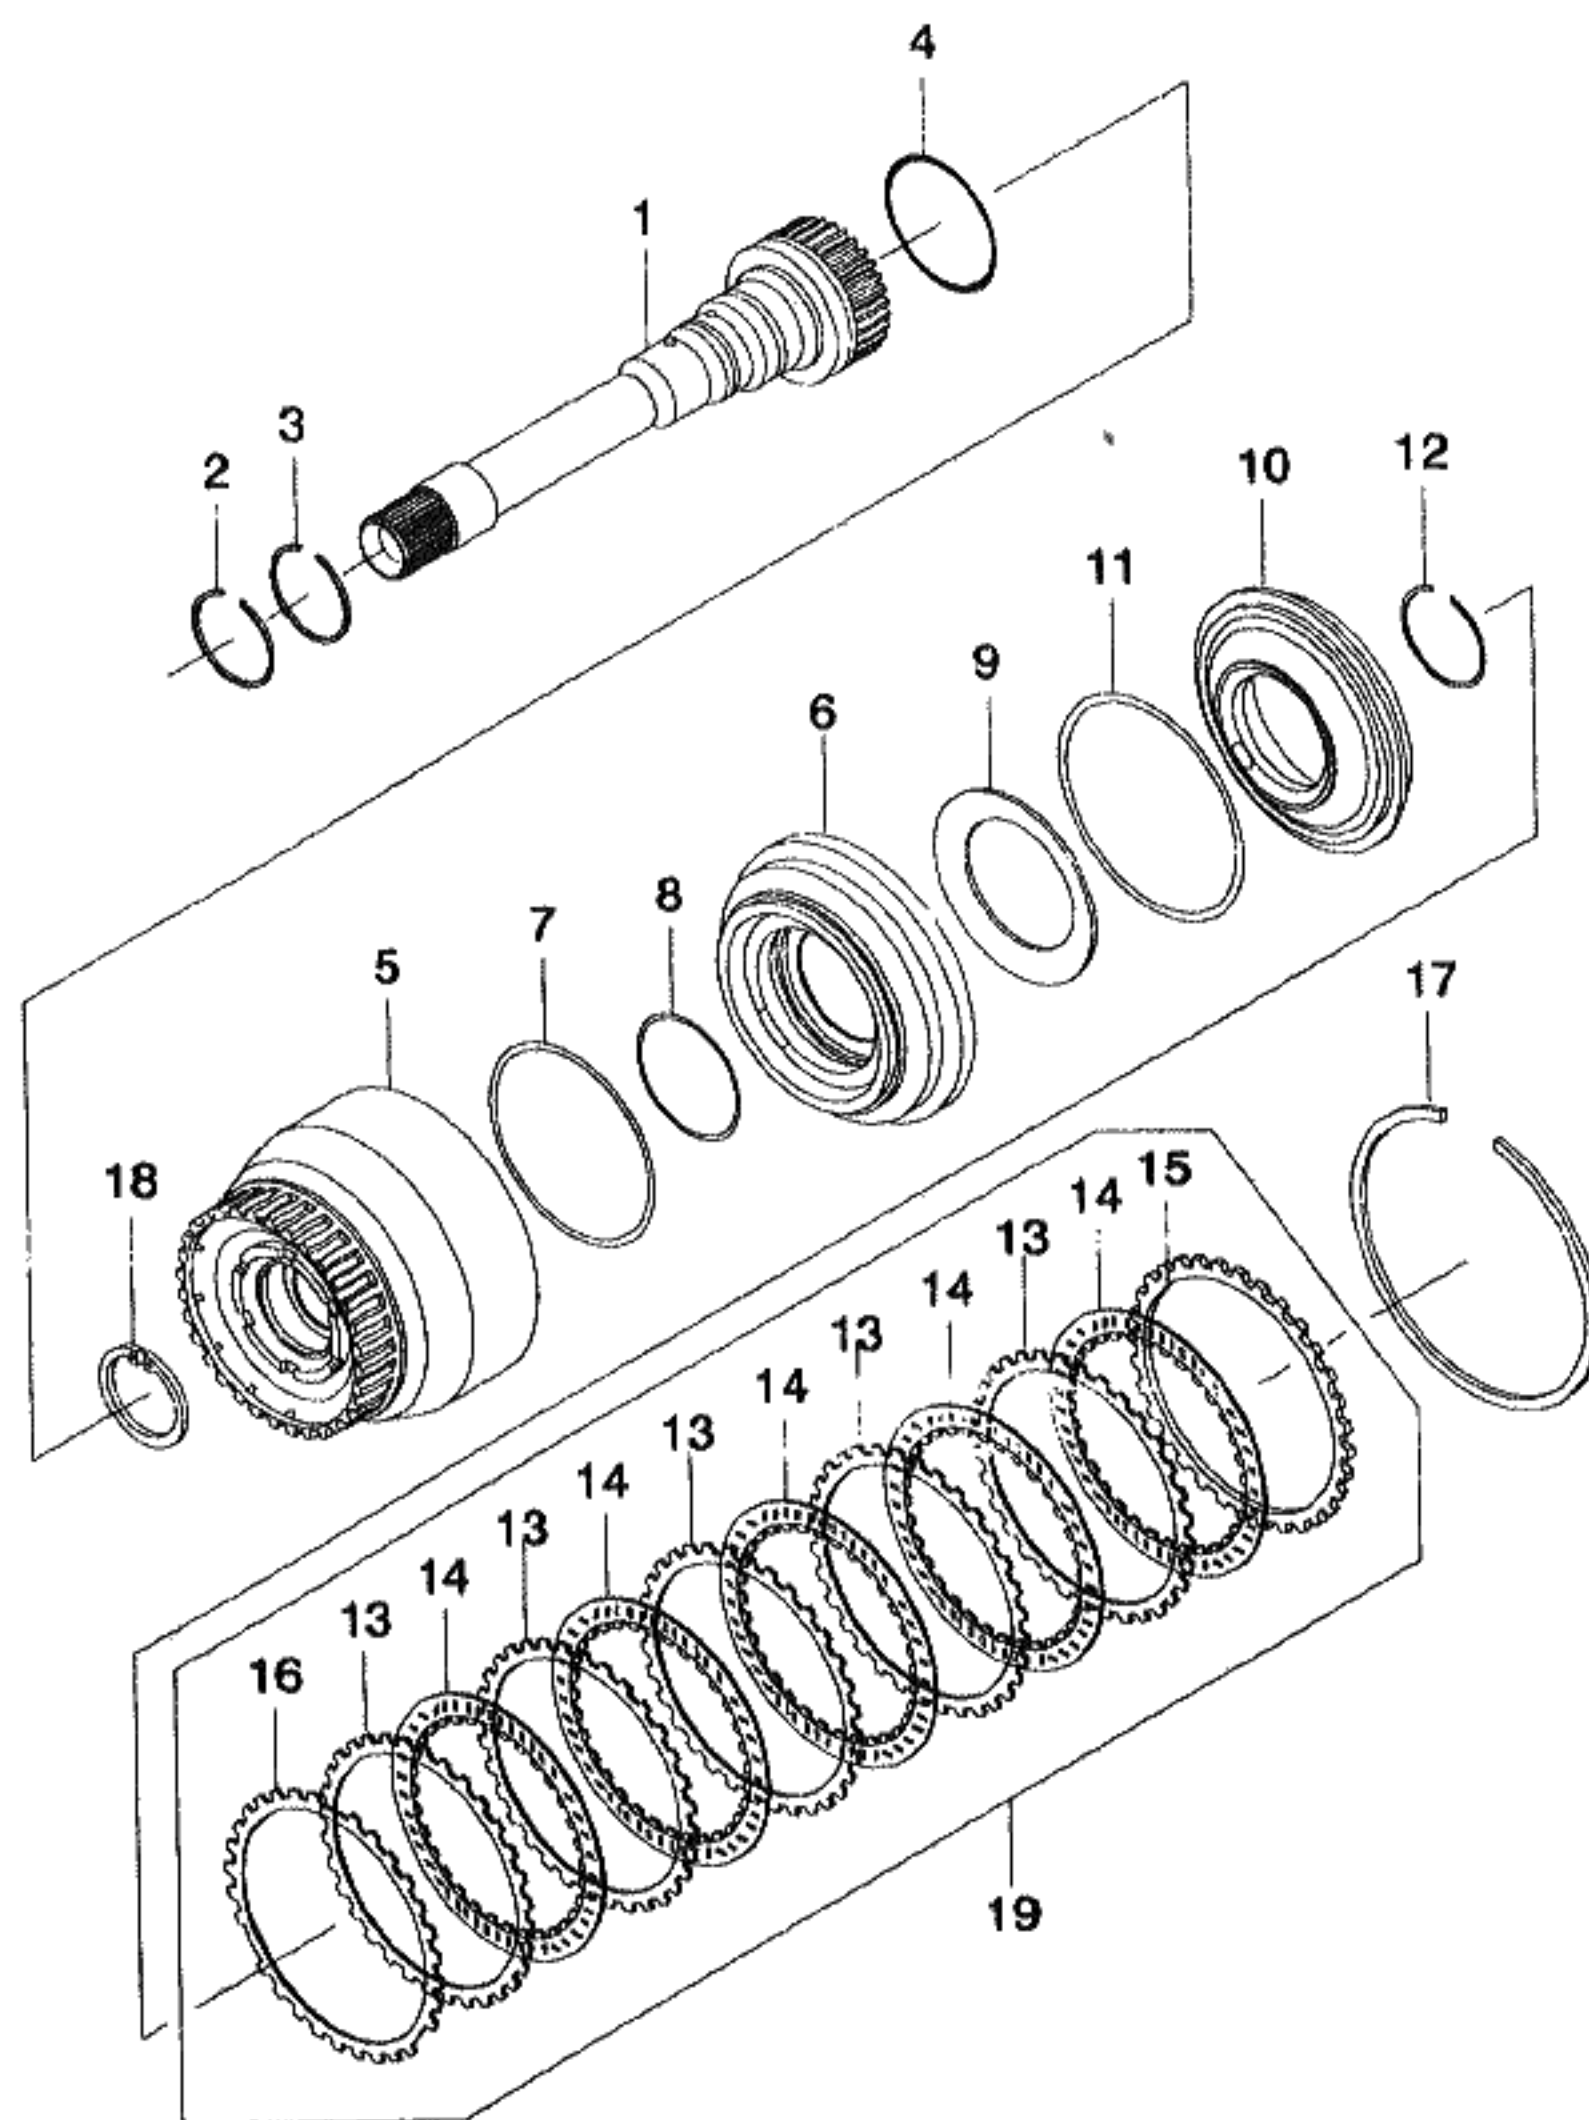


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[11] 0734313019	(E)O RING (D)O RING A O O				(F)JOINT TORIQUE (S)ANILLO EN O 1						
	[12] 0730513341	(E)RING-SNAP (D)RING,STAB DRUCK A O O				(F)ANNEAU-PRESSION D'ARBRE (S)ANILLO-DE PRESION 1			T=1.12			
	[13] 1036302015	(E)DISC-CLUTCH OUTER (D)KUPPLUNG-DECKEL&DISK A O O				(F)CARTER & DISQUE (S)EMBRAGUE-CUBIERTA Y DISCO 5			T=1.80			
	[14] 1036202018	(E)LIN-CLUTCH DISC (D)PLATTE,SCHEIBEN-KUPPLUNG A O O				(F)PLAQUE-EMBAYAGE A DISQUE (S)PLACA-EMBAGUE DISCO 5						
	[15] 1036302016	(E)DISC END (D)SCHEIBE A O O				(F)DISQUE (S)DISCO 1			T=4.50			
	[16] 1036302041	(E)SPRING-CLUTCH DISC (D)FEDERUNG A O O				(F)RESSORT (S)RESORTE 1						
	[17] 0730513224	(E)RING-SNAP (D)RING,STAB DRUCK A O O				(F)ANNEAU-PRESSION D'ARBRE (S)ANILLO-DE PRESION 1			T=2.80			
	0730513259	A O O				1			T=2.70			
	0730513223	A O O				1			T=2.60			
	0730513258	A O O				1			T=2.50			
	0730513222	A O O				1			T=2.40			
	0730513257	A O O				1			T=2.30			
	0730513221	A O O				1			T=2.20			
	0730513256	A O O				1			T=2.10			
	0730513220	A O O				1			T=2.00			
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

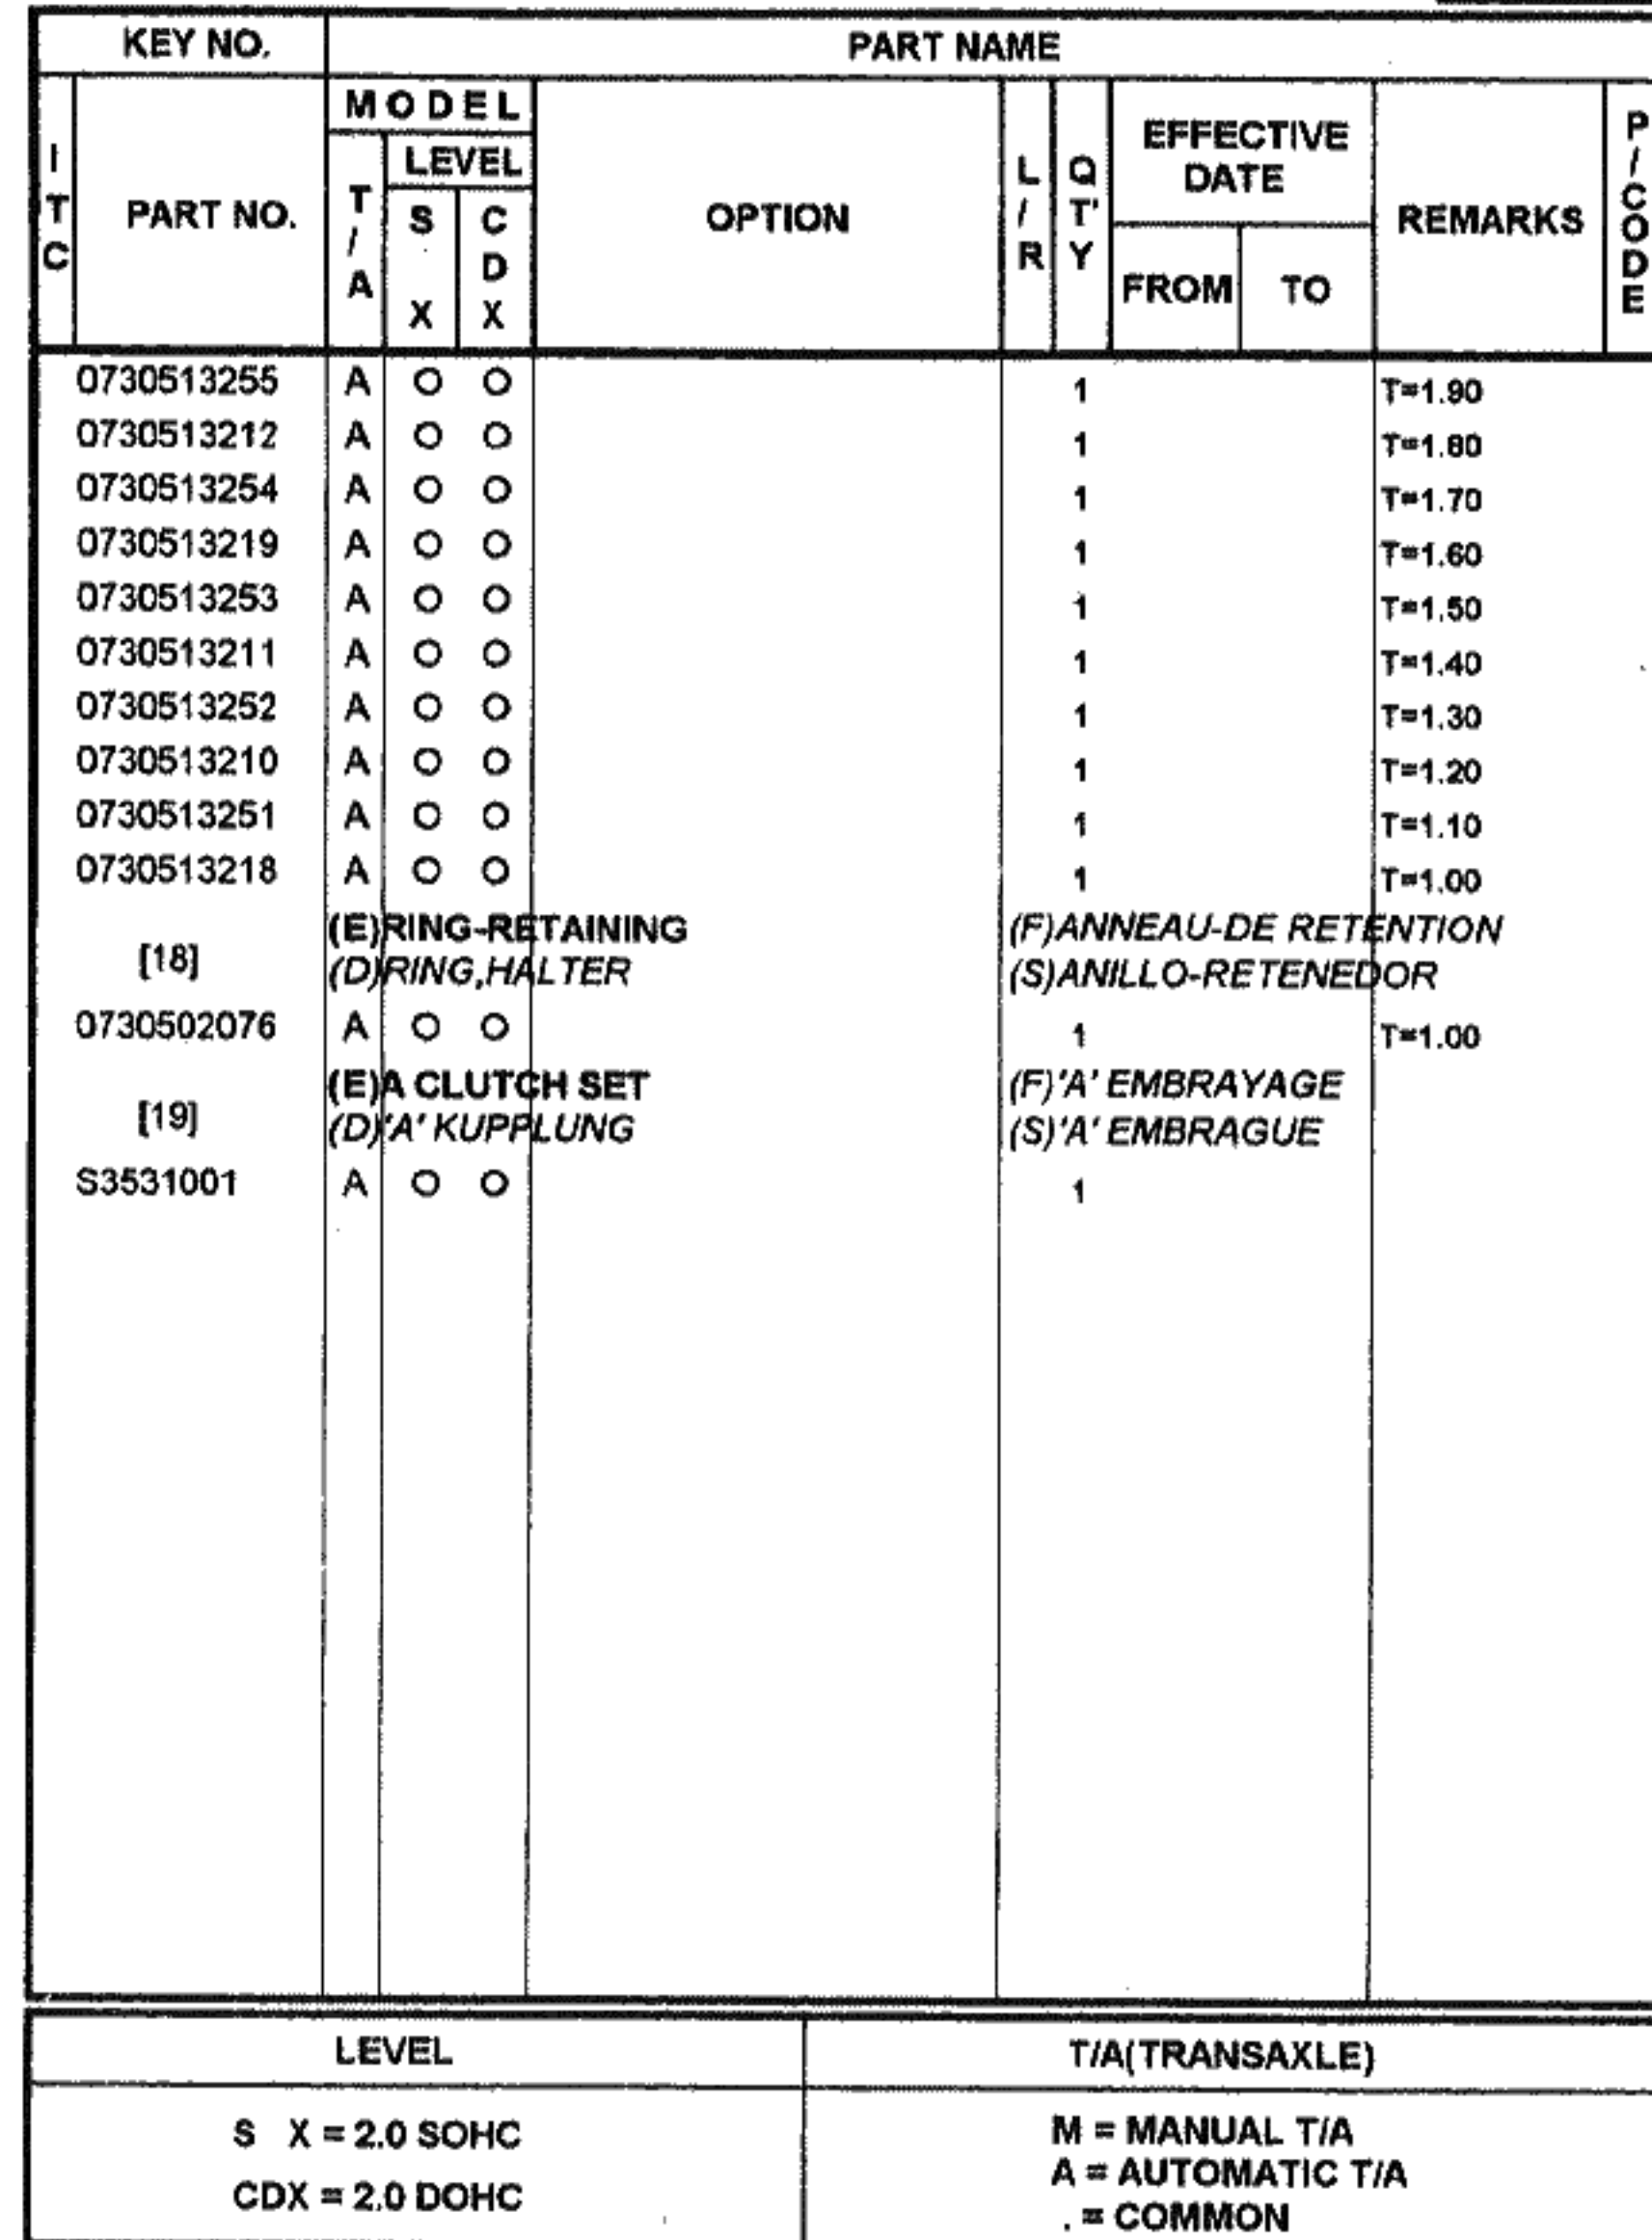


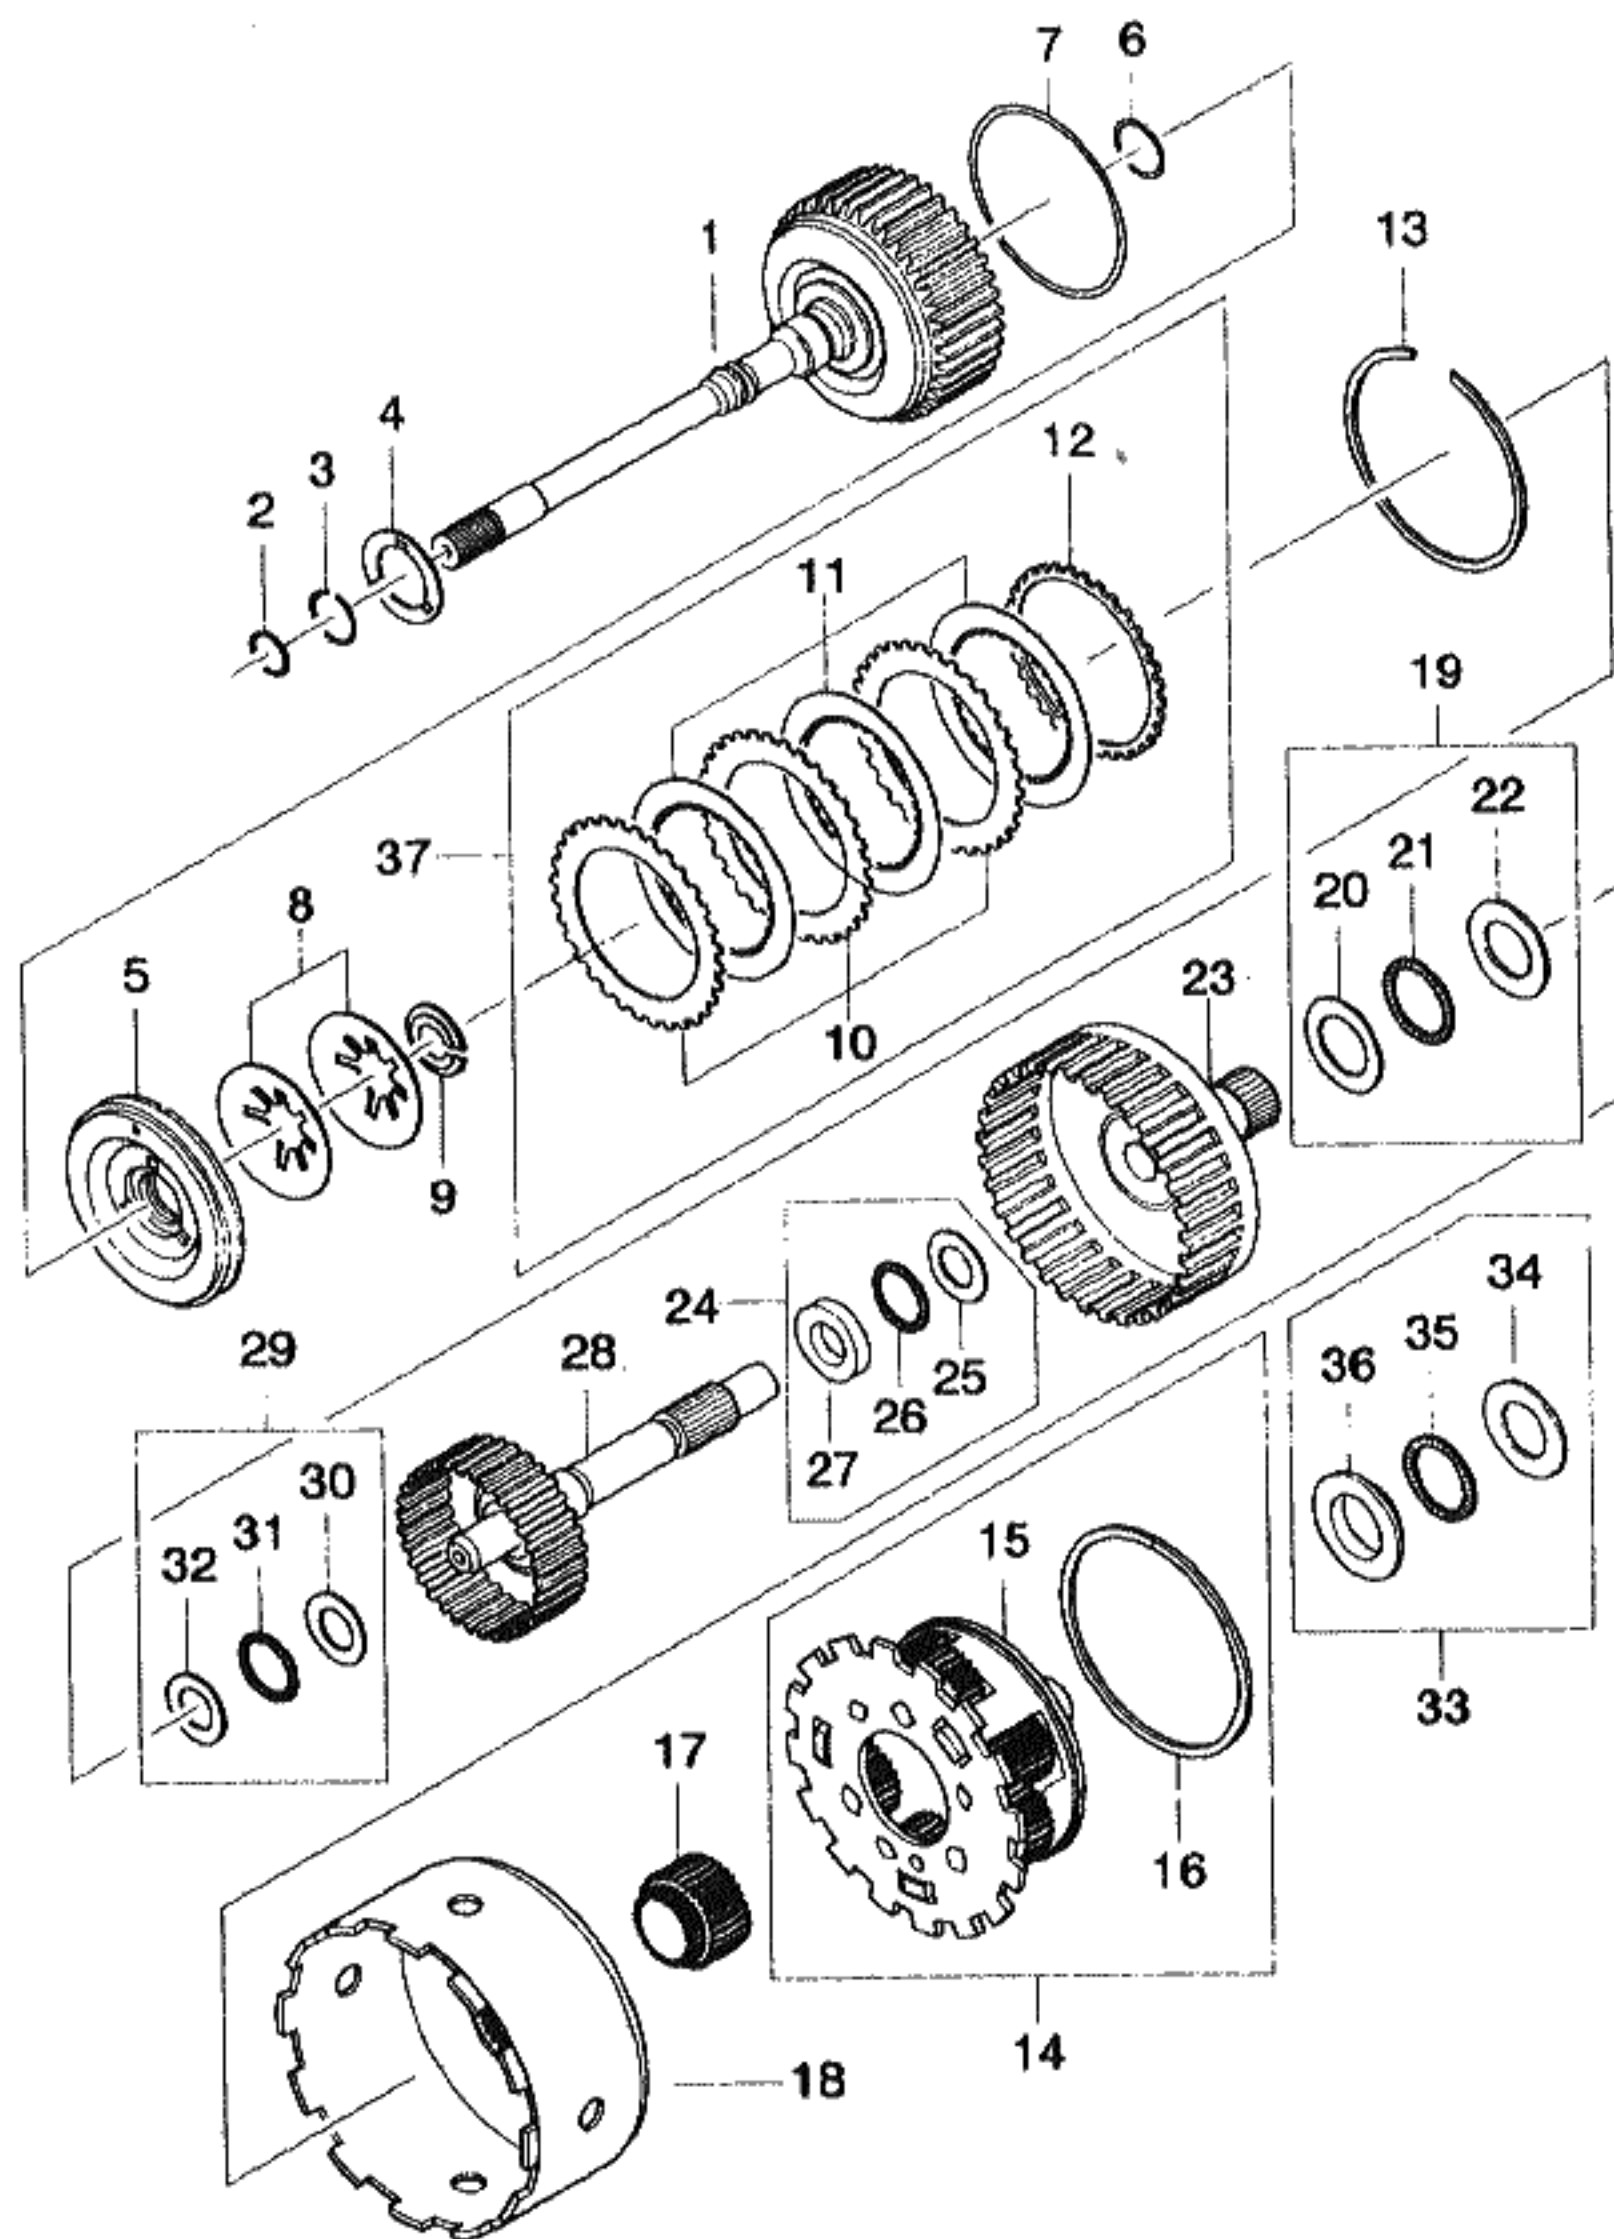


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 1036230049	(E)SHAFT A-MOTOR (D)SPINDEL A	O	O		(F)ARBRE (S)EJE 1					
	[02] 0501309031	(E)RING-PISTON (D)RING A	O	O		(F)ANNEAU (S)ANILLO 1					
	[03] 0734401147	(E)RING-PISTON (D)RING A	O	O		(F)ANNEAU (S)ANILLO 1				23.8x26x2.0	
	[04] 0501312421	(E)BUSH (D)LAGERFUTTER A	O	O		(F)COUSSINET (S)BUJE 1					
	[05] 1036230058	(E)PISTON (D)KOLBEN A	O	O		(F)PISTON (S)PISTON 1					
	[06] 0734313020	(E)O RING (D)O RING A	O	O		(F)JOINT TORIQUE (S)ANILLO EN O 1					
	[07] 0734313008	(E)O RING (D)O RING A	O	O		(F)JOINT TORIQUE (S)ANILLO EN O 1					
	[08] 1036330015	(E)SPRING-CUP (D)FEDERUNG A	O	O		(F)RESSORT (S)RESORTE 2					
	[09] 1056371009	(E)RING-STOP (D)RING A	O	O		(F)ANNEAU (S)ANILLO 1					
	[10] 1036330036	(E)DISC-CLUTCH OUTER (D)KUPPLUNG-DECKEL&DISK A	O	O		(F)CARTER & DISQUE (S)EMBRAGUE-CUBIERTA Y DISCO 5					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

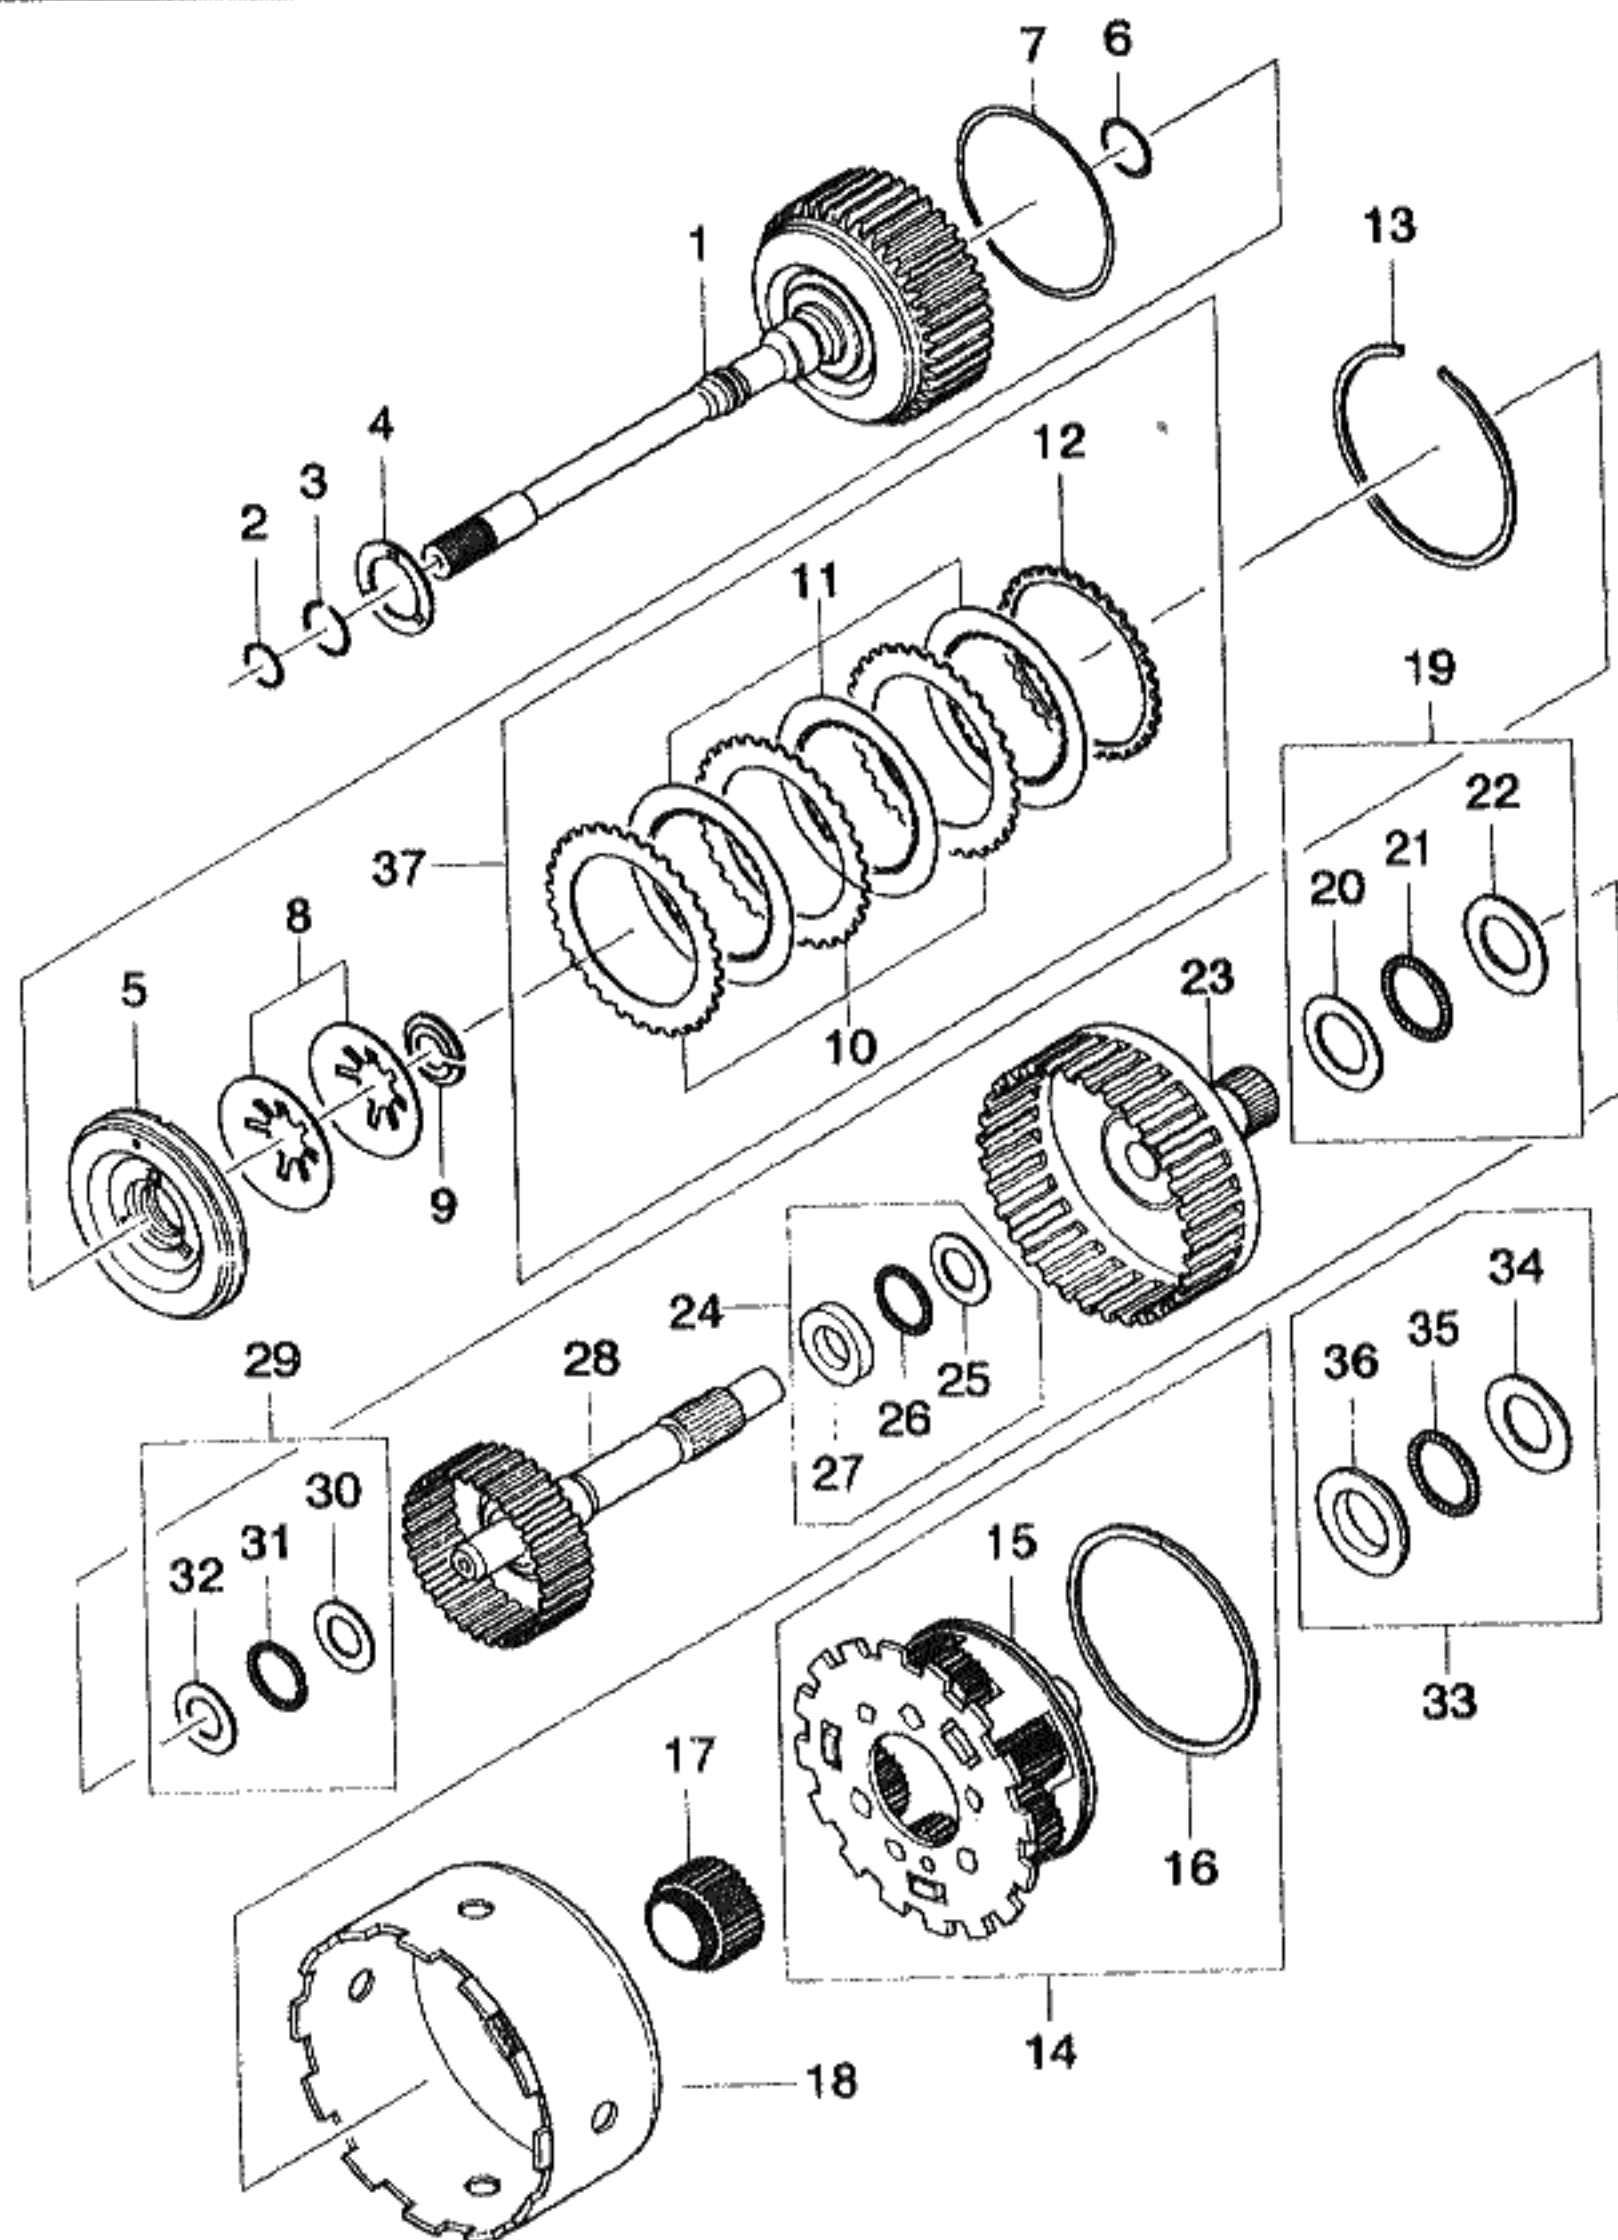


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 1036230034	(E) LIN-CLUTCH DISC (D) PLATTE, SCHEIBEN-KUPPLUNG	A	O	O		5			(F) PLAQUE-EMBRAYAGE A DISQUE (S) PLACA-EMBRAGUE DISCO	
	[12] 1036330062	(E) DISC END (D) SCHEIBE	A	O	O		1			(F) DISQUE (S) DISCO	
	[13] 0730513548	(E) RING-SNAP (D) RING, STAB DRUCK	A	O	O		1			(F) ANNEAU-PRESSION D'ARBRE (S) ANILLO-DE PRESION	T=1.50
	[14] 1036232031	(E) CARRIER-PLANET (D) GETRIEBE	A	O	O		1			(F) ENGRENAGE (S) ENGRANAJE	
	[15] 1036232025	(E) CARRIER-PLANET (D) GETRIEBE	A	O	O		1			(F) ENGRENAGE (S) ENGRANAJE	
	[16] 0750113011	(E) RING-PISTON (D) RING	A	O	O		1			(F) ANNEAU (S) ANILLO	95x100x2.2
	[17] 1036332061	(E) SUN GEAR A (D) GETRIEBE, SUN	A	O	O		1			(F) ENGRENAGE (S) ENGRANAJE-SOL	Z29
	[18] 1036231029	(E) POT (D) TOPF	A	O	O		1			(F) POT (S) CAZUELA	
	[19] 1036232036	(E) BEARING SET (D) KUGELLAGER	A	O	O		1			(F) ROULEMENT (S) COJINETE	
	[20] 0635290066	(E) WASHER-AXIAL (D) DICHTUNGSRING	A	O	O		1			(F) RONDELLE (S) ARANDELA	
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

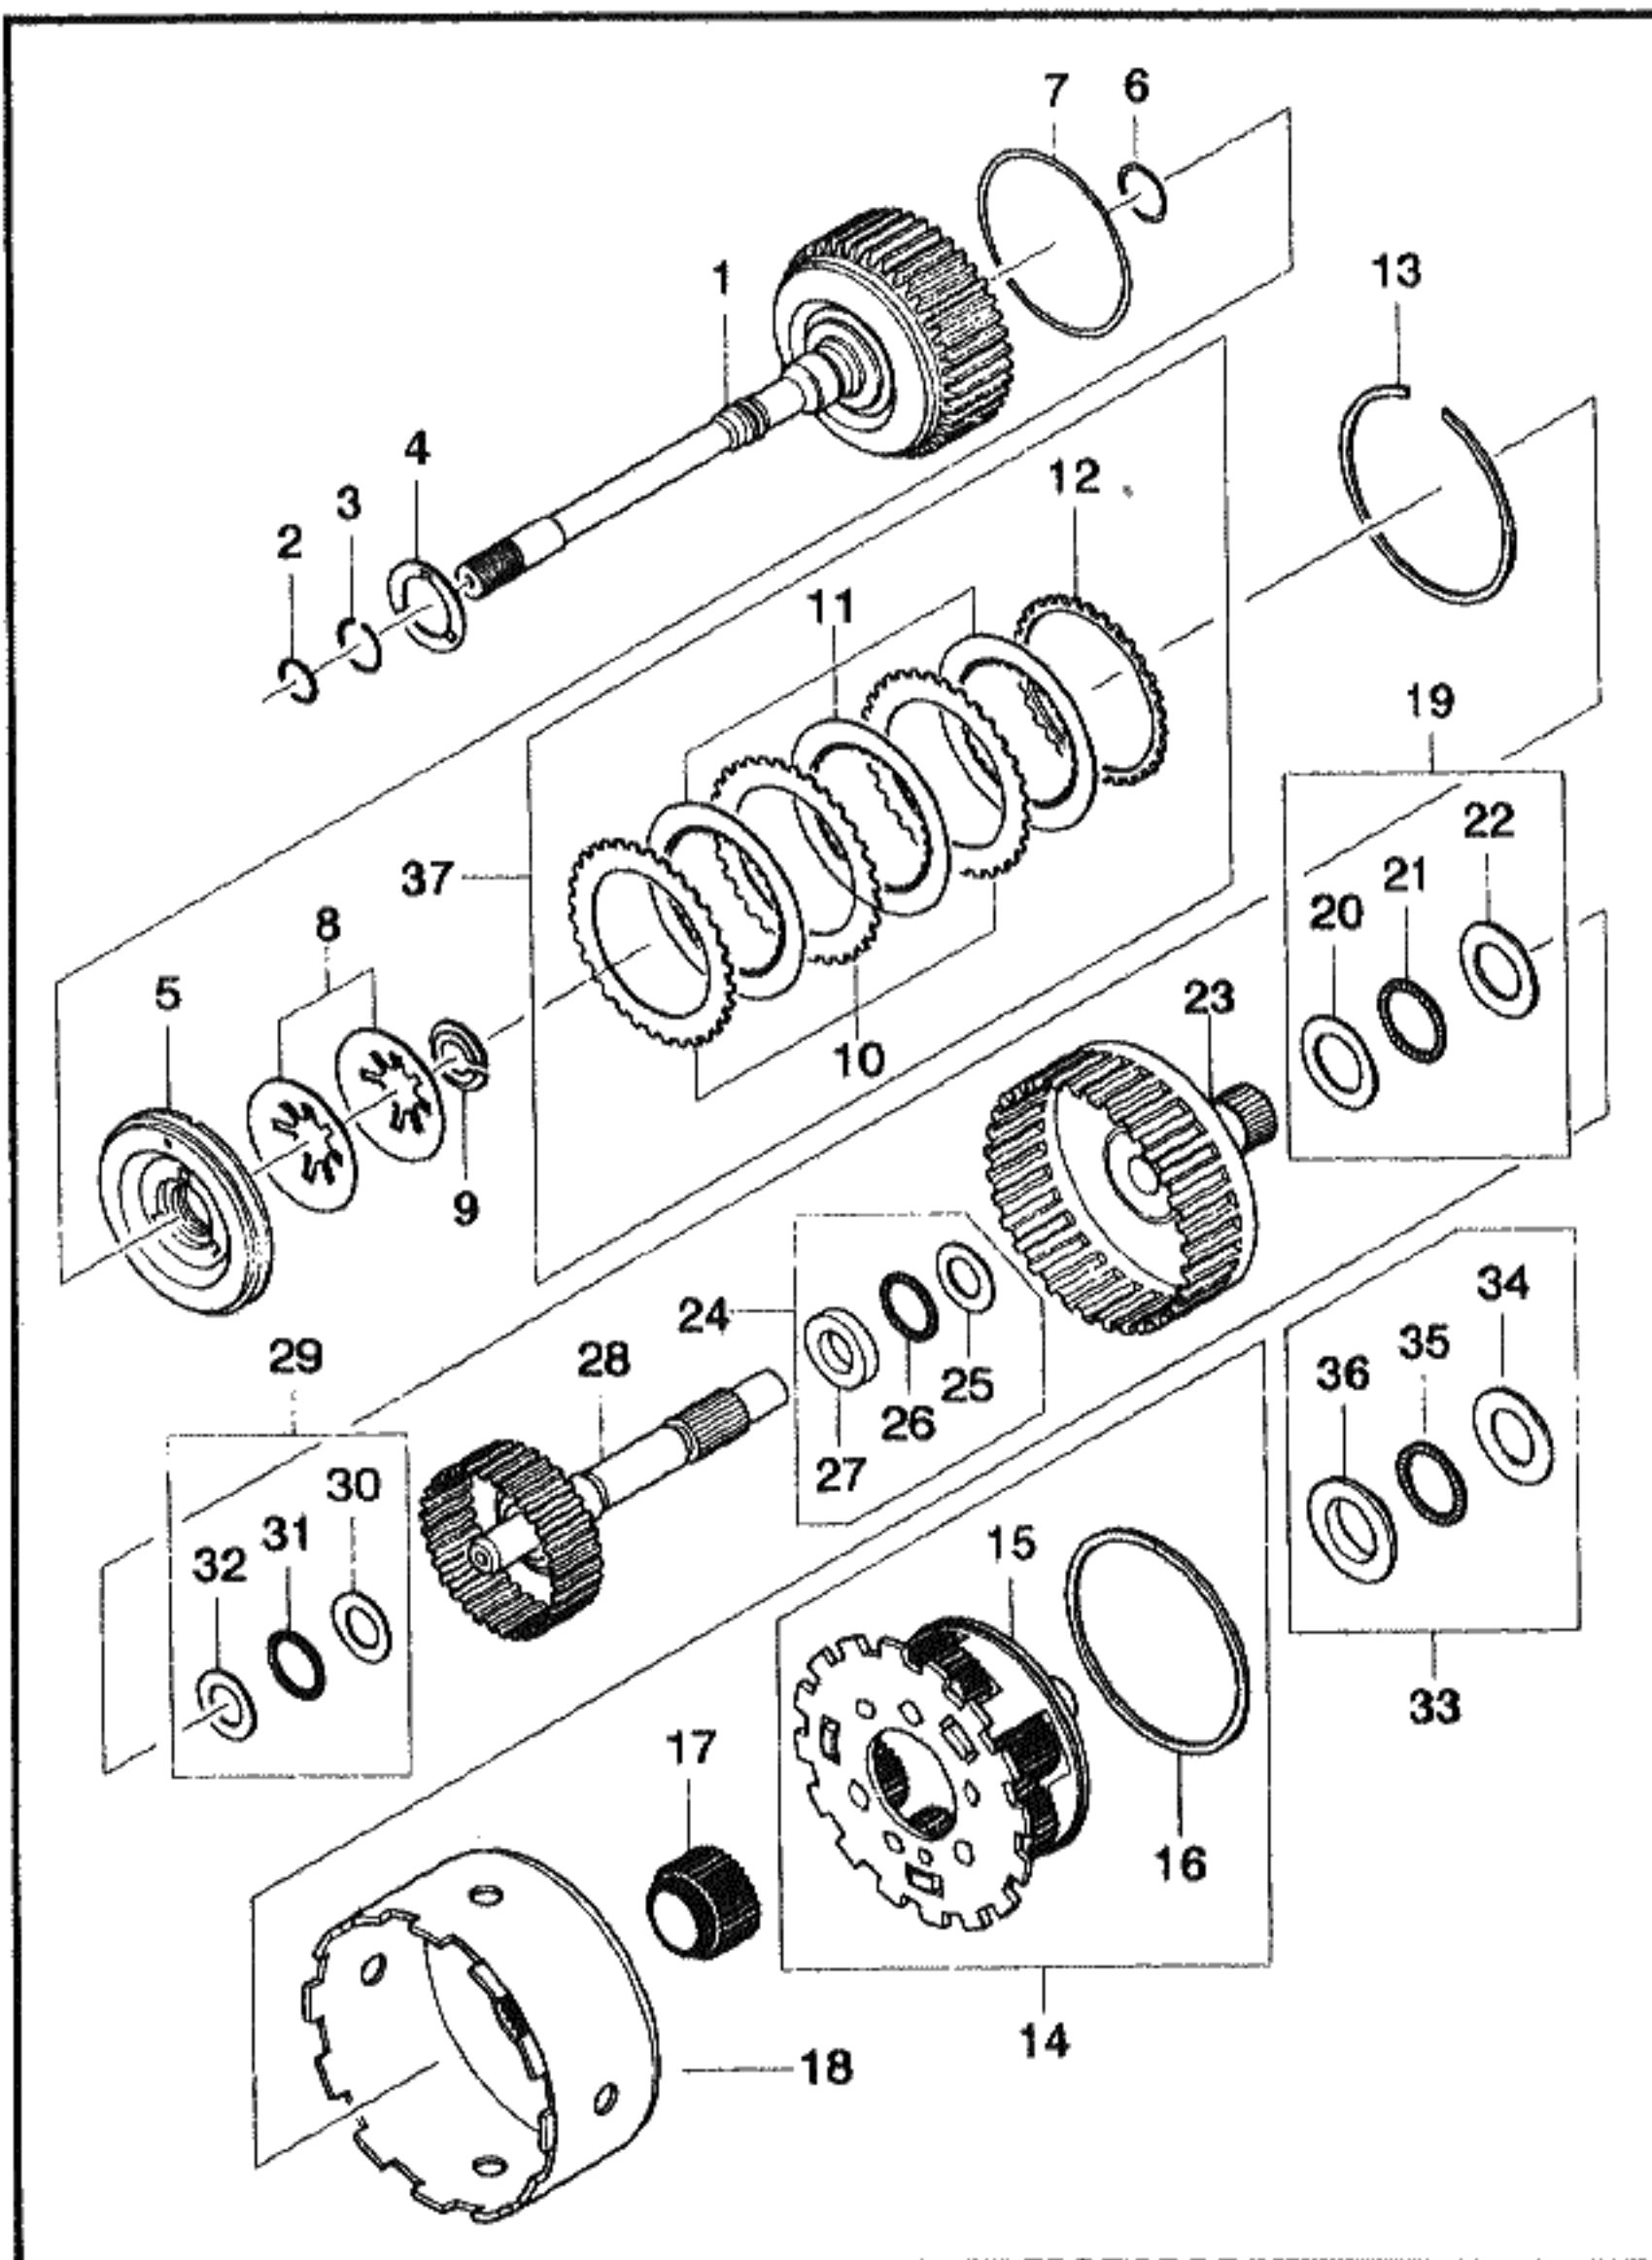

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[21] 0735321284	(E) NEEDLE CAGE-AXIAL (D) KÄFIG NADEL A	O	O		(F) CAGE-AIGUILLE (S) JAULA-AGUJA 1				25.4x39.2x2.5	
	[22] 0501313735	(E) WASHER-AXIAL (D) DICHTUNGSRING A	O	O		(F) RONDELLE (S) ARANDELA 1					
	[23] 1036202035	(E) SHAFT-SUN GEAR (D) SPINDEL A	O	O		(F) ARBRE (S) EJE 1					
	[24] 1036232034	(E) BEARING SET (D) KUGELLAGER A	O	O		(F) ROULEMENT (S) COJINETE 1					
	[25] 0501313730	(E) WASHER-AXIAL (D) DICHTUNGSRING A	O	O		(F) RONDELLE (S) ARANDELA 1					
	[26] 0735321283	(E) NEEDLE CAGE-AXIAL (D) KÄFIG NADEL A	O	O		(F) CAGE-AIGUILLE (S) JAULA-AGUJA 1				18.0x36.0x2.5	
	[27] 0501313672	(E) DISC-ANGLE (D) SCHEIBE A	O	O		(F) DISQUE (S) DISCO 1					
	[28] 1036230054	(E) SHAFT A-INTERM (D) SPINDEL A	O	O		(F) ARBRE (S) EJE 1					
	[29] 1056232099	(E) BEARING SET (D) KUGELLAGER A	O	O		(F) ROULEMENT (S) COJINETE 1					
	[30] 0635290065	(E) WASHER-AXIAL (D) DICHTUNGSRING A	O	O		(F) RONDELLE (S) ARANDELA 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

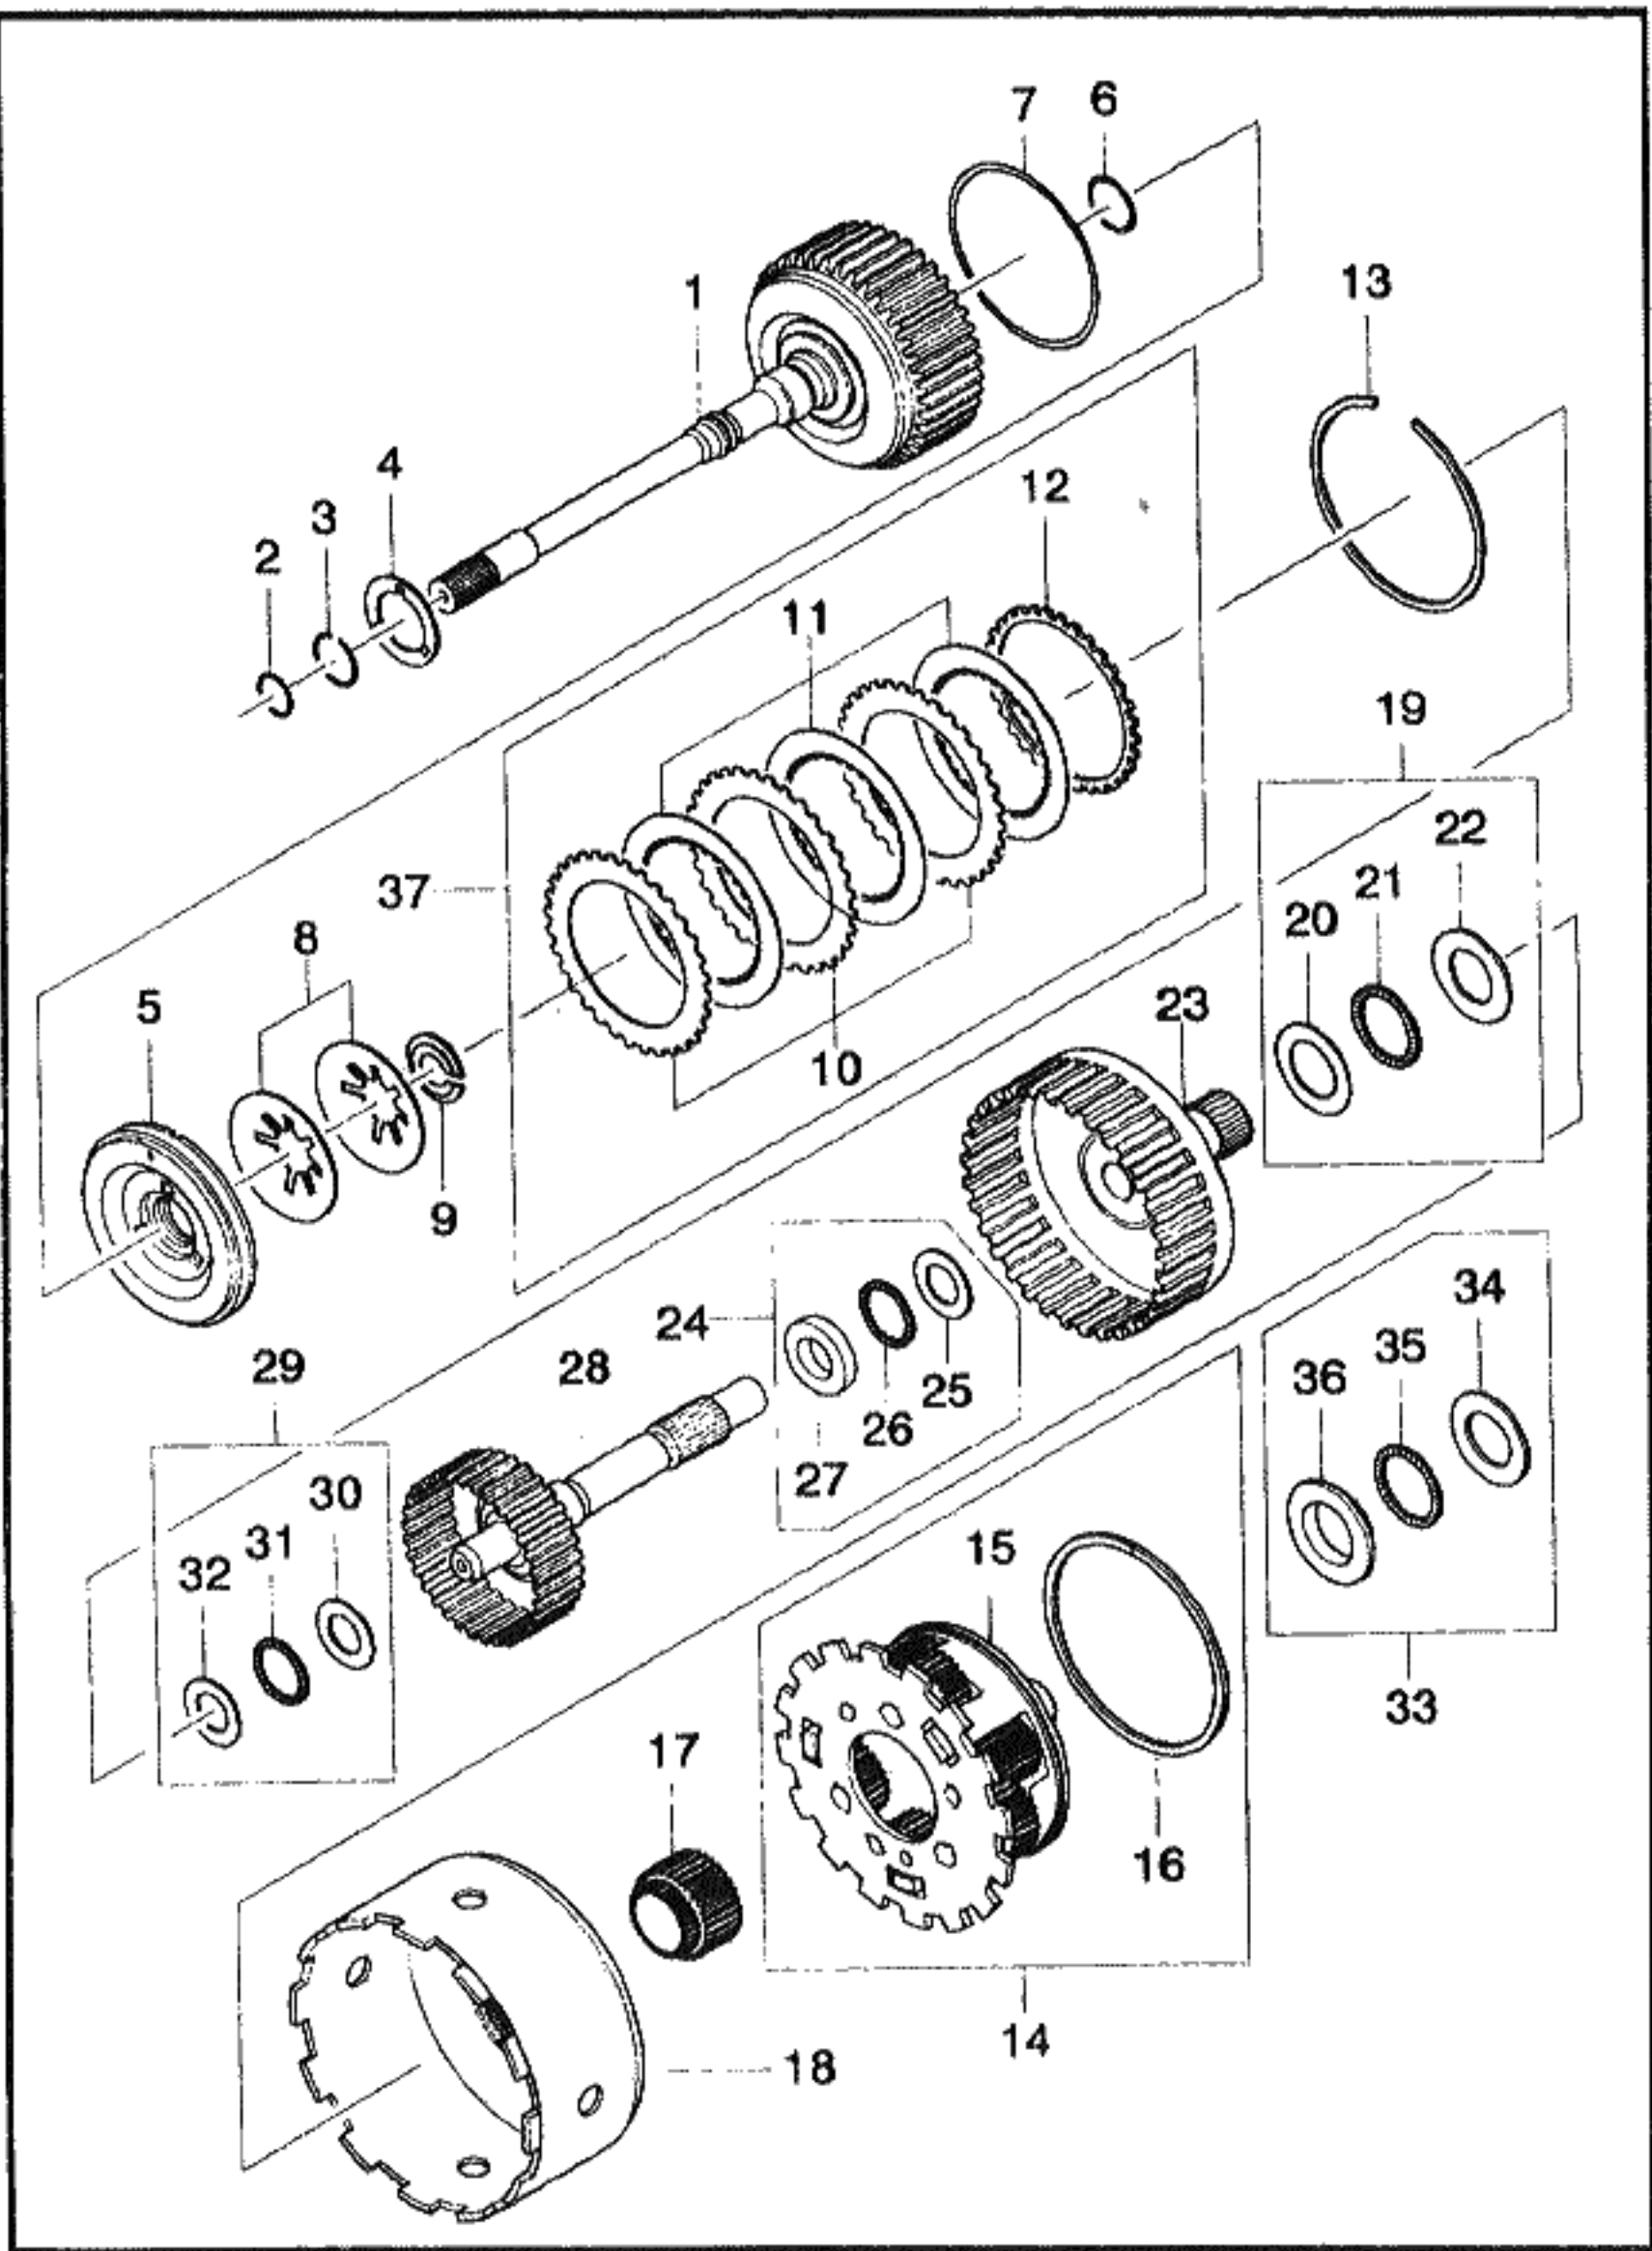


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[31] 0635302106	(E) NEEDLE CAGE-AXIAL (D) KÄFIG NADEL A	O	O		(F) CAGE-AIGUILLE (S) JAULA-AGUJA 1					
	[32] 0635290065	(E) WASHER-AXIAL (D) DICHTUNGSRING A	O	O		(F) RONDELLE (S) ARANDELA 1					
	[33] 1036232033	(E) BEARING SET (D) KUGELLAGER A	O	O		(F) ROULEMENT (S) COJINETE 1					
	[34] 0730109065	(E) WASHER-AXIAL (D) DICHTUNGSRING A	O	O		(F) RONDELLE (S) ARANDELA 1					
	[35] 0735321282	(E) NEEDLE CAGE-AXIAL (D) KÄFIG NADEL A	O	O		(F) CAGE-AIGUILLE (S) JAULA-AGUJA 1			28.5x44.4x1.9		
	[36] 0501313675	(E) DISC-ANGLE (D) SCHEIBE A	O	O		(F) DISQUE (S) DISCO 1					
	[37] S3533001	(E) E CLUTCH SET (D) E' KUPPLUNG A	O	O		(F) E' EMBRAYAGE (S) E' EMBRAGUE 1					
LEVEL					T/A (TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

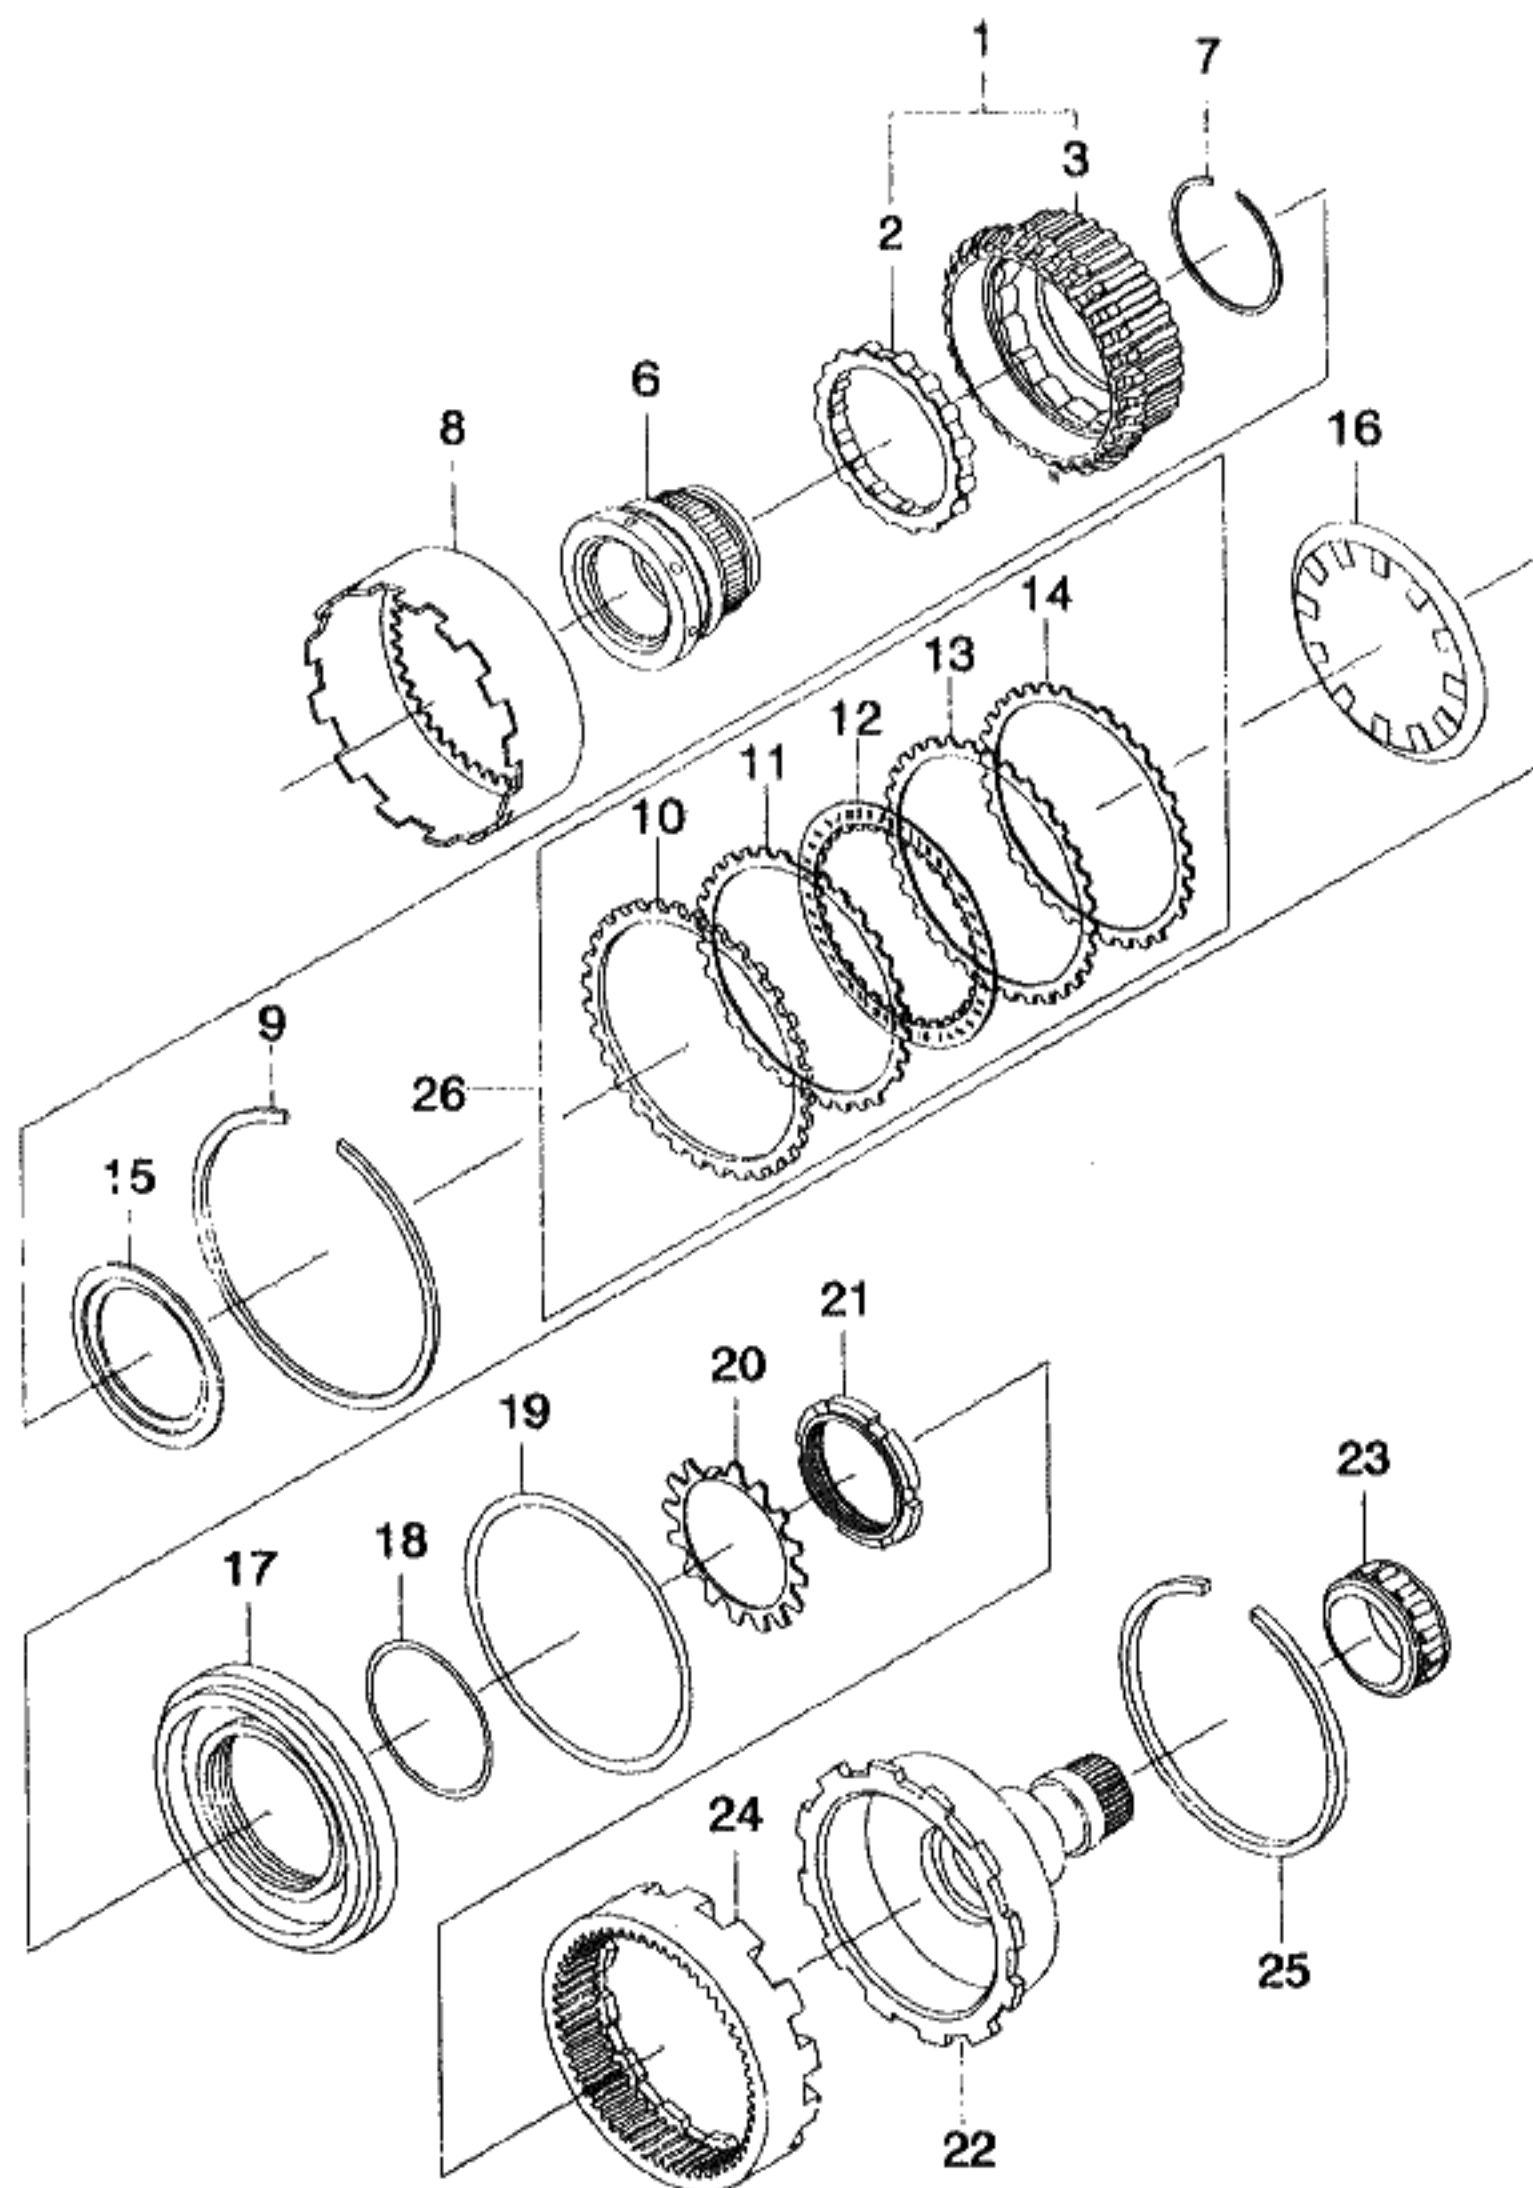


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 1036217010	(E)FREE WHEEL A (D)PLATTE A O O				(F)PLAQUE (S)PLACA 1					
	[02] 0501207101	(E)FREE WHEEL (D)PLATTE A O O				(F)PLAQUE (S)PLACA 1					
	[03] 1036217009	(E)RING-FREE WHEEL (D)RING A O O				(F)ANNEAU (S)ANILLO 1					
	[06] 1036317024	(E)RING-BEARING (D)RING A O O				(F)ANNEAU (S)ANILLO 1					
	[07] 0730513214	(E)RING-SNAP (D)RING,STAB DRUCK A O O				(F)ANNEAU-PRESSION D'ARBRE (S)ANILLO-DE PRESION 1				T=1.50	
	[08] 1036317020	(E)SPIDER-CLUTCH BELL (D)TOPF A O O				(F)POT (S)CAZUELA 1					
	[09] 0730513216	(E)RING-SNAP (D)RING,STAB DRUCK A O O				(F)ANNEAU-PRESSION D'ARBRE (S)ANILLO-DE PRESION 1				T=2.50	
	[10] 1036317039	(E)DISC END (D)SCHEIBE A O O				(F)DISQUE (S)DISCO 1					
	[11] 1036302058	(E)SPRING-CLUTCH DISC (D)FEDERUNG A O O				(F)RESSORT (S)RESORTE 1					
	[12] 1036217005	(E)LIN-CLUTCH DISC (D)PLATTE,SCHEIBEN-KUPPLUNG A O O				(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO 5					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

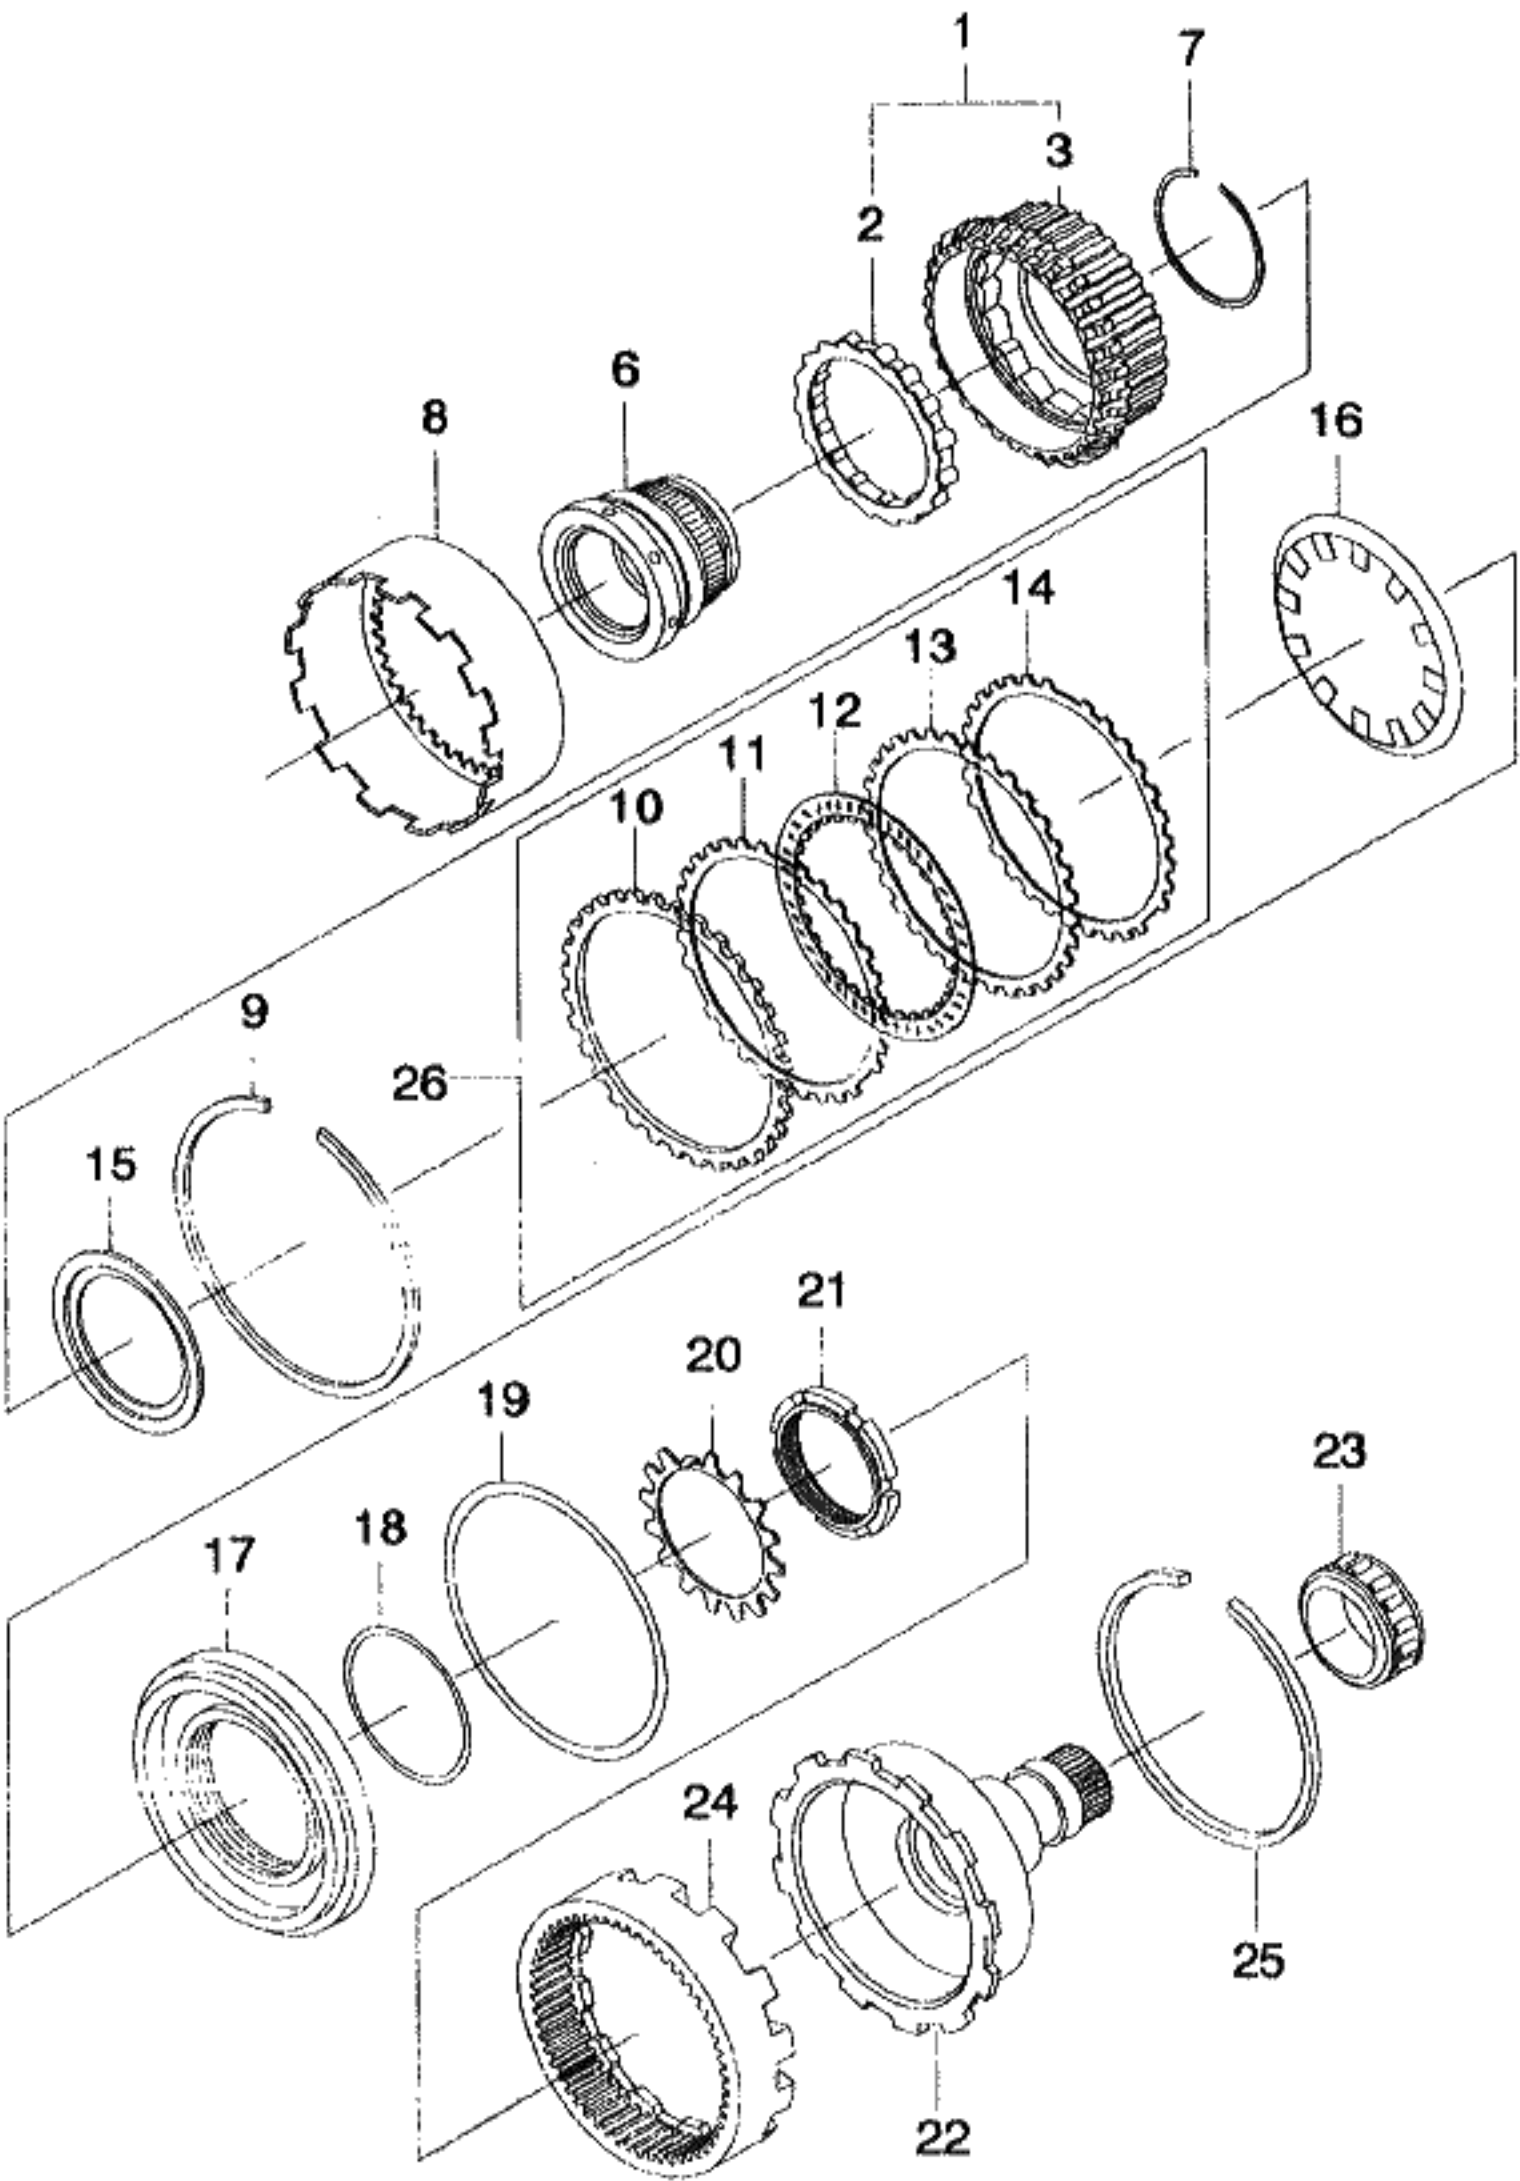


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[13] 1036317006	(E)CLUTCH DISC-OUT (D)KUPPLUNG-DECKEL&DISK	A	O	O			(F)CARTER & DISQUE (S)EMBRAGUE-CUBIERTA Y DISCO	5			
	[14] 1036302059	(E)SPRING-CLUTCH DISC (D)FEDERUNG	A	O	O			(F)RESSORT (S)RESORTE	1			
	[15] 1036317032	(E)RING-STOP (D)RING	A	O	O			(F)ANNEAU (S)ANILLO	1			
	[16] 1036317017	(E)SPRING-CUP (D)FEDERUNG	A	O	O			(F)RESSORT (S)RESORTE	1			
	[17] 1036317042	(E)PISTON (D)KOLBEN	A	O	O			(F)PISTON (S)PISTON	1			
	[18] 0734313041	(E)O RING (D)O RING	A	O	O			(F)JOINT TORIQUE (S)ANILLO EN O	1			
	[19] 0734313021	(E)O RING (D)O RING	A	O	O			(F)JOINT TORIQUE (S)ANILLO EN O	1			
	[20] 1036317037	(E)RING-RETAINING (D)RING,HALTER	A	O	O			(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR	1			
	[21] 0768600064	(E)NUT-SLOTTED (D)MUTTER	A	O	O			(F)ECROU (S)TUERCA	1	M72x1.5		
	[22] 1036214007	(E)SHAFT-OUTPUT (D)SPINDEL	A	O	O			(F)ARBRE (S)EJE	1			


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

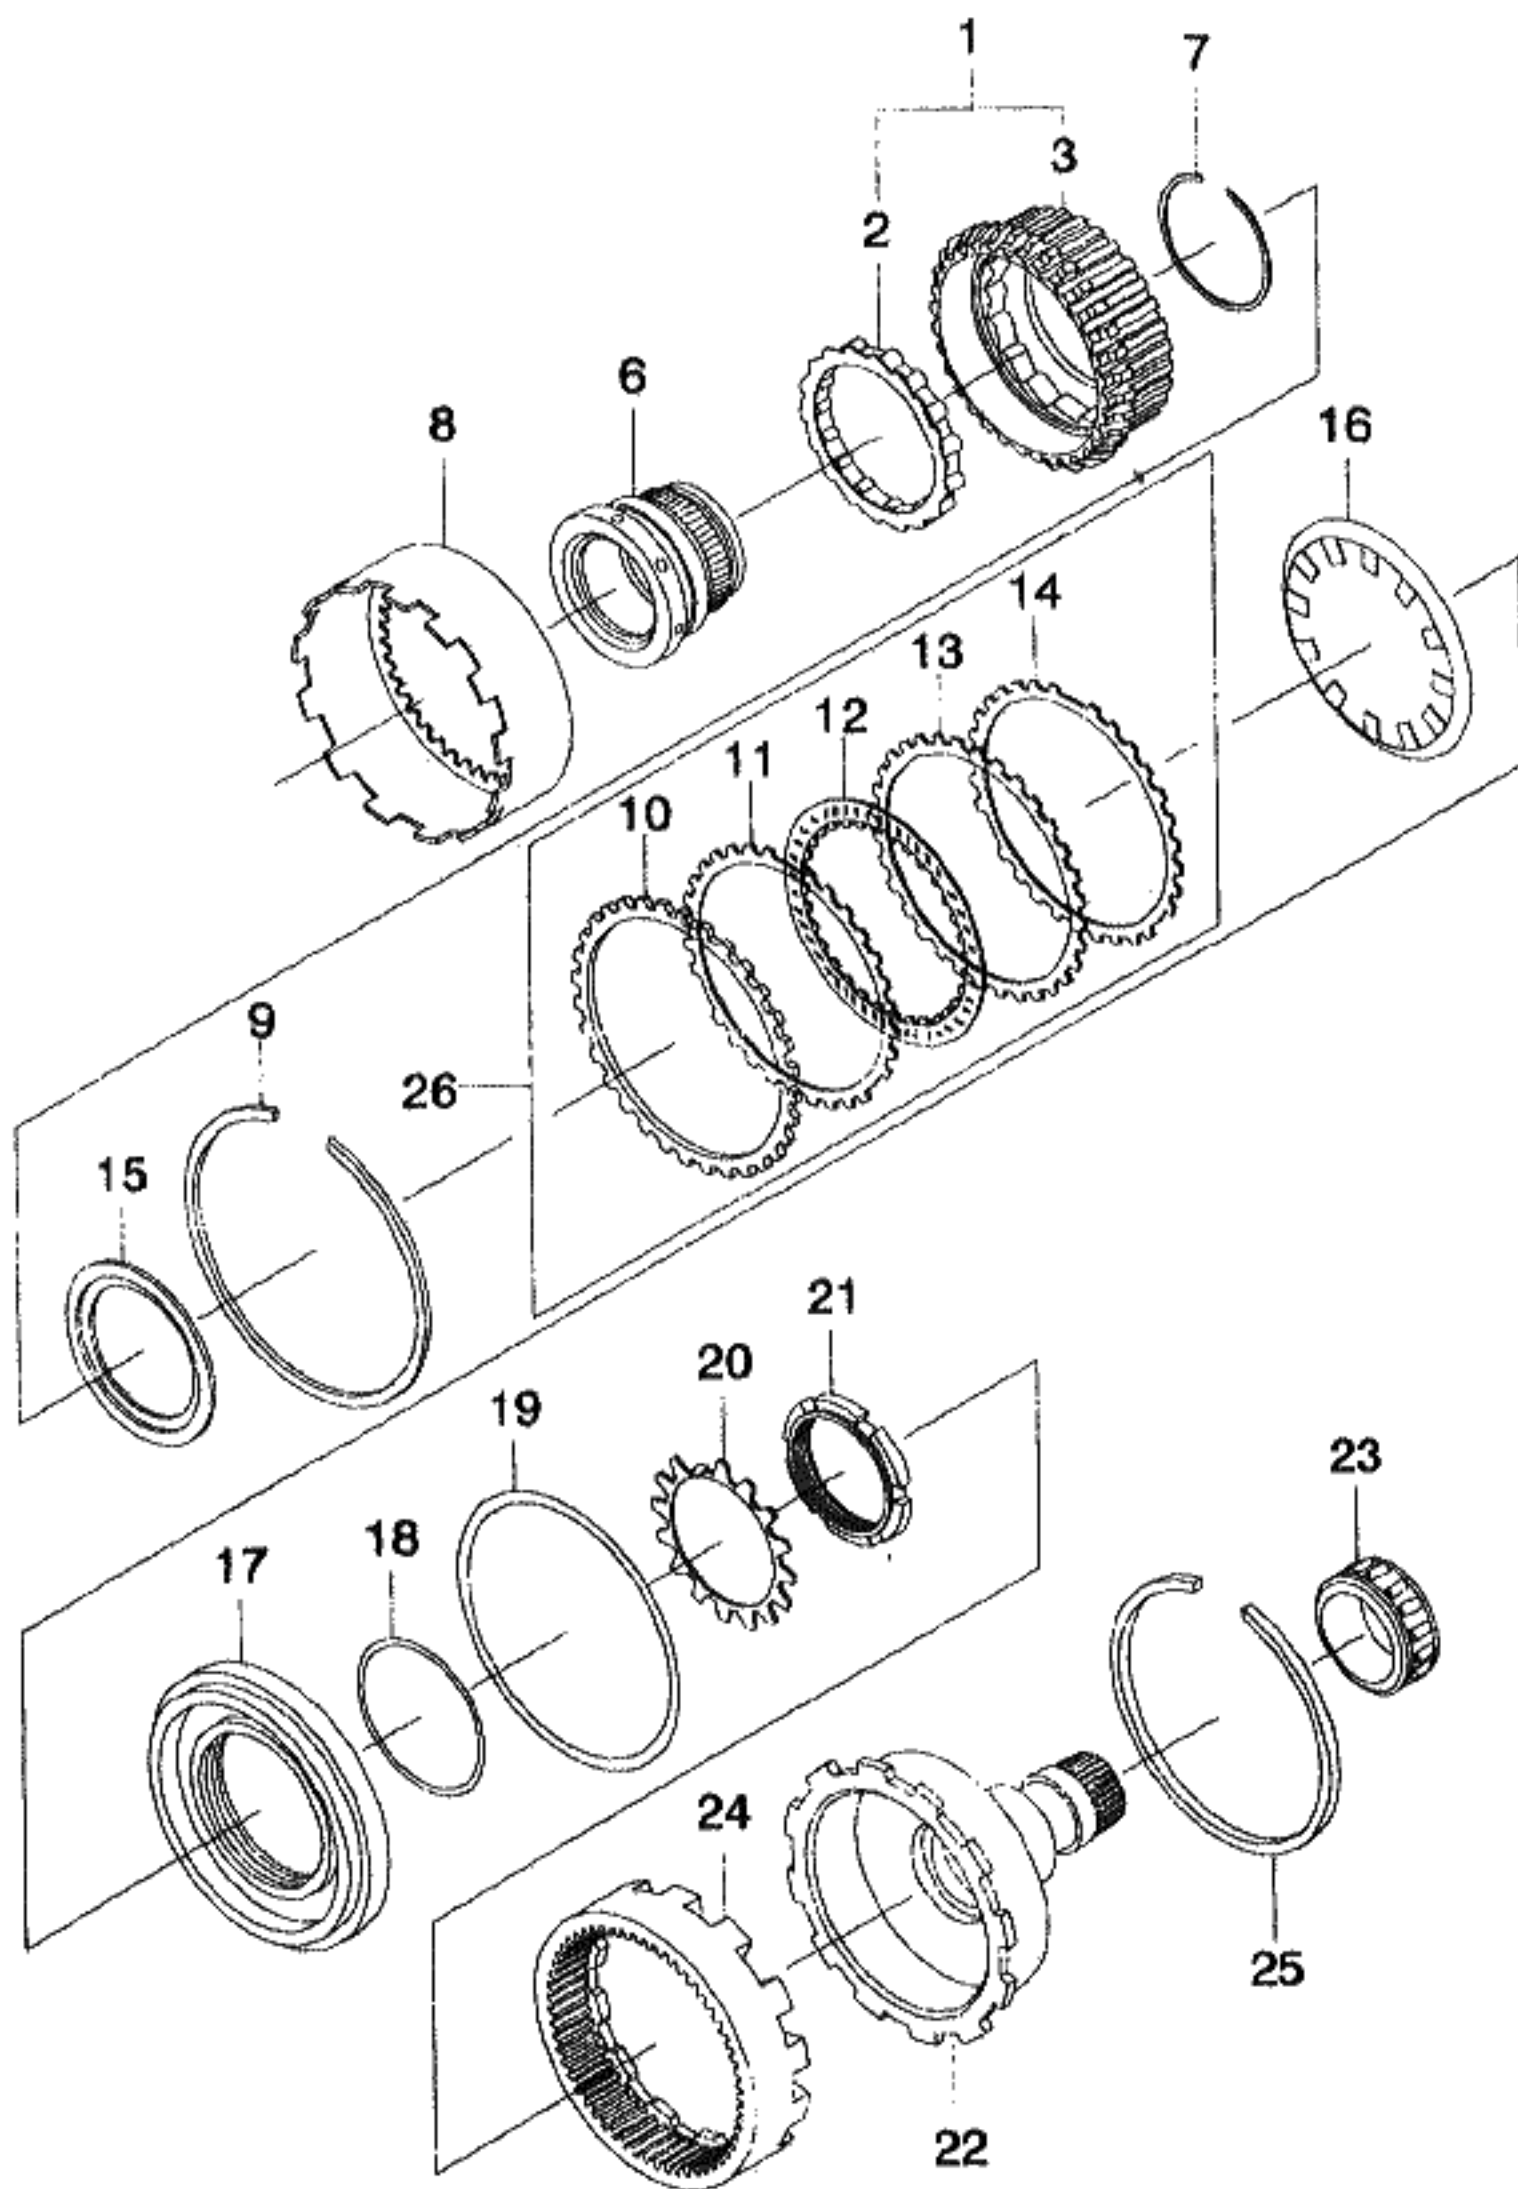


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[23] 0735370117	(E) BEARING-INNER RING (D) KUGELLAGER A O O				(F) ROULEMENT (S) CONJINETE 1			38.0x17.0			
	[24] 1036332015	(E) GEAR-RING (D) GETRIEBE A O O				(F) ENGRENAGE (S) ENGRANAJE 1			Z82			
	[25] 0730513217	(E) RING-SNAP (D) RING, STAB DRUCK A O O				(F) ANNEAU-PRESSION D'ARBRE (S) ANILLO-DE PRESION 1			T=1.50			
	[26] S3534001	(E) D CLUTCH SET (D) D' KUPPLUNG A O O				(F) D' EMBRAYAGE (S) D' EMBRAGUE 1						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

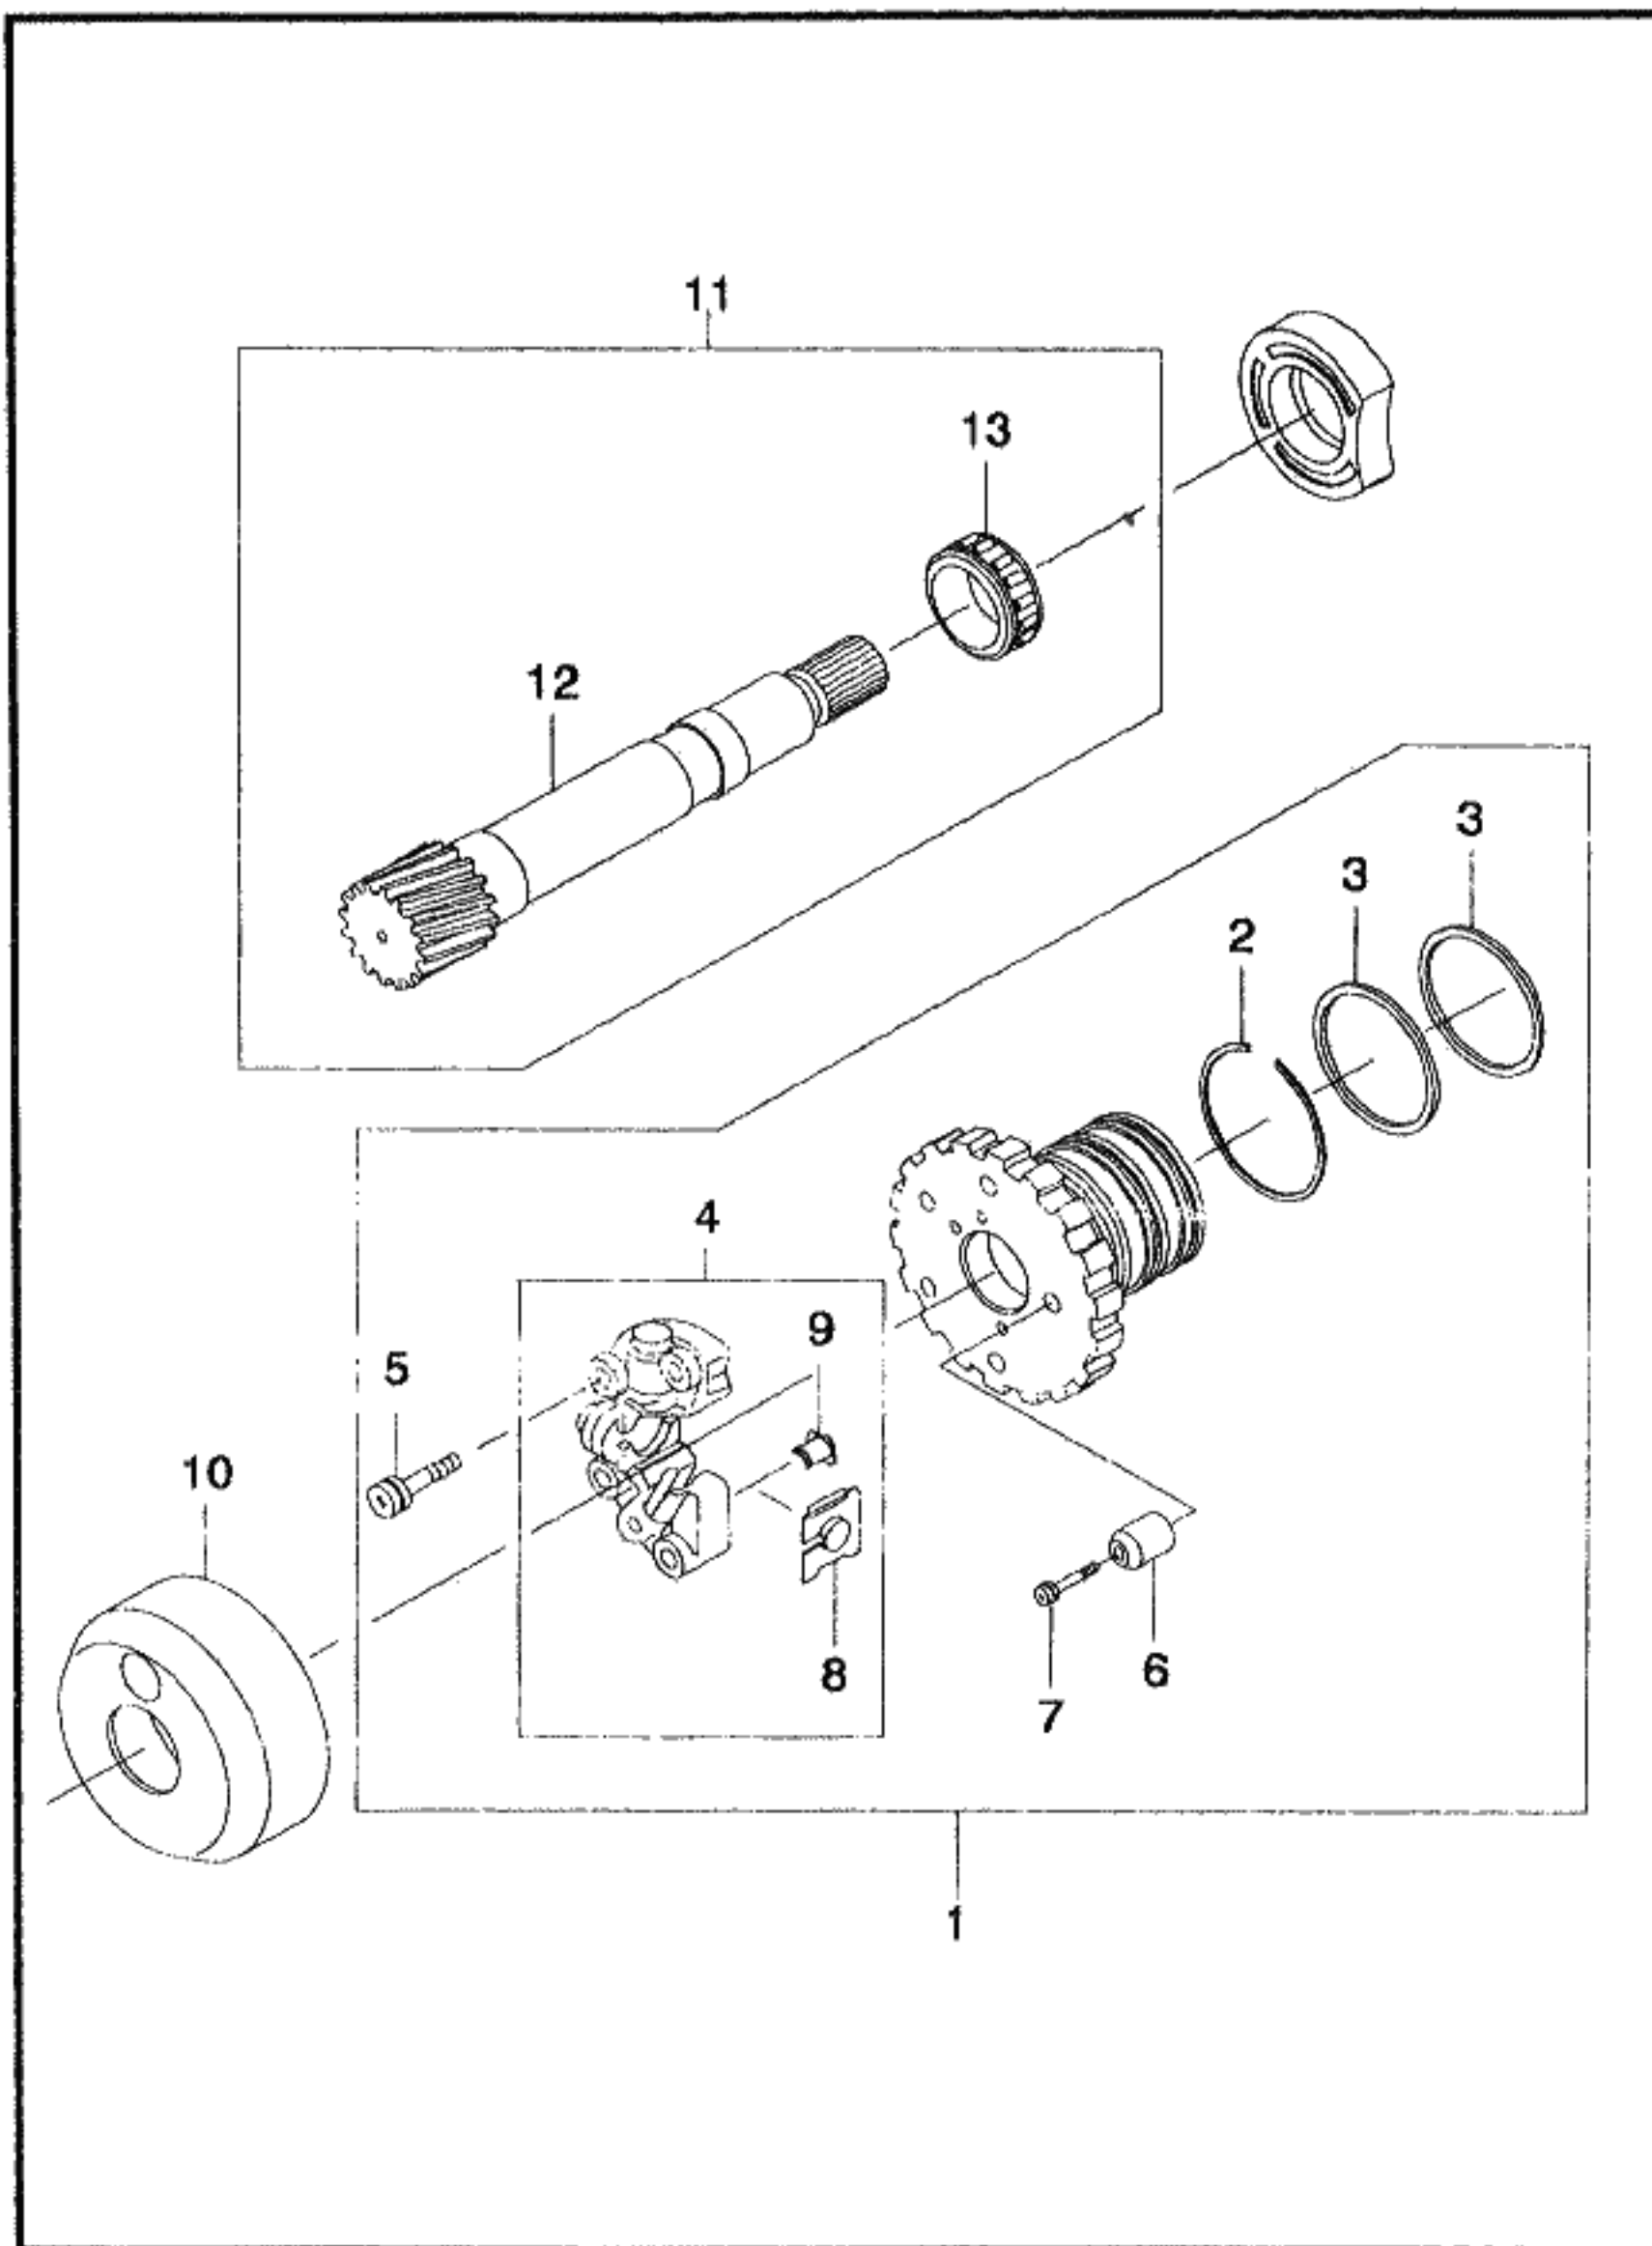

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)GOVERNOR A (D)REGLER					(F)REGULATEUR (S)REGULADOR				
	1036133079	A	O	.			1				
	1036133077	A	O	O	&L88		1				
	[02]	(E)RING-PISTON (D)RING					(F)ANNEAU (S)ANILLO				
	0734401197	A	O	O			1			52.0x56x2.5	
	[03]	(E)RING-SEALING (D)RING					(F)ANNEAU (S)ANILLO				
	0501306310	A	O	O			2				
	[04]	(E)HOUSING-GOVERNOR (D)GEHÄUSE					(F)LOGEMENT (S)CARCASA				
	1036233104	A	O	.			1				
	1036233102	A	O	O	&L88		1				
	[05]	(E)SCREW-CAP (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	0768041246	A	O	O			4			M6x25	
	[06]	(E)COUNTER WEIGHT (D)GEWICHT					(F)POIDS (S)PESO				
	1036333069	A	O	O			1				
	[07]	(E)SCREW-CAP (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	0768041223	A	O	O			1			M6x35	
	[08]	(E)PLATE-FIXING (D)PLATTE					(F)PLAQUE (S)PLACA				
	1050333186	A	O	O			1				
	[09]	(E)PLATE-STOP (D)PLATTE					(F)PLAQUE (S)PLACA				
	1043333017	A	O	O			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

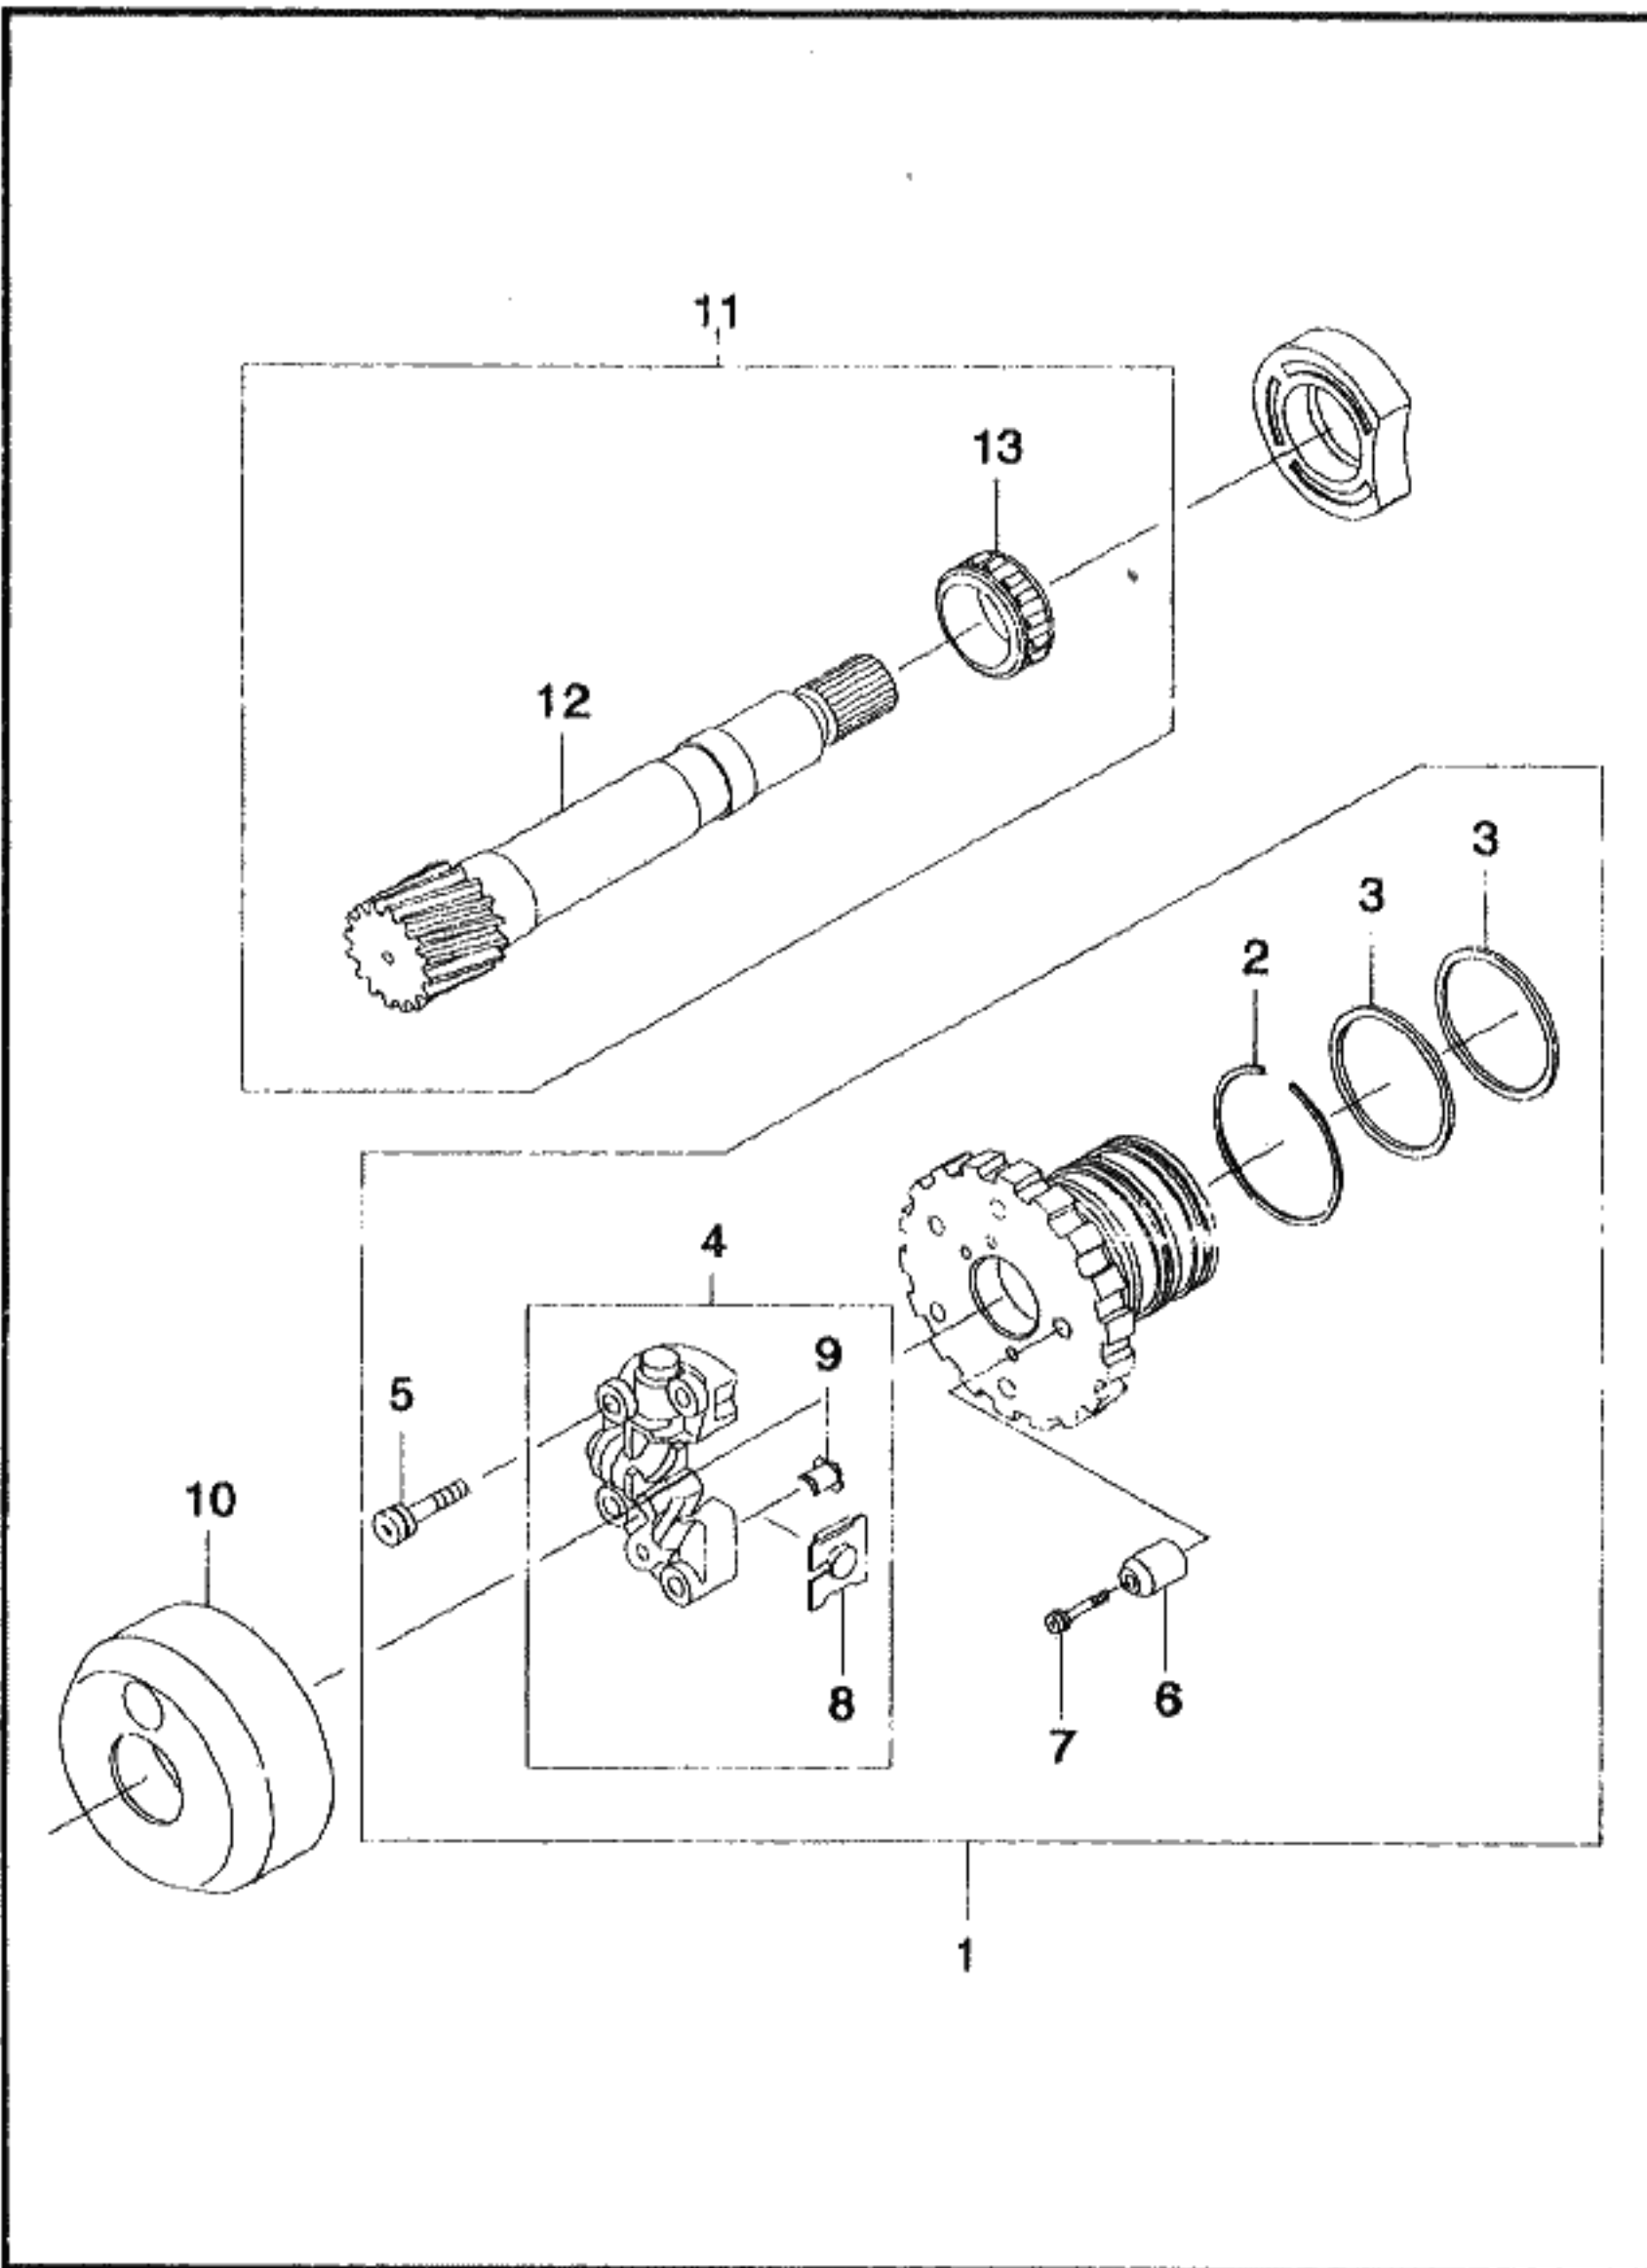


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10] 1036333071	(E)SHEET-SCREEN (D)BLECH A	O	O			(F)PLAQUE (S)LÁMINA 1					
	[11] 1036209119	(E)SHAFT-SIDE (D)SPINDEL A	O	O			(F)ARBRE (S)EJE 1			Z17		
	[12] 1036309327	(E)SHAFT-SIDE (D)SPINDEL A	O	O			(F)ARBRE (S)EJE 1			Z17		
	[13] 0735370316	(E)BEARING-INNER RING (D)KUGELLAGER A	O	O			(F)ROULEMENT (S)CONJINETE 1			34.9x18.2		
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

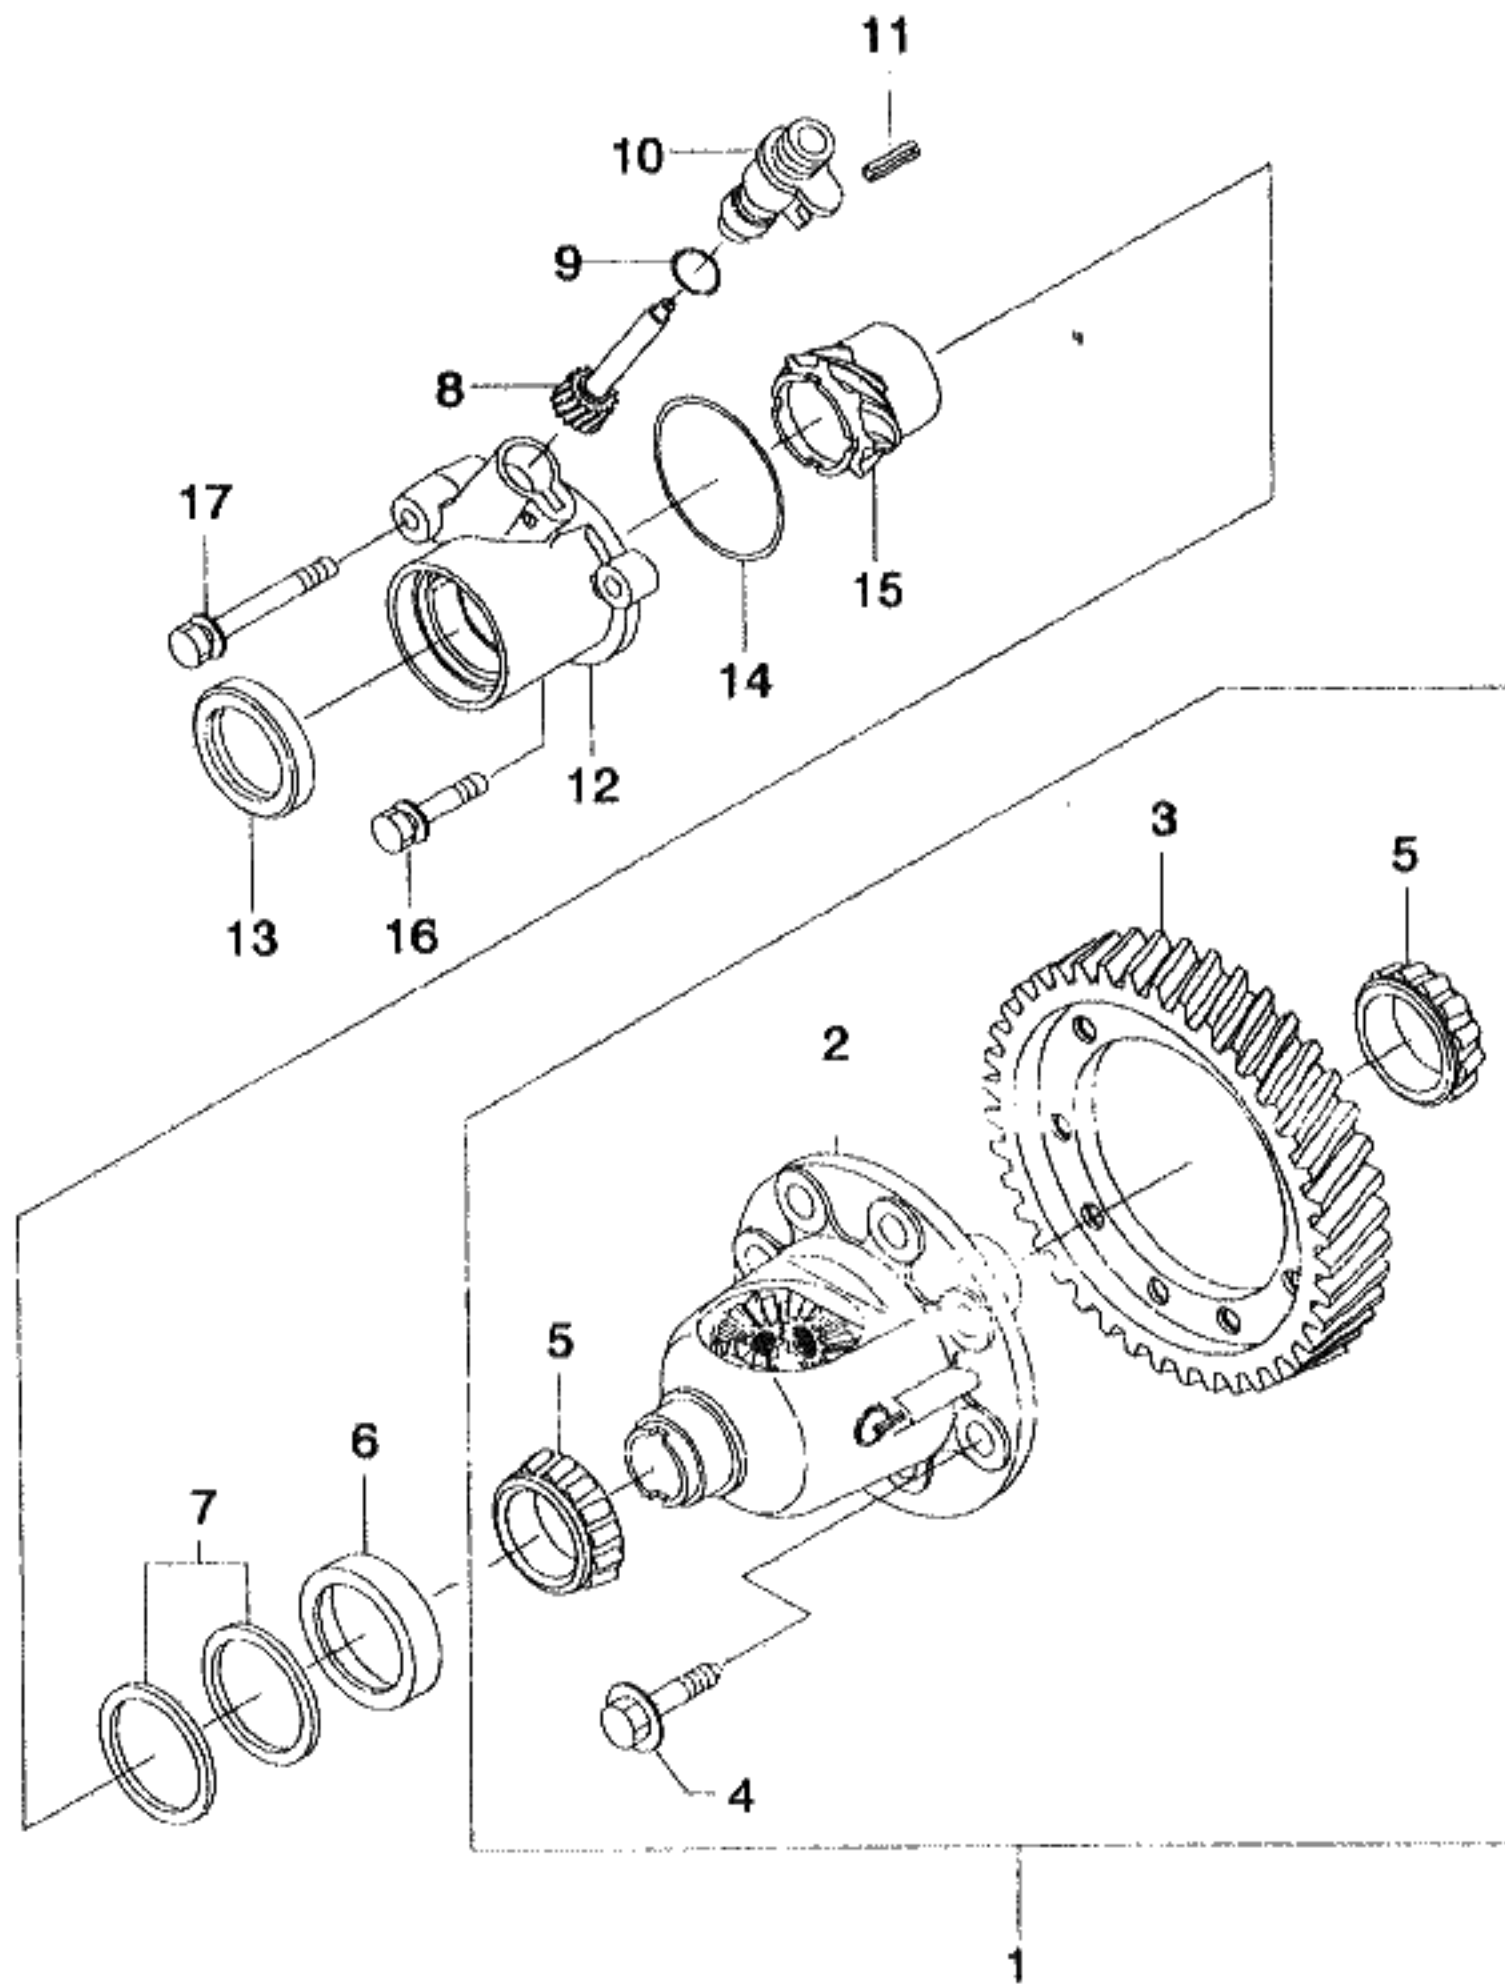

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)DIFFERENTIAL A (D)AUSGLEICH				(F)DIFFERENTIEL (S)DIFERENCIAL					
	1036209123	A	O	.		1					
	1036209125	A	O	O	&L88	1				Z6	
	[02]	(E)DIFFERENTIAL (D)AUSGLEICHSGETRIEBE				(F)DIFFERENTIEL (S)DIFERENCIAL					
	1036209111	A	O	O		1					
	[03]	(E)GEAR-SPUR (D)GETRIEBE				(F)ENGRENAGE (S)ENGRANAJE					
	1036309308	A	O	.		1					
	1036309306	A	O	O	&L88	1				Z65	
	[04]	(E)SCREW-LOCKING (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0768043222	A	O	O		8				M10x1,25x30	
	[05]	(E)BEARING-INNER RING (D)KUGELLAGER				(F)ROULEMENT (S)CONJINETE					
	0735370117	A	O	O		2				38.0x17.0	
	[06]	(E)RING-OUTER (D)RING				(F)ANNEAU (S)ANILLO					
	0735295027	A	O	O		1				63.0x13.5	
	[07]	(E)WASHER (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
	0730004023	A	O	O		1				T=1.05	
	0730004022	A	O	O		1				T=1.00	
	0730004021	A	O	O		1				T=0.90	
	0730004020	A	O	O		1				T=0.80	
	0730004019	A	O	O		1				T=0.70	
	0730004018	A	O	O		1				T=0.60	
	0730004017	A	O	O		1				T=0.50	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

3550 DIFFERENTIAL & SPEEDMETER

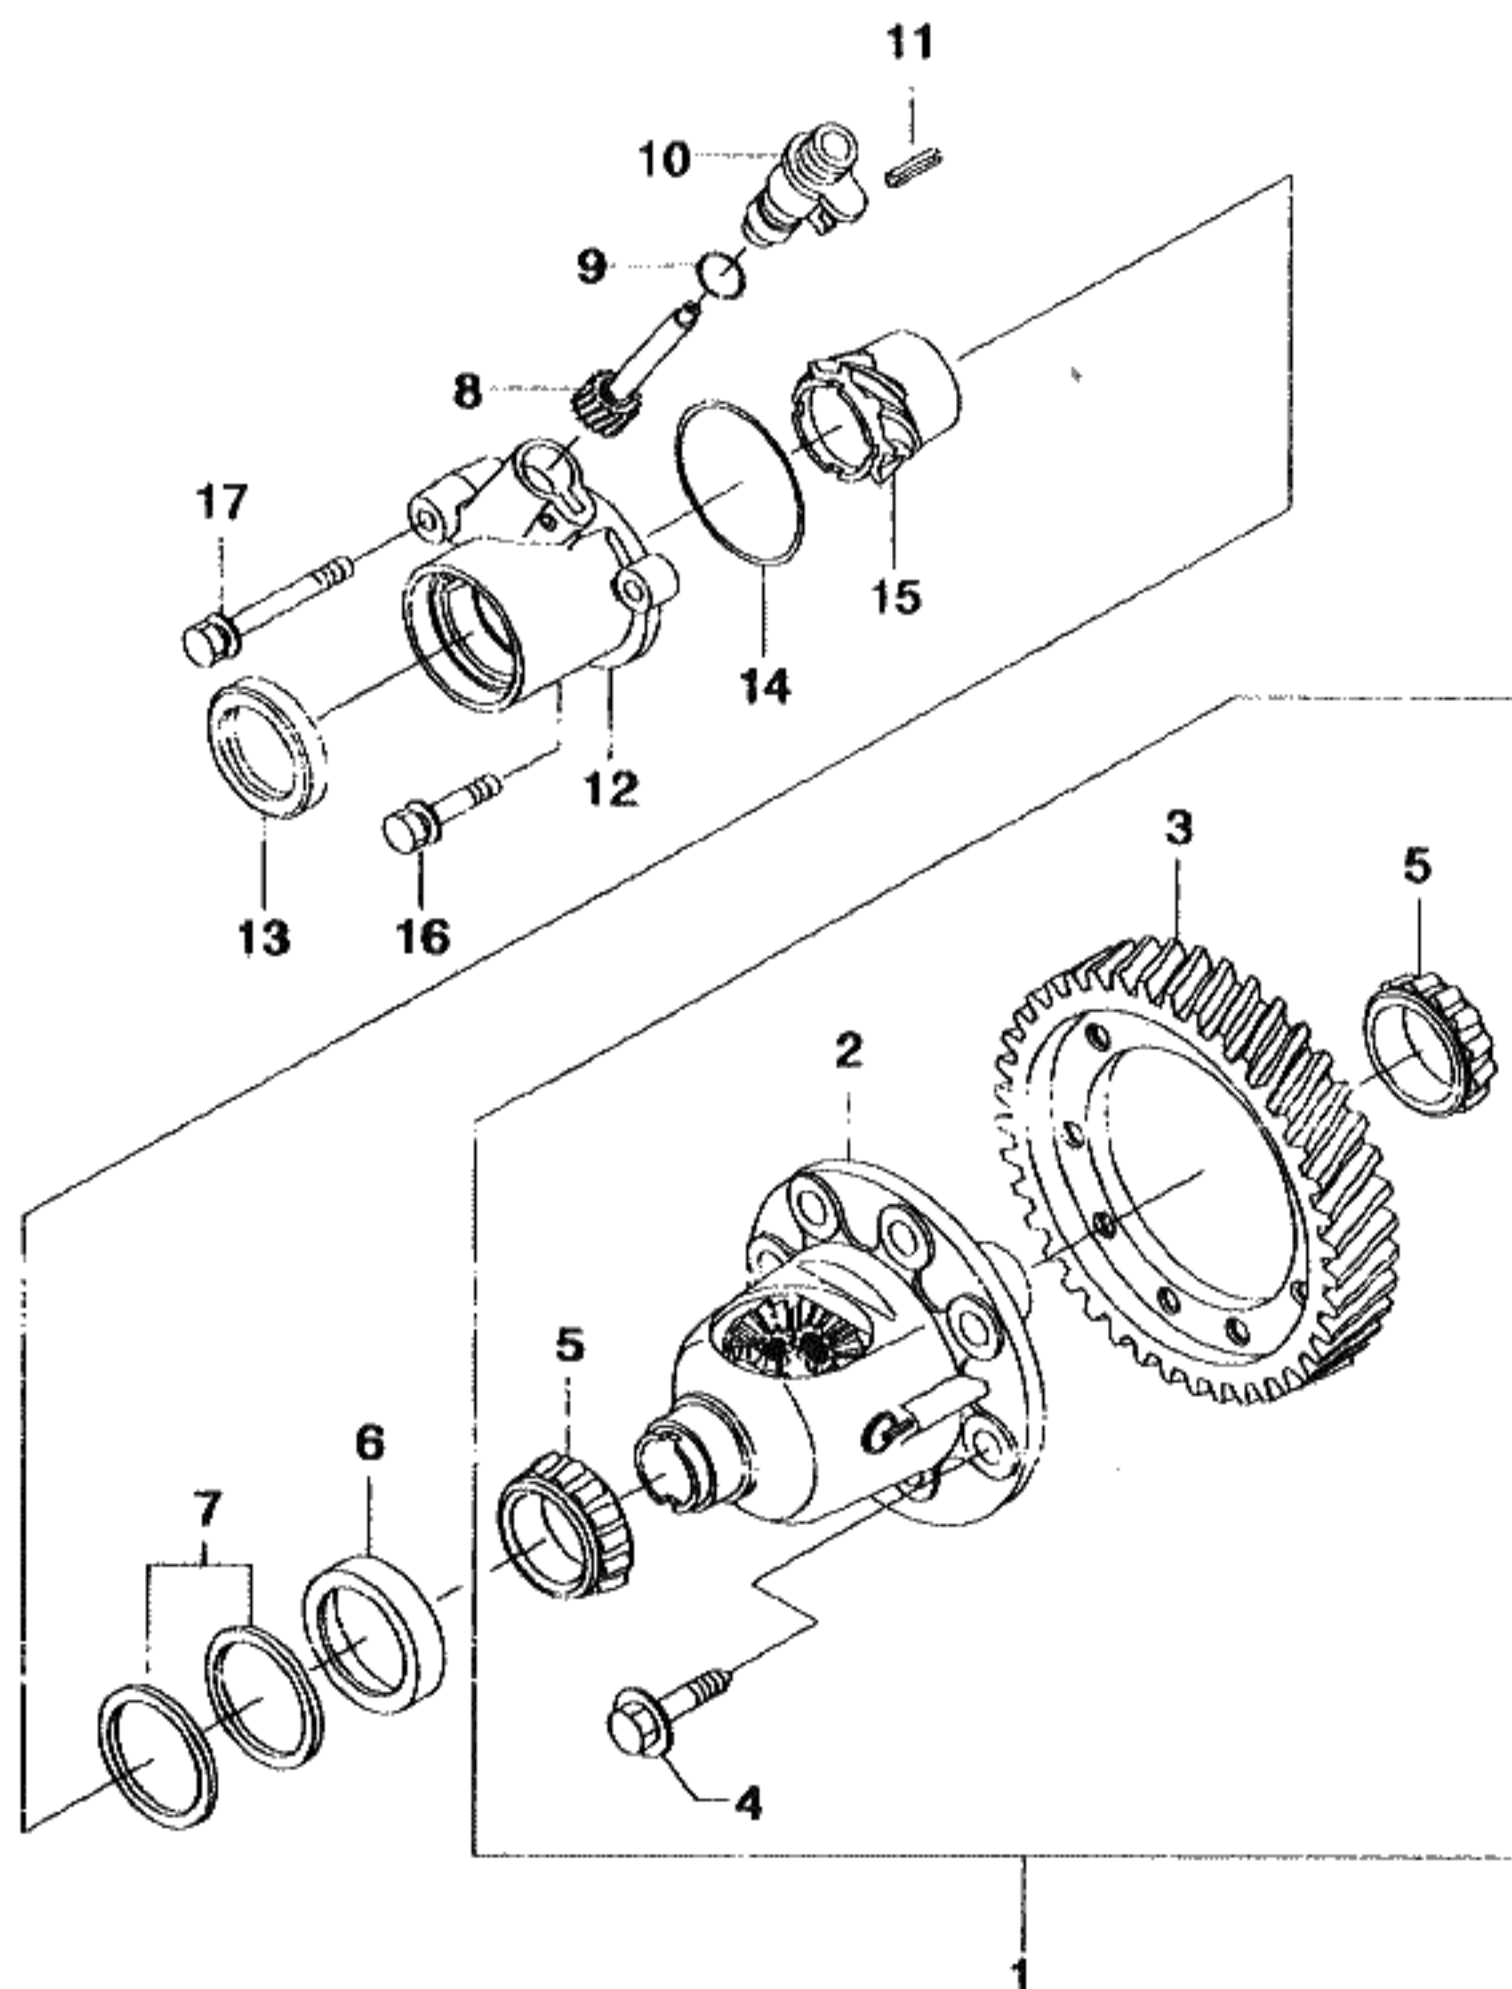

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	0730004016	A	O	O			1			T=0.40	
	0730004015	A	O	O			1			T=0.35	
	[08]	(E)PINION-SPEEDO (D)RITZEL					(F)PIGNON (S)PIÑON				
	1036208040	A	O	O			1				
	[09]	(E)O RING (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O				
	0734313197	A	O	O			1			16x2	
	[10]	(E)GEAR-SPEEDOMETER (D)GETRIEBE					(F)ENGRENAGE (S)ENGRANAJE				
	1063308001	A	O	O			1				
	[11]	(E)SLOT-PIN (D)STIFT					(F)BROCHE (S)PASADOR				
	0631330148	A	O	O			1			4x14	
	[12]	(E)HOUSING-SPEEDOMETER (D)GEHÄUSE					(F)LOGEMENT (S)CARCASA				
	1036208036	A	O	O			1				
	[13]	(E)SEAL-SHAFT (D)DICHTUNG					(F)JOINT (S)SELLO				
	0734319343	A	O	O			1			40x58x10	
	[14]	(E)O RING (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O				
	0734313062	A	O	O			1				
	[15]	(E)WORM-SPEEDO (D)GETRIEBE					(F)ENGRENAGE (S)ENGRANAJE				
	1036308049	A	O	O			1				
	[16]	(E)SCREW-HEXAGON (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	0636024014	A	O	O			2			M8x35 Z3	


LEVEL

T/A (TRANSAXLE)

S X = 2.0 SOHC


M = MANUAL T/A
A = AUTOMATIC T/A
. = COMMON

CDX = 2.0 DOHC

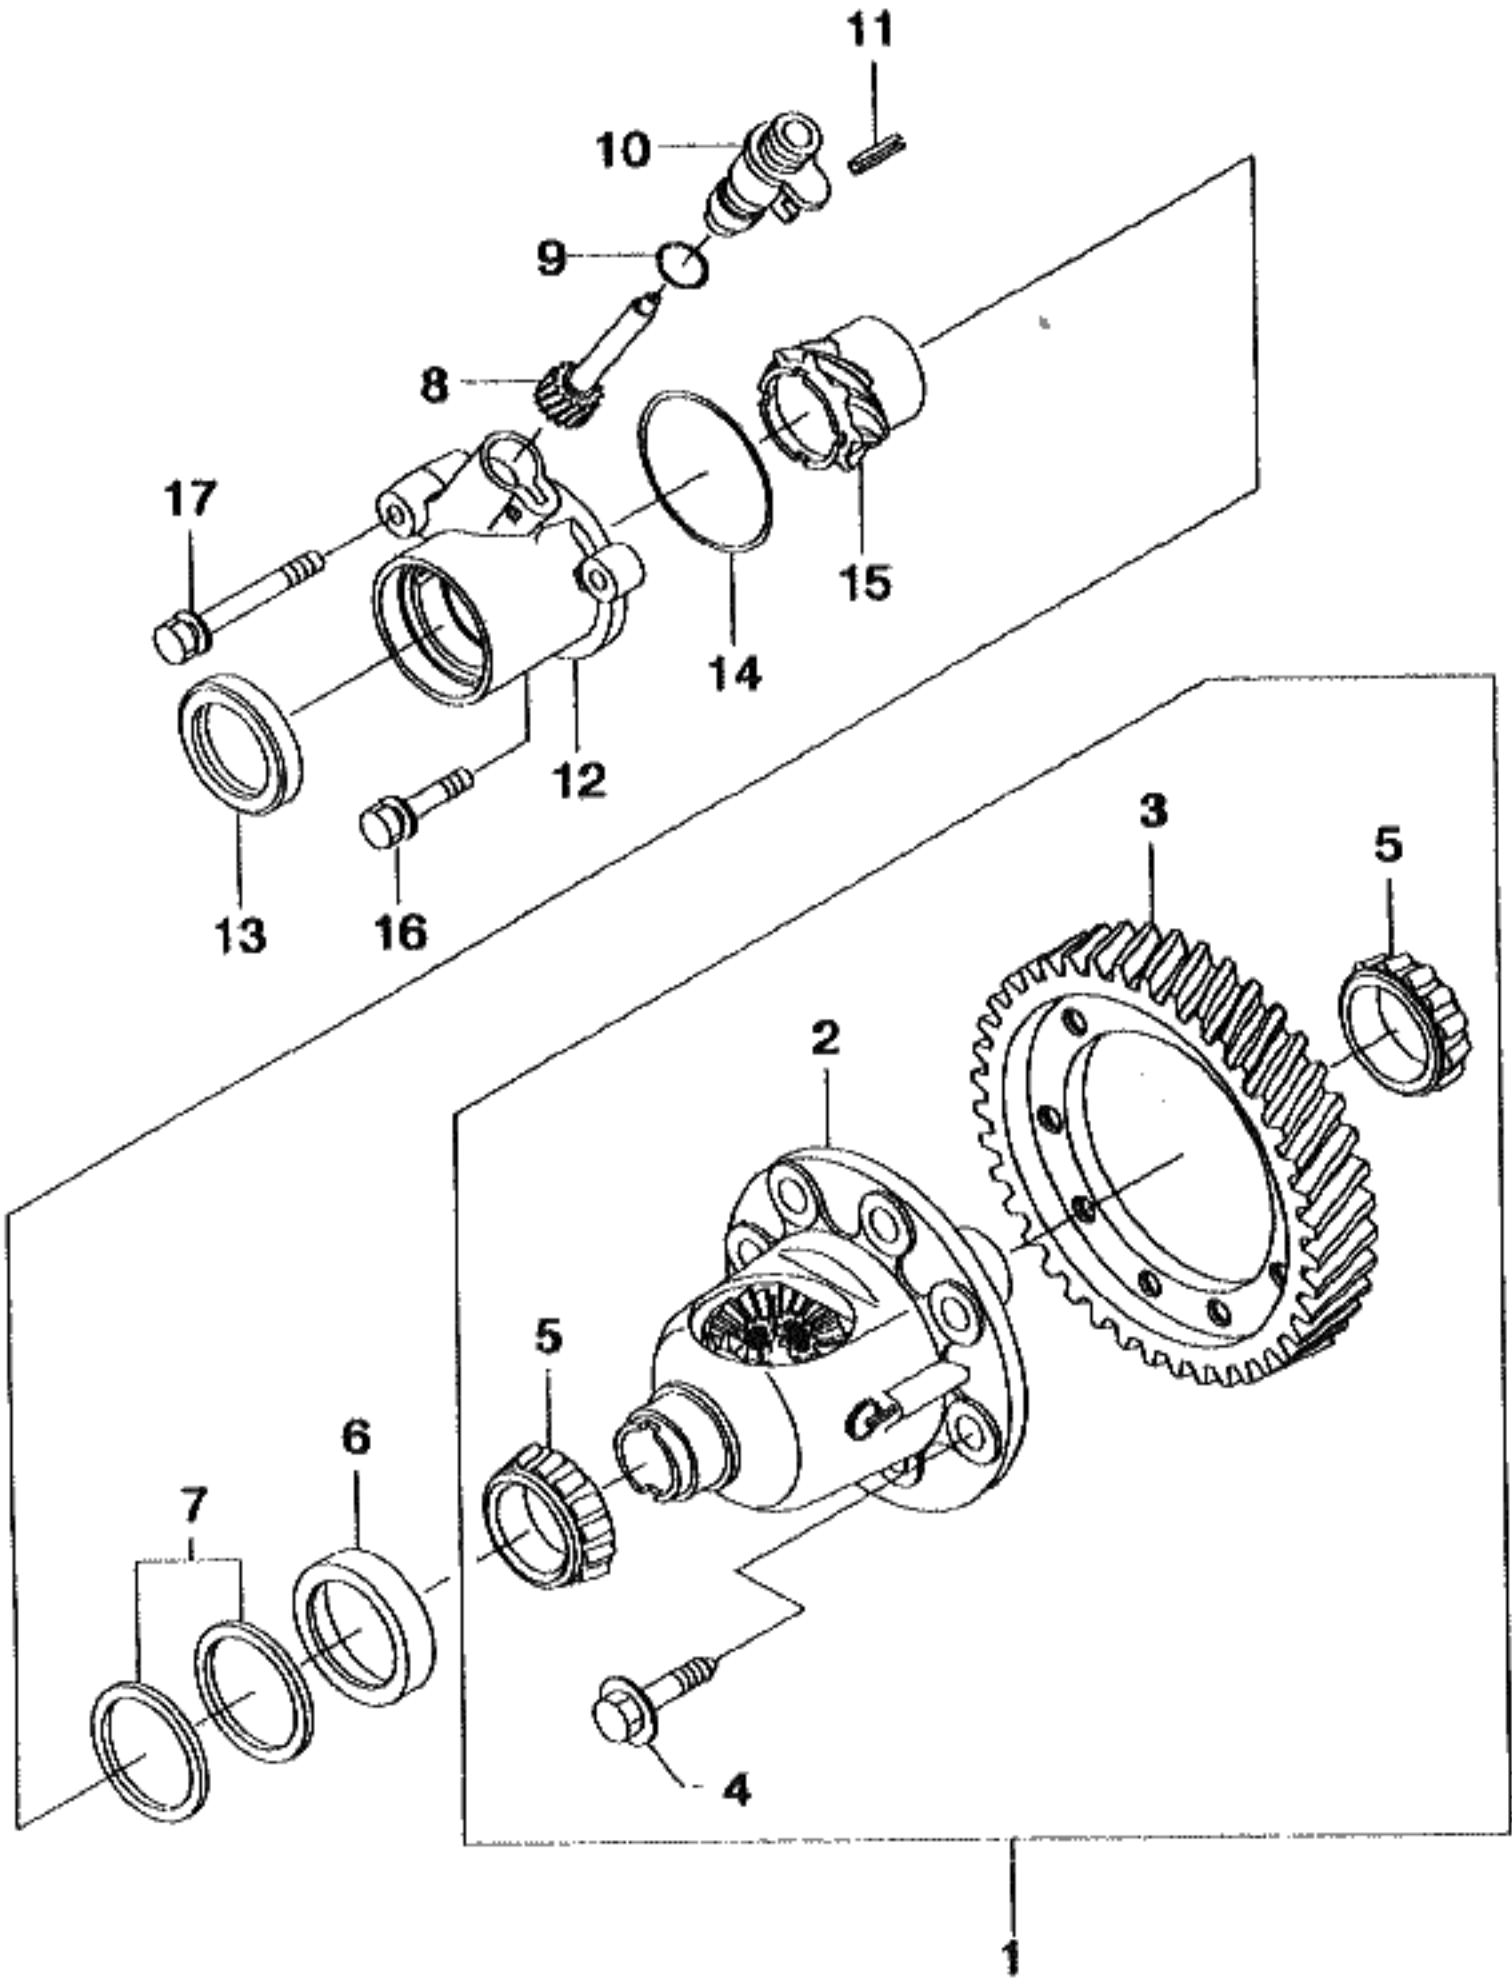


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[17] 0636024518	(E)SCREW-HEXAGON (D)SCHRAUBE A O O				(F)VIS (S)TORNILLO 1				M8x55 Z3	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

3560 VALVE BODY

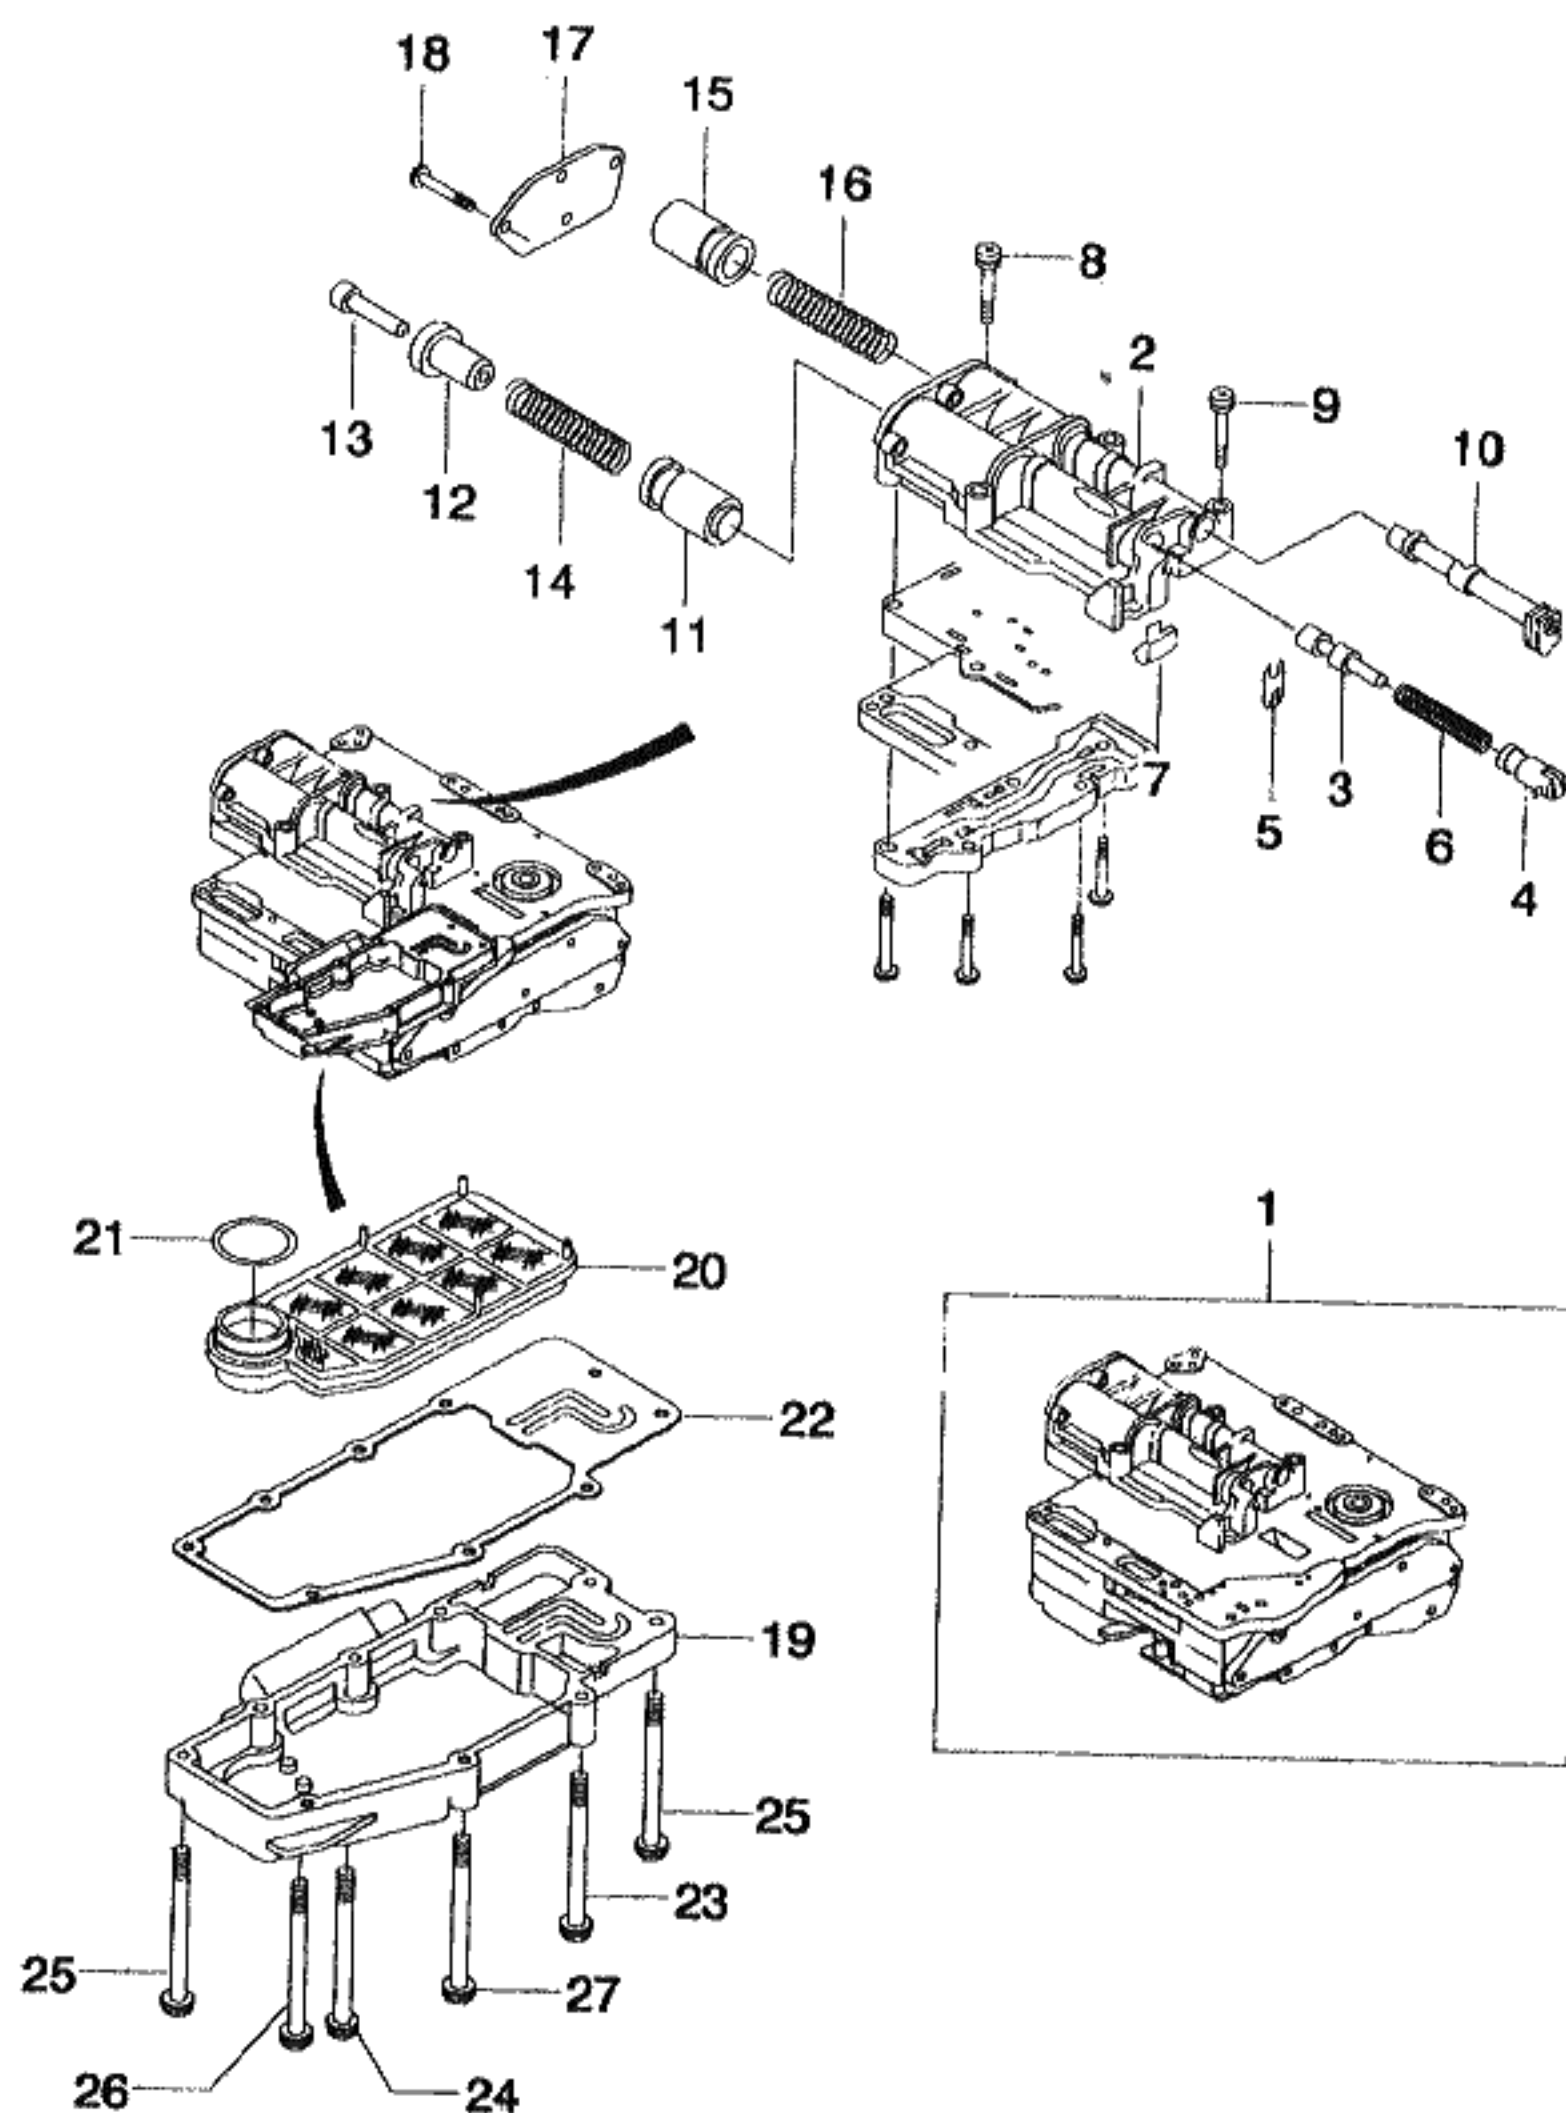


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)BODY A-CONTROL VALVE (D)KAROSSERIE				(F)CORPS-SOUPAPE (S)CARROCERIA-VALVULA					
	1036126164	A	O	.		1					
	1036126165	A	O	O & L88		1					
	[02]	(E)HOUSING-CONTROL VALVE (D)GEHÄUSE				(F)LOGEMENT (S)CARCASA					
	1050326090	A	O	O		1					
	[03]	(E)PISTON (D)KOLBEN				(F)PISTON (S)PISTON					
	1036326178	A	O	O		1					
	[04]	(E)THROTTLE PISTON (D)KOLBEN				(F)PISTON (S)PISTON					
	1043223001	A	O	O		1					
	[05]	(E)PLATE-STOP (D)PLATTE				(F)PLAQUE (S)PLACA					
	1043323104	A	O	O		1					
	[06]	(E)SPRING-COMPRESSOR (D)FEDERUNG				(F)RESSORT (S)RESORTE					
	0732041643	A	O	O		1				5D-VALVE	
	[07]	(E)PLATE-STOP (D)PLATTE				(F)PLAQUE (S)PLACA					
	1050326025	A	O	O		1					
	[08]	(E)SCREW-CAP (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0768040241	A	O	O		1				M5x30	
	[09]	(E)SCREW-CAP (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	0768040244	A	O	O		2				M5x35	
	[10]	(E)SELECTOR-SHAFT VALVE (D)WÄHLER				(F)SELECTEUR (S)SELECTOR					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

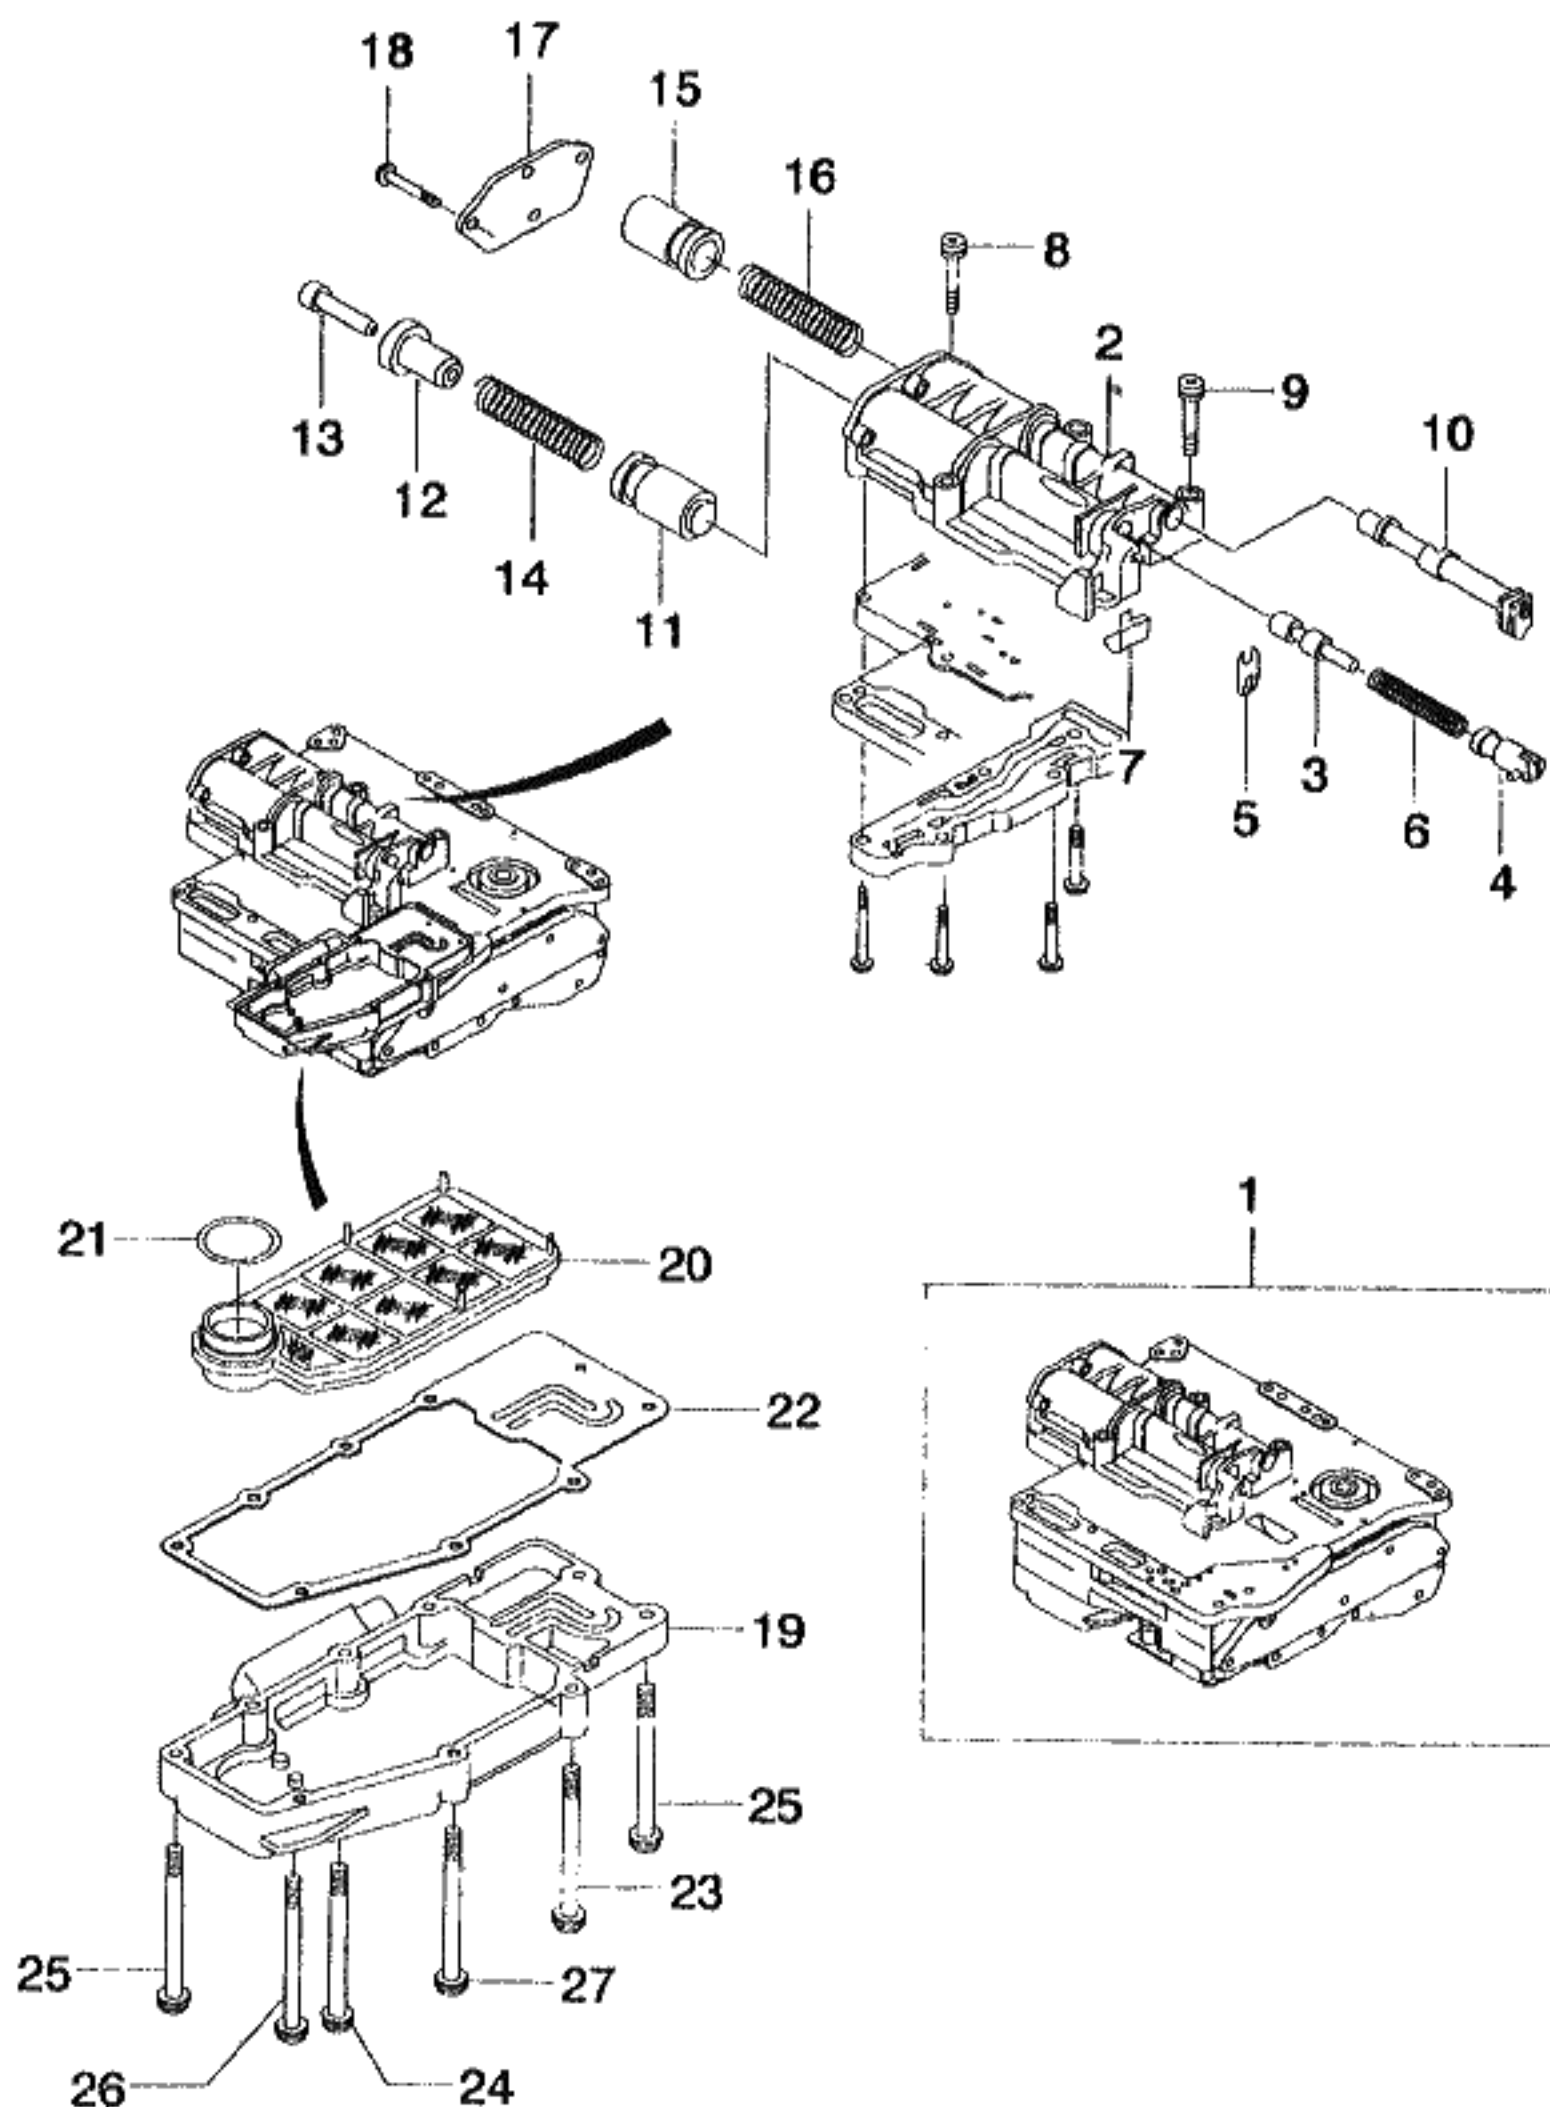


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	1036326016	A	O	O		1					
	[11]	(E)PISTON				(F)PISTON					
		(D)KOLBEN				(S)PISTON					
	1036326181	A	O	O		1				DAMPER A	
	[12]	(E)BUSH				(F)COUSSINET					
		(D)LAGERFUTTER				(S)BUJE					
	1036326182	A	O	O		1					
	[13]	(E)PISTON				(F)PISTON					
		(D)KOLBEN				(S)PISTON					
	1036326180	A	O	O		1					
	[14]	(E)SPRING-COMPRESSOR				(F)RESSORT					
		(D)FEDERUNG				(S)RESORTE					
	0732042472	A	O	O		1				DAMPER A	
	[15]	(E)PISTON				(F)PISTON					
		(D)KOLBEN				(S)PISTON					
	1036326085	A	O	O		1				DAMPER D	
	[16]	(E)SPRING-COMPRESSOR				(F)RESSORT					
		(D)FEDERUNG				(S)RESORTE					
	0732042019	A	O	O		1				DAMPER D	
	[17]	(E)COVER				(F)CARTER					
		(D)DECKEL				(S)CUBIERTA					
	1036326056	A	O	O		1					
	[18]	(E)SCREW-CAP				(F)VIS					
		(D)SCHRAUBE				(S)TORNILLO					
	0768040218	A	O	O		4				M5x16	
	[19]	(E)COVER				(F)CARTER					
		(D)DECKEL				(S)CUBIERTA					
	1036326116	A	O	O		1					
	[20]	(E)SHEET-SCREEN				(F)PLAQUE					
		(D)BLECH				(S)LÁMINA					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						


3560 VALVE BODY

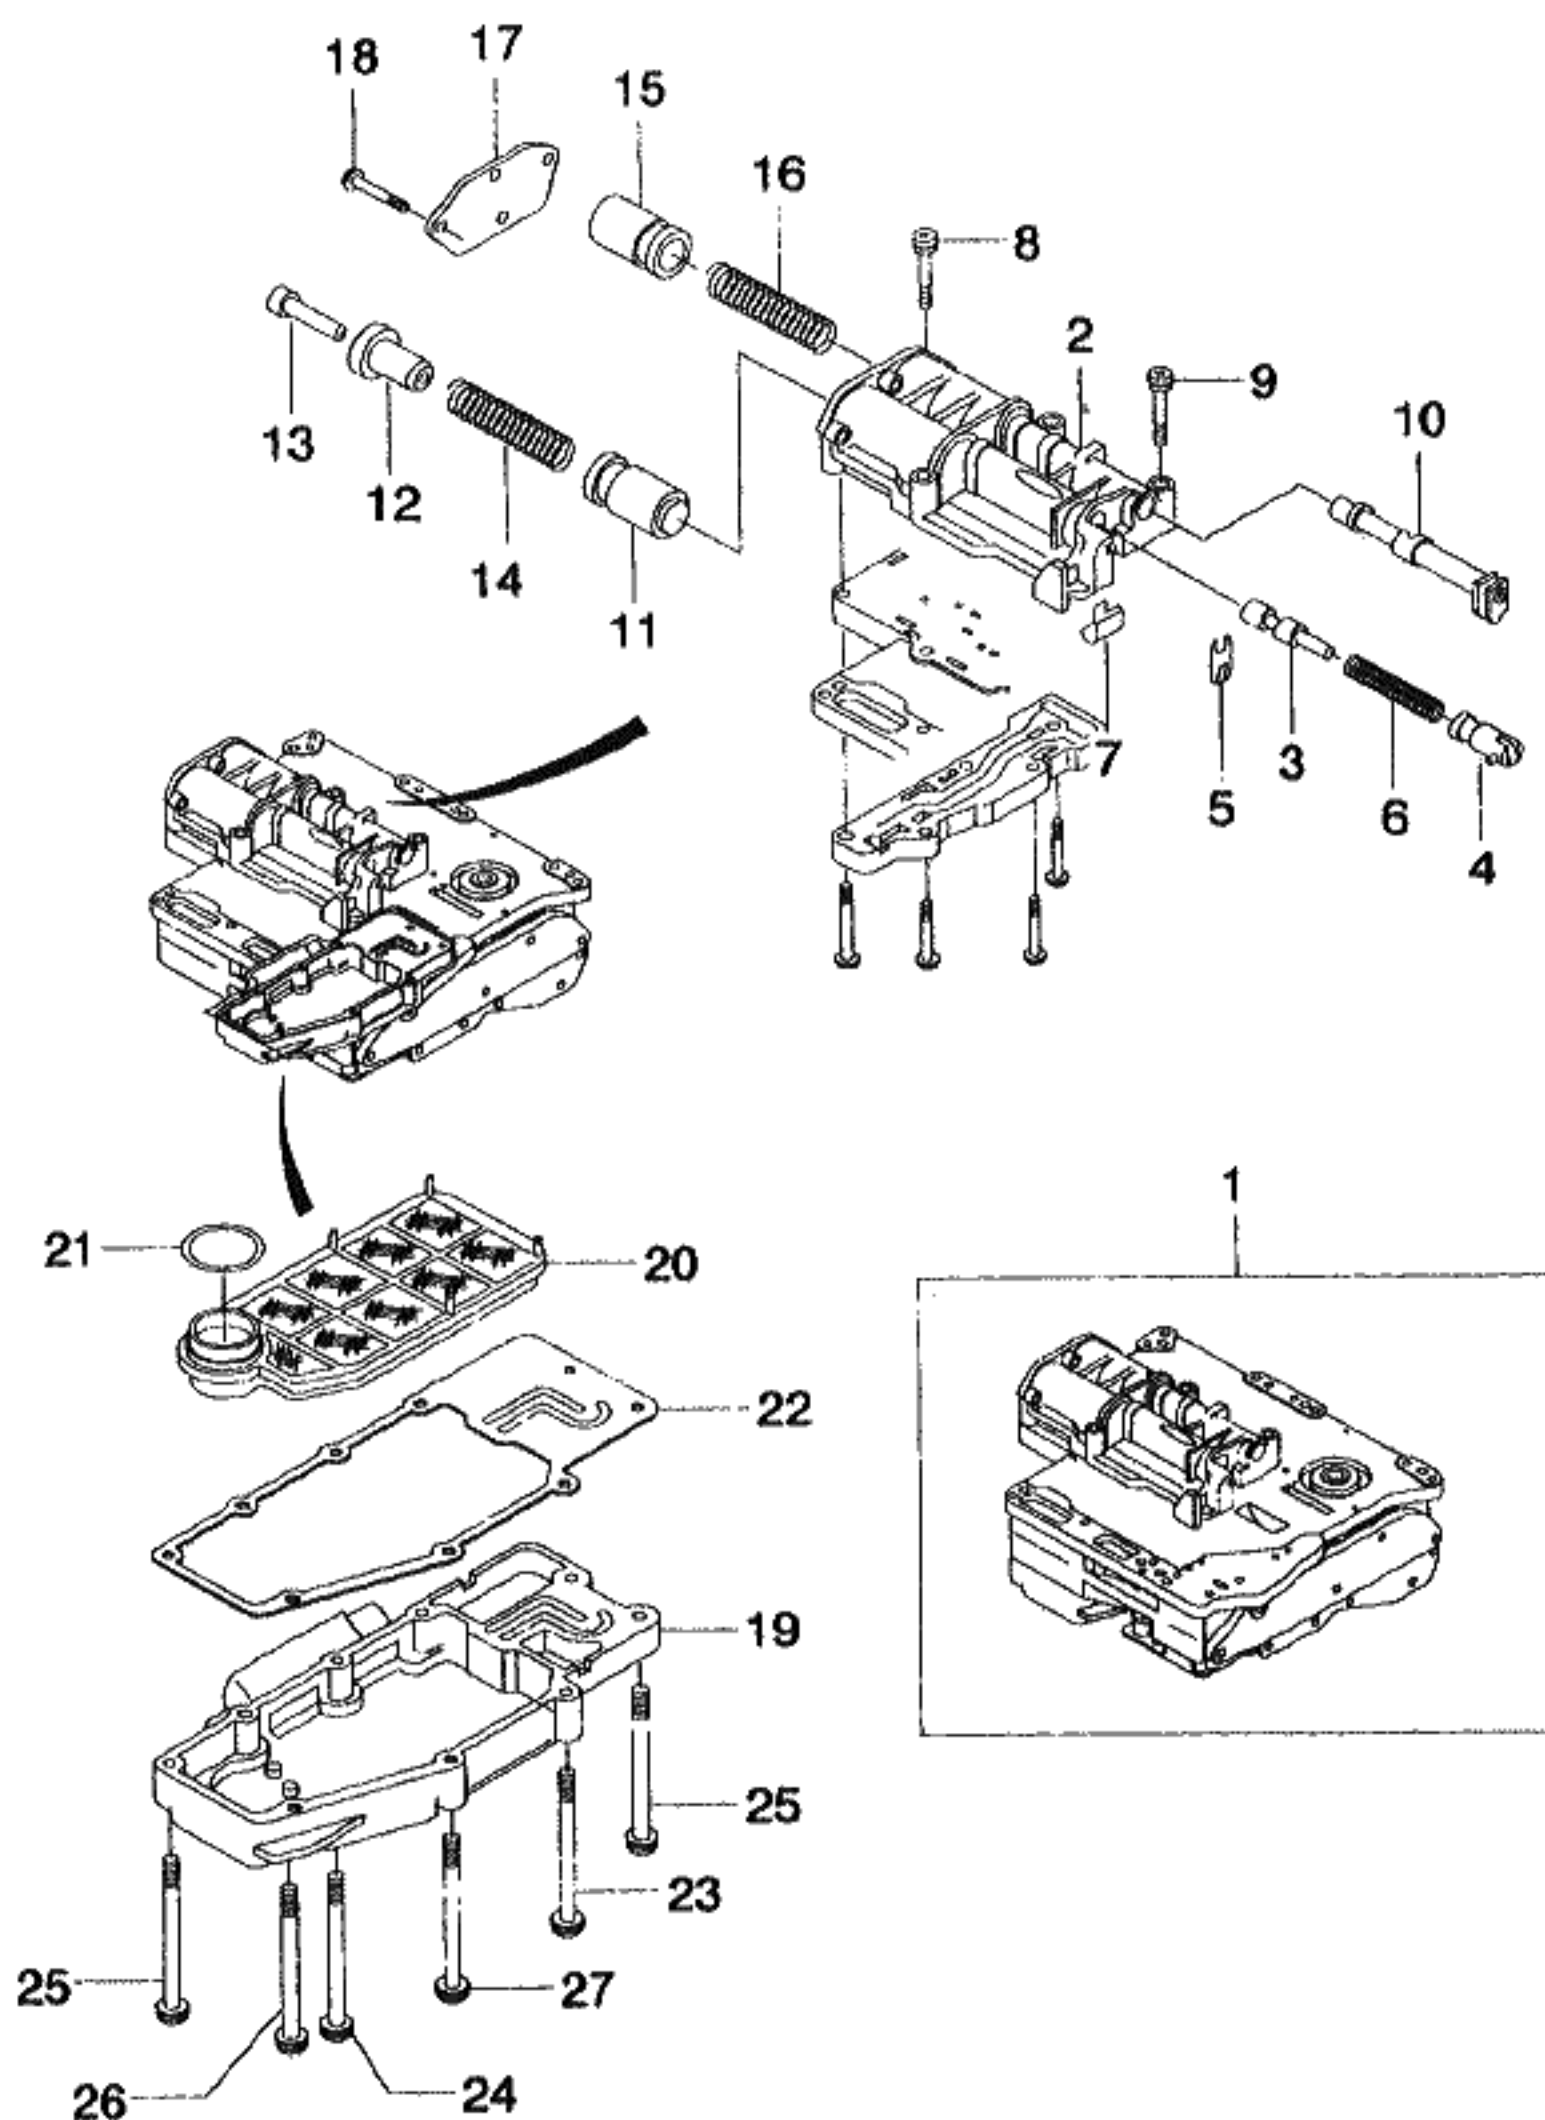

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	1036226013	A	O	O			1				
	[21]	(E)	O RING				(F)JOINT TORIQUE				
		(D)	O RING				(S)ANILLO EN O				
	0734313065	A	O	O			1				
	[22]	(E)	GASKET				(F)JOINT				
		(D)	DICHTUNG				(S)JUNTA				
	1036326117	A	O	O			1				
	[23]	(E)	SCREW-CAP				(F)VIS				
		(D)	SCHRAUBE				(S)TORNILLO				
	0768040248	A	O	O			2			M5x65	
	[24]	(E)	SCREW-CAP				(F)VIS				
		(D)	SCHRAUBE				(S)TORNILLO				
	0768040250	A	O	O			3			M5x60	
	0768040250	A	O	O			2			M5x60	
	[25]	(E)	SCREW-CAP				(F)VIS				
		(D)	SCHRAUBE				(S)TORNILLO				
	0768041231	A	O	O			8			M6x75	
	[26]	(E)	SCREW-CAP				(F)VIS				
		(D)	SCHRAUBE				(S)TORNILLO				
	0768041236	A	O	O			1			M6x80	
	[27]	(E)	SCREW-CAP				(F)VIS				
		(D)	SCHRAUBE				(S)TORNILLO				
	0768040251	A	O	O			1			M5x80	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

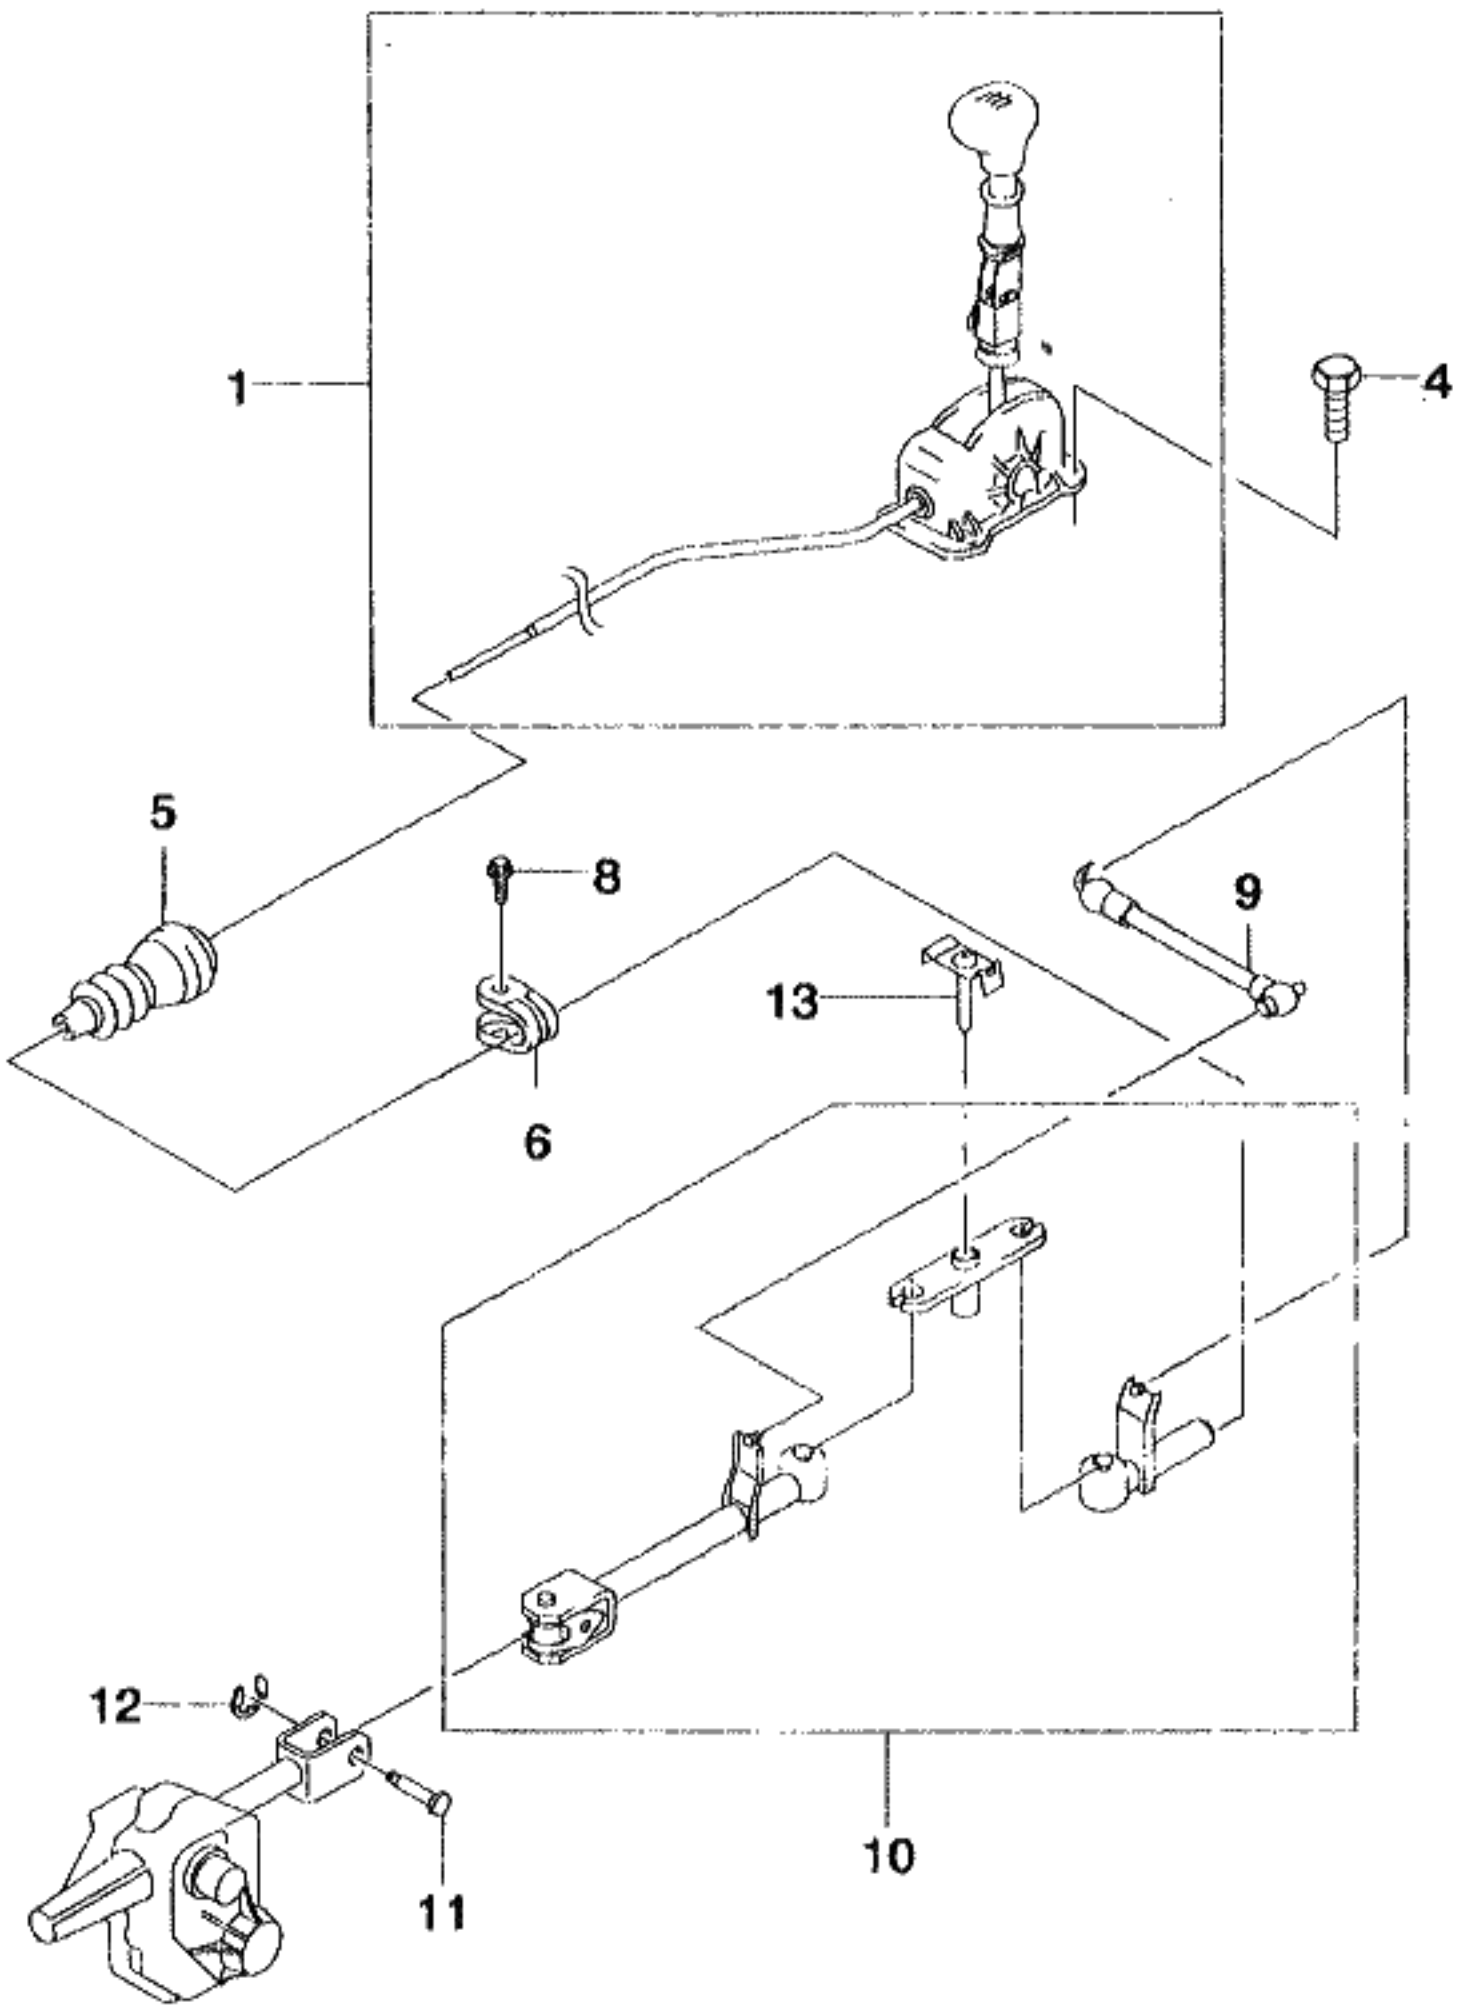


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96246601	(E)CONTROL A-GEAR SHIFT (D)STEUERUNG, GANGSCHALTUNG	M	S	S			(F)CONTROLE (S)CONTROL-PALANCA DE CAMBIO	1		
	[04] 09119-06002	(E)SCREW (D)SCHRAUBE	M	S	S			(F)BOULON (S)PERNO	4		
	[05] 96133781	(E)BELLOWS A-TUBE, GEAR SHIFT (D)GEBLÄSE	M	S	S			(F)SOUFFLET-TUBE (S)FUELLE	1		
	[06] 90217840	(E)CLAMP (D)KLAMMER	M	S	S			(F)PINCE (S)ABRAZADERA	1		
	[08] 09117-08001	(E)BOLT-W/WASHER (D)SCHRAUBE	M	S	S			(F)BOULON (S)PERNO	1		
	[09] 96185372	(E)ROD-GEAR SHIFT CONTROL (D)STAB	M	S	S			(F)TRINGLE (S)VARILLA-PALANCA DE CAMBIO	1		
	[10] 90342949	(E)CONTROL A-GEARSHIFT GUIDE (D)STEUERUNG, GANGSCHALTUNG	M	S	S			(F)CONTROLE-GUIDE (S)CONTROL-GUIA	1		
	[11] 09208-08001	(E)PIN (D)STIFT	M	S	S			(F)BROCHE (S)PASADOR	1		
	[12] 08335-11069	(E)CLIP-RETAINING (D)KLEMME	M	S	S			(F)ATTACHE (S)GRAPA	1		
	[13] 96182212	(E)BOLT (D)SCHRAUBE	M	S	S			(F)BOULON (S)PERNO	1		
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

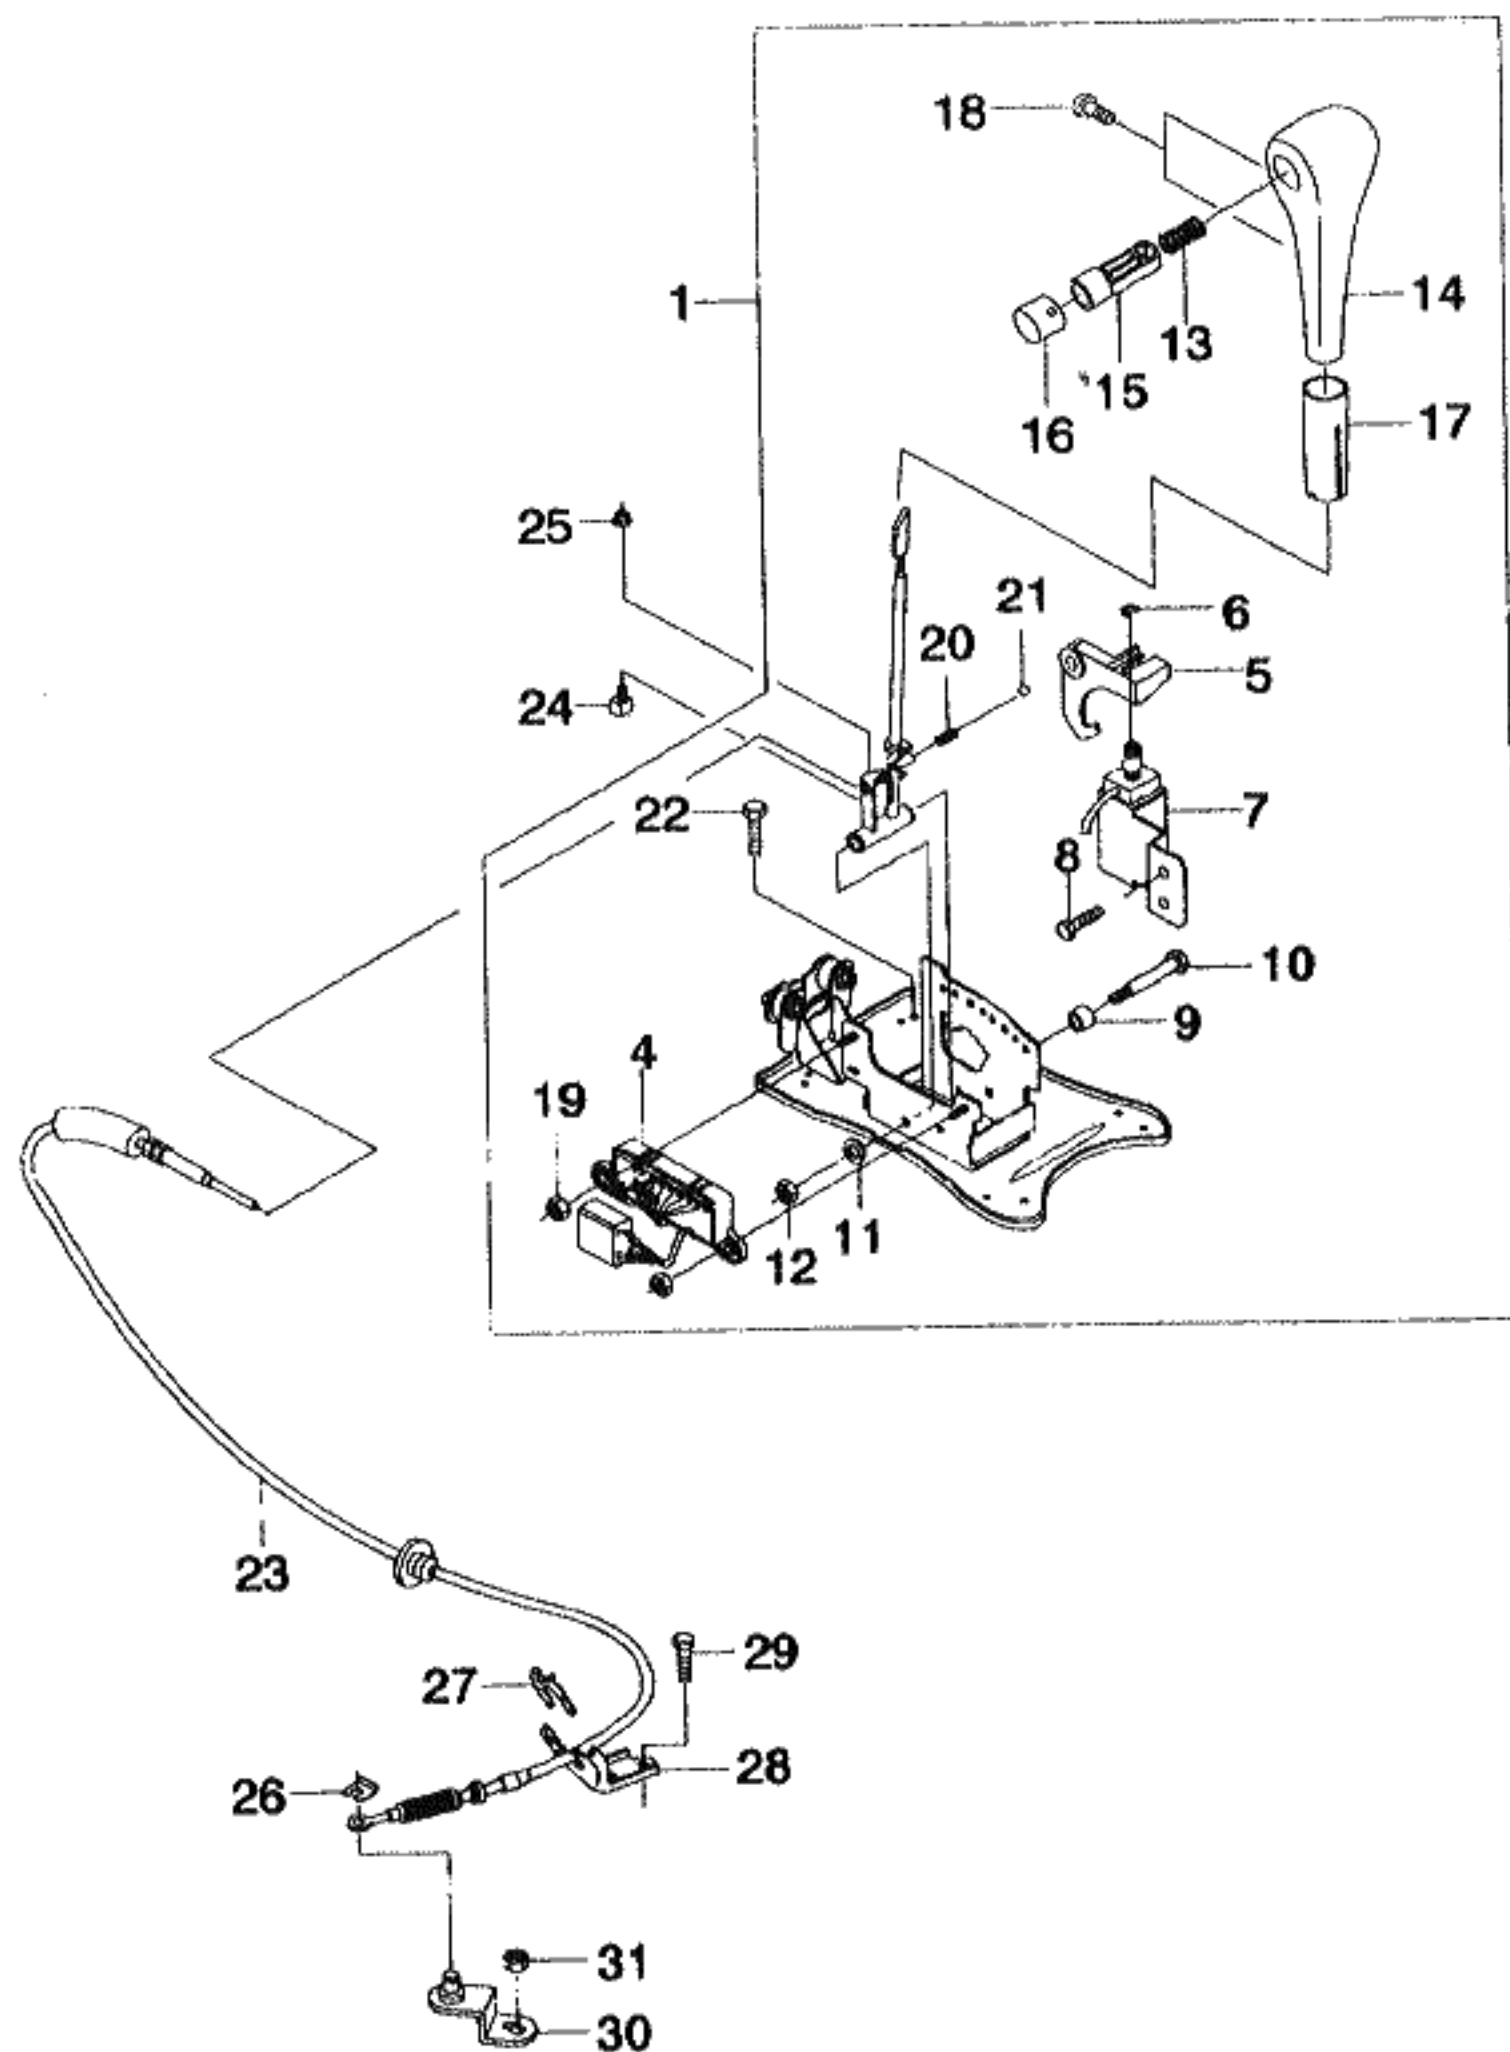


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)SELECTOR CONTROL A (D)STEUERUNG, WÄHLER				(F)SELECTEUR-CONTROLE (S)SELECTOR-CONTROL					
	96183041	A	O	O		1		970817			
	96263779	A	O	O		1		970818			
	96240852	A	O	O	LEATHER	1		970817			
	96263777	A	O	O	LEATHER	1		970818			
	[04]	(E)SWITCH A-PRNDL (D)SCHALTER									
	96213706	A	O	O		1					
	[05]	(E)LEVER-RELEASE,BTSI (D)HEBEL, LÖSUNG									
	96232520	A	O	O		1					
	[06]	(E)E RING (D)RING									
	09383-06002	A	O	O		1					
	[07]	(E)SOLENOID (D)SOLENOID									
	96182745	A	O	O		1					
	[08]	(E)BOLT-HEXAGON (D)SCHRAUBE									
	01137-06129	A	O	O		2					
	[09]	(E)BUSH (D)LAGERFUTTER									
	09306-10004	A	O	O		2					
	[10]	(E)PIECE-CON,BOWDEN CABLE (D)TEIL									
	96183032	A	O	O		1					
	[11]	(E)WASHER-SPRING (D)DICHTUNGSRING									
	08321-31063	A	O	O		1					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

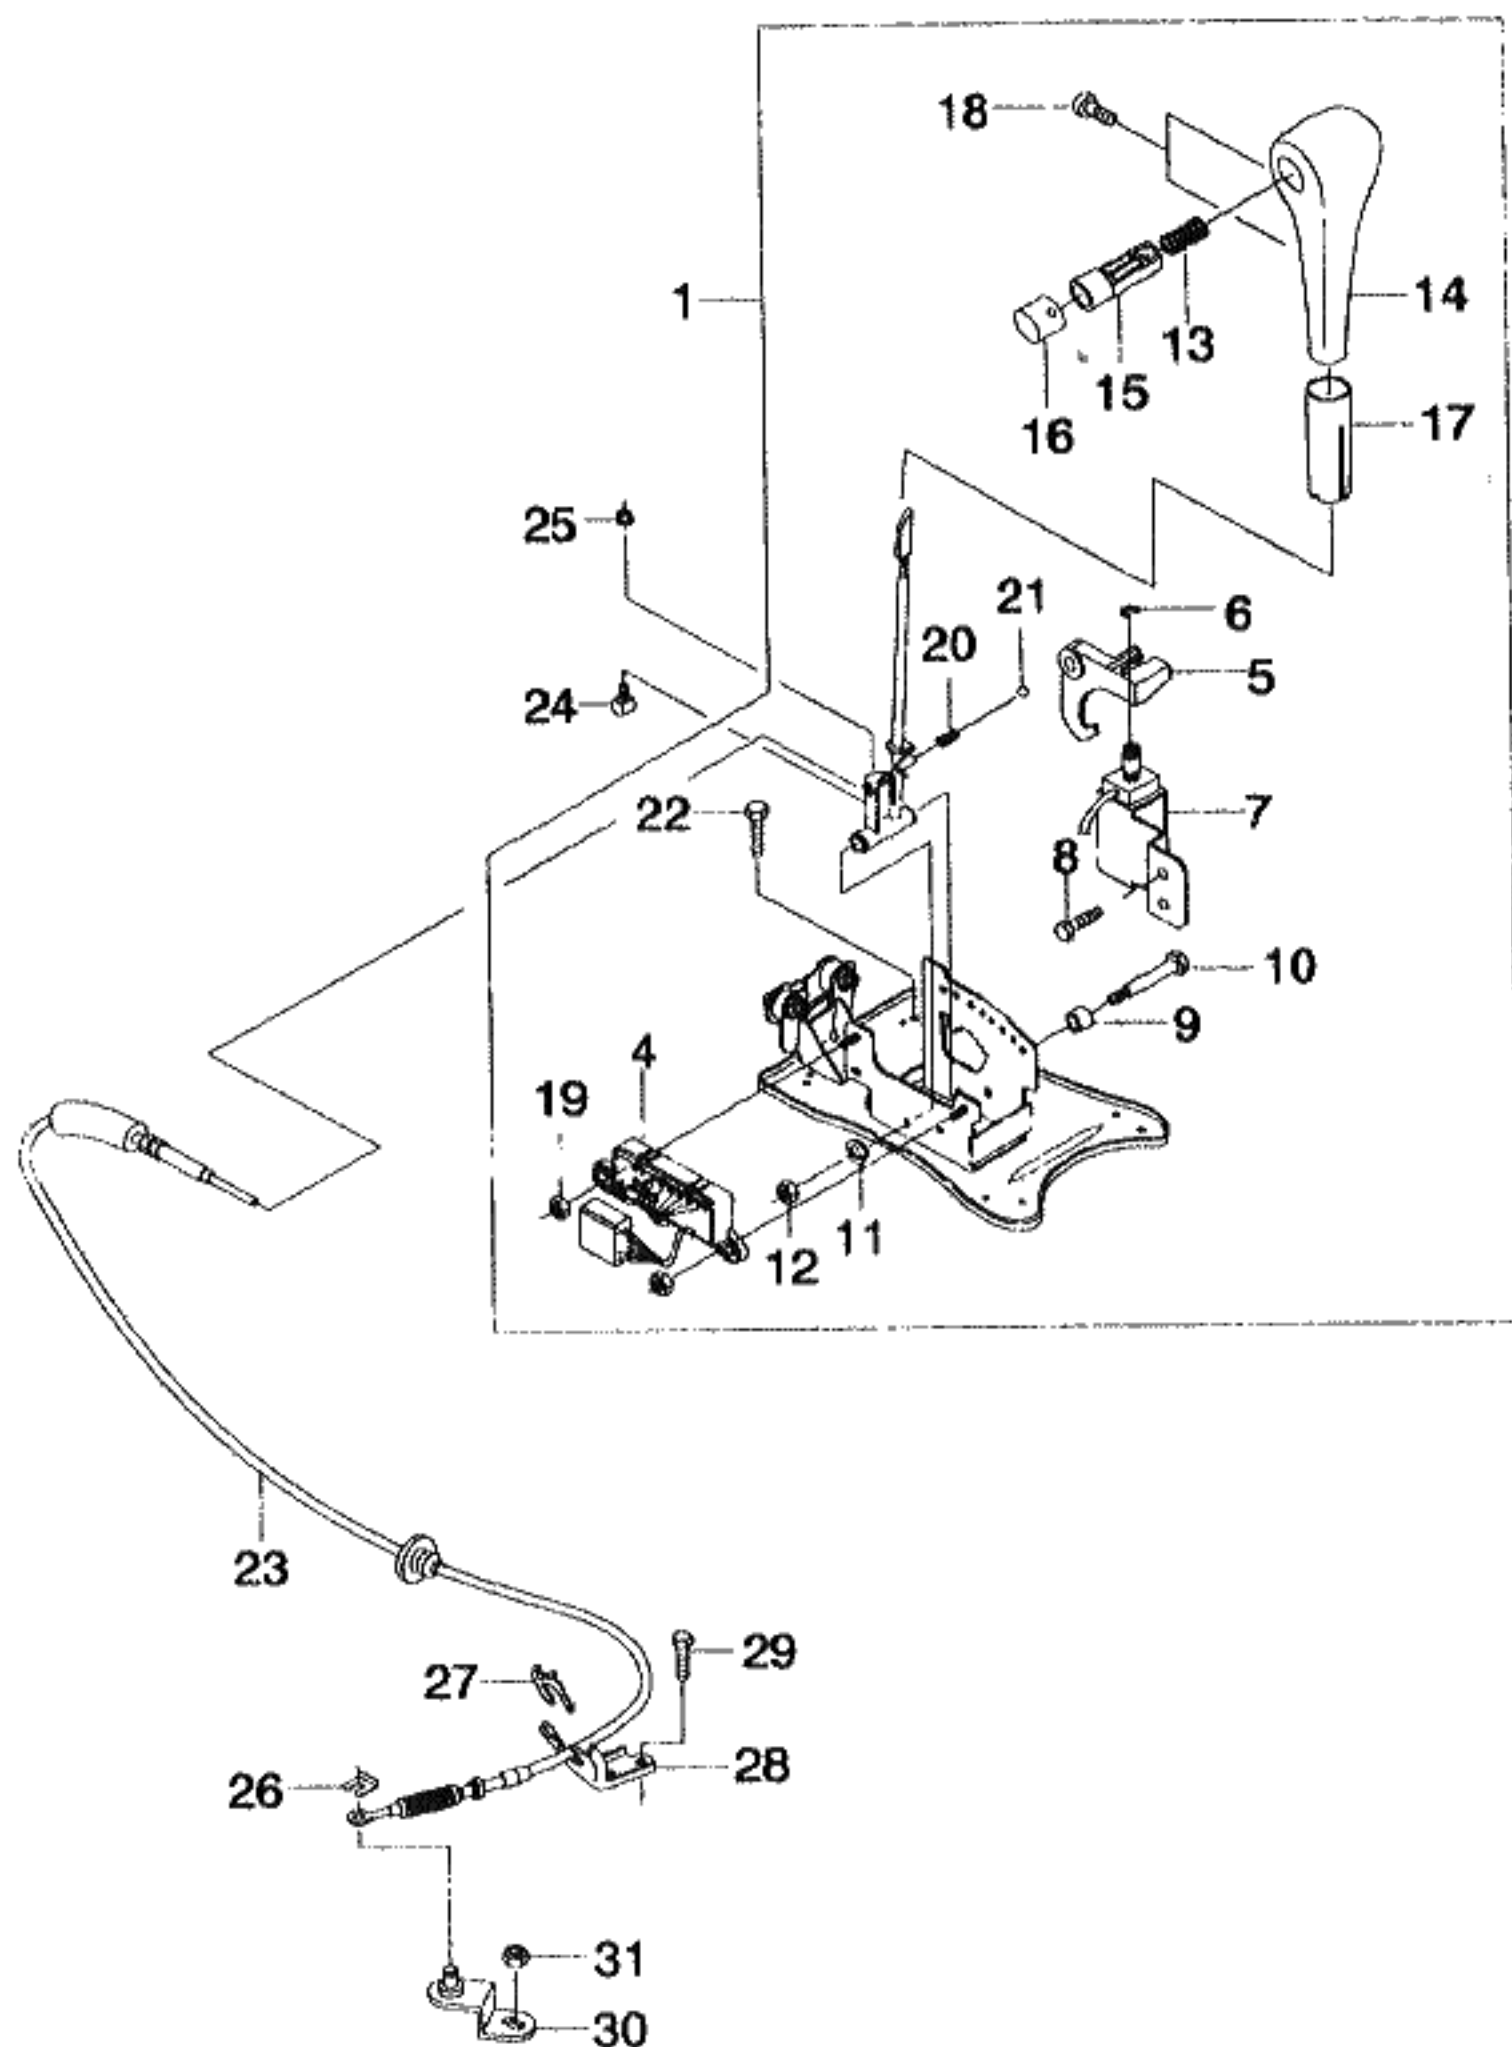


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[12]	(E)NUT-HEXAGON (D)MUTTER					(F)ECROU (S)TUERCA				
	08310-22083	A	O	O			1				
	[13]	(E)SPRING (D)FEDERUNG					(F)RESSORT (S)RESORTE				
	09440-12001	A	O	O			1				
	[14]	(E)HANDLE A-SELECTOR CONTROL (D)HENKEL					(F)POIGNEE (S)MANIJA				
	96183058	A	O	O			1				
	96232525	A	O	O			1			LEATHER	
	[15]	(E)BUTTON-SELECTOR CONTROL (D)KNOPF, WÄHLER					(F)BOUTON-CONTROLE (S)BOTON-CONTROL DE				
	96183056	A	O	O			1				
	96251091	A	O	O			1			LEATHER	
	[16]	(E)CAP-BUTTON (D)DECKEL, KNOPF					(F)CHAPEAU-BOUTON (S)TAPA-BOTON				
	96231825	A	O	O			1				
	96232526	A	O	O			1			LEATHER	
	[17]	(E)SLEEVE-SELECTOR LEVER (D)HÜLSE, WAHL STEUERUNG					(F)CHEMISE (S)MANGA-CONTROL DE				
	96240849	A	O	O			1				
	[18]	(E)SCREW-MACHINE (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	09127-04002	A	O	O			2				
	[19]	(E)NUT-FLANGE (D)MUTTER					(F)ECROU (S)TUERCA				
	08316-15069	A	O	O			2				
	[20]	(E)SPRING (D)FEDERUNG					(F)RESSORT (S)RESORTE				
	09440-07006	A	O	O			1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

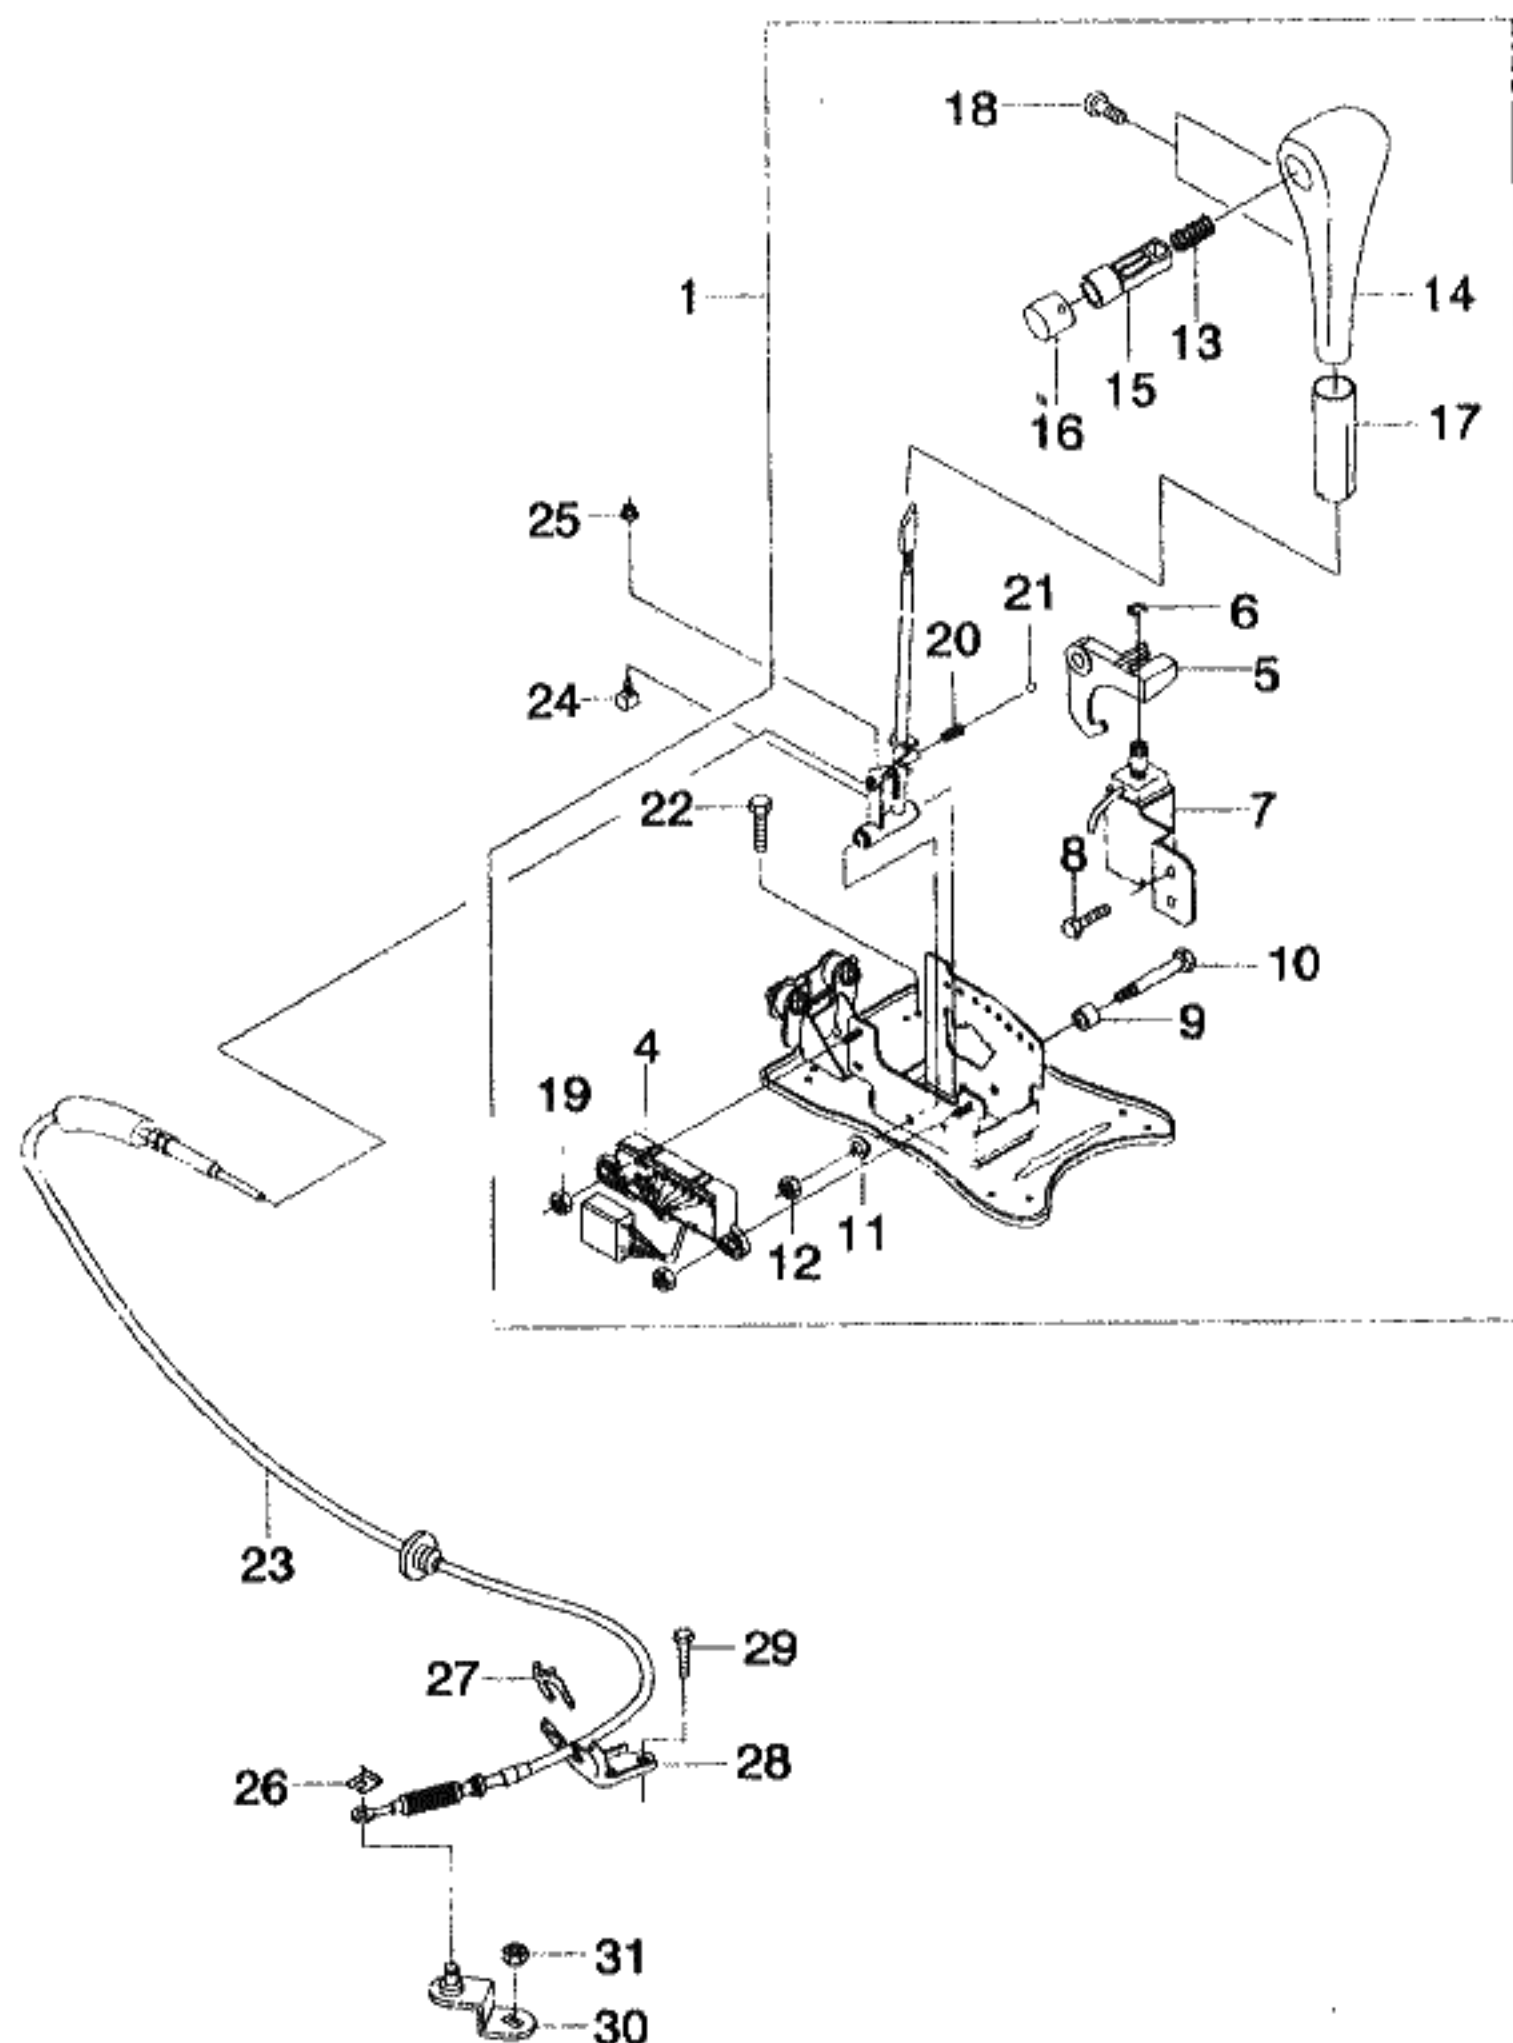

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T' Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[21] 06112-10004	(E)BALL-STEEL (D)KUGEL A	O	O		(F)BOULE (S)BOLA 1						
	[22] 09119-06005	(E)SCREW (D)SCHRAUBE A	O	O		(F)BOULON (S)PERNO 4						
	[23] 96231842	(E)CABLE A-SELECTOR CONTROL (D)KABEL, WÄHLER A	O	O		(F)CABLE-CONTROLE SELECTEUR (S)CABLE-CONTROL DE 1						
	[24] 90121099	(E)PIECE-CLAMP, SELECTOR CONT (D)TEIL A	O	O		(F)PIECE (S)PIEZA 1						
	[25] 08316-28063	(E)NUT-FLANGE (D)MUTTER A	O	O		(F)ECROU (S)TUERCA 1						
	[26] 09383-06001	(E)E RING (D)RING A	O	O		(F)ANNEAU (S)ANILLO 1						
	[27] 09383-19005	(E)E RING (D)RING A	O	O		(F)ANNEAU (S)ANILLO 1						
	[28] 96231832	(E)FASTENER-CABLE SELECTOR (D)BEFESTIGUNG, KABEL A	O	O		(F)ATTACHE-CABLE (S)GRAPA-CABLE 1						
	[29] 01107-08163	(E)BOLT-HEXAGON (D)SCHRAUBE A	O	O		(F)BOULON (S)PERNO 2						
	[30] 96182705	(E)LEVER A-TRANSMISSION (D)HEBEL, TRIEBWELLE A	O	O		(F)LEVIER-TRANSMISSION (S)PALANCA-TRANSMISION 1						


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

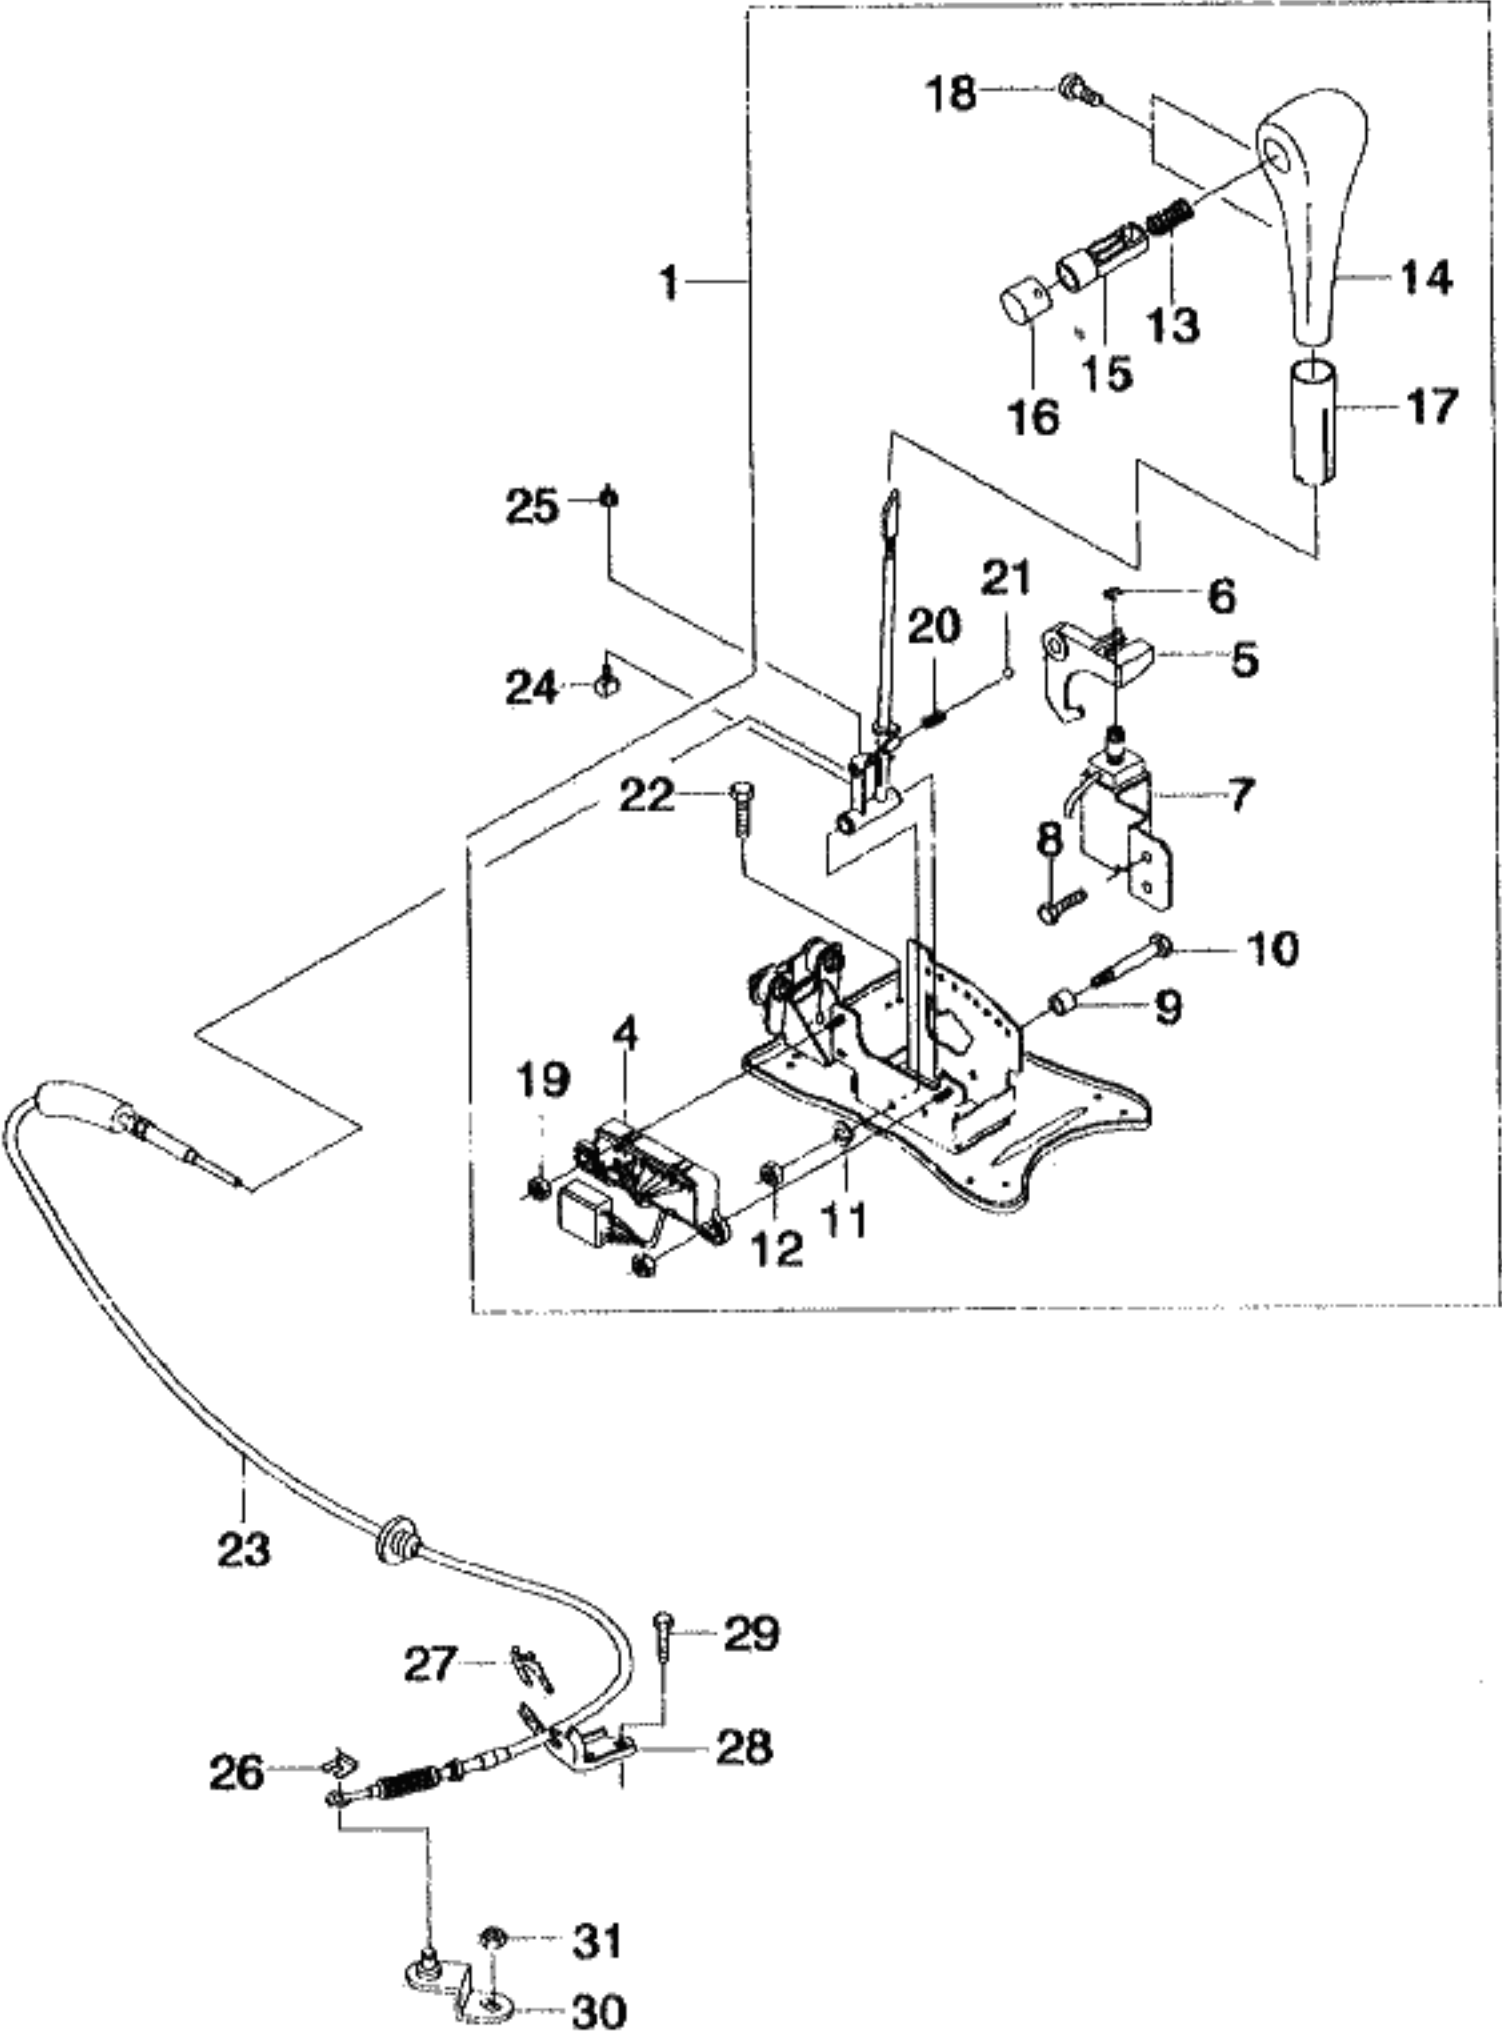


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[31] 09159-08005	(E)NUT (D)MUTTER A O O					(F)ECROU (S)TUERCA 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

4**CHASSIS**


- | | |
|--------------------------------|----------------------------------|
| 4110 AXLE SHAFT UNIT | 4820 STEERING COLUMN COVER |
| 4120 AXLE SHAFT PARTS | 4830 STEERING COLUMN PARTS |
| 4130 KNUCKLE & HUB | 4910 STEERING GEAR UNIT & FIXING |
| 4140 FRONT SHOCK ABSORBER | 4930 POWER STEERING GEAR PARTS |
| 4150 CONTROL ARM | 4950 POWER STEERING PIPE LINE |
| 4310 REAR AXLE | 4960 P/S PUMP & COMPRESSOR MOUNT |
| 4320 REAR SHOCK ABSORBER | |
| 4330 REAR KNUCKLE & HUB | |
| 4510 FRONT BRAKE | |
| 4521 REAR BRAKE(DISC TYPE) | |
| 4530 PARKING BRAKE | |
| 4610 MASTER BRAKE UNIT | |
| 4620 MASTER CYLINDER & BOOSTER | |
| 4640 BRAKE PEDAL | |
| 4650 BRAKE PIPE (NON ABS) | |
| 4651 BRAKE PIPE(ABS) | |
| 4710 ANTI LOCK BRAKE SYSTEM | |
| 4810 STEERING WHEEL | |

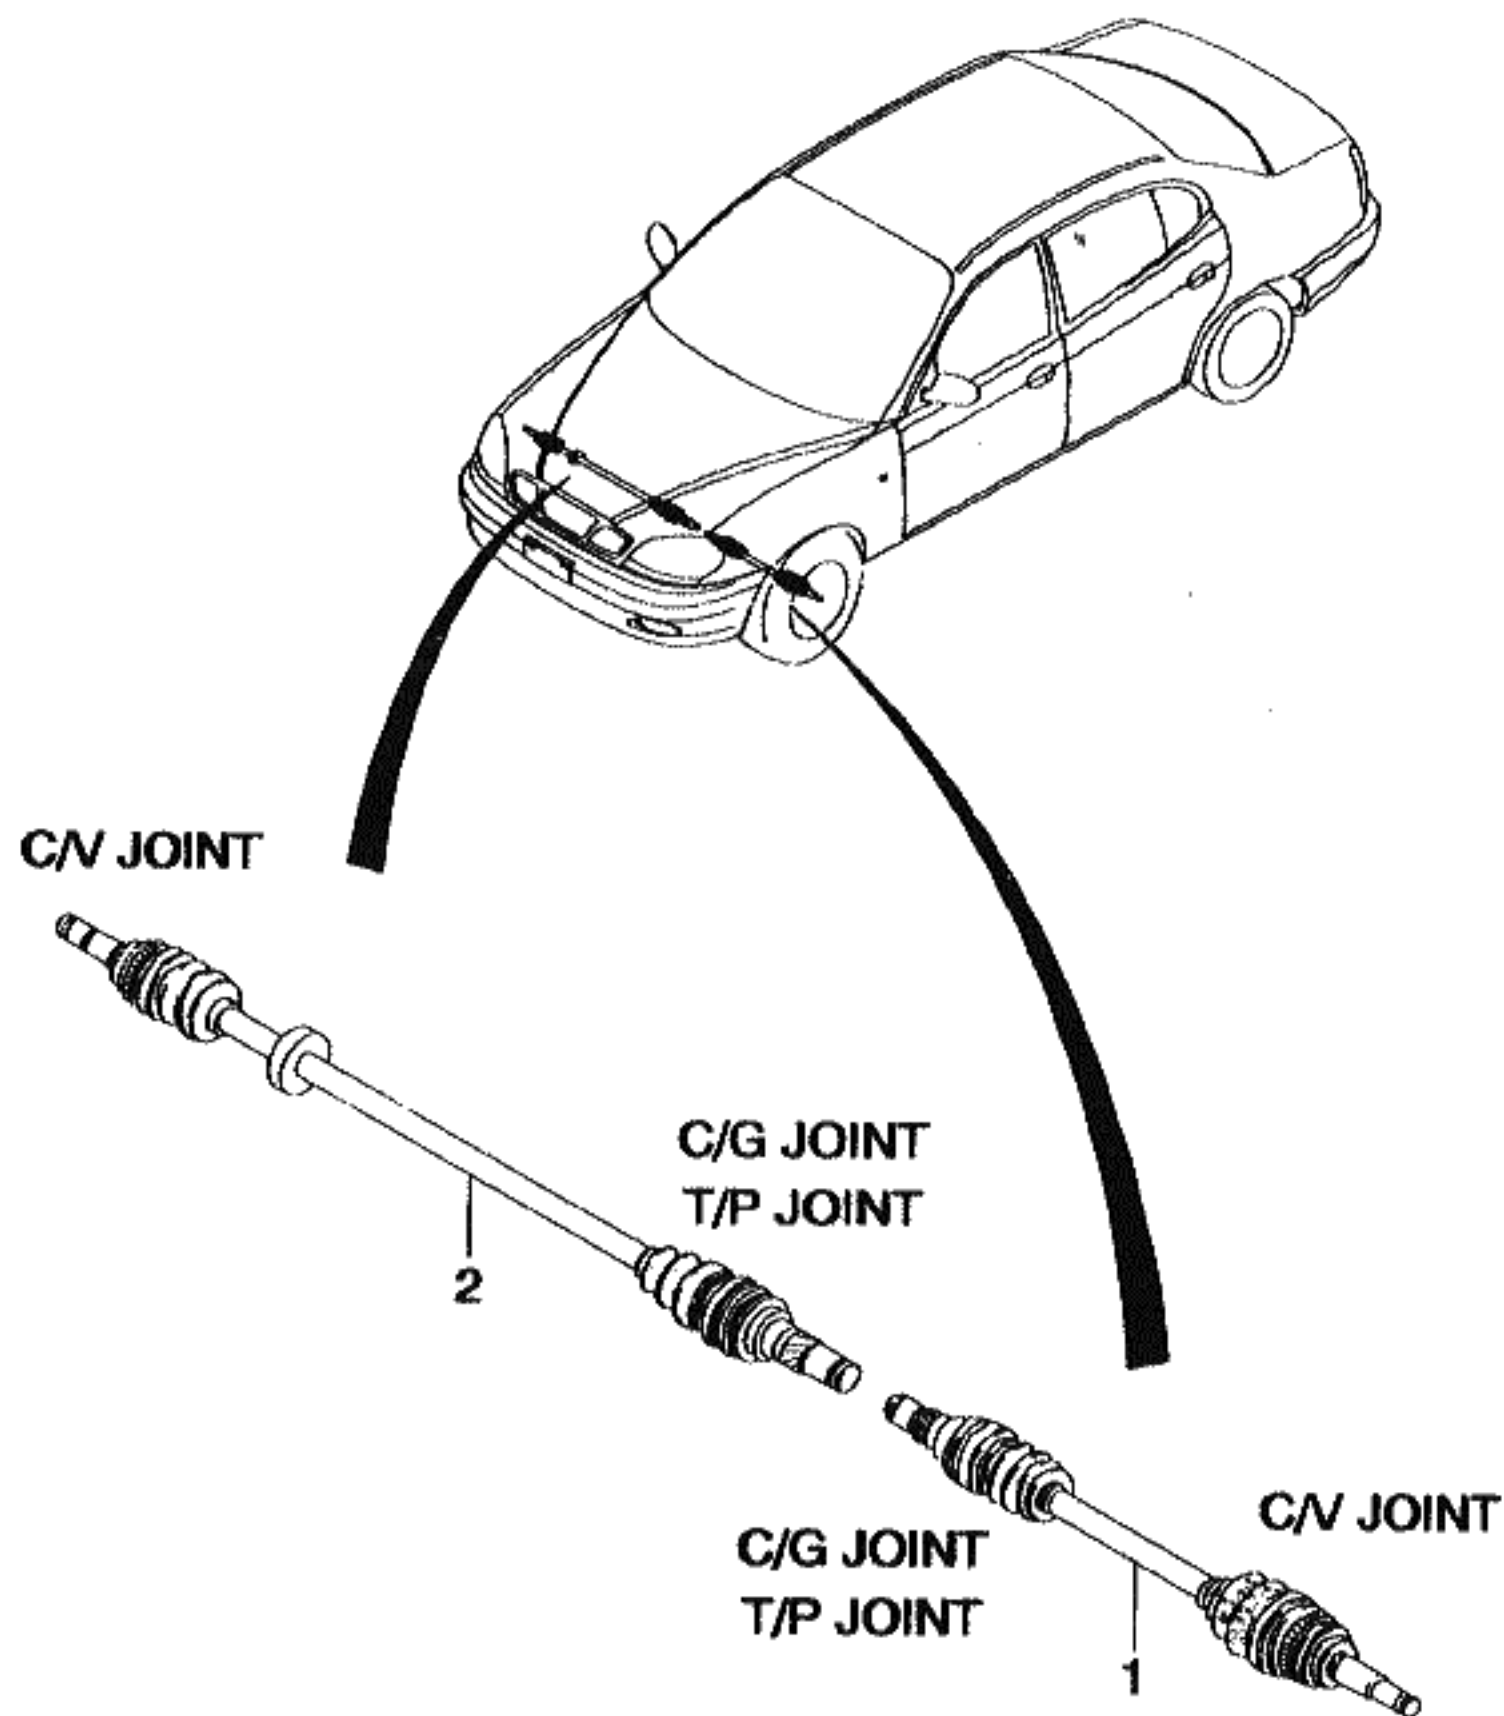

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SHAFT A-AXLE,FR (D)SPINDEL,VORDER-ACHSE					(F)ARBRE-PONT AVANT (S)EJE-FRENTE				
	96183106	M	S	S			LH 1				MM
	96183104	M	O	O	&JL9JTC		LH 1				PM
	96183098	A	O	O			LH 1	970827			WF
O	96257816	A	O	O			LH 1	970828			CZ
	96183096	A	O	O	&JL9JTC		LH 1				YF
	[02]	(E)SHAFT A-AXLE,FR (D)SPINDEL,VORDER-ACHSE					(F)ARBRE-PONT AVANT (S)EJE-FRENTE				
	96183107	M	S	S			RH 1				NM
	96183105	M	O	O	&JL9JTC		RH 1				QM
	96251154	A	O	O			RH 1				SF
	96251153	A	O	O	&JL9JTC		RH 1				RF
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

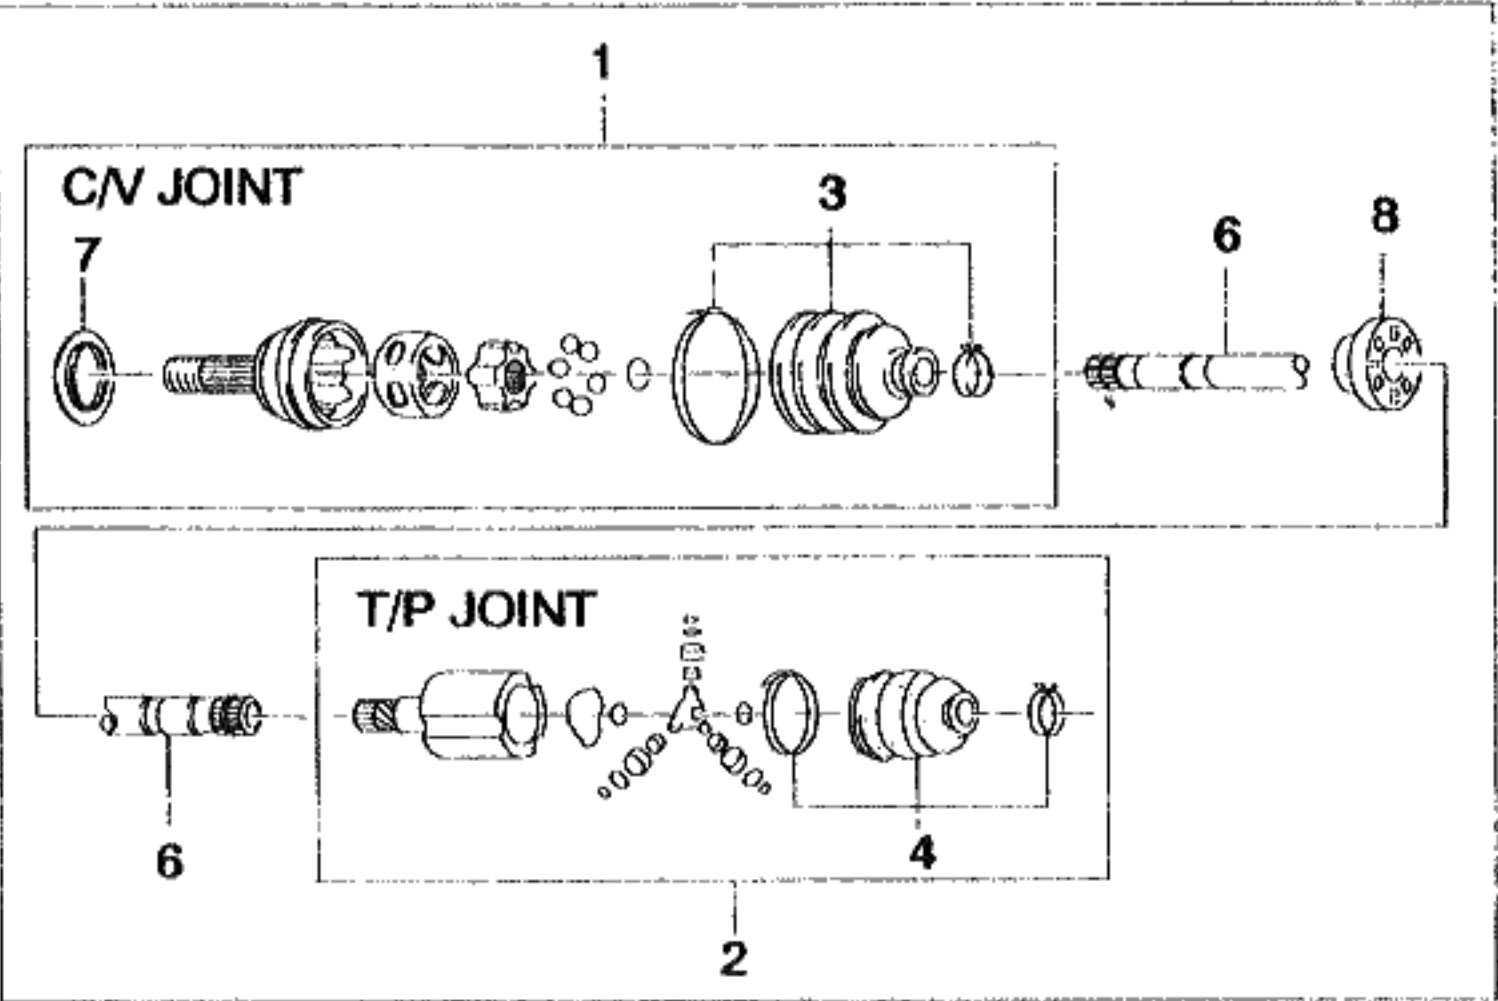


RH

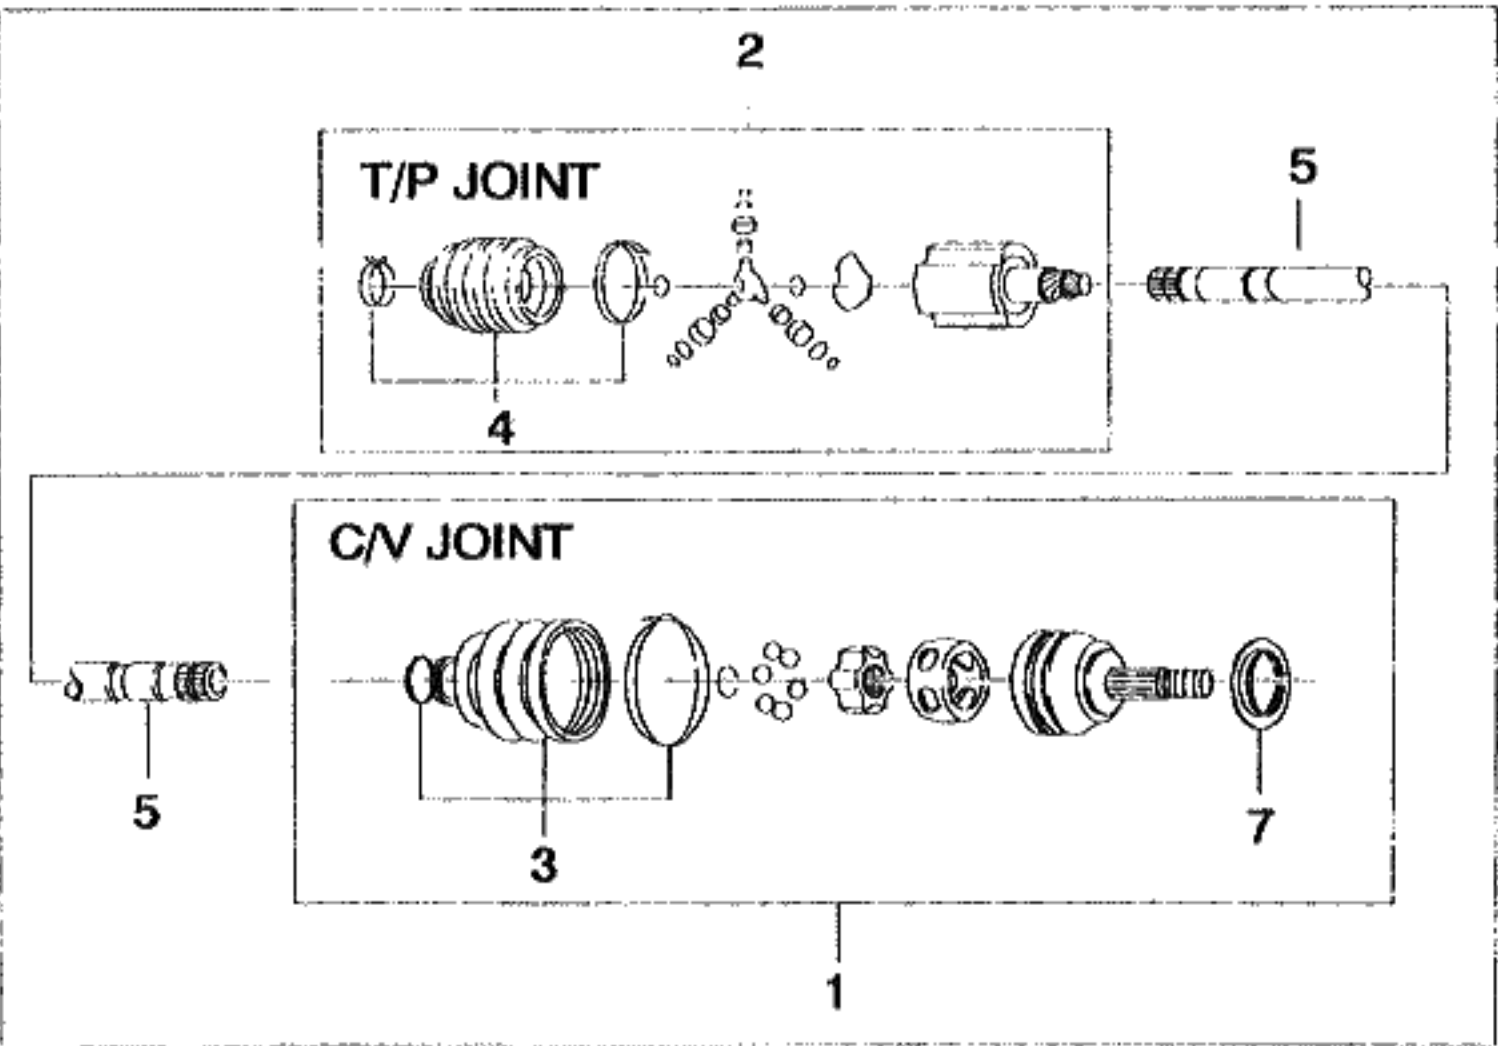


LH

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) JOINT KIT-SEAL&CV (D) GLIED				(F) JOINT (S) UNION					
	96243573	.	S	S			2				
	96243575	.	O	O	&JL9/JTC		2				
	[02]	(E) JOINT KIT-SEAL&T/P (D) GLIED				(F) JOINT (S) UNION					
	96245286	M	S	S			2				
	96245287	A	O	O		LH 1					
	96245288	A	O	O		RH 1					
	[03]	(E) SEAL KIT-CV JOINT (D) DICHTUNG				(F) JOINT (S) SELLO					
	96243578	.	S	S			2				
	[04]	(E) SEAL KIT-CV JOINT (D) GLIED				(F) JOINT (S) UNION					
	96245292	.	S	S			2				
	[05]	(E) SHAFT-AXLE (D) SPINDEL,ACHSE				(F) ARBRE-AXE OU PONT (S) EJE					
	510973	M	S	S		LH 1					
	510945	A	O	O		LH 1					
	[06]	(E) SHAFT-AXLE (D) SPINDEL,ACHSE				(F) ARBRE-AXE OU PONT (S) EJE					
	510974	M	S	S		RH 1					
	510946	A	O	O		RH 1					
	[07]	(E) RING-DEFLECTING (D) RING				(F) ANNEAU (S) ANILLO					
	510449	.	S	S			2				
	[08]	(E) DAMPER-DYNAMIC (D) DÄMPFER				(F) AMORTISSEUR (S) AMORTIGUADOR					
	96245301	M	S	S		RH 1					
	96245302	A	O	O		RH 1				113HZ	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

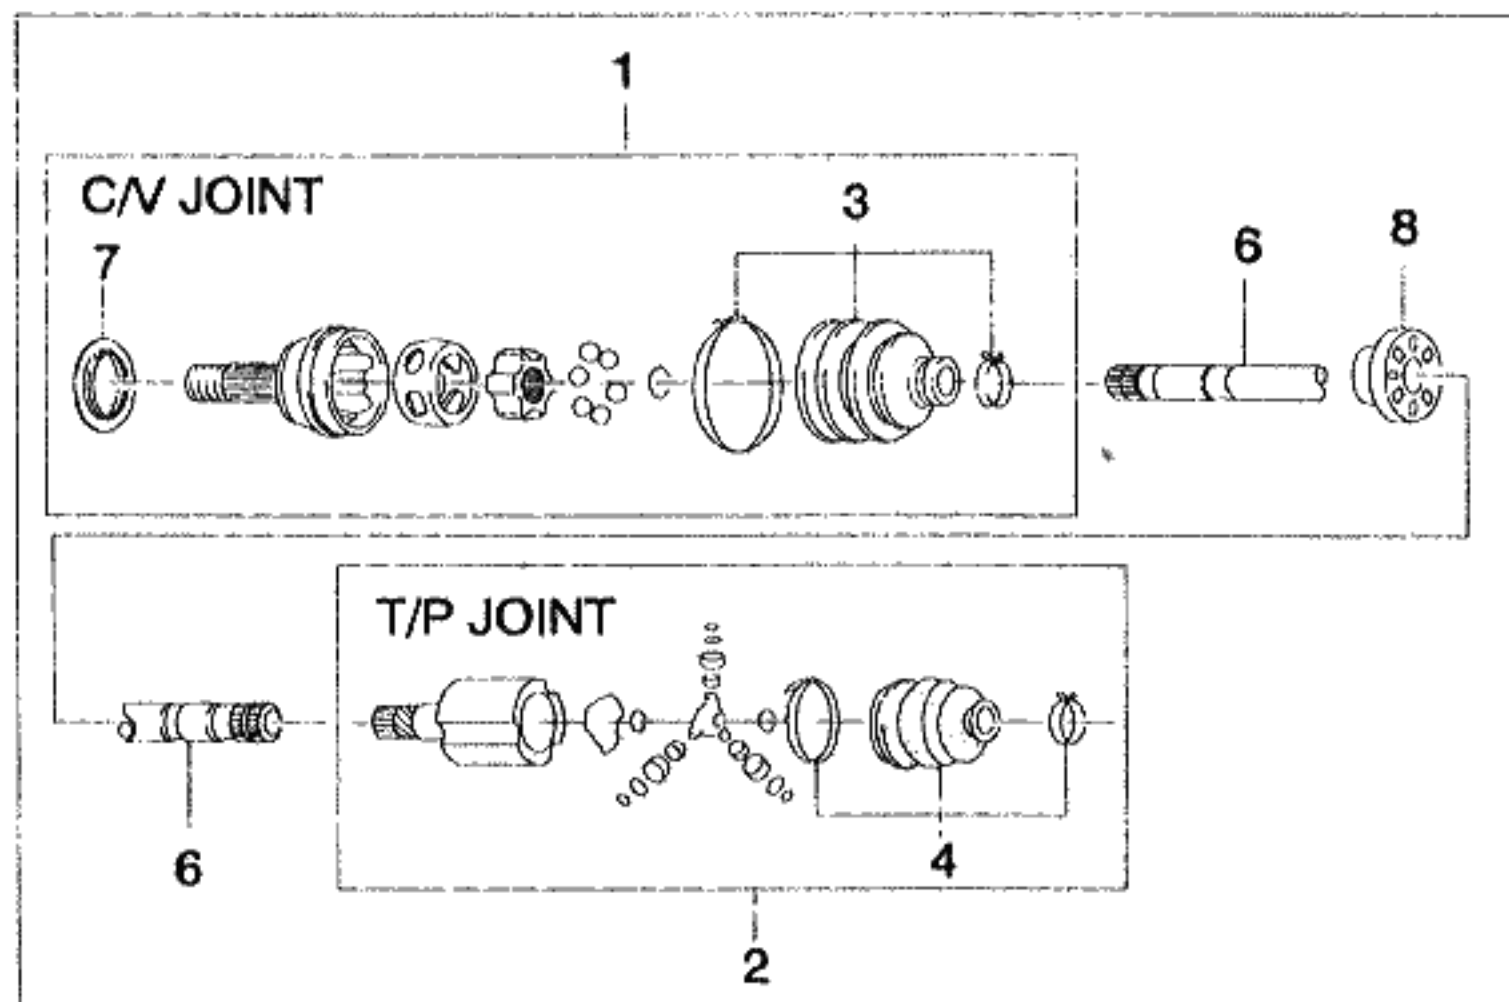


RH

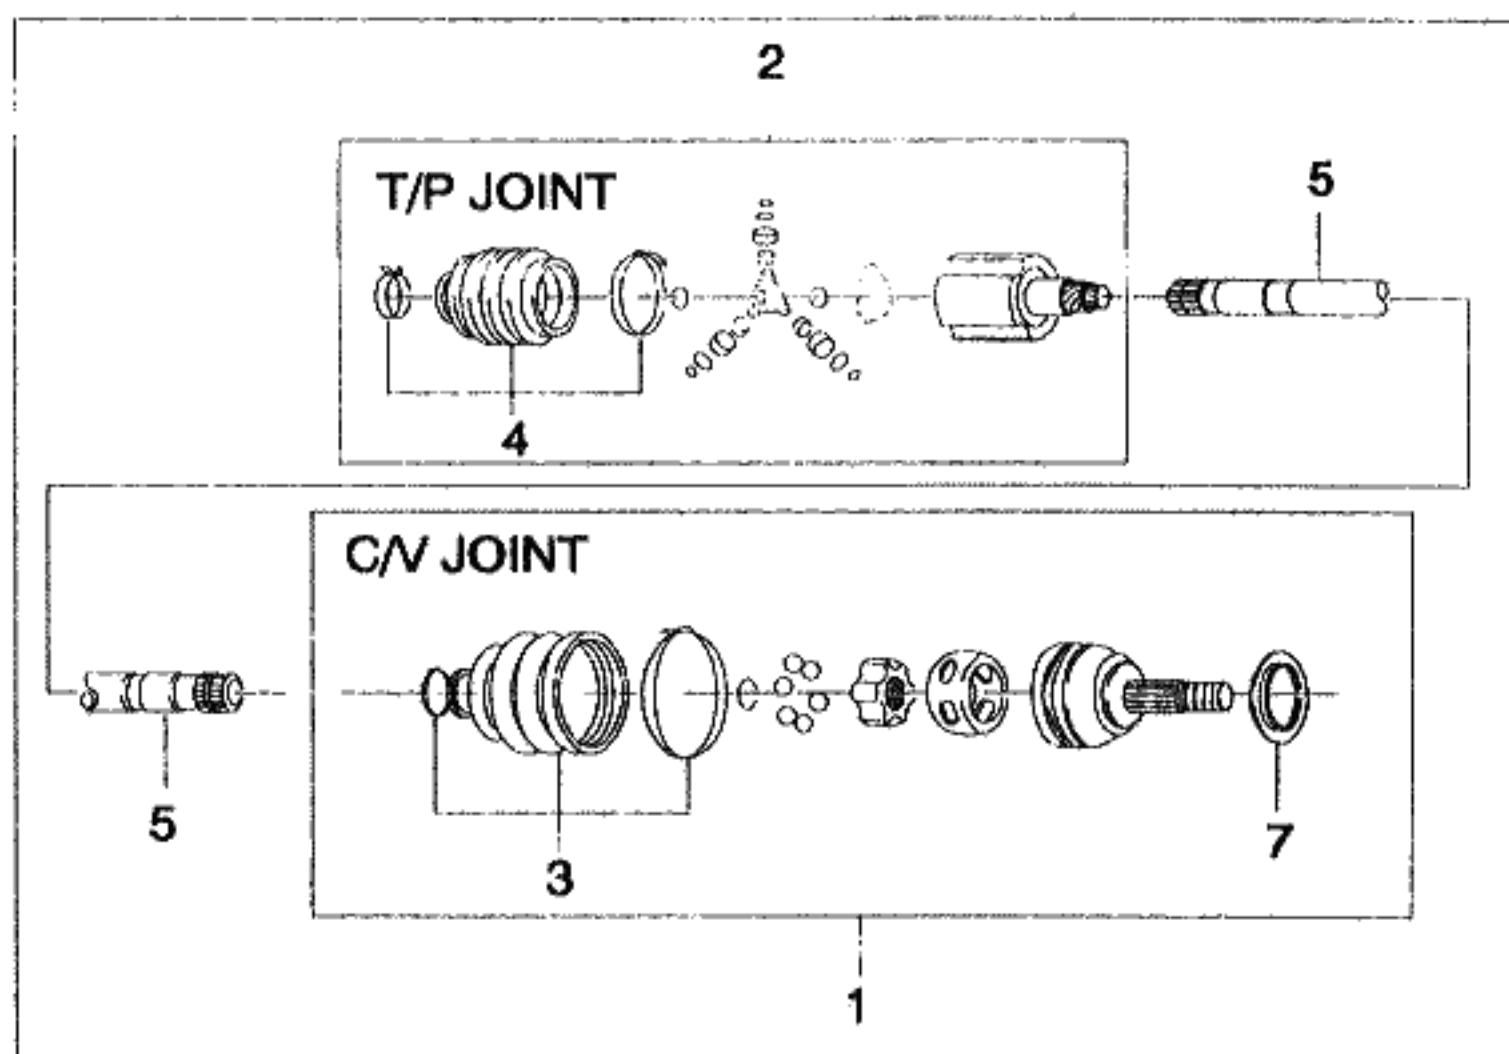


LH

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96181325	A	O	O			RH 1			148HZ	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A = COMMON						

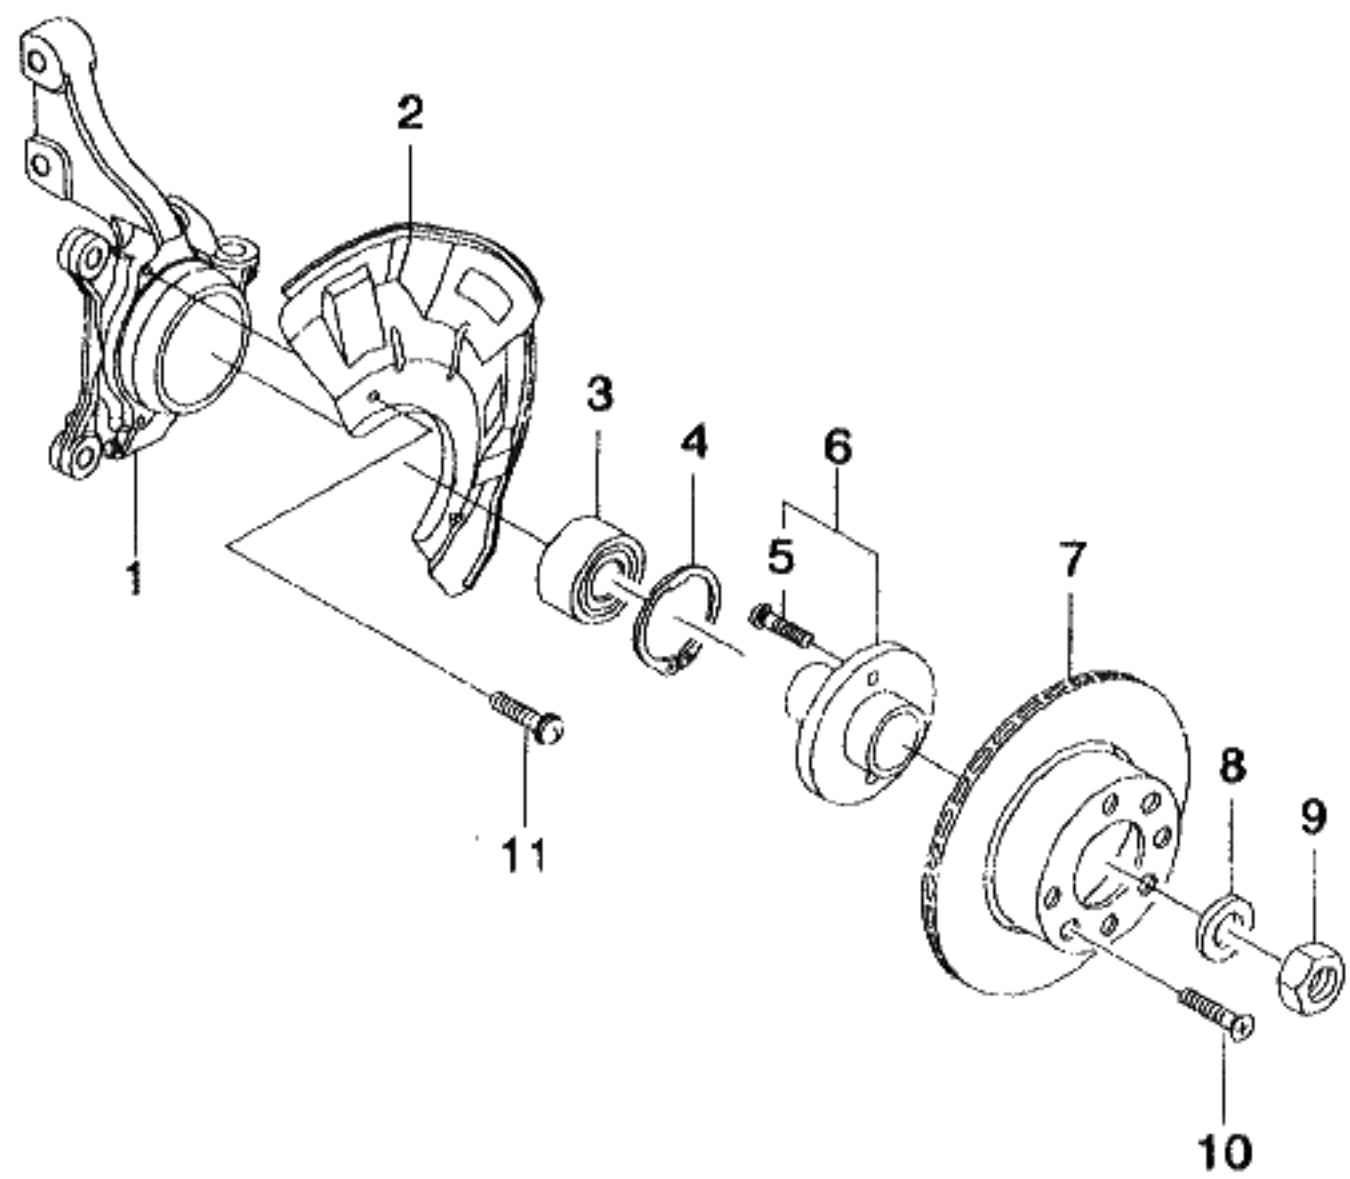


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) KNUCKLE-STEERING (D) KNUCKLE, LENKUNG						(F) ARTICULATION-DIRECTION (S) NUDILLO-VOLANTE			
	96207563	.	S	S				LH 1			
	96207564	.	S	S				RH 1			
	[02]	(E) COVER SHEET (D) DECKEL						(F) COUVERTURE (S) CUBIERTA			
	96217698	.	S	S				LH 1			
	96217699	.	S	S				RH 1			
	[03]	(E) BEARING (D) KUGELLAGER						(F) ROULEMENT-BILLE INCLINEE (S) COJINETE-BOLA INCLINADA			
	09267-39004	.	S	S				2			
	[04]	(E) RING-RETAINER (D) RING, HALTER						(F) ANNEAU-DE RETENTION (S) ANILLO-RETENEDOR			
	96207566	.	S	S				2			
	[05]	(E) BOLT (D) SCHRAUBE						(F) BOULON (S) PERNO			
	09119-12002	.	S	.				8		14"	
	09119-12002	.	O	S				10		15"	
	[06]	(E) HUB A-DISC BRAKE, FR (D) NABE, SCHEIBENBREMSE						(F) MOYEU-DISQUE DE FREIN (S) CUBO-FRENO DE DISCOS			
	96218420	.	S	.				2		14"	
	96205939	.	O	S				2		15"	
	[07]	(E) DISC-BRAKE, FR (D) SCHEIBENBREMSE						(F) DISQUE-FREIN (S) DISCO-FRENO			
	96238672	.	S	.				2		14"	
	96238673	.	O	S				2		15"	
	[08]	(E) WASHER-PLAIN (D) DICHTUNGSRING						(F) RONDELLE (S) ARANDELA			
	09160-20001	.	S	S				2			
LEVEL						T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

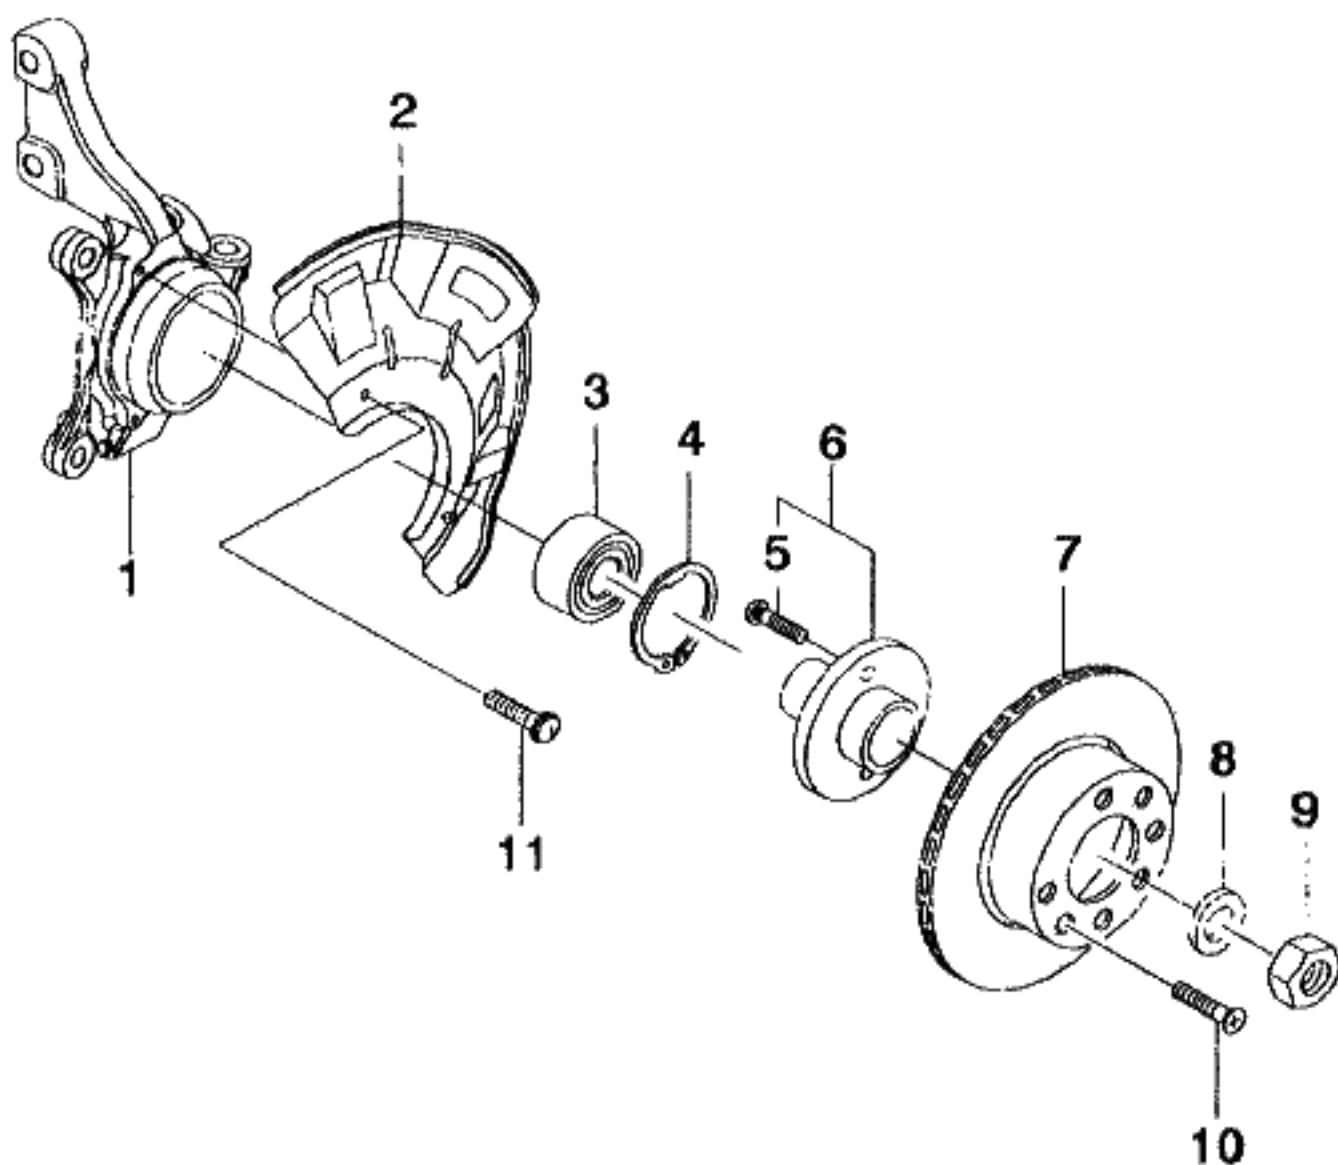


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[09] 09159-20004	(E)NUT (D)MUTTER . S S				(F)ECROU (S)TUERCA 2					
	[10] 02126-06163	(E)SCREW-CR MACHINE (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 2					
	[11] 01134-06123	(E)BOLT-HEXAGON (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 4					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON


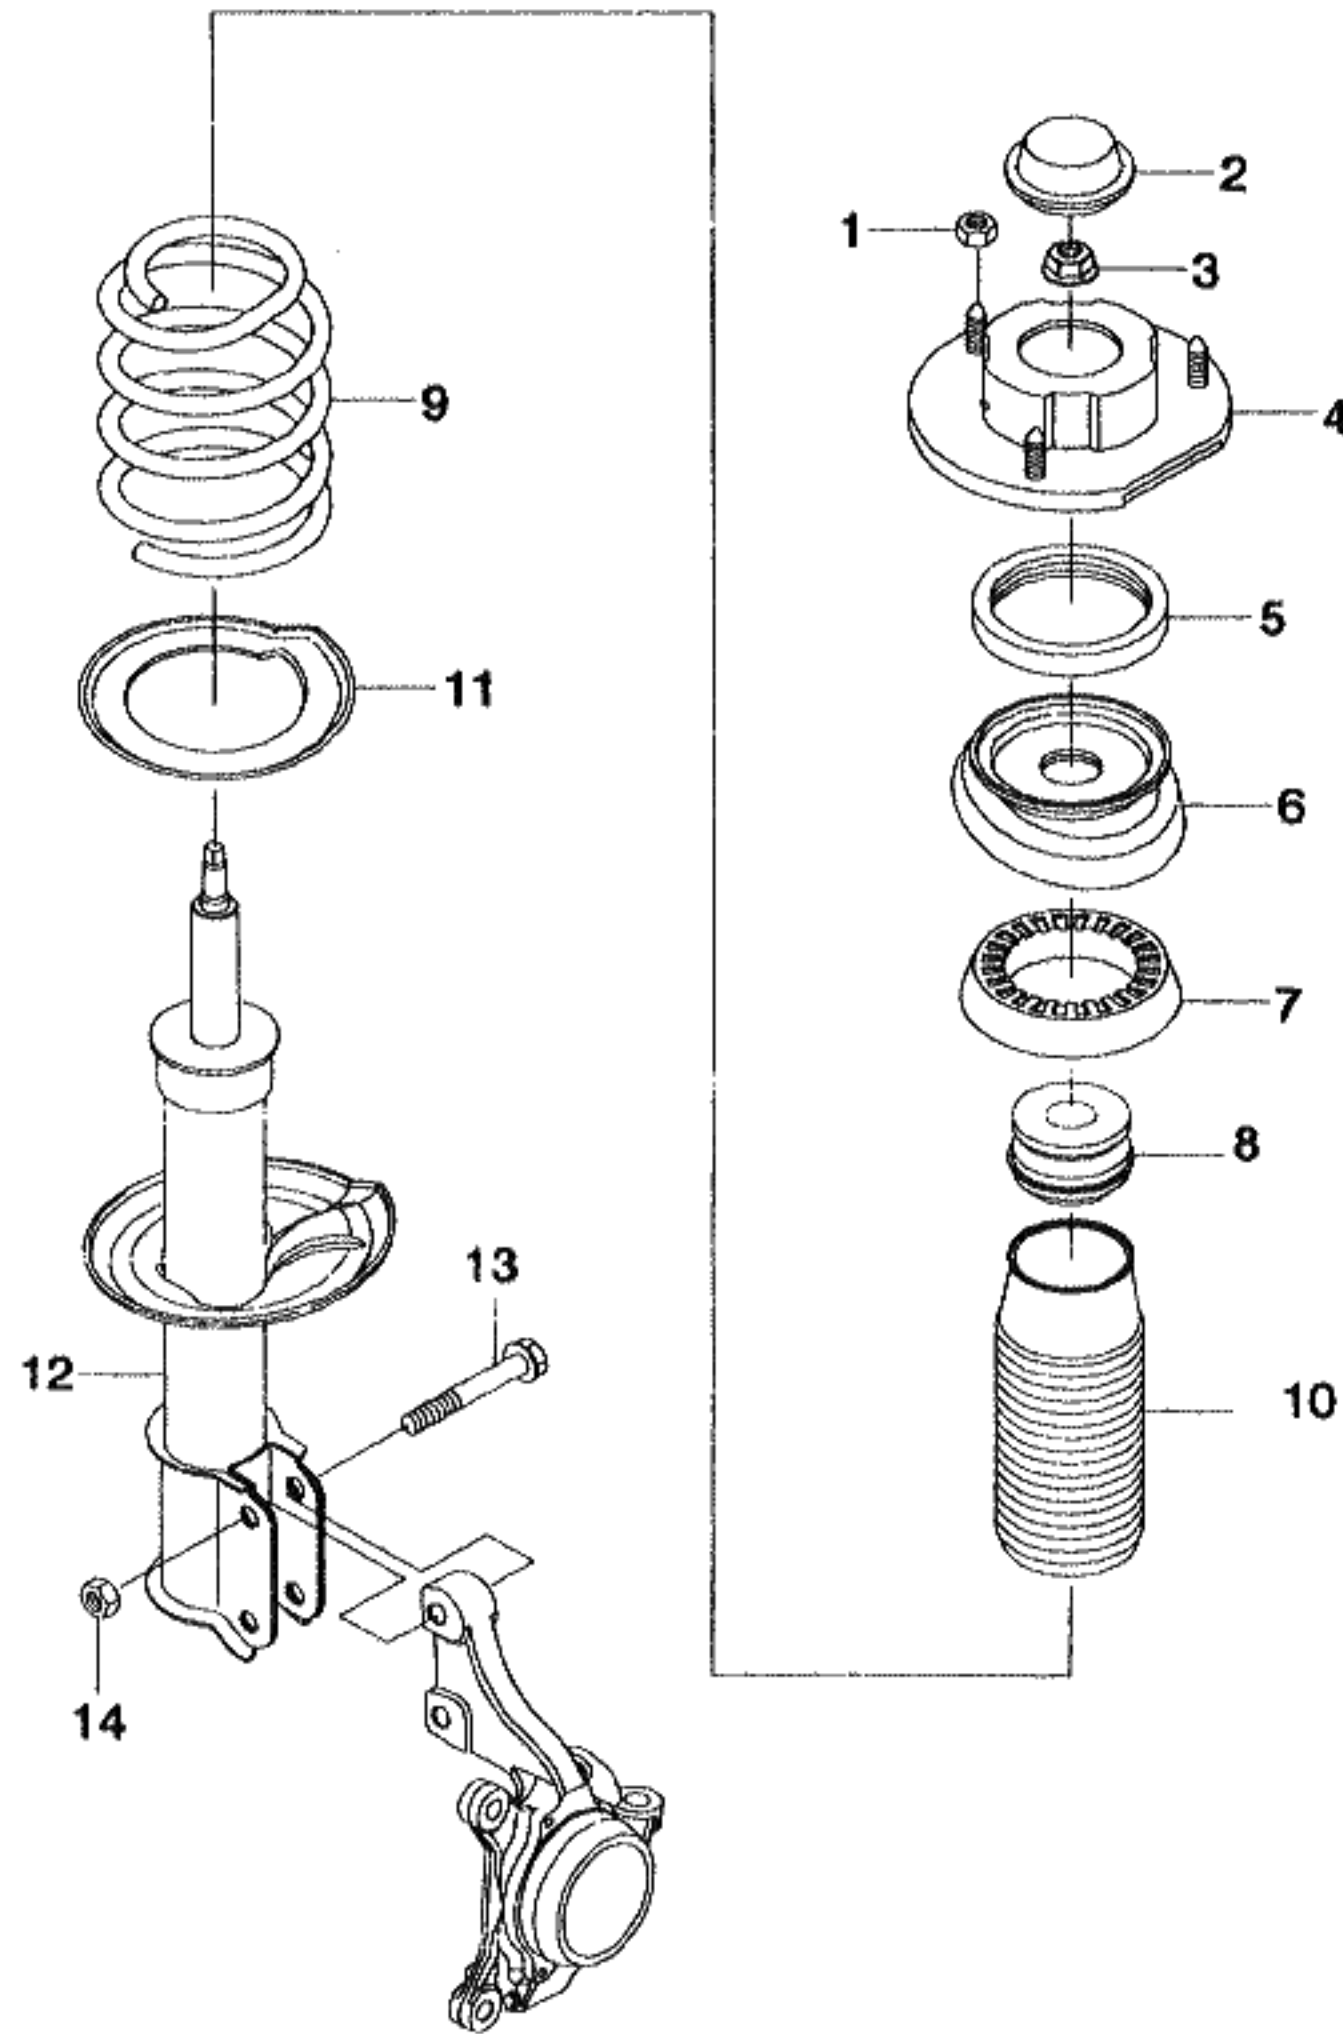


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 09159-10017	(E)NUT (D)MUTTER . S S					(F)ECROU (S)TUERCA 6				
	[02] 96243975	(E)CAP-STRUT MOUNT (D)DECKEL SPREIZE-MONTAGE . S S					(F)CHAPEAU-MONTAGE TENDEUR (S)TAPA-MONTAJE DE PUNTAL 2				
	[03] 09159-14004	(E)NUT (D)MUTTER . S S					(F)ECROU (S)TUERCA 2				
	[04] 96207657	(E)STRUT MOUNT A-FR (D)SPREIZE-MONTAGE . S S					(F)MONTAGE TENDEUR (S)MONTAJE DE PUNTAL 2				
	[05] 09266-80001	(E)BEARING (D)KUGELLAGER . S S					(F)ROULEMENT-BILLE INCLINEE (S)COJINETE-BOLA INCLINADA 2				
	[06] 96213151	(E)SEAT A-FR SPRING,UPR (D)SITZ,FEDERUNG,OBERE . S S					(F)SIEGE-RESSORT,HAUT (S)ASIENTO-RESORTE,SUPERIOR 2				
	[07] 96213429	(E)INSULATOR-FR SPRING,UPR (D)SOLIERUNG . S S					(F)ISOLATION (S)AISLAMIENTO 2				
	[08] 90125889	(E)HOLLOW BUMPER (D)STOSSSTANGE,HOHL . S S					(F)PARE-CHOC-EXCAVATION (S)TOPE-HUECO 2				
	[09] 96207571	(E)SPRING-FR (D)FEDERUNG,VORDERE . S S					(F)RESSORT-AVANT (S)RESORTE-FRENTE 2				
	[10] 96243961	(E)DUST COVER-FR (D)STAUBDECKEL . S S					(F)CHAPEAU-POUSSIERE (S)TAPA-POLVO 2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

4140 FRONT SHOCK ABSORBER


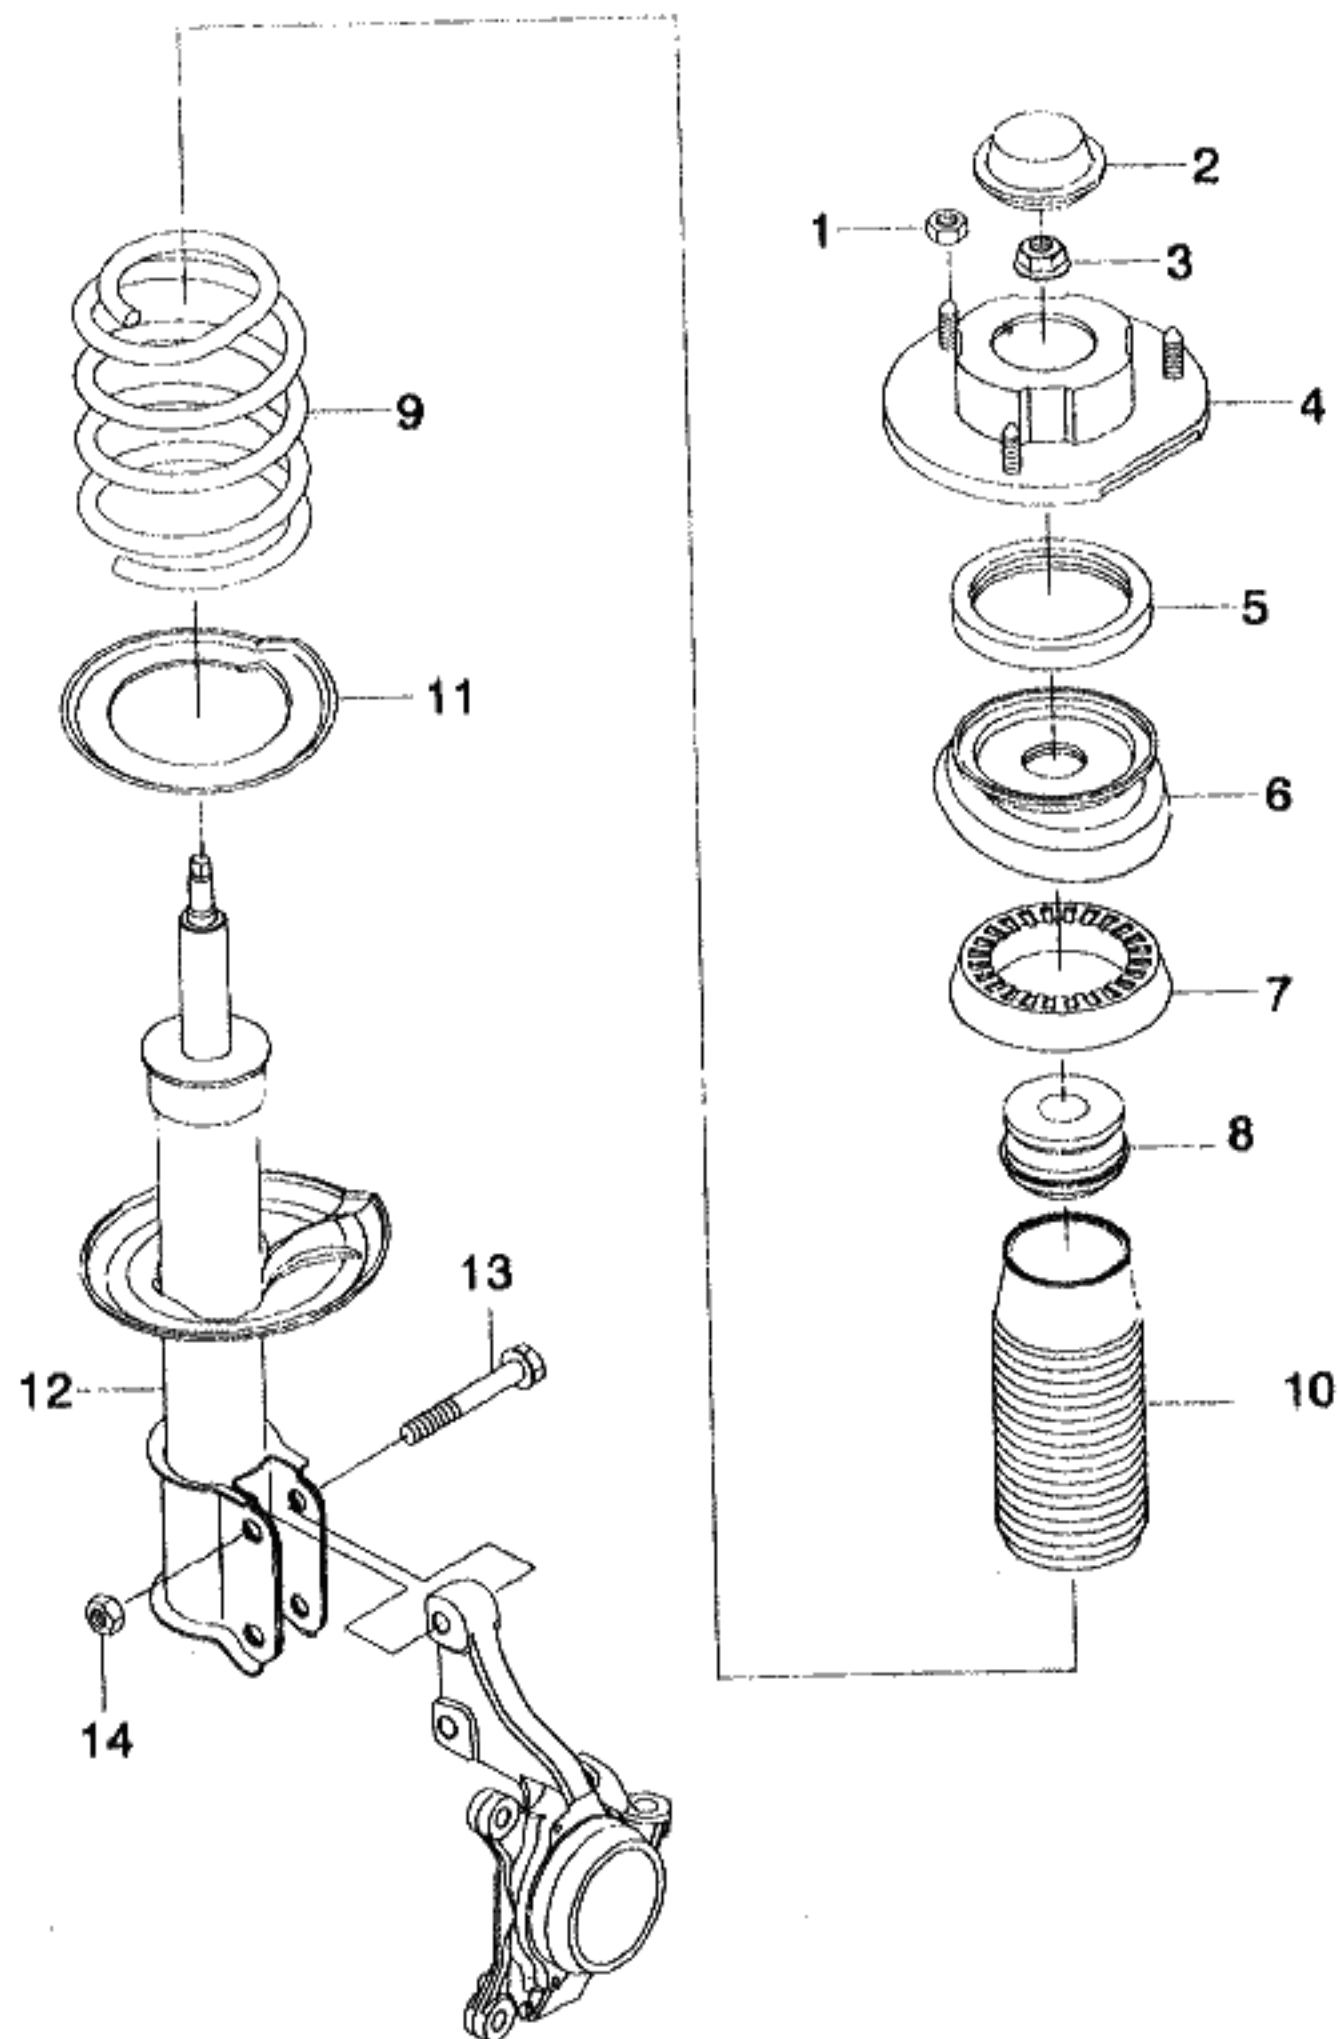


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 96207654	(E)INSULATOR-FR SPRING,LWR (D)ISOLIERUNG	S	S		(F)ISOLATION (S)AISLAMIENTO	2				
	[12] 96225884 96225885 96207646 96207647	(E)DAMPER A-S/ABSOR STRUT,FR (D)DÄMPFER	S	S		(F)AMORTISSEUR (S)AMORTIGUADOR	LH 1 RH 1 LH 1 RH 1				
	[13] 02803-12603	(E)BOLT-FLANGE (D)SCHRAUBE	S	S	&JL9/JTC	(F)BOULON (S)PERNO	4				
	[14] 08311-38123	(E)NUT-HEXAGON (D)MUTTER	S	S	&JL9/JTC	(F)ECROU (S)TUERCA	4				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

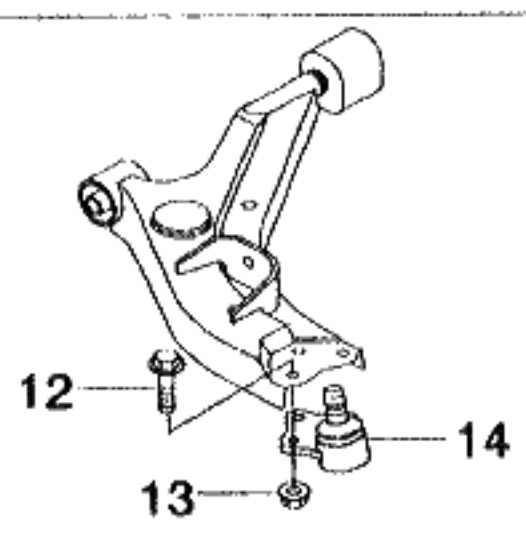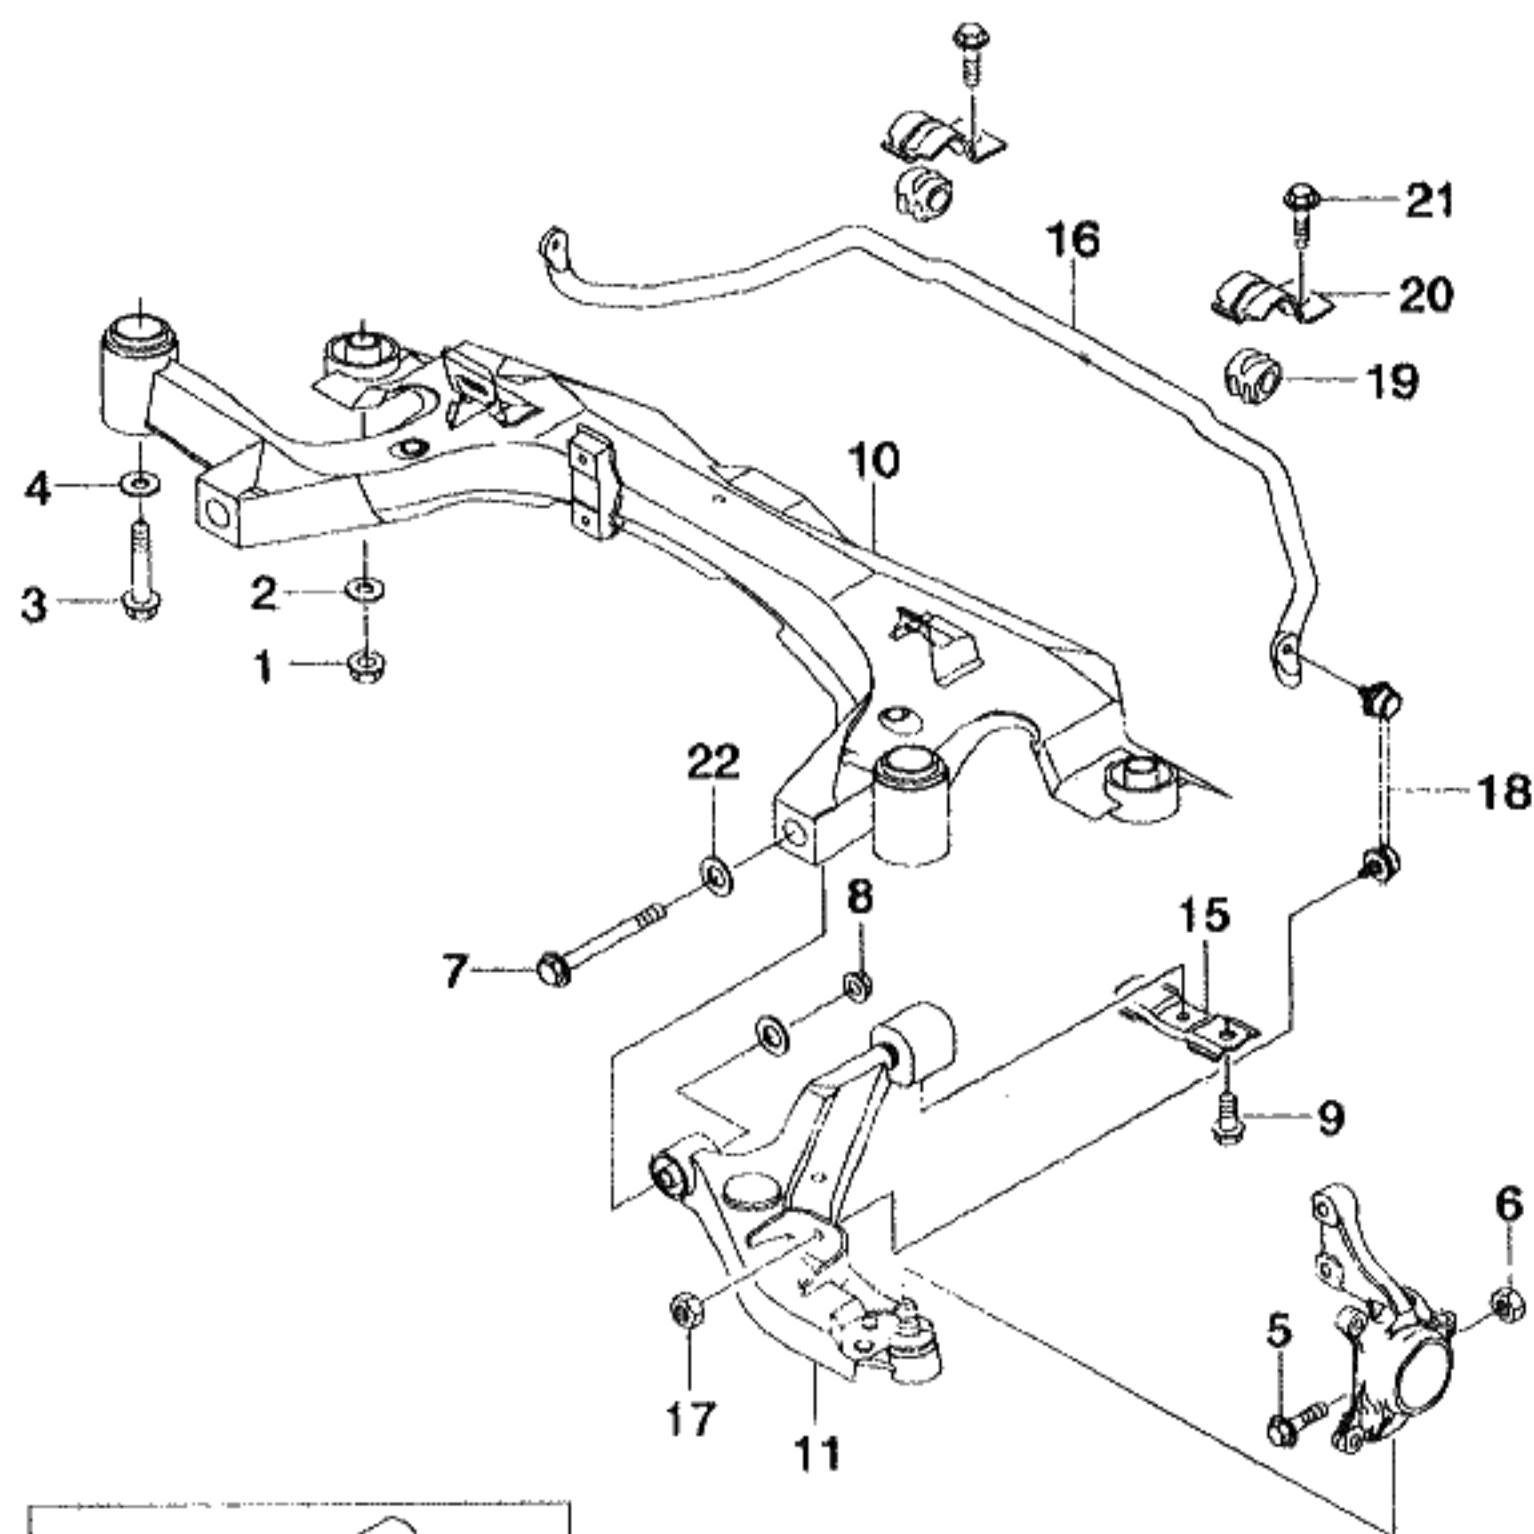


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 09159-14003	(E)NUT (D)MUTTER . S S				(F)ECROU (S)TUERCA 2					
	[02] 09160-15001	(E)WASHER-PLAIN (D)DICHTUNGSRING . S S				(F)RONDELLE (S)ARANDELA 2					
	[03] 09111-14002	(E)BOLT (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[04] 09160-19001	(E)WASHER-PLAIN (D)DICHTUNGSRING . S S				(F)RONDELLE (S)ARANDELA 2					
	[05] 09103-12030	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[06] 08311-38123	(E)NUT-HEXAGON (D)MUTTER . S S				(F)ECROU (S)TUERCA 2					
	[07] 09103-14012	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[08] 08311-28143	(E)NUT-HEXAGON (D)MUTTER . S S				(F)ECROU (S)TUERCA 2					
	[09] 09103-10038	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 4					
	[10] 96207679	(E)CROSSMEMBER A-FR SUSP (D)QUERTRÄGER . S S				(F)BARRE DE TRAVERSE (S)TRANSVERSAL 1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

4150 CONTROL ARM

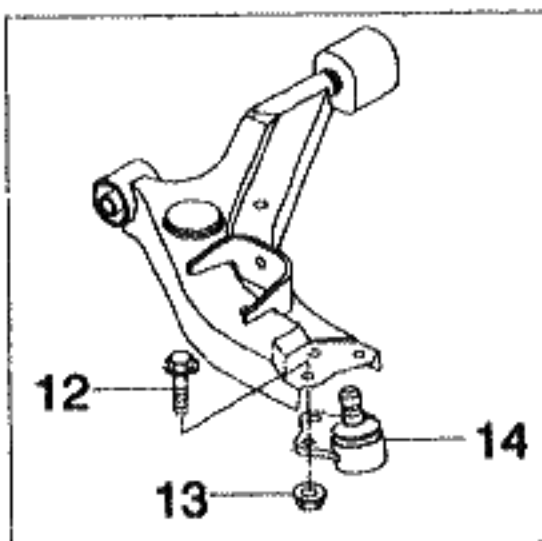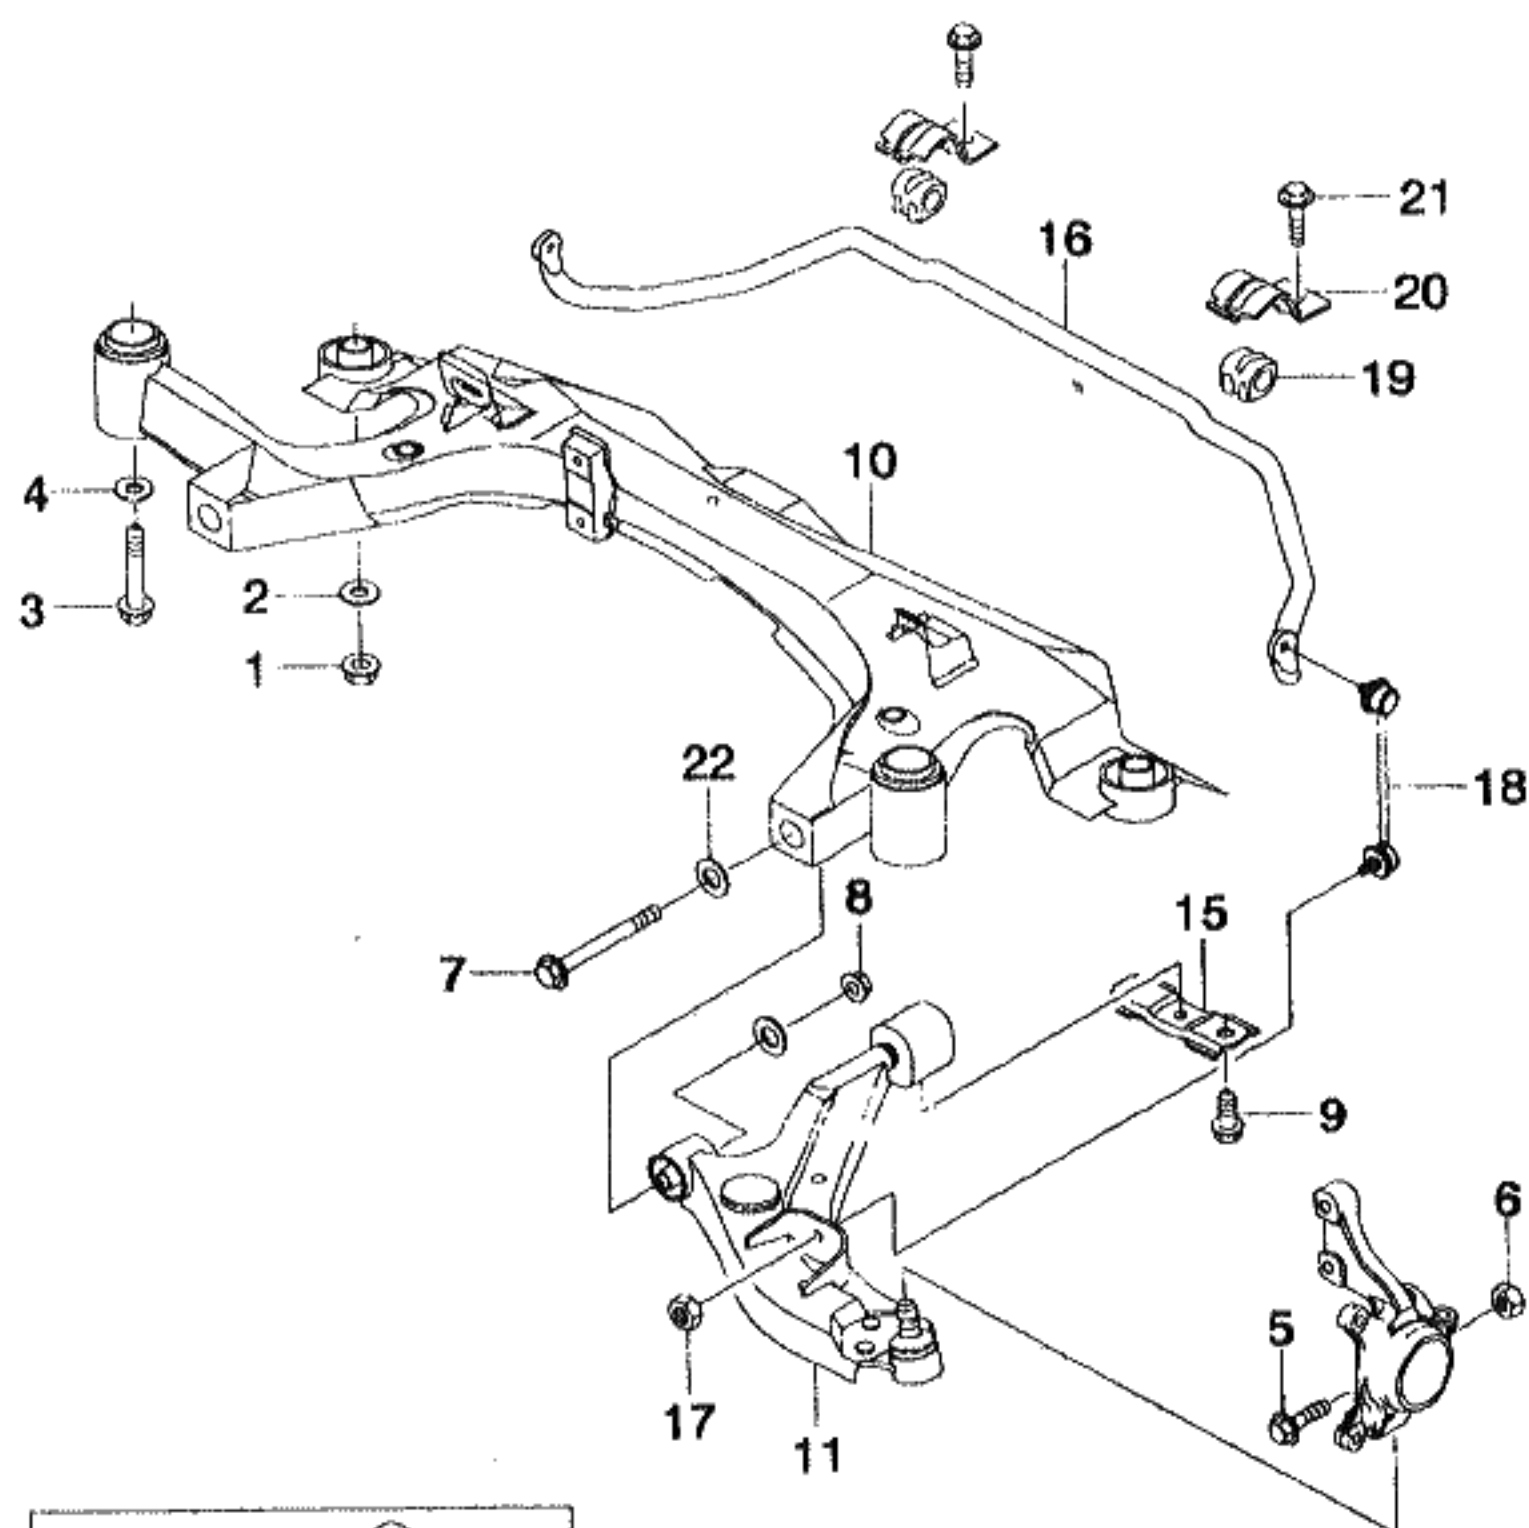


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11]	(E)CONTROL ARM A (D)STEUERUNGS-ARM				(F)BRAS DE CONTROLE (S)CONTROL-BRAZO					
	96213117	.	S	S		LH 1					
	96213118	.	S	S		RH 1					
	[12]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09100-10011	.	S	S		6					
	[13]	(E)NUT-HEXAGON (D)MUTTER				(F)ECROU (S)TUERCA					
	08311-28103	.	S	S		6					
	[14]	(E)JOINT SET-CONT ARM BALL (D)GLIED SATZ,KONSTANT ARM				(F)JEU DE JOINTS (S)JUEGO DE UNION					
	96213119	.	S	S		2					
	[15]	(E)CLAMP-CONTROL ARM,RR (D)KLAMMER				(F)PINCE (S)ABRAZADERA					
	96213132	.	S	S		2					
	[16]	(E)STABILIZER BAR-FR (D)STABILISATOR,VORNE				(F)STABILISATEUR-AVANT (S)ESTABLIZADOR-FRENTE					
	96207556	.	S	S		1				23M WHITE	
	[17]	(E)NUT (D)MUTTER				(F)ECROU (S)TUERCA					
	09159-10014	.	S	S		4					
	[18]	(E)LINK A-STABILIZER,FR (D)VERBINDUNG				(F)ACOUPLEMENT (S)ENLACE					
	96225858	.	S	S		LH 1					
	96225859	.	S	S		RH 1					
	[19]	(E)BUSH-FR STABILIZER (D)LAGERFUTTER				(F)COUSSINET (S)BUJE					
	96213439	.	S	S		2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

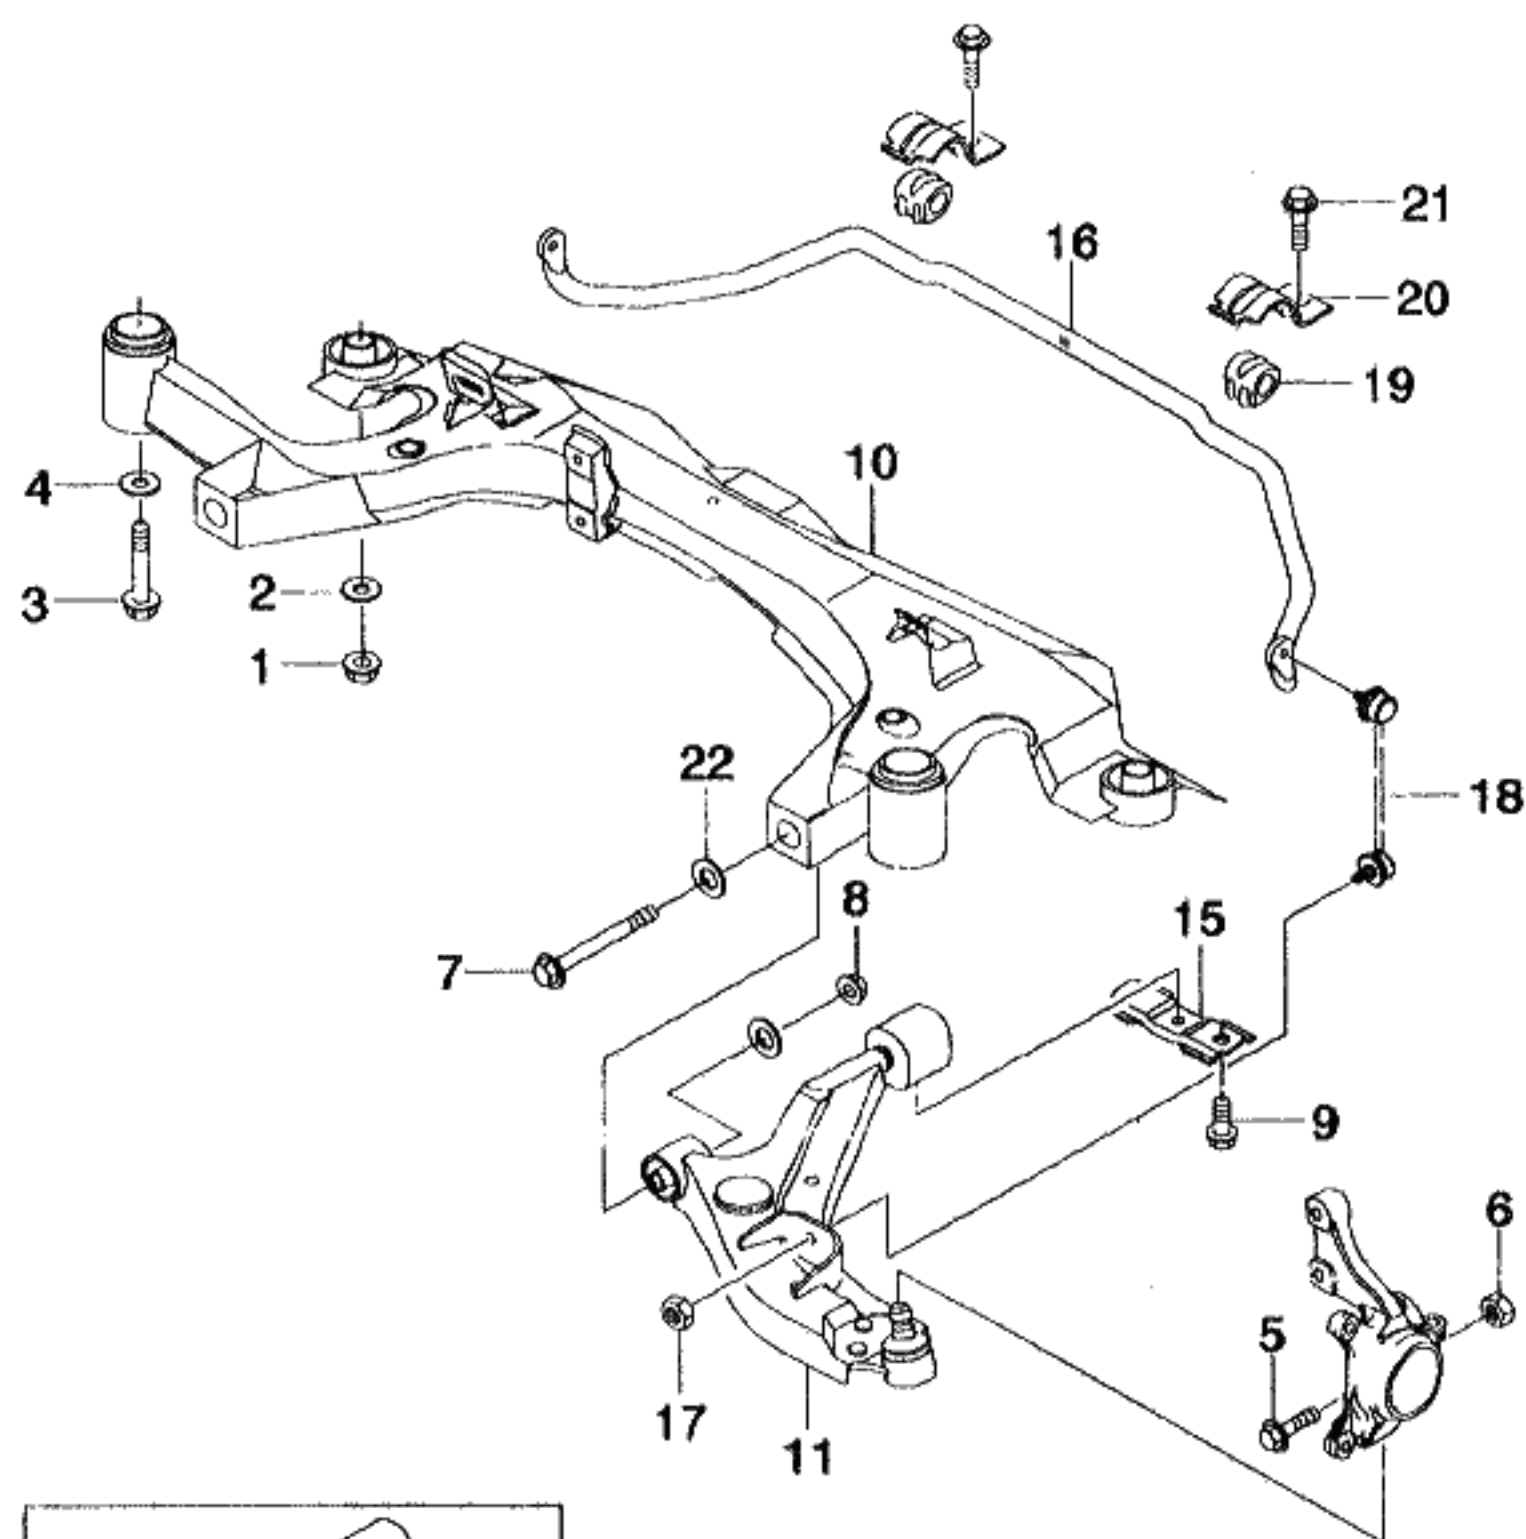


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20] 96207625	(E)CLAMP-BUSH,STABILIZER (D)KLAMMER . S S					(F)PINCE (S)ABRAZADERA 2				
	[21] 01517-10203	(E)BOLT-FLANGE (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 2				
	[22] 09160-14007	(E)WASHER-PLAIN (D)DICHTUNGSRING . S S					(F)RONDELLE (S)ARANDELA 2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


4310 REAR AXLE

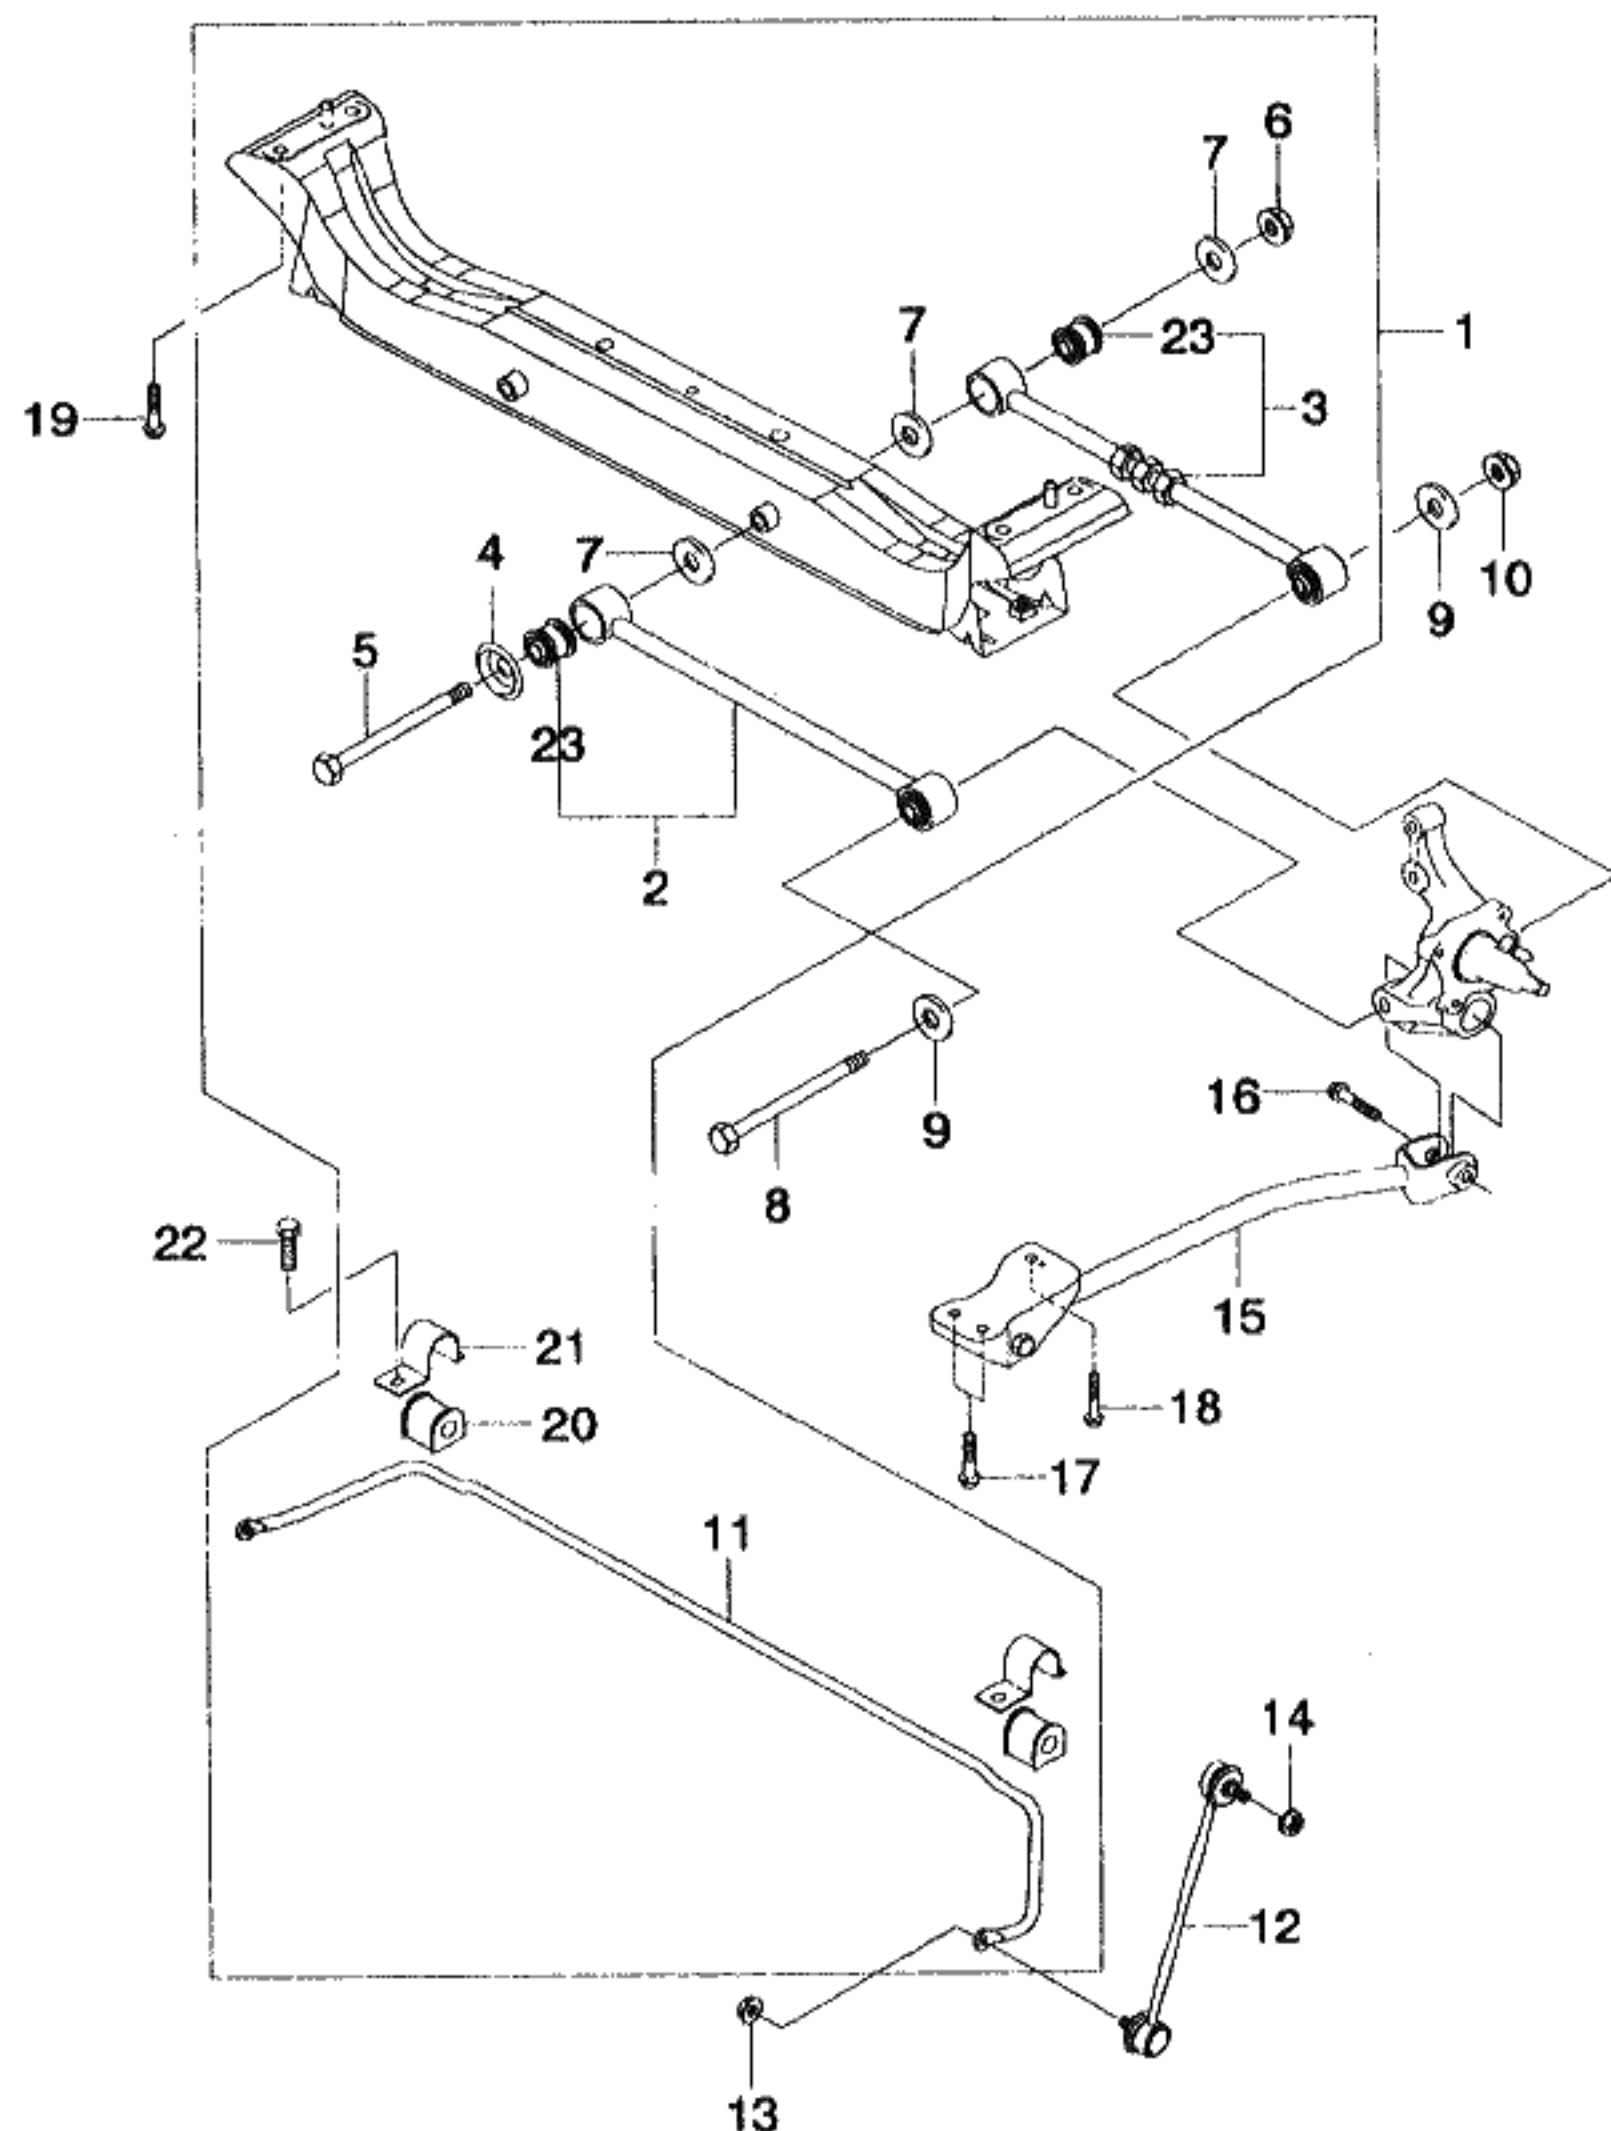


KEY NO.				PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		T / A	LEVEL					FROM	TO				
			S X	C D X									
	[01]	(E)CROSSMEMBER A-RR SUSP (D)QUERTRÄGER					(F)BARRE DE TRAVERSE (S)TRANSVERSAL						
	96243965	S	S			1							
	[02]	(E)LINK A-PARALLEL,FR (D)VERBINDUNG					(F)ACOUPLEMENT (S)ENLACE						
	96213139	S	S			2							
	[03]	(E)LINK A-PARALLEL,RR (D)VERBINDUNG					(F)ACOUPLEMENT (S)ENLACE						
	96213142	S	S			2							
	[04]	(E)CAP-PARALLEL LINK (D)DECKEL					(F)CHAPEAU (S)TAPA						
	96225844	S	S			2							
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO						
	09100-14002	S	S			2							
	[06]	(E)NUT-HEXAGON (D)MUTTER					(F)ECROU (S)TUERCA						
	08311-28143	S	S			2							
	[07]	(E)WASHER-PLAIN (D)DICHTUNGSRING					(F)RONDELLE (S)ARANDELA						
	09160-14001	S	S			6							
	[08]	(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO						
	09100-14008	S	S			2							
	[09]	(E)WASHER-PLAIN (D)DICHTUNGSRING					(F)RONDELLE (S)ARANDELA						
	09160-14009	S	S			4							
	[10]	(E)NUT-HEXAGON (D)MUTTER					(F)ECROU (S)TUERCA						
	08311-28143	S	S			2							
LEVEL					T/A(TRANSAXLE)								
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON								

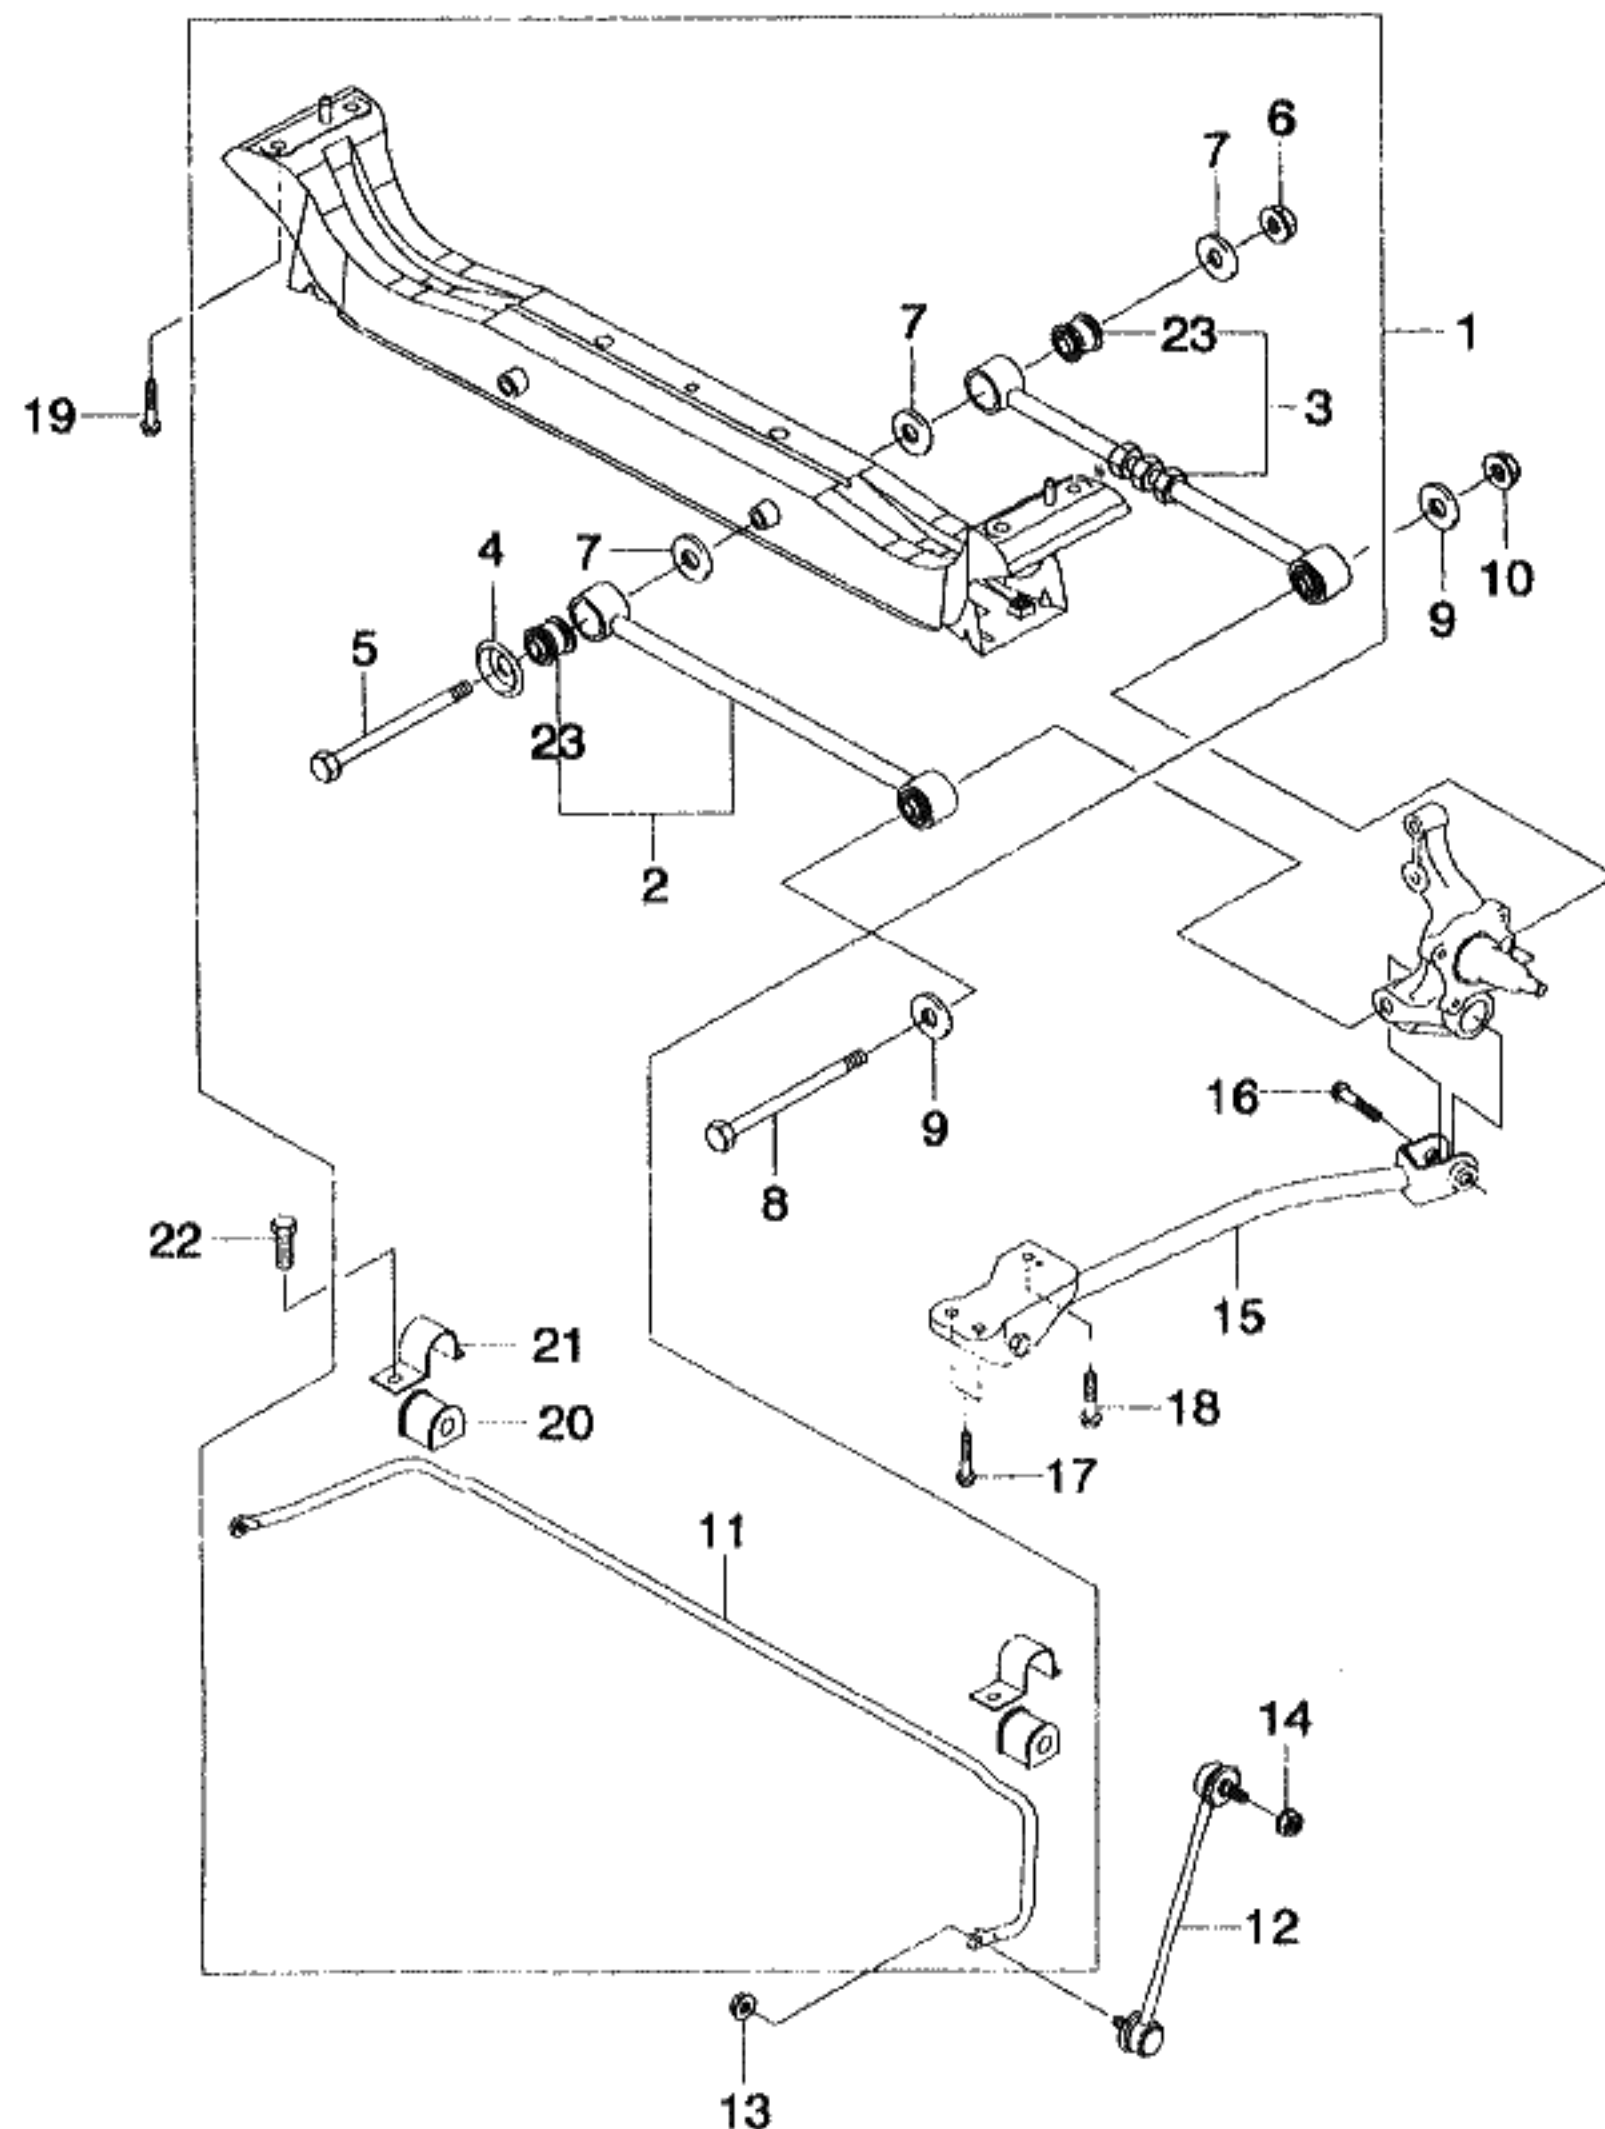


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 96207557	(E)STABILIZER BAR-RR (D)STABILISATOR,HINTEN	S	S		(F)STABILISATEUR-ARRIERE (S)ESTABILIZADOR-TRASERO	1		14M WHITE		
	[12] 96207628	(E)LINK A-STABILIZER,RR (D)VERBINDUNG	S	S		(F)ACOUPLEMENT (S)ENLACE	2				
	[13] 09159-10014	(E)NUT (D)MUTTER	S	S		(F)ECROU (S)TUERCA	2				
	[14] 09159-10014	(E)NUT (D)MUTTER	S	S		(F)ECROU (S)TUERCA	2				
	[15] 96207631 96207632	(E)LINK A-TRAILING,RR (D)VERBINDUNG	S	S		(F)ACOUPLEMENT (S)ENLACE	LH 1 RH 1				
	[16] 09103-14009	(E)BOLT-FLANGE (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	2				
	[17] 09103-12026	(E)BOLT-FLANGE (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	4				
	[18] 09103-12039	(E)BOLT-FLANGE (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	2				
	[19] 09103-12026	(E)BOLT-FLANGE (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	4				
	[20]	(E)BUSH-RR STABILIZER (D)LAGERFUTTER				(F)COUSSINET (S)BUJE					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

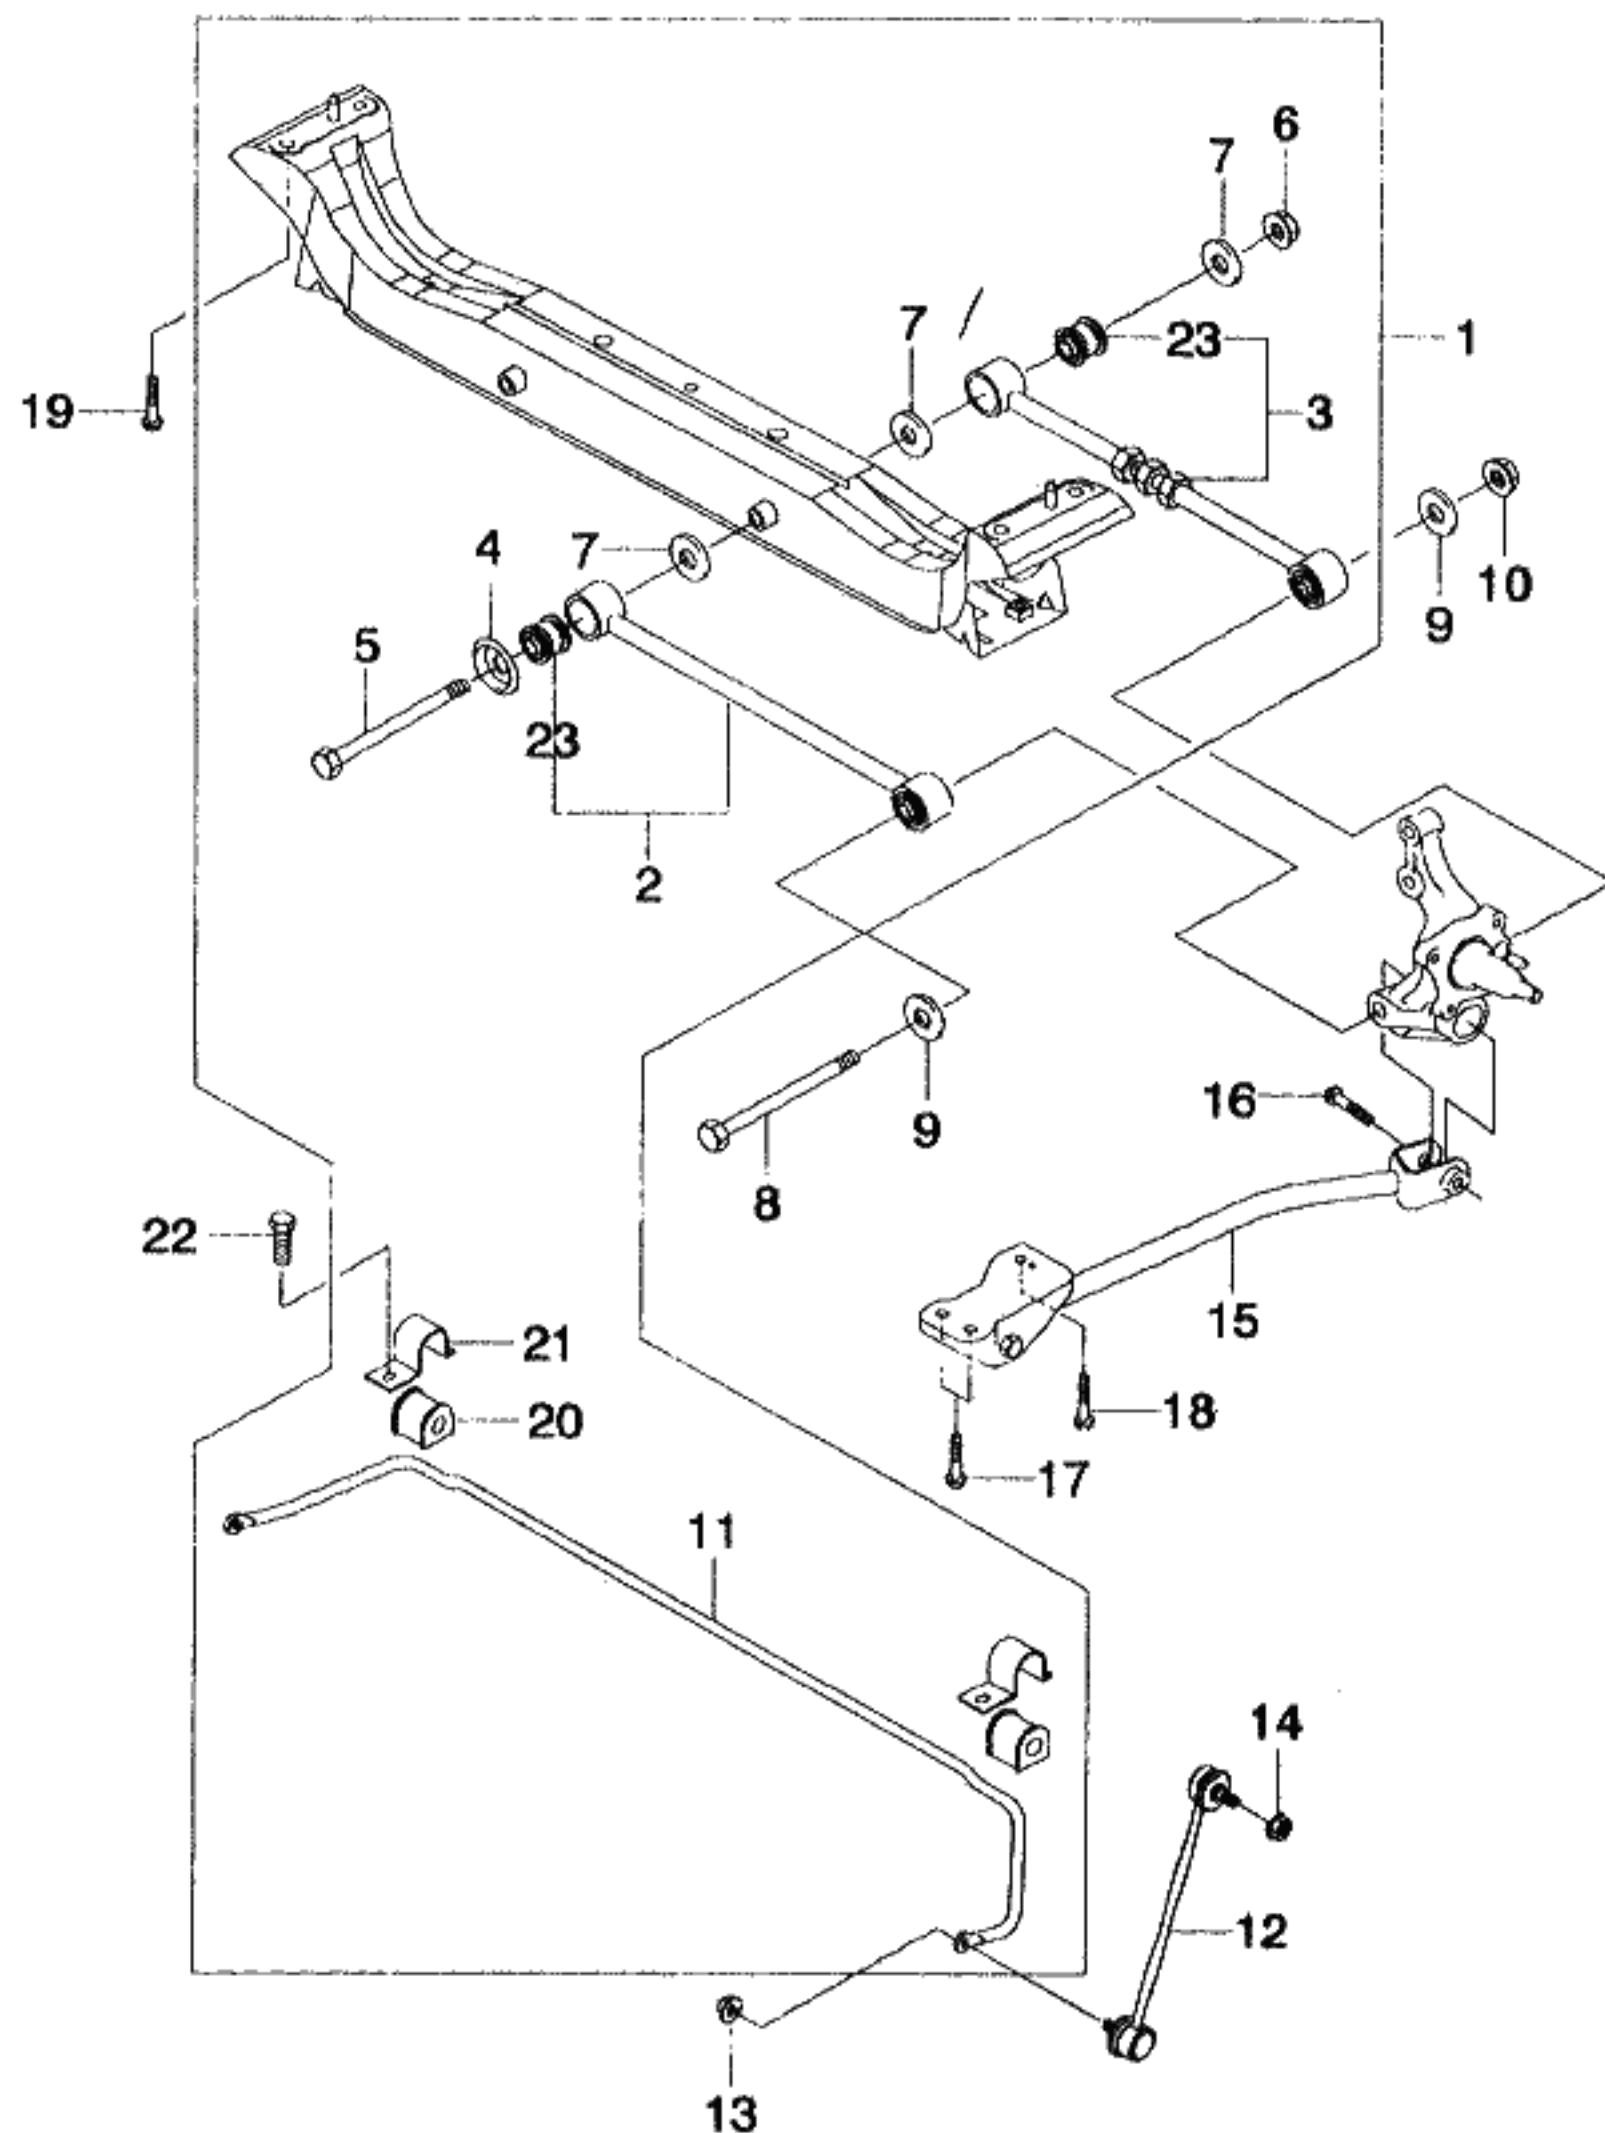


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96243976	.	S	S		2	970603				
O	96243977	.	S	S		2	970604				
	[21]		(E)CLAMP-BUSH,RR STABILIZER (D)KLAMMER				(F)PINCE (S)ABRAZADERA				
	96213431	.	S	S		2					
	[22]		(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO				
	01517-10203	.	S	S		2					
	[23]		(E)BUSH-PARALLEL LINK (D)VERBINDUNG				(F)ACOUPLEMENT (S)ENLACE				
	96225805	.	S	S		2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

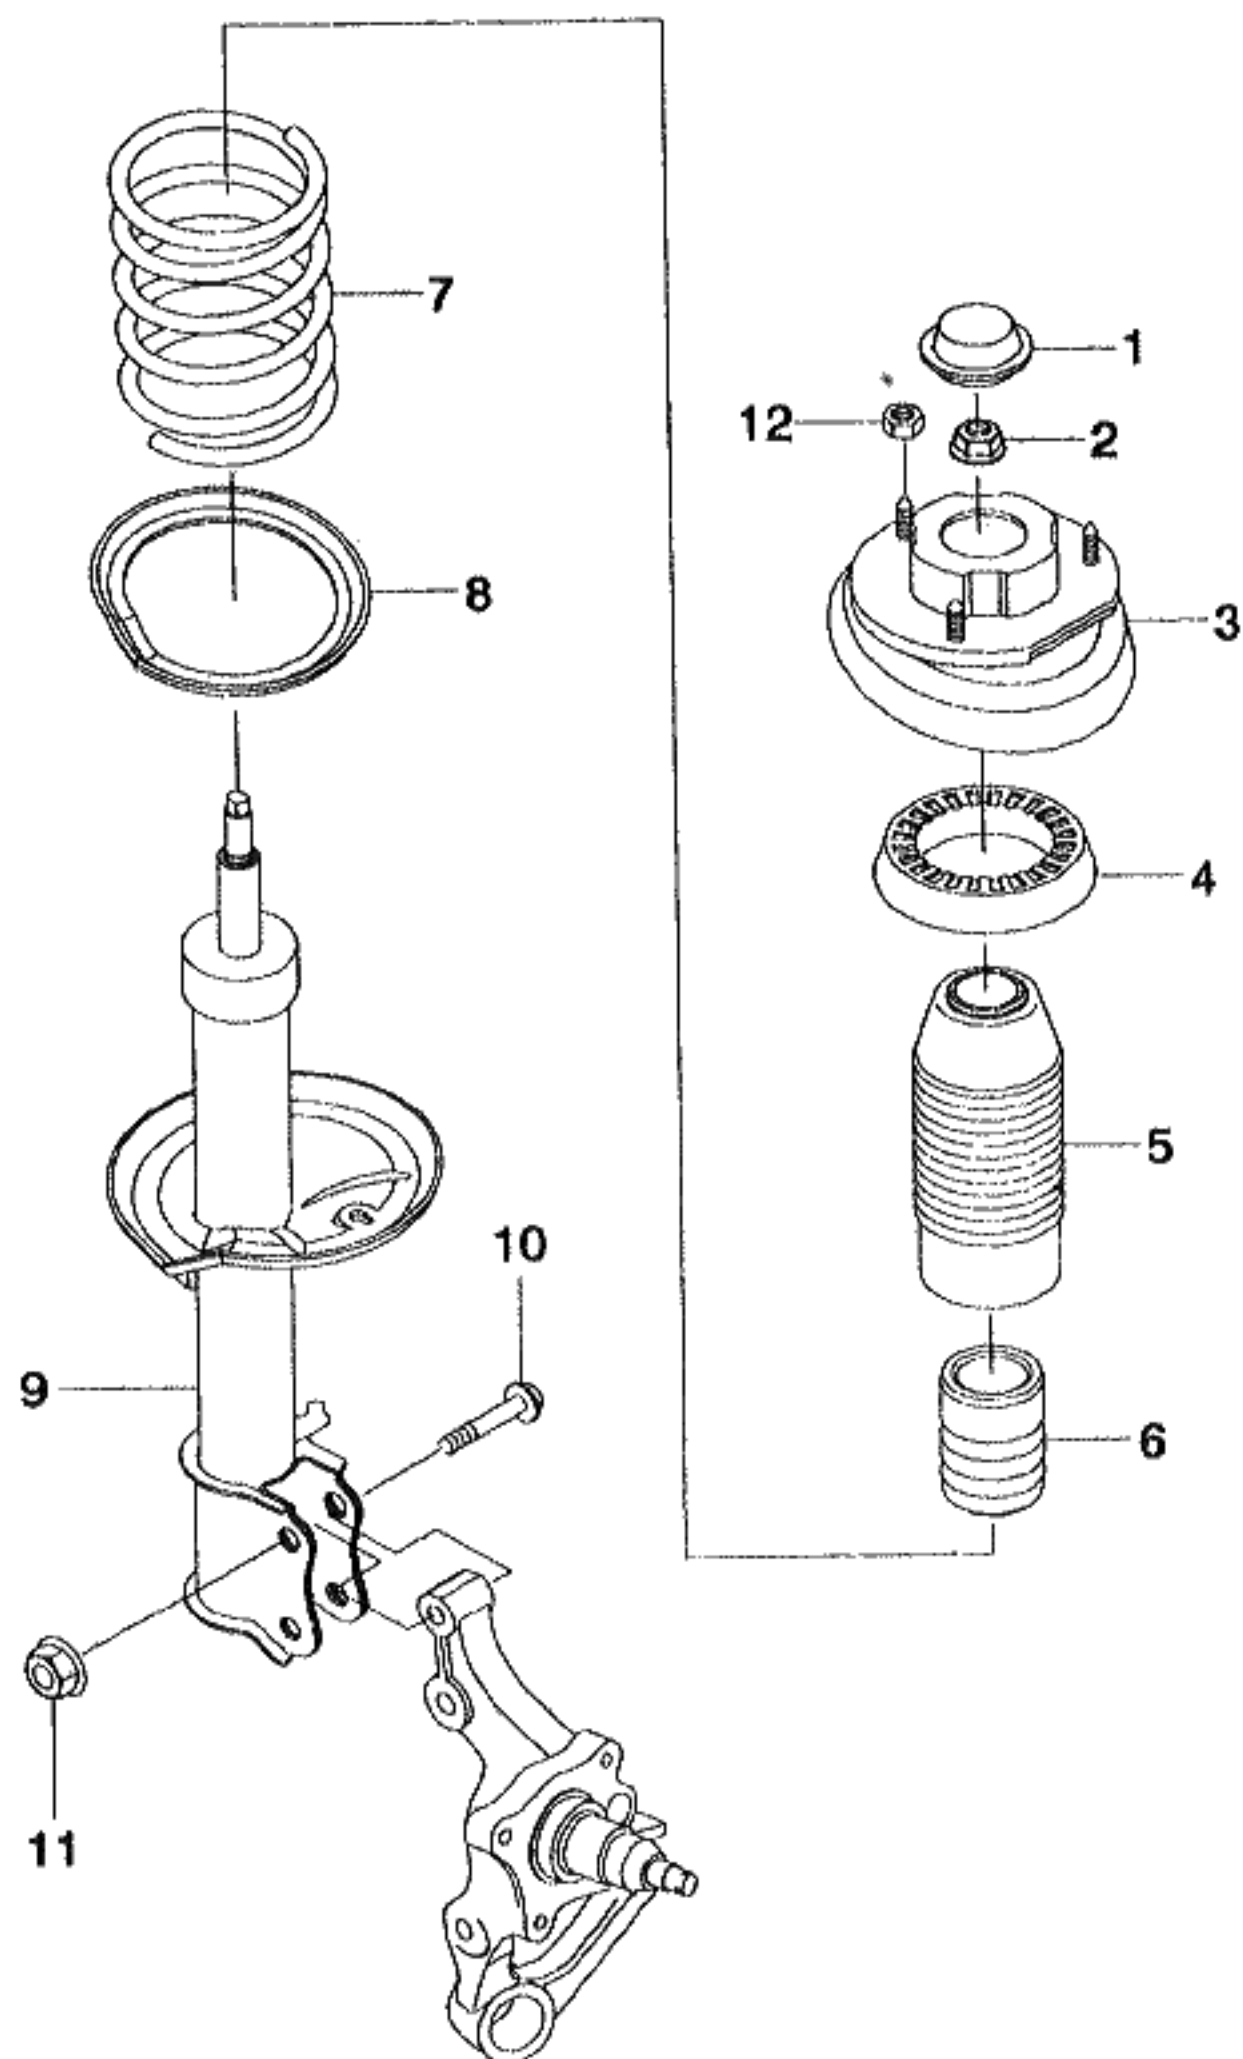

KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X								C D X
	[01]	(E)CAP-STRUT MOUNT (D)DECKEL	SPREIZE-MONTAGE		(F)CHAPEAU-MONTAGE TENDEUR (S)TAPA-MONTAJE DE PUNTAL						
	96243975		S S		2						
	[02]	(E)NUT (D)MUTTER			(F)ECROU (S)TUERCA						
	09159-14004		S S		2						
	[03]	(E)STRUT MOUNT A-RR (D)SPREIZE-MONTAGE			(F)MONTAGE TENDEUR (S)MONTAJE DE PUNTAL						
	96243958		S S		LH 1						
	96243959		S S		RH 1						
	[04]	(E)INSULATOR-RR SPRING,UPR (D)ISOLIERUNG			(F)ISOLATION (S)AISLAMIENTO						
	96207675		S S		2						
	[05]	(E)DUST COVER-RR (D)STAUBDECKEL			(F)CHAPEAU-POUSSIÈRE (S)TAPA-POLVO						
	96225883		S S		2						
	[06]	(E)HOLLOW BUMPER-RR (D)STOBSTANGE,HOHL			(F)PARE-CHOC-EXCAVATION (S)TOPE-HUECO						
	96225882		S S		2						
	[07]	(E)SPRING-RR (D)FEDERUNG,HINTEN			(F)RESSORT-ARRIERE (S)RESORTE-TRASERO						
	96207619		S S		2						
	[08]	(E)INSULATOR-RR SPRING,LWR (D)ISOLIERUNG			(F)ISOLATION (S)AISLAMIENTO						
	96207674		S S		2						
	[09]	(E)DAMPER A-S/ABSOR STRUT,RR (D)DÄMPFER			(F)AMORTISSEUR (S)AMORTIGUADOR						
	96225886		S S		LH 1						
	96225887		S S		RH 1						
	96207662		O O	&JL9/JTC	LH 1						
LEVEL				T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

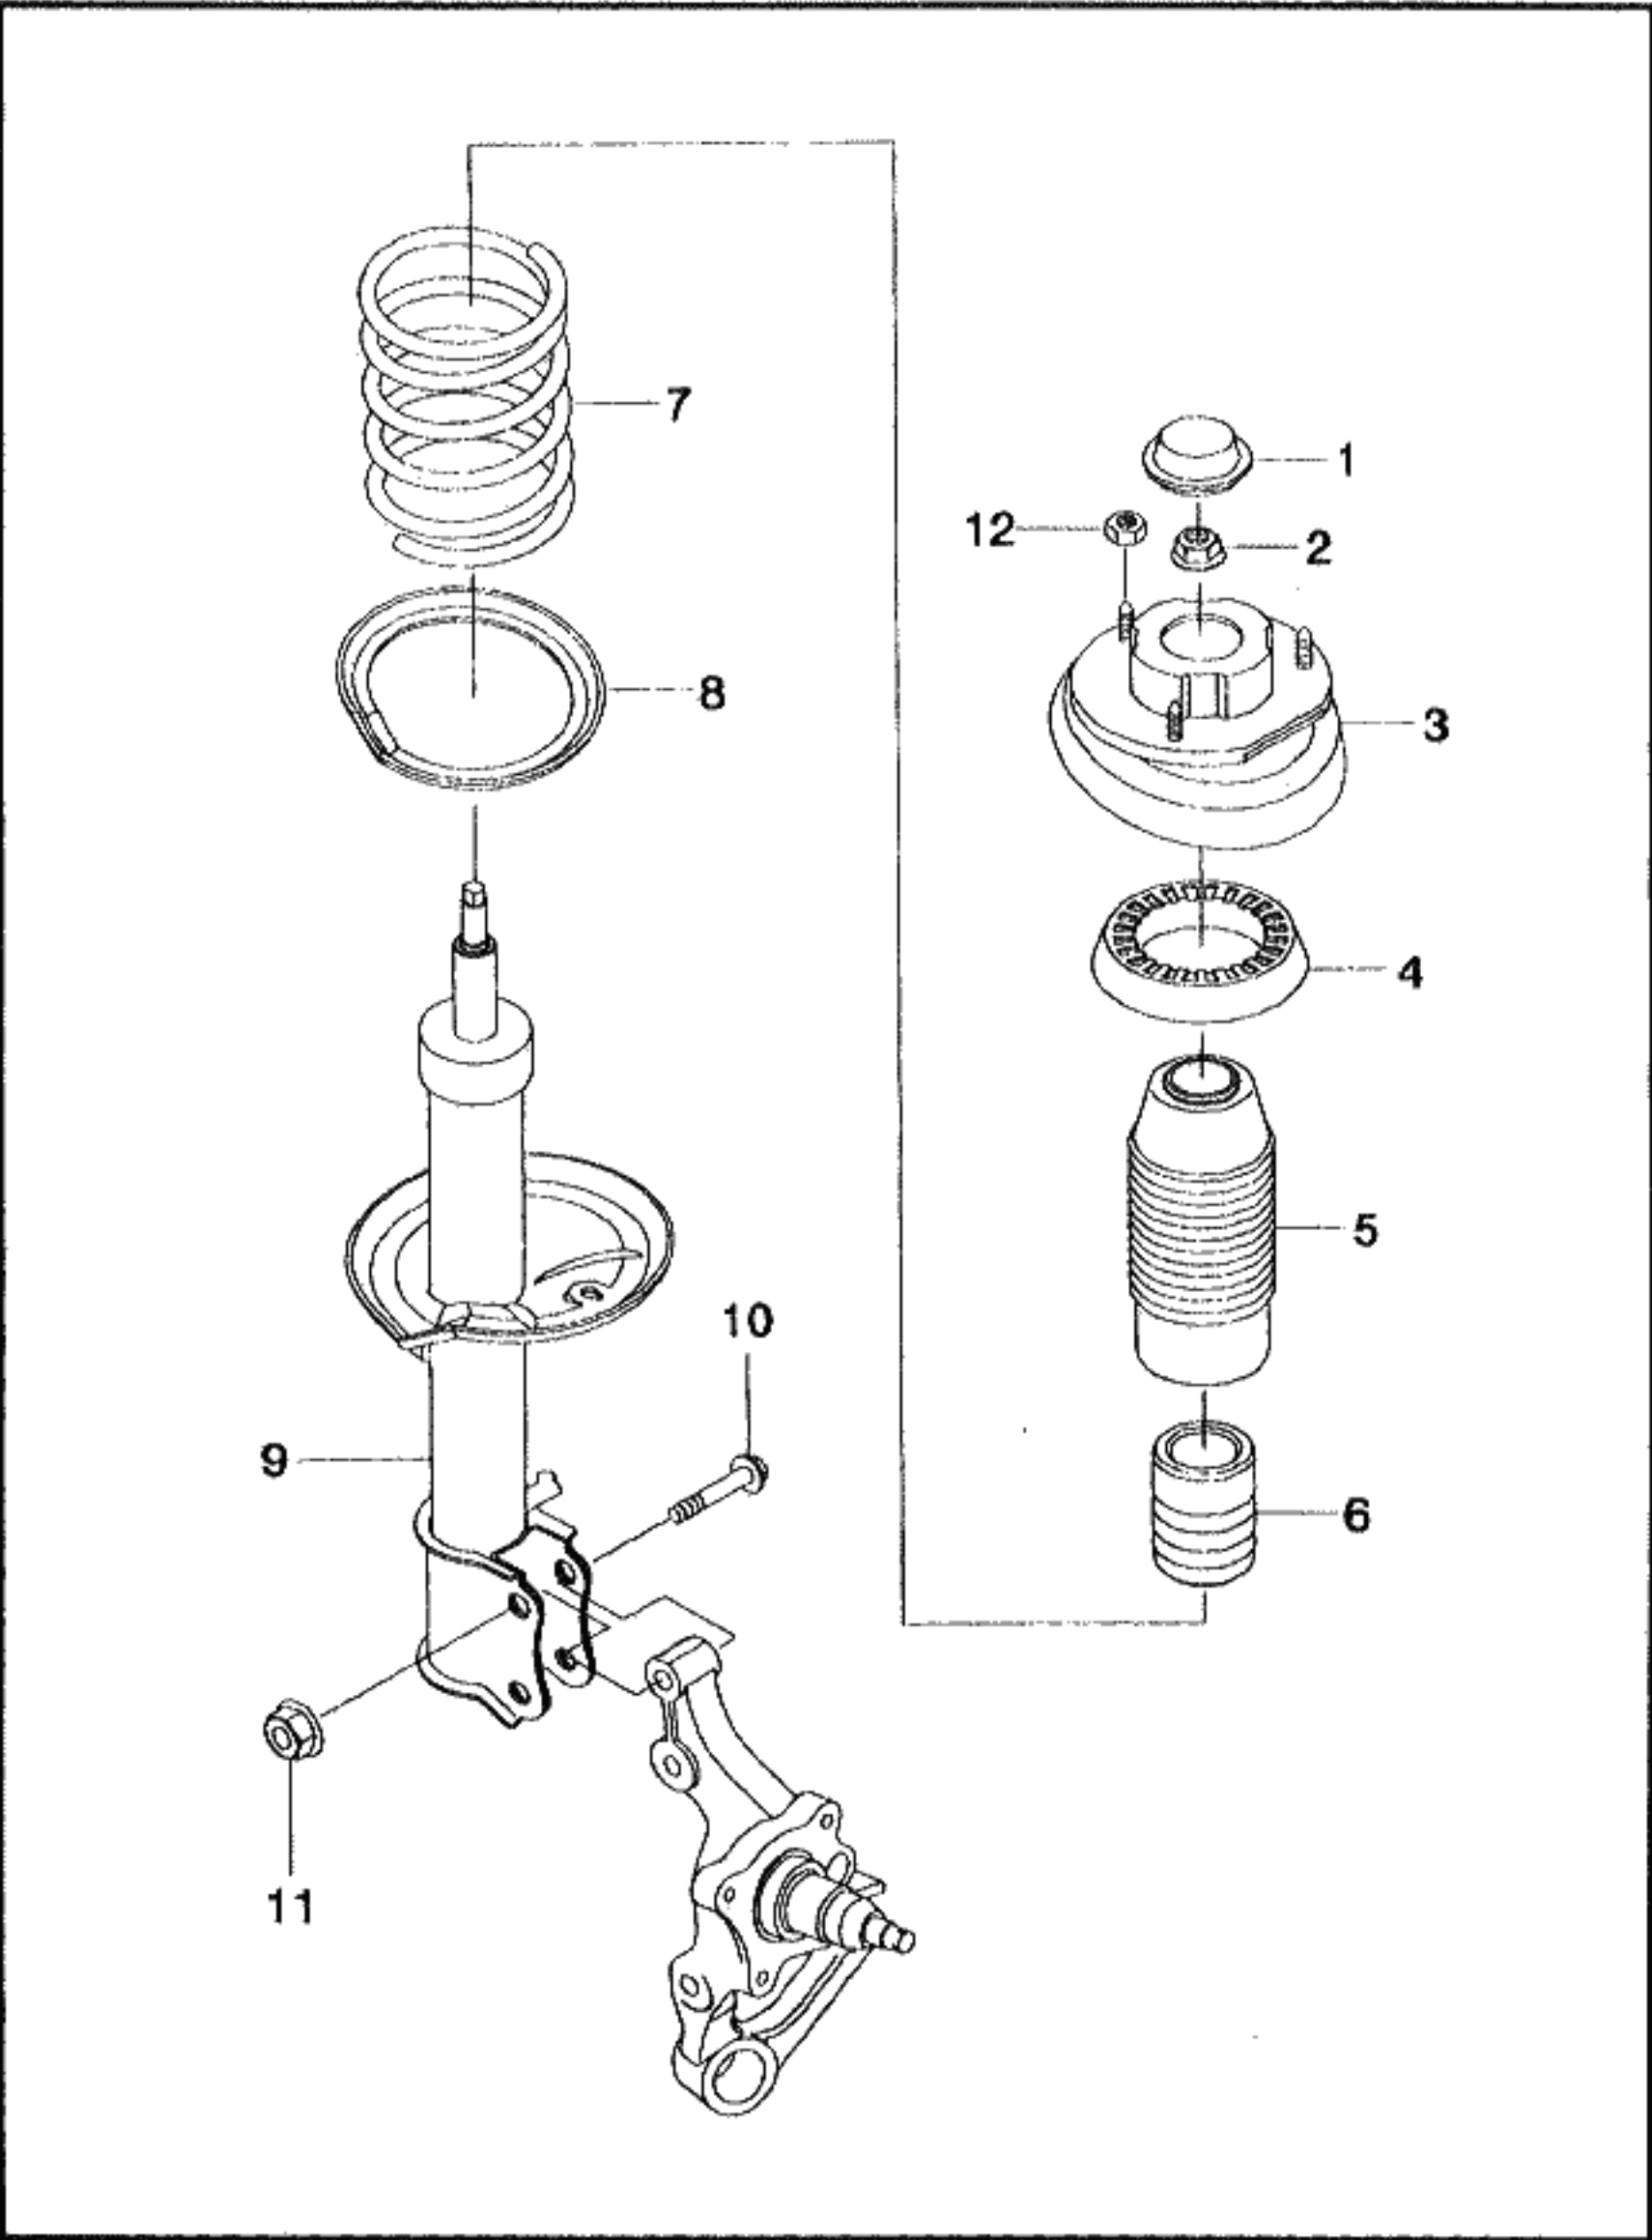


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96213435	.	O	O	&JL9/JTC		RH 1					
	[10]		(E)	BOLT-FLANGE			(F)BOULON					
			(D)	SCHRAUBE			(S)PERNO					
	02803-12603	.	S	S			4					
	[11]		(E)	NUT-HEXAGON			(F)ECROU					
			(D)	MUTTER			(S)TUERCA					
	08311-38123	.	S	S			4					
	[12]		(E)	NUT			(F)ECROU					
			(D)	MUTTER			(S)TUERCA					
	09159-10017	.	S	S			6					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


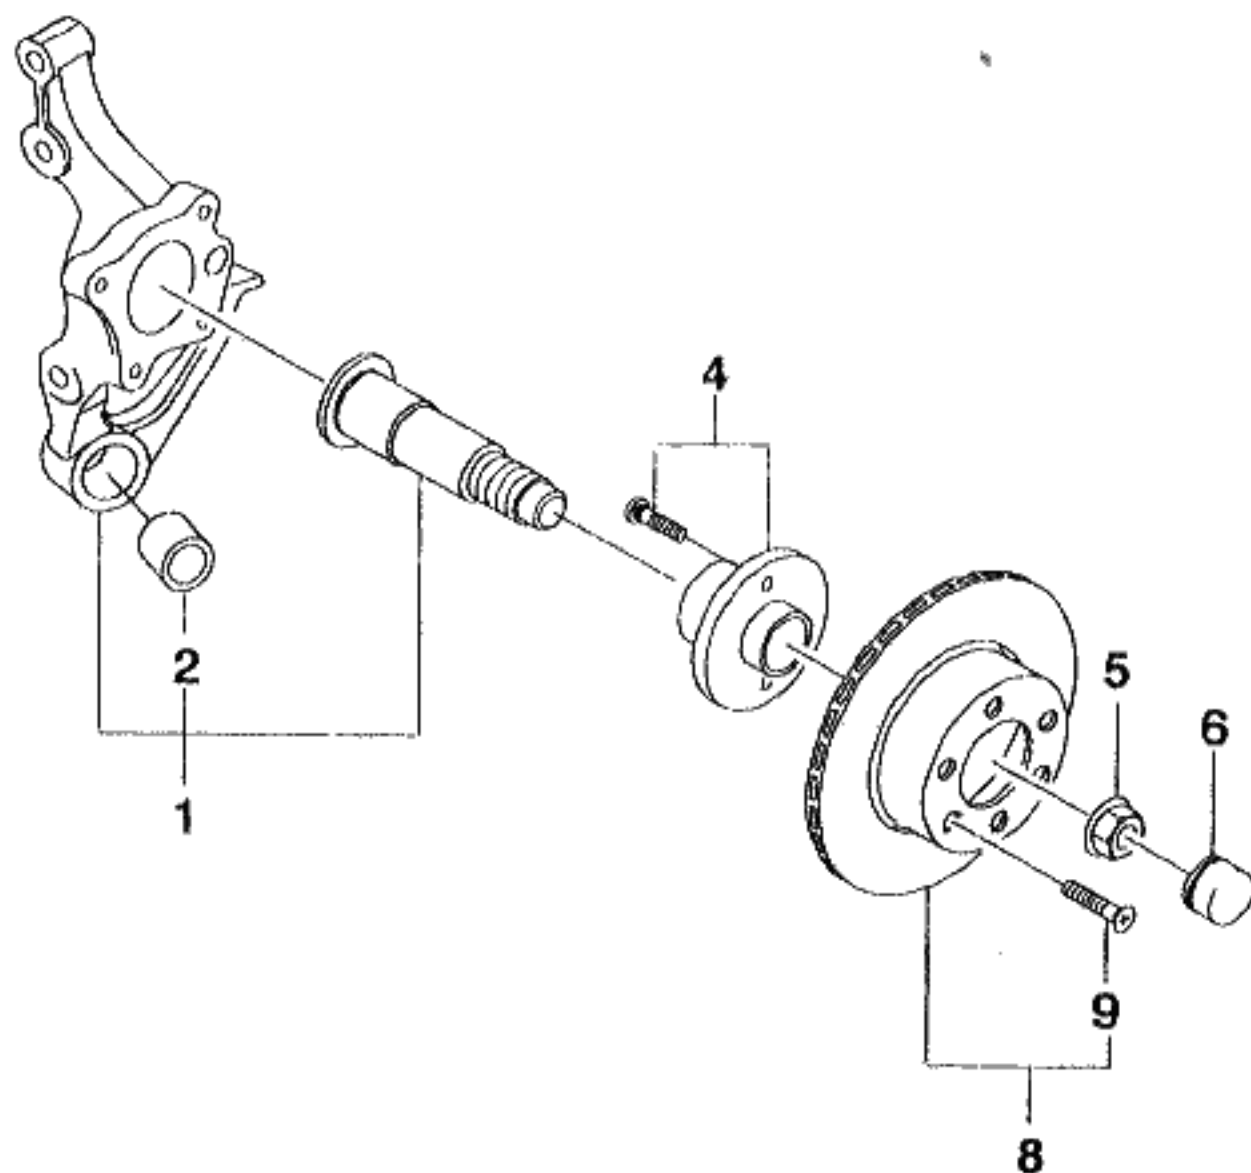


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E) KNUCKLE-RR (D) KNUCKLE					(F) ARTICULATION (S) NUDILLO					
	96225871	.	S	S			LH 1					
	96225872	.	S	S			RH 1					
	96207581	.	O	O	&JL9/JTC		LH 1					
	96207582	.	O	O	&JL9/JTC		RH 1					
	[02]	(E) BUSH-RR KNUCKLE (D) LAGERFUTTER					(F) MANCHON (S) BUJE					
	96225857	.	S	S			2					
	[04]	(E) HUB UNIT-RR (D) KUGELLAGER					(F) ROULEMENT (S) COJINETE					
	96219471	.	S	.			2			14"		
	96219472	.	O	S			2			15"		
	96219473	.	O	.	&JL9/JTC		2			14"		
	96219474	.	O	O	&JL9/JTC		2			15"		
	[05]	(E) NUT (D) MUTTER					(F) ECROU (S) TUERCA					
	09159-20003	.	S	S			2					
	[06]	(E) CAP-HUB (D) DECKEL HÜLSE					(F) CHAPEAU-MOYEU (S) TAPA-CUBO					
	96234207	.	S	S			2					
	[08]	(E) DISC-BRAKE SOLID,RR (D) SCHEIBENBREMSE					(F) DISQUE-FREIN (S) DISCO-FRENO					
	96312560	.	S	.			2			14"		
	96219485	.	O	S			2			15"		
	[09]	(E) SCREW-CR MACHINE (D) SCHRAUBE					(F) VIS (S) TORNILLO					
	02126-06163	.	S	S			2					


LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

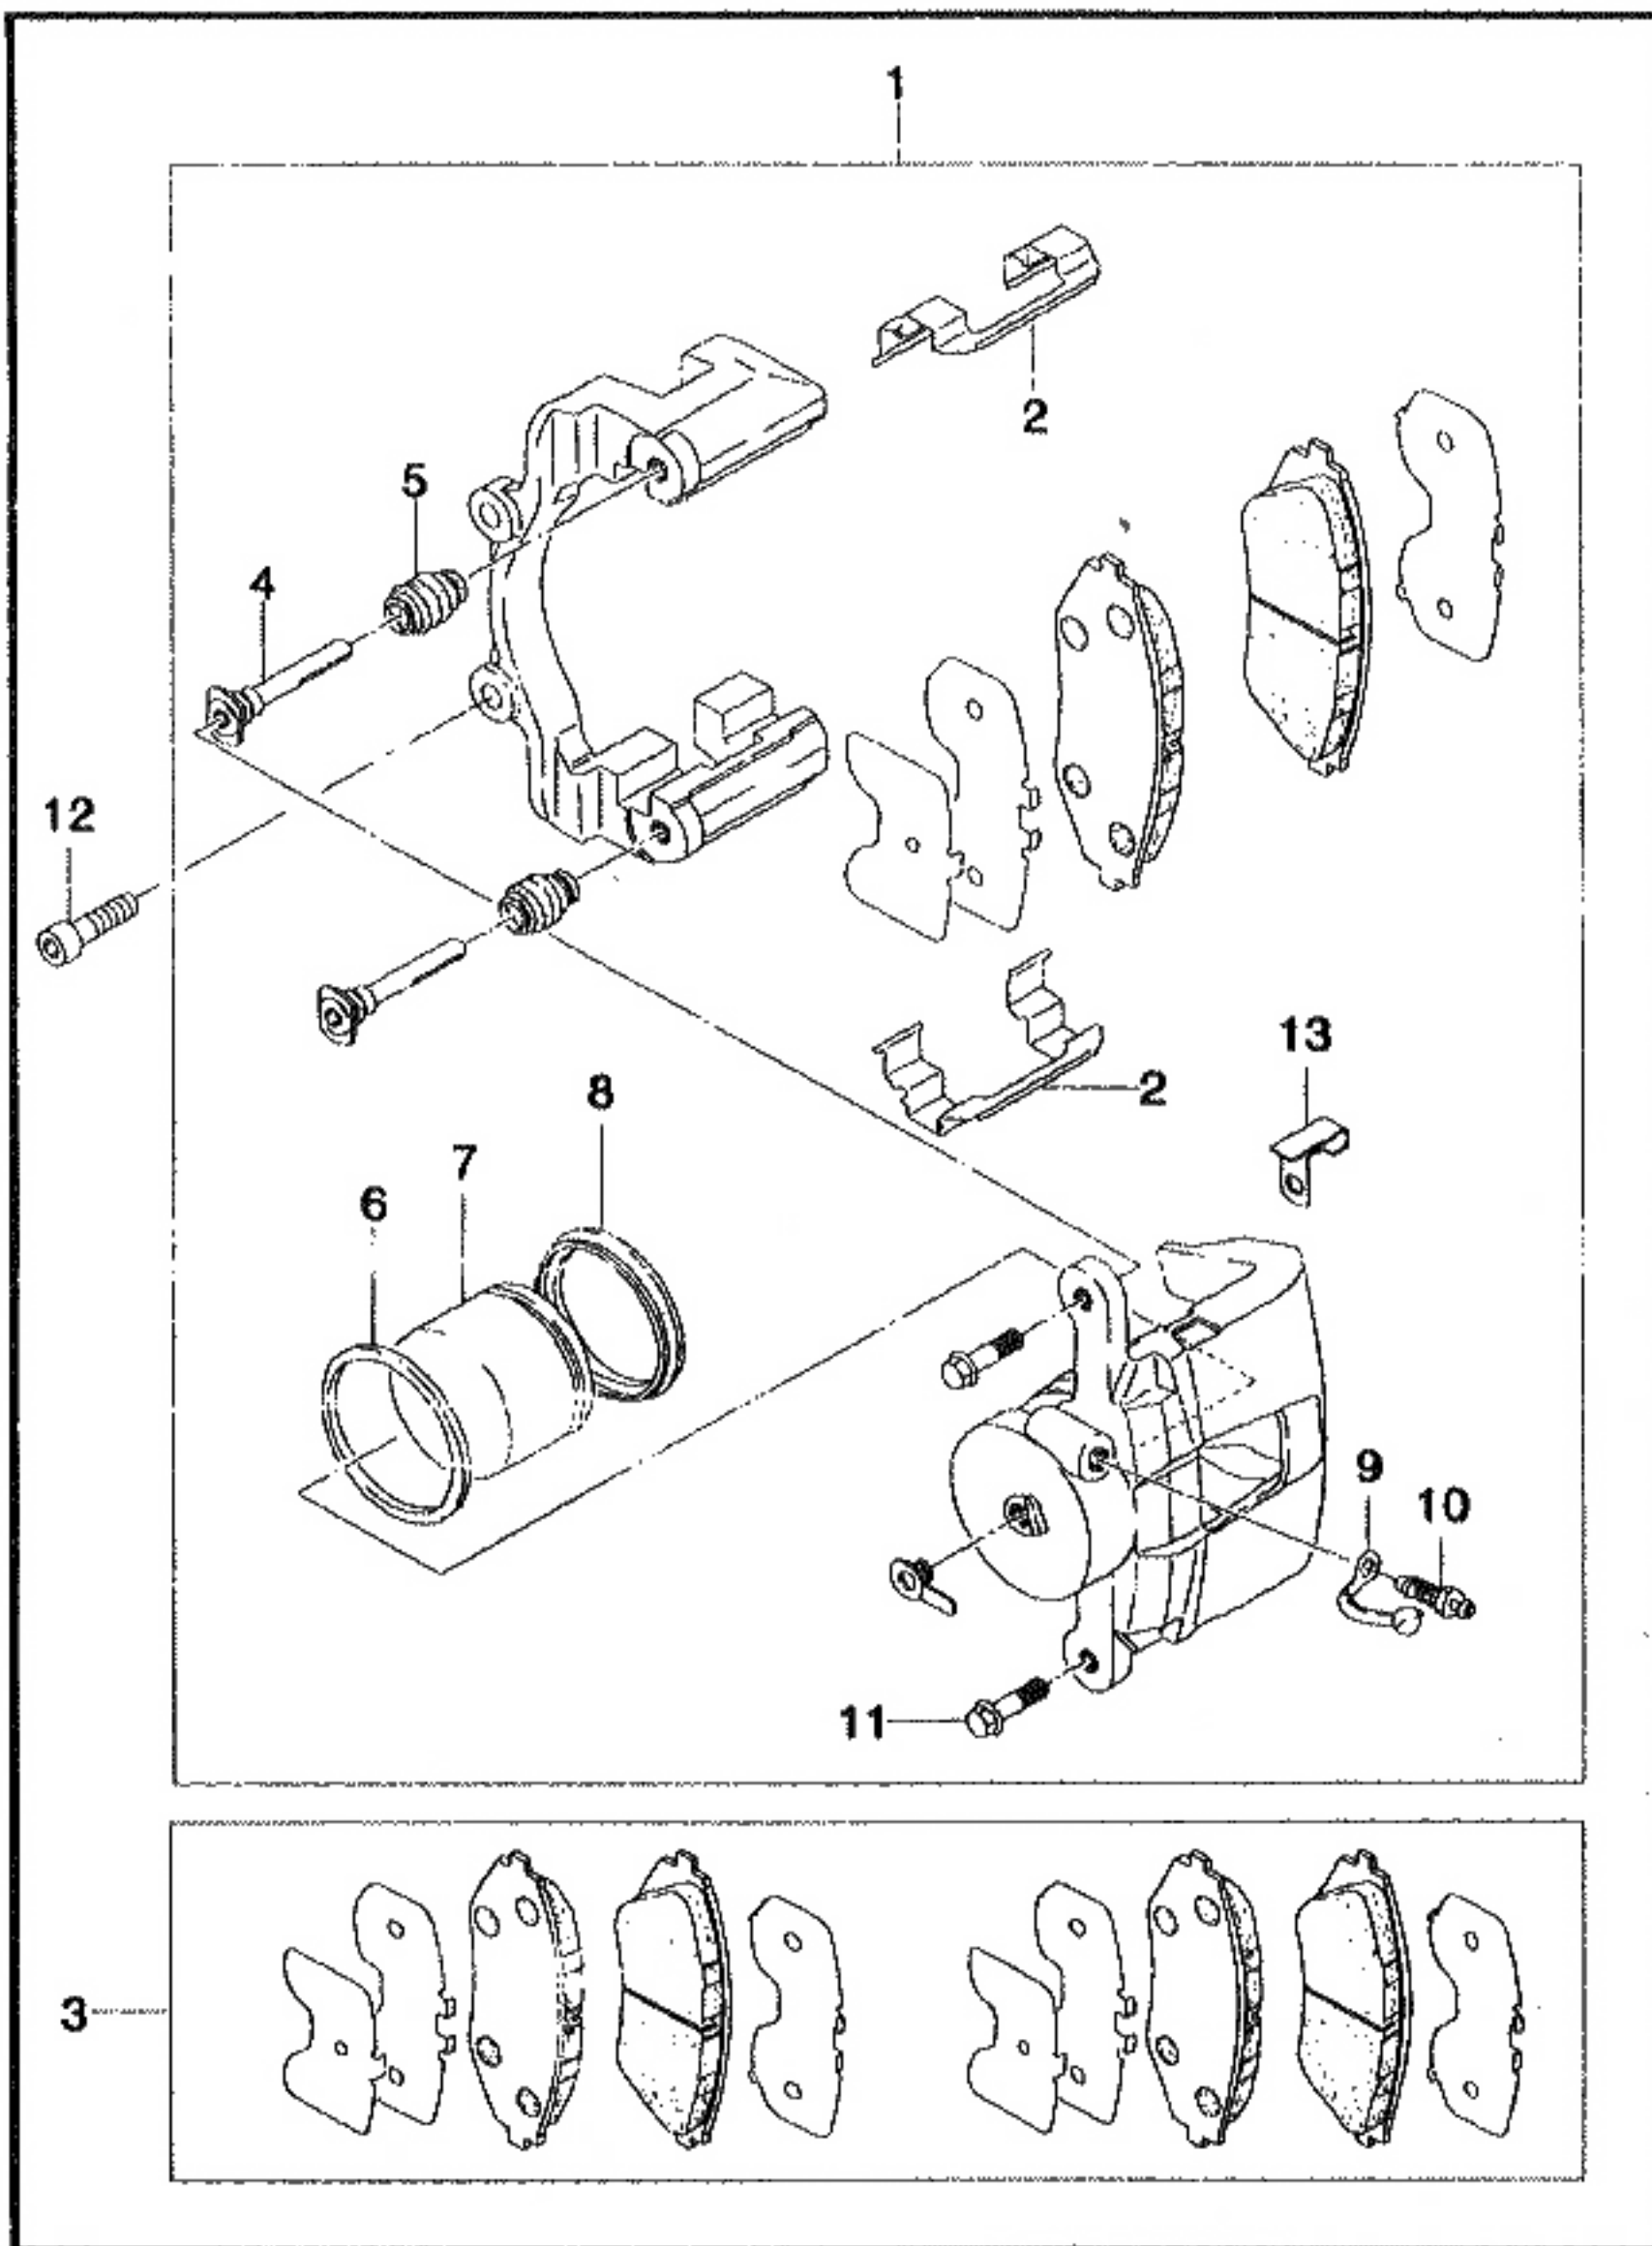



KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SLIDING (D)TASTER	CALIPER A-FR BREMS-GLEIT			(F)CALIBRE-FREIN COULISSANT (S)CALIBRADOR-DESLIZADOR					
	96205944	.	S	S		LH 1		970830			
	96245167	.	S	S		LH 1	970901				
	96205945	.	S	S		RH 1		970830			
	96245168	.	S	S		RH 1	970901				
	[02]	(E)SPRING-PAD (D)FEDERUNG				(F)RESSORT (S)RESORTE					
	410415	.	S	S		4					
	[03]	(E)PAD KIT-FR (D)UNTERLAGE-SATZ				(F)JEU DE PATINS-FREIN (S)JUEGO DE COJIN-FRENOS					
	96245178	.	S	S		1		970830			
	96253367	.	S	S		1	970901				
	[04]	(E)PIN (D)STIFT				(F)BROCHE (S)PASADOR					
	410409	.	S	S		4					
	[05]	(E)BOOT-PIN (D)KOFFERRAUM				(F)GAINE (S)CAPUCHON					
	410410	.	S	S		4					
	[06]	(E)SEAL-PISTON (D)DICHTUNG				(F)JOINT D'ETANCHEITE (S)SELLO					
	410321	.	S	S		2					
	[07]	(E)PISTON (D)KOLBEN				(F)PISTON (S)PISTON					
	410707	.	S	S		2					
	[08]	(E)BOOT-PISTON (D)KOFFERRAUM				(F)GAINE (S)CAPUCHON					
	410708	.	S	S		2					
	[09]	(E)PROTECTOR-BLEEDER SCREW (D)SCHUTZTEIL				(F)PROTECTION (S)PROTECTOR					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

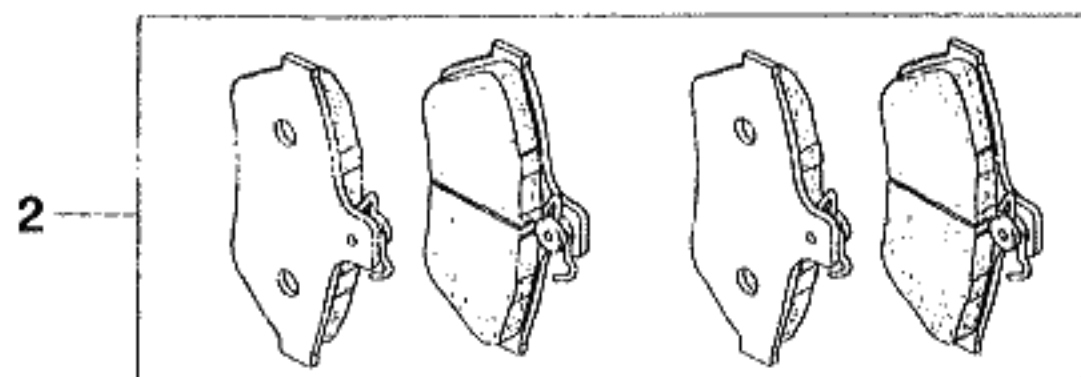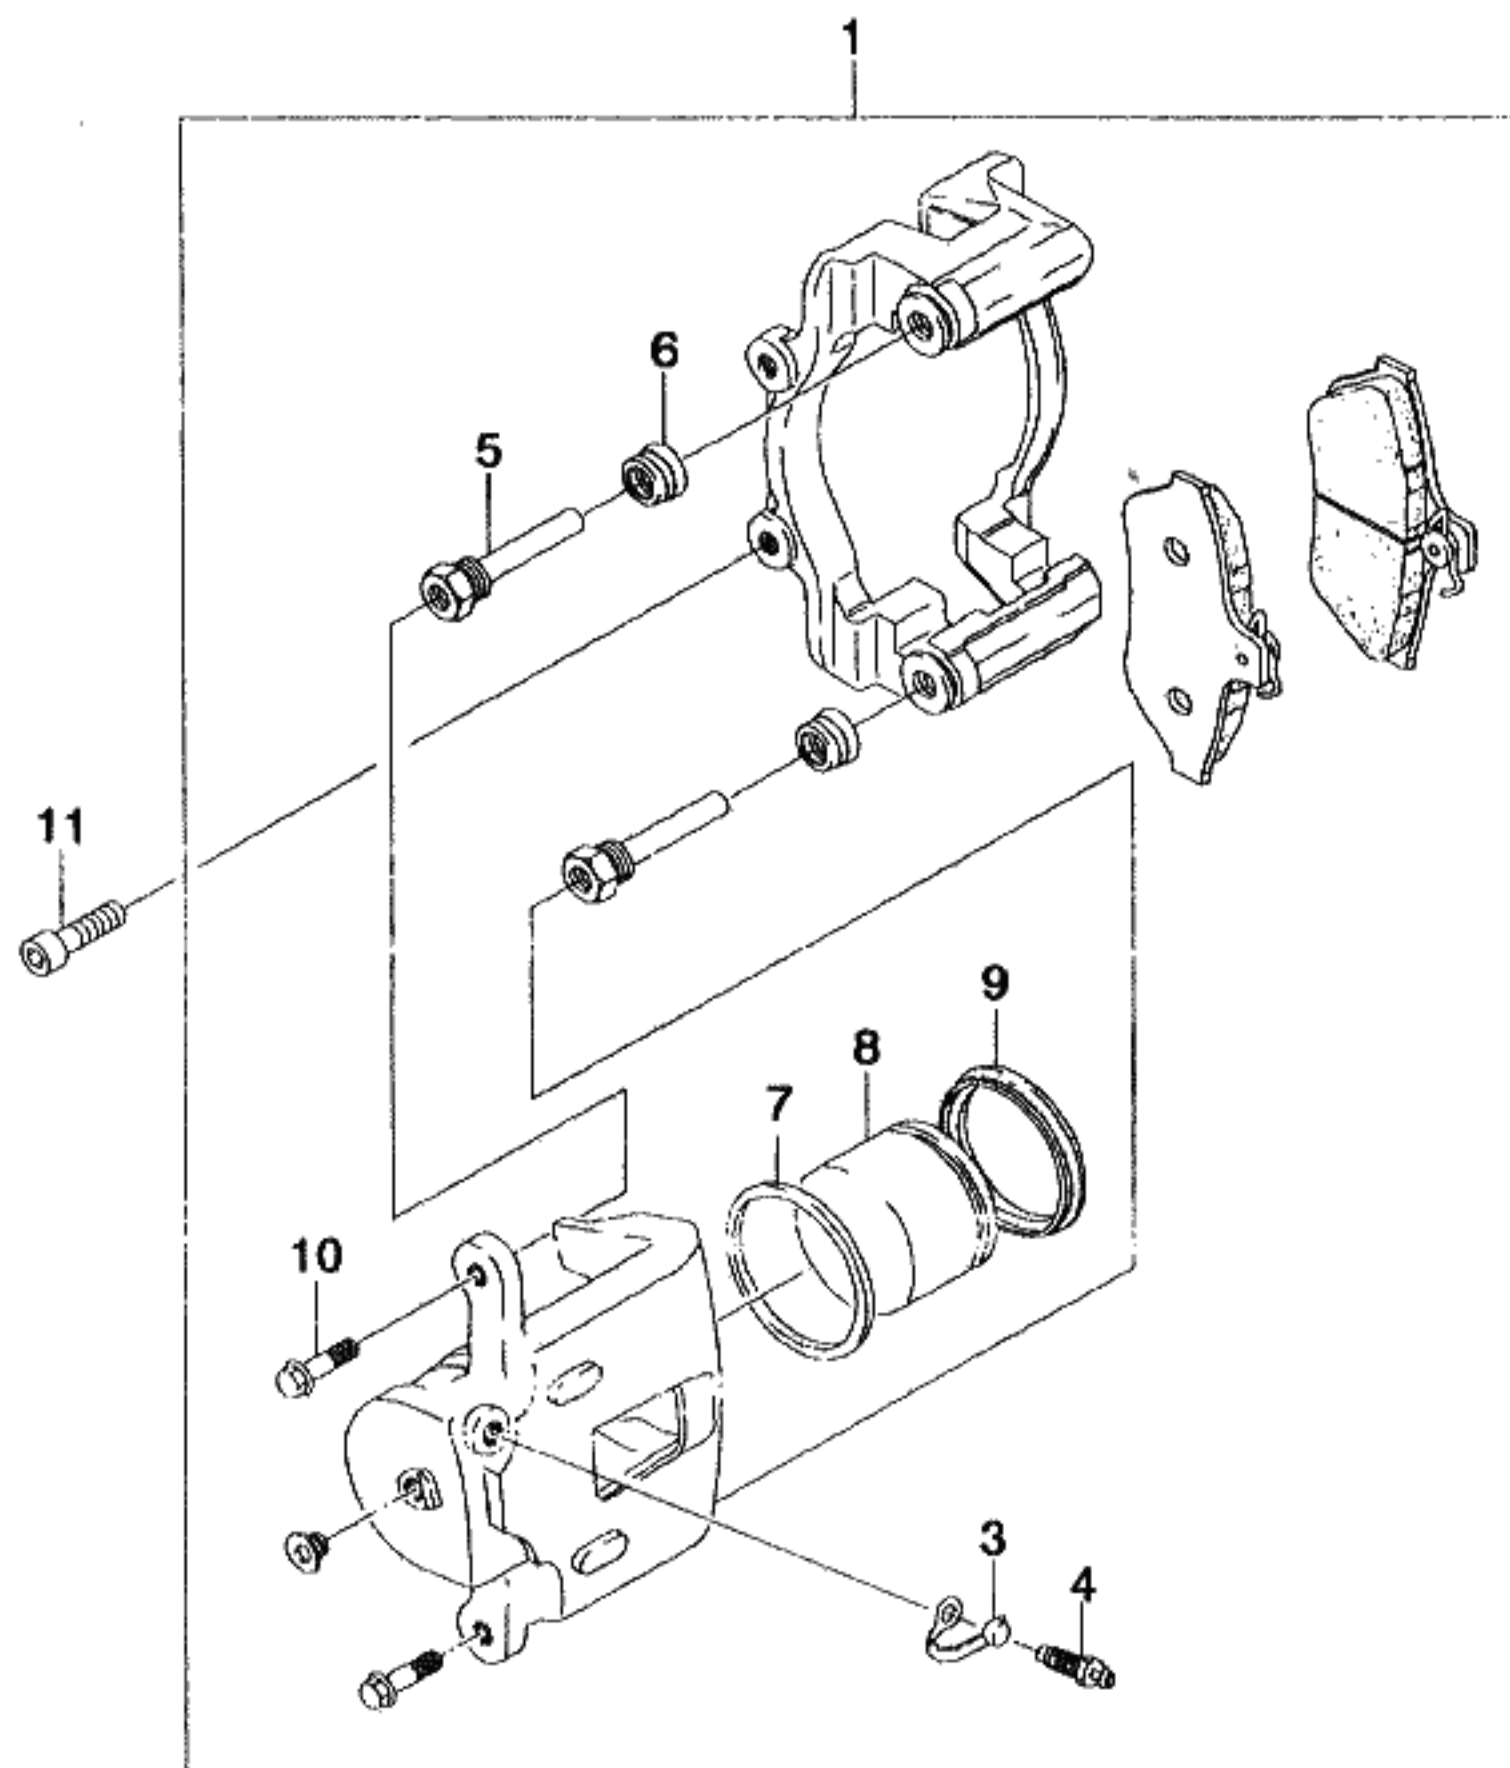


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	410350	.	S	S			2					
	[10]		(E)SCREW-BLEEDER				(F)VIS					
			(D)SCHRAUBE				(S)TORNILLO					
	2007023	.	S	S			2					
	[11]		(E)BOLT-PIN				(F)BOULON					
			(D)SCHRAUBE				(S)PERNO					
	2006010	.	S	S			4					
	[12]		(E)BOLT-HEXAGON				(F)BOULON					
			(D)SCHRAUBE				(S)PERNO					
	09100-12011	.	S	S			4					
	[13]		(E)SENSOR-WEAR				(F)DETECTEUR					
			(D)SENSOR				(S)SENSOR					
	410419	.	S	S			2					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

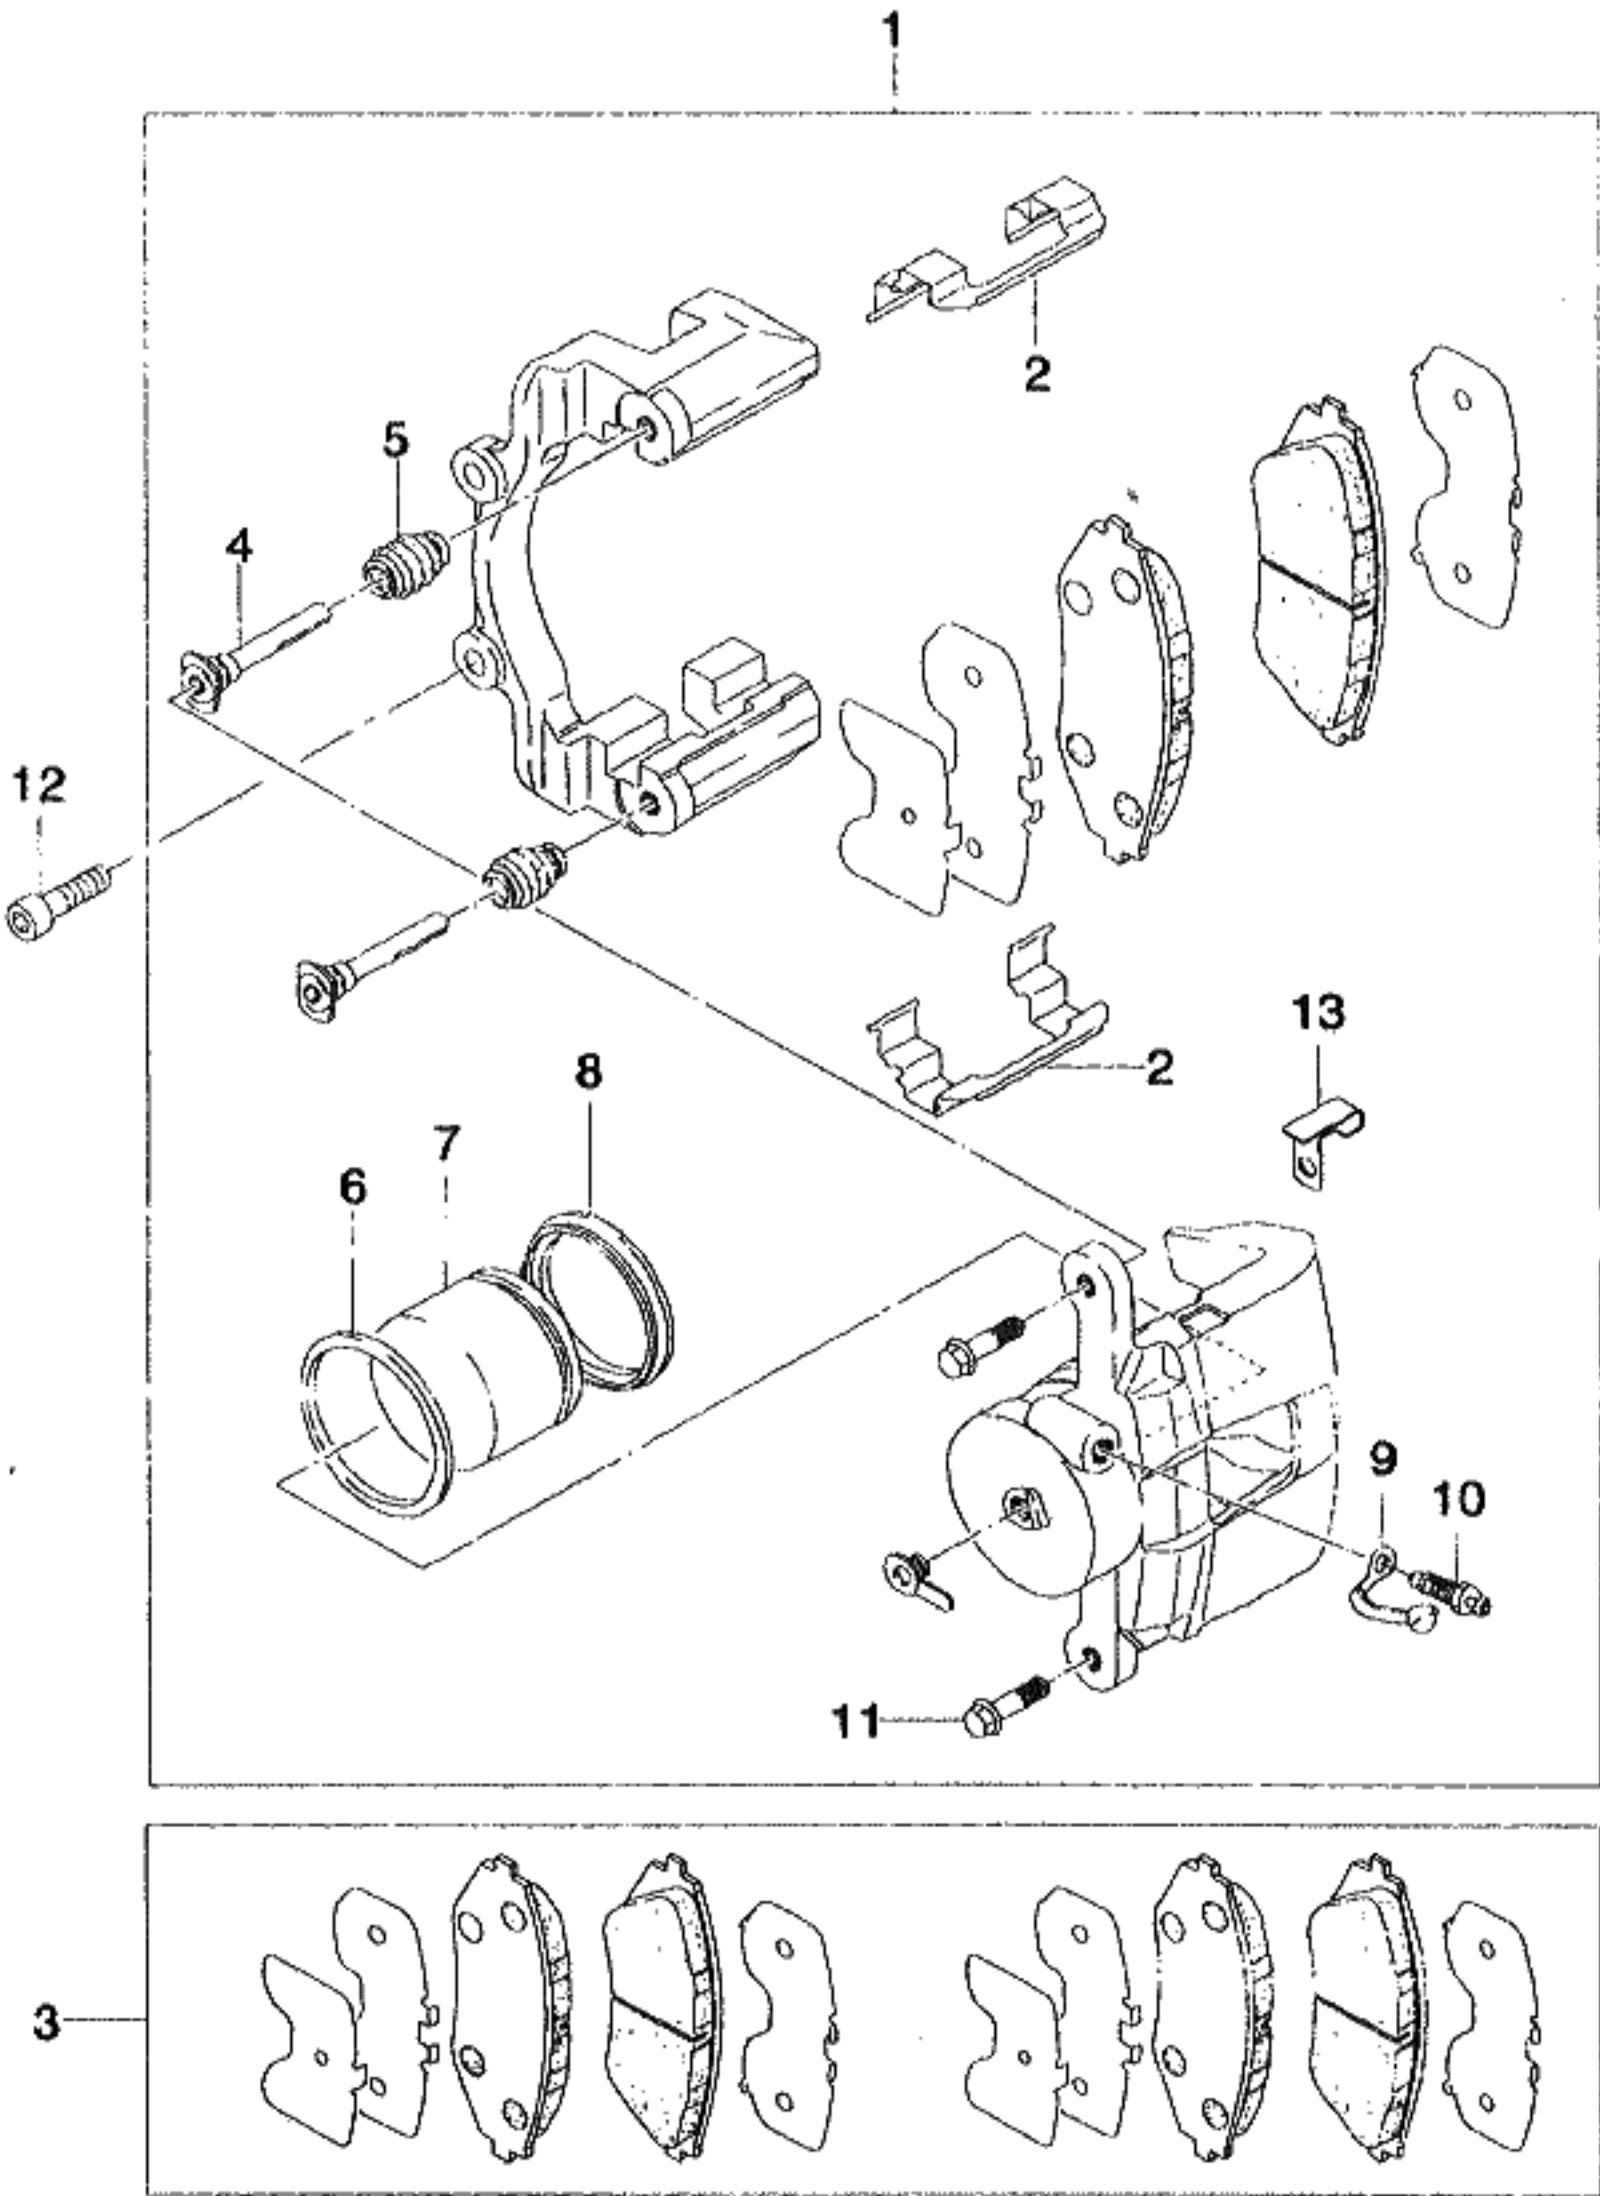


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SLIDING CALIPER A-RR (D)TASTER BREMS-GLEIT						(F)CALIBRE-FREIN COULISSANT (S)CALIBRADOR-DESLIZADOR			
	96205954	.	S	S				LH 1	970819		
○	96246689	.	S	S				LH 1	970820		
	96205955	.	S	S				RH 1	970819		
○	96246690	.	S	S				RH 1	970820		
	[02]	(E)PAD KIT-DISC,RR (D)UNTERLAGE-SATZ						(F)JEU DE PATINS-FREIN (S)JUEGO DE COJIN-FRENOS			
	96245179	.	S	S				1	970819		
○	96253368	.	S	S				1	970820		
	[03]	(E)PROTECTOR-BLEEDER SCREW (D)SCHUTZTEIL						(F)PROTECTION (S)PROTECTOR			
	410350	.	S	S				2			
	[04]	(E)SCREW-BLEEDER (D)SCHRAUBE						(F)VIS (S)TORNILLO			
	2007023	.	S	S				2			
	[05]	(E)PIN-GUIDE,CALIPER (D)STIFT						(F)BROCHE (S)PASADOR			
	K423-001	.	S	S				4			
	[06]	(E)BOOT-GUIDE PIN (D)KOFFERRAUM						(F)GAINE (S)CAPUCHON			
	K812-020	.	S	S				4			
	[07]	(E)RING-SEALING (D)RING						(F)ANNEAU (S)ANILLO			
	P8973	.	S	S				2			
	[08]	(E)PISTON-CALIPER MACHINING (D)KOLBEN						(F)PISTON (S)PISTON			
	K272-022	.	S	S				2			
	[09]	(E)BOOT-PISTON (D)KOFFERRAUM						(F)GAINE (S)CAPUCHON			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

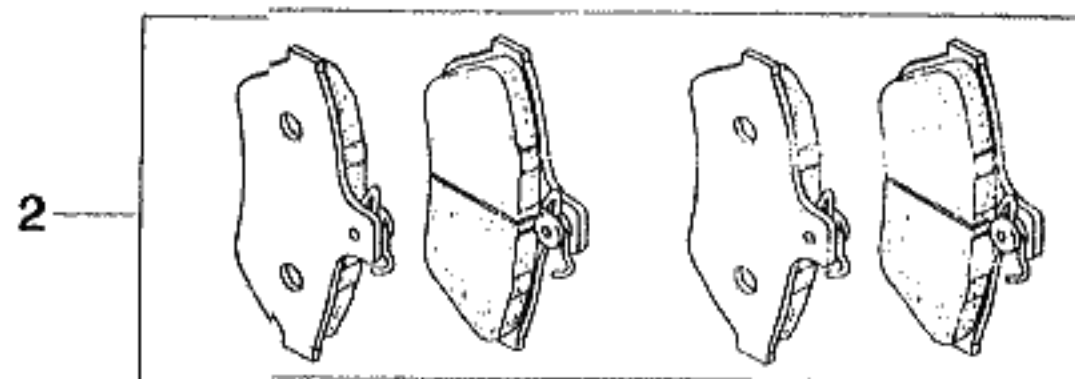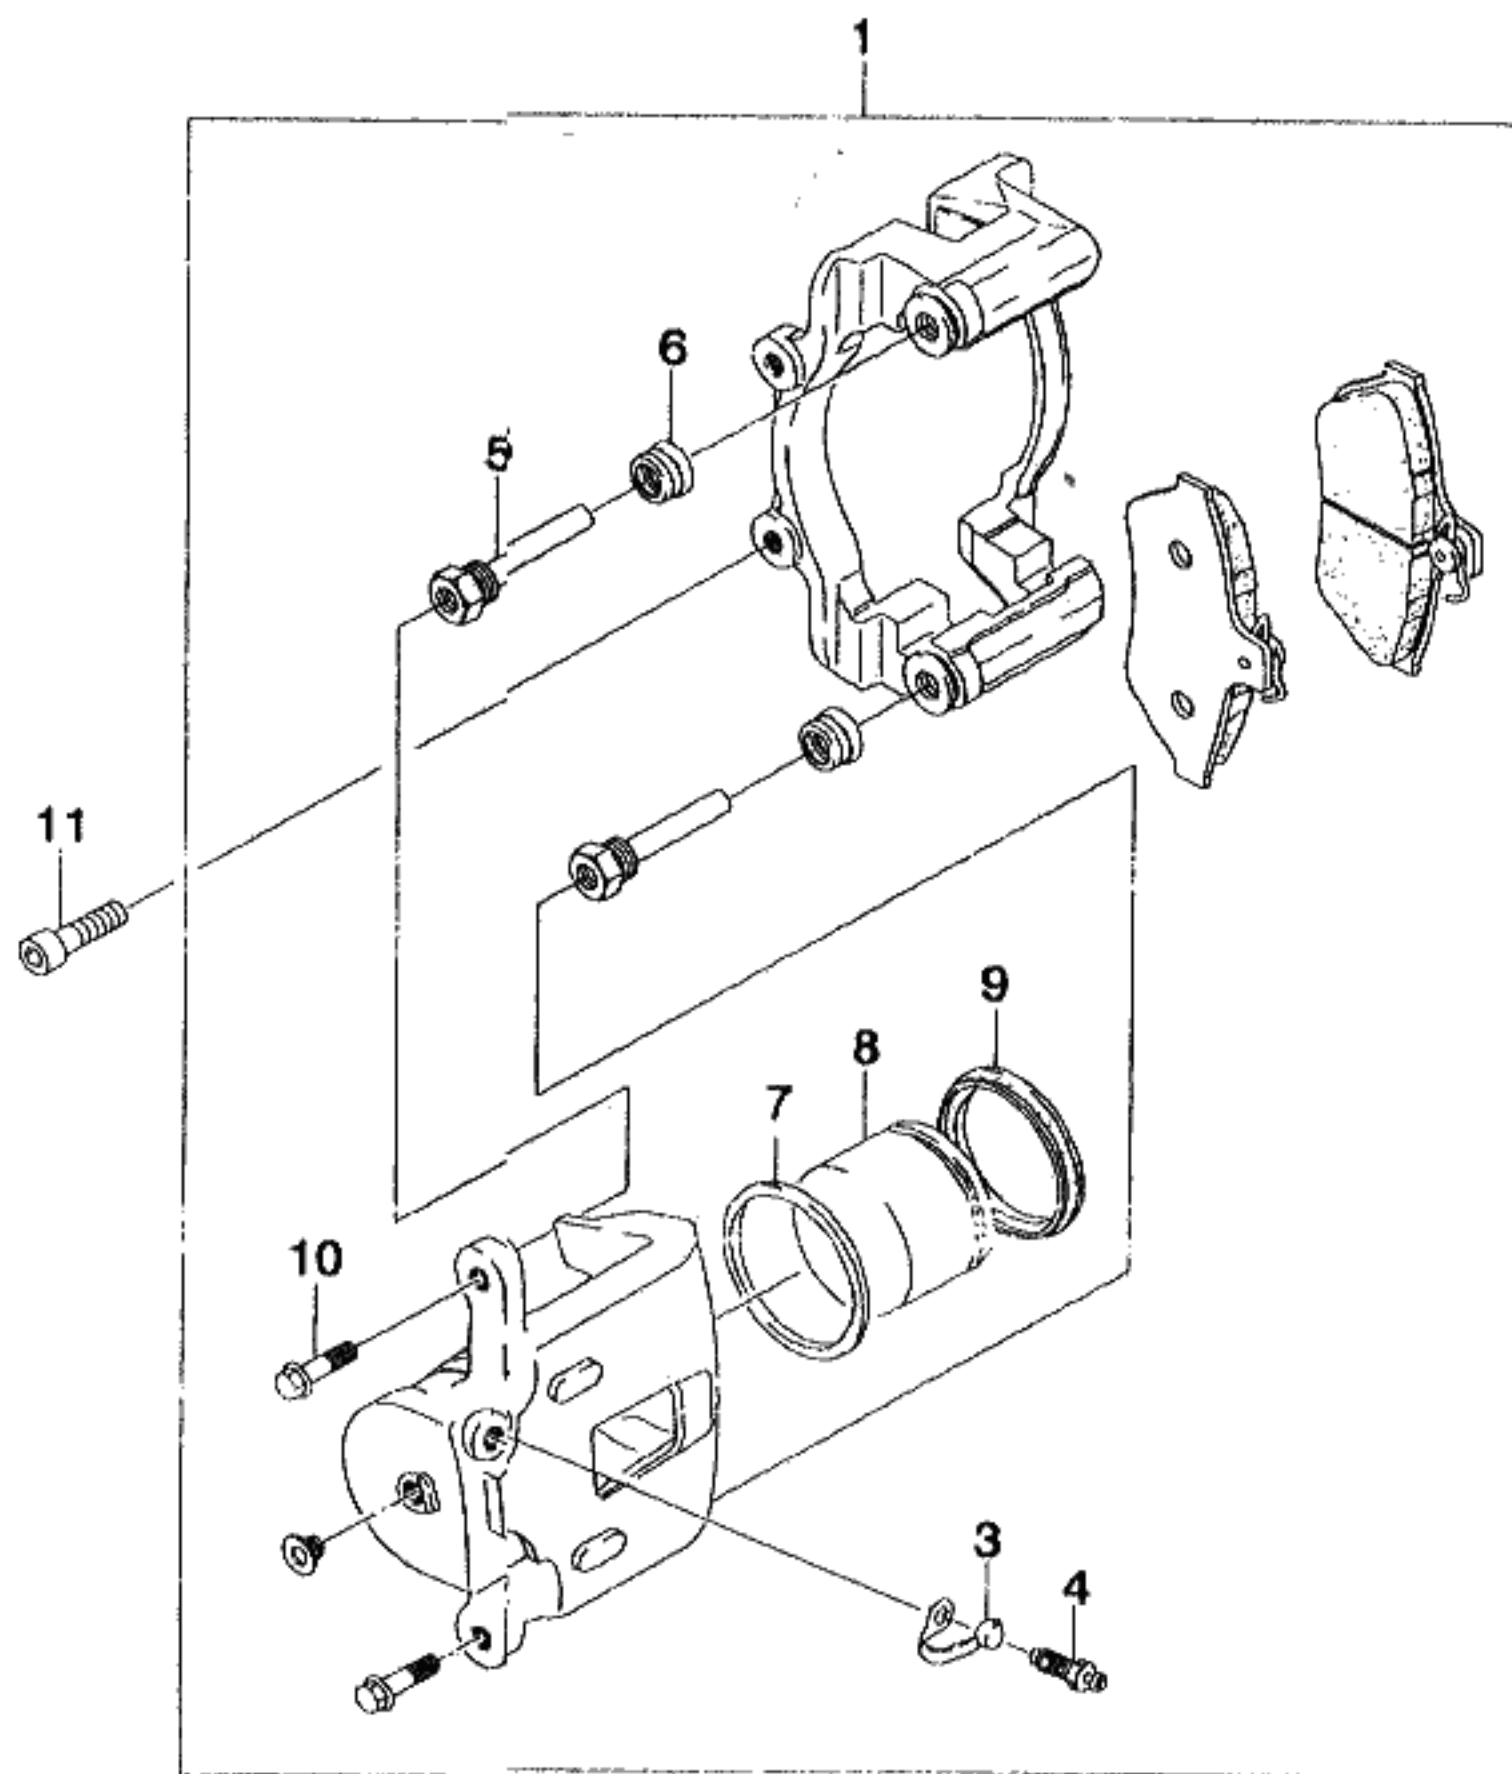


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	P067-007		S	S			2				
	[10]		(E)BOLT-GUIDE PIN				(F)BOULON				
	B171-012		(D)SCHRAUBE				(S)PERNO				
			S	S			4				
	[11]		(E)BOLT-FLANGE				(F)BOULON				
	09103-10014		(D)SCHRAUBE				(S)PERNO				
			S	S			4				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

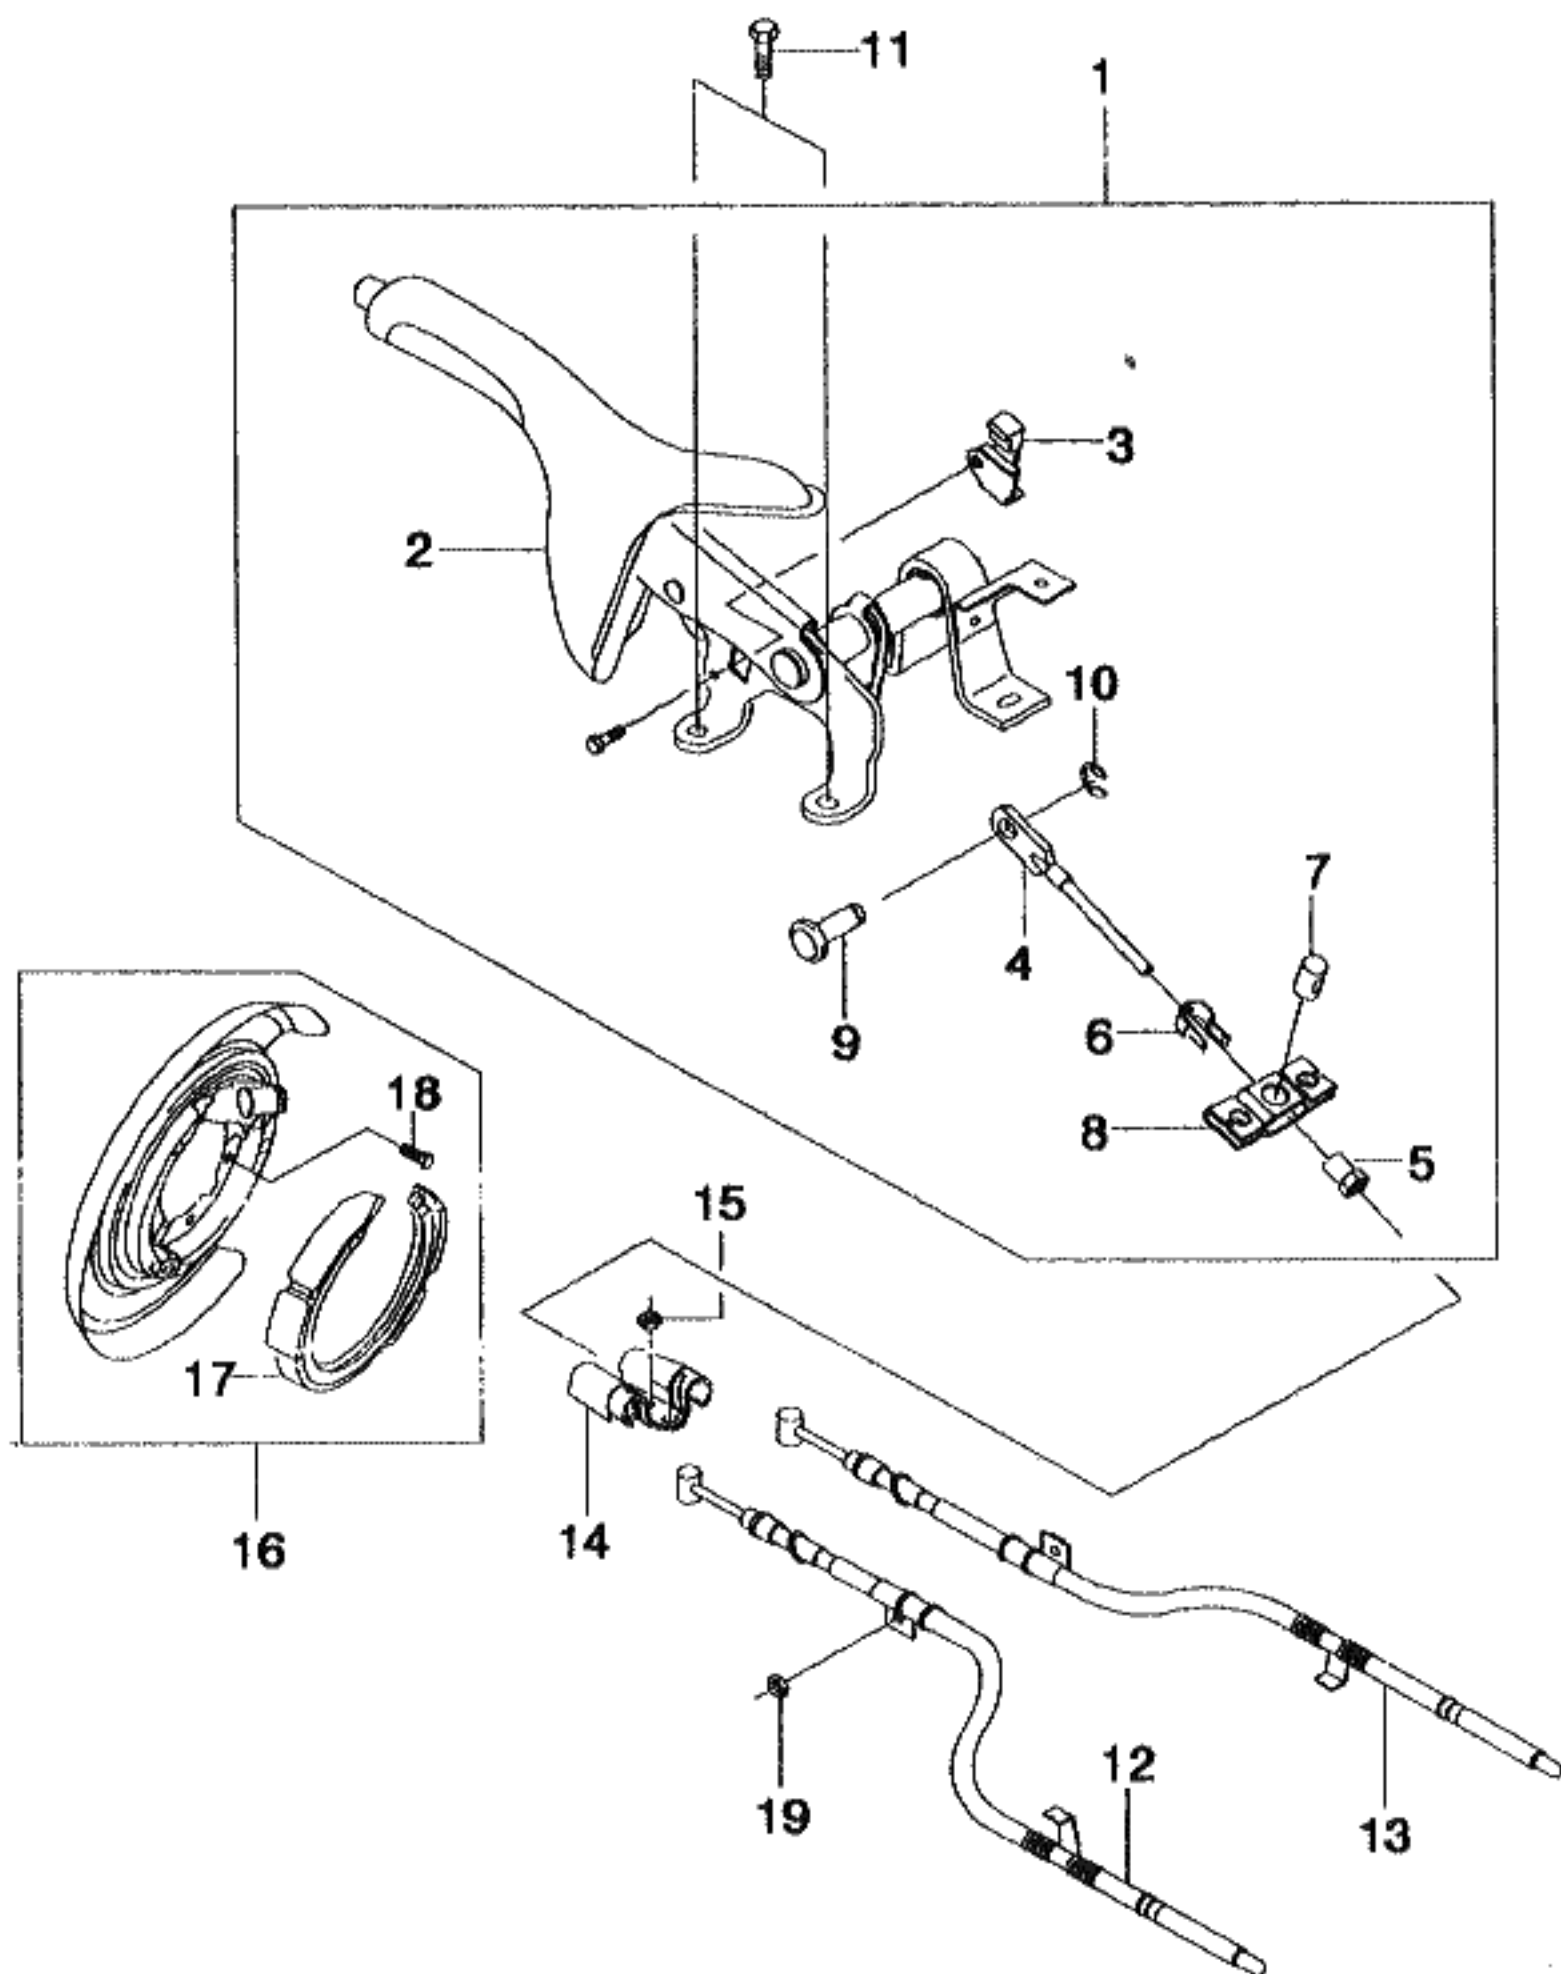

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 01137-08163	(E)BOLT-HEXAGON (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	4				
	[12] 96246680	(E)CABLE A-PARKING BRAKE (D)KABEL,HANDBREMSE	S	S		(F)FREIN DE SECOURS (S)CABLE	LH 1				
	[13] 96246681	(E)CABLE A-PARKING BRAKE (D)KABEL,HANDBREMSE	S	S		(F)FREIN DE SECOURS (S)CABLE	RH 1				
	[14] 96240713	(E)BRACKET A-GUIDE,P/CABLE (D)TRÄGER	S	S		(F)SUPPORT (S)SOPORTE	1				
	[15] 08316-28082	(E)NUT-FLANGE (D)MUTTER	S	S		(F)ECROU (S)TUERCA	2				
	[16] 96245188 96245189	(E)BRAKE A-PARKING RR (D)BREMSE	S	S		(F)FREIN (S)FRENO	LH 1 RH 1				
	[17] B521-030	(E)SHOE A-PARKING BRAKE (D)SCHUH,BREMS	S	S		(F)SABOT-FREIN (S)ZAPATA-FRENO	2				
	[18] 09103-10038	(E)BOLT-FLANGE (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	8				
	[19] 08316-28082	(E)NUT-FLANGE (D)MUTTER	S	S		(F)ECROU (S)TUERCA	2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

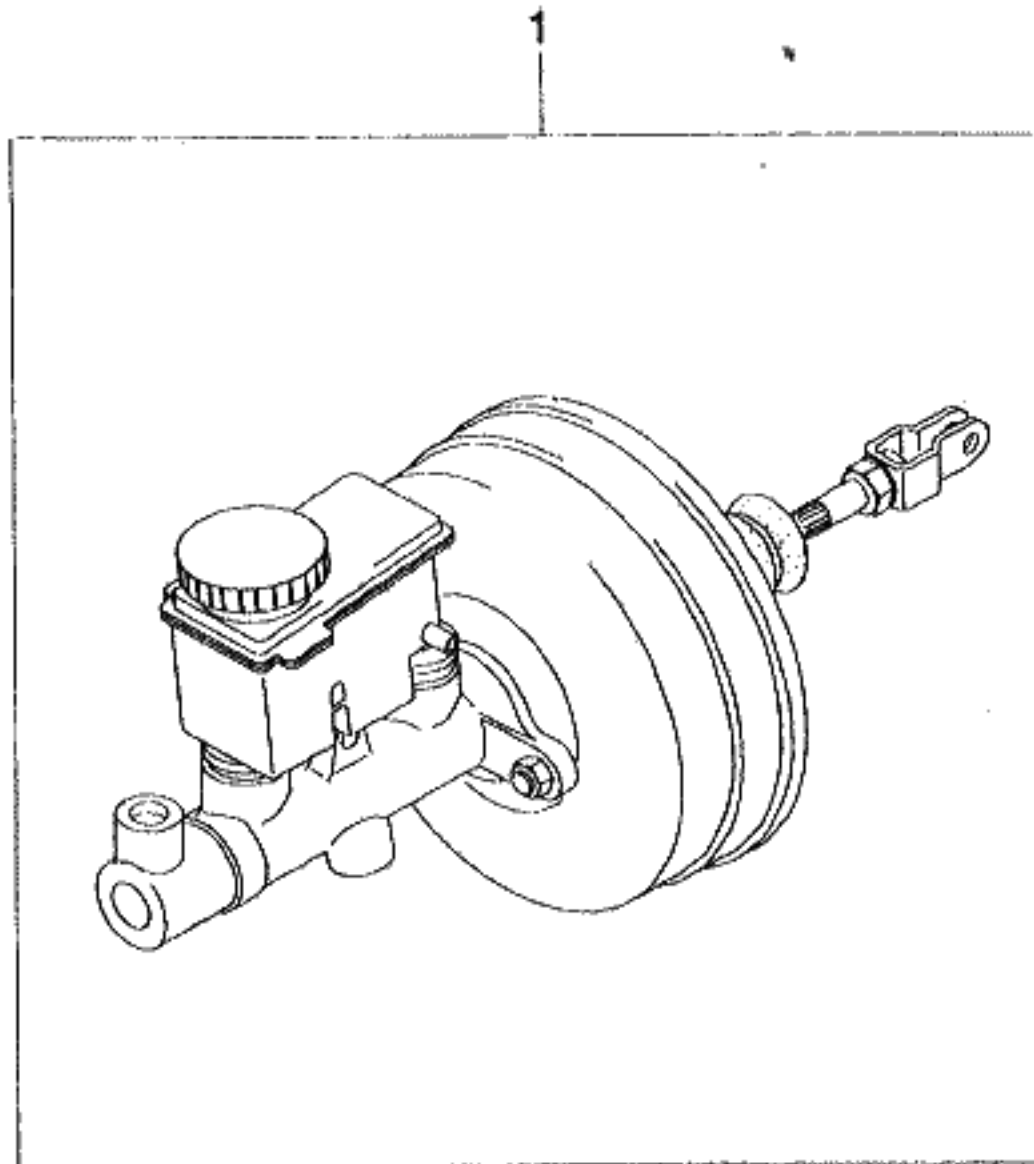


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)MASTER BRAKE UNIT A (D)BREMS-HAUPT EINHEIT					(F)UNITE FREIN-MAITRE (S)FRENO-UNIDAD MAESTRA				
	96226883	.	S	S			1				V1
	96226885	.	O	O	&JL9		1				V3
	96226887	.	.	O	&JTC		1				V5
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

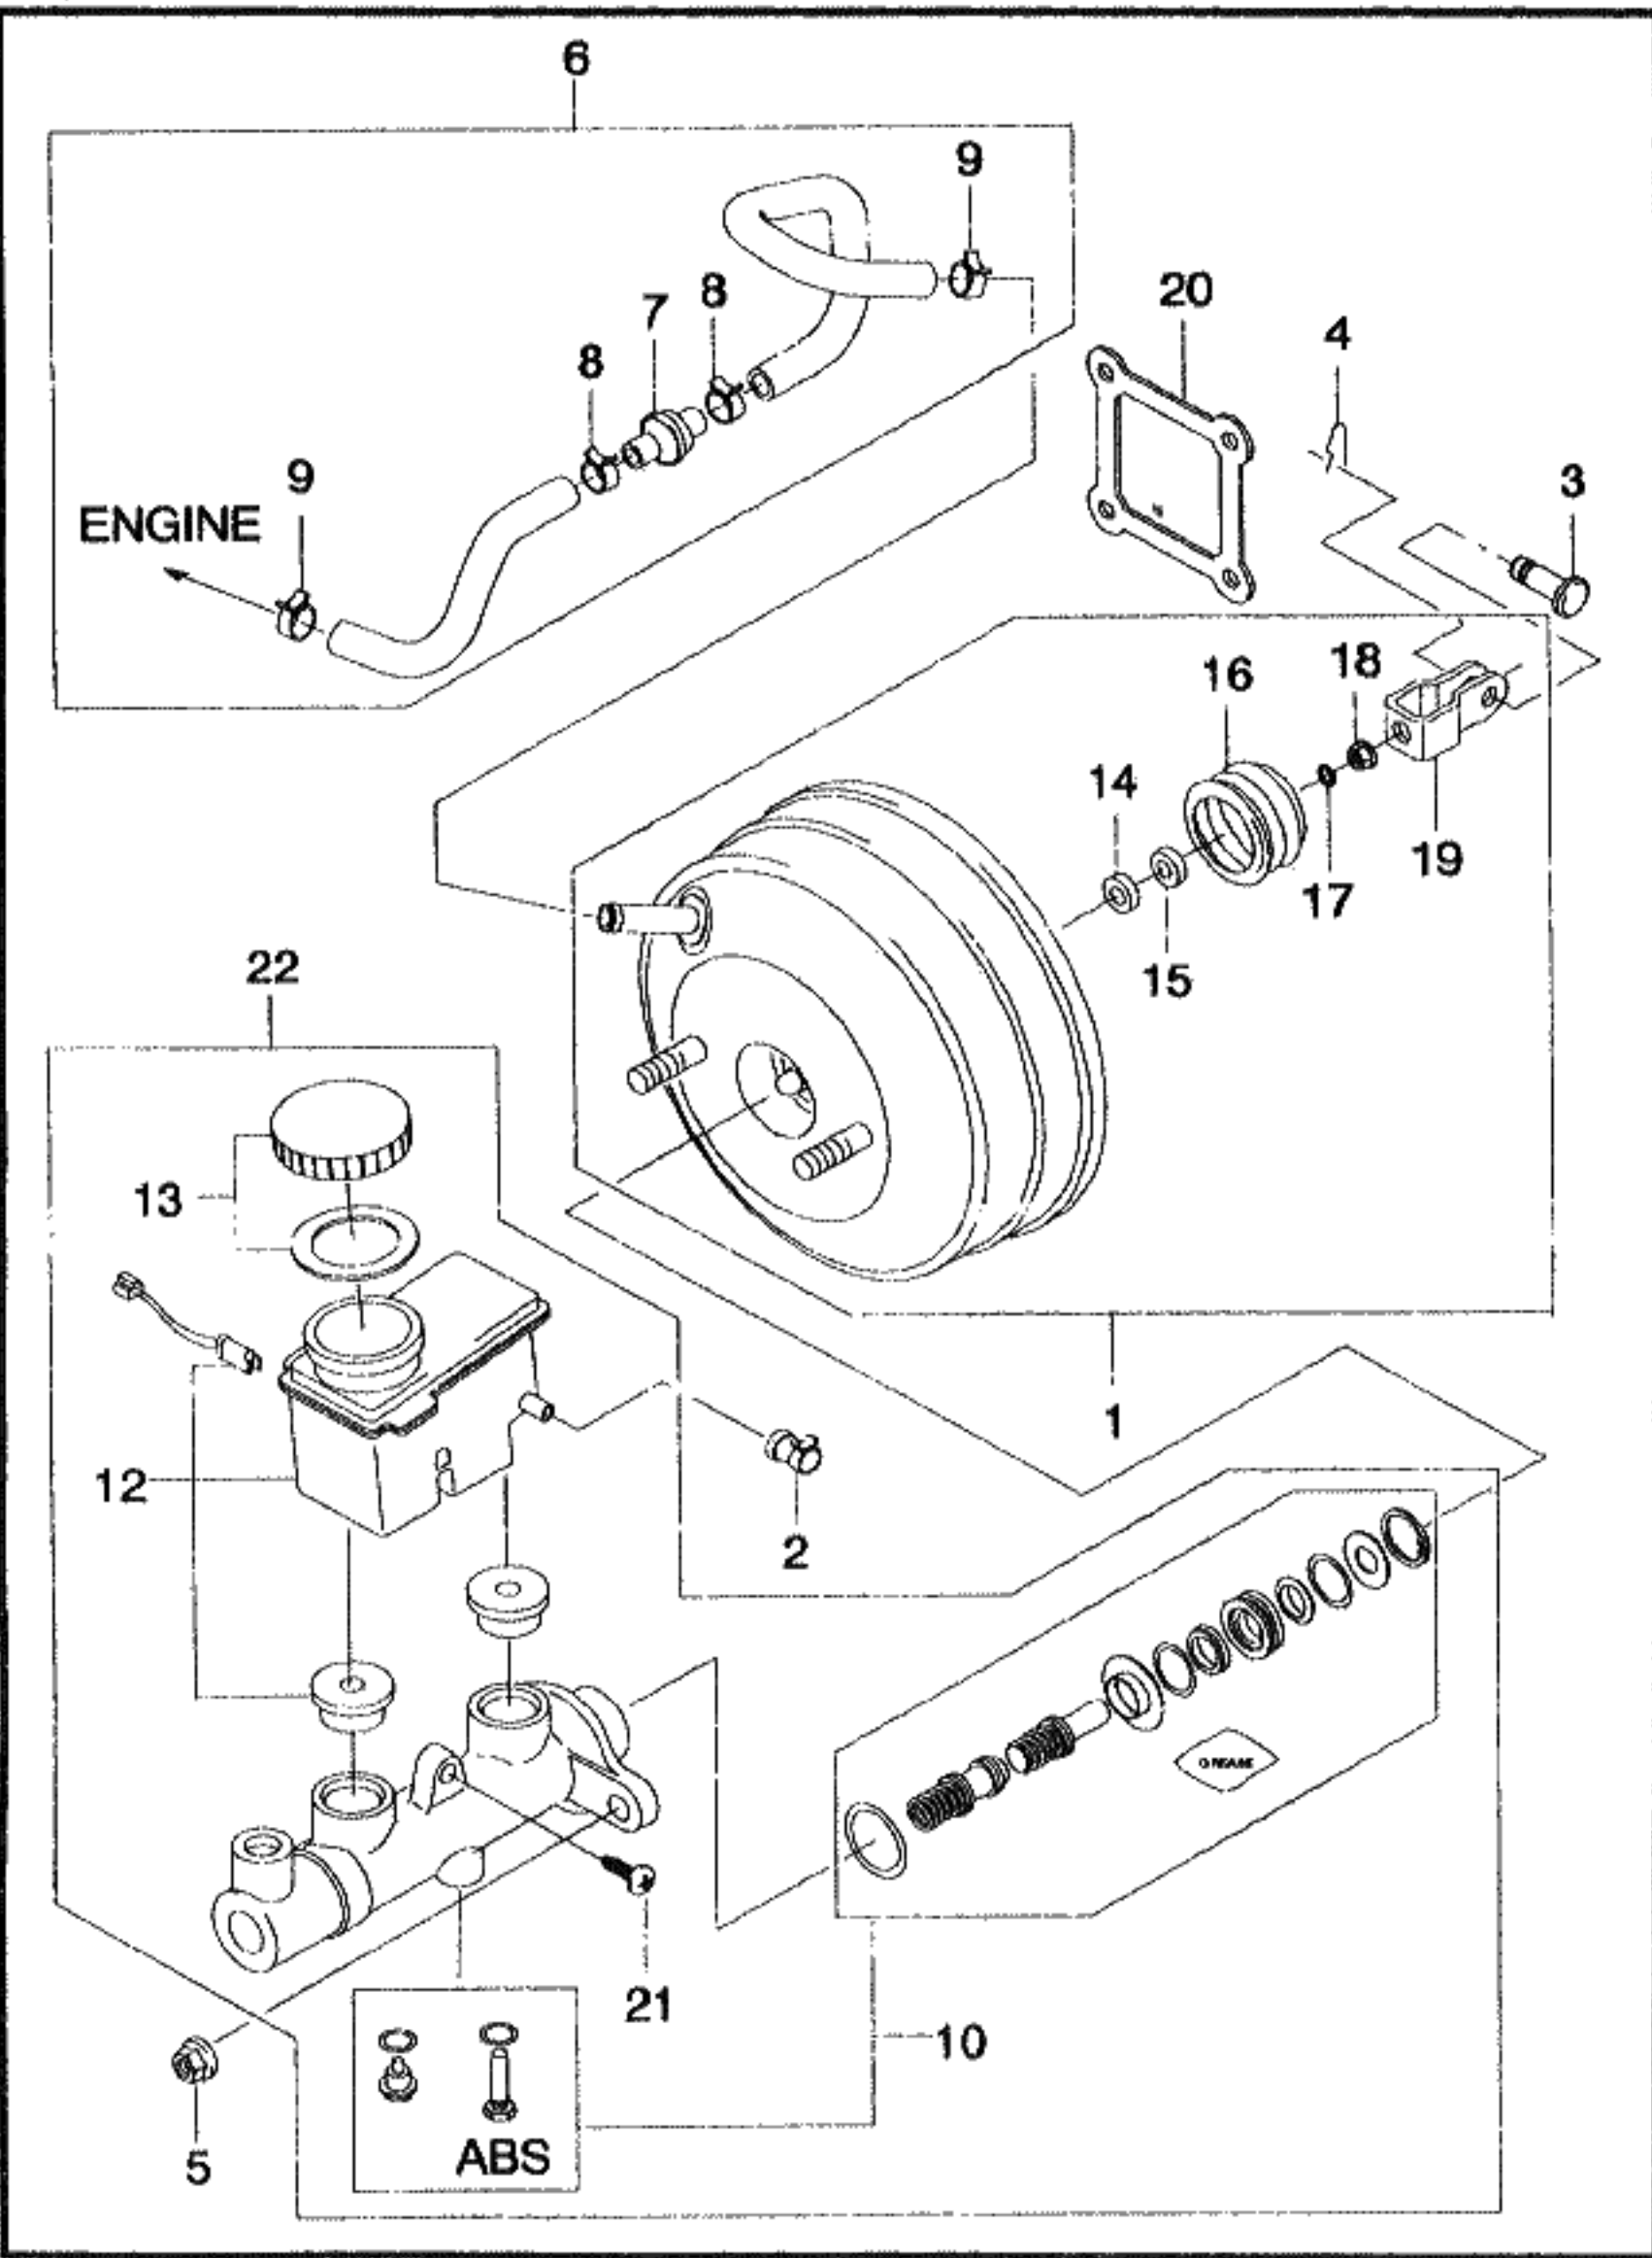


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96239111	(E) MASTER (D) HAUPT-BREMS-EINHEIT					(F) UNITE FREIN-MAITRE (S) FRENO-UNIDAD MAESTRA				
		. S S					1				
	[02] 96245174	(E) PLUG (D) STÖPSEL					(F) BOUCHON (S) TAPON				
		A O O					1				
	[03] 46512SB20000	(E) PIN-PEDAL (D) STIFT					(F) BROCHE (S) PASADOR				
		. S S					1				
	[04] 09385-08001	(E) PIN (D) STIFT					(F) BROCHE (S) PASADOR				
		. S S					1				
	[05] 221-30200	(E) NUT (D) MUTTER					(F) ECROU (S) TUERCA				
		. S S					1				
	[06] 96205914	(E) HOSE A-VACUUM,NO1 (D) SCHLAUCH					(F) TUYAU (S) MANGUERA				
		. S .					1	970616			LS
	O 96253343	. S .					1	970617			
	96205913	. O S	&L88				1	970803			LD
	O 96253362	. O S	&L88				1	970804			DL
	[07] 90193282	(E) VALVE-CHECK (D) VENTIL,PRÜF					(F) SOUPAPE-SECURITE (S) VALVULA-PARADA				
		. S S					1				
	[08] 09401-17402	(E) CLIP (D) KLEMME					(F) ATTACHE (S) GRAPA				
		. S S					2				
	[09] 09401-15402	(E) CLIP (D) KLEMME					(F) ATTACHE (S) GRAPA				
		. S S					2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


4620 MASTER CYLINDER & BOOSTER

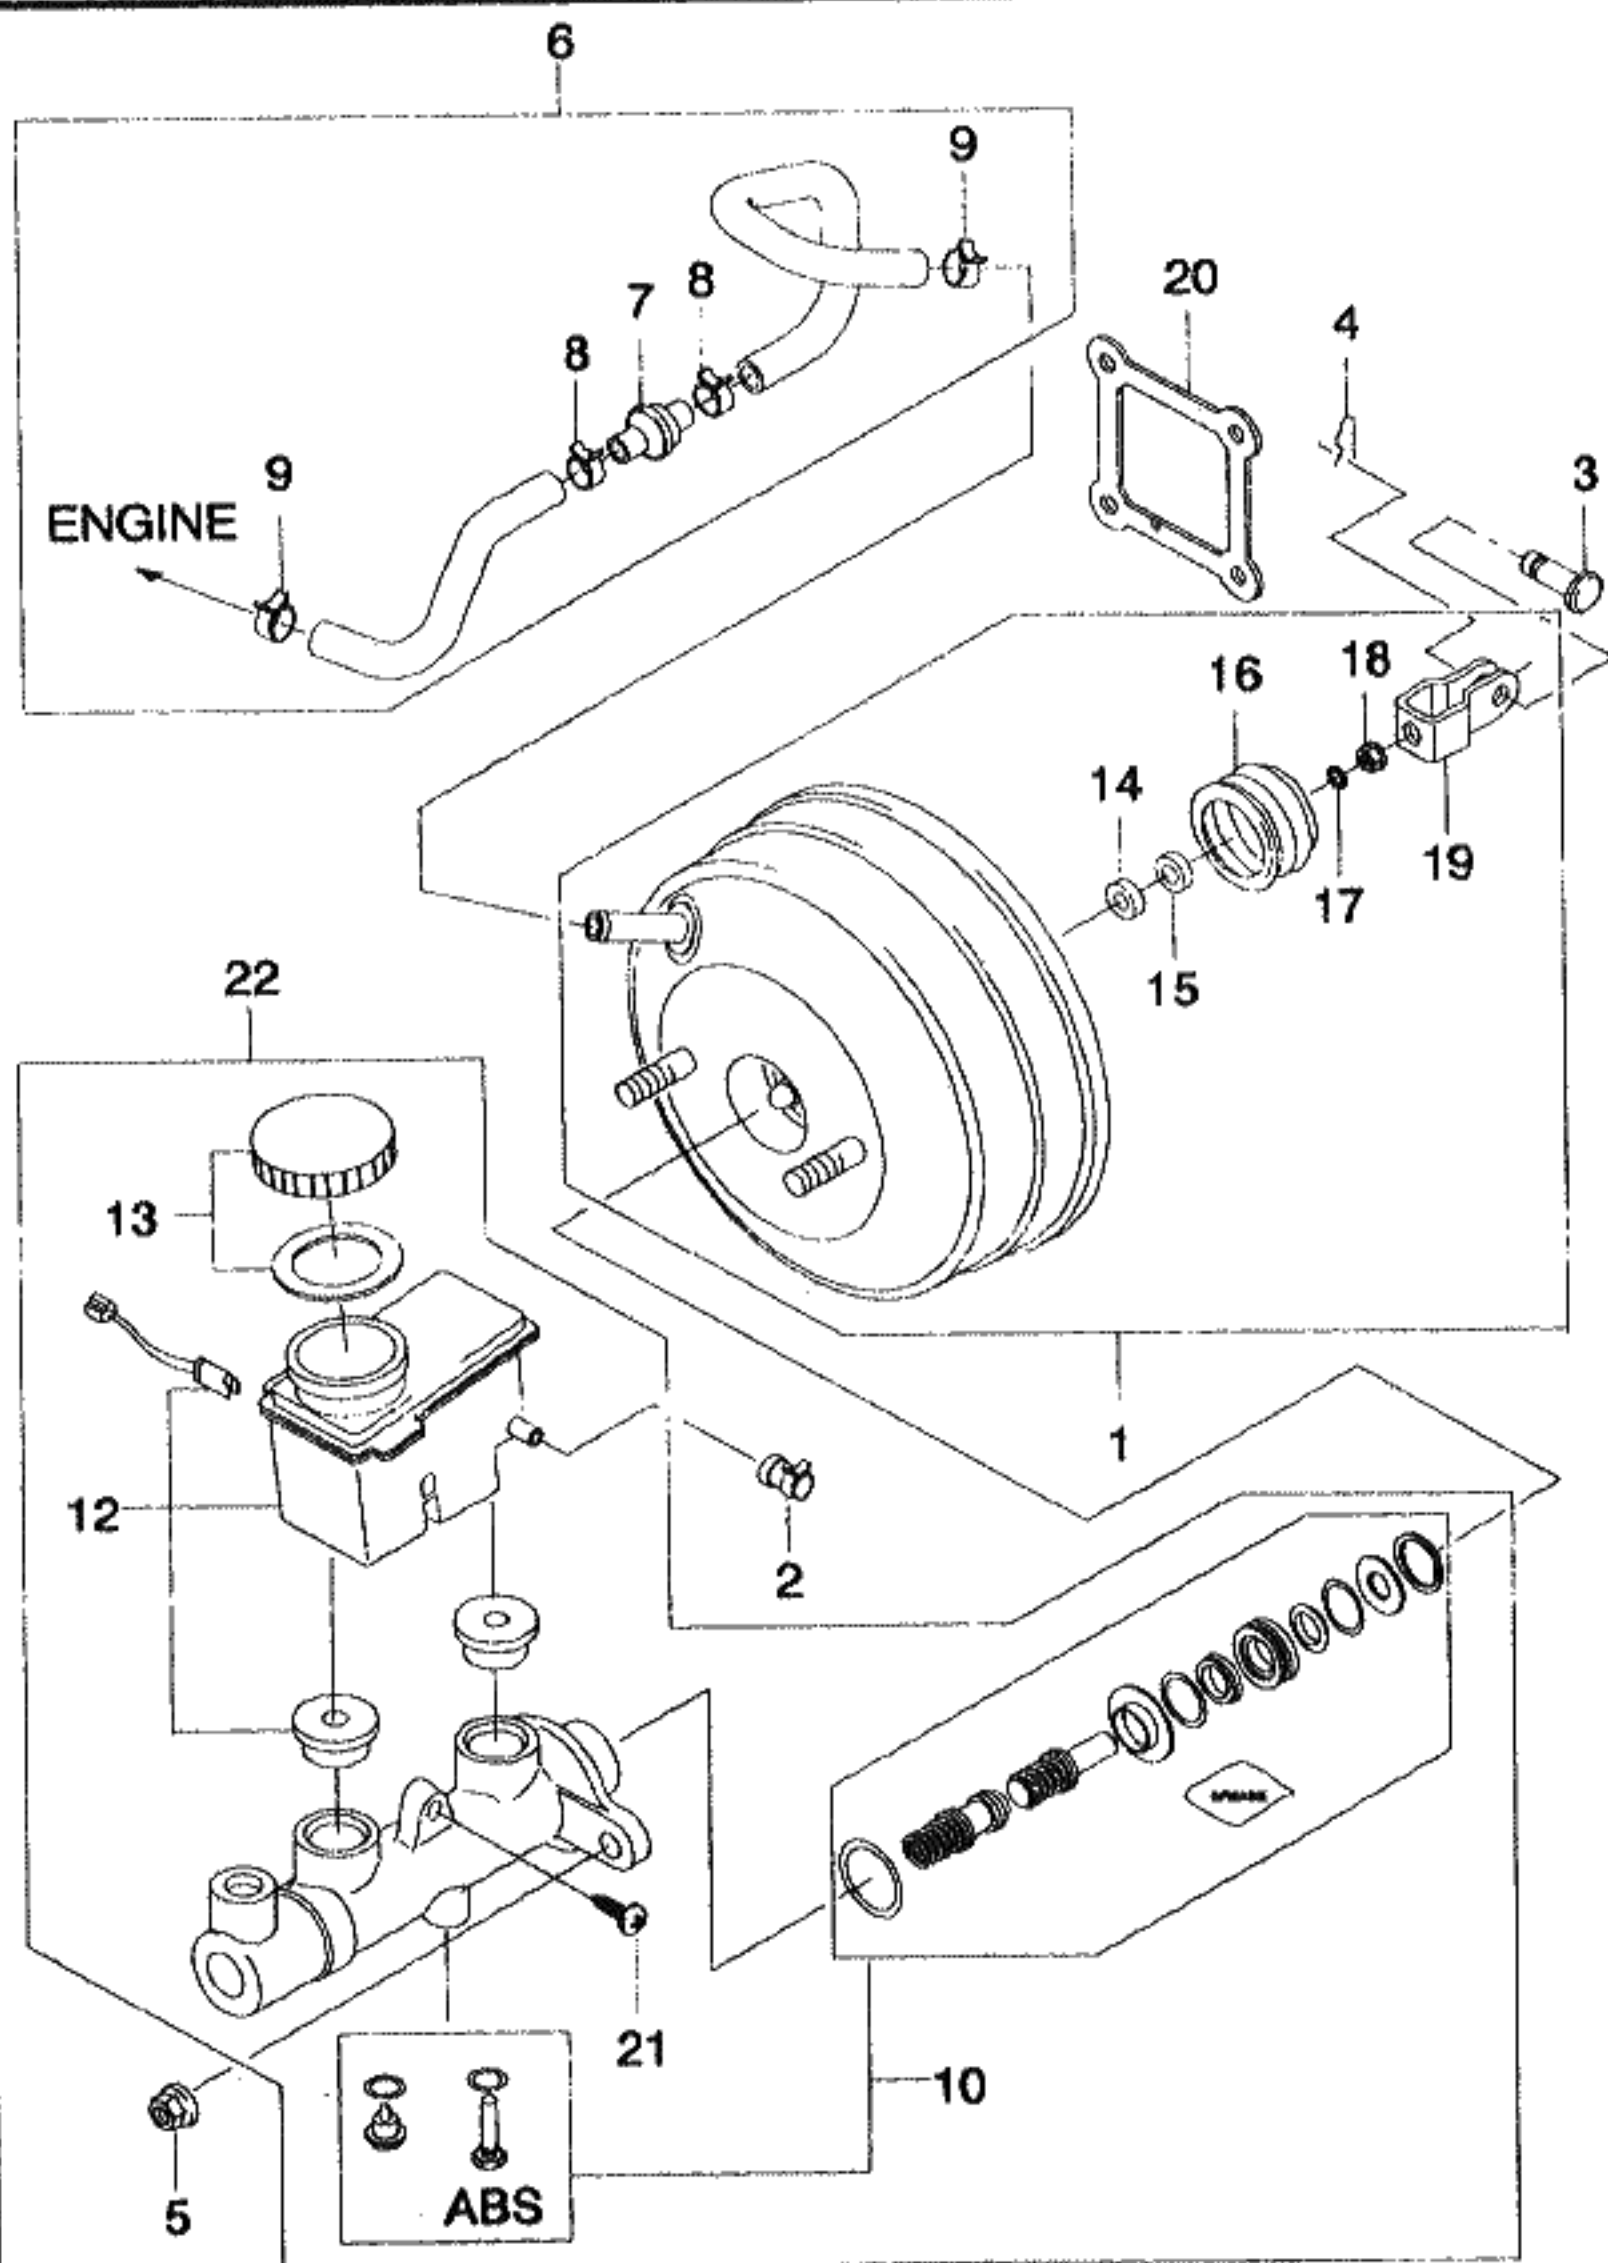


KEY NO.			PART NAME							
I T C	PART NO.	MODEL			OPTION	L / Q T Y / R	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL				FROM	TO		
			S X	C D X						
	[10]	(E)PISTON KIT- MASTER CYL (D)KOLBEN				(F)PISTON (S)PISTON				
	96245161	. S S				1				
	96245213	. O O	&JL9			1				
	96245217	. . O	&JTC			1				
	[12]	(E)RESERVOIR KIT (D)BEHÄLTER				(F)RESERVOIR (S)RESERVA				
	96245211	. S S				1				
	96245216	. O O	&JL9/JTC			1				
	[13]	(E)CAP KIT (D)DECKEL GRIFF				(F)CHAPEAU (S)TAPA-AYUDA DE ASIMIENTO				
	96245212	. S S				1				
	[14]	(E)FILTER (D)FILTER				(F)FILTRE (S)FILTRO				
	221-21400	. S S				1				
	[15]	(E)SILENCER (D)LAGERFUTTER				(F)MANCHON (S)BUJE DE BOQUILLA				
	221-21504	. S S				1				
	[16]	(E)GUARD-VALVE BODY (D)KOTFLÜGEL				(F)GARDE (S)PROTECTOR				
	830-25102	. S S				1				
	[17]	(E)RETAINER (D)FEDERUNG				(F)RESSORT (S)RETENEDOR				
	830-21300	. S S				1				
	[18]	(E)NUT (D)MUTTER				(F)ECROU (S)TUERCA				
	1113-0304	. S S				1				
	[19]	(E)CLEVIS (D)KETTE				(F)CROCHET (S)ABRAZADERA EN U				
	1291-0226	. S S				1				
LEVEL					T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

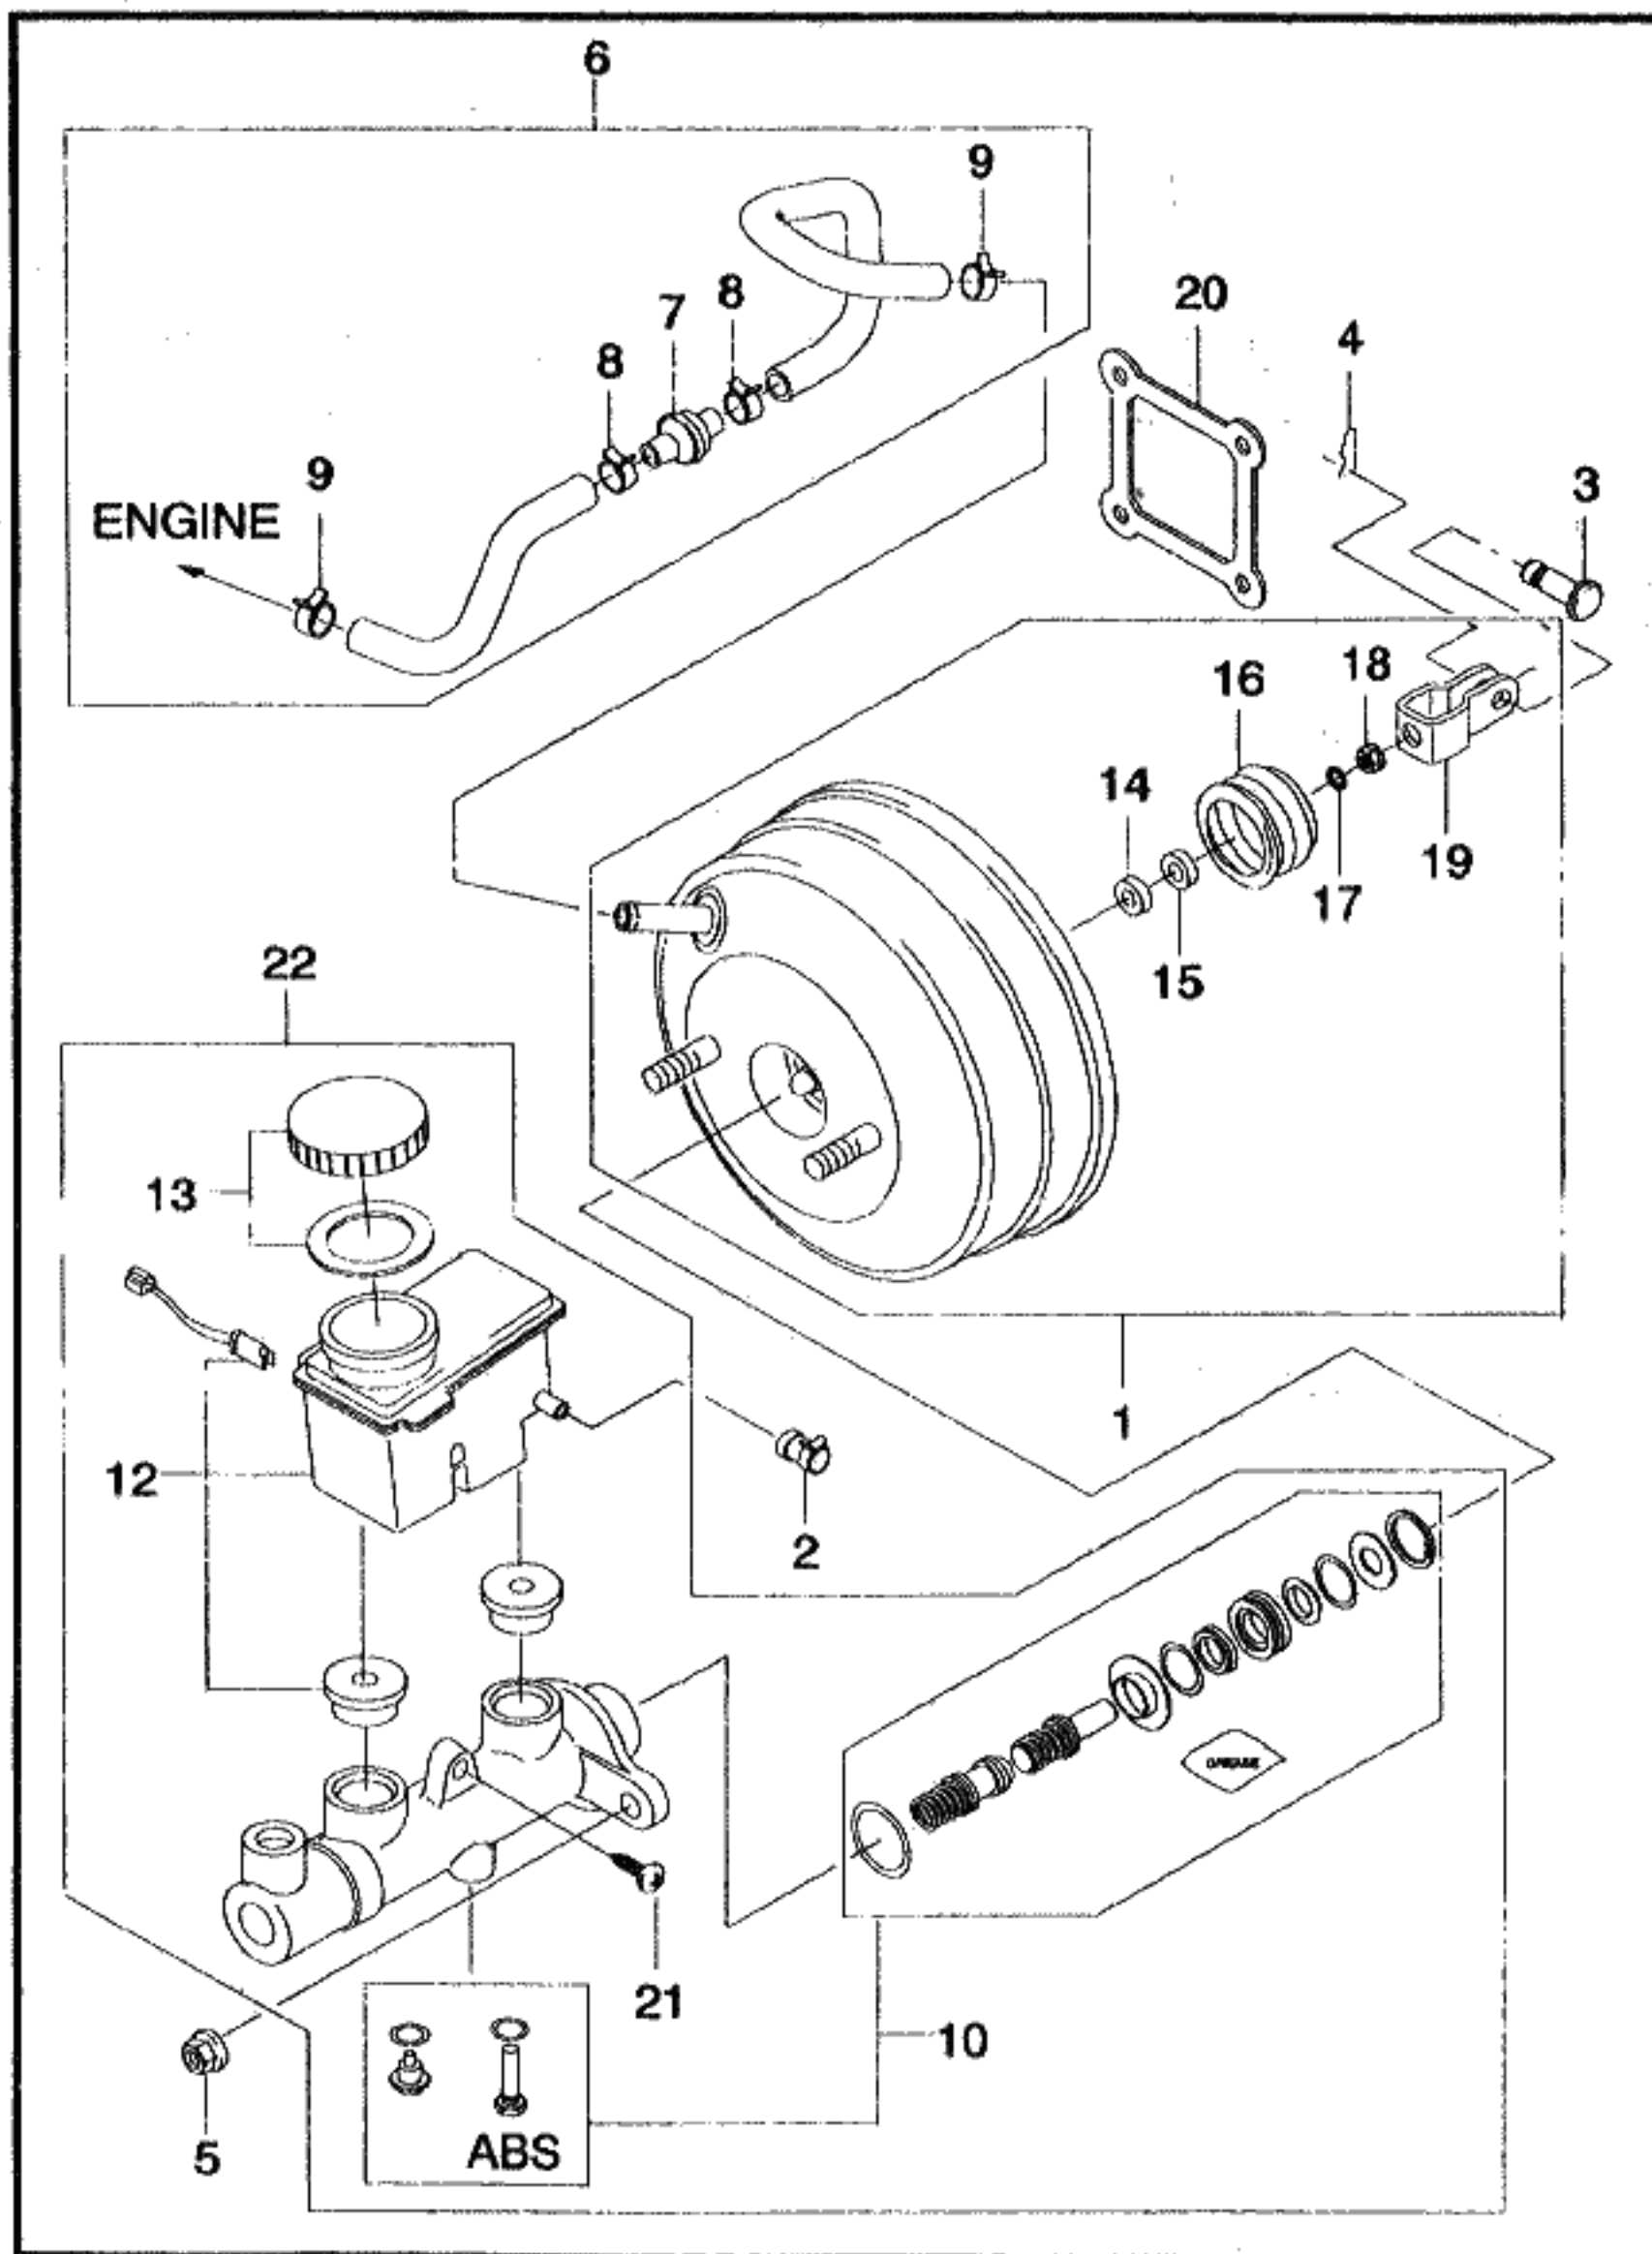


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20]	(E)GASKET (D)DICHTUNG				(F)JOINT (S)JUNTA					
	221-31332	.	S	S			1				
	[21]	(E)SCREW (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	820-21000	.	S	S			1				
	[22]	(E)CYLINDER A-MASTER BRAKE (D)ZYLINDER,HAUPT				(F)CYLINDRE-MAITRE (S)CILINDRO-MAESTRO					
	96245148	.	S	S			1				
	96245152	.	O	O	&JL9		1				
	96245156	.	.	O	&JTC		1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

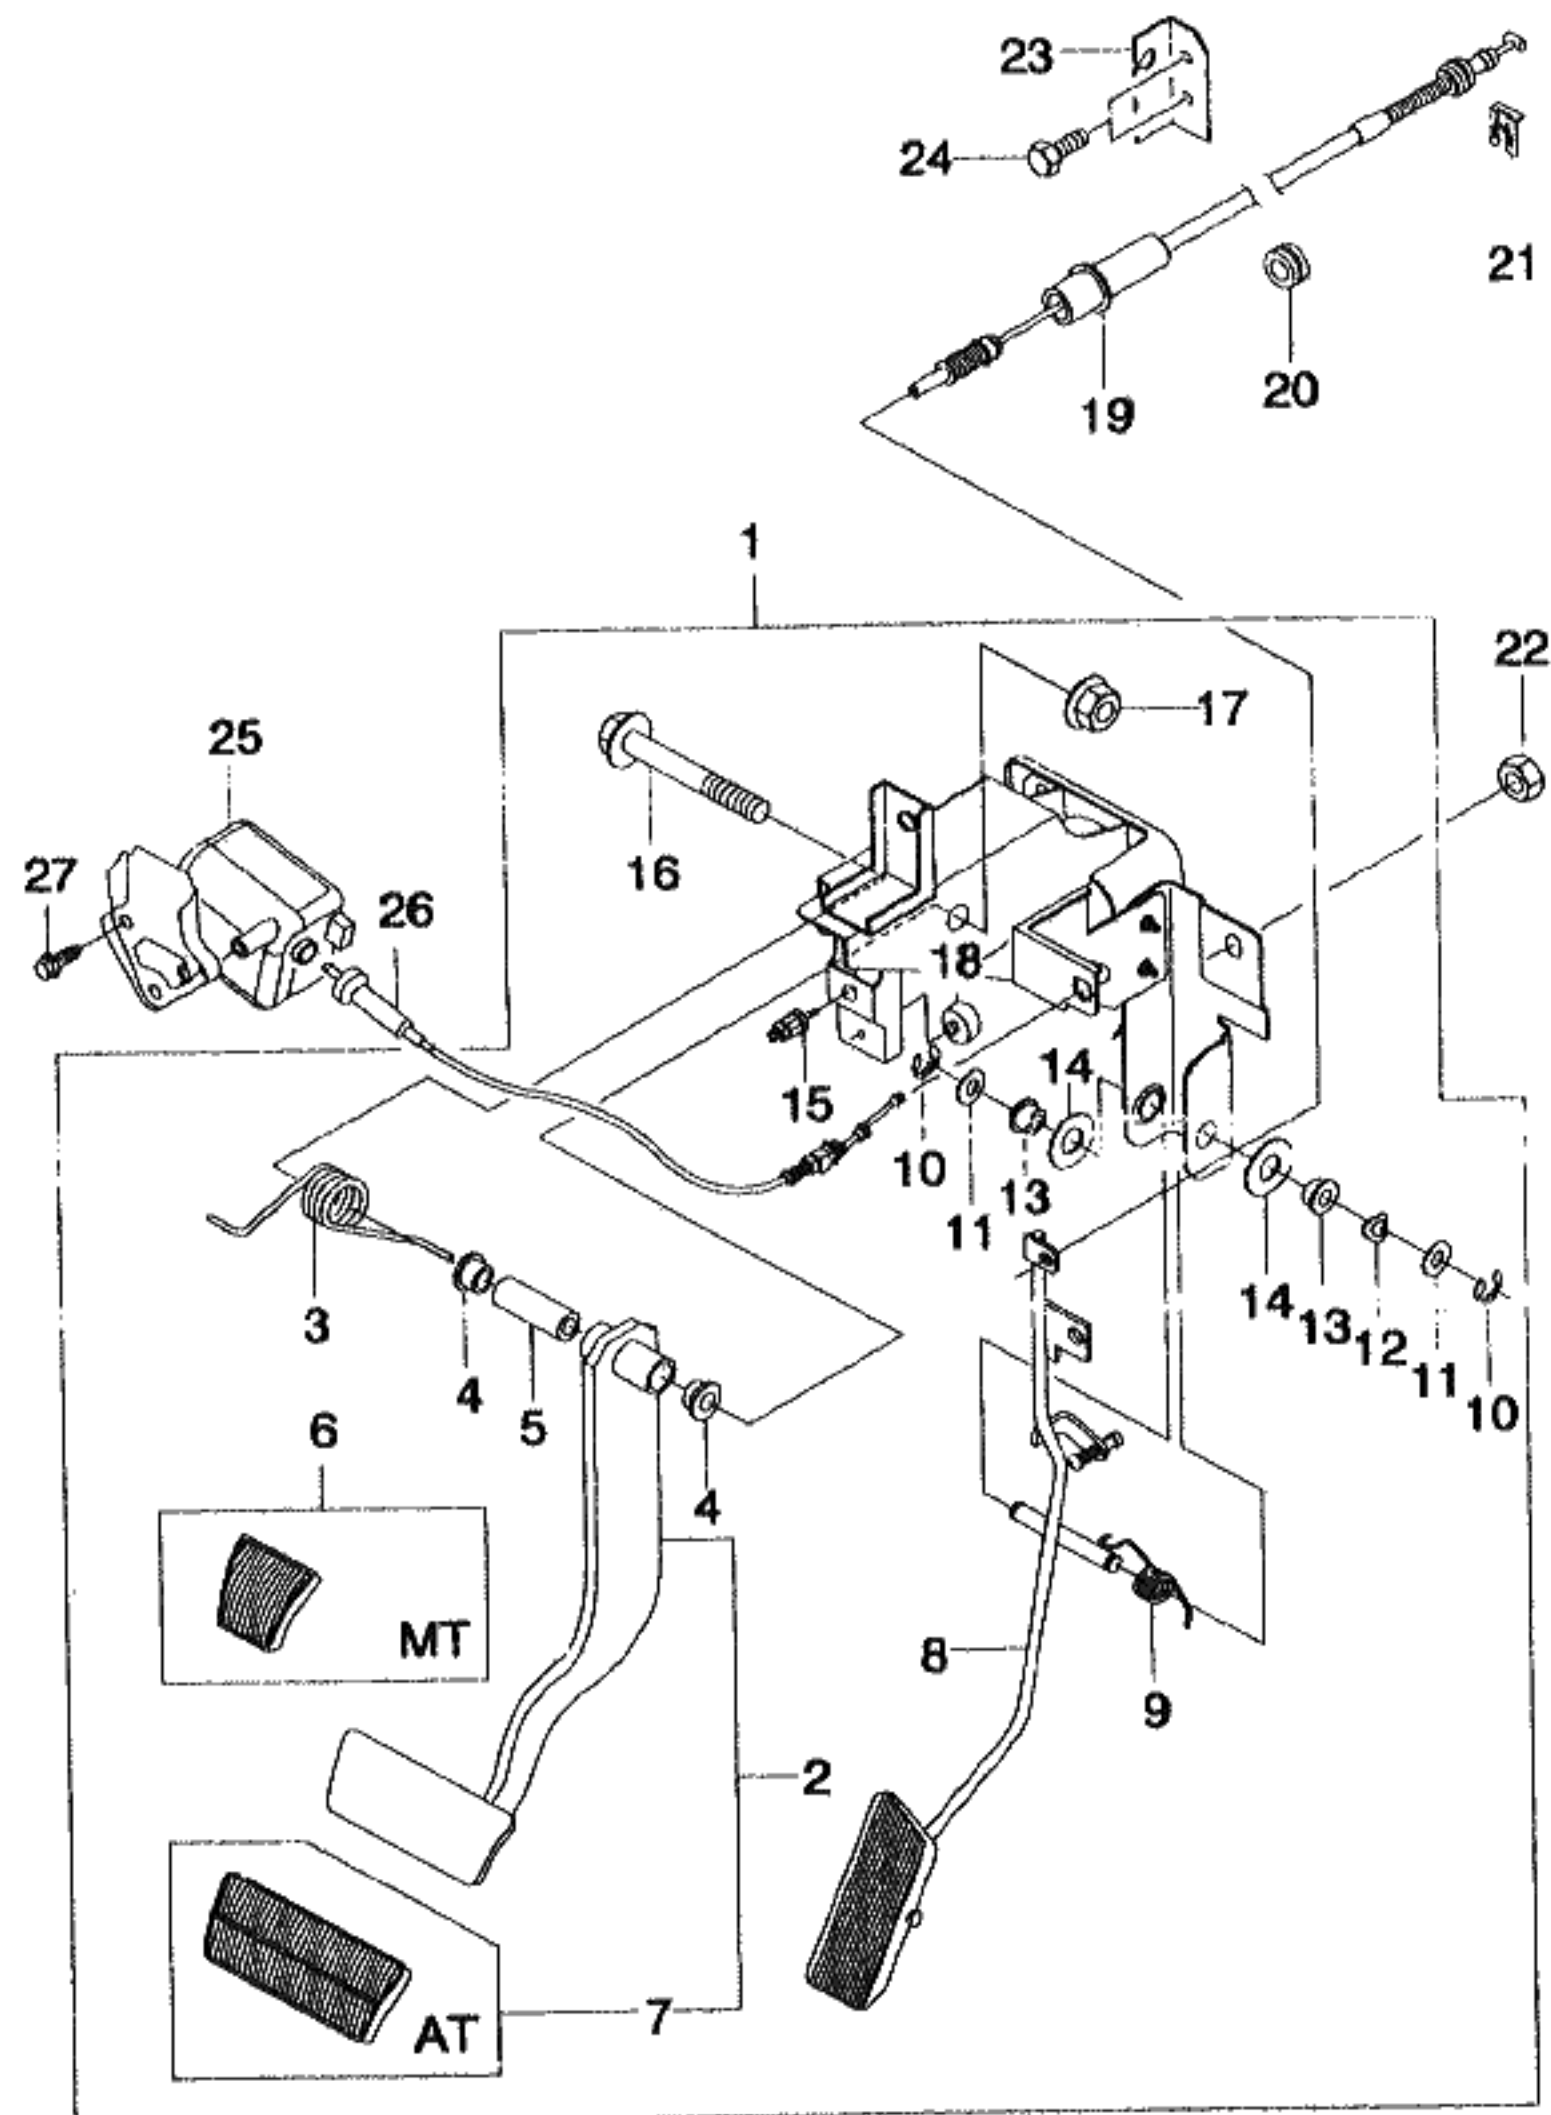



KEY NO.				PART NAME							
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)PEDAL A (D)MONTAGE,PEDAL				(F)MONTAGE-PEDALE (S)MONTAJE-PEDAL					
	96205959	M	S	S		1				L1	
	96232705	M	O	O	&K30	1				L2	
	96205960	A	O	O		1				L3	
	96232706	A	O	O	&K30	1				L4	
	[02]	(E)LEVER A-BRAKE PEDAL (D)HEBEL				(F)LEVIER (S)PALANCA					
	96218463	M	S	S		1					
	96218645	A	O	O		1					
	[03]	(E)SPRING (D)FEDERUNG				(F)RESSORT (S)RESORTE					
	09448-29001	.	S	S		1					
	[04]	(E)BUSH (D)LAGERFUTTER				(F)MANCHON (S)BUJE					
	09306-15001	.	S	S		2					
	[05]	(E)COLLAR-BRAKE PEDAL (D)KRAGEN				(F)COLLIER (S)CASQUILLO					
	96239091	.	S	S		1					
	[06]	(E)COVER-PEDAL PLATE (D)UNTERLAGE				(F)PATIN (S)COJIN					
	90105172	M	S	S		1					
	[07]	(E)COVER-PEDAL PLATE (D)UNTERLAGE				(F)PATIN (S)COJIN					
	94807433	A	O	O		1					
	[08]	(E)LEVER A-PEDAL ACCEL CONT (D)HEBEL,GASPEDAL				(F)LEVIER (S)PALANCA					
	96352532	.	S	S		1					
	96184179	.	O	O	&K30	1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

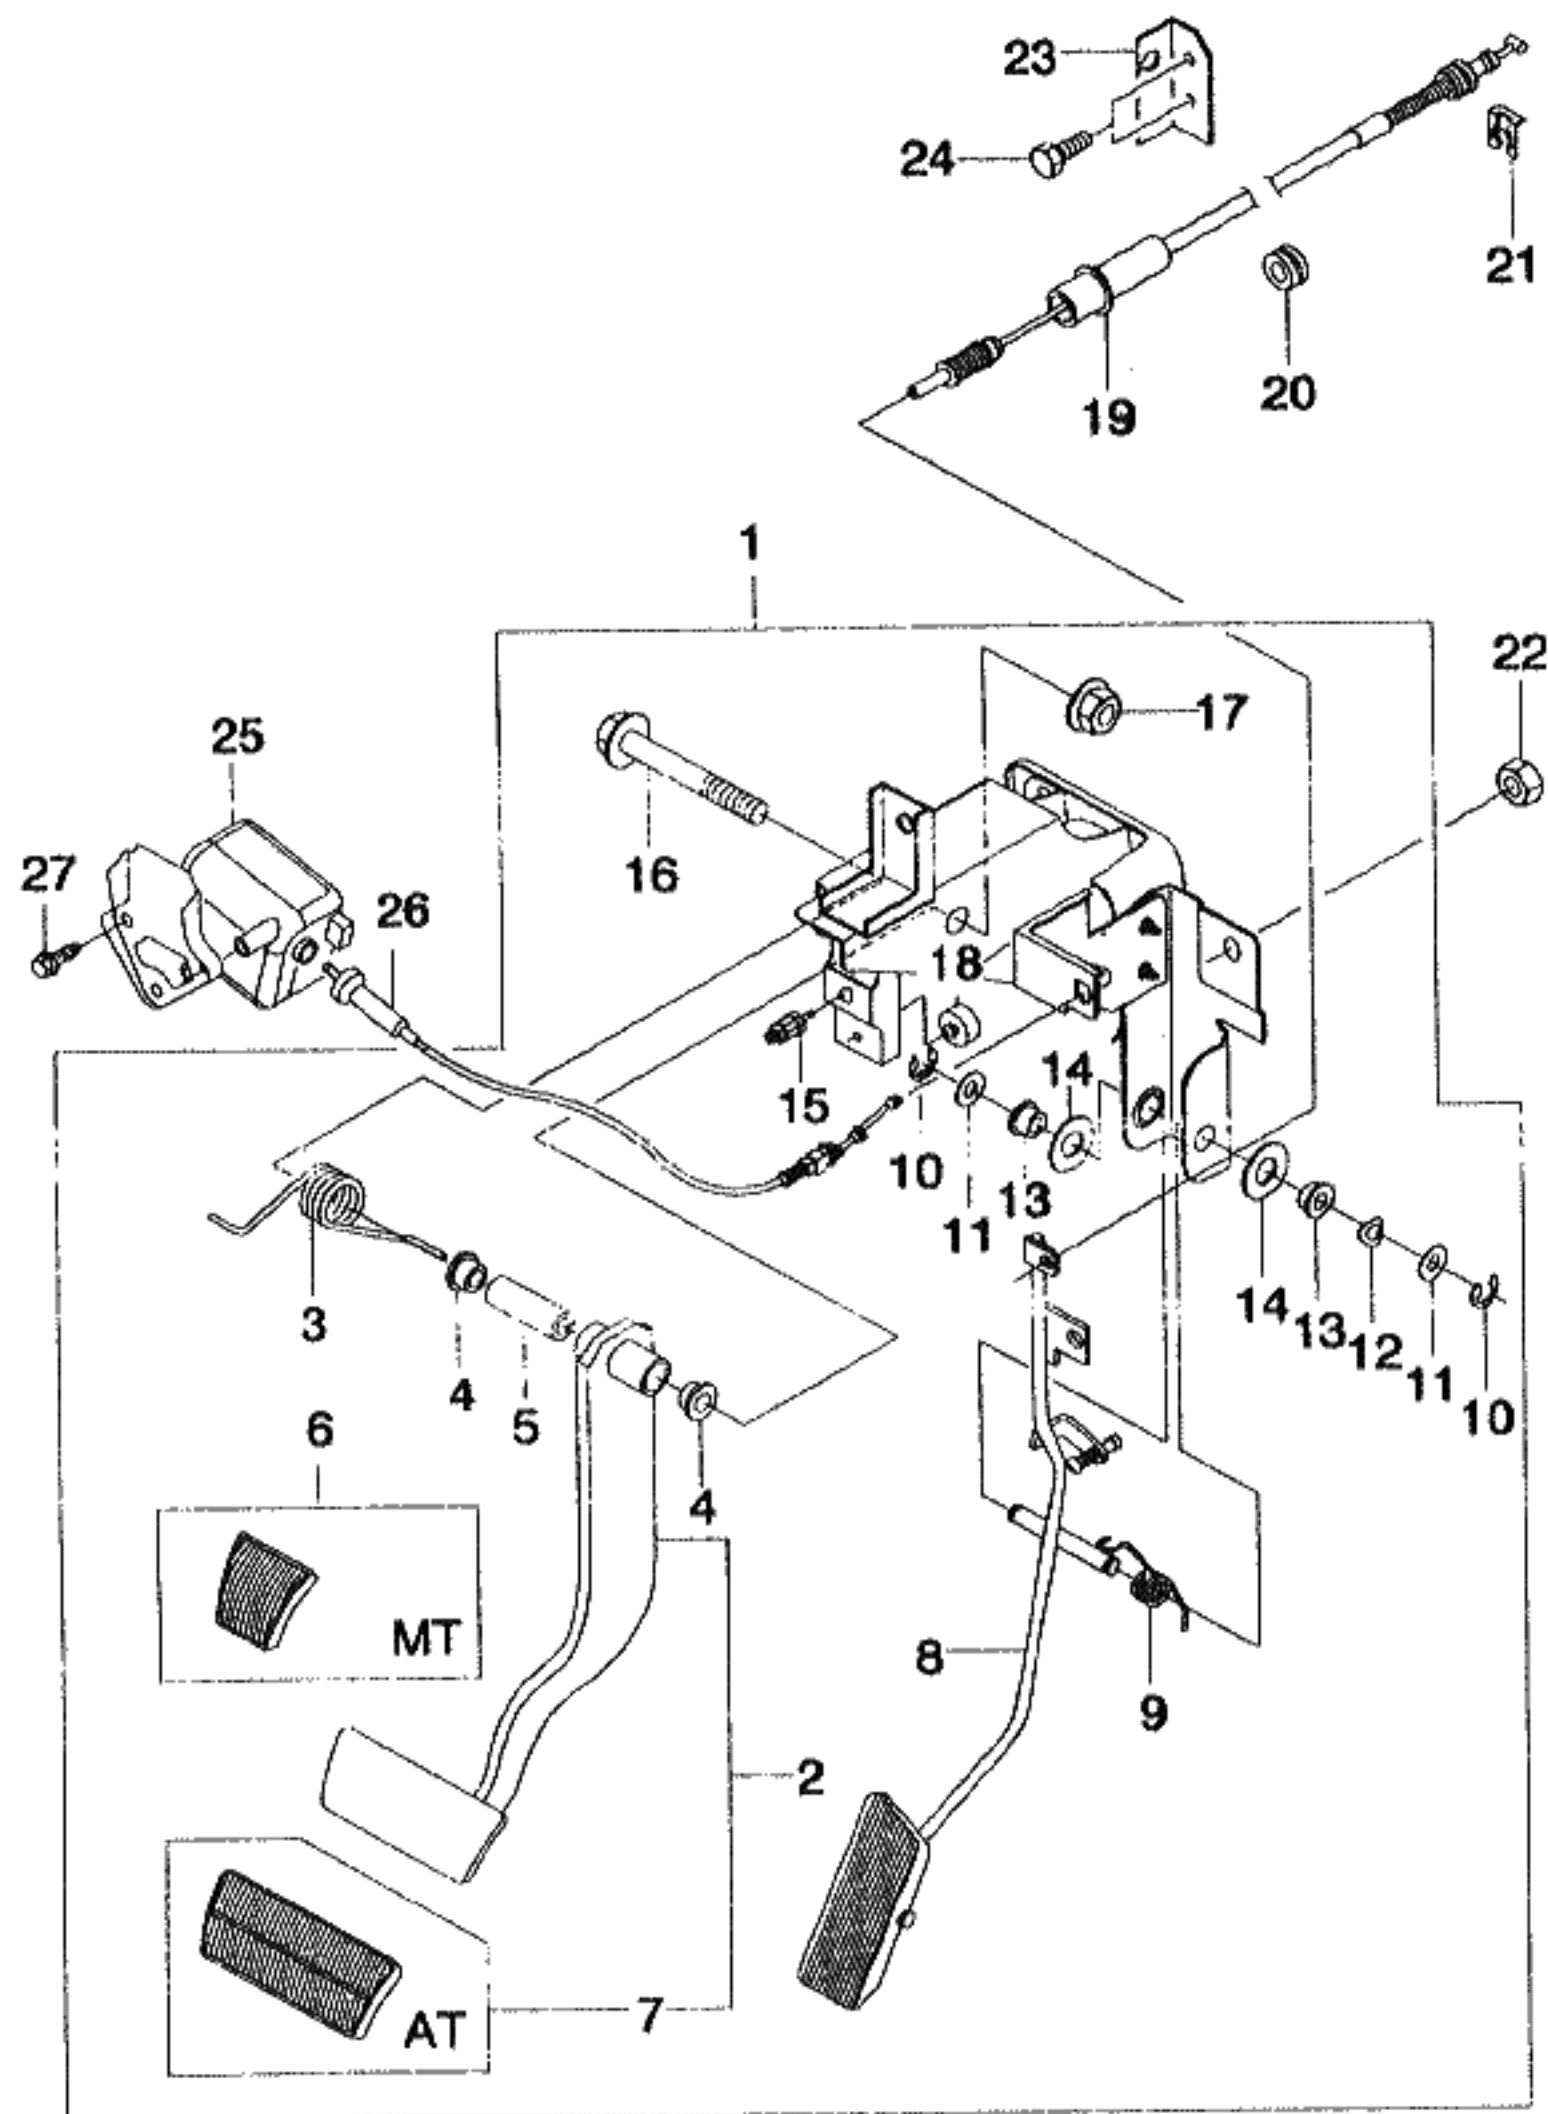

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[09] 09448-16002	(E)SPRING (D)FEDERUNG	S	S			(F)RESSORT (S)RESORTE				
	[10] 11066361	(E)WASHER (D)DICHTUNGSRING	S	S			(F)RONDELLE (S)ARANDELA				
	[11] 09160-10003	(E)WASHER-PLAIN (D)DICHTUNGSRING	S	S			(F)RONDELLE (S)ARANDELA				
	[12] 09162-10001	(E)WASHER-SPRING (D)DICHTUNGSRING	S	S			(F)RONDELLE (S)ARANDELA				
	[13] 09306-10005	(E)BUSH (D)LAGERFUTTER	S	S			(F)MANCHON (S)BUJE				
	[14] 09160-18003	(E)WASHER-PLAIN (D)DICHTUNGSRING	S	S			(F)RONDELLE (S)ARANDELA				
	[15] 96212027 96206858S 96312343	(E)SWITCH A-STOP LAMP (D)SCHALTER, STOP-LAMPE	M A .	S O O	S O O &K30		(F)COMMUTATEUR-LAMPE (S)INTERRUPTOR				
	[16] 01510-10659	(E)BOLT-FLANGE (D)SCHRAUBE	S	S			(F)BOULON (S)PERNO				
	[17] 08316-18103	(E)NUT-FLANGE (D)MUTTER	S	S			(F)ECROU (S)TUERCA				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


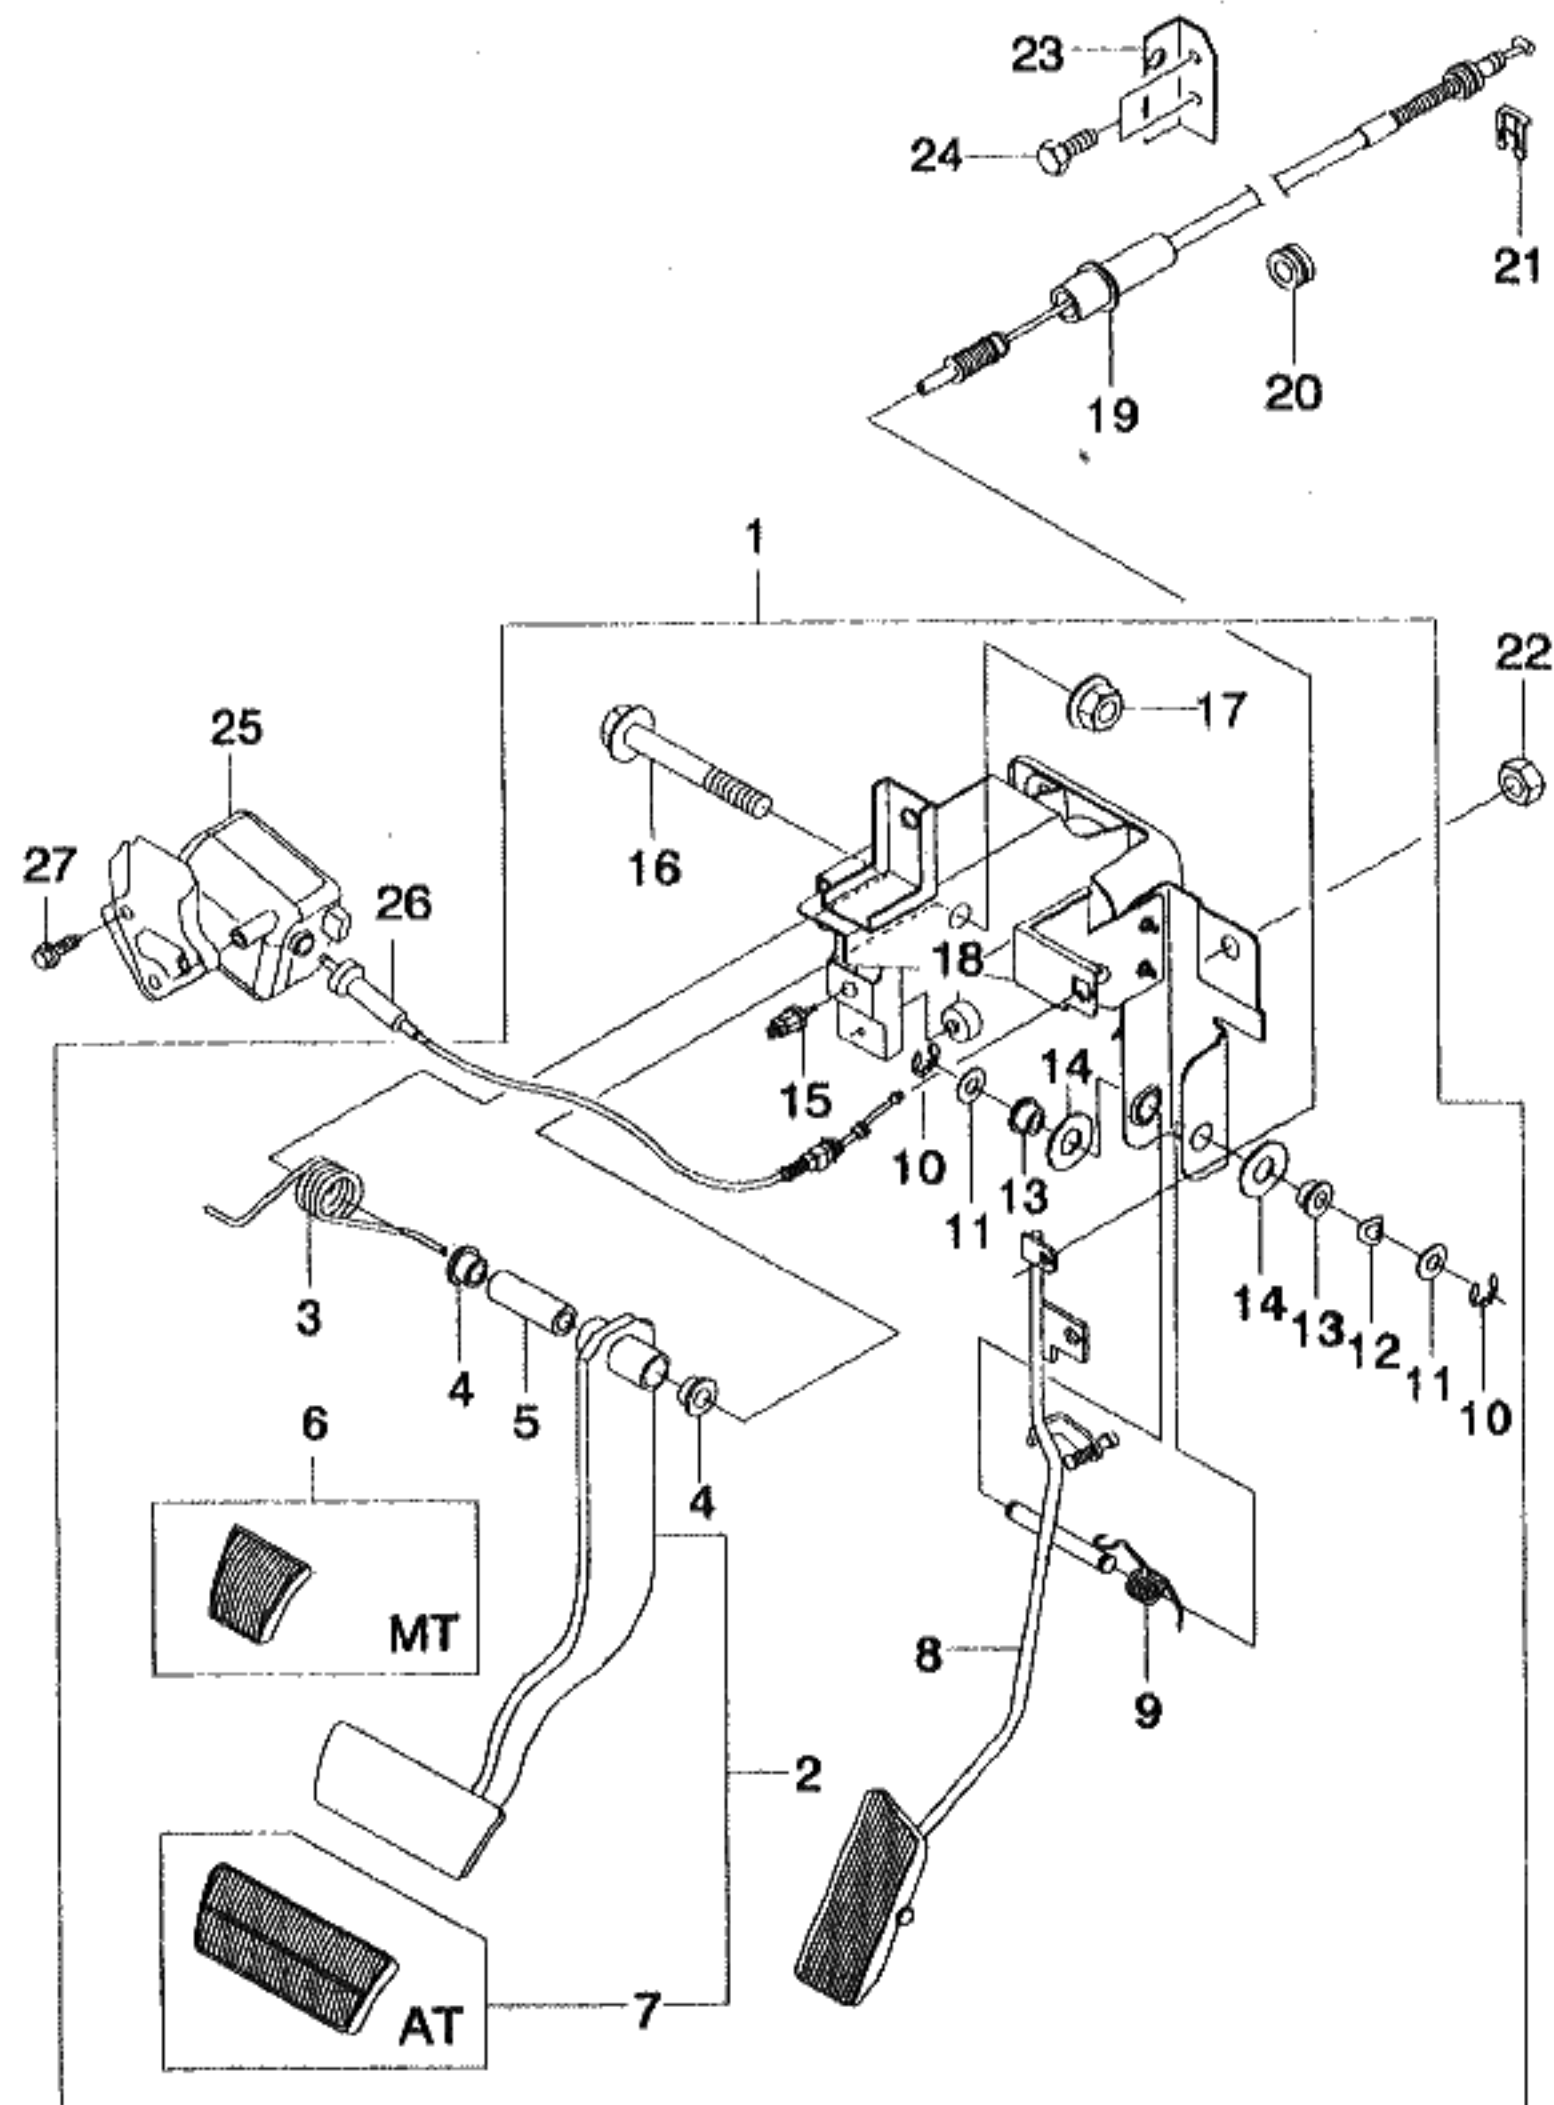


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[18] 08953614	(E)BUMPER (D)STOBSTANGE S S					(F)PARE-CHOC (S)PARACHOQUES 1				
	[19] 96184175 96351875 96184177	(E)CABLE A-BOWDEN,ACCEL CONT (D)KABEL,GAS-STEUERUNG S M O S &L88 A O O &L88					(F)CABLE- ACCELERATEUR (S)CABLE 1 1 1				VB VD VA
	[20] 09308-17002	(E)GROMMET (D)ÖSE S S					(F)VIROLE (S)AISLANTE 1				
	[21] 09383-06001	(E)E RING (D)RING S S					(F)ANNEAU (S)ANILLO 1				
	[22] 08361-15083	(E)NUT-W/WASHER (D)MUTTER S S					(F)ECROU (S)TUERCA 6				
	[23] 96350106	(E)BRACKET-ACCEL CONTROL (D)TRÄGER,GASPEDAL S					(F)SUPPORT-ACCELERATEUR (S)SOPORTE 1				
	[24] 01140-06123	(E)BOLT-HEXAGON (D)SCHRAUBE S					(F)BOULON (S)PERNO 2				
	[25] 96206991	(E)ACTUATOR A-CRUISE CONTROL (D)BETÄTIGUNG O O &K30					(F)ACTIONNEUR (S)ACTUADOR LH 1				VA
	[26] 96206992	(E)CABLE A-CRUISE CONTROL (D)VERDRAHTUNG O O &K30					(F)CABLES (S)ALAMBRE 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

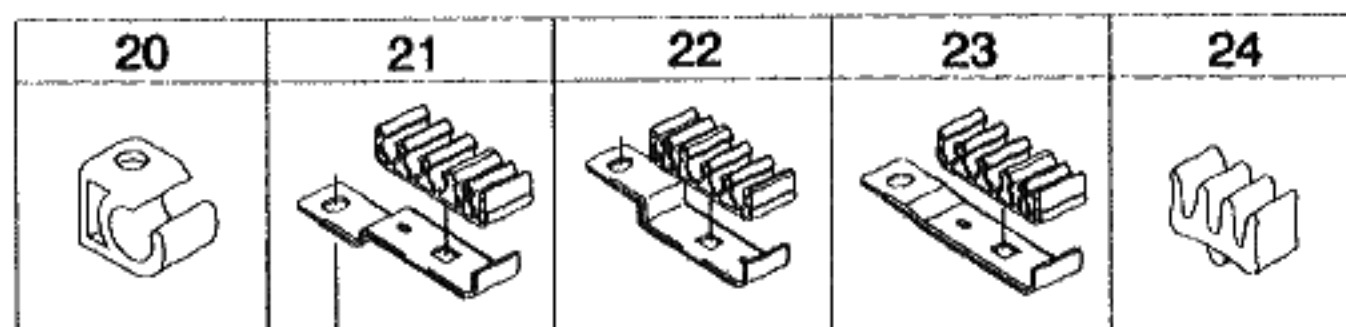
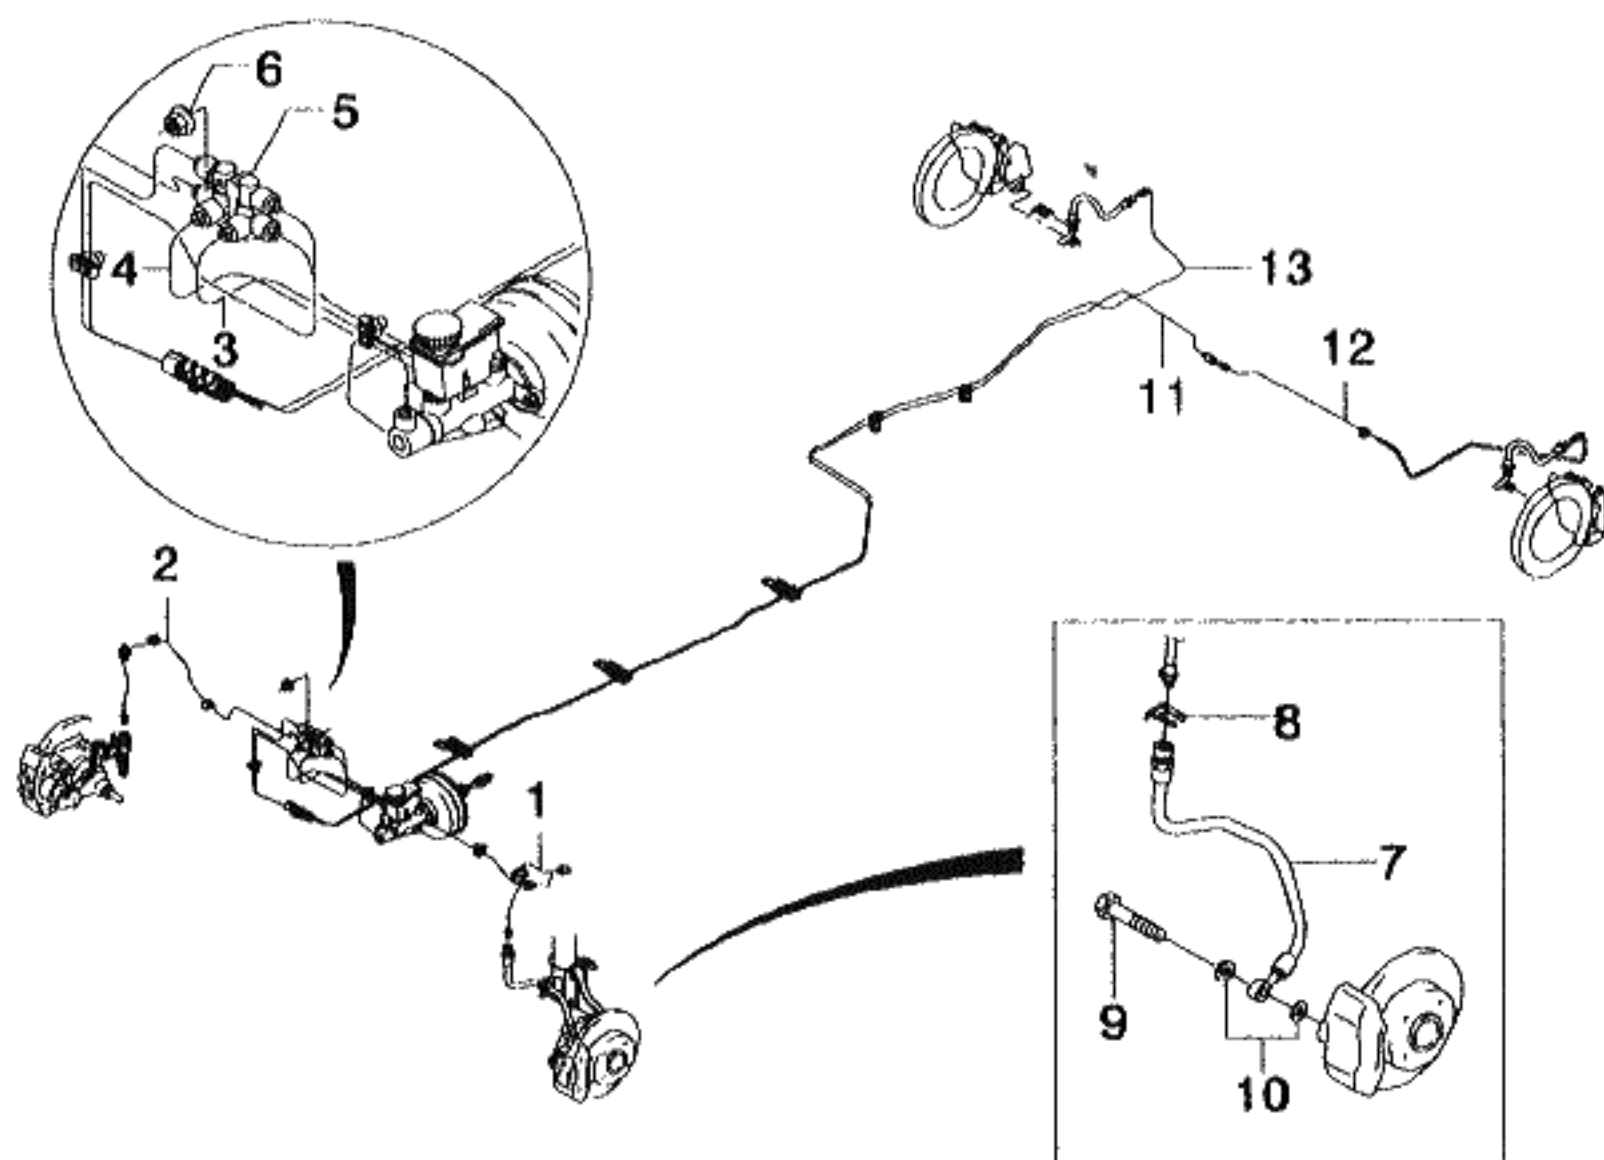


25

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96220628	(E)PIPE A-BRAKE,FR (D)ROHR,BREMSE,VORDERE	S	S			(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO			LH 1	
	[02] 96220630	(E)PIPE A-BRAKE,FR (D)ROHR,BREMSE,VORDERE	S	S			(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO			RH 1	
	[03] 96220624	(E)PIPE A-BRAKE 1ST (D)ROHR-BREMSE	S	S			(F)TUYAU-FREIN (S)TUBERIA-FRENO			1	
	[04] 96220626	(E)PIPE A-BRAKE 2ND (D)TUBERIA-FRENO	S	S			(F)ROHR,BREMSE (S)TUBERIA-FRENO			1	
	[05] 96168725	(E)VALVE-PROPORTIONING (D)VENTIL,PROPORTIONS	S	S			(F)SOUPAPE-PROPORTION (S)VALVULA-PROPORCIONAL			1	
	[06] 09159-08014 Y 08361-15083	(E)NUT (D)MUTTER	S	S			(F)ECROU (S)TUERCA			1 970803 1 970804	
	[07] 96222050	(E)HOSE A-BRAKE,FR (D)SCHLAUCH,BREMSE,VORNE	S	S			(F)TUYAU-FREIN,AVANT (S)MANGUERA-FRENO,FRENTE			2	
	[08] 09383-12003	(E)E RING (D)RING	S	S			(F)ANNEAU (S)ANILLO			2	
	[09] 09360-10002	(E)BOLT-UNION (D)SCHRAUBE	S	S			(F)BOULON (S)PERNO			2	
	[10]	(E)WASHER-PLAIN (D)DICHTUNGSRING					(F)RONDELLE (S)ARANDELA				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

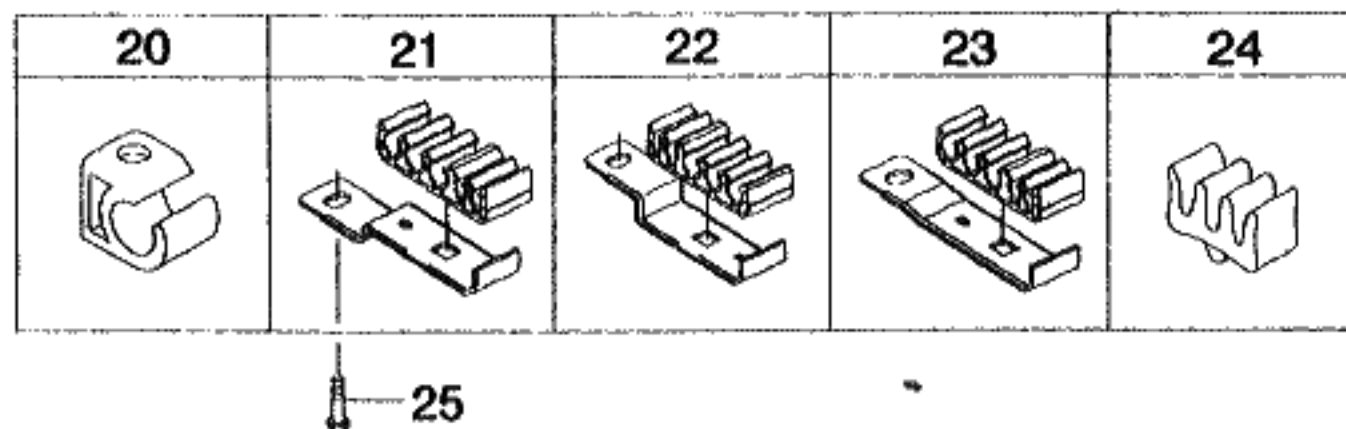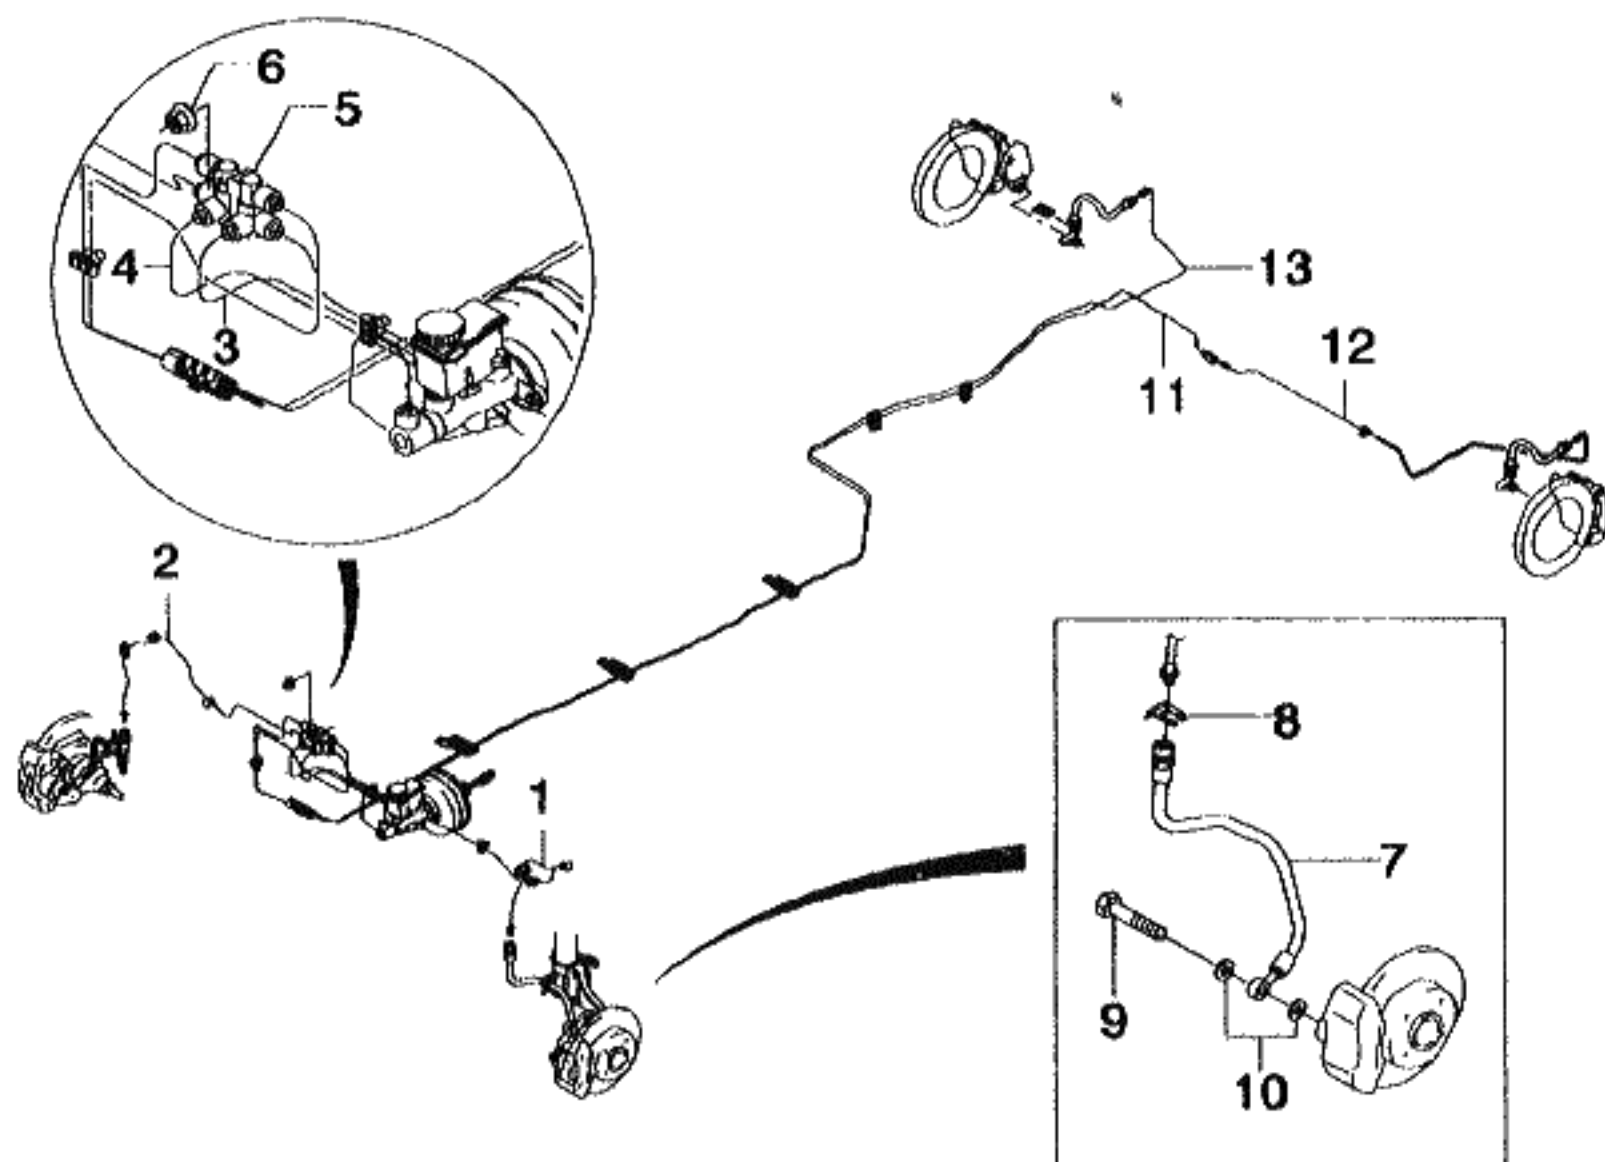



KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	09160-10002	.	S	S			4				
	[11]		(E)PIPE A-BRAKE,RR,1ST				(F)TUYAU-FREIN,ARRIERE				
			(D)ROHR,BREMSE,HINTERE				(S)TUBERIA-FRENO,TRASERO				
	96222090	.	S	S			LH 1				
	[12]		(E)PIPE A-BRAKE,RR,2ND				(F)TUYAU-FREIN,ARRIERE				
			(D)ROHR,BREMSE,HINTERE				(S)TUBERIA-FRENO,TRASERO				
	96222092	.	S	S			LH 1				
	[13]		(E)PIPE A-BRAKE,RR				(F)TUYAU-FREIN,ARRIERE				
			(D)ROHR,BREMSE,HINTERE				(S)TUBERIA-FRENO,TRASERO				
	96220622	.	S	S			RH 1				
	[20]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	09408-00005	.	S	S			2				
	[21]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	96219258	.	S	S			1				
	[22]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	96222076	.	S	S			1				
	[23]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	96222074	.	S	S			2				
	[24]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	09408-00007	.	S	S			4				
	[25]		(E)SCREW-MACHINE				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	09138-06027	.	S	S			4				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

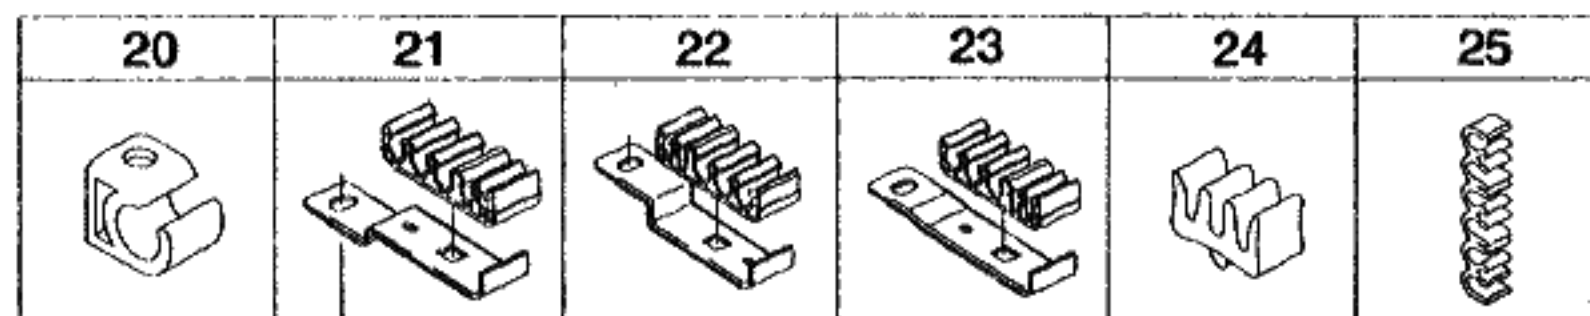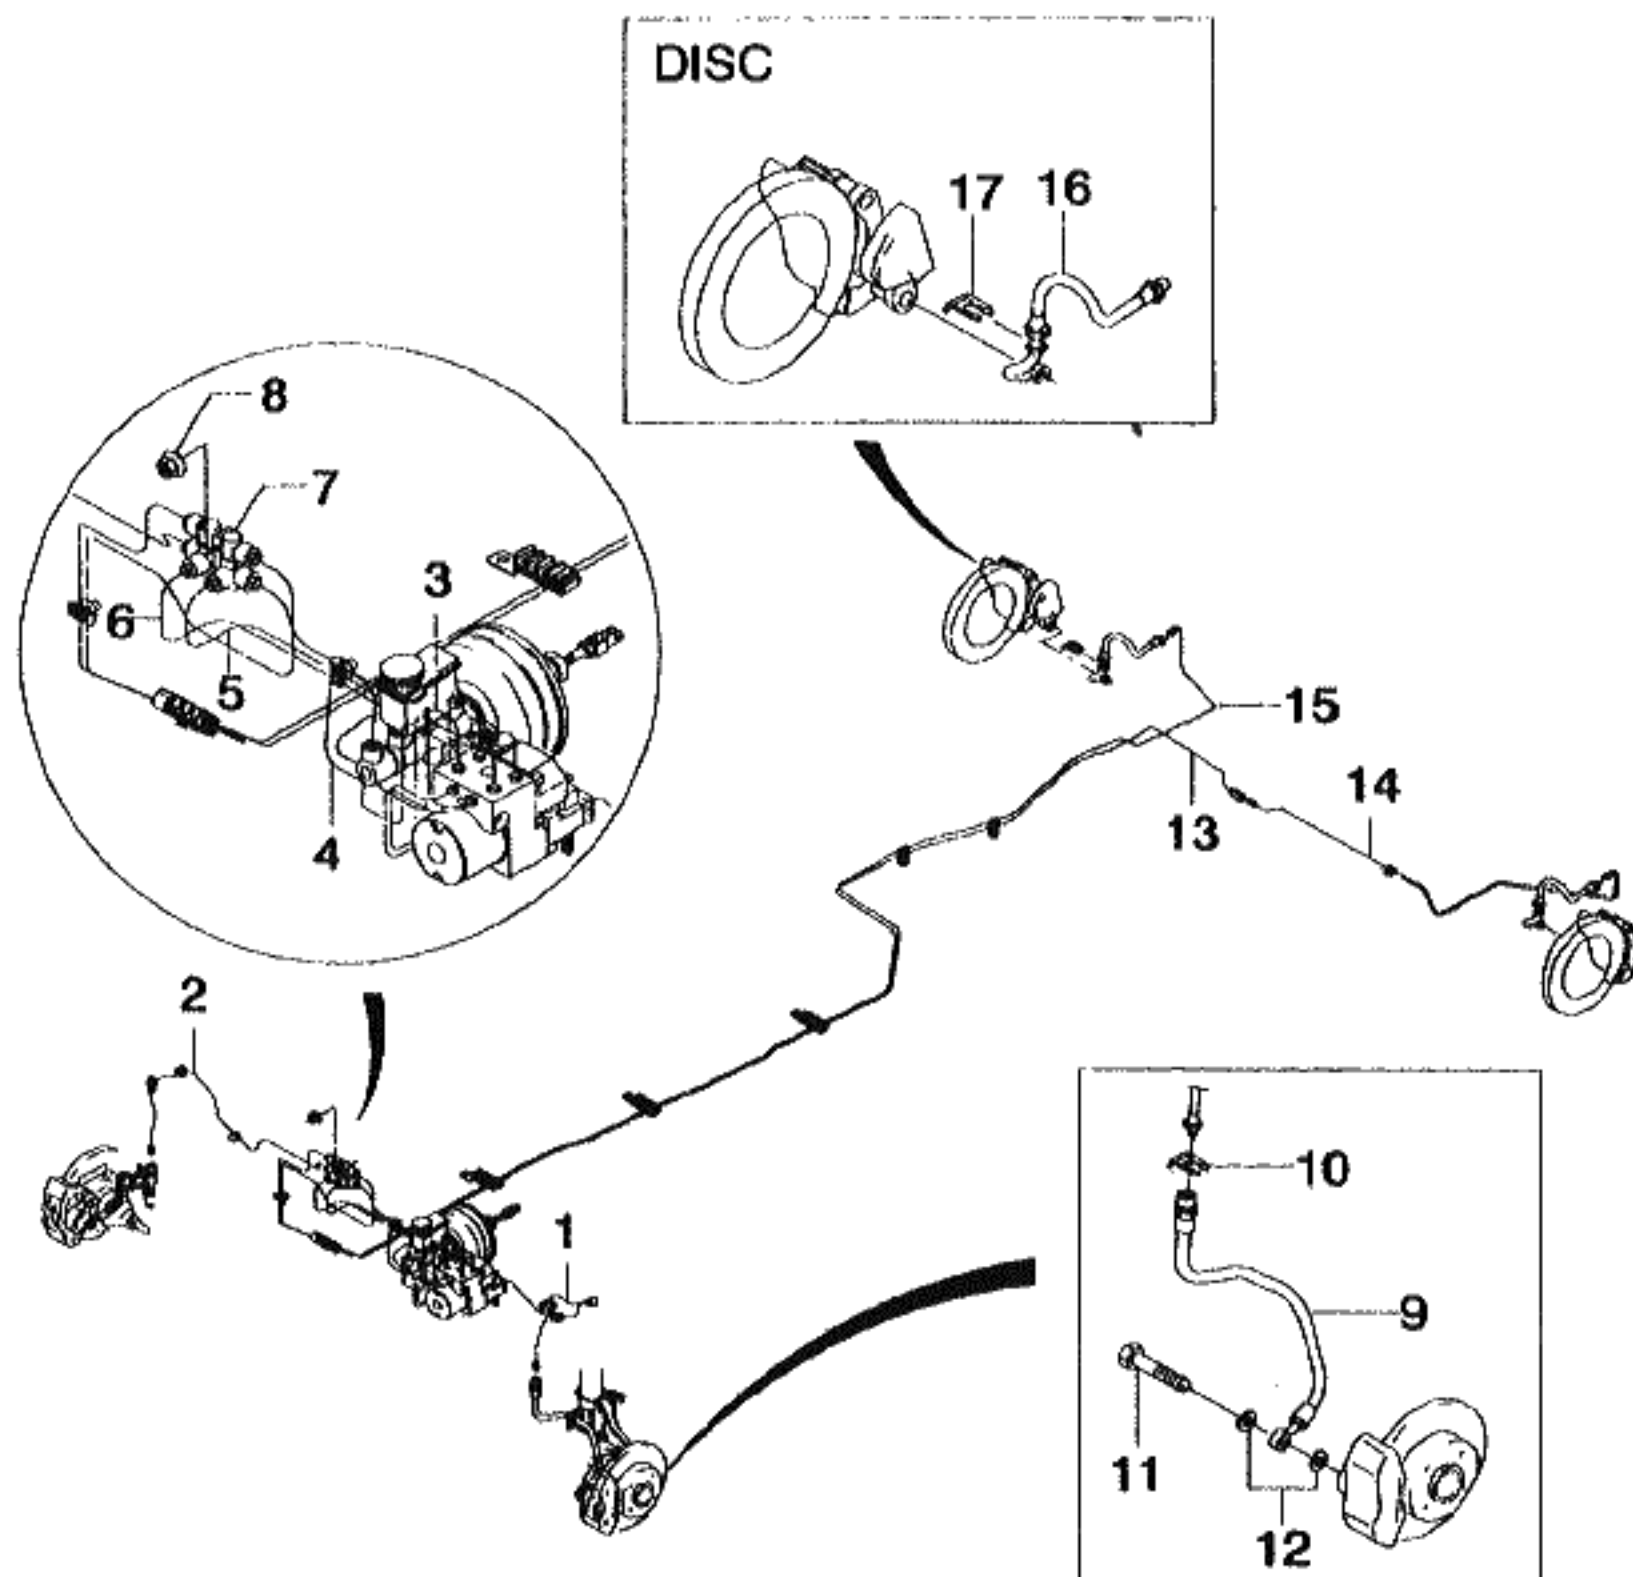

26


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 96220640	(E)PIPE A-BRAKE,FR (D)ROHR,BREMSE,VORDERE . O O &JL9/JTC				(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO LH 1					
	[02] 96220642	(E)PIPE A-BRAKE,FR (D)ROHR,BREMSE,VORDERE . O O &JL9/JTC				(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO RH 1					
	[03] 96220632 96222052	(E)PIPE A-BRAKE 1ST (D)ROHR-BREMSE,HAUPT . O O &JL9 . O &JTC				(F)TUYAU-FREIN,PRIMAIRE (S)TUBERIA-FRENO,PRIMARIA 1 1					
	[04] 96220634 96222054	(E)PIPE A-BRAKE 2ND (D)TUBERIA-FRENO . O O &JL9 . O &JTC				(F)ROHR,BREMSE (S)TUBERIA-FRENO 1 1					
	[05] 96220636	(E)PIPE A-BRAKE,PRIM 2 (D)ROHR-BREMSE,HAUPT . O O &JL9/JTC				(F)TUYAU-FREIN,PRIMAIRE (S)TUBERIA-FRENO,PRIMARIA 1					
	[06] 96220638	(E)PIPE A-BRAKE,SECD 2 (D)TUBERIA-FRENO . O O &JL9/JTC				(F)ROHR,BREMSE (S)TUBERIA-FRENO 1					
	[07] 96237440	(E)VALVE-PROPORTIONING (D)VENTIL,PROPORTIONS . O O &JL9/JTC				(F)SOUPAPE-PROPORTION (S)VALVULA-PROPORCIONAL 1					
	[08] 09159-08014 Y 08361-15083	(E)NUT (D)MUTTER . S S . S S				(F)ECROU (S)TUERCA 1 970803 1 970804					
	[09] 96222050	(E)HOSE A-BRAKE,FR (D)SCHLAUCH,BREMSE,VORNE . S S				(F)TUYAU-FREIN,AVANT (S)MANGUERA-FRENO,FRENTE 2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

4651 BRAKE PIPE(ABS)

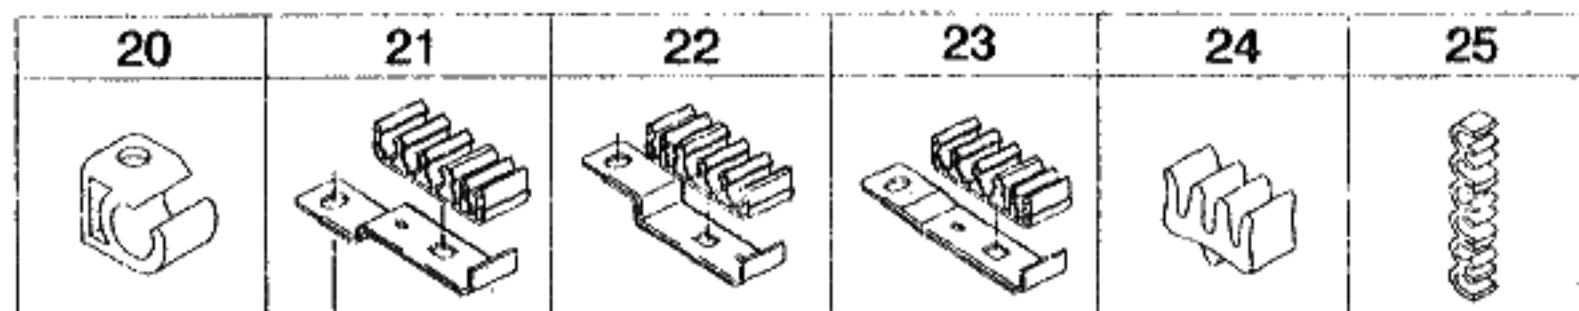
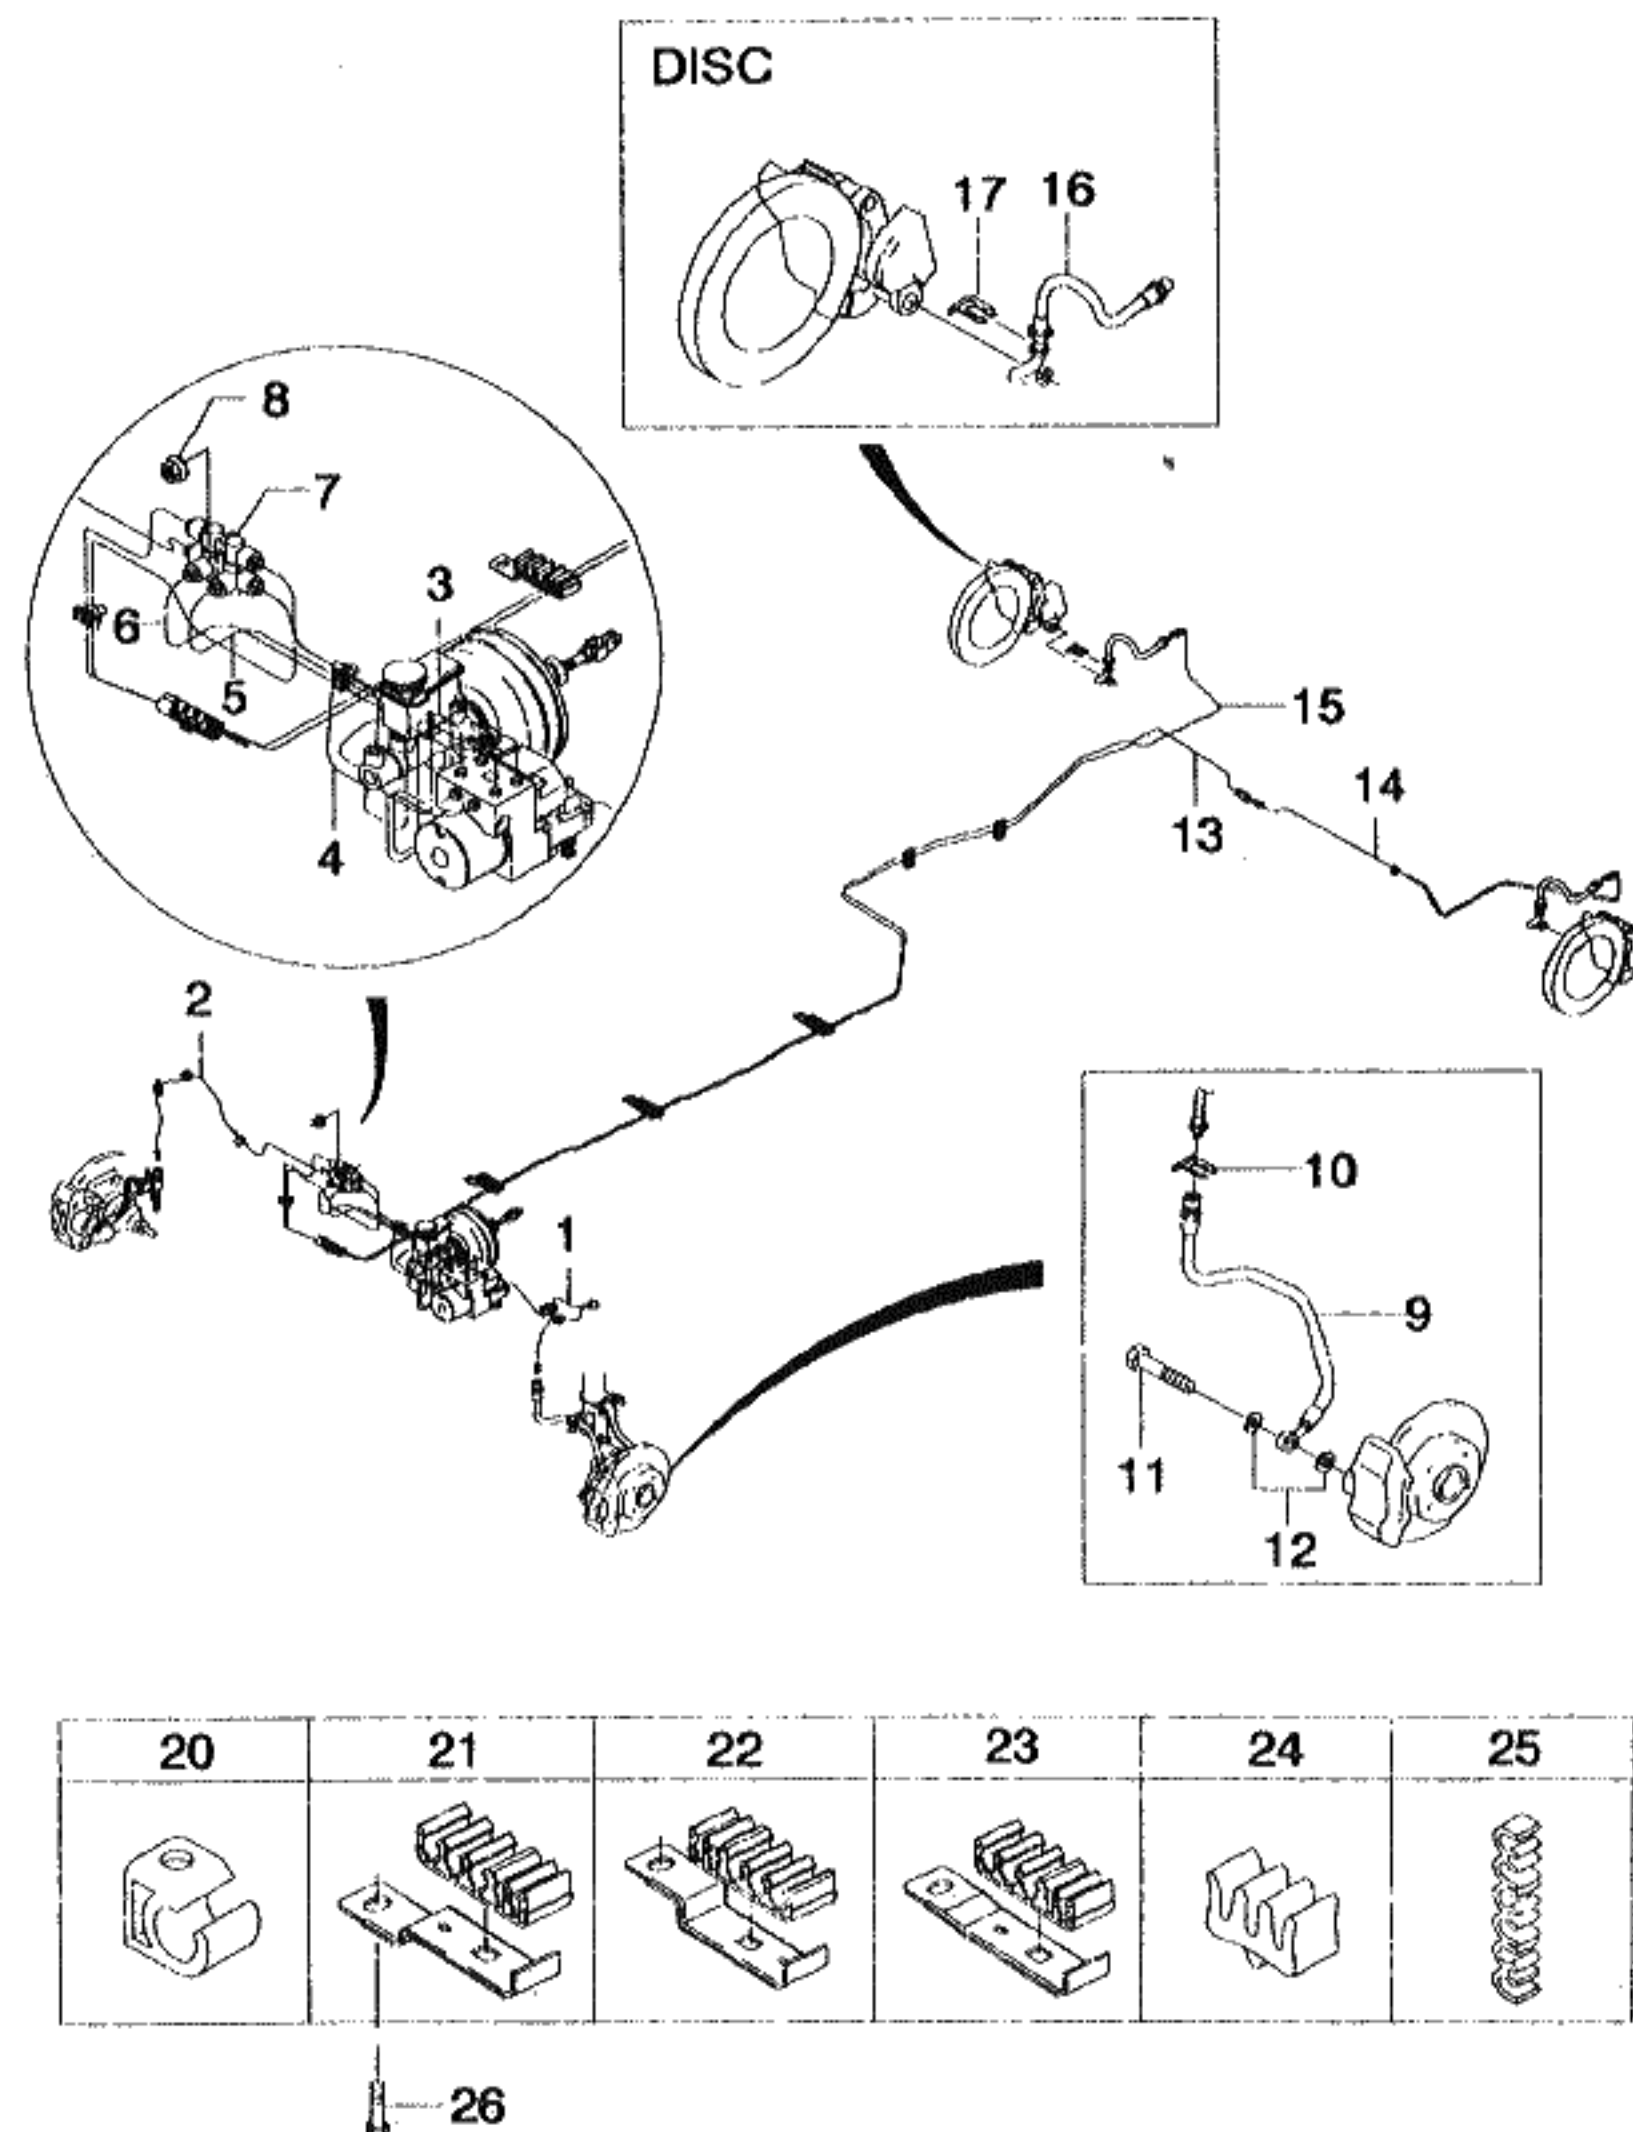


26

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10] 09383-12003	(E)E RING (D)RING . S S					(F)ANNEAU (S)ANILLO 4					
	[11] 09360-10003	(E)BOLT-UNION (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 2					
	[12] 09160-10002	(E)WASHER-PLAIN (D)DICHTUNGSRING . S S					(F)RONDELLE (S)ARANDELA 4					
	[13] 96222090	(E)PIPE A-BRAKE,RR,1ST (D)ROHR,BREMSE,HINTERE . S S					(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO LH 1					
	[14] 96222092	(E)PIPE A-BRAKE,RR,2ND (D)ROHR,BREMSE,HINTERE . S S					(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO LH 1					
	[15] 962220622	(E)PIPE A-BRAKE,RR (D)ROHR,BREMSE,HINTERE . S S					(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO RH 1					
	[16] 96222062 96222064	(E)HOSE A-BRAKE,RR SHORT (D)SCHLAUCH,BREMSE,HINTEN . S S . S S					(F)TUYAU-FREIN,ARRIERE (S)MANGUERA-FRENO,TRASERO LH 1 RH 1					
	[17] 09383-12003	(E)E RING (D)RING . S S					(F)ANNEAU (S)ANILLO 4					
	[20] 09408-00005	(E)CLIP (D)KLEMME . S S					(F)ATTACHE (S)GRAPA 2					
	[21]	(E)CLIP (D)KLEMME					(F)ATTACHE (S)GRAPA					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

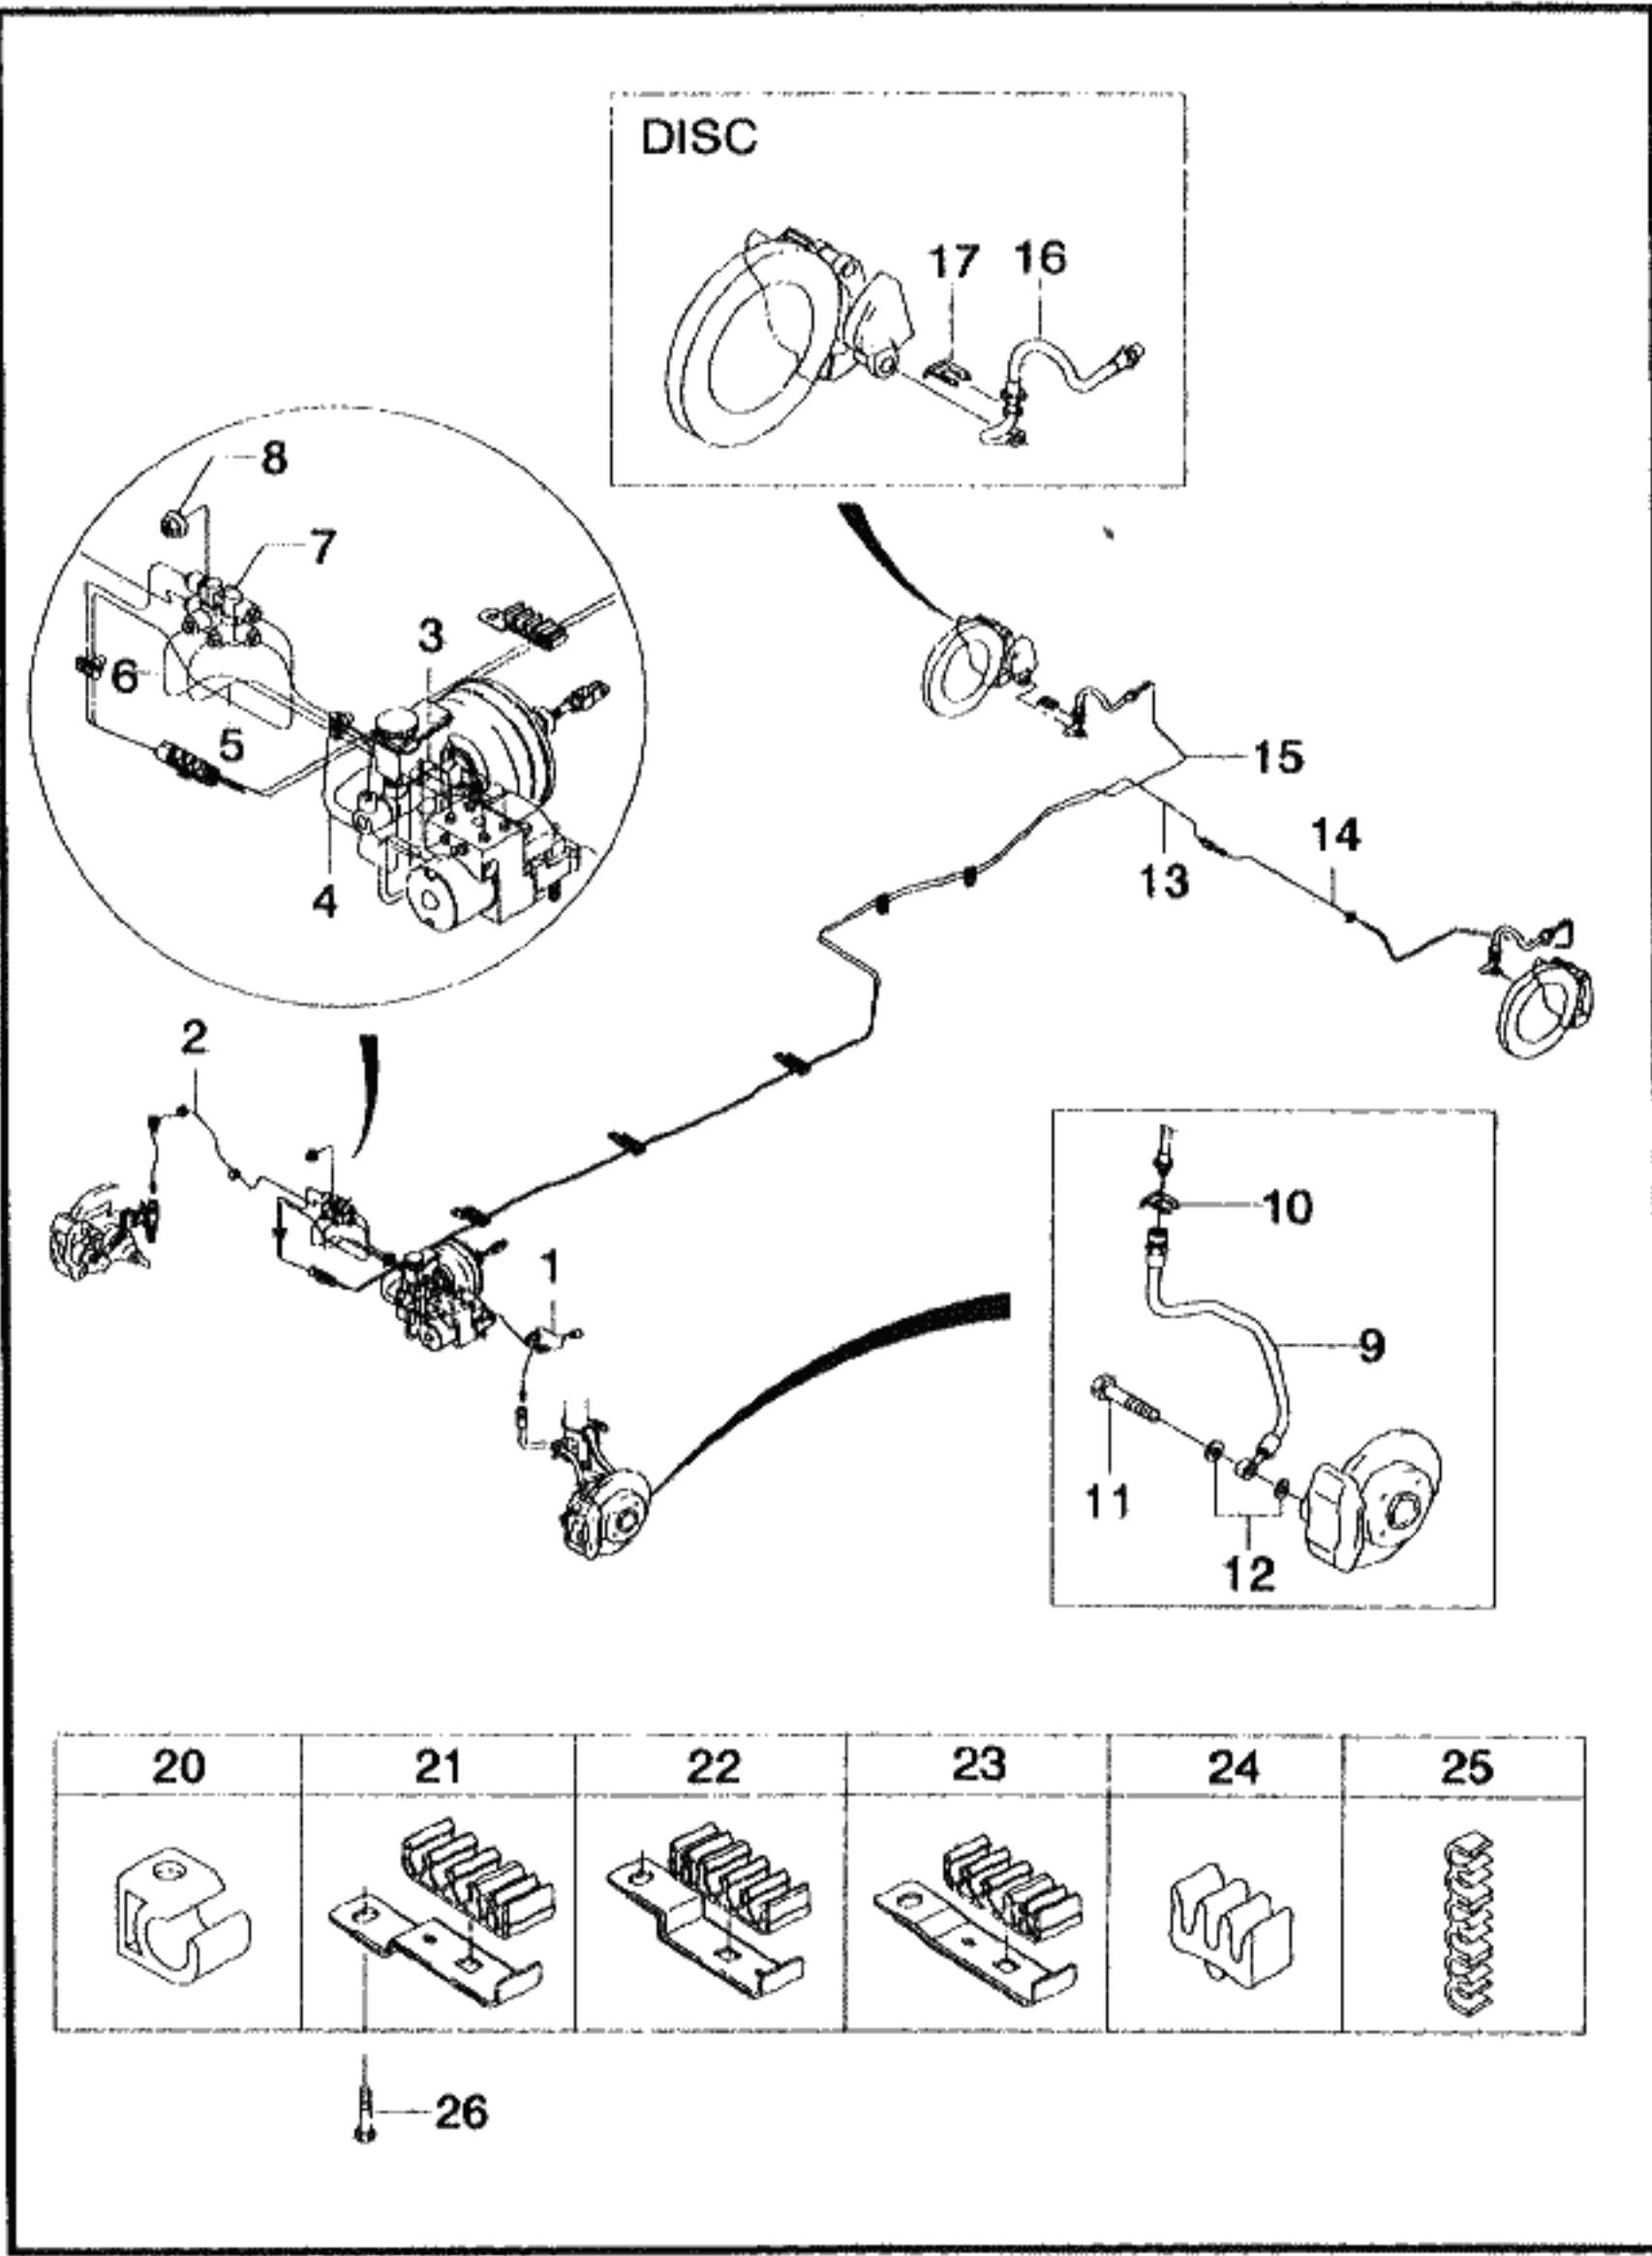


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96219258	.	S	S			1					
	[22]	(E)CLIP					(F)ATTACHE					
		(D)KLEMME					(S)GRAPA					
	96222076	.	S	S			1					
	[23]	(E)CLIP					(F)ATTACHE					
		(D)KLEMME					(S)GRAPA					
	96222074	.	S	S			2					
	[24]	(E)CLIP					(F)ATTACHE					
		(D)KLEMME					(S)GRAPA					
	09408-00007	.	S	S			4					
	[25]	(E)CLIP					(F)ATTACHE					
		(D)KLEMME					(S)GRAPA					
	09408-00051	.	O	O	&JL9/JTC		1					
	[26]	(E)SCREW-MACHINE					(F)VIS					
		(D)SCHRAUBE					(S)TORNILLO					
	09138-06027	.	S	S			4					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

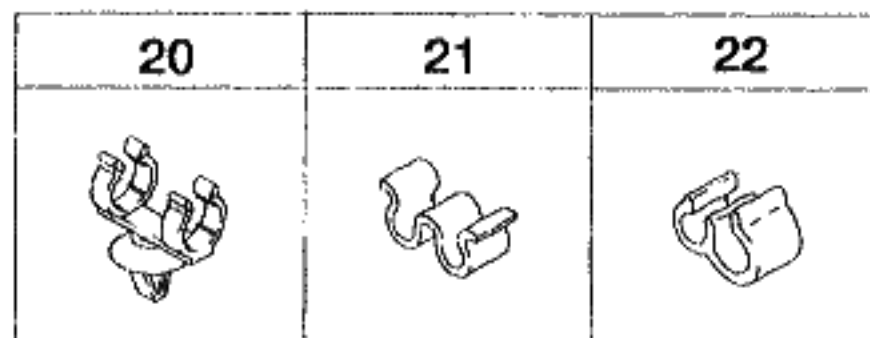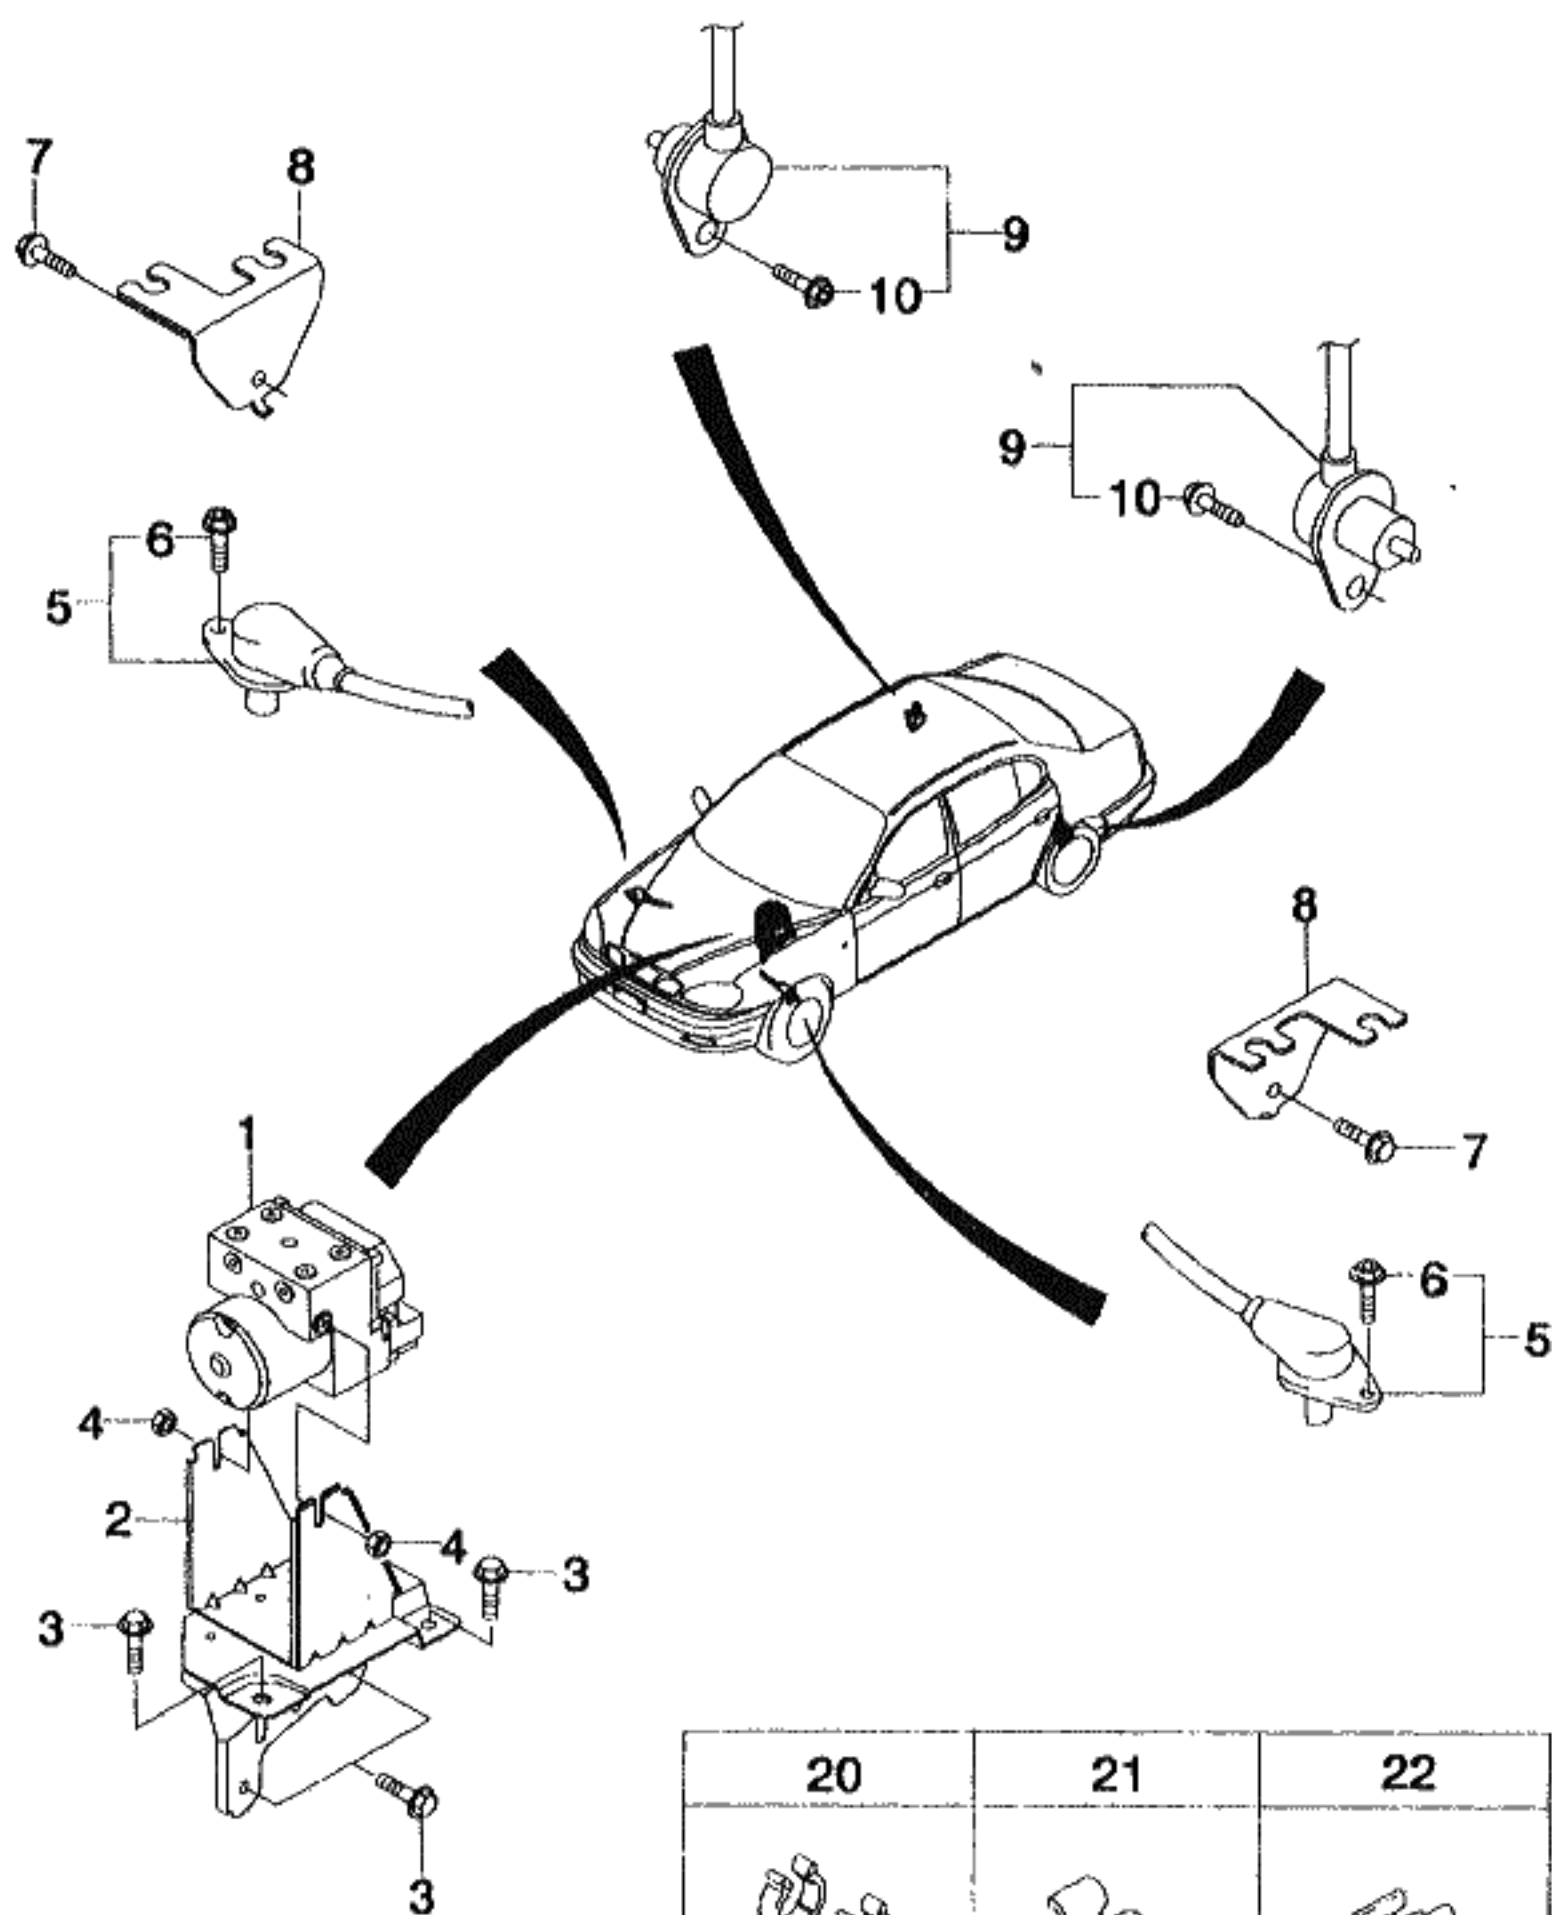


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)HYDRAULIC BRAKE CONTROL A (D)HYDRAULIK EINHEIT,BREMSE				(F)UNITE HYDRAULIQUE-FREIN (S)UNIDAD HIDRAULICA-FRENO					
	96205970	. O O	&JL9			1					VA
	96222078	. . O	&JTC			1					VT
	[02]	(E)BRACKET A-HYDRAULIC UNIT (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96222073	. O O	&JL9/JTC			1					
	[03]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	01197-08253	. O O	&JL9/JTC			4					
	[04]	(E)NUT-FLANGE (D)MUTTER				(F)ECROU (S)TUERCA					
	08316-28082	. O O	&JL9/JTC			2					
	[05]	(E)SENSOR A-WHL SPEED,FR (D)SENSOR,GESCHWINDIGKEIT				(F)DETECTEUR-VITESSE DE ROUE (S)SENSOR-VELOCIDAD DE RUEDA					
	96205922	. O O	&JL9/JTC			2					
	[06]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	07120-06163	. O O	&JL9/JTC			2					
	[07]	(E)SCREW-MACHINE (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	09138-06027	. O O	&JL9/JTC			2					
	[08]	(E)BRACKET-ABS SENSOR (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96222069	. O O	&JL9/JTC			LH 1					
	96222089	. O O	&JL9/JTC			RH 1					
	[09]	(E)SENSOR A-WHL SPEED,RR (D)SENSOR,GESCHWINDIGKEIT				(F)DETECTEUR-VITESSE DE ROUE (S)SENSOR-VELOCIDAD DE RUEDA					
	96205924	. O O	&JL9/JTC			2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

4710 ANTI LOCK BRAKE SYSTEM


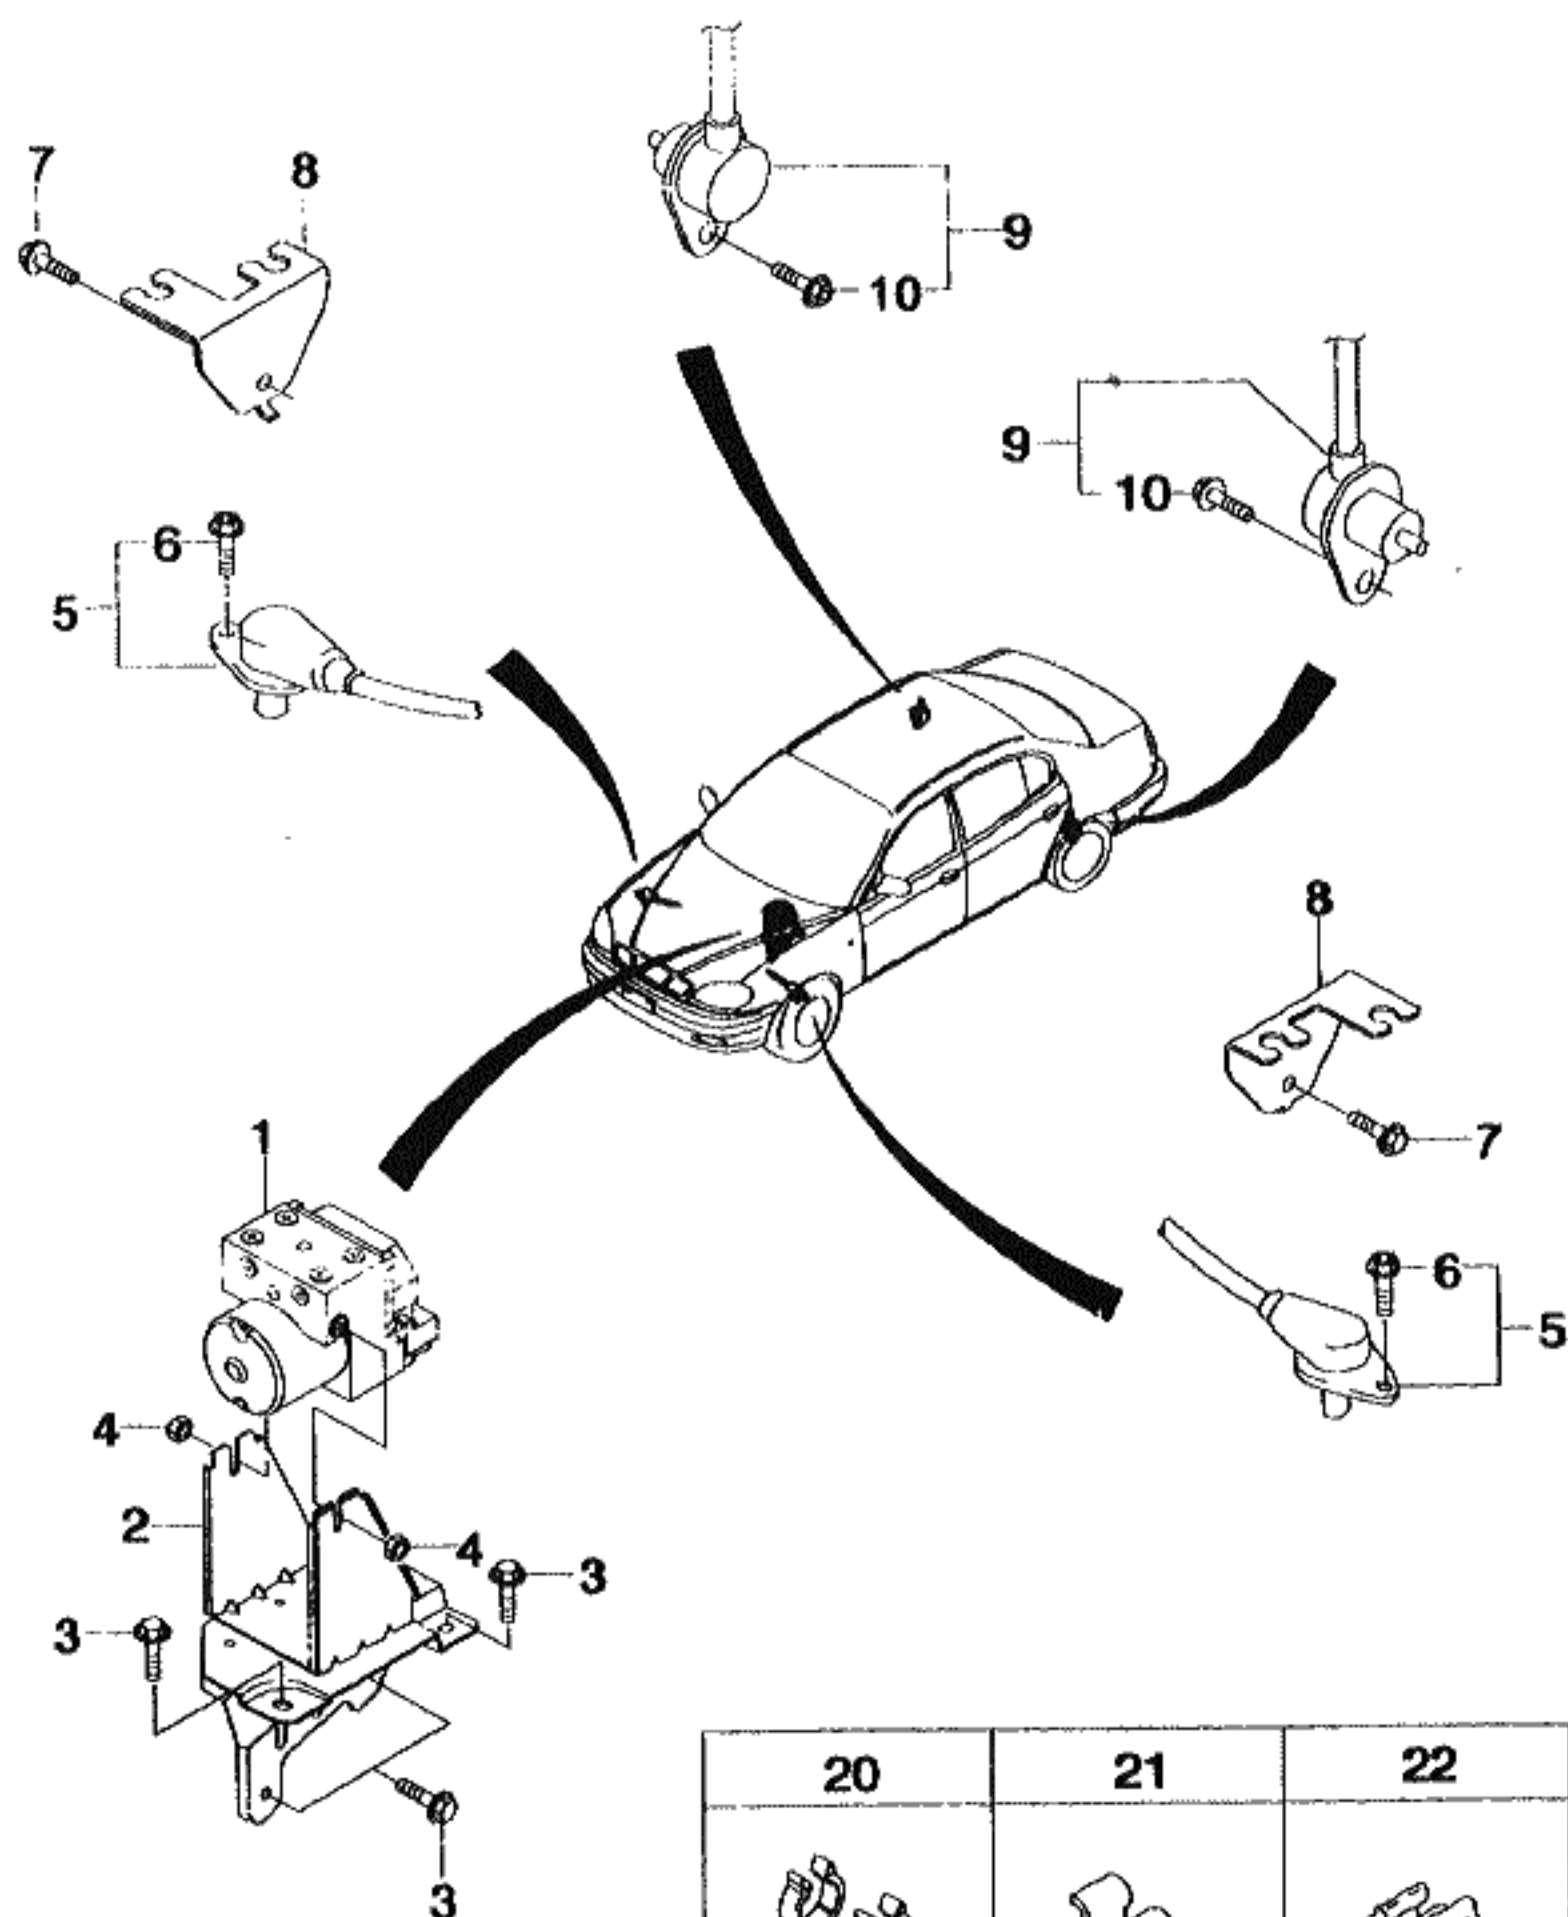


20	21	22

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 07120-06163	(E)BOLT-HEXAGON (D)SCHRAUBE . O O &JL9/JTC					(F)BOULON (S)PERNO 2				
	[20] 09408-00064	(E)CLIP (D)KLEMME . O O &JL9/JTC					(F)ATTACHE (S)GRAPA 2				
	[21] 09408-00052	(E)CLIP (D)KLEMME . O O &JL9/JTC					(F)ATTACHE (S)GRAPA 6				
	[22] 09408-00050	(E)CLIP (D)KLEMME . O O &JL9/JTC					(F)ATTACHE (S)GRAPA 8				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

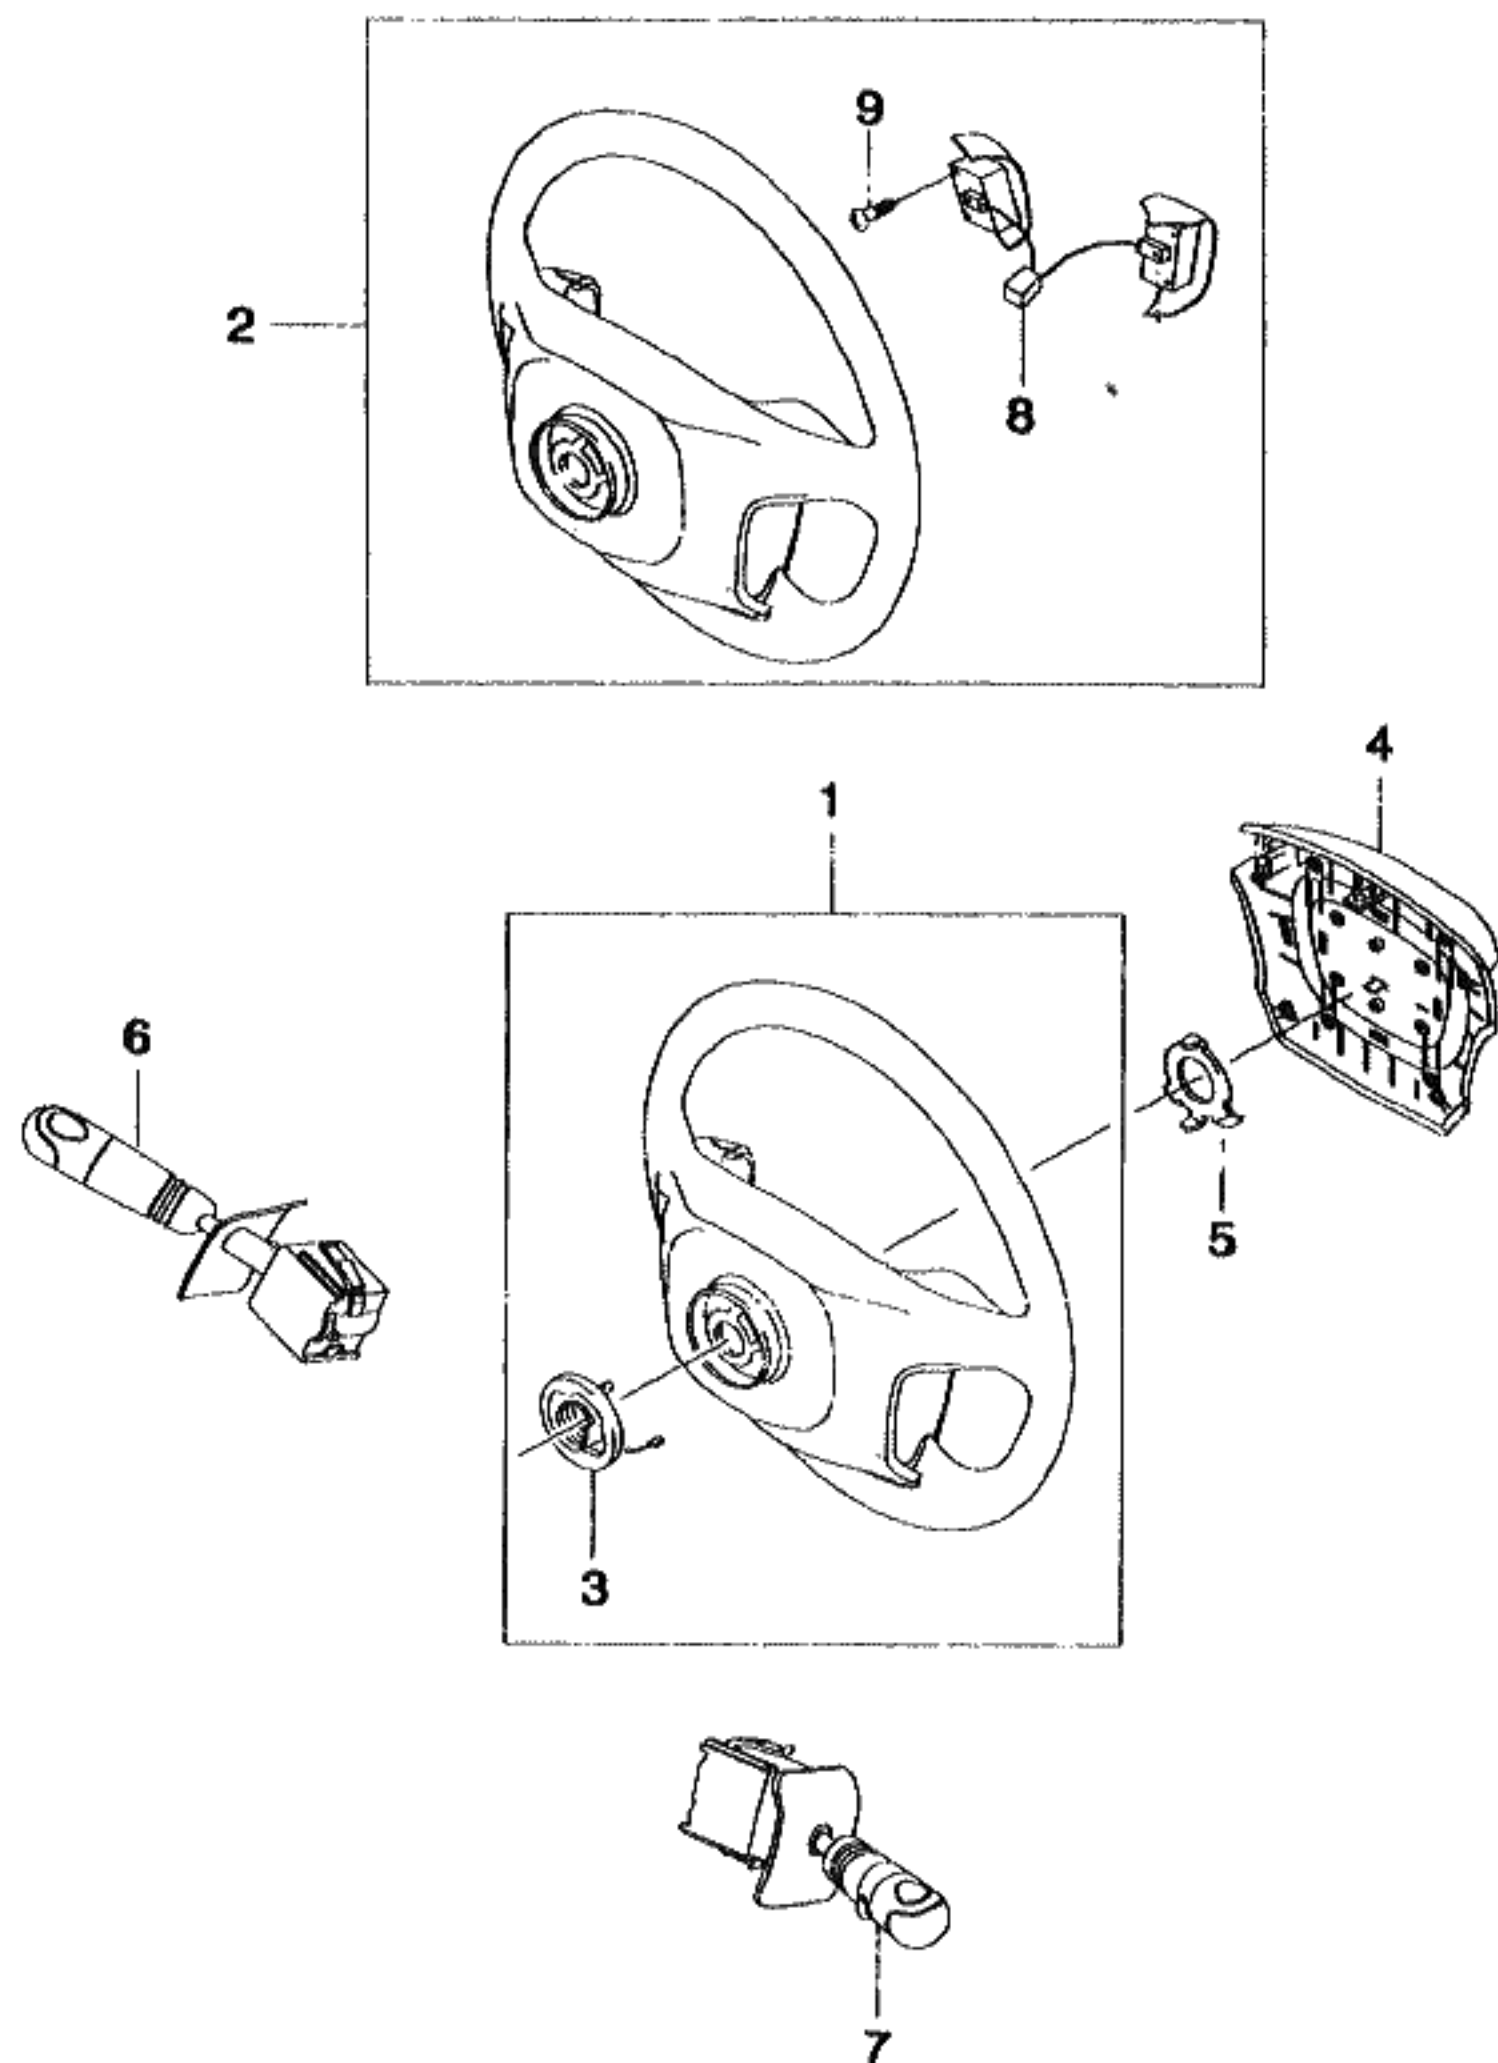


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96236242	(E)WHEEL A-STEERING (D)RAD,LENK . S .			(F)VOLANT DE DIRECTION (S)RUEDA-VOLANTE 1					NL	
	[02] 96236241 96226859	(E)WHEEL A-STEERING (D)RAD,LENK . O S &N58 . . O &N58&NP5			(F)VOLANT DE DIRECTION (S)RUEDA-VOLANTE 1 1				LEATHER	HD	
	[03] 96304414	(E)CONTACT A-SLIDING (D)KONTAKT,GLEIT . S .			(F)CONTACT-GLISSANT (S)CONTACTO-DESLIZANTE 1						
	[04] 96205865	(E)CAP A-HORN (D)DECKEL,HUPE . S .			(F)CHAPEAU-AVERTISSEUR (S)TAPA-BOCINA 1						
	[05] 96234169	(E)PLATE-LOCKING (D)PLATTE,VERRIEGELUNG . S S			(F)PLAQUE-VERROUILLAGE (S)PLACA-CIERRE 1						
	[06] 96206806 96206808	(E)SWITCH A-WIPER (D)SCHALTER,SCHEIBENWISCHER . S S . O O &K30			(F)COMMUTATEUR-ESSUIE-GLACE (S)INTERRUPTOR-LIMPIADOR 1 1					WA WC	
	[07] 96206801	(E)SWITCH A-SIGNAL & LIGHT (D)SCHALTER . S S			(F)COMMUTATEUR (S)INTERRUPTOR 1					TA	
	[08] 96205862	(E)SWITCH A-HORN (D)SCHALTER . O S &N58			(F)COMMUTATEUR (S)INTERRUPTOR 1						
	[09] 96205864	(E)SCREW (D)SCHRAUBE . O S &N58			(F)VIS (S)TORNILLO 4						
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

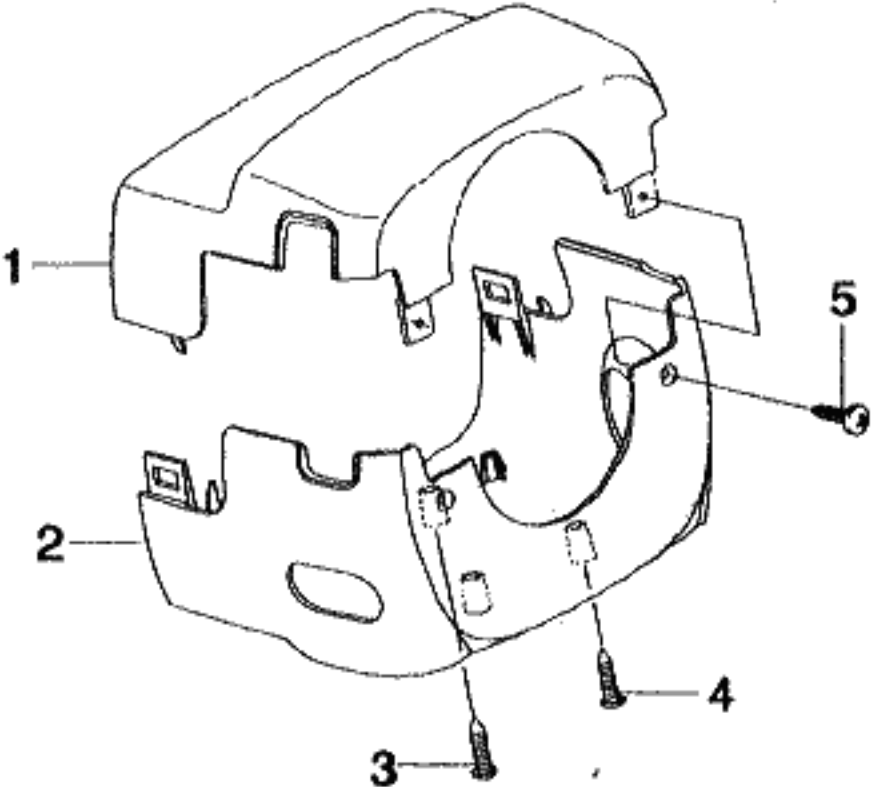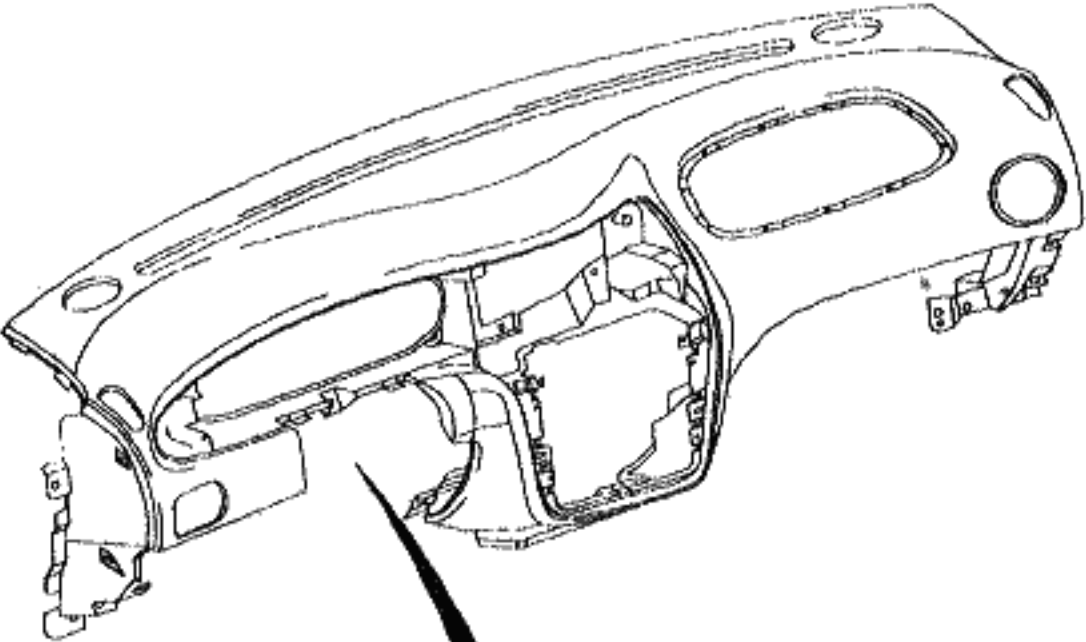

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96239851	(E)COVER-STRG COLUMN,UPPER (D)DECKEL LENKSÄULE,OBERE	S	S		(F)COUVERCLE (S)CUBIERTA	1				JA
	[02] 96239853	(E)COVER-STRG COLUMN,LOWER (D)DECKEL	S	S		(F)COUVERTURE (S)CUBIERTA	1				JE
	[03] 02154-04105	(E)SCREW-CR MACHINE (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	1				
	[04] 03210-48095	(E)SCREW-TAPPING (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	2				
	[05] 03220-42095	(E)SCREW-TAPPING (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


4830 STEERING COLUMN PARTS

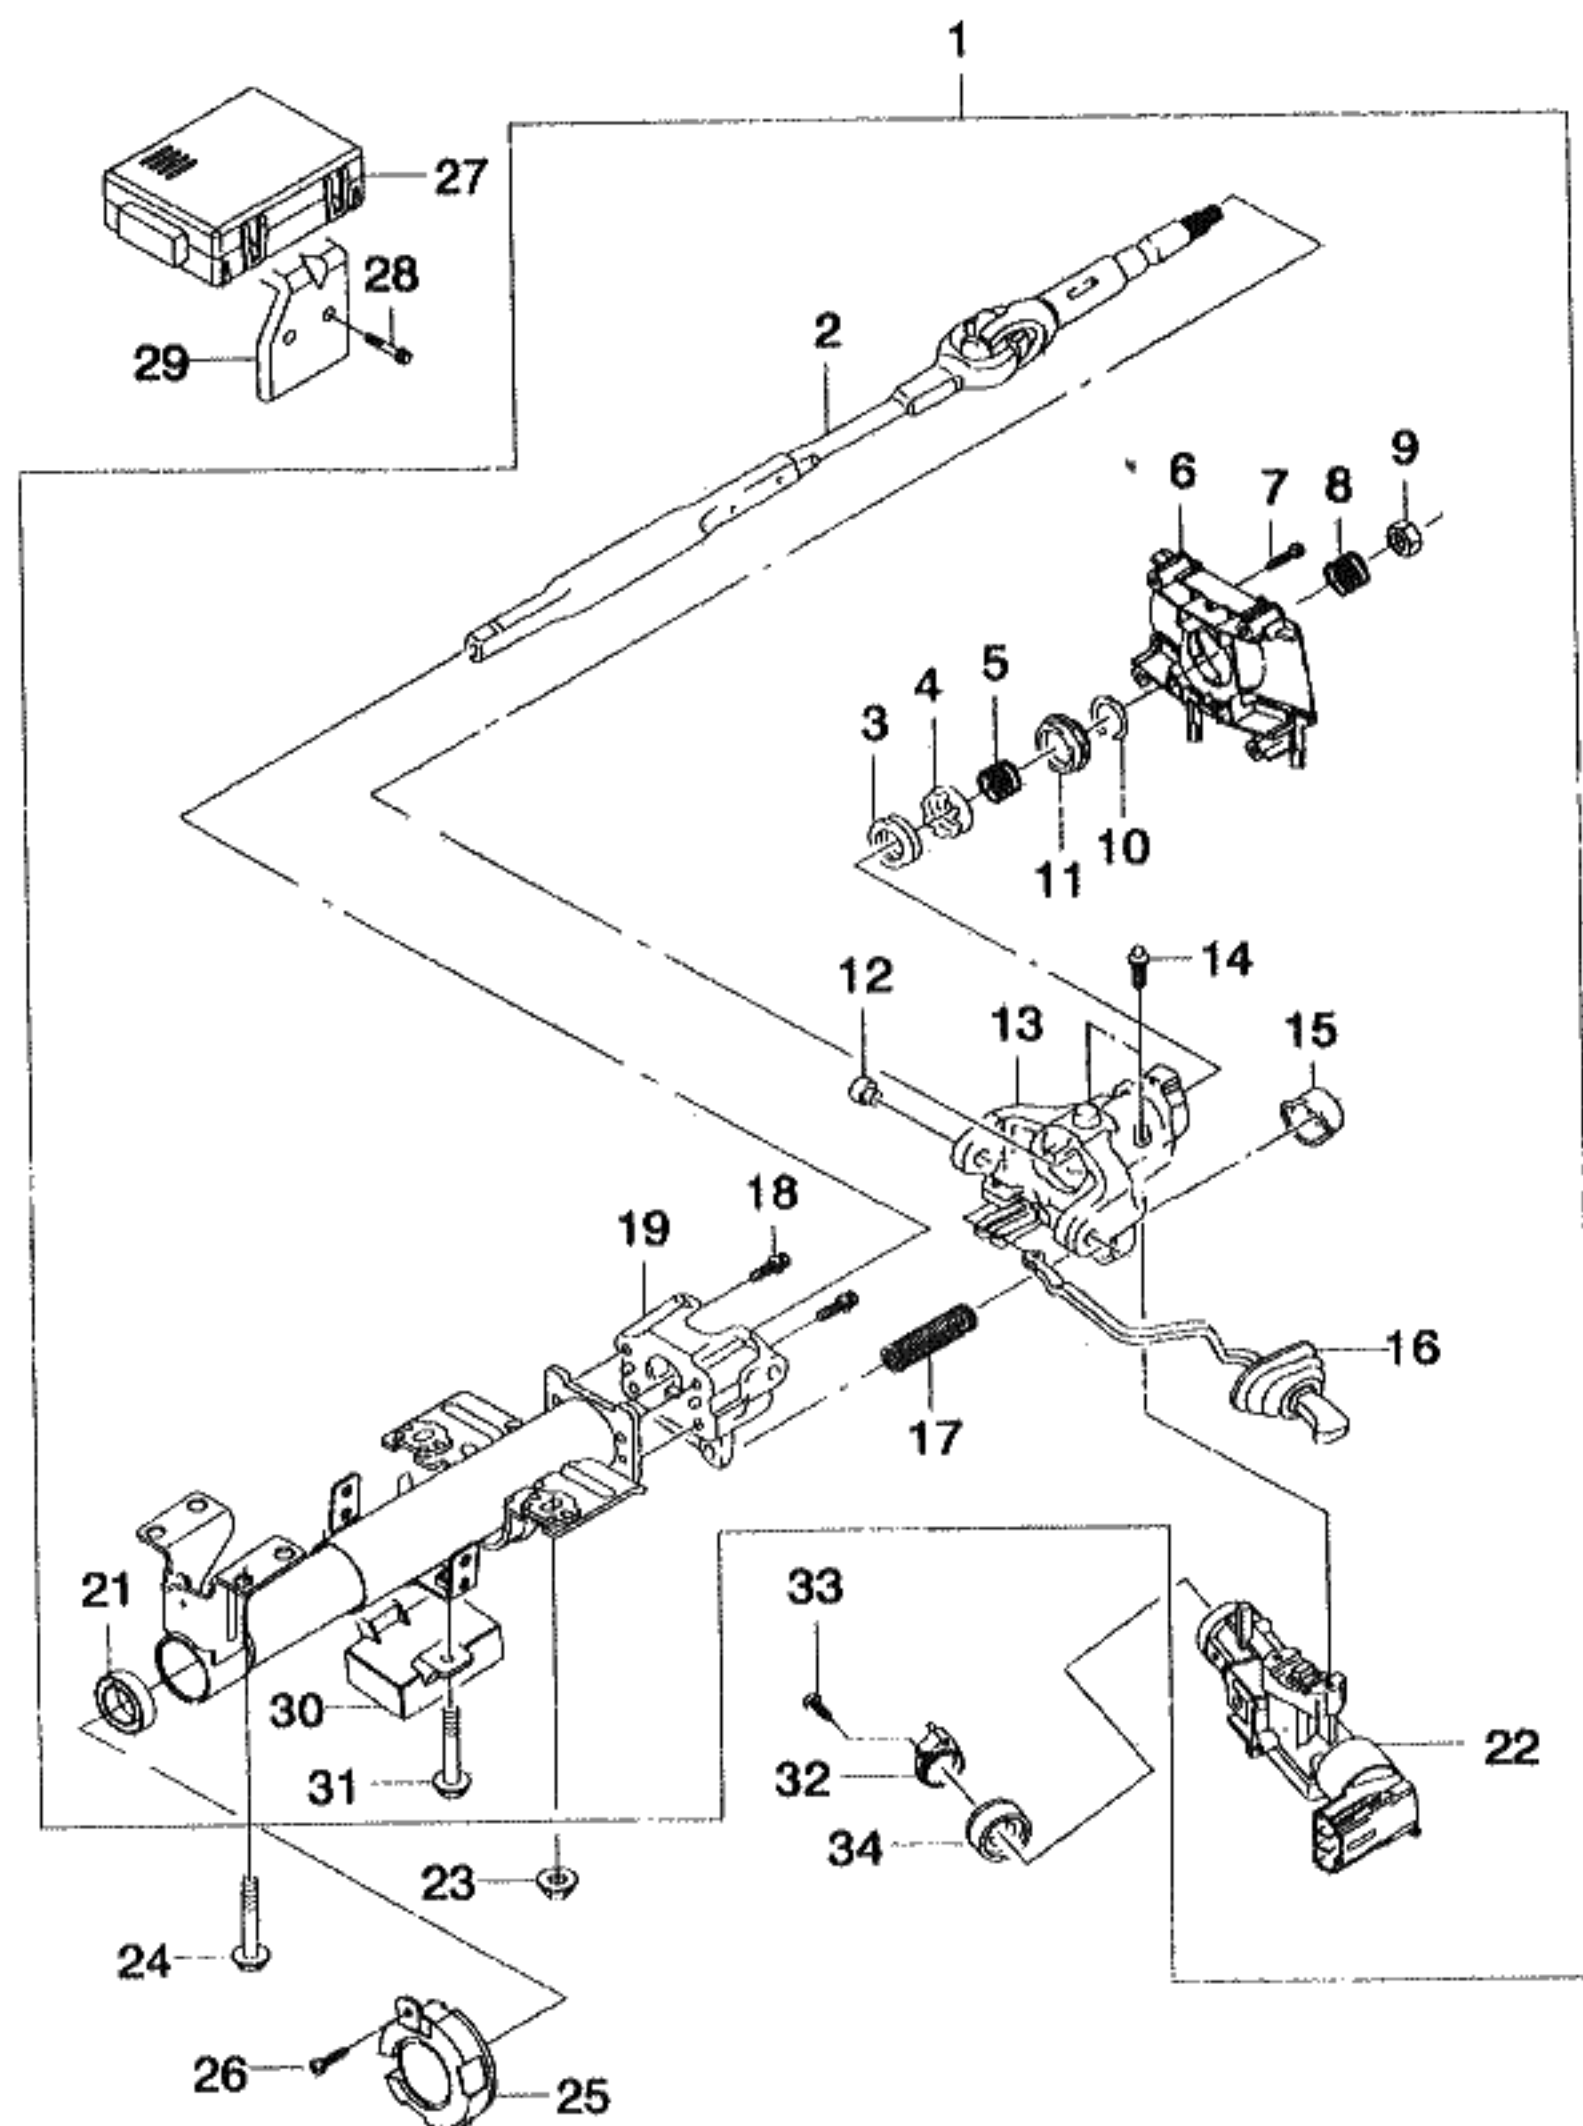


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) COLUMN A-TILTABLE STRG (D) SÄULE, KIPPLENKUNG				(F) COLONNE-DIRECTION (S) COLUMNA-CONDUCIR					
	96205819	. S .		&N55-UM1		1					YE
	96234144	. A .		&N55&UM1		1					BL
	96253809	M O S		&N58-UM1		1			ZINC		VD
	96253807	M A A		&N58&UM1		1			ZINC		VA
	96253809	A O .		&L76&N58-UM1		1			ZINC		VD
	96253807	A A .		&L76&N58&UM1		1			ZINC		VA
	96205849	A O O		&L88&N58-UM1		1			ALLUMINUM		WH
	96205847	A A A		&L88&N58&UM1		1			ALLUMINUM		GR
	[02]	(E) SHAFT A-STRG (D) SPINDEL, LENKSÄULE				(F) ARBRE (S) EJE-COLUMNA DE VOLANTE					
	530436	. S S				1					
	[03]	(E) RACE-INNER (D) GLEITBAHN, INNEN				(F) CAGE-INTERNE (S) CARRERA-INTERNA					
	530502	. S S				1					
	[04]	(E) SEAT-UPPER BEARING INNER (D) SITZ, OBERER LAGER				(F) SIEGE (S) ASIENTO					
	530524	. S S				1					
	[05]	(E) SPRING-UPPER BEARING (D) FEDERUNG				(F) RESSORT (S) RESORTE					
	530552	. S S				1					
	[06]	(E) HOUSING A-SIGNAL SWITCH (D) GEHÄUSE, SIGNAL SCHALTER				(F) LOGEMENT (S) CARCASA					
	530445	. S .				1					
	530429	. O S		&N58		1					
	[07]	(E) SCREW-WASHER HEAD (D) SCHRAUBE				(F) VIS (S) TORNILLO					
	530590	. S S				2					

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

4830 STEERING COLUMN PARTS

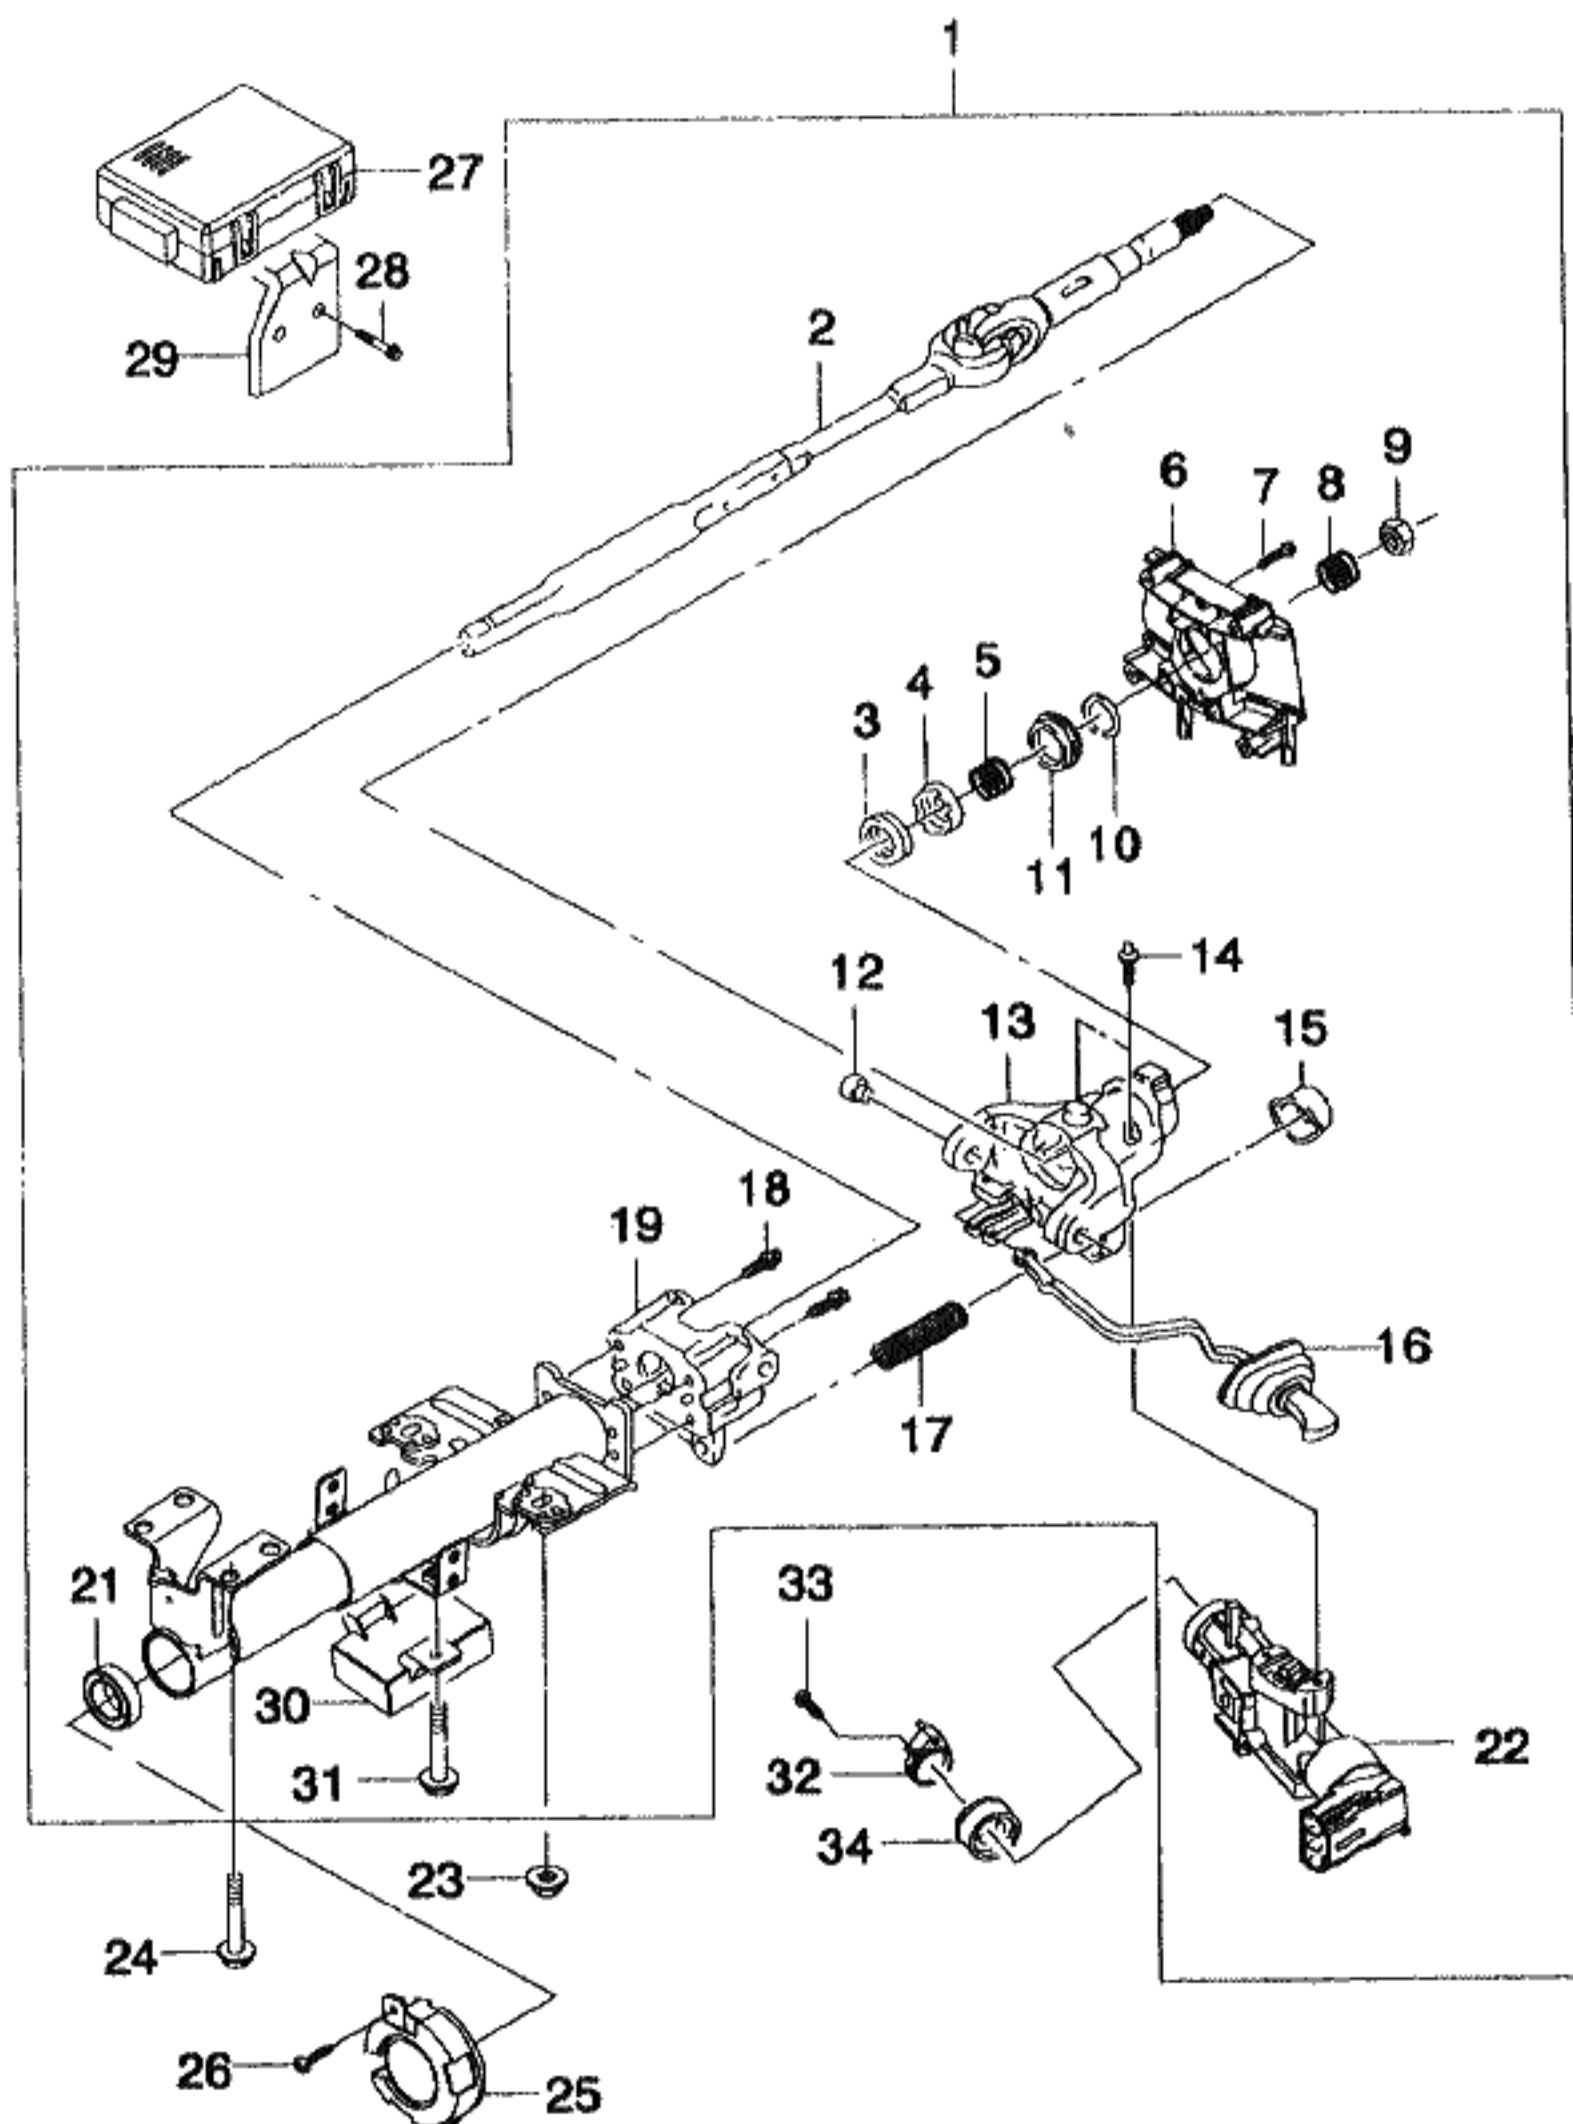


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[08]	(E)SPRING-CANCELLING CAM (D)FEDERUNG						(F)RESSORT-CAME ANNULAT (S)RESORTE-LEVA DE CANCELAR			
	530561	. S S						1			
	[09]	(E)NUT (D)MUTTER						(F)ECROU (S)TUERCA			
	530545	. S S						1			
	[10]	(E)RING-RETAINING (D)RING,HALTER						(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR			
	530503	. S S						1			
	[11]	(E)RETAINER-SPRING (D)HALTER,FEDERUNG						(F)ARRETOIR-RESSORT (S)RETENEDOR-RESORTE			
	530553	. S S						1			
	[12]	(E)PIN-PIVOT (D)STIFT,DREH						(F)BROCHE-PIVOT (S)PASADOR-PIVOTE			
	530515	. S S						2			
	[13]	(E)HOUSING A-STEERING COLUMN (D)GEHÄUSE,LENKSÄULE						(F)LOGEMENT (S)CARCASA-COLUMNA DE			
	530442	. S .						1		INCL. # 16	
	530426	. O S &N58						1		INCL. # 16	
	[14]	(E)BOLT-SHEAR (D)SCHRAUBE,SCHERE						(F)BOULON-CISAILLE (S)PERNO-CORTAR			
	530549	. S S						2			
	[15]	(E)RETAINER-SPRING (D)HALTER,FEDERUNG						(F)ARRETOIR-RESSORT (S)RETENEDOR-RESORTE			
	530509	. S S						1			
	[16]	(E)LEVER A-SHOE RELEASE (D)HEBEL						(F)LEVIER (S)PALANCA			
	96205858	. S .						1			
	96205859	. O S &N58						1			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

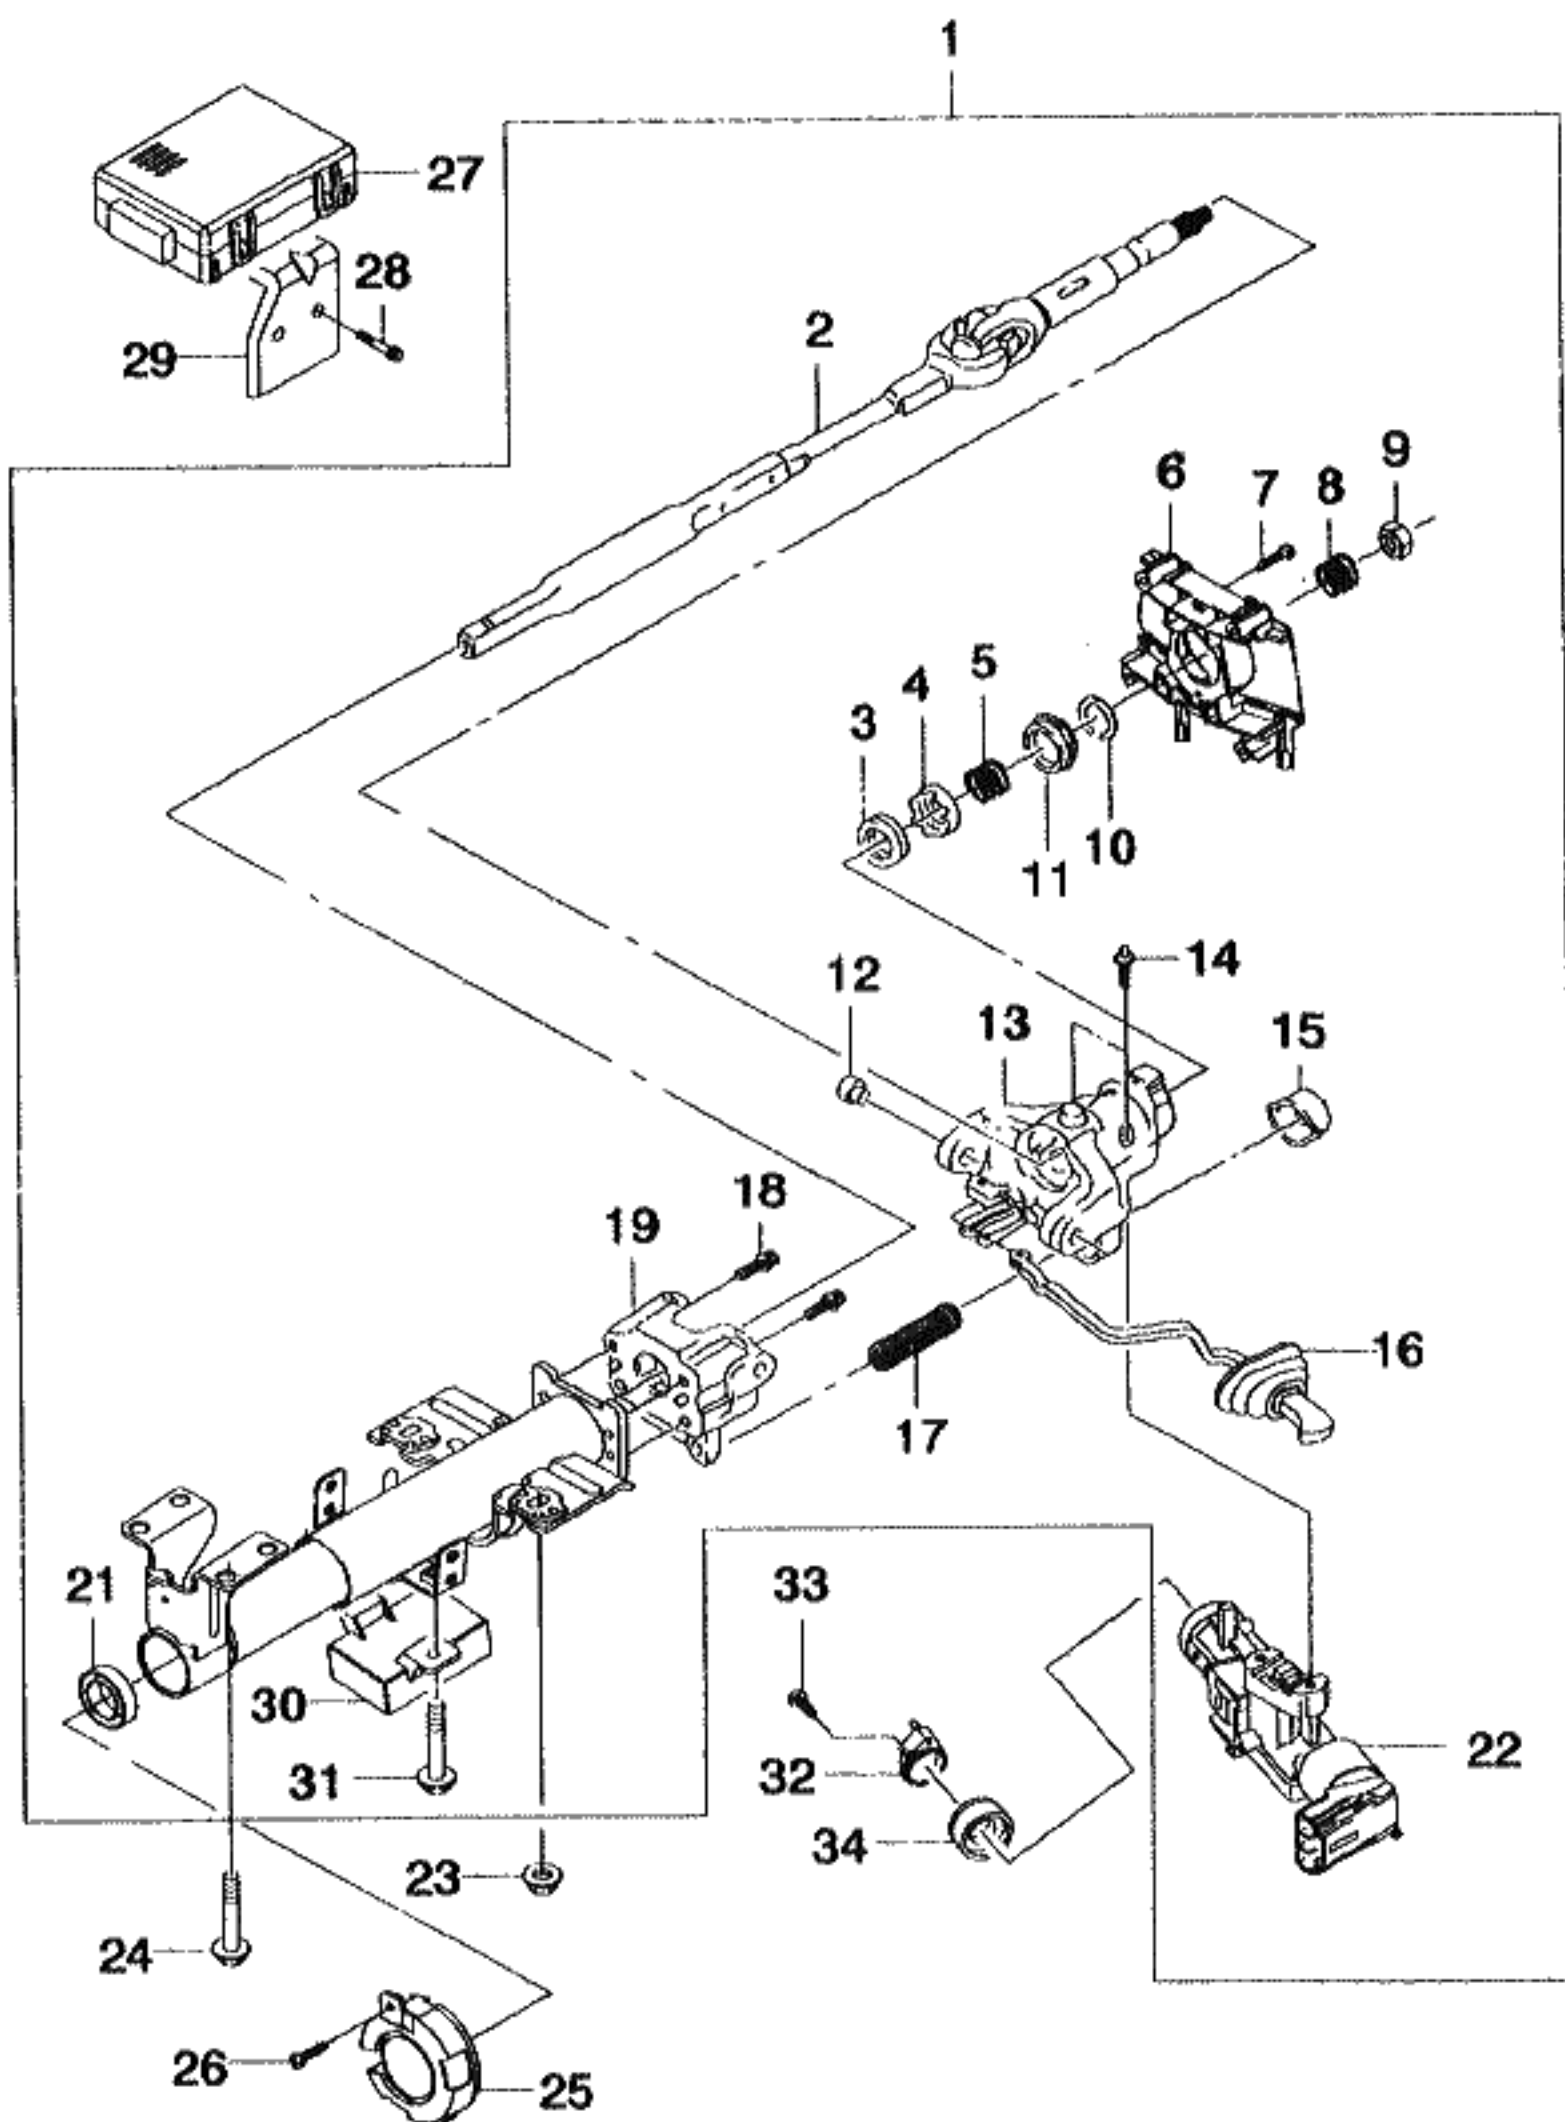


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[17] 530750	(E)SPRING-WHEEL TILT (D)FEDERUNG	S	S		(F)RESSORT (S)RESORTE	1				
	[18] 530600	(E)SCREW-SUPPORT (D)SCHRAUBE, SCHERE	S	S		(F)BOULON-CISAILLE (S)PERNO-CORTAR	4				
	[19] 530439 530494	(E)SUPPORT A-STRG COLUMN (D)TRÄGER, LENKSÄULE GEHÄUSE	S			(F)SUPPORT (S)SOPORTE	1				
	[21] 530595	(E)BEARING A-LOWER SHAFT (D)KUGELLAGER	O	S	&N58	(F)ROULEMENT (S)COJINETE	1				
	[22] 96205853 96205851	(E)HOUSING A-STEERING LOCK (D)GEHÄUSE, ZÜNDUNGS-SCHALTE	S	S	-UM1	(F)LOGEMENT (S)CARCASA	1			INCL.#32-33	
	[23] 08361-28083	(E)NUT-W/WASHER (D)MUTTER	A	A	&UM1	(F)ECROU (S)TUERCA	1				
	[24] 09118-08011 O 09116-08010	(E)BOLT-W/WASHER (D)SCHRAUBE	S	S		(F)BOULON (S)PERNO	2				
	[25] 96226844	(E)SENSOR A-WHEEL EVO, COLUMN (D)SENSOR, GESCHWINDIGKEIT	S	S		(F)DETECTEUR-VITESSE DE ROUE (S)SENSOR-VELOCIDAD DE RUEDA	4	970803			
	[26] 03110-48133	(E)SCREW-TAPPING (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	4	970804			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

4830 STEERING COLUMN PARTS

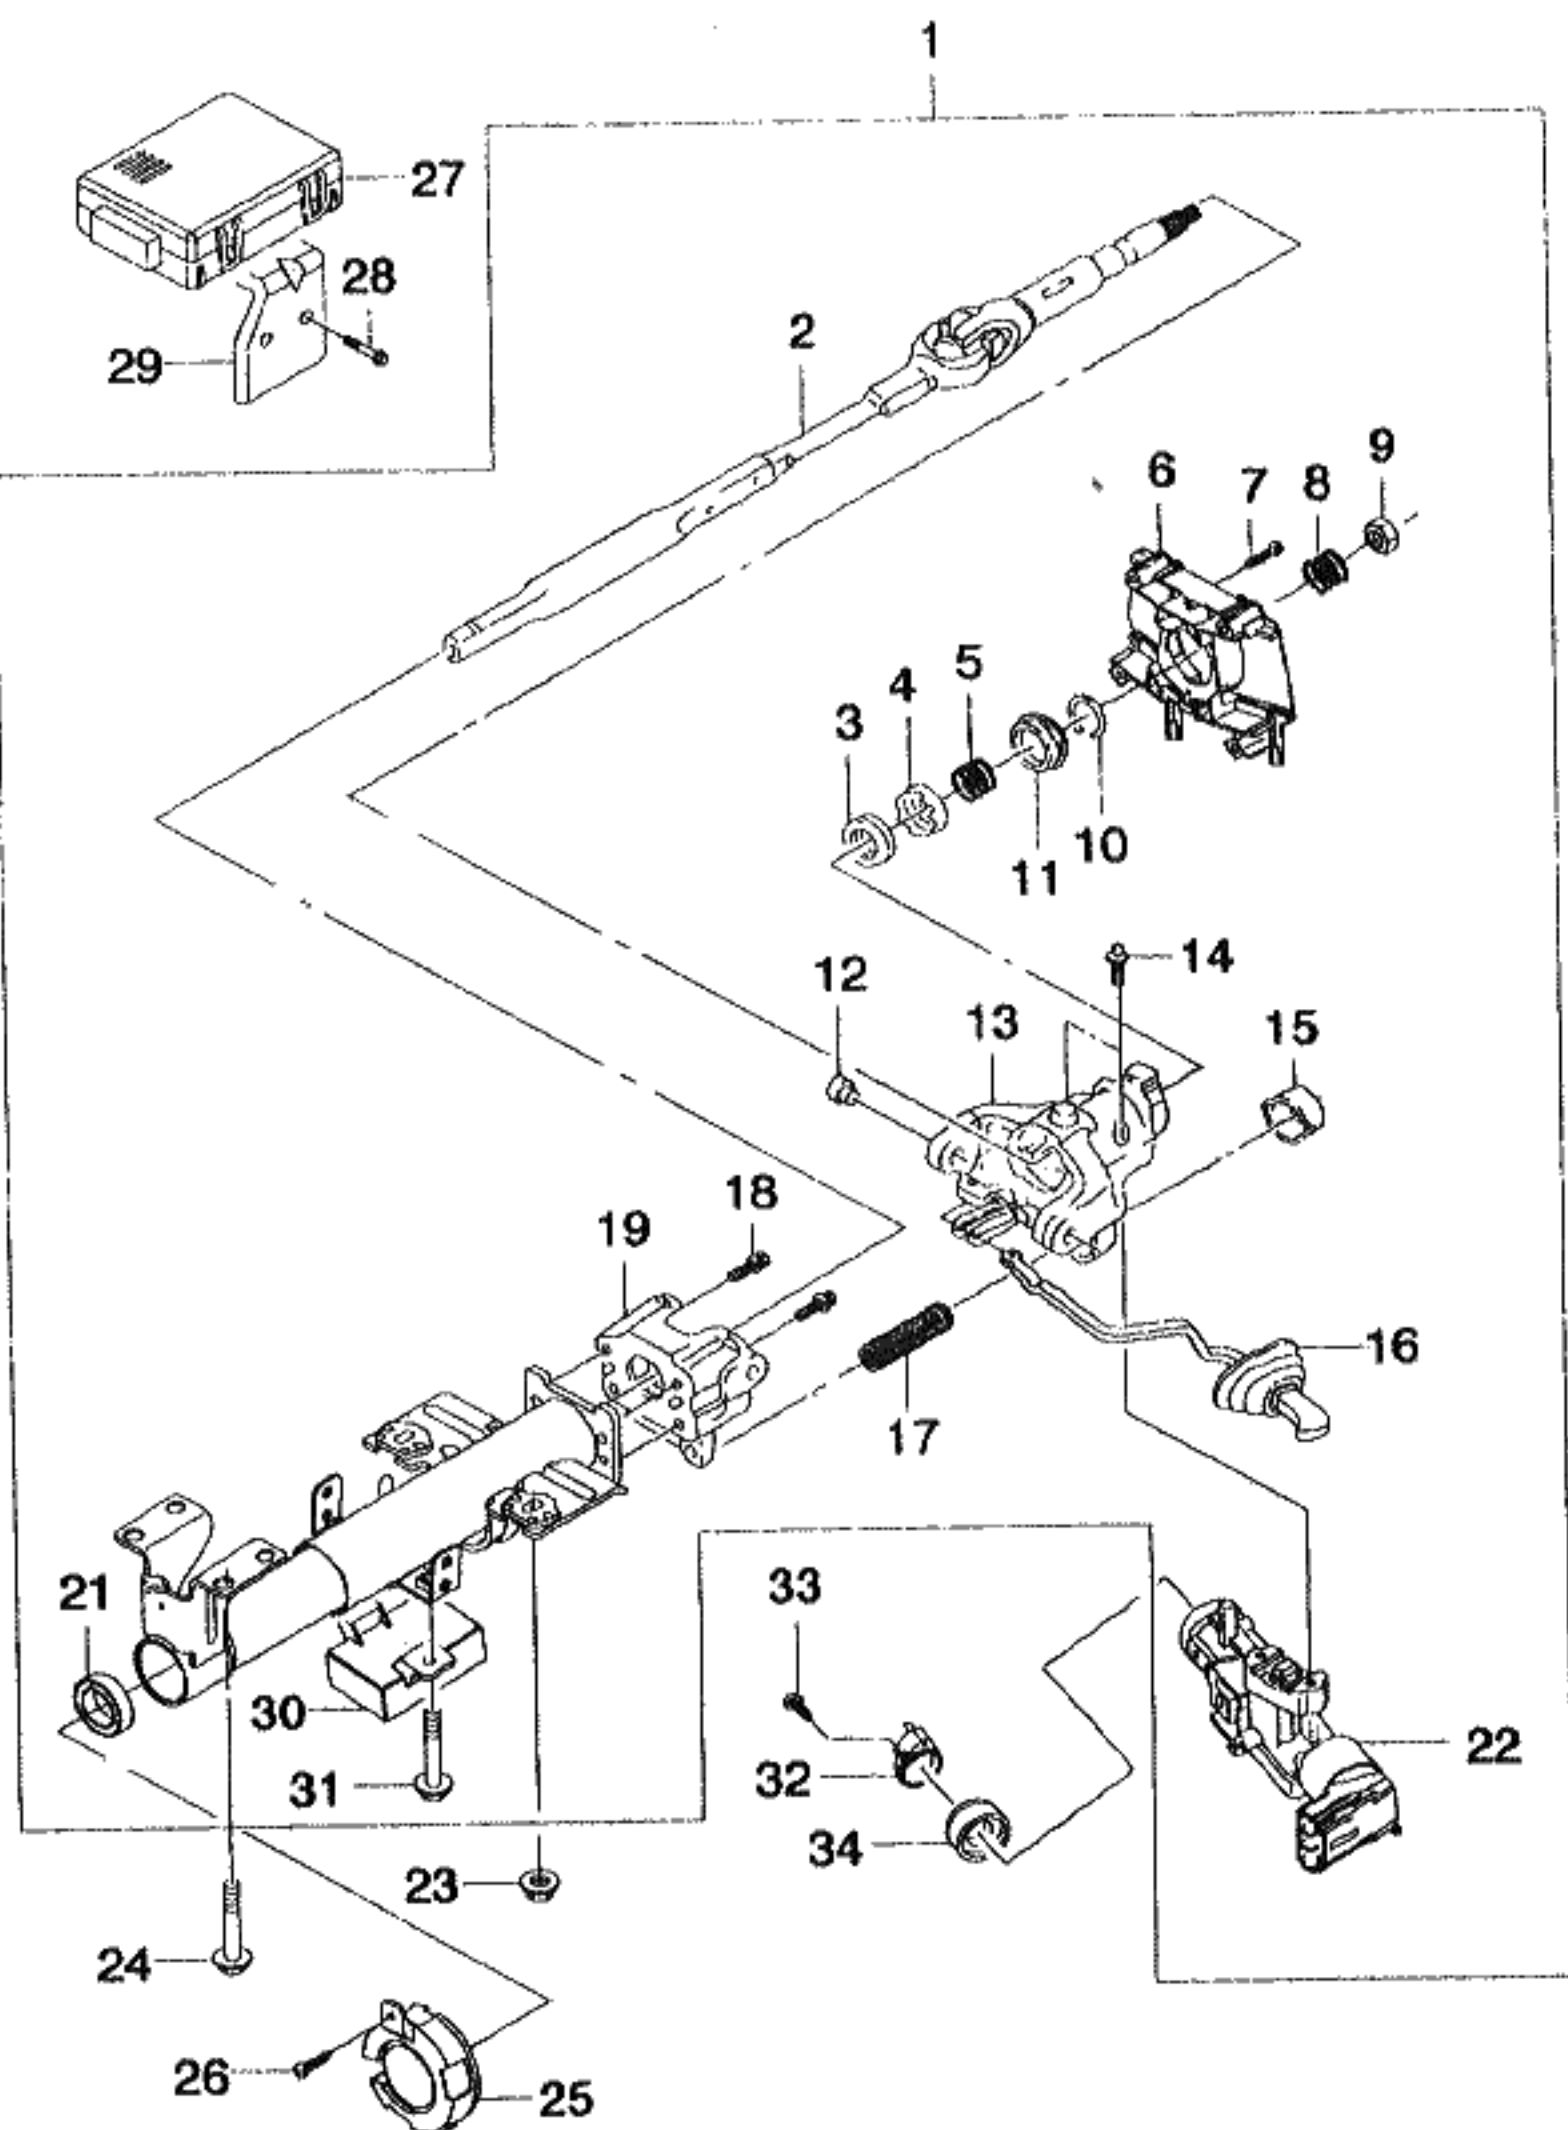


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[27] 96205871	(E)MODULE-EVO (D)MODUL		S			(F)MODULE (S)MODULO		1			
	[28] 09118-06001	(E)BOLT-W/WASHER (D)SCHRAUBE		S			(F)BOULON (S)PERNO		2			
	[29] 96205875	(E)BRACKET A-MODULE,EVO (D)TRÄGER		S			(F)SUPPORT (S)SOPORTE		1			
	[30] 96308396	(E)CONTROL UNIT-IMMOBILIZER (D)STEUERUNGS-EINHEIT					(F)UNITE DE CONTROLE (S)UNIDAD DE CONTROL		1			
	[31] 09125-06002 O 09132-04014	(E)SCREW-CR MACHINE (D)SCHRAUBE		A A &UM1			(F)VIS (S)TORNILLO		2	970803		
	[32] 96206813	(E)SWITCH A-KEY HOLE ILLUMIN (D)SCHALTER		A A &UM1			(F)COMMUTATEUR (S)INTERRUPTOR		2	970804		
	[33] 02154-04105	(E)SCREW-CR MACHINE (D)SCHRAUBE		A A &UM1			(F)VIS (S)TORNILLO		1			
	[34] 96206733	(E)COIL A-IMMOBILIZER (D)WICKLUNG		A A &UM1			(F)BOBINE (S)BOBINA		1			
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

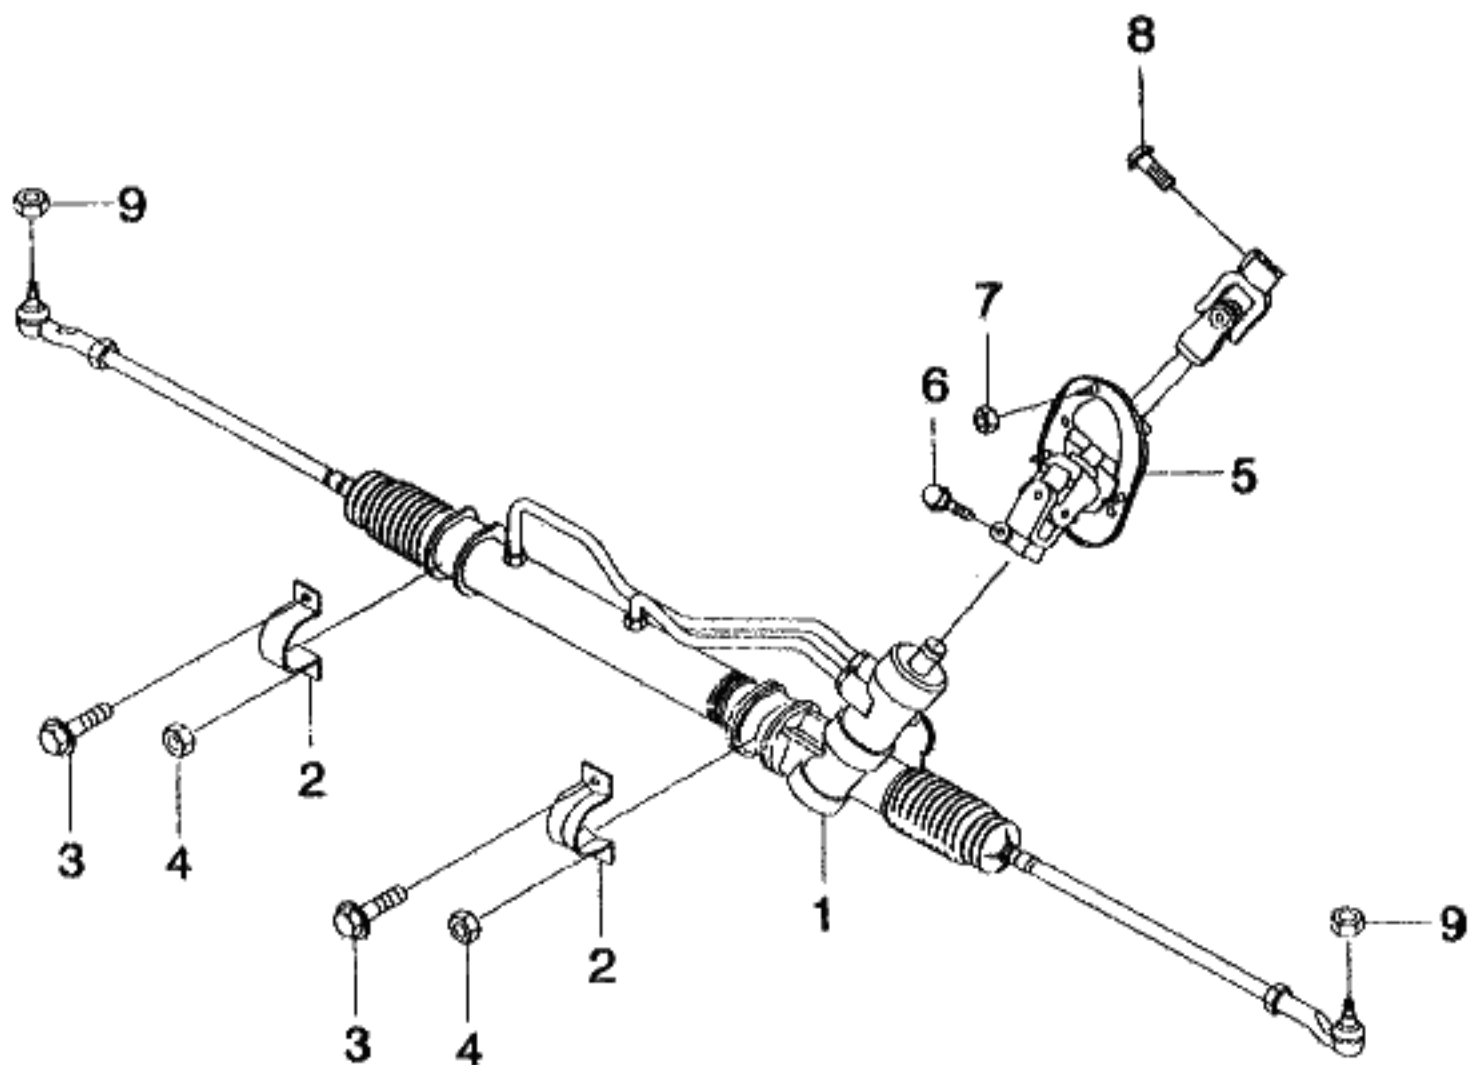


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)GEAR A-POWER STEERING (D)GETRIEBE,KRAFTLENKUNG					(F)ENGRENAGE (S)ENGRANAJE-SERVODIRECCION				
	96205807	.	S	.			1				LN
	96205842	.	.	S			1				LS
	[02]	(E)CLAMP-STRG GEAR (D)KLAMMER					(F)PINCE (S)ABRAZADERA				
	96205815	.	S	S			LH 1				
	96205816	.	S	S			RH 1				
	[03]	(E)BOLT-FLANGE (D)SCHRAUBE					(F)BOULON (S)PERNO				
	02650-10203	.	S	S			2				
	[04]	(E)NUT-FLANGE (D)MUTTER					(F)ECROU (S)TUERCA				
	08316-28103	.	S	S			2				
	[05]	(E)SHAFT A-INTERM (D)SPINDEL					(F)ARBRE (S)EJE				YE
	96205838	.	S	S			1				
	[06]	(E)BOLT (D)SCHRAUBE					(F)BOULON (S)PERNO				
	09119-08012	.	S	S			1				
	[07]	(E)NUT-FLANGE (D)MUTTER					(F)ECROU (S)TUERCA				
	08316-25063	.	S	S			3				
	[08]	(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO				
	02630-08353	.	S	S			1				
	[09]	(E)NUT (D)MUTTER					(F)ECROU (S)TUERCA				
	09159-12010	.	S	S			2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


4930 POWER STEERING GEAR PARTS

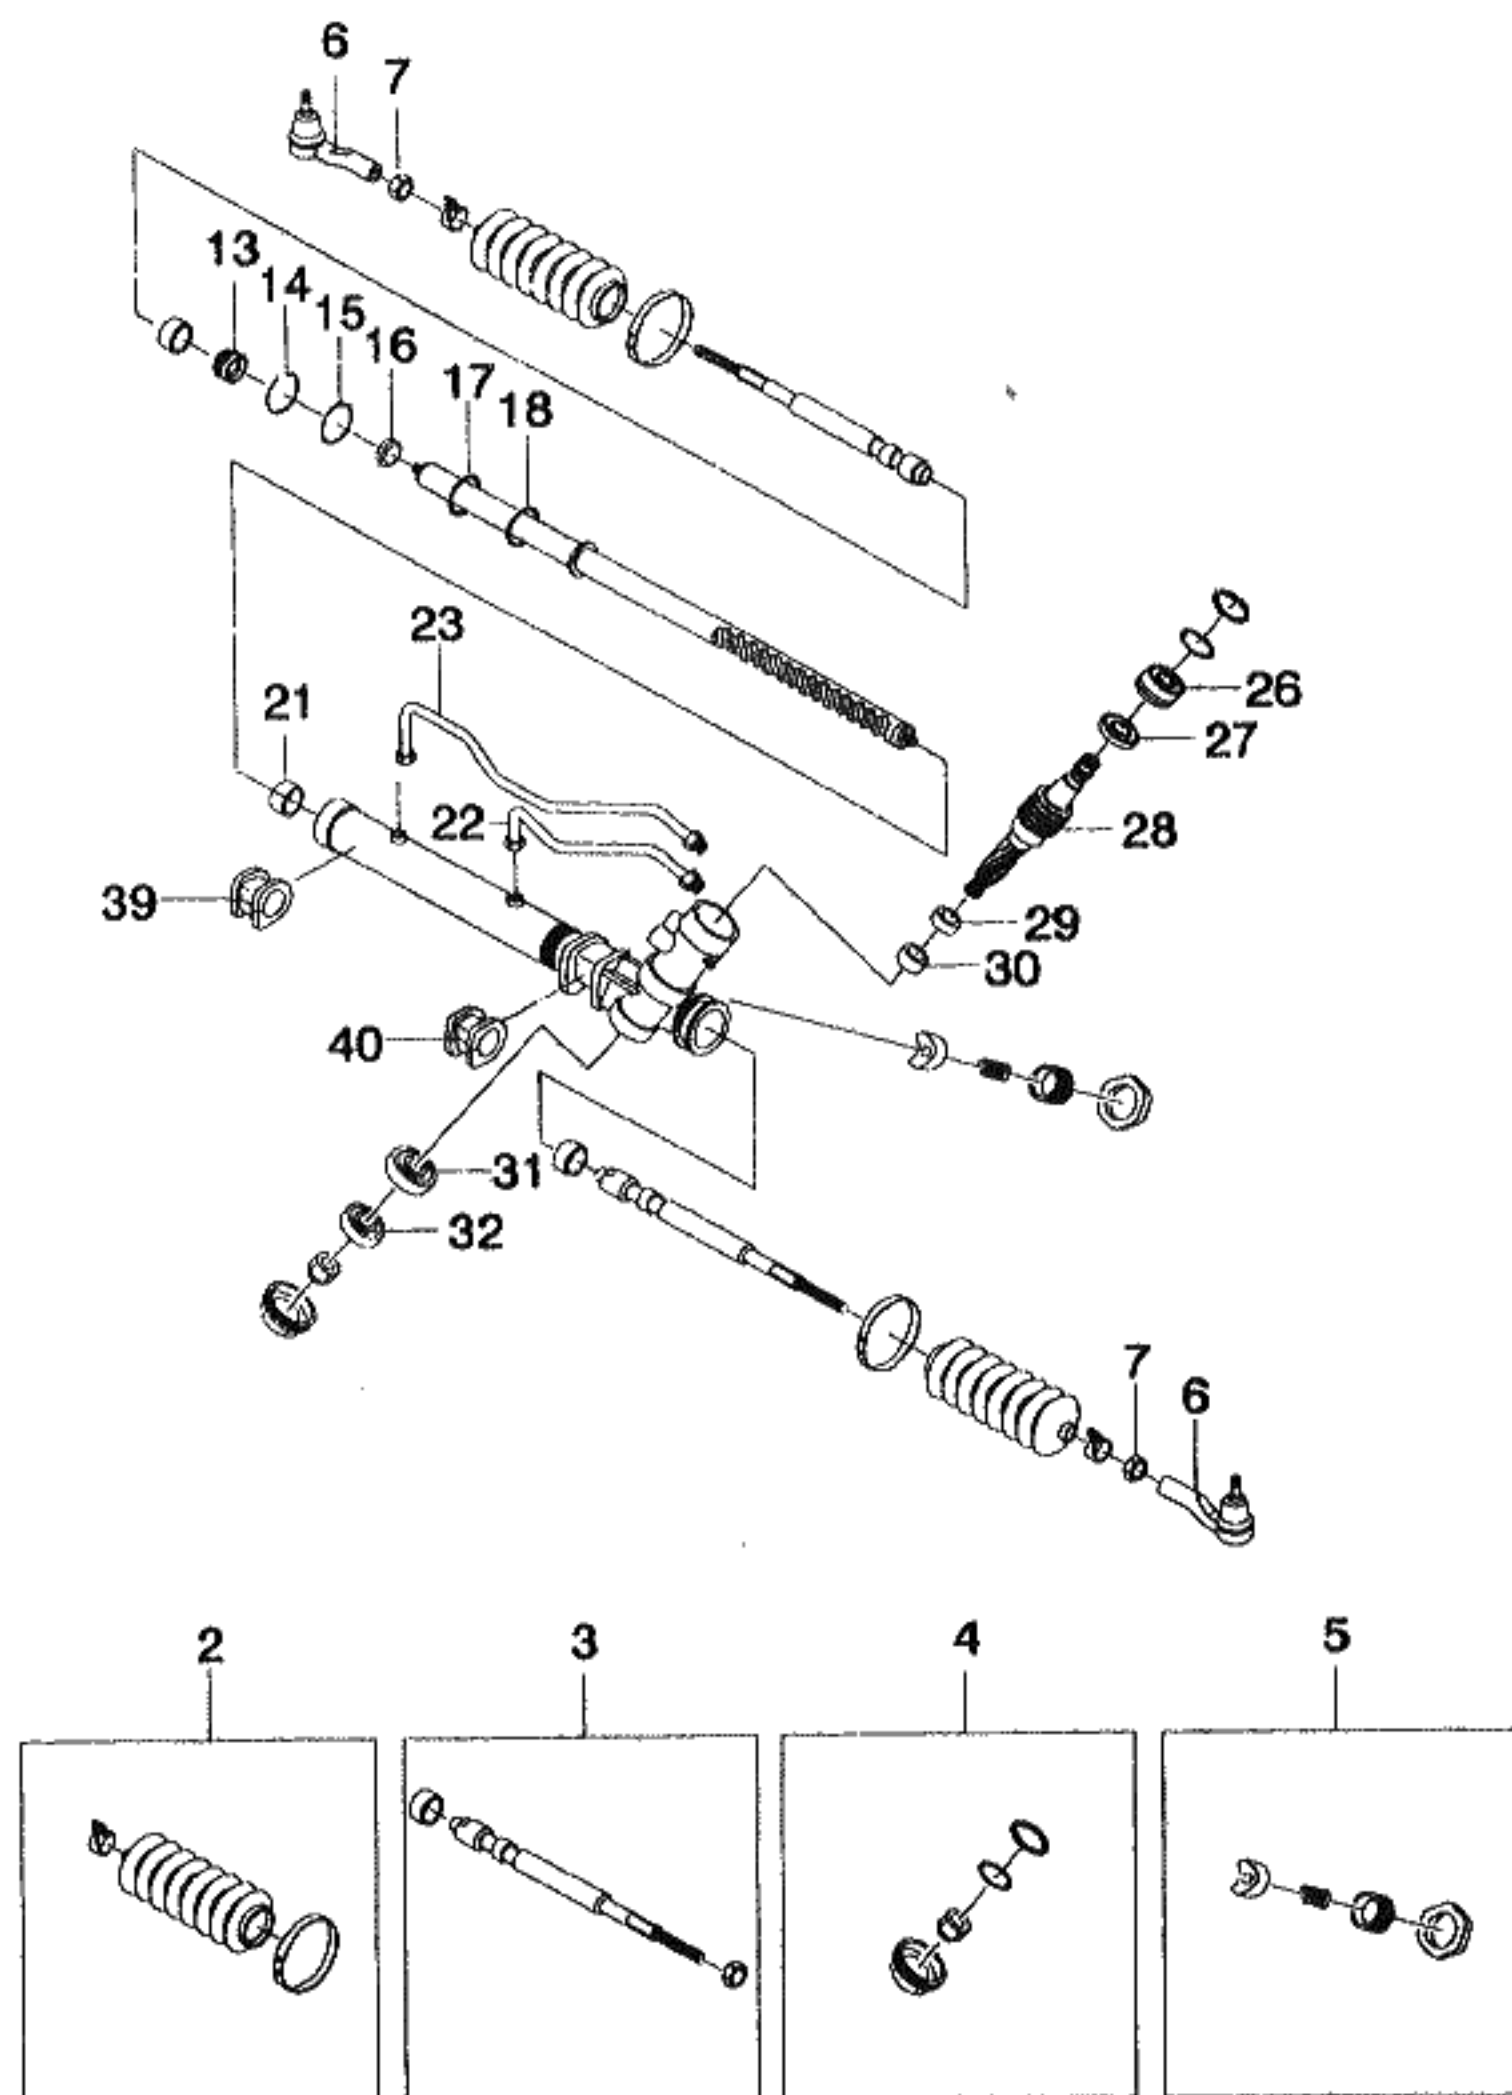


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[02] 520738	(E)BOOT KIT (D)KOFFERRAUM-SATZ . S S					(F)TROUSSE DE GAINÉ (S)JUEGO DE BOTA 1				
	[03] 520808	(E)ROD KIT-TIE INR (D)VERBINDUNGSSTANGE,INNENE . S S					(F)TRINGLE-BARRE (S)VARA-AMARRE,INTERIOR 1				
	[04] 520805	(E)SEAL KIT-PINION (D)DICHTUNGS-SATZ . S S					(F)TROUSSE DE JOINTS (S)JUGO DE SELLOS-UNION 1				
	[05] 520806	(E)BEARING KIT-RACK (D)KUGELLAGER . S S					(F)ROULEMENT (S)CONJINETE 1				
	[06] 96205809	(E)TIE ROD END (D)ZUGSTANGE . S S					(F)BARRE D'ACCOUPLEMENT (S)VARA DE AMARRE 2				
	[07] 08310-22143	(E)NUT-HEXAGON (D)MUTTER . S S					(F)ECROU (S)TUERCA 2				
	[13] 520777	(E)RING-BULKHEAD RETAINING (D)RING . S S					(F)ANNEAU (S)ANILLO 1				
	[14] 520667	(E)BULKHEAD A-BUSH & CYL (D)LAGERFUTTER . S S					(F)MANCHON (S)BUJE 1				
	[15] 520499	(E)O RING (D)O RING . S S					(F)JOINT TORIQUE (S)ANILLO EN O 1			40.9 1.D	
	[16] 520491	(E)SEAL-RACK,OTR (D)DICHTUNG . S S					(F)JOINT (S)SELLO 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

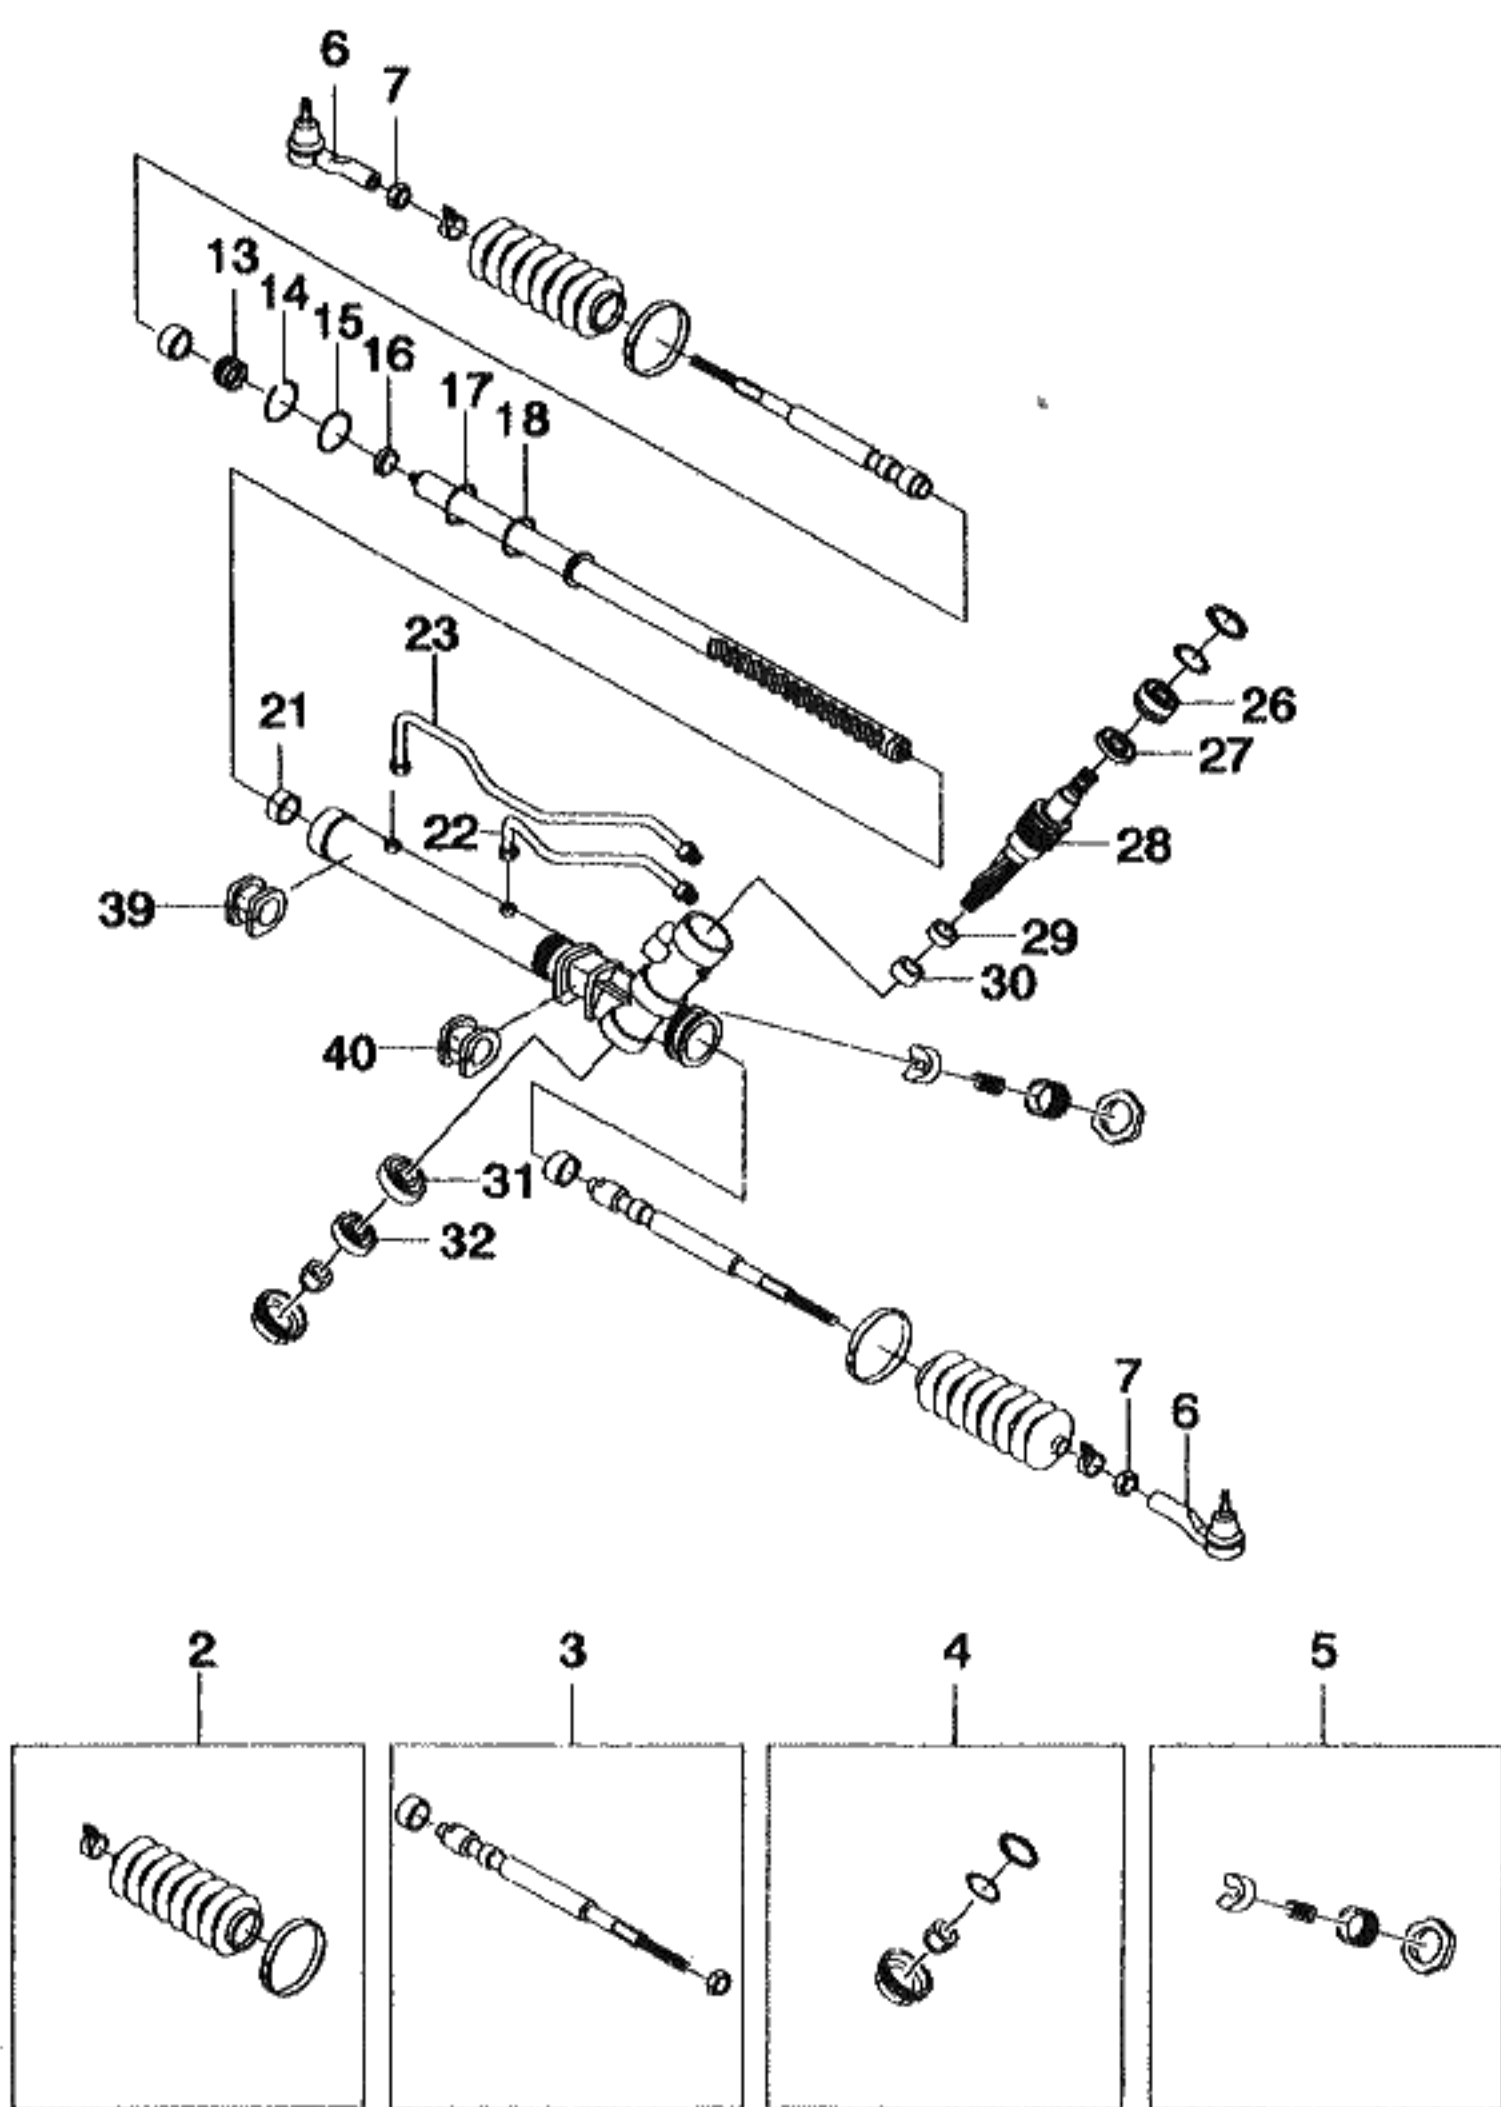


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[17]	(E)RING-RETAINING (D)RING,HALTER					(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR				
	520381	. S S					1				
	[18]	(E)O RING (D)O RING					(F)JOINT TORIQUE (S)ANILLO EN O				
	520898	. S S					1				
	[21]	(E)SEAL-RACK,INR (D)DICHTUNG					(F)JOINT (S)SELLO				
	520504	. S S					1				
	[22]	(E)LINE KIT-CYLINDER (D)AUSKLEIDUNGS,ZYLINDER					(F)TROUSSE DE LIGNE-CYLINDRE (S)JUEGO DE LINEA-CILINDRO				
	520809	. S S					LH 1				
	[23]	(E)LINE KIT-CYLINDER (D)AUSKLEIDUNGS,ZYLINDER					(F)TROUSSE DE LIGNE-CYLINDRE (S)JUEGO DE LINEA-CILINDRO				
	520810	. S S					RH 1				
	[26]	(E)BEARING A-NEEDLE (D)KUGELLAGER					(F)ROULEMENT (S)COJINETE				
	520325	. S S					1				
	[27]	(E)BEARING-SHAFT (D)KUGELLAGER					(F)ROULEMENT (S)CONJINETE				
	520326	. S S					1				
	[28]	(E)VALVE A-PINION (D)VENTIL					(F)SOUPAPE (S)VALVULA				
	520888	. S .					1				
	520887	. . S					1				
	[29]	(E)SEAL-PINION SHAFT (D)DICHTUNG,RITZEL					(F)JOINT-PIÑON (S)SELLO-PIÑON				
	520478	. S S					1				
	[30]	(E)BUSH-PINION,UPR (D)LAGERFUTTER					(F)MANCHON (S)BUJE				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

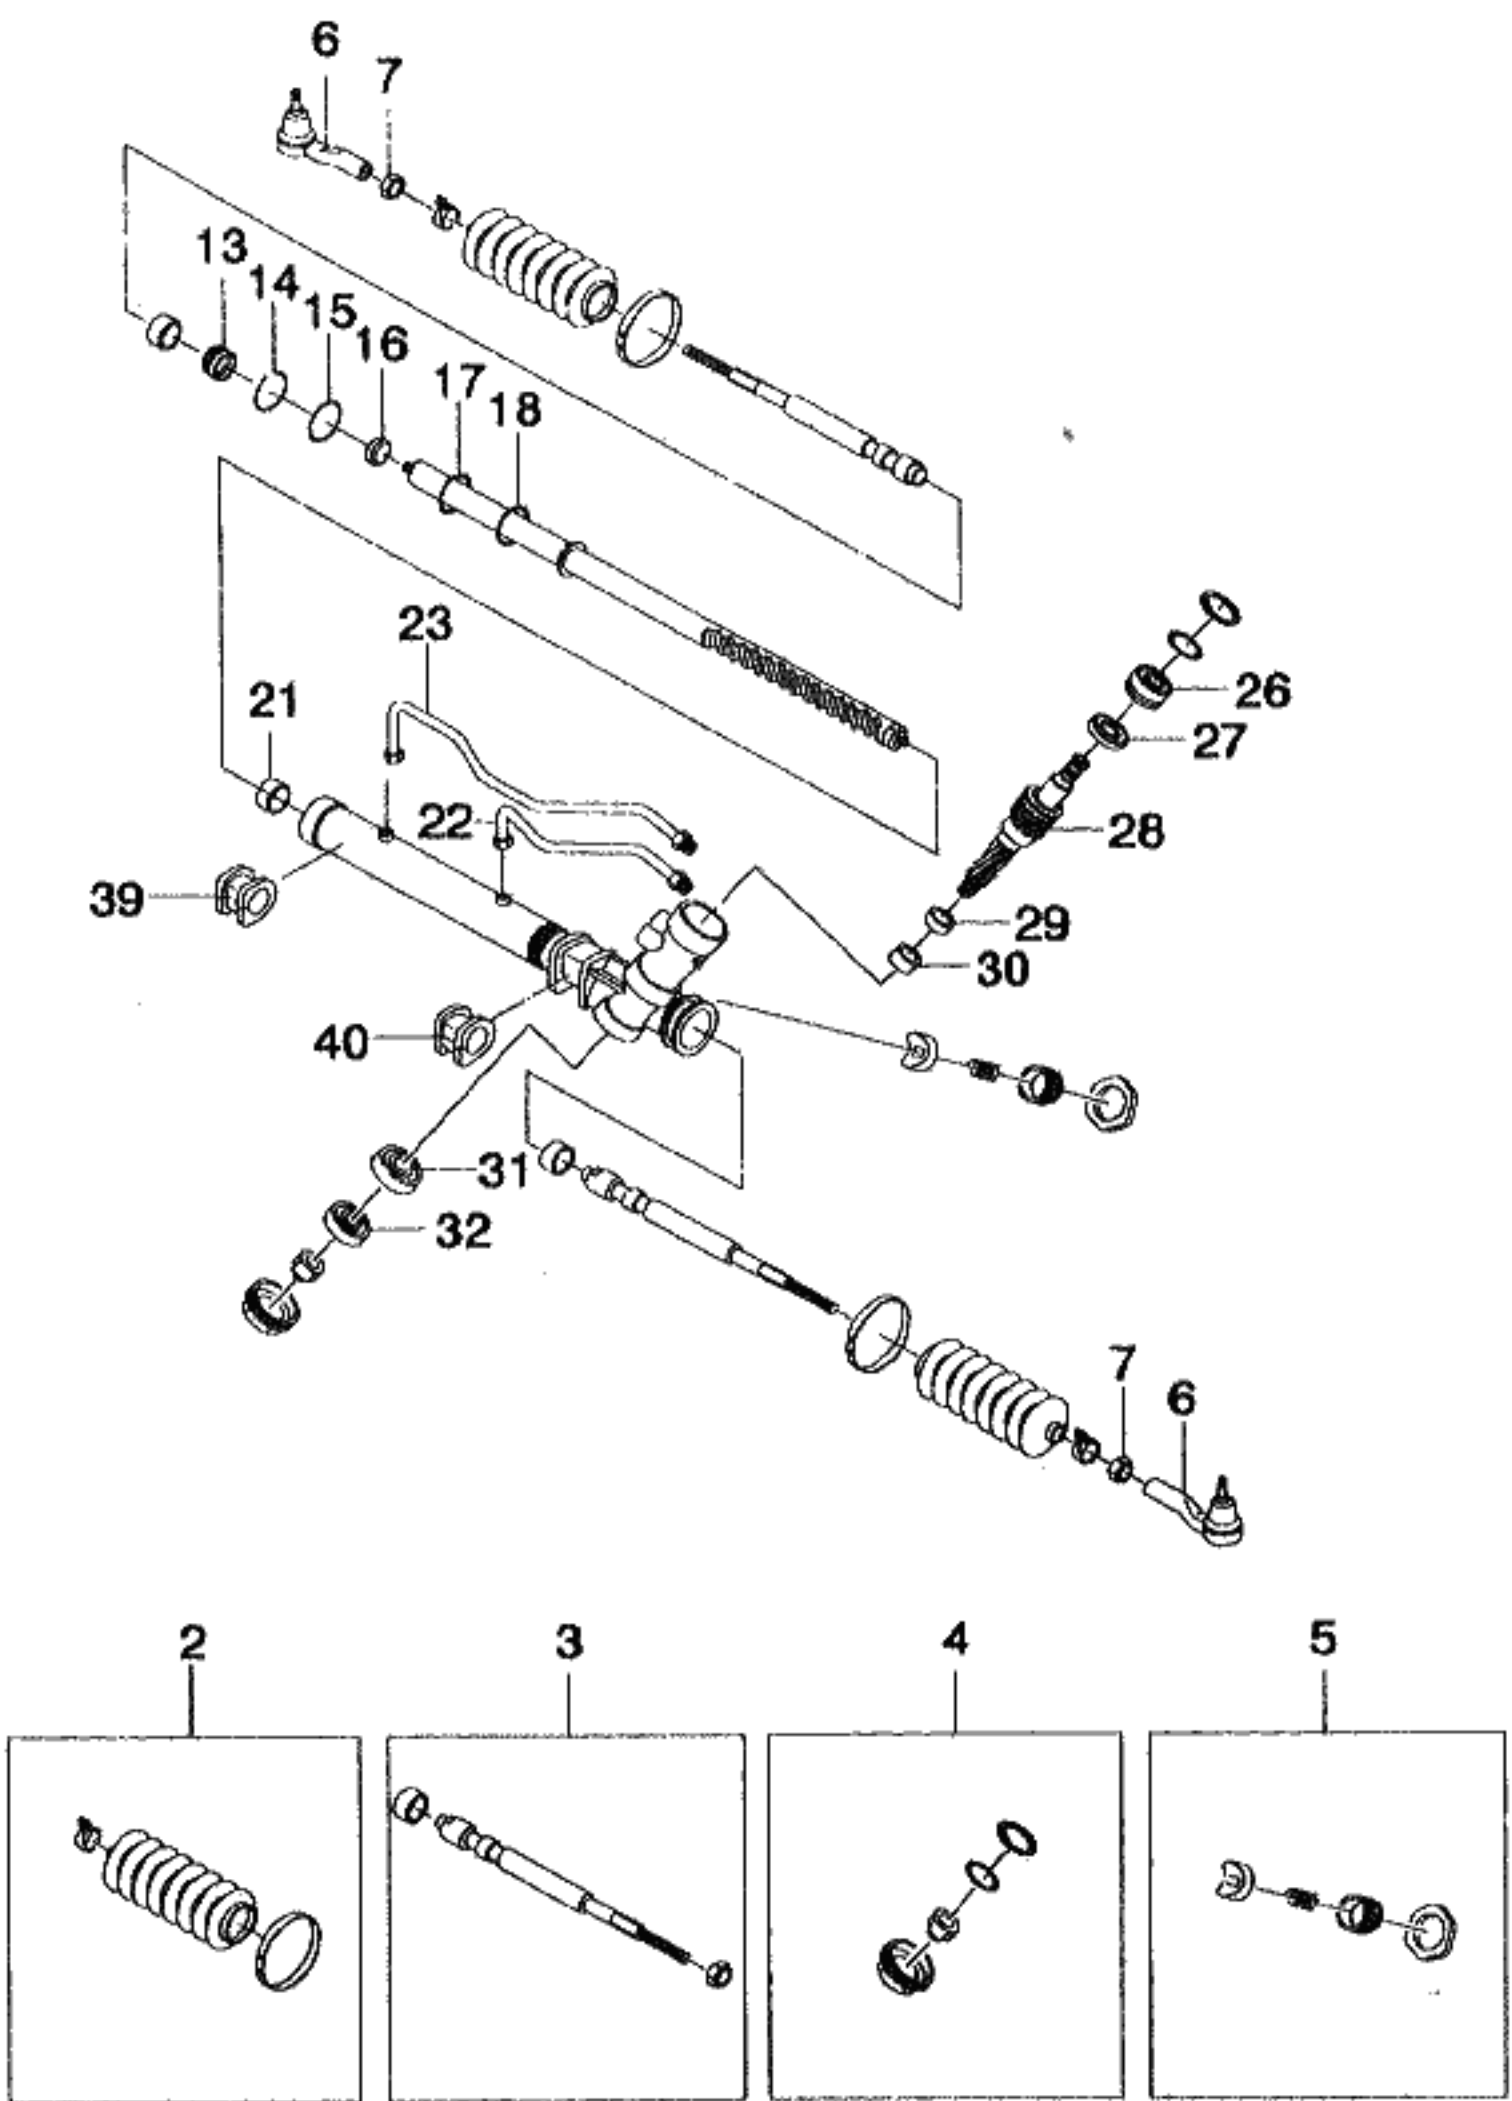


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T' Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	520349	.	S	S			1				
	[31]		(E) BEARING-PINION (D) KUGELLAGER				(F) ROULEMENT (S) CONJINETE				
	520336	.	S	S			1				
	[32]		(E) RING-RETAINING (D) RING, HALTER				(F) ANNEAU-DE RETENTION (S) ANILLO-RETENEDOR				
	520769	.	S	S			1				
	[39]		(E) GROMMET (D) ÖSE				(F) VIROLE (S) AISLANTE				
	520721	.	S	S			1				
	[40]		(E) GROMMET (D) ÖSE				(F) VIROLE (S) AISLANTE				
	520934	.	S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

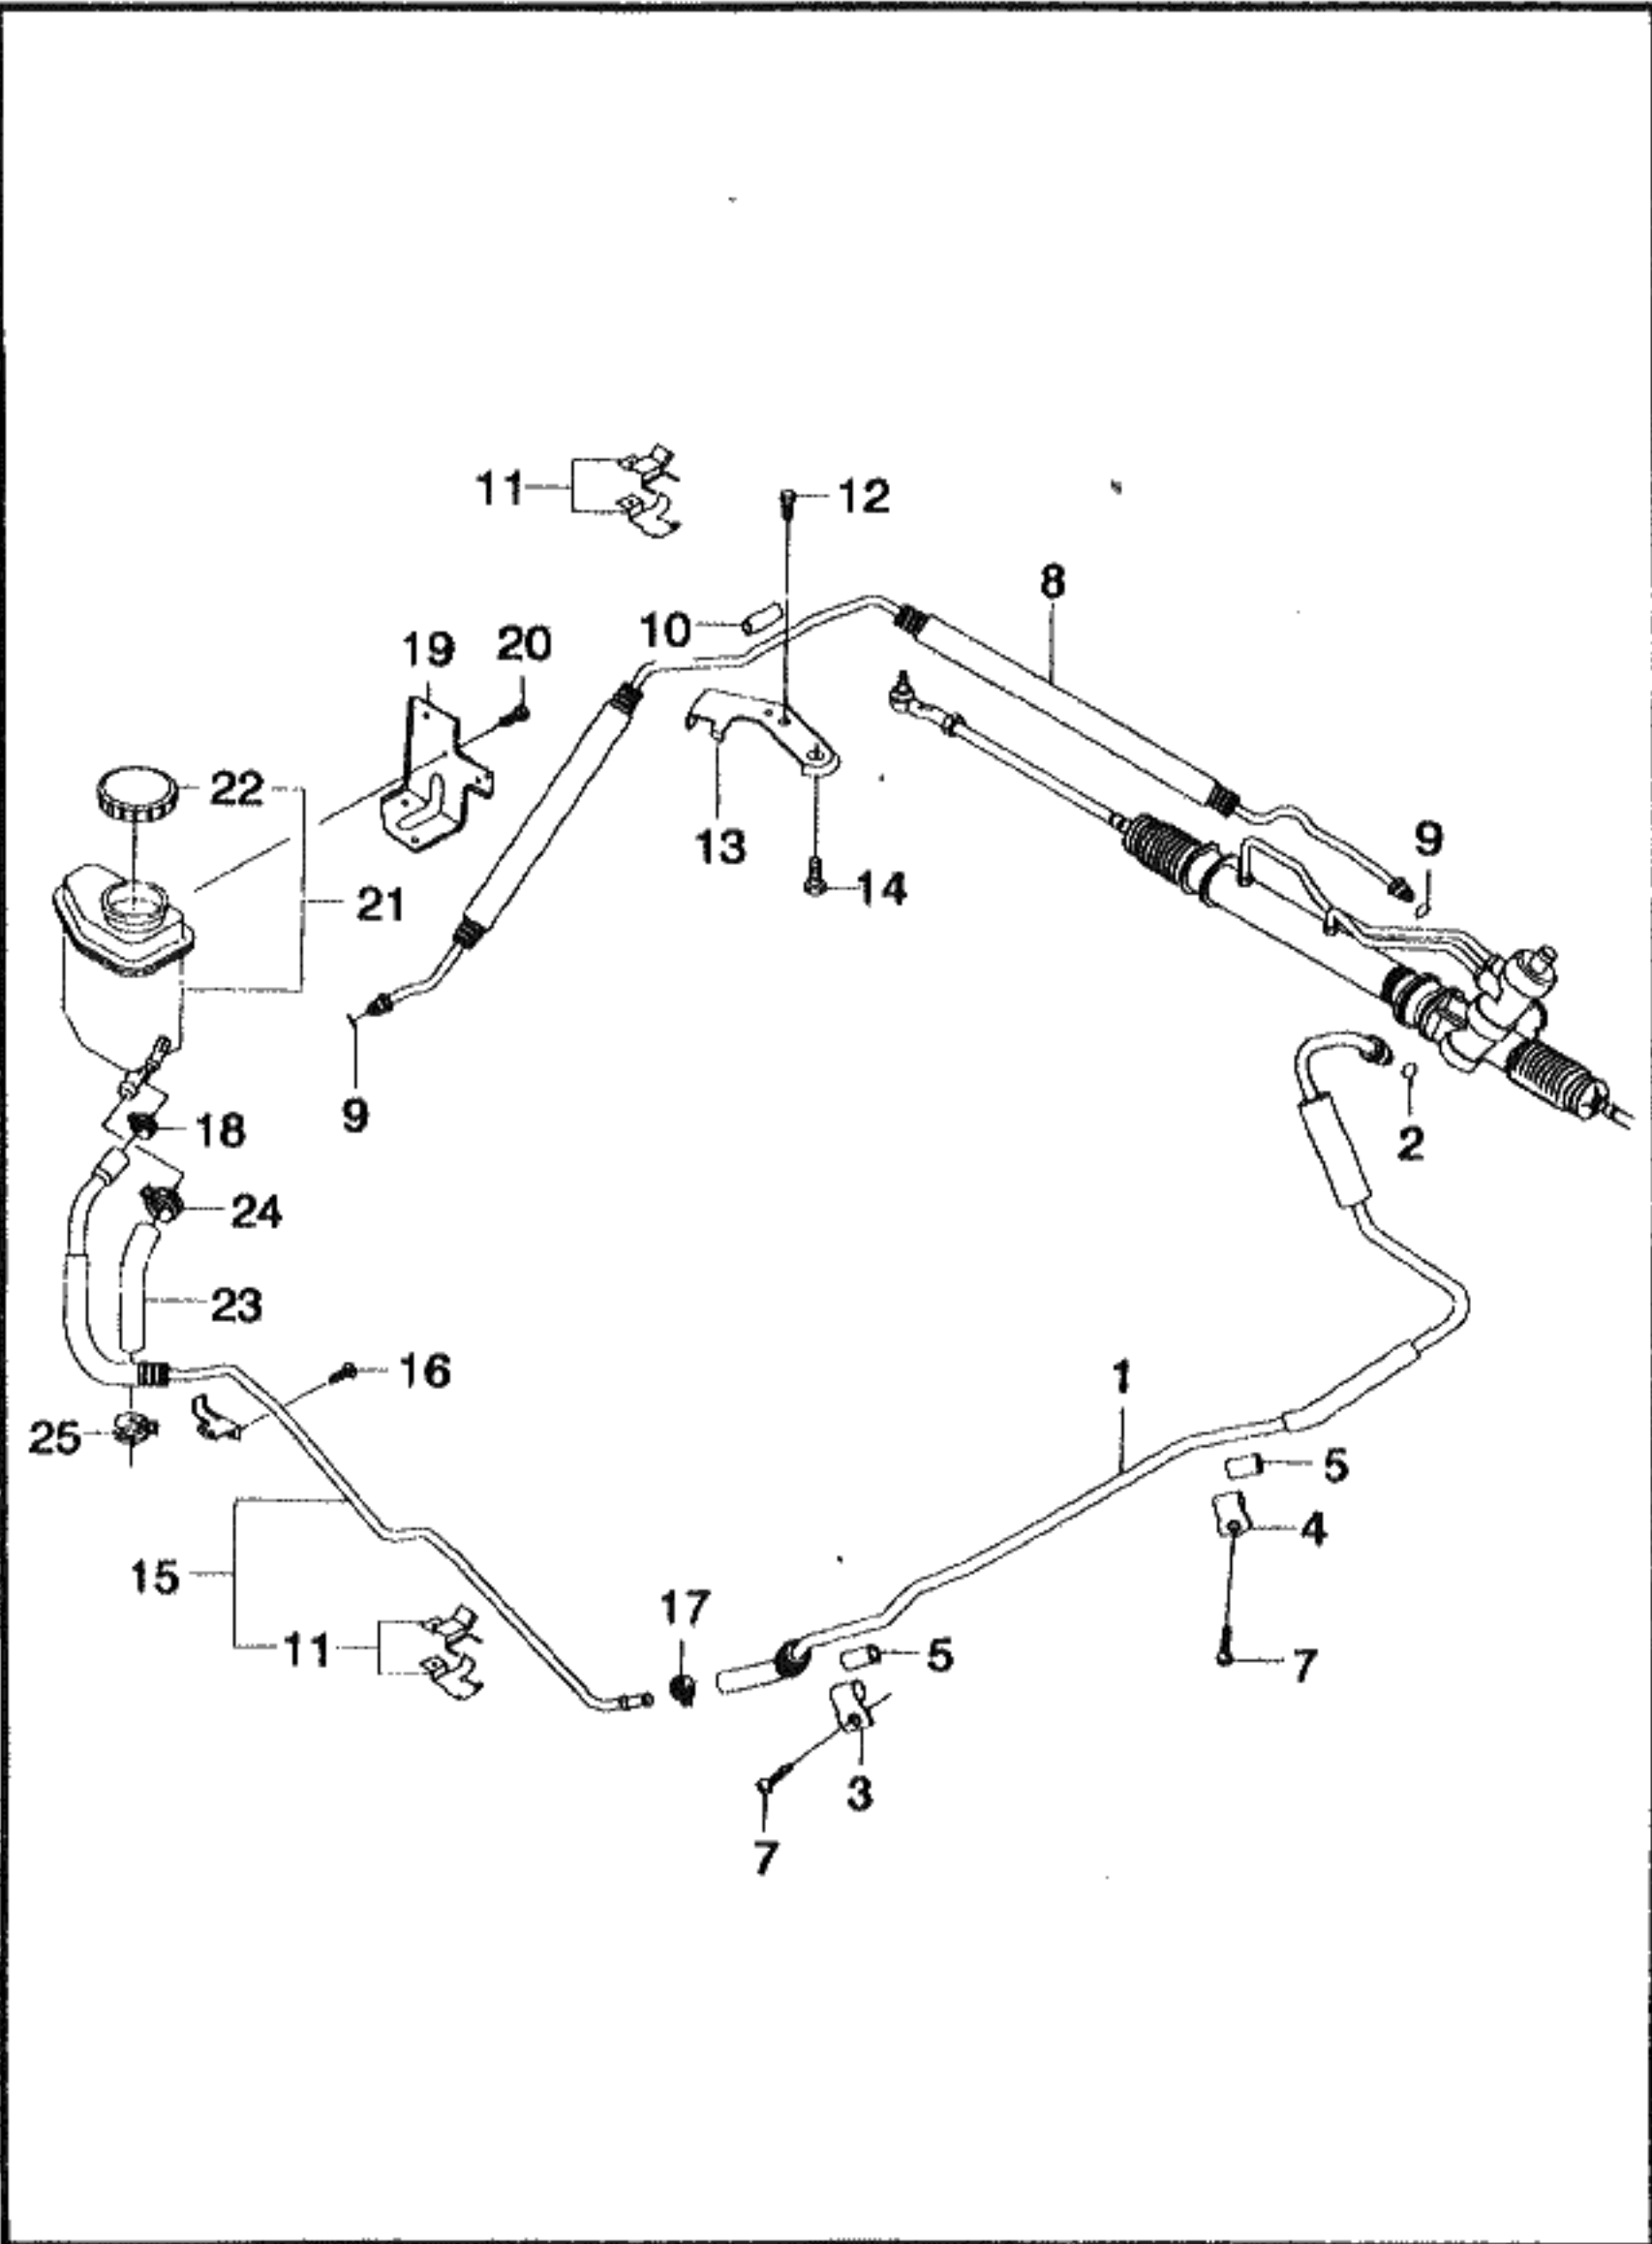


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96205810	(E)PIPE A-RETURN FLOW,GEAR (D)ROHR,RÜCK-FLUß					1			INCL.#2~5	
	[02] 09280-07001	(E)O RING (D)O RING					1				
	[03] 96234145	(E)CLAMP (D)KLAMMER					1				
	[04] 96234146	(E)CLAMP (D)KLAMMER					1				
	[05] 09308-10006	(E)GROMMET (D)ÖSE					2				
	[07] 03110-48133	(E)SCREW-TAPPING (D)SCHRAUBE					2				
	[08] 96253801 96253802	(E)HOSE A-ELASTIC (D)SCHLAUCH,GUMMI					1 1			INCL.#9~11 INCL.#9~11	LN LS
	[09] 09280-07001	(E)O RING (D)O RING					2				
	[10] 96234131	(E)GROMMET (D)ÖSE					1				
	[11]	(E)CLAMP (D)KLAMMER									
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

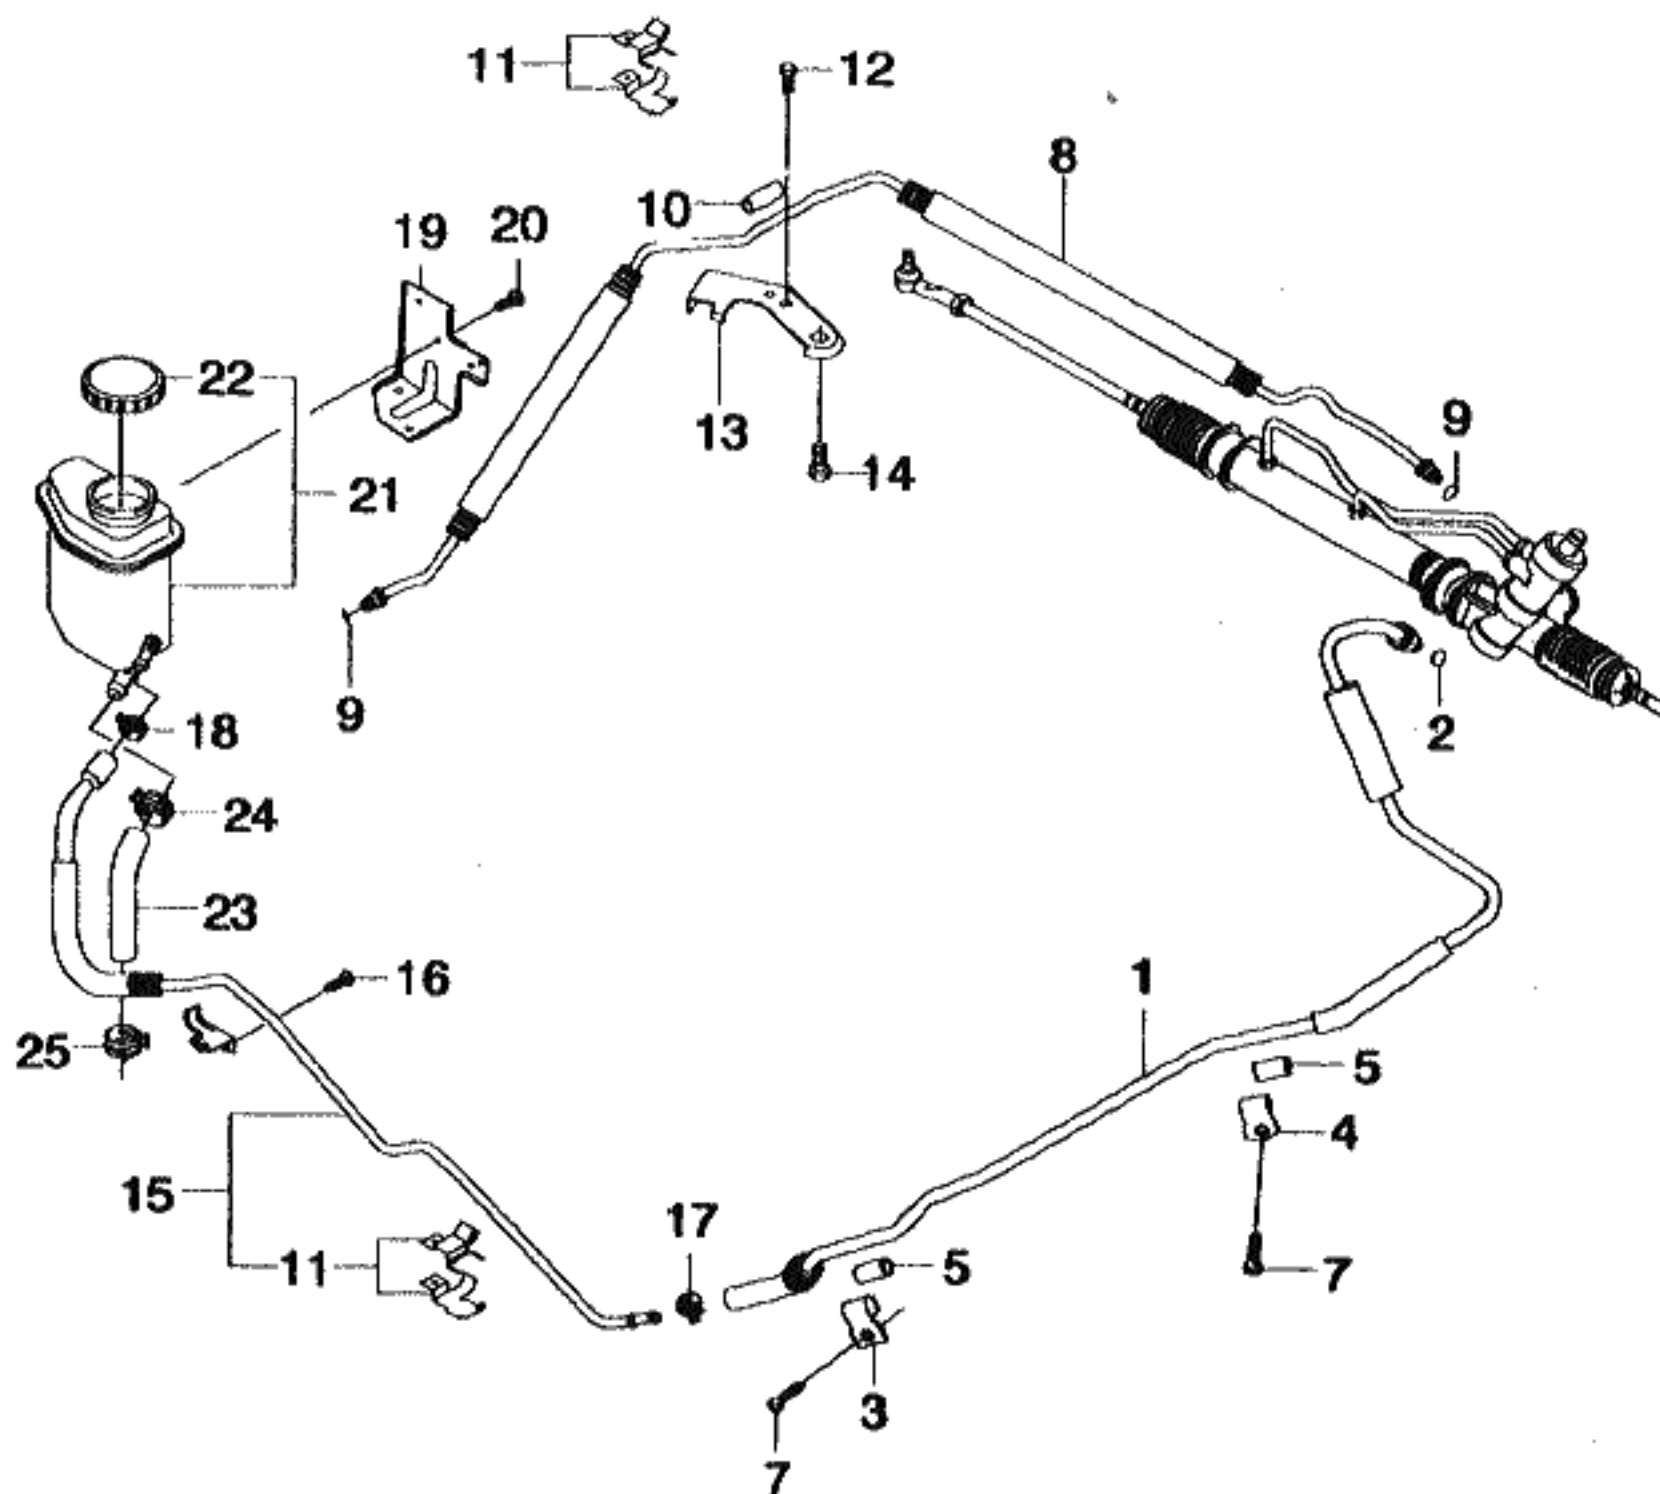


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96234138	.	S	S			1	970731		UPPER	
	96253800	.	S	S			1	970731		LOWER	
O	96253820	.	S	S			1	970801		UNITED	
	[12]		(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO				
	01517-06103	.	S	S			1				
	[13]		(E)BRACKET A-P/STRG PIPE (D)TRÄGER				(F)SUPPORT (S)SOPORTE				
	96253799	.	S	.			1				
	96253798	.	O	S	&L88		1				
	[14]		(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO				
	09103-08006	.	S	.			1				
	[15]		(E)HOSE-RTN FLOW,RESERVOIR (D)SCHLAUCH,BEHÄLTER				(F)TUYAU-RESERVOIR (S)MANGUERA-RESERVA				
	96205811	.	S	S			1				
	[16]		(E)SCREW-CR MACHINE (D)SCHRAUBE				(F)VIS (S)TORNILLO				
	02116-06103	.	S	S			2				
	[17]		(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA				
	09401-15403	.	S	S			1				
	[18]		(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA				
	09401-17401	.	S	S			1				
	[19]		(E)BRACKET A-OIL,RESERVOIR (D)TRÄGER				(F)SUPPORT (S)SOPORTE				
	96205832	.	S	S			1				
	[20]		(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

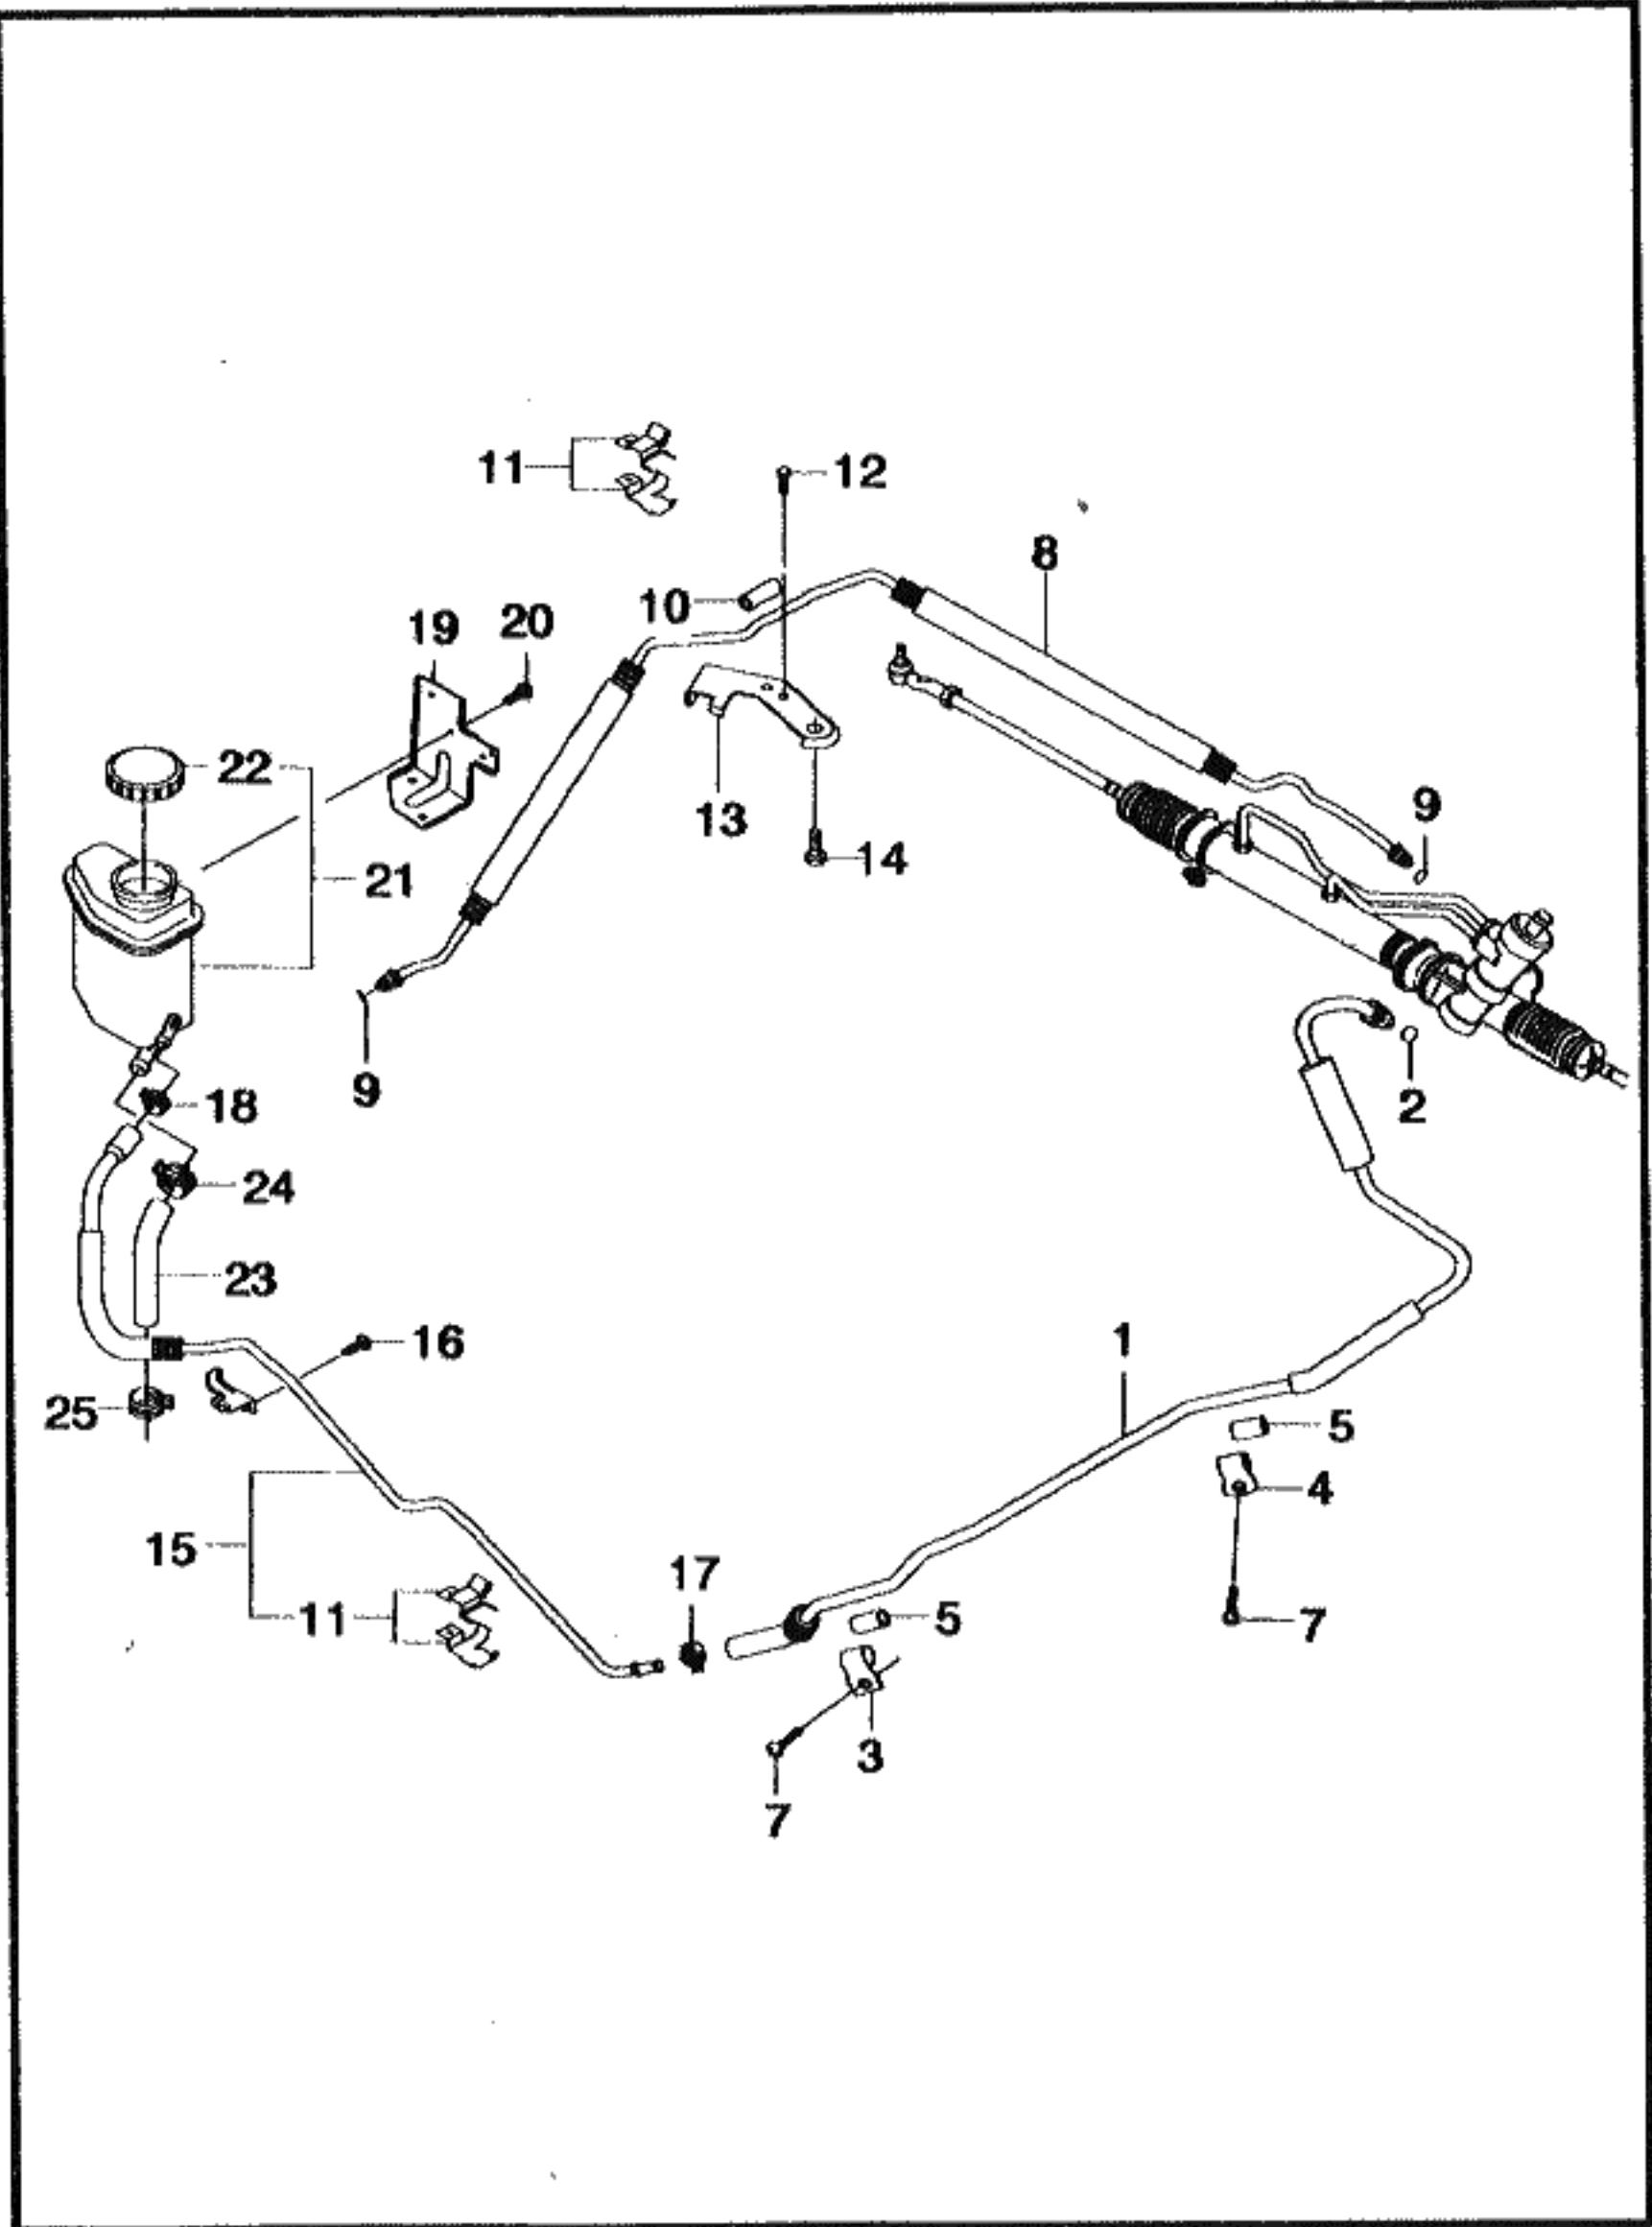

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	02647-06165	.	S	S			2					
	[21]		(E)RESERVOIR A-OIL,PWR STRG (D)BEHÄLTER,ÖL					(F)RESERVOIR-HUILE (S)RESERVA-ACEITE				
	96205833	.	S	S			1					
	[22]		(E)CAP-OIL,RESERVOIR,P/STRG (D)DECKEL,ÖL-BEHÄLTER					(F)CHAPEAU-RESERVOIR D'HUILE (S)TAPA-RESERVA DE ACEITE				
	96304395	.	S	S			1					
	[23]		(E)HOSE A-SUCTION LINE,PUMP (D)SCHLAUCH,SAUGLEITUNG					(F)TUYAU (S)MANGUERA-LINEA DE SUCCION				
	96205806	.	S	S			1					
	[24]		(E)CLIP (D)KLEMME					(F)ATTACHE (S)GRAPA				
	09401-21401	.	S	S			1					
	[25]		(E)CLIP (D)KLEMME					(F)ATTACHE (S)GRAPA				
	09401-21401	.	S	S			1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

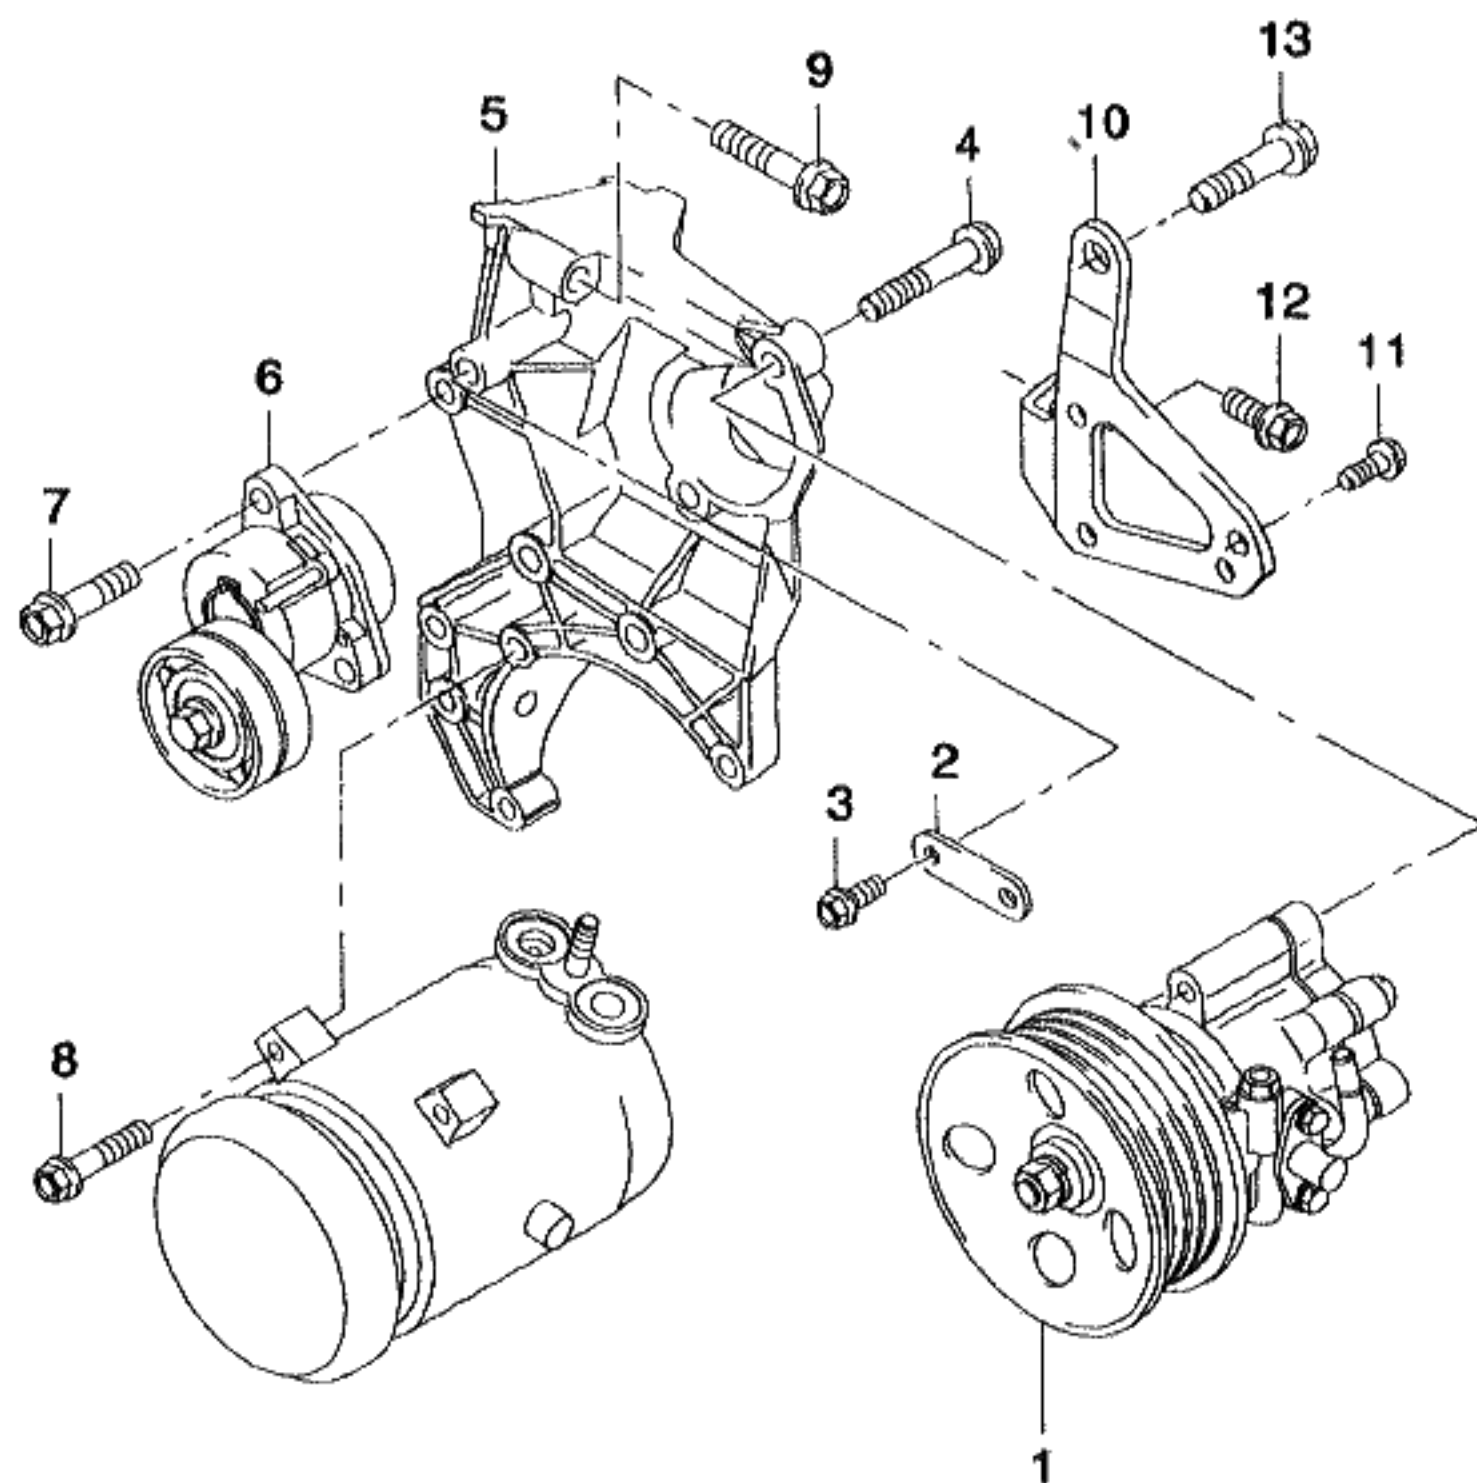


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)PUMP A-POWER STEERING (D)PUMPE,EINHEIT					(F)POMPE-UNITE (S)BOMBA-UNIDAD				
	96215322	.	S	.			1				
	96205874	.	.	S			1	970601			
	○ SK-53502	.	.	S			1	970602	970714		
	○ 96253825	.	.	S			1	970715			
	[02]	(E)BRACKET-P/STRG PUMP (D)TRÄGER					(F)SUPPORT (S)SOPORTE				
	96221420	.	S	S			1				
	[03]	(E)BOLT-FLANGE (D)SCHRAUBE					(F)BOULON (S)PERNO				
	01510-08163	.	S	S			2				
	[04]	(E)BOLT-FLANGE (D)SCHRAUBE					(F)BOULON (S)PERNO				
	09103-08008	.	S	S			2	970601			
	○ 09103-08008	.	S	.			2	970602	970714		
	○ 96221431	.	.	S			2	970602	970714		
	○ 09103-08008	.	S	S			2	970715			
	[05]	(E)BRACKET-COMP & PUMP (D)TRÄGER					(F)SUPPORT (S)SOPORTE				
	96184912	.	S	S			1				
	[06]	(E)TENSIONER A (D)SPANNUNG					(F)TENDEUR (S)TENSOR				
	96184932	.	S	S			1				
	[07]	(E)BOLT-FLANGE (D)SCHRAUBE					(F)BOULON (S)PERNO				
	09103-08007	.	S	S			2				
	[08]	(E)BOLT-FLANGE (D)SCHRAUBE					(F)BOULON (S)PERNO				
	09103-10022	.	S	S			1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

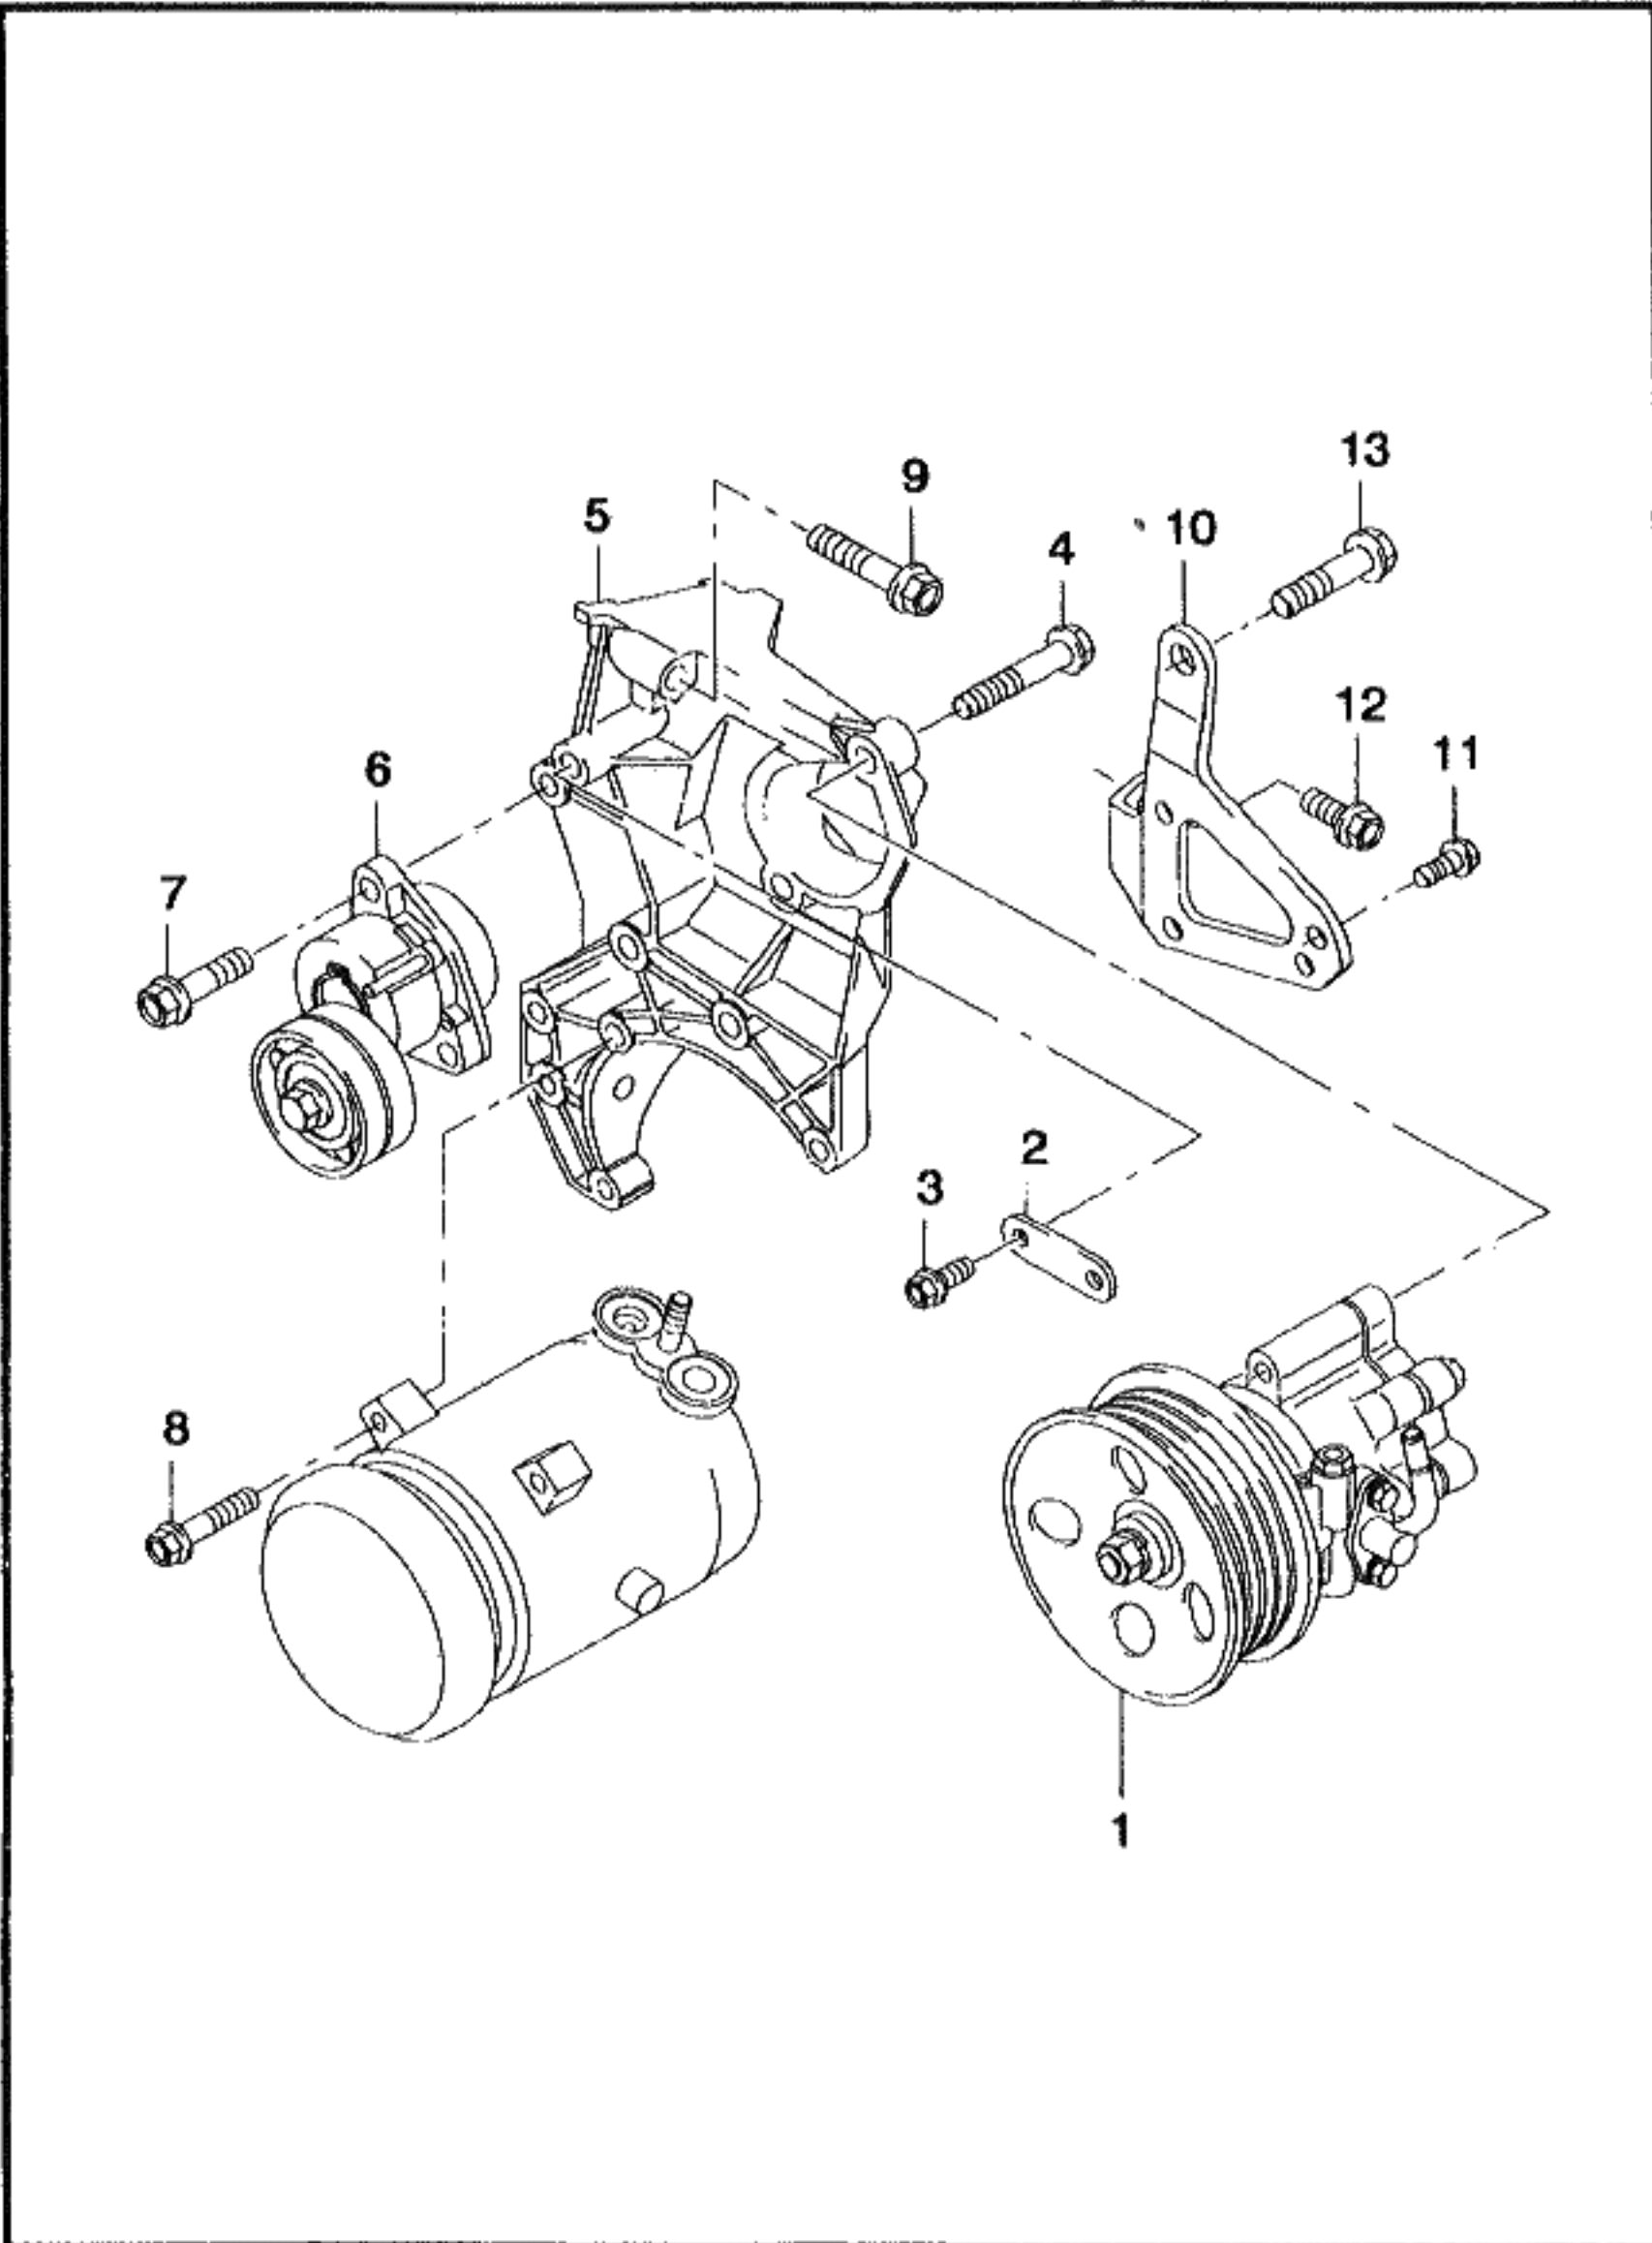


KEY NO.			PART NAME								
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	09103-10022	.	S	S			4				
	[09]		(E)BOLT-FLANGE			(F)BOULON					
			(D)SCHRAUBE			(S)PERNO					
	09103-10021	.	S	S			3				
	[10]		(E)BRACKET-COMPRESSOR,RR			(F)SUPPORT					
			(D)TRÄGER			(S)SOPORTE					
	96183952	.	S	S			1				
	[11]		(E)BOLT-HEXAGON			(F)BOULON					
			(D)SCHRAUBE			(S)PERNO					
	01130-08255	.	S	S			3				
	[12]		(E)BOLT-FLANGE			(F)BOULON					
			(D)SCHRAUBE			(S)PERNO					
	09103-10019	.	S	S			1				
	[13]		(E)BOLT-FLANGE			(F)BOULON					
			(D)SCHRAUBE			(S)PERNO					
	09103-10020	.	S	S			1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

5**ELECTRICAL EQUIPMENTS**

- 5110 FRONT LAMP
- 5140 REAR LAMP
- 5220 INSTRUMENT CLUSTER
- 5310 WINDSHIELD WIPER
- 5330 WINDSHIELD WASHER
- 5410 ELECTRICAL PARTS
- 5420 ANTENNA
- 5430 AUDIO SYSTEM
- 5440 CAR ALARM & ANTI-THEFT SYSTEM
- 5510 AIR BAG SYSTEM
- 5610 BATTERY
- 5620 FUSE & RELAY
- 5710 WIRING HARNESS

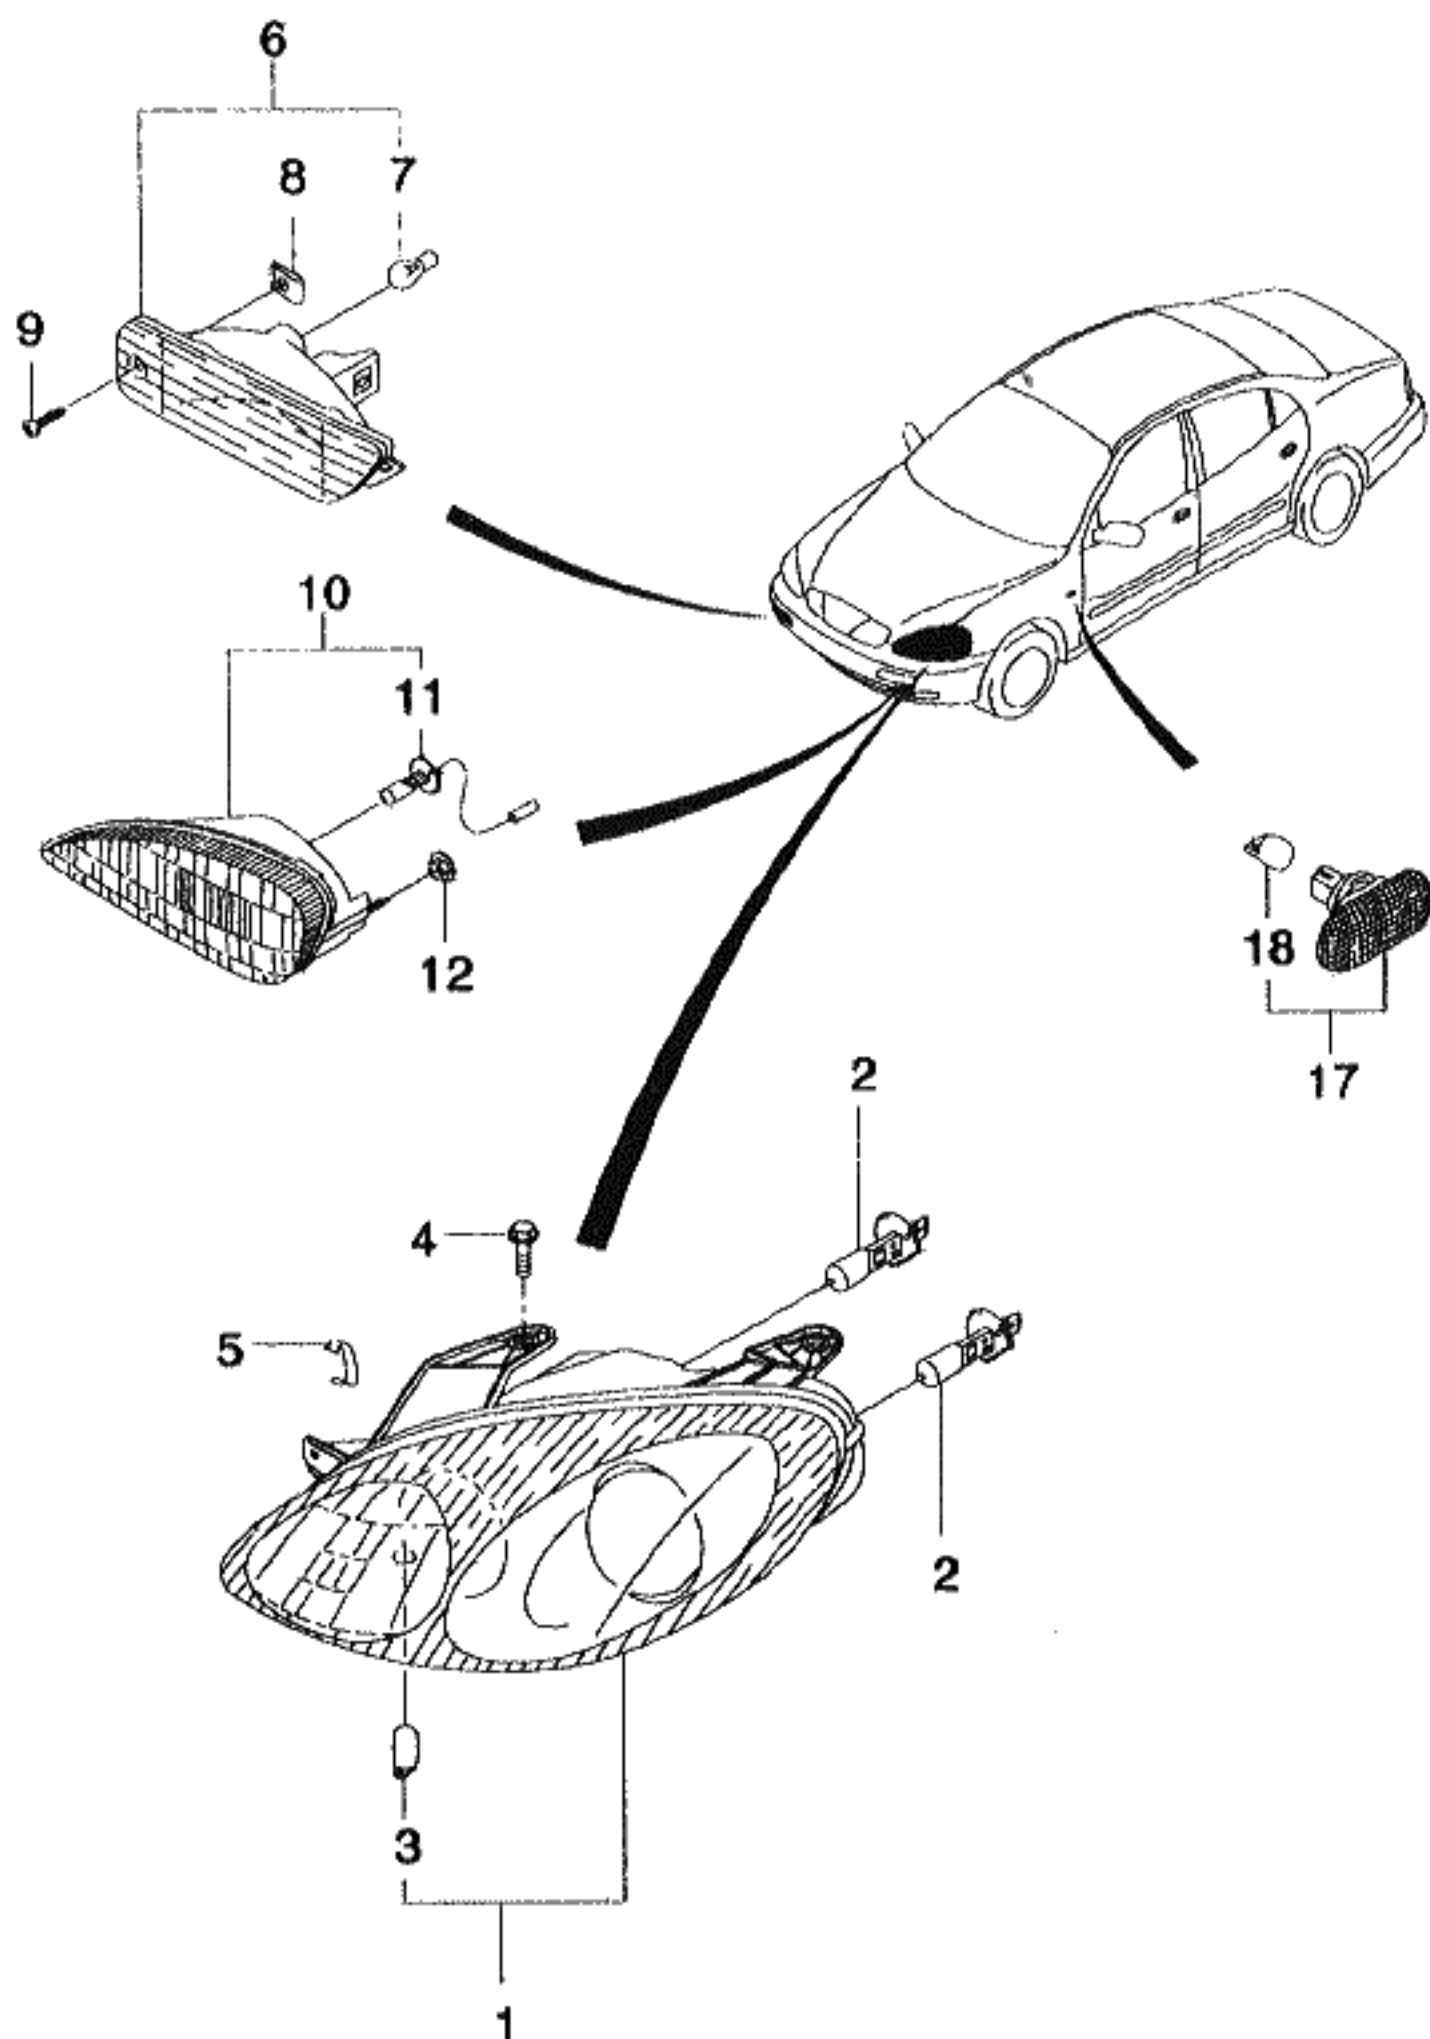


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)HEADLAMP A (D)LAMPE,SCHEINWERFER						(F)LAMPE-PHARE (S)LAMPARA-CABECERA				
	96206541	.	S	S				LH 1			DL	
	96206542	.	S	S				RH 1			DR	
	96206543	.	A	A	&HL4			LH 1			EL	
	96206544	.	A	A	&HL4			RH 1			ER	
	[02]	(E)BULB (D)BIRNE						(F)AMPOULE (S)BOMBILLA				
	05101-55003	.	S	S				4		12V,55W		
	[03]	(E)BULB (D)BIRNE						(F)AMPOULE (S)BOMBILLA				
	05302-05003	.	S	S				2		12V,5W		
	[04]	(E)BOLT-W/WASHER (D)SCHRAUBE						(F)BOULON (S)PERNO				
	09118-06006	.	S	S				6				
	[05]	(E)CLIP (D)KLEMME						(F)ATTACHE (S)GRAPA				
	09409-10303	.	S	S				2				
	[06]	(E)LAMP A-PARKING & TURN SIG (D)LAMPE,BLINK-SIGNAL						(F)LAMPE (S)LAMPARA-VOLTEAR				
	96206626	.	S	S				LH 1			VA	
	96206627	.	S	S				RH 1			VB	
	[07]	(E)BULB (D)BIRNE						(F)AMPOULE (S)BOMBILLA				
	05201-21003	.	S	S				2		12V,21W		
	[08]	(E)NUT-SPEED (D)MUTTER						(F)ECROU (S)TUERCA				
	09148-04010	.	S	S				2				
	[09]	(E)SCREW-TAPPING (D)SCHRAUBE						(F)VIS (S)TORNILLO				
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

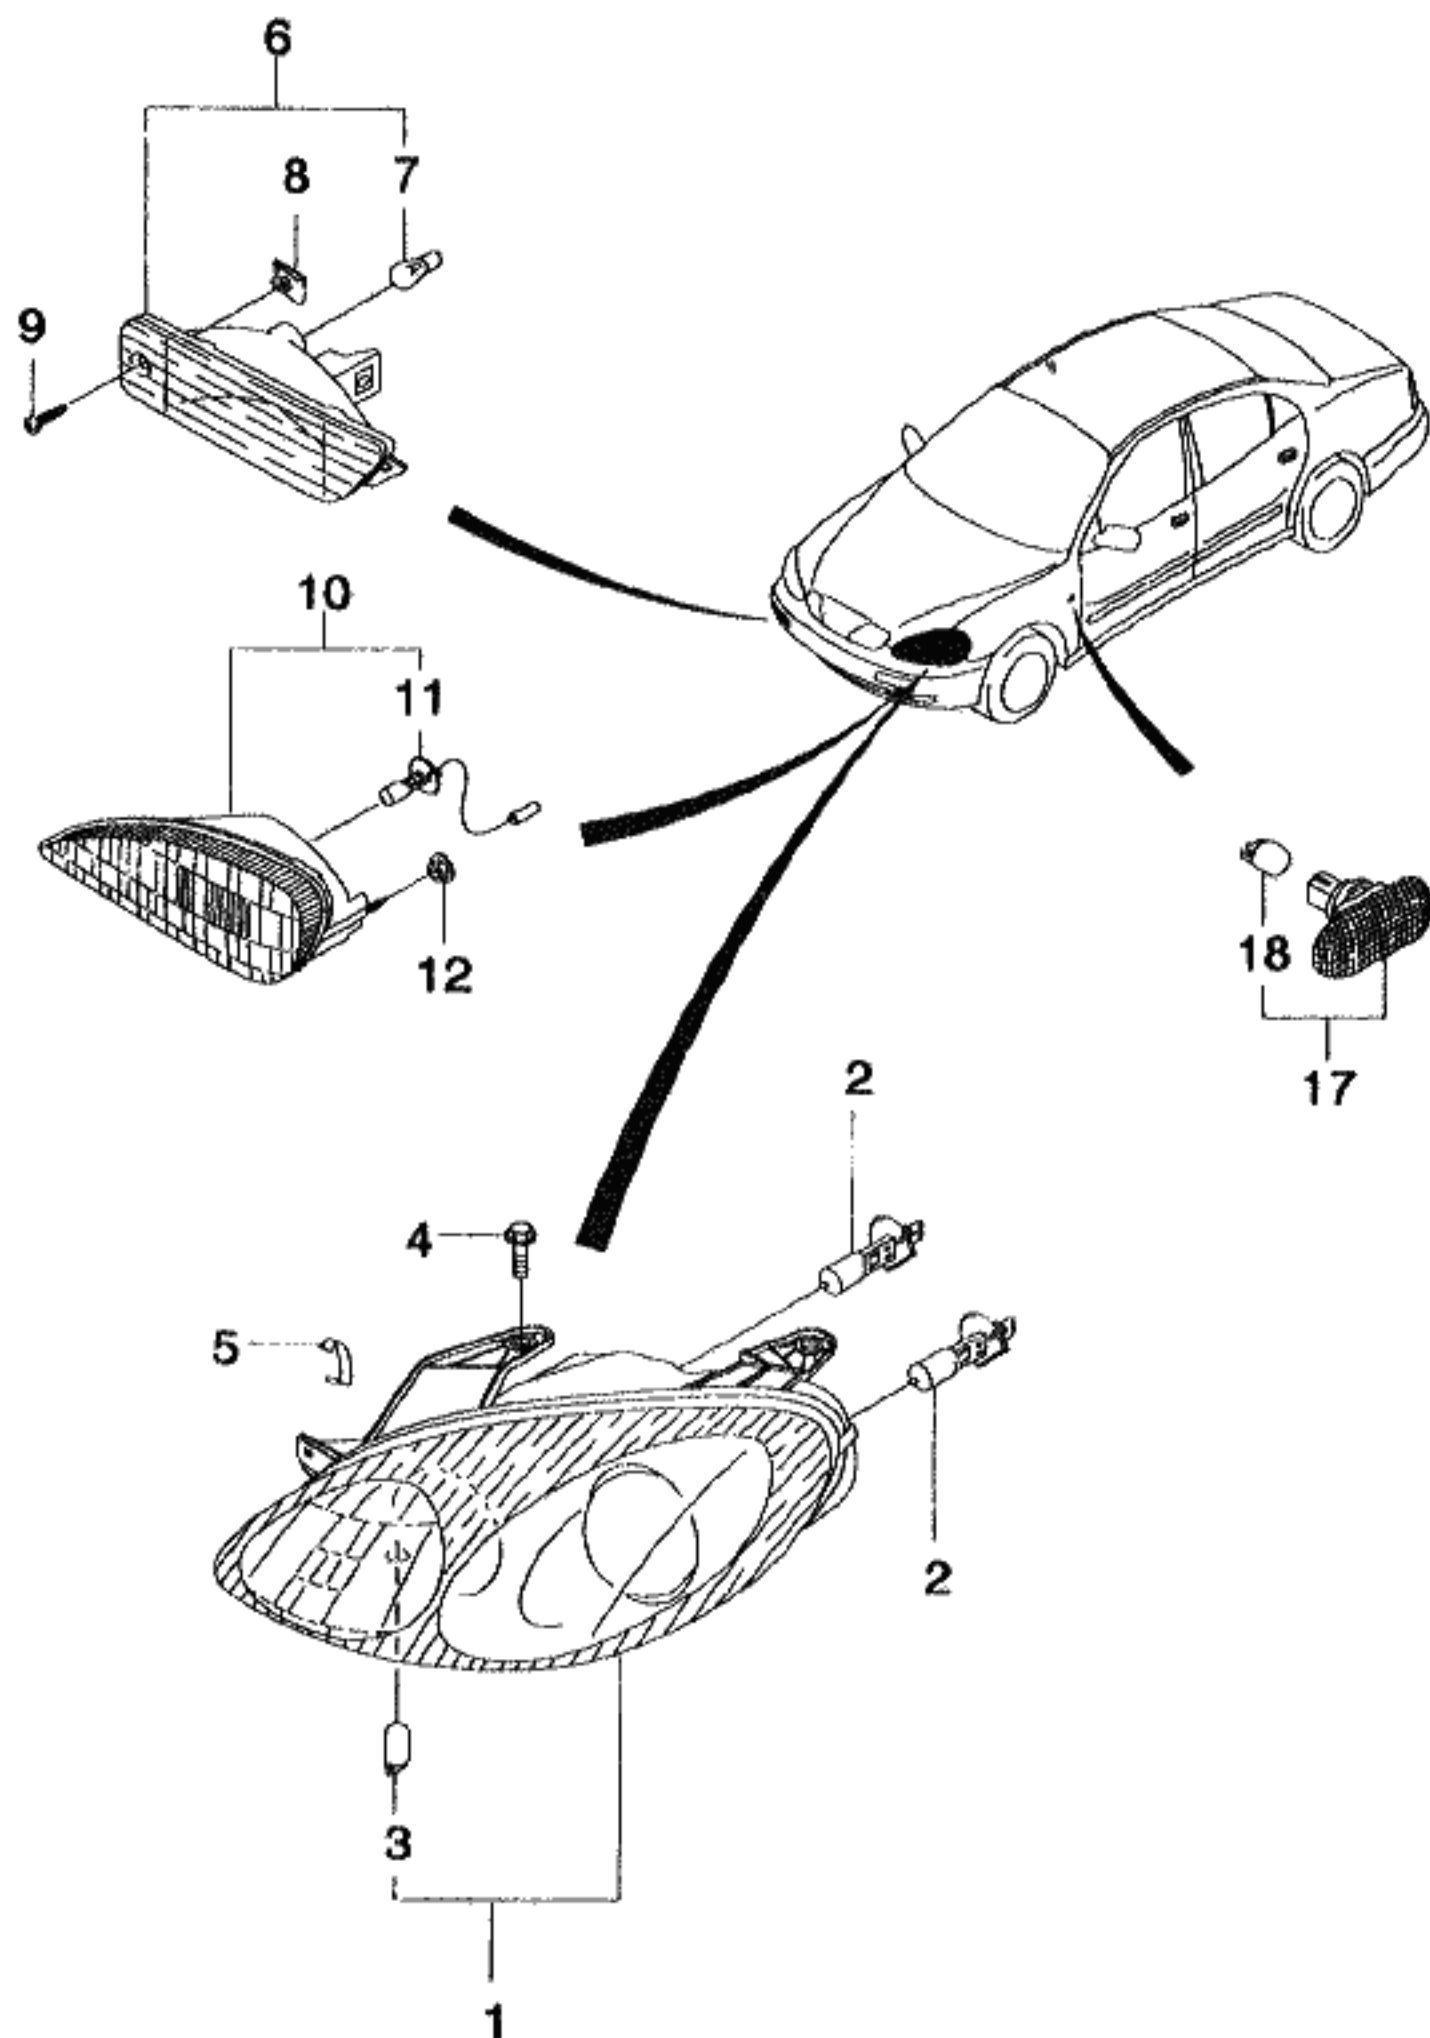


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09132-04007	.	S	S			2					
	[10]		(E) LAMP A-FOG				(F) LAMPE					
			(D) LAMPE, NEBEL				(S) LAMPARA-NEBLINA					
	96206601	.	O	S	&T96		LH 1				VE	
	96206602	.	O	S	&T96		RH 1				VF	
	[11]		(E) BULB				(F) AMPOULE					
			(D) BIRNE				(S) BOMBILLA					
	05103-55003	.	O	S	&T96		2			12V,55W		
	[12]		(E) NUT				(F) ECROU					
			(D) MUTTER				(S) TUERCA					
	09159-06011	.	O	S	&T96		4					
	[17]		(E) LAMP A-TURN SIGNAL, SIDE				(F) LAMPE					
			(D) LAMPE, BLINK-SIGNAL				(S) LAMPARA-VOLTEAR					
	96190579	.	S	S			2					
	[18]		(E) BULB				(F) AMPOULE					
			(D) BIRNE				(S) BOMBILLA					
	05302-05003	.	S	S			2			12V,5W		
LEVEL					T/A (TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

5140 REAR LAMP

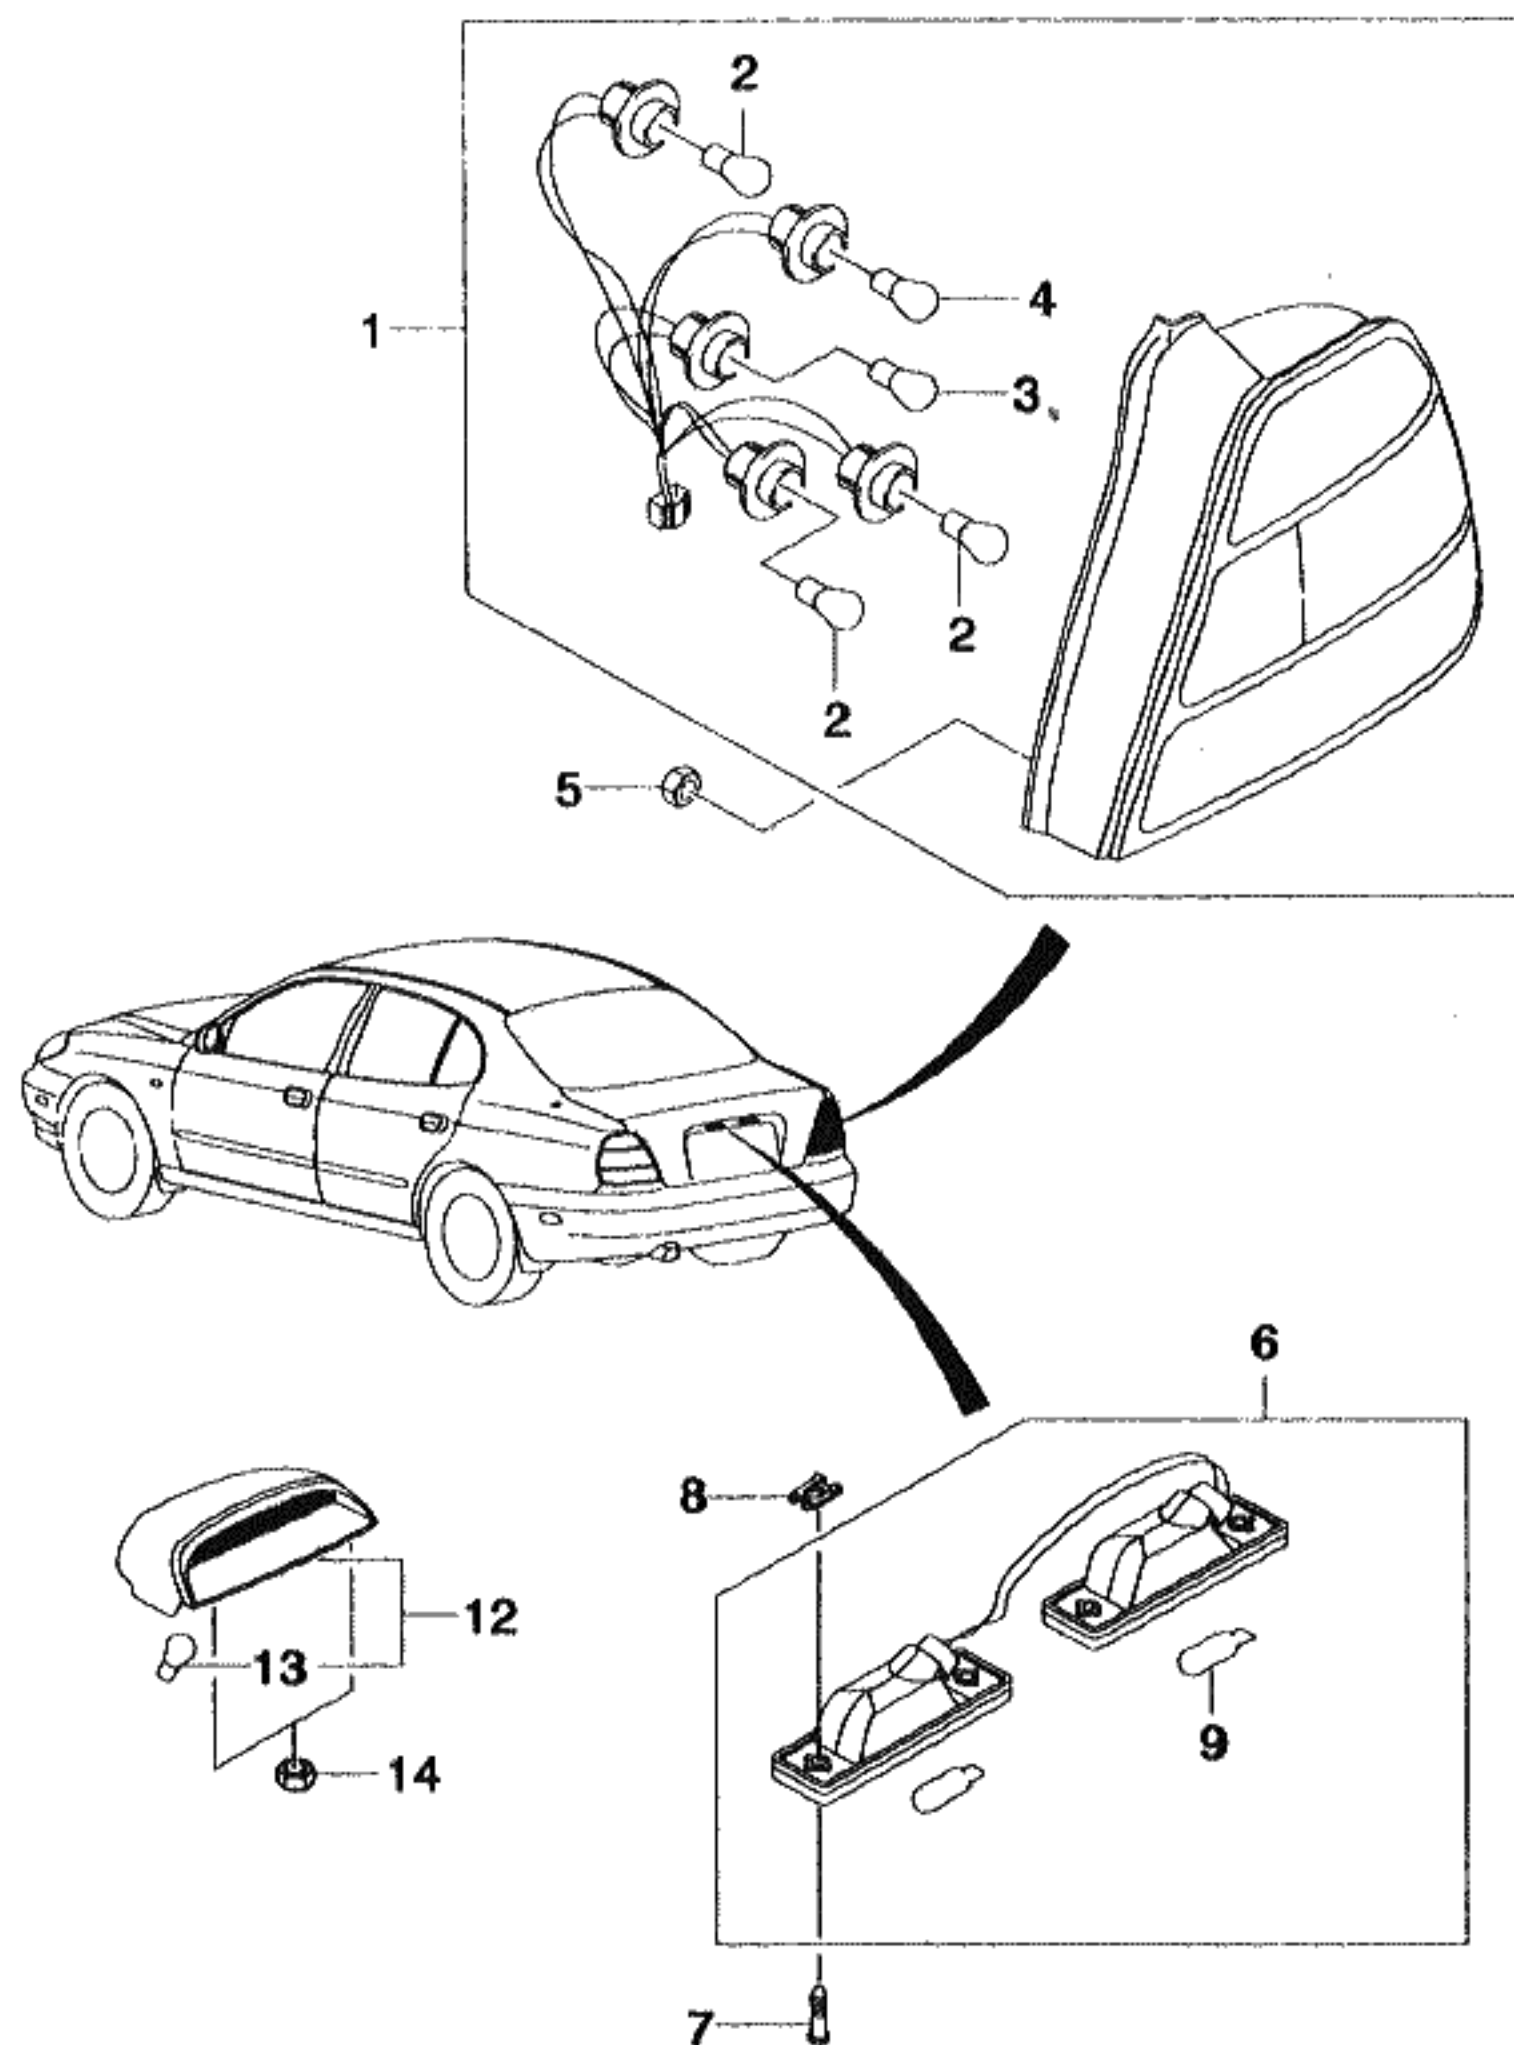


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) LAMP A-COMBINATION,RR (D) LAMPE,HINTERTEIL					(F) LAMPE-EXTREMITE ARRIERE (S) LAMPARA-COLA				
	96206580	.	S	S			LH 1				AL
	96206581	.	S	S			RH 1				AR
	96206578	.	A	A	&FL8		LH 1				EL
	96206579	.	A	A	&FL8		RH 1				ER
	[02]	(E) BULB (D) BIRNE					(F) AMPOULE (S) BOMBILLA				
	05232-27085	.	S	S			6			12V,27/8W	
	05202-21053	.	A	A	&FL8		4			12V,21/5W	
	[03]	(E) BULB (D) BIRNE					(F) AMPOULE (S) BOMBILLA				
	05231-27006	.	S	S			2			12V,27W	
	05201-21004	.	A	A	&FL8		2			12V,21W	
	[04]	(E) BULB (D) BIRNE					(F) AMPOULE (S) BOMBILLA				
	05231-27005	.	S	S			2			12V,27W	
	05201-21003	.	A	A	&FL8		4			12V,21W	
	[05]	(E) NUT-FLANGE (D) MUTTER					(F) ECROU (S) TUERCA				
	08316-25053	.	S	S			8				
	[06]	(E) LAMP A-LICENSE (D) LAMPE,NUMMERSCHILD					(F) LAMPE (S) LAMPARA-PLACA DE LICENCIA				LD
	96190751	.	S	S			1				
	[07]	(E) SCREW-TAPPING (D) SCHRAUBE					(F) VIS (S) TORNILLO				
	03110-42132	.	S	S			4				
	[08]	(E) NUT-SPEED (D) MUTTER					(F) ECROU (S) TUERCA				
	09148-04017	.	S	S			4				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

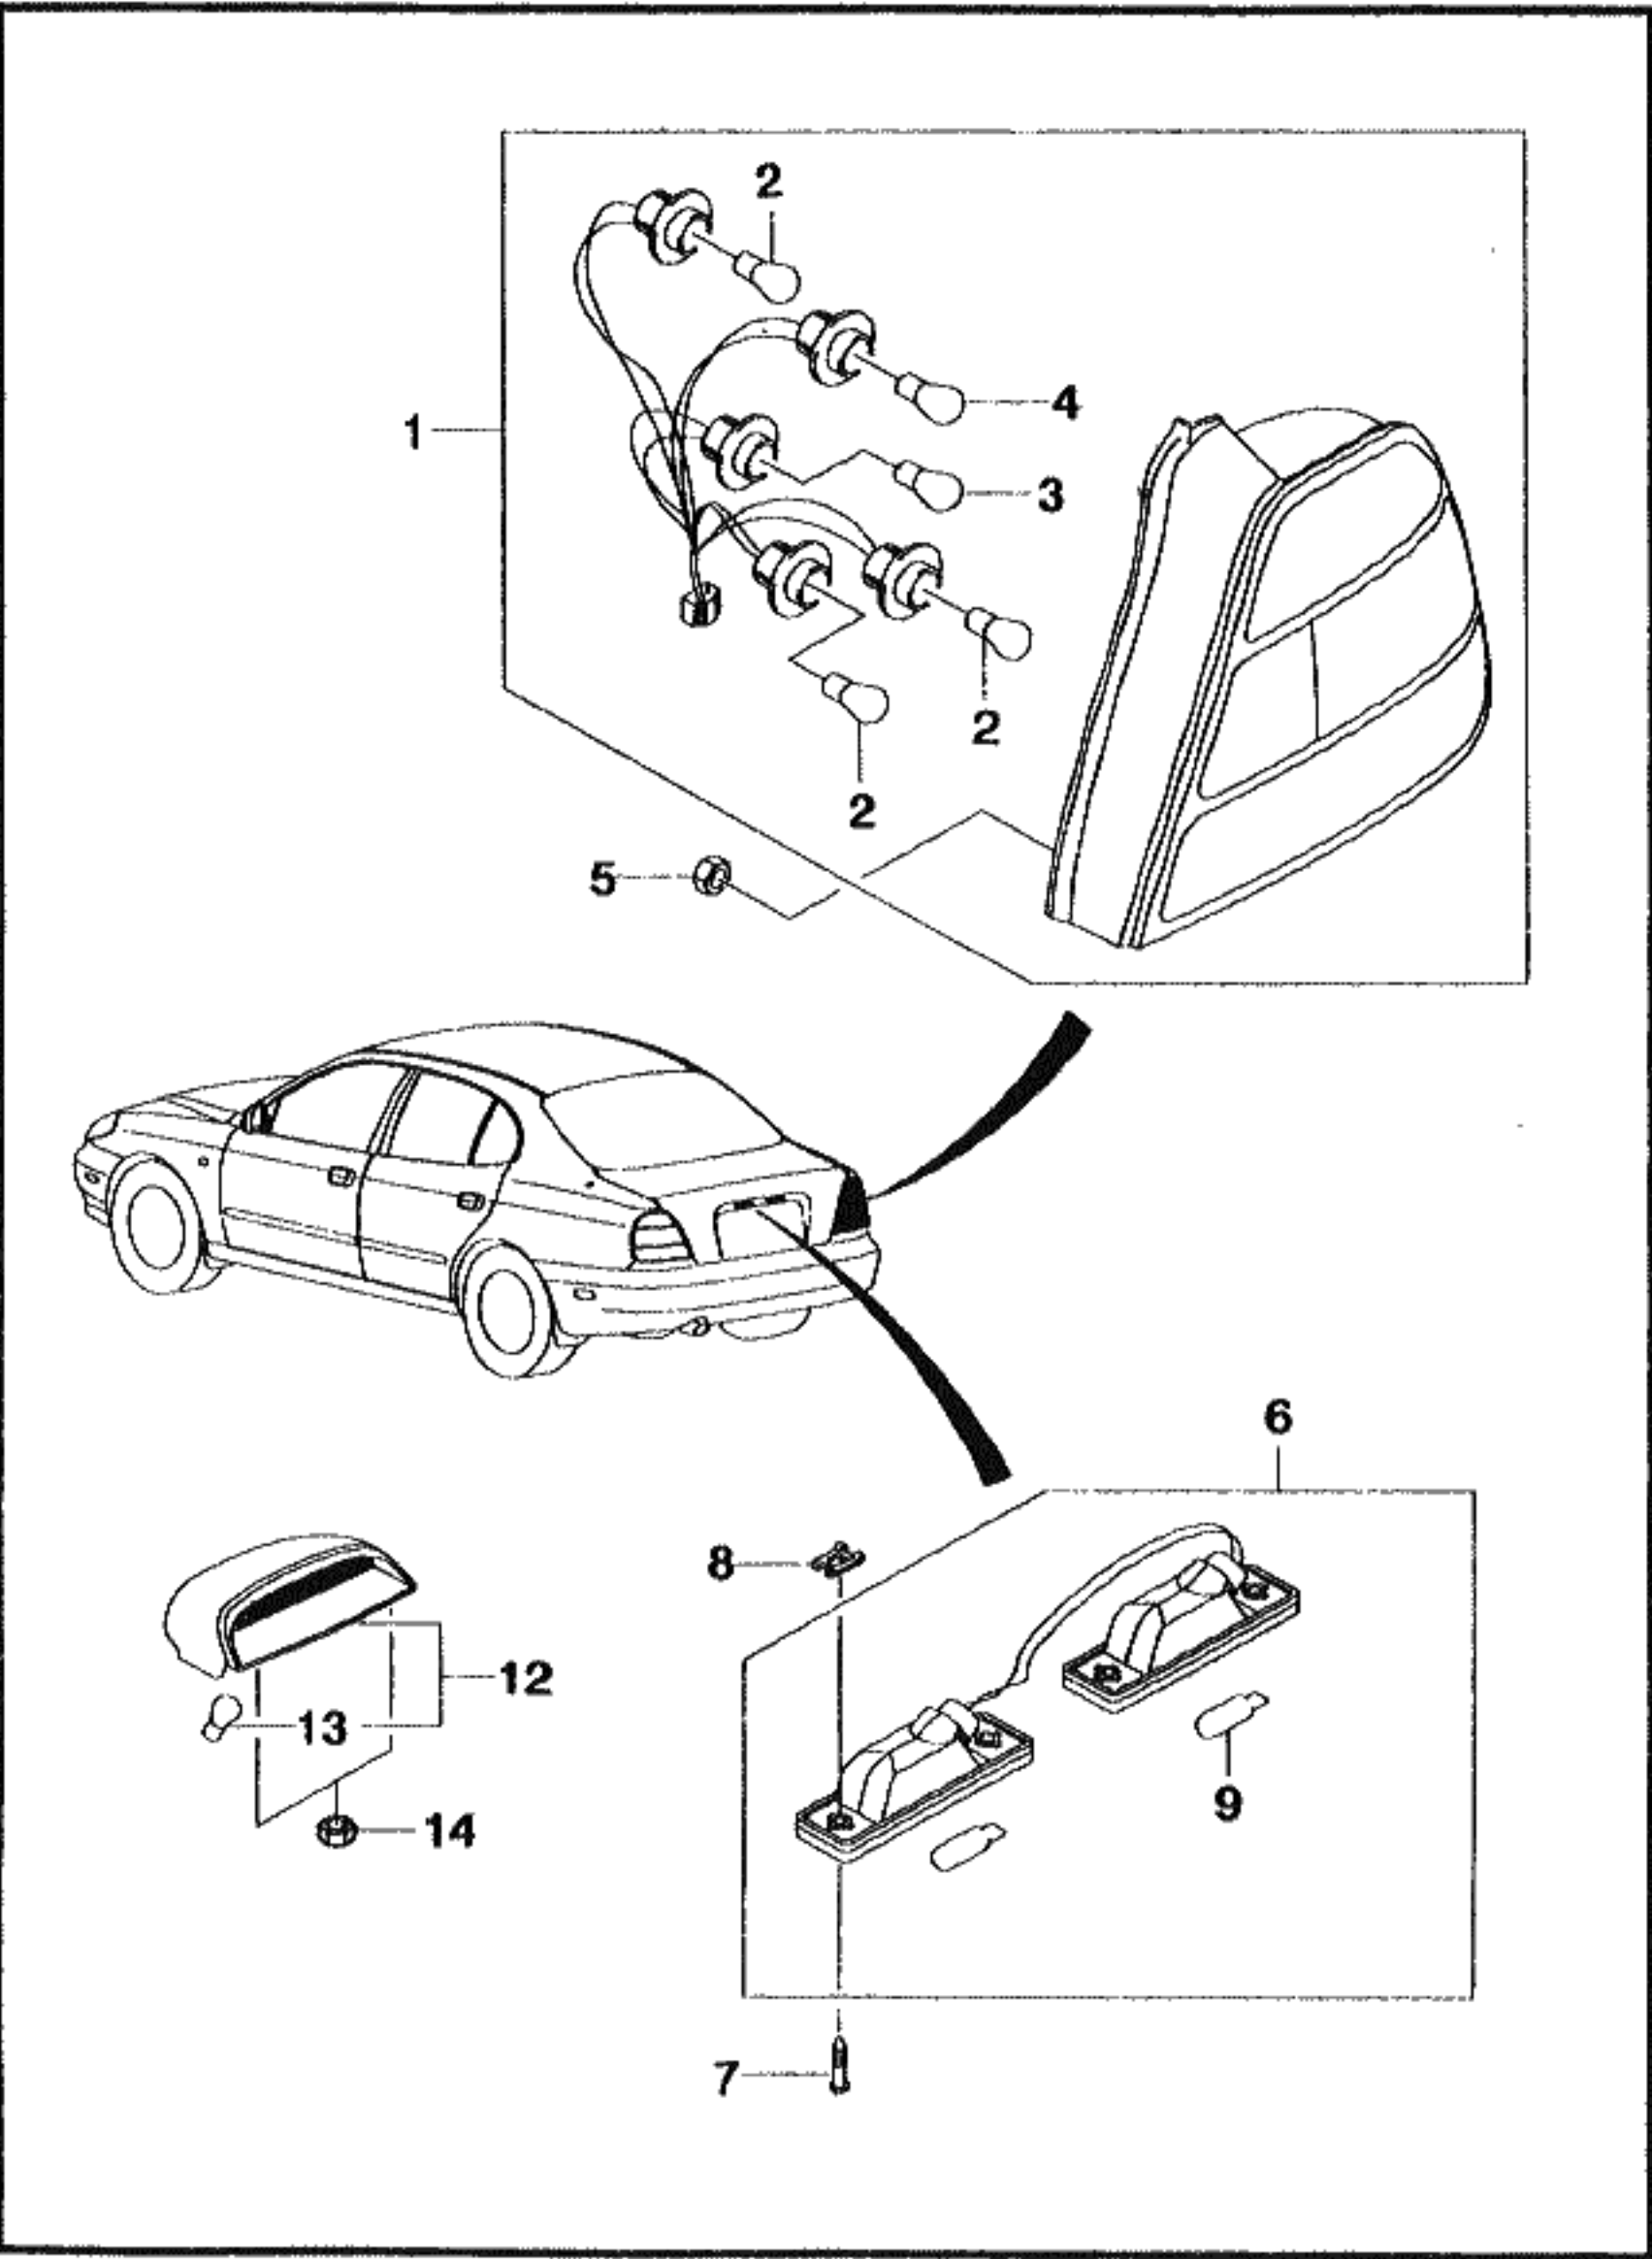


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[09] 05302-05003	(E)BULB (D)BIRNE S S					(F)AMPOULE (S)BOMBILLA 2			12V,55W	
	[12] 96206612	(E)LAMP A-CTR HIGH MTG STOP (D)LAMPE A A &T93					(F)LAMPE (S)LAMPARA 1				WA
	[13] 05201-21003	(E)BULB (D)BIRNE A A &T93					(F)AMPOULE (S)BOMBILLA 2			12V,27W	
	[14] 08361-25053	(E)NUT-W/WASHER (D)MUTTER A A &T93					(F)ECROU (S)TUERCA 2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

5220 INSTRUMENT CLUSTER

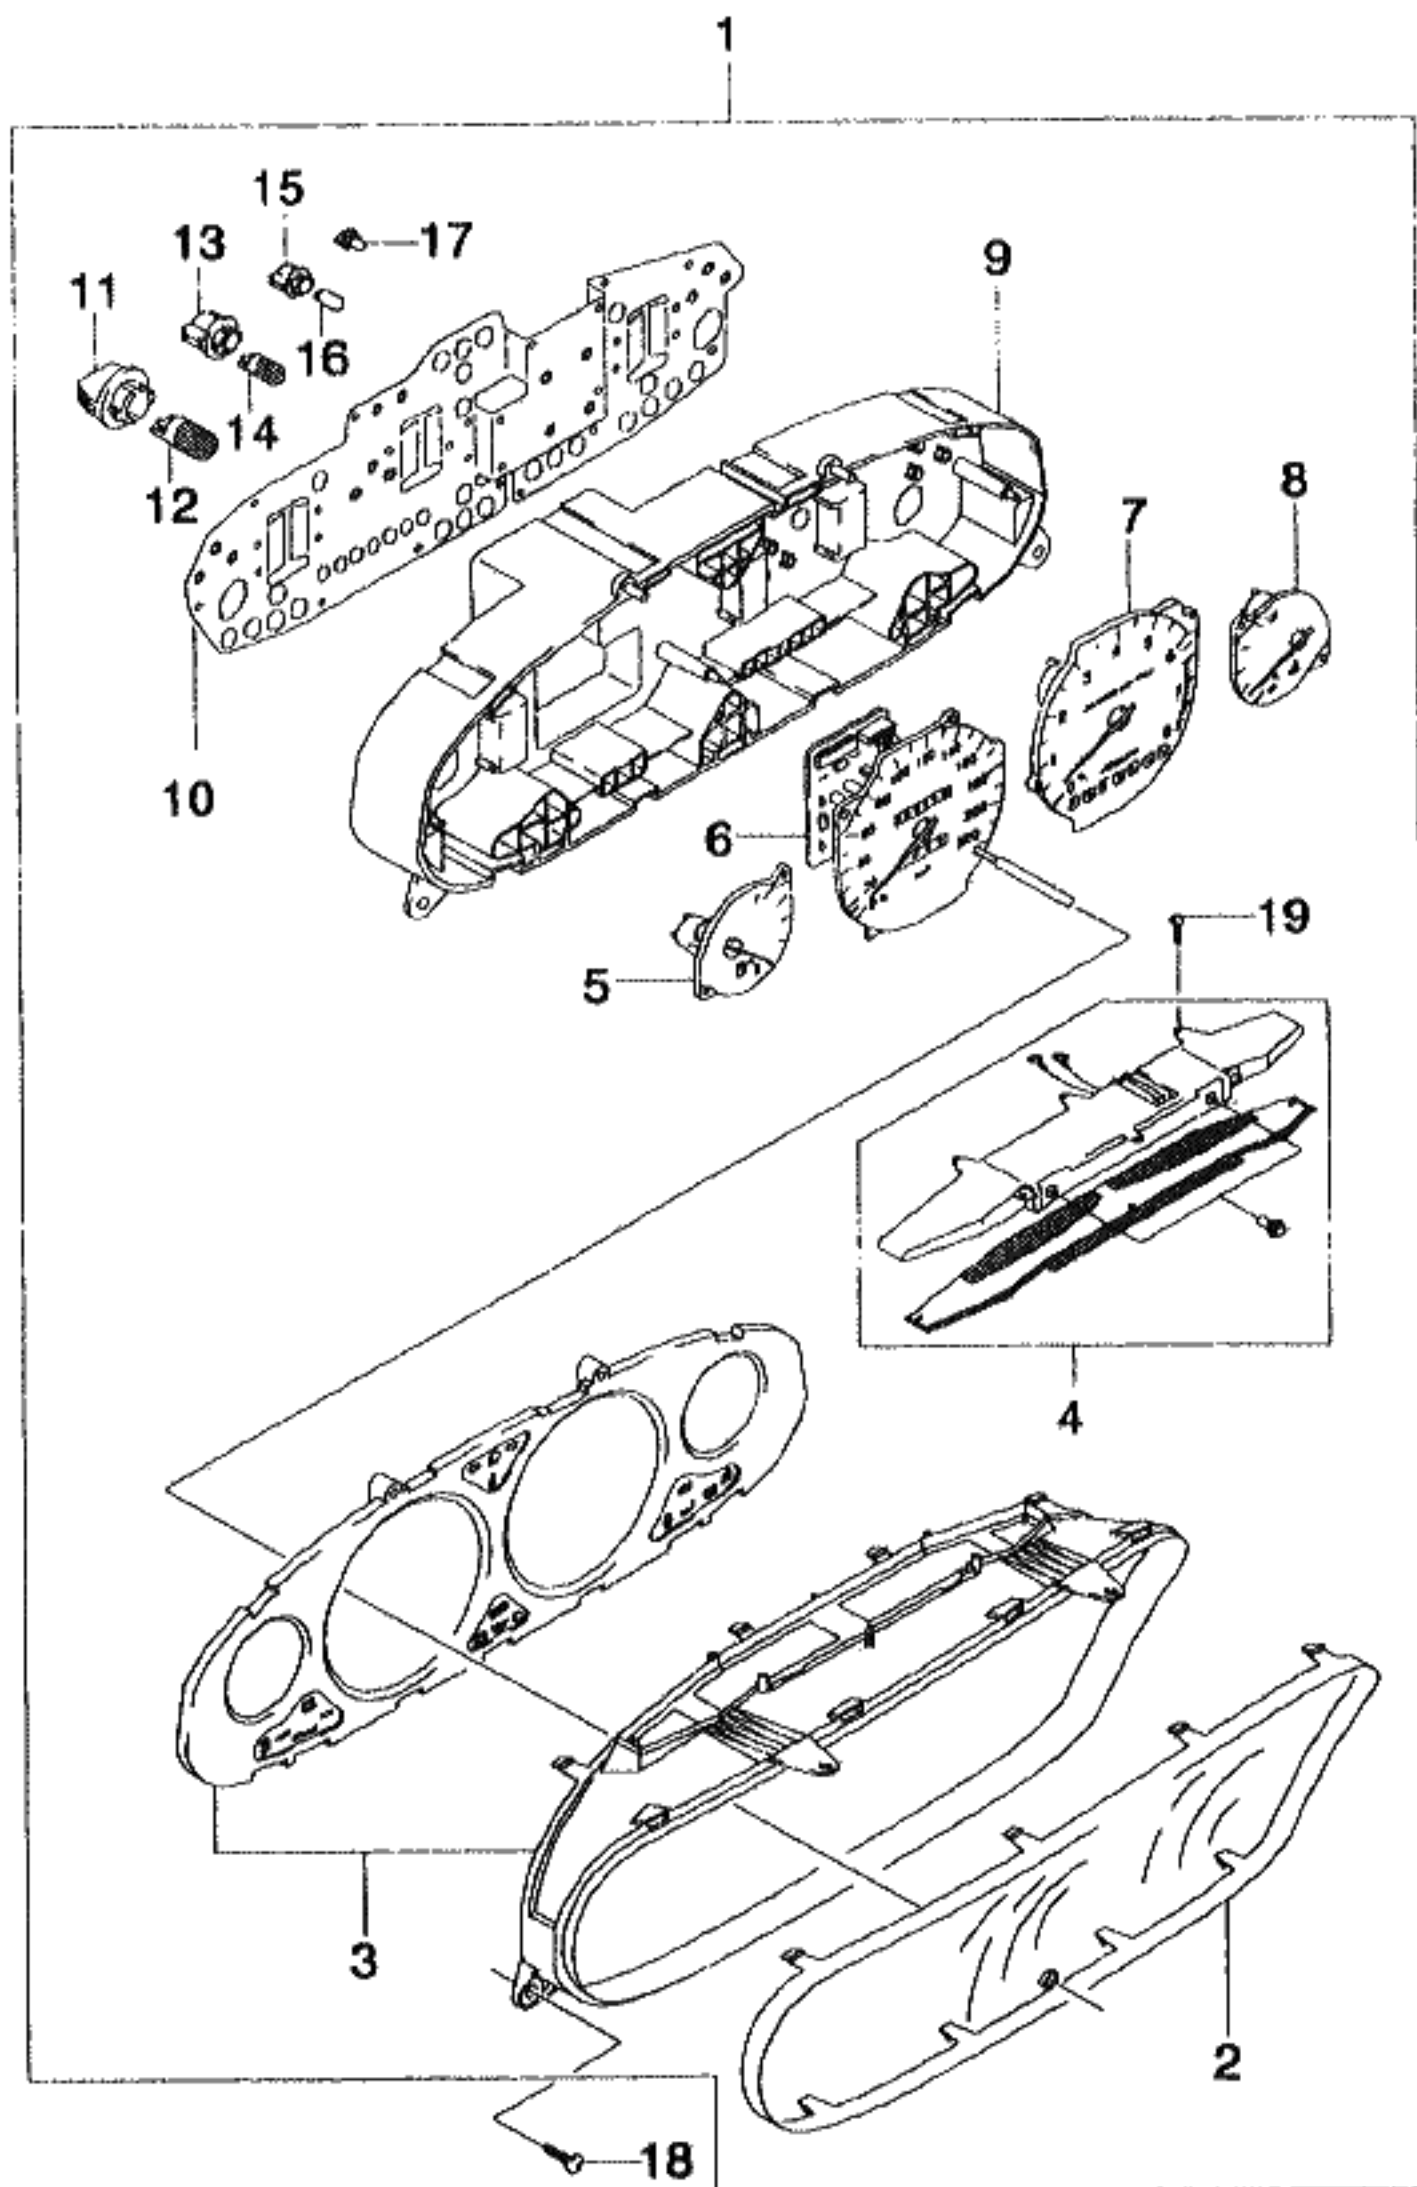


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)CLUSTER A-INSTRUMENT (D)INSTRUMENT						(F)TABLEAU DE BORD (S)INSTRUMENTO				
	96206668	M	S	S			1	970803		KILO	KM	
Y	96206668	M	O	O	&AJ3/AJ7/JL9/JTC		1	970804		KILO	KM	
	96206669	A	O	O			1	970803		KILO	KA	
Y	96206669	A	O	O	&AJ3/AJ7/JL9/JTC		1	970804		KILO	KA	
	96206683	M	S	S			1	970804		KILO	SM	
	96206684	A	O	O			1	970804		KILO	SA	
	96206688	M	A	A	&T98		1			KILO	EM	
	96206689	A	A	A	&T98		1			KILO	EA	
	96255998	M	A	A	&U44		1			KILO	GM	
	96255999	A	A	A	&U44		1			KILO	GA	
	[02]	(E)LENS-INSTRUMENT CLUSTER (D)OBJEKTIV						(F)LENTILLE (S)LENTE				
	96206700		S	S			1					
	[03]	(E)MASK-INSTRUMENT CLUSTER (D)MASK						(F)MASQUE (S)MASCARA				
	96206701		S	S			1					
	[04]	(E)COVER A-ILLUMINATION (D)DECKEL						(F)COUVERTURE (S)CUBIERTA				
	96206703		S	S			1					
	[05]	(E)GAUGE A-FUEL (D)ANZEIGE,BENZIN						(F)JAUGE (S)JUNTA				
	96206698		S	S			1					
	[06]	(E)SPEEDOMETER A (D)GESCHWINDIGKEITSMESSER						(F)COMPTEUR DE VITESSE (S)VELOCIMETRO				
	96206691		S	S	&UC0		1					
	[07]	(E)TACHOMETER A (D)TACHOMETER						(F)TACHYMETRE (S)TACOMETRO				
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


5220 INSTRUMENT CLUSTER

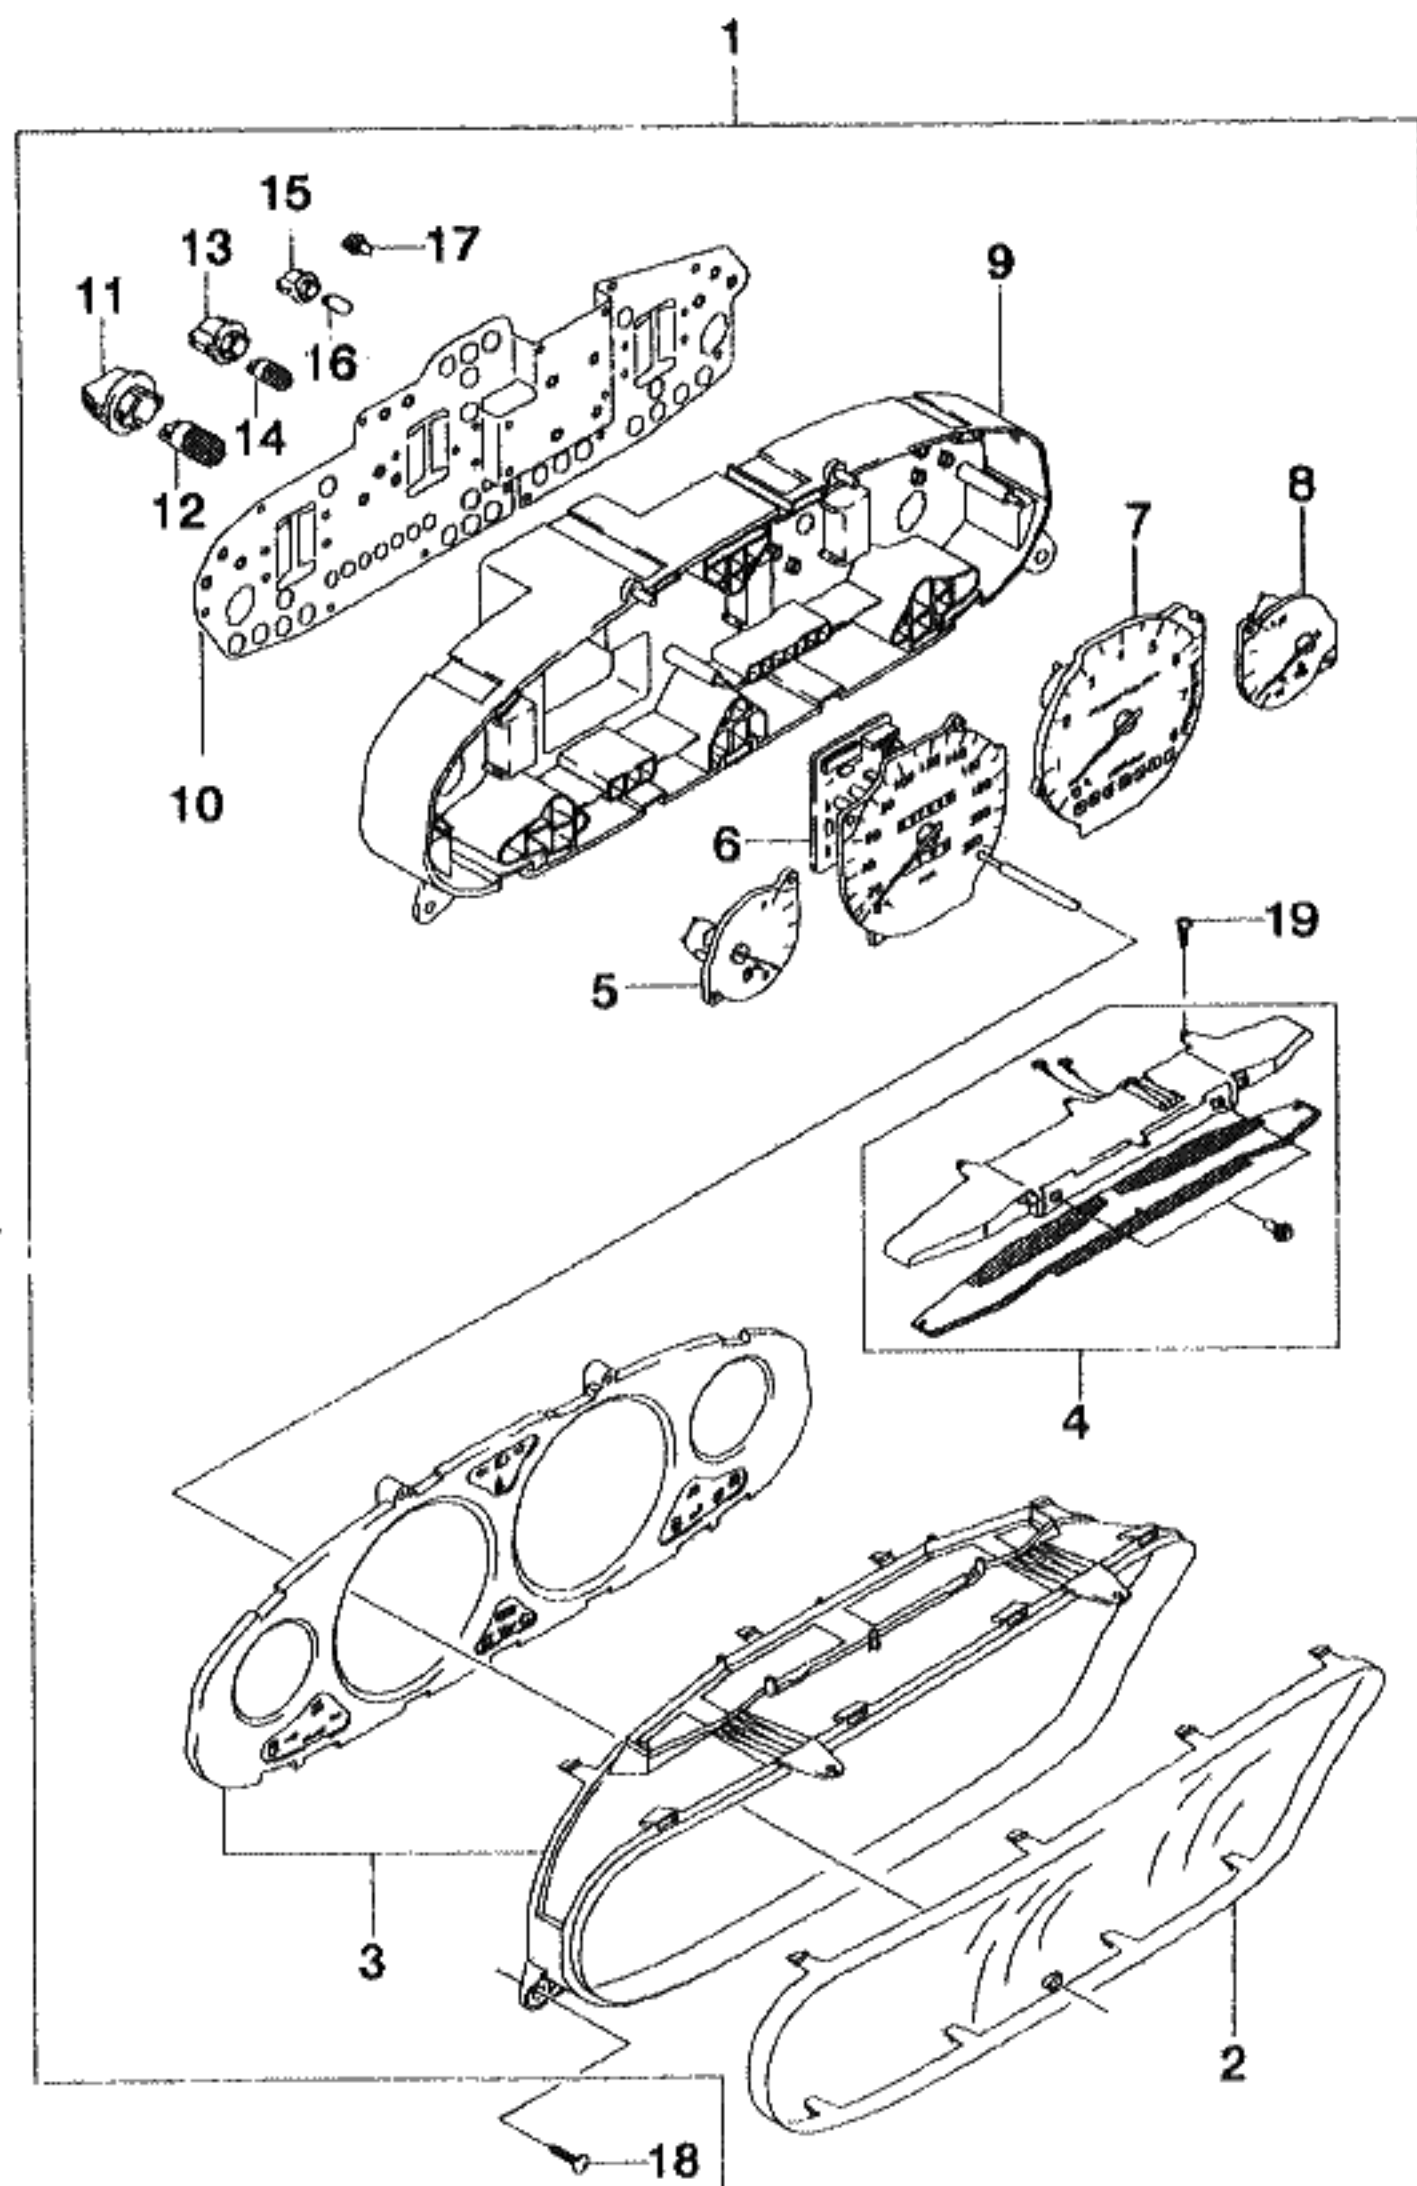


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96206695	M	S	S			1				
	96206696	A	S	S			1				
	[08]	(E) GAUGE A-TEMPERATURE					(F) JAUGE				
		(D) MEßSTAB					(S) MEDIDOR				
	96206697	.	S	S			1				
	[09]	(E) CASE-INSTRUMENT CLUSTER					(F) CARTER				
		(D) KASTEN					(S) CAJA				
	96206702	.	S	S			1				
	[10]	(E) PLATE A-PRINTED CIRCUIT					(F) PLAQUE-CIRCUIT				
		(D) PLATTE, STROMKREIS					(S) PLACA-CIRCUITO				
	96206704	M	S	S			1				
	96206705	A	O	O			1				
	[11]	(E) SOCKET A-BULB					(F) CULOT-AMPOULE				
		(D) FASSUNG, BIRNE					(S) ENCHUFE-BOMBILLA				
	96077679	.	S	S	ILLUMINATION		4				
	[12]	(E) BULB					(F) AMPOULE				
		(D) BIRNE					(S) BOMBILLA				
	09471-12015	.	S	S	ILLUMINATION		2			12V,3W	
	[13]	(E) SOCKET A-BULB					(F) CULOT-AMPOULE				
		(D) FASSUNG, BIRNE					(S) ENCHUFE-BOMBILLA				
	96206682	.	S	S	FUEL WARNING		2				
	94797519	.	S	S	FOR ILLUMINATION		2				
	[14]	(E) BULB					(F) AMPOULE				
		(D) BIRNE					(S) BOMBILLA				
	09471-12025	.	S	S	FUEL WARNING		2			14V,3W	
	09471-12017	.	S	S	ILLUMINATION		2			14V,3.4W	
	[15]	(E) SOCKET A-BULB					(F) CULOT-AMPOULE				
		(D) FASSUNG, BIRNE					(S) ENCHUFE-BOMBILLA				
	94797520	.	S	S	FOR TELLTALES		20				
LEVEL						T/A (TRANSAXLE)					
S X = 2.0 SOHC						M = MANUAL T/A					
CDX = 2.0 DOHC						A = AUTOMATIC T/A					
						. = COMMON					

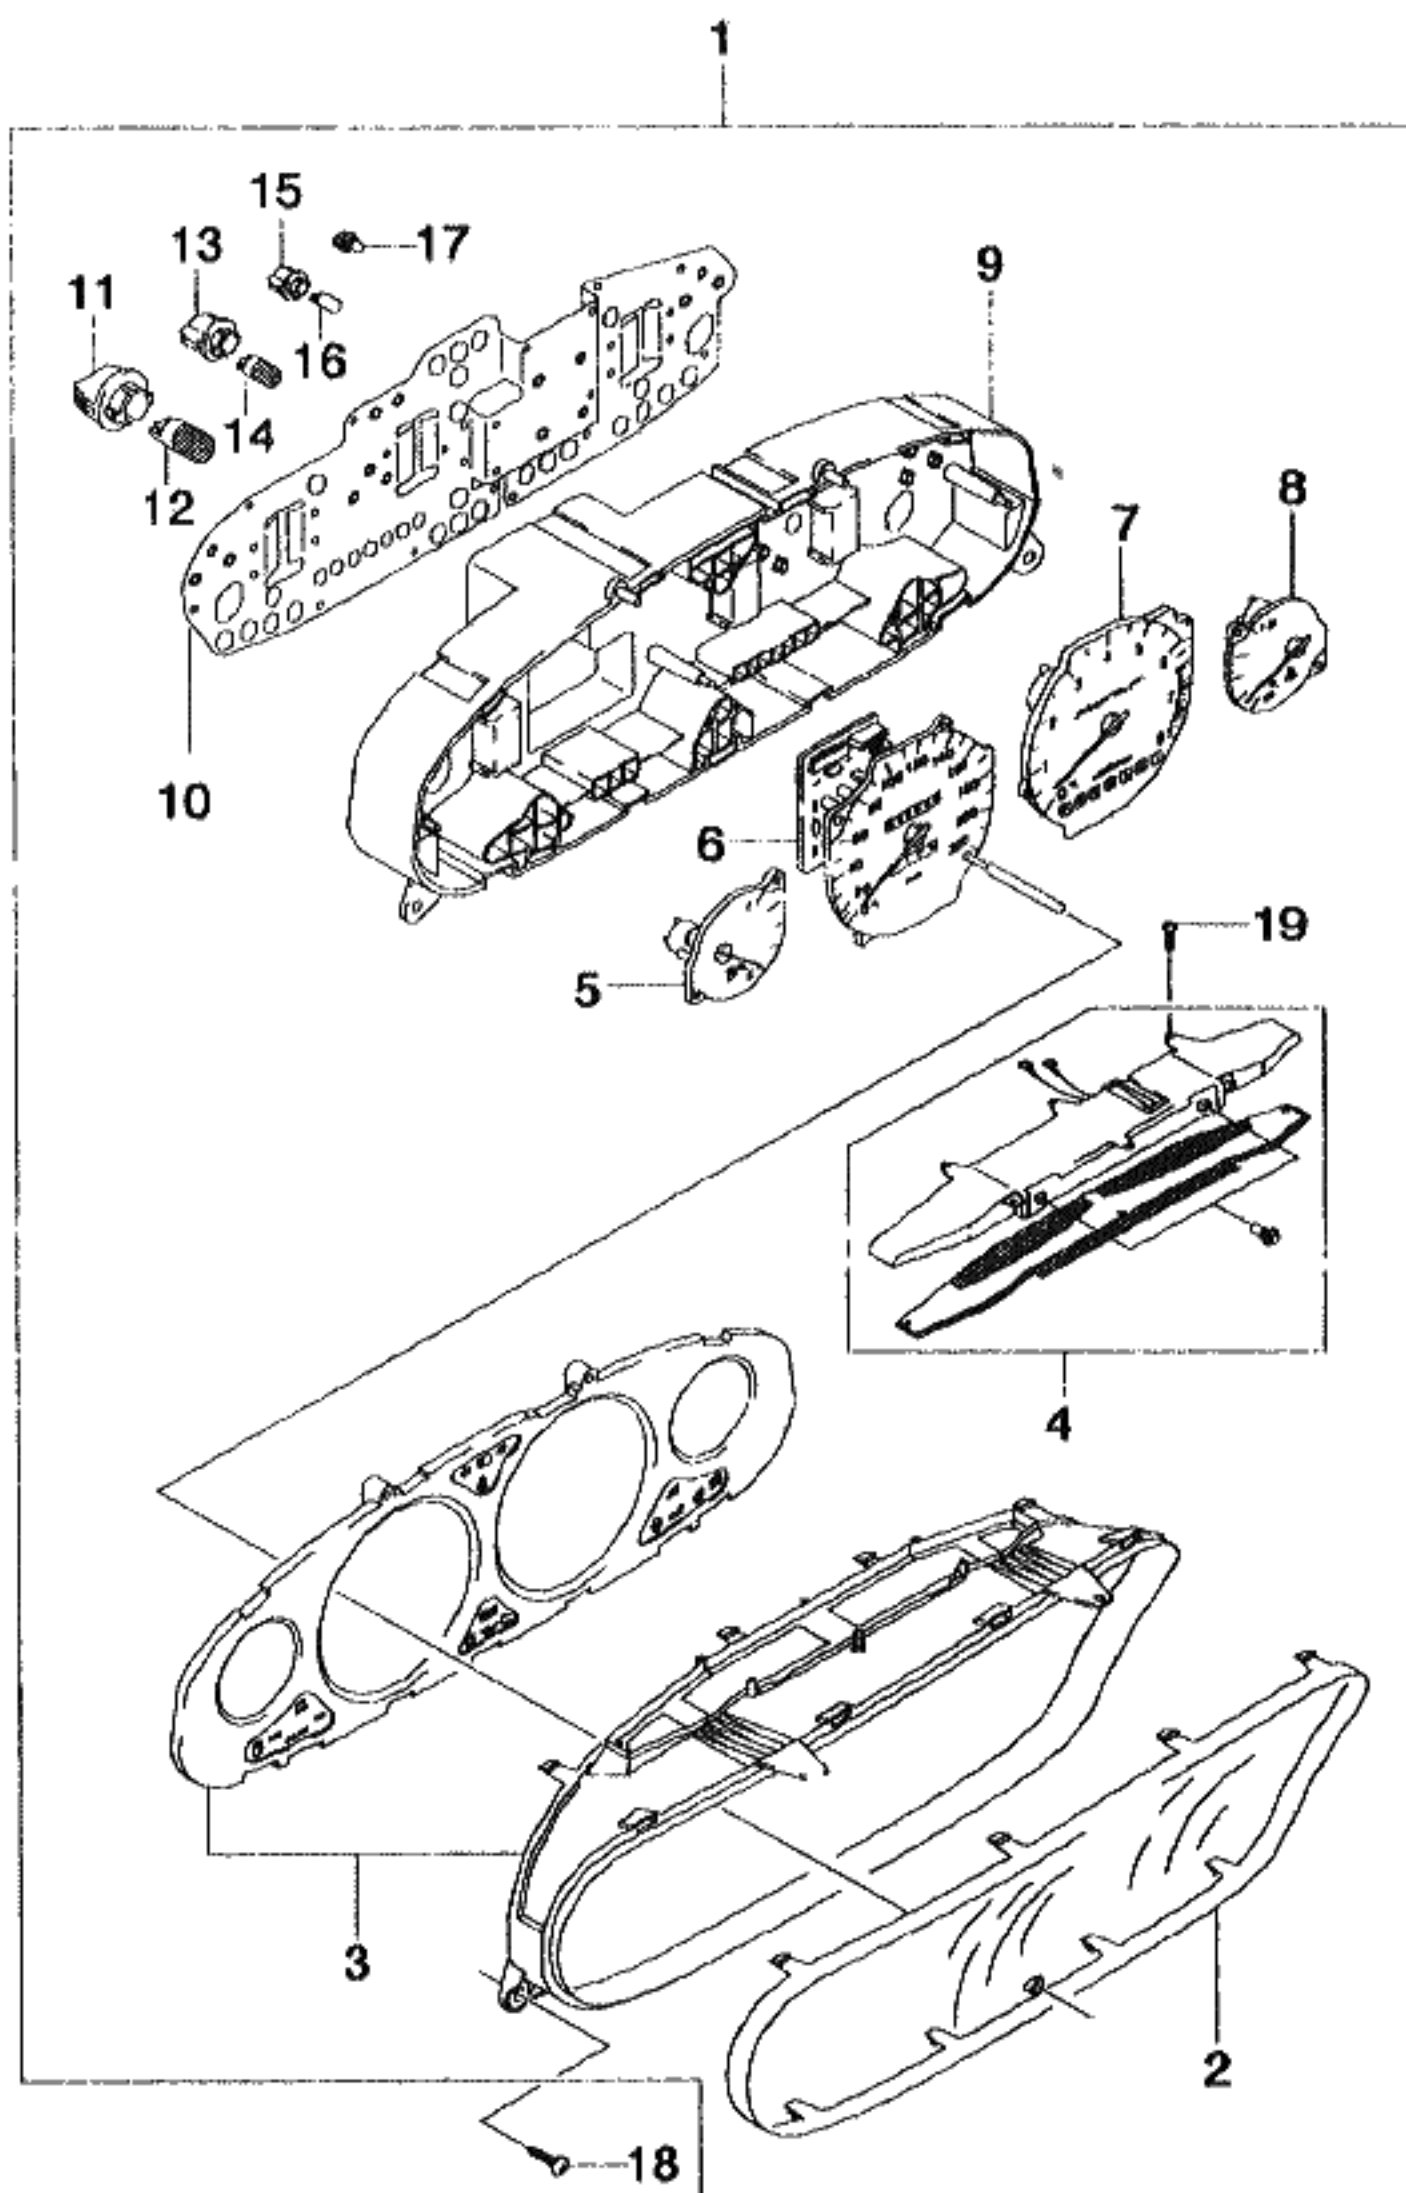

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[16] 09471-12014	(E)BULB (D)BIRNE . S S		TELLTALES		(F)AMPOULE (S)BOMBILLA 20			14V,1.4W		
	[17] 96312805	(E)BULB-SHIFT INDICATOR (D)BIRNE A O O		A/T SHIFT(T42)		(F)AMPOULE (S)BOMBILLA 7			14V,1.4W		
	[18] 03160-42165	(E)SCREW-TAPPING (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 4					
	[19] 158545	(E)SCREW (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 4					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

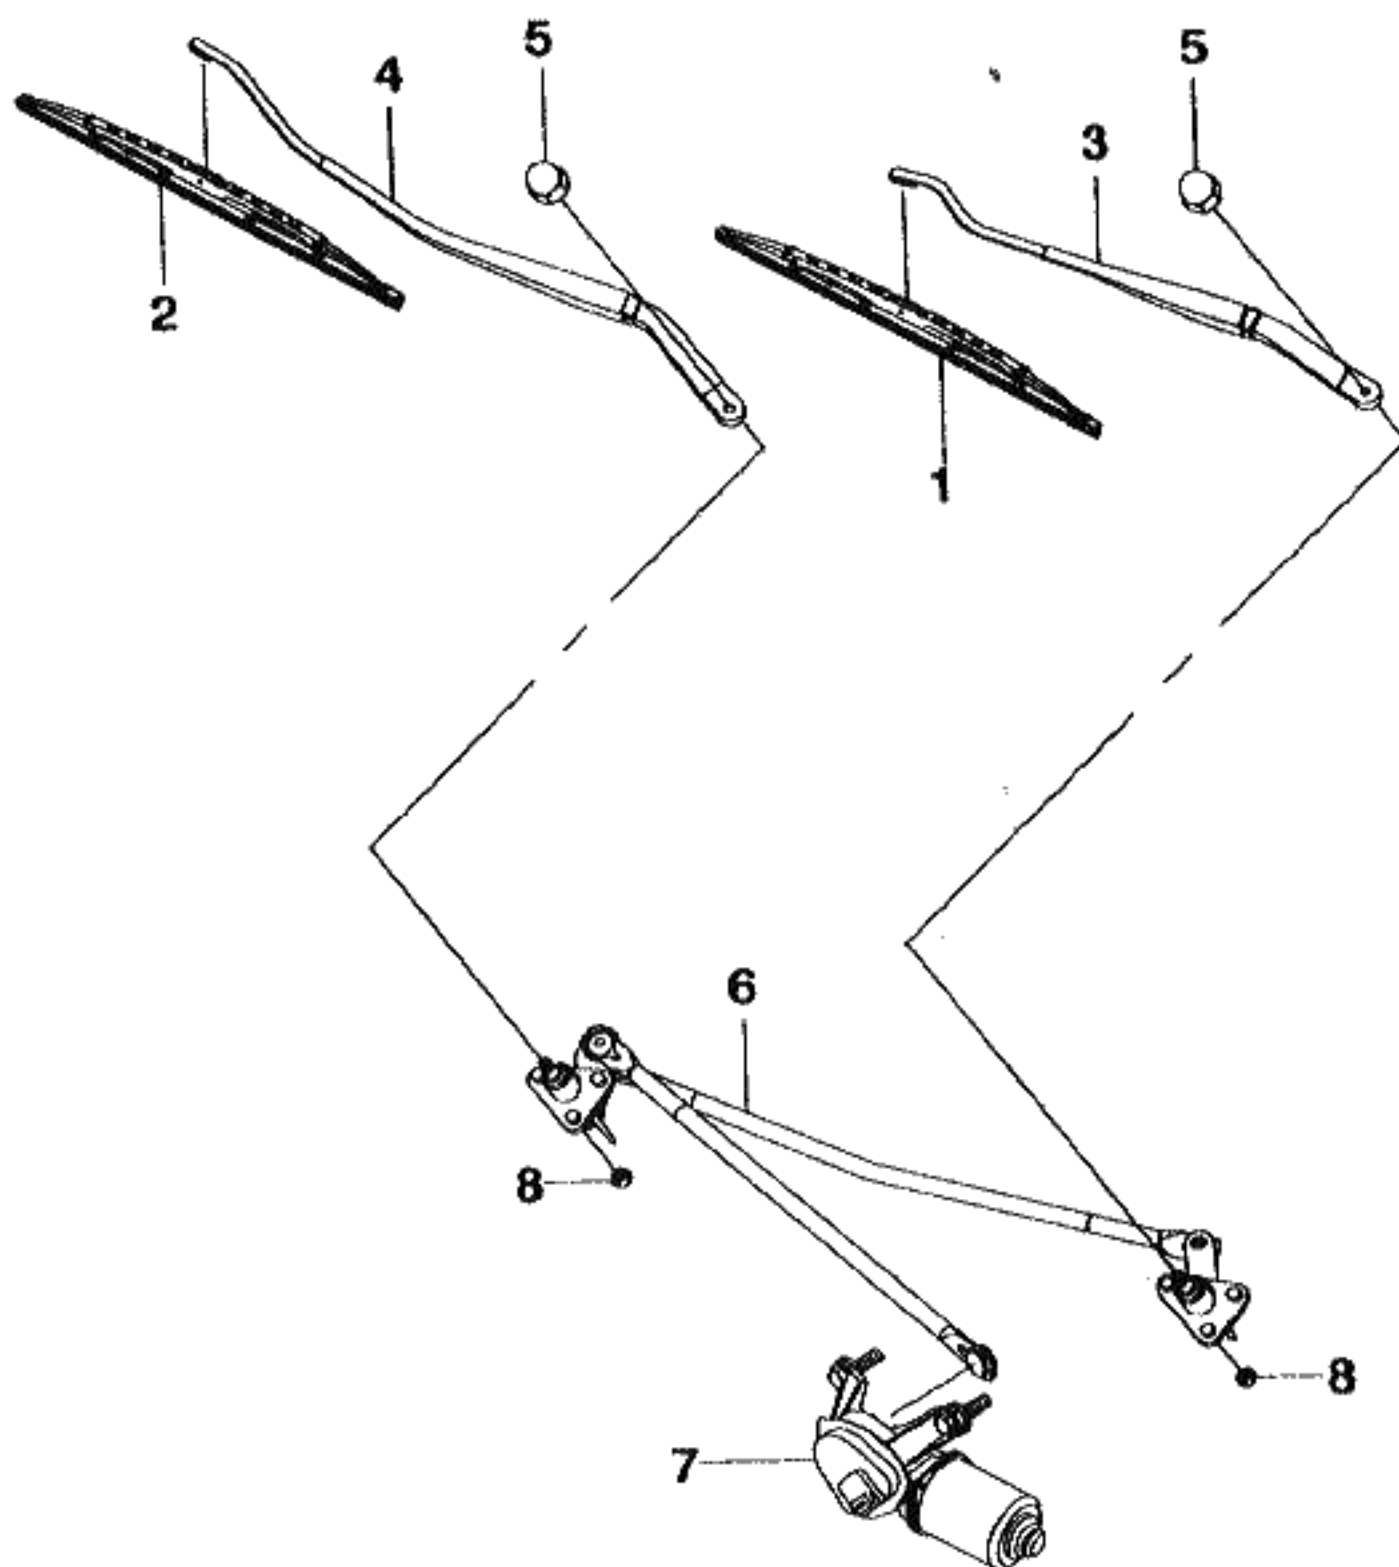

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01] 96205561	(E)BLADE A-WIPER,DRIVER (D)SCHEIBENWISCHERGUMMI . S S					(F)BALAI D'ESSUIE-GLACE (S)ESCOBILLA-LIMPIAPARABRISA 1					
	[02] 96227855	(E)BLADE A-WIPER,PASSENGER (D)SCHEIBENWISCHERGUMMI . S S					(F)BALAI D'ESSUIE-GLACE (S)ESCOBILLA-LIMPIAPARABRISA 1					
	[03] 96205559	(E)ARM A-WIPER,DRIVER (D)ARM,SCHEIBENWISCHER . S S					(F)BRAS-ESSUIE-GLACE (S)BRAZO-LIMPIAPARABRISAS LH 1					
	[04] 96205560	(E)ARM A-WIPER,PASSENGER (D)ARM,SCHEIBENWISCHER . S S					(F)BRAS-ESSUIE-GLACE (S)BRAZO-LIMPIAPARABRISAS RH 1					
	[05] 09145-08001	(E)NUT-CAP (D)MUTTER . S S					(F)ECROU (S)TUERCA 2					
	[06] 96205558	(E)LINKAGE A-WIPER (D)VERBINDUNG . S S					(F)ACOUPLEMENT (S)ENLACE 1					
	[07] 96206735	(E)MOTOR A-WIPER,FR (D)MOTOR,SCHEIBENWISCHER . S S					(F)MOTEUR (S)MOTOR-LIMPIAPARABRISAS 1				MV	
	[08] 08316-18062	(E)NUT-FLANGE (D)MUTTER . S S					(F)ECROU (S)TUERCA 6					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

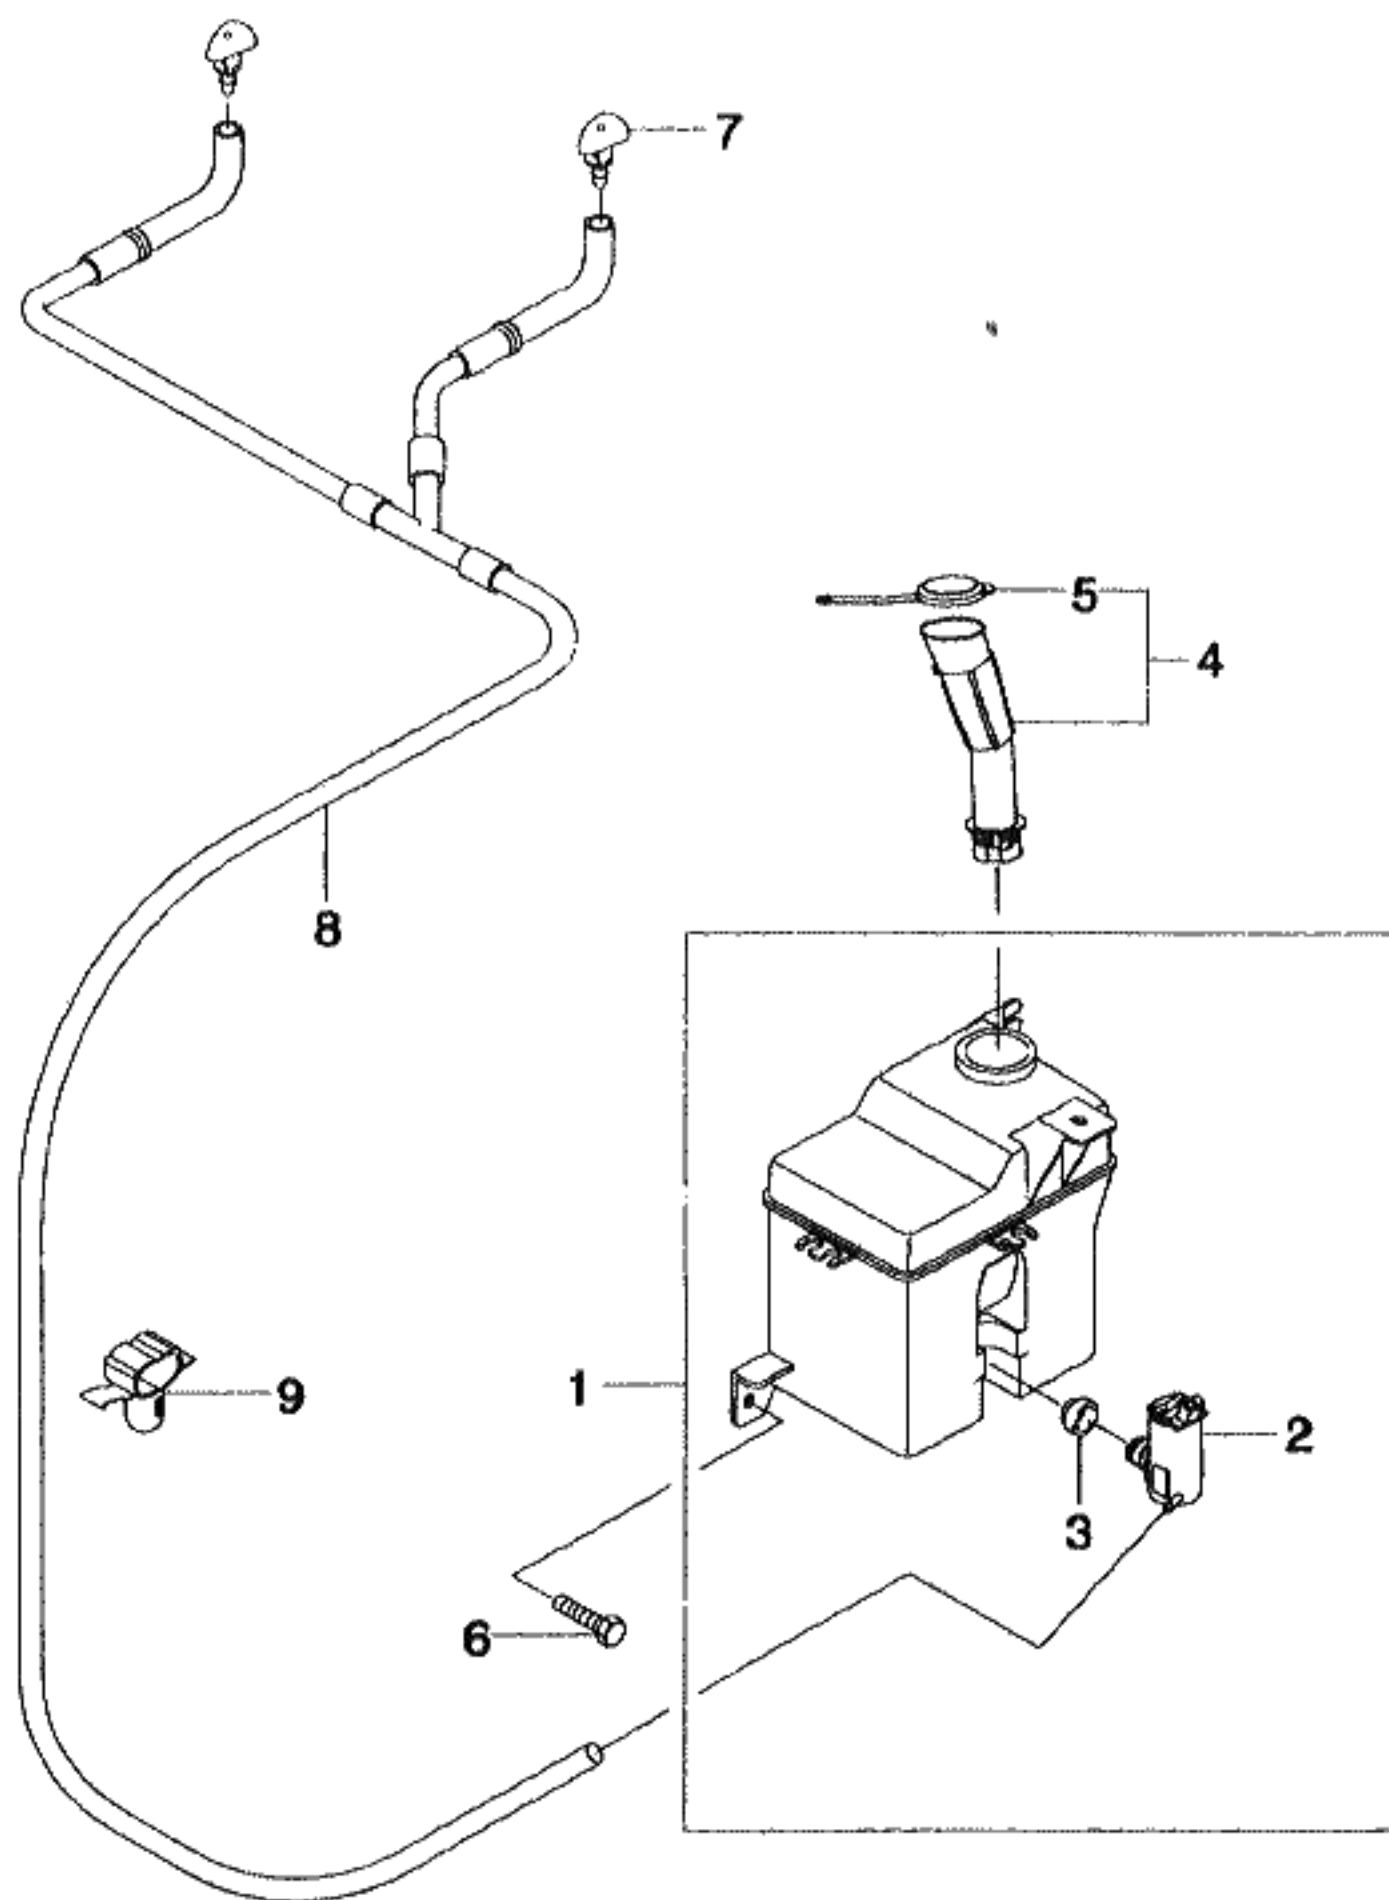

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)RESERVOIR A-WISHIELD (D)BEHÄLTER				(F)RESERVOIR (S)RESERVA						
	96206731		S	S		1						
	[02]	(E)PUMP A-ELEC,W/S WASHER (D)PUMPE,ELEKTRISCHE				(F)POMPE-LAVEUR ELECTRIQUE (S)BOMBA -LIMPIADOR						
	96190259		S	S		1						
	[03]	(E)SEAL (D)DICHTUNG				(F)JOINT (S)SELLO						
	96190258		S	S		1						
	[04]	(E)FUNNEL A-WISHIELD WASHER (D)TRICHTER,BEHÄLTER				(F)ENTONNOIR-RESERVOIR (S)RESERVA DE COMBUSTIBLE						
	96206741		S	S		1						
	[05]	(E)CAP-WISHIELD WASHER (D)DECKEL				(F)CHAPEAU (S)TAPA						
	96206743		S	S		1						
	[06]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO						
	01517-06163		S	S		2						
	[07]	(E)NOZZLE A-WISHIELD WASHER (D)MÜNDUNG,WINDSCHUTZSCHEIB				(F)BEC-LAVE (S)BOQUILLA-LIMPIAPARABRISAS						
	96206760		S	S		2						
	[08]	(E)HOSE A-WISHIELD WASHER (D)SCHLAUCH-SATZ				(F)JEU TUYAUTERIE-LAVE-GLACE (S)MANGUERA-JUEGO						
	96206751		S	S		1				INCL.#9		
	[09]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09408-00019		S	S		4						

INCL.#9

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A


CDX = 2.0 DOHC

A = AUTOMATIC T/A


. = COMMON

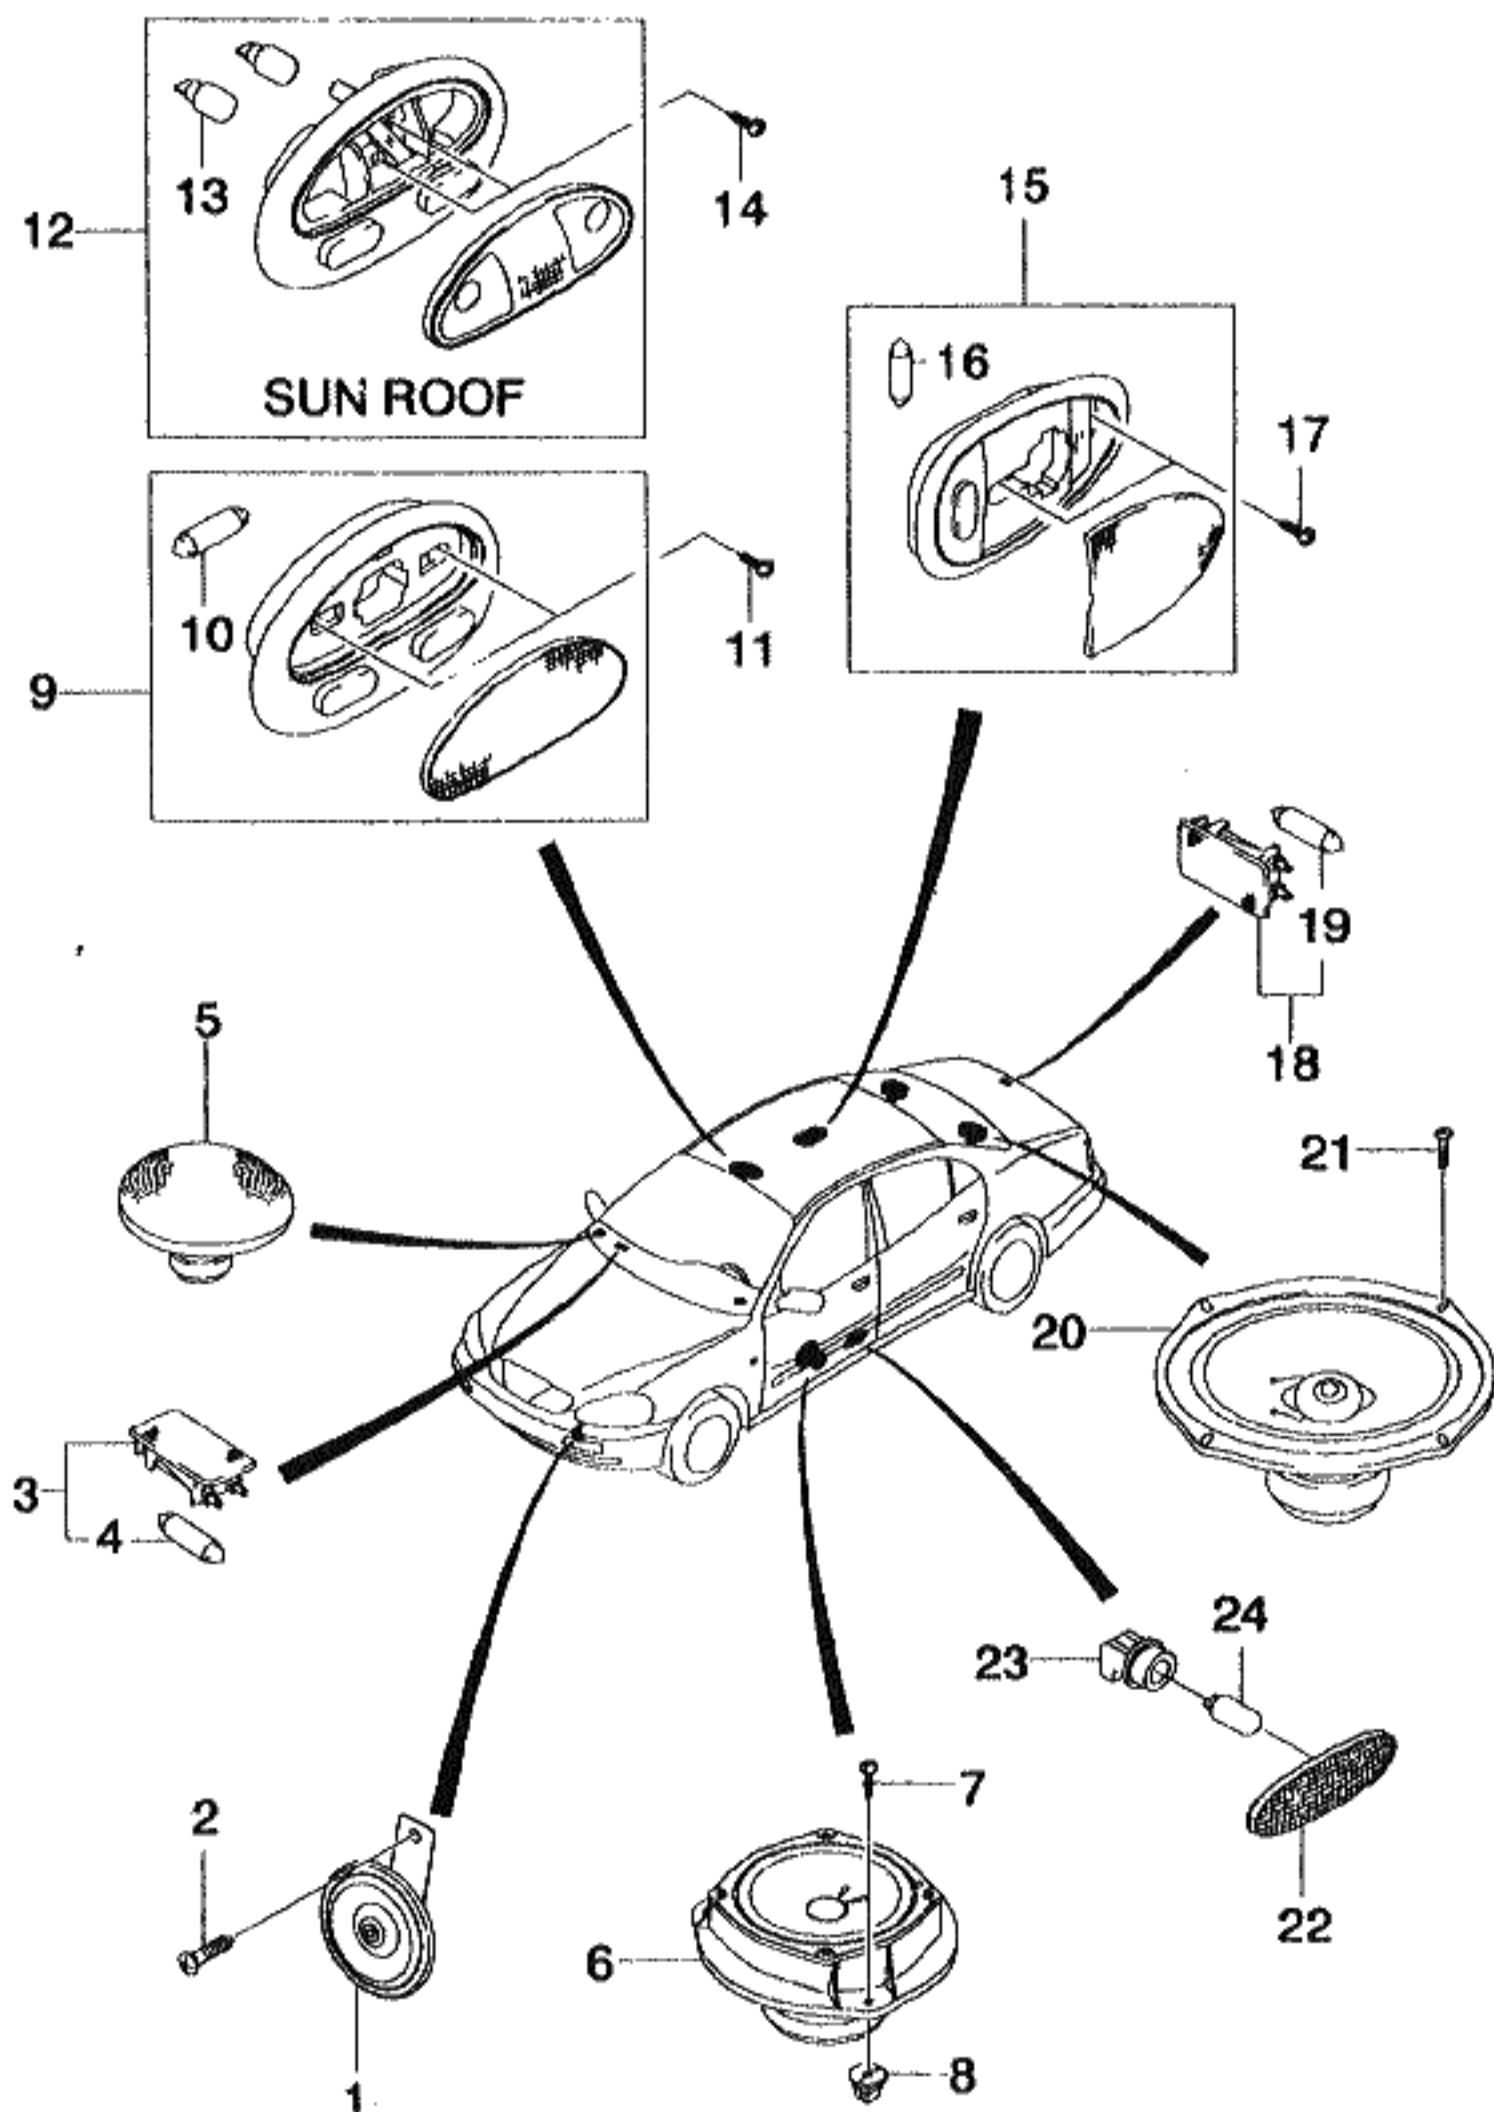



KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)HORN A (D)HUPE					(F)AVERTISSEUR (S)BOCINA					
	96312799	.	S	S			1			HIGH	DH	
	96312149	.	S	S			1			LOW	DL	
	[02]	(E)BOLT-W/WASHER (D)SCHRAUBE					(F)BOULON (S)PERNO					
	09118-08003	.	S	S			2					
	[03]	(E)LAMP A-PASSENGER COMPT (D)LAMPE, HANDSCHUHFACH					(F)LAMPE-BOITE A GANTS (S)LAMPARA					
	96247399	.	S	S			1				GB	
	[04]	(E)BULB (D)BIRNE					(F)AMPOULE (S)BOMBILLA					
	05401-05001	.	S	S			1			12V,5W		
	[05]	(E)SPEAKER-BALANCE TWEETER (D)LAUTSPRECHER					(F)HAUT (S)ALTAVOZ					
	96206976	.	S	S			LH 1				LH	
	96206977	.	S	S			RH 1				RH	
	[06]	(E)SPEAKER A-FR DOOR (D)LAUTSPRECHER, VORDERTÜR					(F)HAUT-PARLEUR-PORTE AVANT (S)ALTOPARLANTE					
	96206985	.	S	S			2					
	[07]	(E)SCREW-TAPPING (D)SCHRAUBE					(F)VIS (S)TORNILLO					
	03110-48165	.	S	S			8					
	[08]	(E)NUT-SPEED (D)MUTTER					(F)ECROU (S)TUERCA					
	09148-03006	.	S	S			8					
	[09]	(E)LAMP A-MAP,FR (D)LAMPE					(F)LAMPE (S)LAMPARA					
	96251398	.	S	S			1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

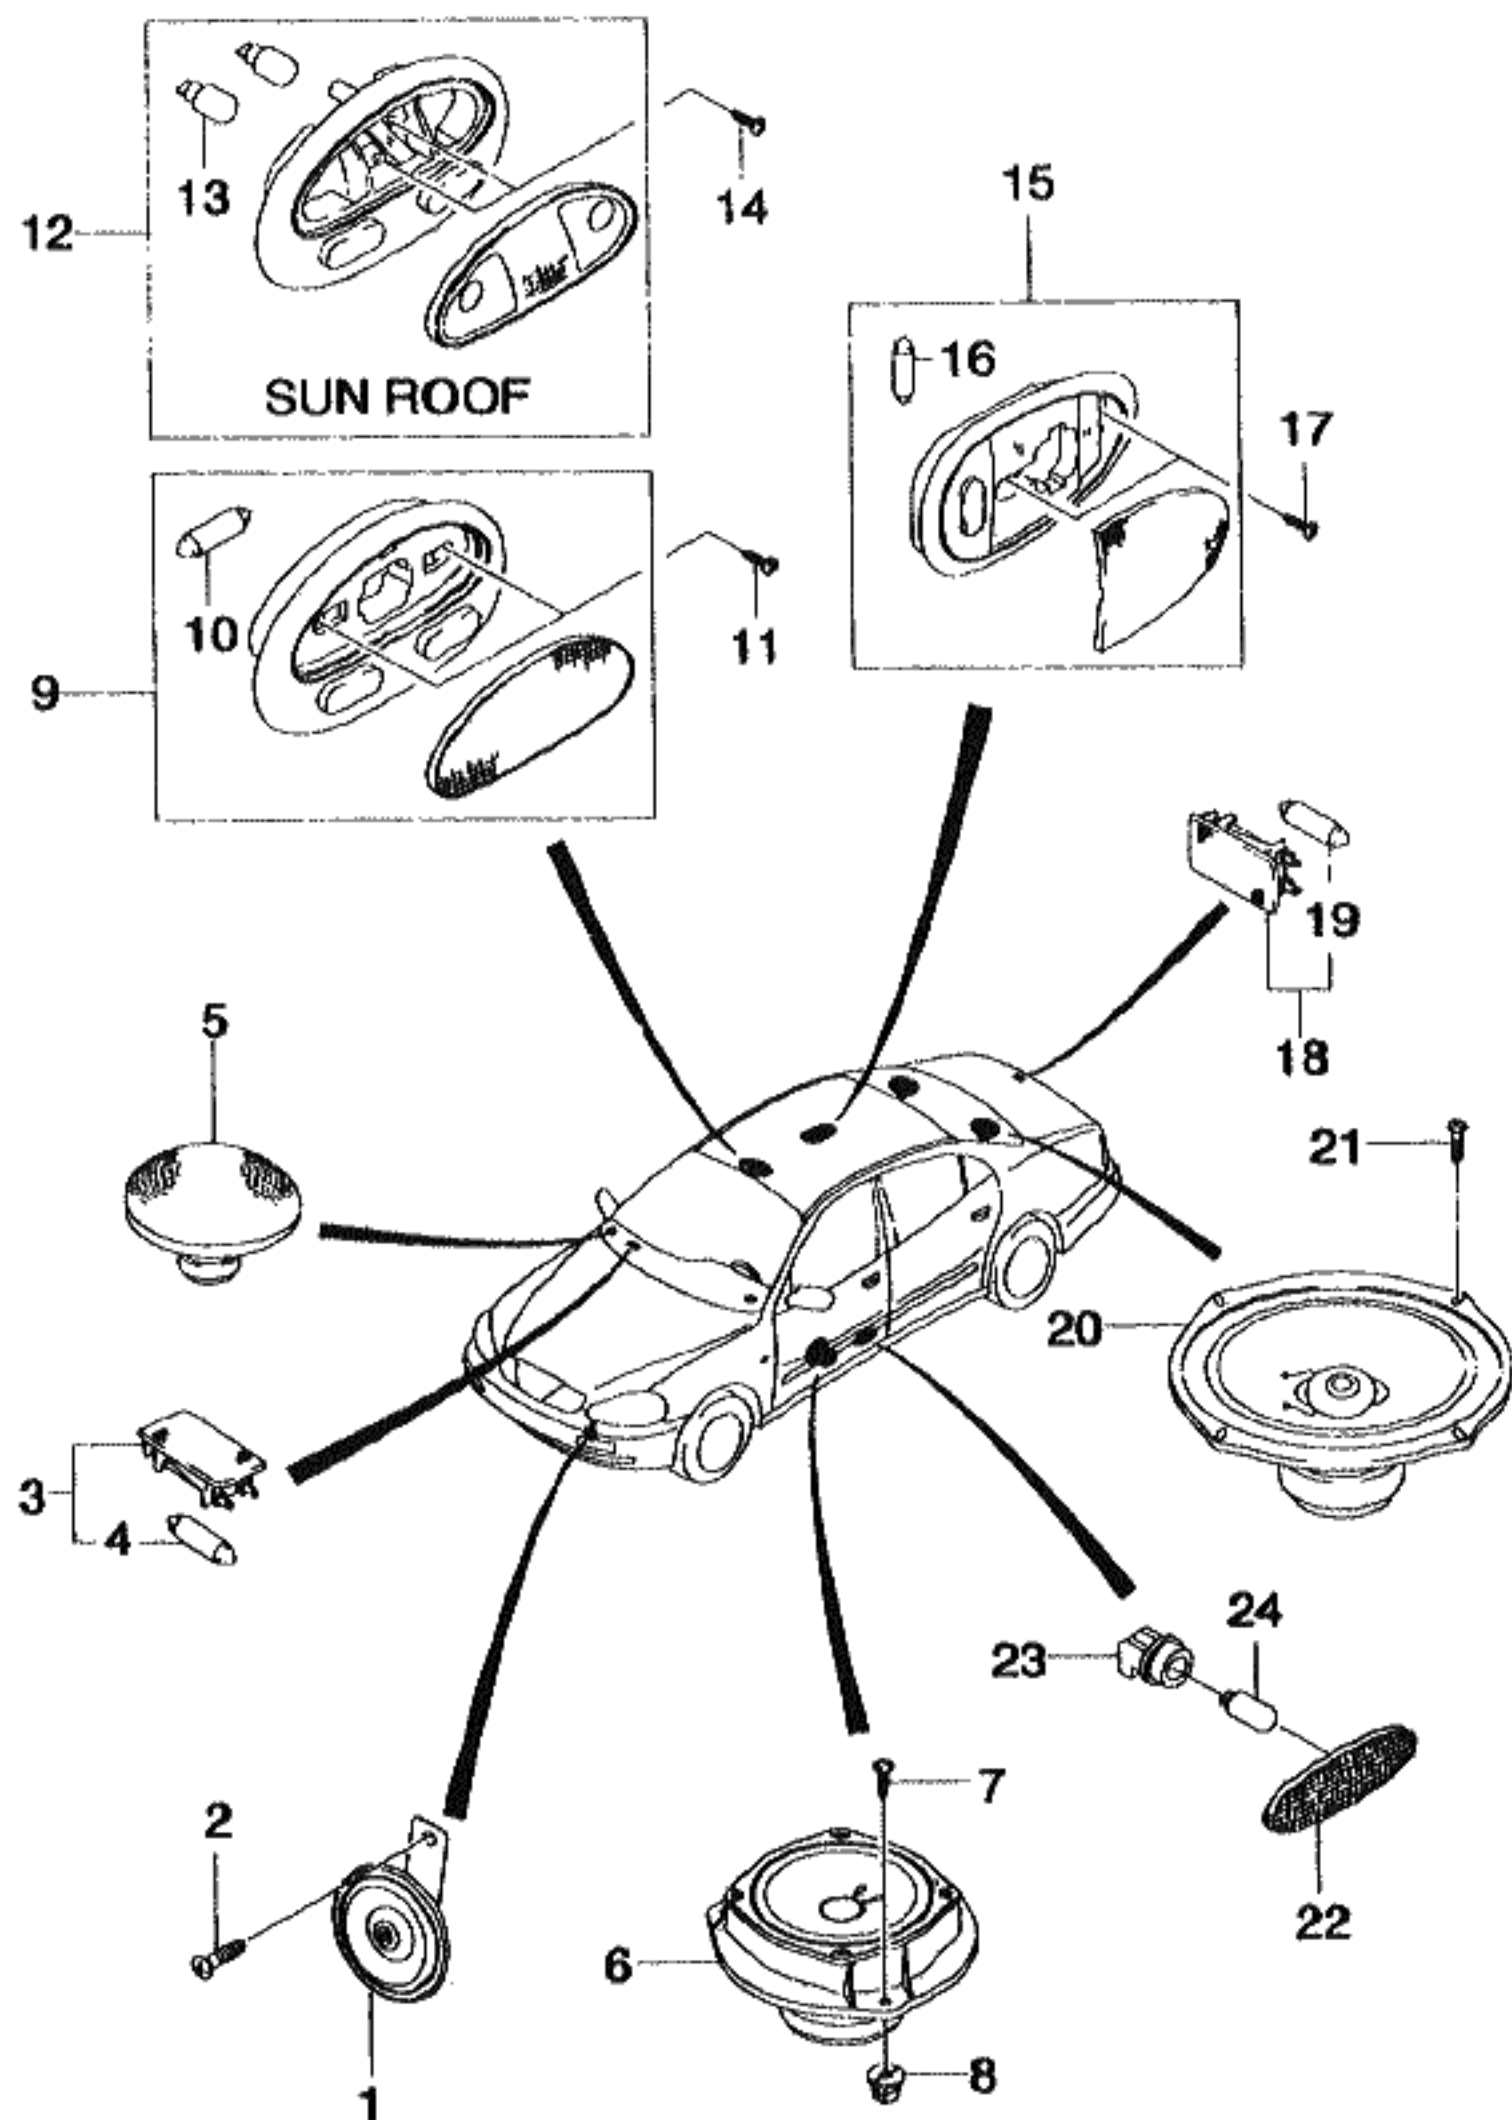


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 09471-12021	(E)BULB (D)BIRNE . S S				(F)AMPOULE (S)BOMBILLA 2			12V,7.5W		
	[11] 03170-42138	(E)SCREW-TAPPING (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 2					
	[12] 96251397	(E)LAMP A-ROOM,FR (D)LAMPE,RAUM . O O &CF6&CRS				(F)LAMPE-INTERIEUR (S)LAMPARA-CABINA 1					
	[13] 05404-10001	(E)BULB (D)BIRNE . O O &CF6&CRS				(F)AMPOULE (S)BOMBILLA 1			12V,10W		
	[14] 03170-42138	(E)SCREW-TAPPING (D)SCHRAUBE . O O &CF6&CRS				(F)VIS (S)TORNILLO 2					
	[15] 96251399	(E)LAMP A-ROOM,CENTER (D)LAMPE,RAUM . S S				(F)LAMPE-INTERIEUR (S)LAMPARA-CABINA 1					
	[16] 05404-10001	(E)BULB (D)BIRNE . S S				(F)AMPOULE (S)BOMBILLA 1			12V,10W		
	[17] 03160-48193	(E)SCREW-TAPPING (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 2					
	[18] 96247398	(E)LAMP A-PASSENGER COMPT (D)LAMPE,HANDSCHUHFACH . S S				(F)LAMPE-BOITE A GANTS (S)LAMPARA 1					TR
	[19] 05404-10001	(E)BULB (D)BIRNE . S S				(F)AMPOULE (S)BOMBILLA 1			12V,10W		
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

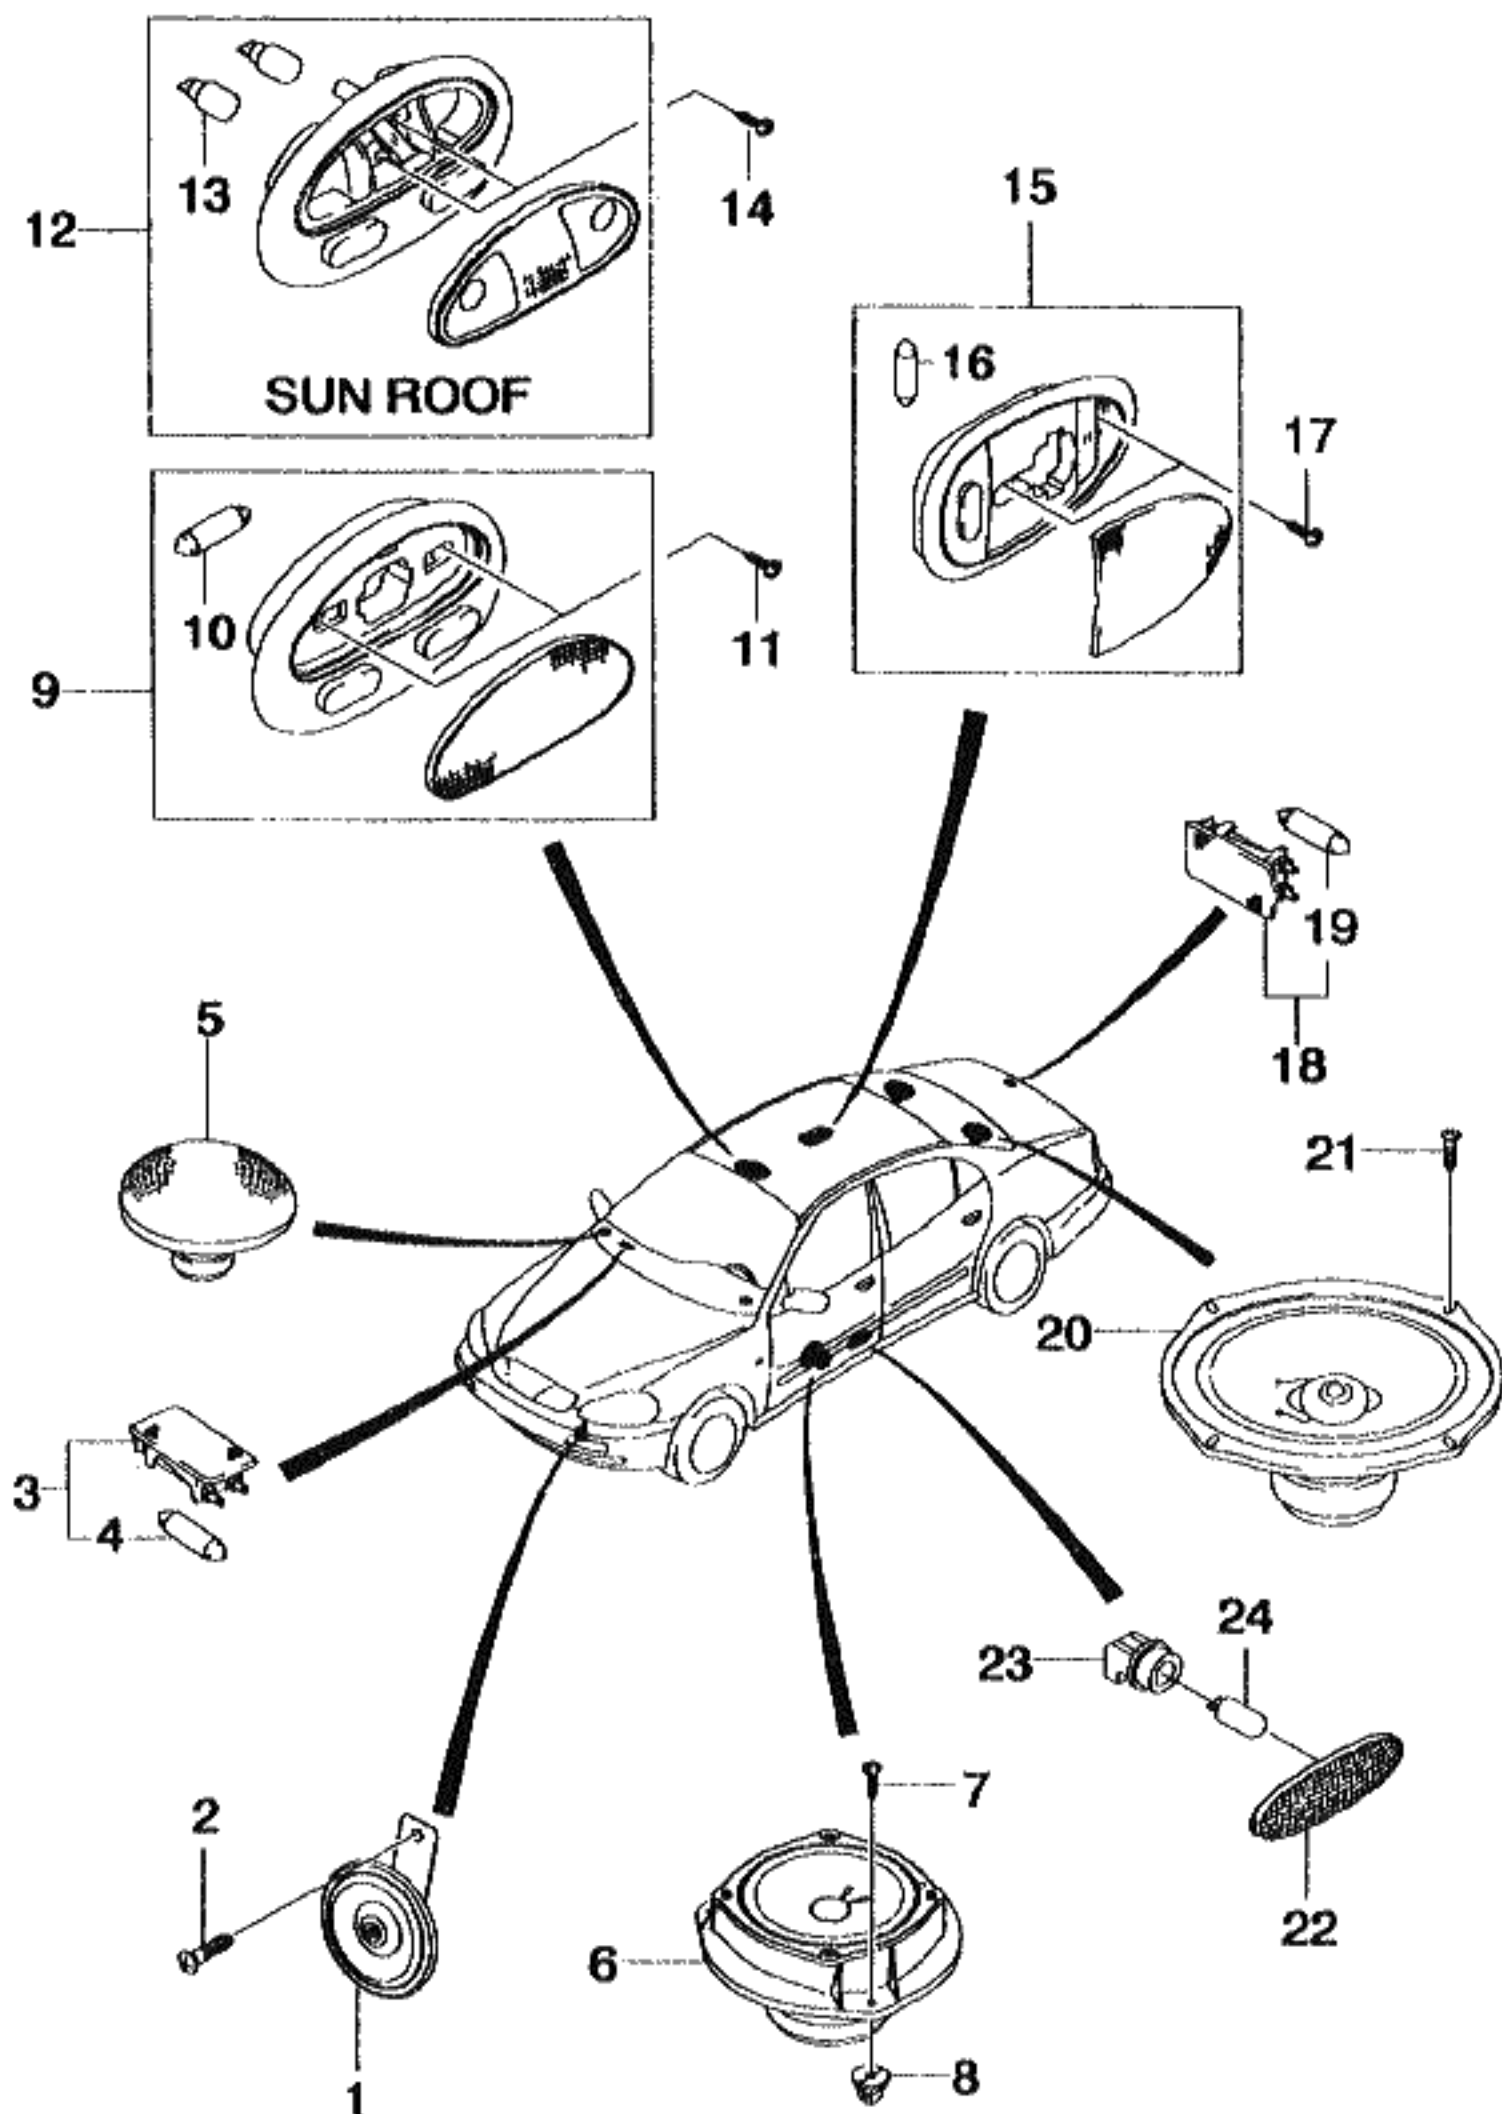


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20] 96206971	(E)SPEAKER A-2WAY,RR (D)LAUTSPRECHER,2-WEG,HINTEN	.	S	S			(F)HAUT-PARLEUR-2 DIRECTIONS (S)ALTOPARLANTE	2		
	[21] 03110-42133	(E)SCREW-TAPPING (D)SCHRAUBE	.	S	S			(F)VIS (S)TORNILLO	8		
	[22] 96206562 96206563	(E)LENS-DOOR STEP LAMP (D)OBJEKTIV	.	S	S			(F)LENTILLE (S)LENTE	LH 1 RH 1		
	[23] 96251396	(E)HOLDER-BULB (D)BEHÄLTER	.	S	S			(F)MONTURE (S)RETNEDOR	2		
	[24] 05302-05001	(E)BULB (D)BIRNE	.	S	S			(F)AMPOULE (S)BOMBILLA	2		
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

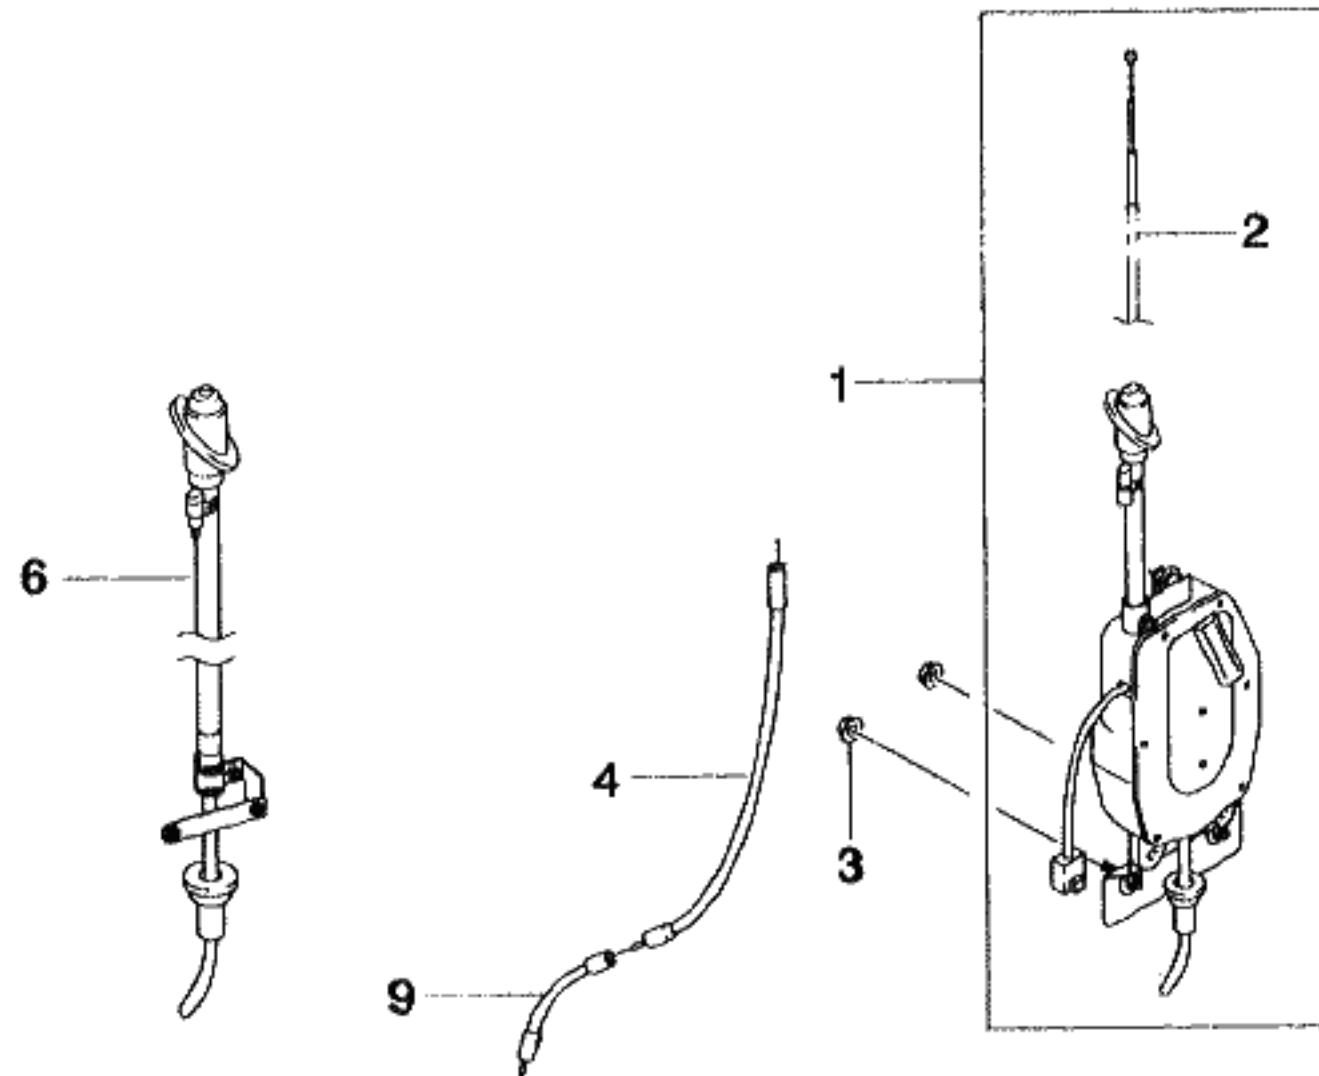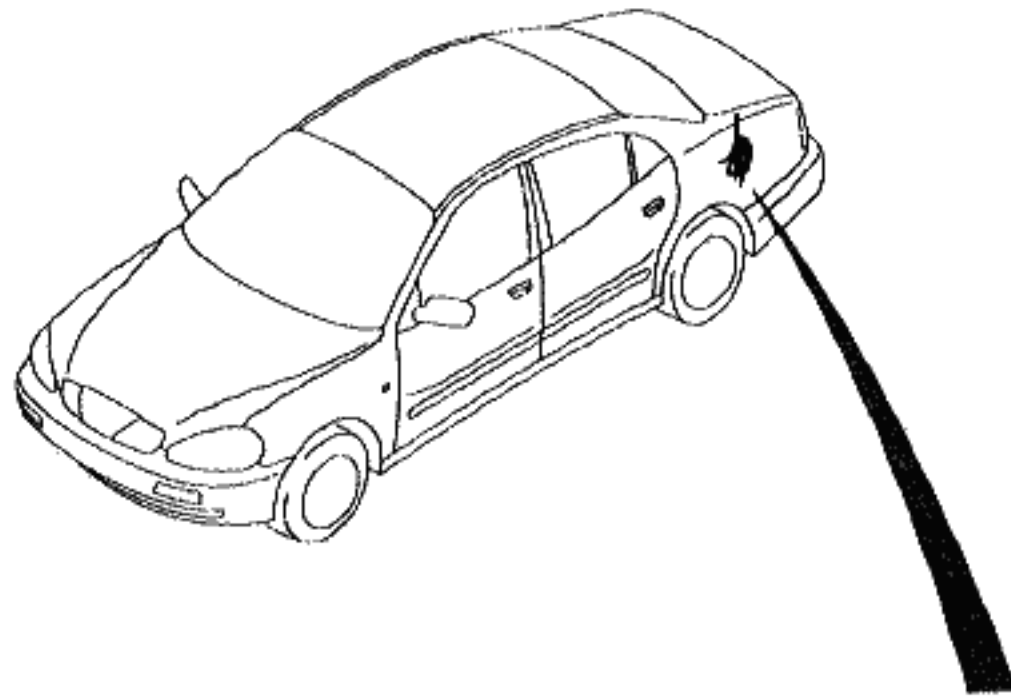


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01] 96206987	(E)ANTENNA A-AUTO,RR (D)ANTENNE					(F)ANTENNE (S)ANTENA				VA	
	[02] S5420004 Y 96258652	(E)POLE-ANTENNA (D)STAB,ANTENNE					(F)HAMPE-ANTENNE (S)POSTE-ANTENA					
	[03] 08361-15063	(E)NUT-W/WASHER (D)MUTTER					(F)EGROU (S)TUERCA					
	[04] 96207187	(E)CABLE-ANTENNA,BODY (D)KABEL					(F)CABLE (S)CABLE			L=3350		
	[06] 96206988	(E)ANTENNA A-MANUAL,REAR (D)ANTENNE					(F)ANTENNE (S)ANTENA					
	[09] 96207186	(E)CABLE-ANTENNA,I/P (D)KABEL					(F)CABLE (S)CABLE			L=1480		
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

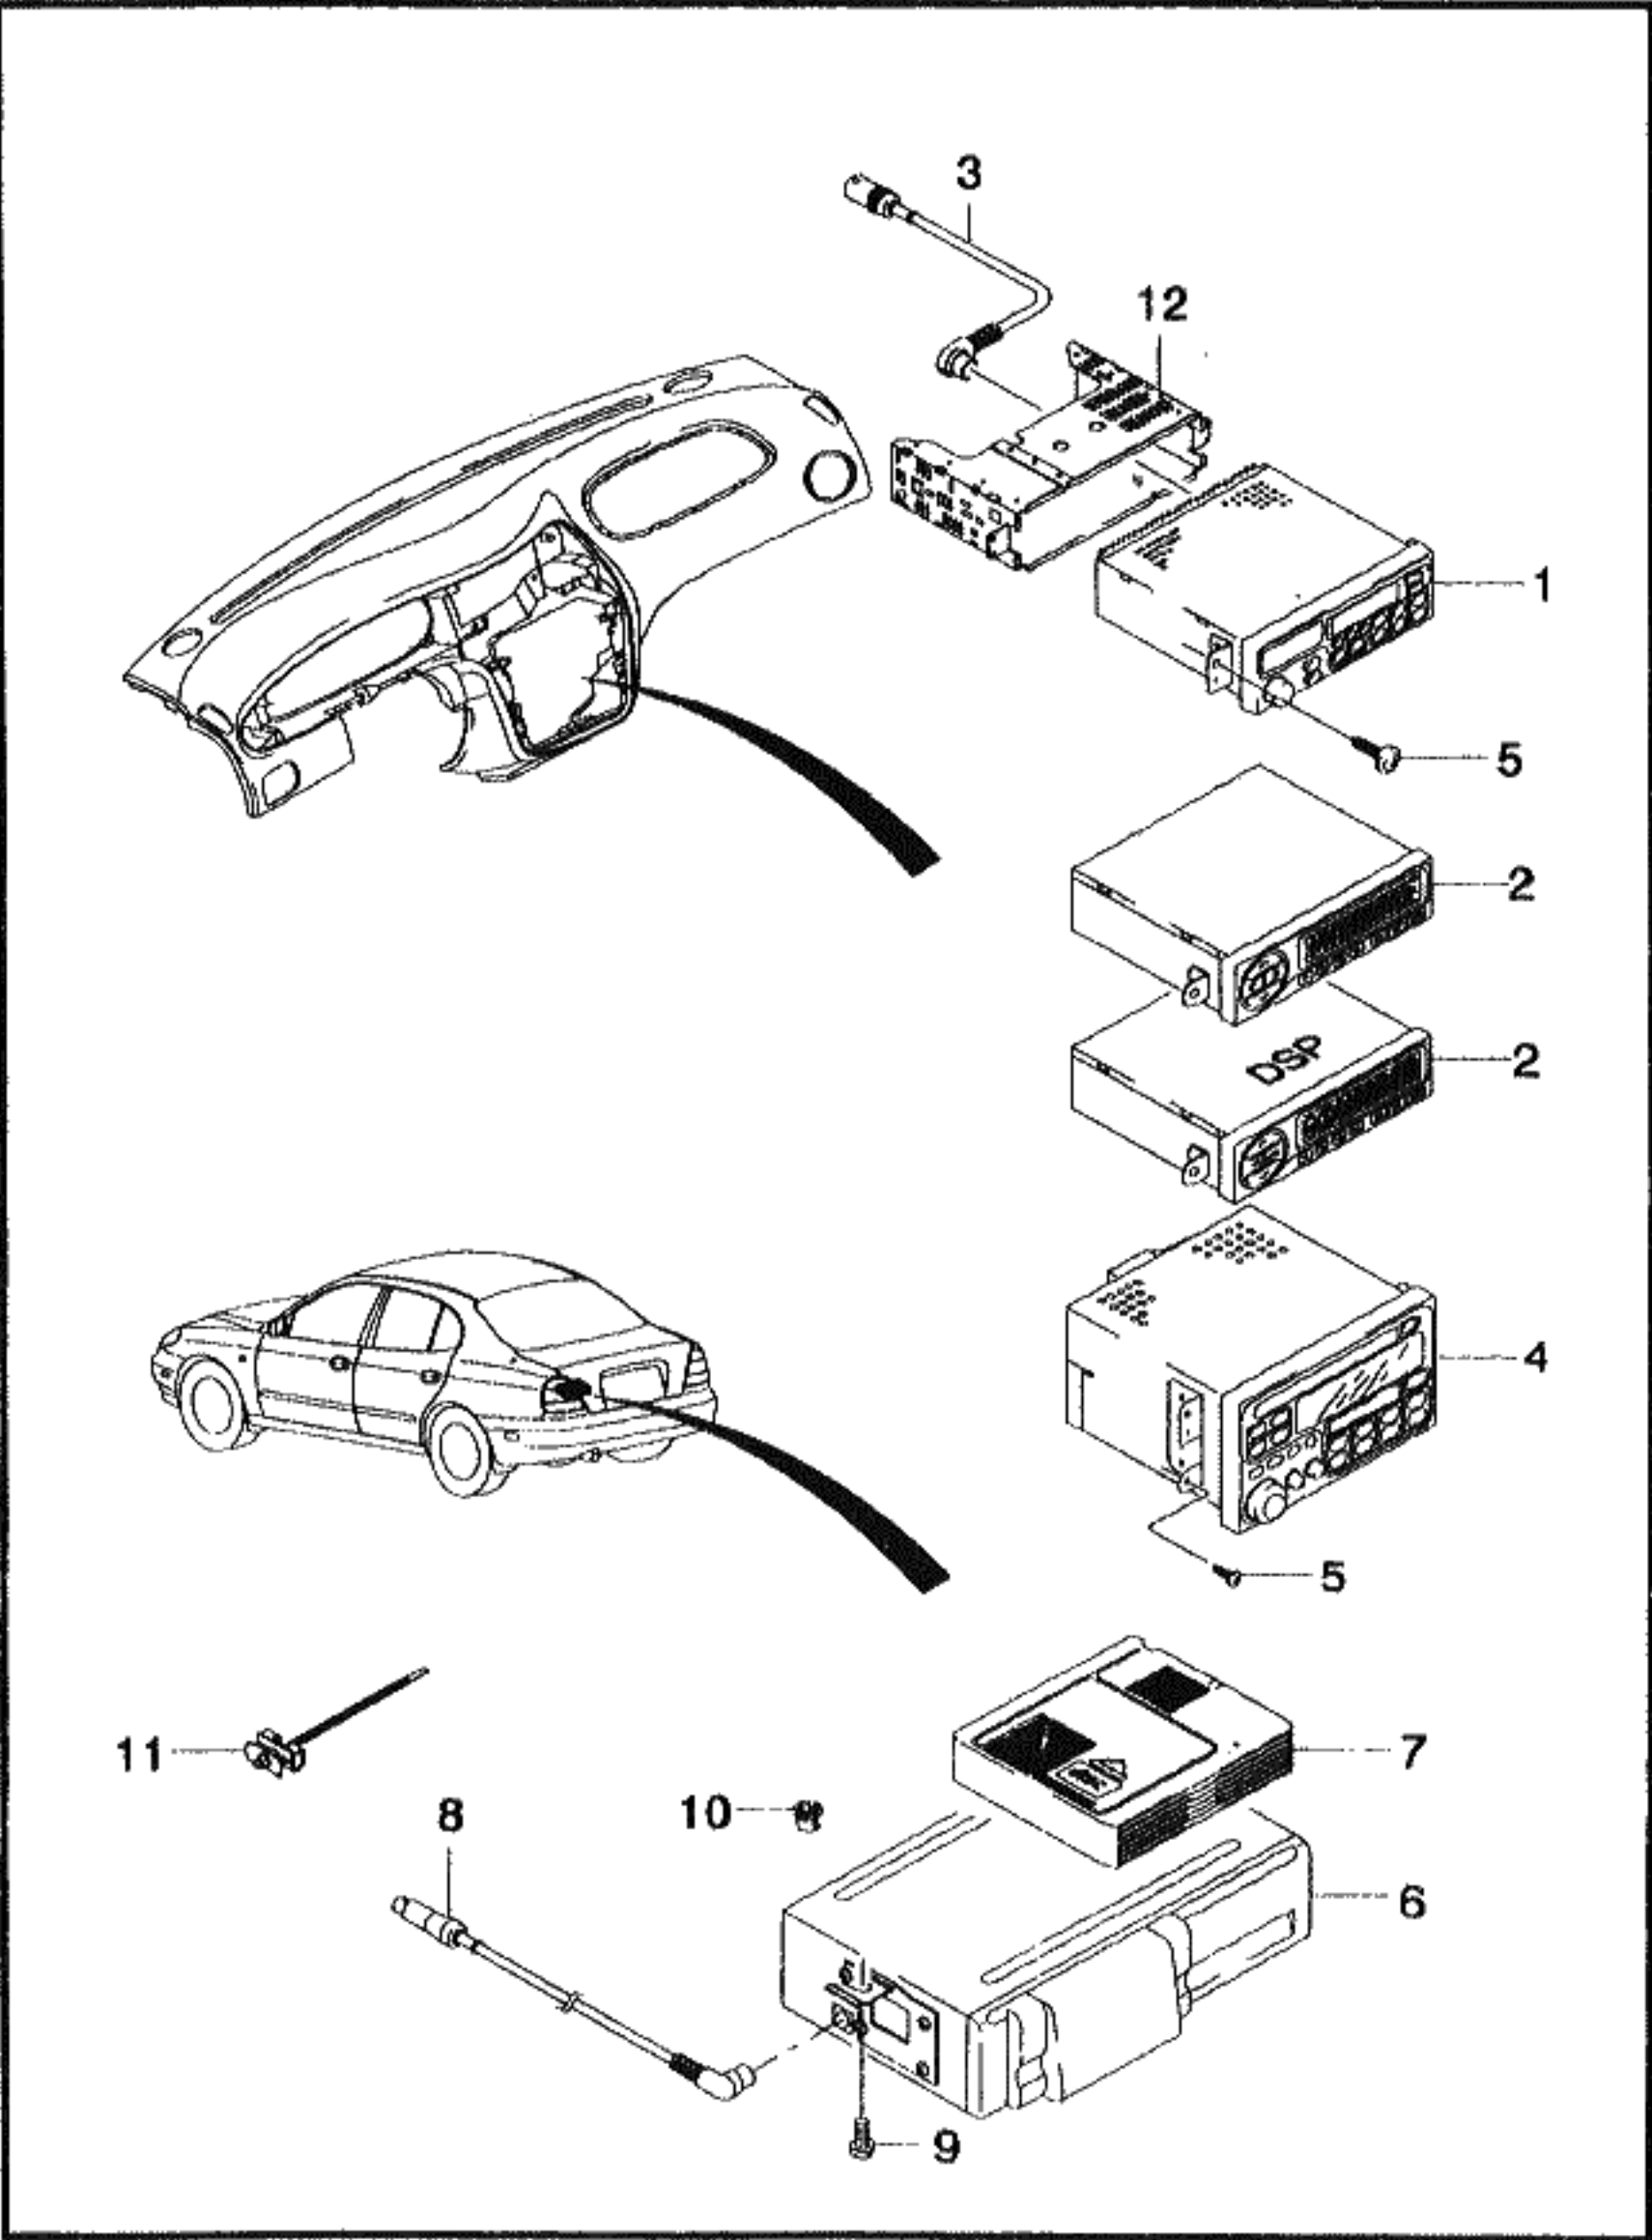


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
[01]		(E)CASSETTE (D)KASSETTE				(F)CASSETTE (S)CASETE					
	96248432	.	O	O	&UN2		1				DD
	96248433	.	O	O	&UN2&UP1		1				DC
	96251254	.	O	O	&UN2&DSP&UP1		1				HE
	96251255	.	O	O	&UN2&DSP		1				HF
	96251456	.	O	O	&UN2&UE1&UP1		1				HR
	96251457	.	O	O	&UN2&UE1		1				HS
	96312714	.	A	A	&UN2&UP1&2G3		1				WE
	96312715	.	A	A	&UN2&2G3		1				WF
	96251256	.	A	A	&UN2&DSP&UP1&2G3		1				EE
	96251257	.	A	A	&UN2&DSP&2G3		1				EF
	96251458	.	A	A	&UN2&UE1&UP1&2G3		1				ER
	96251459	.	A	A	&UN2&UE1&2G3		1				ES
	96312718	.	A	A	&UN2&UP1&XLA		1				WL
	96312719	.	A	A	&UN2&XLA		1				WM
	96251260	.	A	A	&UN2&DSP&UP1&XLA		1				TE
	96251261	.	A	A	&UN2&DSP&XLA		1				TF
	96251462	.	A	A	&UN2&UE1&UP1&XLA		1				TR
	96251463	.	A	A	&UN2&UE1&&XLA		1				TS
	96312720	.	A	A	&UN2&UP1&XJ6		1				WJ
	96312721	.	A	A	&UN2&XJ6		1				WK
	96251262	.	A	A	&UN2&DSP&UP1&XJ6		1				JE
	96251263	.	A	A	&UN2&DSP&XJ6		1				JF
	96251304	.	A	A	&UN2&UE1&UP1&XJ6		1				JW
	96251305	.	A	A	&UN2&UE1&XJ6		1				JX
[02]		(E)GRAPHIC EQUALIZER (D)AUSGLEICH				(F)EQALISATEUR (S)DEL EMPATE					
	96251303	.	O	O	&UN2&UE1		1				VB
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

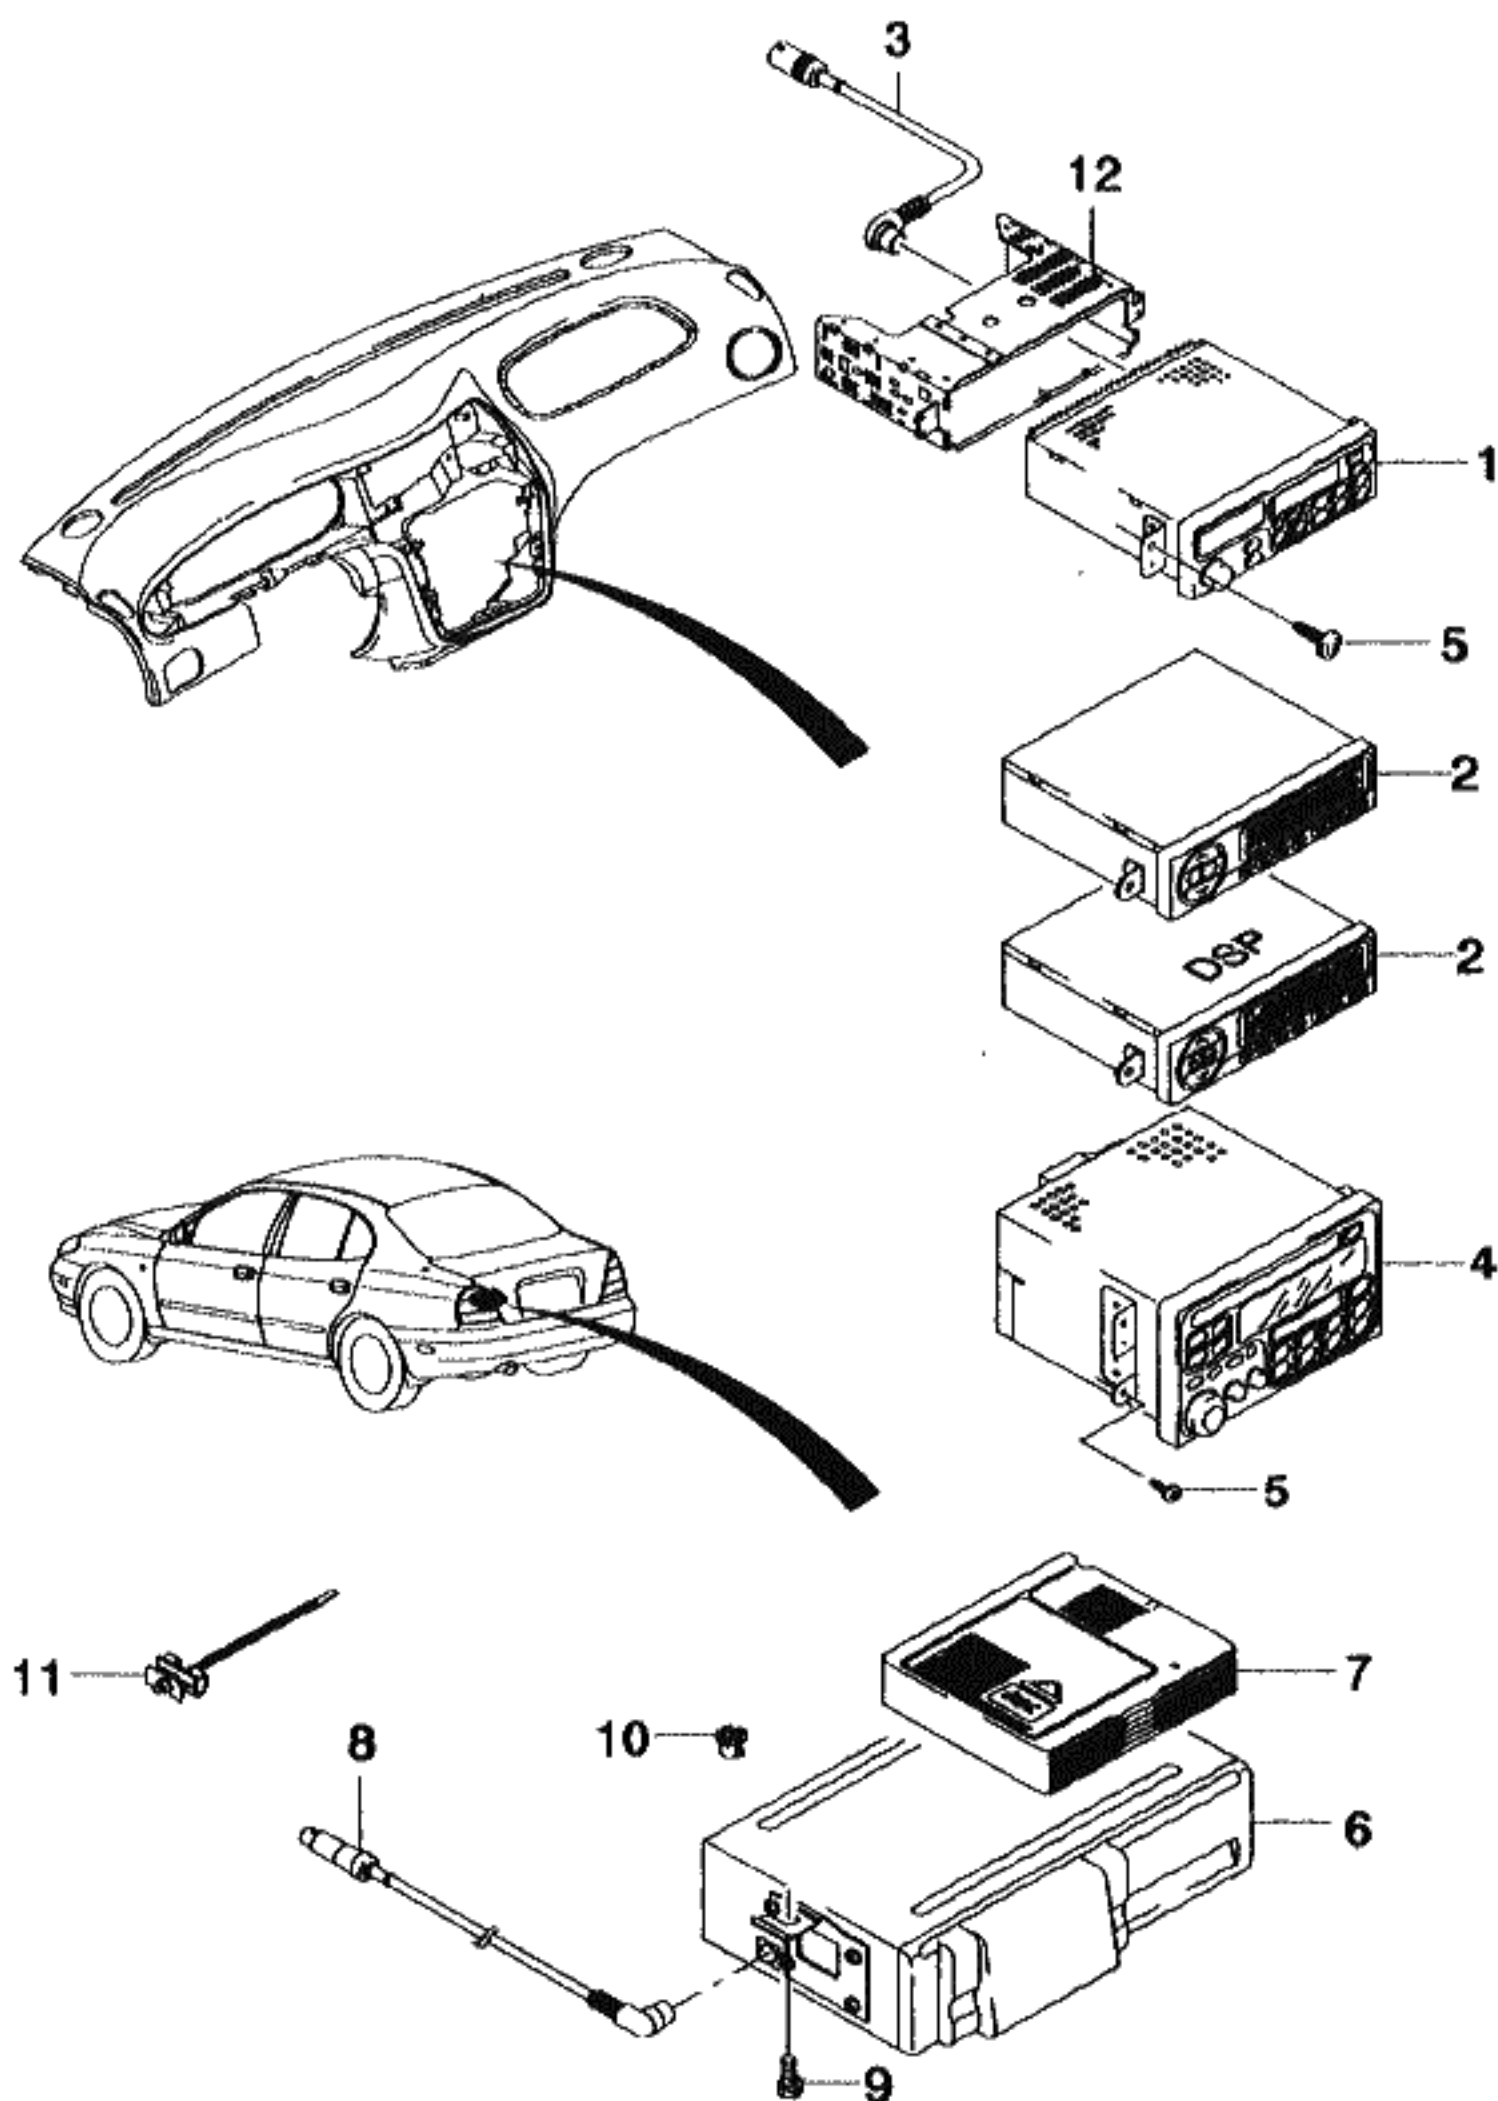


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	96207221	.	O	O	&UN2&DSP		1				VA	
	[03]				(E)CORD-CDC,I/P (D)CD-KABEL			(F)SUPPORT COMPACT DISC (S)MANGUERA CD				
	96207191	.	O	O	&UP1		LH 1					
	[04]				(E)PLAYER-COMPACT DISK (D)SCHEIBE			(F)DISQUE (S)DISCO				
	96304685	.	O	O	&W8K		1				CD	
	96229570	.	A	A	&W8K&2G3		1				CE	
	96229572	.	A	A	&W8K&XLA		1				CL	
	96229573	.	A	A	&W8K&XJ6		1				CJ	
	[05]				(E)SCREW-TAPPING (D)SCHRAUBE			(F)VIS (S)TORNILLO				
	03160-48165	.	O	O			4					
	[06]				(E)CD CHANGER A-6 DISC (D)CD-WECHSLER-SATZ			(F)CHARGEUR CD CPL (S)CAMBIADOR CD				
	96207201	.	O	O	&UP1		1				AA	
	[07]				(E)CD MAGAZINE (D)CD-MAGAZIN			(F)CD MAGAZINE (S)CD-REVISTA				
	96305158	.	O	O	&UP1		1					
	[08]				(E)CORD-CDC,RR (D)CD-KABEL			(F)SUPPORT COMPACT DISC (S)MANGUERA CD				
	96207192	.	O	O	&UP1		LH 1					
	[09]				(E)BOLT-HEXAGON (D)SCHRAUBE			(F)BOULON (S)PERNO				
	01137-08165	.	O	O	&UP1		3					
	[10]				(E)NUT-CAGE (D)KÄFIG			(F)CAGE (S)JAULA				
	90080307	.	O	O	&UP1		3					
	[11]				(E)CLIP A-CD CABLE (D)KLEMME			(F)ATTACHE (S)GRAPA				
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

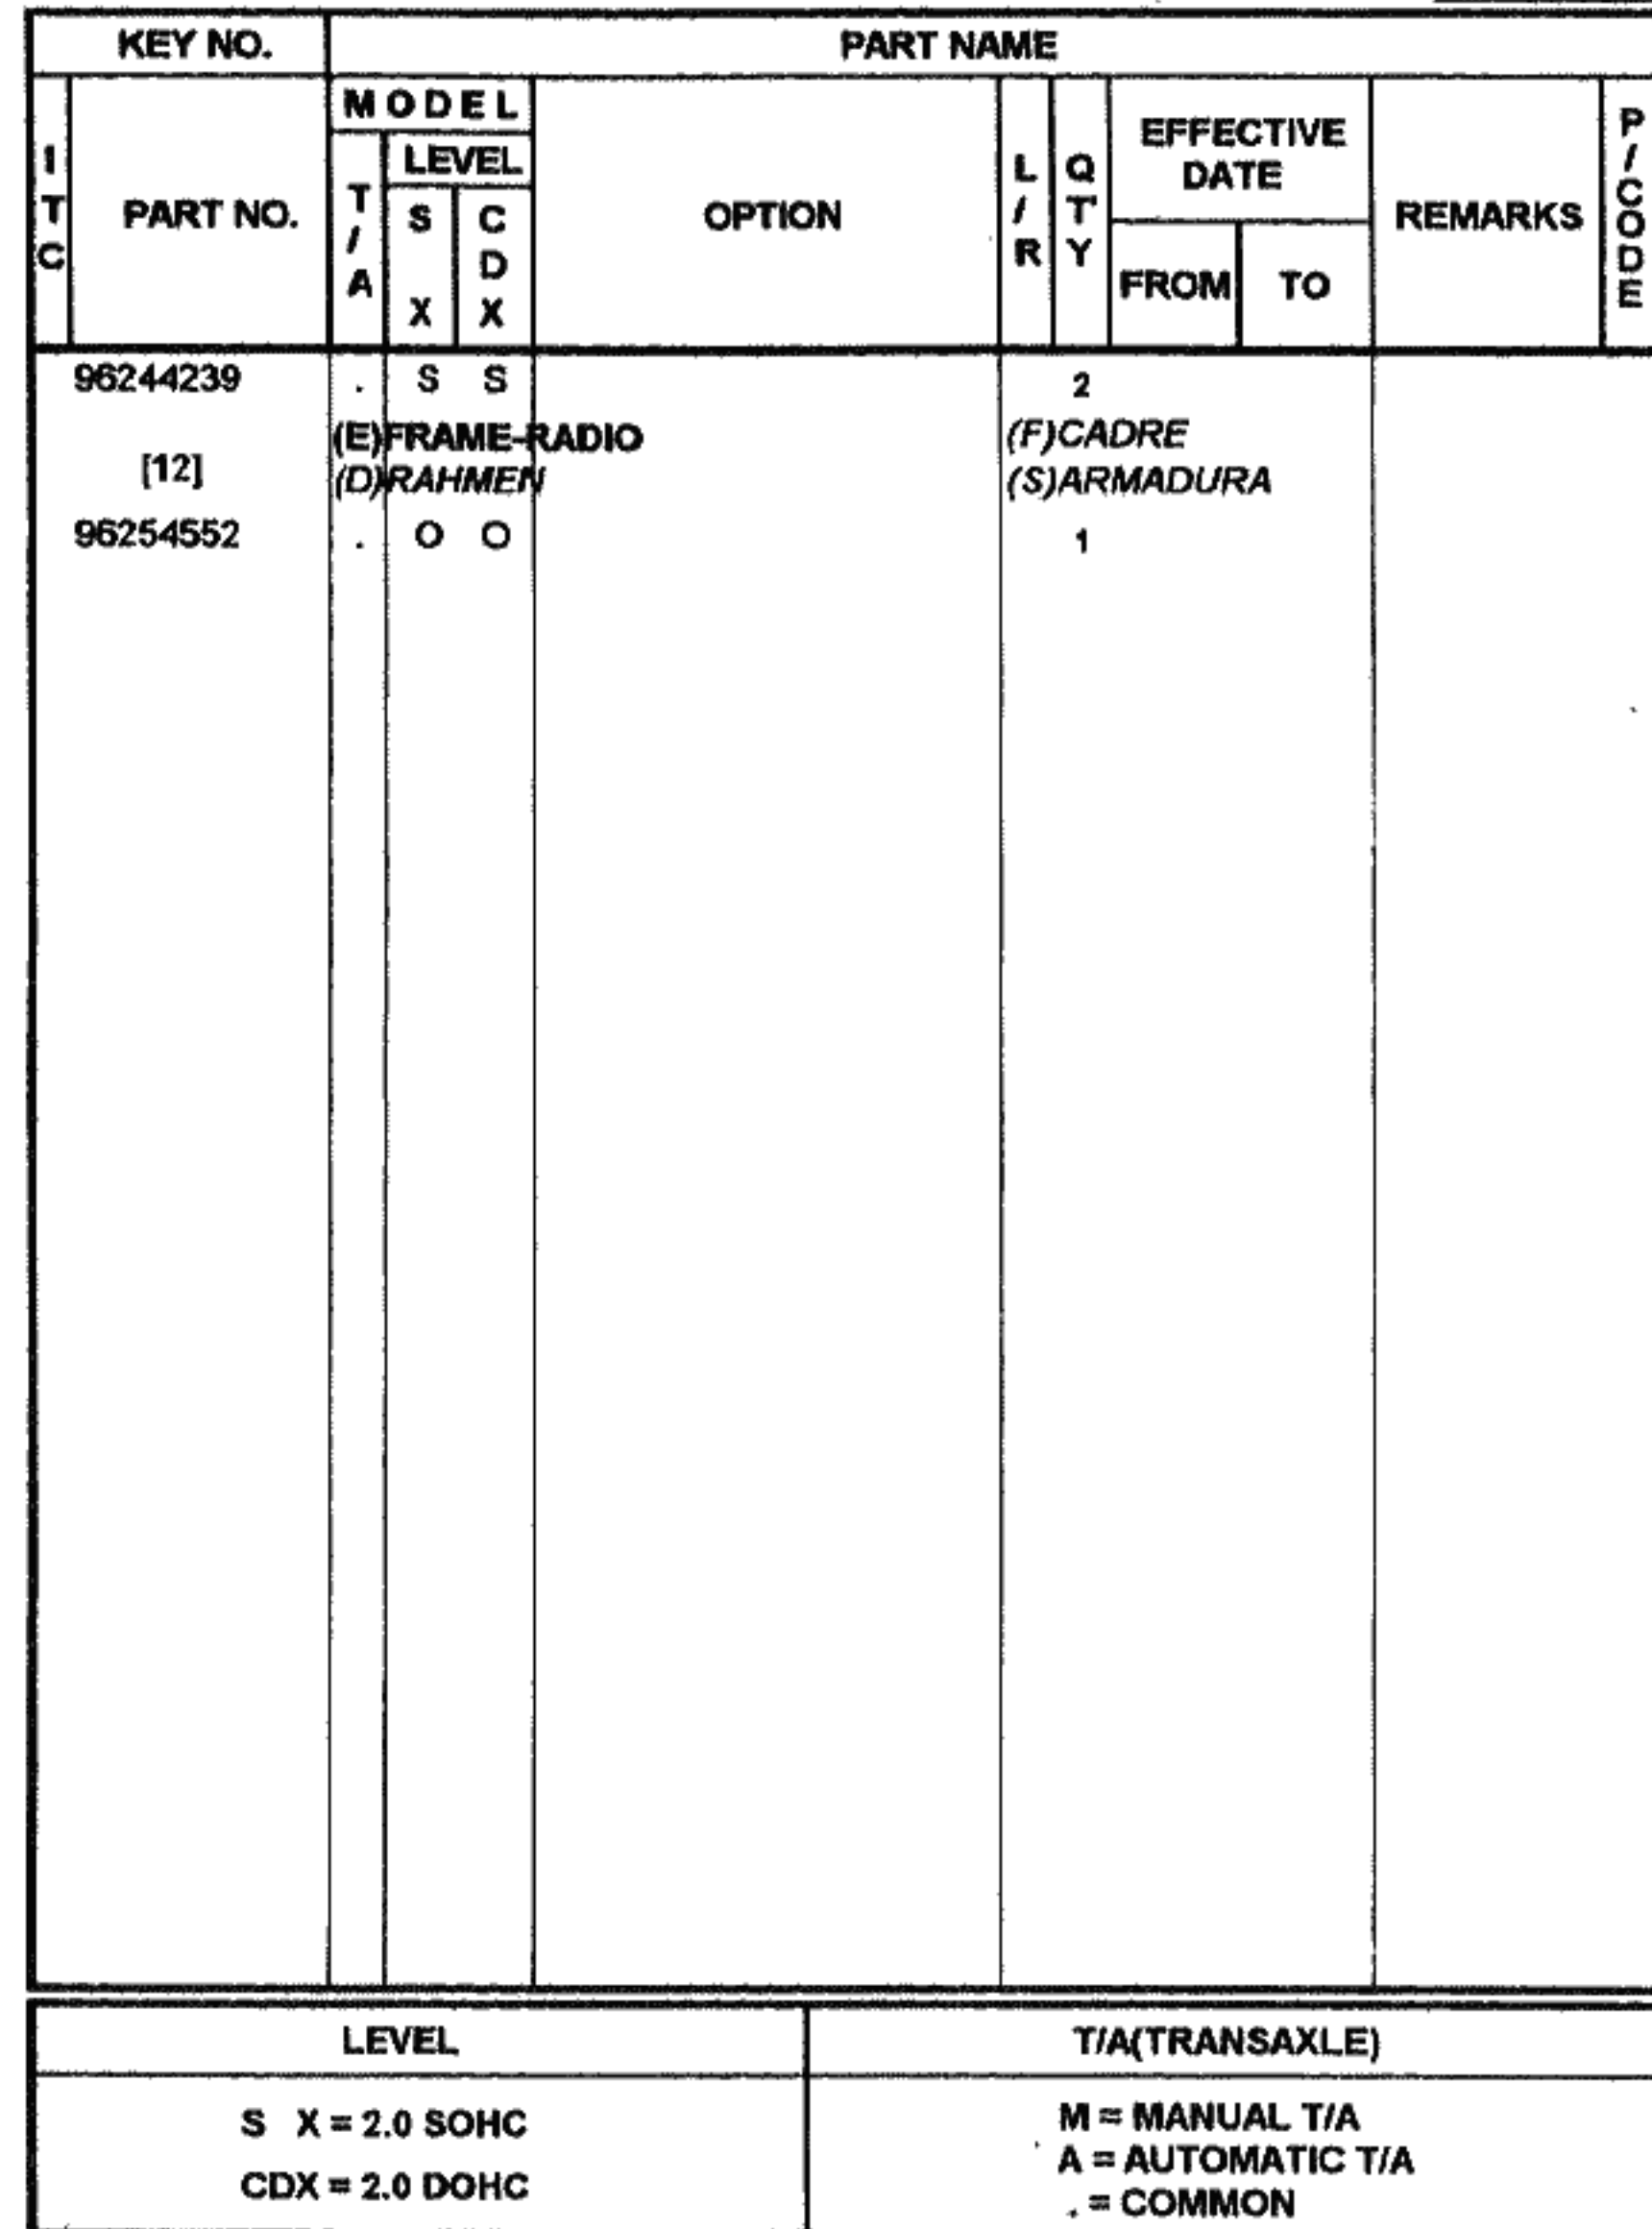

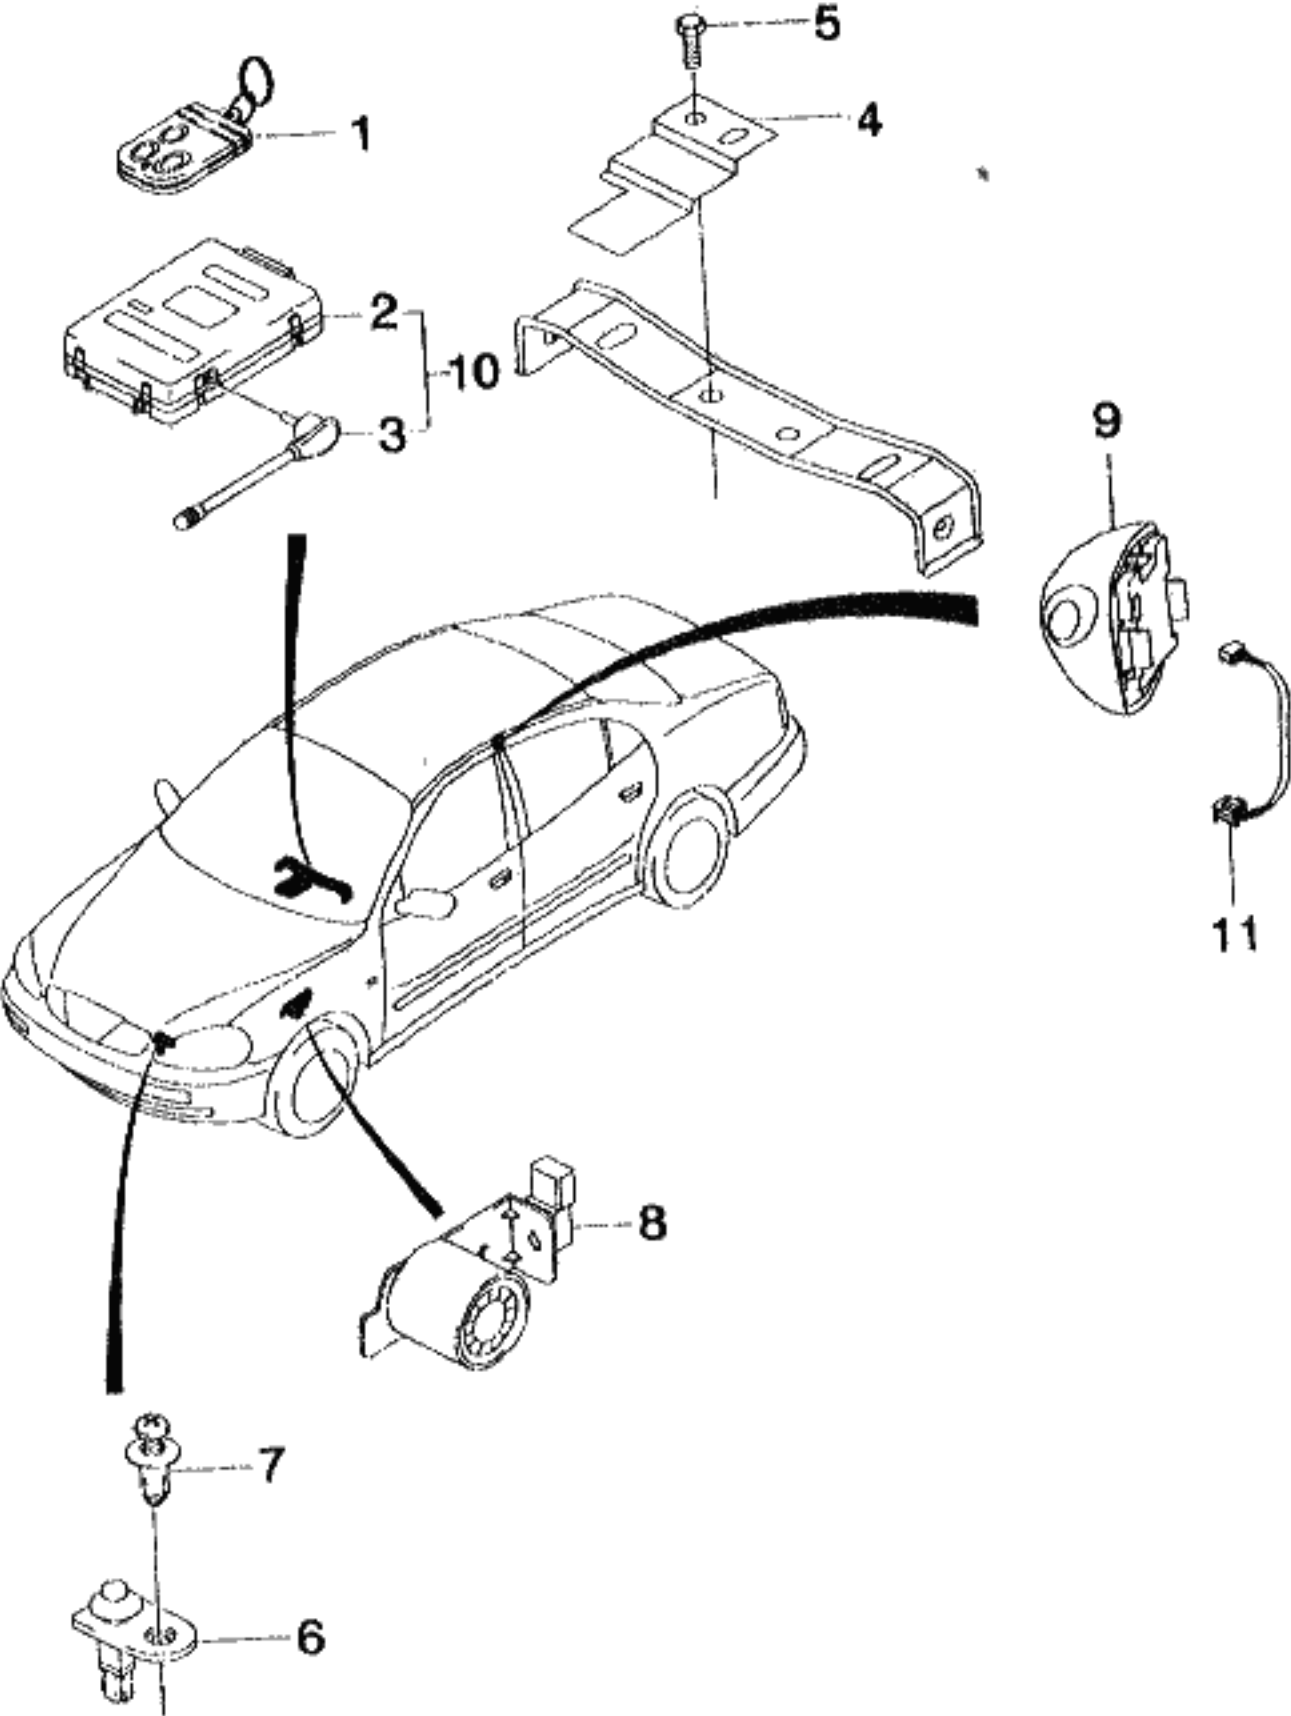


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96206761	.	O	O	&CAL/UIP		1	970826				
Y	96206764	.	O	O	&CAL/UIP		1	970827				
	[11]				(E)WIRE A-ANTI THIEFT (D)VERDRAHTUNG			(F)CABLE (S)ALAMBRE				
	96257182	.	O	O	&UIP		1	970818				
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

5510 AIR BAG SYSTEM

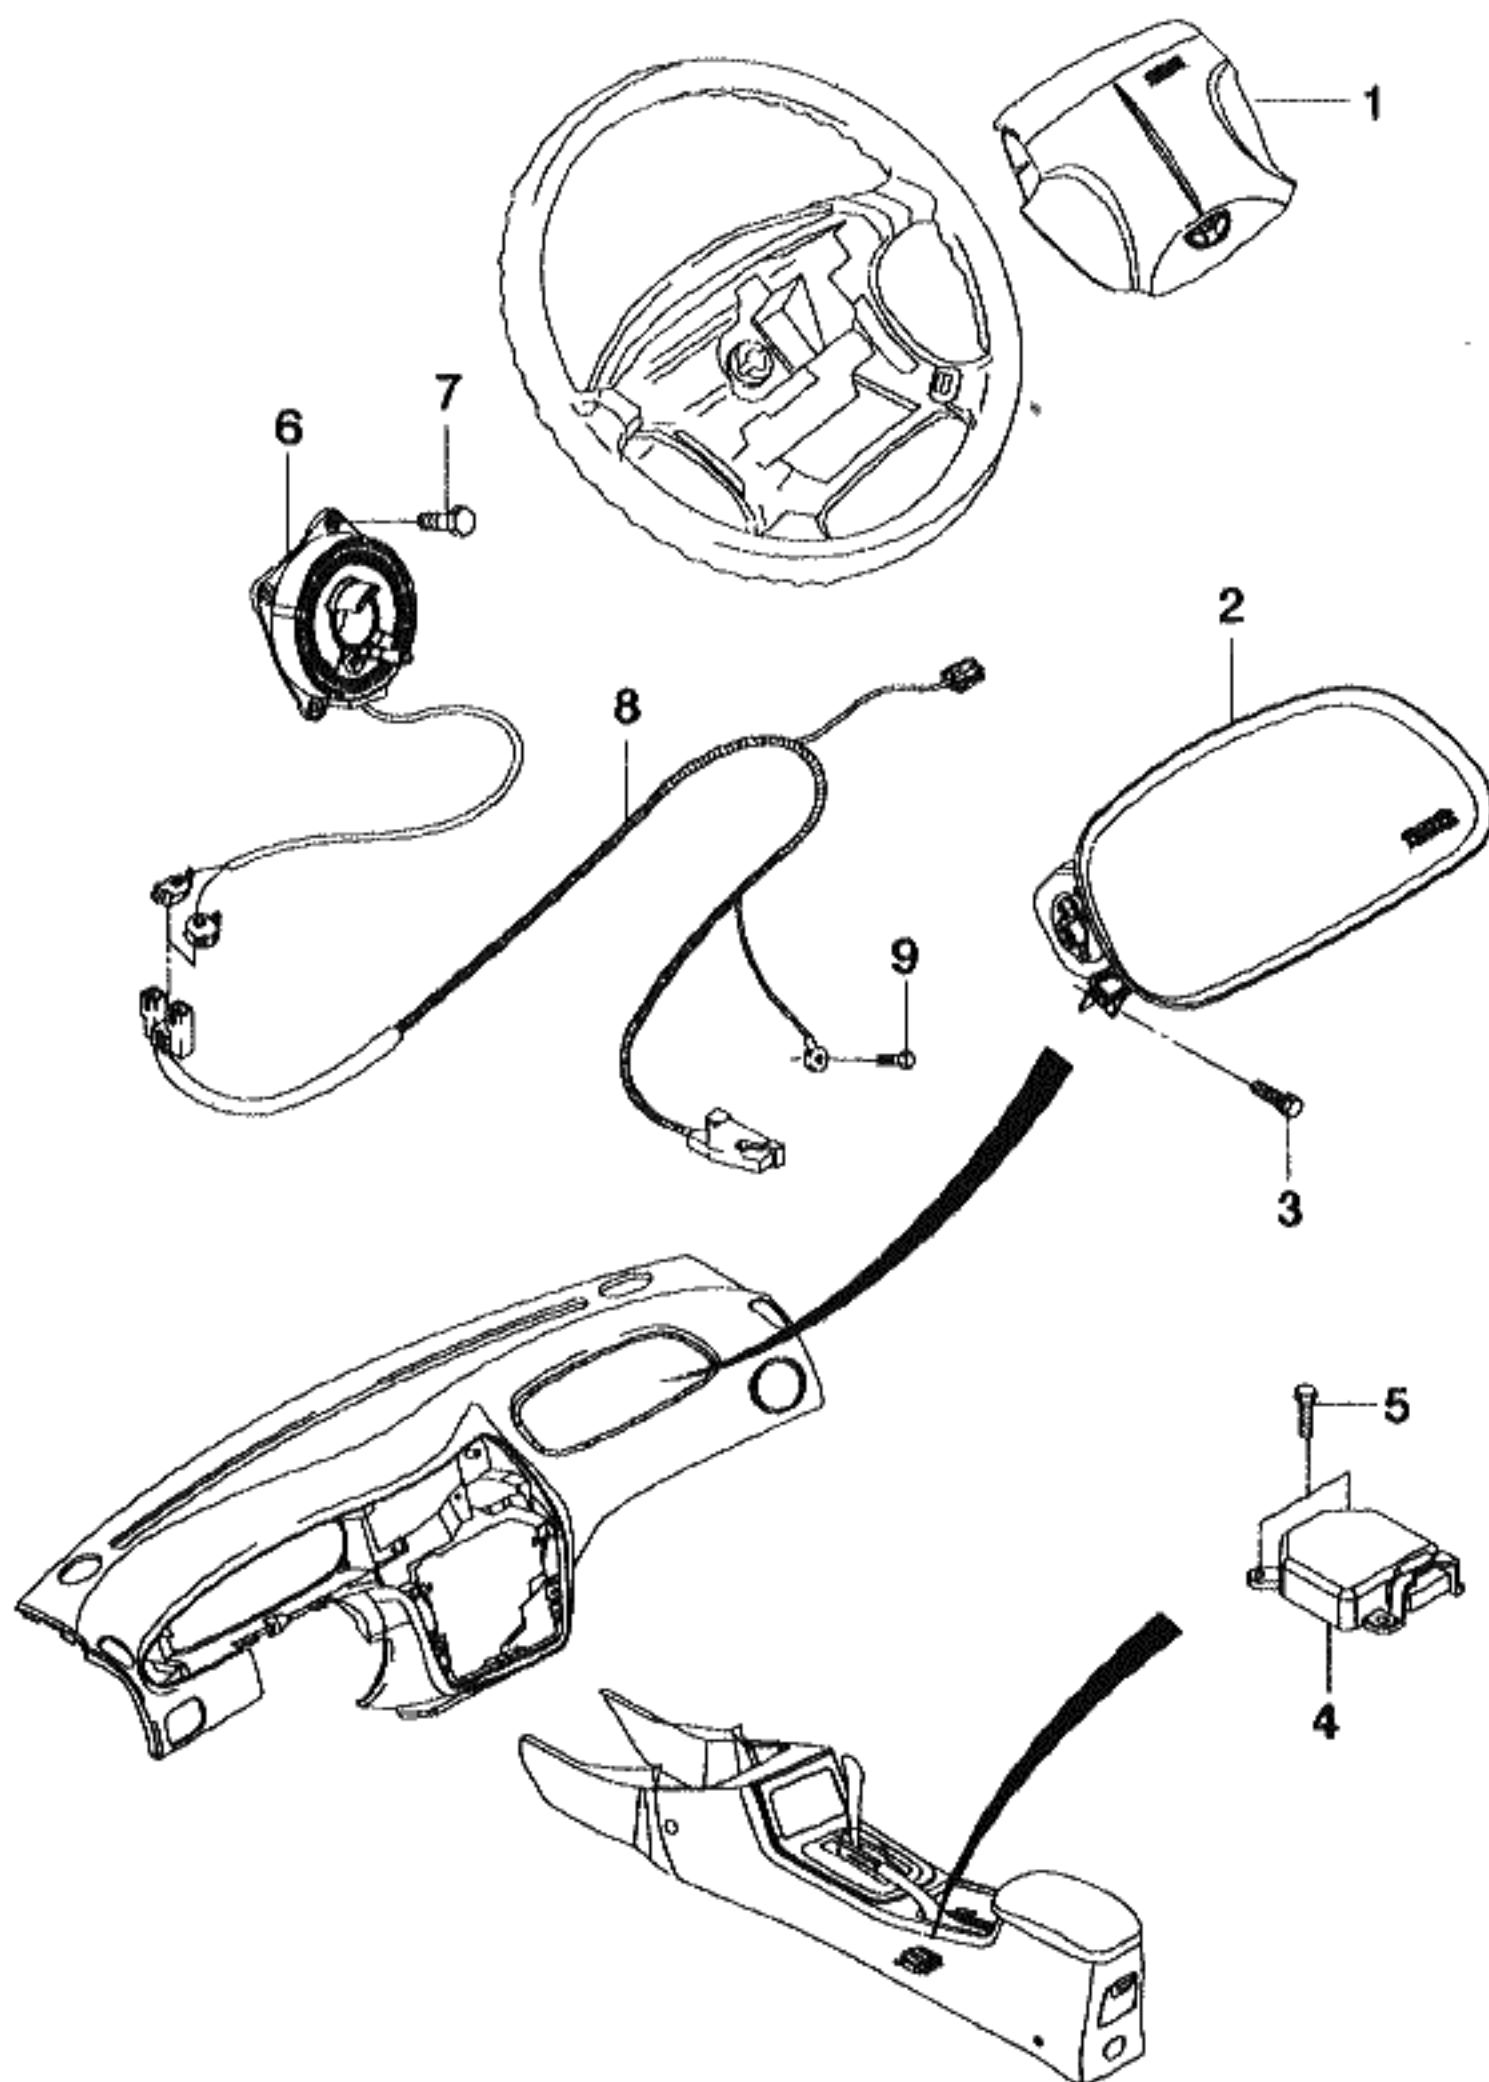


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96243671	(E)MODULE A-AIR BAG,DRIVER (D)AIR BAG SYSTEM	.	O	S &AJ3		1	(F)COUSSIN DE SECURITE (S)SISTEMA DE BOLSA DE AIRE			DD
	[02] 96239199	(E)MODULE A-AIR BAG,PASS. (D)MODUL,AIR BAG	.	O	O &AJ3&AJ7		1	(F)MODULE-AIR BAG (S)MODULO-AIR BAG			PD
	[03] 09118-06002	(E)BOLT-W/WASHER (D)SCHRAUBE	.	O	O &AJ3&AJ7		6	(F)BOULON (S)PERNO			
	[04] 96225914 96225913	(E)SENSOR-AIR BAG (D)AIR BAG SYSTEM	.	O	S &AJ3 O O &AJ3&AJ7		1 1	(F)COUSSIN DE SECURITE (S)SISTEMA DE BOLSA DE AIRE			
	[05] 09119-06015 O 09115-06006	(E)BOLT (D)SCHRAUBE	.	O	S &AJ3/AJ7 S &AJ3/AJ7		3 3	970629 970630			
	[06] 96234136 96234137	(E)CLOCK SPRING A (D)UHR	.	O	S &N58 A A &N58&XJ6		1 1	(F)HORLOGE (S)RELOJ			
	[07] 03110-48133	(E)SCREW-TAPPING (D)SCHRAUBE	.	O	S &N58		4	(F)VIS (S)TORNILLO			
	[08] 96219329 96219328	(E)WIRING HARNESS-AIR BAG (D)VERDRAHTUNG,AIR BAG	.	O	S &AJ3 O O &AJ3&AJ7		1 1	(F)CABLAGE (S)INSTALACION ELECTRICA			WB WA
	[09]	(E)BOLT (D)SCHRAUBE						(F)BOULON (S)PERNO			




LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

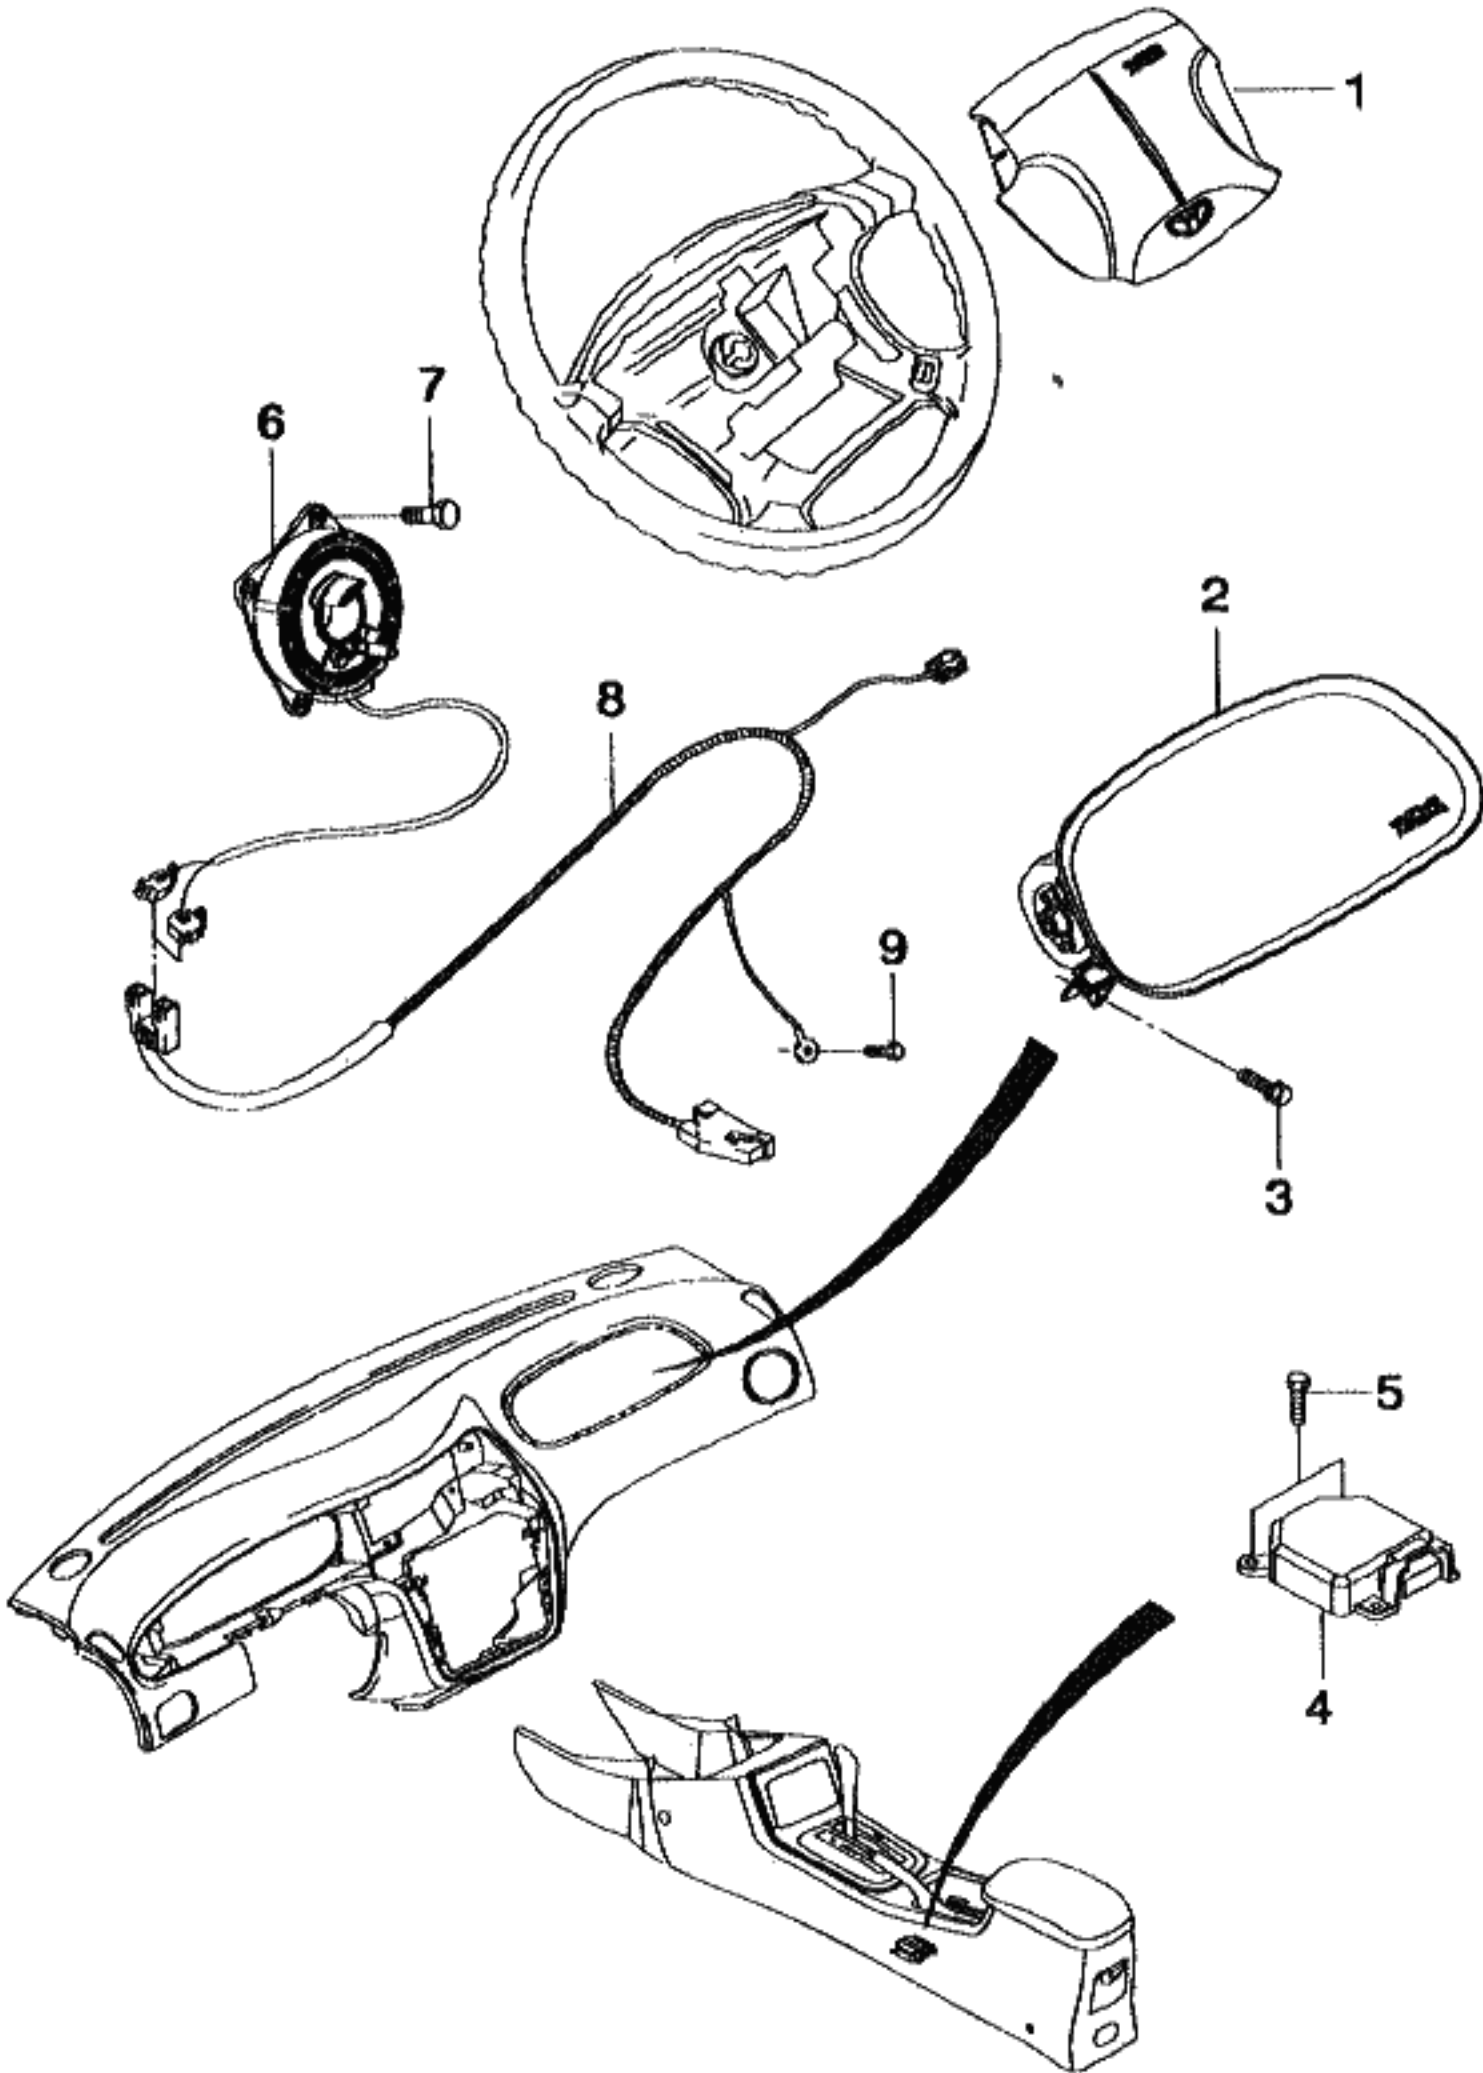

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	09115-06001	.	O	S	&AJ3/AJ7		1		970629		
Y	09115-06006	.	O	S	&AJ3/AJ7		1	970630			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

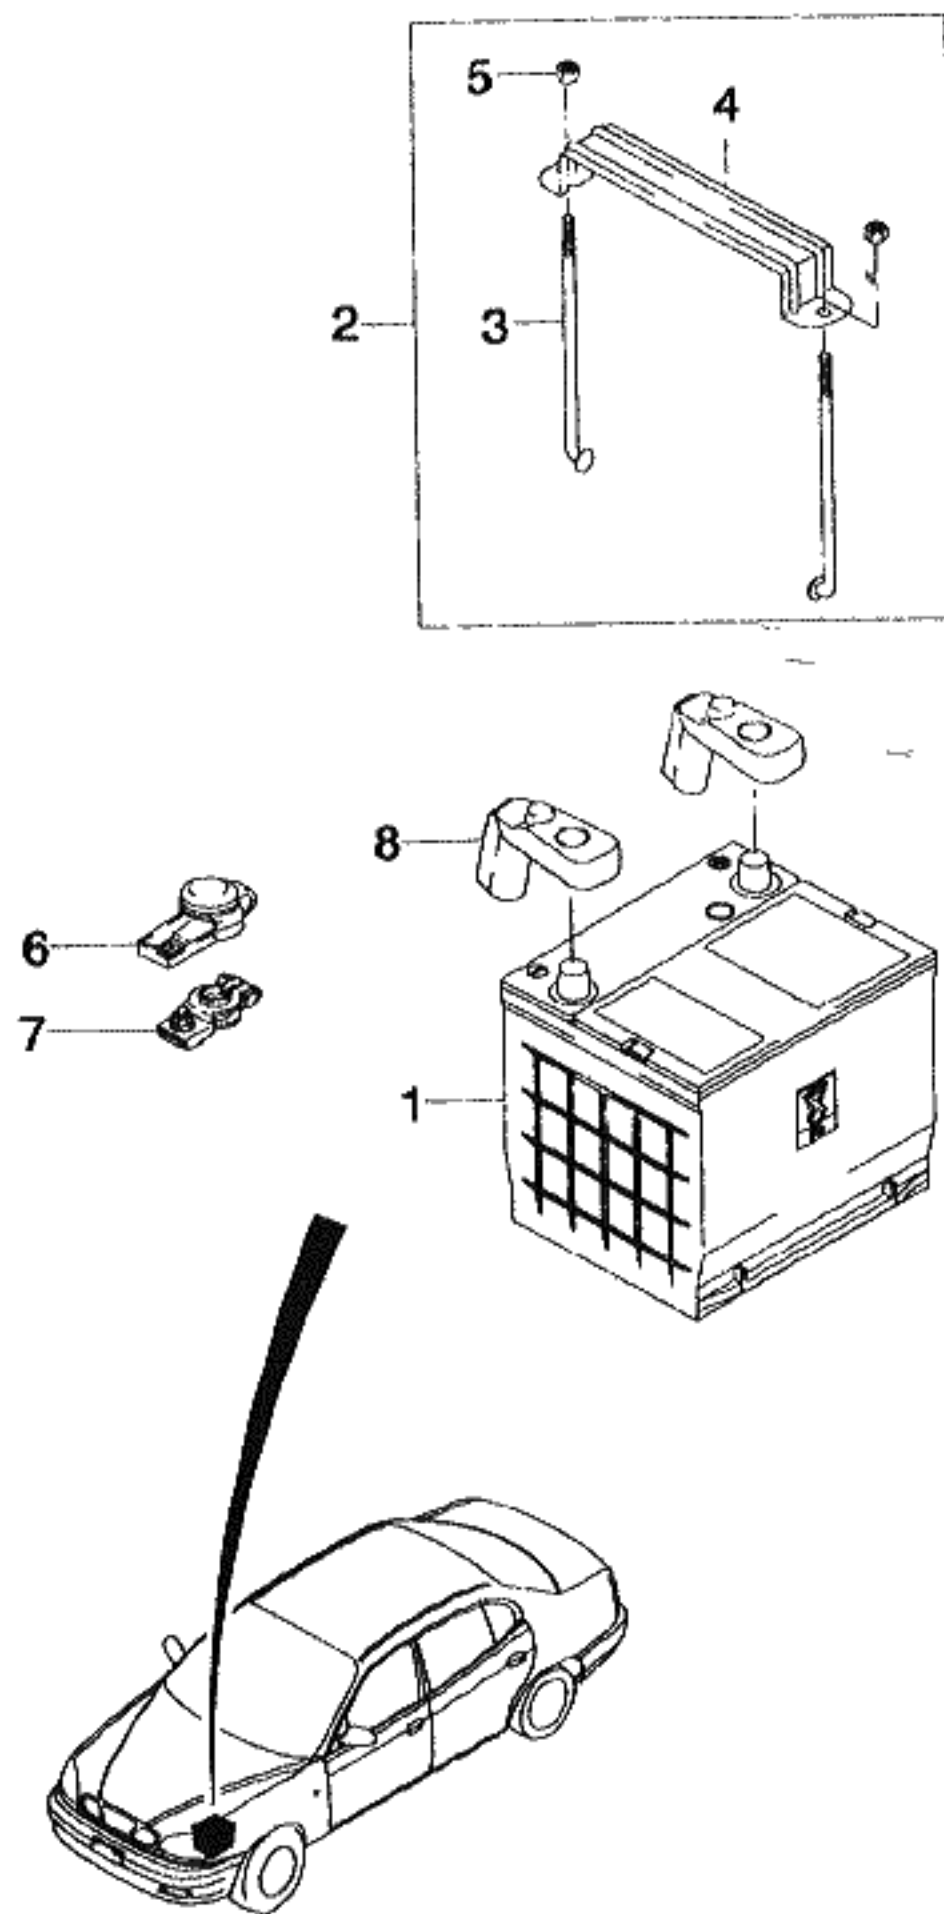


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)BATTERY A (D)BATTERIE				(F)BATTERIE (S)BATERIA					
	96230966	. S S		&TN6		1				55AH	TB
	96230967	. A A		&TNH&XCA		1					JC
	[02]	(E)HOLDER A-BATTERY (D)BEHÄLTER				(F)MONTURE (S)RETNEDOR					
	96206906	. S S				1					
	[03]	(E)ROD-HOLDER,BATTERY (D)STAB,BATTERIE				(F)TRINGLE-BATTERIE (S)VARILLA-BATERIA					
	96206907	. S S				2					
	[04]	(E)BAR-HOLDER,BATTERY (D)STANGE				(F)BARRE (S)BARRA					
	96305845	. S S				1					
	[05]	(E)NUT-W/WASHER (D)MUTTER				(F)ECROU (S)TUERCA					
	08361-25063	. S S				2					
	[06]	(E)COVER-BATTERY TERMINAL (D)DECKEL,BATTERIE-PFOSTEN				(F)CHAPEAU-POLE DE BATTERIE (S)CUBIERTA					
	96187088	. S S				1				(-) BLACK	
	96187087	. S S				1				(+) RED	
	[07]	(E)CONNECTOR A-BATTERY (D)VERBINDUNG,BATTERIE				(F)CONNECTEUR-BATTERIE (S)CONECTOR-BATERIA					
	96187092	. S S				1				(-)	
	96189093	. S S				1				(+)	
	[08]	(E)CAP-BATTERY (D)DECKEL,BATTERIE-PFOSTEN				(F)CHAPEAU-POLE DE BATTERIE (S)TAPA					
	96239892	. S S				1				(-) BLACK	
	96239891	. S S				1				(+) RED	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

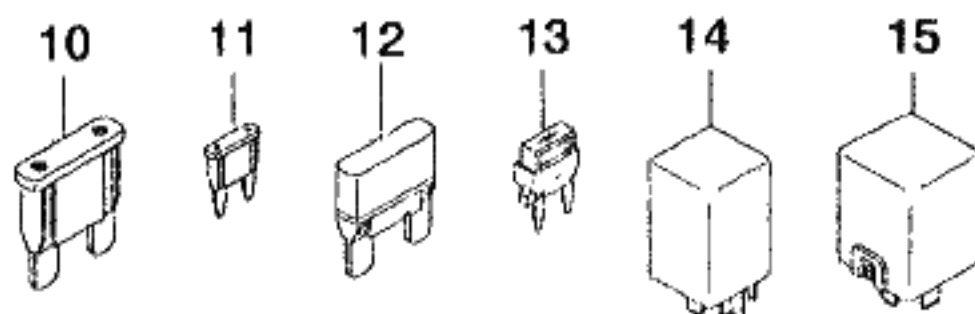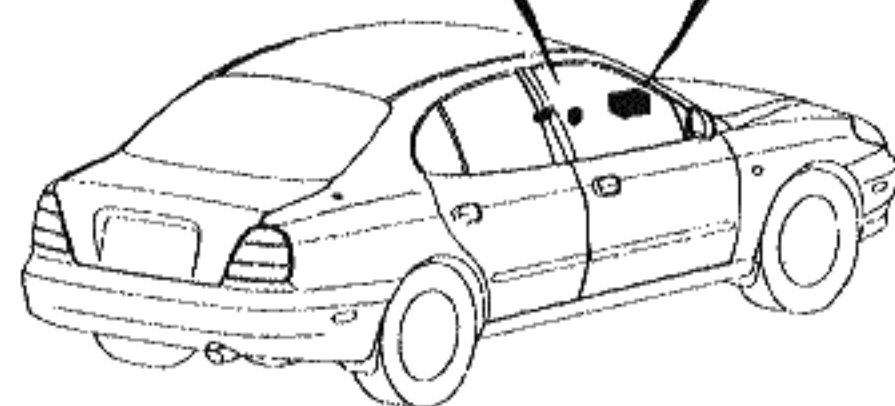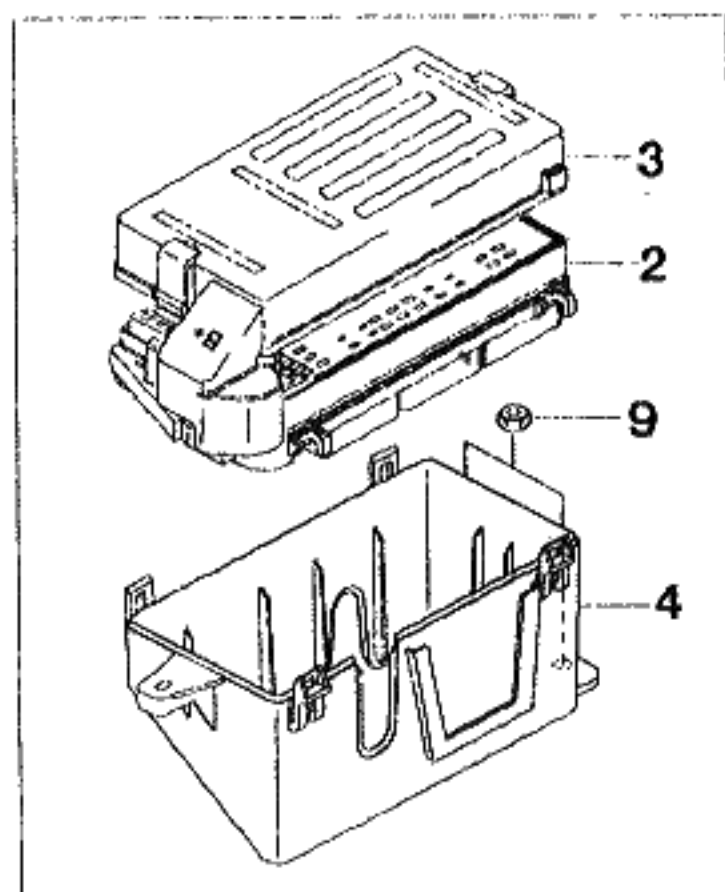


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) BOX A-FUSE & RELAY (D) RELAIS-&SICHERUNGSKASTEN								(F) BOITE-RELA ET FUSIBLE (S) CAJA-RELEVOS Y FUSIBLES	
	96239911	S		JL9/JTC/T96		1		970601		BE	
N	96257125	S		JL9/JTC/T96		1		970602		BJ	
	96239912	O		&JL9/JTC		1		970601		BF	
N	96257126	O		&JL9/JTC		1		970602		BK	
	96233318	O	S	&T96		1		970601		BA	
N	96257123	O	S	&T96		1		970602		BG	
	96207018	O	O	&JL9/JTC&T96		1		970601		BB	
N	96257124	O	O	&JL9/JTC&T96		1		970602		BH	
	[02]	(E) ELECTRIC CASE A (D) KASTEN								(F) CARTER (S) CAJA	
	96234451	S	S			1					
	[03]	(E) COVER-FUSE BOX (D) DECKEL								(F) CARTER (S) CUBIERTA	
	96312620	S	S			1					
	[04]	(E) SPLASH-SHIELD (D) SCHMUTZABDECKUNG								(F) PARE BOUE (S) FALDILLA	
	96233309	S	S			1					
	[05]	(E) RELAY A-CENTRAL, DOOR LOCK (D) RELAIS								(F) RELAI (S) RELEVADOR	
	96190176	S	S			1					
	[06]	(E) MODULE A-CHIME BELL (D) MODUL, GLOCKE								(F) MODULE-CARILLON (S) MODULO-CAMPANA DE	
	96223528	A	A	&U44		1				CY	
	96219056	S	S			1				CN	
	[07]	(E) SCREW-TAPPING (D) SCHRAUBE								(F) VIS (S) TORNILLO	
	03160-48165	S	S			2					

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

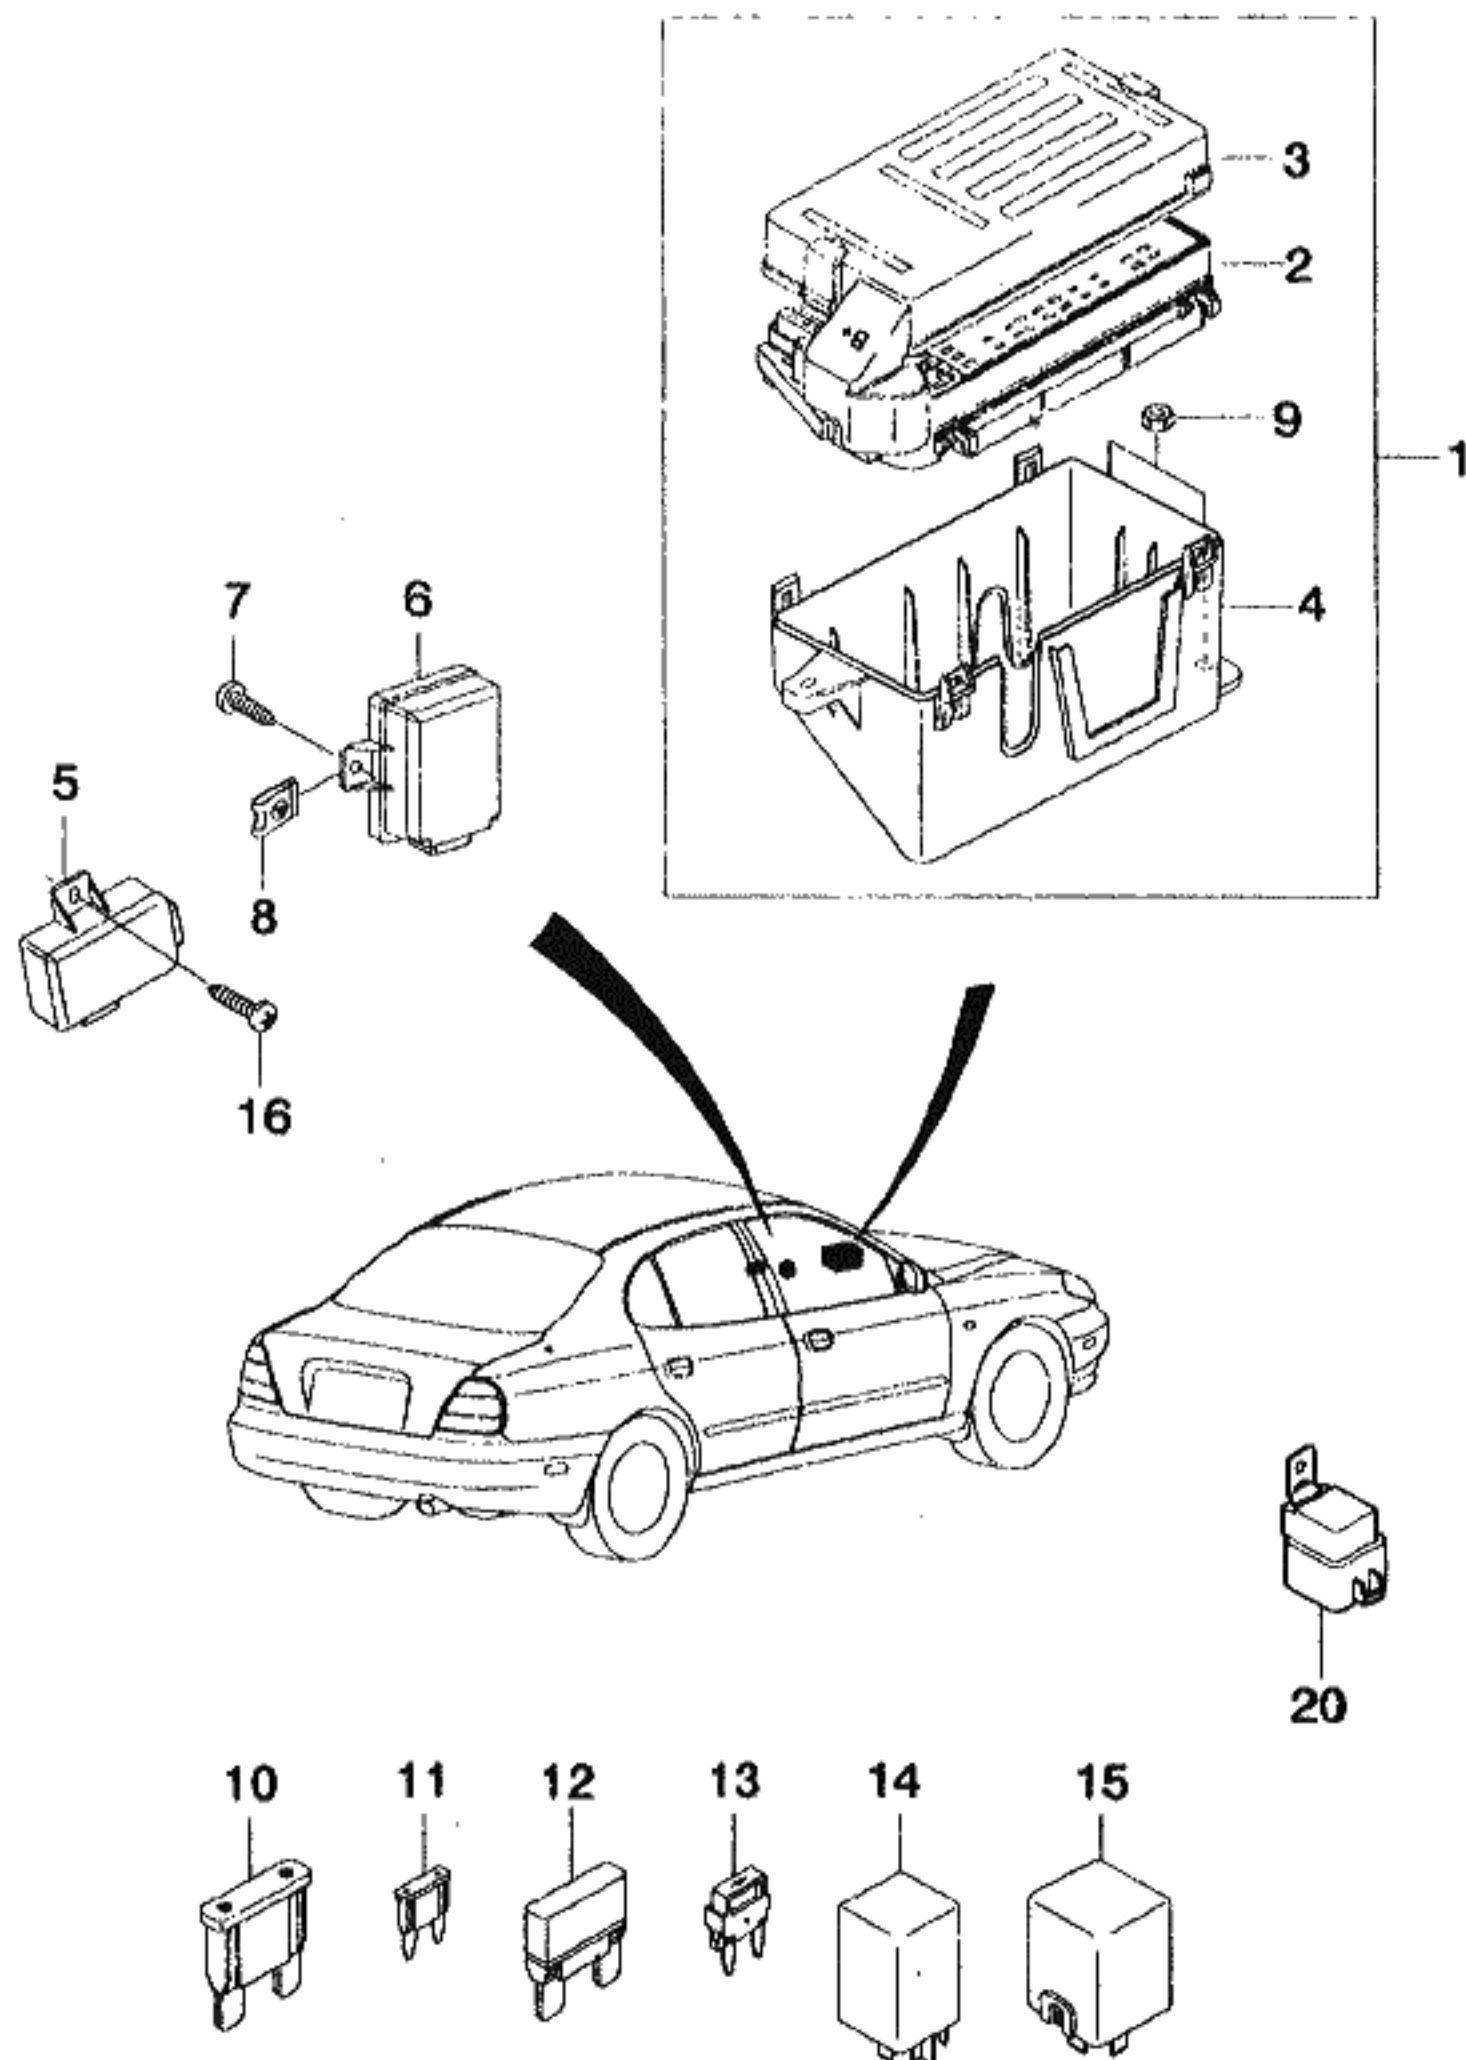


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[08] 03511-48018	(E)NUT-SPEED (D)MUTTER					(F)ECROU (S)TUERCA					
		S	S				2					
	[09] 09159-06011	(E)NUT (D)MUTTER					(F)ECROU (S)TUERCA					
		S	S				1					
	[10] 96234927	(E)FUSE-MAXI (D)SICHERUNG					(F)FUSIBLE (S)FUSIBLE					
		S	S				2			20AMP		
	96234928	S	S				4			30AMP		
	96234931	O	O	&JL9JTC			1			60AMP		
	[11] 96234924	(E)FUSE-MINI (D)SICHERUNG					(F)FUSIBLE (S)FUSIBLE					
		S	S				A			10AMP		
	96234923	S	S				A			15AMP		
	96234922	S	S				A			20AMP		
	96234921	S	S				3			25AMP		
	96234920	S	S				2			30AMP		
	[12] 96235020	(E)BREAKER-MAXI CIRCUIT (D)BRECHER-UMKREIS					(F)BRISANT-CIRCUIT (S)OLA F GRANDE					
		S	S				1					
	[13] 96234932	(E)DIODE (D)DIODE					(F)DIODE (S)DIODE					
		S	S				1					
	[14] 96250544	(E)RELAY A (D)RELAIS					(F)RELA (S)RELEVADOR					
		S	S				1			WIPER		
	96242630	A	A				1			REAR FOG		
	90244312	S	S				1			BLOWER		
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

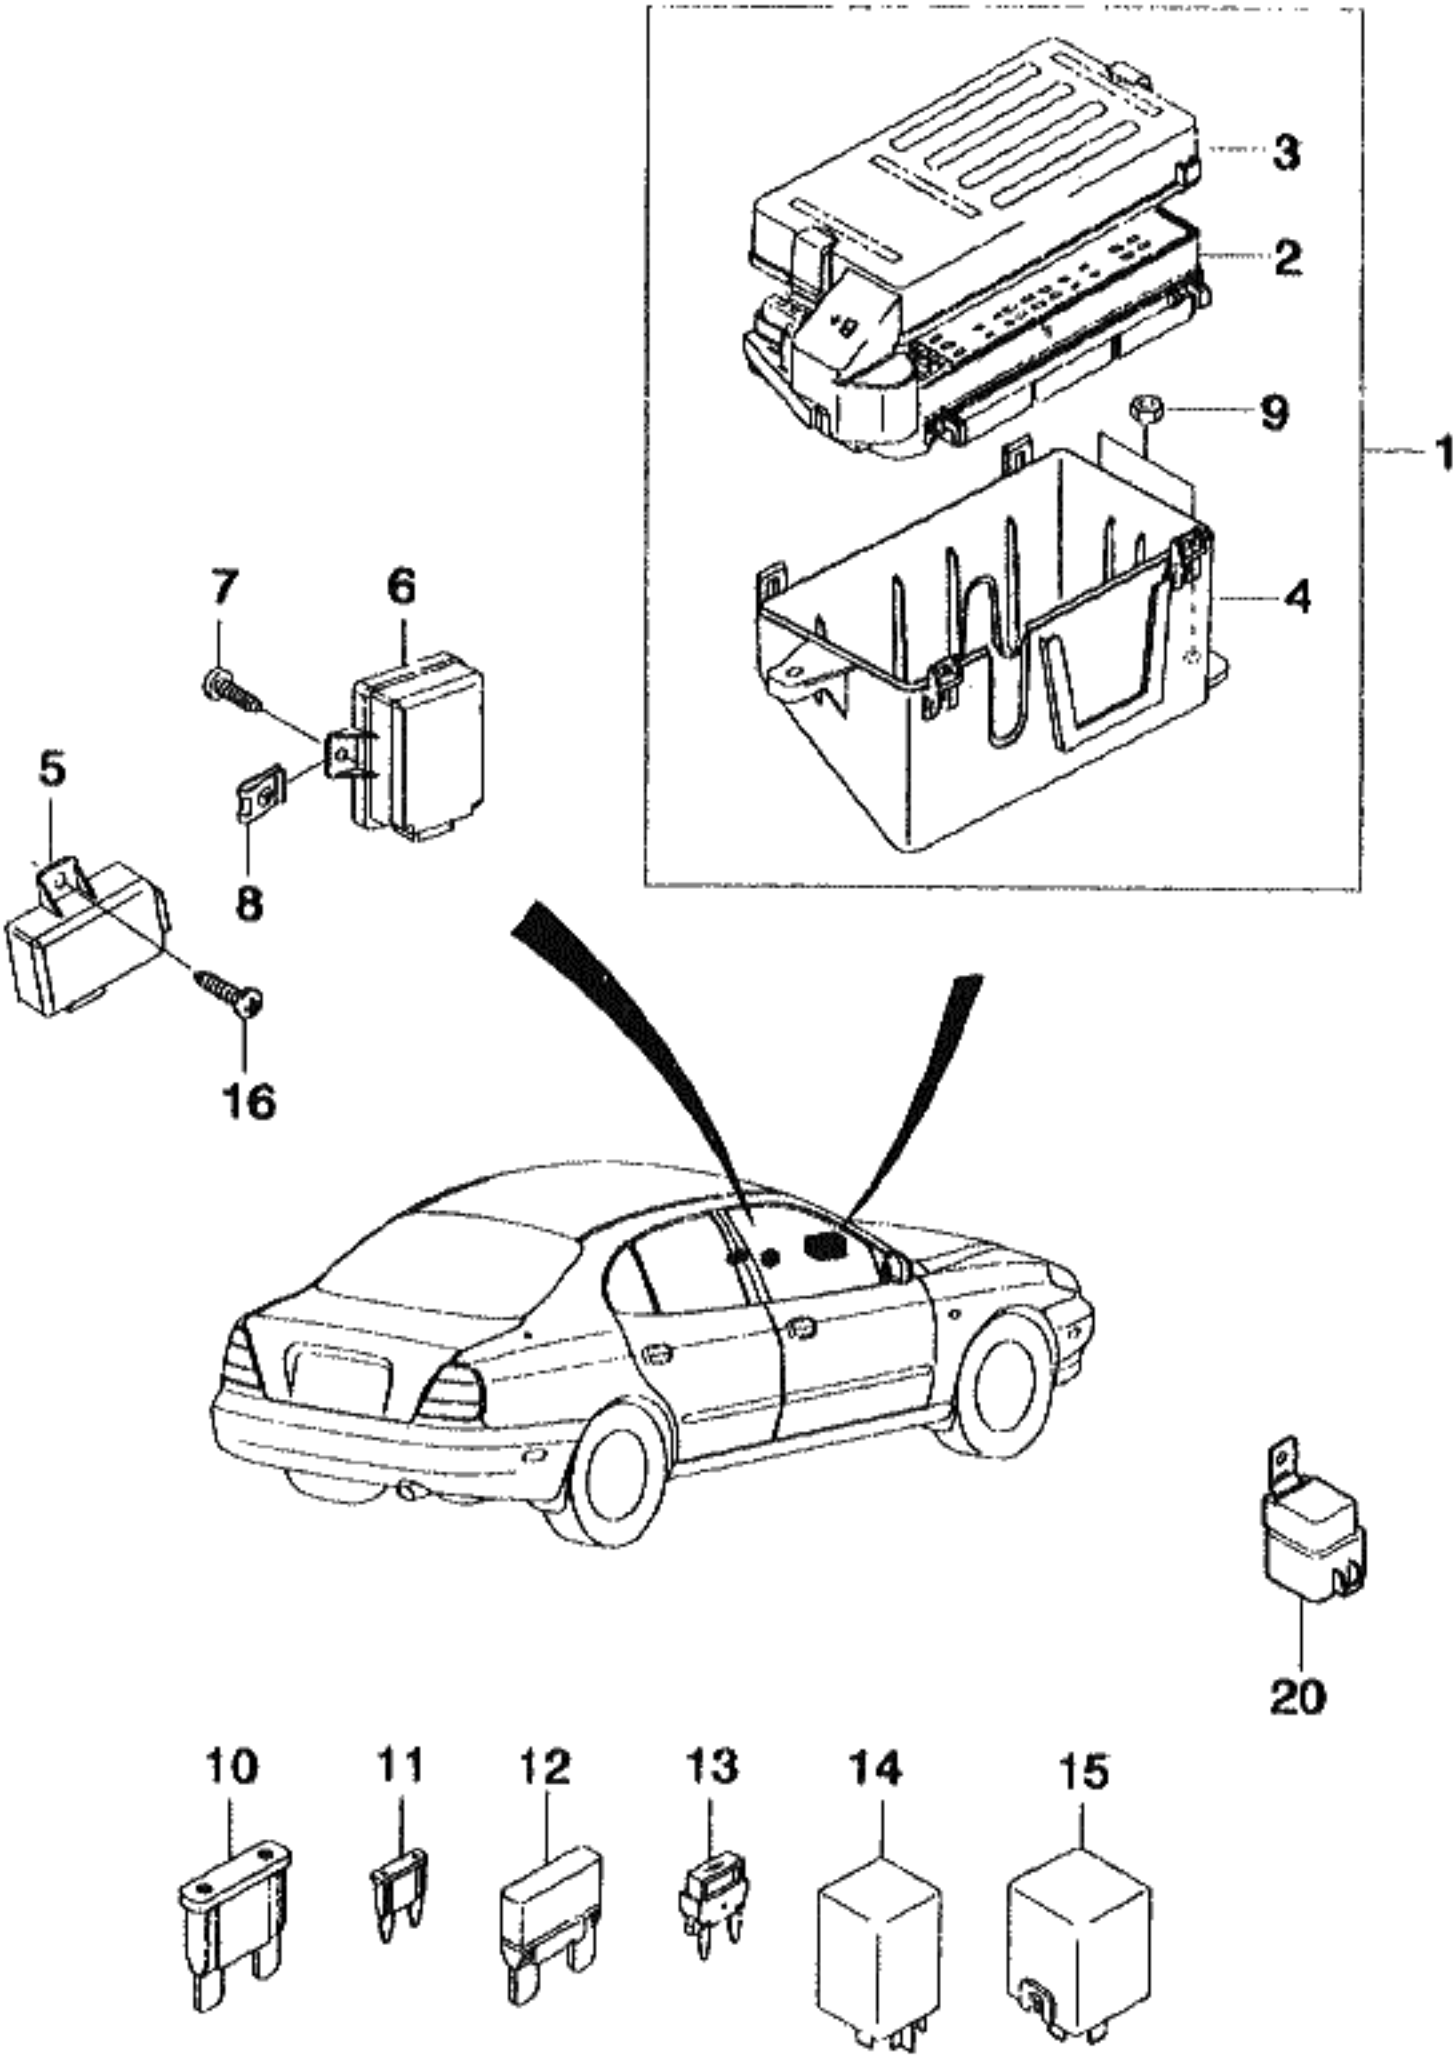

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	90244312	A	O	O			1			PARK		
	90244312	A	O	O			1			CRUISE		
	96190187	.	O	S			1			FRONT FOG		
	96190187	.	S	S			2			HORN/LIGHT		
	96190187	.	S	S			1			HEAD LAMP		
	96190187	.	S	S			1			COMPRESSO		
	96190187	.	S	S			1			FUEL PUMP		
	96190189	.	S	S			1			REAR DEFOG		
	96190189	.	S	S			2			ELECTRIC		
	96190189	.	S	S			2			IGNITION 1,2		
	[15]	(E)BLINKER UNIT A (D)BLINKER						(F)UNITE CLIGNOTANTE (S)UNIDAD INTERMITENTE				
	96312545	.	S	S			1			TURN SIG		
	[16]	(E)SCREW-TAPPING (D)SCHRAUBE						(F)VIS (S)TORNILLO				
	03160-48163	.	S	S			2					
	[20]	(E)RELAY A-RAD FAN CONTROL (D)RELAIS						(F)RELAI (S)RELEVADOR				
	96312958	.	S	S			1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

5710 WIRING HARNESS

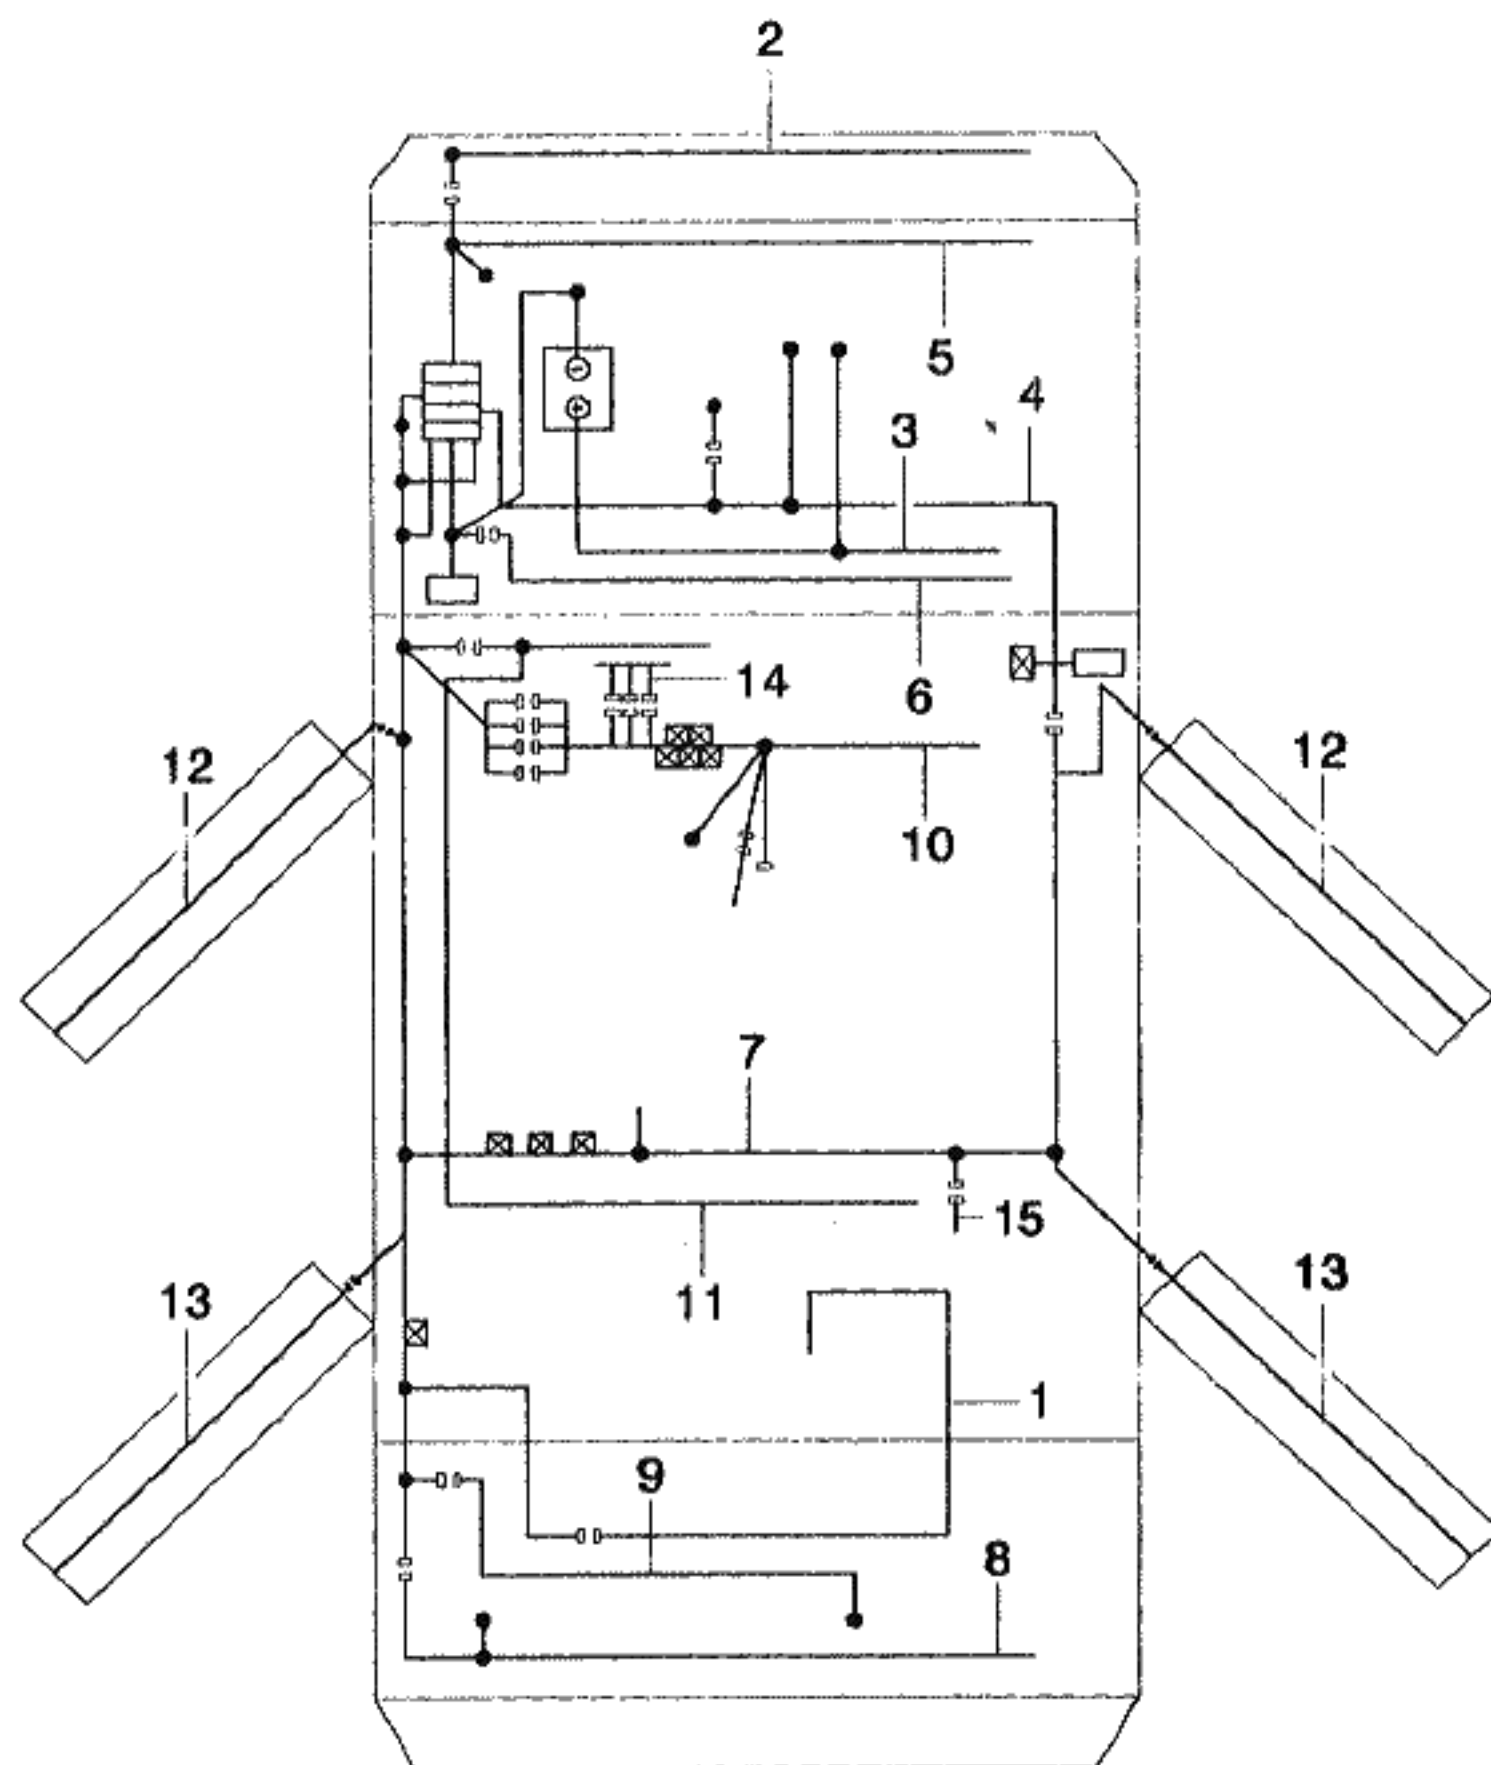


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	[01]	(E)WIRE A-FUEL PUMP (D)VERDRAHTUNG				(F)CABLE (S)ALAMBRE						
	96218655		S	S			1				UA	
	[02]	(E)WIRING HARNESS-FR BPR (D)VERDRAHTUNG				(F)CABLAGE (S)INSTALACION ELECTRICA						
	96239917		S		&C59/C60-AJ3/AJ7/T96		1				3F	
	96207133		O		&C59/C60&T96-AJ3/AJ7		1				3B	
	96244235		O		&C15/C19-AJ3/AJ7/T96		1				3Z	
	96207135		O		&C15/C19&T96-AJ3/AJ7		1				3D	
	96207098		O		&C59/C60&AJ3/AJ7-T96		1				3L	
	96244237		O		&C15/C19&AJ3/AJ7-T96		1				3R	
	96244233		O	S	&C59/C60&AJ3/AJ7&T96		1				3Q	
	96207097		O	O	&C15/C19&AJ3/AJ7&T96		1				3K	
	[03]	(E)WIRING HARNESS-BATTERY (D)VERDRAHTUNG				(F)CABLAGE (S)INSTALACION ELECTRICA						
	96207016		S	S			1				ZA	
	[04]	(E)WIRING HARNESS-ENGINE (D)VERDRAHTUNG				(F)CABLAGE (S)INSTALACION ELECTRICA						
	96219322	M	S		&L76&NN4		1				PT	
	96207022	M	A		&L76&NN6/NN7		1				PR	
	96224509	M	O	S	&L88&NN4		1				EG	
	96207035	M	A	A	&L88&NN6		1				EB	
	96224540	M	A	A	&L88&NN7		1				ED	
	96255303	A	O		&L76&NN4		1				PS	
	96207021	A	A		&L76&NN6/NN7		1				PQ	
	96224508	A	O	O	&L88&NN4		1				EF	
	96207034	A	A	A	&L88&NN6		1				EA	
	96219320	A	A	A	&L88&NN7		1				EC	
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

The diagram illustrates the electrical control system for a machine tool. It features a control panel (2) at the top, which houses a power switch, a fuse, and several relays (3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13). The machine tool (1) is shown at the bottom, with various sensors and actuators (14, 15) connected to the control panel. The diagram also shows external components like a motor (12) and a pump (13) connected to the system. The connections are represented by lines with dots indicating terminals or connection points.




KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[05]	(E)WIRING HARNESS-FR (D)VERDRAHTUNG,VORNE					(F)CABLAGE-AVANT (S)INSTALACION ELECTRICA				
	96207037	.	S	.	&N40		1				FB
	96207038	.	O	.	&CAL/UIP&N40		1				FC
	96238900	.	A	.	&CAL/UIP&HL4&N40		1				FE
	96238909	.	A	.	&HL4&N40		1				FL
	96238910	.	.	S	&UXA		1				FM
	96207039	.	.	O	&CAL/UIP&UXA		1				FD
	96238904	.	.	A	&CAL/UIP&HL4&UXA		1				FG
	96238911	.	.	A	&HL4&UXA		1				FN
	[06]	(E)WIRING HARNESS-ABS (D)VERDRAHTUNG,ABS					(F)CABLAGE-ABS (S)INSTALACION ELECTRICA-ABS				
	96207094	.	O	O	&JL9/JTC		1		970630		ZZ
O	96257173	.	O	O	&JL9/JTC		1		970701		AV
	[07]	(E)WIRING HARNESS-BODY (D)VERDRAHTUNG					(F)CABLAGE (S)INSTALACION ELECTRICA				
	96219302	.	S	S	&AGD		1		970601		BP
Y	96256514	.	S	S	&AGD		1		970602		MS
	96219299	.	O	O	&AGD&CAL/UIP		1		970601		BM
Y	96256513	.	O	O	&AGD&CAL/UIP		1		970602		MR
	96219306	.	O	O	&AGD&JL9/JTC		1		970601		BR
Y	96256515	.	O	O	&AGD&JL9/JTC		1		970602		MT
	96219308	.	O	O	&AGD&CAL/UIP&JL9/JTC		1		970601		BT
Y	96256516	.	O	O	&AGD&CAL/UIP&JL9/JTC		1		970602		MU
	96255050	.	O	O	&AG1		1		970601		CV
N	96256517	.	O	O	&AG1		1		970602		MV
	96255051	.	O	O	&AG1&CAL/UIP		1		970601		CU
N	96256518	.	O	O	&AG1&CAL/UIP		1		970602		ZZ
	96255052	.	O	O	&AG1&JL9/JTC		1		970601		CT
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

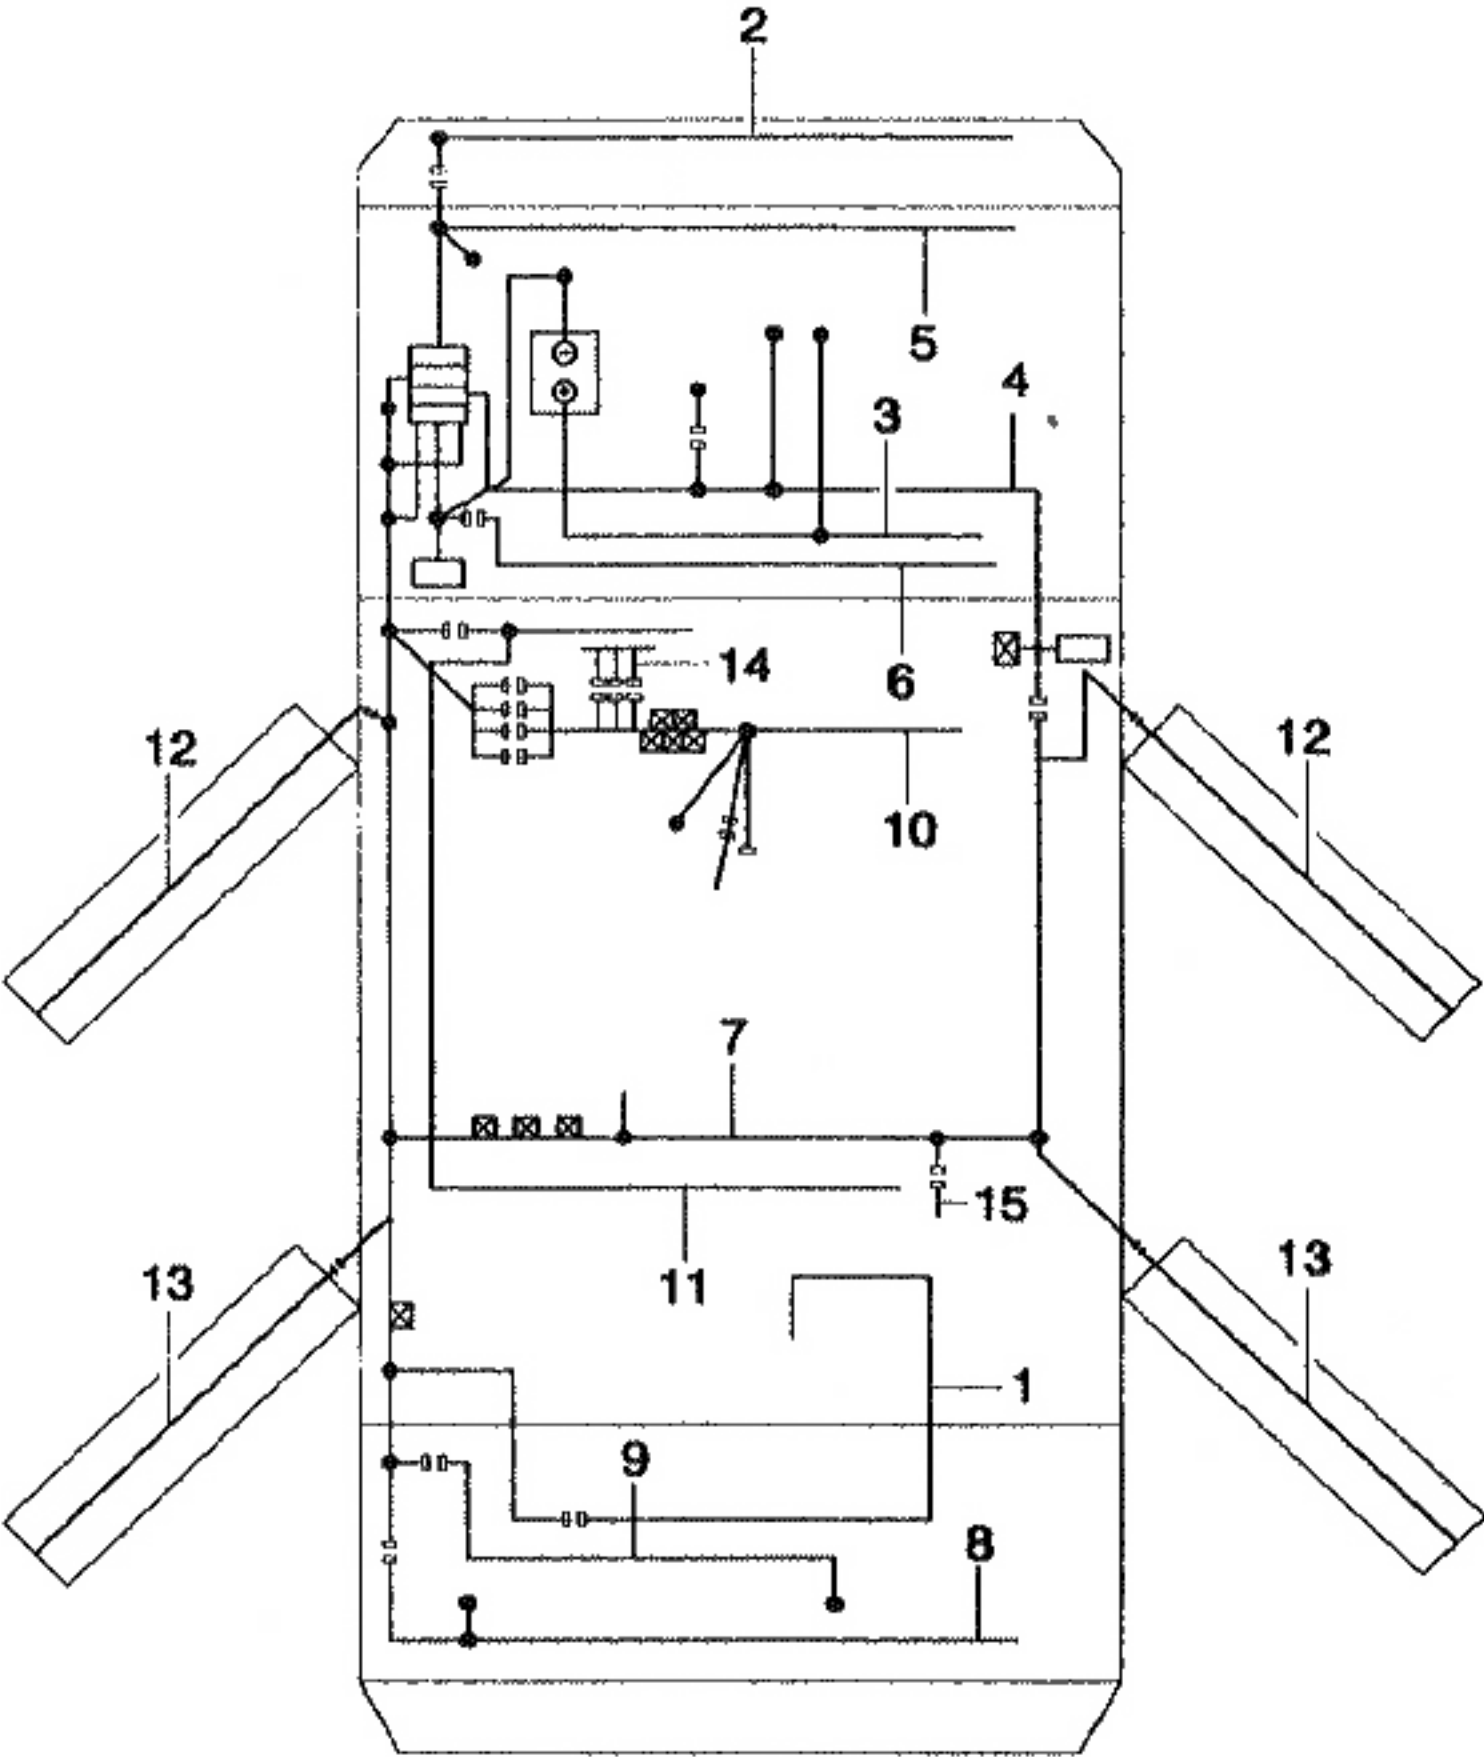


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
N	96256519	.	O	O	&AG1&JL9/JTC		1	970602			MX
	96255053	.	O	O	&AG1&CAL/UIP&JL9/JTC		1	970601			CS
N	96256520	.	O	O	&AG1&CAL/UIP&JL9/JTC		1	970602			MY
	[08]	(E)WIRING HARNESS-TRUNK ROOM (D)VERDRAHTUNG,KOFFERRAUM					(F)CABLAGE-COFFRE (S)INSTALACION ELECTRICA				
	96207048	.	S	S	-T98.		1				TK
	96207046	.	A	A	&T98		1				T2
	[09]	(E)WIRING HARNESS-TRUNK LID (D)VERDRAHTUNG,KOFFERRAUM					(F)CABLAGE-COFFRE (S)INSTALACION ELECTRICA				
	96207096	.	S	S	-ATPICAL/UIP.		1				TA
	96207095	.	O	O	&ATPICAL/UIP		1				TB
	[10]	(E)WIRING HARNESS-INST PANEL (D)VERDRAHTUNG,INSTRUMENTEN					(F)CABLAGE-TABLEAU DE BORD (S)INSTALACION ELECTRICA				
	96230978	M	S	.	&C59/C60&N40-K30/T98		1				KV
	96230980	M	O	.	&C59/C60&K30&N40-T98		1				KX
	96231001	M	O	.	&C15/C19&N40-K30/T98		1				LS
	96231005	M	O	.	&C15/C19&K30&N40-T98		1				LW
	96225105	M	A	.	&C59/C60&N40&T98-K30		1				JL
	96225107	M	A	.	&C59/C60&K30&N40&T98		1				JN
	96231000	M	A	.	&C15/C19&N40&T98-K30		1				LR
	96231004	M	A	.	&C15/C19&K30&N40&T98		1				LV
	96230982	M	.	S	&C59/C60&UXA-K30/T98		1				KZ
	96230986	M	.	O	&C59/C60&K30&UXA-T98		1				LD
	96230984	M	.	O	&C15/C19&UXA-K30/T98		1				LB
	96230988	M	.	O	&C15/C19&K30&UXA-T98		1				LF
	96225109	M	.	A	&C59/C60&T98&UXA-K30		1				JP
	96225113	M	.	A	&C59/C60&K30&T98&UXA		1				JT
	96225111	M	.	A	&C15/C19&T98&UXA-K30		1				JR
	96225115	M	.	A	&C15/C19&K30&T98&UXA		1				JV

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

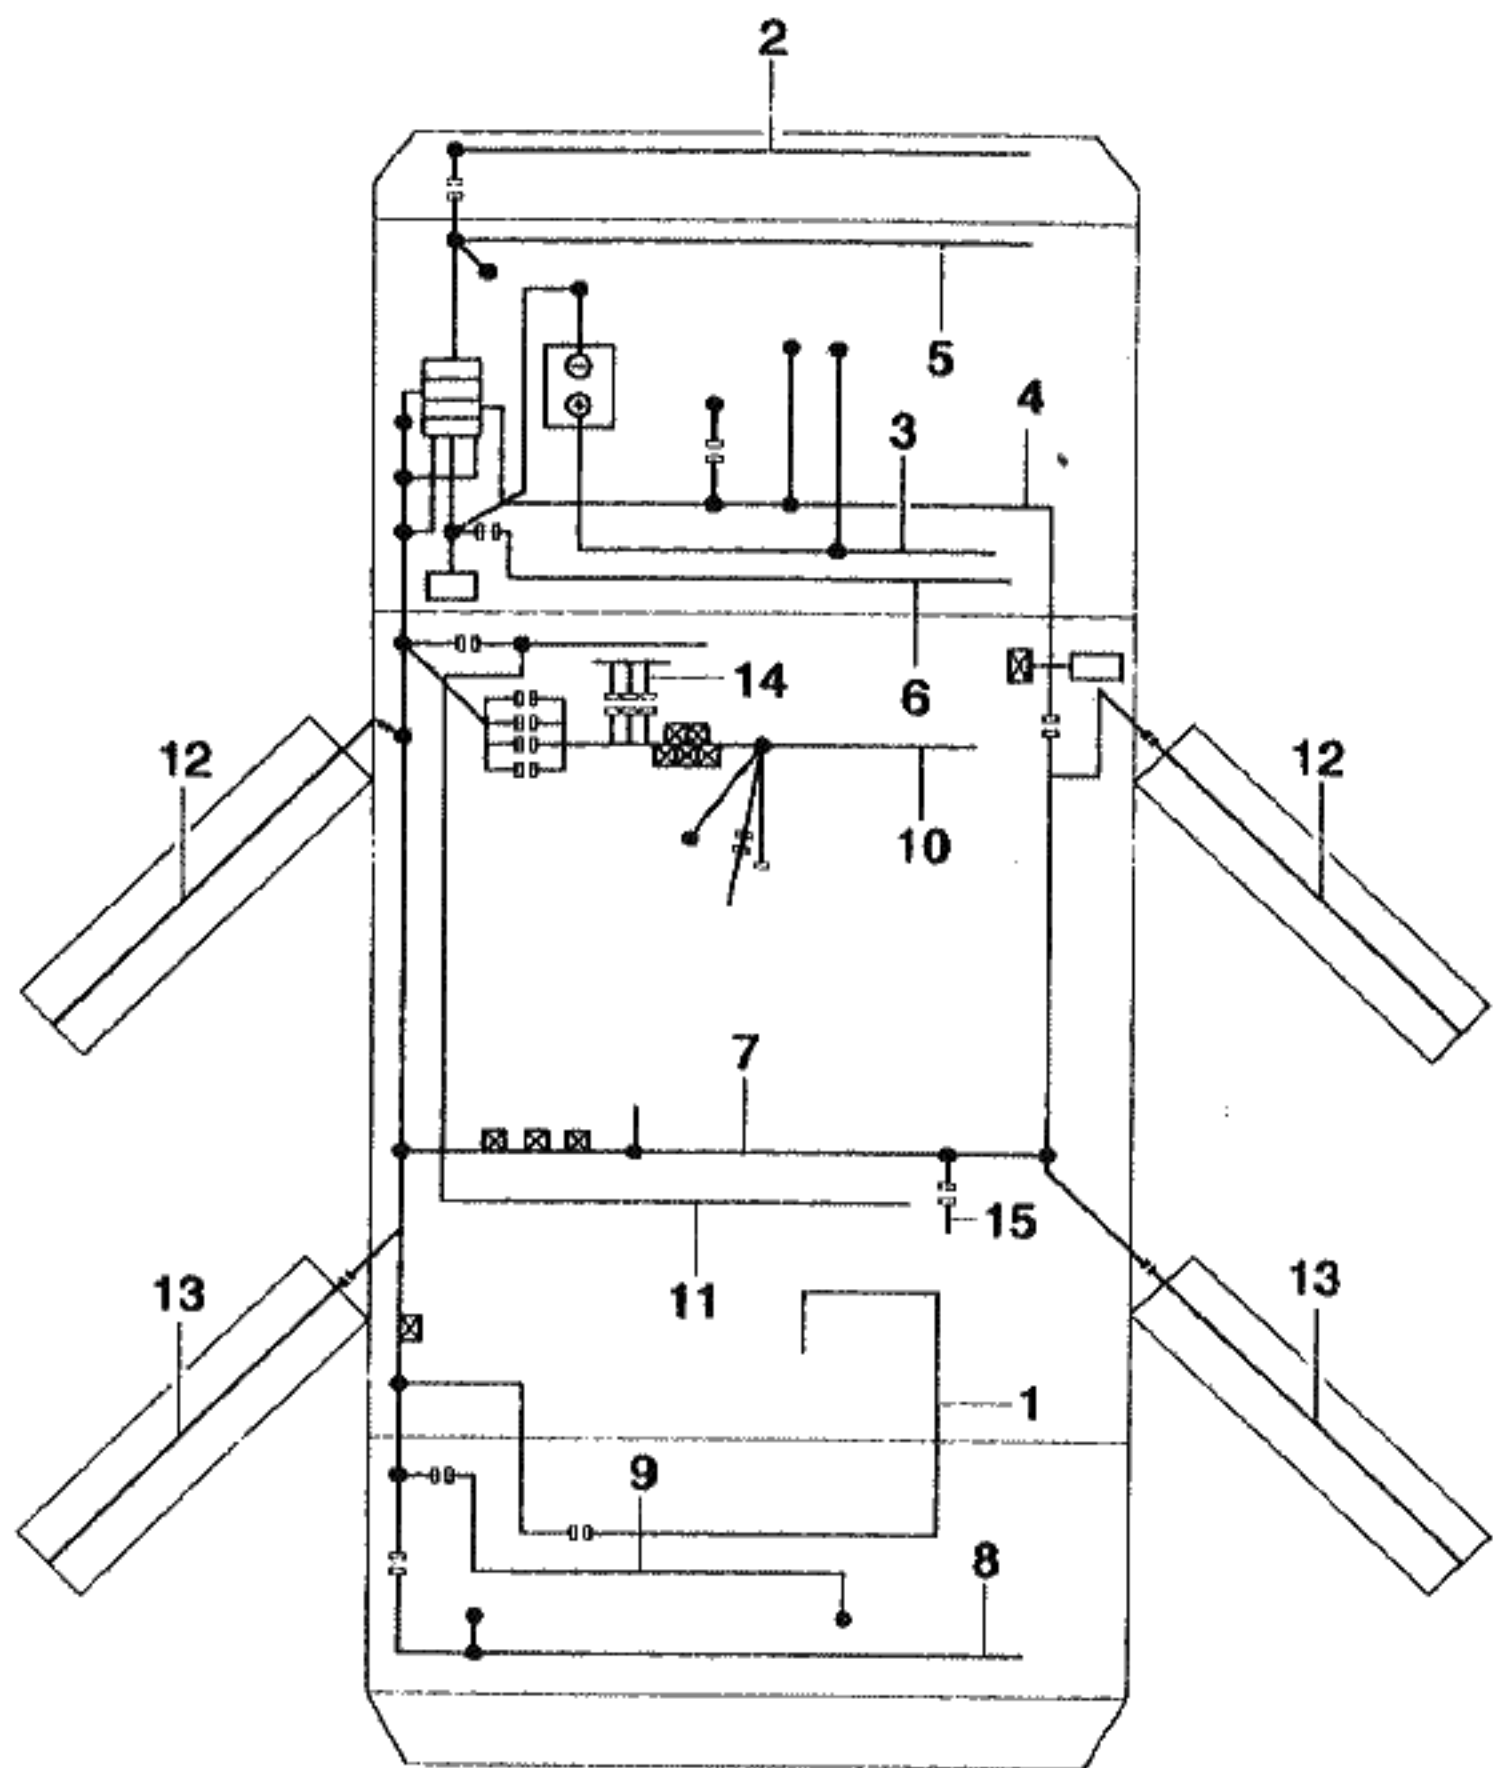

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96225117	A	O	.	&C59/C60&N40-K30/T98		1				JX
	96225121	A	O	.	&C59/C60&K30&N40-T98		1				KB
	96230993	A	O	.	&C15/C19&N40-K30/T98		1				LK
	96230997	A	O	.	&C15/C19&K30&N40-T98		1				L3
	96225118	A	A	.	&C59/C60&N40&T98-K30		1				JY
	96225122	A	A	.	&C59/C60&K30&N40&T98		1				KC
	96230992	A	A	.	&C15/C19&N40&T98-K30		1				LJ
	96230996	A	A	.	&C15/C19&K30&N40&T98		1				LN
	96225125	A	.	O	&C59/C60&UXA-K30/T98		1				KF
	96225133	A	.	O	&C59/C60&K30&UXA-T98		1				KN
	96225129	A	.	O	&C15/C19&UXA-K30/T98		1				KJ
	96230974	A	.	O	&C15/C19&K30&UXA-T98		1				KR
	96225126	A	.	A	&C59/C60&T98&UXA-K30		1				KG
	96230971	A	.	A	&C59/C60&K30&T98&UXA		1				K3
	96225130	A	.	A	&C15/C19&T98&UXA-K30		1				KK
	96230975	A	.	A	&C15/C19&K30&T98&UXA		1				KS
	[11]	(E)WIRING HARNESS-ROOF (D)VERDRAHTUNG					(F)CABLAGE (S)INSTALACION ELECTRICA				
	96207090	.	S	S	&DSL-CF6		1				RF
	96218651	.	O	O	&UIP-CF6		1	970817			RH
N	96257181	.	O	O	&UIP-CF6		1	970818			RY
	96207089	.	O	O	&CF6&DSL		1				RE
	96218650	.	O	O	&CF6&UIP		1	970817			RG
N	96257180	.	O	O	&CF6&UIP		1	970818			RZ
	[12]	(E)WIRING HARNESS-DOOR,FRT (D)VERDRAHTUNG,VORDERTÜR					(F)CABLAGE-PORTE AVANT (S)INSTALACION ELECTRICA				
	96255063	.	S	.	&DM6-CAL/UIP.	LH	1				UF
	96255064	.	O	S	&DM7-CAL/UIP.	LH	1				UG
	96255065	.	O	O	&CAL/UIP&DM7	LH	1				UH

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

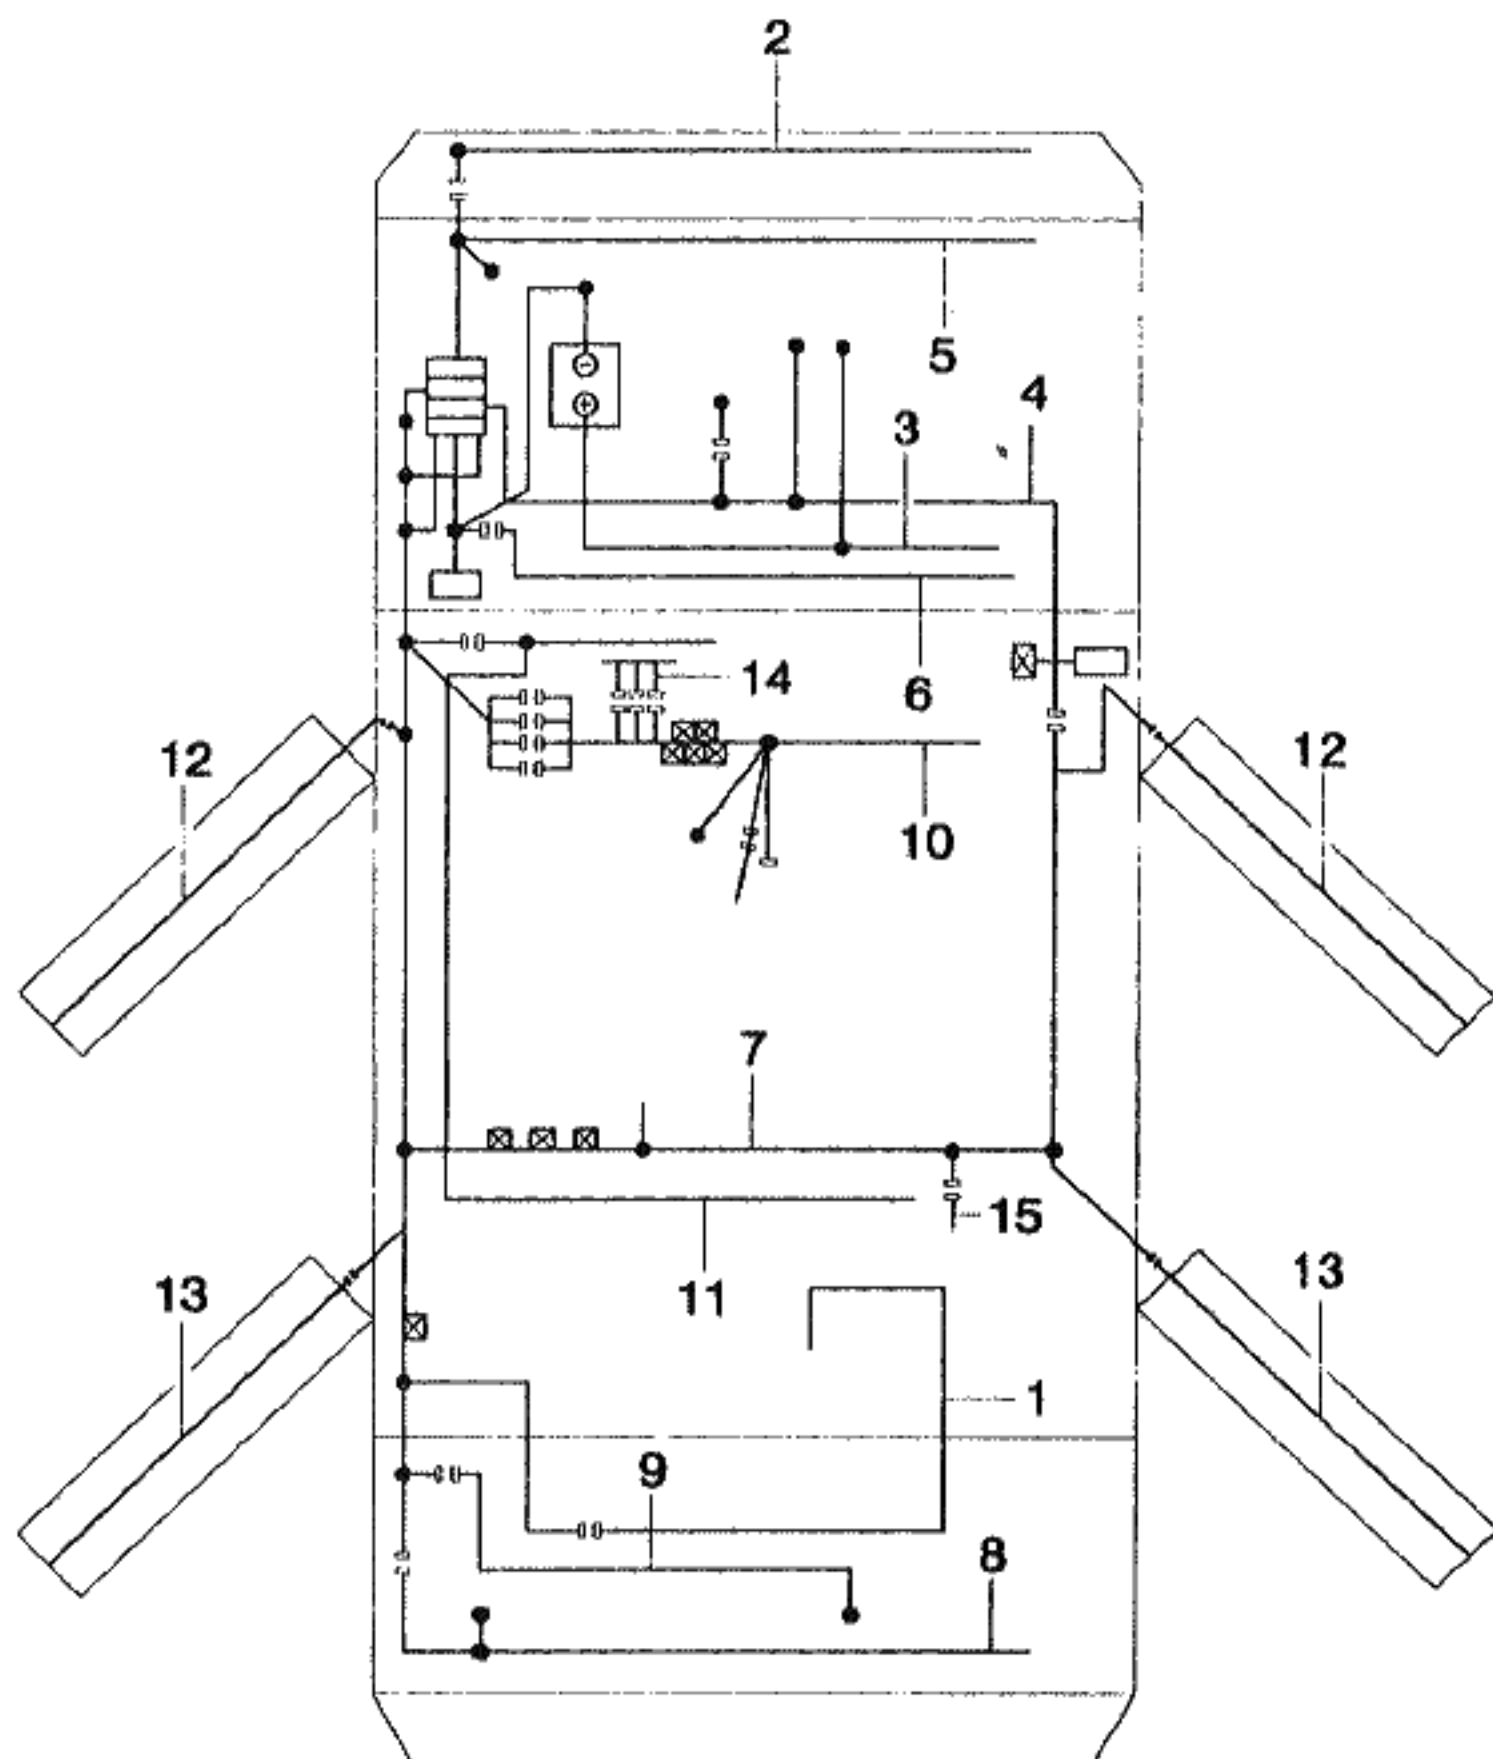

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	96255066	.	O	.	&CAL/UIP&DM6	LH	1				U2
	96255054	.	S	.	&AU3&DM6-CAL/UIP.	RH	1				ZL
	96255055	.	O	S	&DM7-CAL/UIP.	RH	1				ZM
	96255056	.	O	O	&CAL/UIP&DM7	RH	1				ZN
	96255057	.	O	.	&CAL/UIP&DM6	RH	1				Z3
	[13]	(E)WIRING HARNESS-DOOR,RR (D)VERDRAHTUNG,HINTERTÜR					(F)CABLAGE-PORTE ARRIERE (S)INSTALACION ELECTRICA				
	96255071	.	S	.	&A32&U14	LH	1				TR
	96255072	.	O	.	&A66&U14	LH	1				TS
	96255073	.	.	S	&A66&U85	LH	1				TT
	96255074	.	S	.	&A32	RH	1				TU
	96255290	.	O	S	&A66	RH	1				TV
	[14]	(E)WIRING HARNESS-INST CLUST (D)VERDRAHTUNG,INSTRUMENTEN					(F)CABLAGE-TABLEAU DE BORD (S)INSTALACION ELECTRICA				
	96218659	.	S	S			1				RQ
	[15]	(E)WIRING HARNESS-DEFOG (D)VERDRAHTUNG					(F)CABLAGE (S)INSTALACION ELECTRICA				
	96218657	.	S	S			1				
	[20]	(E)BOLT (D)SCHRAUBE					(F)BOULON (S)PERNO				
	09115-06001	.	S	S			1				
	[21]	(E)SCREW-TAPPING (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	03160-42133	.	S	S			1				
	[22]	(E)CLIP A-DASH (D)KLEMME					(F)ATTACHE (S)GRAPA				
	96225148	.	S	S			4				
	[23]	(E)BRACKET-ENGINE HARNESS (D)TRÄGER					(F)SUPPORT (S)SOPORTE				

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A

CDX = 2.0 DOHC

A = AUTOMATIC T/A

. = COMMON

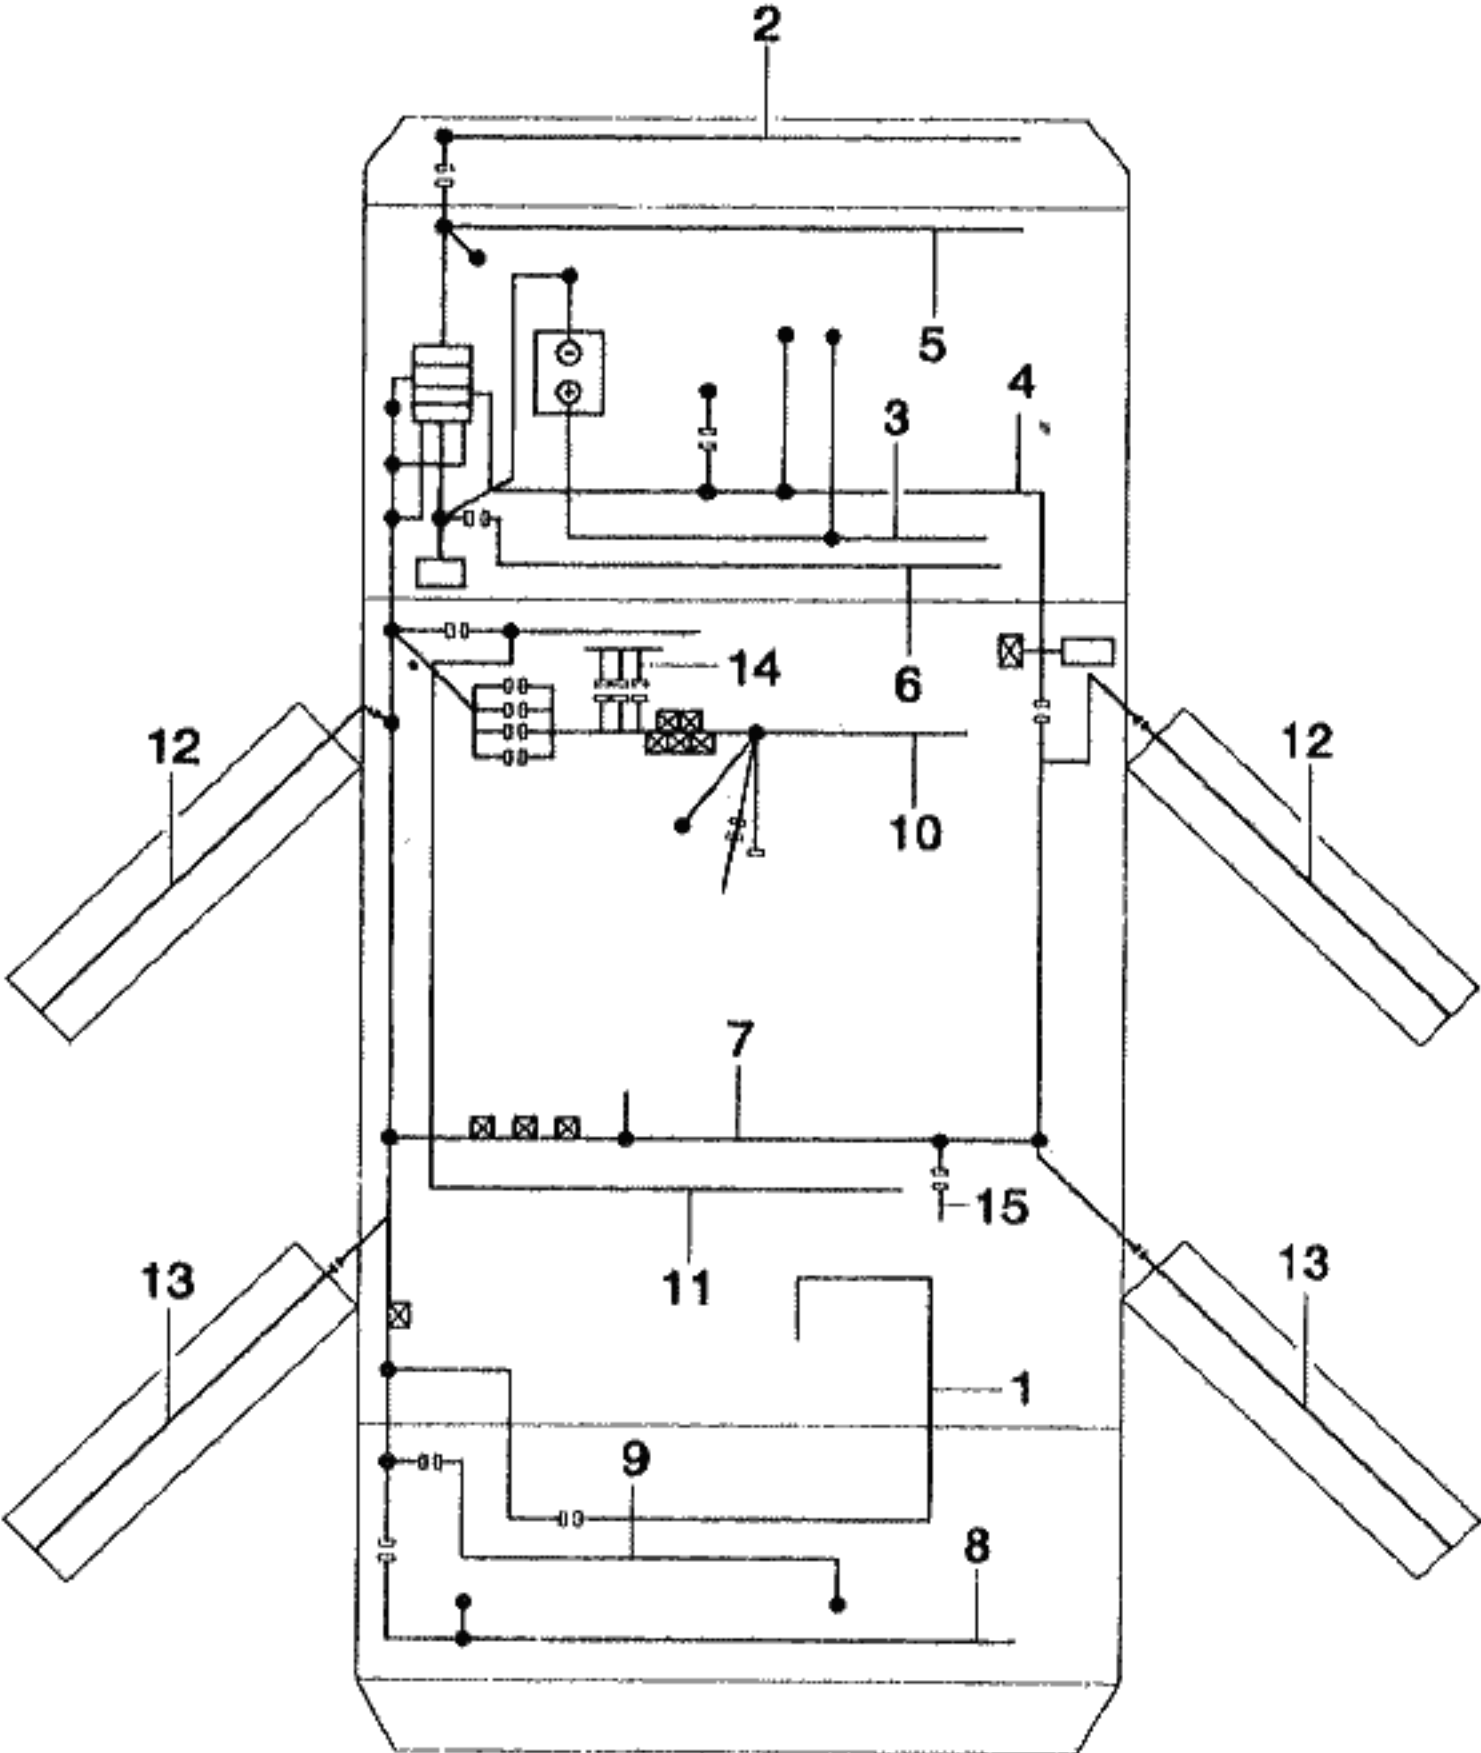

				
20	21	22	23	24

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96312507 [24] 96242662	. 									

6**BODY & EXTERIOR**

6110 HOOD PANEL

6130 FRONT PANEL

6140 FENDER PANEL

6150 DASH PANEL & COWL

6210 FRONT DOOR PANEL

6220 FRONT DOOR LOCK

6230 FRONT WINDOW LIFTER

6240 FRONT WEATHERSTRIP

6250 ELECTRIC DOOR LOCK

6310 REAR DOOR PANEL

6320 REAR DOOR LOCK

6330 REAR WINDOW LIFTER

6340 REAR WEATHERSTRIP

6410 SIDE BODY PANEL

6420 FUEL FILLER LOCK

6430 ROOF PANEL

6431 SUN ROOF PANEL

6440 TRUNK LID PANEL

6450 TRUNK LID LOCK

6460 CAR LOCKING

6510 FRONT FLOOR PANEL

6520 REAR FLOOR PANEL

6530 FRAME

6610 BODY SIDE MOLDING

6630 OUTSIDE MIRROR

6640 GLASS

6650 EMBLEM & LETTERING

6660 WHEEL & WHEEL COVER


6670 LABEL & STICKER

6710 GRILLE

6720 FRONT BUMPER


6730 REAR BUMPER

6750 MUD GUARD

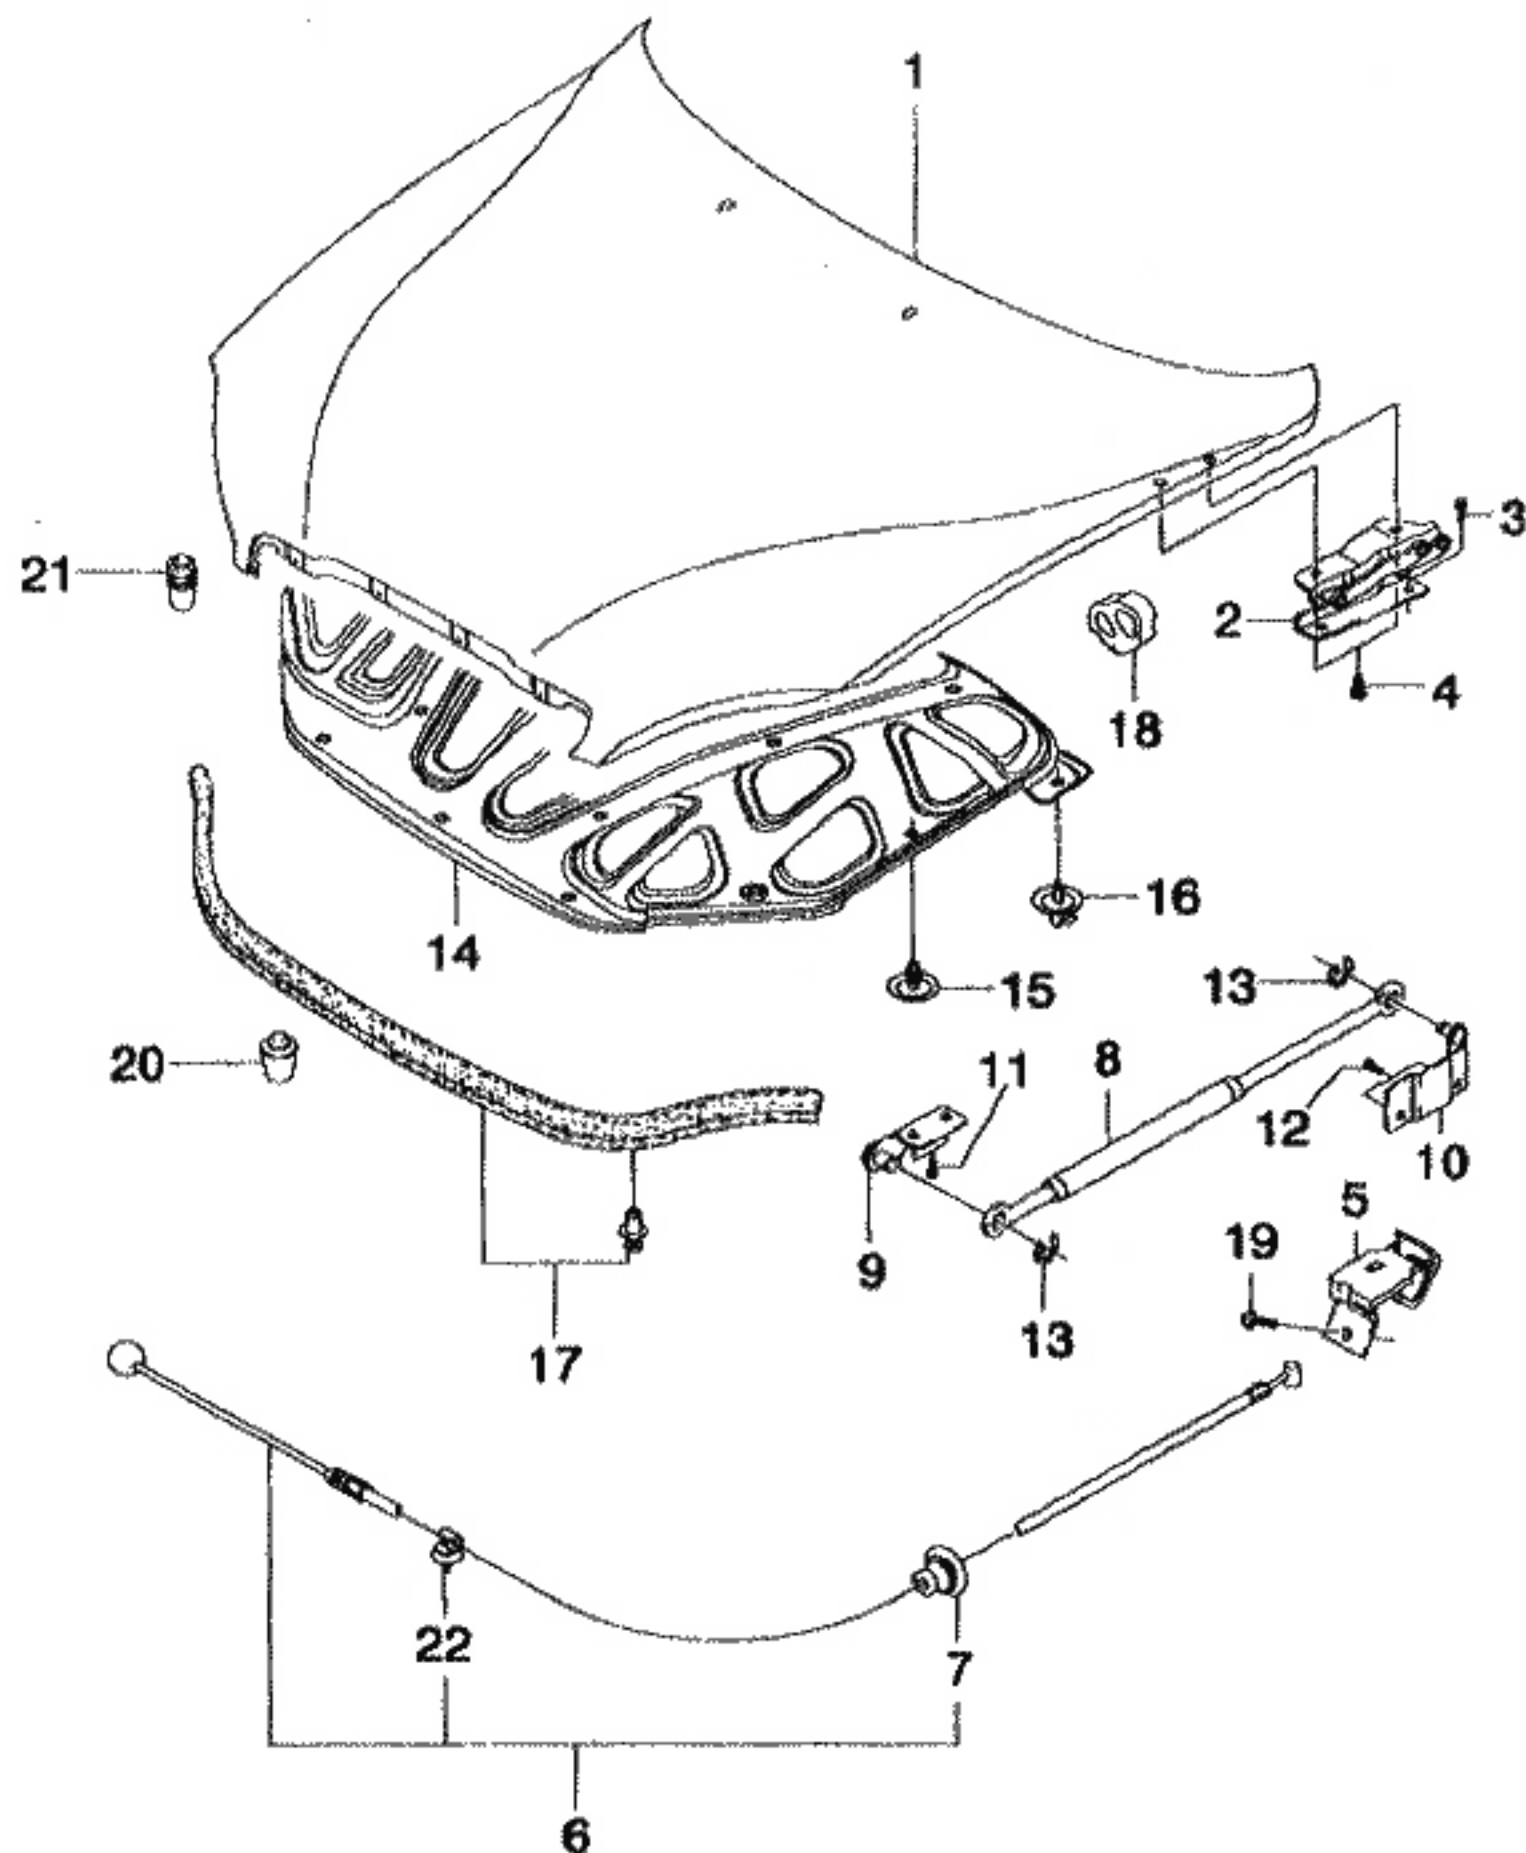


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) PANEL A-HOOD (D) HAUBE, BLECH				(F) PANNEAU DE CAPOT (S) PANEL DEL CAPO					
	A96205505	S S	&XCK.		1						HA
	A96227839	A A	&XCP.		1						HE
	[02]	(E) HINGE A-HOOD (D) BESCHLAG, HAUBE				(F) CHARNIERE-CAPOT (S) BISAGRA					
	96205518	S S			LH 1						
	96205519	S S			RH 1						
	[03]	(E) BOLT-HEXAGON (D) SCHRAUBE				(F) BOULON (S) PERNO					
	01127-08203	S S			4						
	[04]	(E) BOLT-W/WASHER (D) SCHRAUBE				(F) BOULON (S) PERNO					
	09116-08002	S S			4						
	[05]	(E) LEVER A-HOOD RELEASE (D) HEBEL, LÖSUNG				(F) LEVIER-RELACHE (S) PALANCA-SOLTAR (LIBERAR)					
	96233656	S S	&821.		1						
	[06]	(E) CABLE A-HOOD RELEASE (D) KABEL, HAUBE BOGEN				(F) CABLE-BOWDEN DE CAPOT (S) CABLE-CAPO BOWDEN					
	96251679	S S			1						
	[07]	(E) GROMMET-HOOD CABLE (D) ÖSE				(F) VIROLE (S) AISLANTE					
	96251266	S S			2						
	[08]	(E) SPRING A-HOOD GAS (D) FEDERUNG				(F) RESSORT (S) RESORTE					
	96205547	S S			2						
	[09]	(E) BRACKET A-HOOD GAS SPRING (D) TRÄGER				(F) SUPPORT (S) SOPORTE					
	96205679	S S			LH 1						
	96205680	S S			RH 1						


LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC	M = MANUAL T/A
CDX = 2.0 DOHC	A = AUTOMATIC T/A
	. = COMMON

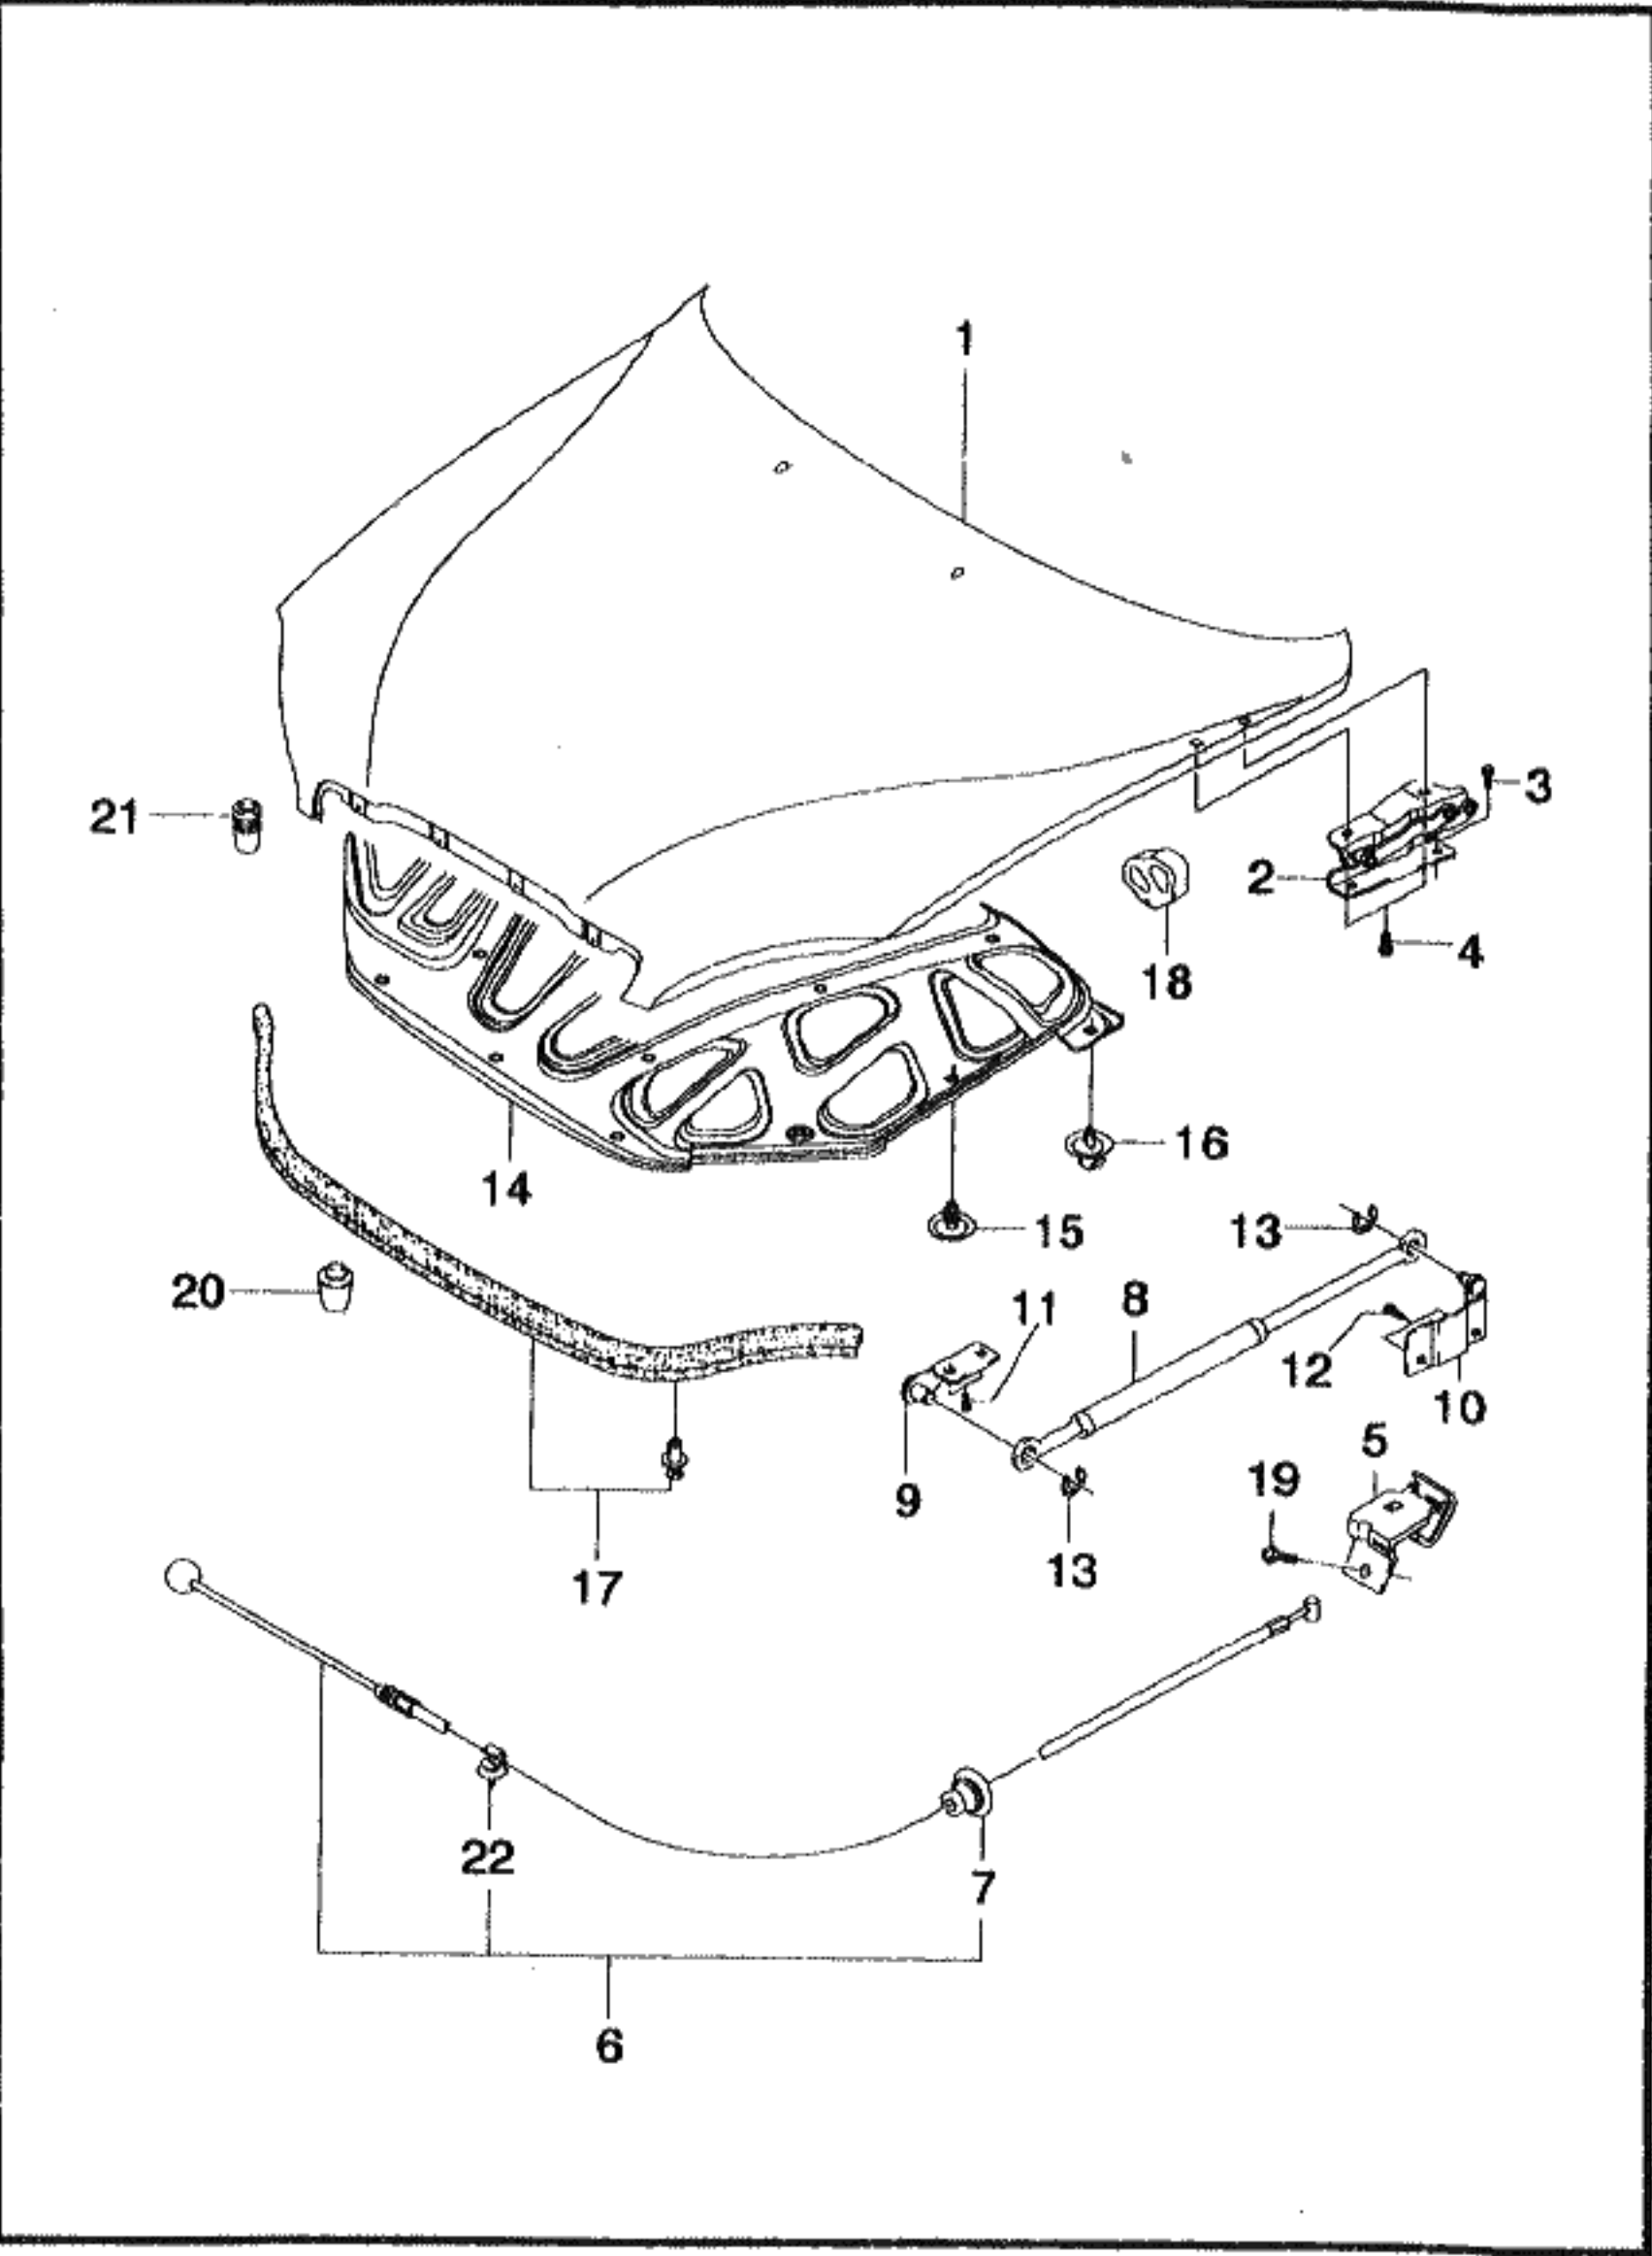


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10]	(E)BRACKET A-BODY GAS SPRING (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96205675	.	S	S		LH 1					
	96205676	.	S	S		RH 1					
	[11]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	02717-06163	.	S	S		4					
	[12]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	02717-06163	.	S	S		4					
	[13]	(E)RING-RETAINING (D)RING,HALTER				(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR					
	09383-05002	.	S	S		4					
	[14]	(E)INSULATION-ENGINE HOOD (D)ISOLIERUNG,MOTORHAUBE				(F)ISOLATION-CAPOT MOTEUR (S)AISLAMIENTO-CAPO DE MOTOR					
	96194490	.	S	S		1					
	[15]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09409-06312	.	S	S		15					
	[16]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09408-00031	.	S	S		2					
	[17]	(E)SEAL A-HOOD (D)DICHTUNG,HAUBE				(F)JOINT-CAPOT (S)SELLO-CAPO					
	96205604	.	S	S		1					
	[18]	(E)BUMPER-HOOD,SIDE (D)STOBSTANGE				(F)PARE-CHOC (S)PARACHOQUES					
	96205553	.	S	S		2					
	[19]	(E)SCREW-CR MACHINE (D)SCHRAUBE				(F)VIS (S)TORNILLO					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

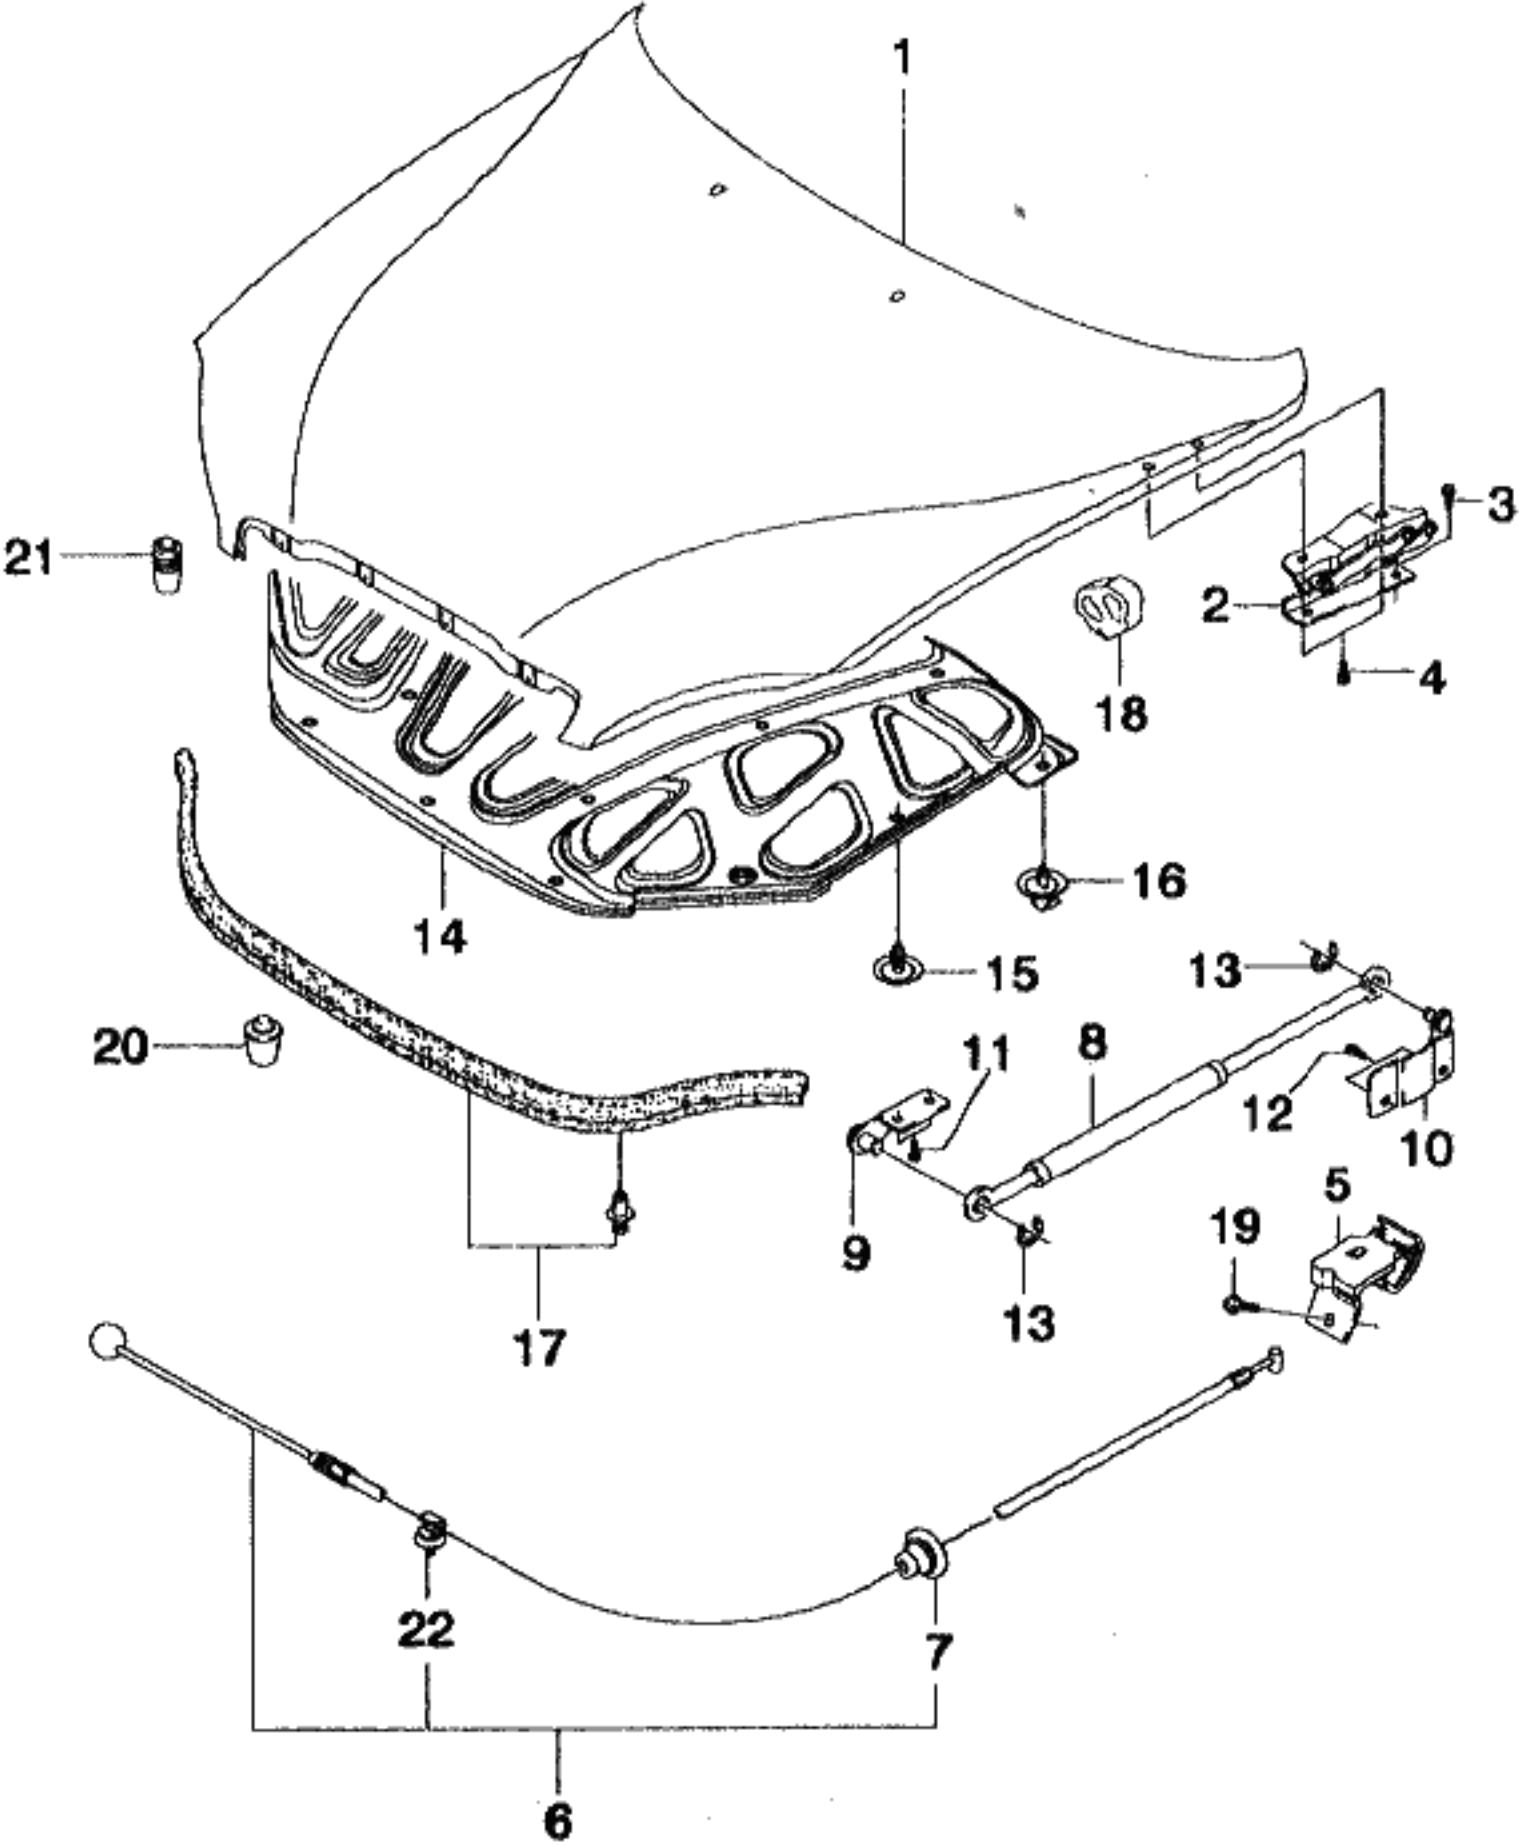


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09125-06006	.	S	S			1					
	[20]		(E)BUMPER-HOOD,FR				(F)PARE-CHOC					
			(D)STOBSTANGE				(S)PARACHOQUES					
	96169620	.	S	S			2					
	[21]		(E)BUMPER-HOOD,FR SIDE				(F)PARE-CHOC					
			(D)STOBSTANGE				(S)PARACHOQUES					
	96169594	.	S	S			2					
	[22]		(E)CLIP-HOOD CABLE				(F)ATTACHE					
			(D)KLEMME				(S)GRAPA					
	09408-00041	.	S	S			5					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

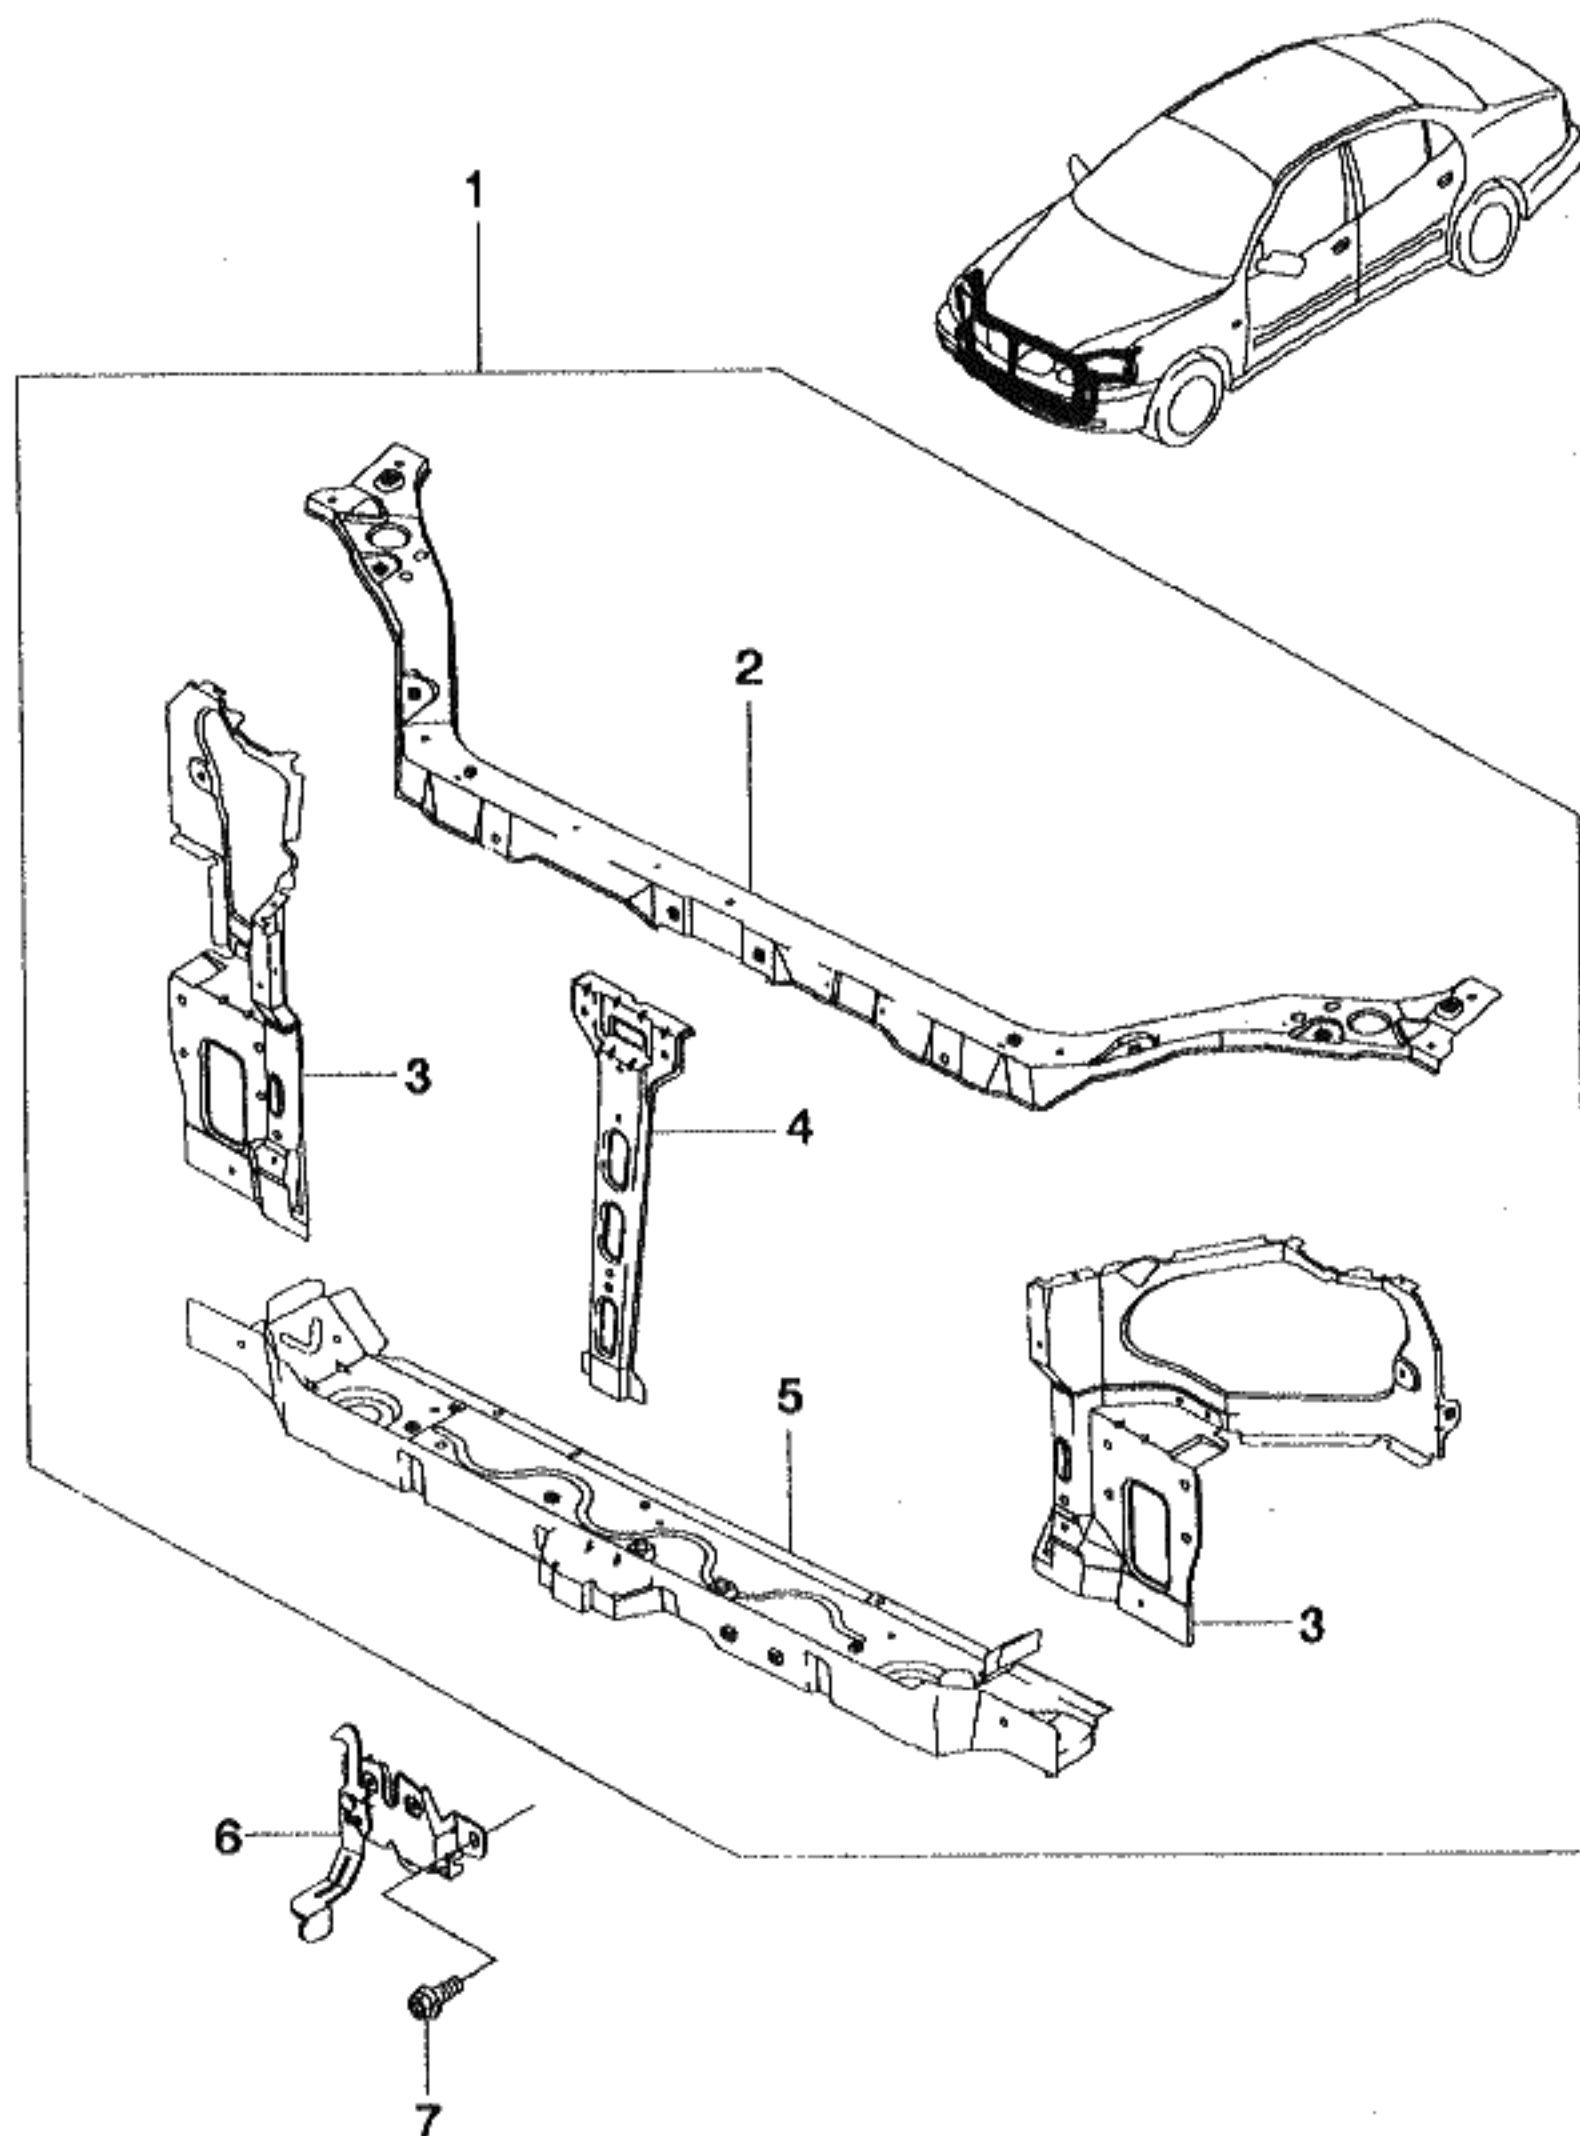

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) PANEL A-FRONT END (D) VERKLEIDUNG, VORDERENDE				(F) PANNEAU-EXTREMITE AVANT (S) PANEL-EXTREMO DELANTERO					
	96228101	S S				1		970619			
	O 96256364	S S				1		970620			
	[02]	(E) PANEL A-FRONT, UPPER (D) VERKLEIDUNG, VORNE				(F) PANNEAU-AVANT (S) PANEL-FRENTE					
	96228103	S S				1					
	[03]	(E) PANEL A-FR SIDE (D) VERKLEIDUNG				(F) PANNEAU (S) PANEL					
	96228106	S S				LH 1					
	96228107	S S				RH 1					
	[04]	(E) SUPPORT A-PANEL, FR (D) TRÄGER, VERKLEIDUNGSBLECH				(F) SUPPORT (S) SOPORTE					
	96228123	S S				1					
	[05]	(E) CROSSMEMBER A-RADIATOR (D) QUERTRÄGER, KÜHLER				(F) BARRE DE TRAVERSE (S) TRANSVERSAL					
	96228118	S S				1					
	[06]	(E) LATCH A-HOOD (D) VERSCHLUB, HAUBE-VERSCHLU				(F) LOQUET-VERROU DE CAPOT (S) PESTILLO					
	96205545	S S				1					
	[07]	(E) BOLT-W/WASHER (D) SCHRAUBE				(F) BOULON (S) PERNO					
	09118-06001	S S				3					
LEVEL					T/A (TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

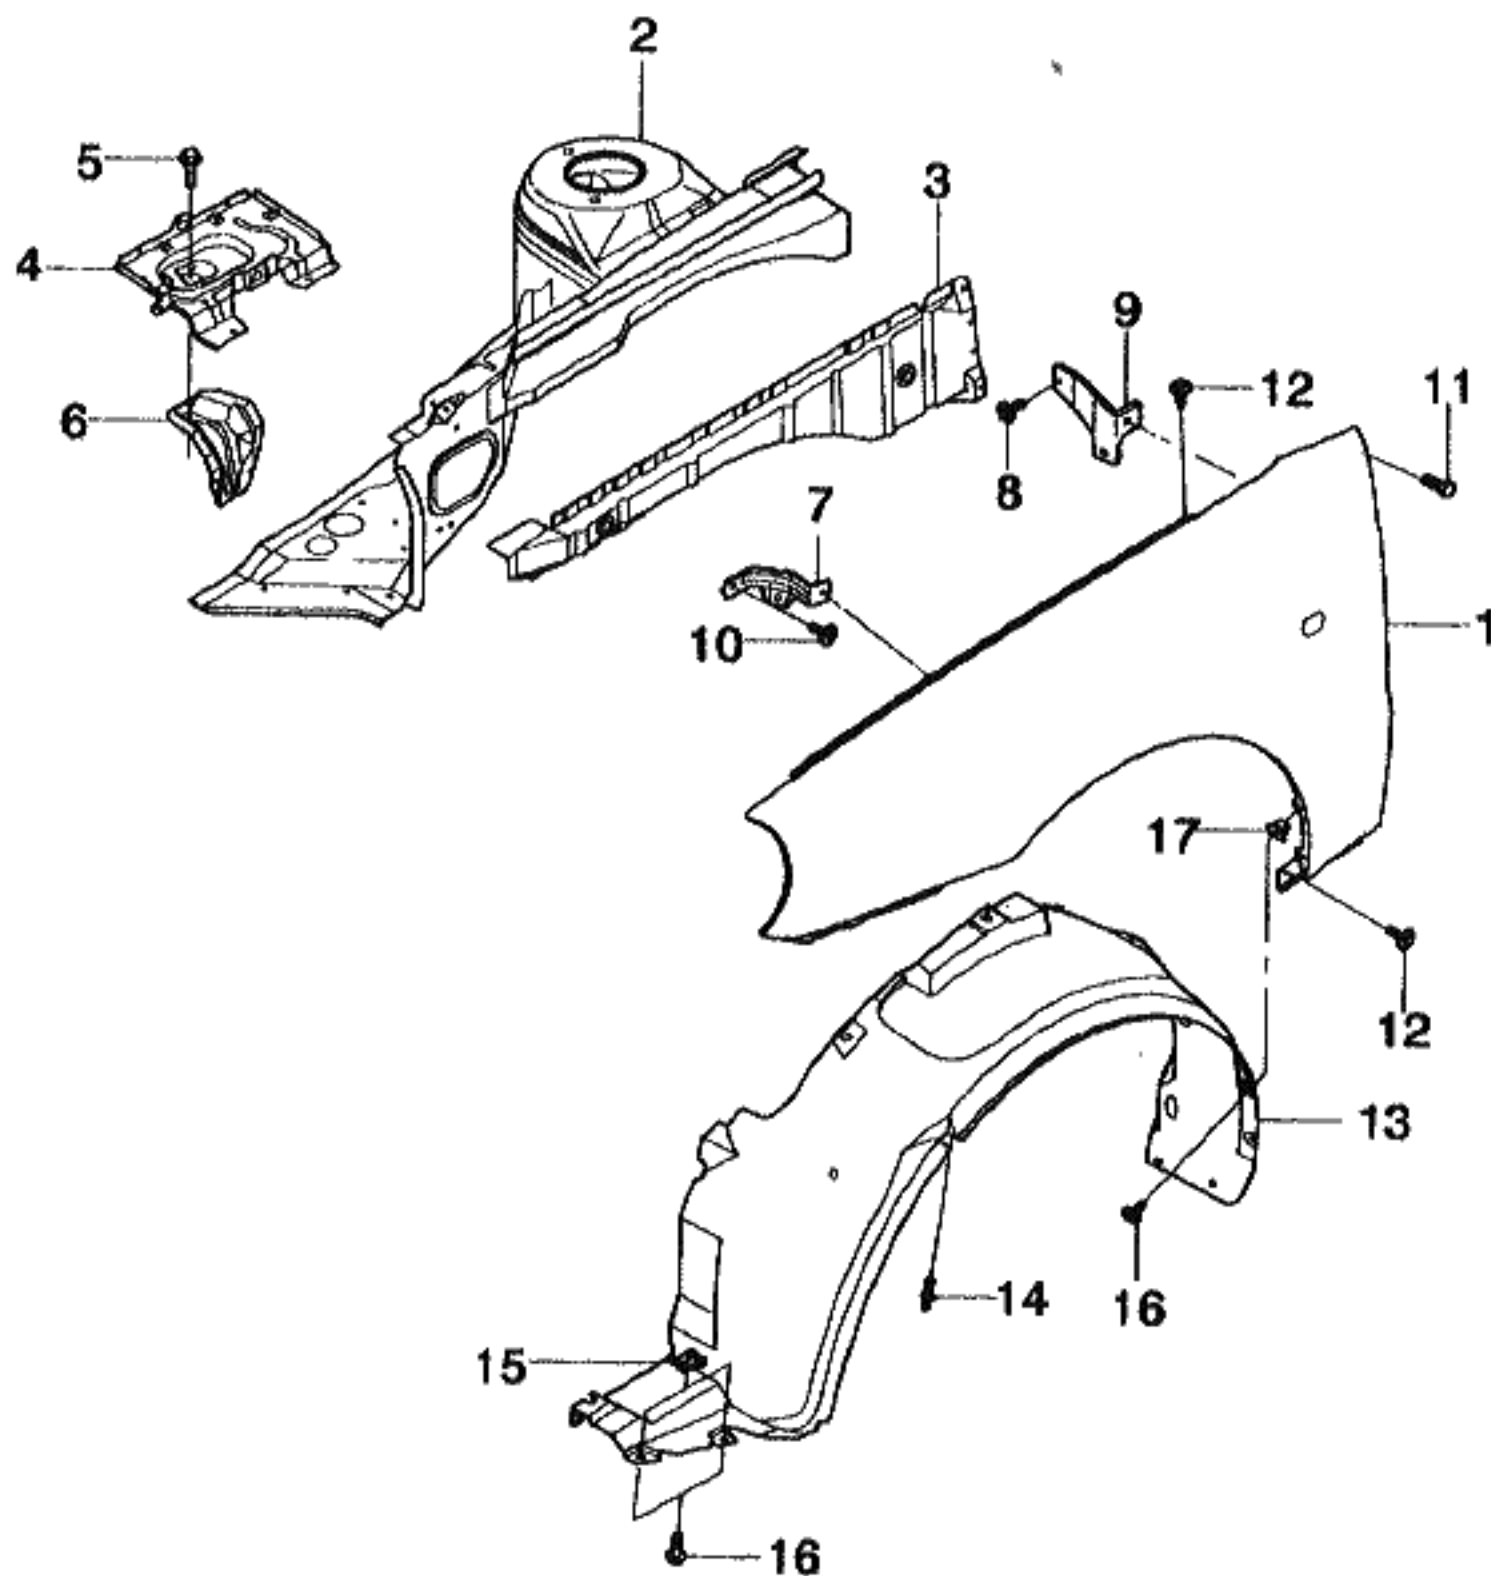


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
[01]		(E)PANEL A-FENDER (D)KOTFLÜGEL				(F)PANNEAU DE GARDE-BOUE (S)PANEL GUARDAFANGOS						
A96205673		. S S		&FL6&XCK.		LH 1					EC	
A96227837		. A A		&FL6&XCP.		LH 1					ED	
A96205674		. S S		&FL6&XCK.		RH 1					E3	
A96227838		. A A		&FL6&XCP.		RH 1					E4	
[02]		(E)WHEELHOUSE A (D)VERKLEIDUNG,RAD-GEHÄUSE				(F)PANNEAU-TIMONERIE AVANT (S)PANEL-VOLANTE DELANTERO						
96228157		. S S				LH 1						
96228158		. S S				RH 1						
[03]		(E)BRACE A-WHEELHOUSE FR (D)SCHIENE,RAD-GEHÄUSE				(F)SUPPORT-TIMONERIE (S)REFUERZO-TIMONERA						
96228203		. S S				LH 1						
96228204		. S S				RH 1						
[04]		(E)TRAY A-BATTERY (D)PFANNE,BATTERIE				(F)PLATEAU-BATTERIE (S)BANDEJA-BATERIA						
96228266		. S S				1						
[05]		(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO						
09116-06011		. S S				LH 3						
[06]		(E)SUPPORT-BATTERY TRAY (D)TRÄGER				(F)SUPPORT (S)SOPORTE						
96228139		. S S				LH 1						
[07]		(E)BRACKET A-FENDER,FR (D)TRÄGER				(F)SUPPORT (S)SOPORTE						
96205143		. S S				LH 1						
96205144		. S S				RH 1						
[08]		(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO						
09116-06011		. S S				2						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

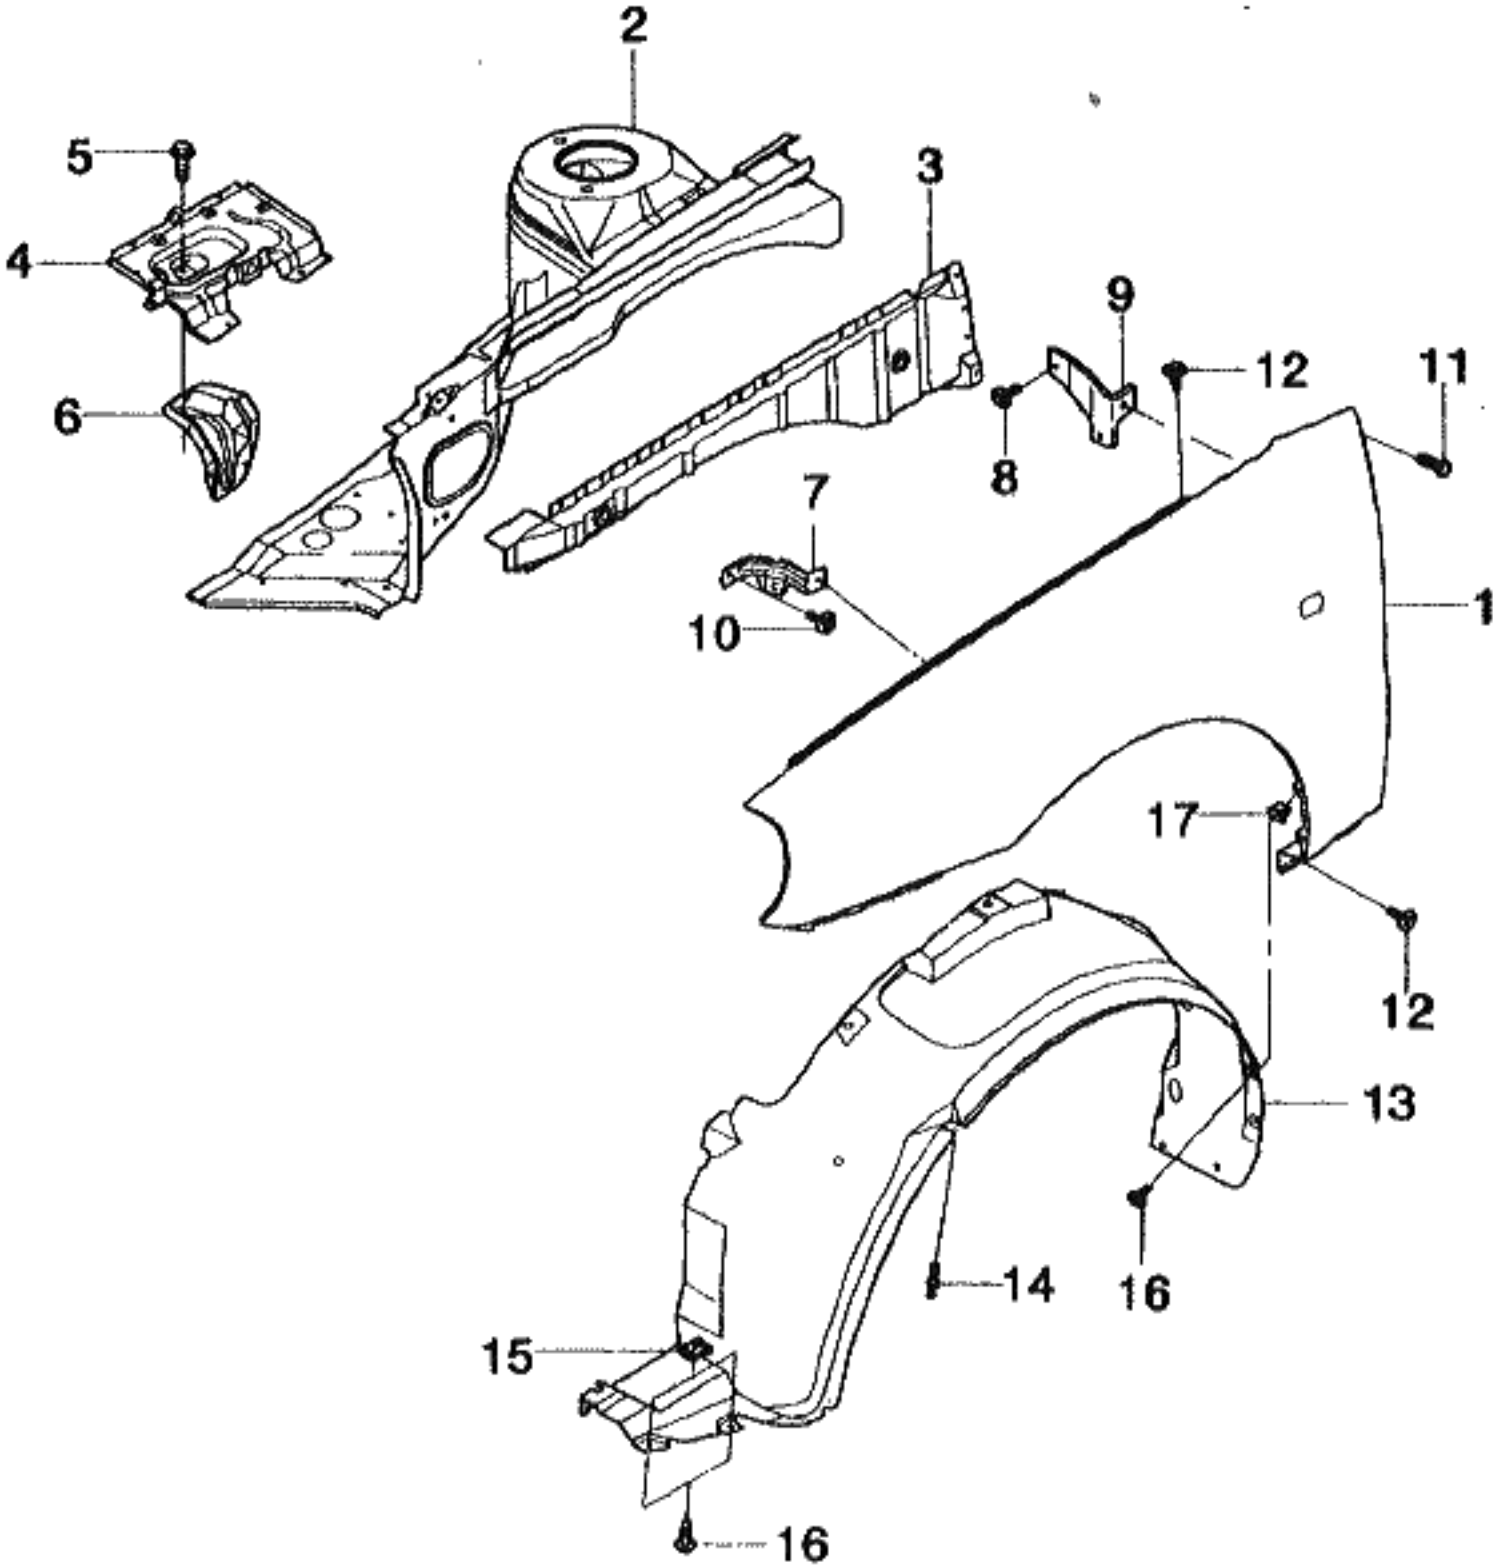


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[09]	(E)BRACKET A-FENDER,RR (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
	96205151	.	S	S		LH 1					
	96205152	.	S	S		RH 1					
	[10]	(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09116-06011	.	S	S		2					
	[11]	(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09116-06022	.	S	S		2					
	[12]	(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09116-06011	.	S	S		14					
	[13]	(E)LINER-FENDER,FR (D)AUSKLEIDUNG,KOTFLÜGEL				(F)GARNITURE-GARDE-BOUE (S)REVESTIMIENTO-GUARDAFANG					
	96205496	.	S	S		LH 1					
	96205497	.	S	S		RH 1					
	[14]	(E)HOOK (D)HAKEN				(F)CROCHET (S)PERCHA					
	09410-00100	.	S	S		14					
	[15]	(E)NUT-SPEED (D)MUTTER				(F)ECROU (S)TUERCA					
	09148-04010	.	S	S		4					
	[16]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	09136-04005	.	S	S		6	970803				
Y	09136-04013	.	S	S		6	970804				
	[17]	(E)NUT-SPEED (D)MUTTER				(F)ECROU (S)TUERCA					
	09148-04003	.	S	S		2					

LEVEL		T/A(TRANSAXLE)	
S X = 2.0 SOHC CDX = 2.0 DOHC		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	


6150 DASH PANEL & COWL

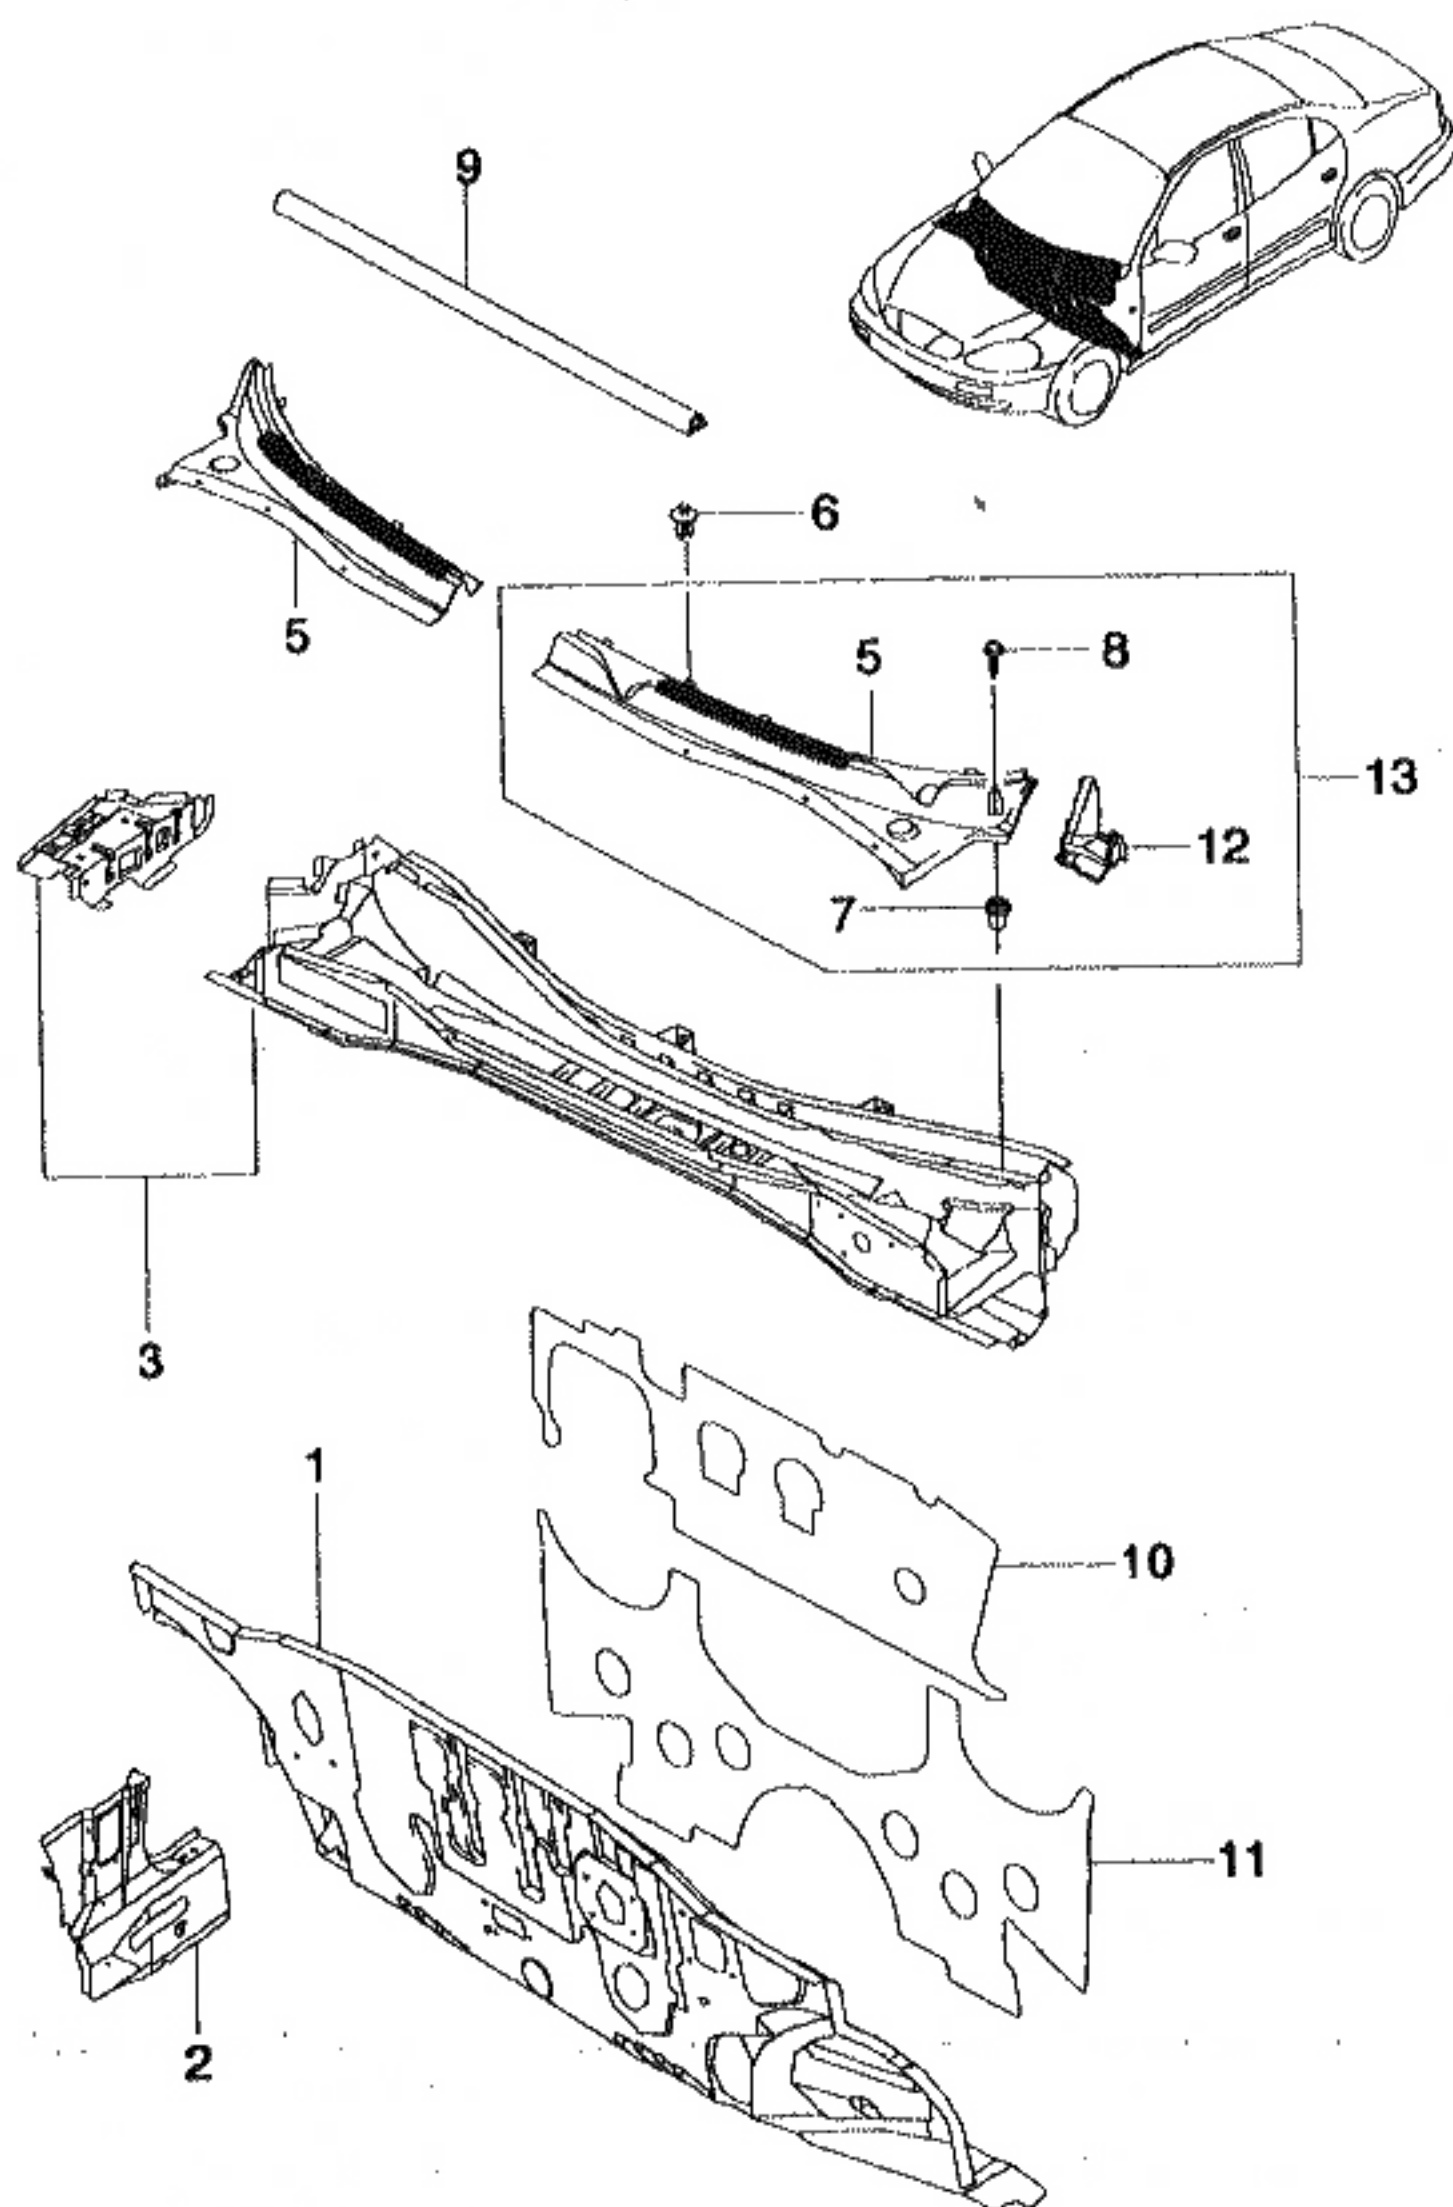


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E) PANEL A-DASH, LOWER (D) PLATTE				(F) PLAQUE (S) PANEL-SALPICAR					
96206473		M	S	S		1					
96206455		A	O	O		1					
[02]		(E) REINF A-DASH, LOWER (D) VERSTÄRKUNG				(F) RENFORCEMENT (S) REFUERZO					
96206482		.	S	S		LH 1					
96206333		.	S	S		RH 1					
[03]		(E) PANEL A-DASH, UPPER (D) VERKLEIDUNG, ARMATUREN BRE				(F) PANNEAU-TABLEAU DE BORD (S) PANEL-SALPICAR					
96228183		.	S	S		1					DE
[05]		(E) COWL-WATER (D) HAUBE				(F) CHAPEAU (S) CAPUCHA					
96206401		.	S	S		LH 1					
96206402		.	S	S		RH 1					
[06]		(E) CLIP (D) KLEMME				(F) ATTACHE (S) GRAPA					
09409-05321		.	S	S		2					
[07]		(E) NUT-SPEED (D) MUTTER				(F) ECROU (S) TUERCA					
09148-04020		.	S	S		3					
[08]		(E) SCREW-TAPPING (D) SCHRAUBE				(F) VIS (S) TORNILLO					
09132-04014		.	S	S		3					
[09]		(E) WEATHERSTRIP A-COWL (D) DICHTUNGSLEISTE				(F) ISOLATION EN BANDELETTE (S) BURLETE					
96206412		.	S	S		1					
[10]		(E) PAD-DASH ISOLATION, UPPER (D) UNTERLAGE				(F) PATIN (S) COJIN					
96228207		.	S	S		1					
LEVEL						T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

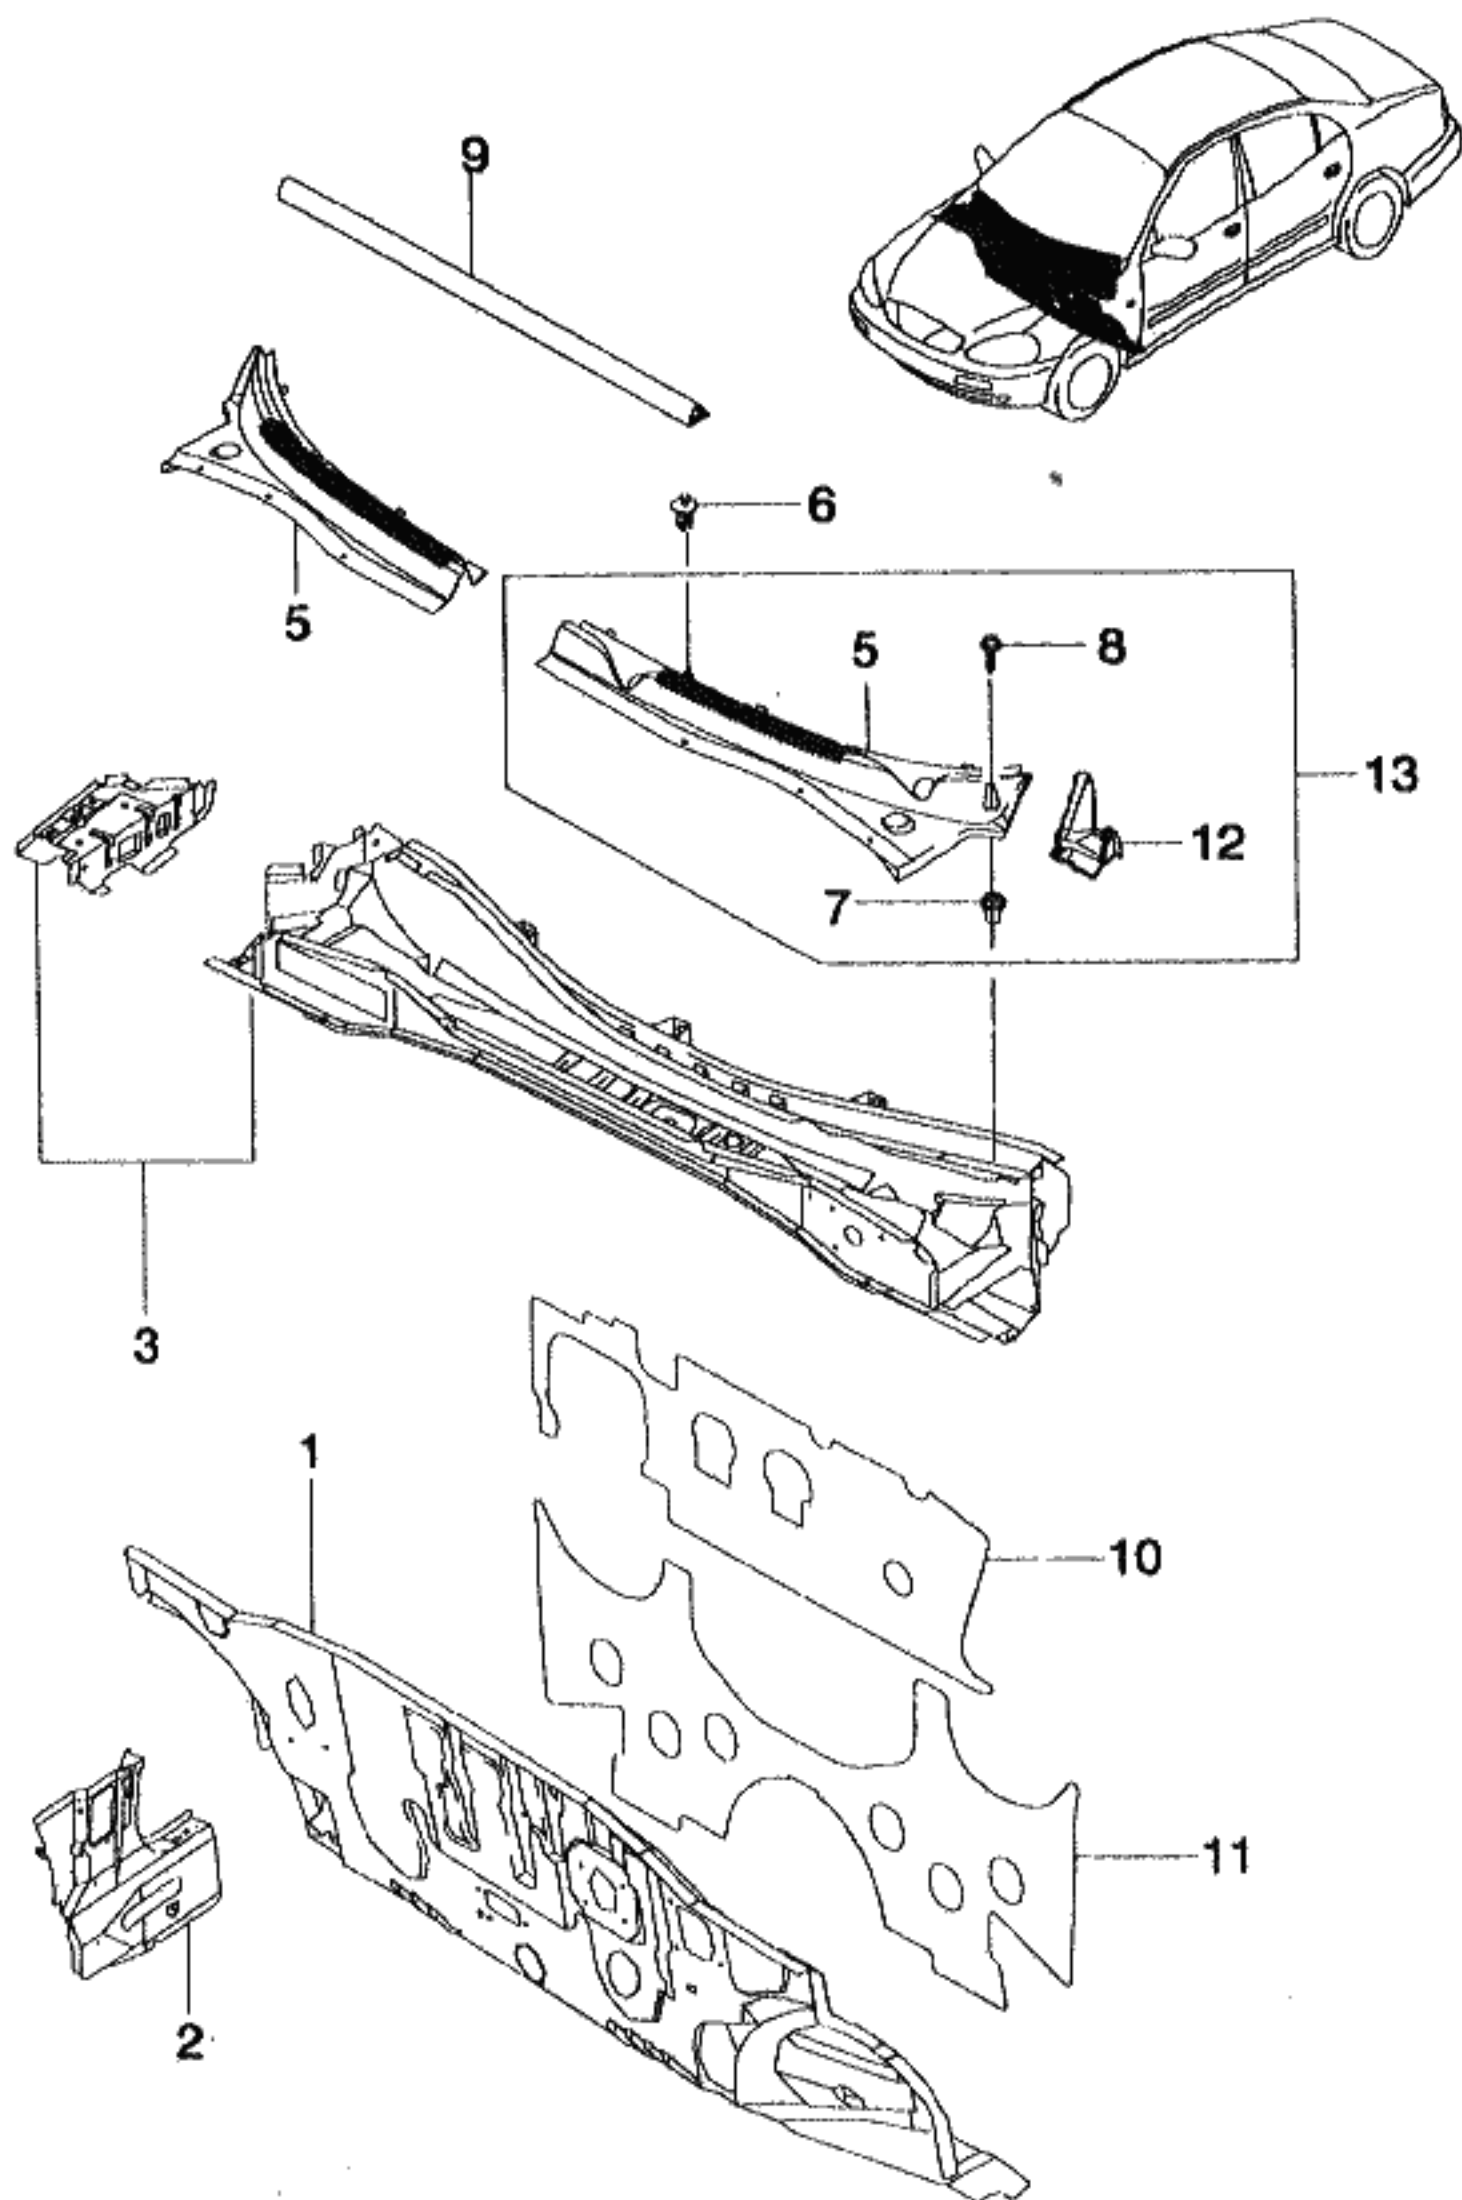

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 06228209	(E) PAD-DASH ISOLATION, LOWER (D) UNTERLAGE					(F) PATIN (S) COJIN				
	[12] 96228281 96228282	(E) EXTENSION-COWL (D) VERLÄNGERUNG					(F) RALLONGE (S) EXTENSION				
	[13] 96228277 96228278	(E) COWL A (D) HAUBE					(F) CHAPEAU (S) CAPUCHA				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

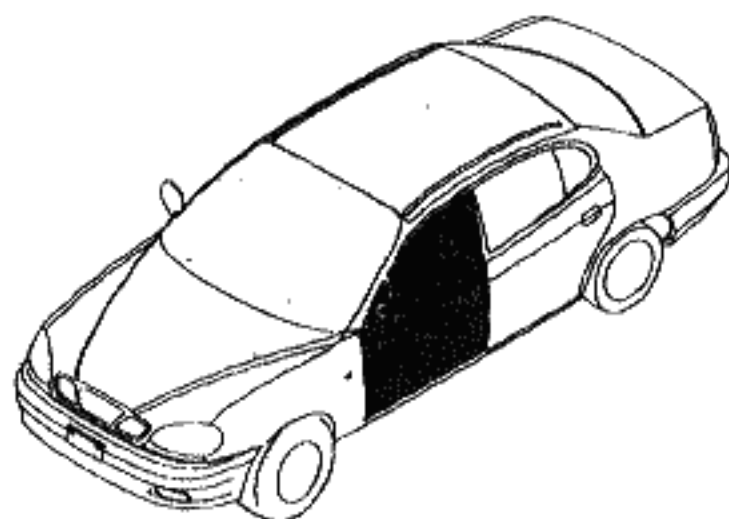


1

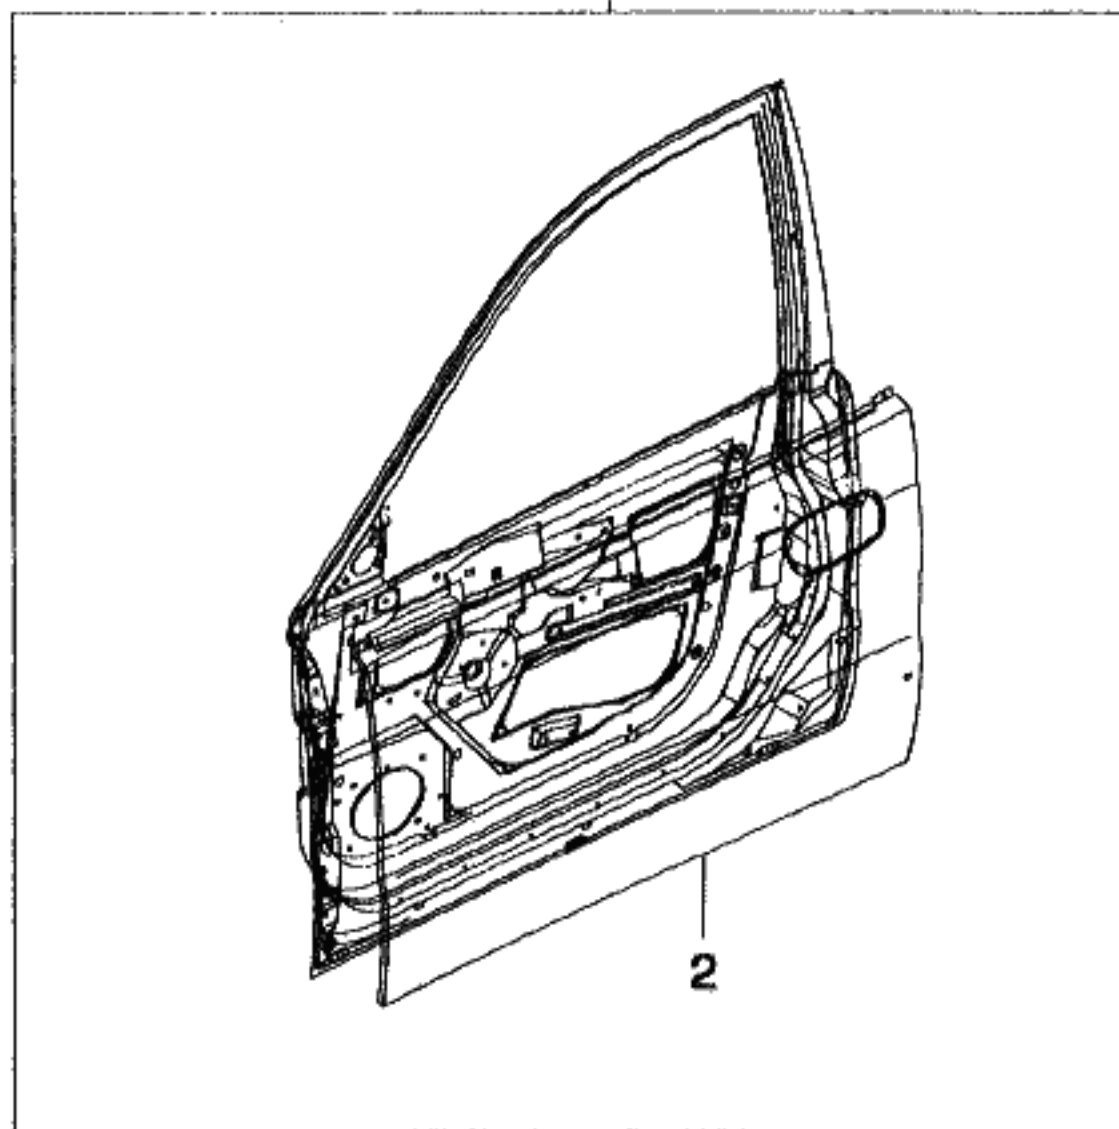


2


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E) PANEL A-DOOR,FR (D) VERKLEIDUNG C,SEITE					(F) PANNEAU C-COTE (S) PANEL C-LADO					
	A96253037	.	S	S	&XCK.		LH	1				
	A96226656	.	A	A	&XCP.		LH	1				
	A96253038	.	S	S	&XCK.		RH	1				
	A96226657	.	A	A	&XCP.		RH	1				
	[02]	(E) PANEL-FRONT DOOR,OTR (D) VERKLEIDUNG,VORDERTÜR					(F) PANNEAU-PORTE AVANT (S) PANEL-PUERTA DEL FRENTE					
	A96226632	.	S	S			LH	1				
	A96226633	.	S	S			RH	1				
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

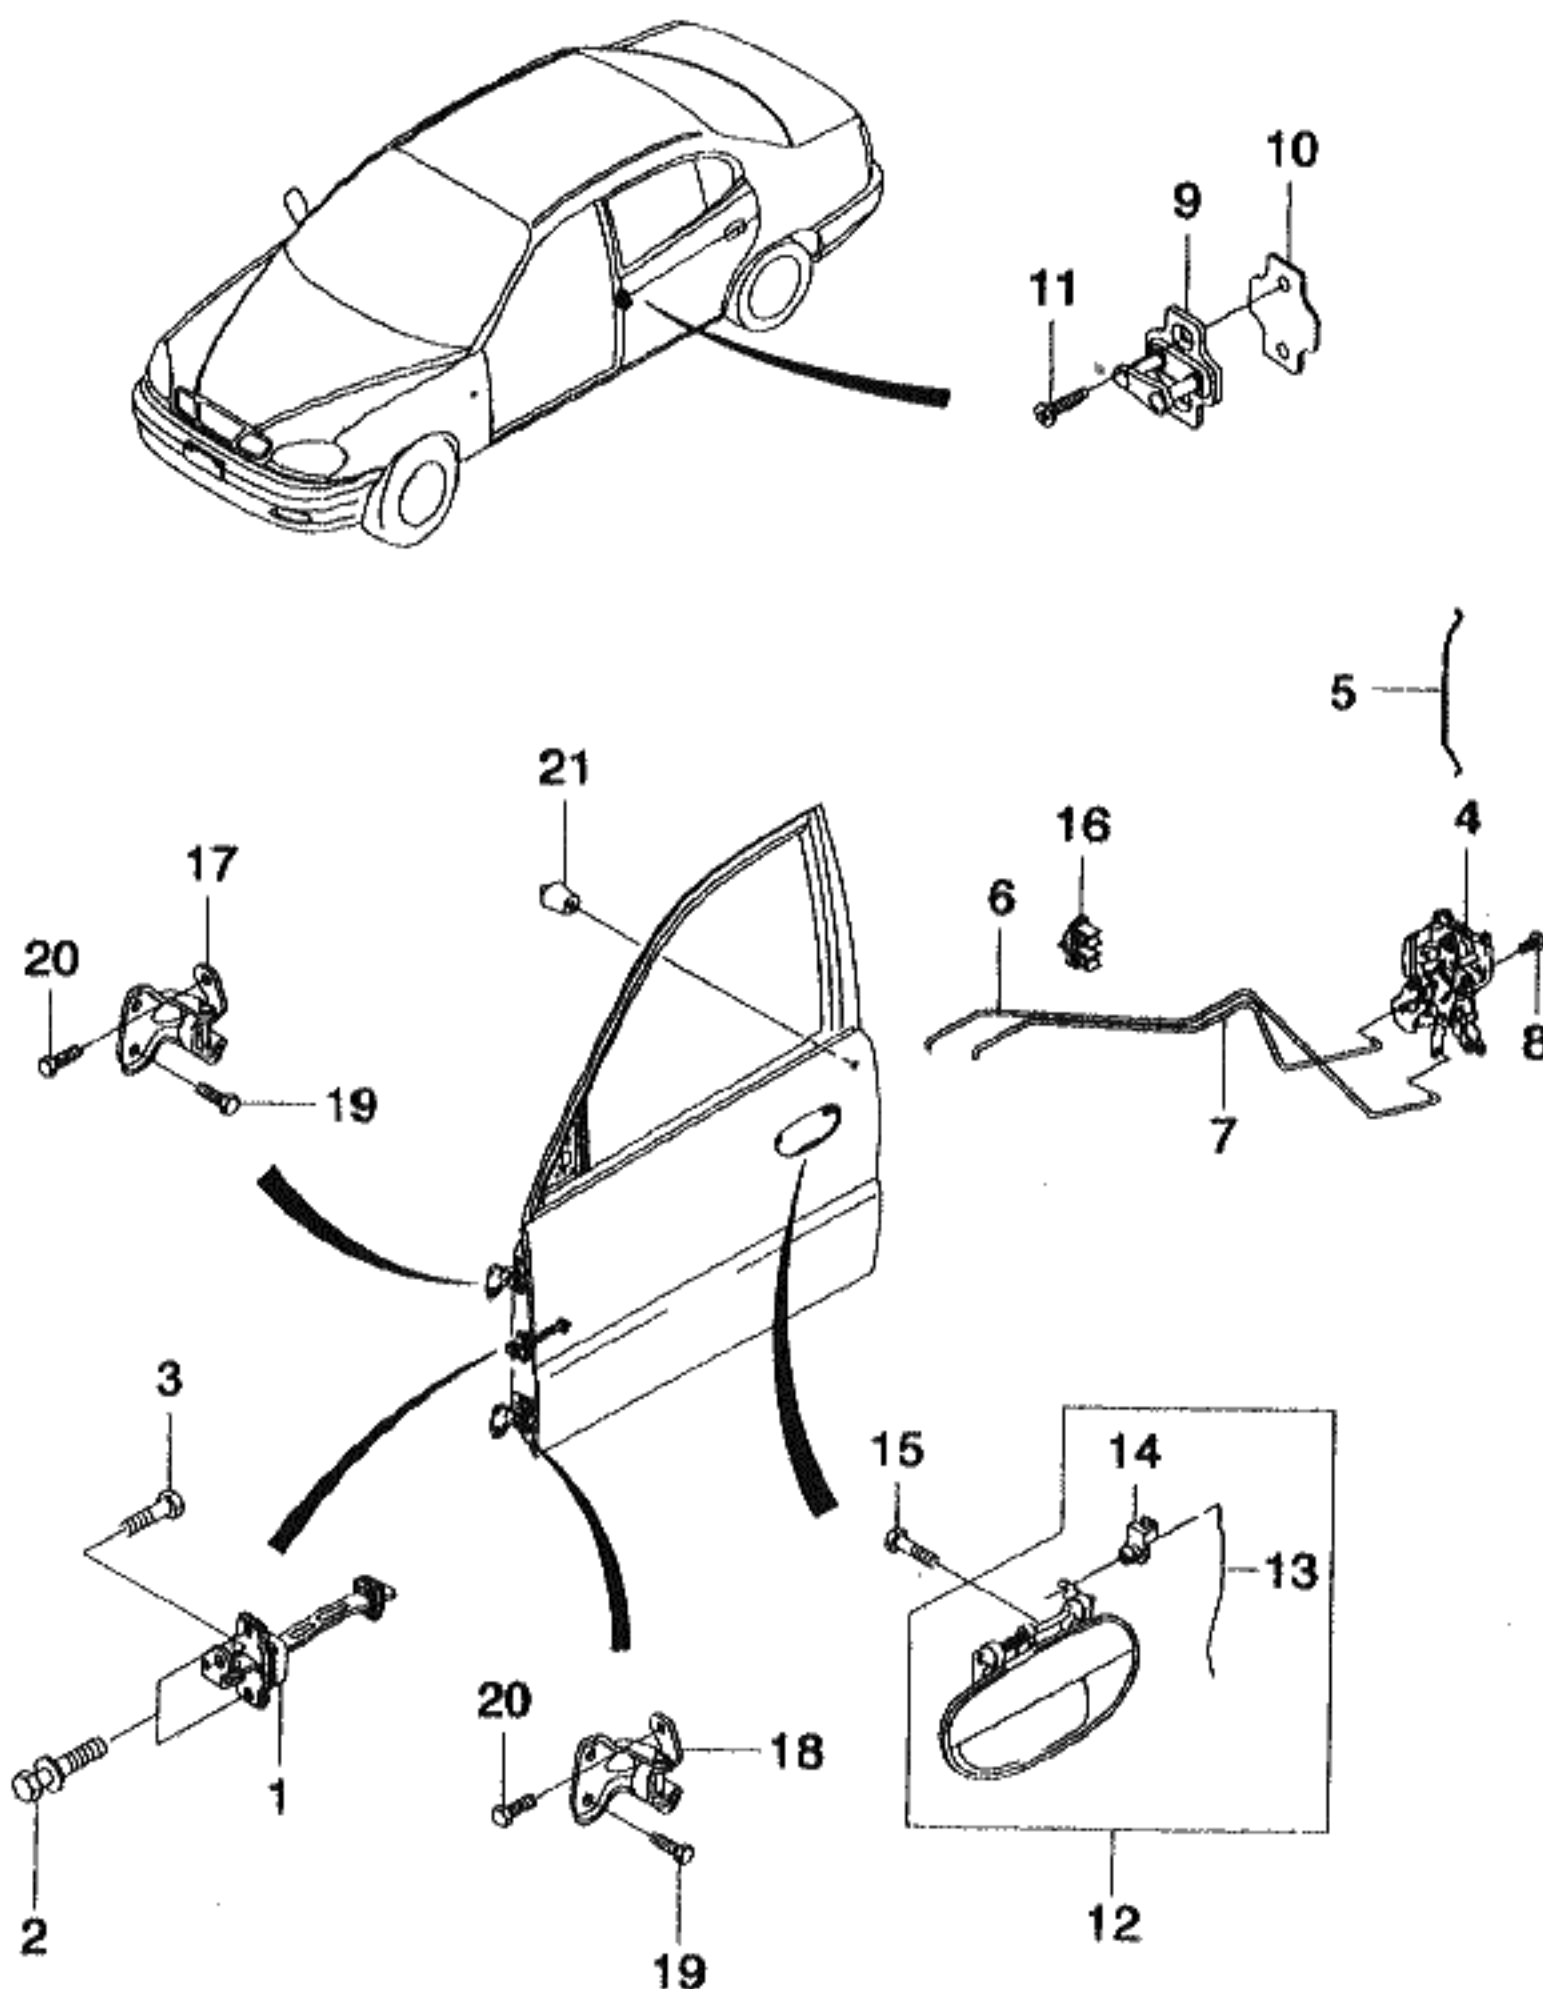


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)CHECK A-DOOR,FR (D)TÜR-PRÜF				(F)ARRET-PORTE (S)PUERTA DE VERIFICAR					
	96251667	.	S	S		LH	1				
	96251668	.	S	S		RH	1				
	[02]	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO					
	01117-06165	.	S	S			4				
	[03]	(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
	09118-08010	.	S	S			2				
	[04]	(E)LATCH A-DOOR,FR (D)VERSCHLÜß,VORDERTÜR				(F)LOQUET-PORTE AVANT (S)PESTILLO-PUERTA					
	96224997	.	S	S	-CAL/UIP.	LH	1				
	96225003	.	O	O	&CAL/UIP.	LH	1				
	96225000	.	S	S	-CAL/UIP.	RH	1				
	96225006	.	O	O	&CAL/UIP.	RH	1				
	[05]	(E)ROD-KEY CYLINDER DOOR (D)STAB				(F)TRINGLE (S)VARILLA-CILINDRO DE CIERR					
	96205623	.	S	S		LH	1				
	96205624	.	S	S		RH	1				
	[06]	(E)ROD-DOOR HANDLE,FR INSID (D)STAB				(F)TRINGLE (S)VARILLA					
	96205619	.	S	S		LH	1				
	96205620	.	S	S		RH	1				
	[07]	(E)ROD-DOOR LOCKING,FR (D)STAB,TÜRVERRIEGELUNG				(F)TRINGLE (S)VARILLA-CIERRE DE PUERTA					
	96205585	.	S	S		LH	1				
	96205586	.	S	S		RH	1				
	[08]	(E)SCREW-CR MACHINE (D)SCHRAUBE				(F)VIS (S)TORNILLO					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

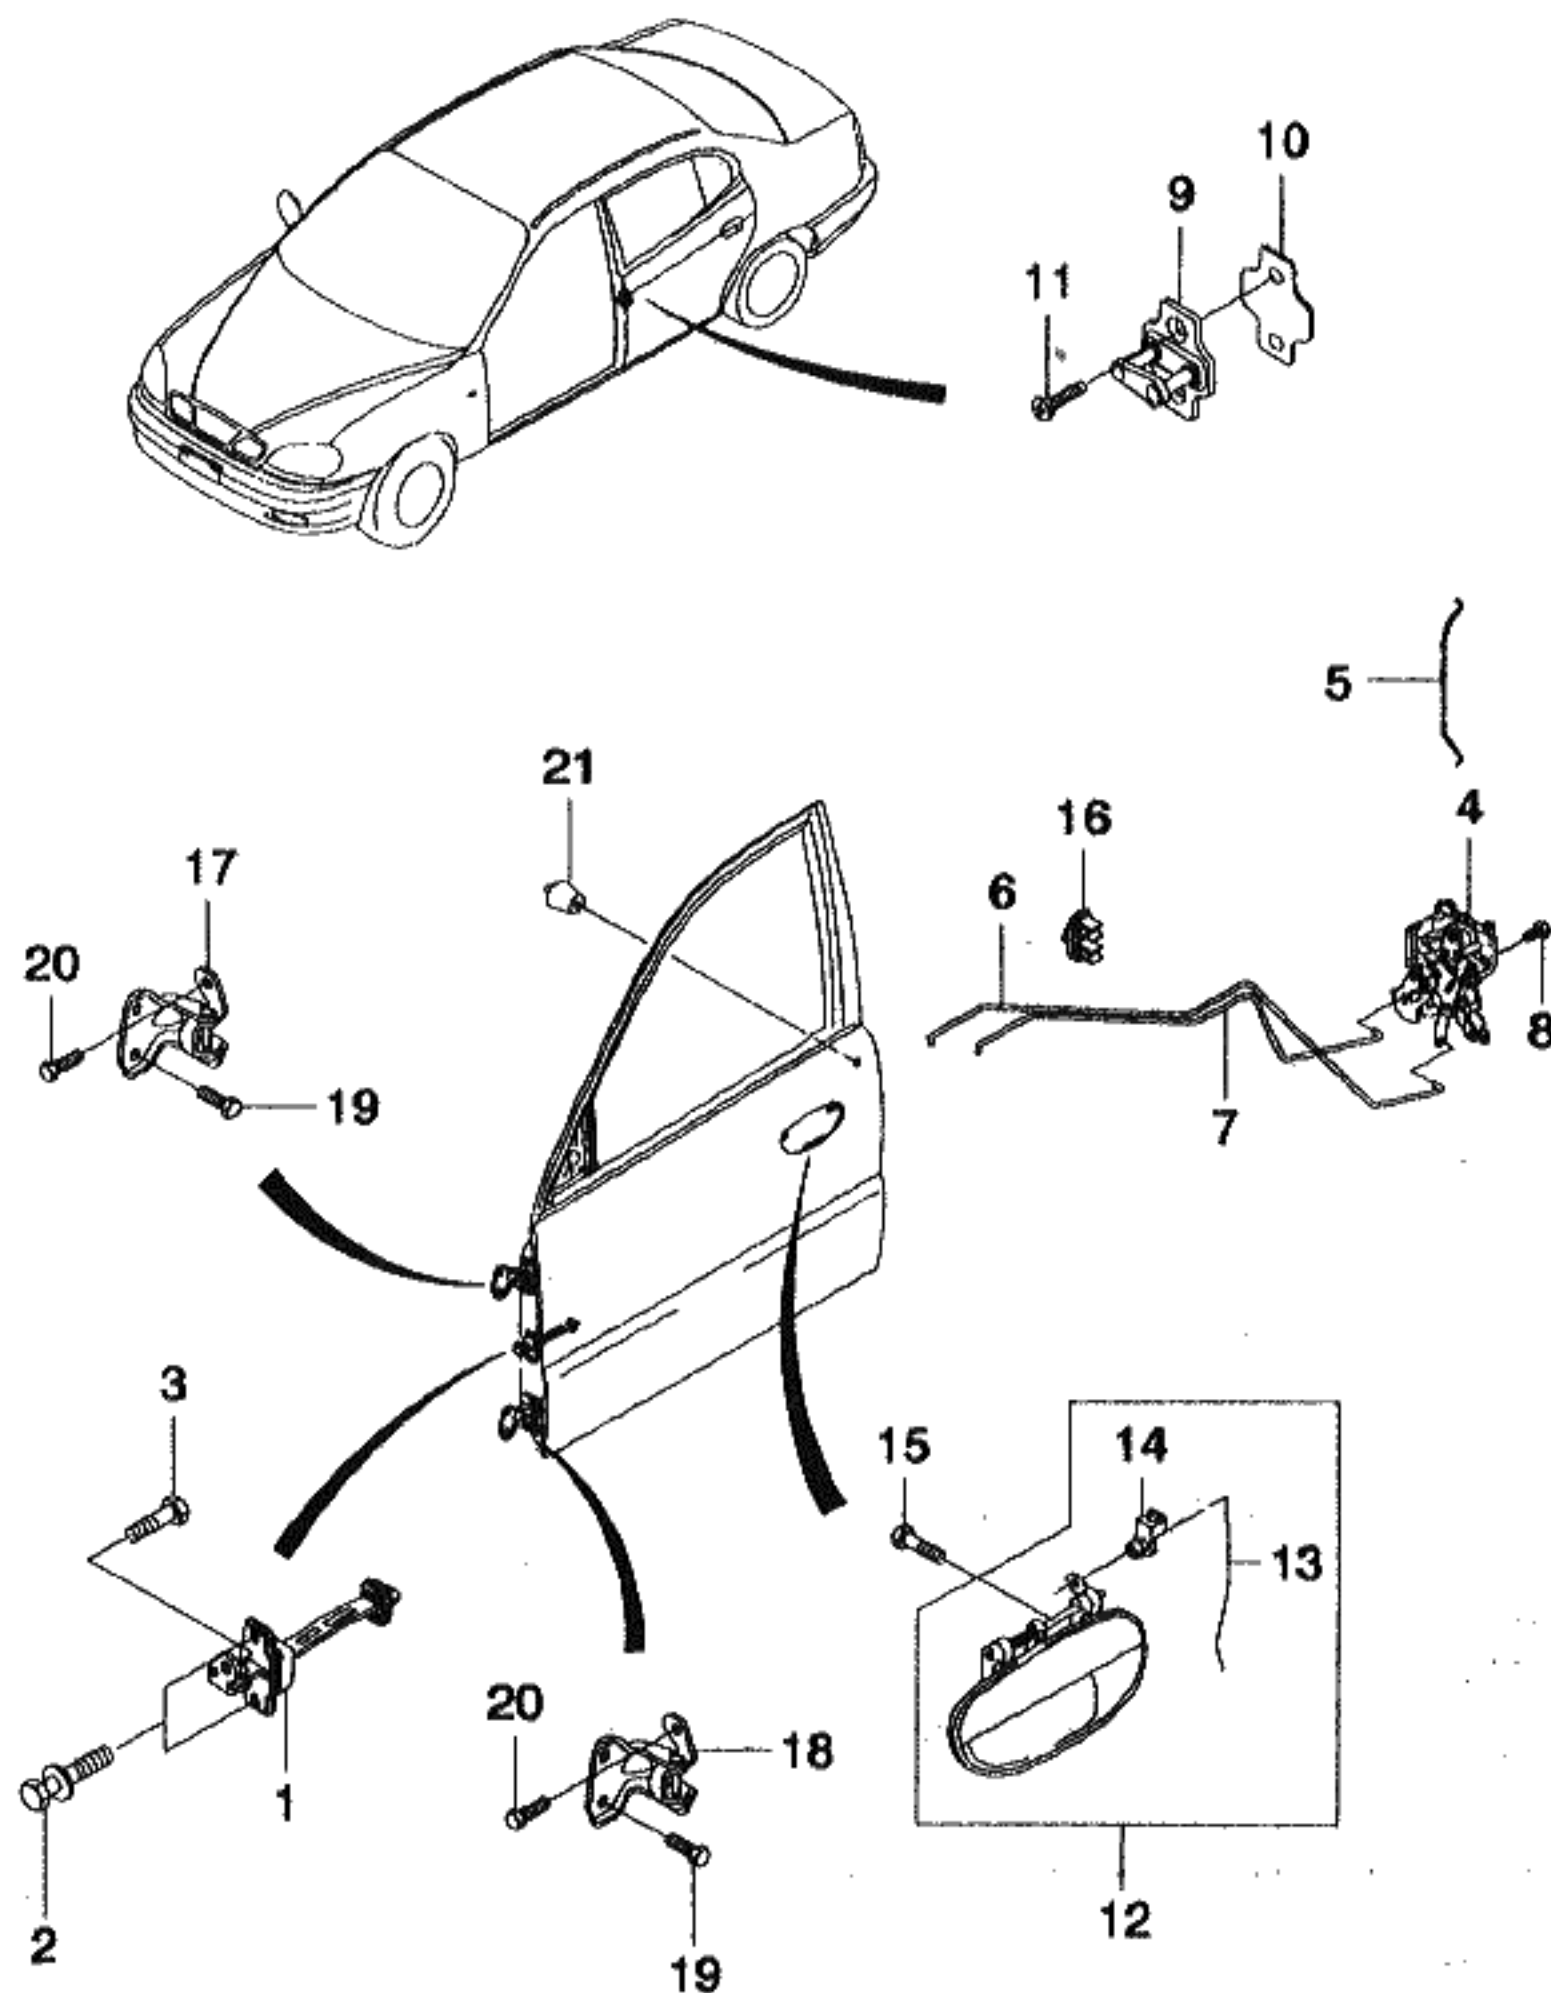


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	09125-06002	.	S	S		6					
	[09]		(E)STRIKER A-DOOR			(F)MARTEAU					
			(D)SCHLÄGER			(S)HUELGUISTA					
	96301668	.	S	S		2					
	[10]		(E)WASHER-DISTANCE			(F)RONDELLE-DISTANCE					
			(D)DICHTUNGSRING,DISTANZ			(S)ARANDELA-DISTANCIA					
	96216377	.	S	S		2					
	[11]		(E)SCREW-MACHINE			(F)VIS					
			(D)SCHRAUBE			(S)TORNILLO					
	09126-08003	.	S	S		4					
	[12]		(E)HANDLE A-DOOR FR OUTSIDE			(F)POIGNEE-EXTERIEURE PORTE					
			(D)HENKEL,TÜR,AUßEN			(S)MANIJA-EXTERNA PUERTA					
	96205587	.	S	S		LH 1					
	96205588	.	S	S		RH 1					
	[13]		(E)ROD-DOOR HANDLE FR O/SIDE			(F)TRINGLE					
			(D)STAB,AUßEN-GRIFF			(S)VARILLA					
	96205599	.	S	S		LH 1					
	96205600	.	S	S		RH 1					
	[14]		(E)CLAMP-DOOR HANDLE,FR			(F)PINCE					
			(D)KLAMMER			(S)ABRAZADERA					
	09403-04301	.	S	S		2					
	[15]		(E)BOLT-HEXAGON			(F)BOULON					
			(D)SCHRAUBE			(S)PERNO					
	01114-06123	.	S	S		4					
	[16]		(E)CLIP			(F)ATTACHE					
			(D)KLEMME			(S)GRAPA					
	09408-00021	.	S	S		2					
	[17]		(E)HINGE A-DOOR,FR			(F)CHARNIERE-PORTE AVANT					
			(D)BESCHLAG,VORDERTÜR			(S)BISAGRA-PUERTA					
	96229579	.	S	S		2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

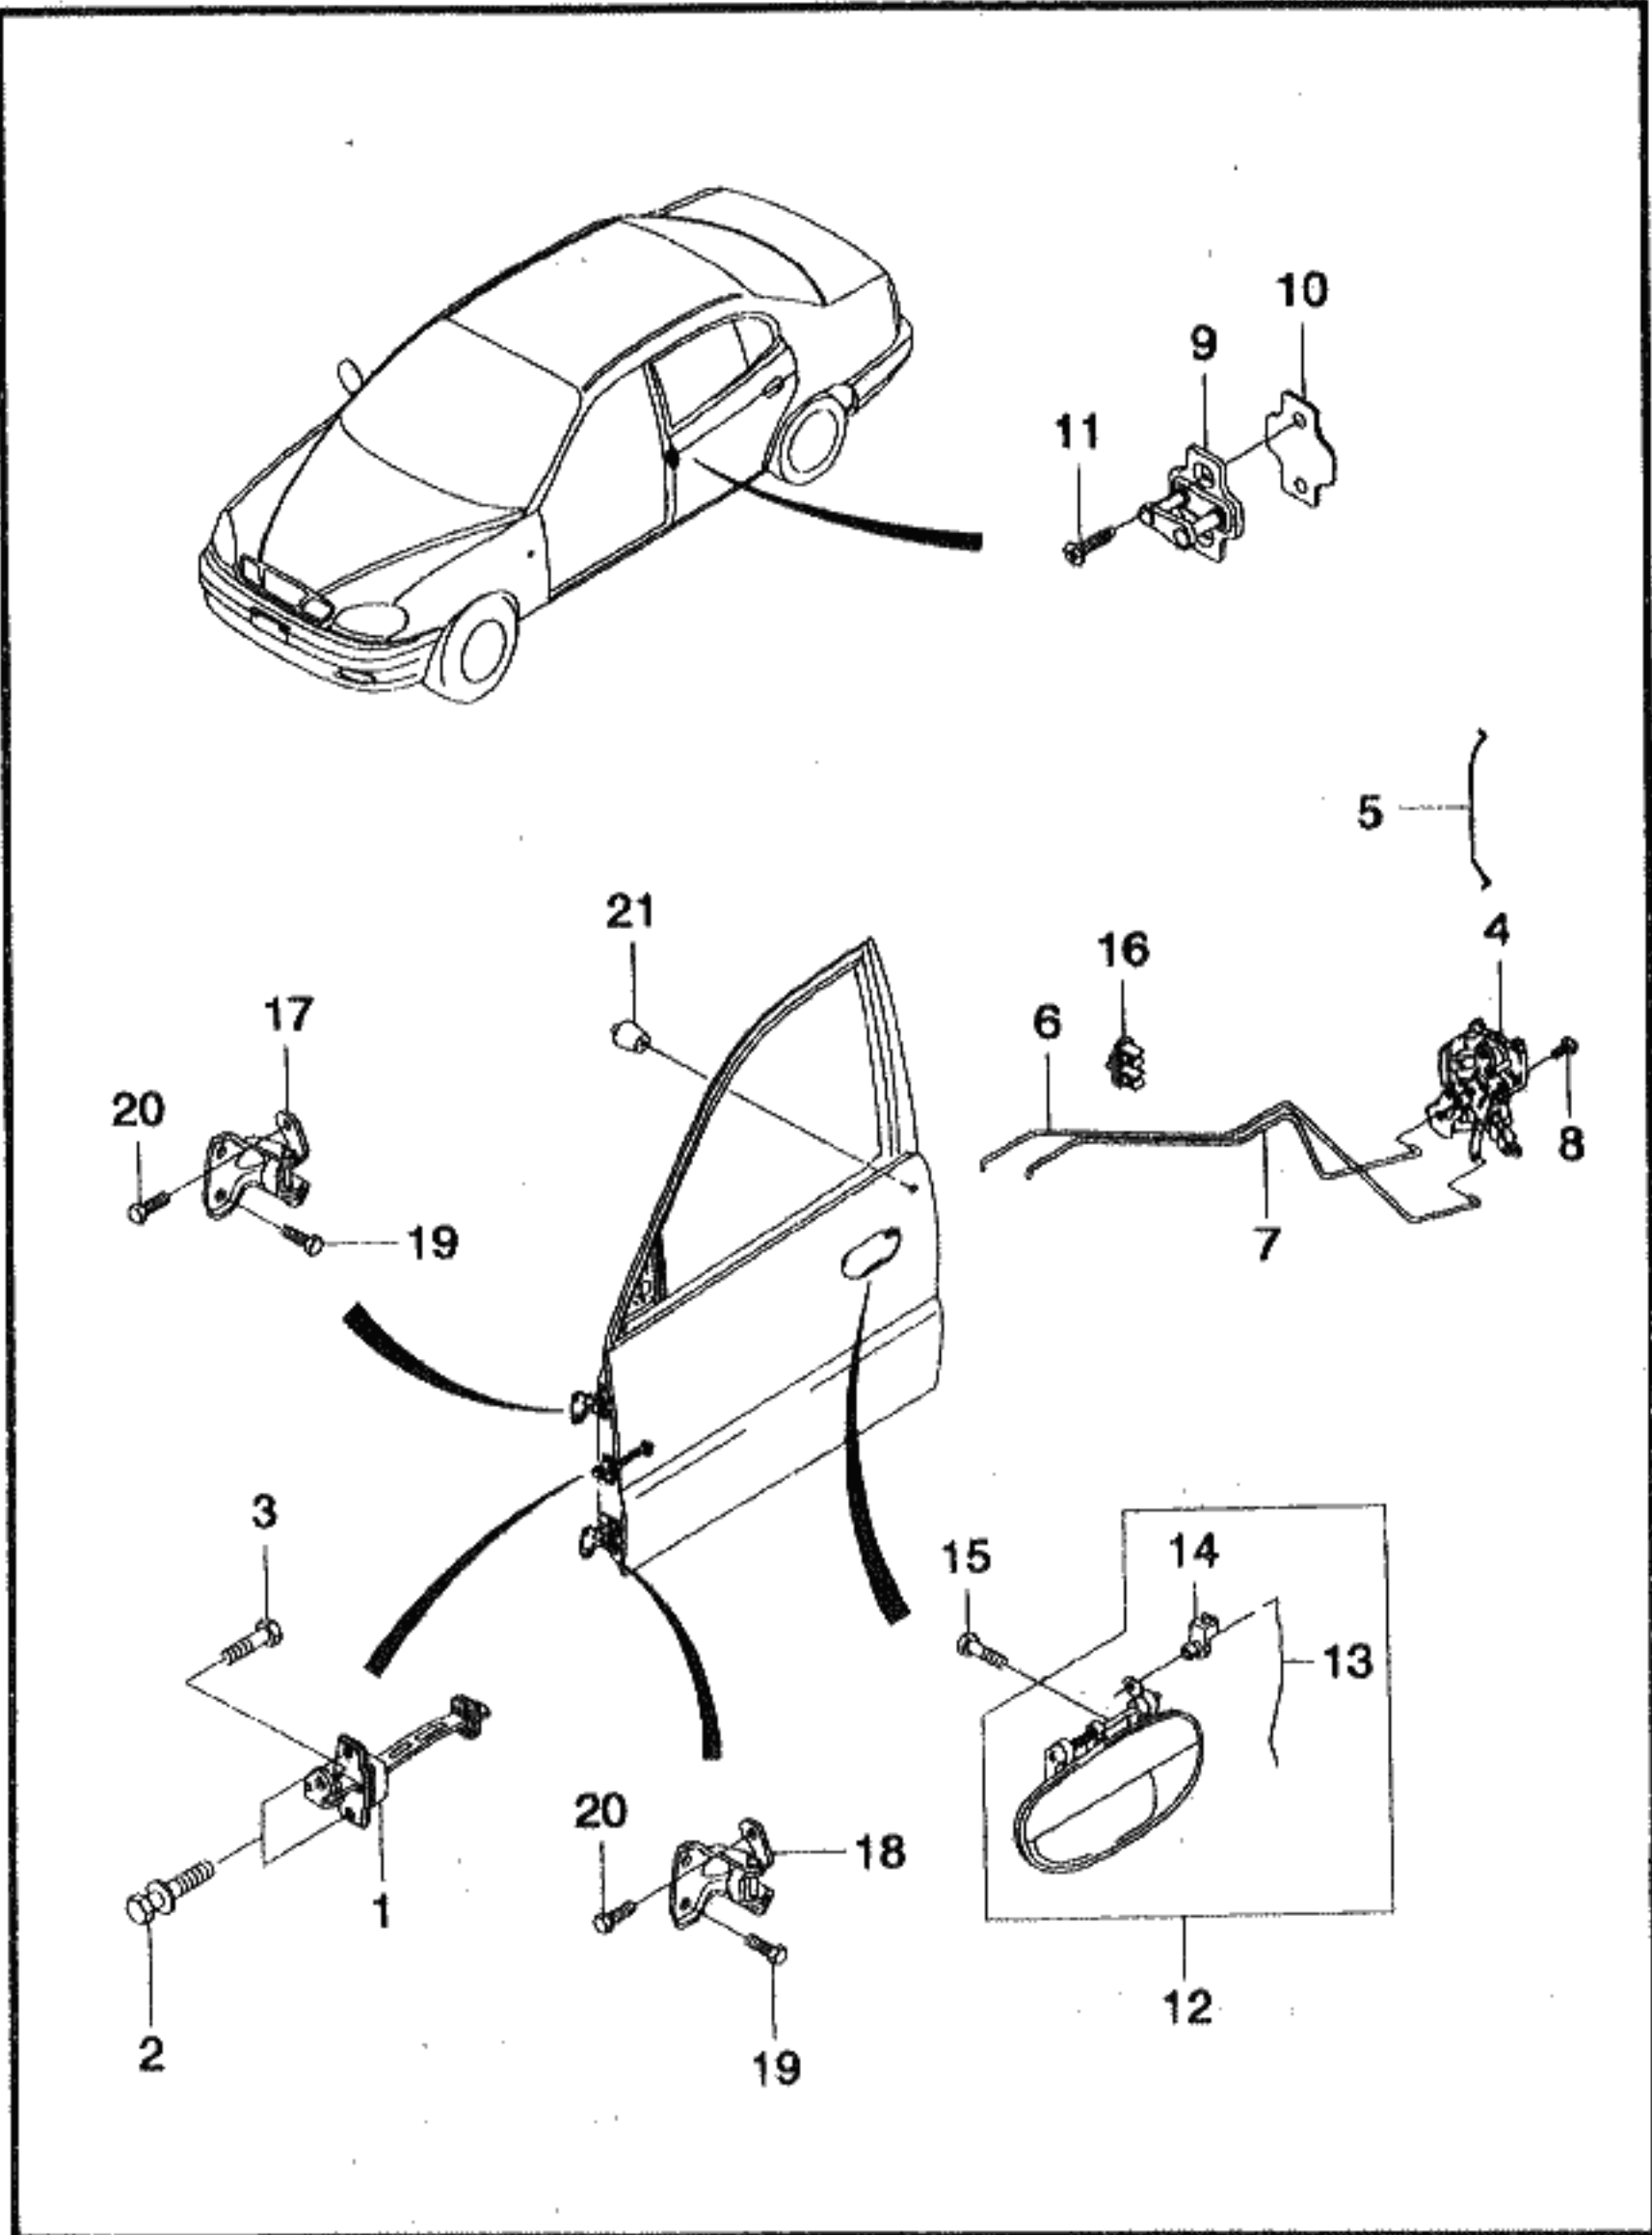


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[18] 96229580	(E)HINGE A-DOOR,FR (D)BESCHLAG,VORDERTÜR					(F)CHARNIERE-PORTE AVANT (S)BISAGRA-PUERTA					
	[19] 09103-08022 O 09118-08008	(E)BOLT-FLANGE (D)SCHRAUBE					2 (F)BOULON (S)PERNO					
	[20] 09103-08016	(E)BOLT-FLANGE (D)SCHRAUBE					8 8 970803 (F)BOULON (S)PERNO					
	[21] 09321-08001	(E)BUMPER-DOOR FR UPPER (D)STOBSTANGE					8 (F)PARE-CHOC (S)PARACHOQUES					
							2					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

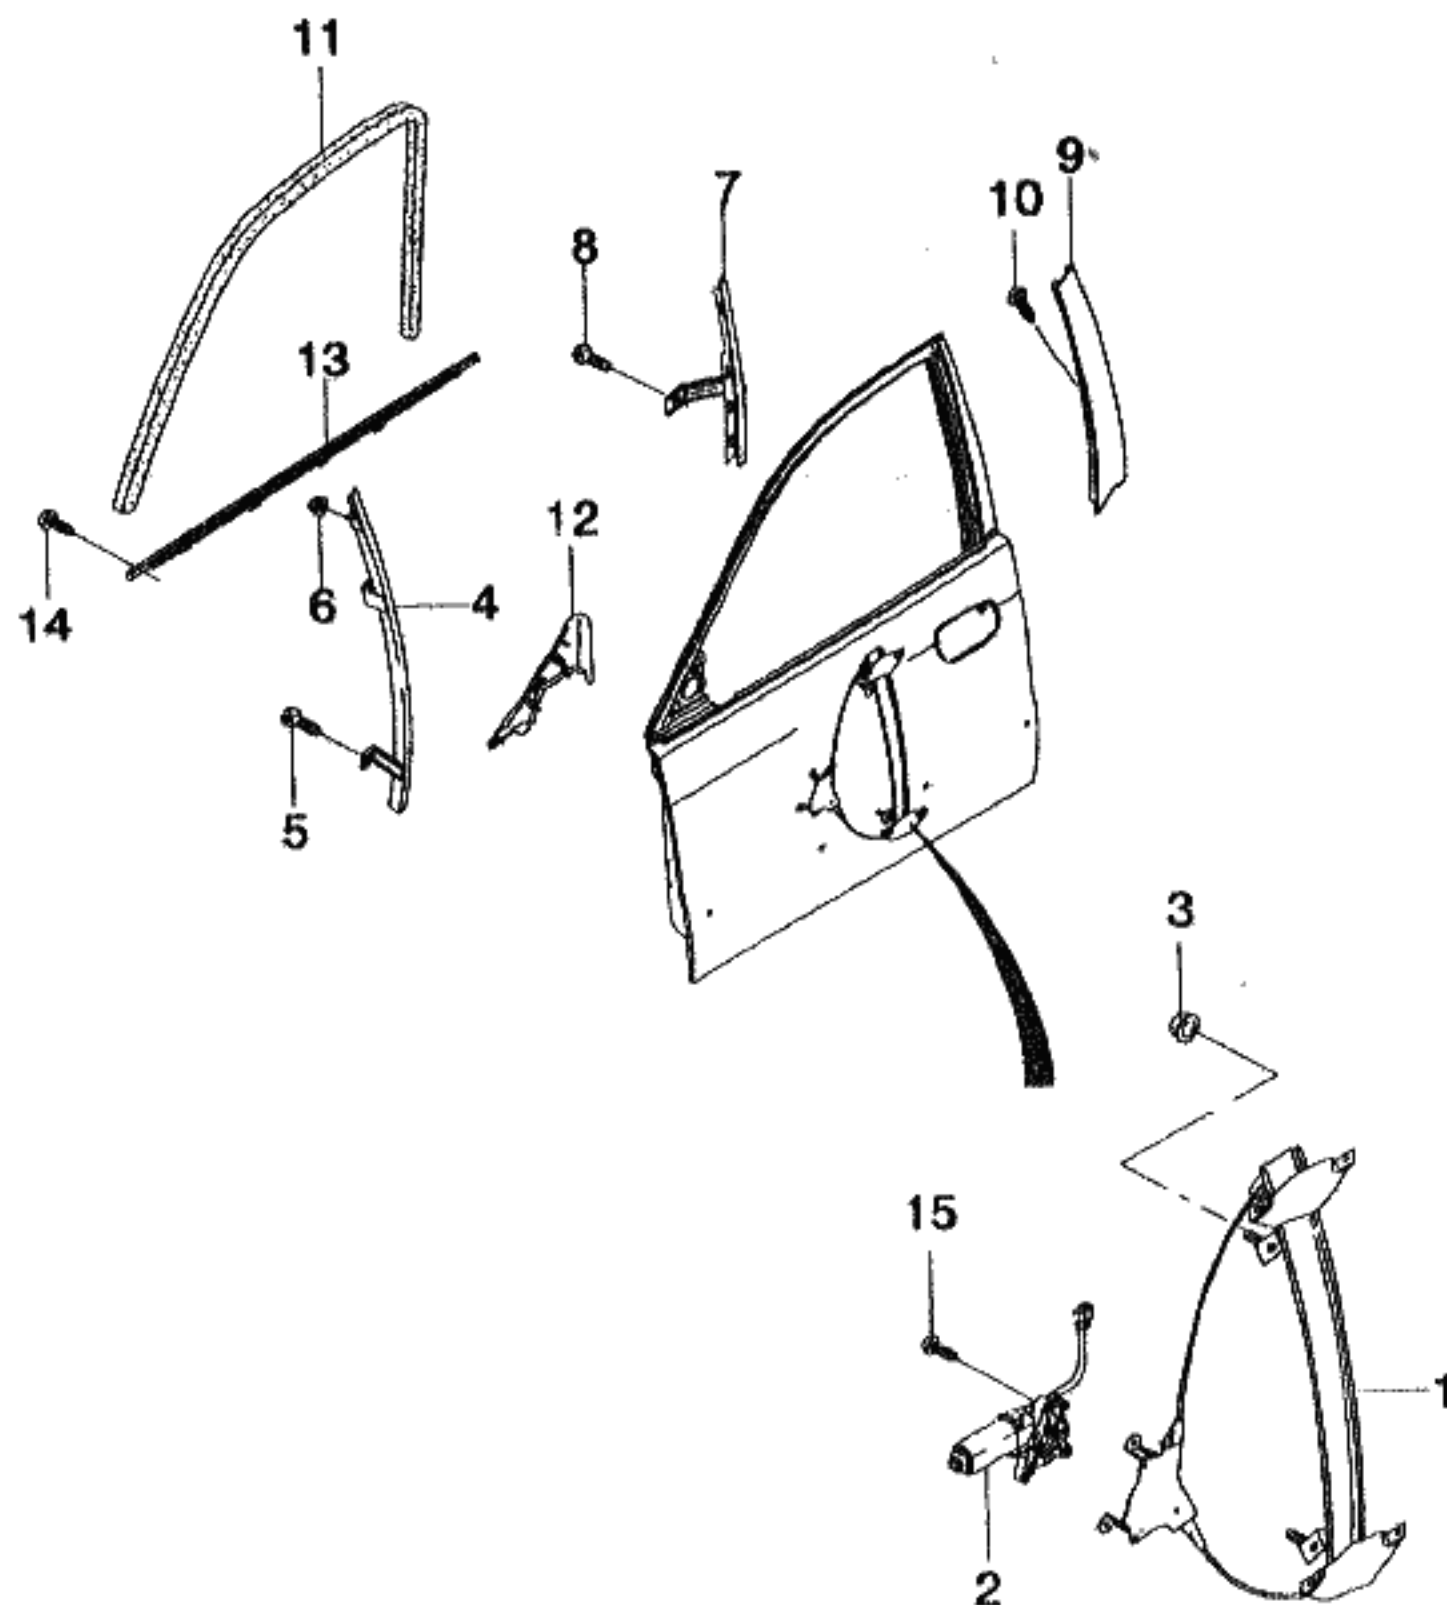

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96205229	.	S	S		LH	1				
	96205230	.	S	S		RH	1				
	[10]		(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO				
	09136-04010	.	S	S			6				
	[11]		(E)GLASS RUN-DOOR,FR (D)RILLE,SCHEIBE,ABLAUF				(F)RAINURE-CHEMIN DE GLACE (S)CANAL-CORRIDA DE VIDRIO				
	96205236	.	S	S		LH	1				
	96205237	.	S	S		RH	1				
	[12]		(E)COVER A-WINDOW FRAME,INR (D)DECKEL				(F)COUVERTURE (S)CUBIERTA				
	96205709	.	S	.	&DM0/DM6	LH	1				
	96205711	.	O	S	&DM7/DP0	LH	1				
	96205710	.	S	.	&DM0/DM6	RH	1				
	96205712	.	O	S	&DM7/DP0	RH	1				
	[13]		(E)WEATHERSTRIP A-DOOR,FR (D)DICHTUNGSLEISTE				(F)ISOLATION EN BANDELETTE (S)BURLETE				
	96225053	.	S	S		LH	1				
	96225054	.	S	S		RH	1				
	[14]		(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO				
	09136-04010	.	S	S			2				
	[15]		(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO				
	96227795	.	S	S			6				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


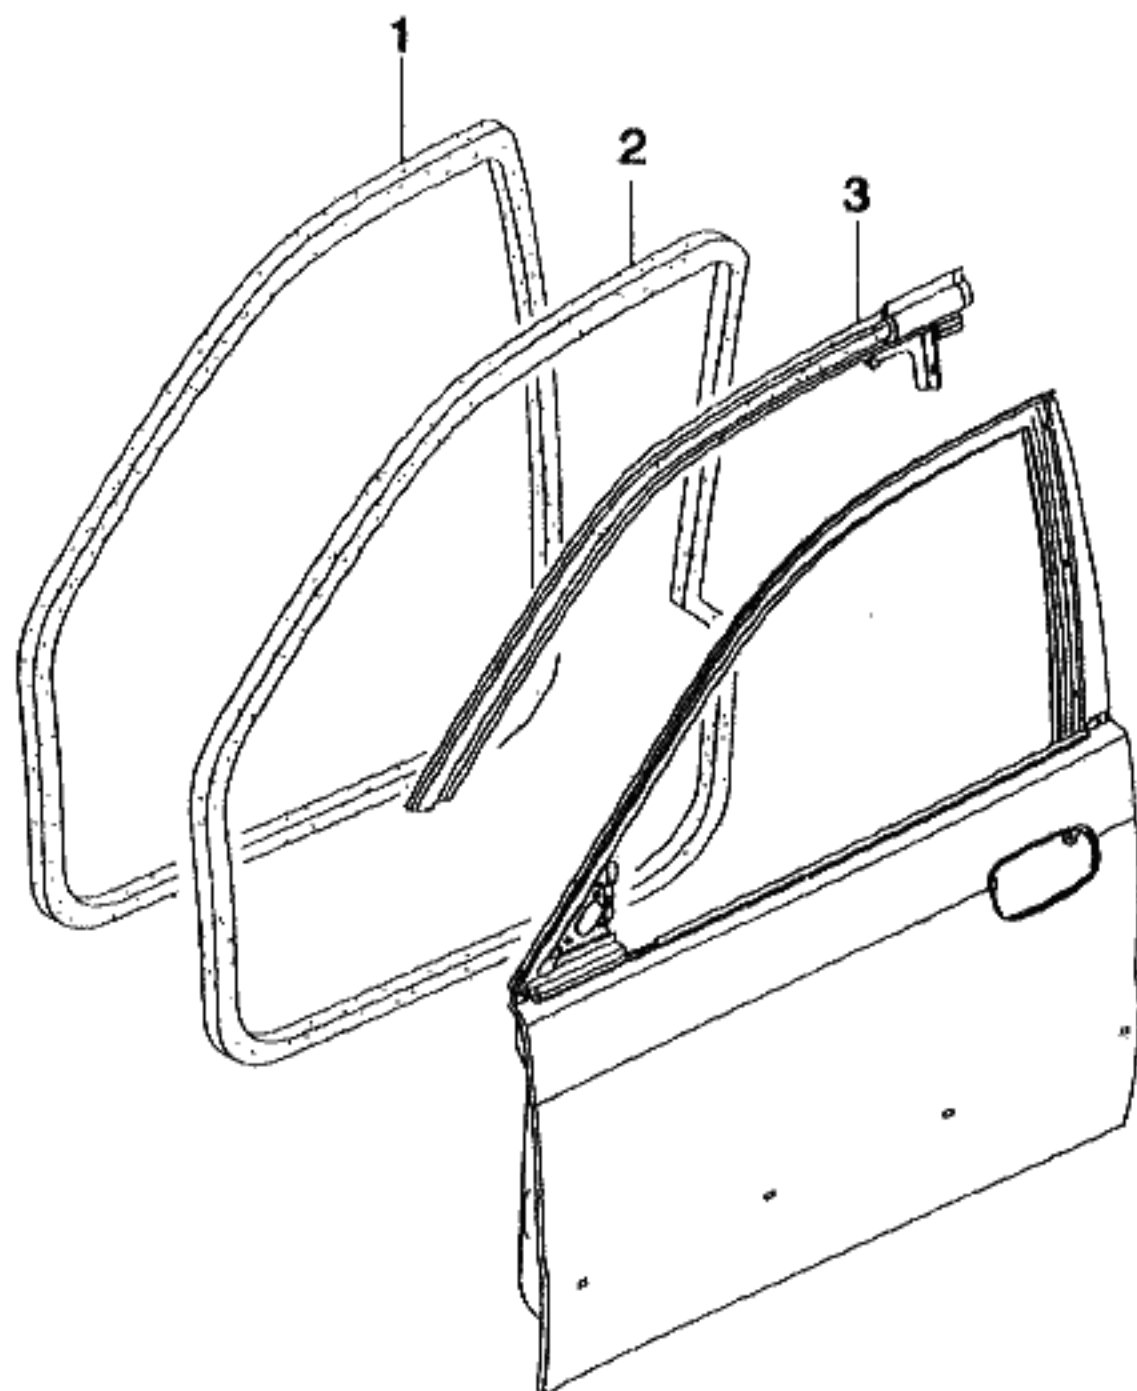


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)WEATHERSTRIP A-OPG FR				(F)ISOLATION EN BANDELETTE					
	96241031	(D)DICHTUNGSLEISTE				(S)BURLETE					
			S	S	&821.	LH 1					
	96241033		S	S	&821.	RH 1					
	[02]	(E)WEATHERSTRIP A-FRONT DOOR				(F)ISOLATION EN BANDELETTE					
	96205252	(D)DICHTUNGSLEISTE				(S)BURLETE					
			S	S		LH 1					
	96205253		S	S		RH 1					
	[03]	(E)WEATHERSTRIP A-FRM DR FR				(F)ISOLATION EN BANDELETTE					
	96205224	(D)DICHTUNGSLEISTE,VORDERTÜR				(S)BURLETE-PUERTA					
			S	S		LH 1					
	96205225		S	S		RH 1					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A = COMMON					

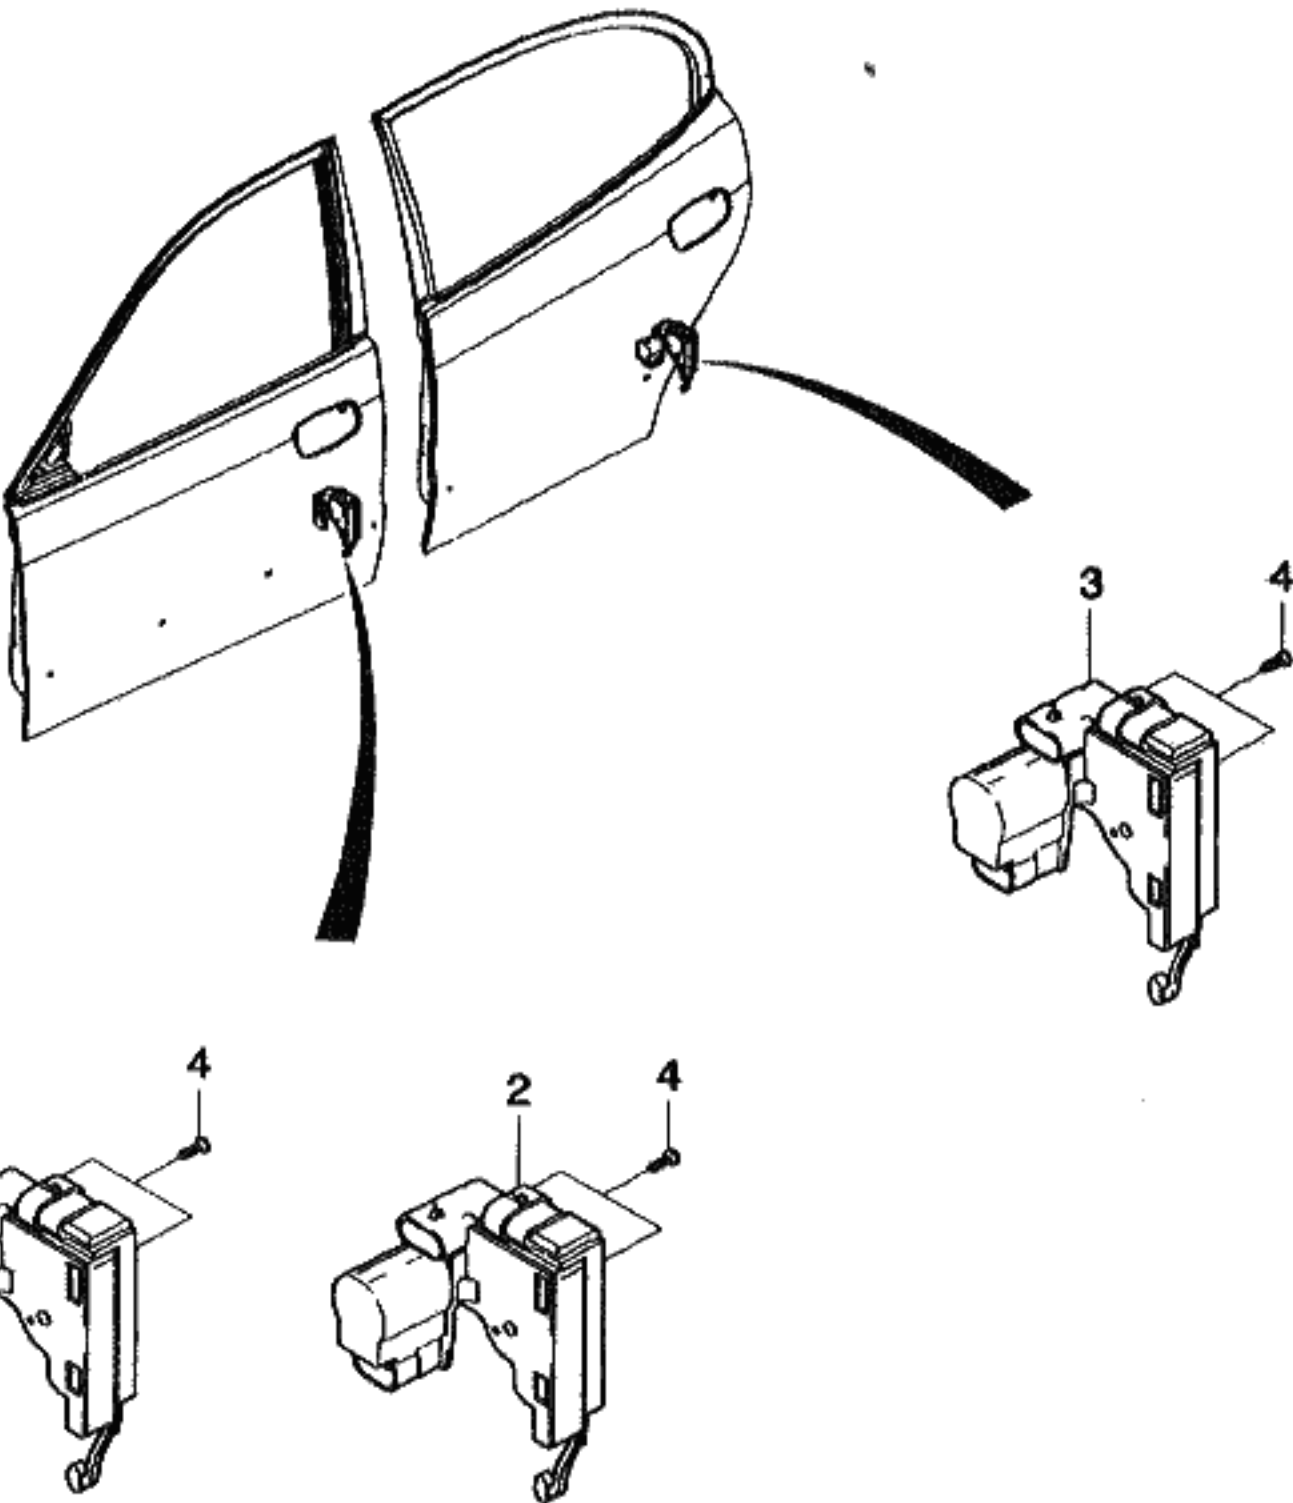


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SWITCH	A-CENTRAL LOCK			(F)COMMUTATEUR					
	96252093	(D)SCHALTER				(S)INTERRUPTOR					
	96252101	. S S	-CAL.			LH 1					
		. O O	&ATP/CAL.			LH 1					
	[02]	(E)ACTUATOR A-DOOR				(F)ACTIONNEUR					
	96252098	(D)BETÄTIGUNG				(S)ACTUADOR					
	96252104	. S S	-CAL.			RH 1					
		. O O	&ATP/CAL.			RH 1					
	[03]	(E)ACTUATOR A-DOOR				(F)ACTIONNEUR					
	96252097	(D)BETÄTIGUNG				(S)ACTUADOR					
	96252098	. S S				LH 1					
		. S S				RH 1					
	[04]	(E)SCREW				(F)VIS					
	07-2012-0011	(D)SCHRAUBE				(S)TORNILLO					
		. S S				8					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


6310 REAR DOOR PANEL

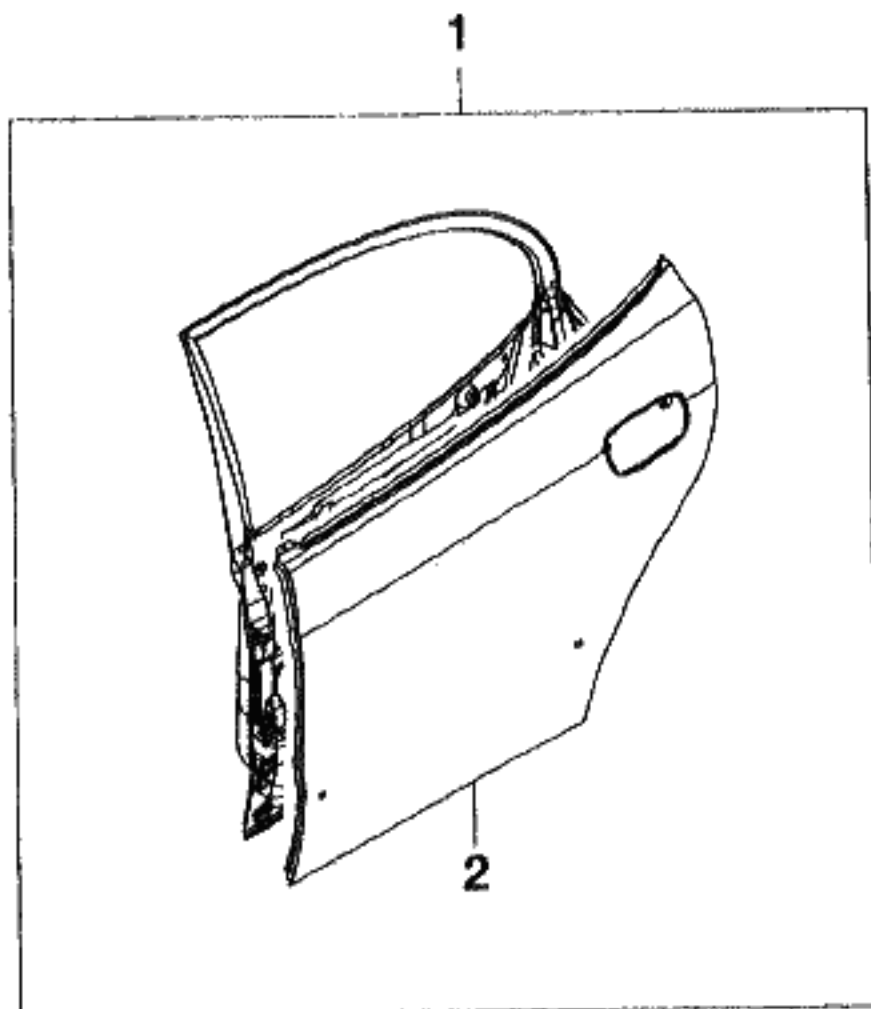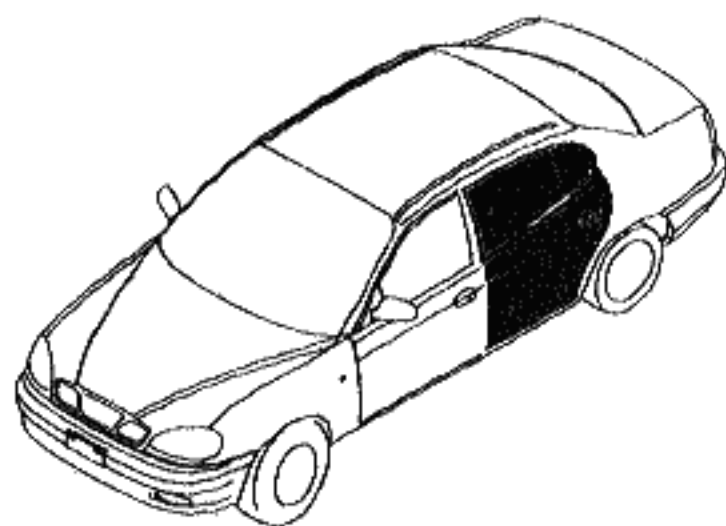


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)PANEL A-DOOR,RR (D)VERKLEIDUNG C,SEITE						(F)PANNEAU C-COTE (S)PANEL C-LADO				
	A96253047	S	S	&XCK.				LH 1				
	A96226668	A	A	&XCP.				LH 1				
	A96253048	S	S	&XCK.				RH 1				
	A96226669	A	A	&XCP.				RH 1				
	[02]	(E)PANEL-DOOR,RR OTR (D)VERKLEIDUNG,HINTERTÜR						(F)PANNEAU-PORTE ARRIERE (S)PANEL-PUERTA TRASERA				
	A96226634	S	S	&XCP.				LH 1				
	A96226635	S	S	&XCP.				RH 1				
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

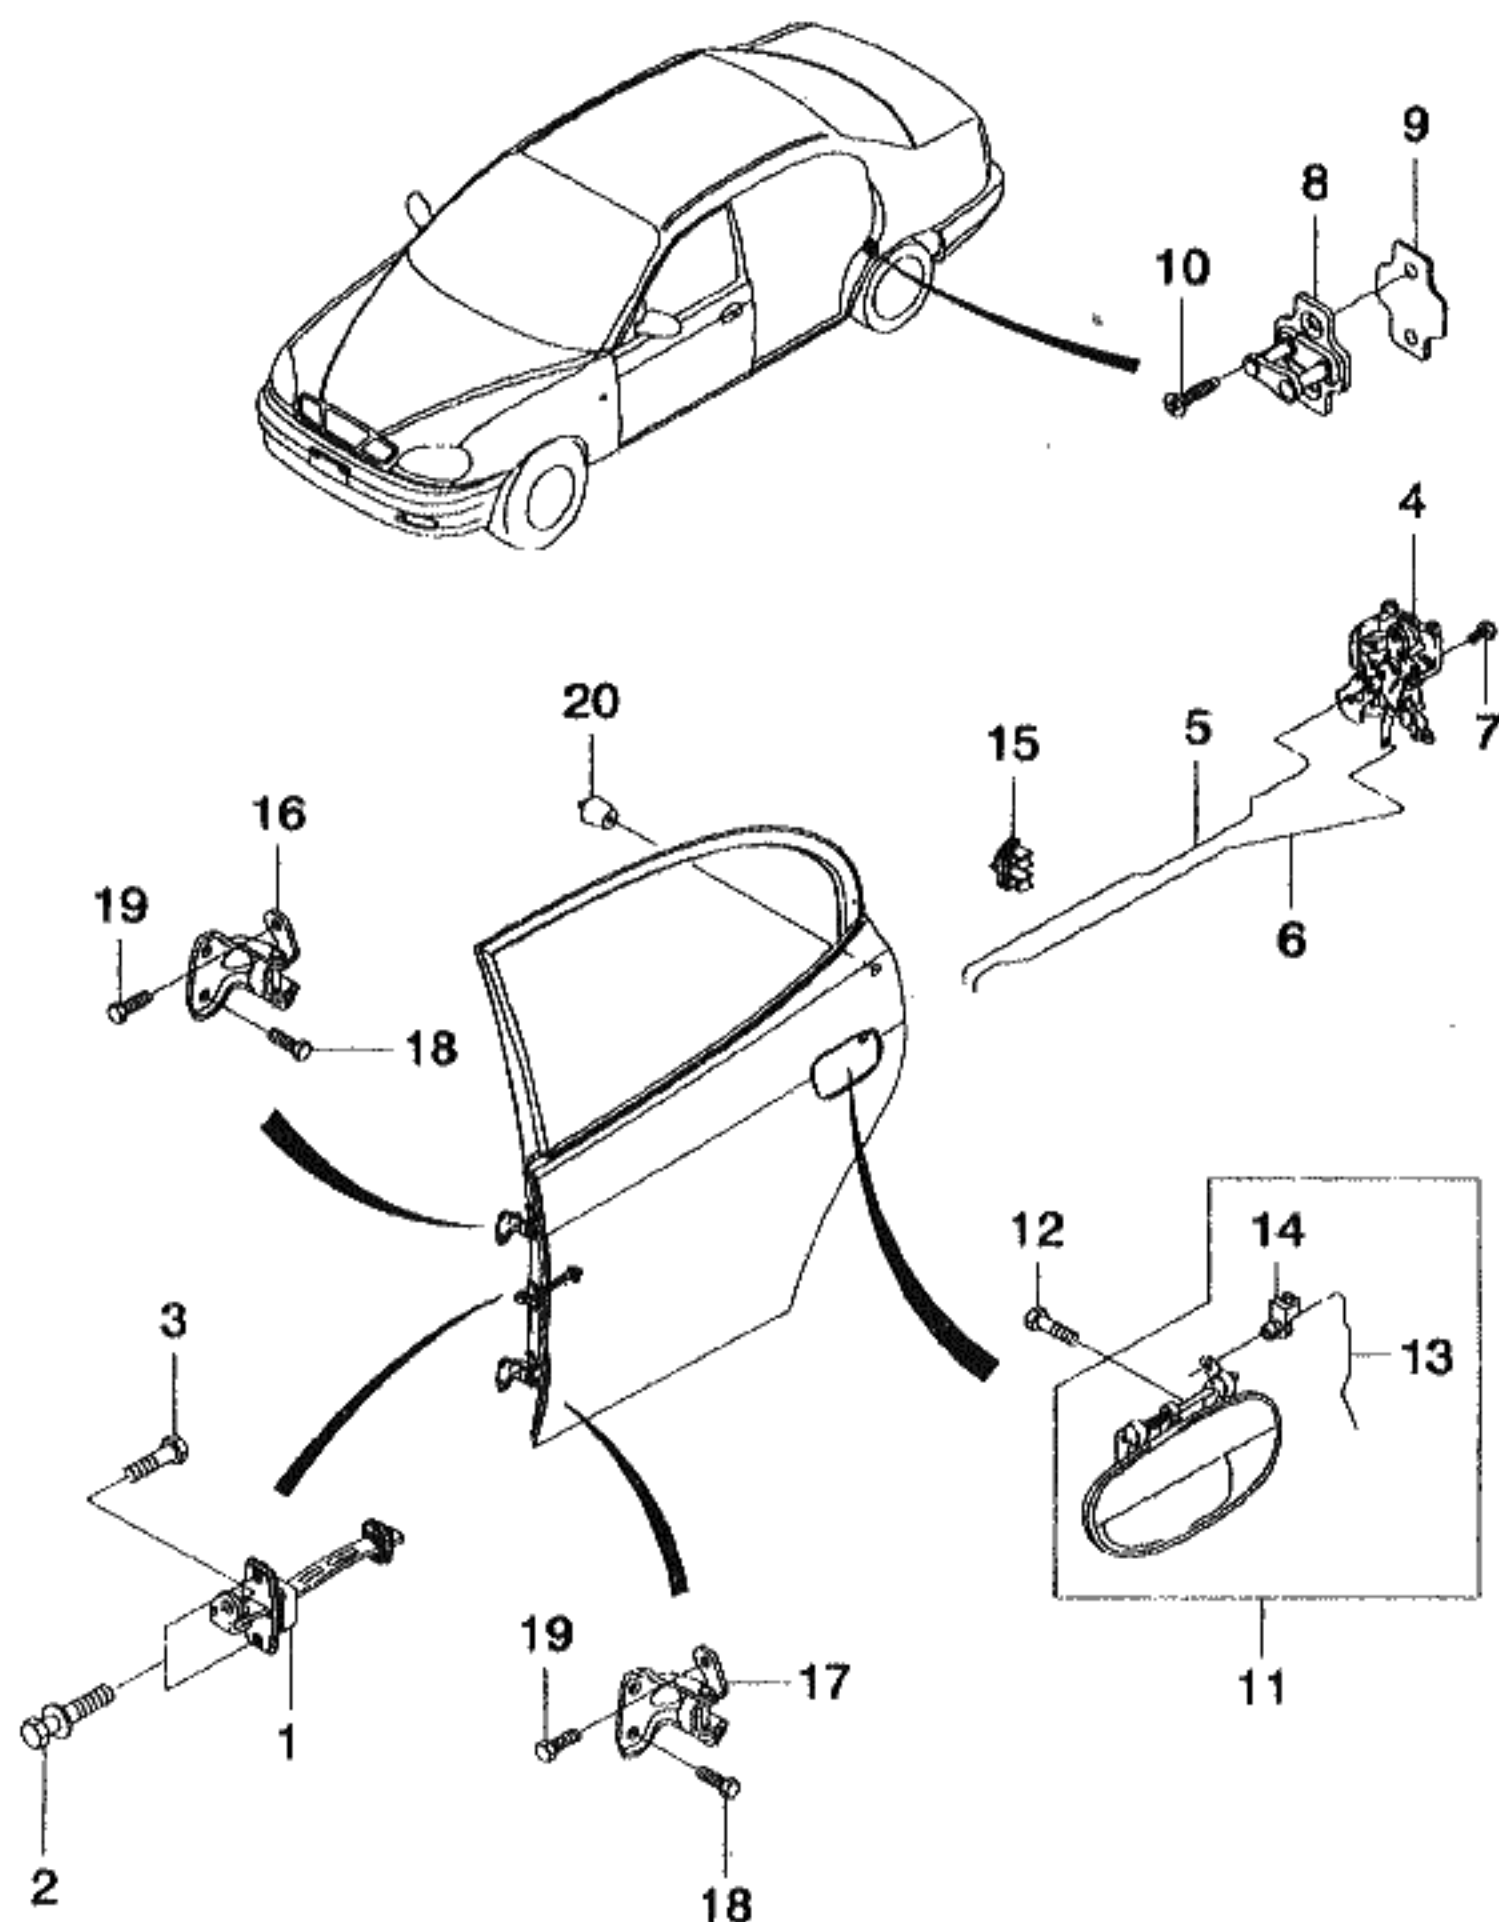


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]				(E)CHECK A-DOOR,RR (D)TÜR-PRÜF					(F)ARRET-PORTE (S)PUERTA DE VERIFICAR	
96251669			S S						LH 1	
96251670			S S						RH 1	
[02]				(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO	
01117-06165			S S						4	
[03]				(E)BOLT-W/WASHER (D)SCHRAUBE					(F)BOULON (S)PERNO	
09118-08010			S S						2	
[04]				(E)LATCH A-DOOR,RR (D)VERSCHLÜß,HINTERTÜR					(F)LOQUET-PORTE ARRIERE (S)PESTILLO-PUERTA TRASERA	
96225001			S S						LH 1	
96225002			S S						RH 1	
[05]				(E)ROD-DOOR HANDLE,RR INSID (D)STAB					(F)TRINGLE (S)VARILLA	
96205645			S S						LH 1	
96205646			S S						RH 1	
[06]				(E)ROD-DOOR LOCKING,RR (D)STAB,TÜRVERRIEGELUNG					(F)TRINGLE (S)VARILLA-CIERRE DE PUERTA	
96205632			S S						LH 1	
96205633			S S						RH 1	
[07]				(E)SCREW-CR MACHINE (D)SCHRAUBE					(F)VIS (S)TORNILLO	
09125-06002			S S						6	
[08]				(E)STRIKER A-DOOR (D)SCHLÄGER					(F)MARTEAU (S)HUELGUISTA	
96301668			S S						2	
[09]				(E)WASHER-DISTANCE (D)DICHTUNGSRING,DISTANZ					(F)RONDELLE-DISTANCE (S)ARANDELA-DISTANCIA	
LEVEL					T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

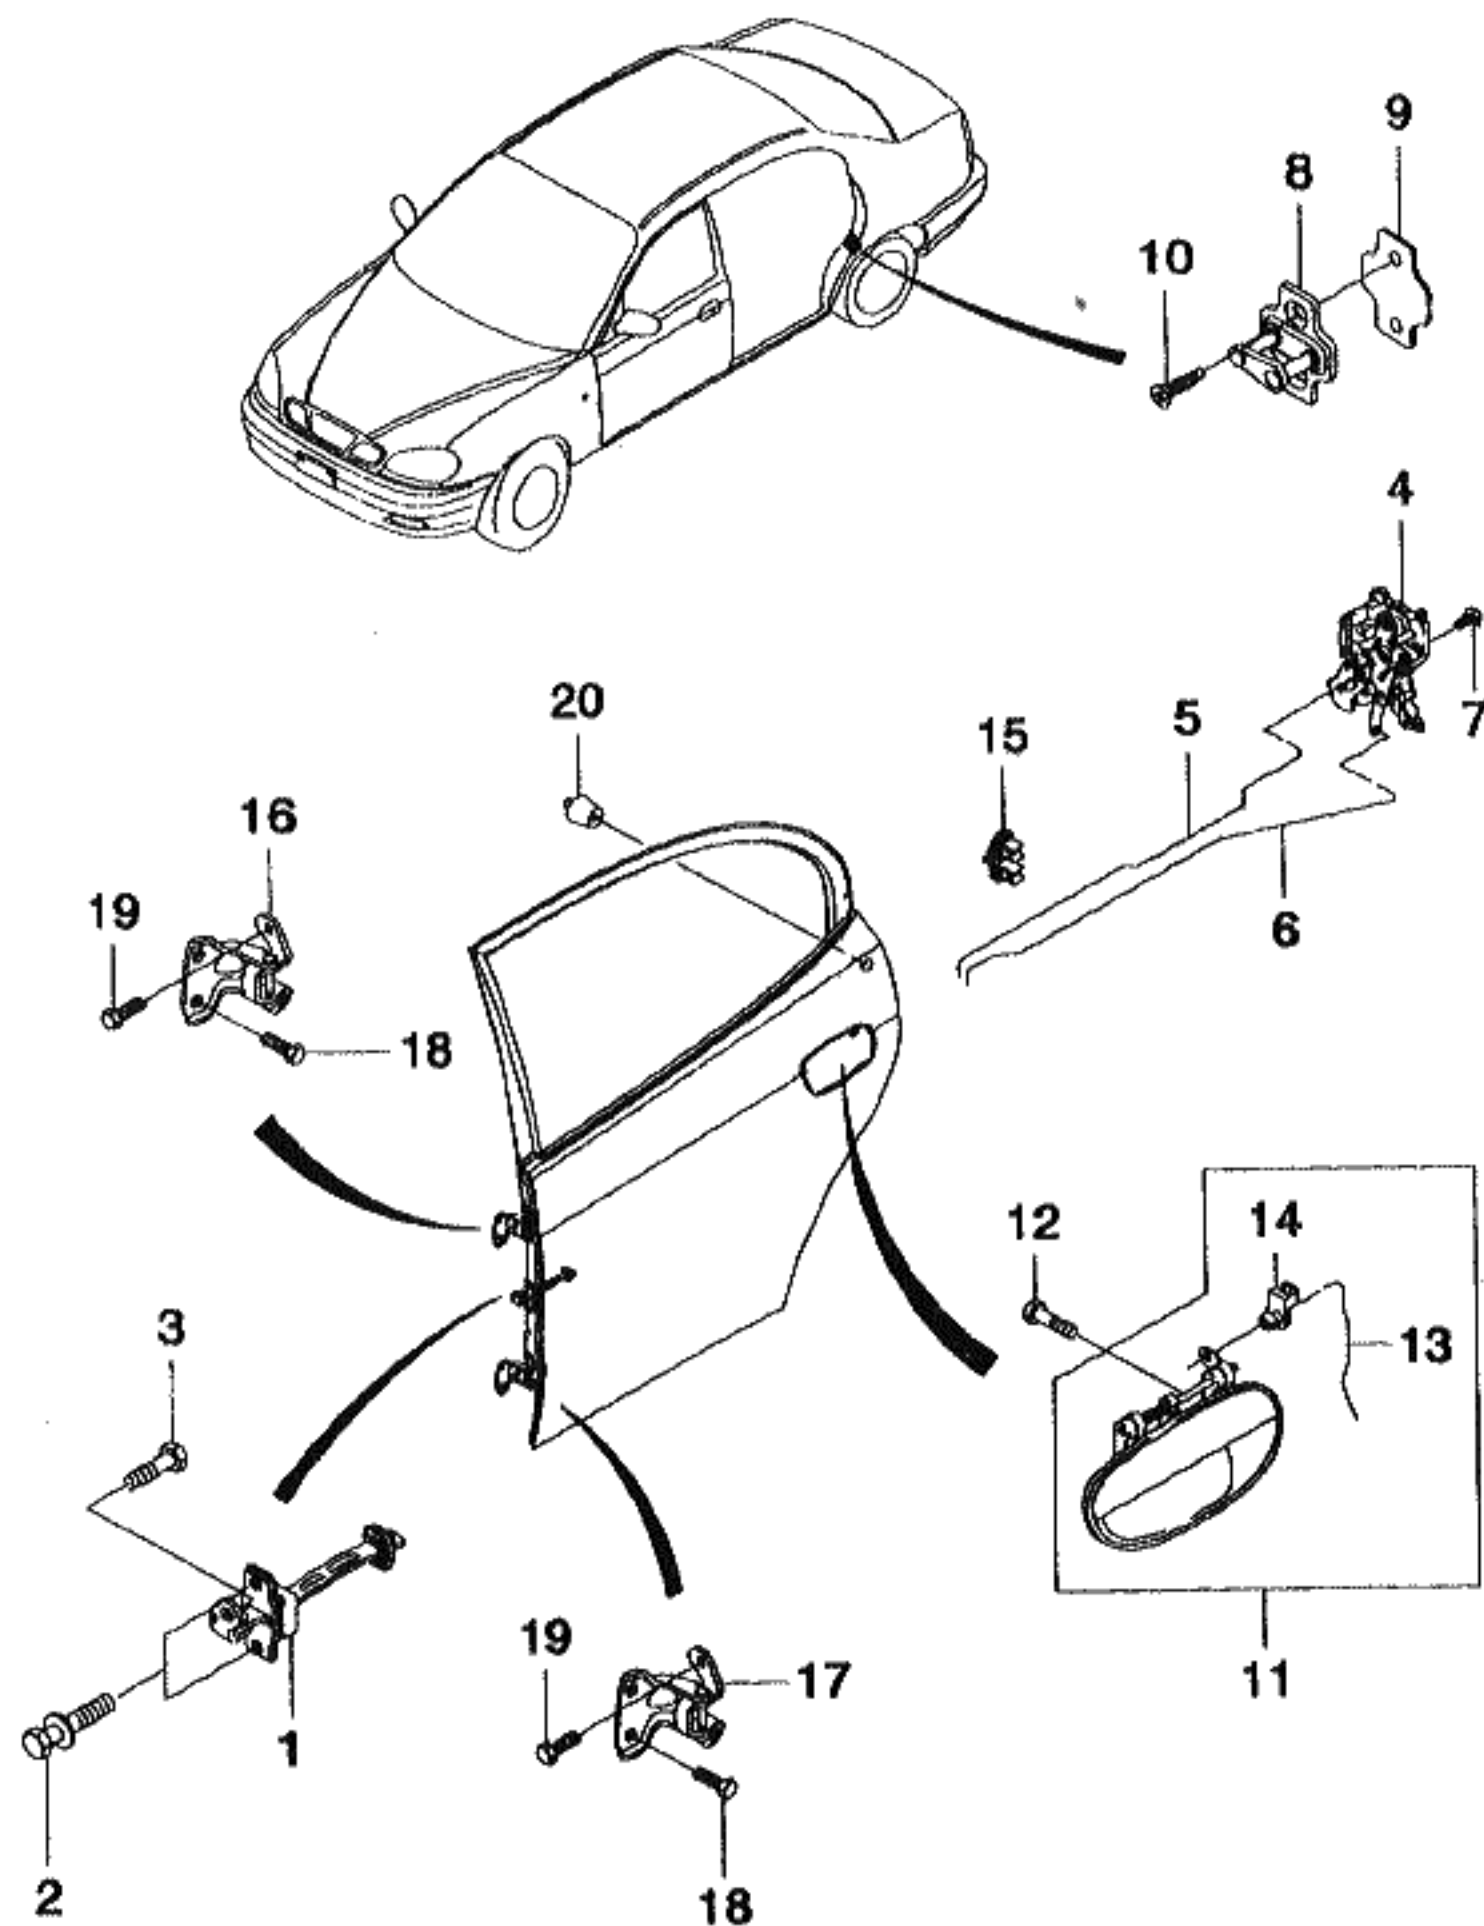


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96216377	.	S	S			2				
	[10]		(E)SCREW-MACHINE				(F)VIS				
	09126-08003	.	S	S			4				
	[11]		(E)HANDLE A-DOOR,RR O/SIDE				(F)POIGNEE-EXTERIEURE PORTE				
			(D)HENKEL TÜR,AUßEN				(S)MANIJA-EXTERNA PUERTA				
	96205637	.	S	S			LH 1				
	96205638	.	S	S			RH 1				
	[12]		(E)BOLT-HEXAGON				(F)BOULON				
			(D)SCHRAUBE				(S)PERNO				
	01114-06123	.	S	S			4				
	[13]		(E)ROD-DOOR HANDLE,RR O/S				(F)TRINGLE				
			(D)STAB				(S)VARILLA				
	96205643	.	S	S			2				
	[14]		(E)CLAMP-DOOR HANDLE,RR				(F)PINCE				
			(D)KLAMMER				(S)ABRAZADERA				
	09403-04301	.	S	S			2				
	[15]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	09408-00021	.	S	S			2				
	[16]		(E)HINGE A-DOOR,RR				(F)CHARNIERE-PORTE ARRIERE				
			(D)BESCHLAG,HINTERTÜR				(S)BISAGRA-PUERTA				
	96229581	.	S	S			2				
	[17]		(E)HINGE A-DOOR,RR				(F)CHARNIERE-PORTE ARRIERE				
			(D)BESCHLAG,HINTERTÜR				(S)BISAGRA-PUERTA				
	96229582	.	S	S			2				
	[18]		(E)BOLT-FLANGE				(F)BOULON				
			(D)SCHRAUBE				(S)PERNO				
	09103-08022	.	S	S			8		970803		
	O 09118-08008	.	S	S			8		970804		
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

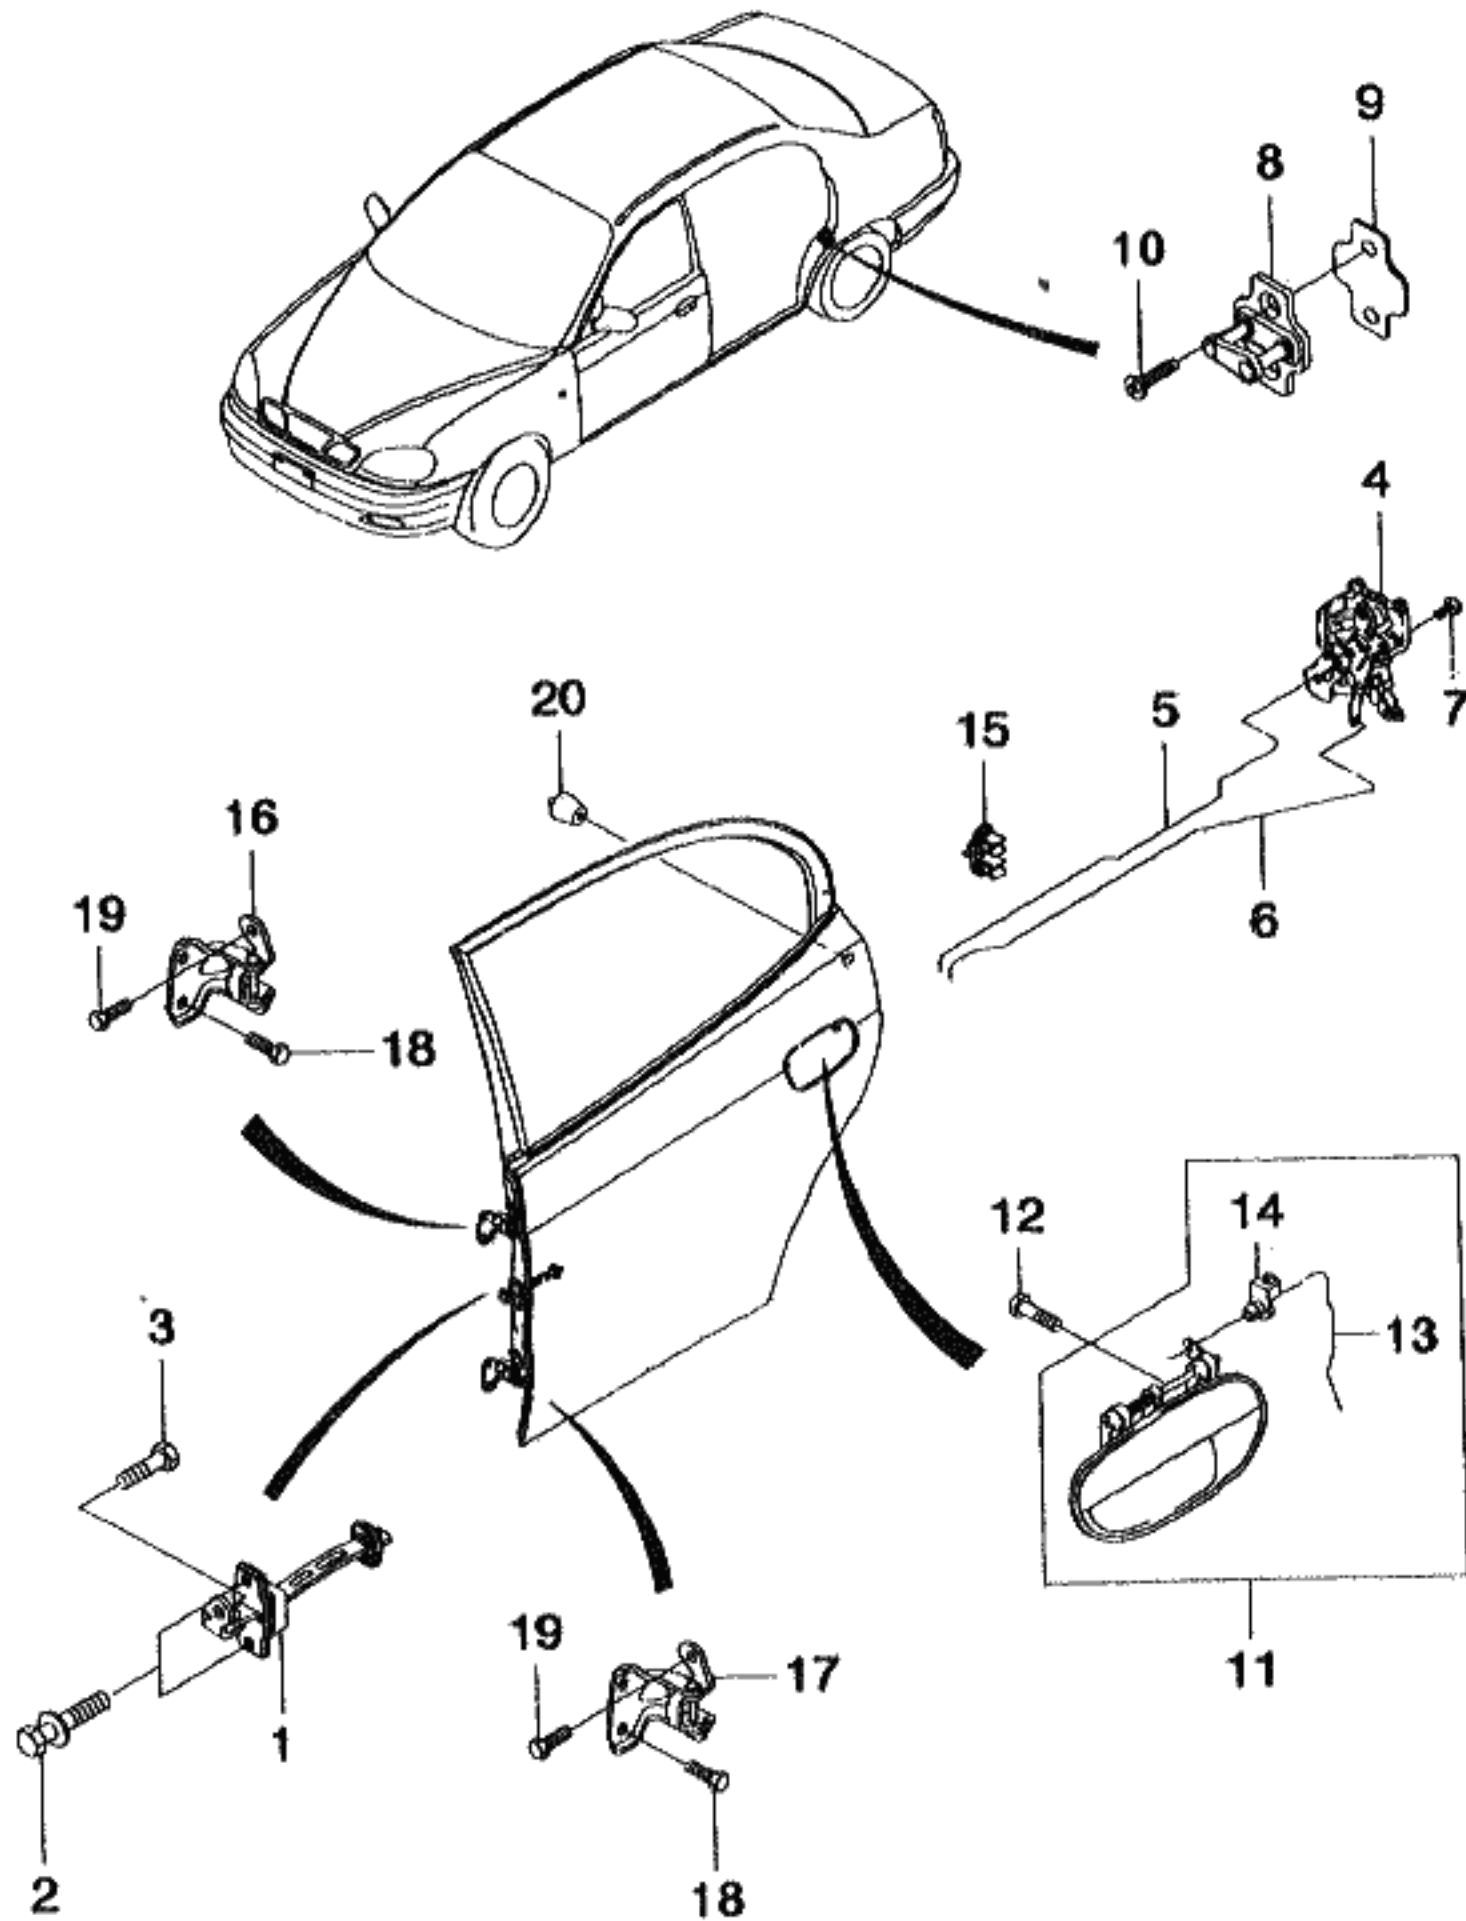


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[19] 09103-08016	(E)BOLT-FLANGE (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 8					
	[20] 09321-08001	(E)BUMPER-DOOR RR UPPER (D)STOBSTANGE . S S					(F)PARE-CHOC (S)PARACHOQUES 2					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

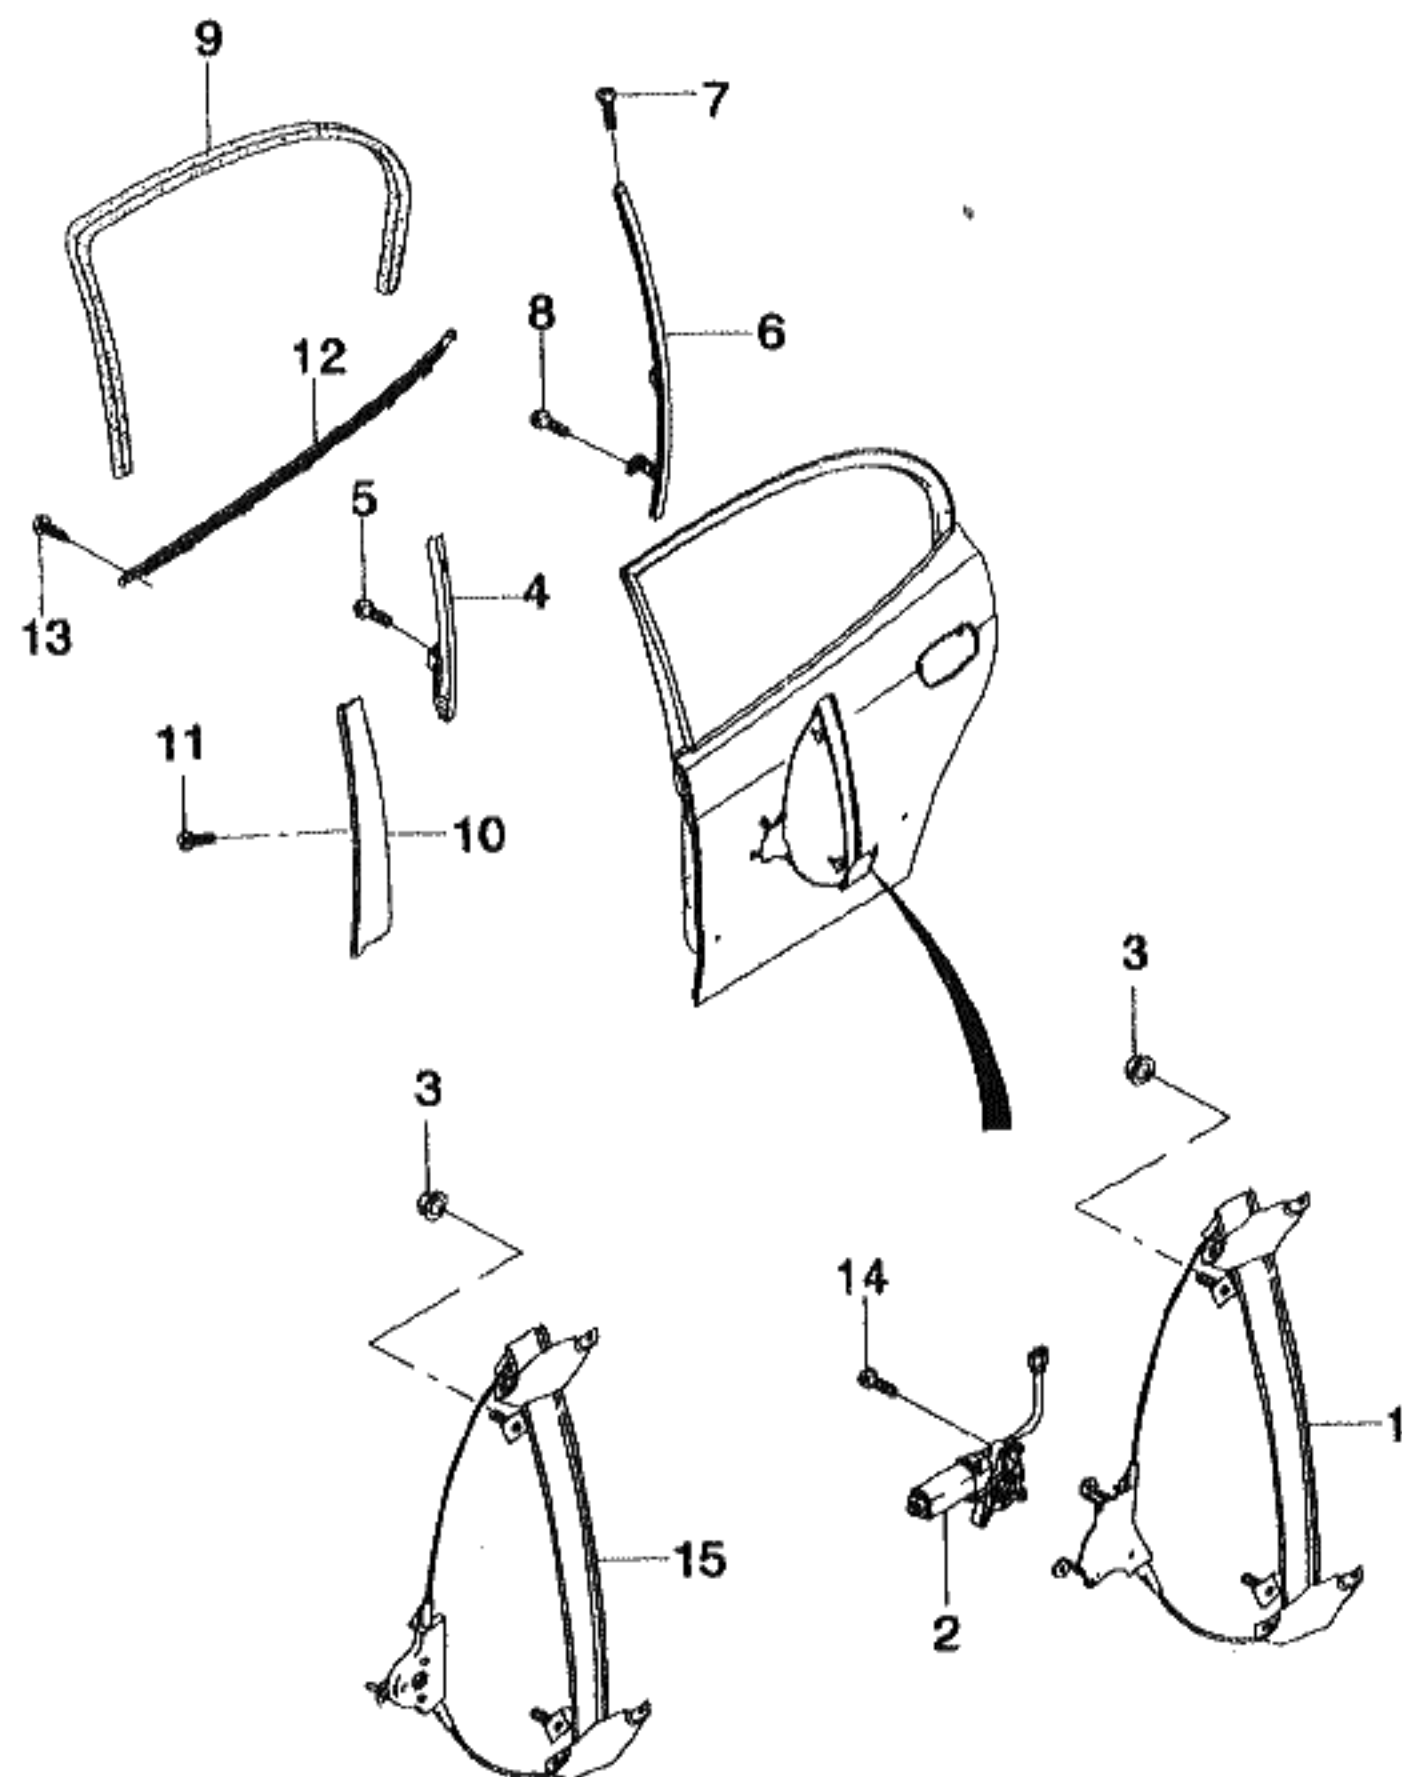


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)REGULATOR-DOOR WINDOW,RR (D)REGULATOR				(F)REGULATEUR (S)REGULATOR					
	96252767	. O S		&A66.		LH 1					
	96252768	. O S		&A66.		RH 1					
	[02]	(E)MOTOR A-POWER WINDOW (D)MOTOR,FENSTERSCHEIBE				(F)MOTEUR (S)MOTOR-VENTANA ELECTRICA					
	96206767	. O S		&A66.		LH 1					TR
	96206768	. O S		&A66.		RH 1					TS
	[03]	(E)NUT-FLANGE (D)MUTTER				(F)ECROU (S)TUERCA					
	08316-25063	. S .		&A32.		12					
	08316-25063	. O S		&A66.		14					
	[04]	(E)RAIL A-GUIDE RR DOOR,FR (D)SCHIENE,FÜHRUNG				(F)RAIL-GUIDE (S)RIEL-GUIA					
	96205298	. S S				LH 1					
	96205299	. S S				RH 1					
	[05]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO					
	01517-06103	. S S				2					
	[06]	(E)BAR A-DIVISION DOOR RR (D)STANGE				(F)BARRE (S)BARRA					
	96205313	. S S				LH 1					
	96205314	. S S				RH 1					
	[07]	(E)SCREW-CR MACHINE (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	02124-04083	. S S				2					
	[08]	(E)BOLT-FLANGE (D)SCHRAUBE				(F)BOULON (S)PERNO					
	01517-06103	. S S				4					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

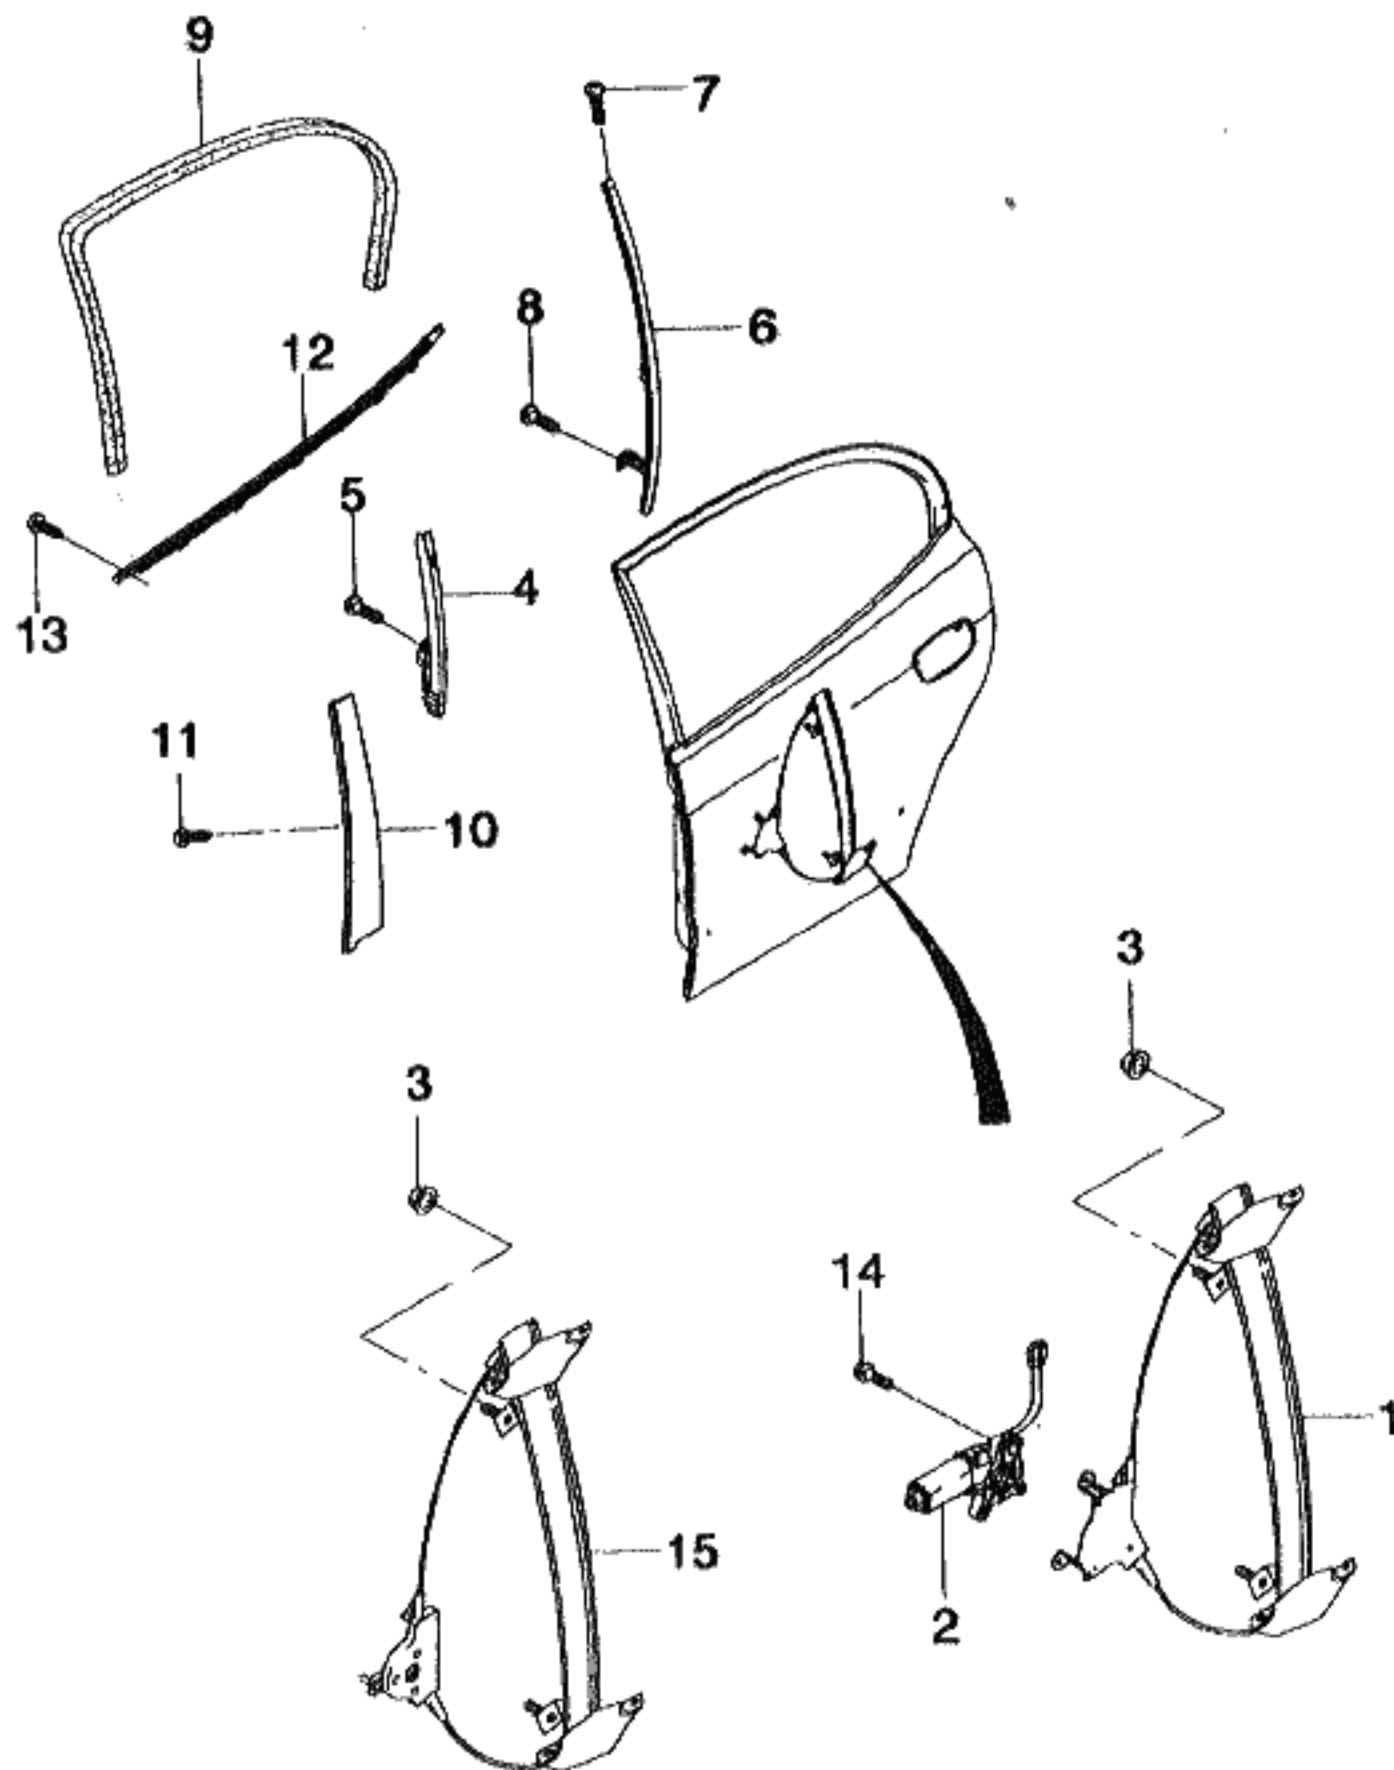

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[09]	(E)GLASS RUN-DOOR,RR (D)RILLE,SCHEIBE,ABLAUF						(F)RAINURE-CHEMIN DE GLACE (S)CANAL-CORRIDA DE VIDRIO			
	96205327		S	S				LH 1			
	96205328		S	S				RH 1			
	[10]	(E)GARNISH A-DOOR RR CENTER (D)VERZIERUNG						(F)GARNITURE (S)ORNAMENTO			
	96252769		S	S				LH 1			
	96252770		S	S				RH 1			
	[11]	(E)SCREW-TAPPING (D)SCHRAUBE						(F)VIS (S)TORNILLO			
	09136-04010		S	S				6			
	[12]	(E)WEATHERSTRIP A-DR RR OTR (D)DICHTUNGSLEISTE,HINTERTÜR						(F)ISOLATION EN BANDELETTE (S)BURLETE-PUERTA			
	96225057		S	S				LH 1			
	96225058		S	S				RH 1			
	[13]	(E)SCREW-TAPPING (D)SCHRAUBE						(F)VIS (S)TORNILLO			
	09136-04010		S	S				2			
	[14]	(E)SCREW-TAPPING (D)SCHRAUBE						(F)VIS (S)TORNILLO			
	96227795		O	S	&A66.			6			
	[15]	(E)REGULATOR-DR WINDOW,RR (D)REGULATOR						(F)REGULATEUR (S)REGULATOR			
	96205289		S	.	&A32.			LH 1			
	96205290		S	.	&A32.			RH 1			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

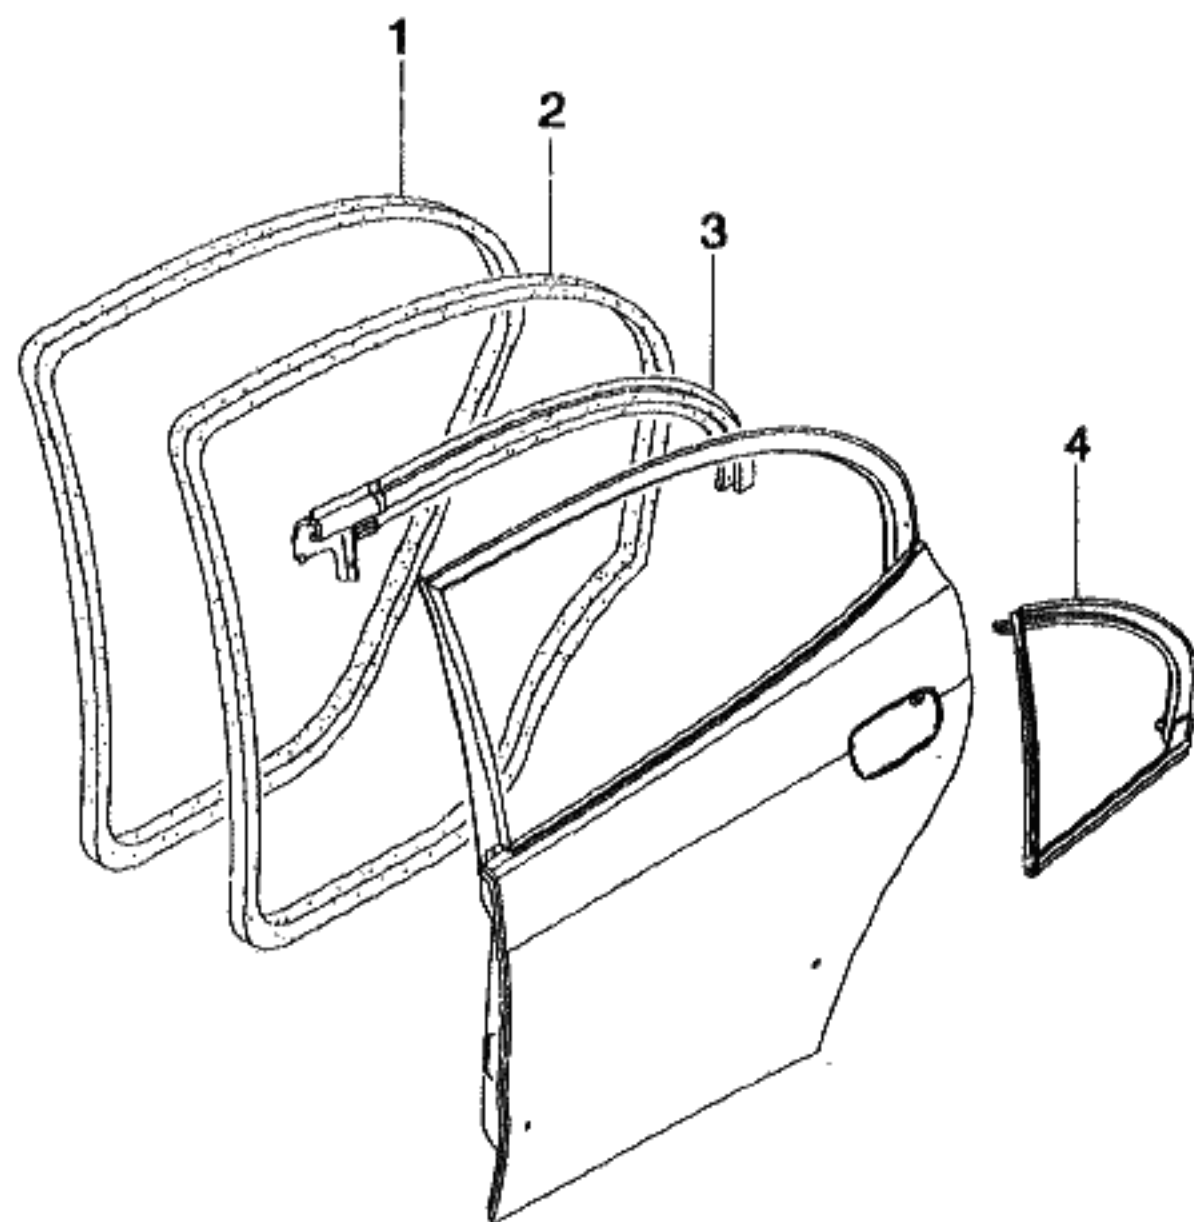


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)WEATHERSTRIP A-OPG RR (D)DICHTUNGSLEISTE				(F)ISOLATION EN BANDELETTE (S)BURLETE					
	96241035	.	S	S	&821.	LH	1				
	96241037	.	S	S	&821.	RH	1				
	[02]	(E)WEATHERSTRIP A-DOOR,RR (D)DICHTUNGSLEISTE,HINTERTÜR				(F)ISOLATION EN BANDELETTE (S)BURLETE-PUERTA					
	96205341	.	S	S		LH	1				
	96205342	.	S	S		RH	1				
	[03]	(E)WEATHERSTRIP A-FRM DR RR (D)DICHTUNGSLEISTE,HINTERTÜR				(F)ISOLATION EN BANDELETTE (S)BURLETE-PUERTA					
	96205304	.	S	S		LH	1				
	96205305	.	S	S		RH	1				
	[04]	(E)WEATHERSTRIP-FIXED GLASS (D)DICHTUNGSLEISTE				(F)ISOLATION EN BANDELETTE (S)BURLETE					
	96205310	.	S	S		LH	1				
	96205311	.	S	S		RH	1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

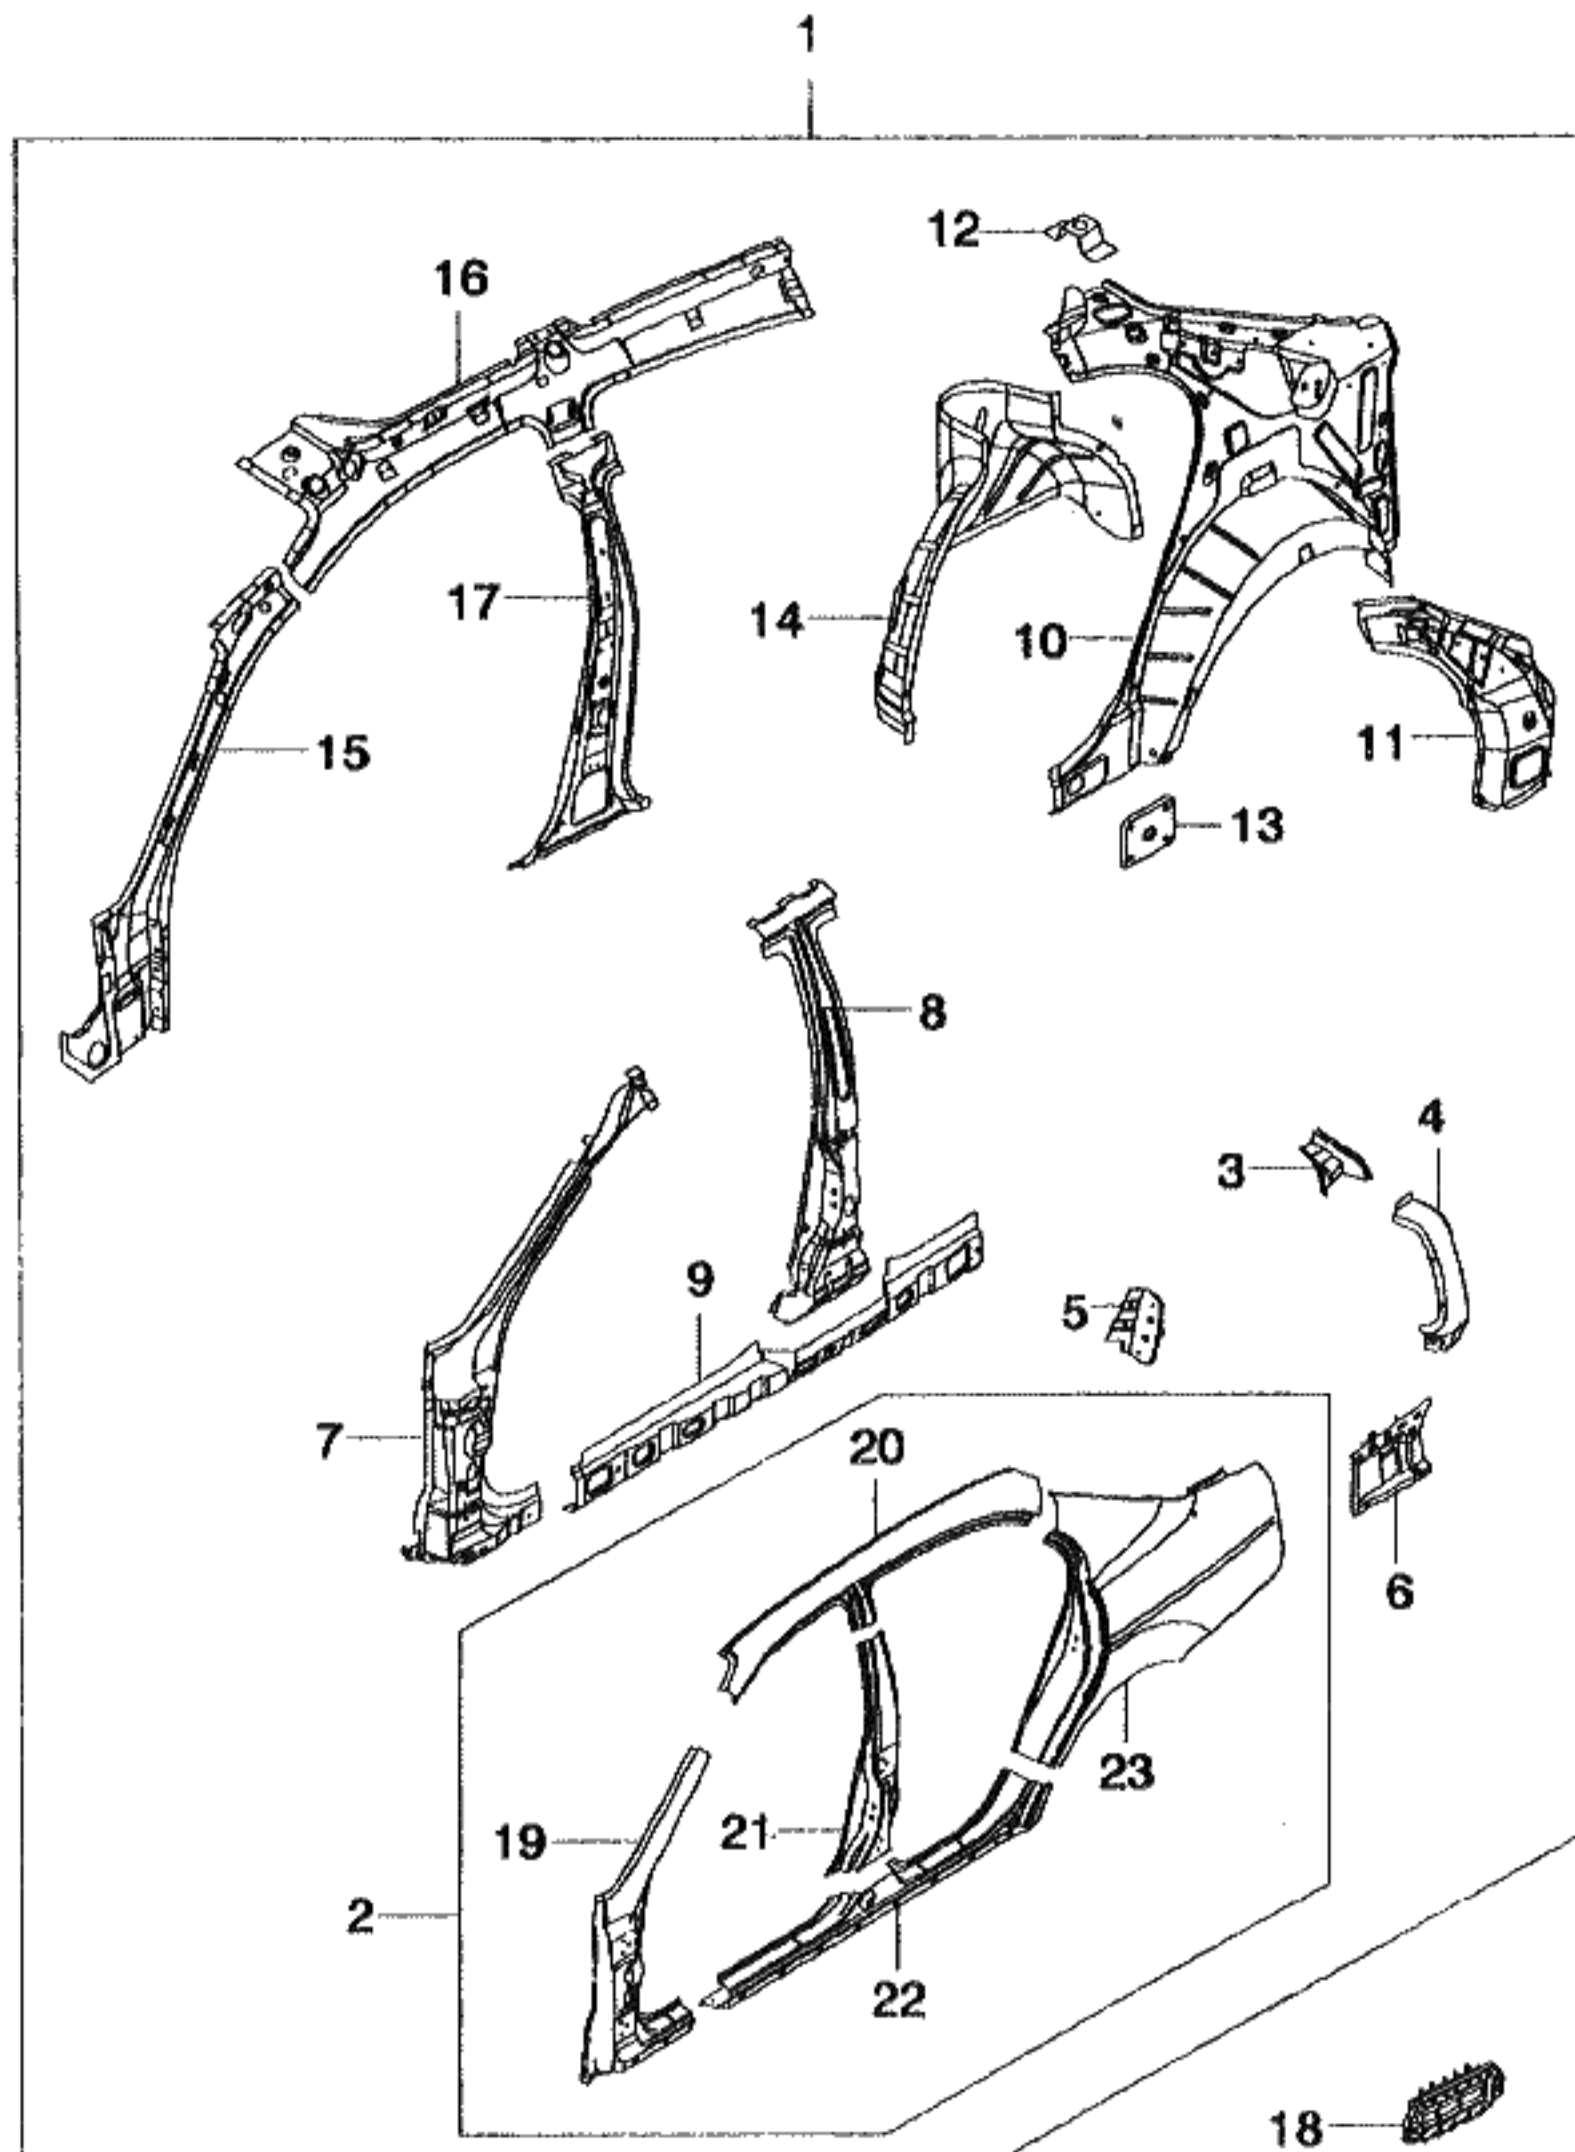

KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]				(E) PANEL A-SIDE (D) VERKLEIDUNG, SEITE, AUßEN					(F) PANNEAU-COTE EXTERNE (S) PANEL-LADO EXTERNO	
A96241071			S S						LH 1	
A96241072			S S						RH 1	
[02]				(E) PANEL-SIDE OUTER (D) VERKLEIDUNG, SEITE, AUßEN					(F) PANNEAU-COTE EXTERNE (S) PANEL-LADO EXTERNO	
A96227865			S S						LH 1	
A96227866			S S						RH 1	
[03]				(E) GUSSET-PANEL SIDE OUTER (D) ECKBLECH					(F) GOUSSET-PANNEAU DE COTE (S) ANGULAR-PANEL DEL LADO	
96216551			S S						LH 1	
96216552			S S						RH 1	
[04]				(E) PATCH-TAIL LAMP HOUSING (D) TEIL-GEHÄUSE					(F) PIECE-LOGEMENT (S) PIEZA-CARCASA	
96227869			S S						LH 1	
96227870			S S						RH 1	
[05]				(E) REINF A-LOCK PILLAR, RR (D) VERSTÄRKUNG					(F) RENFORCEMENT (S) REFUERZO	
96206141			S S						LH 1	
96206142			S S						RH 1	
[06]				(E) PANEL-SIDE OUTER LOWER (D) VERKLEIDUNG, SEITE, AUßEN					(F) PANNEAU-COTE EXTERNE (S) PANEL-LADO EXTERNO	
96216568			S S						LH 1	
96216562			S S						RH 1	
[07]				(E) REINFORCEMENT A-PILLAR FR (D) VERSTÄRKUNG					(F) RENFORCEMENT (S) REFUERZO	
96227875			S S						LH 1	
96227876			S S						RH 1	
[08]				(E) REINFORCEMENT-PILLAR CTR (D) VERSTÄRKUNG, ZENTRAL-SÄULE					(F) RENFORCEMENT (S) REFUERZO-PILAR DEL CENTRO	
LEVEL					T/A (TRANSAXLE)					
S X = 2.0 SOHC					M = MANUAL T/A					
CDX = 2.0 DOHC					A = AUTOMATIC T/A					
					. = COMMON					


6410 SIDE BODY PANEL

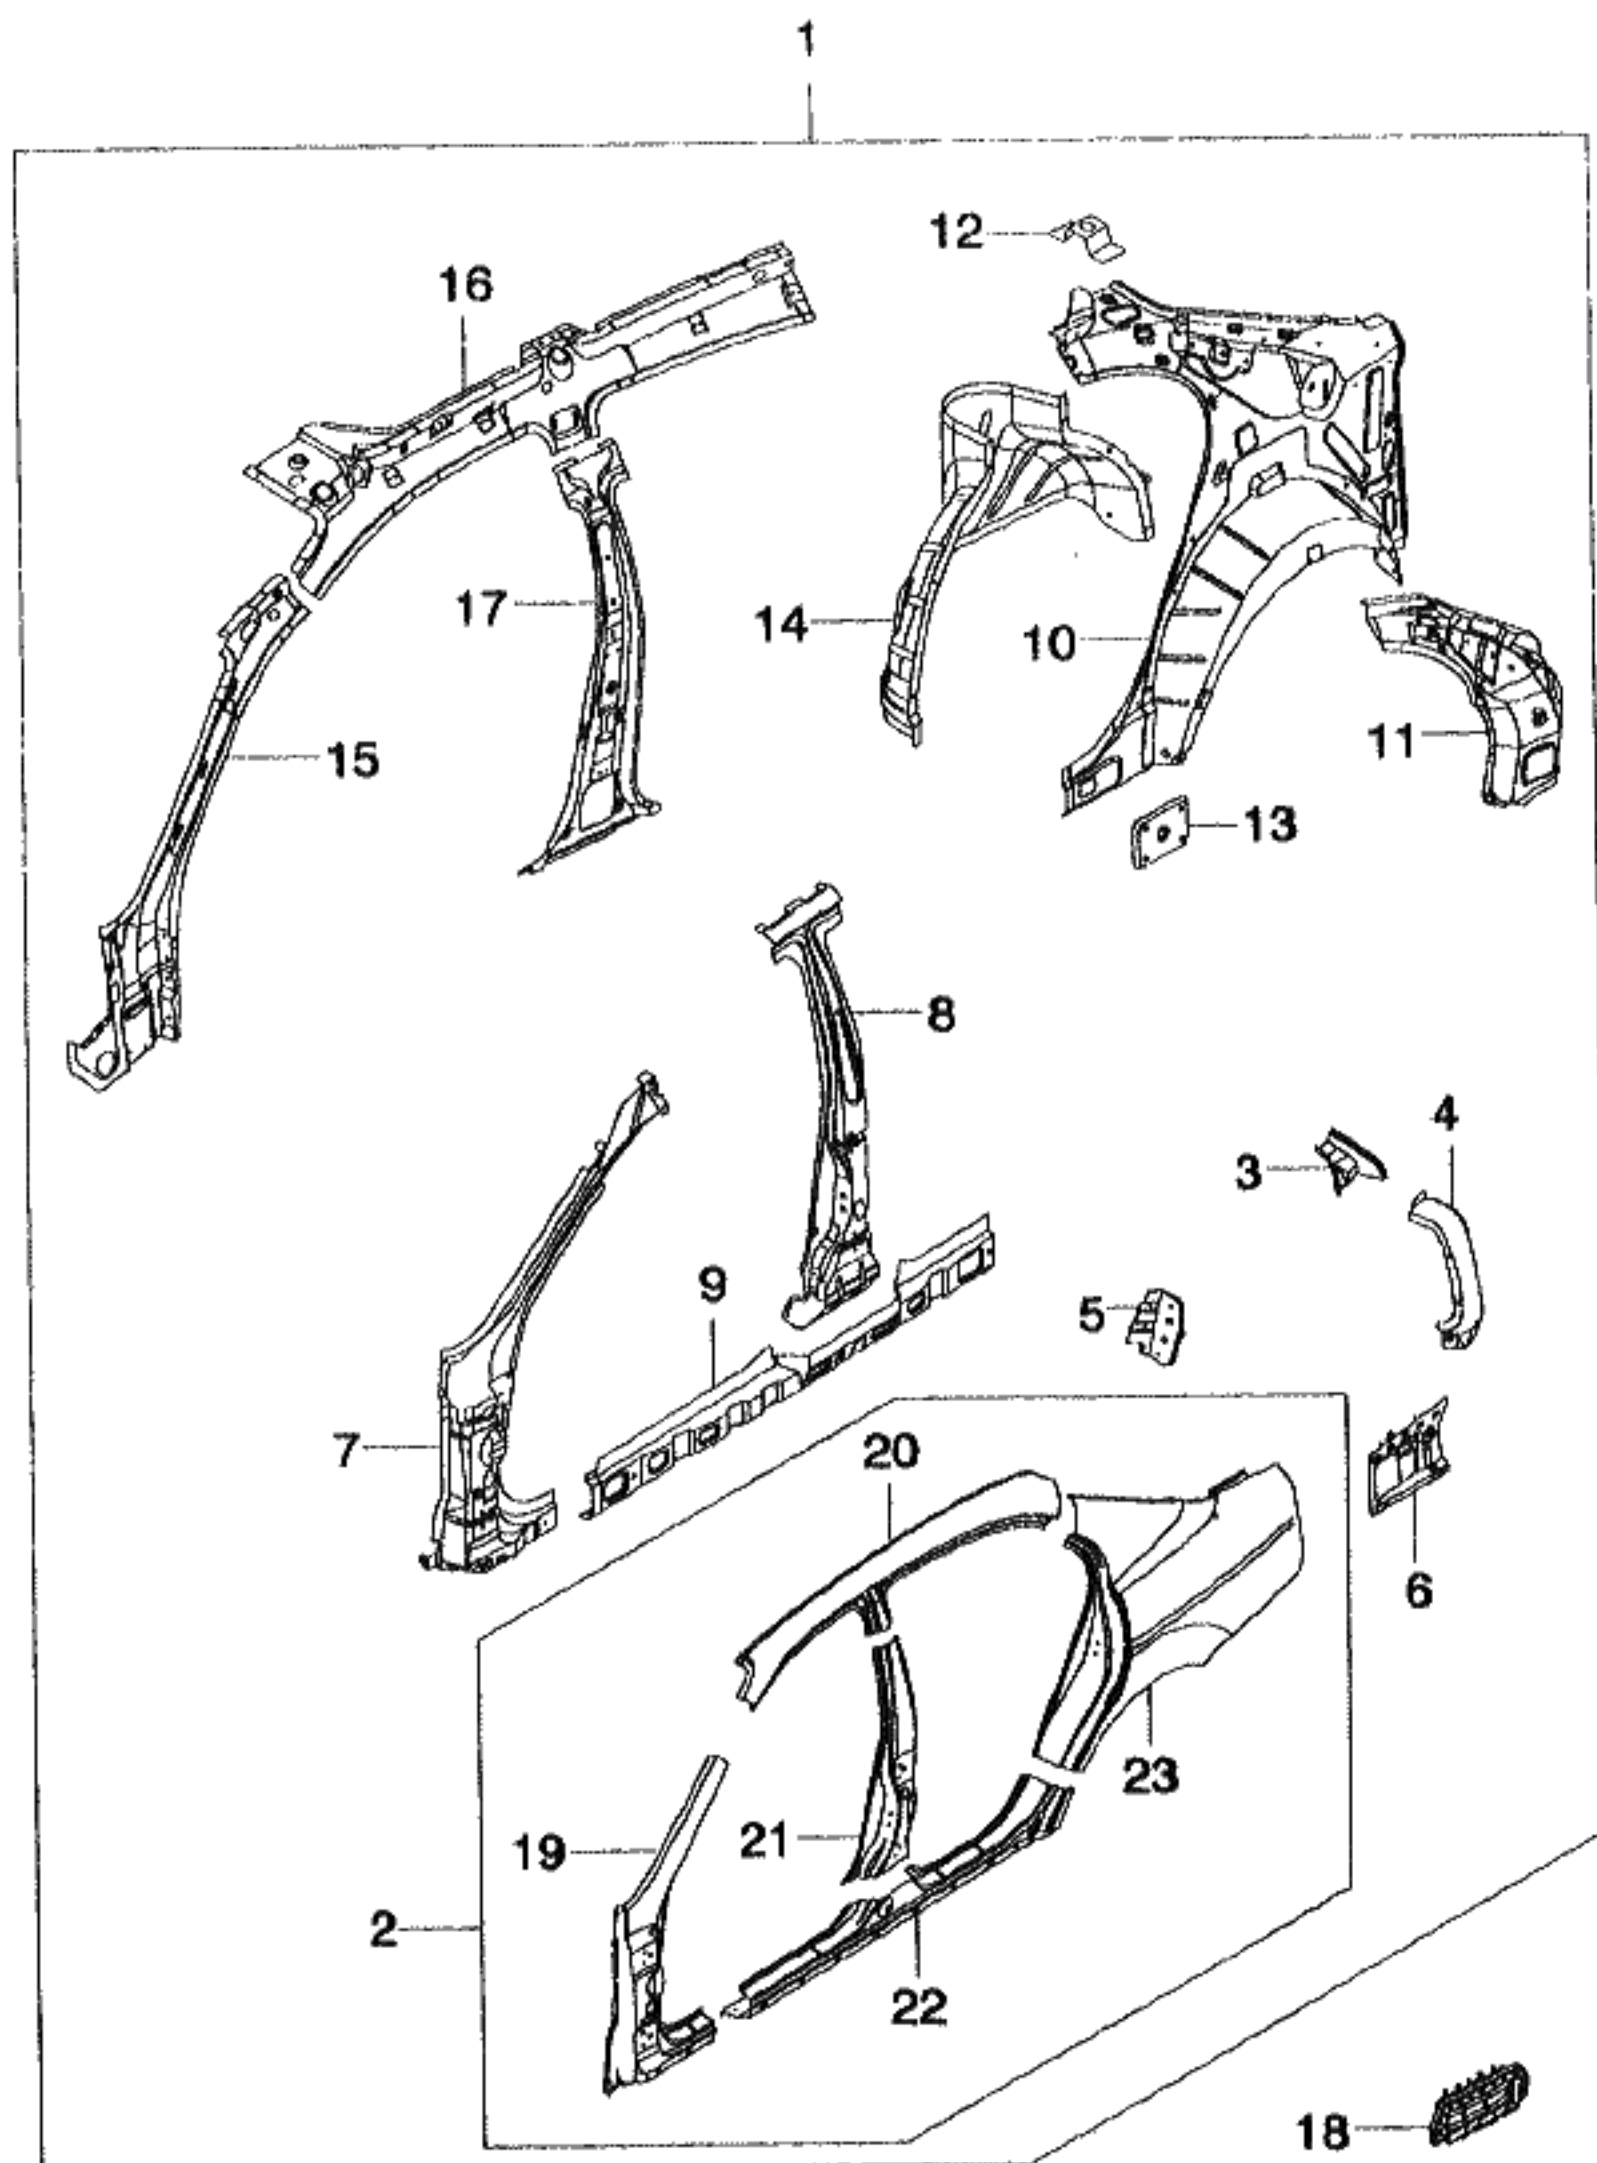


KEY NO.		PART NAME											P / CODE
I T C	PART NO.	MODEL			OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS			
		T / A	LEVEL					FROM	TO				
			S X	C D X									
	96227881	.	S	S		LH	1						
	96227882	.	S	S		RH	1						
	[09]		(E)REINFORCEMENT-ROCKER (D)VERSTÄRKUNG					(F)RENFORCEMENT (S)REFUERZO					
	A96206197	.	S	S		LH	1						
	A96206198	.	S	S		RH	1						
	[10]		(E)PANEL-RR SIDE INNER (D)VERKLEIDUNG, SEITE, INNEN					(F)PANNEAU-COTE INTERNE (S)PANEL-LADO INTERNO					
	A96216553	.	S	S		LH	1						
	A96216554	.	S	S		RH	1						
	[11]		(E)REINFORCEMENT A-PILLAR,RR (D)VERSTÄRKUNG					(F)RENFORCEMENT (S)REFUERZO					
	96206205	.	S	S		LH	1						
	96206206	.	S	S		RH	1						
	[12]		(E)BRACKET-LINER MTG,RR (D)TRÄGER					(F)SUPPORT (S)SOPORTE					
	96228435	.	S	S		RH	1						
	[13]		(E)REINFORCEMENT A (D)VERSTÄRKUNG					(F)RENFORCEMENT (S)REFUERZO					
	08968280	.	S	S			2						
	[14]		(E)WHEELHOUSE A-INNER (D)VERKLEIDUNG, RAD-GEHÄUSE					(F)PANNEAU-IMONERIE (S)PANEL-VOLANTE INTERNO					
	96227893	.	S	S		LH	1					W3	
	96227894	.	S	S		RH	1					W3	
	[15]		(E)PILLAR A-BODY FR INNER (D)SÄULE, VORDER-KAROSSERIE					(F)PILIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO					
	96227903	.	S	S		LH	1						
	96227904	.	S	S		RH	1						
	[16]		(E)FRAME A-ROOF SIDE INNER (D)RAHMEN, DACH					(F)CADRE-TOIT (S)ARMADURA-TECHO					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON



6410 SIDE BODY PANEL

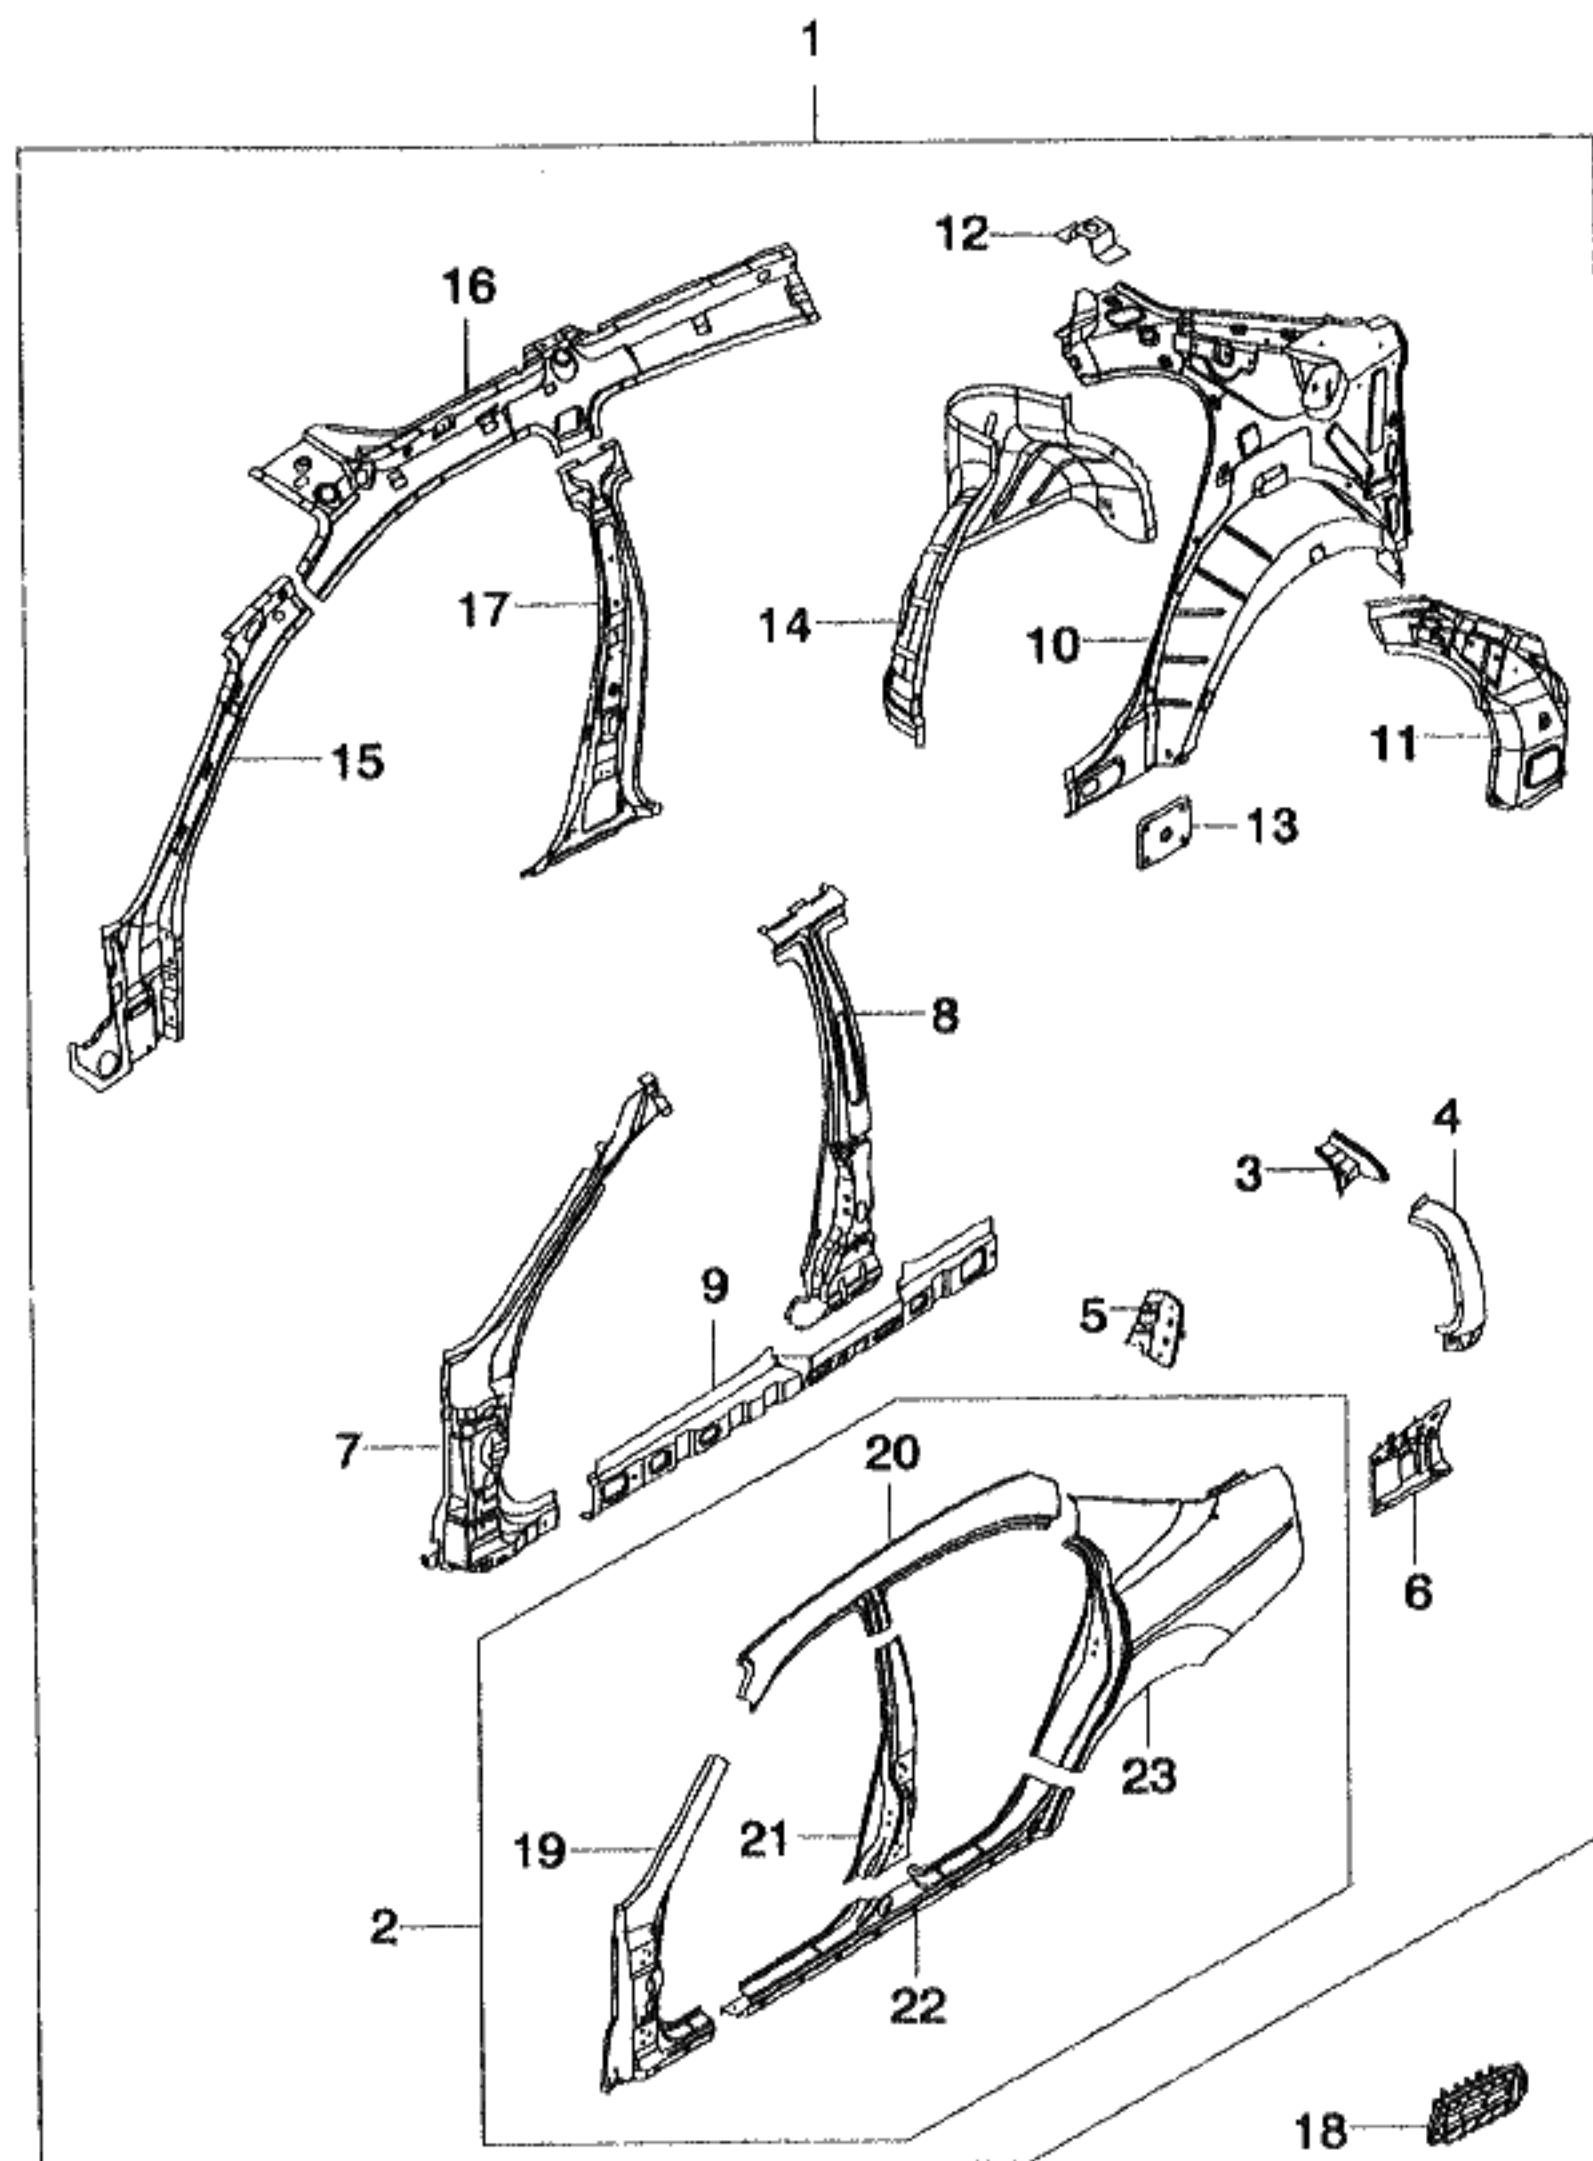


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	A96255320	.	S	S			LH	1			
	A96255321	.	S	S			RH	1			
	[17]		(E)PILLAR A-CENTER INNER (D)SÄULE, VORDER-KAROSSERIE							(F)PILIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO	
	96206237	.	S	S			LH	1			
	96206238	.	S	S			RH	1			
	[18]		(E)INSERT A-VENTILATION (D)EINSATZ, VENTILATOR							(F)INSERTION-VENTILATION (S)REFUERZO-VENTILACION	
	96207500	.	S	S				1			
	[19]		(E)PANEL-PILLAR SIDE OUTER (D)VERKLEIDUNG, SEITE, AUßEN							(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO	
	A96252681	.	S	S			L	1			
	A96252682	.	S	S			R	1			
	[20]		(E)PANEL-ROOF SIDE OUTER (D)VERKLEIDUNG, SEITE, AUßEN							(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO	
	A96252683	.	S	S			L	1			
	A96252684	.	S	S			R	1			
	[21]		(E)PANEL-PILLAR SIDE, OTR CTR (D)VERKLEIDUNG, SEITE, AUßEN							(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO	
	A96252685	.	S	S			L	1			
	A96252686	.	S	S			R	1			
	[22]		(E)PANEL-ROCKER SIDE OUTER (D)VERKLEIDUNG, SEITE, AUßEN							(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO	
	A96252687	.	S	S			L	1			
	A96252688	.	S	S			R	1			
	[23]		(E)PANEL-RR SIDE OUTER (D)VERKLEIDUNG, SEITE, AUßEN							(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO	
	A96252689	.	S	S			L	1			
	A96252690	.	S	S			R	1			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

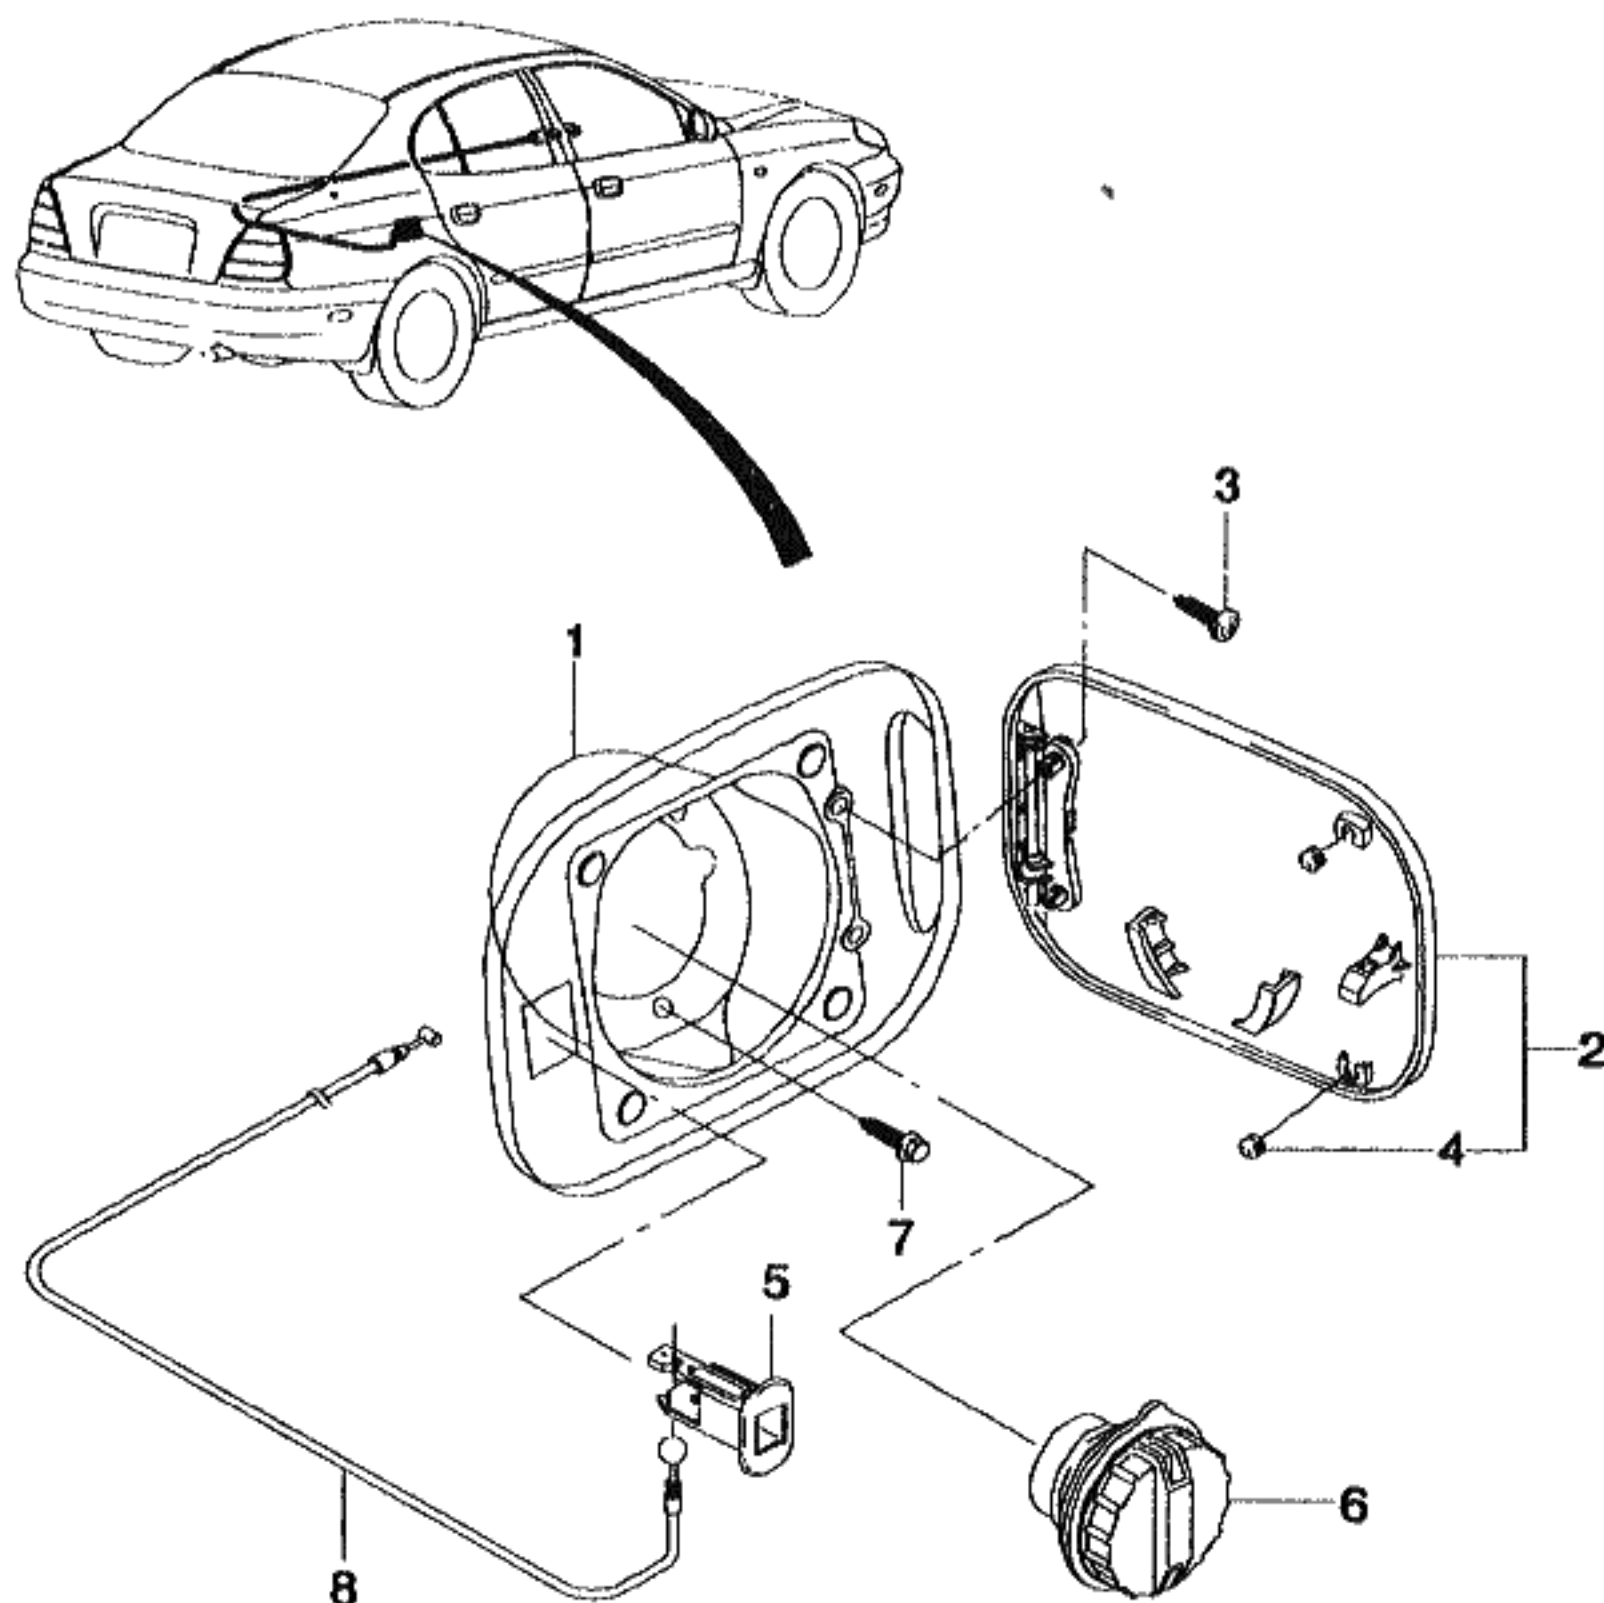


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96216563	(E)CAP-FUEL FILLER (D)DECKEL,BENZINTANK . S S					(F)CHAPEAU (S)TAPA-TOMA DE GASOLINA RH 1				
	[02] 96206316	(E)DOOR A-FUEL FILLER (D)TÜR,BENZINTANK . S S					(F)PORTE-REMPLISSAGE (S)PUERTA-ECHAR COMBUSTIBLE 1				
	[03] 02116-05162	(E)SCREW-CR MACHINE (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 2				
	[04] 96232113	(E)BUMPER-DOOR FUEL FILLER (D)STORSTANGE . S S					(F)PARE-CHOC (S)PARACHOQUES 2				
	[05] 96221407	(E)LOCK A-DOOR FUEL FILLER (D)SCHLOSS . S S					(F)VERROU (S)CERRADURA RH 1				
	[06] 22591475	(E)CAP-FUEL SCREW (D)SCHRAUBEDECKEL,BENZINTANK . S S					(F)CHAPEAU (S)TAPA-TORNILLO 1				
	[07] 09136-04008	(E)SCREW-TAPPING (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 3				
	[08] 96206300	(E)CABLE A-DOOR FUEL FILLER (D)KABEL . S S					(F)CABLE (S)CABLE 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

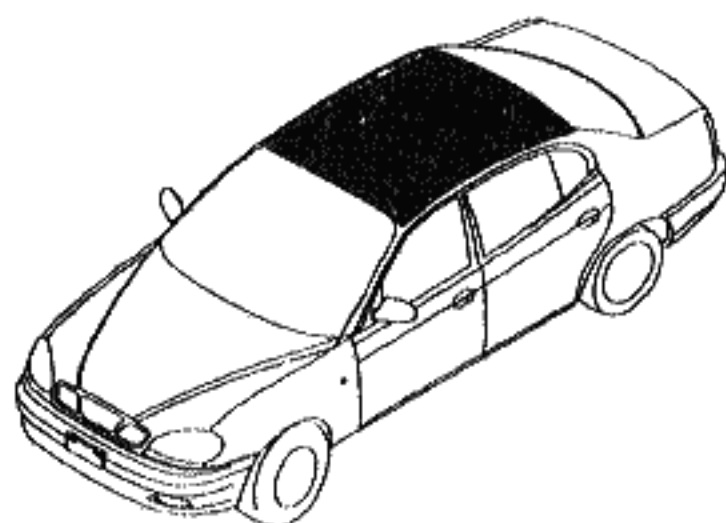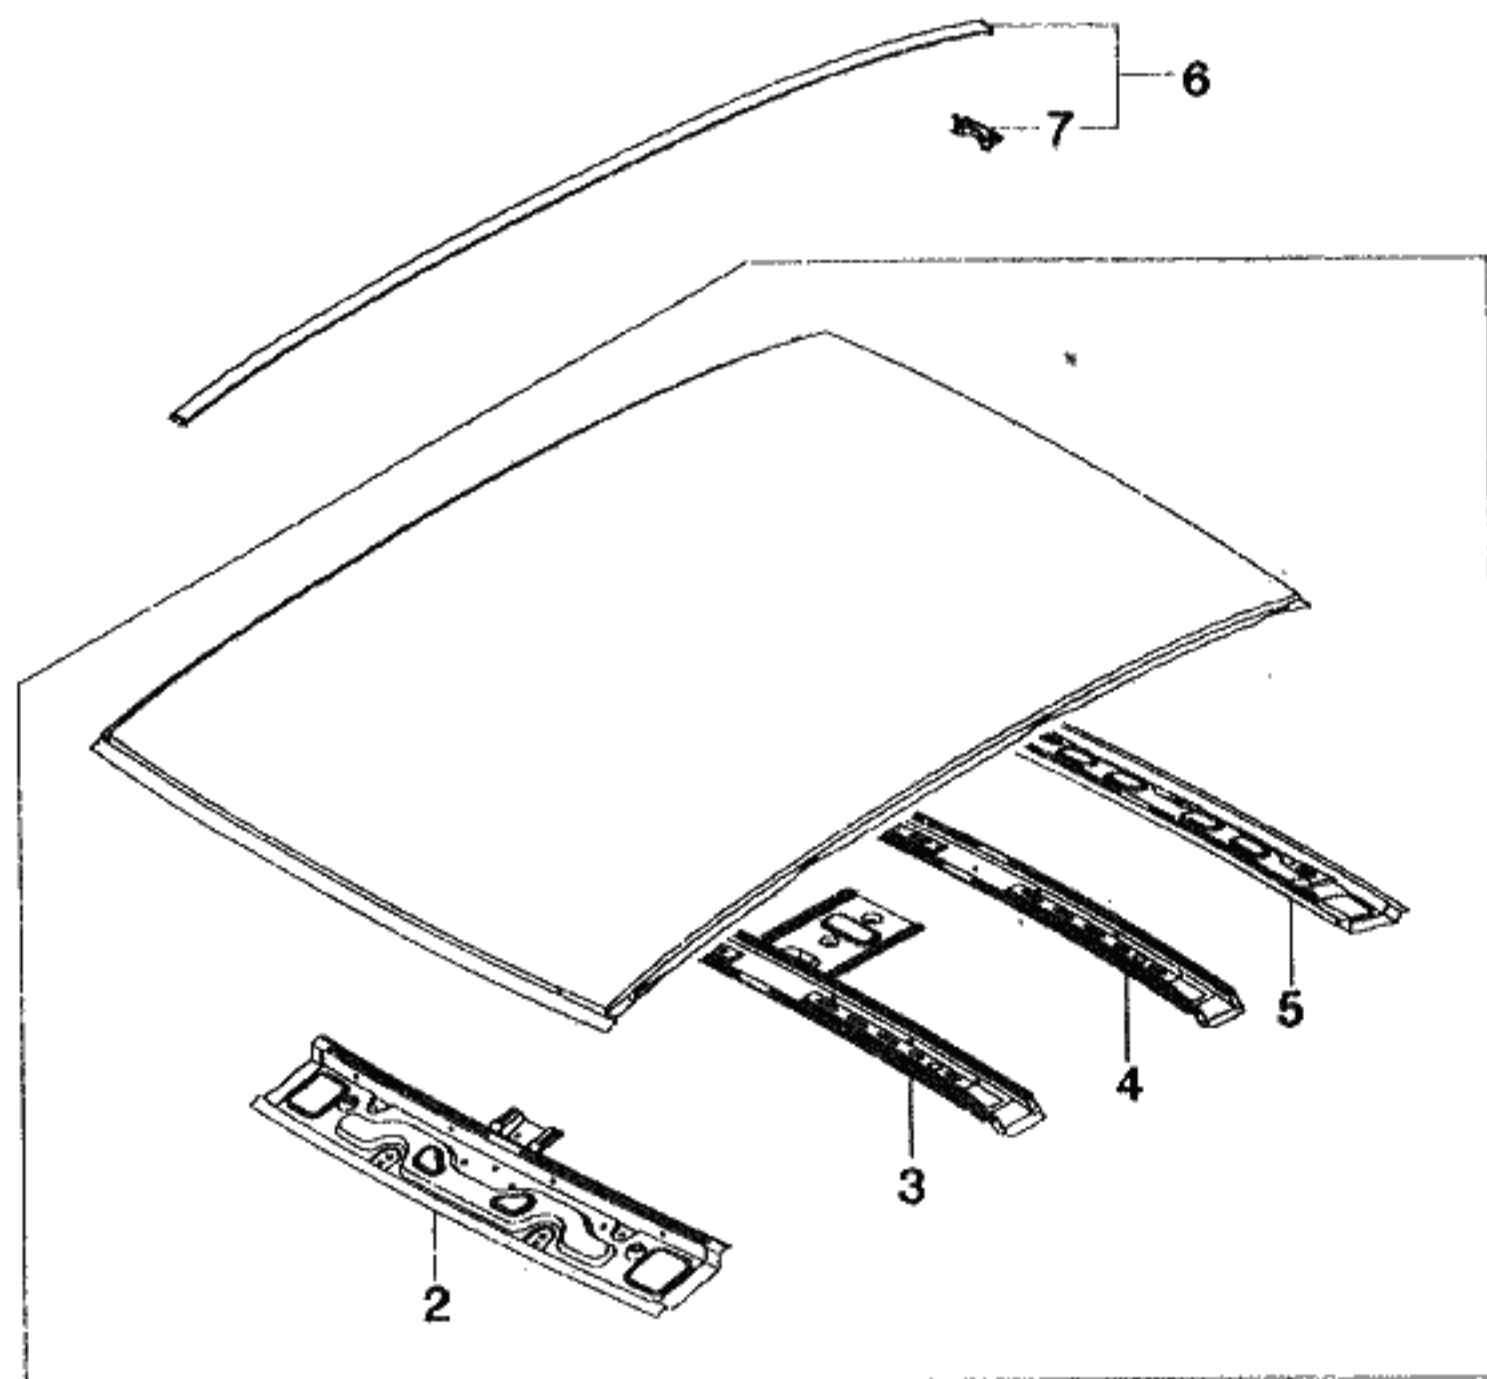


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] A96206281	(E)PANEL A-ROOF (D)VERKLEIDUNG	S	S		(F)PANNEAU-TOIT (S)TECHO	1				RA
	[02] 96206285	(E)RAIL A-WINDSHIELD HEADER (D)SCHIENE	S	S		(F)RAIL-HAUT DE PARE-BRISE (S)RIEL	1				
	[03] 96206288	(E)SUPPORT A-ROOF (D)TRÄGER,DACH	S	S		(F)SUPPORT-TOIT (S)SOPORTE-TECHO	1				
	[04] 96206292	(E)SUPPORT A-ROOF,RR (D)TRÄGER,DACH	S	S		(F)SUPPORT-TOIT (S)SOPORTE-TECHO	1				
	[05] 96206289	(E)FRAME A-ROOF,RR (D)RAHMEN,HINTERES DACH	S	S		(F)CADRE-TOIT ARRIERE (S)ARMADURA-TECHO TRASERO	1				
	[06] 96205726 96205727	(E)MOLDING A-ROOF (D)PREßTEIL,DACH	S	S		(F)MOULURE-TOIT (S)MOLOURA-TECHO	LH 1 RH 1				
	[07] 96210751	(E)CLIP-ROOF MOLDING (D)KLEMME	S	S		(F)ATTACHE (S)GRAPA	8				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

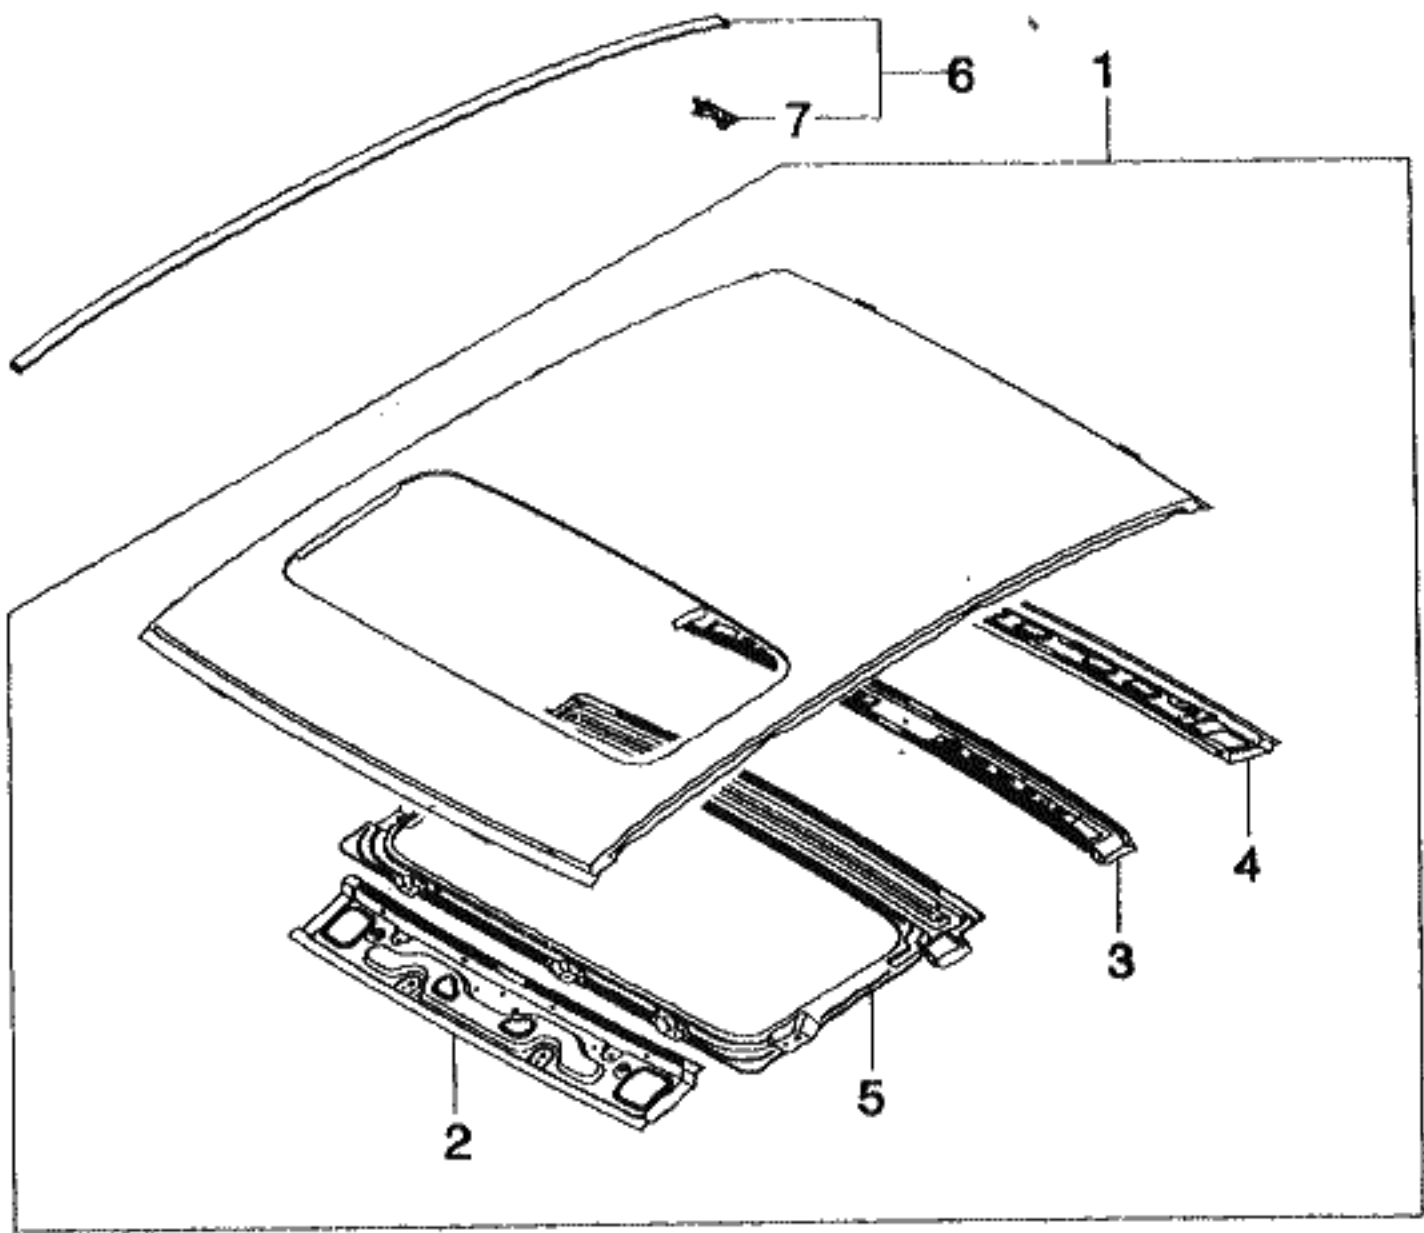

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] A96206282	(E) PANEL A-ROOF (D) VERKLEIDUNG	.	O	O	&CF6.	(F) PANNEAU-TOIT (S) TECHO	1			RB
	[02] 96206286	(E) RAIL A-WINDSHIELD HEADER (D) SCHIENE	.	O	O	&CF6.	(F) RAIL-HAUT DE PARE-BRISE (S) RIEL	1			
	[03] 96206292	(E) SUPPORT A-ROOF RR (D) TRÄGER, DACH	.	S	S		(F) SUPPORT-TOIT (S) SOPORTE-TECHO	1			
	[04] 96206289	(E) FRAME A-ROOF, RR (D) RAHMEN, HINTERES DACH	.	S	S		(F) CADRE-TOIT ARRIERE (S) ARMADURA-TECHO TRASERO	1			
	[05] 96221369	(E) FRAME A-SUN ROOF (D) RAHMEN	.	O	O	&CF6.	(F) CADRE (S) ARMADURA	1			
	[06] 96205726 96205727	(E) MOLDING A-ROOF (D) PREßTEIL, DACH	.	S	S		(F) MOULURE-TOIT (S) MOLOURA-TECHO	LH 1 RH 1			
	[07] 96210751	(E) CLIP-ROOF (D) KLEMME	.	S	S		(F) ATTACHE (S) GRAPA	8			
LEVEL						T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

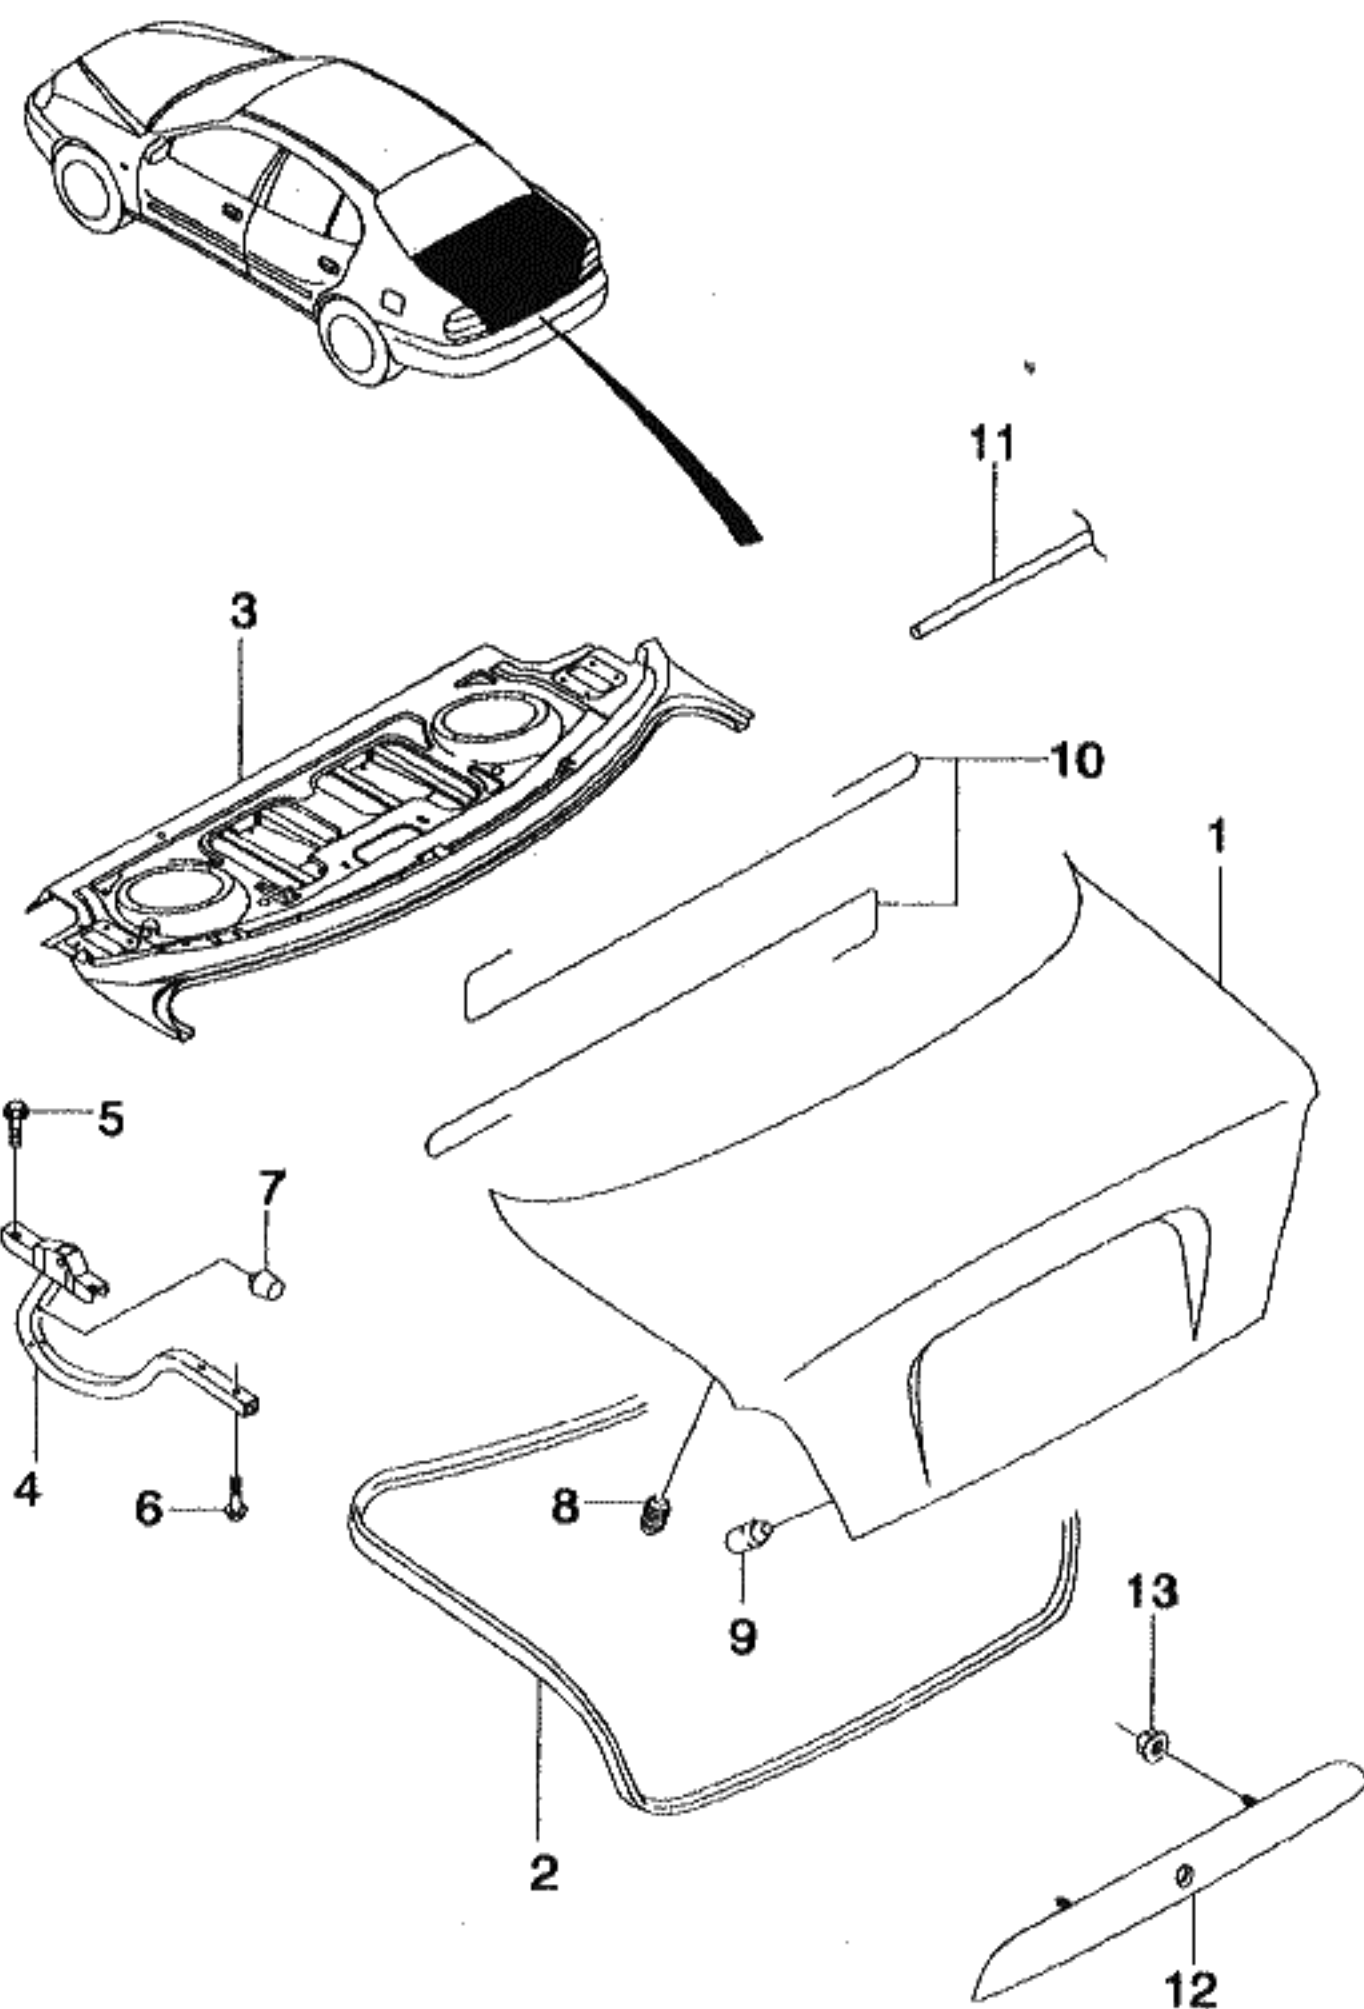


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E)PANEL A-TRUNK LID (D)VERKLEIDUNG,KOFFERRAUM				(F)PANNEAU-CAPOT DE COFFRE (S)TAPA DEL PORTAEQUIPAJE					
A96205423		. S S		&T11&XCK.		1					TA
A96205464		. A A		&T12&XCK.		1					TB
A96205462		. A A		&T12&XCP.		1					TC
[02]		(E)WEATHERSTRIP A-TRUNK LID (D)DICHTUNGSLEISTE				(F)ISOLATION EN BANDELETTE (S)BURLETE					
96206413		. S S				1					
[03]		(E)PANEL A-BACK,UPPER (D)VERKLEIDUNG,HINTEN,OBEN				(F)PANNEAU-ARRIERE HAUT (S)PANEL-RESPALDO SUPERIOR					
96228438		. S S				1					PC
[04]		(E)HINGE A-TRUNK LID (D)BESCHLAG,KOFFERRAUM				(F)CHARNIERE-PORTE ARRIERE (S)BISAGRA					
96205412		. S S				LH 1					
96205413		. S S				RH 1					
[05]		(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
09118-06004		. S S				4					
[06]		(E)BOLT-W/WASHER (D)SCHRAUBE				(F)BOULON (S)PERNO					
09118-06003		. S S				4					
[07]		(E)BUMPER-TRUNK LID HINGE (D)STOßSCHEIBE				(F)PARE-CHOC-CAPOT DE (S)TOPE					
96185310		. S S				2					
[08]		(E)BUMPER-TRUNK LID (D)STOßSTANGE				(F)PARE-CHOC (S)PARACHOQUES					
96169594		. S S				2					
[09]		(E)BUMPER-TRUNK LID,LOWER (D)STOßSTANGE				(F)PARE-CHOC (S)PARACHOQUES					
96301472		. S S				2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						




KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10]	(E) SPRING-TRUNK LID (D) FEDERUNG				(F)RESSORT (S)RESORTE					
	96205437	.	S	S		LH 1					
	96205438	.	S	S		RH 1					
	[11]	(E)HOSE-SPRING (D)SCHLAUCH				(F)TUYAU (S)MANGUERA					
	94825352	.	S	S		1					
	[12]	(E)HANDLE A-TRUNK LID (D)HENKEL				(F)POIGNEE (S)MANIJA					
	96205401	.	S	S		1					
	[13]	(E)NUT-FLANGE (D)MUTTER				(F)ECROU (S)TUERCA					
	08316-25053	.	S	S		4					



LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

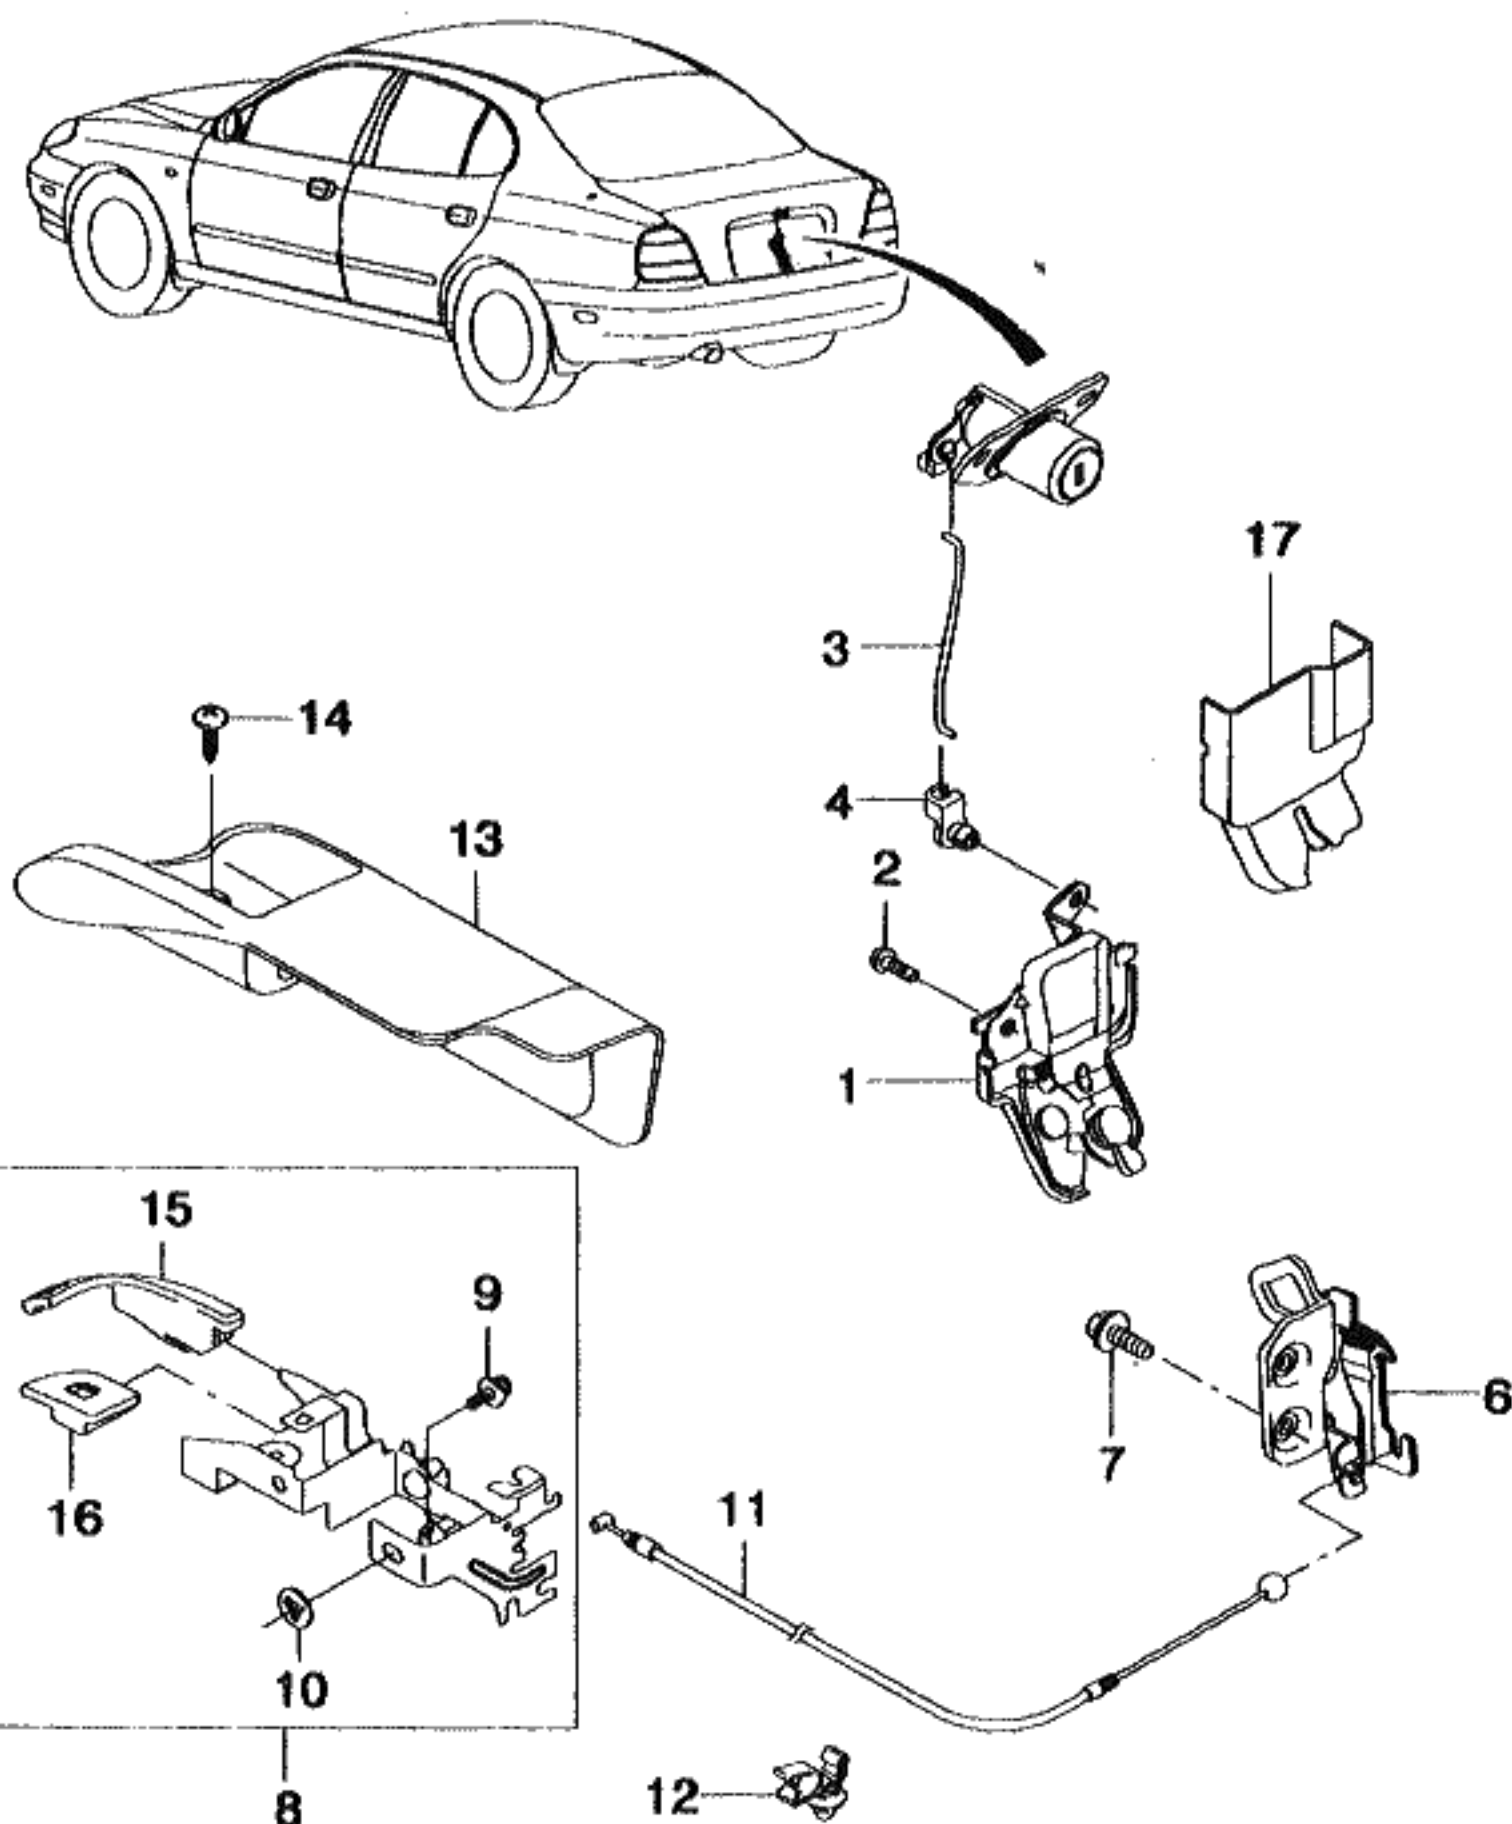


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96214300	(E) LATCH A-TRUNK LID (D) VERSCHLÜß, KOFFERRAUM	S	S			(F) LOQUET-CAPOT DE COFFRE (S) PESTILLO	1			
	[02] 02116-36123	(E) SCREW-CR MACHINE (D) SCHRAUBE	S	S			(F) VIS (S) TORNILLO	2			
	[03] 09403-03302	(E) CLAMP-LATCH (D) KLAMMER	S	S			(F) PINCE (S) ABRAZADERA	1			
	[04] 96205595	(E) ROD-KEY CYL TRUNK LID (D) STAB	S	S			(F) TRINGLE (S) VARILLA	1			
	[06] 96303364	(E) STRIKER A-TRUNK LID LATCH (D) SCHLÄGER	S	S			(F) MARTEAU (S) HUELGUISTA	1			
	[07] 09118-06012	(E) BOLT-W/WASHER (D) SCHRAUBE	S	S			(F) BOULON (S) PERNO	2			
	[08] 96205450	(E) LEVER-TRUNK & FUEL FILLER (D) HEBEL	S	S			(F) LEVIER (S) PALANCA	1			
	[09] 09138-06027	(E) SCREW-MACHINE (D) SCHRAUBE	S	S			(F) VIS (S) TORNILLO	2			
	[10] 09148-06016	(E) NUT-SPEED (D) MUTTER	S	S			(F) ECROU (S) TUERCA	2			
	[11] 96205427	(E) CABLE A-TRUNK LID (D) KABEL	S	S			(F) CABLE (S) CABLE	1			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

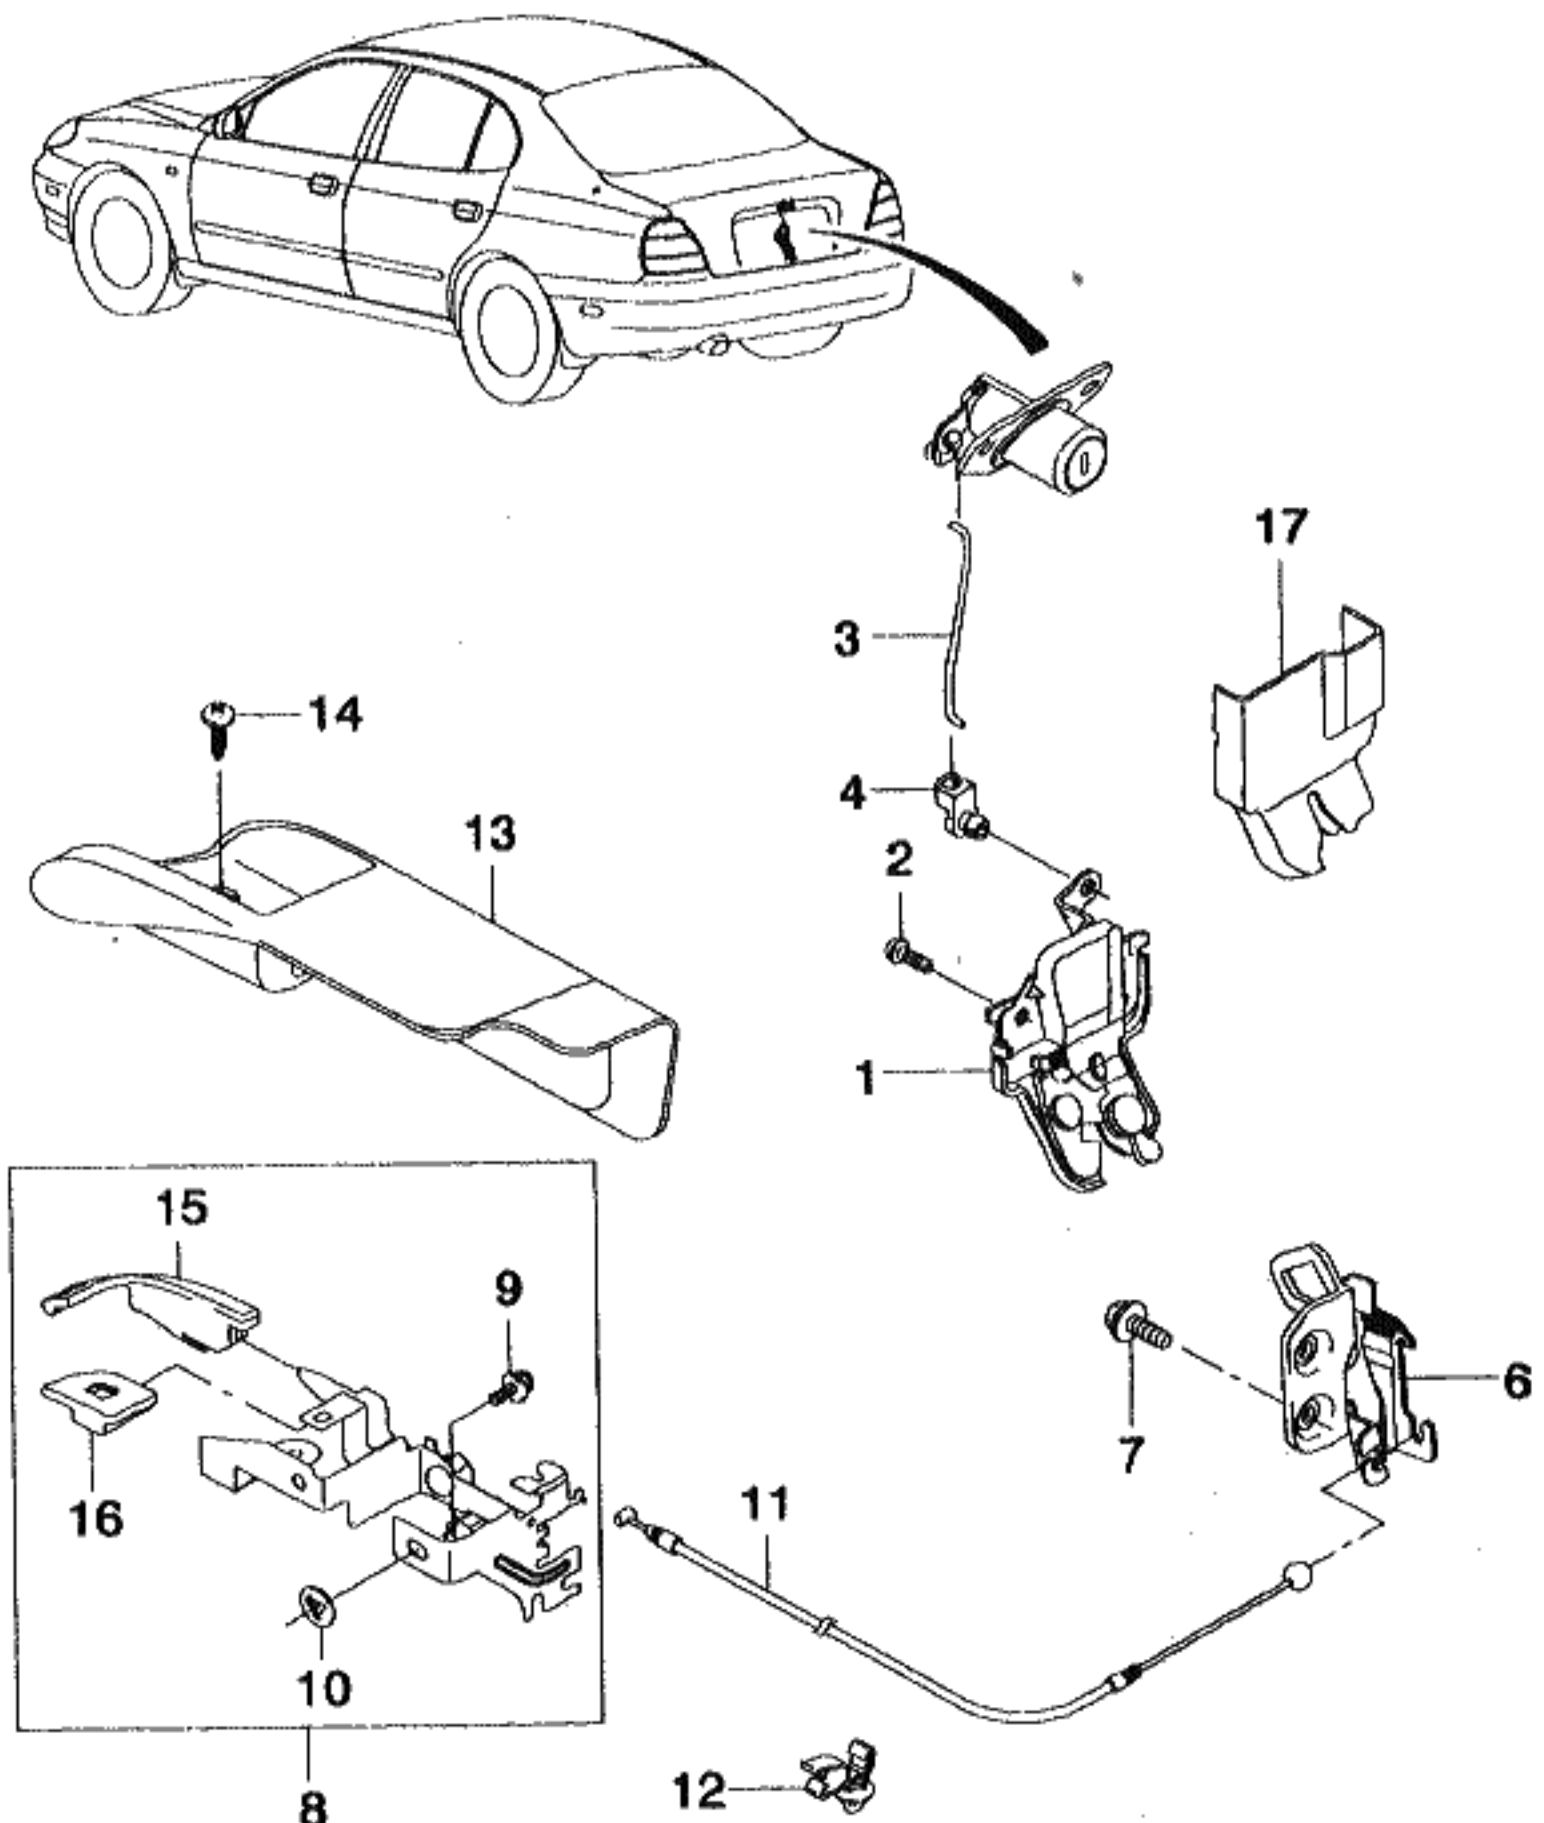


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[12] 09408-00044	(E)CLIP-CABLE (D)KLEMME . S S				(F)ATTACHE (S)GRAPA 4						
	[13] 96205456	(E)HOUSING A-TRUNK&F/FILLER (D)GEHÄUSE . S S				(F)LOGEMENT (S)CARCASA 1						
	[14] 03160-42095	(E)SCREW-TAPPING (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 2						
	[15] 96205453	(E)KNOB-LEVER TRUNK (D)KNOPF . S S				(F)BOUTON (S)PERILLA 1						
	[16] 96205455	(E)KNOB-LEVER DOOR F/FILLER (D)KNOPF . S S				(F)BOUTON (S)PERILLA 1						
	[17] 96205433	(E)COVER-PLASTIC LATCH (D)DECKEL . S S				(F)COUVERTURE (S)CUBIERTA 1						
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

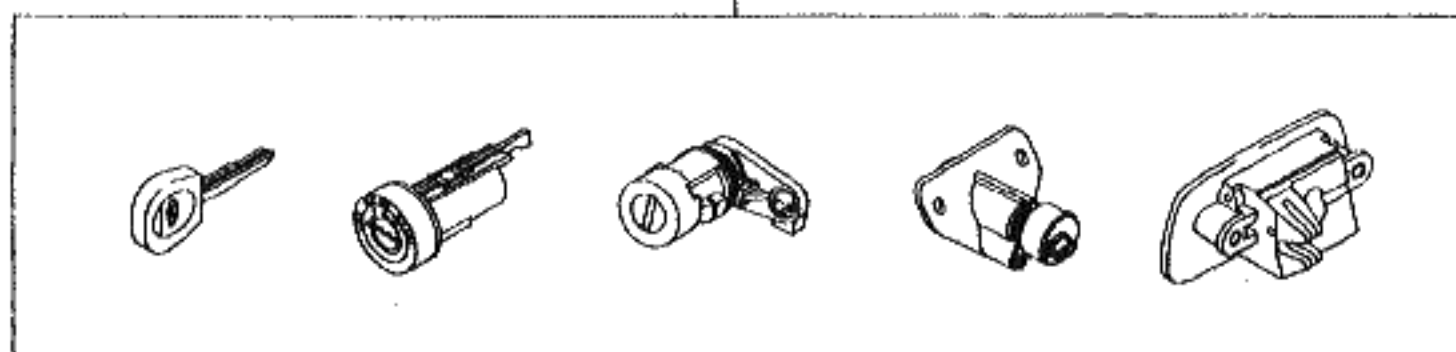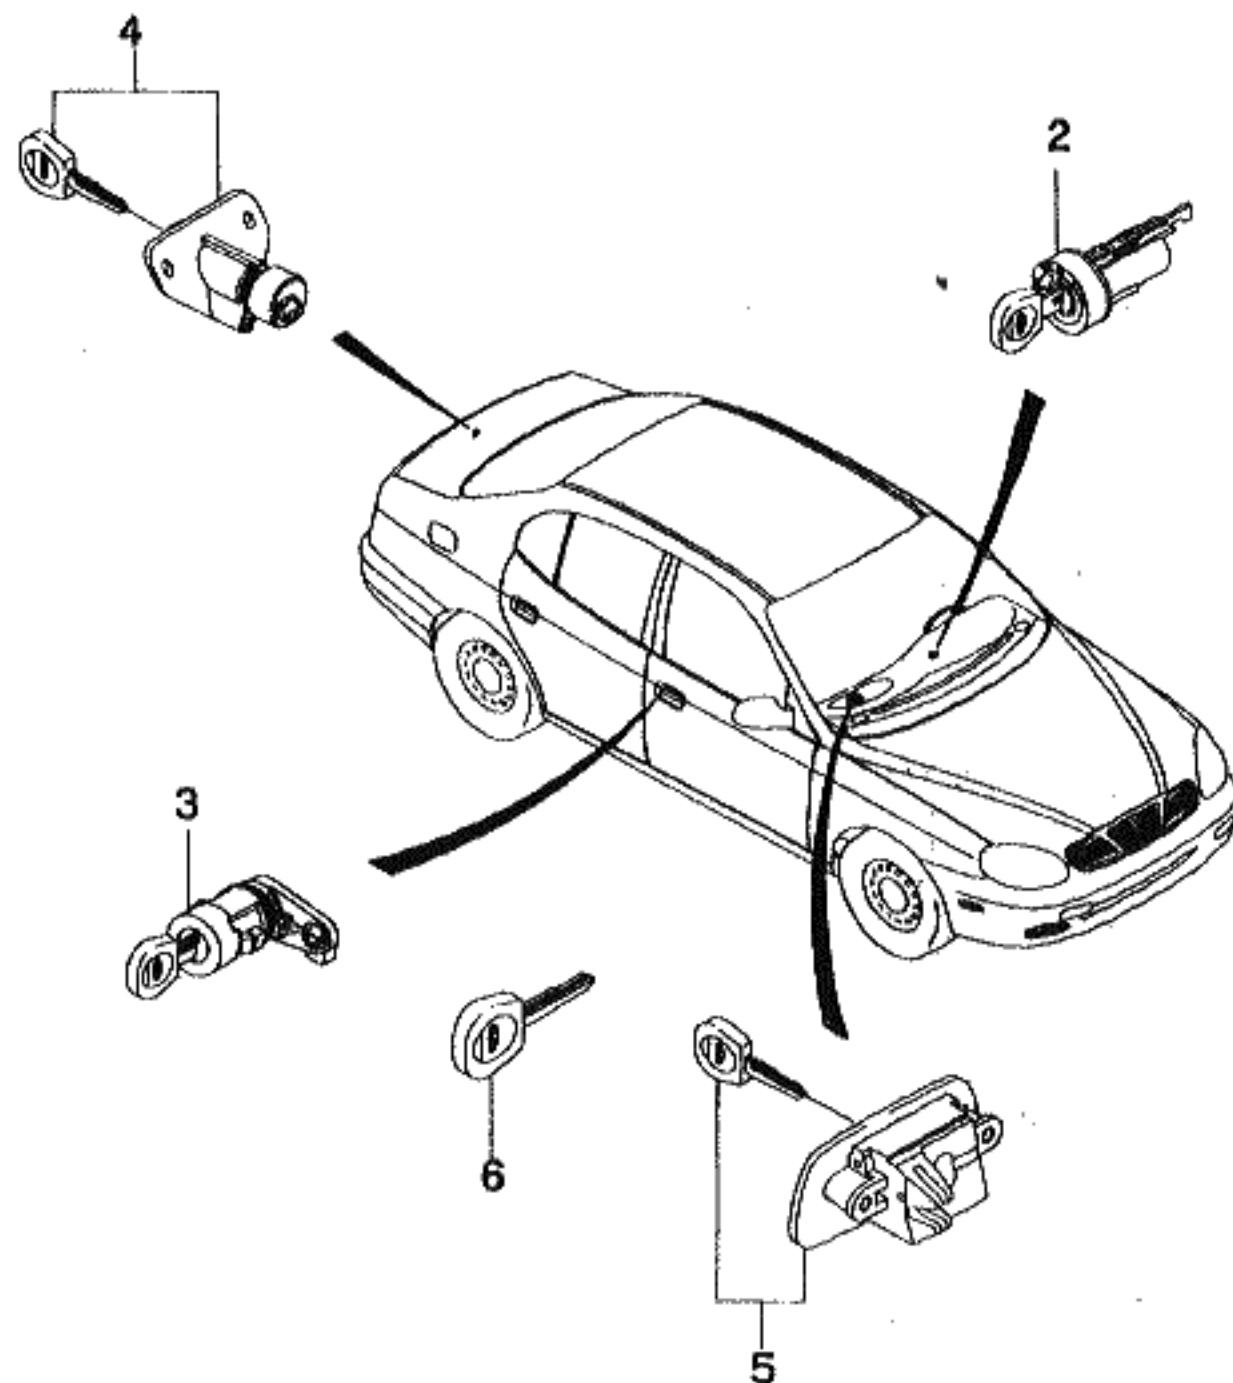

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) LOCK SET-CAR (D) SCHLOSS-SATZ, AUTOMOBIL				(F) JEU VERROU-VOITURE (S) JUEGO DE CERRADURA-CABINA					
	96241132	.	S	S	&82I-ATP/CAL/UIP/UM1		1				V2
	96241136	.	O	O	&82I&ATP/CAL/UIP-UM1		1				V6
	96241134	.	A	A	&82I&UM1-ATP/CAL/UIP		1				V4
	96241138	.	A	A	&82I&ATP/CAL/UIP&UM1		1				V8
	[02]	(E) LOCK SET-STEERING (D) SCHLOSS-SATZ, LENKUNG				(F) JEU VERROU-DIRECTION (S) JUEGO DE CERRADURA					
	S6460030	.	S	S	-UM1.		1				
	S6460052	.	A	A	&UM1.		1				
	[03]	(E) LOCK SET-DOOR (D) SCHLOSS-SATZ, TÜR				(F) JEU VERROU-PORTE (S) JUEGO DE					
	S6460031	.	S	S		LH 1					
	S6460032	.	S	S		RH 1					
	[04]	(E) LOCK SET-TRUNK LID (D) SCHLOSS-SATZ, KOFFERRAUM				(F) JEU VERROU-COFFRE (S) JUEGO DE CERRADURA					
	S6460033	.	S	S	-CAL.		1				
	S6460034	.	O	O	&CAL.		1				
	[05]	(E) LOCK SET-GLOVE BOX (D) SCHLOSS-SATZ, HANDSCHUHFAC				(F) JEU VERROU-BOITE A GANTS (S) JUEGO DE CERRADURA					
	S6460053	.	S	S	&82I.		1				
	[06]	(E) KEY-BLANK (D) SCHLÜßEL, UNBEARBEITET				(F) CLE-BLANC (S) LLAVE-EN BLANCO					
	S6460036	.	S	S	-UM1.		1				
	S6460054	.	A	A	&UM1.		1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

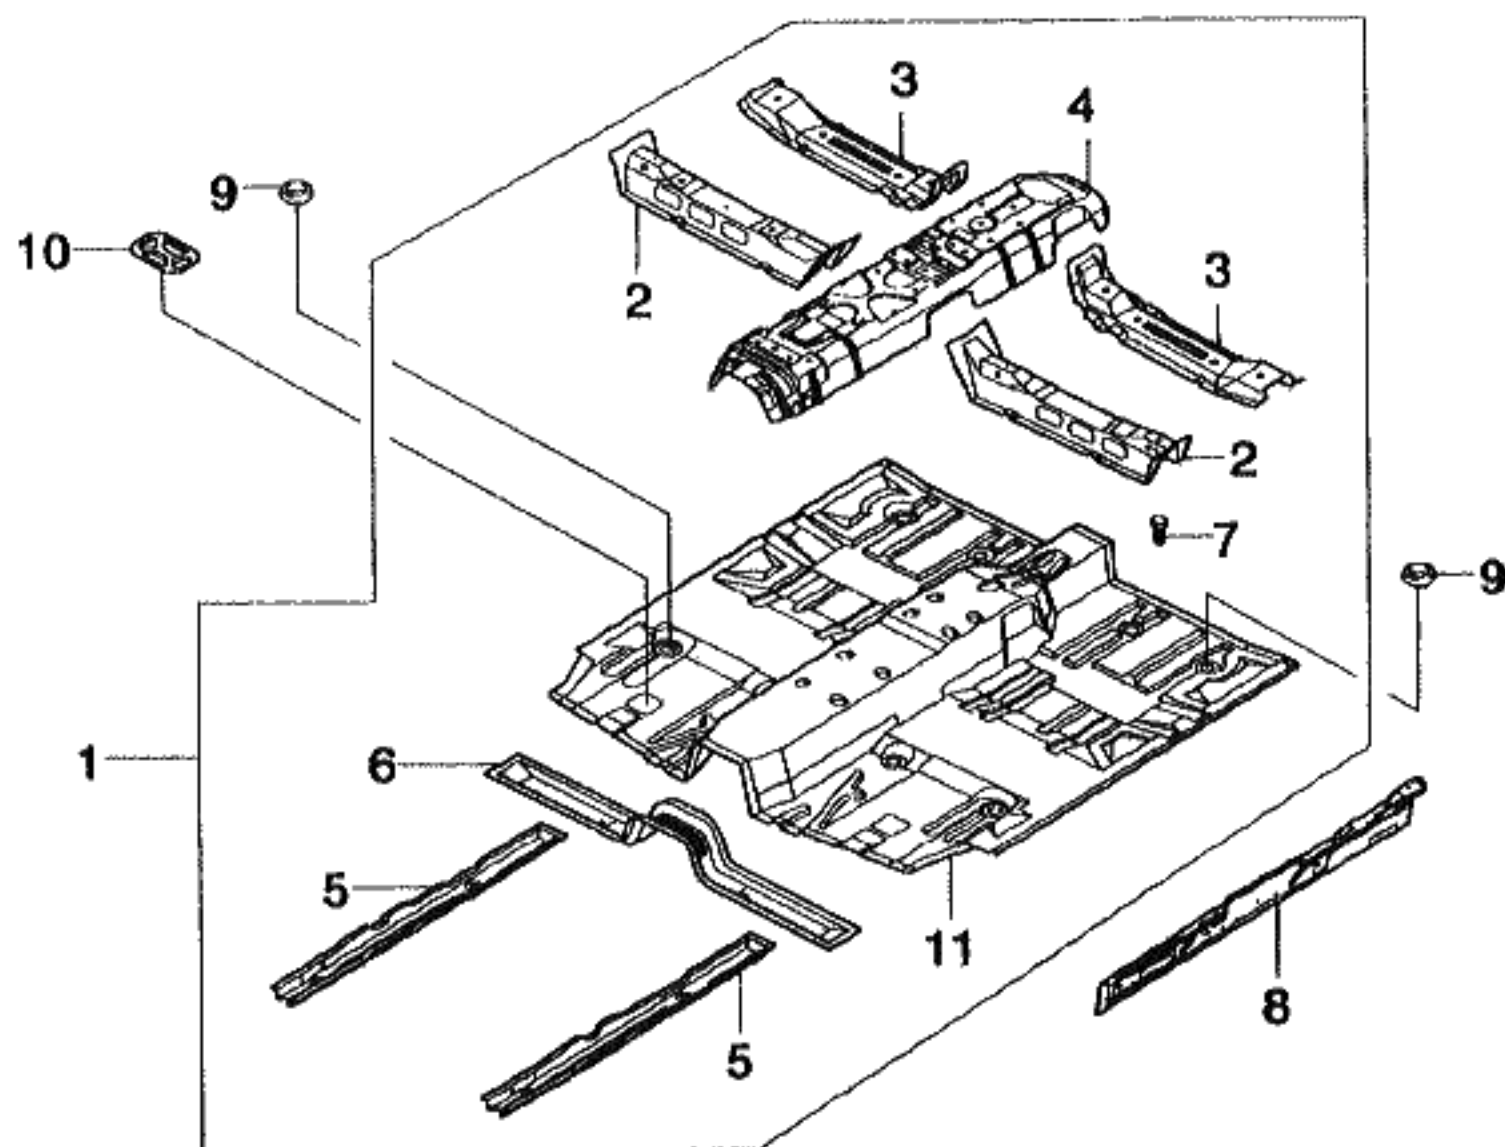


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] A96227962	(E) PANEL A-FLOOR,FR (D) VERKLEIDUNG,BODEN,VORNE	S	S			1	(F) PANNEAU-PLANCHER,AVANT (S) PANEL-PISO,FRENTE		FB	
	[02] 96206035 96206036	(E) CROSSMEMBER A-FR SEAT,FR (D) QUERTRÄGER	S	S			LH 1 RH 1	(F) BARRE DE TRAVERSE (S) TRANSVERSAL			
	[03] 96228021 96228022	(E) CROSSMEMBER A-FR SEAT,RR (D) QUERTRÄGER	S	S			LH 1 RH 1	(F) BARRE DE TRAVERSE (S) TRANSVERSAL	T		
	[04] 96206040	(E) REINFORCEMENT A-TUNNEL (D) VERSTÄRKUNG	S	S			1	(F) RENFORCEMENT-TUNNEL (S) REFUERZO-TUNEL DEL FRENTE			
	[05] 96227970 96227971	(E) LONGITUDINAL A-FLOOR,LWR (D) LÄNGENTEIL,VORNE	S	S			LH 1 RH 1	(F) LONGITUDINAL-AVANT (S) LONGITUDINAL-FRENTE			
	[06] 96227973	(E) BRIDGE A-C/MBR FR SEAT (D) BRÜCKEN	S	S			1	(F) PONT (S) PUENTE			
	[07] 09119-05005	(E) BOLT (D) SCHRAUBE	S	S			6	(F) BOULON (S) PERNO			
	[08] 96206053 96206054	(E) PANEL A-FLOOR,SIDE (D) VERKLEIDUNG,BODEN,SEITE	S	S			LH 1 RH 1	(F) PANNEAU-PLANCHER,COTE (S) PANEL-PISO,LADO			
	[09]	(E) PLUG (D) STÖPSEL						(F) BOUCHON (S) TAPON			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

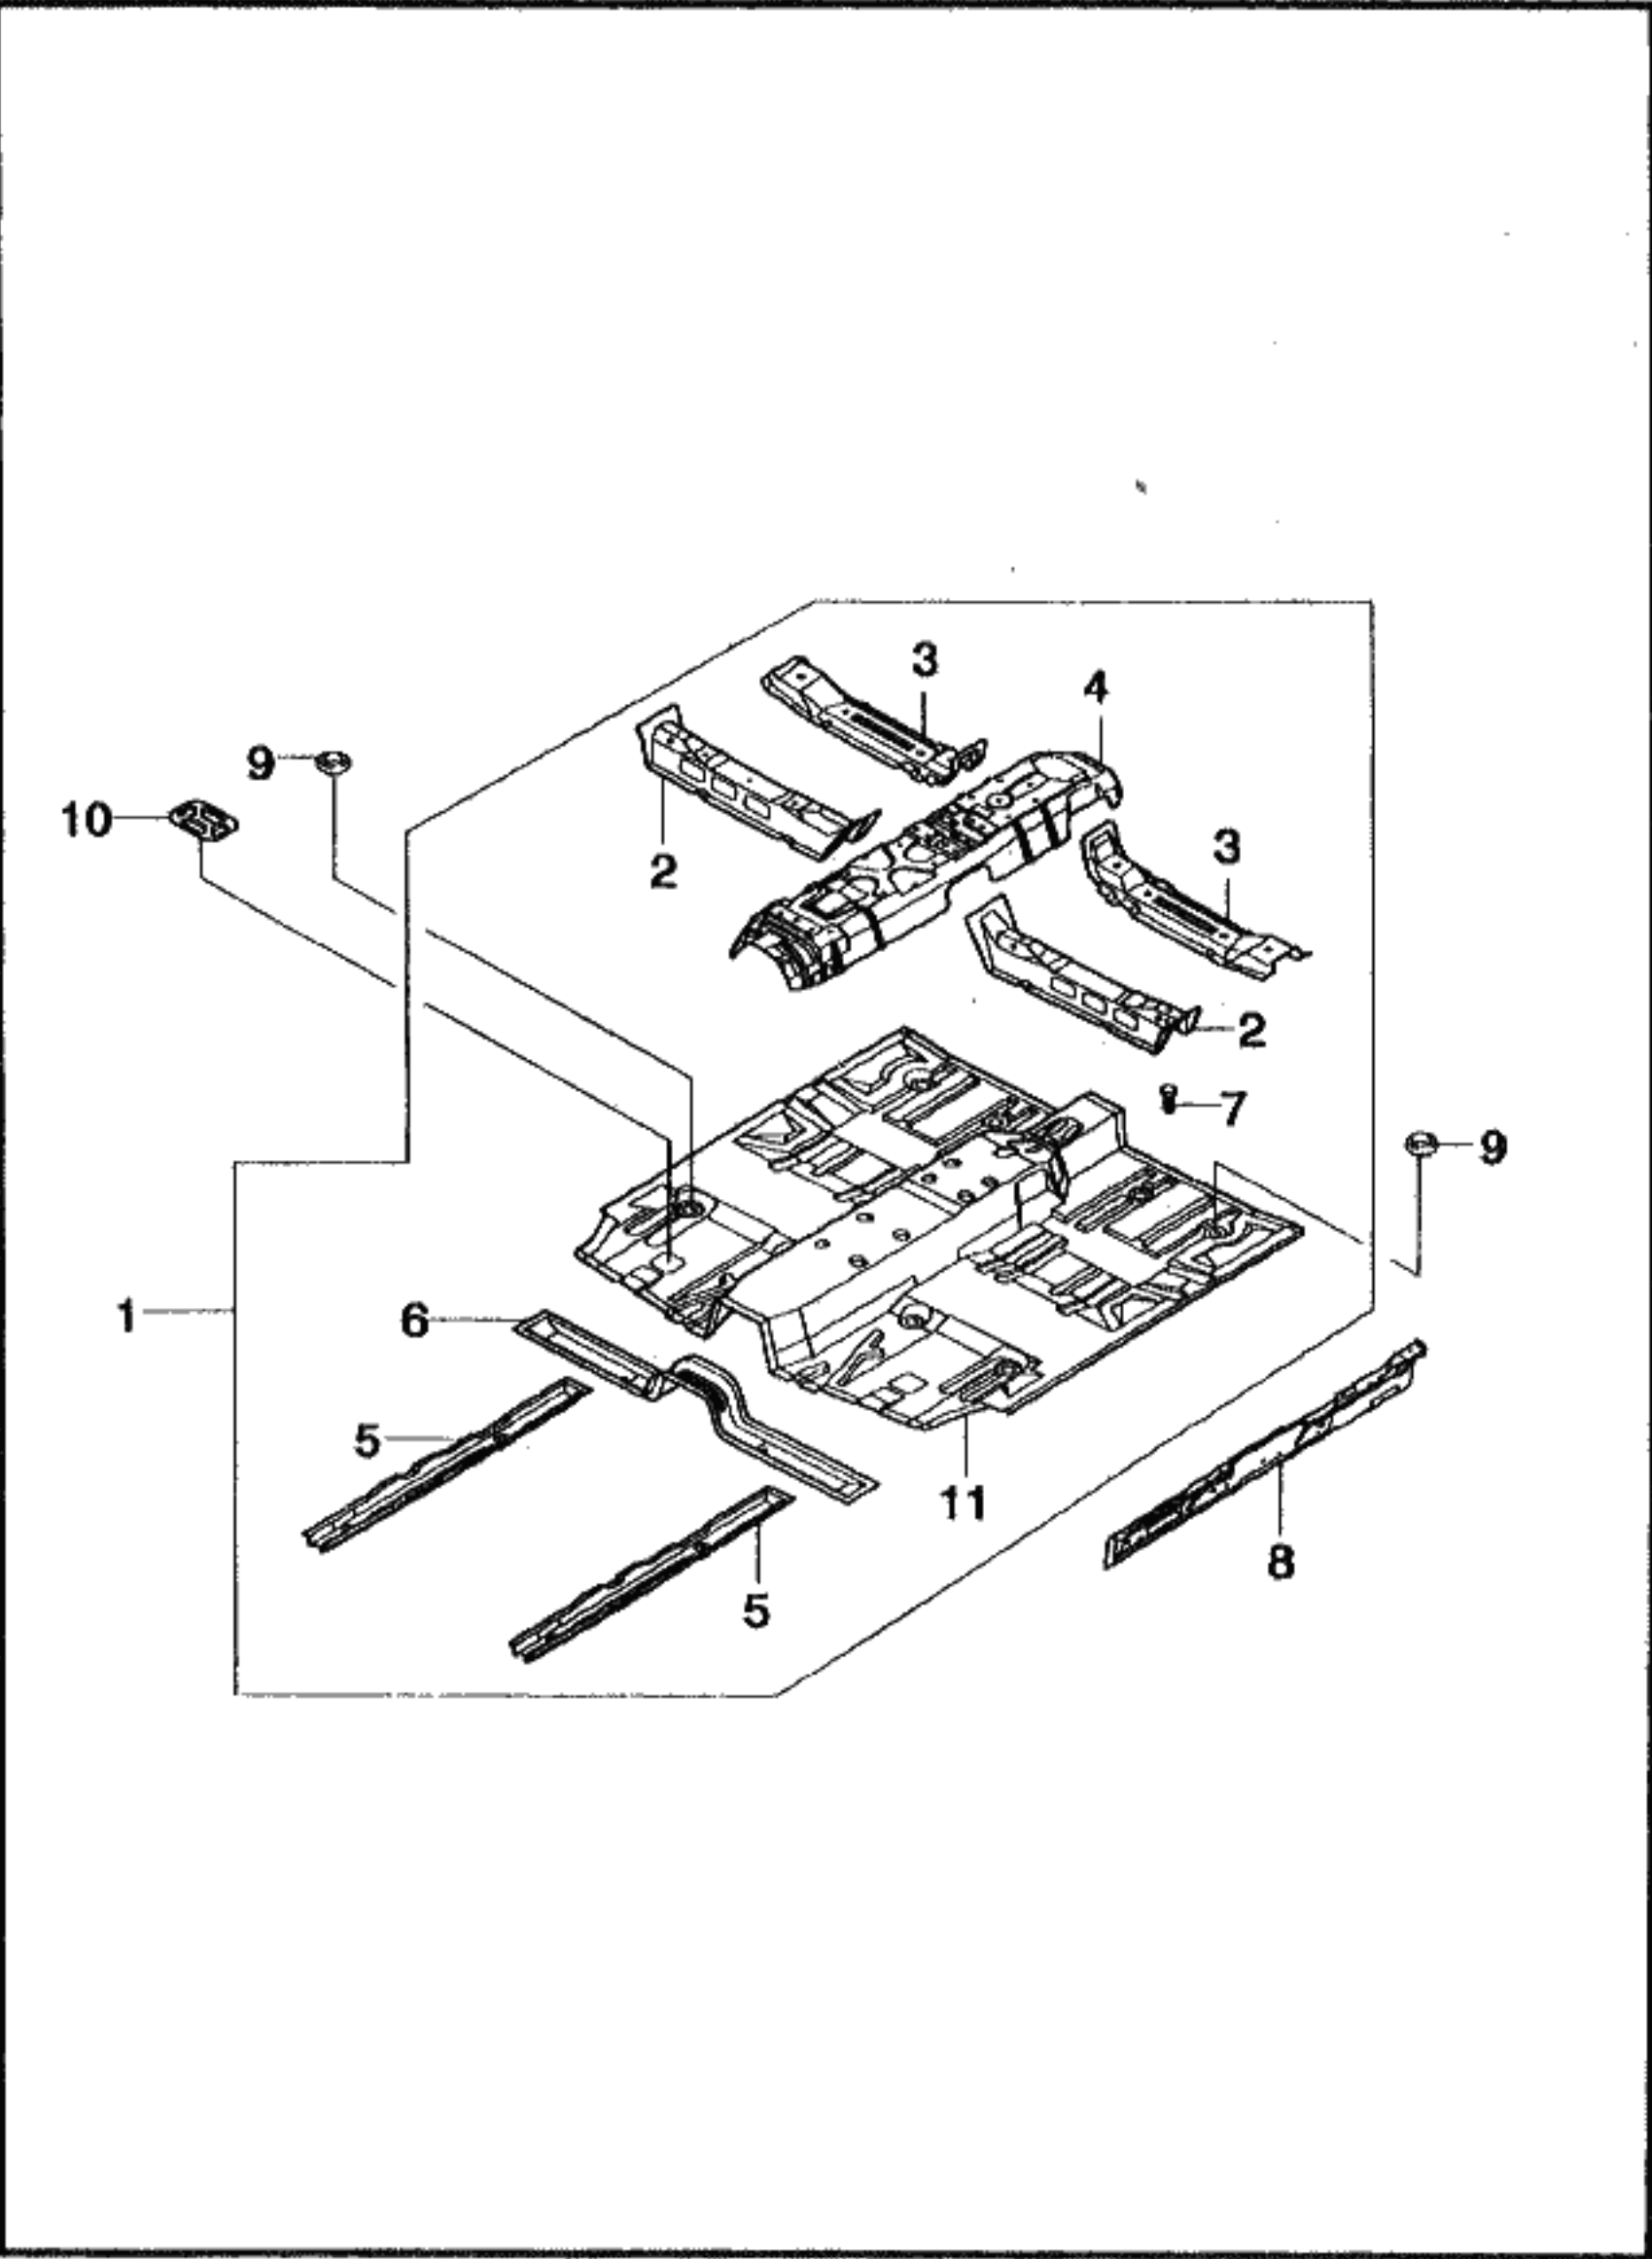


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09250-30005	.	S	S			13					
	[10]		(E)CAP-FLOOR PANEL,FR				(F)CHAPEAU					
			(D)DECKEL				(S)TAPA					
	96228047	.	S	S			2					
	[11]		(E)PANEL-FLOOR,FR				(F)PANNEAU-PLANCHER,AVANT					
			(D)VERKLEIDUNG,BODEN,VORNE				(S)PANEL-PISO,FRENTE					
	A96227963	.	S	S			1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC						M = MANUAL T/A						
CDX = 2.0 DOHC						A = AUTOMATIC T/A						
						. = COMMON						


6520 REAR FLOOR PANEL

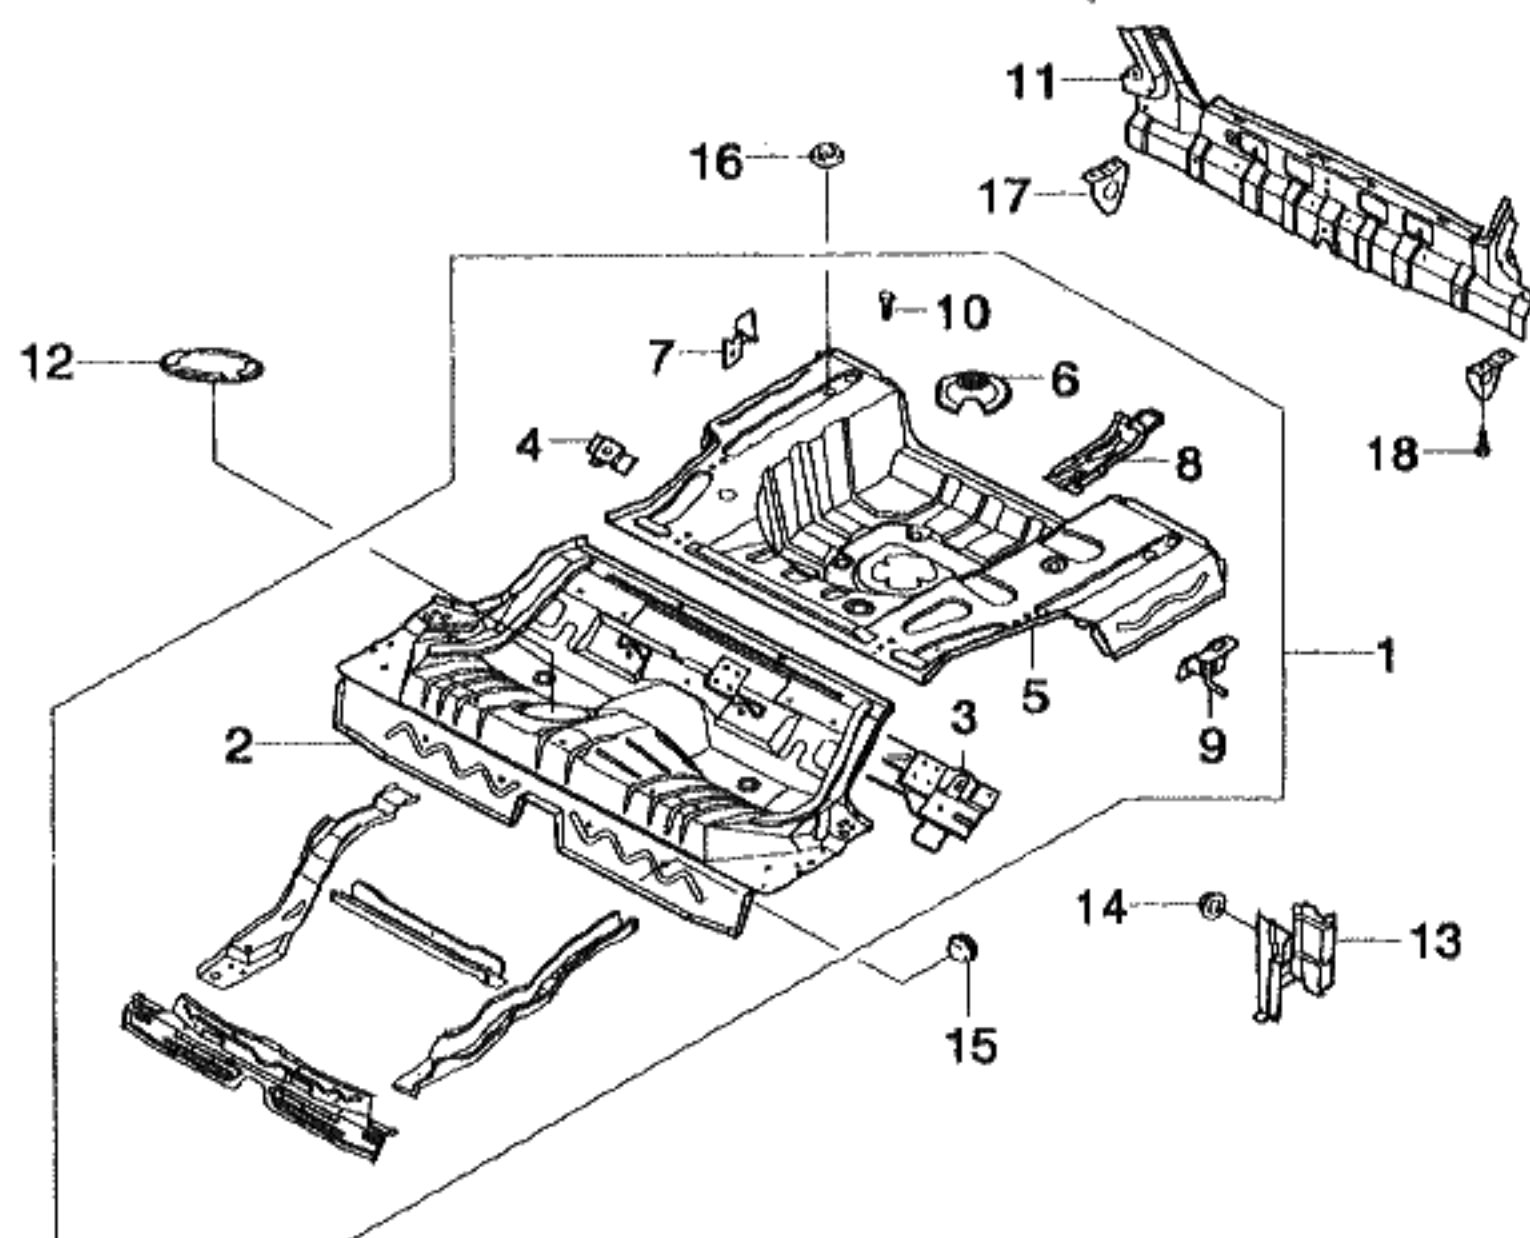


KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X								C D X
	[01] A96227975	(E)PANEL A-FLOOR,RR (D)VERKLEIDUNG,BODEN,HINTEN	S S				(F)PANNEAU-PLANCHER (S)PANEL-PISO,ATRAS	1		RB	
	[02] A96227981	(E)PANEL-RR FLOOR,FR (D)VERKLEIDUNG,BODEN,VORNE	S S				(F)PANNEAU-PLANCHER,AVANT (S)PANEL-PISO,FRENTE	1			
	[03] 96225376	(E)REINF A-RR FLOOR,FR (D)VERSTÄRKUNG	S S				(F)RENFORCEMENT (S)REFUERZO	1			
	[04] 96206071	(E)BRACKET-RR CUSHION,RR (D)TRÄGER	S S				(F)SUPPORT (S)SOPORTE	2			
	[05] A96227986	(E)PANEL-RR FLOOR,RR (D)VERKLEIDUNG,BODEN,HINTEN	S S				(F)PANNEAU-PLANCHER (S)PANEL-PISO,ATRAS	1			
	[06] 96206066	(E)STAND A-SPARE WHEEL (D)STÄNDER,ERSATZRAD	S S				(F)SUPPORT-ROUE DE SECOURS (S)PIE-RUEDA DE REPUESTO	1			
	[07] 96206124	(E)BRACKET A-CANISTER MTG (D)TRÄGER,KANISTER	S S				(F)SUPPORT (S)SOPORTE-BOTE	RH 1			
	[08] 96227988	(E)TOWING EYE A-RR (D)TRÄGER	S S				(F)SUPPORT (S)SOPORTE	1			
	[09] 96206121	(E)HANGER A-EXH PIPE RR INR (D)KLAMMER	S S				(F)PINCE (S)ABRAZADERA	LH 1			
	[10] 09119-05005	(E)BOLT (D)SCHRAUBE	S S				(F)BOULON (S)PERNO	2			
LEVEL				T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

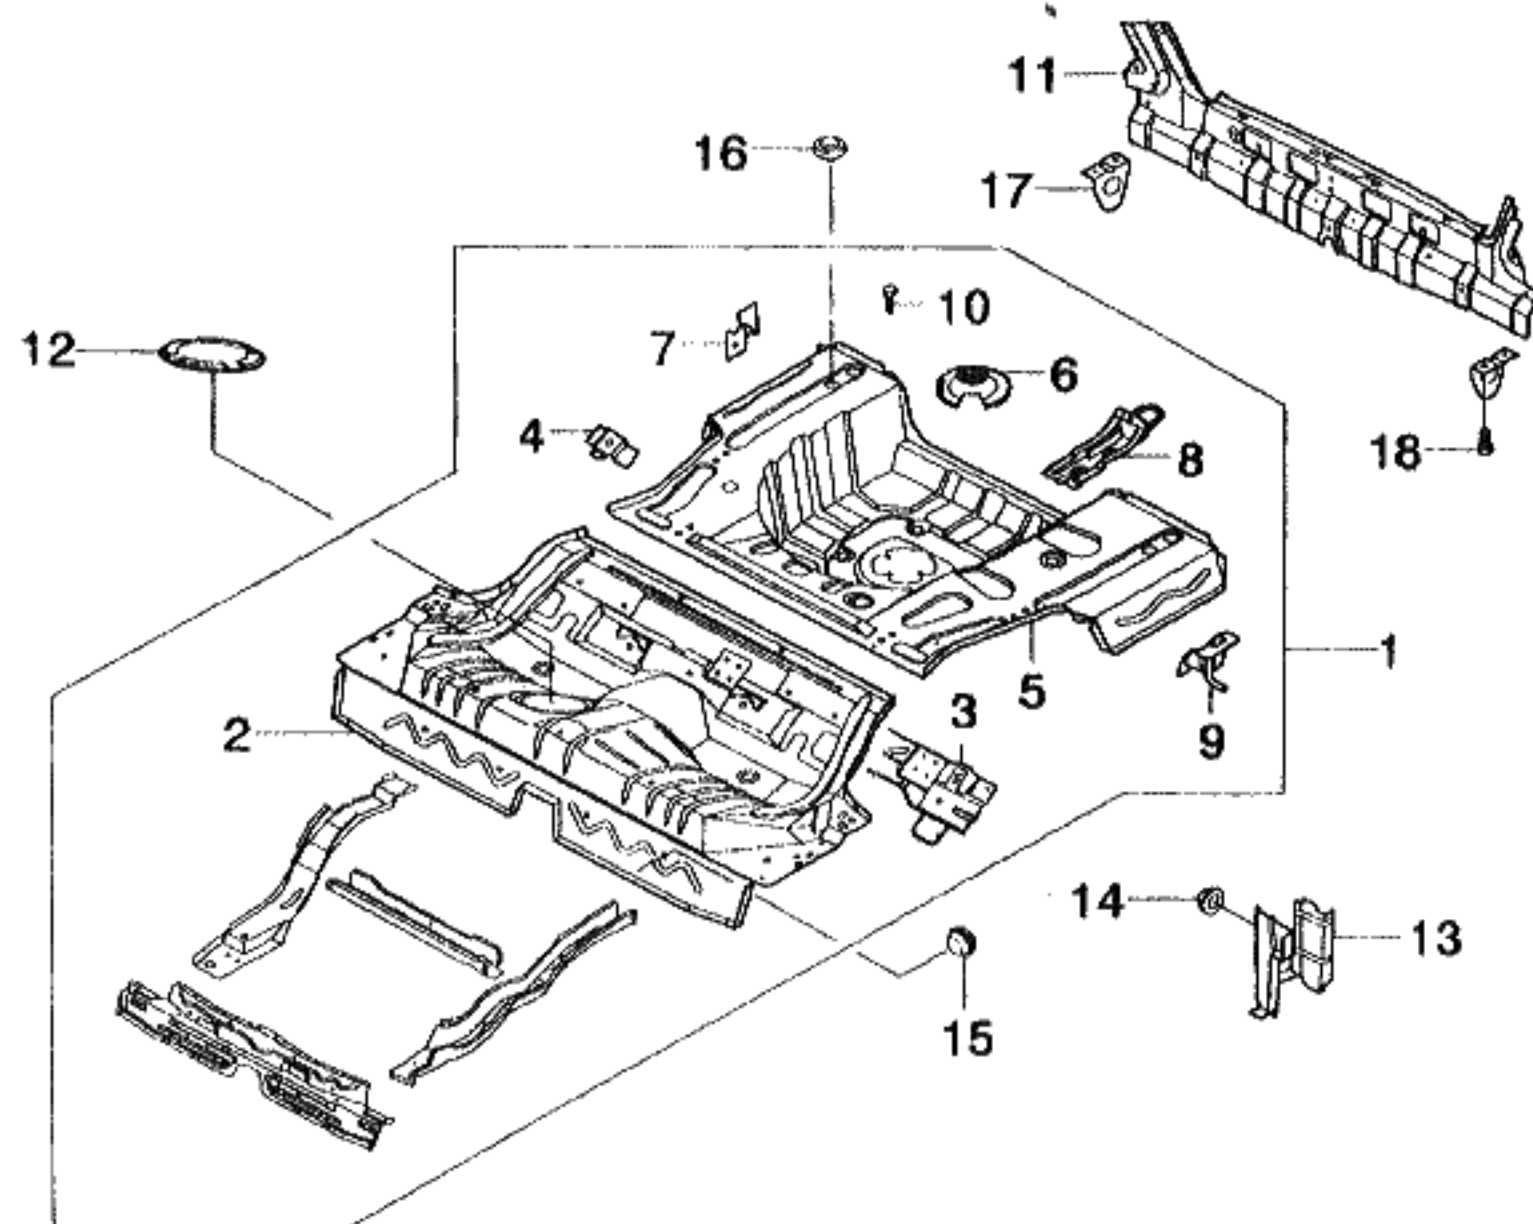

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 96216566	(E) PANEL A-BACK, LOWER (D) VERKLEIDUNG, HINTEN, UNTEN	S	S			1	(F) PANNEAU-ARRIERE BAS (S) PANEL-RESPALDO BAJA			BB
	[12] 96245793	(E) COVER A-FUEL TANK HOLE (D) DECKEL	S	S			1	(F) CARTER (S) CUBIERTA			
	[13] 96228055	(E) BRACKET A-JACK MTG (D) TRÄGER	S	S			LH 1	(F) SUPPORT (S) SOPORTE			
	[14] 08316-25063	(E) NUT-FLANGE (D) MUTTER	S	S			LH 3	(F) ECROU (S) TUERCA			
	[15] 96244896	(E) PLUG (D) STÖPSEL	S	S			2	(F) BOUCHON (S) TAPON			
	[16] 09250-35002	(E) PLUG (D) STÖPSEL	S	S			4	(F) BOUCHON (S) TAPON			
	[17] 96228057 Y 96228061	(E) BRACKET-TIE DOWN HOOK (D) TRÄGER	S	S			2	(F) SUPPORT (S) SOPORTE	970629		
	[18] 09118-10001	(E) BOLT-W/WASHER (D) SCHRAUBE	S	S			2 970630	(F) BOULON (S) PERNO			
							4				
LEVEL					T/A (TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

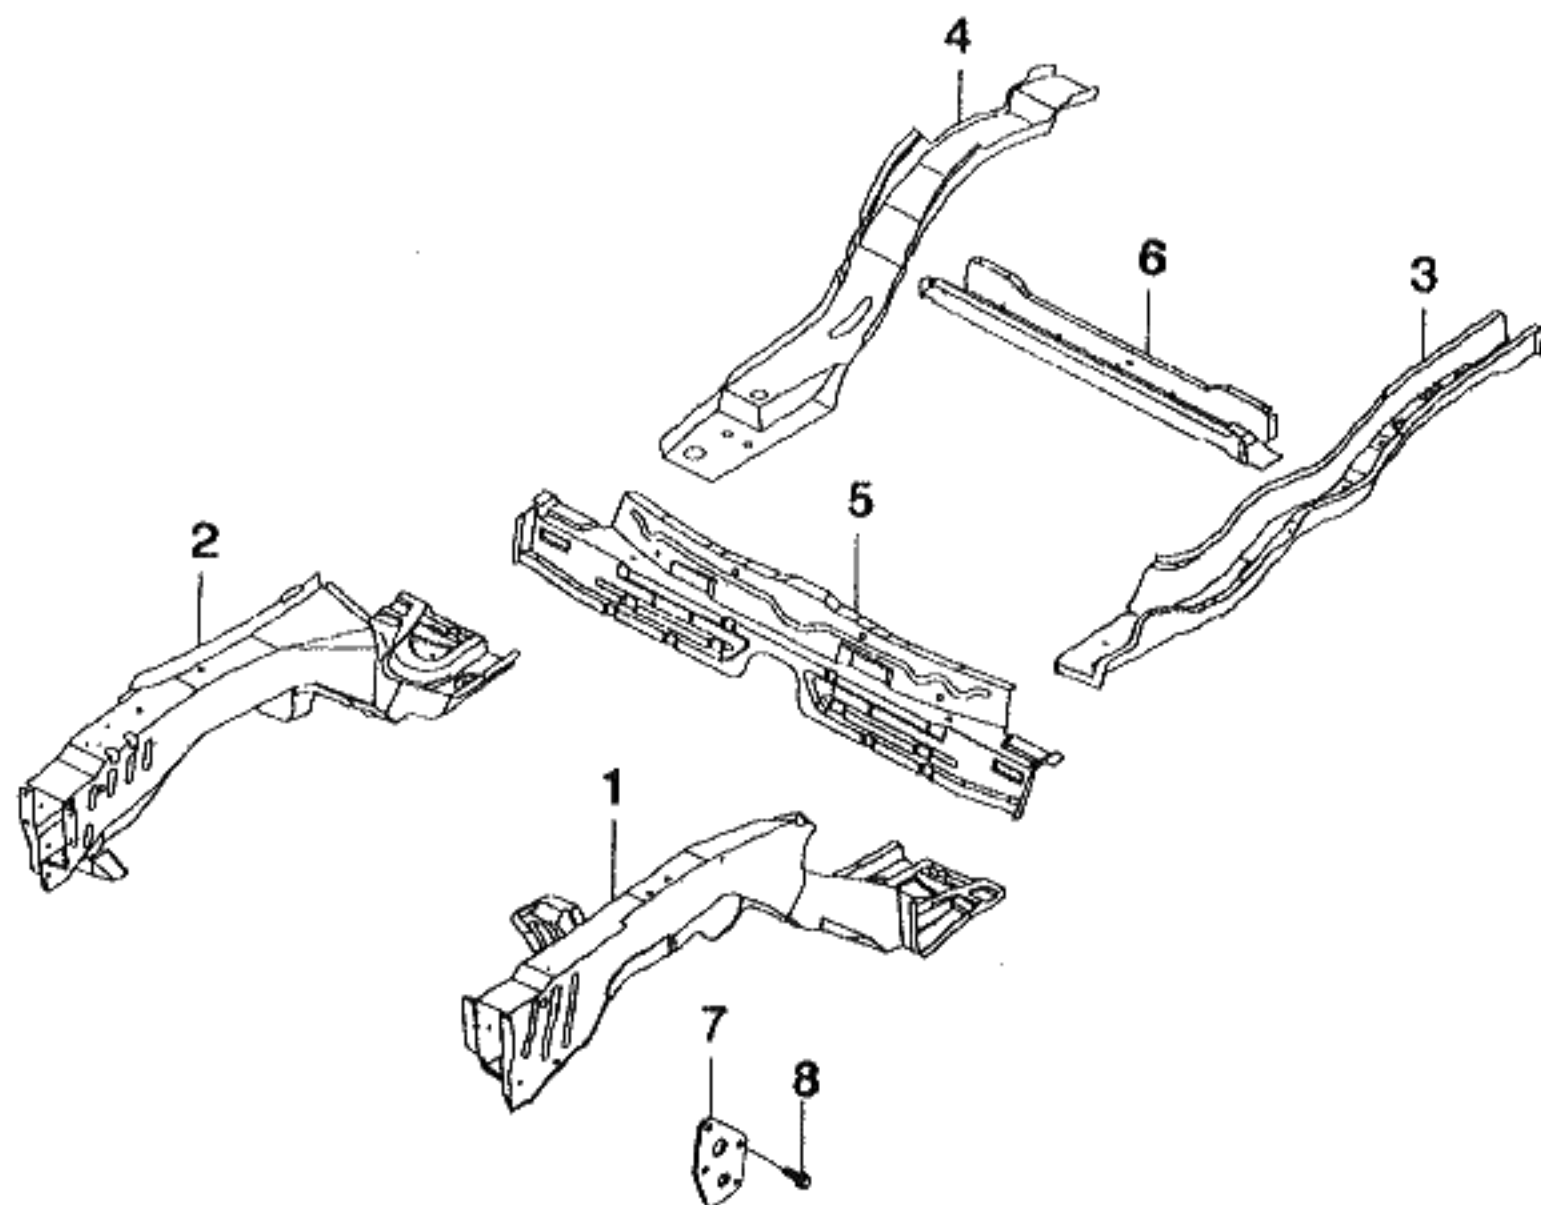


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96228300	(E)FRAME A-FR (D)RAHMEN . S S					(F)CADRE (S)ARMADURA LH 1				
	[02] 96228301	(E)FRAME A-FR (D)RAHMEN . S S					(F)CADRE (S)ARMADURA RH 1				
	[03] 96227998	(E)LONGITUDINAL A-RR (D)LÄNGENTEIL,HINTEN . S S					(F)LONGITUDINAL-ARRIERE (S)LONGITUDINAL-TRASERO LH 1				
	[04] 96227999	(E)LONGITUDINAL A-RR (D)LÄNGENTEIL,HINTEN . S S					(F)LONGITUDINAL-ARRIERE (S)LONGITUDINAL-TRASERO RH 1				
	[05] 96228016	(E)CROSSMEMBER A-FLOOR,FR (D)QUERTRÄGER . S S					(F)BARRE DE TRAVERSE (S)TRANSVERSAL 1				
	[06] 96228019	(E)CROSSMEMBER A-FLOOR,RR (D)QUERTRÄGER . S S					(F)BARRE DE TRAVERSE (S)TRANSVERSAL 1				
	[07] 96228284	(E)BRACKET-TIE DOWN HOOK,FR (D)TRÄGER . S S					(F)SUPPORT (S)SOPORTE 2				
	[08] 09118-10001	(E)BOLT-W/WASHER (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 6				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

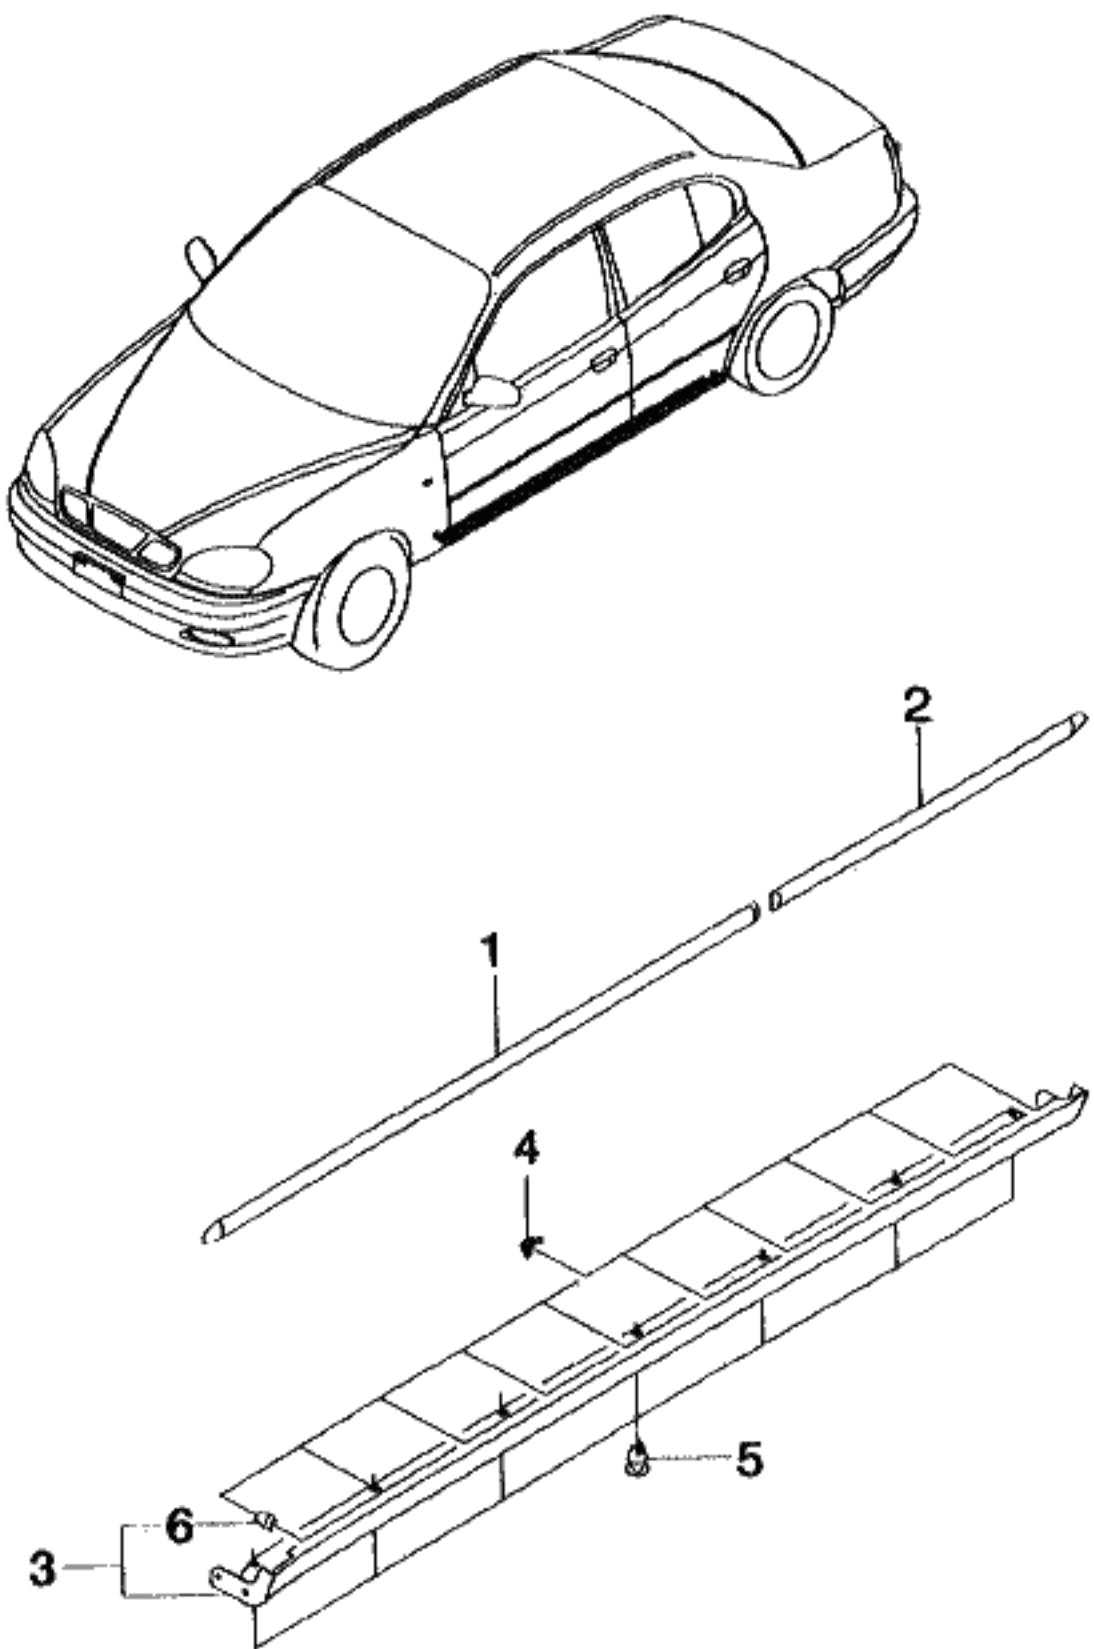


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)MOLDING A-DOOR PROTV,FR					(F)MOULURE				
	96205720	(D)PREBTEIL	.	S S			(S)MOLDURA				
	96205721		.	S S			LH 1				
			.	S S			RH 1				
	[02]	(E)MOLDING A-DOOR PROTV,RR					(F)MOULURE				
	96205722	(D)PREBTEIL	.	S S			(S)MOLDURA				
	96205723		.	S S			LH 1				
			.	S S			RH 1				
	[03]	(E)MOLDING A-ROCKER PANEL					(F)MOULURE				
	96205728	(D)MOLDURA	.	S S			(S)PREBTEIL				
	96205729		.	S S			LH 1				
			.	S S			RH 1				
	[04]	(E)CLIP					(F)ATTACHE				
	09409-10308	(D)KLEMME	.	S S			(S)GRAPA				
			.	S S			20				
	[05]	(E)CLIP					(F)ATTACHE				
	09409-09302	(D)KLEMME	.	S S			(S)GRAPA				
			.	S S			14				
	[06]	(E)CLIP					(F)ATTACHE				
	09409-05309	(D)KLEMME	.	S S			(S)GRAPA				
			.	S S			20				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


6630 OUTSIDE MIRROR

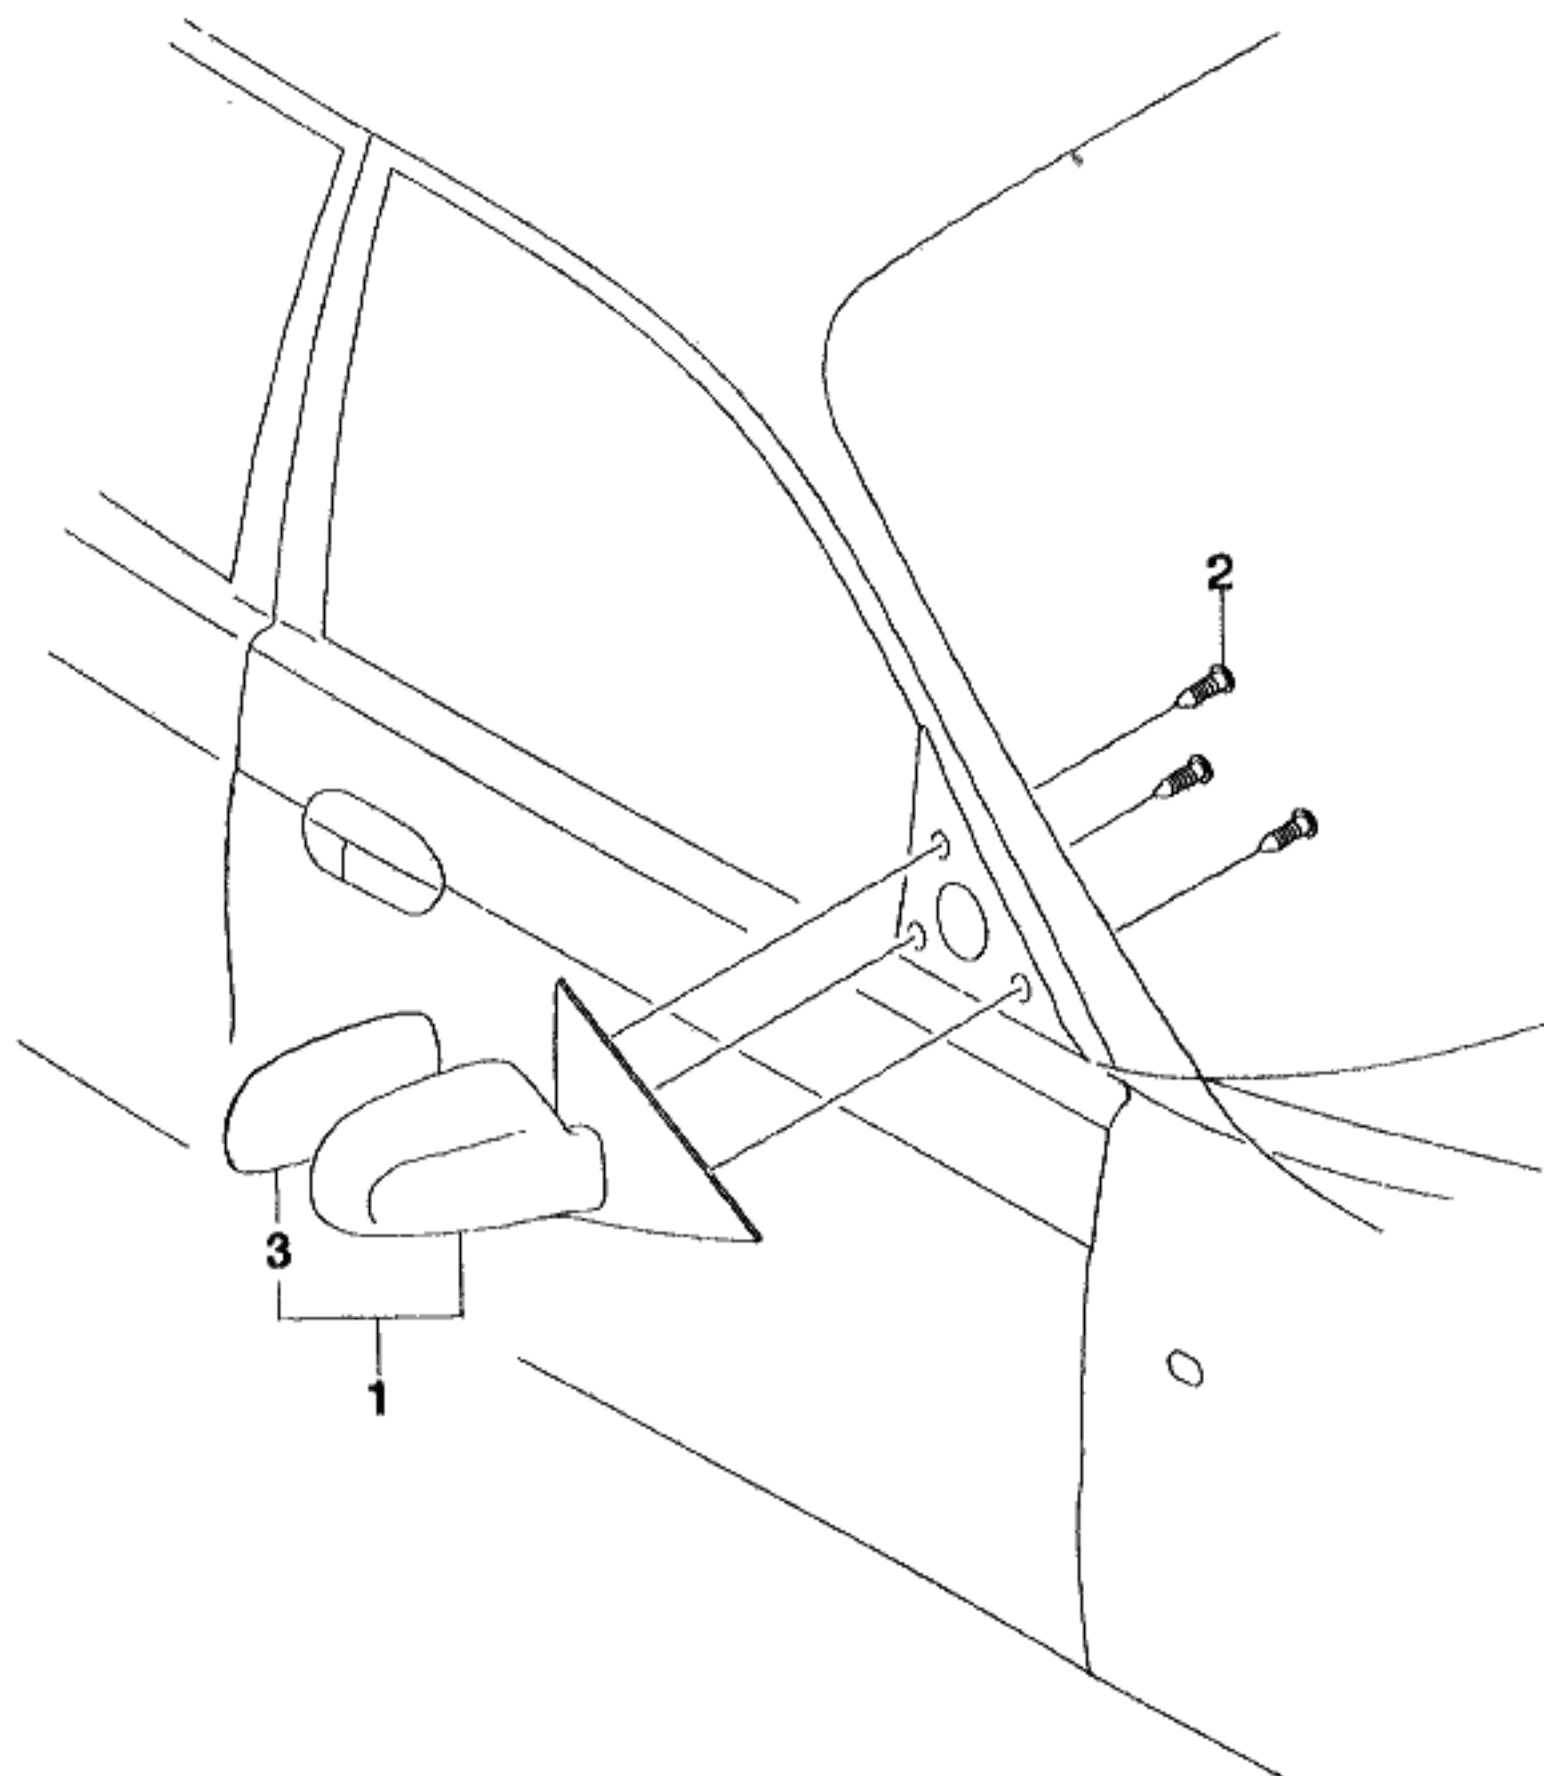



KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)MIRROR (D)SPIEGEL	A-O/SIDE FOLDING AUBEN			(F)RETROVISEUR-EXTERIEUR (S)ESPEJO-EXTERNO					
	96205701	.	O	S	&DM7&DM9	LH	1				
	96205704	.	O	S	&DM7-VB4	RH	1				
	96252187	.	A	A	&DM7&DM9&VB4	RH	1				
	96205699	.	S	.	&DM6&DM9	LH	1				
	96205703	.	S	.	&DM6-VB4	RH	1				
	96252178	.	A	A	&DM6&DM9&VB4	RH	1				
	[02]	(E)SCREW-MACHINE (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	09138-06027	.	S	S			6				
	[03]	(E)GLASS (D)GLAS				(F)GLACE (S)VIDRIO					
	31121795-2	.	S	S		LH	1				
	31121934-2	.	S	S		RH	1				
	31122032-4	.	A	A	&VB4	RH	1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

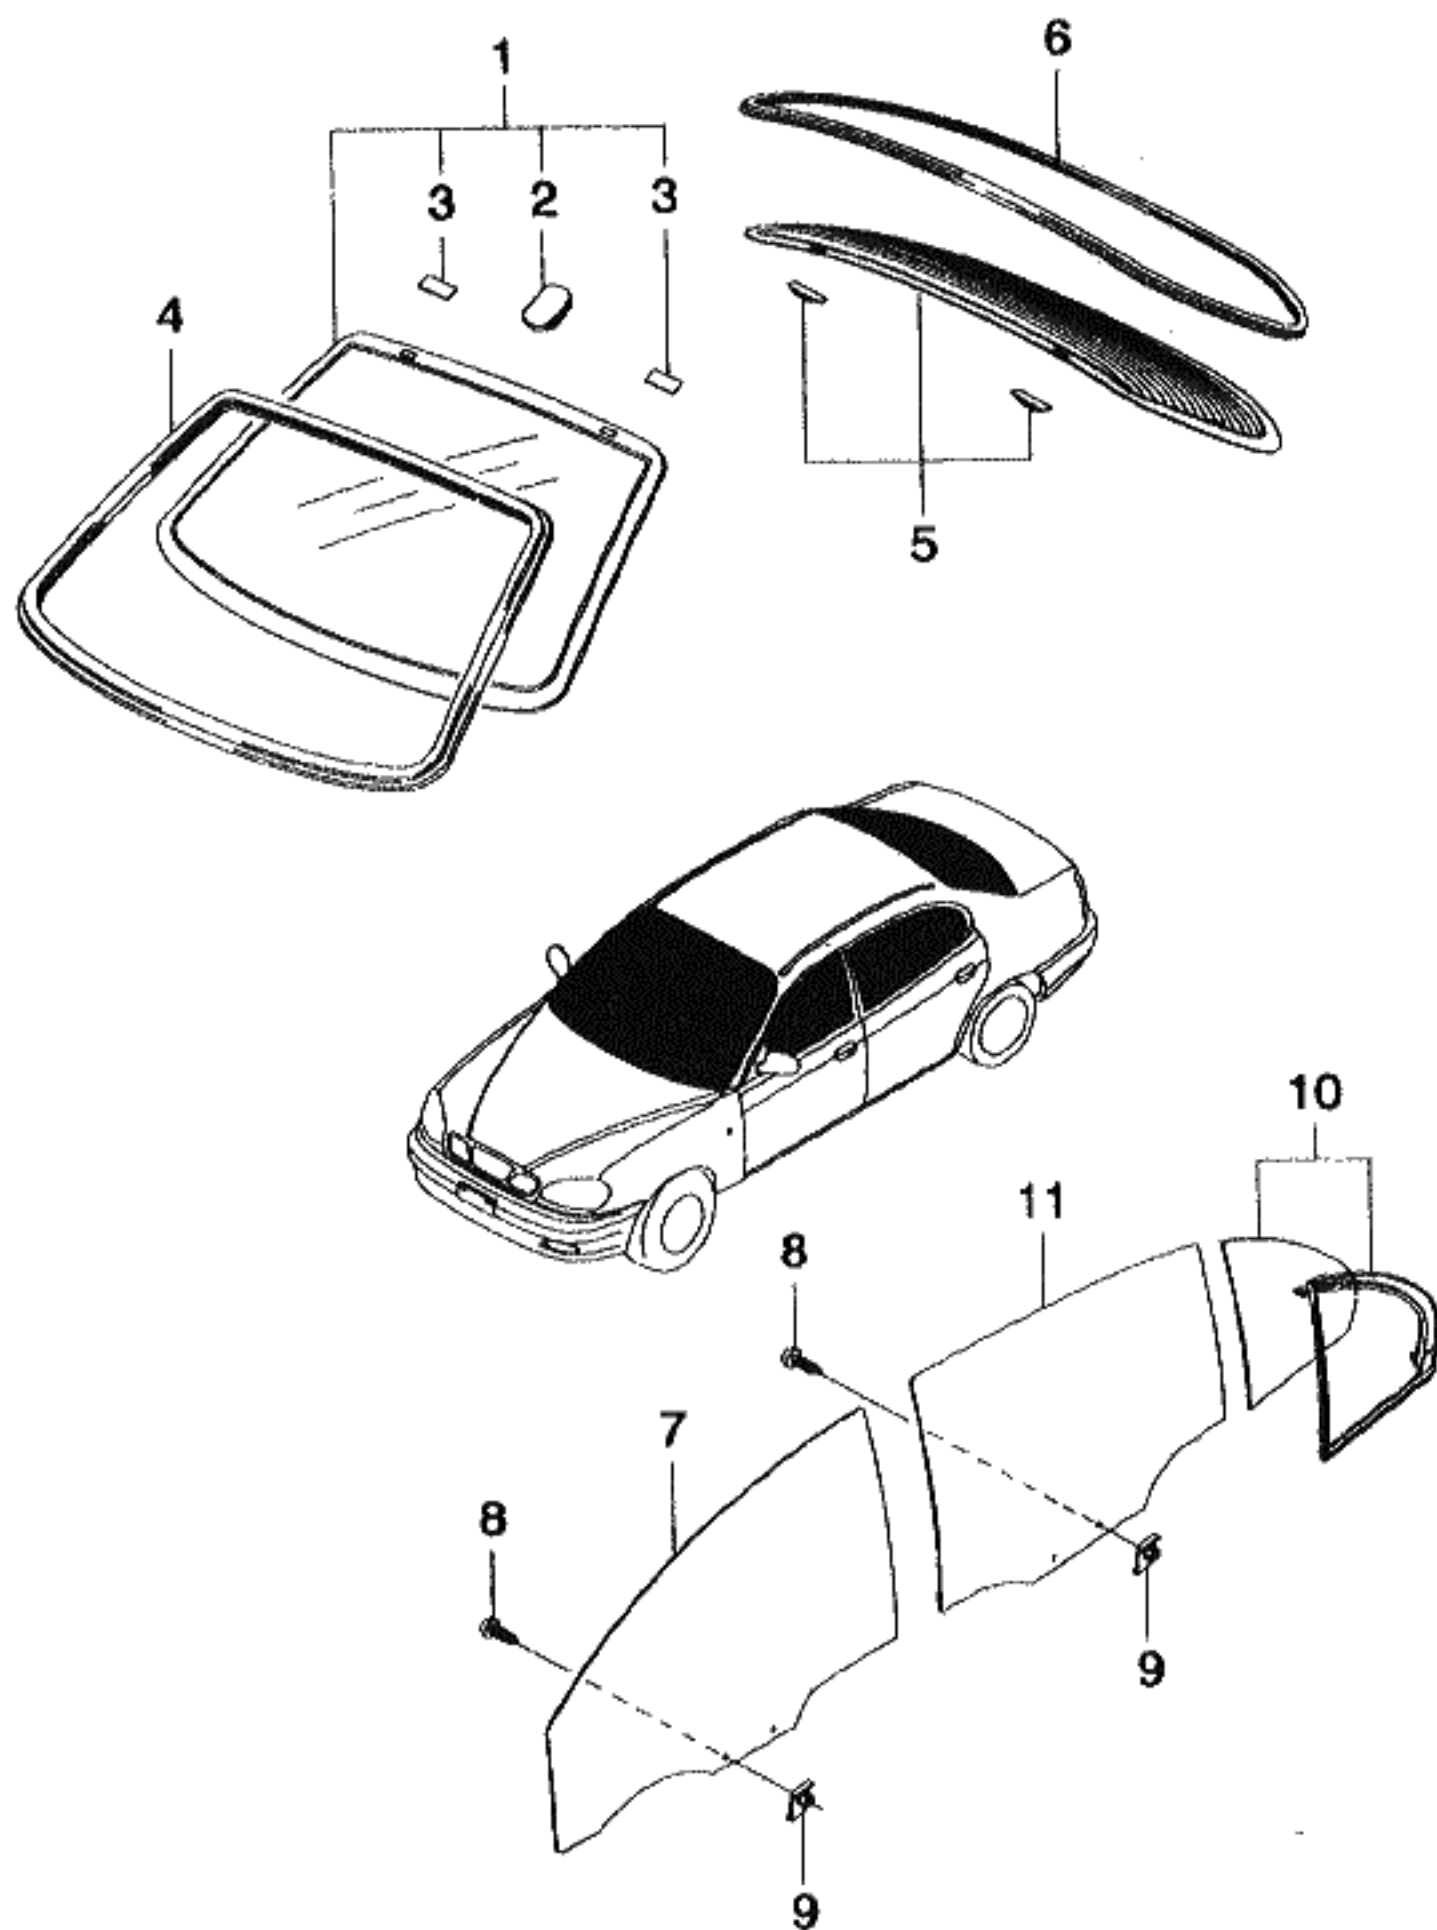

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96206311	(E)GLASS A-WINDSHIELD (D)GLAS,WINDSCHUTZSCHEIBE	S	S			1			(F)GLACE-PARE-BRISE (S)VIDRIO-PARABRISAS	
	[02] 90126071	(E)PLATE-CARRIER (D)PLATTE	S	S			1			(F)PLAQUE (S)PLACA	
	[03] 96221387	(E)STOPPER-GLASS,UPPER (D)STÖPSEL	S	S			2			(F)ARRETOIR OU BOUCHON (S)TAPON	
	[04] 96206312	(E)MOLDING A-WINDSHIELD (D)PRESTEIL	S	S			1			(F)MOULURE (S)MOLDURA	
	[05] 96206313	(E)GLASS-HEATED BACK WINDOW (D)GLAS	S	S			1			(F)GLACE-FENETRE ARRIERE (S)VIDRIO-VENTANA TRASERA	
	[06] 96206314	(E)MOLDING A-BACK GLASS (D)PRESTEIL,FENSTERSCHEIBE	S	S			1			(F)MOULURE-FENETRE ARRIERE (S)MOLOURA-VENTANA TRASERA	
	[07] 96205240 96205241	(E)GLASS-DROP WDO FR DOOR (D)GLAS	S	S			LH 1 RH 1			(F)GLACE (S)VIDRIO	
	[08] 09148-06002 09148-06002	(E)NUT-SPEED (D)MUTTER	S	S	FR RR		4 4			(F)ECROU (S)TUERCA	
	[09] 03140-63163 03140-63163	(E)SCREW-TAPPING (D)SCHRAUBE	S	S	FR RR		4 4			(F)VIS (S)TORNILLO	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

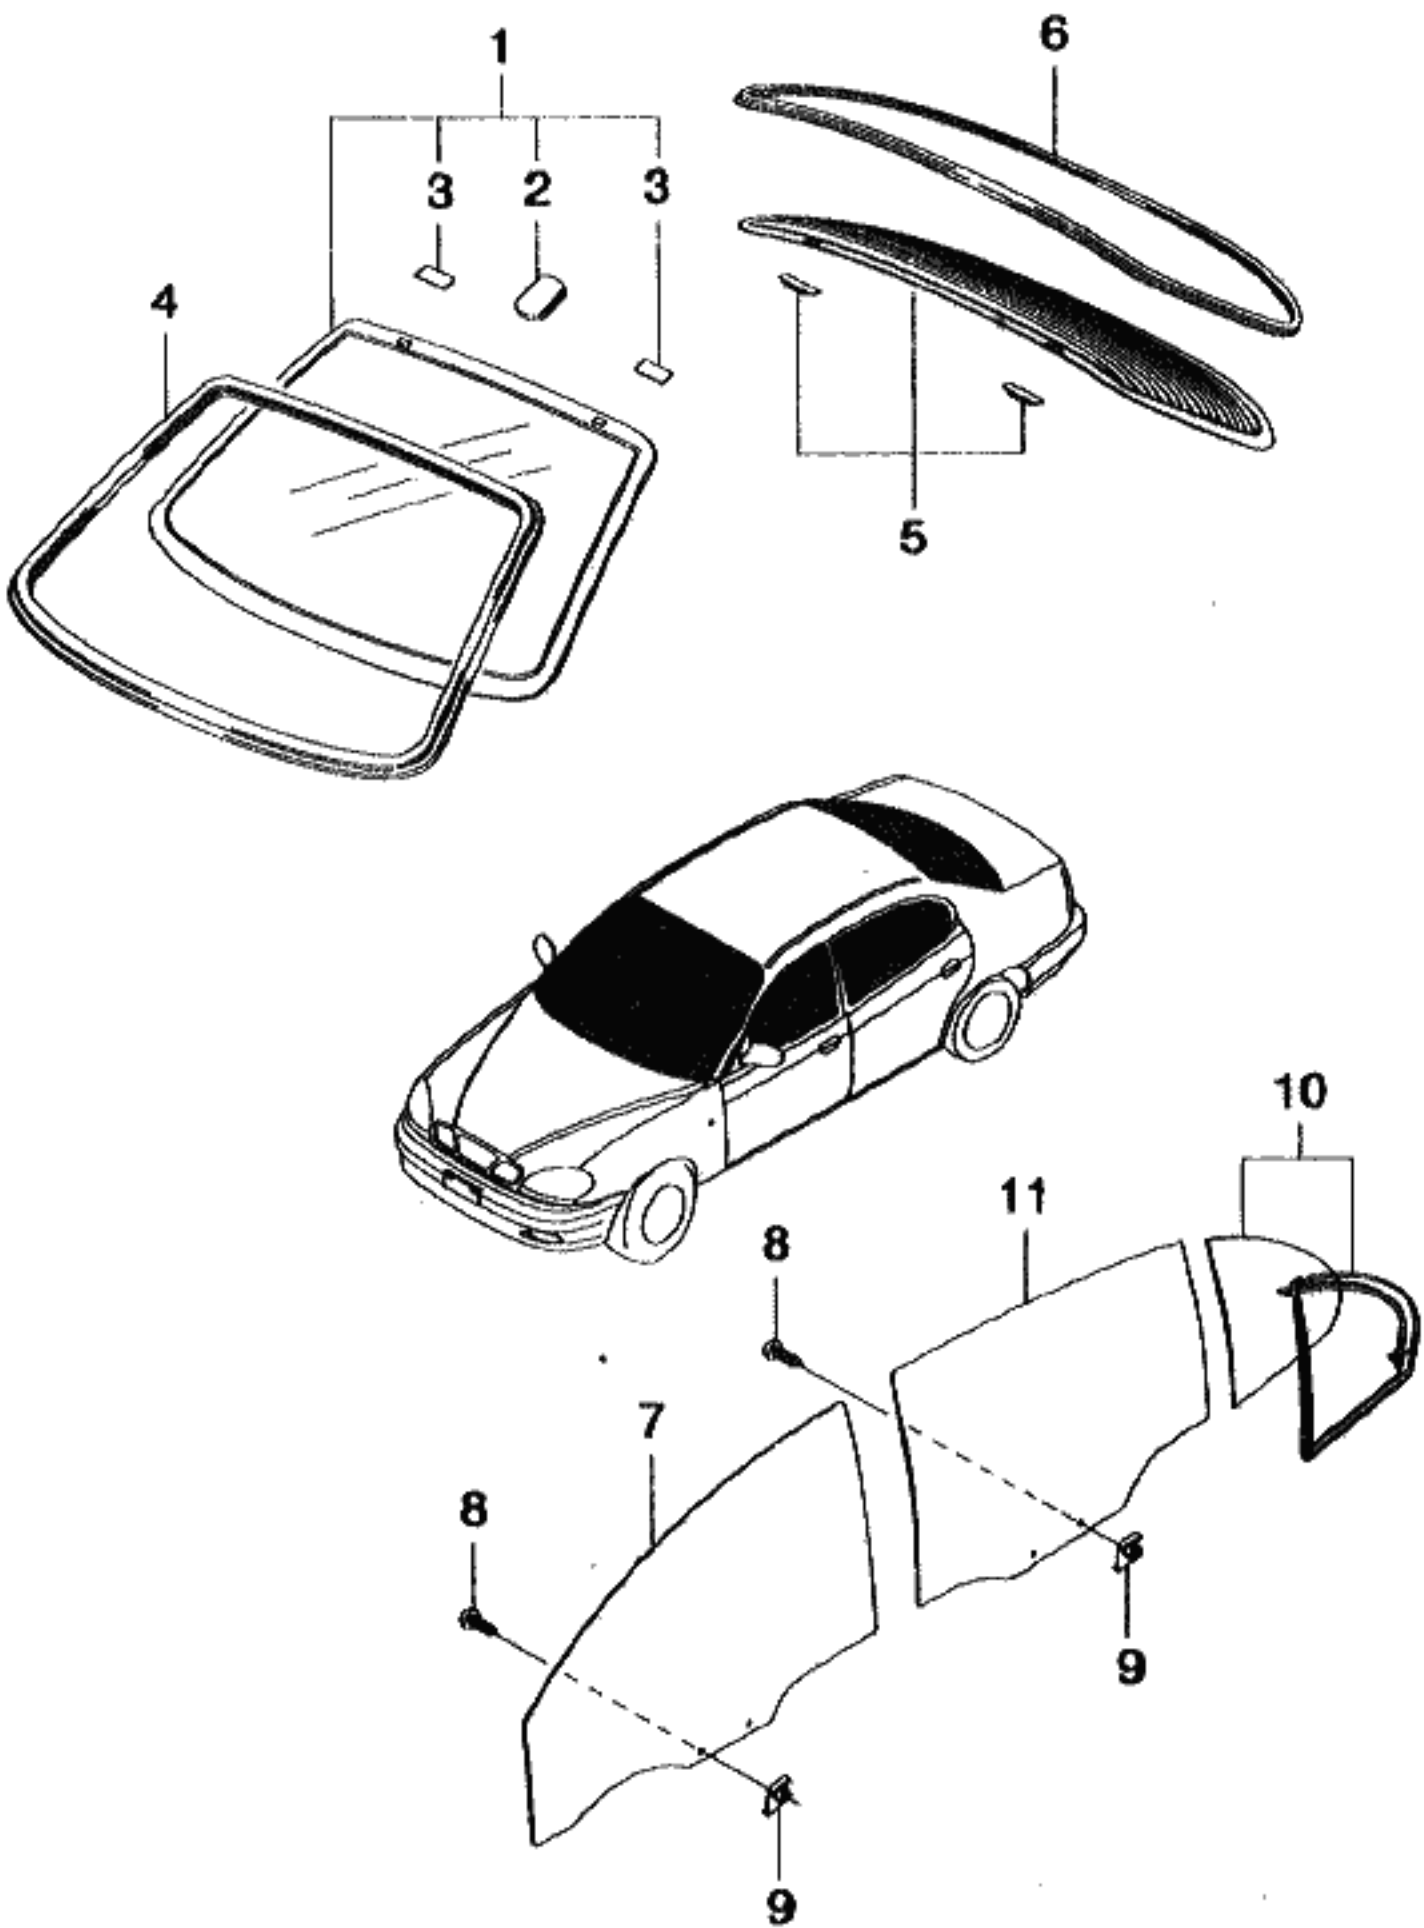


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10]	(E)GLASS-FIXED RR DOOR (D)GLAS				(F)GLACE (S)VIDRIO					
	96205308	.	S	S		LH 1					
	96205309	.	S	S		RH 1					
	[11]	(E)GLASS-DROP WDO RR DOOR (D)GLAS				(F)GLACE (S)VIDRIO					
	96205331	.	S	S		LH 1					
	96205332	.	S	S		RH 1					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

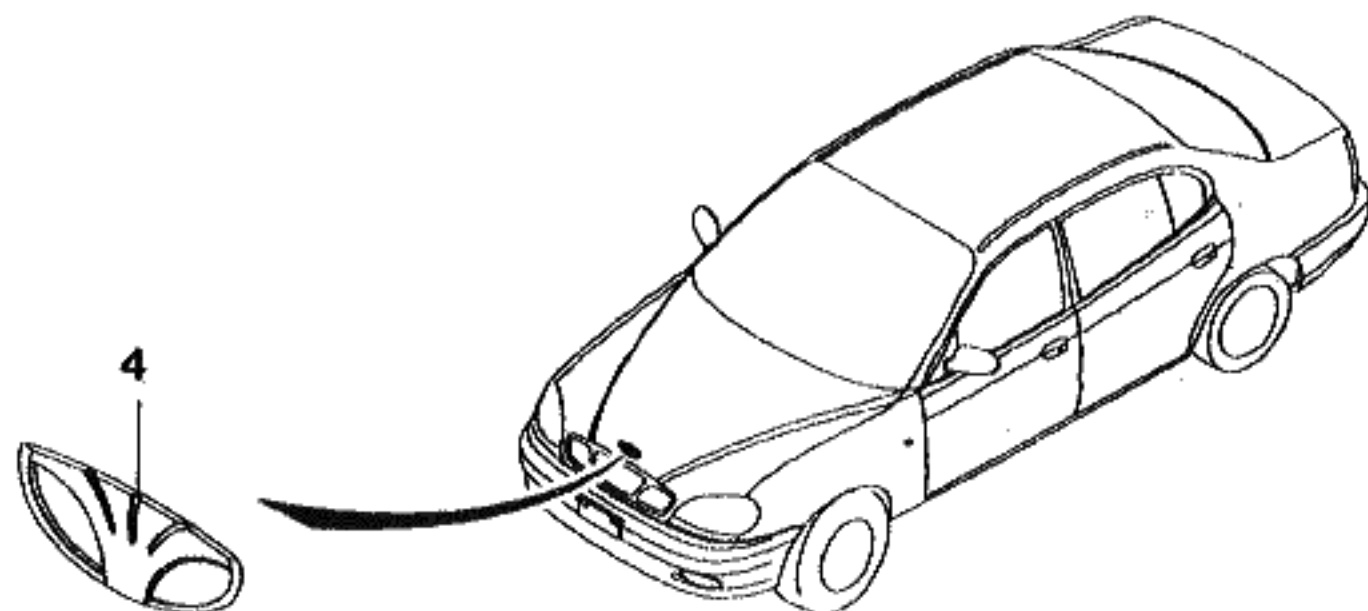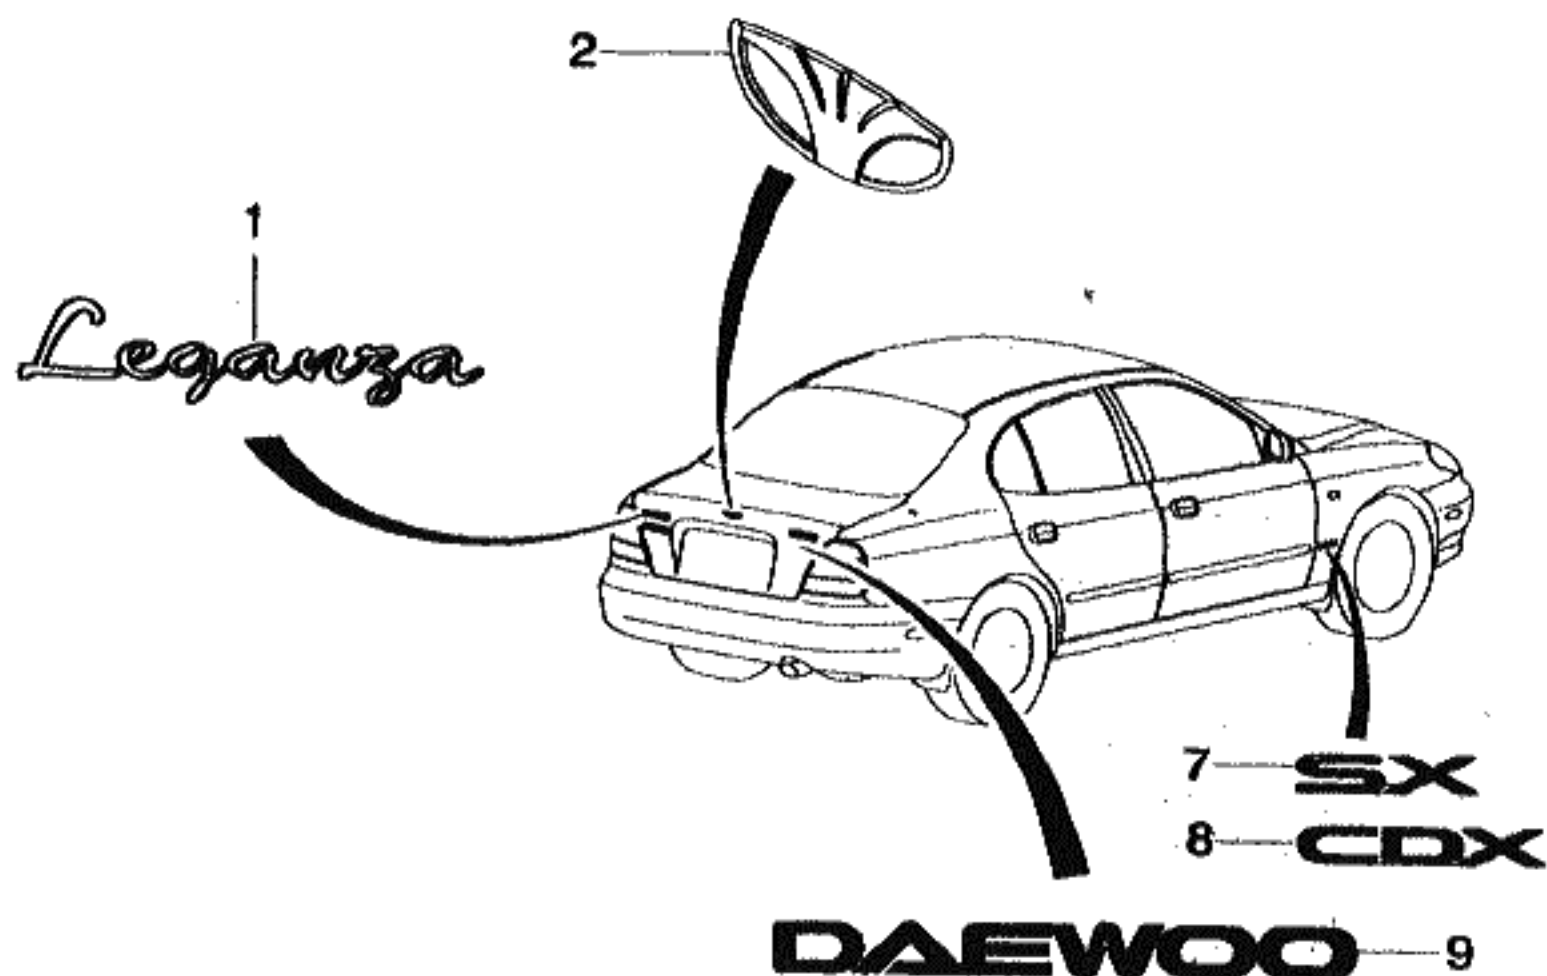


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96246111	(E) LETTERING A-LEGANZA (D) BESCHRIFTUNG-LEGANZA . S S					(F) LETTRES-LEGANZA (S) ANAGRAMA- LEGANZA 1				
	[02] 96211400	(E) EMBLEM A (D) EMBLEME-CAPOT DE COFFRE . S S					(F) EMBLEME-CAPOT DE COFFRE (S) EMBLEMA 1				
	[04] 96211400	(E) EMBLEM A (D) EMBLEME-CAPOT DE COFFRE . S S					(F) EMBLEME-CAPOT DE COFFRE (S) EMBLEMA 1				
	[07] 96250312	(E) LETTERING A-SX (D) BESCHRIFTUNG-SX . S .					(F) LETTRES-SX (S) ANAGRAMA- SX 1				
	[08] 96250313	(E) LETTERING A-CDX (D) BESCHRIFTUNG-CDX . . S					(F) LETTRES-CDX (S) ANAGRAMA- CDX 1				
	[09] 96303494	(E) LETTERING A-DAEWOO (D) BESCHRIFTUNG-DAEWOO . S S					(F) LETTRES-DAEWOO (S) ANAGRAMA-DAEWOO 1				


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

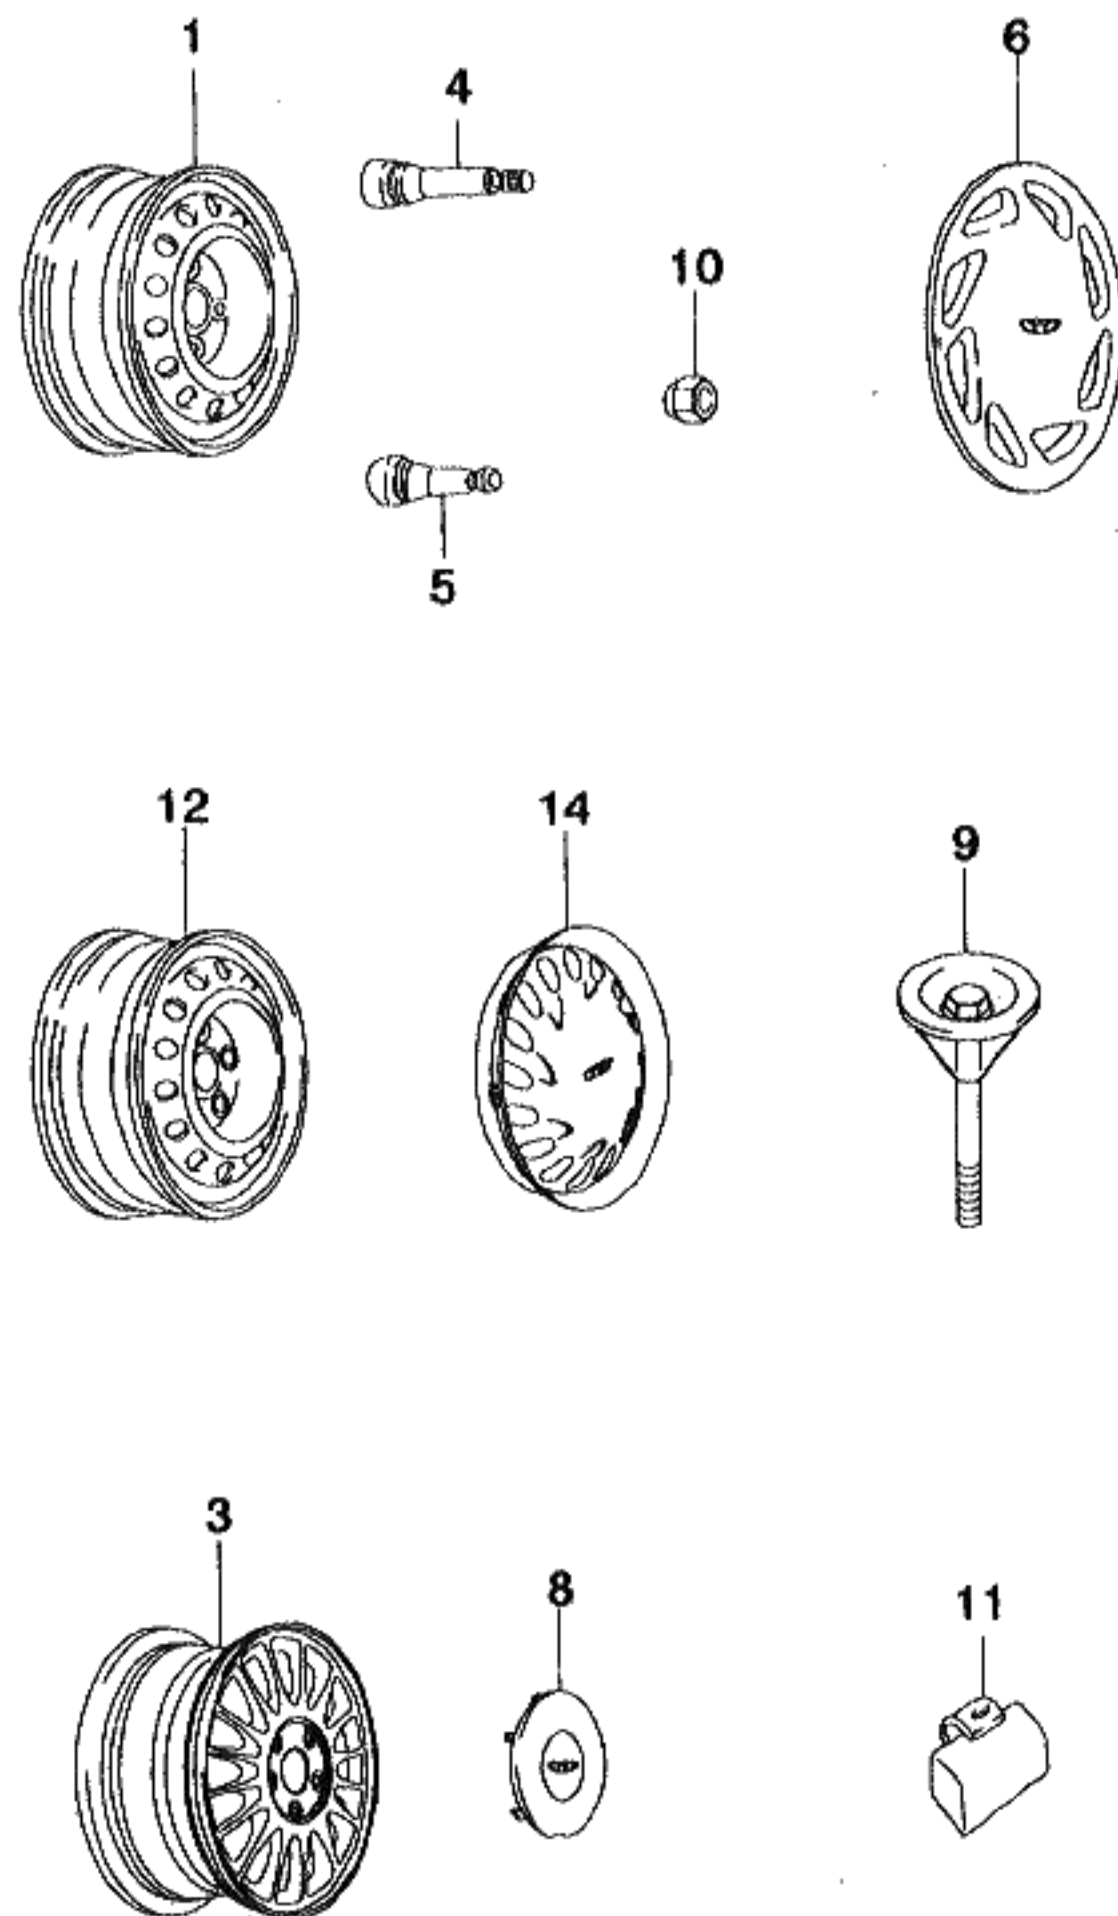


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)WHEEL A-5 1/2JX14 (D)RAD					(F)ROUE (S)RUEDA					
	90304218	. S .		STEEL		5			14"		HY	
	[03]	(E)WHEEL-ALLOY,6JX15 (D)RAD					(F)ROUE (S)RUEDA					
	96213105	. O S		ALLOY		5			15"		PA	
	[04]	(E)VALVE-TIRE (D)VENTIL,REIFEN					(F)SOUPAPE-PNEU (S)VALVULA-LLANTA					
	90223915	. O .		STEEL		5						
	[05]	(E)VALVE-RUBBER (D)VENTIL,GUMMI					(F)SOUPAPE-CAOUTCHOUC (S)VALVULA-LLANTA					
	11049239	. O S		ALLOY		5						
	[06]	(E)COVER-WHEEL (D)DECKEL					(F)COUVERTURE (S)CUBIERTA					
	96225822	. S .		STEEL		4			14"		VQ	
	[08]	(E)CAP-WHEEL (D)DECKEL RADHÜLSE					(F)CHAPEAU-MOYEU DE ROUE (S)TAPA-CUBO DE RUEDA					
	96225821	. O S		ALLOY		4			15"			
	[09]	(E)BOLT-WING SPARE WHEEL (D)SCHRAUBE					(F)BOULON (S)PERNO					
	96225888	. S .		STEEL		1						
	96233783	. O S		ALLOY		1						
	[10]	(E)NUT (D)MUTTER					(F)ECROU (S)TUERCA					
	09159-12007	. S .				16			14"			
	09159-12007	. O S				20			15"			
	[11]	(E)WEIGHT-BALANCE (D)GEWICHT,AUSGLEICH					(F)POIDS-EQUILIBRAGE (S)PESO-BALANCE					
	96209681	. O .		STEEL		A			5G			
	96209715	. O .				A			10G			
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

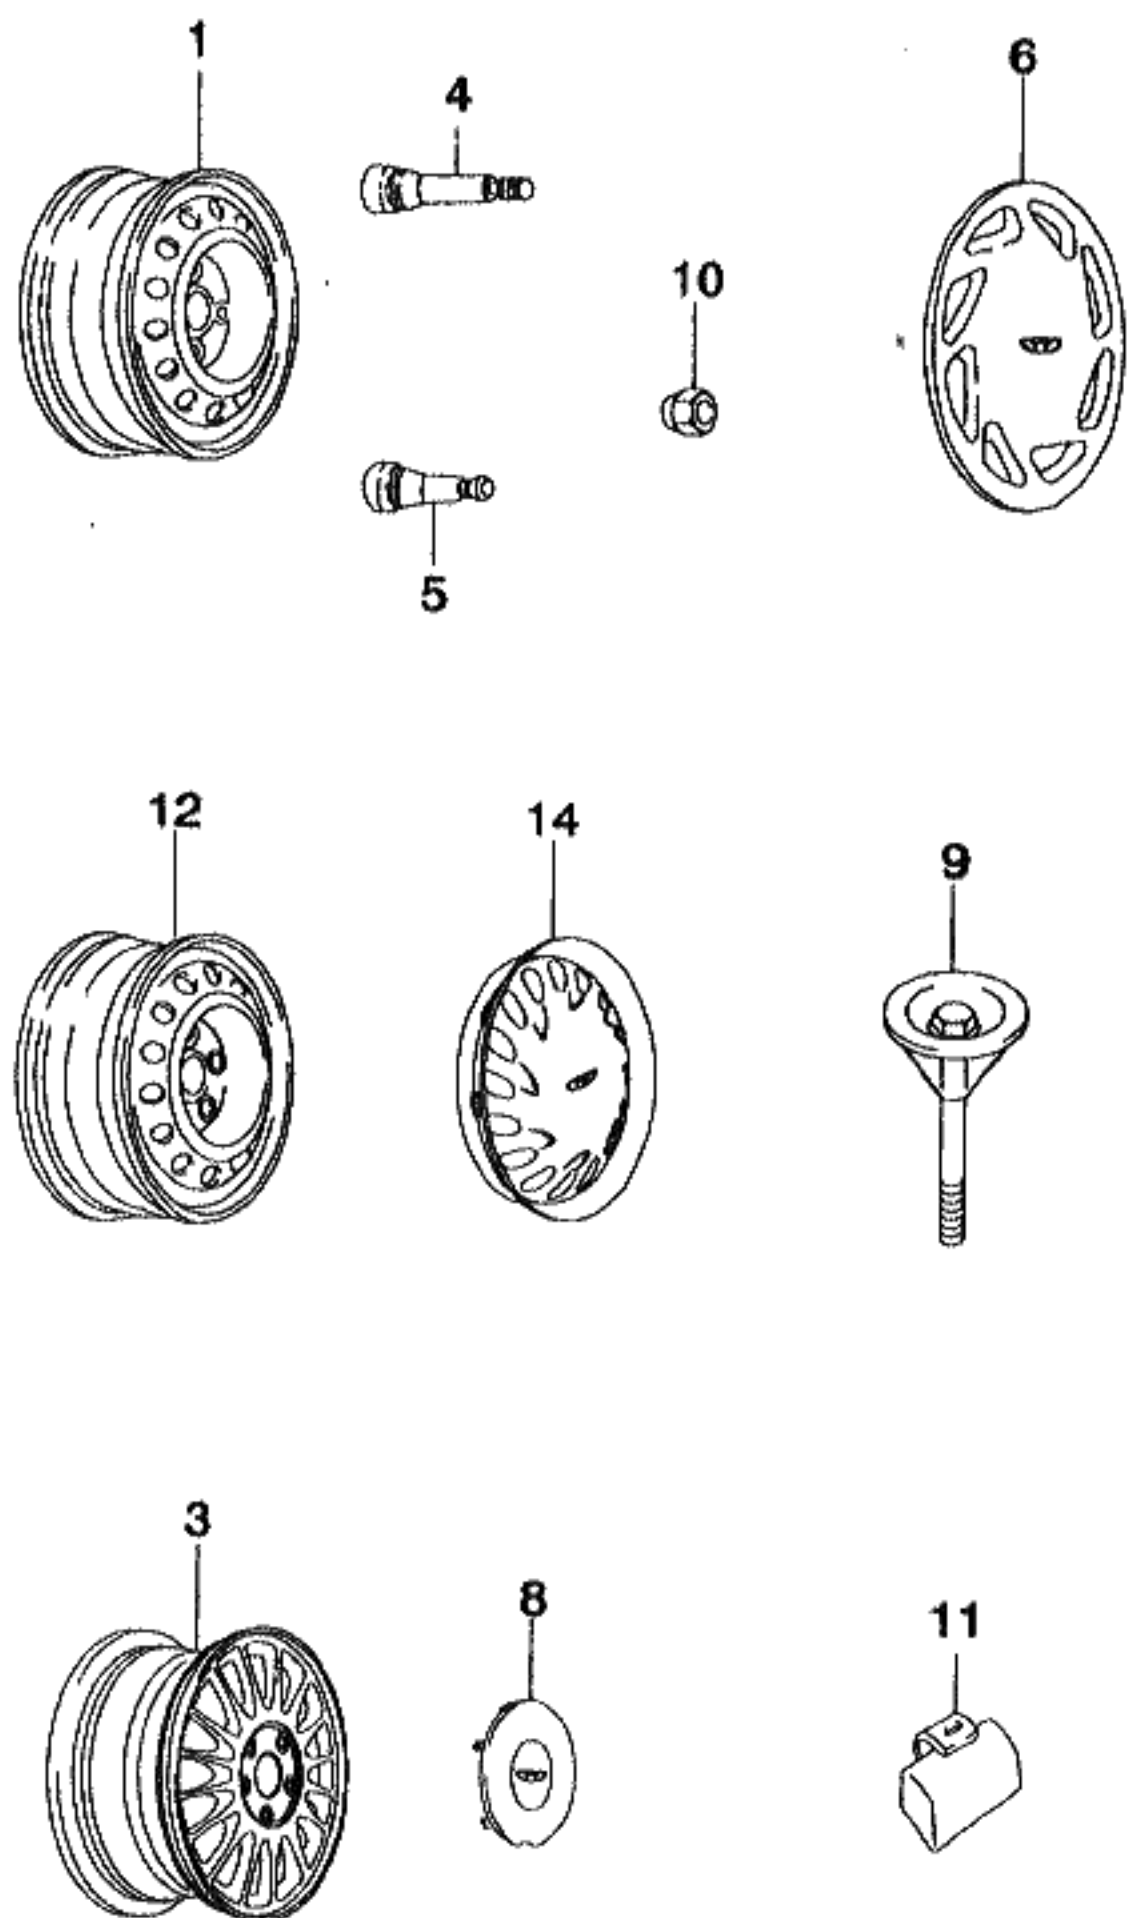


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
			S X	CDX						
	96209716	.	O	.		A			15G	
	96209717	.	O	.		A			20G	
	96209718	.	O	.		A			25G	
	96209719	.	O	.		A			30G	
	96209720	.	O	.		A			35G	
	96209721	.	O	.		A			40G	
	96209722	.	O	.		A			45G	
	96209723	.	O	.		A			50G	
	96209724	.	O	.		A			55G	
	96209725	.	O	.		A			60G	
	96209679	.	O	S	ALLOY	A			5G	
	96209680	.	O	S		A			10G	
	96209682	.	O	S		A			15G	
	96209683	.	O	S		A			20G	
	96209684	.	O	S		A			25G	
	96209685	.	O	S		A			30G	
	96209686	.	O	S		A			35G	
	96209687	.	O	S		A			40G	
	96209688	.	O	S		A			45G	
	96209689	.	O	S		A			50G	
	96209690	.	O	S		A			55G	
	96209691	.	O	S		A			60G	
	[12]		(E) WHEEL A-6J X 15			(F) ROUE				
			(D) RAD			(S) RUEDA				
	96213449	.	O	.	STEEL	5				HW
	[14]		(E) COVER-WHEEL, 15 INCH			(F) COUVERTURE				
			(D) DECKEL			(S) CUBIERTA				
	96225823	.	O	.	STEEL	4			15"	VP
LEVEL					T/A (TRANSAXLE)					
S X = 2.0 SOHC					M = MANUAL T/A					
CDX = 2.0 DOHC					A = AUTOMATIC T/A					
					. = COMMON					

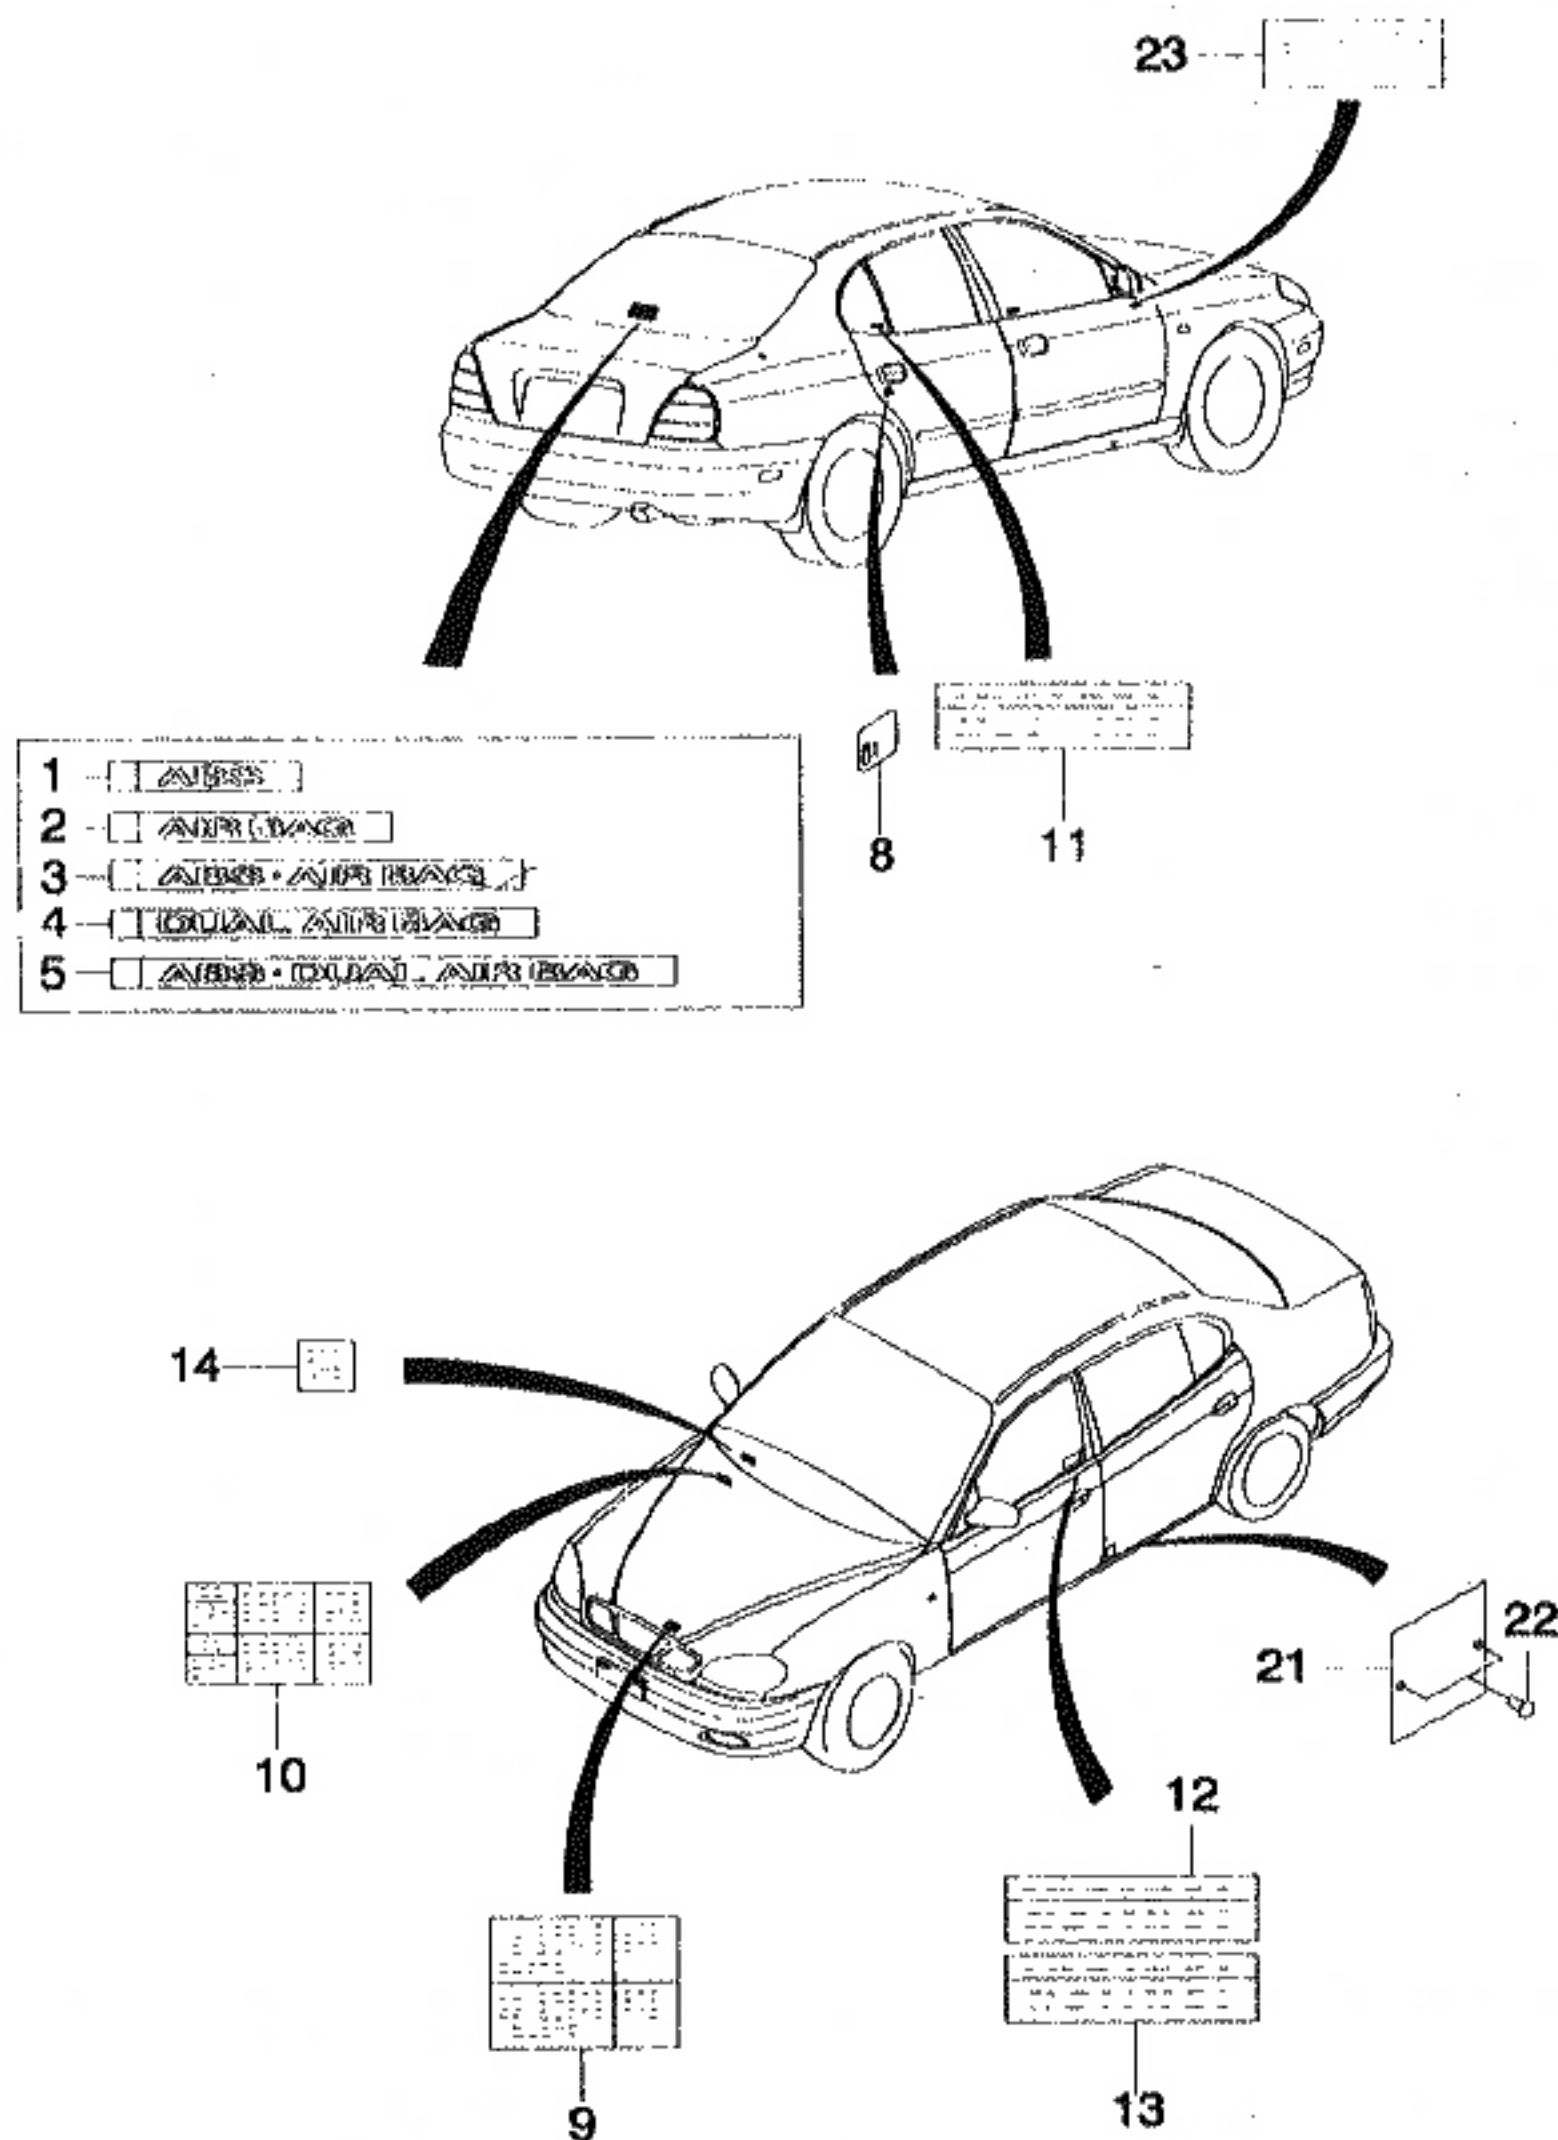

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01] 96245663	(E)STICKER-ABS (D)ETIKETT-'ABS'					(F)VIGNETTE-'ABS' (S)ETIQUETA-'ABS'				AS
	[02] 96245664	(E)STICKER-AIR BAG (D)ETIKETT-'AIR BAG'					(F)VIGNETTE-'AIR BAG' (S)ETIQUETA-'AIR BAG'				BG
	[03] 96245665	(E)STICKER-ABS & AIR BAG (D)ETIKETT-'ABS & AIR BAG'					(F)VIGNETTE-'ABS & AIR BAG' (S)ETIQUETA-'ABS & AIR BAG'				AA
	[04] 96245666	(E)STICKER-DUAL AIR BAG (D)ETIKETT-'DUAL AIR BAG'					(F)VIGNETTE-'DUAL AIR BAG' (S)ETIQUETA-'DUAL AIR BAG'				DB
	[05] 96245667	(E)STICKER-ABS & DUAL A/BAG (D)ETIKETT-'ABS & DUAL AIR					(F)VIGNETTE-'ABS & DUAL AIR (S)ETIQUETA-'ABS & DUAL AIR				AD
	[08] 96139792 O 96252711	(E)LABEL-CHILD SECURITY LOCK (D)ETIKETT					(F)ÉTIQUETTE (S)ETIQUETA				
	[10] 96207406	(E)STICKER-AIR CONDITIONING (D)ETIKETT					(F)VIGNETTE (S)ETIQUETA				
	[11] 10154456 O 96252712	(E)LABEL-CHILD SECURITY LOCK (D)ETIKETT					(F)ÉTIQUETTE (S)ETIQUETA				
	[12] 96207809	(E)LABEL-IMMOBILIZER (D)ETIKETT					(F)ÉTIQUETTE (S)ETIQUETA				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

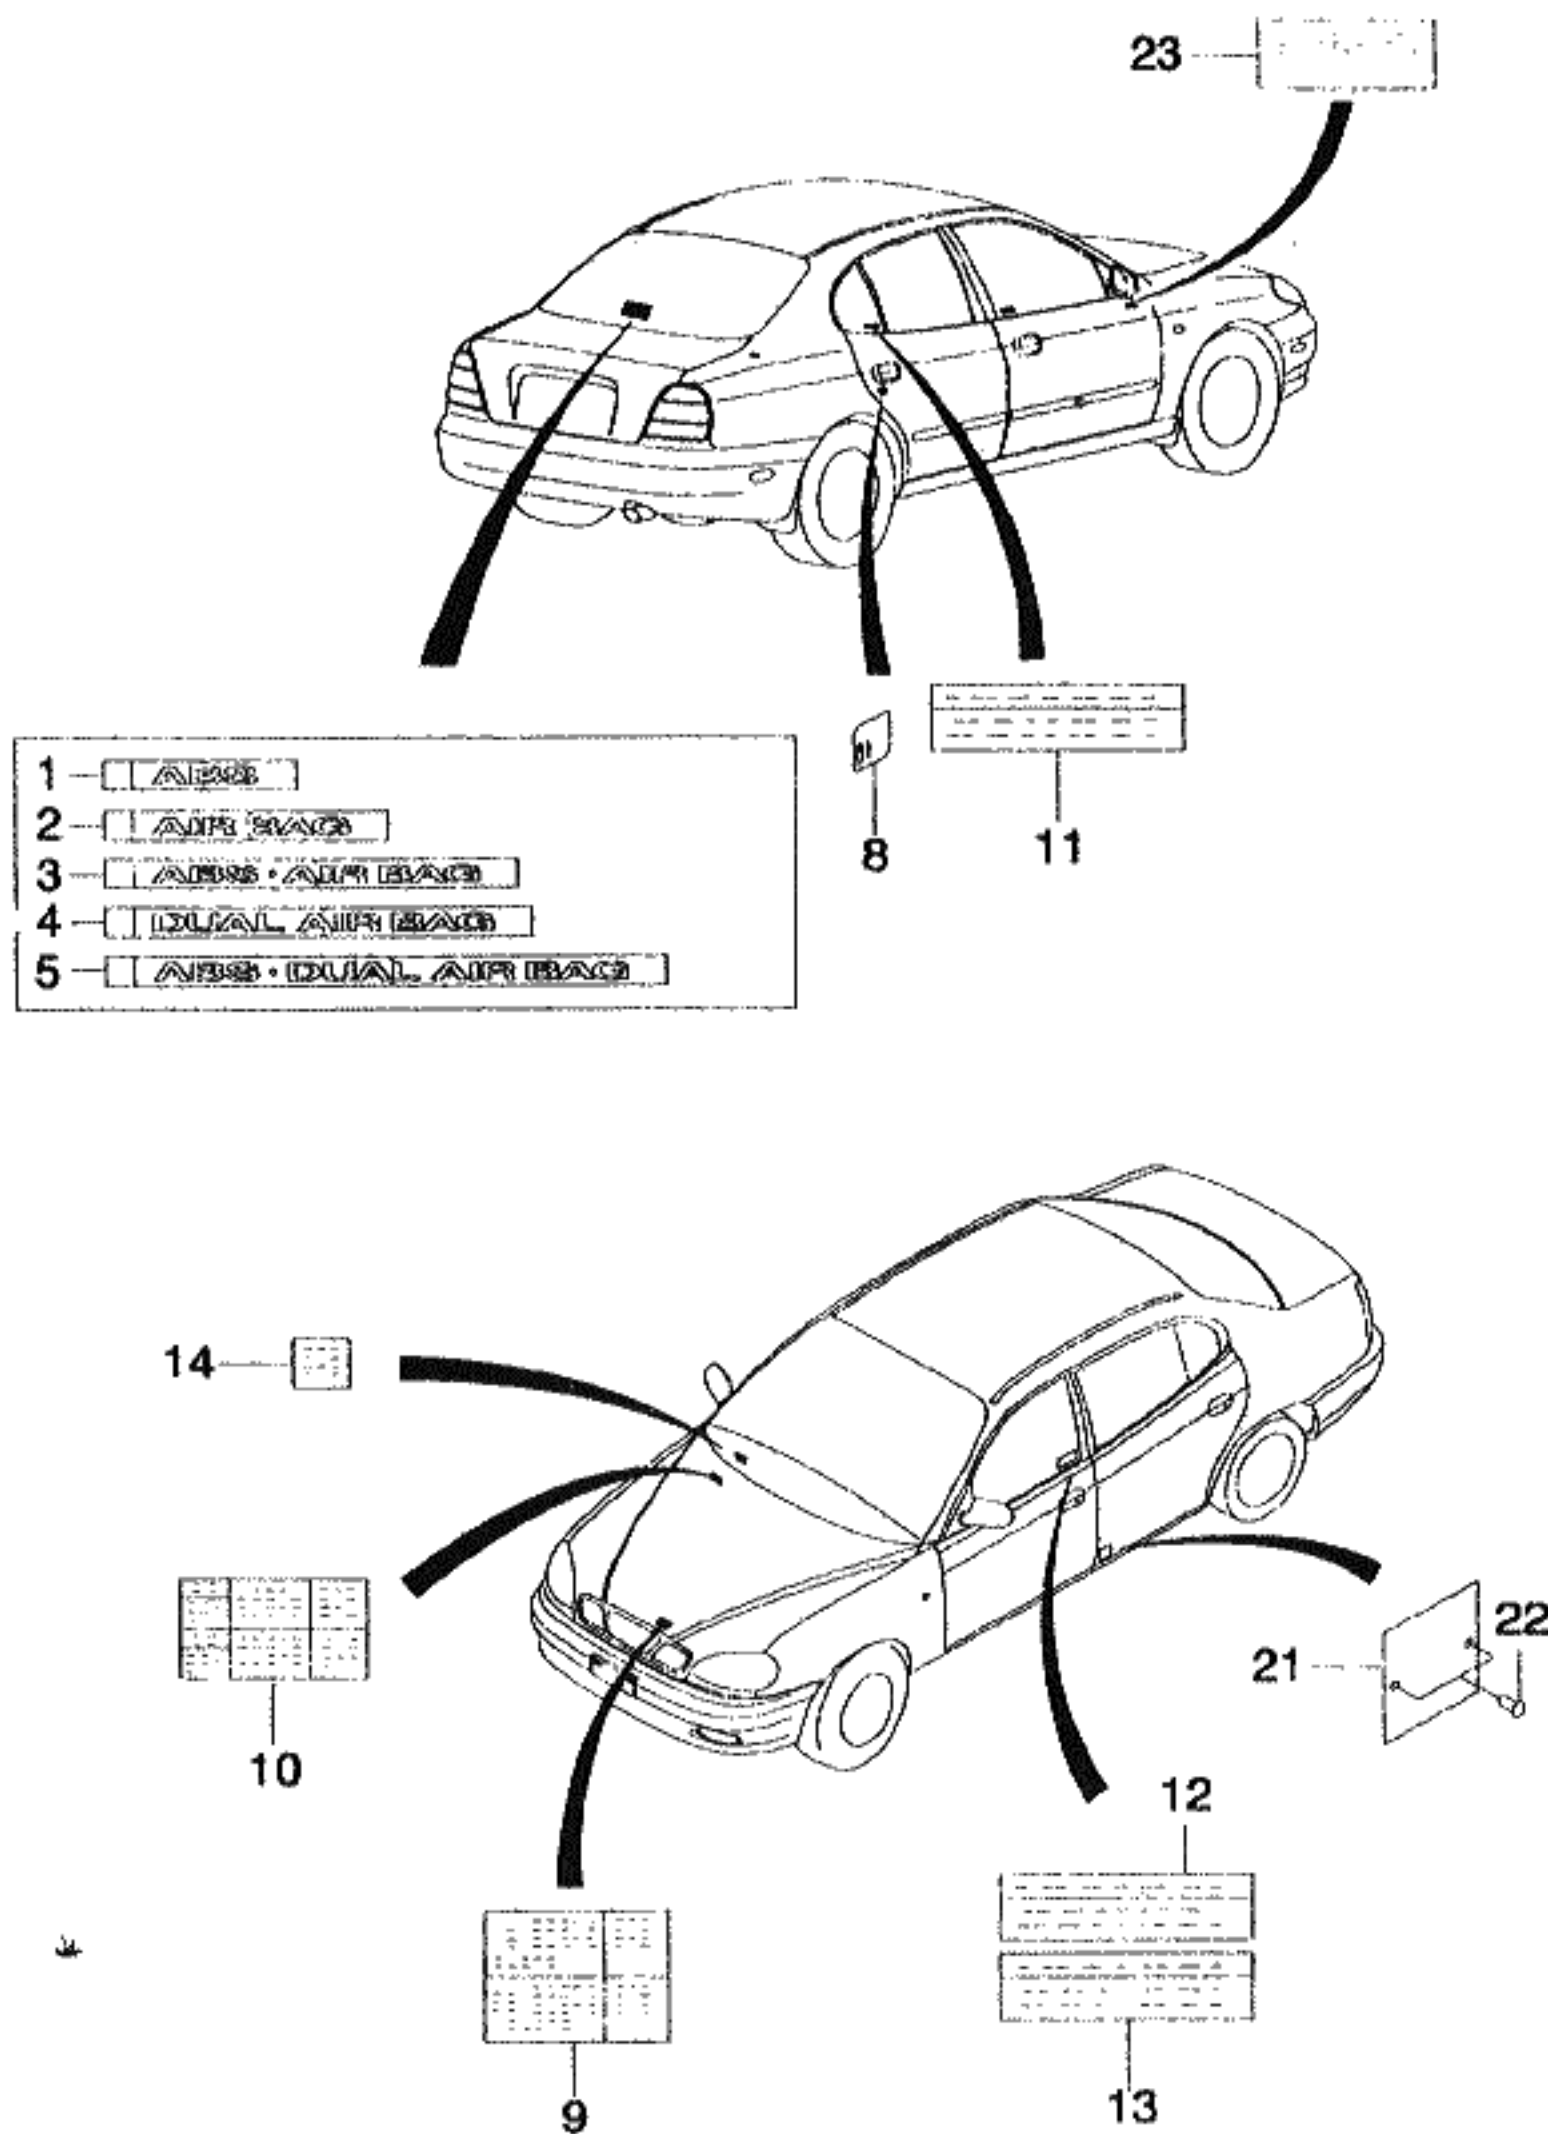


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
			S X	CDX						
[13]	96252921			(E) LABEL-AUDIO WARNING (D) ETIKETT		(F) ÉTIQUETTE (S) ETIQUETA				
			O O			1				
[14]	96243956			(E) STICKER-TIRE PRESSURE (D) ETIKETT		(F) VIGNETTE (S) ETIQUETA				
	96243932		S S	-XAT		1				
			A A	ONLY AUSTRALIA		1				
[21]	96234360			(E) PLATE-CONFORITY CERTIFIC (D) ETIKETT		(F) VIGNETTE (S) ETIQUETA				
			A A	VB4		1				
[22]	09229-03001			(E) RIVET (D) NIET		(F) RIVET (S) REMACHE				
			A A	VB4		2				
[23]	96250435			(E) LABEL-WARNING CHILD (D) ETIKETT		(F) ÉTIQUETTE (S) ETIQUETA				
			O O	8AJ3&AJ7		1				
LEVEL					T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

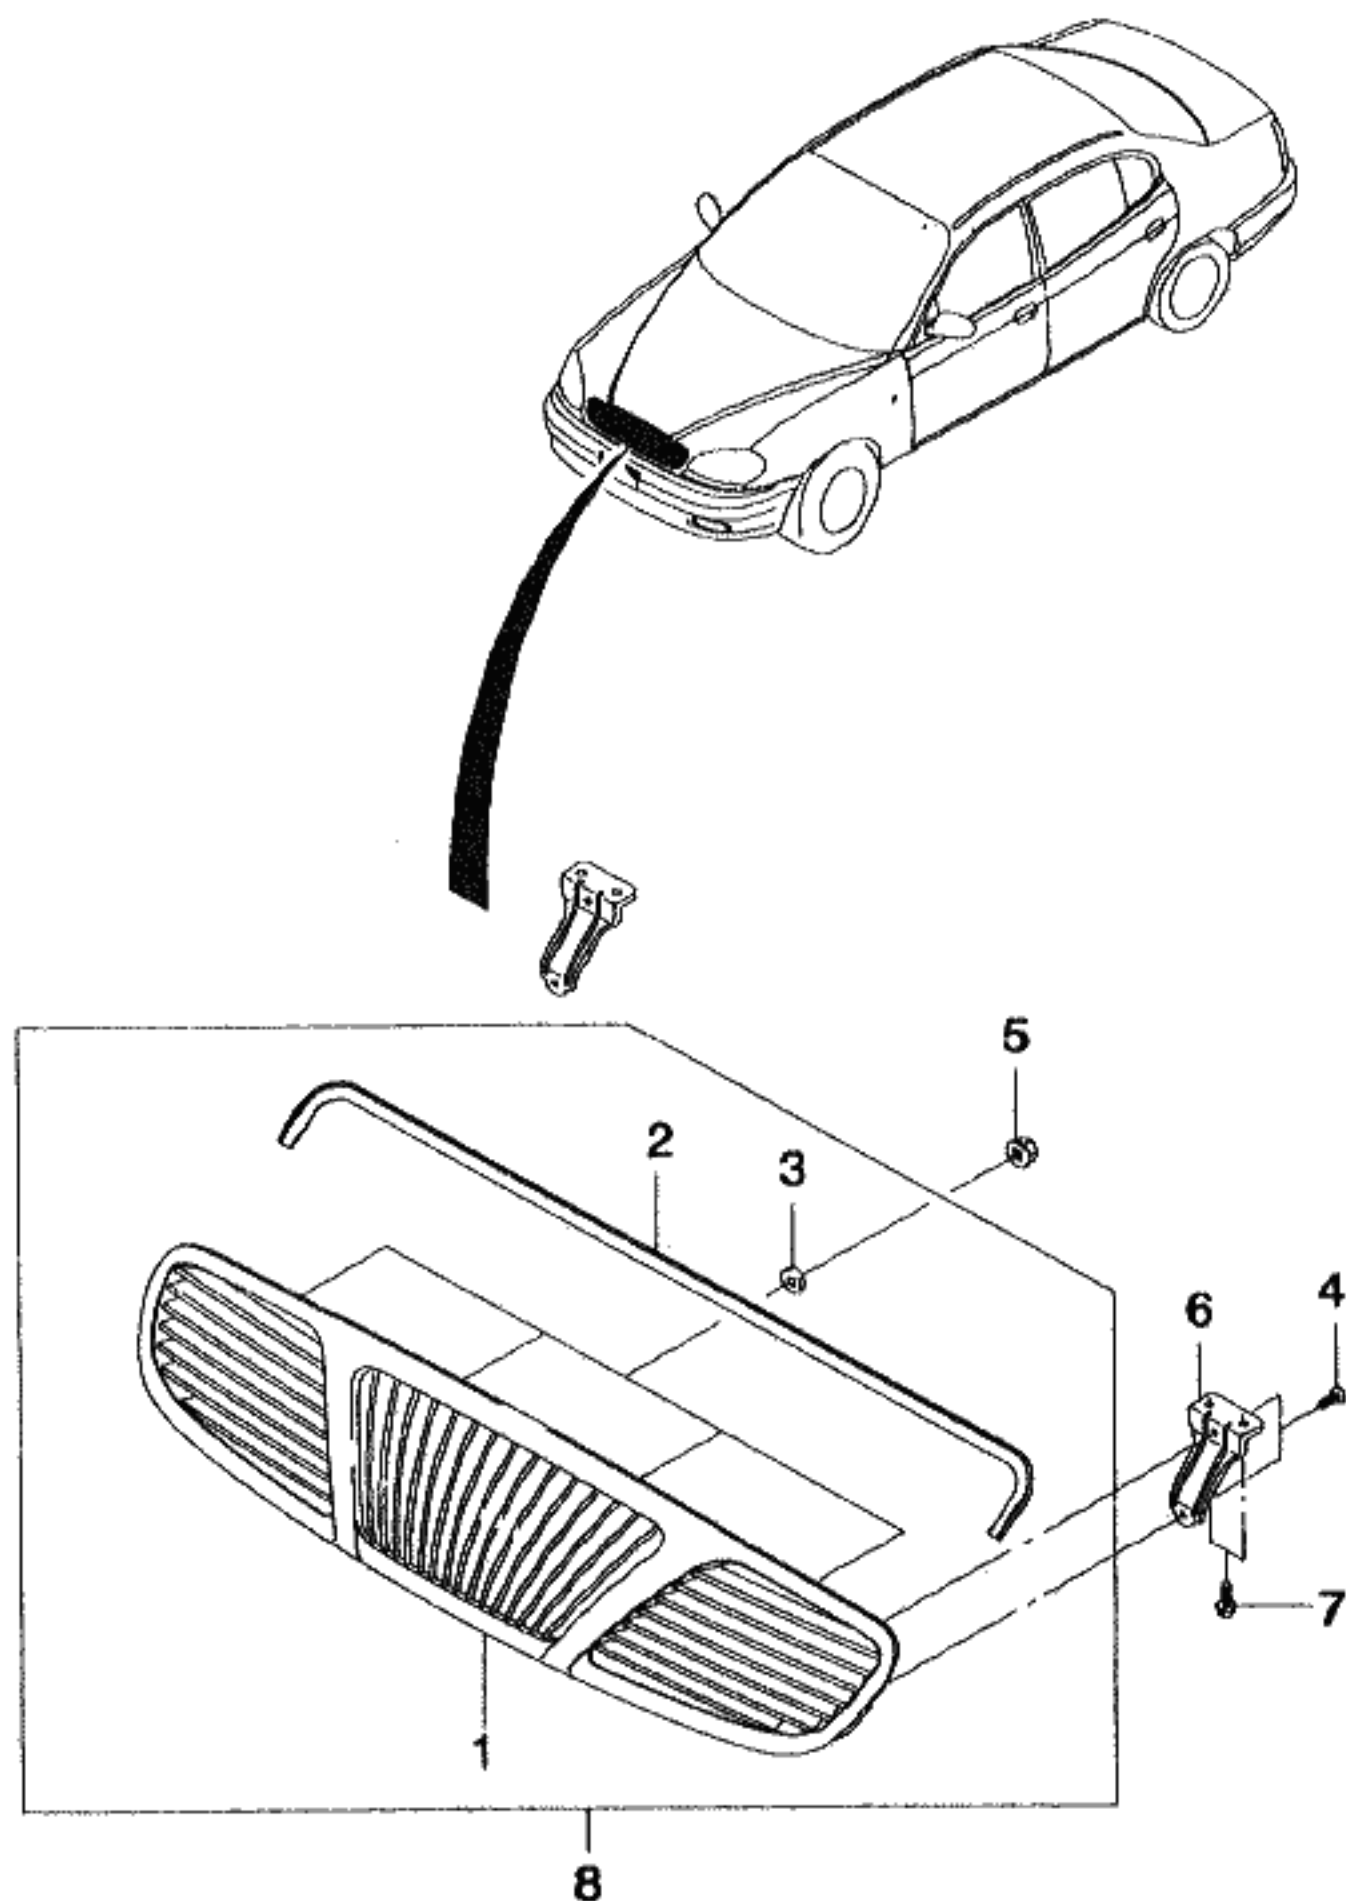

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96208706	(E)GRILLE-RADIATOR (D)GITTER,KÜHLER					(F)GRILLE-RADIATEUR (S)REJA-RADIADOR				
	[02] 96208708	(E)SEAL A-GRILLE (D)DICHTUNG					(F)JOINT (S)SELLO				
	[03] 09281-04001	(E)SEAL (D)DICHTUNG					(F)JOINT (S)SELLO				
	[04] 03160-42132	(E)SCREW-TAPPING (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	[05] 09159-05005	(E)NUT (D)MUTTER					(F)ECROU (S)TUERCA				
	[06] 96232069	(E)BRACKET-RADIATOR GRILLE (D)TRÄGER					(F)SUPPORT (S)SOPORTE				
	[07] 01114-06162	(E)BOLT-HEXAGON (D)SCHRAUBE					(F)BOULON (S)PERNO				
	[08] 96205735	(E)GRILLE A-RADIATOR (D)GITTER,KÜHLER					(F)GRILLE-RADIATEUR (S)REJA-RADIADOR				


LEVEL				T/A(TRANSAXLE)			
S X = 2.0 SOHC CDX = 2.0 DOHC				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON			

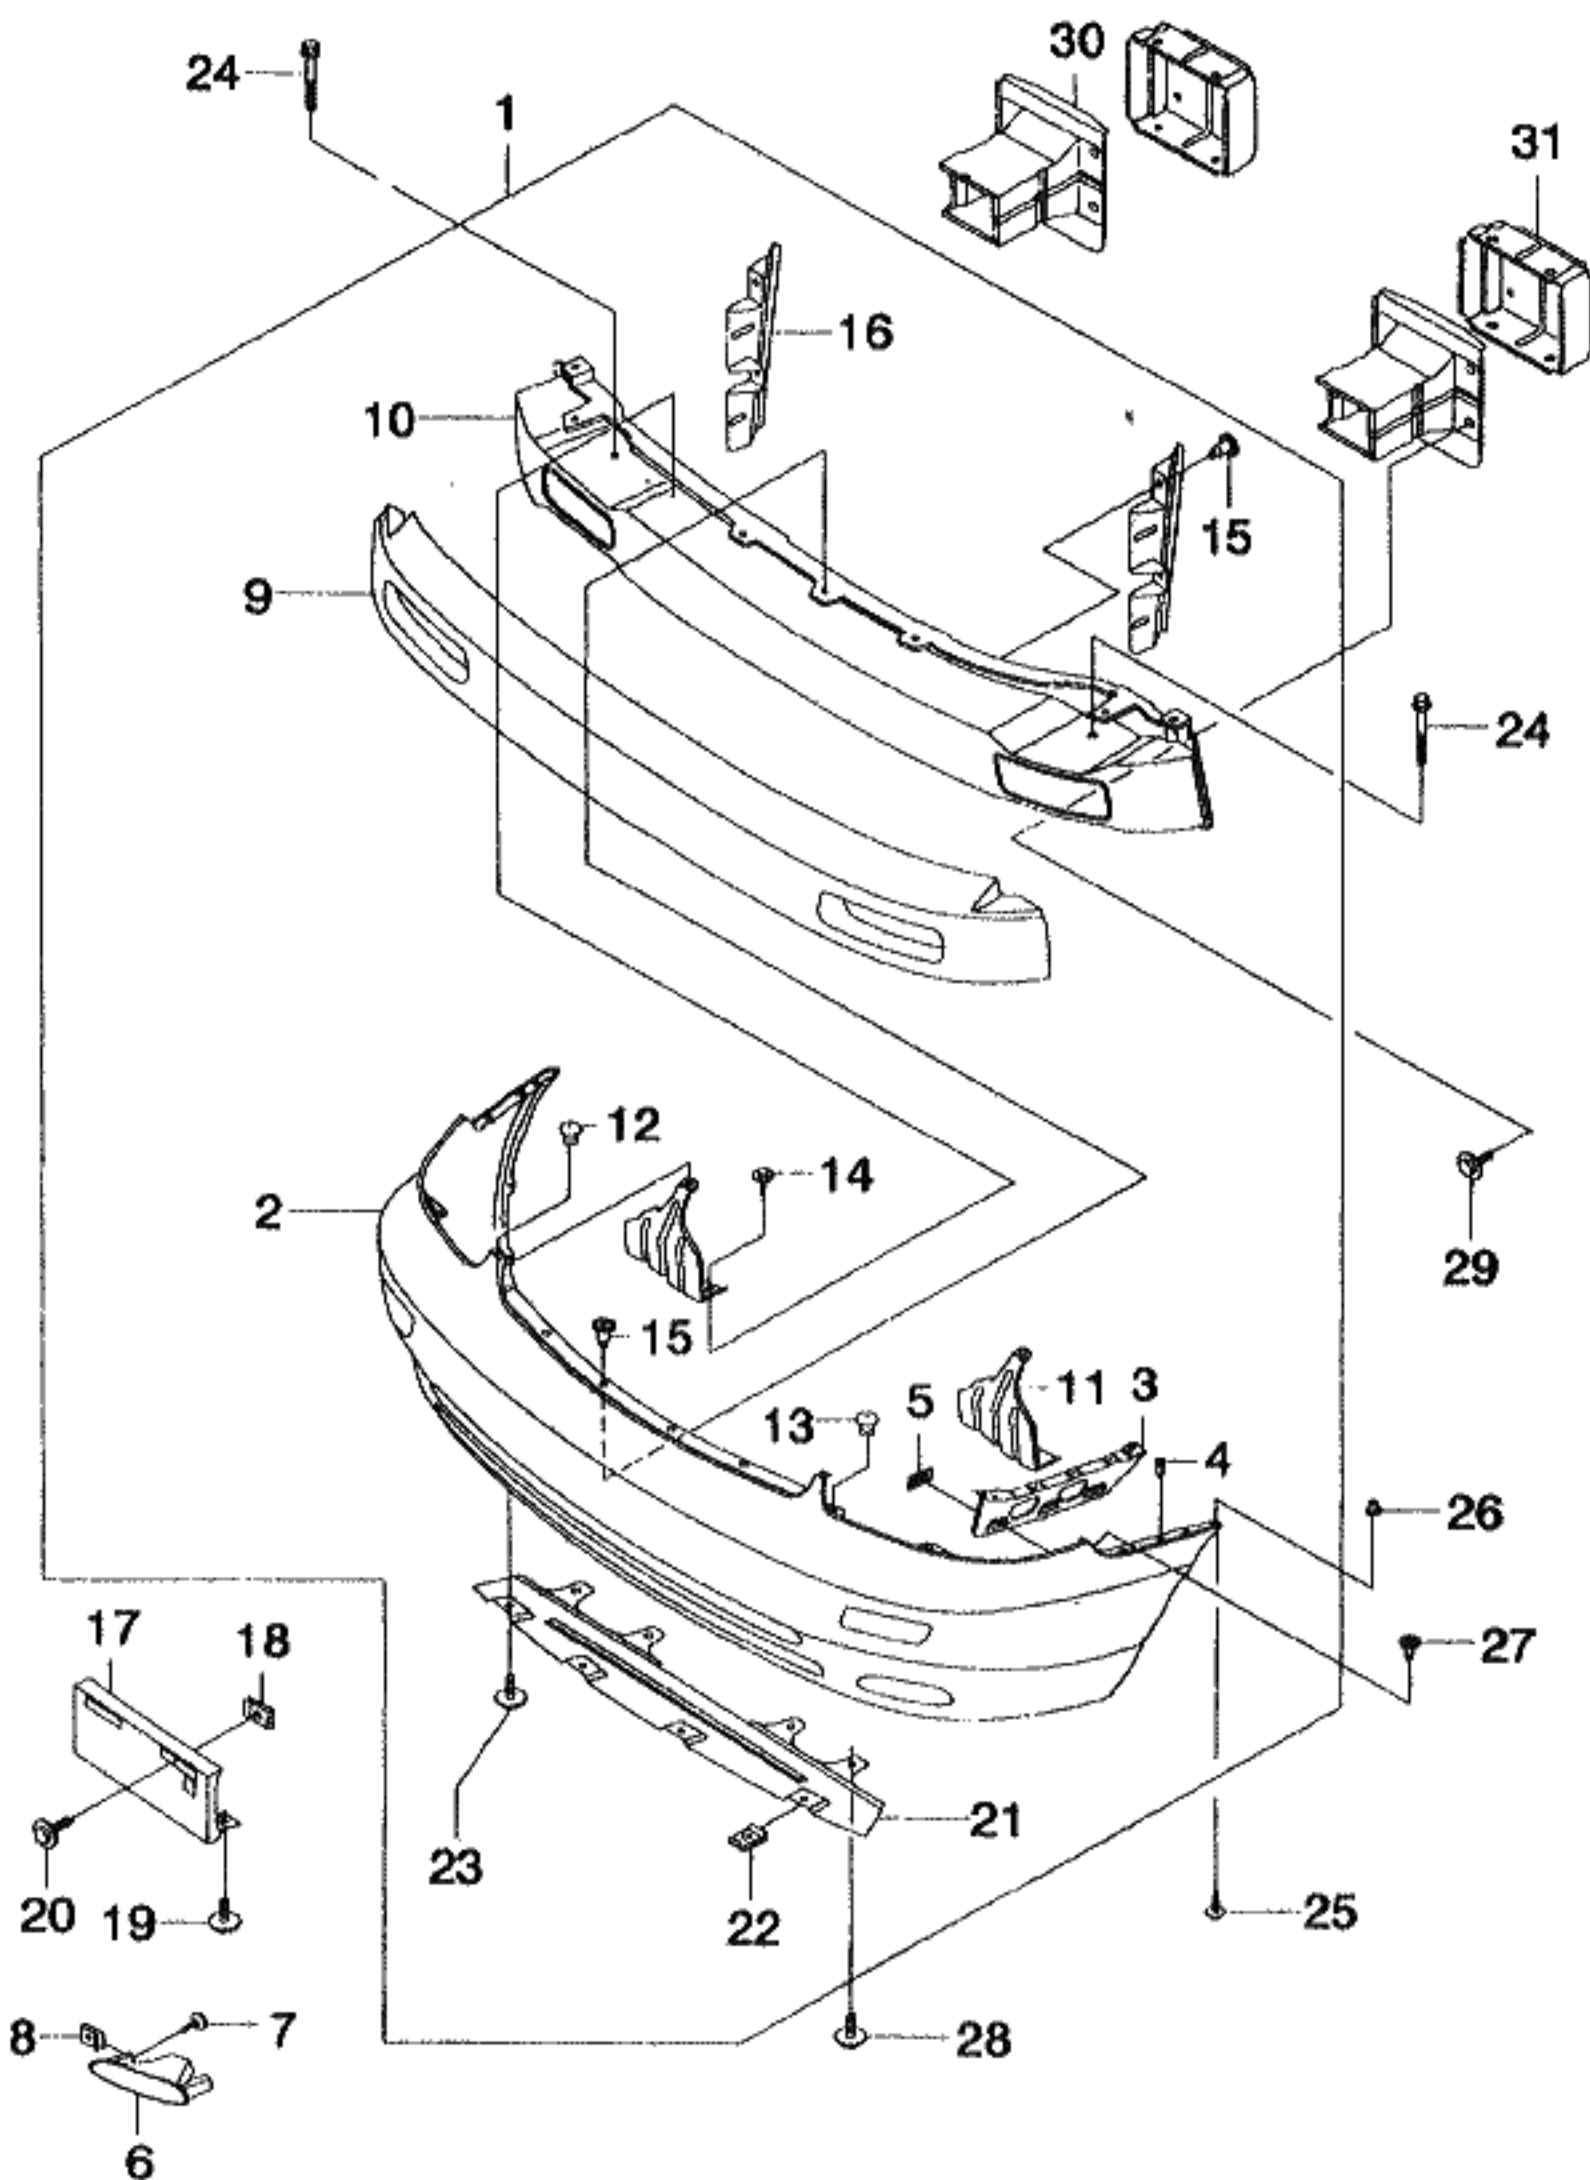


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) BUMPER A-FR (D) STOBSTANGE, VORNE				(F) PARE-CHOC-AVANT (S) PARACHOQUES-FRENTE					
	S6720011	. S .		&VT2.		1					
	S6720010	. O S		&VT1.		1					
	[02]	(E) FASCIA A-BUMPER, FR (D) SCHILD, VORDERE STOBSTANGE				(F) BANDELETTES (S) PARACHOQUES					
	96205745	. S S				1					
	[03]	(E) BRACKET-BUMPER FR SIDE (D) TRÄGER				(F) SUPPORT (S) SOPORTE					
	96228538	. S S				LH 1					
	96228539	. S S				RH 1					
	[04]	(E) SCREW-CR MACHINE (D) SCHRAUBE				(F) VIS (S) TORNILLO					
	02124-04122	. S S				6					
	[05]	(E) NUT-SPEED (D) MUTTER				(F) ECROU (S) TUERCA					
	09148-01001	. S S				4					
	[06]	(E) GRILLE A-FOG LAMP FR (D) GITTER				(F) GRILLE (S) REJA					
	96248399	. S .				LH 1					
	96248400	. S .				RH 1					
	[07]	(E) SCREW-TAPPING (D) SCHRAUBE				(F) VIS (S) TORNILLO					
	03152-55192	. S .				4					
	[08]	(E) NUT-SPEED (D) MUTTER				(F) ECROU (S) TUERCA					
	03511-55012	. S .				4					
	[09]	(E) ABSORBER-BPR ENERGY FR (D) STOBSDÄMPFER				(F) AMORTISSEUR (S) AMORTIGUADOR					
	96205768	. O S		&VT1.		1					

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC	M = MANUAL T/A
CDX = 2.0 DOHC	A = AUTOMATIC T/A
	. = COMMON

6720 FRONT BUMPER

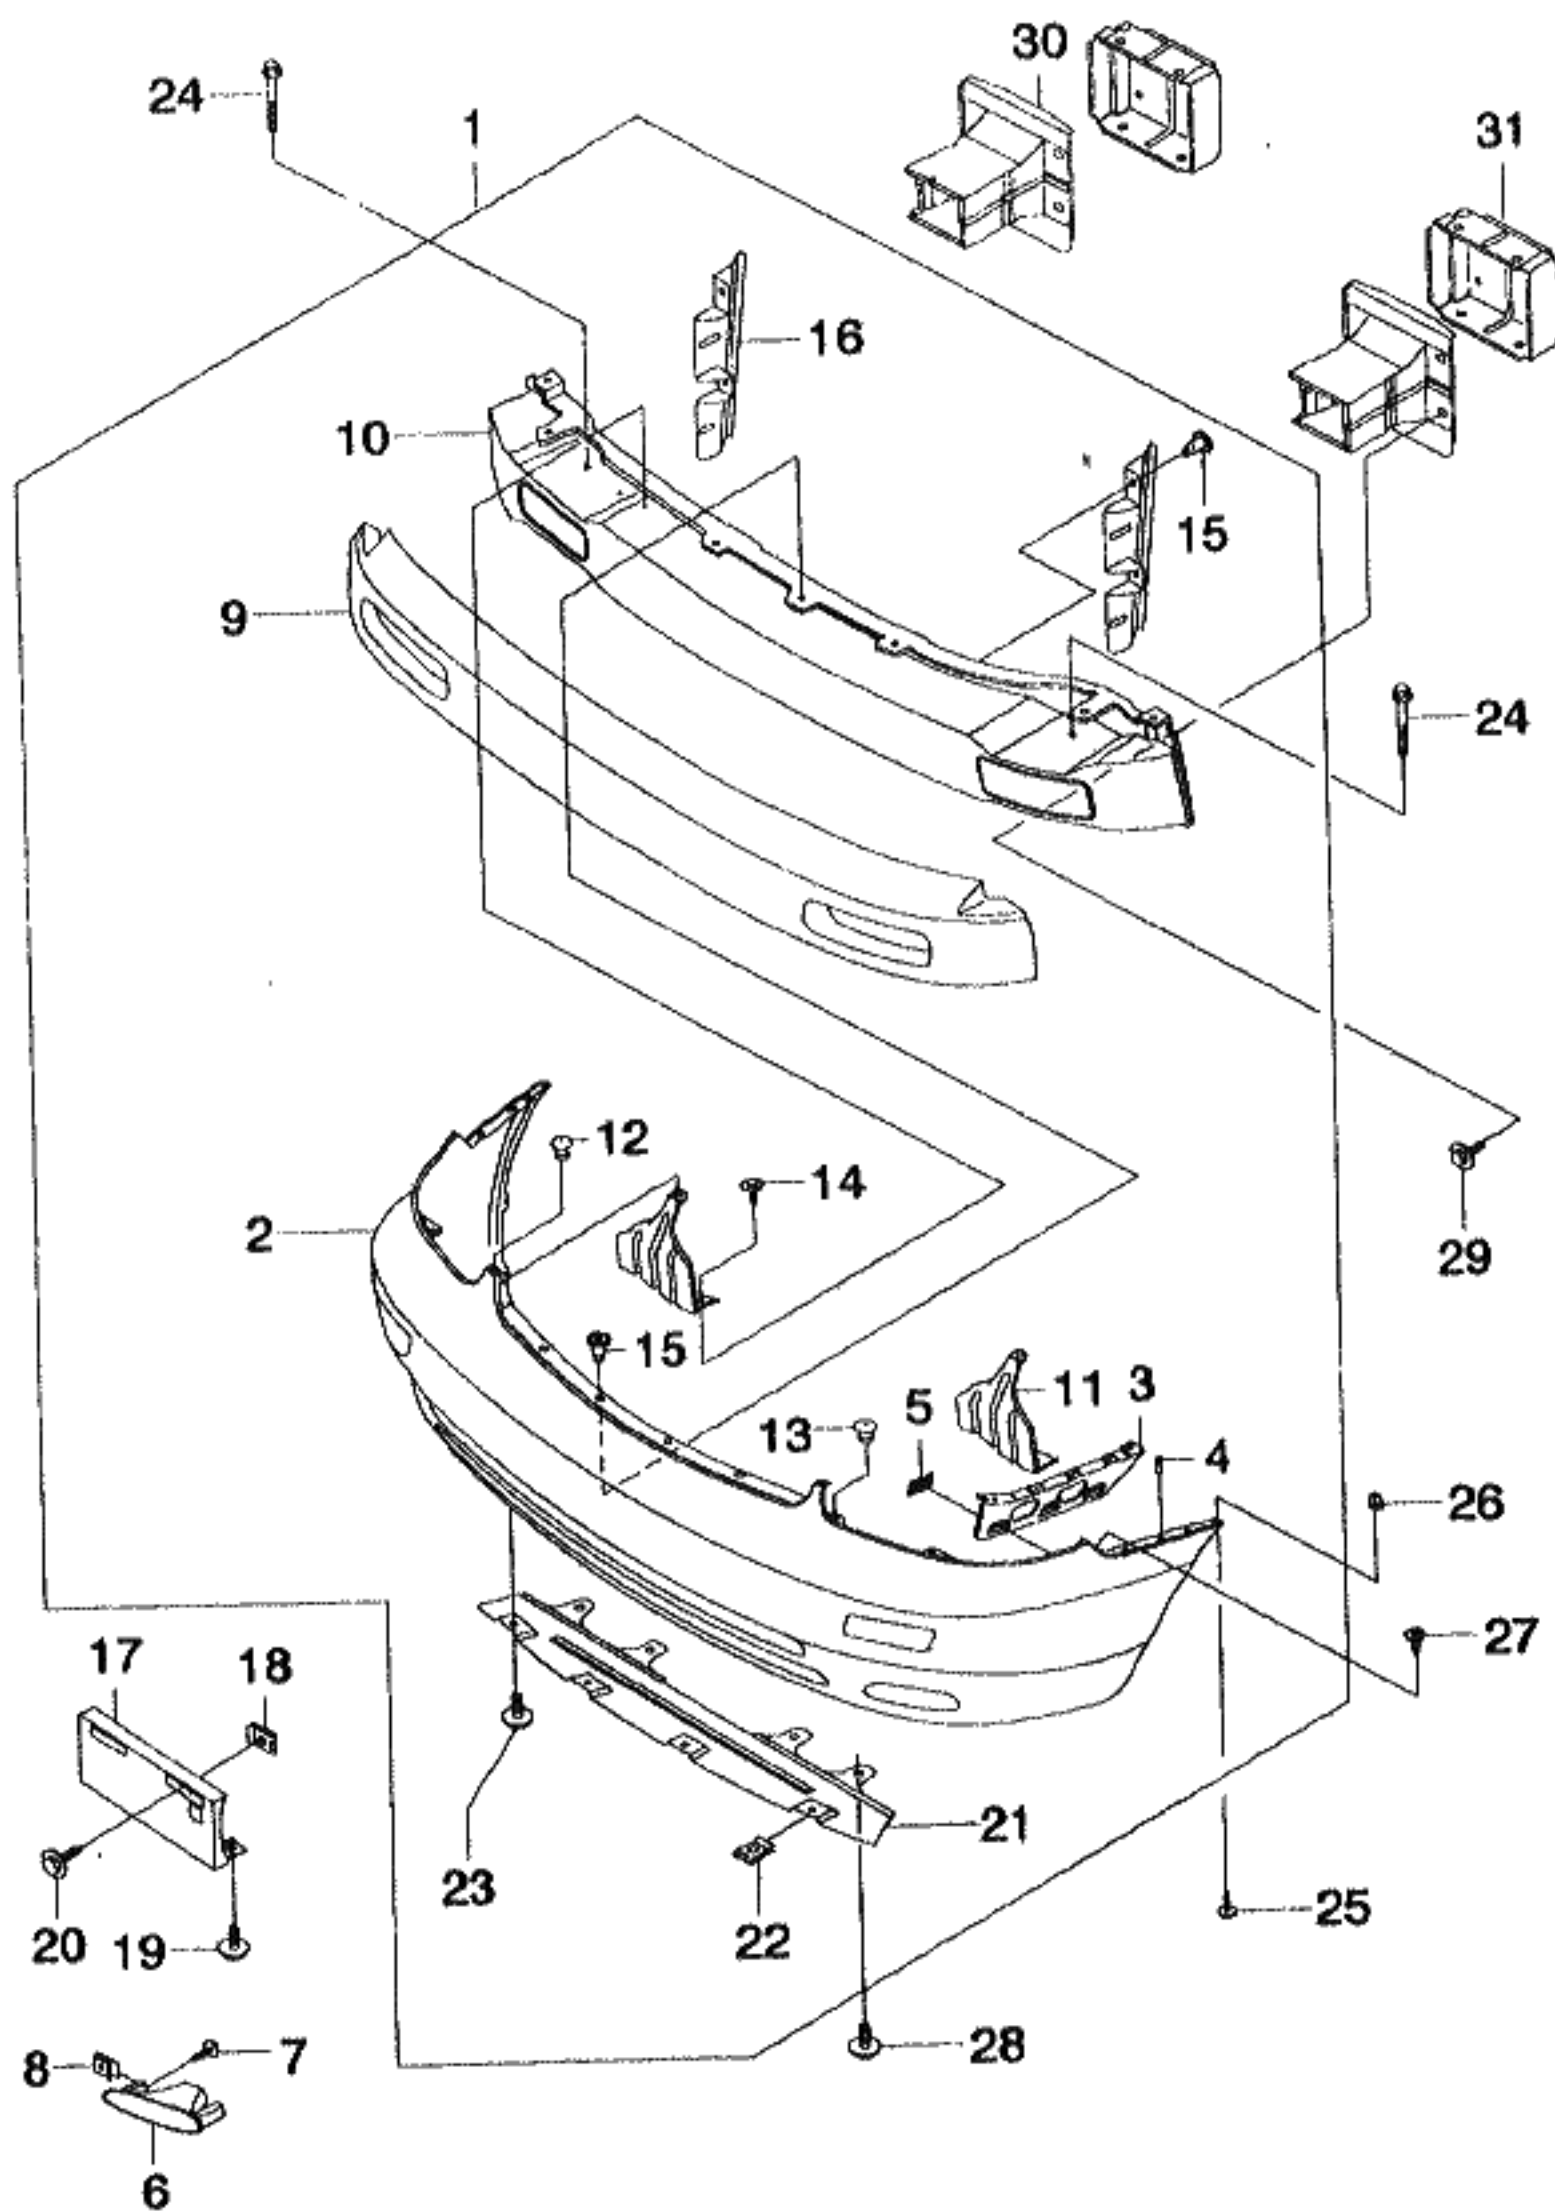


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10]	(E)BEAM A-IMPACT,FR (D)STANGE,VORDERE				(F)BARRE (S)BARRA-IMPACTO						
	96205753	. S . &VT2.				1						
	96205752	. O S &VT1.				1						
	[11]	(E)REINFORCEMENT A-PLATE (D)VERSTÄRKUNG				(F)RENFORCEMENT (S)REFUERZO						
	96217684	. S . &VT2.				LH 1						
	96211392	. O S &VT1.				LH 1						
	96217685	. S . &VT2.				RH 1						
	96211393	. O S &VT1.				RH 1						
	[12]	(E)HOOK (D)HAKEN				(F)CROCHET (S)PERCHA						
	09410-00002	. S S				2						
	[13]	(E)HOOK (D)HAKEN				(F)CROCHET (S)PERCHA						
	09410-00001	. S S				2						
	[14]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO						
	09136-04005	. S . &VT2.				4						
	09136-04005	. O S &VT1.				6						
	[15]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09409-09303	. S S				11				TO BEAM		
	09409-09303	. S S				4				TO AIR		
	[16]	(E)GUARD-BUMPER AIR,FR (D)KOTFLÜGEL				(F)GARDE (S)PROTECTOR						
	96234626	. S . &VT2.				LH 1						
	96234624	. O S &VT1.				LH 1						
	96234627	. S . &VT2.				RH 1						
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

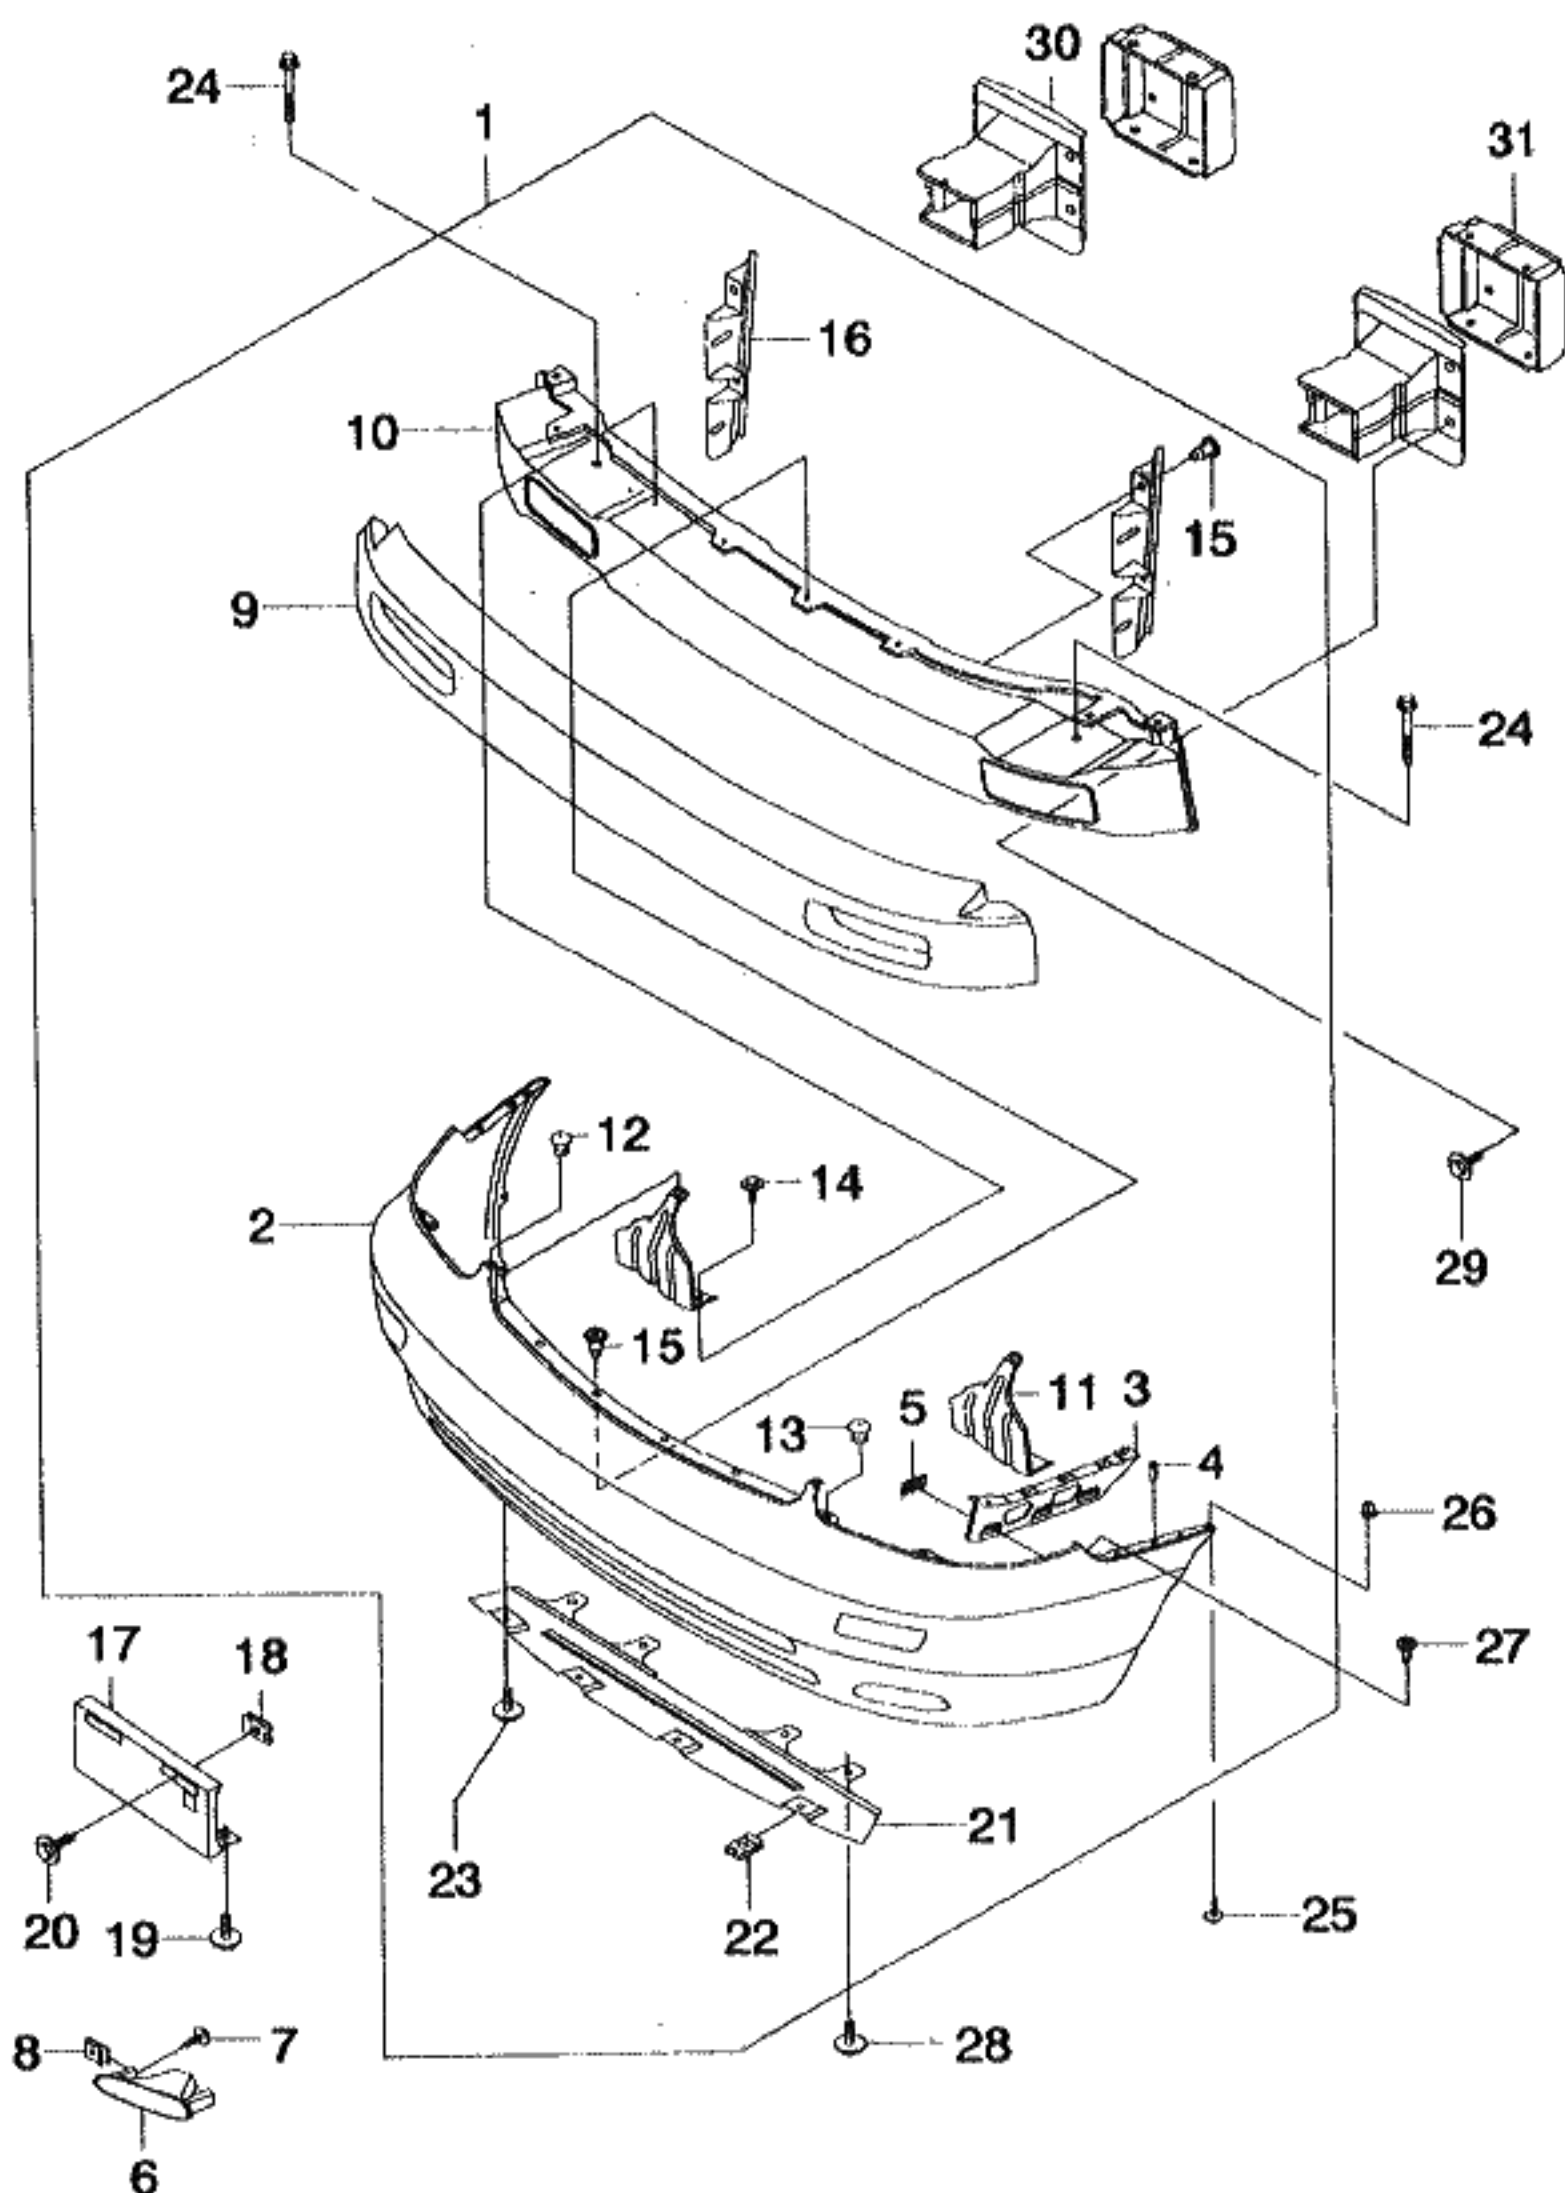


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96234625	.	O	S	&VT1.		RH 1				
	[17]	(E)	BRACKET-LICENSE PLATE,FR				(F)	SUPPORT			
		(D)	TRÄGER				(S)	SOPORTE			
	96205763	.	S	S	&T11.		1				
	96205764	.	A	A	&T12.		1				
	[18]	(E)	NUT-SPEED				(F)	ECROU			
		(D)	MUTTER				(S)	TUERCA			
	09148-06015	.	S	S			4				
	[19]	(E)	BOLT-STEP				(F)	BOULON			
		(D)	SCHRAUBE				(S)	PERNO			
	96210187	.	S	S			2				
	09116-06037	.	S	S			2				
	[20]	(E)	SCREW-TAPPING				(F)	VIS			
		(D)	SCHRAUBE				(S)	TORNILLO			
	03111-55252	.	S	S			2				
	[21]	(E)	GUARD-BUMPER FR LOWER				(F)	GARDE			
		(D)	KOTFLÜGEL				(S)	PROTECTOR			
	96217683	.	S	S			1				
	[22]	(E)	NUT-SPEED				(F)	ECROU			
		(D)	MUTTER				(S)	TUERCA			
	09148-06015	.	S	S			4				
	[23]	(E)	BOLT-W/WASHER				(F)	BOULON			
		(D)	SCHRAUBE				(S)	PERNO			
	09116-06037	.	S	S			4				
	[24]	(E)	BOLT-FLANGE				(F)	BOULON			
		(D)	SCHRAUBE				(S)	PERNO			
	09103-10017	.	S	.	&VT2.		4				
	09103-10016	.	O	S	&VT1.		2				
	[25]	(E)	SCREW-TAPPING				(F)	VIS			
		(D)	SCHRAUBE				(S)	TORNILLO			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

6720 FRONT BUMPER

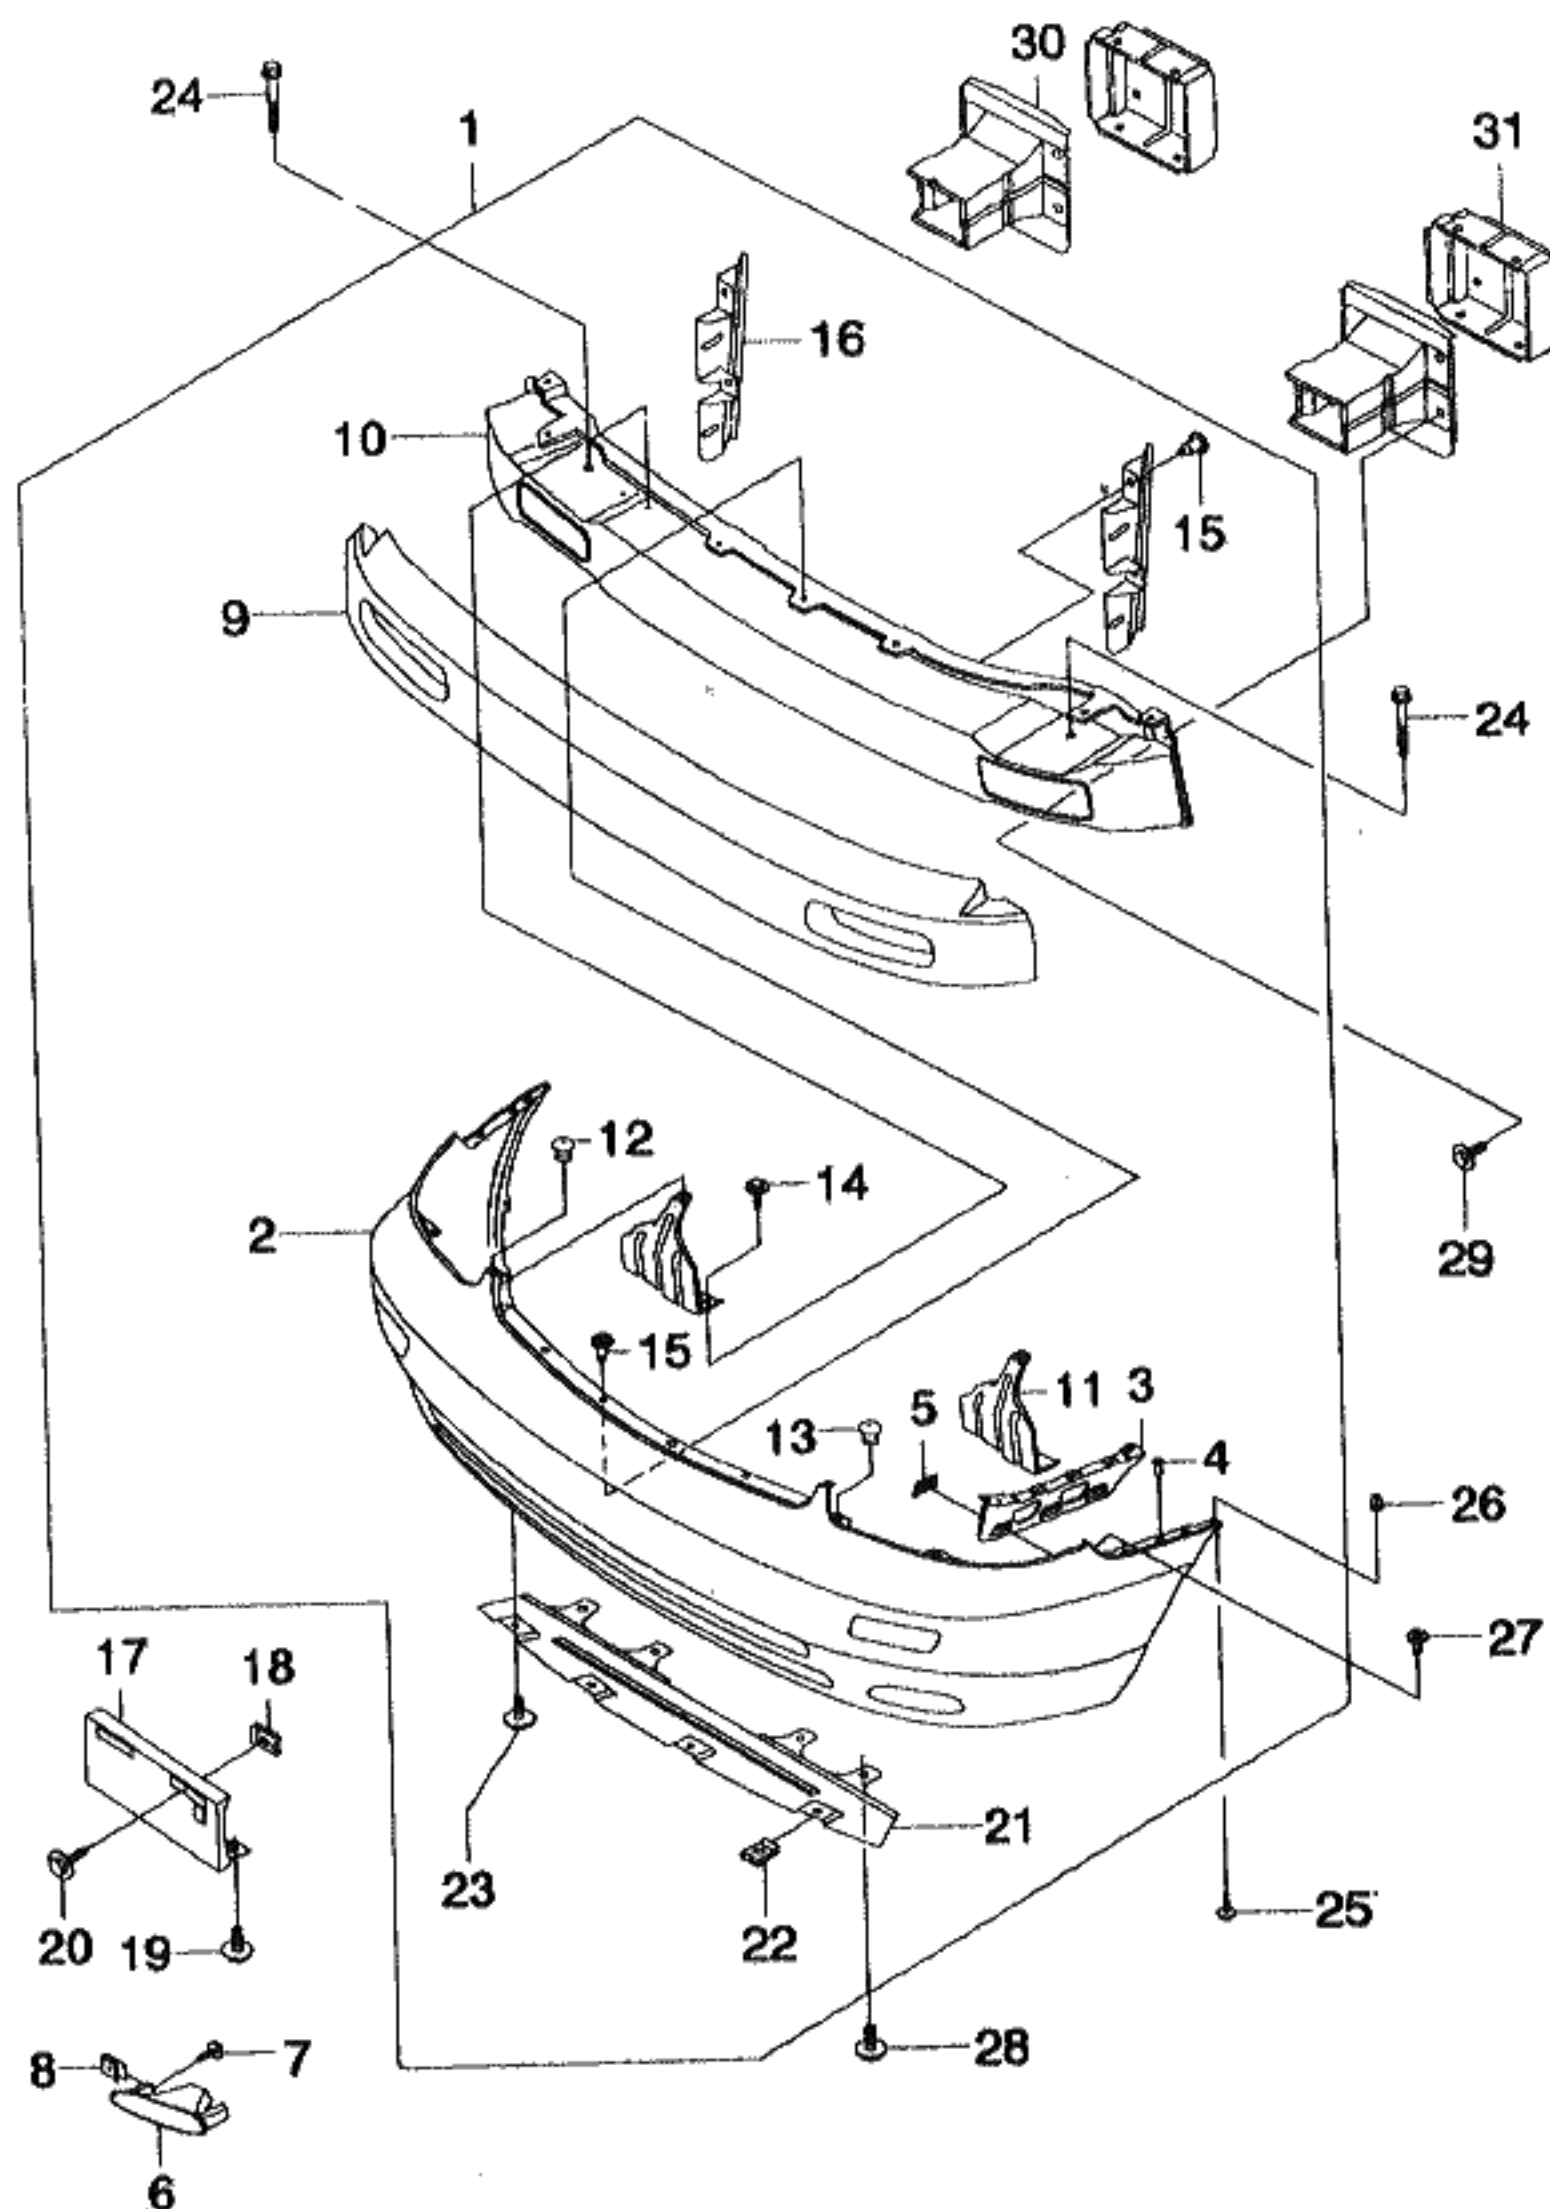


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09136-04005	.	S	S			2					
	[26]		(E)NUT-SPEED				(F)ECROU					
			(D)MUTTER				(S)TUERCA					
	09148-04015	.	S	S			2					
	[27]		(E)BOLT-STEP				(F)BOULON					
			(D)SCHRAUBE				(S)PERNO					
	96210187	.	S	S			2					
	[28]		(E)BOLT-W/WASHER				(F)BOULON					
			(D)SCHRAUBE				(S)PERNO					
	09116-06037	.	S	S			4					
	[29]		(E)BOLT-HEXAGON				(F)BOULON					
			(D)SCHRAUBE				(S)PERNO					
	01190-08252	.	S	S			8					
	[30]		(E)STAY A-BUMPER,FR				(F)SUPPORT					
			(D)TRÄGER				(S)SOPORTE					
	96205754	.	O	S	&VT1.		LH 1					
	96205755	.	O	S	&VT1.		RH 1					
	[31]		(E)STAY A-BUMPER,FR				(F)SUPPORT					
			(D)TRÄGER				(S)SOPORTE					
	96205756	.	S	.	&VT2.		LH 1					
	96205757	.	S	.	&VT2.		RH 1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

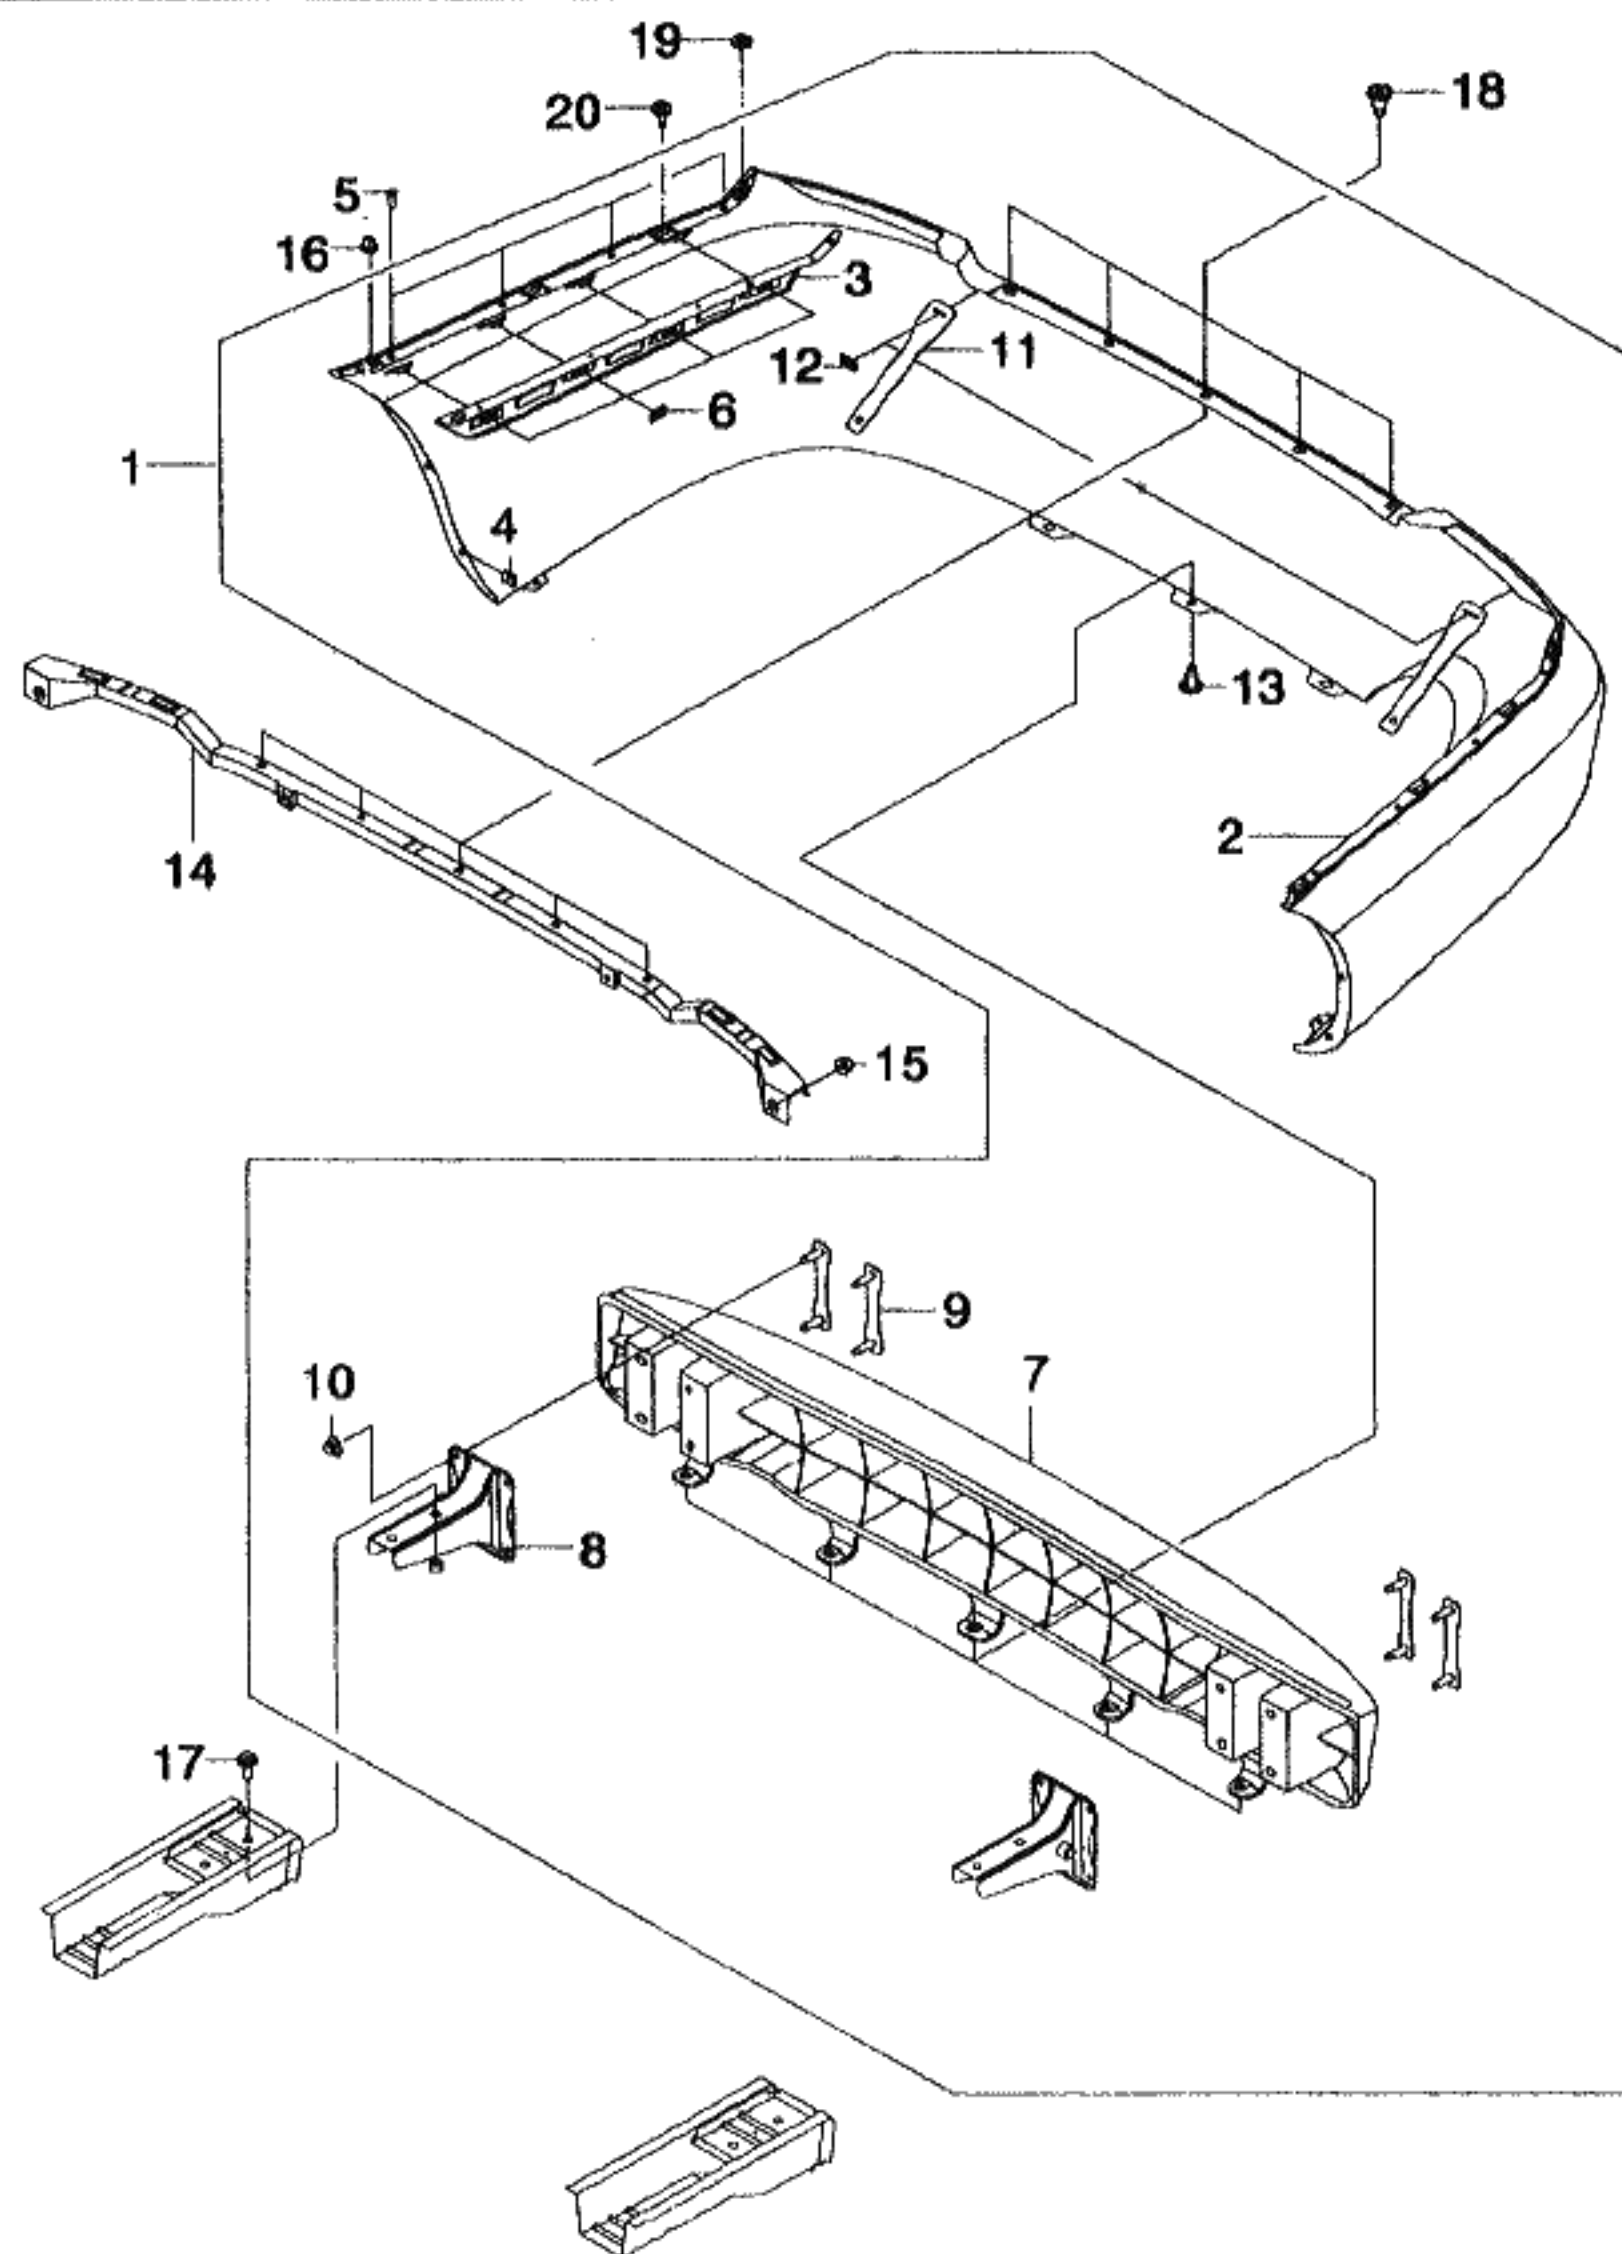


KEY NO.	PART NAME									
	PART NO.	MODEL			OPTION	L / Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	S X	C D X			FROM	TO		
[01]	96205767	(E)BUMPER A-RR (D)STOBSTANGE,HINTEN	S	S	&VT2.	(F)PARE-CHOC-ARRIERE (S)PARACHOQUES-TRASERO	1			
[02]	96205772	(E)FASCIA A-BUMPER,RR (D)STOBSTANGE,HINTEN	S	S		(F)PARE-CHOC-ARRIERE (S)PARACHOQUES-TRASERO	1			
[03]	96205790 96205791	(E)BRACKET-BUMPER,RR SIDE (D)TRÄGER	S	S		(F)SUPPORT (S)SOPORTE	LH 1 RH 1			
[04]	09148-04010	(E)NUT-SPEED (D)MUTTER	S	S		(F)ECROU (S)TUERCA	2			
[05]	02124-04122	(E)SCREW-CR MACHINE (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	8			
[06]	09148-01001	(E)NUT-SPEED (D)MUTTER	S	S		(F)ECROU (S)TUERCA	8			
[07]	96205781	(E)BEAM A-BUMPER IMPACT,RR (D)STANGE,HINTERE STOBSTANGE	S	S	&VT2.	(F)BARRE (S)BARRA-IMPACTO	1			
[08]	96205784 96205785	(E)STAY A-BUMPER,RR (D)TRÄGER	S	S	&VT2.	(F)SUPPORT (S)SOPORTE	LH 1 RH 1			
[09]	96242489	(E)PLATE A-STUD (D)PLATTE	S	S	&VT2.	(F)PLAQUE (S)PLACA	4			
LEVEL						T/A(TRANSAXLE)				
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				

6730 REAR BUMPER

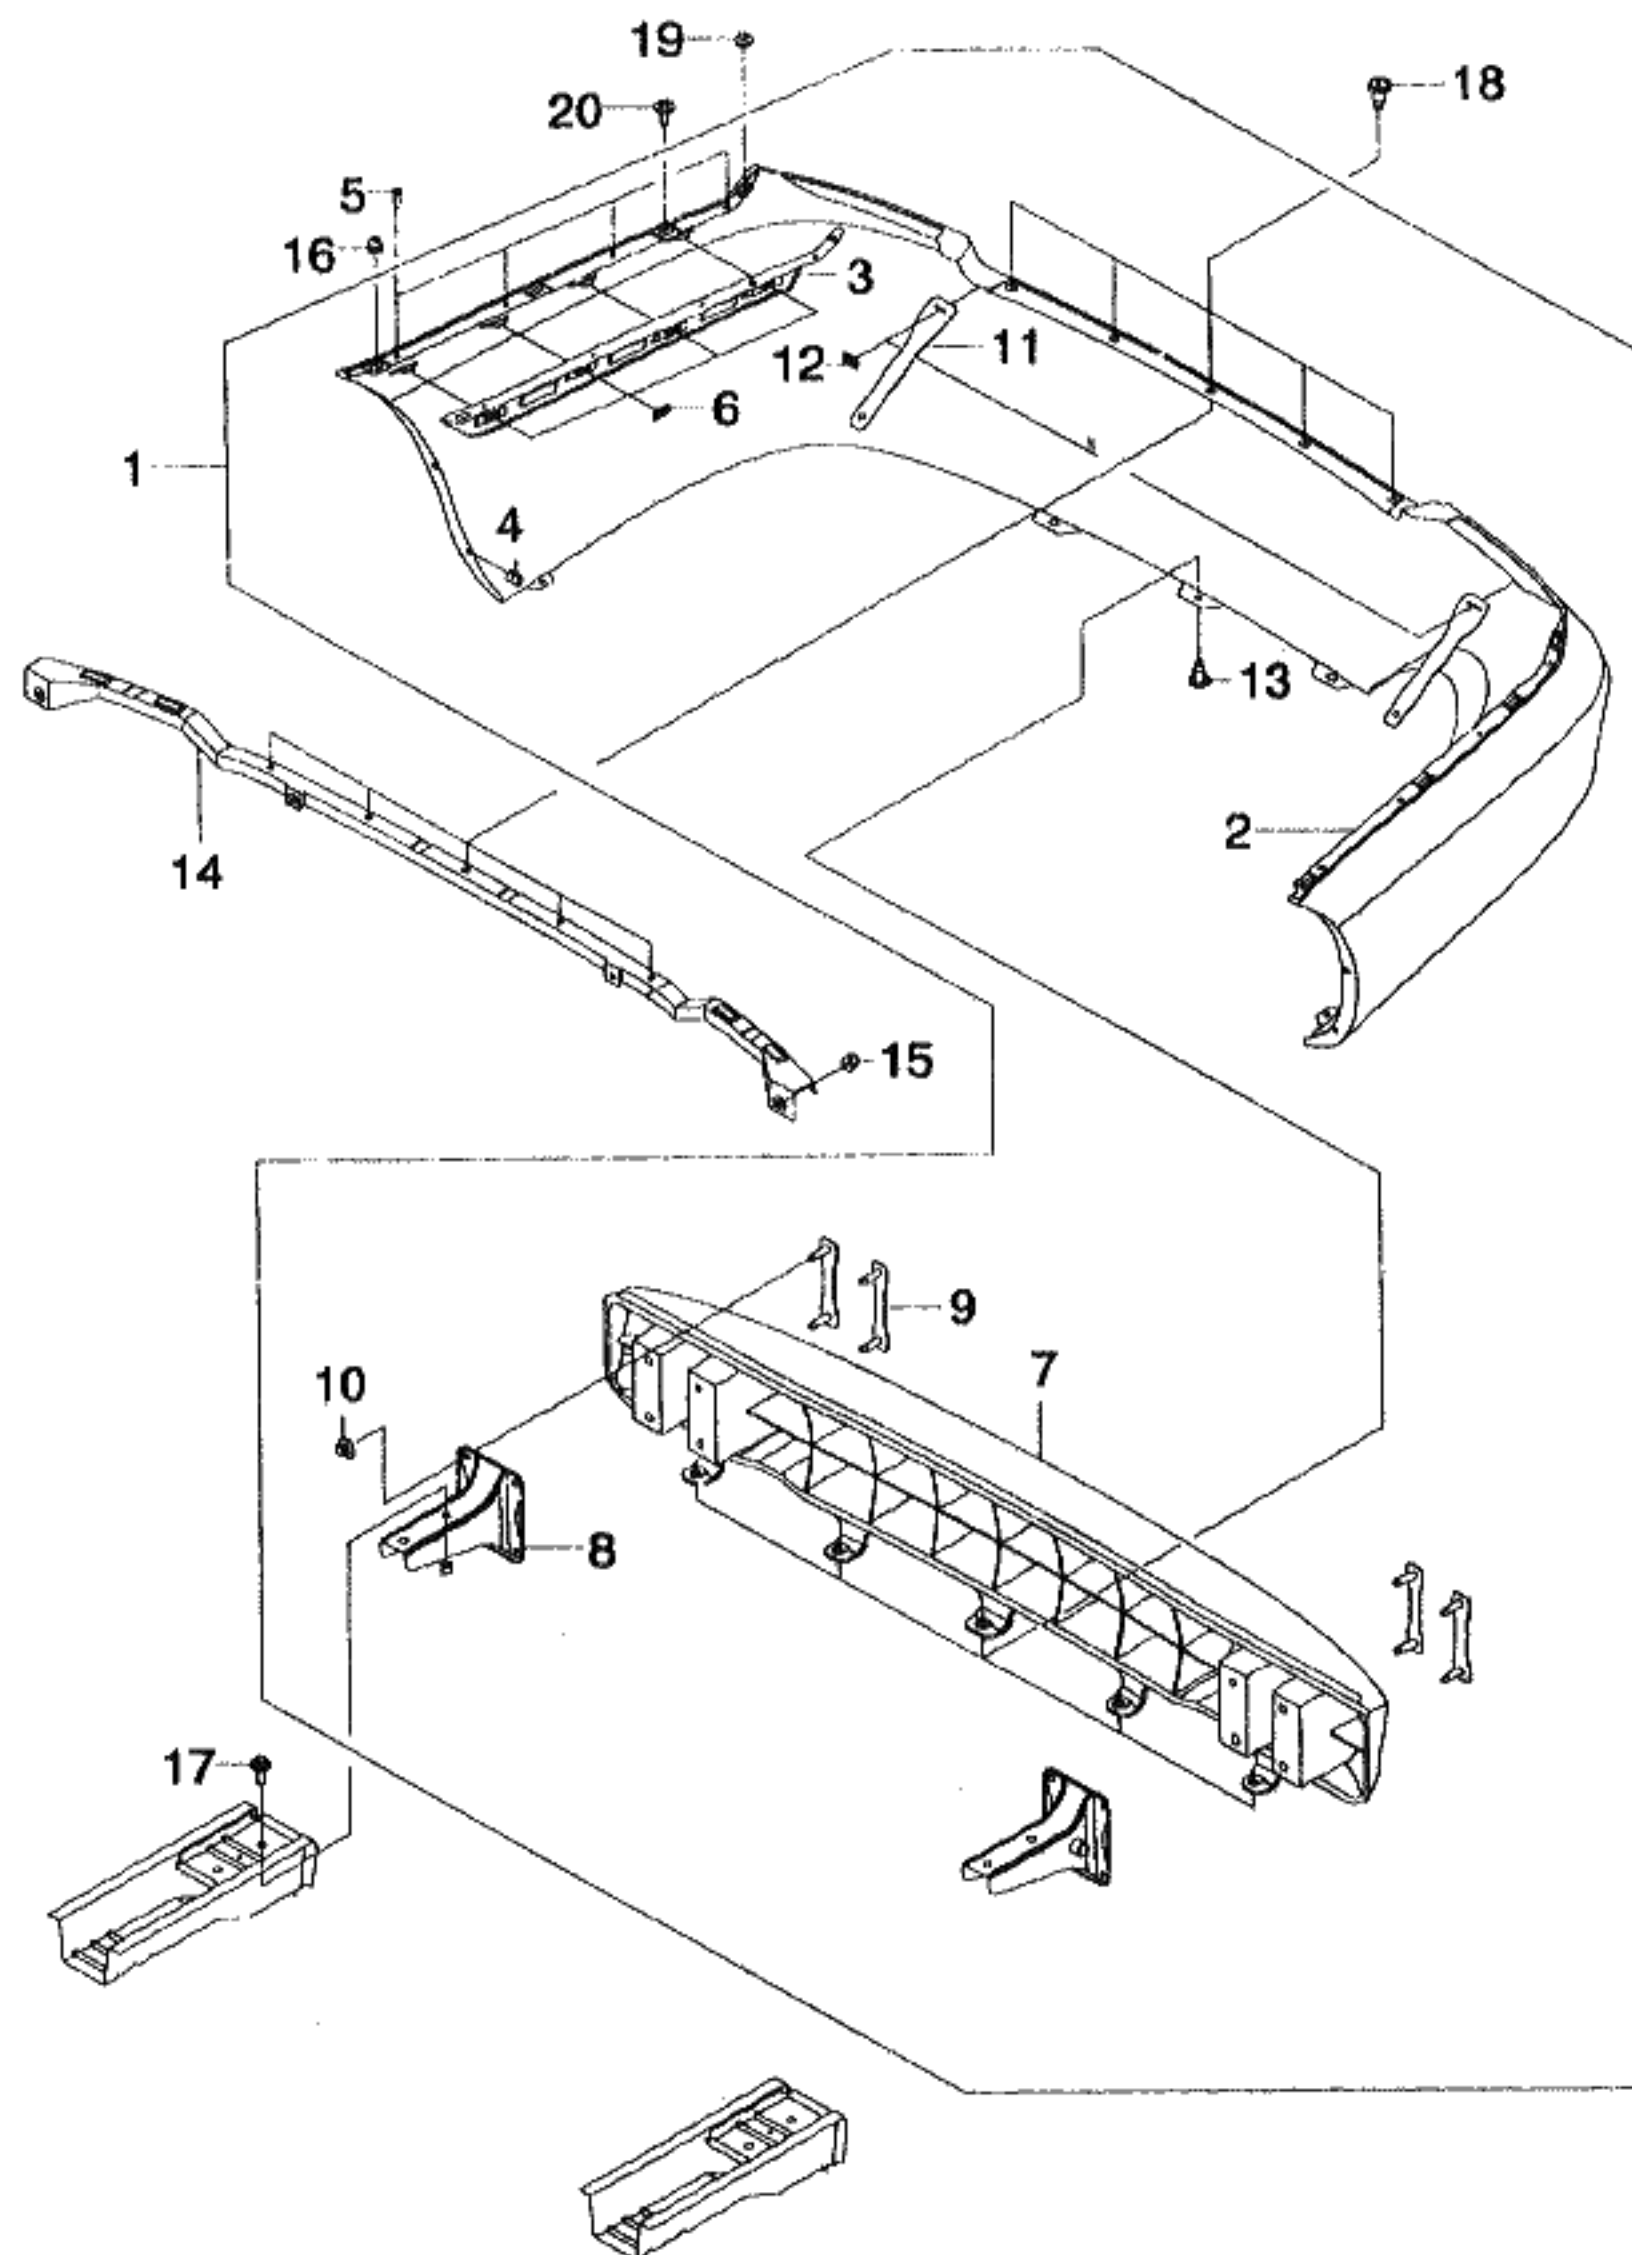


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 08316-28082	(E)NUT-FLANGE (D)MUTTER . S S					(F)ECROU (S)TUERCA 8				
	[11] 96242443	(E)BAND-BUMPER RR (D)BAND . S S					(F)BANDE (S)BRIDA 2				
	[12] 09148-01001	(E)NUT-SPEED (D)MUTTER . S S					(F)ECROU (S)TUERCA 2				
	[13] 09409-09303	(E)CLIP (D)KLEMMER . S S					(F)ATTACHE (S)GRAPA 5				
	[14] 96205776	(E)BRACKET-SUPPORT BUMPER,RR (D)TRÄGER . S S					(F)SUPPORT (S)SOPORTE 1				
	[15] 08316-18062	(E)NUT-FLANGE (D)MUTTER . S S					(F)ECROU (S)TUERCA 4				
	[16] 09148-04015	(E)NUT-SPEED (D)MUTTER . S S					(F)ECROU (S)TUERCA 2				
	[17] 09118-10002	(E)BOLT-W/WASHER (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 4				
	[18] 09409-09303	(E)CLIP (D)KLEMMER . S S					(F)ATTACHE (S)GRAPA 5				
	[19] 09159-06013	(E)NUT (D)MUTTER . S S					(F)ECROU (S)TUERCA 2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


6730 REAR BUMPER

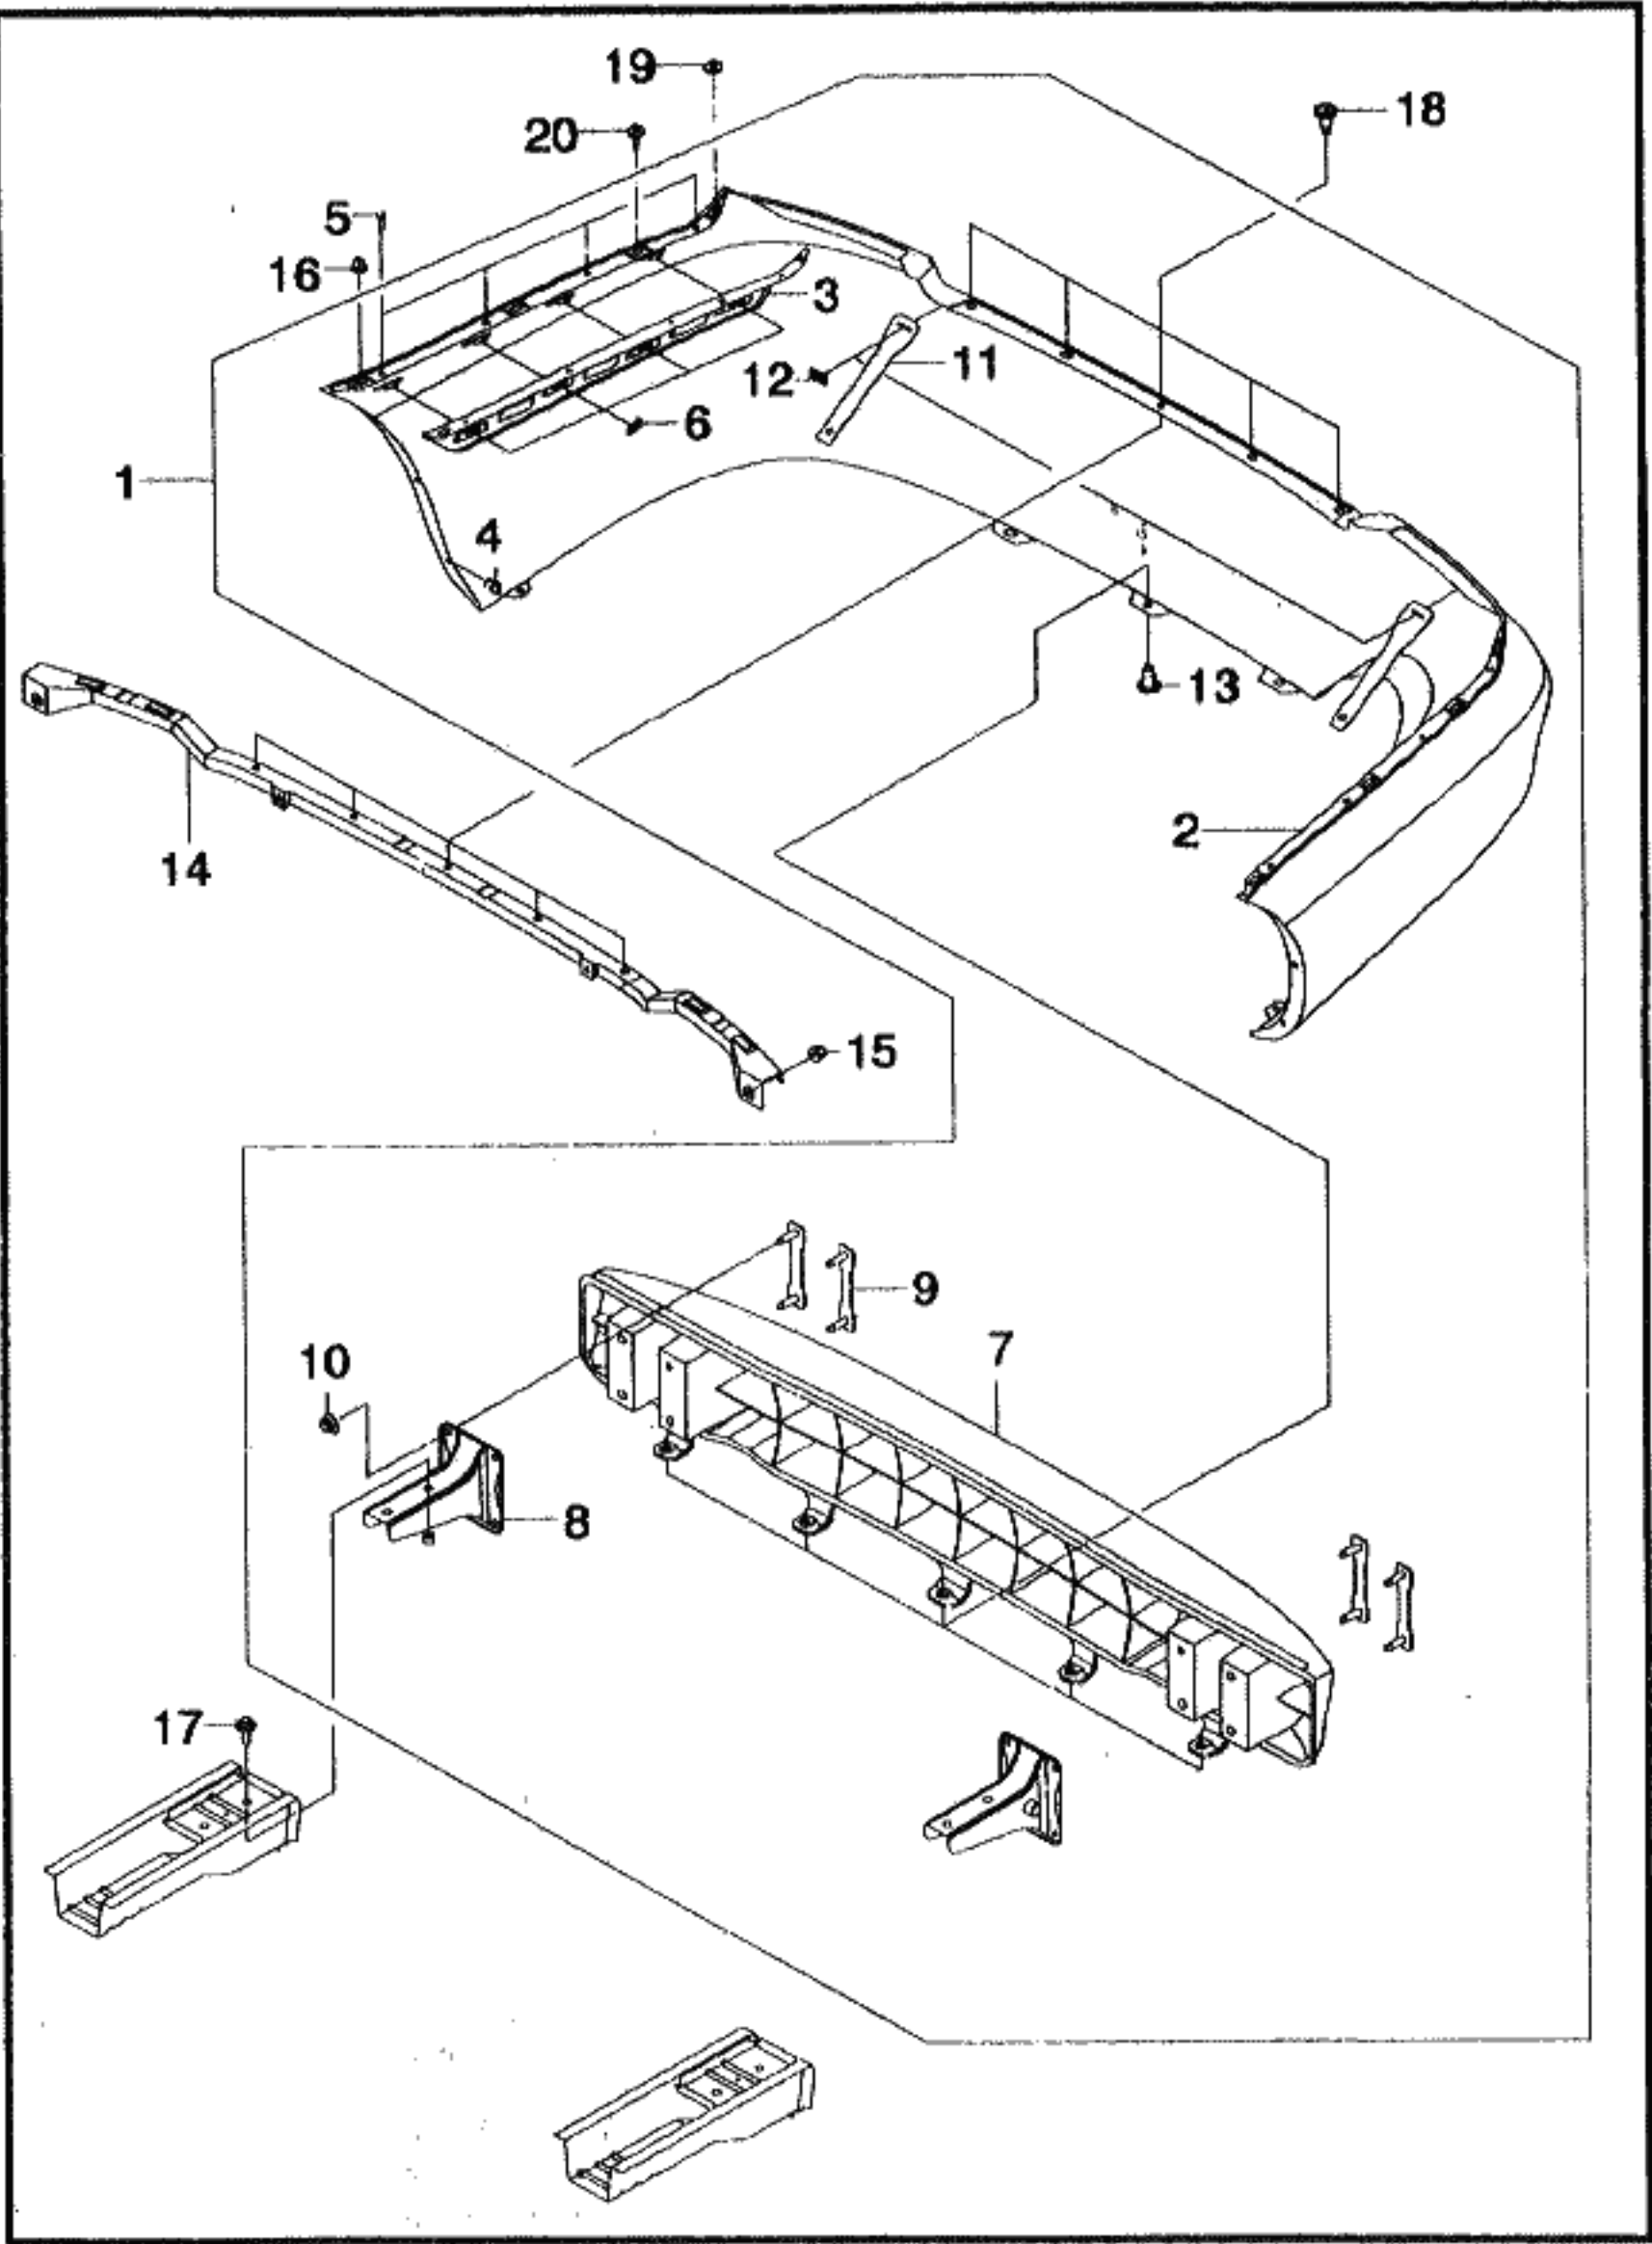

KEY NO.				PART NAME							
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20] 09119-06020	(E)BOLT (D)SCHRAUBE .	S	S			(F)BOULON (S)PERNO 2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

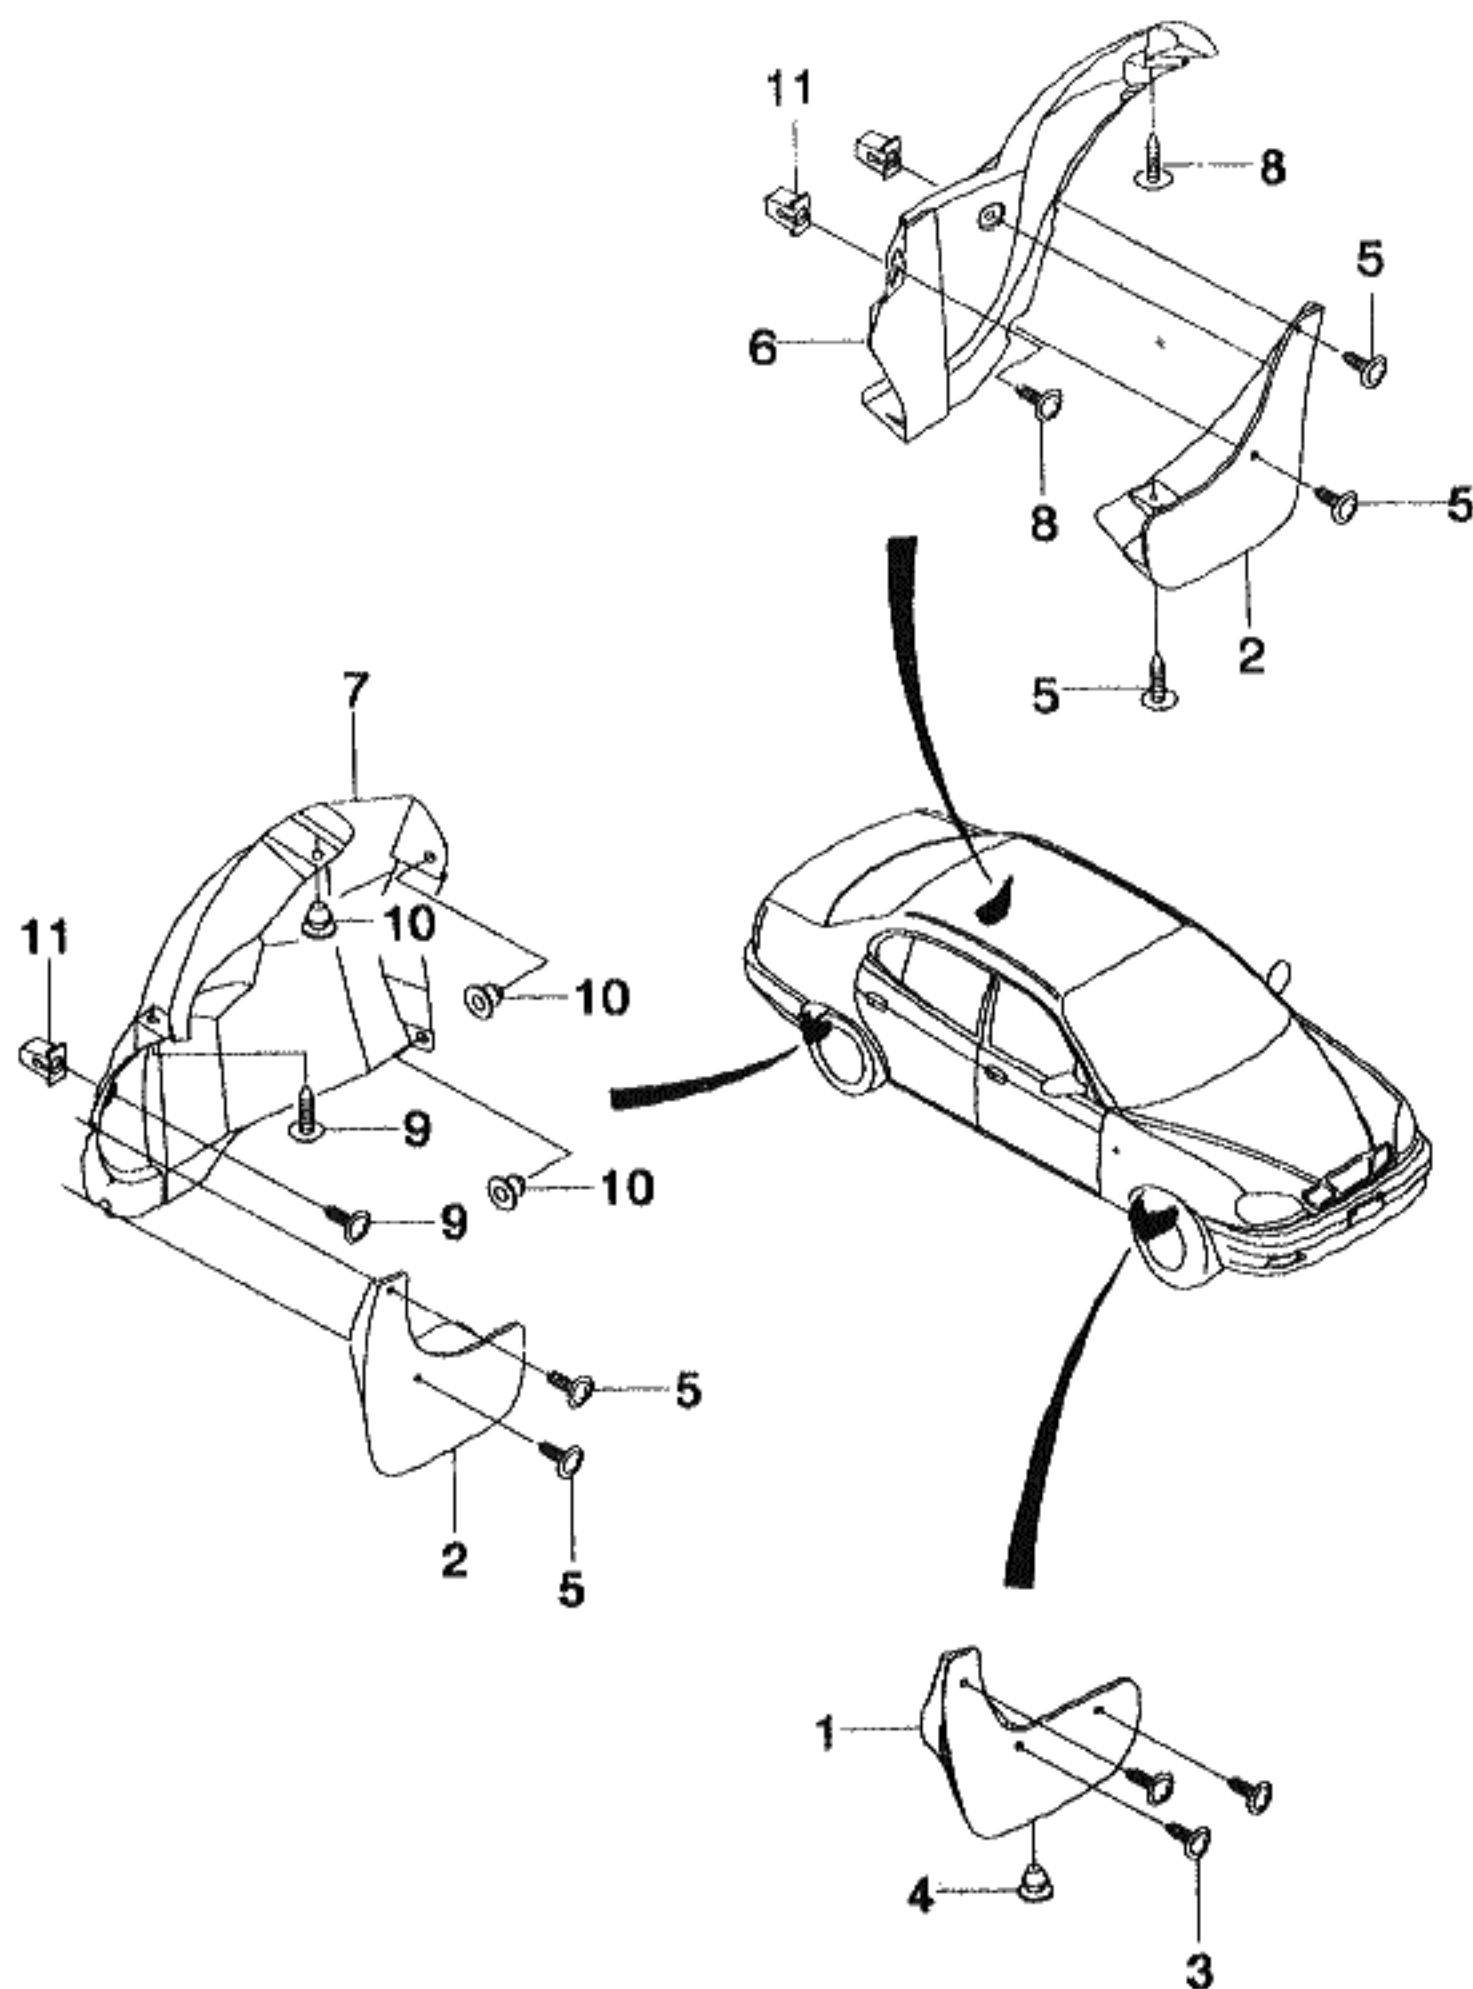

KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X								C D X
	[01]	(E)GUARD A-MUD,FR (D)KOTFLÜGEL			(F)GARDE-BOUE (S)PROTECTOR						
	96205731	. S S			LH 1						
	96205732	. S S			RH 1						
	[02]	(E)GUARD A-MUD,RR (D)KOTFLÜGEL			(F)GARDE-BOUE (S)PROTECTOR						
	96205733	. S S			LH 1						
	96205734	. S S			RH 1						
	[03]	(E)SCREW-TAPPING (D)SCHRAUBE			(F)VIS (S)TORNILLO						
	09136-04005	. S S			6						
	[04]	(E)CLIP (D)KLEMME			(F)ATTACHE (S)GRAPA						
	09409-09302	. S S			2						
	[05]	(E)SCREW-TAPPING (D)SCHRAUBE			(F)VIS (S)TORNILLO						
	09136-04005	. S S			6						
	[06]	(E)LINER A-BUMPER,RR (D)AUSKLEIDUNG			(F)GARNITURE (S)REVESTIMIENTO						
	96234170	. S S			LH 1						
	[07]	(E)LINER A-BUMPER,RR (D)AUSKLEIDUNG			(F)GARNITURE (S)REVESTIMIENTO						
	96234171	. S S			RH 1						
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE			(F)VIS (S)TORNILLO						
	09136-04005	. S S			LH 3						
	[09]	(E)SCREW-TAPPING (D)SCHRAUBE			(F)VIS (S)TORNILLO						
	09136-04005	. S S			RH 2						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

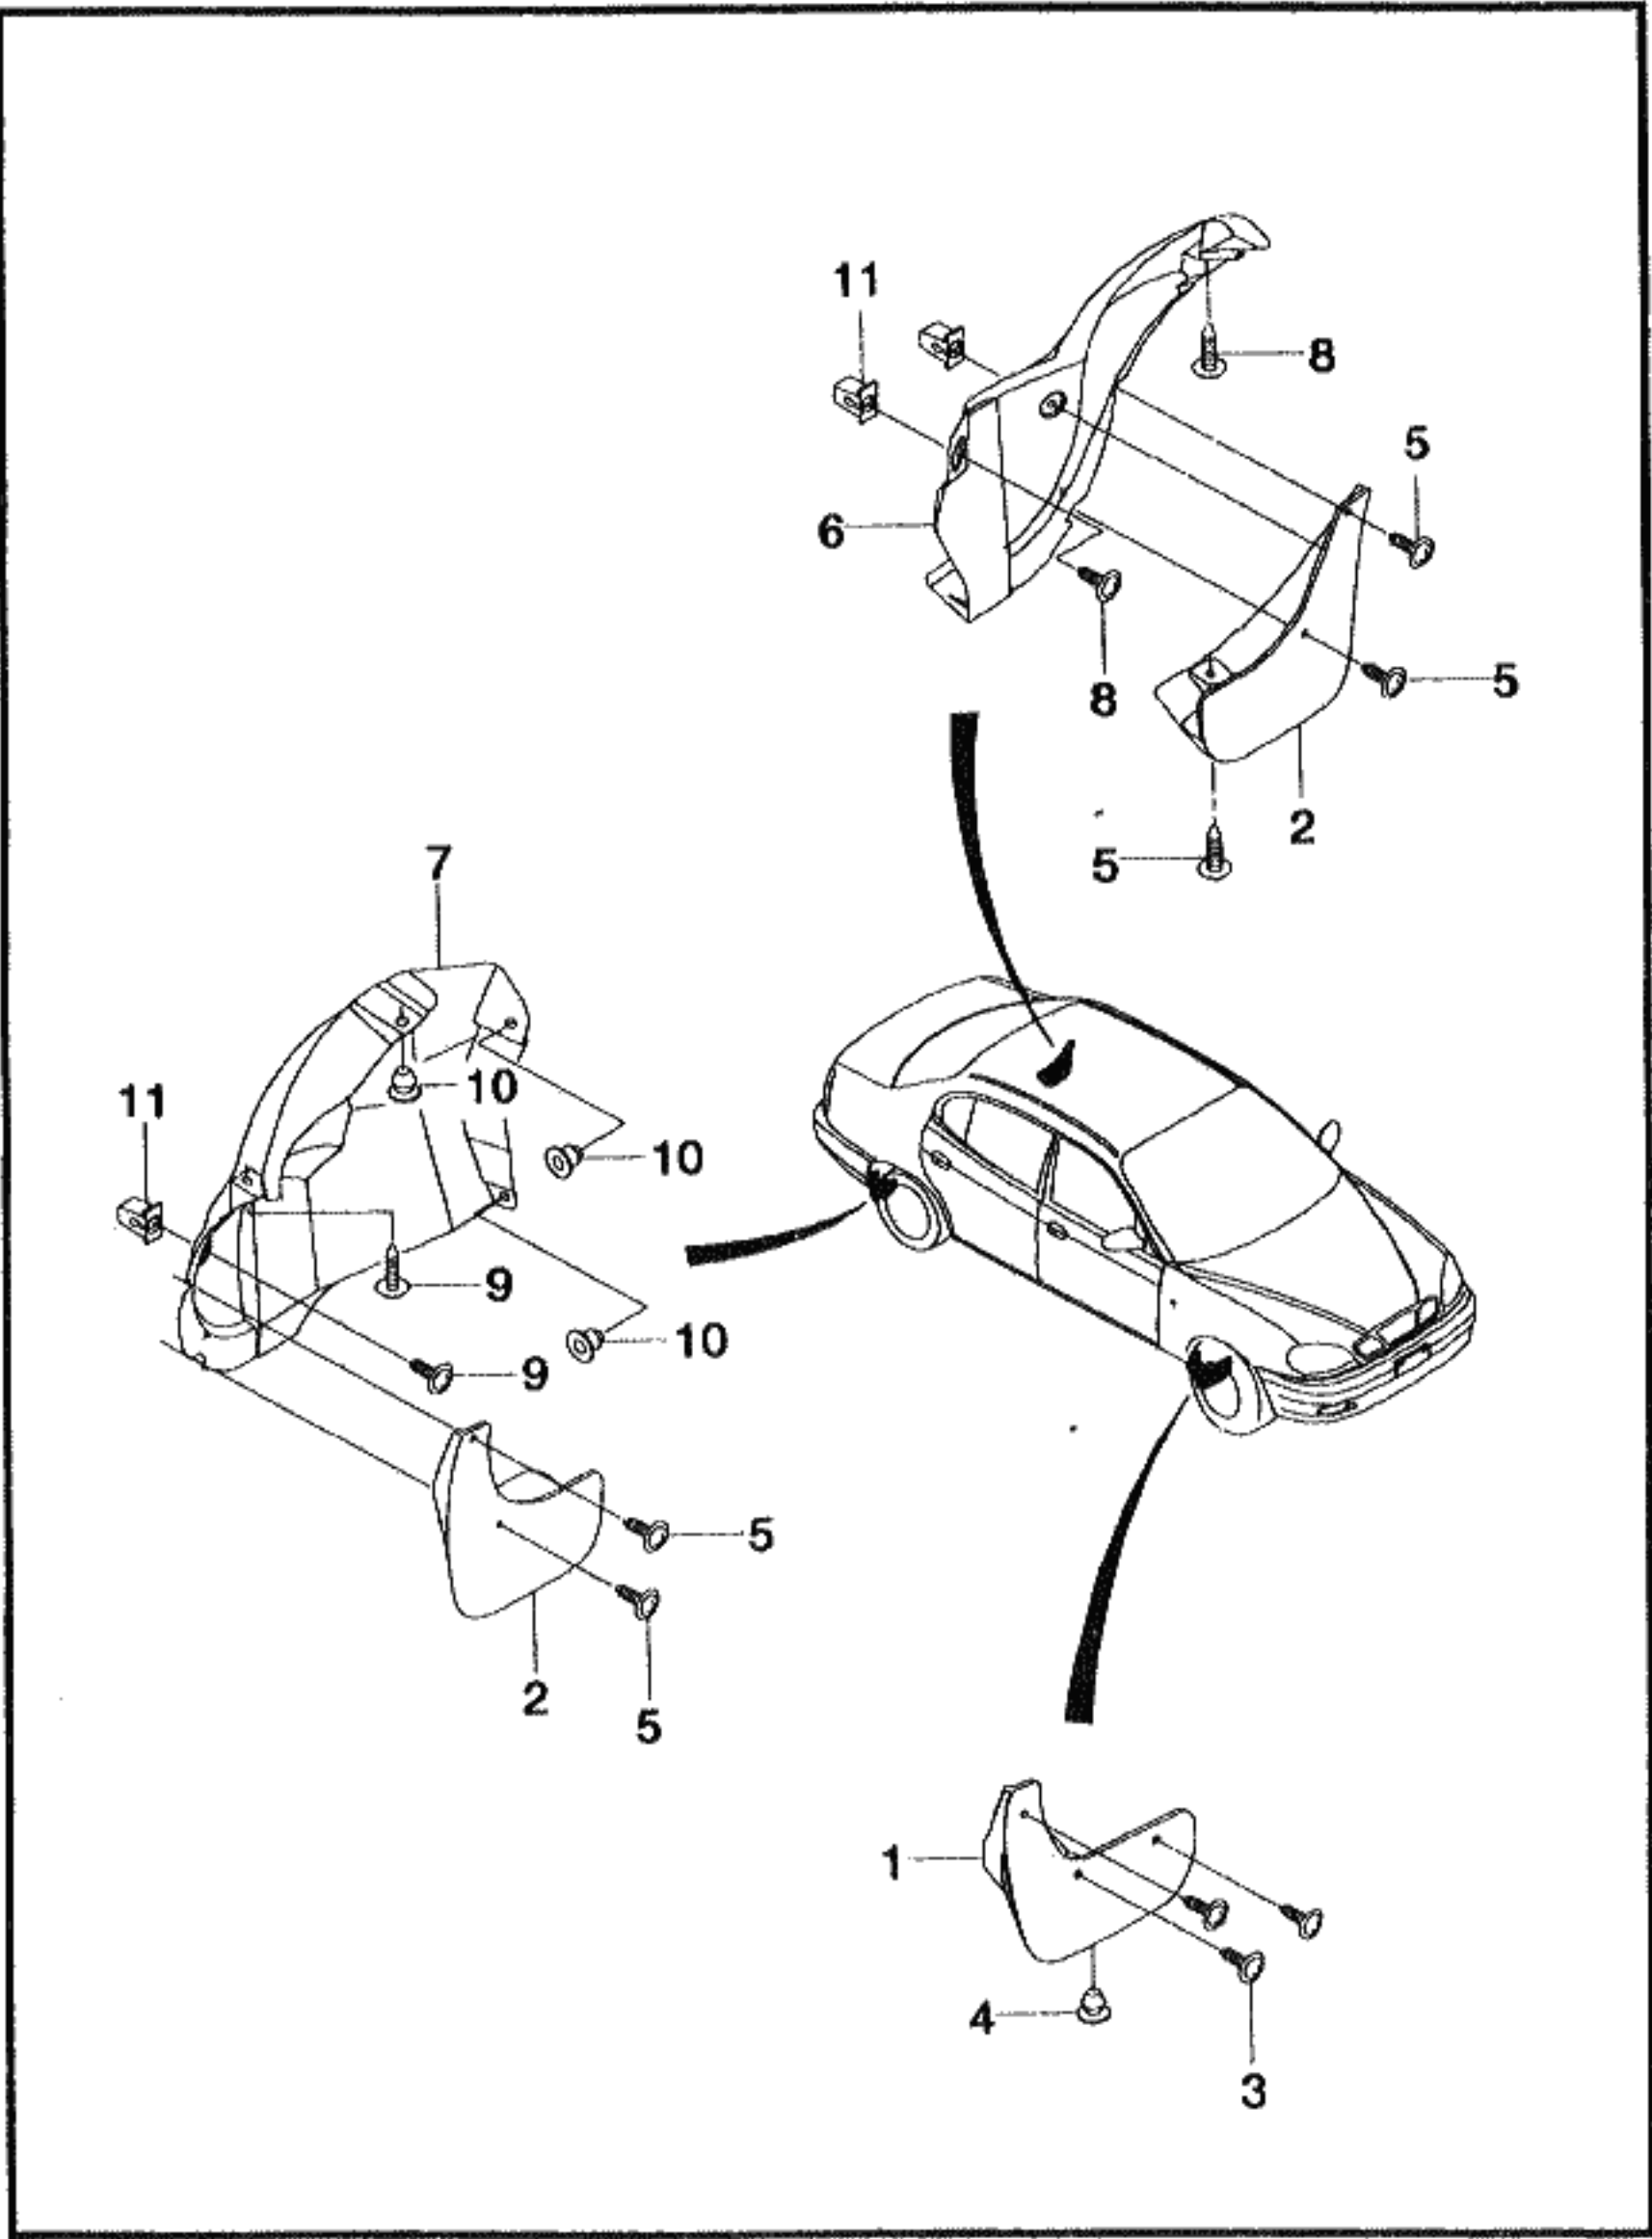

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / CODE	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[10] 09409-09302	(E)CLIP (D)KLEMME . S S					(F)ATTACHE (S)GRAPA RH 3					
	[11] 09148-04003	(E)NUT-SPEED (D)MUTTER . S S					(F)ECROU (S)TUERCA LH 2					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

7**INTERIOR**

7110 INSTRUMENT PANEL

7120 MOLDING

7130 INSTRUMENT CENTER PARTS

7140 CONSOLE

7210 FRONT DOOR TRIM

7220 REAR DOOR TRIM

7310 HEADLINING

7320 SHELF BACK PANEL

7330 FRONT PILLAR TRIM

7340 REAR PILLAR TRIM

7350 SUNSHADE & INSIDE MIRROR

7510 FRONT SEAT

7520 FRONT SEAT PARTIAL

7530 FRONT SEAT GUIDE RAIL

7540 REAR SEAT I


7541 REAR SEAT II

7550 FRONT SEAT BELT


7560 REAR SEAT BELT

7610 FLOOR CARPET

7630 DEADENER

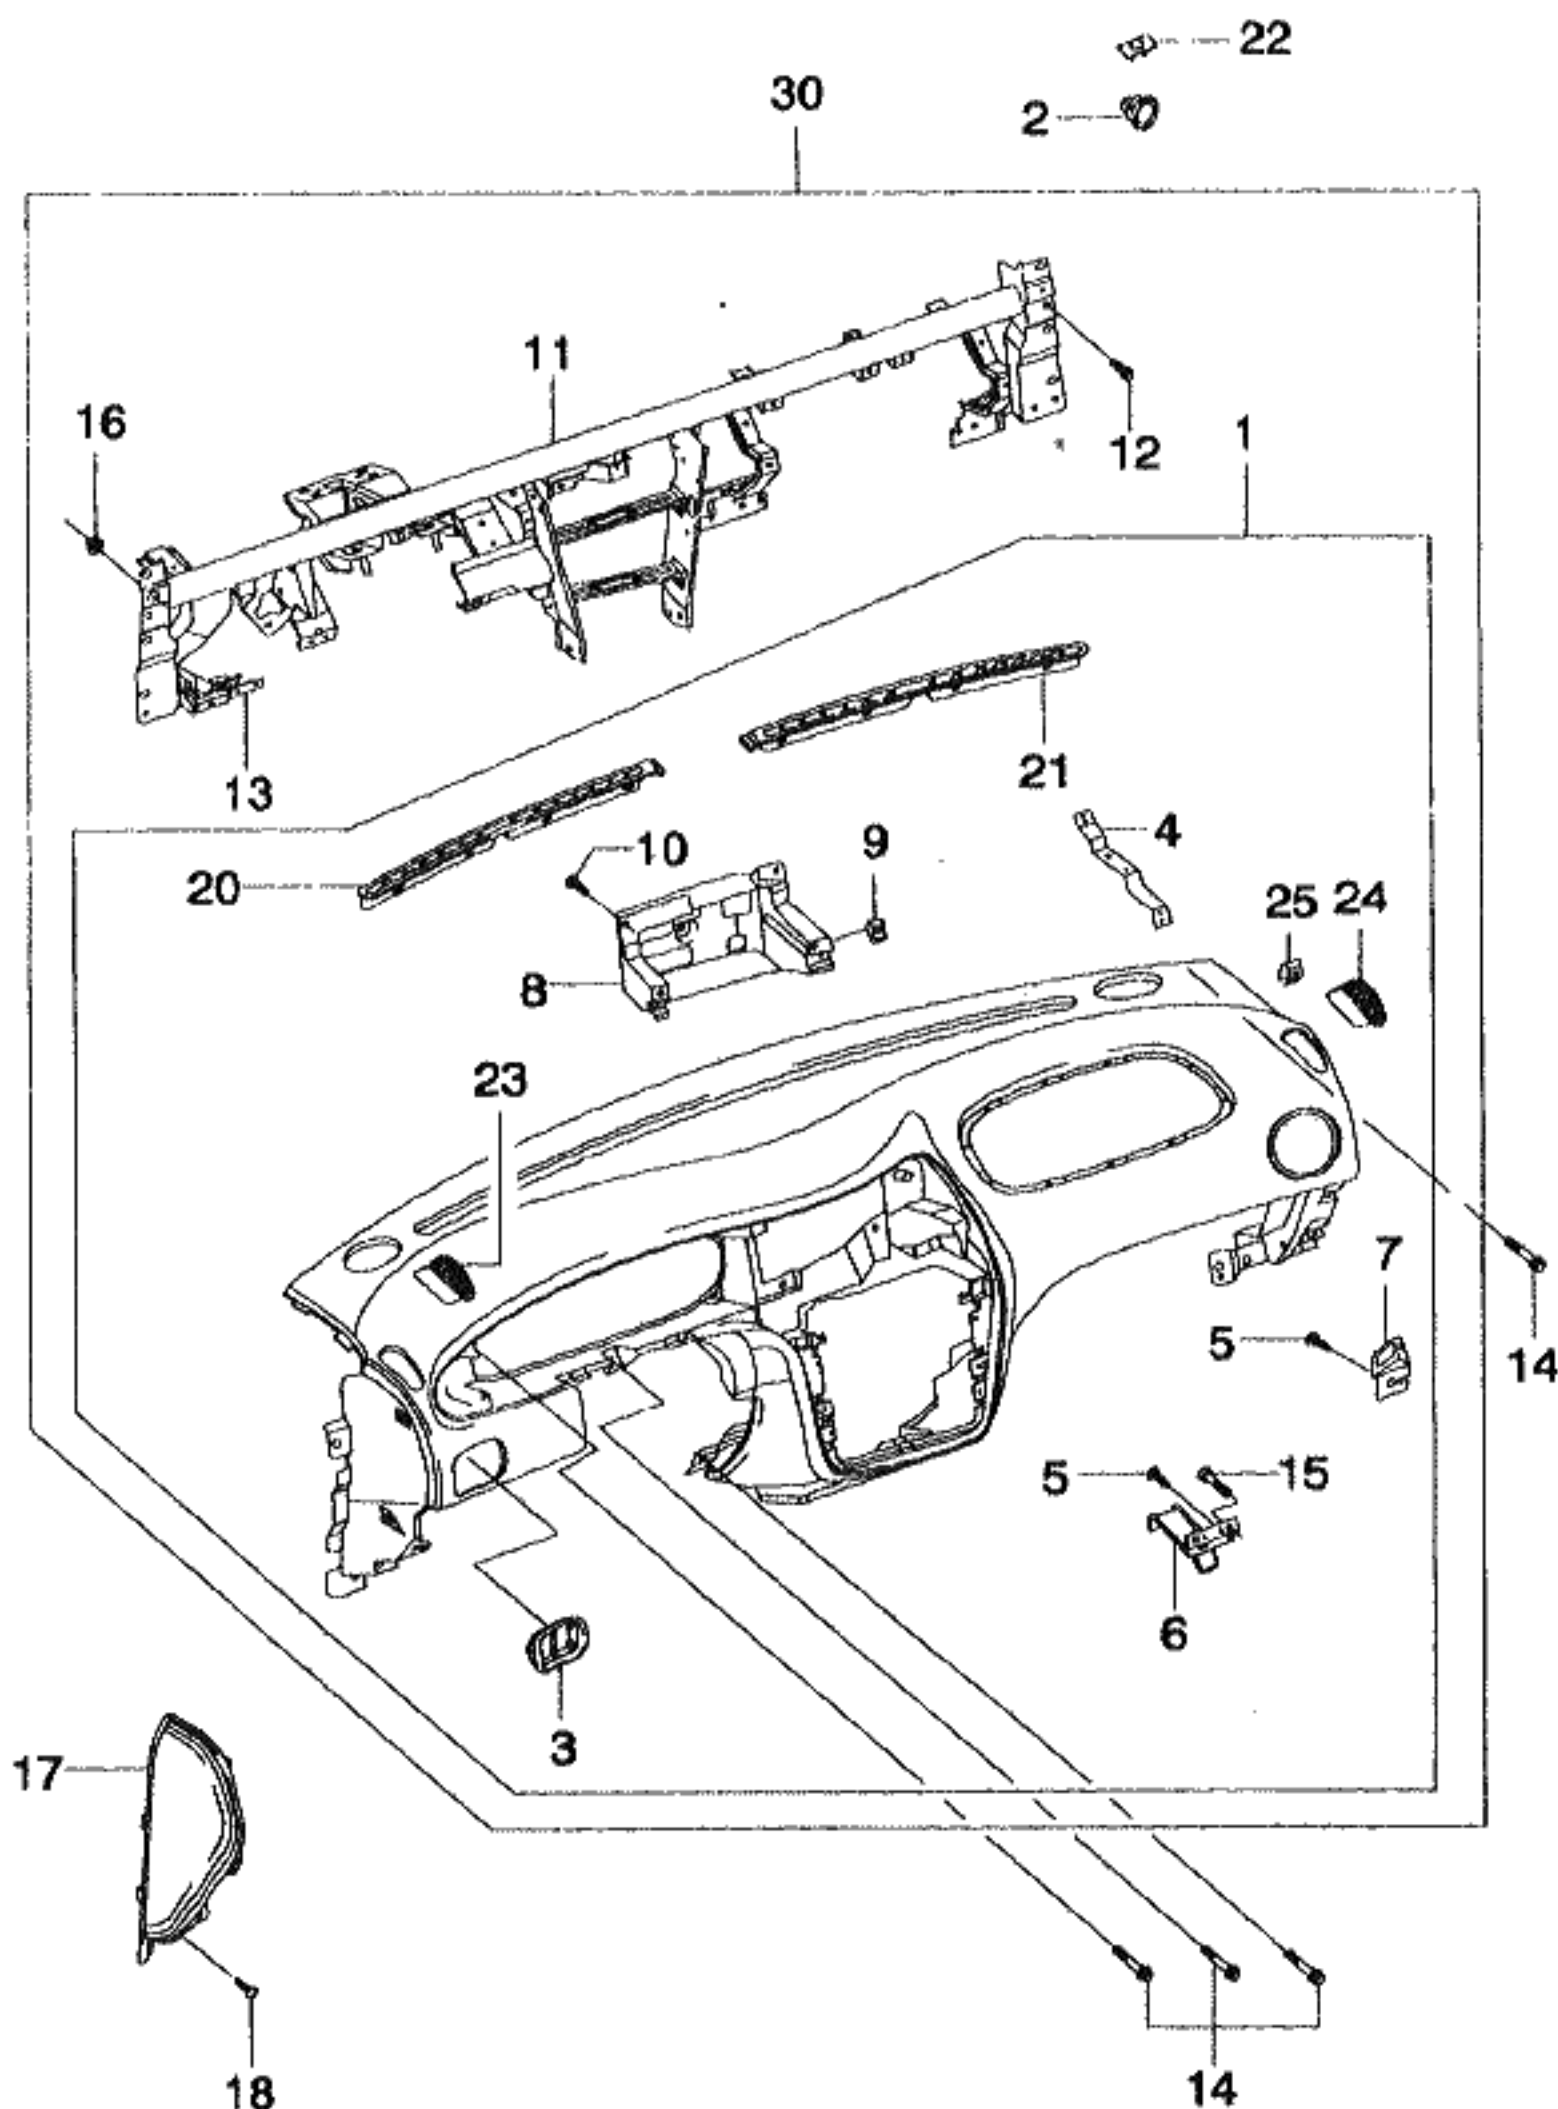

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E)PANEL A-INSTRUMENT (D)UNTERLAGE,INSTRUMENT				(F)PATIN-TABLEAU DE BORD (S)COJIN-INSTRUMENTO					
96239642		S S		&821		1					
96239644		O O		&821&AJ7		1					
[02]		(E)DOWEL-GUIDE PIN,I/P (D)STIFT,DÜBEL				(F)BROCHE-GOUJON (S)PASADOR-CLAVIJA					
96227452		S S				3					
[03]		(E)BEZEL A-SWITCH (D)KASTEN				(F)BISEAU (S)BISEL					
96239666		S S		&821		1					
[04]		(E)BRACKET (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
96248162		S S				RH 1					
96215831		O O		&AJ7		2					
[05]		(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO					
03160-42133		S S				2					
[06]		(E)BRACKET A-STRIKER (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
96215837		S S				1					
[07]		(E)BRACKET-NOZZLE OUTER (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
96233189		S S				RH 1					
[08]		(E)BEZEL-AUDIO (D)KASTEN				(F)BISEAU (S)BISEL					
96239674		S S		&821		1					
[09]		(E)NUT-SPEED (D)MUTTER				(F)ECROU (S)TUERCA					
09148-04022		S S				1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A , = COMMON						

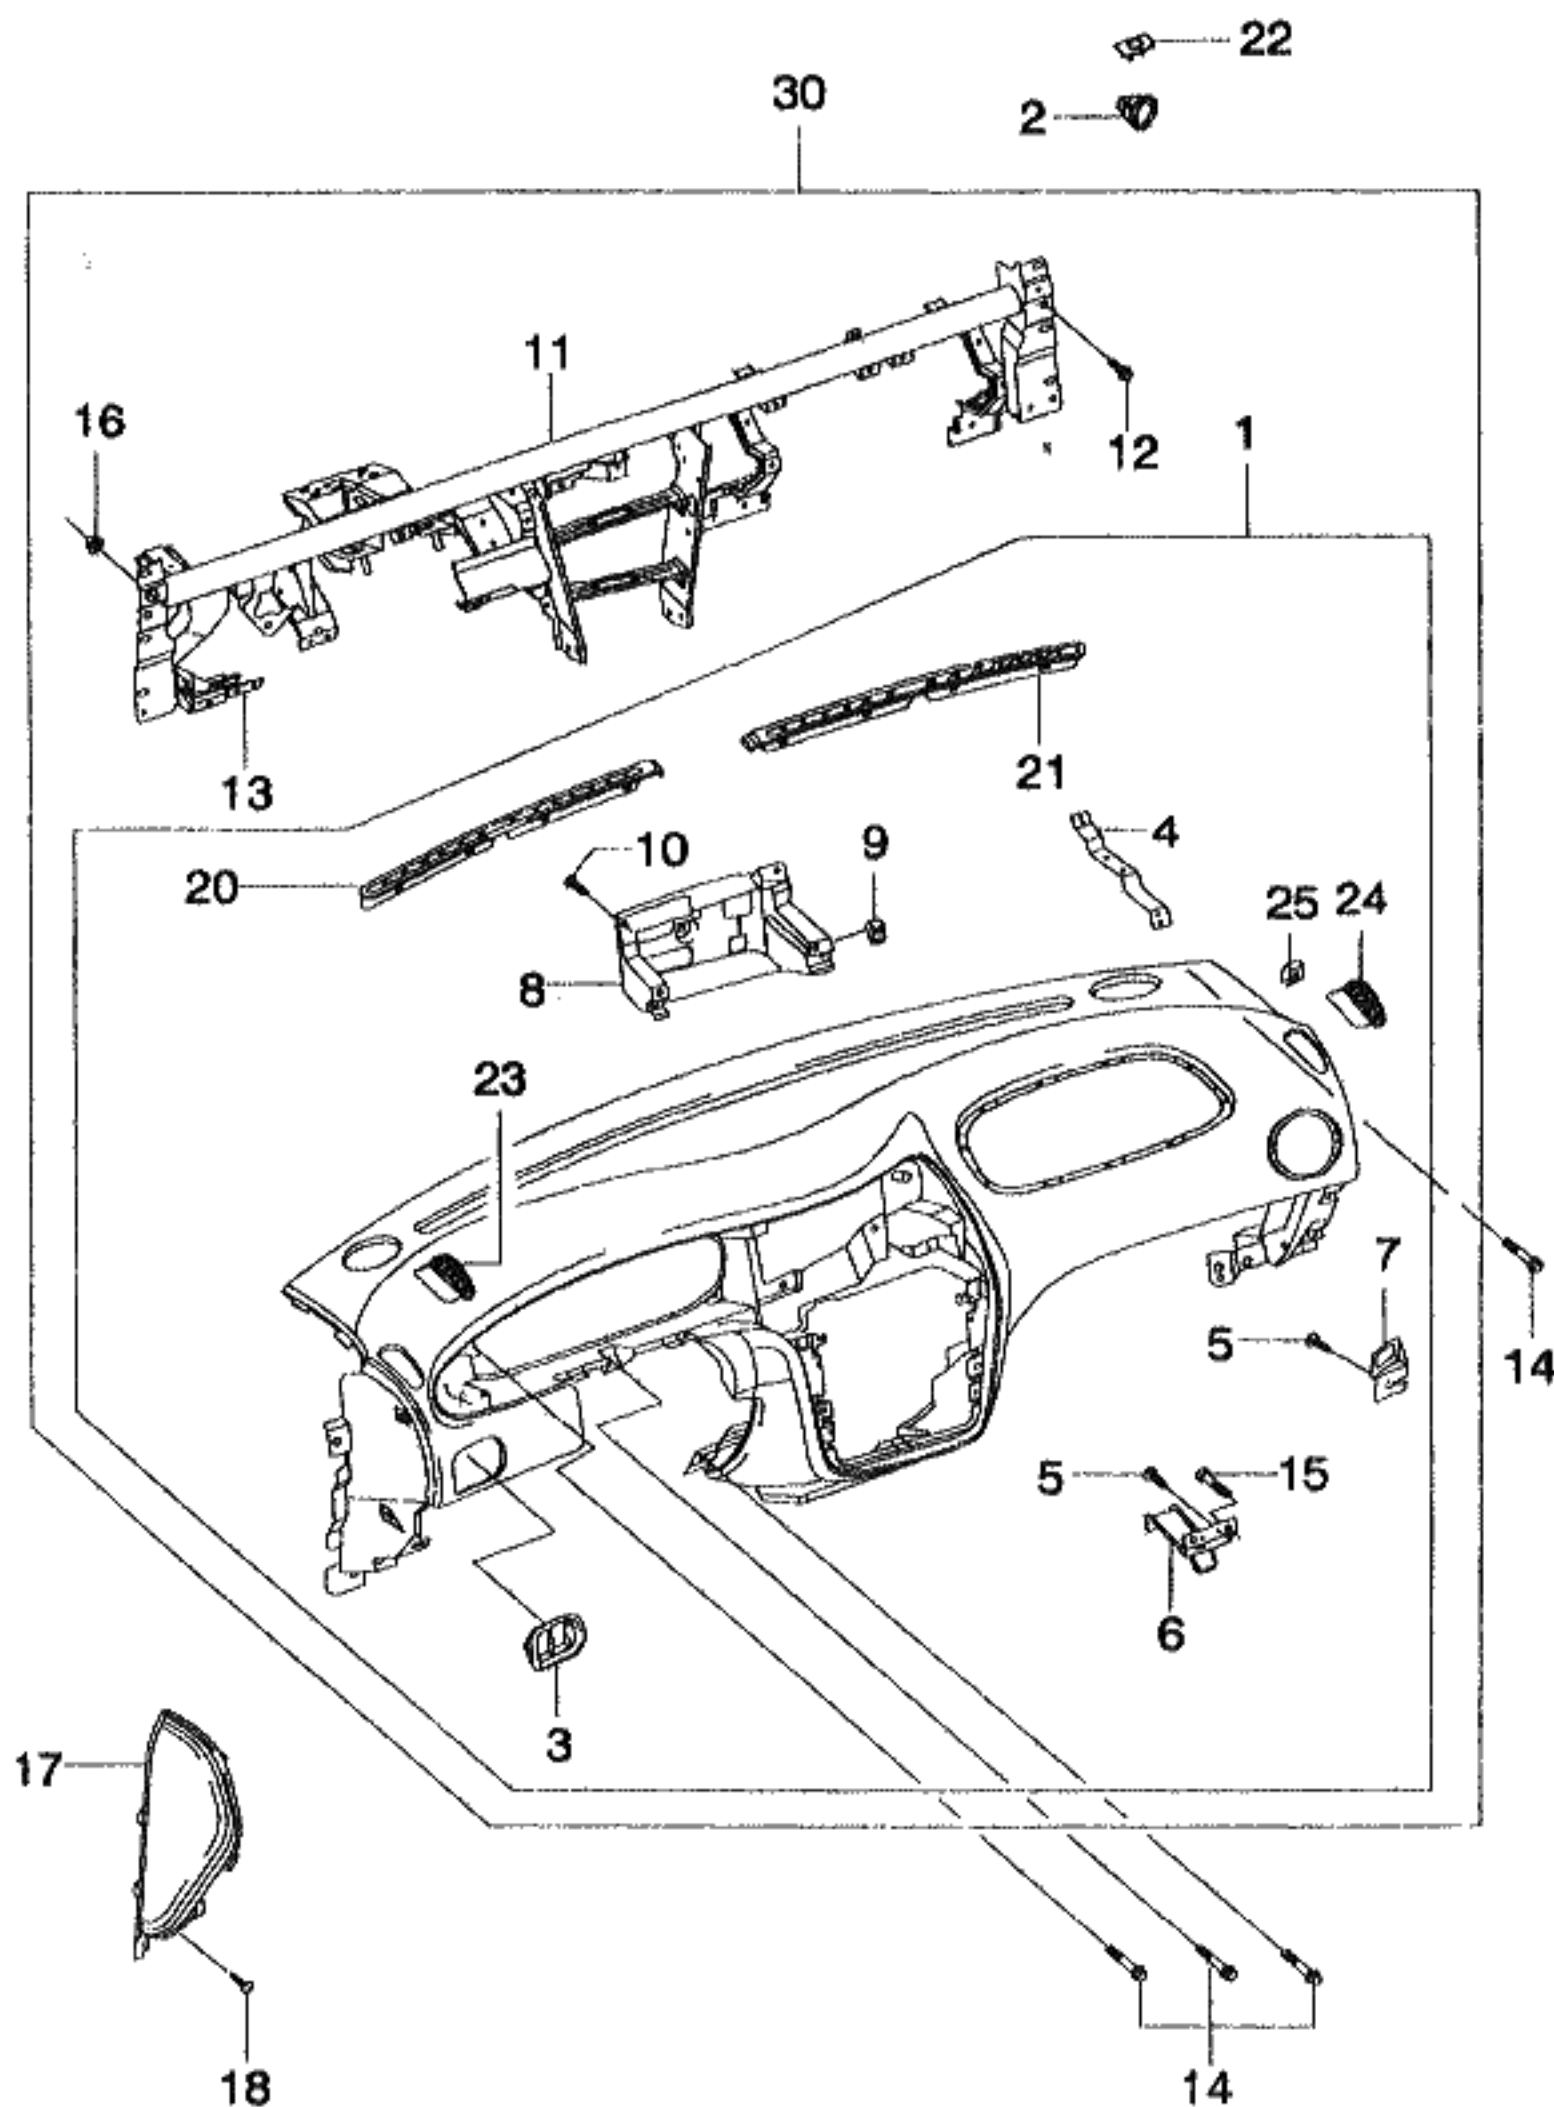

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[10] 03160-48163	(E)SCREW-TAPPING (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 4					
	[11] 96194934 96194936	(E)BAR A-TIE (D)STANGE . S S . O O &AJ7				(F)BARRE (S)BARRA 1 1					
	[12] 02657-08203	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 6					
	[13] 96215902 96215906	(E)BRACKET A-INST PANEL,SIDE (D)TRÄGER . S S . S S				(F)SUPPORT (S)SOPORTE LH 1 RH 1					
	[14] 01517-06203	(E)BOLT-FLANGE (D)SCHRAUBE . S S				(F)BOULON (S)PERNO 2					
	[15] 03160-48165	(E)SCREW-TAPPING (D)SCHRAUBE . S S				(F)VIS (S)TORNILLO 1					
	[16] 08316-25063	(E)NUT-FLANGE (D)MUTTER . S S				(F)ECROU (S)TUERCA 4					
	[17] 96239678 96239686 96248170	(E)COVER A-INST PANEL,SIDE (D)DECKEL . S S &B2I . S S &B2I . O O &B2I&AJ7				(F)COUVERTURE (S)CUBIERTA LH 1 RH 1 RH 1					
	[18]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO					


LEVEL

T/A (TRANSAXLE)

S X = 2.0 SOHC


M = MANUAL T/A
A = AUTOMATIC T/A
= COMMON

CDX = 2.0 DOHC

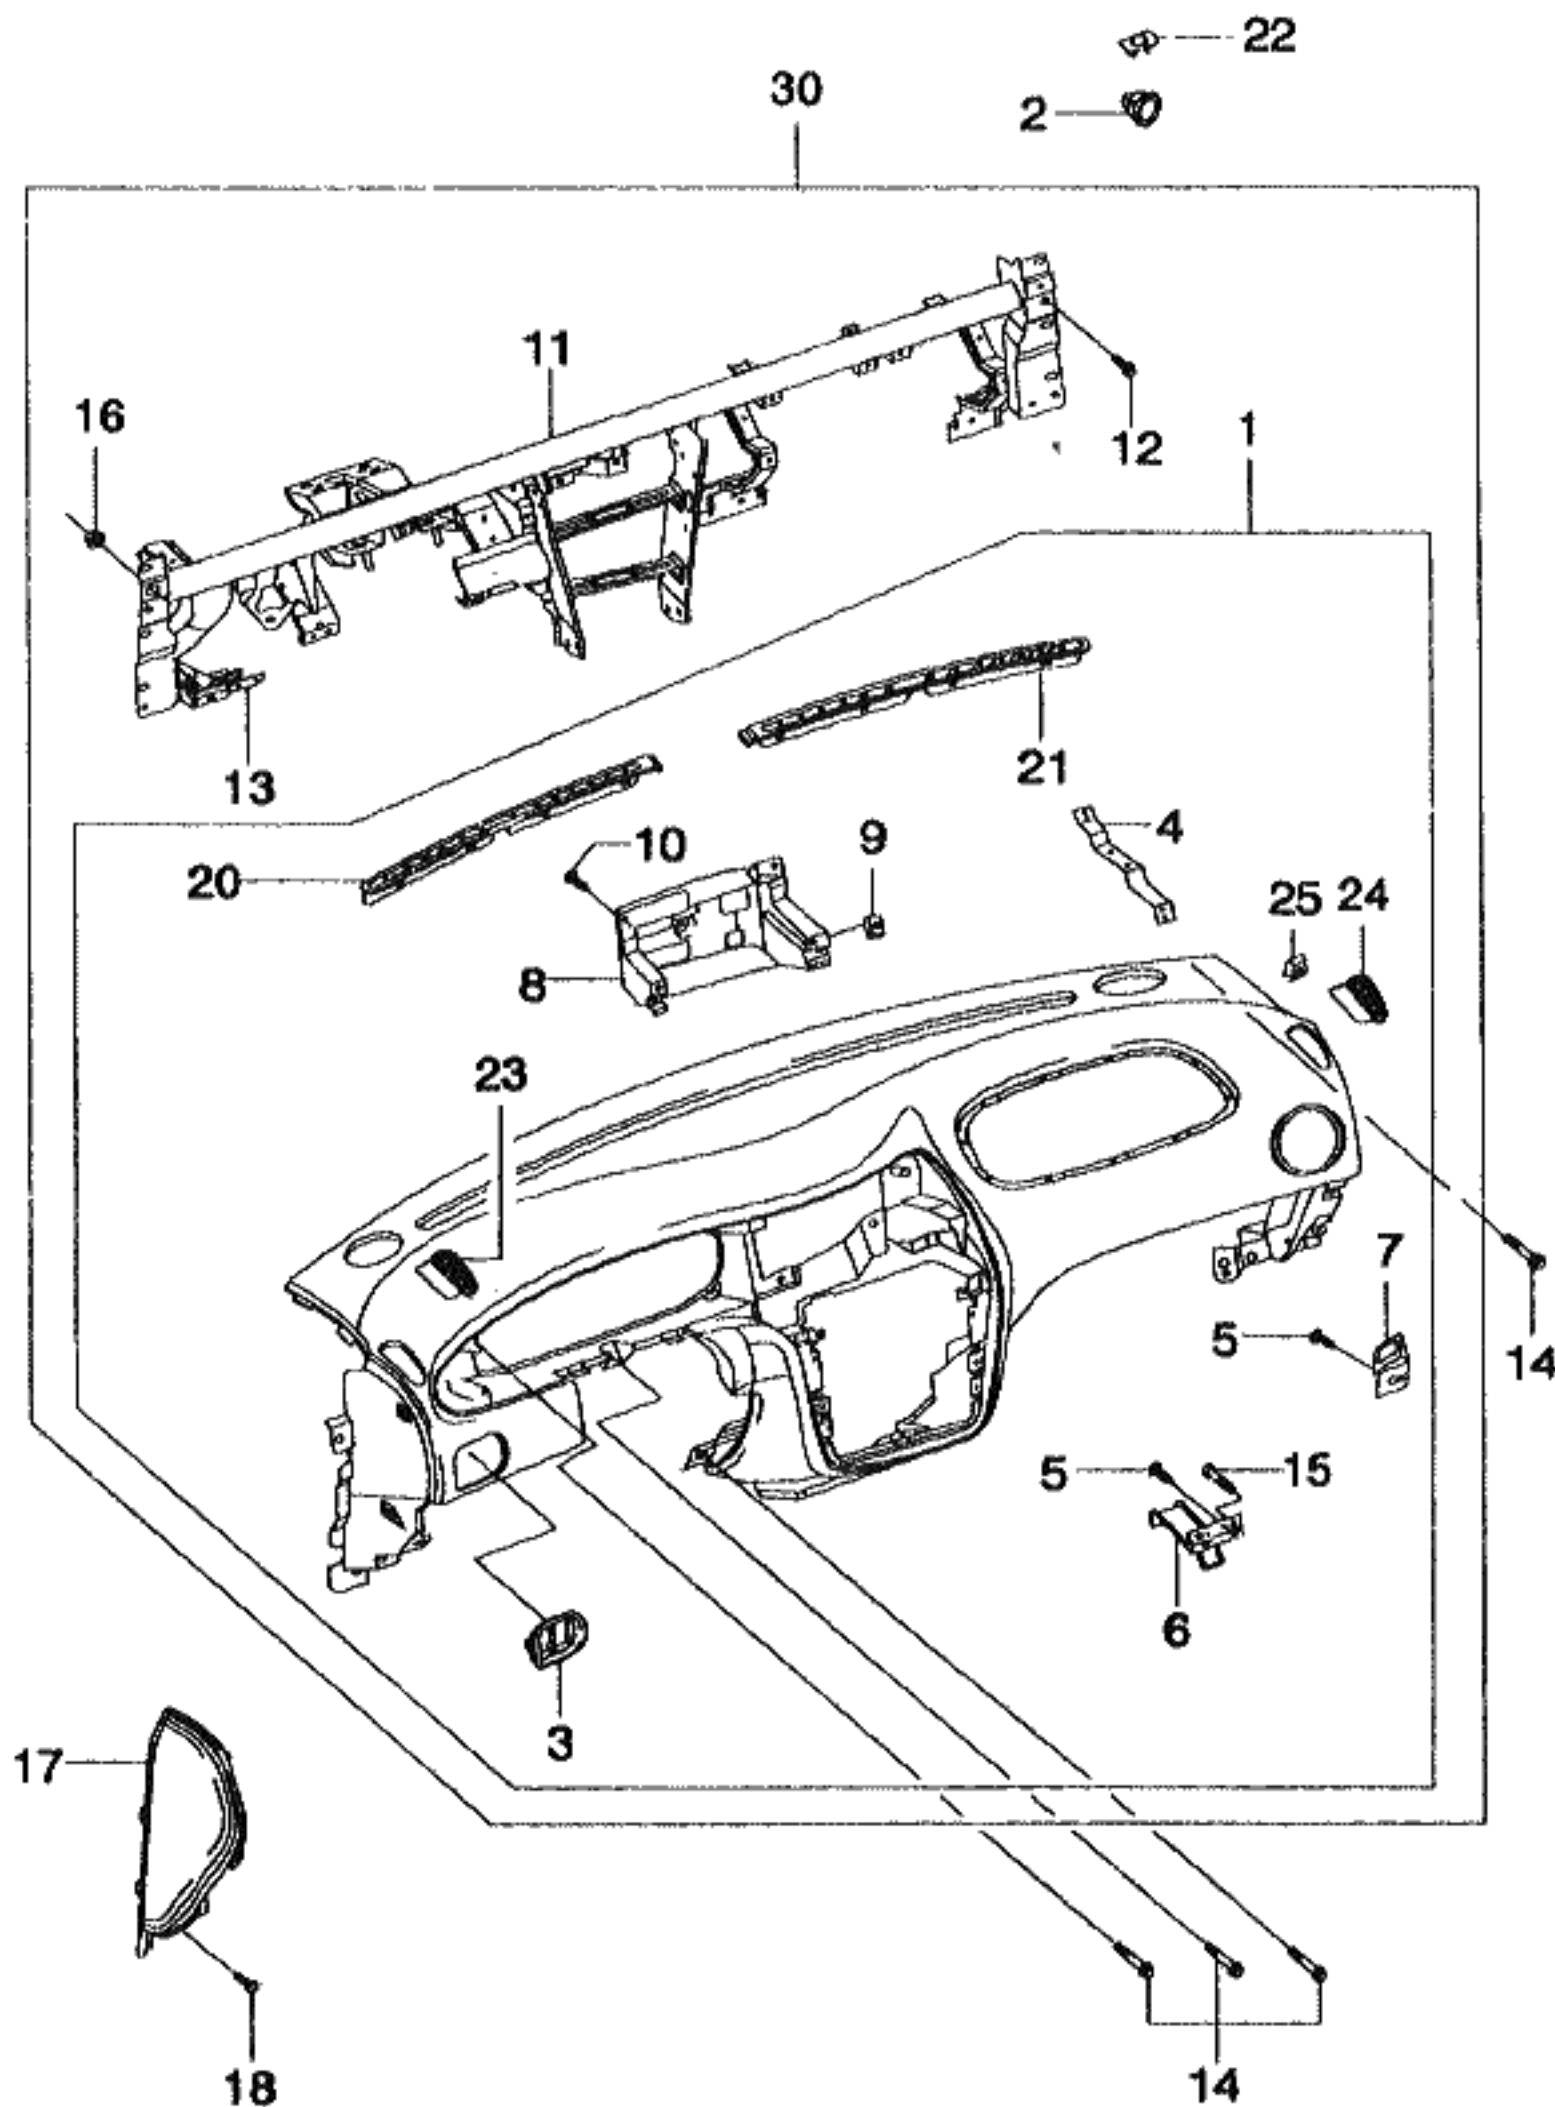


KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	03160-42165	.	S	S	(E)GRILLE-DEFROSTER W/SHIELD (D)GITTER,ENTFROSTER		1					
	[20]						(F)GRILLE (S)REJA-DESCONGELADOR					
	96239719	.	S	S	&821		LH 1					
	[21]				(E)GRILLE-DEFROSTER W/SHIELD (D)GITTER,ENTFROSTER		(F)GRILLE (S)REJA-DESCONGELADOR					
	96239721	.	S	S	&821		RH 1					
	[22]				(E)COVER-BLANK,SUN SENSOR (D)DECKEL		(F)COUVERTURE (S)CUBIERTA					
	96239725	.	S	S	&821&C60		1					
	96239723	.	O	O	&821&C15		1					
	[23]				(E)GRILLE A-DEFROSTER,SIDE (D)GITTER		(F)GRILLE (S)REJA					
	96239727	.	S	S	&821		LH 1					
	[24]				(E)GRILLE A-DEFROSTER,SIDE (D)GITTER		(F)GRILLE (S)REJA					
	96239731	.	S	S	&821		RH 1					
	[25]				(E)CLIP (D)KLEMME		(F)ATTACHE (S)GRAPA					
	09409-04301	.	S	S			2					
	[30]				(E)PANEL A-INSTRUMENT (D)NUTERLAGE,INSTRUMENT		(F)PATIN-TABLEAU (S)COJIN-INSTRUMENTO					
	96239634	.	S	S	&821		1				PA	
	96239638	.	O	O	&821&AJ7		1				PC	

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

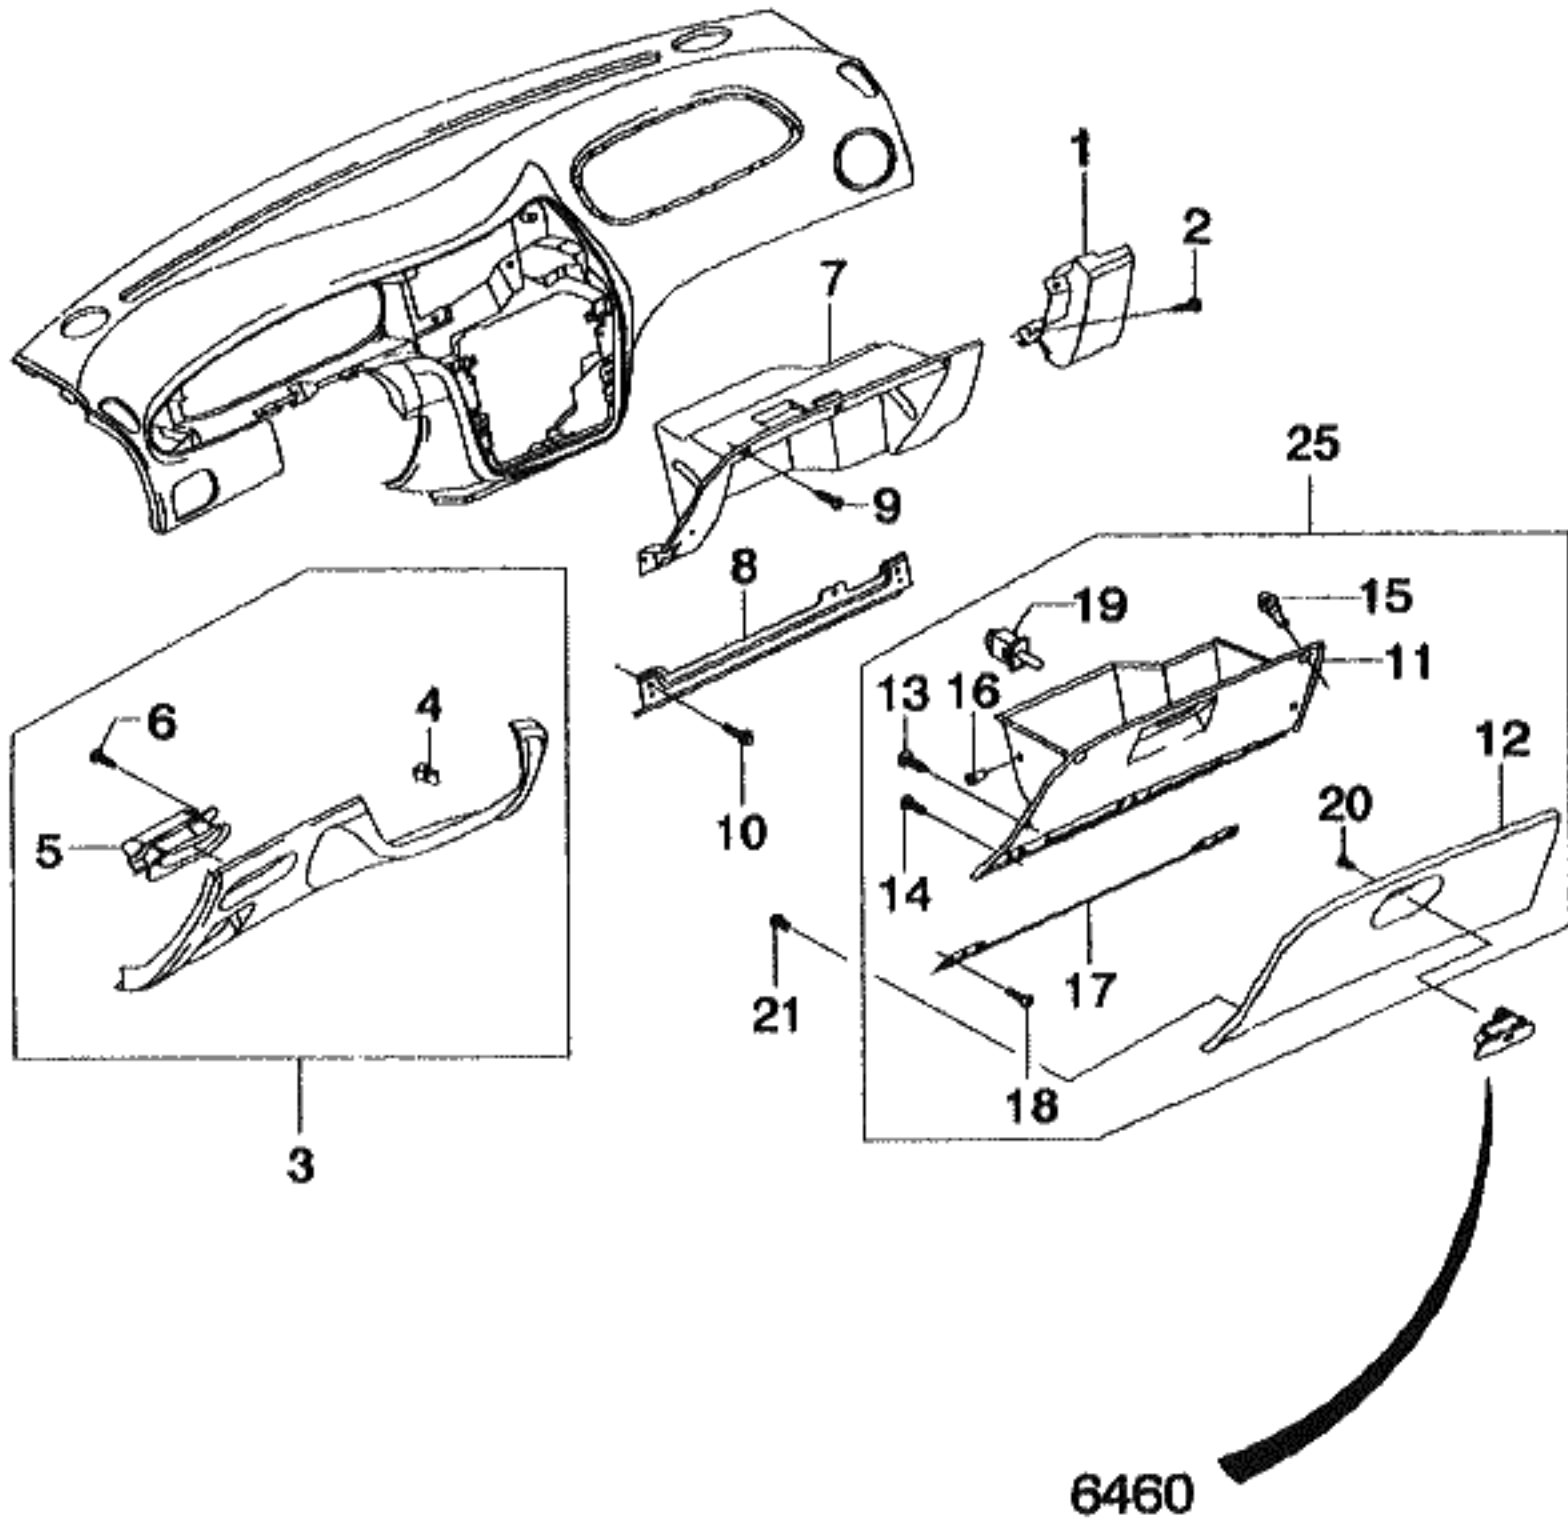


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96239697	(E)COVER A-GLOVE BOX,SIDE (D)DECKEL	S	S	&821		(F)COUVERTURE (S)CUBIERTA RH 1				
	[02] 03160-42165	(E)SCREW-TAPPING (D)SCHRAUBE	S	S			(F)VIS (S)TORNILLO 2				
	[03] 96239699	(E)COVER A-INST PANEL,LOWER (D)DECKEL	S	S	&821		(F)COUVERTURE (S)CUBIERTA LH 1				
	[04] 09409-10306	(E)CLIP (D)KLEMME	S	S			(F)ATTACHE (S)GRAPA 6				
	[05] 96239707	(E)STORAGE A-COIN (D)BÜCHSE MÜNZE	S	S	&821		(F)BOITE-PIECE (S)CAJA-MONEDA LH 1				
	[06] 03160-42133	(E)SCREW-TAPPING (D)SCHRAUBE	S	S			(F)VIS (S)TORNILLO 3				
	[07] 96239834	(E)HOUSING A-GLOVE BOX (D)GEHÄUSE	S	S			(F)LOGEMENT (S)CARCASA 1				
	[08] 96215883	(E)REINF A-GLOVE BOX,LOWER (D)VERSTÄRKUNG	S	S			(F)RENFORCEMENT (S)REFUERZO RH 1				
	[09] 03160-42165	(E)SCREW-TAPPING (D)SCHRAUBE	S	S			(F)VIS (S)TORNILLO 6				
	[10] 01517-06163	(E)BOLT-FLANGE (D)SCHRAUBE	S	S			(F)BOULON (S)PERNO 2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


7120 MOULDING

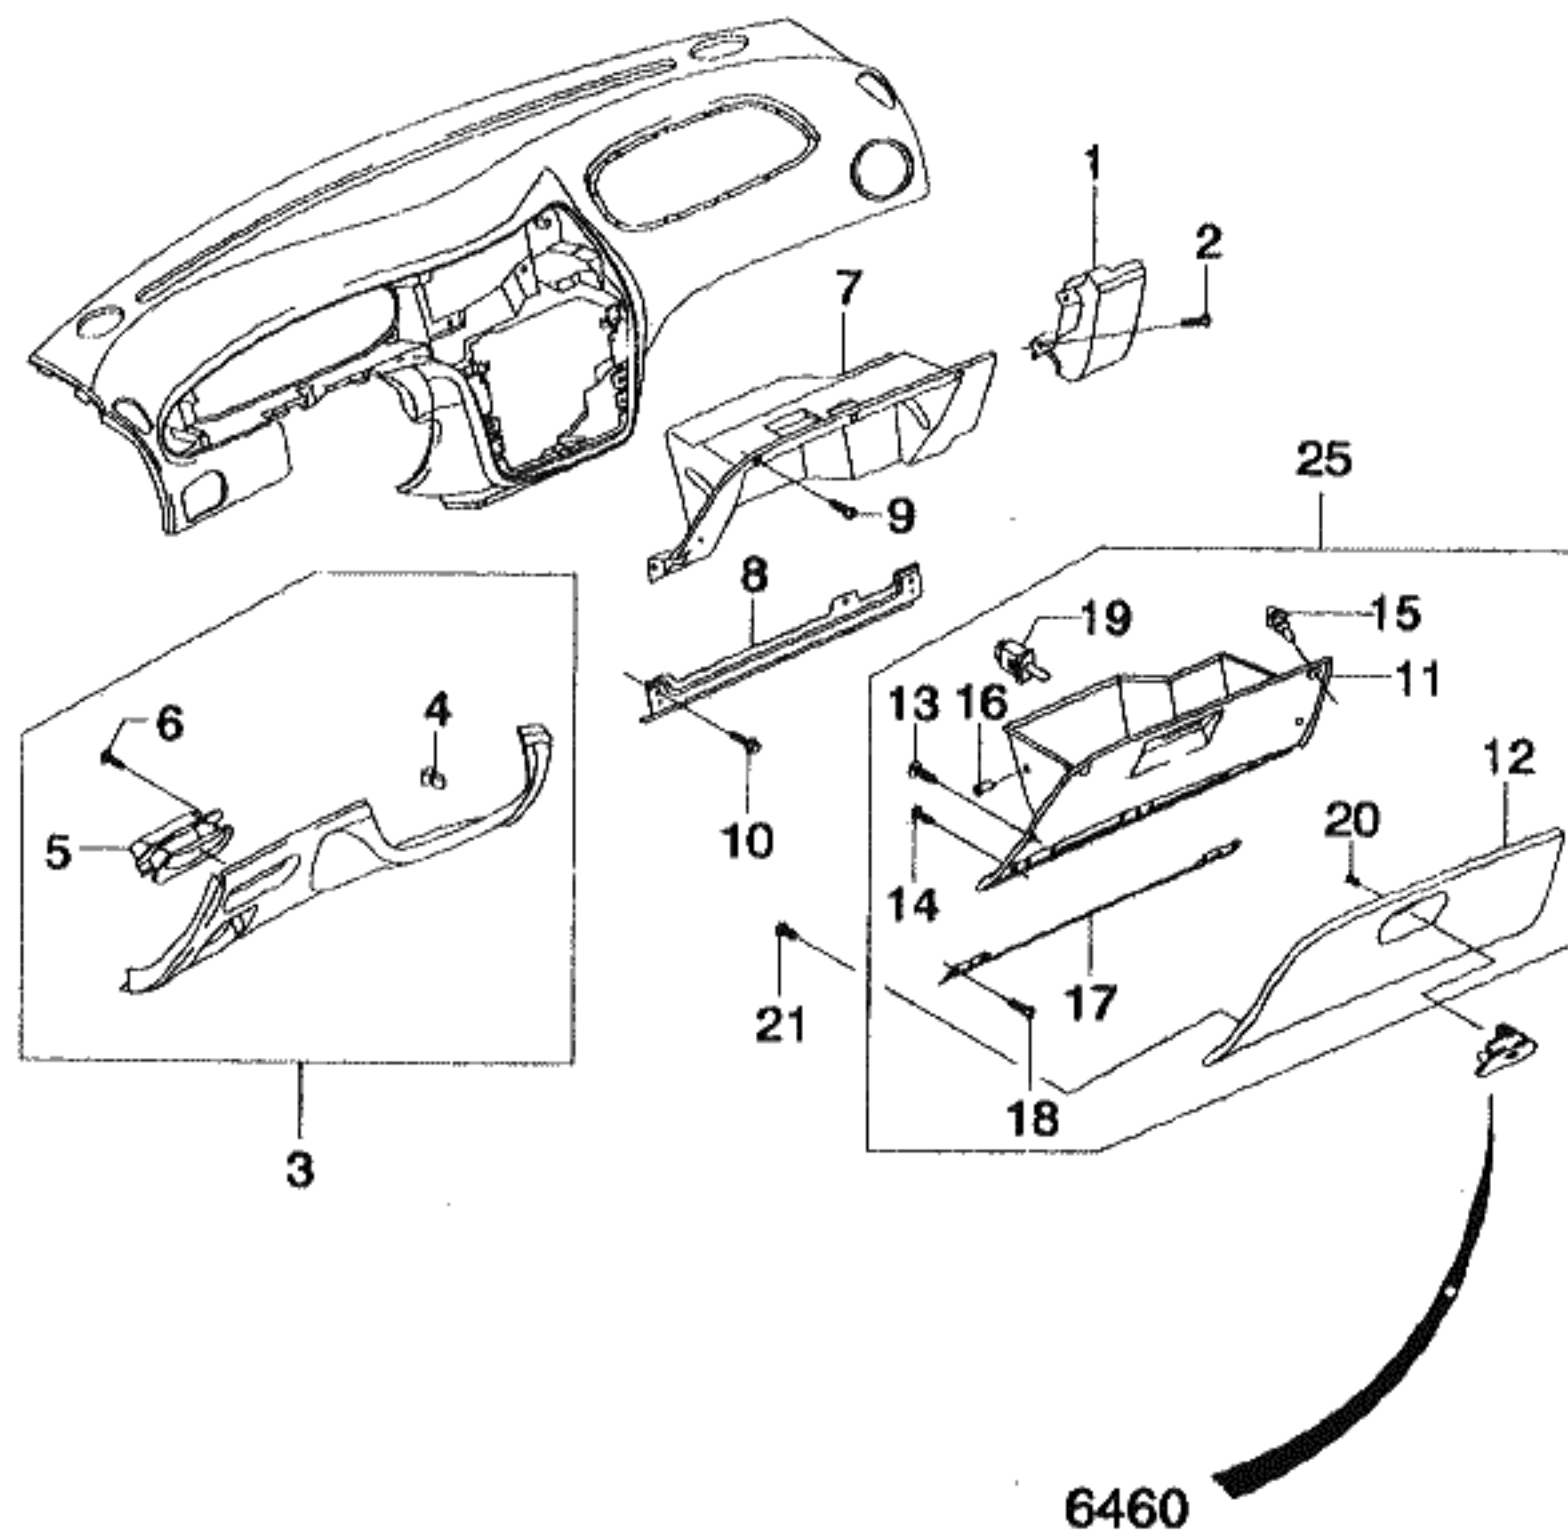


KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X								C D X
	[11] 96239842	(E)LID-GLOVE BOX,INNER (D)DECKEL . S S					(F)COUVERCLE (S)TAPA 1				
	[12] 96239845	(E)LID-GLOVE BOX,OUTER (D)DECKEL . S S					(F)COUVERCLE (S)TAPA 1				
	[13] 03160-42135	(E)SCREW-TAPPING (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 3				
	[14] 03120-42165	(E)SCREW-TAPPING (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 4				
	[15] 03438705	(E)BUMPER-GLOVE BOX (D)STOßSTANGE . S S					(F)PARE-CHOC (S)PARACHOQUES 2				
	[16] 96215892	(E)STOPPER-GLOVE BOX (D)STÖPSEL . S S					(F)ARRETOIR (S)TAPON 2				
	[17] 96215891	(E)HINGE A-GLOVE BOX (D)BESCHLAG . S S					(F)CHARNIERE (S)BISAGRA 1				
	[18] 03160-42135	(E)SCREW-TAPPING (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 4				
	[19] 90033510	(E)SWITCH A-LIGHT (D)SCHALTER . S S					(F)COMMUTATEUR (S)INTERRUPTOR 1				
	[20] 02124-04125	(E)SCREW-CR MACHINE (D)SCHRAUBE . S S					(F)VIS (S)TORNILLO 2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

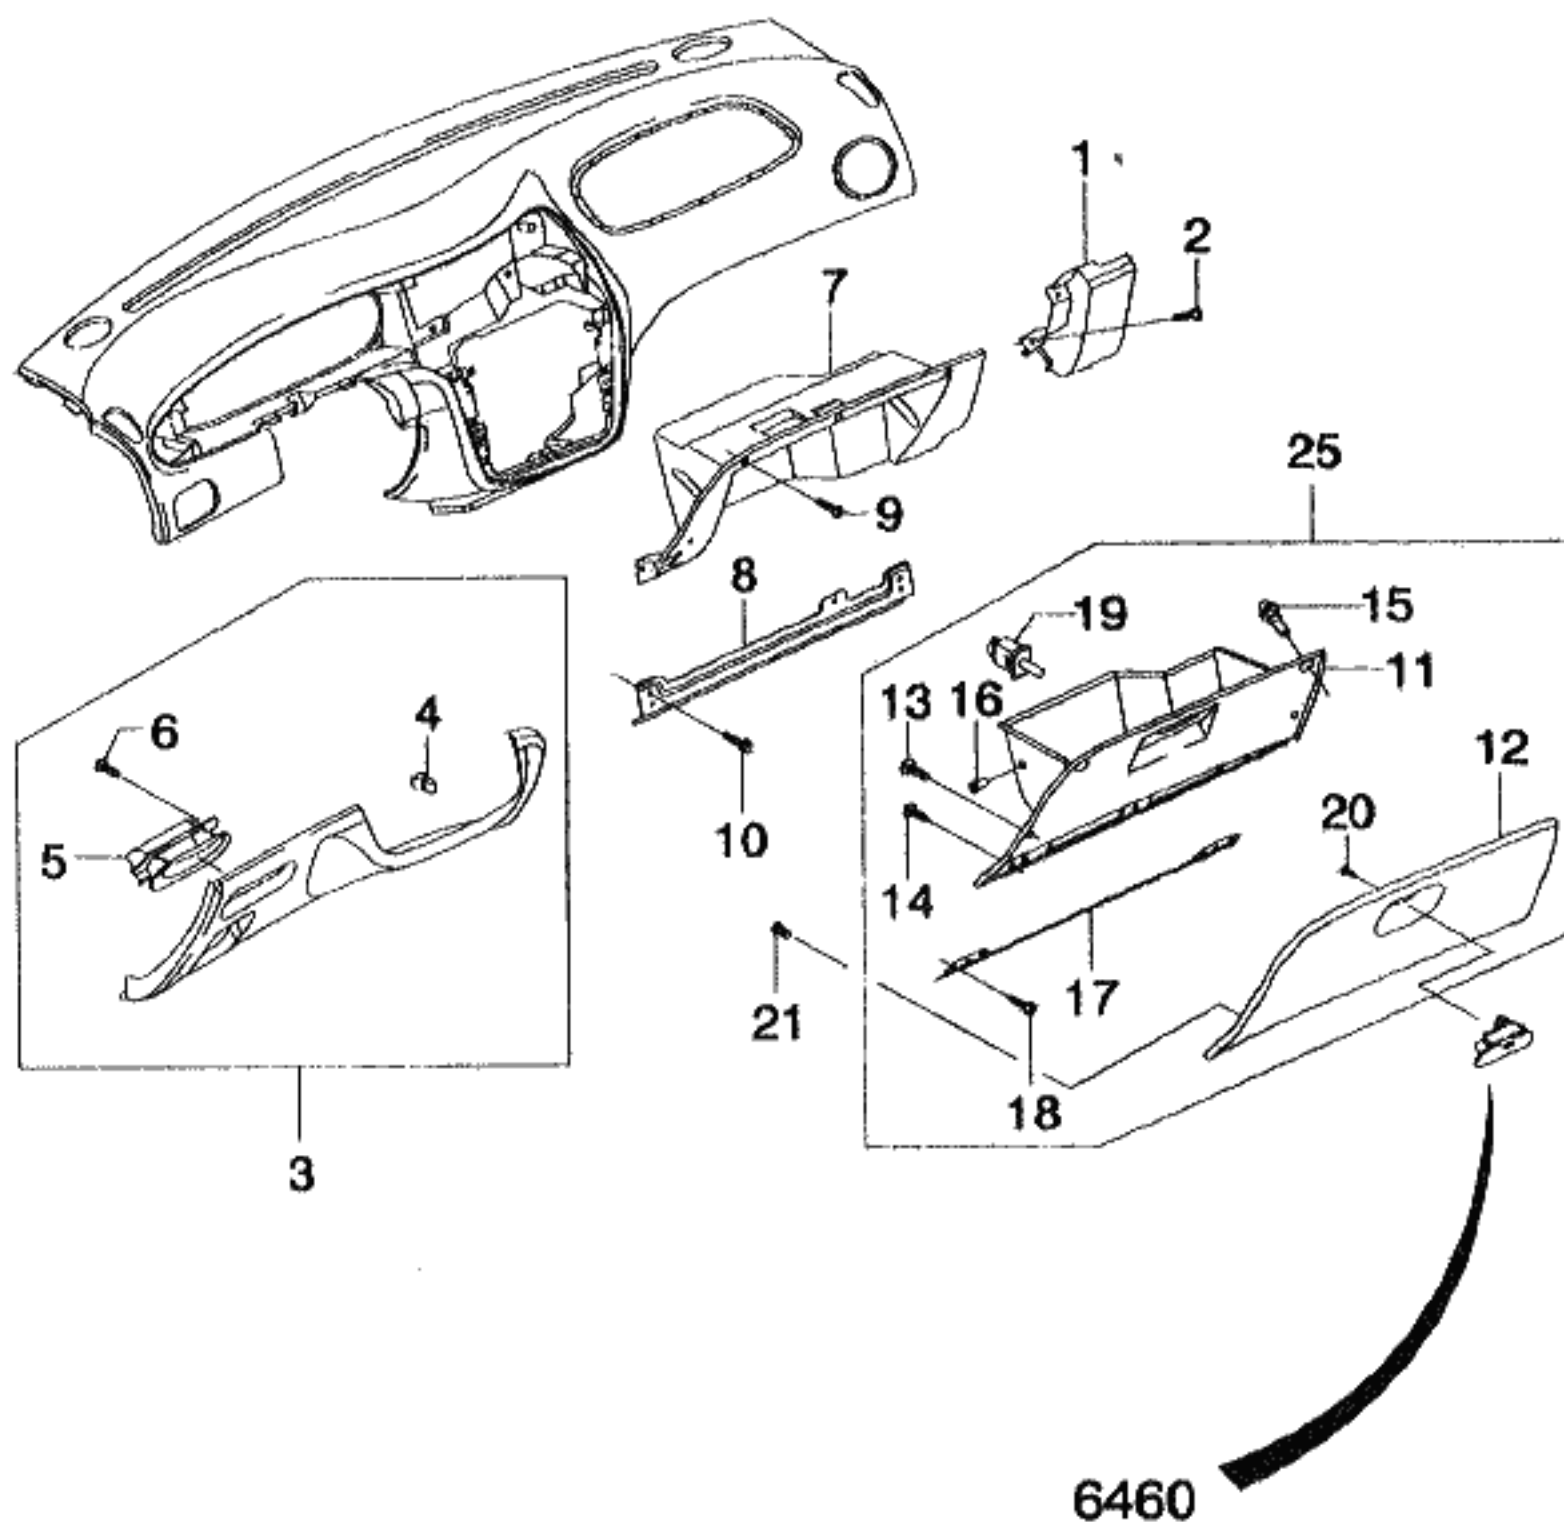

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[21] 08316-25053	(E)NUT-FLANGE (D)SCHRAUBE	S	S			(F)VIS (S)TORNILLO 3				
	[25] 96239836	(E)LID A-GLOVE BOX (D)DECKEL	S	S	&821		(F)COUVERCLE (S)TAPA 1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

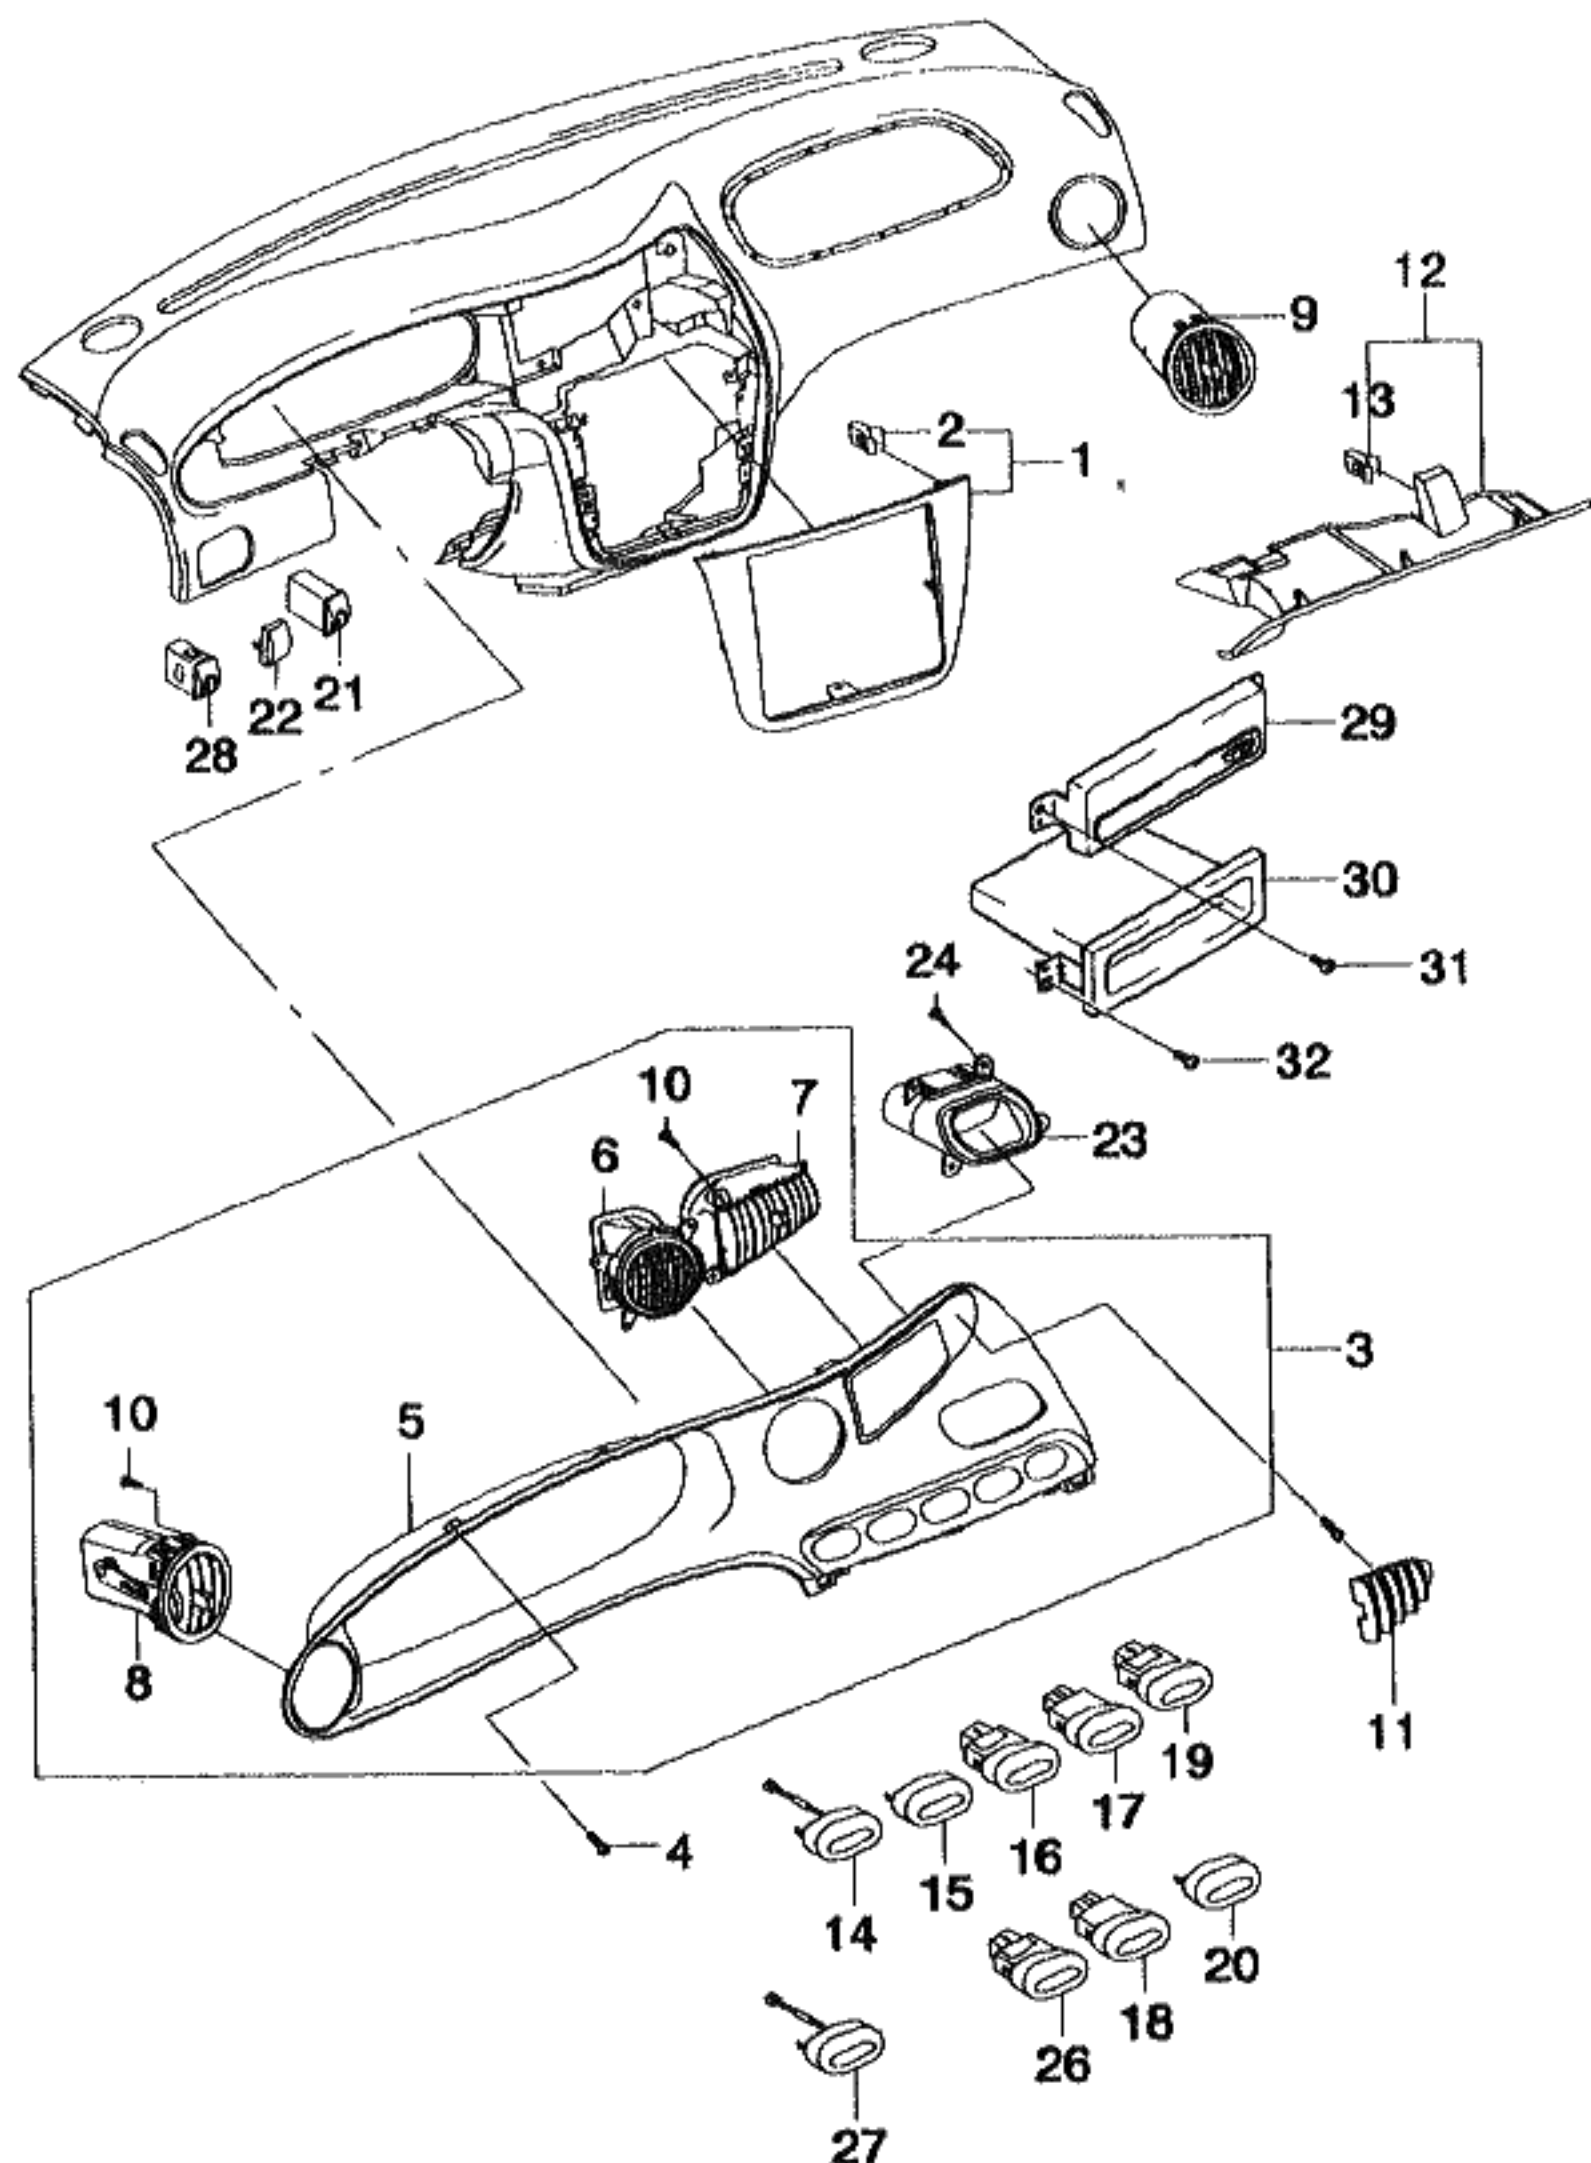

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)MOLDING A-I/P,CENTER (D)PRESTEIL				(F)MOULURE (S)MOLDURA						
	96239715	. S .				1						
	96239711	. . S				1						
	[02]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09409-10306	. S S				4						
	[03]	(E)HOUSING A-MOLDING,I/P (D)GEHÄUSE				(F)LOGEMENT (S)CARCASA						
	96239743	. S S				1						
	[04]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO						
	03160-42165	. S S				5						
	[05]	(E)HOUSING-MOLDING,I/P (D)GEHÄUSE				(F)LOGEMENT (S)CARCASA						
	96239746	. S S				1						
	[06]	(E)NOZZLE A-CENTER (D)MÜNDUNG				(F)BEC-LAVE (S)BOQUILLA						
	96239748	. S S				LH 1						
	[07]	(E)NOZZLE A-CENTER (D)MÜNDUNG				(F)BEC-LAVE (S)BOQUILLA						
	96239759	. S S				RH 1						
	[08]	(E)NOZZLE A-OUTER (D)MÜNDUNG				(F)BEC-LAVE (S)BOQUILLA						
	96239780	. S S				LH 1						
	[09]	(E)NOZZLE A-OUTER (D)MÜNDUNG				(F)BEC-LAVE (S)BOQUILLA						
	96239796	. S S 8821				RH 1						
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

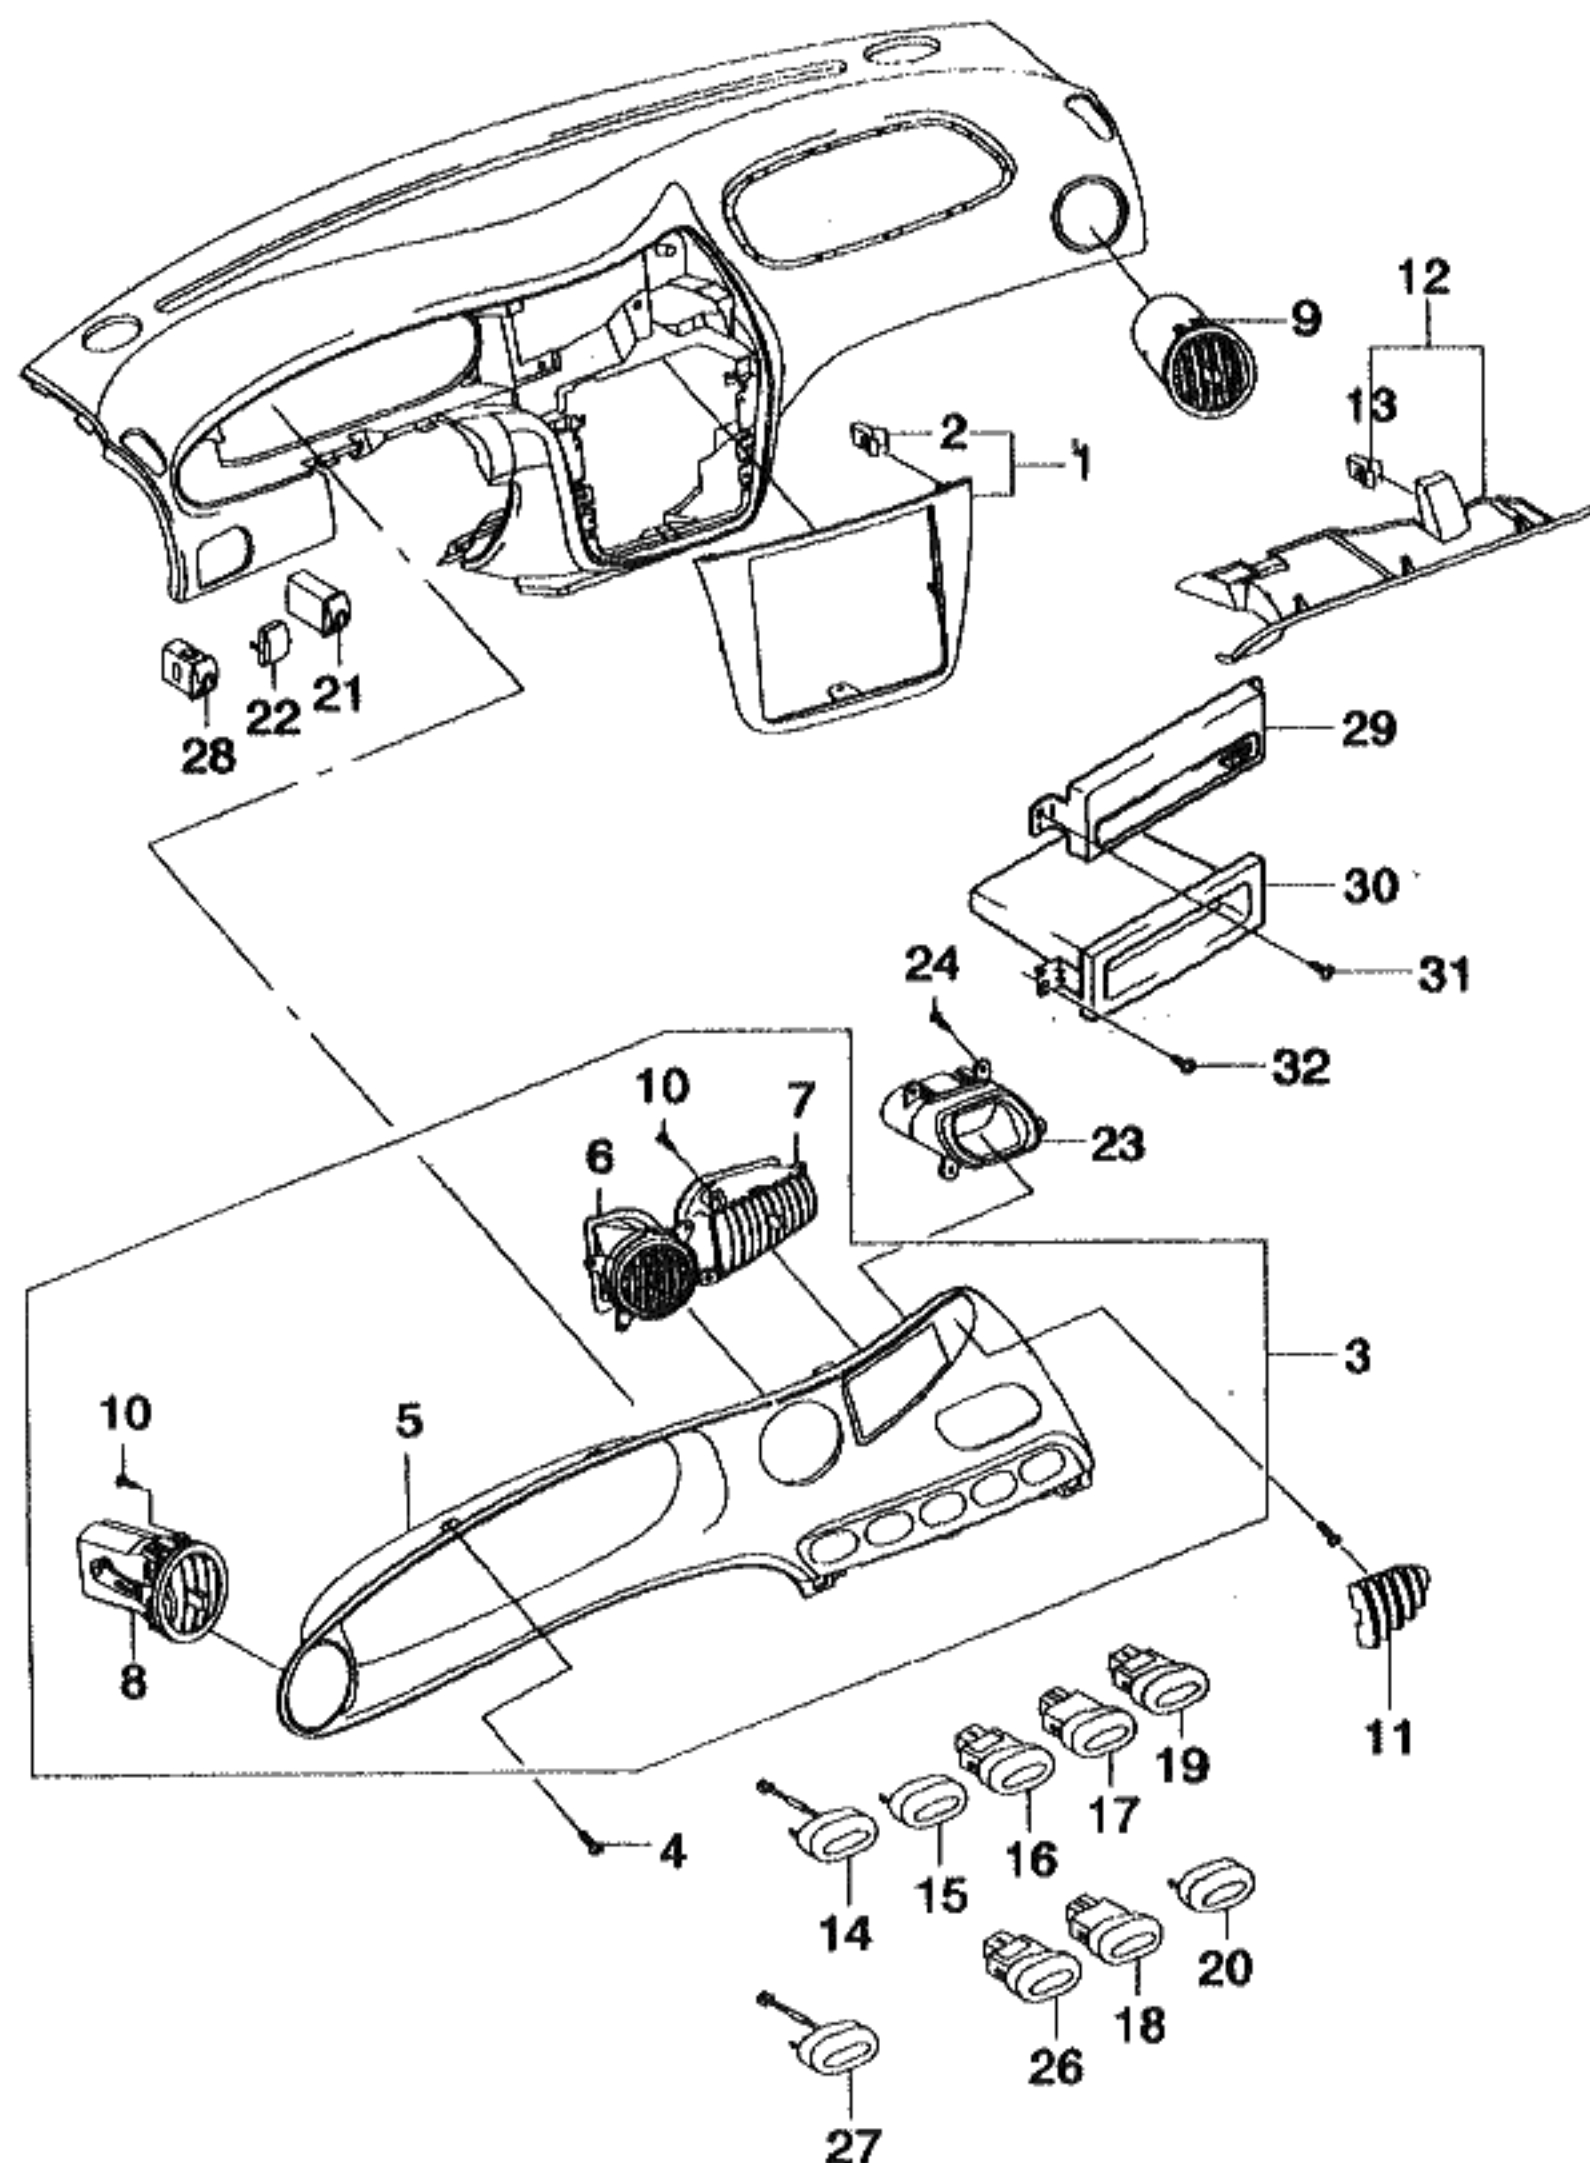

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	03160-42163	.	S	S			2				
	[11]		(E)COVER-BLANK,MLDG HOUSING				(F)COUVERTURE				
			(D)DECKEL				(S)CUBIERTA				
	96239828	.	S	S			1				
	[12]		(E)COVER A-AIR CON,LWR				(F)CARTER				
			(D)DECKEL				(S)CUBIERTA				
	96239830	.	S	S	&821		1				
	[13]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	09409-10306	.	S	S			3				
	[14]		(E)COVER-BLANK,CRUISE SWITCH				(F)COUVERTURE				
			(D)DECKEL				(S)CUBIERTA				
	96206836	.	S	S	-K30		1				L1
	[15]		(E)COVER-BLANK,S/W RR FOG				(F)COUVERTURE				
			(D)DECKEL				(S)CUBIERTA				
	96206824	.	S	S	-T98		1				L2
	[16]		(E)SWITCH A-HAZARD LIGHT				(F)COMMUTATEUR				
			(D)SCHALTER,WARNBLINKER				(S)INTERRUPTOR				
	96206846	.	S	S			1				LC
	[17]		(E)SWITCH A-FOG LAMP,FR				(F)COMMUTATEUR				
			(D)SCHALTER,NEBELLAMPE				(S)INTERRUPTOR				
	96206833	.	O	S	&TFG/T96		1				LD
	[18]		(E)COVER-BLANK,FOG SWITCH				(F)COUVERTURE				
			(D)DECKEL				(S)CUBIERTA				
	96206839	.	S	.	-T96		1				L4
	[19]		(E)SWITCH ANTI THEFT				(F)COMMUTATEUR				
			(D)SCHALTER				(S)INTERRUPTOR				
	96206745	.	S	S	-UM1		1				LE
	96206747	.	O	O	&UM1		1				LF

LEVEL

T/A(TRANSAXLE)

S X = 2.0 SOHC


M = MANUAL T/A

CDX = 2.0 DOHC


A = AUTOMATIC T/A

. = COMMON

7130 INSTRUMENT CENTER PARTS

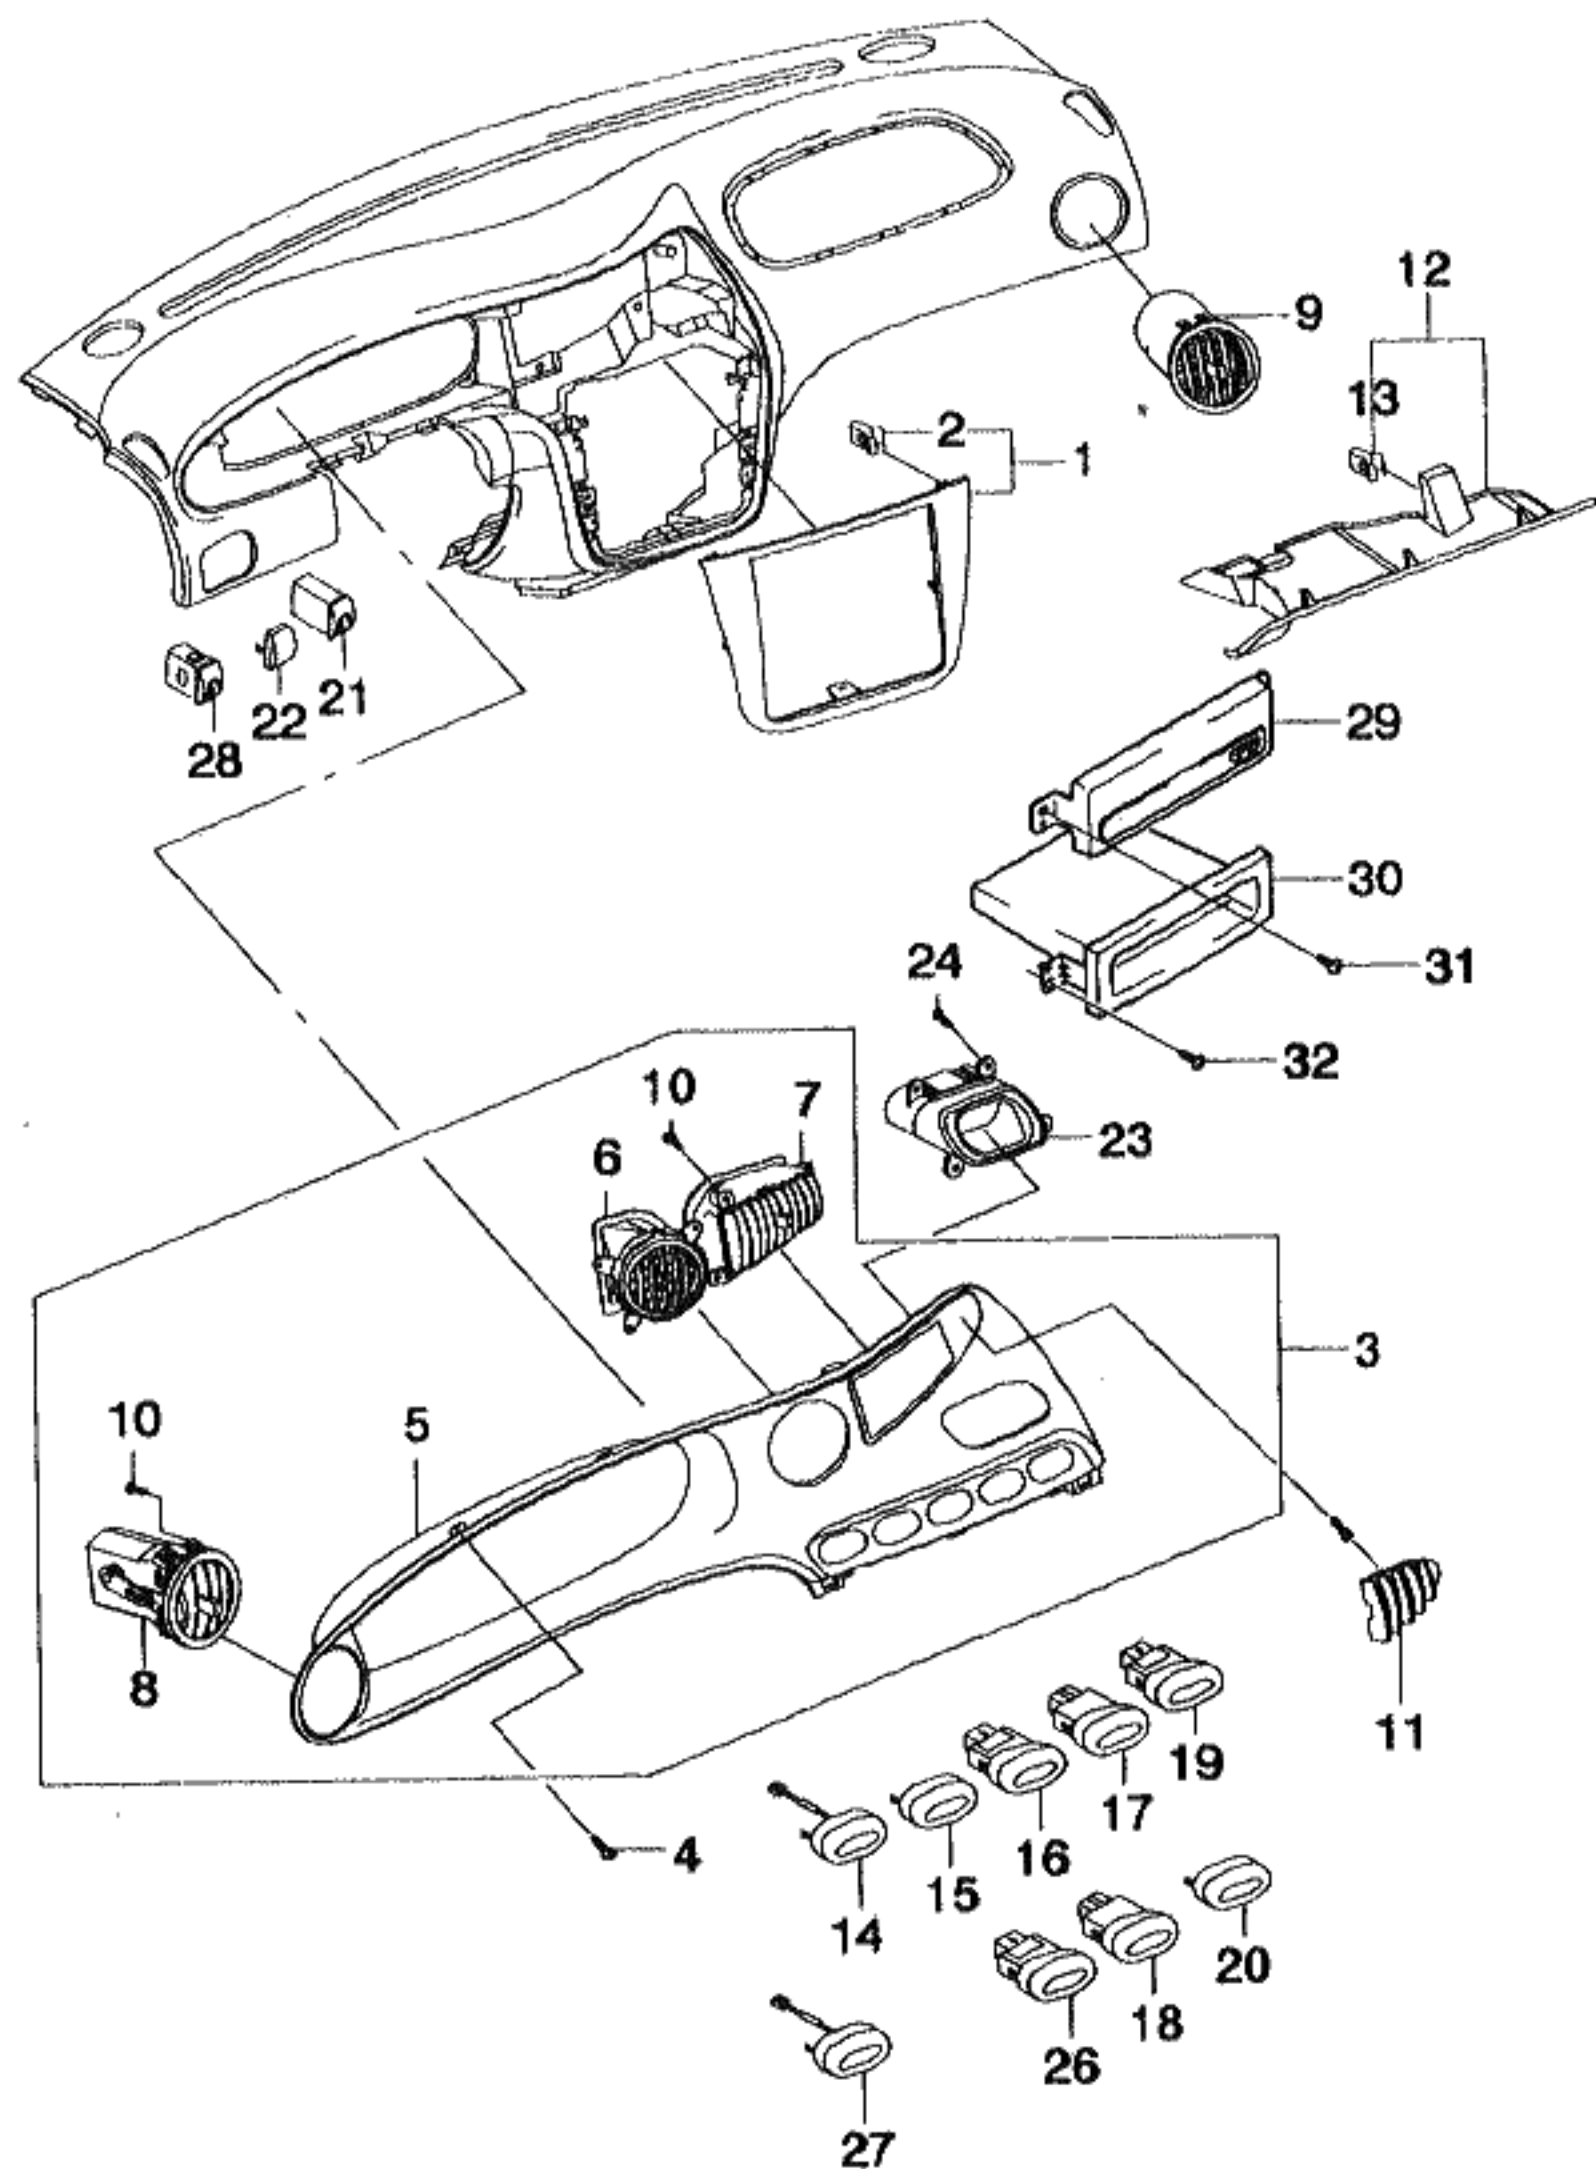


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20]	(E)COVER-BLANK,ANTI THEFT (D)DECKEL					(F)COUVERTURE (S)CUBIERTA				
	96206749	. S S					1				L5
	[21]	(E)SWITCH A-CONTROL,DIMMER (D)SCHALTER					(F)COMMUTATEUR (S)INTERRUPTOR				
	96206816	. S S					1				
	[22]	(E)COVER-BLANK,LEVELING S/W (D)DECKEL					(F)COUVERTURE (S)CUBIERTA				
	96206817	. S S -HL4					1				
	[23]	(E)CLOCK A-DIGITAL (D)UHR,DIGITAL					(F)HORLOGE-DIGITALE (S)RELOJ-DIGITAL				
	96206727	. S .					1				AA
	96206728	. . S					1				AB
	[24]	(E)SCREW-TAPPING (D)SCHRAUBE					(F)VIS (S)TORNILLO				
	03160-42133	. S S					4				
	[26]	(E)SWITCH A-FOG LAMP,RR (D)SCHALTER,NEBELLAMPE					(F)COMMUTATEUR (S)INTERRUPTOR				
	96206831	. A A &T98					1				LB
	[27]	(E)SWITCH A-CRUISE MAIN (D)SCHALTER					(F)COMMUTATEUR (S)INTERRUPTOR				
	96206841	. O O &K30					1				LA
	[28]	(E)SWITCH A-HEAD LAMP (D)SCHALTER					(F)COMMUTATEUR (S)INTERRUPTOR				
	96206818	. A A &HL4					1				HL
	[29]	(E)COVER-BLANK,RADIO (D)DECKEL					(F)COUVERTURE (S)CUBIERTA				
	96190817	. S S					1				
	[30]	(E)BOX-DEPOSIT (D)FACH					(F)BOITE-DEPOT (S)CAJA-DEPOSITO				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

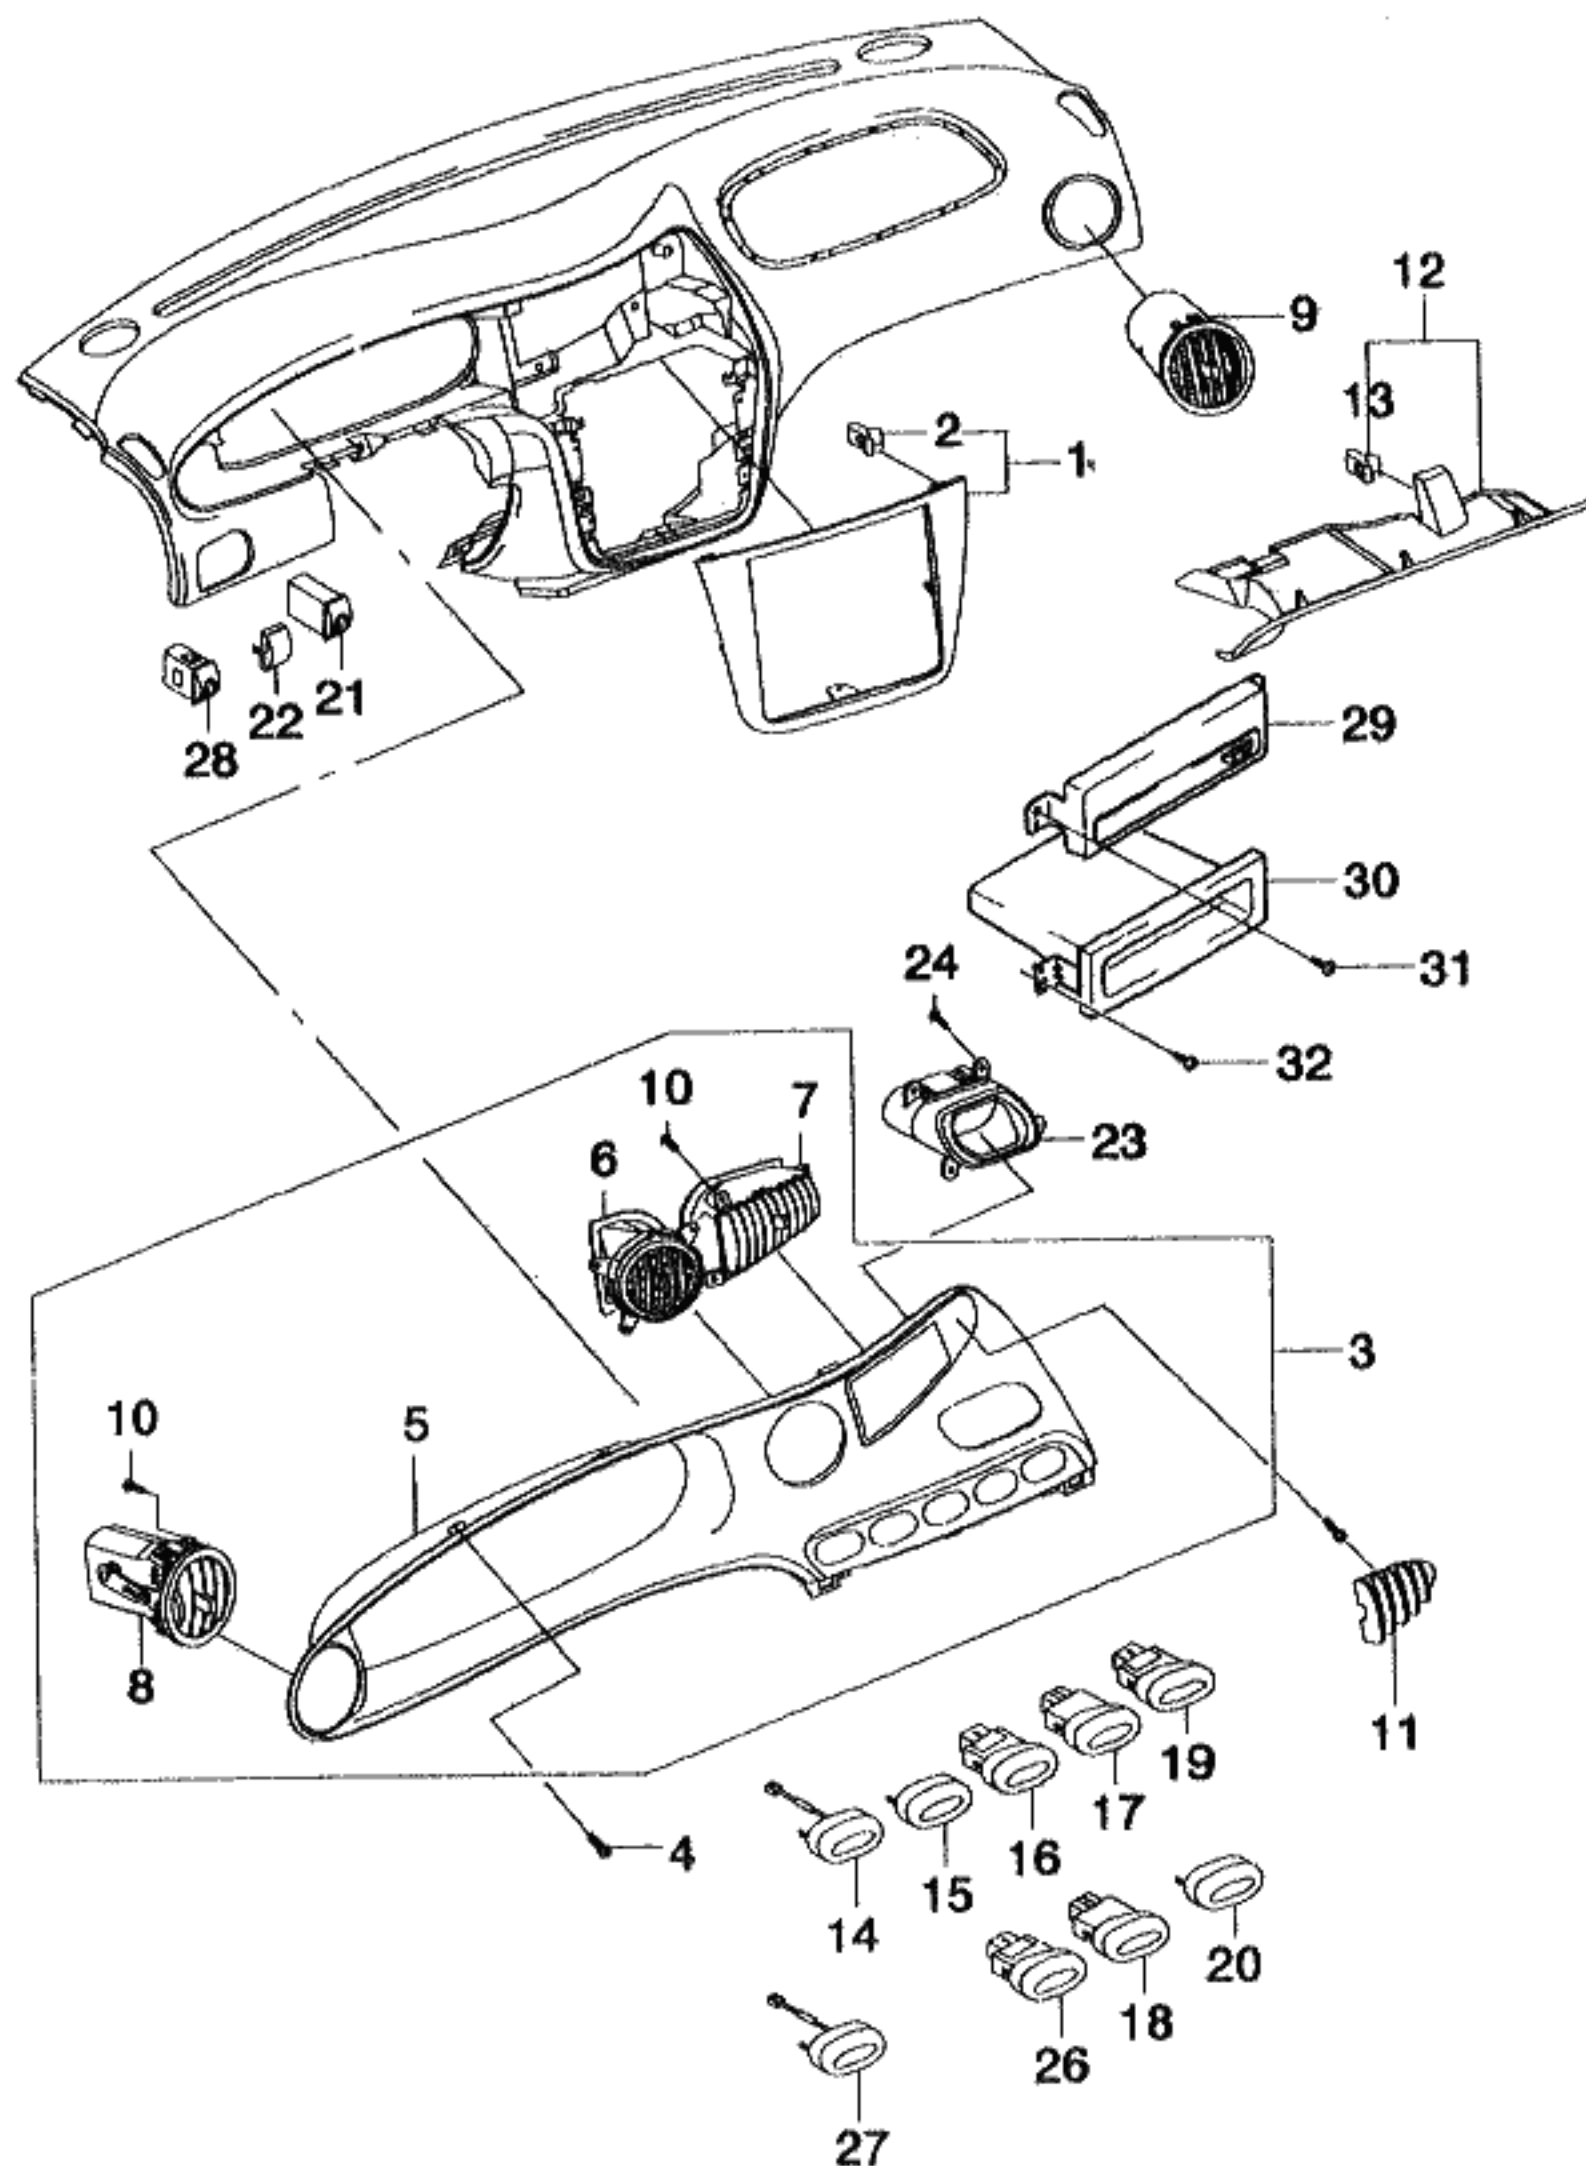


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96239850	.	S	S			2				
	[31]		(E)SCREW-TAPPING				(F)VIS				
	03160-48165	.	S	S			1				
	[32]		(E)SCREW-TAPPING				(F)VIS				
	03160-48165	.	S	S			(S)TORNILLO				
							2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC						M = MANUAL T/A					
CDX = 2.0 DOHC						A = AUTOMATIC T/A					
						. = COMMON					

7140 CONSOLE

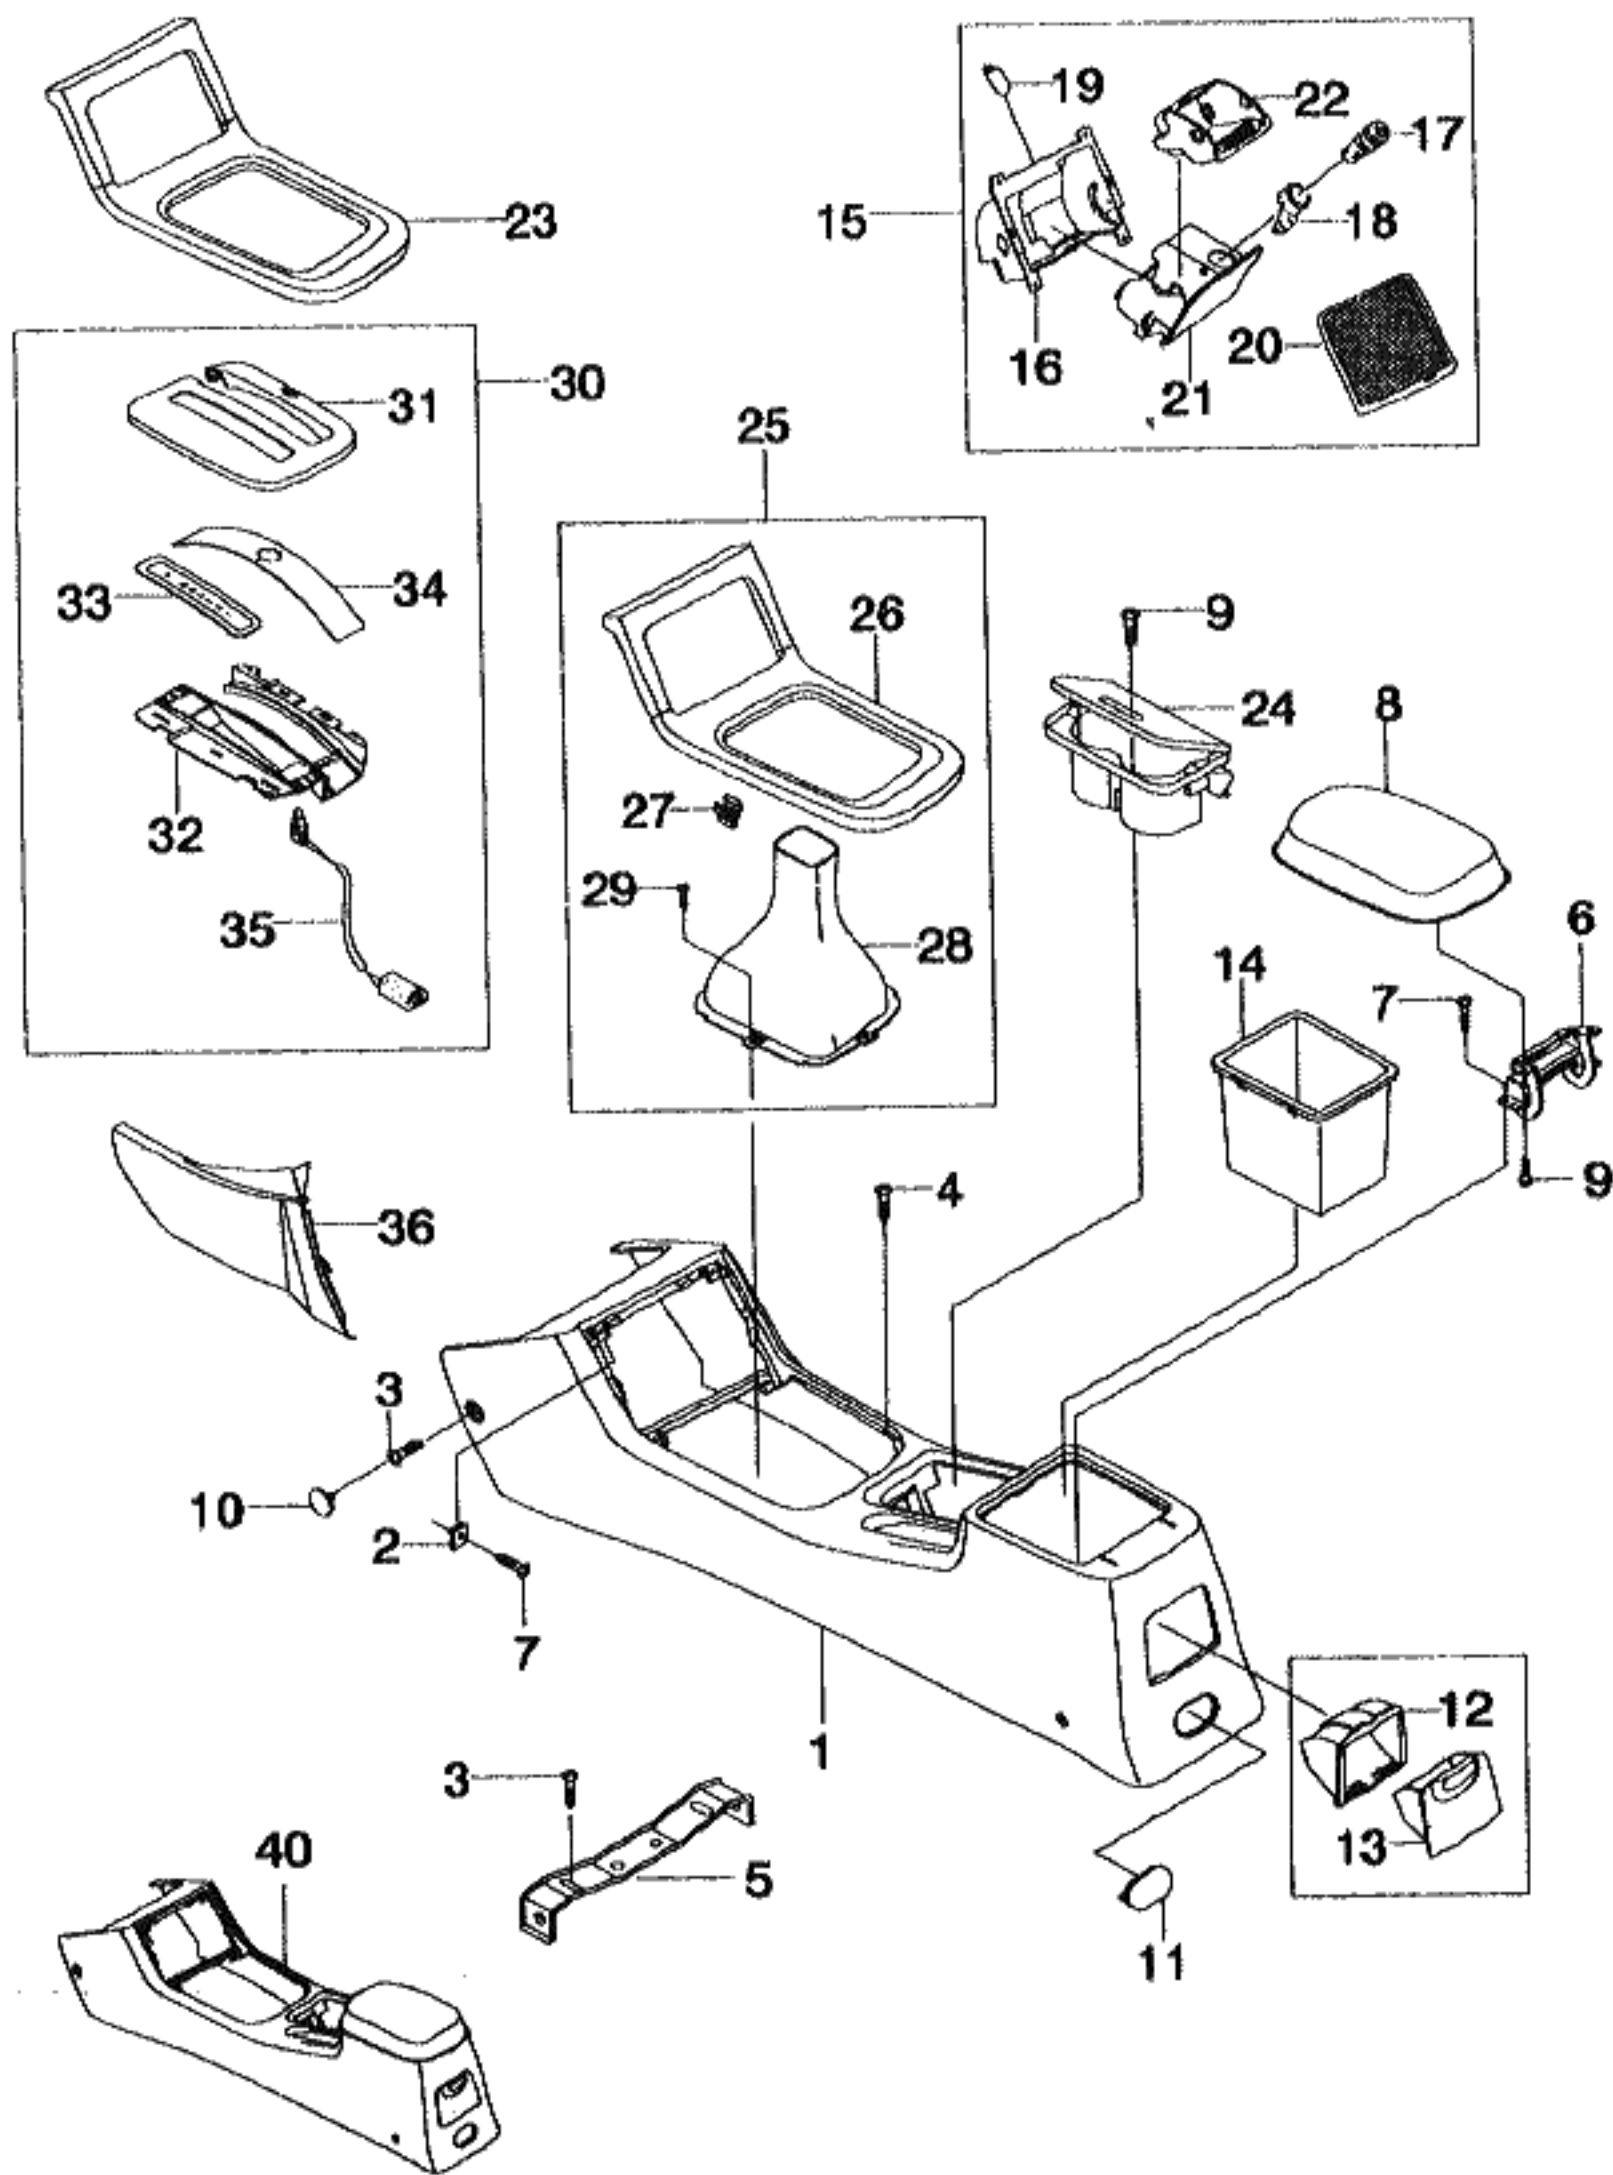

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96239423	(E)CONSOLE BODY-FLOOR (D)KONSOLE	S	S	&821	(F)CONSOLE (S)CONSOLA	1				
	[02] 03511-42059	(E)NUT (D)MUTTER	S	S		(F)ECROU (S)TUERCA	4				
	[03] 03160-48165	(E)SCREW-TAPPING (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	2				
	[04] 02116-75163	(E)SCREW-CR MACHINE (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	3				
	[05] 96194996	(E)BRACKET A-RR CONSOLE (D)TRÄGER	S	S		(F)SUPPORT (S)SOPORTE	1				
	[06] 96229281	(E)HINGE A-CONSOLE LID (D)BESCHLAG	S	S		(F)CHARNIERE (S)BISAGRA	1				
	[07] O 03160-42135	(E)SCREW-TAPPING (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	4				
	[08] 96239427	(E)LID A-CONSOLE,RR (D)CONSOLE ENDEKEL	S	S	&821	(F)COUVERCLE CONSOLE (S)TAPA CONSOLA	1				
	[09] 03160-48165	(E)SCREW-TAPPING (D)SCHRAUBE	S	S		(F)VIS (S)TORNILLO	2				
	[10] 96239433	(E)PLUG-CONSOLE,FR (D)STÖPSEL	S	S	&821	(F)BOUCHON (S)TAPON	2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

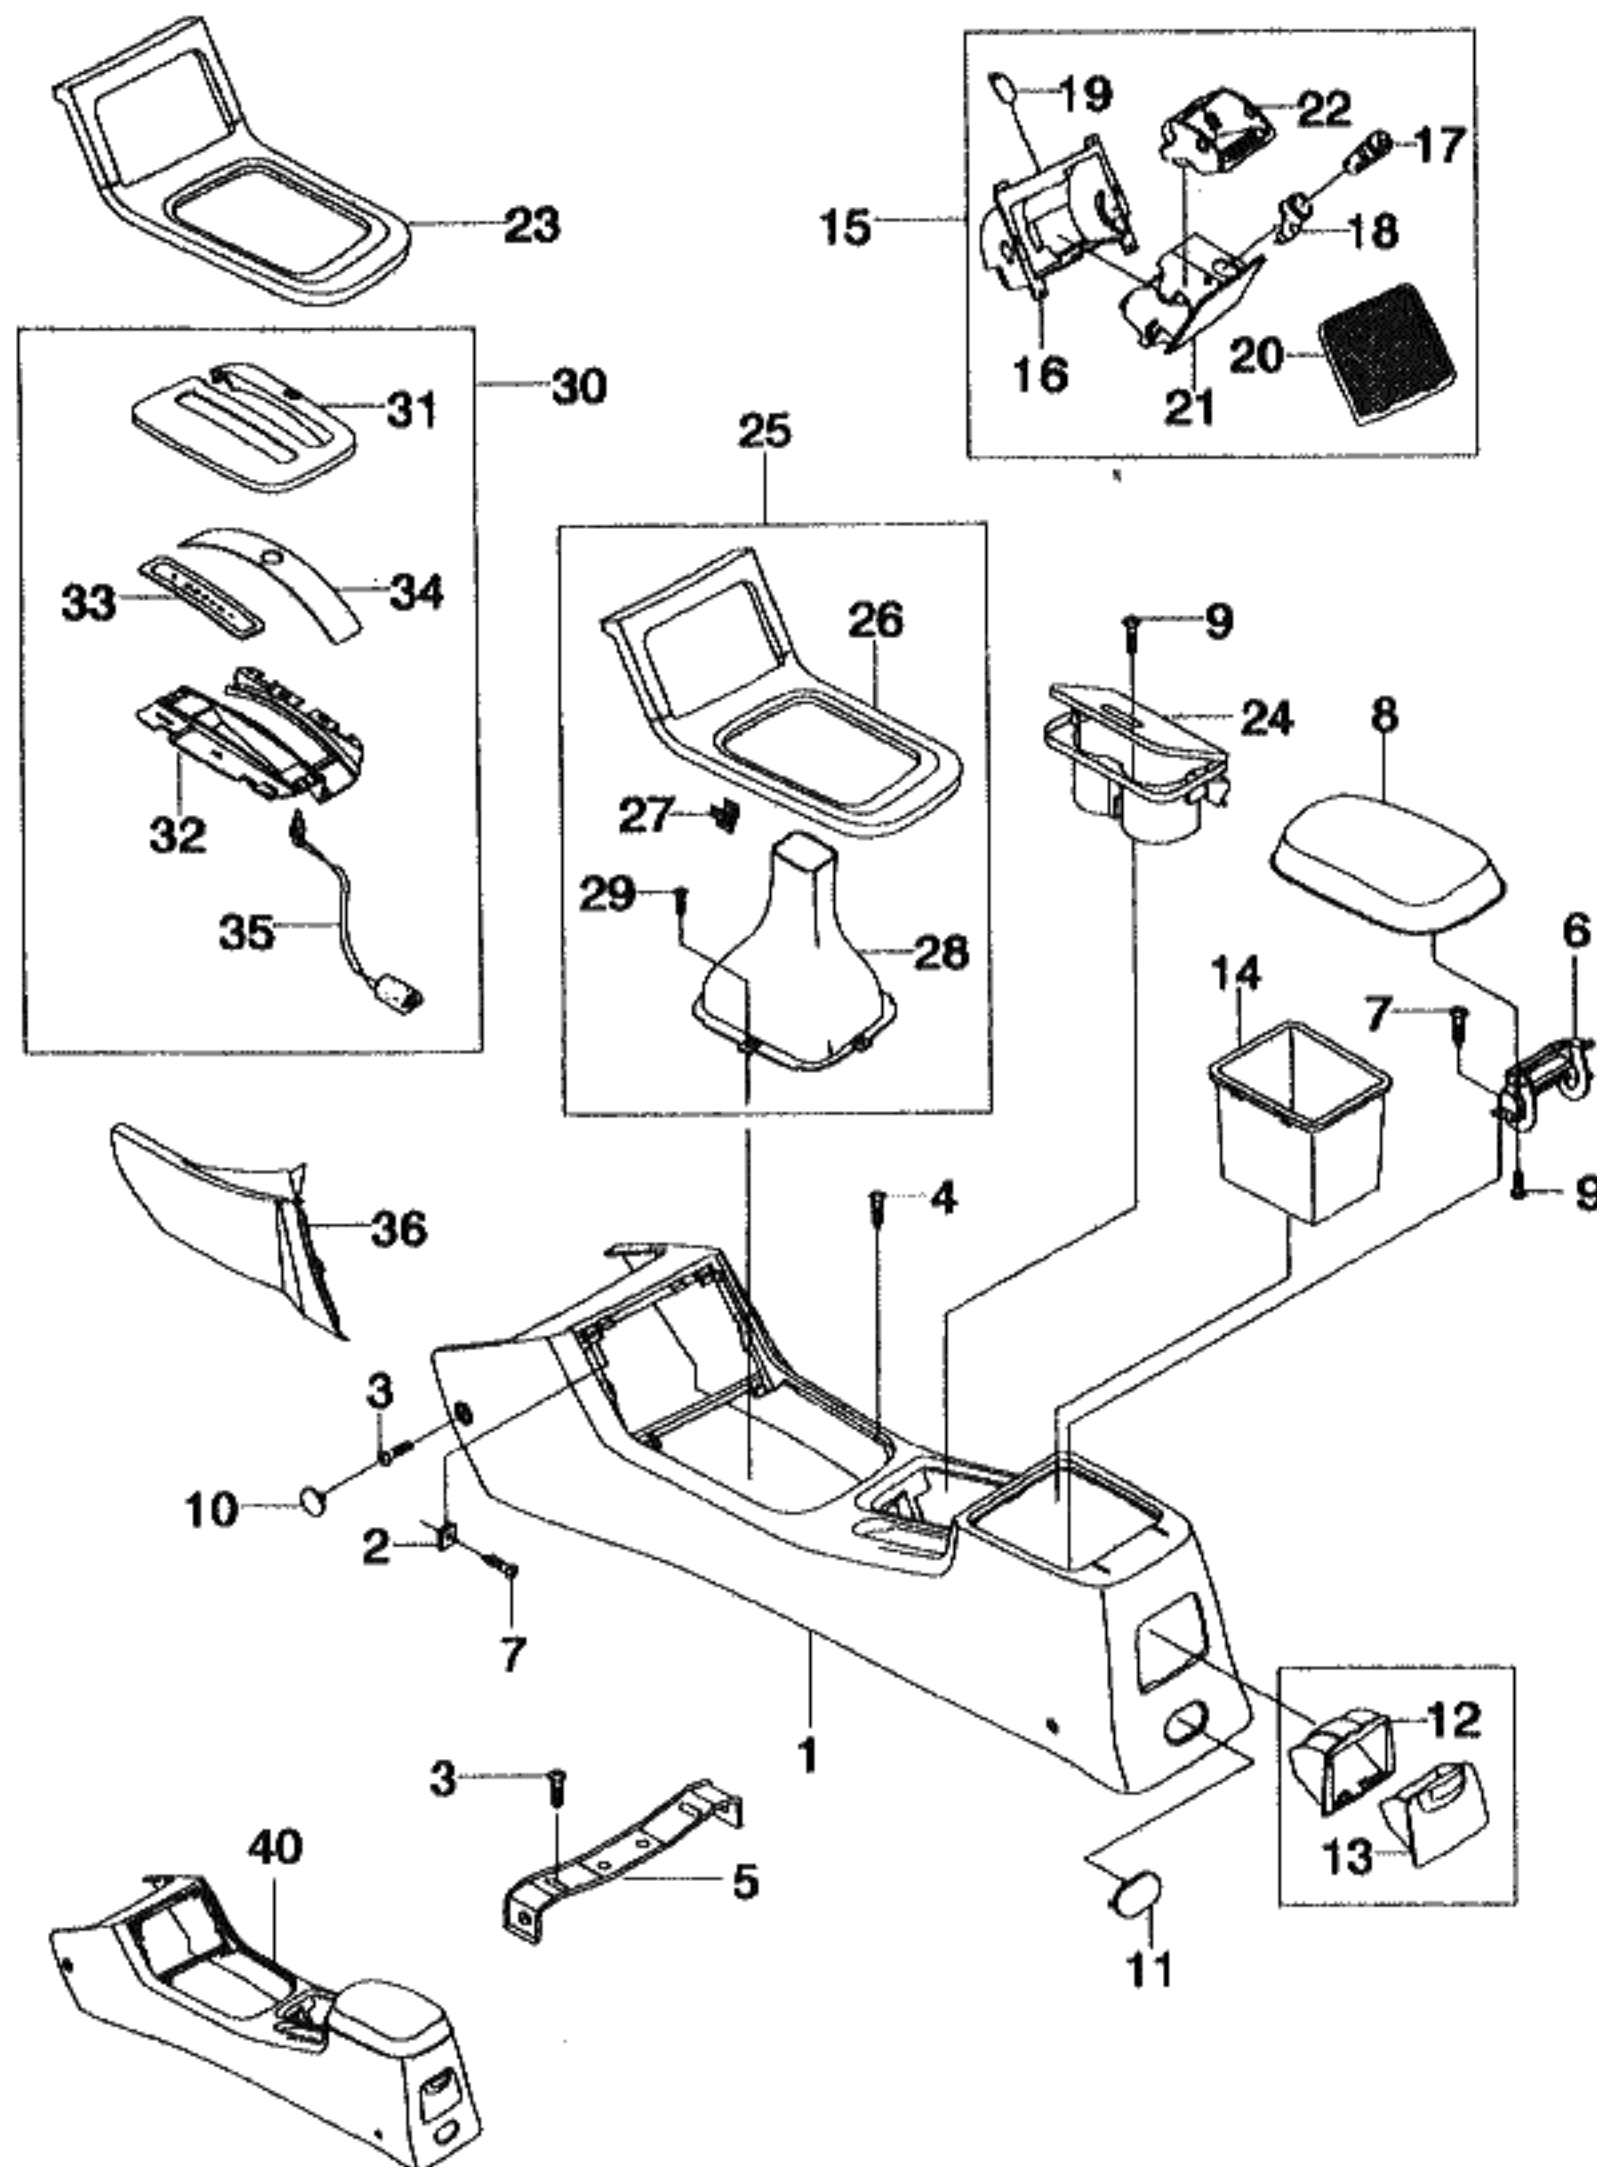


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 96239435	(E) PLUG-CONSOLE,RR (D) STÖPSEL	S	S	&821	(F) BOUCHON (S) TAPON	1				
	[12] 96239439	(E) HOUSING-ASHTRAY CONSOLE (D) GEHÄUSE	S	S	&821	(F) LOGEMENT (S) CARCASA	1				
	[13] 96239441	(E) TRAY A-ASHTRAY CONSOLE,RR (D) PFANNE	S	S	&821	(F) PLATEAU (S) BANDEJA	1				
	[14] 96239445	(E) BOX-CONSOLE,RR (D) HINTERES KONSOLE-FACH	S	S		(F) BOITE-DEPOT (S) CAJA-DEPOSITO	1				
	[15] 96239447 96239449	(E) ASHTRAY A-CONSOLE,FR (D) ASCHENBECHER	S		&821	(F) CENDRIER (S) CENICERO	1				
	[16] 96239455	(E) HOUSING-ASHTRAY CNSL,FR (D) GEHÄUSE	S	S	&821	(F) LOGEMENT (S) CARCASA	1				
	[17] 96303458	(E) LIGHTER A-CIGAR (D) ANZÜNDER, ZIGARETTEN	S	S		(F) ALLUME-CIGARETTE (S) ENCENDEDOR	1				KN
	[18] 96206851	(E) LIGHT RING A (D) RING	S	S		(F) ANNEAU (S) ANILLO	1				
	[19] 11062449 O 09471-12012	(E) BULB (D) BIRNE	S	S		(F) AMPOULE (S) BOMBILLA	1	970606		12V, 1.2W	
			S	S			1	970606		12V, 1.2W	

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON




KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[20]	(E)COVER-ASHTRAY CONSOLE,FR				(F)COUVERTURE					
	96239459	(D)DECKEL	S		&821		1				
	96239461			S			1				
	[21]	(E)HOLDER-ASHTRAY CNSL,FR				(F)MONTURE					
	96239465	(D)BEHÄLTER	S	S	&821		1				
	[22]	(E)TRAY-ASHTRAY CONSOLE,FR				(F)PLATEAU					
	96239469	(D)PFANNE	S	S		(S)BANDEJA	1				
	[23]	(E)COVER A-CONSOLE,AUTO				(F)COUVERCLE					
	96239471	(D)DECKEL	A	O	&821		1				
	96239477		A		O		1				
	[24]	(E)HOLDER A-CUP				(F)MONTURE					
	96239481	(D)BEHÄLTER	S	S	&821	(S)RETNEDOR	1				
	[25]	(E)COVER A-CONSOLE				(F)COUVERTURE					
	96239473	(D)DECKEL	M	S	&821	(S)CUBIERTA	1				
	96239478		M		S		1				
	[26]	(E)COVER A-CONSOLE				(F)COUVERTURE					
	96239923	(D)DECKEL	M	S	&821	(S)CUBIERTA	1				
	96239924		M		S		1				
	[27]	(E)CLIP				(F)ATTACHE					
	96166615	(D)KLEMME	M	S	S	(S)GRAPA	4				
	[28]	(E)BOOT A-GEARSHIFT				(F)GAINE					
		(D)KOFFERRAUM				(S)CAPUCHON					

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A = COMMON

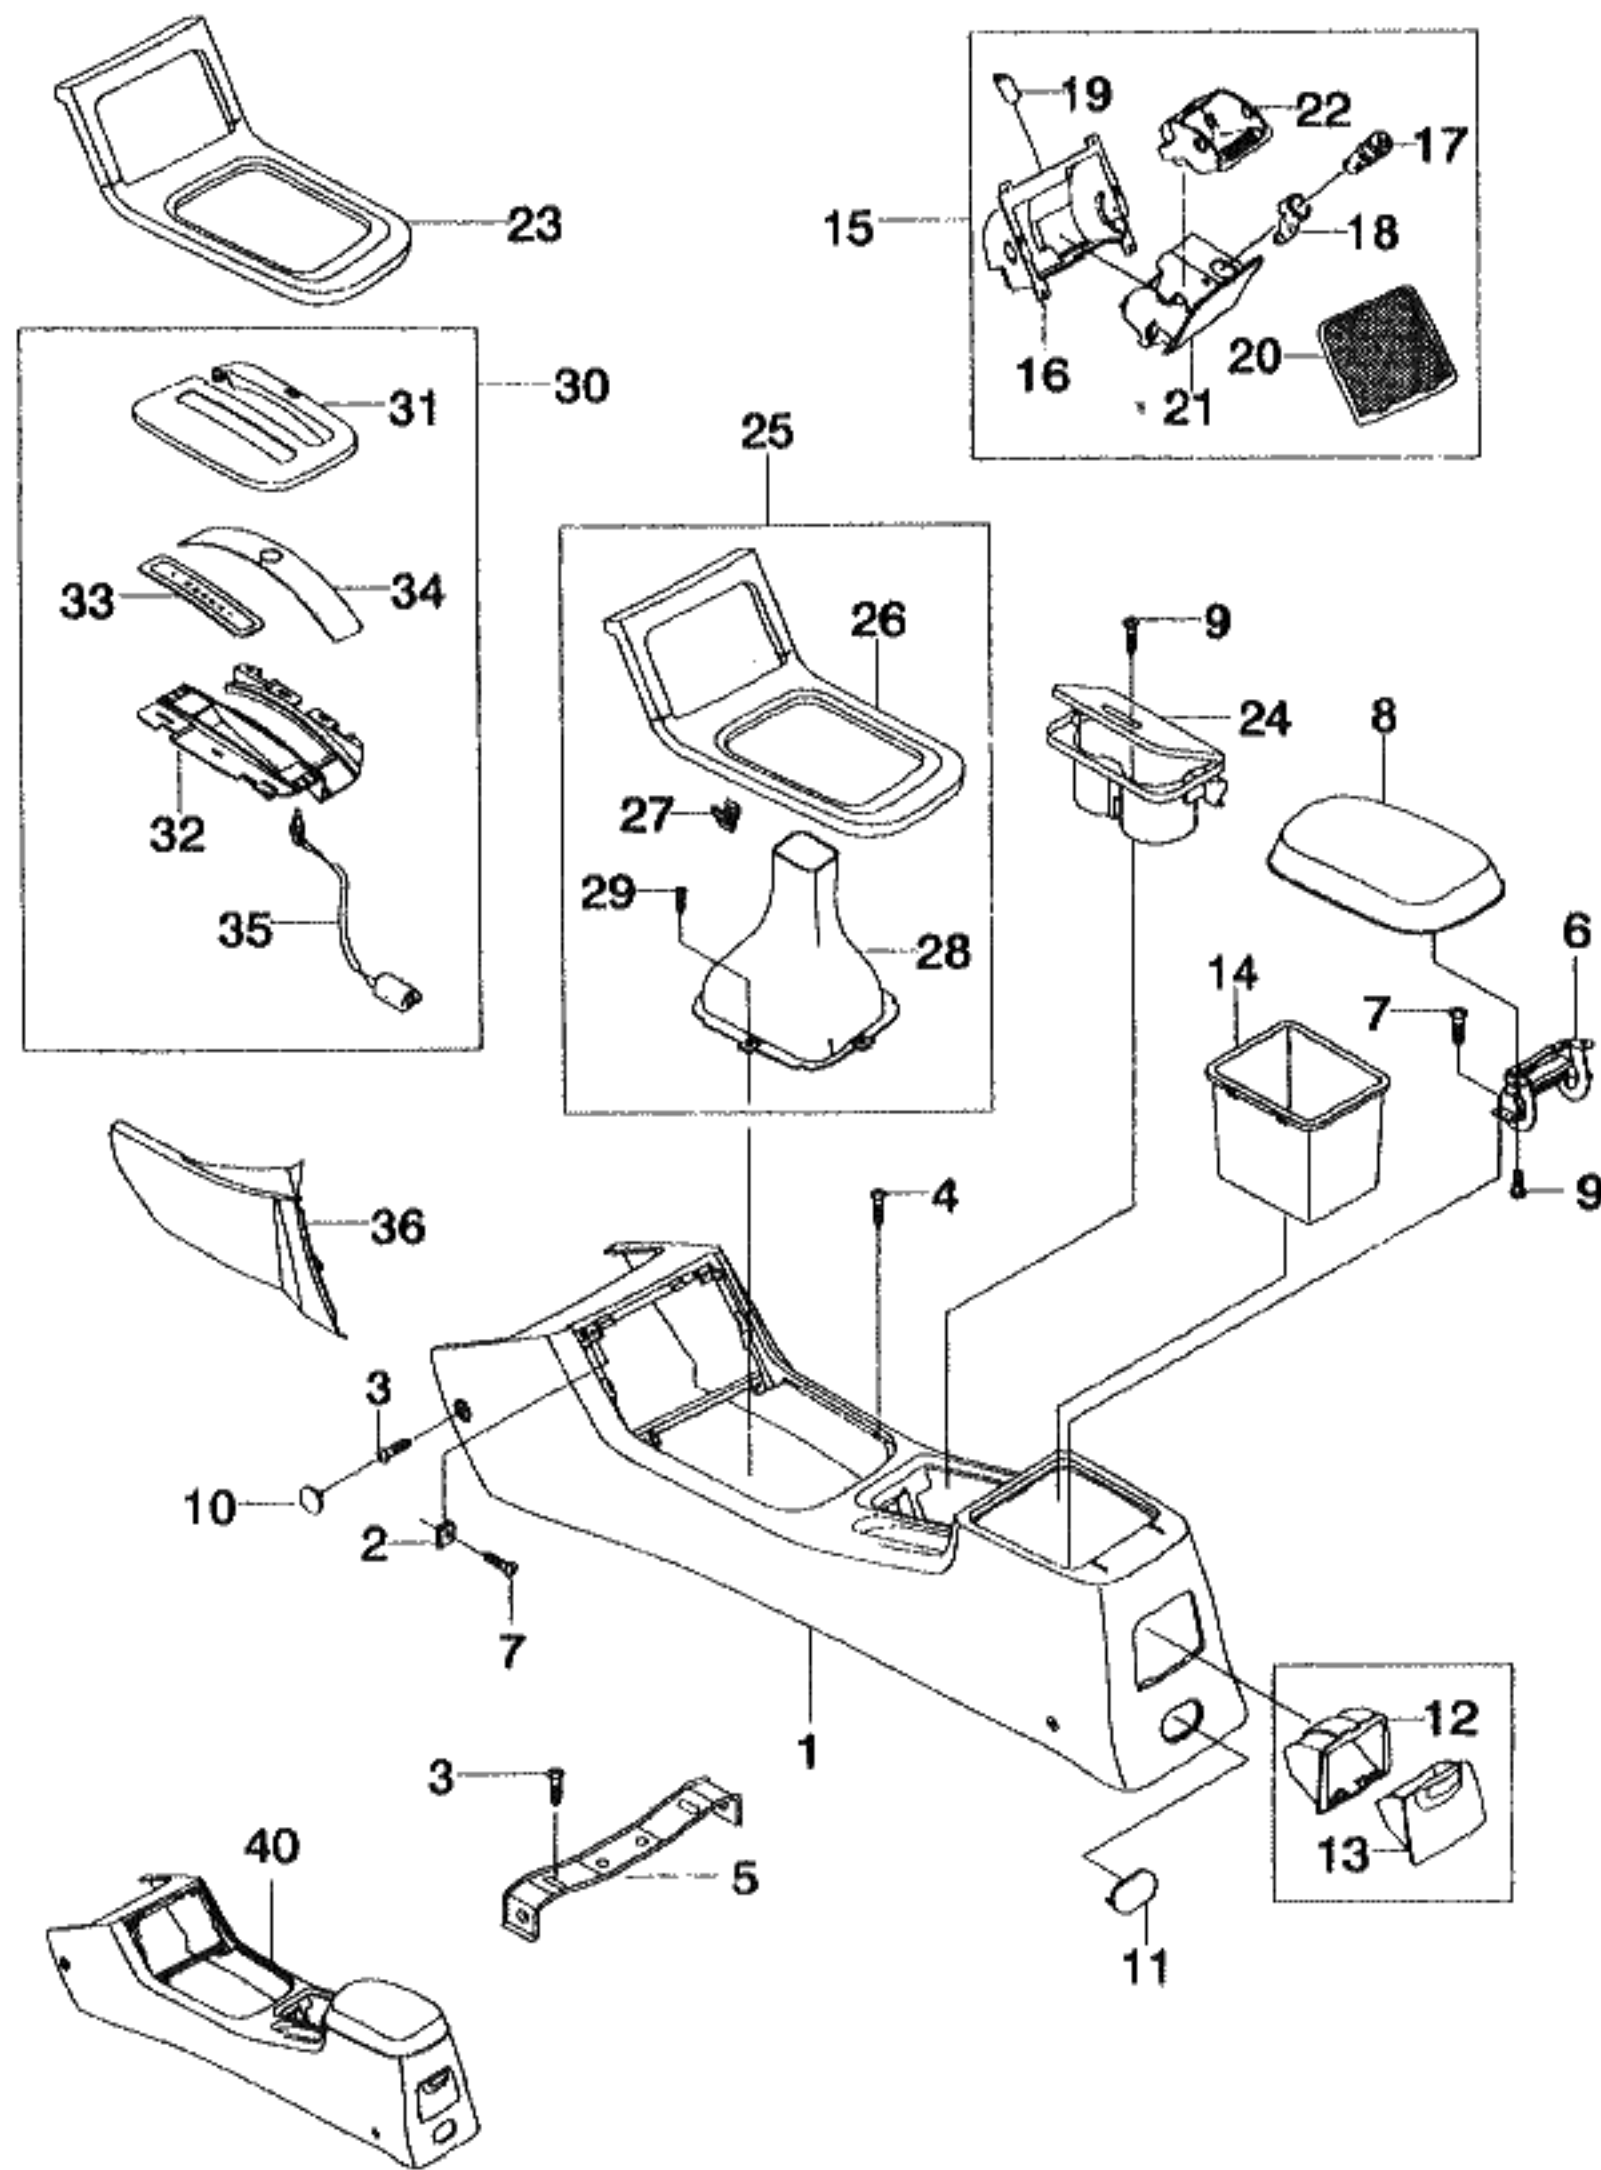


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96239495	M	S	S			1				
	[29]	(E)	SCREW-TAPPING			(F)	VIS				
		(D)	SCHRAUBE			(S)	TORNILLO				
	03160-42095	M	S	S			4				
	[30]	(E)	CAP A-CONSOLE			(F)	CHAPEAU-CONSOLE,AUTO				
		(D)	DECKEL,KONSOLE,AUTOM.			(S)	TAPA-CONSOLA,AUTO				
	96239501	A	O	O			1				
	[31]	(E)	CAP-CONSOLE,UPR			(F)	CHAPEAU-CONSOLE,AUTO				
		(D)	DECKEL,KONSOLE,AUTOM.			(S)	TAPA-CONSOLA,AUTO				
	96239503	A	O	O			1				
	[32]	(E)	CAP-CONSOLE,LWR			(F)	CHAPEAU-CONSOLE,AUTO				
		(D)	DECKEL,KONSOLE,AUTOM.			(S)	TAPA-CONSOLA,AUTO				
	96215986	A	O	O			1				
	[33]	(E)	SCALE-CONSOLE			(F)	BALANCE-CONSOLE				
		(D)	MAB,KONSOLE			(S)	ESCALA-CONSOLA				
	96216218	A	O	O			1				
	[34]	(E)	SLIDER-CONSOLE			(F)	GLISSIERE-CONSOLE				
		(D)	GLEIT,KONSOLE			(S)	FRENILLO-CONSOLA				
	96239611	A	O	O			1				
	[35]	(E)	LAMP A-SCALE CONSOLE AUTO			(F)	LAMPE-CONSOLE AVANT				
		(D)	LAMPE,VORDERE KONSOLE			(S)	LAMPARA				
	96169967	A	O	O			1				
	[36]	(E)	EXTENSION A-CONSOLE			(F)	RALLONGE				
		(D)	VERLÄNGERUNG			(S)	EXTENSION				
	96239507	.	S	S	&821		LH 1				
	96239509	.	S	S	&821		RH 1				
	[40]	(E)	CONSOLE A-FLOOR			(F)	CONSOLE				
		(D)	KONSOLE			(S)	CONSOLA				
	96254899	.	S	.	&821		1				LG
	96254901	.	.	S	&821		1				LW
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

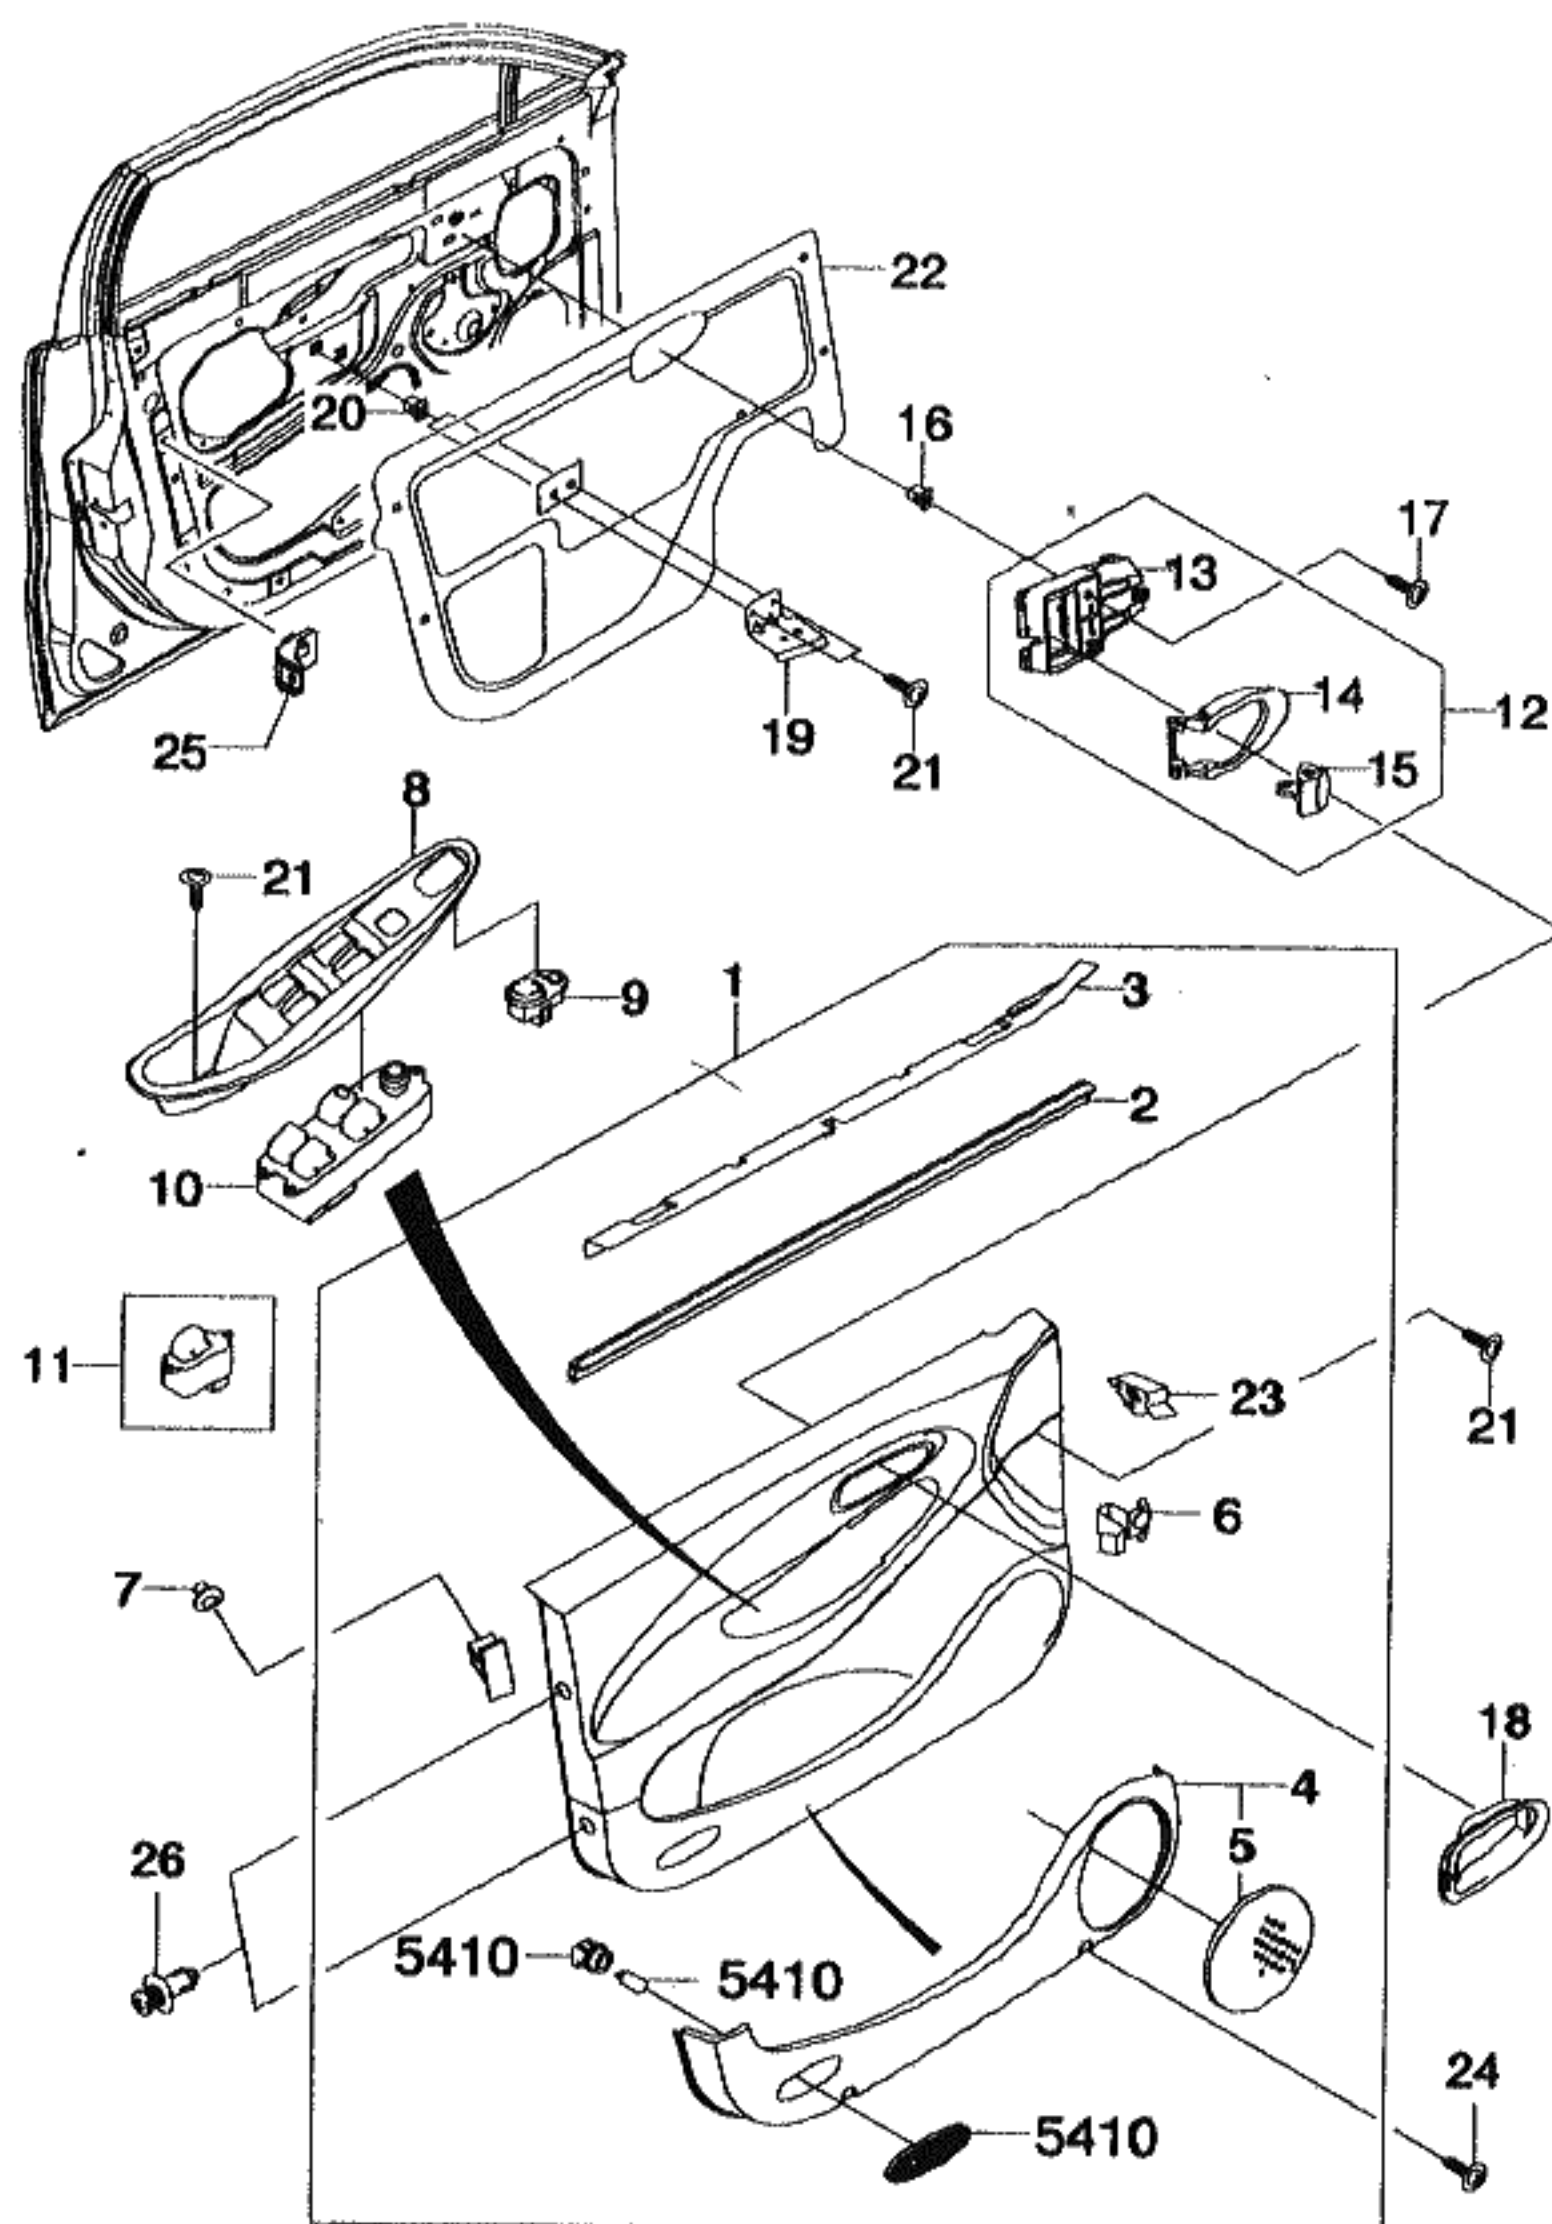


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)TRIM A-FR DOOR (D)VERKLEIDUNG,VORDERTÜR				(F)GARNITURE-PORTE AVANT (S)ADORNO-PUERTA DELANTERA					
	96242061	S S		&82I&W6C/W6W		LH 1					
	96242062	S S		&82I&W6C/W6W		RH 1					
	96242085	O O		&82I&W6R		LH 1					
	96242086	O O		&82I&W6R		RH 1					
	[02]	(E)WEATHERSTRIP-FR DOOR,INR (D)DICHTUNGSLEISTE,VORDERTÜR				(F)ISOLATION EN BANDELETTE (S)BURLETE-PUERTA					
	96194689	S S				LH 1					
	96194690	S S				RH 1					
	[03]	(E)CHANNEL-FR DOOR (D)RILLE				(F)RAINURE-PORTE (S)CANAL					
	96194717	S S				LH 1					
	96194718	S S				RH 1					
	[04]	(E)DEPOSITE BOX A-FR DOOR (D)TÜR-FACH				(F)BOITE-DEPOT DE PORTE (S)CAJA-DEPOSITO DE PUERTA					
	96240171	S S		&82I		LH 1					
	96240172	S S		&82I		RH 1					
	[05]	(E)GRILLE-DEPOSITE BOX FR DR (D)GITTE				(F)GRILLE (S)REJA					
	96240179	S S		&82I		LH 1					
	96240180	S S		&82I		RH 1					
	[06]	(E)HOOK-DOOR TRIM (D)HAKEN				(F)CROCHET (S)PERCHA					
	96194745	S S				2					
	[07]	(E)CLIP (D)KLEMMER				(F)ATTACHE (S)GRAPA					
	09409-08301	S S				6					
	[08]	(E)COVER-PWR WDO S/W FR DOOR (D)DECKEL				(F)COUVERTURE (S)CUBIERTA					


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

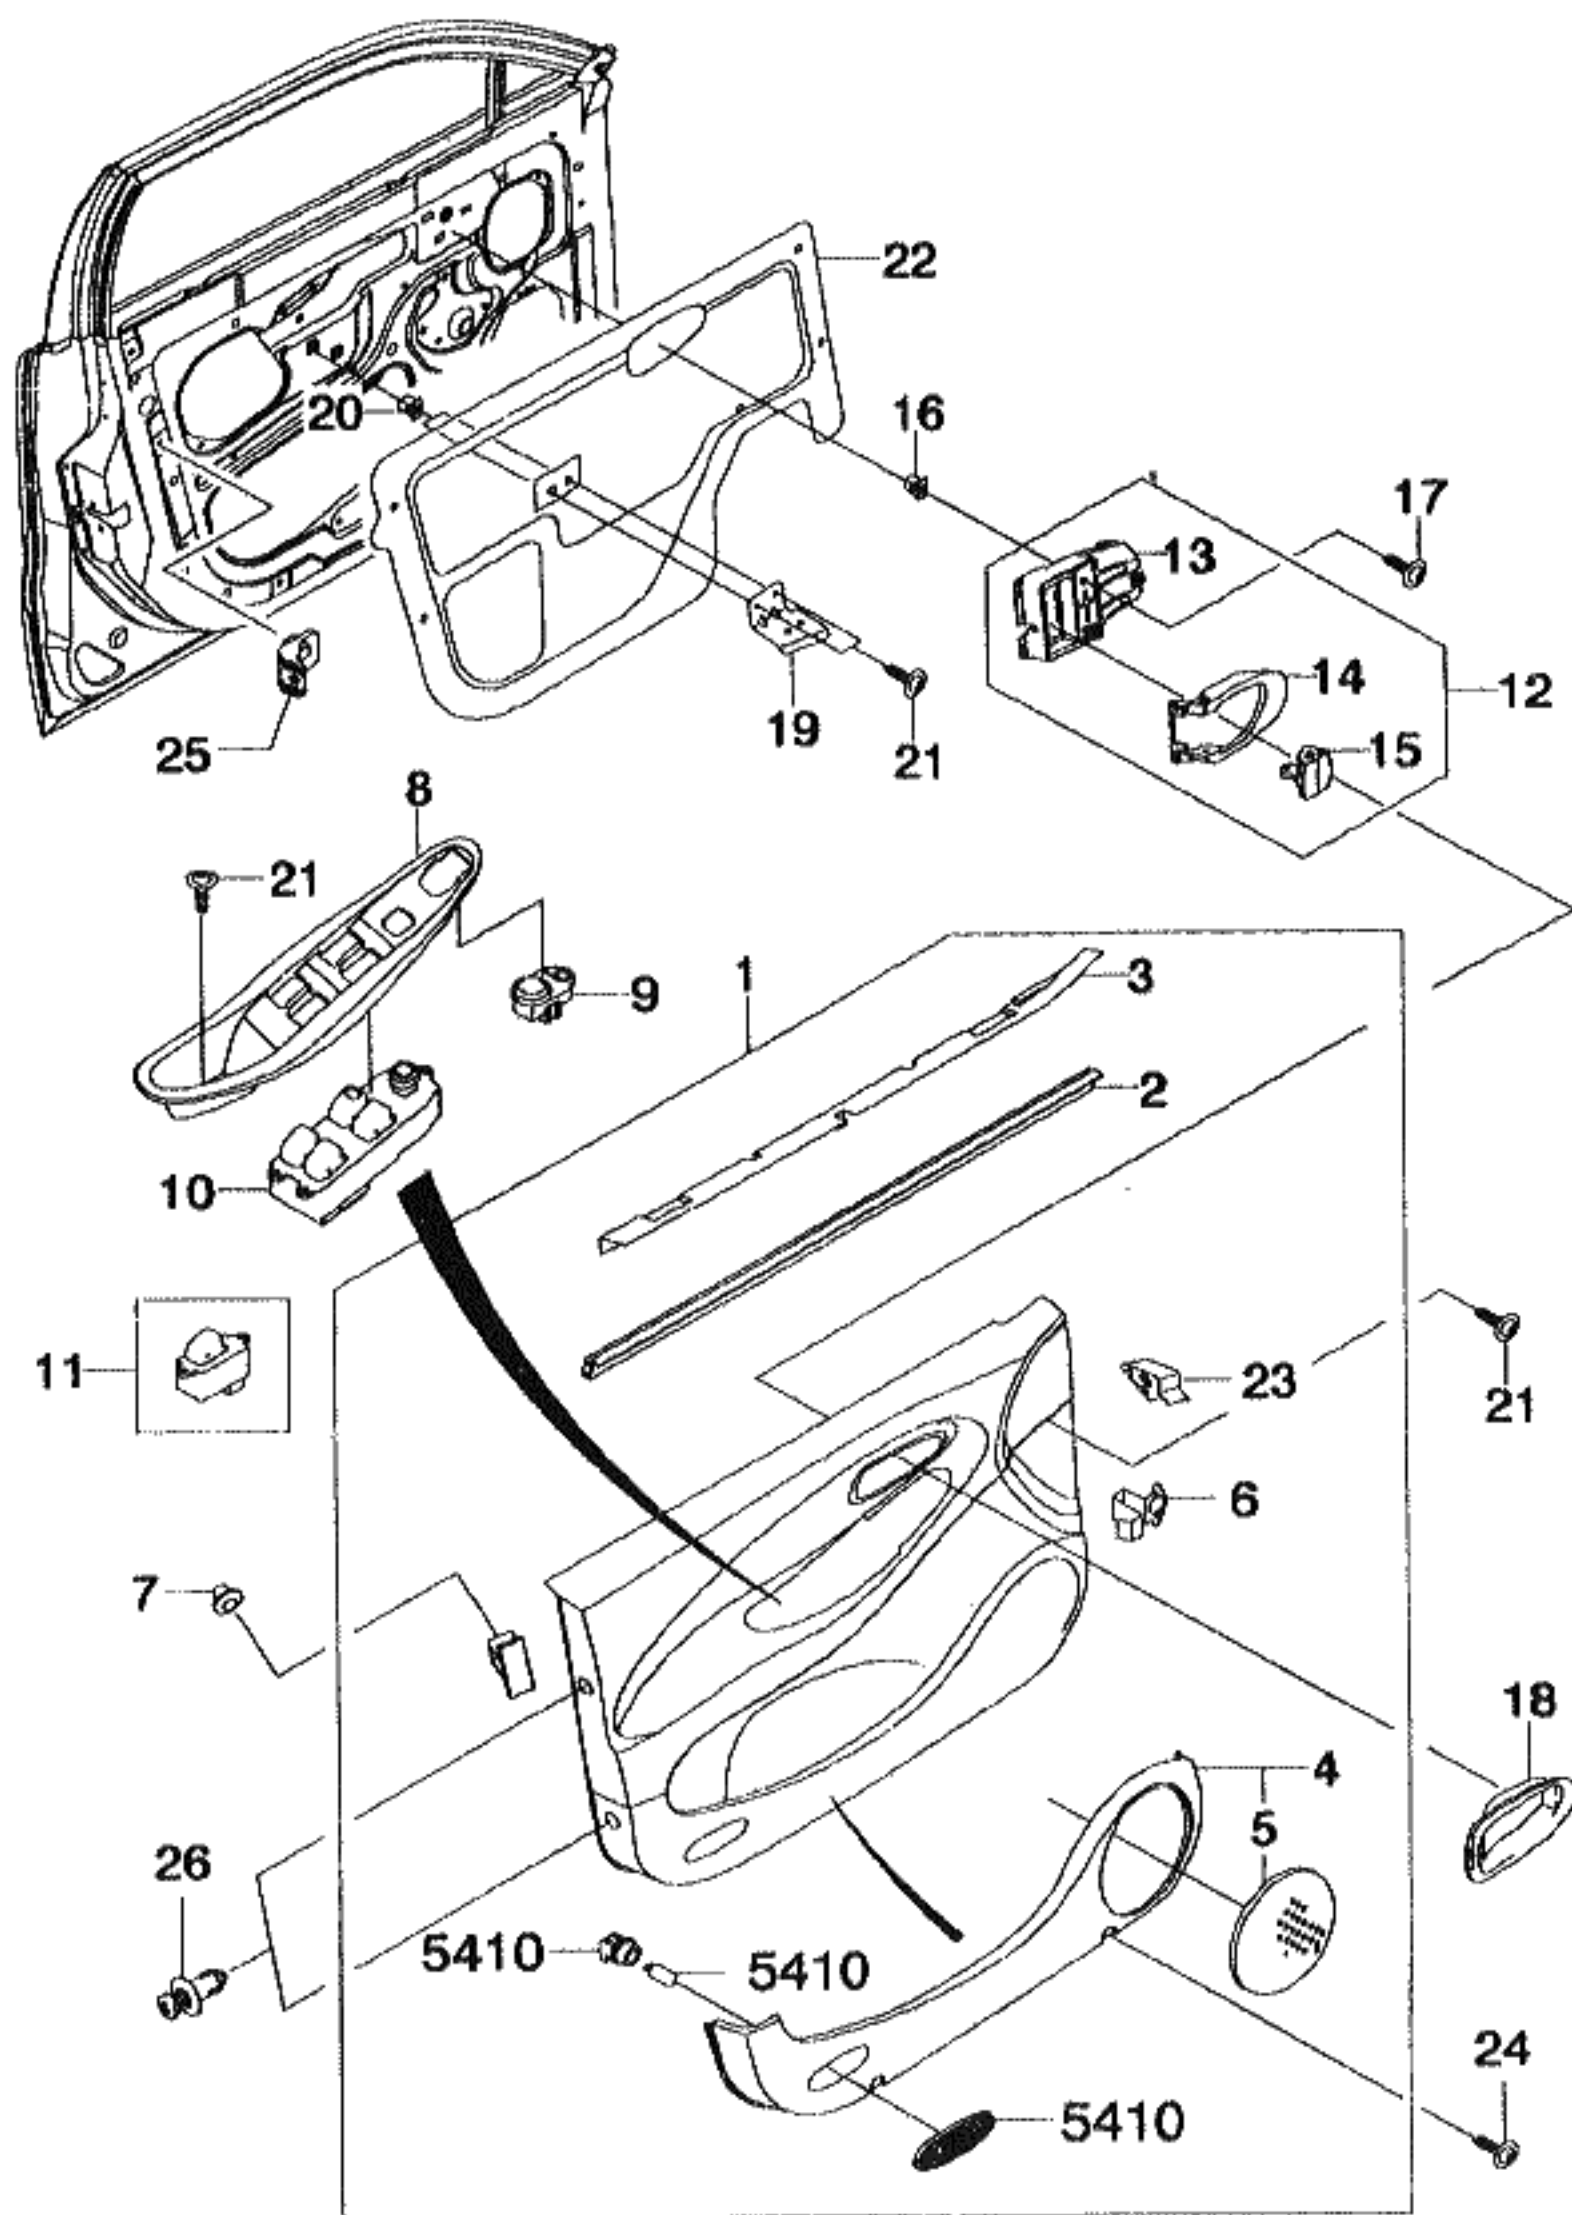

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96207283	.	S	.	&82I &A32-WGR	LH	1				
	96207261	.	O	.	&82I &A66-WGR	LH	1				
	96207281	.	S	.	&82I	RH	1				
	96220237	.	.	S	&A66&DHC&WGR	LH	1				
	96220238	.	.	S	&DHC&WGR	RH	1				
	[09]		(E)SWITCH (D)DECKEL		A-MIRROR ADJUST	(F)COUVERTURE (S)CUBIERTA					
	96206805	.	S	.	&DM0/DM6	1					
	96206856	.	O	S	MIRROR SWITCH	1					
	[10]		(E)SWITCH (D)SCHALTER		A-WDO LIFTER MAIN	(F)COMMUTATEUR (S)INTERRUPTOR					
	96206819	.	S	.	&A32	1					
	96206811	.	O	S	&A66	1					
	[11]		(E)SWITCH (D)SCHALTER		A-WDO LIFTER MAIN	(F)COMMUTATEUR (S)INTERRUPTOR					
	96206843	.	S	S		3					
	[12]		(E)HANDLE (D)HENKEL		A-INSIDE DOOR	(F)POIGNEE (S)MANIJA					
	96233661	.	S	.	&82I	LH	1				
	96233665	.	S	.	&82I	RH	1				
	96232089	.	.	S	&DHC	LH	1				
	96232090	.	.	S	&DHC	RH	1				
	[13]		(E)SUPPORT (D)TRÄGER		INSIDE HANDLE DR	(F)SUPPORT (S)SOPORTE					
	96205191	.	S	S		LH	1				
	96205192	.	S	S		RH	1				
	[14]		(E)KNOB (D)KNOPF		INSIDE HANDLE DOOR	(F)BOUTON (S)PERILLA					
	96205193	.	S	.		LH	1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

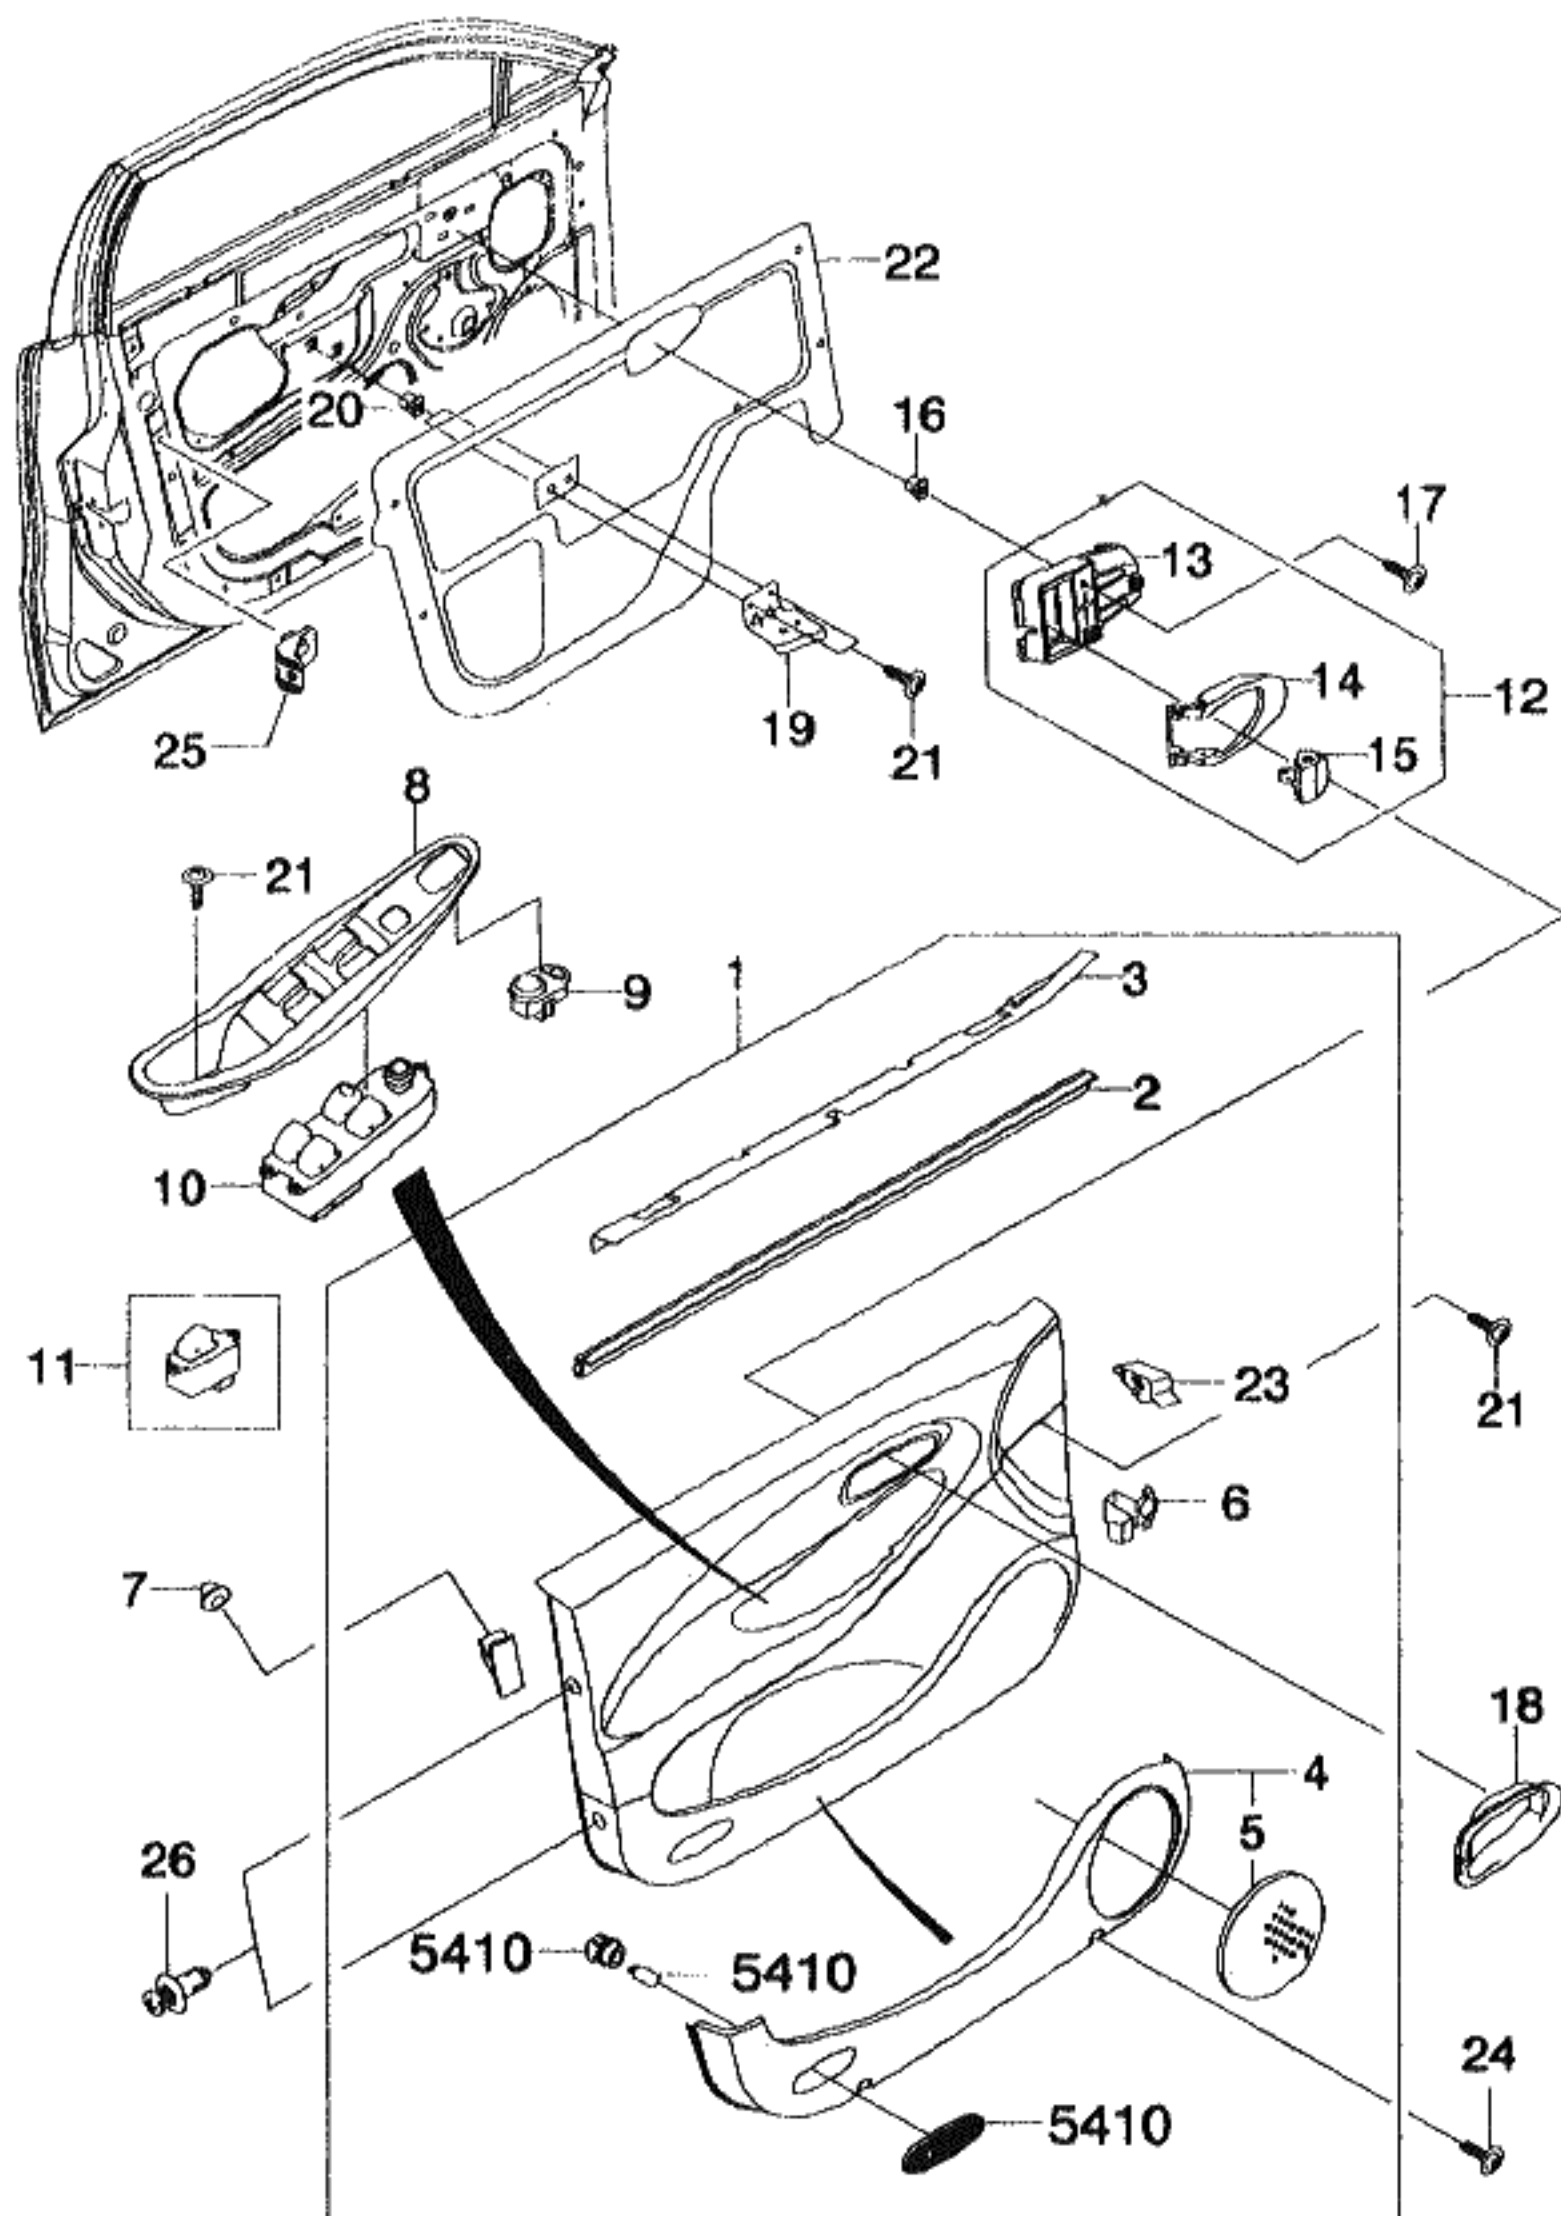


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96205194	.	S	.			RH	1			
	96232091	.	.	S			LH	1			
	96232092	.	.	S			RH	1			
	[15]		(E) LOCK BUT-I/S HANDLE DOOR (D) KNOFF, TÜRVERRIEGELUNG				(F) BOUTON (S) BOTON-CIERRE DE PUERTA				
	96205195	.	S	.				2			
	96232093	.	.	S				2			
	[16]		(E) NUT-SPEED (D) MUTTER				(F) ECROU (S) TUERCA				
	09148-04005	.	S	S				2			
	[17]		(E) SCREW-TAPPING (D) SCHRAUBE				(F) VIS (S) TORNILLO				
	03160-48165	.	S	S				2			
	[18]		(E) HOUSING-INSIDE HANDLE DR (D) GEHÄUSE				(F) LOGEMENT (S) CARCASA				
	96233663	.	S	S	&821			2			
	[19]		(E) BRACKET-POCKET FR DOOR (D) TRÄGER				(F) SUPPORT (S) SOPORTE				
	96194721	.	S	S			LH	1			
	96194722	.	S	S			RH	1			
	[20]		(E) NUT-SPEED (D) MUTTER				(F) ECROU (S) TUERCA				
	09148-04005	.	S	S				6			
	09148-03001	.	S	S				4			
	[21]		(E) SCREW-TAPPING (D) SCHRAUBE				(F) VIS (S) TORNILLO				
	09136-04007	.	S	S				8			
	[22]		(E) SEAL-TRIM,FR DOOR (D) DICHTUNG				(F) JOINT (S) SELLO				
	96244503	.	S	S			LH	1			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

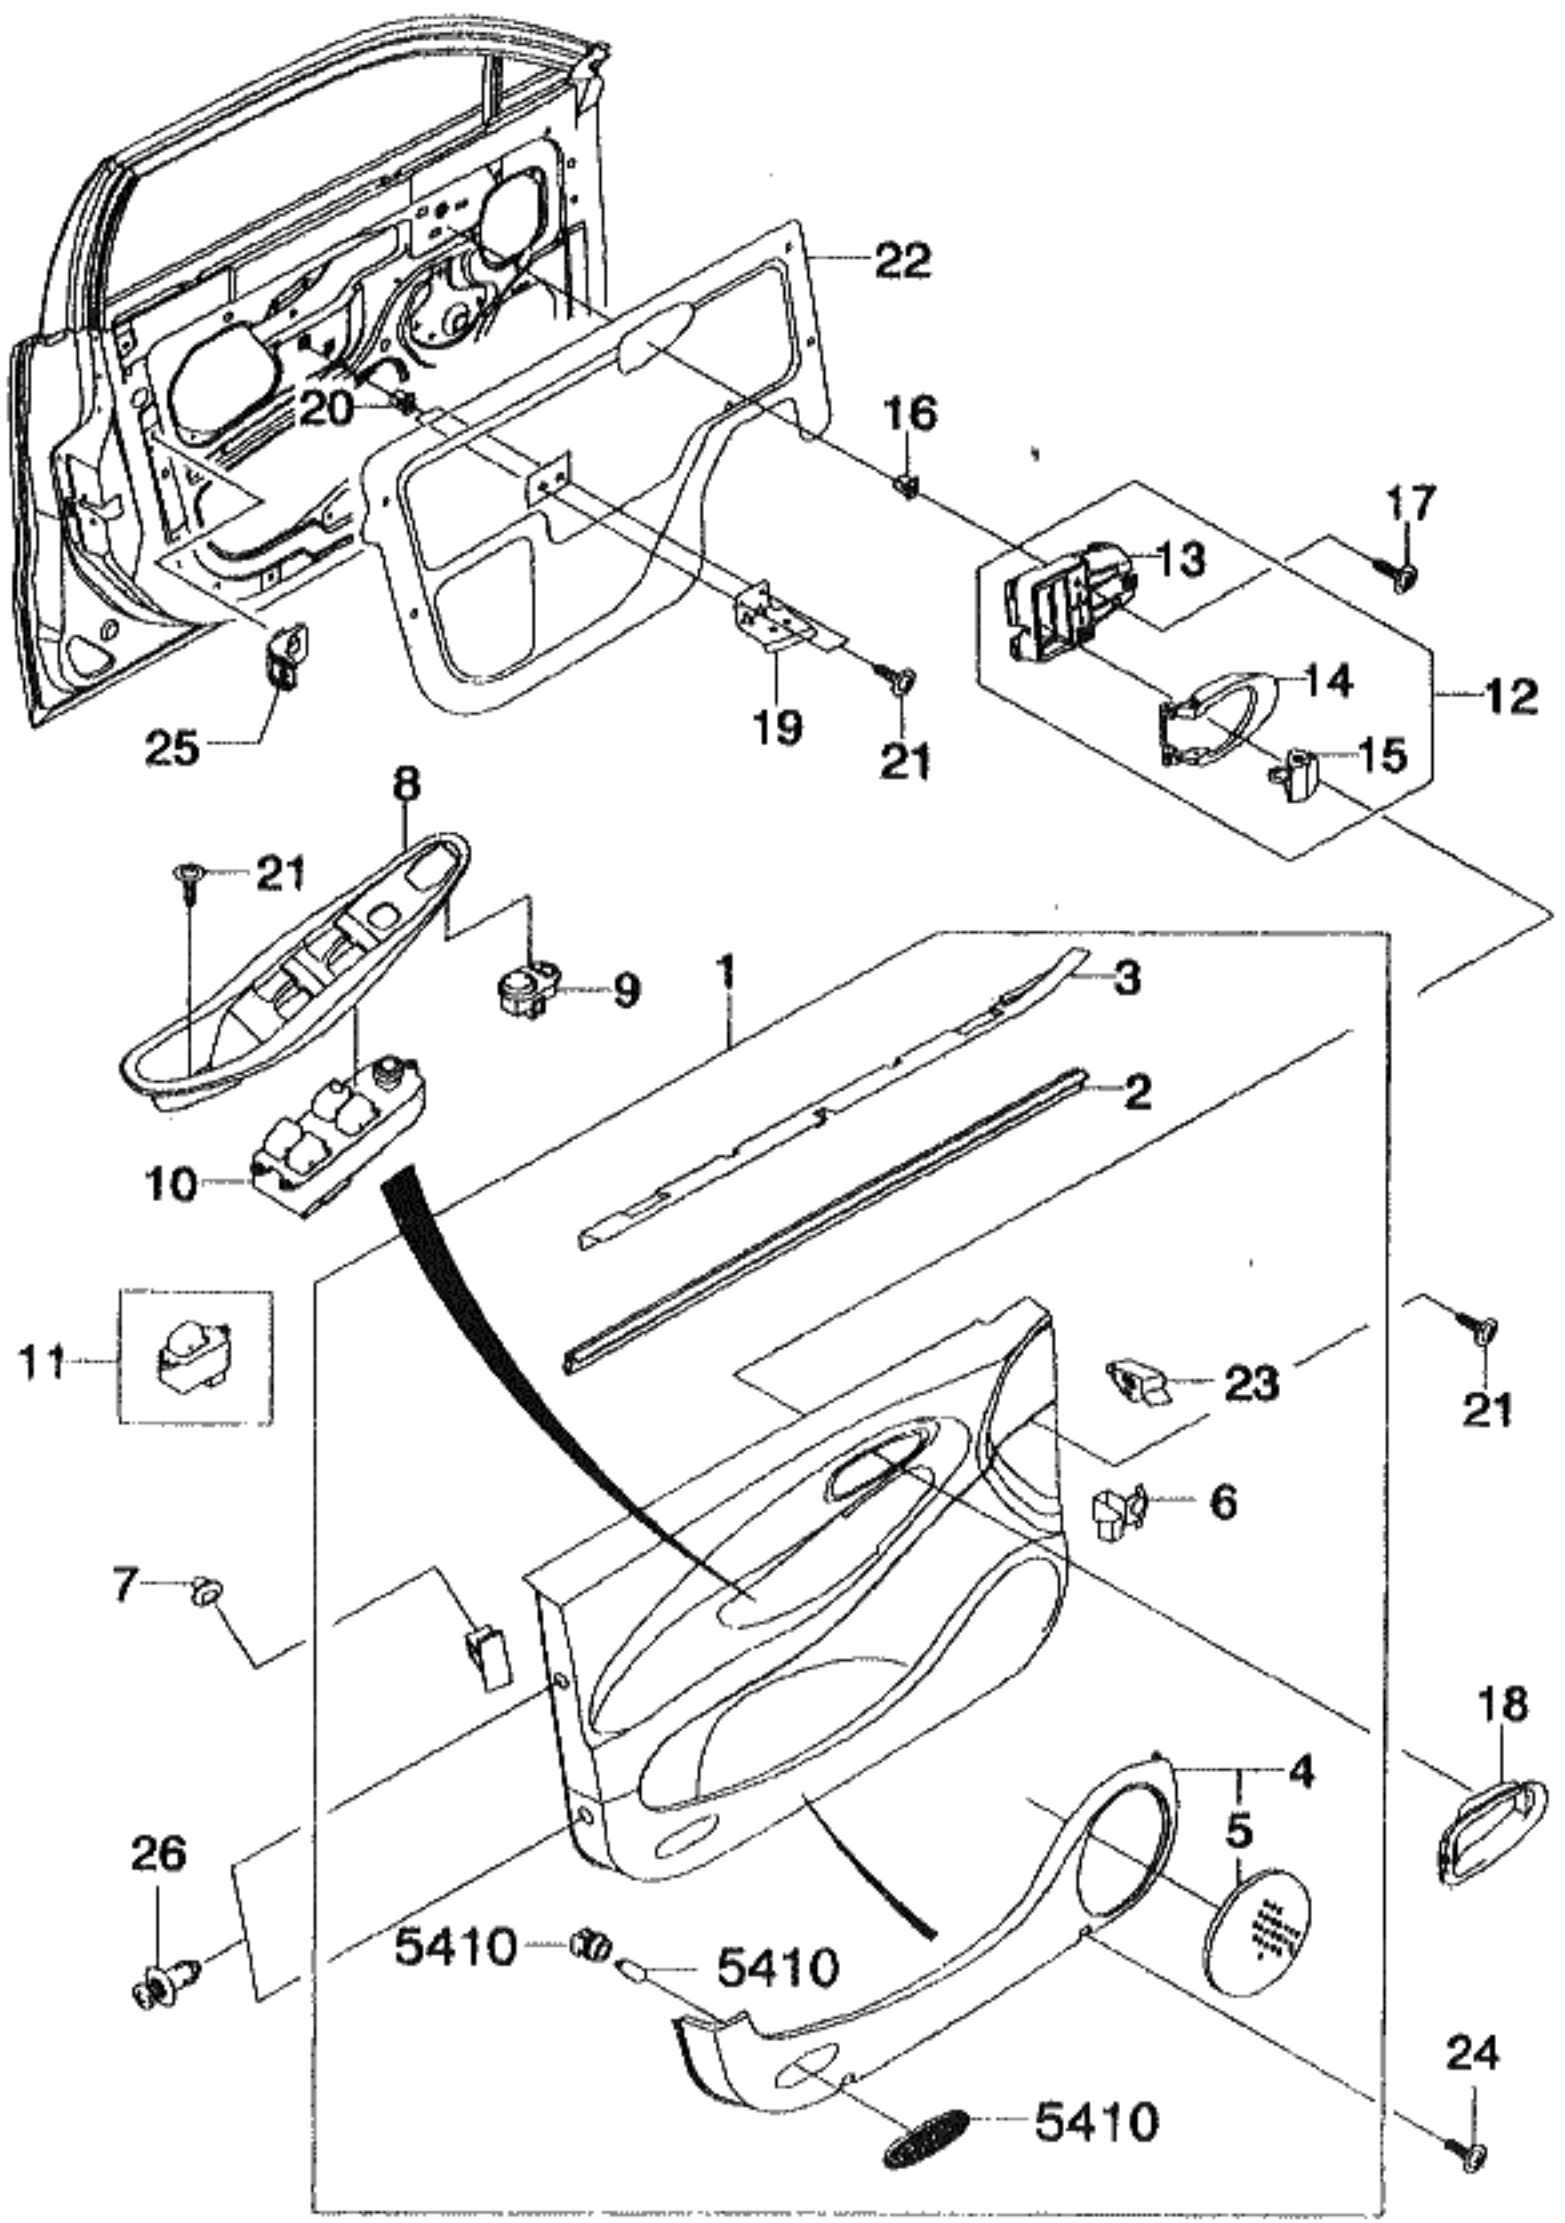


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / CODE	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96244504	.	S	S	(E) LOCK-POWER WINDOW S/W (D) SCHALTER	RH 1 (F) COMMUTATEUR (S) INTERRUPTOR	6 (F) VIS (S) TORNILLO	4 (F) SUPPORT (S) SOPORTE	4 (F) ATTACHE (S) GRAPA	4		
	[23]											
	96220204	.	S	S								
	[24]											
	09132-05003	.	S	S								
	[25]											
	96244501	.	S	S	(E) CLIP (D) KLEMME							
	[26]											
	09409-05316	.	S	S	&821							
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							


7220 REAR DOOR TRIM

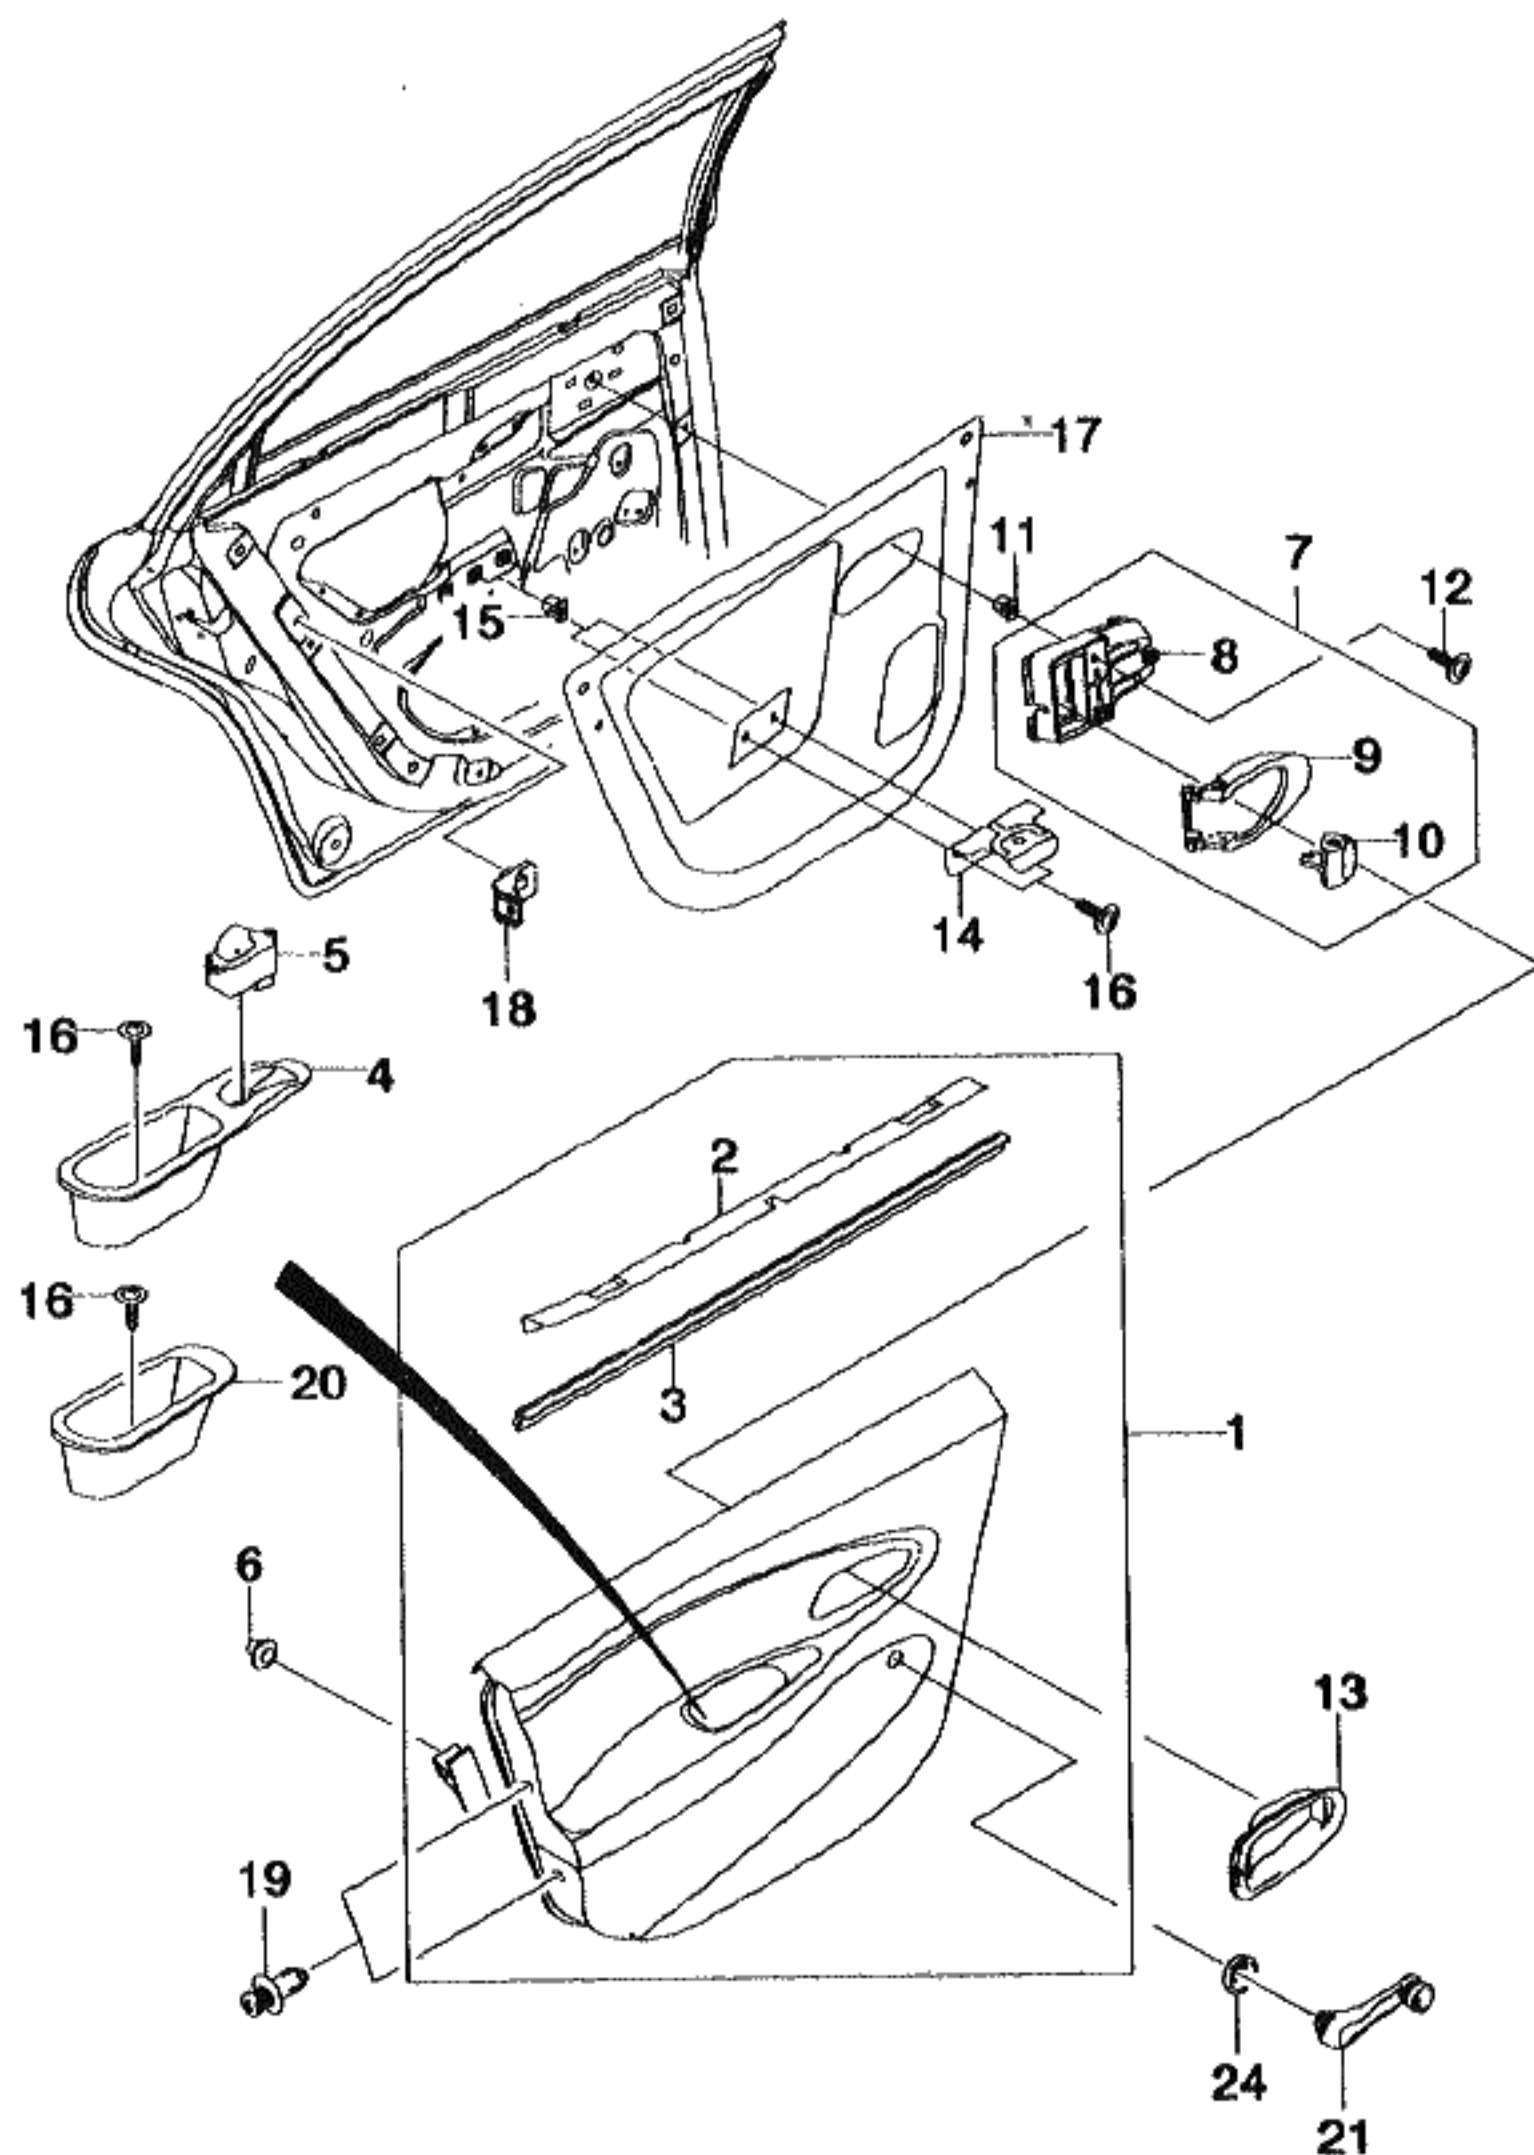


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]				(E)TRIM A-RR DOOR (D)VERKLEIDUNG,HINTERTÜR			(F)GARNITURE-PORTE ARRIERE (S)ADORNO-PUERTA TRASERA			
96242133			S	&82I&A32&W6C/W6W	LH	1				
96242134			S	&82I&A32&W6C/W6W	RH	1				
96242157			O	&82I&A32&W6R	LH	1				
96242158			O	&82I&A32&W6R	RH	1				
96242121			O S	&82I&A66&W6C/W6W	LH	1				
96242122			O S	&82I&A66&W6C/W6W	RH	1				
96242103			O O	&82I&A66&W6R	LH	1				
96242104			O O	&82I&A66&W6R	RH	1				
[02]				(E)CHANNEL-RR DOOR (D)RILLE			(F)RAINURE-PORTE (S)CANAL			
96219215			S S		LH	1				
96219216			S S		RH	1				
[03]				(E)WEATHERSTRIP-FR DOOR,INR (D)DICHTUNGSLASTE,HINTERTÜR			(F)ISOLATION EN BANDELETTE (S)BURLETE-PUERTA			
96194769			S S		LH	1				
96194770			S S		RH	1				
[04]				(E)COVER-PWR WDO SW RR DOOR (D)DECKEL			(F)COUVERTURE (S)CUBIERTA			
96207274			O	&82I&A66-WGR	LH	1				
96207279			O	&82I&A66-WGR	RH	1				
96220241			S	&A66&DHC&WGR	LH	1				
96220242			S	&A66&DHC&WGR	RH	1				
[05]				(E)SWITCH A-WINDOW LIFTER (D)SCHALTER			(F)COMMUTATEUR (S)INTERRUPTOR			
96206843			O S			2				
[06]				(E)CLIP (D)KLEMME			(F)ATTACHE (S)GRAPA			
LEVEL					T/A(TRANSAXLE)					
S X = 2.0 SOHC					M = MANUAL T/A					
CDX = 2.0 DOHC					A = AUTOMATIC T/A					
					. = COMMON					

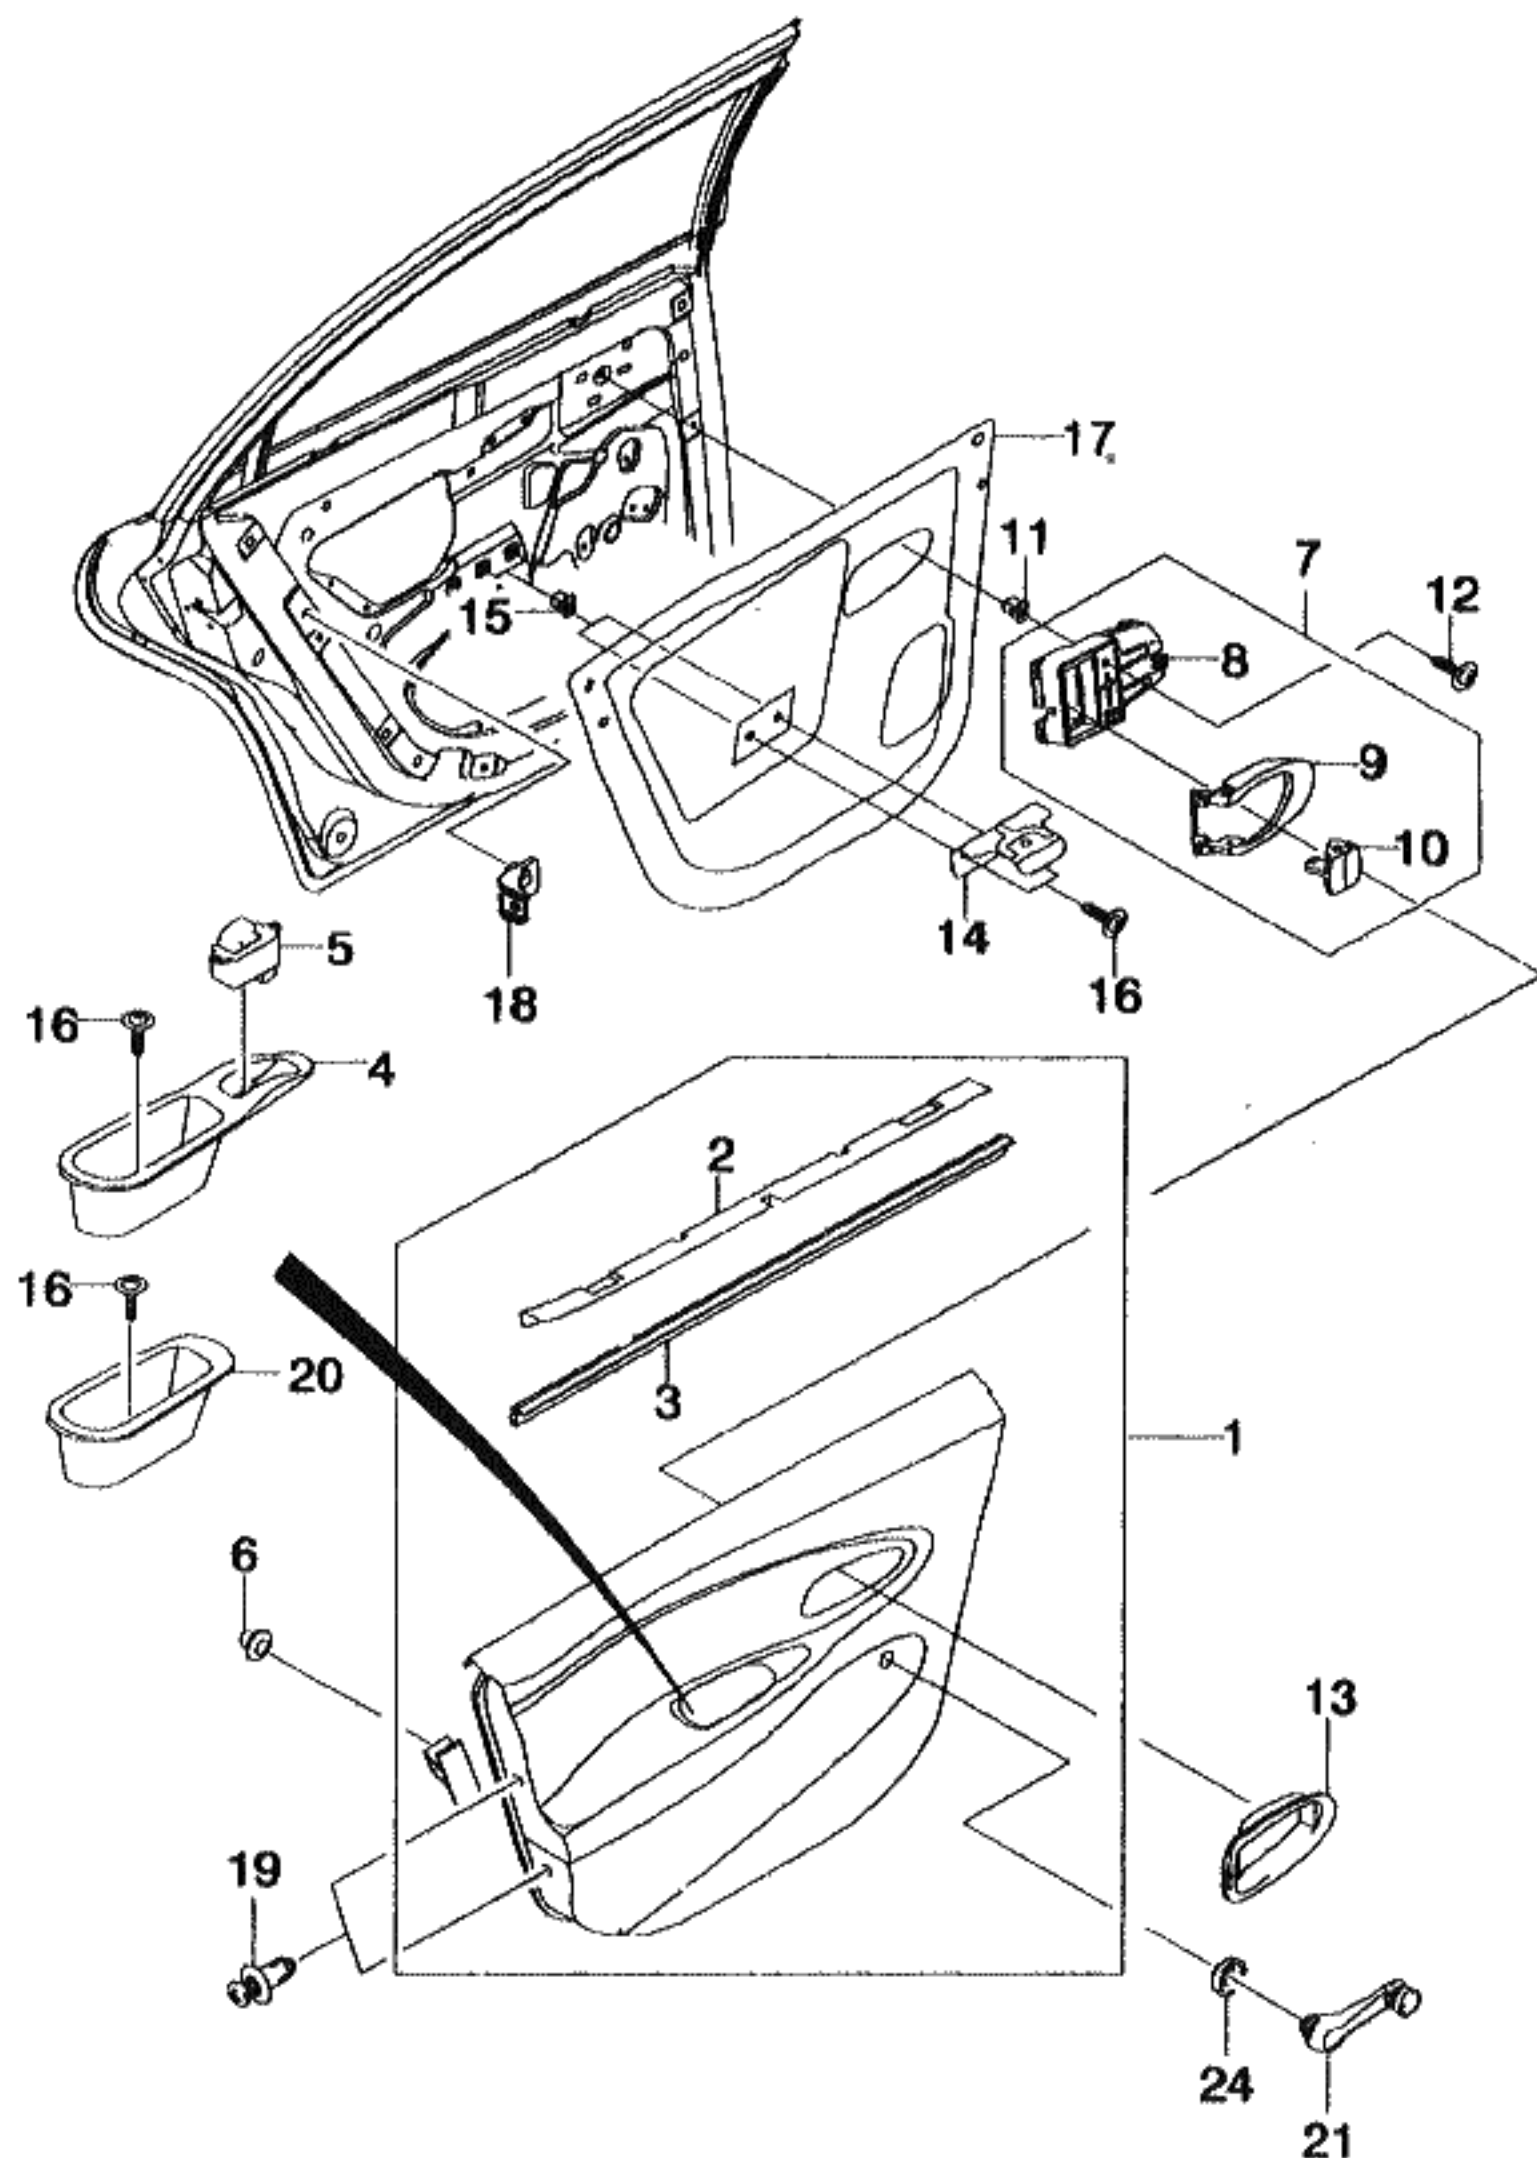

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	09409-08301	.	S	S			10				
	[07]	(E)	HANDLE A-INSIDE DOOR			(F)	POIGNEE				
		(D)	HENKEL			(S)	MANIJA				
	96233661	.	S	.	&82I	LH	1				
	96233665	.	S	.	&82I	RH	1				
	96232089	.	.	S	&DHC	LH	1				
	96232090	.	.	S	&DHC	RH	1				
	[08]	(E)	SUPPORT-INSIDE HANDLE DR			(F)	SUPPORT				
		(D)	TRÄGER			(S)	SOPORTE				
	96205191	.	S	S		LH	1				
	96205192	.	S	S		RH	1				
	[09]	(E)	KNOB-INSIDE HANDLE DOOR			(F)	BOUTON				
		(D)	KNOPF			(S)	PERILLA				
	96205193	.	S	.		LH	1				
	96205194	.	S	.		RH	1				
	96232091	.	.	S	&DHC	LH	1				
	96232092	.	.	S	&DHC	RH	1				
	[10]	(E)	LOCK BUTTON-INS HANDLE DR			(F)	BOUTON				
		(D)	KNOPF, TÜRVERRIEGELUNG			(S)	BOTON-CIERRE DE PUERTA				
	96205195	.	S	.			2				
	96232093	.	.	S	&DHC		2				
	[11]	(E)	NUT-SPEED			(F)	ECROU				
		(D)	MUTTER			(S)	TUERCA				
	09148-04005	.	S	S			2				
	[12]	(E)	SCREW-TAPPING			(F)	VIS				
		(D)	SCHRAUBE			(S)	TORNILLO				
	03160-48165	.	S	S			2				
	[13]	(E)	HOUSING-INSIDE HANDLE DR			(F)	LOGEMENT				
		(D)	GEHÄUSE			(S)	CARCASA				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

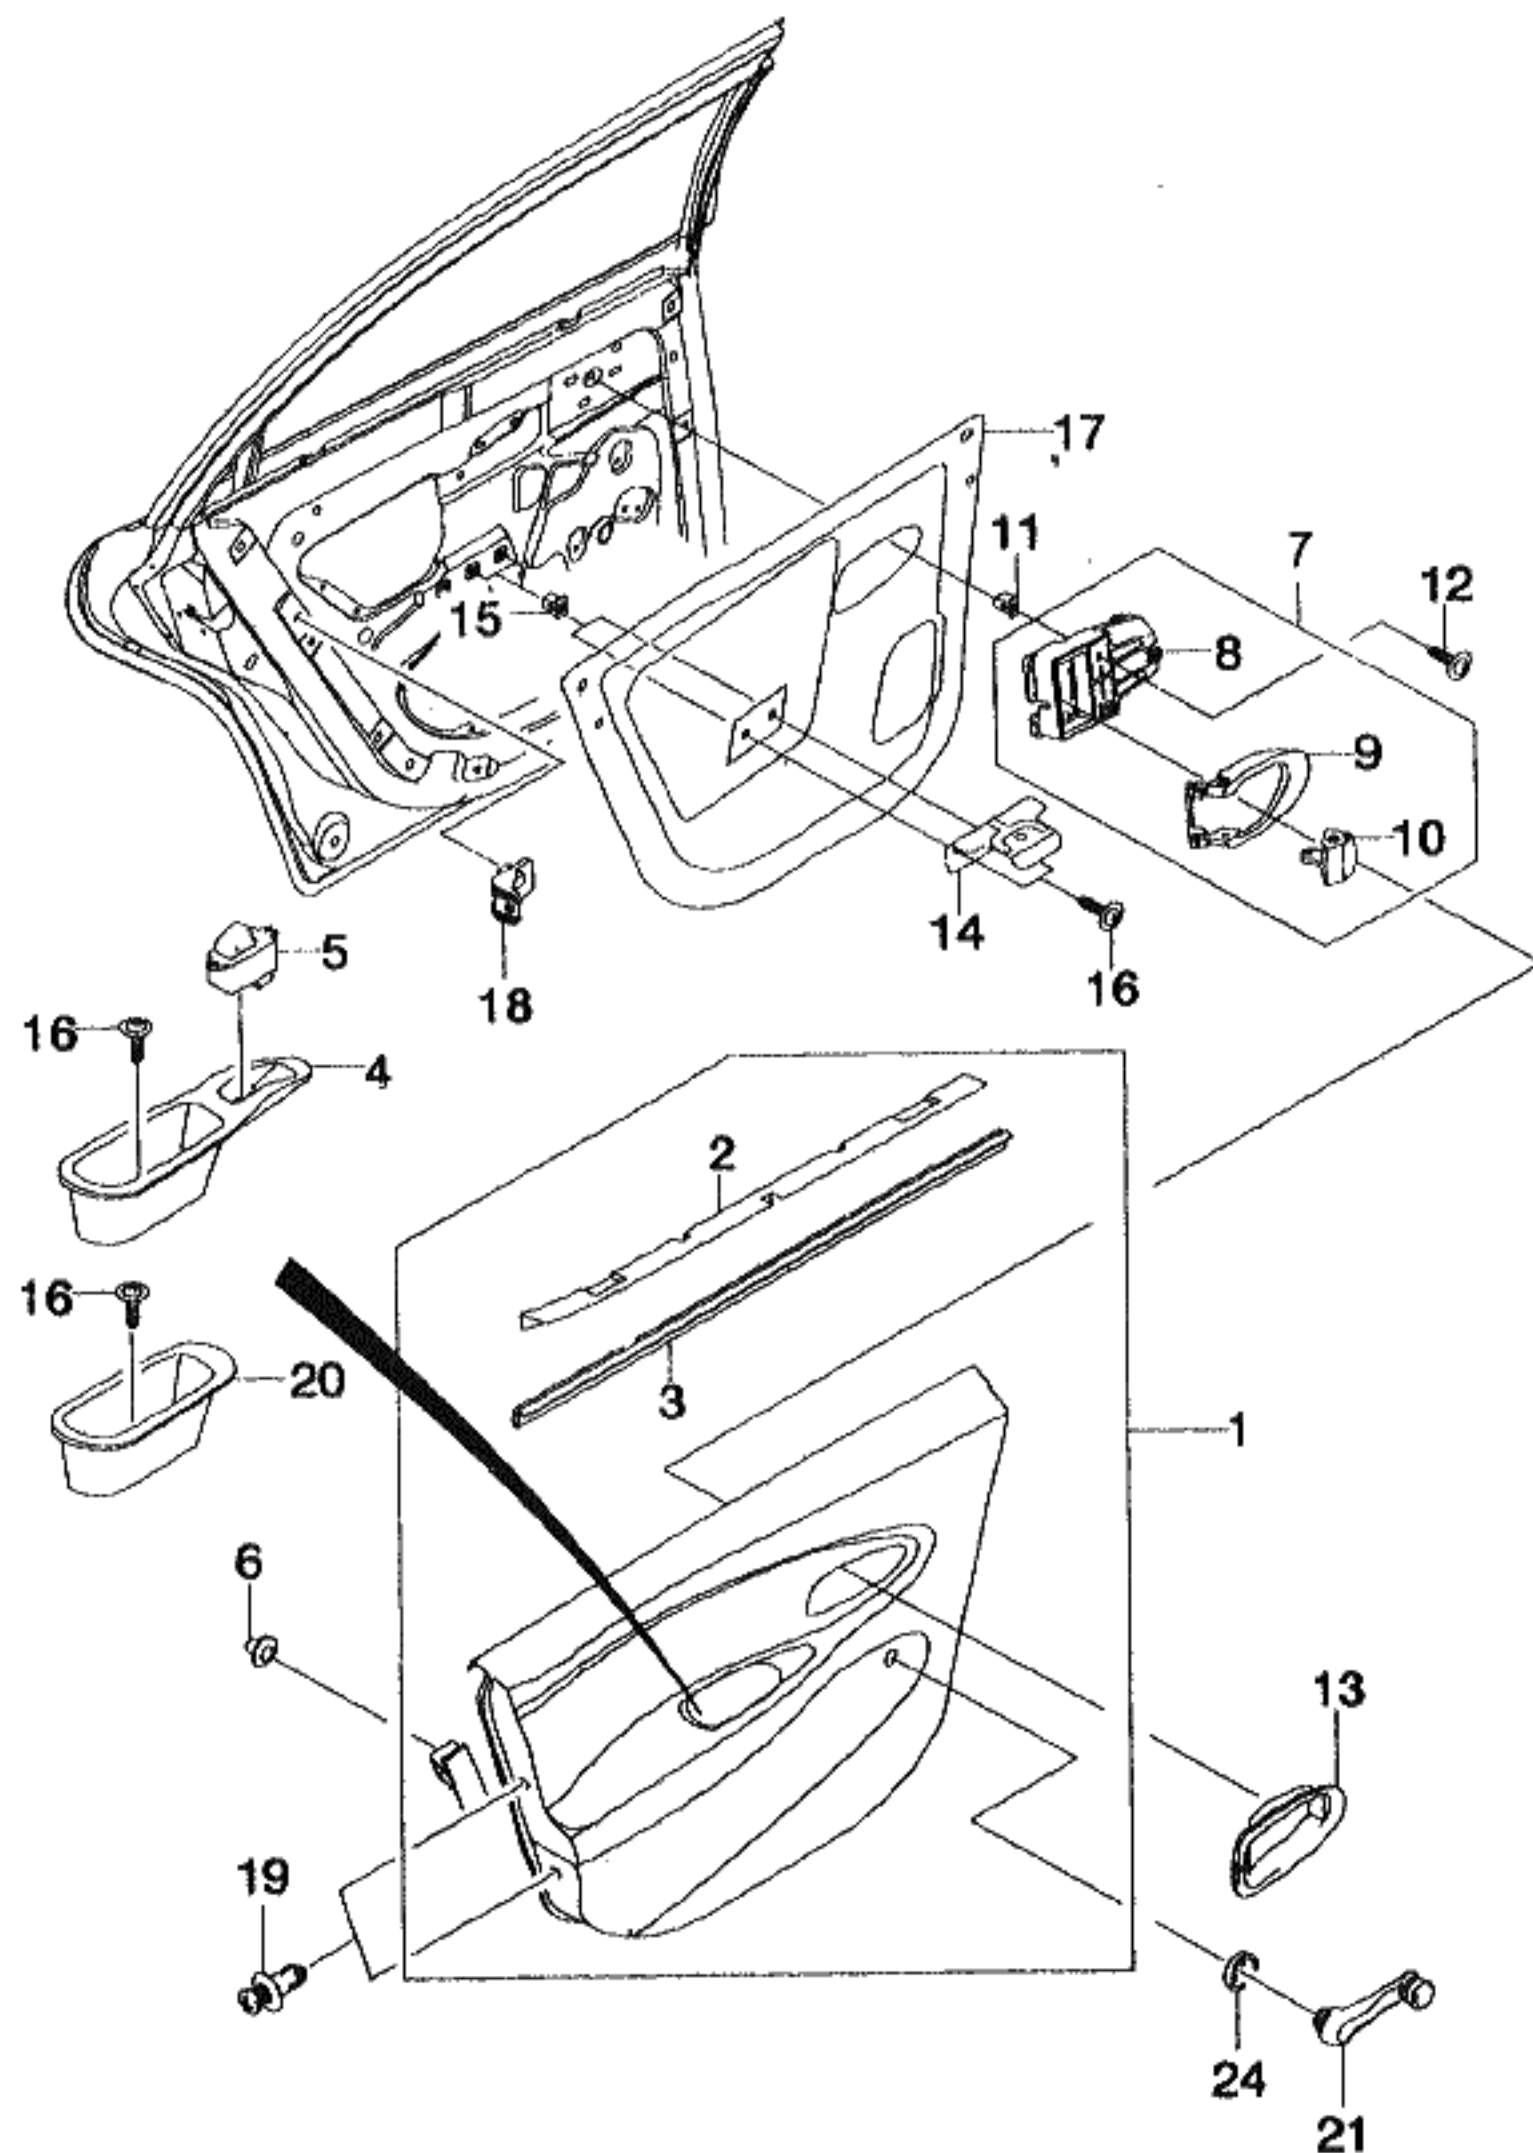


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96233663	.	S	S	&821		2				
	[14]				(E)BRACKET-POCKET RR DOOR (D)TRÄGER		(F)SUPPORT (S)SOPORTE				
	96194797	.	S	S			LH 1				
	96194798	.	S	S			RH 1				
	[15]				(E)NUT-SPEED (D)MUTTER		(F)ECROU (S)TUERCA				
	09148-04005	.	S	S			4				
	[16]				(E)SCREW-TAPPING (D)SCHRAUBE		(F)VIS (S)TORNILLO				
	09136-04007	.	S	S			6				
	[17]				(E)SEAL-TRIM,RR DOOR (D)DICHTUNG		(F)JOINT (S)SELLO				
	96244589	.	S	S			LH 1				
	96244590	.	S	S			RH 1				
	[18]				(E)BRACKET A-RR DOOR (D)TRÄGER		(F)SUPPORT (S)SOPORTE				
	96244502	.	S	S			4		970709		
	O 96244578	.	S	S			4		970710		
	[19]				(E)CLIP (D)KLEMME		(F)ATTACHE (S)GRAPA				
	09409-05316	.	S	S	&821		4				
	[20]				(E)POCKET-RR DOOR (D)TASCHE		(F)POCHE (S)BOLSILLO				
	96240571	.	S	.	&821&A32-WGR		LH 1				
	96240572	.	S	.	&821&A32-WGR		RH 1				
	[21]				(E)CRANK A-WINDOW LIFTER (D)KURBEL FENSTER HEBER		(F)MANIVELLE-SOULEVEUR (S)MANIVELA-LEVANTADOR				
	96301568	.	S	.	&A32		2		970709		
	O 96247245	.	S	.	&821&A32		2		970710		
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

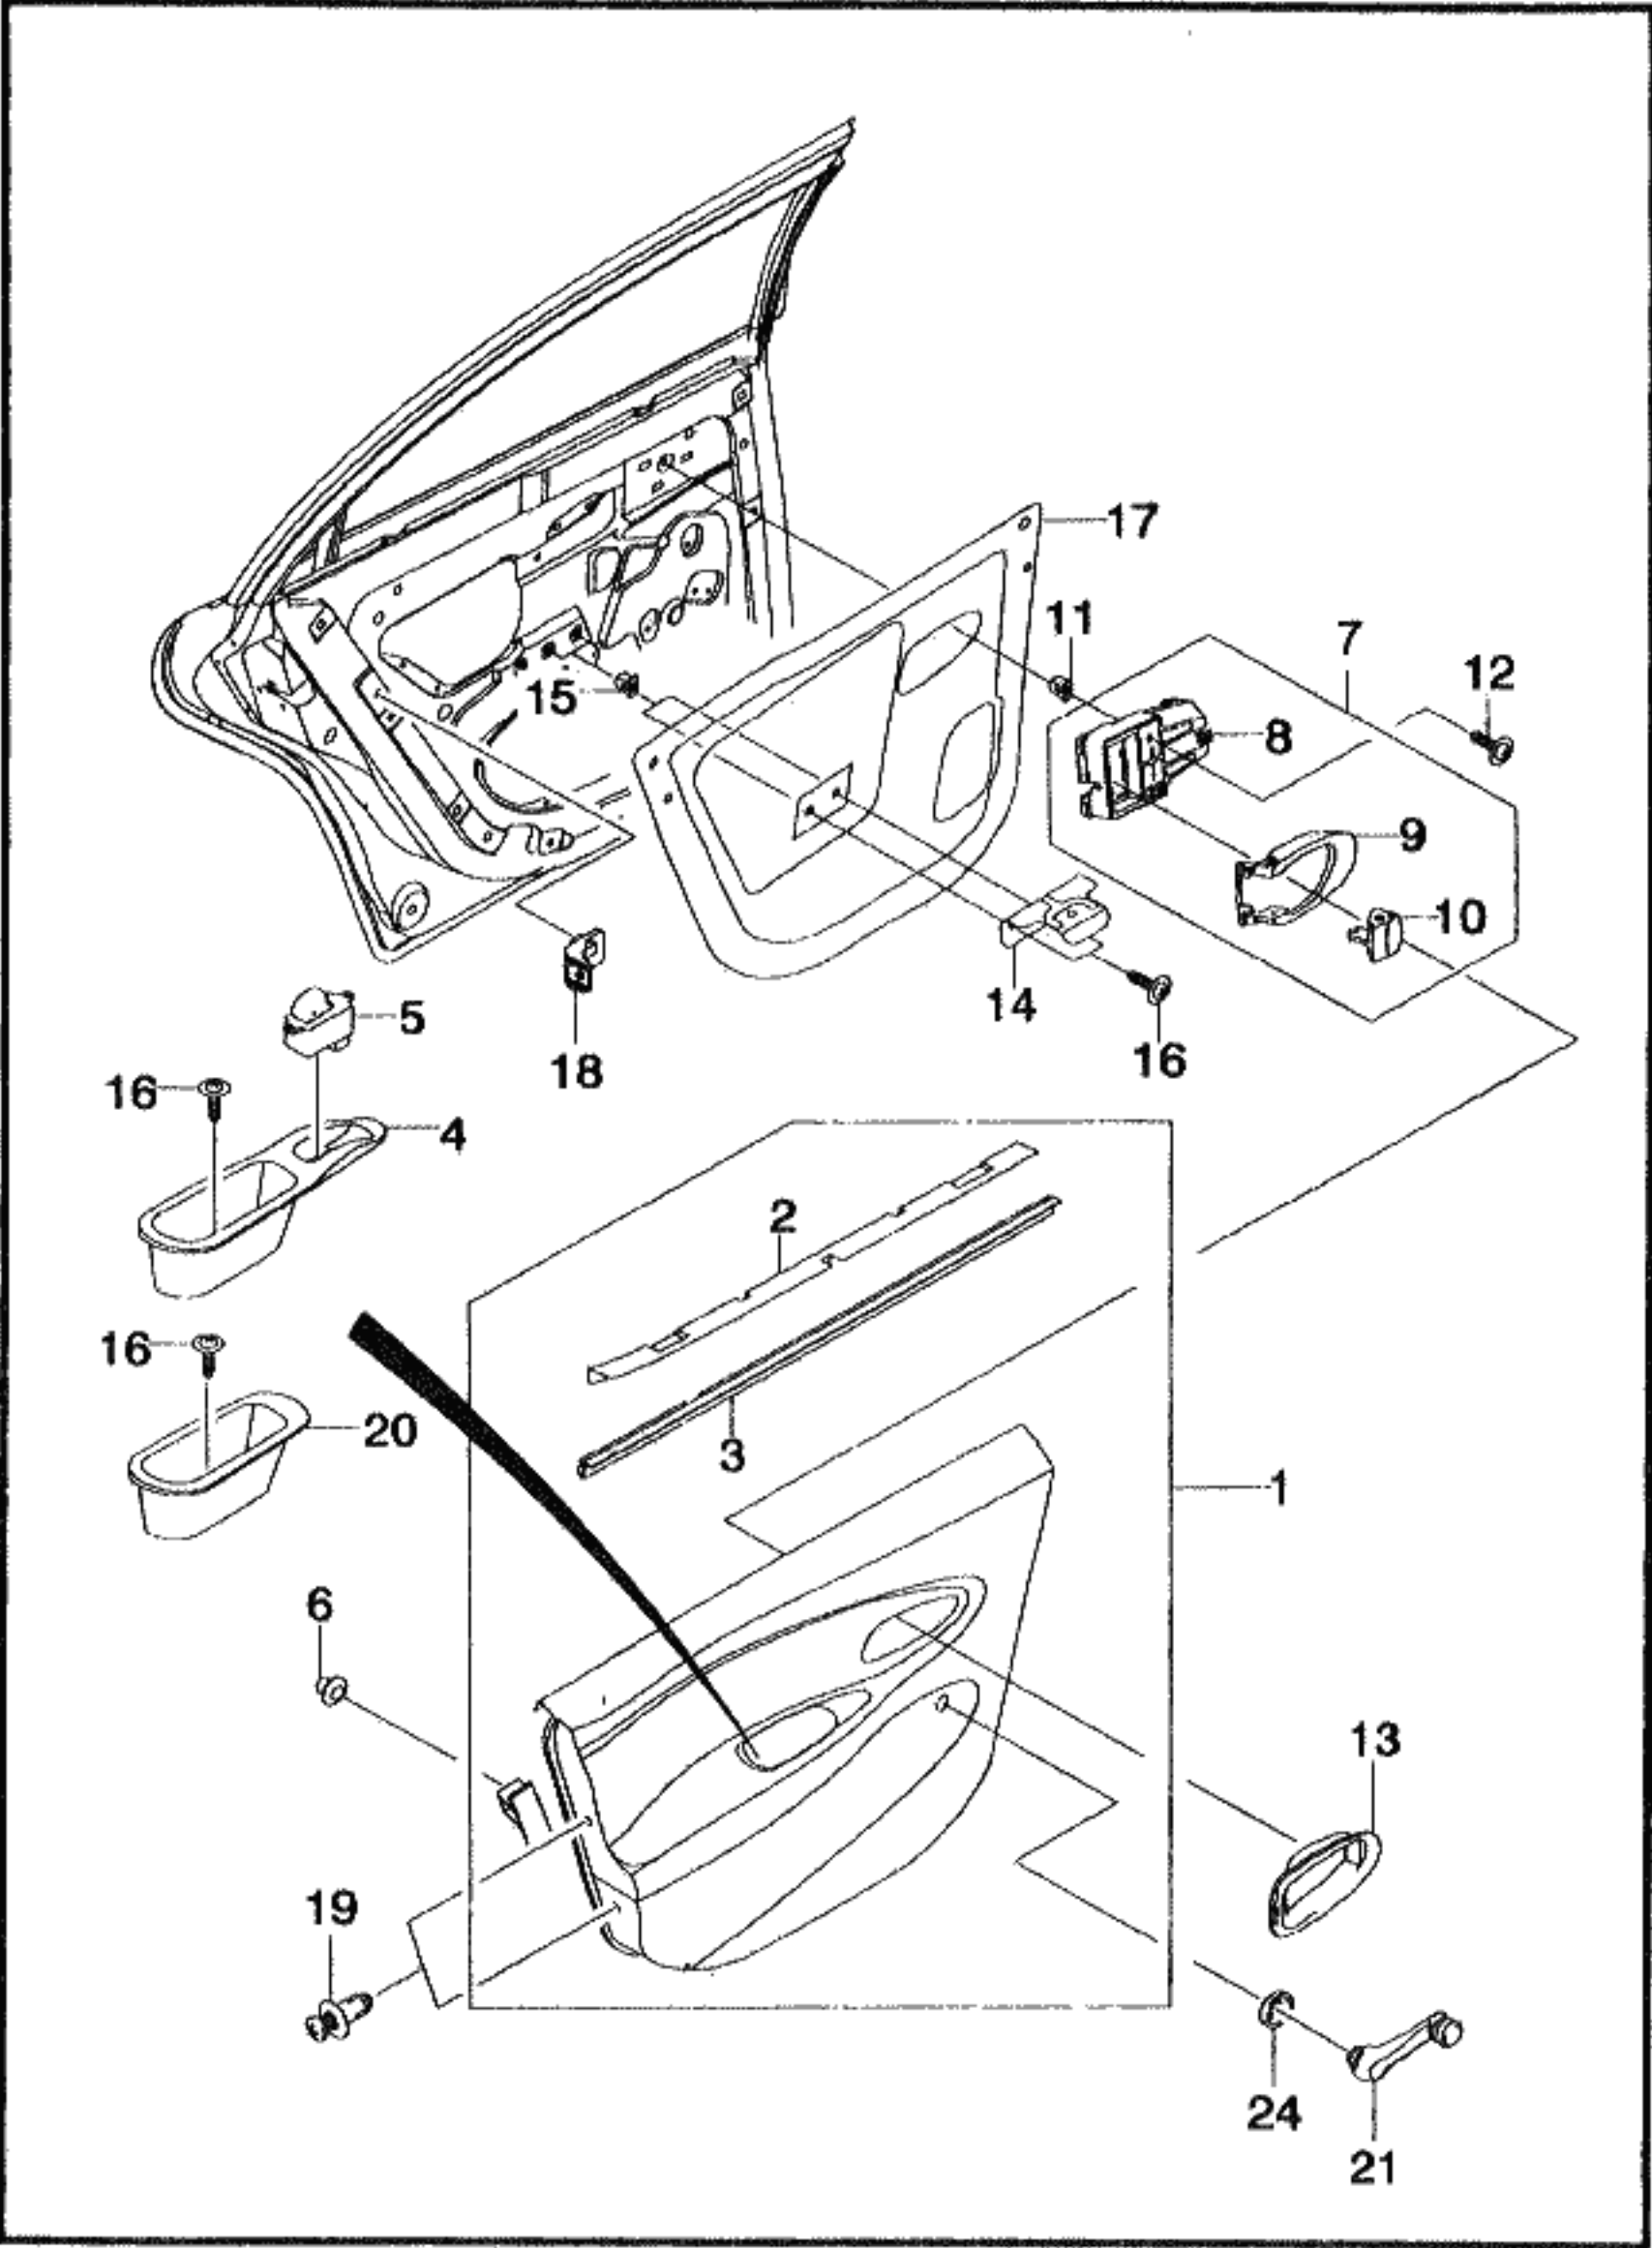


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[24] 96301572 O 96247327	(E) (D)	WASHER-CRANK, WDO LIFTER DICHTUNGSRING				(F) (S)	RONDELLE ARANDELA	2 970709 2 970710		
		.	S	.	&A32		2				
		.	S	.	&82I&A32		2				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

7310 HEADLINING

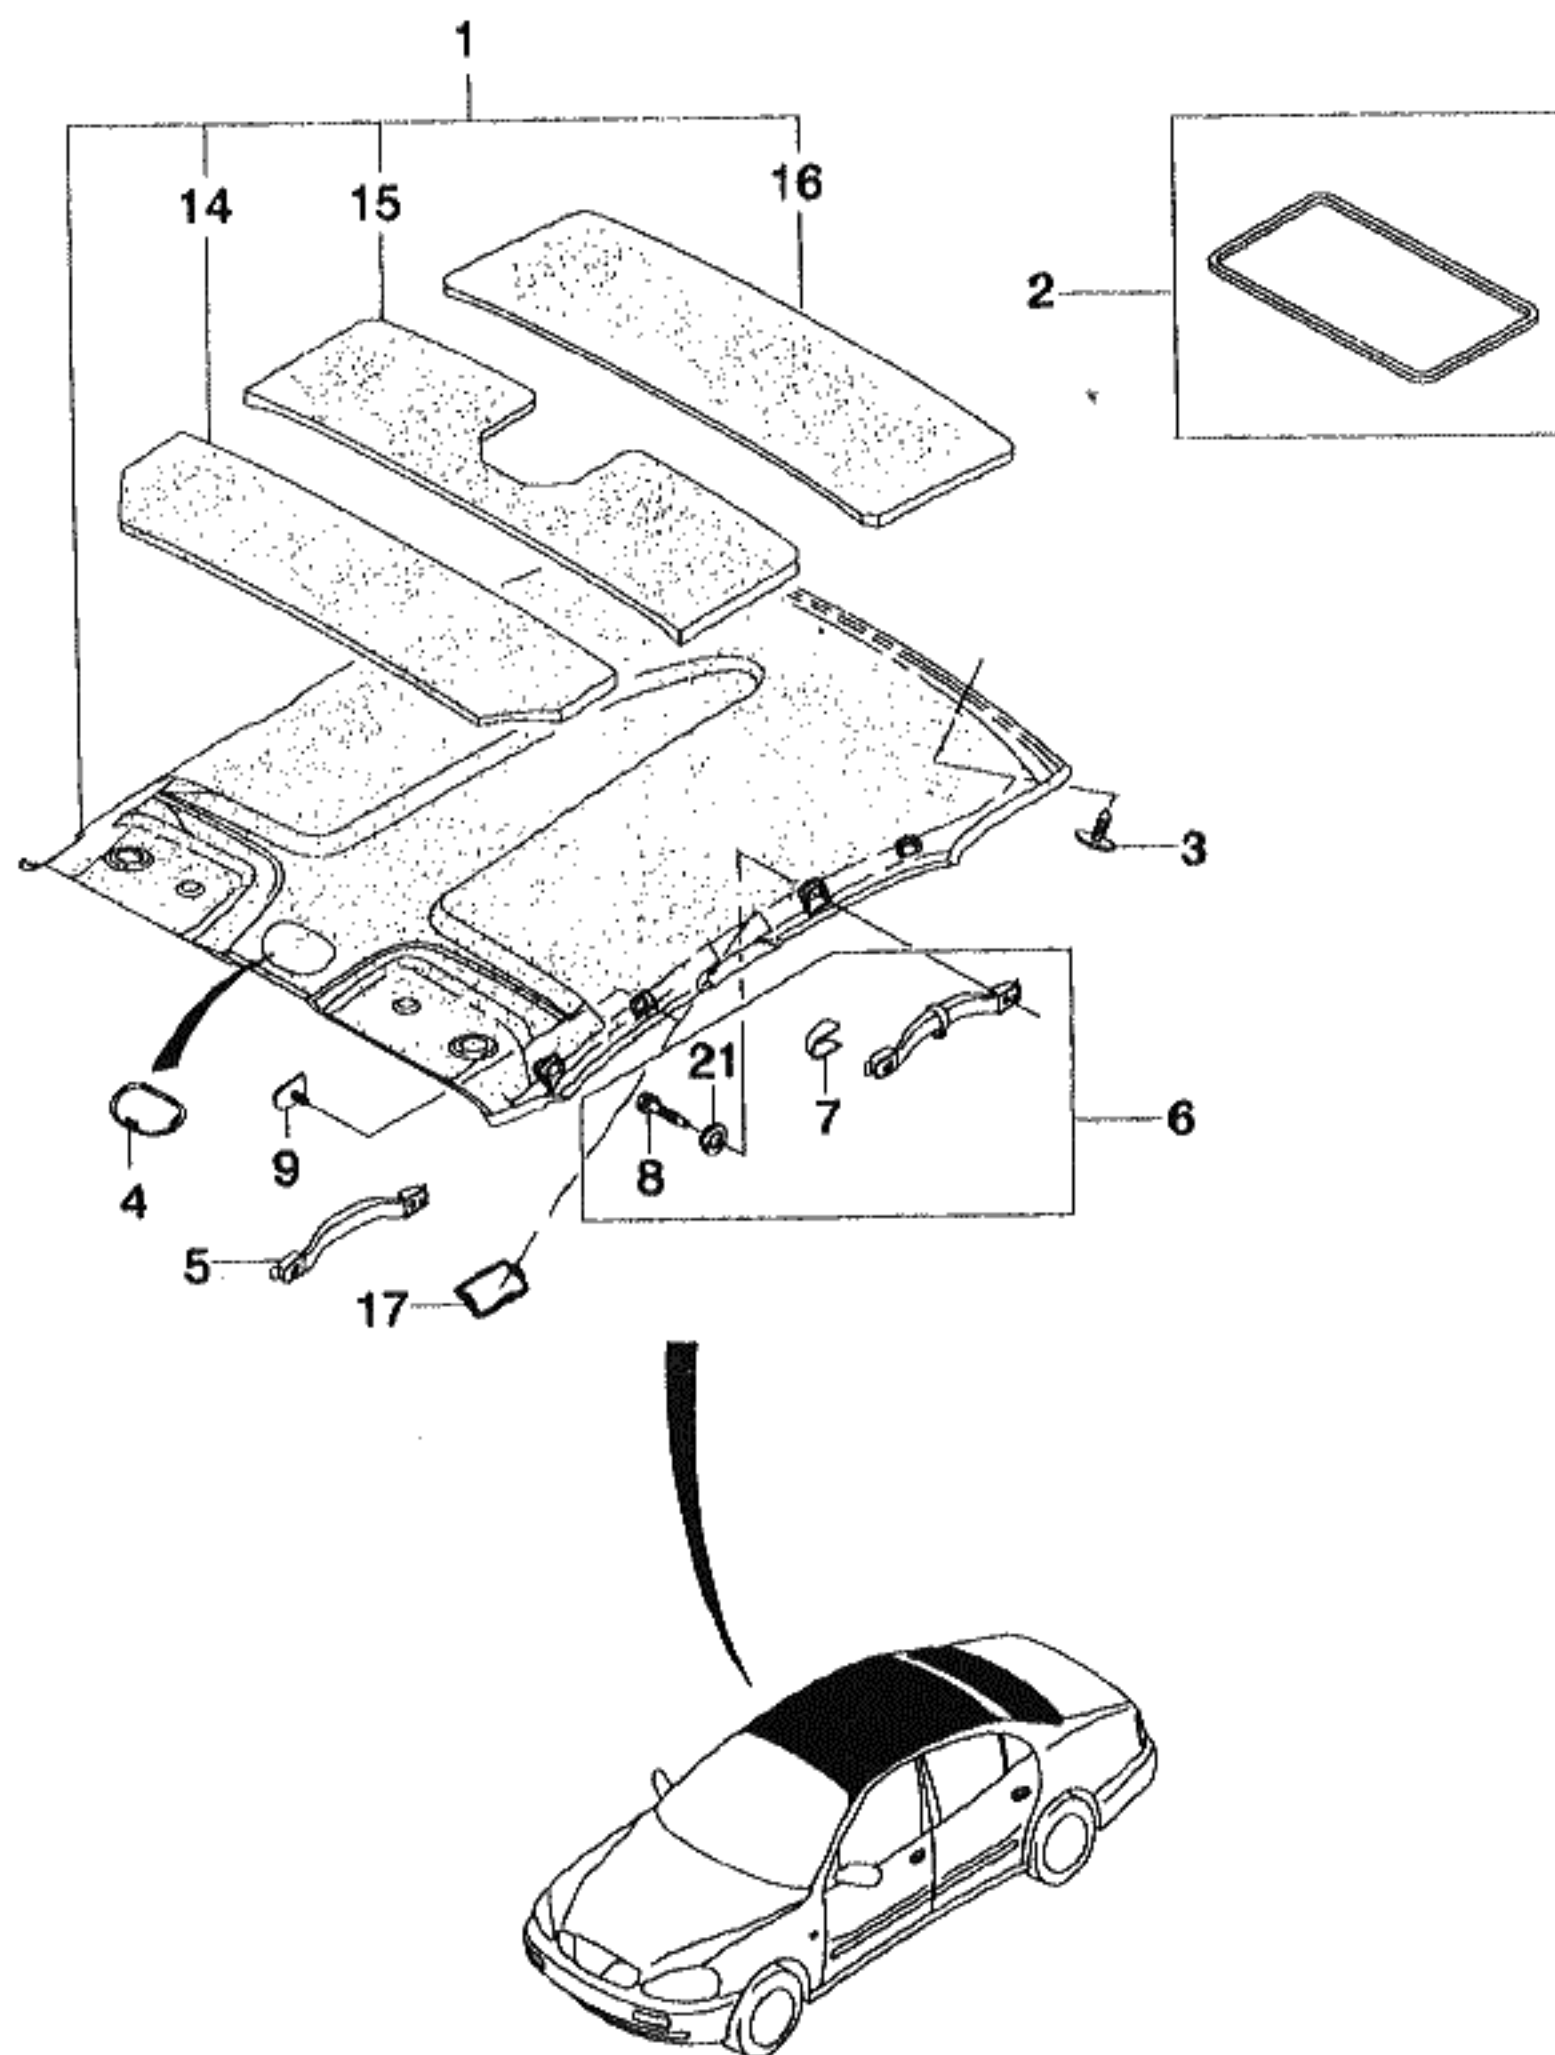


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) HEADLINING A (D) KOPF AUSKLEIDUNG				(F) GARNITURE (S) FORRO DE CABECERA					
	96240581	S	S	-CF6/UIP		1					HB
	96240583	O	O	&UIP-CF6		1					HD
	96240584	O	O	&CF6-UIP		1					HF
	96240585	O	O	&CF6&UIP		1					HG
	[02]	(E) FINISHER-HEADLINING (D) FERTIGGESENK				(F) FINITION CARNITURE (S) COBERTOR					
	96240586	O	O	&CF6		1					
	[03]	(E) CLIP (D) KLEMME				(F) ATTACHE (S) GRAPA					
	09409-07334	S	S			2					
	[04]	(E) HOLDER-ROOM LAMP (D) BEHÄLTER				(F) MONTURE (S) RETNEDOR					
	96235409	O	O	&CF6		1					
	[05]	(E) GRIP A-ASSIST (D) HILFS-GRIFF				(F) POIGNEE-ASSIST (S) ASIDERO-AYUDA					
Y	96244468	S	S			1					
	[06]	(E) GRIP A-ASSIST (D) HILFS-GRIFF				(F) POIGNEE-ASSIST (S) ASIDERO-AYUDA					
Y	96244470	S	S			2					
	[07]	(E) CAP-ASSIST GRIP (D) DECKEL GRIFF				(F) CHAPEAU (S) TAPA-AYUDA DE ASIMIENTO					
	96244401	S	S			6					
	[08]	(E) SCREW-MACHINE (D) SCHRAUBE				(F) BOULON (S) PERNO					
Y	09125-06001	S	S			6					
	[09]	(E) COVER-ASSIST GRIP (D) DECKEL GRIFF				(F) CHAPEAU (S) TAPA-AYUDA DE ASIMIENTO					
Y	96237105	S	S			2					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

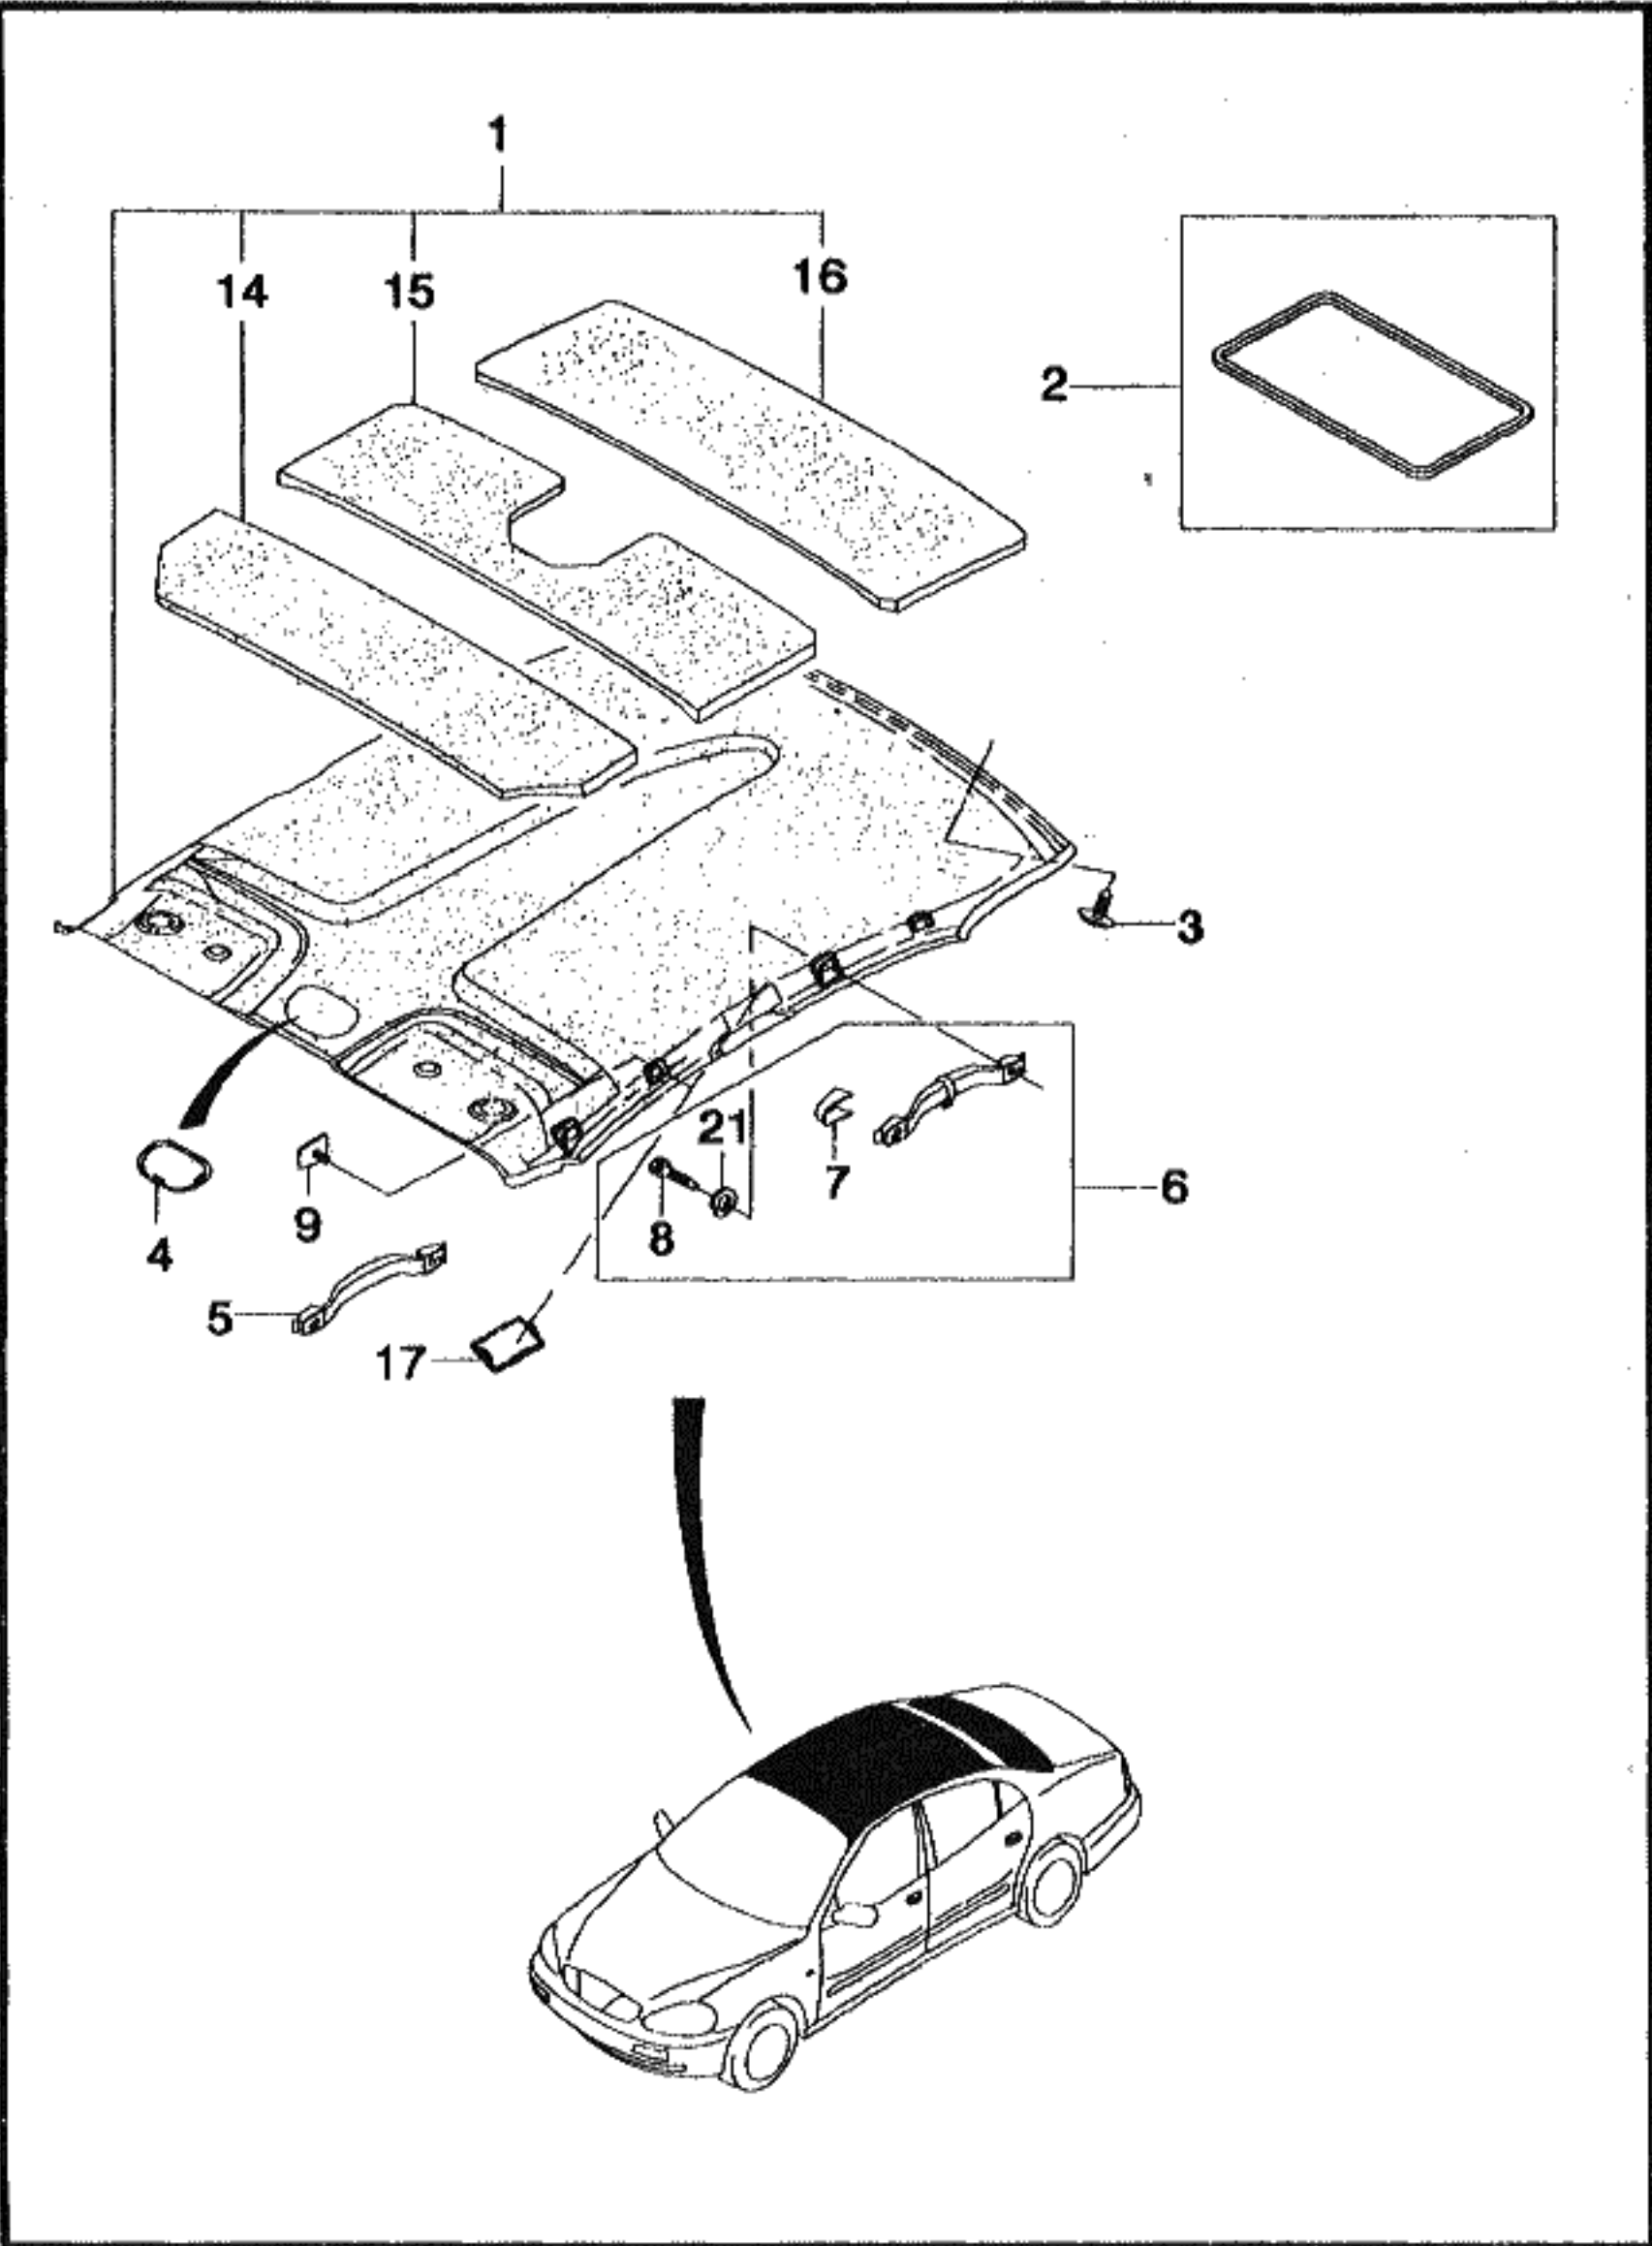


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[14] 96194493	(E)INSULATION-ROOF,FR (D)ISOLIERUNG,DACH,VORNE	S	S		(F)ISOLATION-TOIT,AVANT (S)AISLAMIENTO-TECHO,FRENTE	1				
	[15] 96194494	(E)INSULATION-ROOF,CTR (D)ISOLIERUNG	S	S		(F)ISOLATION (S)AISLAMIENTO	1				
	[16] 96194495	(E)INSULATION-ROOF,RR (D)ISOLIERUNG,DACH,HINTEN	S	S		(F)ISOLATION-TOIT,ARRIERE (S)AISLAMIENTO-TECHO,TRASERO	1				
	[17] 96235410	(E)HOLDER-ULTRASONIC (D)BEHÄLTER	O	O	&UIP	(F)MONTURE (S)RETNEDOR	LH 1				
	[21] 08321-31063	(E)WASHER-SPRING (D)DICHTUNGSRING	S	S		(F)RONDELLE (S)ARANDELA	6				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

7320 SHELF BACK PANEL

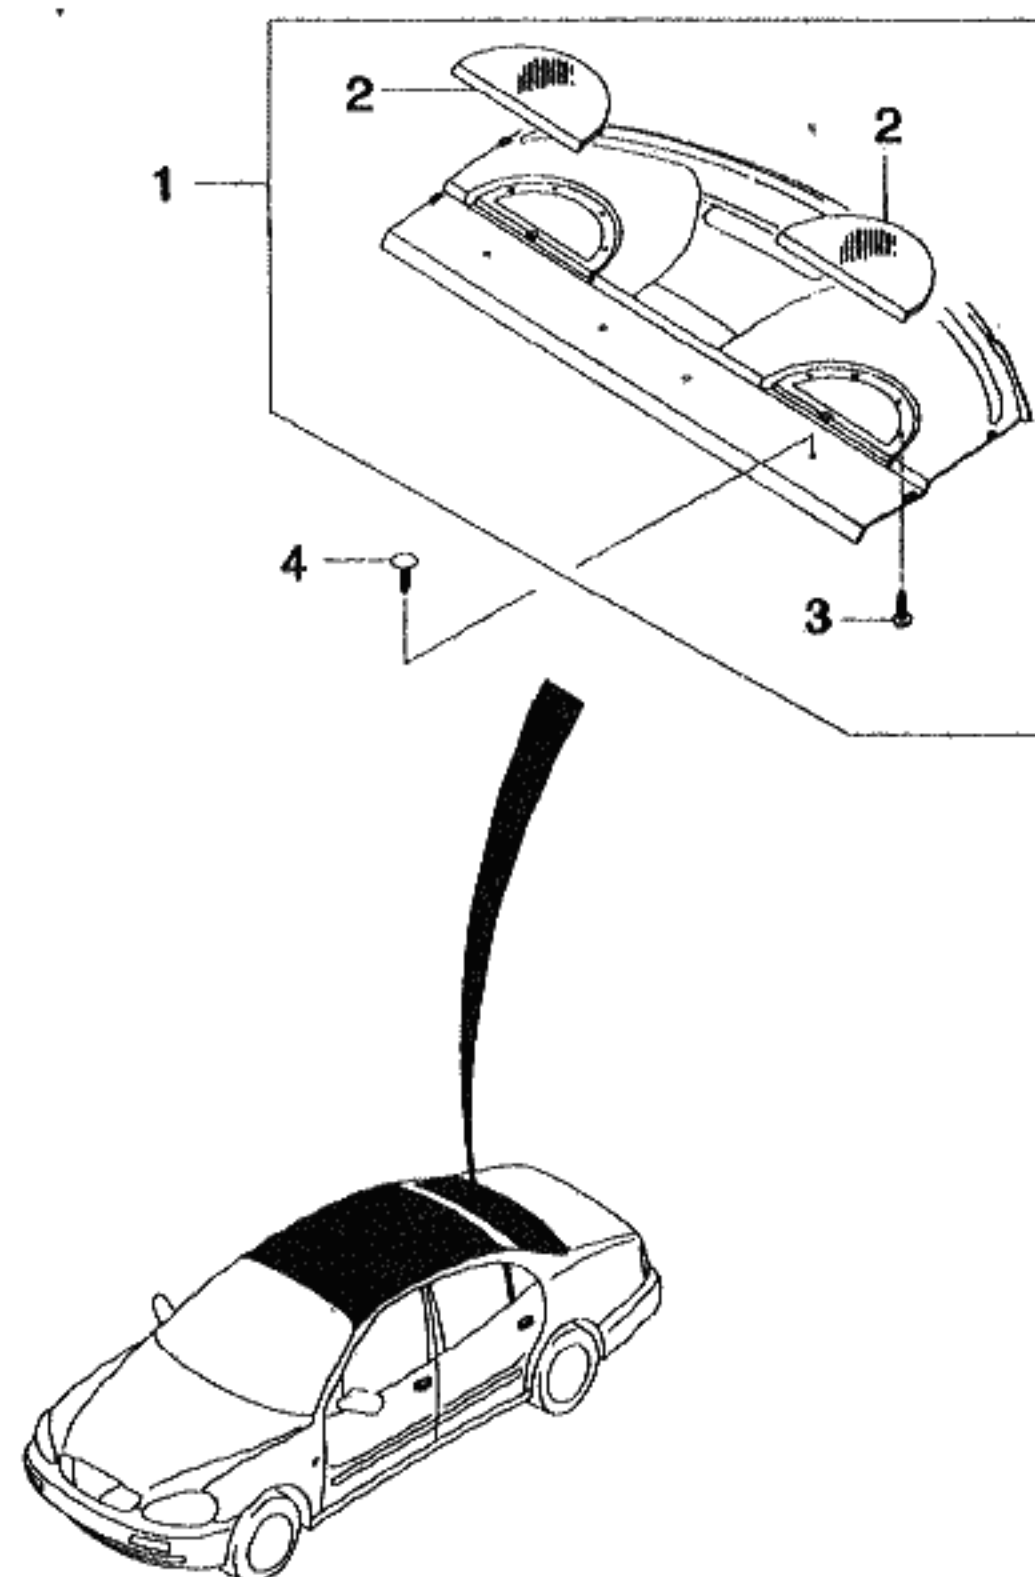

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SHELF A-BACK PANEL,UPPER (D)REGAL,HINTERE VERKLEIDUNG				(F)ETAGERE-PANNEAU ARRIERE (S)ESTANTE-PANEL TRASERO					
	96240399	.	S	S	&82I-TA0/T93		1				SD
	96240395	.	A	A	&82I&T93		1				SB
	96240397	.	A	A	&82I&TA0		1				SC
	96240393	.	A	A	&82I&TA0&T93		1				SA
	[02]	(E)GRILLE-SPEAKER (D)GITTER,LAUTSPRECHER				(F)GRILLE-HAUT-PARLEUR (S)REJA-ALTOPARLANTE					
	96240402	.	S	S	&82I		LH 1				
	96240404	.	S	S	&82I		RH 1				
	[03]	(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	03160-42135	.	S	S			10				
	[04]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					
	09409-07325	.	S	S	&82I		3				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

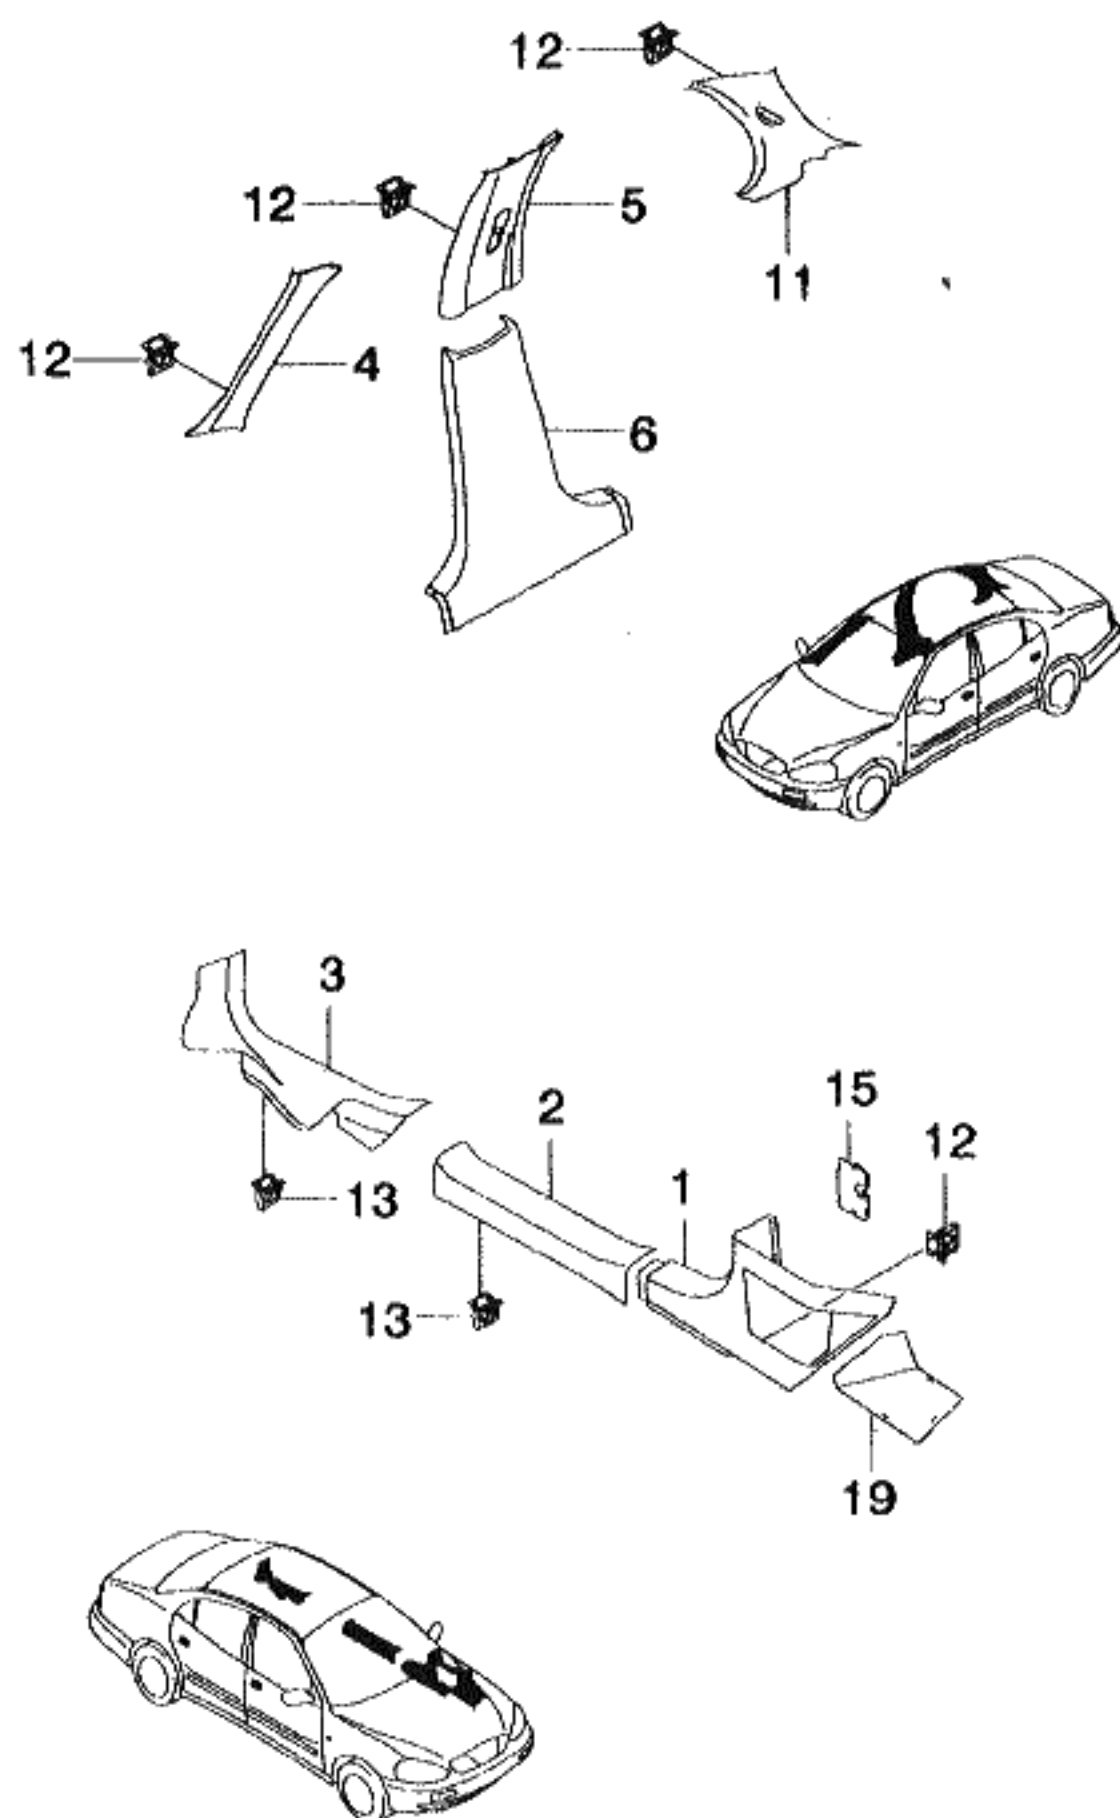

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	[01]	(E)TRIM A-SHROUD,SIDE (D)VERKLEIDUNG,MANTEL SEITE				(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA					
	96240457		S	S	&82i		LH 1				
	96240459		S	S	&82i		RH 1				
	[02]	(E)COVER-ROCKER PANEL,FR (D)DECKEL SCHWINGTAFEL,VORNE				(F)CARTER (S)CUBIERTA					
	96240465		S	S	&82i		LH 1				
	96240467		S	S	&82i		RH 1				
	[03]	(E)COVER-ROCKER PANEL,RR (D)DECKEL SCHWINGTAFEL				(F)CARTER (S)CUBIERTA					
	96240469		S	S	&82i		LH 1				
	96240471		S	S	&82i		RH 1				
	[04]	(E)TRIM A-A PILLAR (D)VERKLEIDUNG,A SÄULE				(F)GARNITURE-A PILIER (S)ADORNO-PILAR					
	96240472		S	S			LH 1				
	96240474		S	S			RH 1				
	[05]	(E)TRIM A-B PILLAR,UPPER (D)VERKLEIDUNG,B SÄULE,OBEN				(F)GARNITURE-B PILIER,HAUT (S)ADORNO-PILAR B,ALTO					
	96240476		S	S			LH 1				
	96240478		S	S			RH 1				
	[06]	(E)TRIM A-B PILLAR,LOWER (D)VERKLEIDUNG,B SÄULE				(F)GARNITURE-B PILIER (S)ADORNO-PILAR B					
	96240482		S	S	&82i		LH 1				
	96240486		S	S	&82i		RH 1				
	[11]	(E)TRIM A-C PILLAR (D)VERKLEIDUNG,C SÄULE				(F)GARNITURE-C PILIER (S)ADORNO-C PILAR					
	96240489		S	S			LH 1				
	96240491		S	S			RH 1				
	[12]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA					



LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A
A = AUTOMATIC T/A
= COMMON


CDX = 2.0 DOHC

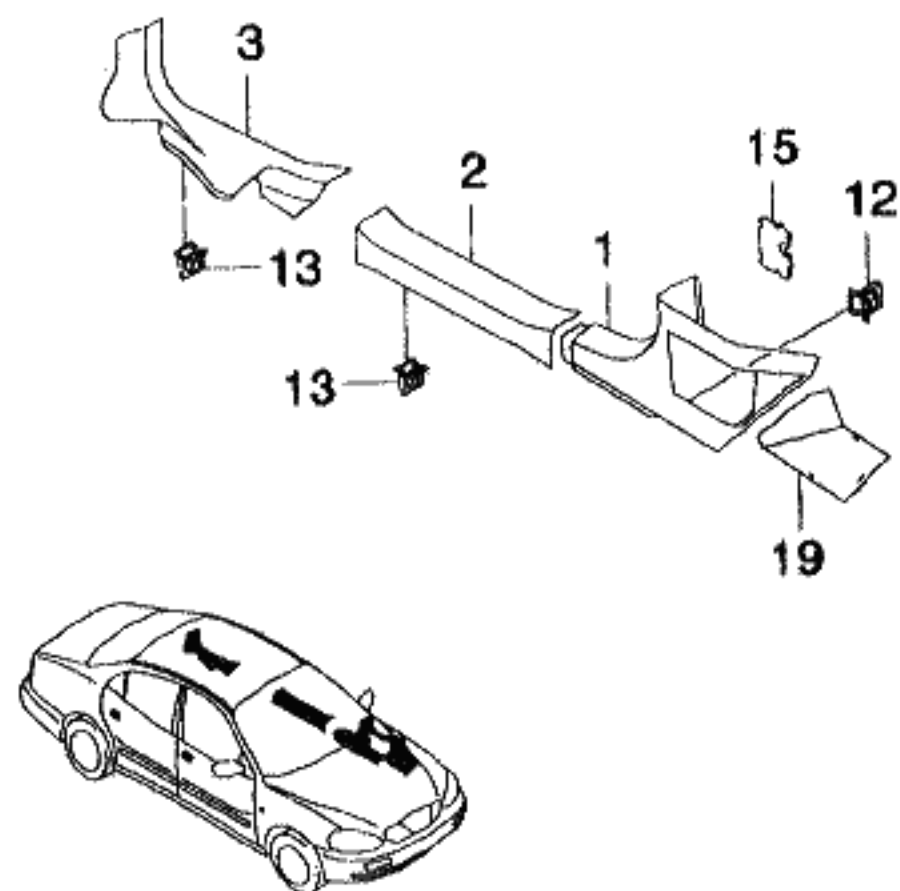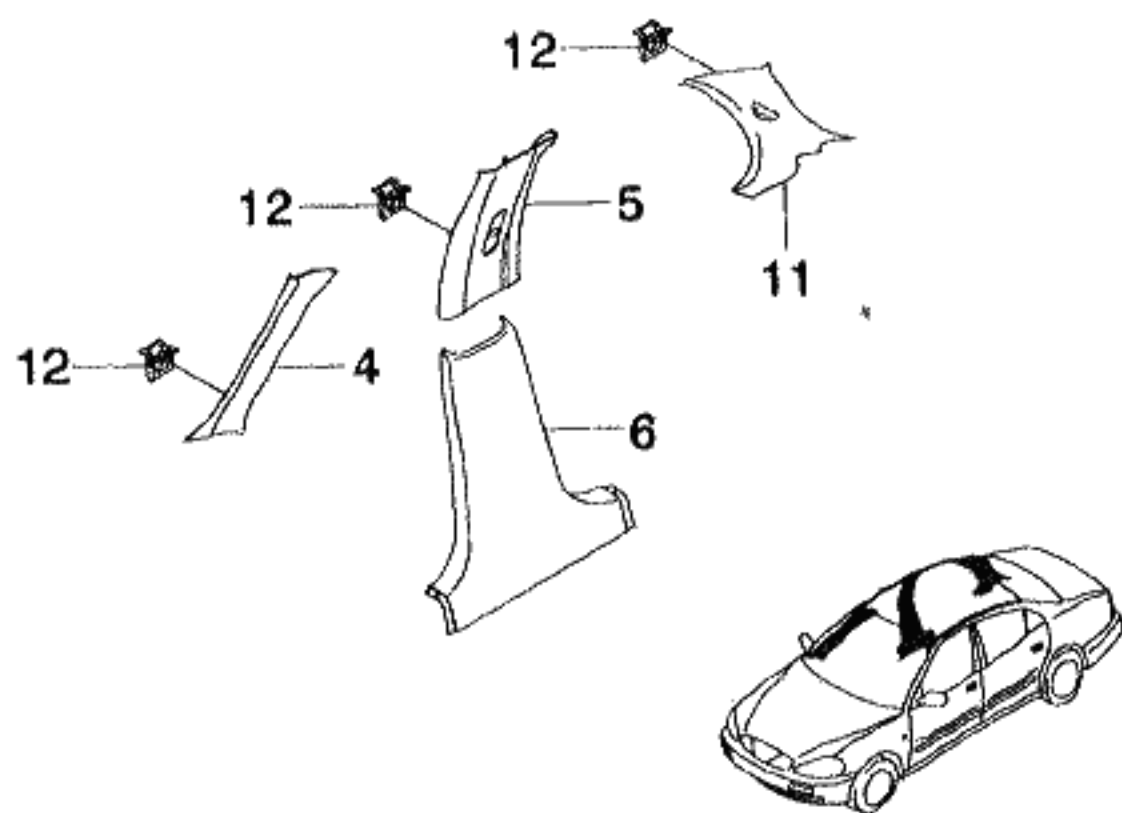


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	09409-08302	.	S	S	(E)CAP-A PILLAR,LWR (D)DECKEL		4			(F)CHAPEAU (S)TAPA		
	[15]											
	96246371	.	S	S			2					
	[19]											
	96255910	.	S	S	(E)COVER A-FUSE BOX (D)DECKEL		LH 1			(F)CARTER (S)CUBIERTA		
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

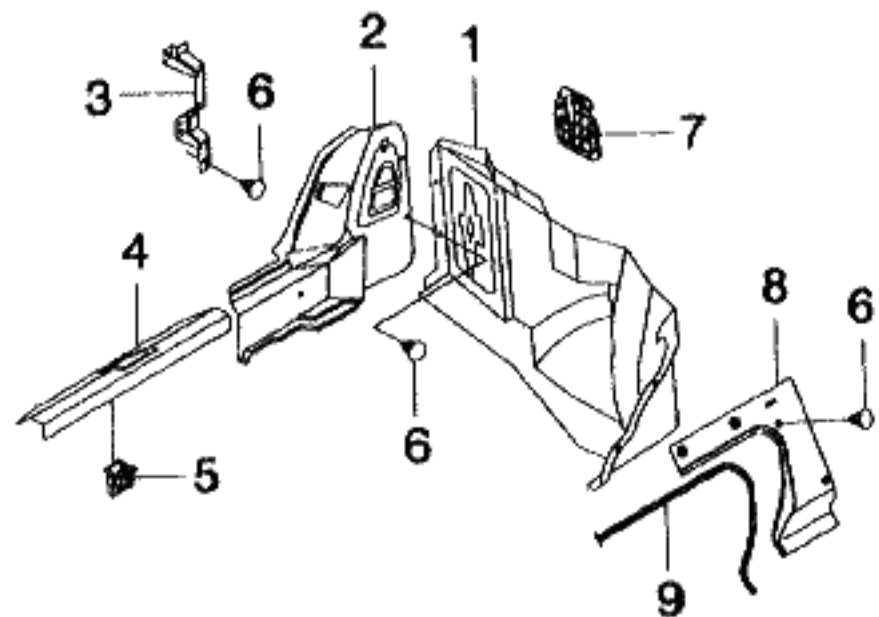

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)TRIM A-RR WHEELHOUSE (D)VERKLEIDUNG,RADGEHÄUSE				(F)GARNITURE (S)ADORNO-ENGRANAJE						
	96241793	S	S			LH	1					
	96241794	S	S	-FAK		RH	1					
	96241798	O	O	&FAK		RH	1					
	96254828	S	S	&AM9&V86		RH	1					
	[02]	(E)BRACKET-BACK PNL LWR TRIM (D)VERKLEIDUNG,RADGEHÄUSE				(F)GARNITURE (S)ADORNO-ENGRANAJE						
	96241797	S	S				1					
	[03]	(E)BRACKET-BACK PNL LWR TRIM (D)TRÄGER				(F)SUPPORT (S)SOPORTE						
	96217755	S	S			LH	1					
	96217756	S	S			RH	1					
	[04]	(E)COVER A-BACK PANEL,LOWER (D)DECKEL				(F)COUVERTURE (S)CUBIERTA						
	96241801	S	S				1					
	[05]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09409-22301	S	S				8					
	[06]	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA						
	09409-07326	S	S				A					
	[07]	(E)COVER A-BRACE WHEEL HOUSE (D)DECKEL				(F)COUVERTURE (S)CUBIERTA						
	96236267	S	S				1					
	96236268	S	S				1					
	[08]	(E)TRIM-BRACE WHEELHOUSE (D)VERKLEIDUNG				(F)GARNITURE (S)ADORNO-VOLANTE TRASERO						
	96241799	S	S			LH	1					
	96241800	S	S			RH	1					
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

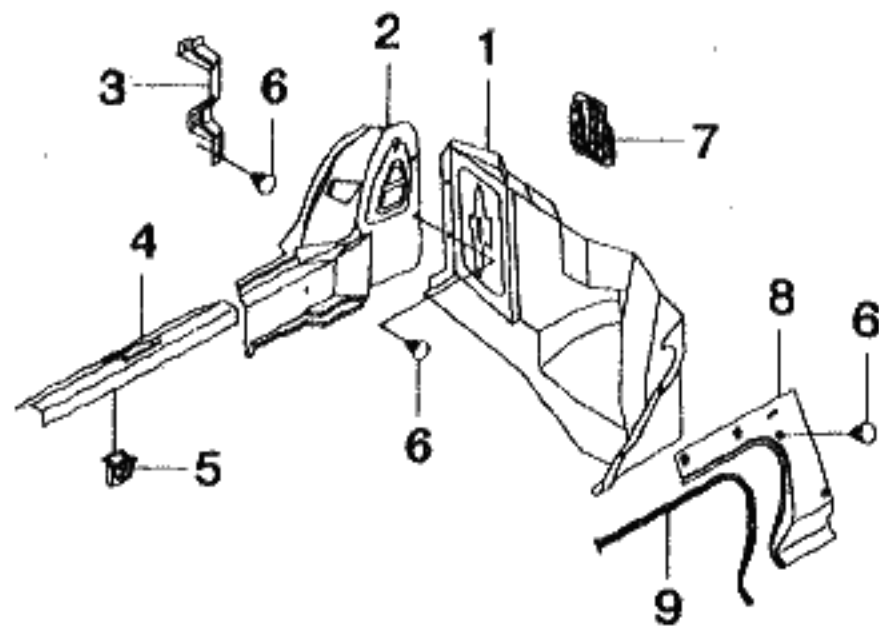

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[09] 96217758	(E)PROTECTOR A-EDGE (D)SCHUTZTEIL .	S	S			(F)PROTECTION (S)PROTECTOR 1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

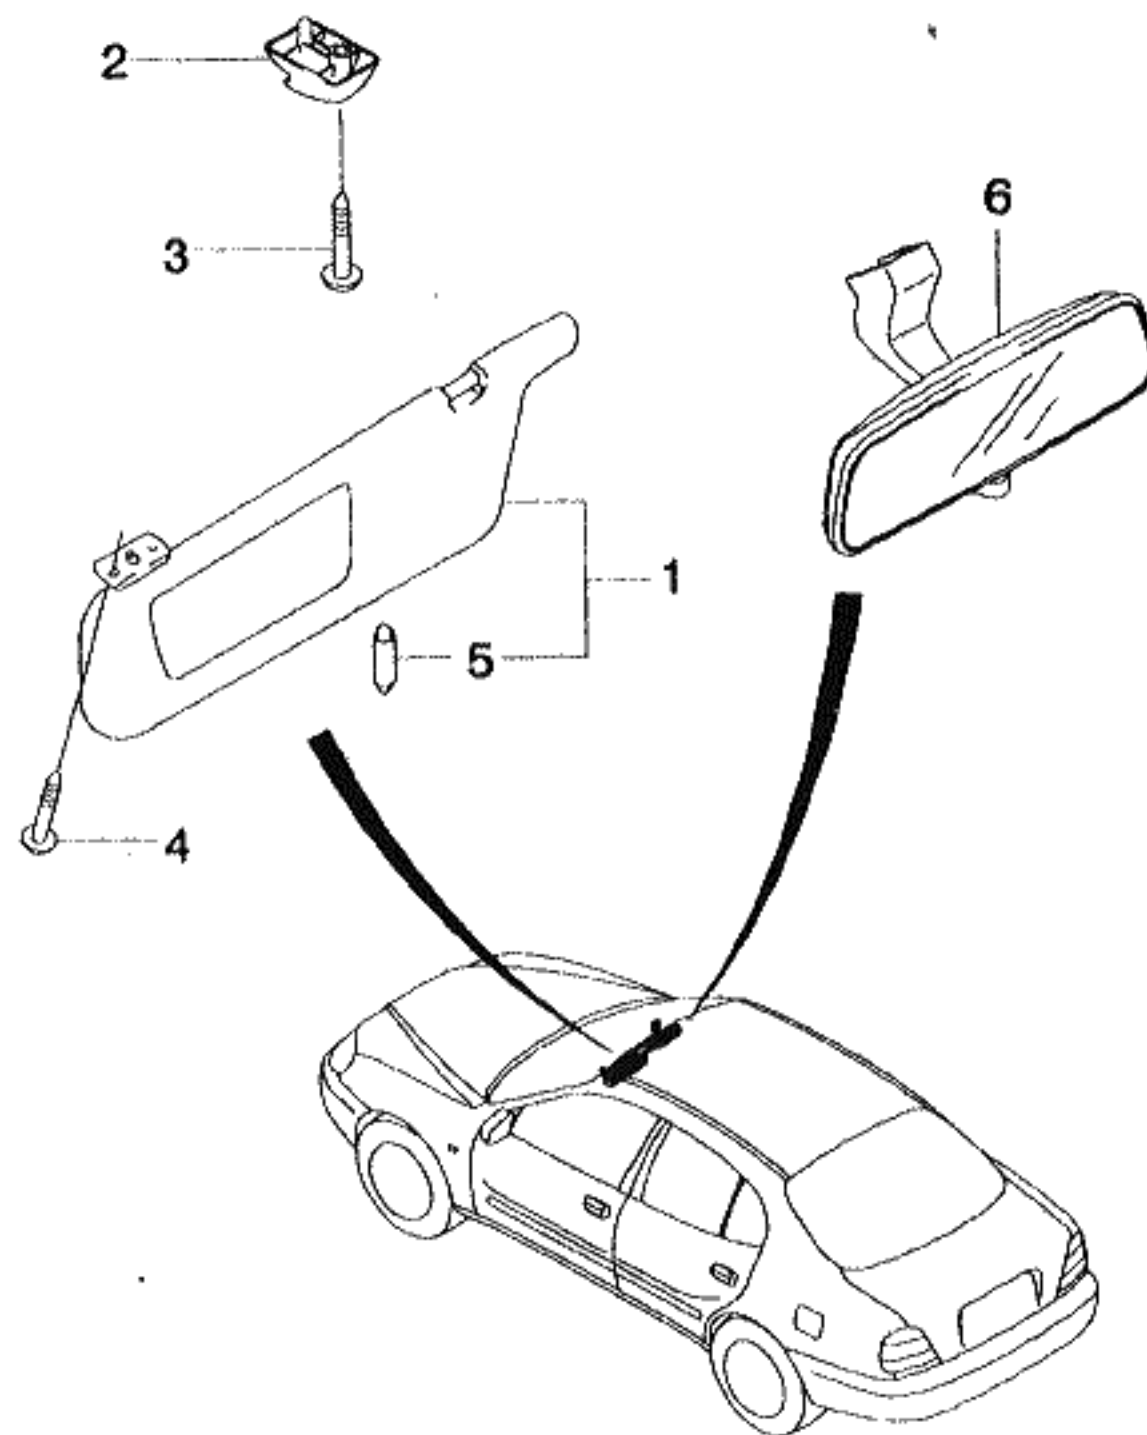

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SUNVISOR A (D)SONNENBLLENDE&INNENSPIEGE				(F)PARE-SOLEIL (S)PARASOL					
	96245613	.	S	.	-AJ3/CF6	LH	1				JA
	96245614	.	S	S	-AJ7/CF6	RH	1				JB
O	96245617	.	O	S	&AJ3/AJ7-CF6/VB4	LH	1	970619			KA
O	96245618	.	O	O	&AJ7/AJ3-CF6/VB4	RH	1	970619			KB
O	96245625	.	O	O	&AJ3/AJ7&CF6-VB4	LH	1	970619			MA
O	96245626	.	O	O	&AJ7/AJ3&CF6-VB4	RH	1	970619			ME
	96245633	.	A	A	&AJ3&VB4-CF6	LH	1				PA
	96245634	.	A	A	&AJ7&VB4-CF6	RH	1				PB
	96245641	.	A	A	&AJ3&CF6&VB4	LH	1				RA
	96245642	.	A	A	&AJ7&CF6&VB4	RH	1				RB
	96245621	.	O	.	&CF6-AJ3	LH	1				LA
	[02]	(E)BRACKET-SUNSHADE (D)TRÄGER, SONNENBLLENDE						(F)SUPPORT-PARE-SOLEIL (S)SOPORTE-PARASOL			
	96194610	.	S	S			2				
	[03]	(E)SCREW-TAPPING (D)SCHRAUBE						(F)VIS (S)TORNILLO			
	03130-35258	.	S	S			2				
	[04]	(E)SCREW-CR MACHINE (D)SCHRAUBE						(F)VIS (S)TORNILLO			
	02126-06168	.	S	S			4				
	[05]	(E)BULB (D)BIRNE						(F)AMPOULE (S)BOMBILLA			
	09471-12024	.	S	S			2			13.5V,3.5W	
	[06]	(E)MIR A-INSIDE, TILTABLE (D)SPIEGEL, VERSTELLBAR						(F)RETROVISEUR (S)ESPEJO-INCLINABLE			
	96218436	.	S	S			1				

LEVEL

T/A(TRANSAXLE)


S X = 2.0 SOHC

M = MANUAL T/A

CDX = 2.0 DOHC


A = AUTOMATIC T/A

. = COMMON

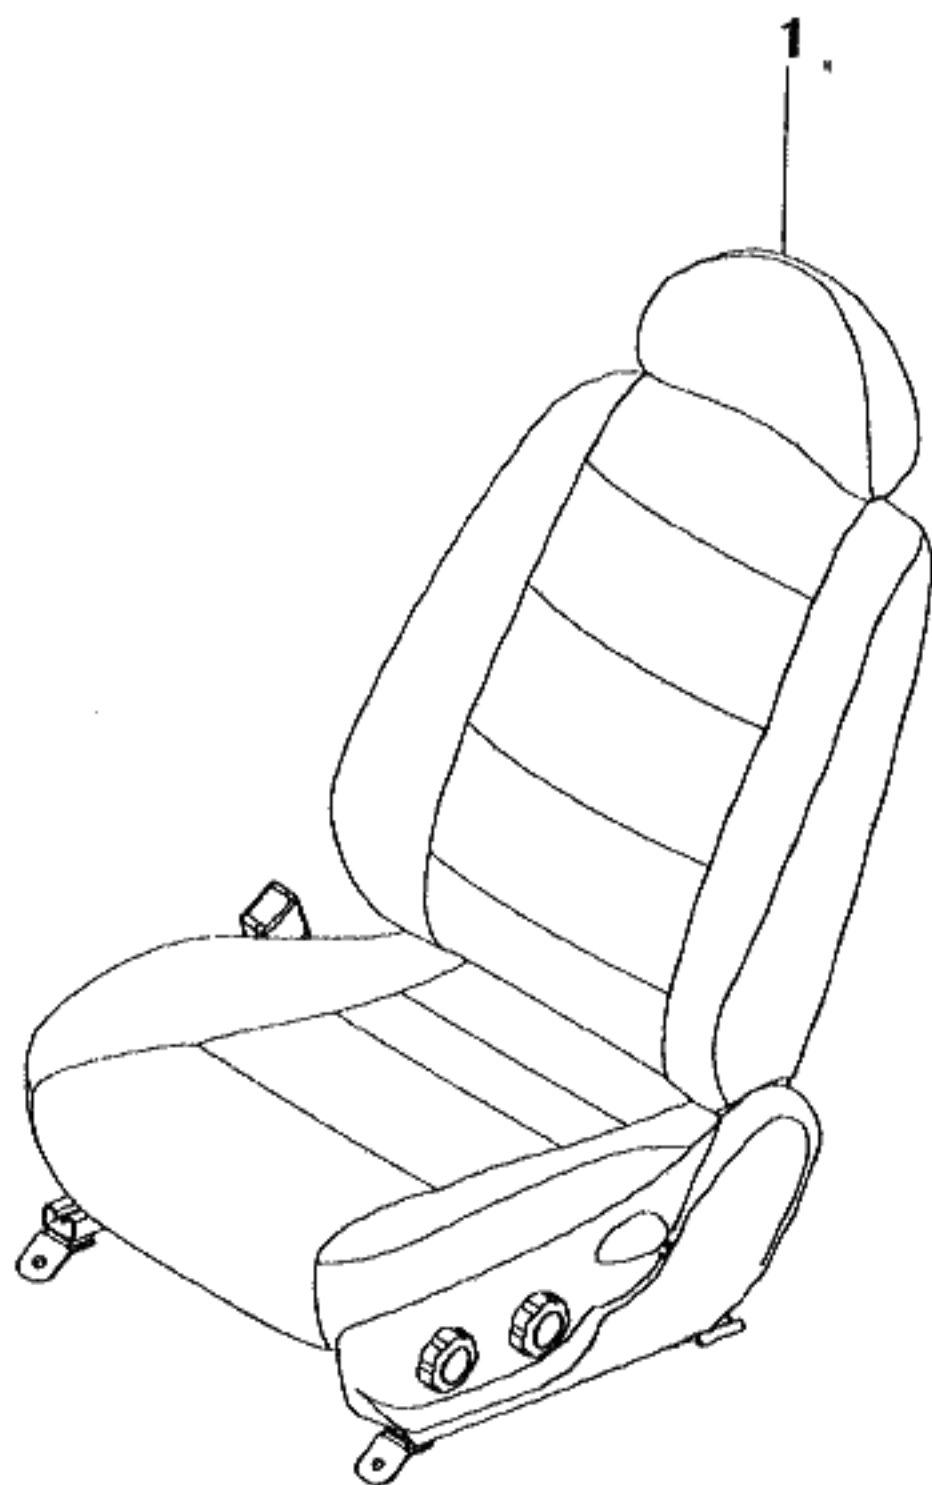


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	[01]	(E)SEAT A-FR (D)SITZ,VORDER				(F)SIEGE-AVANT (S)ASIEN TO-FRENTE						
	96252983	.	S	.	&82I&W6W		LH 1				VE	
	96252984	.	S	.	&82I&W6W		RH 1				VF	
	96240311	.	.	S	&82I&W6C		LH 1				DD	
	96241858	.	.	S	&82I&W6C		RH 1				DG	
	96240383	.	O	O	&82I&W6R		LH 1				LQ	
	96241864	.	O	O	&82I&W6R		RH 1				LV	
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


7520 FRONT SEAT PARTIAL

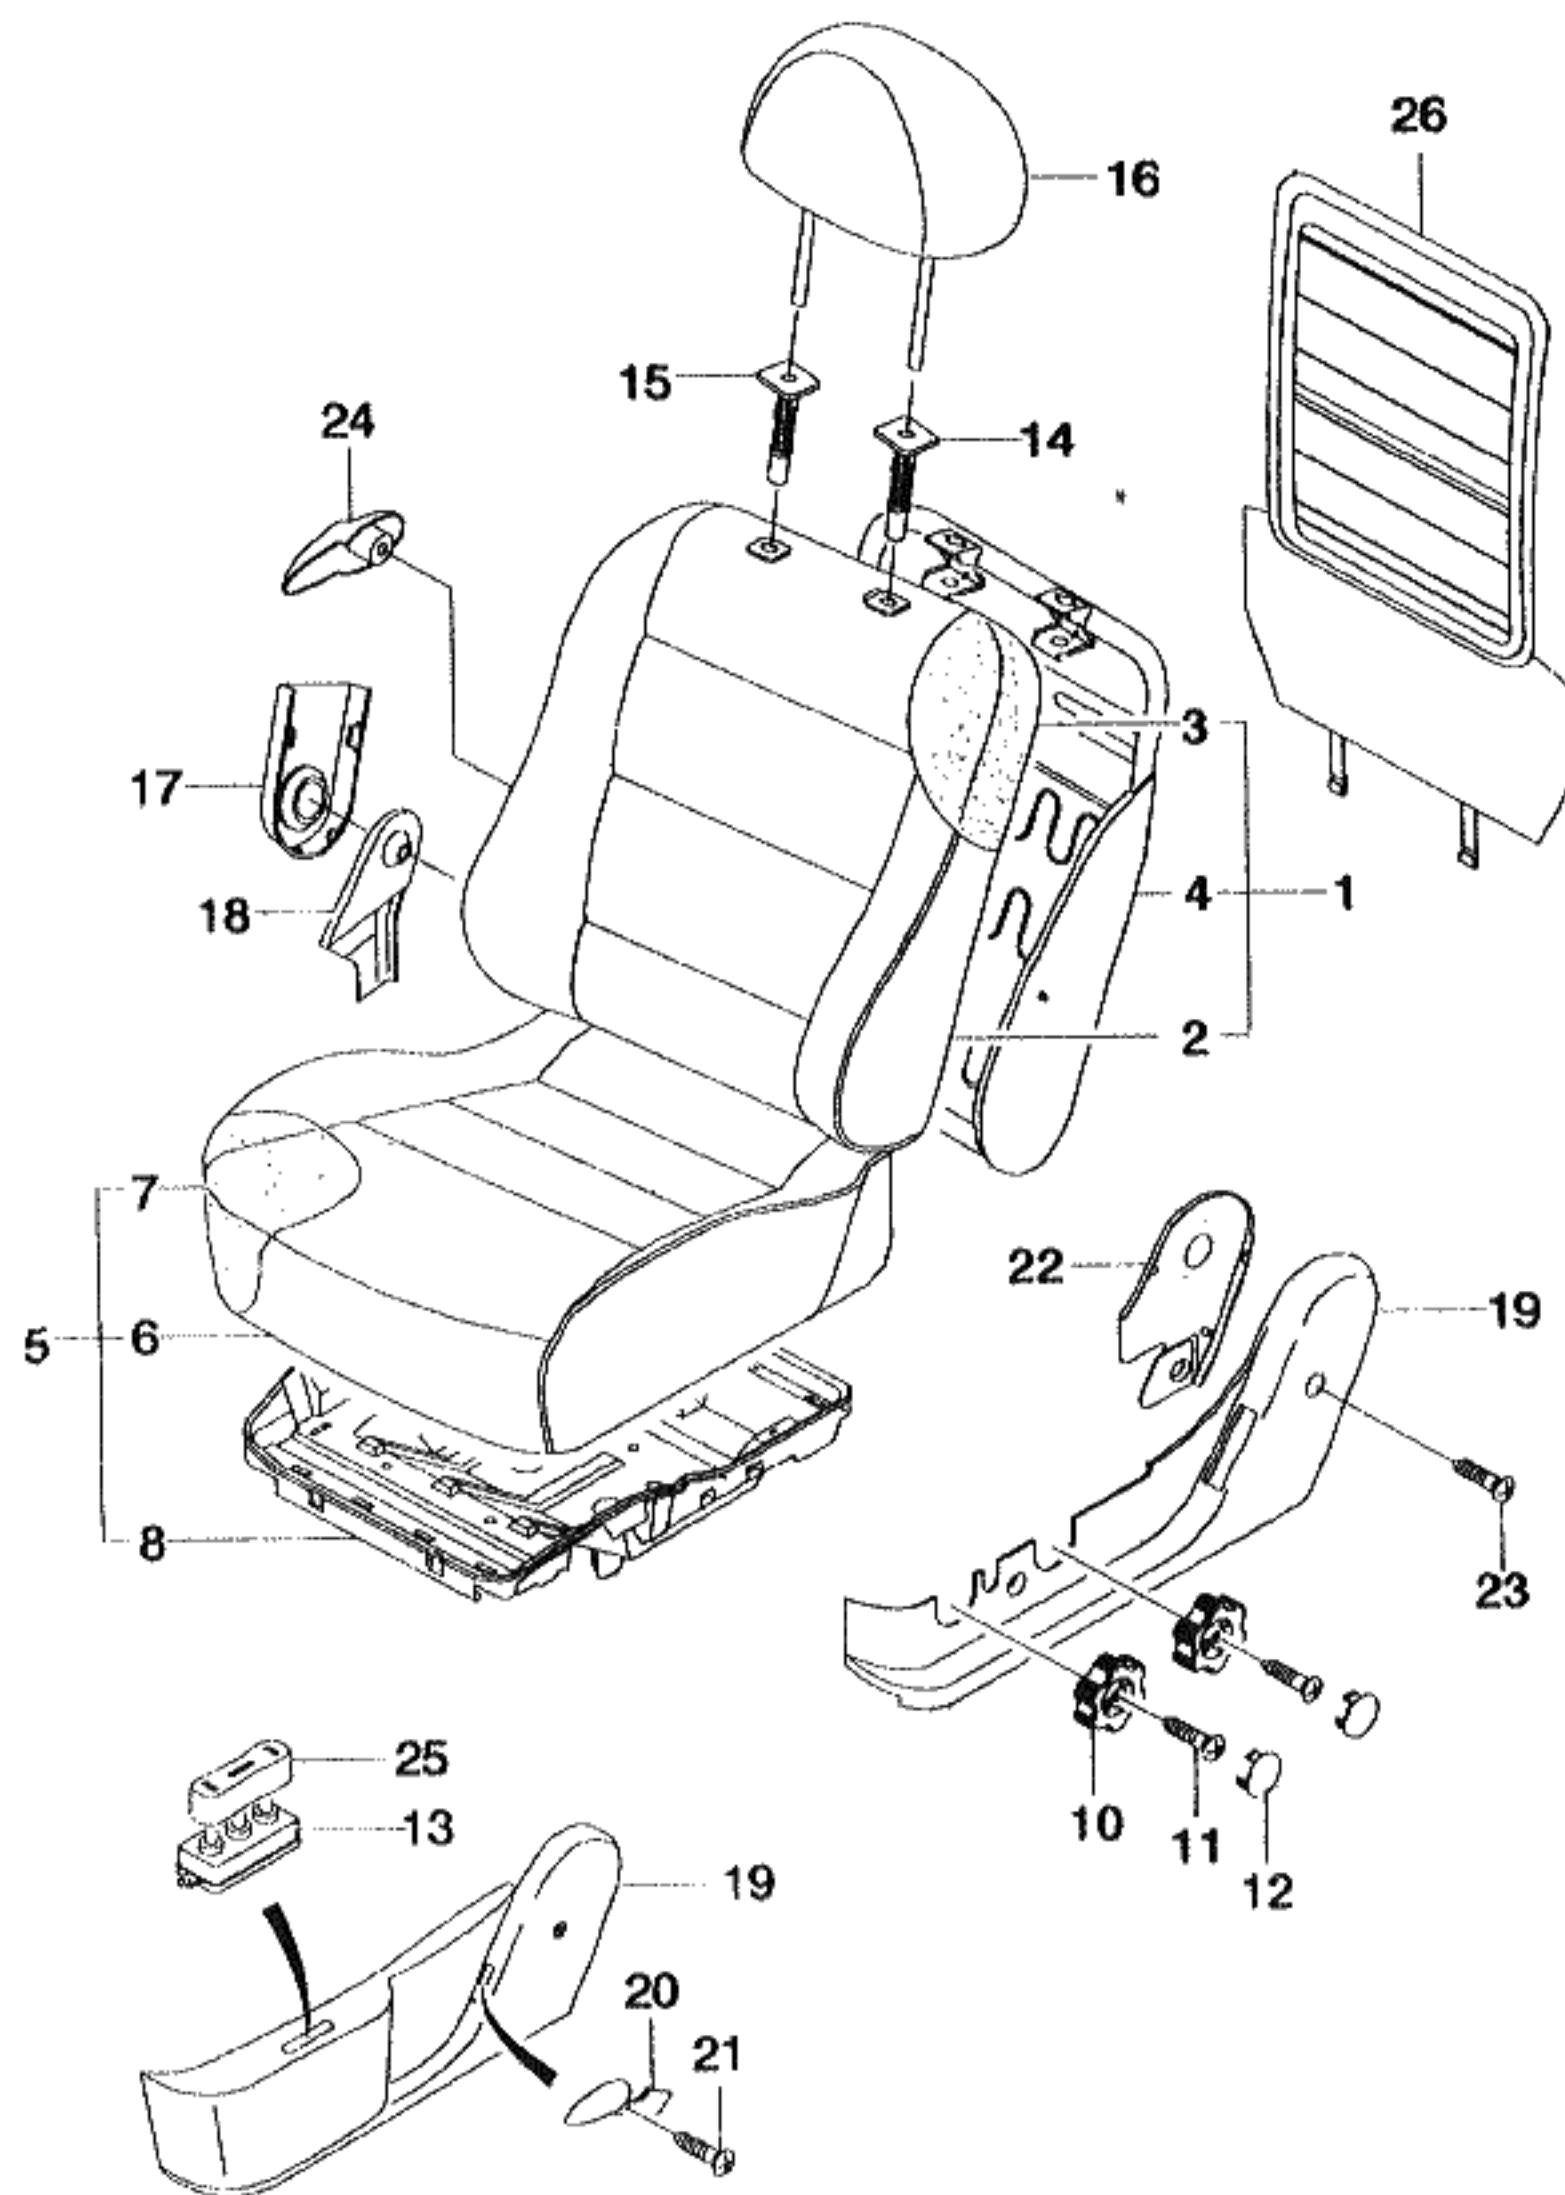


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
[01]				(E) SEAT A-FR BACK (D) SITZ, VORDER, HINTEN					(F) SIEGE-AVANT, ARRIERE (S) ASIENTO-FRENTE, RESPALDO	
96246007			S	&821&W6W		LH 1				
96245994			S	&821&W6W		RH 1				
96241758			S	&821&W6C		LH 1				
96241766			S	&821&W6C		RH 1				
96246017			O	&821&W6R		LH 1				
96245998			O	&821&W6R		RH 1				
[02]				(E) COVERING A-FR BACK (D) DECKEL					(F) COUVERTURE (S) CUBIERTA	
96254740			S	&821&W6W		LH 1				
96254742			S	&821&W6W		RH 1				
96254744			S	&821&W6C		LH 1				
96254746			S	&821&W6C		RH 1				
96254752			O	&821&W6R		LH 1				
96254754			O	&821&W6R		RH 1				
[03]				(E) PAD A-FR SEAT BACK (D) UNTERLAG					(F) PATIN (S) COJIN	
96233117			S	S		LH 1				
96233118			S	S		RH 1				
[04]				(E) FRAME A-FR SEAT BACK (D) RAHMEN					(F) CADRE (S) ARMADURA	
96233119			S	S		LH 1				
96233120			S	S		RH 1				
[05]				(E) SEAT A-FR CUSHION (D) SITZ, VORDER, POLSTER					(F) SIEGE-AVANT, COUSSIN (S) ASIENTO-FRENTE, COJIN	
96253489			S	&821&W6W		LH 1				
96253492			S	&821&W6W		RH 1				
96240424			S	&821&W6C		LH 1				
LEVEL					T/A (TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

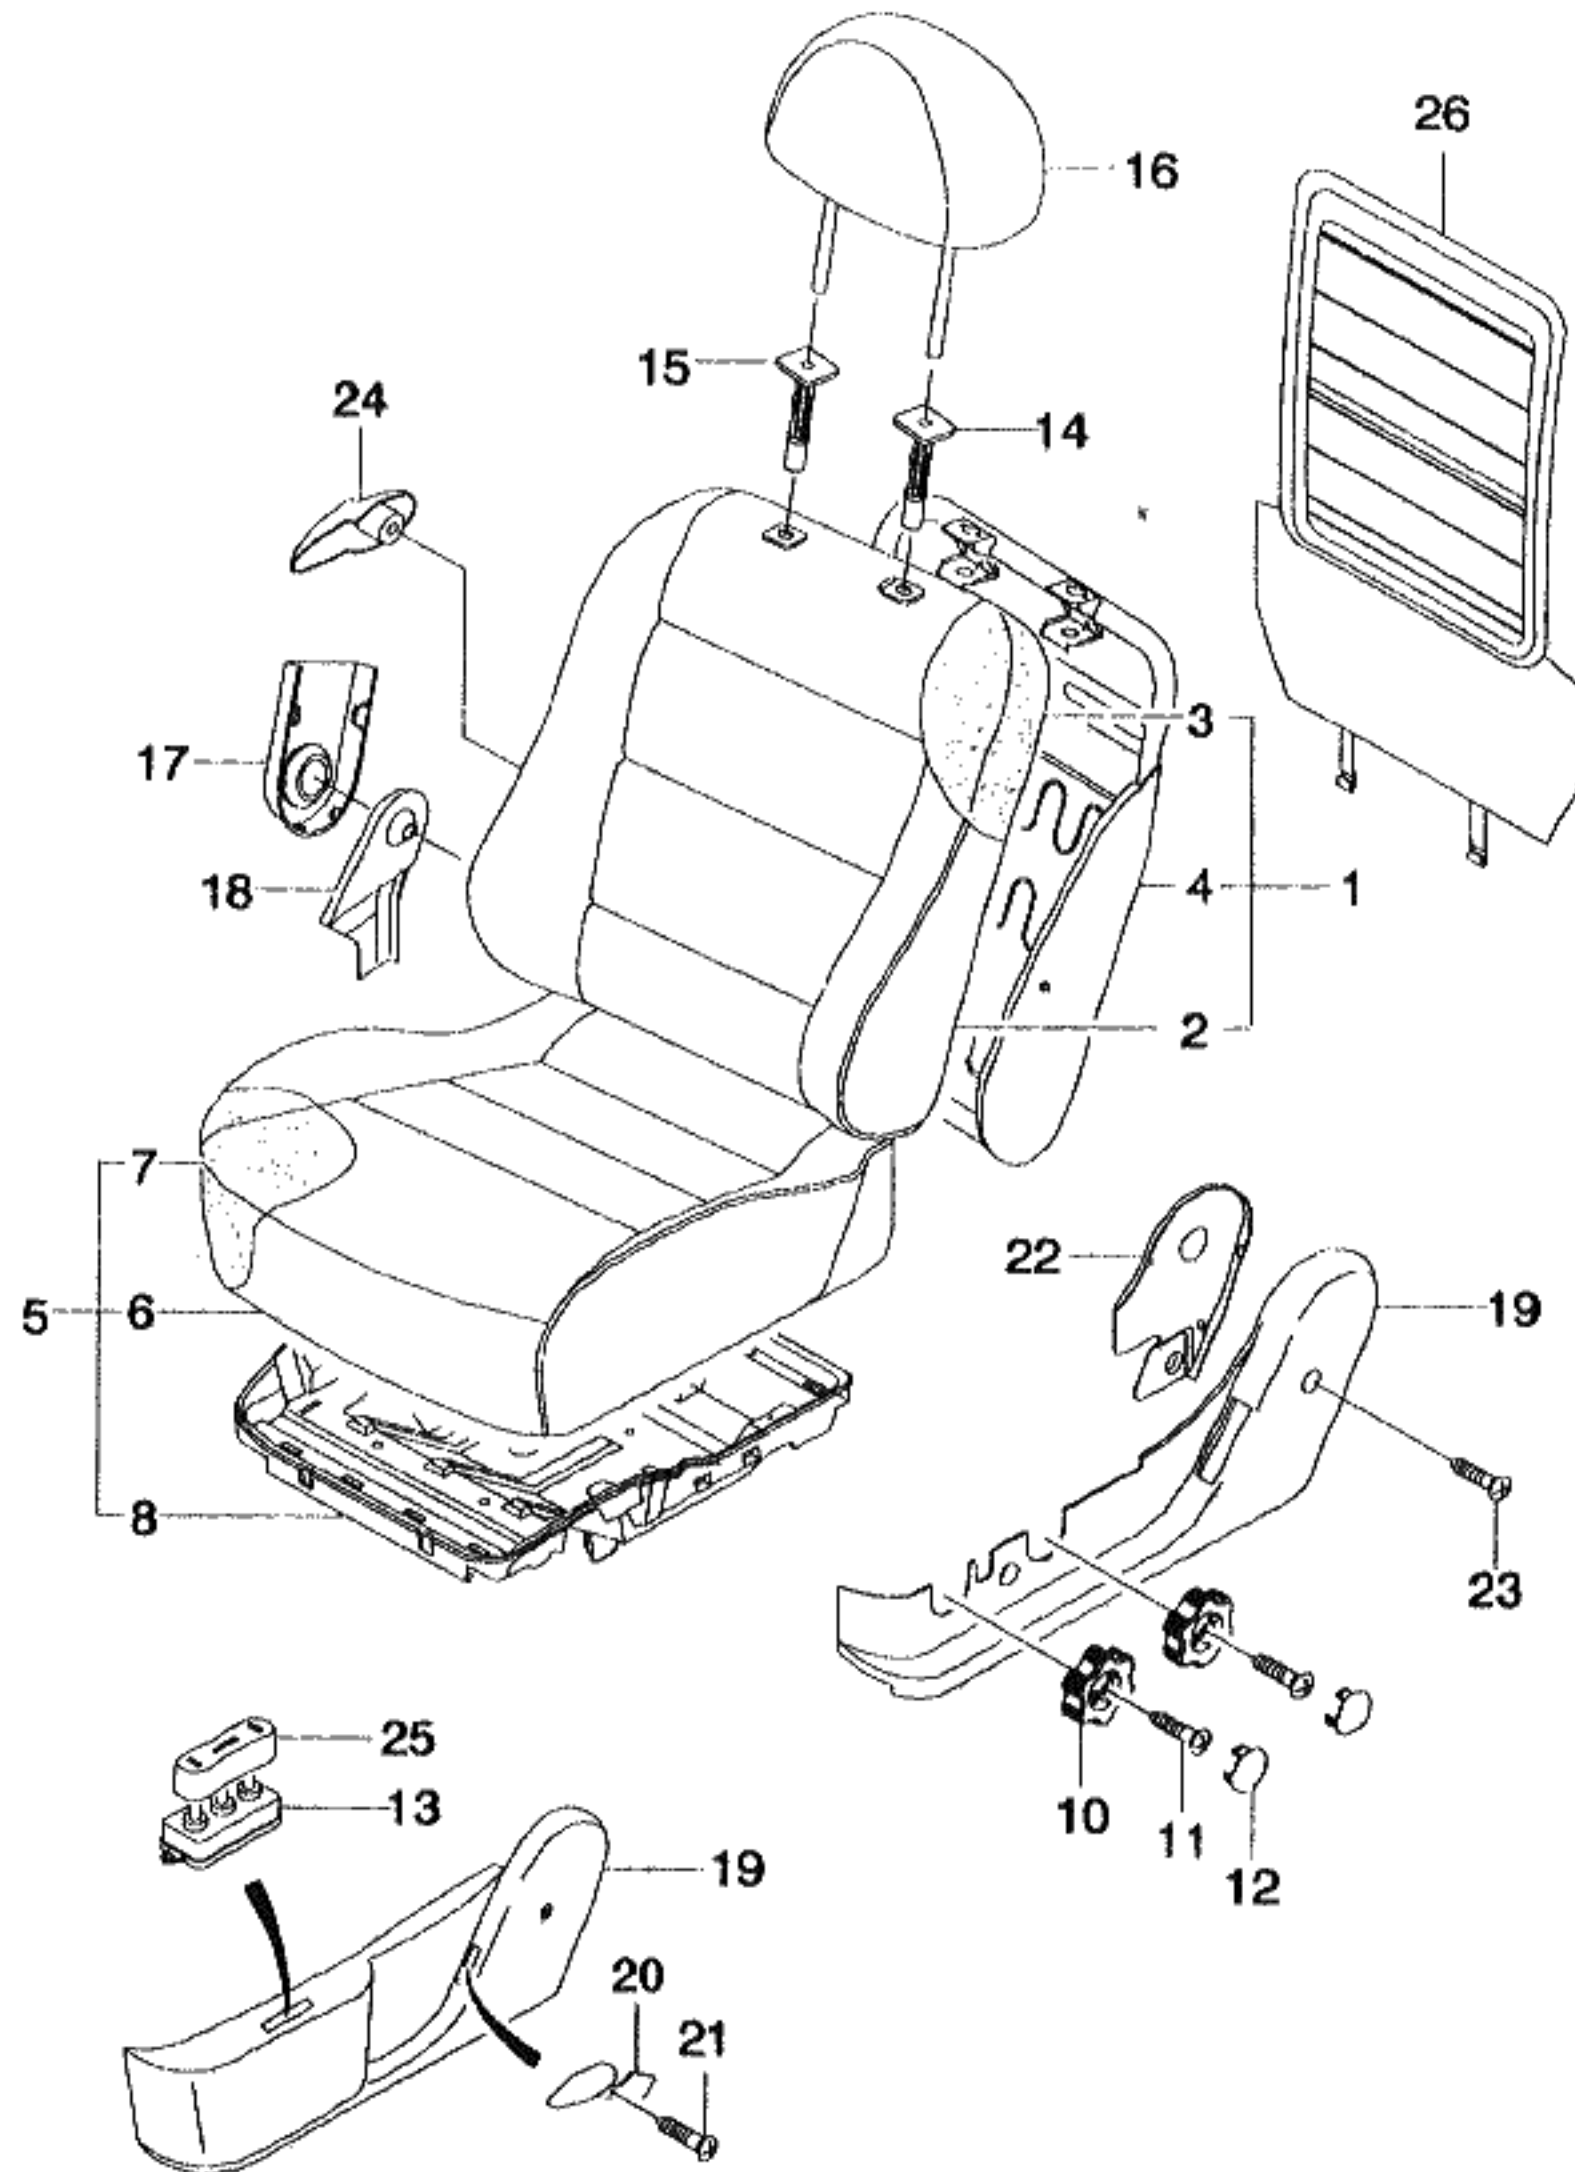

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	96240428	.	.	S	&82I&W6C		RH 1				
	96240444	.	O	O	&82I&W6R		LH 1				
	96241742	.	O	O	&82I&W6R		RH 1				
	[06]	(E)COVERING A-FR CUSHION (D)DECKEL VORDER,POLSTER								(F)COUVERCLE-AVANT,COUSSIN (S)CUBIERTA-FRENTE,COJIN	
	96254700	.	S	.	&82I&W6W		LH 1				
	96254702	.	S	.	&82I&W6W		RH 1				
	96254706	.	.	S	&82I&W6C		LH 1				
	96254708	.	.	S	&82I&W6C		RH 1				
	96254718	.	O	O	&82I&W6R		LH 1				
	96254720	.	O	O	&82I&W6R		RH 1				
	[07]	(E)PAD A-FR SEAT CUSHION (D)UNTERLAG								(F)PATIN (S)COJIN	
	96239031	.	S	S	&W6W/W6C		LH 1				
	96239032	.	S	S	&W6W/W6C		RH 1				
	96239033	.	O	O	&AG1/AH3&W6R		2				
	[08]	(E)FRAME A-FR SEAT CUSHION (D)RAHMEN								(F)CADRE (S)ARMADURA	
	96239039	.	S	S	&AG4		LH 1				
	96239040	.	S	S	&AG4		RH 1				
	96239041	.	O	O	&AG1		LH 1				
	[10]	(E)REGULATOR-FR SEAT HEIGHT (D)REGULATOR								(F)REGULATEUR (S)REGULADOR	
	96241832	.	S	S	&82I		LH 2				
	[11]	(E)SCREW-CR MACHINE (D)SCHRAUBE								(F)VIS (S)TORNILLO	
	02114-04103	.	S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

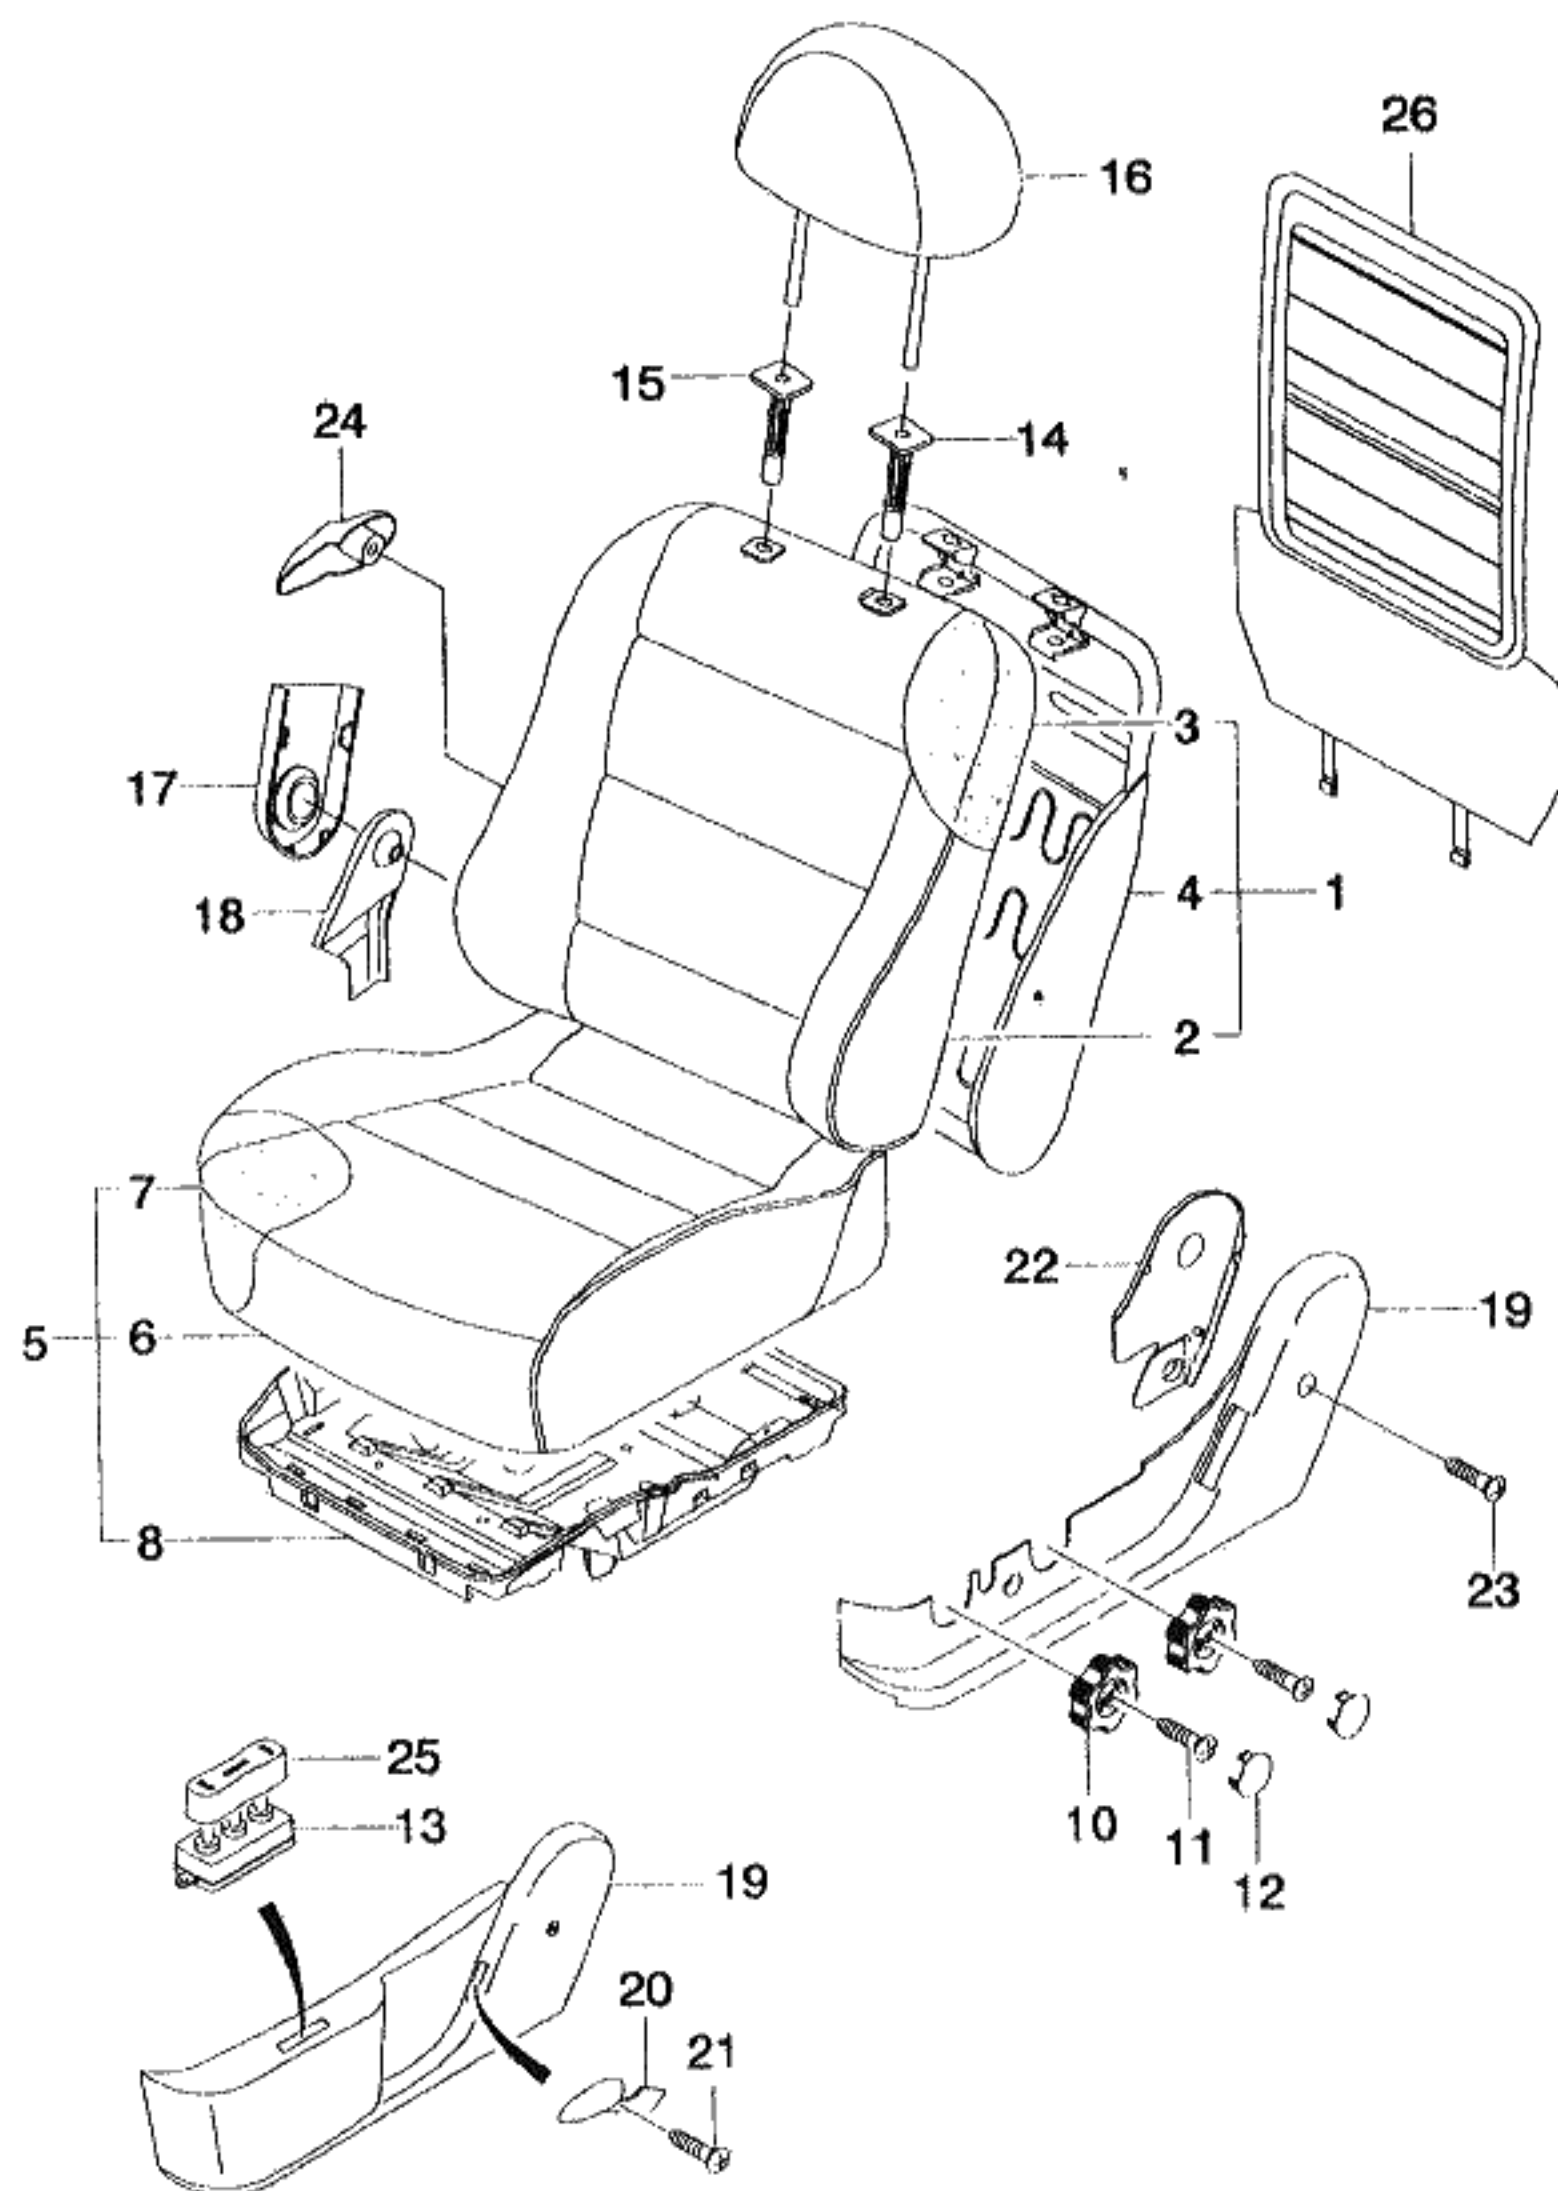


KEY NO.		PART NAME										
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		T / A	LEVEL				FROM	TO				
			S X								C D X	
	[12]	(E)CAP-FR	SEAT REGULATOR	(F)CHAPEAU-REGULATEUR								
	96241834	(D)DECKEL	REGLER	(S)TAPA-REGULADOR								
		S	S	&82I			LH 2					
	[13]	(E)SWITCH A-FR	POWER SEAT	(F)COMMUTATEUR								
	96233126	(D)SCHALTER		(S)INTERRUPTOR								
		O	O	&AG1			LH 1					
	[14]	(E)SLEEVE A-HEADREST		(F)CHEMISE-APPUI-TETE								
	96236442	(D)HÜLSE,KOPFPOLSTER		(S)MANGA								
		S	S	&82IWITH LOCK			2					
	[15]	(E)SLEEVE-HEADREST		(F)CHEMISE-APPUI-TETE								
	96236444	(D)HÜLSE,KOPFPOLSTER		(S)MANGA								
		S	S	&82I			2					
	[16]	(E)HEADREST A-FR SEAT		(F)APPUI-TETE								
	96241810	(D)KOPFPOLSTER		(S)APOYABRAZOS								
		S	S	&82I&W6W/W6C			2					
	96241840		O	O	&82I&W6R		2					
	[17]	(E)CAP-FR	SEAT BACK HINGE	(F)CHAPEAU								
	96251647	(D)DECKEL		(S)TAPA								
		S	S	&82I			2					
	[18]	(E)COVER-FR SEAT CUSH HINGE		(F)COUVERCLE								
	96251055	(D)DECKEL		(S)CUBIERTA								
		S	S	&82I			LH 1					
	96251056		S	S	&82I		RH 1					
	[19]	(E)COVER-FR SEAT, OUTER		(F)COUVERCLE								
	96241820	(D)DECKEL		(S)CUBIERTA								
		S	S	&82I			LH 1					
	96241824		O	O	&82I&AG1		LH 1					
	96241816		S	S	&82I		RH 1					
	[20]	(E)GRIP-FR	SEAT RECLINER	(F)POIGNEE								
		(D)GRIFF		(S)ASIDERO								
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC						M = MANUAL T/A						
CDX = 2.0 DOHC						A = AUTOMATIC T/A						
						. = COMMON						

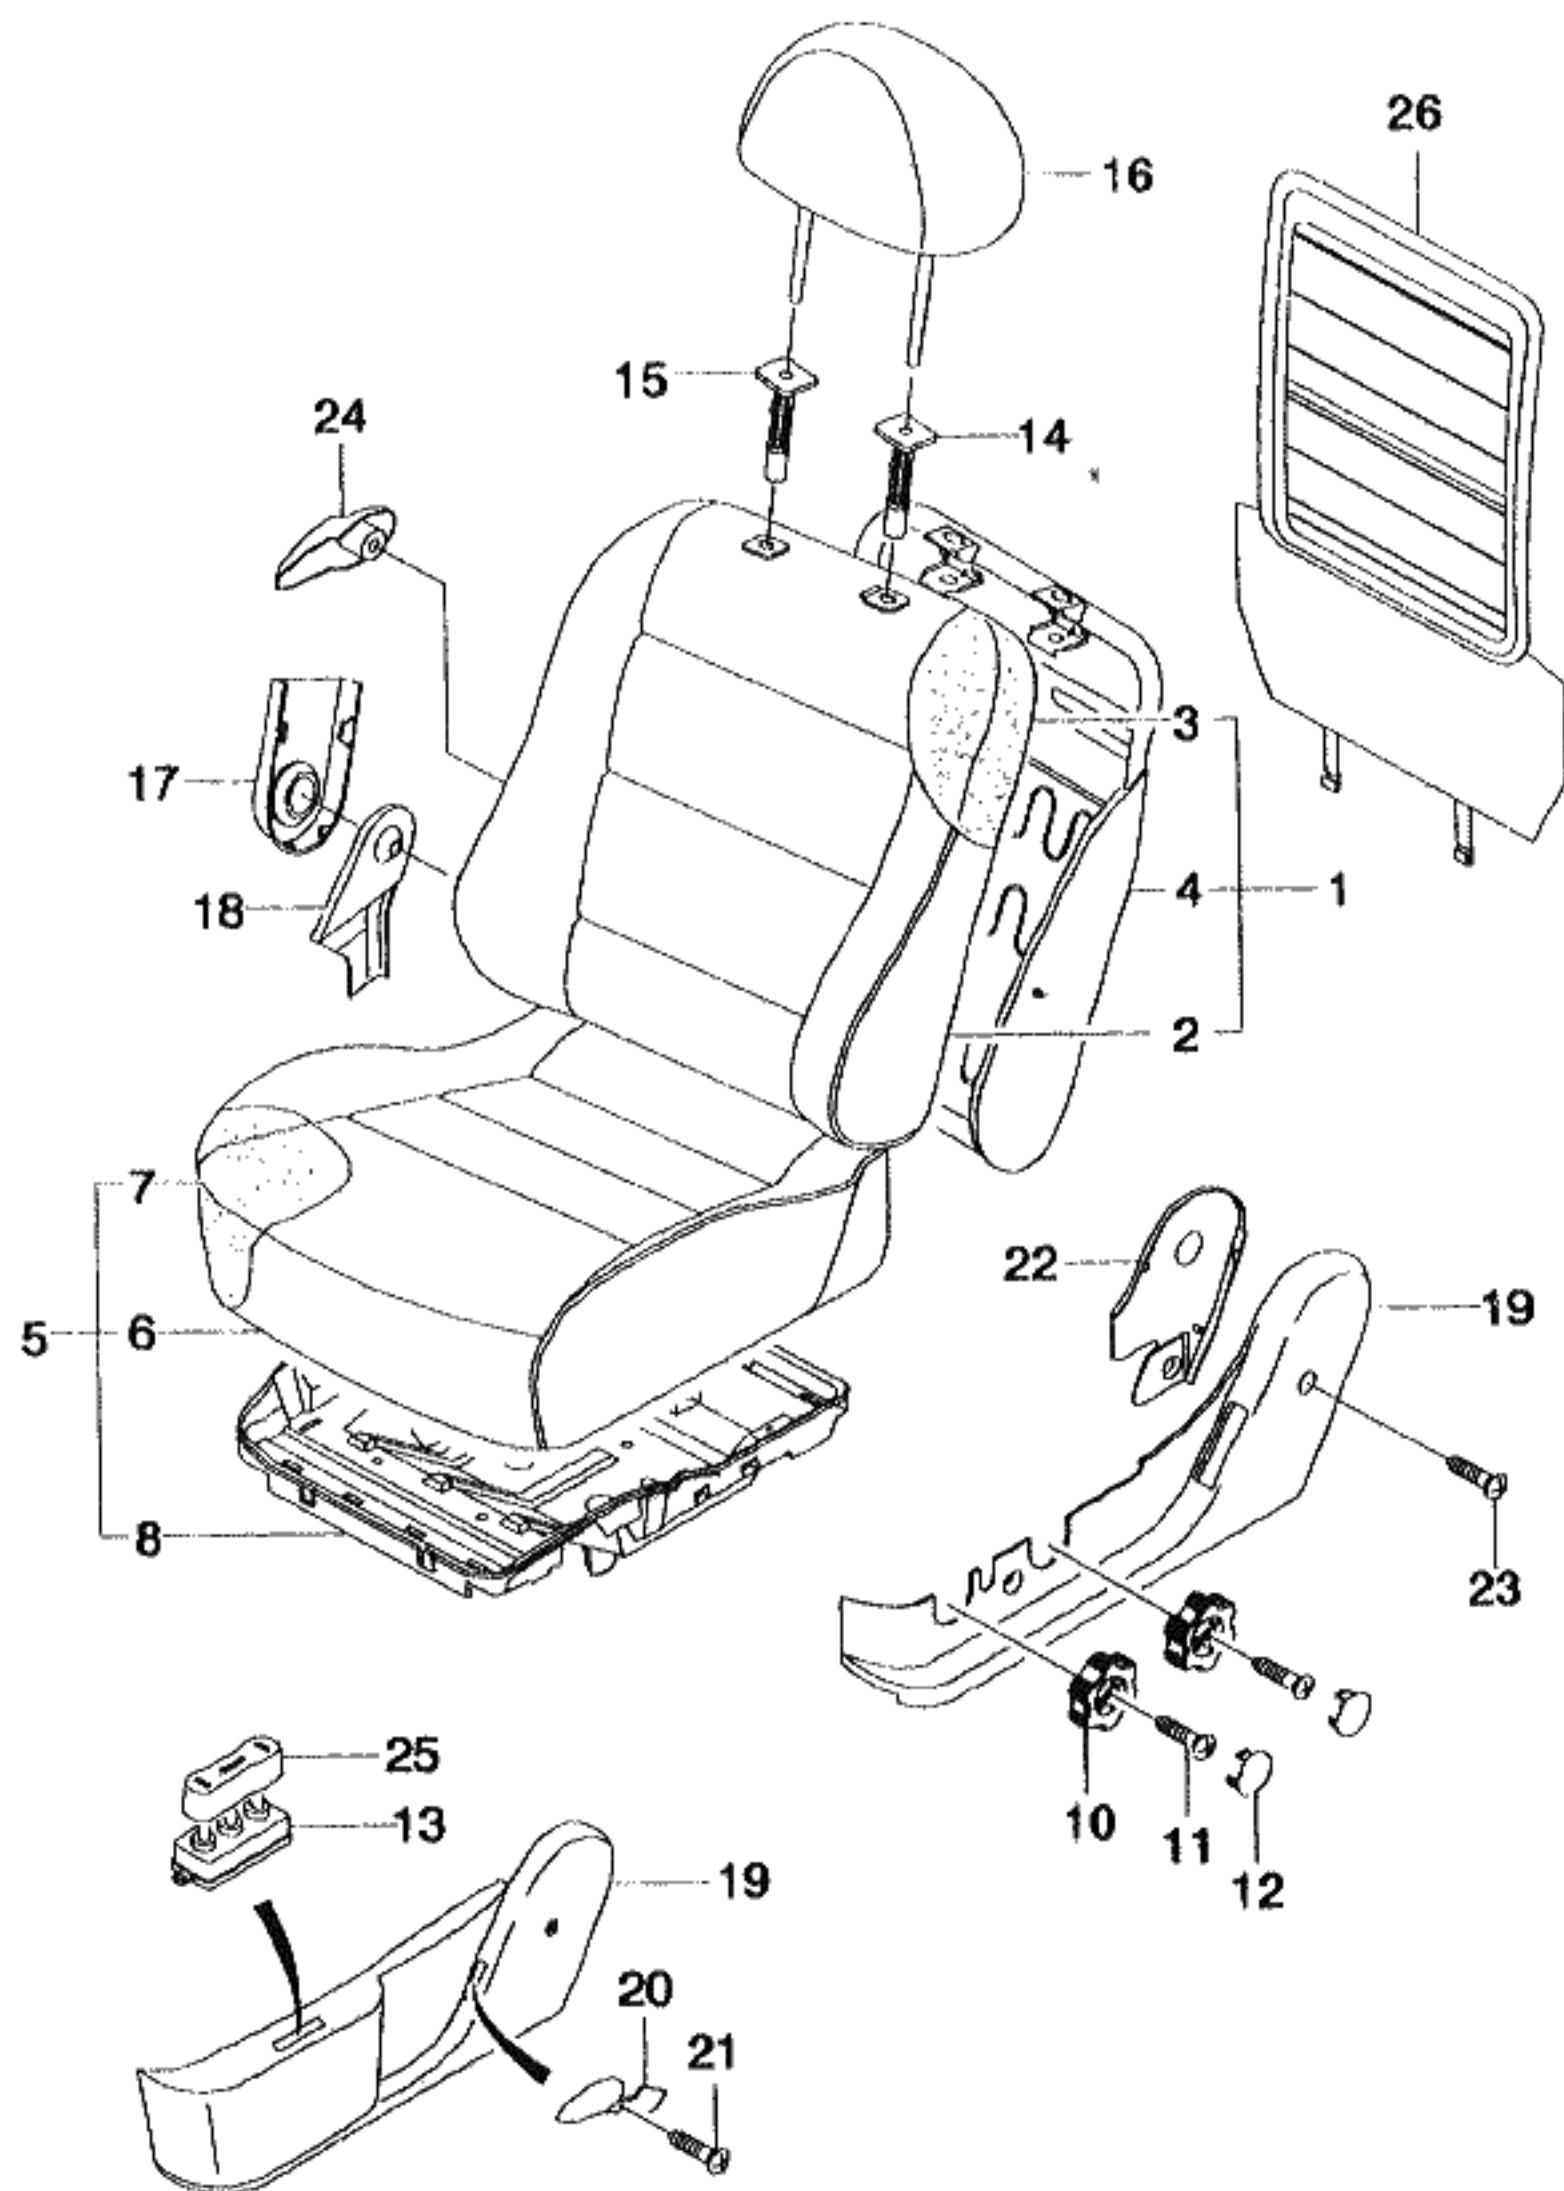


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96241828	.	S	S	&82I		LH 1				
	96241830	.	S	S	&82I		RH 1				
	[21]		(E)SCREW-TAPPING				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	09132-04010	.	S	S			2				
	[22]		(E)COVER-RECLINER,INNER				(F)COUVERCLE				
			(D)DECKEL				(S)CUBIERTA				
	96251643	.	S	S	&82I		LH 1				
	96251644	.	S	S	&82I		RH 1				
	[23]		(E)SCREW-TAPPING				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	03110-48162	.	S	S			4				
	[24]		(E)GRIP-LUMBAR SUPPORT SEAT				(F)POIGNEE				
			(D)GRIFF				(S)ASIDERO				
	96241790	.	S	S	&82I		1				
	[25]		(E)KNOB-FR PWR SEAT SWITCH				(F)BOUTON				
			(D)KNOPF				(S)PERILLA				
	96241836	.	O	O	&82I&AG1		LH 1				
	[26]		(E)COVER A-FR SEAT BACK				(F)CARTER				
			(D)DECKEL				(S)CUBIERTA				
	96241787	.	S	S	&82I&W6W/W6C		2				
	96241785	.	O	O	&82I&W6R		2				

LEVEL		T/A(TRANSAXLE)	
S	X = 2.0 SOHC	M	= MANUAL T/A
CDX	= 2.0 DOHC	A	= AUTOMATIC T/A
		.	= COMMON

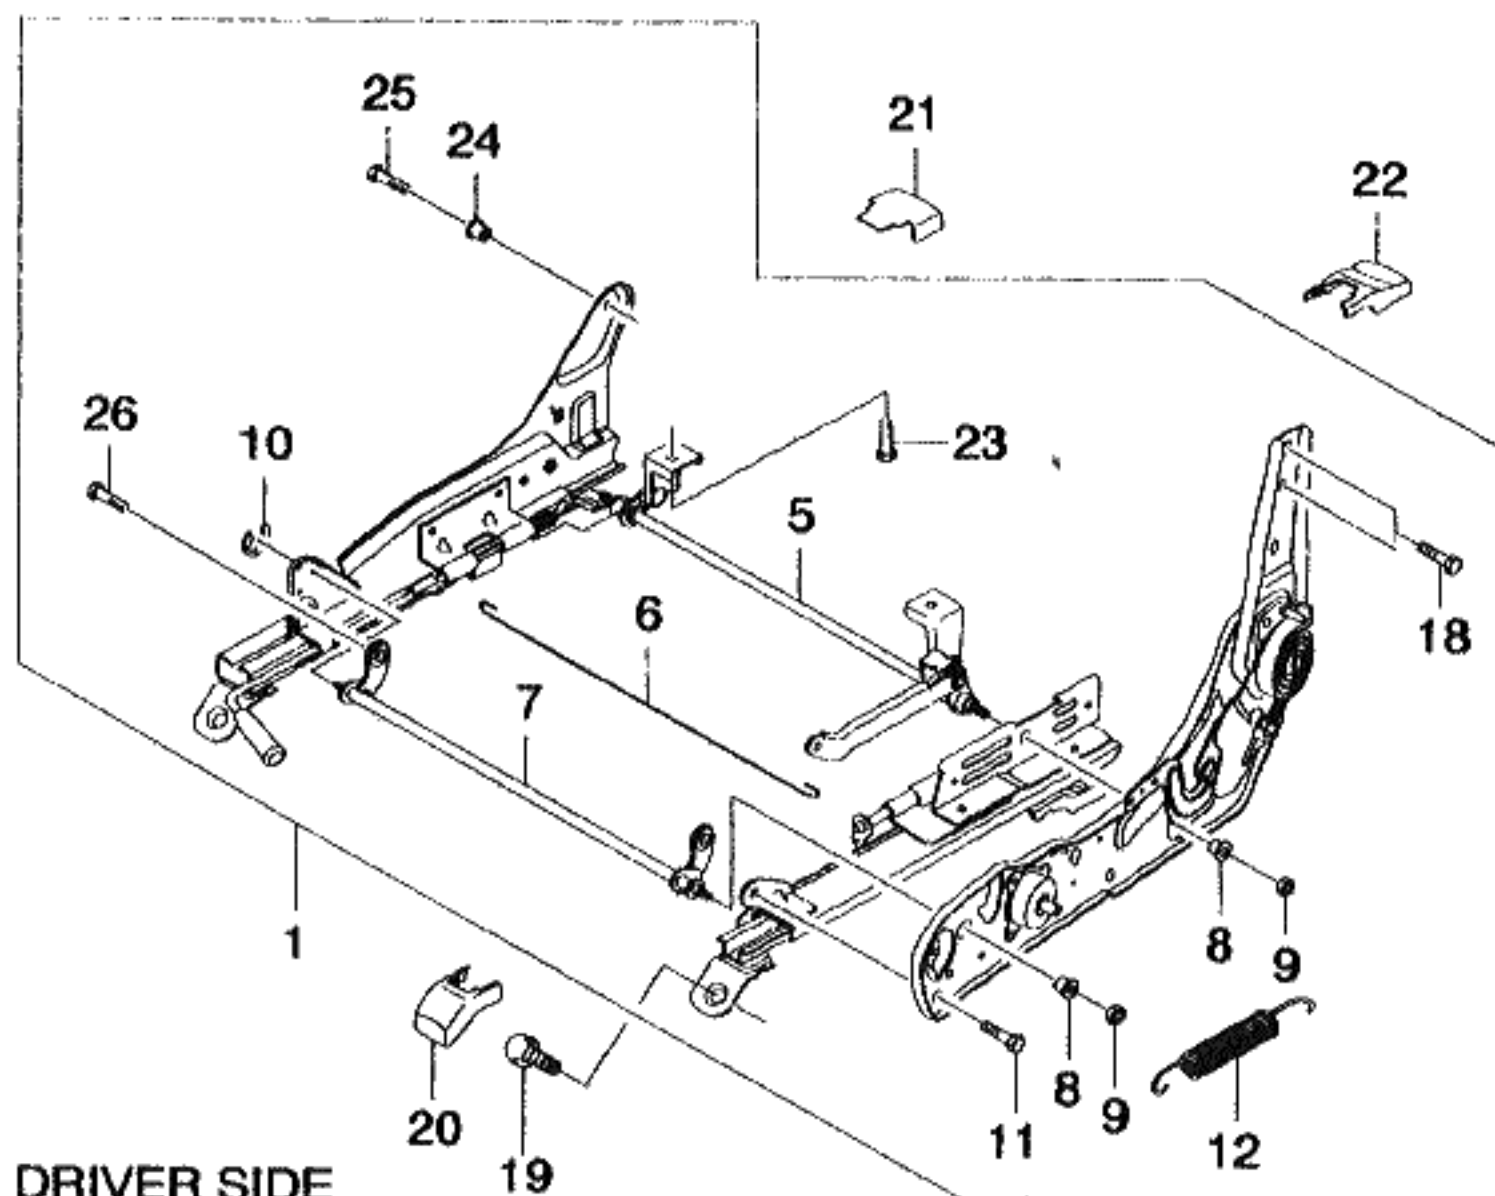


DRIVER SIDE

CO-DRIVER SIDE

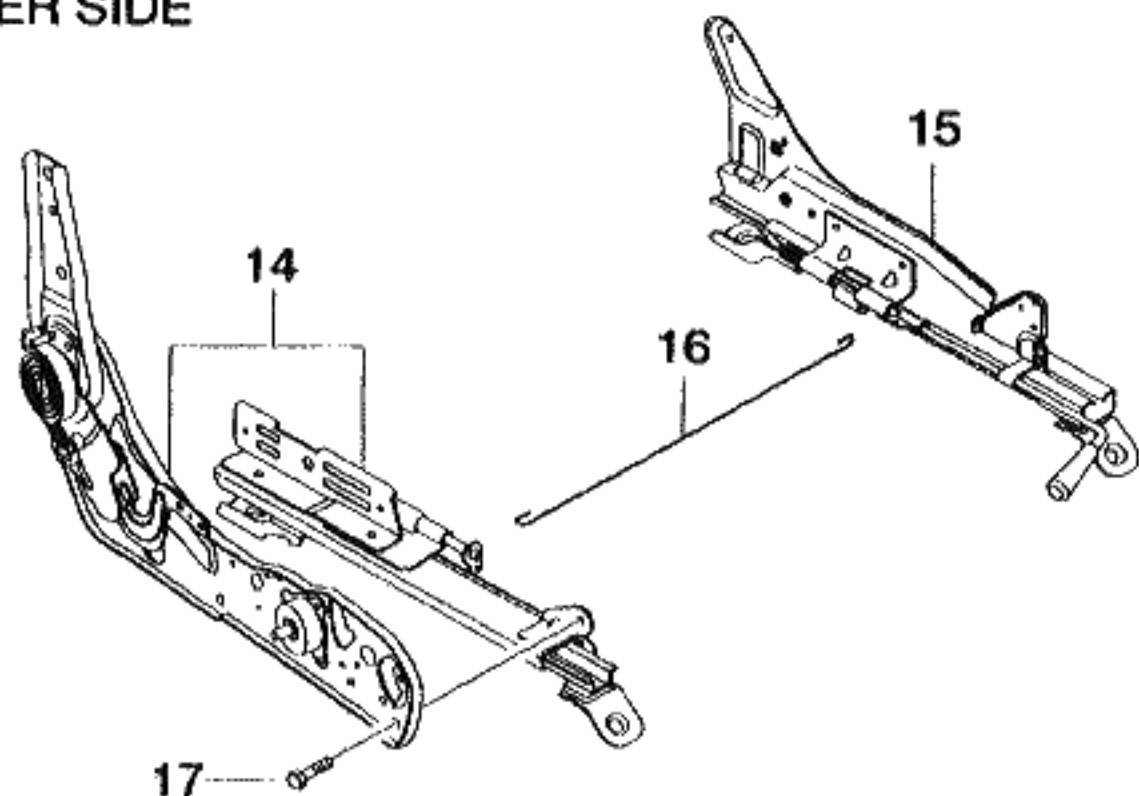


KEY NO.		PART NAME										
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		T / A	LEVEL				FROM	TO				
			S X								C D X	
	[01]	(E)ADJUSTER A-DUAL HEIGHT (D)EINSTELLVORRICHTUNG			(F)AJUSTEUR (S)AJUSTADOR							
	96233103	.	S	S	&AGD			LH 1				
	96233105	.	O	O	&AG1			LH 1				
	[05]	(E)ROD A-H/ADJUSTER,RR SEAT (D)STAB			(F)TRINGLE (S)VARILLA							
	96217301	.	S	S				LH 1				
	[06]	(E)WIRE-ADJUSTER SEAT (D)VERDRAHTUNG,EINSTELLUNG			(F)CABLE-AJUSTEUR SIEGE (S)ALAMBRE							
	96217288	.	S	S				LH 1				
	[07]	(E)ROD A-H/ADJUSTER,FR SEAT (D)STAB			(F)TRINGLE (S)VARILLA							
	96217286	.	S	S				LH 1				
	[08]	(E)BUSH (D)LAGERFUTTER			(F)COUSSINET (S)BUJE							
	09301-10001	.	S	S				1				
	09301-10001	.	S	S				1				
	[09]	(E)NUT-FLANGE (D)MUTTER			(F)ECROU (S)TUERCA							
	08316-15083	.	S	S				1				
	08316-15083	.	S	S				1				
	[10]	(E)RING-RETAINING (D)RING,HALTER			(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR							
	08332-11089	.	S	S				1				
	[11]	(E)BOLT-HEXAGON (D)SCHRAUBE			(F)BOULON (S)PERNO							
	01147-08163	.	S	S				LH 3				
	[12]	(E)SPRING-BALANCE,H/ADJUSTER (D)FEDERUNG			(F)RESSORT (S)RESORTE							
	96217201	.	S	S				LH 1				
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

7530 FRONT SEAT GUIDE RAIL

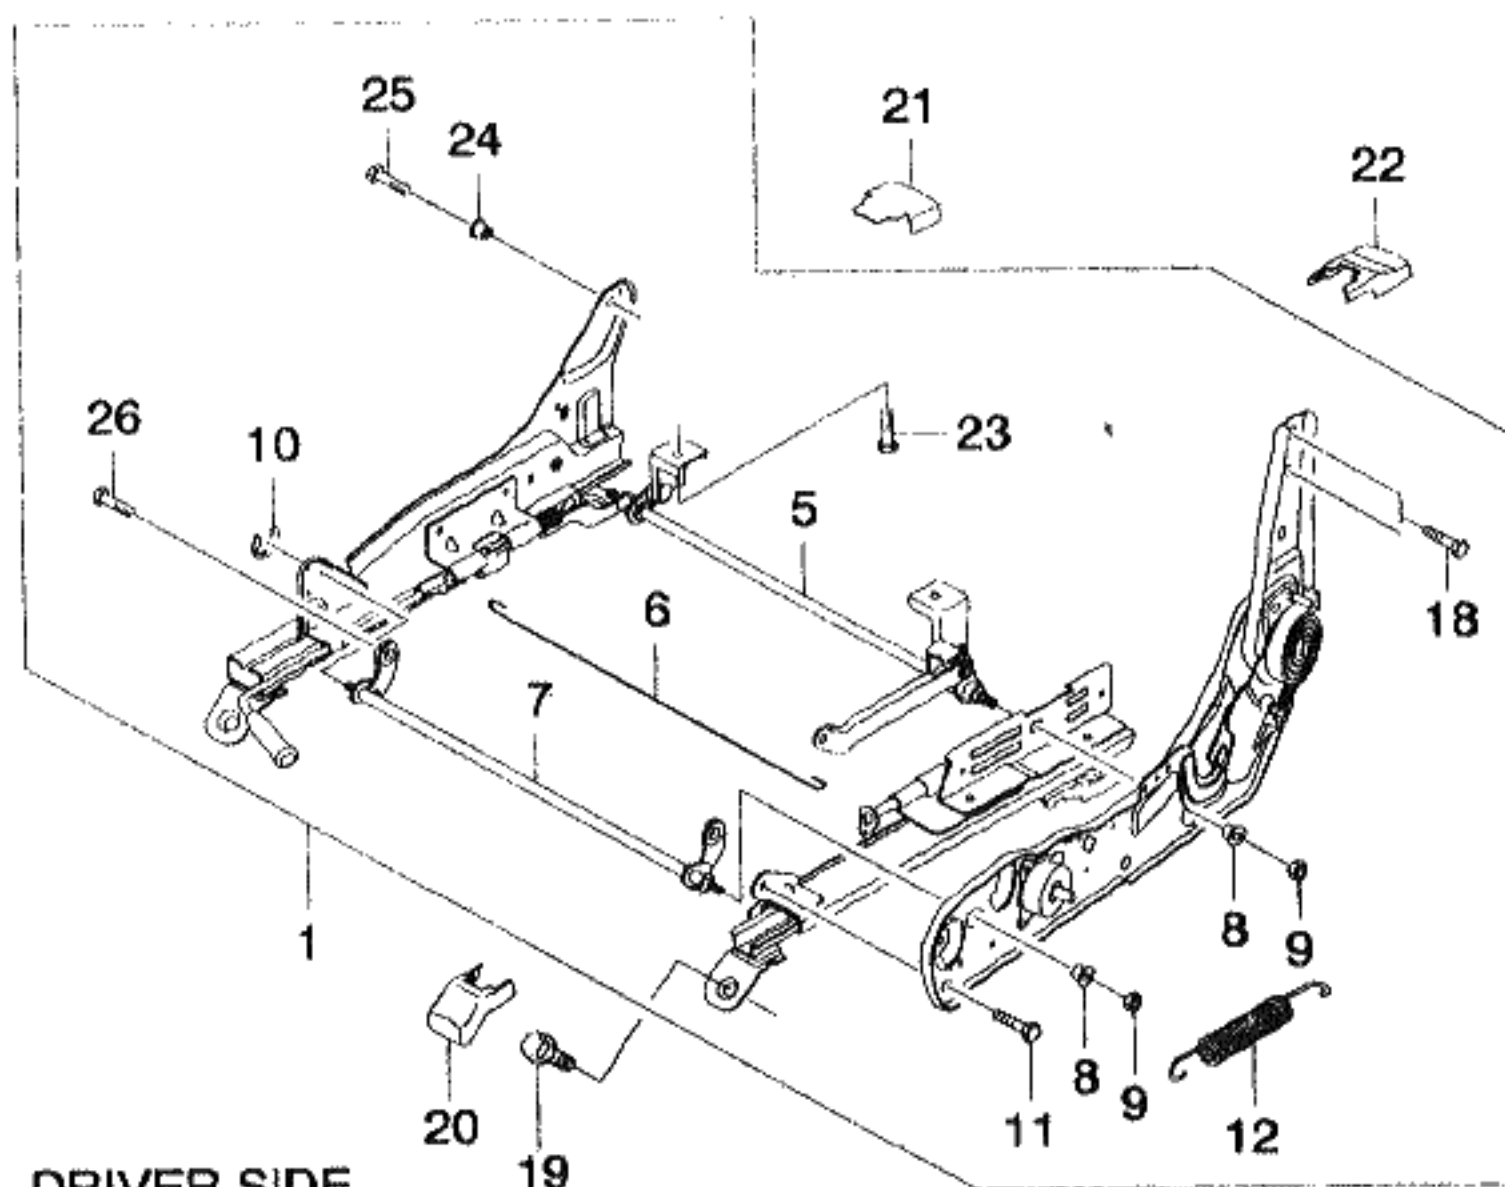


DRIVER SIDE

CO-DRIVER SIDE

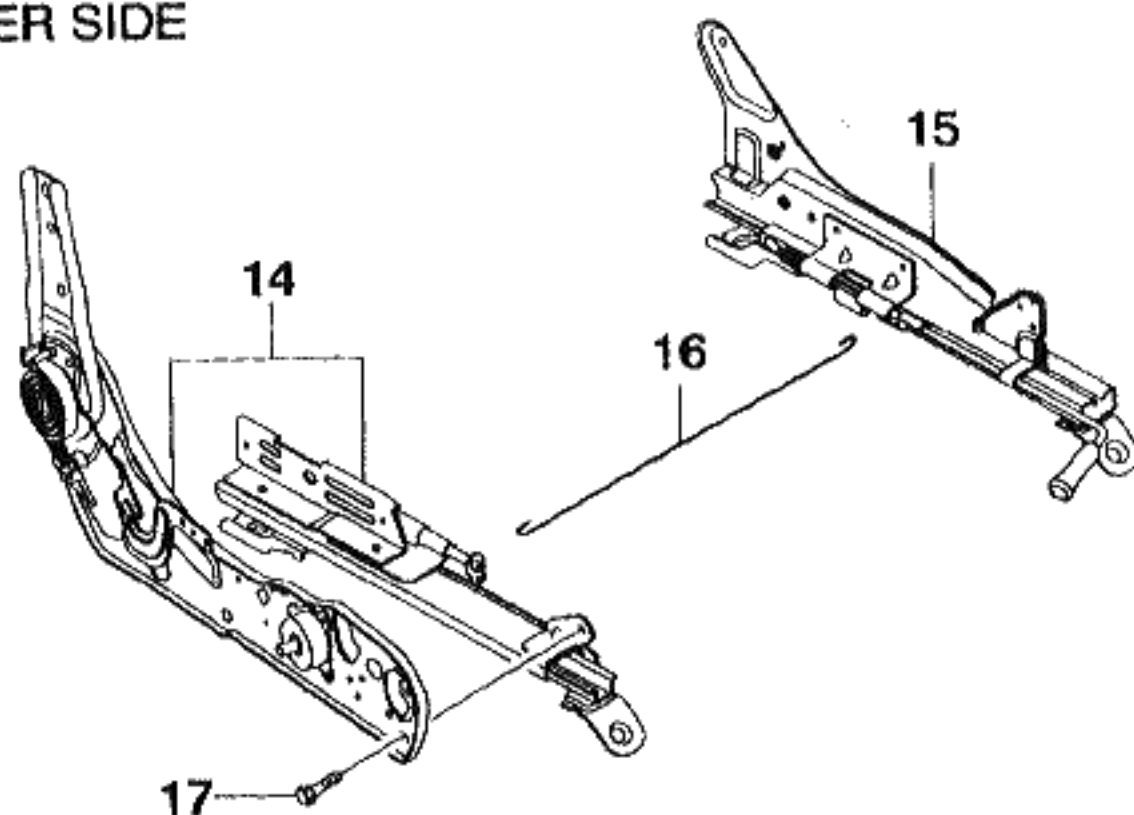


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[14] 96233110	(E) RAIL A-FR SEAT, OUTER (D) SCHIENE, AUBEN FÜHRUNG	S	S				(F) RAIL-GUIDE EXTERNE (S) RIEL-GUIA EXTERNA		RH 1	
	[15] 96233108	(E) RAIL A-FR SEAT, INNER (D) SCHIENE, INNEN FÜHRUNG	S	S				(F) RAIL-GUIDE INTERNE (S) RIEL-GUIA INTERNA		RH 1	
	[16] 96217288	(E) WIRE-ADJUSTER SEAT (D) VERDRAHTUNG, EINSTELLUNG	S	S				(F) CABLE-AJUSTEUR SIEGE (S) ALAMBRE		RH 1	
	[17] 01147-08163	(E) BOLT-HEXAGON (D) SCHRAUBE	S	S				(F) BOULON (S) PERNO		RH 3	
	[18] 01147-10253	(E) BOLT-HEXAGON (D) SCHRAUBE	S	S				(F) BOULON (S) PERNO		4	
	[19] 09116-08001	(E) BOLT-W/WASHER (D) SCHRAUBE	S	S				(F) BOULON (S) PERNO		8	
	[20] 96240389	(E) PIECE-END SEAT, FR OUTER (D) TEIL, END	S	S				(F) PIECE (S) PIEZA		2	
	[21] 96240390	(E) PIECE-END SEAT, RR INNER (D) TEIL, END	S	S				(F) PIECE (S) PIEZA		2	
	[22] 96240391	(E) PIECE-END, SEAT, RR OUTER (D) TEIL, END	S	S				(F) PIECE (S) PIEZA		2	
	[23] 01147-08163	(E) BOLT-HEXAGON (D) SCHRAUBE	S	S				(F) BOULON (S) PERNO		LH 2	

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A = COMMON

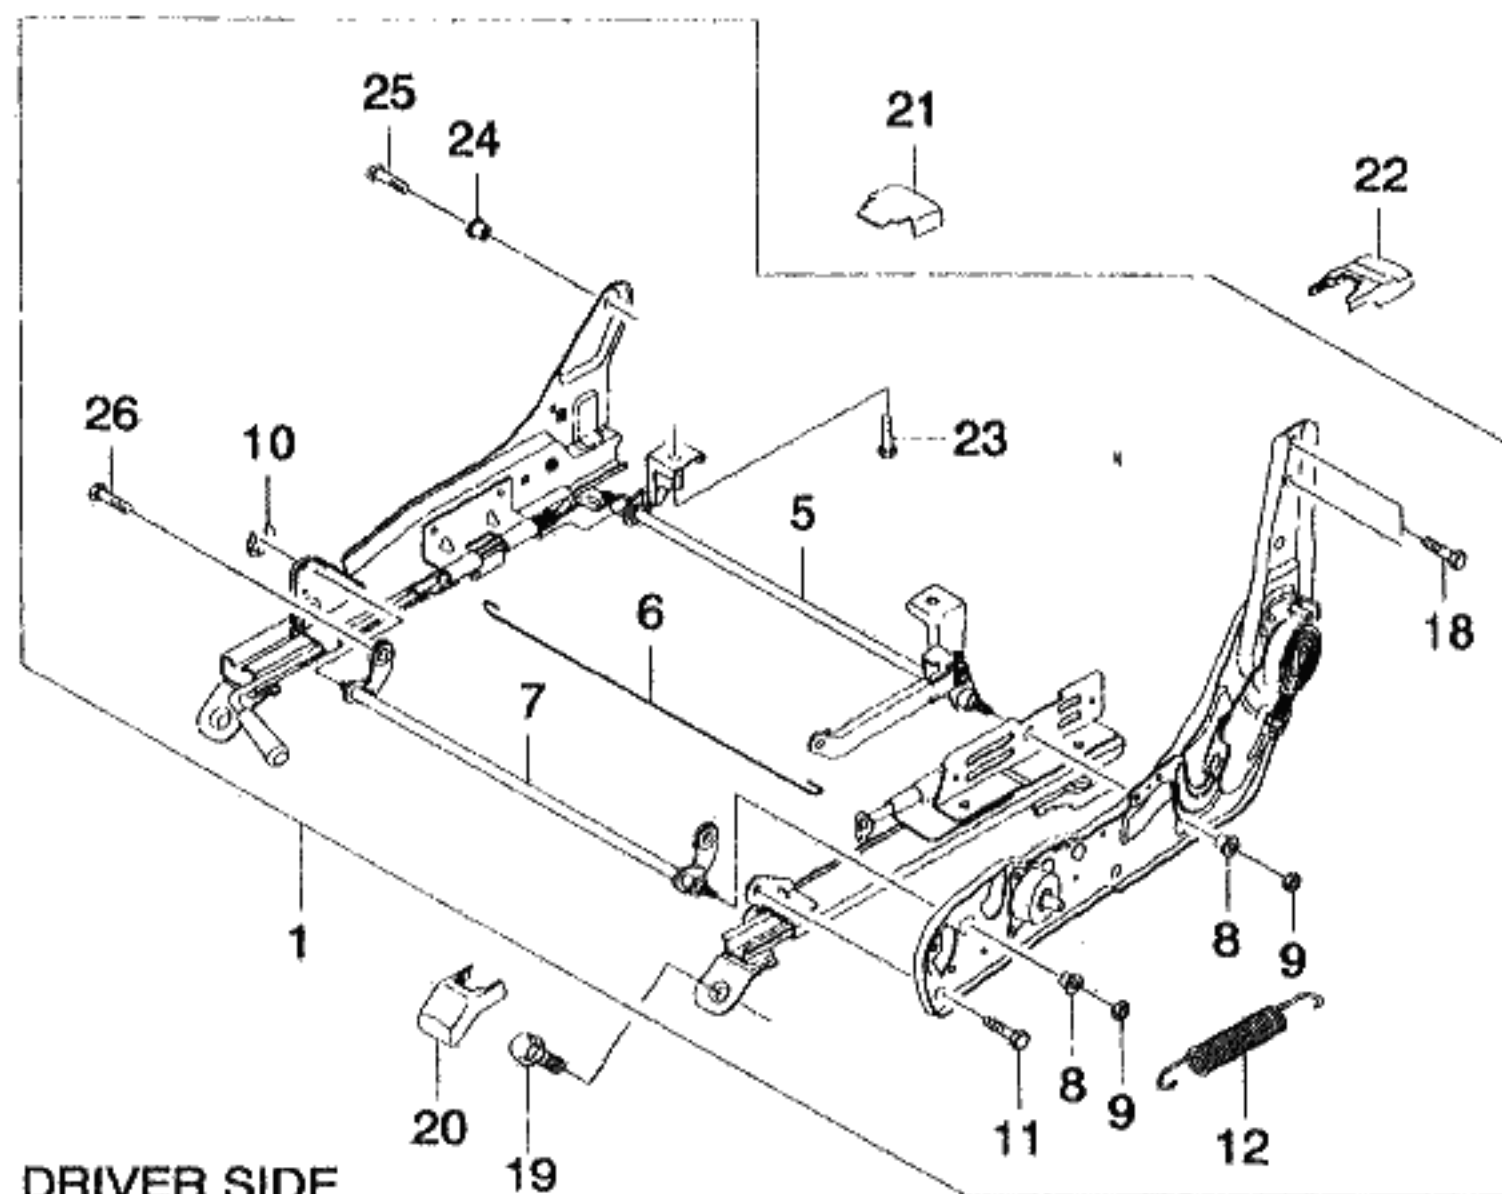


DRIVER SIDE

CO-DRIVER SIDE

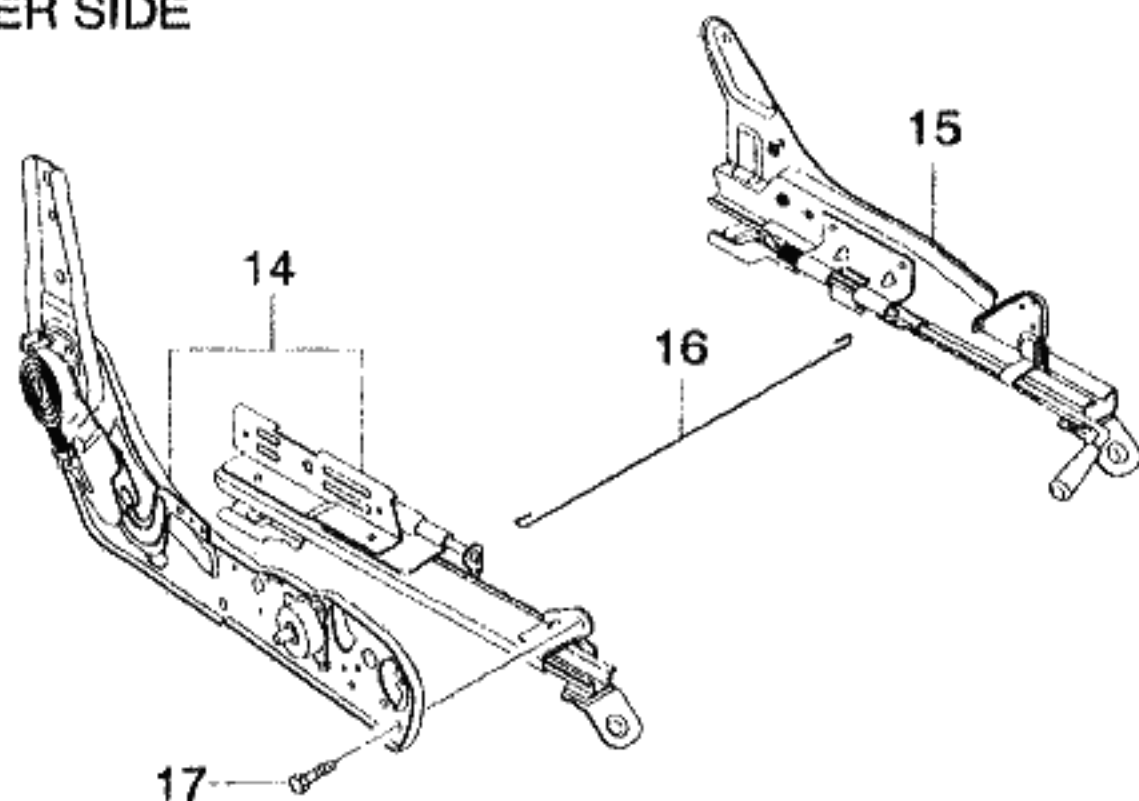


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[24] 09306-13005	(E)BUSH (D)LAGERFUTTER . S S					(F)COUSSINET (S)BUJE 2				
	[25] 09119-08005	(E)BOLT (D)SCHRAUBE . S S					(F)BOULON (S)PERNO 2				
	[26] 01147-08203	(E)BOLT-HEXAGON (D)SCHRAUBE . S S					(F)BOULON (S)PERNO LH 2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

7540 REAR SEAT I

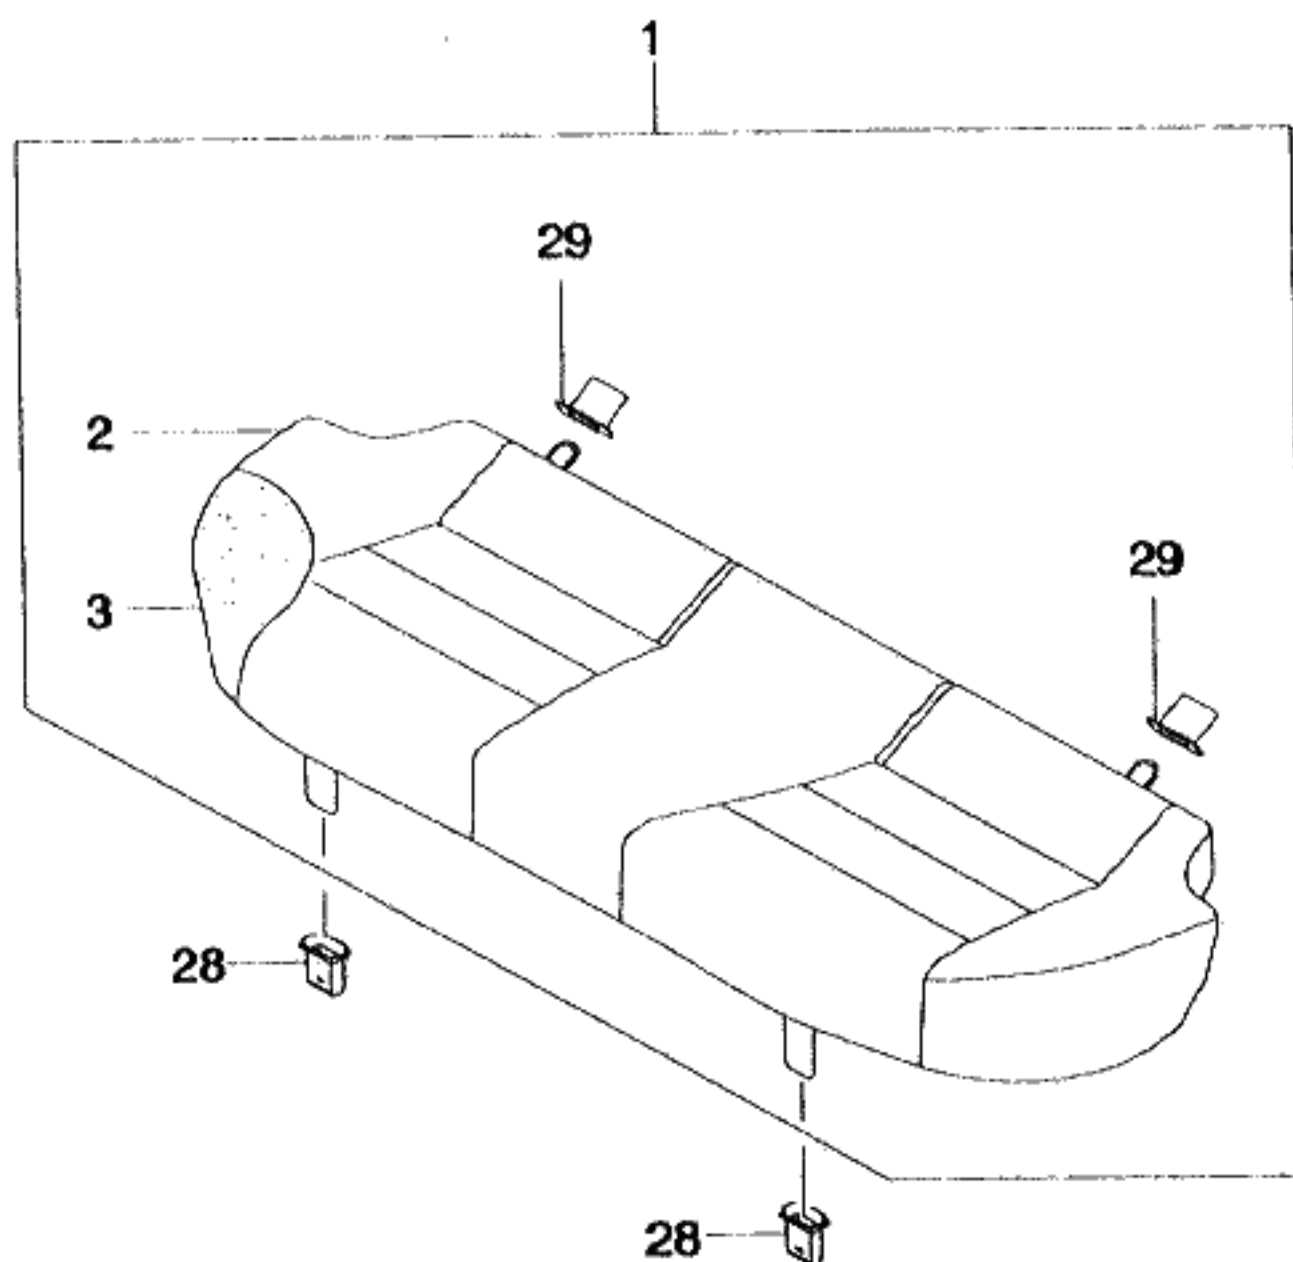


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E)SEAT A-RR CUSH (D)SITZ,HINTER				(F)SIEGE-ARRIERE (S)ASIENTO-TRASERO					
	96252935	.	S	.	&82I&W6W		1				CE
	96240252	.	.	S	&82I&W6C		1				CB
	96240256	.	O	O	&82I&W6R		1				CD
	[02]	(E)COVERING A-RR CUSHION (D)DECKEL HINTER,POLSTER				(F)COUVERCLE-ARRIERE,COUSSIN (S)CUBIERTA-TRASERO,COJIN					
	96253414	.	S	.	&82I&W6W		1				
	96253408	.	.	S	&82I&W6C		1				
	96253412	.	O	O	&82I&W6R		1				
	[03]	(E)PAD A-RR SEAT CUSHION (D)UNTERLAG				(F)PATIN (S)COJIN					
	96217624	.	S	S	&W6W/W6C		1				
	96238848	.	O	O	&W6R		1				
	[28]	(E)HOOK (D)HAKEN				(F)CROCHET (S)PERCHA					
	09410-00003	.	S	S			2				
	[29]	(E)COVER (D)DECKEL				(F)CARTER (S)CUBIERTA					
	96218162	.	S	S			2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

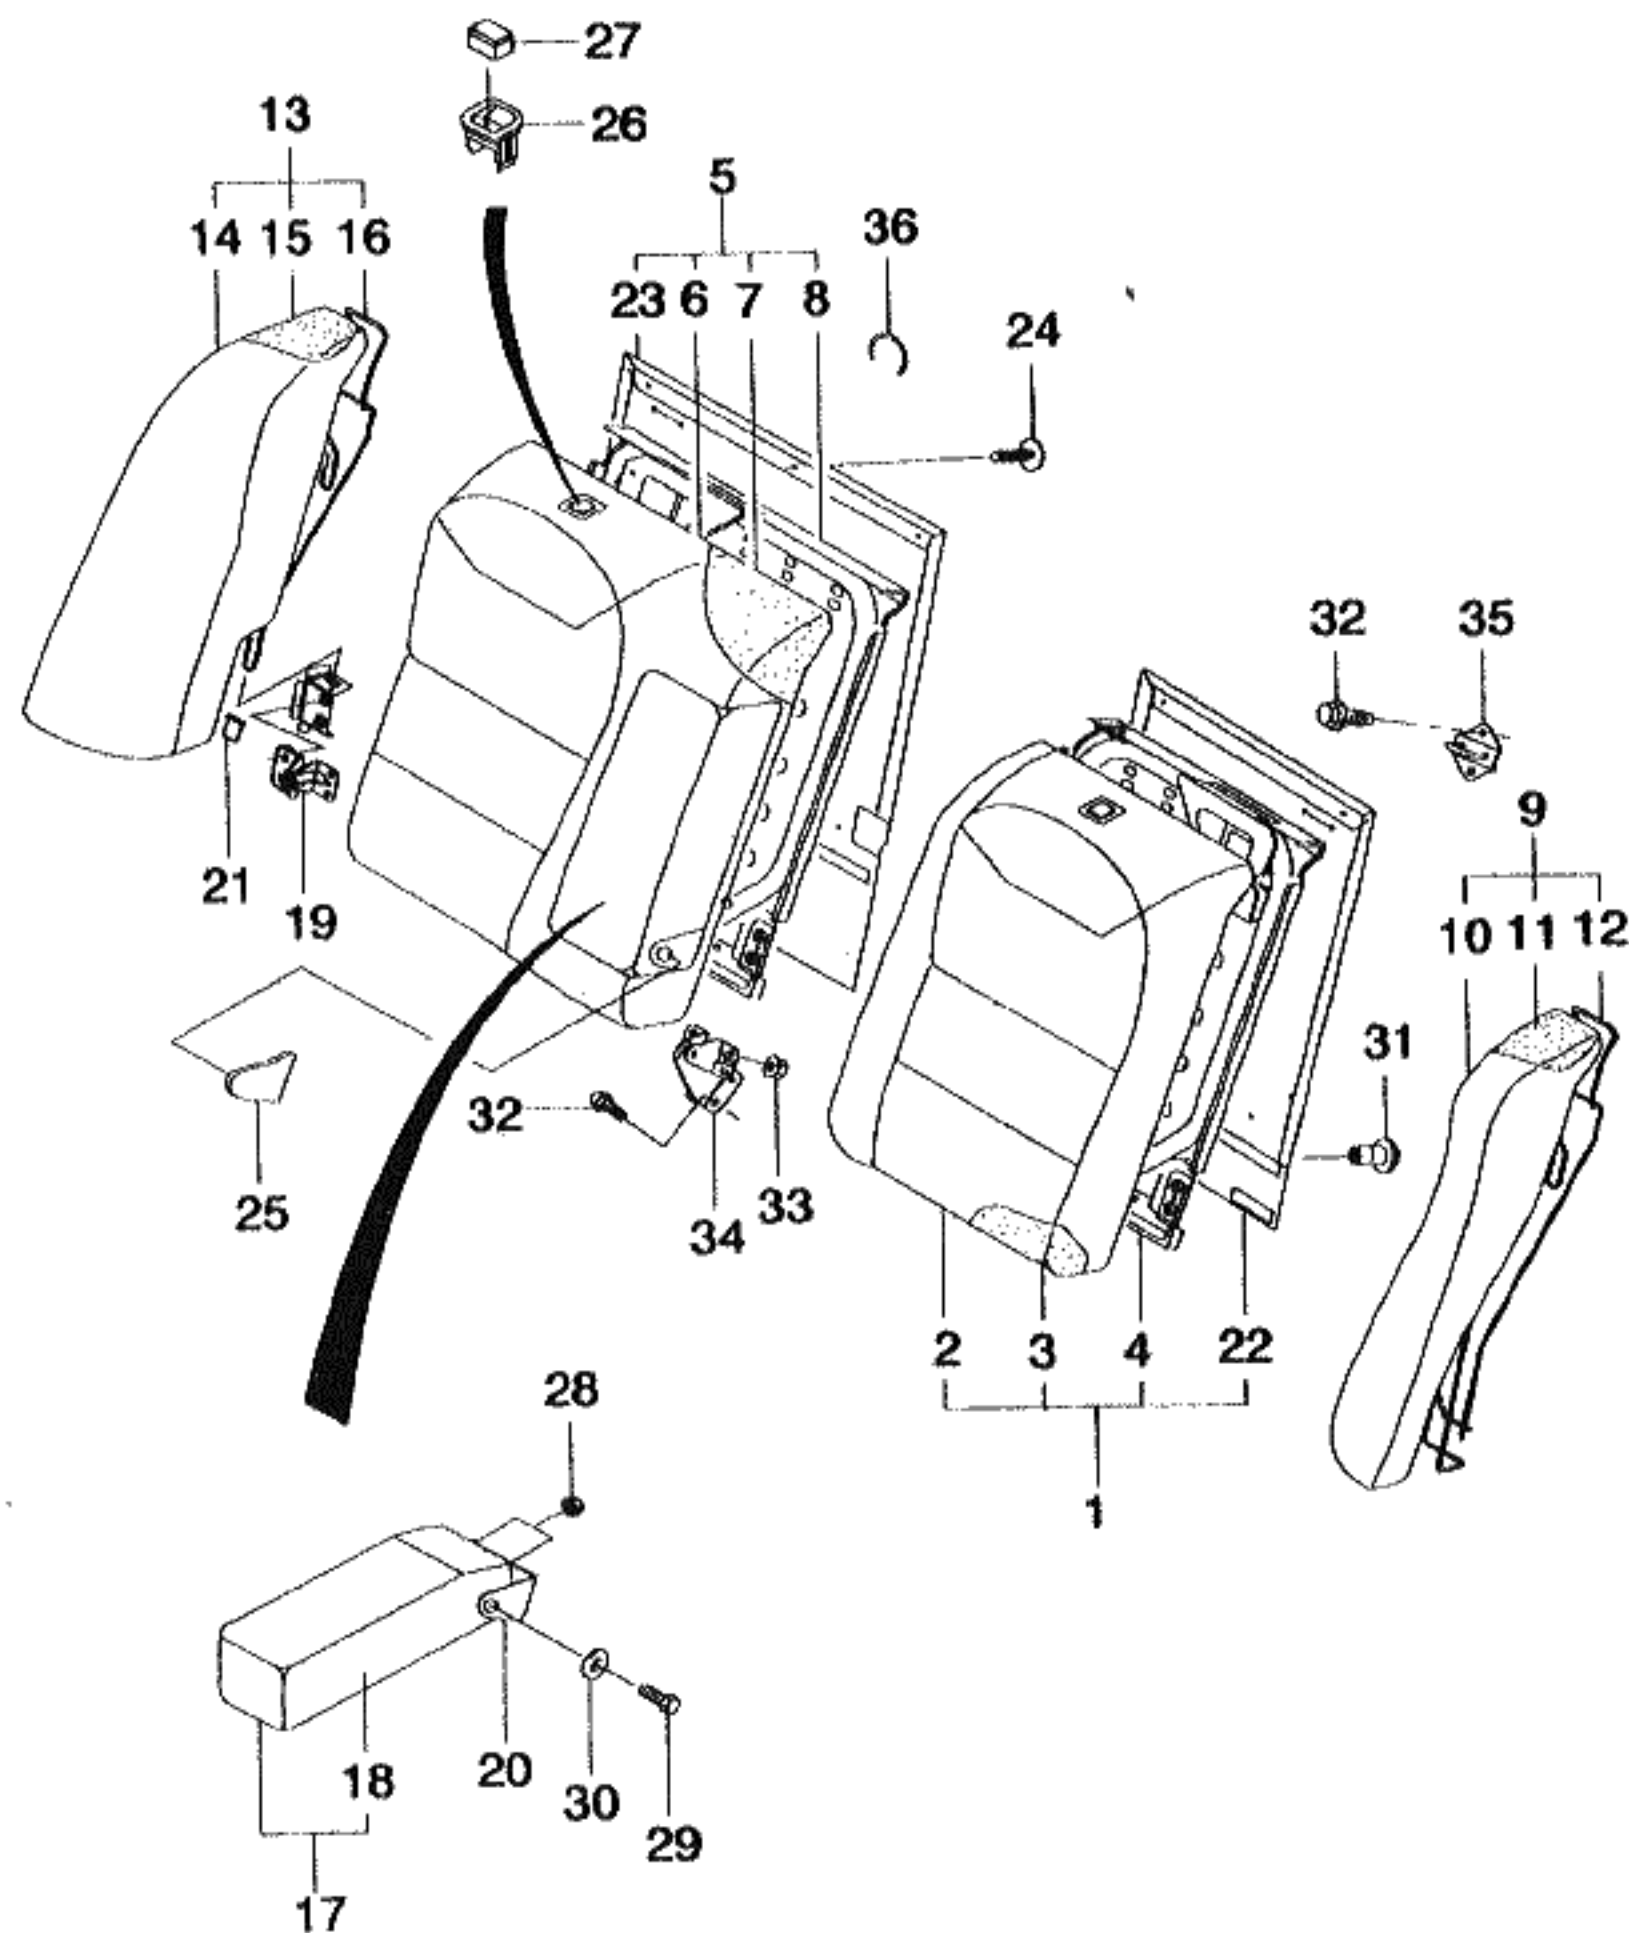


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]	(E)SEAT A-RR BACK (D)HINTERSITZ,HINTEN				(F)SIEGE ARRIERE-ARRIERE (S)ASIENTO TRASERO-RESPALDO						
96252957	. S . &8218;W6W				LH 1						B1
96241851	. . S &8218;W6C				LH 1						BS
96240283	. O O &8218;W6R				LH 1						BK
[02]	(E)COVERING A-RR SEAT BACK (D)DECKEL,HINTER,HINTER				(F)COUVERCLE-ARRIERE,ARRIERE (S)CUBIERTA-TRASERO,TRASERO						
96253443	. S . &8218;W6W				LH 1						
96253451	. . S &8218;W6C				LH 1						
96253467	. O O &8218;W6R				LH 1						
[03]	(E)PAD A-RR SEAT BACK (D)UNTERLAG				(F)PATIN (S)COJIN						
96218121	. S S &8218;W6W/W6C				LH 1						
96243081	. O O &8218;W6R				LH 1						
[04]	(E)FRAME A-RR SEAT BACK (D)RAHMEN				(F)CADRE (S)ARMADURA						
96218125	. S S				LH 1						
[05]	(E)SEAT A-RR BACK (D)HINTERSITZ,HINTEN				(F)SIEGE ARRIERE-ARRIERE (S)ASIENTO TRASERO-RESPALDO						
96252958	. S . &8218;W6W				RH 1						B2
96241855	. . S &8218;W6C				RH 1						BT
96240284	. O O &8218;W6R				RH 1						BL
[06]	(E)COVERING A-RR SEAT BACK (D)DECKEL,HINTER,HINTER				(F)COUVERCLE-ARRIERE,ARRIERE (S)CUBIERTA-TRASERO,TRASERO						
96253444	. S . &8218;W6W				RH 1						
96253452	. . S &8218;W6C				RH 1						
96253468	. O O &8218;W6R				RH 1						
[07]	(E)PAD A-RR SEAT BACK (D)UNTERLAG				(F)PATIN (S)COJIN						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

7541 REAR SEAT II

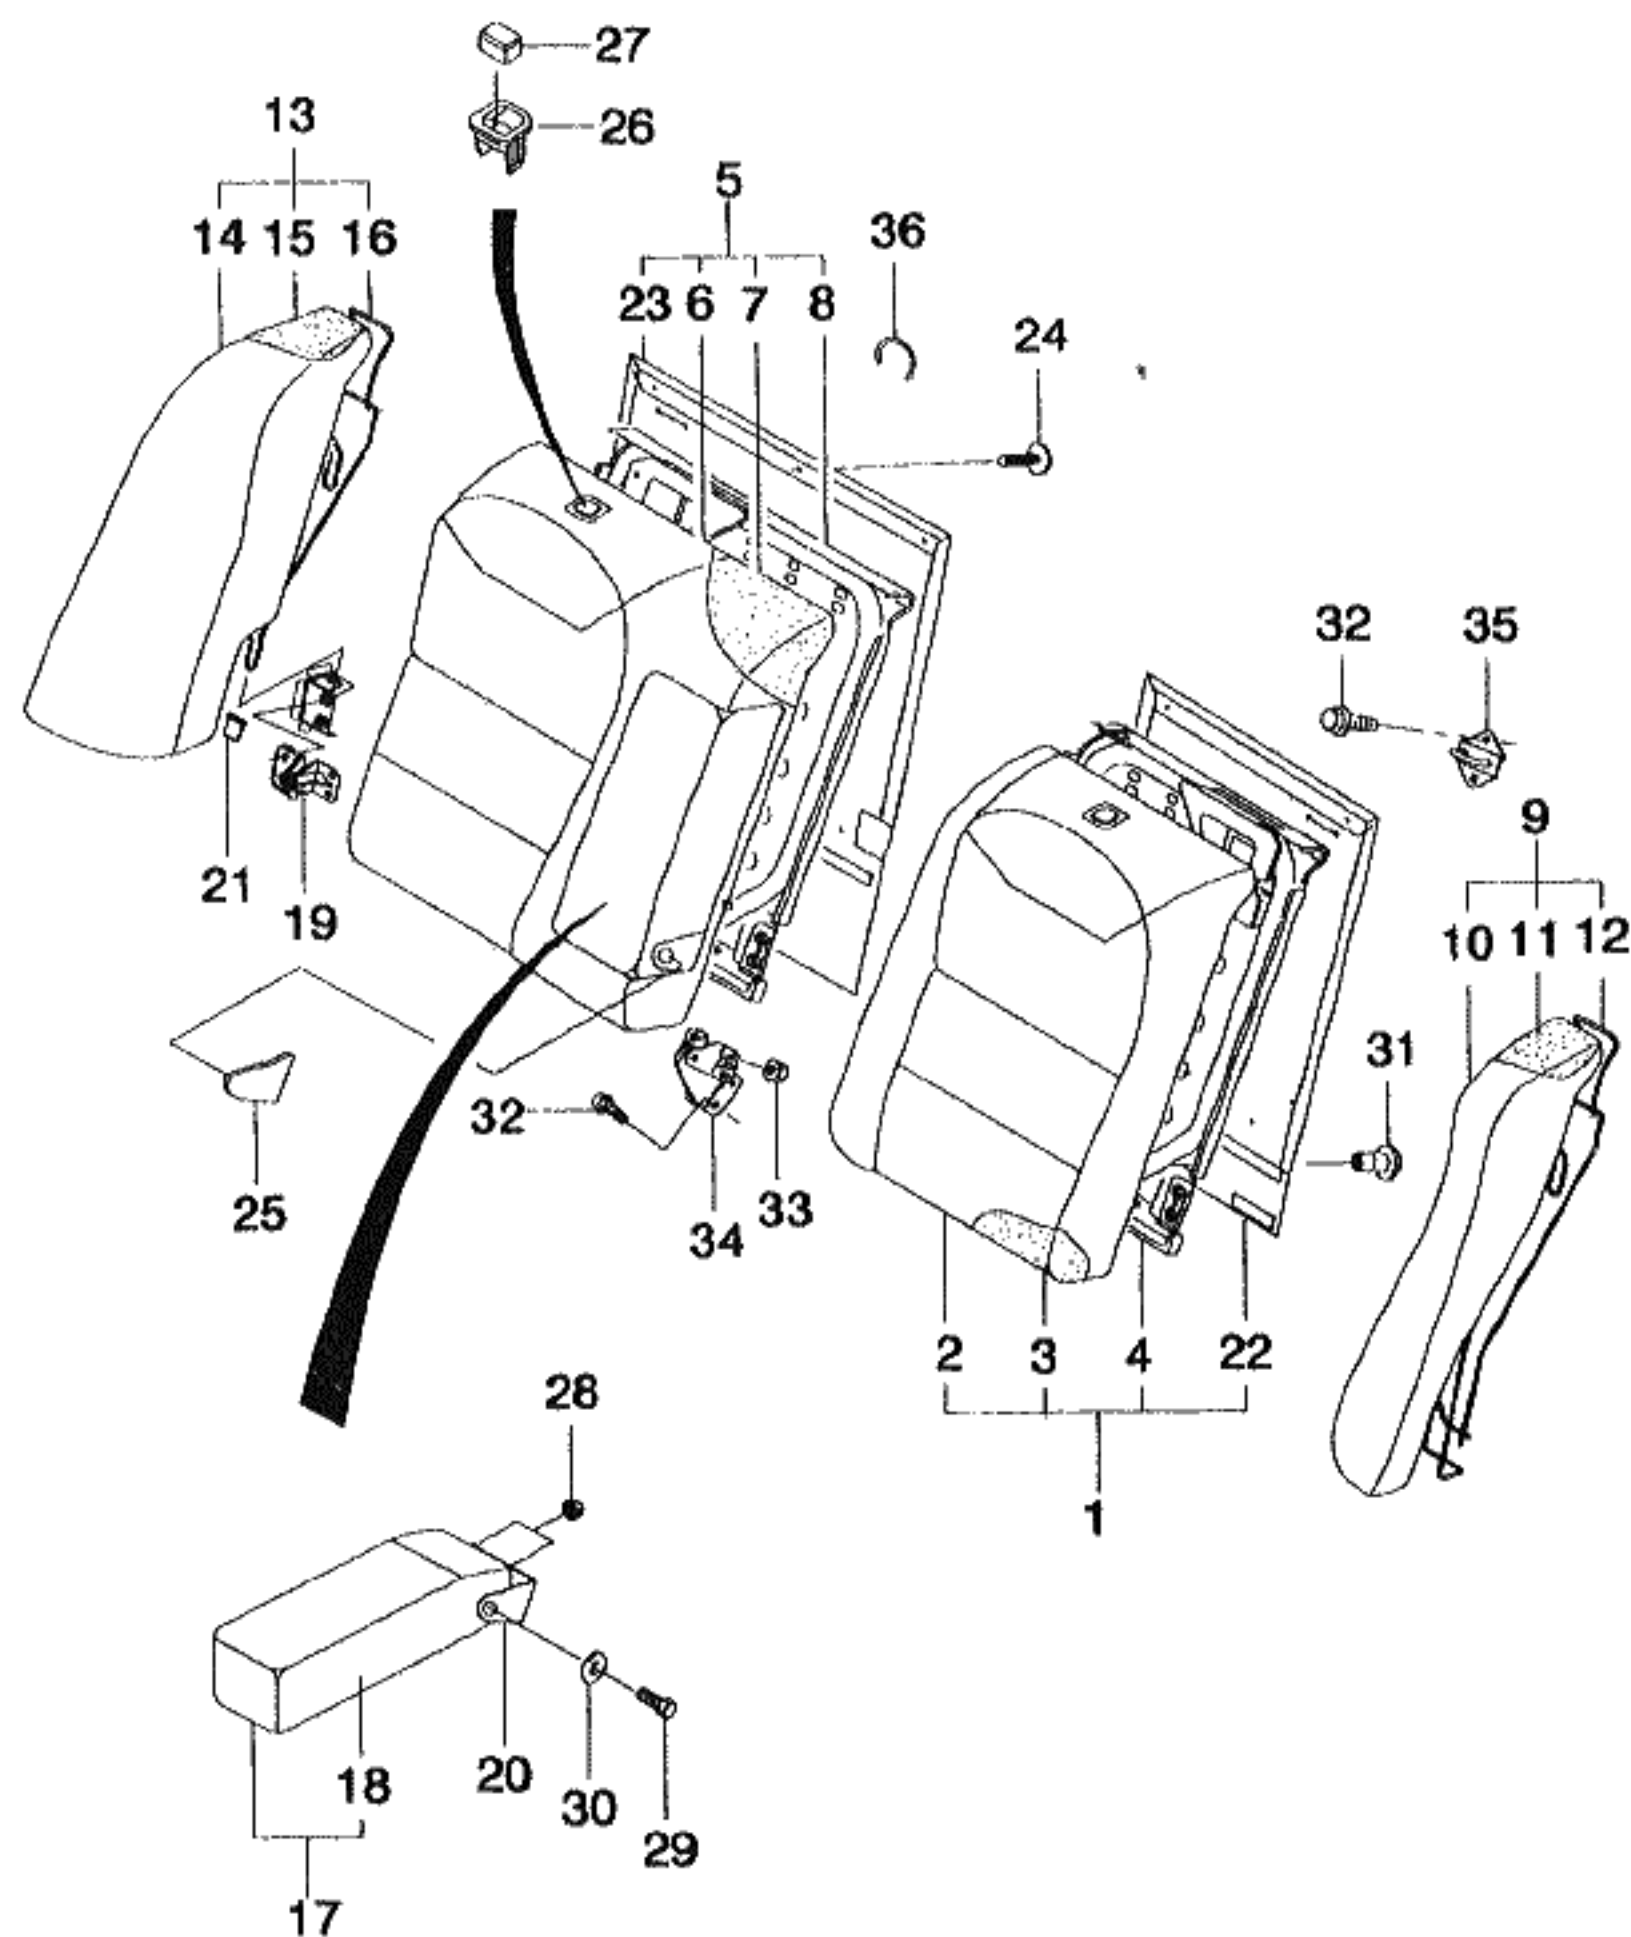


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	96218122	.	S	S	&W6W/W6C	RH	1				
	96243080	.	O	O	&W6R	RH	1				
	[08]		(E)FRAME A-RR SEAT BACK (D)RAHMEN				(F)CADRE (S)ARMADURA				
	96218126	.	S	S		RH	1				
	[09]		(E)SEAT A-RR BACK,SIDE (D)HINTERSITZ,HINTEN				(F)SIEGE ARRIERE-ARRIERE (S)ASIENTO TRASERO-RESPALDO				
	96252941	.	S	.	&82I&W6W	LH	1				B3
	96241859	.	.	S	&82I&W6C	LH	1				BU
	96240287	.	O	O	&82I&W6R	LH	1				BM
	[10]		(E)COVERING A-RR SEAT BACK (D)DECKEL,HINTER,HINTER				(F)COUVERCLE-ARRIERE,ARRIERE (S)CUBIERTA-TRASERO,TRASERO				
	96253445	.	S	.	&82I&W6W	LH	1				
	96253453	.	.	S	&82I&W6C	LH	1				
	96253469	.	O	O	&82I&W6R	LH	1				
	[11]		(E)PAD A-RR SEAT BACK,SIDE (D)UNTERLAG				(F)PATIN (S)COJIN				
	96218123	.	S	S		LH	1				
	[12]		(E)FRAME A-RR SEAT BACK,SIDE (D)RAHMEN				(F)CADRE (S)ARMADURA				
	96218127	.	S	S		LH	1				
	[13]		(E)SEAT A-RR BACK,SIDE (D)HINTERSITZ,HINTEN				(F)SIEGE ARRIERE-ARRIERE (S)ASIENTO TRASERO-RESPALDO				
	96252942	.	S	.	&82I&W6W	RH	1				B4
	96241863	.	.	S	&82I&W6C	RH	1				BV
	96240288	.	O	O	&82I&W6R	RH	1				BN
	[14]		(E)COVERING A-RR SEAT BACK (D)DECKEL,HINTER,HINTER				(F)COUVERCLE-ARRIERE,ARRIERE (S)CUBIERTA-TRASERO,TRASERO				
	96253446	.	S	.	&82I&W6W	RH	1				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

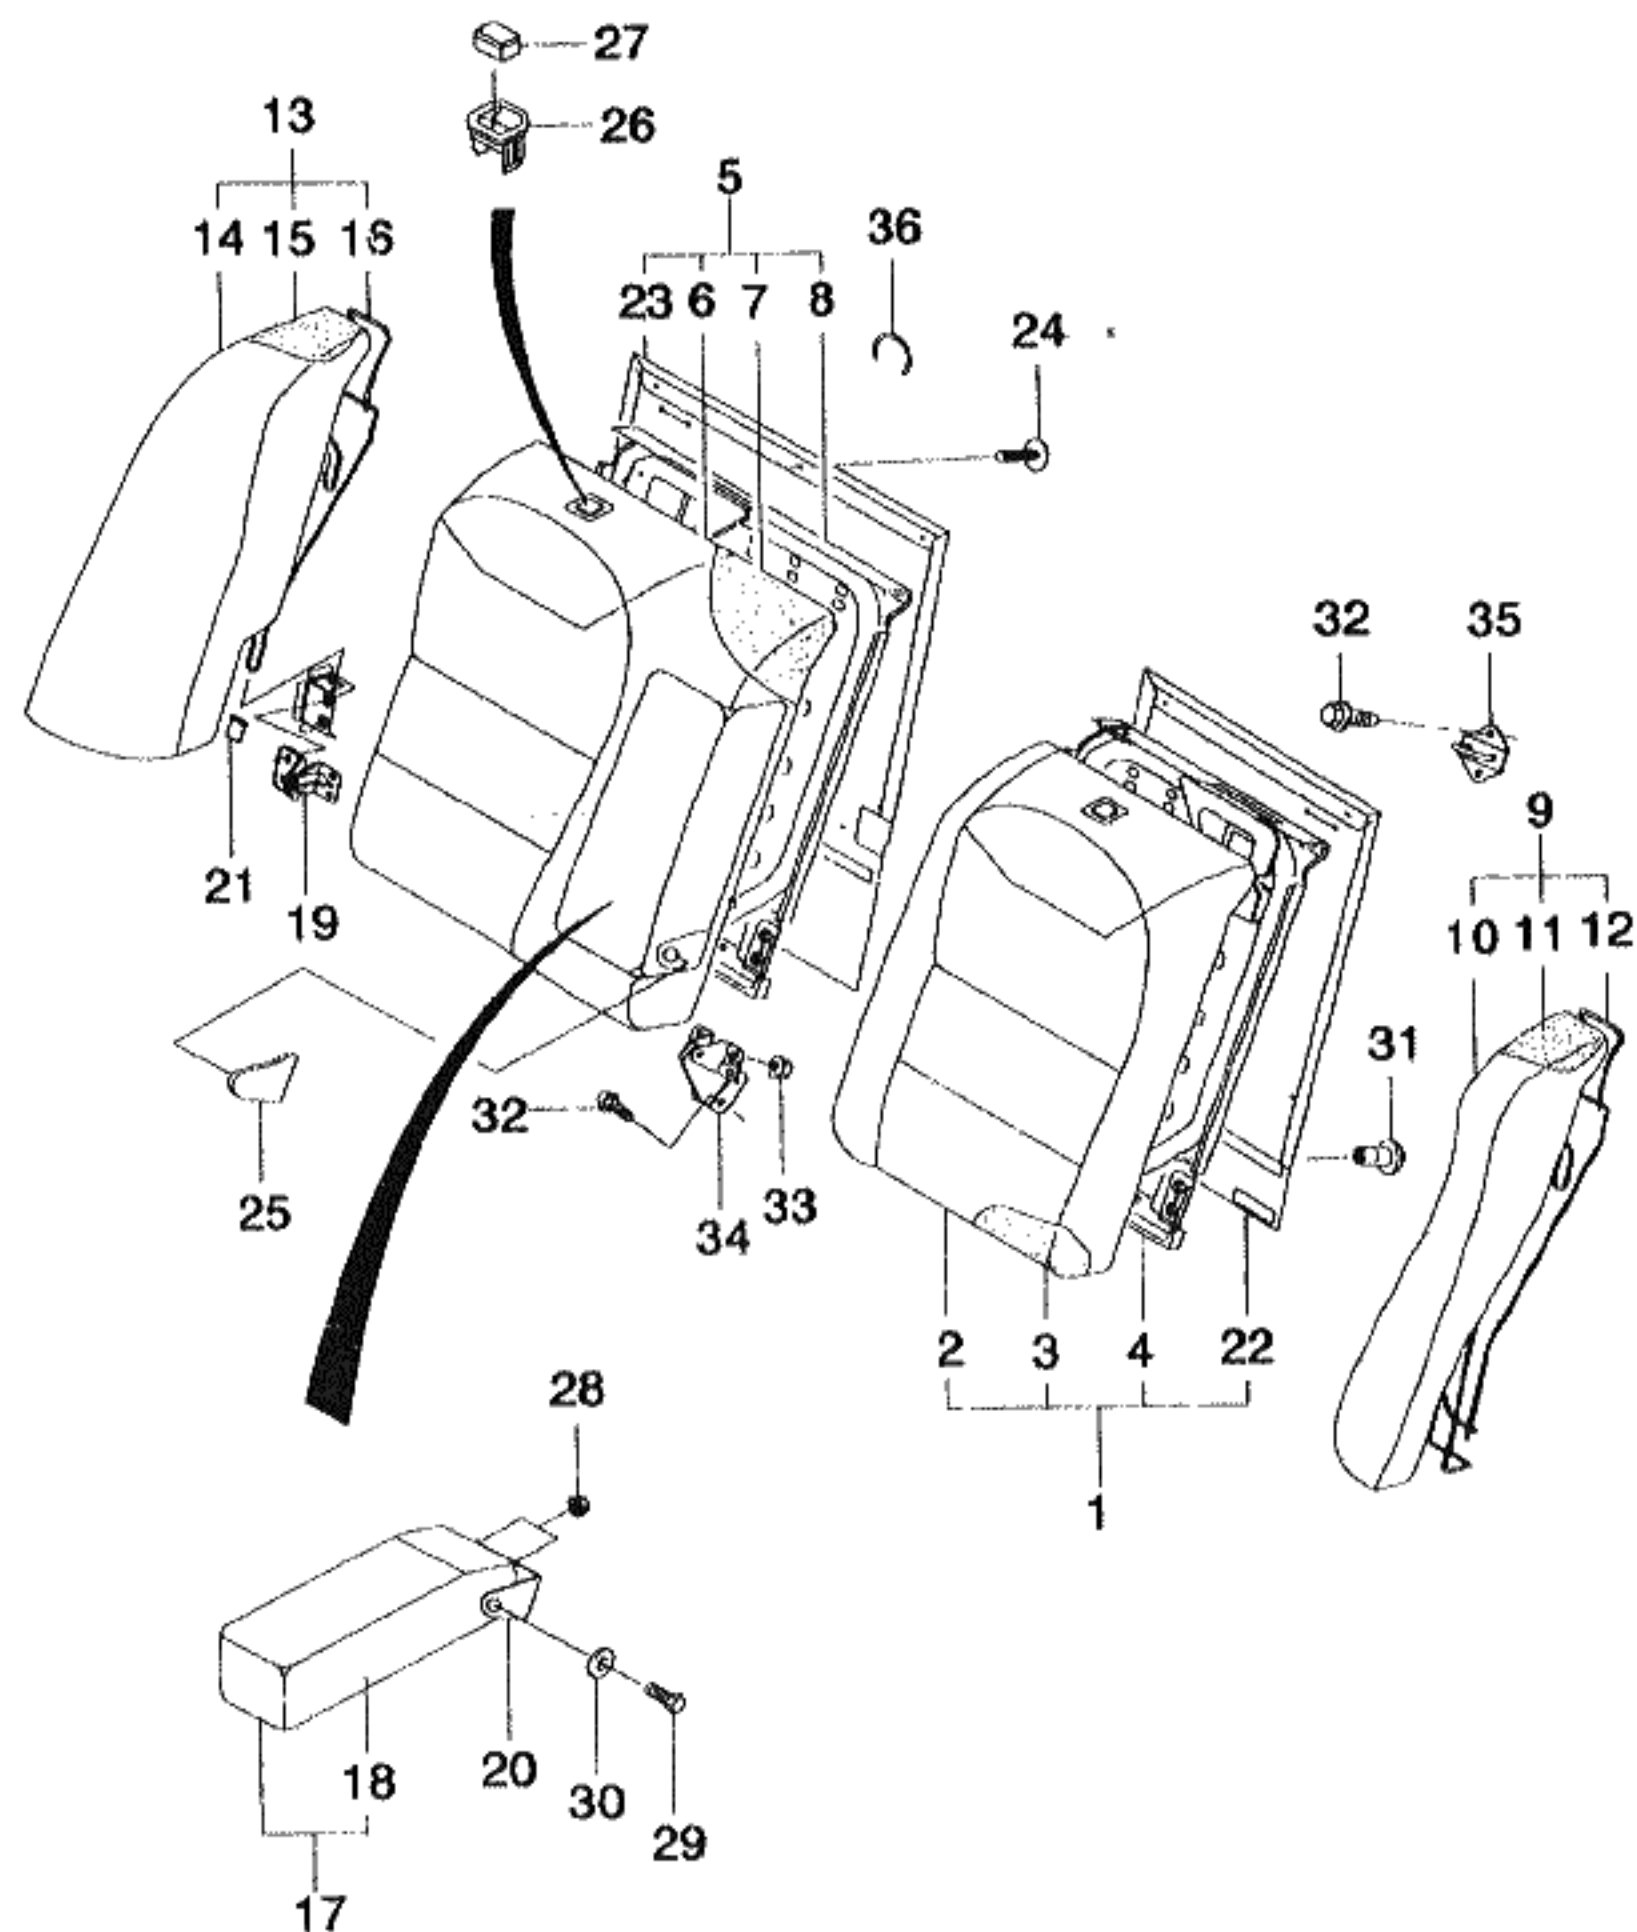


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96253454	.	.	S	&82I&W6C	RH	1				
	96253470	.	O	O	&82I&W6R	RH	1				
	[15]				(E) PAD A-RR SEAT BACK, SIDE (D) UNTERLAG			(F) PATIN (S) COJIN			
	96218124	.	S	S		RH	1				
	[16]				(E) FRAME A-RR SEAT BACK, SIDE (D) RAHMEN			(F) CADRE (S) ARMADURA			
	96218128	.	S	S		RH	1				
	[17]				(E) ARMREST A-RR SEAT BACK (D) ARMLEHNE			(F) APPUI-BRAS (S) APOYABRAZOS			
	96251662	.	S	.	&82I&W6W		1				
	96252998	.	.	S	&82I&W6C		1				
	96253002	.	O	O	&82I&W6R		1				
	[18]				(E) COVERING A-ARM REST (D) DECKEL			(F) COUVERTURE (S) CUBIERTA			
	96253424	.	S	.	&82I&W6W		1				
	96253426	.	.	S	&82I&W6C		1				
	96253430	.	O	O	&82I&W6R		1				
	[19]				(E) BRACKET A-SEAT BACK HINGE (D) TRÄGER			(F) SUPPORT (S) SOPORTE			
	96224027	.	S	S		LH	1				
	96238632	.	S	S		RH	1				
	[20]				(E) BRACKET A-ARMREST (D) TRÄGER			(F) SUPPORT (S) SOPORTE			
	96222487	.	S	S			1				
	[21]				(E) COVER (D) DECKEL			(F) CARTER (S) CUBIERTA			
	96218162	.	S	S	&AM9		2				
	[22]				(E) MAT A-RR SEAT BACK (D) MATTE			(F) TAPIS (S) ESTERA			

LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC	M = MANUAL T/A
CDX = 2.0 DOHC	A = AUTOMATIC T/A
	. = COMMON


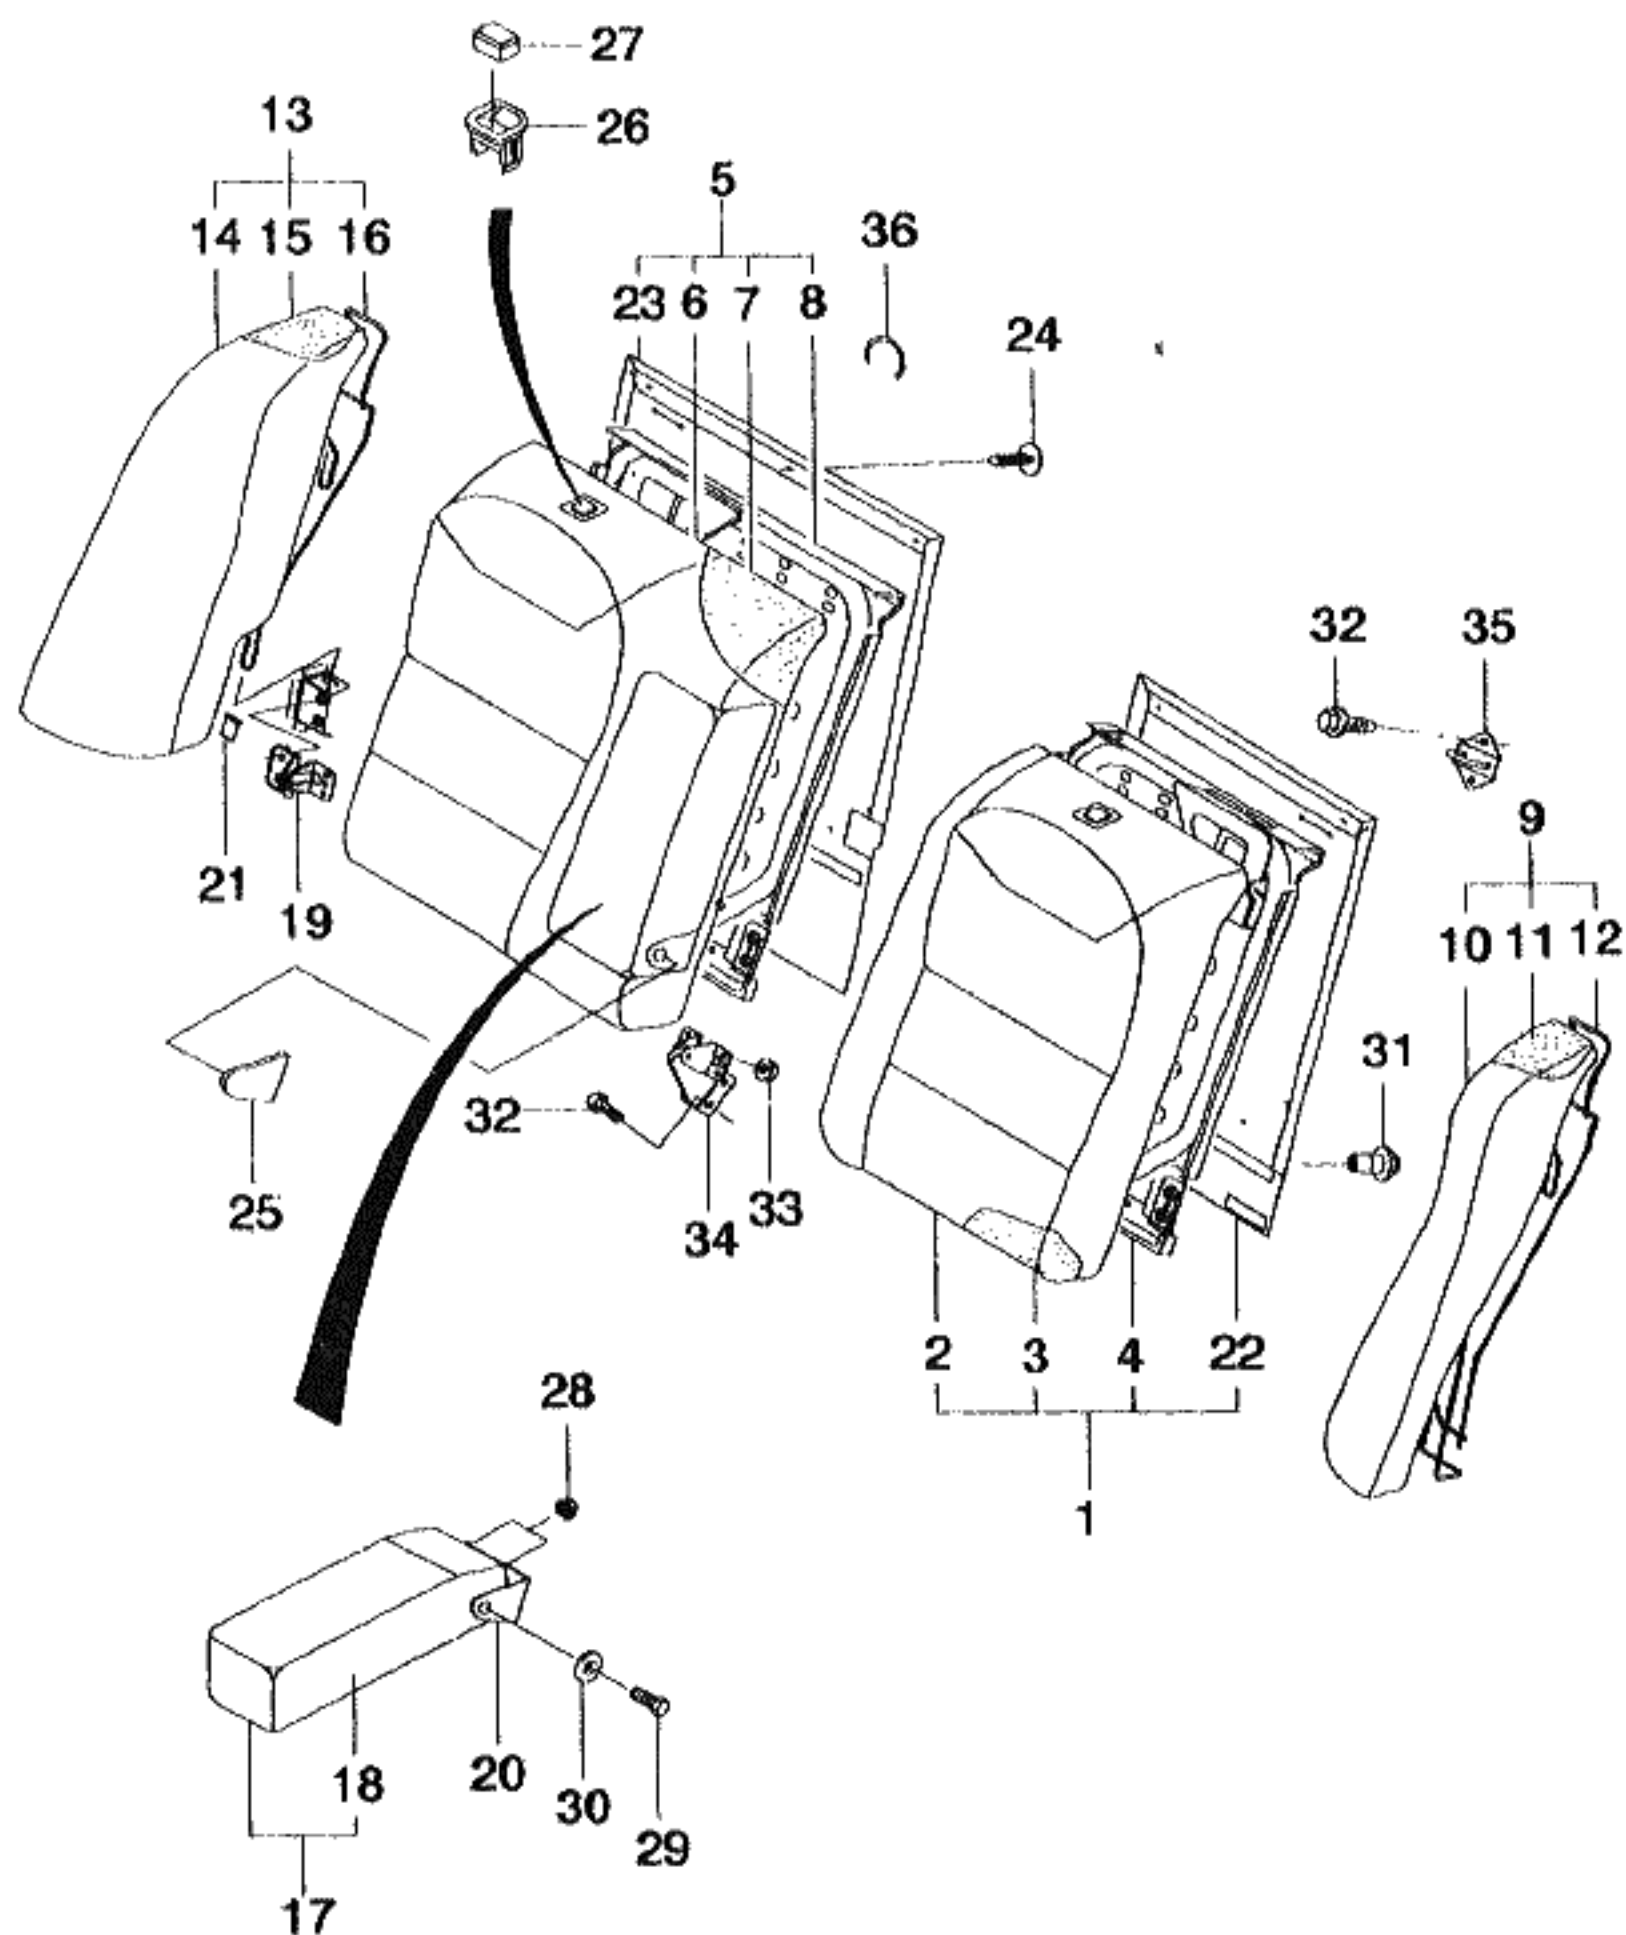


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	96240295	.	S	S			LH 1				
	[23]				(E)MAT A-RR SEAT BACK (D)MATTE		(F)TAPIS (S)ESTERA				
	96240296	.	S	S			RH 1				
	[24]				(E)CLIP (D)KLEMME		(F)ATTACHE (S)GRAPA				
	09409-07326	.	S	S			LH 8				
	09409-07326	.	S	S			RH 10				
	[25]				(E)COVER-BRACKET ARMREST (D)DECKEL		(F)COUVERTURE (S)CUBIERTA				
	96253480	.	S	S	&821		1				
	[26]				(E)COLLAR-LOCK RR BACK (D)KRAGEN		(F)COLLIER (S)CASQUILLO				
	96240298	.	S	S	&821		2				
	[27]				(E)KNOB-LOCK RR BACK (D)KNOPF		(F)BOUTON (S)PERILLA				
	96240300	.	S	S	&821		2				
	[28]				(E)NUT-FLANGE (D)MUTTER		(F)ECROU (S)TUERCA				
	08316-25085	.	S	S			2				
	[29]				(E)BOLT (D)SCHRAUBE		(F)BOULON (S)PERNO				
	09119-06027	.	S	S			2				
	[30]				(E)BUSH (D)LAGERFUTTER		(F)COUSSINET (S)BUJE				
	09301-10002	.	S	S			2				
	[31]				(E)CLIP A-TRIM (D)KLEMME		(F)ATTACHE (S)GRAPA				
	96217712	.	S	S			2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

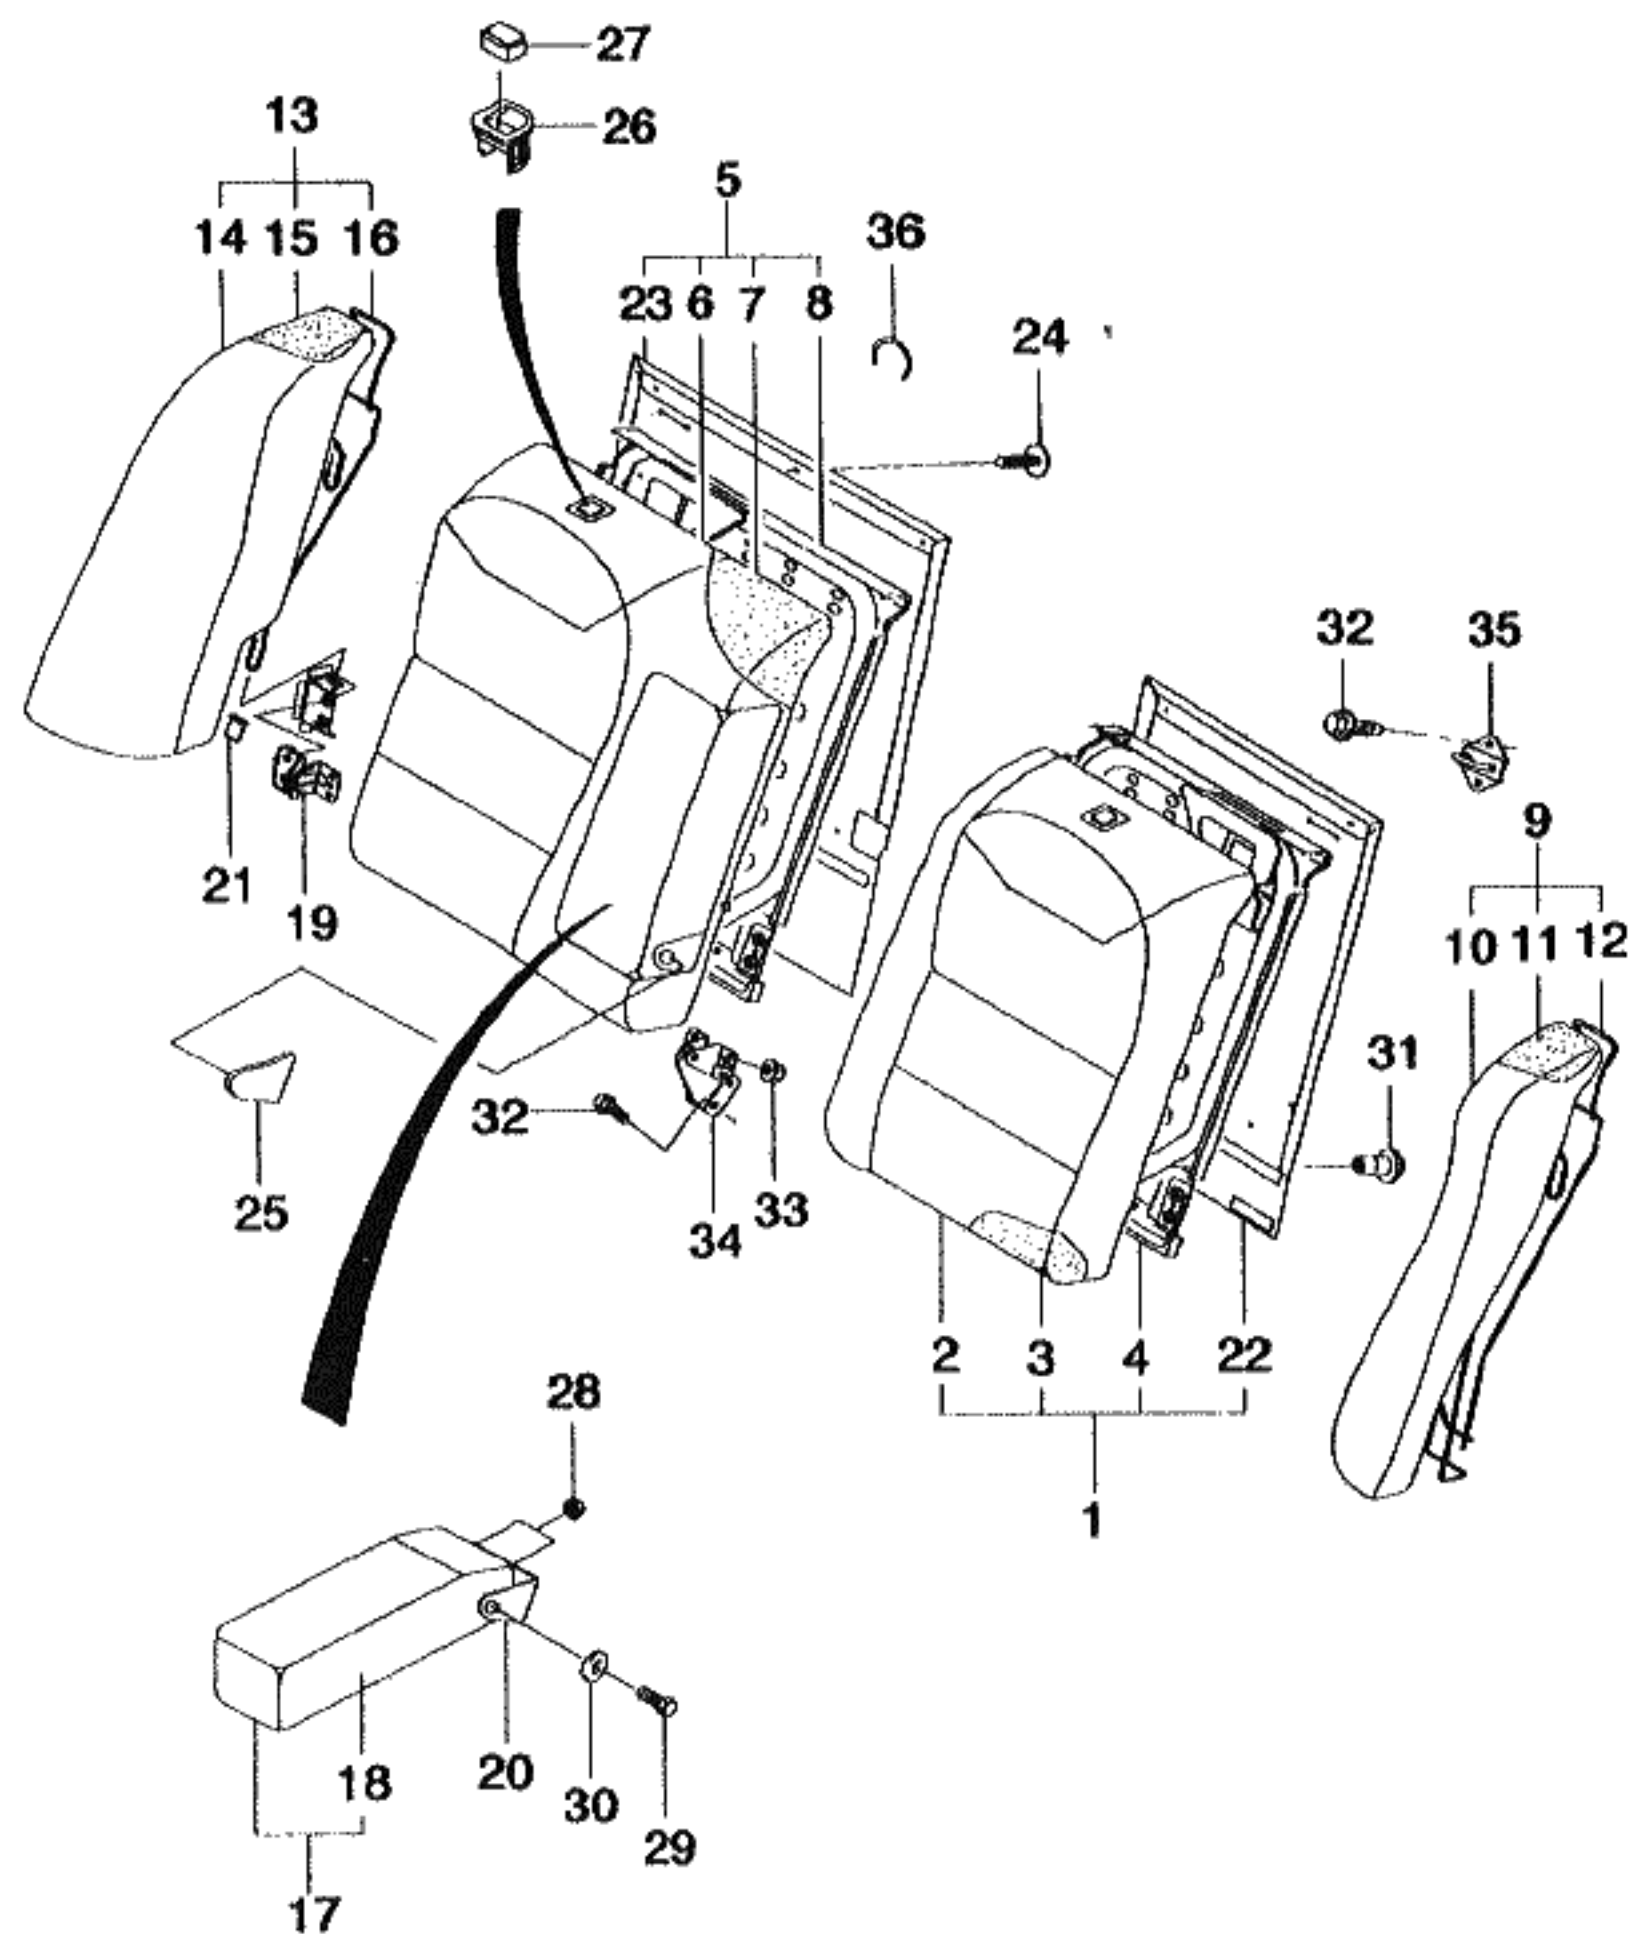


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[32] 09116-08003	(E)BOLT-W/WASHER (D)SCHRAUBE	S	S			(F)BOULON (S)PERNO	A			
	[33] 08361-28083	(E)NUT-W/WASHER (D)MUTTER	S	S			(F)ECROU (S)TUERCA	4			
	[34] 96194439	(E)BRACKET A-HINGE (D)TRÄGER	S	S			(F)SUPPORT (S)SOPORTE	1			
	[35] 96303088	(E)STRIKER A (D)SCHLÄGER	S	S			(F)GRÉVISTE (S)HUELGUISTA	2			
	[36] 06616858	(E)CLIP-RING (D)KLEMME	S	S			(F)ATTACHE (S)GRAPA	A			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					


7550 FRONT SEAT BELT

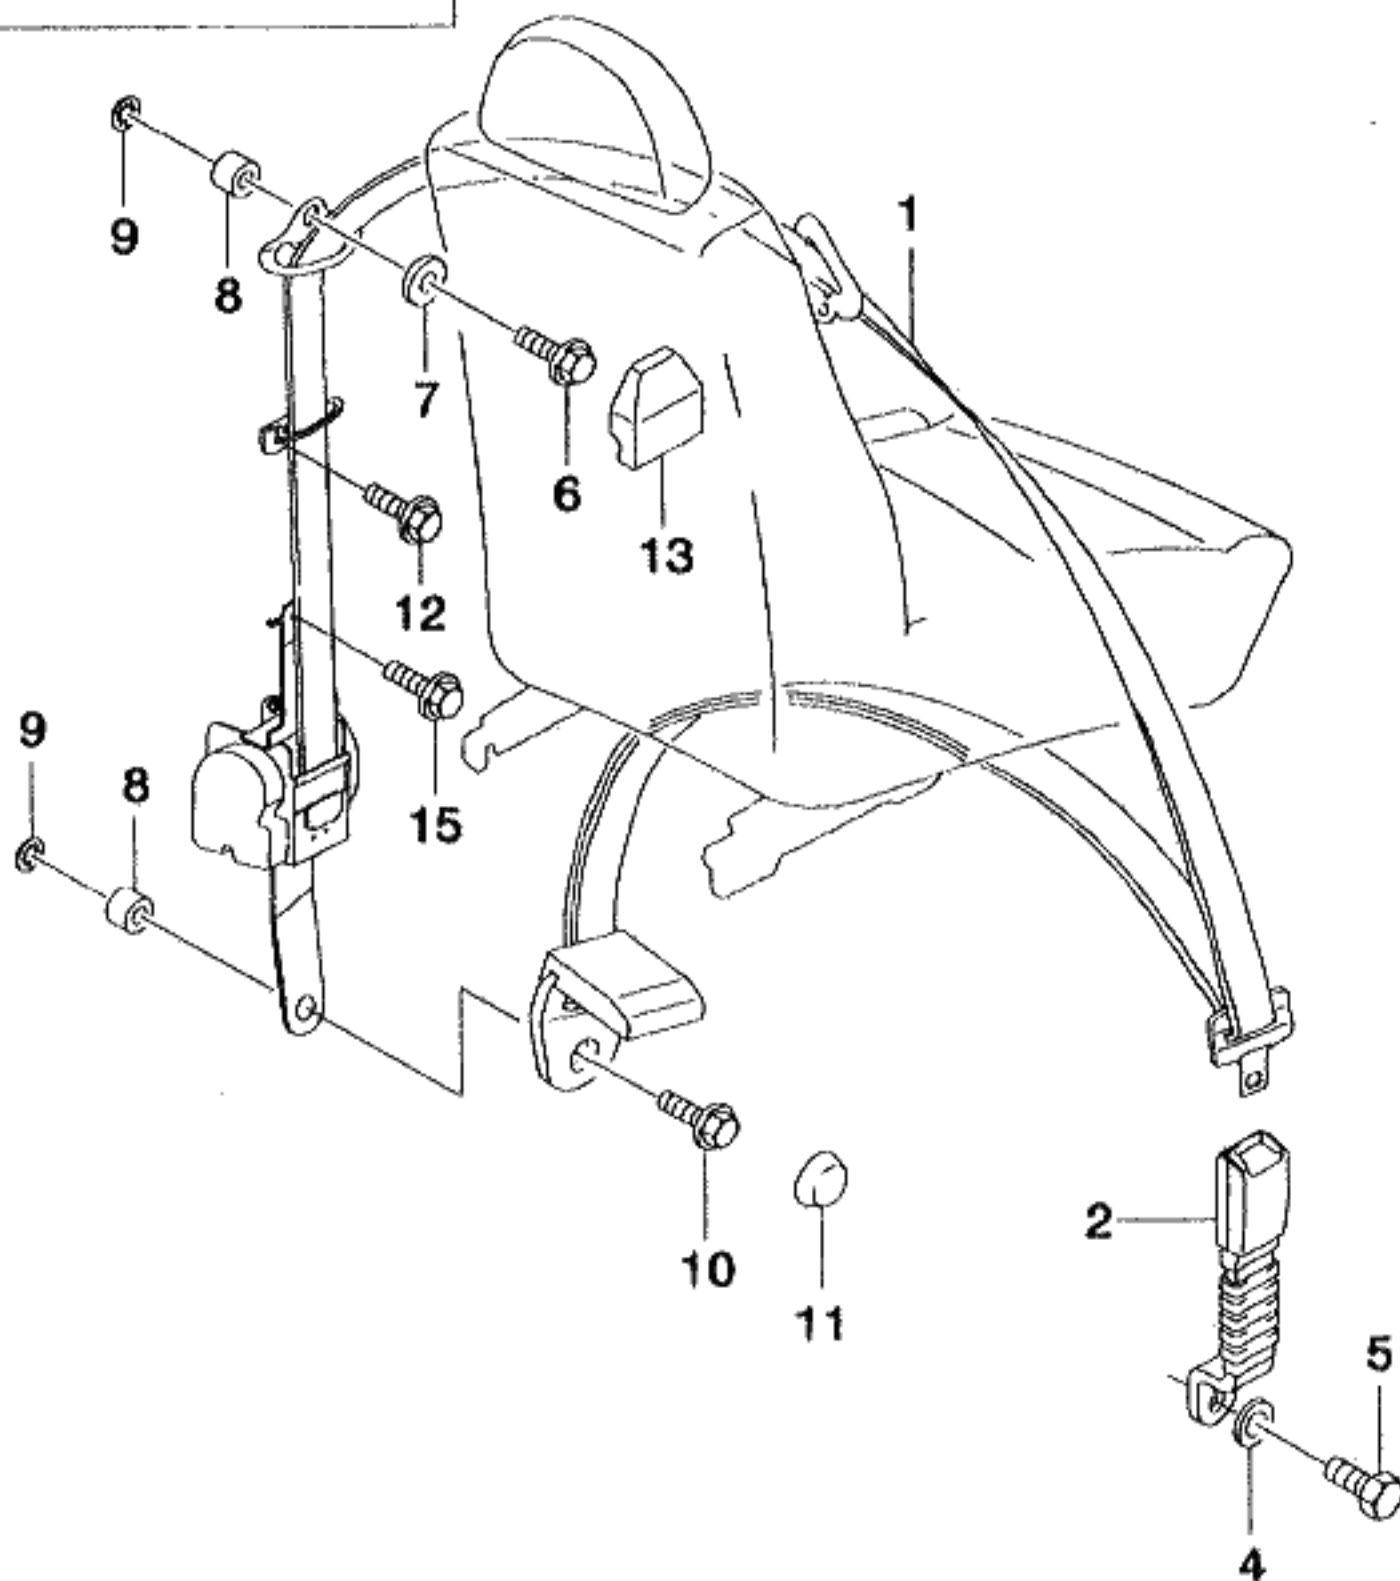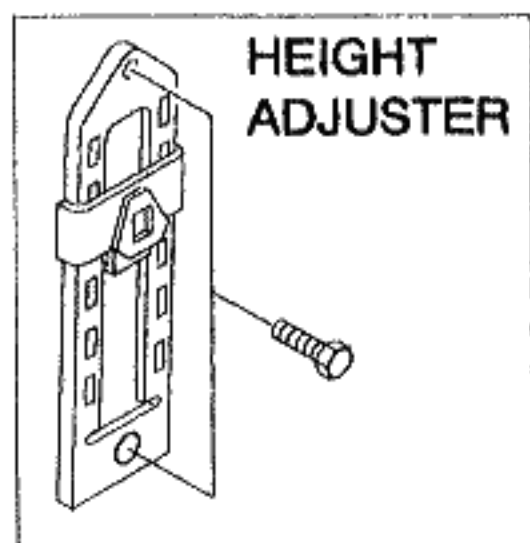


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	CPZ4201	.	S	S			2					
	[10]				(E)BOLT (D)SCHRAUBE,FLANSCH		(F)BOULON-AILETTE (S)PERNO-PESTAÑA					
	CPZ0158	.	S	S			1			L42		
	[11]				(E)CAP-BOLT,FR SEAT BELT (D)DECKEL GRIFF		(F)CHAPEAU (S)TAPA					
	96236550	.	S	S			2					
	[12]				(E)SCREW-TAPPING (D)SCHRAUBE		(F)VIS (S)TORNILLO					
	03110-48135	.	S	S			4					
	[13]				(E)COVER-PILLAR (D)DECKEL		(F)COUVERTURE (S)CUBIERTA					
	CPF1212	.	S	S			2					
	[15]				(E)SCREW-CR MACHINE (D)SCHRAUBE		(F)VIS (S)TORNILLO					
	02146-06203	.	S	S	&ASK/AS7		2					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

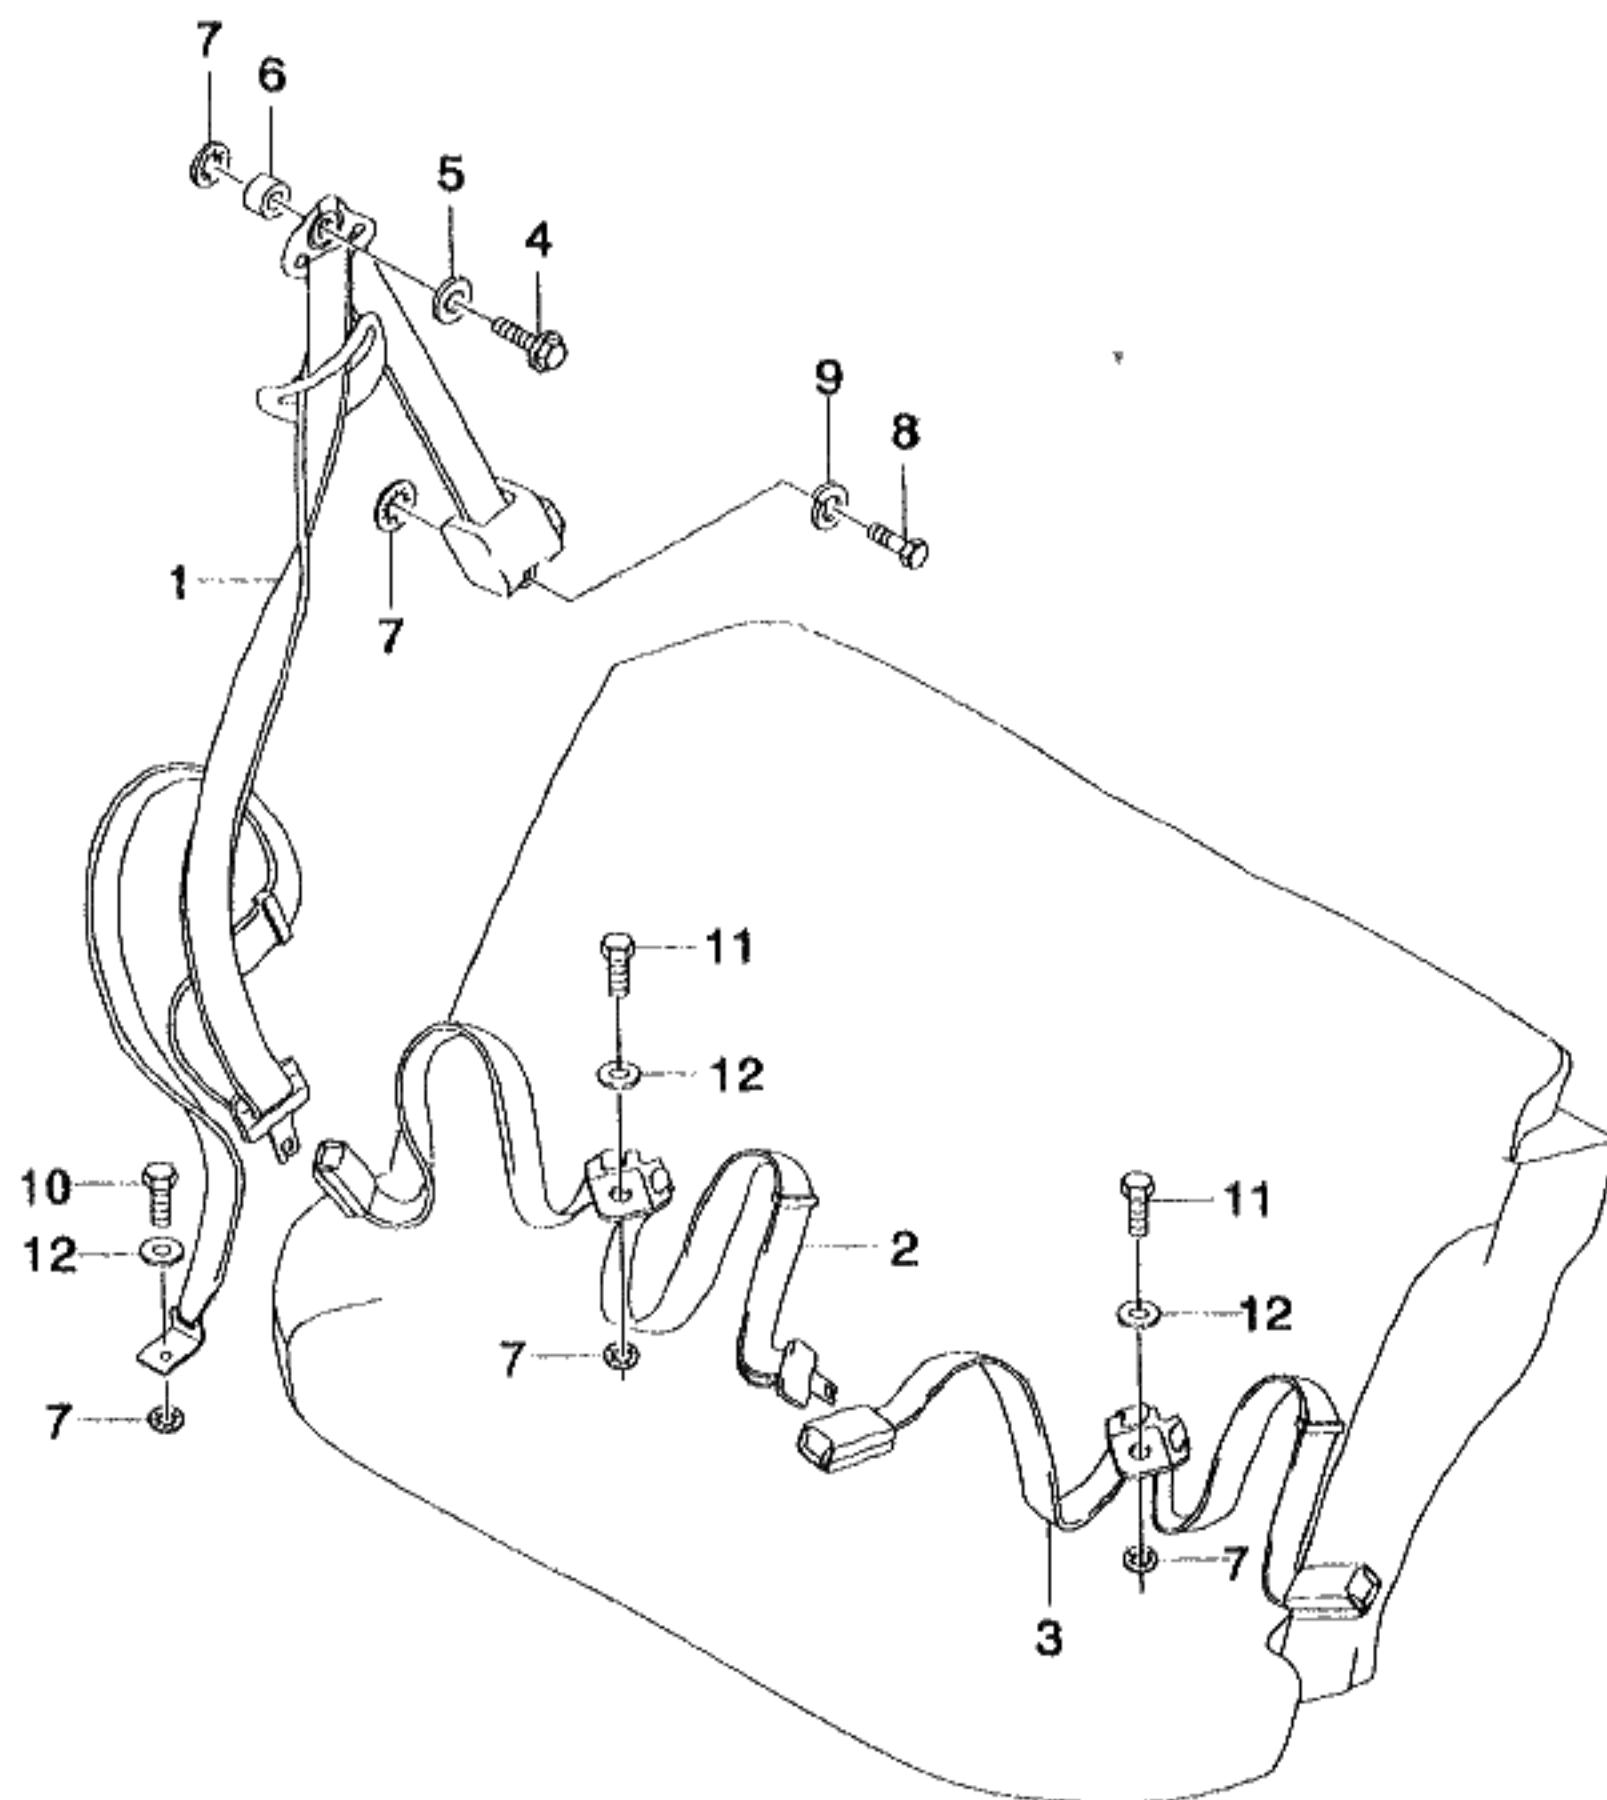

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E)BELT A-SEAT,RR (D)SICHERHEITSGURT				(F)CEINTURE-SIEGE ARRIERE (S)CINTURON-ASIENTO TRASERO					
96240664		.	S	S		LH	1			KE	
96240665		.	S	S		RH	1			KF	
96240662		.	A	A	&AK9&VB4	LH	1			KO	
96240663		.	A	A	&AK9&VB4	RH	1			KD	
[02]		(E)BELT A-PELVIS RR SEAT,CTR (D)SCHOBGURT,MITTE				(F)CEINTURE-PELVIS CENTRE (S)CINTURON-CENTRO PELVIS					
96240669		.	S	S		RH	1			KK	
96240670		.	A	A	&VB4	RH	1			KL	
[03]		(E)BUCKLE A-RR SEAT BELT (D)SCHNALLE,SICHERHEITSGURT				(F)BOUCLE-CEINTURE SIEGE (S)HEBILLA-CINTURON					
96240672		.	S	S		LH	1			KM	
[04]		(E)BOLT (D)SCHRAUBE,FLANSCH				(F)BOULON-AILETTE (S)PERNO-PESTAÑA					
CPZ01440		.	S	S			1				
[05]		(E)BEARING-SHOULDER (D)KUGELLAGER				(F)ROULEMENT (S)CONJINETE					
CPF11010		.	S	S			1				
[06]		(E)SPACER (D)DISTANZSTÜCK				(F)ENTRETOISE (S)ESPACIADOR					
CPZ46090		.	S	S			1				
[07]		(E)WASHER-TOOTH (D)DICHTUNGSRING				(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE					
CPZ46010		.	S	S			1				
[08]		(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO					
CPZ03380		.	S	S			1				
[09]		(E)WASHER-SPRING (D)DICHTUNGSRING				(F)RONDELLE (S)ARANDELA					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

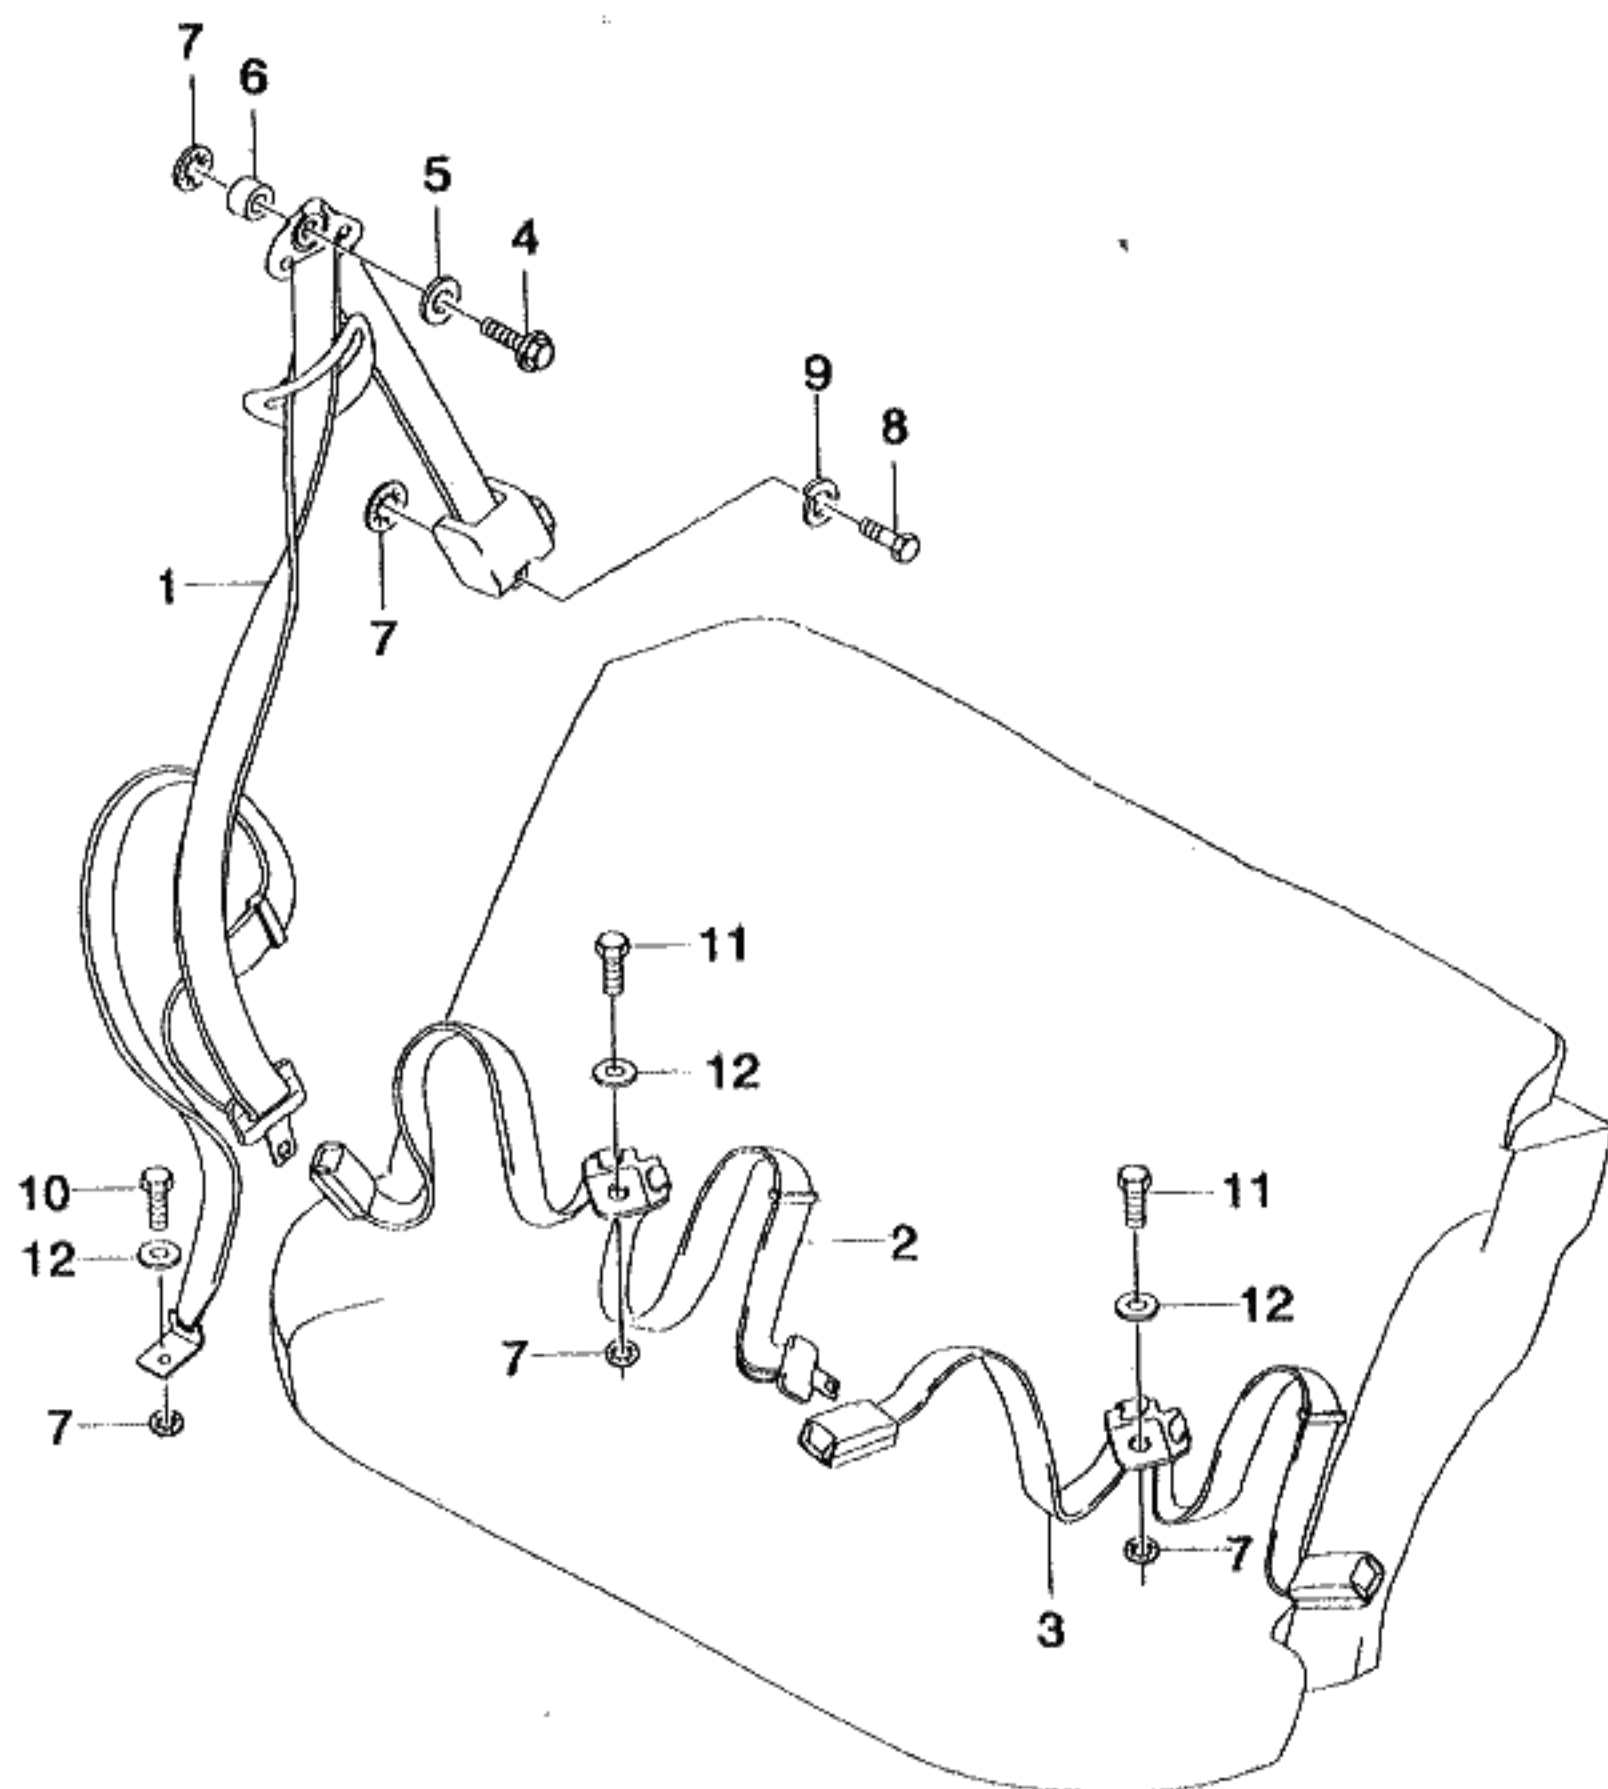


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	CPZ41010	.	S	S			1				
	[10]		(E)BOLT				(F)BOULON				
			(D)SCHRAUBE				(S)PERNO				
	CPZ03420	.	S	S			1				
	[11]		(E)BOLT				(F)BOULON				
			(D)SCHRAUBE				(S)PERNO				
	CPZ03410	.	S	S			1				
	[12]		(E)WASHER				(F)RONDELLE				
			(D)DICHTUNGSRING				(S)ARANDELA				
	CPZ43220	.	S	S			1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC						M = MANUAL T/A					
CDX = 2.0 DOHC						A = AUTOMATIC T/A					
						. = COMMON					

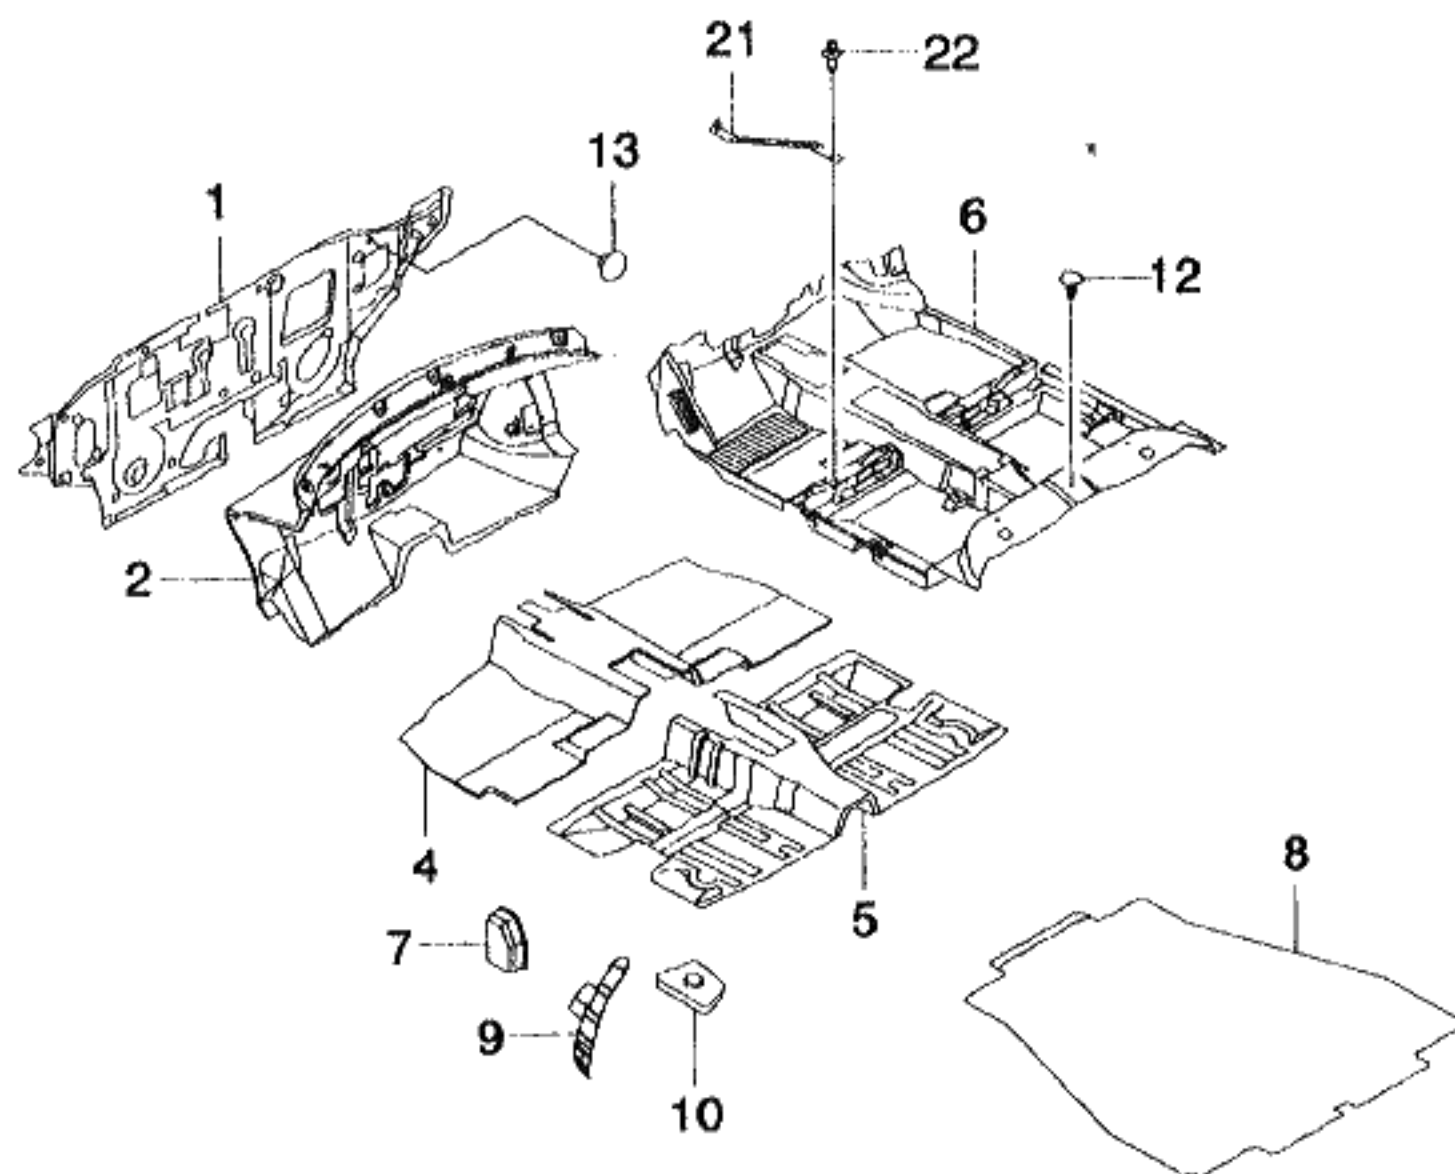


14	15	16	17

KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
	[01]	(E)INSULATION-DASH PNL,OTR (D)ISOLIERUNG				(F)ISOLATION (S)AISLAMIENTO						
	96233379	M	S	S		1					HA	
	96233380	A	O	O		1					HB	
	[02]	(E)INSULATION-DASH PNL,INR (D)ISOLIERUNG				(F)ISOLATION (S)AISLAMIENTO						
	96243078	M	S	S		1					HJ	
	96194492	A	O	O		1					HH	
	[03]	(E)PAD-FOOTREST (D)UNTERLAG				(F)PATIN (S)COJIN						
	96240512	.	S	S		1						
	[04]	(E)INSULATION-FLOOR PNL,FR (D)ISOLIERUNG				(F)ISOLATION (S)AISLAMIENTO						
	96194501	.	S	S		1					HM	
	[05]	(E)INSULATION-FLOOR PNL,RR (D)ISOLIERUNG				(F)ISOLATION (S)AISLAMIENTO						
	96194502	.	S	S		1						
	[06]	(E)LINING A-FLOOR PANEL (D)AUSKLEIDUNG				(F)GARNITURE (S)FORRO-PANEL DEL PISO						
	96240508	.	S	S	&82I&B58	1						
	[07]	(E)INSULATION-B PILLAR (D)ISOLIERUNG,B SÄULE				(F)ISOLATION-B PILIER (S)AISLAMIENTO-PILAR B						
	96194504	.	S	S	&ASK/AS7	LH 1						
	96194505	.	S	S	&ASK/AS7	RH 1						
	[08]	(E)LINING A-FLOOR PANEL,TRUN (D)AUSKLEIDUNG				(F)GARNITURE (S)FORRO-PANEL DEL PISO						
	96241792	.	S	S	&AM9	1						
	[09]	(E)INSULATION-W/HOUSE,RR (D)ISOLIERUNG				(F)ISOLATION (S)AISLAMIENTO						
	96244403	.	S	S		LH 1						
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

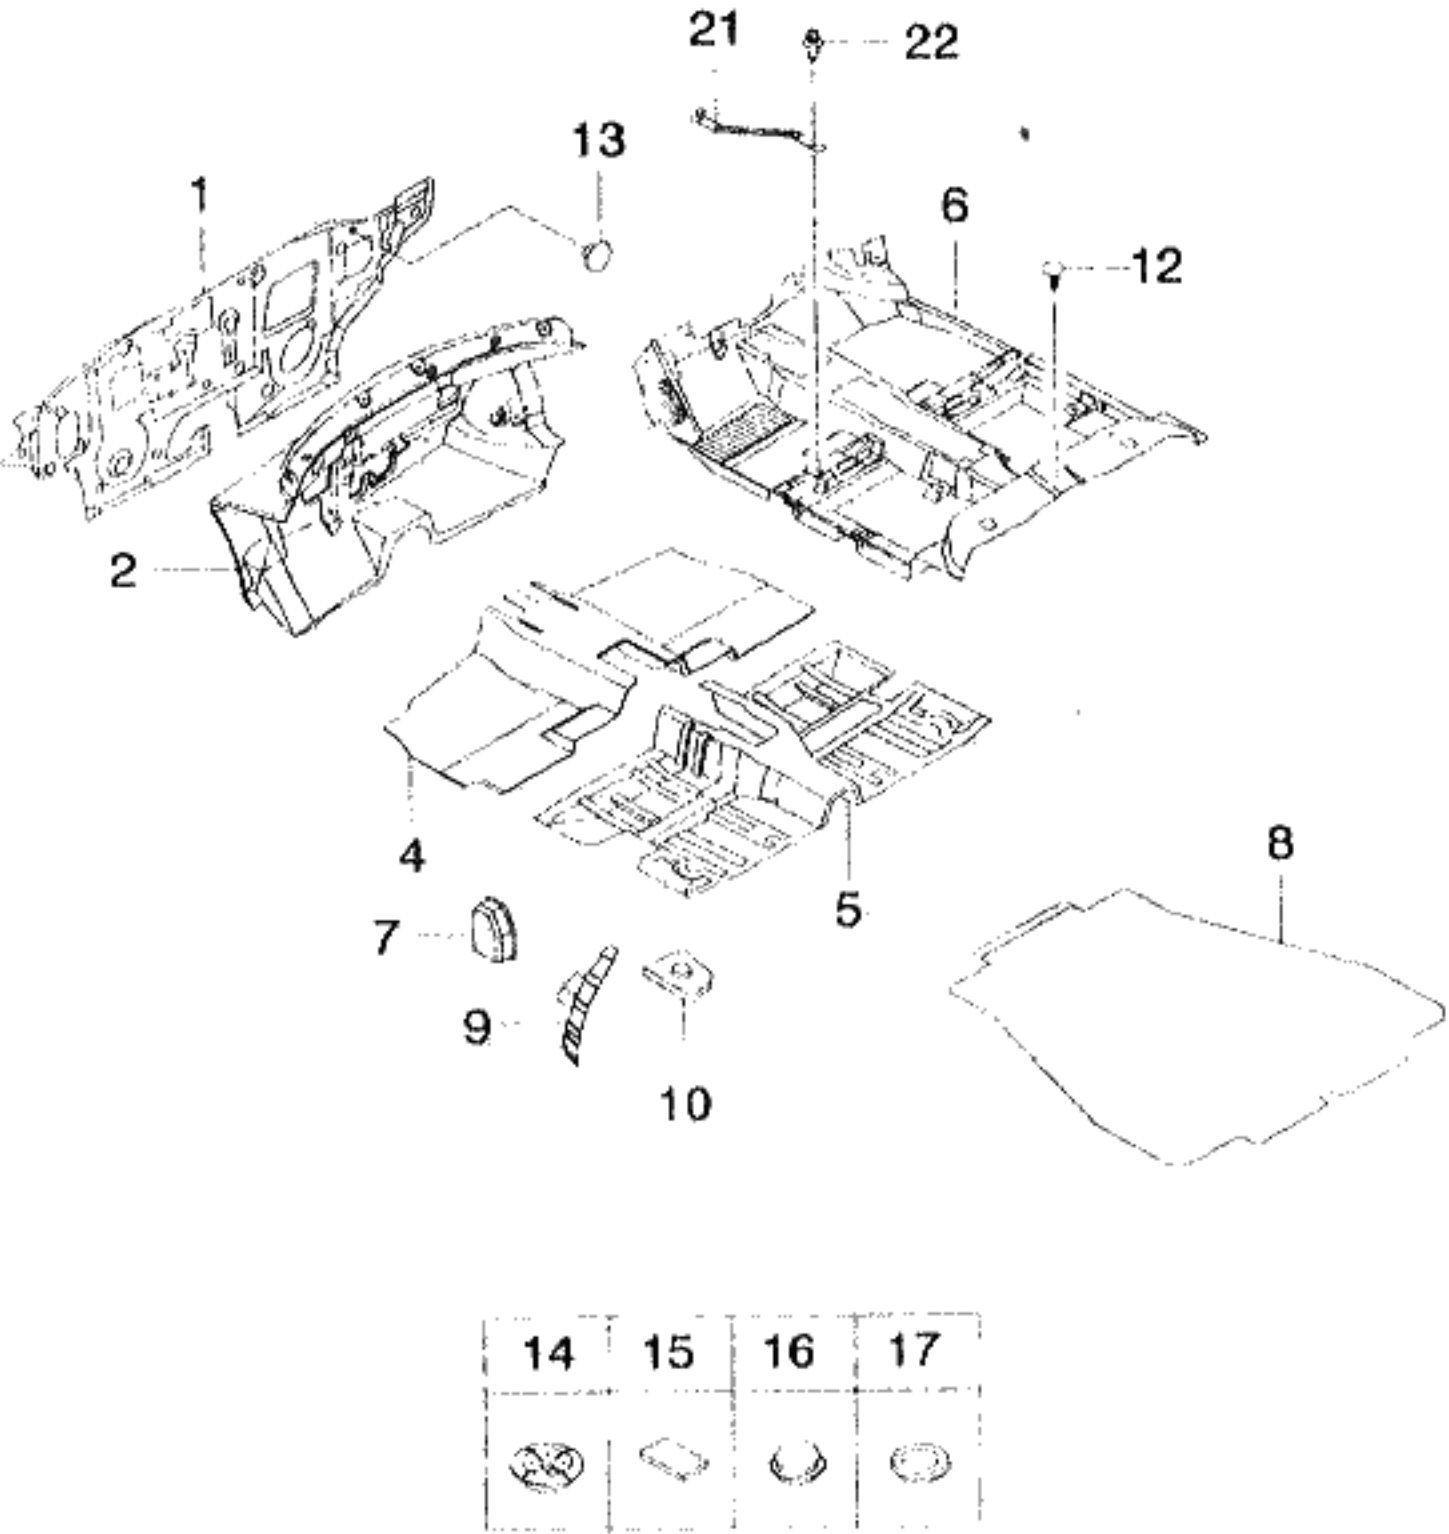


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96244404	.	S	S								
	[10]				(E)INSULATION-STRUT,RR (D)ISOLIERUNG							
	96244407	.	S	S								
	96244408	.	S	S								
	[12]				(E)CLIP (D)KLEMME							
	09409-06312	.	S	S								
	[13]				(E)CLIP (D)KLEMME							
	09409-05311	.	S	S								
	[14]				(E)PLUG (D)STÖPSEL							
	09250-30005	.	S	S								
	[15]				(E)DEADENER (D)ENDSTÜCK							
	96244896	.	S	S								
	[16]				(E)PLUG (D)STÖPSEL							
	09241-21001	.	S	S								
	[17]				(E)PLUG (D)STÖPSEL							
	09250-32002	.	S	S								
	[21]				(E)HOOK A-SERVICE MAT (D)HAKEN							
	96228752	.	S	S								

LEVEL				T/A(TRANSAXLE)			
S X = 2.0 SOHC				M = MANUAL T/A			
CDX = 2.0 DOHC				A = AUTOMATIC T/A			
				. = COMMON			

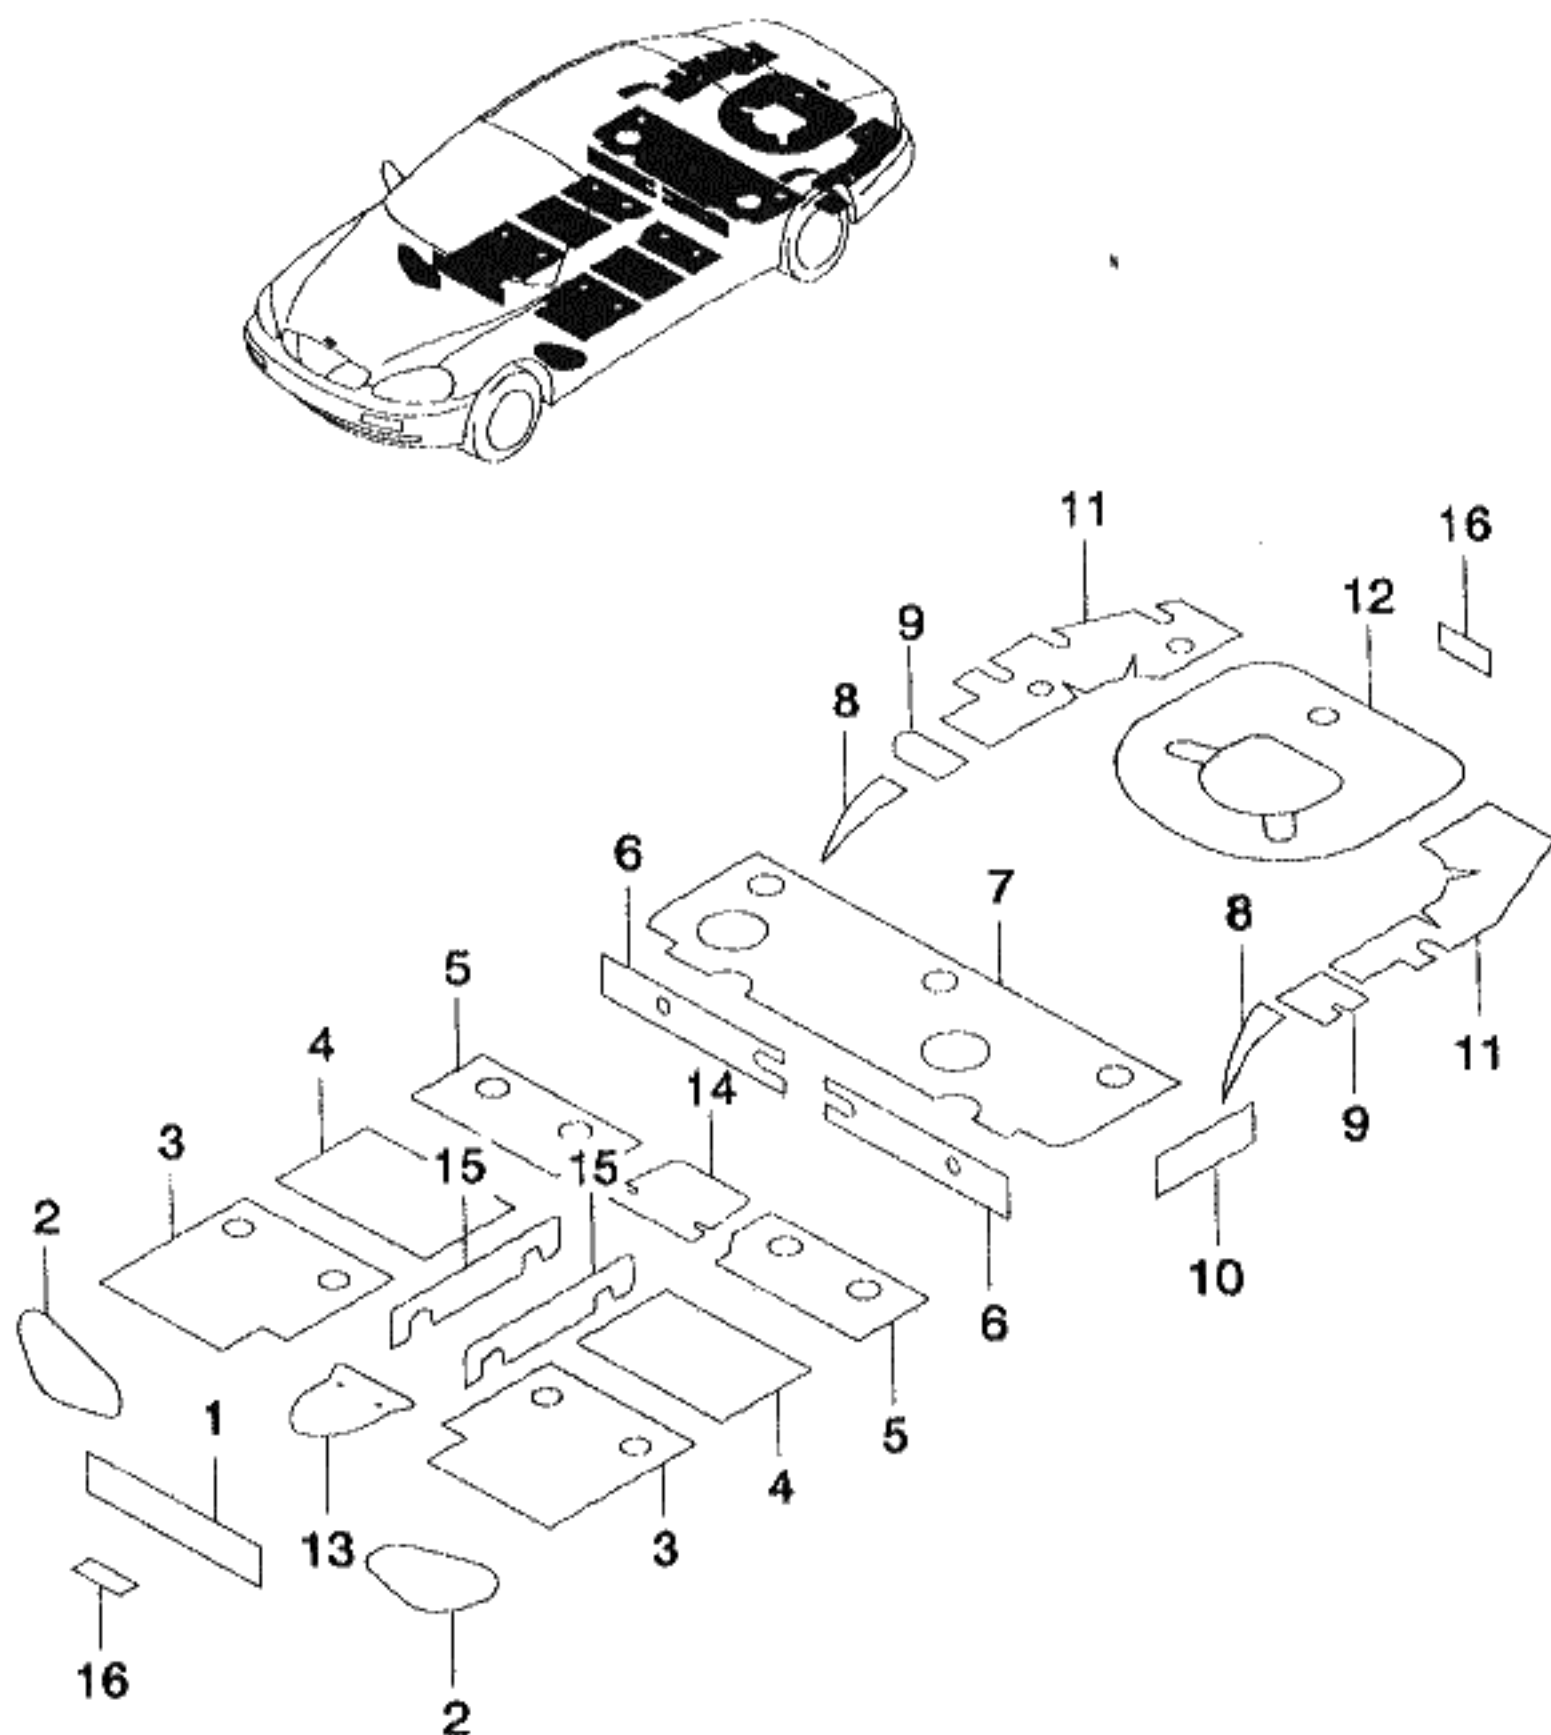

KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X								C D X
	[01] 96194462	(E) DEADENER-DASH PANEL,OTR (D)ENDSTÜCK S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR 1						
	[02] 96194463	(E) DEADENER-WHEELHOUSE,INR (D)ENDSTÜCK S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR 2						
	[03] 96194467 96194468	(E) DEADENER-FLOOR PANEL,FR (D)ENDSTÜCK,TÜRVERKLEIDUNG S S S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR LH 1 RH 1						
	[04] 96217820	(E) DEADENER-FLOOR PANEL,CTR (D)ENDSTÜCK S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR 2						
	[05] 96194470 96194471	(E) DEADENER-FLOOR PANEL,RR (D)ENDSTÜCK,TÜRVERKLEIDUNG S S S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR LH 1 RH 1						
	[06] 96194472	(E) DEADENER-RR SEAT,FR (D)ENDSTÜCK S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR 2						
	[07] 96194474	(E) DEADENER-RR SEAT (D)ENDSTÜCK S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR 1						
	[08] 96194476	(E) DEADENER-RR W/HOUSE,FR (D)ENDSTÜCK S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR 2						
	[09] 96194478 96194479	(E) DEADENER-RR W/HOUSE,RR (D)ENDSTÜCK S S S S			(F)ASSOURDISSEUR (S)AMORTIGUADOR LH 1 RH 1						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

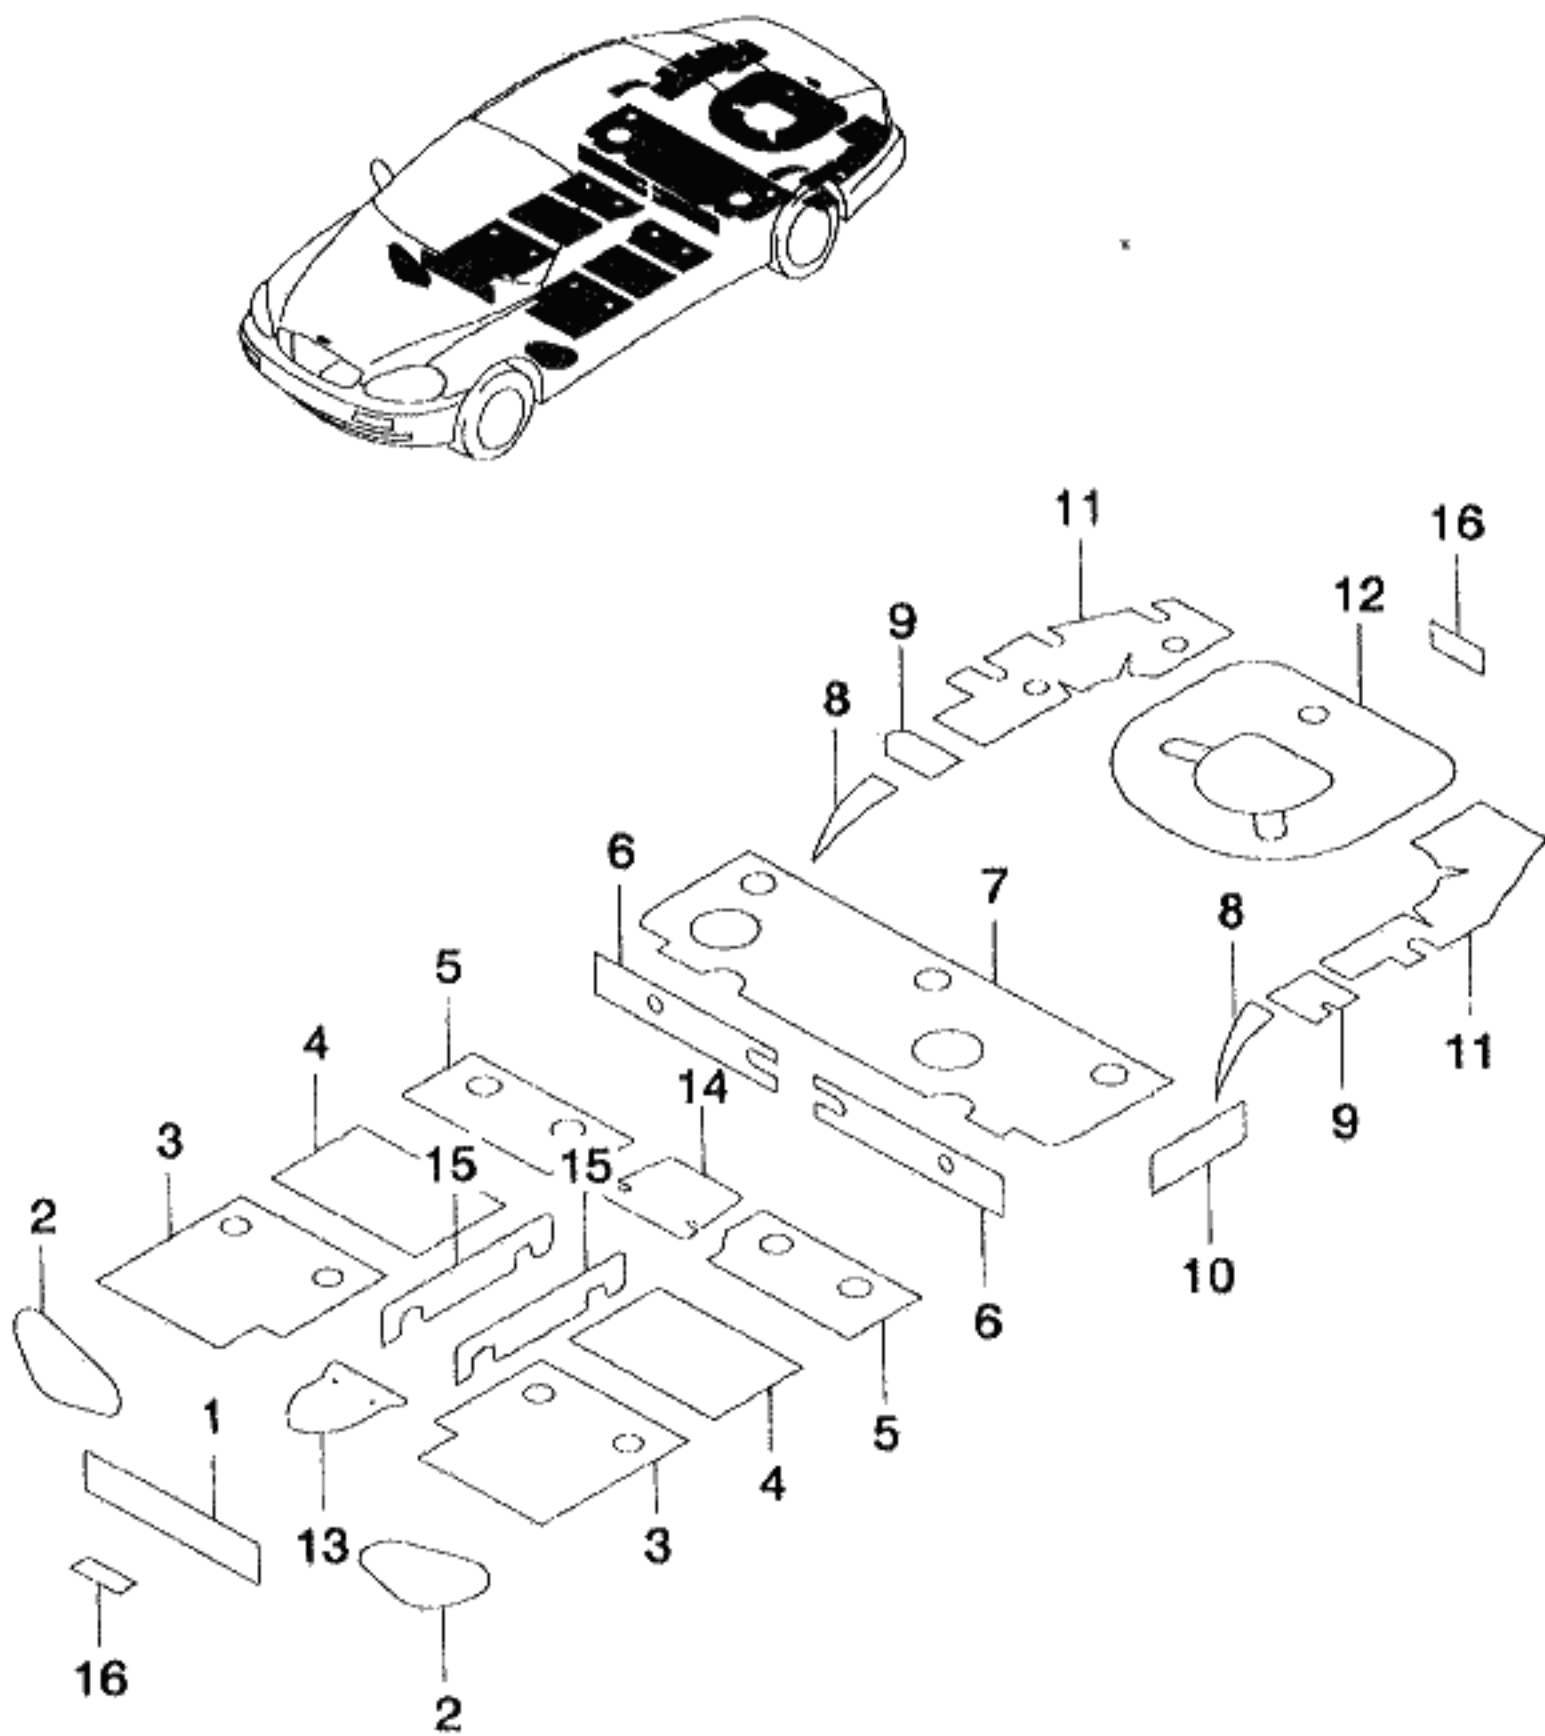


KEY NO.				PART NAME							
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 96243410	(E)DEADENER-SIDE PANEL TRUNK (D)ENDSTÜCK	S	S				(F)ASSOURDISSEUR (S)AMORTIGUADOR			
	[11] 96194458 96194459	(E)DEADENER-RR FLOOR TRUNK (D)ENDSTÜCK	S	S				LH 1 (F)ASSOURDISSEUR (S)AMORTIGUADOR			
	[12] 96194460	(E)DEADENER-SPARE TIRE (D)ENDSTÜCK	S	S				LH 1 (F)ASSOURDISSEUR (S)AMORTIGUADOR			
	[13] 96194466	(E)DEADENER-FR TUNNEL (D)ENDSTÜCK	S	S				RH 1 (F)ASSOURDISSEUR (S)AMORTIGUADOR			
	[14] 96194469	(E)DEADENER-RR TUNNEL (D)ENDSTÜCK,HINTERTÜR KANAL	S	S				1 (F)ASSOURDISSEUR (S)AMORTIGUADOR			
	[15] 96244399 96244400	(E)DEADENER-TUNNEL,SIDE (D)ENDSTÜCK	S	S				1 (F)ASSOURDISSEUR (S)AMORTIGUADOR			
	[16] 96205436	(E)DEADENER-TRUNK LID (D)ENDSTÜCK	S	S				LH 1 (F)ASSOURDISSEUR (S)AMORTIGUADOR			
								3			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

8**HEATER & AIR-CONDITIONER**


- 8110 AIR DISTRIBUTION
- 8210 MODULE-AIR CONDITIONER(VACUUM)
- 8211 MODULE-AIR CONDITIONER(ATC)
- 8220 BLOWER
- 8230 EVAPORATOR
- 8240 AIR CONDITIONER VACUUM HOSE
- 8310 CONDENSER
- 8320 COMPRESSOR
- 8340 AIR CONDITIONER HOSE & PIPE LINE(LHD)
- 8350 AIR-CON CONTROL SWITCH(VACUUM)
- 8351 AIR-CON CONTROL SWITCH(ATC)

8110 AIR DISTRIBUTION

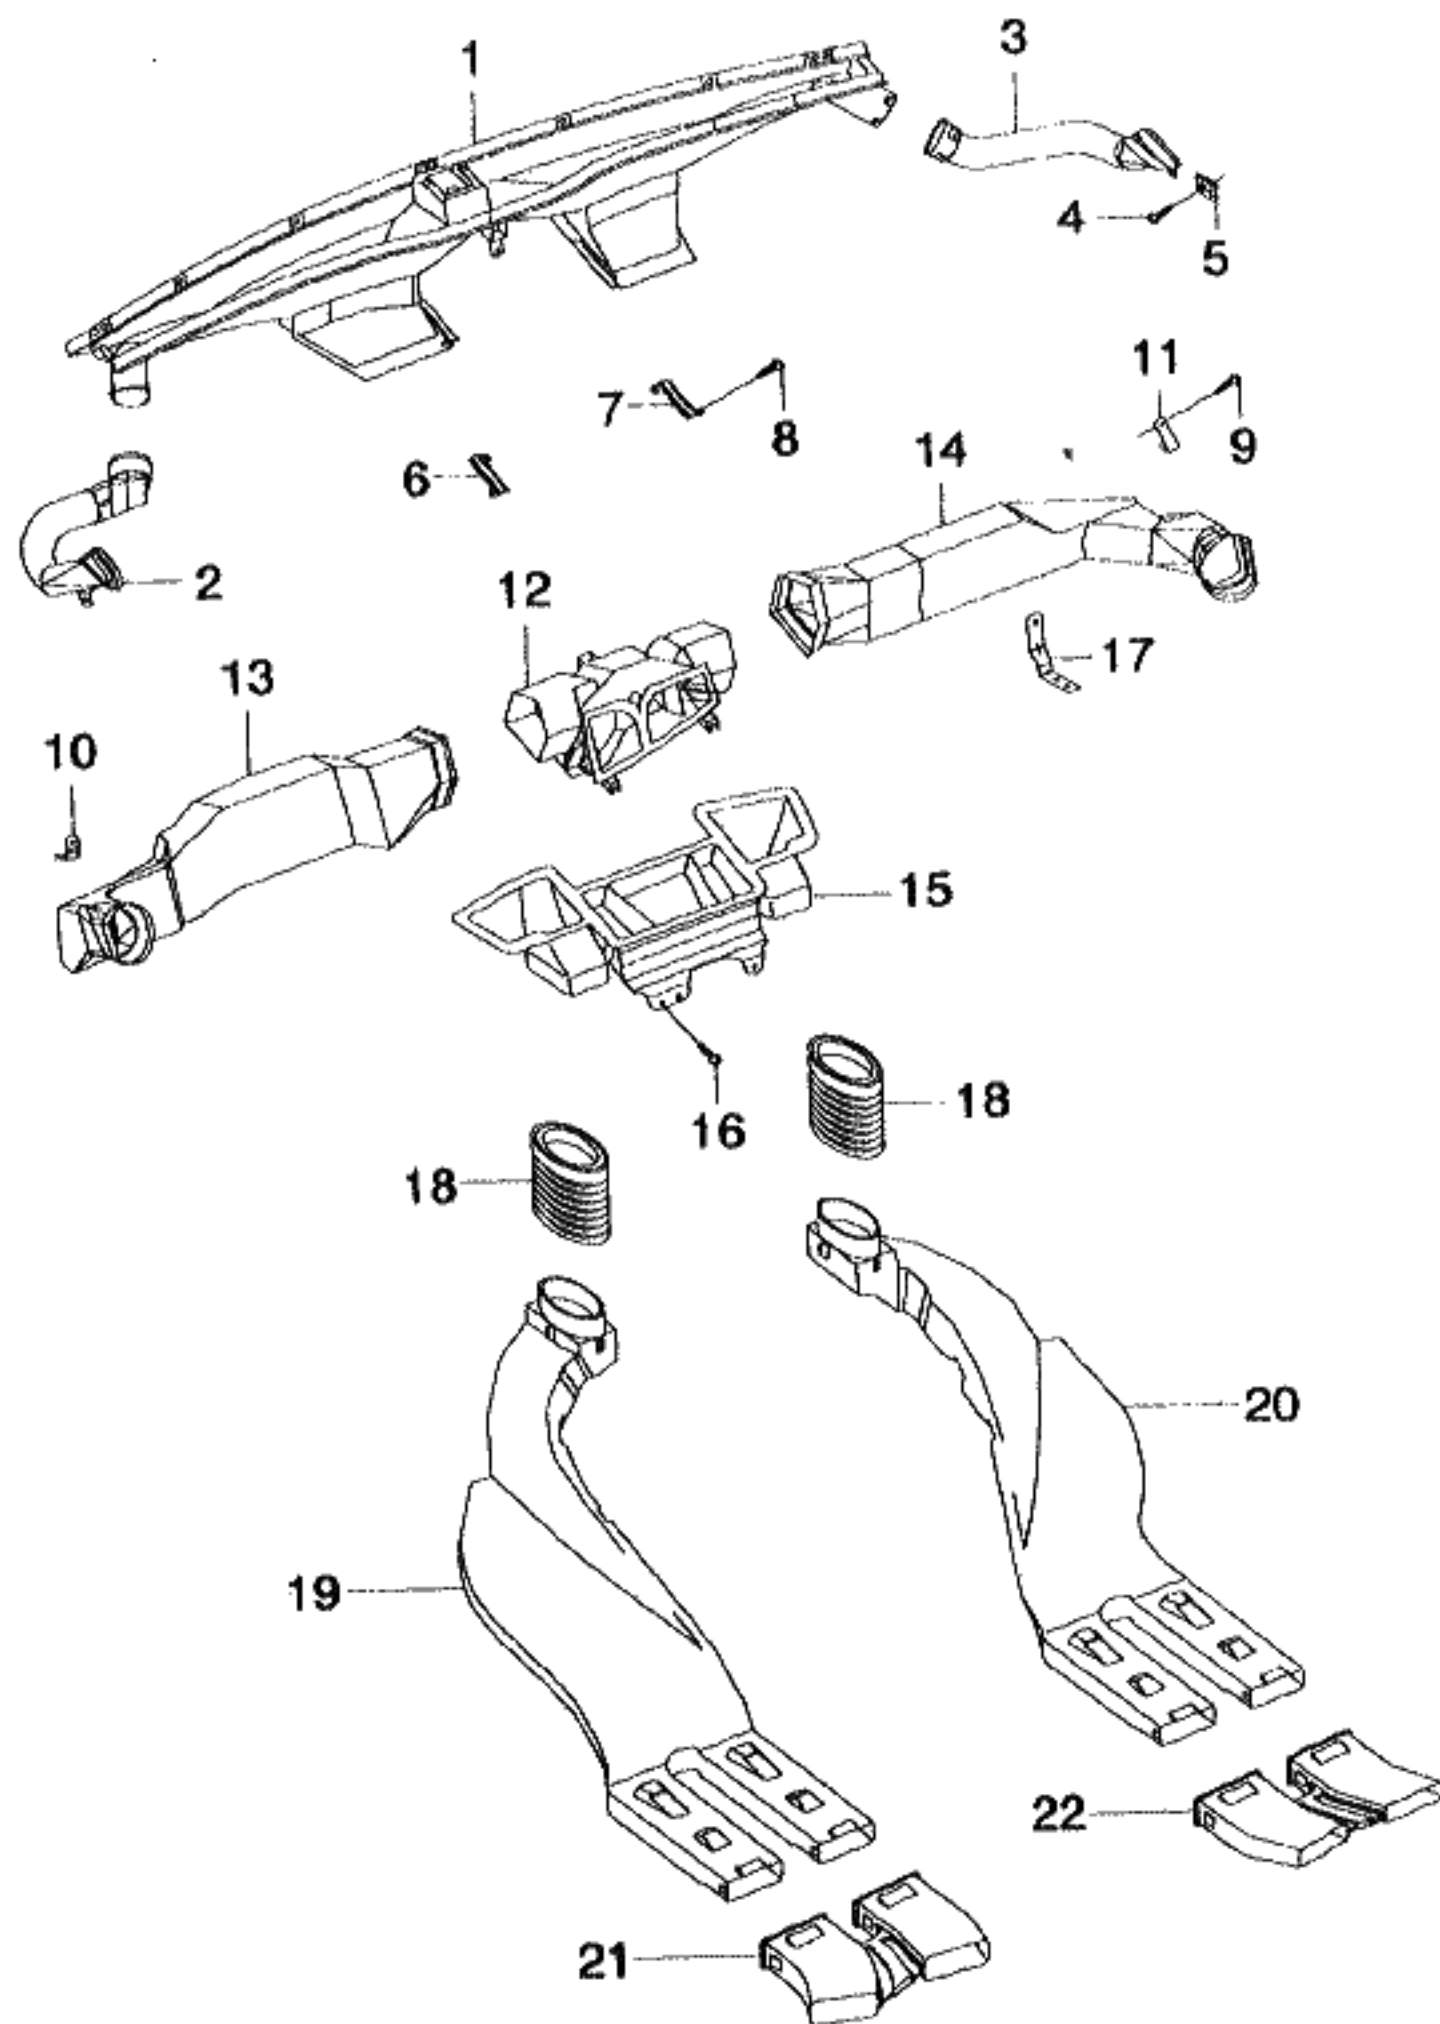


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96211443	(E) DUCT-AIR, INSTRUMENT PANEL (D) LUFTZUFUHR	S	S				(F) CONDUIT AIR-TABLEAU (S) CONDUCTO DE AIRE	1		
	[02] 96239735	(E) HOSE-DEFROSTER, SIDE (D) SCHLAUCH, ENTFROSTER, SEITE	S	S	&821			(F) TUYAU-DEGIVREUR, COTE (S) MANGUERA-DESCONGELADOR	LH 1		
	[03] 96239739	(E) HOSE-DEFROSTER, SIDE (D) SCHLAUCH, ENTFROSTER, SEITE	S	S	&821			(F) TUYAU-DEGIVREUR, COTE (S) MANGUERA-DESCONGELADOR	RH 1		
	[04] 03160-42133	(E) SCREW-TAPPING (D) SCHRAUBE	S	S				(F) VIS (S) TORNILLO	4		
	[05] 09148-04023	(E) NUT-SPEED (D) MUTTER	S	S				(F) ECROU (S) TUERCA	1		
	[06] 96219368	(E) BRACKET-JUNCTION BLOCK (D) TRÄGER	S	S				(F) SUPPORT (S) SOPORTE	LH 1		
	[07] 96219369	(E) BRACKET-JUNCTION BLOCK (D) TRÄGER	S	S				(F) SUPPORT (S) SOPORTE	RH 1		
	[08] 03120-42133	(E) SCREW-TAPPING (D) SCHRAUBE	S	S				(F) VIS (S) TORNILLO	4		
	[09] 03160-42163	(E) SCREW-TAPPING (D) SCHRAUBE	S	S				(F) VIS (S) TORNILLO	10		
	[10] 96219370	(E) BRACKET-HOSE VENTILATION (D) TRÄGER	S	S				(F) SUPPORT (S) SOPORTE	LH 1		


LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC	M = MANUAL T/A
CDX = 2.0 DOHC	A = AUTOMATIC T/A
	, = COMMON

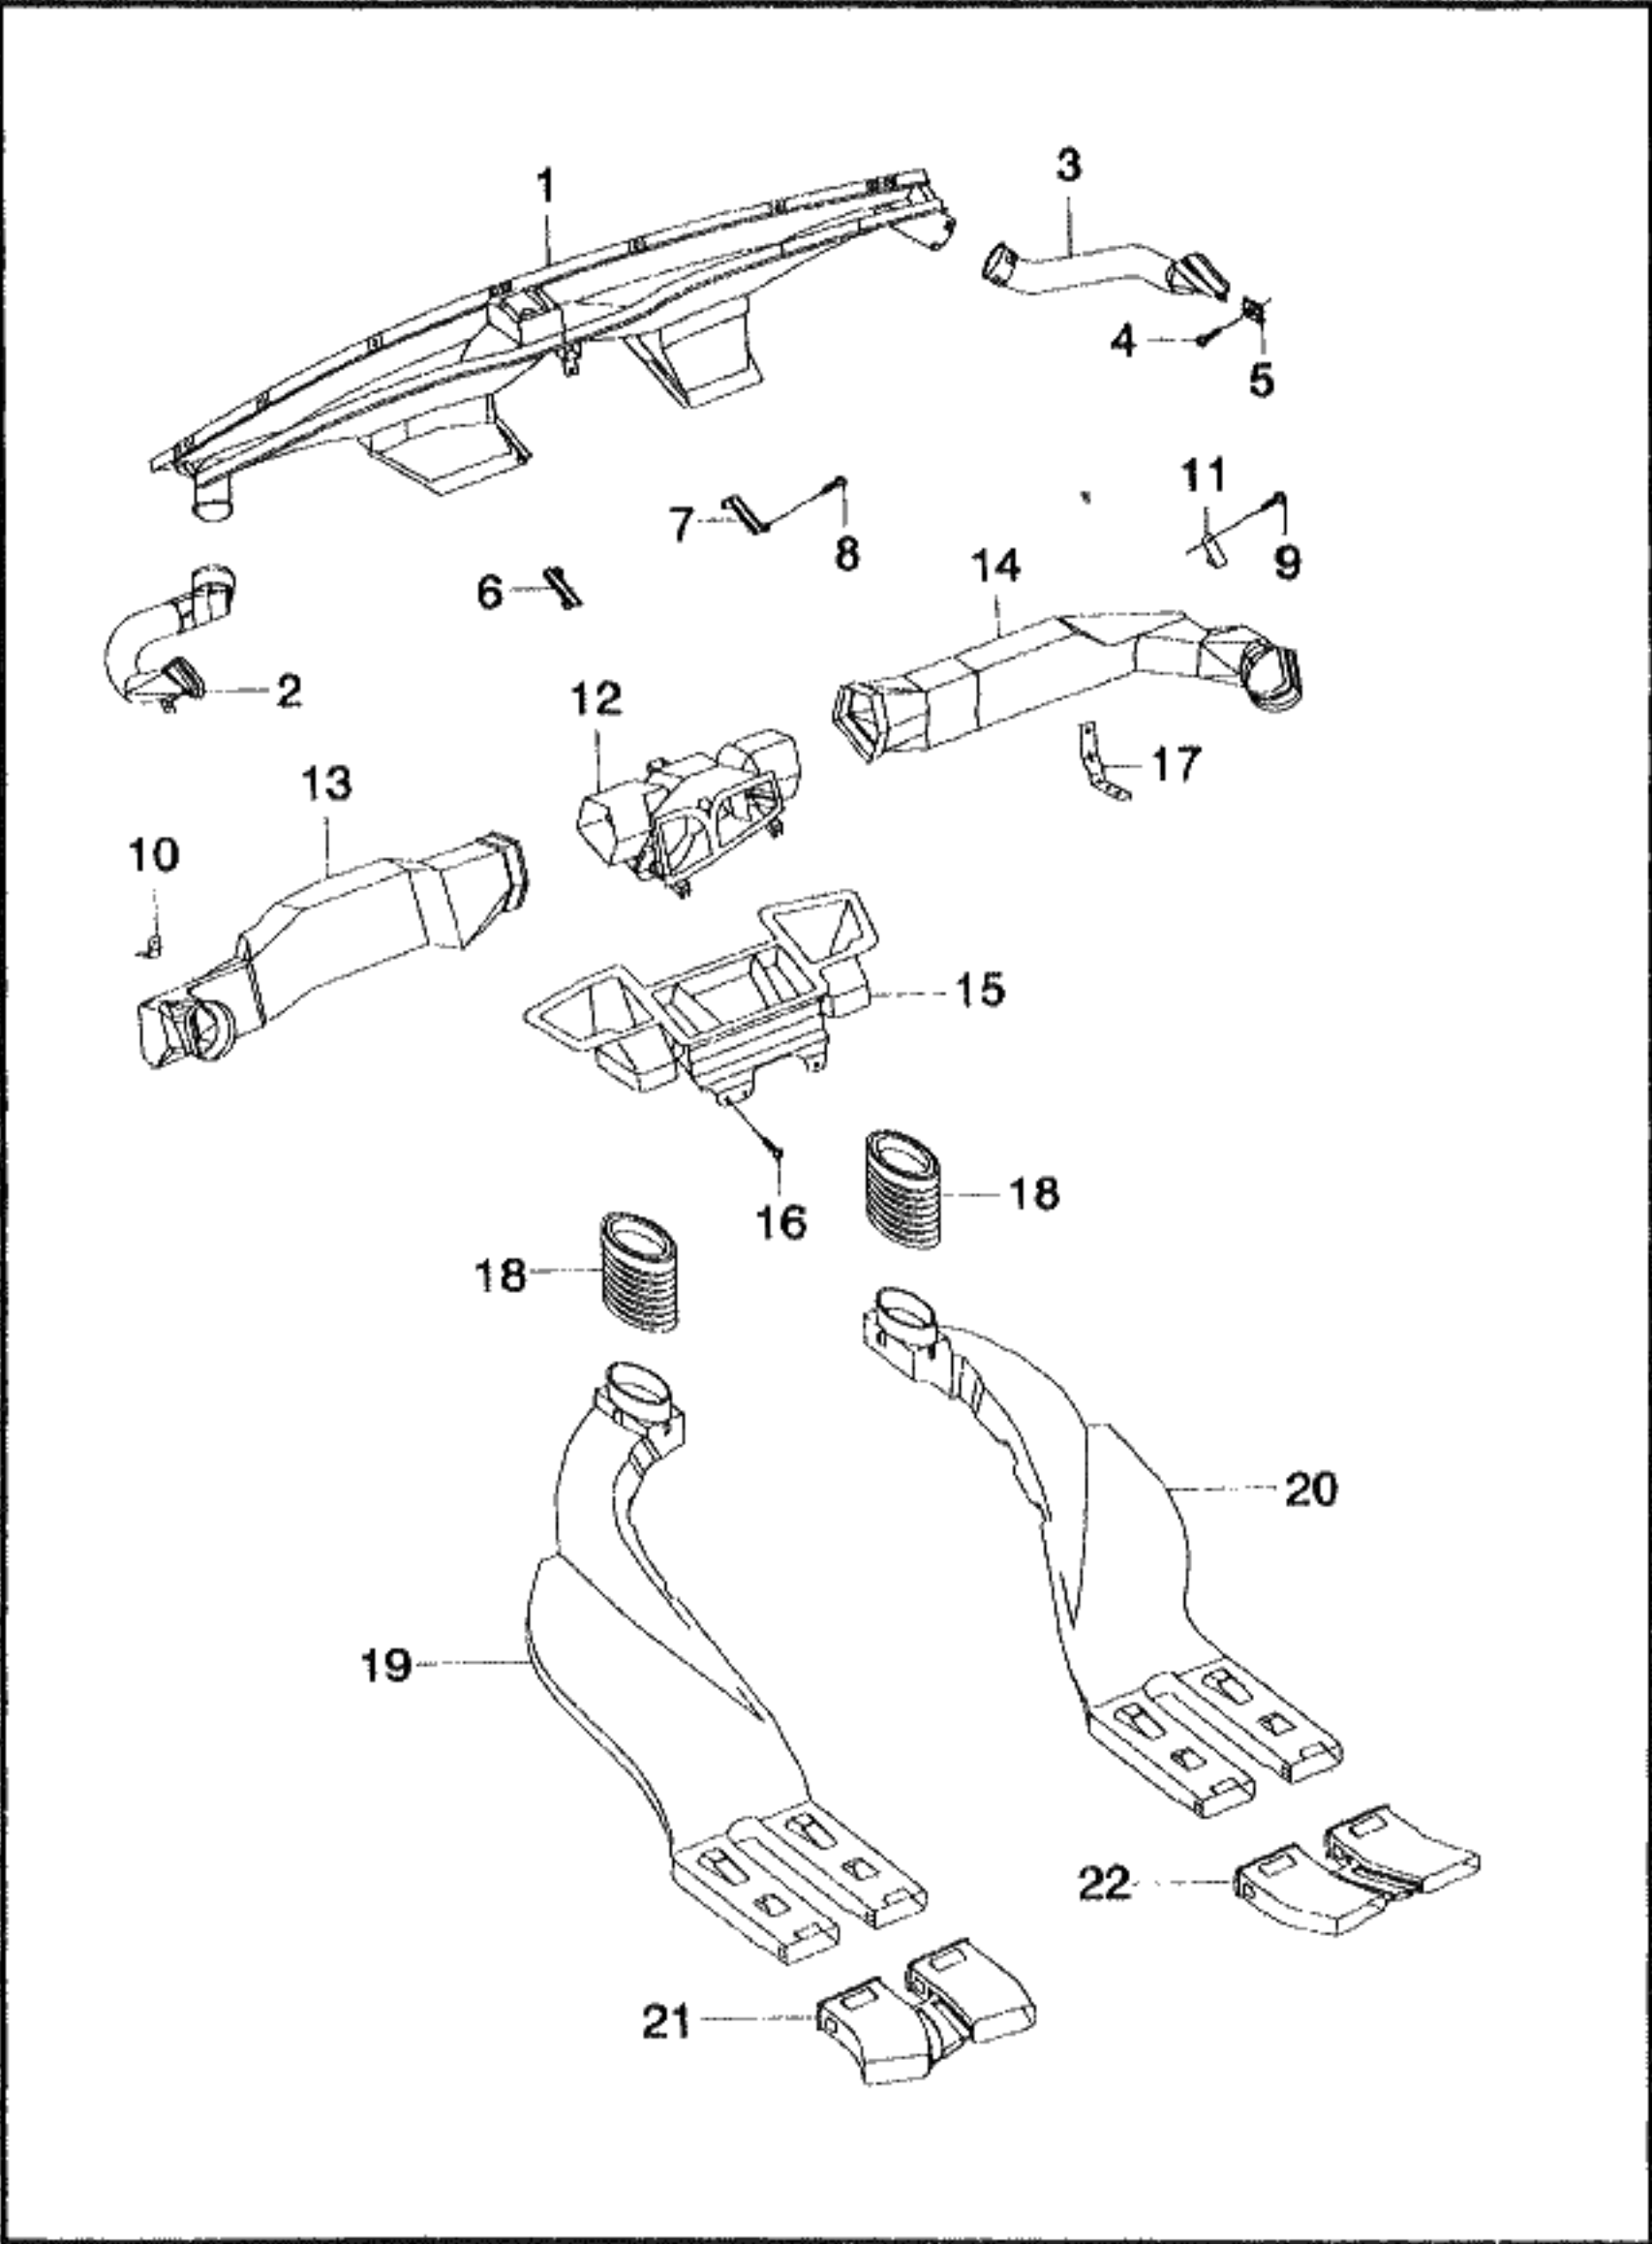


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 96219371	(E)BRACKET-HOSE VENTILATION (D)TRÄGER	S	S			(F)SUPPORT (S)SOPORTE RH 1				
	[12] 96215827	(E)BLOCK A-JUNCTION,UPPER (D)BLOCK,OBERE VERBINDUNG	S	S			(F)BLOC-JONCTION, SUPERIEURE (S)BLOQUE-UNION,SUPERIOR 1				
	[13] 96194968	(E)HOSE-VENTILATION (D)SCHLAUCH,VENTILATOR	S	S			(F)TUYAU-VENTILATION (S)MANGUERA-VENTILACION LH 1				
	[14] 96194970	(E)HOSE-VENTILATION (D)SCHLAUCH,VENTILATOR	S	S			(F)TUYAU-VENTILATION (S)MANGUERA-VENTILACION RH 1				
	[15] 96194979	(E)BLOCK A-JUNCTION,LOWER (D)BLOCK,VERBINDUNG	S	S			(F)BLOC-JONCTION (S)BLOQUE-UNION 1				
	[16] 03160-48165	(E)SCREW-TAPPING (D)SCHRAUBE	S	S			(F)VIS (S)TORNILLO 3				
	[17] 96239928	(E)BRACKET-HOSE VENT,LWR (D)TRÄGER	S	S			(F)SUPPORT (S)SOPORTE RH 1				
	[18] 96207389	(E)CONNECTOR A-AIR DISTRIB (D)VERBINDUNG	S	S			(F)CONNECTEUR (S)CONECTOR 1				
	[19] 96194987	(E)DUCT A-AIR,LEG ROOM,RR (D)SCHACHT,LUFTEINLAß	S	S			(F)CONDUIT-ENTREE D'AIR (S)CONDUCTO-ENTRADA DE AIRE LH 1				
	[20] 96194989	(E)DUCT A-AIR,LEG ROOM,RR (D)SCHACHT,LUFTEINLAß	S	S			(F)CONDUIT-ENTREE D'AIR (S)CONDUCTO-ENTRADA DE AIRE RH 1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

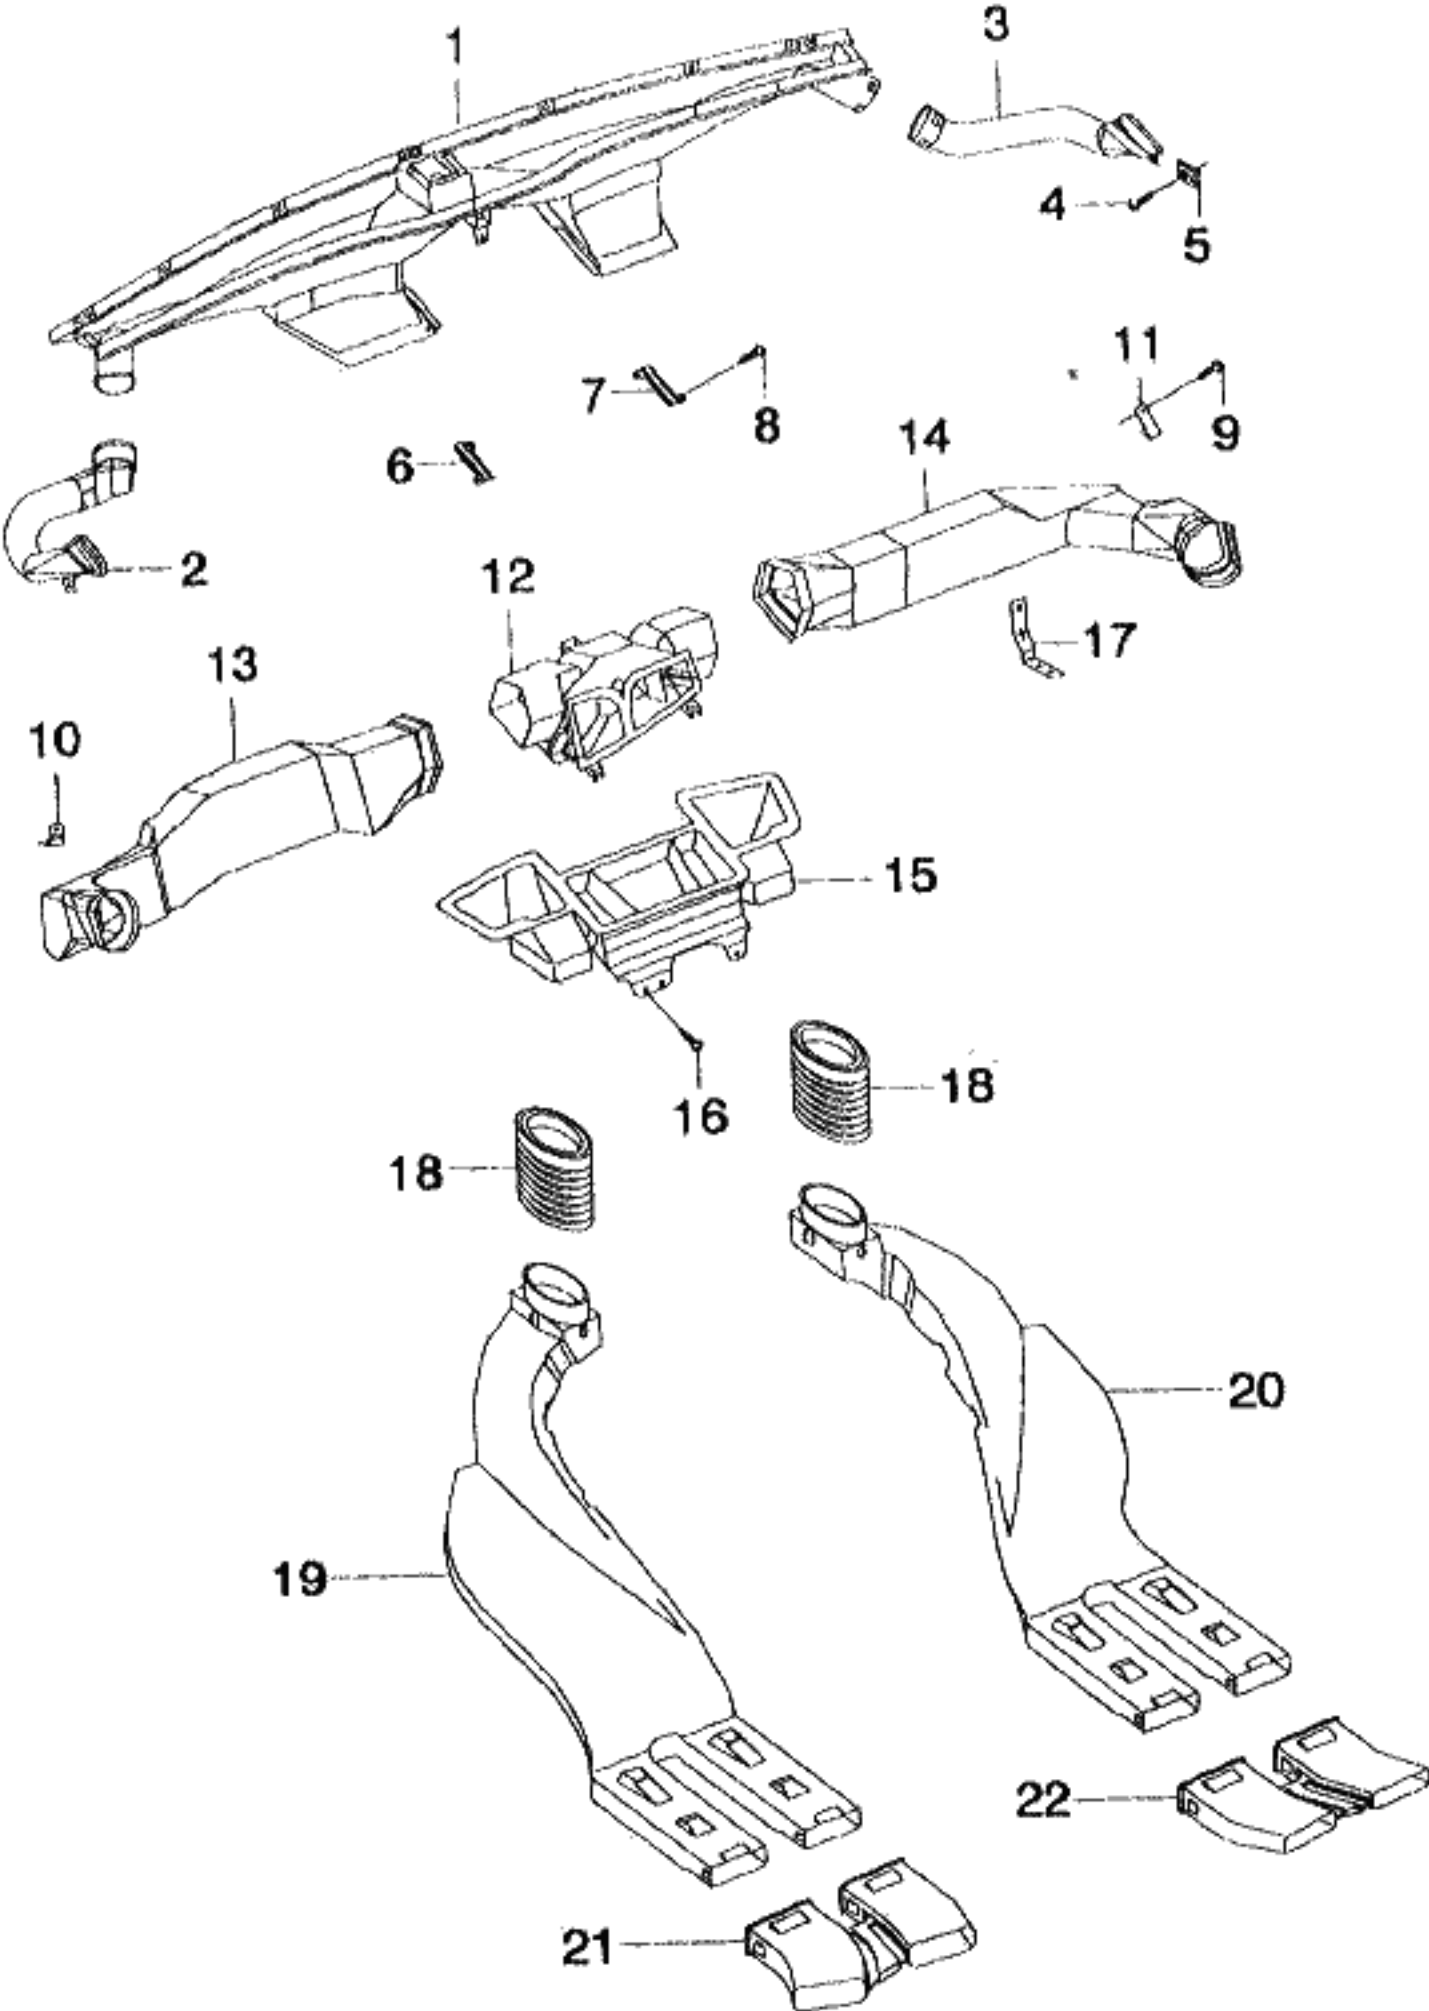


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[21] 96207387	(E) DUCT-EXTENSION,RR (D) SCHACHT . S S				(F) CONDUIT (S) CONDUCTO LH 1					
	[22] 96207388	(E) DUCT-EXTENSION,RR (D) SCHACHT . S S				(F) CONDUIT (S) CONDUCTO RH 1					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

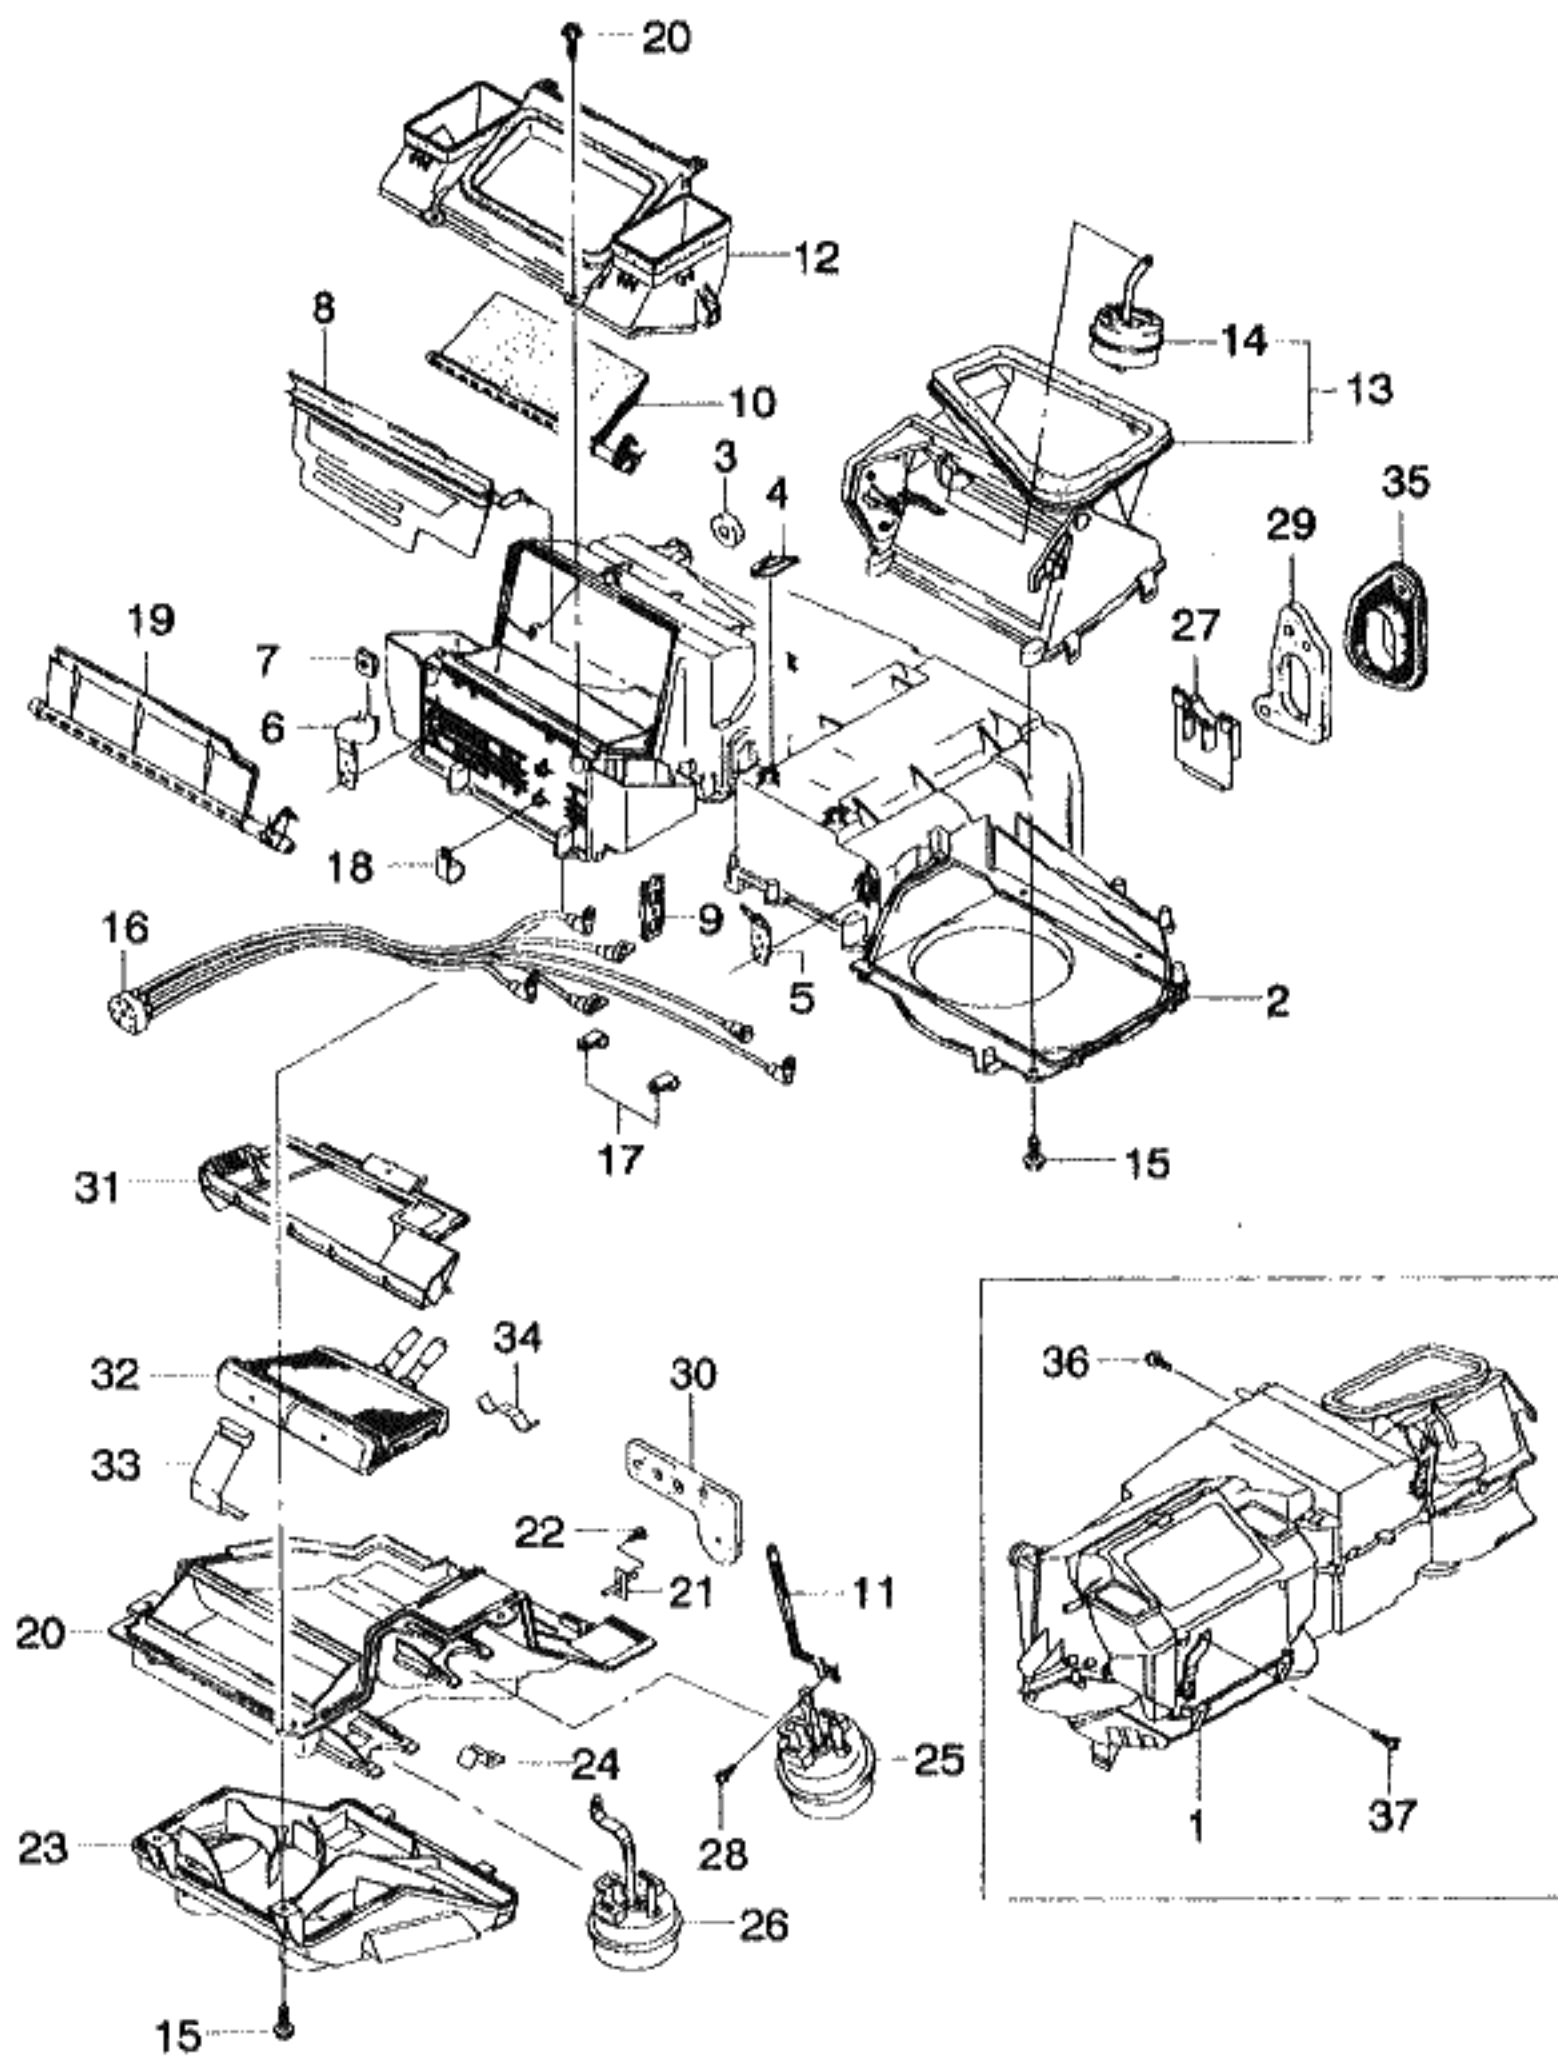


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E)MODULE-A/C,W/BLOWER&EVAP (D)MODUL				(F)MODULE (S)MODULO					
96207443		S	S	&C59		1					AC
96207441		O	O	&C60		1					AA
[02]		(E)CASE-UPPER (D)KASTEN				(F)CARTER (S)CAJA					
612160		S	S	&C59/C60		1					
[03]		(E)SEAL-RING,DASH MOUNT (D)KASTEN				(F)CARTER (S)CAJA					
611982		S	S	&C59/C60		1					
[04]		(E)CLIP-ASPIRATOR (D)KLEMME				(F)ATTACHE (S)GRAPA					
612176		S	S	&C59/C60		1					
[05]		(E)BRACKET-HANGER STRAIGHT (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
612166		S	S	&C59/C60		1					
[06]		(E)BRACKET-HANGER VENT (D)TRÄGER				(F)SUPPORT (S)SOPORTE					
612165		S	S	&C59/C60		1					
[07]		(E)NUT-SPEED (D)MUTTER				(F)ECROU (S)TUERCA					
03511-48042		S	S	&C59/C60		3					
[08]		(E)VALVE A-TEMP (D)VENTIL				(F)SOUPAPE (S)VALVULA					
612022		S	S	&C59/C60		1					
[09]		(E)CLIP-TEMP VALVE (D)KLEMME				(F)ATTACHE (S)GRAPA					
611998		S	S	&C59/C60		1					
[10]		(E)VALVE A-MODE & SPRING (D)VENTIL				(F)SOUPAPE (S)VALVULA					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

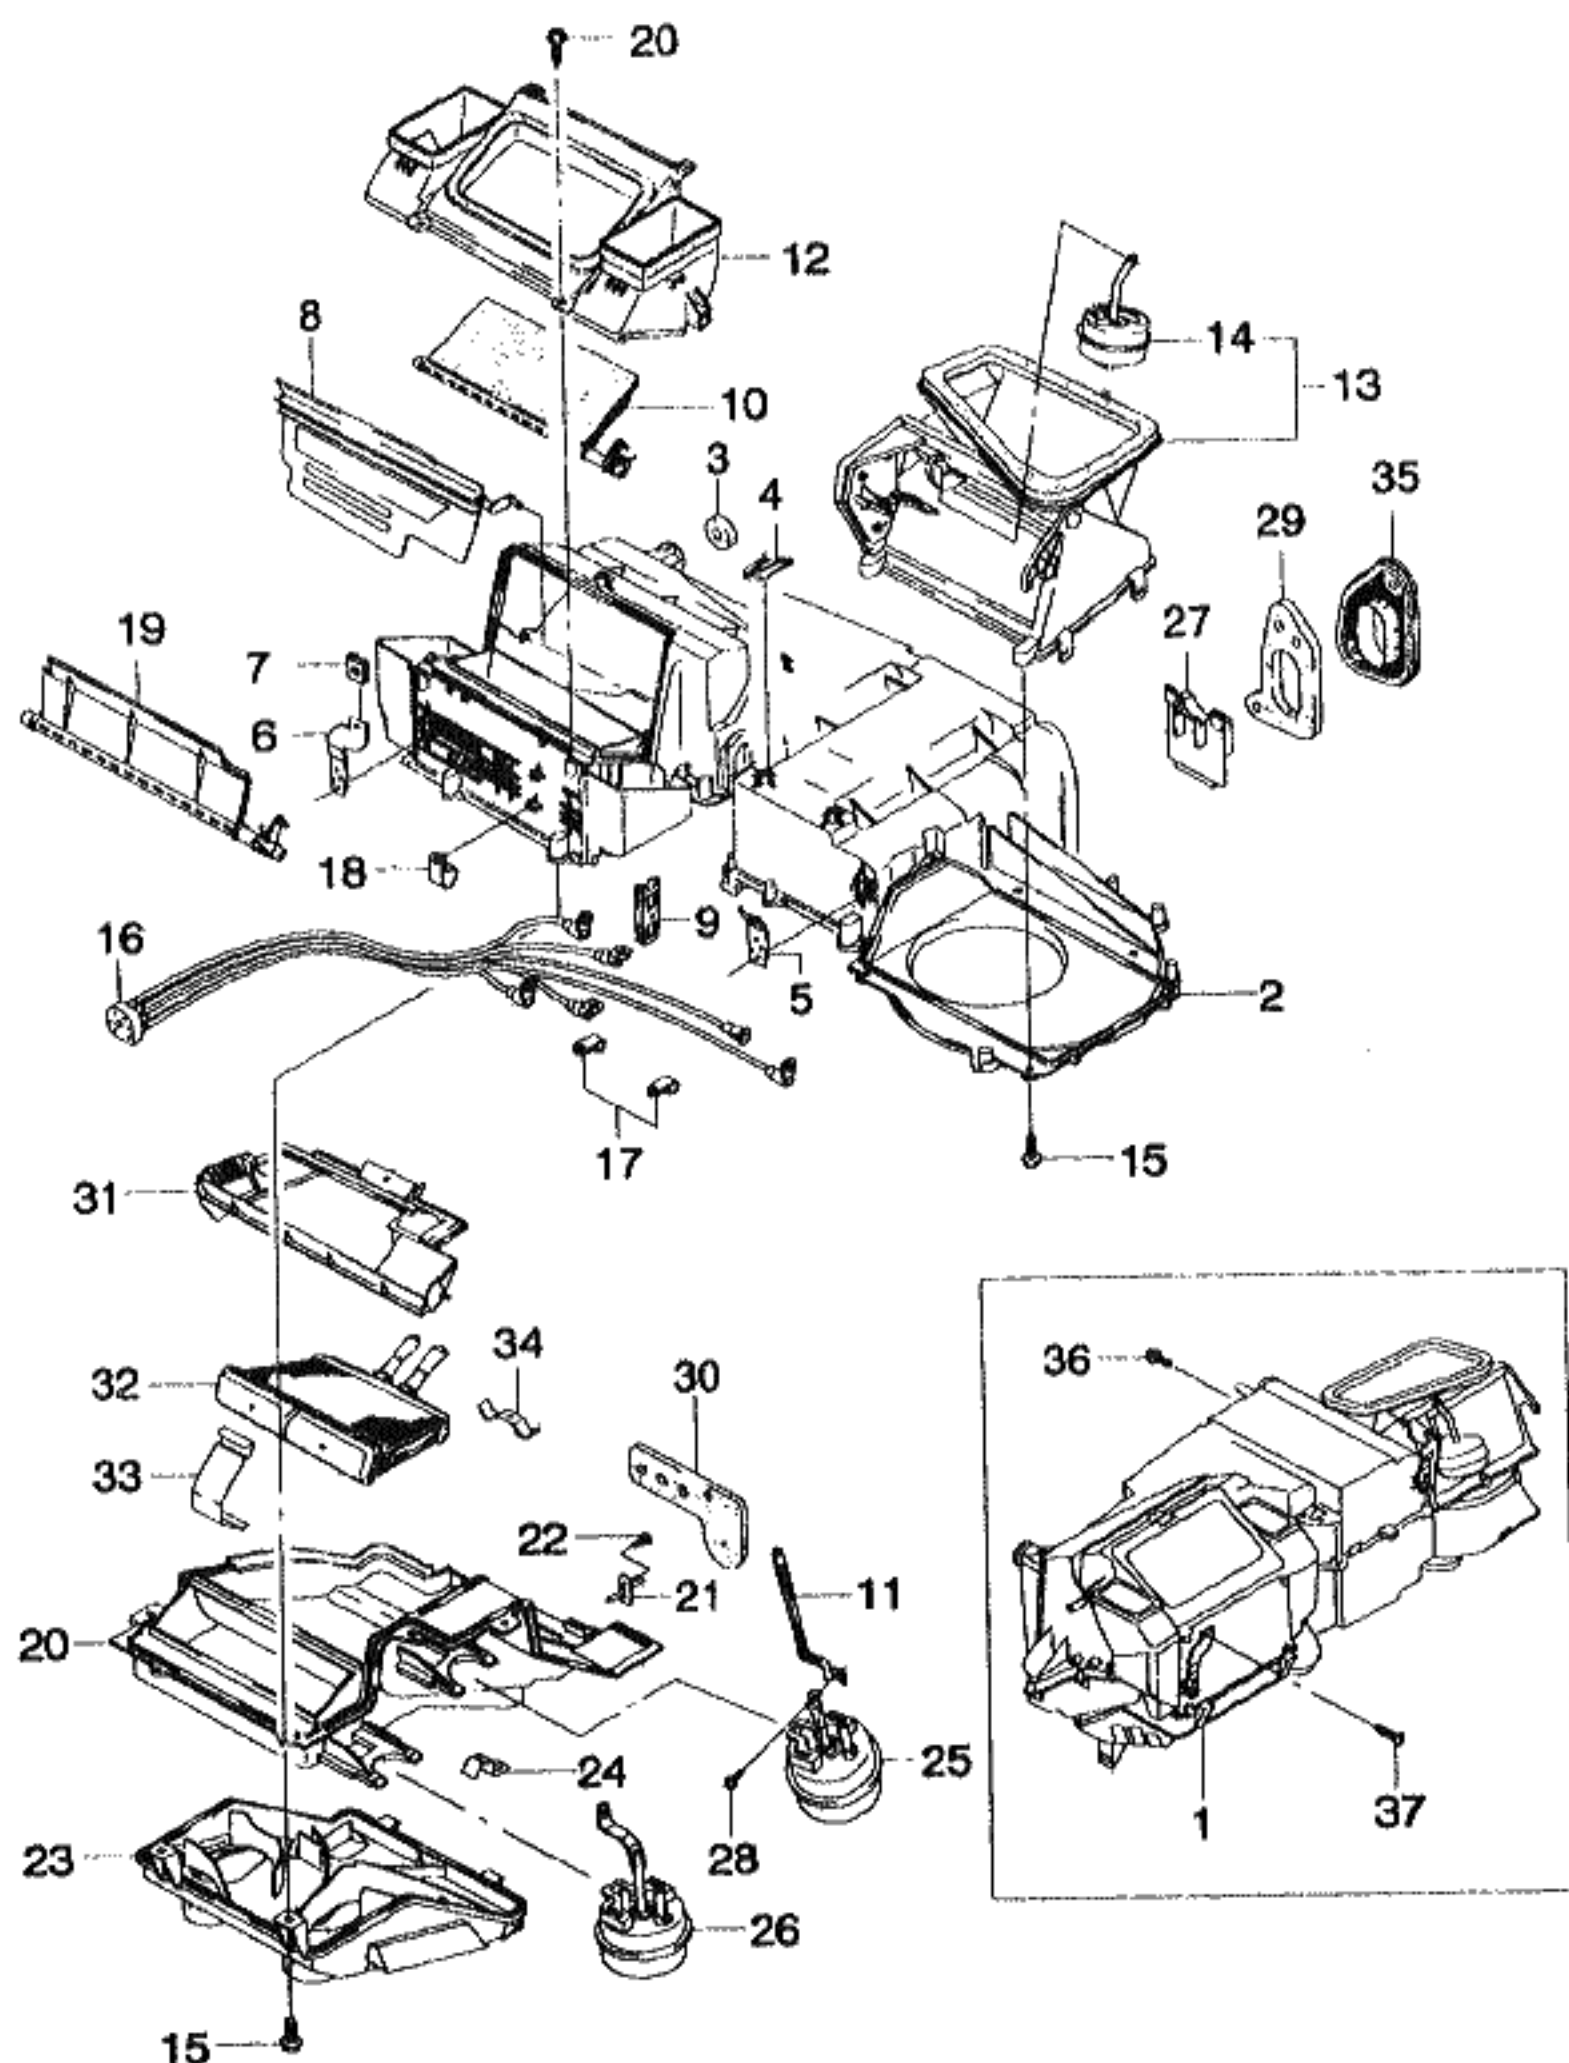

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	612157	.	S	S	&C59/C60		1				
	[11]		(E) LEVER-ACTUATOR, MODE				(F) LEVIER				
			(D) HEBEL				(S) PALANCA				
	612266	.	S	S	&C59/C60		1				
	[12]		(E) CASE A-DEFR, W/SEAL				(F) BOITIER				
			(D) KASTEN				(S) CAJA				
	612024	.	S	S	&C59/C60		1				
	[13]		(E) AIR INLET A				(F) AIR				
			(D) LUFTREINIGUNG				(S) AIRE				
	612032	.	S	S	&C59/C60		1				
	[14]		(E) ACTUATOR-AIR INLET				(F) ACTIONNEUR				
			(D) BETÄTIGUNG				(S) ACTUADOR				
	611994	.	S	S	&C59/C60		1				
	[15]		(E) SCREW				(F) VIS				
			(D) SCHRAUBE				(S) TORNILLO				
	611979	.	S	S	&C59/C60		1				
	[16]		(E) HOSE A-VACUUM				(F) TUYAU-DEPRESSION				
			(D) SCHLAUCH, VAKUUM				(S) MANGUERA-VACIO				
	96207430	.	S	S	&C59/C60		1				
	[17]		(E) CLIP				(F) ATTACHE				
			(D) KLEMME				(S) GRAPA				
	612337	.	S	S	&C59/C60		1			3N	
	[18]		(E) CLIP				(F) ATTACHE				
			(D) KLEMME				(S) GRAPA				
	612084	.	S	S	&C59/C60		1			7N	
	[19]		(E) VALVE A-HTR/DEF & SPRING				(F) SOUPAPE				
			(D) VENTIL				(S) VALVULA				
	612156	.	S	S	&C59/C60		1				
	[20]		(E) CASE-COVER				(F) CARTER				
			(D) KASTEN				(S) CAJA				
LEVEL					T/A (TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

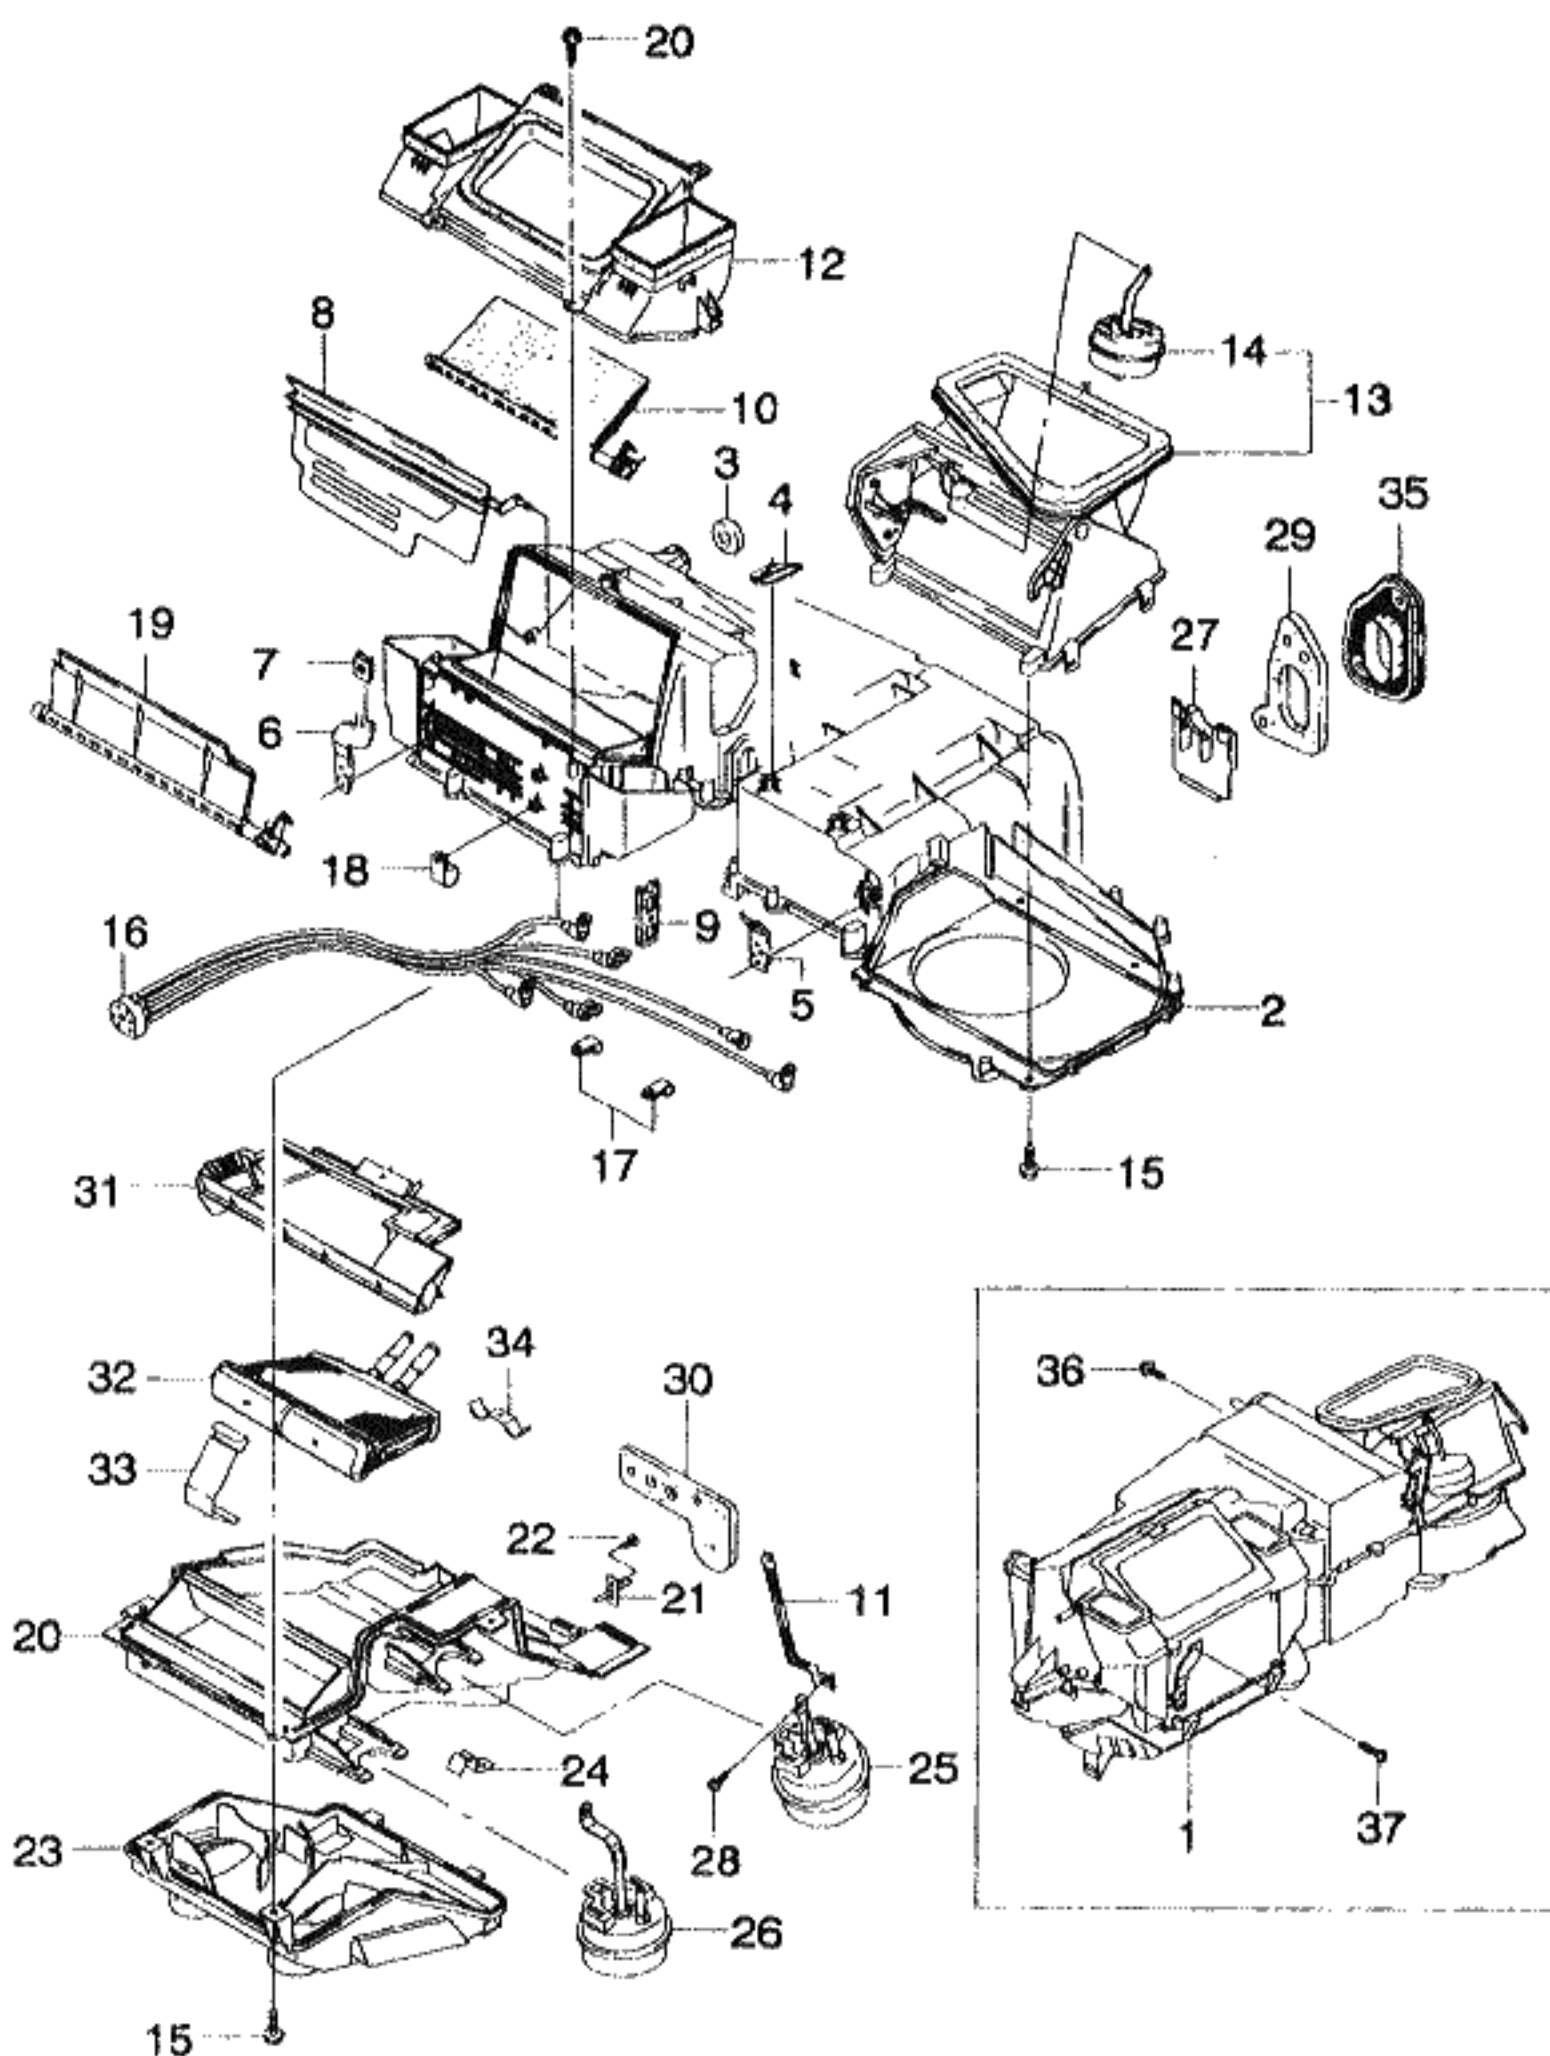


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	612162	.	S	S	&C59/C60		1				
	[21]		(E)PIPE-SOURCE VACUUM				(F)TUYAU				
			(D)ROHR				(S)TUBERIA				
	611857	.	S	S	&C59/C60		1				
	[22]		(E)SCREW				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	600014	.	S	S	&C59/C60		1				
	[23]		(E)HOUSING-AIR DISTRIBUTION				(F)LOGEMENT				
			(D)GEHÄUSE,LUFTVERTEILUNG				(S)CARCASA				
	96207415	.	S	S	&C59/C60		1				
	[24]		(E)CLIP-RETAINING				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	611984	.	S	S	&C59/C60		1				
	[25]		(E)ACTUATOR-MODE				(F)ACTIONNEUR				
			(D)BETÄTIGUNG				(S)ACTUADOR				
	612039	.	S	S	&C59/C60		1				
	[26]		(E)ACTUATOR-HTR/DEF				(F)ACTIONNEUR				
			(D)BETÄTIGUNG				(S)ACTUADOR				
	612009	.	S	S	&C59/C60		1				
	[27]		(E)CLIP				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	612020	.	S	S	&C59/C60		1				
	[28]		(E)SCREW				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	612267	.	S	S	&C59/C60		1				
	[29]		(E)SEAL				(F)JOINT D'ETANCHEITE				
			(D)DICHTUNG				(S)SELLO				
	611992	.	S	S	&C59/C60		1				
	[30]		(E)SEAL-HTR PIPE,DASH				(F)JOINT D'ETANCHEITE				
			(D)DICHTUNG				(S)SELLO				
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC					M = MANUAL T/A						
CDX = 2.0 DOHC					A = AUTOMATIC T/A						
					. = COMMON						

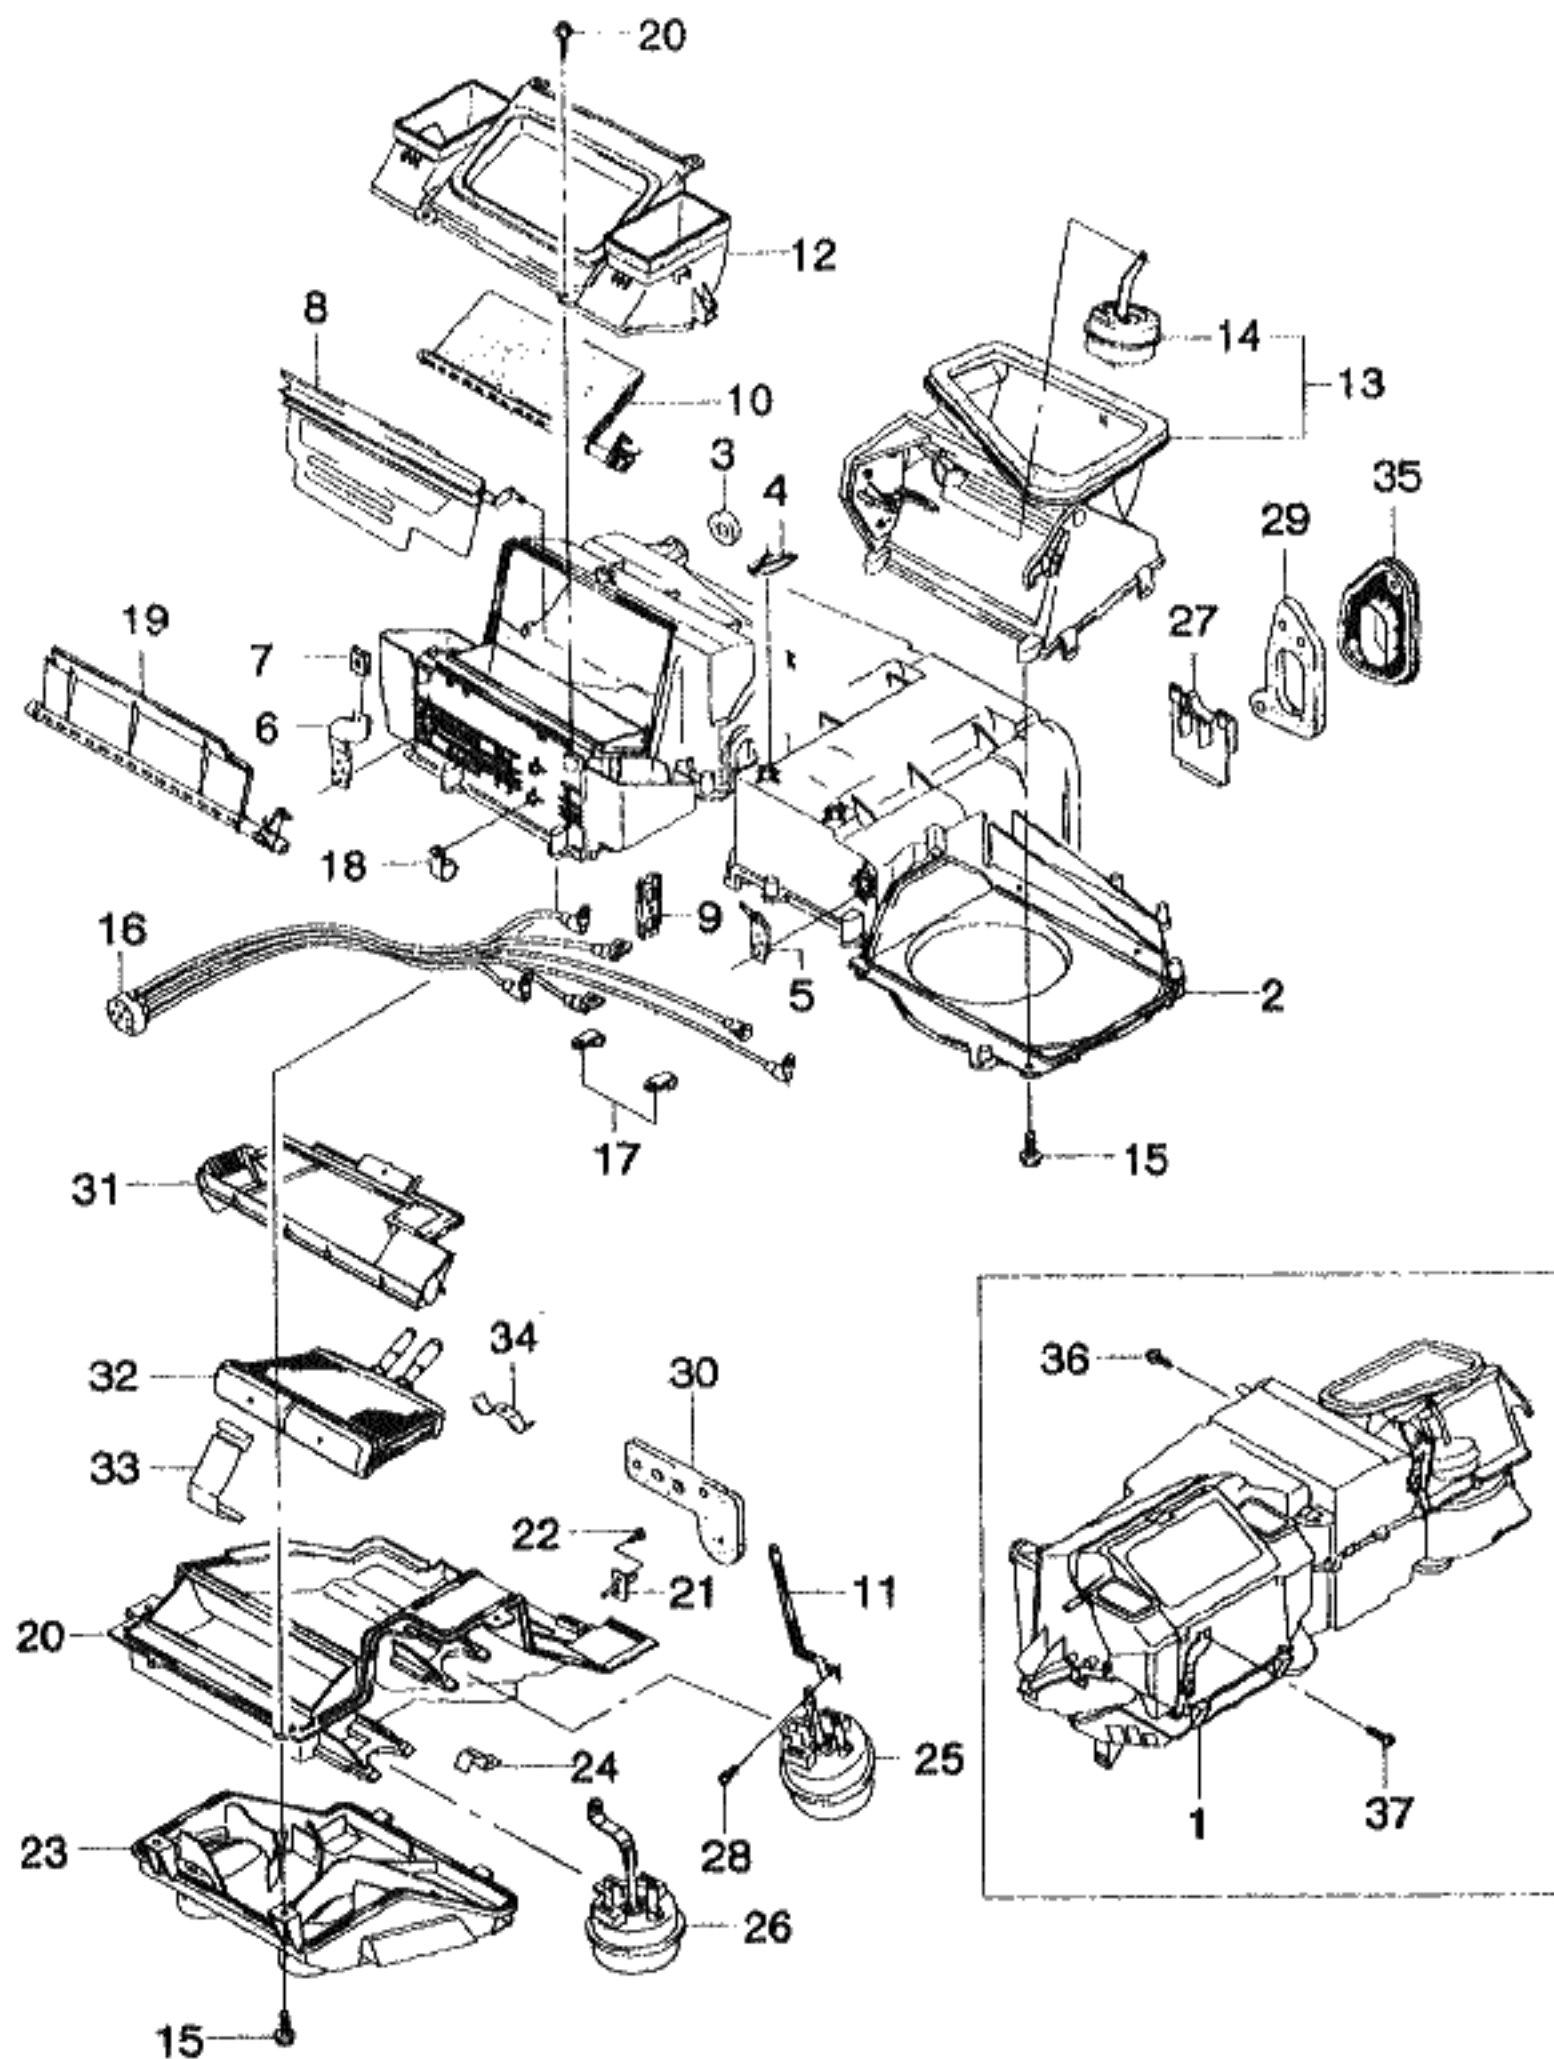


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
	612173	.	S	S	&C59/C60		1				
	[31]		(E)CASE A-SHROUD				(F)CARTER				
			(D)KASTEN				(S)CAJA				
	612159	.	S	S	&C59/C60		1				
	[32]		(E)CORE A-HEATER				(F)NOYAU-CHAUFFAGE				
			(D)GEHÄUSE,HEIZUNG				(S)NUCLEO-CALENTADOR				
	96207413	.	S	S	&C59/C60		1				
	[33]		(E)CLIP-TANK MOUNT				(F)ATTACHE				
			(D)KLEMME				(S)GRAPA				
	612244	.	S	S	&C59/C60		1				
	[34]		(E)BRACKET-PIPE MOUNT				(F)SUPPORT				
			(D)TRÄGER				(S)SOPORTE				
	611980	.	S	S	&C59/C60		1				
	[35]		(E)COVER A-EVAPORATOR HOLE				(F)CARTER				
			(D)DECKEL				(S)CUBIERTA				
	96211761	.	S	S	&C59/C60		1				
	[36]		(E)SCREW				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	09139-06003	.	S	S	&C59/C60		5				
	[37]		(E)SCREW-TAPPING				(F)VIS				
			(D)SCHRAUBE				(S)TORNILLO				
	03170-48135	.	S	S	&C59/C60		1				
	03160-48165	.	S	S	&C59/C60		2				


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

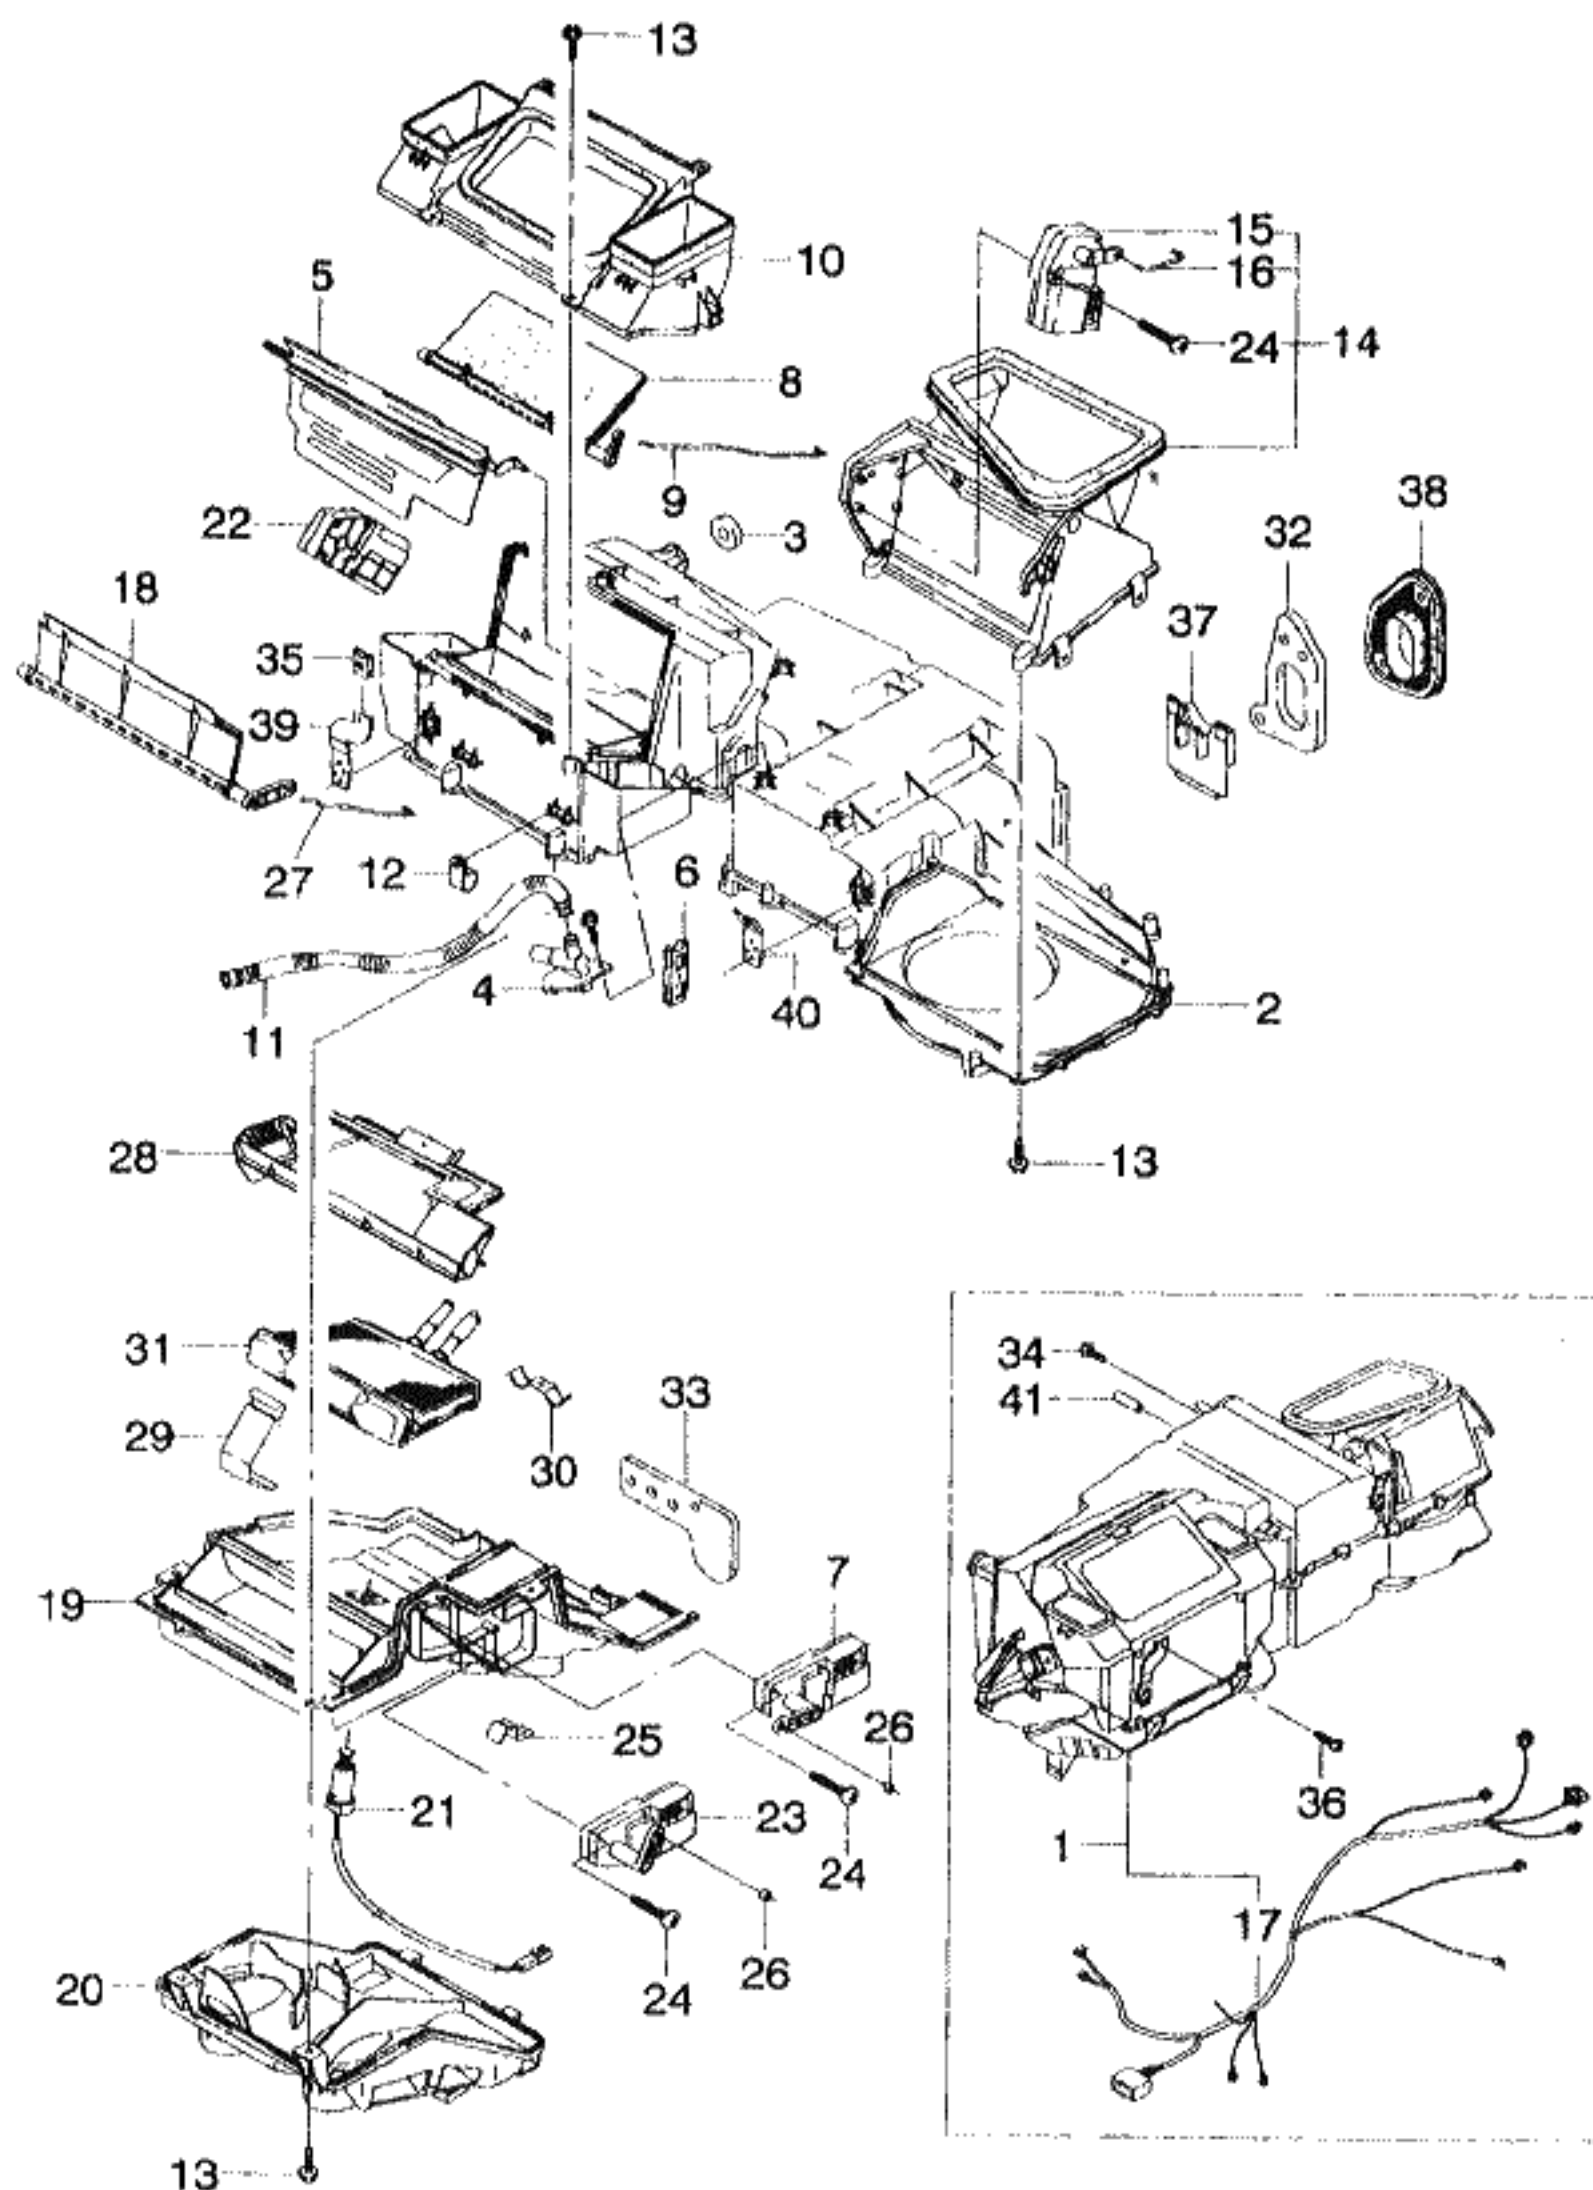


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]	96207445	(E)MODULE-A/C,W/BLOWER&EVAP (D)MODUL	A	O	&C19/C15	(F)MODULE (S)MODULO	1				AE
[02]	612160	(E)CASE-UPPER (D)KASTEN	A	O	&C19/C15	(F)CARTER (S)CAJA	1				
[03]	611982	(E)SEAL-RING,DASH MOUNT (D)KASTEN	A	O	&C19/C15	(F)CARTER (S)CAJA	1				
[04]	96207474	(E)ASPIRATOR (D)SCHLAUCH	A	O	&C19/C15	(F)TUYAU (S)MANGUERA	1				
[05]	612240	(E)VALVE A-TEMP (D)VENTIL	A	O	&C19/C15	(F)SOUPAPE (S)VALVULA	1				
[06]	611998	(E)CLIP-TEMP VALVE (D)KLEMME	A	O	&C19/C15	(F)ATTACHE (S)GRAPA	1				
[07]	96207482	(E)MOTOR-MODE (D)MOTOR	A	O	&C19/C15	(F)MOTEUR (S)MOTOR	1				
[08]	612224	(E)VALVE A-MODE (D)VENTIL	A	O	&C19/C15	(F)SOUPAPE (S)VALVULA	1				
[09]	612232	(E)ROD-MODE (D)STAB	A	O	&C19/C15	(F)TRINGLE (S)VARILLA	1				
[10]	612172	(E)CASE-A DEFR,W/SEAL (D)KASTEN	A	O	&C19/C15	(F)CARTER (S)CAJA	1				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

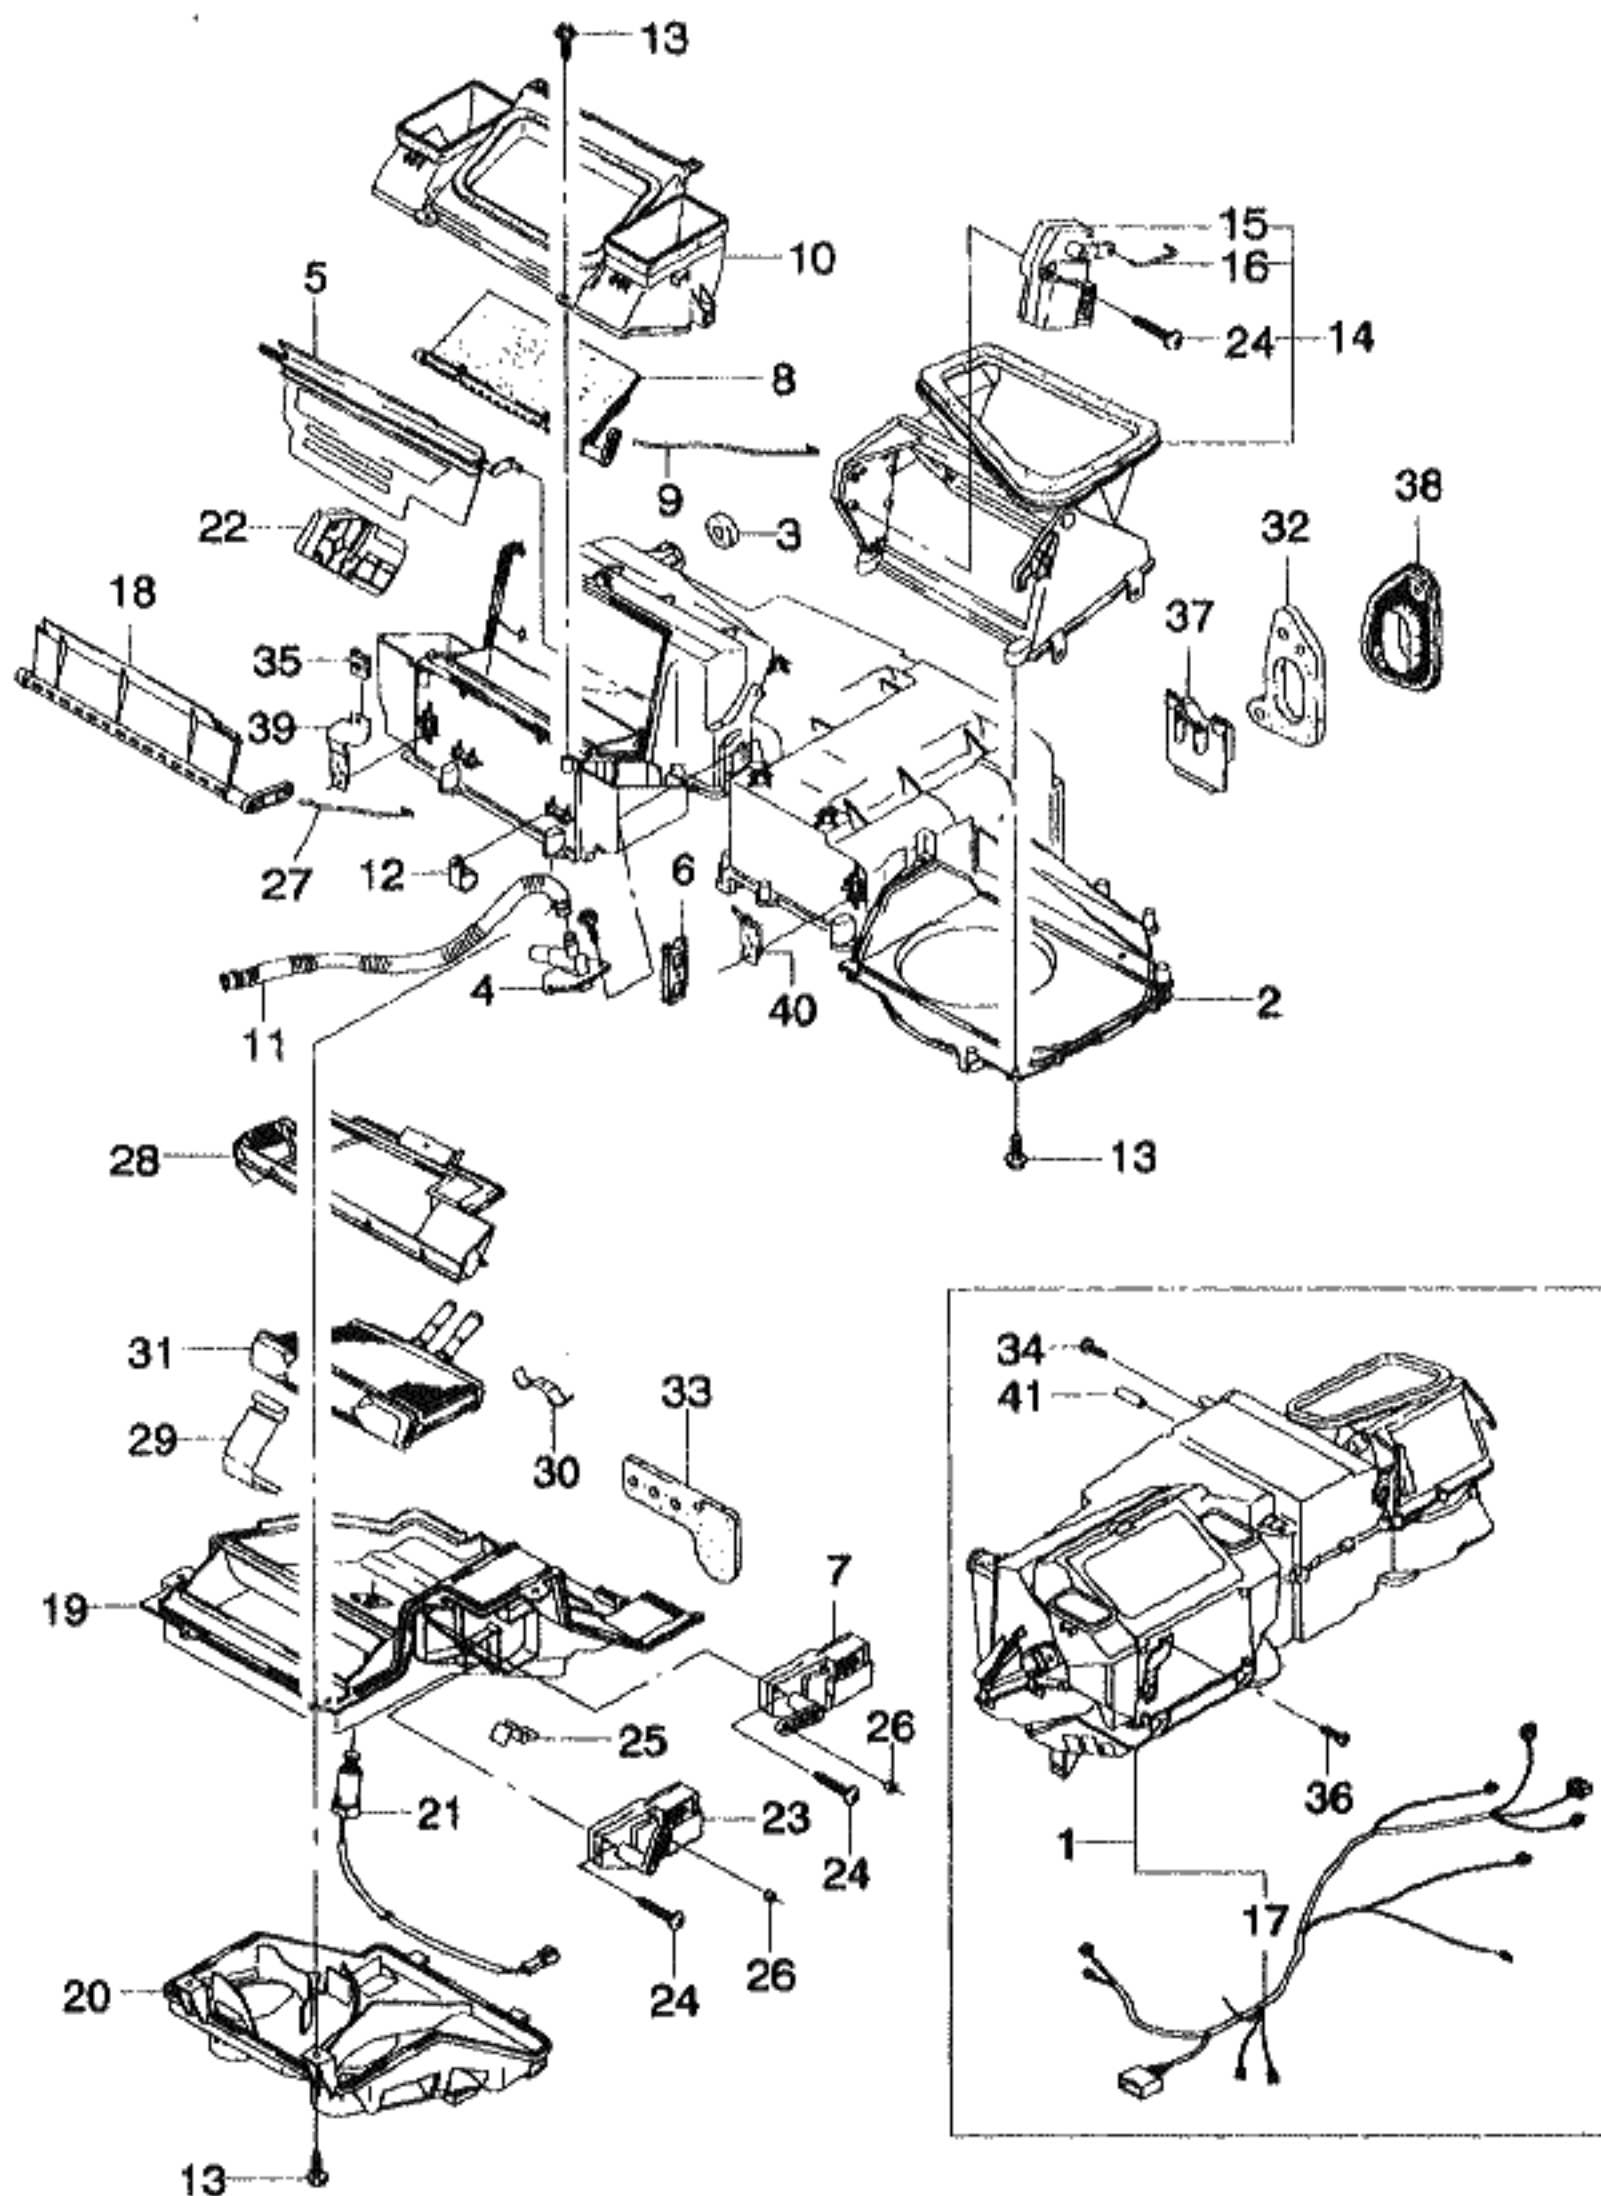


KEY NO.			PART NAME								
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
[11]	96207475	(E)HOSE-ASPIRATOR (D)SCHLAUCH	A	O	&C19/C15		(F)TUYAU (S)MANGUERA				
[12]	612337	(E)CLIP (D)KLEMME	A	O	&C19/C15		1				
	612083		A	O	&C19/C15		2			3N	
	612084		A	O	&C19/C15		2			5N	
	612085		A	O	&C19/C15		2			7N	
	612936		A	O	&C19/C15		2			9N	
[13]	611979	(E)SCREW (D)SCHRAUBE	A	O	&C19/C15		2			10N	
[14]	612227	(E)CASE-AIR INLET (D)LUFT-EINLAß	A	O	&C19/C15		47				
[15]	96207484	(E)MOTOR-AIR INLET (D)MOTOR	A	O	&C19/C15		(F)ENTREE AIR (S)ENTRADA DE AIRE				
[16]	612234	(E)ROD-AIR INLET (D)STAB	A	O	&C19/C15		1				
[17]	96207358	(E)WIRING HARNESS-ATC (D)VERDRAHTUNG	A	O	&C19/C15		(F)MOTEUR (S)MOTOR				
[18]	612223	(E)VALVE A- HTR/DEFR (D)VENTIL	A	O	&C19/C15		1				
[19]		(E)CASE-COVER (D)KASTEN					(F)BIELLE (S)VARILLA				
							(F)CABLAGE (S)INSTALACION ELECTRICA				
							1				
							(F)SOUPAPE (S)VALVULA				
							1				
							(F)CARTER (S)CAJA				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

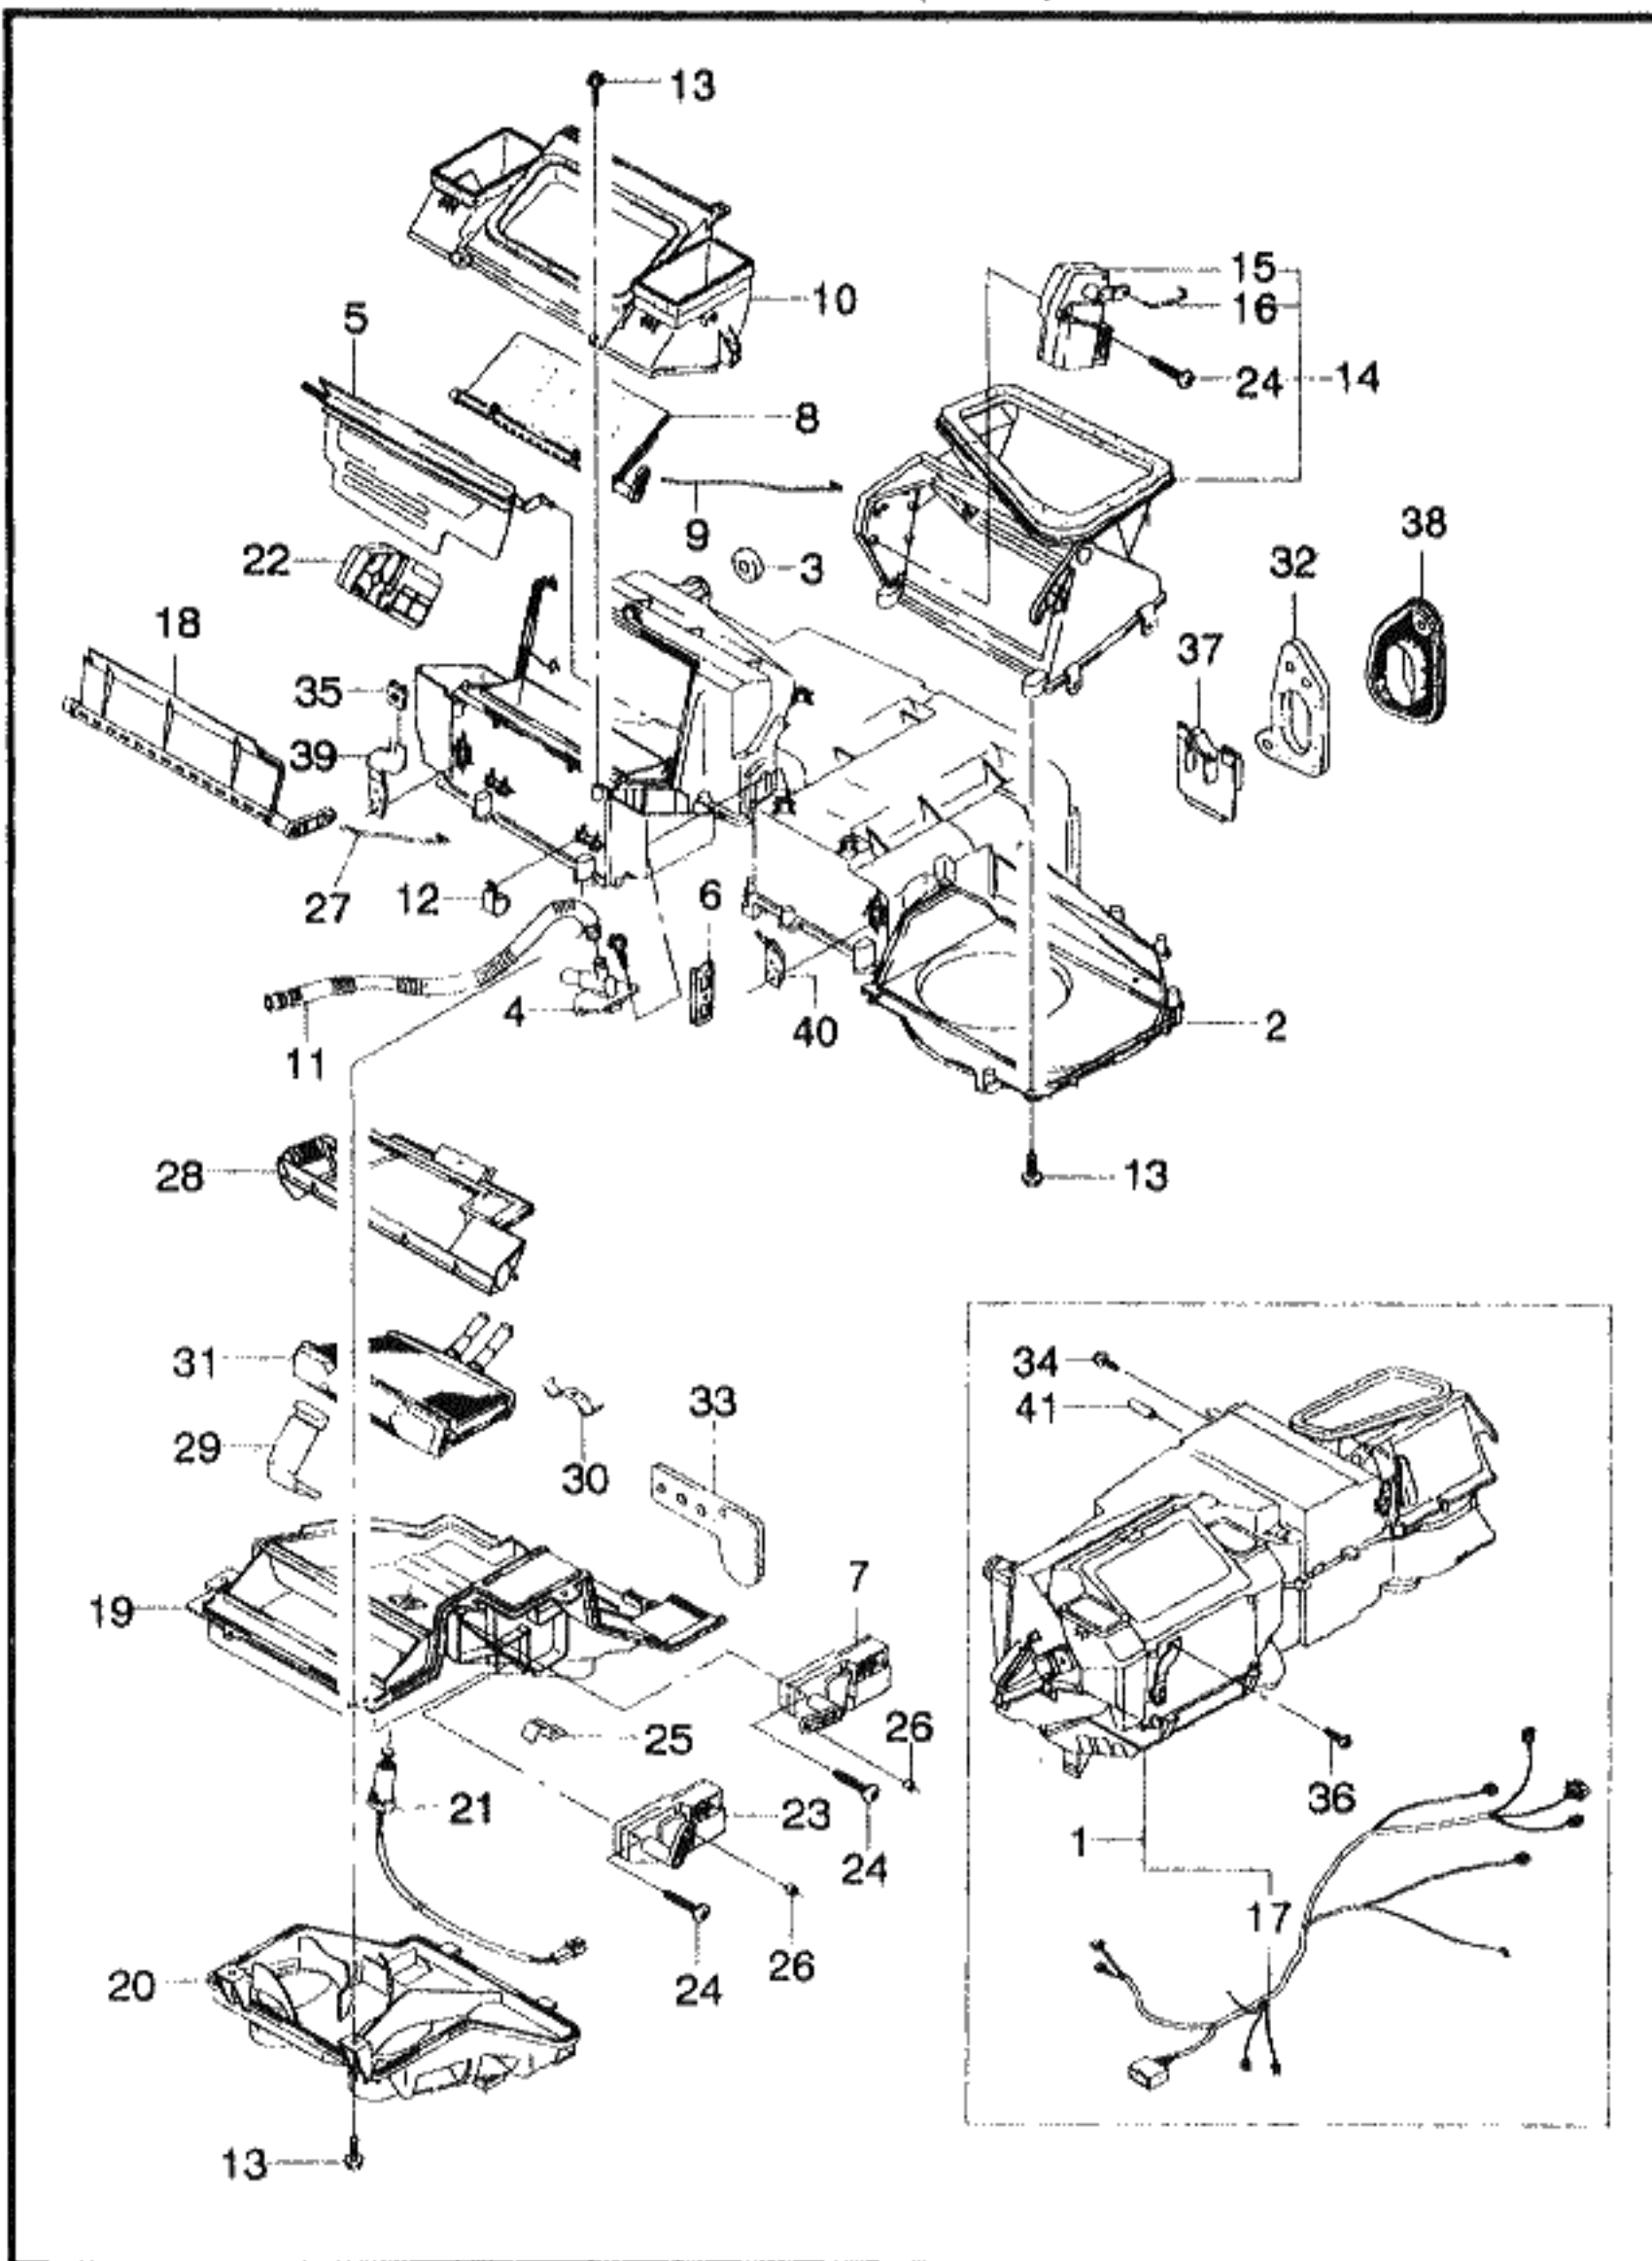


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	612258	.	A	O	&C19/C15		1					
	[20]				(E)HOUSING-AIR DISTRIBUTION (D)GEHÄUSE,LUFTVERTEILUNG		(F)LOGEMENT (S)CARCASA					
	96207415	.	A	O	&C19/C15		1					
	[21]				(E)SENSOR A-WATER (D)SENSOR,TEMPERATUR		(F)DETECTEUR-TEMPERATURE (S)SENSOR					
	96207480	.	A	O	&C19/C15		1					
	[22]				(E)MOTOR-TEMP (D)MOTOR		(F)MOTEUR (S)MOTOR					
	96207481	.	A	O	&C19/C15		1					
	[23]				(E)MOTOR-DEFROSTER (D)MOTOR		(F)MOTEUR (S)MOTOR					
	96207483	.	A	O	&C19/C15		1					
	[24]				(E)SCREW (D)SCHRAUBE		(F)VIS (S)TORNILLO					
	600111	.	A	O	&C19/C15		1					
	[25]				(E)CLIP-RETAINING (D)KLEMME		(F)ATTACHE (S)GRAPA					
	611984	.	A	O	&C19/C15		2					
	[26]				(E)HOLDER-ROD (D)BEHÄLTER		(F)MONTURE (S)RETNEDOR					
	610186	.	A	O	&C19/C15		2					
	[27]				(E)ROD-HEATER DEFROSTER (D)STAB		(F)TRINGLE (S)VARILLA					
	612233	.	A	O	&C19/C15		1					
	[28]				(E)CASE A-SHROUD (D)KASTEN		(F)CARTER (S)CAJA					
	612159	.	A	O	&C19/C15		1					
	[29]				(E)CLIP-TANK MOUNT (D)KLEMME		(F)ATTACHE (S)GRAPA					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

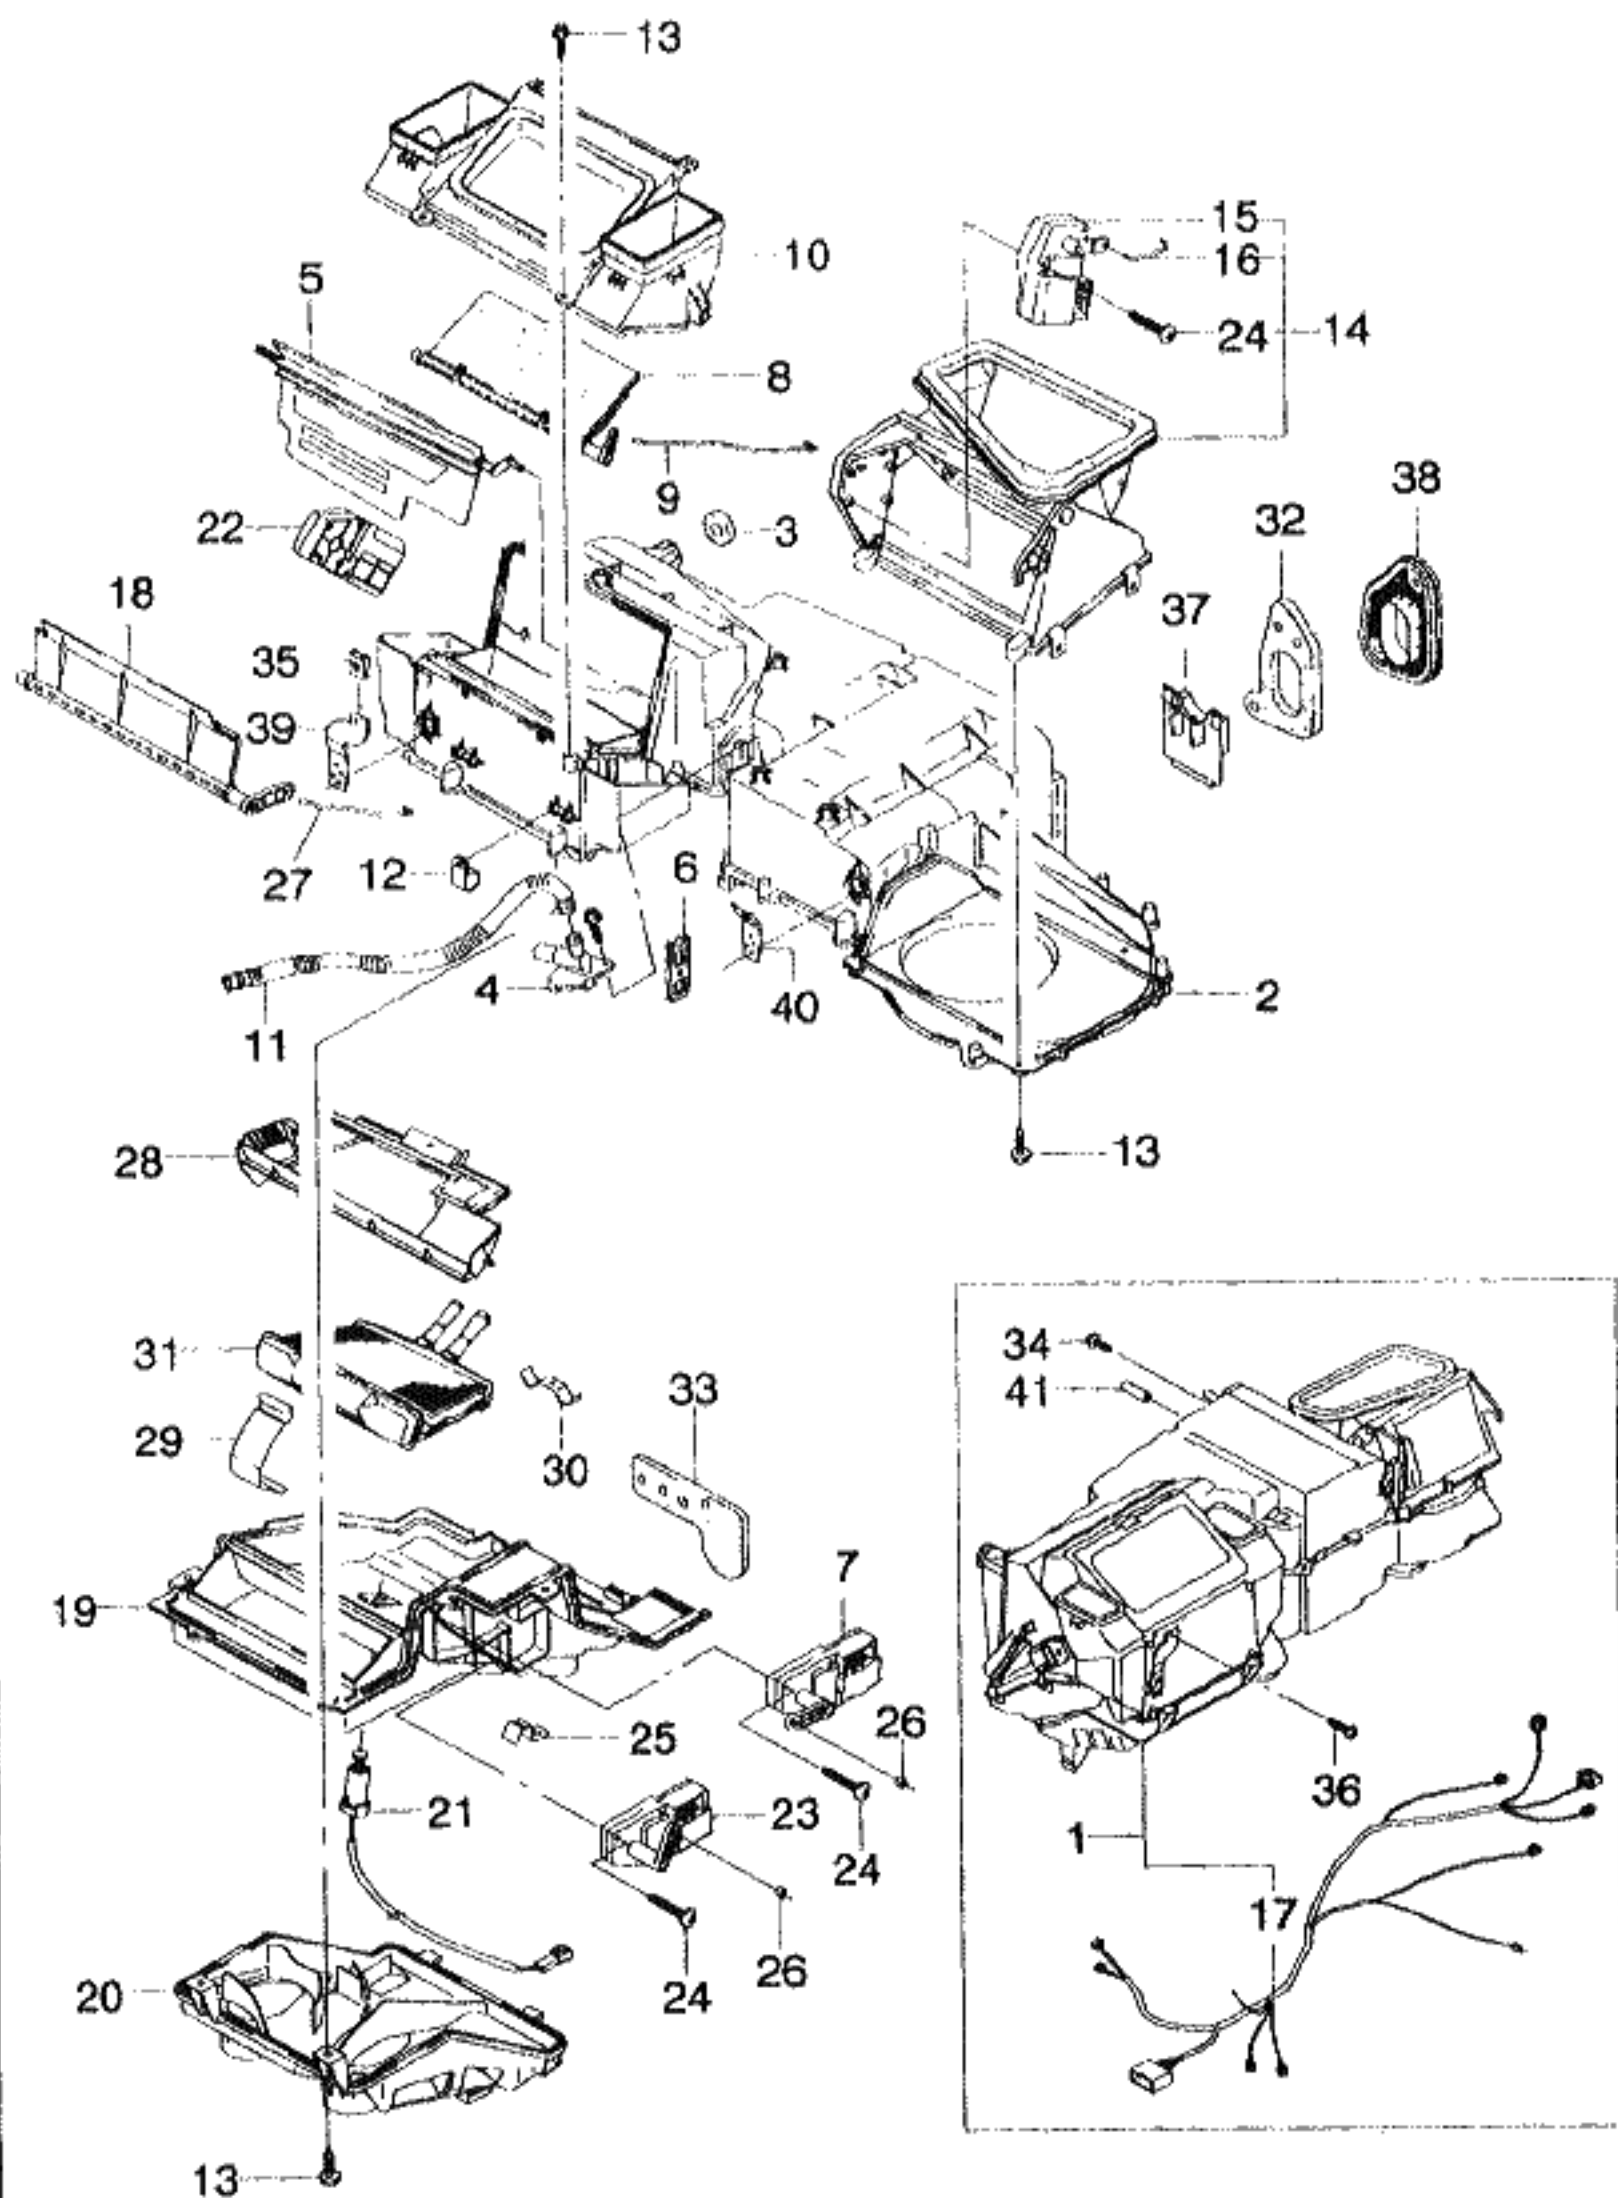


KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T' Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	612244	.	A	O	&C19/C15		1					
	[30]				(E)BRACKET-PIPE MOUNT (D)TRÄGER		(F)SUPPORT (S)SOPORTE					
	611980	.	A	O	&C19/C15		1					
	[31]				(E)CORE A-HEATER (D)GEHÄUSE,HEIZUNG		(F)NOYAU-CHAUFFAGE (S)NUCLEO-CALENTADOR					
	96207413	.	A	O	&C19/C15		1					
	[32]				(E)SEAL (D)DICHTUNG		(F)JOINT D'ETANCHEITE (S)SELLO					
	611992	.	A	O	&C19/C15		1					
	[33]				(E)SEAL-HTR PIPE,DASH (D)DICHTUNG		(F)JOINT D'ETANCHEITE (S)SELLO					
	612173	.	A	O	&C19/C15		1					
	[34]				(E)SCREW (D)SCHRAUBE		(F)VIS (S)TORNILLO					
	09139-06003	.	A	O	&C19/C15		5					
	[35]				(E)NUT-SPEED (D)MUTTER		(F)ECROU (S)TUERCA					
	03511-48042	.	A	O	&C19/C15		3					
	[36]				(E)SCREW-TAPPING (D)SCHRAUBE		(F)VIS (S)TORNILLO					
	03170-48135	.	A	O	&C19/C15		1					
	03160-48165	.	A	O	&C19/C15		2					
	[37]				(E)CLIP (D)KLEMME		(F)ATTACHE (S)GRAPA					
	612020	.	A	O	&C19/C15		1					
	[38]				(E)COVER A-EVAPORATOR HOLE (D)DECKEL		(F)CARTER (S)CUBIERTA					
	96211761	.	A	O	&C19/C15		1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

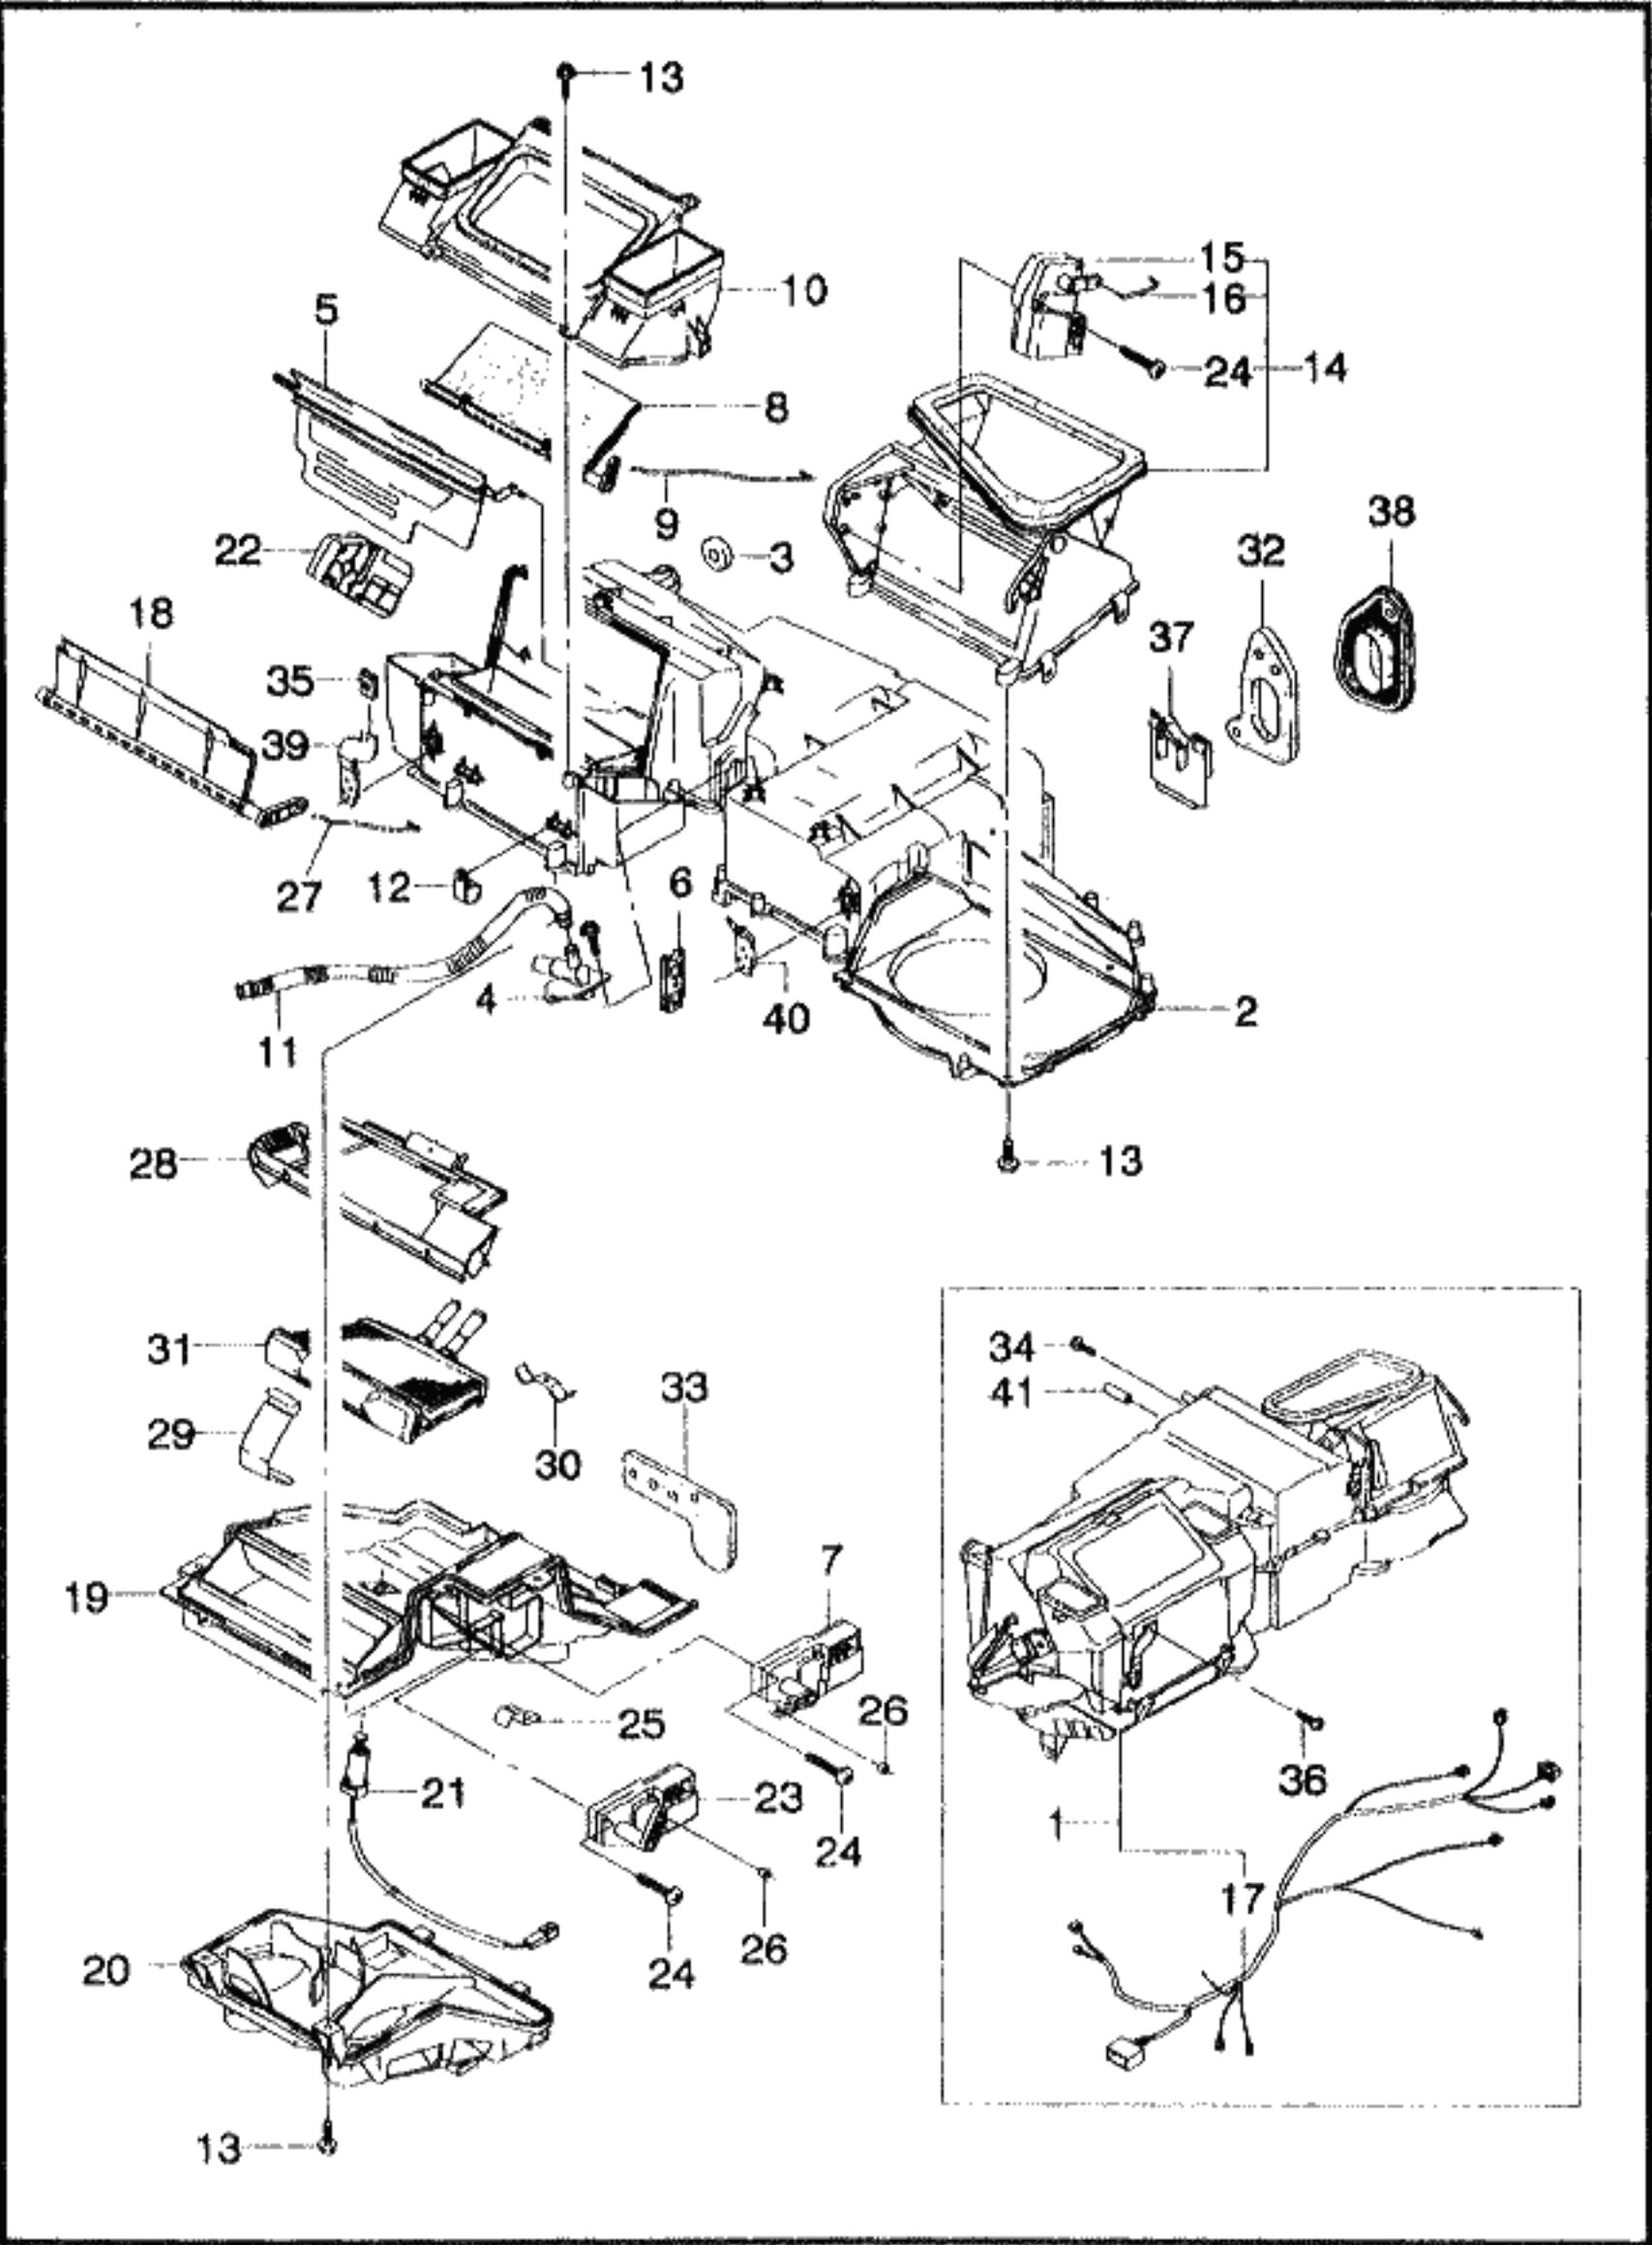


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[39] 612165	(E)BRACKET-HANGER VENT (D)TRÄGER	A	O	&C19/C15		(F)SUPPORT (S)SOPORTE	1			
	[40] 612166	(E)BRACKET-HANGER STRAIGHT (D)TRÄGER	A	O	&C19/C15		(F)SUPPORT (S)SOPORTE	1			
	[41] 90190478	(E)CAP (D)DECKEL	A	O	&C19/C15		(F)CHAPEAU (S)TAPA	1			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

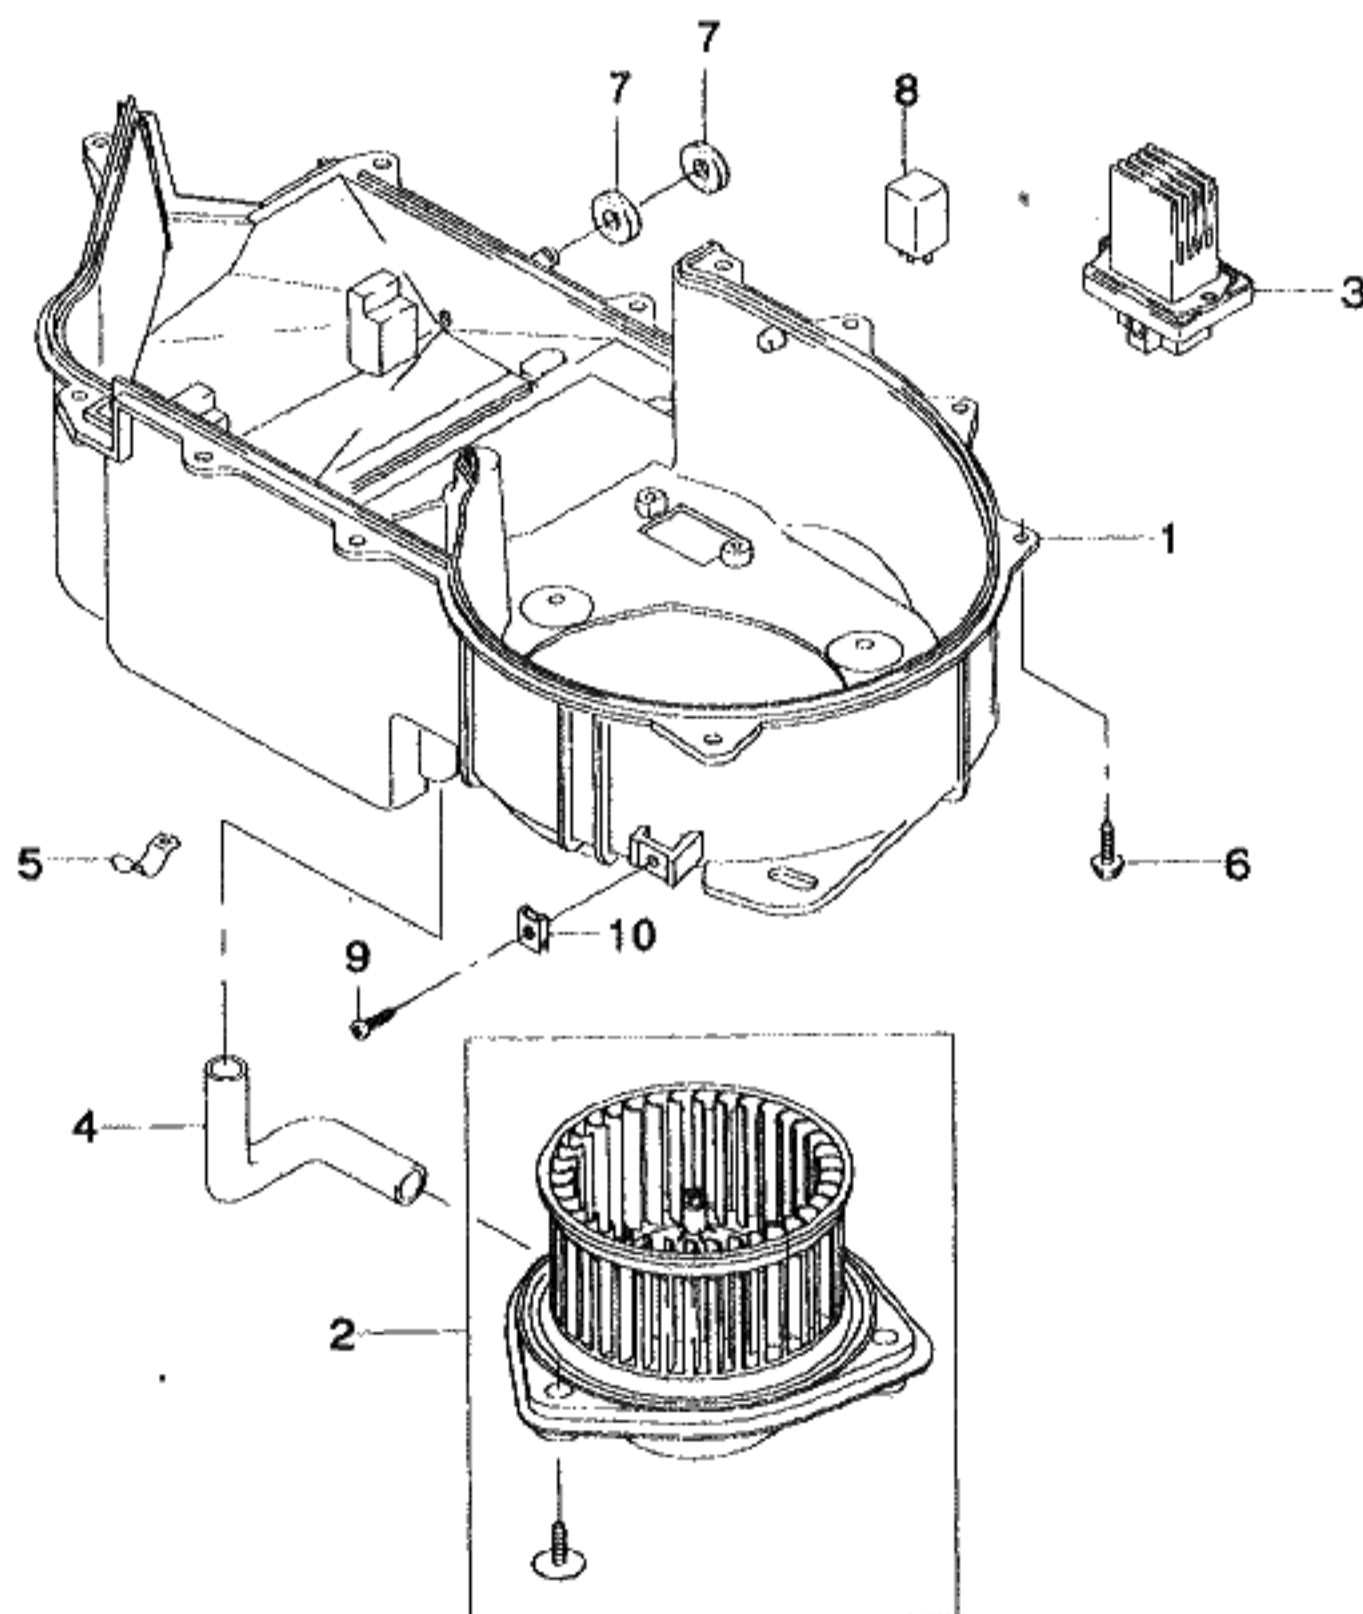


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 612161	(E)CASE-LOWER (D)KASTEN . S S			(F)CARTER (S)CAJA 1						
	[02] 96190671	(E)MOTOR-BLOWER (D)MOTOR . S S			(F)MOTEUR (S)MOTOR 1						
	[03] 96207414 96207453	(E)RESISTOR-BLOWER (D)WIDERSTAND . S S . A O		&C59/C60 &C19/C15	(F)RESISTANCE (S)RESISTOR 1 1						
	[04] 612030	(E)TUBE-COOLING (D)ROHRLEITUNG . S S			(F)TUYAU OU TUBE (S)TUBO 1						
	[05] 611985	(E)CLIP (D)KLEMME . S S			(F)ATTACHE (S)GRAPA 1						
	[06] 611979	(E)SCREW (D)SCHRAUBE . S S			(F)VIS (S)TORNILLO 13						
	[07] 611986 612925	(E)SEAL-DRAIN PIPE (D)DICHTUNG . S S . S S			(F)JOINT D'ETANCHEITE (S)SELLO 1 1				THIN THICK		
	[08] 90244312	(E)RELAY A (D)RELAIS . S S		FOR BLOWER HIGH	(F)RELAJ (S)RELEVADOR 1						
	[09] 03170-48135	(E)SCREW-TAPPING (D)SCHRAUBE . S S			(F)VIS (S)TORNILLO 1						
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

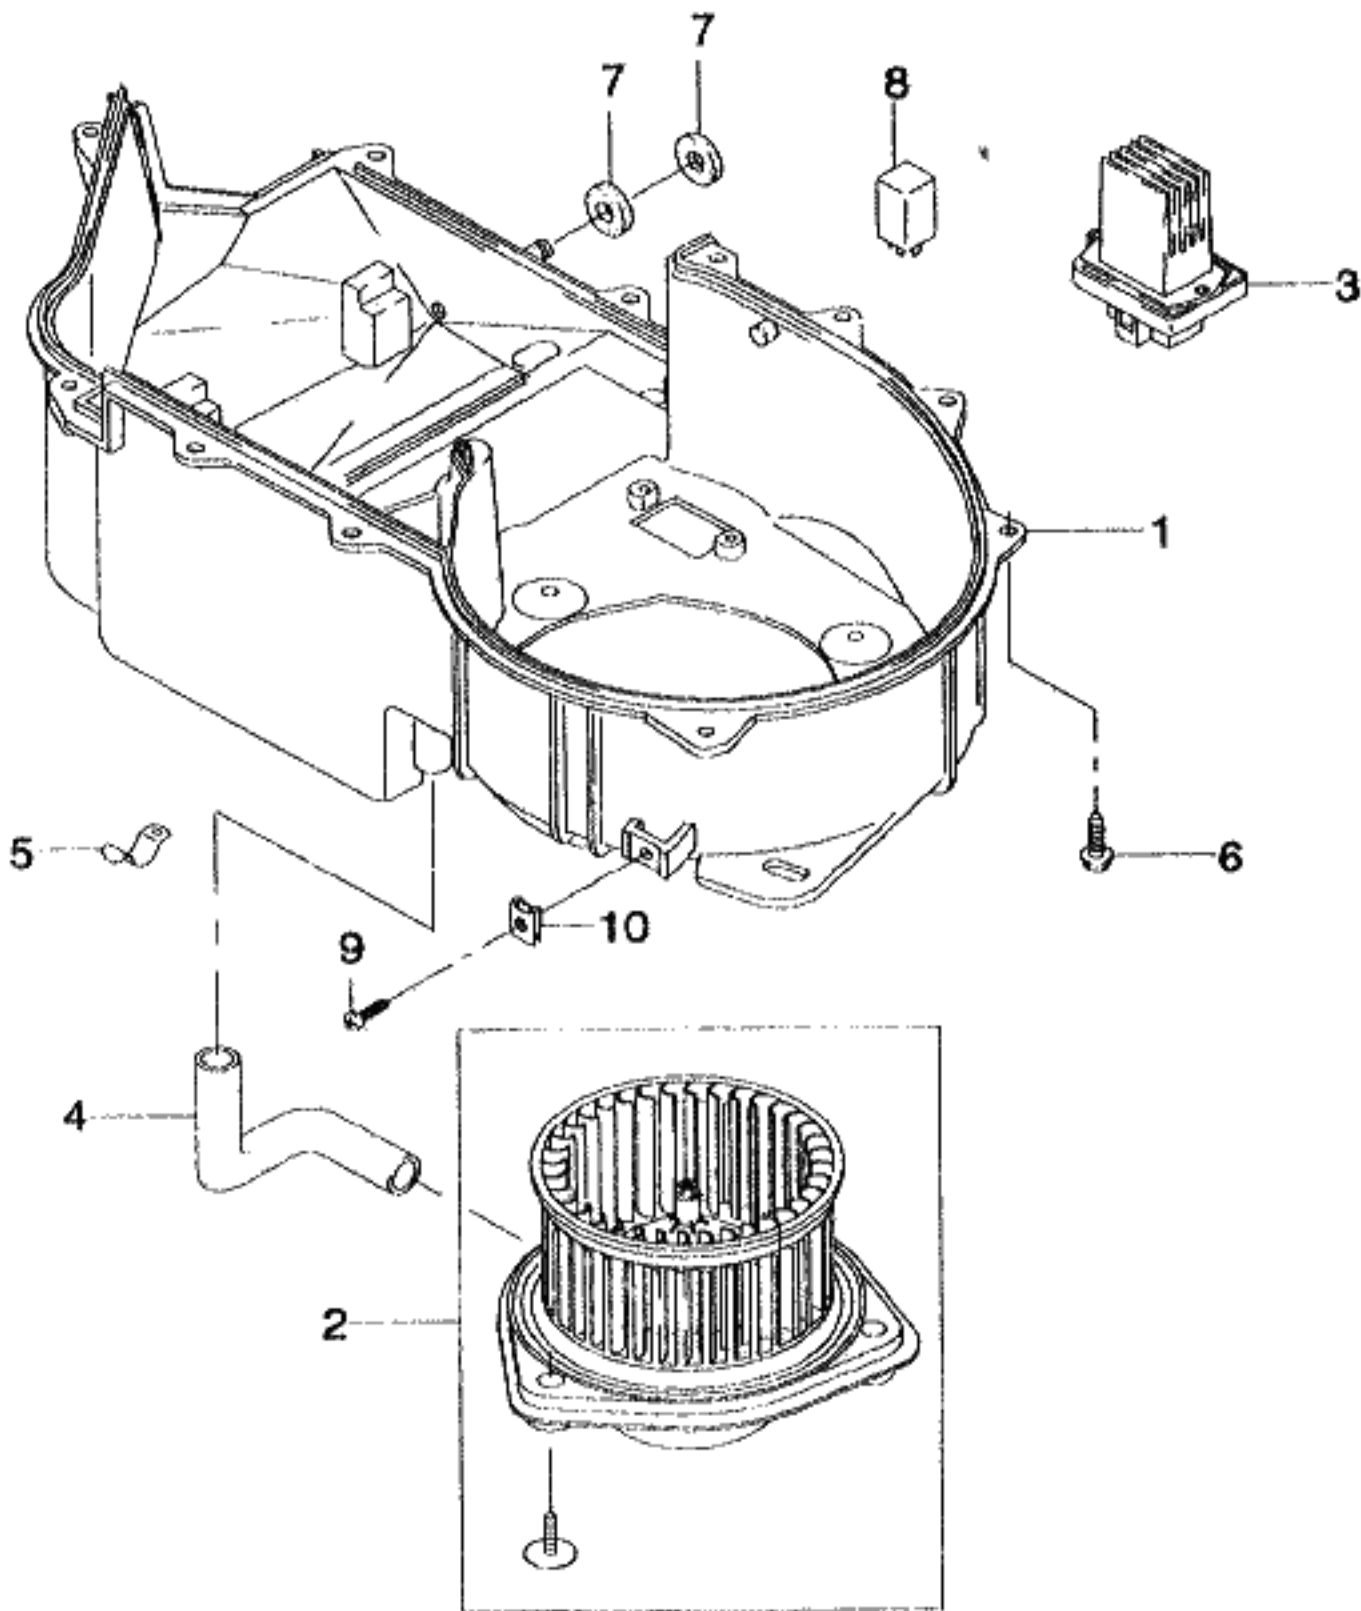

KEY NO.			PART NAME								
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[10] 03511-48042	(E)NUT-SPEED (D)MUTTER	S	S			(F)ECROU (S)TUERCA 3				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

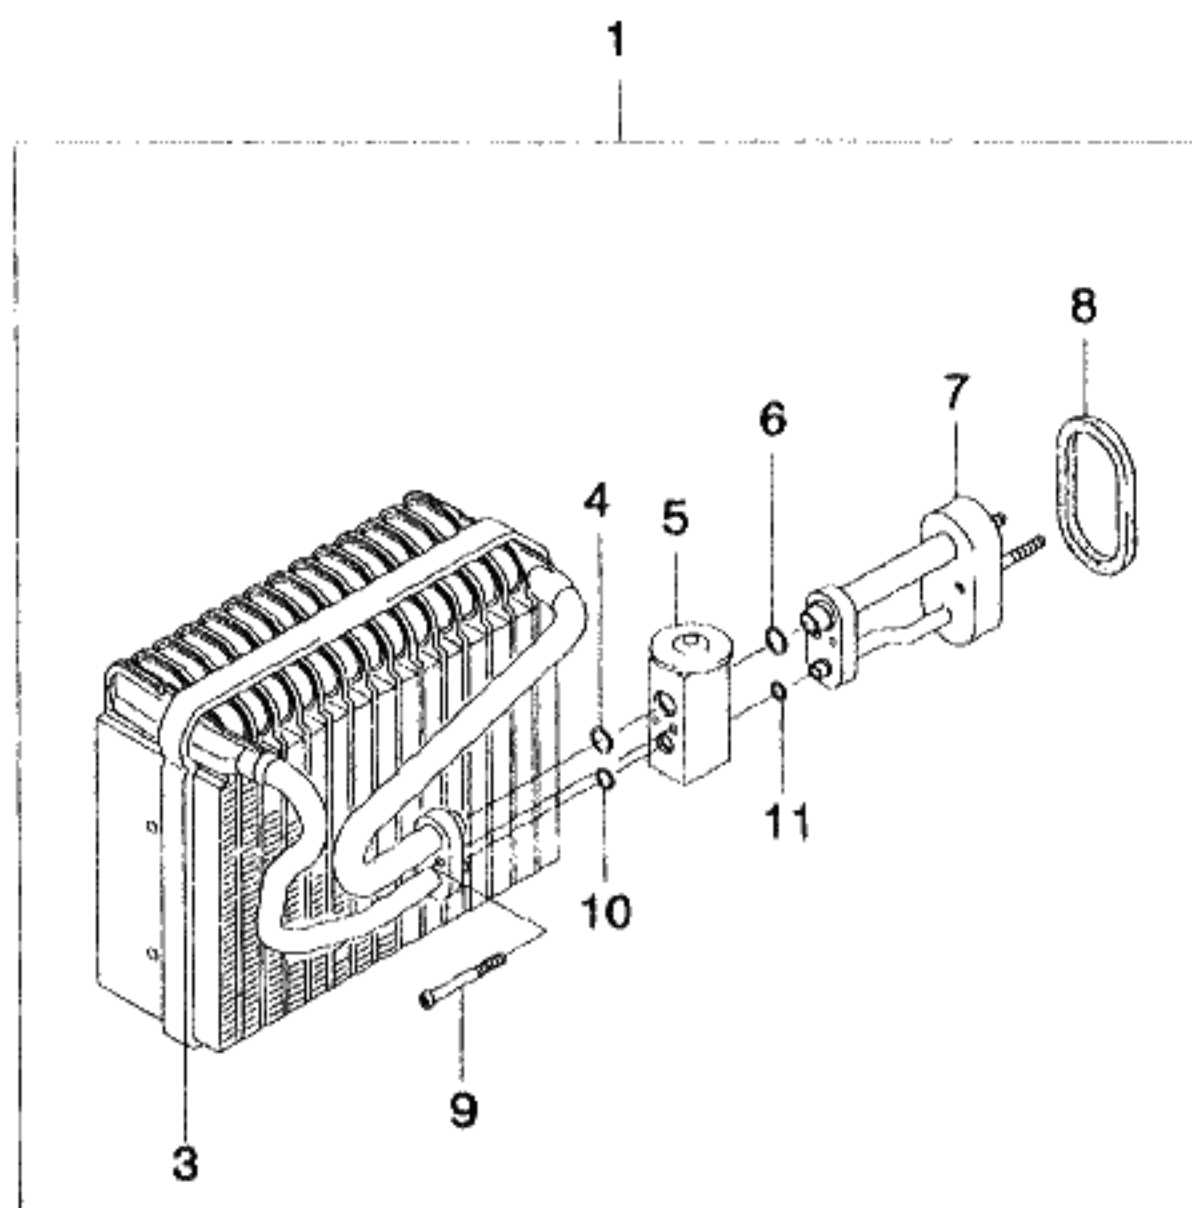


KEY NO.		PART NAME									
I T C	PART NO.	MODEL		OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL				FROM	TO			
			S X C D X								
	[01]	(E)EVAPORATER A (D)VERDAMPFER				(F)EVAPORATEUR (S)EVAPORADOR					
	611817	S S				1					
	[03]	(E)SEAL-EVAPORATOR (D)DICHTUNG				(F)JOINT D'ETANCHEITE (S)SELLO					
	612054	S S				1					
	[04]	(E)O RING-OUTLET (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	3094215	S S				1					
	[05]	(E)VALVE-THERMOSTATIC (D)VENTIL				(F)SOUPAPE (S)VALVULA					
	96190670	S S				1					
	[06]	(E)O RING-OUTLET (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	3094215	S S				1					
	[07]	(E)FITTING & PIPE A-IN/OUT (D)ROHR				(F)TUYAU (S)TUBERIA					
	612210	S S				1					
	[08]	(E)SEAL-BLOCK (D)DICHTUNG				(F)JOINT D'ETANCHEITE (S)SELLO					
	612008	S S				1					
	[09]	(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO					
	600098	S S				2					
	[10]	(E)O RING-EVAPORATOR INLET (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	3094214	S S				1					
	[11]	(E)O RING-DASH INLET (D)O RING				(F)JOINT TORIQUE (S)ANILLO EN O					
	3093509	S S				1					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

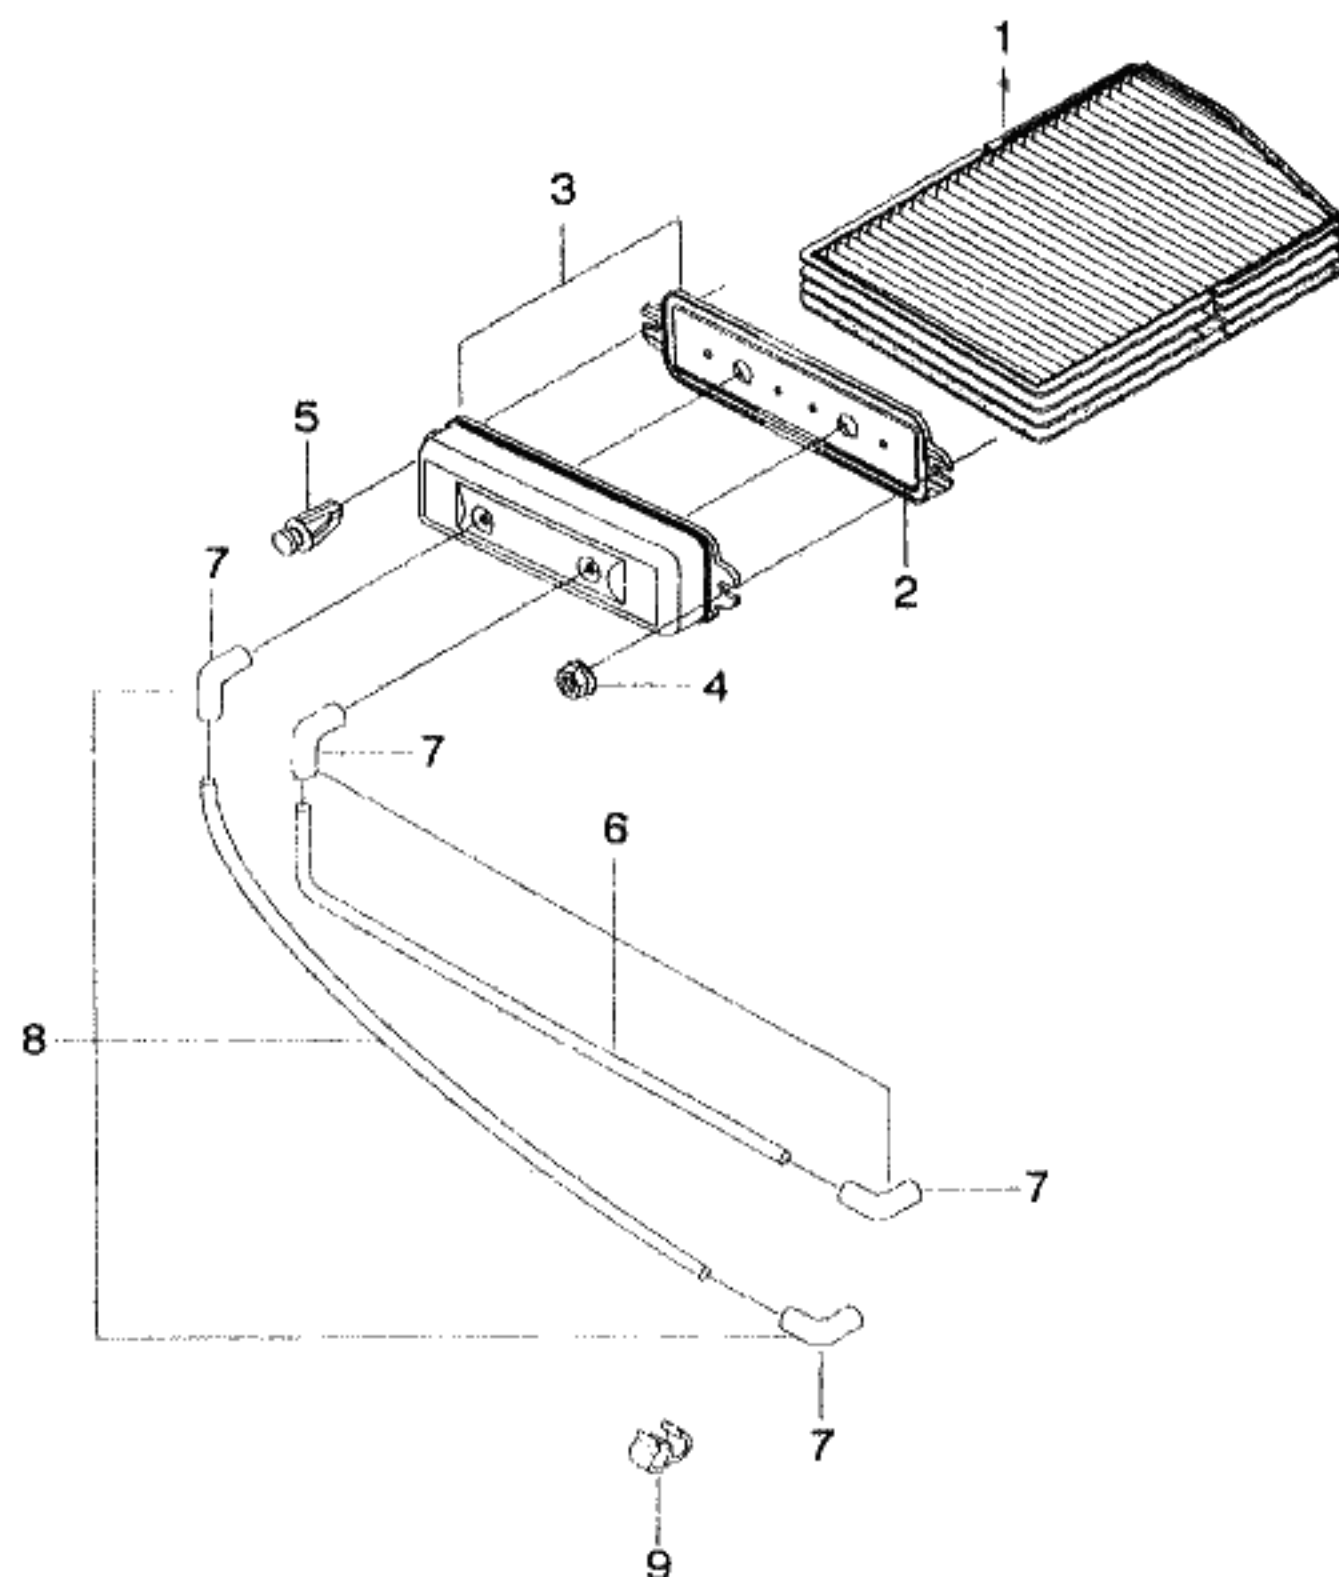


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01]	(E) FILTER A-AIR (D) FILTER					(F) FILTRE (S) FILTRO				
	96207422	S S				1					FL
	[02]	(E) COVER A-AIR FILTER (D) DECKEL					(F) CARTER (S) CUBIERTA				
	96207426	A O	&C19/C15			1					
	[03]	(E) TANK A-VACUUM (D) TANK					(F) RESERVOIR (S) TANQUE				
	96207472	S S	&C59/C60			1					
	[04]	(E) NUT-W/WASHER (D) MUTTER					(F) ECROU (S) TUERCA				
	08361-15063	S S	&C59/C60/C15			1					
	[05]	(E) CLIP (D) KLEMME					(F) ATTACHE (S) GRAPA				
	09409-08312	S S	&C59/C60/C15			1					
	[06]	(E) PIPE A-VACUUM, TANK (D) ROHR, VAKUUM					(F) TUYAU-DEPRESSION (S) TUBERIA-VACIO				
	96207468	S S	&C59/C60			1					VA
	[07]	(E) HOSE-VACUUM (D) SCHLAUCH, VAKUUM					(F) TUYAU-DEPRESSION (S) MANGUERA-VACIO				
	96190643	S S	&C59/C60			4					
	[08]	(E) PIPE A-VACUUM, MODULE (D) ROHR, VAKUUM					(F) TUYAU-DEPRESSION (S) TUBERIA-VACIO				
	96207451	S S	&C59/C60			1					VE
	[09]	(E) CLIP (D) KLEMME					(F) ATTACHE (S) GRAPA				
	09408-00030	S S	&C59/C60			1					


LEVEL	T/A (TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON

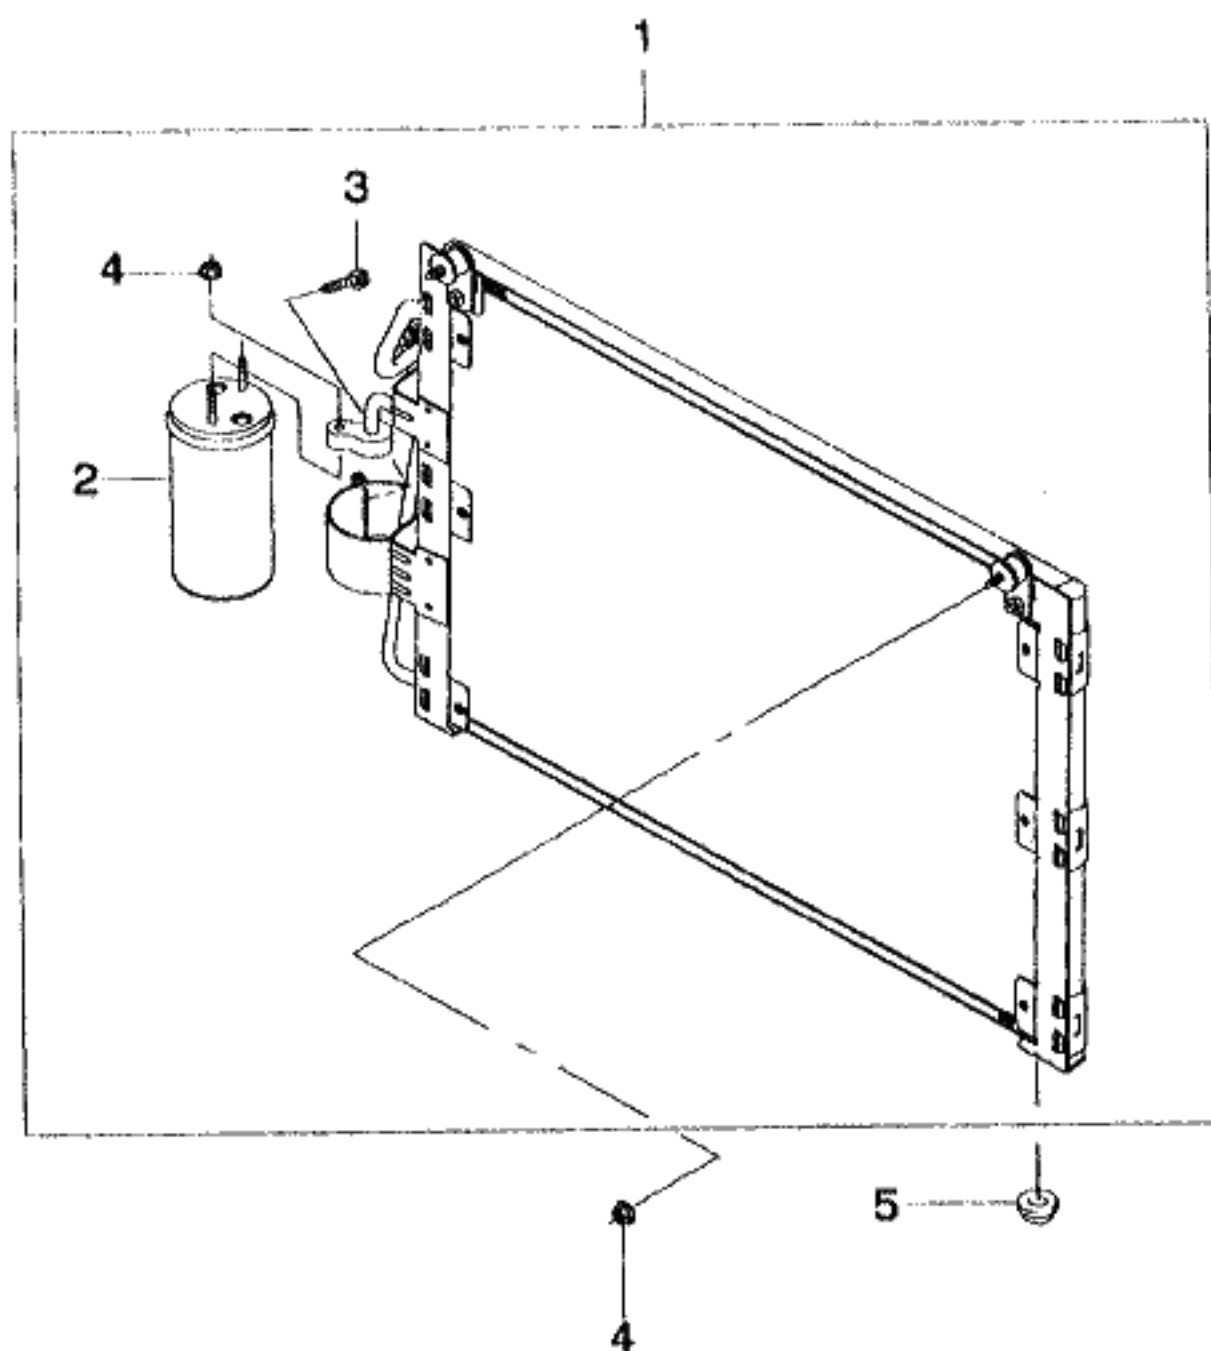


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96207354	(E)CONDENSER A (D)KONDENSATOR					(F)CONDENSATEUR (S)CONDENSADOR				ET
	[02] 96207359	(E)DRYER A-RECEIVER (D)FILTERTROCKNER					(F)EVAPORATEUR (S)BOTELLA SECADORA				
	[03] 600102	(E)BOLT (D)SCHRAUBE					(F)BOULON (S)PERNO				
	[04] 08316-25063	(E)NUT-FLANGE (D)MUTTER					(F)ECROU (S)TUERCA				
	[05] 96190602	(E)GROMMET-INSULATING,LWR (D)ÖSE					(F)VIROLE (S)AISLANTE				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

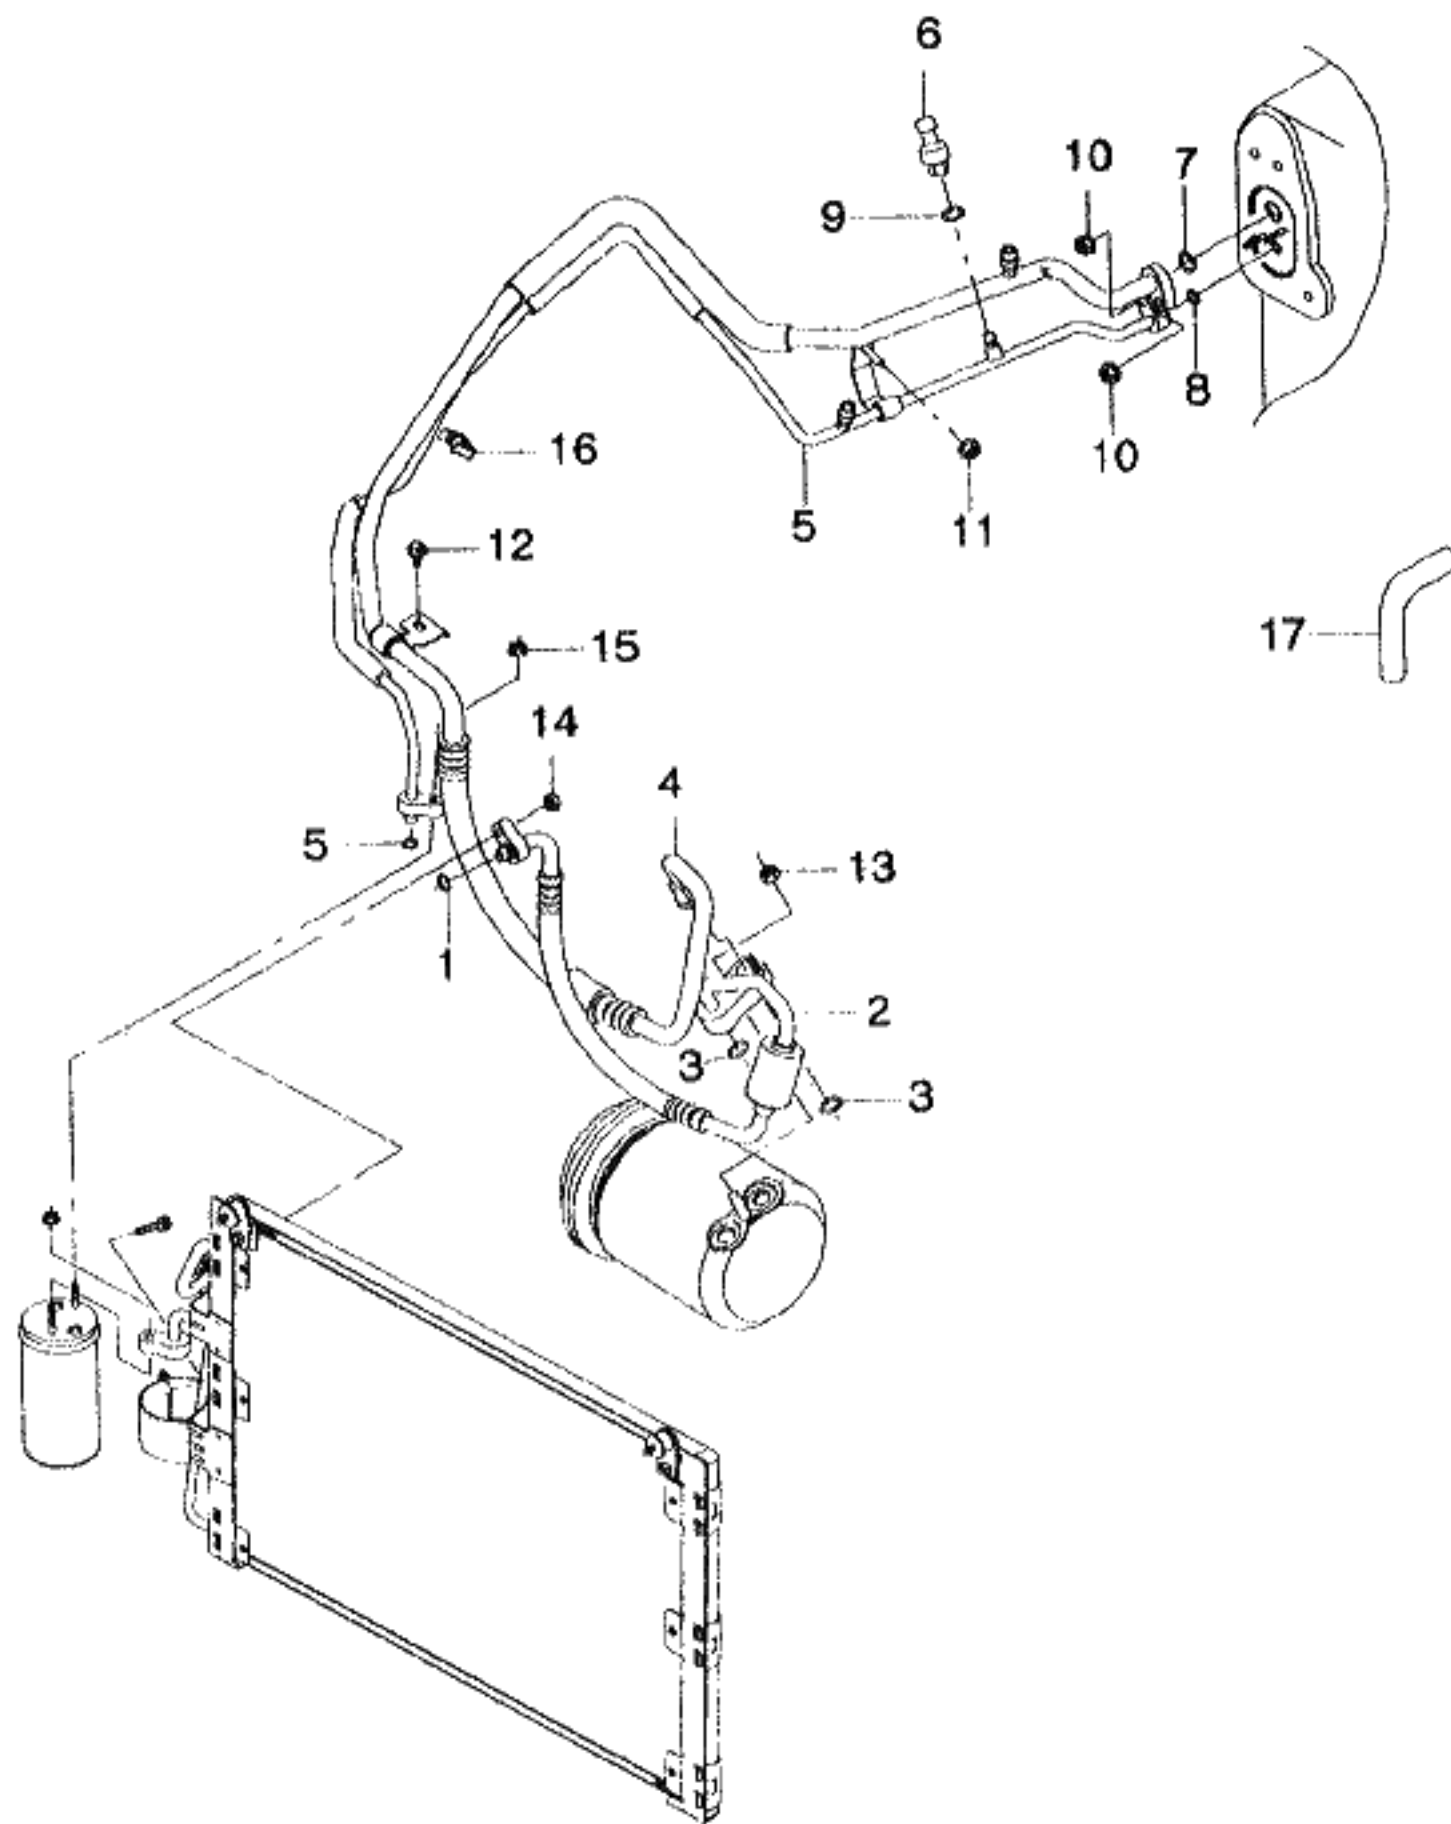


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 09280-15003	(E)O RING (D)O RING . O O &C60/C15					(F)JOINT TORIQUE (S)ANILLO EN O 1				
	[02] 96207379	(E)HOSE A-REFRIG,DISCHARGE (D)SCHLAUCH,KÜHLMITTEL . O O &C60/C15					(F)TUYAU (S)MANGUERA 1				H2
	[03] 52455752	(E)WASHER-SEALING (D)RING,DICHTUNG . O O &C60/C15					(F)RONDELLE-ETANCHEITE (S)ARANDELA-SELLANTE 2				
	[04] 96207378	(E)HOSE A-REFRIG,SUCTION (D)SCHLAUCH . O O &C60/C15					(F)TUYAU (S)MANGUERA 1				H1
	[05] 96207361	(E)PIPE A-REF,R/D (D)ROHR . O O &C60/C15					(F)TUYAU (S)TUBERIA 1				L1
	[06] 96190607	(E)PRESSURE-TRANSDUCER (D)DRUCKWANDLER . O O &C60/C15					(F)CAPTEUR DE PRESSION (S)TRANSDUCTOR PRESION 1				
	[07] 09280-19001	(E)O RING (D)O RING . O O &C60/C15					(F)JOINT TORIQUE (S)ANILLO EN O 1				
	[08] 09280-15003	(E)O RING (D)O RING . O O &C60/C15					(F)JOINT TORIQUE (S)ANILLO EN O 2				
	[09] 09280-08001	(E)O RING (D)O RING . O O &C60/C15					(F)JOINT TORIQUE (S)ANILLO EN O 1				
	[10] 08316-25063	(E)NUT-FLANGE (D)MUTTER . O O &C60/C15					(F)ECROU (S)TUERCA 2				
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

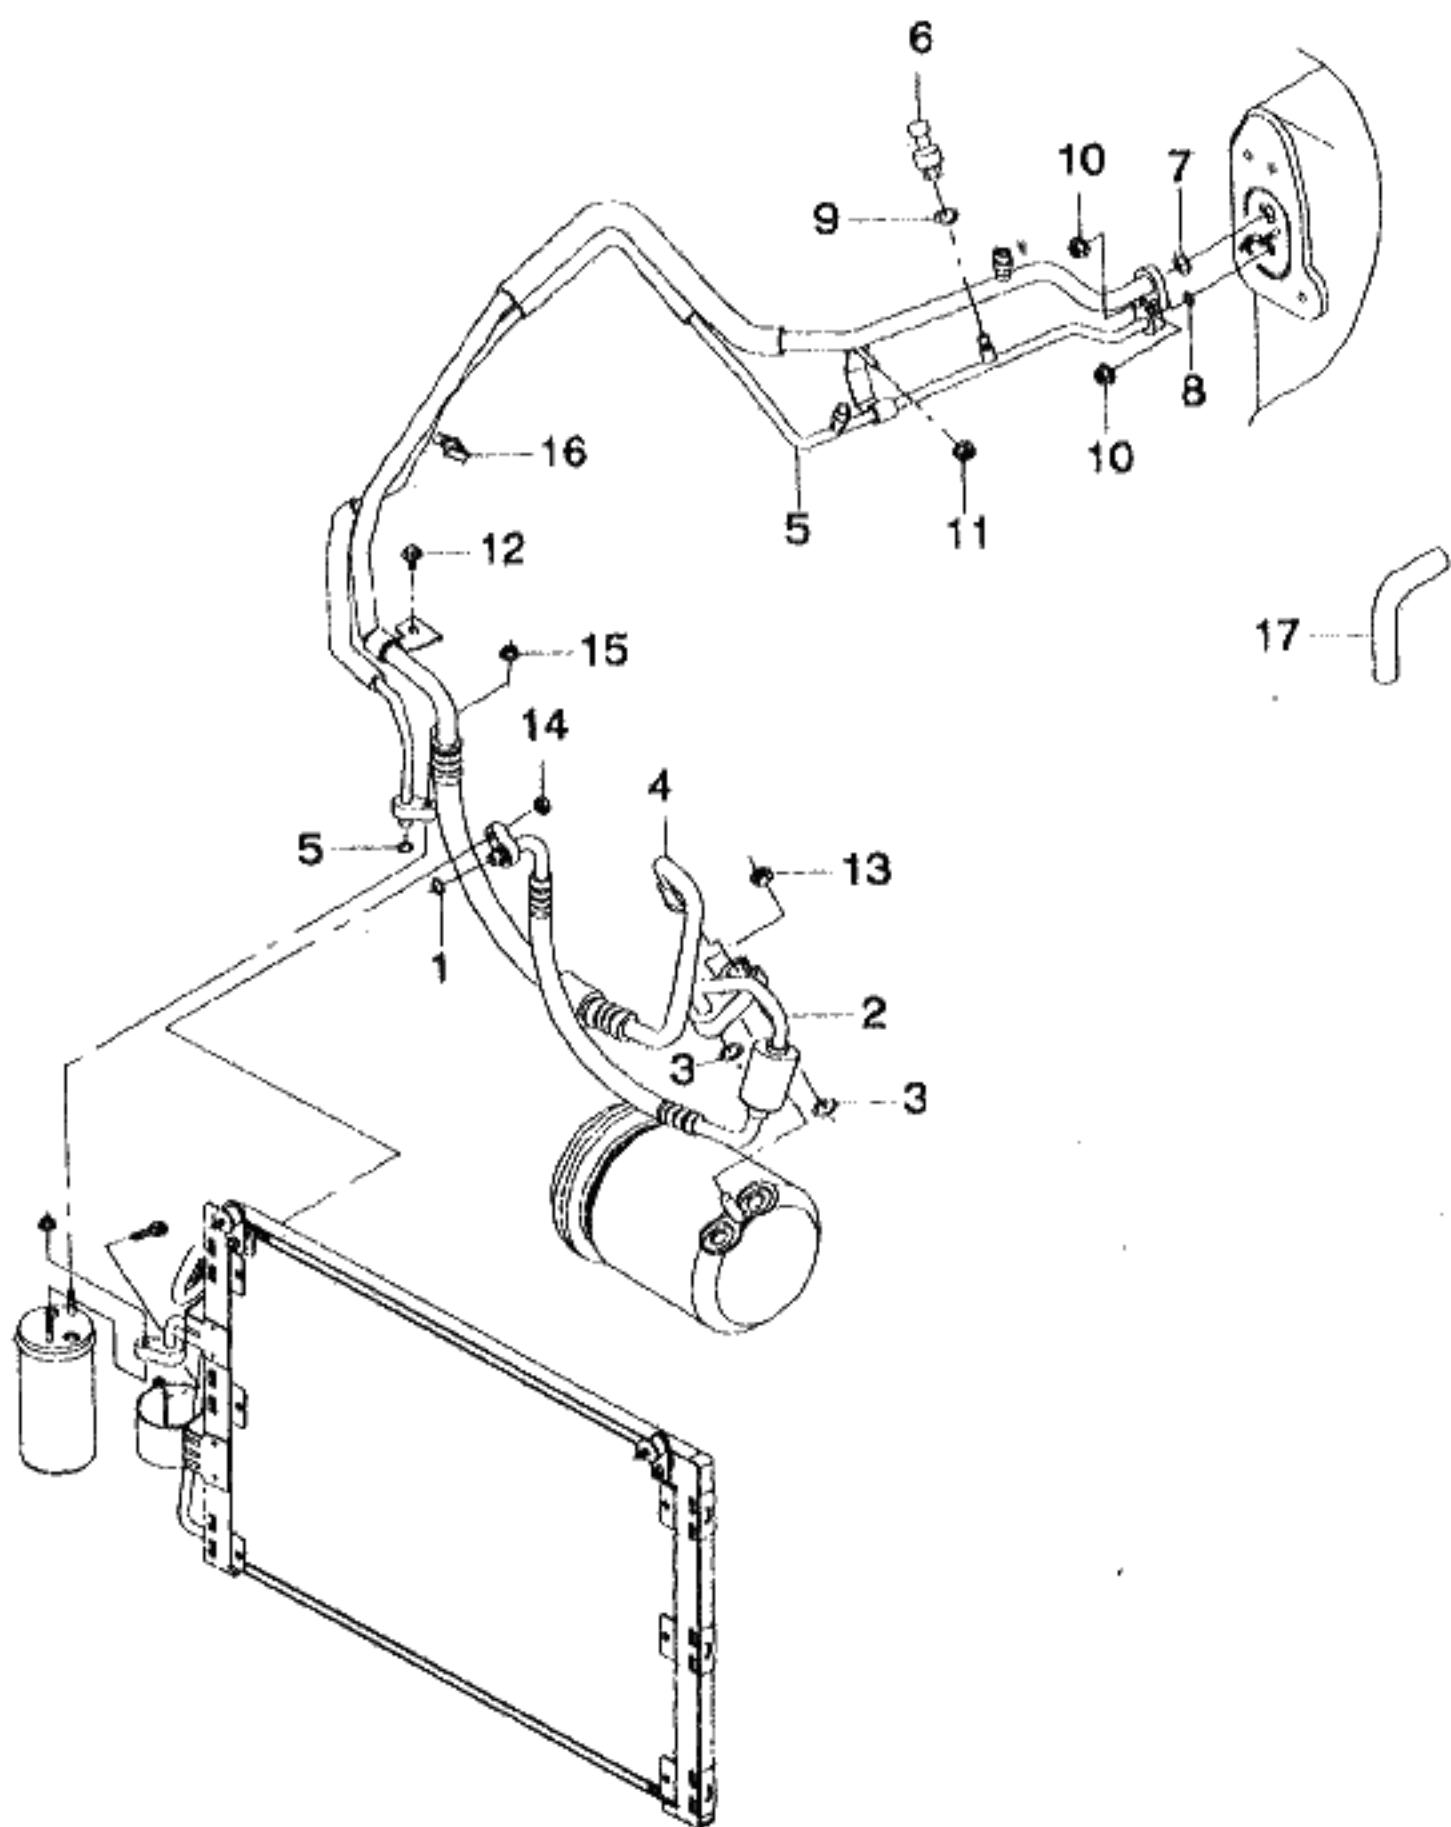


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[11] 08316-25063	(E)NUT-FLANGE (D)MUTTER	.	O O	&C60/C15		(F)ECROU (S)TUERCA	1			
	[12] 01517-06123	(E)BOLT-FLANGE (D)SCHRAUBE	.	O O	&C60/C15		(F)BOULON (S)PERNO	1			
	[13] 09159-10013	(E)NUT (D)MUTTER	.	O O	&C60/C15		(F)ECROU (S)TUERCA	1			
	[14] 08310-12083	(E)NUT-HEXAGON (D)MUTTER	.	O O	&C60/C15		(F)ECROU (S)TUERCA	1			
	[15] 08316-25063	(E)NUT-FLANGE (D)MUTTER	.	O O	&C60/C15		(F)ECROU (S)TUERCA	1			
	[16] 09403-08301	(E)CLAMP (D)KLAMMER	.	O O	&C60/C15		(F)PINCE (S)ABRAZADERA	1			
	[17] 96211764	(E)HOSE-WATER DRAIN (D)SCHLAUCH,WASSER ABLAUF	.	S S			(F)TUYAU-ECOULEMENT EAU (S)MANGUERA-DRENAJE DE AGUA	1			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

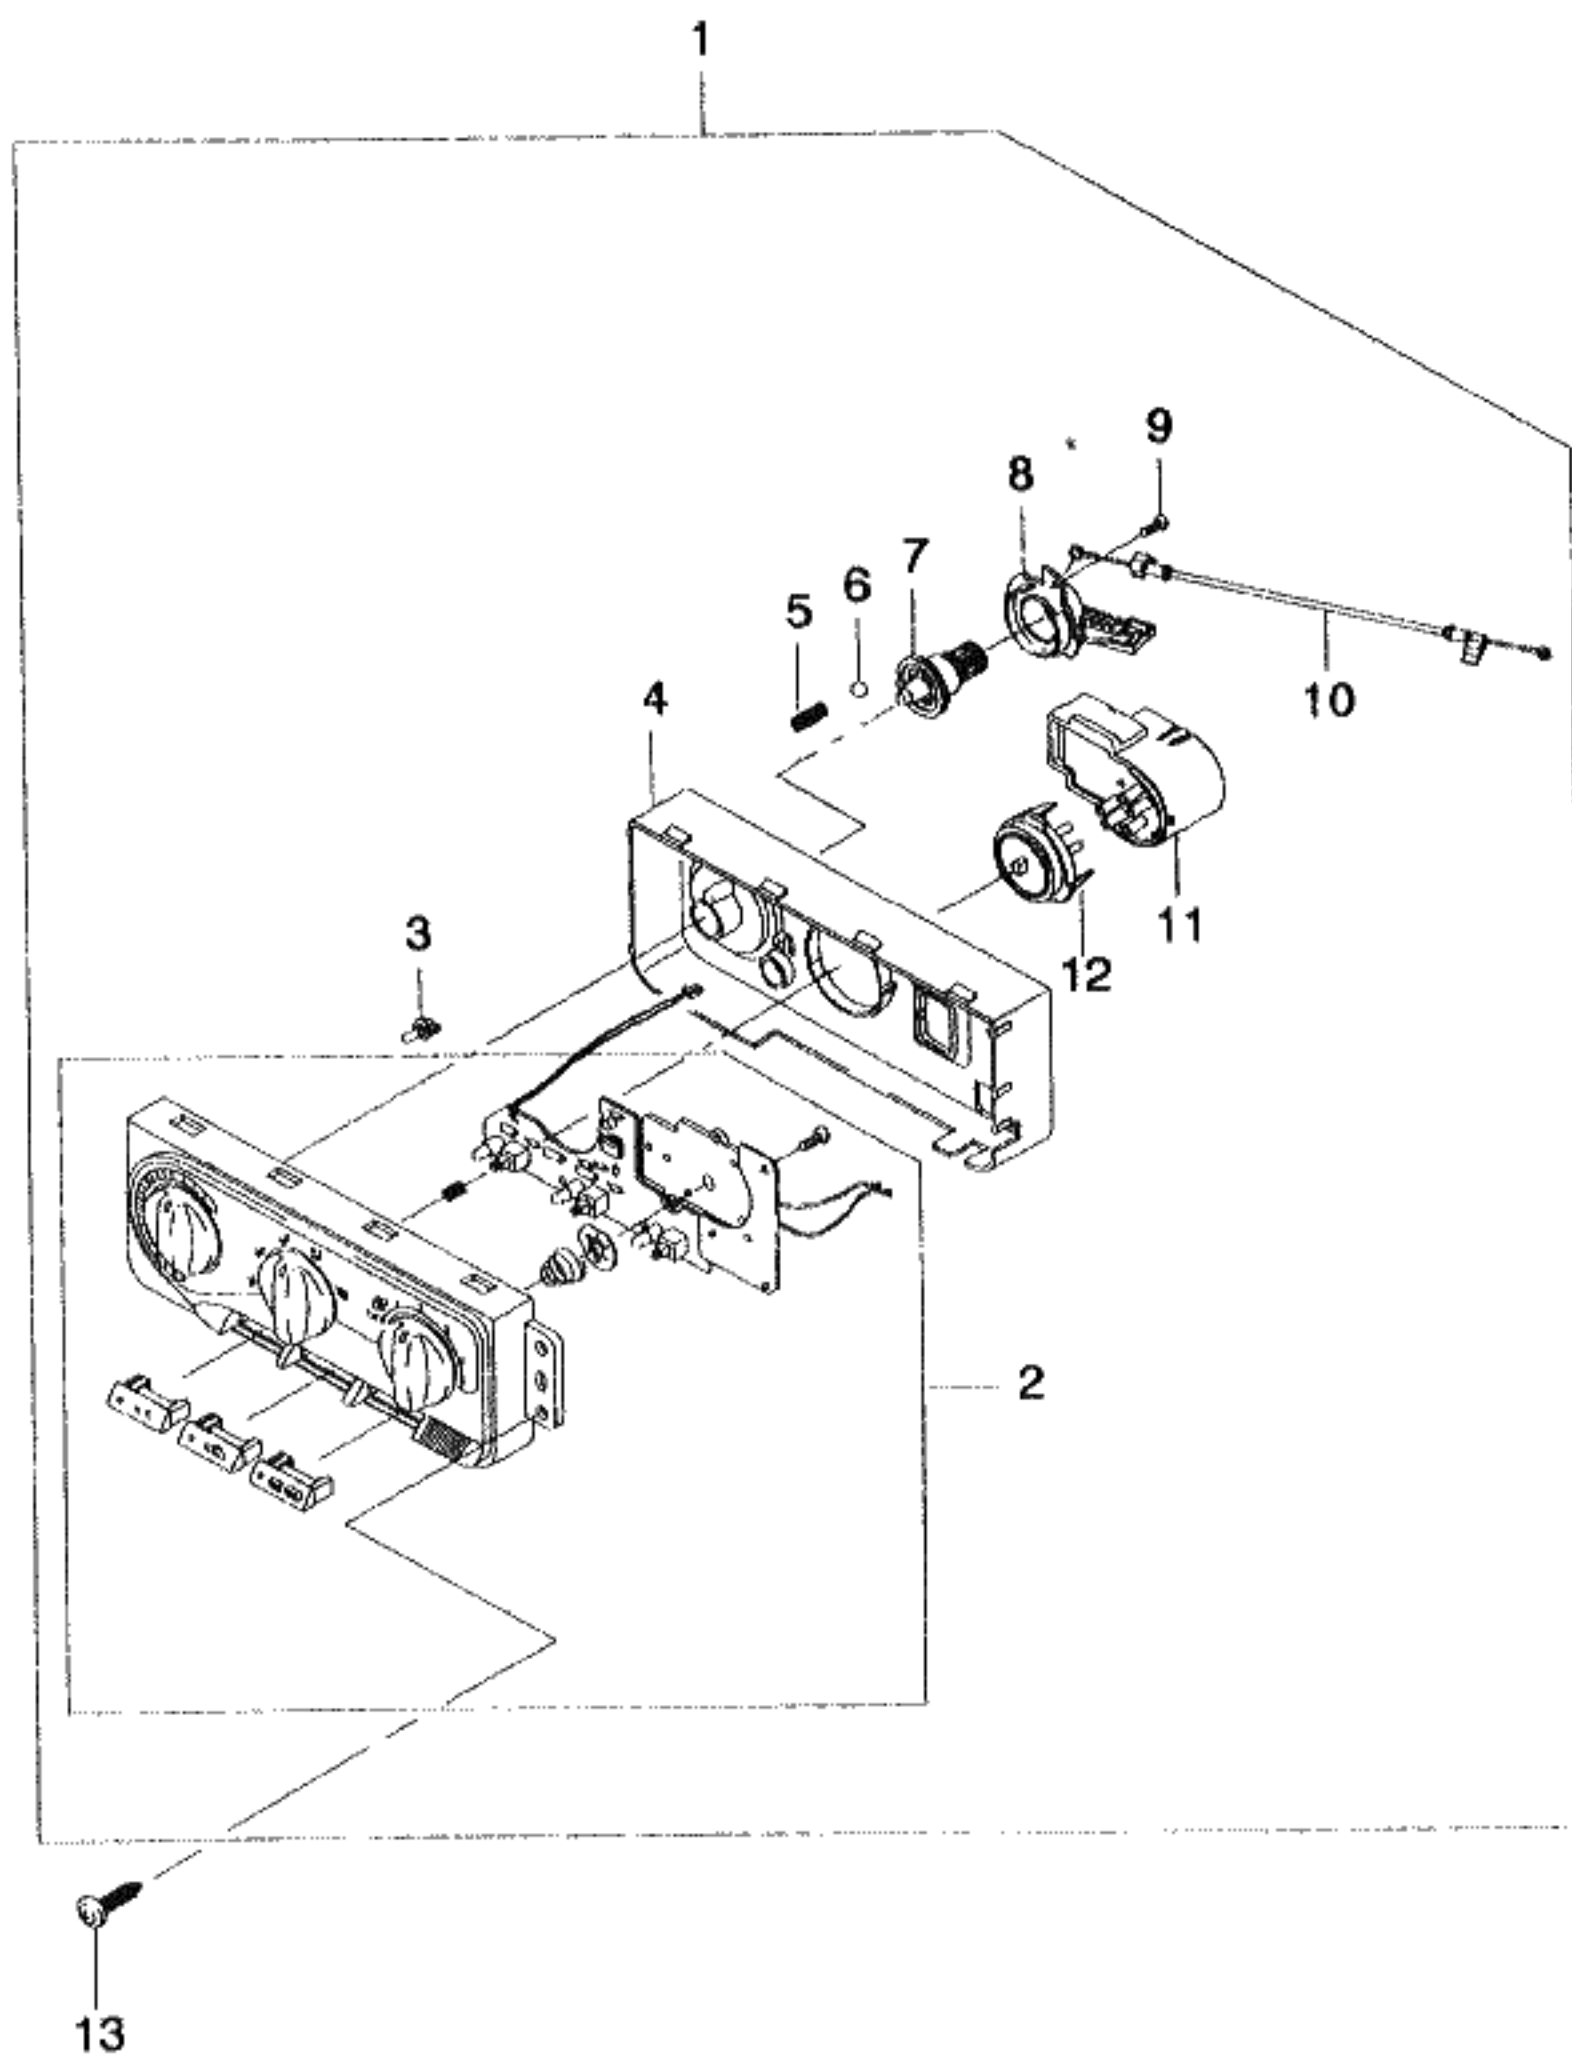


KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
			S X	C D X						
[01]				(E) SWITCH A-AIR CON CONTROL (D) SCHALTER			(F) COMMUTATEUR-CONTROLE (S) INTERRUPTOR			
96207458			S	&C59&DM0/DM6		1				SC
96207459			O S	&C59&DM7/DP0		1				SD
96207456			O	&C60&DM0/DM6		1				SA
96207457			O O	&C60&DM7/DP0		1				SB
[02]				(E) PANEL A-CONTROL (D) VERKLEIDUNG			(F) PANNEAU (S) PANEL			
759214			S	&C59&DM0/DM6		1				
759282			O S	&C59&DM7/DP0		1				
759119			O	&C60&DM0/DM6		1				
759281			O O	&C60&DM7/DP0		1				
[03]				(E) BULB (D) BIRNE			(F) AMPOULE (S) BOMBILLA			
752593			S S	&C59/C60		2				
[04]				(E) COVER-RR (D) DECKEL			(F) COUVERTURE (S) CUBIERTA			
159108			S S	&C59/C60		1				
[05]				(E) SPRING (D) FEDERUNG			(F) RESSORT (S) RESORTE			
159101			S S	&C59/C60		1				
[06]				(E) BALL-DETENT (D) KUGEL			(F) BOULE (S) BOLA			
159102			S S	&C59/C60		1				
[07]				(E) PINION-TEMP (D) RITZEL			(F) PIGNON (S) PIÑON			
159103			S S	&C59/C60		1				
[08]				(E) RACK A-TEMP (D) CREMAILLE			(F) GESTELL (S) ENGRANAJE			
759102			S S	&C59/C60		1				
		LEVEL				T/A (TRANSAXLE)				
		S X = 2.0 SOHC CDX = 2.0 DOHC				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				

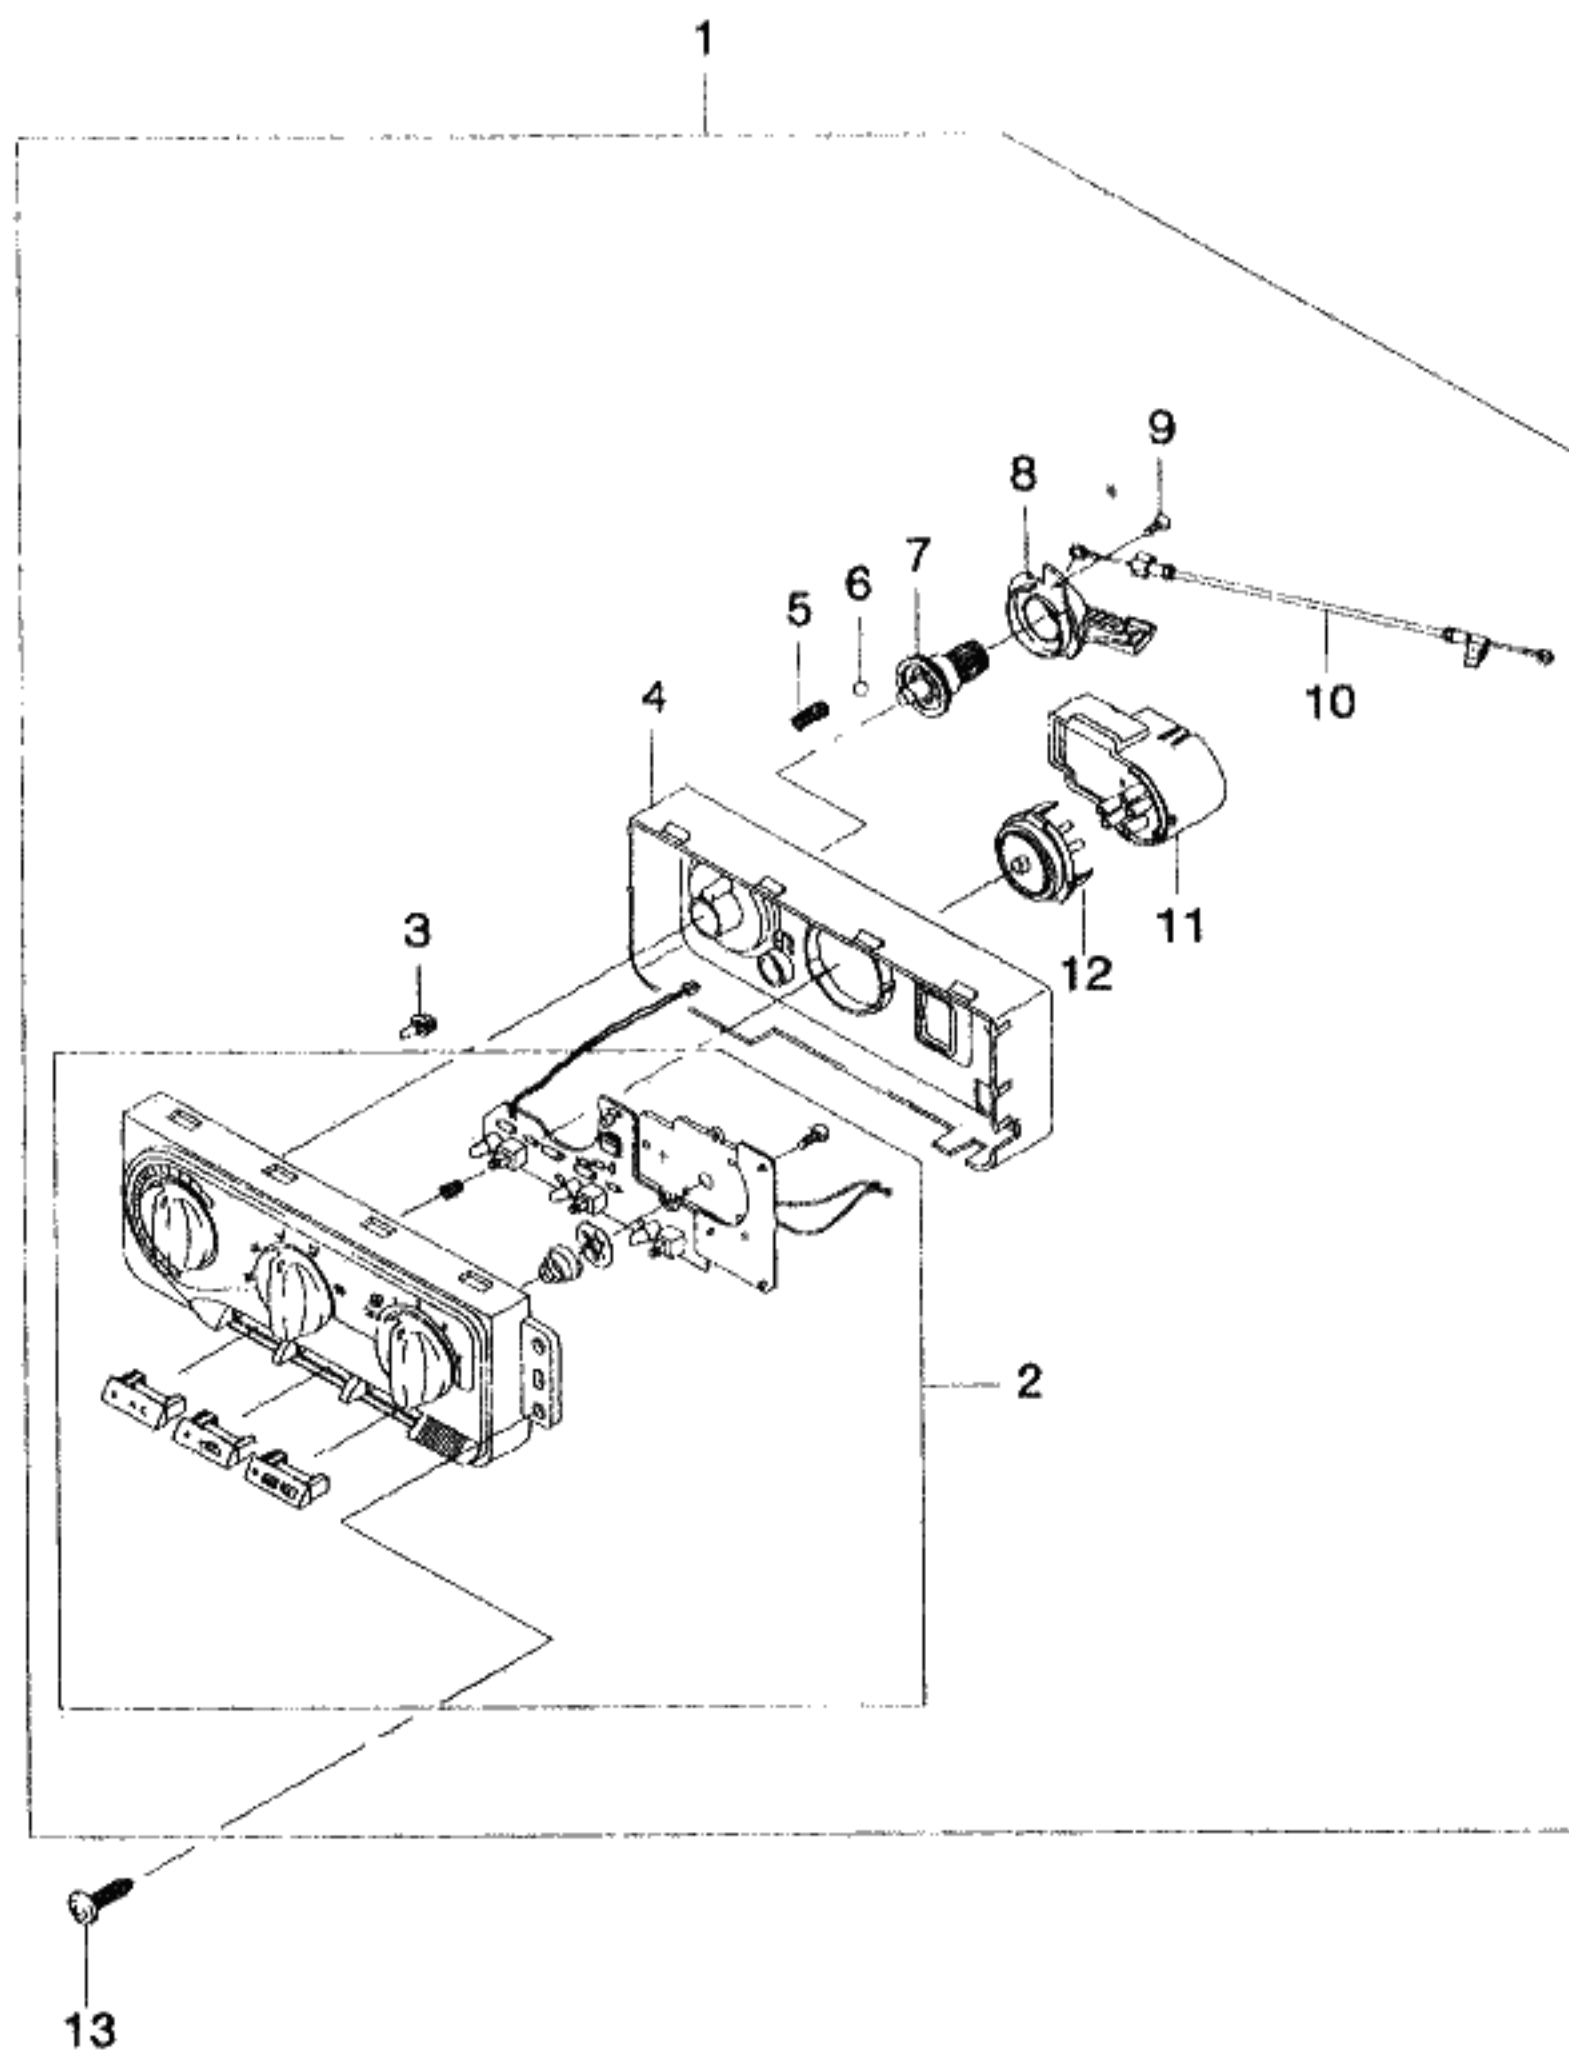

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[09]	(E)SCREW				(F)VIS					
	159447	(D)SCHRAUBE				(S)TORNILLO					
		S S		&C59/C60		1					
	[10]	(E)CABLE A				(F)CABLES					
	759243	(D)VERDRAHTUNG				(S)ALAMBRE					
		S S		&C59/C60		1					
	[11]	(E)ACTUATOR A-VACUUM				(F)ACTIONNEUR					
	759005	(D)BETÄTIGUNG				(S)ACTUADOR					
		S S		&C59/C60		1					
	[12]	(E)DISTRIBUTOR A-VACUUM				(F)LOGEMENT					
	759109	(D)GEHÄUSE,LUFTVERTEILUNG				(S)CARCASA					
		S S		&C59/C60		1					
	[13]	(E)SCREW-TAPPING				(F)VIS					
	03160-48165	(D)SCHRAUBE				(S)TORNILLO					
		S S		&C59/C60		4					
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

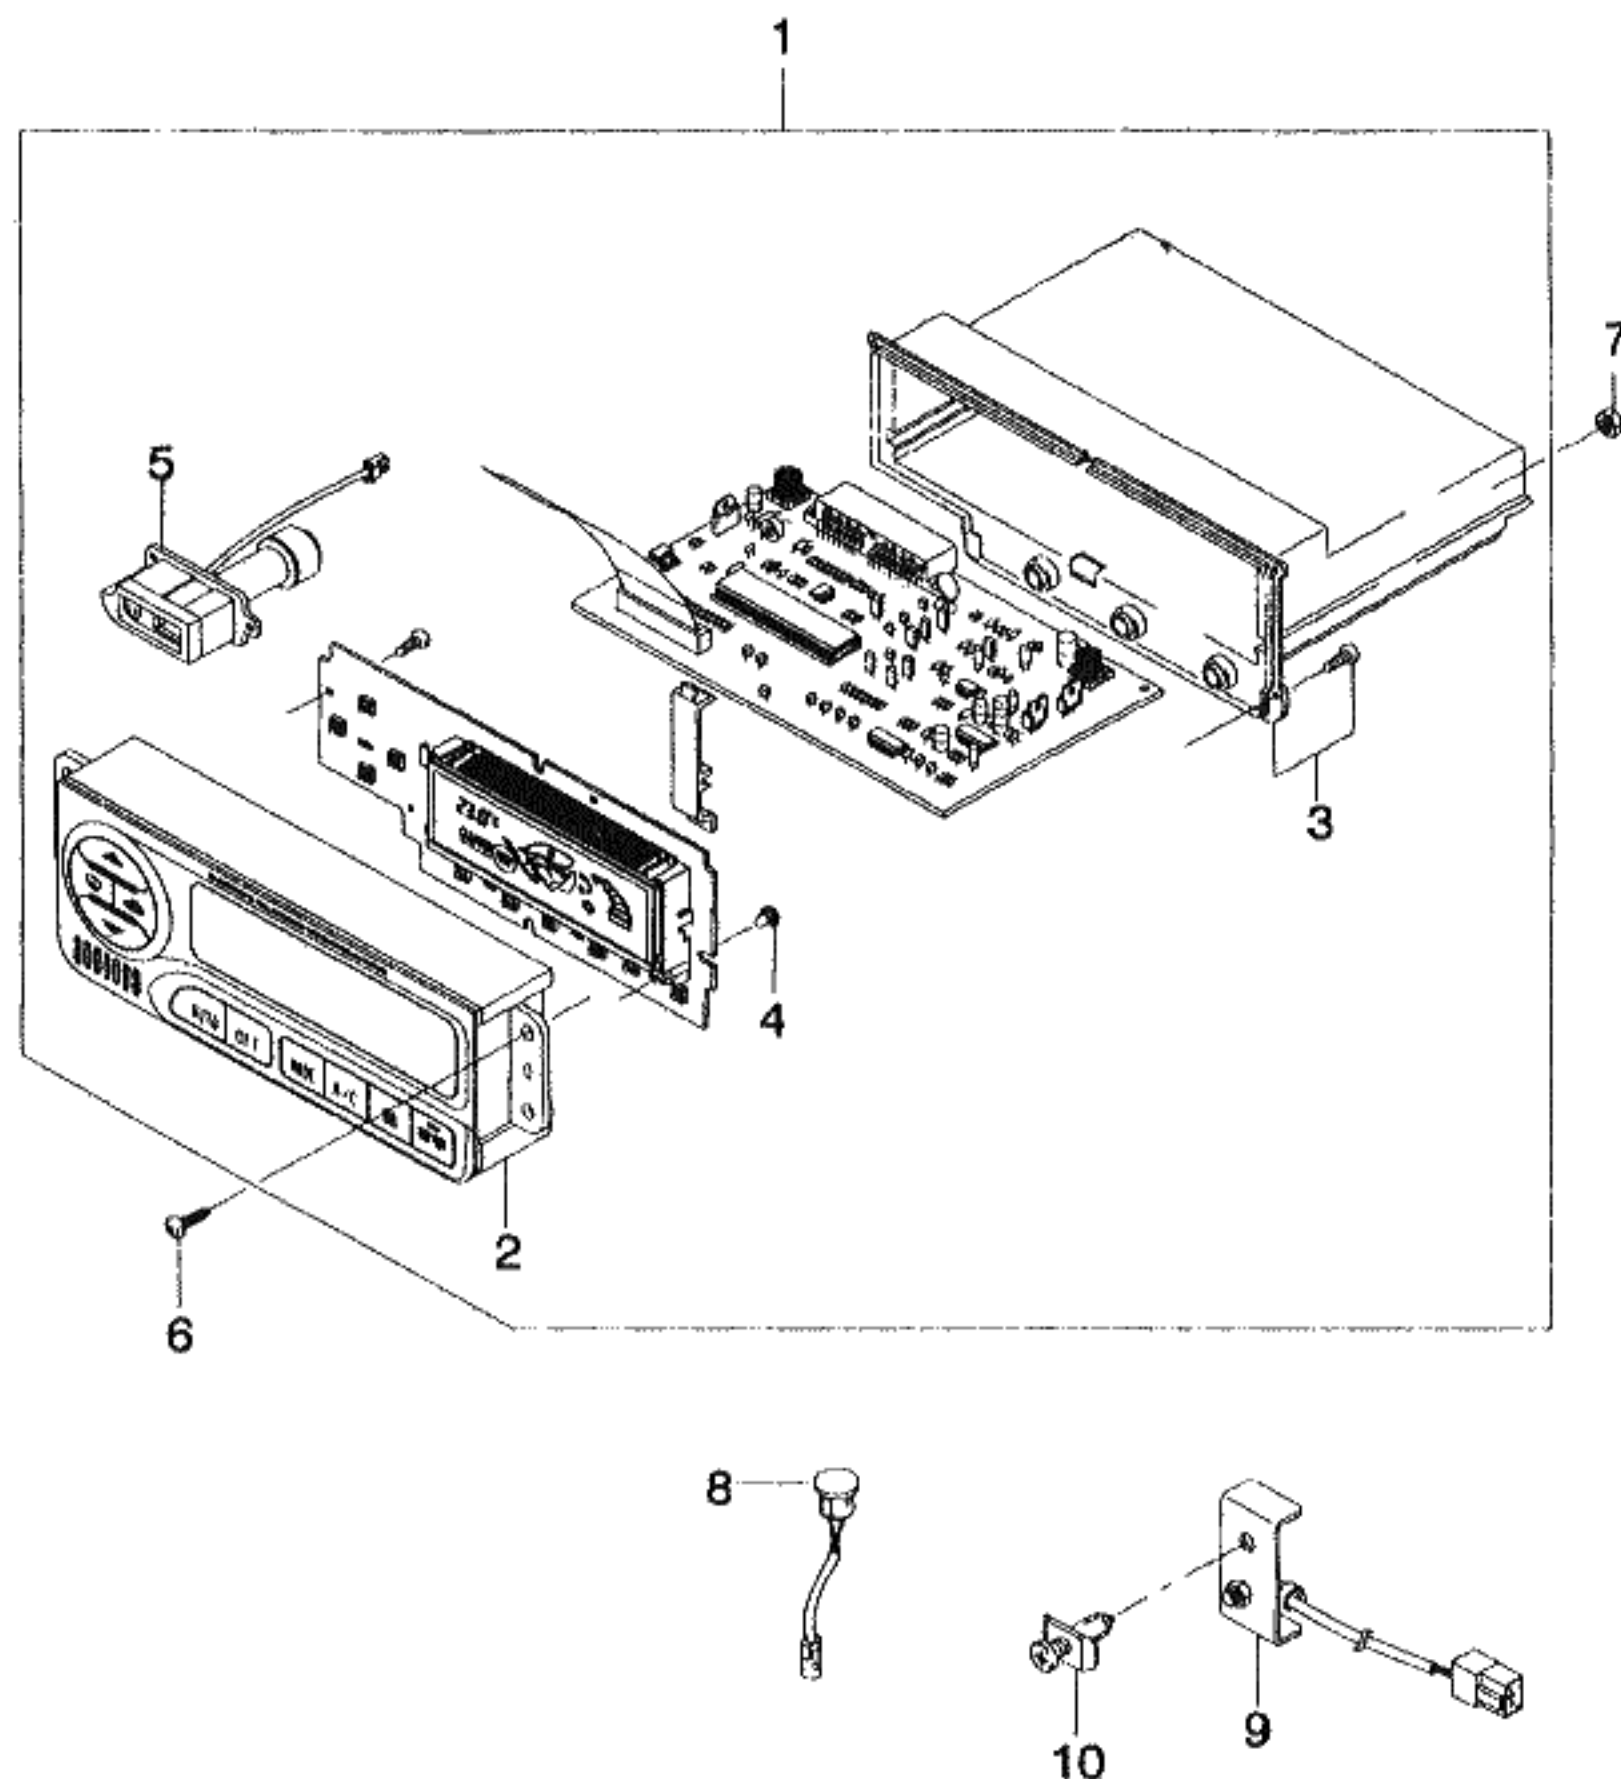

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL								
			S X	C D X							
[01]		(E)SWITCH (D)SCHALTER	A-AIR CON CONTROL			(F)COMMUTATEUR-CONTROLE (S)INTERRUPTOR					
	96207380	.	A	.	&C19/C15&DM0/DM6	1			TC	TB	
	96211820	.	A	O	&C19/C15&DM7/DP0	1			TC	TA	
	96211829	.	A	.	&C19/C15&DM0/DM6	1			TF	TD	
	96211828	.	A	O	&C19/C15&DM7/DP0	1			TF	TC	
[02]		(E)PANEL A-FR (D)VORDERBRETT				(F)PANNEAU AVANT (S)PANEL DEL FRENTE					
	814650	.	A	.	&C19/C15&DM0/DM6	1					
	814670	.	A	O	&C19/C15&DM7/DP0	1					
[03]		(E)COVER A-RR (D)DECKEL				(F)COUVERTURE (S)CUBIERTA					
	814660	.	A	O	&C19/C15	1					
[04]		(E)BULB (D)BIRNE				(F)AMPOULE (S)BOMBILLA					
	814617	.	A	O	&C19/C15	1					
[05]		(E)SENSOR A-INCAR (D)SENSOR				(F)DETECTEUR (S)SENSOR					
	814626	.	A	O	&C19/C15	1					
[06]		(E)SCREW-TAPPING (D)SCHRAUBE				(F)VIS (S)TORNILLO					
	03160-48165	.	A	O	&C19/C15	4					
[07]		(E)NUT-SPEED (D)MUTTER				(F)ECROU (S)TUERCA					
	09148-04022	.	A	O	&C19/C15	4					
[08]		(E)SENSOR A-SUN (D)SENSOR				(F)DETECTEUR (S)SENSOR					
	96208702	.	A	O	&C19/C15	1					
[09]		(E)SENSOR A-AMBIENT (D)SENSOR				(F)DETECTEUR (S)SENSOR					
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

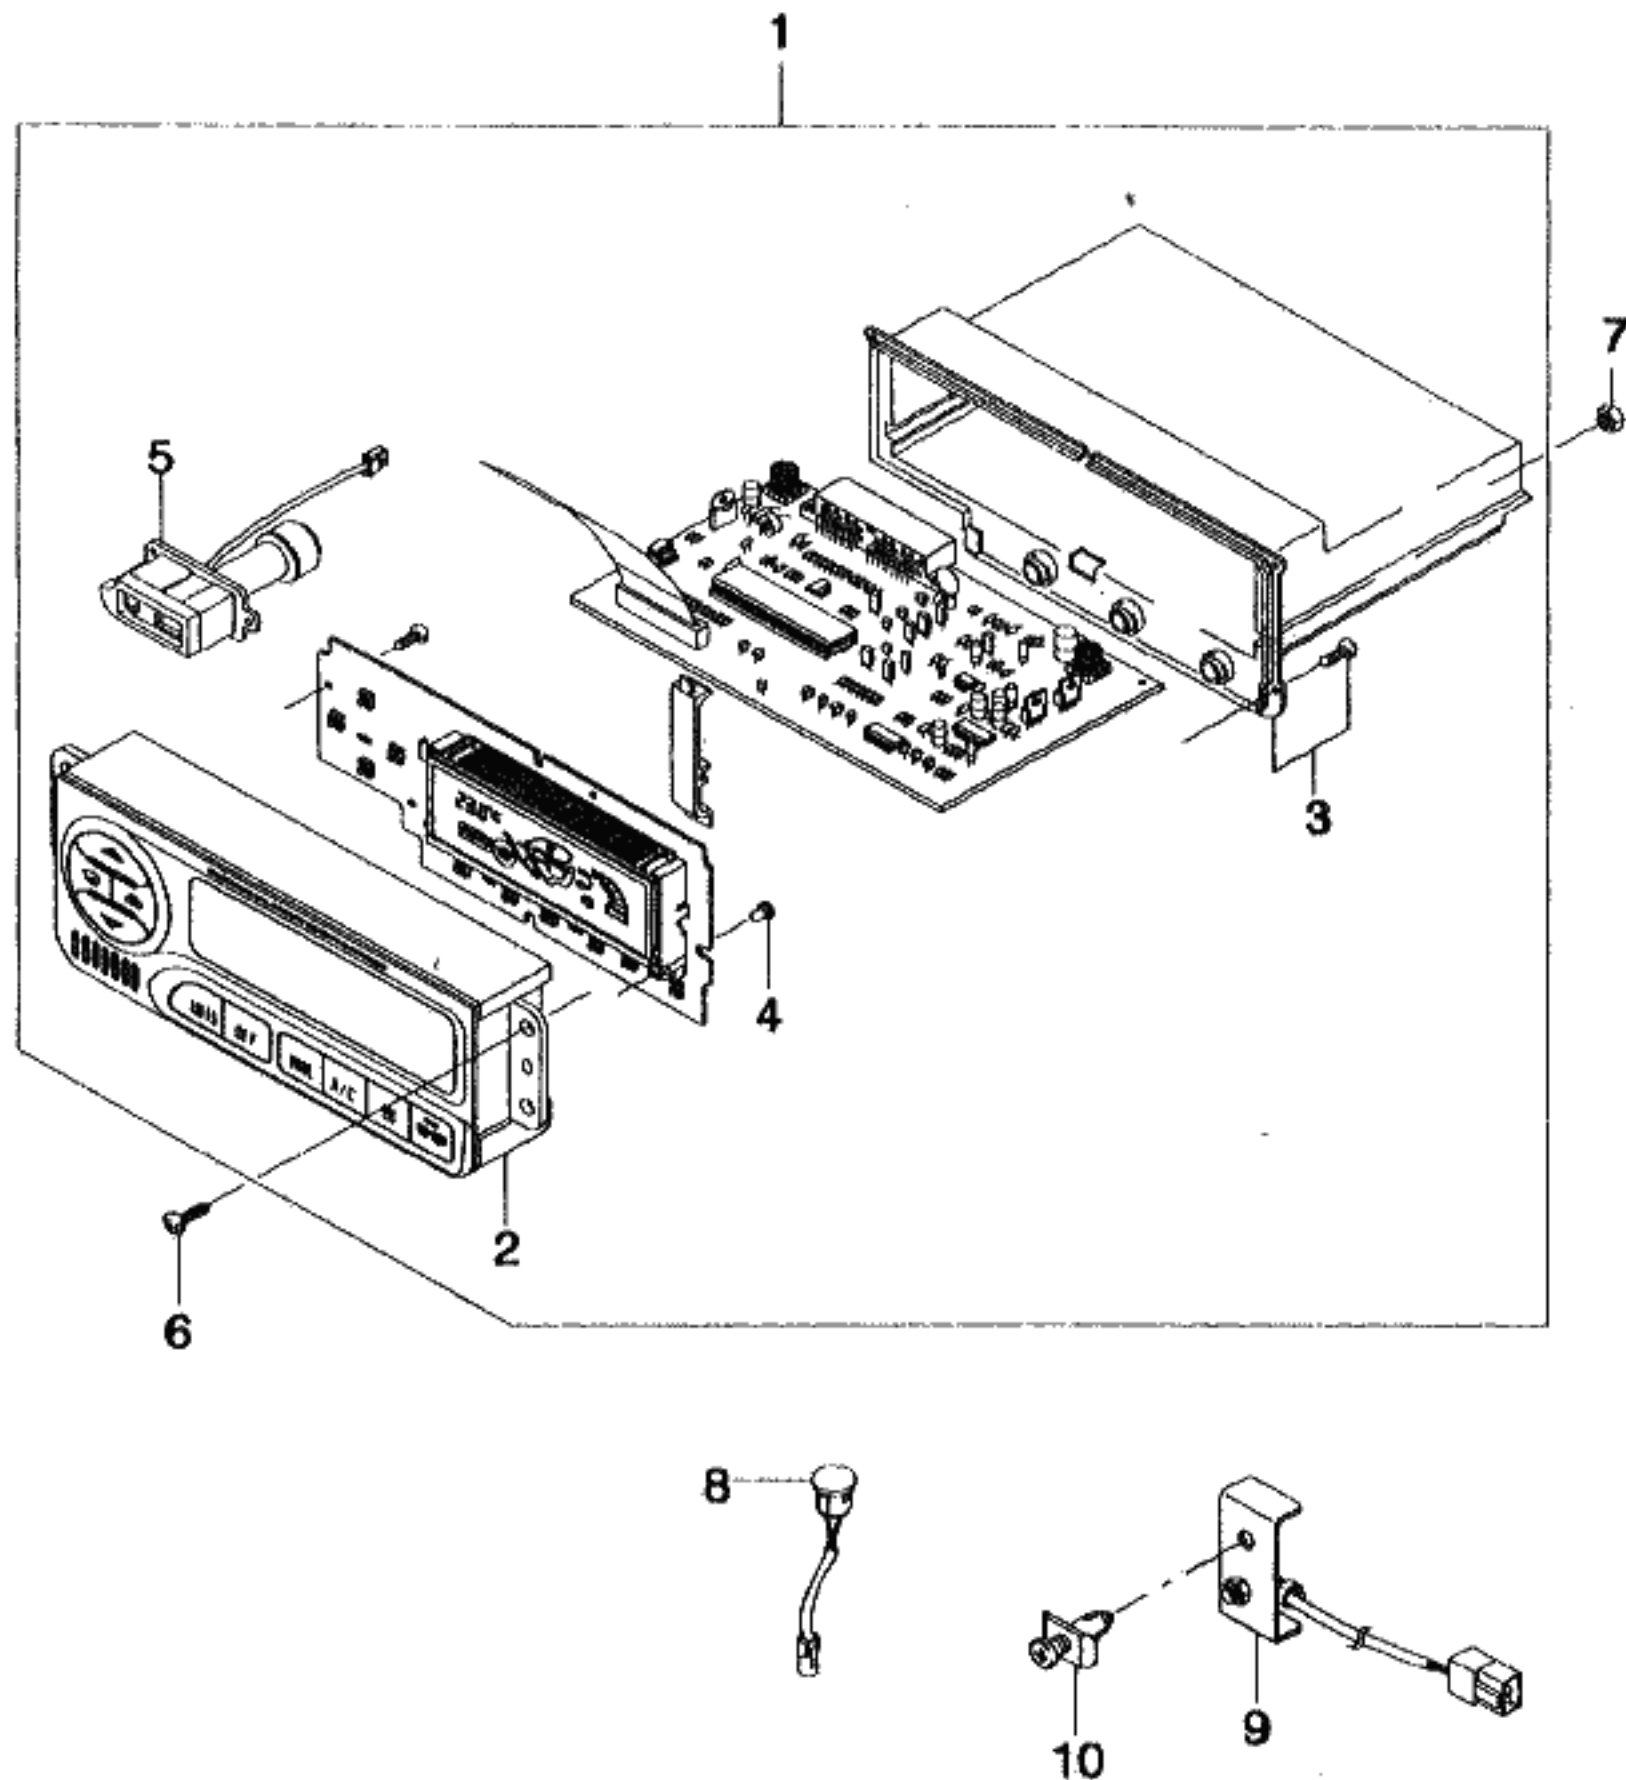

KEY NO.			PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL					FROM	TO			
			S X	C D X								
	96207479 [10] 09409-09302	.	A	O	&C19/C15		1					
		(E)	CLIP				(F)	ATTACHE				
		(D)	KLEMMEN				(S)	GRAPA				
		.	A	O	&C19/C15		1					
LEVEL						T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						


9**O.V.M. & ACCESSORY**

9110 TOOL


9120 OIL & PAINT

9250 SUN ROOF(ELECTRIC)

9260 SUN ROOF MOUNT

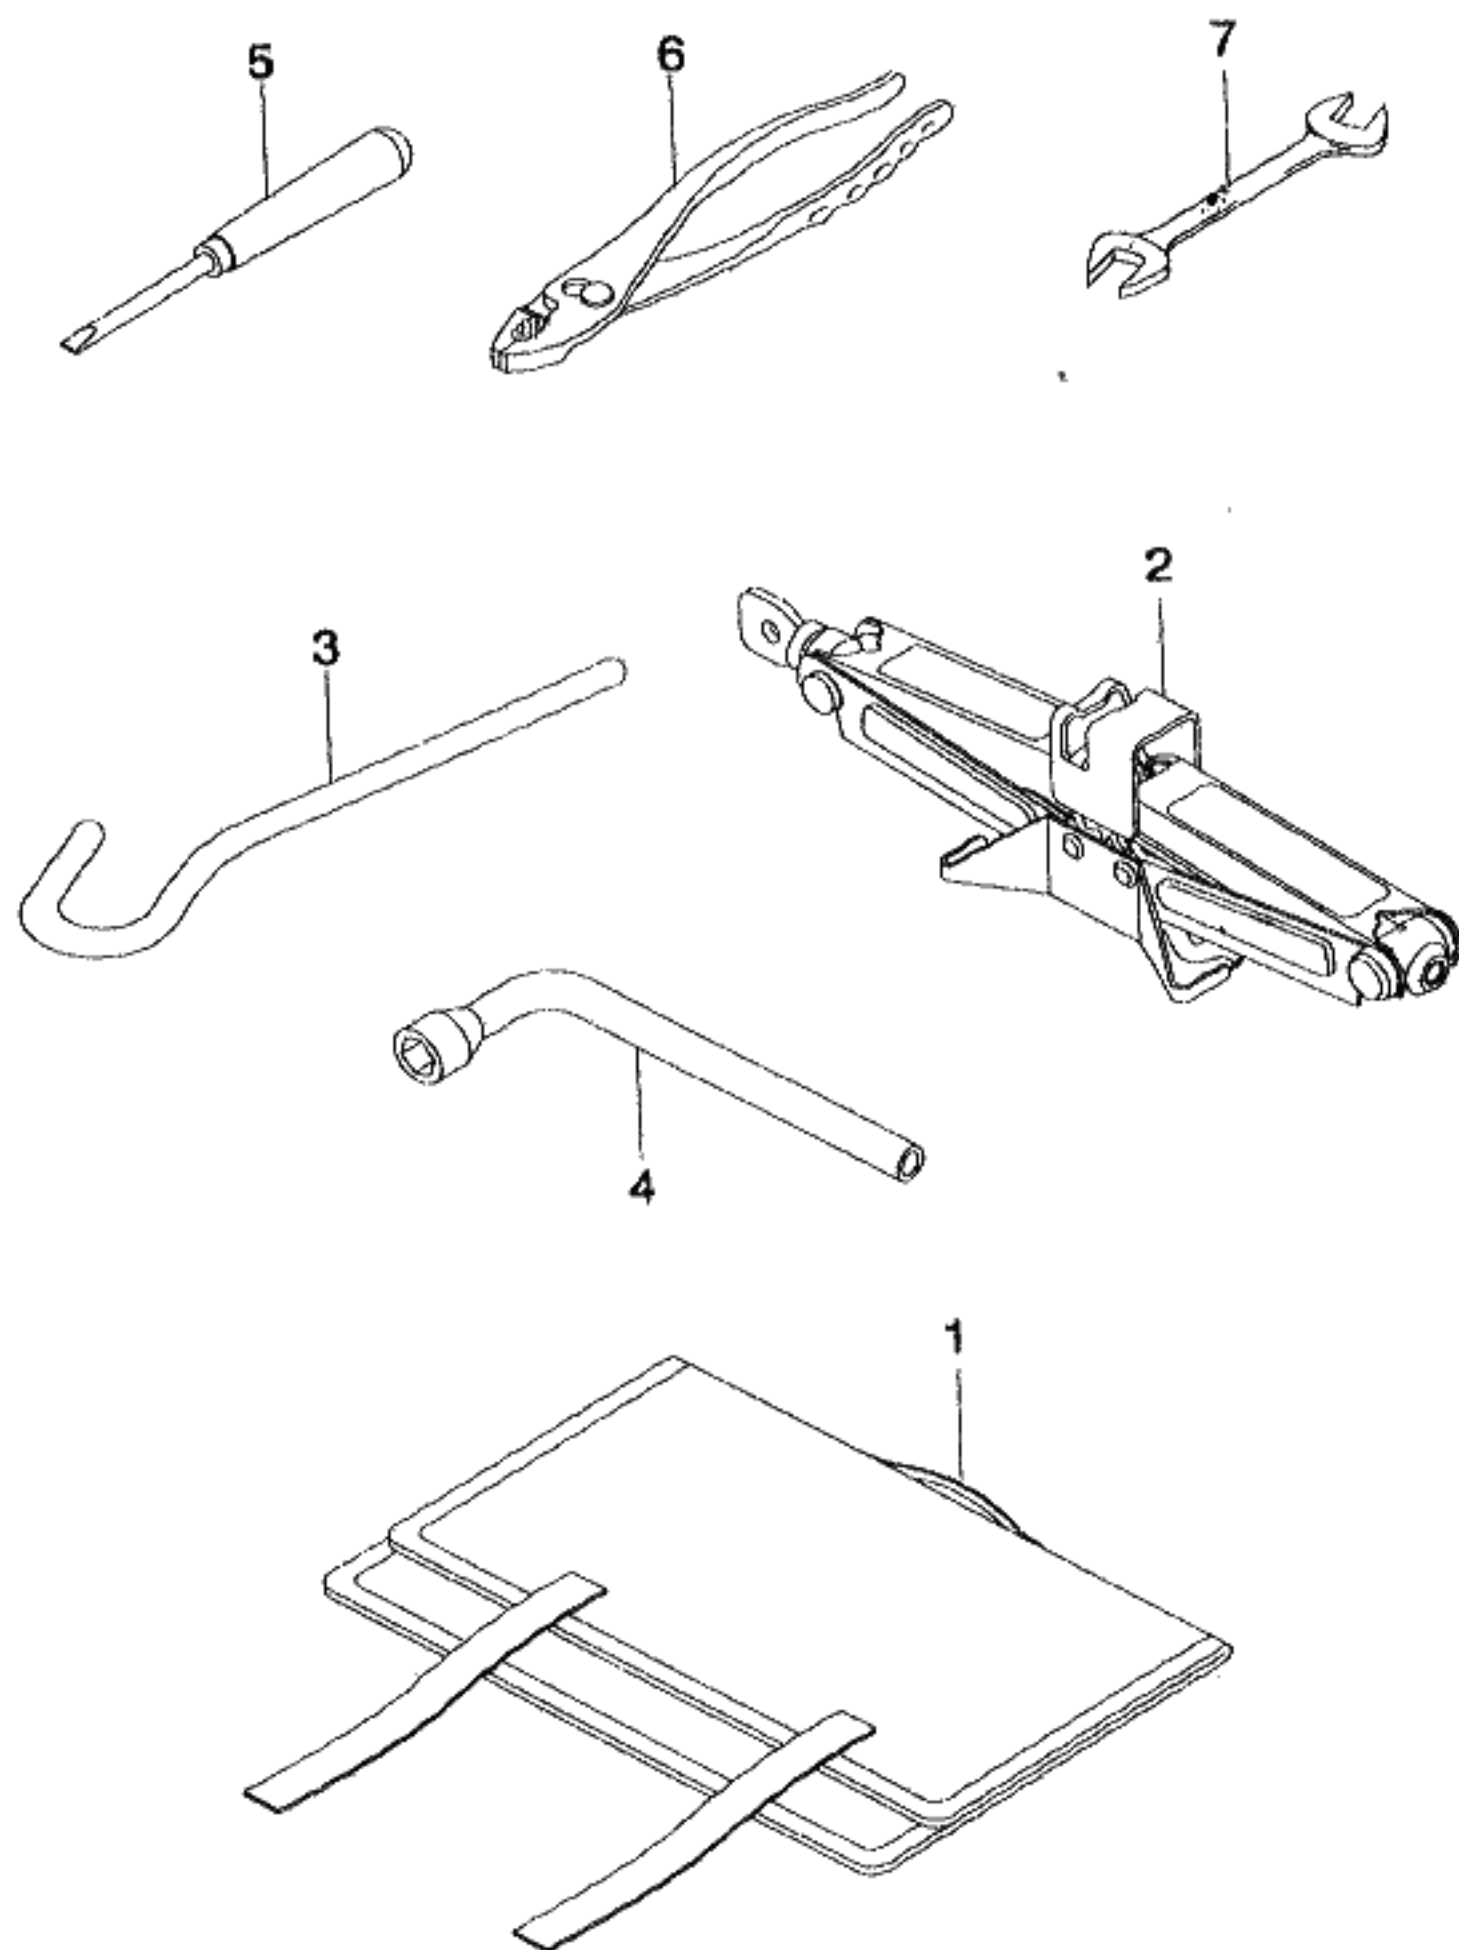

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 09811-00001	(E)BAG-TOOL (D)WERKZEUGKASTEN	S	S			1			(F)TROUSSE A OUTILS (S)CAJA-DEPOSITO	
	[02] 96244026 O 96243947	(E)JACK A (D)STECKER	S	S			1	970830		(F)CRIC (S)GATO	
	[03] 96167295	(E)JACK-LEVER (D)STECKER	S	S			1	970901		(F)LEVIER (S)GATO	
	[04] 09816-19001	(E)WRENCH-WHEEL (D)SCHRAUBENSCHLÜßEL,RAD	S	S			1			(F)CLE-ECROU DE ROUE (S)LLAVE-TUERCA DE LLANTA	
	[05] 09814-12001	(E)DRIVER (D)SCHRAUBENZIEHER	S	S			1			(F)CONDUCTEUR (S)IMPULSADOR-TORNILLO	
	[06] 09812-42001	(E)PLIER (D)ZANGE	S	S			1			(F)PINCE (S)ALICATE	
	[07] 09813-08001	(E)SPANNER (D)SCHRAUBENSCHLÜßEL	S	S			1			(F)CLEF (S)LLAVE FIJA	
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						

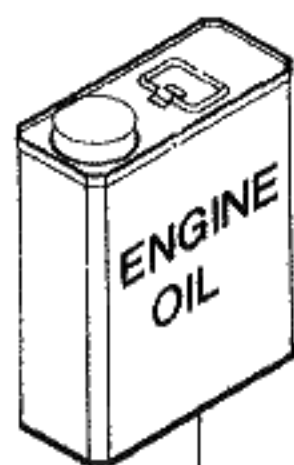

1




2



3



4

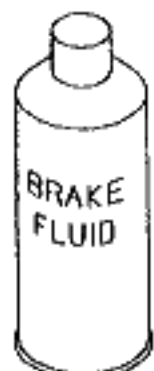

5



6




7



8



9

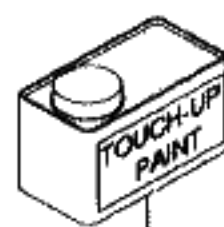

10




11



12

KEY NO.		PART NAME										
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		T / A	LEVEL									
			S X	C D X								
[01]	(E)OIL-ENGINE (D)ÖL,MOTOR				(F)HUILE-MOTEUR (S)ACEITE-MOTOR							
M-8045-1L	.	S	.	OIL-10W30						1.0L		
M-8045-4L	.	S	.	OIL-10W30						3.8L		
M-8044-1L	.	O	S	OIL-5W30						1.0L		
M-8044-4L	.	O	S	OIL-5W30						3.8L		
M-8045-1L	.	A	A	&XHA						1.0L		
M-8045-4L	.	A	A	&XHA						3.8L		
M-8044-1L	.	A	A	&XCA						1.0L		
M-8044-4L	.	A	A	&XCA						3.8L		
[02]	(E)OIL-TRANSMISSION MANUAL (D)ÖL,GANGSCHALTUNG				(F)HUILE-TRANS MANUELLE (S)ACEITE							
M-8002-1L	M	S	S							1.0L		
[03]	(E)OIL-TRANSMISSION,AUTO (D)ÖL,GANGSCHALTUNG				(F)HUILE-TRANS AUTOMATIQUE (S)ACEITE-EJE TRANSVERSAL							
M-8042-1L	A	O	O							1.0L		
[04]	(E)OIL-POWER STEERING (D)ÖL,KRAFTLENKUNG				(F)HUILE-DIRECTION ASSISTEE (S)ACEITE-SERVODIRECCION							
M-8017-1L	.	S	S							1.0L		
[05]	(E)FLUID-BRAKE (D)FLÜSSIGKEIT,BREMSE				(F)LIQUIDE-FREIN (S)FLUIDO-FRENOS							
M-8205-0.5L	.	S	S							0.5L		
M-8205-1L	.	S	S							1.0L		
[06]	(E)LIQUID-WINDSHIELD WASHER (D)FLÜSSIGKEIT				(F)LIQUIDE (S)FLUIDO							
M-8209-1L	.	A	A	&XCA						1.0L		
[07]	(E)GREASE (D)GLAS				(F)GLACE (S)VIDRIO							
M-8143-0.5K	.	S	S							0.5KG		
LEVEL					T/A(TRANSAXLE)							
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							

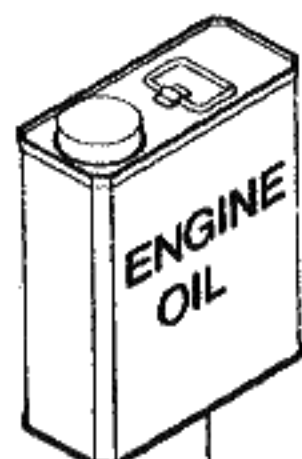

1



2



3



4




5



6




7

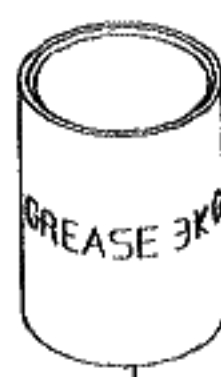

8



9

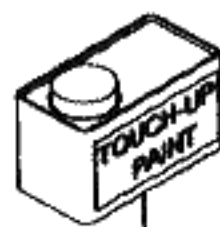

10



11



12

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[08] M-8143-3.0K	(E)GREASE (D)GLAS	S	S				(F)GLACE (S)VIDRIO		3.0KG	
	[09] M-8202-2L M-8202-4L	(E)ANTI FREEZER (D)GEFRIERSCHUTZMITTEL	S	S				(F)ANTIGEL (S)ANTICONGELANTE		2.0L 4.0L	
	[10] A/L-11U-0.5L A/L-81U-0.5L A/L-23U-0.5L A/L-83L-0.5L A/L-74U-0.5L A/L-92U-0.5L A/L-69U-0.5L A/L-42U-0.5L	(E)PAINT-TOUCH UP (D)DICHTUNG,ÖL-PFANNE	S	S	GALAXY WHITE-SOLID STREAM LINE GREY CARIBBEAN BLUE GRANADA BLACK-MICA SPINEL RED-MICA POLY SIVER-METAL AUTUMN BROWN-MICA DEEP BLUISH GREEN			(F)JOINT-CARTER D'HUILE (S)JUNTA		&11U(0.5L) &81U(0.5L) &23U(0.5L) &83L(0.5L) &74U(0.5L) &92U(0.5L) &69U(0.5L) &42U(0.5L)	
	[11] U/T-11U-4L-1 B/C-23U-4L B/C-69U-4L B/C-74U-4L B/C-81U-4L B/C-83L-4L B/C-92U-4L B/C-42U-4L	(E)PAINT (D)LACK	S	S	GALAXY WHITE-SOLID CARIBBEAN BLUE AUTUMN BROWN-MICA SPINEL RED-MICA STREAM LINE GREY GRANADA BLACK-MICA POLY SIVER-METALLIC DEEP BLUISH GREEN			(F)PEINTURE (S)PINTURA		&11U(4.0L) &23U(0.5L) &69U(0.5L) &74U(0.5L) &81U(0.5L) &83L(0.5L) &92U(4.0L) &42U(0.5L)	
	[12]	(E)CLEAR-PAINT (D)LACK						(F)PEINTURE (S)PINTURA			
LEVEL					T/A(TRANSAXLE)						
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						




1




2



3

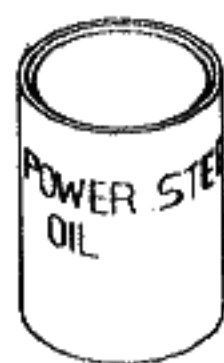

4

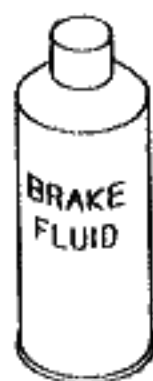

5



6




7



8



9

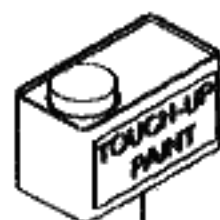

10




11




12

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	U/T-CLR-4L	.	S	S						4.0L	
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

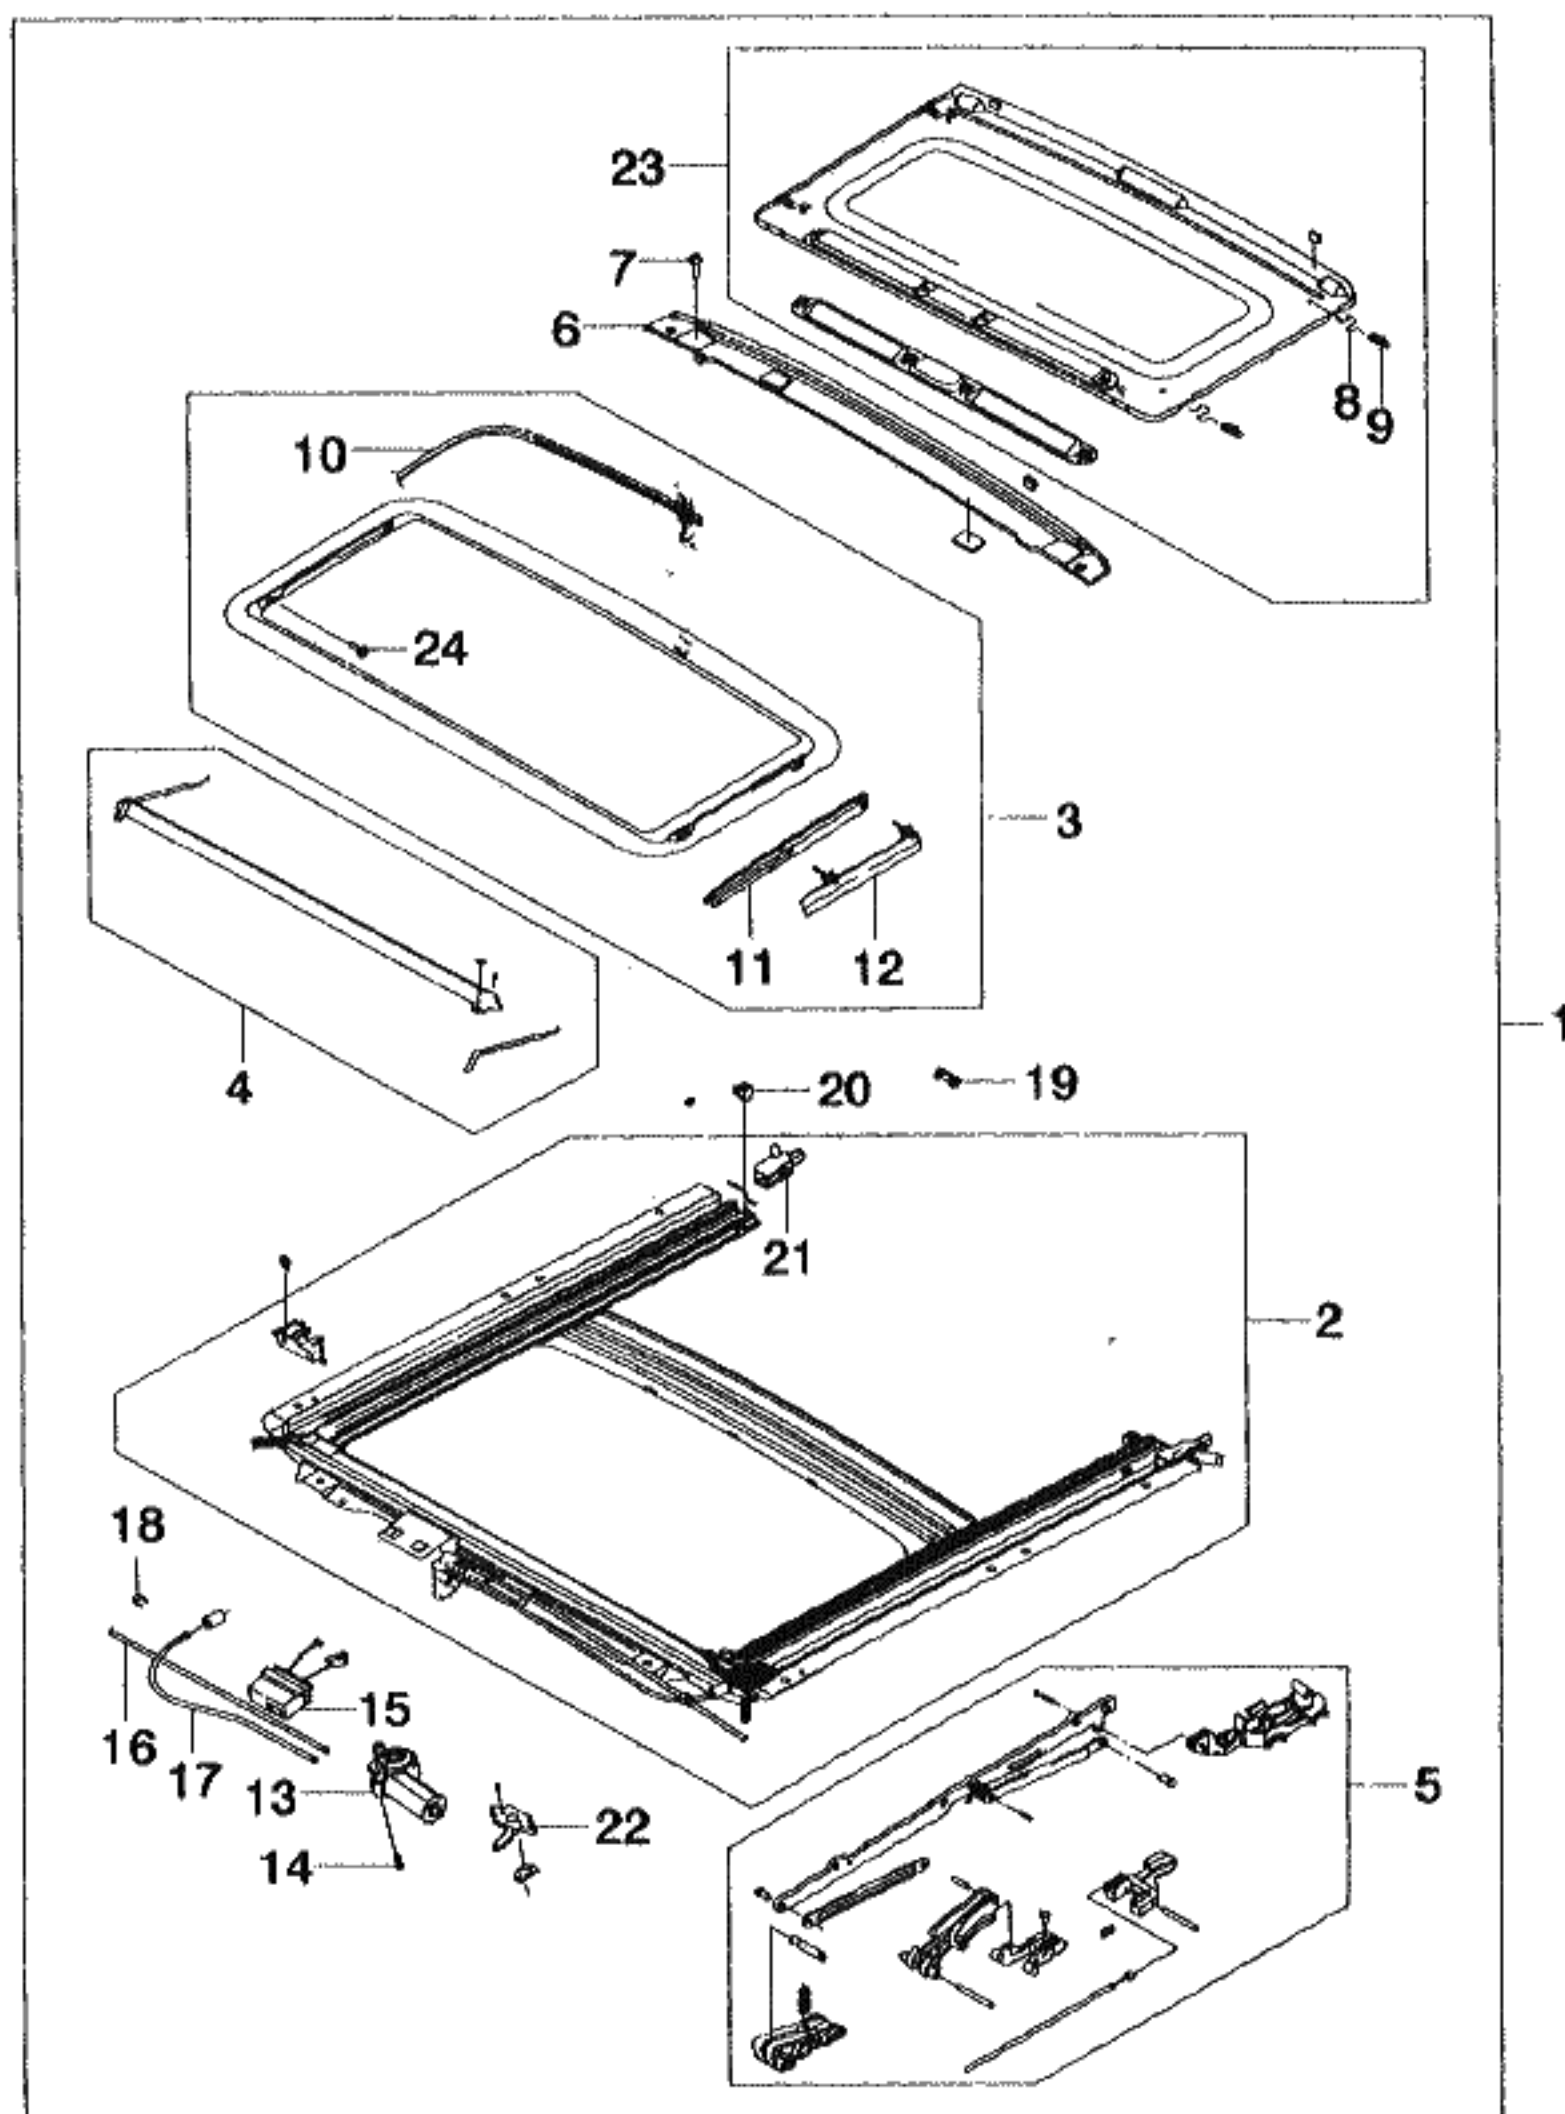


KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96241058	(E)ROOF A-SUN (D)DACH,SONNEN	.	O O	GREEN+DOT		1				RS
	[02] 44044110	(E)FRAME A (D)RAHMEN	.	O O			1				
	[03] 44044200	(E)PANEL A-GLASS (D)VERKLEIDUNGS-SATZ, GLAS	.	O O			1				
	[04] 44044190	(E)DEFLECTOR-WIND (D)WINDSCHUTZ-FLÜGEL	.	O O			1				
	[05] 44044150 44044140	(E)MECHANISM (D)MECHANISMUS	.	O O O O			LH 1 RH 1				
	[06] 40109200	(E)CHANNEL-DRAIN (D)RILLE	.	O O			1				
	[07] 26158906	(E)SCREW (D)SCHRAUBE	.	O O			2				
	[08] 40329190	(E)SPRING-SLIDE BLOCK (D)FEDERUNG	.	O O			4				
	[09] 42309630	(E)BLOCK-SLIDE (D)BLOCK	.	O O			4				
	[10]	(E)SEAL-GLASS PANEL (D)DICHTUNG	.	O O							


LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC	M = MANUAL T/A
CDX = 2.0 DOHC	A = AUTOMATIC T/A
	. = COMMON

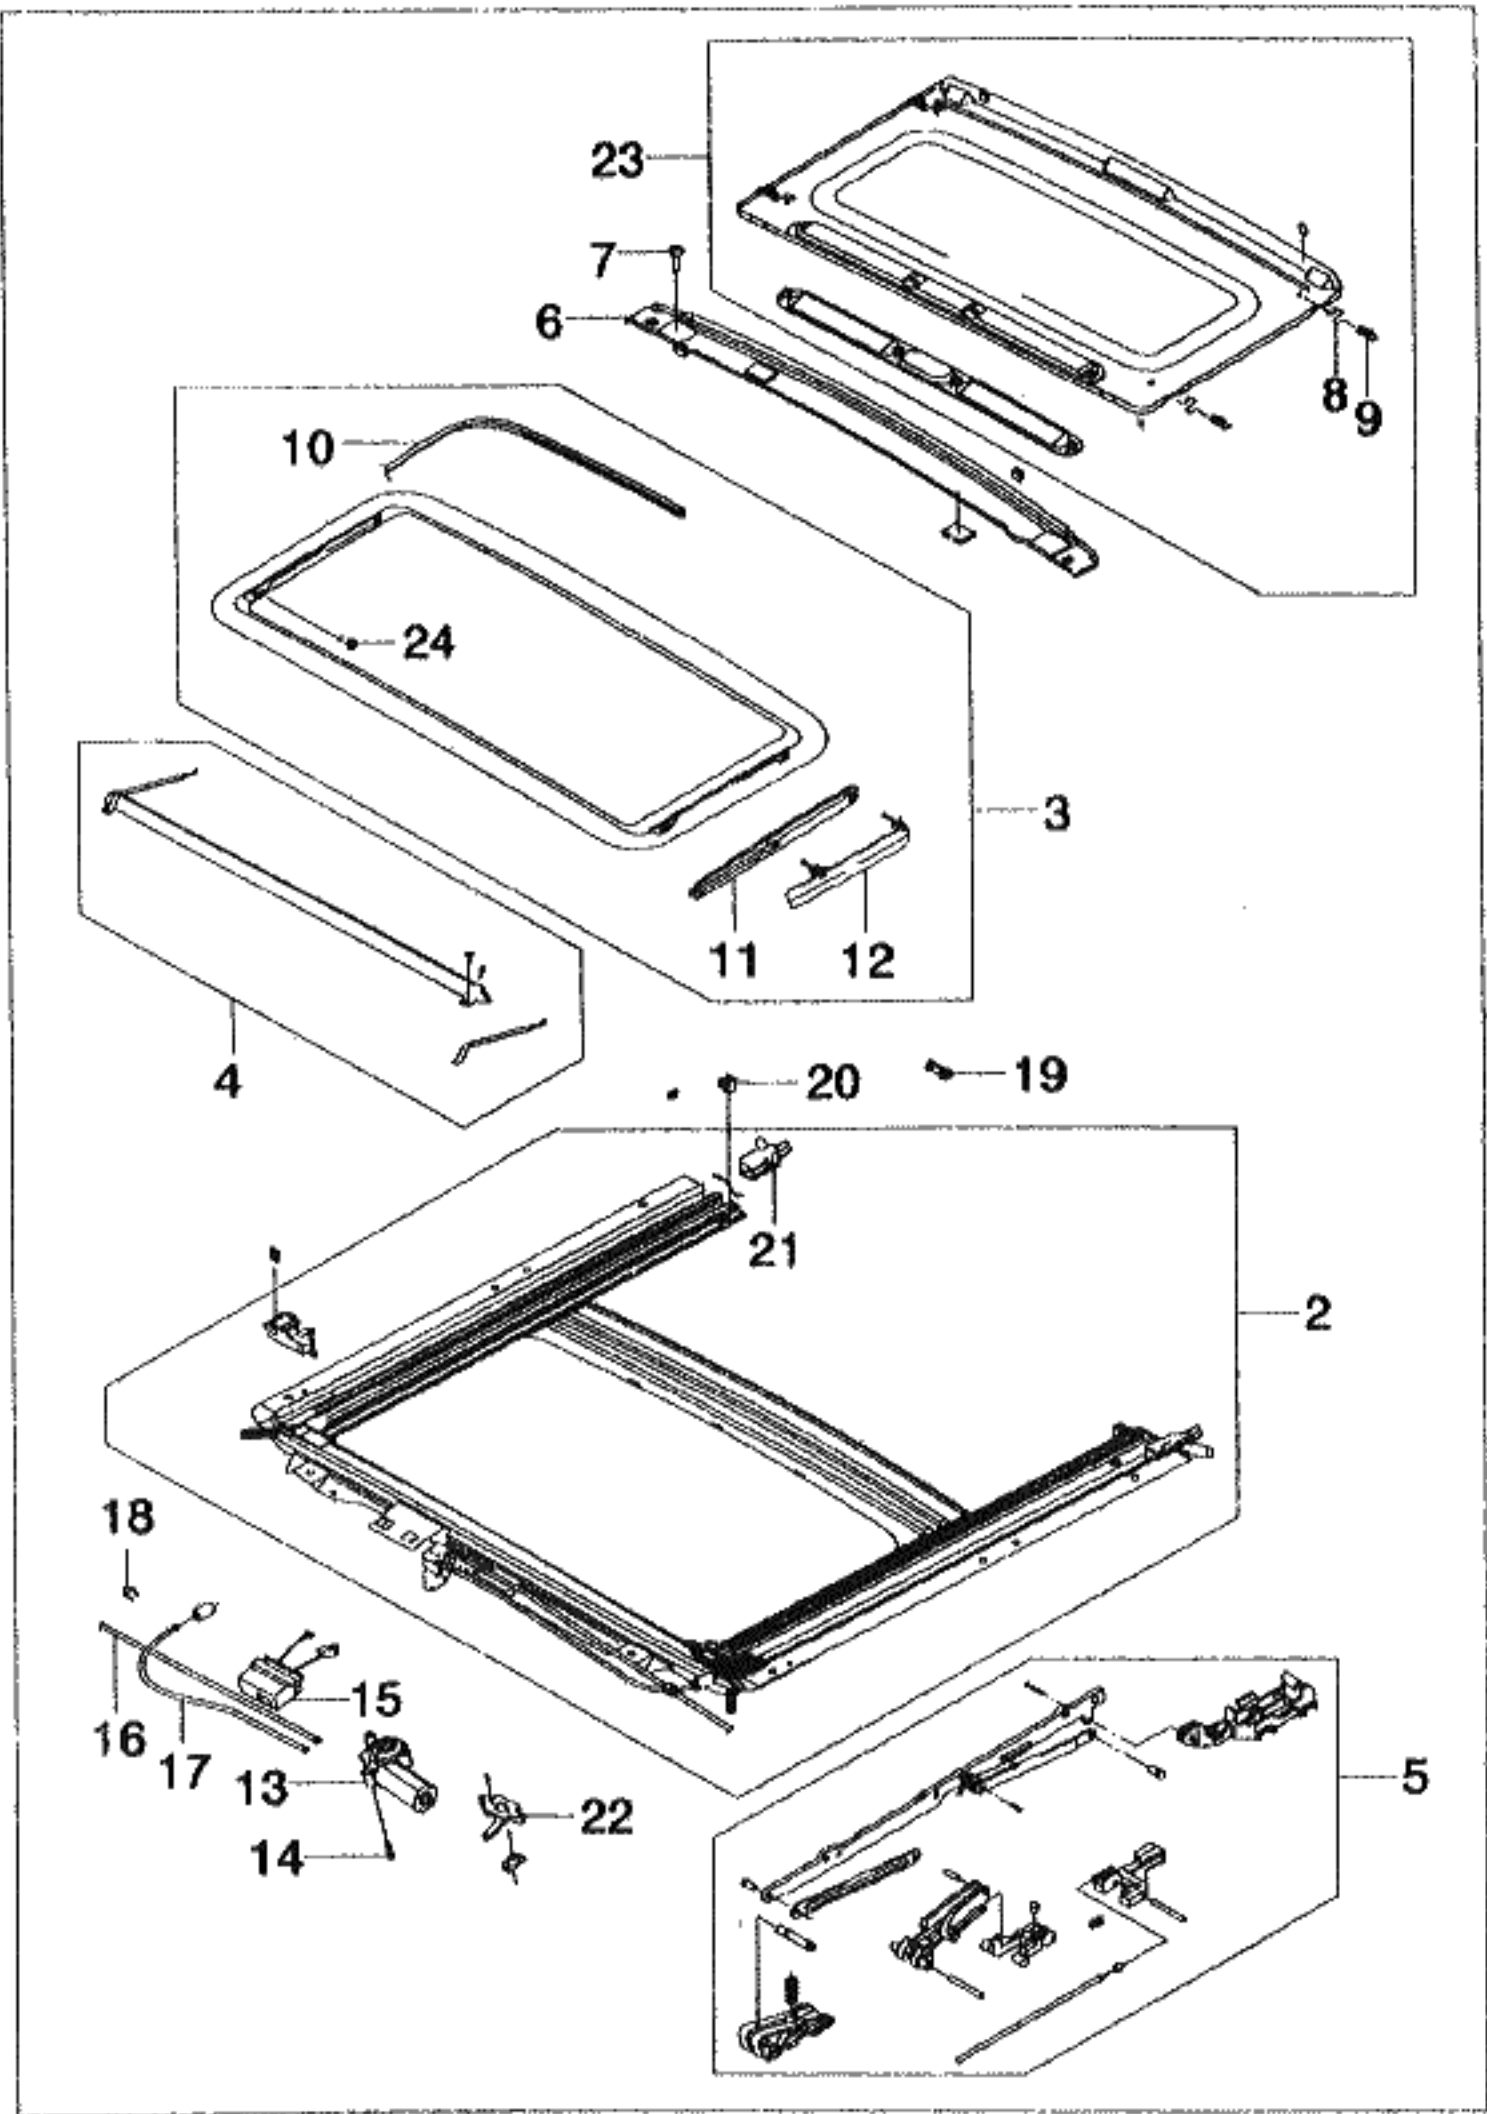

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	42309750	.	O	O			1				
	[11]	(E)	COVER-SIDE,INR				(F)	COUVERTURE			
		(D)	DECKEL				(S)	CUBIERTA			
	42409250	.	O	O			LH	1			
	42409240	.	O	O			RH	1			
	[12]	(E)	COVER-SIDE,OTR				(F)	COUVERTURE			
		(D)	DECKEL				(S)	CUBIERTA			
	42409220	.	O	O			LH	1			
	42409230	.	O	O			RH	1			
	[13]	(E)	MOTOR & DRIVE GEAR A				(F)	MOTEUR			
		(D)	MOTOR				(S)	MOTOR			
	44249122	.	O	O			1				
	[14]	(E)	SCREW				(F)	VIS			
		(D)	SCHRAUBE				(S)	TORNILLO			
	22715316	.	O	O			3				
	[15]	(E)	BOX A-RELAY				(F)	BOITE-RELAJ			
		(D)	RELAIS-&SICHERUNGSKASTEN				(S)	CAJA-RELEVOS Y FUSIBLES			
	44249340	.	O	O			1				
	[16]	(E)	TUBE-CABLE GUIDE				(F)	TUYAU			
		(D)	ROHRLEITUNG				(S)	TUBO			
	42009662	.	O	O			2				
	[17]	(E)	TUBE-DRIVE				(F)	TUYAU			
		(D)	ROHRLEITUNG				(S)	TUBO			
	40419370	.	O	O			LH	1			
	40419360	.	O	O			RH	1			
	[18]	(E)	CLIP-PIPE				(F)	ATTACHE			
		(D)	KLEMME				(S)	GRAPA			
	40089870	.	O	O			3				
	[19]	(E)	PLUG-GUIDE,RR				(F)	BOUCHON			
		(D)	STÖPSEL				(S)	TAPON			
LEVEL						T/A(TRANSAXLE)					
S X = 2.0 SOHC						M = MANUAL T/A					
CDX = 2.0 DOHC						A = AUTOMATIC T/A					
						. = COMMON					

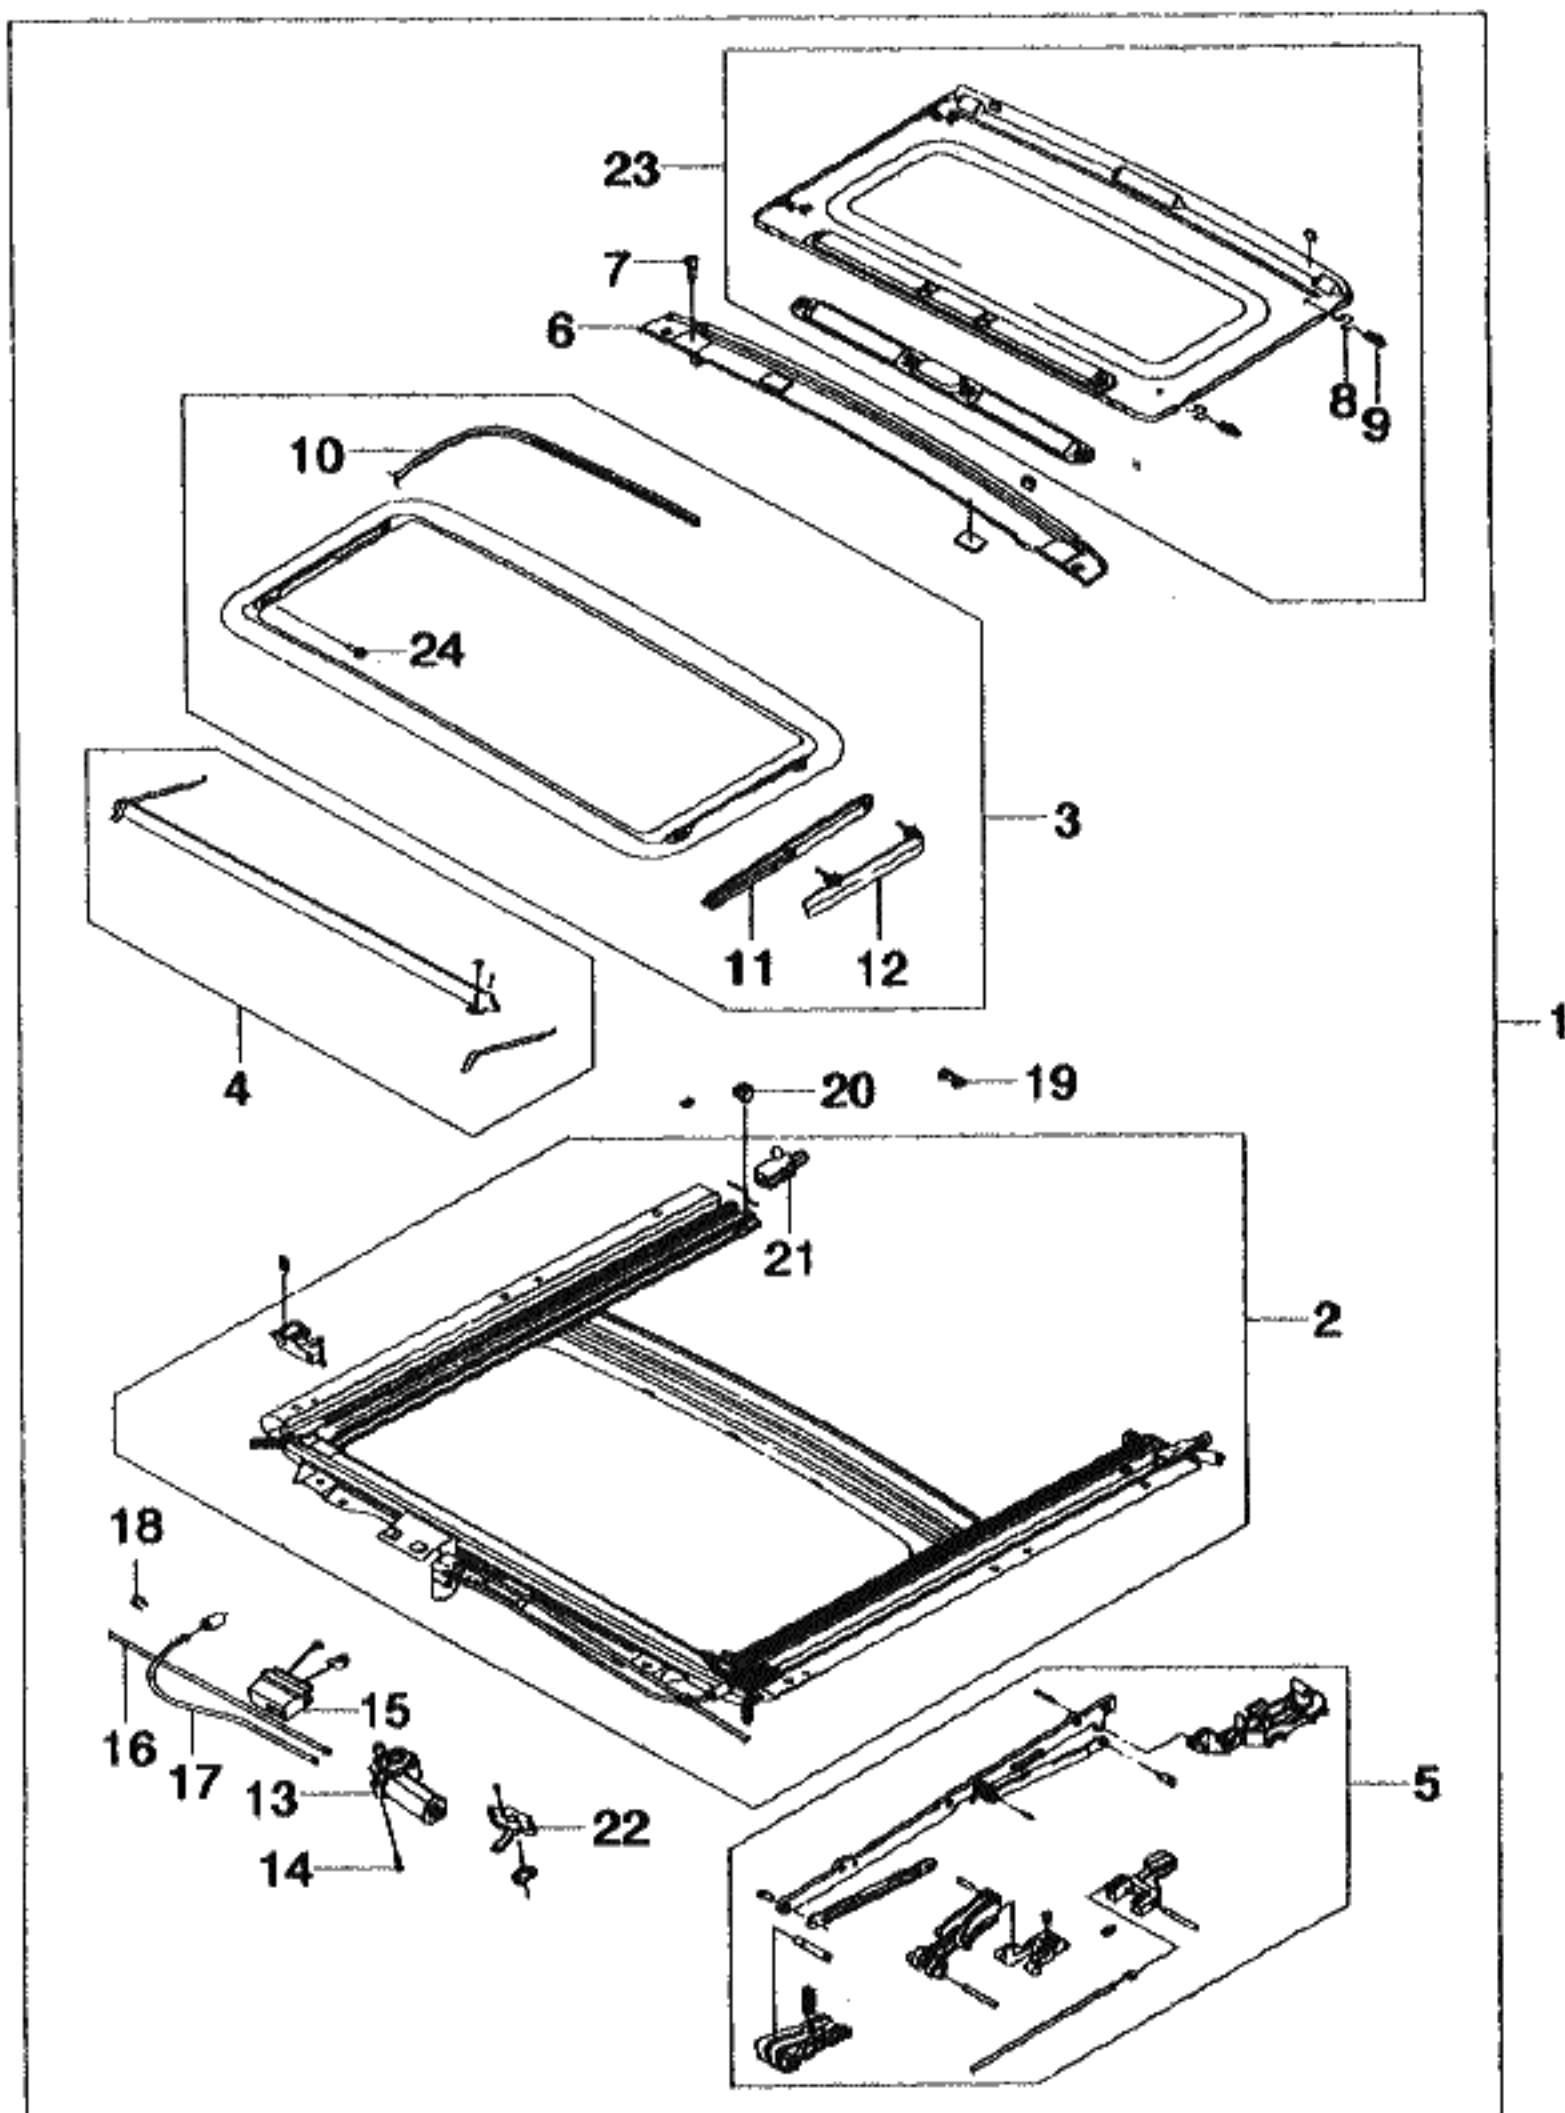

KEY NO.	PART NAME									
	PART NO.	MODEL		OPTION	L / R	QTY	EFFECTIVE DATE		REMARKS	P / CODE
		T / A	LEVEL				FROM	TO		
	42109830	.	O O			LH 1				
	42109840	.	O O			RH 1				
	[20]		(E)STOPER-SUNSHADE,RR (D)STÖPSEL			(F)ARRETOIR (S)TAPON				
	42309710	.	O O			2				
	[21]		(E)DRAINAGE PIECE-RR (D)TEIL			(F)PIECE (S)PIEZA				
	42409310	.	O O			LH 1				
	42409300	.	O O			RH 1				
	[22]		(E)BRACKET (D)TRÄGER			(F)SUPPORT (S)SOPORTE				
	41109880	.	O O			1				
	[23]		(E)SUNSHADE A (D)SONNENBLENDE			(F)PARE-SOLEIL (S)PARASOL				
	44044180	.	O O			1				
	[24]		(E)BOLT (D)SCHRAUBE			(F)BOULON (S)PERNO				
	40429881	.	O O			4				
LEVEL					T/A(TRANSAXLE)					
S X = 2.0 SOHC CDX = 2.0 DOHC					M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					

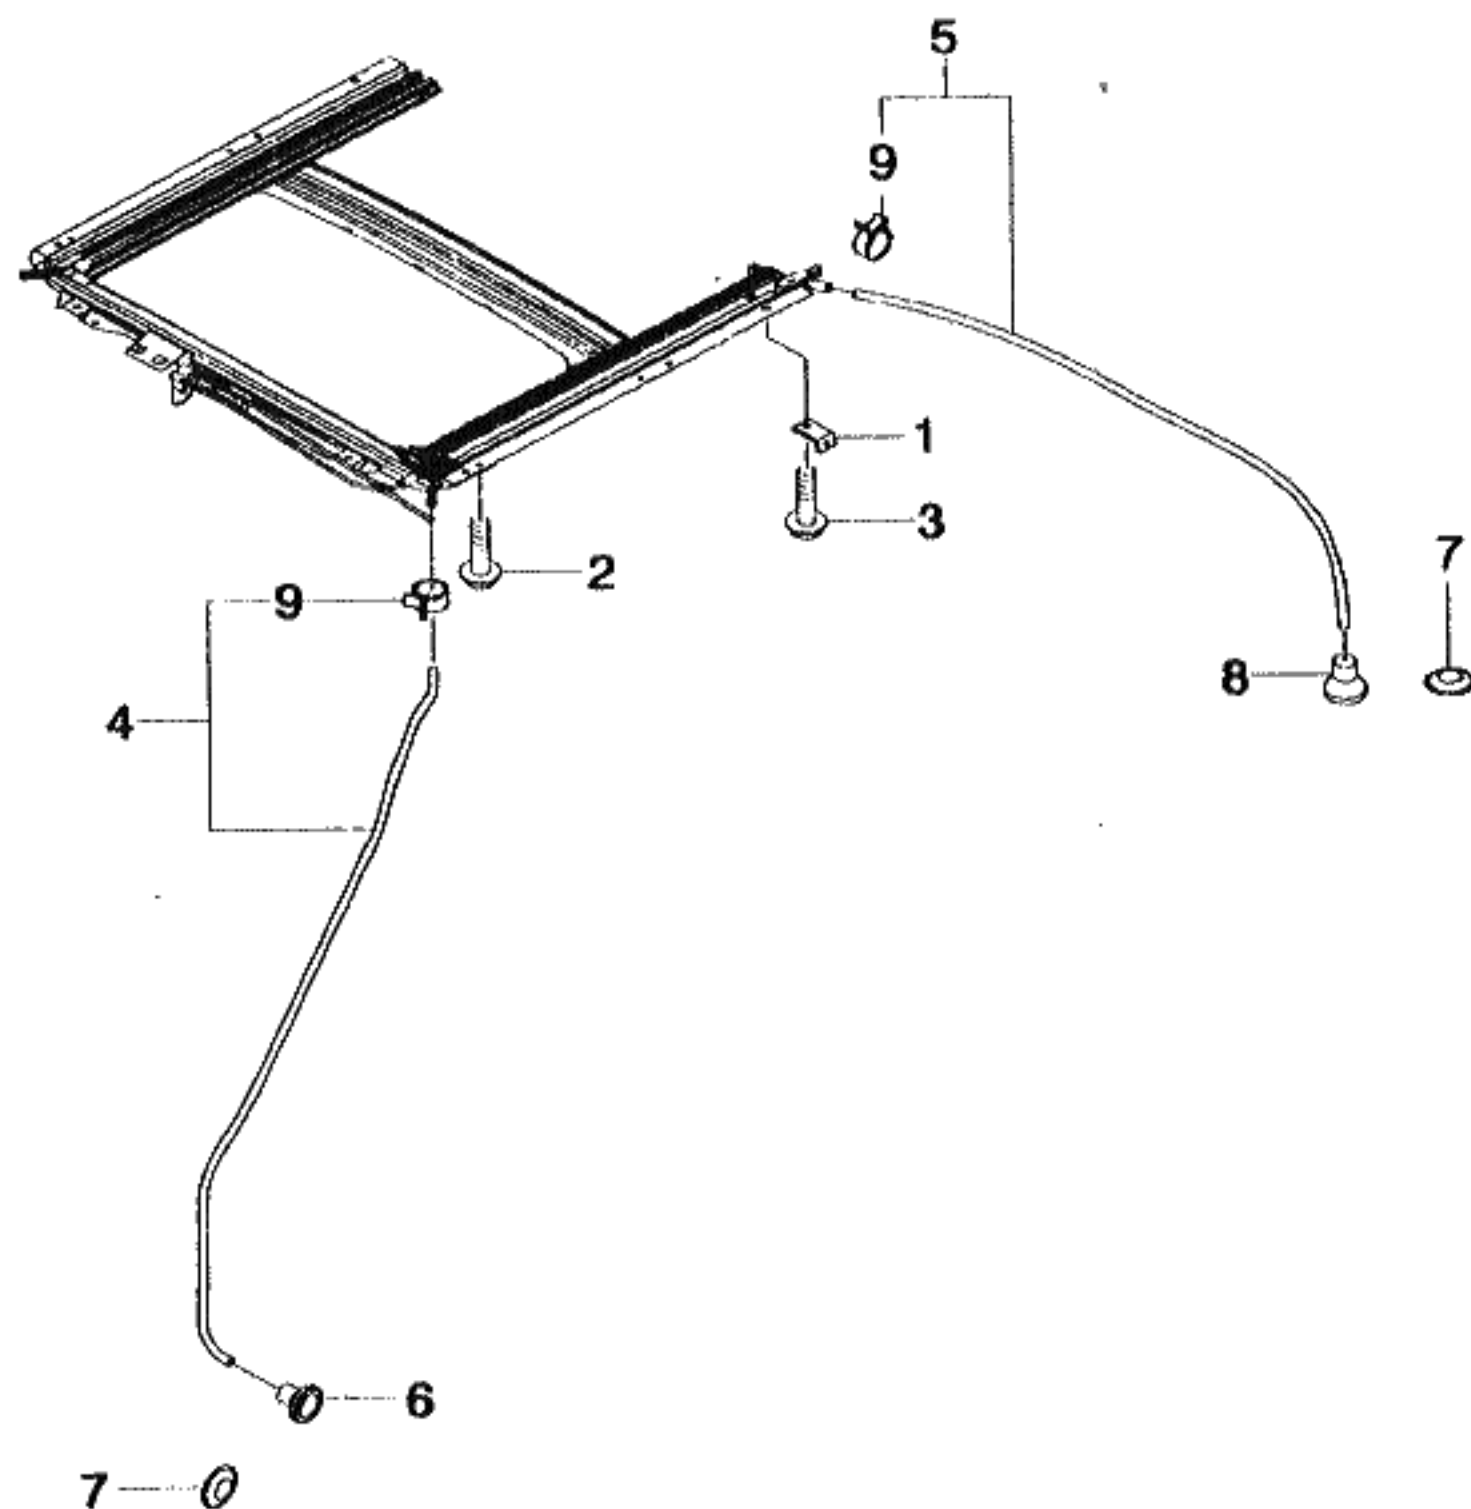

KEY NO.		PART NAME									
I T C	PART NO.	MODEL			OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		T / A	LEVEL					FROM	TO		
			S X	C D X							
	[01] 96221375	(E)BRACKET-SUPPORT SUN ROOF (D)TRÄGER				(F)SUPPORT (S)SOPORTE	2				
	[02] 01110-06163	(E)BOLT-HEXAGON (D)SCHRAUBE				(F)BOULON (S)PERNO	9				
	[03] 01514-05122	(E)BOLT (D)SCHRAUBE				(F)BOULON (S)PERNO	2				
	[04] 96221405	(E)TUBE-DRAIN,SUNROOF (D)ROHRLEITUNG				(F)TUYAU (S)TUBO	2				
	[05] 96221406	(E)TUBE-DRAIN,SUNROOF (D)ROHRLEITUNG				(F)TUYAU (S)TUBO	2				
	[06] 96239613	(E)GROMMET-DRAIN TUBE (D)ÖSE				(F)VIROLE (S)AISLANTE	2				
	[07] 09241-21001	(E)PLUG (D)STÖPSEL				(F)BOUCHON (S)TAPON	4				
	[08] 96241049	(E)GROMMET-DRAIN TUBE (D)ÖSE				(F)VIROLE (S)AISLANTE	2				
	[09] 09401-15403	(E)CLIP (D)KLEMME				(F)ATTACHE (S)GRAPA	4				

LEVEL	T/A(TRANSAXLE)
S X = 2.0 SOHC CDX = 2.0 DOHC	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON