

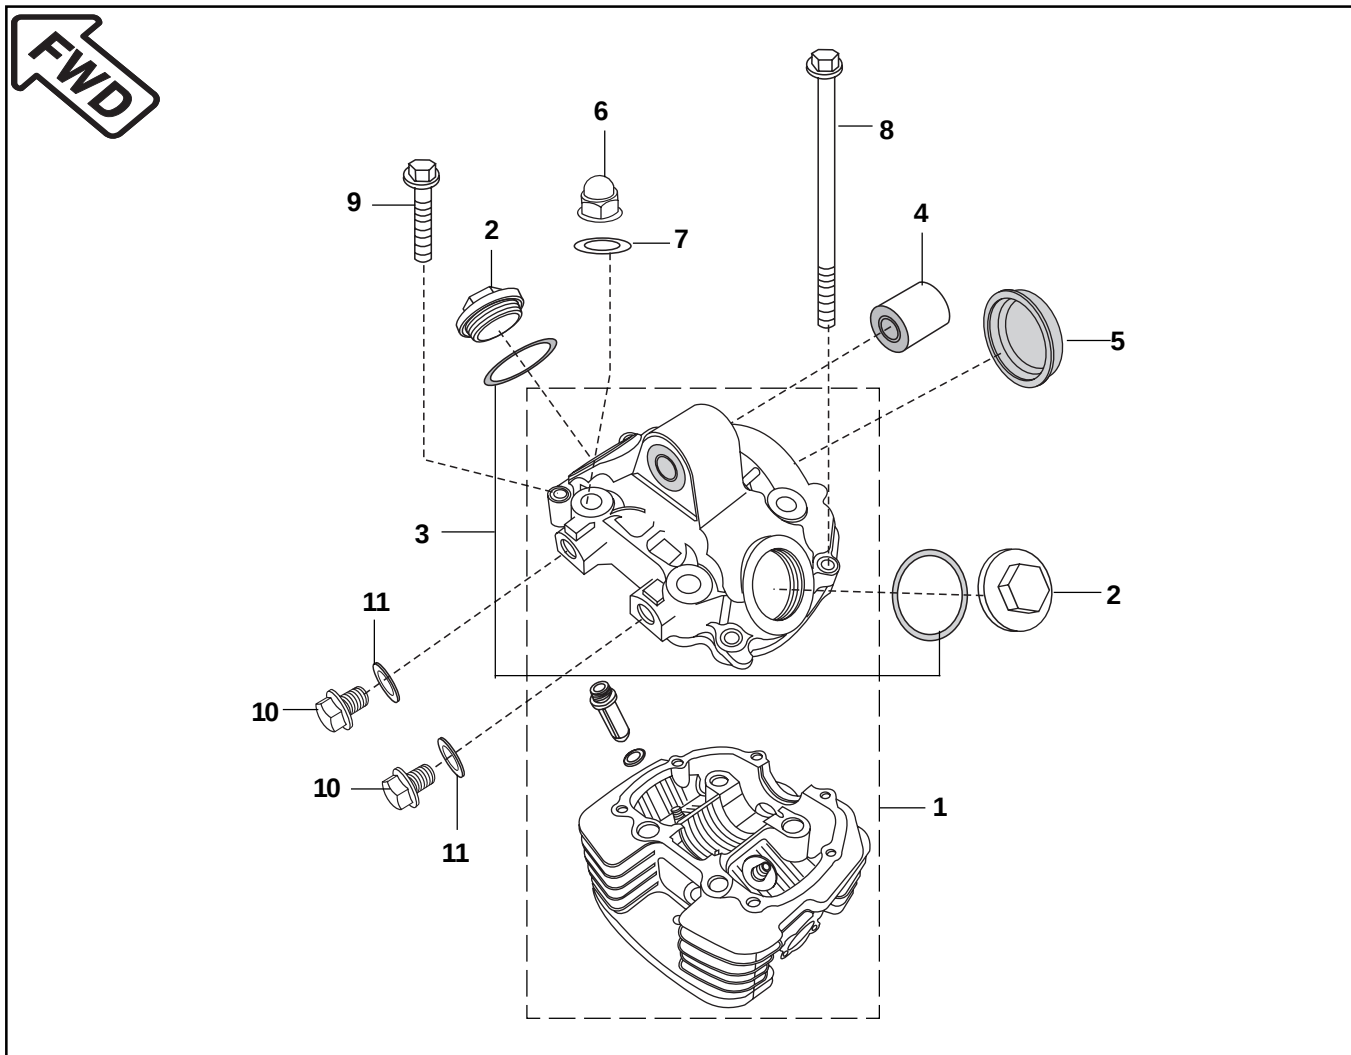


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1011 09	Head Cylinder with Cover	1	1	With Guide, Bush & O ring Ref.page No. 66
2	DS 1010 26	Cover Tappet	2	2	
3	36 DS10 01	'O' Ring Kit for Cover Cyl. Head	1	1	
4	DS 1011 93	Bush Cylinder Head Cover	1	1	
5	DS 1010 96	Camshaft Cap	1	1	
6	39 2647 15	Dommed Cap Nut	4	4	
7	DS 1010 84	Copper Washer	4	4	
8	39 2532 04	Hex. Bolt with Flange	2	2	
9	39 1075 04	Hex. Bolt / Flange	4	4	
10	DH 1012 72	Plug	2	2	
11	DG 1014 98	Gasket	2	2	

K.S. = Kick Start
E.S. = Electric Start

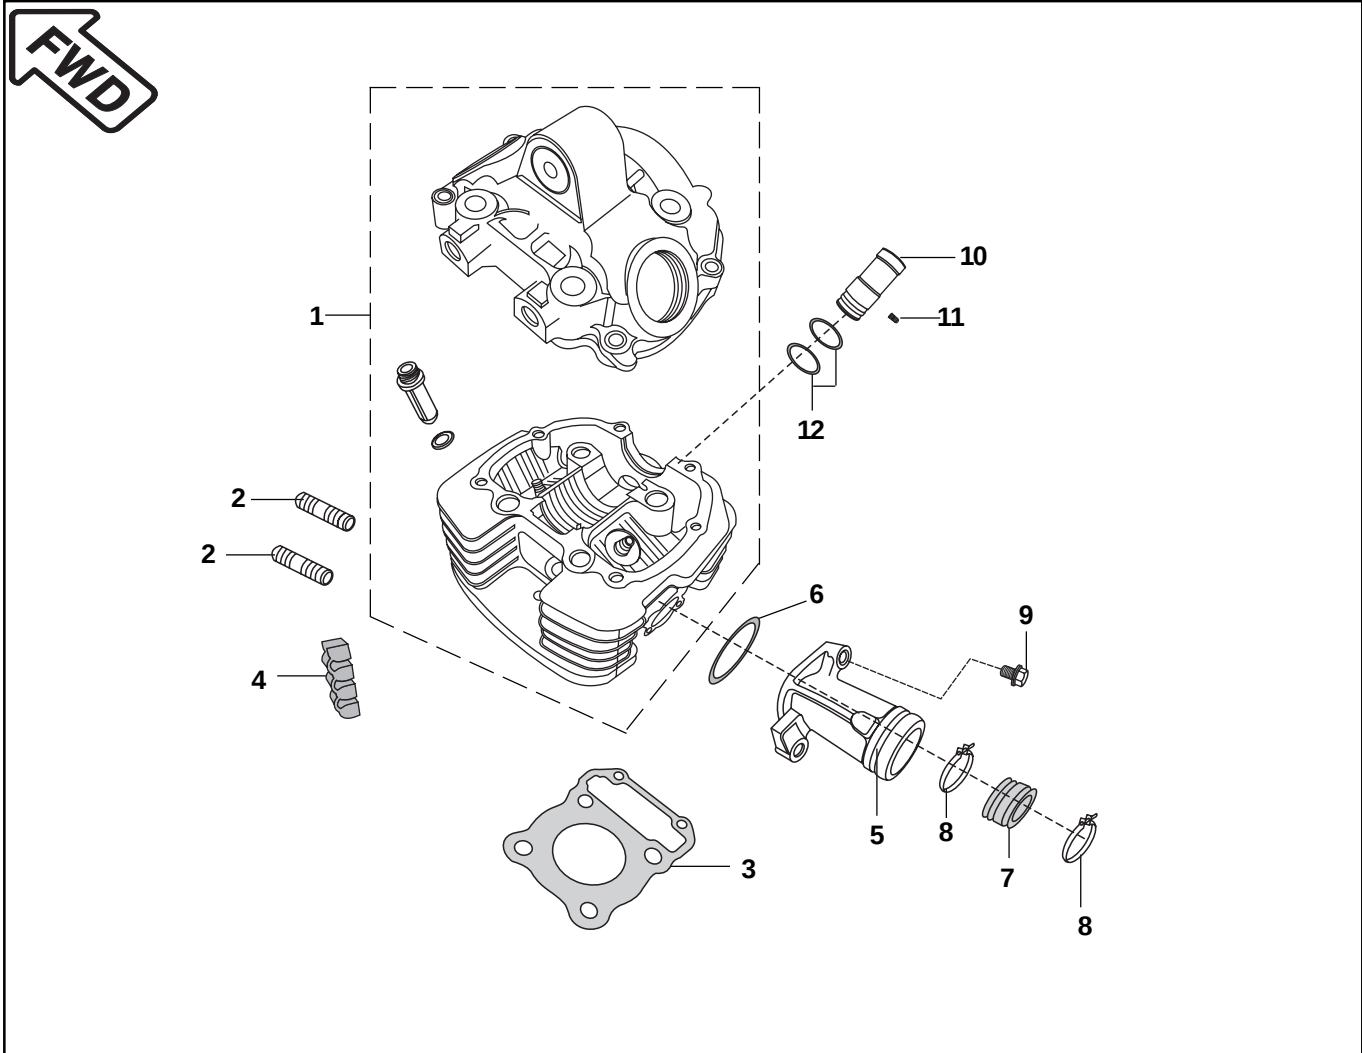


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1011 09	Head Cylinder with Cover & Damper	1	1	Ref.page No. 66
2	39 1660 05	Stud (Exhaust)	2	2	
3	DH 1010 33	Gasket Cylinder Head	1	1	
4	DH 1015 08	Damper Cylinder Head	5	5	
5	DS 1210 07	Intake Pipe	1	1	
6	39 2539 21	'O' Ring (Intake Pipe)	1	1	
7	DS 1210 12	Carburettor Insulator	1	1	
8	DH 1210 38	Clamp for Insulator	2	2	
9	39 1674 04	Hex. Bolt / Flange	2	2	
10	DH 1110 12	Collar - Spark Plug	1	1	
11	39 2608 01	Grub Screw	1	1	
12	36 DS10 01	'O' Ring Kit for Cover Cyl. Head	1	1	

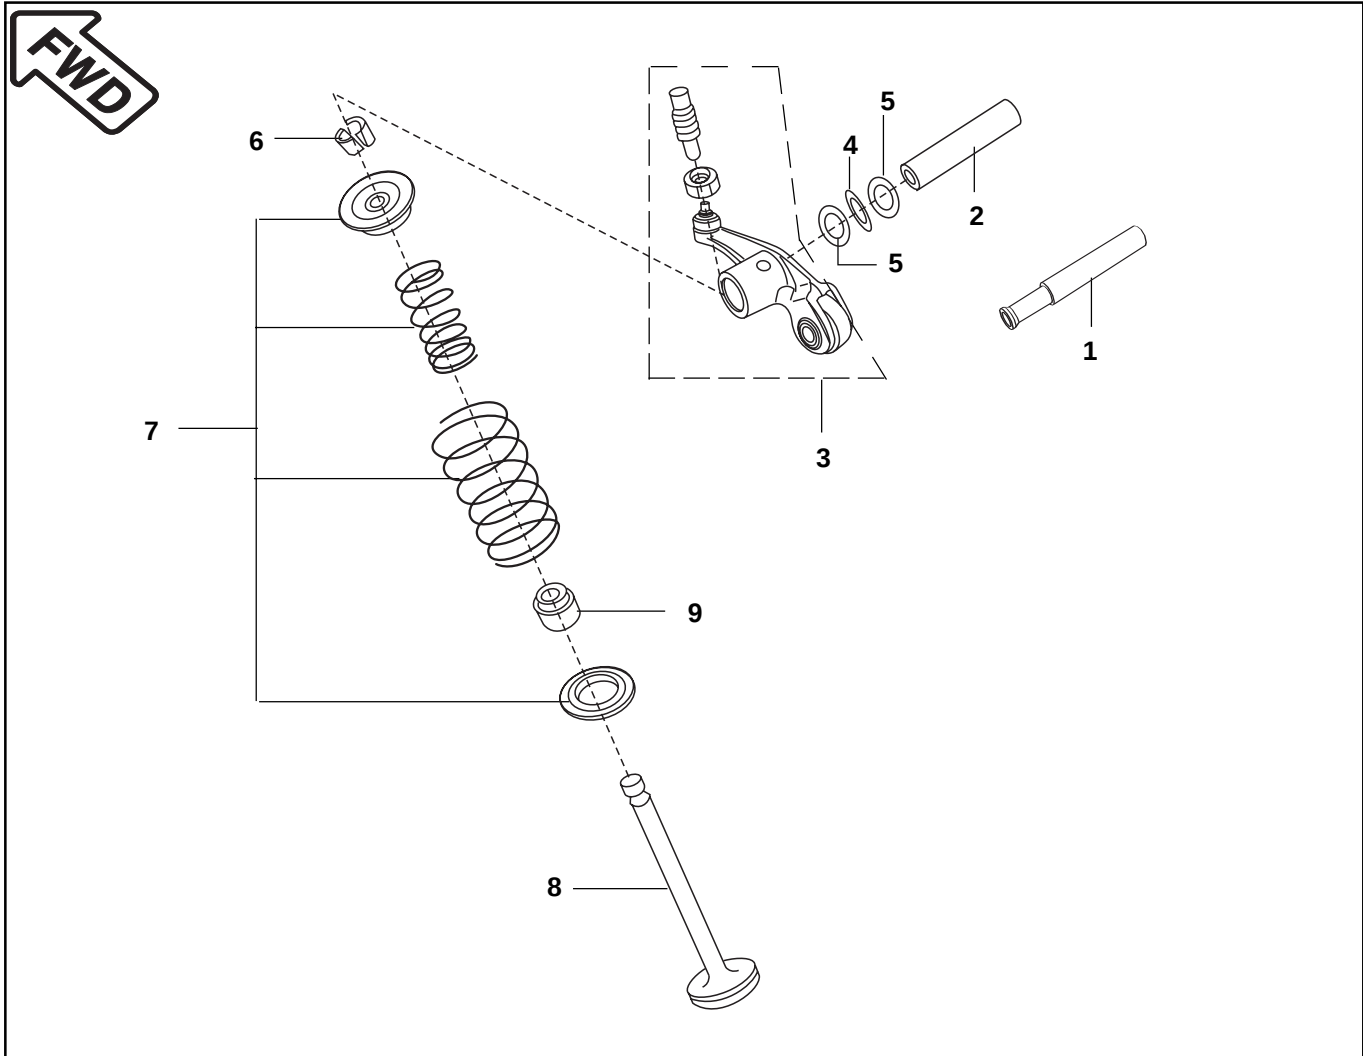


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DH 1014 69	Rocker Arm Shaft - Intake	1	1	Ref.page No. 66 Ref.page No. 66
2	DS 1010 32	Rocker Arm Shaft - Exhaust	1	1	
3	DS 1011 91	Rocker Arm with Roller	2	2	
4	DH 1012 95	Wave washer	2	2	
5	39 2440 11	Plain washer	4	4	
6	DG 1010 29	Cotter valve	4	4	
7	36 DS10 03	Valve Repair Kit	1	1	
8	36 DS10 02	Valve Kit	1	1	
9	39 2017 19	Seal valve stem	2	2	

K.S. = Kick Start
E.S. = Electric Start

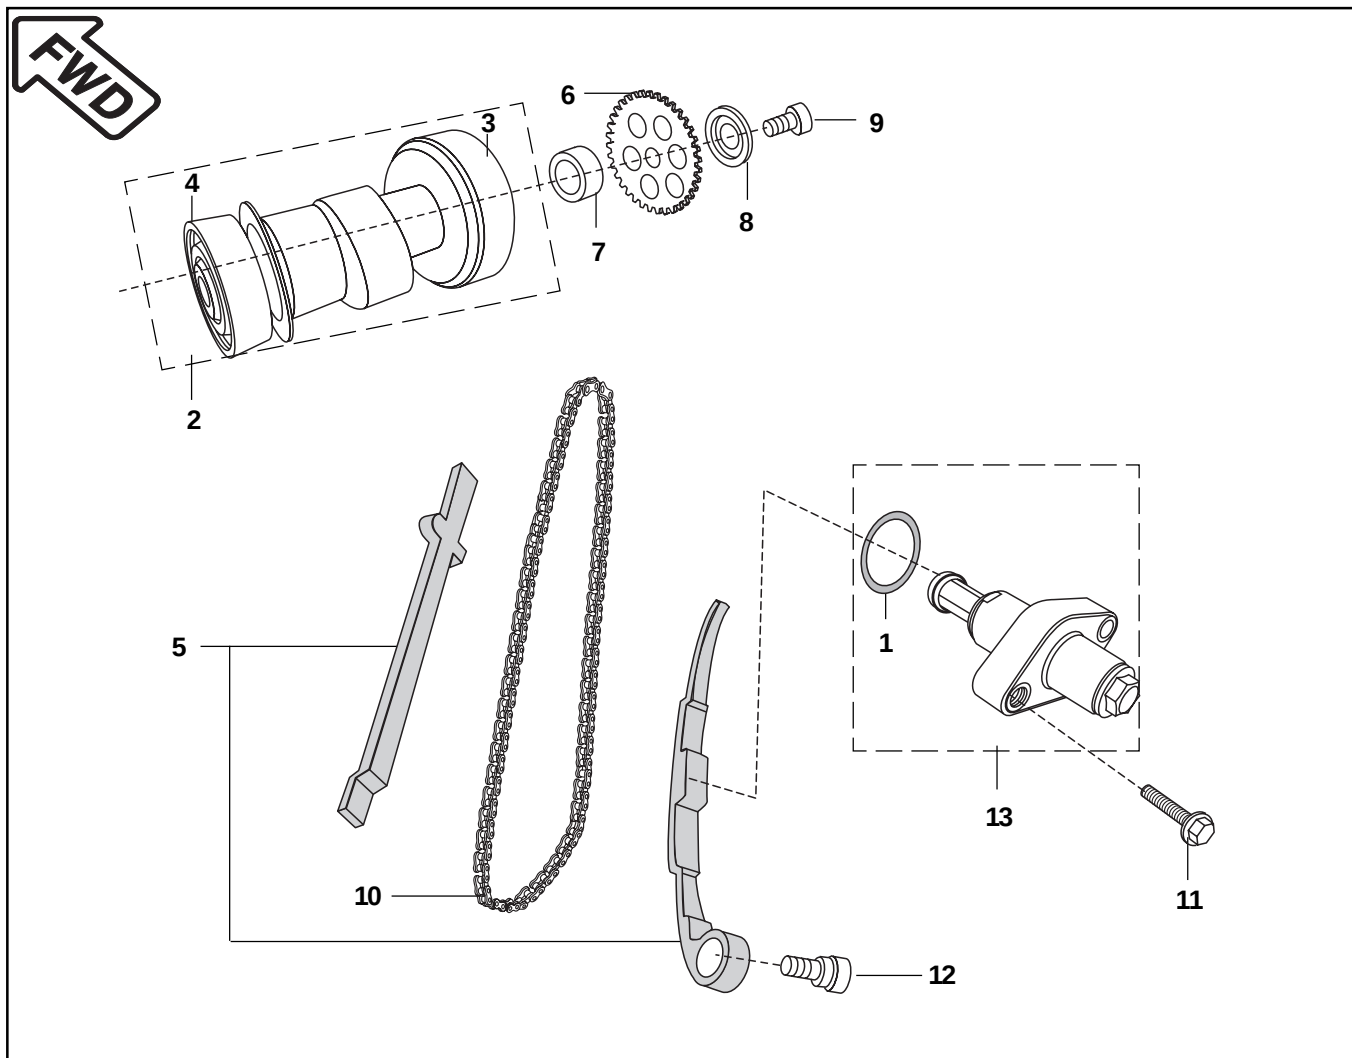


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	39 2040 21	Ring'O'	1	1	
2	DS 1011 51	Camshaft assly.	1	1	
	DS 1011 89	Bare Camshaft	1	1	Without Bearings
3	39 2542 20	Bearing cam RH side	1	1	6302 - RS1/C3
4	39 1880 20	Bearing cam LH side	1	1	6002 - C3
5	36 DS10 04	Guide chain Kit	1	1	Ref.page No. 66
6	DS 1012 76	Sprocket cam Driven	1	1	
7	DH 1014 12	Collar cam Sprocket	1	1	
8	DH 1010 48	Special camshaft washer	1	1	
9	39 2198 04	Hex. Soc. Head cap Bolt	1	1	
10	DS 1010 36	Cam Chain (94 Links)	1	1	
11	39 1674 04	Hex Bolt / Flange	2	2	
12	DH 1010 11	Cam chain Tensioner pivot Bolt	1	1	
13	DS 1012 77	Tensioner Assly	1	1	

K.S. = Kick Start
E.S. = Electric Start

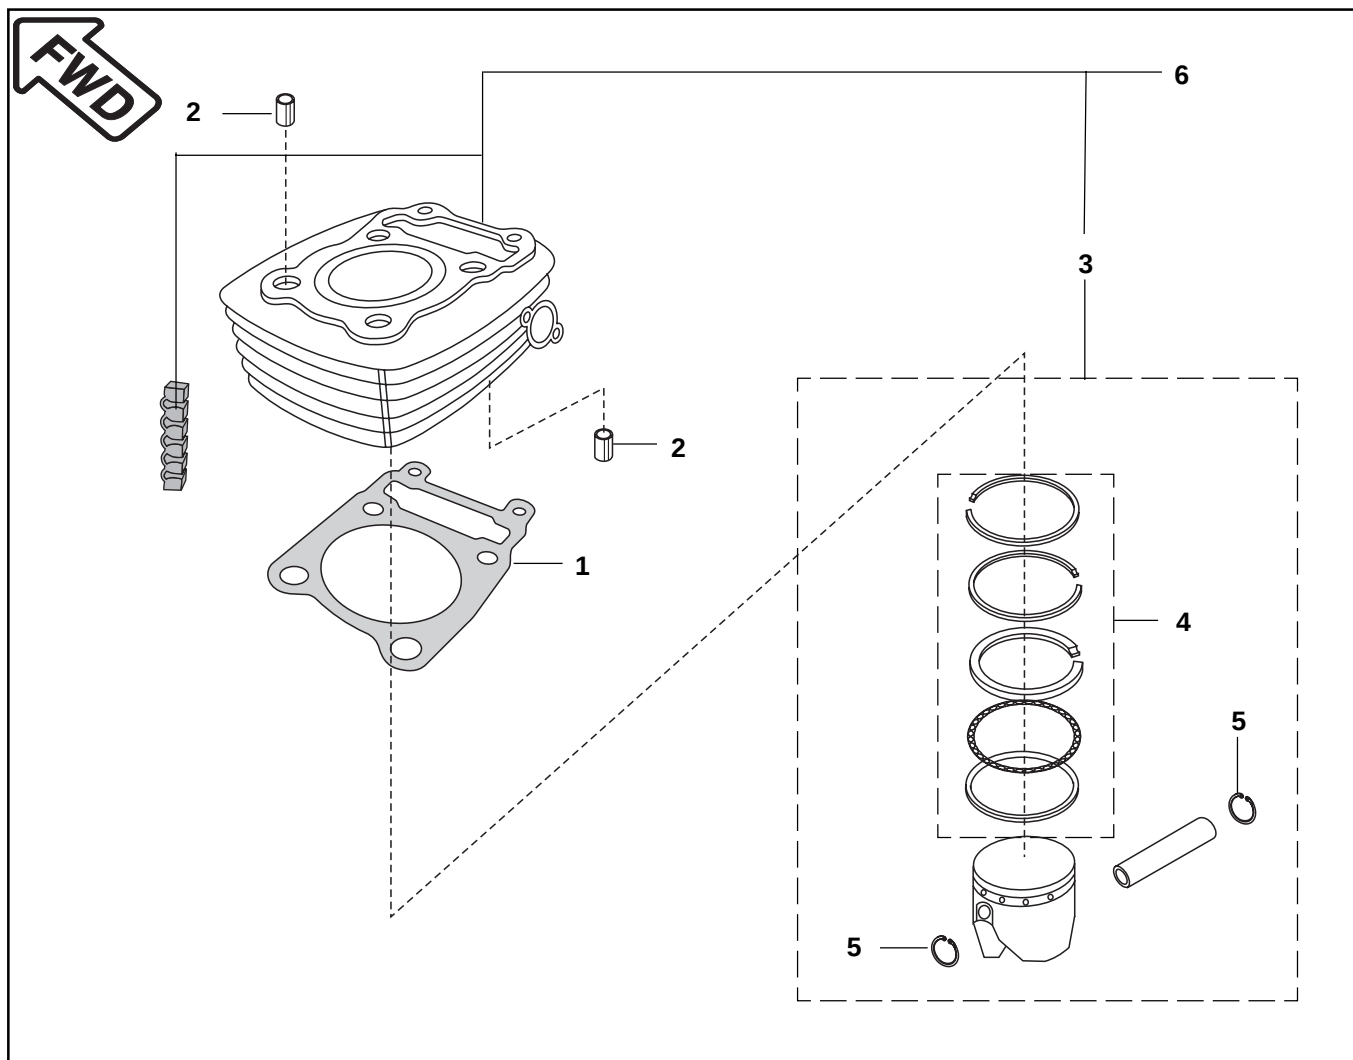


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DH 1010 16	Gasket Cylinder	1	1	With Damper (Qty.6)
2	39 2181 06	Pin dowel	4	4	
3	DS 1010 13	Piston Assly. Std.	1	1	
4	AA 1012 17	Ring Set Piston	1	1	
5	39 2132 17	Ring Snap	2	2	
6	DS 1012 54	Cylinder Block / Piston Assly	1	1	

K.S. = Kick Start
E.S. = Electric Start

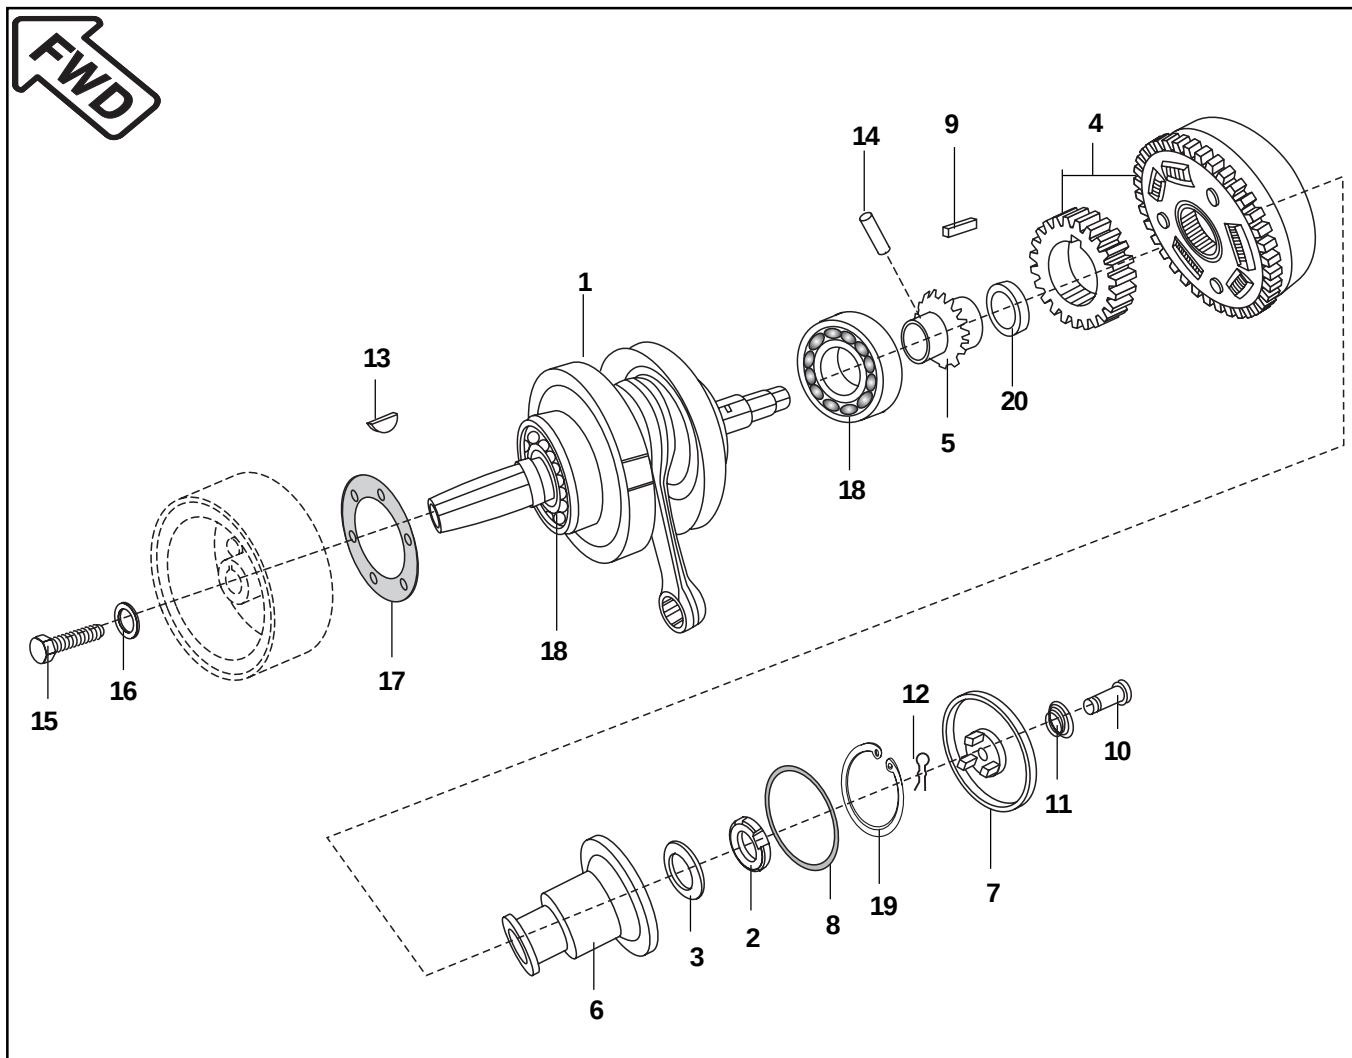


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1011 84	Crankshaft assly. comp.	1	1	
2	DH 1011 95	Nut	1	1	
3	39 2200 11	Washer	1	1	
4	DS 1012 55	Set Gear primary driver & driven	1	1	
5	DS 1012 75	Sprocket cam drive	1	1	
6	DS 1010 77	Body centrifugal oil filter	1	1	
7	DS 1012 60	Cover centrifugal oil filter	1	1	
8	39 2713 21	'O' Ring	1	1	
9	DS 1011 54	Key	1	1	
10	DH 1010 66	Joint Oil Delivery - B	1	1	
11	DS 1011 12	Spring Oil Delivery- B	1	1	
12	39 2199 08	Pin Oil delivery joint - B	1	1	
13	31 1011 73	Key woodruff	1	1	
14	39 2203 07	Parallel pin	1	1	
15	39 2183 04	Bolt	1	1	
16	39 2165 11	Plain washer	1	1	
17	28 1011 10	Damper	1	1	
18	39 2561 20	Ball Bearing	2	2	
19	39 2712 17	Circlip	1	1	
20	DS 1011 52	Spacer	1	1	

K.S. = Kick Start
E.S. = Electric Start

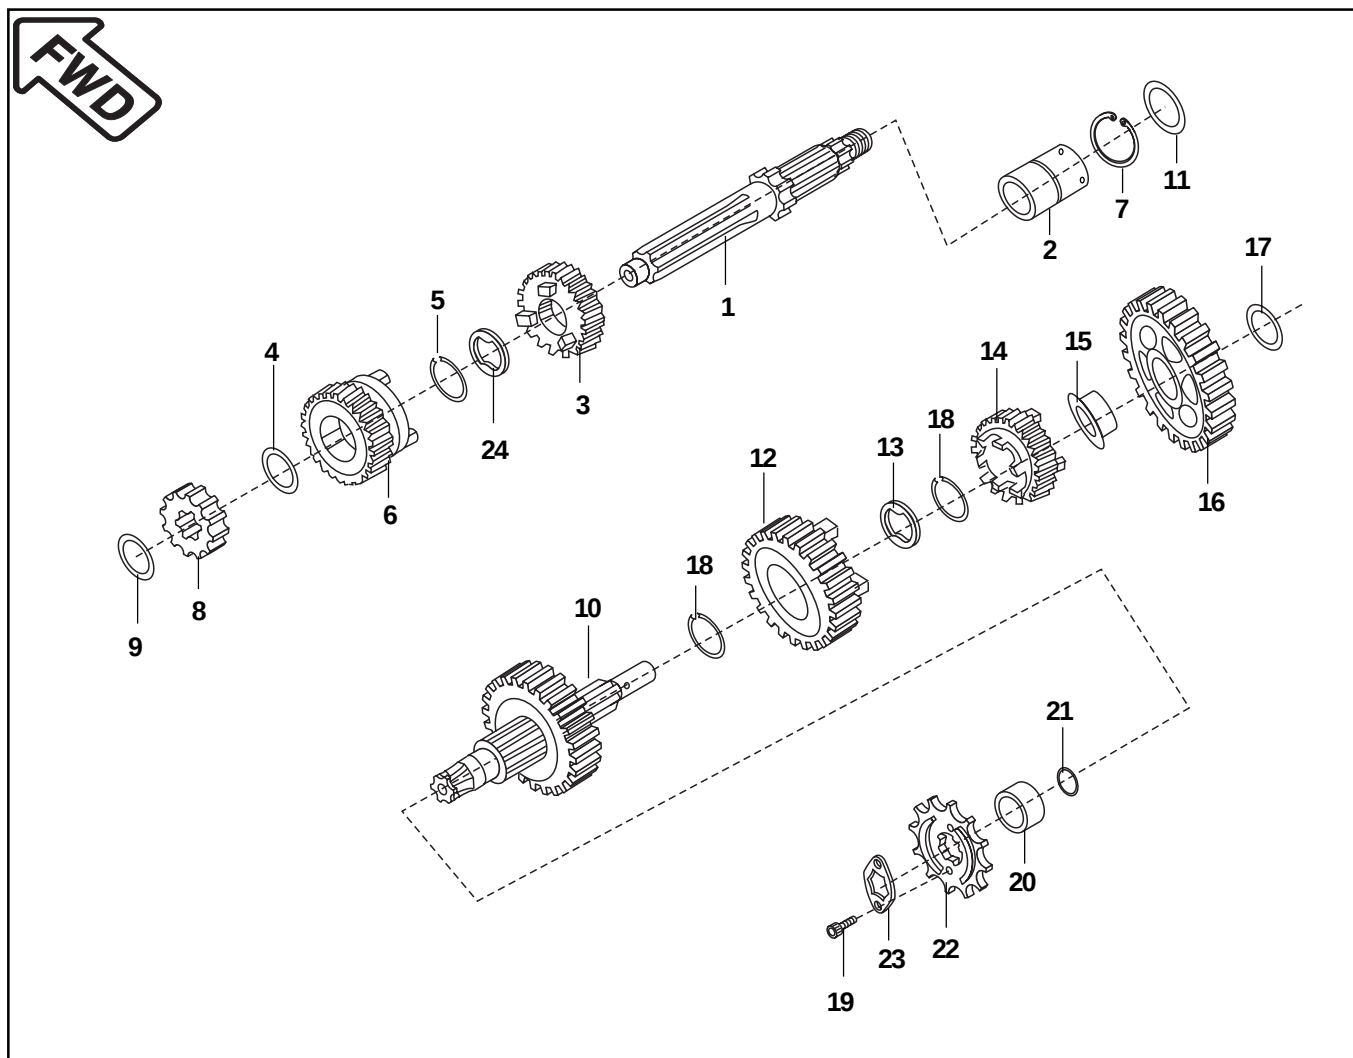


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1010 46	Shaft Input Transmission	1	1	With Plug & Collar
2	DS 1012 05	Collar	1	1	
3	DS 1010 49	Gear 4th Drive	1	1	
4	DS 1011 28	Washer	1	1	
5	39 0987 17	External Circlip	1	1	
6	DS 1010 48	Gear 3rd Drive	1	1	
7	39 0337 17	External Circlip	1	1	
8	DS 1010 47	Gear 2nd drive	1	1	
9	DS 1011 29	Thrust washer	1	1	
10	DS 1012 65	Shaft output Transmission	1	1	
11	DS 1012 04	Washer Plain	1	1	
12	DS 1010 54	Gear 3rd Driven	1	1	
13	DH 1010 79	Washer Spline	1	1	
14	DS 1010 55	Gear 4th Driven	1	1	
15	DH 1011 11	Bush 1st driven	1	1	

K.S. = Kick Start
E.S. = Electric Start



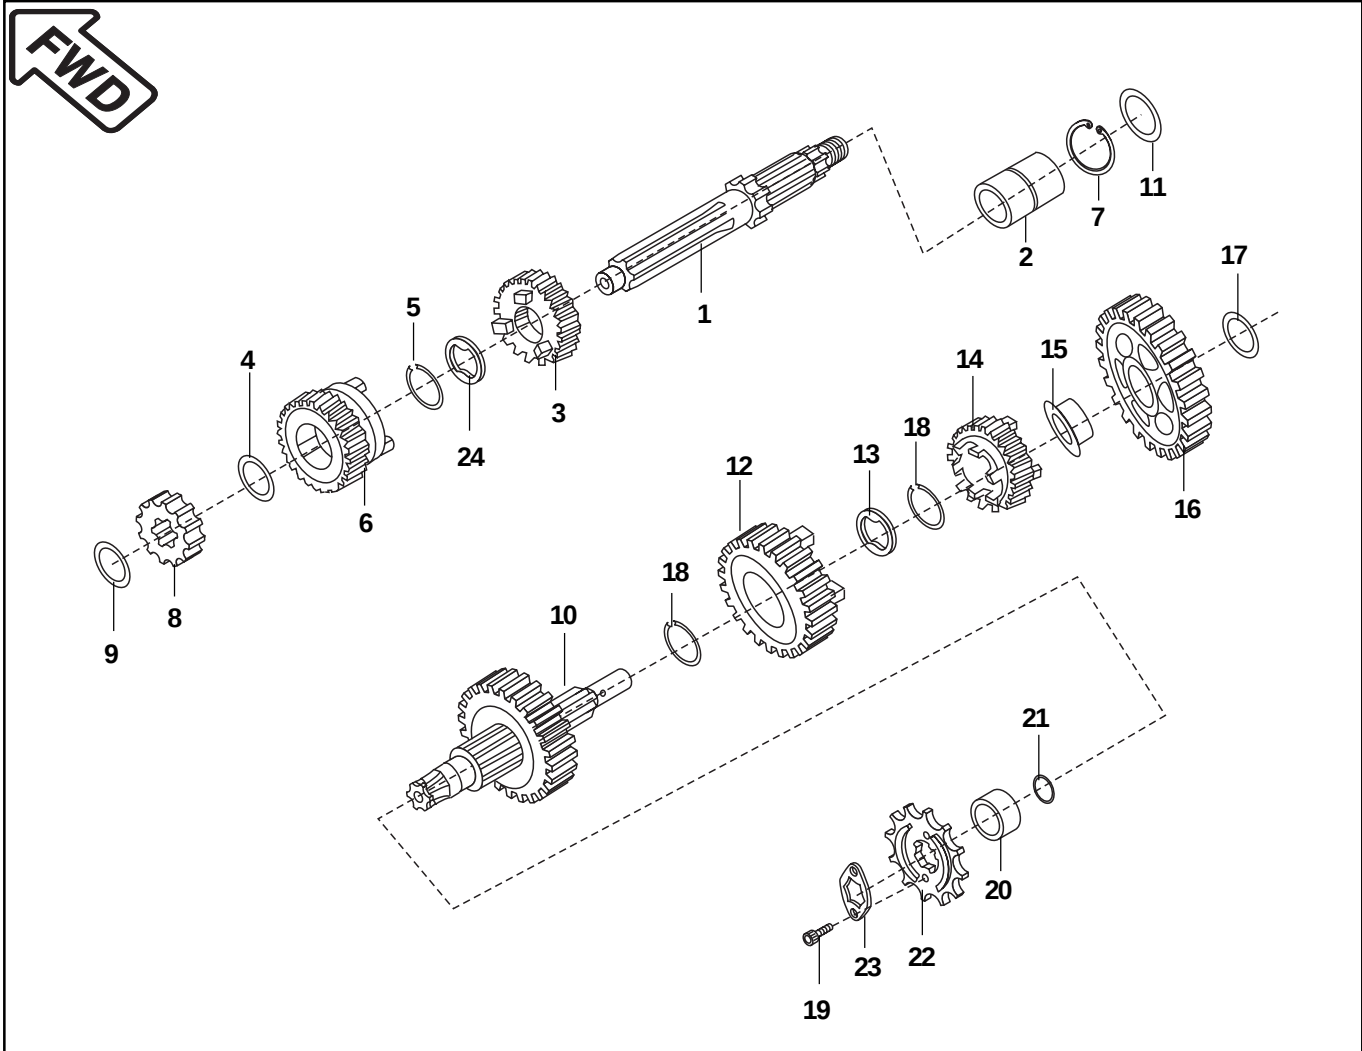


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	DS 1010 52	Gear 1st driven	1	1	
17	DS 1012 03	Washer Plain	1	1	
18	DH 1012 35	Circlip	2	2	
19	39 1981 04	Bolt Drive Sprocket	2	2	
20	DH 1013 34	Collar Sprocket	1	1	
21	30 1010 61	'O' Ring Sprocket Collar	1	1	
22	DS 1011 97	Sprocket Drive	1	1	
23	DS 1011 98	Plate Drive Sprocket	1	1	
24	DS 1011 07	Spline washer	1	1	

K.S. = Kick Start
E.S. = Electric Start

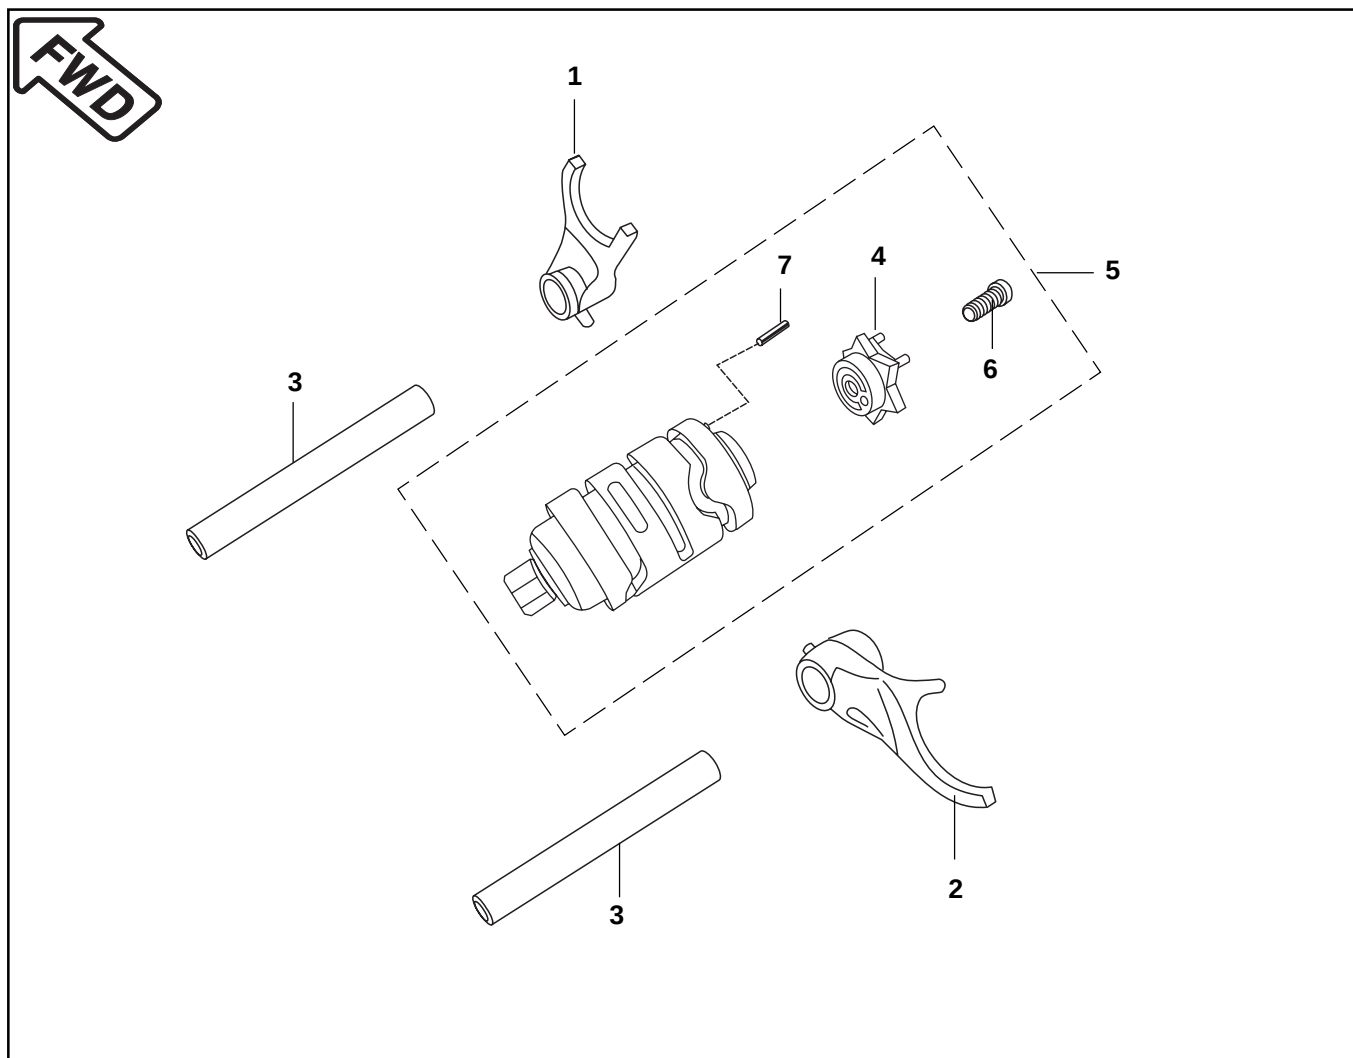


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1010 63	Fork Gear Shift Input	1	1	
2	DS 1010 64	Fork Gear Shift output	1	1	
3	DS 1010 62	Shaft Gear Shift Fork	2	2	
4	DS 1010 79	Guide Gear Shifter	1	1	
5	DS 1011 35	Drum Assly. Gear Shift	1	1	
6	39 2639 04	Bolt Socket	1	1	
7	DS 1011 32	Parellel pin	1	1	

K.S. = Kick Start
E.S. = Electric Start

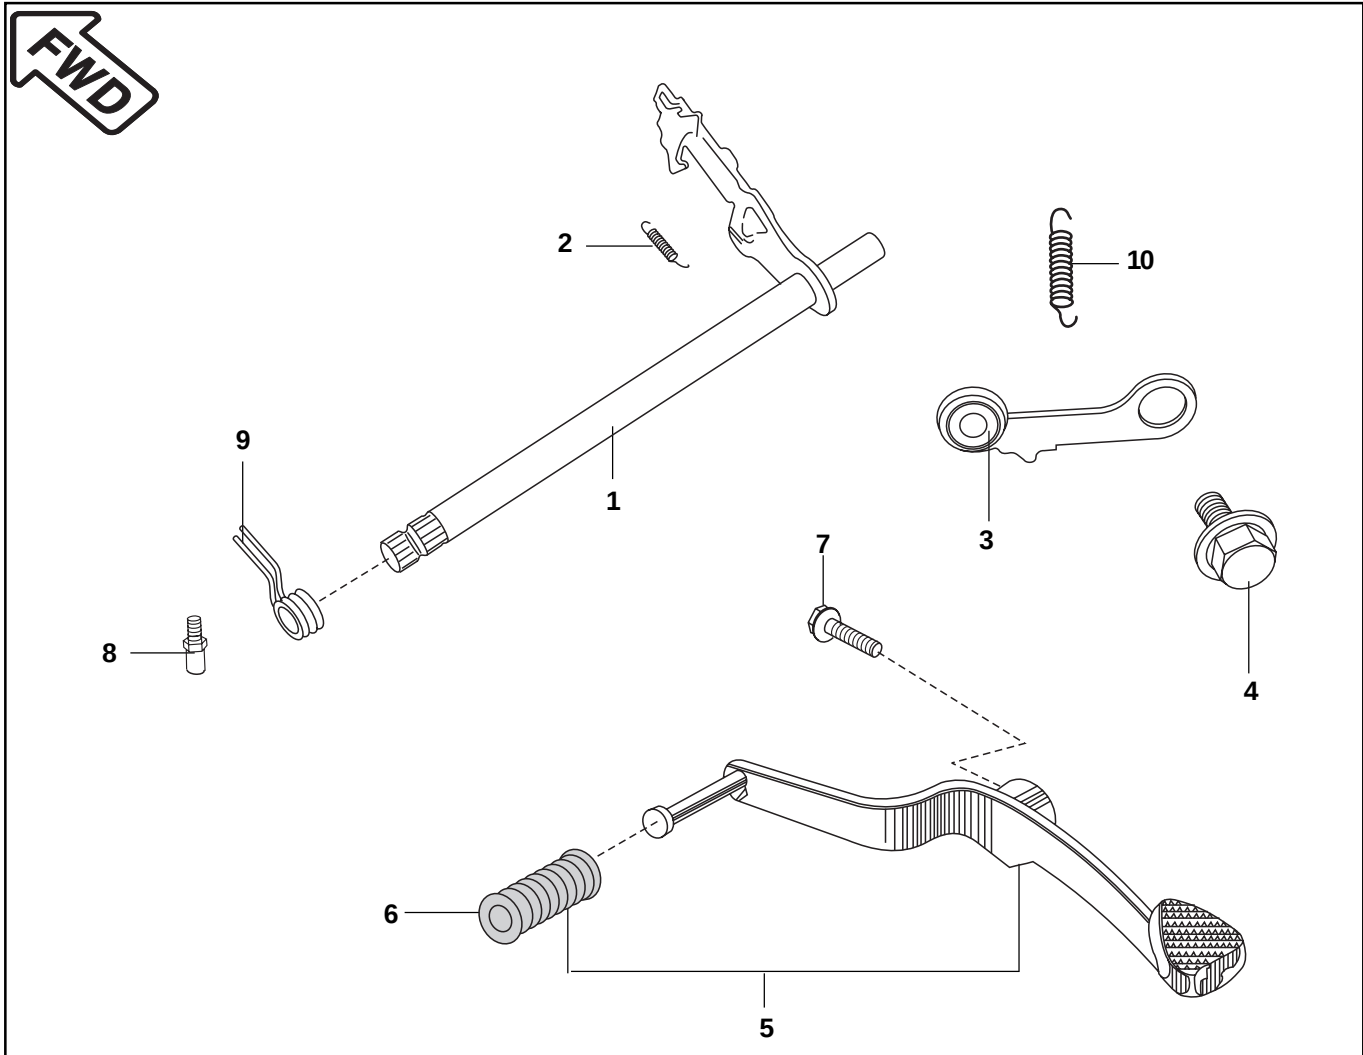


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1011 34	Lever comp. Gear Shifter	1	1	
2	DS 1011 18	Spring slider arm reset	1	1	
3	DS 1011 73	Stopper Comp.gear shifter drum	1	1	
4	DS 1011 04	Bolt shift change	1	1	
5	DS 1012 51	Lever comp. change with Damper	1	1	
6	31 1011 08	Damper	1	1	
7	39 2453 04	Flanged Bolt	1	1	
8	DH 1012 25	Bolt Gear Shift drum Stopper	1	1	
9	DS 1011 19	Spring gear shifter return	1	1	
10	DS 1011 03	Spring gear shifter drum stopper	1	1	

K.S. = Kick Start
E.S. = Electric Start

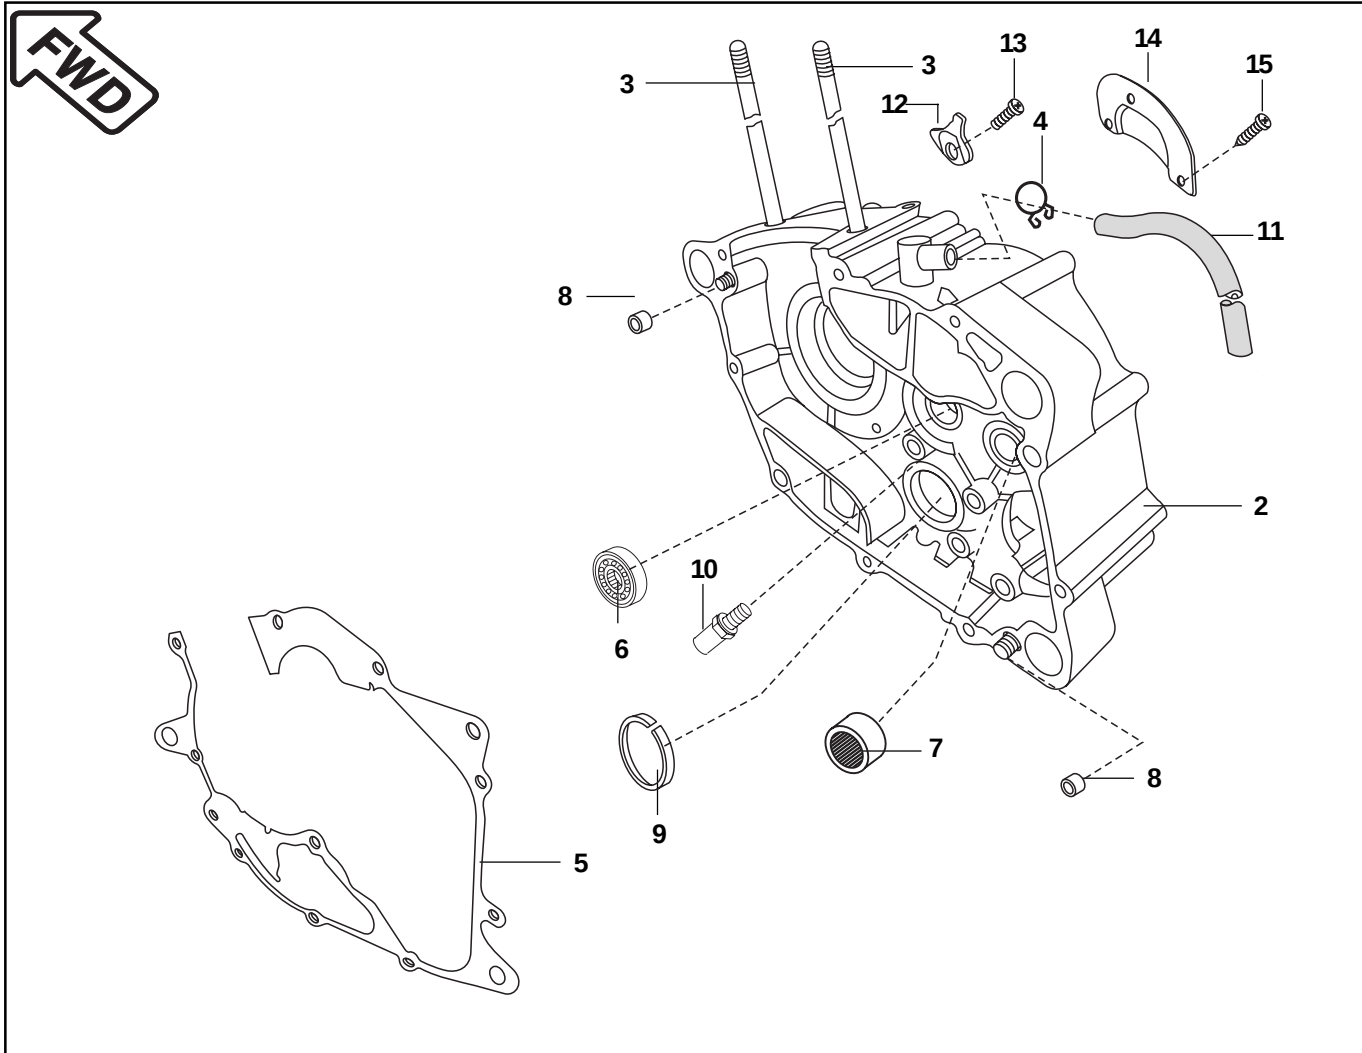


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1010 01	Engine Assly.	1	--	N.I.
	DS 1011 81	Engine Assly.	--	1	N.I.
2	DS 1012 73	Crankcase RH	1	--	} Along with Plugs, Bushing & Breather Pipe
	DS 1012 71	Crankcase RH	--	1	
3	39 2531 05	Stud	2	2	
4	DS 1012 34	Spring Clip	1	1	
5	DS 1011 67	Gasket Crankcase	1	1	
6	39 1450 20	Bearing Ball (For Input shaft)	1	1	
7	39 2662 20	Needle Bearing (For Output shaft)	1	1	
8	39 2181 06	Dowel Pin	2	2	
9	DU 1010 85	Bushing (For Drum Change)	1	1	
10	DH 1012 25	Bolt	1	1	For Holding Spring
11	DS 1012 14	Rubber tube	1	1	
12	DS 1010 09	Input Bearing Stopper Plate	1	1	
13	39 0746 01	Screw	1	1	
14	DS 1010 08	Breather Plate	1	1	
15	39 1414 02	Screw	3	3	

K.S. = Kick Start
E.S. = Electric Start

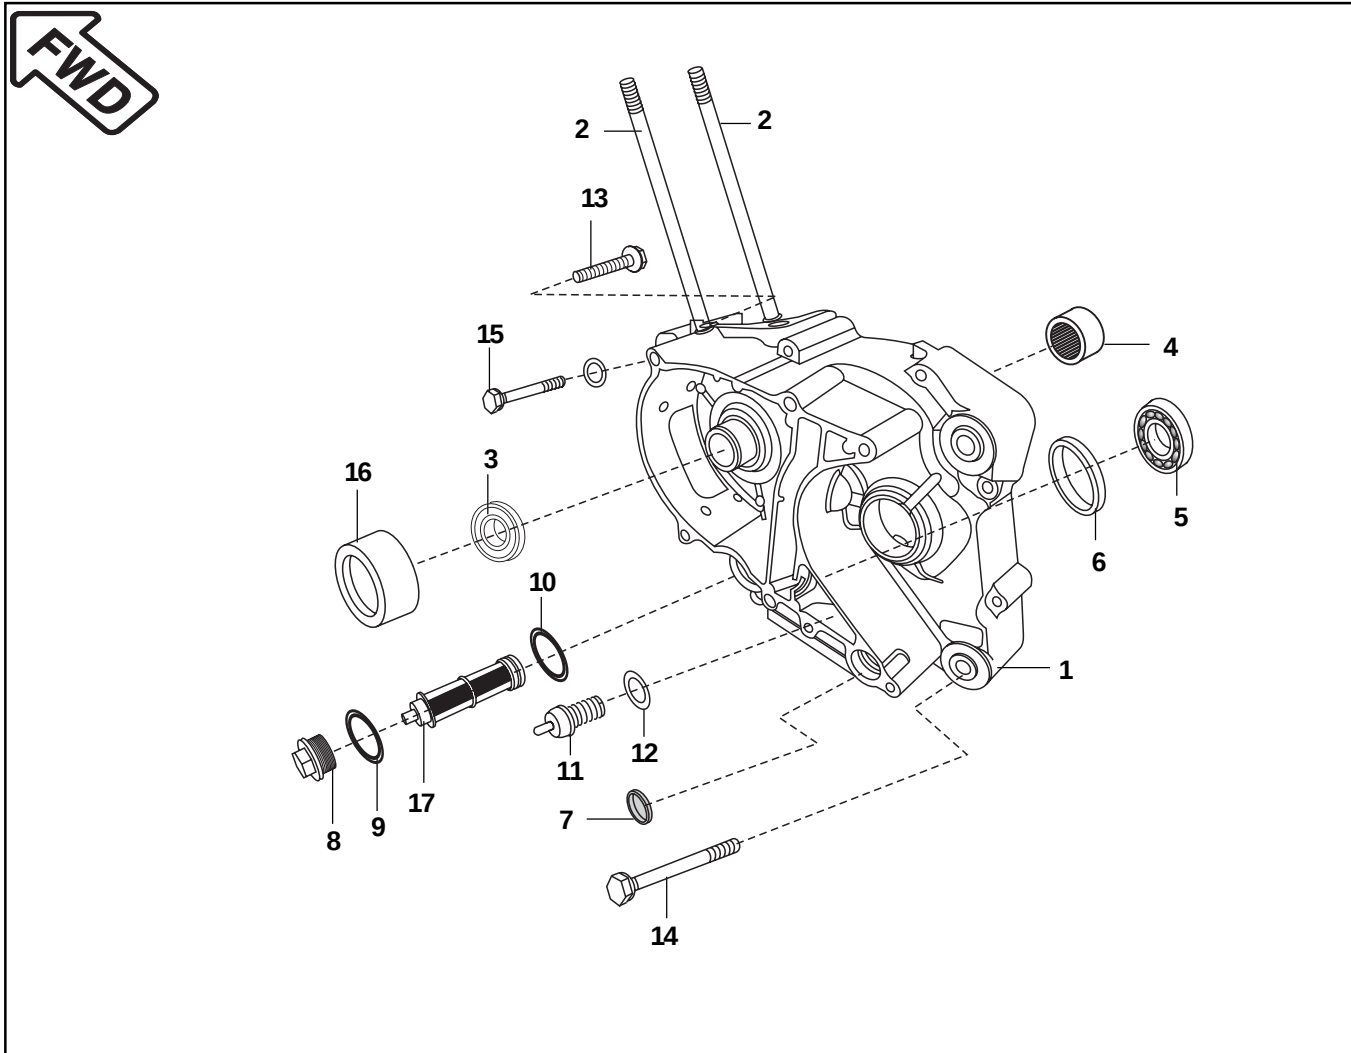


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1012 37	Crankcase LH	1	--	
	DS 1012 72	Crankcase LH with Bush	--	1	
2	39 2531 05	Stud	2	2	
3	39 2188 19	Oil Seal	1	1	
4	39 2562 20	Needle Bearing (For Input shaft)	1	1	
5	39 2583 20	Bearing Ball (For Output shaft)	1	1	
6	39 2189 19	Oil Seal (For Output shaft)	1	1	
7	39 2190 19	Oil Seal (For Shift lever)	1	1	
8	DS 1210 05	Cap Strainer	1	1	
9	39 1754 21	'O' ring	1	1	
10	39 1283 21	'O' ring	1	1	
11	31 2010 81	Switch comp.(Neutral)	1	1	
12	DH 1012 64	Gasket Neutral Switch	1	1	
13	39 1963 04	Flanged Bolt	1	1	
14	39 1677 04	Bolt	6	6	
15	39 1845 04	Bolt	1	1	
16	DH 1011 69	Bush starter gear inner	--	1	
17	DS 1210 04	Mesh Filter oil Comp.	1	1	
18	39 0849 14	Lock Washer (Toothed) for Earthing	1	1	N.I.
19	DH 1014 18	Lock Screw earthing	1	1	N.I.

K.S. = Kick Start
E.S. = Electric Start



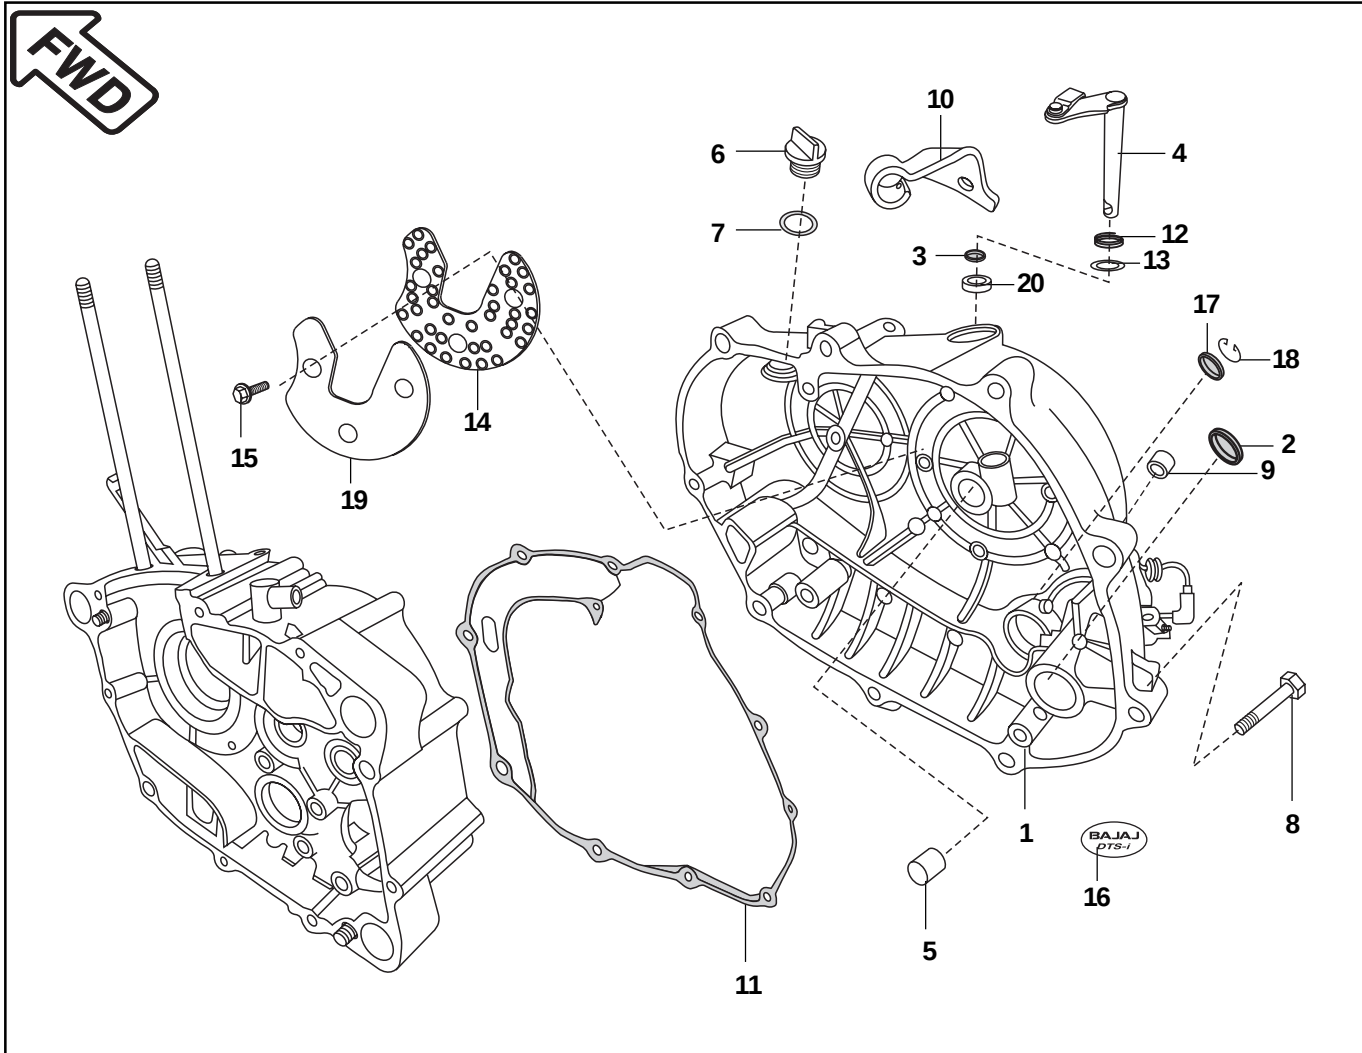


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1012 70	Cover comp RH / Bushing & Plug	1	1	With Decal
2	39 1917 19	Seal kick Shaft	1	1	
3	39 1041 19	Seal clutch lever	1	1	
4	DS 1010 67	Lever Assly. Clutch	1	1	
5	DS 1010 50	Rod Push (For Clutch Lever)	1	1	
6	DS 1010 71	Gauge Oil level	1	1	Fixed on Cover comp.RH
7	DH 1011 52	'O' ring Oil level Gauge	1	1	
8	39 1075 04	Bolt	8	8	
9	39 0999 06	Pin Dowel	2	2	
10	DS 1010 73	Bracket Clutch Cable	1	1	
11	DS 1010 72	Gasket cover RH	1	1	
12	DS 1011 23	Spring clutch lever	1	1	
13	39 2443 11	Washer	1	1	
14	DS 1012 11	Damper Cover RH	1	1	
15	39 2208 04	Flanged Bolt	3	3	
16	DS 1012 52	'bajaj' Decal	1	1	
17	DG 1014 18	Gauge	1	1	
18	DS 1012 15	Wire Circlip	1	1	
19	DS 1012 12	Plate Cover Damper RH	1	1	
20	DS 1012 01	Bushing	1	1	

K.S. = Kick Start
E.S. = Electric Start

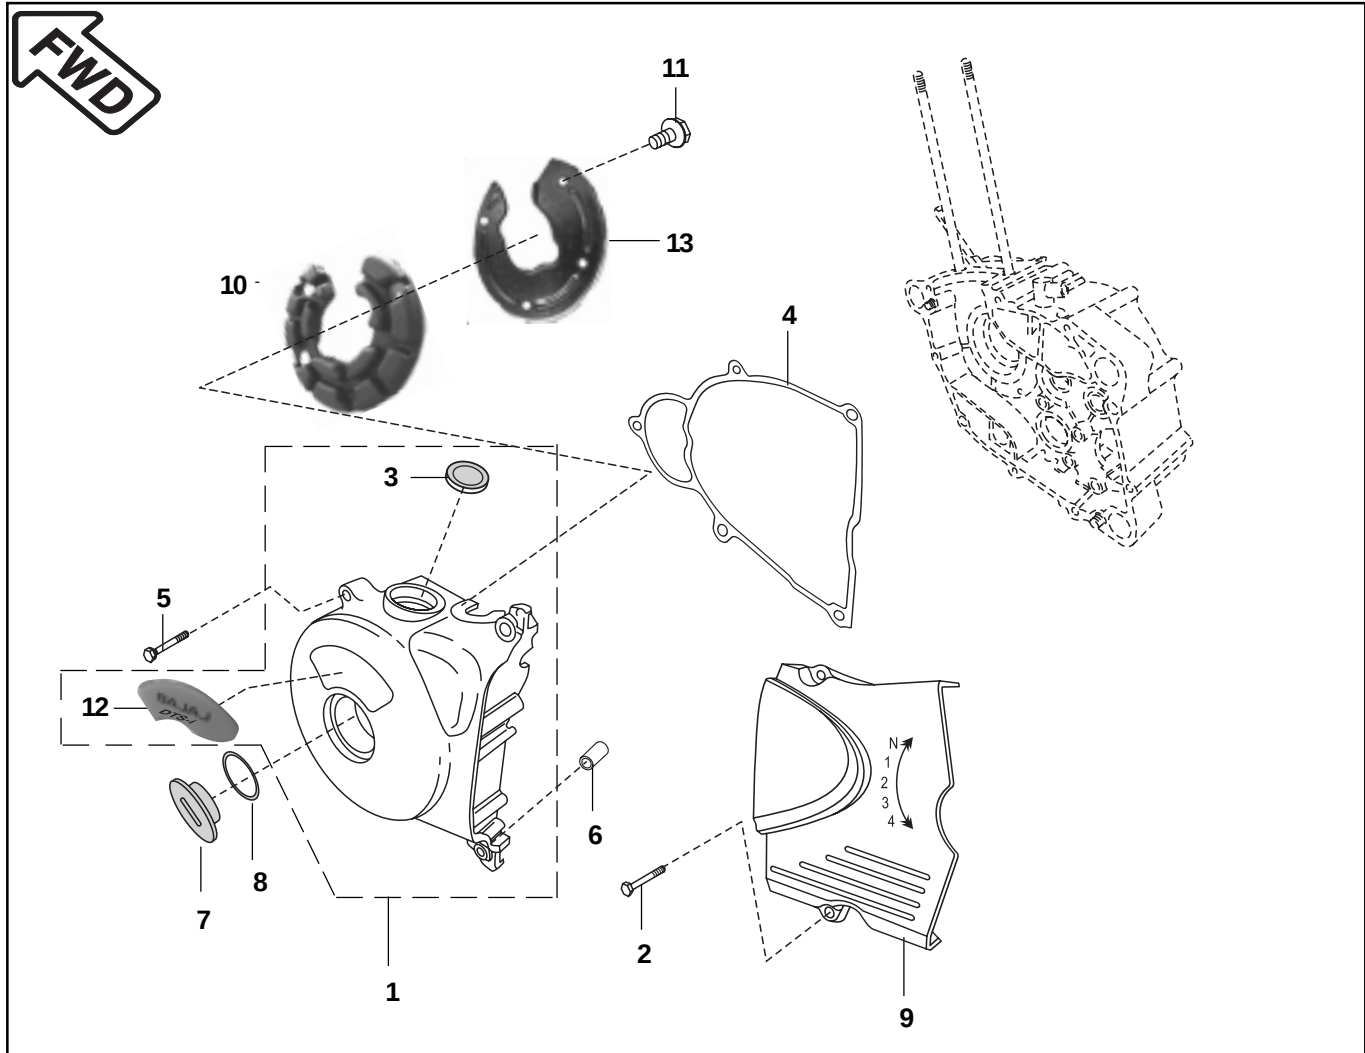


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1012 74	Cover Magneto with gauge & decal	1	1	Fixed on Cover magneto
2	39 1674 04	Bolt Hex.	3	3	
3	DG 1011 74	Gauge	1	1	
4	DS 1010 76	Gasket Magneto cover	1	1	
5	39 1075 04	Bolt	4	4	
6	39 0999 06	Pin Dowel	2	2	
7	DH 1011 57	Cap Crank Center	1	1	
8	39 1283 21	'O' Ring	1	1	
9	DS 1012 67	Cover LH Rear with Decal	1	1	
10	DS 1012 10	Damper Cover LH	1	1	
11	39 2208 04	Flanged Bolt	4	4	
12	DS 1012 53	'bajaj' Decal	1	1	
13	DH 1012 83	Plate Damper Cover LH	1	1	

K.S. = Kick Start
E.S. = Electric Start

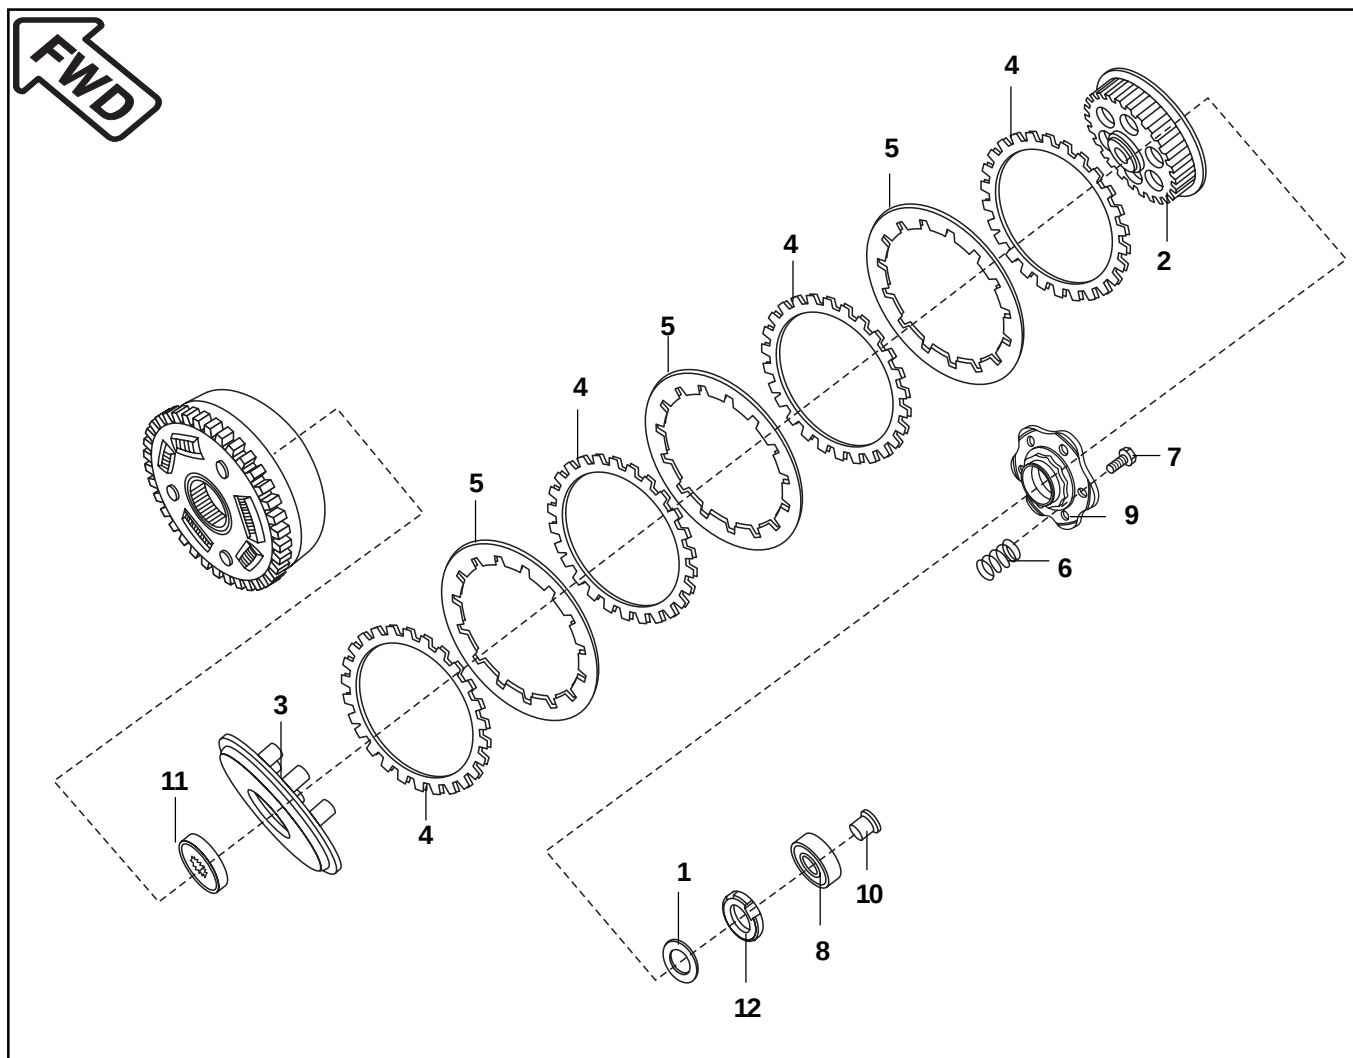


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	39 2200 11	Washer Primary Drive Gear	1	1	LH Thread
2	DH 1013 19	Clutch Center	1	1	
3	DH 1013 44	Plate Clutch pressure	1	1	
4	DH 1015 54	Disc Clutch friction Adler (E type)	4	4	
5	DH 1015 57	Plate Clutch	3	3	
6	DS 1011 16	Spring Clutch	6	6	
7	39 1553 04	Bolt	6	6	
8	39 1880 20	Bearing Clutch	1	1	
9	DH 1014 84	Holder Clutch	1	1	
10	DH 1014 85	Rod Clutch lifter	1	1	
11	DS 1011 05	Guide Plate Clutch Pressure	1	1	
12	DH 1015 20	Nut Primary drive lock	1	1	

K.S. = Kick Start
E.S. = Electric Start



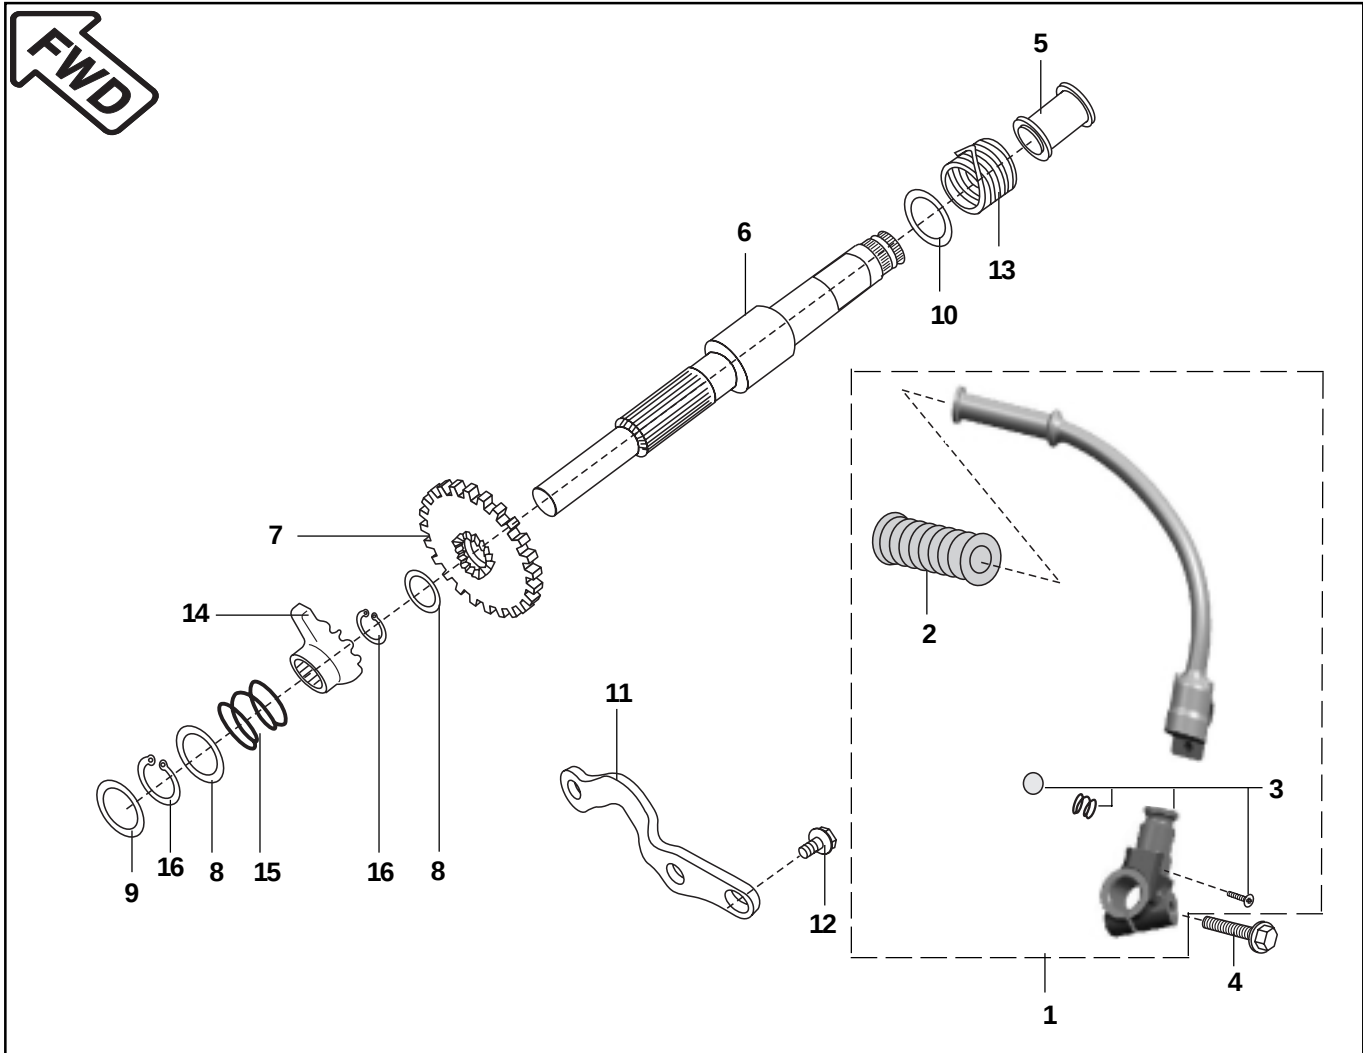


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1012 06	Lever Kick Starter complete	1	1	Ref.page No. 66
2	DD 1010 97	Damper	1	1	
3	36 DS10 07	Boss Kick Set	1	1	
4	DS 1012 09	Bolt Special	1	1	
5	DS 1010 58	Collar Spring	1	1	
6	DS 1010 57	Spindle Kick Starter Assly	1	1	
7	DS 1010 60	Pinion	1	1	
8	39 2276 11	Washer	2	2	
9	39 0993 11	Washer Thrust	1	1	
10	DS 1011 45	Plain Washer	1	1	
11	DS 1010 61	Guide Kick	1	1	
12	39 1672 04	Bolt Flanged	3	3	
13	DS 1010 59	Spring Kick Starter	1	1	
14	DS 1011 90	Ratchet	1	1	
15	DH 1011 21	Spring	1	1	
16	39 0738 17	Circlip	2	2	

K.S. = Kick Start
E.S. = Electric Start

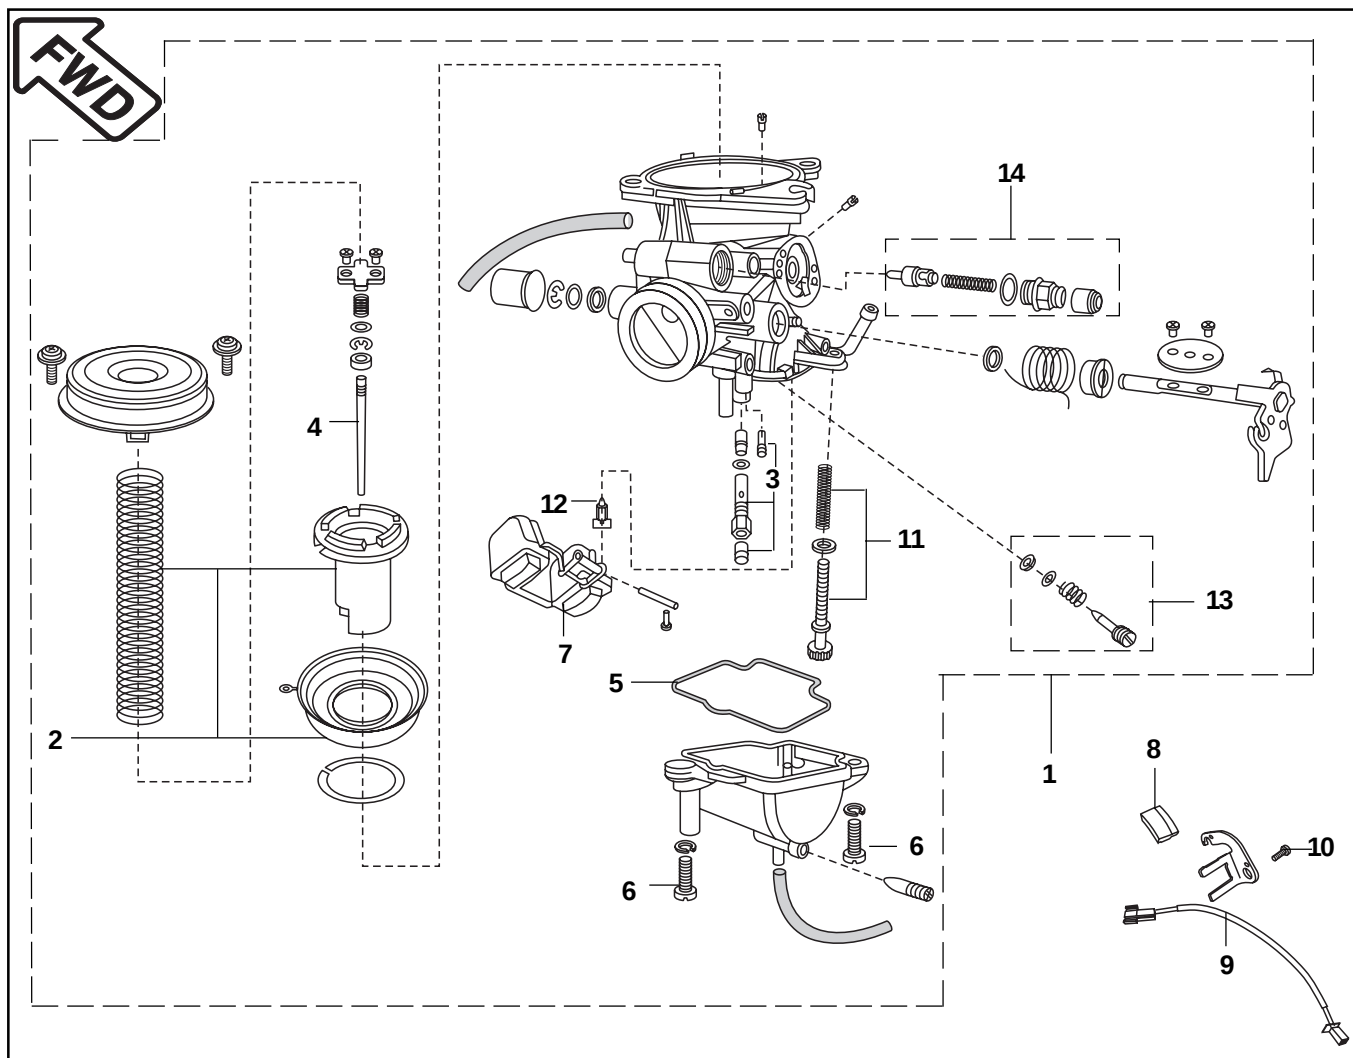


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1210 23	Carburettor Assly. (NCV-24)	1	1	Keihin Make
2	36 DS12 01	Vacuum Piston Kit for carburettor	1	1	Ref.page No. 66
3	36 DS12 02	Jet Holder Kit	1	1	Ref.page No. 66
4	DS 1210 60	Jet needle(JN)	1	1	
5	DS 1210 89	Packing	1	1	
6	DS 1210 90	Screw Pan	4	4	
7	DS 1210 80	Float Comp.	1	1	} TPS Assly. Parts
8	DH 1211 01	Magnet Assly.	1	1	
9	DH 1211 02	Reed Switch Assly.	1	1	
10	39 0899 01	Pan Head Screw	2	2	
11	36 DS12 03	Idling Screw Kit	1	1	Ref.page No. 66
12	DS 1210 76	Float Valve Comp.	1	1	
13	DS 1211 13	Set Adjuster(PS)	1	1	
14	DS 1211 15	Set Plunger assly.	1	1	

K.S. = Kick Start
E.S. = Electric Start

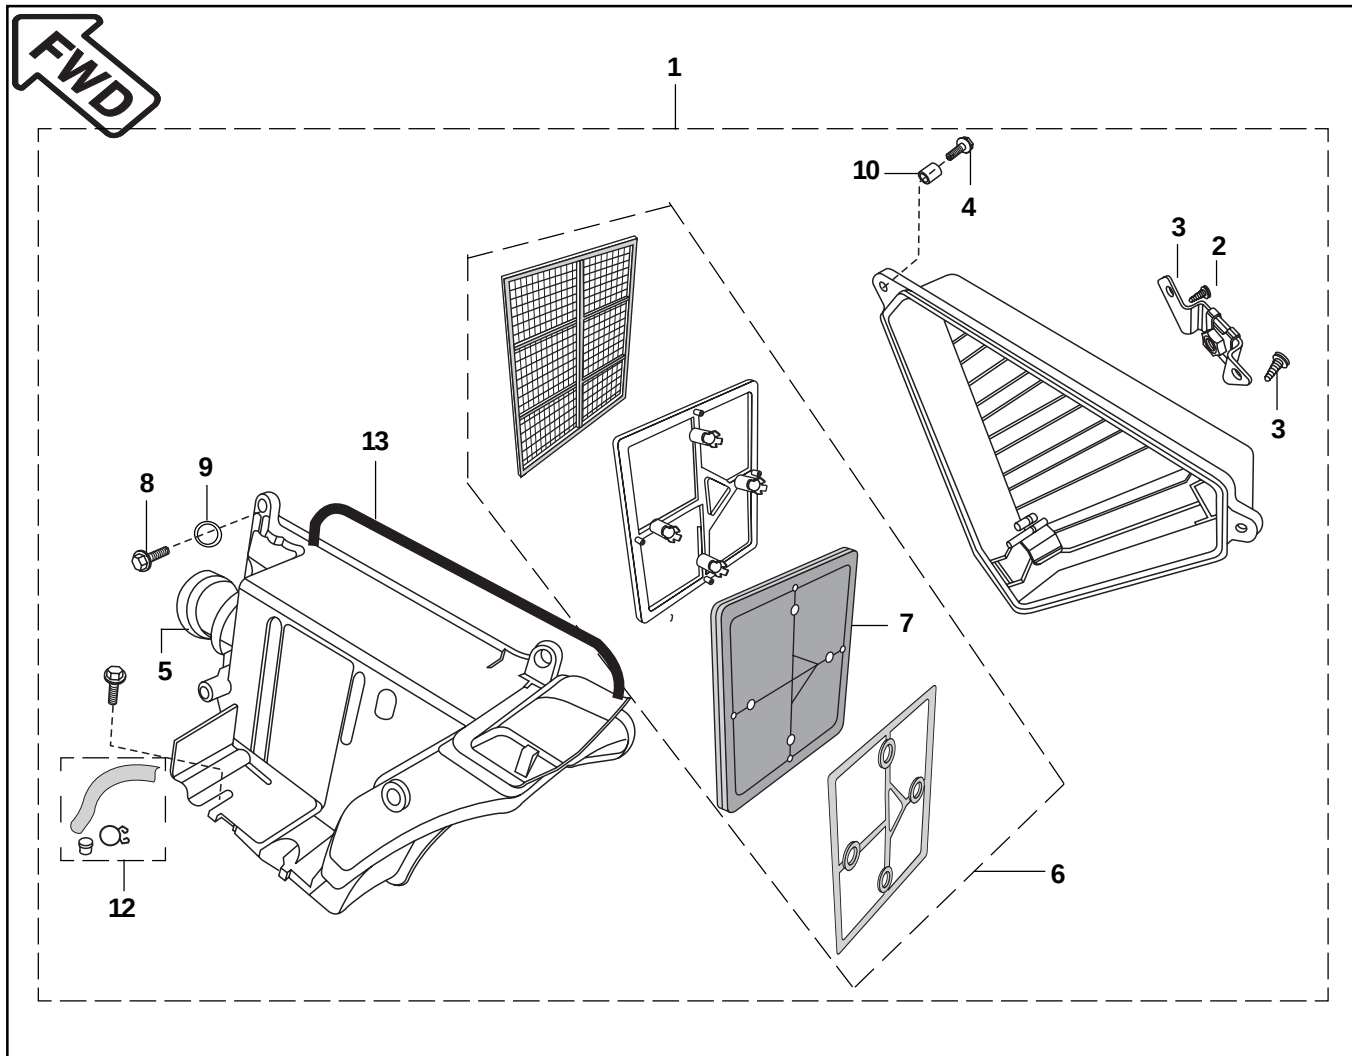


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1210 08	Air Cleaner comp	1	1	N.I. (Mounted on chassis LH side) Ref.page No. 66
2	DS 1610 69	Bracket Side Cover Mtg.	1	1	
3	39 1779 02	Self Tapping Screw	2	2	
4	39 1943 04	Flange Bolt	2	2	
5	DS 1210 14	Connecting Tube	1	1	
6	DS 1210 22	Cartridge Assly	1	1	
7	DS 1210 20	Element Air Filter	1	1	
8	39 0071 04	Hex. Bolt	3	3	
9	39 1765 11	Plain Washer	3	3	
10	31 1210 43	Collar	2	2	
11	39 1940 04	Flanged Bolt	2	2	
12	36 DS12 04	Hose Air Cleaner Kit	1	1	
13	DH 1210 26	O ring	1	1	

K.S. = Kick Start
E.S. = Electric Start

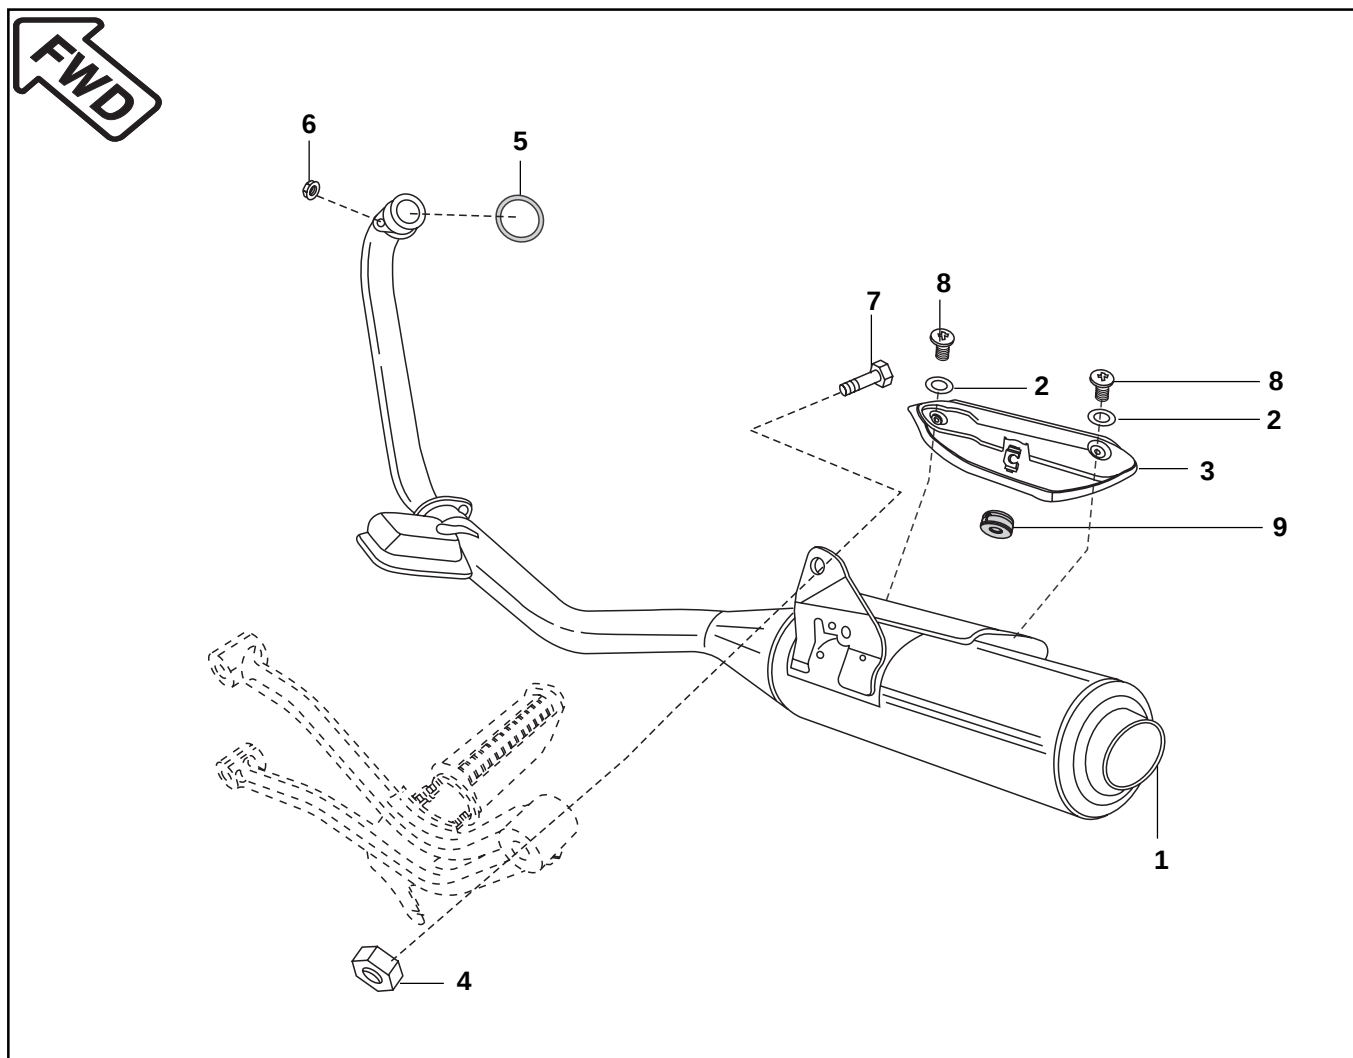


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1012 69	Silencer Assly without shield	1	1	
2	DH 1013 01	Seal Shield Muffler	2	2	
3	DH 1014 68	Shield Muffler	1	1	
4	DD 1610 71	'U' Nut	1	1	
5	DJ 1010 64	Gasket Exhaust	1	1	
6	39 1970 15	Flanged Nut	2	2	
7	39 2730 04	Hexagonal Bolt	1	1	
8	DH 1013 02	Truss Screw	2	2	
9	DH 1014 81	Grommet Shield	1	1	

K.S. = Kick Start
E.S. = Electric Start



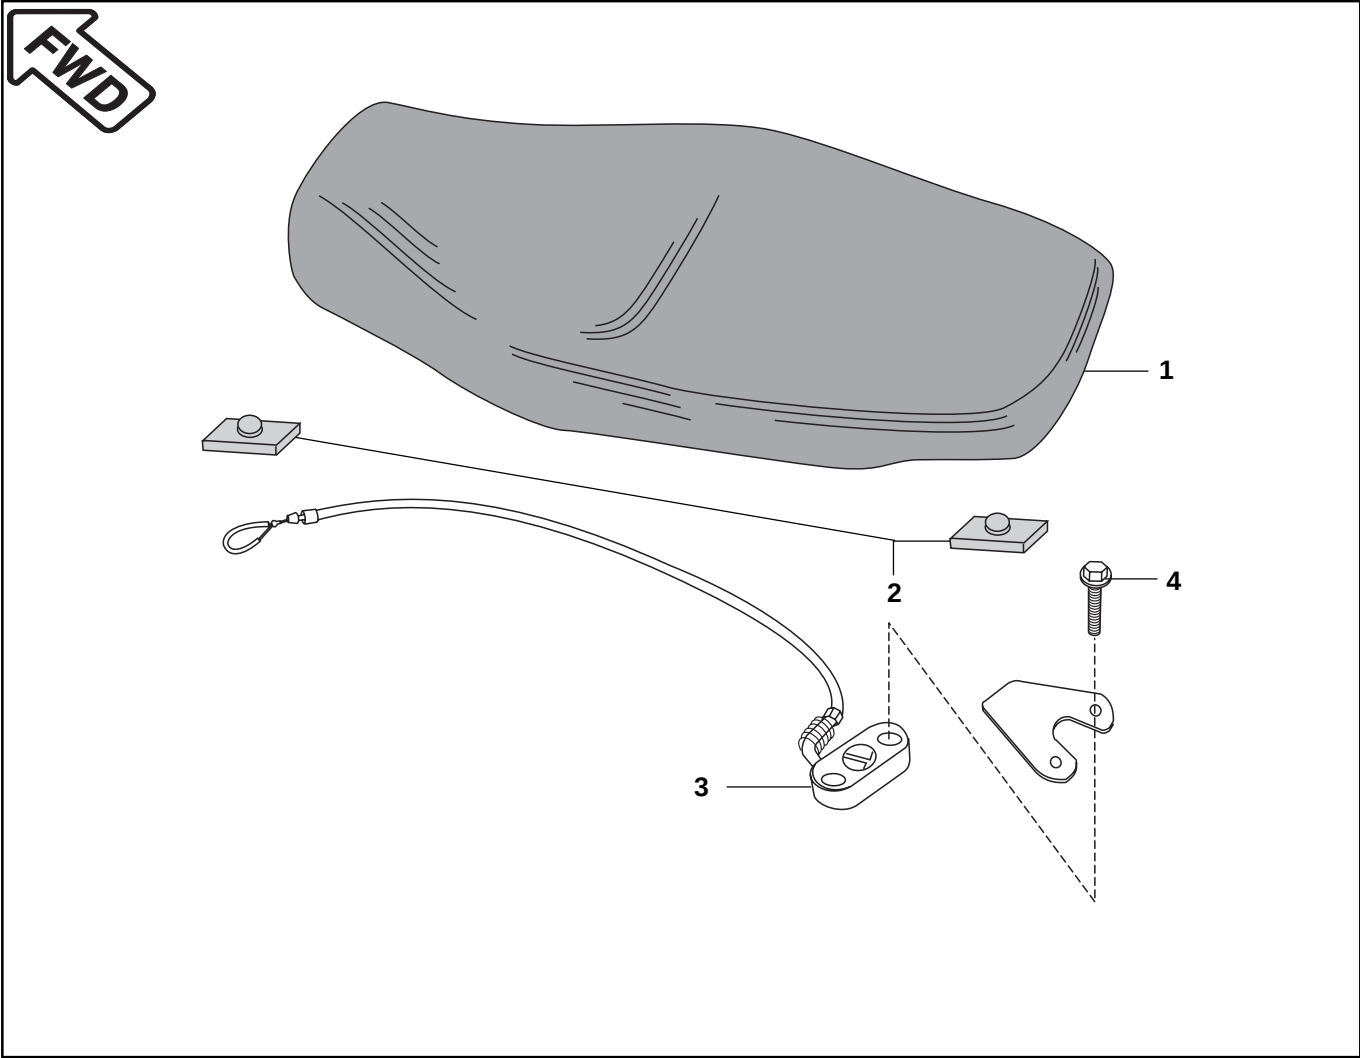


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 2110 01	Seat Assly comp	1	1	Ref.page No. 66
2	36 DS21 01	Seat Damper Kit	1	1	
3	DS 2110 06	Lock Assly seat	1	1	
4	39 1902 04	Flanged bolt	2	2	

K.S. = Kick Start
E.S. = Electric Start



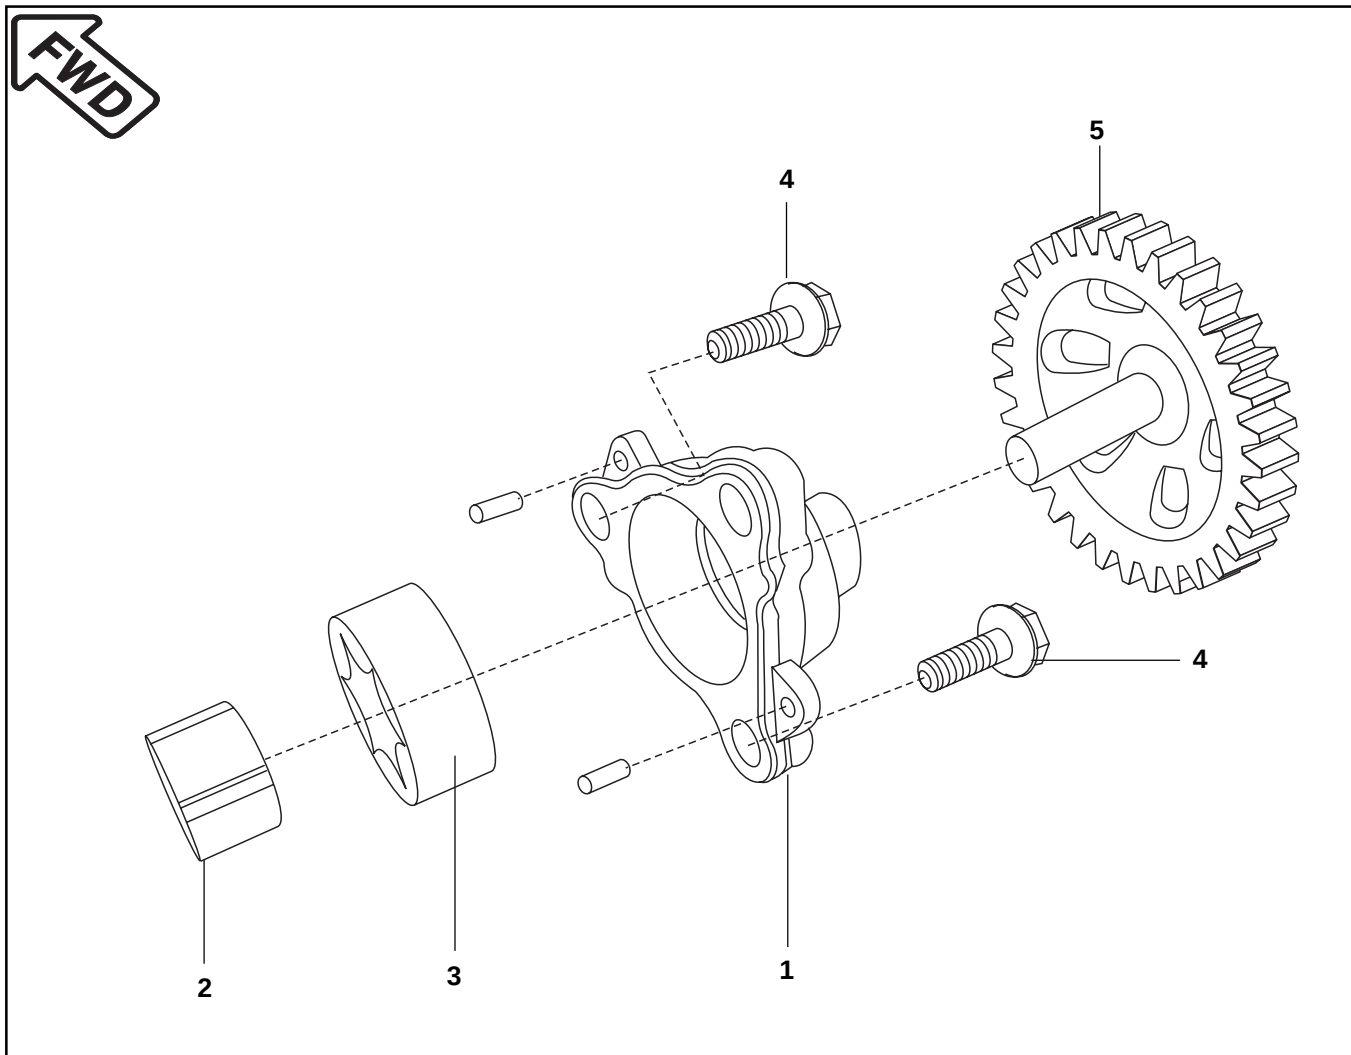


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1210 03	Oil Pump Body	1	1	
2	28 1210 07	Rotor Oil Pump inner	1	1	
3	28 1210 08	Rotor Oil Pump outer	1	1	
4	39 1673 04	Screw for Body	3	3	
5	DS 1210 02	Gear oil Pump Driven	1	1	

K.S. = Kick Start
E.S. = Electric Start



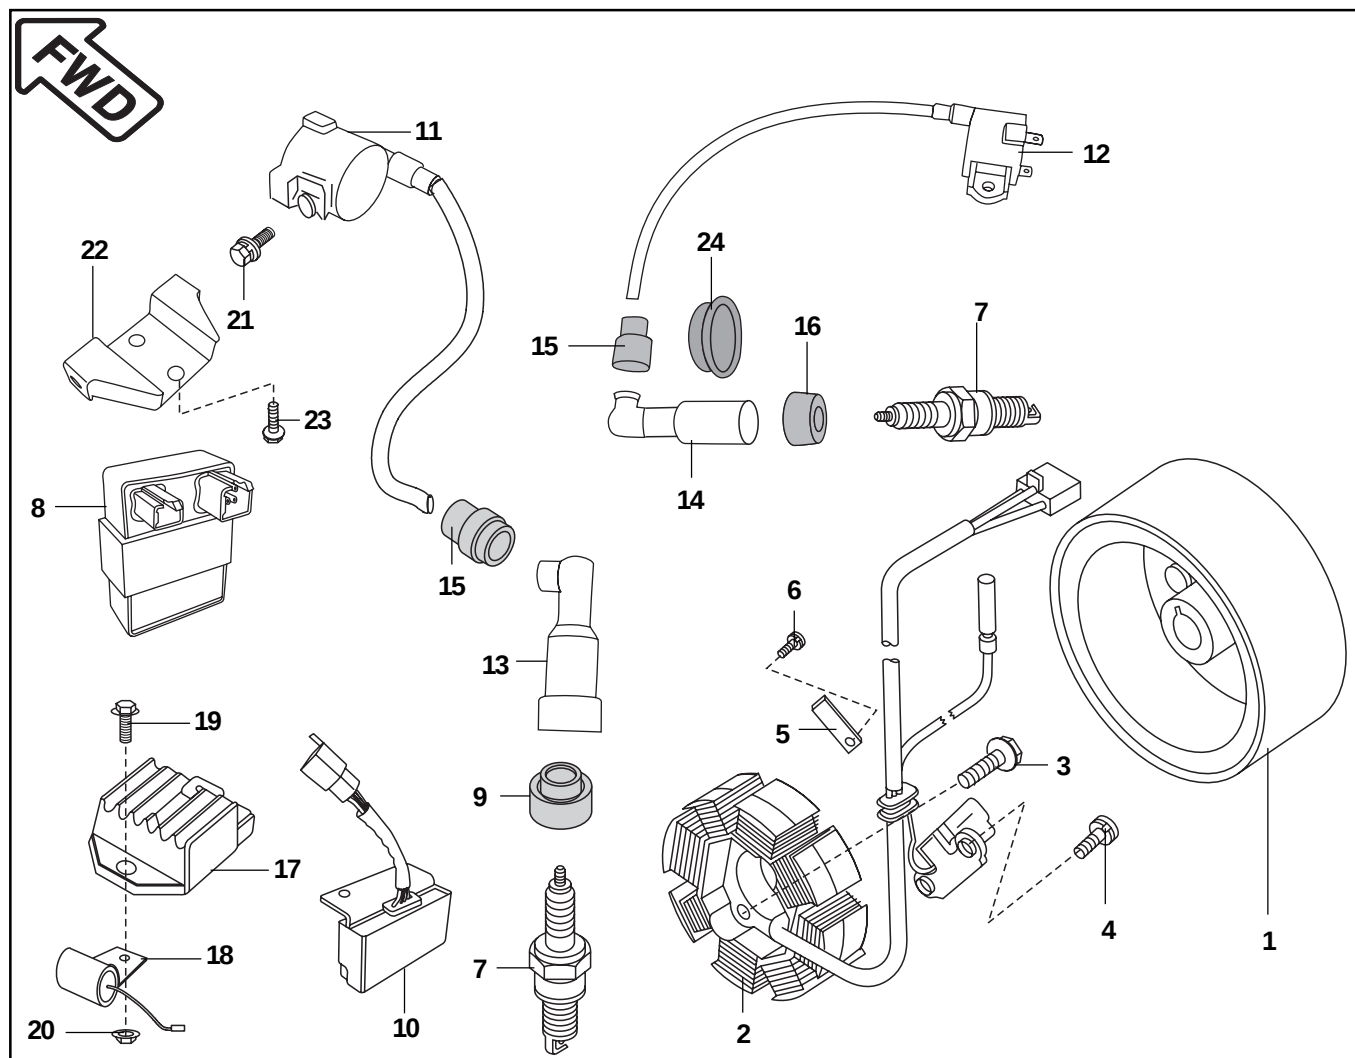


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1110 18	Rotor Assly.	--	1	With Round Head Lamp
	DS 1110 17	Rotor Assly.	1	--	
2	DS 1110 15	Stator Assly. comp	1	--	
	DS 1110 16	Stator Assly. comp	--	1	
3	39 1674 04	Hex. Bolt with Flange	2	2	
4	39 0761 01	Pan Head Screw	2	2	
5	DH 1011 99	Stopper plate (wiring harness)	1	1	
6	39 0746 01	Screw Pan head	1	1	
7	DG 1110 08	Spark plug(Champion RG4HC)	2	2	
8	DS 1110 03	C.D.I Assly	1	1	
9	DD 1110 11	Grommet Spark Plug	1	1	
10	DS 2010 03	AC/DC Regulator	--	1	
11	DS 1110 29	H.T. Coil LH with Grommet	1	1	
12	DS 1110 30	H.T. Coil RH with Grommet	1	1	
13	DD 1110 48	Cap Spark Plug	1	1	
14	DH 1110 15	Cap Spark Plug	1	1	
15	DD 1110 12	Grommet H.T. Cable	2	2	

K.S. = Kick Start
E.S. = Electric Start



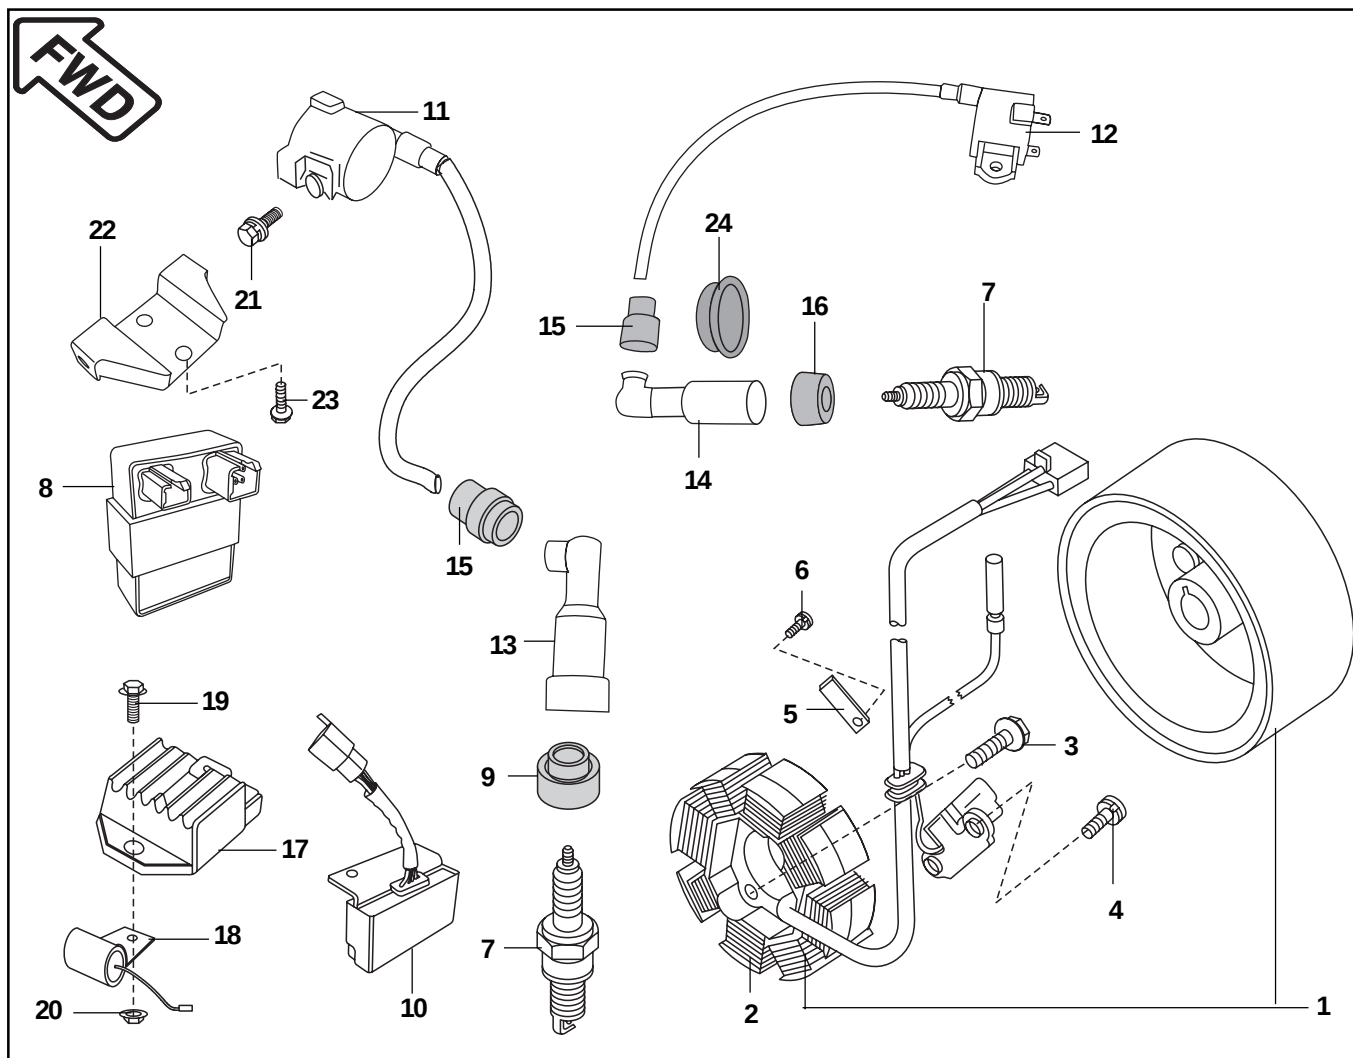


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	DH 1110 13	Grommet Spark Plug	1	1	
17	DH 2010 18	Regulator Voltage	1	--	
18	31 2010 82	Capacitor	1	--	
19	39 1943 04	Flange Bolt	--	1	
20	39 0798 15	Flange Nut	1	1	
21	39 1902 04	Flange Bolt	2	2	
22	DJ 1610 67	Bracket H.T.Coil	1	1	
23	39 1680 04	Flange Bolt	2	2	
24	DH 1110 16	Grommet Sleeve Spark Plug	1	1	

K.S. = Kick Start
E.S. = Electric Start

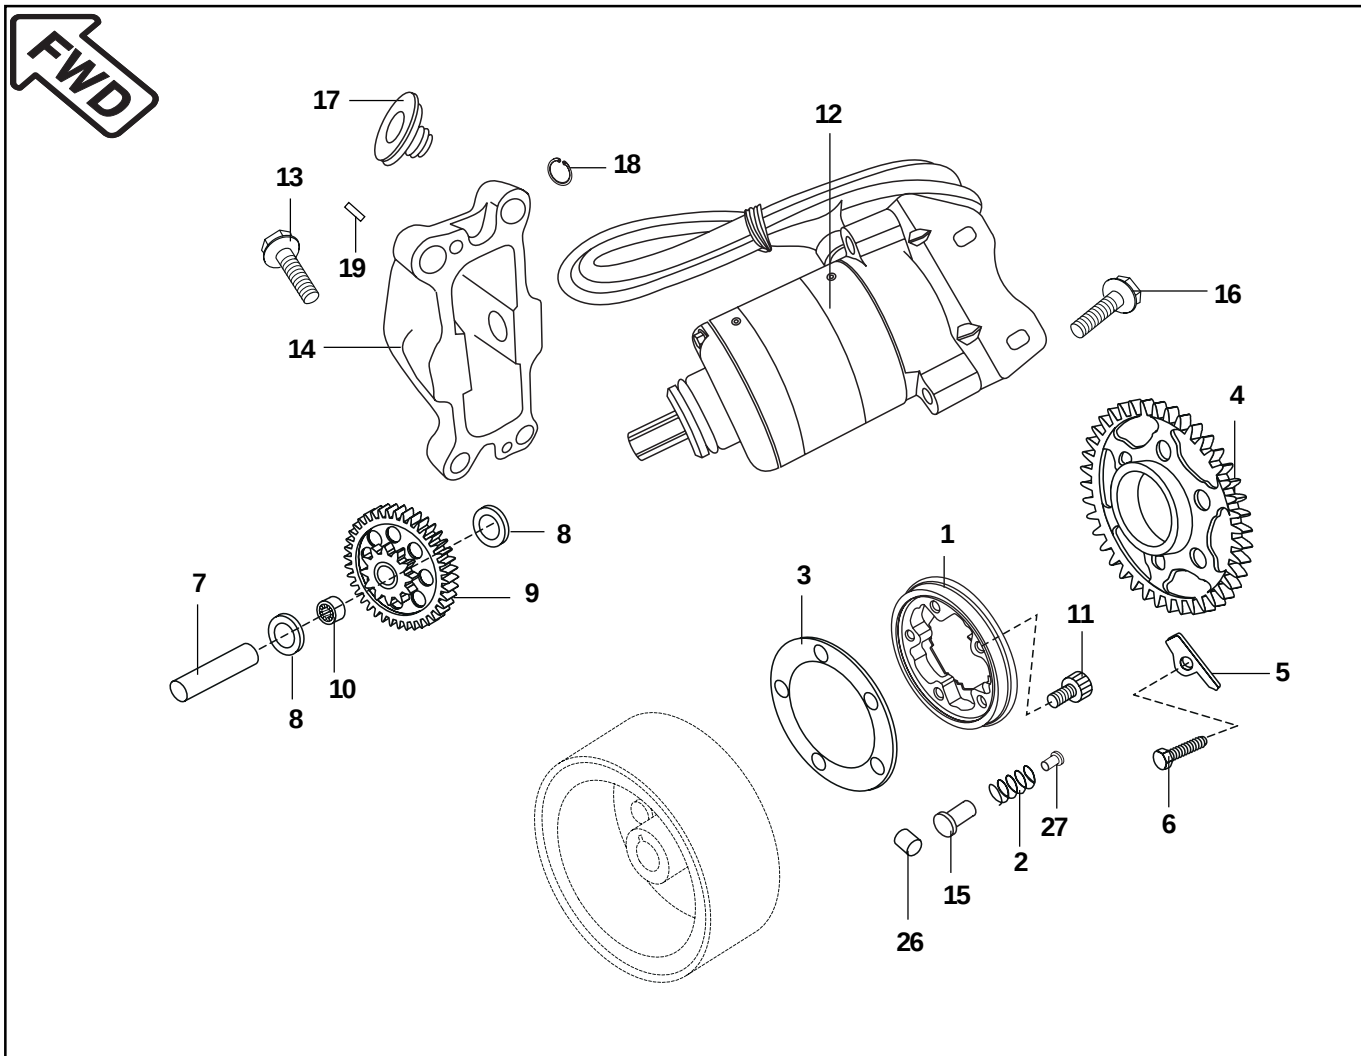


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DH 1015 34	Body comp.starter clutch	--	1	Stopper plate
2	DH 1011 64	Spring	--	5	
3	DH 1011 86	Plate roller clutch	--	1	
4	DH 1014 01	Gear starter clutch	--	1	
5	DH 1011 70	Plate starter clutch gear return	--	1	
6	39 1672 04	Bolt	--	1	For stopper plate
7	DS 1011 01	Shaft starter counter	--	1	
8	DS 1011 79	Special Washer starter counter	--	2	
9	DH 1014 72	Gear starter counter	--	1	
10	39 2152 20	Needle roller bearing	--	1	
11	39 2437 04	Bolt socket	--	3	
12	DS 1110 14	Motor assly. starter	--	1	
13	39 1074 04	Bolt	--	4	
14	DS 1011 02	Body Starter Counter	--	1	
15	DJ 1011 09	Bush for Spring Starter	--	5	

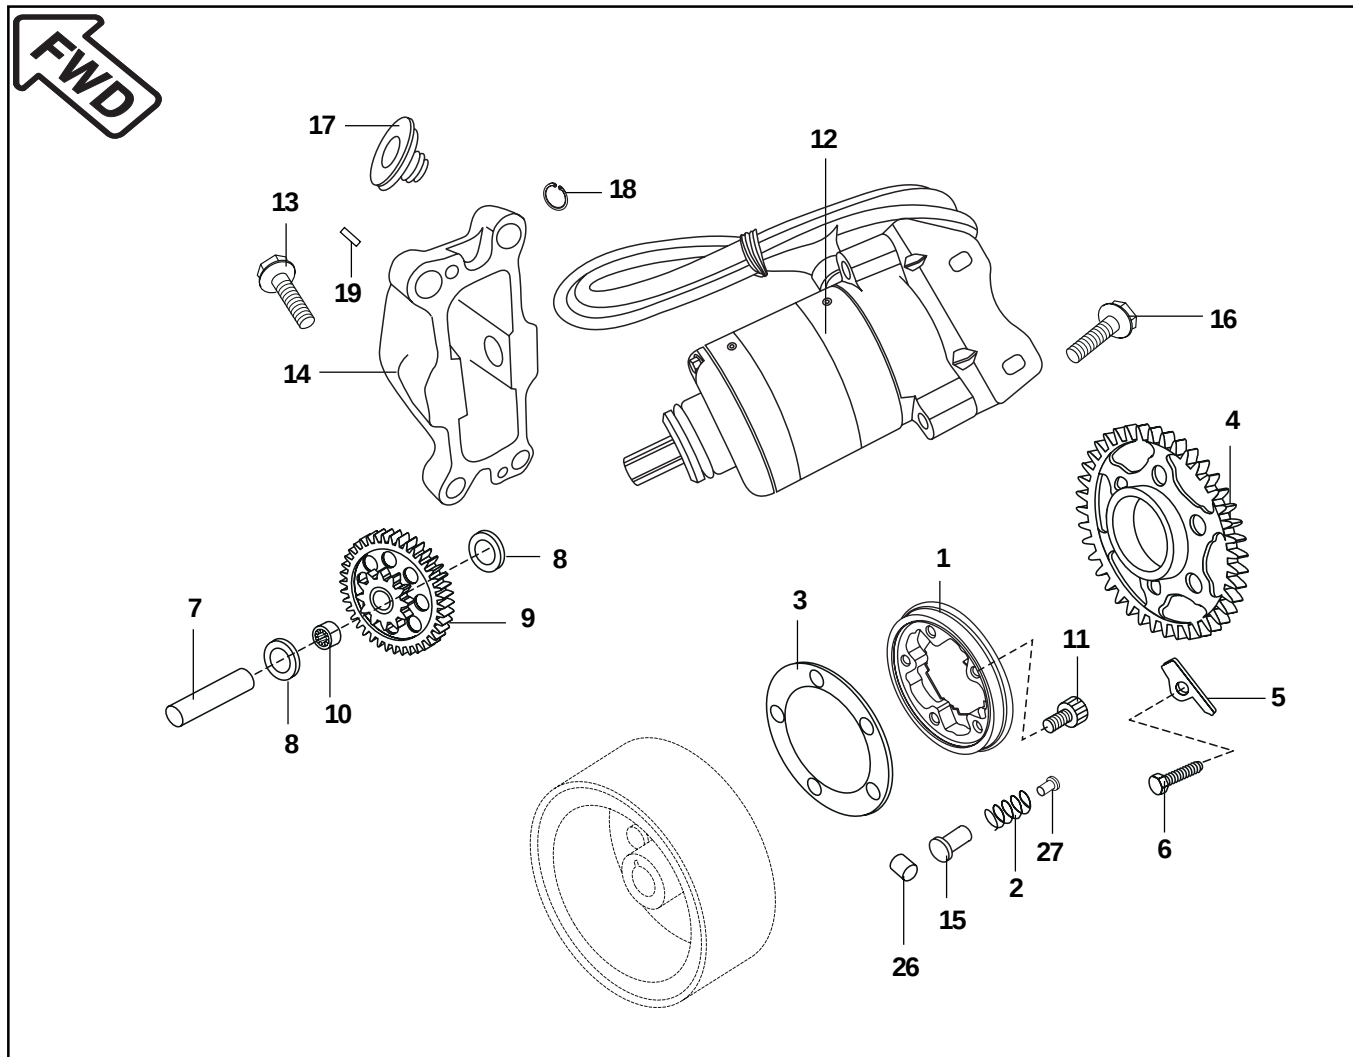


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	39 1062 04	Bolt	--	2	N.I. (Starter Motor Assly. Parts)
17	DS 1011 44	Cap	--	1	
18	39 2547 17	Circlip	--	1	
19	39 0999 06	Dowel Pin	--	2	
20	DS 1110 22	Drive End Bracket	--	1	
21	DS 1110 23	Read End Bracket	--	1	
22	DS 1110 25	Armature	--	1	
23	DS 1110 24	Sealing Ring	--	1	
24	DS 1110 26	Yoke Assembly	--	1	
25	DS 1110 27	Brush Assembly	--	1	
26	DH 1011 63	Roller	--	5	
27	DH 1015 33	Bush Spring Starter Clutch	--	5	

K.S. = Kick Start
E.S. = Electric Start

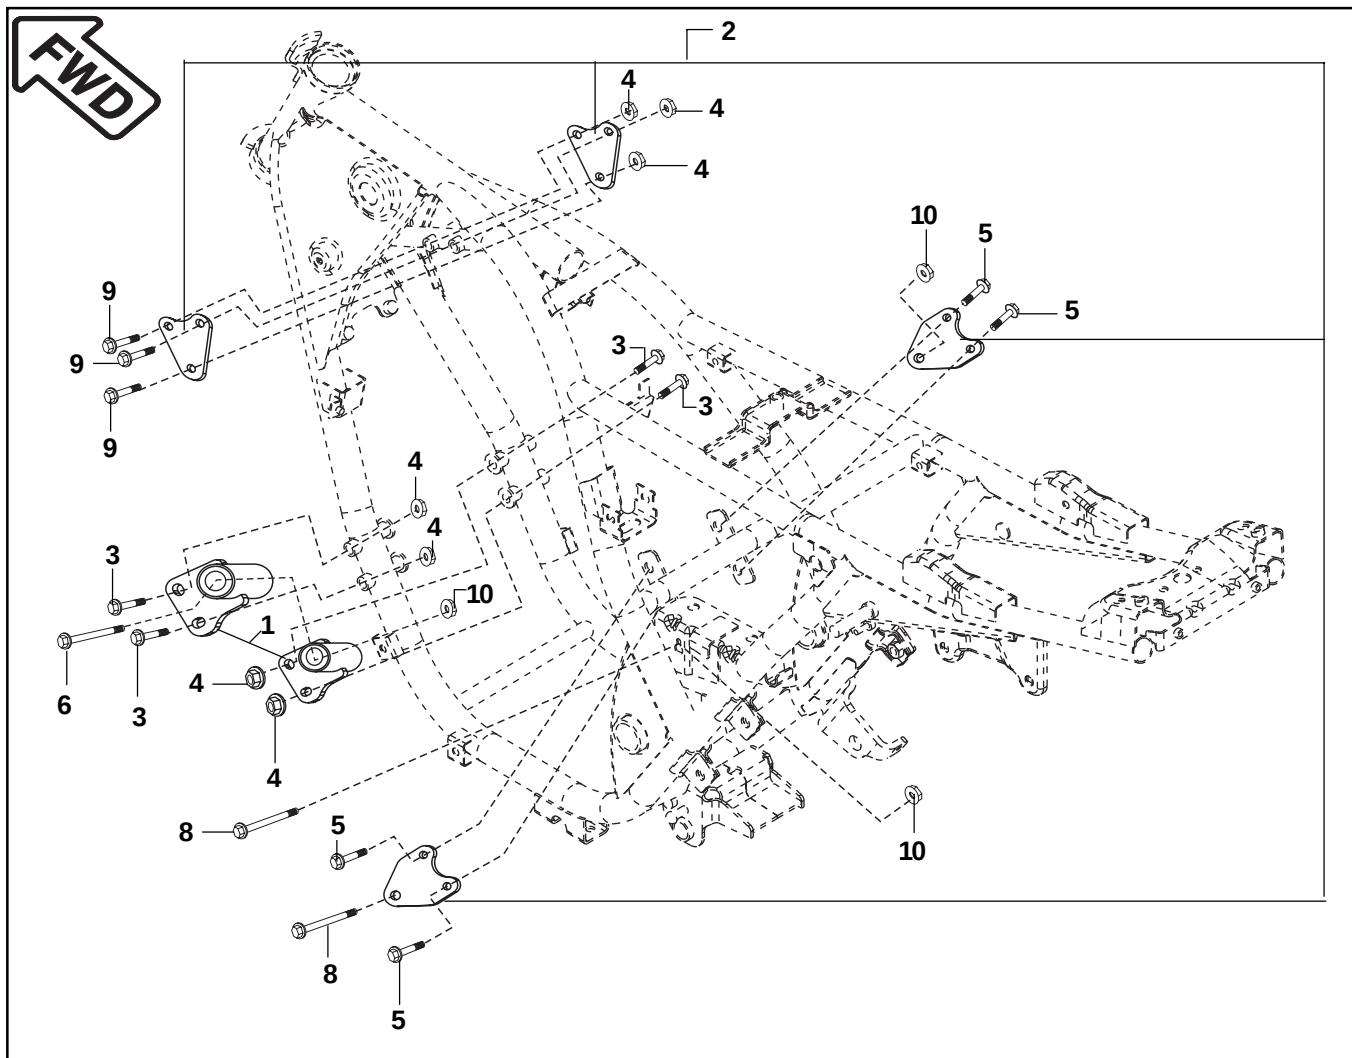


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	36 DS16 02	Engine Mounting Bracket Set	1	1	With silent Bush, Ref.page No.66 Ref.page No. 66
2	36 DS16 01	Engine Mounting Plate Set	1	1	
3	39 2312 04	Bolt Flanged	4	4	
4	39 1970 15	Nut Flanged	7	7	
5	39 1556 04	Bolt flanged	4	4	
6	39 2718 04	Bolt Flanged	1	1	
7	39 1225 15	Hex. Nut /Flanged	3	3	
8	39 2702 04	Bolt Flanged	2	2	
9	39 2455 04	Bolt Flanged	3	3	
10	39 2723 15	Flanged Nut	3	3	

K.S. = Kick Start
E.S. = Electric Start

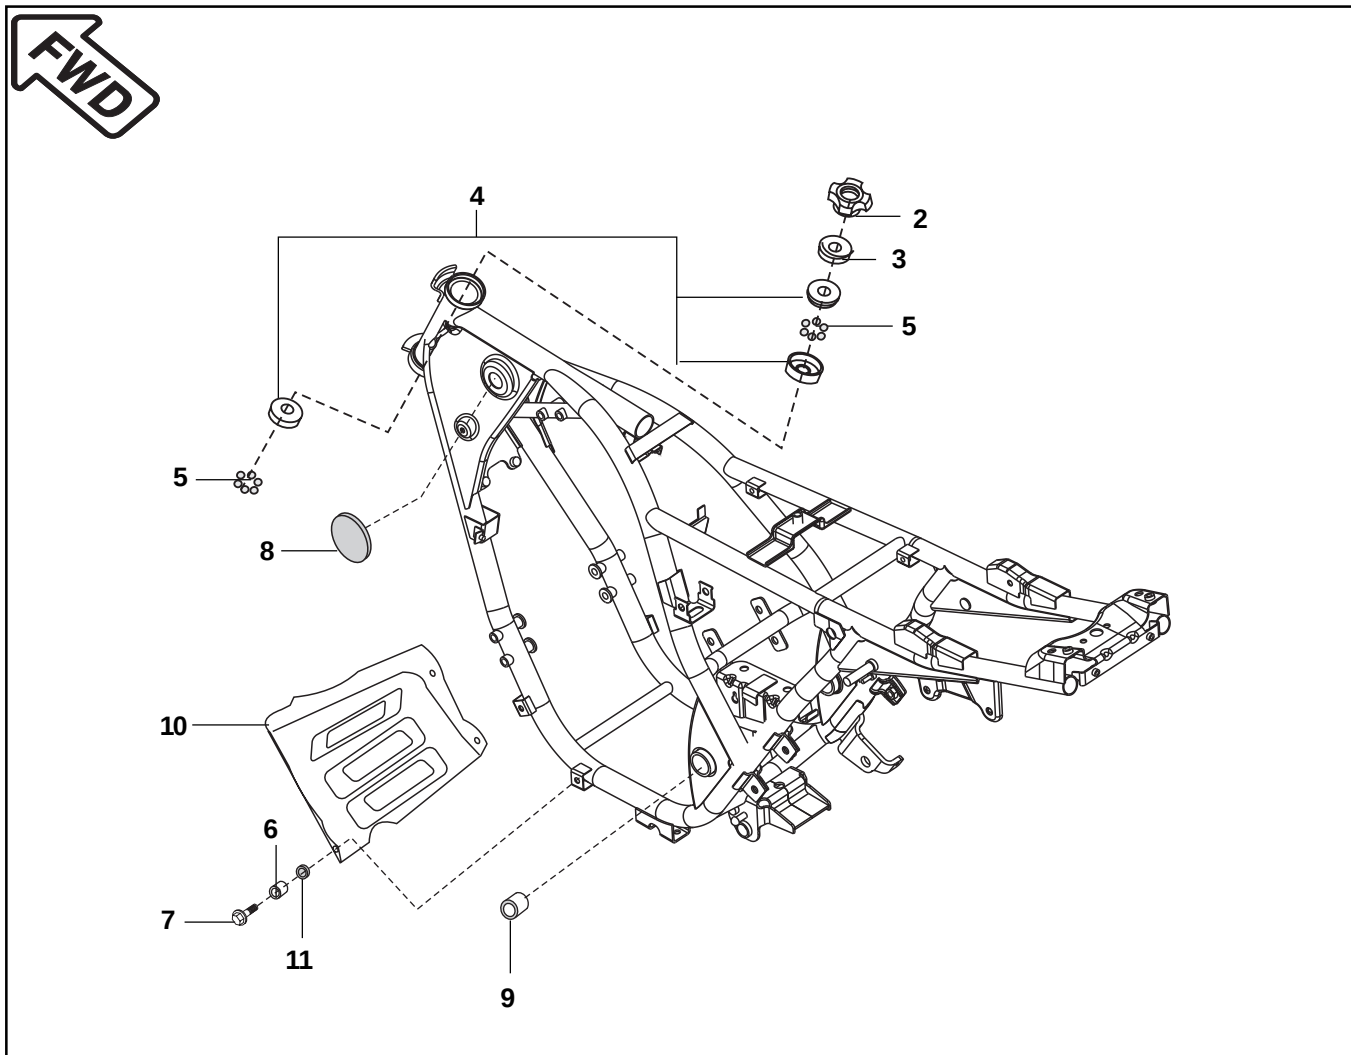


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1611 19	Frame Assly. comp.	1	1	Incl. Bush, Races & Cup rear
2	DS 1810 18	Nut Fork	1	1	
3	DH 1810 14	Cup - Steering	1	1	
4	36 DS18 02	Bearing cone Kit	1	1	Ref. Page No. 66
5	30 1810 06	Ball steel	46	46	
6	DH 1611 00	Spacer Main Step	--	4	
7	DG 1611 21	Screw	--	4	
8	DS 2010 27	Side Reflector	2	2	
9	DP 1710 06	Silent Bush	2	2	
10	DS 1611 42	Bash Plate	--	1	
11	DS 1611 02	Grommet Bash Plate	--	4	

K.S. = Kick Start
E.S. = Electric Start



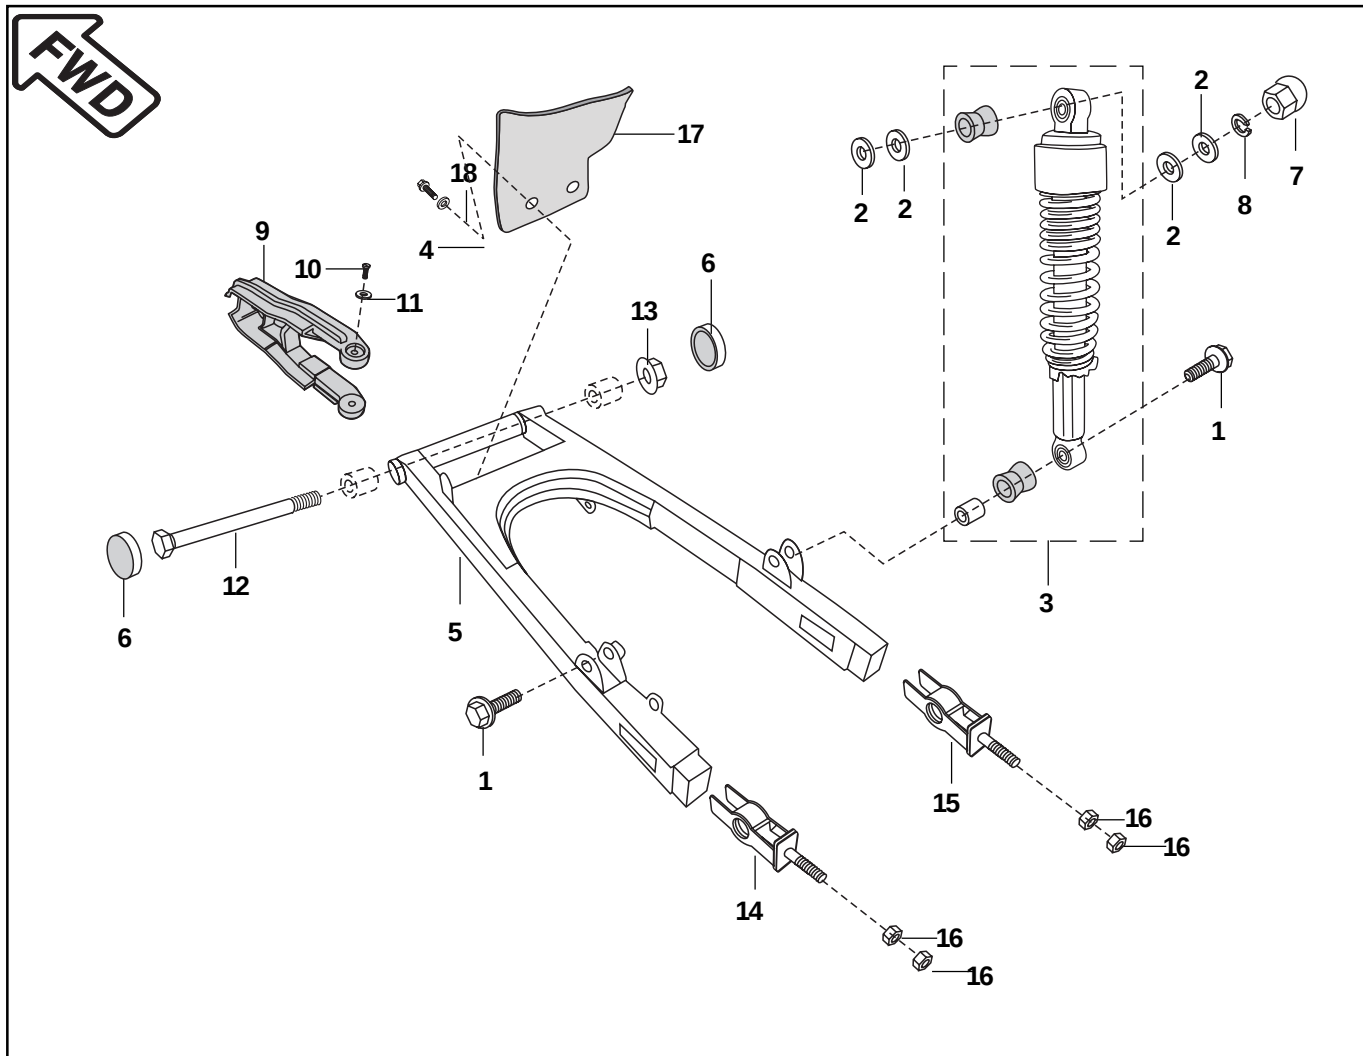


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DG 1710 38	Hex. Bolt/ Flange	2	2	
2	39 0714 11	Plain washer	8	8	
3	DS 1710 16	Rear Shock Absorber	2	2	
4	39 0258 11	Plain Washer	2	2	
5	DS 1710 02	Swing arm assly.	1	1	
6	DS 1710 15	Cap Swing Arm	2	2	
7	39 0712 15	Domed Cap Nut	2	2	
8	39 0737 12	Spring Washer	2	2	
9	DS 1710 07	Chain slider	1	1	
10	39 0553 02	Screw	2	2	
11	39 0454 11	Plain washer	2	2	
12	DS 1710 13	Shaft swing arm	1	1	
13	39 1358 15	Flanged Nut	1	1	
14	DJ 1510 36	Adjuster chain LH	1	1	
15	DJ 1510 37	Adjuster chain RH	1	1	
16	39 0292 15	Hexagon nut	4	4	
17	DS 1710 14	Mud Flap	1	1	
18	39 1773 04	Flange Bolt	2	2	

K.S. = Kick Start
E.S. = Electric Start

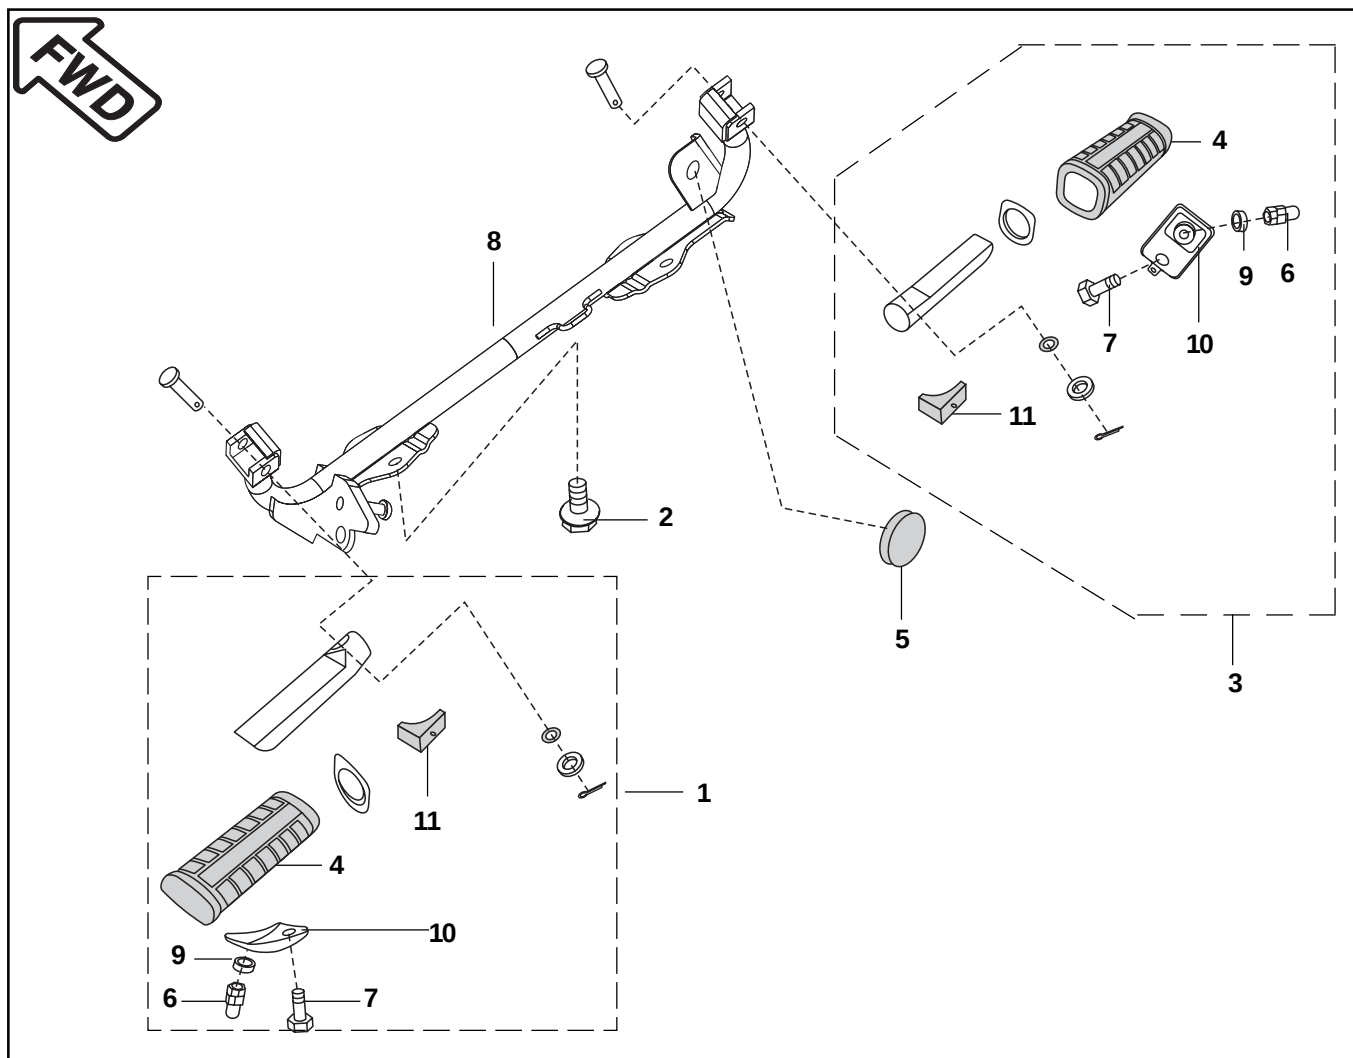


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DJ 1611 26	Assly. Comp.Main step LH	1	1	For Kick stopper
2	39 1940 04	Flange bolt	4	4	
3	DJ 1611 27	Main step RH assly. comp.	1	1	
4	DH 1610 53	Rubber Main Step	2	2	
5	DG 1612 24	Damper	1	1	
6	39 1282 15	Domed Cap nut	2	2	
7	39 0897 04	Bolt	2	2	
8	DS 1611 17	Stay Main Step	1	1	
9	DH 1611 00	Spacer Main Step	2	2	
10	DH 1610 56	Plate Comp. Lower Mounting	2	2	
11	DJ 1610 90	Damper Footrest	2	2	

K.S. = Kick Start
E.S. = Electric Start

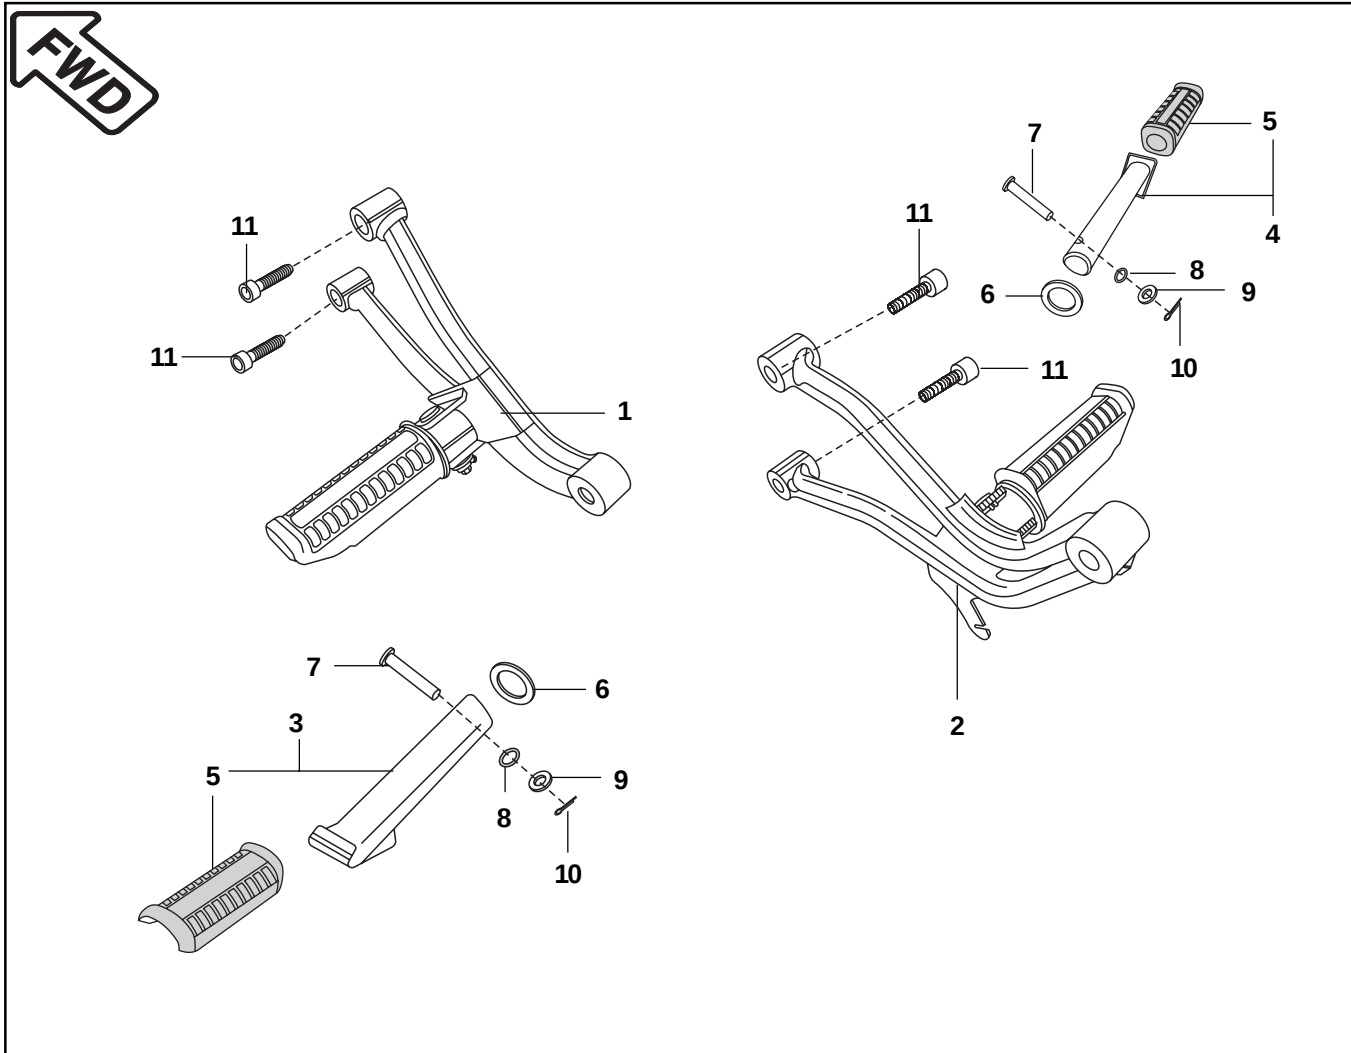


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1610 85	Holder LH step	1	1	
2	DS 1610 86	Holder RH step	1	1	
3	DJ 1611 28	Pillion step assly. comp. LH	1	1	
4	DJ 1611 29	Pillion step assly. comp. RH	1	1	
5	DJ 1611 22	Rubber pillion step	2	2	
6	DJ 1611 86	Plate side pillion step	2	2	
7	DD 1613 81	Pin pillion step	2	2	
8	30 1410 31	'O' ring	2	2	
9	39 1040 11	Plain washer	2	2	
10	39 0784 08	Split pin	2	2	
11	39 2722 04	Soc.Head Bolt	4	4	

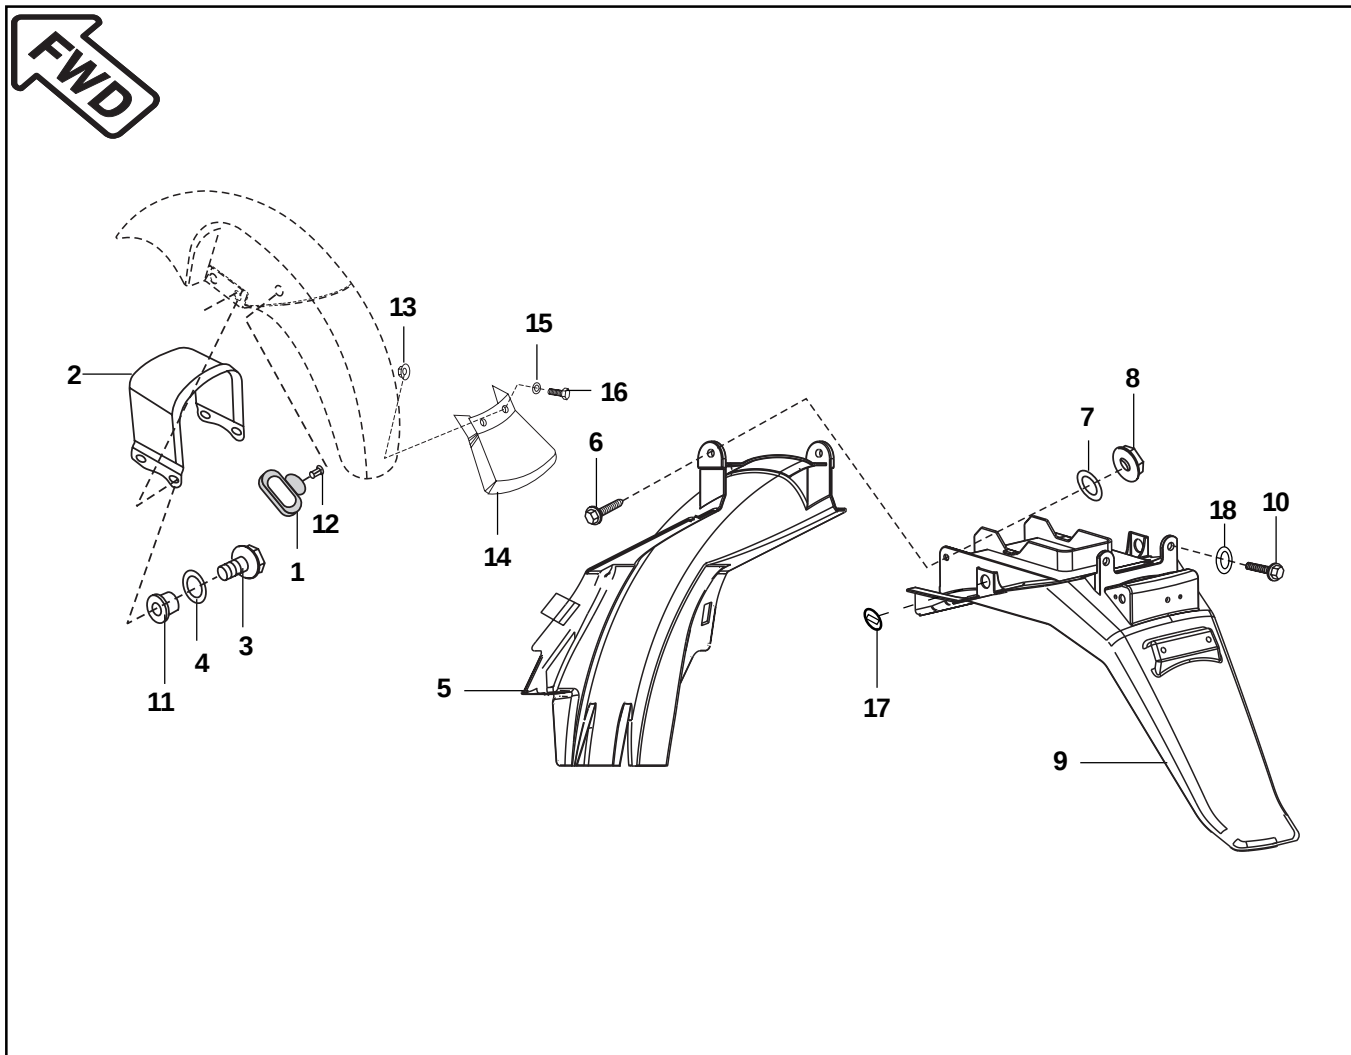


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1611 25	Cable Guide	1	1	Fender front mtg.
2	DS 1610 92	Brace fender	1	1	
3	39 2310 04	Flange bolt	4	4	
4	39 1507 11	Plain Washer	4	4	
5	DS 1610 61	Fender rear front	1	1	
6	39 2701 04	Flange bolt	2	2	
7	39 0211 11	Plain washer	2	2	
8	39 0798 15	Flange nut	2	2	
9	DS 1610 62	Fender rear	1	1	
10	39 1943 04	Flange bolt	2	2	
11	DS 1611 08	Sleeve Front Fender	4	4	
12	DJ 1610 69	Nail for Cable Guide	1	1	
13	39 0326 15	Nyloc Nut	3	3	
14	DS 1611 41	Flap Front fender	1	1	
15	39 0242 11	Plain washer	3	3	
16	39 2420 01	Screw Pan head	3	3	
17	DH 1611 58	Grommet Side Cover	2	2	
18	39 0211 11	Plain Washer	2	2	

K.S. = Kick Start
E.S. = Electric Start



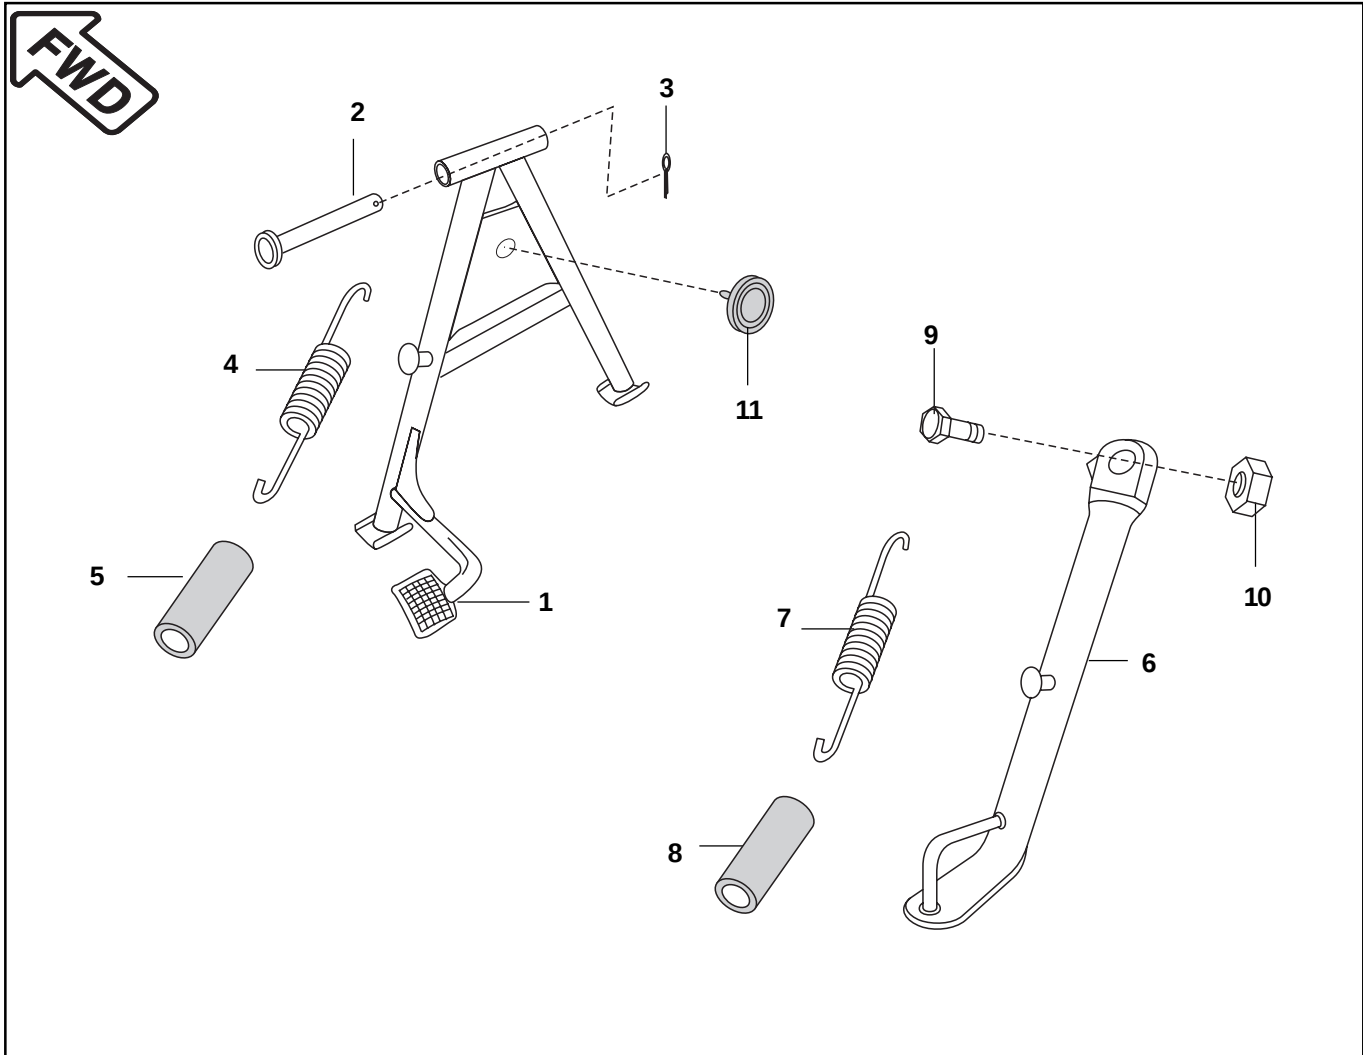


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1611 13	Center Stand	1	1	
2	DS 1611 12	Shaft stand	1	1	
3	39 0797 08	Pin cotter	1	1	
4	DH 1611 21	Spring main stand	1	1	
5	DH 1611 45	Cover spring main stand	1	1	
6	DS 1610 77	Stand side	1	1	
7	DH 1610 66	Spring side stand	1	1	
8	DH 1611 46	Cover spring side stand	1	1	
9	DF 1611 02	Bolt	1	1	
10	39 0422 15	Nut	1	1	
11	DG 1611 24	Damper Main Stand	1	1	

K.S. = Kick Start
E.S. = Electric Start

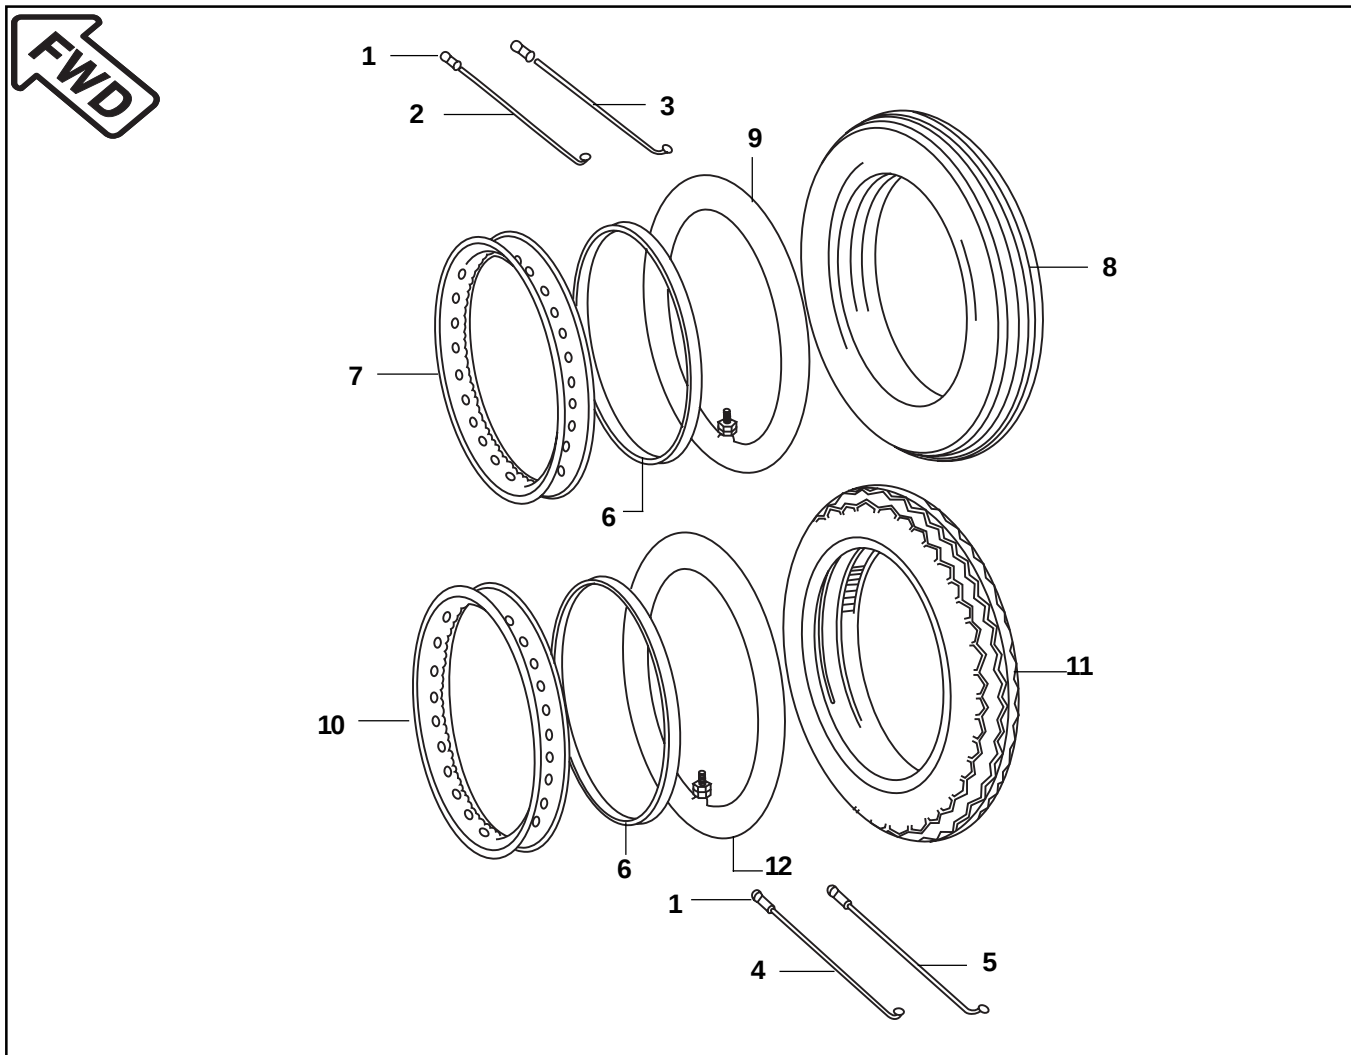


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	16 1510 66	Nipple spoke	72	72	
2	DS 1510 04	Spoke inner front	18	18	
3	DS 1510 05	Spoke outer front	18	18	
4	DS 1510 09	Spoke inner rear	18	18	
5	DS 1510 10	Spoke outer rear	18	18	
6	DG 1510 22	Band rim	2	2	} Proprietary items not to be serviced
7	DS 1510 03	Wheel rim front	1	1	
8	DS 1510 48	Tyre front	1	1	
9	DS 1510 49	Tube front	1	1	
10	DS 1510 46	Wheel rim rear	1	1	
11	DS 1510 52	Tyre rear	1	1	} Proprietary items Not to be serviced
12	DS 1510 53	Tube rear	1	1	

K.S. = Kick Start
E.S. = Electric Start

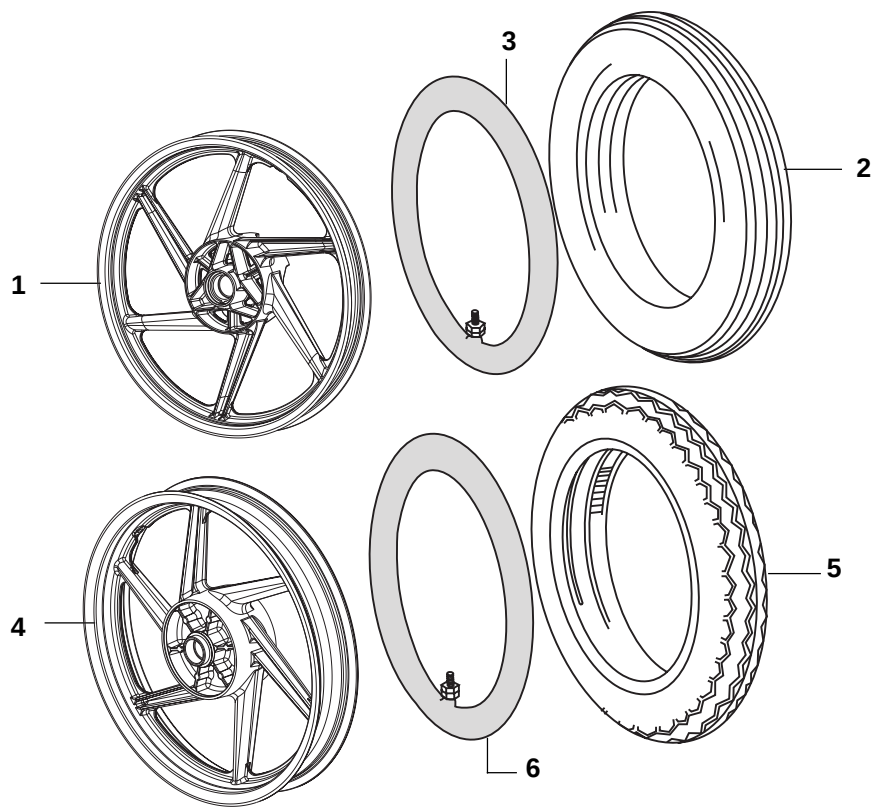


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DJ 1510 54	Wheel rim front (16 x 17 DC)	--	1	} Proprietary items Not to service
2	DS 1510 48	Tyre front	--	1	
3	DS 1510 49	Tube front	--	1	
4	DS 1510 56	Wheel rim rear	--	1	} Proprietary items Not to service
5	DS 1510 31	Tyre rear	--	1	
6	DS 1510 29	Tube rear	--	1	



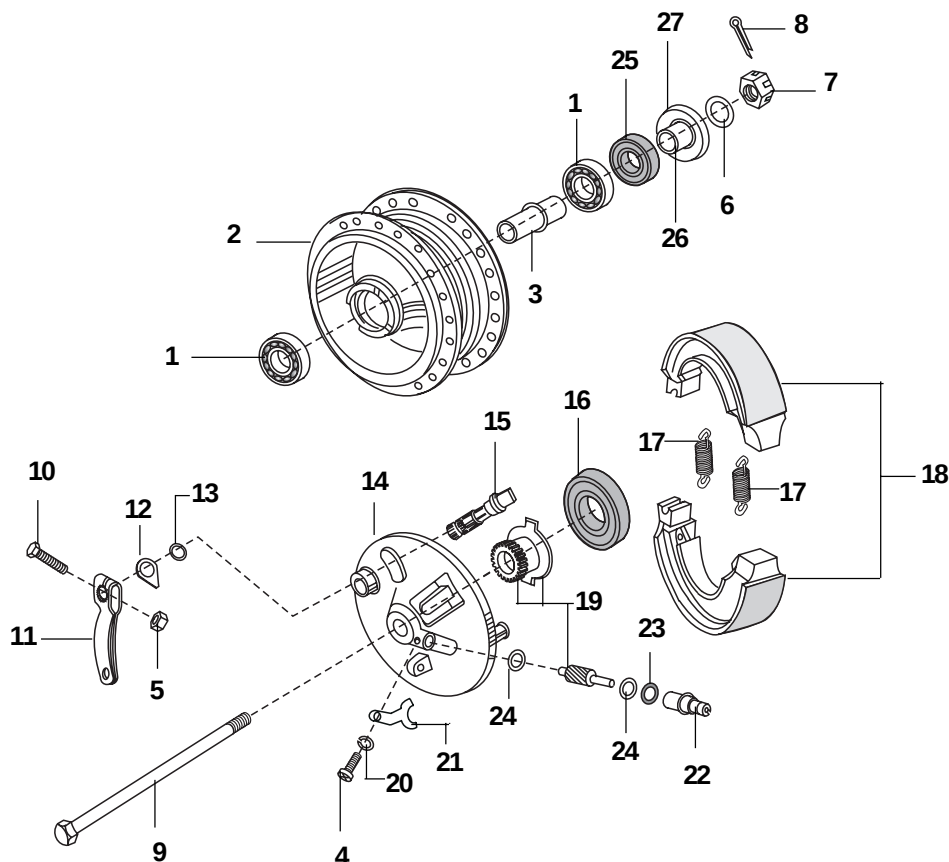


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	39 2688 20	Bearing Ball	2	2	
2	DH 1510 28	Drum front	1	1	
3	30 1510 32	Collar Bearing	1	1	
4	39 0840 01	Screw pan cross	1	1	
5	39 0798 15	Nut	1	1	
6	39 0781 11	Plain washer	1	1	
7	39 0786 15	Nut castle	1	1	
8	39 0787 08	Pin cotter	1	1	
9	DJ 1510 41	Axle	1	1	
10	39 0775 04	Bolt	1	1	
11	DD 1510 08	Lever brake cam	1	1	
12	DD 1510 09	Indicator	1	1	
13	30 1510 38	Ring 'O'	1	1	
14	DS 1510 40	Panel front brake	1	1	
15	30 1510 04	Cam brake	1	1	

K.S. = Kick Start
E.S. = Electric Start



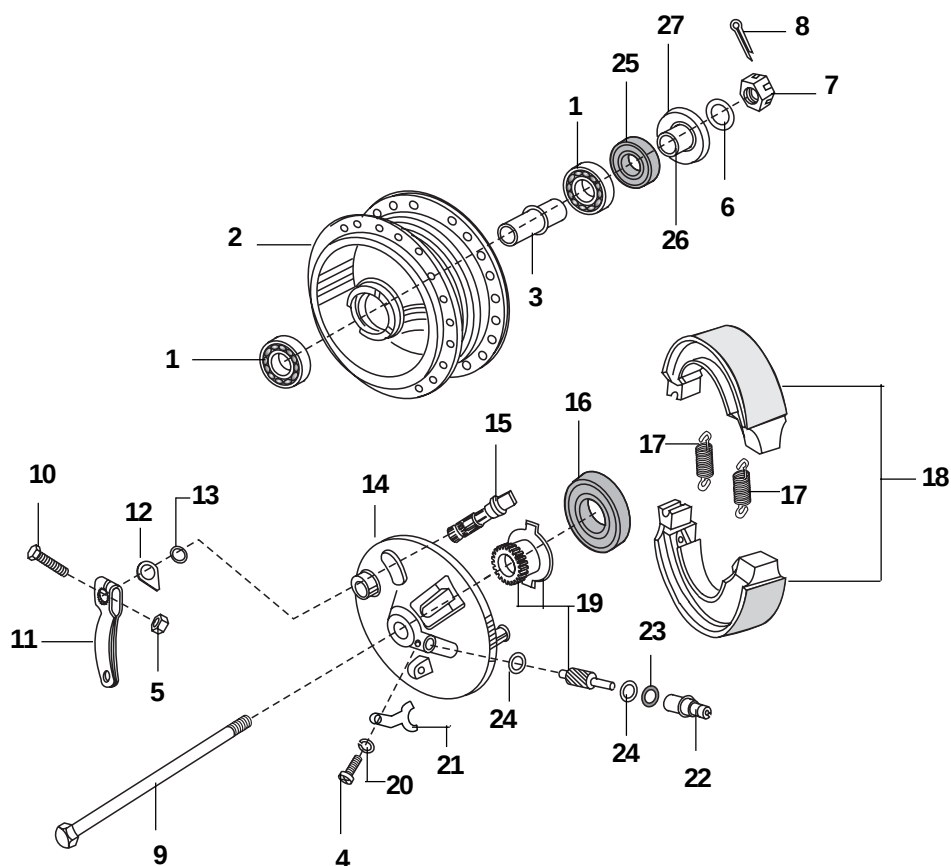


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	30 1510 35	Oil seal	1	1	Ref. Page No. 66
17	30 1510 69	Spring	2	2	
18	30 1511 05	Shoe brake	1	1	
19	36 DS15 02	Speedometer gear Kit	1	1	
20	39 0900 12	Spring washer	1	1	
21	30 1511 18	Stopper for bushing	1	1	
22	30 1511 19	Bushing	1	1	
23	39 1013 21	Ring 'O'	1	1	
24	30 1510 42	Washer 'A'	2	2	
25	30 1510 33	Oil Seal	1	1	
26	DS 1510 42	Spacer	1	1	
27	DS 1510 56	Dusct Seal	1	1	



: FRONT WHEEL DIRECTION

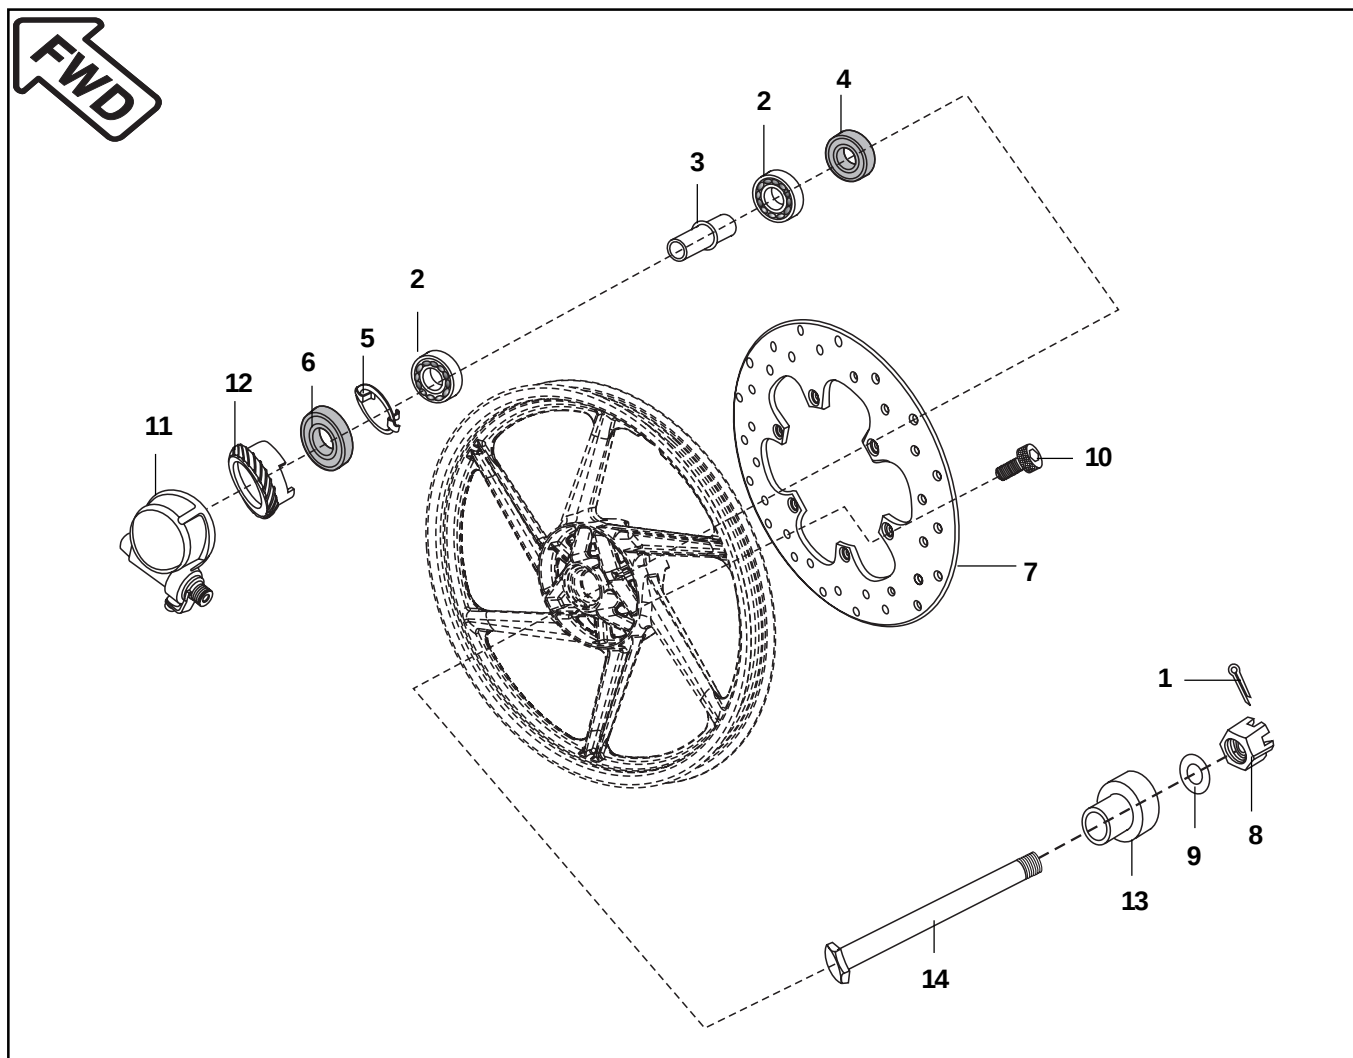


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	39 0787 08	Pin cotter	--	1	
2	39 2688 20	Bearing ball	--	2	
3	DE 1510 06	Spacer assly.	--	1	
4	30 1510 33	Seal oil	--	1	
5	DE 1510 12	Plate drive	--	1	
6	DE 1510 08	Seal oil	--	1	
7	DJ 1510 14	Disc	--	1	
8	39 0786 15	Hex.slotted nut	--	1	
9	39 0781 11	Plain washer	--	1	
10	DD 1510 36	Hex. soc.hd. bolt	--	6	
11	DJ 1510 57	Case meter gear	--	1	
12	DS 1510 38	Speedometer gear	--	1	
13	DS 1510 58	Spacer	--	1	
14	DJ 1510 41	Axle	--	1	

K.S. = Kick Start
E.S. = Electric Start

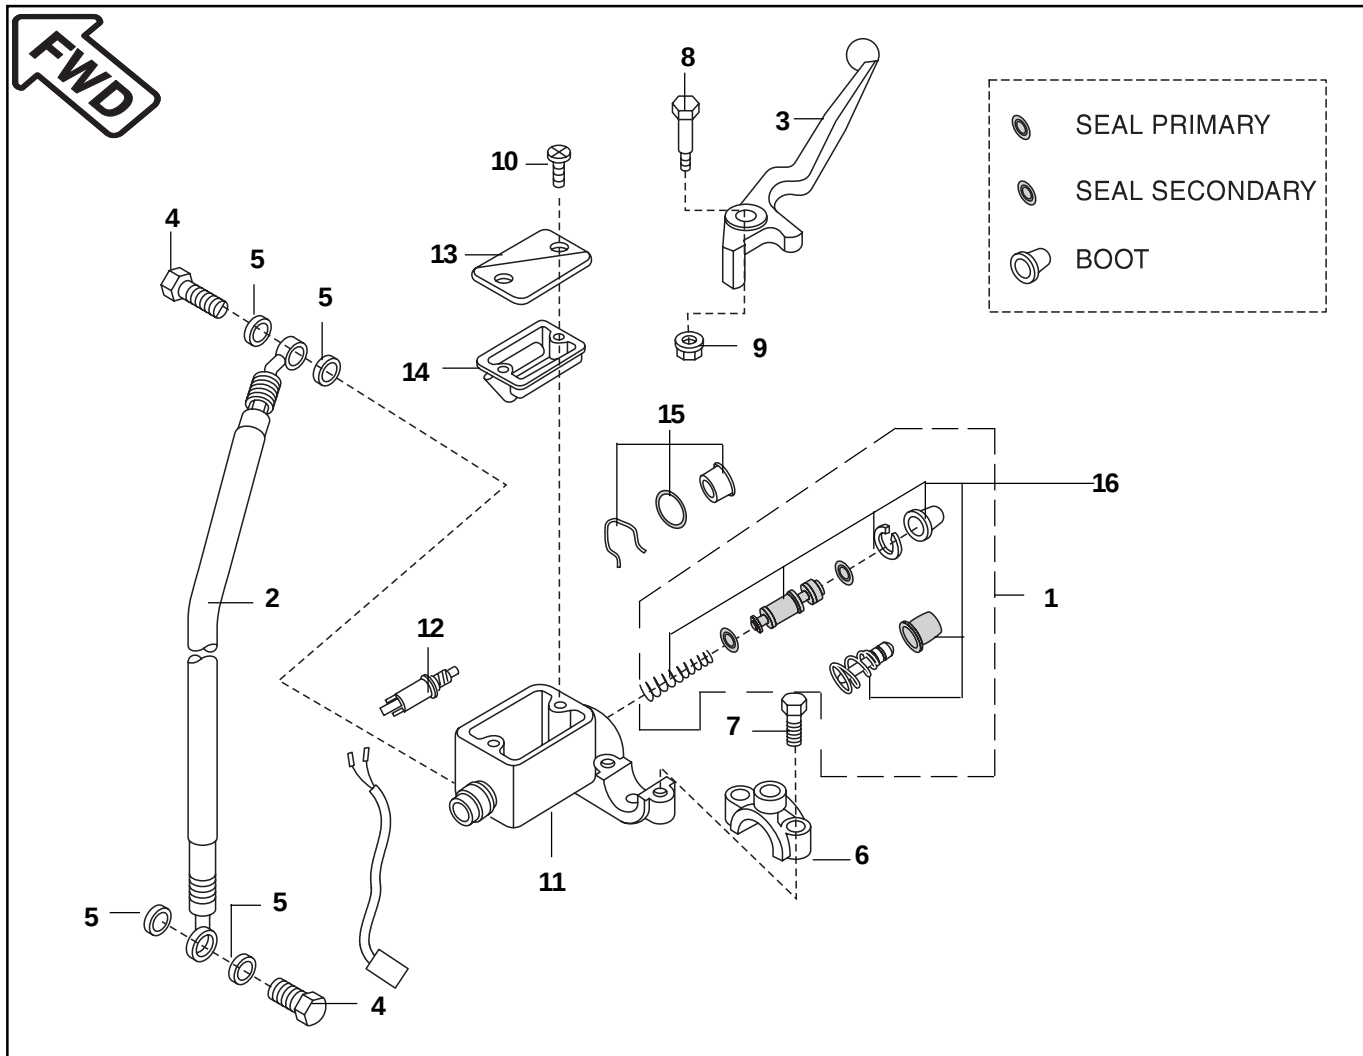


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DE 1910 43	Major Kit - Master Cylinder	--	1	
2	DE 1510 16	Hose Brake Front	--	1	
3	DE 1910 09	Lever Grip RH	--	1	
4	DE 1910 11	Banjo Bolt	--	2	
5	DE 1910 10	Washer Copper	--	4	
6	DE 1910 33	Clamp Holder RH	--	1	
7	DE 1910 34	Bolt	--	1	
8	DE 1910 31	Bolt Front Brake Lever	--	1	
9	DE 1910 32	Nut Flanged	--	1	
10	DE 1910 30	Screw	--	2	
11	DE 1910 12	Cylinder Master	--	1	
12	DE 2010 16	Front brake switch	--	1	
13	DE 1910 29	Reservoir Cover	--	1	
14	DE 1910 28	Diaphragm	--	1	
15	36 DH19 02	'O' Ring Kit	--	1	
16	36 DH19 01	Minor Kit	--	1	

K.S. = Kick Start
E.S. = Electric Start

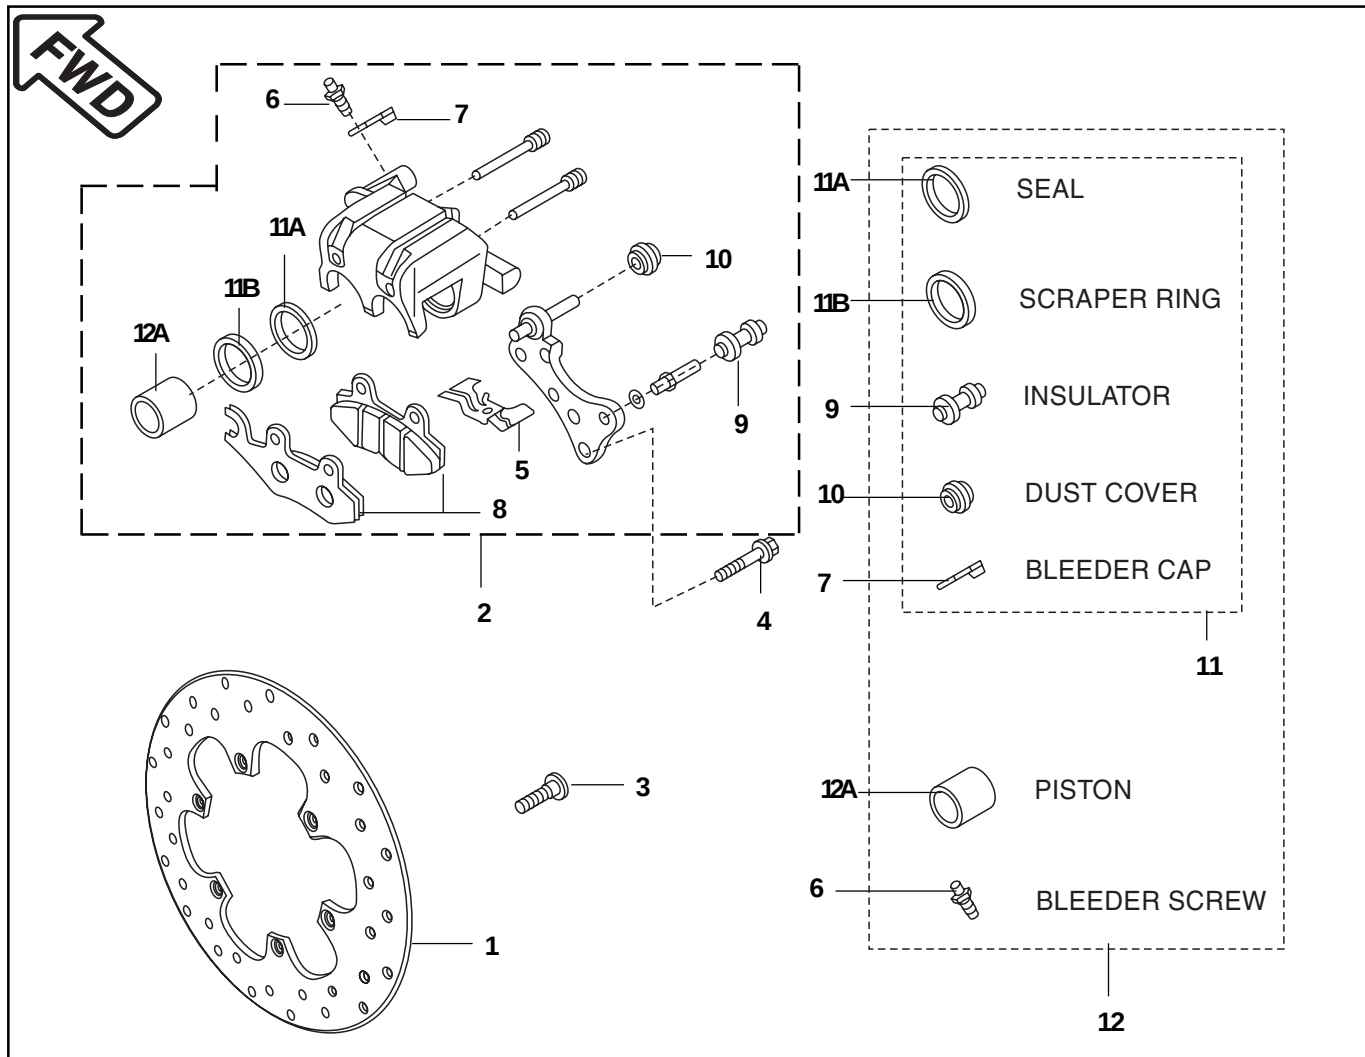


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DE 1510 13	Disc, Front	--	1	
2	DE 1510 14	Caliper Assly. Front	--	1	
3	39 2038 04	Bolt, Disc Plate	--	6	
4	39 1769 04	Bolt Flanged	--	2	
5	DE 1510 48	Spring Pad	--	1	
6	DE 1510 46	Bleeder Screw	--	1	
7	DE 1510 47	Bleeder Cap	--	1	
8	DE 1510 37	Disc Pad Set	--	1	
9	DE 1510 43	Insulator	--	1	
10	DE 1510 45	Dust cover	--	1	
11	DE 1510 51	Minor Kit - Caliper	--	1	
12	DE 1510 52	Major Kit - Caliper	--	1	

K.S. = Kick Start
E.S. = Electric Start

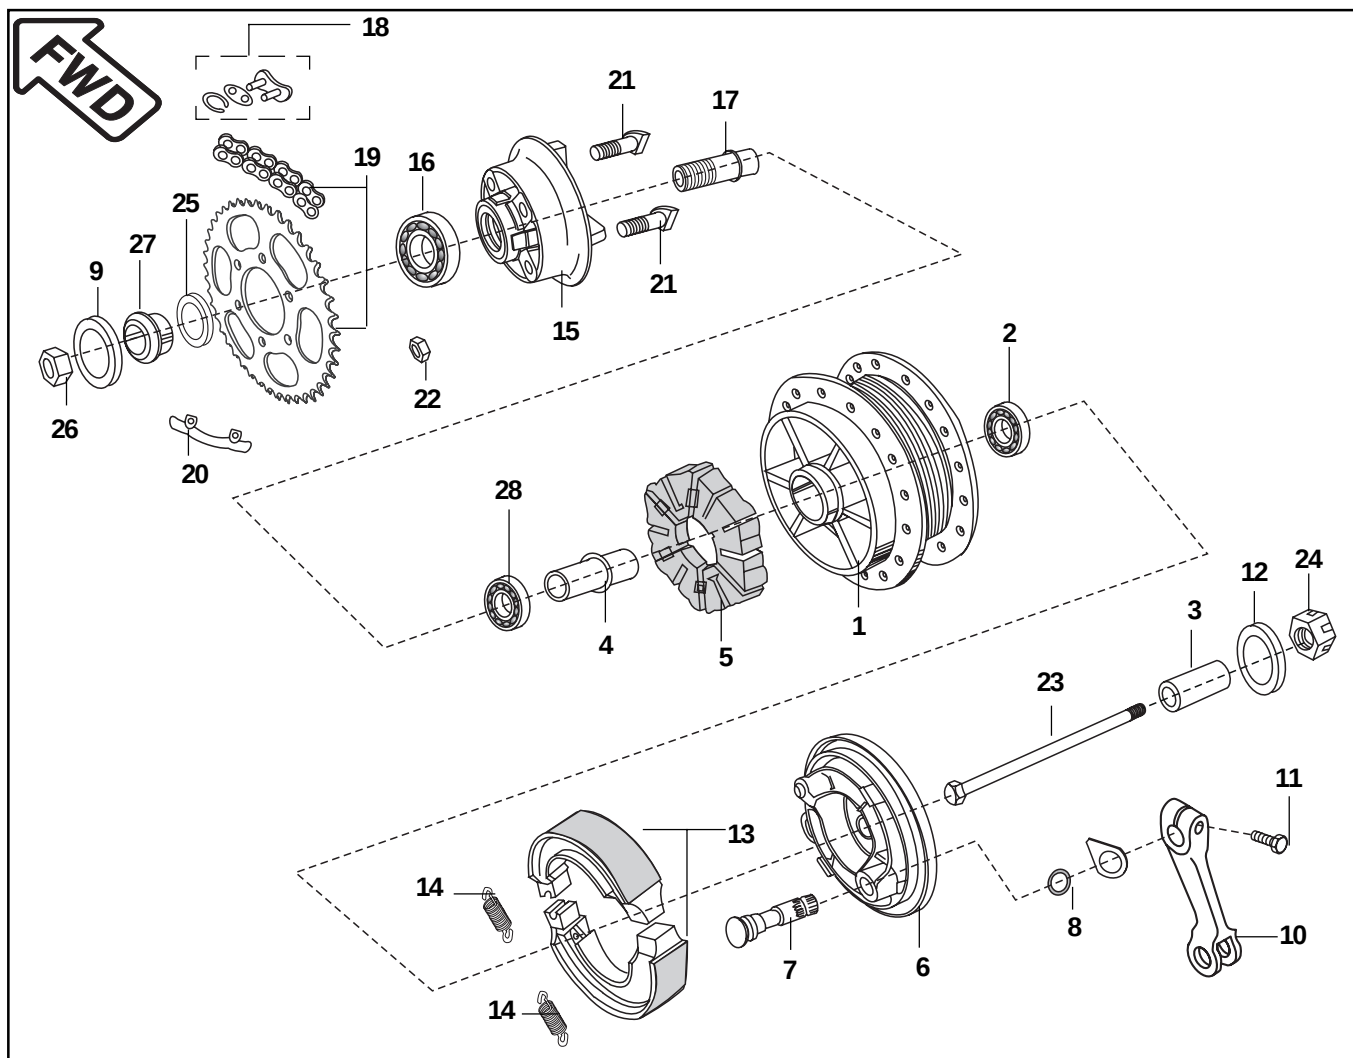


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	30 1510 63	Drum rear	1	1	
2	39 2686 20	Bearing Ball	1	1	
3	DJ 1510 34	Collar	1	1	
4	30 1510 75	Collar bearing	1	1	
5	30 1510 76	Damper	1	1	
6	30 1510 08	Panel rear brake	1	1	
7	30 1510 12	Cam brake	1	1	
8	30 1510 38	Ring 'O'	1	1	
9	39 2566 11	Plain washer	1	1	
10	DS 1510 23	Lever brake	1	1	
11	39 1553 04	Bolt	1	1	
12	39 2567 11	Plain washer	1	1	
13	30 1511 05	Shoe brake assly.	1	1	
14	30 1510 69	Spring	2	2	
15	DH 1510 10	Coupling	1	1	

K.S. = Kick Start
E.S. = Electric Start

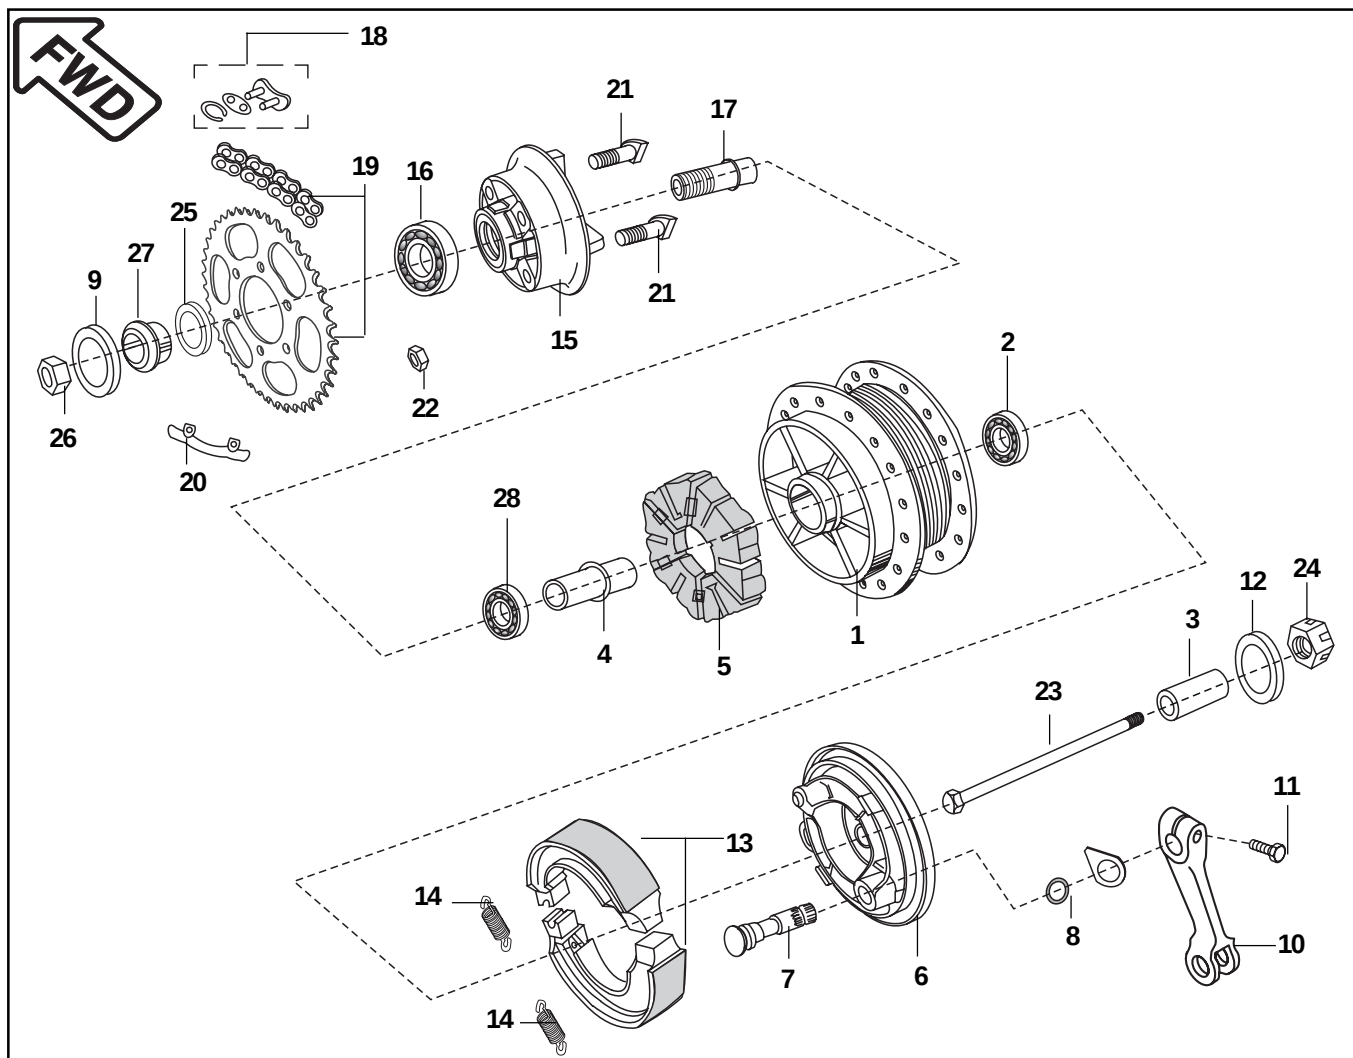


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	39 2240 20	Bearing ball	1	1	Ref. Page No. 66
17	DJ 1510 33	Sleeve	1	1	
18	DJ 1510 53	Drive Chain Lock	1	1	
19	36 DS15 04	Chain Sprocket Kit	1	1	
20	30 1510 81	Lock washer	3	3	
21	DJ 1510 48	'D' Bolt	6	6	
22	39 0694 15	Hex. lock nut	6	6	
23	DJ 1510 32	Axle	1	1	
24	DH 1710 19	'U' nut	1	1	
25	DS 1510 57	Dust cover Rear	1	1	
26	39 0801 15	Nut	1	1	
27	DJ 1510 35	Collar	1	1	
28	39 2687 20	Bearing Ball	1	1	

K.S. = Kick Start
E.S. = Electric Start

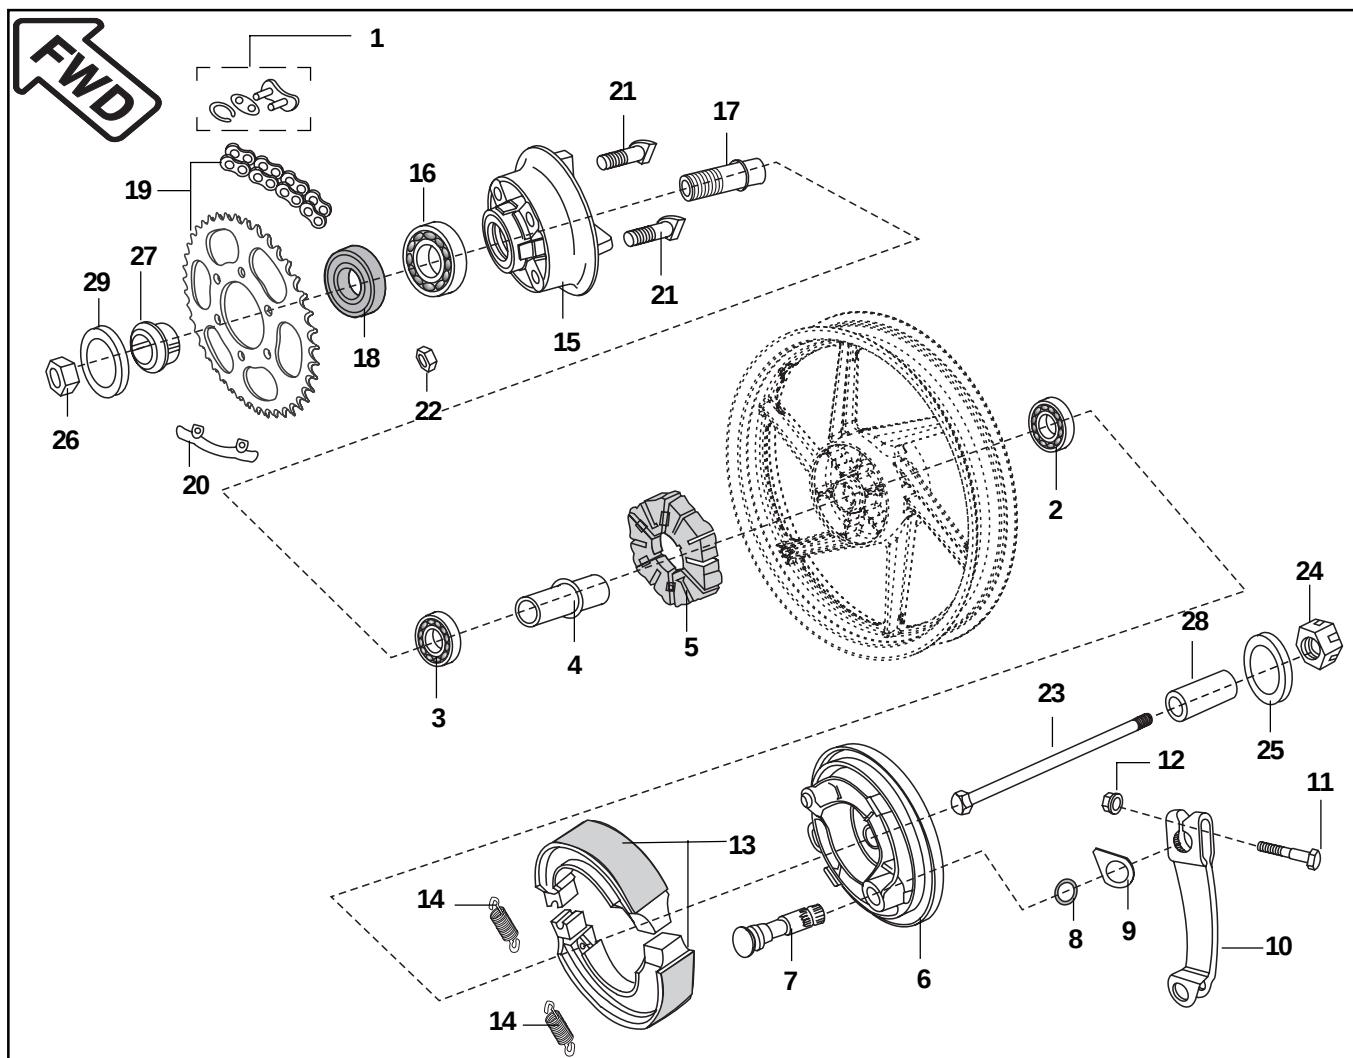


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DJ 1510 53	Drive Chain Lock	--	1	
2	39 2686 20	Bearing ball	--	1	
3	39 2687 20	Bearing ball	--	1	
4	30 1510 75	Collar bearing	--	1	
5	30 1510 76	Damper	--	1	
6	DH 1510 26	Panel rear brake	--	1	
7	30 1510 12	Cam brake	--	1	
8	30 1510 38	Ring 'O'	--	1	
9	30 1510 05	Indicator	--	1	
10	DJ 1510 59	Lever brake	--	1	
11	39 2447 04	Bolt	--	1	
12	39 0798 15	Nut	--	1	
13	30 1511 05	Shoe brake assly.	--	1	
14	30 1510 69	Spring	--	2	
15	DH 1510 47	Coupling	--	1	

K.S. = Kick Start
E.S. = Electric Start

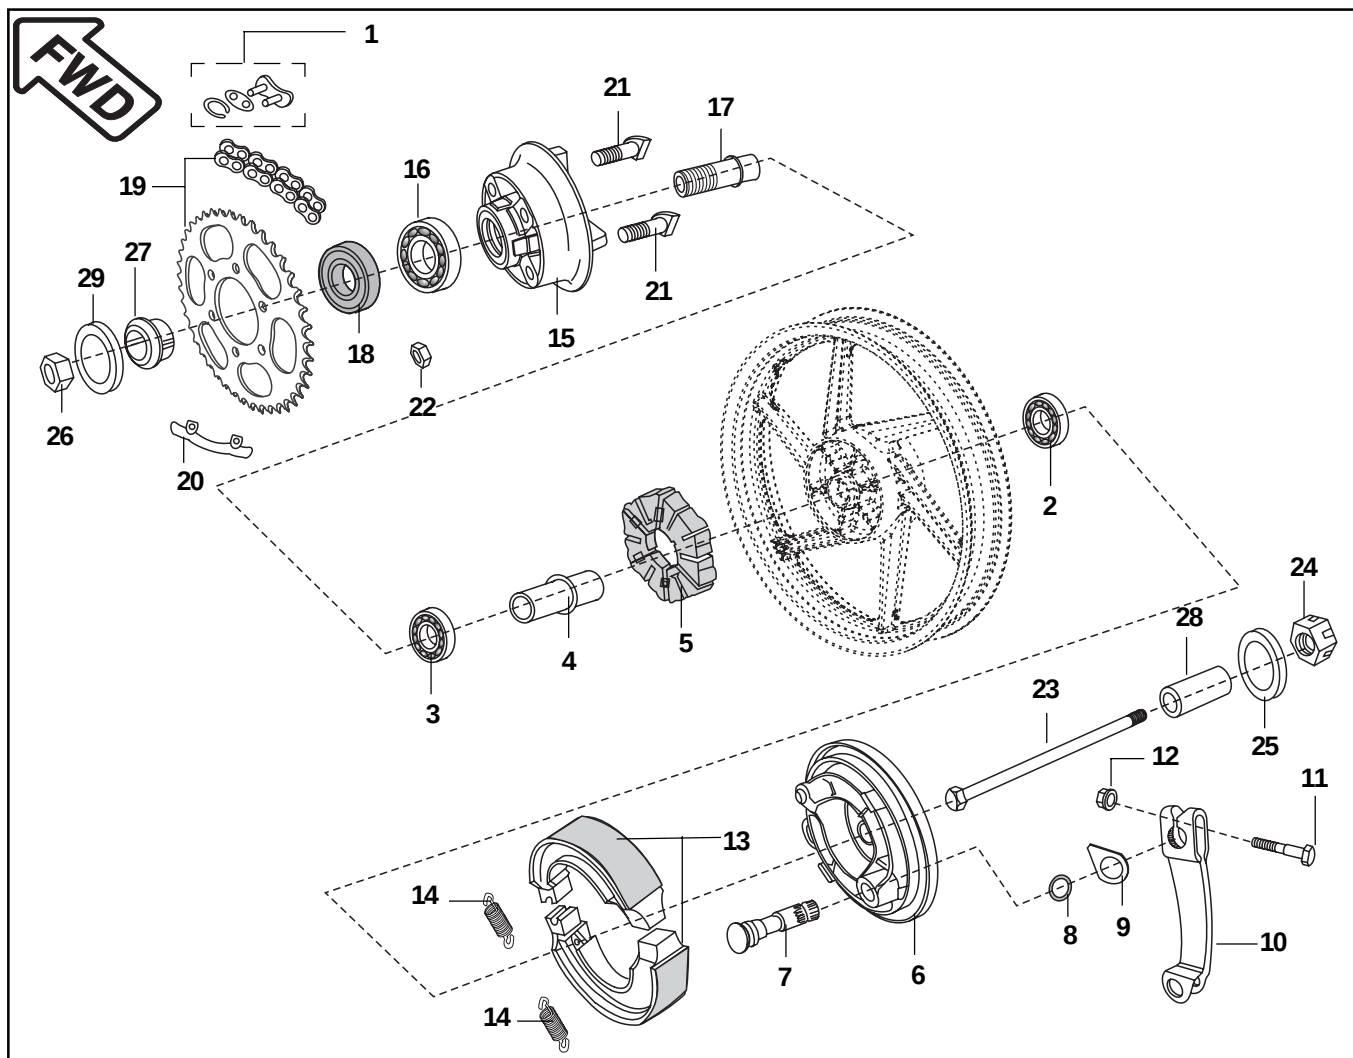


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	30 1011 92	Bearing ball	--	1	Ref. Page No.66
	39 2240 20	Bearing ball	--	1	
17	DJ 1510 33	Sleeve	--	1	
18	30 1510 82	Seal oil	--	1	
19	36 DJ15 02	Chain Sprocket Kit	--	1	
20	30 1510 81	Lock washer	--	3	
21	DJ 1510 48	'D' Bolt	--	6	
22	39 0694 15	Hex. lock nut	--	6	
23	DJ 1510 32	Axle	--	1	
24	DH 1710 19	'U' nut	--	1	
25	39 2567 11	Plain washer	-	1	
26	39 0801 15	Nut	--	1	
27	DJ 1510 35	Collar	--	1	
28	DJ 1510 34	Collar	--	1	
29	39 2566 11	Plain washer	--	1	

K.S. = Kick Start
E.S. = Electric Start

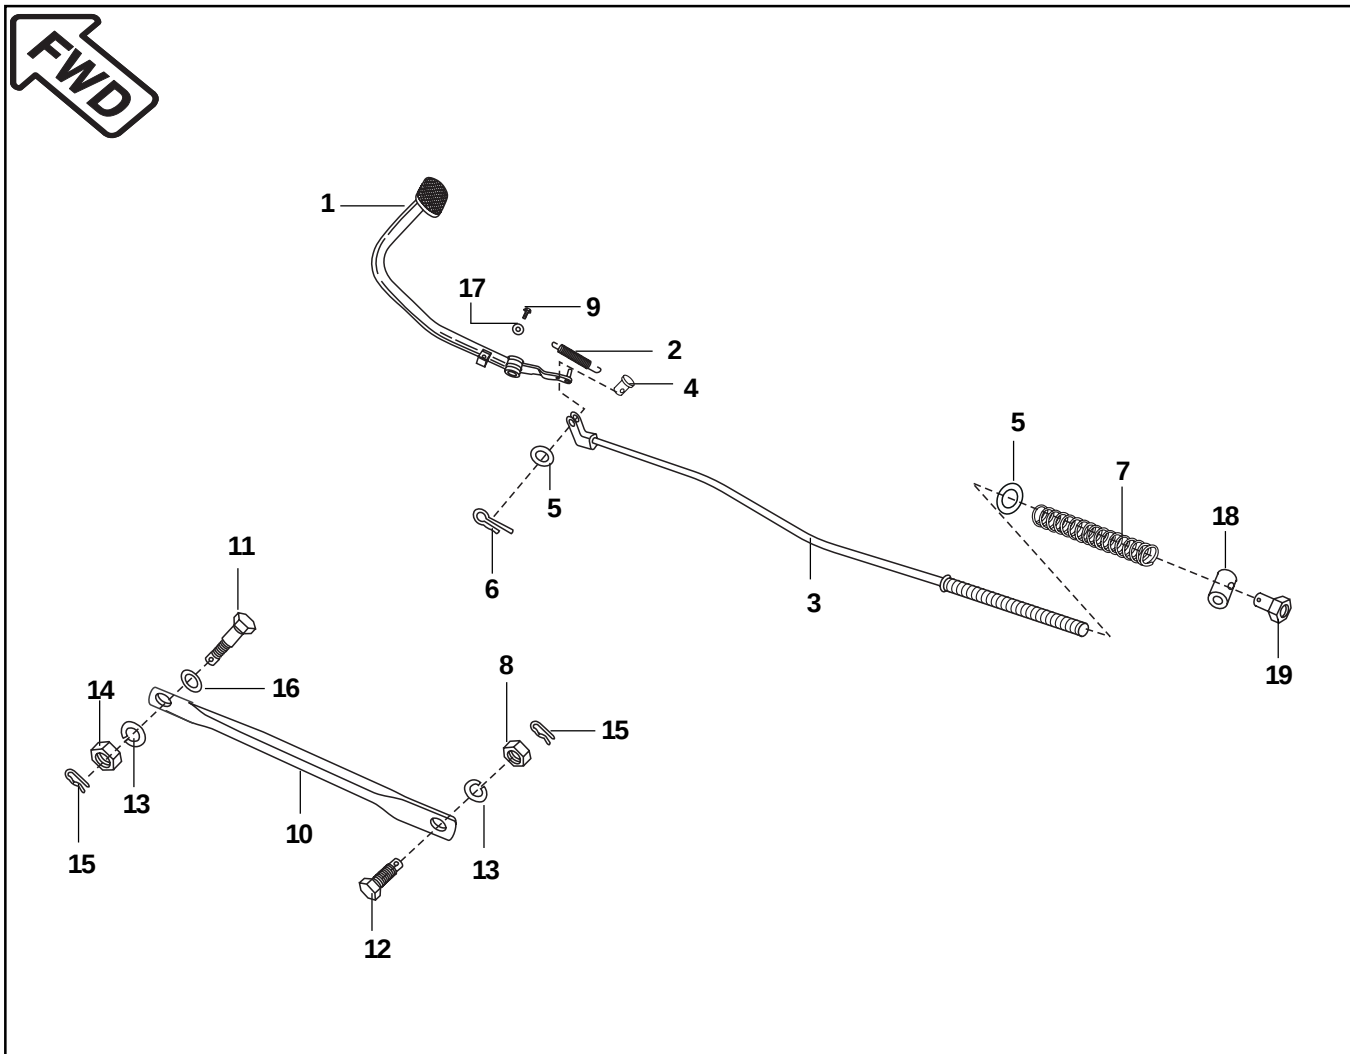


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1910 02	Brake Pedal	1	1	
2	DS 1910 11	Brake Pedal Spring	1	1	
3	DS 1910 03	Rod brake	1	1	
4	30 1910 38	Pin	1	1	
5	39 0198 11	Plain washer	2	2	
6	39 0808 08	Split pin	1	1	
7	30 1910 35	Spring	1	1	
9	39 1680 04	Hex. Bolt	1	1	
10	DS 1510 25	Rod torque	1	1	
11	DH 1510 29	Hex. bolt	1	1	
12	30 1510 95	Hex. bolt	1	1	
13	39 0789 12	Spring washer	2	2	
14	39 0694 15	Nut hex.	2	2	
15	39 0807 08	Pin snap	2	2	
16	39 1540 11	Plain Washer	1	1	
17	DG 1910 45	Washer	1	1	
18	15 1910 26	Pin	1	1	
19	30 1910 36	Brake Adjuster Nut	1	1	

K.S. = Kick Start
E.S. = Electric Start

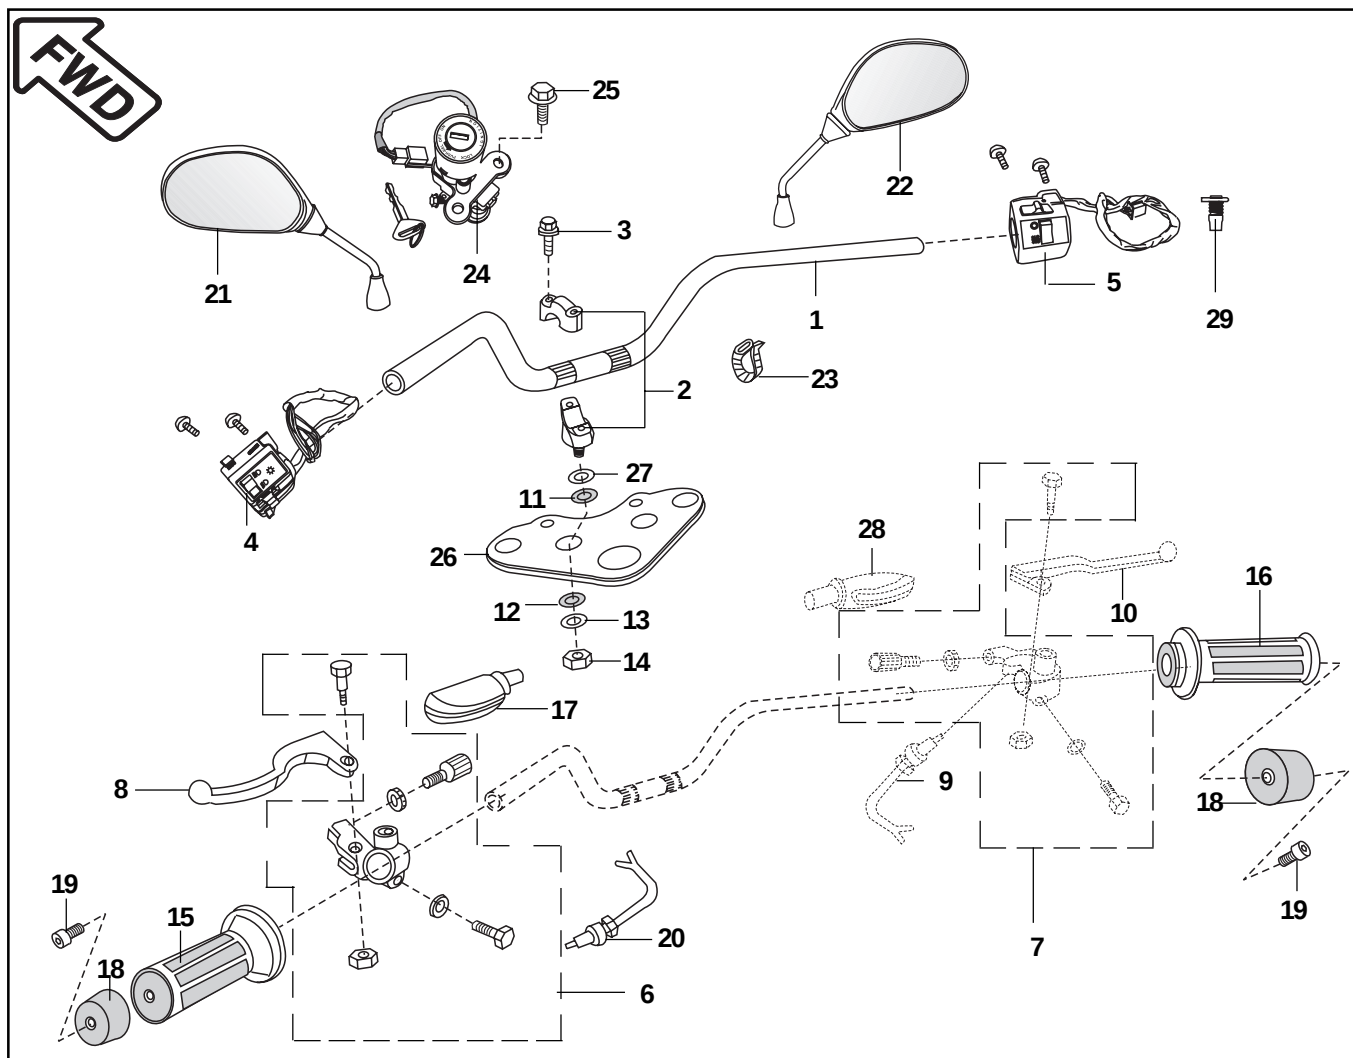


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1810 44	Handle	1	1	Ref. Page No. 67
2	36 DS18 01	Holder handle Kit	1	1	
3	39 1714 04	Flanged bolt	4	4	
4	DJ 2010 24	Control switch LH	1	1	
5	DS 2010 33	Control switch RH	1	--	
	DS 2010 28	Control switch RH	--	1	
6	DS 1910 36	Holder Assly. LH	1	--	
	DS 1910 37	Holder Assly. LH	--	1	
7	DS 1910 38	Holder Assly. RH	1	1	
8	DH 1910 02	Lever grip Left	1	--	
	DD 1910 69	Lever grip Left	--	1	
9	29 2011 17	Front Brake Switch	1	1	
10	DD 1911 42	Lever Brake RH	1	1	
11	DS 1810 08	Damper handle upper	2	2	
12	DS 1810 09	Damper handle lower	2	2	
13	DS 1810 10	Washer handle lower	2	2	
14	39 0422 15	Nylock Nut	2	2	
15	DS 1910 15	Grip LH	1	1	

K.S. = Kick Start
E.S. = Electric Start

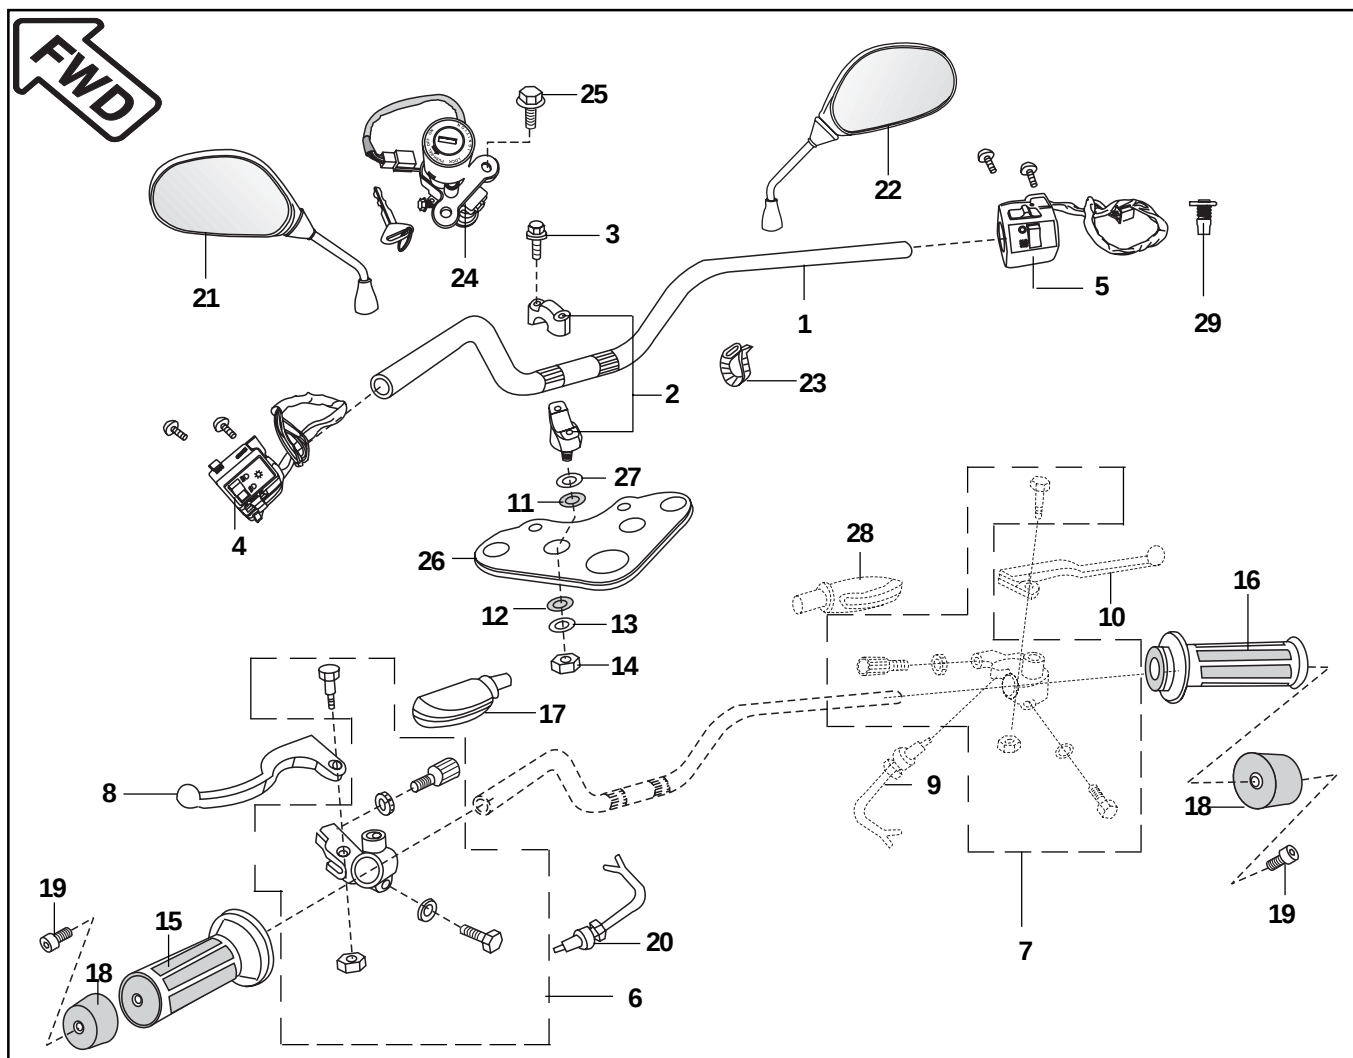


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	DS 1910 16	Grip Assly. RH	1	1	
17	DH 1910 19	Boot for lever LH	1	1	
18	DH 1810 22	Handle bar weight	2	2	
19	39 2427 04	Hex. soc.hd. cap screw	2	2	
20	DJ 2010 34	Clutch Switch	--	1	
21	DJ 2210 03	Mirror assly. LH	1	1	
22	DJ 2210 04	Mirror assly. RH	1	1	
23	30 1910 48	Band	2	2	
24	DS 1810 22	Switch assly.ignition	1	1	
25	39 1943 04	Flange bolt	2	2	
26	DS 1810 05	Holder Fork Upper	1	1	
27	DS 1810 07	Washer handle Upper	2	2	
28	DS 1910 18	Boot For Lever RH	1	1	
29	DU 2010 46	Plunger with Spring	1	1	Part of Ride Control Switch

K.S. = Kick Start
E.S. = Electric Start

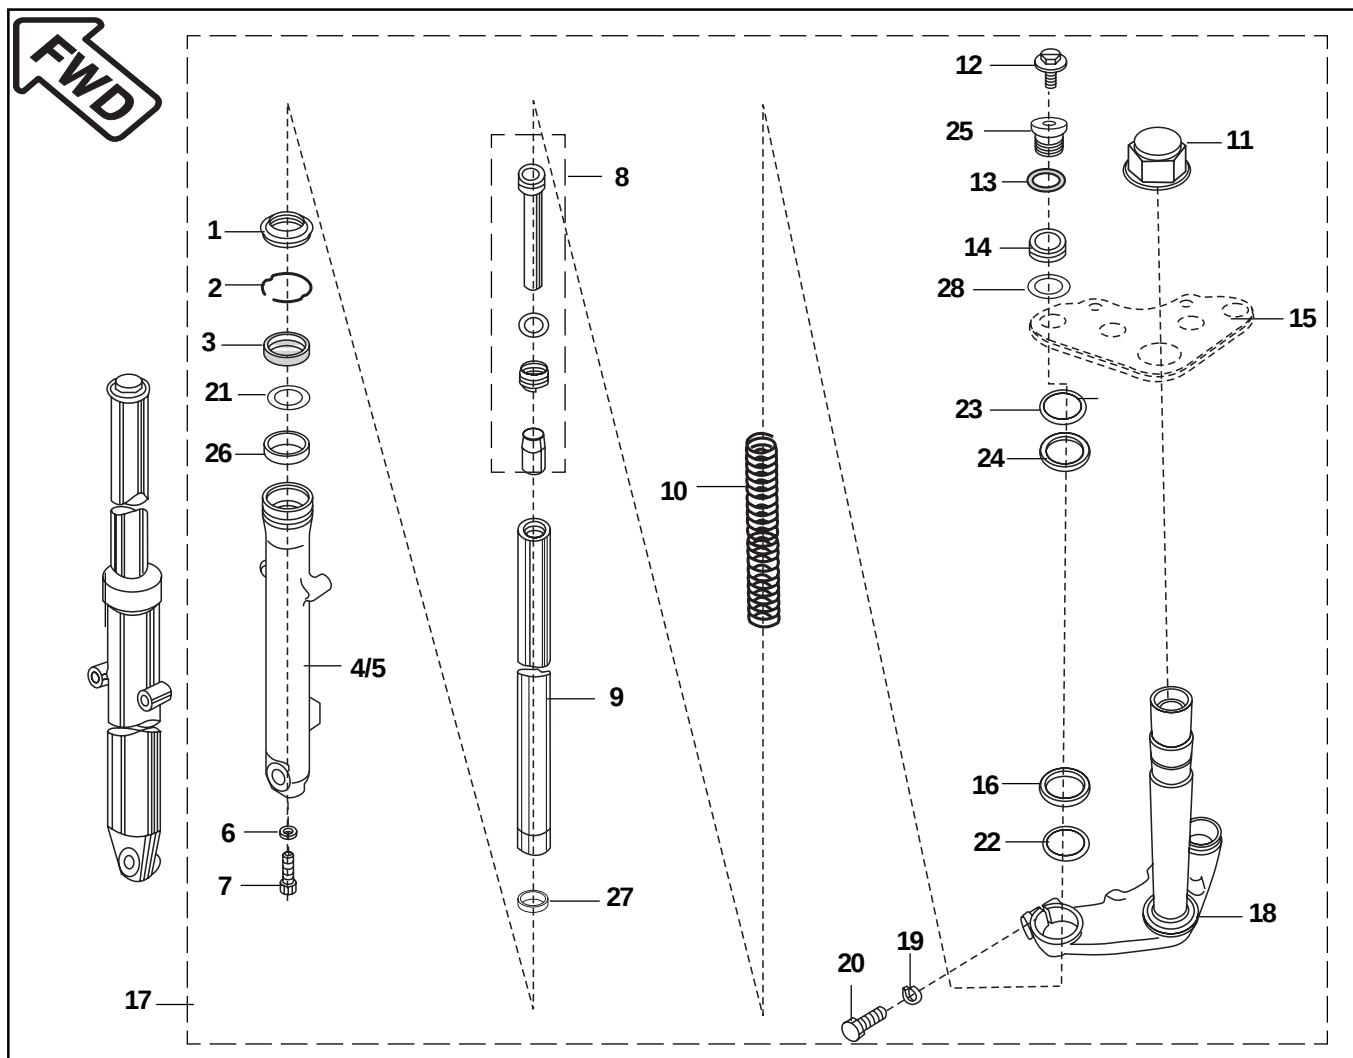


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DJ 1810 89	Seal dust	2	2	
2	DJ 1810 88	Ring snap	2	2	
3	DJ 1810 87	Oil seal	2	2	
4	DS 1810 42	Outer Tube LH	1	1	
5	DS 1810 43	Outer Tube RH	1	1	
6	30 1810 26	Gasket	2	2	
7	30 1810 25	Bolt	2	2	
8	DS 1810 77	Cylinder comp.fork	2	2	
9	DS 1810 83	Pipe comp.suspension inner	2	2	
10	DS 1810 84	Spring front fork	2	2	
11	DS 1810 15	Cap Nut Fork	1	1	
12	DS 1810 75	Bolt fork	2	2	
13	30 1810 29	O ring	2	2	
14	DS 1810 85	Seat fork spring	2	2	
15	DS 1810 05	Holder fork upper	1	1	

K.S. = Kick Start
E.S. = Electric Start

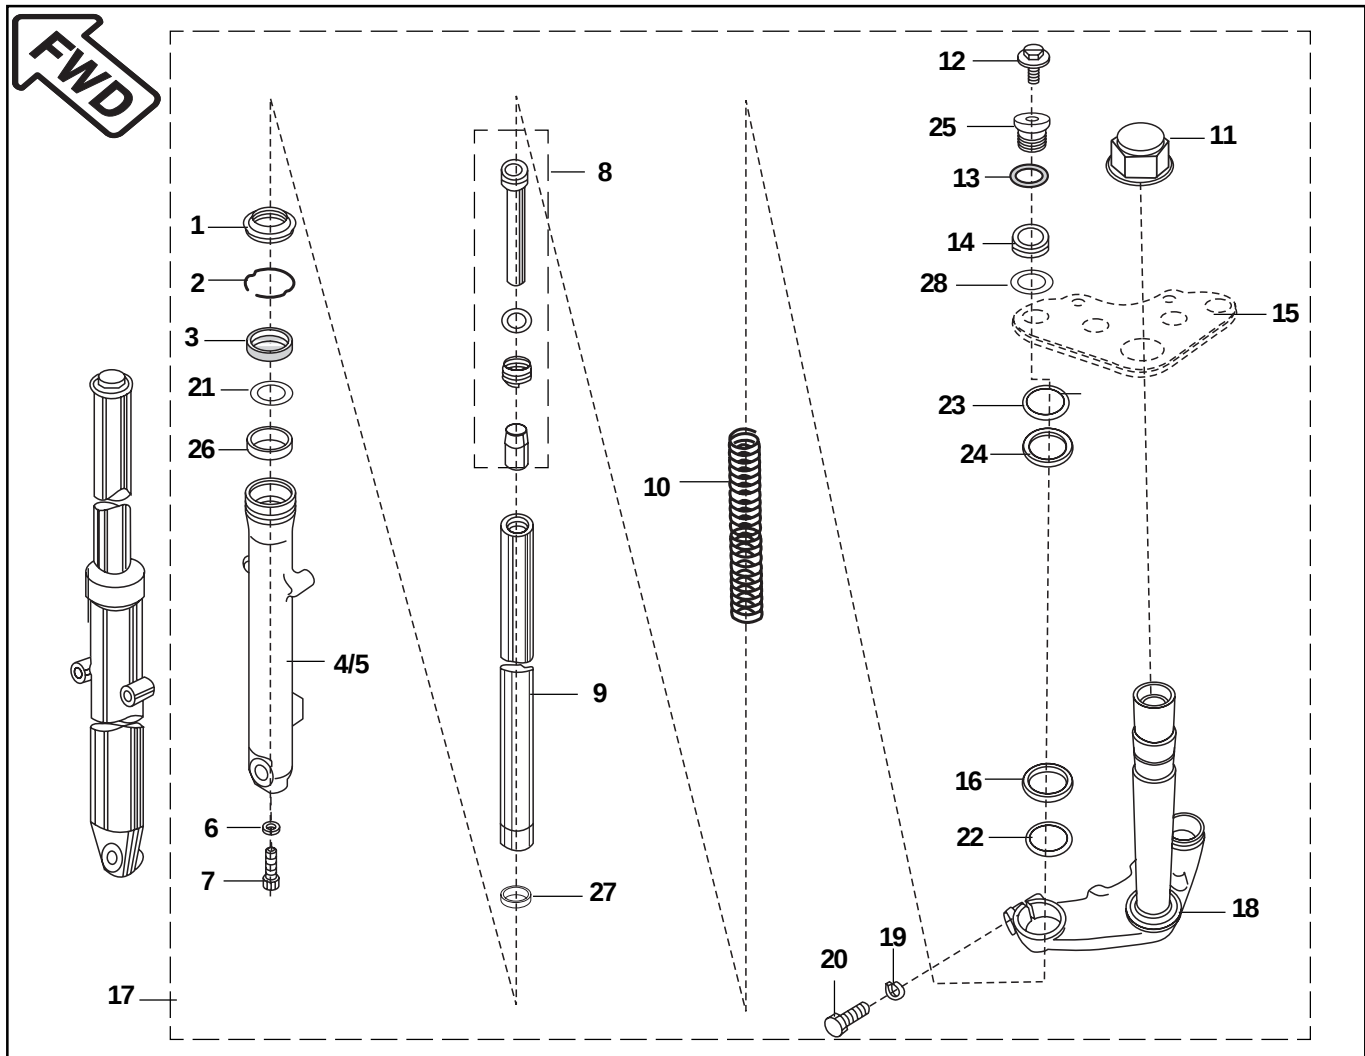


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	DJ 1810 43	Cover Trail B	2	--	For Disc Brake System
17	DS 1810 80	Fork front	1	1	
	DS 1810 87	Fork front	--	1	
18	DS 1810 20	Holder fork under Assly.	1	1	
19	39 0789 12	Spring washer	2	2	
20	39 1813 04	Bolt	2	2	
21	DS 1810 72	Guide Bush Washer	2	2	
22	DJ 1810 85	Cushion Rubber	2	--	
23	DS 1810 17	Spcaer nylon	2	--	
24	DJ 1810 42	Cover trail A	2	--	
25	DS 1810 12	Bolt Fork	2	2	
26	DS 1810 70	Guide Bush	2	2	
27	DS 1810 71	Slide Bush	2	2	
28	DS 1810 86	Plain Washer	2	2	

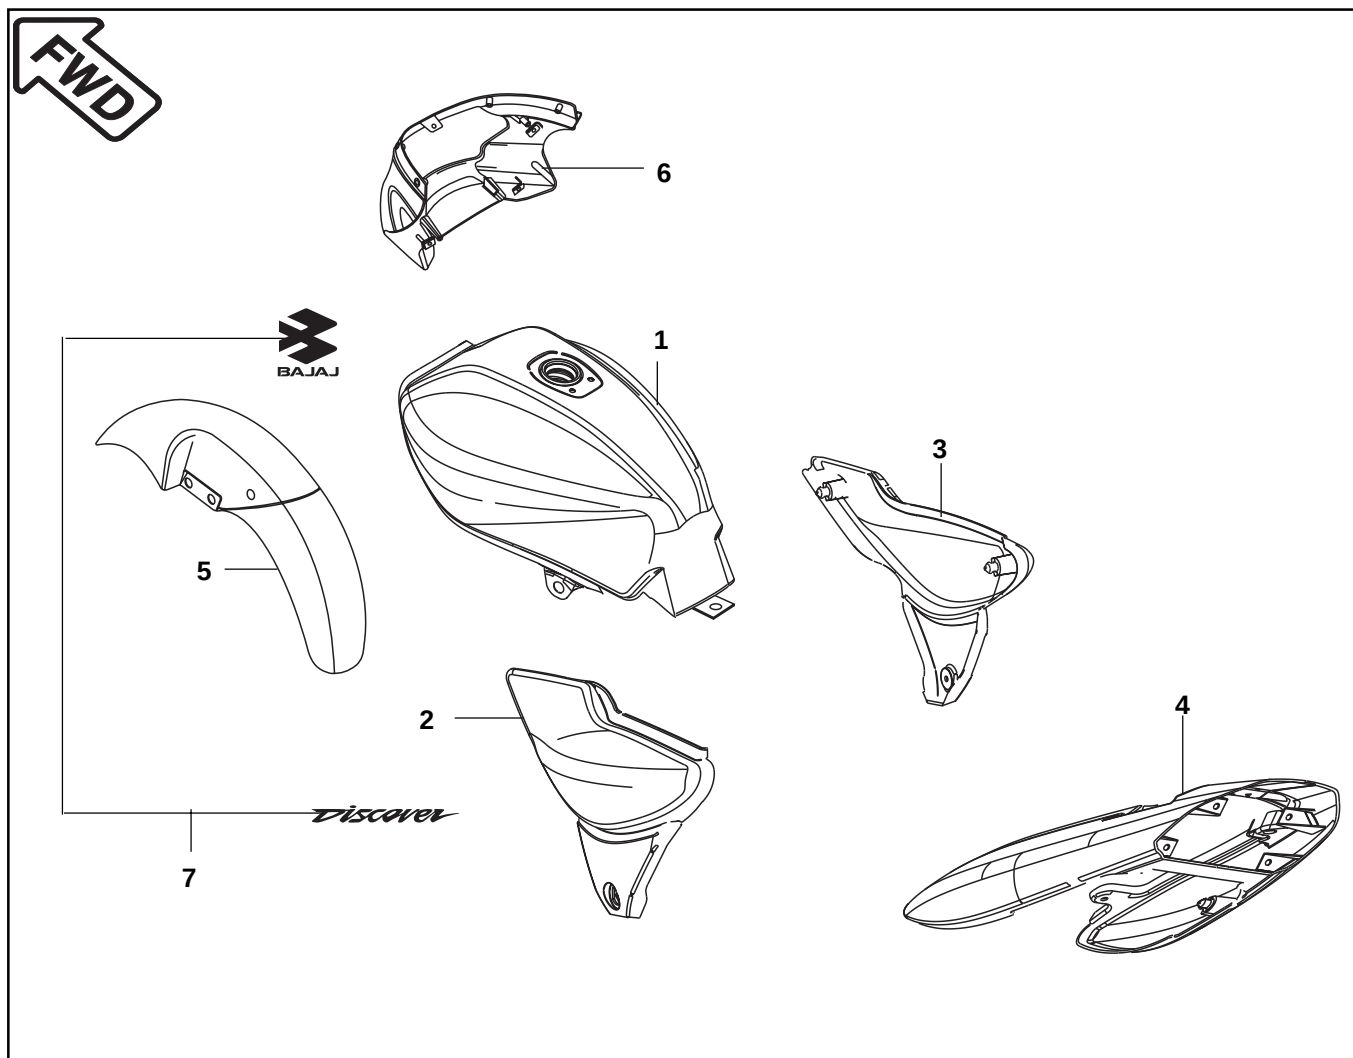


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 7101 1C	Fuel Tank with Decal	1	1	FOR MAGIC SILVER COLOUR
	DS 7101 X3	Fuel Tank with Decal	1	1	FOR EBONY BLACK COLOUR
	DS 7101 X4	Fuel Tank with Decal	1	1	FOR FLAME RED COLOUR
	DS 7101 X6	Fuel Tank with Decal	1	1	FOR BLUE METALLIC COLOUR
	DS 7101 2P	Fuel Tank with Decal	1	1	FOR BRONZE GOLD METALLIC
	DS 7101 2Q	Fuel Tank with Decal	1	1	FOR ORANGE COPPER MICA
2	DS 7303 1C	Side cover LH	1	1	FOR MAGIC SILVER COLOUR
	DS 7303 X3	Side cover LH	1	1	FOR EBONY BLACK COLOUR
	DS 7303 X4	Side cover LH	1	1	FOR FLAME RED COLOUR
	DS 7303 X6	Side cover LH	1	1	FOR BLUE METALLIC COLOUR
	DS 7303 2P	Side cover LH	1	1	FOR BRONZE GOLD METALLIC
	DS 7303 2Q	Side cover LH	1	1	FOR ORANGE COPPER MICA
3	DS 7304 1C	Side cover RH	1	1	FOR MAGIC SILVER COLOUR
	DS 7304 X3	Side cover RH	1	1	FOR EBONY BLACK COLOUR
	DS 7304 X4	Side cover RH	1	1	FOR FLAME RED COLOUR
	DS 7304 X6	Side cover RH	1	1	FOR BLUE METALLIC COLOUR
	DS 7304 2P	Side cover RH	1	1	FOR BRONZE GOLD METALLIC
	DS 7304 2Q	Side cover RH	1	1	FOR ORANGE COPPER MICA

K.S. = Kick Start
E.S. = Electric Start



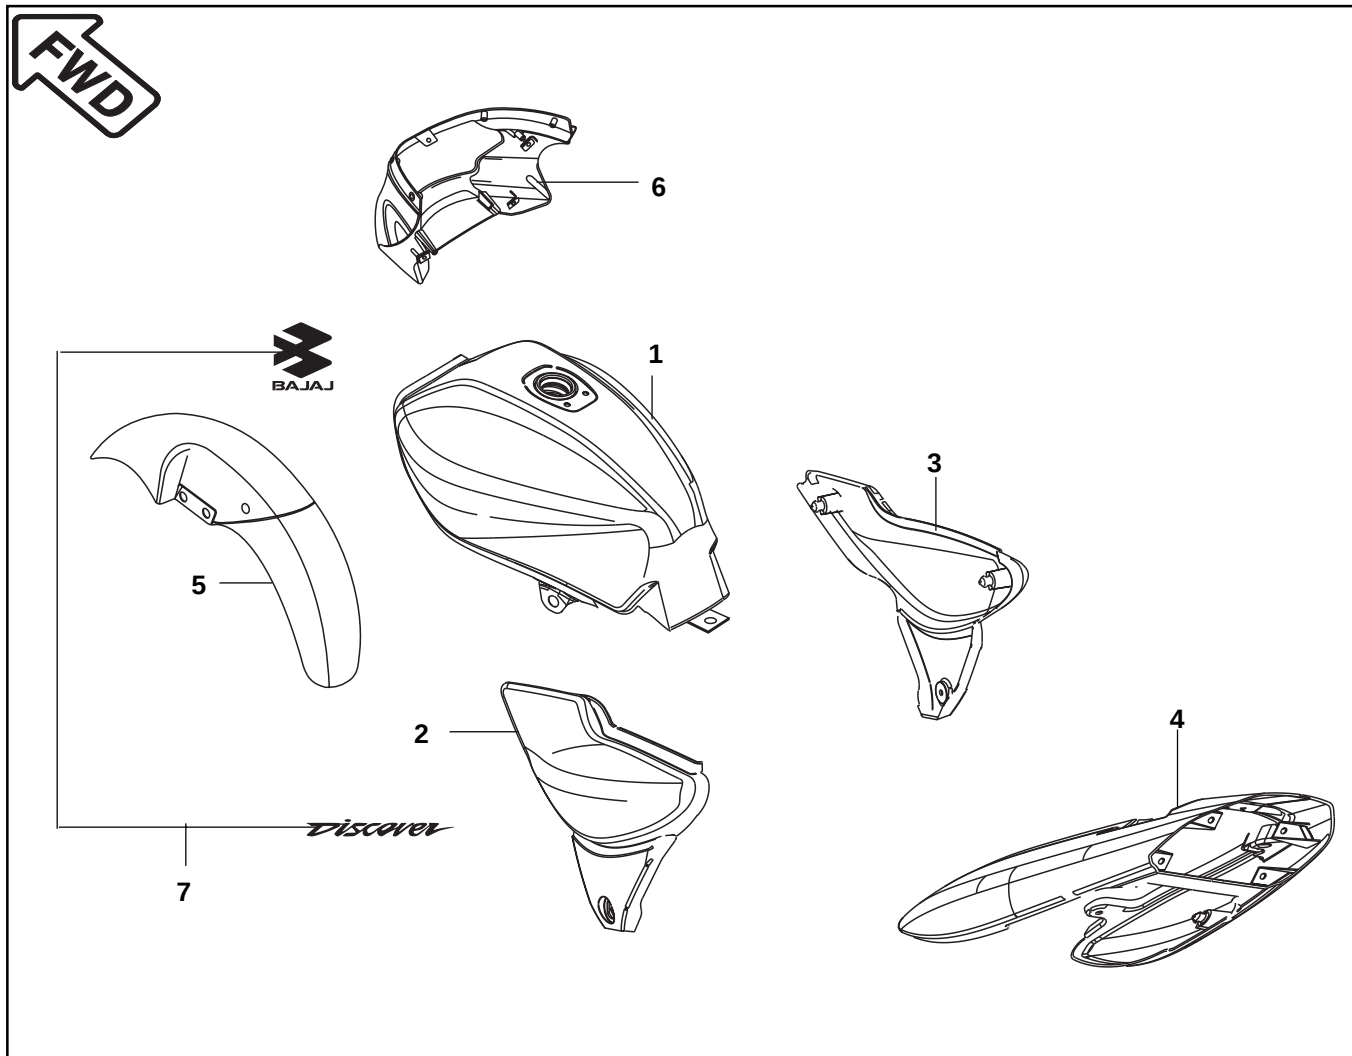


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
4	DS 7301 1C	Seat Cowl Assly.	1	1	FOR MAGIC SILVER COLOUR
	DS 7301 X3	Seat Cowl Assly.	1	1	FOR EBONY BLACK COLOUR
	DS 7301 X4	Seat Cowl Assly.	1	1	FOR FLAME RED COLOUR
	DS 7301 X6	Seat Cowl Assly.	1	1	FOR BLUE METALLIC COLOUR
	DS 7301 2P	Seat Cowl Assly.	1	1	FOR BRONZE GOLD METALLIC
	DS 7301 2Q	Seat Cowl Assly.	1	1	FOR ORANGE COPPER MICA
5	DS 7302 1C	Fender Front	1	1	FOR MAGIC SILVER COLOUR
	DS 7302 X3	Fender Front	1	1	FOR EBONY BLACK COLOUR
	DS 7302 X4	Fender Front	1	1	FOR FLAME RED COLOUR
	DS 7302 X6	Fender Front	1	1	FOR BLUE METALLIC COLOUR
	DS 7302 2P	Fender Front	1	1	FOR BRONZE GOLD METALLIC
	DS 7302 2Q	Fender Front	1	1	FOR ORANGE COPPER MICA
6	DS 7401 1C	Fairing	1	1	FOR MAGIC SILVER COLOUR
	DS 7401 X3	Fairing	1	1	FOR EBONY BLACK COLOUR
	DS 7401 X4	Fairing	1	1	FOR FLAME RED COLOUR
	DS 7401 X6	Fairing	1	1	FOR BLUE METALLIC COLOUR
	DS 7401 2P	Fairing	1	1	FOR BRONZE GOLD METALLIC
	DS 7401 2Q	Fairing	1	1	FOR ORANGE COPPER MICA

K.S. = Kick Start
E.S. = Electric Start



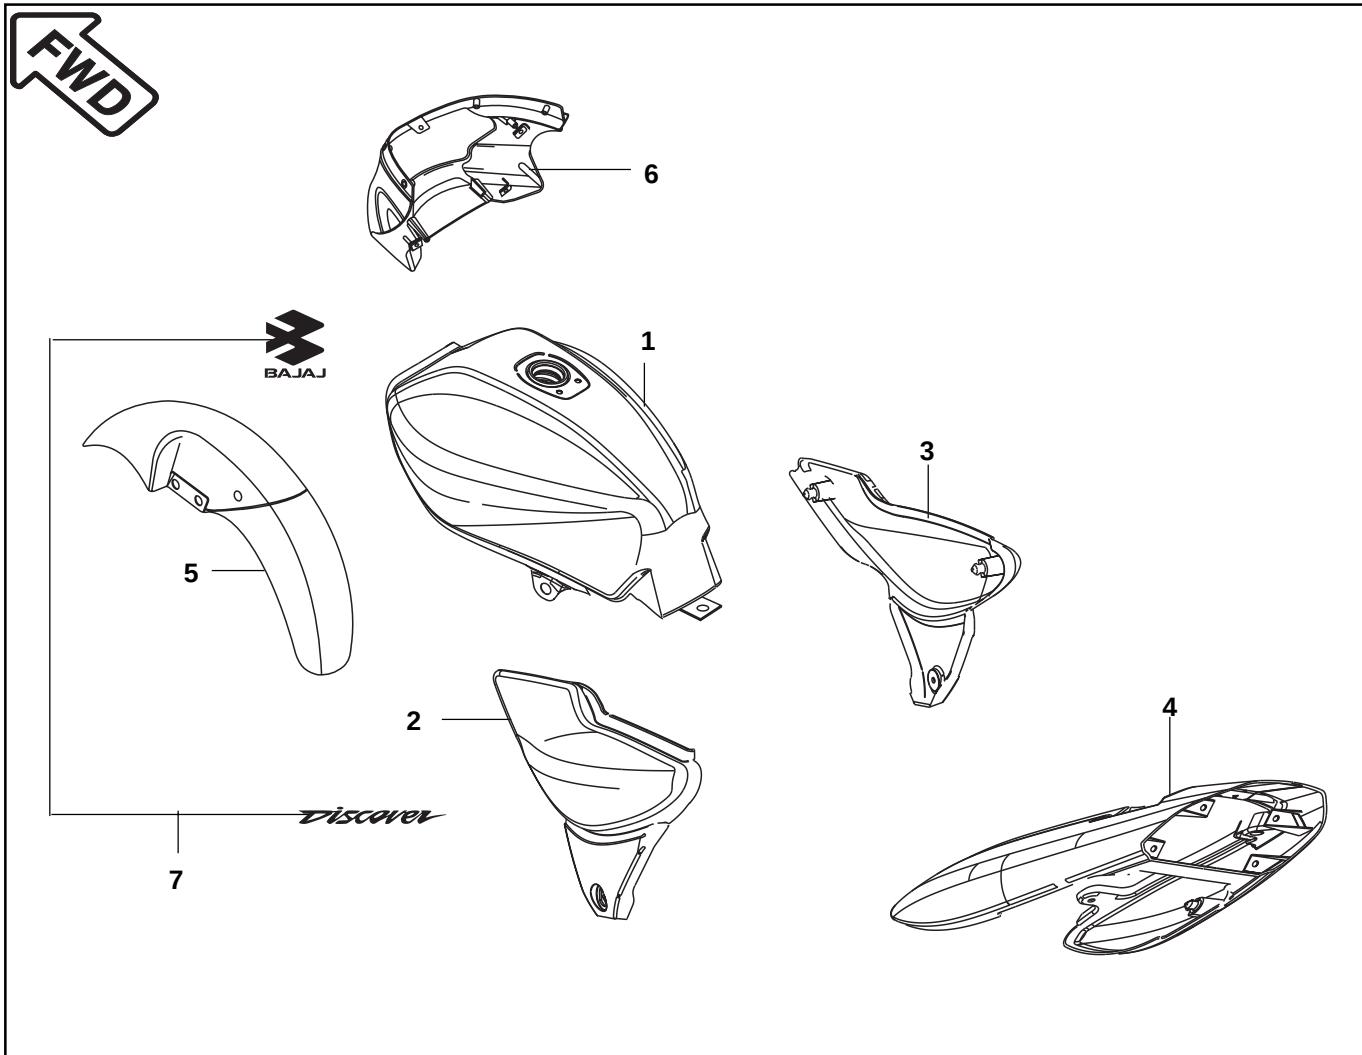


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
7	36 DS16 05	Decal Set	1	1	FOR MAGIC SILVER COLOUR
	36 DS16 06	Decal Set	1	1	FOR EBONY BLACK COLOUR
	36 DS16 07	Decal Set	1	1	FOR FLAME RED COLOUR
	36 DS16 08	Decal Set	1	1	FOR BLUE METALLIC COLOUR
	36 DS16 11	Decal Set	1	1	FOR BRONZE GOLD METALLIC
	36 DS16 10	Decal Set	1	1	FOR ORANGE COPPER MICA
					Ref. Page No. 67 for Decal Sets

K.S. = Kick Start
E.S. = Electric Start

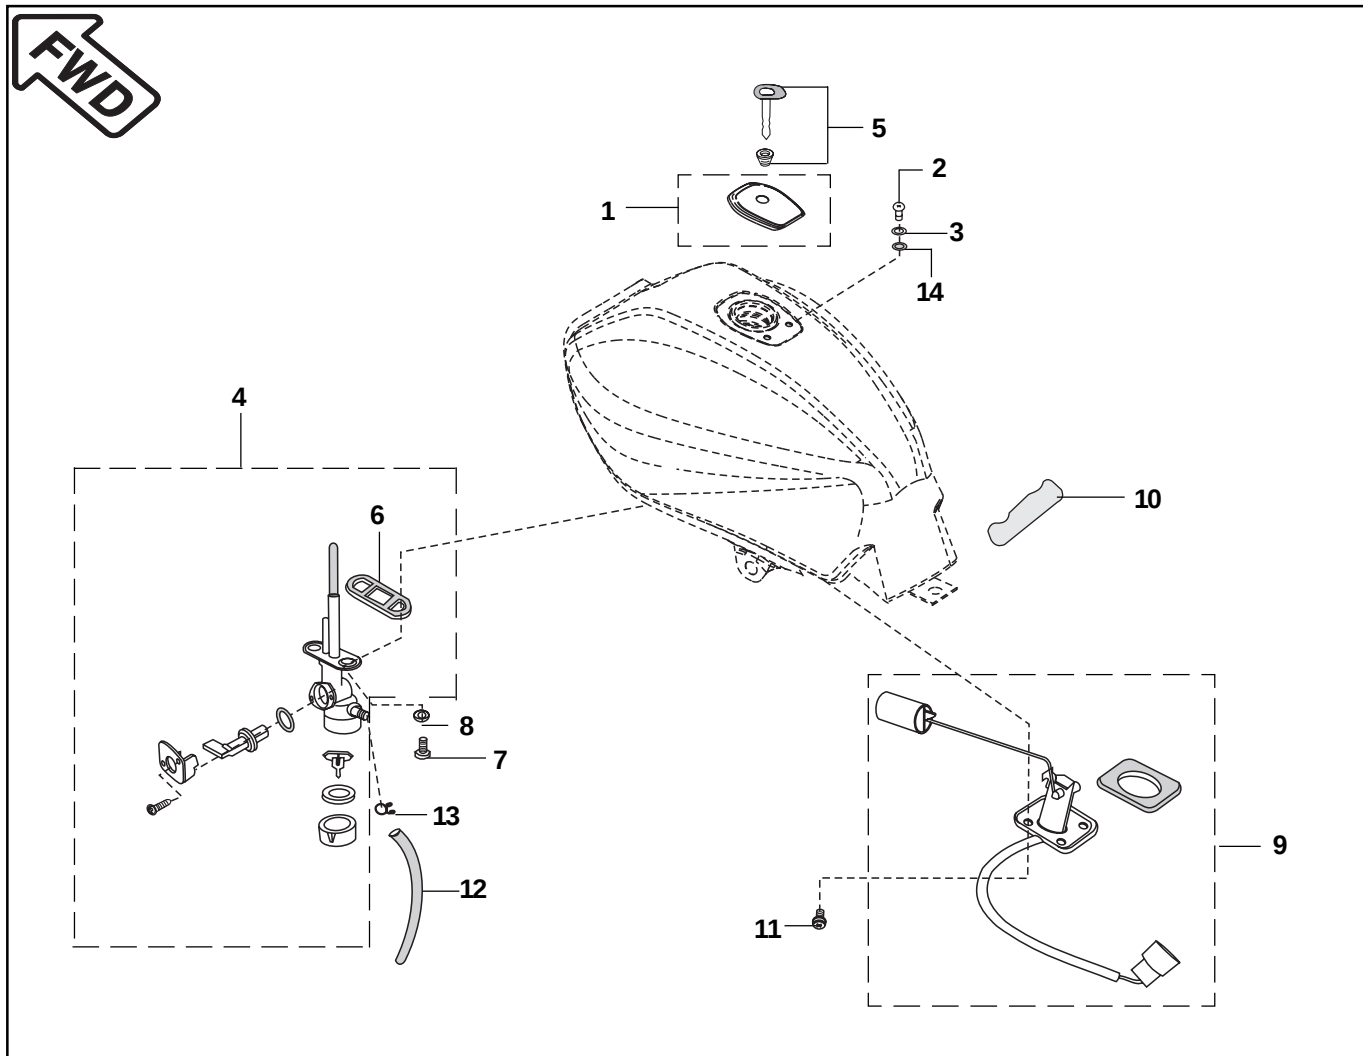


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1410 09	Cap Assy. Tank	1	1	
2	39 0761 01	Screw Pan Cross	2	2	
3	39 2179 24	Washer	2	2	
4	DS 1410 17	Fuel Tap Assy	1	1	
5	DS 1810 36	3 In 1 Lock set With Key	1	1	
6	30 1410 39	Packing	1	1	
7	DD 1410 22	Bolt flanged	2	2	
8	39 0740 11	Washer (Non-Metallic)	2	2	
9	DS 2010 55	Gauge Fuel	1	1	
10	DS 1410 13	Seat Tape	1	1	
11	30 1410 32	Bolt	4	4	
12	DS 1410 14	Tube fuel	1	1	
13	30 1410 15	Pipe clip	2	2	
14	30 1410 31	'O' Ring	2	2	

K.S. = Kick Start
E.S. = Electric Start

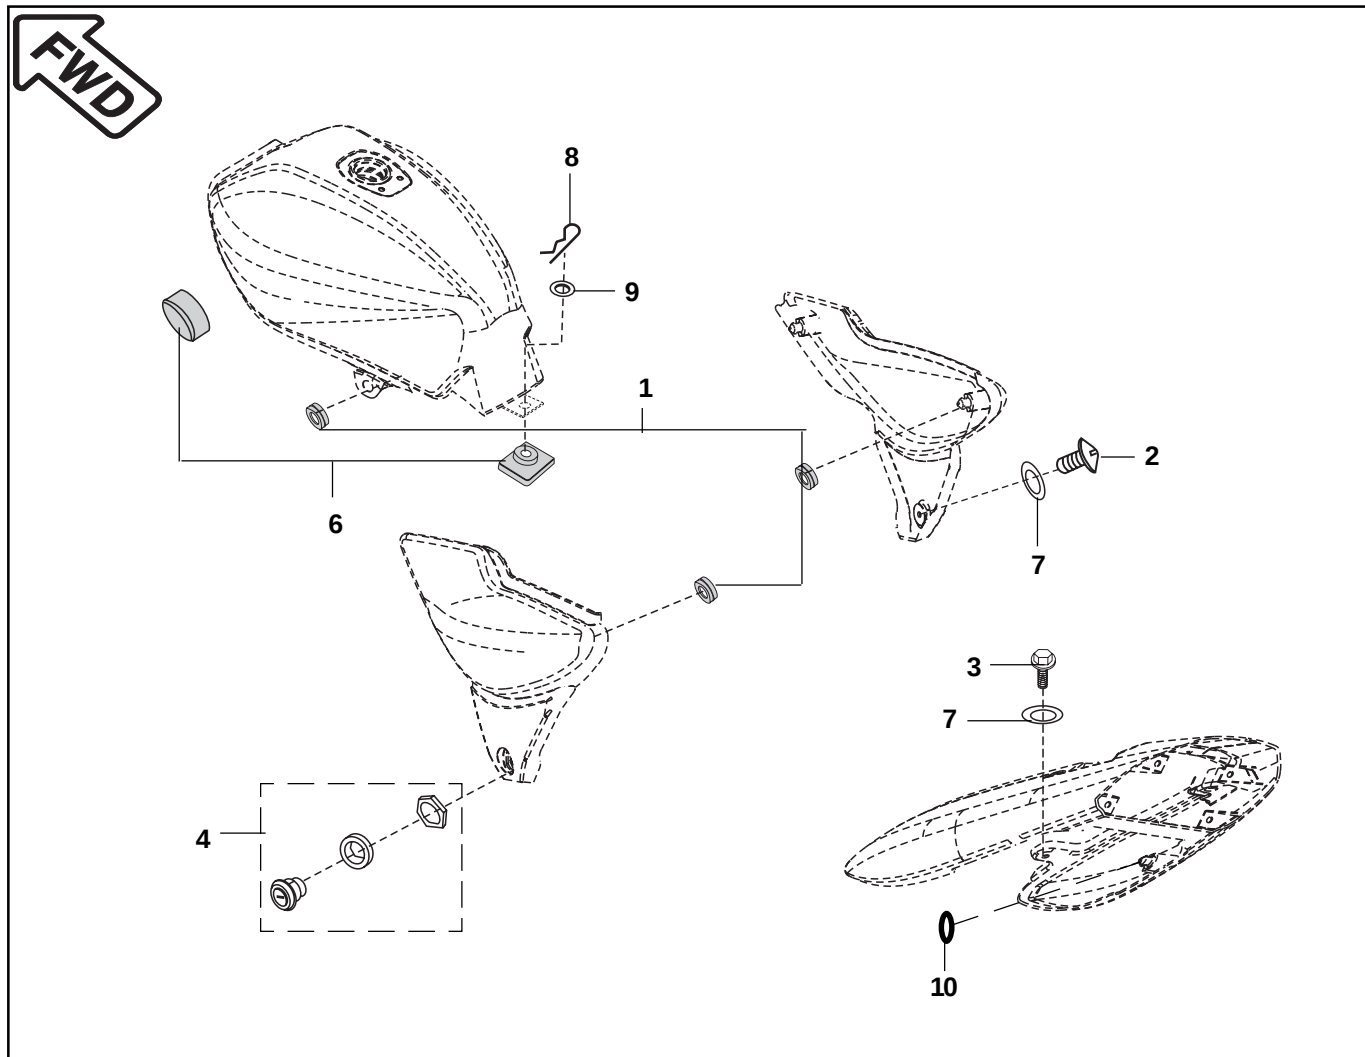


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	36 DS14 01	Grommet Kit for Side Cover	1	1	Ref. Page No.67
2	DG 1611 21	Screw	1	1	
3	39 1943 04	Flanged Bolt	2	2	
4	31 1610 06	Lock for side cover with key	1	1	
5	DS 1810 36	Lock Set (3 in 1) with Key	1	1	N.I.
6	36 DS14 02	Damper Kit Petrol Tank	1	1	Ref. Page No.67
7	39 1789 24	Washer Nylon	3	3	
8	39 0983 08	Pin Snap	1	1	
9	39 1054 11	Plain Washer	1	1	
10	DS 1610 82	Grommet Side Cover	2	2	

K.S. = Kick Start
E.S. = Electric Start

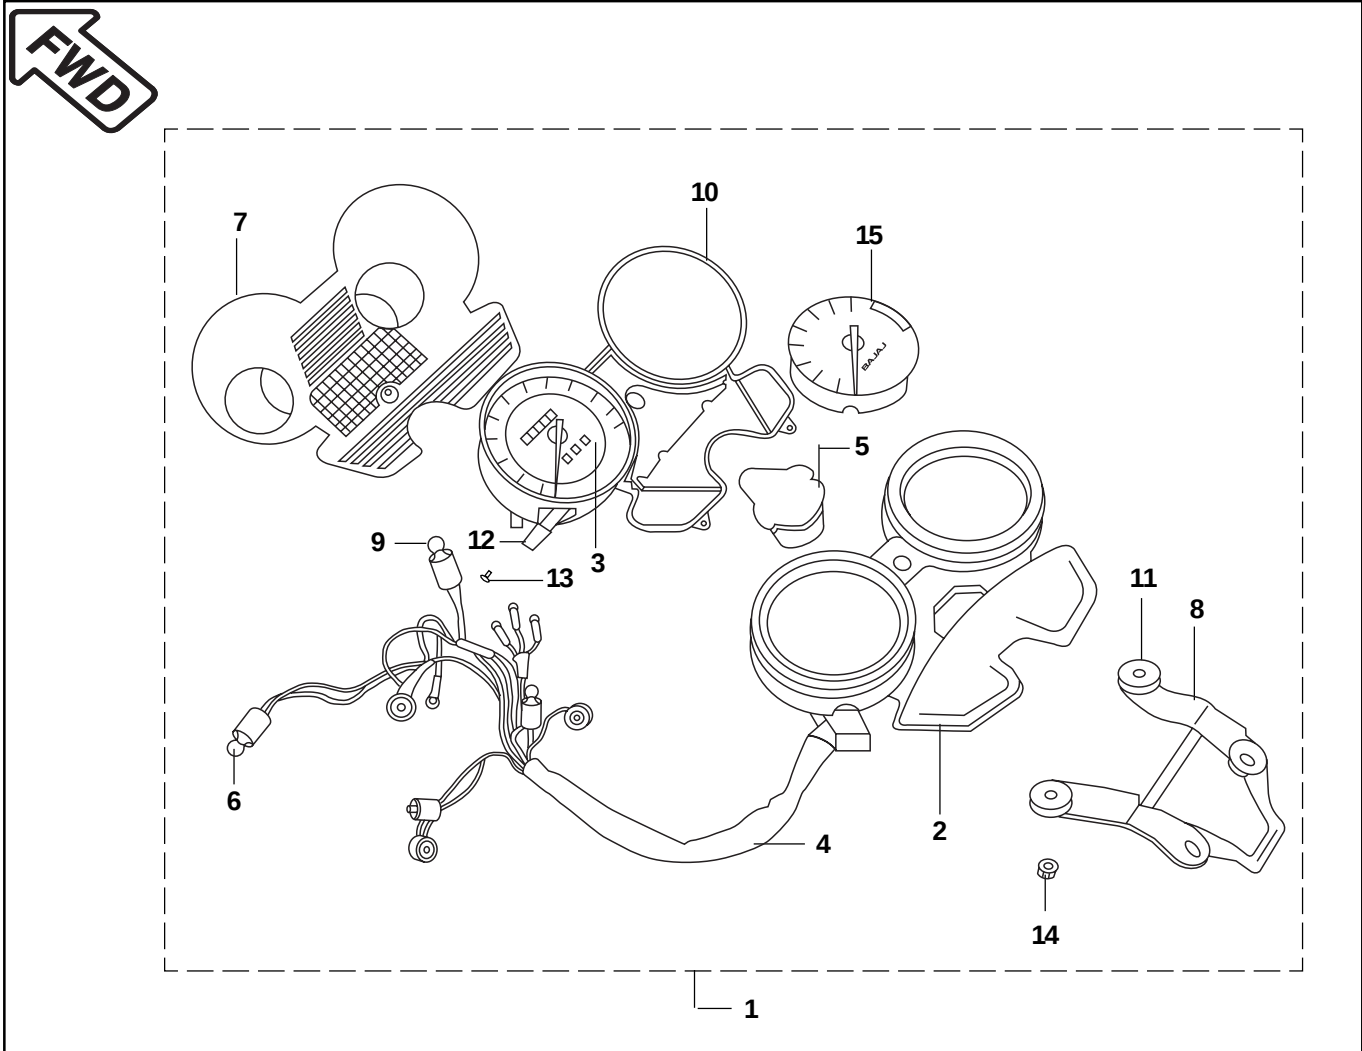


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1910 14	Meter Assly	1	1	For Alloy Wheel Vehicle only
	DS 1910 05	Meter Assly	--	1	
2	DS 1910 22	Cover Meter case Upper (Black)	1	1	
3	DS 1910 23	Speedometer	1	1	For Alloy Wheel Vehicle only
4	DS 2010 34	Harness Speedo Console	1	1	
5	DS 1910 26	Meter Fuel	1	1	
	DS 1910 25	Meter Fuel	--	1	
6	CL 2010 42	Lamp 12 V-1.7W	4	4	For Speedometer
7	DS 1910 27	Cover meter lower (Black)	1	1	
8	DS 1910 28	Bracket meter	1	1	
9	DG 2010 40	Lamp 12V - 3.4W	2	2	
10	DS 1910 29	Cover (White)	1	1	
11	DS 1910 30	Grommet special	2	2	
12	DS 1910 31	Knob for tripmeter	1	1	
13	DS 1910 32	Screw for 'Tripmeter Knob'	1	1	
14	39 0798 15	Nut	2	2	
15	DS 1910 24	Tachometer	--	1	For Alloy Wheel Vehicle only

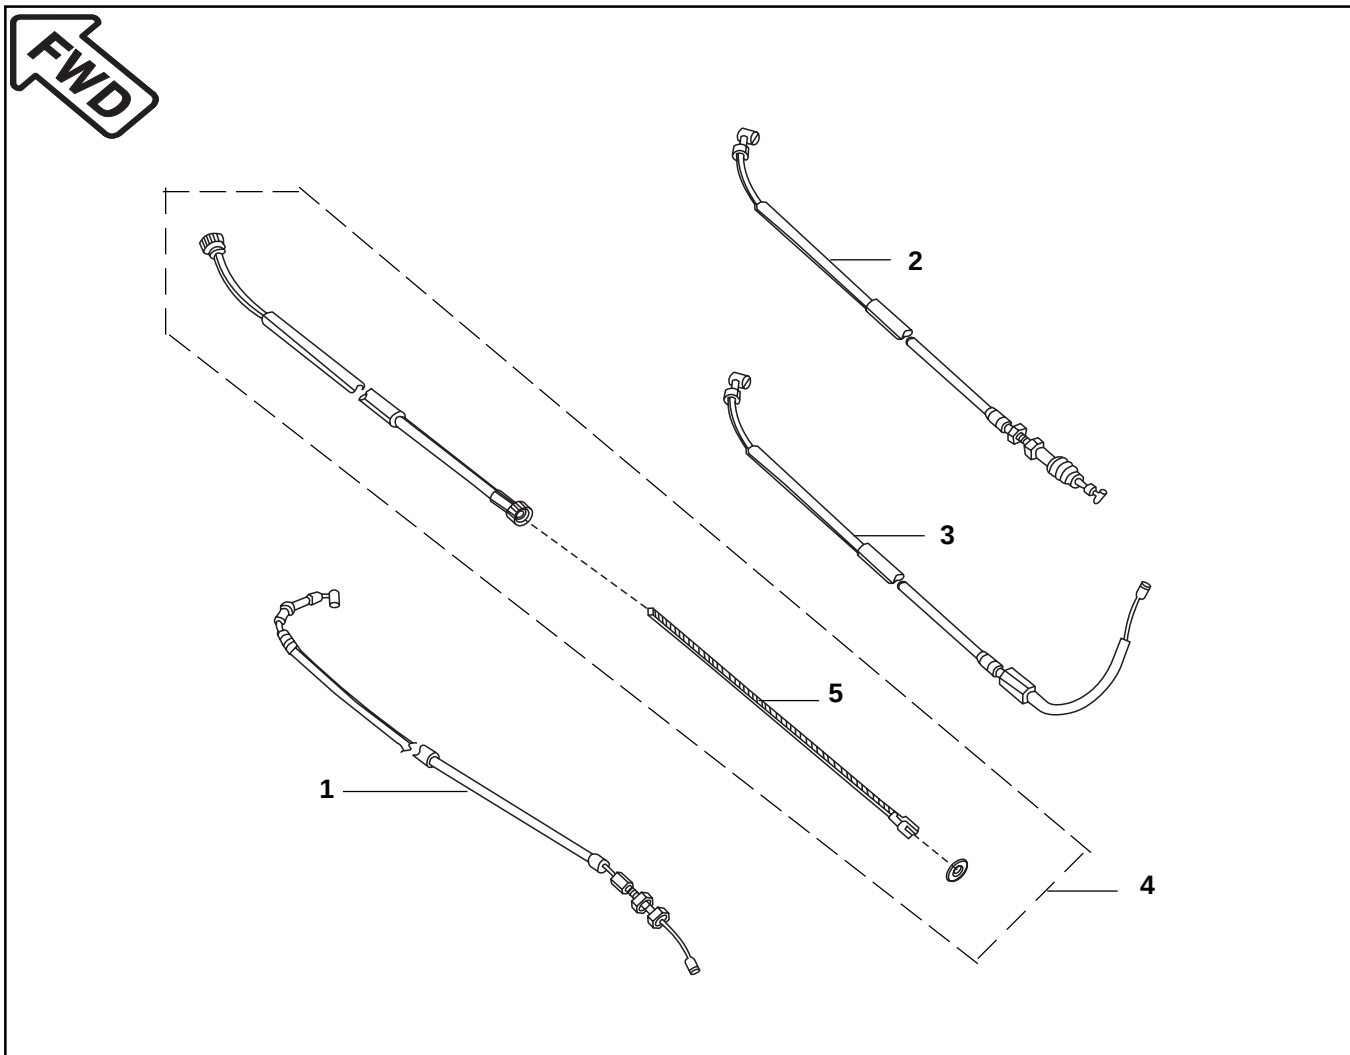


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1910 12	Cable Accelerator	1	1	For Alloy Wheel Vehicle only
2	DS 1910 01	Cable Clutch	1	1	
3	DS 1910 13	Cable Starter (Choke)	1	1	
4	DS 1910 09	Cable Speedometer	1	1	
	DS 1910 06	Cable Speedometer	--	1	
5	DS 1910 10	Inner cable Speedometer	1	1	

K.S. = Kick Start
E.S. = Electric Start

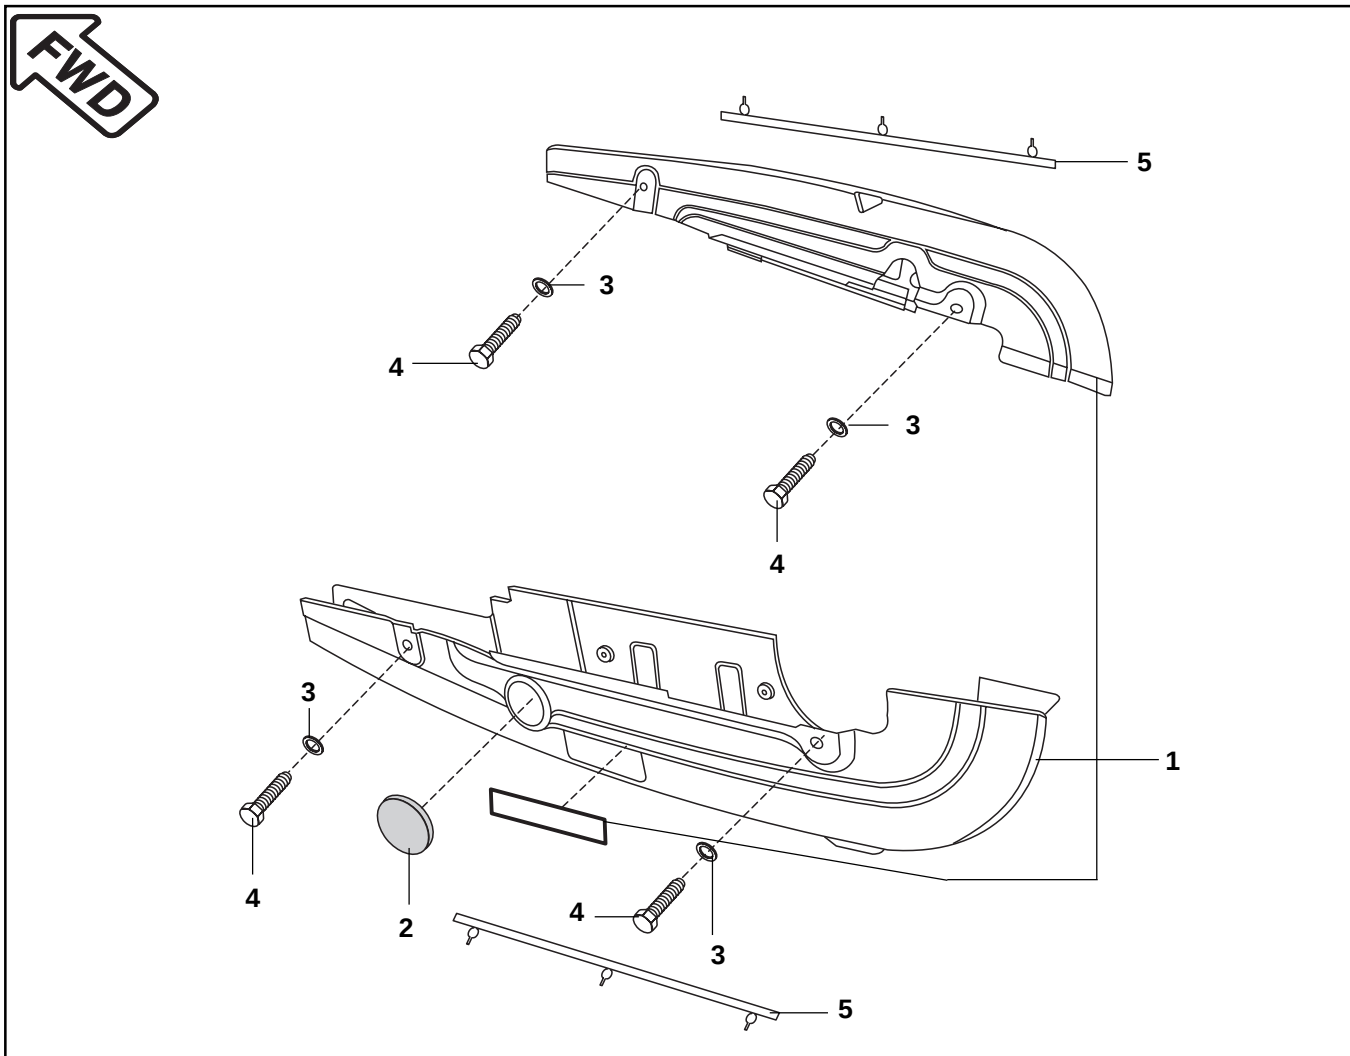


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	36 DS16 09	Case Chain Assly Kit	1	1	Ref. Page No.67 Front & Rear side Mtg.
2	15 1610 69	Rubber Cap	1	1	
3	39 0711 11	Plain Washer	4	4	
4	39 0897 04	Bolt	4	4	
5	DS 1611 64	Rubber Strip	2	2	

K.S. = Kick Start
E.S. = Electric Start

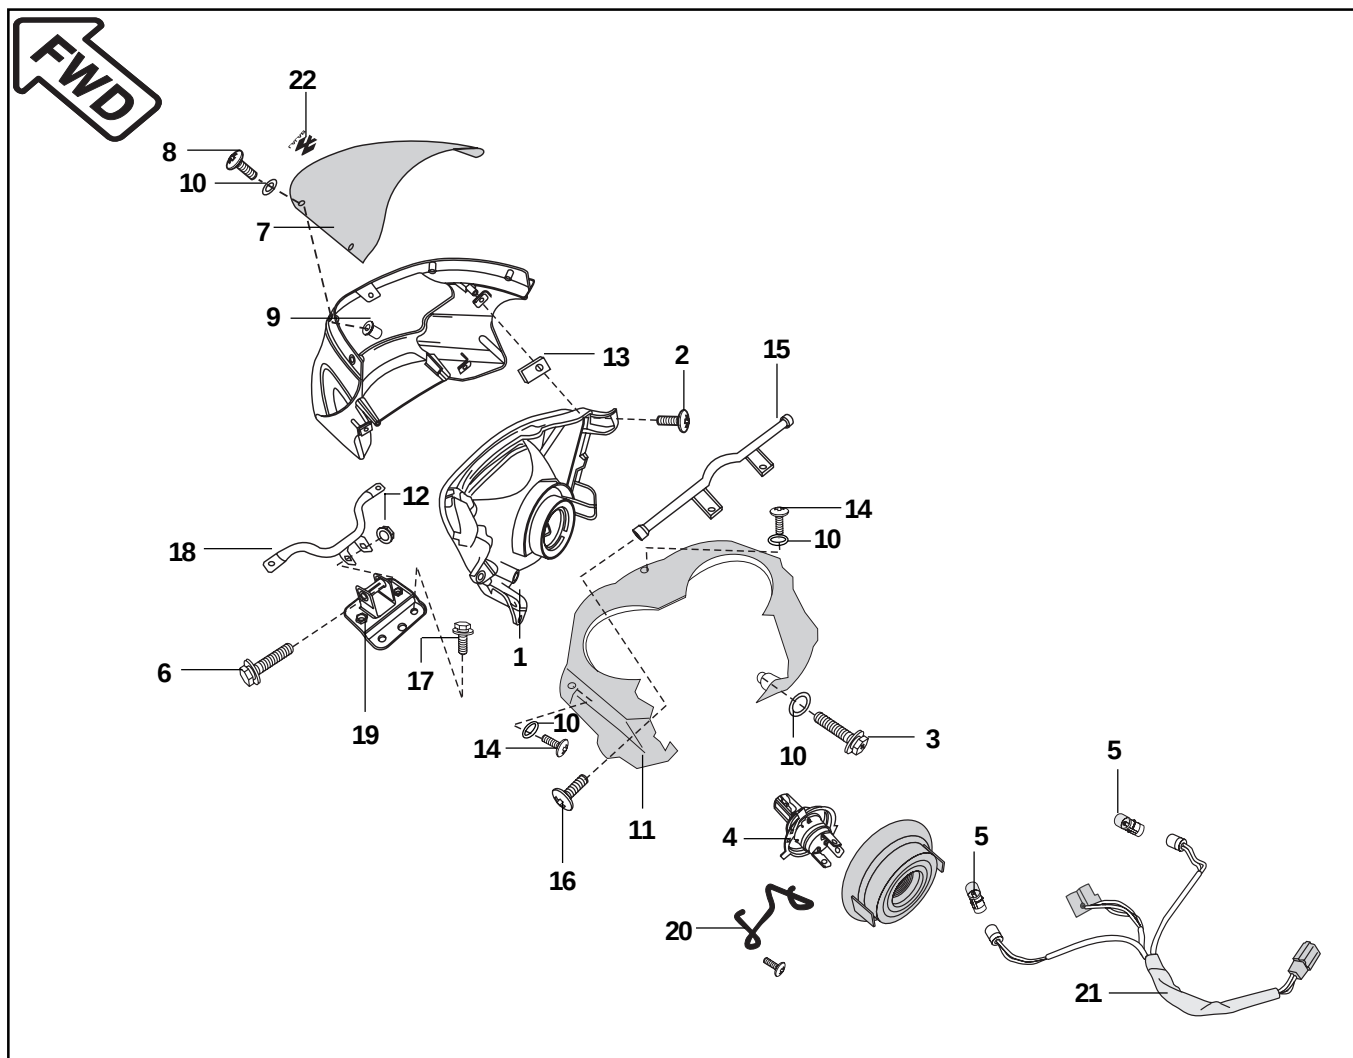


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 2010 35	Head Lamp Housing with Lens	--	1	
2	39 1778 02	Self Tapping Screw	--	4	
3	39 0716 01	Pan Head Screw	--	2	
4	DJ 2010 91	Lamp 12V 35/35W-HS1	--	1	
5	DJ 2010 72	Lamp 12V 5W	--	2	
6	39 1961 04	Hex. Flange Bolt	--	1	
7	DS 1810 66	Wind Shield	--	1	
8	DF 1810 98	Screw SS	--	4	
9	DL 1810 10	Well Nut	--	4	
10	39 2141 24	Non Metallic Washer	--	9	
11	DS 1810 31	Flap Cowling	--	1	
12	39 0817 15	Hex. Flange Nut	--	1	
13	35 1610 60	Clip Nut	--	5	
14	39 1907 01	Screw	--	3	
15	DS 1810 45	Fairing mounting upper bracket	--	1	

K.S. = Kick Start
E.S. = Electric Start


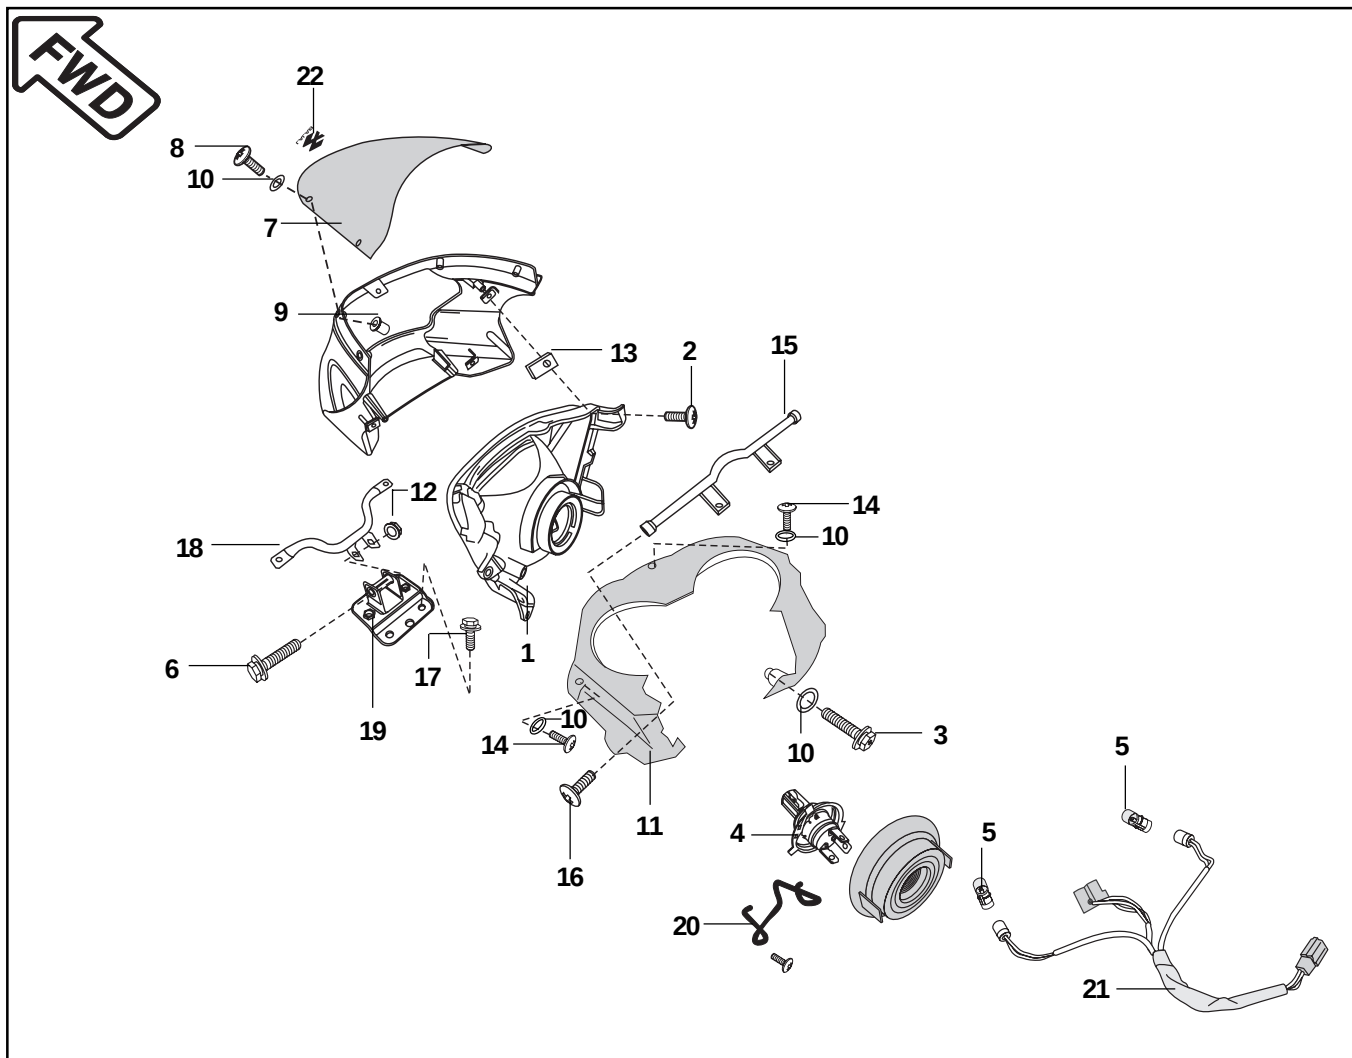


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	DG 1611 21	Screw	--	2	On Wind shield
17	39 1943 04	Flange Bolt	--	2	
18	DS 1810 29	Bracket Cowling	--	1	
19	DS 1810 46	Number Plate Bracket	1	--	
	DS 1810 27	Number Plate Bracket	--	1	
20	DS 2010 36	Head Lamp Bulb Clip	--	1	
21	DS 2010 39	Head lamp Harness Branch	--	1	
22	DS 1810 69	'B' Monogram	--	1	

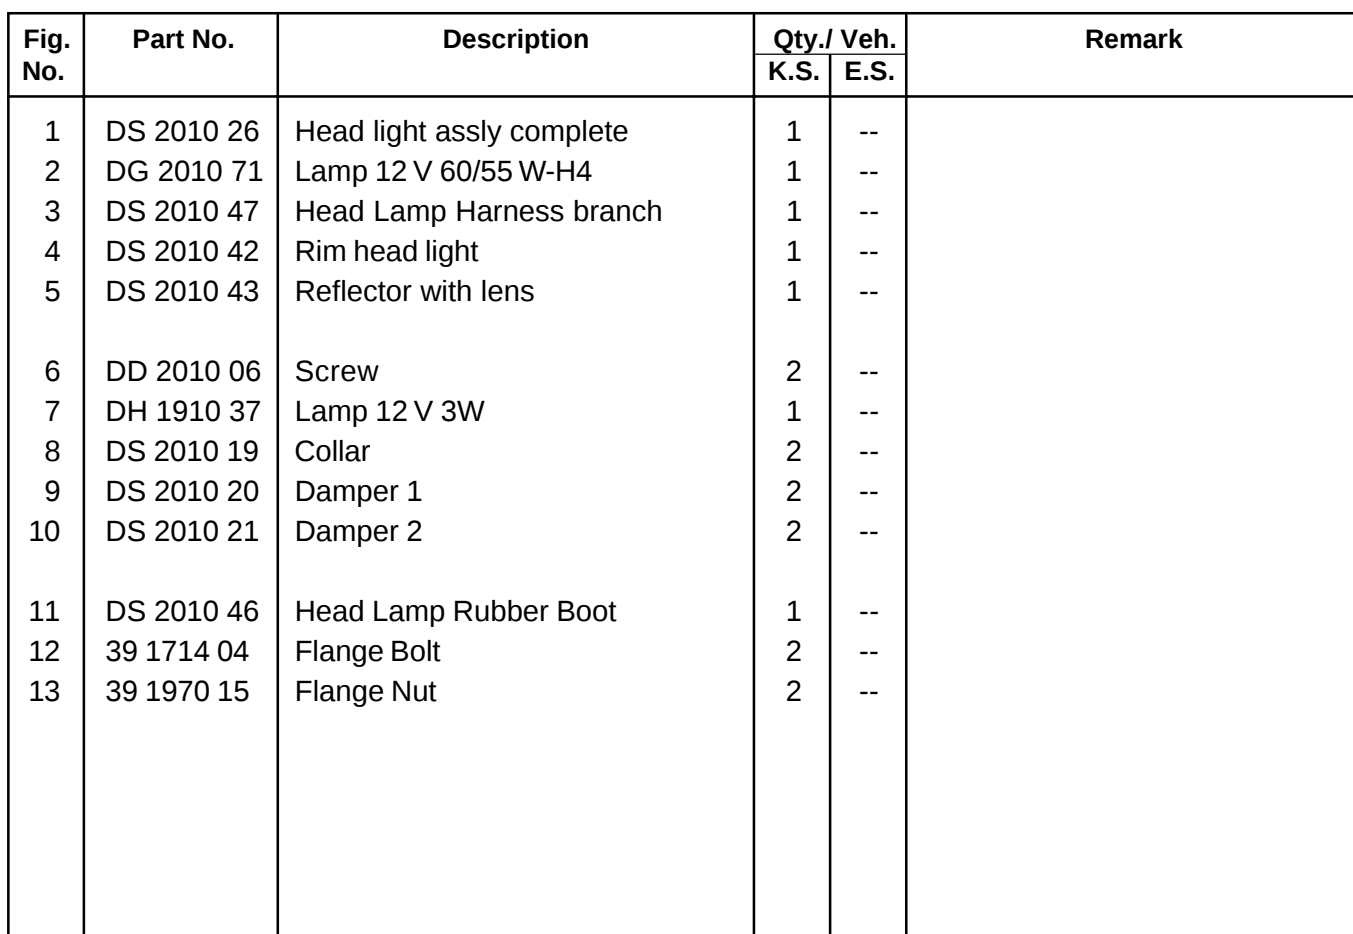

: FRONT WHEEL DIRECTION

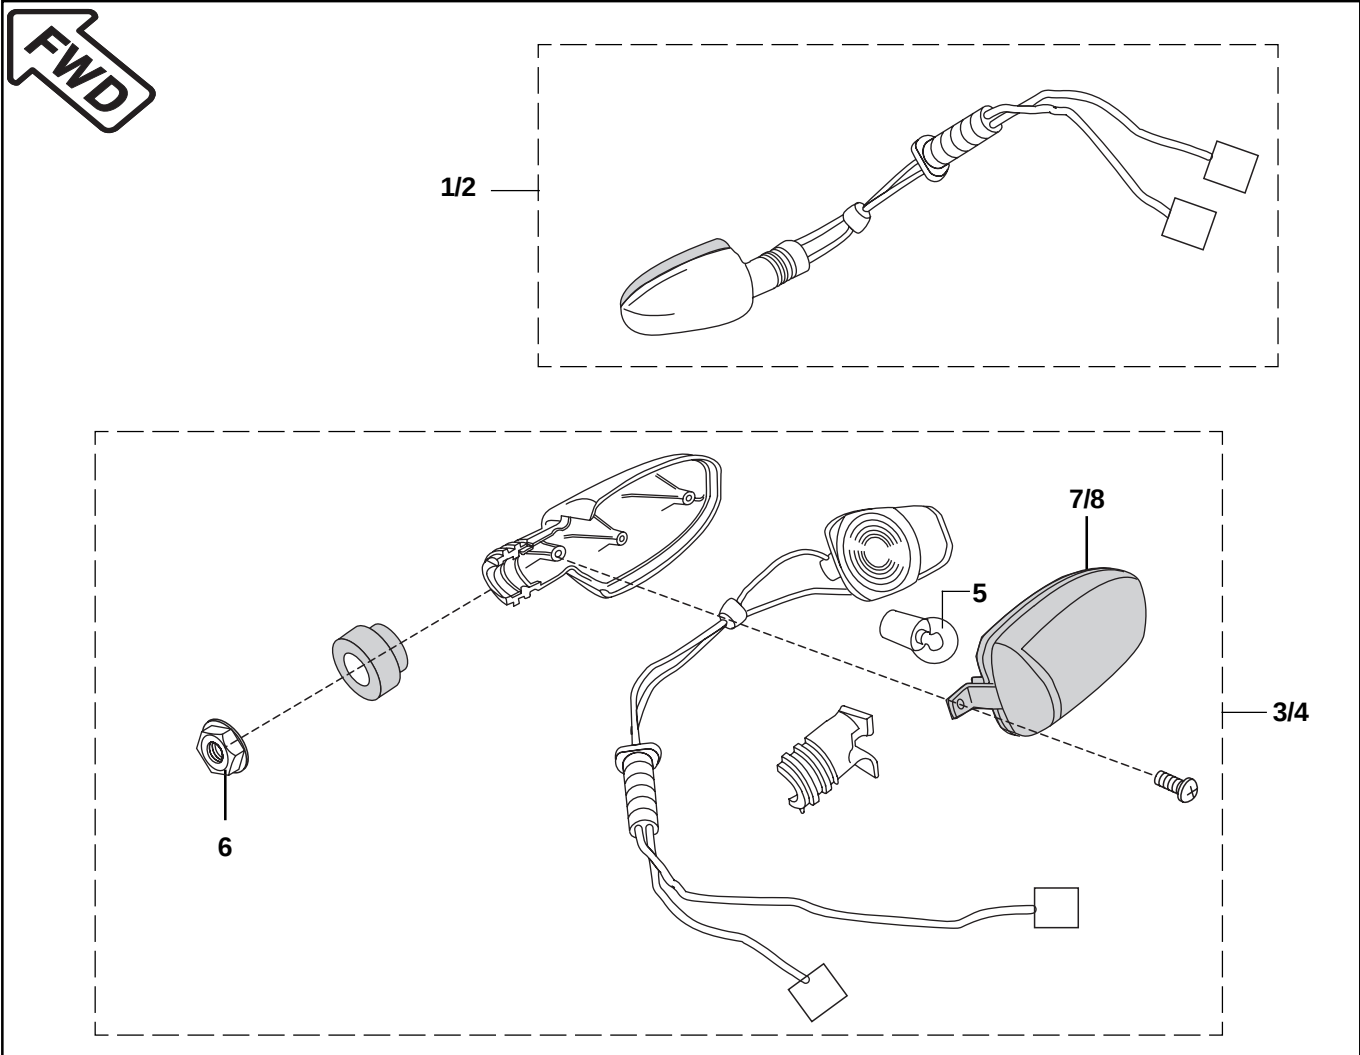


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DJ 2010 86	Blinker Fr. LH/Lamp	1	--	
	DJ 2010 82	Blinker Fr. LH/Lamp	--	1	
2	DJ 2010 87	Blinker Fr. RH/Lamp	1	--	
	DJ 2010 83	Blinker Fr. RH/Lamp	--	1	
3	DJ 2010 84	Blinker Rr. LH/Lamp	1	1	
4	DJ 2010 85	Blinker Rr. RH/Lamp	1	1	
5	06 2010 83	Lamp 12 V - 10W	4	4	
6	39 1970 15	Hex. nut with flange	4	4	
7	DJ 2010 95	Blinker Lens (LH)	2	2	
8	DJ 2010 96	Blinker Lens (RH)	2	2	

K.S. = Kick Start
E.S. = Electric Start



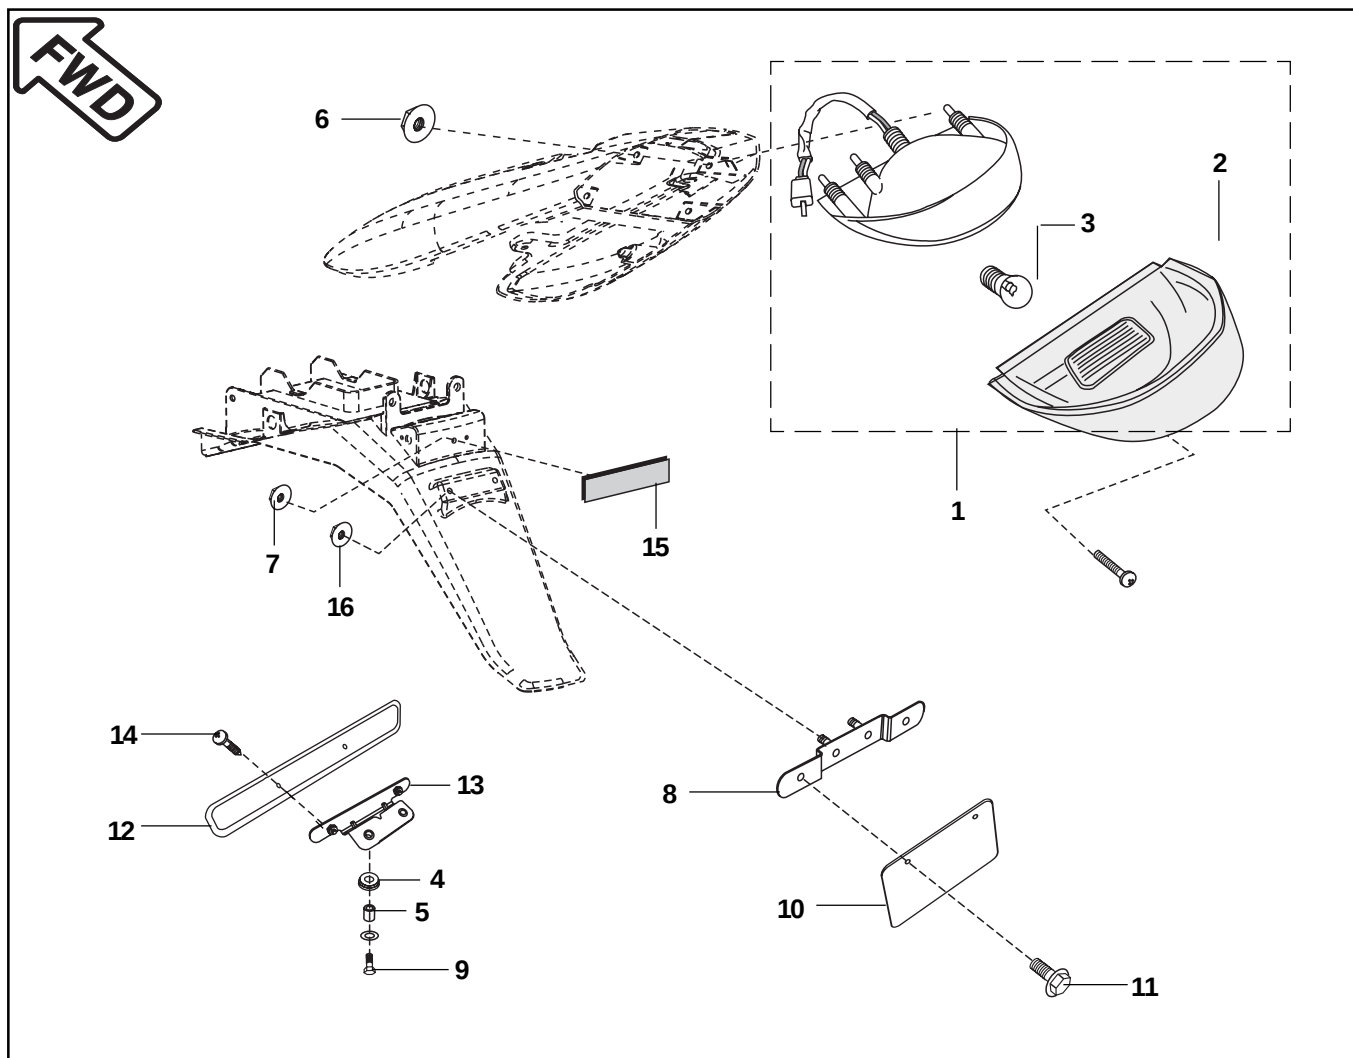


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 2010 08	Tail light with Lamp	1	1	
2	DS 2010 09	Lens tail light	1	1	
3	30 2010 06	Lamp 12 V 21/5 W	1	1	
4	DD 2010 11	Damper	2	2	
5	DJ 1810 83	Collar	2	2	
6	39 0817 15	Nut/Flange	4	4	
7	39 1972 15	Flange Nut	1	1	
8	DJ 1610 72	Bracket Rear No. Plate	1	1	
9	39 1062 04	Bolt flange	2	2	
10	DP 1611 45	Number plate Rear	1	1	
11	39 1943 04	Hex Flanged Bolt	2	2	
12	DP 1611 44	Number plate front	1	1	
13	DS 1810 26	Front No. Plate Mounting Bracket	1	1	
14	39 1783 01	Truss Screw (For Front No. Plate)	2	2	
15	DS 2010 15	Reflector Reflex	1	1	
16	39 1972 15	Flanged Nut	2	2	

K.S. = Kick Start
E.S. = Electric Start

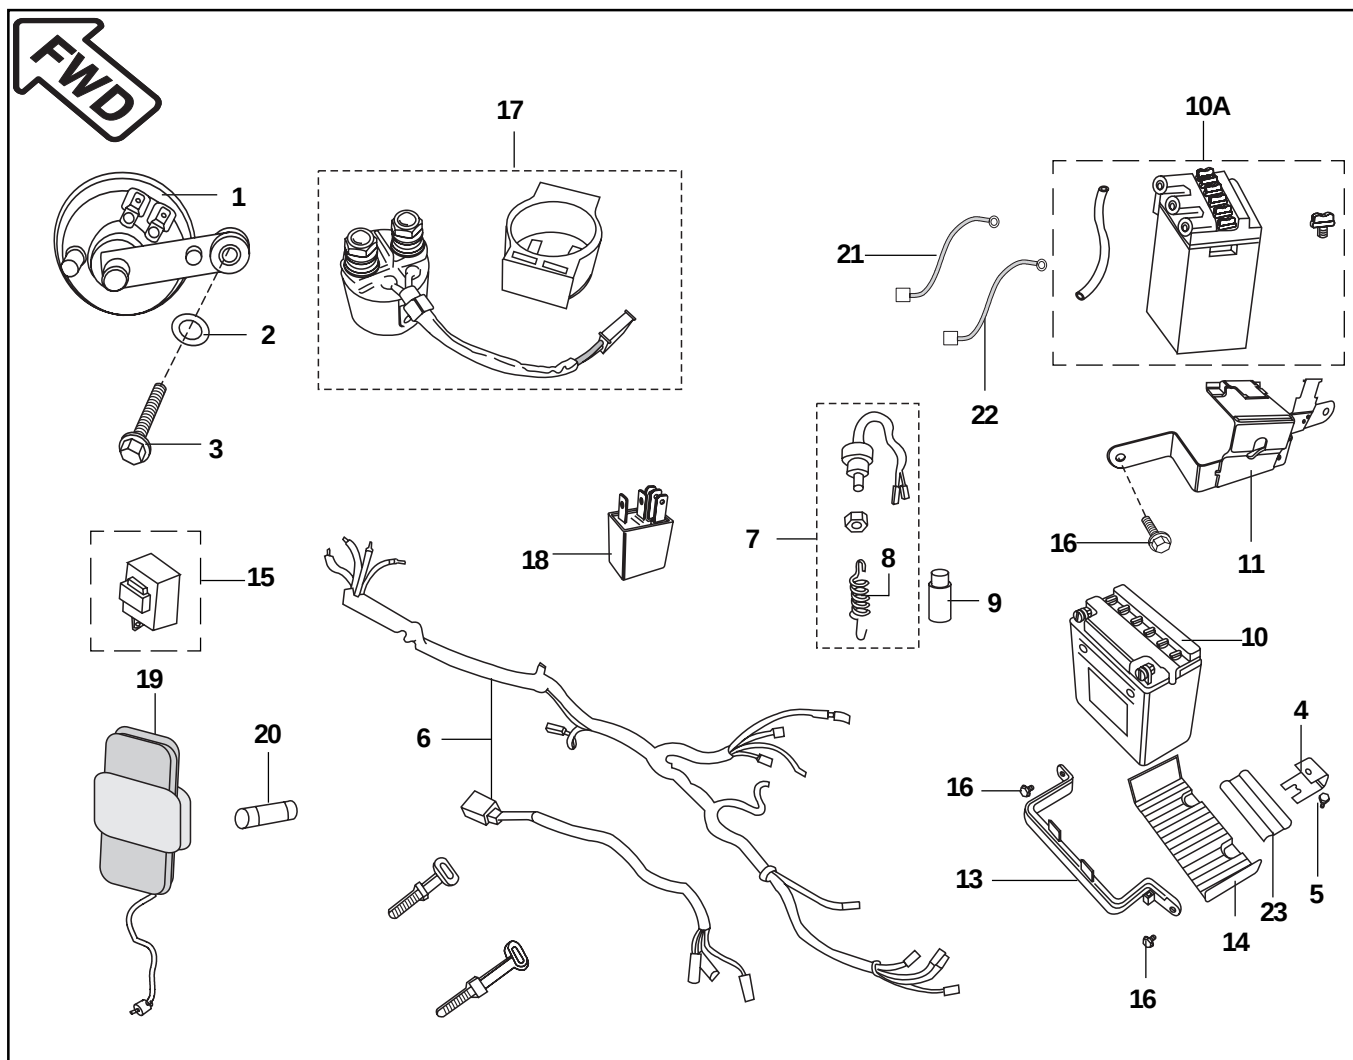


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 2010 16	Horn LH with Stay	1	1	
2	39 1507 11	Plain Washer	1	1	
3	39 1956 04	Flange Bolt	1	1	
4	DS 1611 23	Bracket Battery Arrestor	--	1	
5	39 1943 04	Flanged Bolt	--	1	
6	DS 2010 53	Wiring Harness	1	--	
	DS 2010 56	Wiring Harness	--	1	
7	DS 2010 29	Rear Brake Switch	1	1	
8	DS 1910 07	Spring Brake Switch	1	1	
9	DH 2010 19	Grommet Rear Brake Switch	1	1	
10	DJ 2010 36	Battery 9Ah	--	1	Not Serviceable
10A	DH 2010 17	Battery With Coupler	1	--	Not Serviceable
11	DS 1611 06	Band Battery II	1	--	
12	DS 1611 18	Base Battery II	1	--	
13	DS 1611 05	Band Battery I	--	1	
14	DS 1611 16	Base Battery I	--	1	
15	DS 2010 25	Assly DC flasher / damper	1	1	

K.S. = Kick Start
E.S. = Electric Start

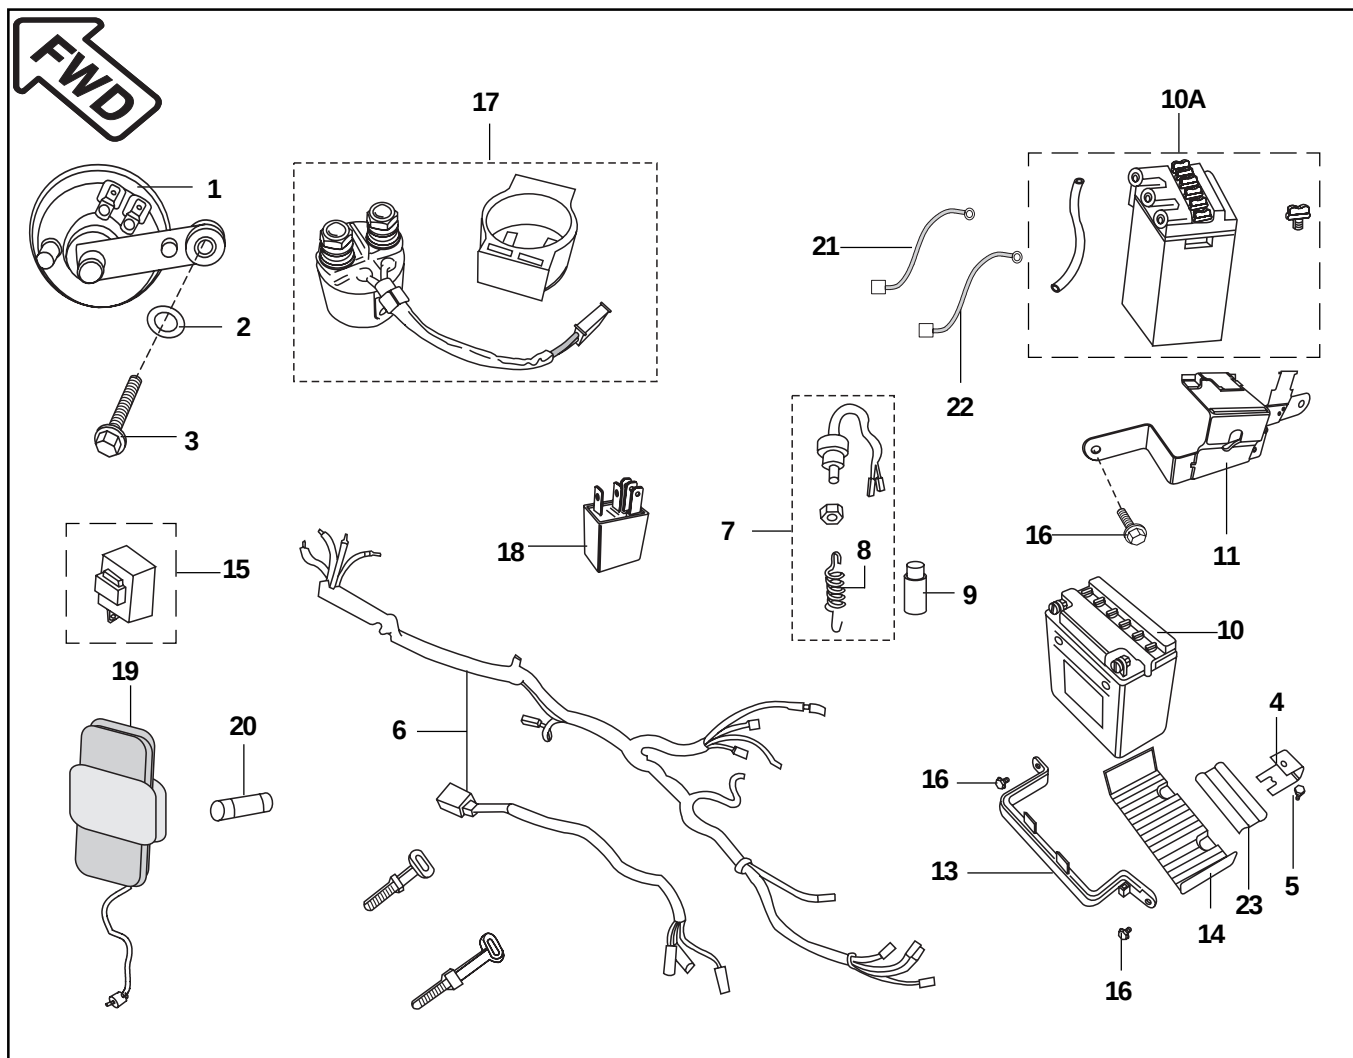


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
16	39 2208 04	Mashroom head Screw	2	2	
17	DS 2010 48	Starter Relay / Damper	--	1	
18	DJ 2010 28	Relay for Interlock	--	1	
19	30 2011 04	Fuse box Assly.	1	1	
20	30 2010 85	Fuse	1	1	
21	DS 2010 22	Cable assly. (Battery to St.Relay)	--	1	
22	DS 2010 23	Cable assly. (Battery to Earth)	--	1	
23	DS 1611 04	Battery Arrestor	--	1	

K.S. = Kick Start
E.S. = Electric Start

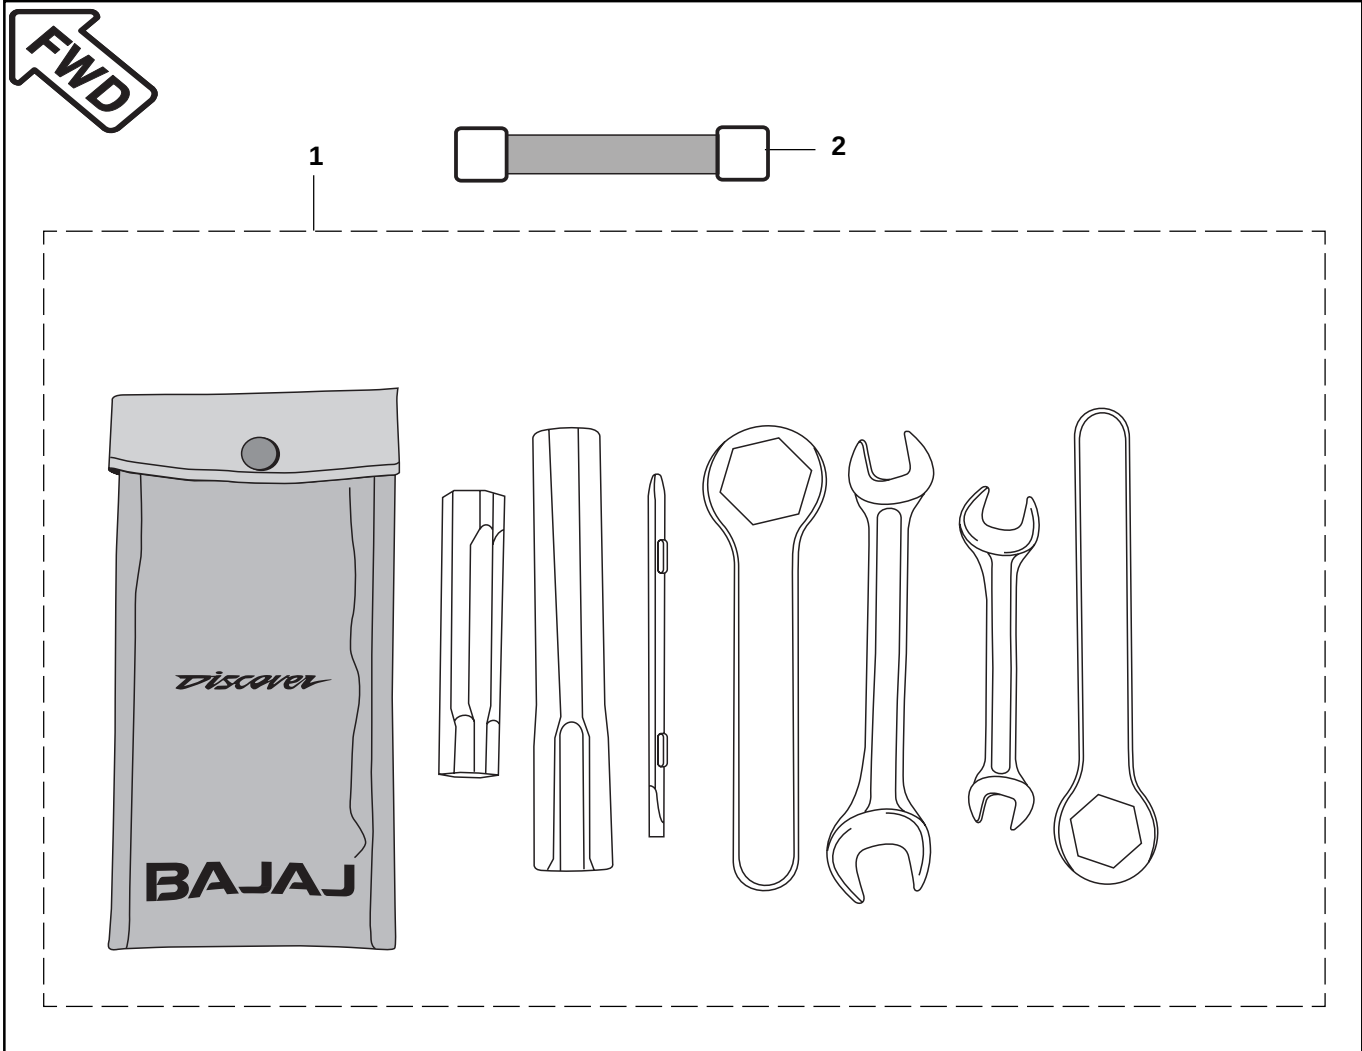


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 2210 02	Tool Kit	1	1	For reference only. Not serviced separately
*		Tool Driver	1	1	
*		Tool Wrench (Box 16 mm)	1	1	
*		Tool Wrench (10 X 13)	1	1	
*		Tool Wrench (14 X 17)	1	1	
*		Tool wrench (27 A/F)	1	1	
*		Tool wrench (22 A/F)	1	1	
*		Extension Rod	1	1	
*		Tool Bag	1	1	
2	DP 2210 24	Band Tool Kit	1	1	

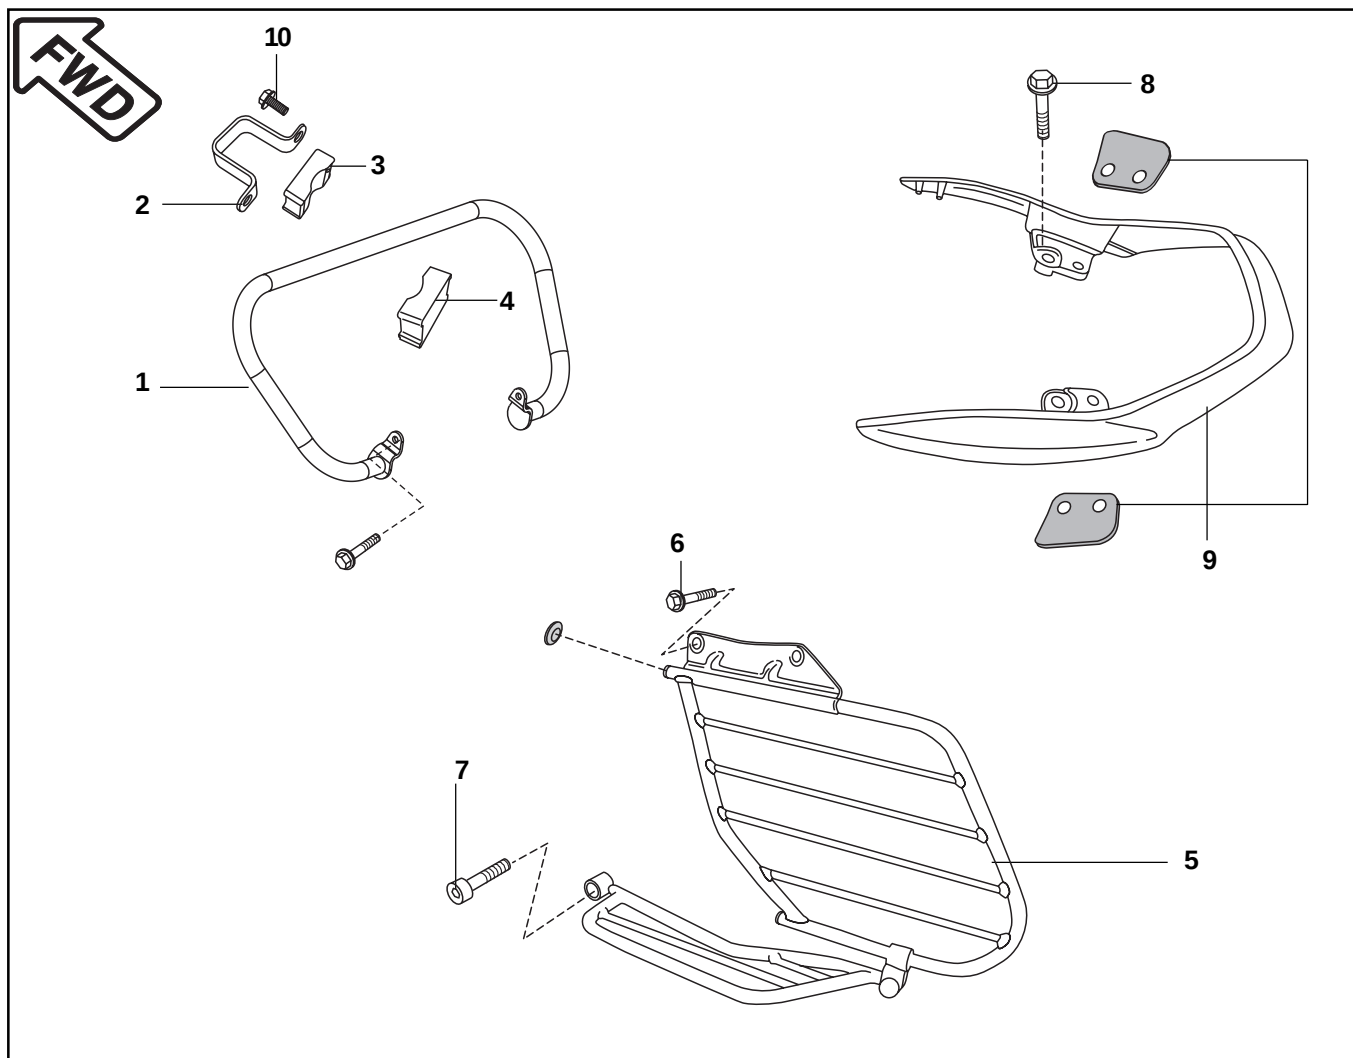


Fig. No.	Part No.	Description	Qty./ Veh.		Remark
			K.S.	E.S.	
1	DS 1611 00	Leg Guard	1	1	For Mounting Leg Guard
2	DS 1610 89	Leg guard Bracket	2	2	
3	DS 1610 87	Spacer leg guard I	2	2	
4	DS 1610 88	Spacer leg guard II	2	2	
5	DS 1610 99	Sari Guard	1	1	
6	39 1714 04	Flange Bolt	2	2	
7	39 2495 04	Soc. Head Bolt	1	1	
8	39 1681 04	Flange Bolt	4	4	
9	DS 1611 32	Grab Handle with foam	1	1	
10	39 2214 04	Bolt	4	4	

K.S. = Kick Start
E.S. = Electric Start

KITS LIST FOR *Discover*

SNo.	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty./Kit
1	36DS1001	Cyl.Head O Ring Kit	39239121	O Ring (Cover tappet)	2
			39128321	O ring	2
2	36DS1002	Valve Kit	DS101023	Valve Intake	1
			DS101024	Valve Exhaust	1
3	36DS1003	Valve Repair Kit	DS101083	Retainer valve spring	2
			DS101110	Spring valve inner	2
			DS101111	Spring valve outer	2
			DH101026	Seat valve spring	2
4	36DS1004	Guide Chain Kit	DS101012	Guide chain (Tight)	1
			DS101011	Guide Chain (slack)	1
5	36DS1007	Boss Kick Set	DH101185	Spring Kick Starter Arm	1
			DH101068	Ball steel	1
			DS101208	Base kick lever	1
			DH101320	Hex. bolt with flange(N.I.)	1
			39204501	C'sunk Head Screw	1
7	36DS1201	Carb.Vaccum Piston Kit	DS121055	Vaccum Piston Comp.	1
			DS121073	Coil Spring	1
			DS121057	Diaphragm	1
8	36DS1202	Jet Holder Kit	DS121068	Main jet (MJ)	1
			DS121067	Jet holder	1
			DS121069	Pilot Jet (PJ)	1
9	36DS1203	Idling Screw Set	DS121073	Coil Spring (CO)	1
			DS121072	Adjust Screw	1
10	36DS1204	Air cleaner Hose Kit	DS121117	Hose Air Cleaner Drain	1
			DS101235	Clamp	1
			DP121021	Plug	1
11	36DS2101	Seat Damper Kit	DS211004	Damper Seat - I	7
			DS211005	Damper Seat - II	2
12	36DS1601	Eng.Mtg.Plate Set	DS161031	Bkt. Engine Hanger LH	1
			DS161128	Bkt. Engine Hanger RH	1
			DS161056	Bkt. RH eng.rear Mounting II	2
13	36DS1602	Eng.Mtg.Bkt. Set With Silent Bush	DS161130	Bkt. LH eng.mtg.front Assly.	1
			DS161131	Bkt. RH eng.mtg.front Assly.	1
14	36DS1802	Bearing cone kit	DH181025	Bearing cone	1
			DH181026	Bearing race	1
			DH181024	Upper bearing race	1
15	36DS1502	SpeedoGear Kit	DL151014	Speedometer gear	1
			30151041	Gear Meter Screw	1
16	36DS1504	Chain Sprocket Kit	DS151059	Sprocket Hub (45T)	1
			DJ151038	Chain (122 Links)	1
			DS101197	Sprocket Drive	1

SNo.	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty./Kit
22	36DS1801	Holder Handle Set	DS181019	Holder handle	2
			DS181006	Holder handle	2
23	36DS1605	Decal Set-Magic Silver	DS141023	Tank Decal-Magic Silver	2
			DS161152	Decal Side Cover Silver	2
24	36DS1606	Decal Set-Ebony Black	DS141022	Tank Decal-Ebony Black	2
			DS161151	Decal Side Cover Ebony Black	2
25	36DS1607	Decal Set-Flame Red	DS141024	Tank Decal-Flame Red	2
			DS161153	Decal Side Cover Flame Red	2
26	36DS1608	Decal Set-Metallic Blue	DS141025	Tank Decal-Metallic Blue	2
			DS161154	Decal Side Cover Metallic Blue	2
27	36DS1611	Decal Set-Bronze Gold Metallic	DS141026	Tank Decal	2
			DS161057	Side Cover Decal	2
28	36DS1610	Decal Set-Orange Copper Mica	DS141027	Tank Decal	2
			DS161058	Side Cover Decal	2
29	36DS1401	Grommet Kit-Side Cover	DS141012	Grommet side cover Front	2
			DS161082	Grommet side cover Rear	2
30	36DS1402	Damper Kit-Petrol Tank	DS141021	Damper	1
			DJ141008	Damper front	2
31	36DS1609	Case chain assly	DS161070	Case Chain Upper Assly	1
			DS161073	Case Chain Lower Assly	1
			DH161073	Instruction Label	1

[illegible]

[illegible]

[illegible]

