

FIG.1

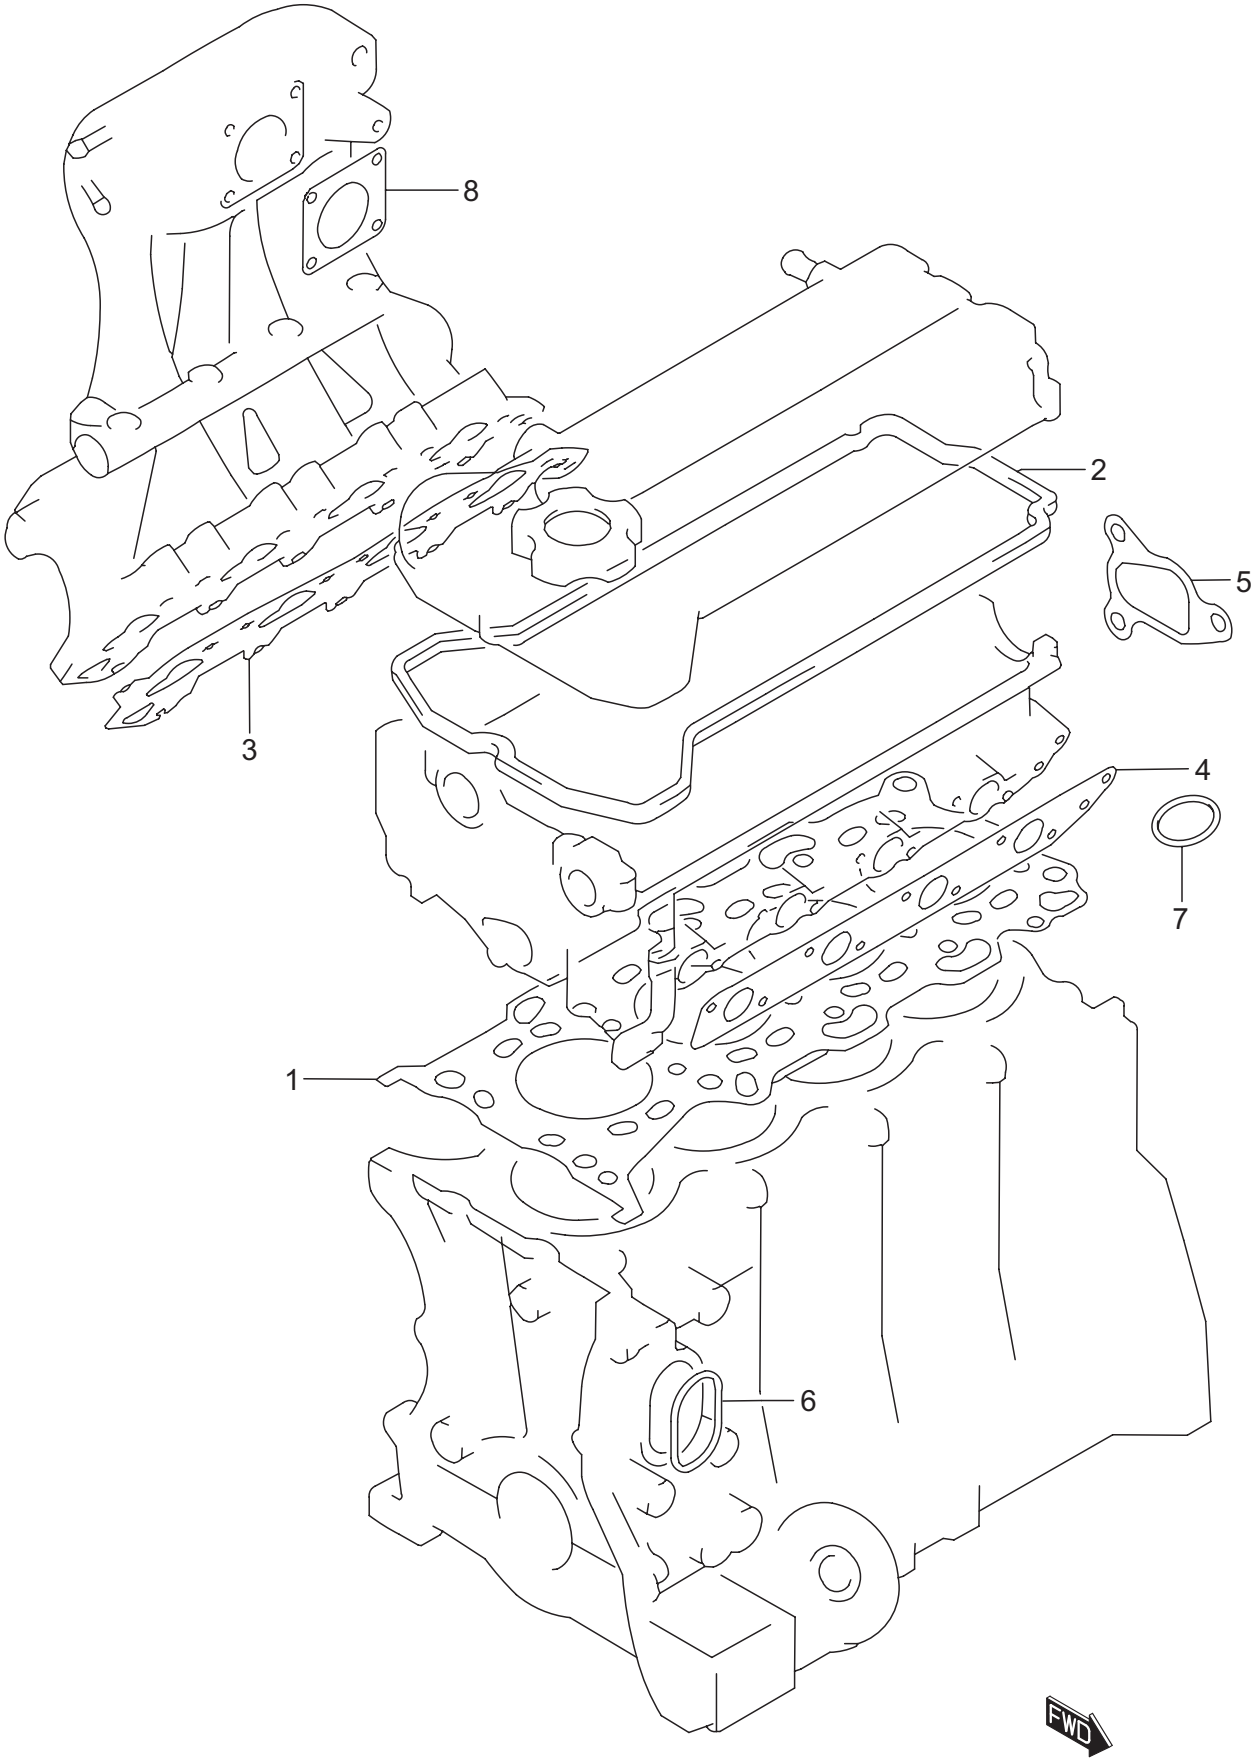


FIG.Nº.1 - ENGINE GASKET SET

REF.Nº. PARTE	DESCRIPCION	CXV	OBSERVACIONES
	11401-75831	GASKET SET, ENGINE	1
1	11141-75F30	.GASKET, CYLINDER HEAD	1
2	11189-75F01	.GASKET, CYLINDER HEAD COVER	1
3	13119-75F00	.GASKET, INTAKE MANIFOLD	1
4	14141-75F00	.GASKET, EXHAUST MANIFOLD	1
5	17699-73G01	.GASKET, THERMOSTAT CASE	1
6	17611-73G00	.O RING, WATER PUMP	1
7	17849-53E00	.O RING, WATER INLET PIPE	1
8	13421-75F00	.GASKET, THROTTLE BODY	1

FIG.2

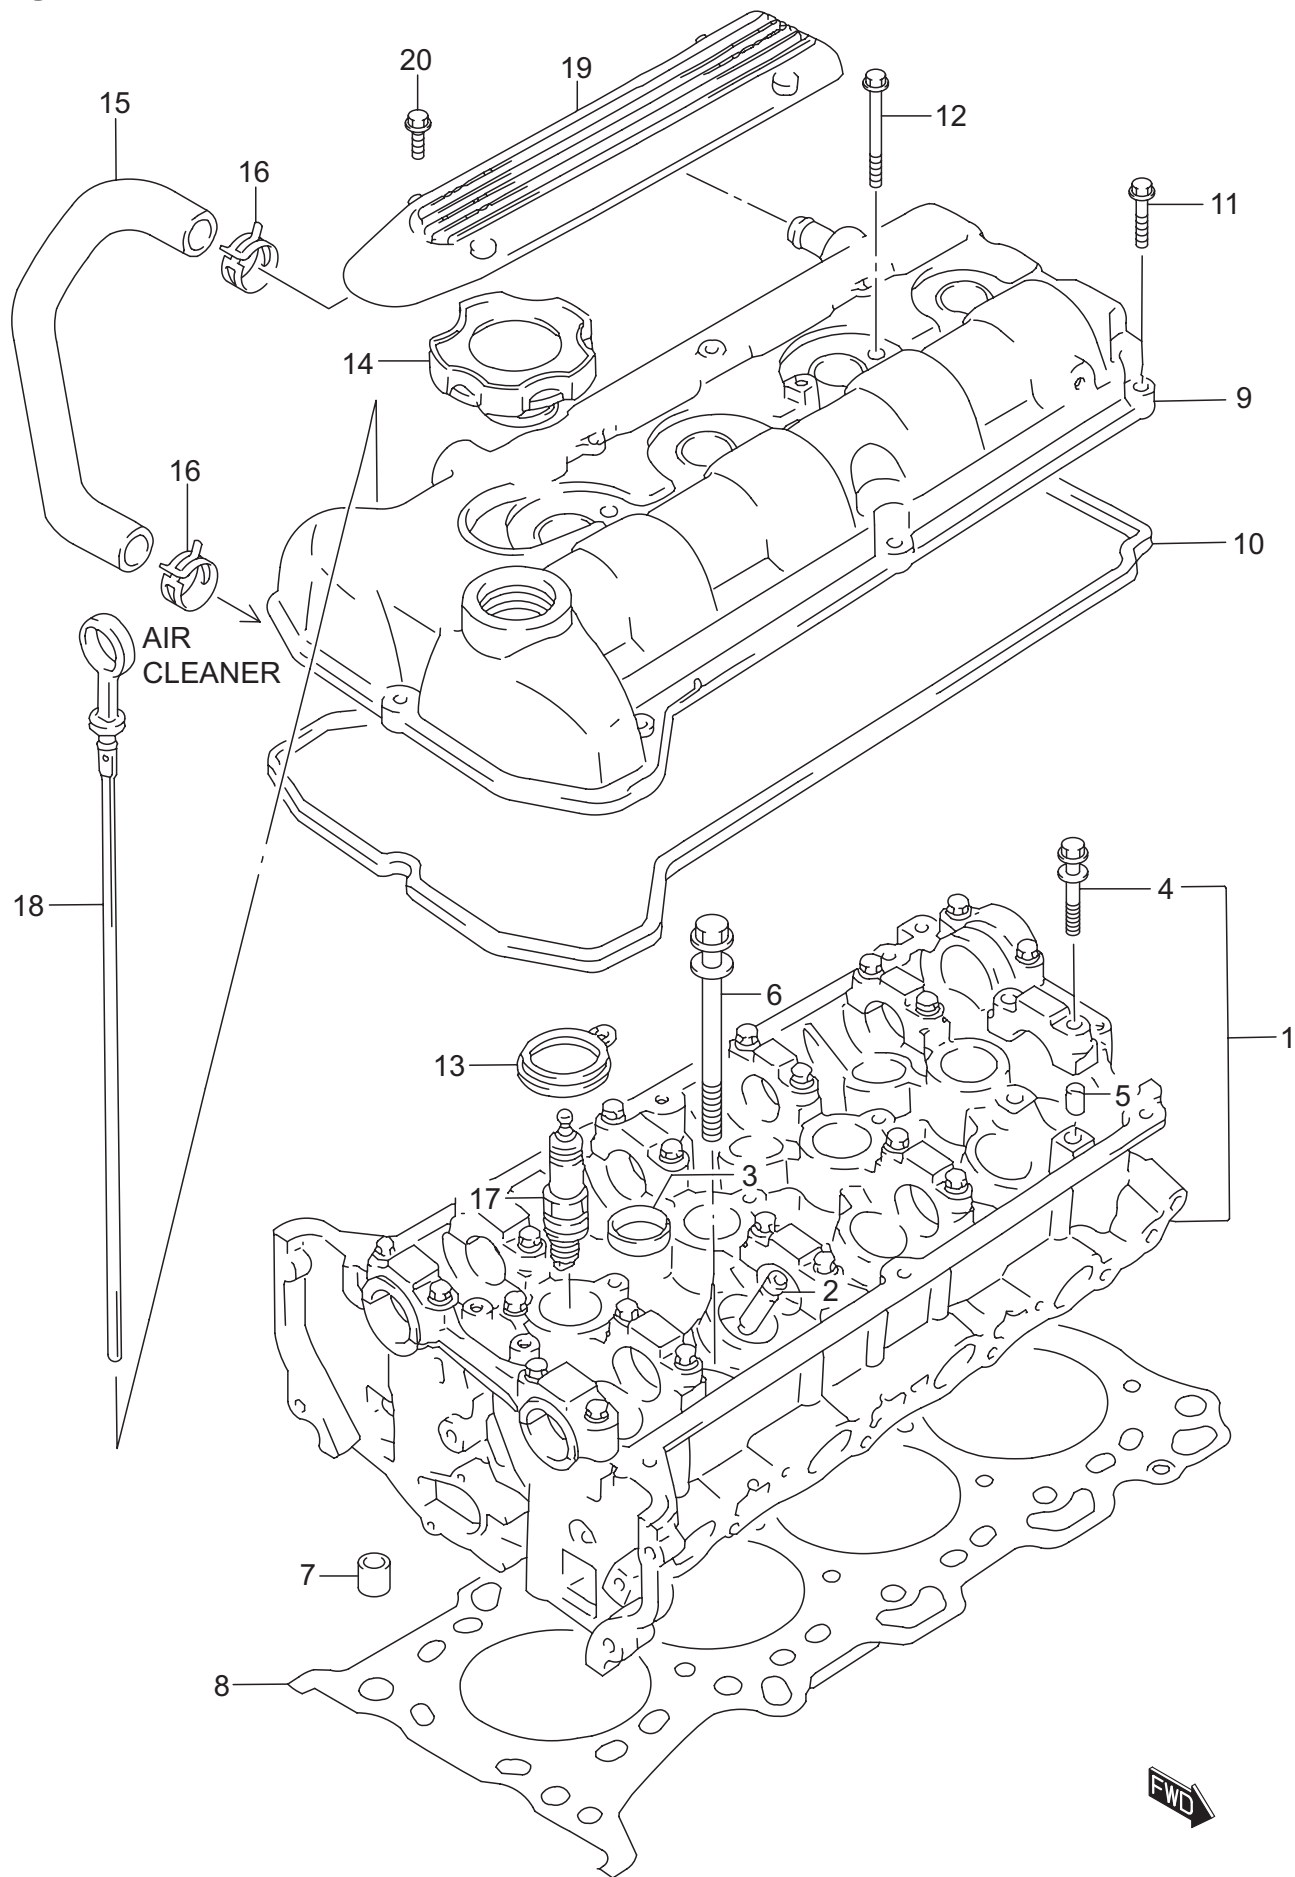


FIG.Nº.2 - CYLINDER HEAD

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1-1	11100-75F00	HEAD ASSY, CYLINDER	1	→11100-75F01 USED WITH 12921-78G20 (16PCS)
1-2	11100-75F01	HEAD ASSY, CYLINDER	1	2000-1~
2	11115-73G01-001	.GUIDE, VALVE	16	
3	09241-20006	.PLUG (OD:20)	3	
4	11128-73G60	.BOLT, CAM SHAFT HOUSING	23	
5	09206-08001	.PIN (6.2X8X11)	20	
6	11117-73G00	BOLT, CYLINDER HEAD	10	
7	04211-13189	PIN	2	
8	11141-75F30	GASKET, CYLINDER HEAD	1	
9	11170-75F03	COVER, CYLINDER HEAD	1	
10	11189-75F01	GASKET	1	
11	01550-06253	BOLT	7	
12	01547-06553	BOLT	2	
13	11179-73G00	GASKET, SPARK PLUG HOLE	4	
14	16920-69G10	CAP, OIL FILLER	1	
15	11191-75F00	HOSE, BREATHER	1	
16	09401-18404	CLIP	2	
17-1	09482-00448	SPARK PLUG (NGK,DCPR7E)	4	
17-2	09482-00449	SPARK PLUG (DENSO,XU22EPR-U)	4	
18	16910-75F00	GAUGE, OIL LEVEL	1	
19	11180-75F01	COVER, CYLINDER HEAD UPPER	1	
20-1	01547-06163	BOLT	4	
20-2	09103-06232	BOLT (6X16)	4	2001-4~

FIG.3

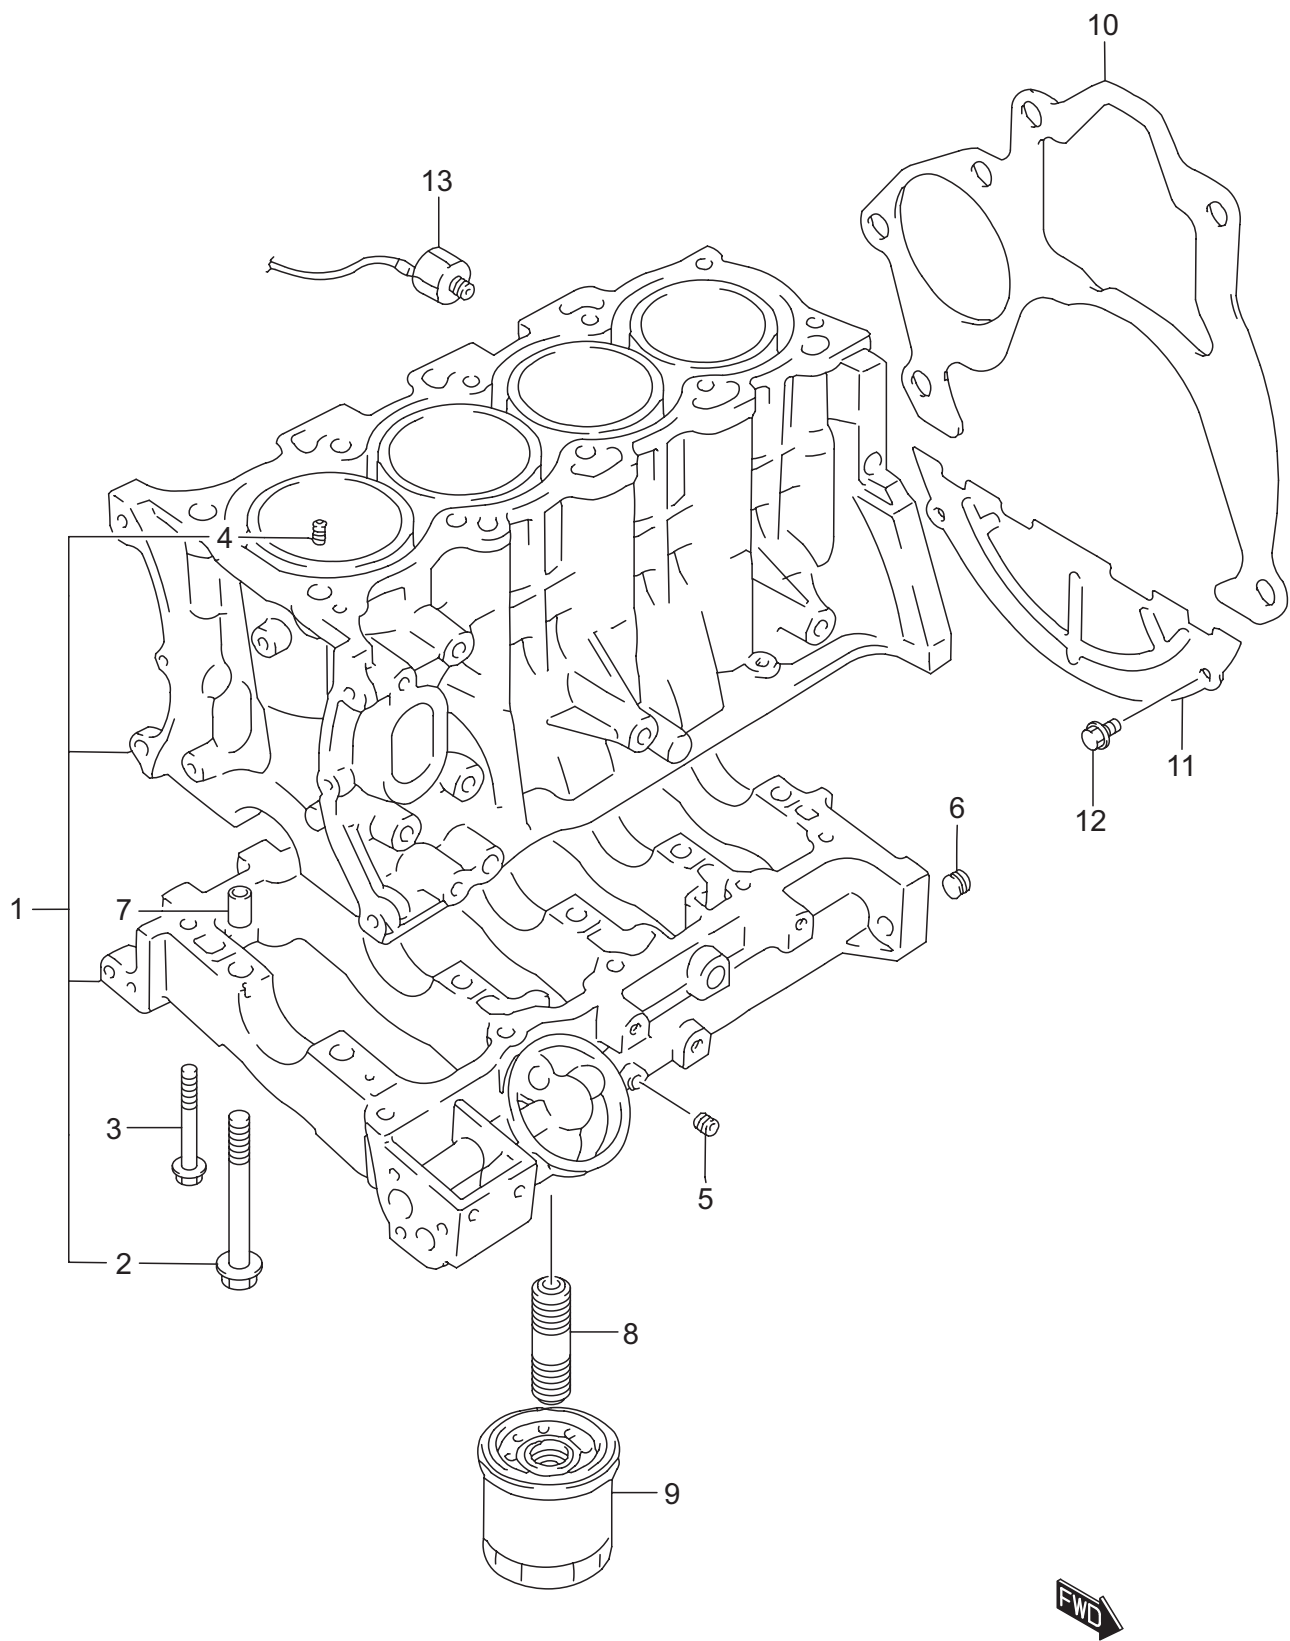


FIG.Nº.3 - CYLINDER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	11200-75F30	BLOCK ASSY, CYLINDER	1	
2	11117-73G00	.BOLT, CRANK CASE	10	
3	11261-73G01	.BOLT, CRANK CASE NO.2	10	
4	11112-73002	.PLUG, OIL VENTURI	1	
5	09246-05006	.PLUG (1/8PT,H:5.5)	1	
6	09246-08004	.PLUG (3/8PT,H:4)	1	
7	04211-13189	.PIN	5	
8	11241-73003	STAND, OIL FILTER	1	
9	16510-82703	FILTER, OIL	1	
10	11311-60D13	PLATE, CLUTCH HOUSING UPPER	1	
11	11320-78G00	PLATE, CLUTCH HOUSING LOWER	1	
12	02162-06103	BOLT	2	
13	18640-73G00	SENSOR ASSY, KNOCK	1	

FIG.4

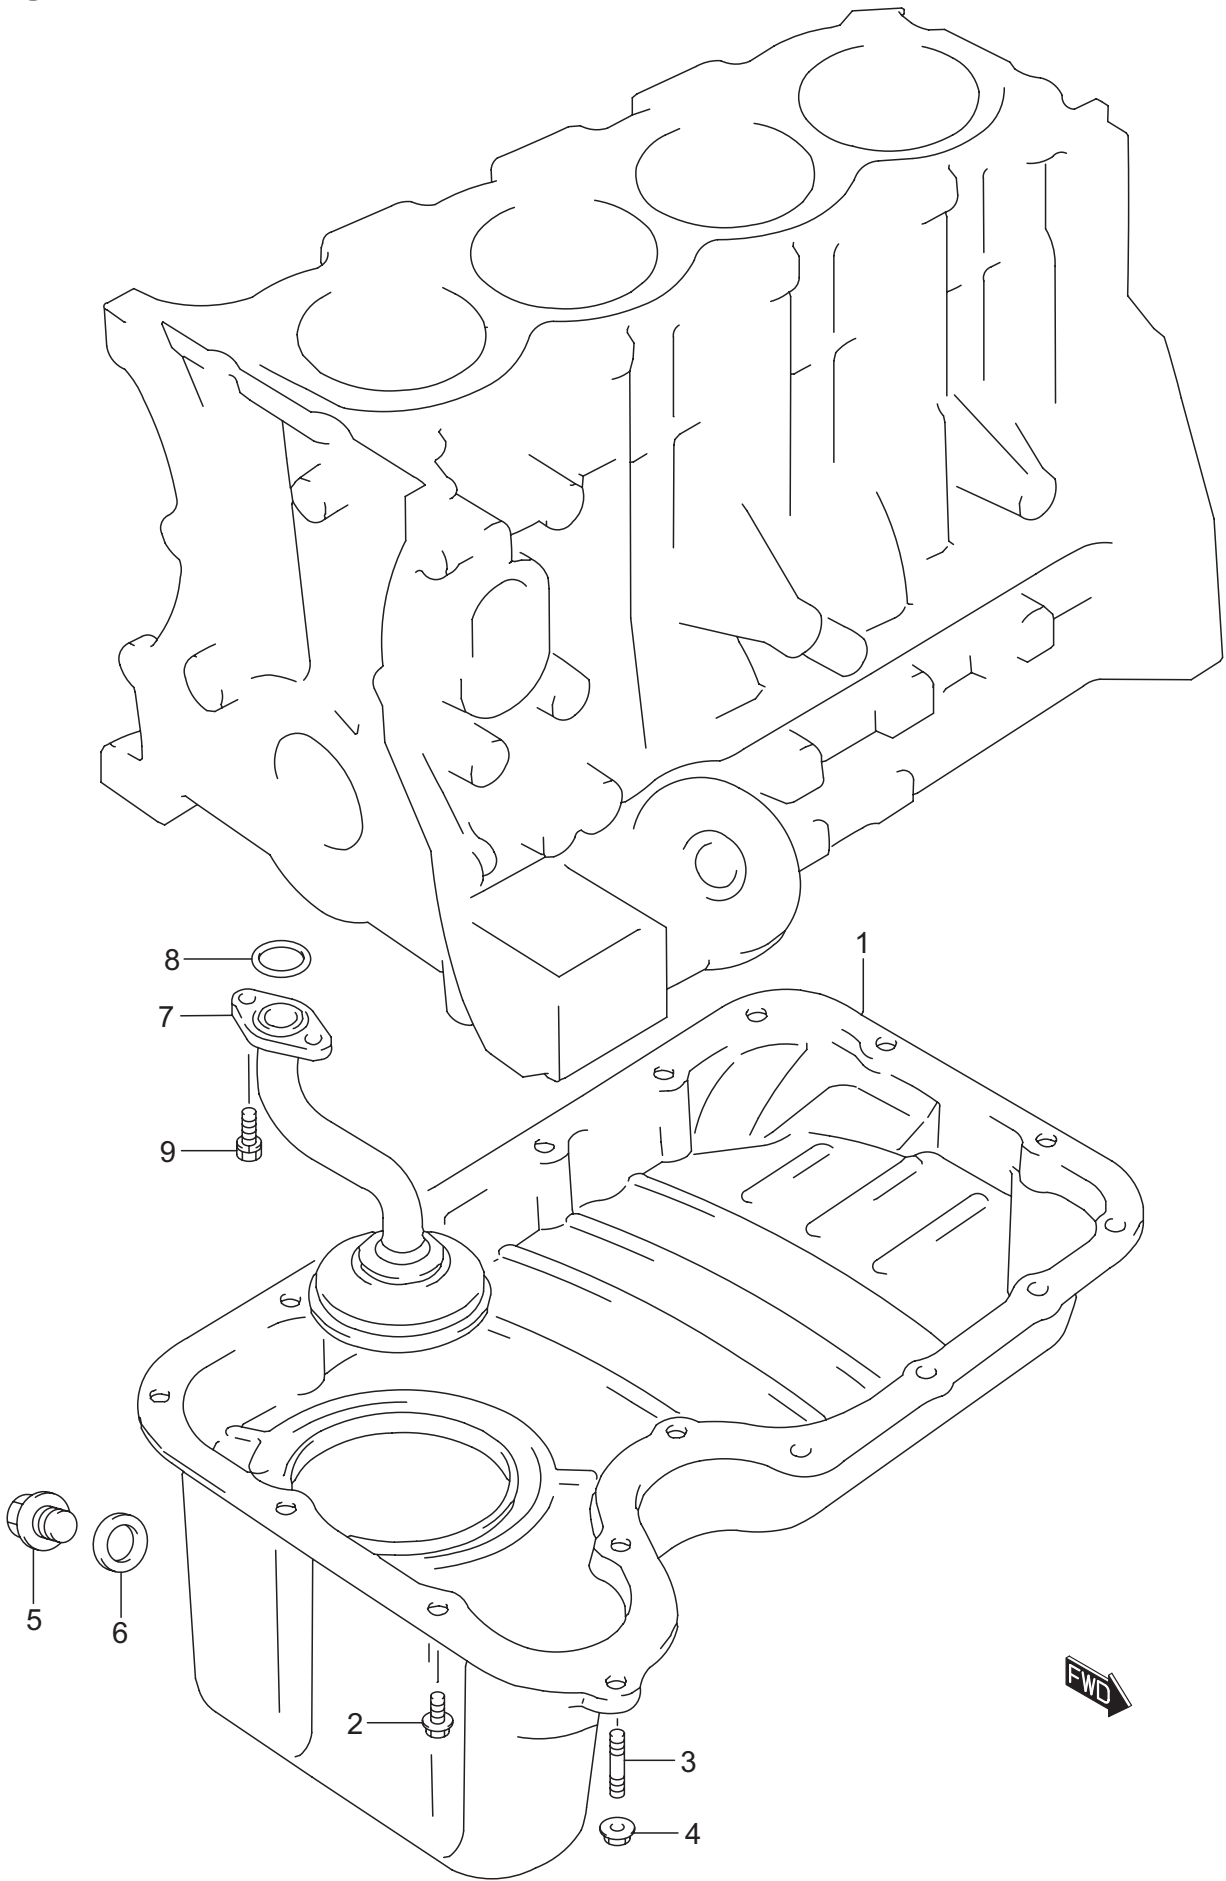


FIG.Nº.4 - OIL PAN

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	11510-75F00	PAN, OIL	1	
2	09117-06062	BOLT (6X16)	17	
3-1	01411-06123	STUD BOLT	2	
3-2	09108-06113	STUD BOLT	2	2002-4~
4	08316-10063	NUT	2	
5	09247-14027	PLUG	1	
6	09168-14015	GASKET	1	
7	16520-75F00	STRAINER, OIL PUMP	1	
8	09280-16005	O RING	1	
9	01570-06163	BOLT	2	

FIG.5

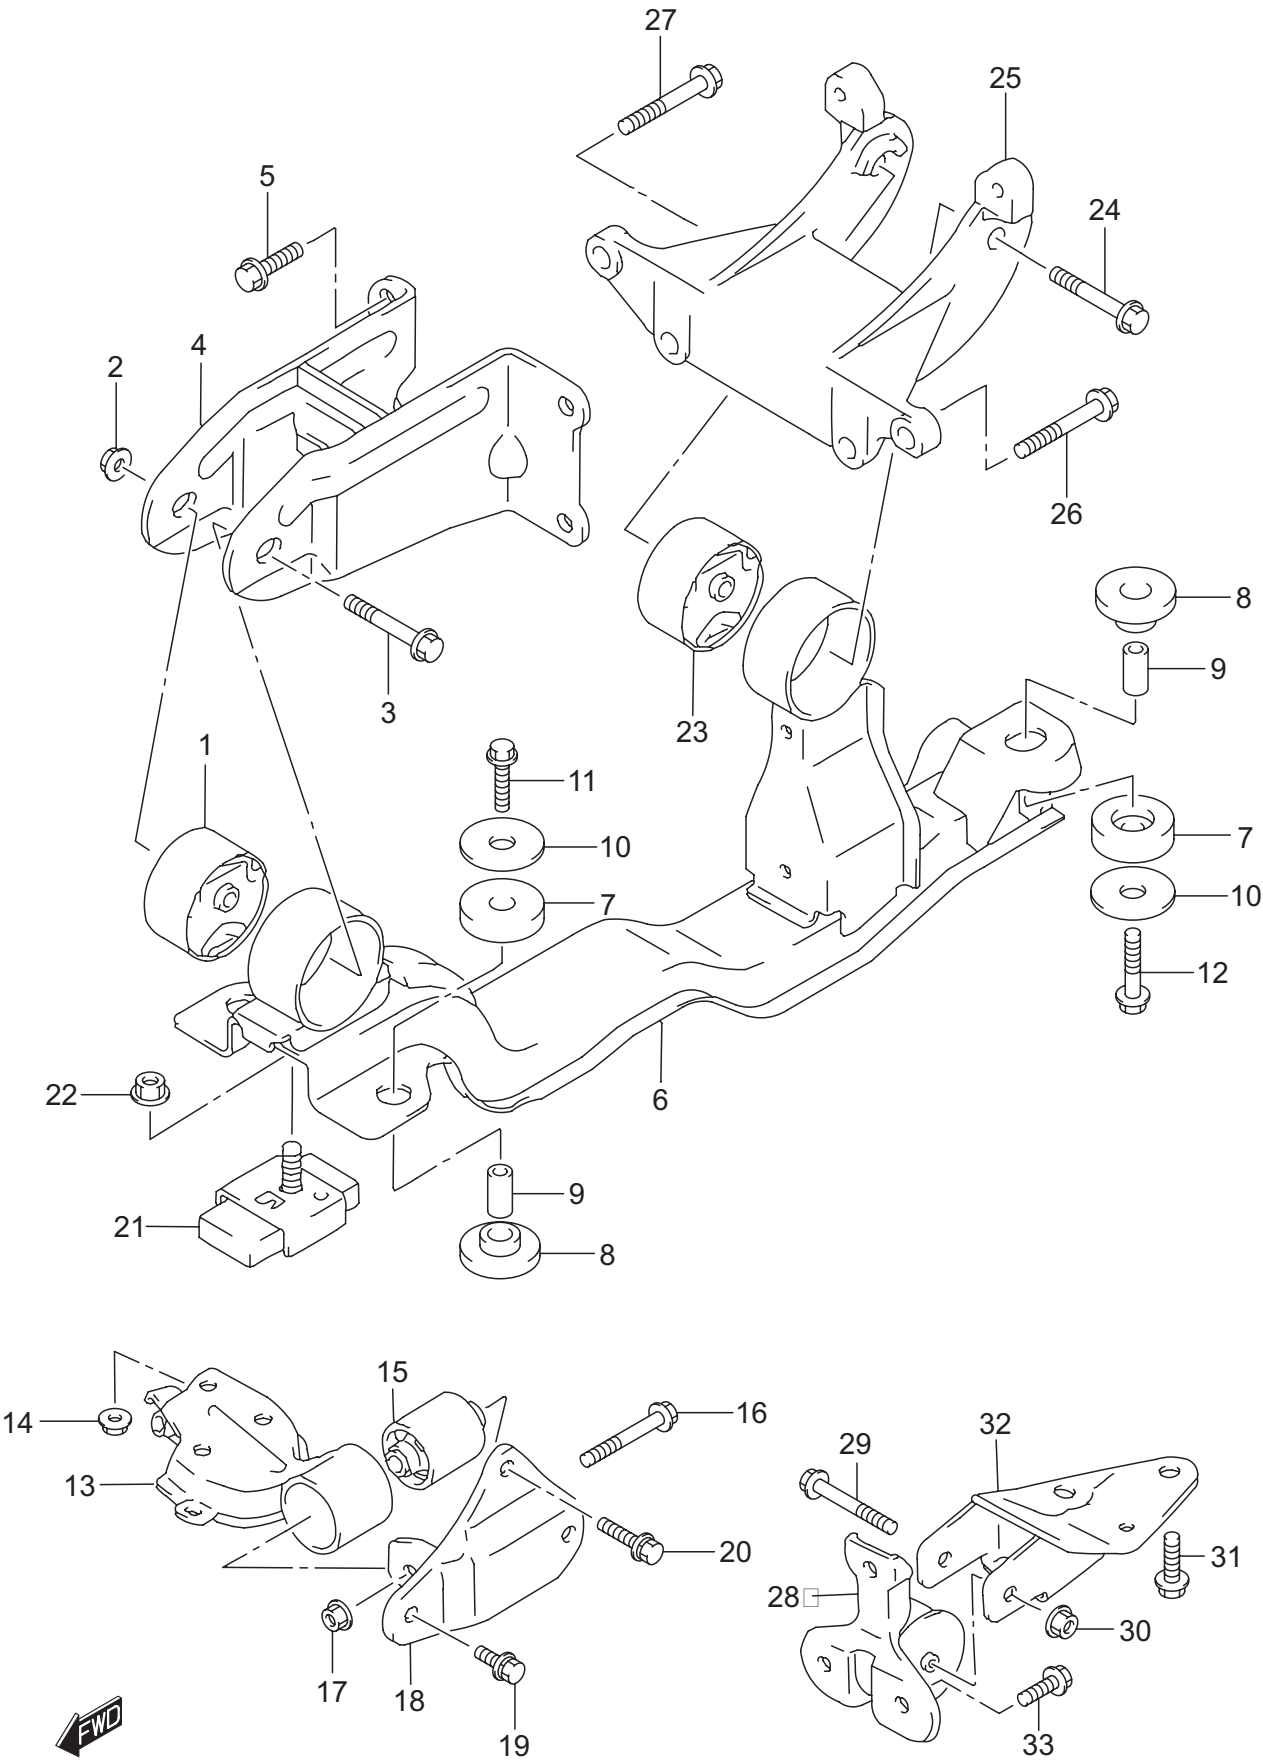


FIG.Nº.5 - ENGINE MOUNTING (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	11610-75F00	MOUNTING, ENGINE FRONT	1	
2	08316-10103	NUT	1	
3	09113-10004	BOLT (10X85)	1	
4	11640-75F01	BRACKET	1	
5	01550-10253	BOLT	4	
6	11630-75F00	MEMBER, ENGINE MOUNTING	1	
7	11684-85501	CUSHION	4	
8	11686-85501	CUSHION	4	
9	11687-84000	SPACER	4	
10	11685-85000	WASHER	4	
11	01551-10503	BOLT	2	
12	01551-10503	BOLT	2	
13	11870-75F00	BRACKET, T/M MOUNTING	1	
14	08316-10083	NUT	3	
15	11875-54E00	MOUNTING, TRANSMISSION	1	
16	01550-10903	BOLT	1	
17	08316-10103	NUT	1	
18	11880-70B00	BRACKET, MOUNTING BODY SIDE	1	
19	01580-10203	BOLT	2	
20	01580-10353	BOLT	1	
21	11915-75F00	DAMPER, DYNAMIC	1	
22	08316-10103	NUT	1	
23	11710-75F00	MOUNTING, ENGINE REAR	1	
24	09113-10004	BOLT (10X85)	1	
25	11741-75F01	BRACKET	1	
26	01550-10353	BOLT	2	
27	01550-10553	BOLT	2	
28	11910-75F11	STOPPER, REAR TORQUE	1	
29	01550-10553	BOLT	1	
30	08316-10103	NUT	1	
31	01551-10253	BOLT	3	
32	11921-75F20	BRACKET, REAR STOPPER	1	
33	01550-10203	BOLT	3	

FIG.6

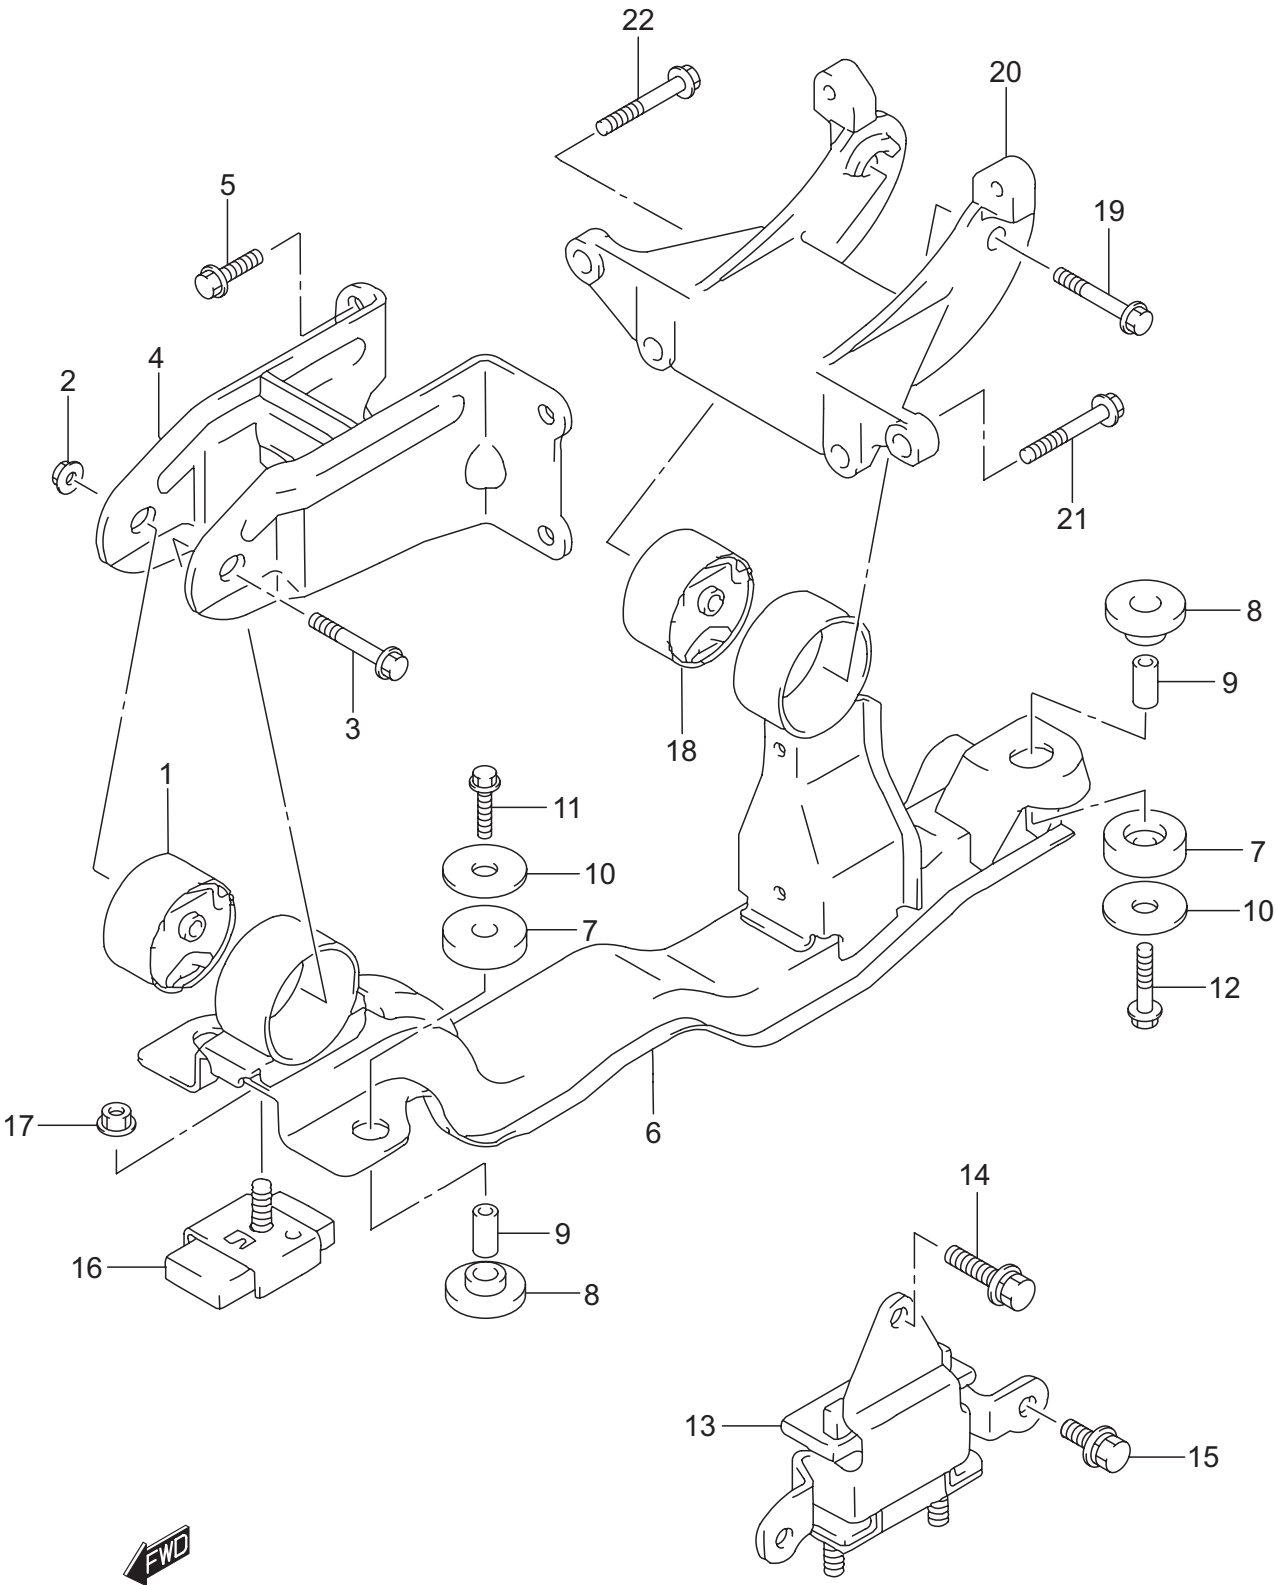


FIG.Nº.6 - ENGINE MOUNTING (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	11610-75F10	MOUNTING, ENGINE FRONT	1	
2	08316-10103	NUT	1	
3	09113-10004	BOLT (10X85)	1	
4	11640-75F01	BRACKET	1	
5	01550-10253	BOLT	4	
6	11630-75F00	MEMBER, ENGINE MOUNTING	1	
7	11684-85501	CUSHION	4	
8	11686-85501	CUSHION	4	
9	11687-84000	SPACER	4	
10	11685-85000	WASHER	4	
11	01551-10503	BOLT	2	
12	01551-10503	BOLT	2	
13	11620-75F00	MOUNTING, TRANSMISSION	1	
14	09112-10014	BOLT (10X35)	1	
15	01580-10203	BOLT	2	
16	11915-75F00	DAMPER, DYNAMIC	1	
17	08316-10103	NUT	1	
18	11710-75F10	MOUNTING, ENGINE REAR	1	
19	09113-10004	BOLT (10X85)	1	
20	11741-75F01	BRACKET	1	
21	01550-10353	BOLT	2	
22	01550-10553	BOLT	2	

FIG.7

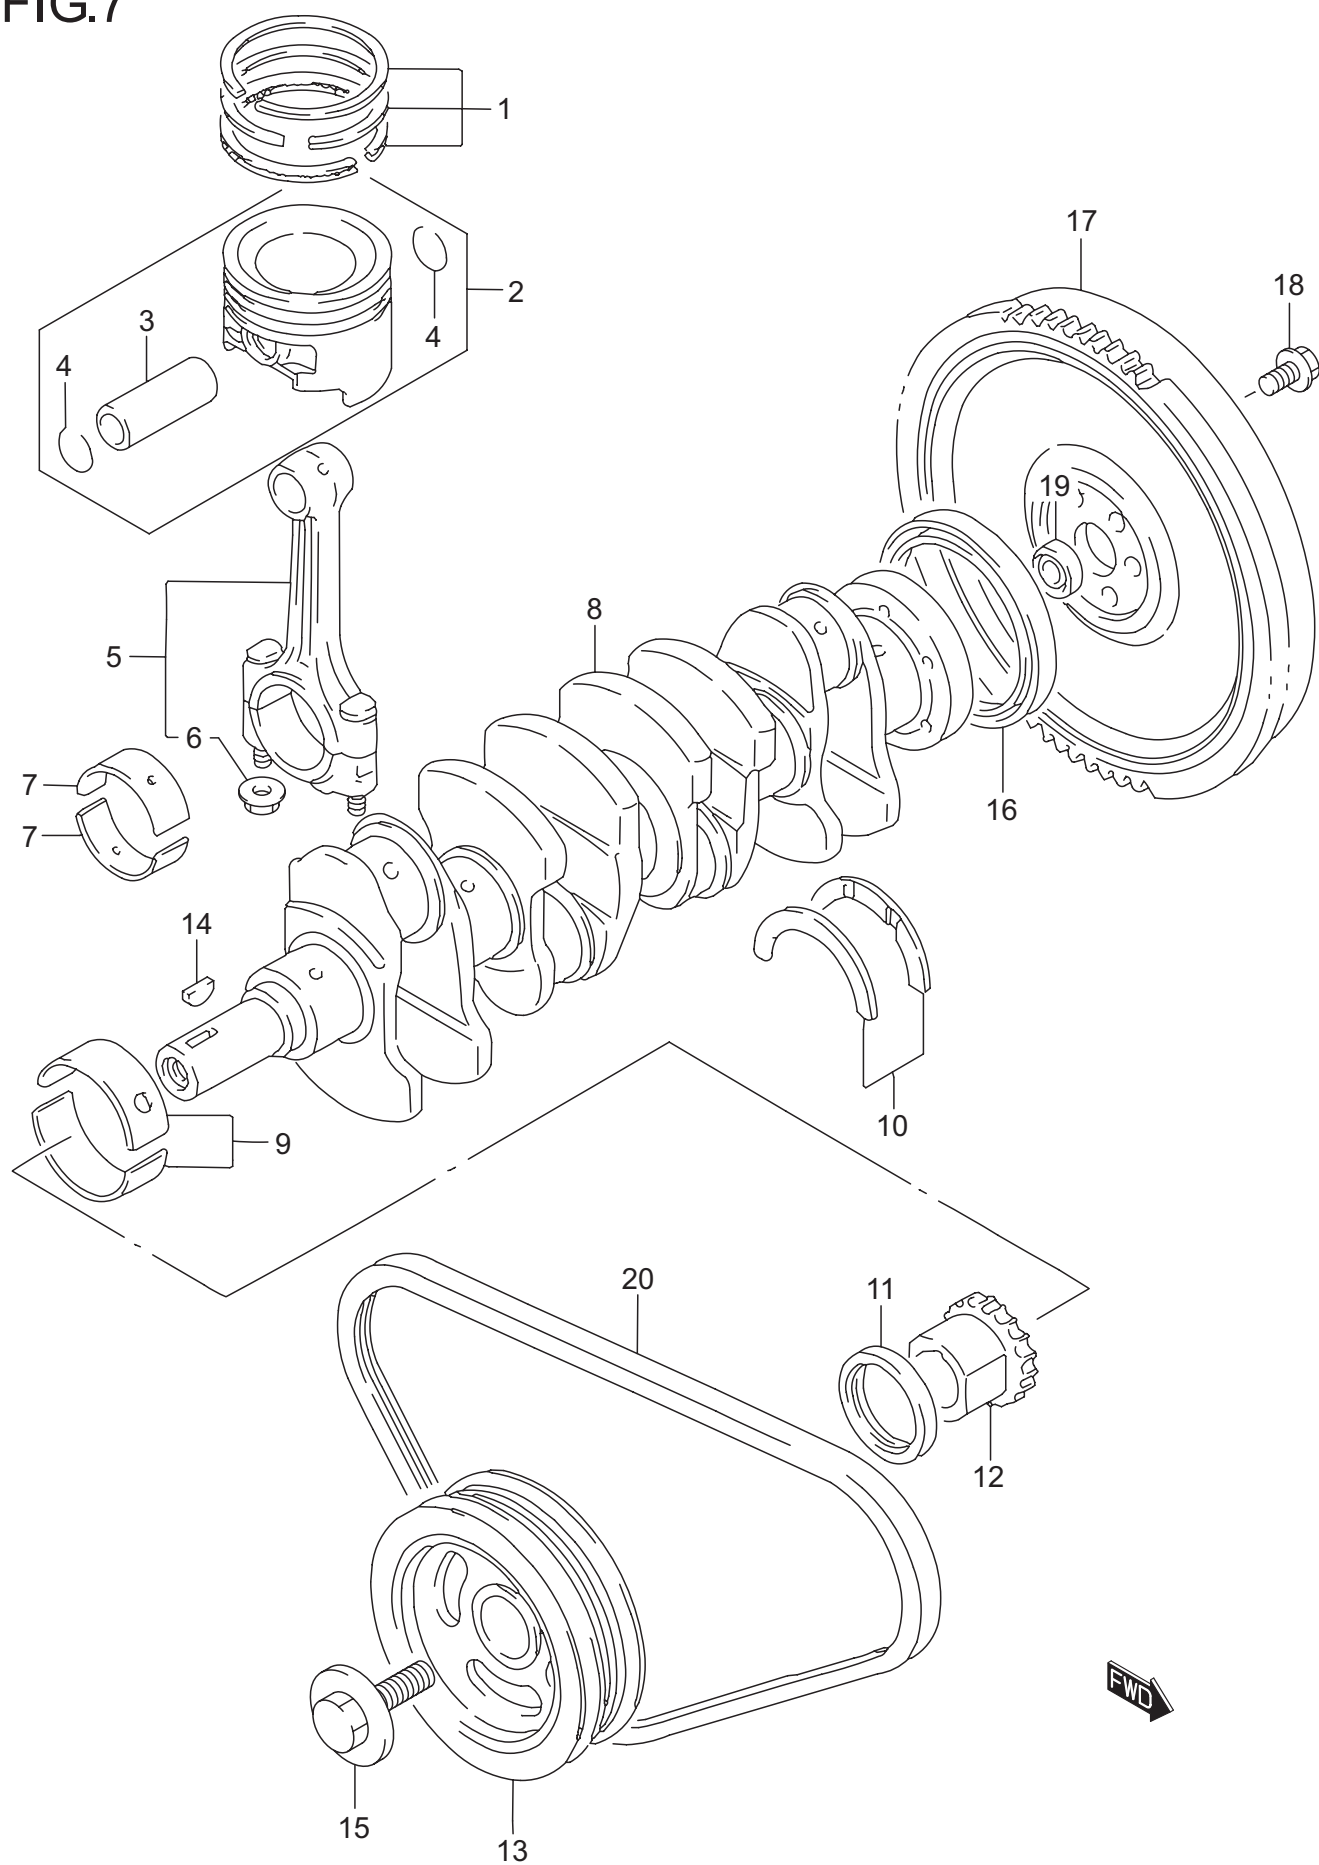


FIG.Nº.7 - CRANKSHAFT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1-1	12140-75F30	RING SET, PISTON (STD)	4	
1-2	12140-75F30-025	RING SET, PISTON (OS:0.25)	4	
1-3	12140-75F30-050	RING SET, PISTON (OS:0.50)	4	
2-1	12100-75821-0A0	PISTON SET (STD,MARK 1)	4	
2-2	12100-75821-0B0	PISTON SET (STD,MARK 2)	4	
2-3	12100-75821-025	PISTON SET (OS:0.25)	4	
2-4	12100-75821-050	PISTON SET (OS:0.50)	4	
3	12151-75F30	.PIN, PISTON	4	
4	09381-17005	.CIRCLIP	8	
5	12160-75F30	CONNROD ASSY	4	
6	09159-08033	.NUT	8	
7	12181-54A50-0A0	BEARING, CONNROD	8	T:1.5
8	12221-75F30	CRANKSHAFT	1	
9-1	12340-75F00-0A0	BEARING SET (COLOR:GREEN)	5	T:2
9-2	12340-75F00-0B0	BEARING SET (COLOR:BLACK)	5	T:2
9-3	12340-75F00-0C0	BEARING SET (COLOR:NON)	5	T:2
9-4	12340-75F00-0D0	BEARING SET (COLOR:YELLOW)	5	T:2
9-5	12340-75F00-0E0	BEARING SET (COLOR:BLUE)	5	T:2,~2000-5
9-6	12340-69G00-0C0	BEARING SET (COLOR:BROWN)	5	T:2,2000-6~
10-1	12300-82820	BEARING SET, CRANK THRUST	1	T:2.5
10-2	12300-82820-012	BEARING SET, CRANK THRUST	1	OS:0.125,T:2.563
11	09283-35047	SEAL, OIL	1	
12	12631-73G60	SPROCKET, CRANKSHAFT TIMING	1	
13	12611-73G60	PULLEY, CRANKSHAFT	1	
14	09420-04008	KEY	1	
15	12619-73G00	BOLT	1	
16	09283-79001	SEAL, OIL	1	
17	12620-73G51	FLYWHEEL	1	MT
18	09103-10282	BOLT (10X18.5)	6	MT
19	12623-70B00	BEARING, INPUT SHAFT	1	MT
20	17521-78F00	BELT, WATER PUMP	1	

FIG.8

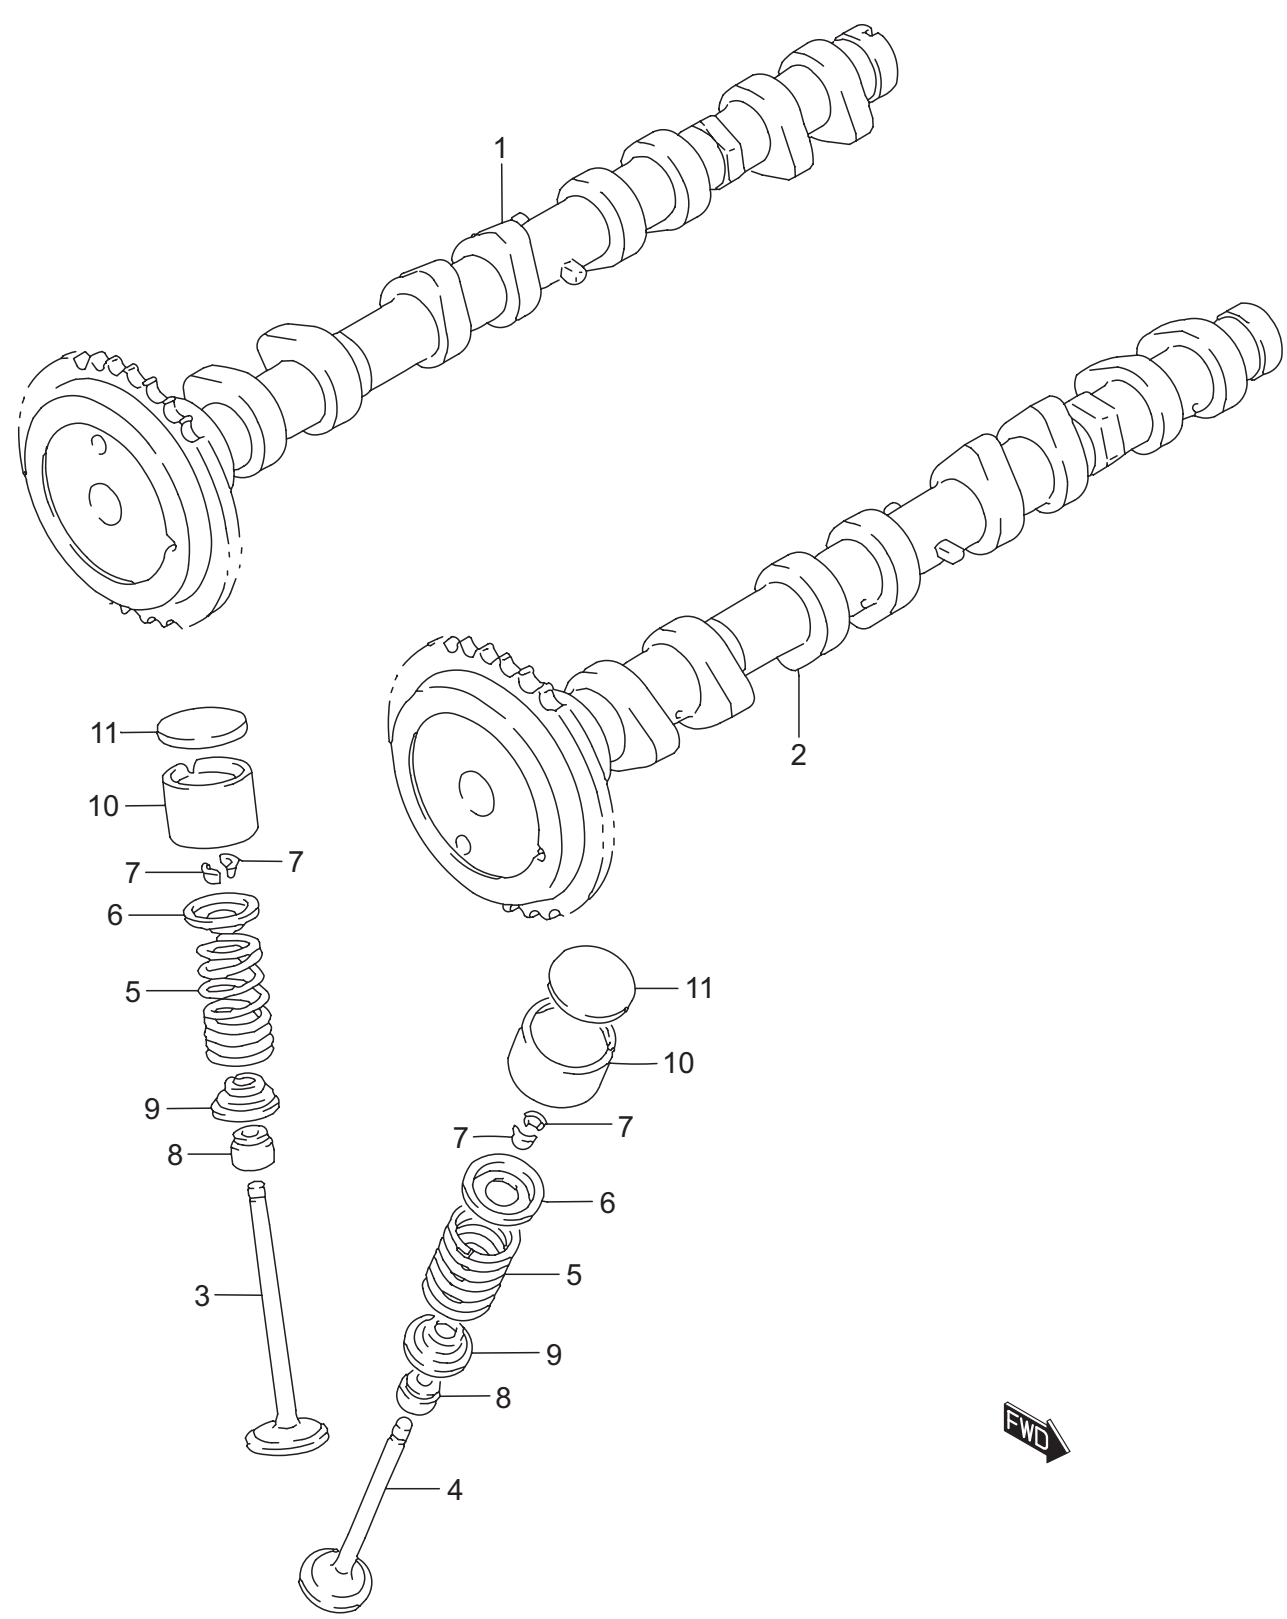


FIG.Nº.8 - CAM SHAFT / VALVE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	12710-75F00	CAM SHAFT, INTAKE	1	
2	12720-75F00	CAM SHAFT, EXHAUST	1	
3	12911-73G00	VALVE, INTAKE	8	
4	12915-73G20	VALVE, EXHAUST	8	
5-1	12921-78G00	SPRING, VALVE	16	
5-2	12921-78G20	SPRING, VALVE	16	2000-1~
6	12931-78G00	RETAINER, SPRING	16	
7	12932-24400	COTTER	32	
8	09289-05012	SEAL, VALVE STEM	16	
9	12933-51E00	SEAT, SPRING	16	
10	12891-73G01	TAPPET	16	
11-1	12892-73G01-218	SHIM, TAPPET (T:2.18)	AR	
11-2	12892-73G01-220	SHIM, TAPPET (T:2.20)	AR	
11-3	12892-73G01-222	SHIM, TAPPET (T:2.22)	AR	
11-4	12892-73G01-224	SHIM, TAPPET (T:2.24)	AR	
11-5	12892-73G01-226	SHIM, TAPPET (T:2.26)	AR	
11-6	12892-73G01-228	SHIM, TAPPET (T:2.28)	AR	
11-7	12892-73G01-230	SHIM, TAPPET (T:2.30)	AR	
11-8	12892-73G01-232	SHIM, TAPPET (T:2.32)	AR	
11-9	12892-73G01-234	SHIM, TAPPET (T:2.34)	AR	
11-10	12892-73G01-236	SHIM, TAPPET (T:2.36)	AR	
11-11	12892-73G01-238	SHIM, TAPPET (T:2.38)	AR	
11-12	12892-73G01-240	SHIM, TAPPET (T:2.40)	AR	
11-13	12892-73G01-242	SHIM, TAPPET (T:2.42)	AR	
11-14	12892-73G01-244	SHIM, TAPPET (T:2.44)	AR	
11-15	12892-73G01-246	SHIM, TAPPET (T:2.46)	AR	
11-16	12892-73G01-248	SHIM, TAPPET (T:2.48)	AR	
11-17	12892-73G01-250	SHIM, TAPPET (T:2.50)	AR	
11-18	12892-73G01-252	SHIM, TAPPET (T:2.52)	AR	
11-19	12892-73G01-254	SHIM, TAPPET (T:2.54)	AR	
11-20	12892-73G01-256	SHIM, TAPPET (T:2.56)	AR	
11-21	12892-73G01-258	SHIM, TAPPET (T:2.58)	AR	
11-22	12892-73G01-260	SHIM, TAPPET (T:2.60)	AR	

FIG.Nº.8 - CAM SHAFT / VALVE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
11-23	12892-73G01-262	SHIM, TAPPET (T:2.62)	AR	
11-24	12892-73G01-264	SHIM, TAPPET (T:2.64)	AR	
11-25	12892-73G01-266	SHIM, TAPPET (T:2.66)	AR	
11-26	12892-73G01-268	SHIM, TAPPET (T:2.68)	AR	
11-27	12892-73G01-270	SHIM, TAPPET (T:2.70)	AR	
11-28	12892-73G01-272	SHIM, TAPPET (T:2.72)	AR	
11-29	12892-73G01-274	SHIM, TAPPET (T:2.74)	AR	
11-30	12892-73G01-276	SHIM, TAPPET (T:2.76)	AR	
11-31	12892-73G01-278	SHIM, TAPPET (T:2.78)	AR	
11-32	12892-73G01-280	SHIM, TAPPET (T:2.80)	AR	
11-33	12892-73G01-282	SHIM, TAPPET (T:2.82)	AR	
11-34	12892-73G01-284	SHIM, TAPPET (T:2.84)	AR	
11-35	12892-73G01-286	SHIM, TAPPET (T:2.86)	AR	
11-36	12892-73G01-288	SHIM, TAPPET (T:2.88)	AR	
11-37	12892-73G01-290	SHIM, TAPPET (T:2.90)	AR	
11-38	12892-73G01-292	SHIM, TAPPET (T:2.92)	AR	
11-39	12892-73G01-294	SHIM, TAPPET (T:2.94)	AR	
11-40	12892-73G01-296	SHIM, TAPPET (T:2.96)	AR	
11-41	12892-73G01-298	SHIM, TAPPET (T:2.98)	AR	
11-42	12892-73G01-300	SHIM, TAPPET (T:3.00)	AR	

FIG.9

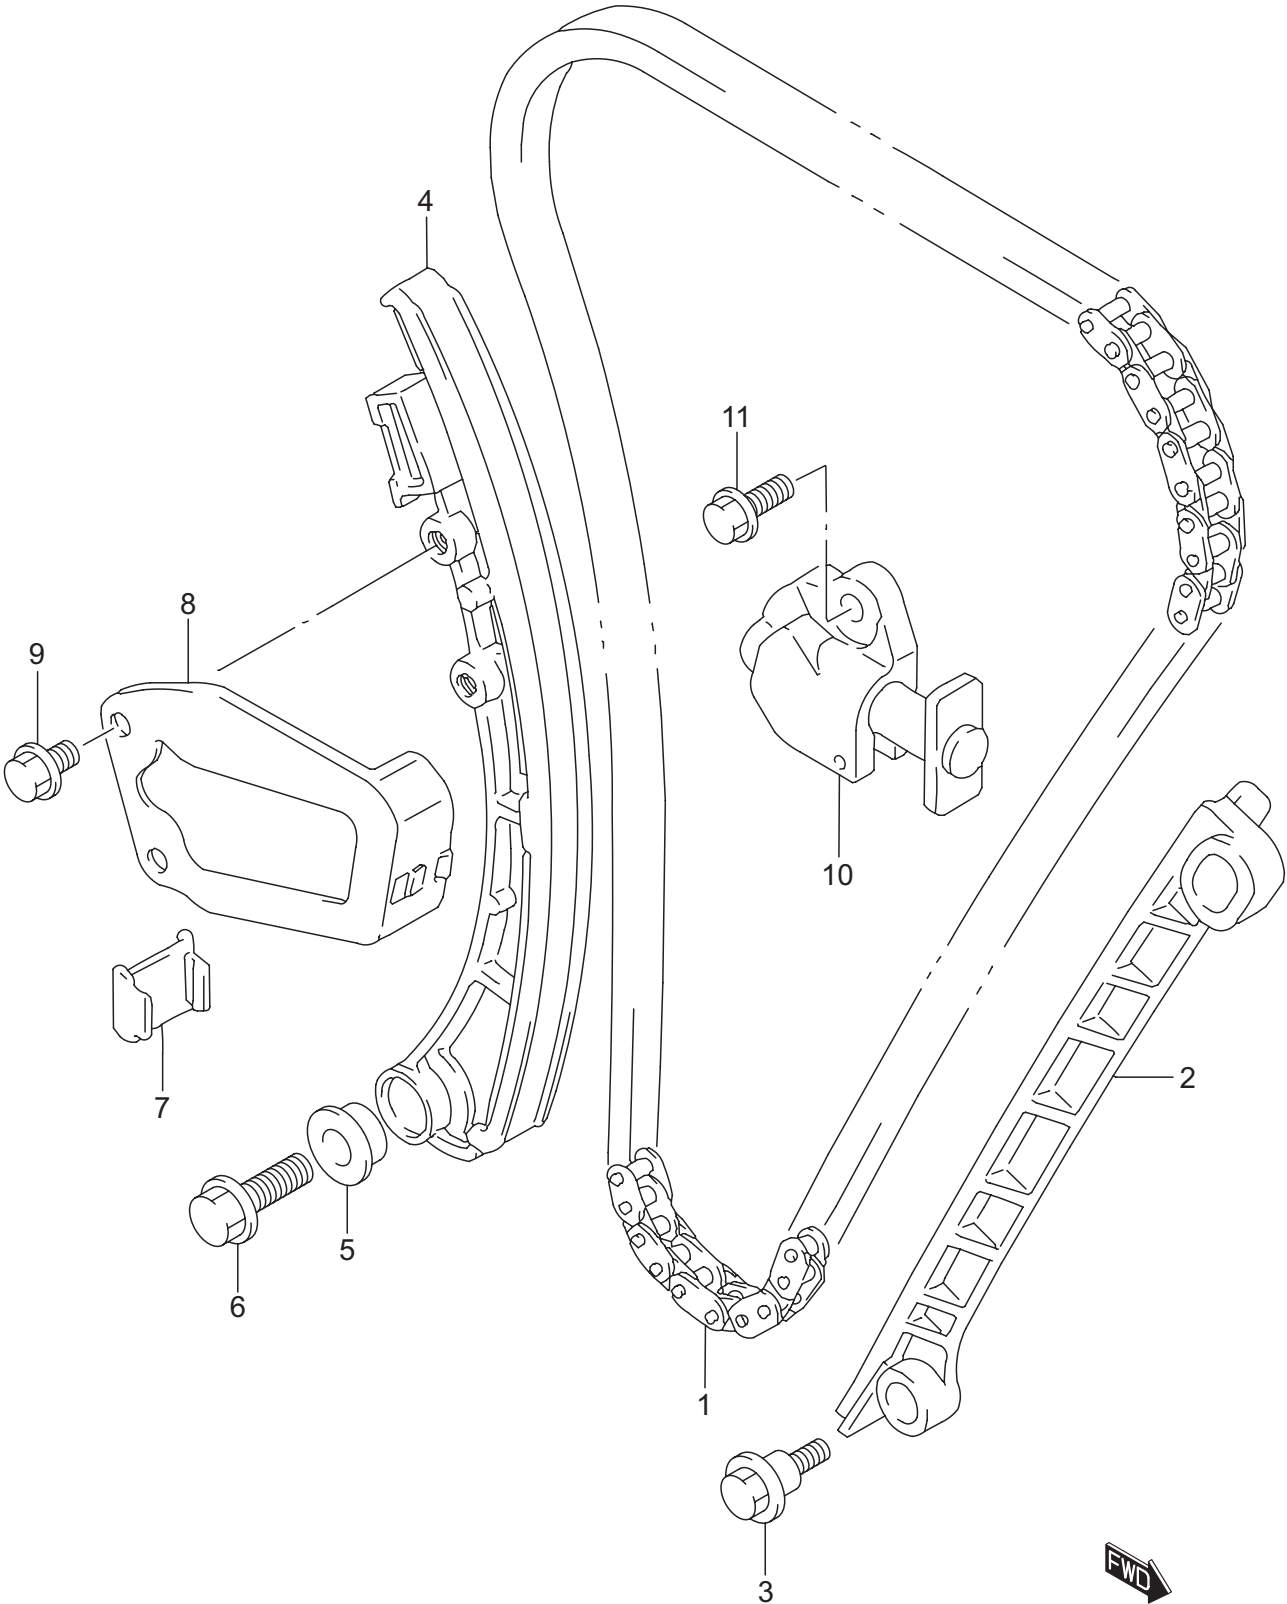


FIG.Nº.9 - CAM CHAIN

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	12761-73G01	CHAIN, TIMING	1	
2	12771-73G00	GUIDE, TIMING CHAIN NO.1	1	
3	12776-85FA0	BOLT	2	
4	12811-73G01	TENSIONER, CHAIN	1	
5	12812-73G10	SPACER	1	
6	01550-08253	BOLT	1	
7	12813-73G00	PAD, TENSIONER	1	
8	12821-78G00	LINK, TENSIONER	1	
9	01550-06123	BOLT	2	
10	12831-78G01	ADJUSTER ASSY, TENSIONER	1	
11	01550-06203	BOLT	2	

FIG.10

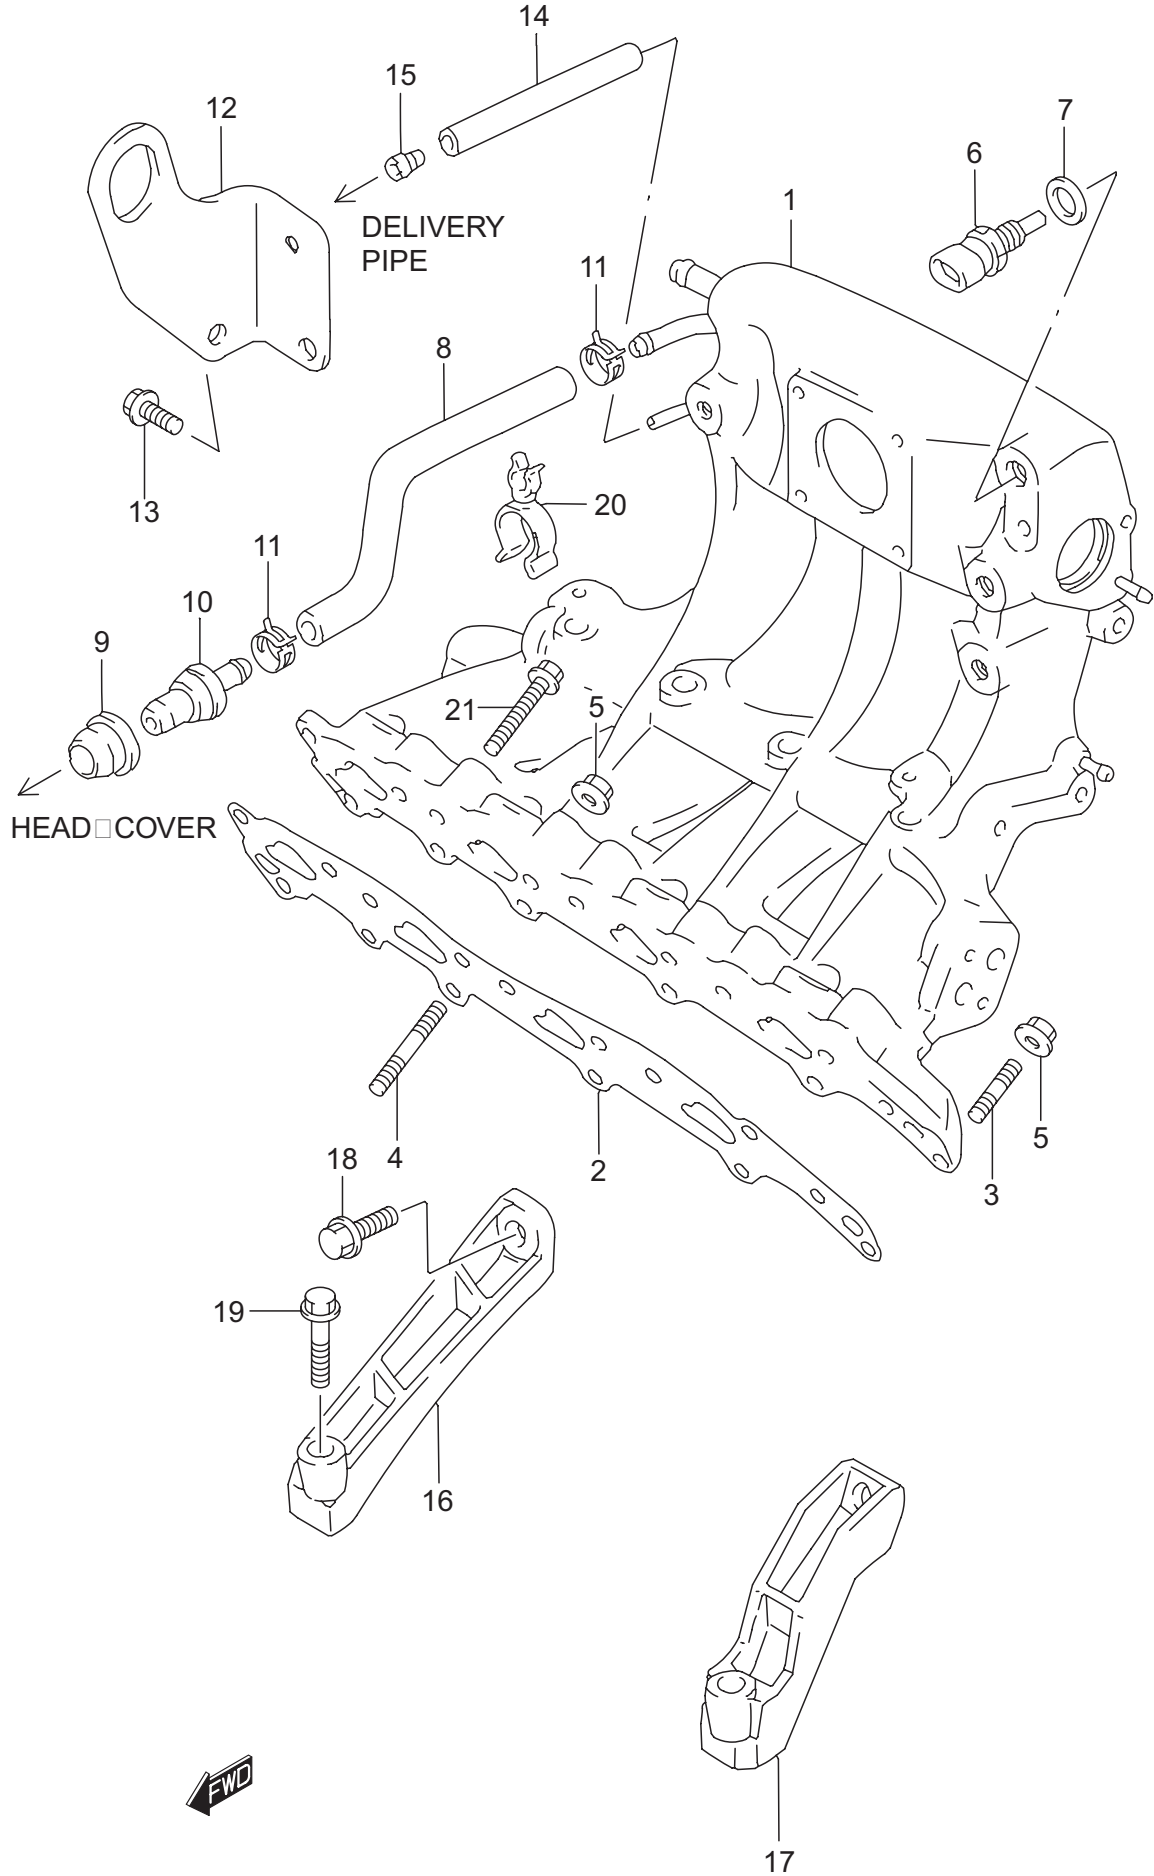


FIG.Nº.10 - INTAKE MANIFOLD

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	13110-75F02	MANIFOLD, INTAKE	1	
2	13119-75F00	GASKET	1	
3	01411-06203	STUD BOLT	8	
4-1	01411-06353	STUD BOLT	7	
4-2	01411-06353	STUD BOLT	1	2000-1~
5-1	08316-10063	NUT	15	
5-2	08316-10063	NUT	9	2000-1~
6	13650-73G00	SENSOR, AIR TEMPERATURE	1	
7	09168-12016	GASKET	1	
8	11192-75F00	HOSE, PCV	1	
9	11198-58B00	SEAL, PCV VALVE	1	
10	18118-58B00	VALVE, PCV	1	
11	09401-14404	CLAMP	2	
12	11851-75F02	HOOK, ENGINE	1	
13	01550-06163	BOLT	3	
14	09355-35754-601	HOSE	1	L:601→160
15	15616-64D00	JET	1	
16	13163-75F00	STIFFENER, NO.1	1	
17	13164-75F00	STIFFENER, NO.2	1	
18	01550-08253	BOLT	2	
19	01550-08503	BOLT	2	
20	09408-00069	CLIP	1	
21	01550-06353	BOLT	6	2000-1~

FIG.11

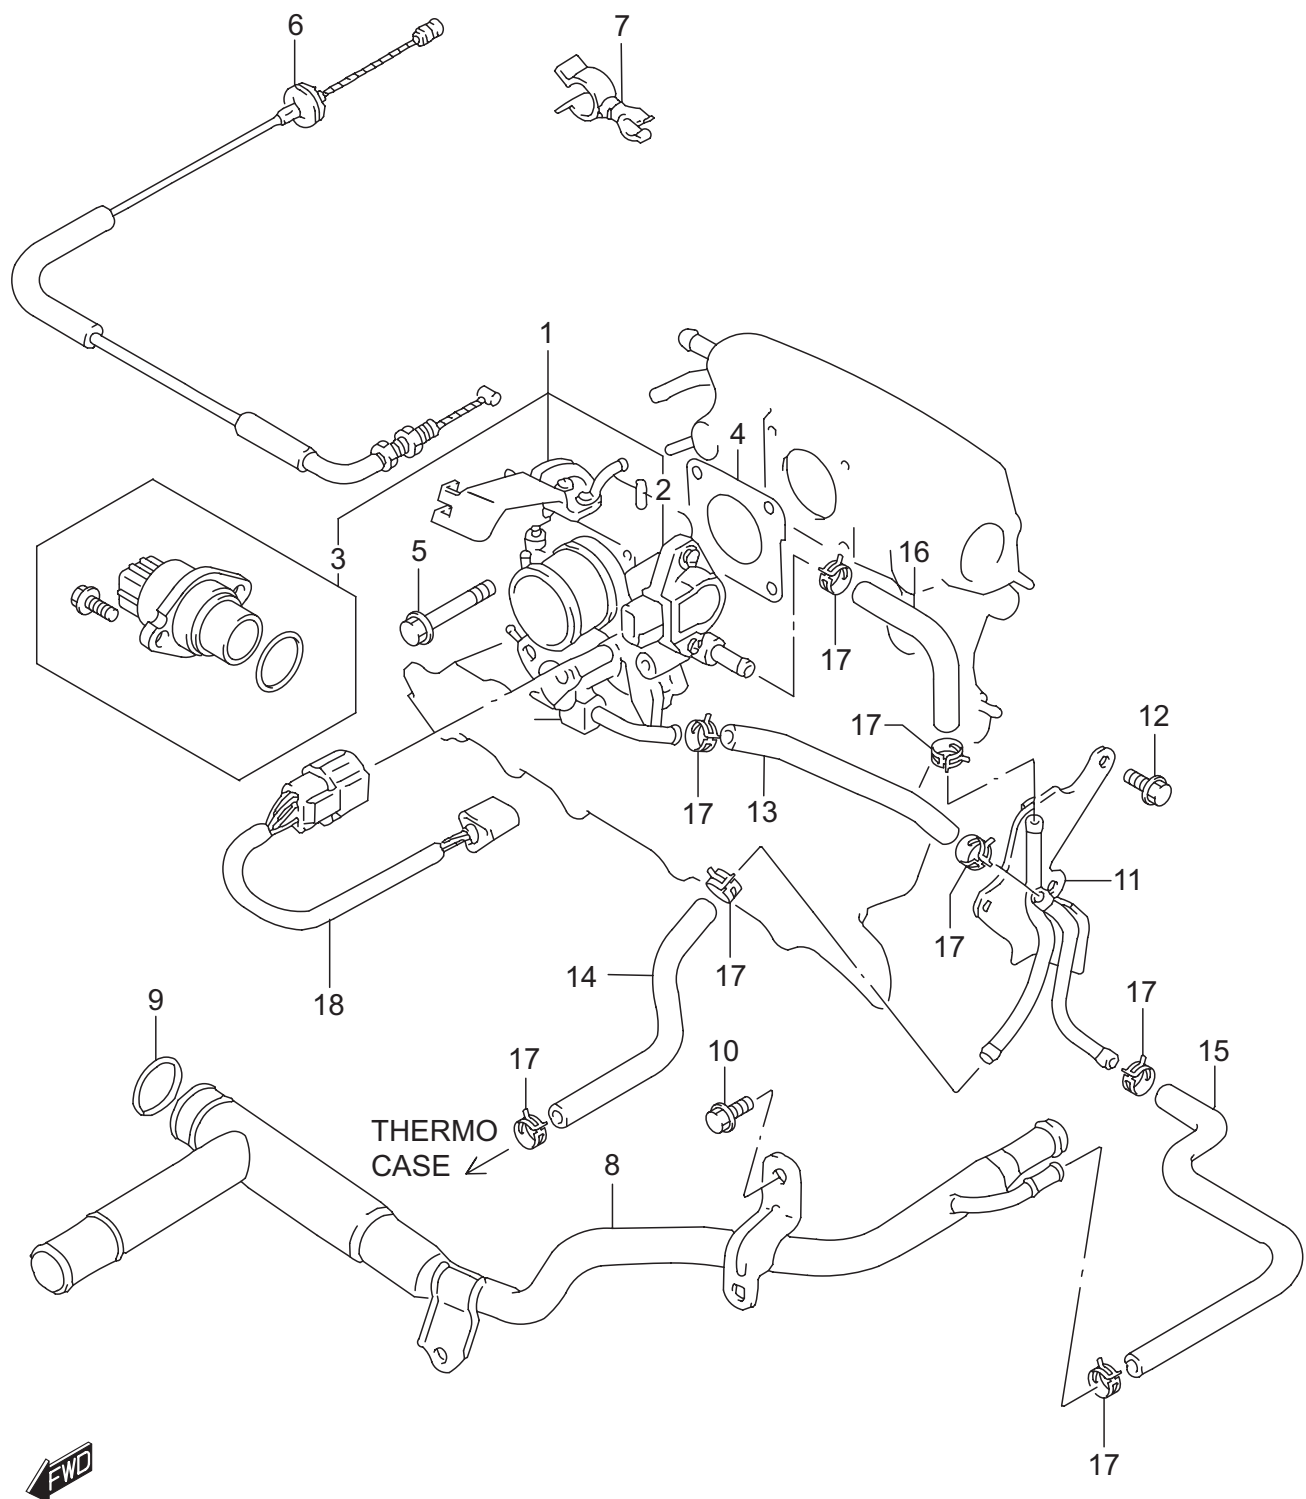


FIG.Nº.11 - THROTTLE BODY

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	13400-75F20	BODY ASSY, THROTTLE	1	
2	13420-73GT0	.SENSOR SET, THROT POSSITION	1	
3	18117-75FT0	.VALVE SET, ISC	1	
4	13421-75F00	GASKET	1	
5	01550-06503	BOLT	4	
6	15910-75F13	CABLE ASSY, ACCEL	1	
7	09408-00079	CLAMP	1	
8	17830-75FV0	PIPE, WATER INLET	1	
9	17849-53E00	O RING	1	
10	01550-06123	BOLT	1	
11	17950-75F01	PIPE, WATER THROTTLE	1	
12	01550-06123	BOLT	2	
13	17956-75F02	HOSE, WATER THROT OUTLET NO.1	1	
14	17957-75F01	HOSE, WATER THROT INLET NO.1	1	
15	17958-75F01	HOSE, WATER THROT OUTLET NO.2	1	
16	17959-78F00	HOSE, WATER THROT INLET NO.2	1	
17	09401-12410	CLIP	8	
18	13431-75F00	HARNESS, POSITION SENSOR	1	

FIG.12

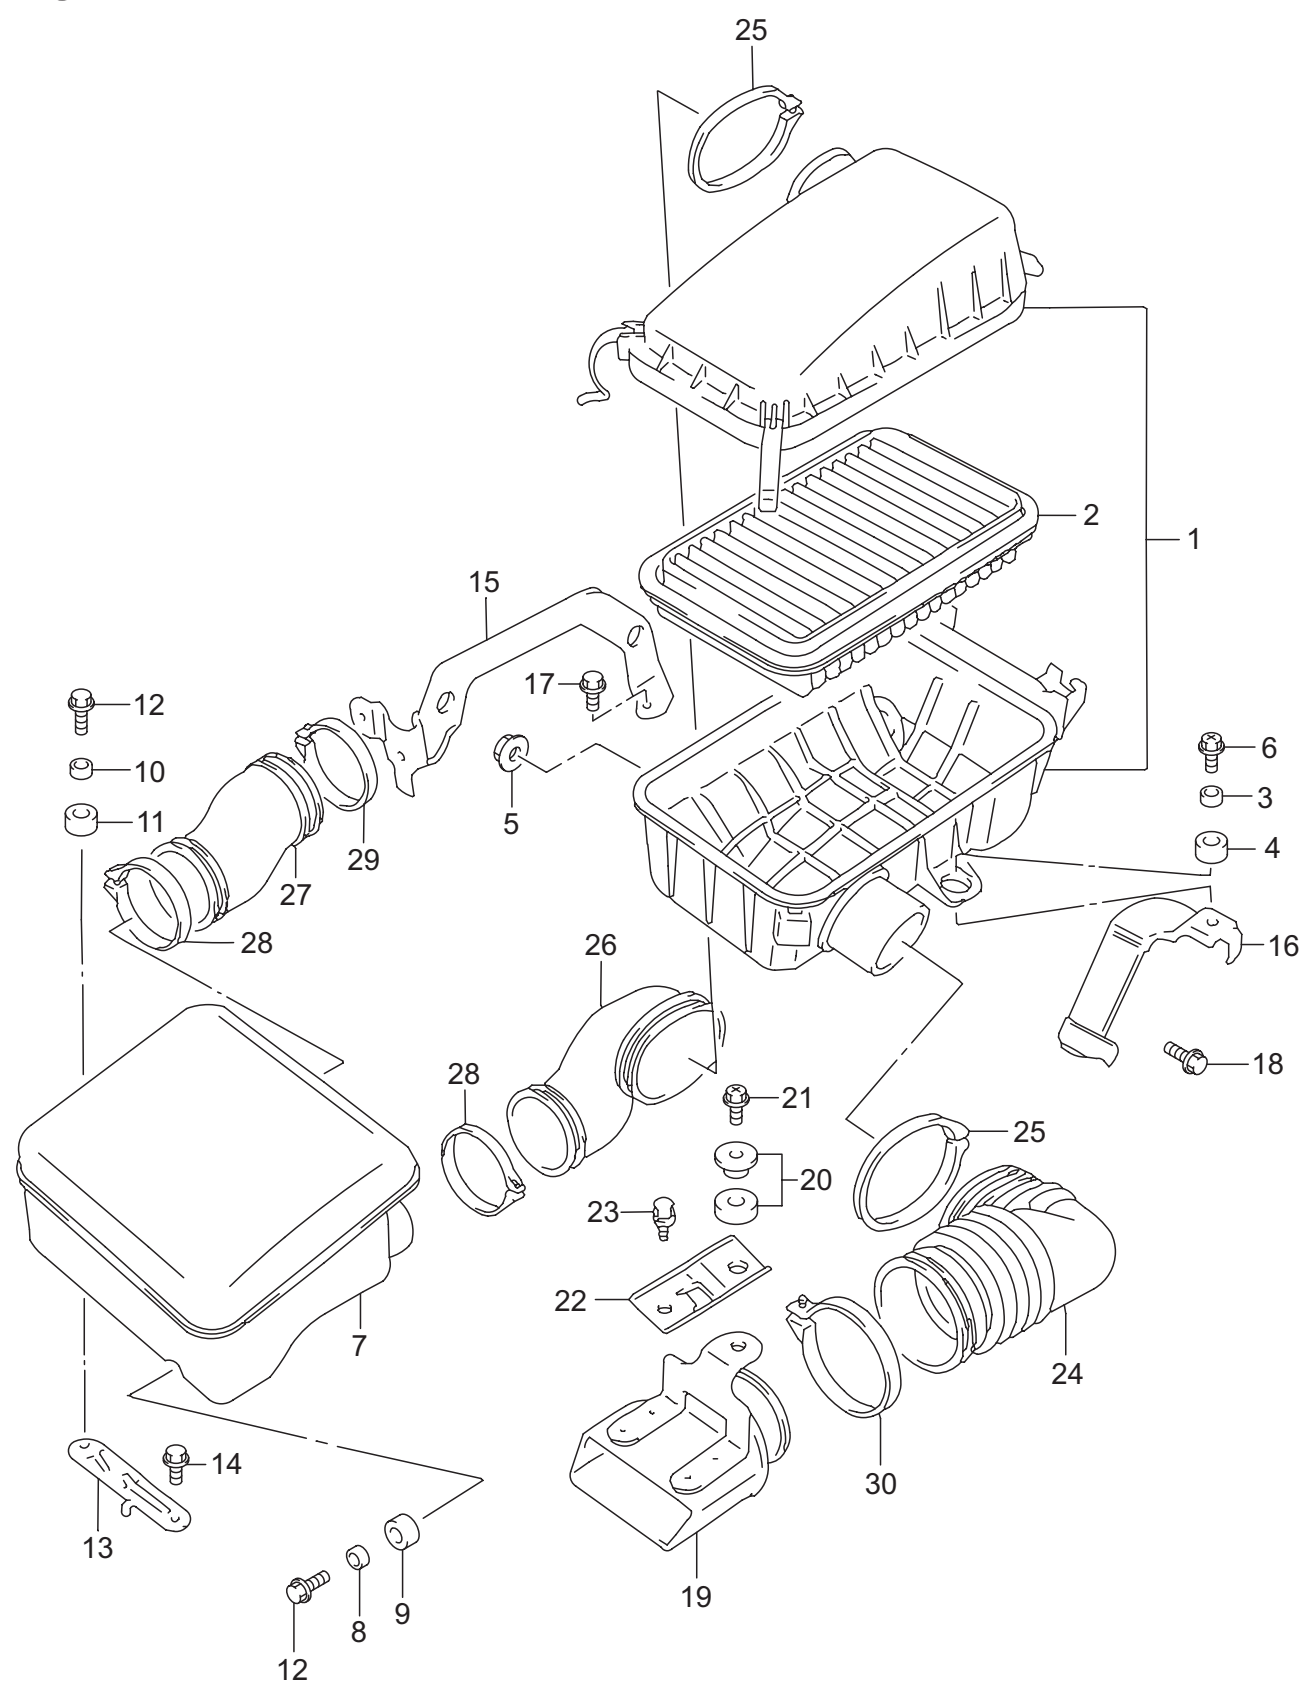


FIG.Nº.12 - AIR CLEANER

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	13700-77G00	CLEANER ASSY, AIR	1	
2	13780-75F00	.ELEMENT	1	
3	13772-75F00	.SPACER	1	
4	09320-11017	.CUSHION	1	
5	13723-75F00	GROMMET	2	
6	09136-06141	SCREW (6X25)	1	
7	13760-75F00	RESONETOR, AIR INTAKE	1	
8	09180-06263	.SPACER (6.5X9X9)	1	
9	09320-09501	.CUSHION	1	
10	13765-77G10	.COLLAR (9.2X11X9)	1	
11	13766-77G10	.CUSHION	1	
12	09116-06167	SCREW (6X20)	2	
13	13765-75F01	BRACKET	1	
14	01550-06123	BOLT	1	
15	13810-75F01	BRACKET, AIR CLEANER NO.1	1	
16	13820-75F01	BRACKET, AIR CLEANER NO.2	1	
17	01550-06123	BOLT	2	
18	01550-08163	BOLT	1	
19	13870-75F01	PIPE, AIR CLEANER INLET	1	
20	13876-840T0	GROMMET SET	1	
21	02162-06123	SCREW	1	
22	13872-75F00	BRACKET	1	
23	02162-06203	BOLT	1	
24	13871-75F00	HOSE, AIR CLEANER INLET	1	
25	13875-75F00	CLAMP	2	
26	13881-75F00	HOSE, AIR CLEANER OUTLET NO.1	1	
27	13882-75F00	HOSE, AIR CLEANER OUTLET NO.2	1	
28-1	09402-50208	CLAMP	2	
28-2	09402-50901	CLAMP	2	1999-10~
29	09402-52208	CLAMP	1	
30	09402-62203	CLAMP	1	

FIG.13

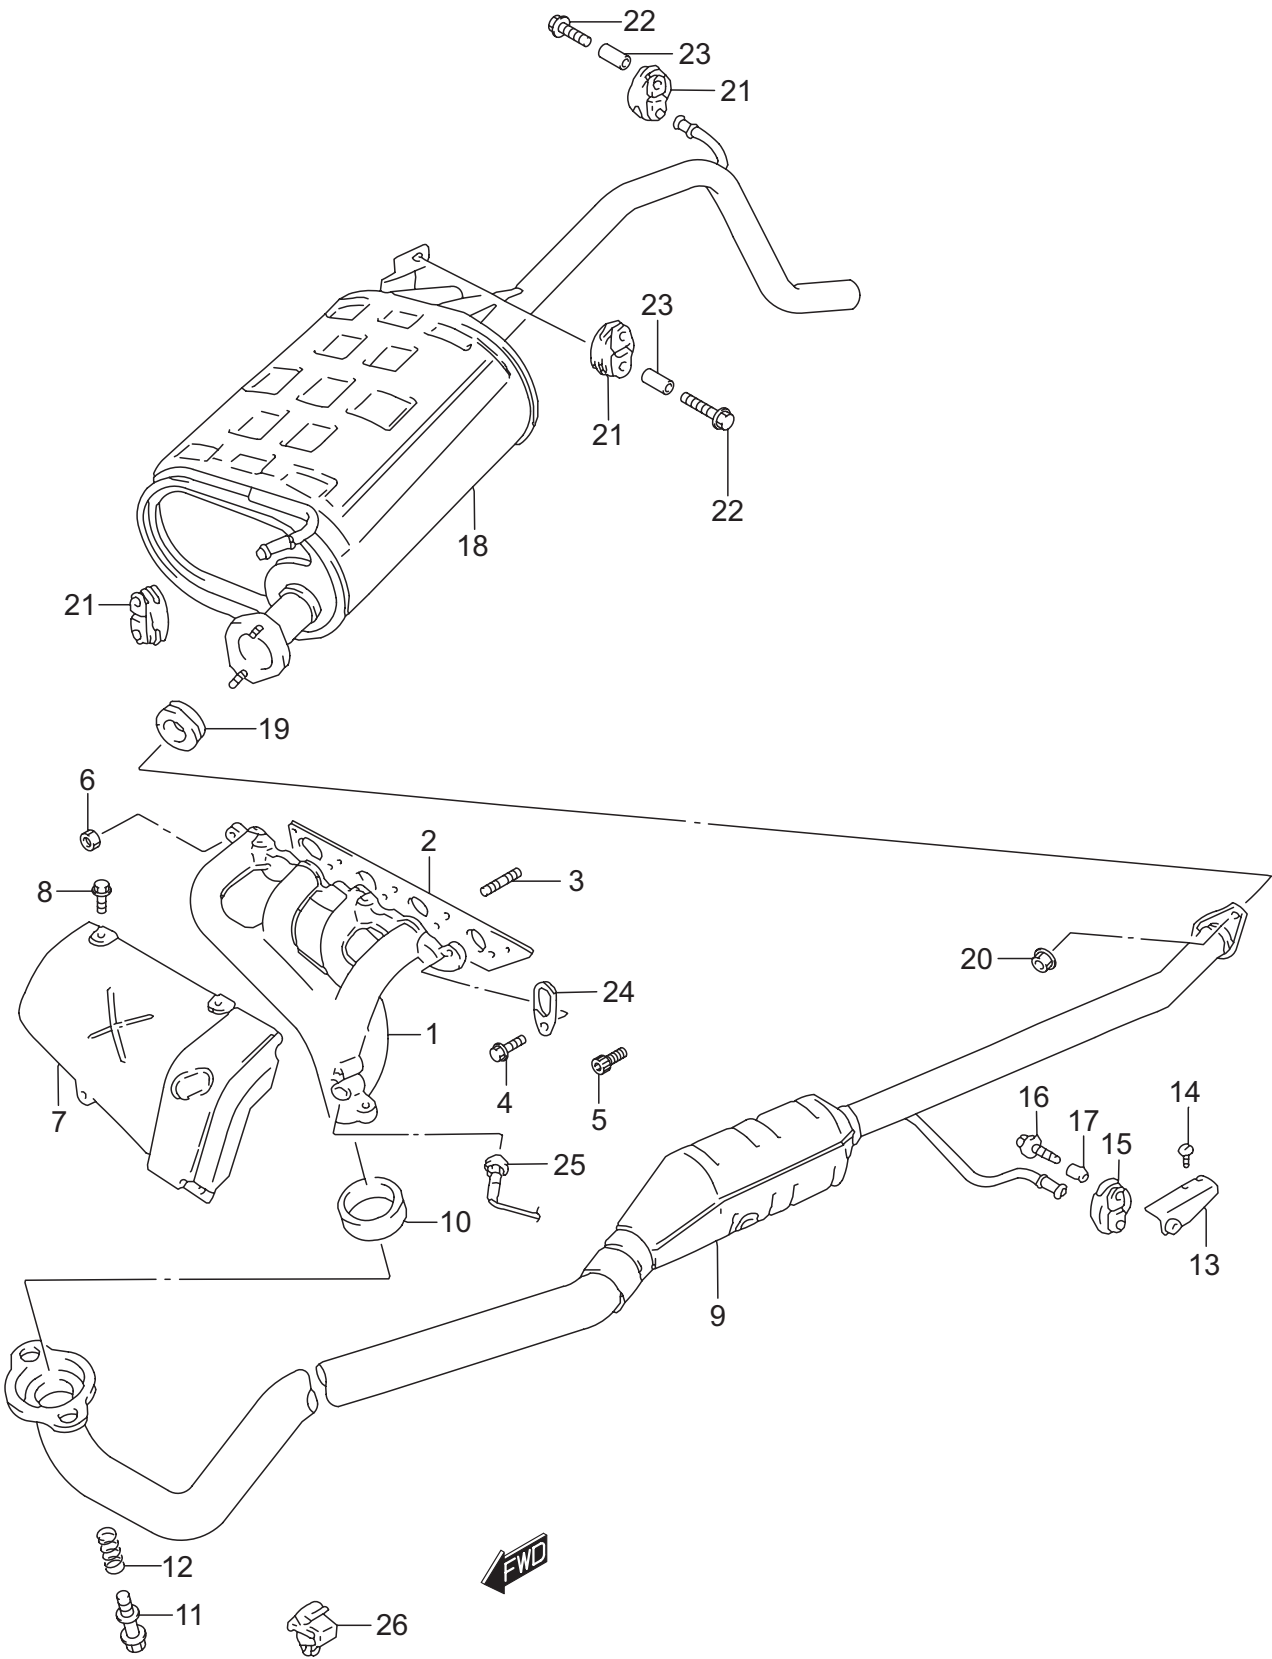


FIG.Nº.13 - MUFFLER

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	14111-75FV0	MANIFOLD, EXHAUST	1	
2	14141-75F00	GASKET	1	
3-1	14119-81402	STUD BOLT	3	
3-2	14119-81402	STUD BOLT	7	1999-6~
4-1	14118-70G50	BOLT	3	
4-2	14118-70G50	BOLT	2	1999-6~
5	14118-73G01	BOLT	3	~1999-5
6-1	09159-08056	NUT	3	
6-2	09159-08056	NUT	7	1999-6~
7	14130-75F10	COVER, EXHAUST MANIFOLD	1	
8	09103-06168	BOLT (6X10)	4	
9	14190-75F11	PIPE, EXHAUST	1	
10-1	14183-78502	RING	1	
10-2	14183-75FC0	RING	1	2000-8~
11	14493-76G00	BOLT (10X53.5)	2	
12	14492-82001	SPRING	2	
13	14284-75F00	BRACKET	1	
14	02162-06123	SCREW	2	
15	14281-75F00	MOUNTING, MUFFLER	1	
16	01550-08353	BOLT	1	
17	09180-08057	SPACER (8.2X12.5X23.5)	1	
18	14300-75F00	MUFFLER	1	
19	14182-60B00	GASKET	1	
20	08316-10103	NUT	2	
21	14281-60G00	MOUNTING, MUFFLER	3	
22	01551-08353	BOLT	2	
23	09180-08057	SPACER (8.2X12.5X23.5)	2	
24	11851-62B00	HOOK, ENGINE	1	
25	18213-64F00	SENSOR, OXYGEN	1	
26	18214-75F00	CLAMP	2	

FIG.14

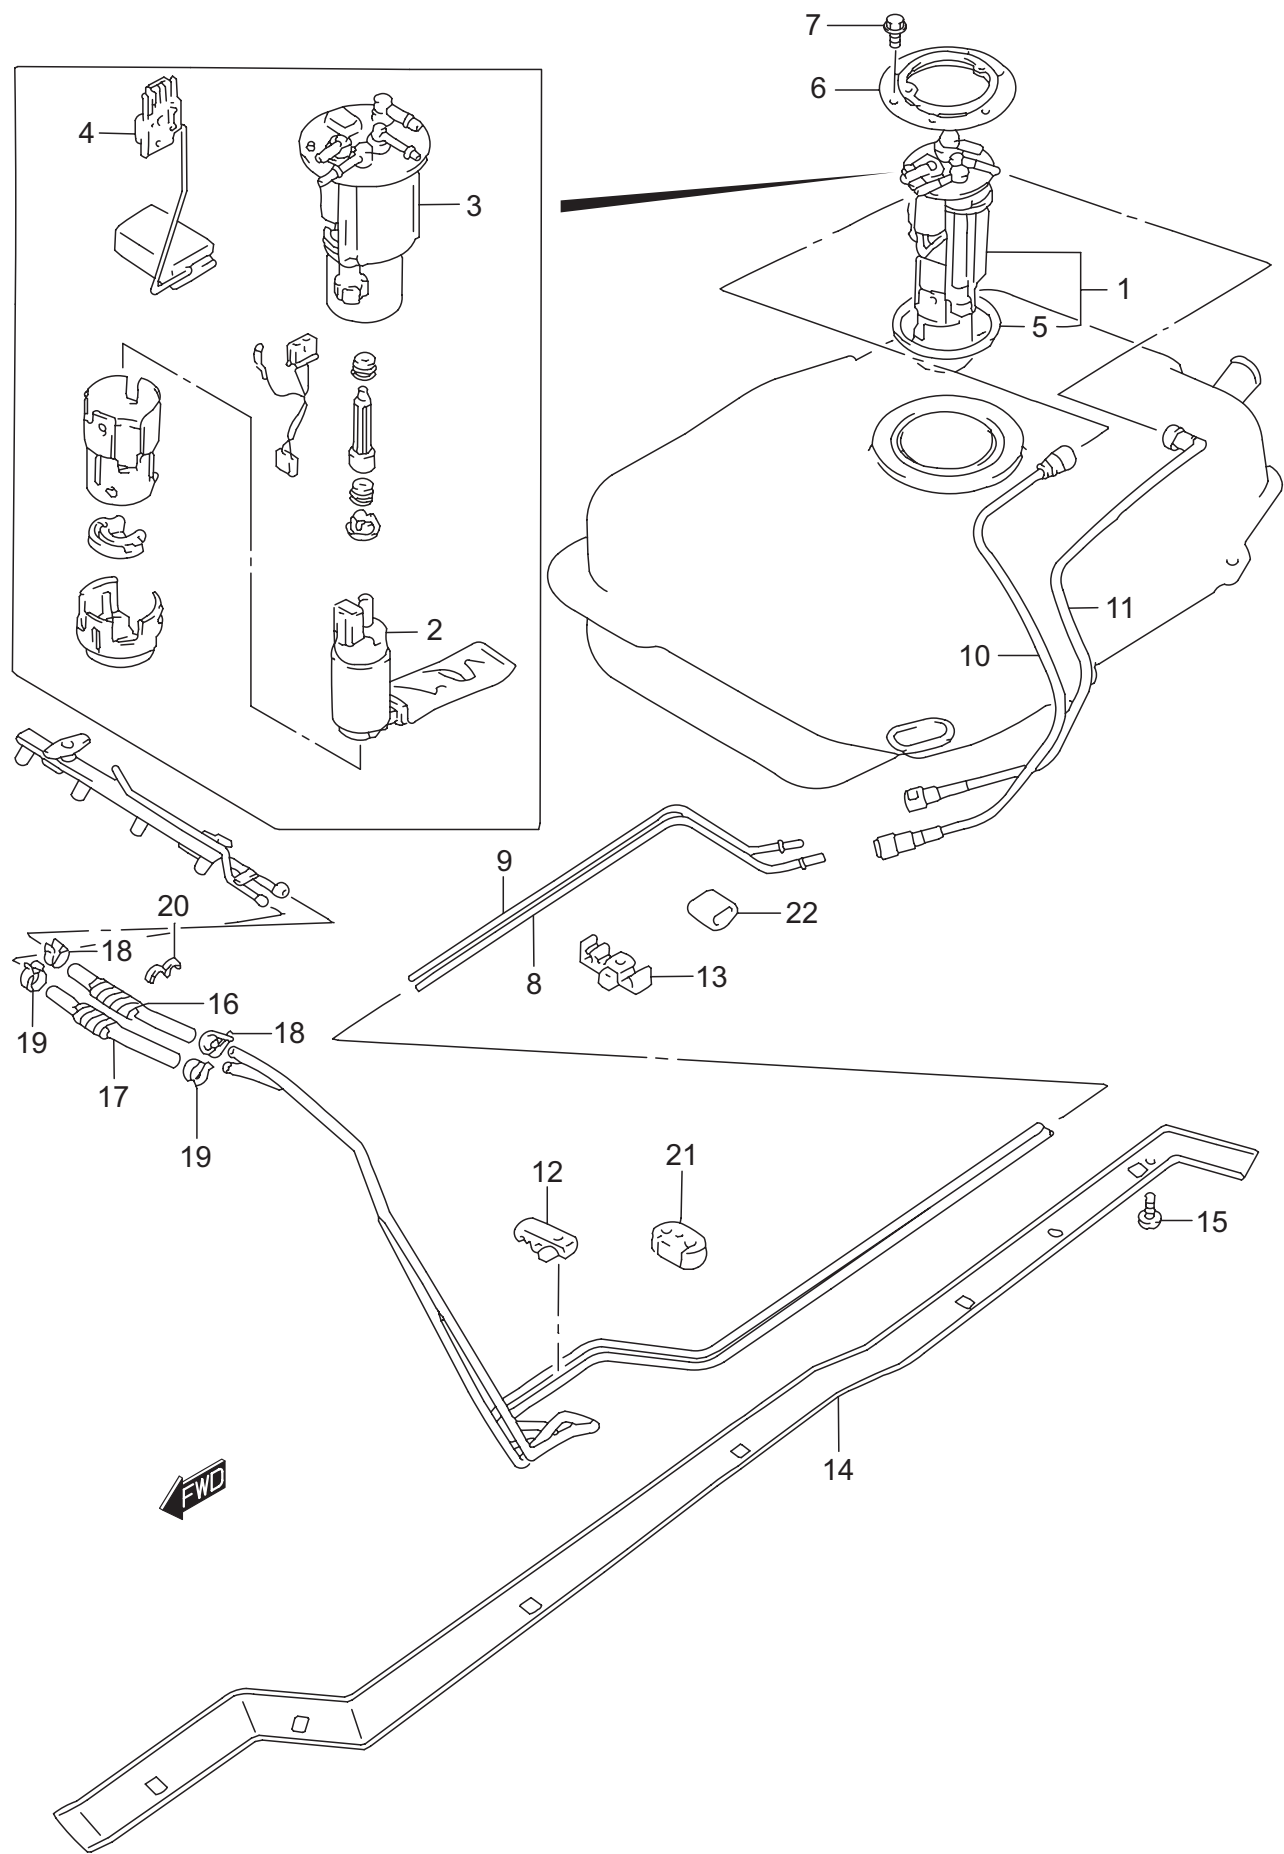


FIG.Nº.14 - FUEL PUMP

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	15100-75821	GAUGE/PUMP SET, FUEL	1	
2	15110-75F00	.PUMP/FILTER ASSY	1	
3	15310-75F00	.FILTER ASSY	1	
4	34810-75F00	.GAUGE ASSY, FUEL SENDER	1	
5	15111-75F01	.GASKET	1	
6	15121-75F01	PLATE	1	
7	02162-06103	BOLT	6	
8	15811-75F00	PIPE, FUEL	1	
9	15861-75F00	PIPE, FUEL RETURN	1	
10	15812-75F02	PIPE, FUEL	1	
11	15862-75F02	PIPE, FUEL RETURN	1	
12	15893-67B00	CLAMP	3	
13	15893-75F00	CLAMP	6	
14	15871-75F00	COVER, FUEL PIPE	1	
15	03541-05103	SCREW	6	
16	15815-75FV0	HOSE, FUEL	1	
17	15856-64GV0	HOSE, FUEL RETURN	1	L:360→260
18-1	09401-12404	CLIP	2	
18-2	09401-11420	CLIP	2	2001-6~
19	09401-10409	CLIP	2	
20	09408-00121	CLAMP	1	
21	15438-75F00	CUSHION	1	
22	15439-75F00	CUSHION	1	

FIG.15

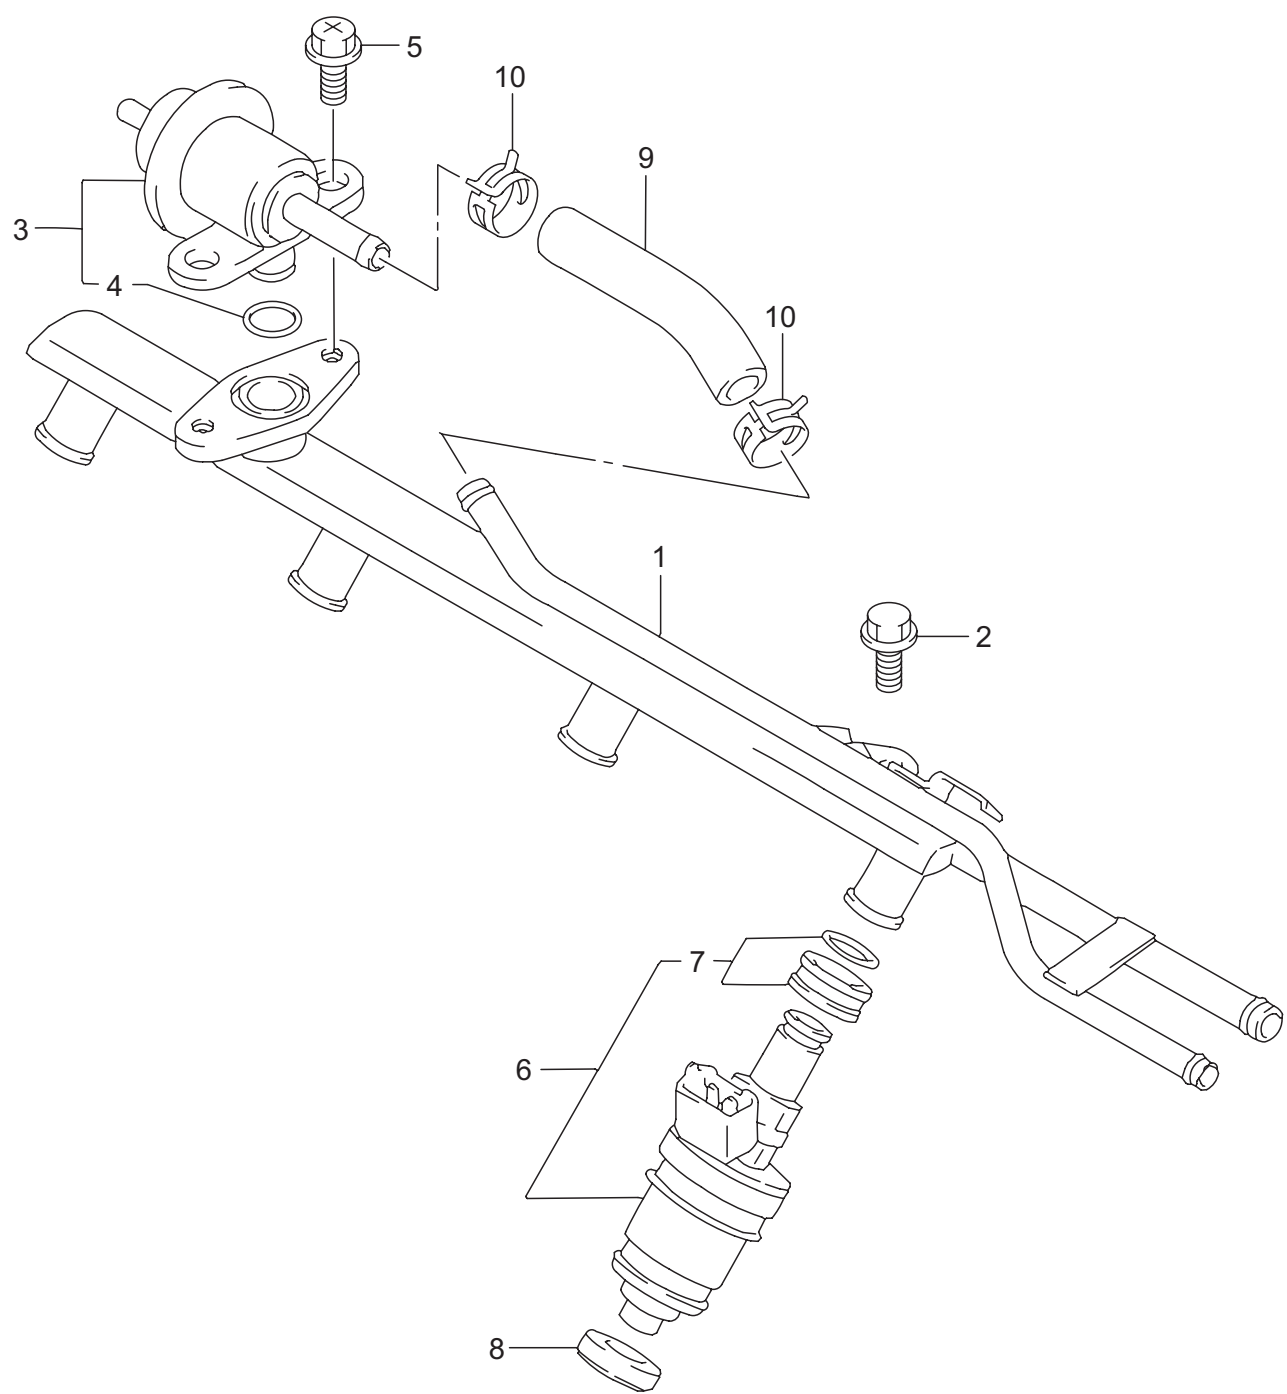


FIG.Nº.15 - DELIVERY PIPE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	15730-75F00	PIPE, DELIVERY	1	
2	01550-06163	BOLT	2	
3	15610-73G00	REGULATOR ASSY, PRESSURE	1	
4	15710-09300	.O RING	1	
5	02162-06123	SCREW	2	
6	15710-75F20	INJECTOR ASSY, FUEL	4	
7	15716-73GT0	.GROMMET SET	4	
8	09320-08062	CUSHION	4	
9	09356-58127-600	HOSE	1	L:600→70
10	09401-10409	CLIP	2	

SR412 E09_016
OIL PUMP



FIG.Nº.16 - OIL PUMP

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	16100-75F03	PUMP ASSY, OIL	1	
2	16130-70B01	.ROTOR SET	1	
3	02122-06163	.SCREW	7	
4	16150-60A10	.VALVE SET	1	
5	08331-41156	..CIRCLIP	1	
6	04211-09109	PIN	2	
7	01550-06303	BOLT	6	
8	01550-06503	BOLT	4	
9	01550-08403	BOLT	5	
10	09103-08344	BOLT (8X40)	1	
11	37820-82001	SWITCH ASSY, OIL PRESSURE	1	
12	16210-73H00	FILTER, OIL GALLERY	1	2000-7~

FIG.17

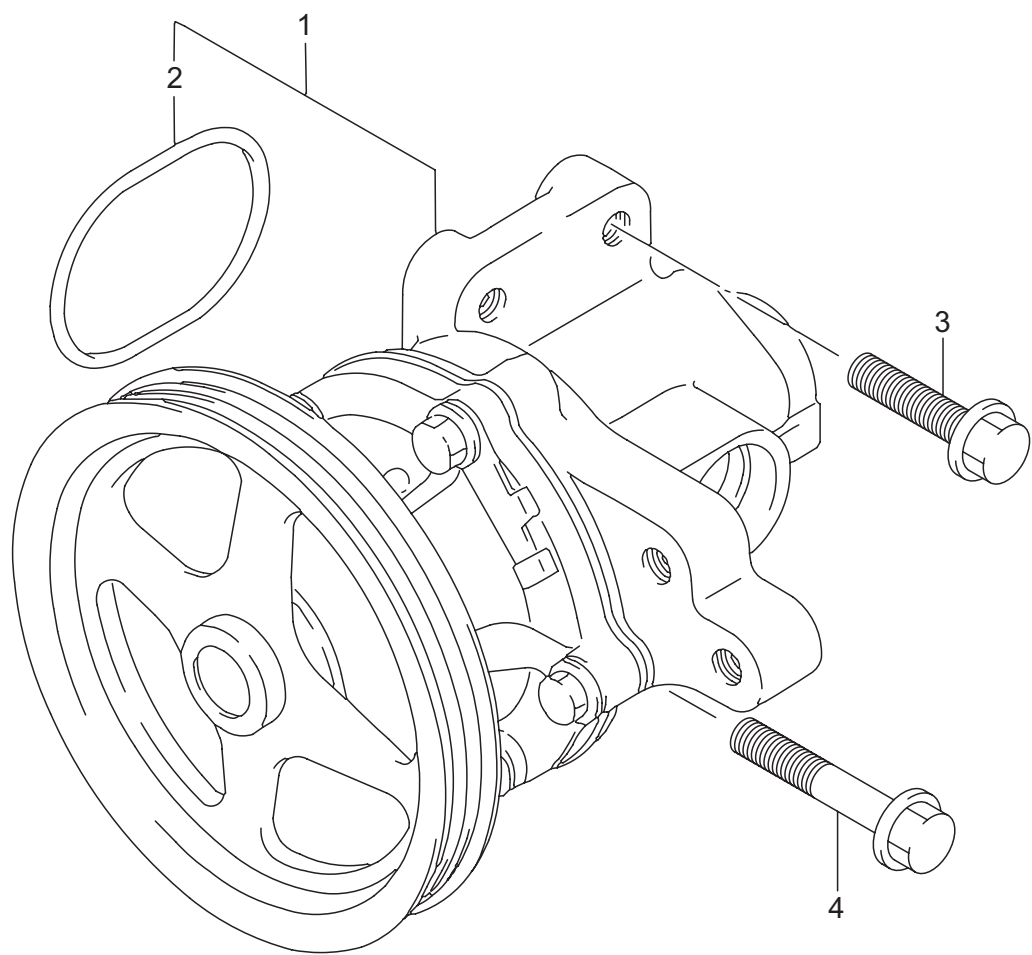


FIG.Nº.17 - WATER PUMP

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	17400-78850	PUMP SET, WATER	1	
2	17611-73G00	.O RING	1	
3	01550-08303	BOLT	2	
4-1	09103-08350	BOLT (8X40)	2	
4-2	01550-08403	BOLT	2	2000-6~

SR412 E09_018
RADIATOR

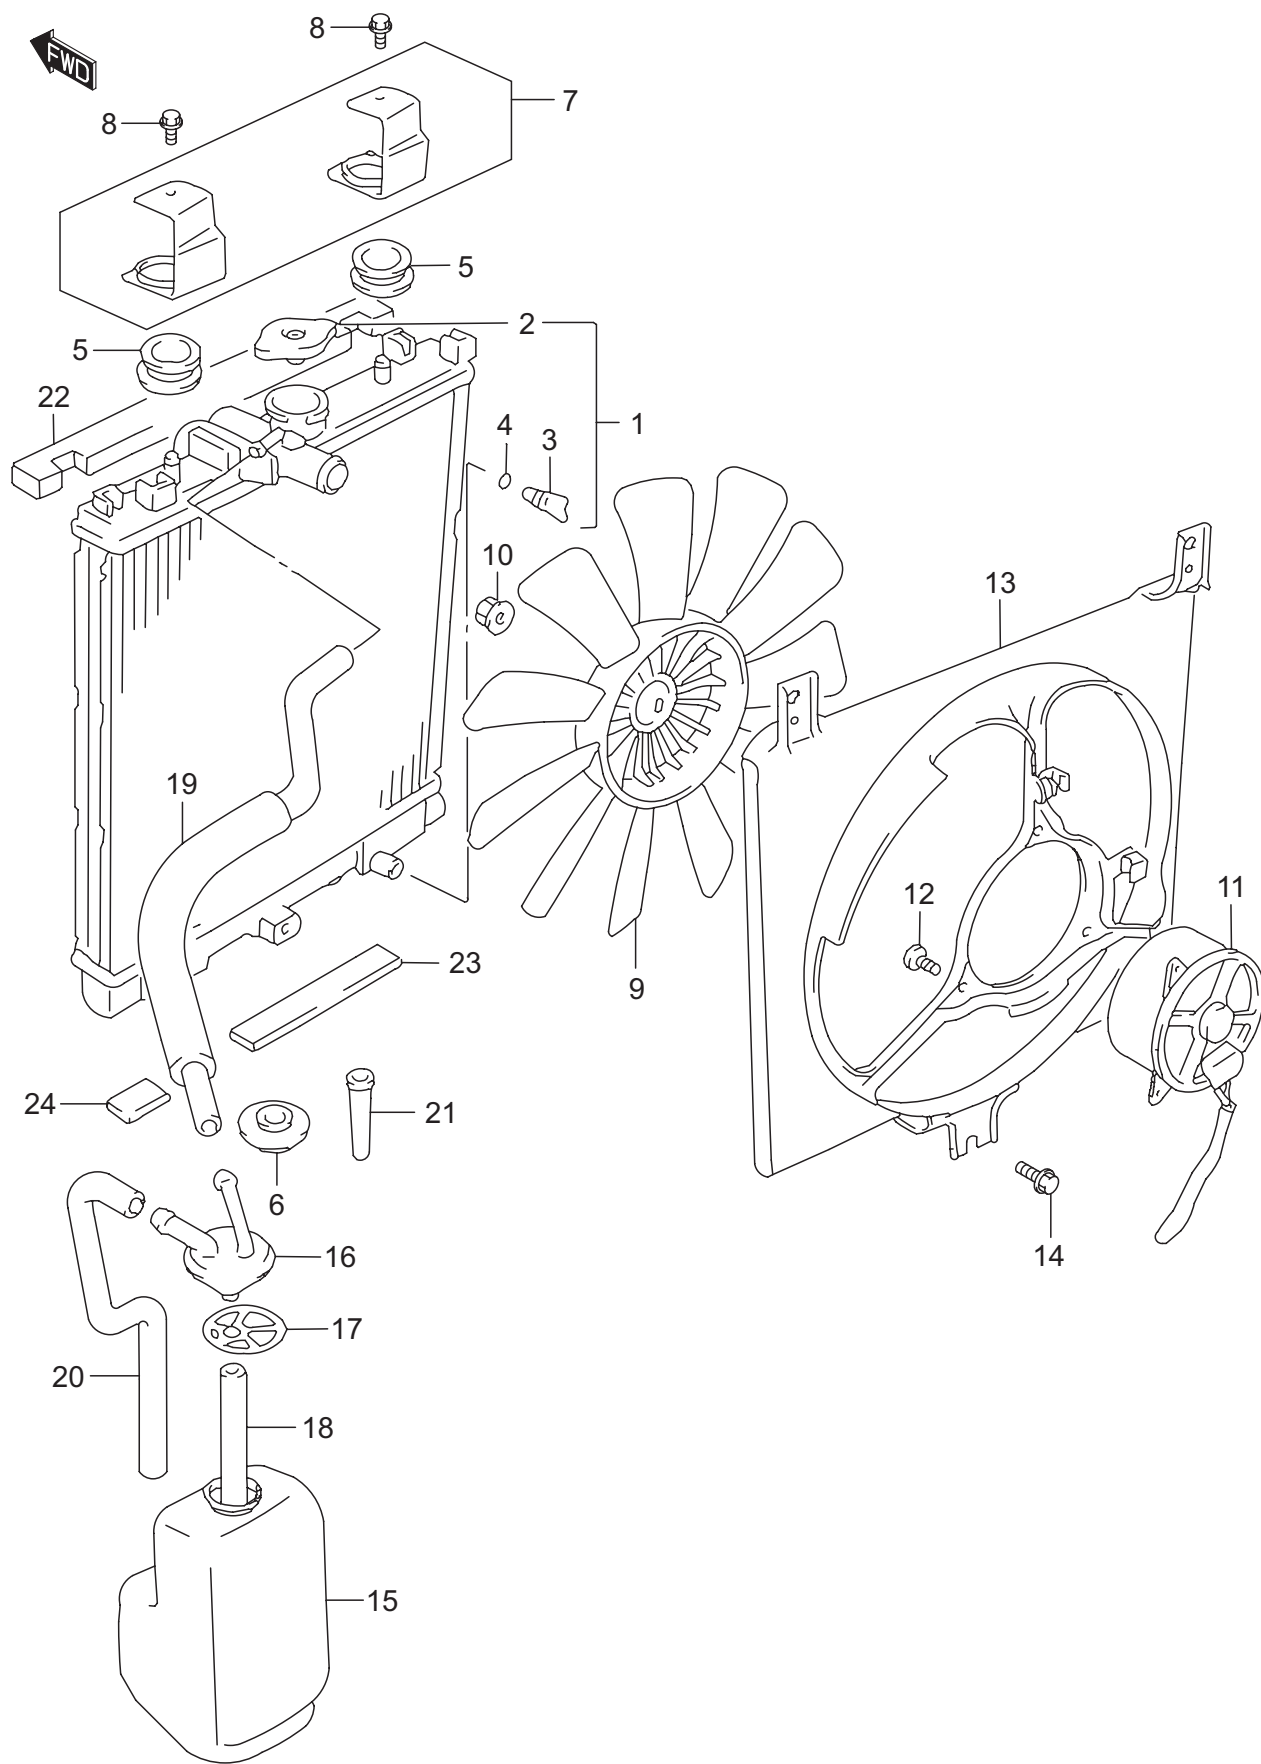


FIG.Nº.18 - RADIATOR

REF.Nº. PARTE		DESCRIPCION	CXV		OBSERVACIONES
1-1	17700-75F00	RADIATOR ASSY	1	MT	
1-2	17700-75F10	RADIATOR ASSY	1	AT	
2	17920-66F01	.CAP	1		
3	17751-61A00	.PLUG, DRAIN	1		
4	17759-72010	.O RING	1		
5	17879-75F00	MOUNT, RADIATOR SUPPORT UPPER	2		
6	17878-75F00	MOUNT, RADIATOR SUPPORT LOWER	2		
7	17860-75810	BRACKET SET, RADIATOR SUPPORT	1		
8	02162-06123	SCREW	2		
9	17111-50E00	FAN, COOLING	1		
10	08316-20053	NUT	1		
11	17120-75F00	MOTOR, FAN	1		
12	02142-05103	SCREW	3		
13	17760-75F03	SHROUD	1		
14	02162-06163	BOLT	3		
15	17931-74F00	TANK, WATER RESERVOIR	1		
16	17932-60D20	CAP	1		
17	17933-60B00	RUBBER	1		
18	09352-70111-600	HOSE	1	L:600→210	
19	17938-75F00	HOSE, RESERVOIR TANK	1		
20	17936-74F00	HOSE, VENT	1		
21	17711-75F00	GUIDE, WATER DRAIN	1		
22	17731-75F00	PACKING, RADIATOR UPPER	1		
23	17732-75F00	PACKING, RADIATOR LOWER NO.1	1		
24	17733-75F00	PACKING, RADIATOR LOWER NO.2	1		

FIG.19

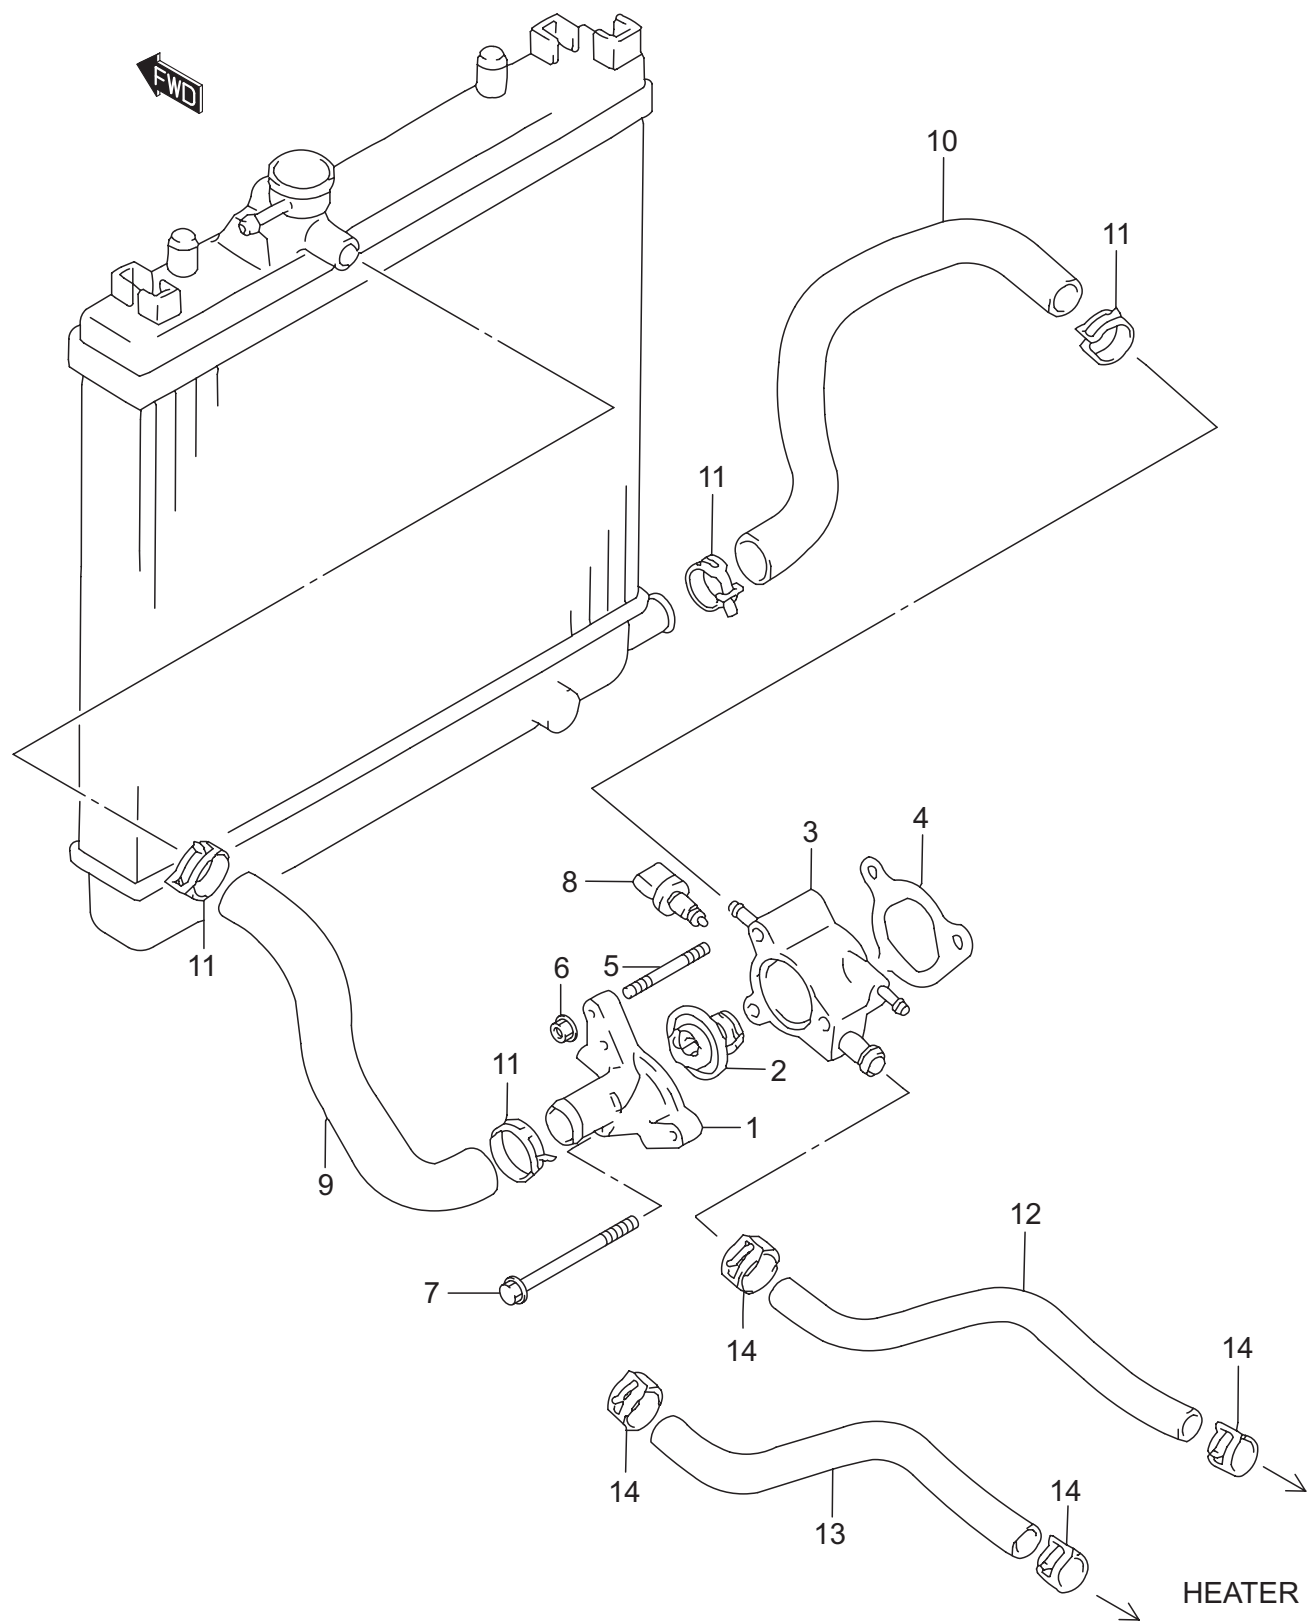


FIG.Nº.19 - WATER HOSE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	17561-75F00	CAP, WATER THERMOSTAT	1	
2-1	17670-50G00	THERMOSTAT, WATER (82 C)	1	
2-2	17670-76G00	THERMOSTAT, WATER (82 C)	1	1999-9~
3	17690-75FV1	CASE, THERMOSTAT	1	
4	17699-73G01	GASKET	1	
5	01421-08753	STUD BOLT	2	
6	08316-10083	NUT	2	
7	01550-08803	BOLT	1	
8	13650-50G01	SENSOR, WATER TEMPERATURE	1	
9	17852-75F01	HOSE, RADIATOR INLET	1	
10	17854-75F00	HOSE, RADIATOR OUTLET	1	
11	09402-32502	CLAMP	4	
12	17871-75F00	HOSE, HEATER INLET	1	
13	17871-71X50	HOSE, HEATER OUTLET	1	
14	09401-18403	CLIP	4	

FIG.20

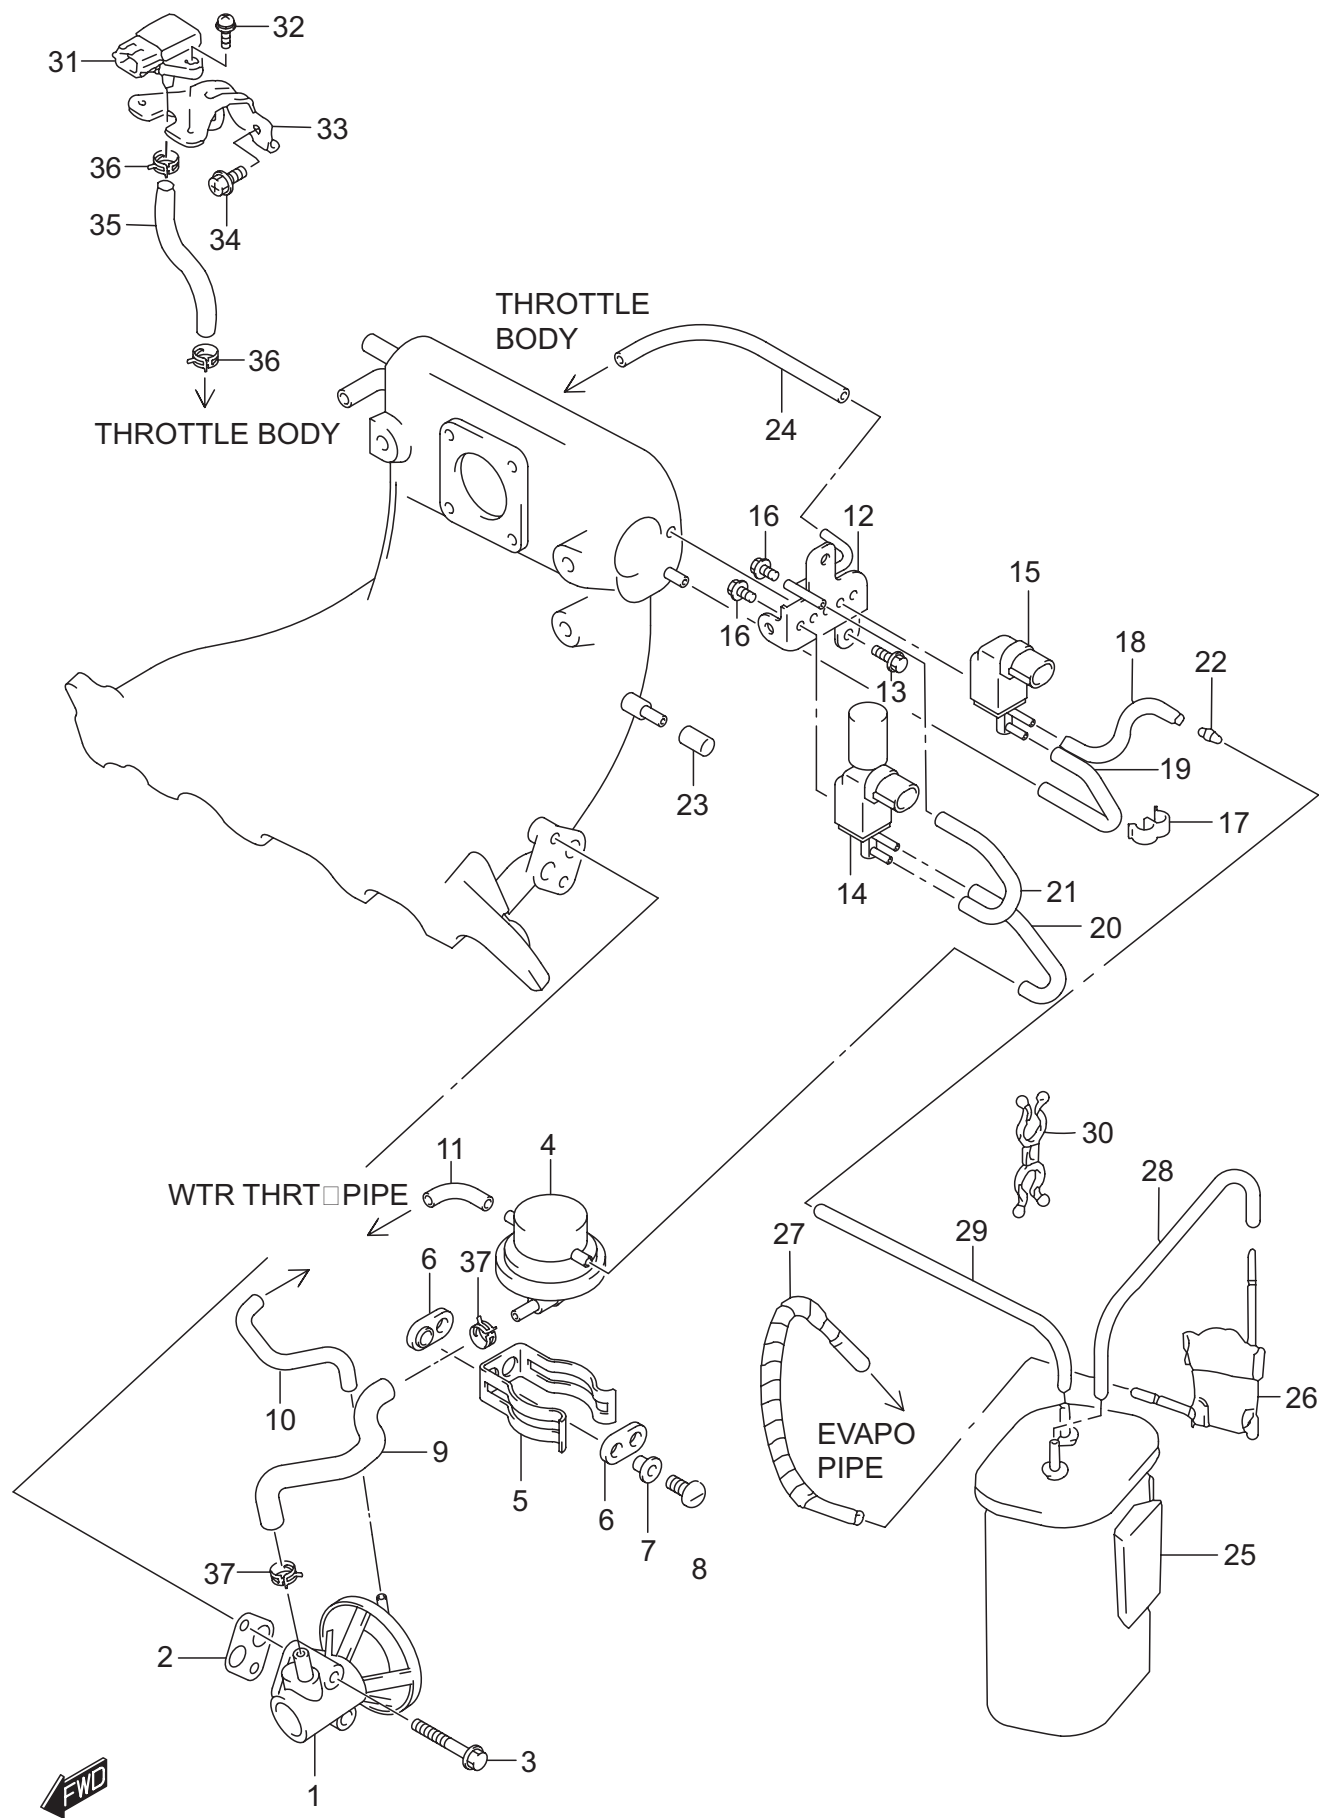


FIG.Nº.20 - EMISSION CONTROL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	18111-86010	VALVE, EGR	1	
2	18529-60A00	GASKET, EGR VALVE	1	
3	01550-06453	BOLT	2	
4	18112-75F10	MODULATOR ASSY, EGR	1	
5	13814-82000	CLAMP, MODULATOR	1	
6	13817-82000	CUSHION	2	
7	13815-82000	SPACER	2	
8	02142-06163	SCREW	2	
9	18471-75F12	HOSE, EGR MODULATOR	1	
10	09355-35754-601	HOSE, VACUUM	1	L:601→70
11	09355-35754-601	HOSE, VACUUM	1	L:601→30
12	18411-75F11	BRACKET, PURGE VSV	1	
13	01550-06123	BOLT	2	
14	18117-80F00	VALVE, EGR VACUUM	1	
15	18114-75F10	VALVE, CANISTER PURGE	1	
16	02162-05083	SCREW, VSV	2	
17	09408-00033	CLIP	2	
18	09355-35754-601	HOSE, VACUUM	1	L:601→140
19	09355-35754-601	HOSE, VACUUM	1	L:601→90
20	09355-35754-601	HOSE, VACUUM	1	L:601→140
21	09355-35754-601	HOSE, VACUUM	1	L:601→150
22	09367-04008	JOINT, 2 WAY	1	
23	09250-04003	PLUG	1	
24	09355-35754-601	HOSE, VACUUM	1	L:601→130
25	18560-50G01	CANISTER	1	
26	18570-75F10	PIPE, CANISTER	1	
27	18562-75F11	HOSE, CANISTER INLET	1	
28	09355-35754-601	HOSE, VACUUM	1	L:601→150
29	09355-35754-601	HOSE, VACUUM	1	L:601→280
30	09408-00010	CLAMP	1	
31	18590-75F00	SENSOR, PRESSURE	1	
32	02112-74163	SCREW	2	
33	18599-75F00	BRACKET, P-SNSR	1	

FIG.Nº.20 - EMISSION CONTROL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
34	02162-06123	BOLT	1	
35	09355-40805-600	HOSE	1	L:600→180
36	09401-07402	CLIP	2	
37	09401-11415	CLIP	2	

FIG.21

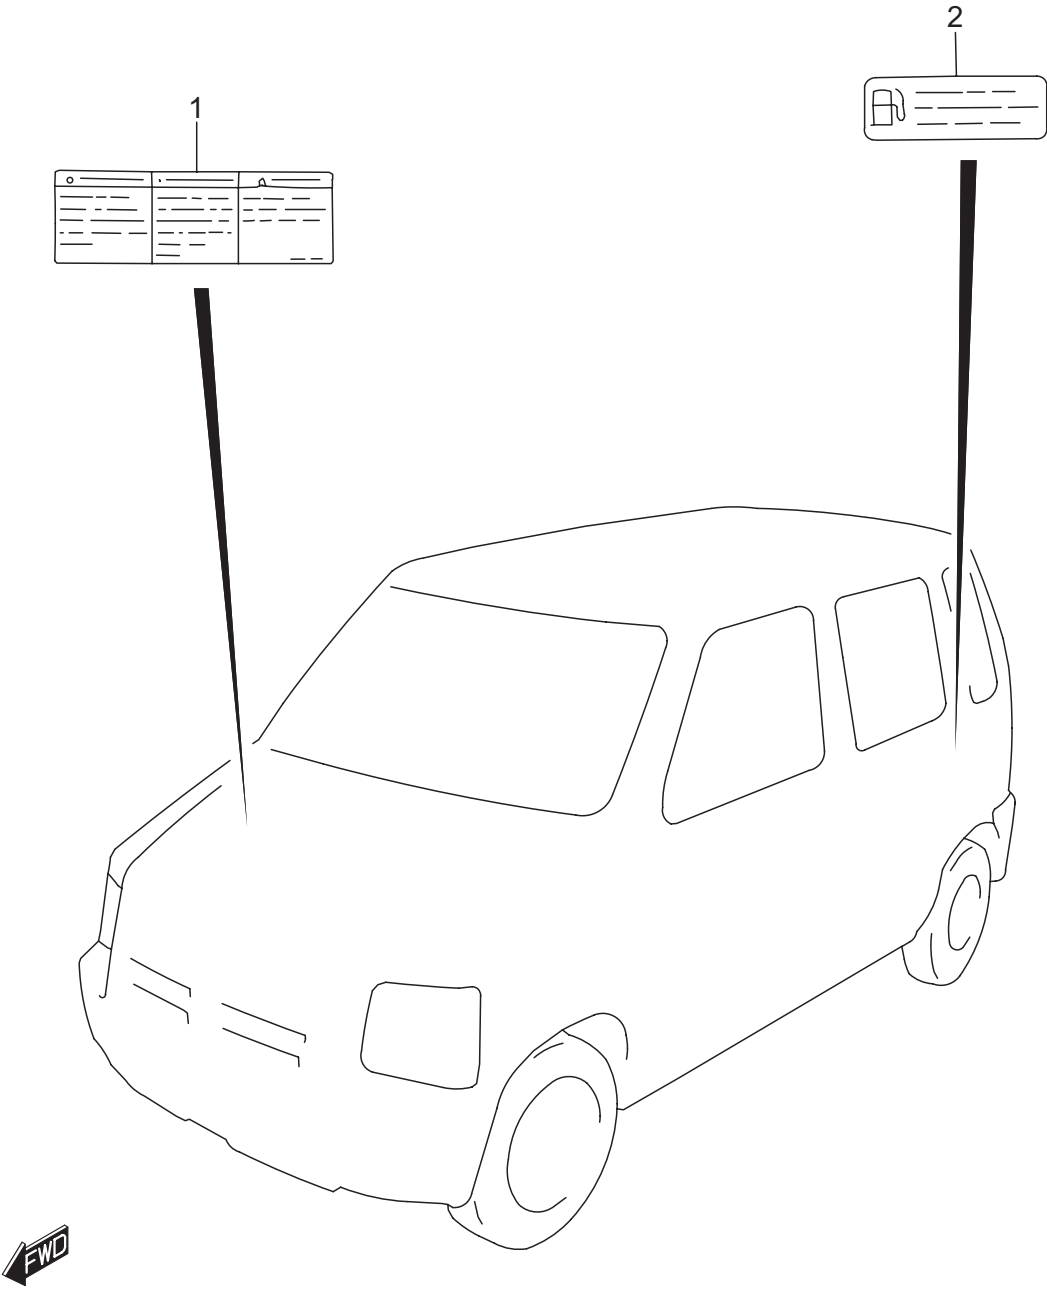


FIG.Nº.21 - LABEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	11958-65G10	LABEL, ENGINE COOLING FAN	1	
2	11959-60E00	LABEL, FUEL LIMITATION	1	

FIG.22

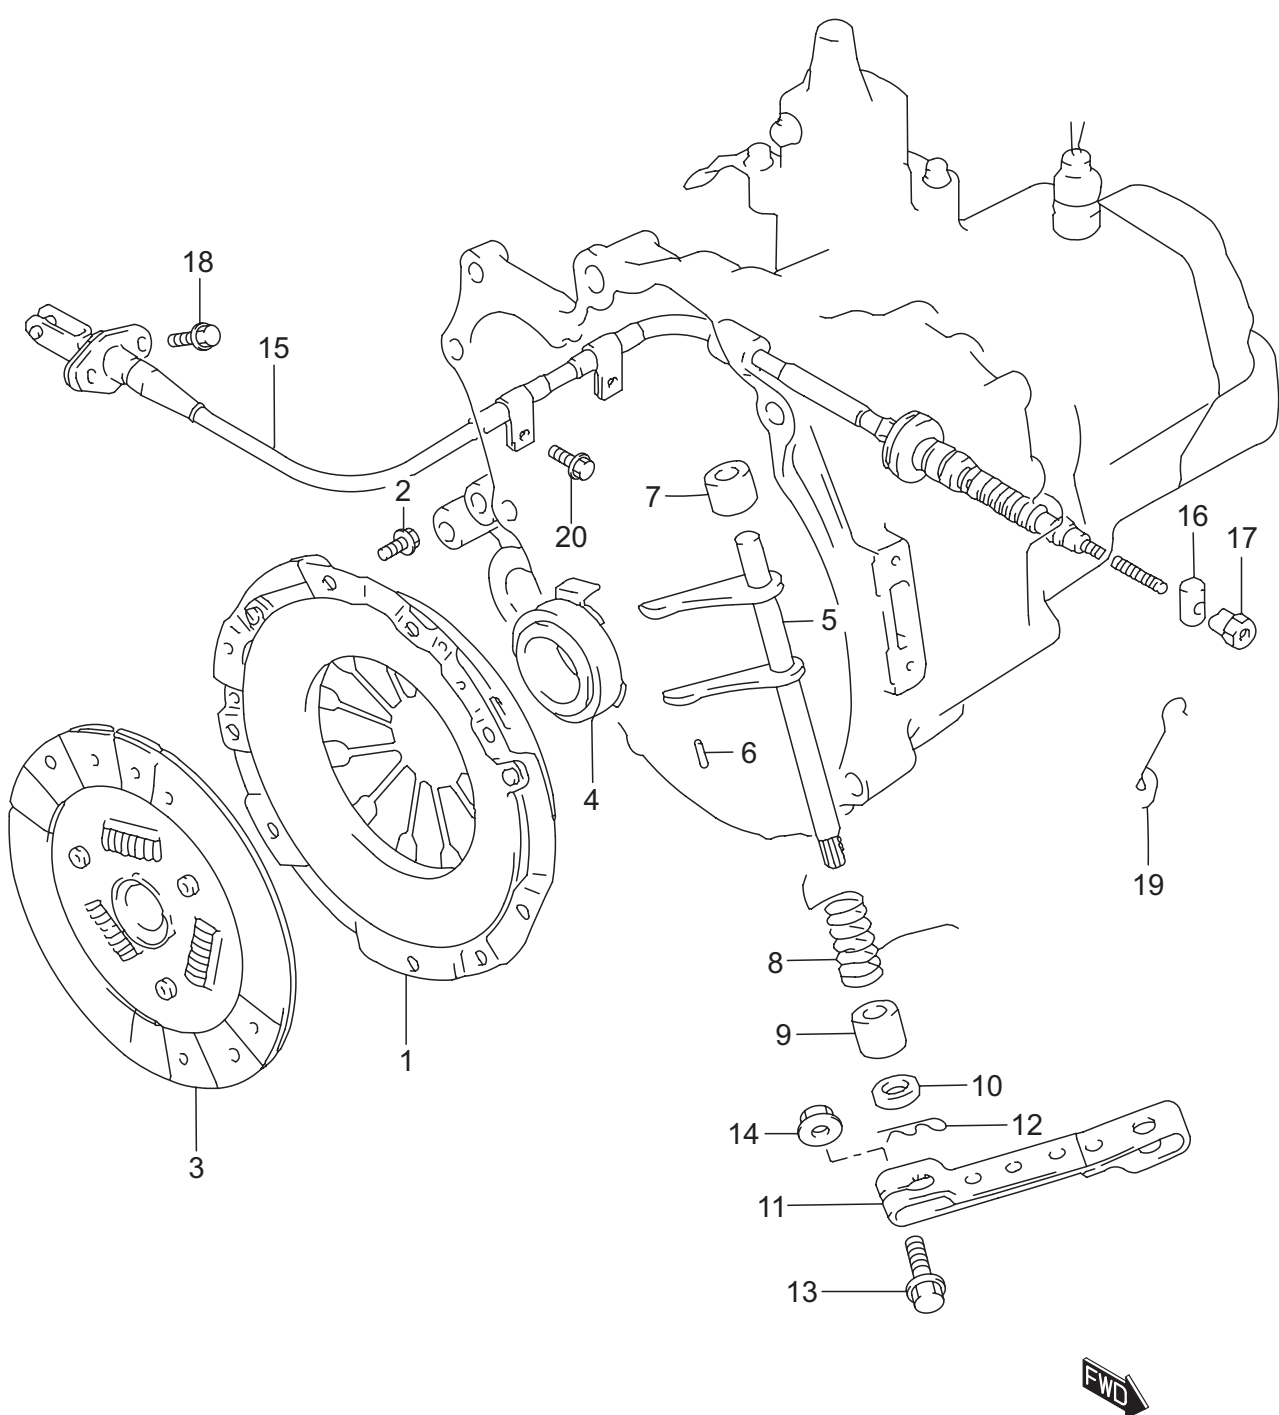


FIG.Nº.22 - MT CLUTCH (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	22100-75F00	COVER ASSY, CLUTCH	1	
2	09117-08096	BOLT (8X16)	6	
3	22400-75F20	DISC, CLUTCH	1	
4	09269-28004	BEARING	1	
5	23260-73B20	SHAFT, CLUTCH RELEASE	1	
6	09205-03019	SPRING PIN	1	
7	09300-14016	BUSH	1	
8	23269-73B00	SPRING, RETURN	1	
9	09300-14017	BUSH	1	
10	09283-14006	SEAL, OIL	1	
11	23266-75F00	ARM, CLUTCH RELEASE	1	
12	09385-10005	CLIP	1	
13	01550-08353	BOLT	1	
14	08316-10083	NUT	1	
15	23710-75F21	CABLE ASSY, CLUTCH	1	
16	09209-13018	PIN	1	
17	09150-06014	NUT	1	
18	02162-06163	SCREW	2	
19	23915-73B02	CLAMP, CLUTCH CABLE	1	
20	02162-06123	SCREW	1	

FIG.23

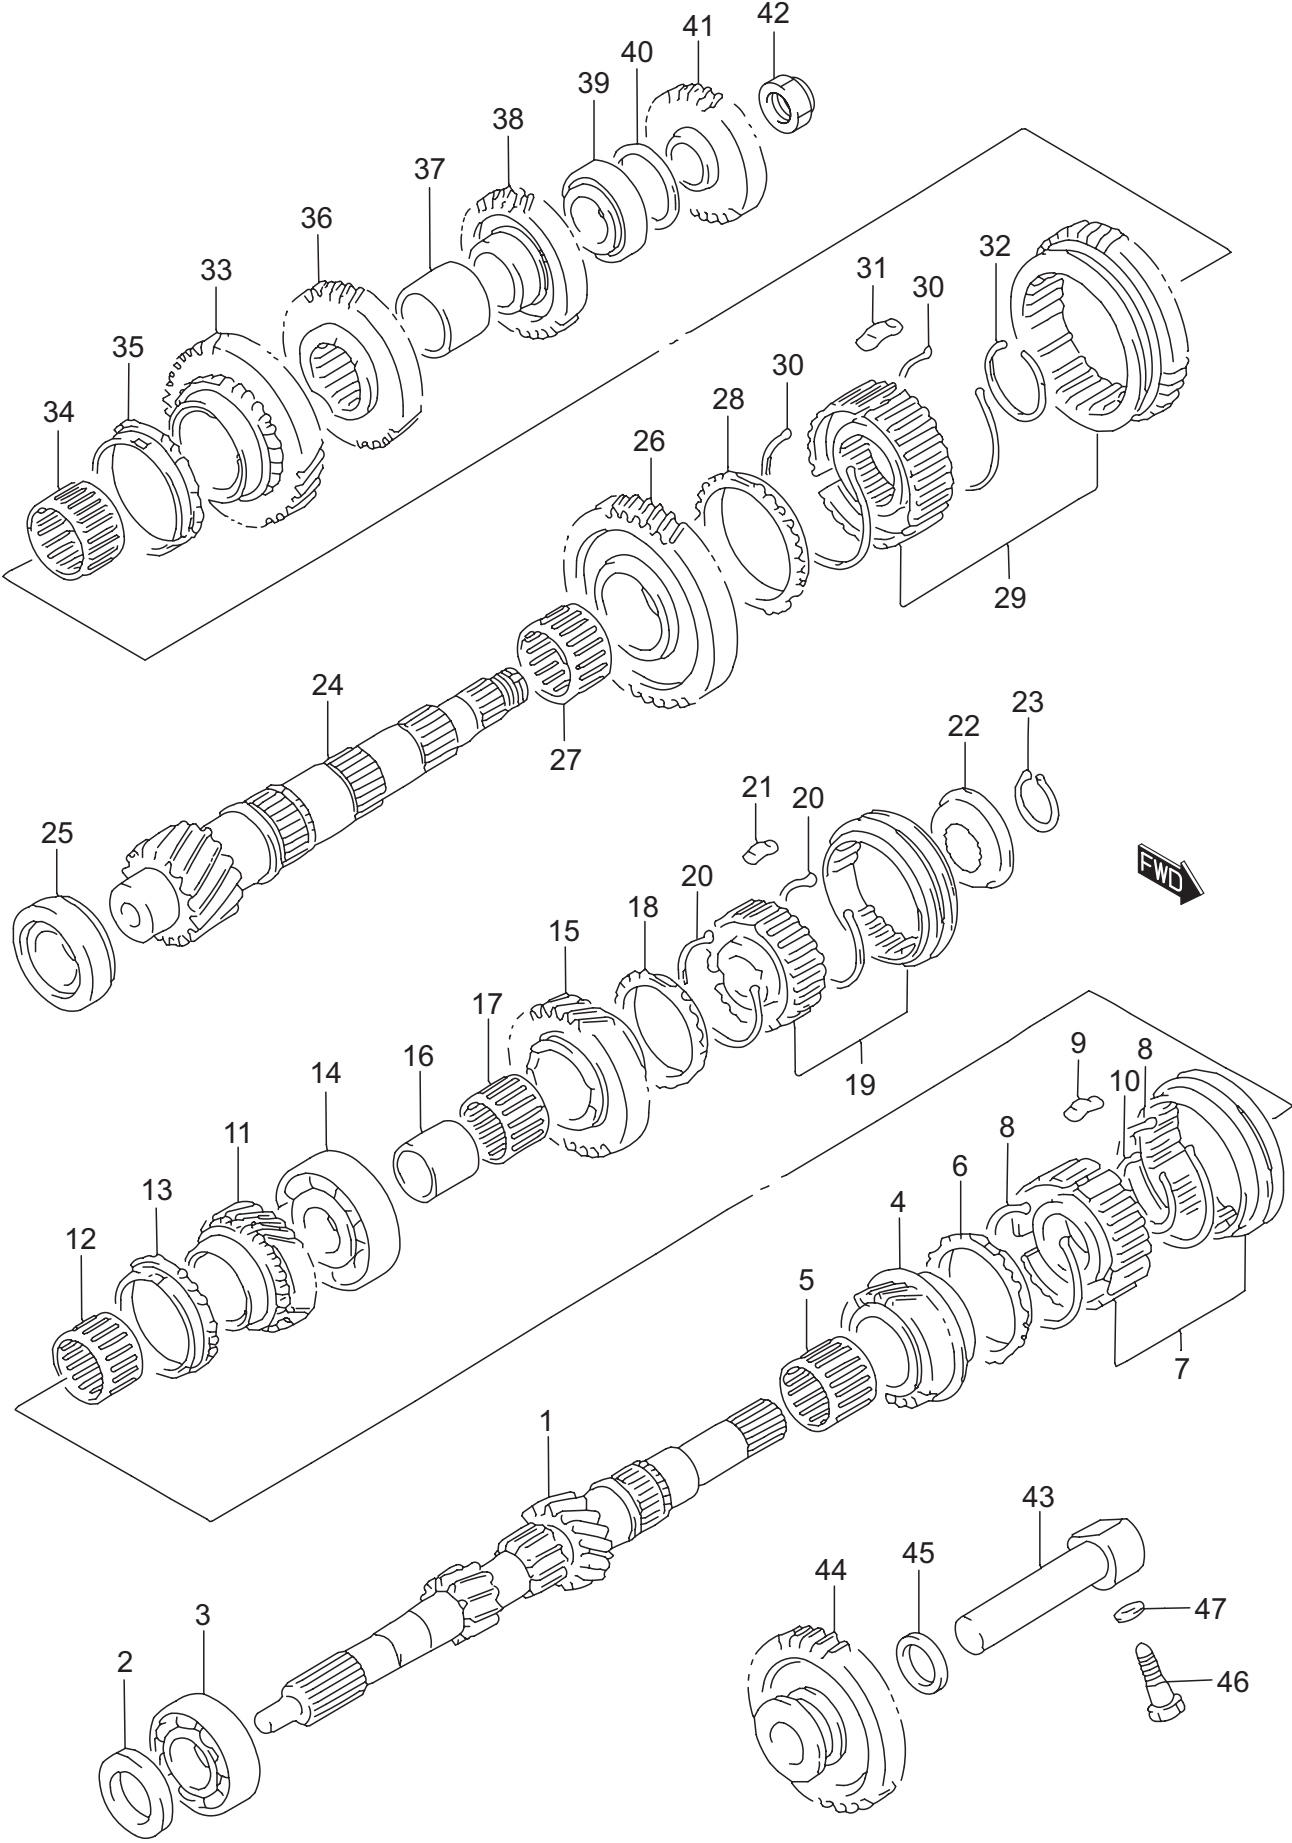


FIG.Nº.23 - MT TRANSMISSION (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	24111-78G60	SHAFT, INPUT	1	
2	24151-60BD1	SEAL, INPUT SHAFT OIL	1	
3	09262-22031	BEARING (20X47X14)	1	
4	24230-60B10	GEAR, INPUT SHAFT 3RD	1	
5	09263-25053	BEARING (25X30X23.8)	1	
6	24432-60B20	RING, SYNCHRONIZER	1	
7	24410-63B40	HUB ASSY, HIGH SPEED SYNC	1	
8	24442-60B00	SPRING, SYNCHRONIZER	2	
9	24472-60B20	KEY, SYNCHRONIZER	3	
10	24452-60B00	CIRCLIP, HUB	1	
11	24240-60B00	GEAR, INPUT SHAFT 4TH	1	
12	09263-25053	BEARING (25X30X23.8)	1	
13	24432-60B20	RING, SYNCHRONIZER	1	
14	09262-20100	BEARING (20X62X16)	1	
15-1	24114-75F00	GEAR, INPUT SHAFT 5TH	1	
15-2	24114-75F01	GEAR, INPUT SHAFT 5TH	1	1999-12~
16	24119-73B51	SPACER, 5TH GEAR	1	
17	09263-25053	BEARING (25X30X23.8)	1	
18	24432-84041	RING, SYNCHRONIZER	1	
19	24420-60B51	HUB ASSY, 5TH SPEED SYNC	1	
20	24443-60B50	SPRING, SYNCHRONIZER	2	
21	24473-60B20	KEY, SYNCHRONIZER	3	
22	24415-60B50	PLATE, HUB	1	
23	09380-19004	SNAP RING	1	
24	24131-78G60	SHAFT, COUNTER	1	
25	09265-25036	BEARING (25X47X17)	1	
26	24311-63B00	GEAR, COUNTER SHAFT 1ST	1	
27	09263-30030	BEARING (30X35X24.8)	1	
28	24431-60B00	RING, LOW GEAR SYNCHRONIZER	1	
29	24400-63870	HUB ASSY, LOW SPEED SYNC	1	
30	24441-60B00	SPRING, SYNCHRONIZER	2	
31	24471-60B00	KEY, SYNCHRONIZER	3	
32	24451-60B00	CIRCLIP	1	

FIG.Nº.23 - MT TRANSMISSION (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
33	24321-60B00	GEAR, COUNTER SHAFT 2ND	1	
34	09263-30030	BEARING (30X35X24.8)	1	
35	24431-63B20	RING, 2ND GEAR SYNCHRONIZER	1	
36	24331-60B00	GEAR, COUNTER SHAFT 3RD	1	
37	24336-60B00	SPACER, 3RD/4TH GEAR	1	
38	24341-60B00	GEAR, COUNTER SHAFT 4TH	1	
39	09265-20005	BEARING (20X42X15)	1	
40-1	09170-33421-040	SHIM (T:0.40)	0~1	
40-2	09170-33421-045	SHIM (T:0.45)	0~1	
40-3	09170-33421-050	SHIM (T:0.50)	0~1	
40-4	09181-33001	SHIM (T:0.55)	0~1	
40-5	09181-33002	SHIM (T:0.60)	0~1	
40-6	09181-33003	SHIM (T:0.65)	0~1	
40-7	09181-33004	SHIM (T:0.70)	0~1	
40-8	09181-33005	SHIM (T:0.75)	0~1	
40-9	09181-33006	SHIM (T:0.80)	0~1	
40-10	09181-33007	SHIM (T:0.85)	0~1	
40-11	09181-33008	SHIM (T:0.90)	0~1	
40-12	09181-33009	SHIM (T:0.95)	0~1	
40-13	09160-33003	SHIM (T:1.00)	0~1	
40-14	09160-33004	SHIM (T:1.05)	0~1	
40-15	09160-33005	SHIM (T:1.10)	0~1	
40-16	09160-33006	SHIM (T:1.15)	0~1	
41-1	24351-75F00	GEAR, COUNTER SHAFT 5TH	1	
41-2	24351-75F01	GEAR, COUNTER SHAFT 5TH	1	1999-12~
42	09159-16004	NUT	1	
43	24550-63D00	SHAFT, REVERSE GEAR	1	
44	24560-63D00	GEAR, REVERSE IDLER	1	
45	09161-16010	WASHER (16X24X3)	1	
46	24565-60B00	BOLT, REVERSE SHAFT	1	
47	09168-09001	WASHER (9.2X17X1.6)	1	
48	24436-76G00	SPRING, SYNC LOW	1	1999-7~

FIG.24

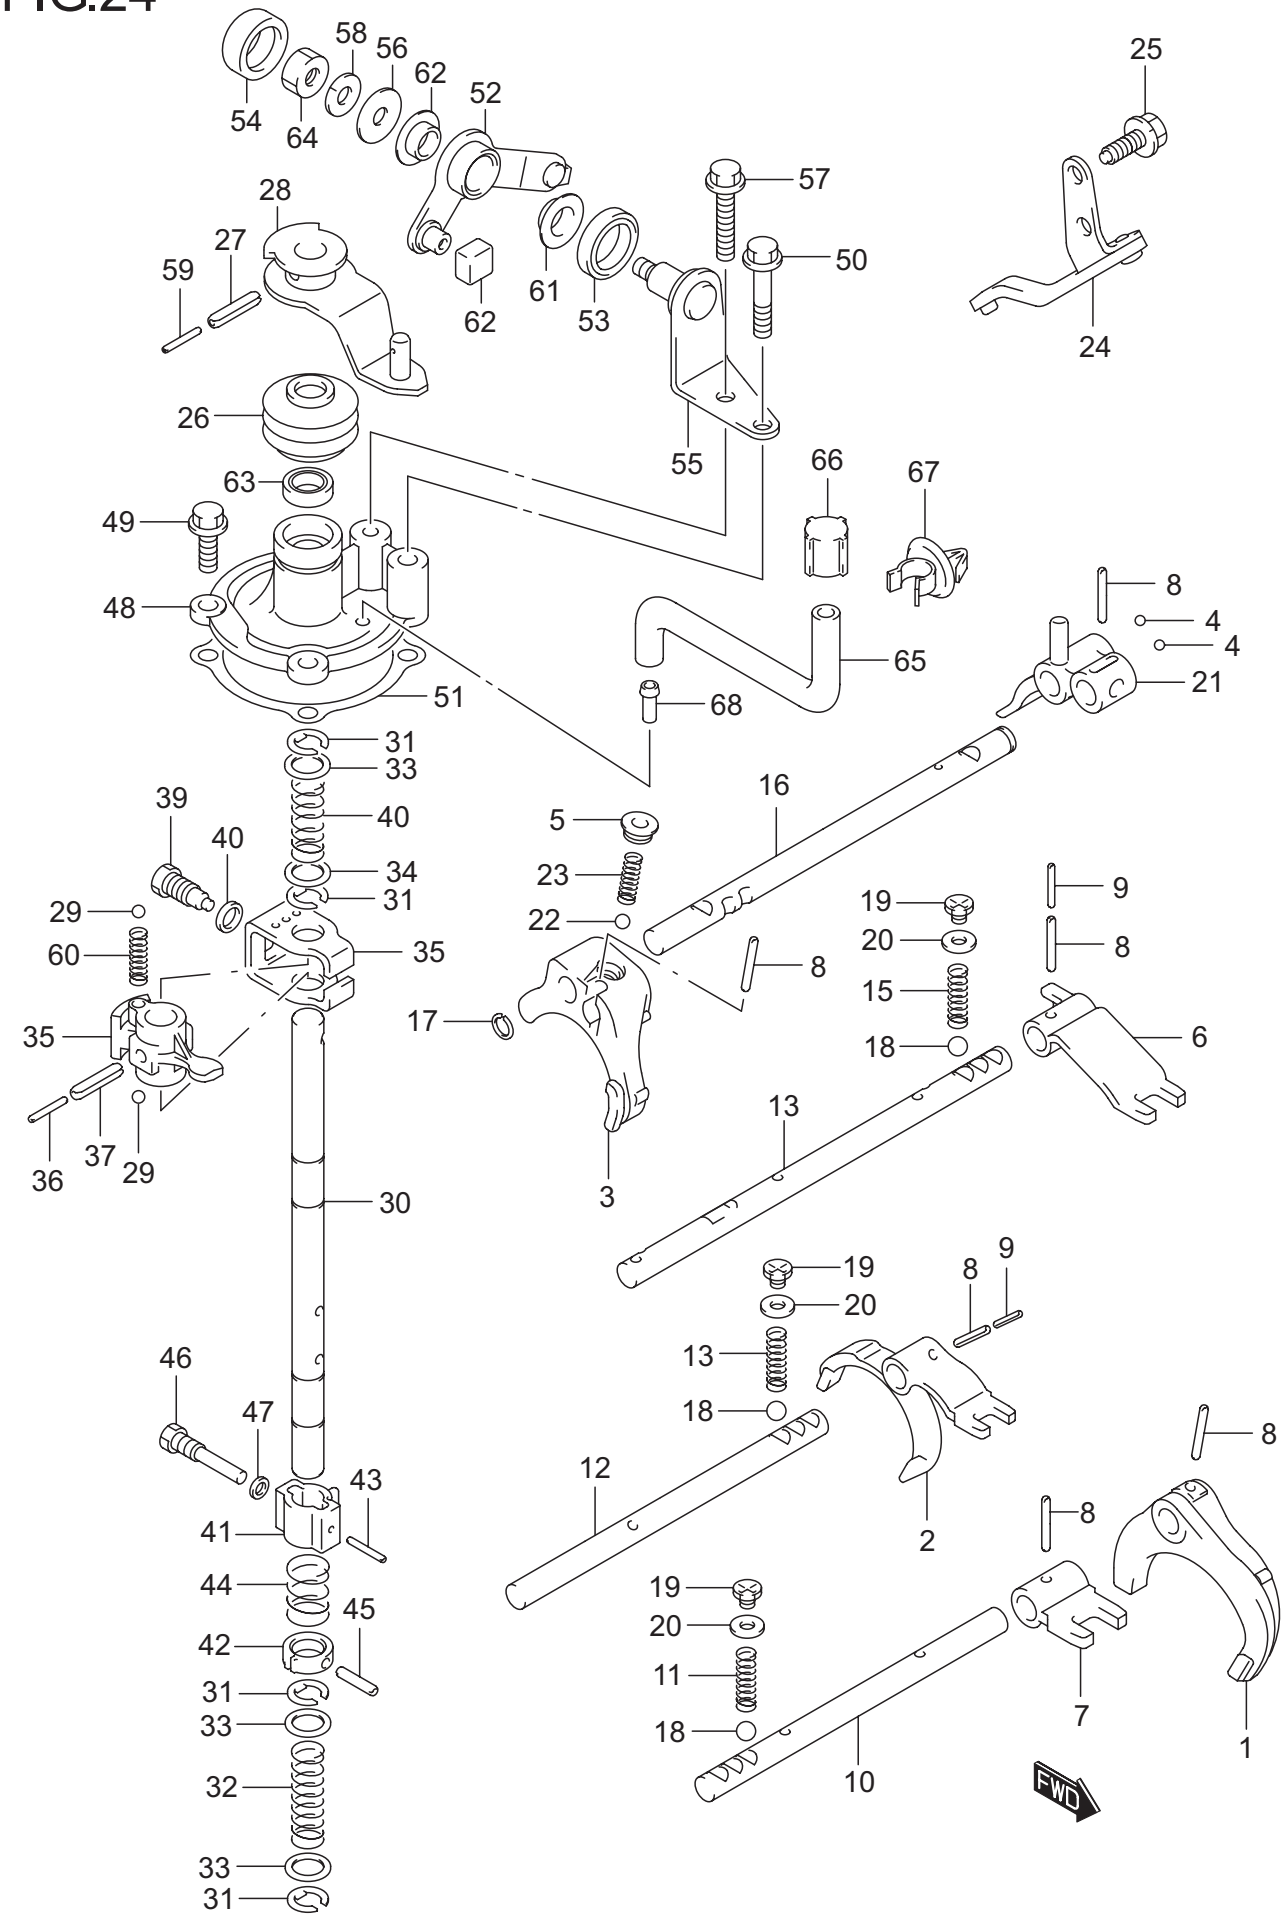


FIG.Nº.24 - MT GEAR SHIFT FORK (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	25211-63D00	FORK, LOW SPEED GEAR SHIFT	1	
2	25280-78G01	FORK, HIGH SPEED GEAR SHIFT	1	
3	25231-70B52	FORK, 5TH GEAR SHIFT	1	
4	06111-10003	BALL	2	
5	09248-10006	PLUG	1	
6	25261-78G00	YOKE, 5TH/REVERSE GEAR SHIFT	1	
7	25271-78G00	YOKE, LOW SPEED GEAR SHIFT	1	
8	09205-04015	SPRING PIN (4.5X20)	7	
9	09205-02016	SPRING PIN (2.7X20)	2	
10	25411-78G01	SHAFT, LOW SPEED GEAR SHIFT	1	
11	25425-60B01	SPRING, LOCATING	1	
12	25421-78G00	SHAFT, HIGH SPEED GEAR SHIFT	1	
13	25425-60B01	SPRING, LOCATING	1	
14	25451-78G02	SHAFT, 5TH/REVERSE GEAR SHIFT	1	
15	25435-70B00	SPRING, LOCATING	1	
16	25431-73B52	SHAFT, GEAR SHIFT GUIDE	1	
17	08331-31126	CIRCLIP	1	
18	06111-10003	BALL	3	
19	09128-10002	BOLT (10X9)	3	
20	08322-01103	WASHER	3	
21	25251-78G00	ARM, REVERSE GEAR SHIFT	1	
22	06111-10003	BALL	1	
23	25255-60B01	SPRING, REVERSE GEAR SHIFT ARM	1	
24	25460-78G00	LEVER, REVERSE GEAR SHIFT	1	
25	01570-08203	BOLT	2	
26	25651-74B00	BOOT, GEAR SHIFT SHAFT	1	
27	09205-06007	BALL	1	
28-1	25610-80G00	ARM, GEAR SHIFT	1	
28-2	25610-78G00	ARM, GEAR SHIFT	1	2000-5~
29	06111-07004	BOLT, GEAR SHIFT YOKE	2	
30	25571-78G01	SHAFT, GEAR SHIFT/SELECT	1	
31	08332-11126	E RING	4	
32-1	25576-60D00	SPRING, SELECT	1	

FIG.Nº.24 - MT GEAR SHIFT FORK (MT)

REF.Nº. PARTE	DESCRIPCION	CXV	OBSERVACIONES
32-2	25576-60D20	1	2000-6~
33	08212-14301	4	
34	25311-60B20	1	
35	25541-74B00	1	
36	09205-03016	1	
37	09205-06004	1	
38	25321-60B01	1	
39	08322-01103	1	
40	25577-60D01	1	
41	25581-50F00	1	
42	25582-60B51	1	
43	09205-03020	1	
44	25583-60B50	1	
45	09205-04015	1	
46	25584-74B00	1	
47	08322-01083	1	
48	25573-78G00	1	
49	09103-08152	3	
50	09103-08366	1	
51	25574-74B00	1	
52	25620-75F00	1	
53	25624-74B00	1	
54	25625-74B00	1	
55	25630-74B01	1	
56	09160-08133	1	
57	01550-08203	1	
58	08321-01083	1	
59	09205-03037	1	
60	25312-74B00	1	
61	25558-74B01	2	
62	25559-50F00	1	
63	09283-14006	1	
64	08310-00083	1	

FIG.Nº.24 - MT GEAR SHIFT FORK (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
65	25585-78G00	HOSE, BREATHER	1	
66	27991-65D01	PLUG, BREATHER	1	
67	09403-11311	CLAMP	1	
68	09364-06007	UNION	1	

SR412 E09_025
MT TRANSMISSION CASE (MT)

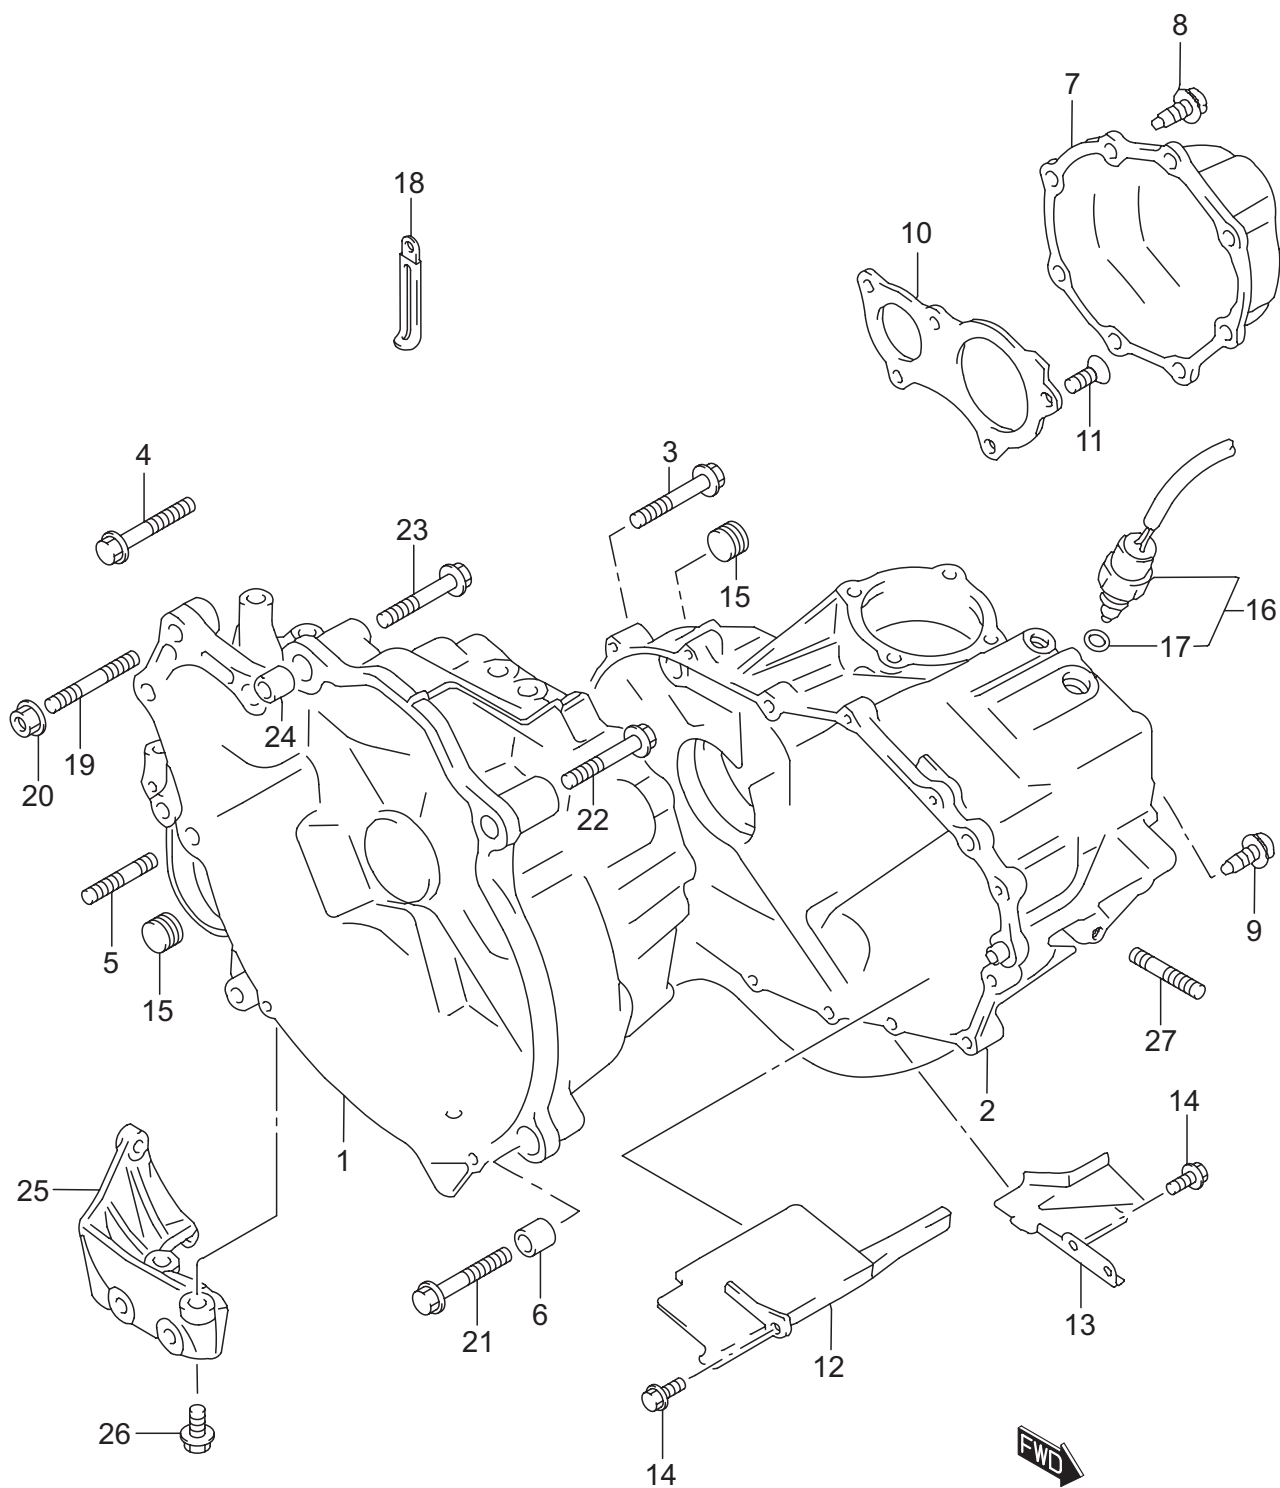


FIG.Nº.25 - MT TM CASE (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	24711-78G20	CASE, TRANSMISSION RH	1	
2	24721-78G00	CASE, TRANSMISSION LH	1	
3	01550-08403	BOLT	13	
4	01550-08553	BOLT	1	
5	09108-08221	STUD BOLT	3	
6	04211-13149	PIN	2	
7	24730-78G00	COVER, TRANSMISSION SIDE	1	
8	09135-06022	BOLT (6X12)	8	
9	09135-06022	BOLT (6X12)	1	
10	24725-78G20	PLATE, LH CASE	1	
11	24728-65G20	SCREW	5	
12	24810-78G01	GUTTER, INPUT OIL	1	
13	24815-78G20	PLATE, OIL HOLD	1	
14	01570-06123	BOLT	3	
15	09246-16010	PLUG	2	
16	37610-70B11	SWITCH ASSY, BACK UP LAMP	1	
17	09280-11002	.O RING	1	
18	09404-08207	CLAMP	1	
19	01421-10353	STUD BOLT	1	
20	08316-10103	NUT	1	
21	01550-10453	BOLT	1	
22	01550-10553	BOLT	1	
23	01550-10603	BOLT	1	
24	04211-13149	PIN	2	
25	29531-75F80	STIFFENER	1	
26	01550-10303	BOLT	2	
27	09103-10293	BOLT (10X20)	1	

FIG.26

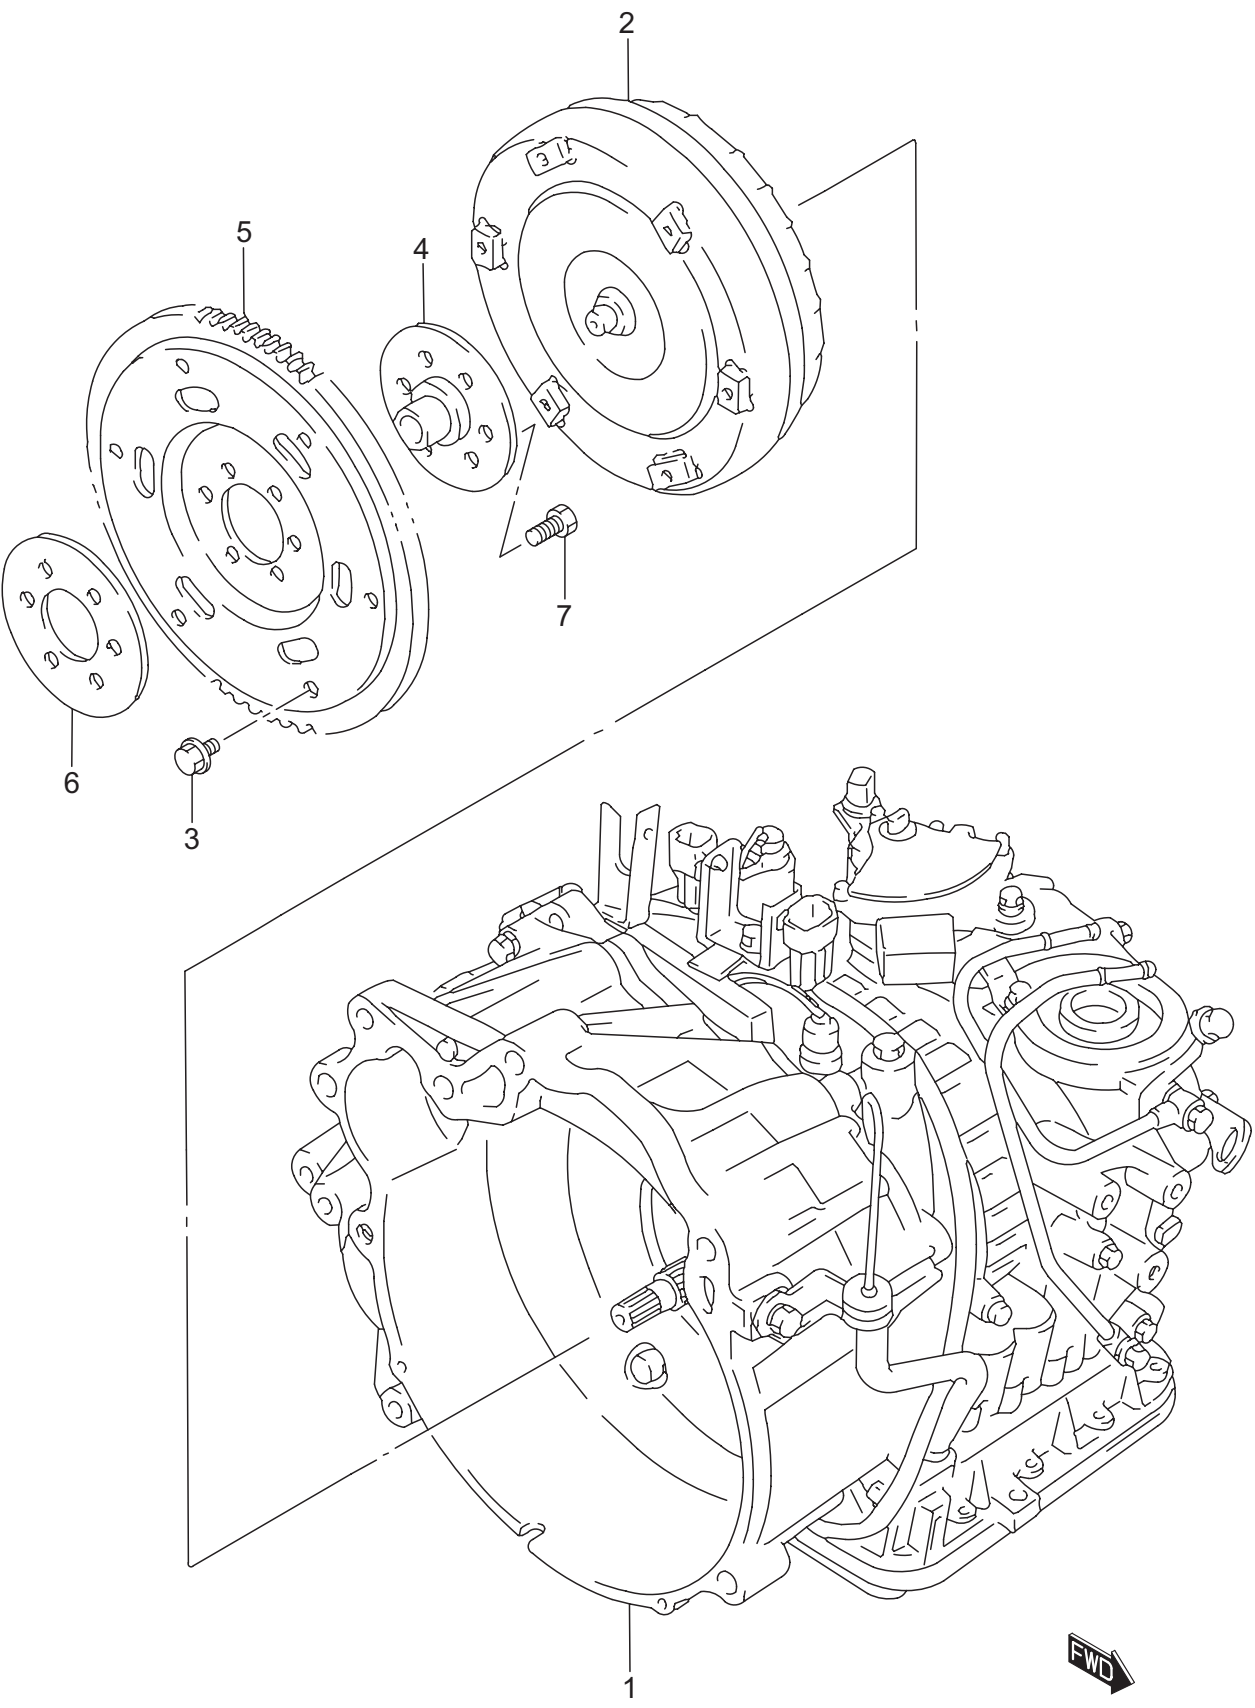


FIG.Nº.26 - AUTOMATIC TRANSMISSION (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	20002-75F82	TRANSMISSION ASSY, AUTOMATIC	1	
2	22710-75F90	CONVERTER, TORQUE	1	
3	09103-08335	BOLT (8X9.5)	6	
4	22611-75F10	FLANGE, DRIVE PLATE	1	
5	22620-75F11	PLATE, DRIVE	1	
6	22631-75F10	PLATE, DRIVE REAR	1	
7	09103-10282	BOLT (10X18.5)	6	

FIG.27

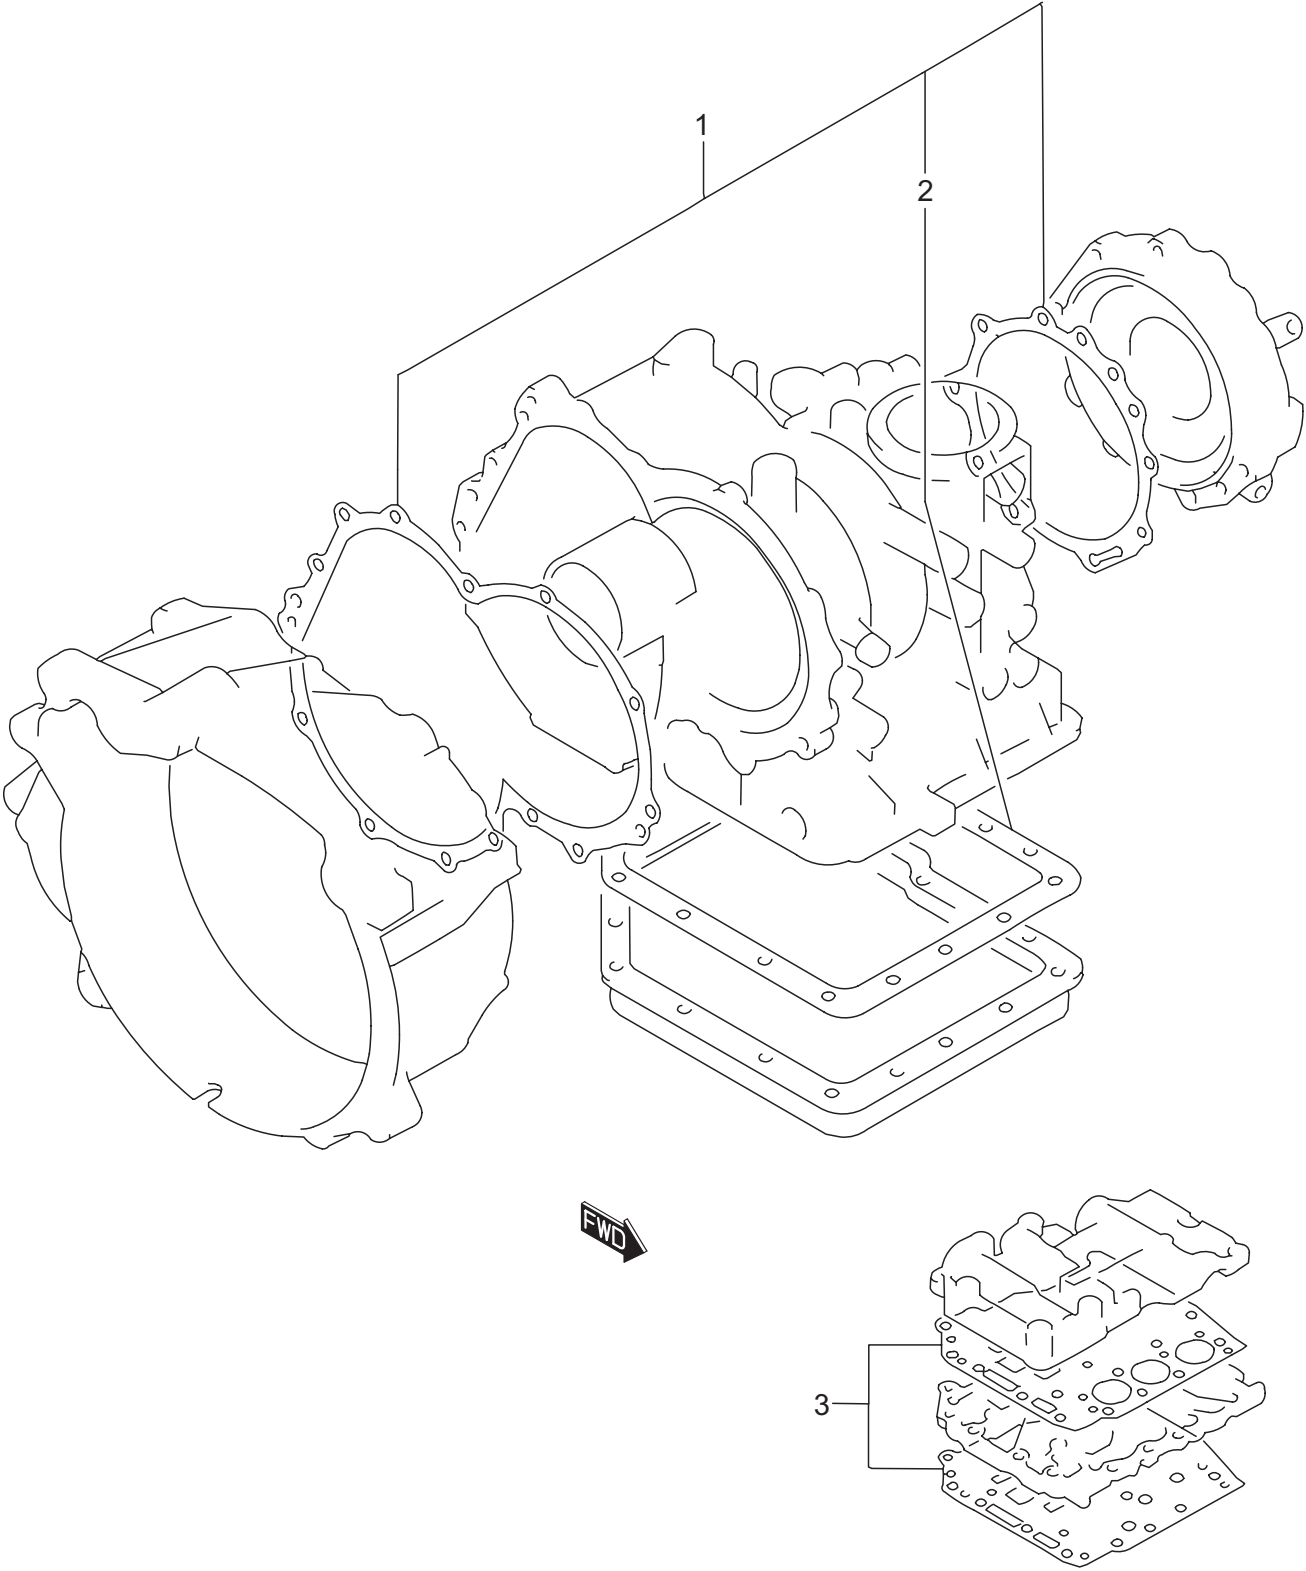


FIG.Nº.27 - AT GASKET SET (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	24780-75FT0	GASKET SET, TRANSMISSION CASE	1	
2	24784-75F10	.GASKET, TRANSMISSION OIL PAN	1	
3	26580-75FT1	GASKET SET, VALVE BODY	1	
4	24700-75FT1	OVERHAUL KIT, AT	1	NOT SHOWN

FIG.28

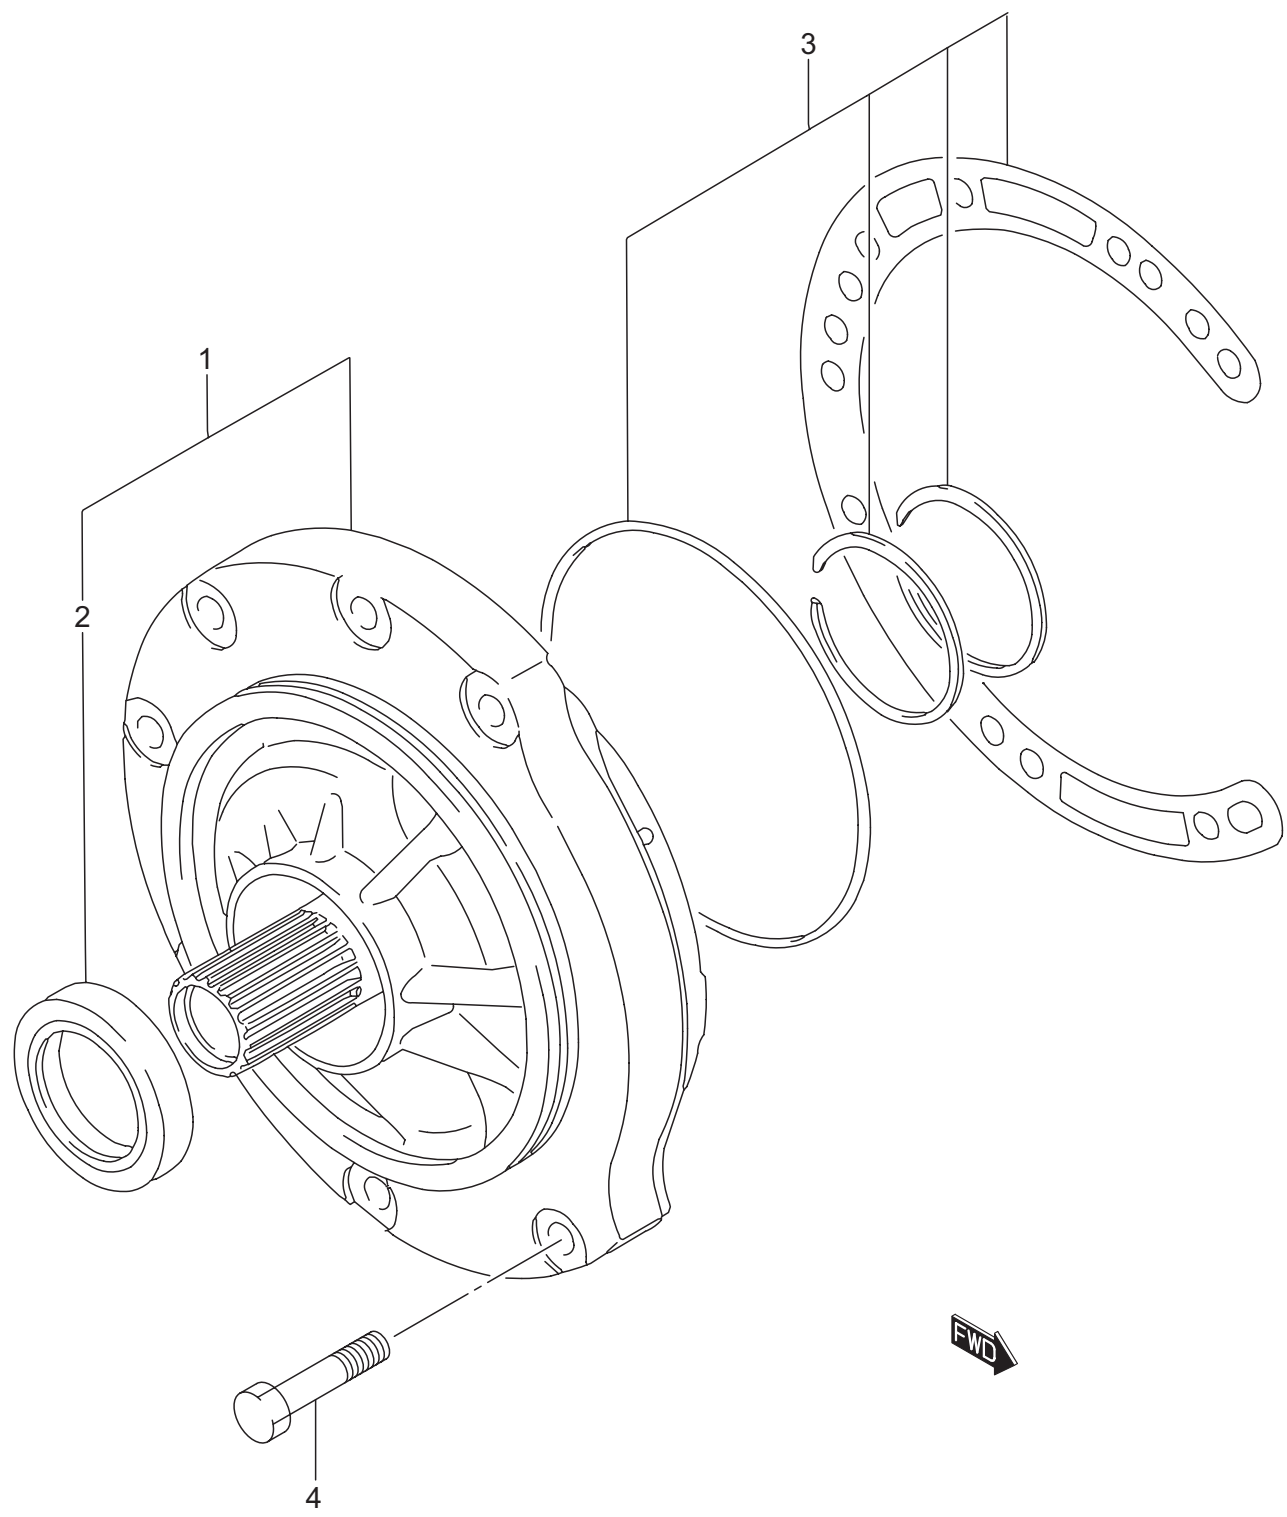


FIG.Nº.28 - AT OIL PUMP (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	22800-75F10	PUMP ASSY, OIL	1	
2	22881-72B20	.SEAL, OIL	1	
3	22860-75FT0	RING SET, OIL PUMP SEAL	1	
4	22814-75F10	BOLT, OIL PUMP	9	

FIG.29

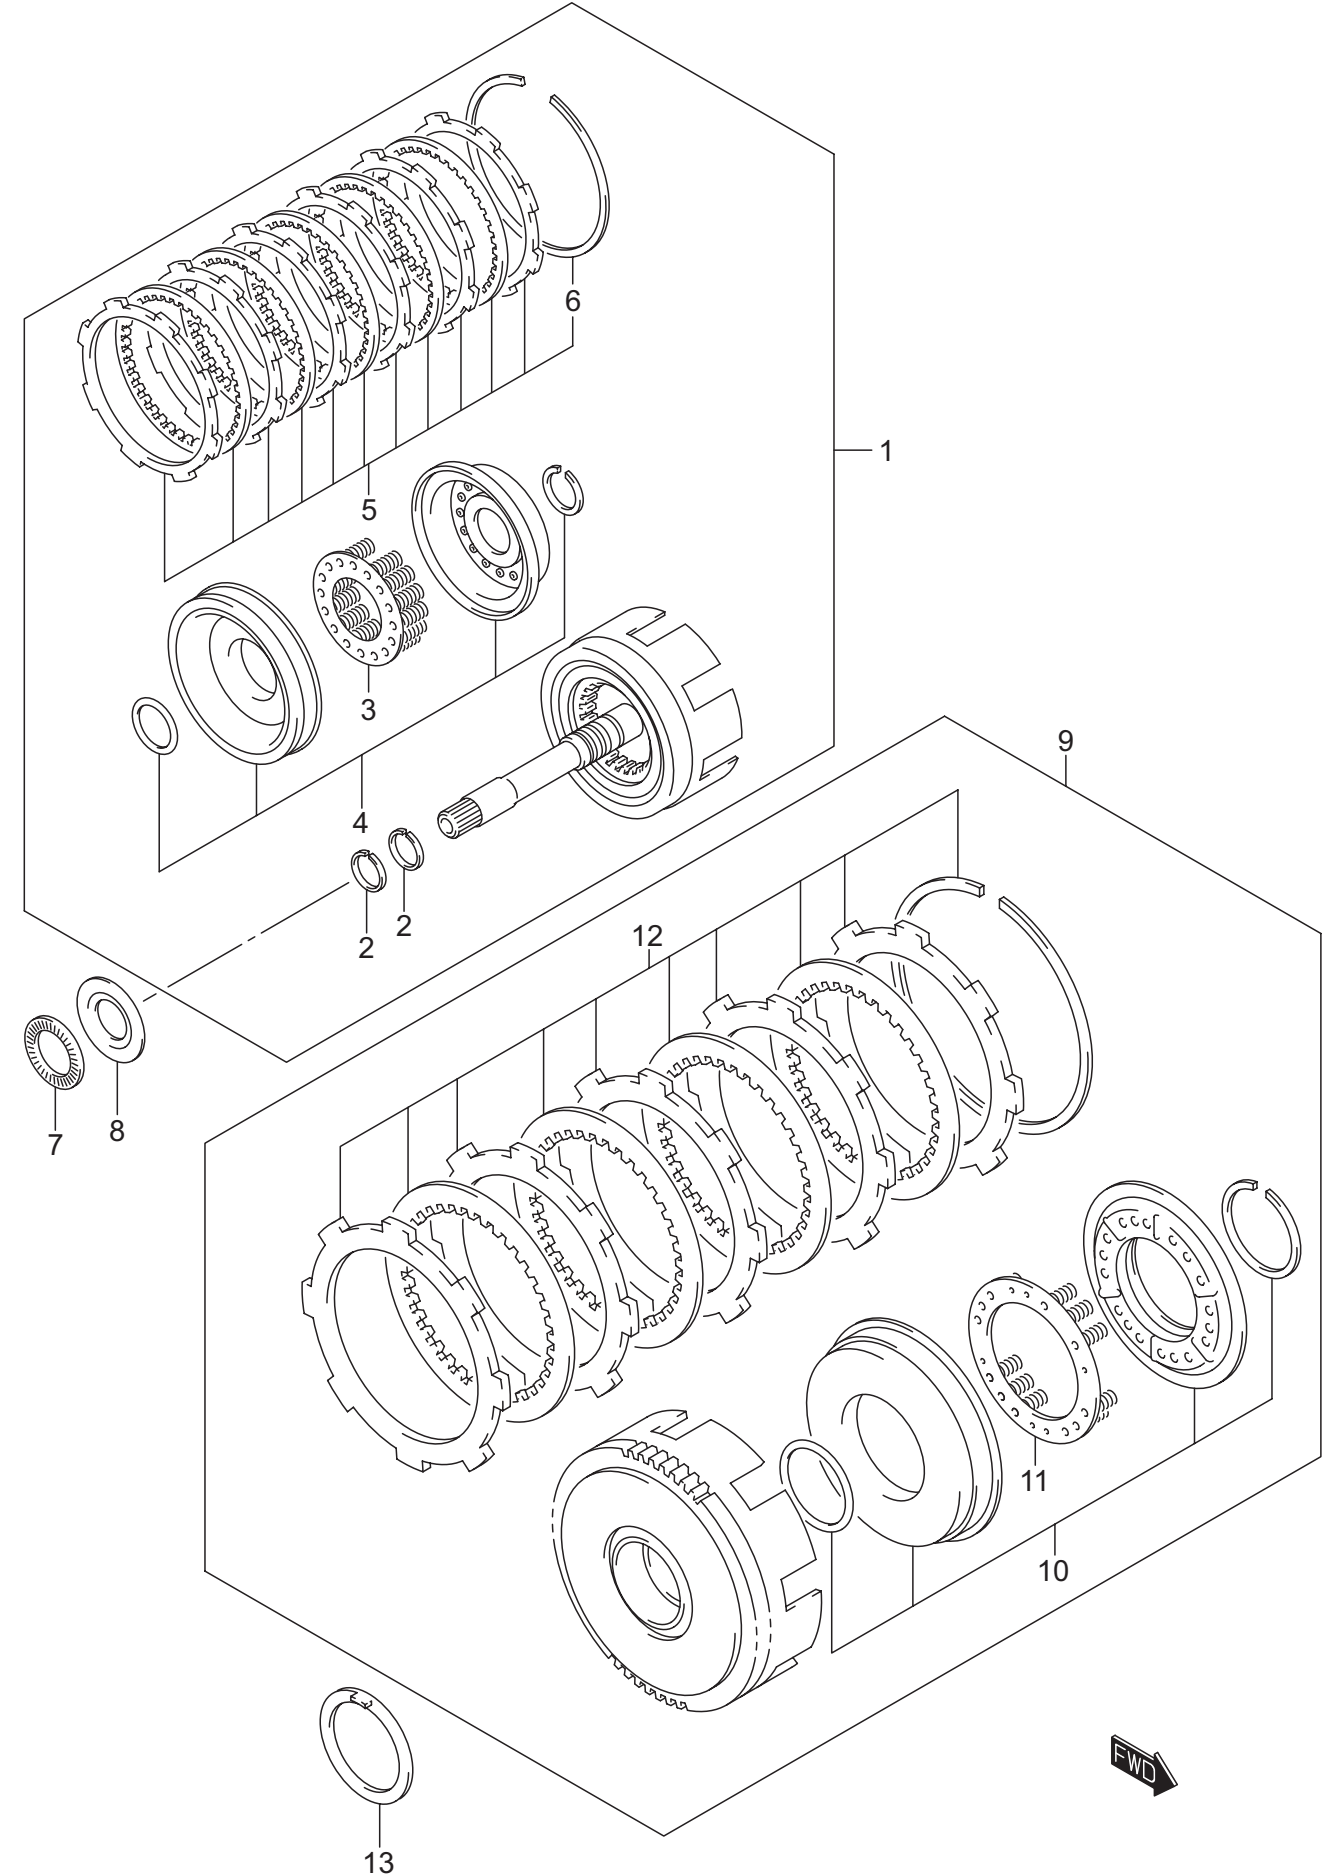


FIG.Nº.29 - AT INPUT SHAFT (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	24100-75F11	CLUTCH ASSY, REAR	1	
2	24115-75F10	.RING, INPUT SHAFT SEAL	2	
3	26660-75F11	.SPRING, REAR CLUTCH RETURN	1	
4	26621-75FT0	.PISTON SET, REAR CLUTCH	1	
5	26611-75FT0	.DISC SET, REAR CLUTCH	1	
6	24161-75F10	.RING, RR CL PLATE SNAP	1	
7	24114-75F10	BEARING, INPUT SHAFT THRUST	1	
8-1	24971-75F10	RACE (T:1.3)	0~1	
8-2	24972-75F10	RACE (T:1.7)	0~1	
8-3	24973-75F10	RACE (T:2.1)	0~1	
9	26630-75F10	CLUTCH ASSY, FRONT	1	
10	26642-75FT0	.PISTON SET, FRONT CLUTCH	1	
11	26641-75F10	.SPRING ASSY, FR CLUTCH RETURN	1	
12	26633-75FT0	.DISK SET, FRONT CLUTCH DRUM	1	
13	26637-75F10	WASHER, FRONT CLUTCH DRUM	1	

FIG.30

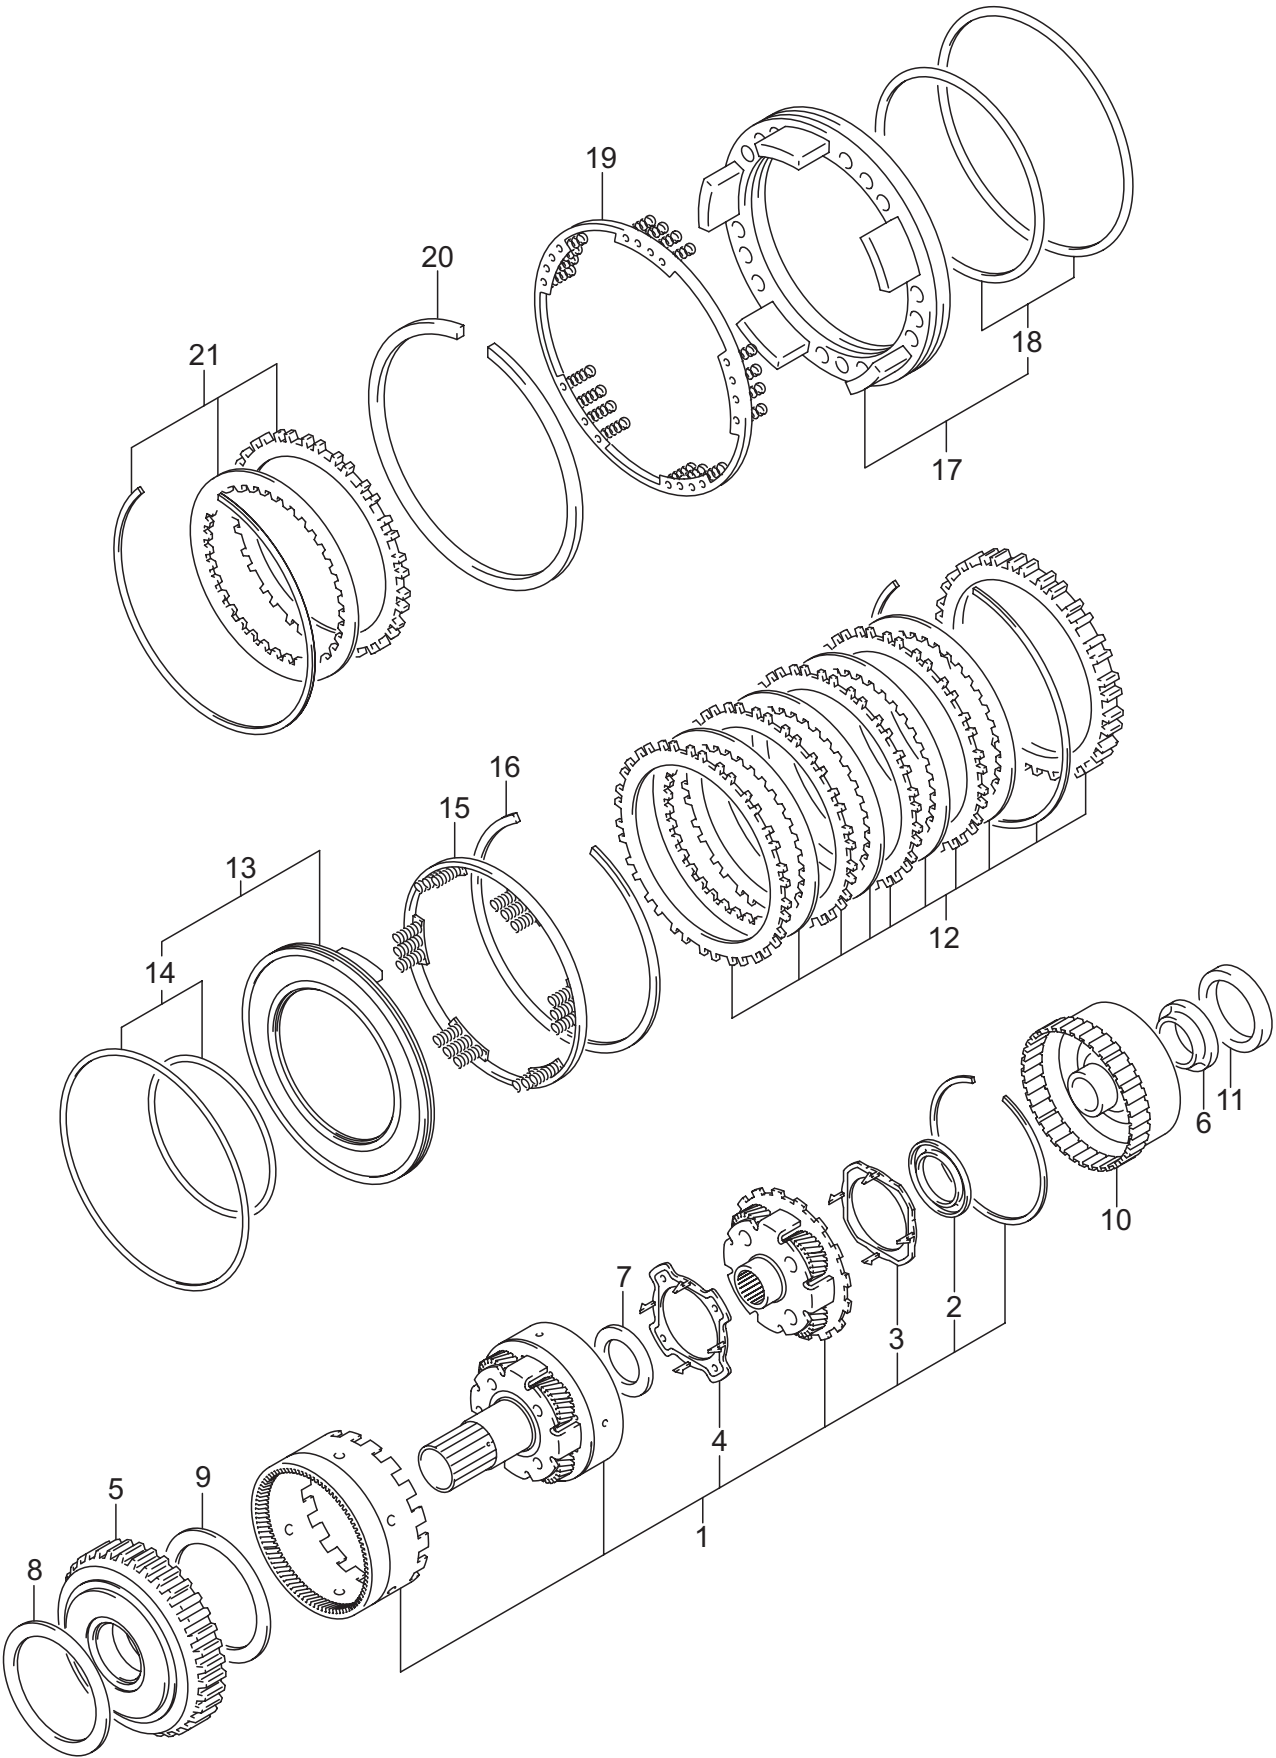


FIG.Nº.30 - AT PLANETARY GEAR (AT)

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	24900-75FT0	GEAR SET, PLANETARY	1	
2	24943-75F10	.BEARING, RR PLANETARY THRUST	1	
3	24937-75F10	.RECEIVER, FRONT PLNTY OIL	1	
4	24938-75F10	.RECEIVER, PLNTY OIL	1	
5	24930-75F10	GEAR ASSY, FR PLANETARY SUN	1	
6	24934-75F10	BEARING, FR PLANETARY GEAR REAR THRUST	1	
7	24936-75F10	BEARING, REAR PLANETARY THRUST	1	
8	24941-75F10	BEARING, THRUST NO.1	1	
9	24942-75F10	BEARING, THRUST NO.2	1	
10	24950-75F10	GEAR ASSY, REAR PLANETARY SUN	1	
11-1	24976-75F10	RACE (T:1.0)	0~1	
11-2	24977-75F10	RACE (T:1.4)	0~1	
11-3	24978-75F10	RACE (T:1.8)	0~1	
12	26746-75FT2	DISC SET, 1-2 BRAKE	1	
13	26740-75F10	PISTON, 1-2 BRAKE	1	
14	26748-75FT0	.O RING SET, 1-2 BRAKE PISTON	1	
15	26743-75F10	SPRING, 1ST/2ND BRAKE RETURN	1	
16	26751-75F10	RING, 1ST/2ND RETURN SPRING	1	
17	26820-75F10	PISTON, O/D BRAKE	1	
18	26824-75FT0	.O RING SET, O/D BRAKE PISTON	1	
19	26821-75F10	SPRING ASSY, O/D BRAKE RETURN	1	
20	26826-75F10	RING, O/D BRAKE RETURN SPRING SNAP	1	
21	26823-75FT1	DISC SET, O/D BRAKE	1	

FIG.31

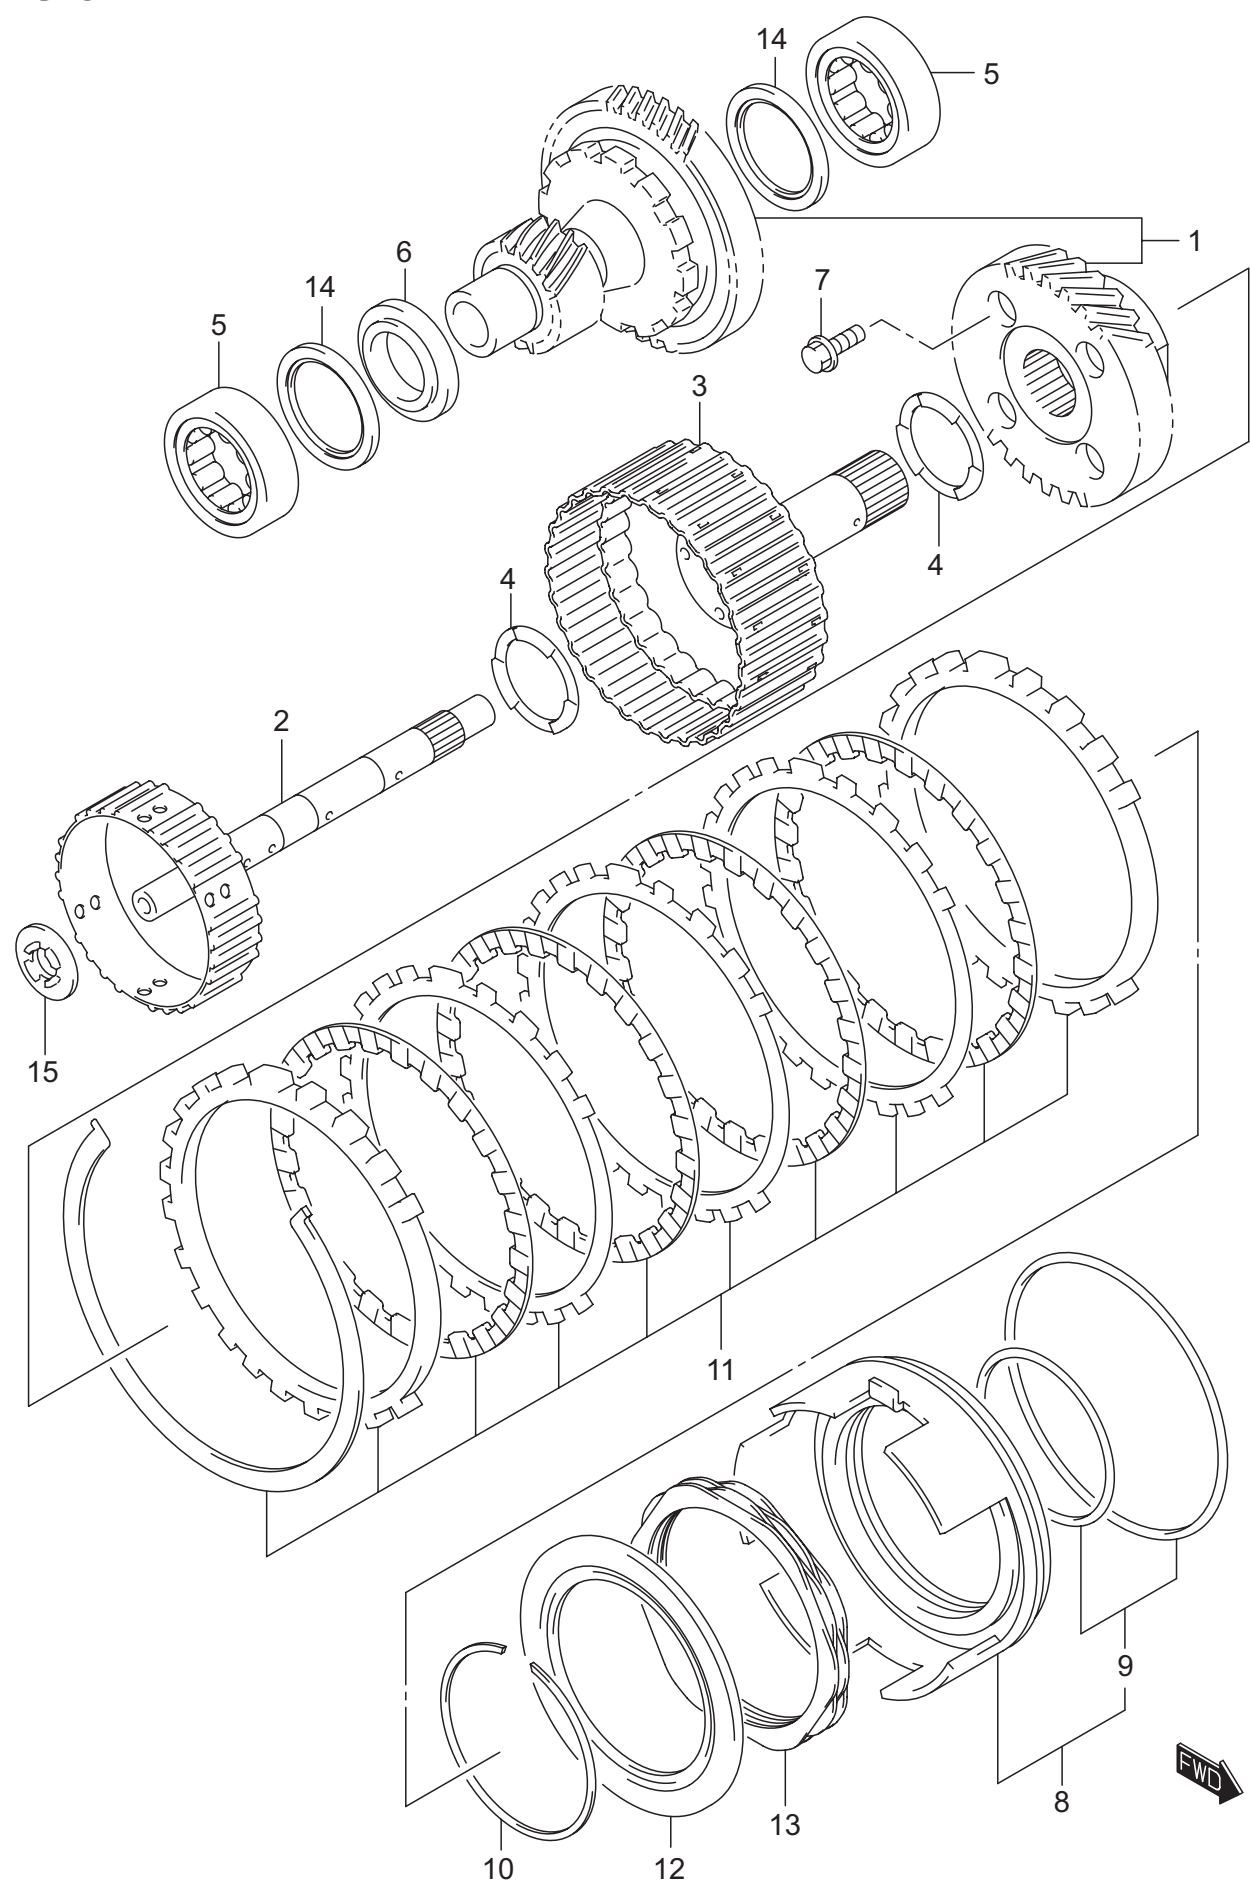


FIG.Nº.31 - AT REDUCTION GEAR (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	24120-75FT0	SHAFT SET, OUT PUT	1	
2	24145-75F10	SHAFT ASSY, INTERMEDIATE	1	
3	24150-75F10	SHAFT ASSY, FOLLOW	1	
4	24154-75F10	WASHER, FOLLOW SHAFT THRUST	2	
5	24163-82301	BEARING, COUNTER SHAFT NO.2	2	
6	24164-75F10	RACE, COUNTER SHAFT	1	
7	24165-75F10	BOLT, BEARING	4	
8	26840-75F10	PISTON, REVERSE BRAKE	1	
9	26843-75FT0	.O RING SET, REVERSE BRAKE PISTON	1	
10	26684-75F10	RING, RETURN SPRING SNAP	1	
11	26811-75FT0	DISC SET, REVERSE BRAKE	1	
12	26861-75F10	SEAT, REVERSE BRAKE	1	
13	26862-75F10	SPRING, REVERSE BRAKE	1	
14	24163-75F10	BEARING, COUNTER SHAFT	2	
15	24147-81A10	BEARING, INTERMEDIATE	1	

FIG.32

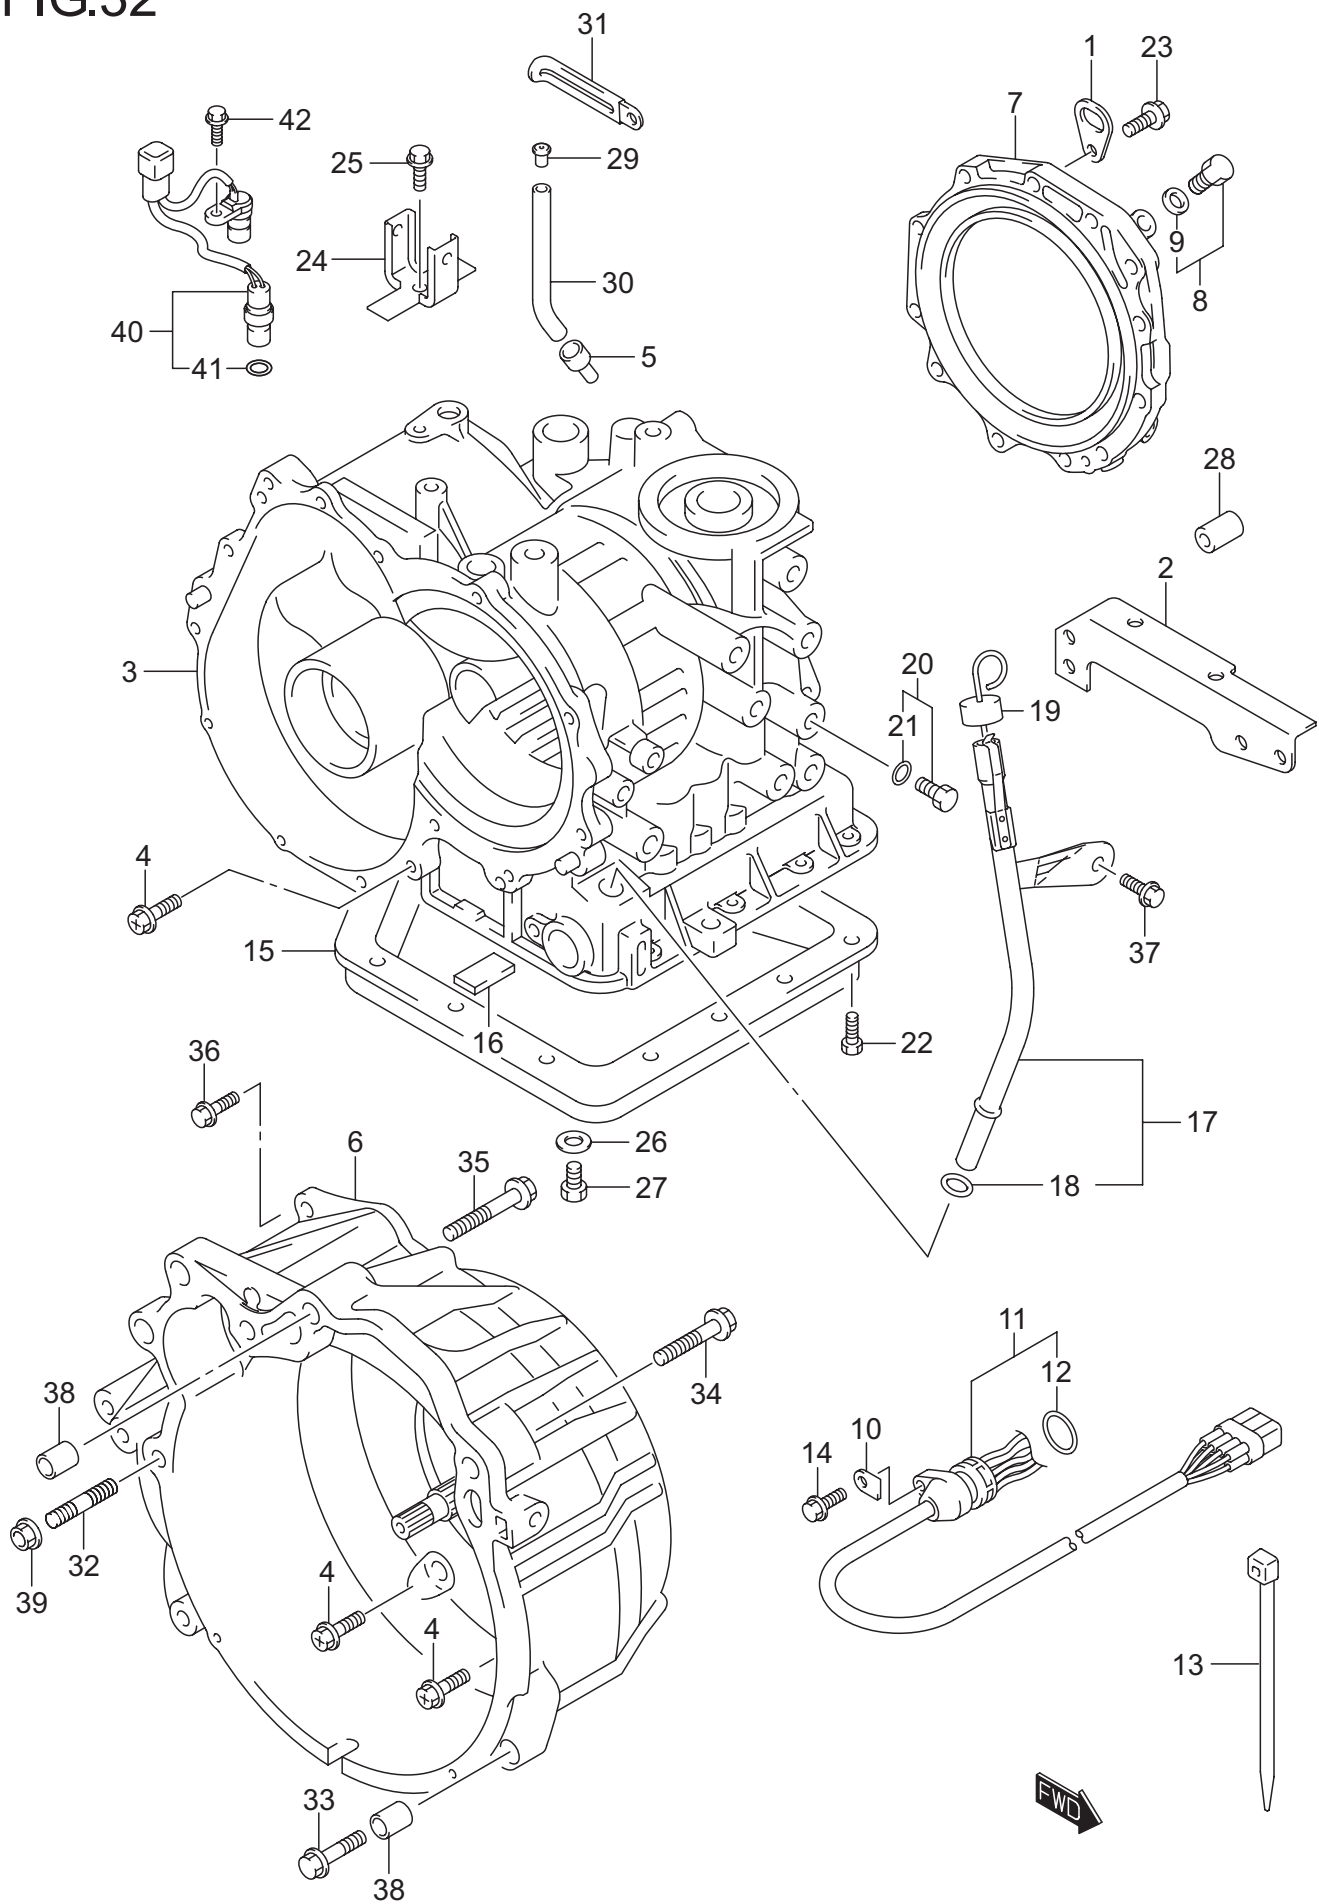


FIG.Nº.32 - AT TM CASE (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	11851-72B21	HOOK, ENGINE	1	
2	11870-75F10	BRACKET, TRANSMISSION MOUNTING	1	
3-1	24710-75810	CASE ASSY, TRANSMISSION	1	
3-2	24710-75F13	DASE ASSY, TRANSMISSION	1	2001-6~
4	24712-75F10	BOLT, TRANSMISSION CASE SEAL	3	
5	24717-75F10	PLUG, BREATHER	1	
6	24721-75F10	HOUSING	1	
7	24730-75F10	COVER, TRANSMISSION REAR	1	
8	24731-75F10	.PLUG, BOOSTER	2	
9	24732-75F10	..O RING, BOOSTER PLUG	2	
10	24742-82300	PLATE, SOLENOID WIRE HARNESS	1	
11	24743-75F10	WIRE, SOLENOID ASSY	1	
12	24744-75F10	.O RING	1	
13	24897-75F10	CLAMP, SOLENOID WIRE HARNESS	1	
14	24757-75F10	BOLT, SOLENOID WIRE HARNESS	1	
15	24761-75F10	PAN, TRANSMISSION OIL	1	
16	24861-78230	MAGNETO, OIL CLEANER	1	
17	24770-75F10	TUBE SSY, TM OIL FILLER	1	
18	24785-82300	.O RING	1	
19	24830-75F30	GAUGE, TM OIL LEVEL	1	
20	24820-62B00	PLUG, BOOSTER	6	
21	24755-78130	.O RING	6	
22	24882-85501	BOLT, TRANSMISSION OIL PAN	16	
23	24883-85500	BOLT, HOUSING	9	
24	26598-75F10	BRACKET, SOLENOID WIRE HARNESS	1	
25	26599-85500	BOLT	1	
26	09168-12009	GASKET (12X16.7X2)	1	
27	09247-10007	PLUG	1	
28	09250-04003	PLUG (OD:8)	1	
29	09250-06014	PLUG (OD:9)	1	
30	09359-50823-600	HOSE	1	L:600→250
31	09403-08405	CLAMP	1	
32	01421-10353	STUD BOLT	1	

FIG.Nº.32 - AT TM CASE (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
33	01550-10453	BOLT	1	
34	01550-10553	BOLT	1	
35	01550-10603	BOLT	1	
36	01570-08353	BOLT	11	
37	01570-10203	BOLT	1	
38	04211-13149	PIN	2	
39	08316-10103	NUT	3	
40	26141-75F10	SENSOR, SPEED	1	
41	26142-75F10	.O RING, SPEED SENSOR	2	
42	01570-06163	BOLT	2	

FIG.33

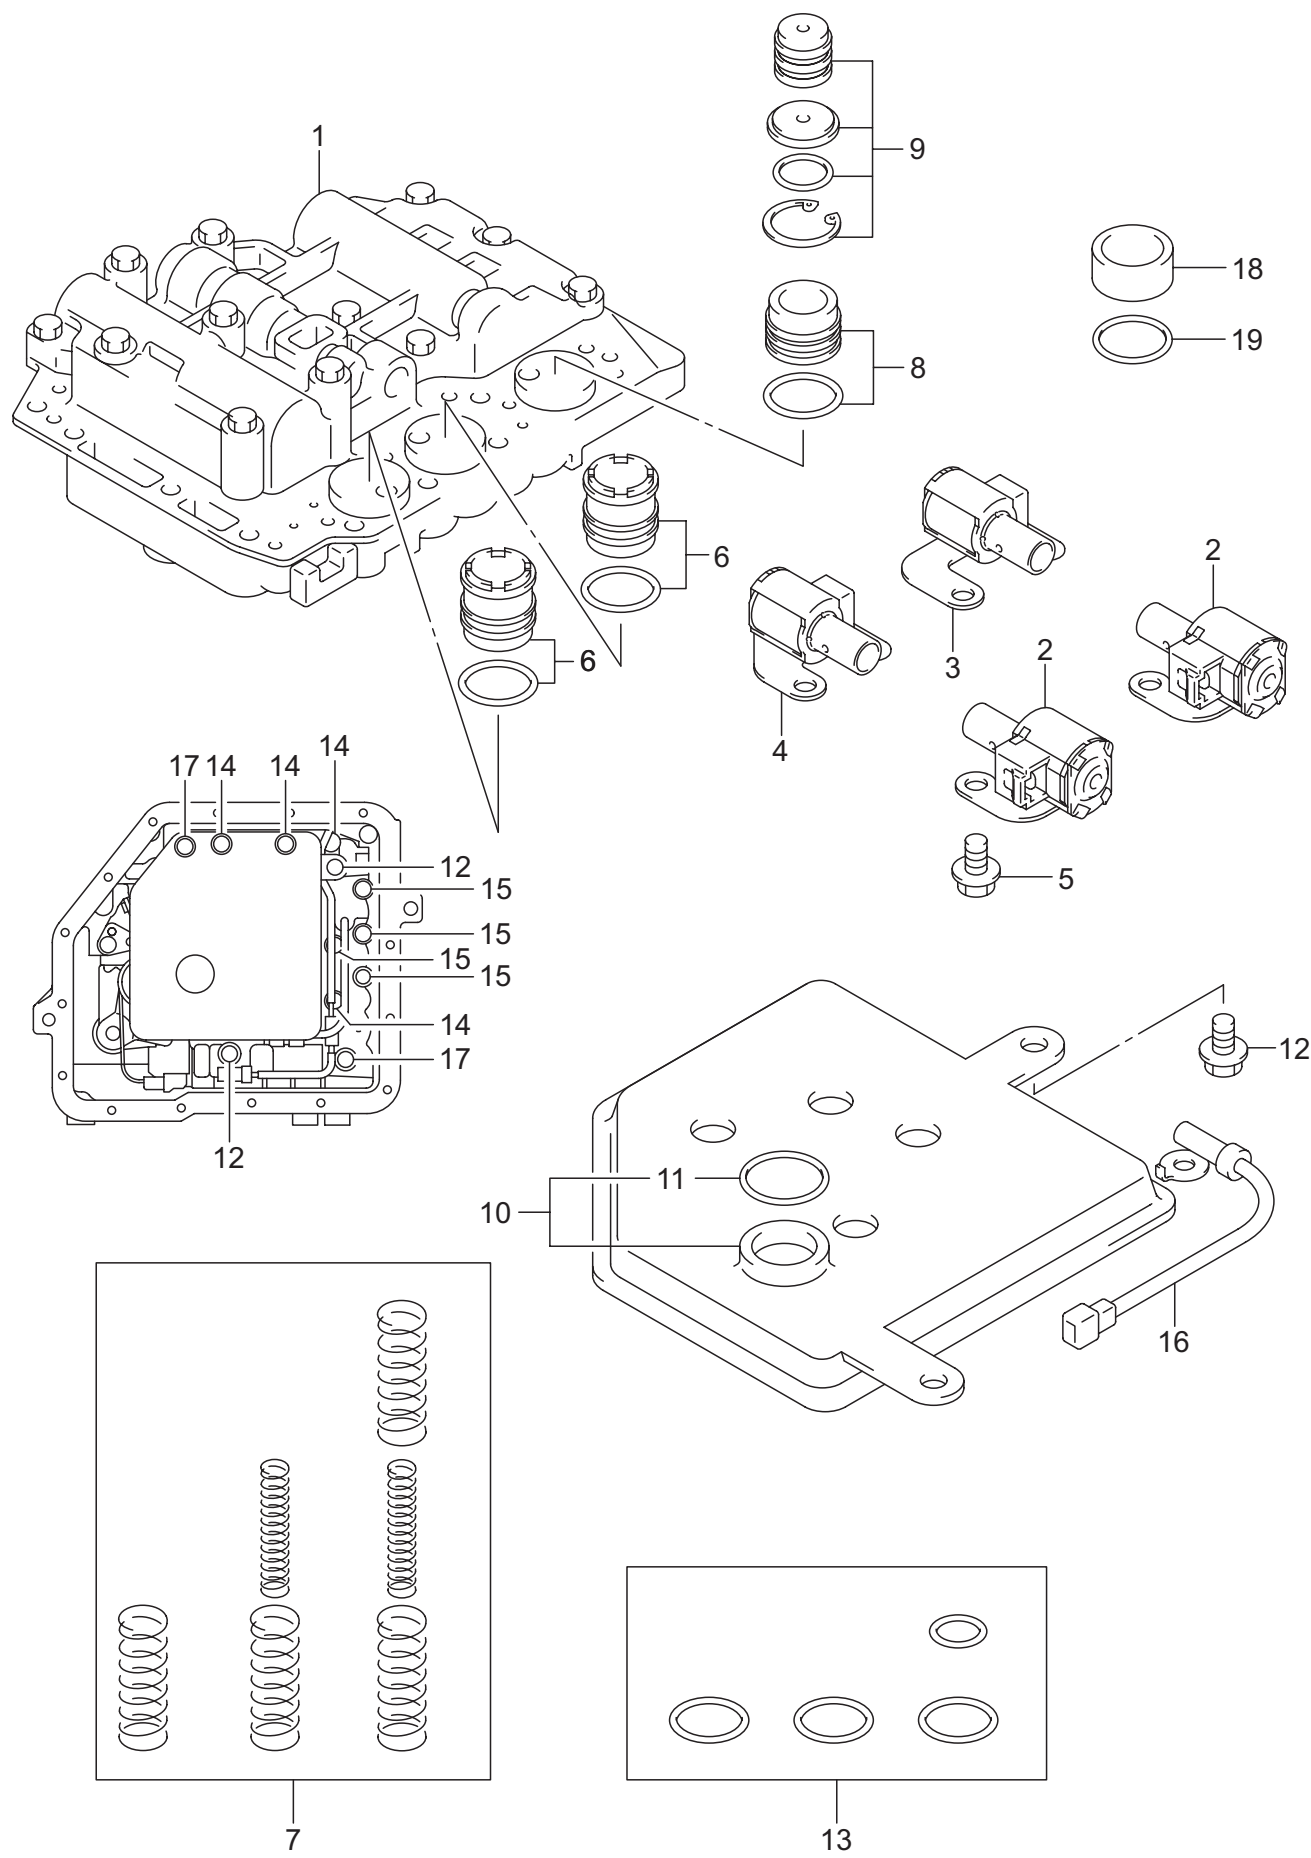


FIG.Nº.33 - AT VALVE BODY (AT)

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	26500-75F32	VALVE ASSY, TRANSMISSION	1	
2	24753-75F11	.SOLENOID, SHIFT NO.1	2	
3	24754-75F10	.SOLENOID, SHIFT NO.3	1	
4	24756-75F10	.SOLENOID, WHIFT NO.4	1	
5	24755-75F10	.BOLT, STRAINER	4	
6	26531-75FT0	PISTON SET, ACCUMULATOR	2	
7	26532-75FT1	SPRING SET, ACCUMULATOR PISTON	1	
8	26541-75FT0	PISTON SET, 1-2 BRAKE ACCUMULATOR	1	
9	26542-75FT0	PISTON SET, O/D BRAKE ACCUMULATOR	1	
10	26570-75F10	STRAINER ASSY, TM OIL	1	
11	26572-75F10	.O RING, STRAINER	1	
12	24755-75F10	BOLT, STRAINER	2	
13	26680-75FT0	O RING SET, ACCUMULATOR	1	
14	26588-85500	BOLT, VALVE BODY NO.1	3	
15	26589-85500	BOLT, VALVE BODY NO.4	5	
16	26730-81A10	SENSOR, TEMPERATURE	1	
17	01550-06253	BOLT	2	
18	26560-75F10	TURB ASSY, CLUTCH DRAIN	1	
19	26562-75F10	.O RING, DRAIN TUBE	2	
20	28558-75F10	STRAINER, OIL PAN	1	

FIG.34

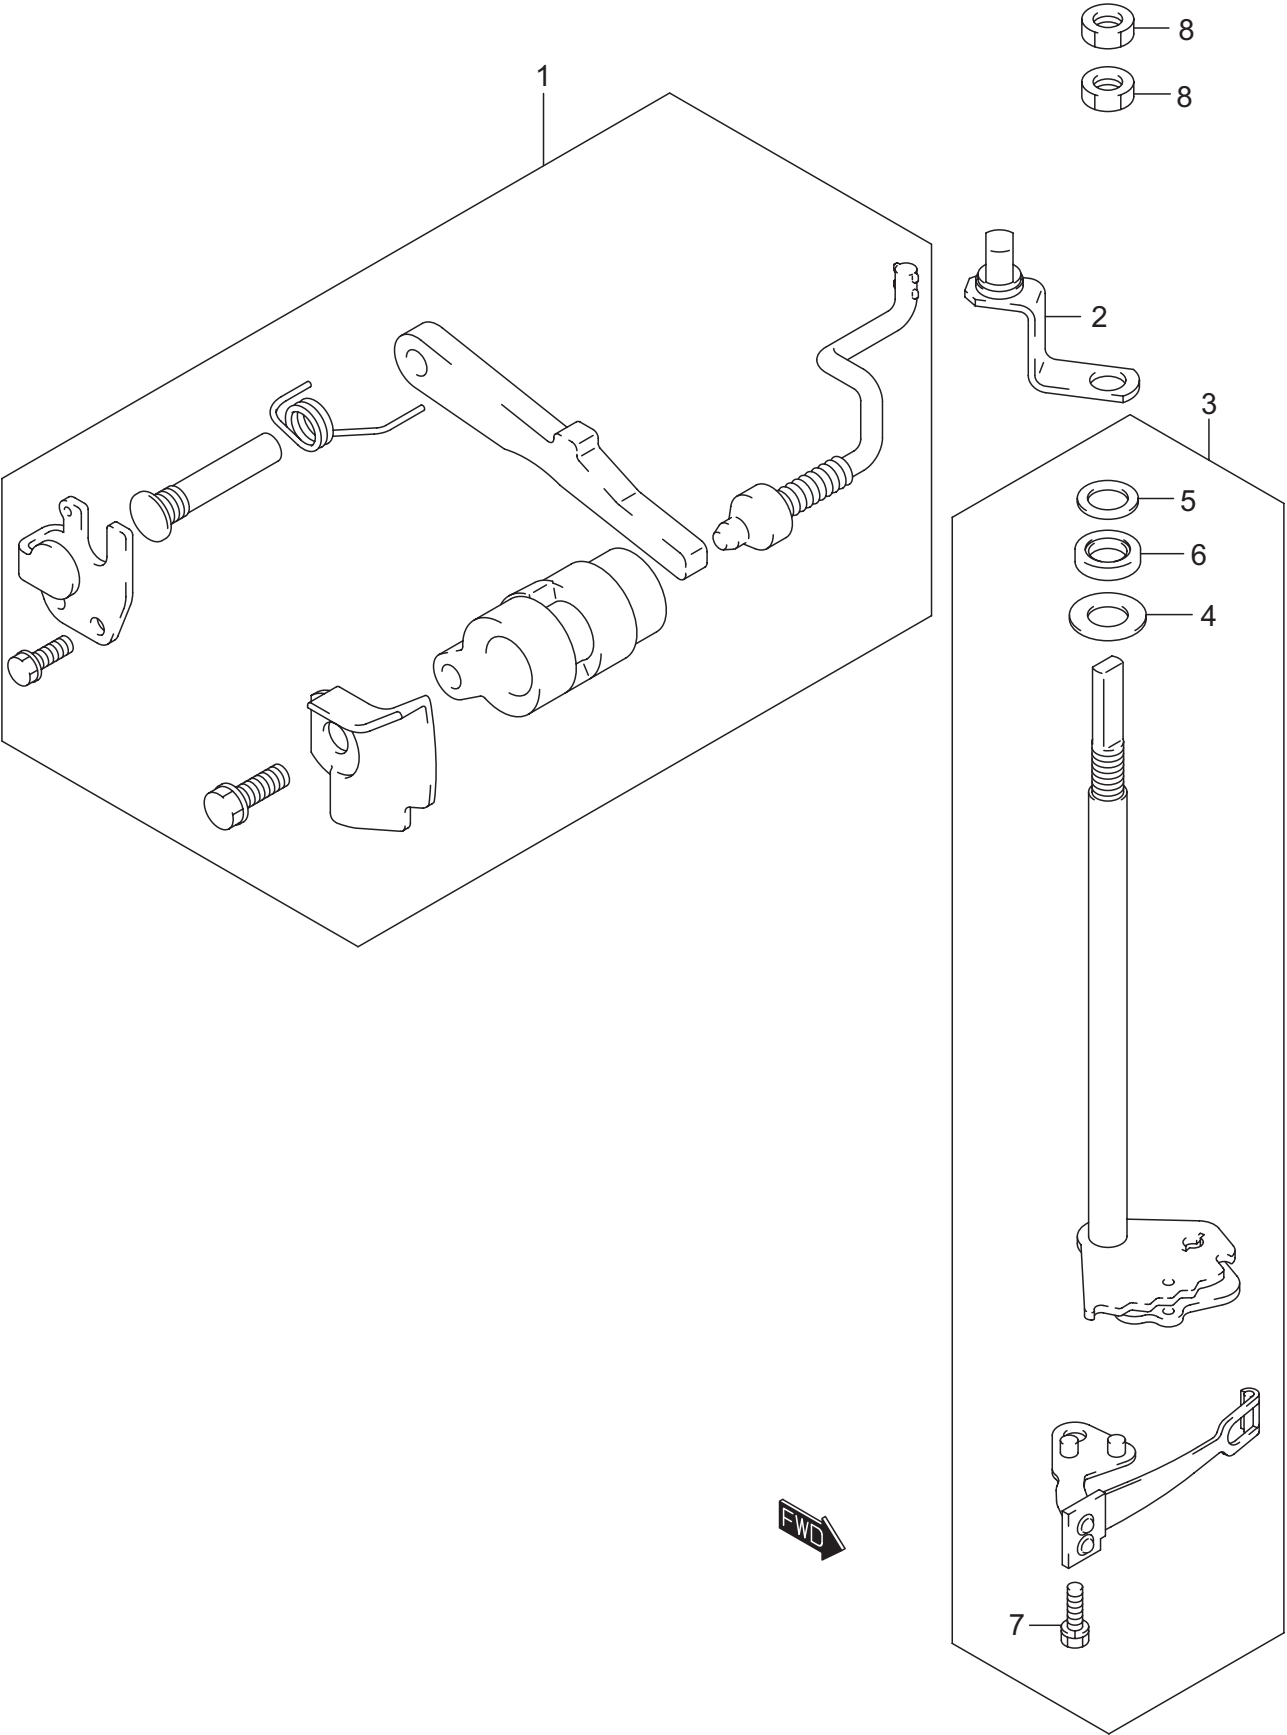


FIG.Nº.34 - AT PARKING BRAKE (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	25912-75FT0	PAWL SET, PARKING	1	
2	25941-75F10	LEVER, MANUAL	1	
3	25941-75FT0	SHAFT SET, MANUAL SHIFT	1	
4	25952-82300	.WASHER	1	
5	25953-82300	.WASHER	1	
6	25981-82300	.SEAL, MANUAL SHIFT SHAFT OIL	1	
7	01570-06163	.BOLT	1	
8	08310-00123	NUT	2	

FIG.35

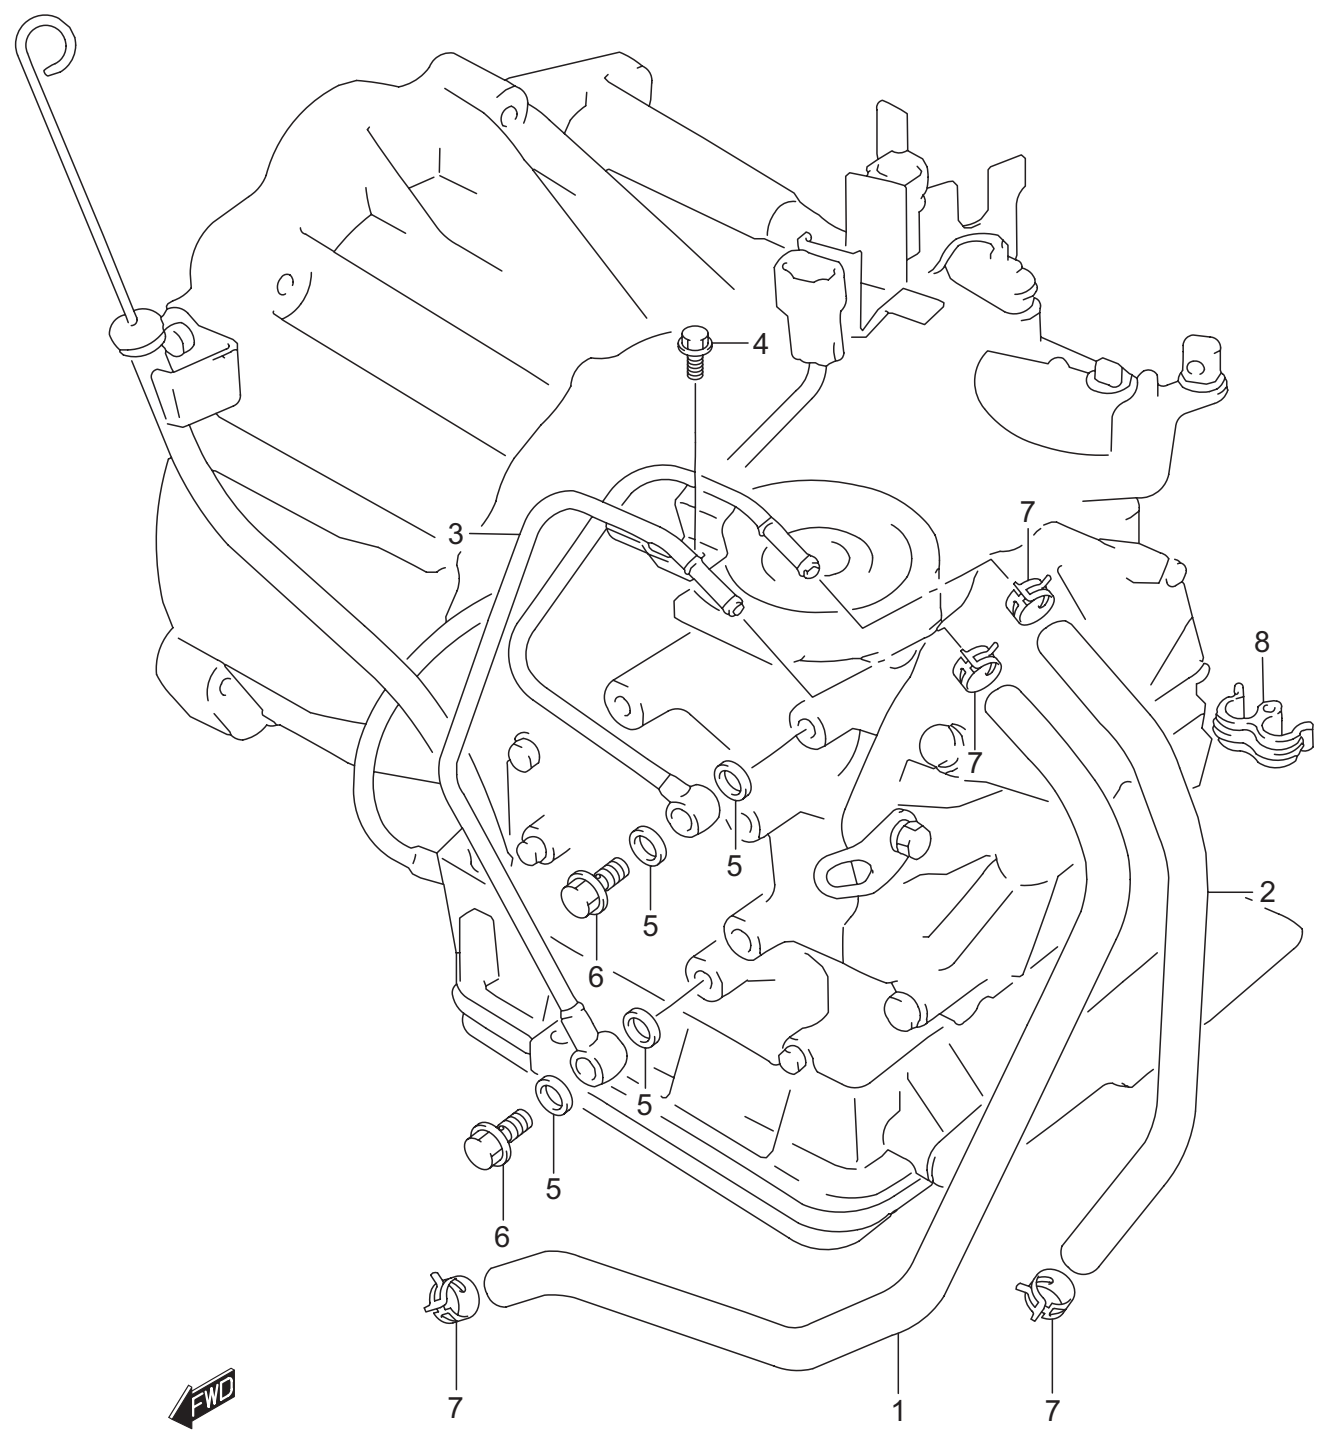


FIG.Nº.35 - AT OIL HOSE (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	24891-75F50	HOSE, OIL OUTLET	1	
2	24892-75F30	HOSE, OIL INLET	1	
3	24893-75F10	PIPE, OIL	1	
4	01550-06103	B OLT	1	
5	22913-60H10	GASKET (10X15X1)	4	
6	09360-10032	UNION BOLT	2	
7	09401-13419	CLAMP	4	
8	09408-00155	CLAMP	1	

FIG.36

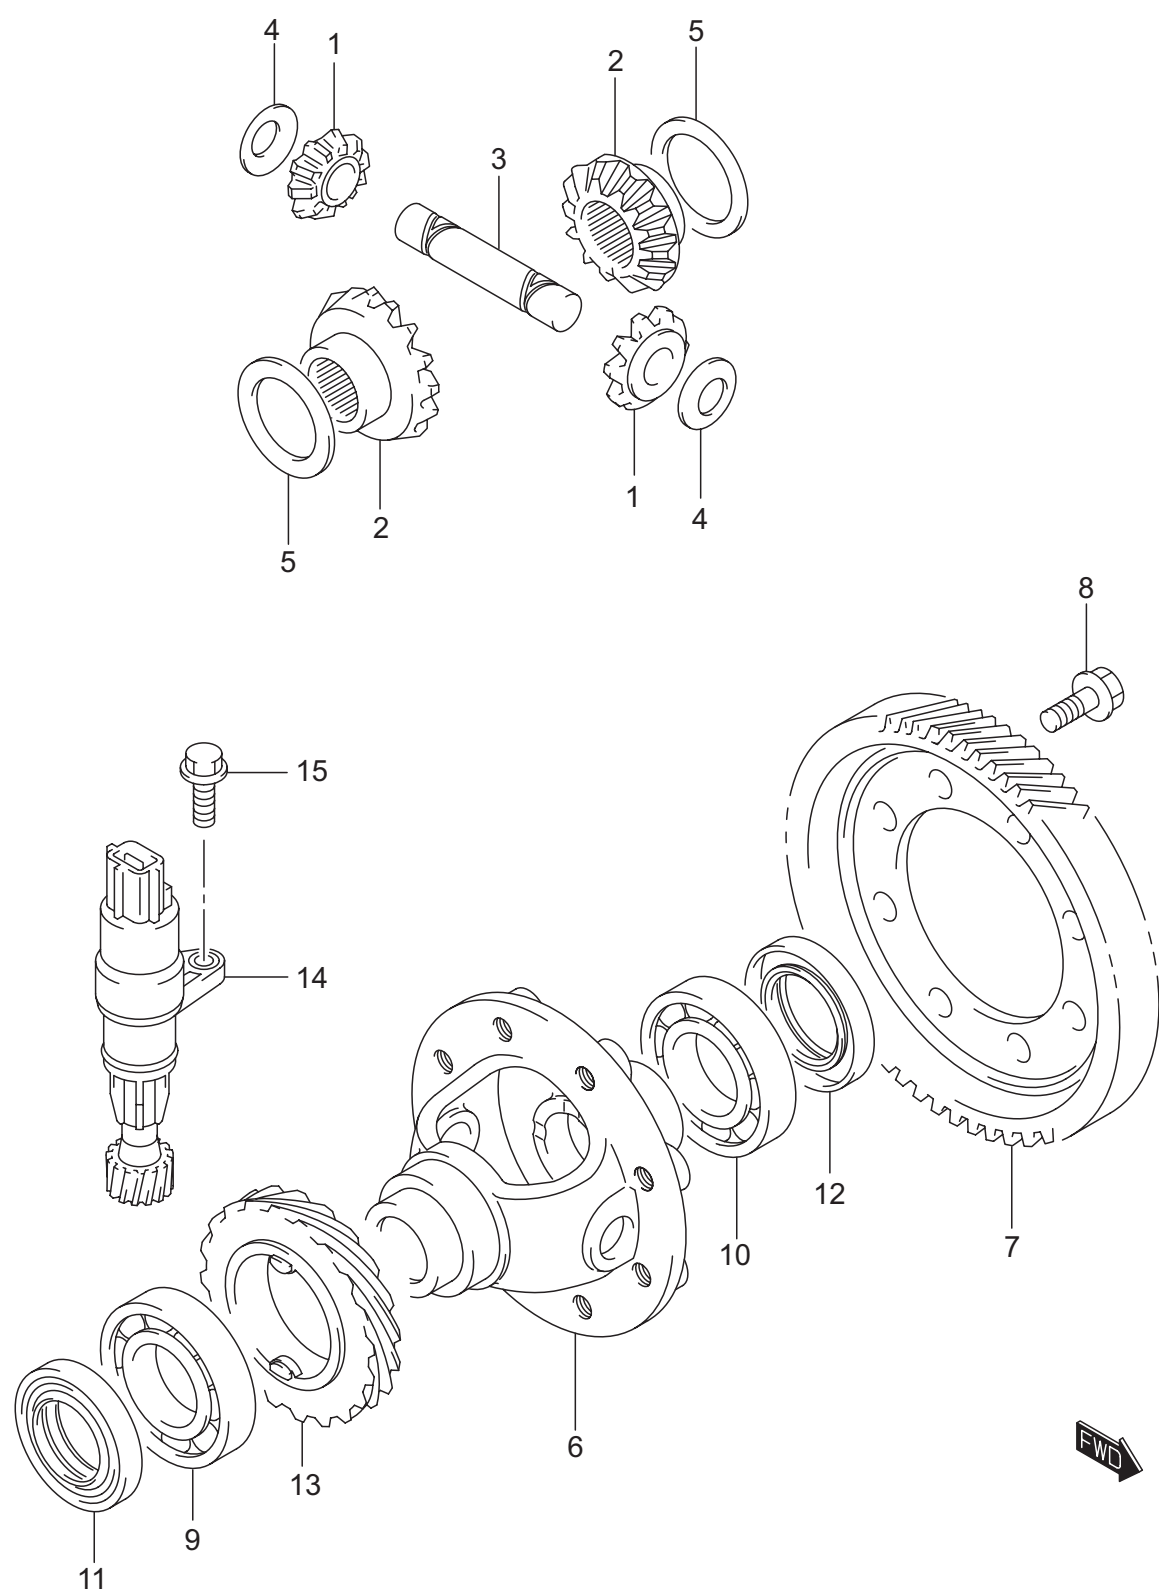


FIG.Nº.36 - FRONT DIFF GEAR (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	27331-83020	PINION, DIFFERENTIAL	2	
2	27341-76G00	GEAR, DIFFERENTIAL	2	
3	27555-53F00	SHAFT, PINION	1	
4	09164-15006	WASHER (T:1.00)	2	
5-1	09160-35006	WASHER (T:0.90)	0~2	
5-2	09160-35002	WASHER (T:1.00)	0~2	
5-3	09160-35003	WASHER (T:1.10)	0~2	
6	27411-78G40	CASE, FRONT DIFFERENTIAL	1	
7	27511-78G60	GEAR, FINAL	1	
8	09103-10189	BOLT (10X23)	8	
9	09262-35070	BEARING	1	
10	09262-35038	BEARING	1	
11	09283-40028	SEAL, DIFFERENTIAL R SIDE OIL	1	
12	09283-40029	SEAL, DIFFERENTIAL L SIDE OIL	1	
13	26121-73B00	GEAR, SPEEDOMETER DRIVE	1	
14	26130-75F00	GEAR, SPEEDOMETER DRIVEN	1	
15	09135-06022	BOLT (6X20)	1	

FIG.37

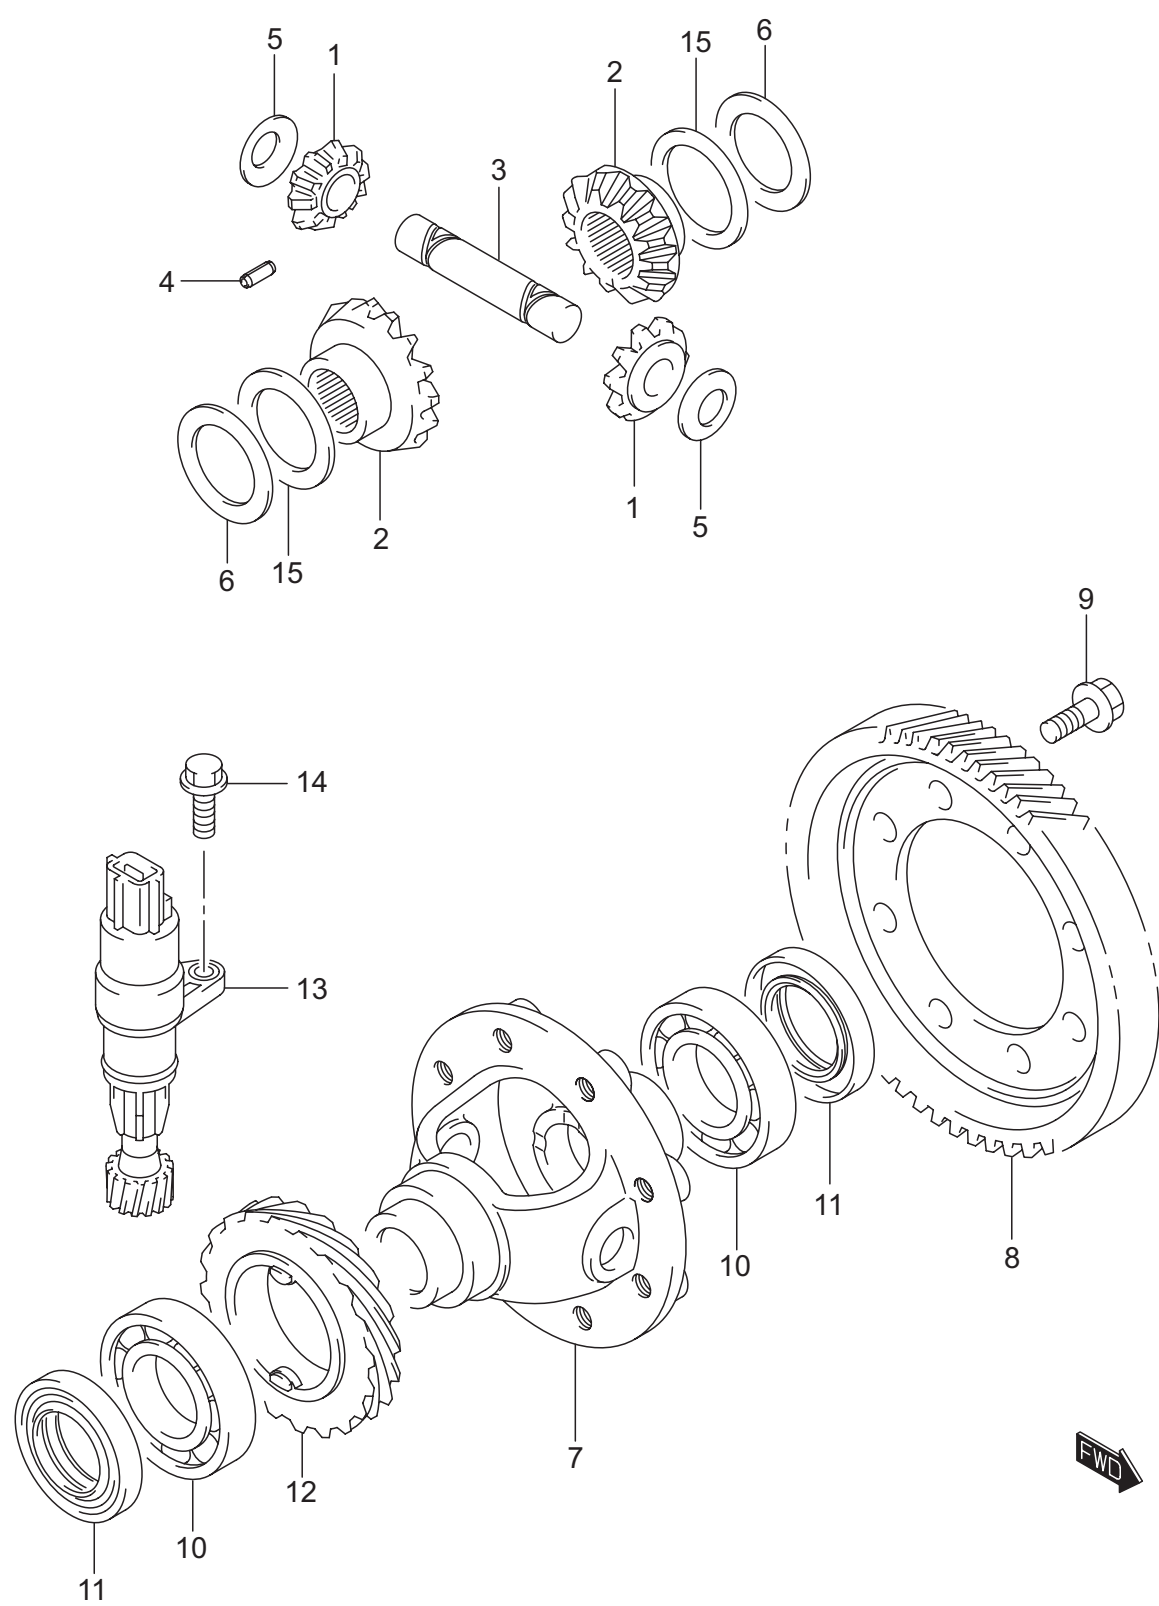


FIG.Nº.37 - FRONT DIFF GEAR (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	27331-78G11	PINION, DEFFERENTIAL	2	
2	27341-82001	GEAR, DEFFERENTIAL	2	
3	27351-62B00	SHAFT, PINION	1	
4	09205-05007	SPRING PIN (5X36)	1	
5	09164-15003	WASHER (15X30X1.0)	2	
6-1	09160-35002	WASHER (35X46X1.00)	0~2	
6-2	09160-35003	WASHER (35X46X1.20)	0~2	
6-3	09160-35004	WASHER (35X46X1.20)	0~2	
6-4	09160-35006	WASHER (35X46X0.90)	0~2	
6-5	09160-35008	WASHER (35X46X0.95)	0~2	
6-6	09160-35009	WASHER (35X46X1.05)	0~2	
6-7	09160-35010	WASHER (35X46X1.15)	0~2	
7	27411-62D01	CASE, DEFFERENTIAL	1	
8	27511-75F50	GEAR, FINAL	1	
9	27516-75F10	BOLT, FINAL GEAR	8	
10	09262-35059	BEARING	2	
11	27611-82301	SEAL, DEFFERENTIAL SIDE OIL	2	
12	26121-73B00	GEAR, SPEEDOMETER DRIVE	1	
13	26130-75F00	GEAR, SPEEDOMETER DRIVEN	1	
14	01550-06163	BOLT	1	
15	27361-62B00	WASHER, DEFFERENTIAL GEAR SIDE	2	
		Nº.2		

This exploded view diagram illustrates the components of a vehicle gear shift assembly. The parts are numbered as follows:

- 1**: Gear shift knob
- 2**: Gear shift boot
- 3**: Gear shift lever
- 4**: Spacer sleeve
- 5**: Locking pin
- 6**: Washers
- 7**: Nut
- 8**: Cable with connector
- 9**: Cable with connector
- 10**: Mounting bracket
- 11**: Bolt
- 12**: Bolt
- 13**: Mounting bracket
- 14**: Bolt
- 15**: Lever
- 16**: Washer
- 17**: Cable end fitting
- 18**: Washer
- 19**: Nut

The diagram shows the assembly of the gear shift lever, knob, boot, and various cables and mounting brackets. A 'FWD' (Front Wheel Drive) label with an arrow pointing left is located at the bottom left corner.

FIG.Nº.38 - GEAR SHIFT CONTROL (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	28113-70G20-5PK	KNOB, SHIFT CONTROL	1	
2	28136-63E00-5PK	BOOT, SHIFT LEVER	1	
3	28101-75F41	LEVER, SHIFT CONTROL	1	
4	28367-76G00	SPACER	4	
5	09320-12036	CUSHION	4	
6	09160-08133	WASHER (8.5X26X1.6)	4	
7	08316-10083	NUT	4	
8-1	28370-75FV0	CABLE ASSY, SHIFT CONTROL	1	
8-2	28370-75F03	CABLE ASSY, SHIFT CONTROL	1	2000-5~
9	28380-75F01	CABLE ASSY, SELECT CONTROL	1	
10	28385-74B00	CLAMP	1	
11	01550-06403	BOLT	1	
12	02162-06163	BOLT	2	
13-1	28391-78G01	BRACKET	1	
13-2	28391-78G02	BRACKET	1	2000-5~
14	01570-08203	BOLT	2	
15	09383-19001	E RING	2	
16	08322-01083	WASHER	2	
17	09385-08007	SNAP	1	
18-1	08322-01083	WASHER	1	
18-2	09160-08143	WASHER	1	2000-5~
19	28139-74F00	HOLDER, GR SHF BOOT	1	

FIG.39

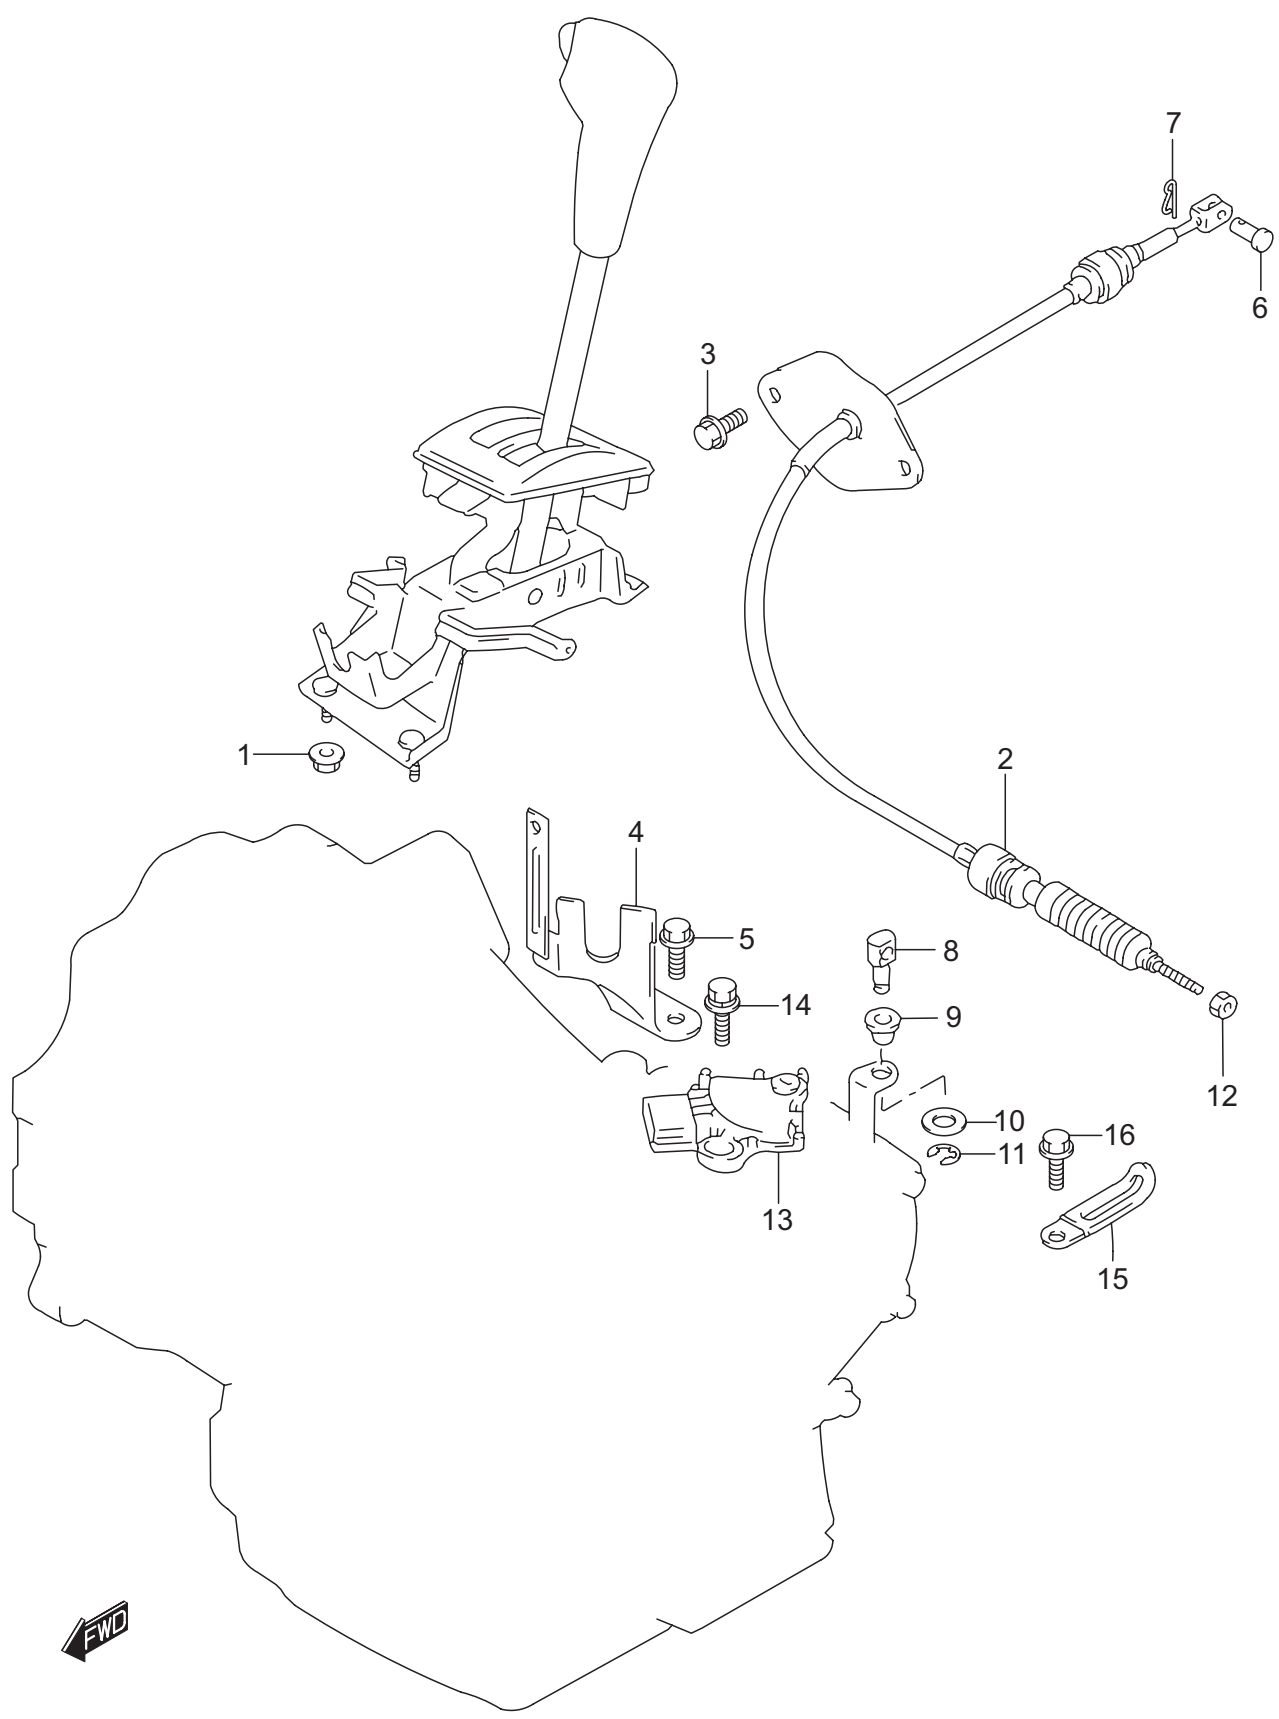


FIG.Nº.39 - GEAR SHIFT CONTROL (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	08316-10083	NUT	4	
2	28210-75F50	CABLE ASSY, SELECT	1	
3	02162-06203	BOLT	2	
4	28221-75F10	BRACKET, SELECT CABLE	1	
5	01550-08163	BOLT	2	
6	09200-06046	PIN	1	
7	09385-06004	SNAP PIN	1	
8	28291-78233	JOINT, MANUAL SELECTOR CABLE	1	
9	09305-08012	BUSH	1	
10	08322-01083	WASHER	1	
11	08332-11063	E RING	1	
12	08310-00063	NUT	1	
13	37720-75F01	SWITCH ASSY, SHIFT	1	
14	01580-08253	BOLT	1	
15	09404-08206	CLAMP (L:82)	1	
16	01550-06163	BOLT	1	

FIG.40

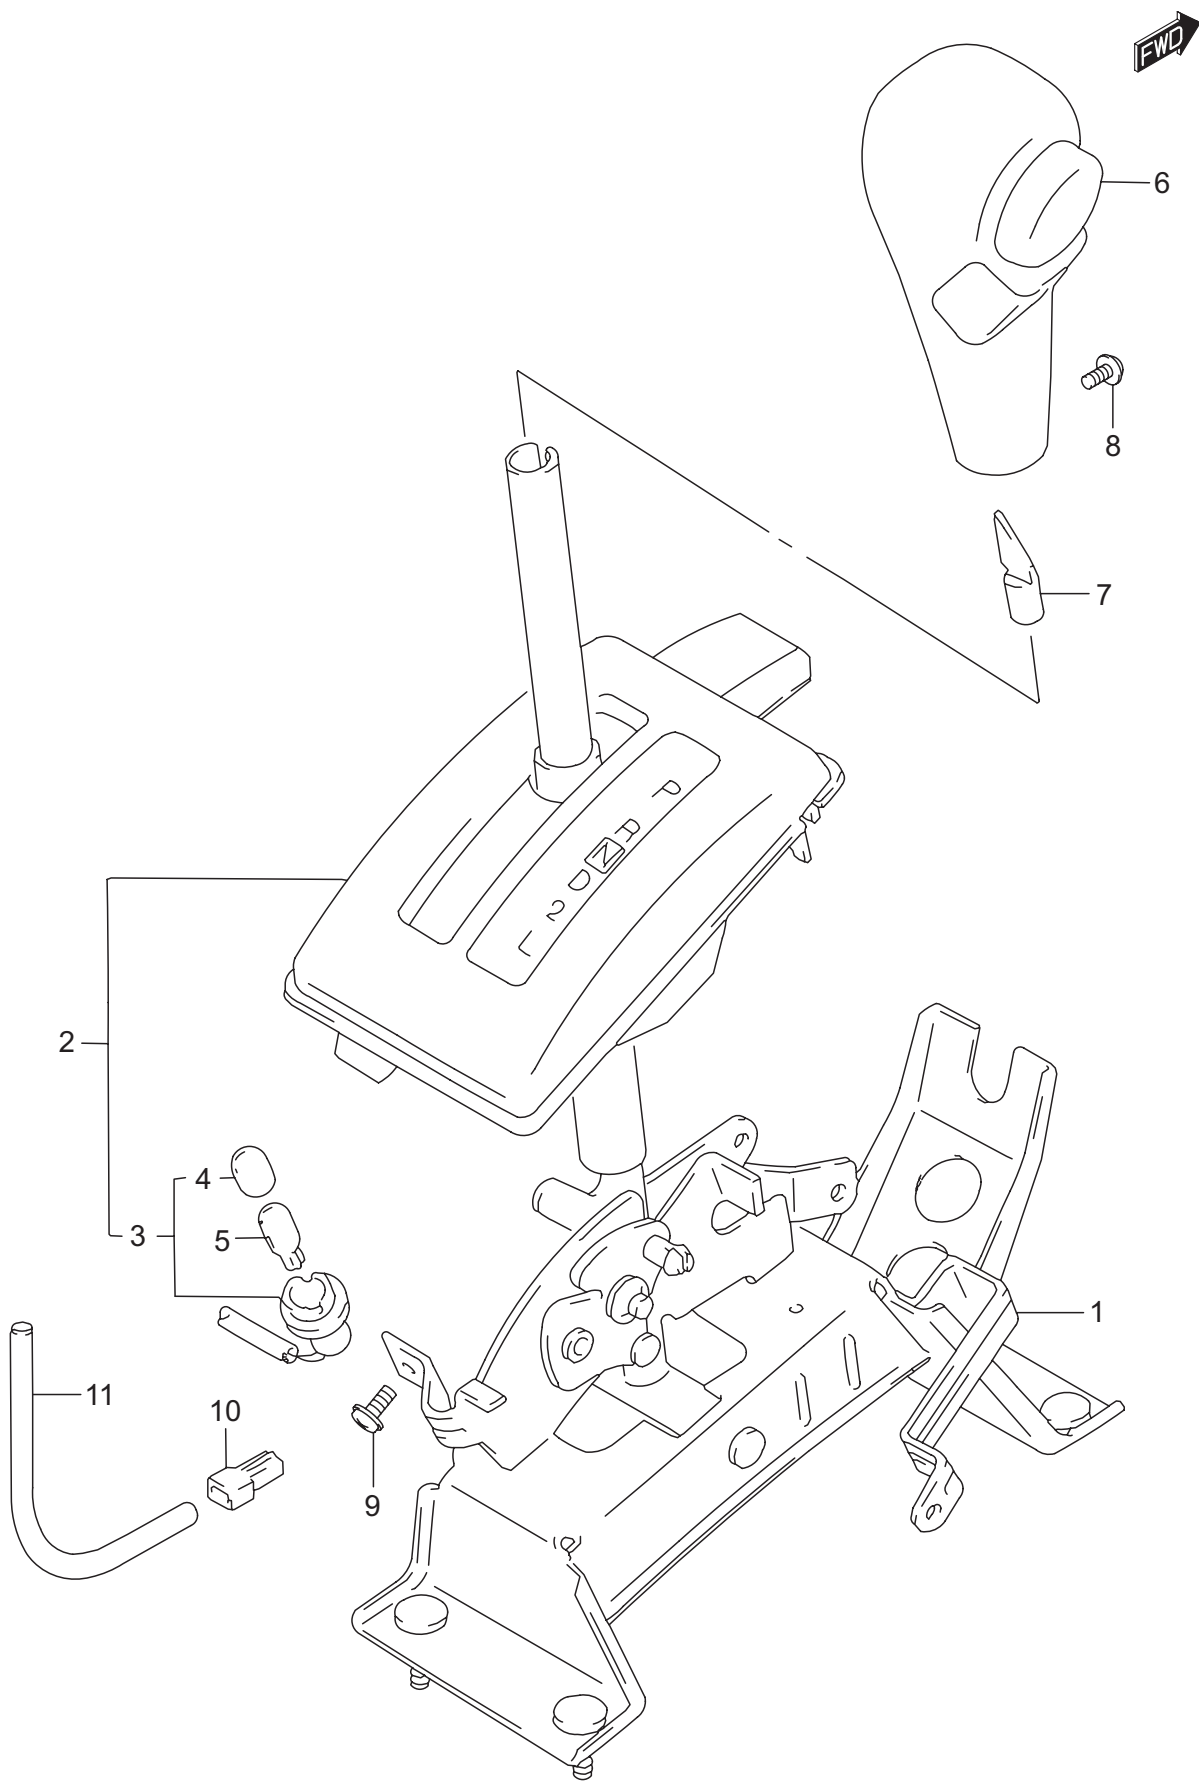


FIG.Nº.40 - SELECTOR LEVER (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	28110-75FH0	LEVER ASSY, SELECT	1	
2	28150-75FH0	INDICATOR ASSY, SELECT	1	
3	28180-51F00	.LAMP ASSY	1	
4	28182-51F00	..FILTER	1	
5	09471-12077	..BULB (12V,1.7W)	1	
6	28160-57B70	KNOB ASSY, SELECT LEVER	1	
7	28164-57B00	GUIDE, DETENT RELEASE	1	
8	09125-05117	SCREW (5X6)	1	
9	02142-05103	SCREW	2	
10	28117-64B60	COUPLER, SWITCH WIRE	1	
11	28118-64B61	TUBE, OVER DRIVE HARNESS	1	

FIG.41

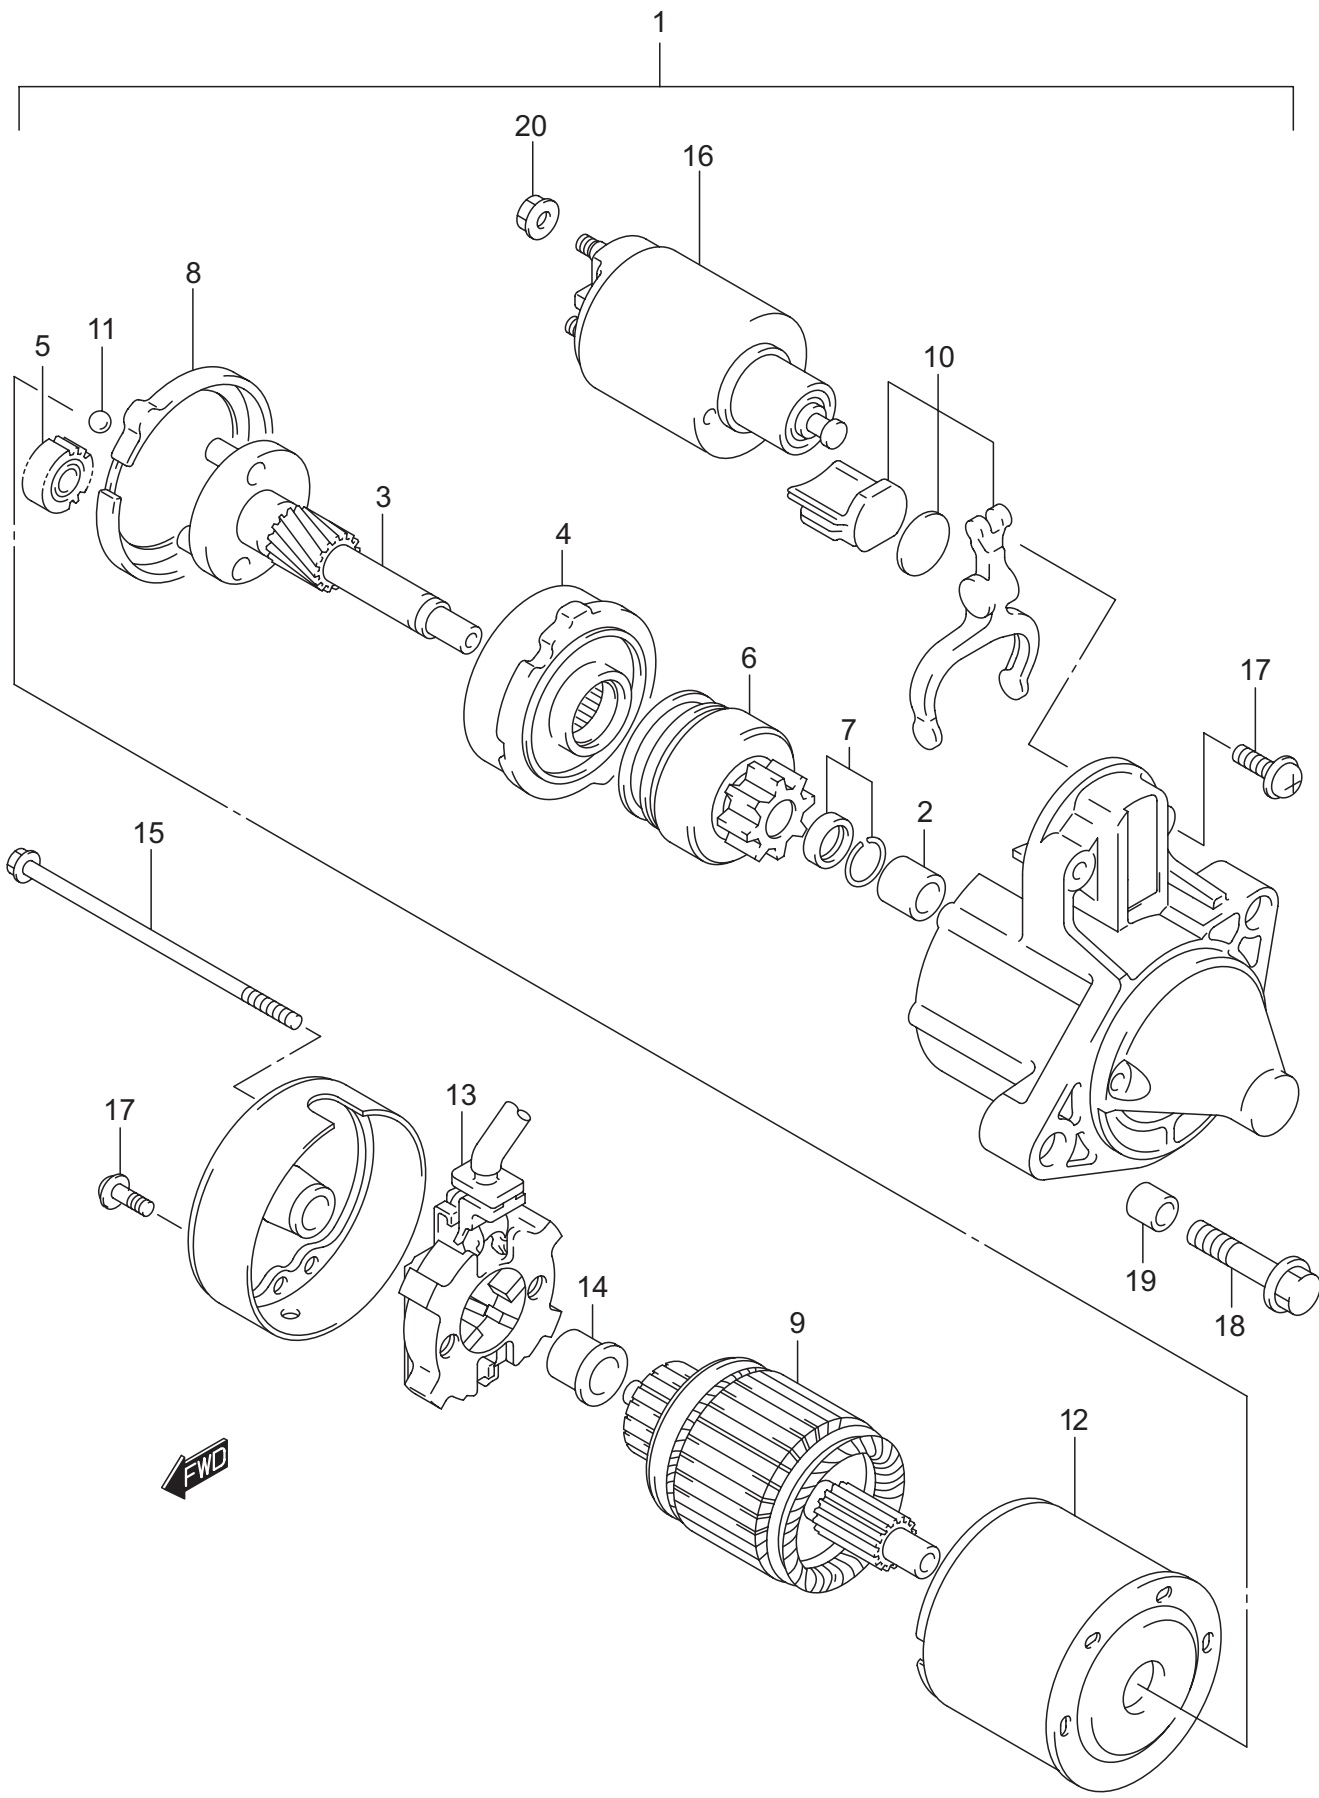


FIG.Nº.41 - STARTING MOTOR

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	31100-75F10	MOTOR ASSY, STARTING	1	
2	31152-79030	.BUSH	1	
3	31341-75F10	.SHAFT, GEAR	1	
4	31343-75F10	.GEAR ASSY	1	
5	31344-86030	.GEAR	3	
6	31320-86030	.CLUTCH ASSY	1	
7	31313-86030	.STOPPER SET	1	
8	31345-75F10	.PACKING	1	
9	31311-75F10	.ARMATURE	1	
10	31191-75F10	.LEVER ASSY	1	
11	31193-86030	.BALL	1	
12	31110-75F10	.YOKE ASSY	1	
13	31173-60A22	.HOLDER ASSY, BRUSH	1	
14	31172-64B60	.BEARING	1	
15	31261-75F10	.BOLT	2	
16	31220-86032	.SWITCH ASSY	1	
17	31136-79030	.SCREW ASSY	1	
18	01550-08403	BOLT	2	
19	04211-11129	PIN	2	
20	08316-10083	NUT	1	

FIG.42

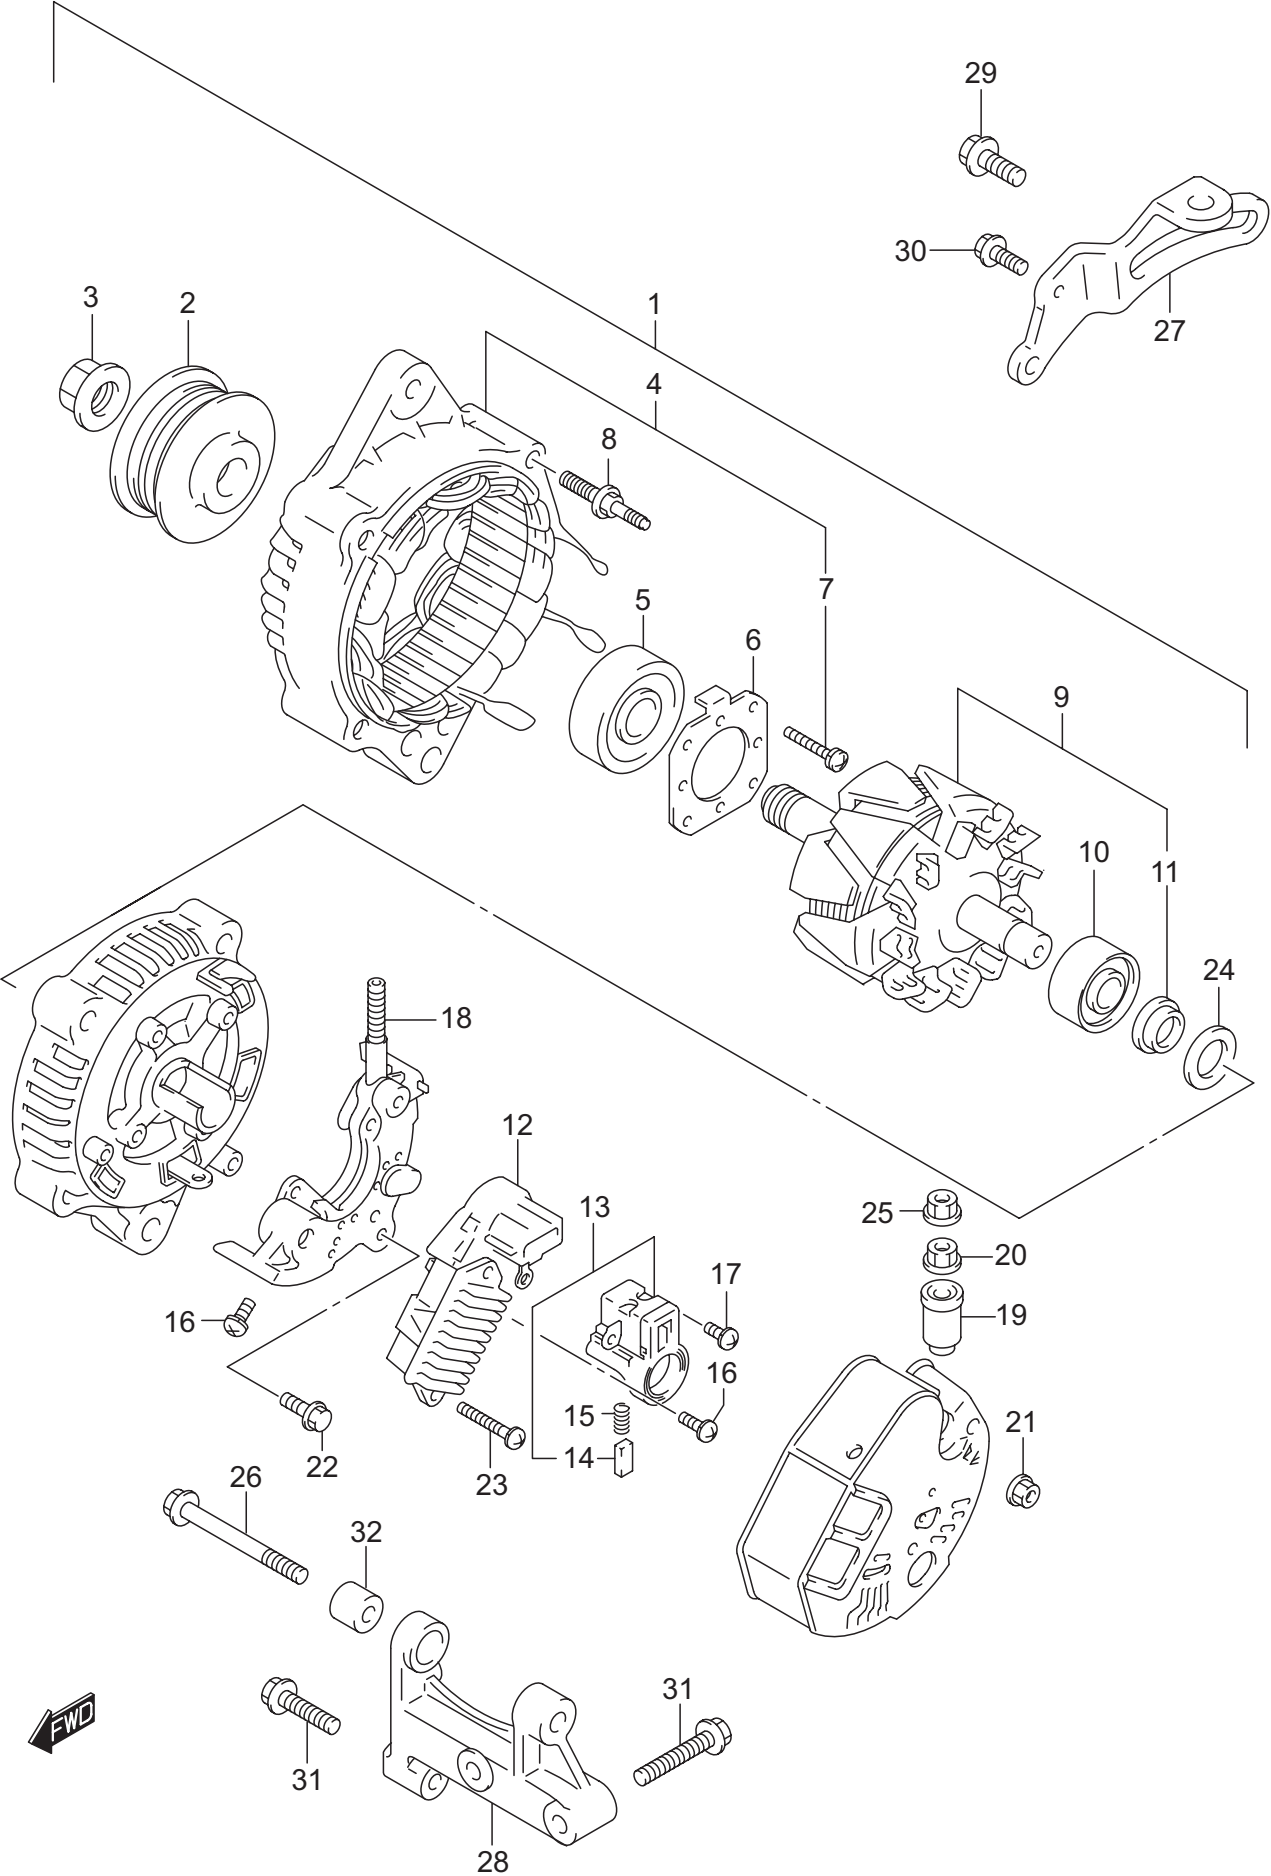


FIG.Nº.42 - GENERATOR

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	31400-78F10	GENERATOR ASSY	1	
2	31171-60G10	.PULLEY	1	←31171-75F00
3	31775-86510	.NUT	1	
4	31580-60G12	.FRAME ASSY, DRIVE END	1	
5	31582-60G13	..BEARING	1	
6	31585-82111	..RETAINER, BEARING	1	
7	02112-04163	..SCREW	4	
8	31587-82110	..BOLT	4	
9	31710-60G12	.ROTOR ASSY	1	
10	31612-60G13	..BEARING	1	
11	31613-82610	..COVER, BEARING	1	
12	32500-75F00	.REGULATOR ASSY	1	
13	31656-60G10	.HOLDER ASSY, BRUSH	1	
14	31631-82610	..BRUSH	2	
15	31635-82610	..SPRING, BRUSH	2	
16	02112-04063	.SCREW	6	
17	31517-75F00	.SCREW	1	
18	31621-75F00	.HOLDER ASSY, RECTIFIER	1	
19	31514-82610	.INSULATOR, TERMINAL	1	
20	08316-10063	.NUT	1	
21	08316-10053	.NUT	7	
22	31599-75F00	.BOLT	1	
23	02112-74253	.SCREW	2	
24	31615-60G10	.WASHER	1	
25	08316-10063	NUT	1	
26-1	01550-10953	BOLT	1	
26-2	01550-10853	BOLT	1	2000-3~
27	11561-78F00	ARM, GENERATOR ADJUSTING	1	
28	11565-78F00	BRACKET, GENERATOR	1	
29	09118-08107	BOLT (8X25)	1	
30	01550-08123	BOLT	1	
31	01550-08403	BOLT	3	
32	11555-60G00	BUSH, GENERATOR MOUNTING	1	

FIG.43

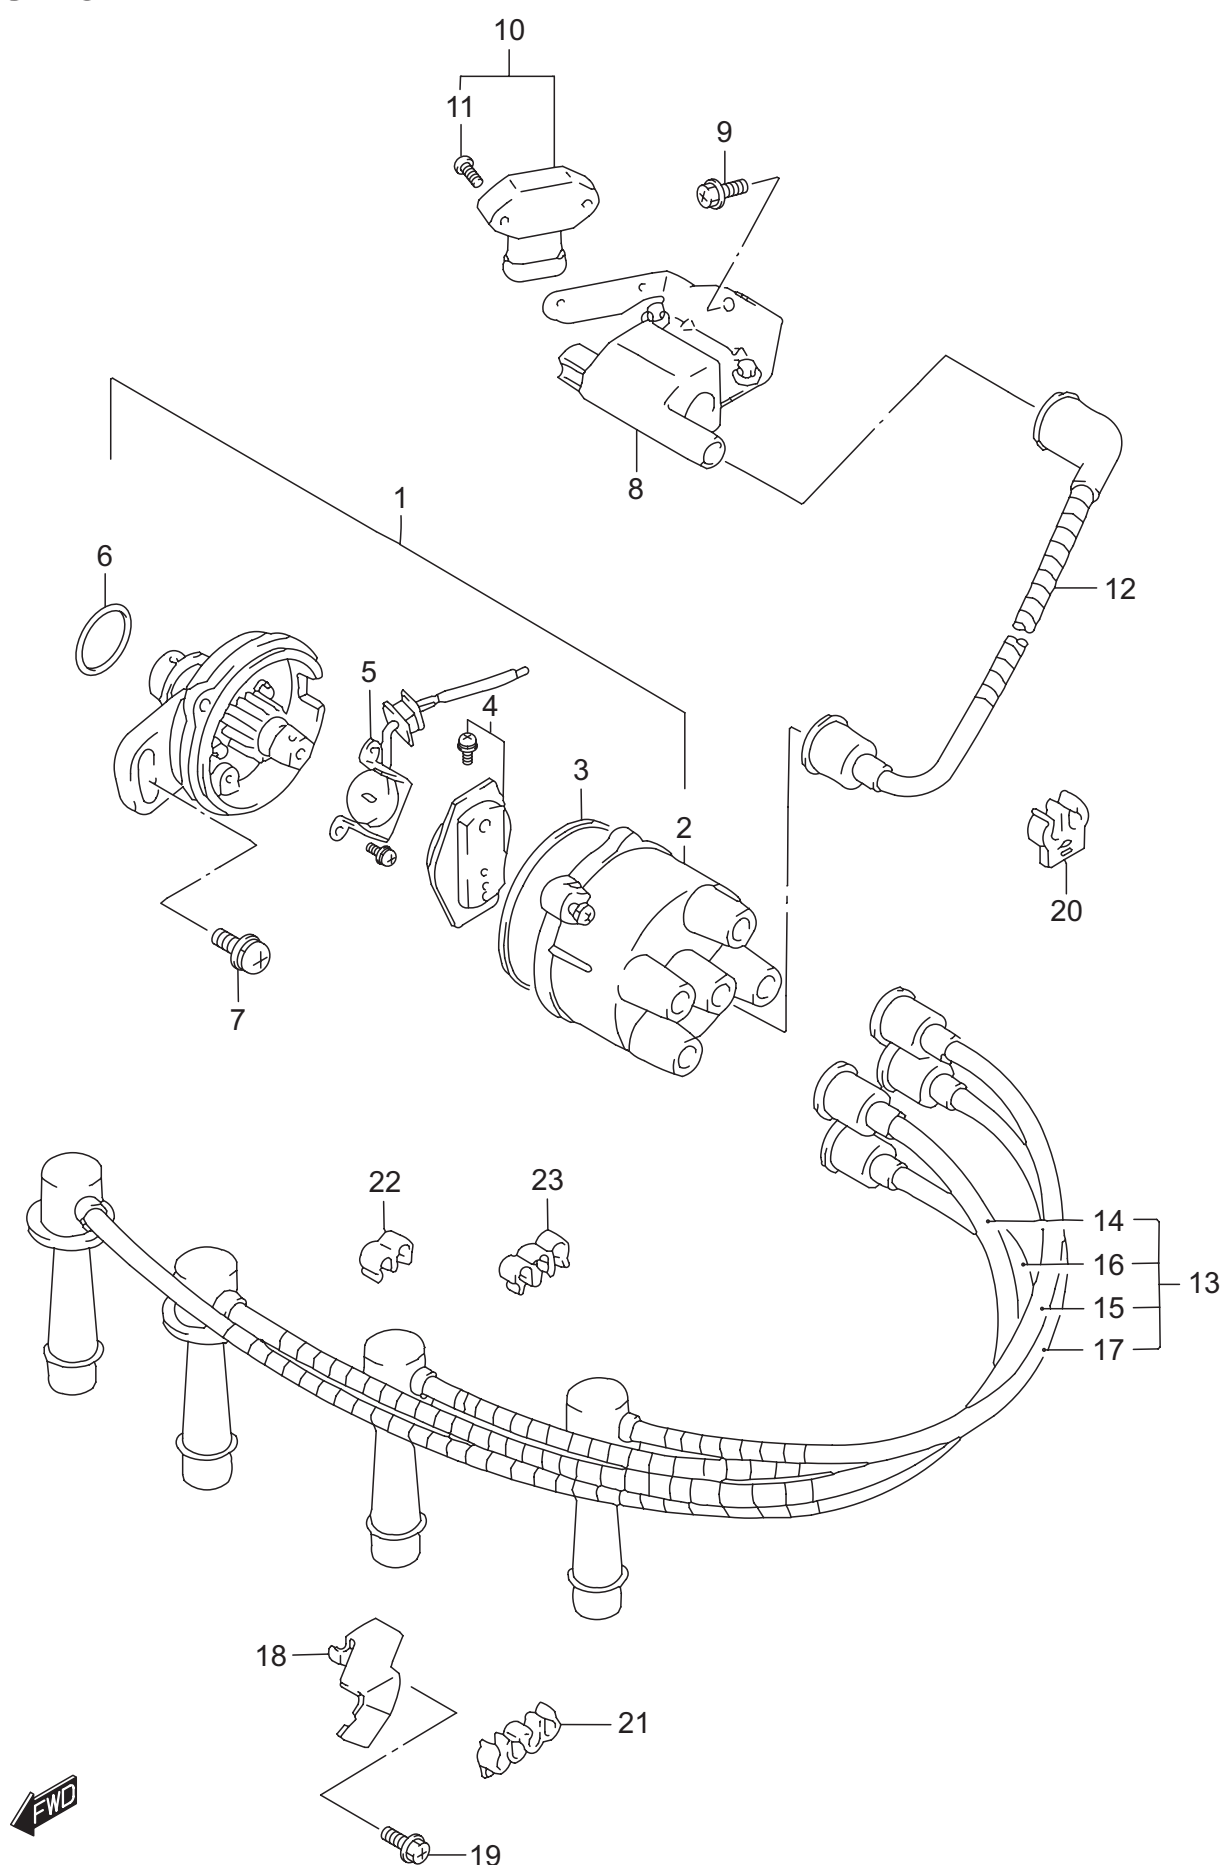


FIG.Nº.43 - DISTRIBUTOR

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	33100-75F51	DISTRIBUTOR ASSY	1	
2	33321-75F00	.CAP	1	
3	33324-73G51	.PACKING, CAP	1	
4	33310-75F00	.ROTOR	1	
5	33140-75F50	.GENERATOR, SIGNAL	1	
6	33278-64B10	.O RING	1	
7	09138-08003	SCREW (8X30)	1	
8	33410-75F00	COIL ASSY, IGNITION	1	
9	02162-06123	BOLT	1	
10	33370-75F00	IGNITER ASSY	1	
11	02112-35203	.SCREW	2	
12	33710-75F00	CORD, HIGH TENSION NO.1	1	
13	33705-75F03	CORD SET, HIGH TENSION	1	
14	33730-75F02	.CORD, HIGH TENSION NO.2	1	
15	33740-75F02	.CORD, HIGH TENSION NO.3	1	
16	33750-75F03	.CORD, HIGH TENSION NO.4	1	
17	33760-75F03	.CORD, HIGH TENSION NO.5	1	
18	33881-75F60	BRACKET, HT CORD CLAMP	1	
19	02162-06123	BOLT	1	
20	33882-60A10	CLAMP, HIGH TENSION CORD	1	
21	33884-86510	CLAMP	2	
22	09408-00033	CLIP	1	
23	09408-00035	CLIP	1	

FIG.44

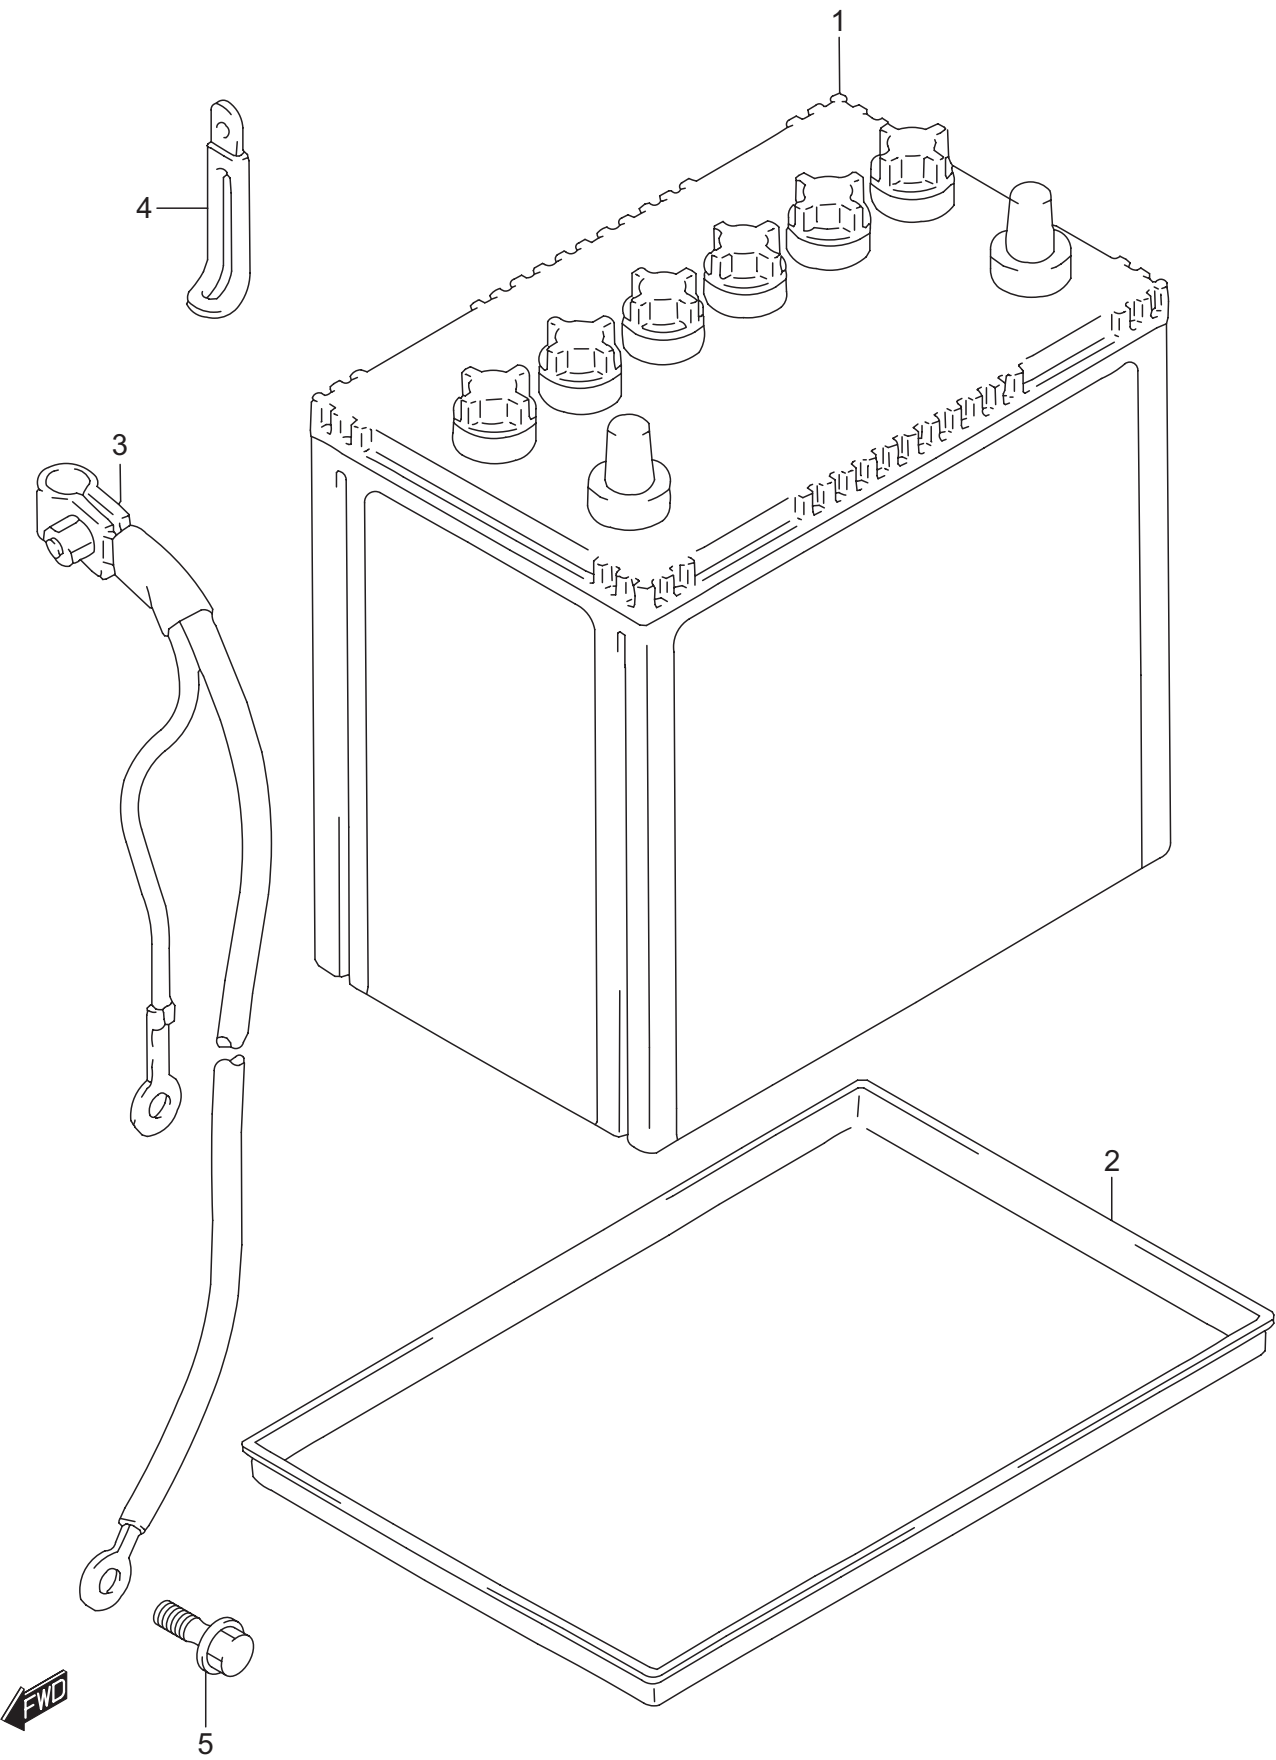


FIG.Nº.44 - BATTERY

REF.Nº. PARTE		DESCRIPCION	CXV		OBSERVACIONES
1	33610-71320	BATTERY (38B20L,12V,28AH/5HR)	1		
2	33660-73010	TRAY, BATTERY	1		
3-1	33850-75F40	CABLE, BATTERY GROUND	1	MT	
3-2	33850-75F10	CABLE, BATTERY GROUND	1	AT	
4-1	09404-08206	CLAMP (L:82)	1	MT	
4-2	09404-06432	CLAMP (L:80)	1	AT	
5	01550-08123	BOLT, GROUND	1		

FIG.45

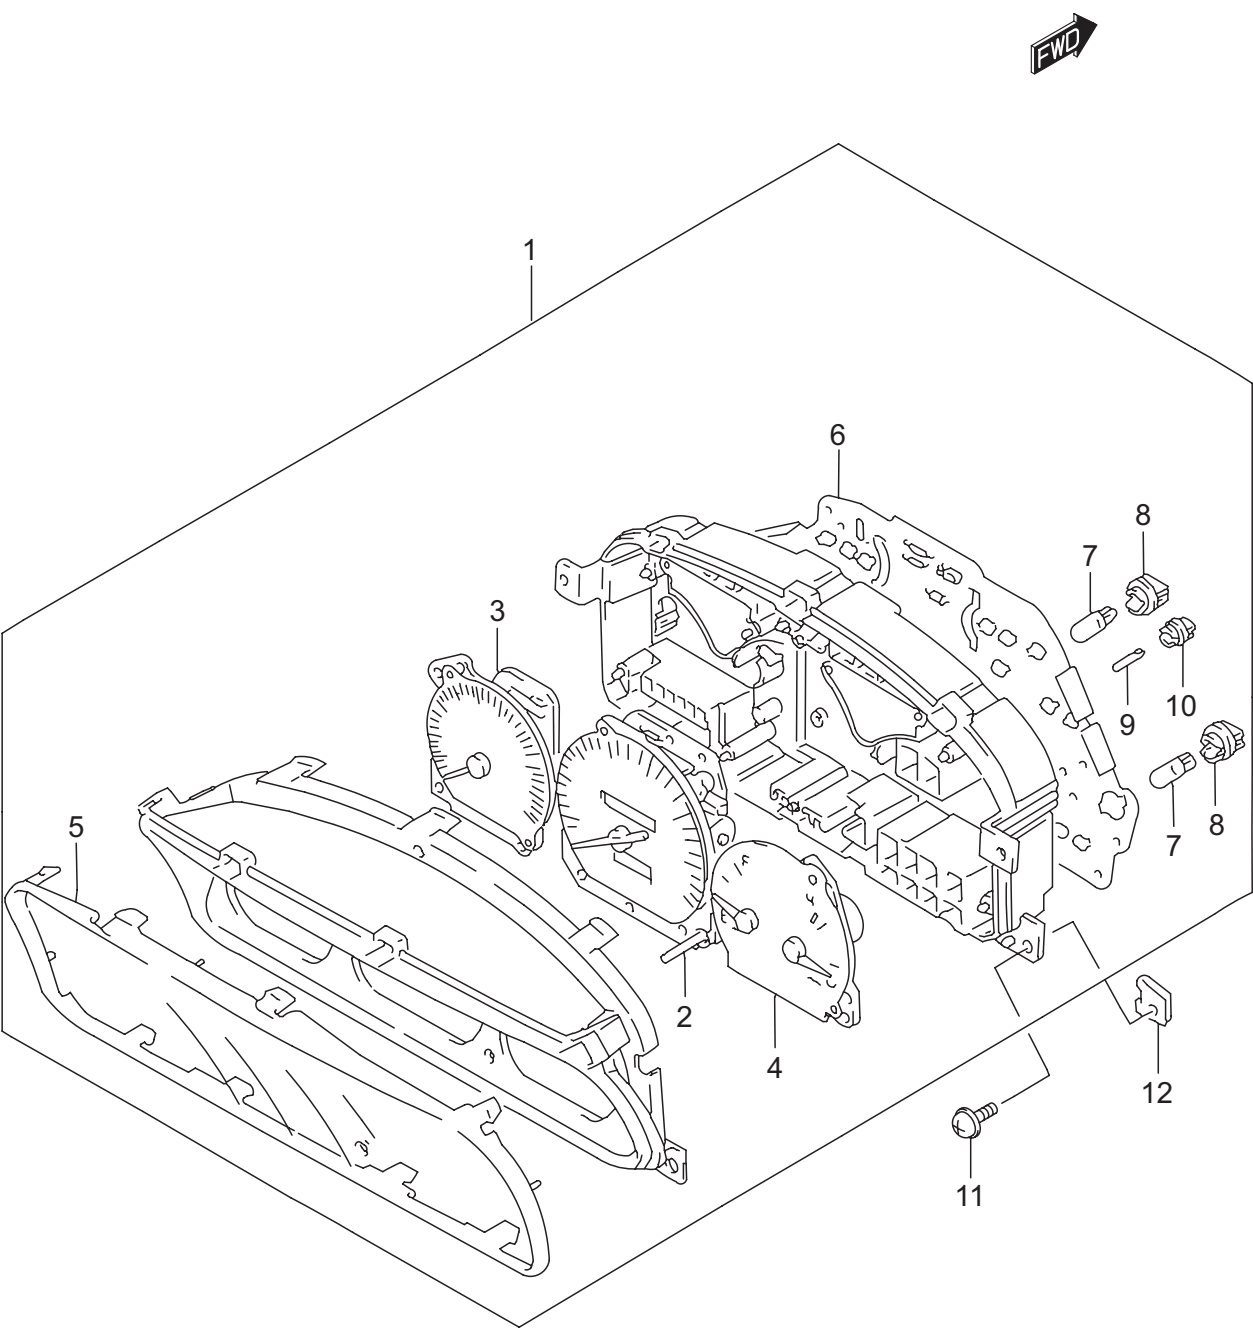


FIG.Nº.45 - SPEEDOMETER

REF.Nº. PARTE		DESCRIPCION	CXV		OBSERVACIONES
1-1	34101-75FM1	SPEEDOMETER ASSY	1	MT	
1-2	34101-75FP1	SPEEDOMETER ASSY	1	AT	
2	34120-75F10	.BODY ASSY, SPEEDOMETER	1		
3	34220-75F11	.BODY ASSY, TACHOMETER	1		
4-1	34320-75F00	.BODY ASSY, FUEL/TEMP METER	1	MT	
4-2	34320-75FA0	.BODY ASSY, FUEL/TEMP METER	1	AT	
5	34112-74F10	.GLASS, METER WINDOW	1		
6	34152-75FJ0	.PLATE, PRINTED	1		
7	09471-12092	.BULB (12V,3.4W)	4		
8	34172-50E10	.SOCKET	4		
9-1	09471-12055	.BULB (12V,1.4W)	8	MT	
9-2	09471-12055	.BULB (12V,1.4W)	9	AT	
10-1	34175-78900	.SOCKET	8	MT	
10-2	34175-78900	.SOCKET	9	AT	
11	03541-05203	SCREW	4		
12	09148-05045	NUT	2		

FIG.46

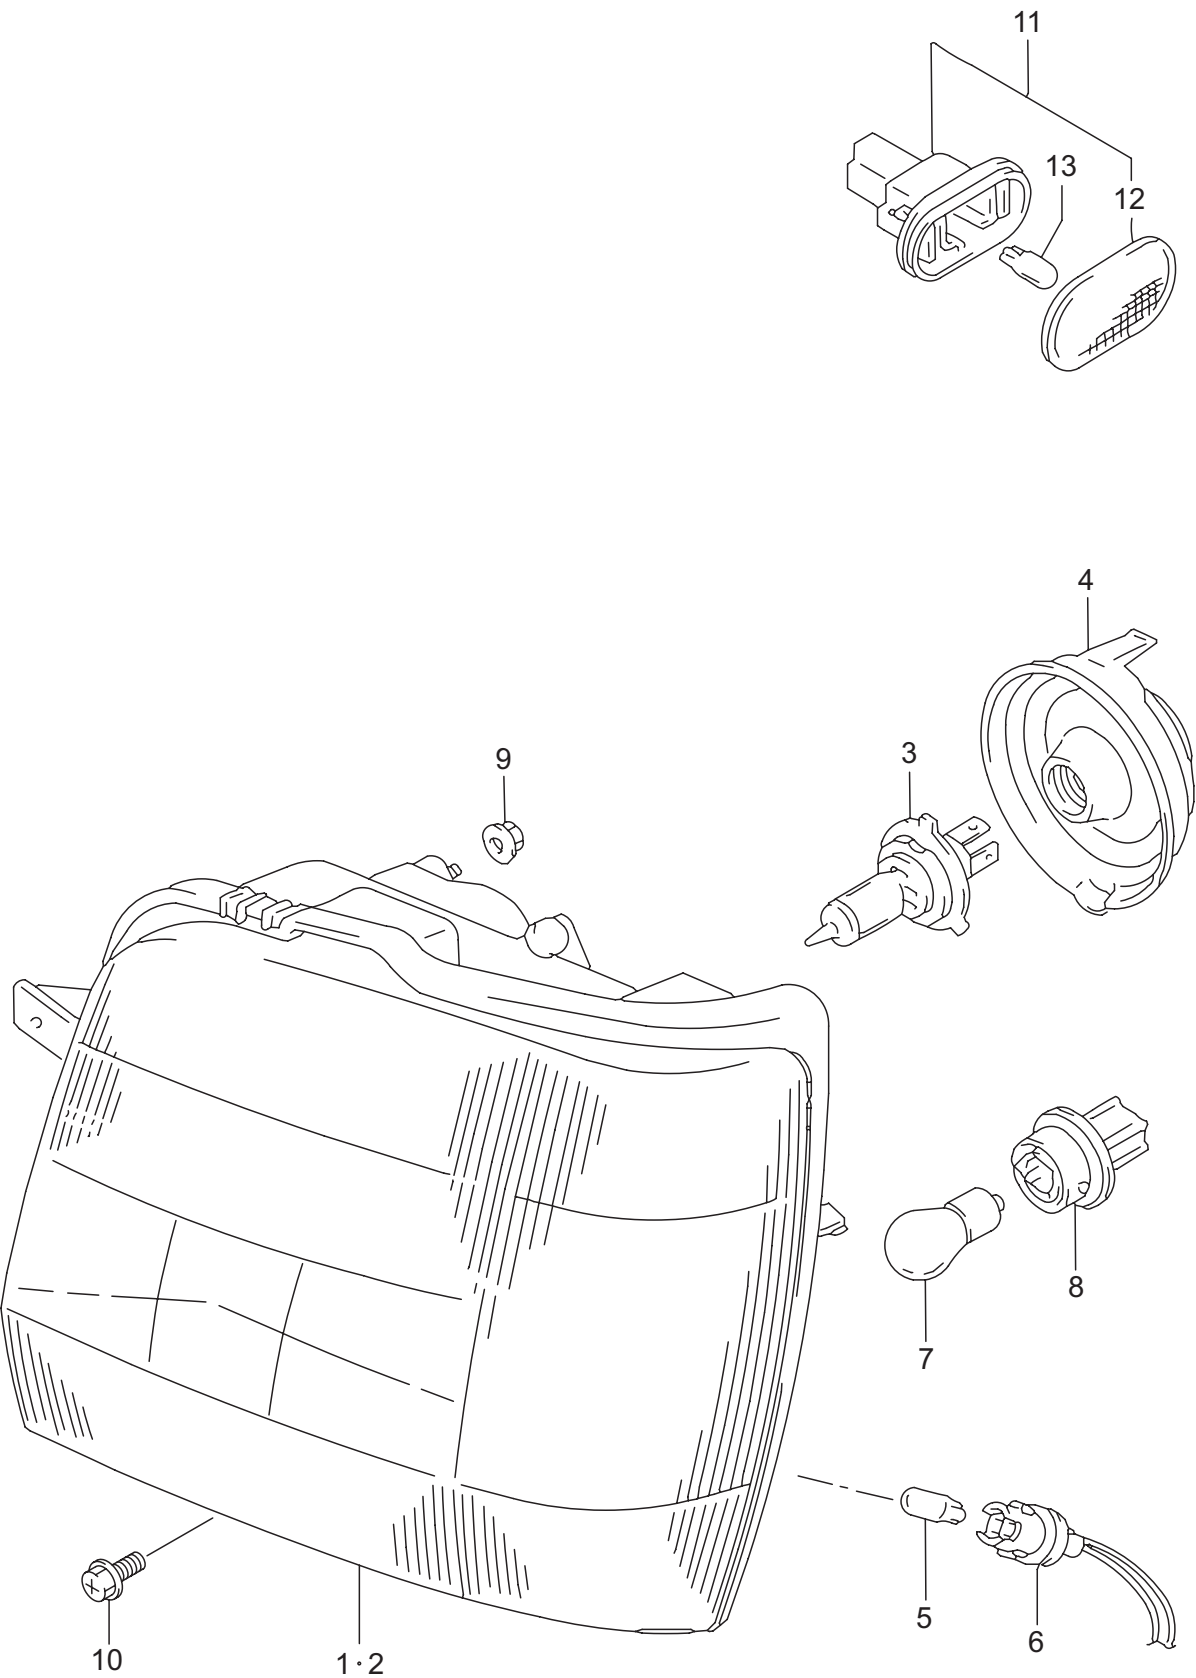


FIG.Nº.46 - HEADLAMP

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	35120-75F30	UNIT, HEADLAMP RH	1	
2	35320-75F30	UNIT, HEADLAMP LH	1	
3	09471-12182	BULB (12V/60/55W,H4LL)	2	
4	35125-75F00	COVER, SOCKET	2	
5	09471-12081	BULB (12V,5W)	2	
6	36118-75F10	SOCKET, POSITION LAMP	2	
7	09471-12045	BULB (12V,21W)	2	
8	36118-75F00	SOCKET, TURN LAMP	2	
9	08316-10063	NUT	6	
10	09122-76001	SCREW (6X16)	2	
11	36410-75F01	LAMP ASSY, SIDE TURN SIGNAL	2	
12	36412-75F00	.LENS, SIDE TURN	2	
13	09471-12081	.BULB (12V,5W)	2	

FIG.47

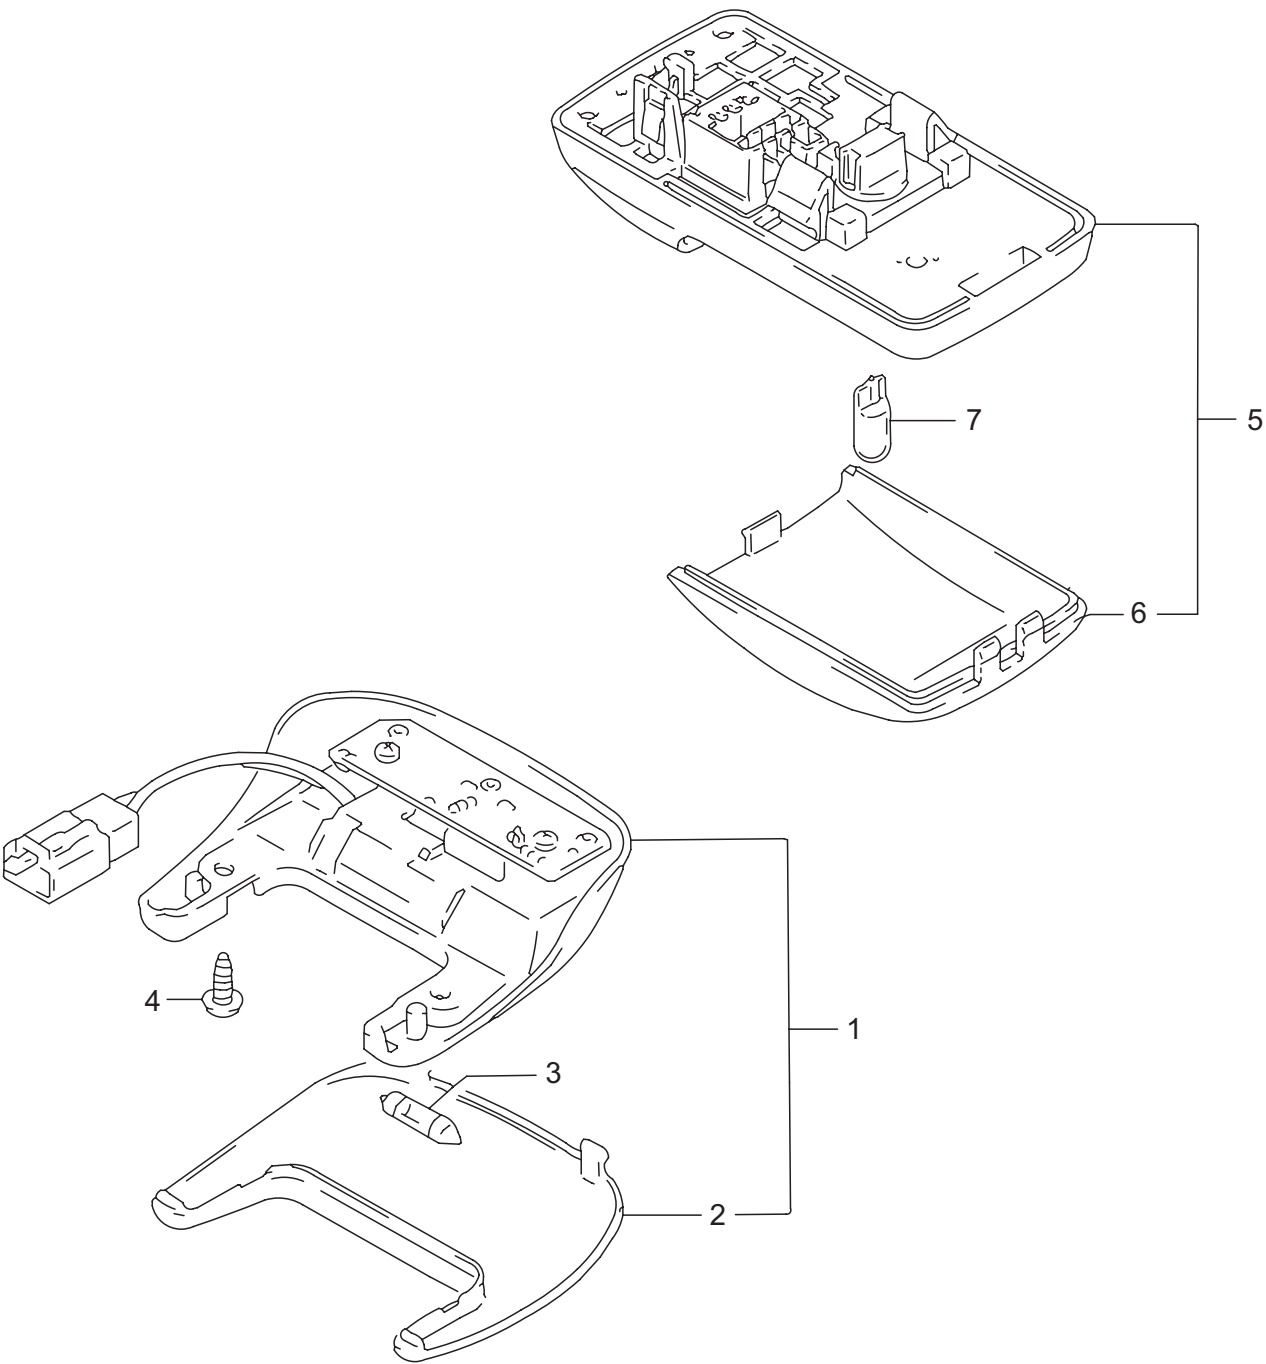


FIG.Nº.47 - ROOM LAMP

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	36210-50E61-6GS	LAMP ASSY, ROOM (GRAY)	1	
2	36212-50E00	.LENS, ROOM LAMP	1	
3	09471-12073	.BULB (12V,5W)	1	
4	03242-05163	SCREW	2	
5	36210-74F02-6GS	LAMP ASSY, REAR ROOM (GRAY)	1	
6	36212-74F00	.LENS, ROOM LAMP	1	
7	09471-12081	.BULB (12V,5W)	1	

FIG.48

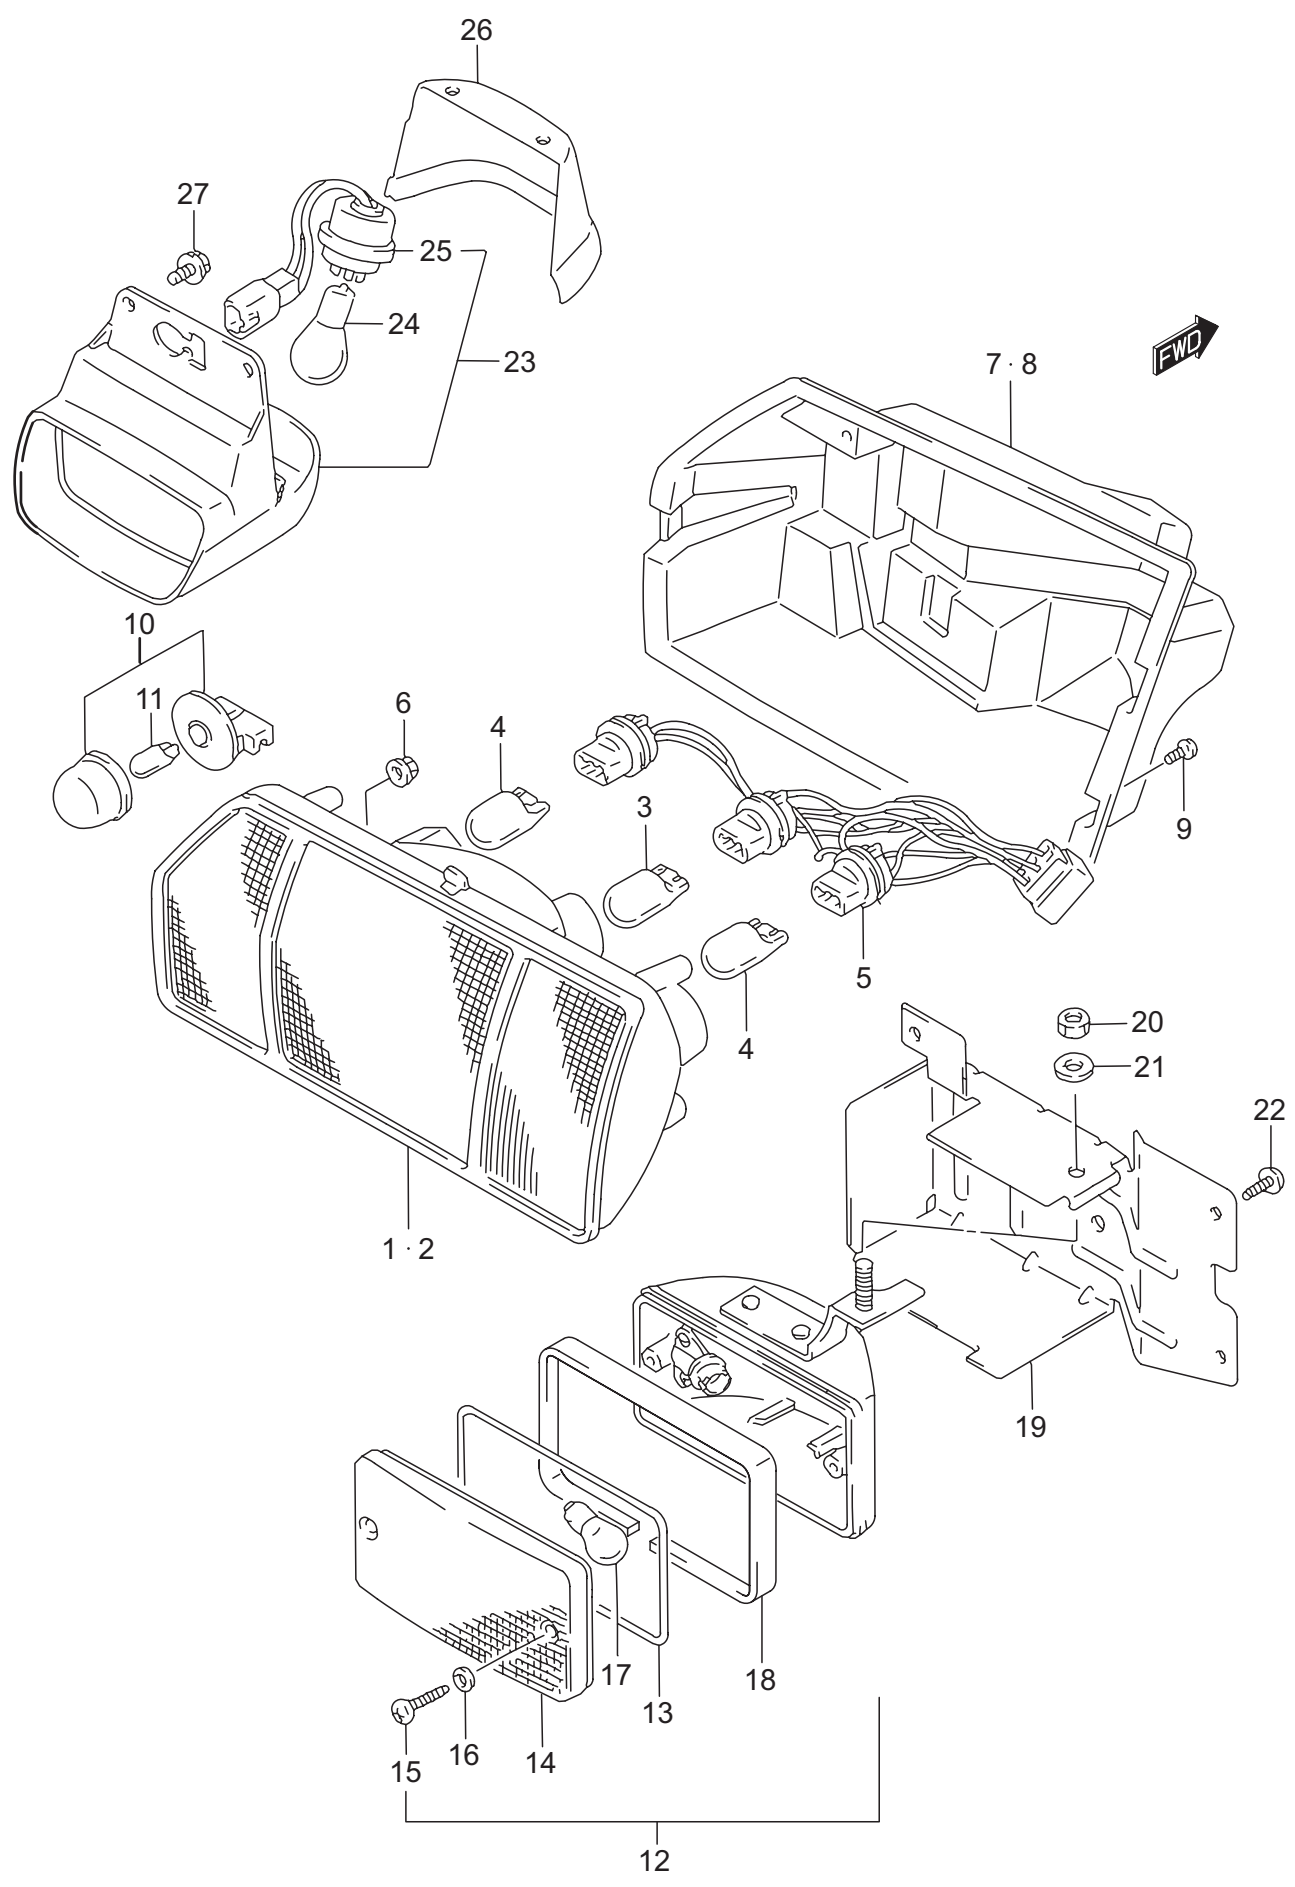


FIG.Nº.48 - REAR LAMP

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	35650-75F10	LAMP UNIT, REAR COMB RH	1	
2	35670-75F10	LAMP UNIT, REAR COMB LH	1	
3	09471-12192	BULB (12V,21/5W)	2	
4	09471-12191	BULB (12V,21W)	4	
5	35658-75F00	SOCKET/CORD ASSY	2	
6	08316-10063	NUT	2	
7	35690-74F01	COVER, REAR COMB LAMP RH	1	
8	35691-74F01	COVER, REAR COMB LAMP LH	1	
9	03541-05163	SCREW	6	
10	35910-75F11	LAMP ASSY, LICENSE	2	
11	09471-12081	.BULB (12V,5W)	2	
12	36570-75F00	LAMP ASSY, REAR FOG	1	
13	36573-79000	.GASKET	1	
14	36572-79000	.LENS	1	
15	03212-04169	.SCREW	2	
16	35129-04030	.WASHER	2	
17	09471-12045	.BULB (12V,21W)	1	
18	36574-75F00	.END RUBBER	1	
19	36590-75F00	BRACKET, RR FOG LAMP	1	
20	08310-00083	NUT	1	
21	09160-08133	WASHER	1	
22	03541-05163	SCREW	2	
23	35820-75F00	LAMP UNIT, HIGH MOUNT STOP	1	
24	09471-12045	.BULB (12V,21W)	1	
25	35818-75F00	.SOCKET	1	
26	35821-74F10-5PK	COVER, HIGH MOUNT STOP LAMP (BLACK)	1	
27	02162-06123	BOLT	2	

FIG.49

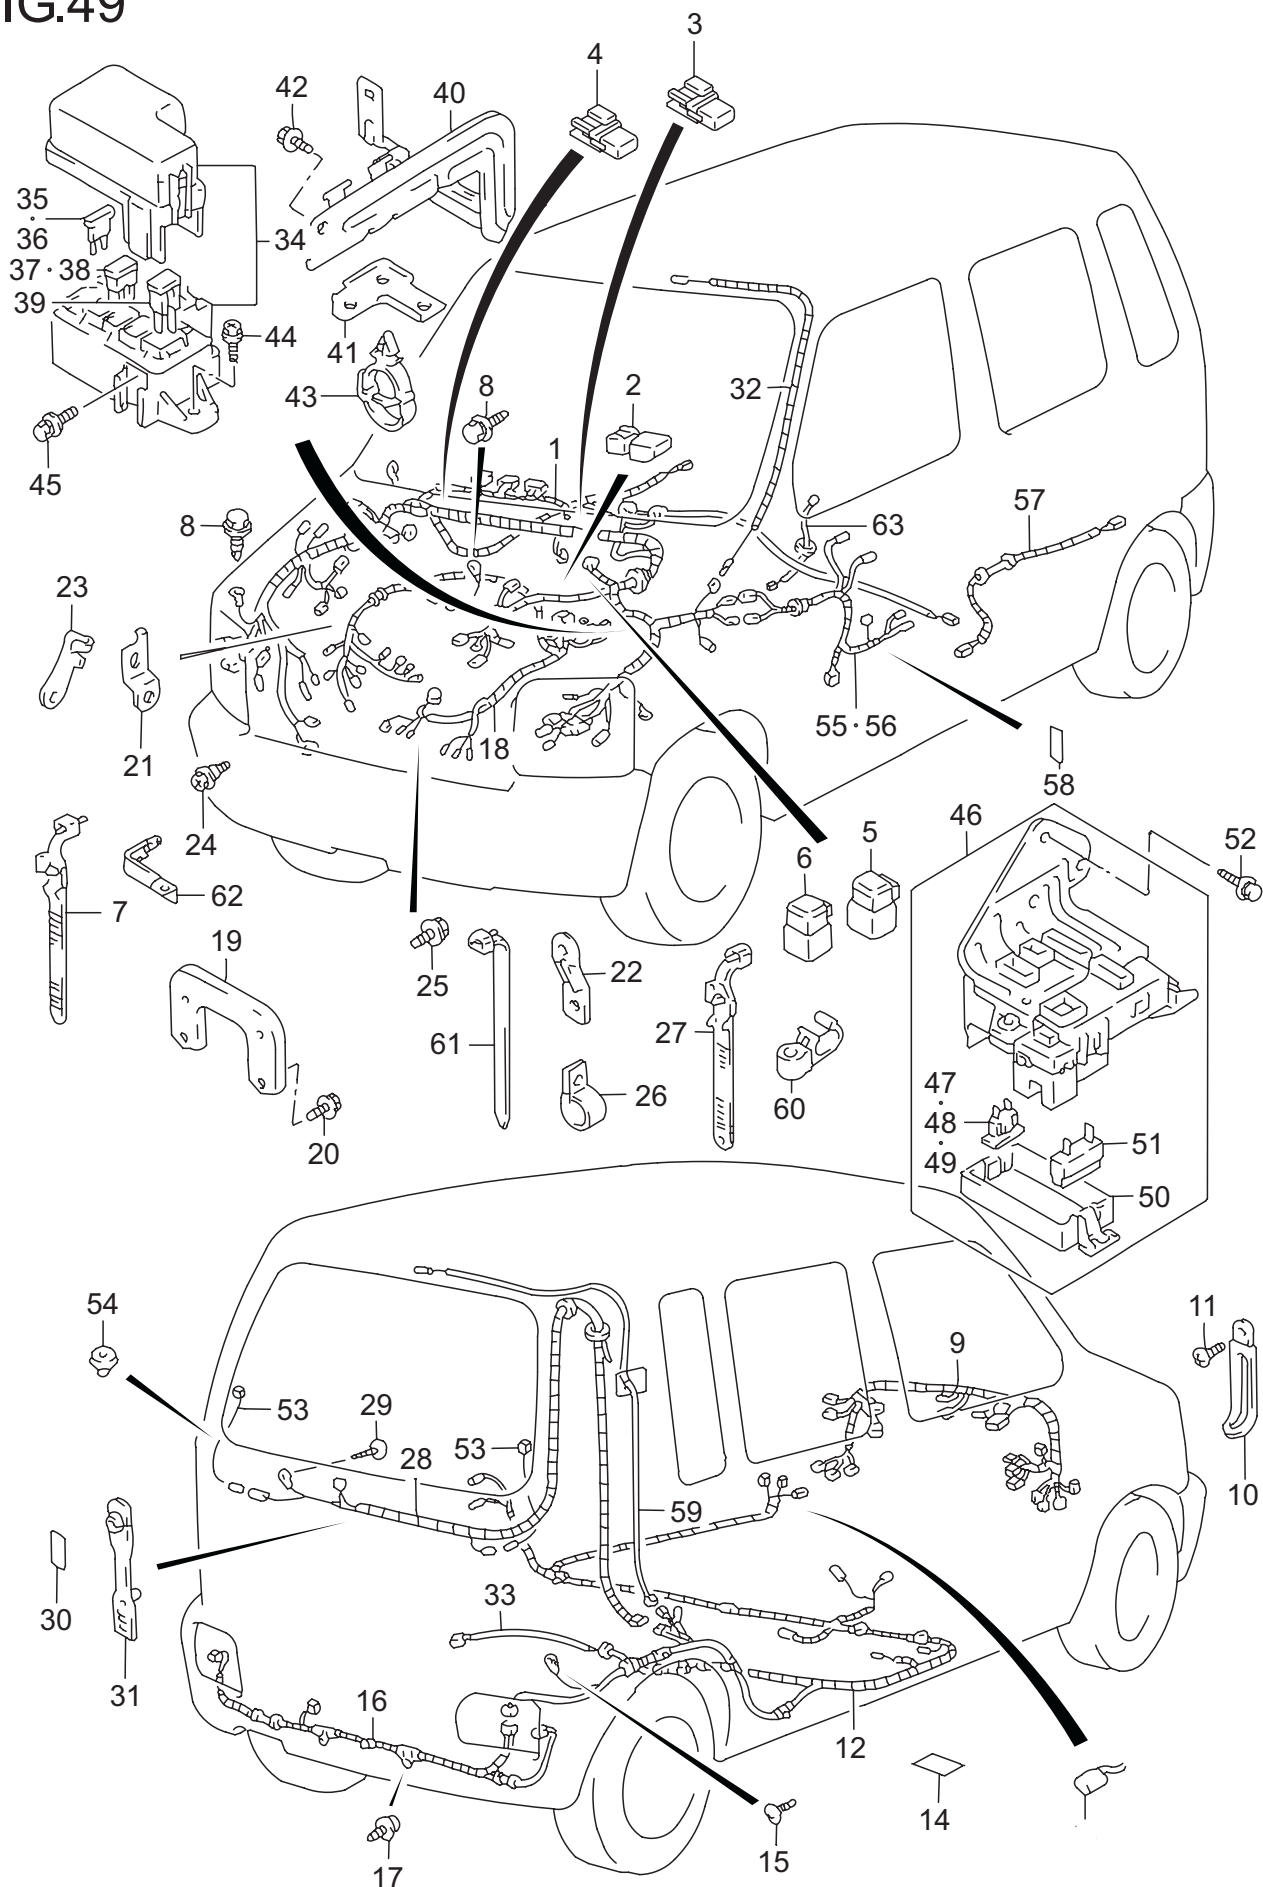


FIG.Nº.49 - WIRING HARNESS

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1-1	36910-75FS0	HARNESS ASSY, WIRING NO.1	1	MT
1-2	36910-75FS1	HARNESS ASSY, WIRING NO.1	1	MT,2002-10~
1-3	36910-75FU0	HARNESS ASSY, WIRING NO.1	1	AT
1-4	36910-75FU1	HARNESS ASSY, WIRING NO.1	1	AT,2002-10~
2	33553-52E00	.FILTER, NOISE SUPPRESSOR	1	
3	38860-60G00	.RELAY, HORN	1	
4	38860-60G00	.RELAY, FUEL PUMP	1	
5	38860-72G00	.RELAY, RADIATOR FAN	1	
6	38860-72G00	.RELAY, MAIN	1	
7	09407-12404	CLAMP (L:140)	1	
8	09115-06001	BOLT (6X16)	4	
9-1	36620-75FU0	HARNESS ASSY, WIRING NO.2	1	MT
9-2	36602-75F10	HARNESS ASSY, WIRING NO.2	1	AT
10	09404-06434	CLAMP (L:95)	8	
11	03541-05123	SCREW	8	
12	36630-75F31	HARNESS ASSY, WIRING NO.3	1	
13	36639-74F00	.DIODE ASSY	1	
14	36930-82010	COVER	6	
15	09115-06001	BOLT (6X16)	2	
16	36640-75F10	HARNESS ASSY, WIRING NO.4	1	
17	03541-05123	SCREW	4	
18-1	36650-75FA1	HARNESS ASSY, WIRING NO.5	1	MT
18-2	36650-75FC1	HARNESS ASSY, WIRING NO.5	1	AT
19	36655-75F00	BRACKET, ENGINE HARNESS	1	
20	01550-06163	BOLT	2	
21	36651-62G10	BRACKET, HARNESS CLAMP	1	
22	36655-73G51	BRACKET, NO.5 HARNESS	1	~1999-4
23	36995-80C00	CLAMP, HARNESS	1	
24	18495-50E00	BOLT	1	
25	01550-08123	BOLT	1	
26	09403-14204	CLAMP	1	
27	09407-12404	CLAMP (L:140)	1	
28	36670-75F20	HARNESS ASSY, HATCH DOOR	1	

FIG.Nº.49 - WIRING HARNESS

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
29	09132-06023	SCREW (6X16)	1	
30	36930-82010	COVER	2	
31	09407-05403	CLAMP (L:88)	6	
32	36820-75F10	WIRE, ROOM LAMP	1	
33	36840-75F00	WIRE, FUEL PUMP	1	
34	36740-75F01	BOX ASSY, MAIN FUSE	1	
35	09481-15101	FUSE (15A)	1	
36	09481-30203	FUSE (30A)	1	
37	09481-40203	FUSE (40A)	1	
38	09481-60202	FUSE (60A)	1	
39	09481-80301	FUSE (80A)	1	
40	36731-75F00	BRACKET, MAIN FUSE BOX	1	
41	36732-75F00	BRACKET, MAIN FUSE BOX	1	
42	09115-06001	BOLT (6X16)	2	
43	09403-25304	CLAMP	1	
44	02162-06123	BOLT	2	
45	09138-06040	BOLT (6X10)	2	
46	36710-75F00	BOX ASSY, JUNCTION	1	
47	09481-15101	.FUSE (15A)	12	
48	09481-20101	.FUSE (20A)	3	
49	09481-30101	.FUSE (30A)	1	
50	36717-74F00	.COVER, JUNCTION BOX	1	
51	36795-50E00	.BREAKER, POWER WINDOW	1	
52	09115-06001	BOLT (6X16)	2	
53	36890-50E00	WIRE, REAR DEFOGGER	2	
54	09308-03005	GROMMET	2	
55	36756-75FF1	WIRE, POWER WINDOW MAIN	1	
56	36756-75FH0	WIRE, POWER WINDOW SUB	1	
57	36751-75F10	WIRE, REAR DOOR	2	
58	36930-82010	COVER	2	
59	36820-74F40	WIRE, REAR ROOM LAMP	1	
60	34935-60D00	CLAMP, STRUT	2	
61	09407-14403	CLAMP (L:125)	2	

FIG.N°.49 - WIRING HARNESS

REF.N°. PARTE		DESCRIPCION	CXV		OBSERVACIONES
62	36655-75F10	BRACKET, ENGINE HARNESS	1	MT	
63	36755-75F00	WIRE, REMOCON MIRROR	2		

FIG.50

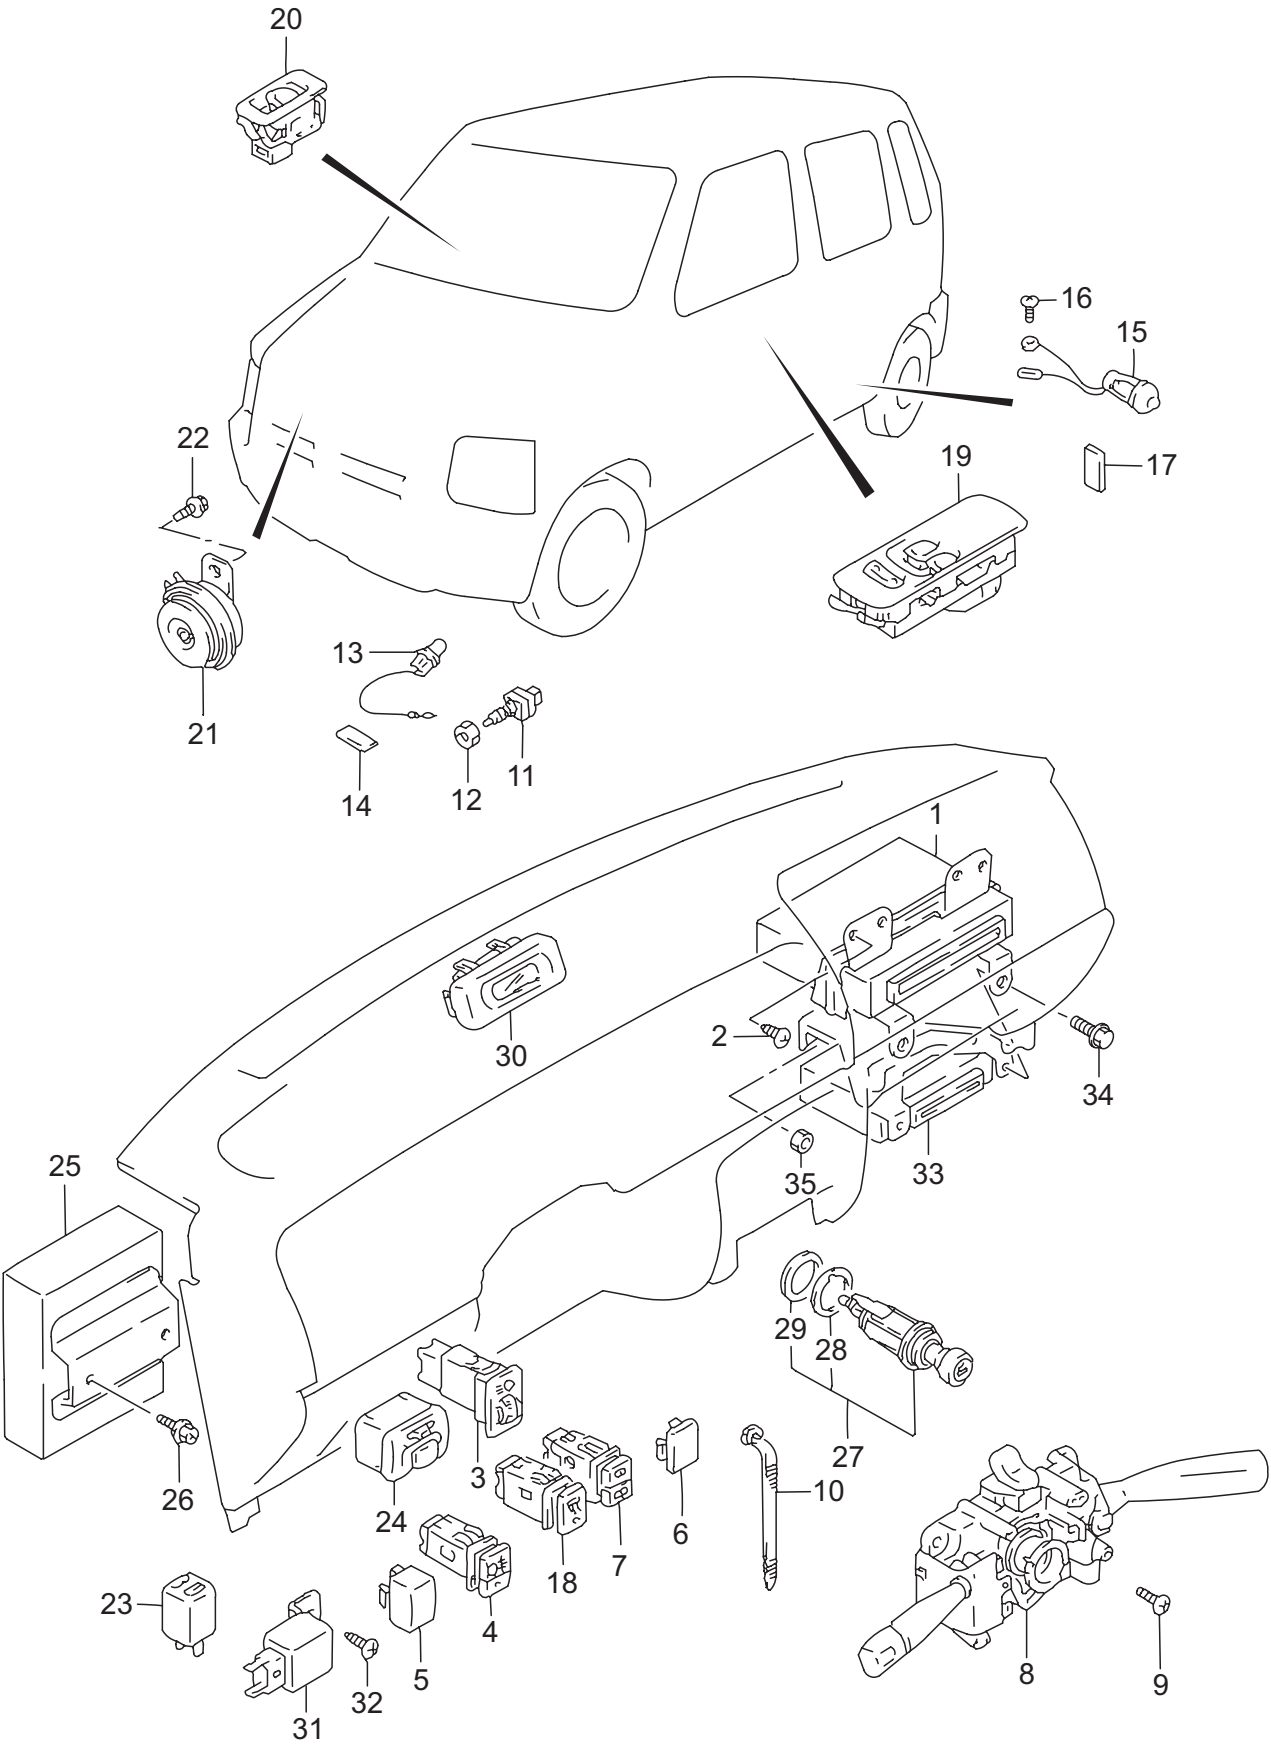


FIG.Nº.50 - ELECTRICAL CONTROL

REF.Nº. PARTE		DESCRIPCION	CXV		OBSERVACIONES
1-1	33920-75FJ0	CONTROLLER, INJECTION/AIR CON	1	MT	
1-2	33920-75FK0	CONTROLLER, INJECTION/AIR CON	1	AT	
2	09129-06002	SCREW (6X12)	3		
3	35180-75F00	SWITCH ASSY, HEADLAMP LEVELING	1		
4	37280-75F10	SWITCH ASSY, REAR FOG LAMP	1		
5	37285-75F00	CAP, OPTION SWITCH HOLE	1		
6	37285-75F10	CAP, OPTION SWITCH HOLE	1		
7	37370-75F10	SWITCH ASSY, REAR WIPER/WASHER	1		
8	37400-71GD1	SWITCH ASSY, COMBINATION	1		
9	02112-05123	SCREW	3		
10	09407-19401	CLAMP (L:190)	1		
11	37740-60D01	SWITCH, STOP LAMP	1		
12	09140-10043	NUT	1		
13	37940-50A00	SWITCH ASSY, PARKING BRAKE	1		
14	36930-82010	COVER	2		
15	37670-80E10	SWITCH ASSY, DOOR	4		
16	03142-05123	SCREW	4		
17	36930-82010	COVER	2		
18	37860-75F10	SWITCH ASSY, REAR DEFOGGER	1		
19	37990-75F11-T01	SWITCH ASSY, POWER WINDOW MAIN (GRAY)	1		
20	37995-75F00-T01	SWITCH ASSY, POWER WINDOW SUB (GRAY)	1		
21	38500-75F00	HORN ASSY	1		
22	09118-06106	BOLT (6X16)	1		
23	38610-84002	RELAY, TURN SIGNAL & 4 WAY	1		
24	37950-75F00	SWITCH ASSY, MIRROR	1		
25-1	38720-75F30	CONTROLLER, POWER STEERING	1		
25-2	38720-75F40	CONTROLLER, POWER STEERING	1	2002-10~	
26	02162-06123	SCREW	2		
27	39400-84811	LIGHTER ASSY, CIGARETTE	1		
28	39471-84000	.RIM	1		
29	09160-23007	.WASHER (23X34X1)	1		

FIG.Nº.50 - ELECTRICAL CONTROL

REF.Nº. PARTE		DESCRIPCION	CXV		OBSERVACIONES
30	34600-75F00-T01	CLOCK ASSY (GRAY)	1		
31	38700-50E30	CONTROLLER, POWER DOOR LOCK	1		
32	03241-06123	SCREW	1		
33	38880-75F60	CONTROLLER ASSY, AT	1	AT	
34	02162-06103	BOLT	2	AT	
35	08316-10063	NUT	1	AT	

FIG.51

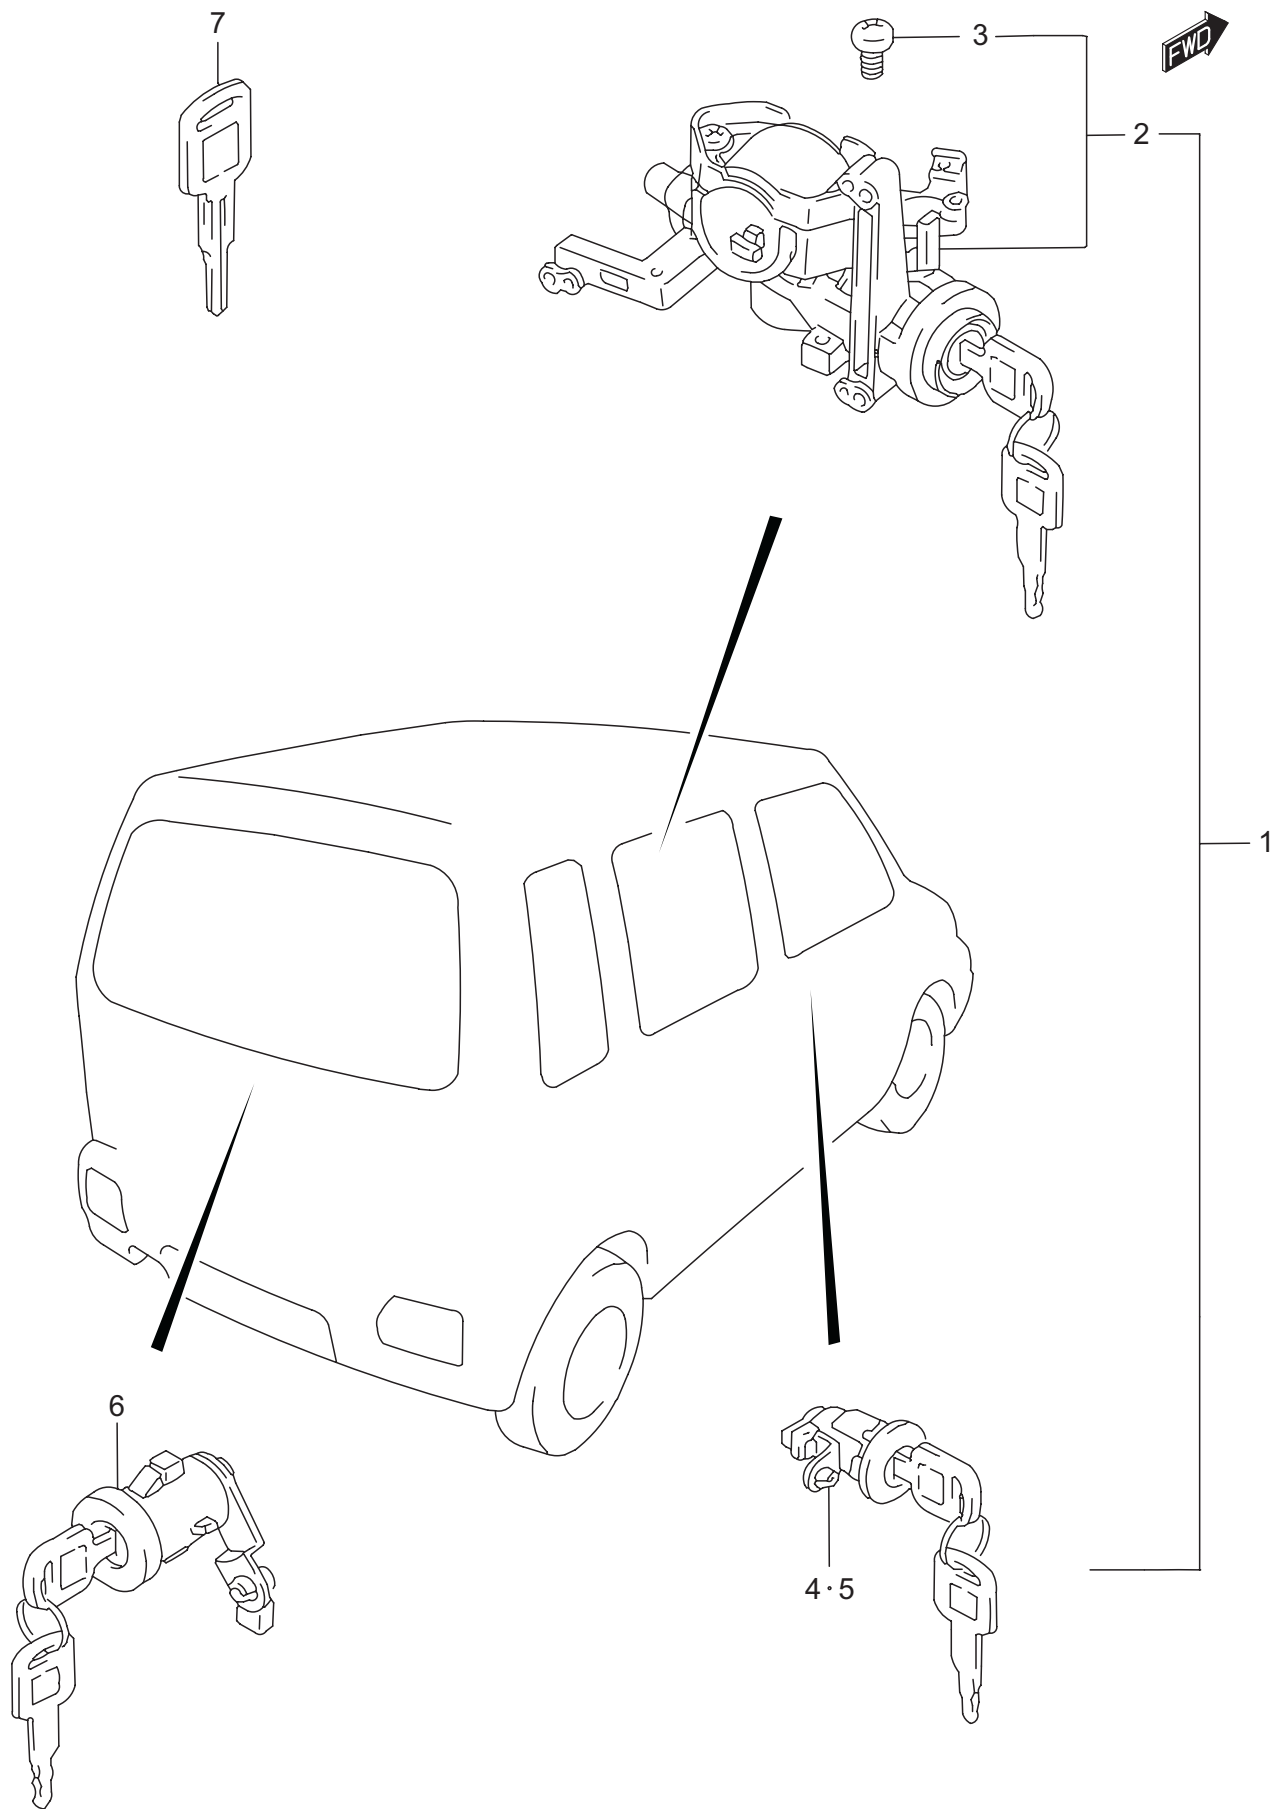


FIG.Nº.51 - LOCK SET

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	37100-75892	LOCK SET	1	
2	37101-75812	.LOCK ASSY, STEERING	1	
3	37152-84G00	..BOLT, STEERING LOCK	2	
4	82270-74810	.CYLINDER, FRONT DOOR LOCK RH	1	
5	82280-74810	.CYLINDER, FRONT DOOR LOCK LH	1	
6	82500-75830	.CYLINDER, BACK DOOR LOCK	1	
7	37145-61A20	KEY, BLANK	1	OPT

FIG.52

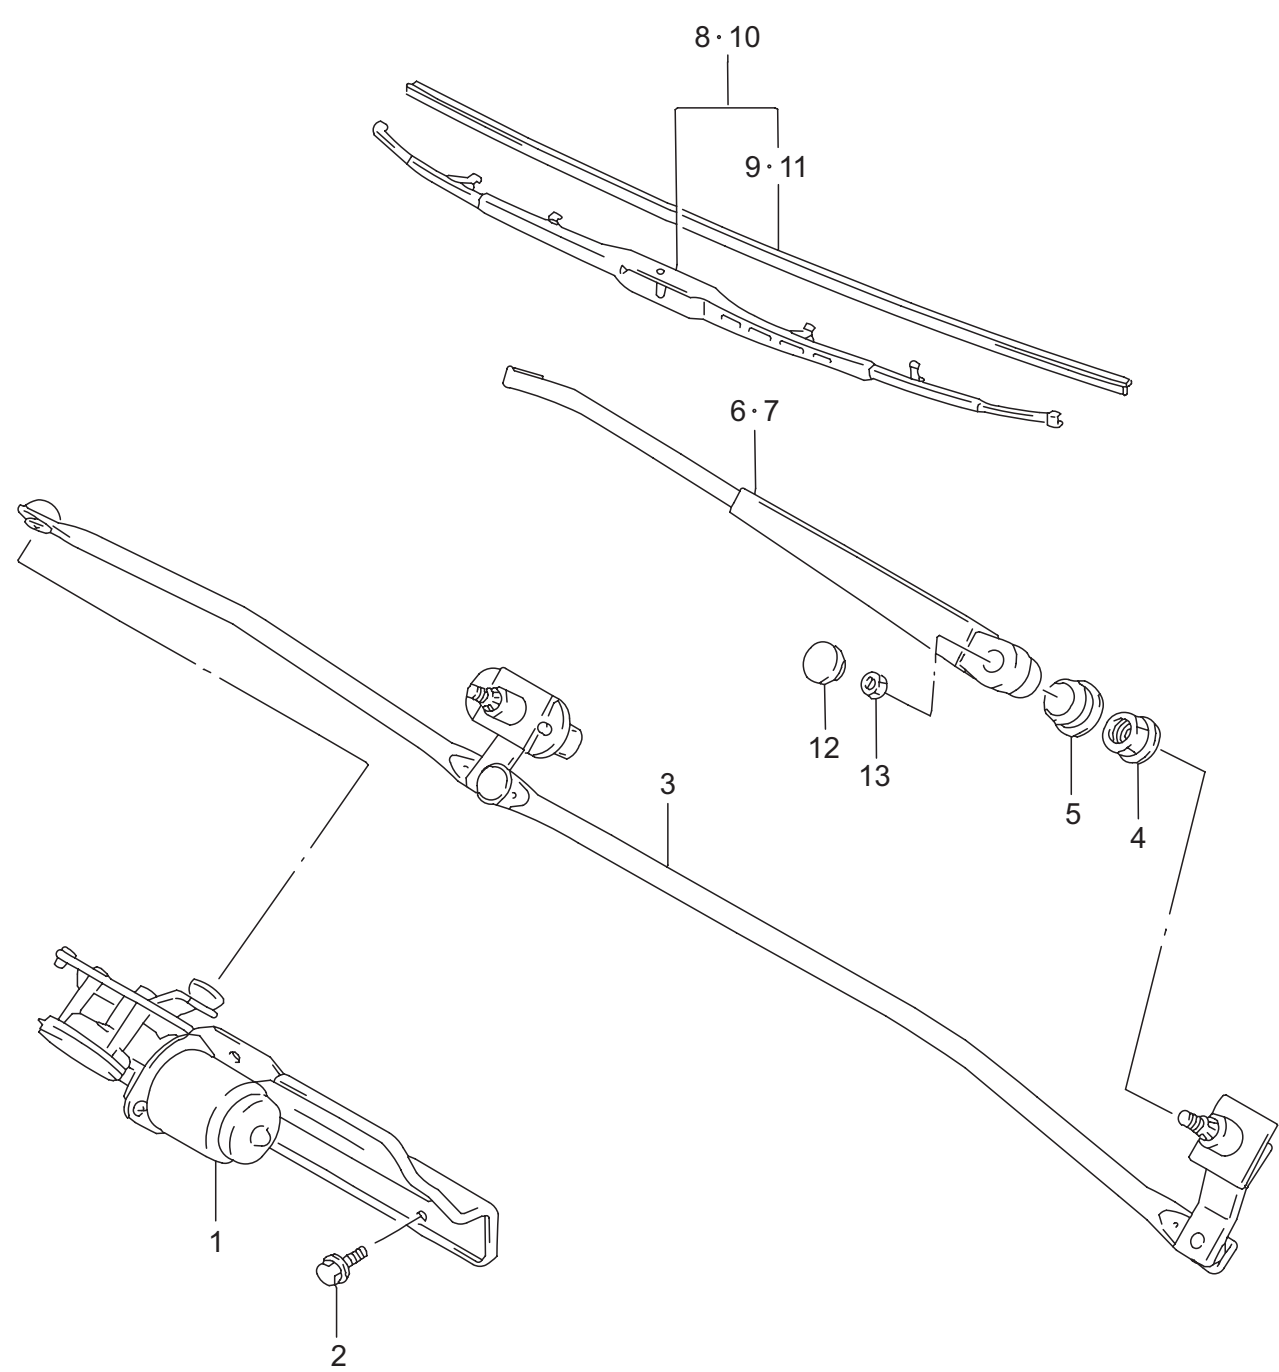


FIG.Nº.52 - FRONT WINDOW WIPER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	38101-75F10	MOTOR & BRACKET ASSY, WIPER	1	
2	09115-06001	BOLT (6X16)	4	
3	38102-75F10	LINK ASSY, WIPER	1	
4	09159-18010	NUT	2	
5	38274-74F00	CAP, WIPER PIVOT	2	
6	38310-75F10	ARM ASSY, WIPER LH	1	
7	38330-75F10	ARM ASSY, WIPER RH	1	
8	38340-75F10	BLADE ASSY, WIPER LH	1	
9	38346-75F00	.BLADE, LH	1	
10	38340-75F30	BLADE ASSY, WIPER RH	1	
11	38346-75F10	.BLADE, RH	1	
12	38344-50E00	CAP, WIPER ARM	2	
13	08310-00083	NUT	2	

SR412 E09_053
WINDOW WASHER

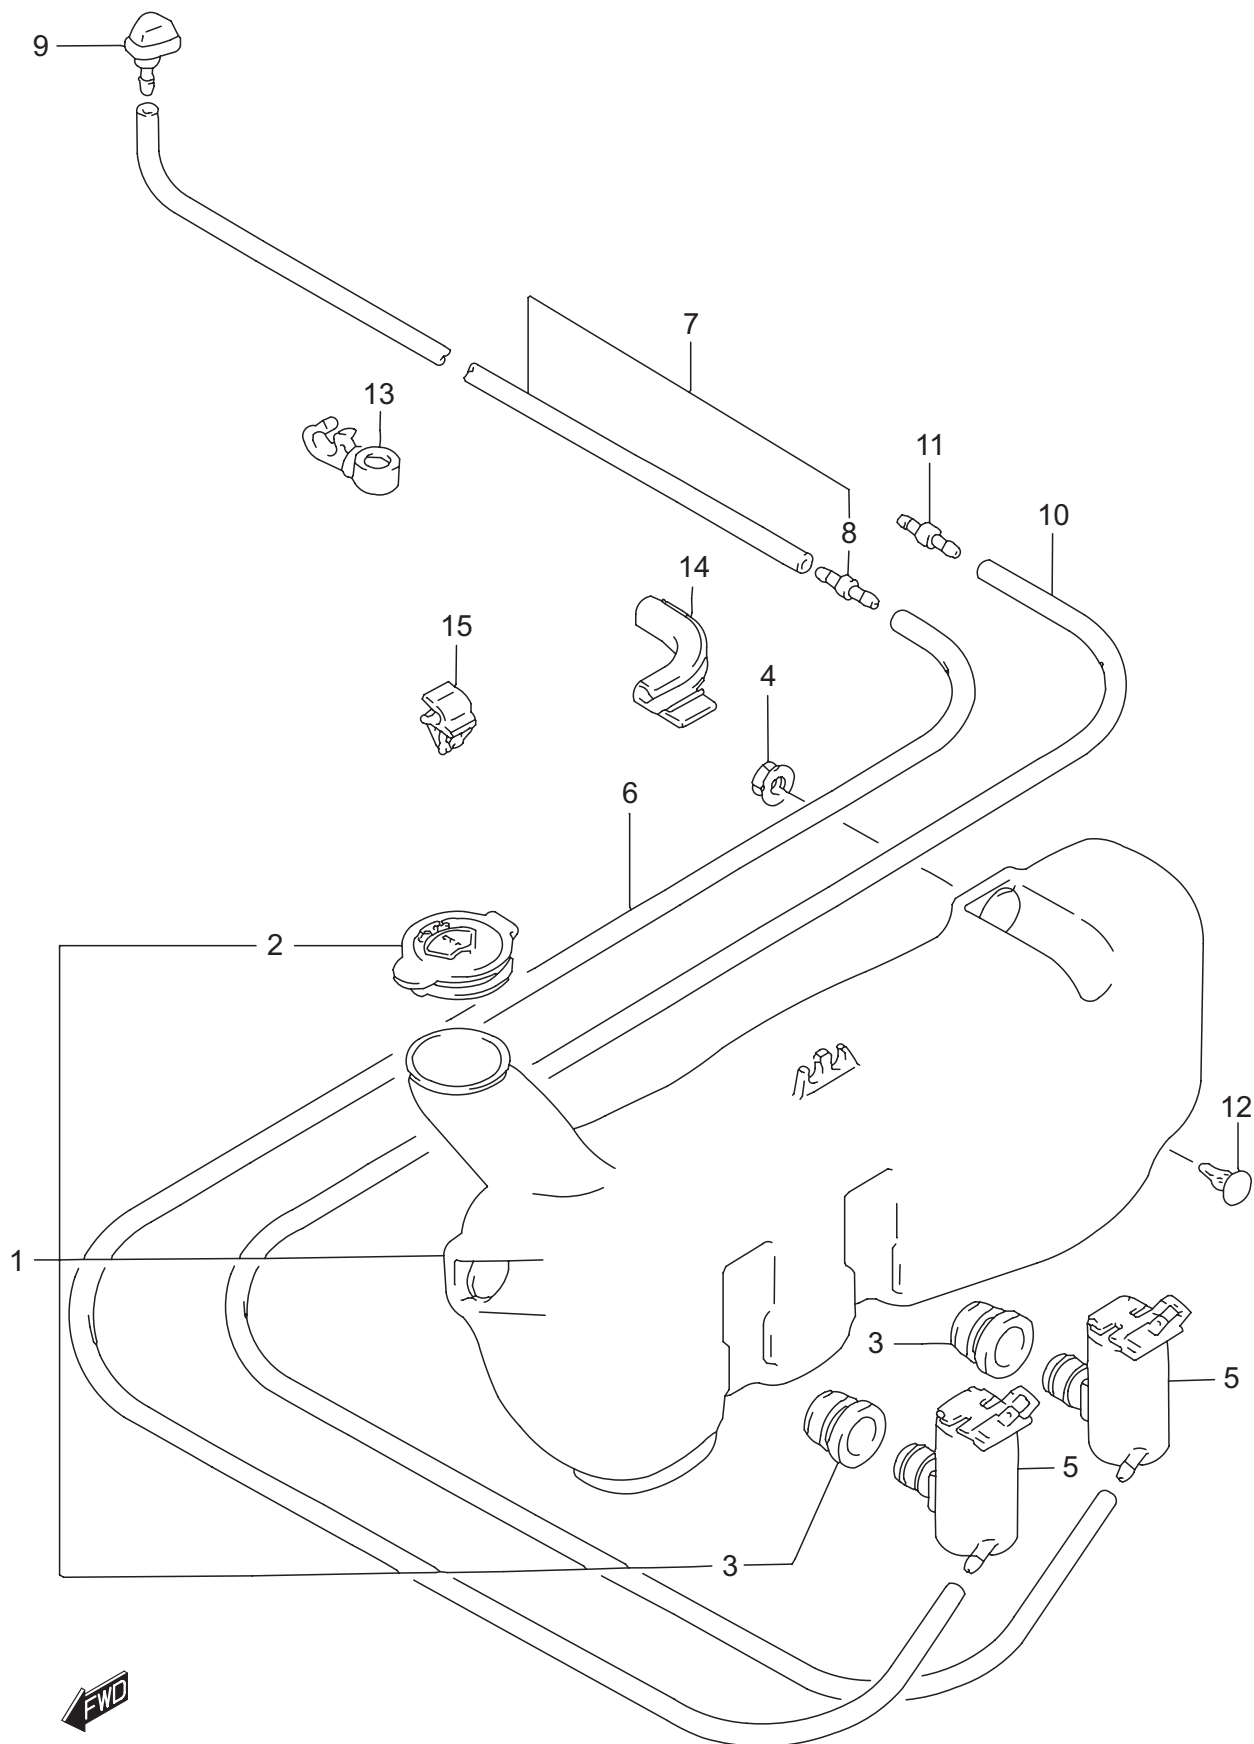


FIG.Nº.53 - WINDOW WASHER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	38450-74F00	TANK, WASHER	1	
2	38452-60B00	.CAP, WASHER TANK	1	
3	38453-75000	.GROMMET	2	
4	08316-10063	NUT	2	
5	38410-66113	PUMP ASSY, WASHER	2	
6	38491-61A00	HOSE, WASHER (L:1300→670)	1	
7	38832-75F00	HOSE ASSY, FRONT WASHER	1	
8	38833-79501	.VALVE, WASHER	1	
9	38480-70B00	NOZZLE, WASHER	1	
10	38491-61A00	HOSE, WASHER (L:1300→630)	1	
11	38496-56B00	CONNECTOR	1	
12	09409-07308-5PK	CLIP (BLACK)	1	
13	34935-60D00	CLAMP	1	
14	34935-75F00	CLAMP, WASHER HOSE	1	
15	09403-07323	CLAMP	1	

FIG.54

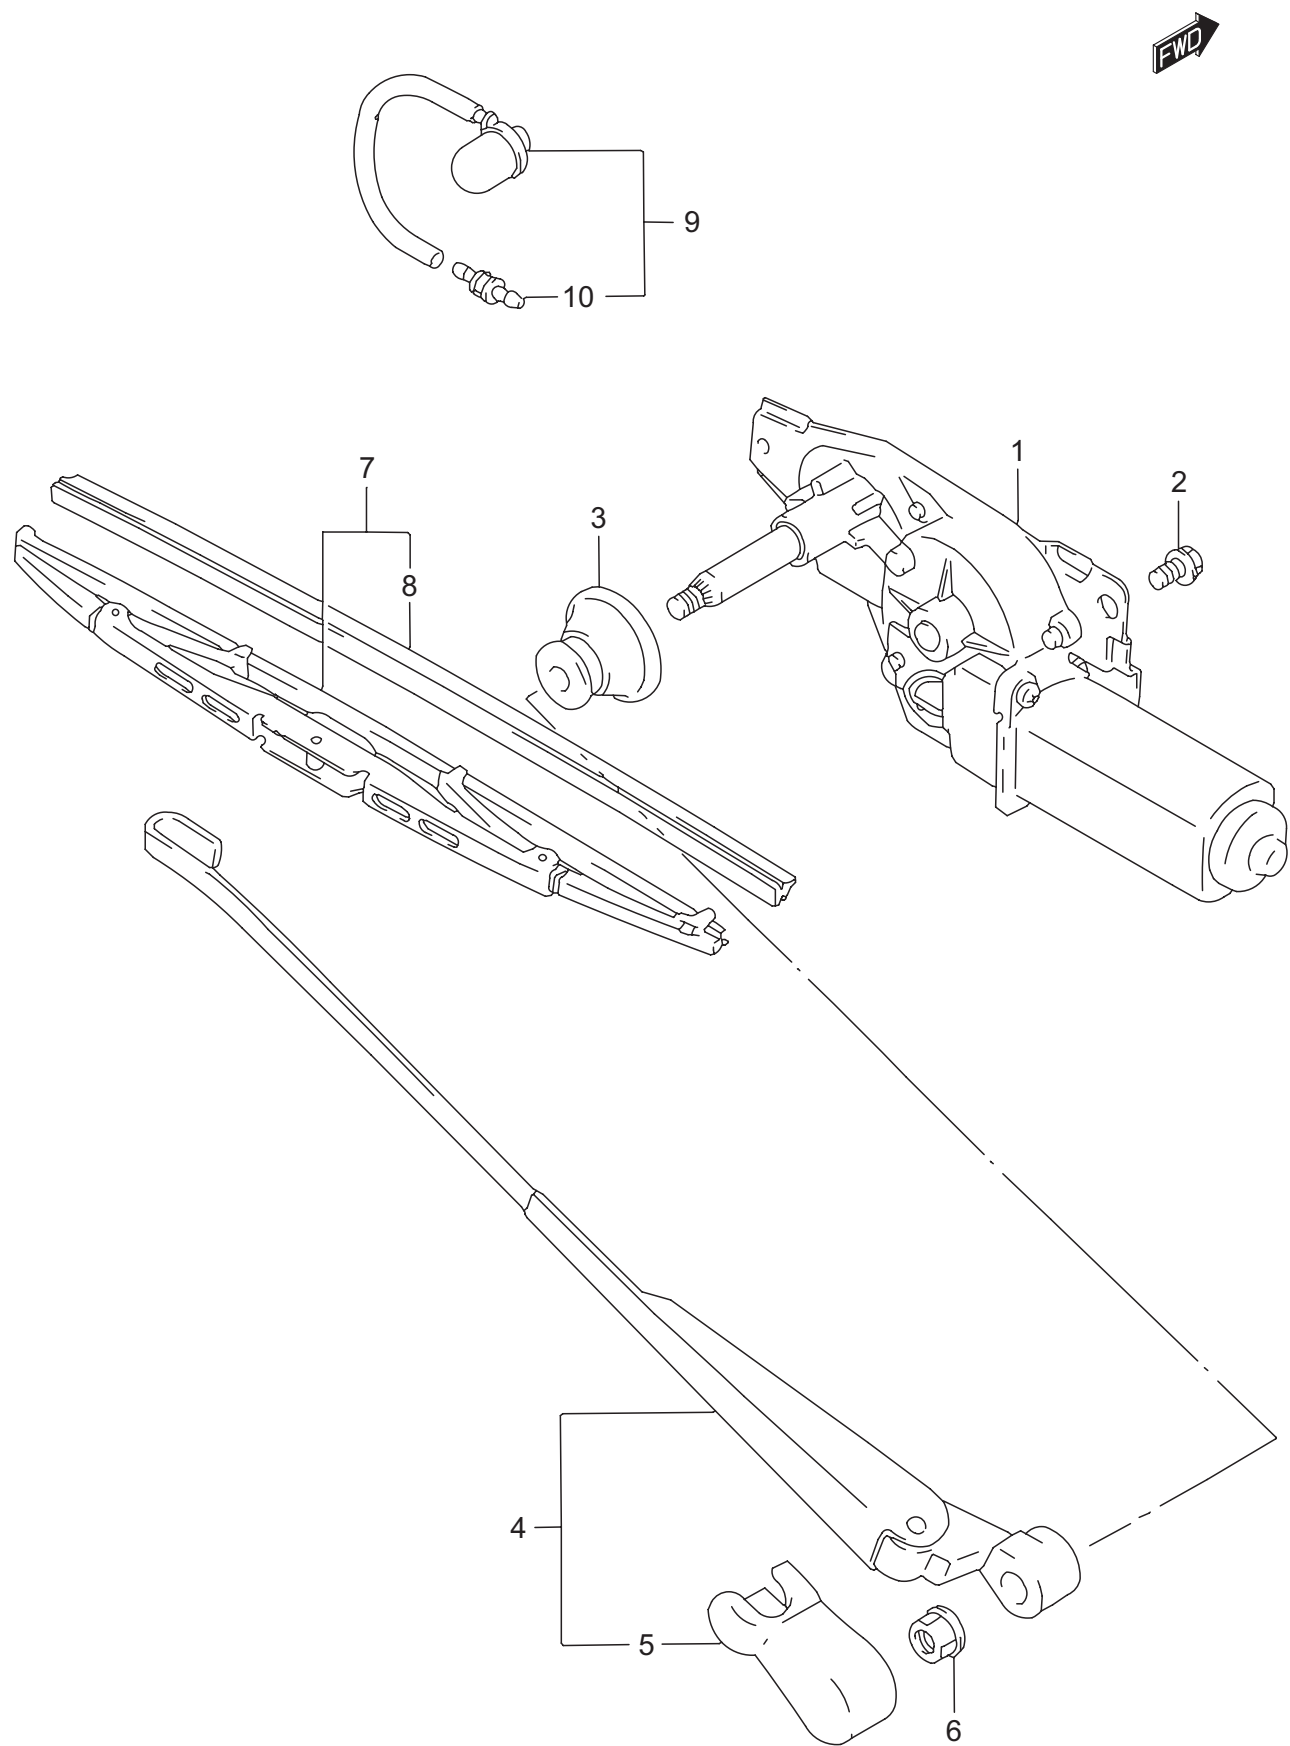


FIG.Nº.54 - REAR WINDOW WIPER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	38810-75F02	WIPER ASSY, REAR WINDOW	1	
2	02162-06123	BOLT	3	
3	38274-81A00	CAP, WIPER PIVOT	1	
4	38821-60F10	ARM ASSY, REAR WIPER	1	
5	38315-81000	.COVER, ARM HEAD	1	
6	08316-10063	NUT	1	
7	38340-81A20	BLADE ASSY, REAR WIPER	1	
8	38346-82C00	.BLADE	1	
9	38840-70B10	NOZZLE ASSY, REAR WASHER	1	
10	38496-61A00	.VALVE, WASHER HOSE	1	

FIG.55

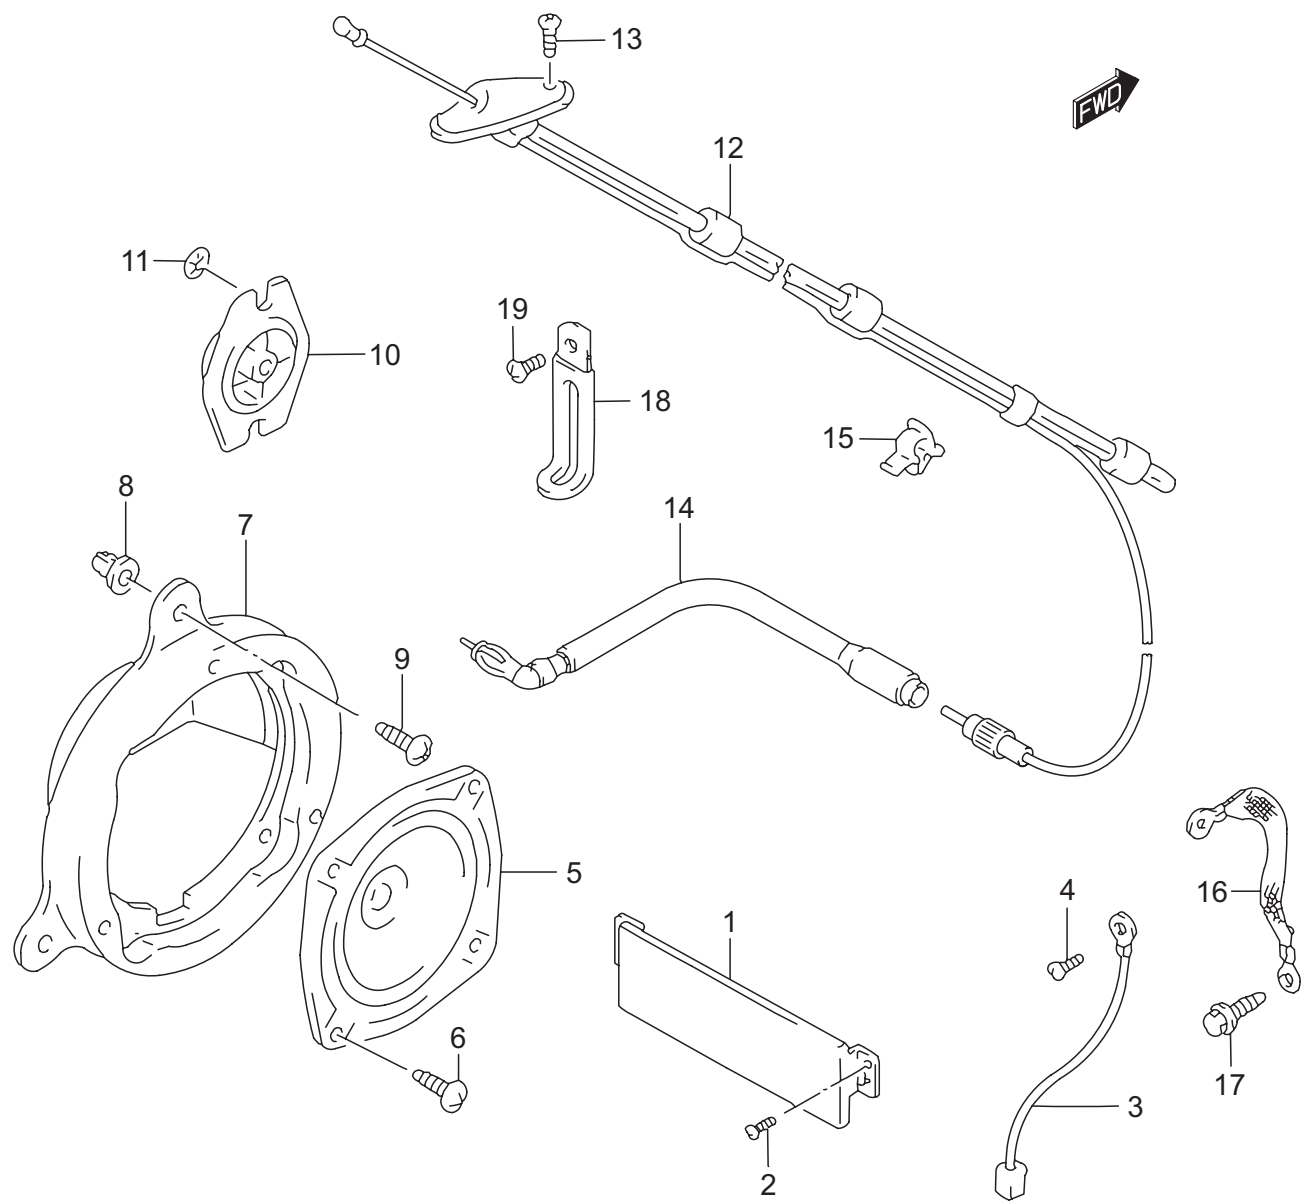


FIG.Nº.55 - RADIO

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	39161-70E01	COVER, RADIO HOLE	1	
2	03541-05163	SCREW	2	
3	39192-70G00	WIRE, TUNER GROUND NO.2	1	
4	03241-06123	SCREW	1	
5	39102-50E10	SPEAKER ASSY	2	
6	03541-05123	SCREW	8	
7	39350-75F00	BRACKET, SPEAKER	2	
8	09148-06007	NUT	6	
9	03542-06203	SCREW	6	
10	39102-74F21	SPEAKER ASSY, TWEETER	2	
11	09148-05012	NUT	4	
12	39250-70B30	ANTENNA ASSY	1	
13	39251-60D01	SCREW	2	
14	39271-75F00	FEEDER, ANTENNA	1	
15	09403-06412	CLAMP	2	
16	39312-82012	WIRE, NOISE SUPPRESSOR	1	
17	09115-06001	BOLT (6X16)	1	
18	09404-06434	CLAMP (L:95)	2	
19	03541-05123	SCREW	2	

FIG.56

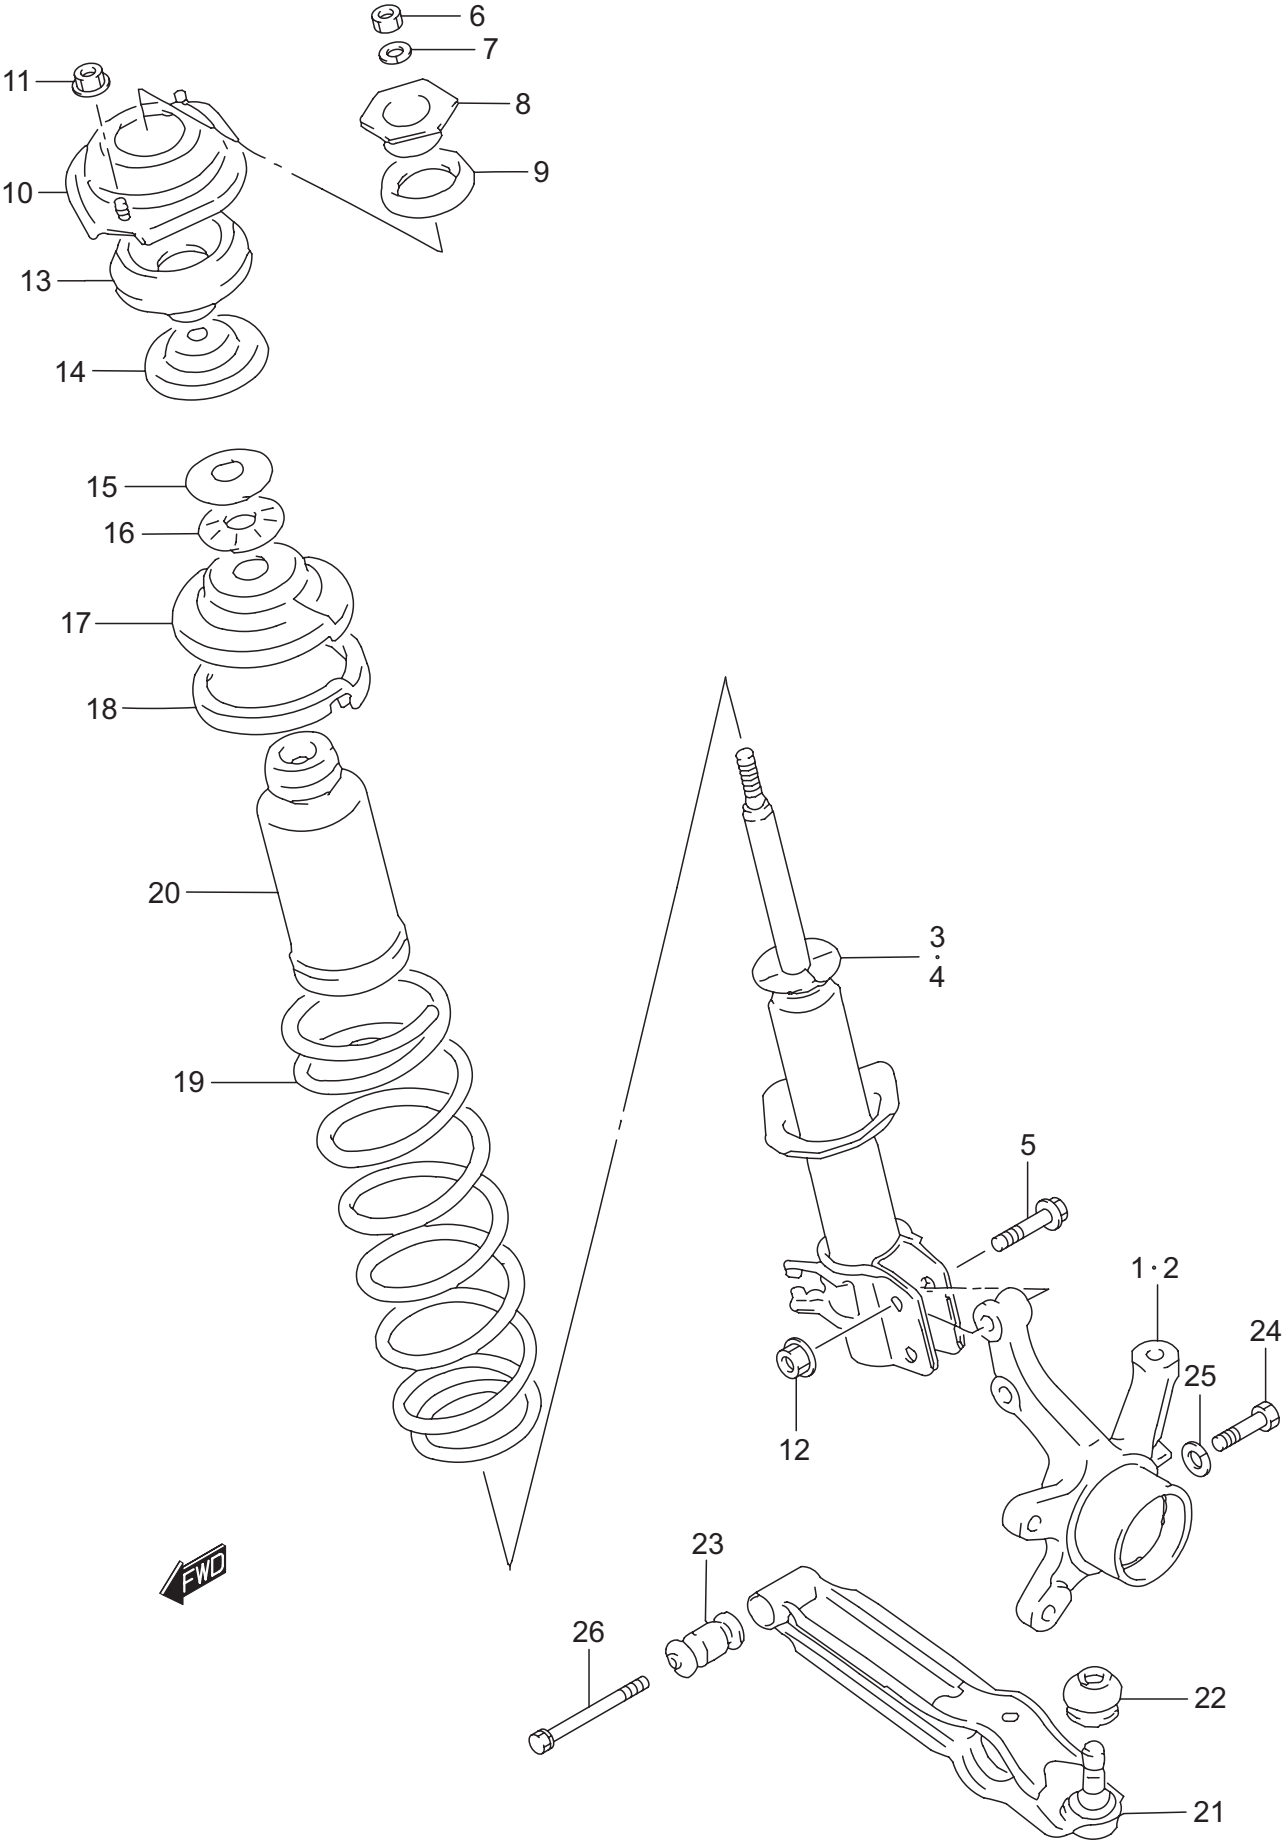


FIG.Nº.56 - FRONT SUSPENSION

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	45111-75FV1	KNUCKLE, STEERING RH	1	
2	45151-75FV1	KNUCKLE, STEERING LH	1	
3	41601-75F50	STRUT ASSY, FR SUSPENSION RH	1	←41601-75F10
4	41602-75F50	STRUT ASSY, FR SUSPENSION LH	1	←41602-75F10
5	09103-12051	BOLT (12X50)	4	
6	09140-12045	NUT	2	
7	09162-12006	LOCK WASHER	2	
8	41714-82000	SUPPORT, STRUT INNER	2	
9	41713-82000	STOPPER, STRUT REBOUND	2	←41713-84000
10	41710-82000	SUPPORT, STRUT	2	
11	08316-10083	NUT	4	
12	08316-10123	NUT	4	
13	41712-82000	MOUNT, STRUT	2	←41712-84000
14	41720-82000	SEAT, STRUT MOUNT	2	
15	41731-50E00	SEAT, STRUT BEARING	2	
16	41741-50E00	BEARING, STRUT	2	
17	41230-50E00	SEAT, COIL SPRING UPPER	2	
18	41211-70B00	SEAT, COIL SPRING	2	
19	41111-75F30	SPRING, FRONT COIL	2	
20	42111-70B11	STOPPER, BUMP	2	
21	45200-75F20	ARM ASSY, SUSPENSION CONTROL	2	
22	45723-70B00	.BOOT SET	2	
23	45261-77A10	.BUSH	2	
24	09100-10184	BOLT (10X40)	2	
25	08321-01103	LOCK WASHER	2	
26	09117-10025	BOLT (10X89.5)	2	

FIG.57

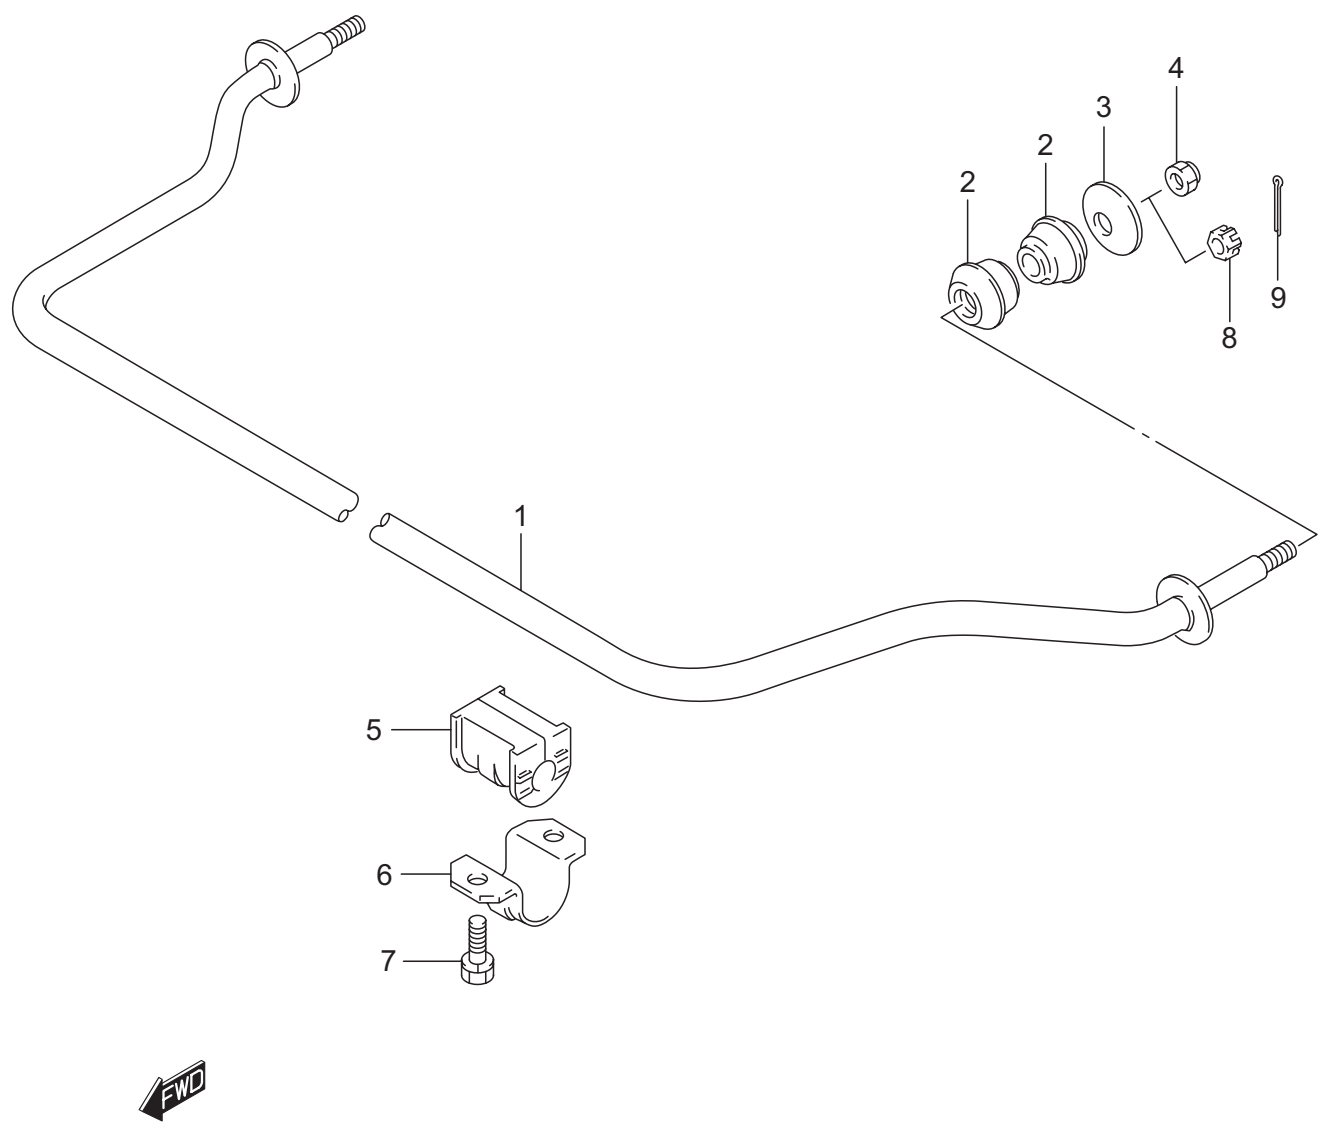


FIG.Nº.57 - FRONT STABILIZER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1-1	42310-75F10	BAR, FRONT STABILIZER	1	→42310-75F11 USED WITH 08314-40123(2PCS) AND 04111-30206(2PCS)
1-2	42310-75F11	BAR, FRONT STABILIZER	1	1999-10~
2	42451-76G00	BUSHING, STABILIZER BAR	4	
3	09164-12017	WASHER (12.1X48X3.2)	2	
4	09159-12052	NUT	2	
5	42431-70B42	MOUNT, STABILIZER BAR	2	
6	42441-70B00	BRACKET, MOUNT	2	
7	01570-10303	BOLT	4	
8	08314-40123	NUT	2	1999-10~
9	04111-30206	COTTER PIN	2	1999-10~

FIG.58

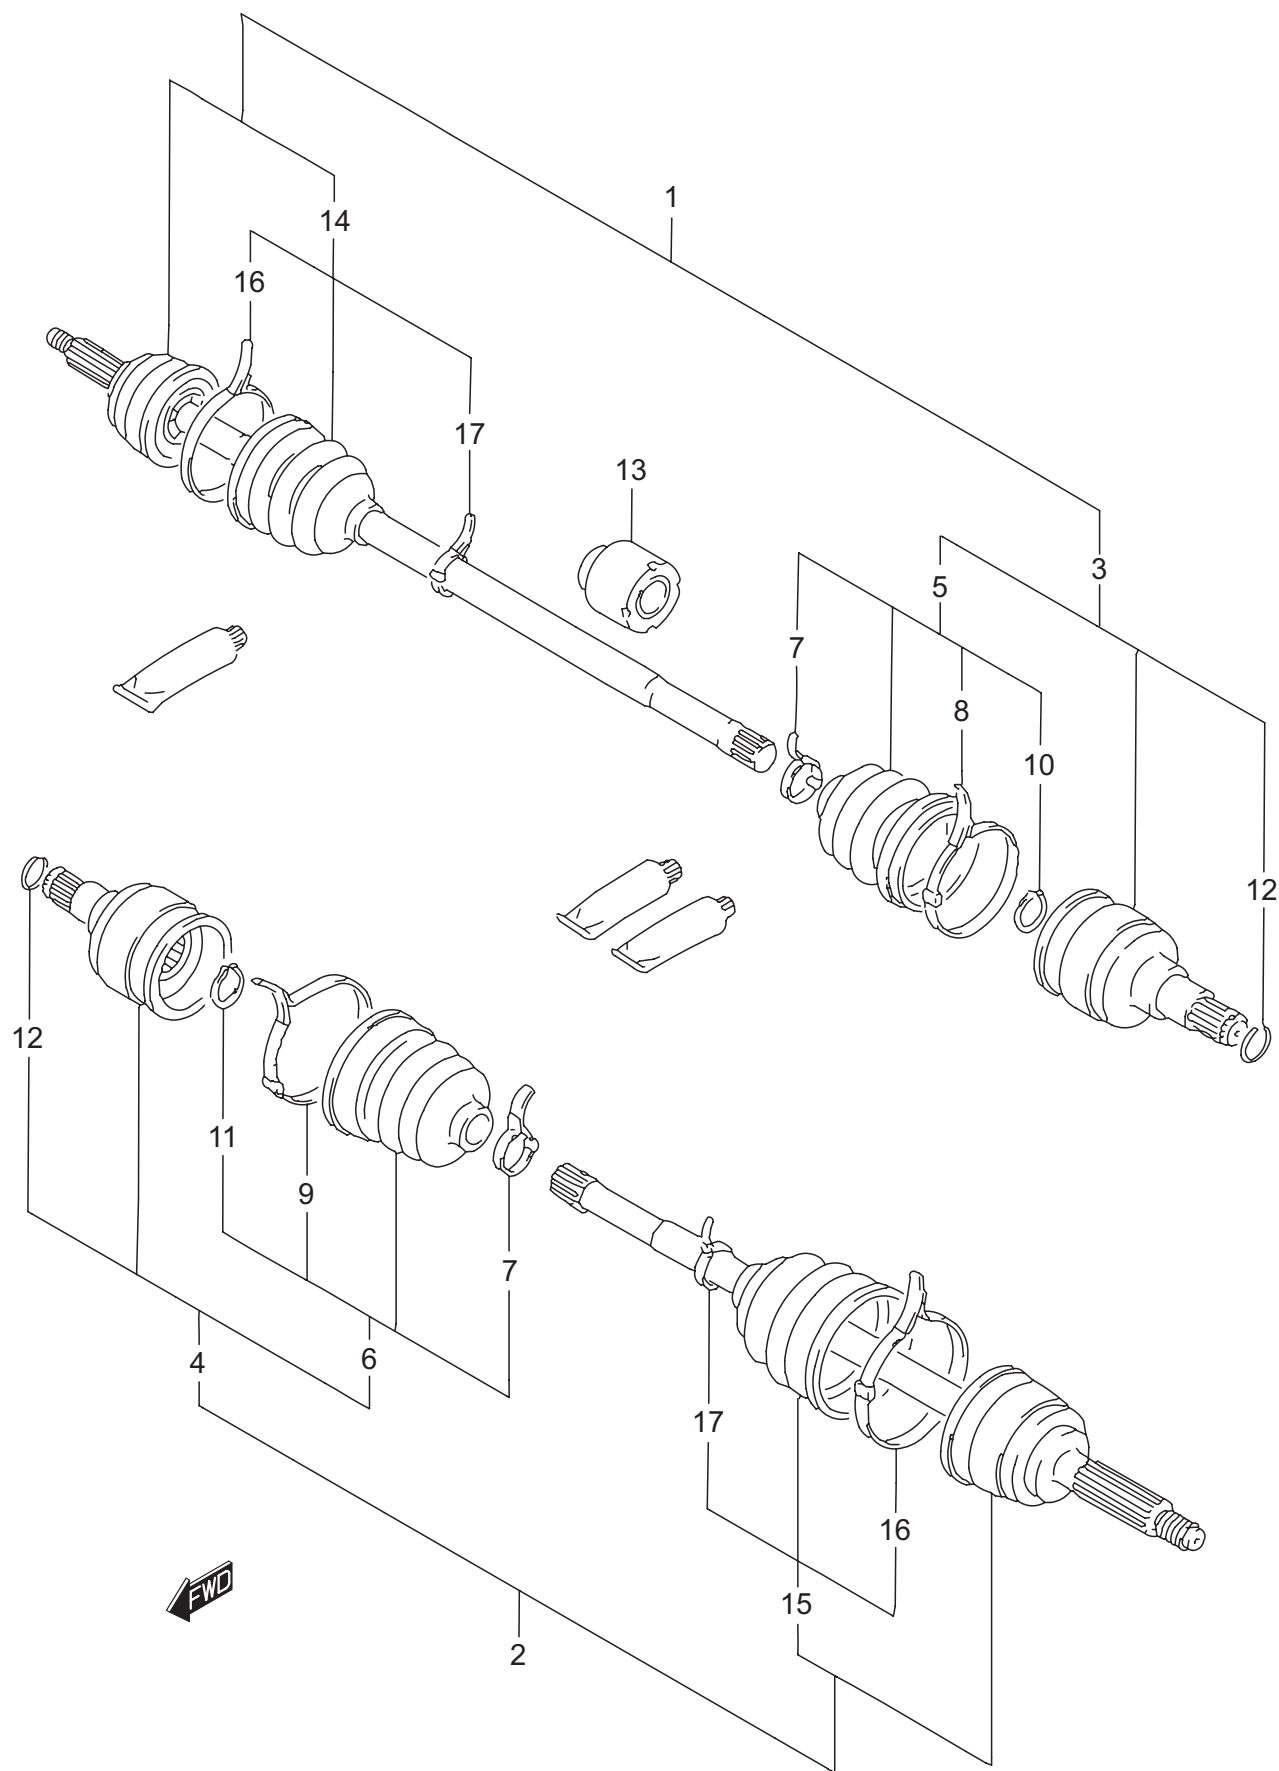


FIG.Nº.58 - FRONT DRIVE SHAFT

REF.Nº. PARTE		DESCRIPCION	CXV		OBSERVACIONES
1-1	44101-75F20	SHAFT ASSY, FRONT DRIVE RH	1	MT	
1-2	44101-75F32	SHAFT ASSY, FRONT DRIVE RH	1	AT	
2-1	44102-75F20	SHAFT ASSY, FRONT DRIVE LH	1	MT	
2-2	44102-75F32	SHAFT ASSY, FRONT DRIVE LH	1	AT	
3-1	44117-75F30	.JOINT ASSY, DIFF SIDE RH	1	MT	
3-2	44117-75F70	.JOINT ASSY, DIFF SIDE RH	1	AT	
4-1	44117-75F40	.JOINT ASSY, DIFF SIDE LH	1	MT	
4-2	44117-75F70	.JOINT ASSY, DIFF SIDE LH	1	AT	
5-1	44119-72F00	.BOOT SET, DIFF SIDE RH	1	MT	
5-2	44119-75F00	.BOOT SET, DIFF SIDE RH	1	AT	
6-1	44119-75F60	.BOOT SET, DIFF SIDE LH	1	MT	
6-2	44119-75F00	.BOOT SET, DIFF SIDE LH	1	AT	
7	44124-86011	...BAND, BOOT	2		
8-1	44121-60B00	...BAND, BOOT RH	1	MT	
8-2	44122-86010	...BAND, BOOT RH	1	AT	
9	44122-86010	...BAND, BOOT LH	1		
10	44111-64B90	...RING, SNAP RH	1		
11-1	44111-78010	...RING, SNAP LH	1	MT	
11-2	44111-64B90	...RING, SNAP LH	1	AT	
12	09381-24001	...RING, SNAP	2		
13-1	44411-75F20	.DAMPER SET, RH	1	MT	
13-2	44411-75F00	.DAMPER SET, RH	1	AT	
14-1	44118-75F40	.BOOT SET, WHEEL SIDE RH	1	MT	
14-2	44118-75F01	.BOOT SET, WHEEL SIDE RH	1	AT	
15-1	44118-75F60	.BOOT SET, WHEEL SIDE LH	1	MT	
15-2	44118-82022	.BOOT SET, WHEEL SIDE LH	1	AT	
16	44122-86010	.BAND, BOOT	2		
17	44124-86011	.BAND, BOOT	2		

FIG.59

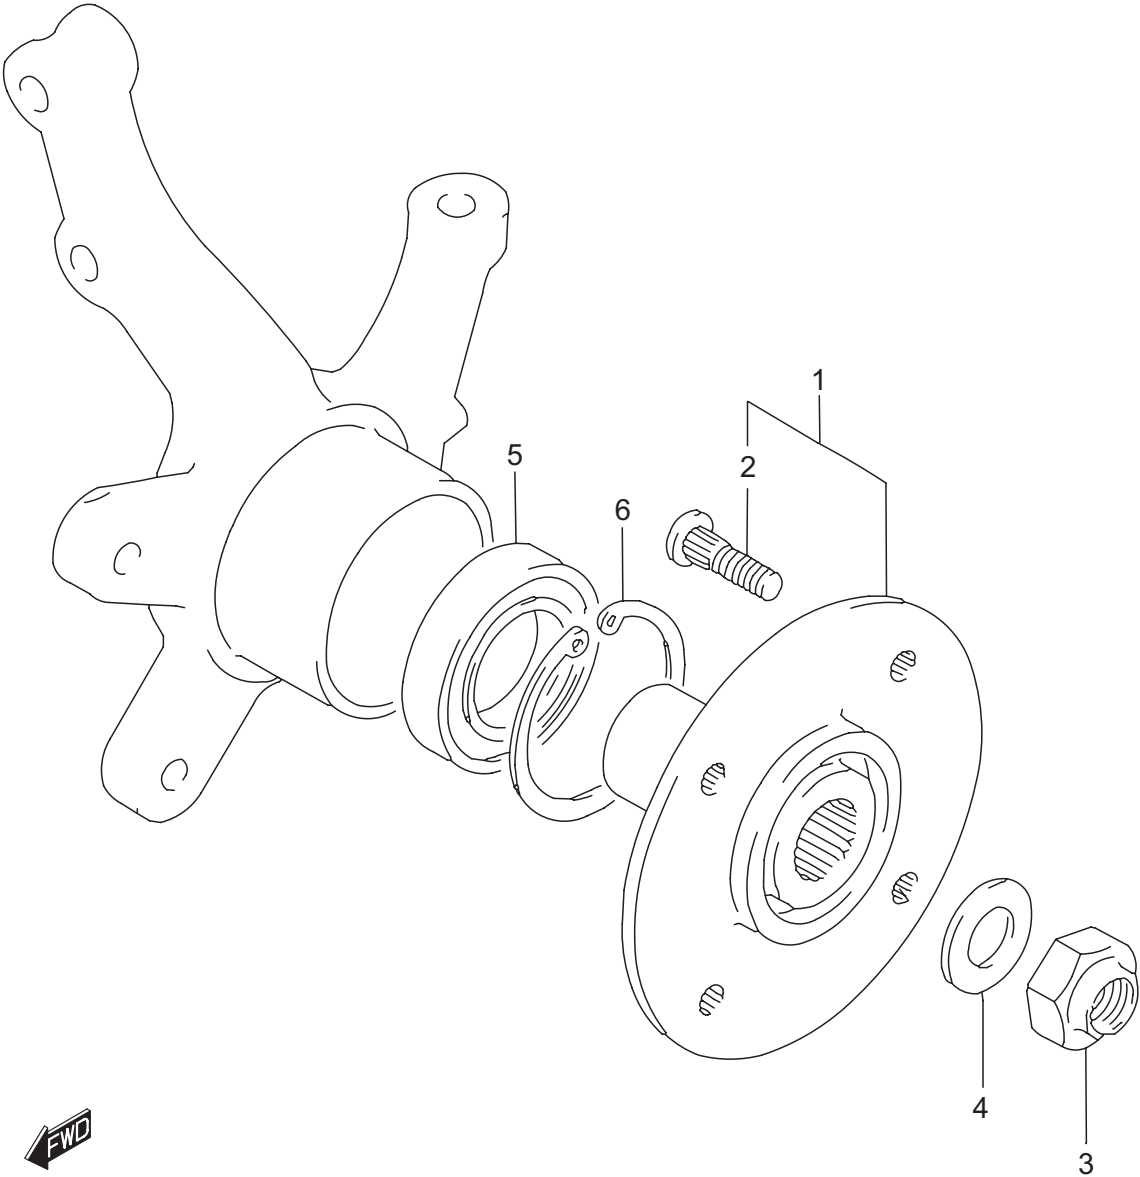


FIG.Nº.59 - FRONT WHEEL HUB

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	43420-51842	HUB SET, FRONT WHEEL	2	
2	09119-12012	.BOLT (12X38)	8	
3	09159-18008	NUT	2	
4	09160-18017	WASHER (18X35X4)	2	
5	43440-84F00	BEARING, FRONT WHEEL	2	←43440-78A20
6	08331-41626	CIRCLIP	2	

FIG.60

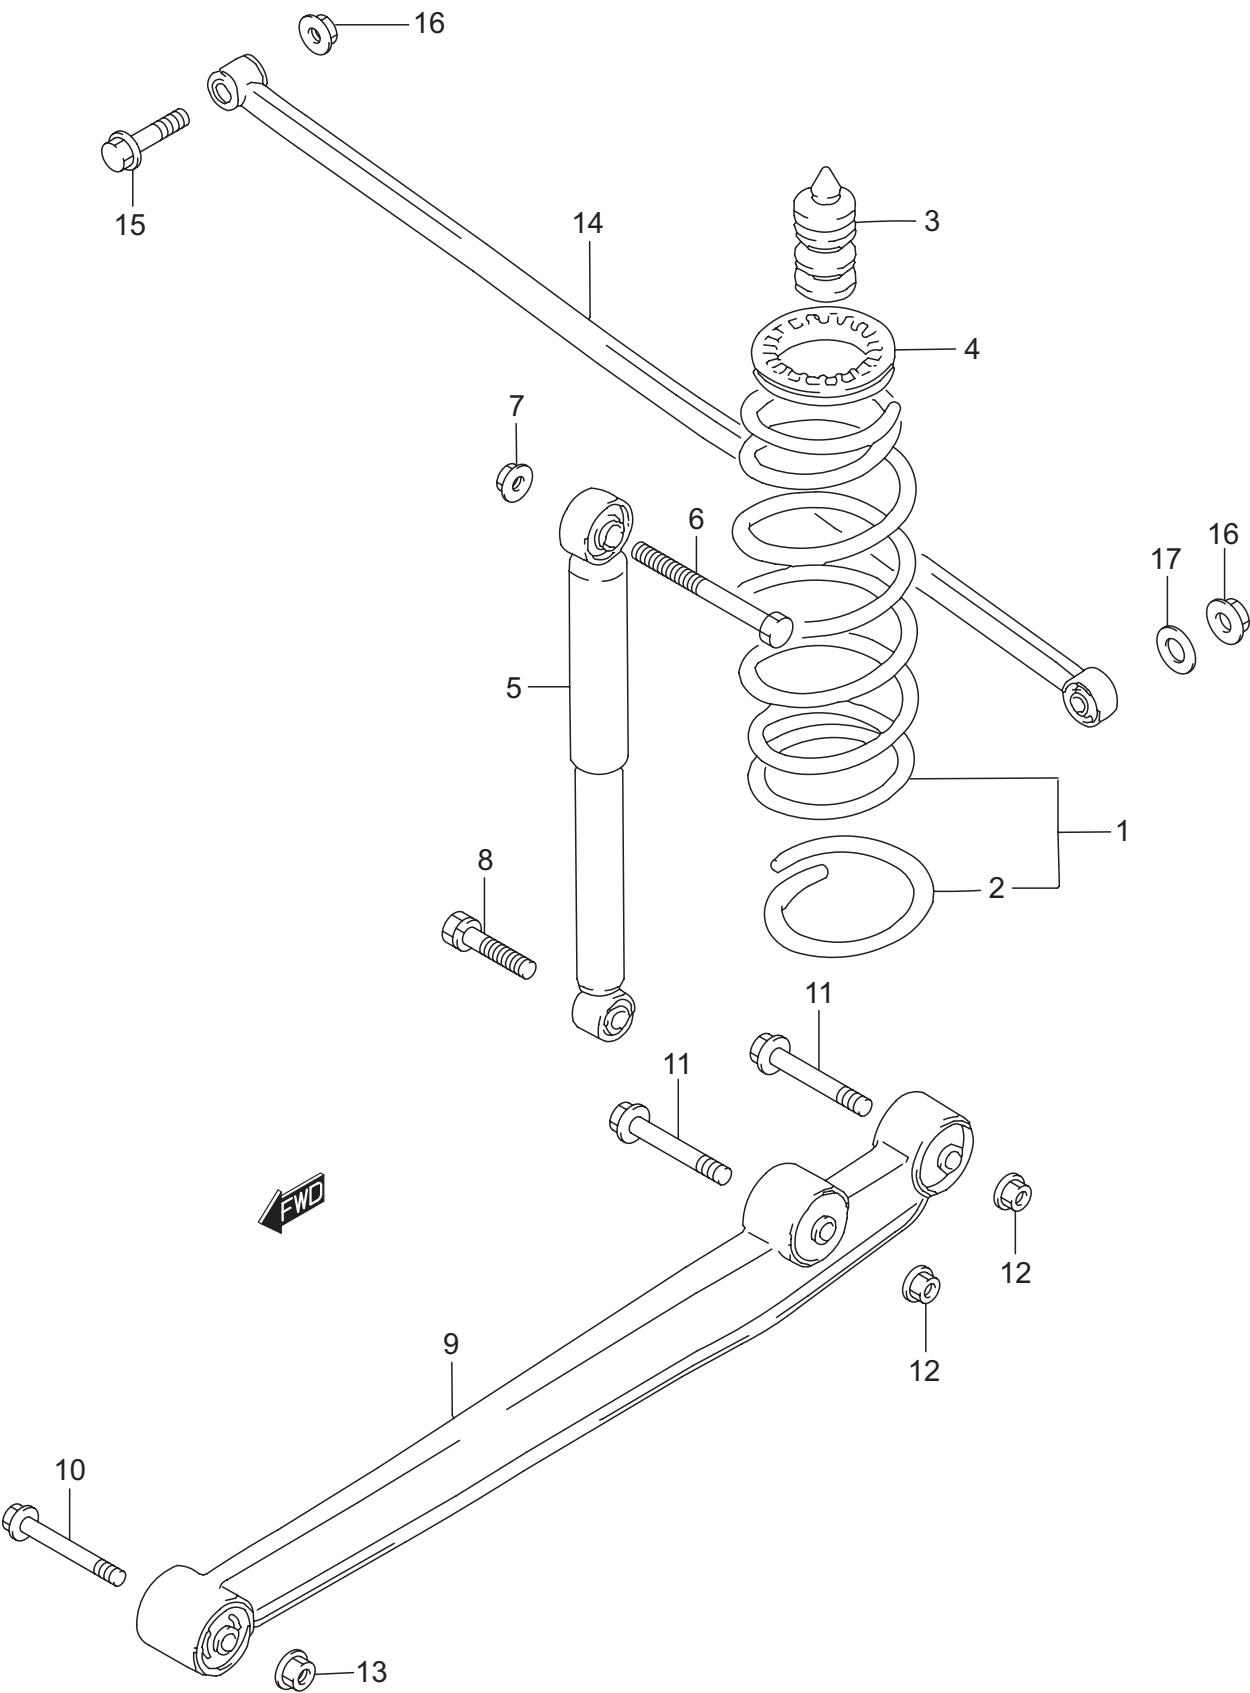


FIG.Nº.60 - REAR SUSPENSION

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	41311-76FA1	SPRING, REAR COIL	2	←41311-76F01
2	41343-74F02	.TUBE, REAR COIL SPRING	2	
3	42251-75F20	STOPPER, REAR BUMP	2	←42251-75F00
4	41341-50A00	SEAT, REAR SPRING UPPER	2	
5	41800-75F11	ABSORBER ASSY, REAR SHOCK	2	
6	41981-76G01	BOLT, UPPER	2	
7	08316-10123	NUT	2	
8	09117-12014	BOLT (12X57)	2	←09117-12004
9	46200-52E00	ARM ASSY, REAR TRAILING	2	
10	09103-12044	BOLT (12X87)	2	
11	09103-12064	BOLT (12X80)	4	
12	09159-12025	NUT	4	
13	08316-10123	NUT	2	
14	46300-75F00	ROD ASSY, LATERAL	1	
15	09103-12051	BOLT (12X50)	1	
16	08316-10123	NUT	2	
17	09164-12017	WASHER	1	

FIG.61

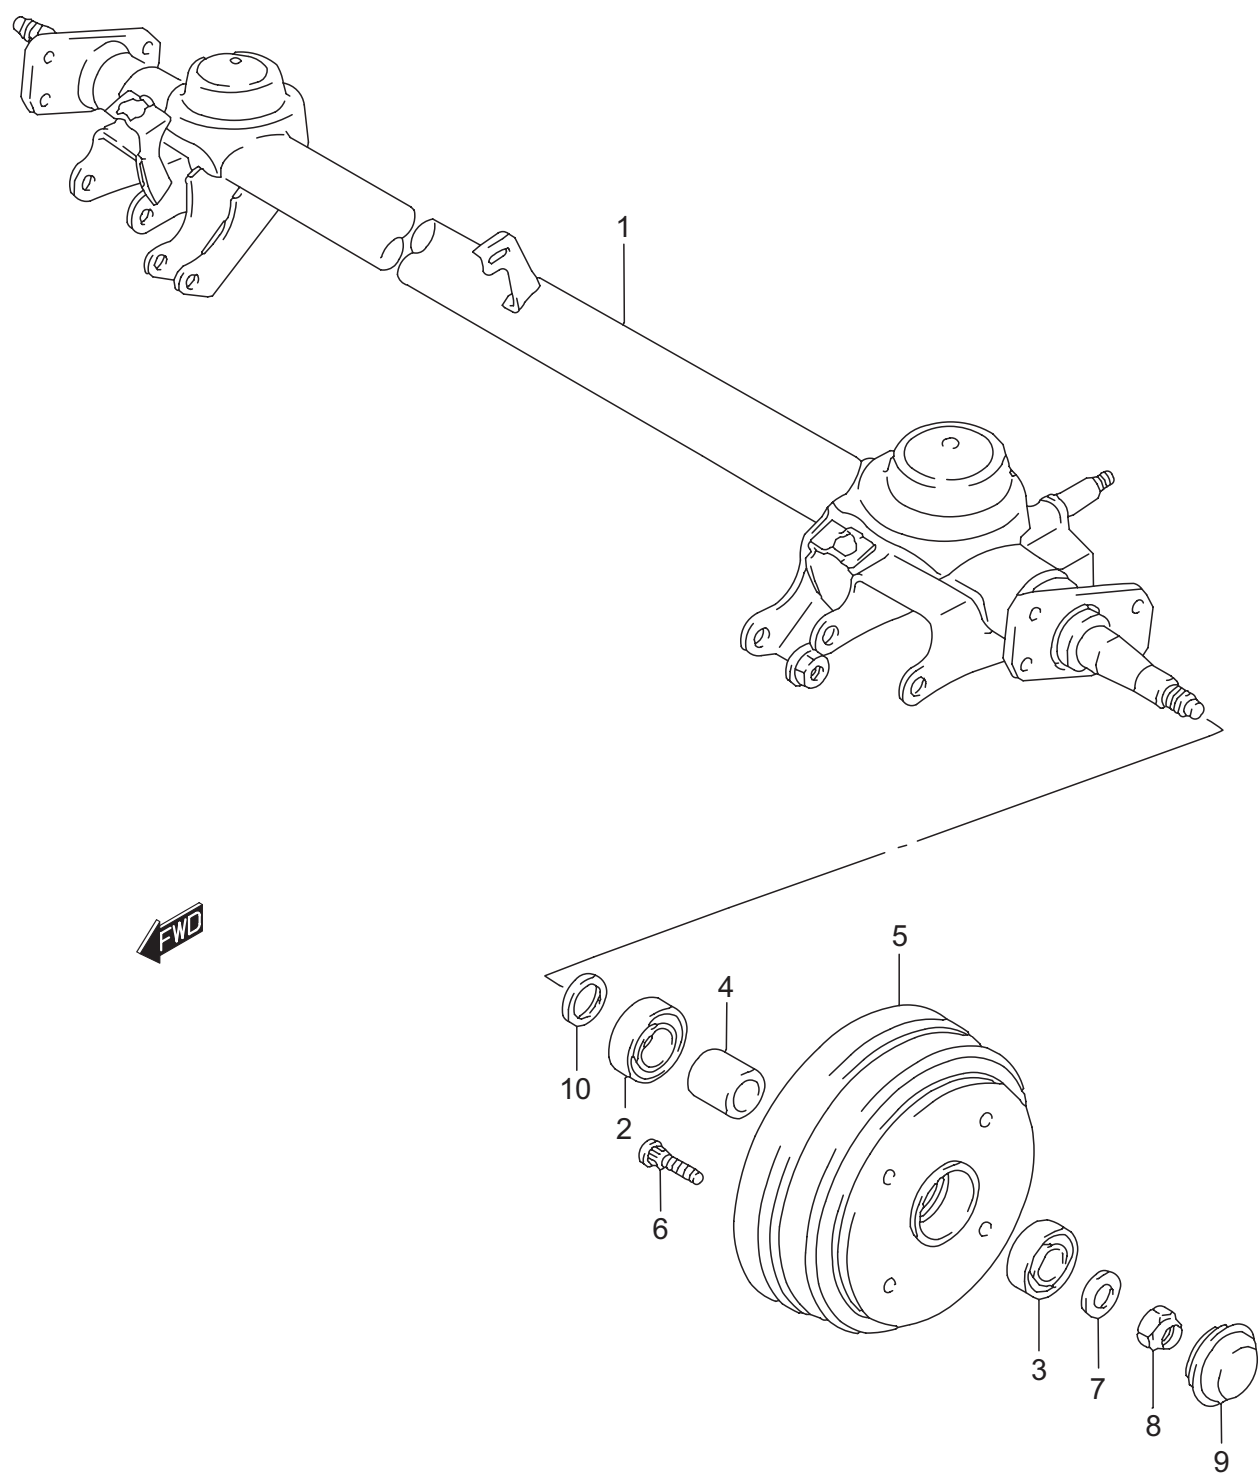


FIG.Nº.61 - REAR AXLE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	46510-75F31	AXLE, REAR	1	
2	09262-25061	BEARING (25X52X15)	2	
3	09262-20069	BEARING (20X47X14)	2	
4	09180-21001	SPACER (20.4X32X30)	2	
5	43511-75F02	DRUM, REAR BRAKE	2	
6	09119-12016	BOLT (12X33)	8	
7	08322-01163	WASHER	2	
8	09159-16011	NUT	2	
9	43241-79001	CAP, SPINDLE	2	
10	43439-75F00	SPACER, BEARING INNER	2	

FIG.62

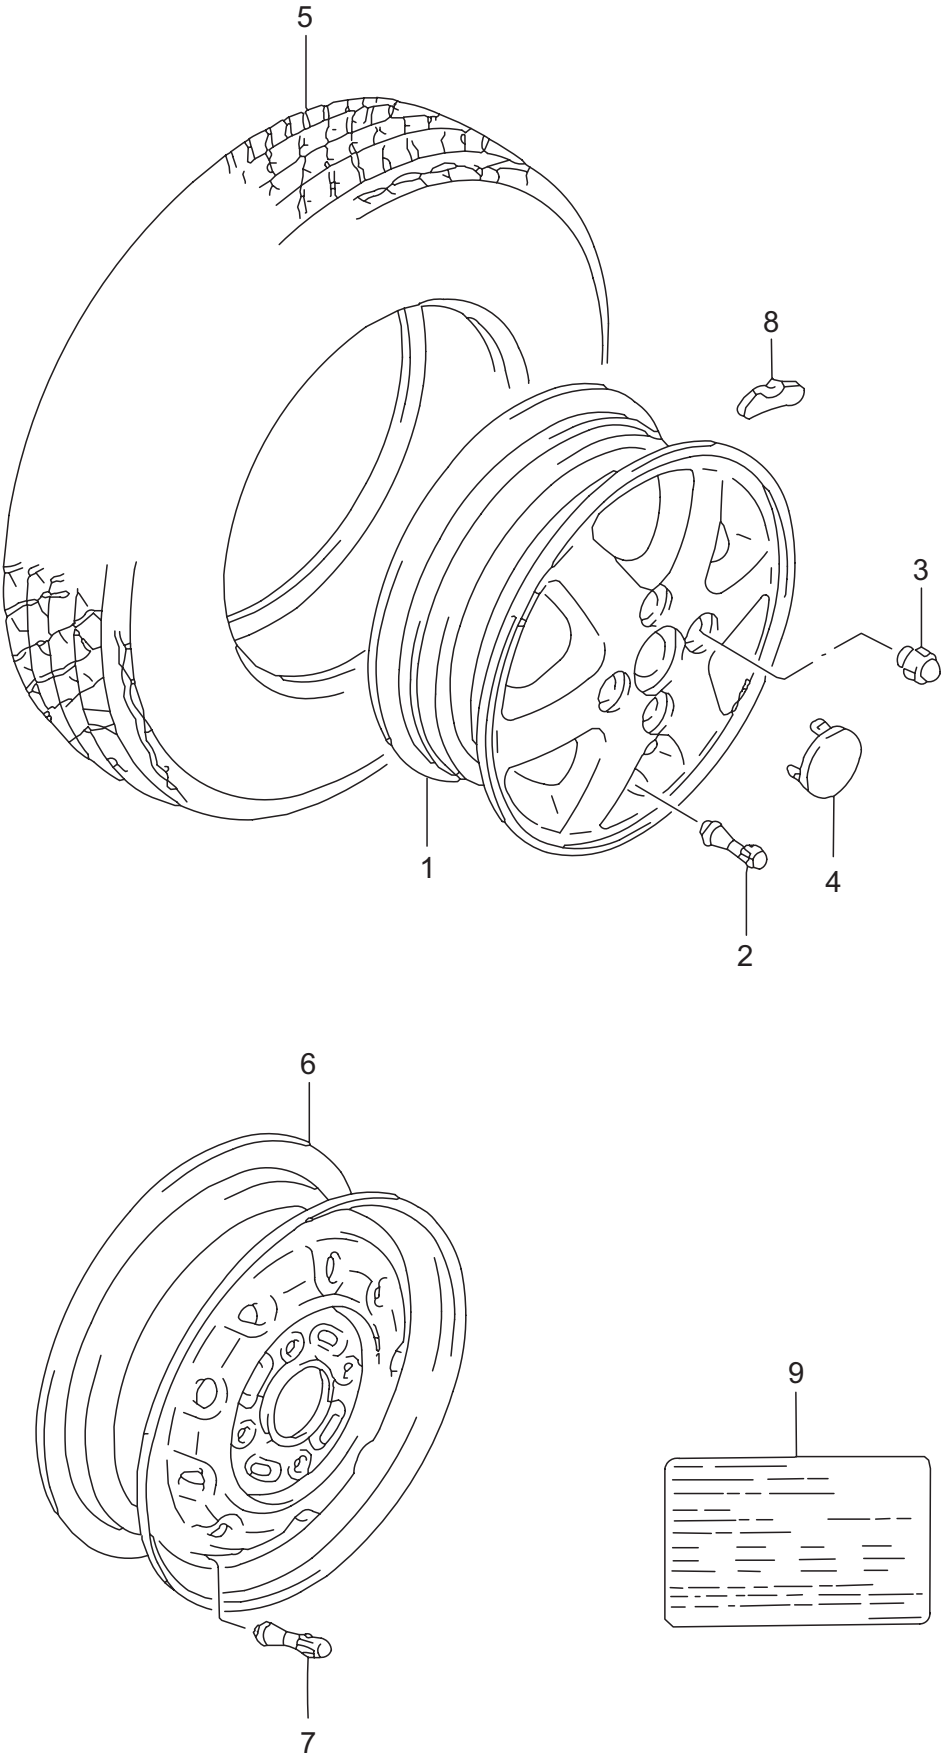


FIG.Nº.62 - ROAD WHEEL / TIRE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	43200-62853-2PN	WHEEL SET (13X4 1/2J)	4	
2	43130-78030	.VALVE, TIRE (TR413)	4	
3	09159-12051	.NUT	16	
4	43250-70G21-34D	.CAP, WHEEL CENTER	4	
5	43110-75F20	TIRE (165/65 R13 77S)	5	
6	43210-60G00-09L	WHEEL, SPARE (BLACK)	1	
7	43130-78030	VALVE, TIRE (TR413)	1	
8-1	43231-86000	BALANCE WEIGHT, WHEEL (5G)	AR	
8-2	43232-60A30	BALANCE WEIGHT, WHEEL (10G)	AR	
8-3	43221-60E20	BALANCE WEIGHT, WHEEL (15G)	AR	
8-4	43234-60A30	BALANCE WEIGHT, WHEEL (20G)	AR	
8-5	43235-86000	BALANCE WEIGHT, WHEEL (25G)	AR	
8-6	43221-60E50	BALANCE WEIGHT, WHEEL (30G)	AR	
8-7	43237-86000	BALANCE WEIGHT, WHEEL (35G)	AR	
8-8	43238-60A30	BALANCE WEIGHT, WHEEL (40G)	AR	
8-9	43239-86000	BALANCE WEIGHT, WHEEL (45G)	AR	
8-10	43221-86000	BALANCE WEIGHT, WHEEL (50G)	AR	
9	79161-75F30	PLACARD, TIRE INFORMATION	1	

FIG.63

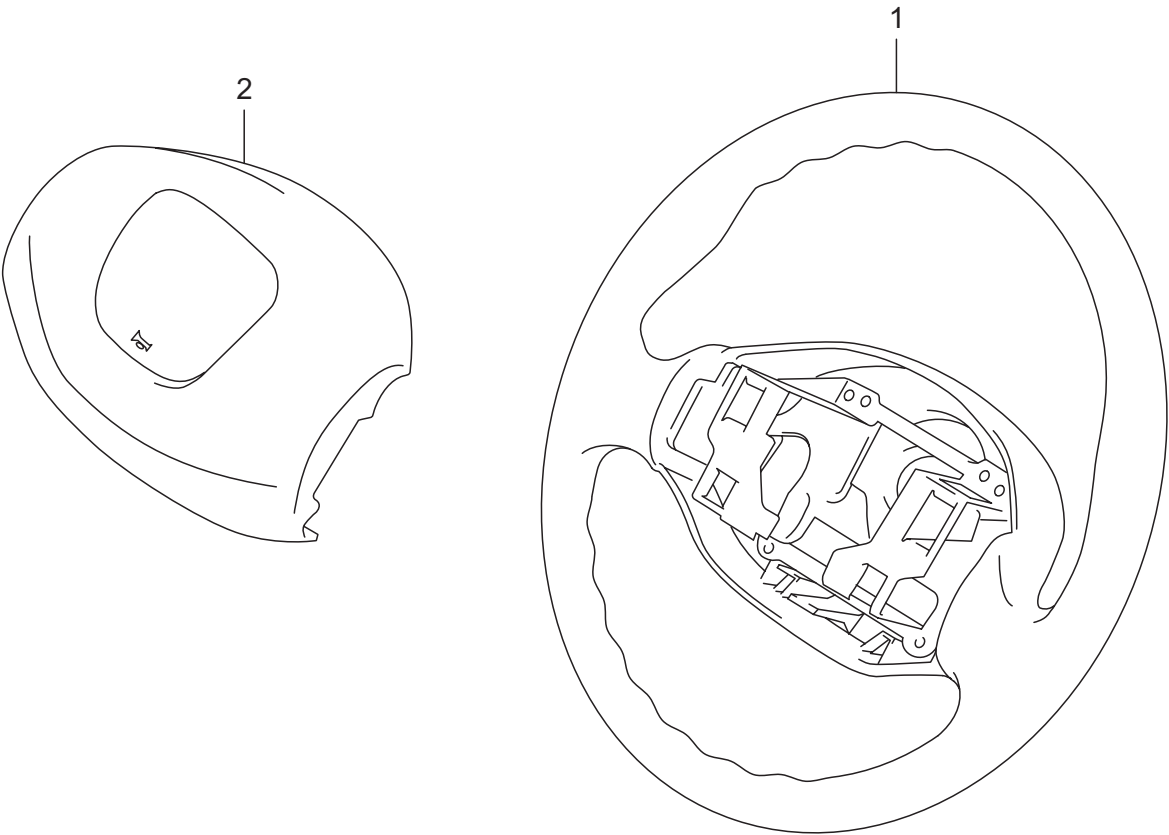


FIG.Nº.63 - STEERING WHEEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	48110-77G01-T01	WHEEL, STEERING (GRAY)	1	
2	48120-77G00-T01	PAD, STEERING WHEEL (GRAY)	1	

FIG.64

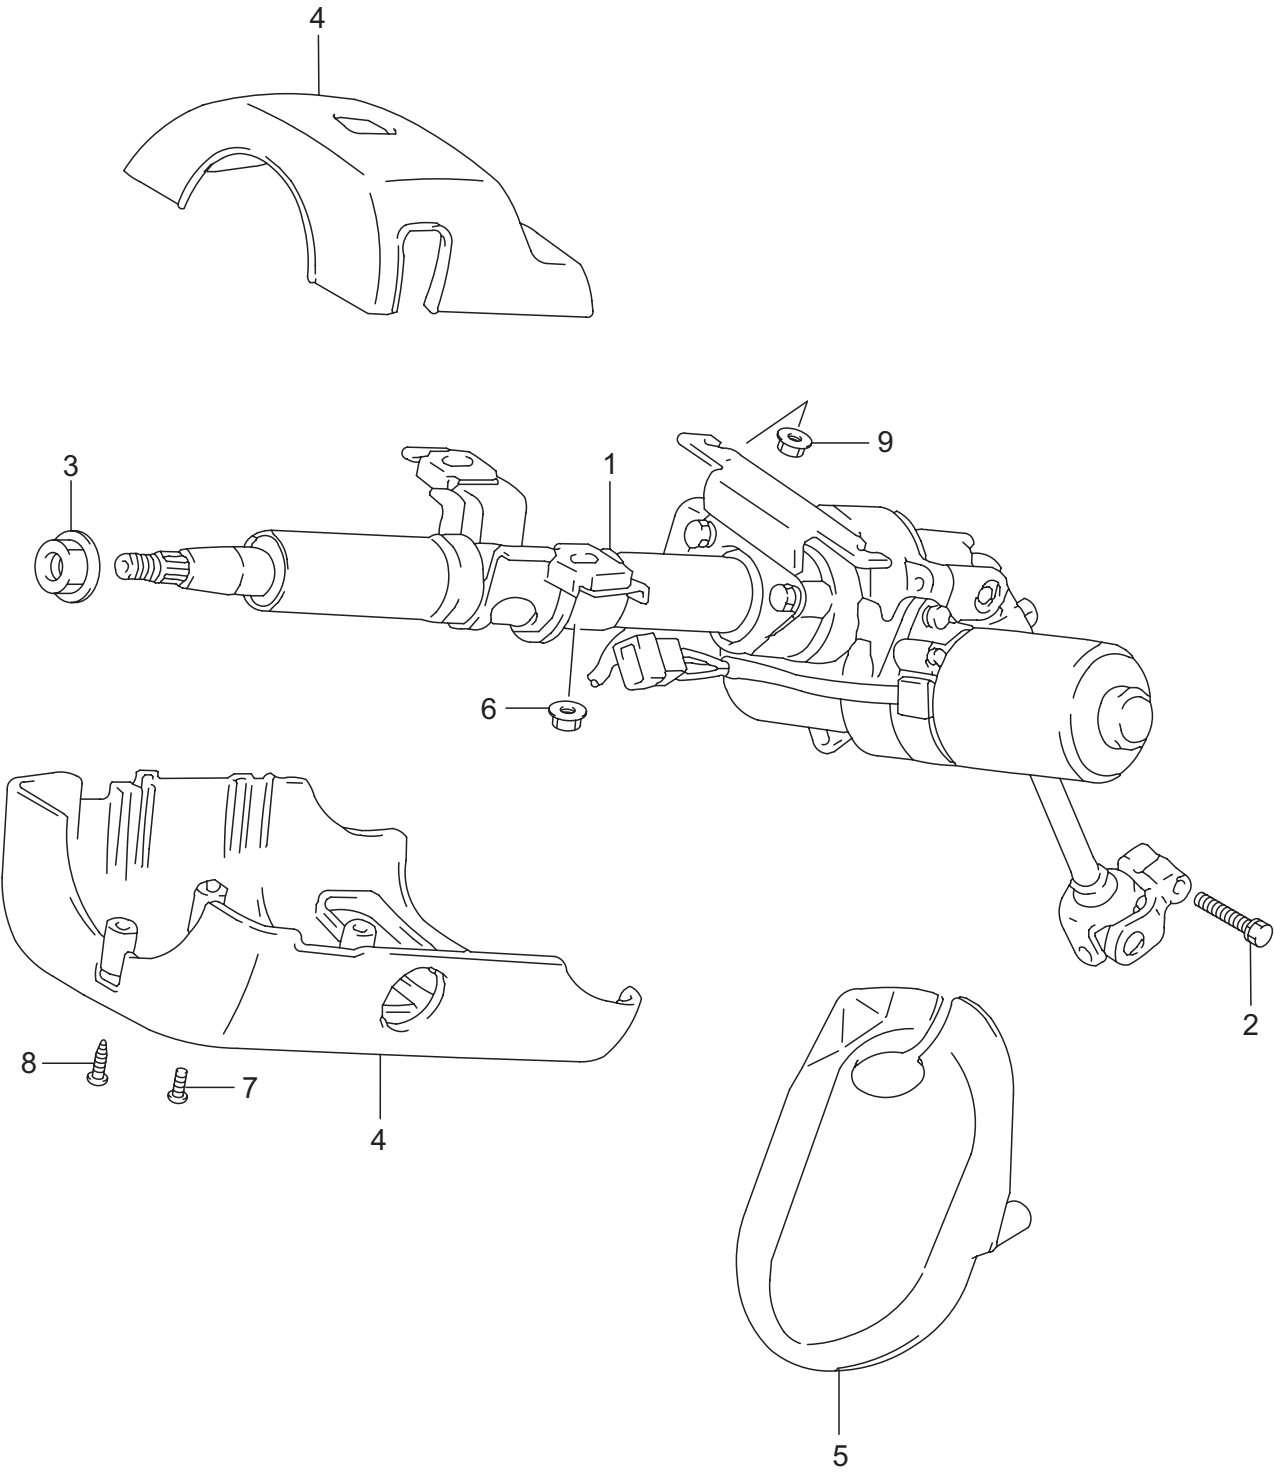


FIG.Nº.64 - STEERING COLUMN

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1-1	48200-75F83	COLUMN ASSY, COLPS STEERING	1	
1-2	48200-75F84	COLUMN ASSY, COLPS STEERING	1	2002-4~
1-3	48200-75F85	COLUMN ASSY, COLPS STEERING	1	2002-10~
2	09117-08053	BOLT (8X30)	1	
3	08316-10123	NUT	1	
4	48400-75F50-T01	COVER ASSY, STEERING COLUMN (GRAY)	1	
5	48481-75F50	COVER, STEERING JOINT	1	
6	09159-08069	NUT	2	
7	09136-05030	SCREW (5X12)	1	
8	03211-05123	SCREW	2	
9	08316-10083	NUT	2	

FIG.65

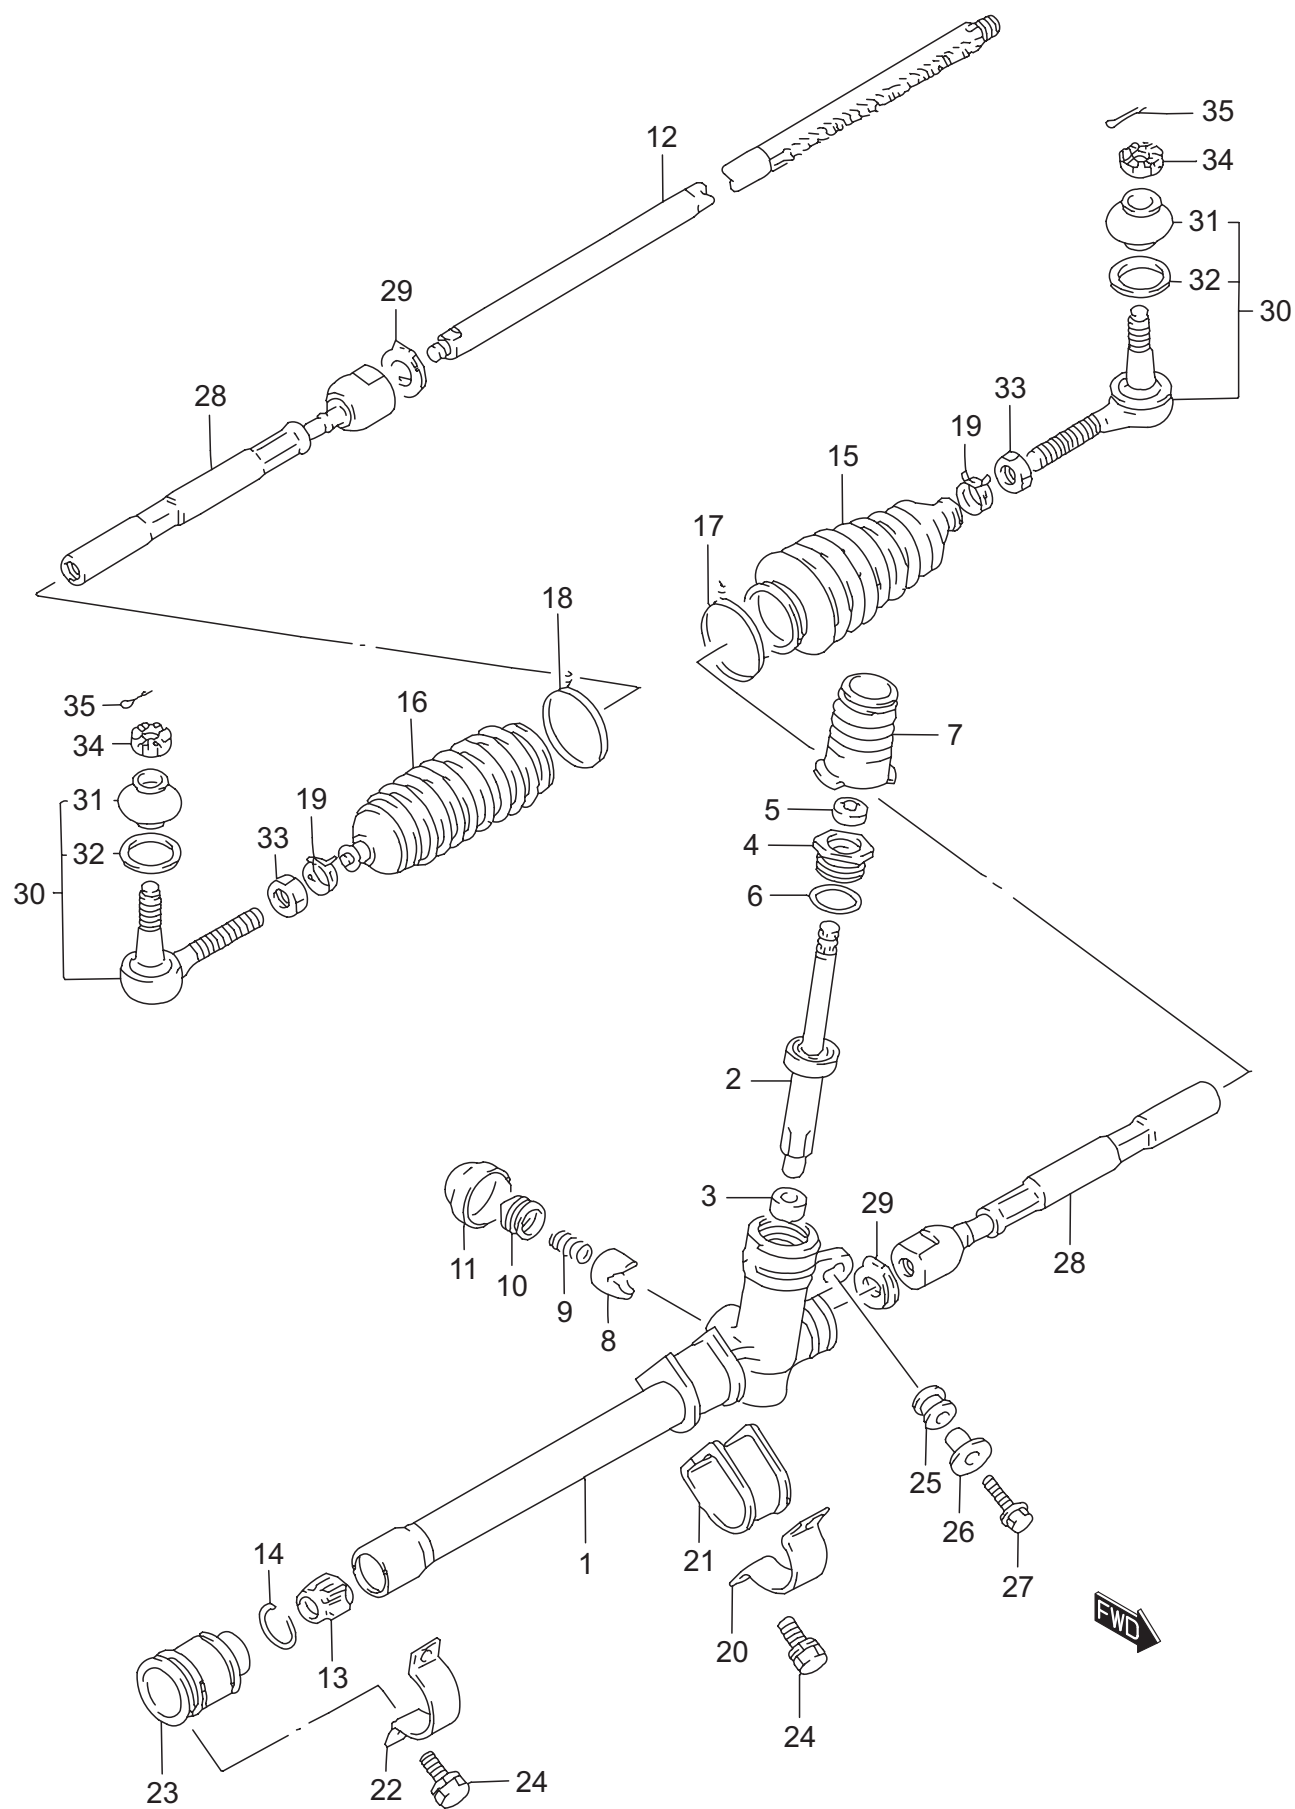


FIG.Nº.65 - STEERING UNIT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	48510-75F20	CASE, STEERING GEAR	1	
2	48550-75F20	PINION, STEERING	1	
3	48555-74F00	BEARING, PINION NEEDLE	1	
4	48562-82000	PLUG, PINION BEARING	1	
5	09283-15002	SEAL, OIL	1	
6	09280-34003	O RING	1	
7	48451-74F00	PACKING, CASE	1	
8	48534-50E00	PLUNGER, RACK	1	
9	09440-19011	SPRING	1	
10	48535-82000	SCREW, RACK DAMPER	1	
11	48536-58000	CAP	1	
12	48531-75F21	RACK, STEERING	1	
13	48541-82H00	BUSHING, RACK	1	←48541-53B02
14	09381-33002	SNAP RING	1	
15	48571-82000	BOOT, PINION SIDE	1	
16	48572-60B10	BOOT, RACK SIDE	1	
17	09460-01023	WIRE	1	
18	09460-01023	WIRE	1	
19	09401-15407	CLIP	2	
20	48521-82000	BRACKET, PINION SIDE	1	
21	48525-75F00	MOUNT, PINION SIDE	1	
22	48522-82000	BRACKET, RACK SIDE	1	
23	48526-82000	MOUNT, RACK SIDE	1	
24	09112-08002	BOLT	4	
25	09320-12028	CUSHION (12X20X17.5)	1	
26	09180-08174	SPACER	1	
27	09116-08105	BOLT (8X28)	1	
28	48830-75F01	TIE ROD, STEERING	2	
29	48841-82001	WASHER, TIE ROD LOCK	2	
30	48810-76G00	END, STEERING TIE ROD	2	
31	48819-60B00	.BOOT SET	2	
32	09401-23402	.CLIP	2	
33	09140-12030	NUT	2	

FIG.Nº.65 - STEERING UNIT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
34	08314-40123	NUT	2	
35	04111-30206	COTTER PIN	2	

FIG.66

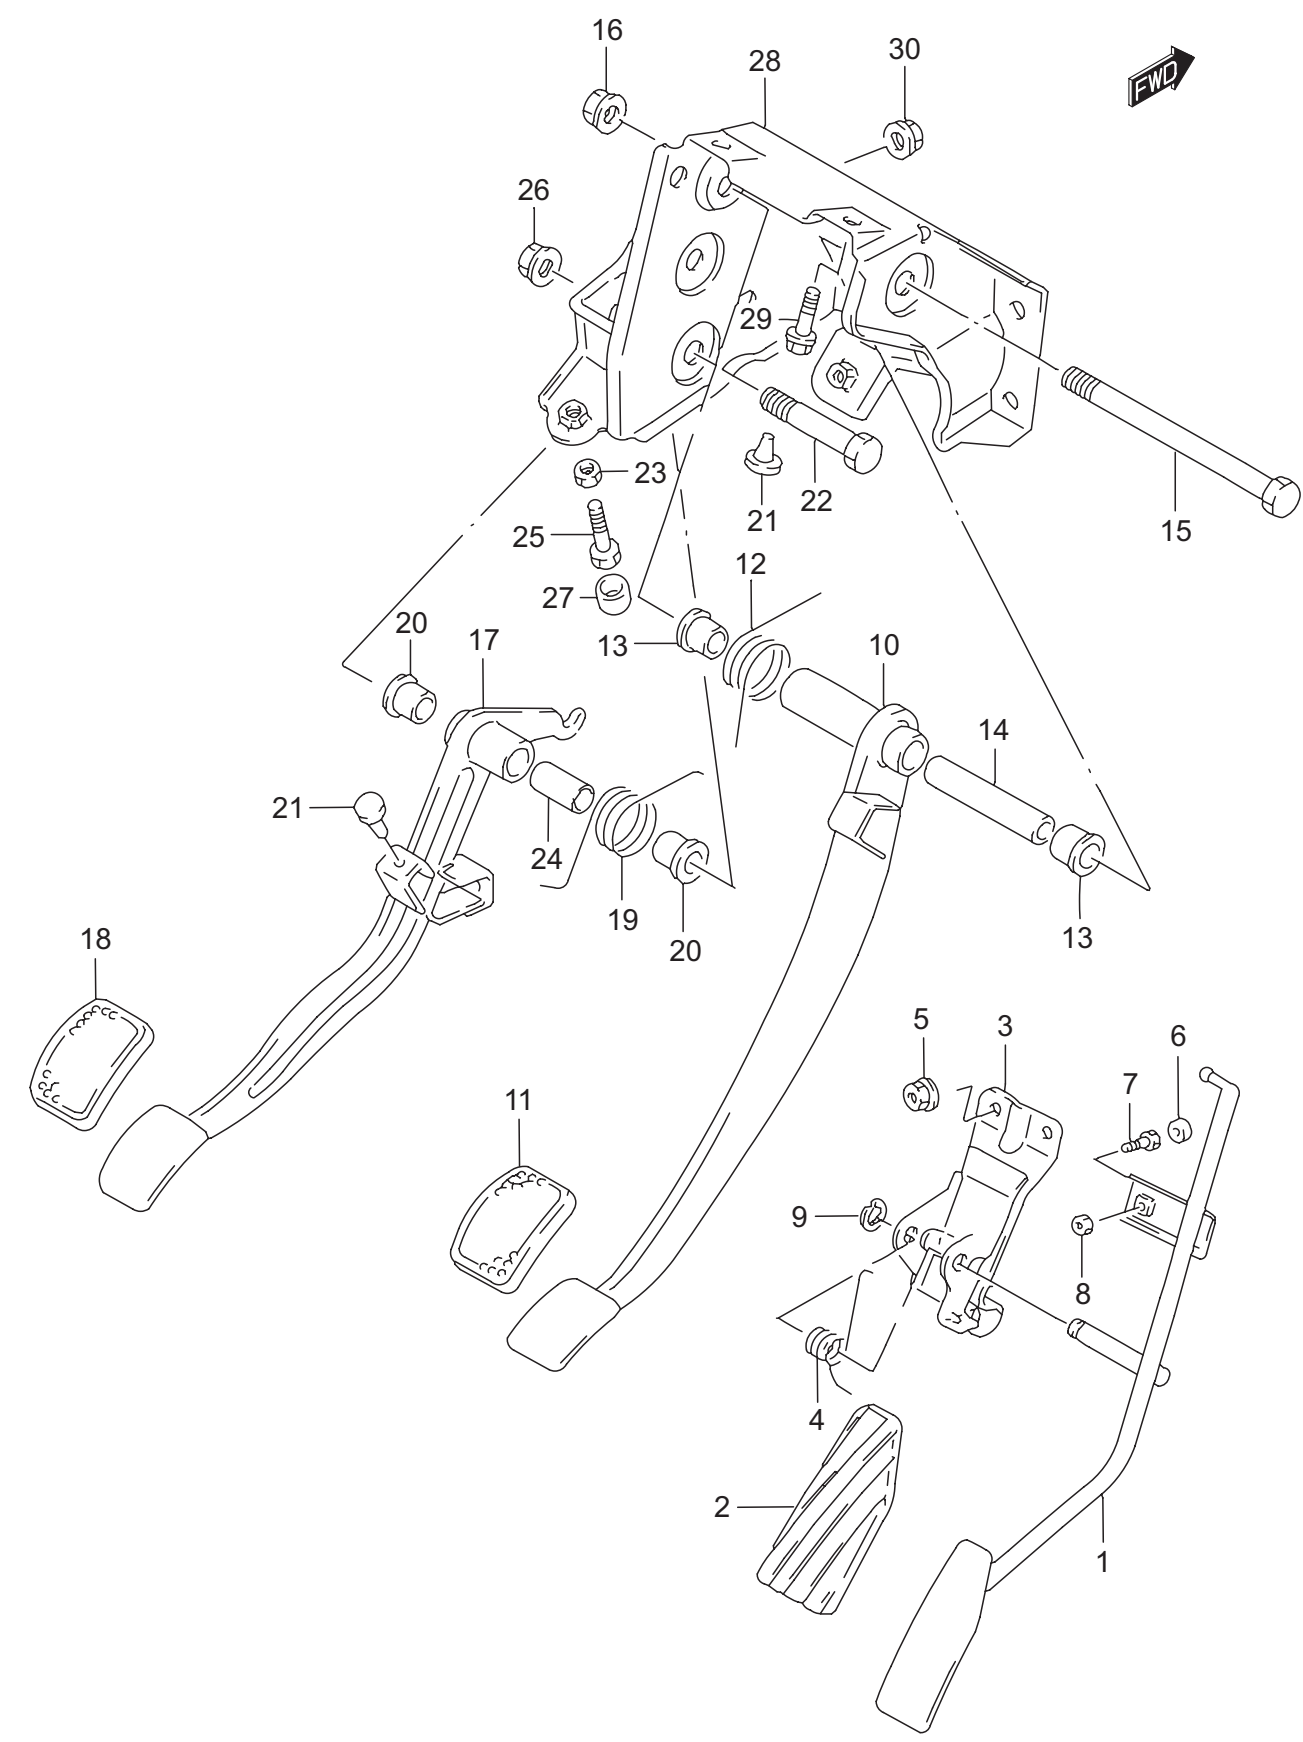


FIG.Nº.66 - PEDAL / PEDAL BRACKET (MT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	49410-75F50	PEDAL, ACCELERATOR	1	
2	49451-60B00	PAD, ACCELERATOR PEDAL	1	
3	49511-70G00	BRACKET, ACCEL PEDAL	1	
4	09448-15016	SPRING	1	
5	08316-10063	NUT	2	
6	09251-05007	CAP	1	
7	09100-06150	BOLT (6X31)	1	
8	08310-00063	NUT	1	
9	08332-11073	E RING	1	
10	49610-75F50	PEDAL, BRAKE	1	
11	49751-79001	PAD, PEDAL	1	
12	49691-62A00	SPRING, BRAKE PEDAL RETURN	1	
13	09307-13005	BUSH	2	
14	09180-10153	SPACER (10X13X116)	1	
15	09103-10142	BOLT (10X135)	1	
16	08316-10103	NUT	1	
17	49810-75F52	PEDAL, CLUTCH	1	
18	49751-79001	PAD, PEDAL	1	
19	49891-50E00	SPRING, CLUTCH PEDAL	1	
20	09307-13005	BUSH	2	
21	09321-06026	CUSHION	2	
22	09103-10027	BOLT (10X58)	1	
23	08310-00063	NUT	1	
24	09180-10135	SPACER (10X13X40.6)	1	
25	01500-06253	BOLT	1	
26	08316-10103	NUT	1	
27	09251-09002	CAP	1	
28	49710-75F20	BRACKET, PEDAL	1	
29	01550-08163	BOLT	2	
30	09159-08069	NUT	2	

FIG.67

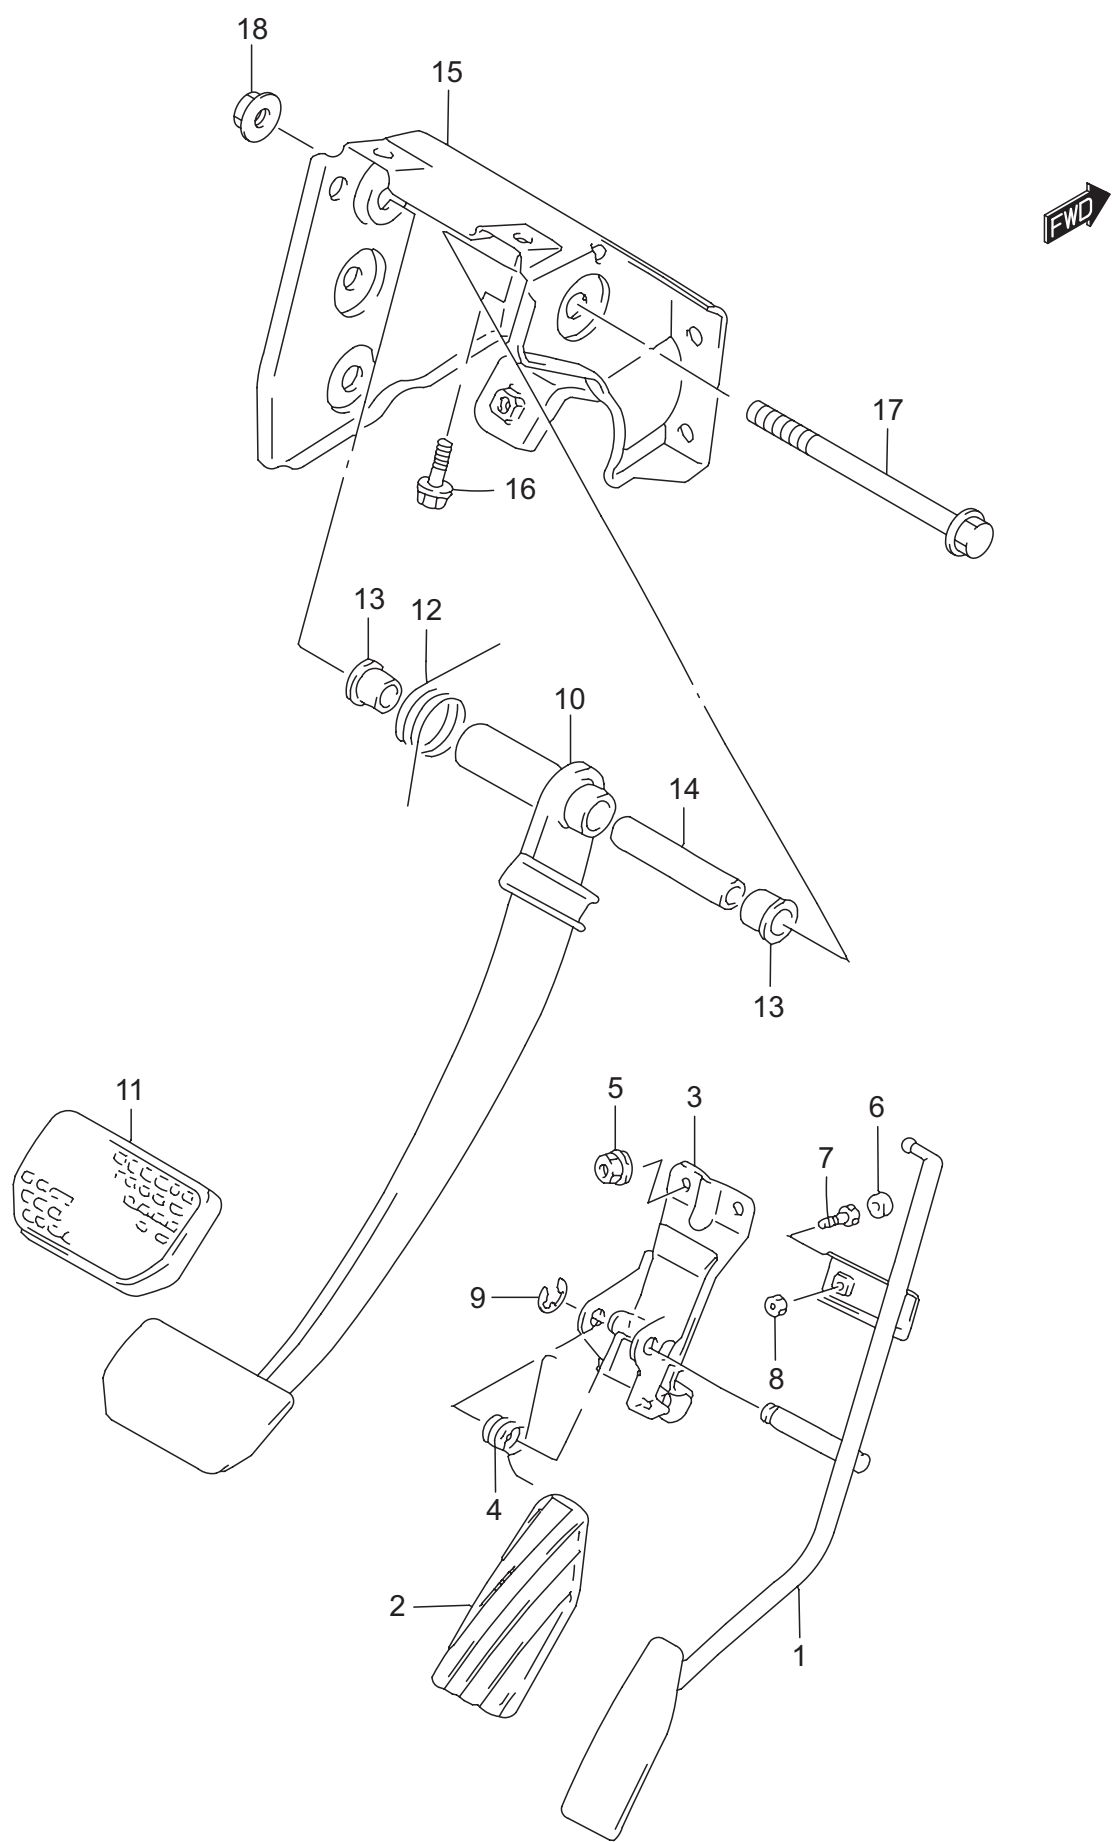


FIG.Nº.67 - PEDAL / PEDAL BRACKET (AT)

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	49410-75F50	PEDAL, ACCELERATOR	1	
2	49451-60B00	PAD, ACCELERATOR PEDAL	1	
3	49511-70G00	BRACKET, ACCEL PEDAL	1	
4	09448-15016	SPRING	1	
5	08316-10063	NUT	2	
6	09251-05007	CAP	1	
7	09100-06150	BOLT (6X31)	1	
8	08310-00063	NUT	1	
9	08332-11073	E RING	1	
10	49610-75F60	PEDAL, BRAKE	1	
11	49751-86300	PAD, PEDAL	1	
12	49691-62A00	SPRING, BRAKE PEDAL RETURN	1	
13	09307-13005	BUSH	2	
14	09180-10153	SPACER	1	
15	49710-75F20	BRACKET, PEDAL	1	
16	01550-08163	BOLT	2	
17	09103-10142	BOLT (10X135)	1	
18	08316-10103	NUT	1	

FIG.68

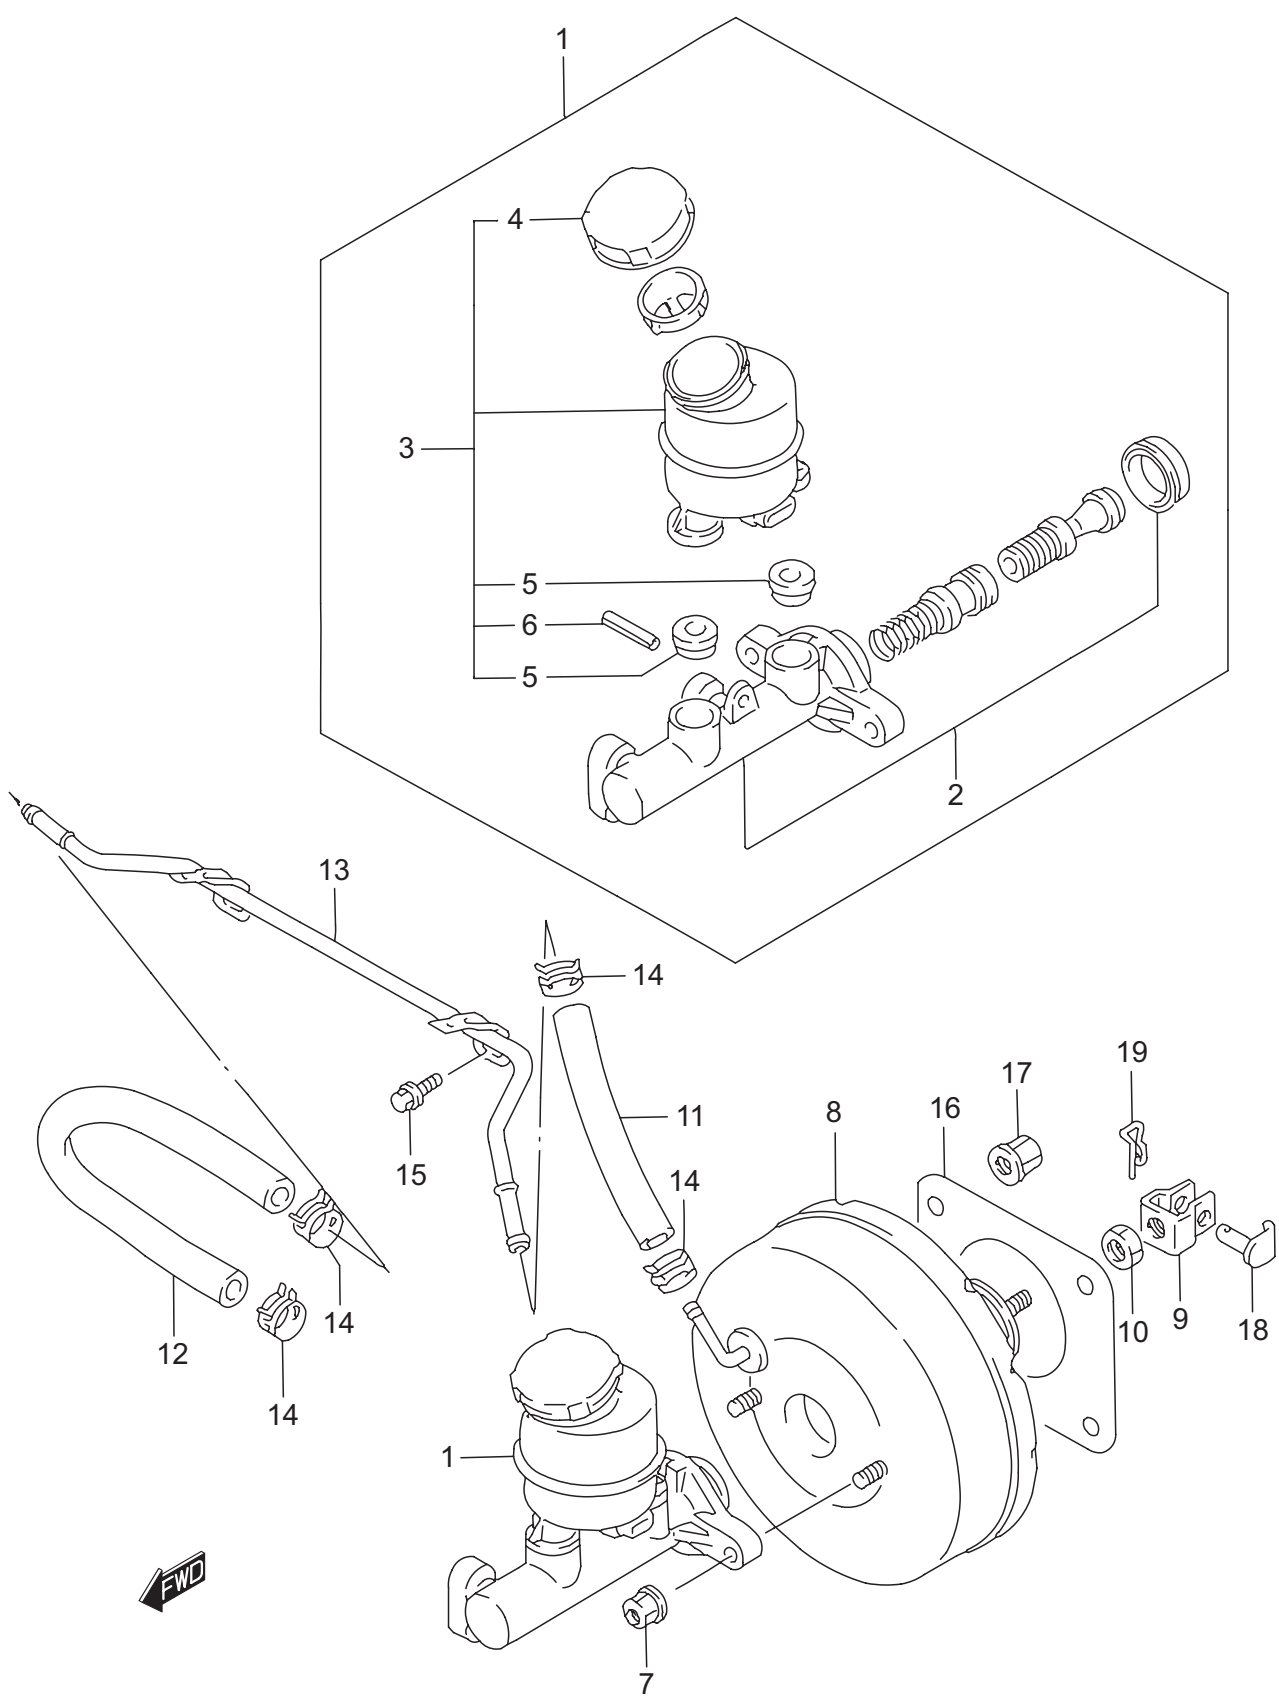


FIG.Nº.68 - BK MASTER CYLINDER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	51100-75F51	CYLINDER ASSY, BRAKE MASTER	1	
2	51810-76F10	.PISTON SET, BRAKE MASTER	1	
3	51200-75F50	.RESERVOIR ASSY, BRAKE MASTER	1	
4	51220-75F51	..CAP, RESERVOIR	1	
5	51232-70F00	..GROMMET, RVSR CONNECTOR	1	
6	51240-75F50	..PIN	1	
7	08361-15083	NUT	2	
8	51300-75F50	BOOSTER ASSY, BRAKE MASTER	1	
9	51182-70B20	.CLEVIS, CYLINDER PUSH ROD	1	
10	08310-00083	.NUT	1	
11	51021-75F00	HOSE, VACUUM BOOSTER	1	
12	51030-75F01	HOSE, VACUUM PIPE	1	
13	51050-75F00	PIPE, BRAKE VACUUM	1	
14	09401-15404	CLAMP	4	
15	02162-06123	BOLT	2	
16	51132-82003	PACKING, BRAKE MASTER CYLINDER	1	
17	09159-08069	NUT	4	
18	09200-08069	PIN	1	
19	09385-08007	SNAP PIN	1	

FIG.69

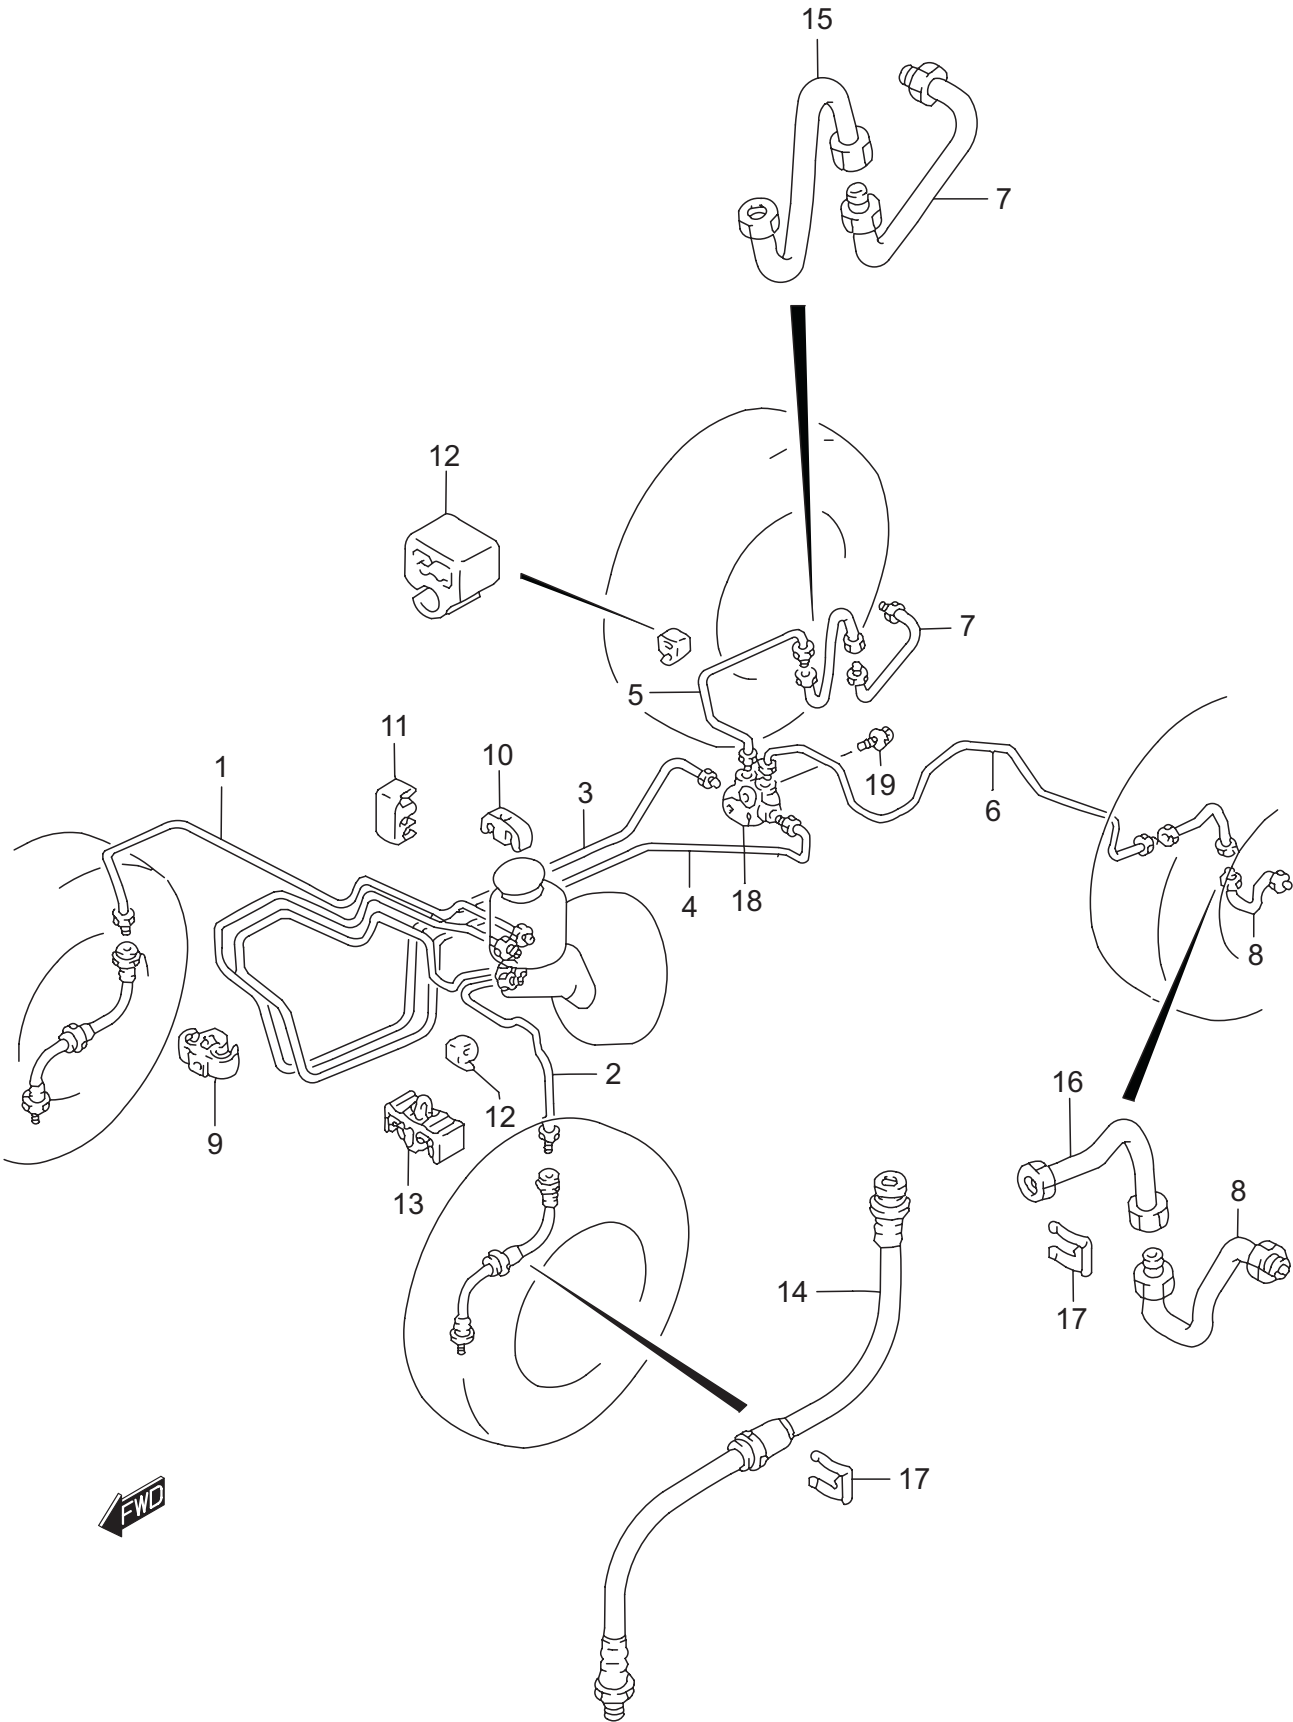


FIG.Nº.69 - BRAKEPIPING

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	51410-75F51	PIPE, MA SECONDARY TO BRAKE HOSE RH	1	
2	51420-75F50	PIPE, MA PRIMARY TO BRAKE HOSE LH	1	
3	51450-75F50	PIPE, MA PRIMARY TO VALVE RH RH	1	
4	51460-75F50	PIPE, MA SECONDARY TO VALVE LH	1	
5	51470-75F00	PIPE, VALVE TO RR BRAKE HOSE RH	1	
6	51480-75F00	PIPE, VALVE TO RR BRAKE HOSE LH	1	
7	51510-75F00	PIPE, RR BRAKE HOSE TO RR CYL RH	1	
8	51520-75F00	PIPE, RR BRAKE HOSE TO RR CYL LH	1	
9	51751-60B00	CLAMP, BRAKE PIPE	1	
10	51751-75F00	CLAMP, BRAKE PIPE MAIN FLOOR DOUBLE	4	
11	51751-77E00	CLAMP, BRAKE PIPE	3	
12	51752-70B00	CLAMP, BRAKE PIPE	7	
13	51761-60B00	CLAMP, BRAKE PIPE DASH LWR	1	
14	51550-75F00	HOSE, FR DISC FLEXIBLE	2	
15	51570-50A50	HOSE, RR BRAKE FLEXIBLE RH	1	
16	51580-75F00	HOSE, RR BRAKE FLEXIBLE LH	1	
17	09383-13001	E RING	8	
18	51910-75F00	VALVE ASSY, LSP	1	
19	01550-06403	BOLT	2	

FIG.70

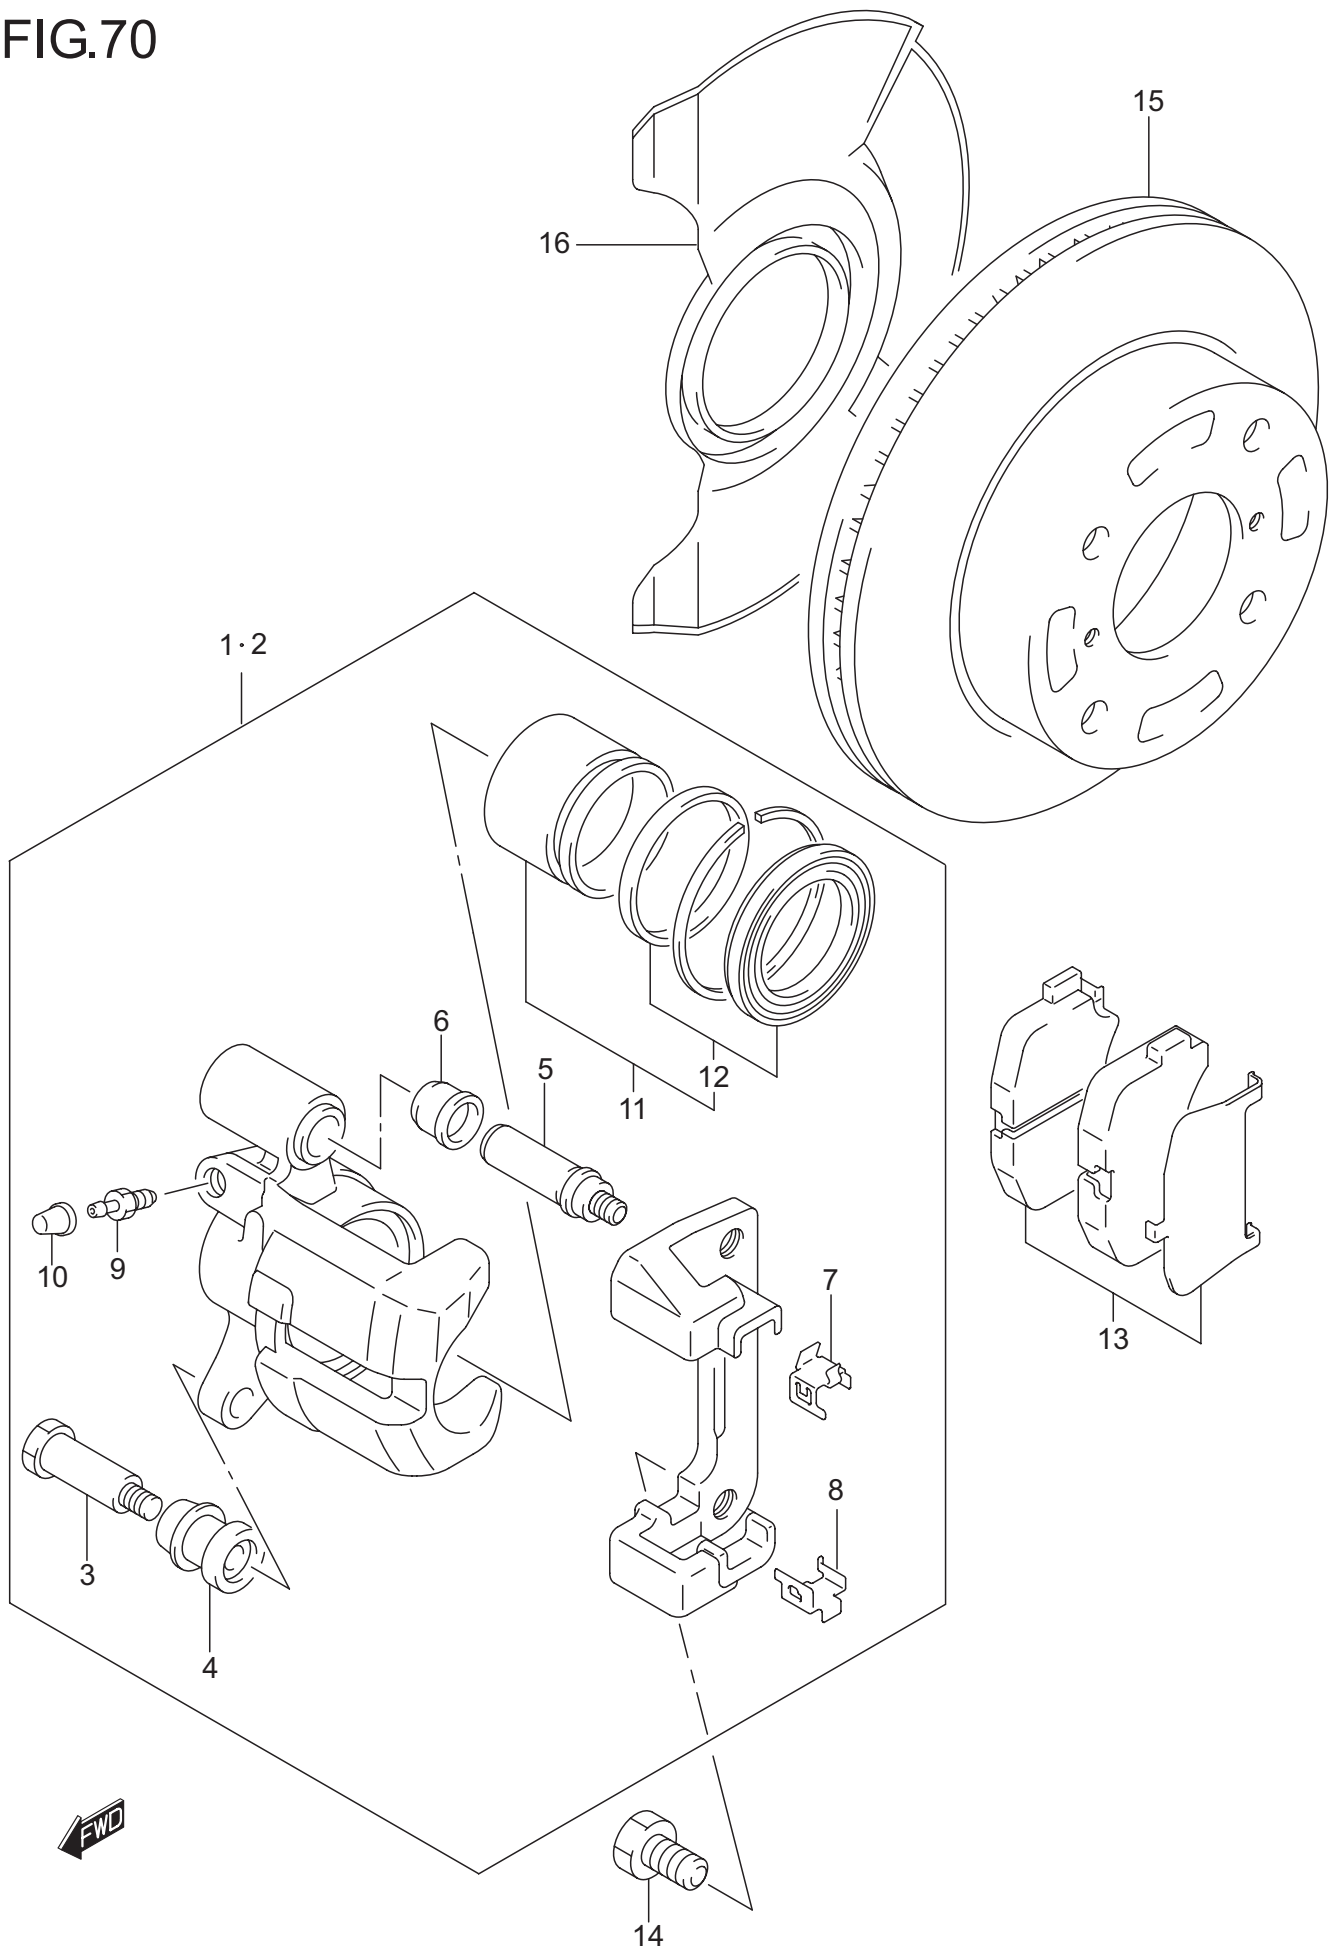


FIG.Nº.70 - FRONT WHEEL BRAKE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	55101-75F10-999	CALIPER ASSY, FR BRAKE RH	1	
2	55102-75F10-999	CALIPER ASSY, FR BRAKE LH	1	
3	55191-75F00	.PIN, CYLINDER SLIDE NO.1	2	
4	55193-75F00	.BUSH, PIN SLIDE	2	
5	55192-75F00	.PIN, CYLINDER SLIDE NO.2	2	
6	55201-75F00	.BOOT, PIN	2	
7	55234-75F00	.PLATE, PAD SUPPORT NO.1	4	
8	55235-75F00	.PLATE, PAD SUPPORT NO.2	4	
9	55473-82030	.PLUG, BLEEDER	2	
10	55156-66310	.CAP, BLEEDER PLUG	2	
11-1	55830-60C10	.PISTON/SEAL SET	2	
11-2	55830-78A00	.PISTON/SEAL SET	2	2001-1~
12	55100-82820	..SEAL SET	2	
13	55810-75F12	PAD SET, BRAKE	1	
14	09117-12006	BOLT (12X27)	4	
15	55311-75F00	DISC, FRONT BRAKE	2	
16	55321-60B20	COVER, BRAKE DISC DUST	2	

FIG.71

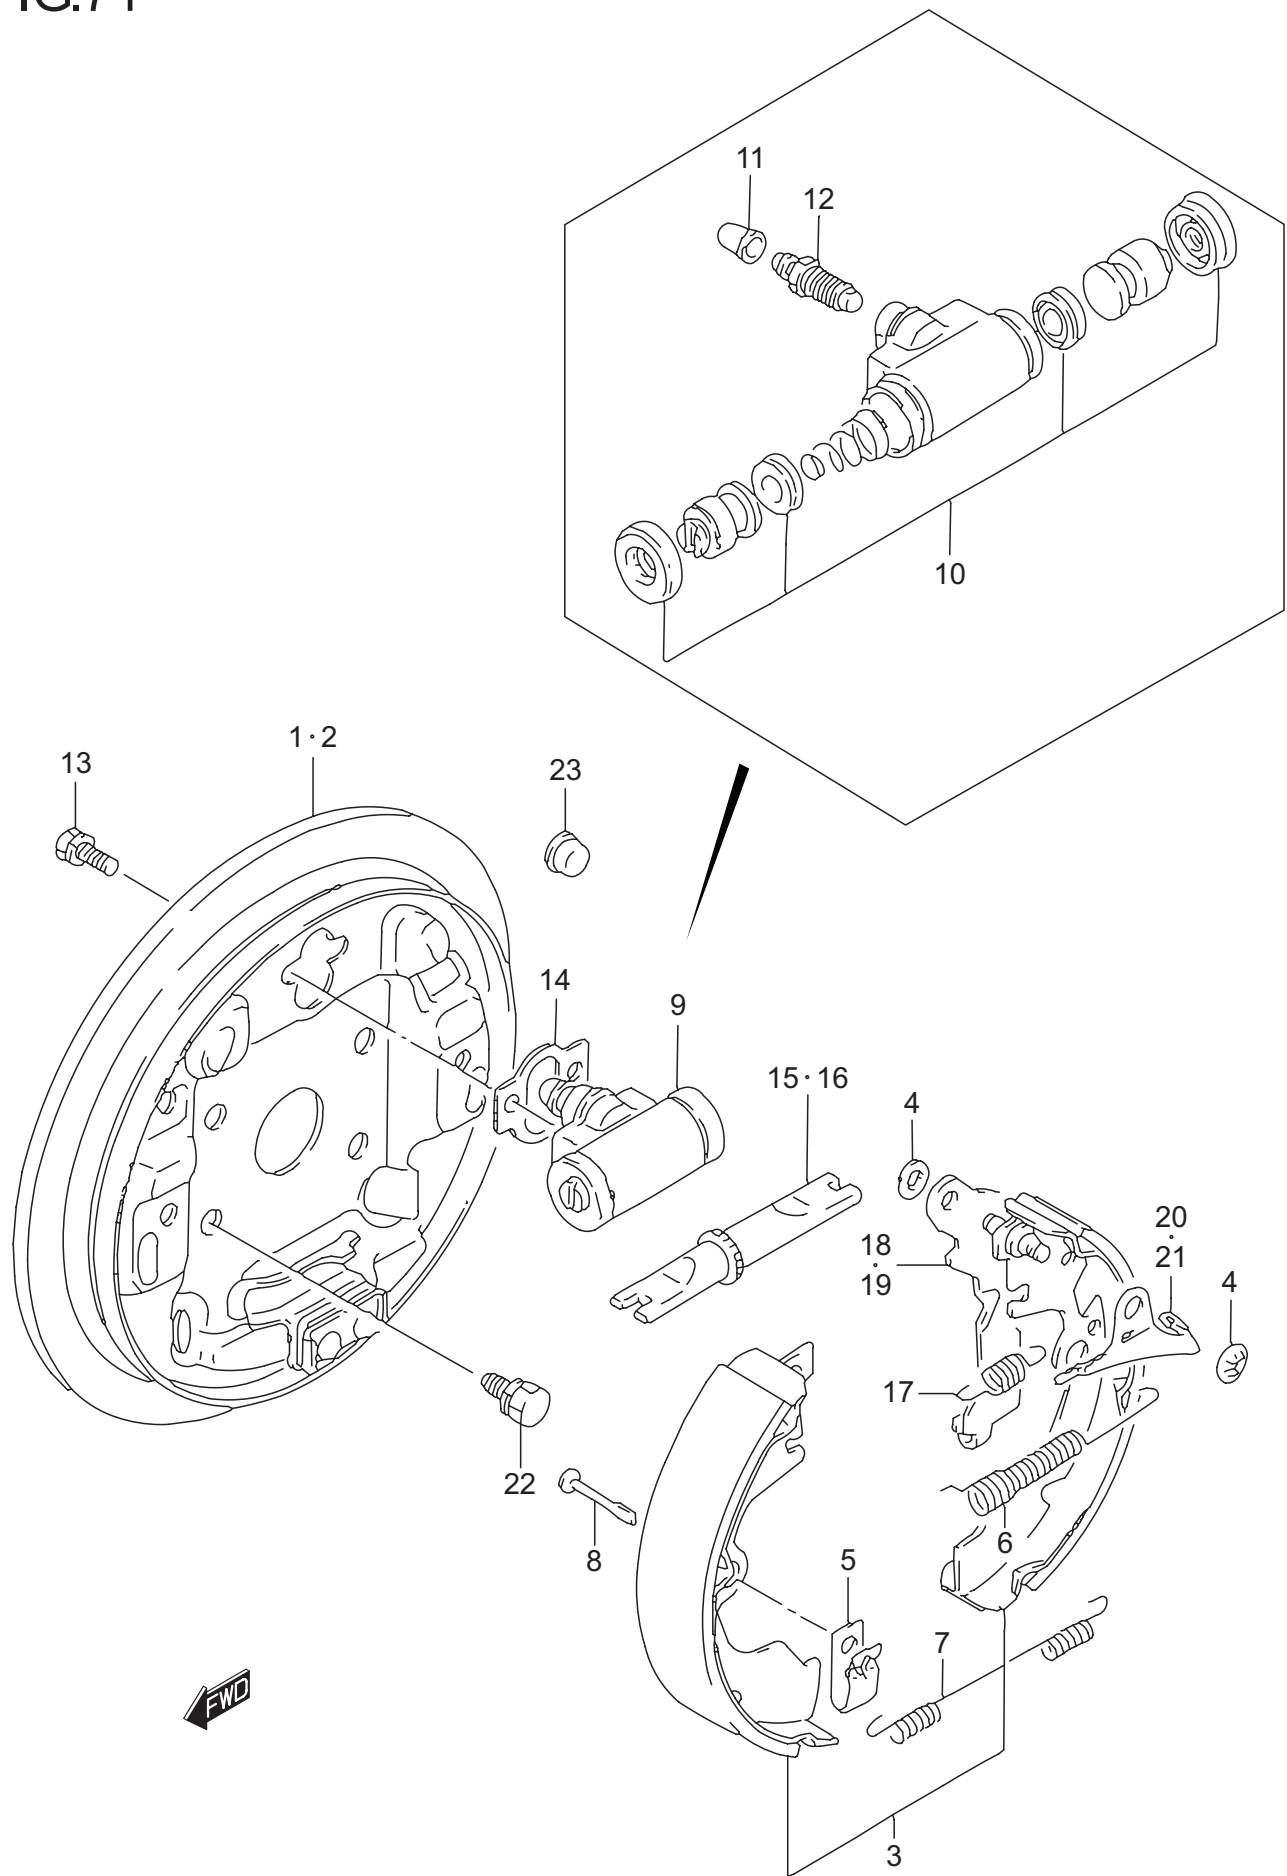


FIG.Nº.71 - REAR WHEEL BRAKE

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	53101-75F20	PLATE, RR BRAKE BACKING RH	1	
2	53102-75F20	PLATE, RR BRAKE BACKING LH	1	
3	53200-70822	SHOE SET, BRAKE	1	
4	09148-06005	.NUT	4	
5	52243-84010	SPRING, SHOE HOLD DOWN	4	
6	53231-70G00	SPRING, SHOE RETURN UPPER	2	
7	53232-70G00	SPRING, SHOE RETURN LOWER	2	
8	52241-84010	PIN, SHOE HOLD DOWN	4	
9	53401-75F00	CYLINDER ASSY, REAR WHEEL	2	
10	52400-84811	.CUP & BOOT SET, RR	2	
11	55156-66310	.CAP, BLEEDER PLUG	2	
12	55151-60D10	.PLUG, BLEEDER	2	
13	01570-06103	BOLT	4	
14	53446-50A10	SEAT, RR WHEEL CYLINDER	2	
15	53701-70G10	STRUT ASSY, RR BRAKE RH	1	
16	53702-70G10	STRUT ASSY, RR BRAKE LH	1	
17	53711-70G00	SPRING. PARKING LEVER	2	
18	53751-70G00	LEVER, PARKING SHOE RH	1	
19	53761-70G00	LEVER, PARKING SHOE LH	1	
20	53782-70G01	LEVER, ADJUSTING RH	1	
21	53781-70G01	LEVER, ADJUSTING LH	1	
22	09117-08070	BOLT (8X19)	8	
23	53141-75F00	PLUG, BACKING PLATE	2	

FIG.72

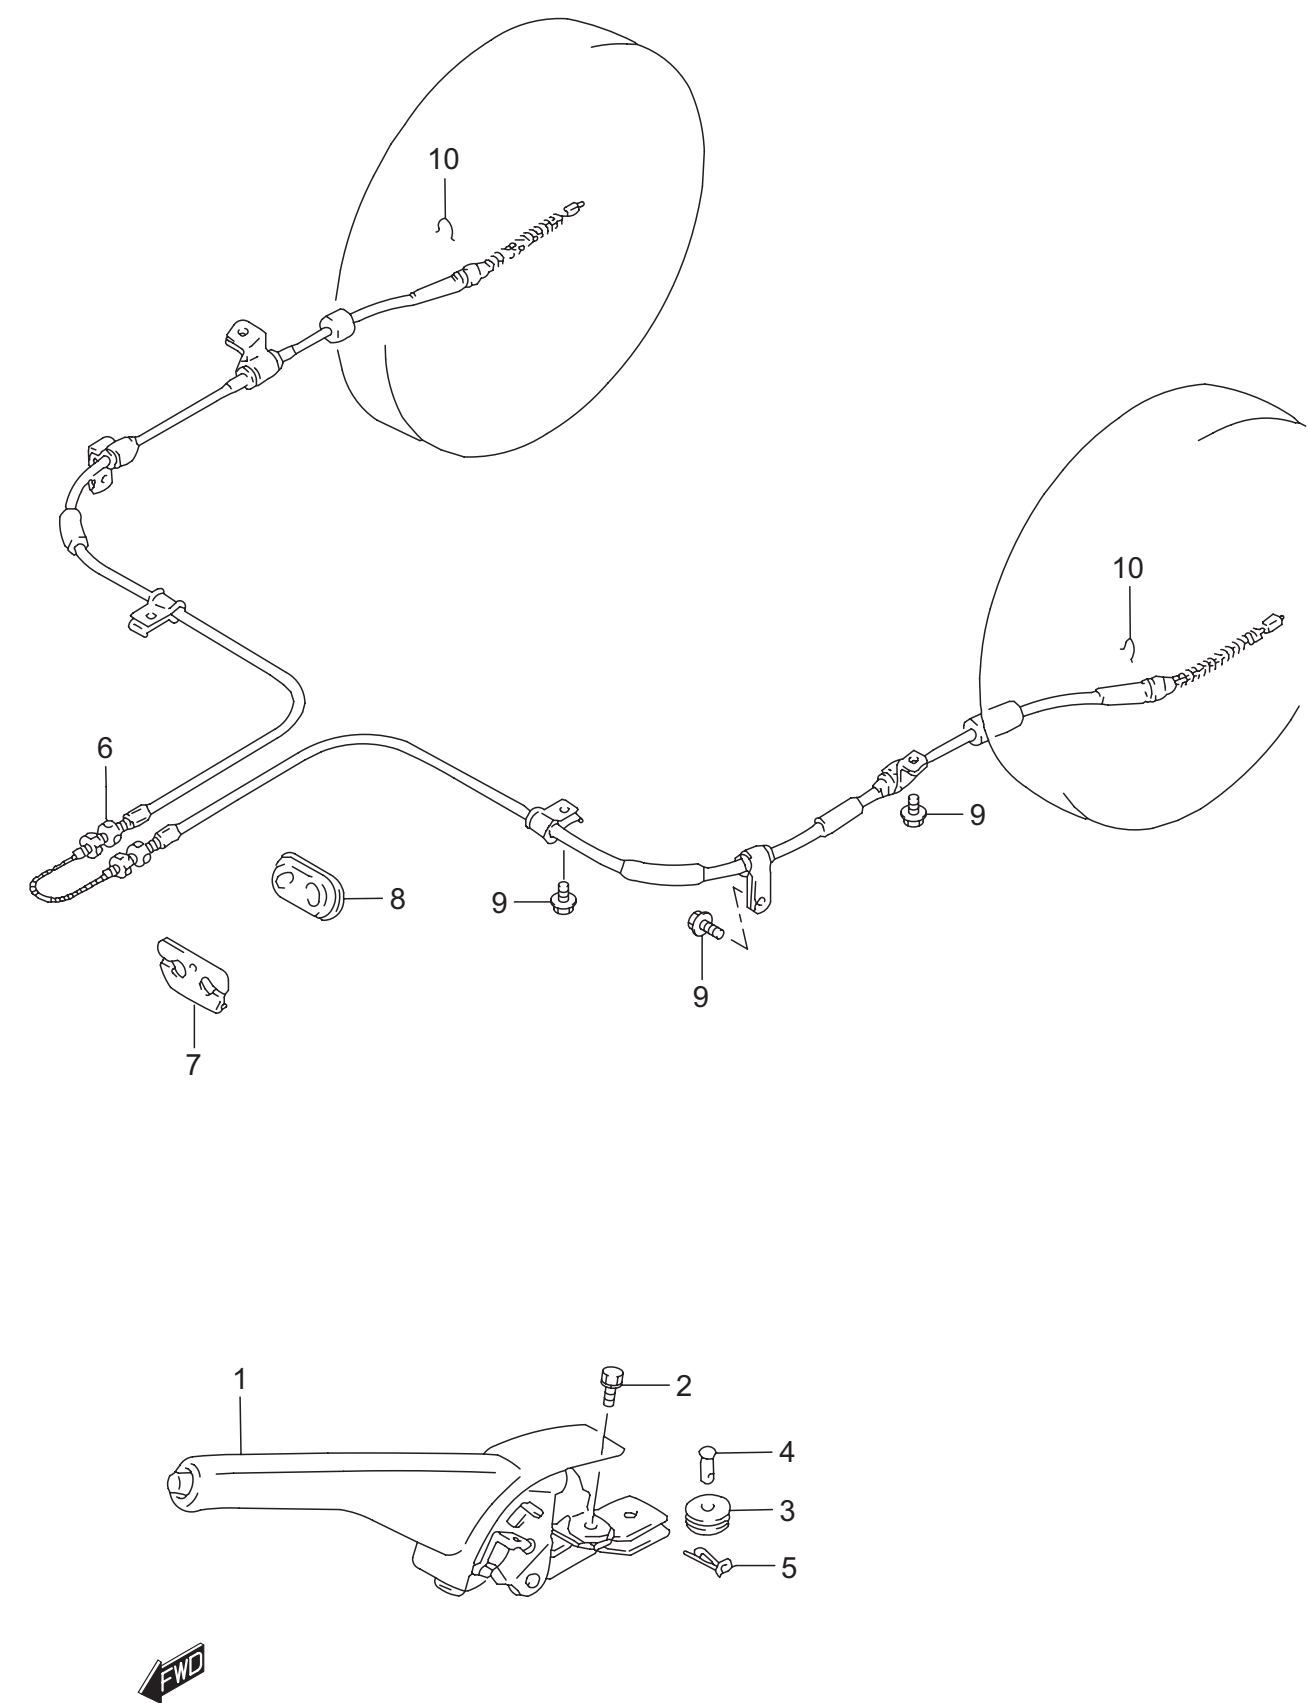


FIG.Nº.72 - PARKING BRAKE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	54000-75F10-5PK	LEVER ASSY, PARKING BRAKE (BLACK)	1	
2	01570-06163	BOLT	3	
3	54482-78010	PULLEY, CABLE	1	
4	09200-08039	PIN	1	
5	09385-08007	SNAP PIN	1	
6	54400-75F00	CABLE, PARKING BRAKE	1	
7	54495-82000	STRENGTH, PARKING CABLE	1	
8	54499-84000	GROMMET, PARKING CABLE	1	
9	02162-06123	SCREW	6	
10	53771-70G00	CLIP, PARKING CABLE	2	

FIG.73

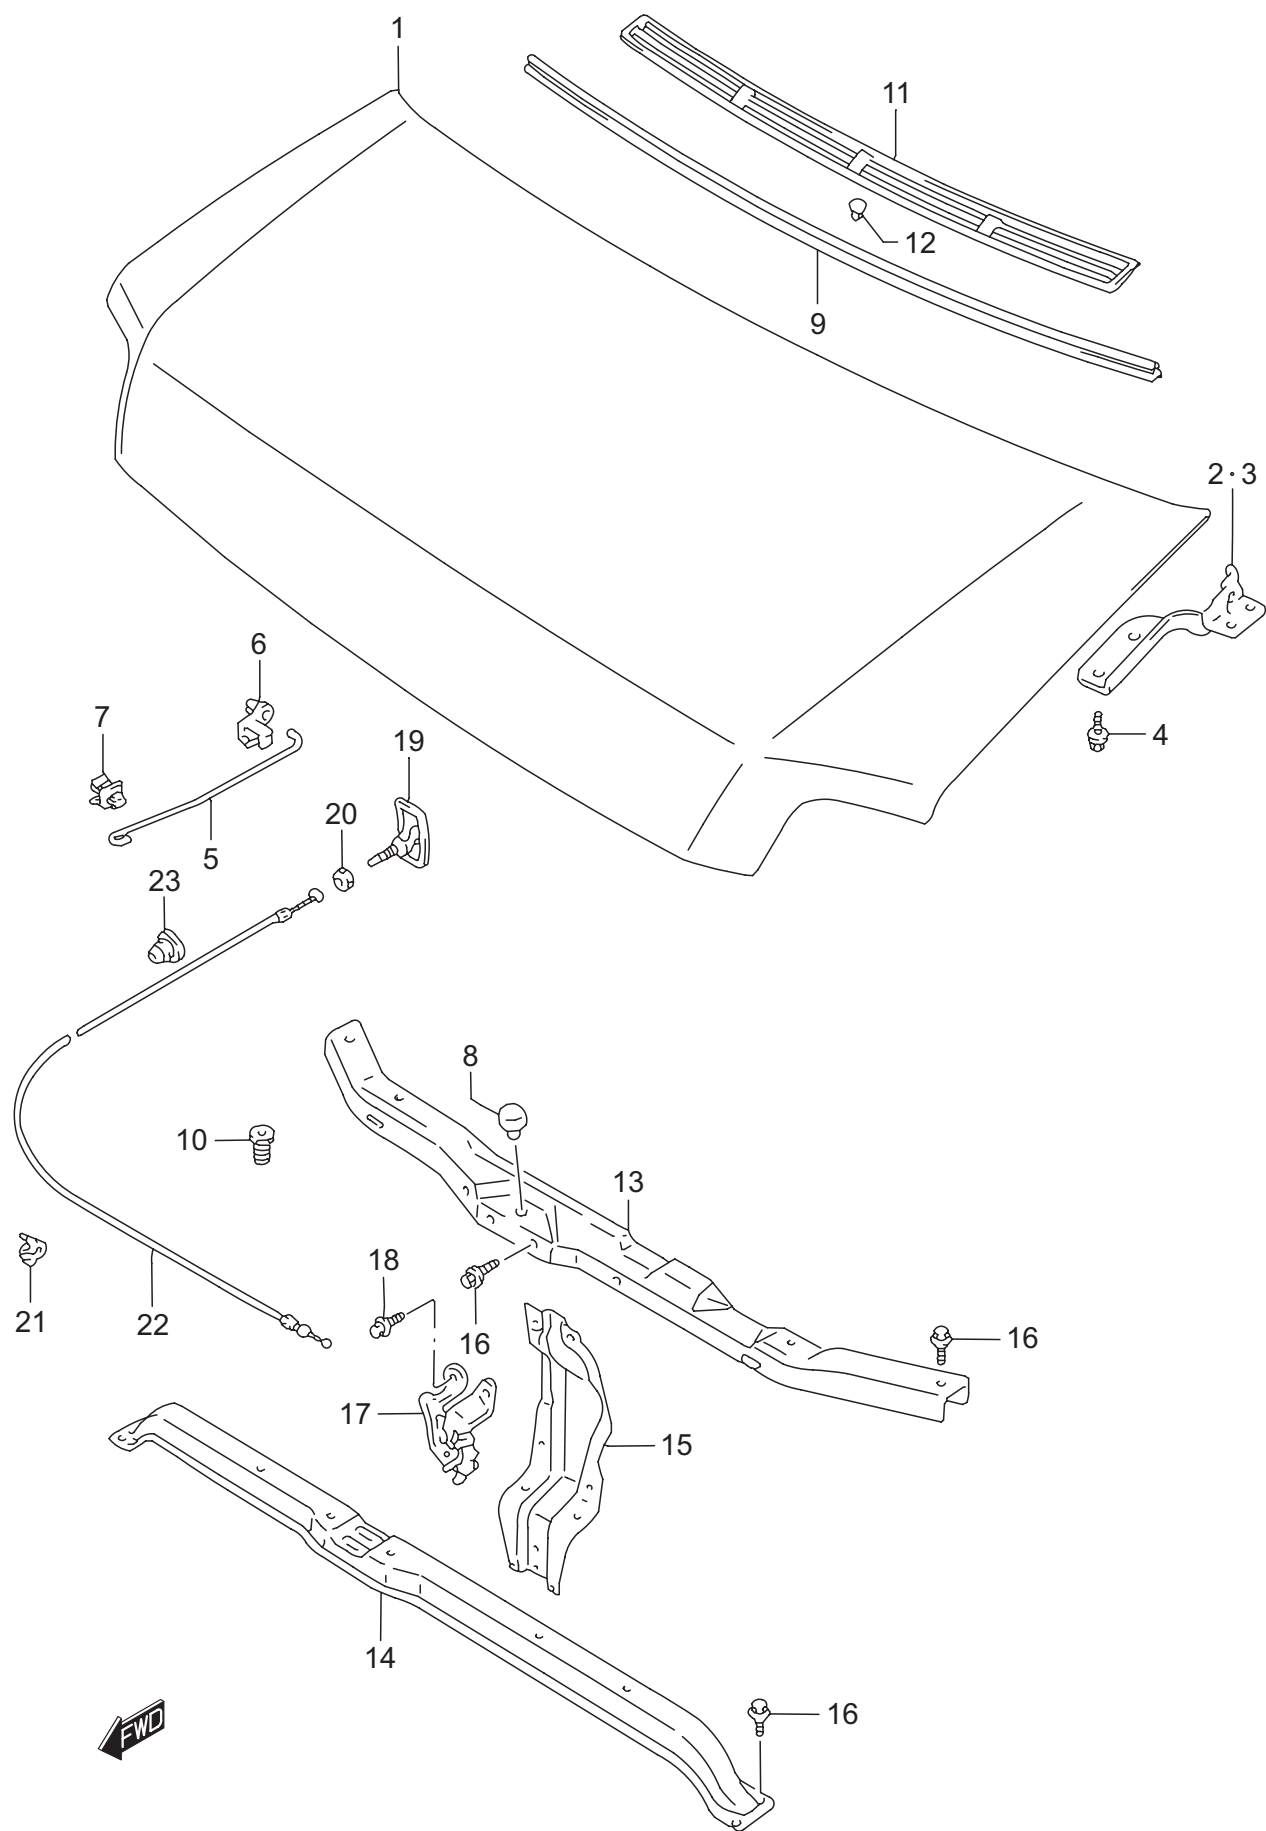


FIG.Nº.73 - FRONT HOOD PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	57300-75F00	PANEL, FRONT HOOD	1	
2	57410-74F00	HINGE, FRONT HOOD RH	1	
3	57420-74F00	HINGE, FRONT HOOD LH	1	
4	09128-06073	SCREW (6X10)	8	
5	72311-74F00	STAY, FRONT HOOD	1	
6	09209-09007	LINKAGE	1	
7	09403-07311	CLAMP	1	
8	09321-10023	CUSHION	1	
9	72341-75F00	SEAL, HOOD RR	1	
10	72372-82000	CUSHION	2	
11	72331-75F00-5PK	GARNISH, COWL TOP (BLACK)	1	
12	09409-07323-5ES	CLIP (BLACK)	3	
13	57211-75F02	MEMBER, FRONT UPPER	1	
14	57121-75F01	MEMBER, FRONT LOWER	1	
15	57221-75F02	MEMBER, FRONT CENTER	1	
16	09128-06073	SCREW (6X10)	12	
17	82110-75F00	LATCH, HOOD	1	
18	02162-06163	BOLT	3	
19	82150-62D00-T01	LEVER, LATCH RELEASE (GRAY)	1	
20	09159-14014	NUT	1	
21	09403-04401	CLAMP	3	
22	82160-75F10	CABLE, LATCH RELEASE	1	
23	82191-50E00	GROMMET, LATCH RELEASE CABLE	1	

FIG.74



FIG.Nº.74 - FRONT FENDER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	57611-75FV1-X06	PANEL, FRONT FENDER RH	1	
2	57711-75FV1-X06	PANEL, FRONT FENDER LH	1	
3	57612-74F00	CLIP, FRONT FENDER	2	
4	03241-05083	SCREW	2	
5	03241-05083	SCREW	2	
6	09128-06073	SCREW (6X10)	6	
7	09148-05003	NUT	2	
8	72321-74F00	LINING, FRONT FENDER RH	1	
9	72322-74F00	LINING, FRONT FENDER LH	1	
10	03242-05123	SCREW	10	
11	09148-05003	NUT	4	
12	09148-05018	NUT	4	
13	09409-07308-5PK	CLIP (BLACK)	2	
14	72211-74F00-5PK	FLAP, MAD FR RH (BLACK)	1	
15	72216-74F00-5PK	FLAP, MAD FR LH (BLACK)	1	
16	09409-08313-5PK	CLIP (BLACK)	6	

FIG.75

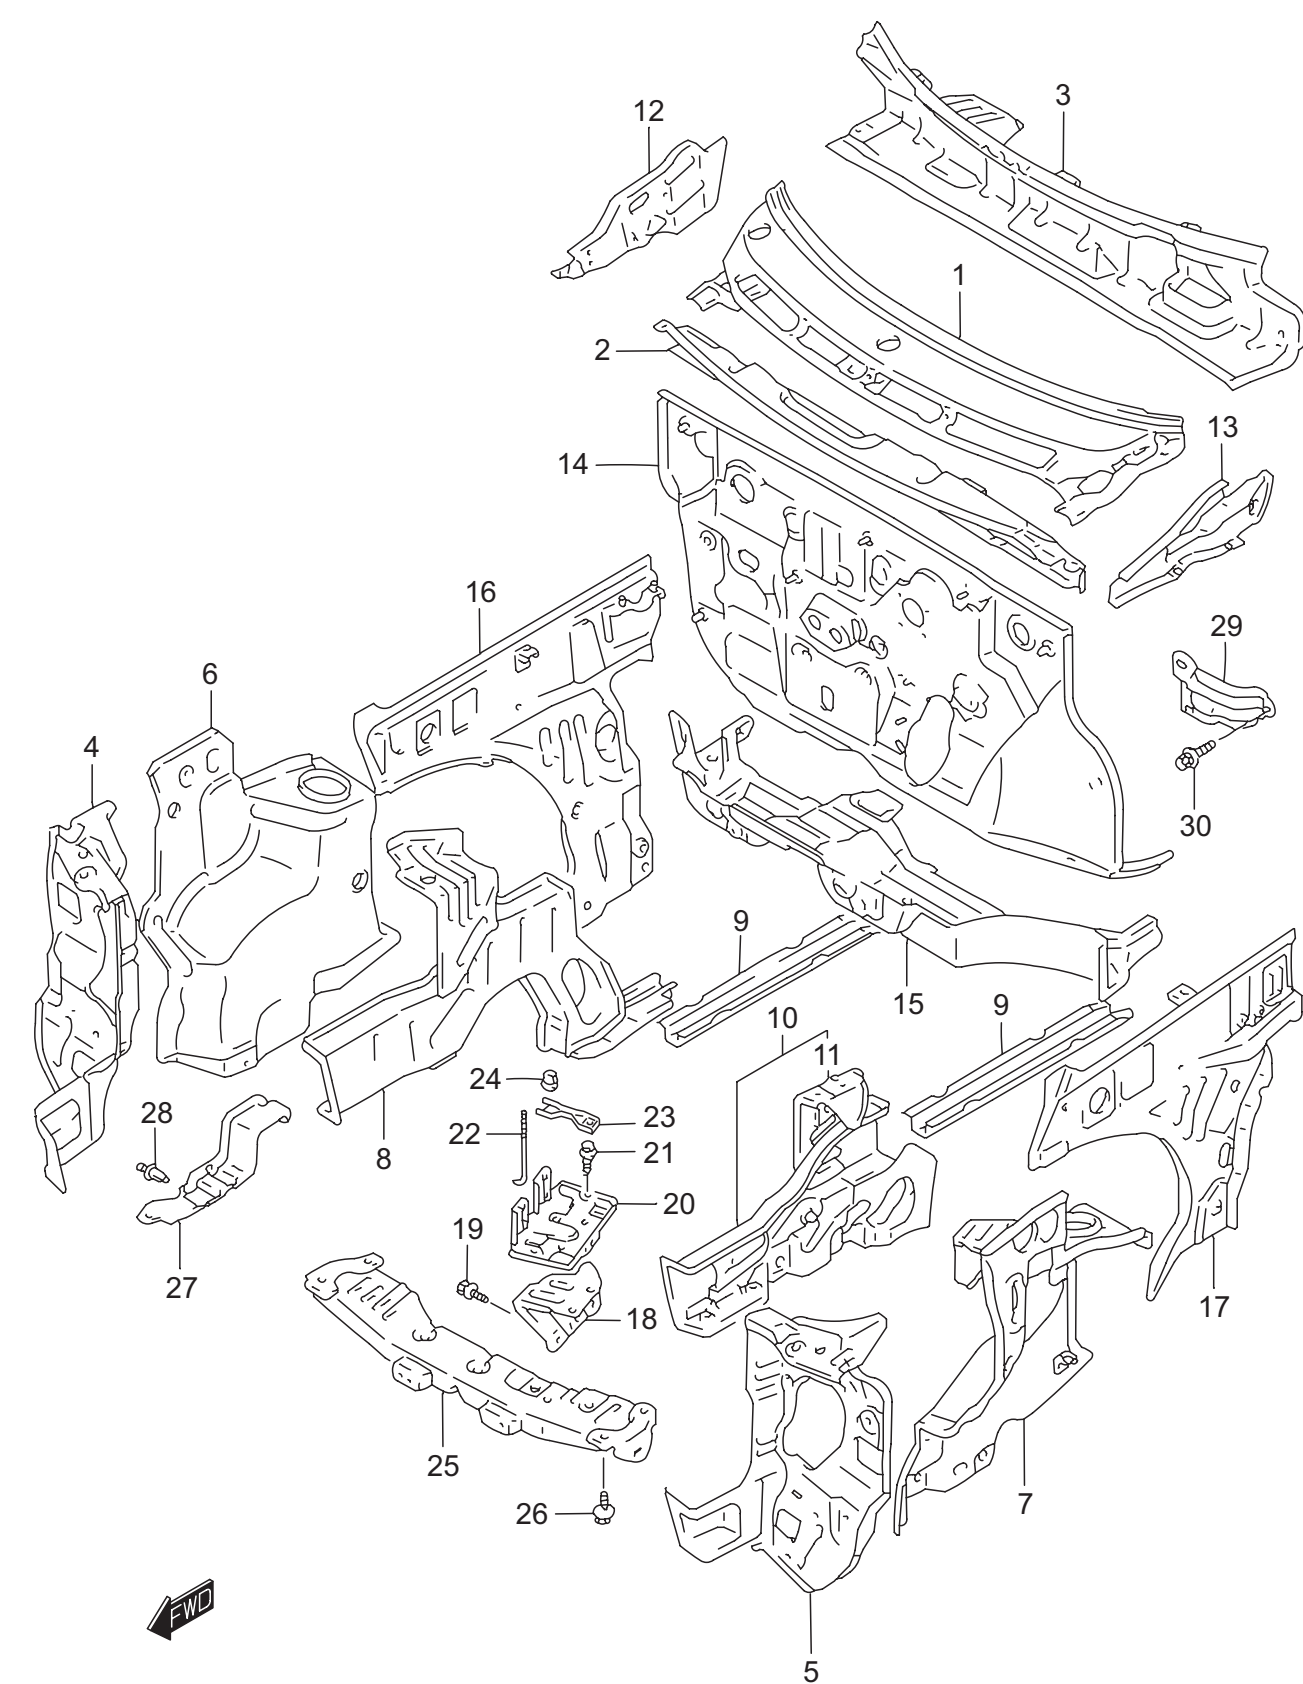


FIG.Nº.75 - FRONT BODY PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	59710-75F10	PANEL, COWL TOP	1	
2	59720-75F10	PANEL, COWL TOP LOWER	1	
3	59310-75F10	PANEL, COWL UPPER	1	
4	58110-75F00	PANEL, LAMP SUPPORT RH	1	
5	58130-75F00	PANEL, LAMP SUPPORT LH	1	
6	58310-75F00	PANEL, FENDER APRON RH	1	
7	58410-75F00	PANEL, FENDER APRON LH	1	
8	58610-75F10	MEMBER, FRONT SIDE RH	1	
9	58631-75F00	MEMBER, FRONT SIDE	2	
10	58710-75F00	MEMBER, FRONT SIDE LH	1	
11	58715-75F00	.SUPPORT, BATTERY BRACKET	1	
12	58330-75F00	EXTENSION, APRON UPPER RH	1	
13	58430-75F00	EXTENSION, APRON UPPER LH	1	
14-1	59100-75F90	PANEL, DASH	1	MT
14-2	59100-75F62	PANEL, DASH	1	AT
15-1	59210-75F30	CROSSMEMBER, DASH PANEL	1	MT
15-2	59210-75F10	CROSSMEMBER, DASH PANEL	1	AT
16	59230-75F10	PANEL, DASH SIDE RH	1	
17	59280-75F10	PANEL, DASH SIDE LH	1	
18	58440-75F00	STAY, BATTERY BRACKET	1	
19	09128-06073	SCREW (6X10)	2	
20	72520-75F00	BRACKET, BATTERY	1	
21	02162-06123	SCREW	3	
22	63461-80000	BOLT, BATTERY	2	
23	72511-78000	BAND, BATTERY	1	
24	08316-10053	NUT	2	
25	71100-75F00	CROSSMEMBER, FRONT	1	
26	09118-10058	BOLT (10X50)	4	
27	72381-75F00	COVER, SPLASH	1	
28	09409-07308-5PK	CLIP (BLACK)	5	
29	72351-75F10	LID, SERVICE HOLE	1	
30	02162-06123	SCREW	3	

FIG.76

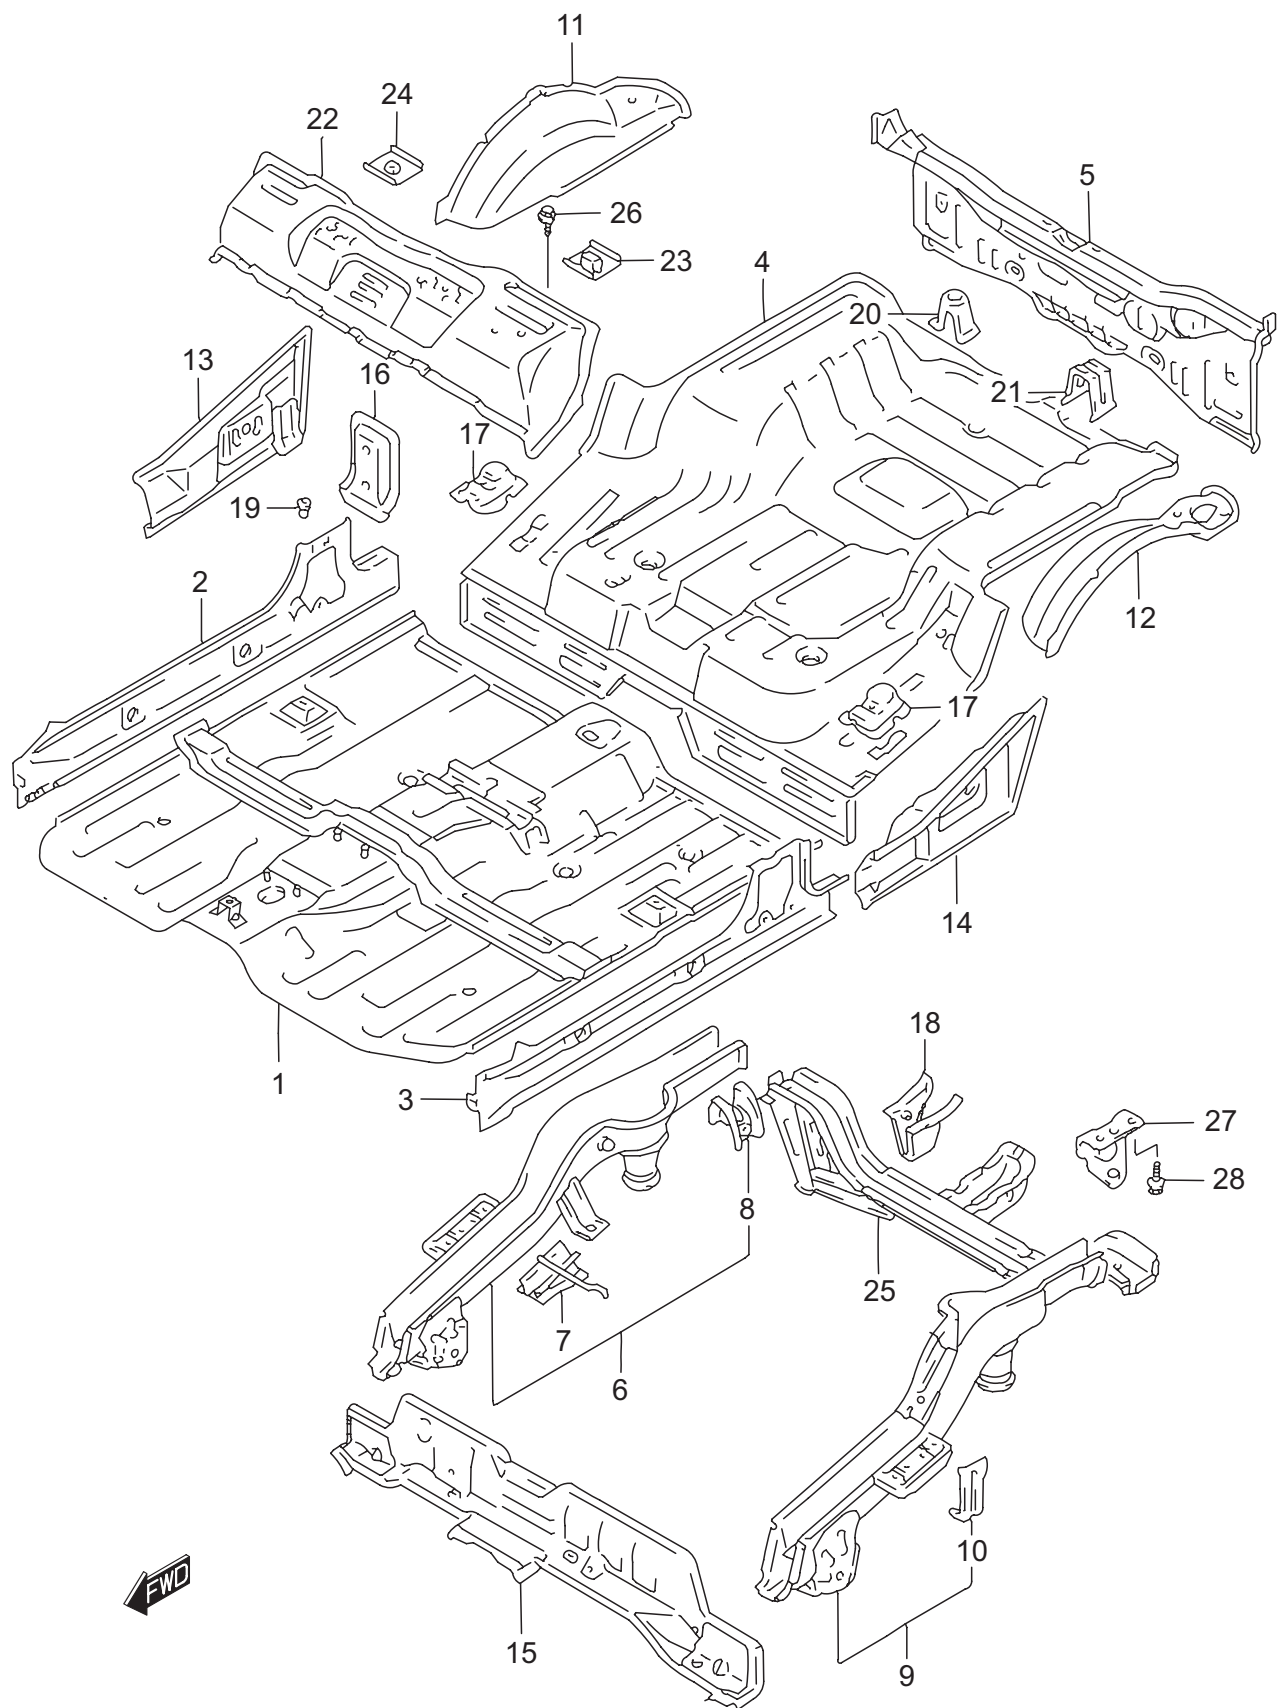


FIG.Nº.76 - FLOOR PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	61111-75F11	PAN, MAIN FLOOR	1	
2	61310-75F01	PANEL, SIDE SILL INNER RH	1	
3	61320-75F01	PANEL, SIDE SILL INNER LH	1	
4	61511-75F00	PAN, REAR FLOOR	1	
5	65400-75F22	PANEL, REAR SKIRT	1	
6	62100-75F00	MEMBER, REAR FLOOR SIDE RH	1	
7	62150-75F00	.HANGER, MUFFLER CENTER	1	
8	62161-75F00	.HANGER, MUFFLER REAR	1	
9	62300-75F01	MEMBER, REAR FLOOR SIDE LH	1	
10	62315-75F00	.BRACKET, FUEL TANK SIDE RH	1	
11	61611-75F00	PANEL, RR WHEEL HOUSE INNER RH	1	
12	61661-75F00	PANEL, RR WHEEL HOUSE INNER LH	1	
13	61560-75F01	LOCKER, RR FLOOR FR INNER RH	1	
14	61570-75F01	LOCKER, RR FLOOR FR INNER LH	1	
15	62610-75F00	CROSSMEMBER, RR FLOOR FR	1	
16	61513-75F00	BRACKET, RR SEAT INSIDE	1	
17	61514-74F00	BRACKET, RR SEAT OUTSIDE	2	
18	61515-75F00	BRACKET, FUEL TANK REAR	1	
19	61516-74F00	GUIDE, REAR SEAT	2	
20	61518-84000	BRACKET, SPARE TIRE	1	
21	61519-75F00	BRACKET, JACK	1	
22	61540-75F01	CROSSMEMBER, RR FLOOR CENTER	1	
23	61550-75F00	REINF, RR SEAT BELT CENTER	1	
24	61551-75F00	REINF, RR SEAT BELT CENTER	1	
25	62630-75F00	CROSSMEMBER, RR FLOOR CENTER	1	
		NO.2		
26	09103-12038	BOLT (12X16)	2	
27	77111-75F00	HOOK, TOWING REAR	1	
28	01551-08203	BOLT	2	

FIG.77

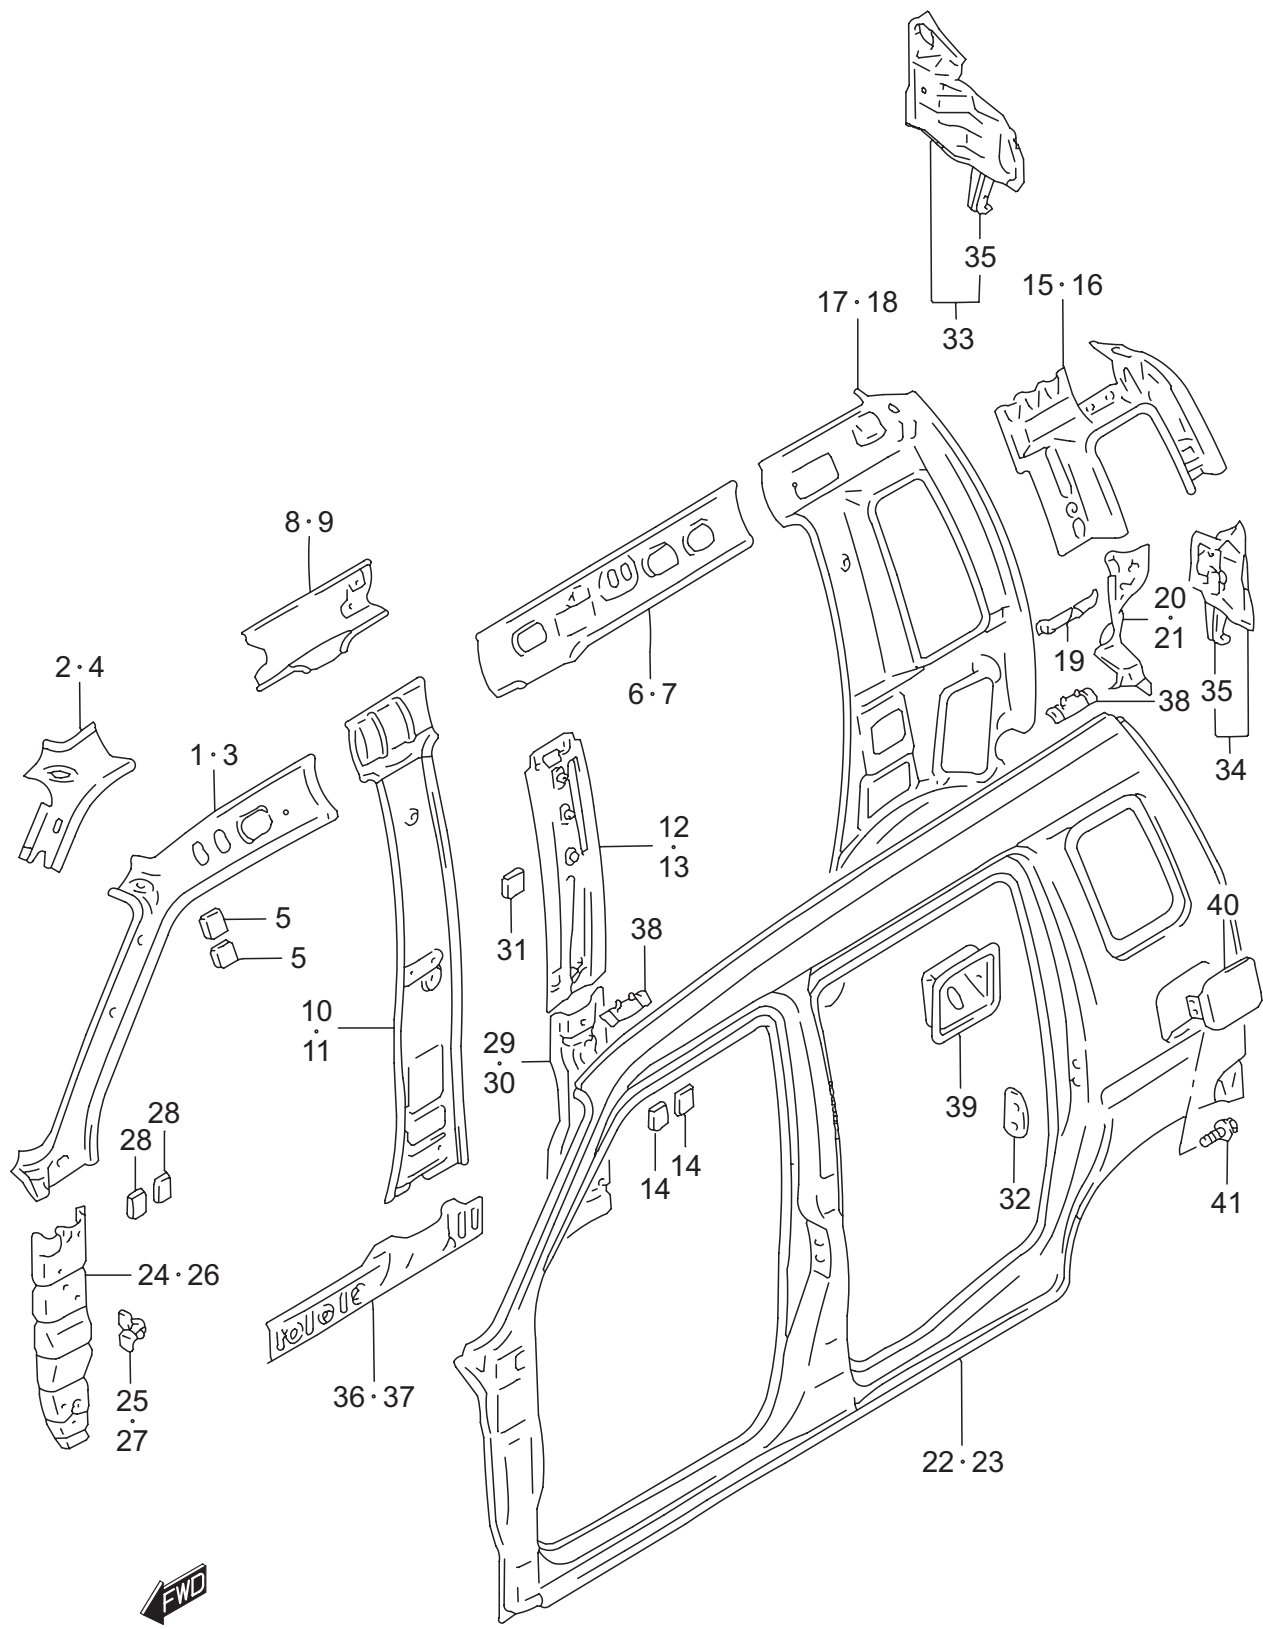


FIG.Nº.77 - SIDE BODY PANEL

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	63111-74F02	PILLAR, FR INNER UPPER RH	1	
2	63112-75F00	REINF, FR PILLAR UPPER RH	1	
3	63511-74F01	PILLAR, FR INNER UPPER LH	1	
4	63512-75F00	REINF, FR PILLAR UPPER LH	1	
5	83921-82C00	PAD	2	
6	63131-74F00	RAIL, ROOF SIDE INNER RH	1	
7	63531-74F00	RAIL, ROOF SIDE INNER LH	1	
8	63132-75F00	REINF, ROOF SIDE CENTER RH	1	
9	63532-75F00	REINF, ROOF SIDE CENTER LH	1	
10	63211-75F10	PILLAR, CENTER INNER RH	1	
11	63611-75F10	PILLAR, CENTER INNER LH	1	
12	63213-75F00	REINF, FR SEAT BELT RH	1	
13	63613-75F00	REINF, FR SEAT BELT LH	1	
14	83921-82C00	PAD	4	
15	63312-74F50	REINF, RR SEAT BELT RH	1	
16	63612-74F01	REINF, RR SEAT BELT LH	1	
17	63311-75F20	PANEL, QTR INNER RH	1	
18	63711-75F20	PANEL, QTR INNER LH	1	
19	63315-74F01	REINF, ELR	2	
20	63331-74F00	EXTENSION, QTR INNER RH	1	
21	63731-74F00	EXTENSION, QTR INNER LH	1	
22	64111-75F31	PANEL, SIDE BODY OUTER RH	1	
23	64511-75F31	PANEL, SIDE BODY OUTER LH	1	
24	64121-74F00	REINF, FR DOOR HINGE RH	1	
25	64122-82000	BRACKET, DOOR OPEN STOPPER	1	
26	64521-74F00	REINF, FR DOOR HINGE LH	1	
27	64122-82000	BRACKET, DOOR OPEN STOPPER	1	
28	83921-82C00	PAD	2	
29	64130-75810	REINF SET, RR DOOR STOPPER RH	1	
30	64530-75810	REINF SET, RR DOOR STOPPER LH	1	
31	83921-82C00	PAD	2	
32	64140-74F00	REINF, RR DOOR STRIKER	2	
33	64150-74F02	EXTENSION, SIDE OUTER RH	1	

FIG.Nº.77 - SIDE BODY PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
34	64550-74F02	EXTENSION, SIDE OUTER LH	1	
35	64153-50E01	.BRACKET, REAR BUMPER	2	
36	64161-74F00	STRENGTH, SIDE SILL RH	1	
37	64541-74F00	STRENGTH, SIDE SILL LH	1	
38	64181-74F00	REINF, ROOF RAIL	4	
39	64561-75F00	BOX, FUEL INLET	1	
40	64570-74F00	LID, FUEL INLET	1	
41	02162-05123	SCREW	2	

FIG.78

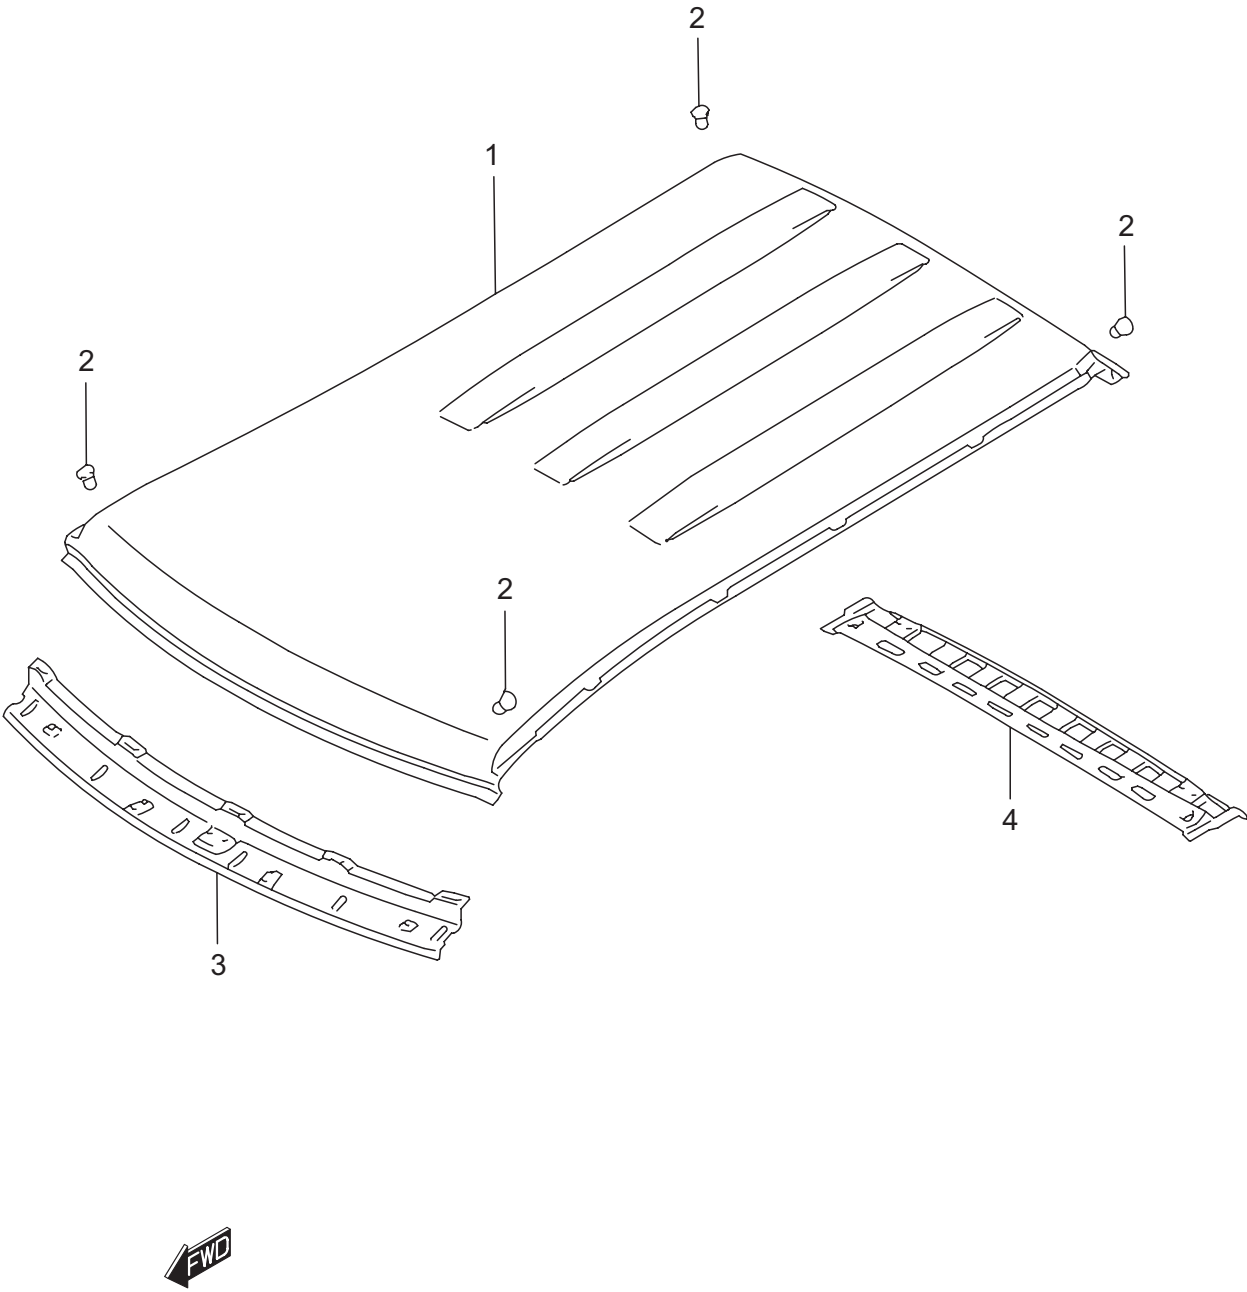


FIG.Nº.78 - ROOF PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	65111-75F00	PANEL, ROOF	1	
2	65112-84000	STAND, MOLDIDNG	4	
3	65121-75F00	FRAME, ROOF INNER FRONT	1	
4	65130-75F00	FRAME, ROOF INNER REAR	1	

FIG.79

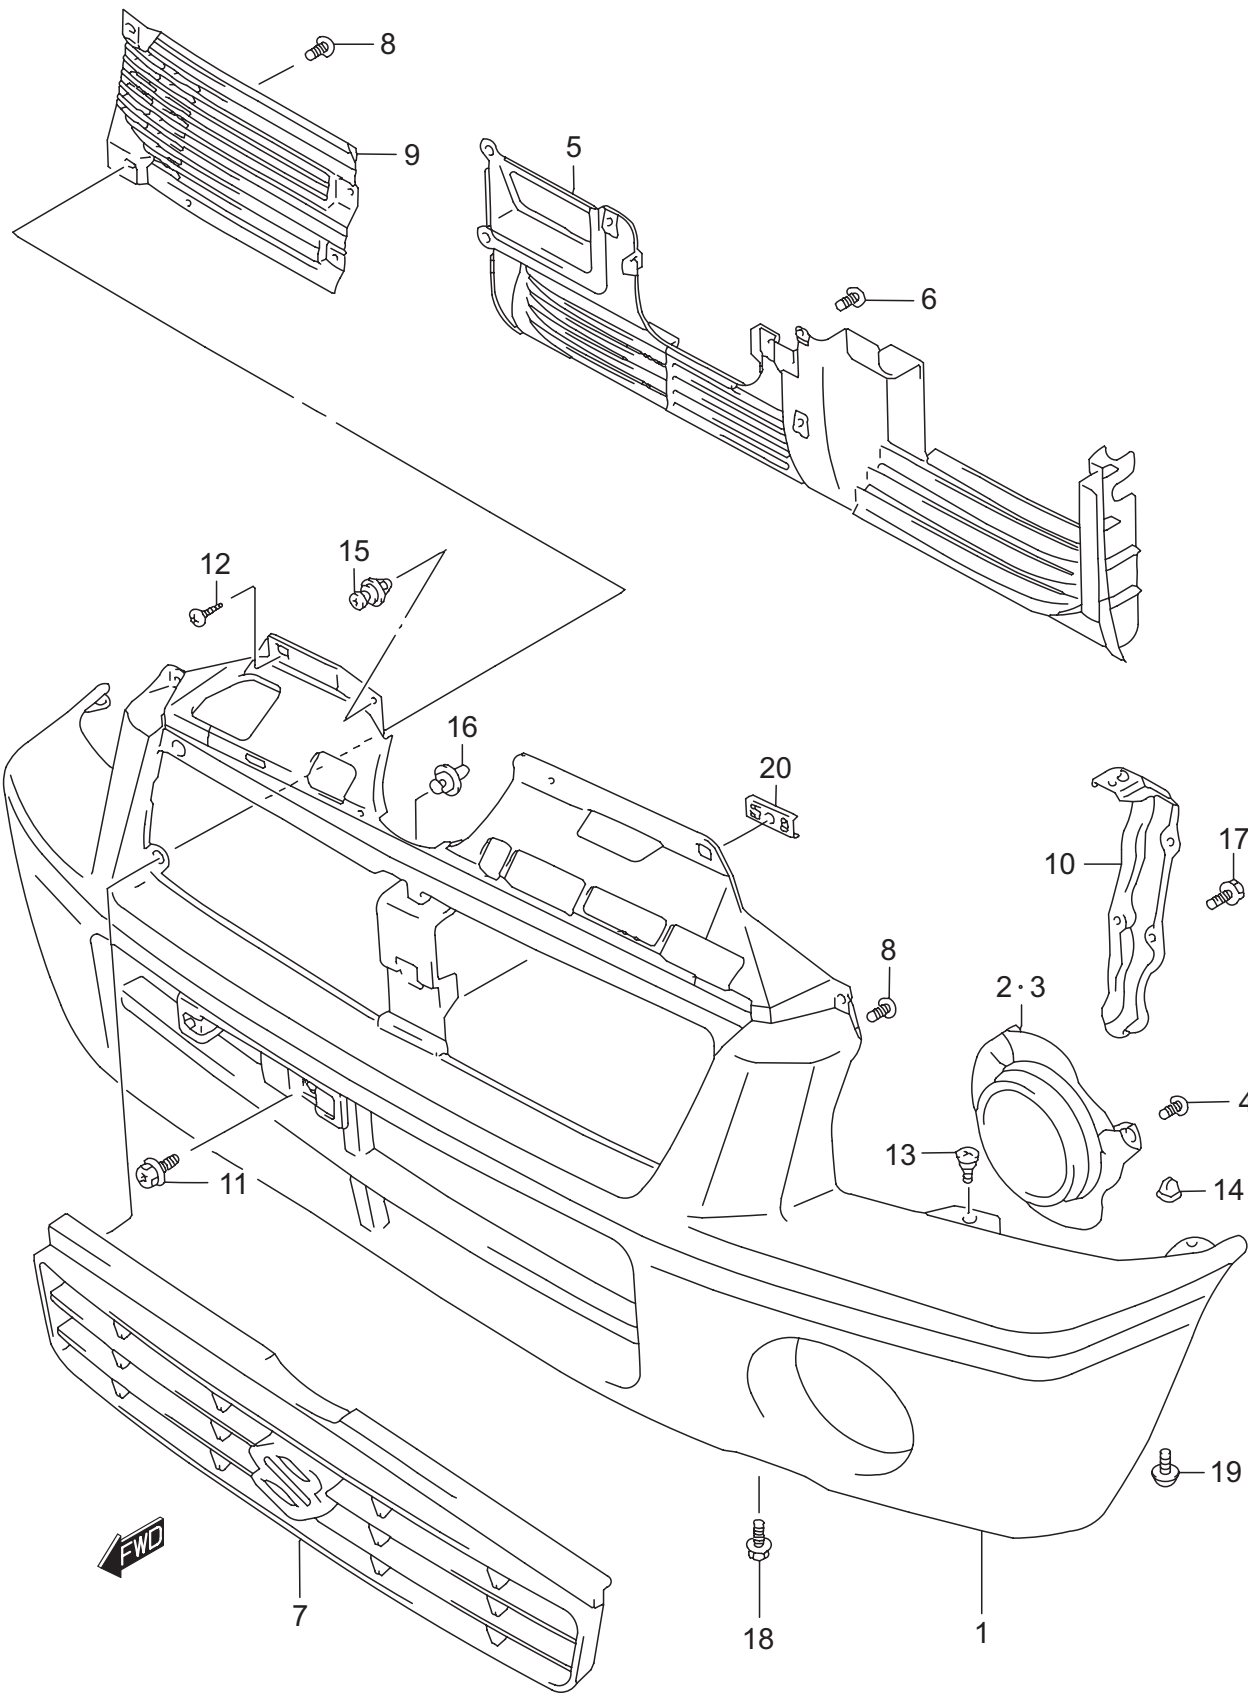


FIG.Nº.79 - FRONT BUMPER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	71711-75F40-799	BUMPER, FRONT (PRIMARY COAT)	1	PAINT TO MATCH
2	71714-75F00-799	COVER, FOG LAMP HOLE RH (PRIMARY COAT	1	PAINT TO MATCH
3	71715-75F00-799	COVER, FOG LAMP LH (PRIMARY COAT	1	PAINT TO MATCH
4	03541-05123	SCREW	6	
5	71717-75F10-5PK	GARNISH, FRONT BUMPER (BLACK)	1	
6	03541-05123	SCREW	7	
7	72111-75F00-0CC	GRILL, RADIATOR (BLACK)	1	
8	03541-05123	SCREW	8	
9	71721-75F10	PANEL, HEAT INSULATOR	1	
10	71731-74F01	STAY, FRONT BUMPER	2	
11	09111-06061	BOLT (6X16.5)	1	
12	09139-05056	SCREW (5X15.5)	2	
13	09139-06072	SCREW (6X16)	2	
14	09148-05018	NUT	2	
15	09409-06322-5PK	CLIP (BLACK)	2	
16	09409-08320	CLIP	1	
17	02162-06123	SCREW	4	
18	02162-06123	SCREW	2	
19	09136-05034	SCREW (5X16)	2	
20	71771-75F00	RETAINER, LICENSE PLATE	2	

FIG.80

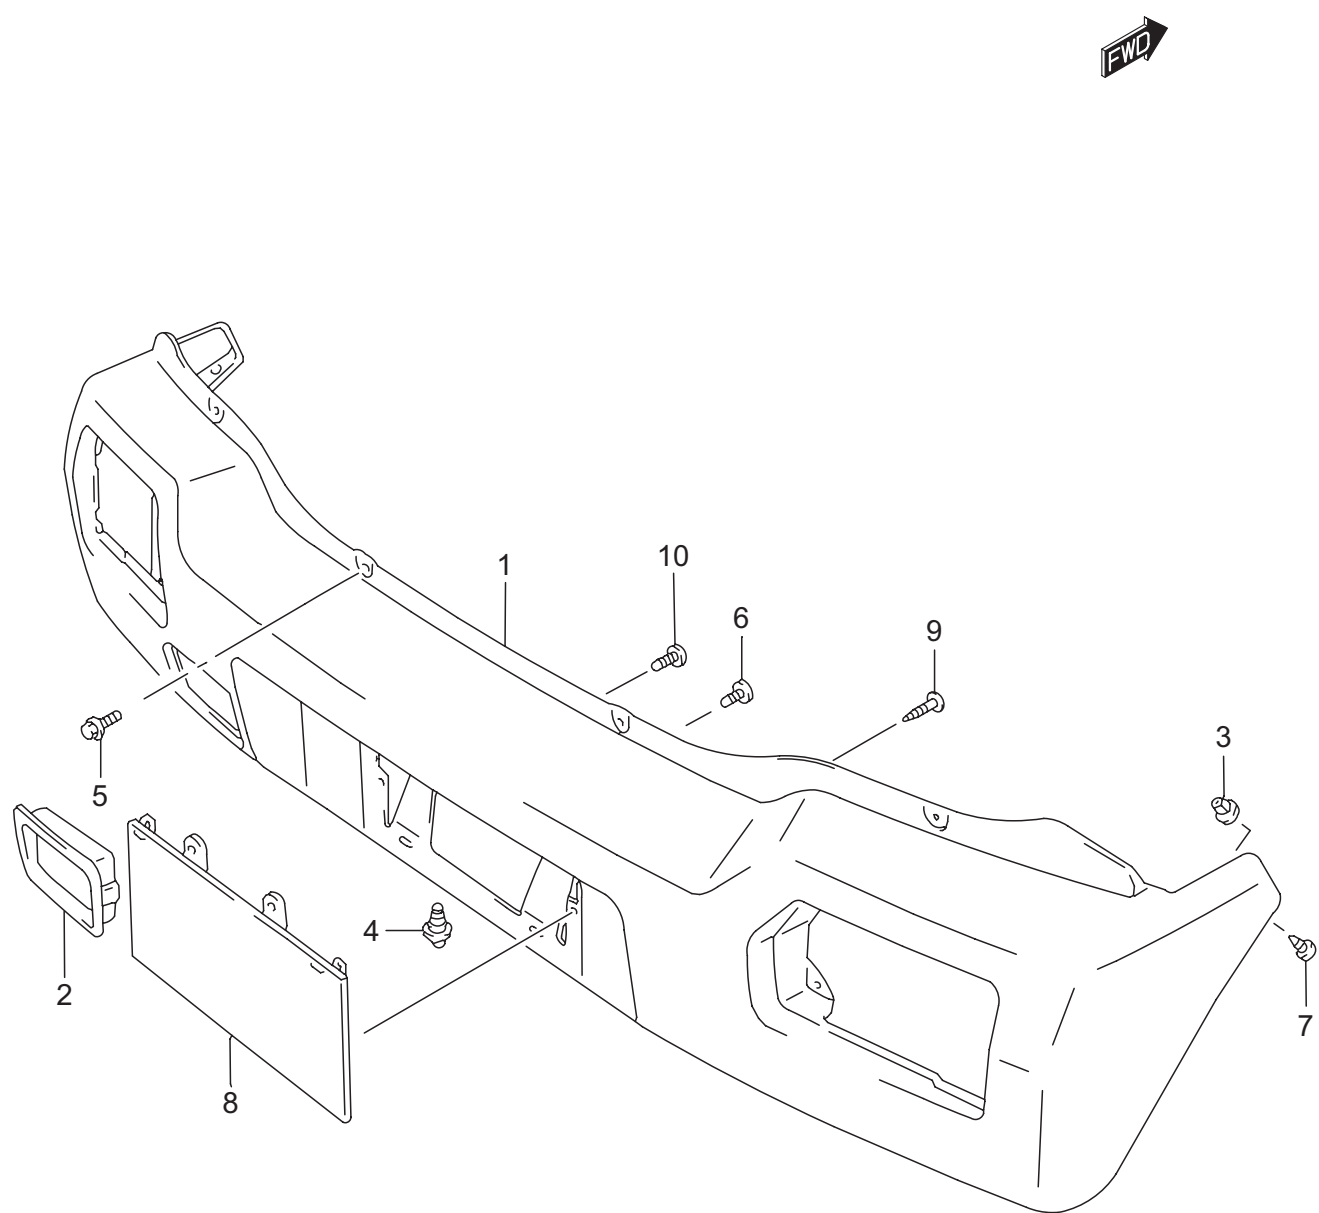


FIG.Nº.80 - REAR BUMPER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	71811-75F20-799	BUMPER, REAR (PRIMARY COAT)	1	PAINT TO MATCH
2	71817-75F00-5PK	BEZEL, RR FOG LAMP LH (BLACK)	1	
3	09148-06007	NUT	2	
4	09409-08327	CLIP	2	
5	02162-06163	SCREW	6	
6	03242-05163	SCREW, LISENCE PLATE LAMP	3	
7	03242-06163	SCREW, BUMPER SIDE	2	
8	71815-75F00-5PK	COVER, RR LICENSE PLATE (BLACK	1	
9	03242-05123	SCREW, COVER	2	
10	03242-05163	SCREW, COVER	2	

FIG.81

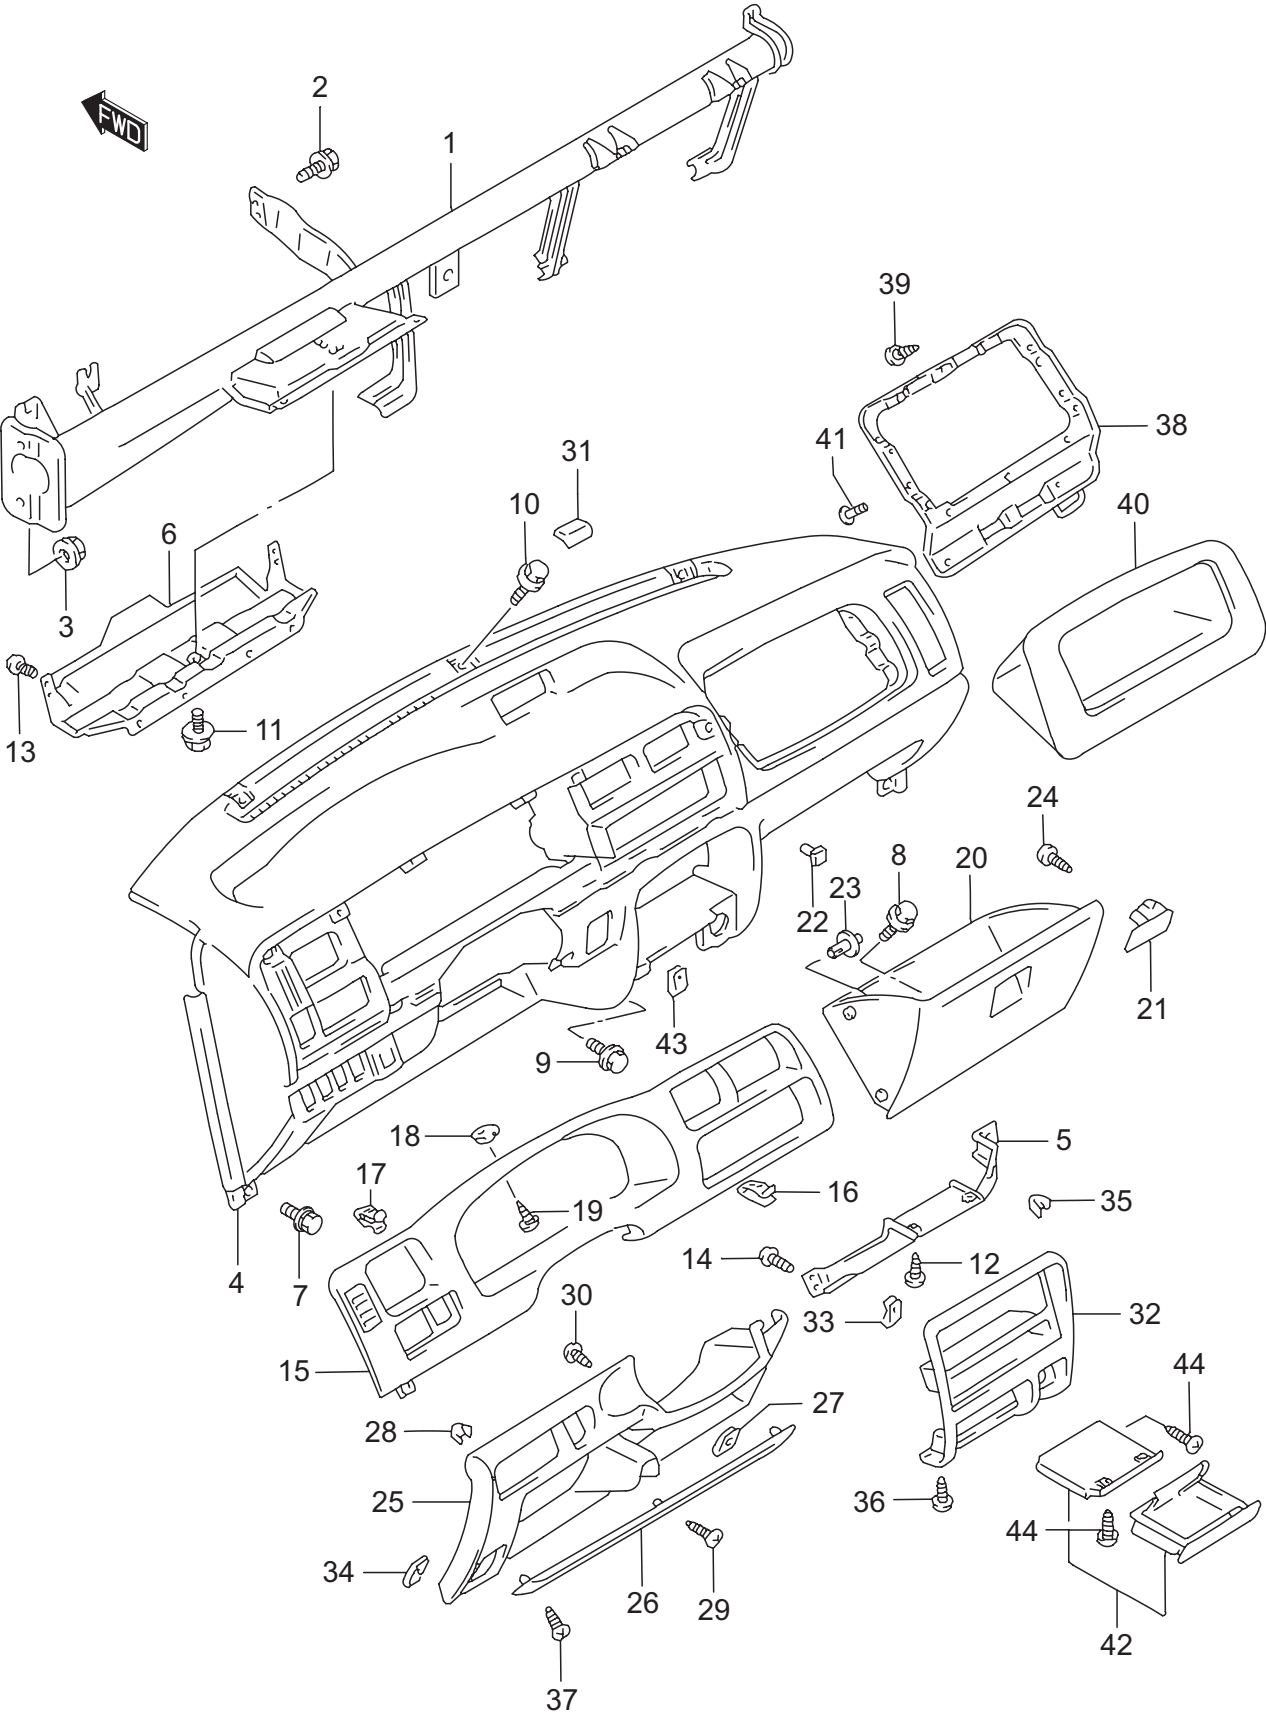


FIG.Nº.81 - INSTRUMENT PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	73210-75F30	MEMBER, STEERING SUPPORT	1	
2	01551-08163	BOLT	2	
3	08316-10083	NUT	4	
4	73111-75F10-T01	PANEL, I/P MAIN (GRAY)	1	
5	73121-75F10	STAY, I/P CTR LOWER	1	
6	73171-74F01	BRACE, I/P CENTER	1	
7	01580-06163	SCREW, I/P MAIN SIDE	2	
8	02162-06163	SCREW, GLOVE BOX	2	
9	02162-06163	SCREW, I/P DRIVER SIDE	1	
10	01580-06163	SCREW, I/P MAIN	3	
11	02162-06163	SCREW, STEERING SUPPORT	1	
12	02142-05103	SCREW, I/P STAY	2	
13	03541-05123	SCREW, CTR BRACE	4	
14	03541-05163	SCREW, I/P STAY SIDE	1	
15	73311-75F10-5PK	HOOD, METER CLUSTER (BLACK)	1	
16	73822-60E00	CLIP, I/P CENTER GARNISH	2	
17	09409-08326	CLIP	6	
18	09148-05045	NUT	3	
19	03142-05123	SCREW	3	
20	73411-75F00-T01	BOX, GLOVE (GRAY)	1	
21	73430-60G01-T01	LOCK, GLOVE BOX (GRAY)	1	
22	73461-77E00	CUSHION, GLOVE BOX DOOR SIDE	2	
23	09409-07019-5PK	CLIP (BLACK)	1	
24	02122-04123	SCREW	2	
25	73811-75F10-T01	COVER, STRG COLUMN HOLE (GRAY)	1	
26	73821-75F00-T01	TRAY, STEERING COLUMN COVER (GRAY)	1	
27	09148-05004	NUT	1	
28	09409-08326	CLIP	2	
29	03142-05123	SCREW	1	
30	03541-05123	SCREW	3	
31	73831-75F00-T01	COVER, I/P MAIN (GRAY)	3	
32	73840-75F00-5PK	GARNISH, I/P CENTER (BLACK)	1	

FIG.Nº.81 - INSTRUMENT PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
33	09148-05045	NUT, CTR GARNISH	2	
34	09148-05045	NUT, COLUMN HOLE COVER	3	
35	09409-08326	CLIP, CTR GARNISH	1	
36	03142-05123	SCREW, CTR GARNISH	2	
37	03142-05163	SCREW, COLUMN HOLE COVER	3	
38	73950-75F10	REINF, GLOVE UPPER	1	
39	03541-05163	SCREW	5	
40	73931-75F00-T01	TRAY, I/P (GRAY)	1	
41	03541-05163	SCREW	4	
42	89810-80G01-5PK	ASHTRAY, FRONT (BLACK)	1	
43	09148-05045	NUT	2	
44	03142-05123	SCREW, UPPER	3	

FIG.82

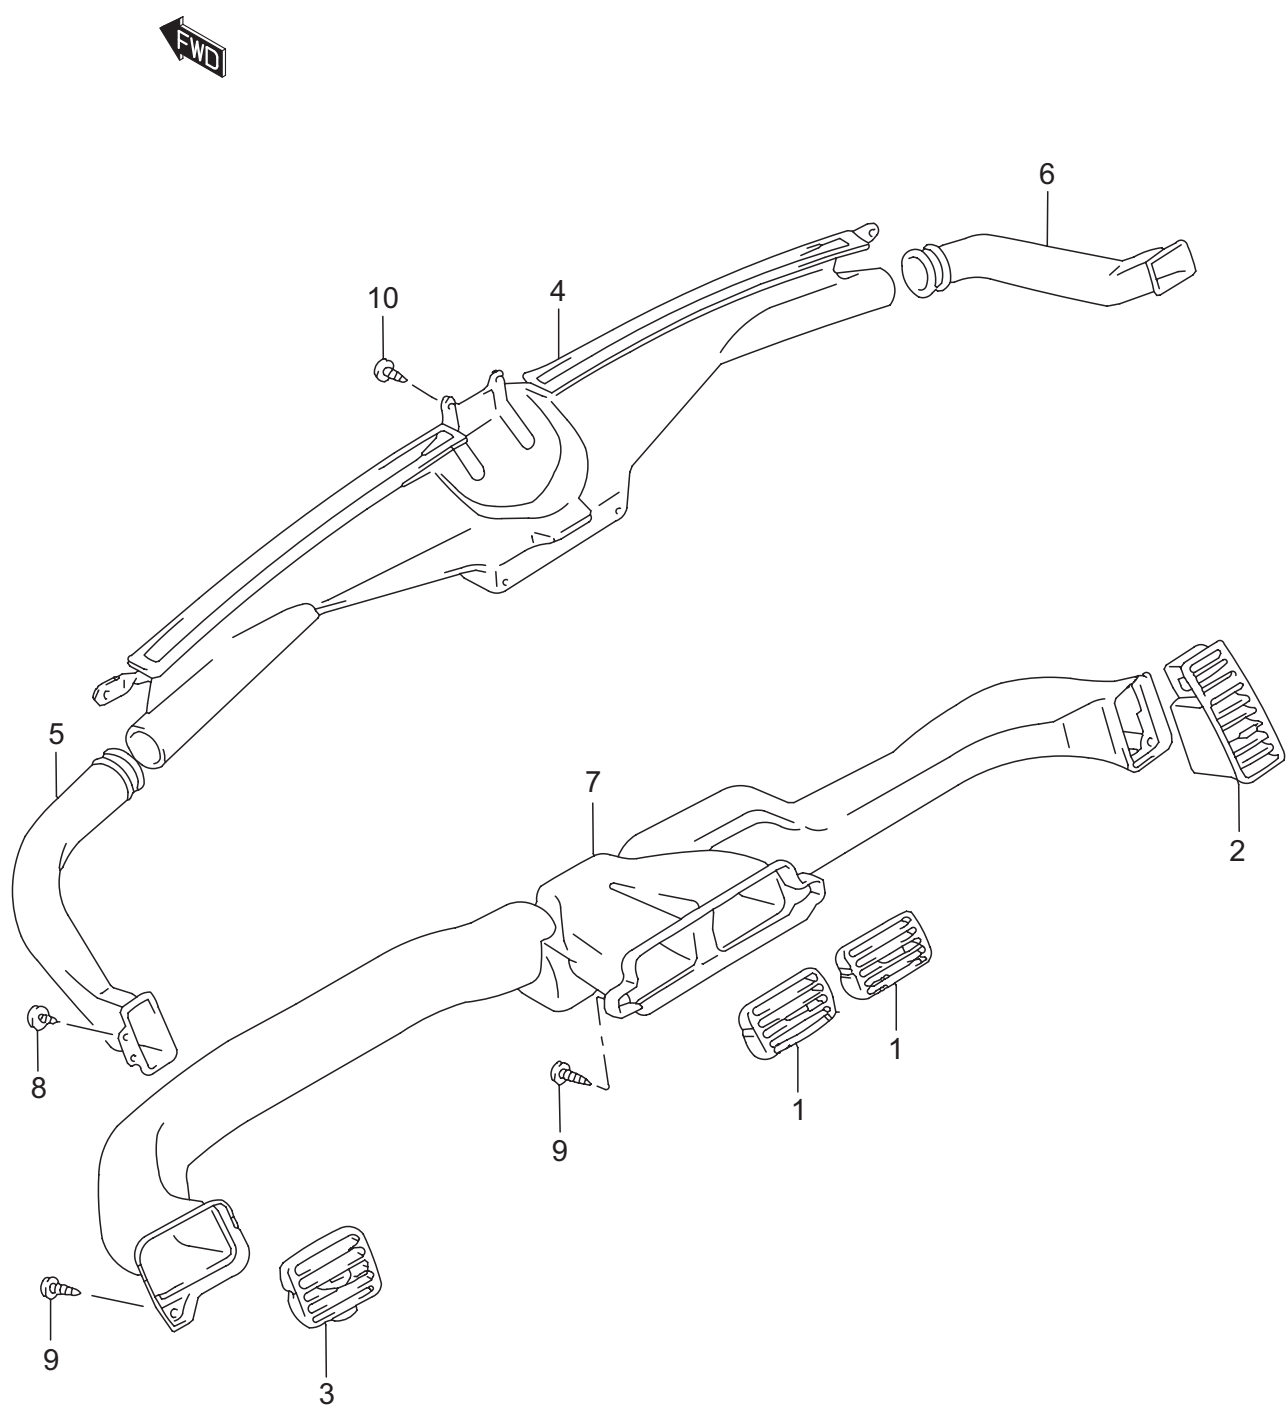


FIG.Nº.82 - VENTILATOR

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	73611-75F00-5PK	LOUVER, CTR VENT (BLACK)	2	
2	73630-75F50-T01	LOUVER, SIDE VENT (GRAY)	1	
3	73631-75F00-5PK	LOUVER, SIDE VENT (BLACK)	1	
4	73660-75F00	NOZZLE, DEFROSTER	1	
5	73681-75F50	DUCT, DEMISTER DRIVER	1	
6	73691-75F50	DUCT, DEMISTER ASSISTANT	1	
7	74620-75F50	DUCT, VENT	1	
8	03142-04123	SCREW, DEMISTER DUCT DRIVER	1	
9	03142-04123	SCREW, DUCT	5	
10	03142-04123	SCREW, NOZZLE	4	

FIG.83

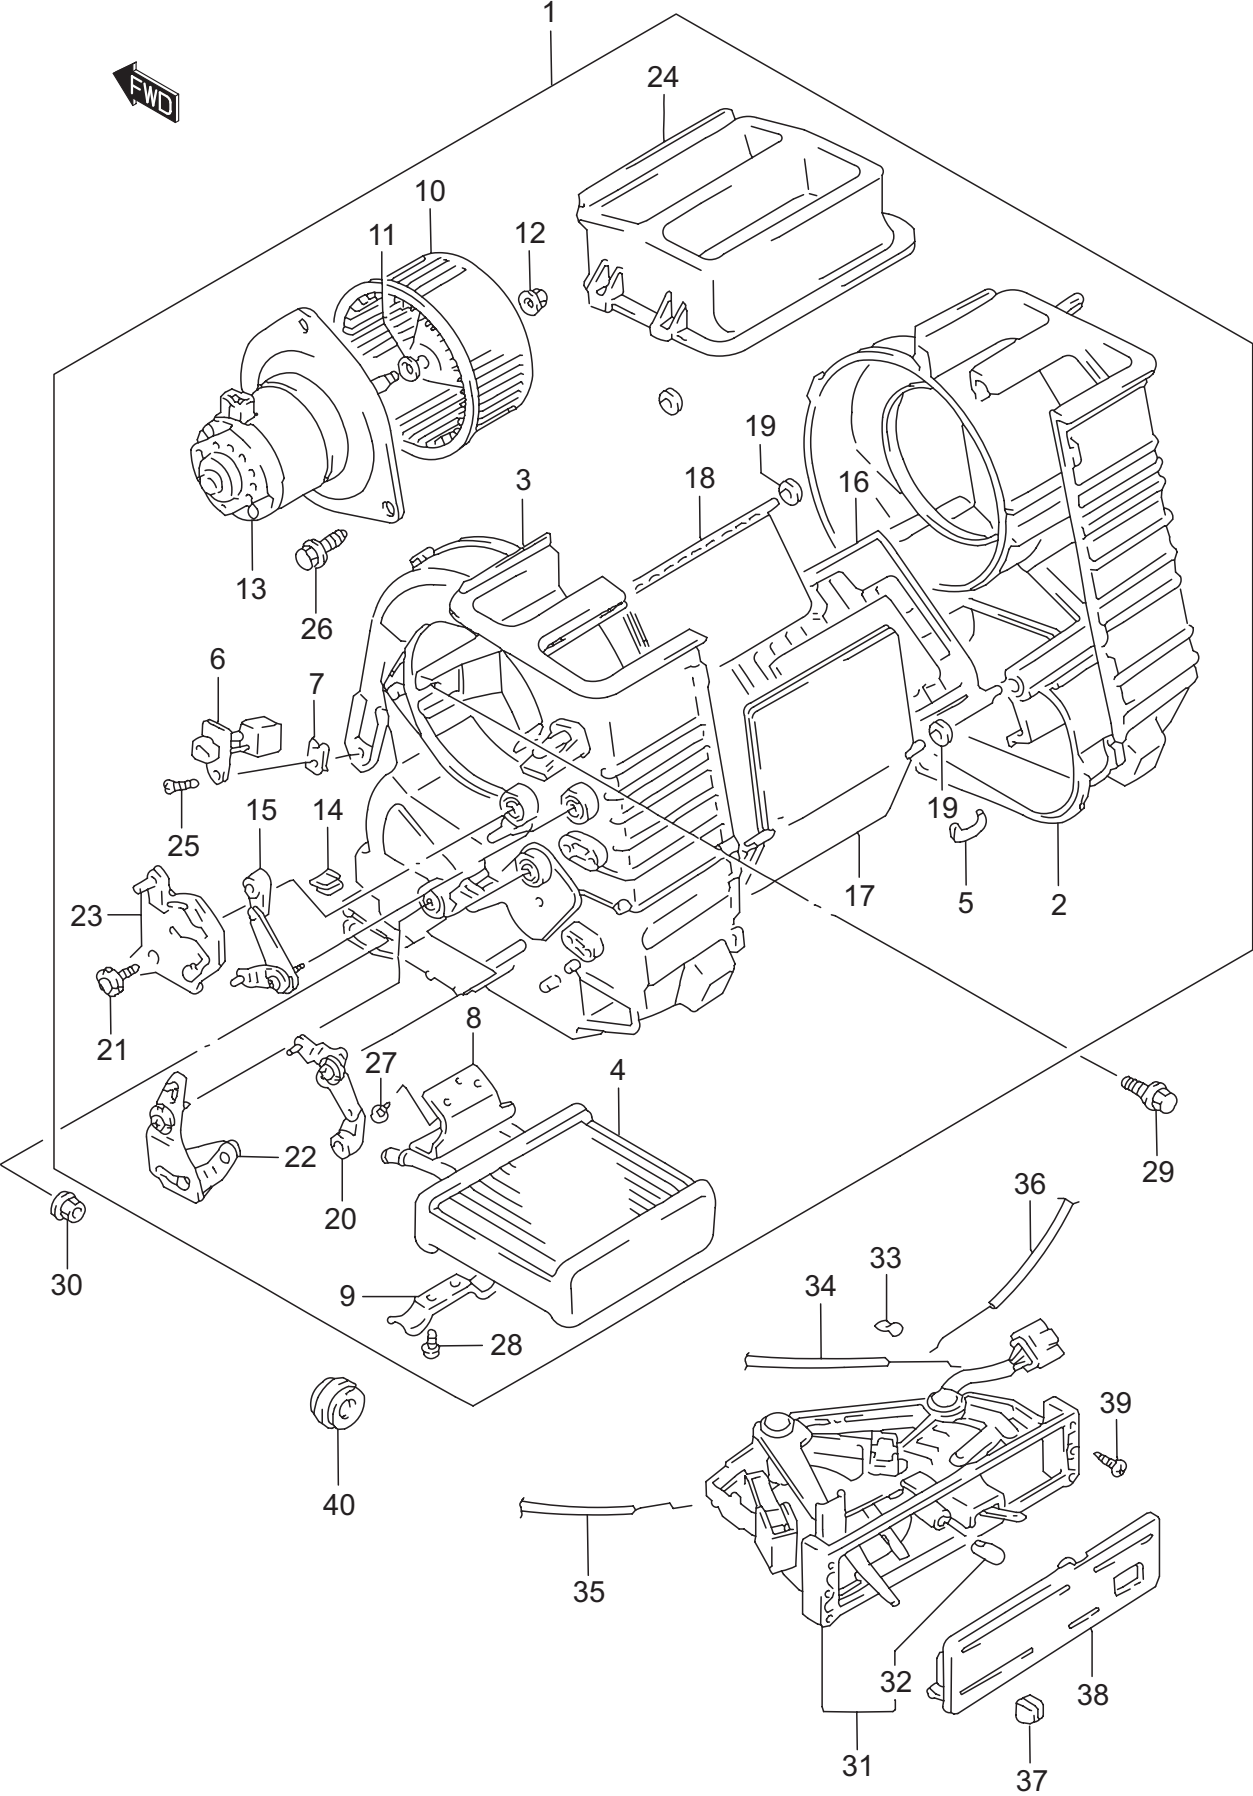


FIG.Nº.83 - HEATER UNIT

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	74100-75F50	HEATER UNIT	1	
2	74111-75F50	.CASE, HEATER RH	1	
3	74112-70F10	.CASE, HEATER LH	1	
4	74120-75F00	.CORE, HEATER	1	
5	74133-82000	.CLAMP	6	
6	74140-75F50	.RESISTOR, BLOWER	1	
7	74189-70B00	.PLATE, RESISTOR	1	
8	74141-75F50	.CLAMP, HEATER PIPE	1	
9	74142-74F00	.CLAMP, HEATER PIPE NO.2	1	
10	88140-78000	.FAN, BLOWER	1	
11	17112-82000	.WASHER, FAN	1	
12	08316-10053	.NUT	1	
13	74150-75F50	.MOTOR, BLOWER	1	
14	74151-50F00	.CLAMP	2	
15	74170-70F10	.LEVER ASSY, VENT	1	
16	74171-70F10	.DOOR, AIR MIX	1	
17	74172-70F10	.DOOR ASSY, HEATER	1	
18	74173-75F50	.DOOR ASSY, VENT	1	
19	74163-60B00	.PACKING, SHAFT	4	
20	74180-70F10	.LEVER ASSY, HEATER	1	
21	74183-82005	.SCREW, LINK	4	
22	74190-70F10	.LEVER ASSY, TEMP	1	
23	74181-75F50	.LEVER ASSY, MODE CONTROL	1	
24	74911-75F00	.ADAPTER, HEATER	1	
25	03211-04123	.SCREW, RESISTOR	1	
26	74135-82000	.SCREW, MOTOR	3	
27	03512-05123	.SCREW, HEATER PIPE CLAMP	2	
28	02112-05103	.SCREW, HEATER PIPE CLAMP	1	
29	09116-06167	BOLT (6X20)	2	
30	09159-06081	NUT	2	
31	74400-75F50	LEVER ASSY, HEATER CONTROL	1	
32	74517-70B00	.BULB	1	
33	74441-70B00	HOLDER, HEATER CABLE	3	

FIG.Nº.83 - HEATER UNIT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
34	74451-75F50	CABLE, MODE CONTROL (L:375) (NATURAL)	1	
35	74452-75F50	CABLE, TEMP CONTROL (L:440) (BLACK)	1	
36	74453-75F50	CABLE, FRESH AIR CONTROL (L:1035)(BLUE)	1	
37	74461-60F02	KNOB, HEATER CONTROL	4	
38	74510-61D00	PANEL, HEATER CONTROL	1	
39	03142-05123	SCREW	4	
40	74812-60B00	GROMMET, HEATER	2	

FIG.84

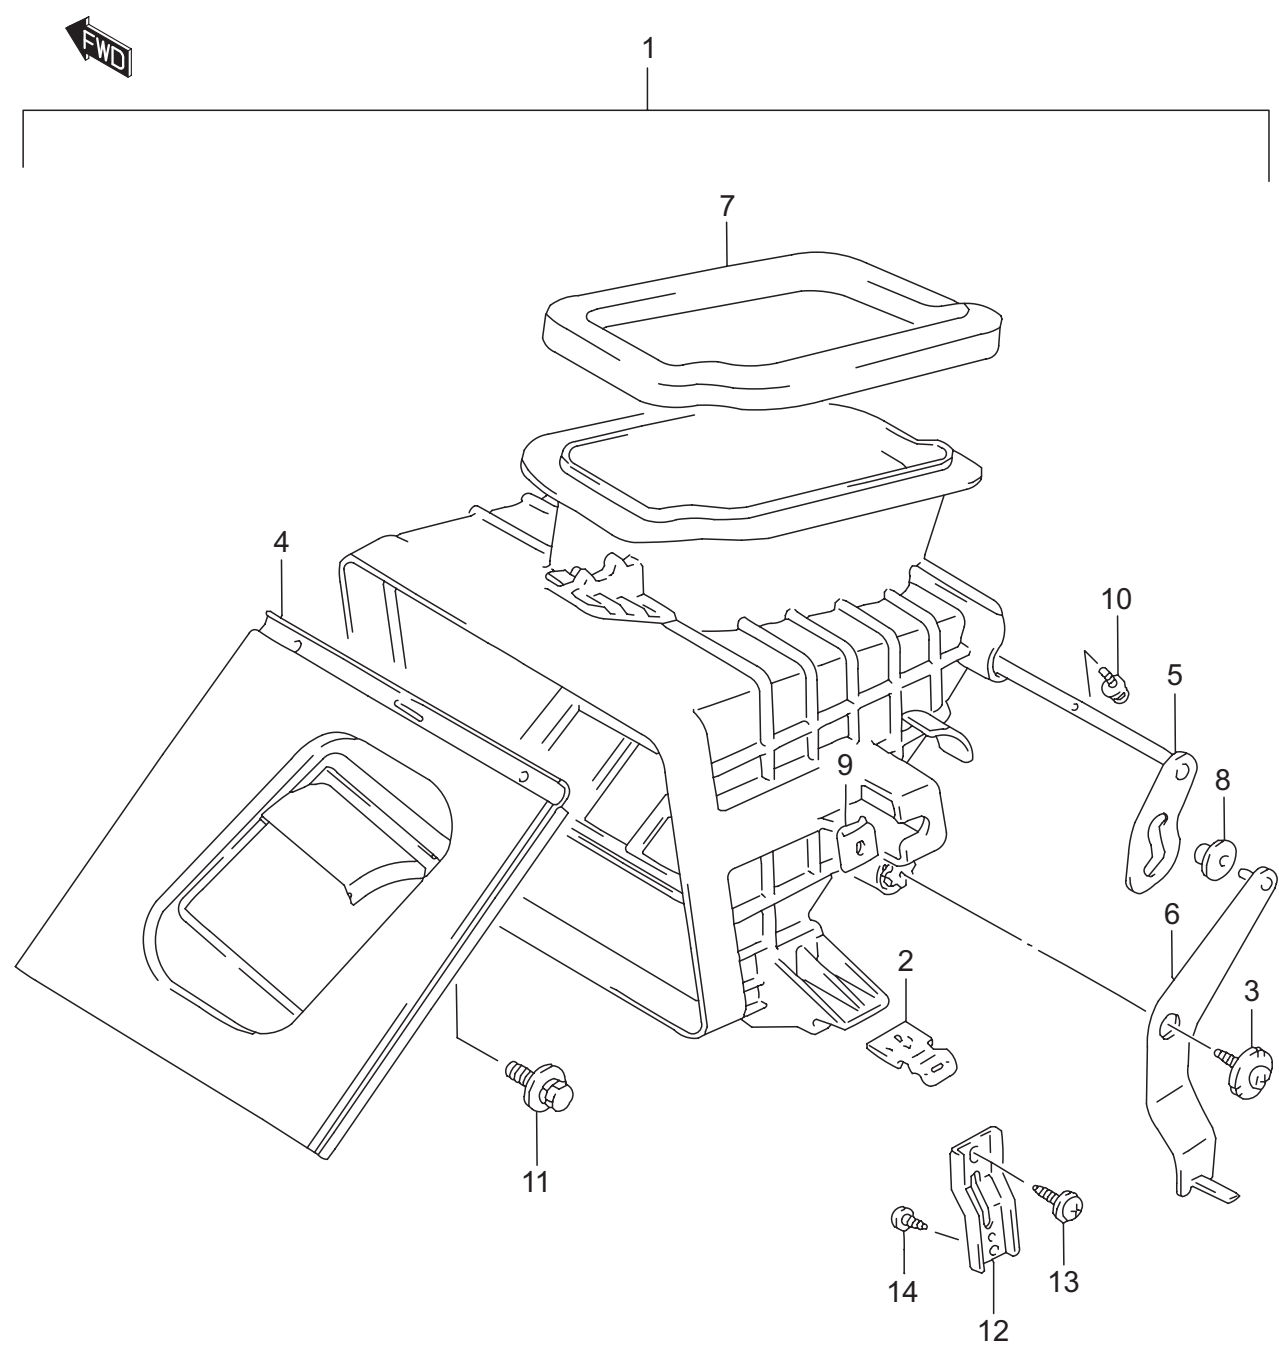


FIG.Nº.84 - AIR DAMPER CASE

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	74200-70F10	CASE ASSY, AIR INLET	1	
2	74151-50F00	.CLAMP	1	
3	74183-82005	.SCREW, LINK	1	
4	74271-70F10	.DOOR, FRESH	1	
5	74272-70F10	.SHAFT, DOOR	1	
6	74281-70F10	.LEVER, FRESH DOOR	1	
7	74215-70F00	.PACKING	1	
8	74189-64A00	.BUSH, LEVER	1	
9	74217-70B00	.NUT	1	
10	02112-33083	.SCREW, FRESH DOOR	2	
11	02162-06163	SCREW	1	
12	74292-75F00	BRACKET, AIR INLET BOX	1	
13	09136-06114	SCREW (6X16)	1	
14	03541-05163	SCREW	1	

FIG.85

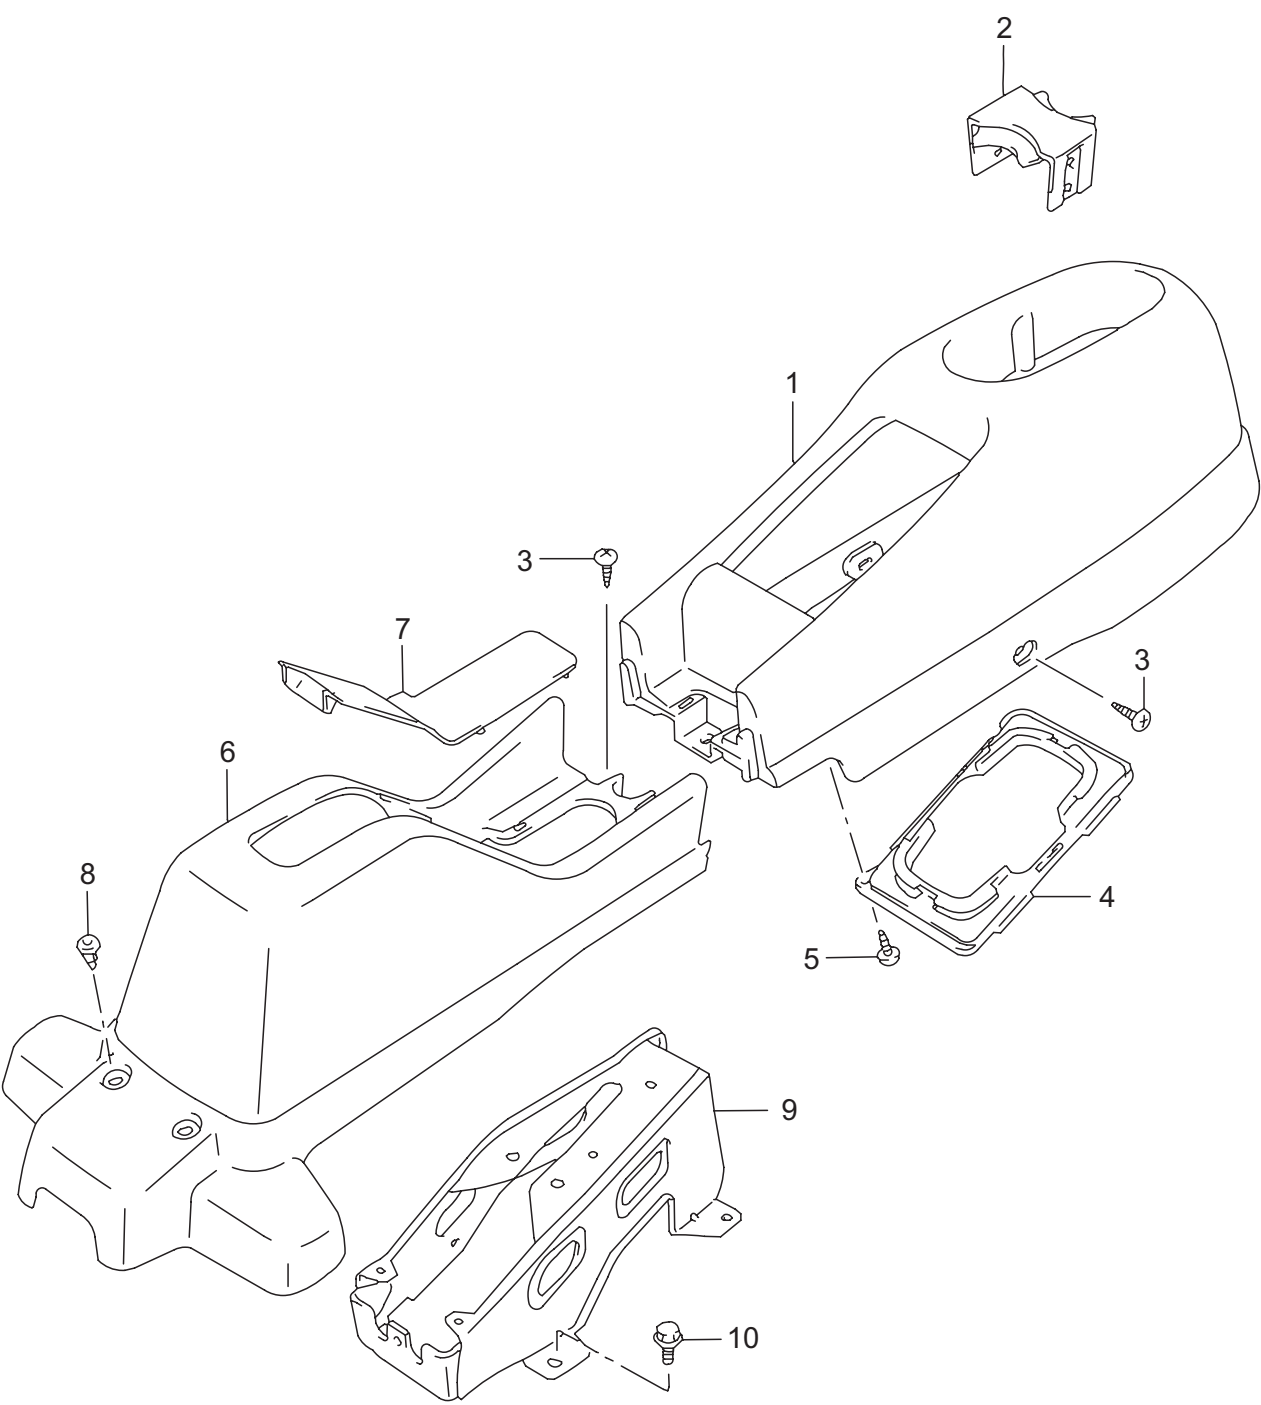


FIG.Nº.85 - CONSOLE BOX

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	75811-75F00-T01	BOX, FLOOR CONSOLE FR (GRAY)	1	
2	75820-75F00-T01	HOLDER, CUP (GRAY)	1	
3	03142-05163	SCREW	3	
4	75813-74F00-5PK	BRACKET, GEAR SHIFT BOOT (BLACK)	1	MT
5	03242-05163	SCREW	2	MT
6	75871-75F00-T01	BOX, FLOOR CONSOLE RR (GRAY)	1	
7	75812-75F00-T01	CAP, CONSOLE BOX (GRAY)	1	
8	09409-06314-T01	CLIP (GRAY)	2	
9	75610-75F00	BRACKET, PARKING LEVER	1	
10	01550-06123	BOLT	5	

FIG.86

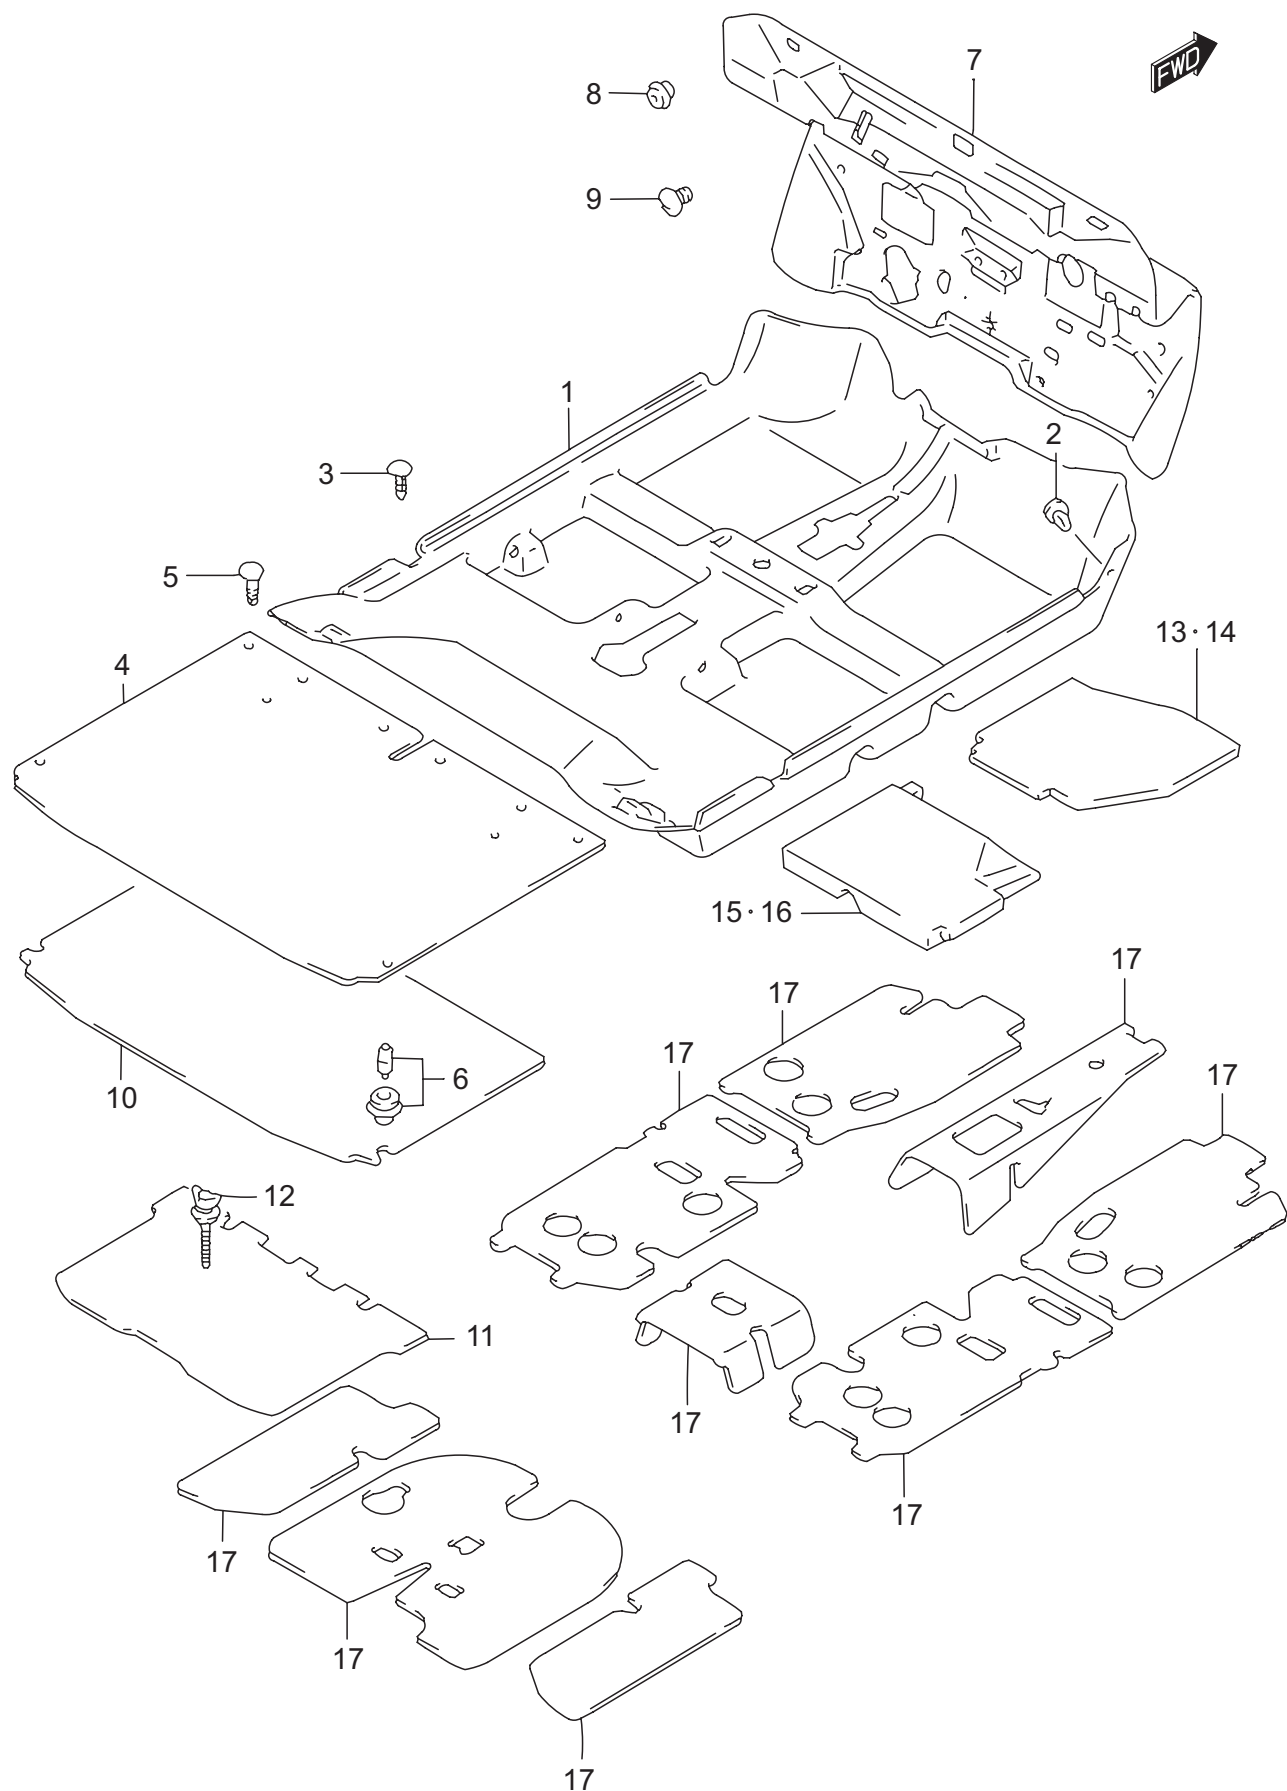


FIG.Nº.86 - FLOOR CARPET

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	75110-75F11-S01	CARPET, FLOOR (GRAY)	1	
2	09409-05307-T01	CLIP (GRAY)	2	
3	09409-06312-T01	CLIP (GRAY)	2	
4	75130-75F00-S01	CARPET, LUGGAGE FLOOR (GRAY)	1	
5	09409-10302-T01	CLIP (GRAY)	2	
6	09410-00067	MALE, HOOK	2	
7	75220-75F12	SILENSER, DASH PANEL	1	
8	09148-05037	NUT	3	
9	09148-05042	NUT	3	
10	75252-75F00	PAD, LUGGAGE FLOOR	1	
11	75440-75F10	COVER, SPARE TIRE	1	
12	75463-70B00	SCREW, SPARE TIRE	1	
13	75511-75F00	PAD, MAIN FLOOR UPPER FR RH	1	
14	75521-75F00	PAD, MAIN FLOOR UPPER FR LH	1	
15	75531-75F00	PAD, MAIN FLOOR UPPER RR RH	1	
16	75541-75F00	PAD, MAIN FLOOR UPPER RR LH	1	
17	99611-60A01	SHEET, SILENCER (800X1000X3)	AR	CUT AS REQUIRED

FIG.87

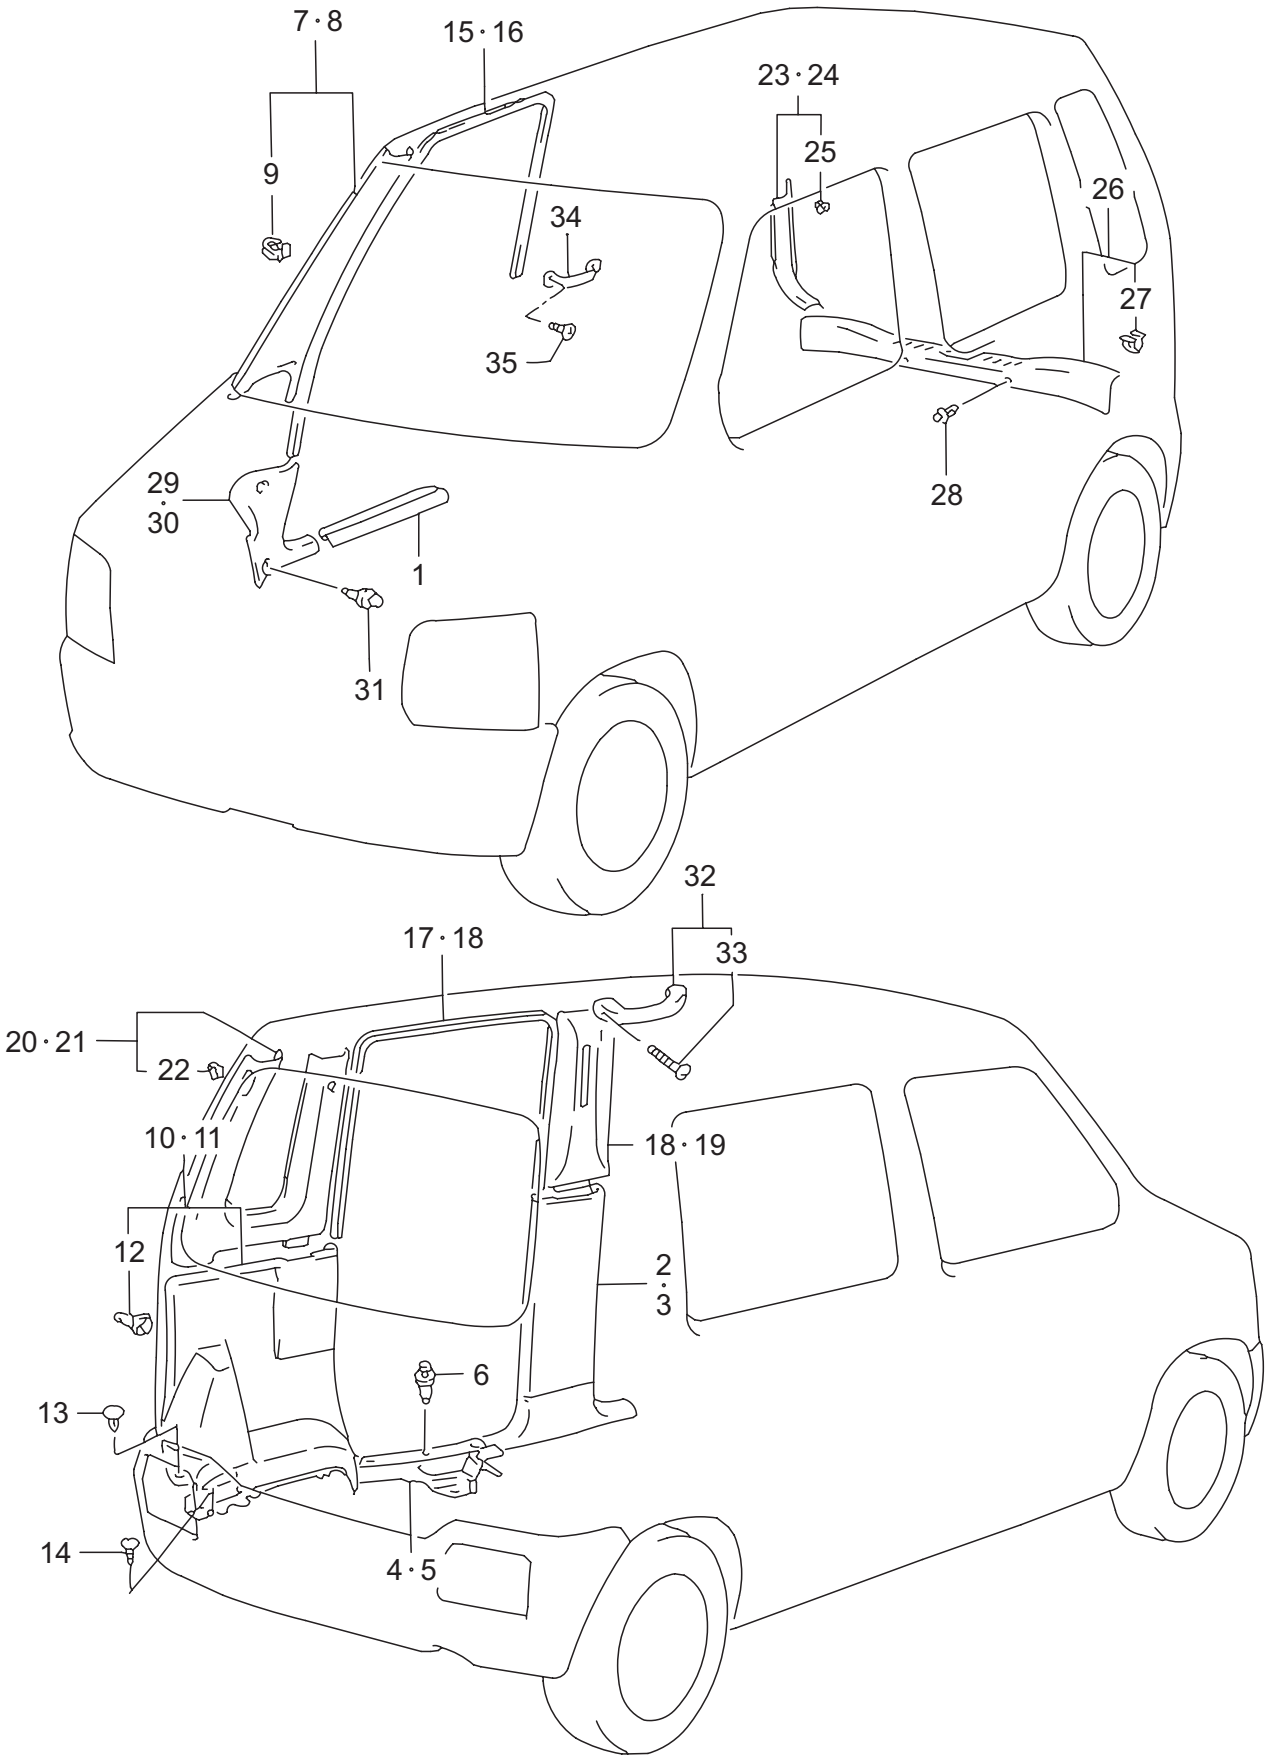


FIG.Nº.87 - INTERIOR TRIM

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	76141-74F10-T01	SCUFF, SIDE SILL FR (GRAY)	2	
2	76161-75F00-T01	GARNISH, CTR PILLAR INNER RH (GRAY)	1	
3	76171-75F00-T01	GARNISH, CTR PILLER INNER LH (GRAY)	1	
4	76151-74F10-T01	SCUFF, SIDE SILL RR RH (GRAY)	1	
5	76191-74F10-T01	SCUFF, SIDE SILL RR LH (GRAY)	1	
6	09409-07308-T01	CLIP (GRAY)	2	
7	76210-74F00-6GS	TRIM, FR PILLAR RH (GRAY)	1	
8	76220-74F00-6GS	TRIM, FR PILLAR LH (GRAY)	1	
9	09409-10308	.CLIP	4	
10	76230-75F00-T01	TRIM, QTR INNER RH (GRAY)	1	
11	76240-75F00-T01	TRIM, QTR INNER LH (GRAY)	1	
12	09409-08317	.CLIP	6	
13	09409-07323-T01	CLIP (GRAY)	2	
14	03142-05123	SCREW	4	
15	76291-75F00-5PK	TRIM, FR DOOR OPENING RH (BLACK)	1	
16	76296-75F00-5PK	TRIM, FR DOOR OPENING LH (BLACK)	1	
17	76292-75F00-5PK	TRIM, RR DOOR OPENING (BLACK)	2	
18	76181-75F00-6GS	TRIM, CENTER PILLAR UPPER RH (GRAY)	1	
19	76281-75F00-6GS	TRIM, CENTER PILLAR UPPER LH (GRAY)	1	
20	76310-74F50-6GS	TRIM, QTR INNER UPPER RH (GRAY)	1	
21	76320-74F00-6GS	TRIM, QTR INNER UPPER LH (GRAY)	1	
22	09409-10308	.CLIP	10	
23	76330-74F00-T01	TRIM, QTR INNER RR RH (GRAY)	1	
24	76340-74F00-T01	TRIM, QTR INNER RR LH (GRAY)	1	
25	09409-10308	.CLIP	8	

FIG.Nº.87 - INTERIOR TRIM

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
26	76350-75F01-T01	TRIM, TAIL END MEMBER (GRAY)	1	
27	09409-10308	.CLIP	8	
28	09409-07308-T01	CLIP (GRAY)	2	
29	76121-75F00-T01	TRIM, DASH SIDE RH (GRAY)	1	
30	76131-75F10-T01	TRIM, DASH SIDE LH (GRAY)	1	
31	09409-07308-T01	CLIP (GRAY)	4	
32	76400-70820-6GS	GRIP, ASSISTANT (GRAY)	1	
33	09139-06104	.SCREW (6X26)	2	
34	76163-62D00	HOLDER, SEAT BELT	2	
35	02142-06123	SCREW	4	

FIG.88

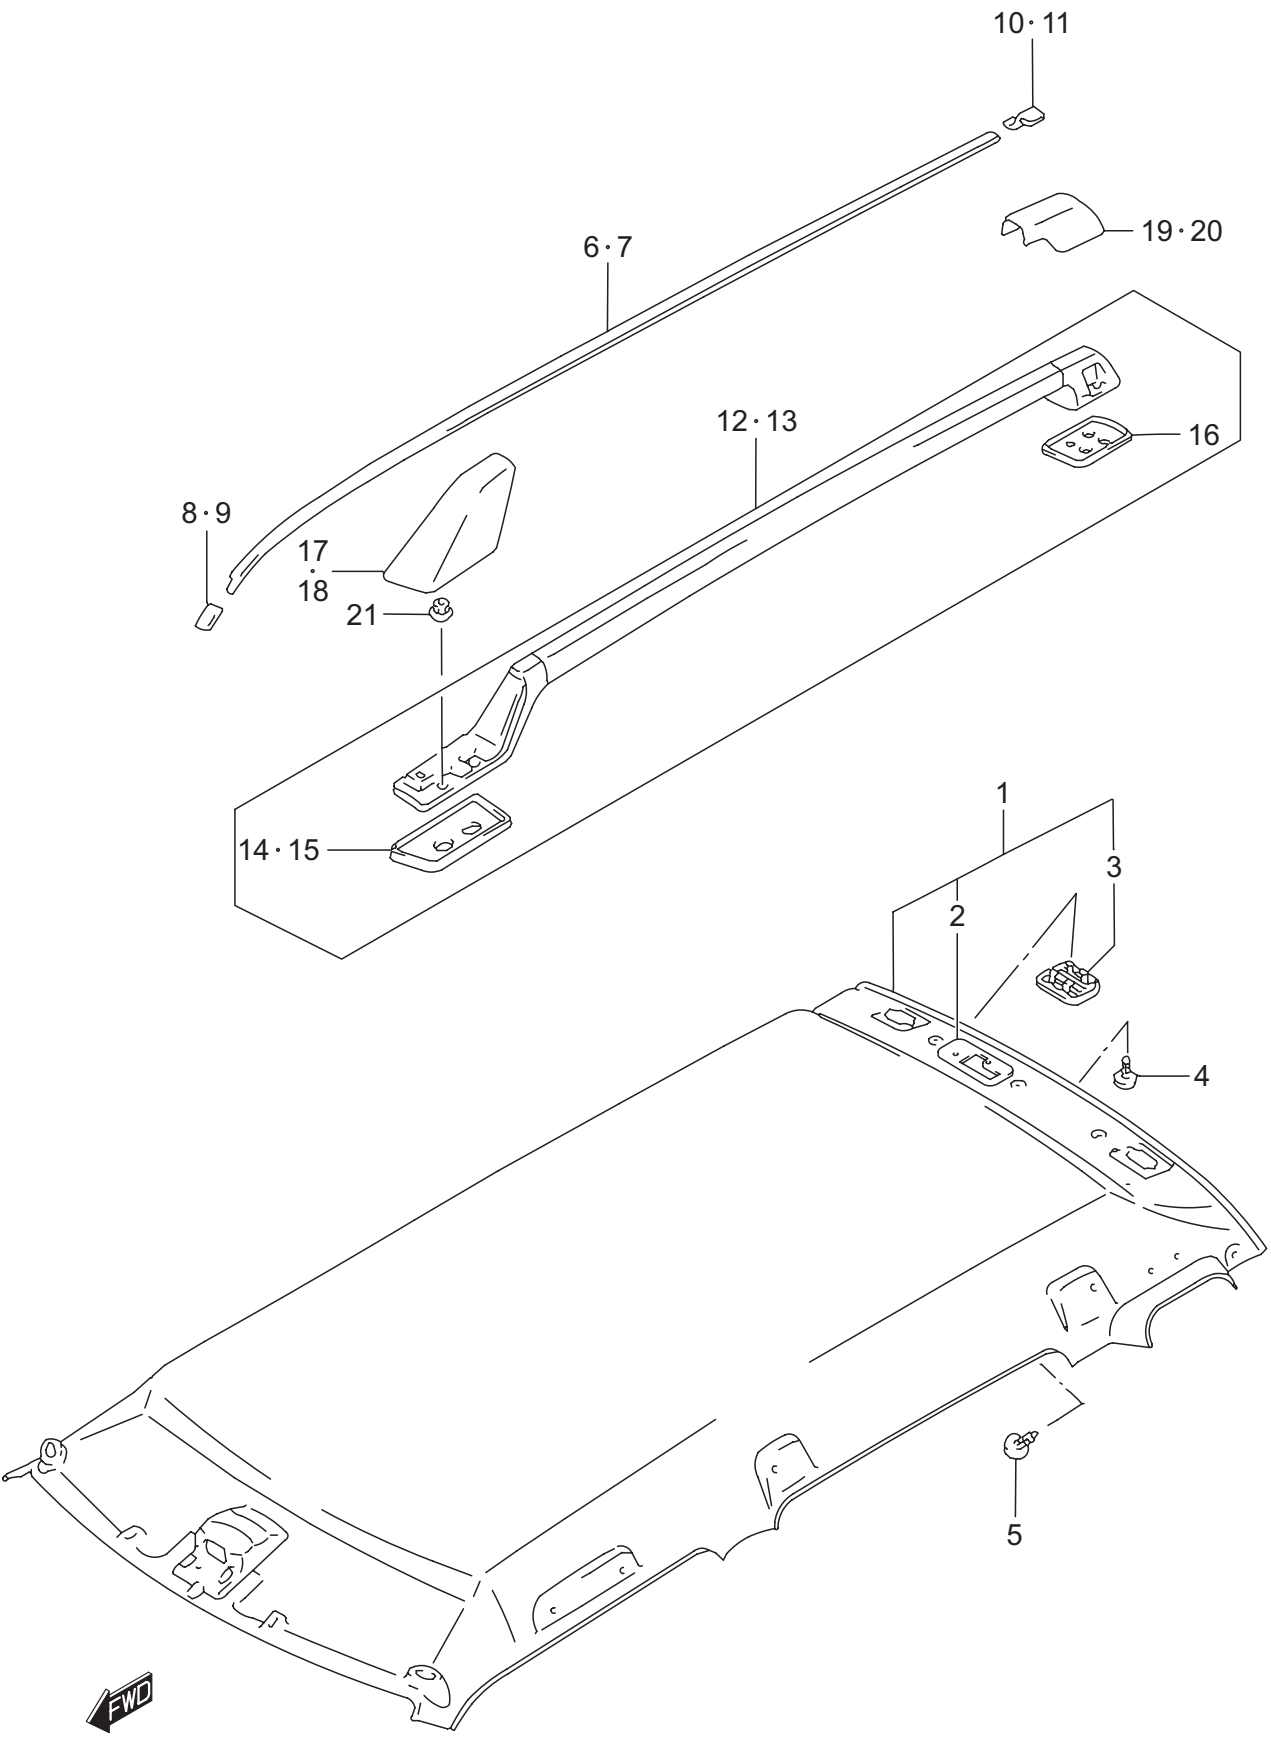


FIG.Nº.88 - ROOF LINING

REF.Nº. PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	78110-75F10-6NW	LINING, ROOF (GRAY)	1
2	78112-74F00	.RETAINER, ROOM LAMP	1
3	78131-50E00-6GS	.GARNISH, HINGE HOLE (GRAY)	2
4	09409-05312-6GS	CLIP (GRAY)	3
5	09409-06326-6GS	CLIP (GRAY)	12
6	78151-74F10	MOLDING, ROOF RH	1
7	78161-74F10	MOLDING, ROOF LH	1
8	78152-50E01	END, ROOF MOLDING FR RH	1
9	78162-50E01	END, ROOF MOLDING FR LH	1
10	78153-50E00	END, ROOF MOLDING RR RH	1
11	78163-50E00	END, ROOF MOLDING RR LH	1
12	78210-74F10-1YW	RAIL, ROOF RH (BLACK)	1
13	78220-74F10-1YW	RAIL, ROOF LH (BLACK)	1
14	78214-74F00	.SEAL, ROOF RAIL BASE FR RH	1
15	78224-74F00	.SEAL, ROOF RAIL BASE FR LH	1
16	78215-74F10	.SEAL, ROOF RAIL BASE RR	2
17	78216-74F10-1YW	CAP, ROOF RAIL FR RH (BLACK)	1
18	78226-74F10-1YW	CAP, ROOF RAIL FR LH (BLACK)	1
19	78217-74F10-1YW	CAP, ROOF RAIL RR RH (BLACK)	1
20	78227-74F10-1YW	CAP, ROOF RAIL RR LH (BLACK)	1
21	08361-25063	NUT	8

FIG.89

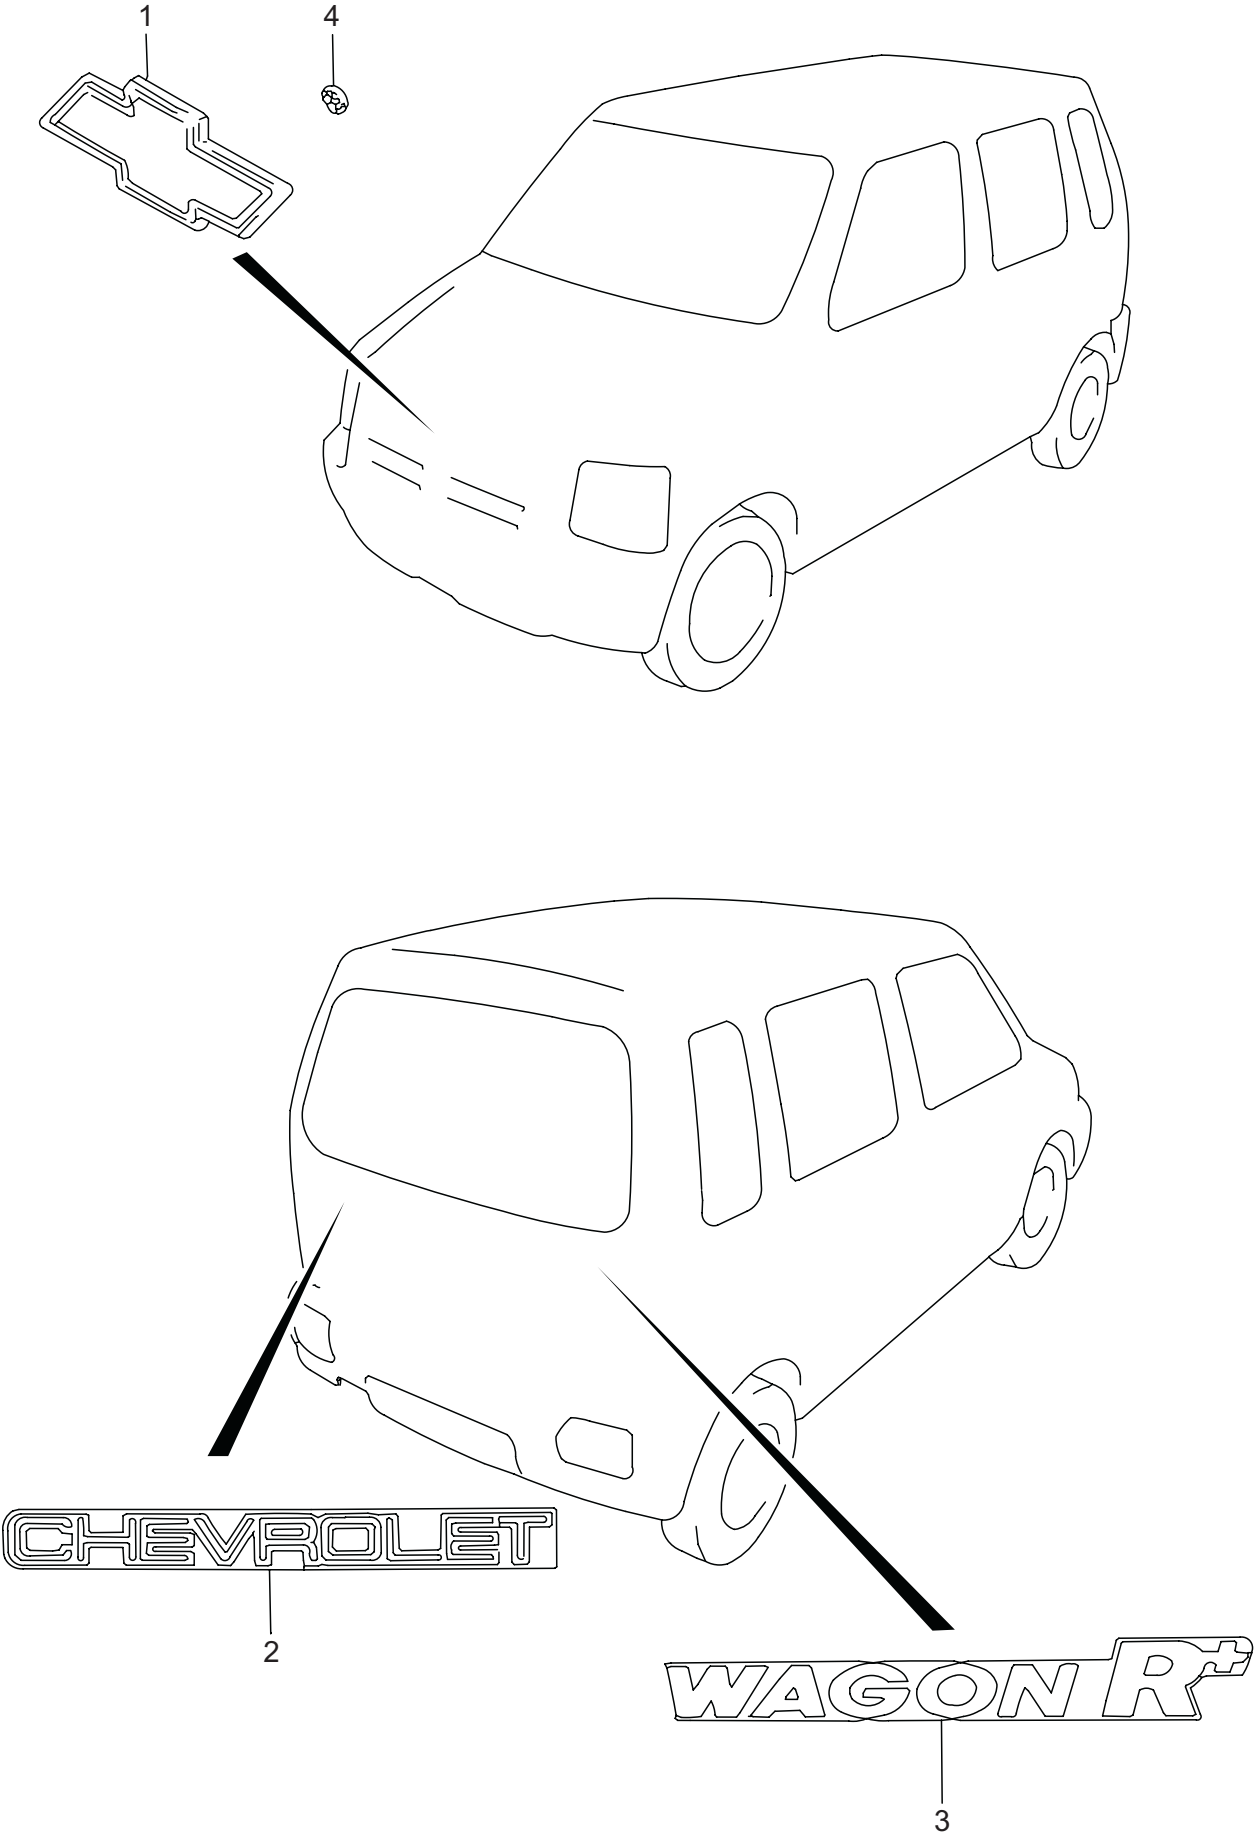


FIG.Nº.89 - EMBLEM / DECAL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	77810-75F01	EMBLEM, TOP BOW-TIE	1	
2	77821-75F10-21G	DECAL, CHEVROLET	1	
3	77831-75F10-21G	DECAL, WAGON R+	1	
4	09148-04010	NUT, EMBLEM	2	

FIG.90

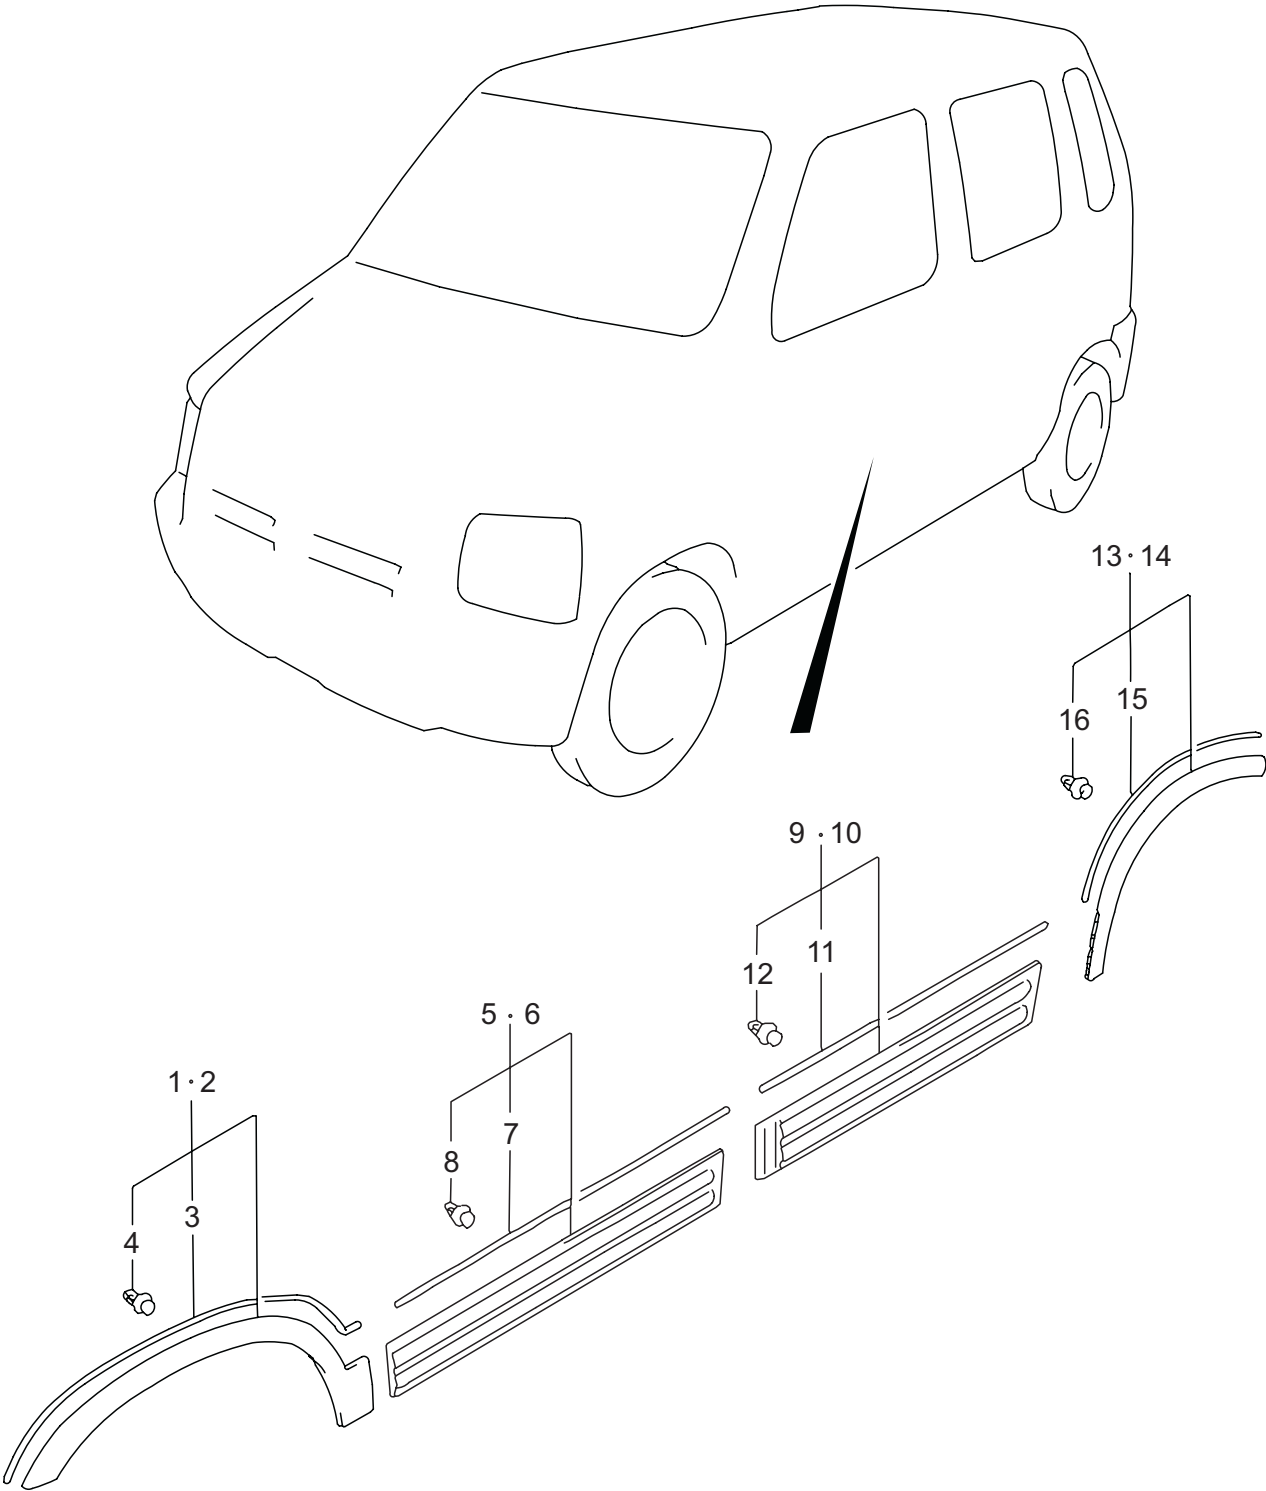


FIG.Nº.90 - SPLASH GUARD

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1-1	77510-75F02-Z2A	GUARD, FENDER SPLASH RH (RED)	1	
1-2	77510-75F02-Z2C	GUARD, FENDER SPLASH RH (PURPLE)	1	
1-3	77510-75F02-Z2S	GUARD, FENDER SPLASH RH (SILVER)	1	
1-4	77510-75F02-Z2T	GUARD, FENDER SPLASH RH (GREEN)	1	
1-5	77510-75F02-Z2Z	GUARD, FENDER SPLASH RH (GOLD)	1	
1-6	77510-75F02-Z4A	GUARD, FENDER SPLASH RH (BLUE)	1	
1-7	77510-75F02-26U	GUARD, FENDER SPLASH RH (WHITE)	1	
2-1	77520-75F02-Z2A	GUARD, FENDER SPLASH LH (RED)	1	
2-2	77520-75F02-Z2C	GUARD, FENDER SPLASH LH (PURPLE)	1	
2-3	77520-75F02-Z2S	GUARD, FENDER SPLASH LH (SILVER)	1	
2-4	77520-75F02-Z2T	GUARD, FENDER SPLASH LH (GREEN)	1	
2-5	77520-75F02-Z2Z	GUARD, FENDER SPLASH LH (GOLD)	1	
2-6	77520-75F02-Z4A	GUARD, FENDER SPLASH LH (BLUE)	1	
2-7	77520-75F02-26U	GUARD, FENDER SPLASH LH (WHIRE)	1	
3	77532-75F01-5PK	.PROTECTOR (BLACK)	2	L:915→750
4	77259-71B00	.CLIP	14	
5-1	77530-75F01-Z2A	MOLDING, FR DR RH (RED)	1	
5-2	77530-75F01-Z2C	MOLDING, FR DR RH (PURPLE)	1	
5-3	77530-75F01-Z2S	MOLDING, FR DR RH (SILVER)	1	
5-4	77530-75F01-Z2T	MOLDING, FR DR RH (GREEN)	1	
5-5	77530-75F01-Z2Z	MOLDING, FR DR RH (GOLD)	1	
5-6	77530-75F01-Z4A	MOLDING, FR DR RH (BLUE)	1	
5-7	77530-75F01-26U	MOLDING, FR DR RH (WHITE)	1	
6-1	77540-75F01-Z2A	MOLDING, FR DR LH (RED)	1	
6-2	77540-75F01-Z2C	MOLDING, FR DR LH (PURPLE)	1	

FIG.Nº.90 - SPLASH GUARD

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
6-3	77540-75F01-Z2S	MOLDING, FR DR LH (SILVER)	1	
6-4	77540-75F01-Z2T	MOLDING, FR DR LH (GREEN)	1	
6-5	77540-75F01-Z2Z	MOLDING, FR DR LH (GOLD)	1	
6-6	77540-75F01-Z4A	MOLDING, FR DR LH (BLUE)	1	
6-7	77540-75F01-26U	MOLDING, FR DR LH (WHITE)	1	
7	77532-75F01-5PK	.PROTECTOR (BLACK)	2	
8	77259-71B00	.CLIP	14	
9-1	77550-75F01-Z2A	MOLDING, RR DR RH (RED)	1	
9-2	77550-75F01-Z2C	MOLDING, RR DR RH (PURPLE)	1	
9-3	77550-75F01-Z2S	MOLDING, RR DR RH (SILVER)	1	
9-4	77550-75F01-Z2T	MOLDING, RR DR RH (GREEN)	1	
9-5	77550-75F01-Z2Z	MOLDING, RR DR RH (GOLD)	1	
9-6	77550-75F01-Z4A	MOLDING, RR DR RH (BLUE)	1	
9-7	77550-75F01-26U	MOLDING, RR DR RH (WHITE)	1	
10-1	77560-75F01-Z2A	MOLDING, RR DR LH (RED)	1	
10-2	77560-75F01-Z2C	MOLDING, RR DR LH (PURPLE)	1	
10-3	77560-75F01-Z2S	MOLDING, RR DR LH (SILVER)	1	
10-4	77560-75F01-Z2T	MOLDING, RR DR LH (GREEN)	1	
10-5	77560-75F01-Z2Z	MOLDING, RR DR LH (GOLD)	1	
10-6	77560-75F01-Z4A	MOLDING, RR DR LH (BLUE)	1	
10-7	77560-75F01-26U	MOLDING, RR DR LH (WHITE)	1	
11	77532-75F01-5PK	.PROTECTOR (BLACK)	2	L:915→700
12	77259-71B00	.CLIP	10	
13-1	77570-75F01-Z2A	GUARD, SIDE SPLASH RH (RED)	1	
13-2	77570-75F01-Z2C	GUARD, SIDE SPLASH RH (PURPLE)	1	
13-3	77570-75F01-Z2S	GUARD, SIDE SPLASH RH (SILVER)	1	
13-4	77570-75F01-Z2T	GUARD, SIDE SPLASH RH (GREEN)	1	
13-5	77570-75F01-Z2Z	GUARD, SIDE SPLASH RH (GOLD)	1	
13-6	77570-75F01-Z4A	GUARD, SIDE SPLASH RH (BLUE)	1	
13-7	77570-75F01-26U	GUARD, SIDE SPLASH RH (WHITE)	1	
14-1	77580-75F01-Z2A	GUARD, SIDE SPLASH LH (RED)	1	
14-2	77580-75F01-Z2C	GUARD, SIDE SPLASH LH (PURPLE)	1	
14-3	77580-75F01-Z2S	GUARD, SIDE SPLASH LH (SILVER)	1	

FIG.Nº.90 - SPLASH GUARD

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
14-4	77580-75F01-Z2T	GUARD, SIDE SPLASH LH (GREEN)	1	
14-5	77580-75F01-Z2Z	GUARD, SIDE SPLASH LH (GOLD)	1	
14-6	77580-75F01-Z4A	GUARD, SIDE SPLASH LH (BLUE)	1	
14-7	77580-75F01-26U	GUARD, SIDE SPLASH LH (WHITE)	1	
15	77532-75F01-5PK	.PROTECTOR (BLACK)	2	L:915→615
16	77259-71B00	.CLIP	8	

FIG.91

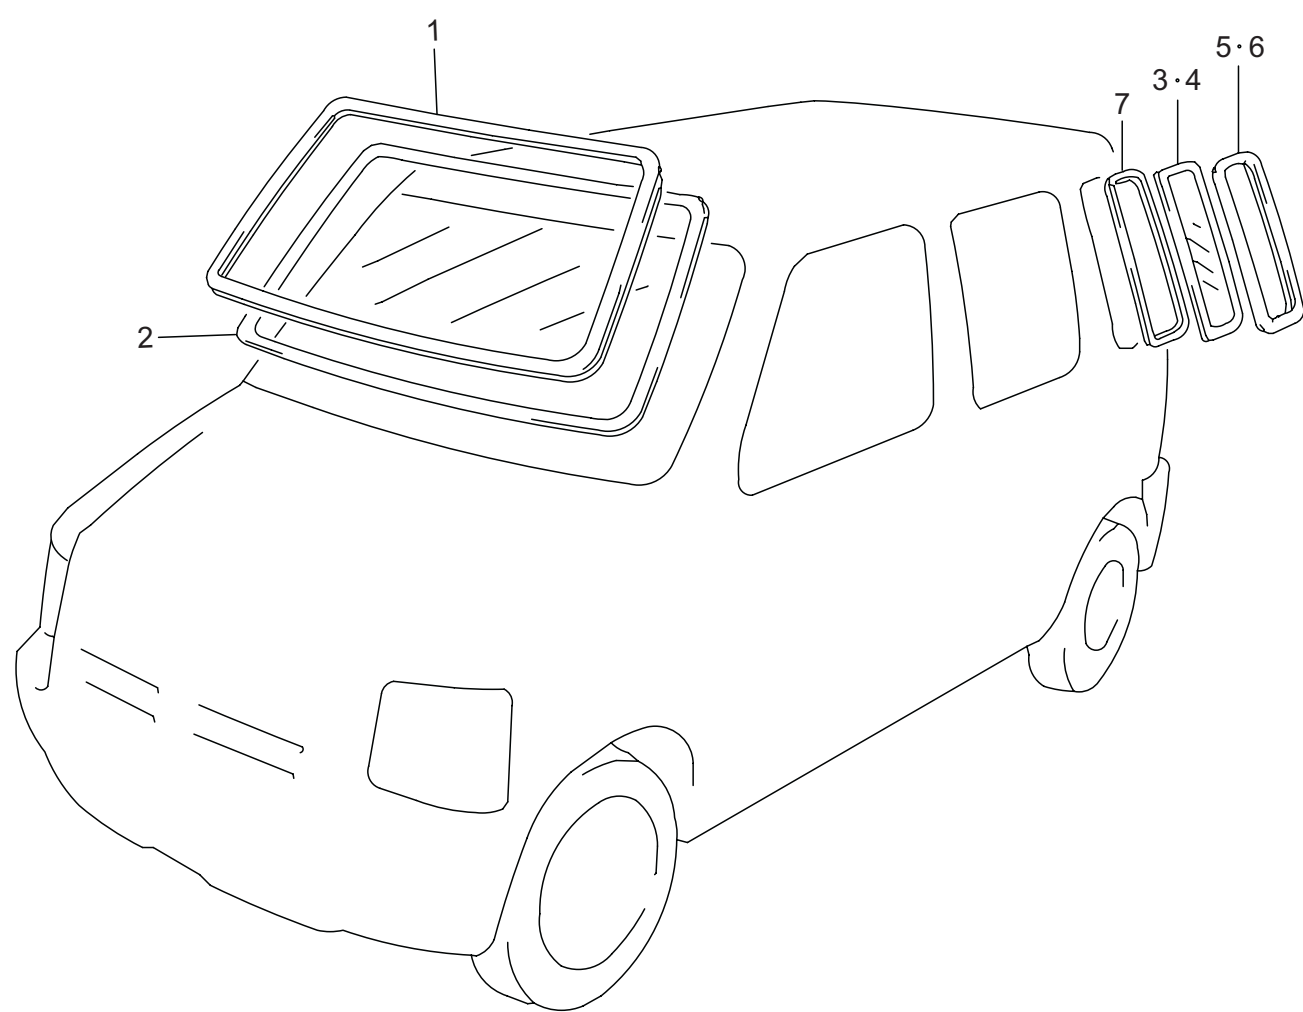


FIG.Nº.91 - WINDSHIELD GLASS

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	84611-75F00	MOLDING, WINDSHIELD	1	
2	84515-75F01	GLASS, WINDSHIELD	1	
3	84562-74F31	GLASS, QTR WINDOW RH	1	
4	84566-74F31	GLASS, QTR WINDOW LH	1	
5	84626-74F10	MOLDING, QTR WINDOW RH	1	
6	84628-74F00	MOLDING, QTR WINDOW LH	1	
7	84629-74F00-5PK	TRIM, QTR WINDOW (BLACK)	2	

FIG.92

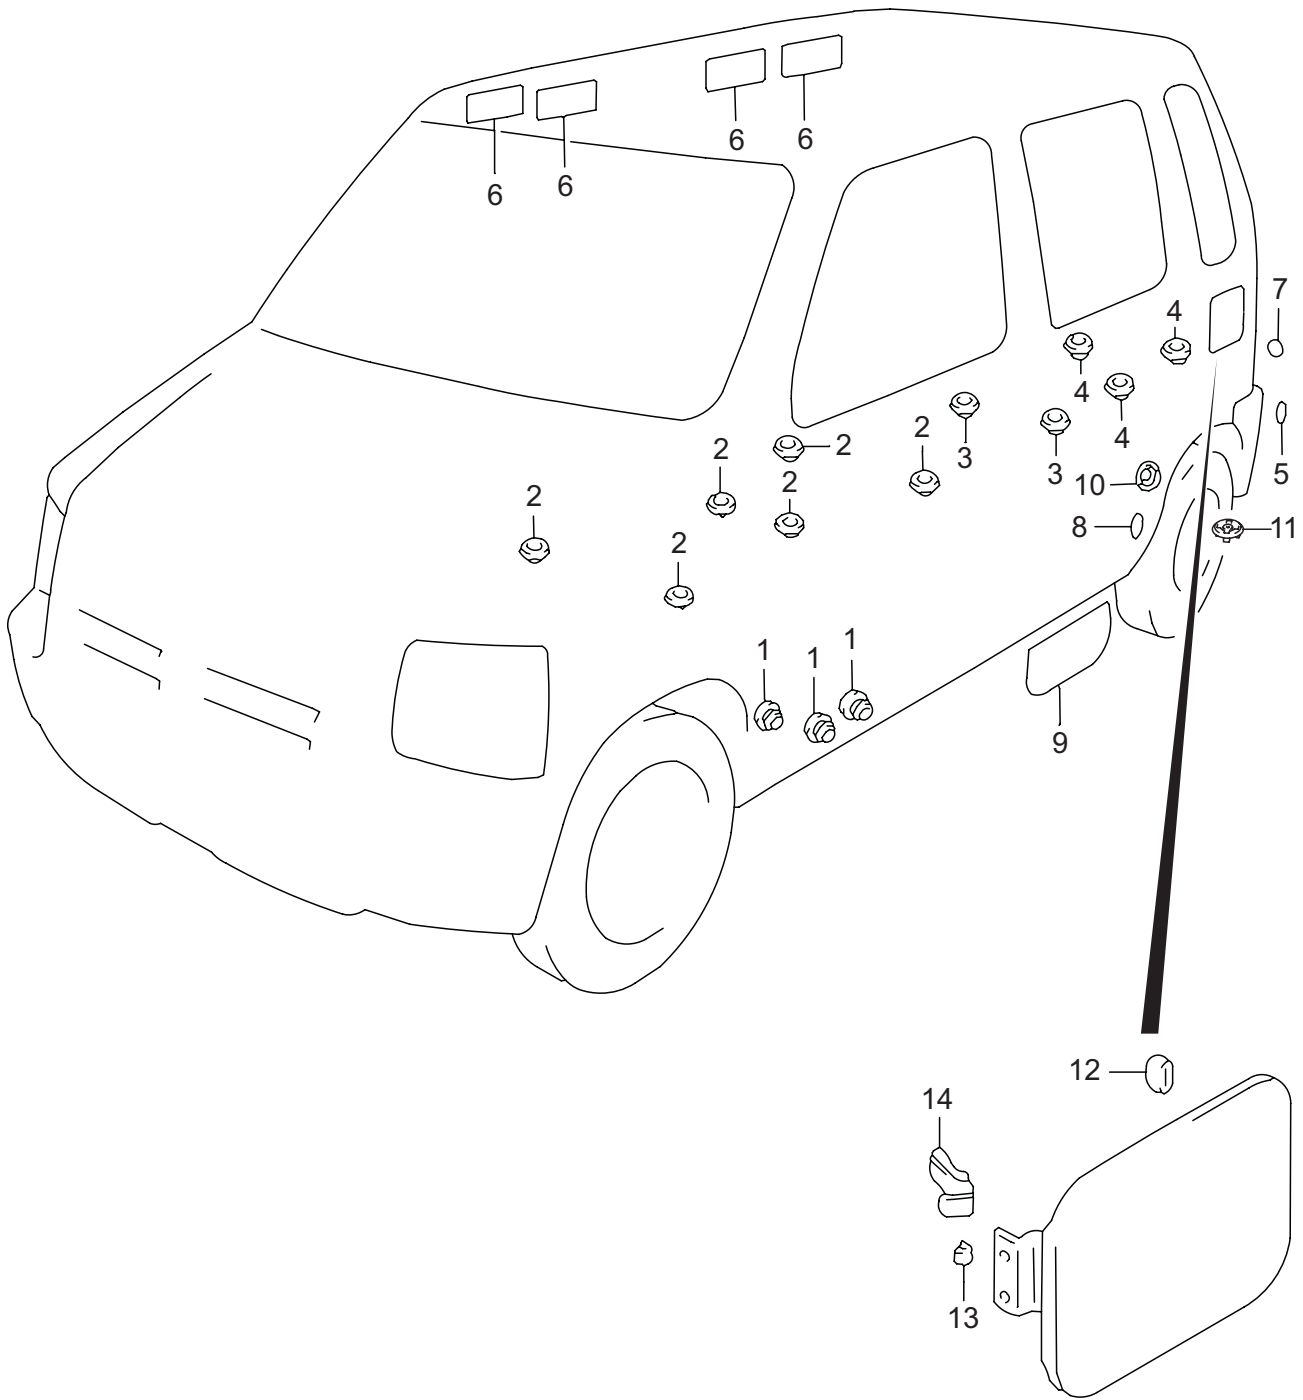


FIG.Nº.92 - COVER / CAP

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	09250-30010	CAP (OD:40)	6	
2	09250-30010	CAP (OD:40)	6	
3	09250-30010	CAP (OD:40)	2	
4	09250-30010	CAP (OD:40)	3	
5	84761-50X50	SEAL (140X190)	2	CUT AS REQUIRED
6	76381-75F00	SEAL, PILLAR HOLE	8	
7	84761-50X50	SEAL (140X190)	2	CUT AS REQUIRED
8	84761-50X50	SEAL (140X190)	2	CUT AS REQUIRED
9	75470-74G01	VALVE, AIR OUTLET	2	
10	83919-82000	PLUG	2	
11	09250-16013	CAP, RR SIDE MEMBER	2	
12	77116-60B20	CUSHION	2	
13	09329-01003	CUSHION	1	
14	77191-50G00	SPRING, FUEL INLET LID	1	

FIG.93

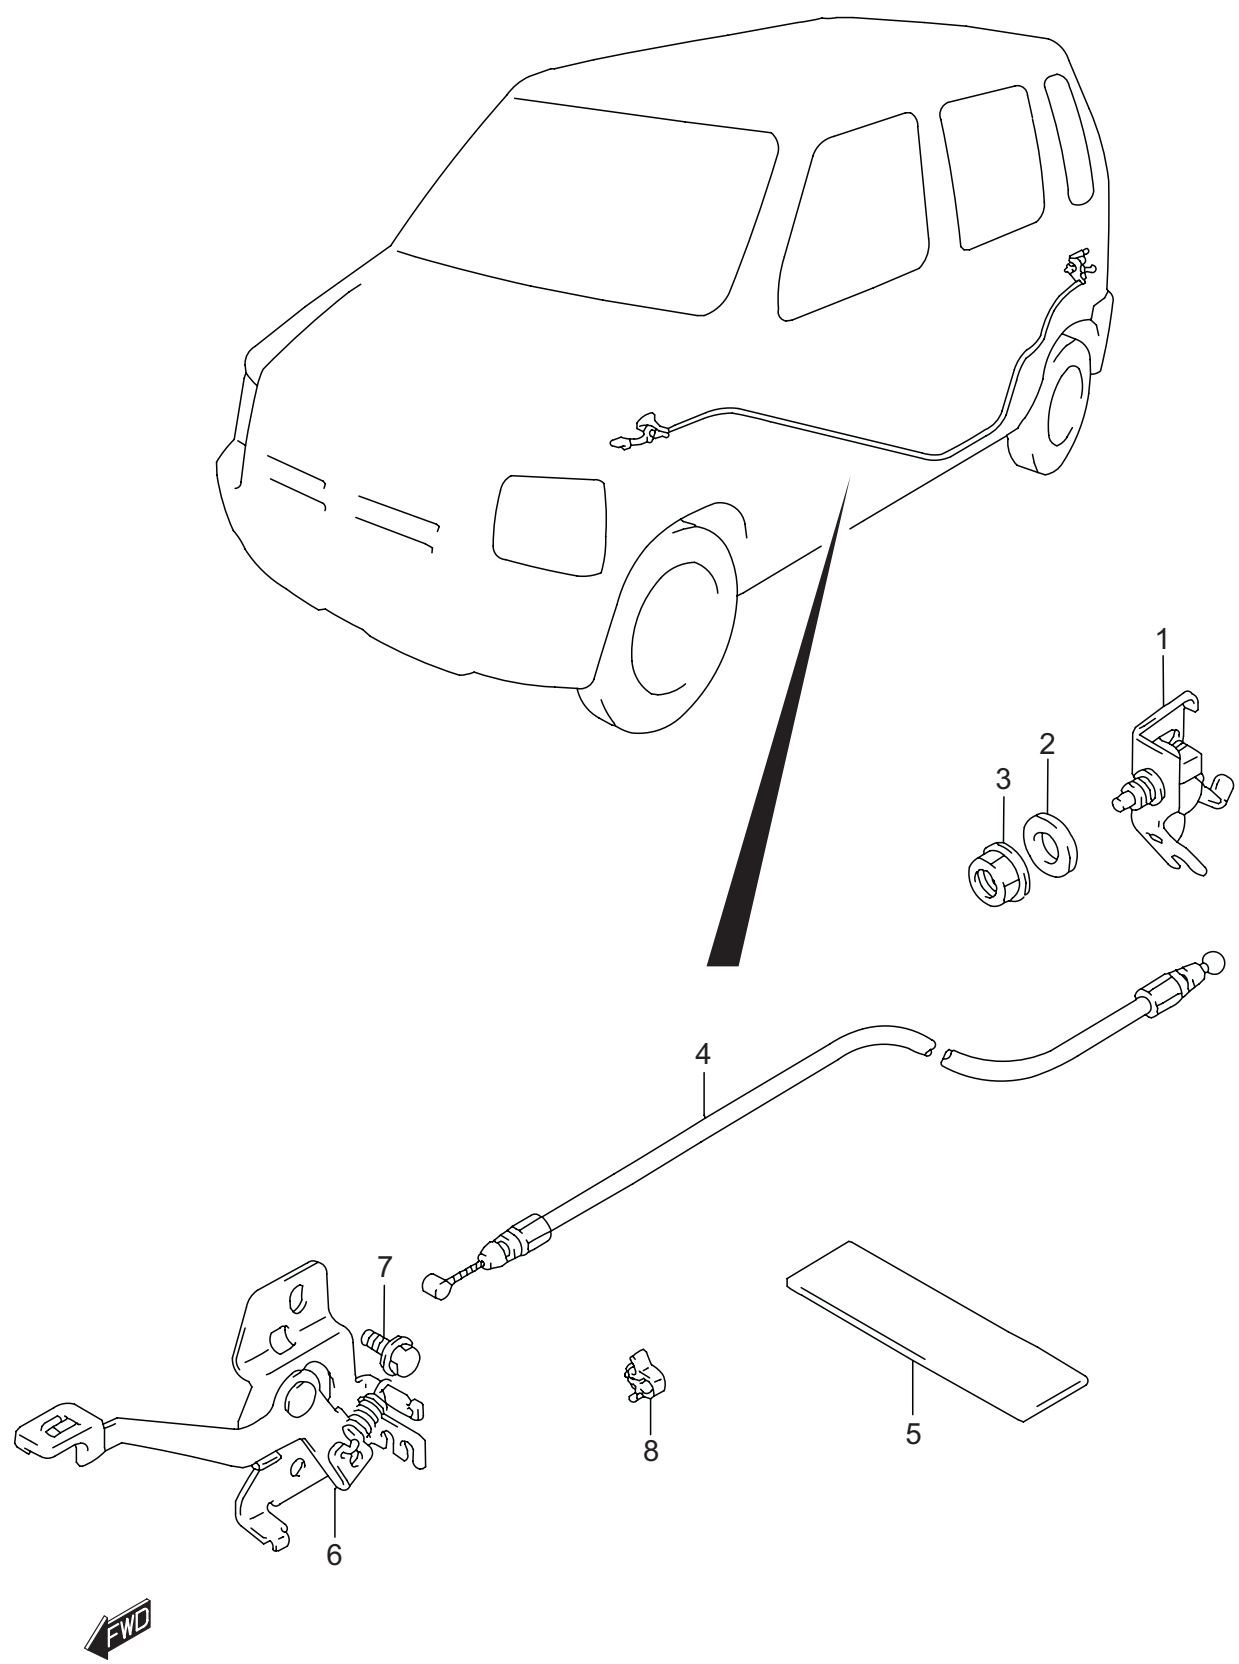


FIG.Nº.93 - FUEL LID OPENER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	76520-60A00	OPENER ASSY, FUEL LID	1	
2	09160-13011	WASHER (13X21X2.5)	1	
3	08316-10103	NUT	1	
4	83350-75F00	CABLE, FUEL LID OPENER	1	
5	36930-82010	COVER	5	
6	83310-75F00	LEVER, FUEL OPENER	1	
7	01550-06123	BOLT	2	
8	09403-04401	CLAMP	1	

FIG.94

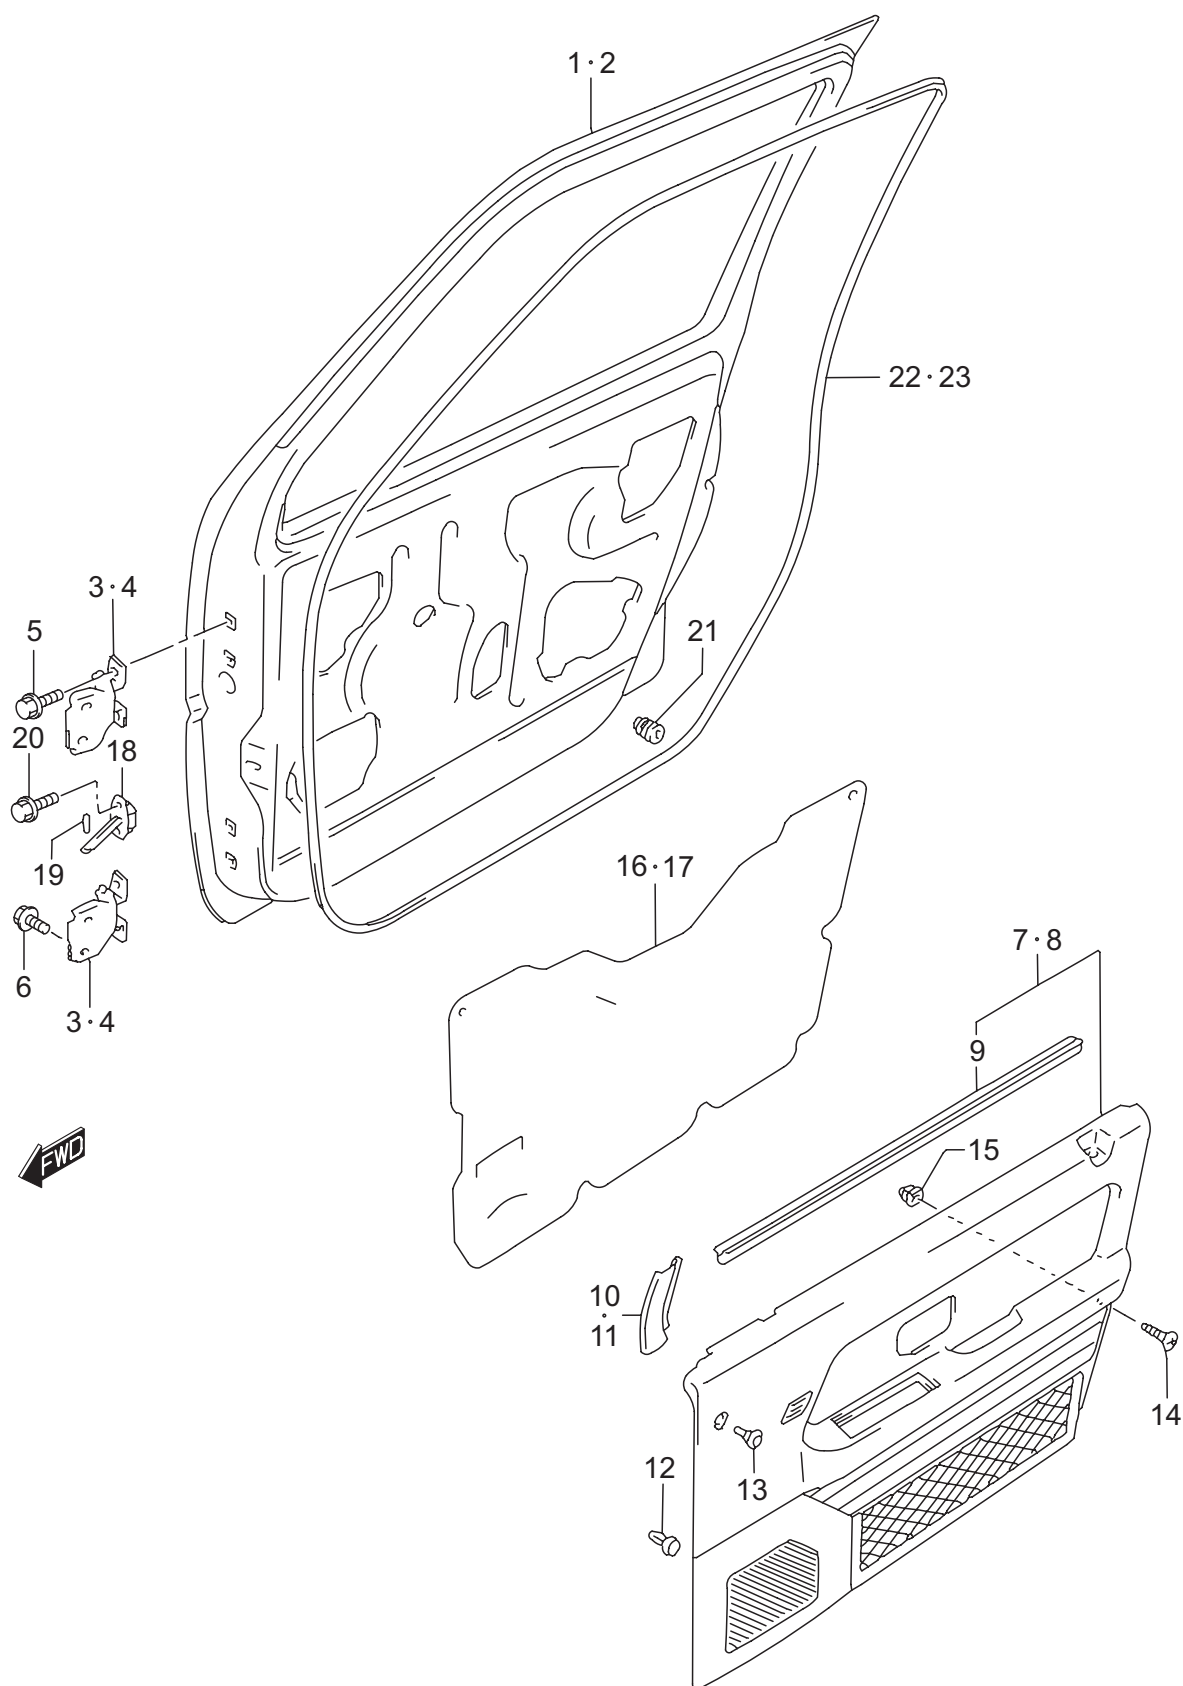


FIG.Nº.94 - FR DR PANEL

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	68001-75F20	PANEL ASSY, FR DOOR RH	1	
2	68002-75F20	PANEL ASSY, FR DOOR LH	1	
3	69310-60A10	HINGE, FR DOOR NO.1	2	UPPER RH,LOWER LH
4	69340-60A11	HINGE, FR DOOR NO.2	2	UPPER LH,LOWER RH
5	09118-08156	BOLT (8X25)	8	
6	09118-08156	BOLT (8X25)	8	
7	83701-75F20-J0H	TRIM ASSY, FR DOOR RH	1	
8	83702-75F20-J0H	TRIM ASSY, FR DOOR LH	1	
9	83851-74F10	.WEATHERSTRIP, DOOR INNER	2	
10	83791-75F00	TRIM, FR DOOR FR RH	1	
11	83792-75F00	TRIM, FR DOOR FR LH	1	
12	09409-08320	CLIP	18	
13	09409-08308-T01	CLIP (GRAY)	2	
14	03242-06253	SCREW	4	
15	09148-06007	NUT	4	
16	83911-75F00	COVER, DOOR SEALING RH	1	
17	83912-75F00	COVER, DOOR SEALING LH	1	
18	81810-74F20	STOP, DOOR OPEN	2	
19	81831-70B00	PIN, OPEN STOPPER BODY	2	
20	09122-86004	BOLT	4	
21	82711-56B00	STOPPER, DOOR	2	
22	84641-74F00	WEATHERSTRIP, DOOR OPENING RH	1	
23	84651-74F00	WEATHERSTRIP, DOOR OPENING LH	1	

FIG.95

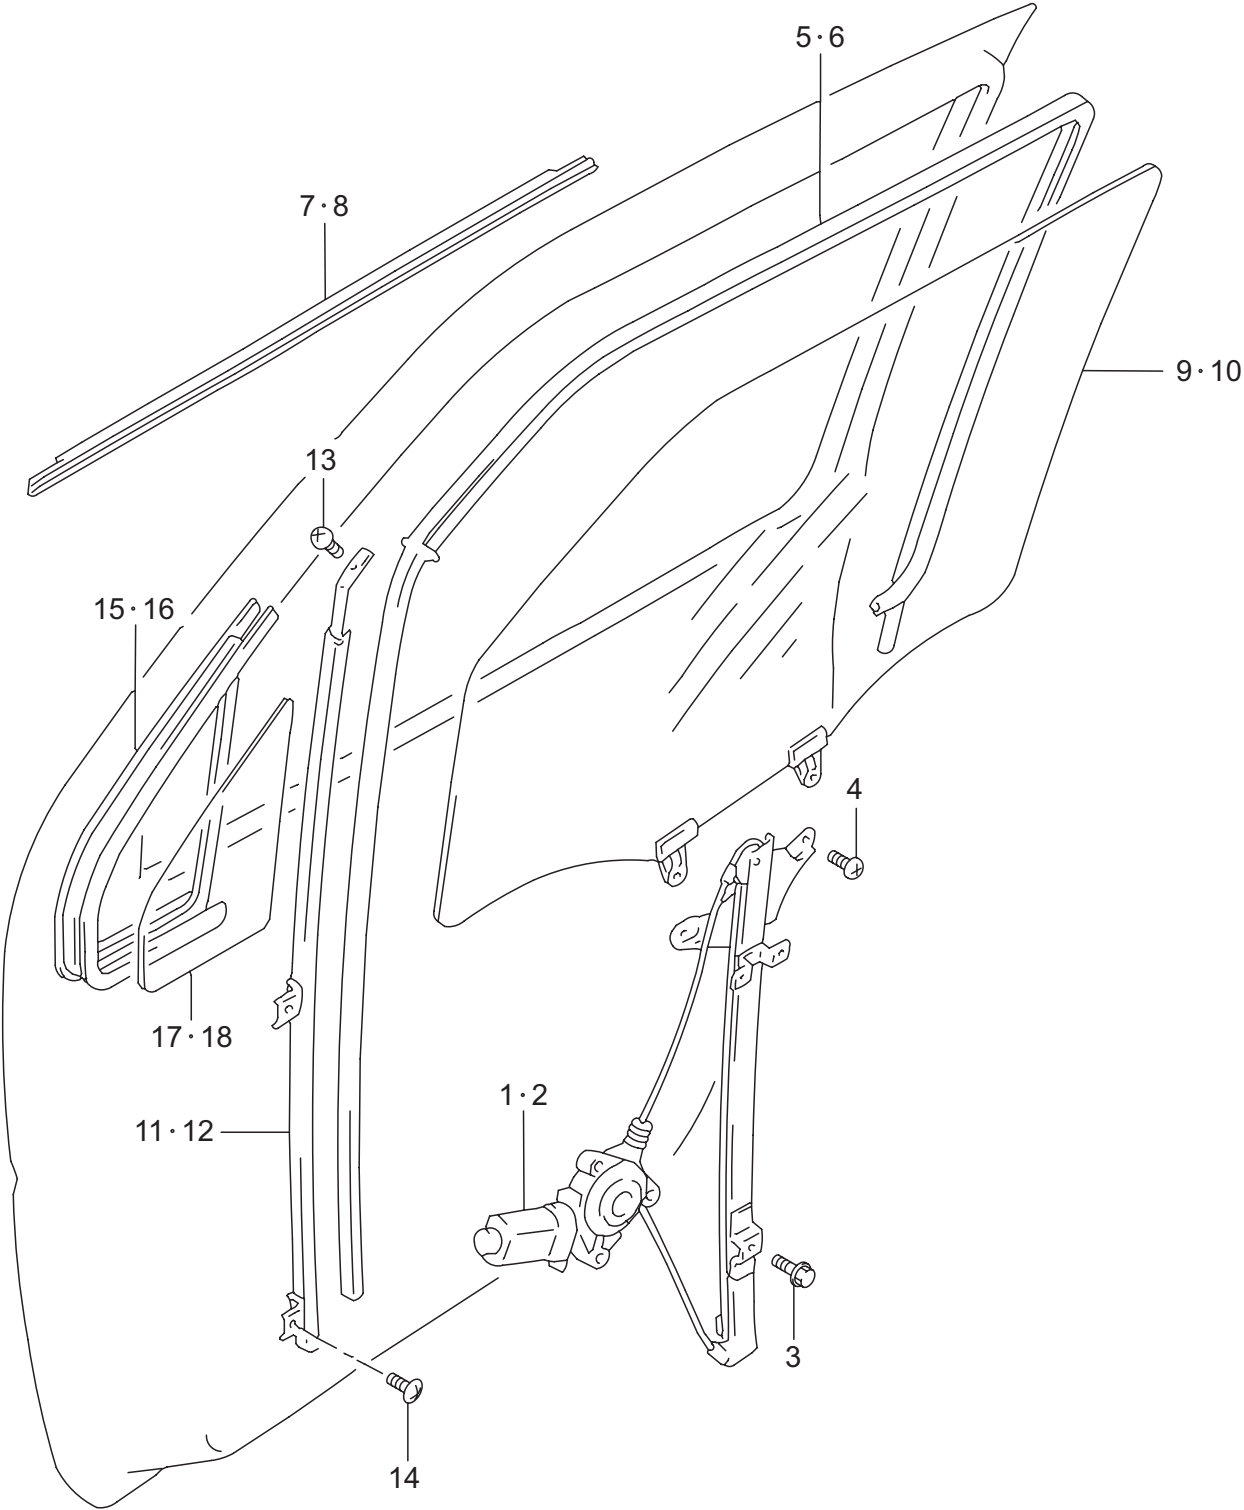


FIG.Nº.95 - FR DR REGULATOR

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	83401-74F10	REGULATOR ASSY, WINDOW RH	1	
2	83402-74F10	REGULATOR ASSY, WINDOW LH	1	
3	02162-06123	SCREW	10	
4	02112-76103	SCREW	4	
5	83661-74F01	RUN, GLASS RH	1	
6	83662-74F01	RUN, GLASS LH	1	
7	83810-74F02	WEATHERSTRIP, DOOR OUTER RH	1	
8	83820-74F02	WEATHERSTRIP, DOOR OUTER LH	1	
9	84531-75F31	GLASS, WINDOW RH	1	
10	84536-75F31	GLASS, WINDOW LH	1	
11	81710-74F00	SASH, DOOR FR RH	1	
12	81720-74F00	SASH, DOOR FR LH	1	
13	03121-04123	SCREW	2	
14	02162-06123	SCREW	4	
15	84614-74F00	WEATHERSTRIP, WINDOW FR RH	1	
16	84615-74F00	WEATHERSTRIP, WINDOW FR LH	1	
17	84521-74F31	GLASS, WINDOW FR RH	1	
18	84526-74F31	GLASS, WINDOW FR LH	1	

FIG.96

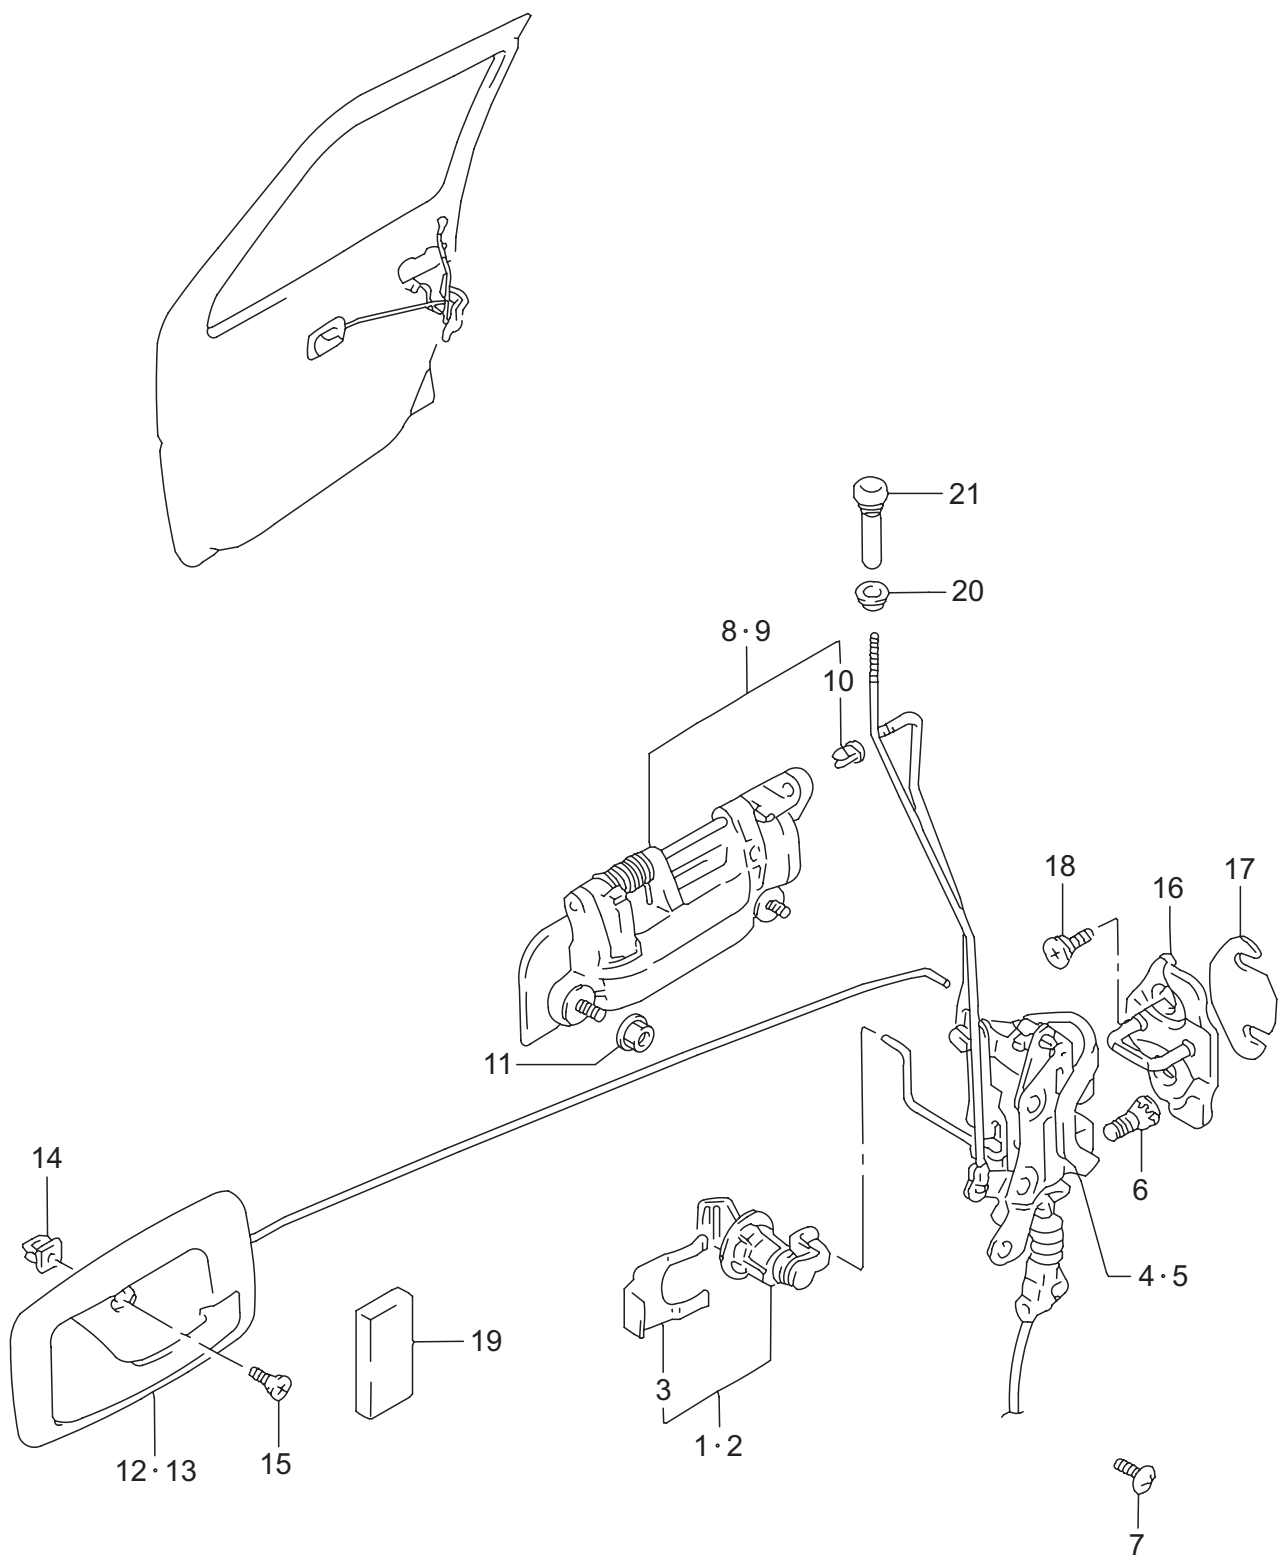


FIG.Nº.96 - FR DR LOCK

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	82270-74810	CYLINDER, DOOR LOCK RH	1	
2	82280-74810	CYLINDER, DOOR LOCK LH	1	
3	82291-70B00	.CLIP, CYLINDER	2	
4	82201-75F50	LATCH ASSY, FR DOOR RH	1	
5	82202-75F50	LATCH ASSY, FR DOOR LH	1	
6	09137-06025	SCREW (6X16)	6	
7	02142-06103	SCREW	2	
8	82801-74F00-5PK	HANDLE, DOOR OUT RH (BLACK)	1	
9	82802-74F00-5PK	HANDLE, DOOR OUT LH (BLACK)	1	
10	82816-74F00	.SNAP, JOINT	2	
11	08316-10063	NUT	4	
12	83101-74F01-T01	HANDLE, DOOR INSIDE RH (GRAY)	1	
13	83102-74F01-T01	HANDLE, DOOR INSIDE LH (GRAY)	1	
14	83119-60B00	NUT, INSIDE HANDLE	2	
15	03521-05163	SCREW	2	
16	82610-75F00	STRIKER, DOOR LATCH	2	
17	78199-78000	SPACER	AR	
18	09137-08006	SCREW (8X18)	4	
19	77591-75000	PAD	6	
20	82991-84000	CAP, DOOR KNOB	2	
21	82982-50F00-T01	KNOB, INSIDE LOCK (GRAY)	2	

FIG.97

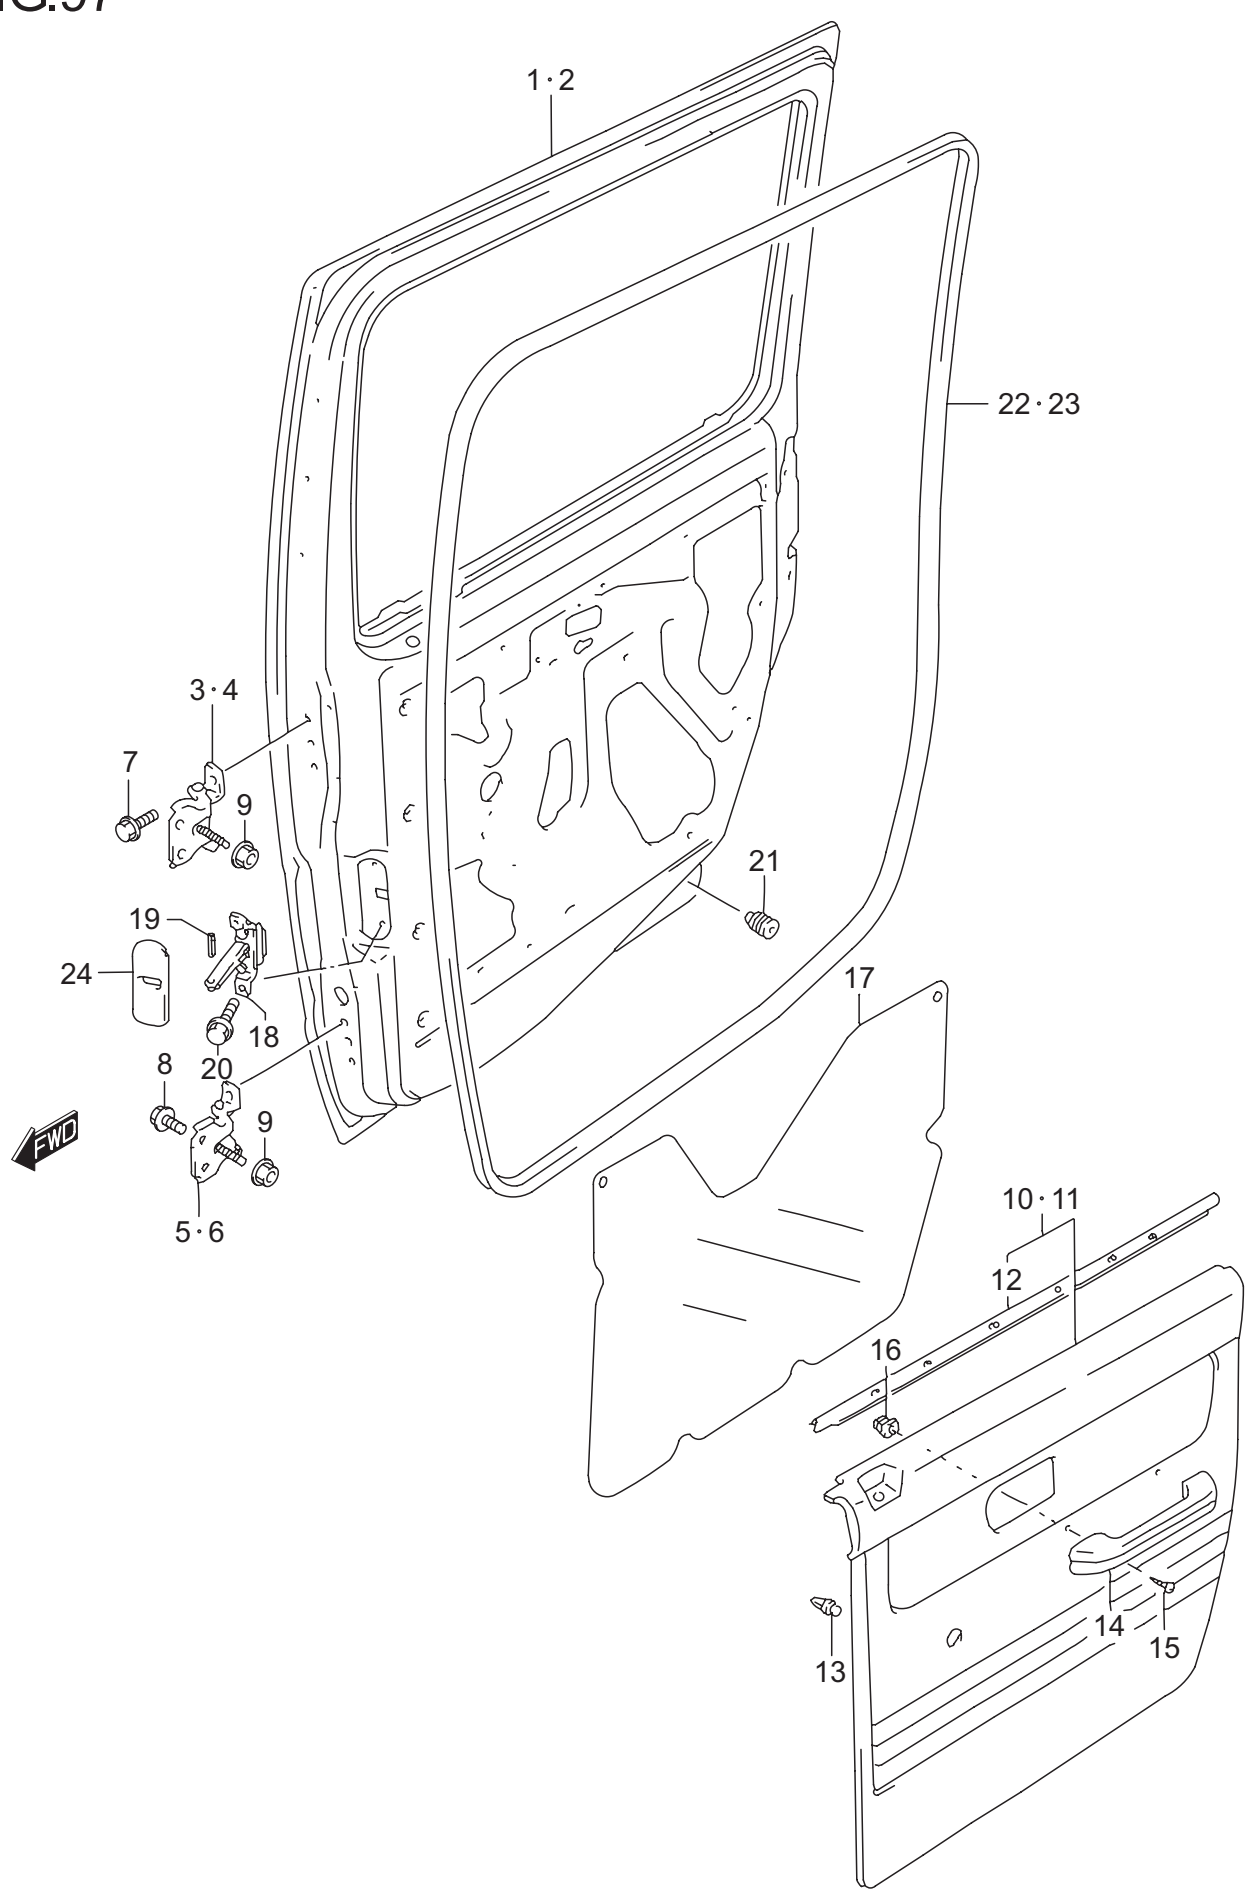


FIG.Nº.97 - RR DR PANEL

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	68003-75F10	PANEL ASSY, RR DOOR RH	1	
2	68004-75F10	PANEL ASSY, RR DOOR LH	1	
3	69410-75F00	HINGE, DOOR UPPER RH	1	
4	69430-75F00	HINGE, DOOR UPPER LH	1	
5	69440-75F00	HINGE, DOOR LOWER RH	1	
6	69460-75F00	HINGE, DOOR LOWER LH	1	
7	09118-08156	BOLT (8X25)	8	
8	09118-08156	BOLT (8X25)	8	
9	08361-25083	NUT	4	
10	83703-75F60-J0H	TRIM ASSY, DOOR RH	1	
11	83704-75F60-J0H	TRIM ASSY, DOOR LH	1	
12	83871-74F60	.WEATHERSTRIP, DOOR INNER	2	
13	09409-08320	CLIP	20	
14	84451-84000-T01	ARMREST, DOOR (GRAY)	2	
15	03242-06253	SCREW	4	
16	09148-06007	NUT	4	
17	83911-60X51	COVER, DOOR SEALING (600X1200)	2	CUT AS REQUIRED
18	81830-74F20	STOP, REAR DOOR OPEN	2	
19	81831-70B00	PIN, OPEN STOPPER BODY	2	
20	09122-86004	BOLT	4	
21	82711-56B00	STOPPER, DOOR	2	
22	84661-74F00	WEATHERSTRIP, DOOR OPENING RH	1	
23	84671-74F01	WEATHERSTRIP, DOOR OPENING LH	1	
24	81891-50F01	COVER, DOOR OPEN STOP	2	

FIG.98

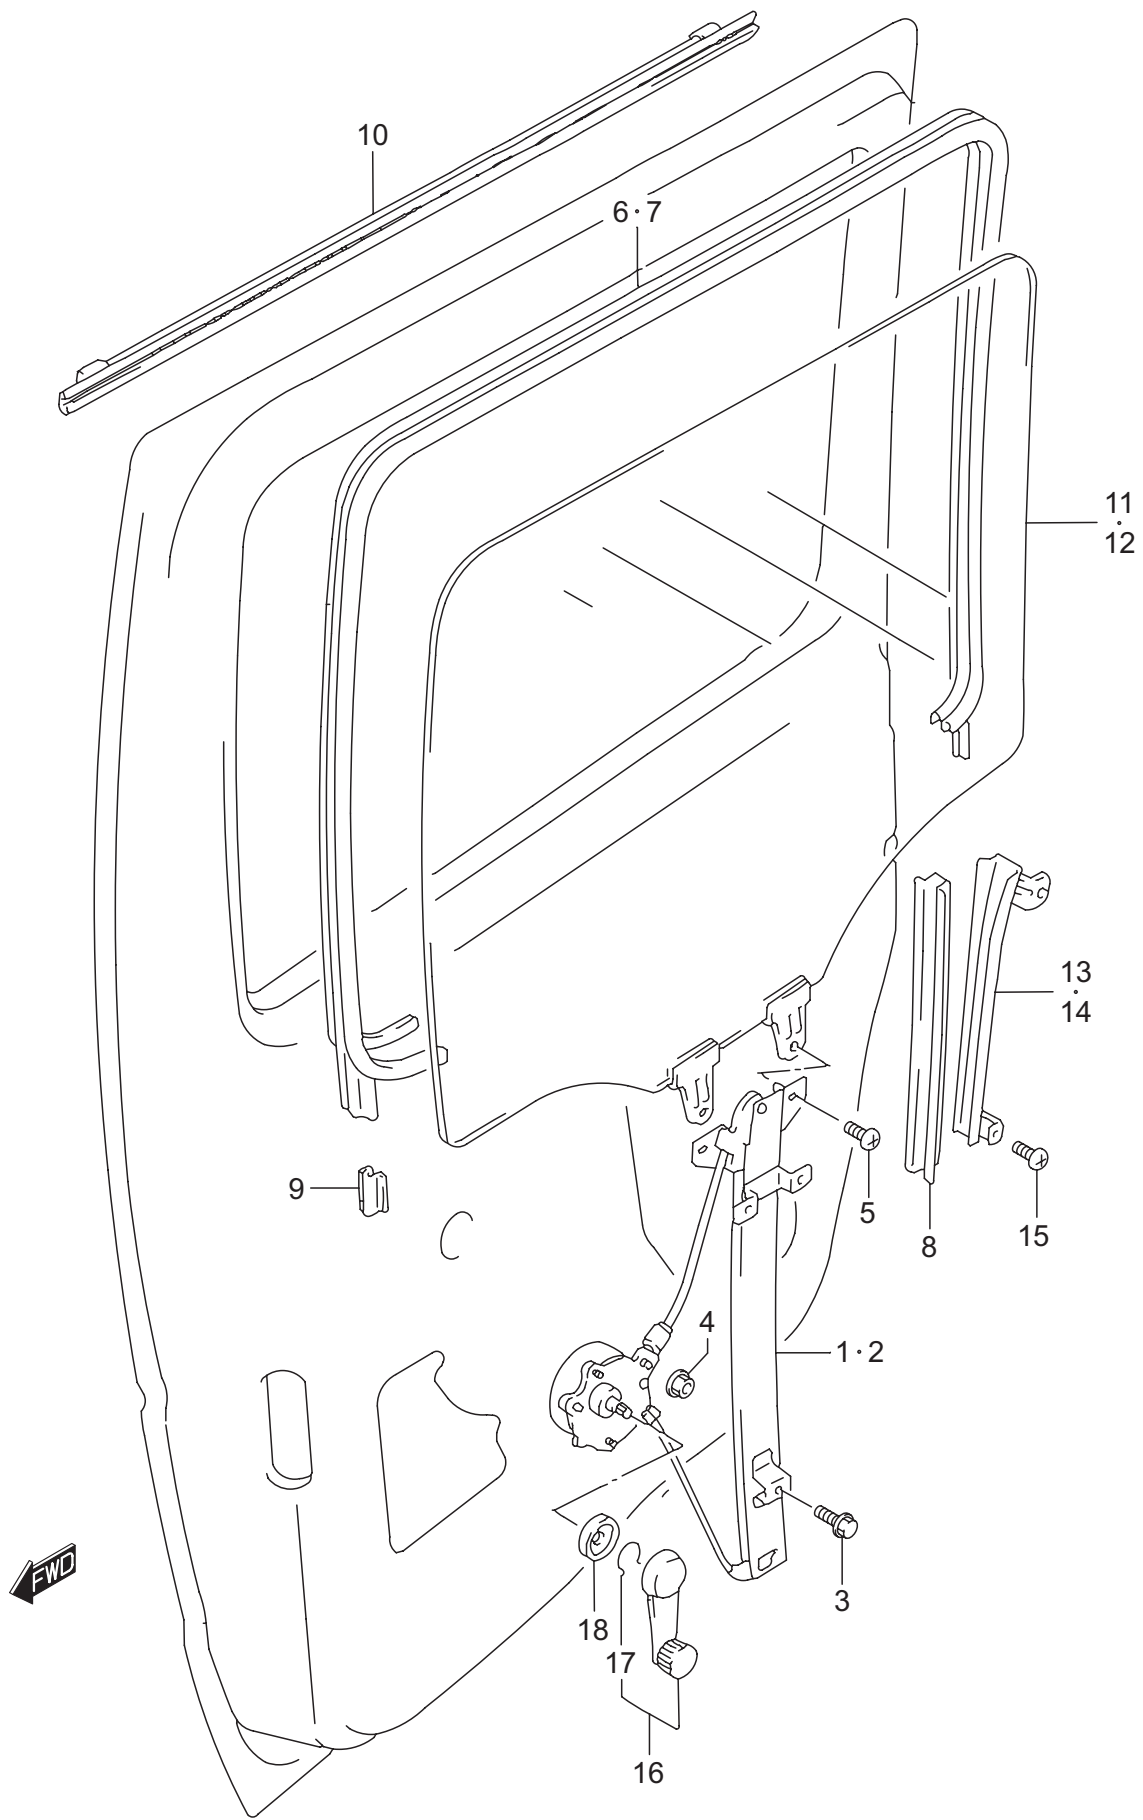


FIG.Nº.98 - RR DOOR REGULATOR

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	83510-74F00	REGULATOR ASSY, WINDOW RH	1	
2	83540-74F00	REGULATOR ASSY, WINDOW LH	1	
3	02162-06123	SCREW	4	
4	08316-10063	NUT	6	
5	02112-76103	SCREW	4	
6	83675-74F00	RUN, DOOR GLASS RH	1	
7	83671-74F00	RUN, DOOR GLASS LH	1	
8	83662-76F00	RUN, DOOR GLASS	2	
9	87415-70B00	STOPPER, GLASS	2	
10	83840-74F02	WEATHERSTRIP, DOOR OUTER	2	
11	84541-74F31	GLASS, WINDOW RH	1	
12	84546-74F31	GLASS, WINDOW LH	1	
13	81770-74F00	SASH, RR DOOR RR RH	1	
14	81780-74F00	SASH, RR DOOR RR LH	1	
15	02112-76123	SCREW	4	
16	82960-60G00-T01	HANDLE, WINDOW RGLTR (GRAY)	2	
17	78463-78000	.SNAP	2	
18	82972-70B00-T01	ESCUTCHEON, HANDLE (GRAY)	2	

FIG.99

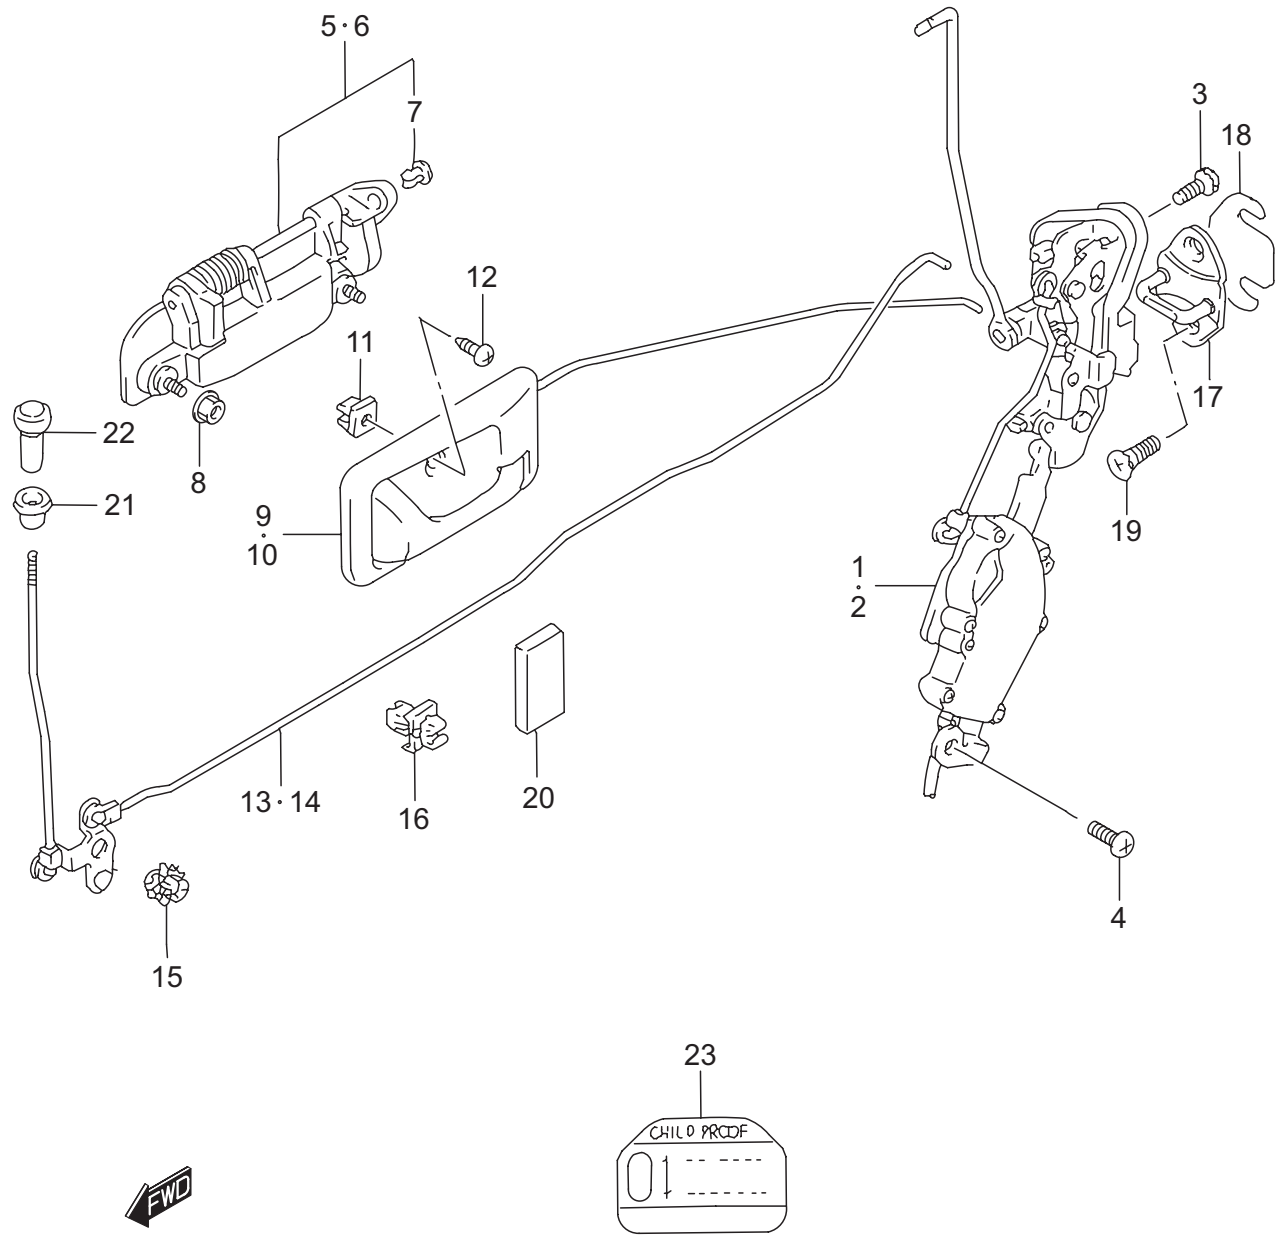


FIG.Nº.99 - RR DR LOCK

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	82301-74F30	LATCH ASSY, RR DOOR RH	1	
2	82302-74F30	LATCH ASSY, RR DOOR LH	1	
3	09137-06025	SCREW (6X16)	6	
4	02142-06103	SCREW	2	
5	82801-74F00-5PK	HANDLE, DOOR OUT RH (BLACK)	1	
6	82802-74F00-5PK	HANDLE, DOOR OUT LH (BLACK)	1	
7	82816-74F00	.SNAP, JOINT	2	
8	08316-20063	NUT	4	
9	83103-74F01-T01	HANDLE, DOOR INSIDE RH (GRAY)	1	
10	83104-74F01-T01	HANDLE, DOOR INSIDE LH (GRAY)	1	
11	83119-60B00	NUT, INSIDE HANDLE	2	
12	03521-05163	SCREW	2	
13	83270-74F01	ROD, INSIDE LOCK RH	1	
14	83280-74F01	ROD, INSIDE LOCK LH	1	
15	83261-56B00	PIN, LOCK ROD	2	
16	83271-60D00	CLIP, HANDLE ROD	2	
17	82610-60D00	STRIKER, DOOR LATCH	2	
18	78199-78000	SPACER	AR	
19	09137-08006	SCREW (8X18)	4	
20	77591-75000	PAD	6	
21	82991-84000	CAP, DOOR KNOB	2	
22	82982-50F00-T01	KNOB, INSIDE LOCK (GRAY)	2	
23	86951-78004	PLATE, CHILD PROOF CAUTION	2	

FIG.100

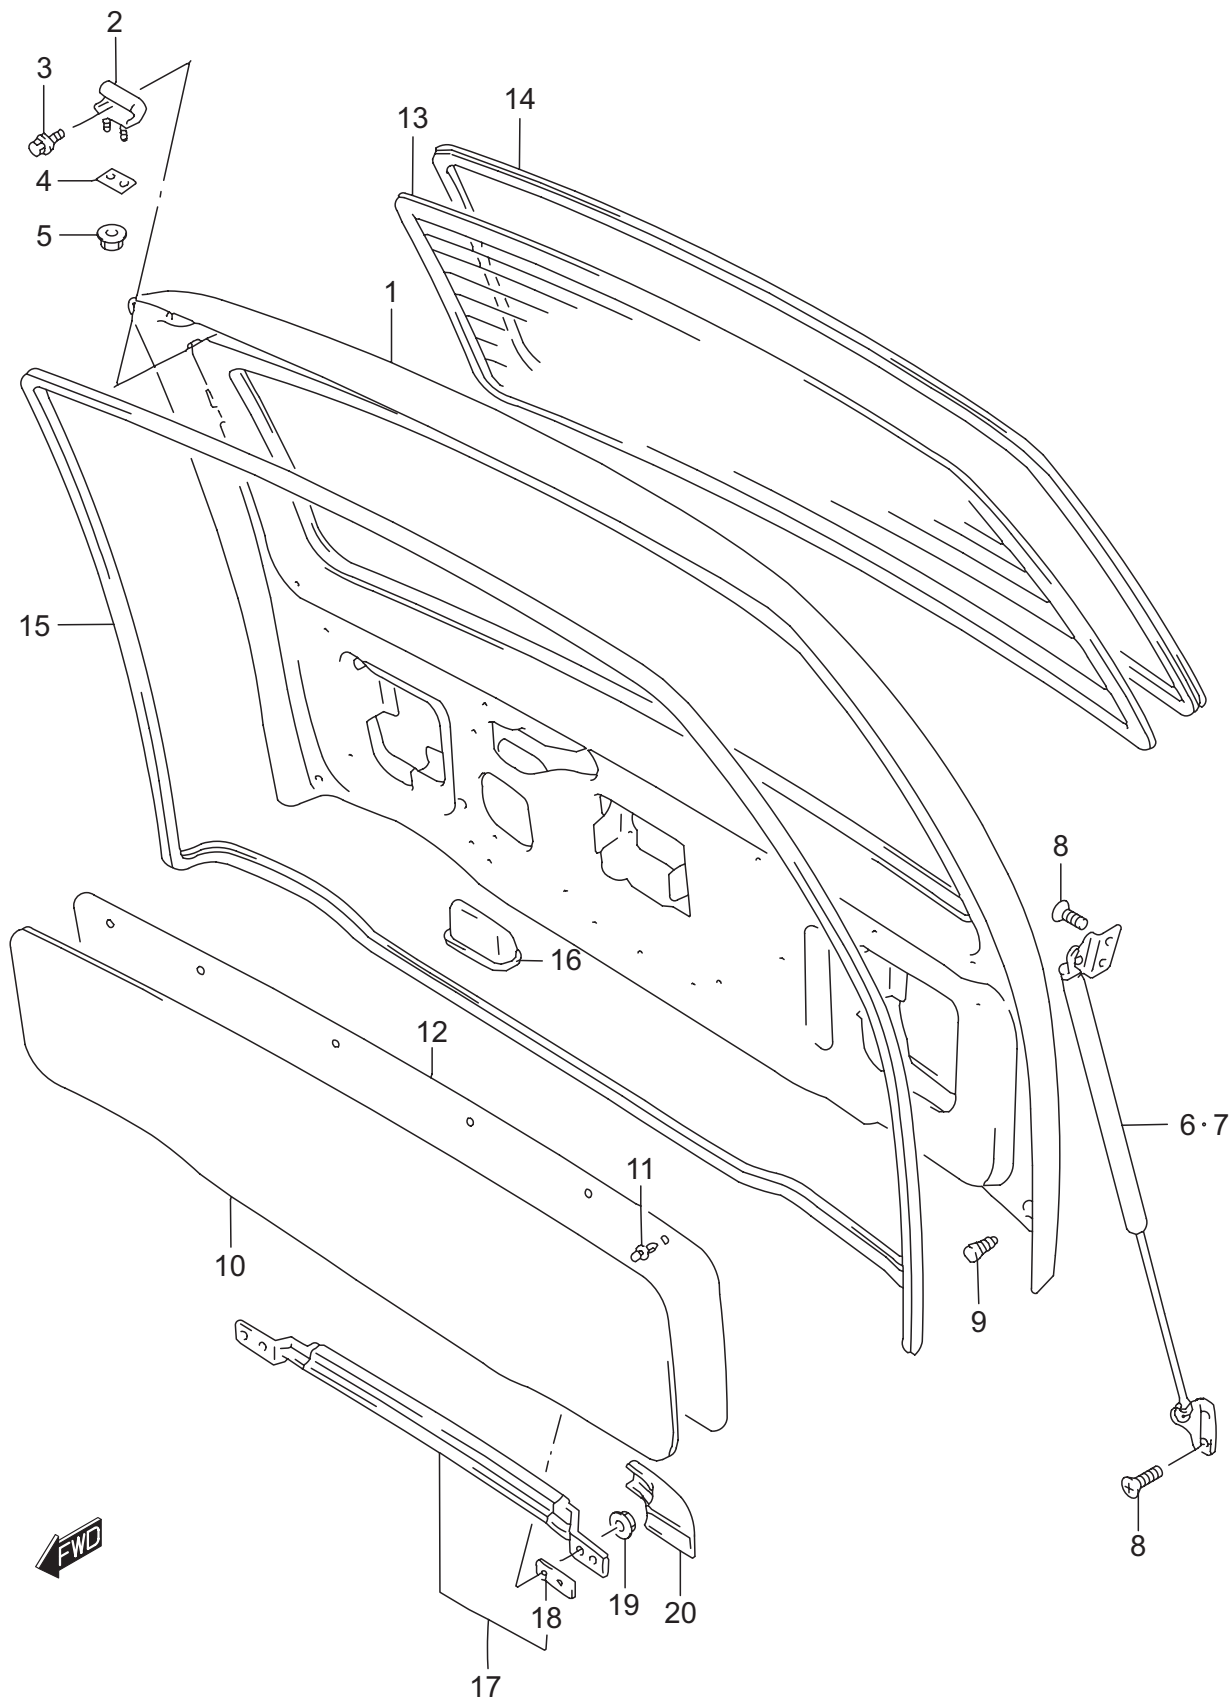


FIG.Nº.100 - BACK DR PANEL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	69100-75F50	PANEL ASSY, BACK DOOR	1	
2	69510-74F00	HINGE, BACK DOOR	2	
3	09112-08001	BOLT (8X20)	4	
4	69571-54F01	PACKING, BACK DOOR HINGE	AR	
5	08361-25083	NUT	4	
6	81850-75F00	BALANCER, BACK DOOR RH	1	
7	81860-75F00	BALANCER, BACK DOOR LH	1	
8	09137-06024	SCREW (6X18)	8	
9	76683-70C00	CUSHION	2	
10	83770-75F00-T02	TRIM, BACK DOOR (GRAY)	1	
11	09409-08320	CLIP	15	
12	83911-60X51	COVER, DOOR SEALING (600X1200)	1	CUT AS REQUIRED
13	84571-75F01	GLASS, WINDOW	1	
14	84623-75F01	WEATHERSTRIP, BACK DR WINDOW	1	
15	84681-75F00	WEATHERSTRIP, BACK DR OPENING	1	
16	82841-75F00-T01	HANDLE, BACK DR INNER (GRAY)	1	
17	82850-75F00-5PK	HANDLE, BACK DR LOWER (BLACK)	1	
18	82854-75F00	.PACKING	2	
19	08361-25063	NUT	4	
20	82852-75F00-0CD	CAP, HANDLE	2	

FIG.101

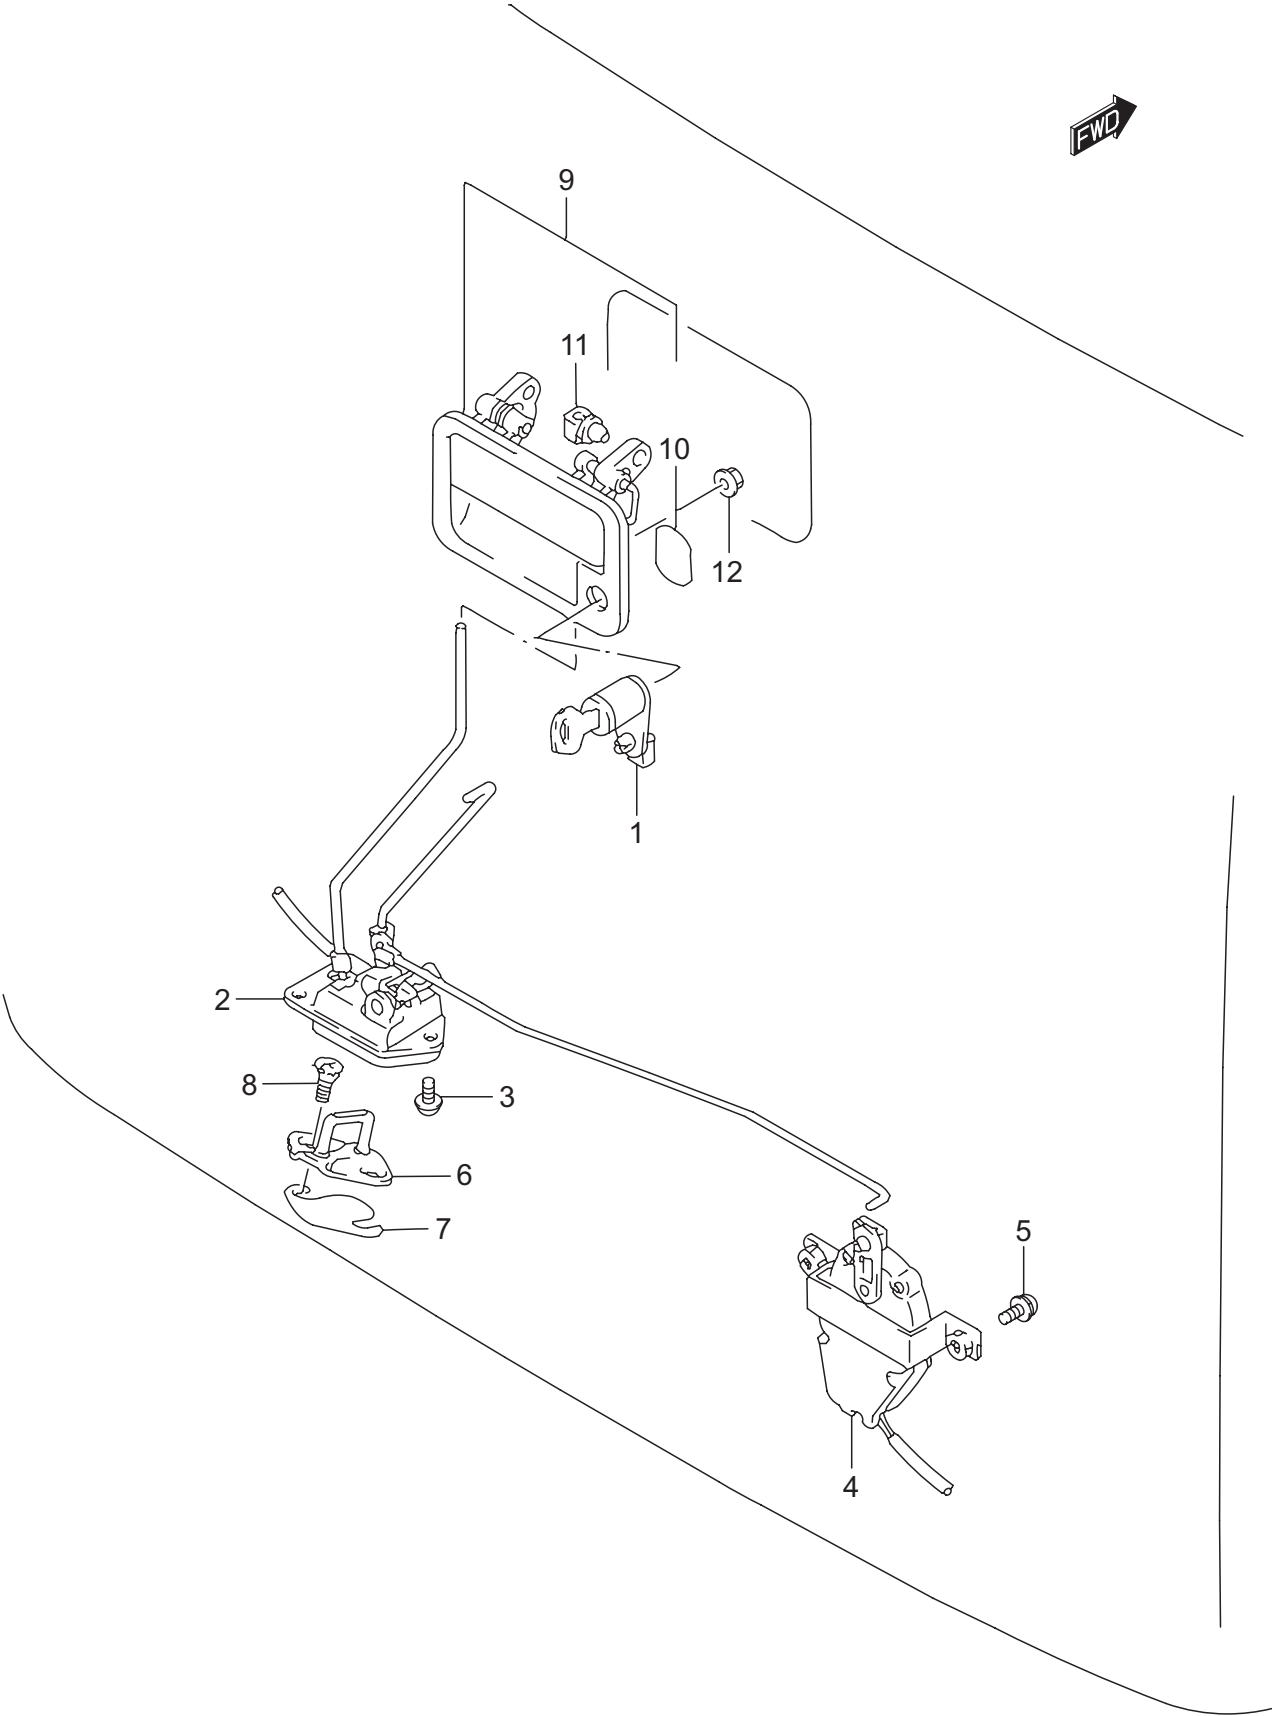


FIG.Nº.101 - BACK DOOR LOCK

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	82500-75830	CYLINDER, BACK DOOR LOCK	1	
2	82501-75F01	LATCH ASSY, BACK DOOR	1	
3	02162-06163	SCREW	3	
4	82550-54FA0	ACTUATOR, DOOR LATCH	1	
5	02162-06163	SCREW	2	
6	82610-60D00	STRIKER, DOOR LATCH	1	
7	78199-78000	SPACER	AR	
8	09137-08006	SCREW (8X18)	2	
9	82820-60A10-5PK	HANDLE, DOOR OUT (BLACK)	1	
10	82817-60A00	.RING, SNAP	1	
11	82818-60A00	.JOINT	1	
12	08316-10063	NUT	2	

FIG.102

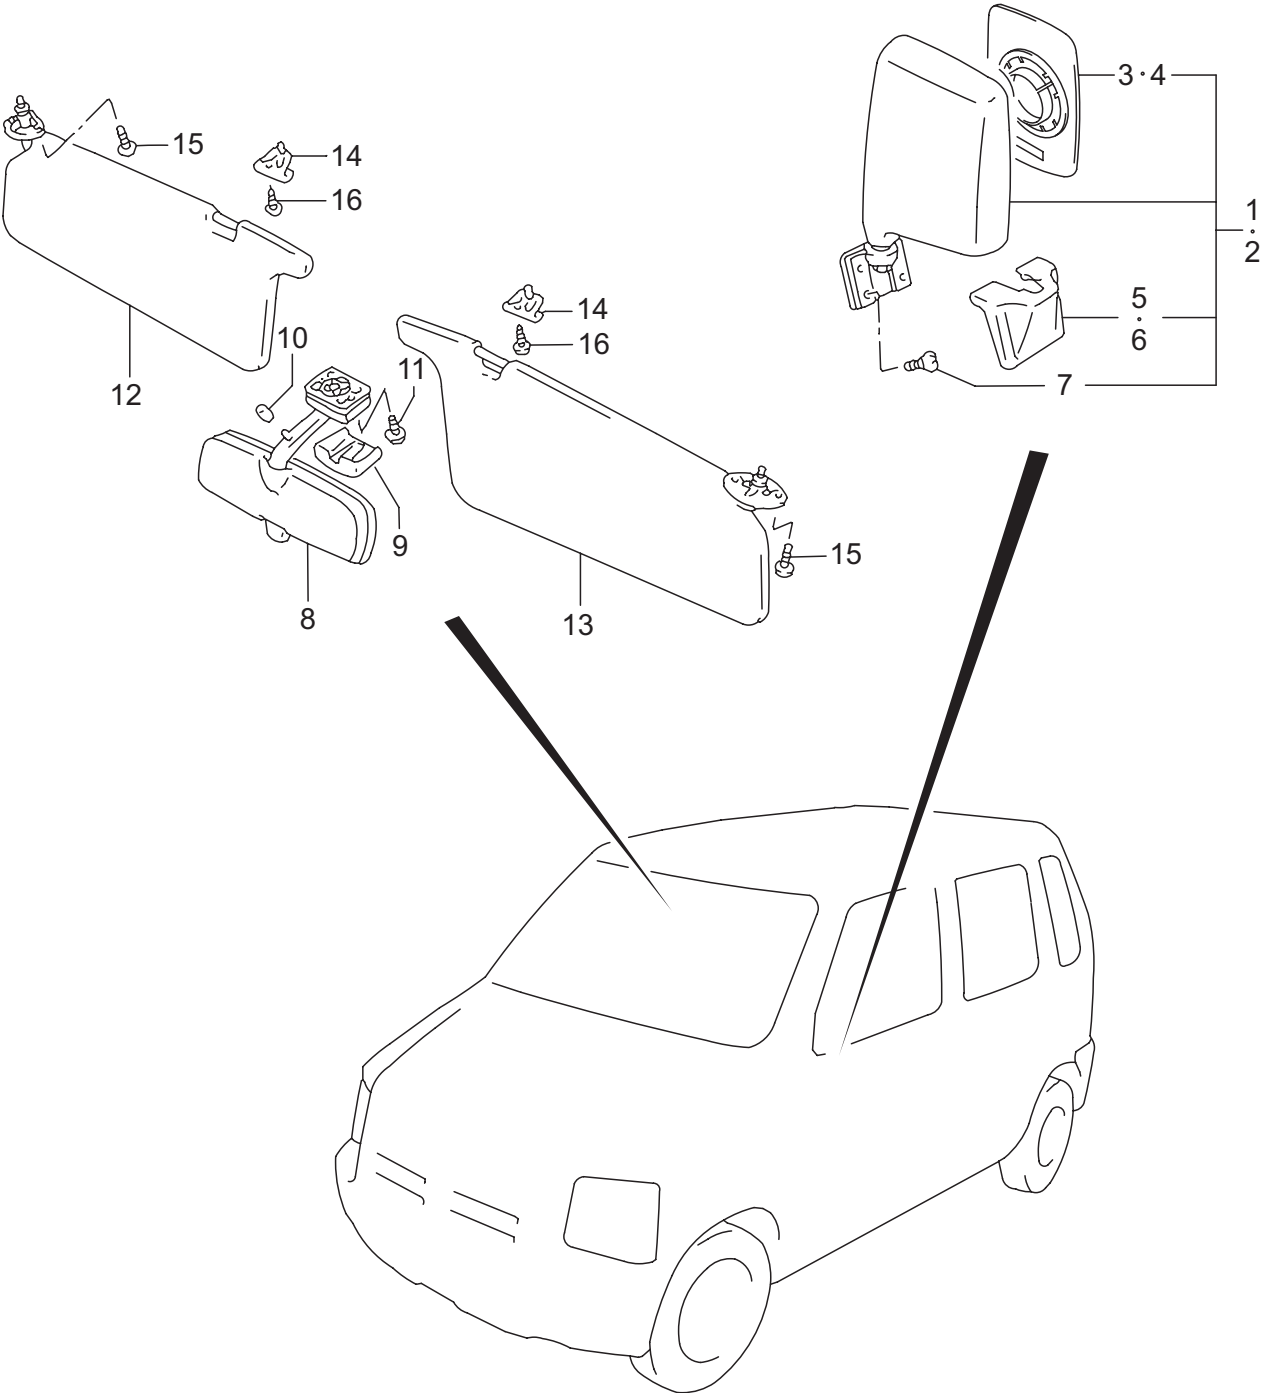


FIG.Nº.102 - MIRROR / SUNVISOR

REF.Nº.	PORTE	DESCRIPCION	CXV	OBSERVACIONES
1	84701-75F21-5PK	MIRROR ASSY, OUT RR VIEW RH (BLACK)	1	
2	84702-75F21-5PK	MIRROR ASSY, OUT RR VIEW LH (BLACK)	1	
3	84740-74F61	.MIRROR, REAR VIEW GLASS RH	1	
4	84750-74F61	.MIRROR, REAR VIEW GLASS LH	1	
5	84729-75F10-5PK	.COVER, OUT RR VIEW MIRROR,RH (BLACK)	1	
6	84749-75F10-5PK	.COVER, OUT RR VIEW MIRROR,LH (BLACK)	1	
7	02162-05163	.SCREW	8	
8	84703-75F00-5PK	MIRROR ASSY, INSIDE RR VIEW (BLACK)	1	
9	84791-70B10-5PK	COVER, INSIDE MIRROR (BLACK)	1	
10	84792-70B10	SUPPORT, INSIDE MIRROR	1	
11	02142-05123	SCREW	2	
12	84801-75F70-6NY	SUNVISOR ASSY, RH (GRAY)	1	
13	84802-75F70-6NY	SUNVISOR ASSY, LH (GRAY)	1	
14	84851-60B00-6GS	HOLDER, SUNVISOR (GRAY)	2	
15	03121-05163	SCREW	4	
16	03211-05163	SCREW	2	

FIG.103

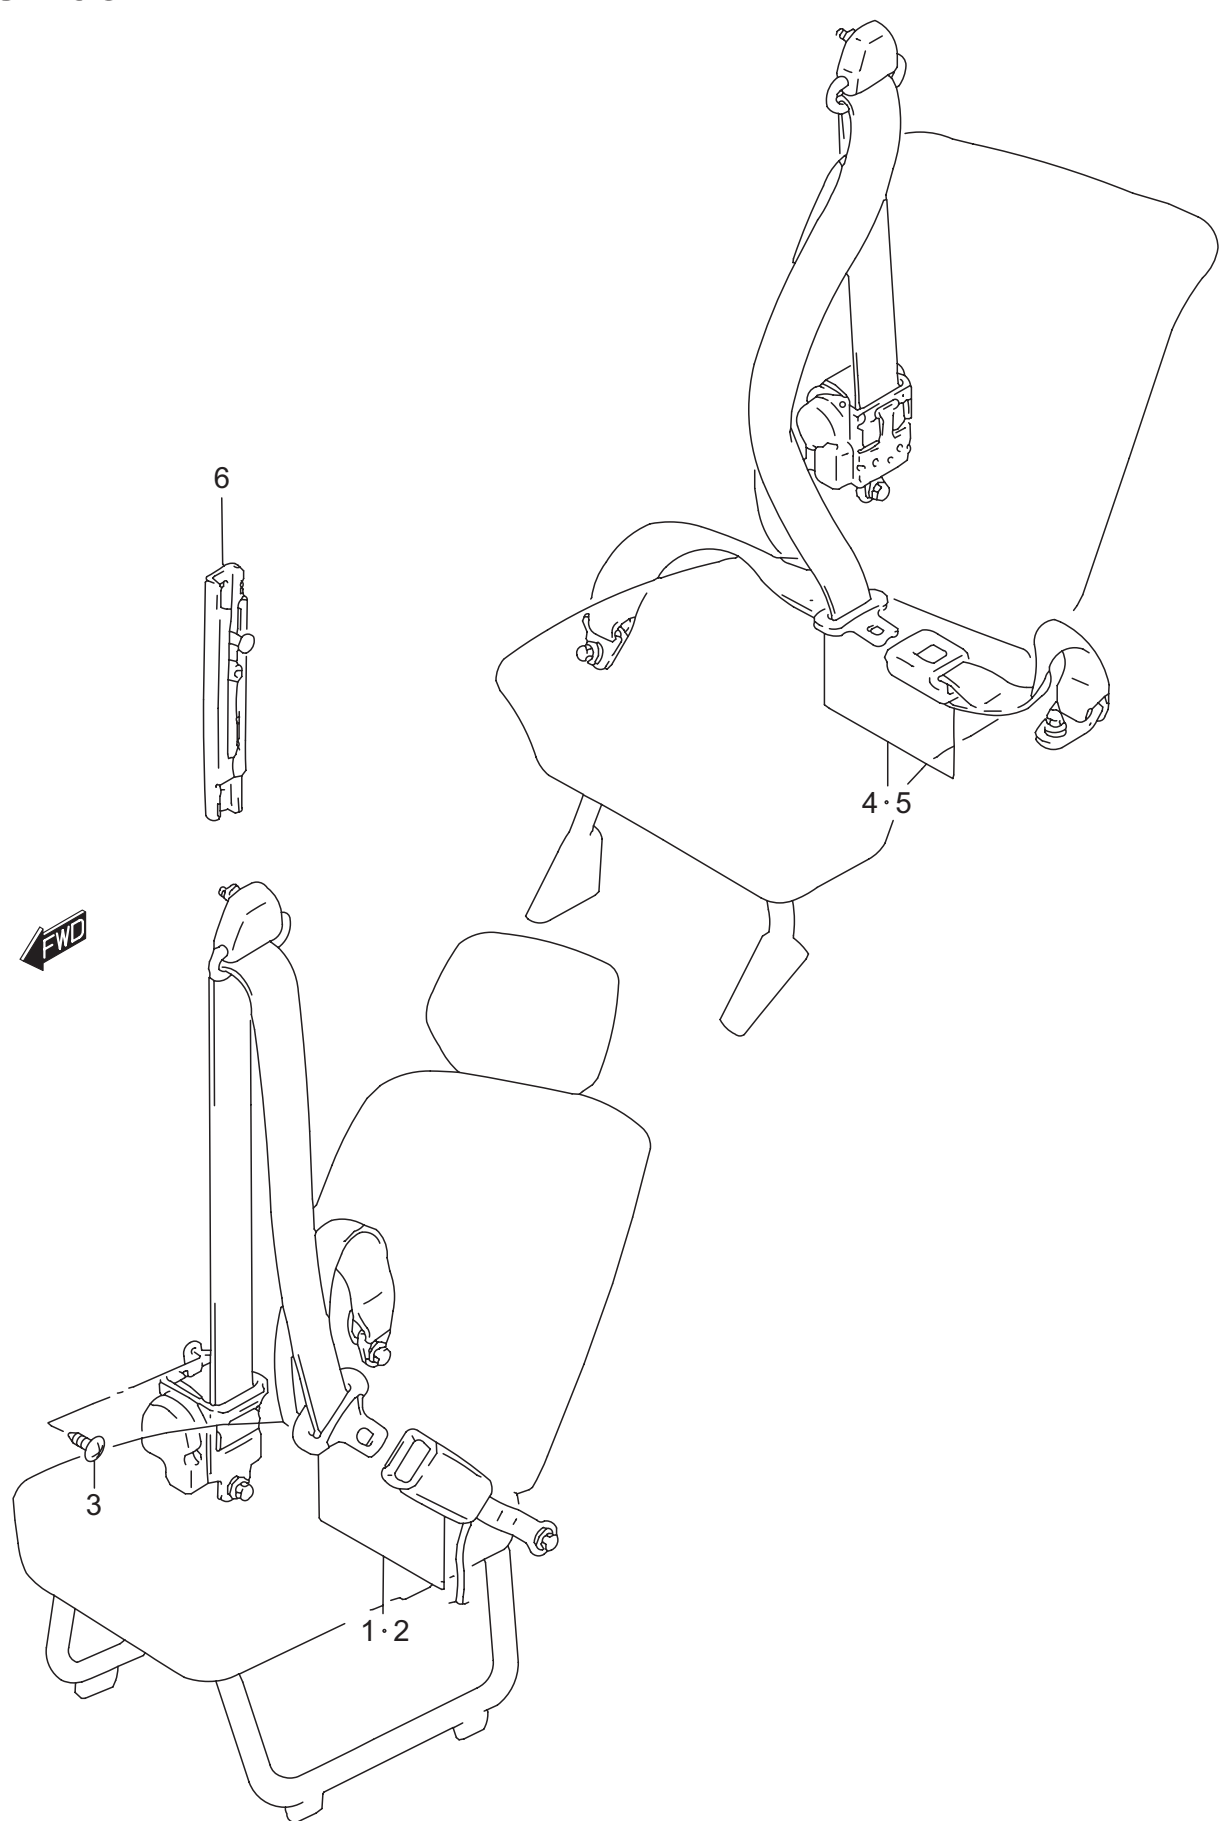


FIG.Nº.103 - SEAT BELT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	84901-75F20-5FJ	BELT ASSY, FRONT RH (BLACK)	1	
2	84902-75F00-5FJ	BELT ASSY, FRONT LH (BLACK)	1	
3	03241-06103	SCREW	2	
4	84904-75F20-5FJ	BELT ASSY, REAR RH (BLACK)	1	
5	84905-75F20-5FJ	BELT ASSY, REAR LH (BLACK)	1	
6	84990-75F00-6GS	ADJUSTER, FR SHOULDER (GRAY)	2	

FIG.104

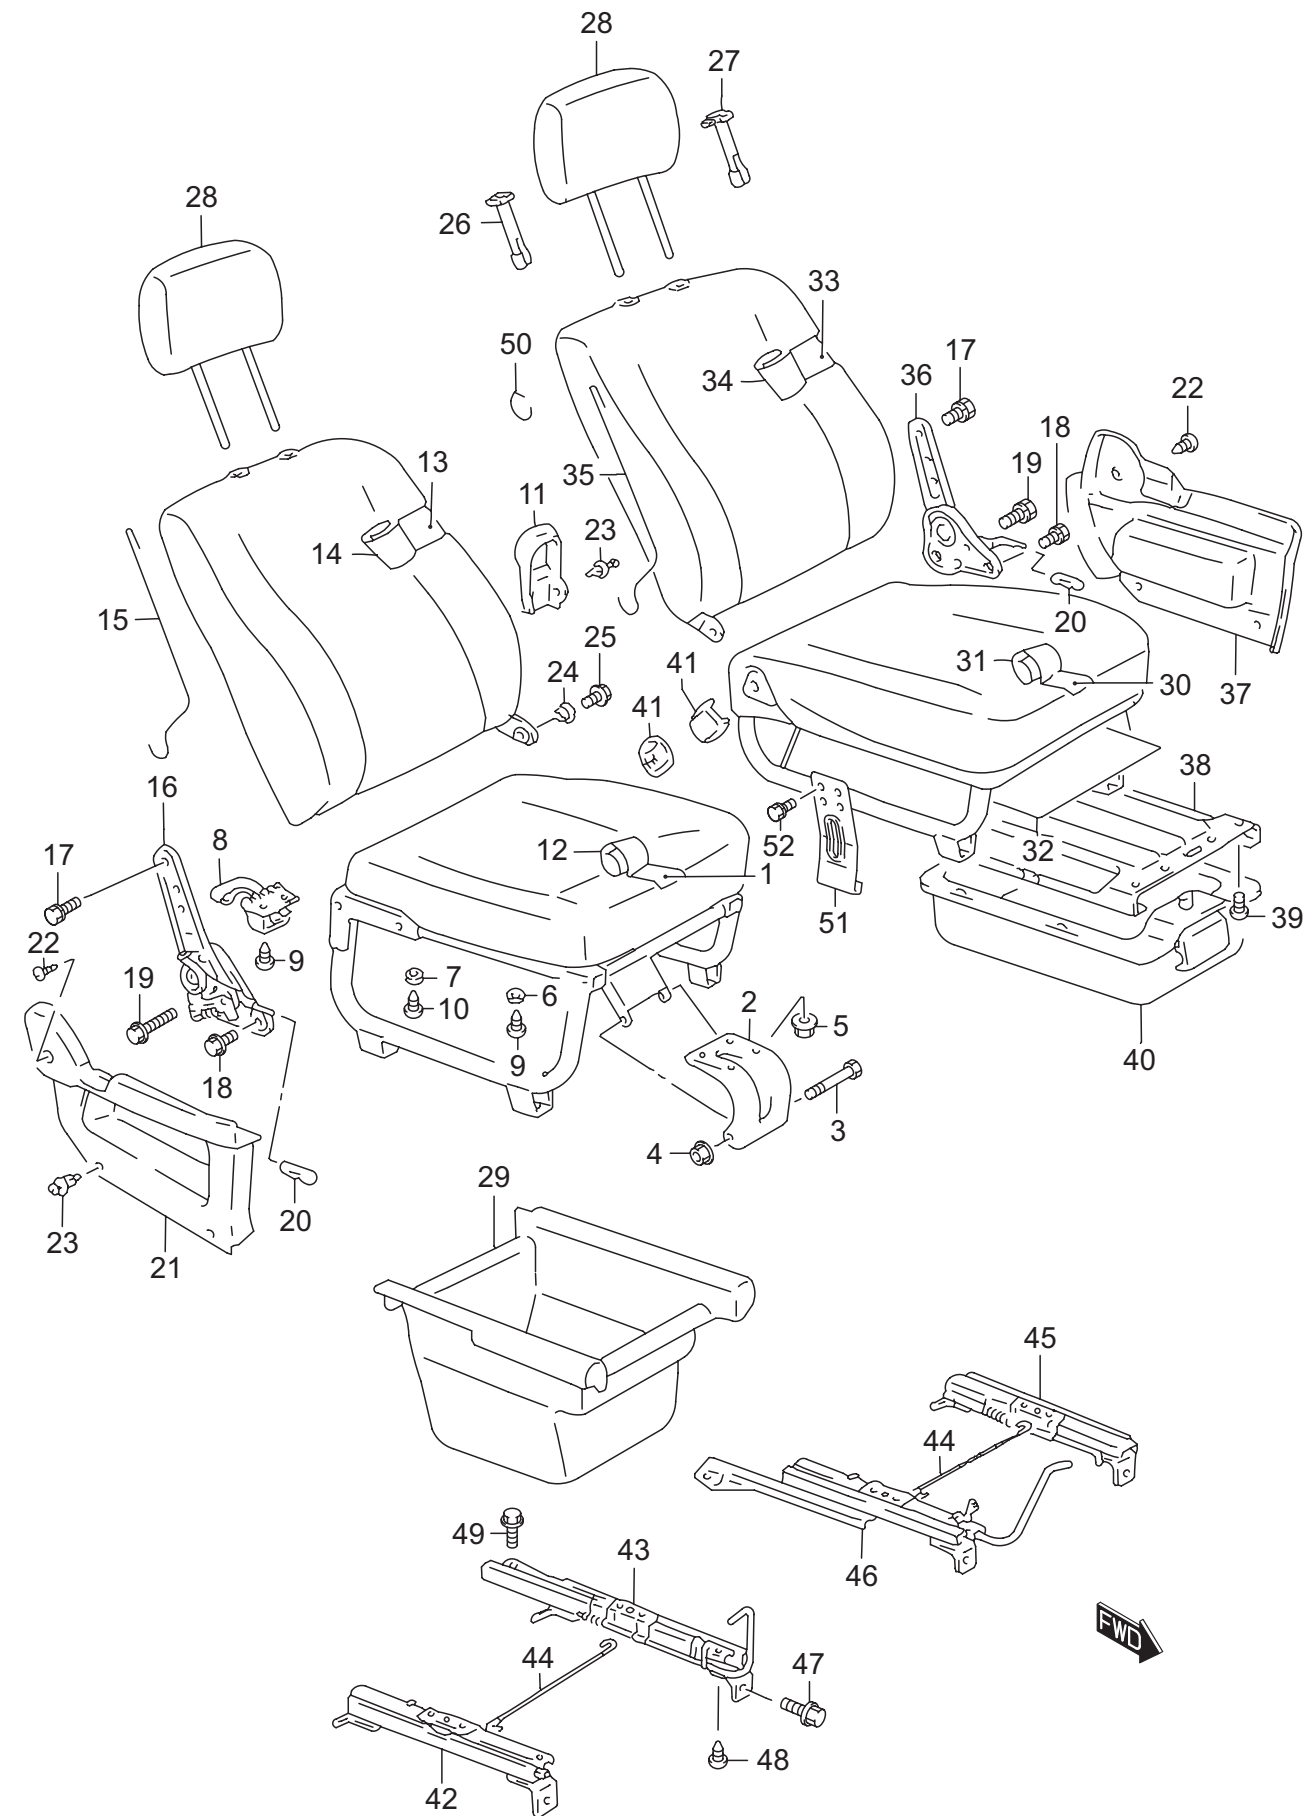


FIG.Nº.104 - FRONT SEAT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	85105-75F50	CUSHION SUB ASSY, RH	1	
2	85961-75F50	.MAIL, CUSHION BOARD HINGE	1	
3	85962-74F00	.PIN, CUSHION HINGE	1	
4	08316-20063	.NUT	1	
5	08313-20063	.NUT	3	
6	87196-83000	.CUSHION, FRONT	1	
7	85291-75F00	.CUSHION, REAR	2	
8	85970-75F00	.LOCK, FRONT CUSHION	1	
9	03242-05123	.SCREW	3	
10	03242-05163	.SCREW	2	
11	85131-75F50-T01	.PROTECTOR, CUSHION FRAME (GRAY)	1	
12	85680-75F01-J0G	COVER, CUSHION RH	1	
13	85305-75F50	BACK SUB ASSY, RH	1	
14	85380-75F10-J0G	COVER, BACK RH	1	
15	85385-75F00	WIRE, BACK SIDE	2	
16	85210-75F00	RECLINING ASSY, RH	1	
17	01570-08163	BOLT	4	
18	01570-10163	BOLT	2	
19	01570-10403	BOLT	2	
20	85211-82000-T01	KNOB, RECLINING (GRAY)	2	
21	85221-75F00-T01	COVER, RECLINING RH (GRAY)	1	
22	03242-05123	SCREW	4	
23	09409-05305-T01	CLIP (GRAY)	5	
24	85291-80290	BUSH, SEAT BACK FIXING	2	
25	09136-06004	SCREW (6X12)	2	
26	85341-72C10-5PK	GUIDE, HEADRESTRAINT (BLACK)	2	
27	85840-72C10-5PK	GUIDE, HEADRESTRAINT (BLACK)	2	
28	86401-75F50-T92	HEADRESTRAINT ASSY (BEIGE)	2	
29	85190-75F00	BOX ASSY, CUSHION UNDER	1	
30	85106-75F51	CUSHION SUB ASSY, LH	1	
31	85680-75F50-J0G	COVER, CUSHION LH	1	
32	85141-74F00	SILENCER, CUSHION	1	

FIG.Nº.104 - FRONT SEAT

REF.Nº. PARTE	DESCRIPCION	CXV	OBSERVACIONES
33	85306-75F50	BACK SUB ASSY, LH	1
34	85380-75F00-J0G	COVER, BACK LH	1
35	85385-75F00	WIRE, BACK SIDE	2
36	85710-75F00	RECLINING ASSY, LH	1
37	85721-74F00-T01	COVER, RECLINING LH (GRAY)	1
38	85120-75F01	BRACKET, SEAT UNDER TRAY	1
39	03242-05123	SCREW	3
40	85150-74F11	TRAY, CUSHION UNDER	1
41	85295-74F20	COVER, FRONT BUCKLE	2
42	86630-74F10	ADJUSTER, OUTSIDE RH	1
43	86610-75F00	ADJUSTER, INSIDE RH	1
44	86621-74F00	ROD, SEAT ADJUSTER	2
45	86830-74F10	ADJUSTER, OUTSIDE LH	1
46	86810-75F00	ADJUSTER, INSIDE LH	1
47	09118-08157	BOLT, ADJUSTER (8X20)	8
48	01570-08163	BOLT, SEAT	8
49	09103-12040	BOLT (12X22)	2
50	09387-19001	RING	AR
51	85651-74F10	BRACKET, ADJUSTER INSIDE	2
52	01570-08163	BOLT, ADJUSTER INSIDE	4

FIG.105

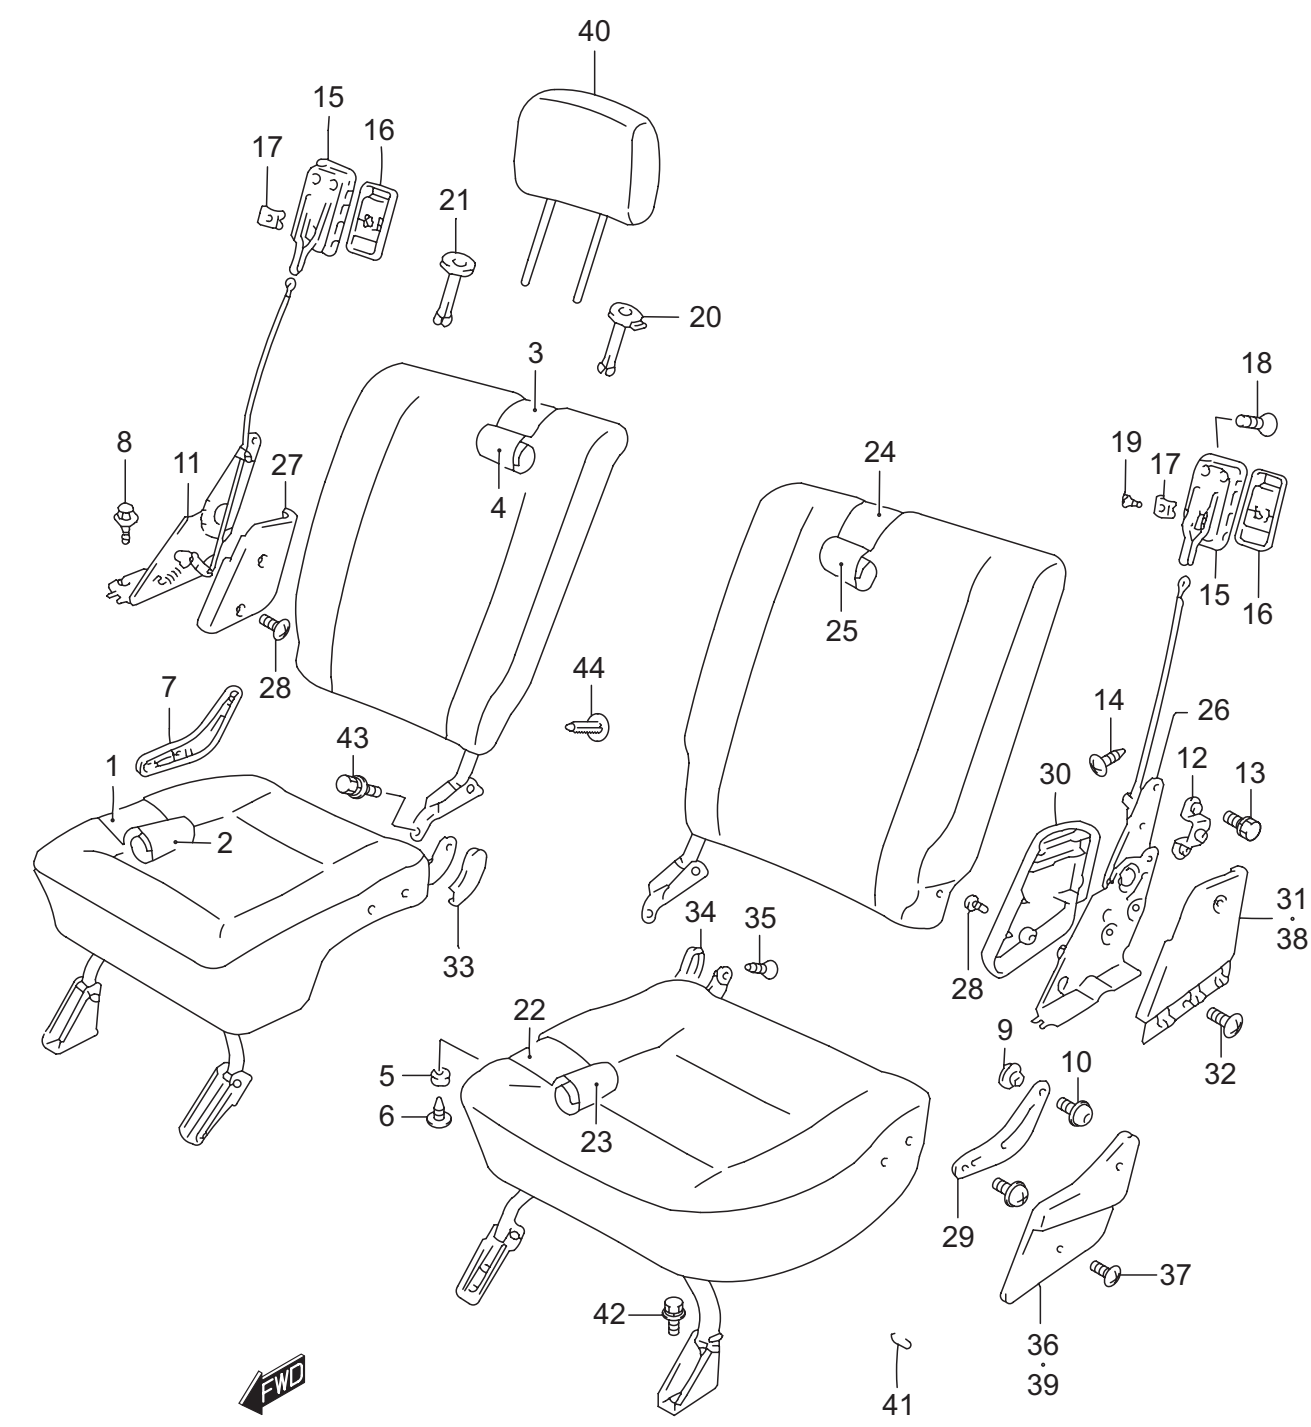


FIG.Nº.105 - REAR SEAT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	87105-75F00	CUSHION SUB ASSY, REAR RH	1	
2	87180-75F00-J0G	COVER, REAR CUSHION RH	1	
3	87305-75F00	BACK SUB ASSY, REAR RH	1	
4	87380-75F00-J0G	COVER, REAR BACK RH	1	
5	09320-06003	CUSHION	4	
6	03242-05123	SCREW	4	
7	87128-74F10	STAY, REAR OUTSIDE RH	1	
8	01570-08163	BOLT	4	
9	87119-74F00	BUSH, BACK FIXING	4	
10	09136-06004	SCREW (6X12)	4	
11	87320-75F00	RECLINING ASSY, REAR RH	1	
12	87315-74F10	BRACKET, REAR BACK OUTSIDE	2	
13	01570-08203	BOLT	4	
14	03241-05083	SCREW	2	
15	87841-74F01-5PK	BASE, REAR RECLINING LEVER (BLACK)	2	
16	87842-74F11-5PK	LEVER, REAR RECLINING (BLACK)	2	
17	87843-74F01	STOPPER, LOCK RELEASE LEVER	2	
18	02122-05103	SCREW	4	
19	03242-05123	SCREW	2	
20	85840-72C10-5PK	GUIDE, HEADRESTRAINT (BLACK)	2	
21	85341-72C10-5PK	GUIDE, HEADRESTRAINT (BLACK)	2	
22	87106-75F00	CUSHION SUB ASSY, REAR LH	1	
23	87680-75F00-J0G	COVER, REAR CUSHION LH	1	
24	87306-75F00	BACK SUB ASSY, REAR LH	1	
25	87880-75F00-J0G	COVER, REAR BACK LH	1	
26	87720-75F00	RECLINING ASSY, REAR LH	1	
27	87445-74F11-T01	COVER, RECLINING INSIDE RH (GRAY)	1	
28	02142-05083	SCREW	4	
29	87628-74F10	STAY, OUTSIDE	1	
30	87545-74F11-T01	COVER, RECLINING INSIDE LH (GRAY)	1	

FIG.Nº.105 - REAR SEAT

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
31	87441-74F50-T01	COVER, RECLINING OUTSIDE RH (GRAY)	1	
32	02142-05083	SCREW	4	
33	87117-75F00-T01	COVER, REAR CUSHION STAY RH (GRAY)	1	
34	87617-75F00-T01	COVER, REAR CUSHION STAY LH (GRAY)	1	
35	03222-04083	SCREW	2	
36	87117-74F51-T01	COVER, STAY OUTSIDE RH (GRAY)	1	
37	87245-74F00	SCREW, STAY COVER	2	
38	87541-74F10-T01	COVER, RECLINING OUTSIDE LH (GRAY)	1	
39	87617-74F11-T01	COVER, STAY OUTSIDE LH (GRAY)	1	
40	86401-75F50-T92	HEADRESTRAINT ASSY (BEIGE)	2	
41	09387-19001	RING	AR	
42	09118-08157	BOLT (8X20)	8	
43	09118-08156	BOLT (8X25)	8	
44	09409-10302-T01	CLIP (GRAY)	6	

FIG.106

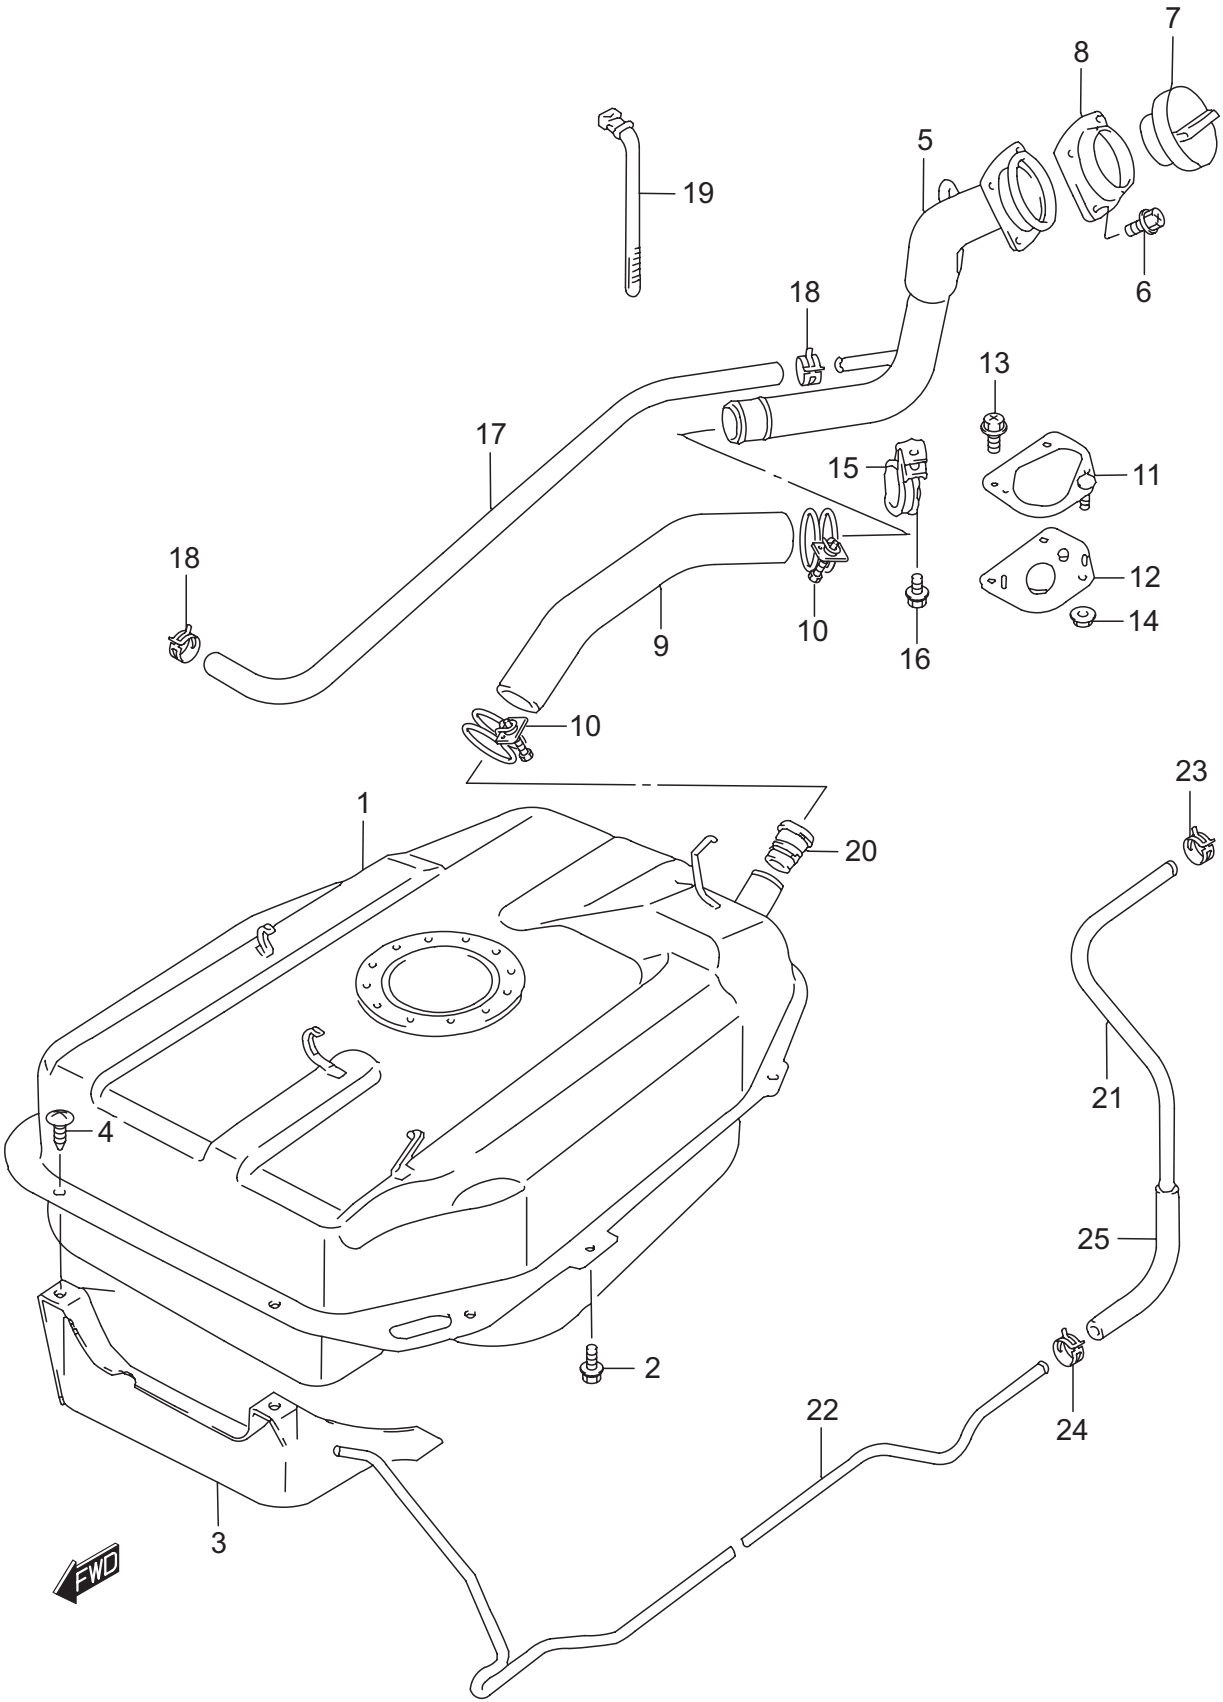


FIG.Nº.106 - FUEL TANK

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	89101-75F12	TANK ASSY, FUEL	1	
2	09118-08160	BOLT (8X25)	4	
3	89191-76G00	COVER, TANK LOWER	1	
4	03542-06163	SCREW	3	
5-1	89201-75F11	NECK, FUEL FILLER	1	N/RESTRICTOR
5-2	89201-75F01	NECK, FUEL FILLER	1	W/RESTRICTOR
6	02162-05123	BOLT	2	
7	89260-50J00	CAP ASSY, FUEL FILLER	1	
8	89285-75F00	PACKING, FUEL FILLER	1	
9	89241-75F00	HOSE, FUEL TANK FILLER	1	
10	09400-45311	CLAMP	2	
11	89291-75F00	BRACKET, FUEL FILLER NECK	1	
12-1	89282-75F00	SEAL, FUEL FILLER NECK	1	
12-2	89282-75F10	SEAL, FUEL FILLER NECK	1	2001-6~
13	02162-06163	SCREW	2	
14	08316-10063	NUT	1	
15	89280-75F00	CLAMP, FUEL FILLER NECK	1	
16	09118-06106	BOLT (6X16)	1	
17	09355-11165-00B	HOSE	1	L:2000→720
18	09401-14404	CLAMP	2	
19	09407-19401	CLAMP (L:190)	1	
20	89270-75F00	VALVE, TANK INLET	1	
21	09359-54112-760	HOSE	1	L:760→540
22	89483-75F00	PIPE, FUEL EVAPORATOR	1	
23	09401-12404	CLIP	1	
24	09401-11413	CLIP	1	
25	89489-63B00	PROTECTOR, VALVE OUTLET HOSE	1	L:200→100

FIG.107

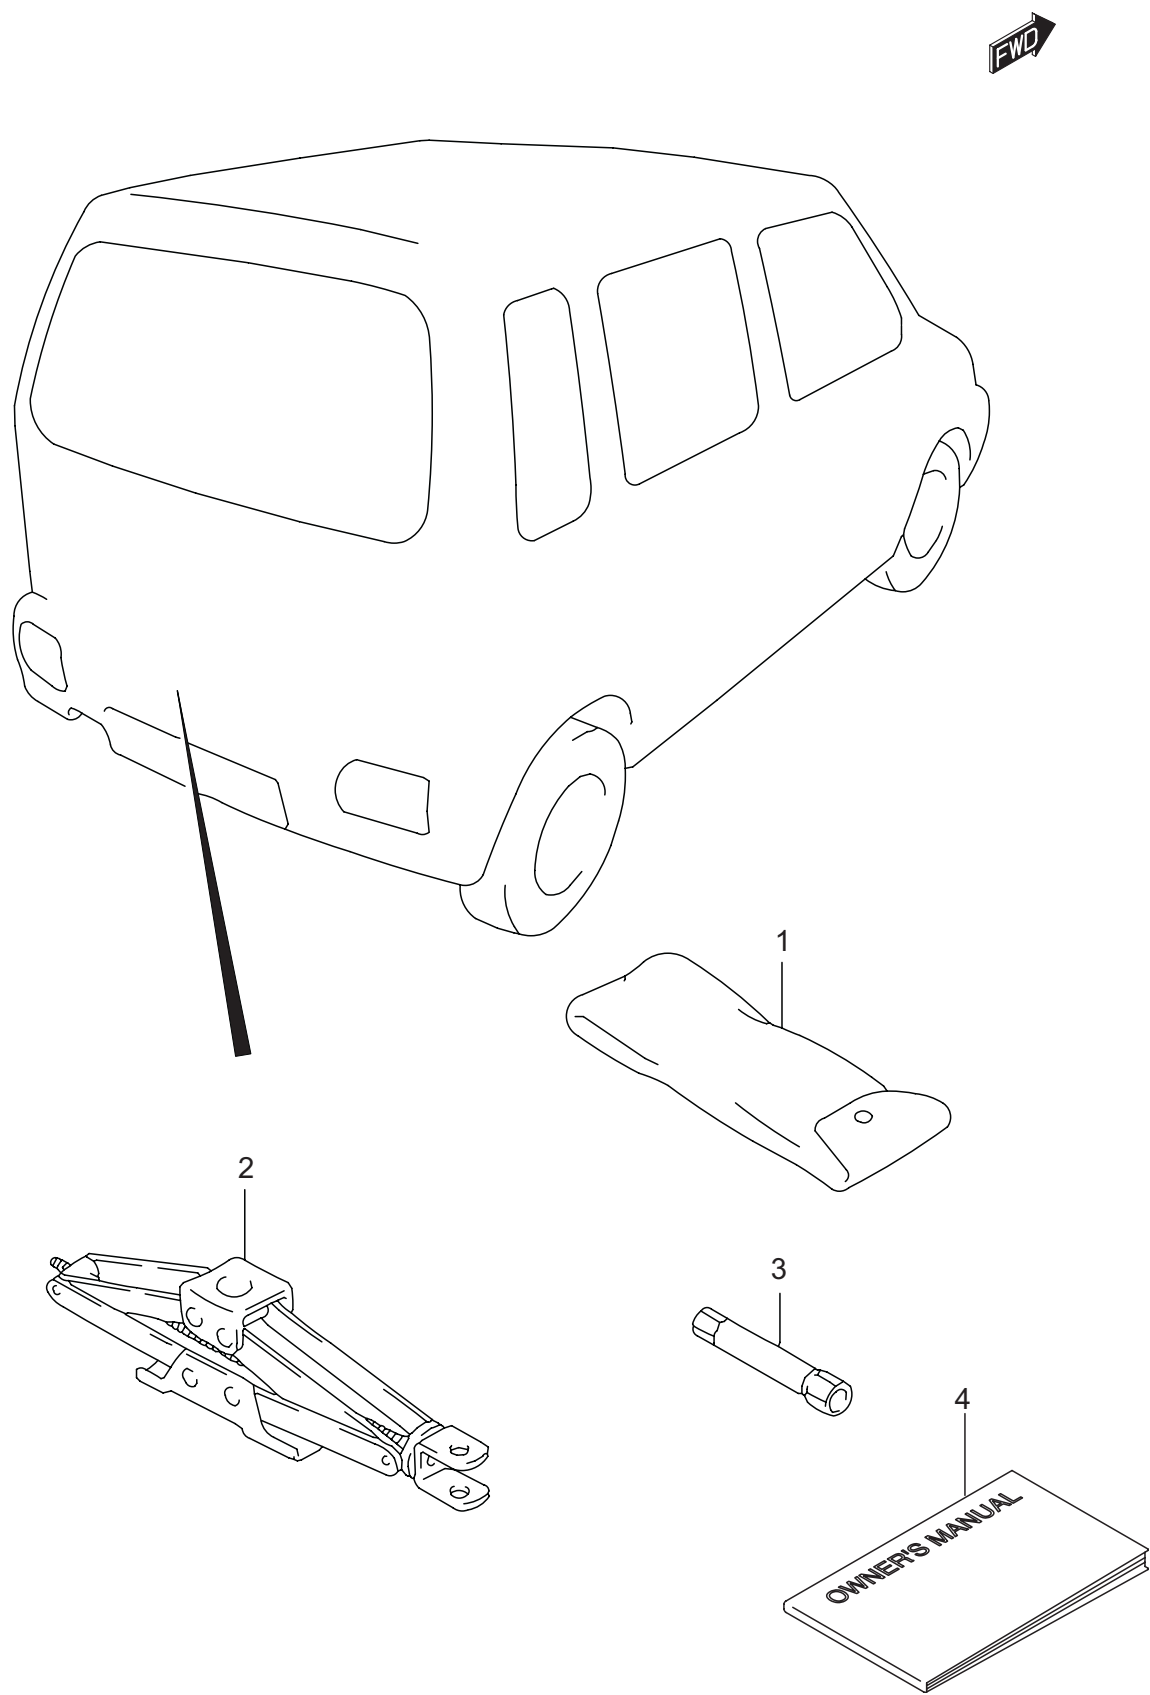


FIG.Nº.107 - TOOL

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	09800-40025	TOOL ASSY	1	
2	89910-70CA0	JACK ASSY	1	
3	09816-00141	BOX, SPANNER 16	1	OPT
4	99011-75F21-012	MANUAL, OWNER'S	1	

FIG.108

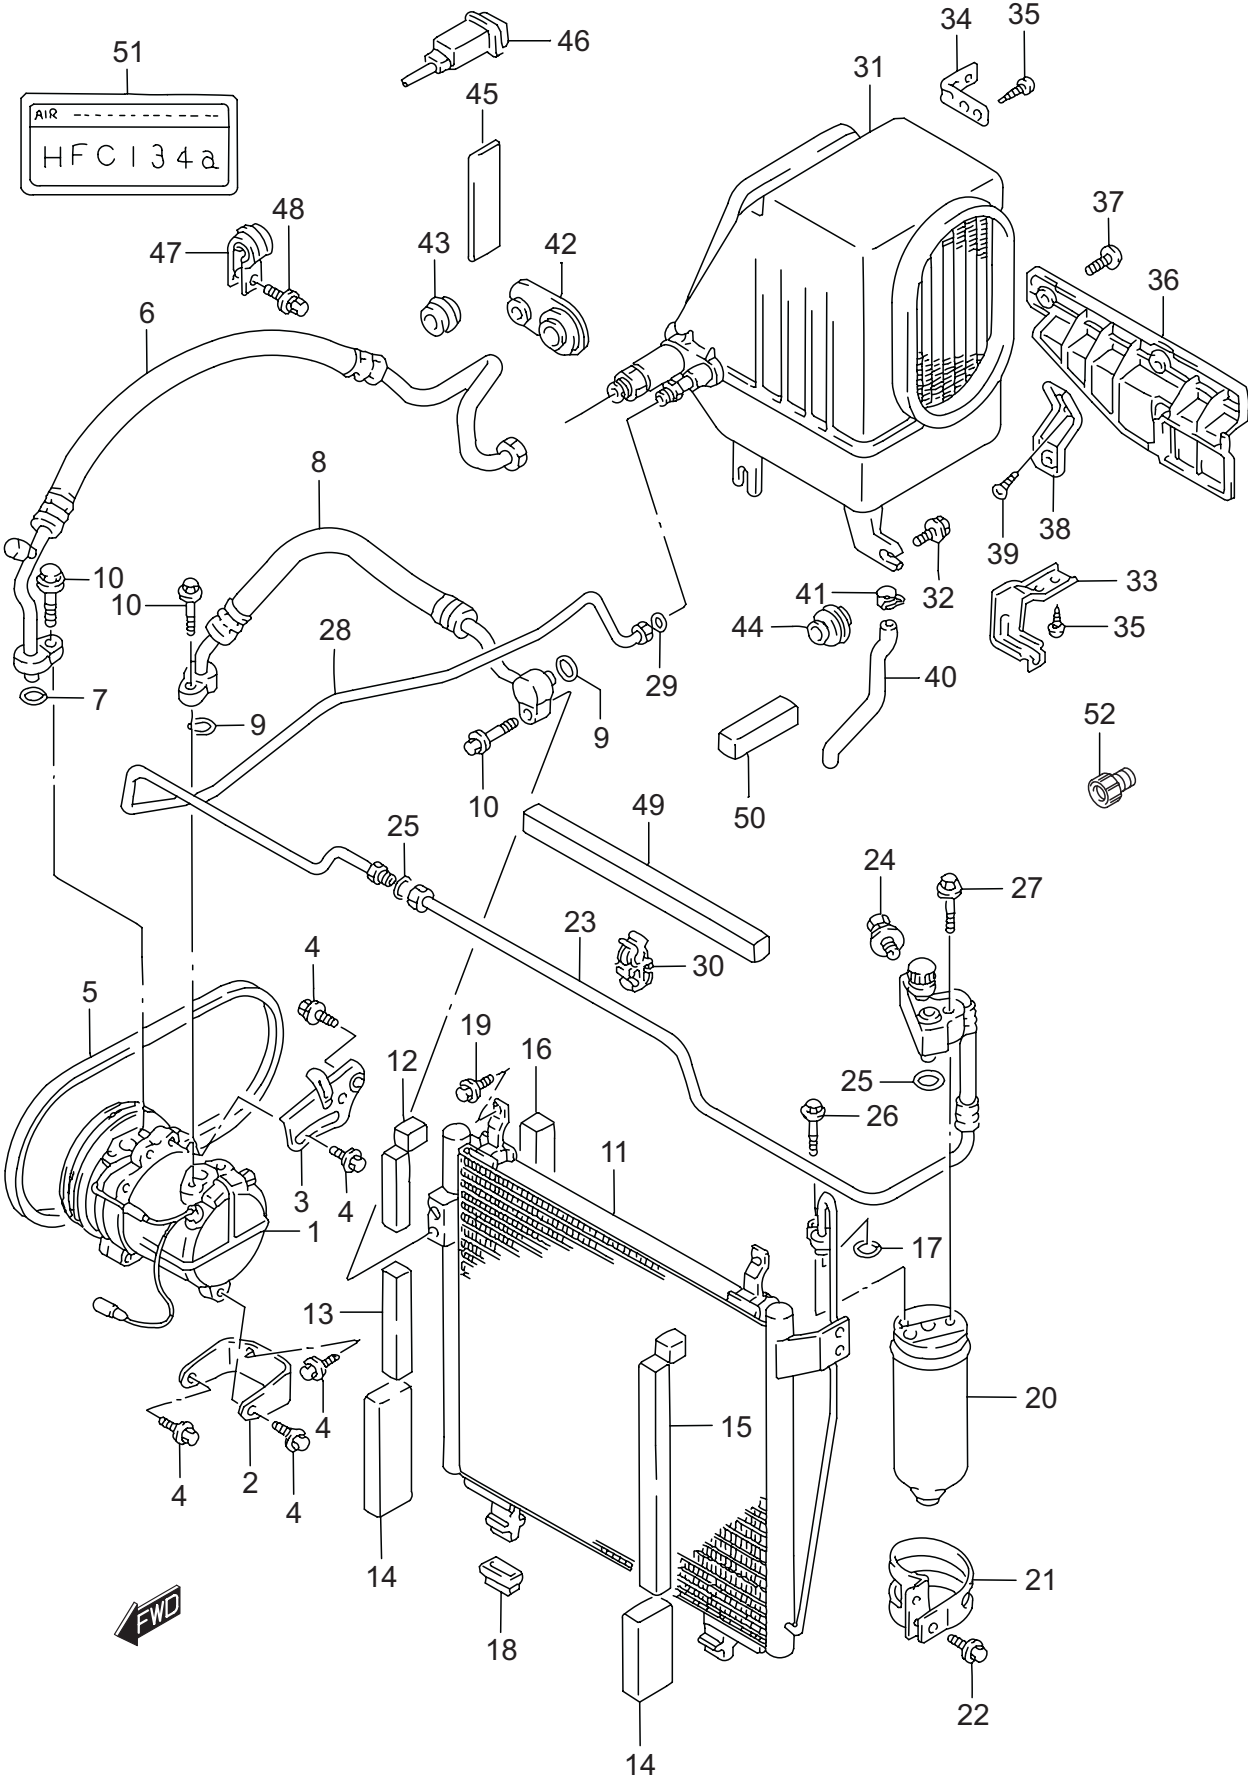


FIG.Nº.108 - AIR CONDITIONER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
1	95200-70C30	COMPRESSOR ASSY	1	
2	95110-73G01	BRACKET, COMPRESSOR	1	
3	95121-75F00	STAY, COMPRESSOR	1	
4	01550-08203	BOLT	7	
5	95142-80000	V BELT	1	
6	95710-75F51	HOSE, SUCTION	1	
7	95896-50G00	.O RING	1	
8	95720-75F01	HOSE, DISCHARGE	1	
9	95895-50G00	.O RING	2	
10	01550-06203	BOLT	3	
11	95310-75F00	CONDENSER ASSY	1	
12	95812-75F00	.PACKING, RH	1	
13	95813-75F10	.PACKING, RH	1	
14	95816-75F10	.PACKING	2	
15	95814-75F10	.PACKING, LH	1	
16	95815-75F00	.PACKING, REAR	2	
17	95891-50G00	.O RING	1	
18	95851-75F00	BUSH, CONDENSER	2	
19	02162-06163	BOLT	2	
20	95330-77G00	RECEIVER DRYER	1	
21	95351-60G40	BRACKET, RECEIVER	1	
22	02162-06163	BOLT	2	
23	95731-75F60	PIPE, RECEIVER OUTLET	1	
24	95526-77A00	.SWITCH, PRESSURE	1	
25	95891-50G00	.O RING	2	
26	01550-06203	BOLT	1	
27	01550-06353	BOLT	1	
28	95732-75F60	PIPE, COOLING UNIT INLET	1	
29	95891-50G00	.O RING	1	
30	09403-08321	CLAMP	4	
31	95400-75F51	COOLING UNIT	1	
32	02162-06163	BOLT	1	
33	95491-75F50	BRACKET, COOLING UNIT	1	

FIG.Nº.108 - AIR CONDITIONER

REF.Nº. PARTE		DESCRIPCION	CXV	OBSERVACIONES
34	95492-70B00	STAY, COOLING UNIT	1	
35	03541-05103	SCREW	6	
36	95841-75F50	COVER, COOLING UNIT	1	
37	02142-06163	SCREW	2	
38	95842-75F00	BRACKET, COVER	2	
39	03541-05163	SCREW	1	
40	09352-90141-600	HOSE, DRAIN	1	L:600→140
41	09401-13417	CLIP	1	
42	95833-50E01	GROMMET, JOINT PIPE	1	
43	74812-60B00	GROMMET	2	
44	74814-82000	GROMMET, DRAIN HOSE	1	
45	36930-82010	COVER	2	
46	95521-70G10	SWITCH, AIR CONDITIONER	1	
47	95771-50E00	CLAMP, SUCTION PIPE	1	
48	02162-06163	BOLT	1	
49	95811-70B00	PACKING, HOOD	2	
50	95811-75F00	PACKING, HOOD	1	
51	95955-72B00	LABEL, REFRIGERANT	1	
52	09246-04005	PLUG, BOOST	1	

FIG. 109

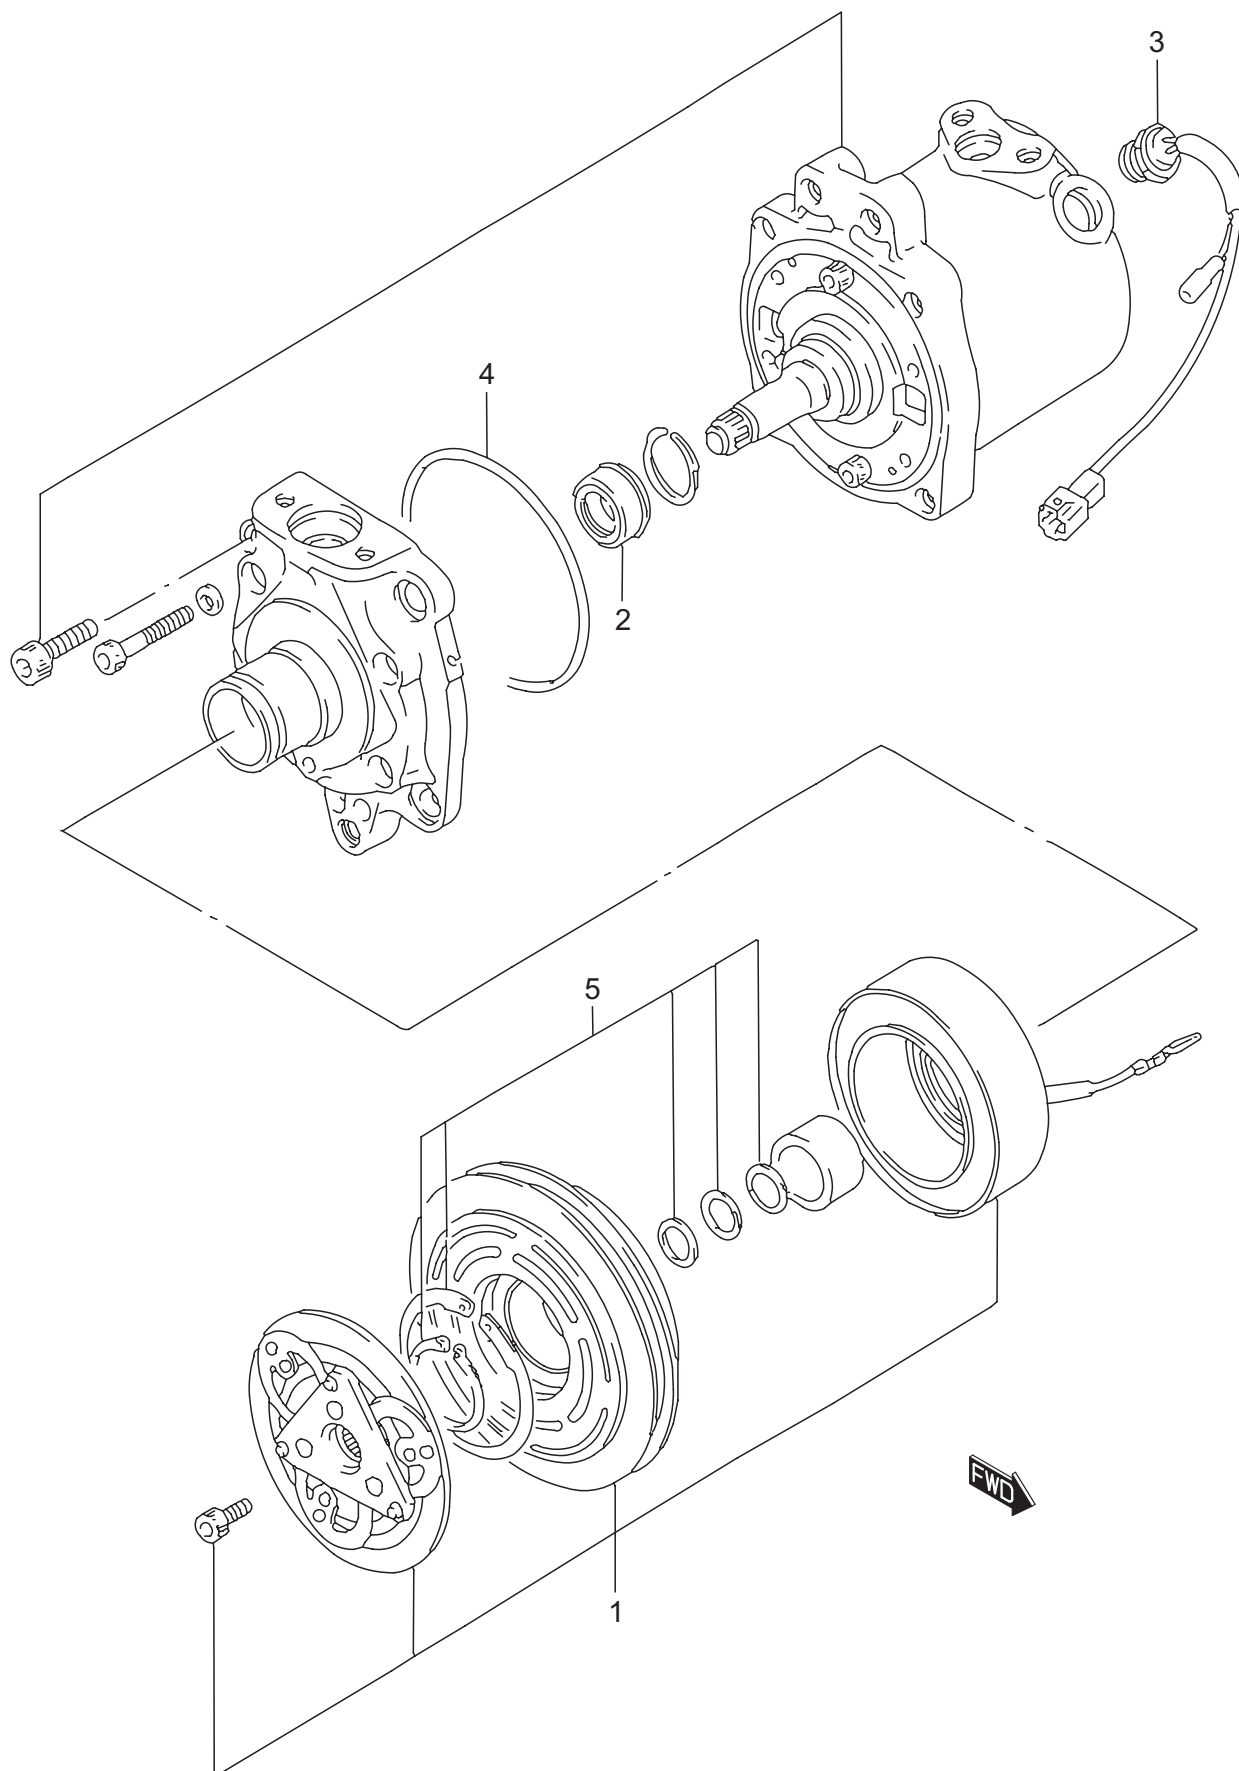


FIG.Nº.109 - COMPRESSOR

REF.Nº. PARTE	DESCRIPCION	CXV	OBSERVACIONES
	95200-70C30	COMPRESSOR ASSY	1
1	95210-70C00	.CLUTCH, MAGNET	1
2	95261-70B00	.SEAL	1
3	95527-72B00	.SWITCH, THERMAL	1
4	95262-70B00	.O RING	1
5	95298-72B20	.CLIP KIT	1

FIG.110

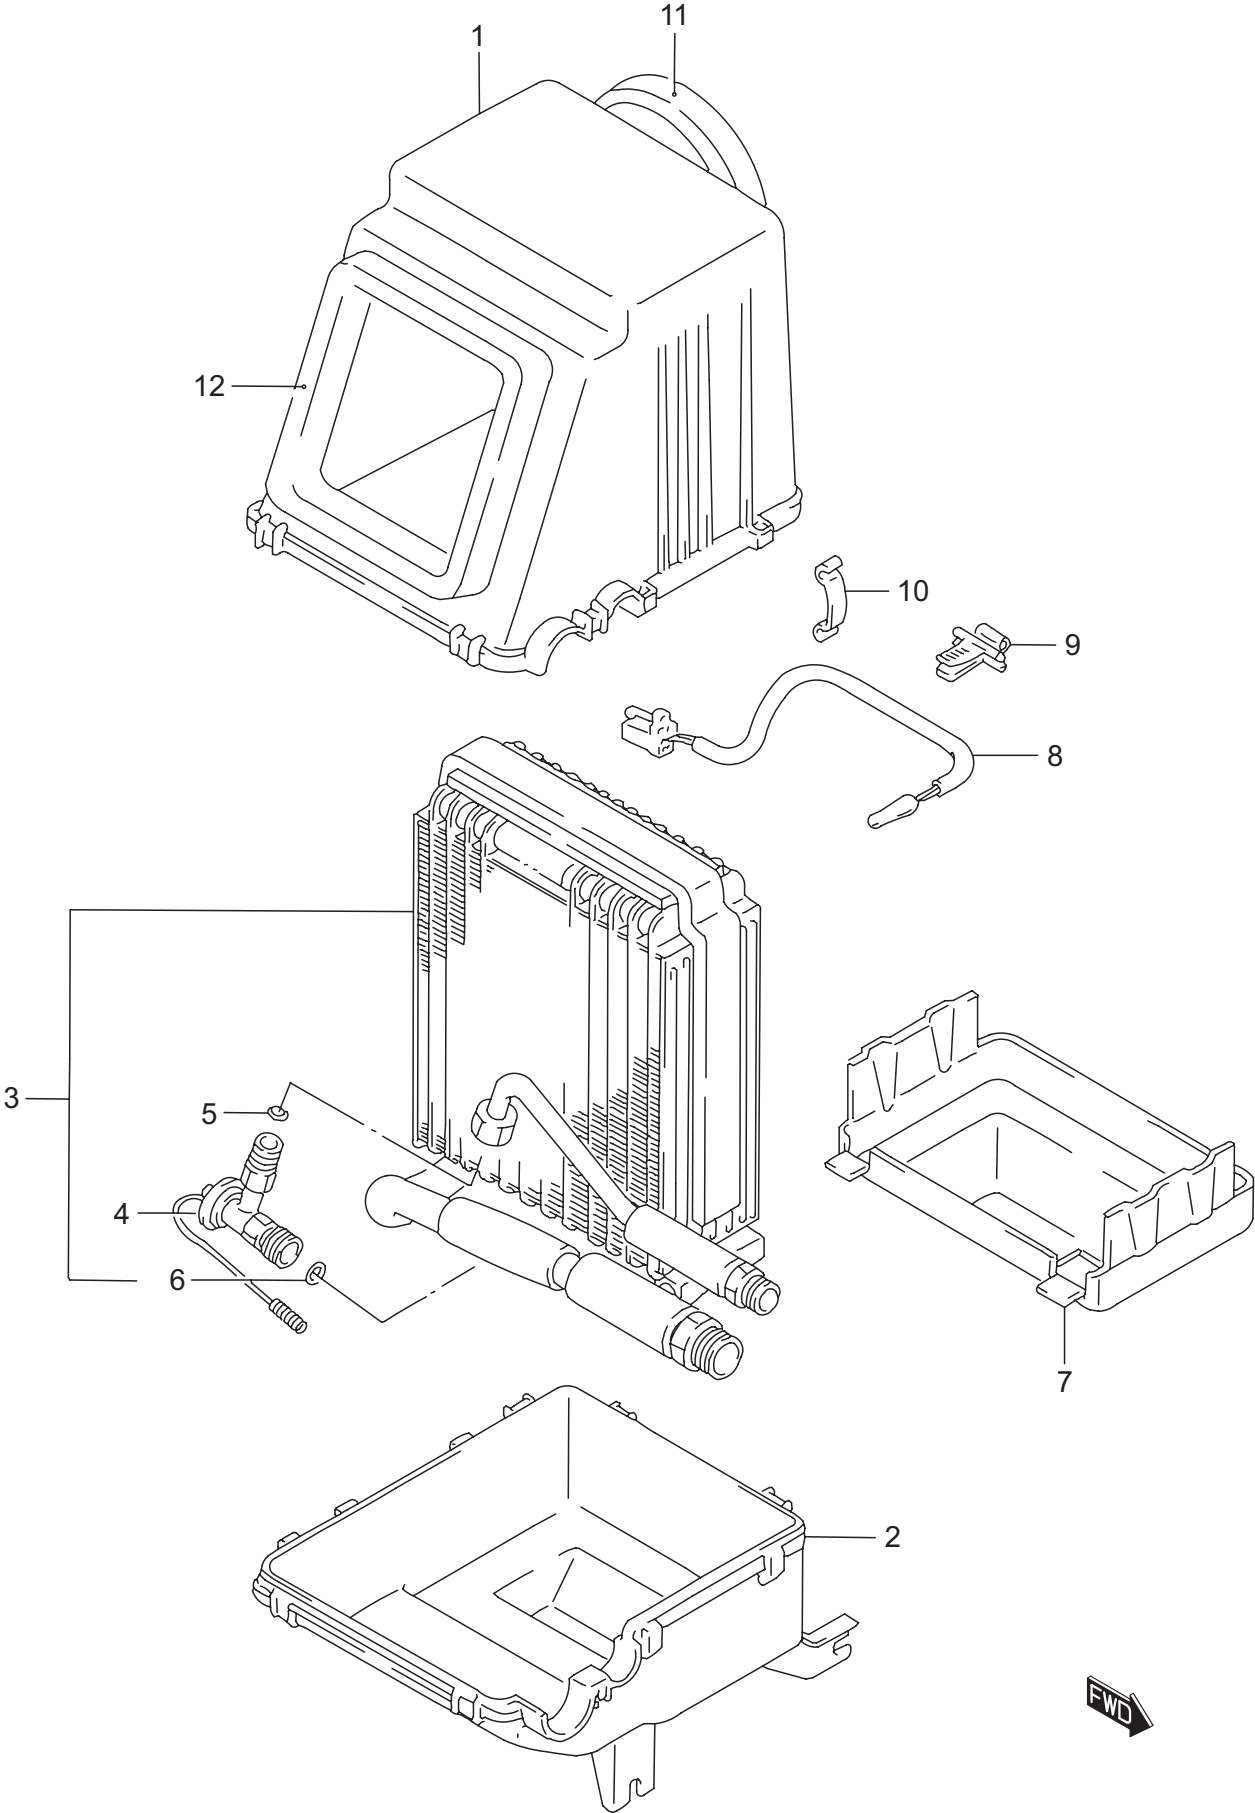


FIG.Nº.110 - COOLING UNIT

REF.Nº.	PARTE	DESCRIPCION	CXV	OBSERVACIONES
	95400-75F51	COOLING UNIT	1	
1	95421-78B00	.CASE, UPPER	1	
2	95422-78B00	.CASE, LOWER	1	
3	95410-75F50	.CORE	1	
4	95431-72B00	..VALVE, EXPANSION	1	
5	95891-50G00	..O RING	1	
6	95895-50G00	..O RING	1	
7	95465-78B01	.PACKING, CORE LOWER	1	
8	95541-80F00	.THERMISTOR	1	
9	95452-70B21	.CLAMP, THERMISTOR	1	
10	74316-85500	.CLAMP, CASE	7	
11	95461-70B01	.PACKING, HEATER	1	
12	95462-70B01	.PACKING, AIR DAMPER	1	

FIG.111

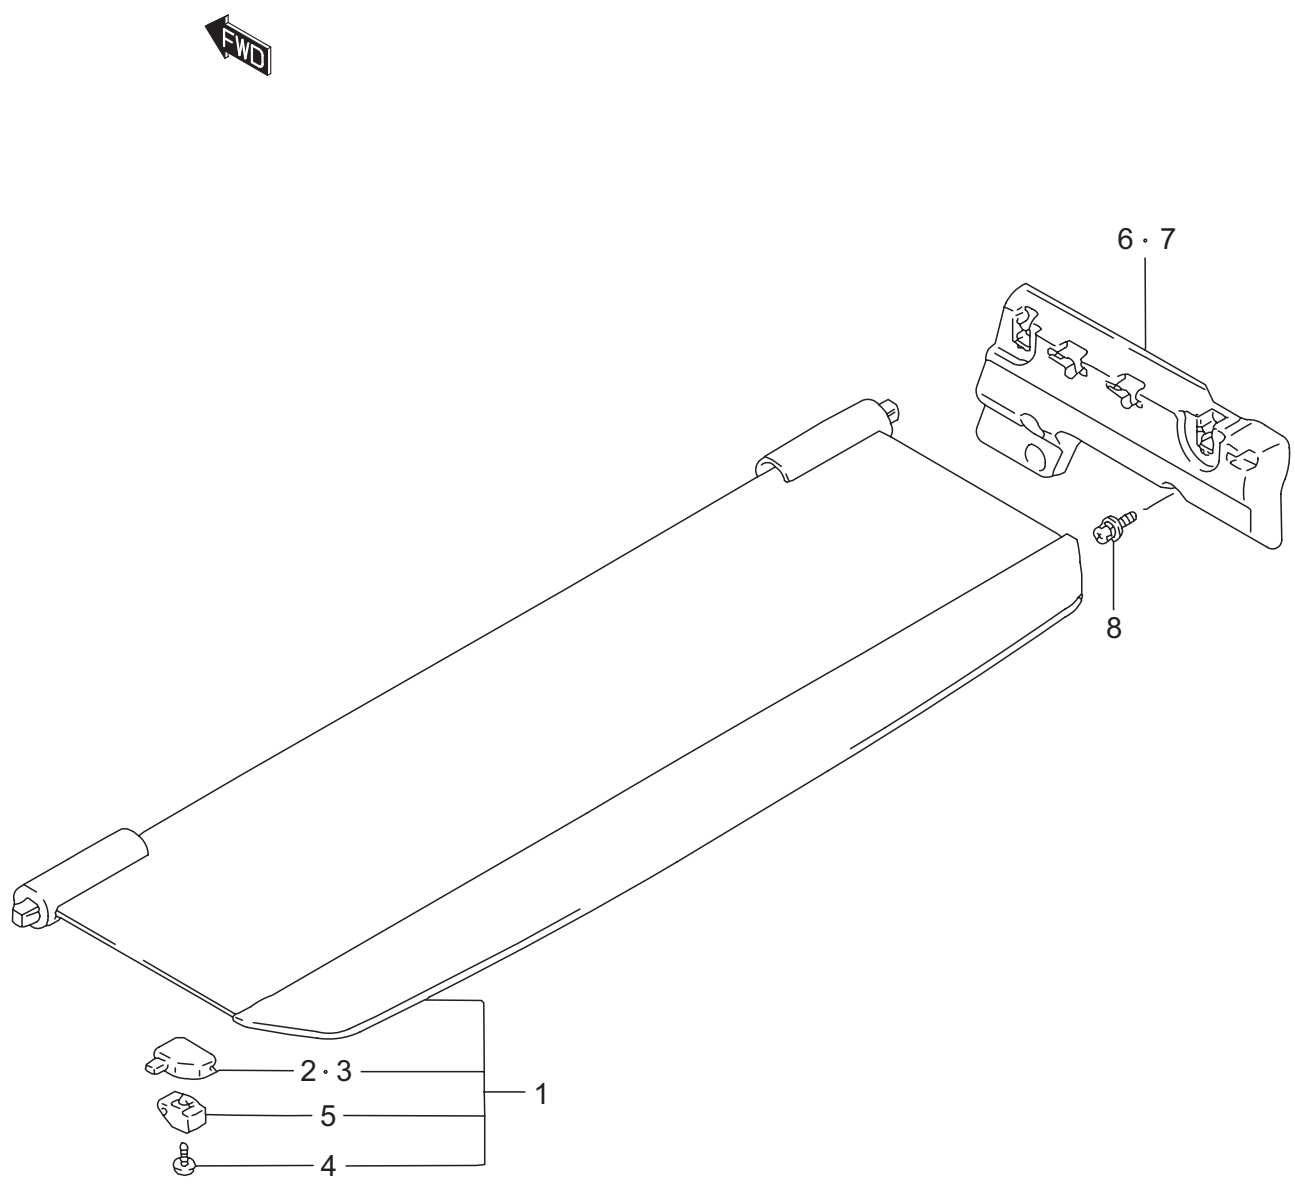


FIG.Nº.111 - TONNEAU COVER

REF.Nº. PARTE	DESCRIPCION	CXV	OBSERVACIONES
1	87410-75F00-T01 COVER, TONNEAU (GRAY)	1	
2	87415-63G00 .STOPPER, RH	1	
3	87416-63G00 .STOPPER, LH	1	
4	87417-63G00 .SCREW	2	
5	87418-75F00 .DAMPER	2	
6	87430-75F00-T01 GARNISH, TONNEAU RH (GRAY)	1	
7	87450-75F00-T01 GARNISH, TONNEAU LH (GRAY)	1	
8	02162-06163 SCREW	6	