

BAJAJ
Pulsar₂₀₀
OIL/COOLED



CATÁLOGO DE PARTES

www.auteco.com.co
Línea gratuita nacional-018000 520090



IRC *LLANTAS* *TECNOLOGÍA JAPONESA*



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
PULSAR 220	DELANTERA	90/90X17	IRC	NF45	PISTERA TUBE LESS	41070-9017-NF45/18
				NF52TL	PISTERA TUBE LESS	41070-9017-NF52TL/18
				NF53	PISTERA TUBE LESS	41070-9017-NF53/18
				NF42	PISTERA TUBE LESS	41070-9017-NF42/18
				NF46	PISTERA TUBE LESS	41070-9017-NF46/18
		110/70-17		RX01	PISTERA TUBE LESS	41070-1117-RX01/18
PULSAR 200NS PULSAR 200/180 UG	DELANTERA	130/70-17	IRC	RX01	PISTERA TUBE LESS	41070-1317-RX01/18
		120/80X17		NR57TL	PISTERA TUBE LESS	41070-1217-NR57TL/18
		2.75X17		NR53	PISTERA	41070-2717-NR53/18
		90/80X17		NR73	PISTERA	41070-9017-NR73TT/18
		90/90X17		NF53	PISTERA	41070-9017-NF53/18
		100/80-17		NR73	PISTERA	41070-1017-NR73/18
PULSAR 135	DELANTERA	110/70-17	IRC	RX01	PISTERA	41070-1117-RX01/18
		130/70-17		RX01	PISTERA	41070-1317-RX01/18
		2.75X17		NR53	PISTERA	41070-2717-NR53/18
		90/80-17		NR73TT	PISTERA	41070-9017-NR73TT/18
		70/90-17		NF63BZ	PISTERA	41070-7017-NF63BZ/18
		2.75X17	MAXING	SP1	SPORT	41070-2717-SP1/19
	TRASERA	110/80-17	IRC	NR48TL	PISTERA TUBE LESS	41070-1117-NR48TL/18
				NR53	PISTERA	41070-1117-NR53/18
				NR64	PISTERA	41070-1117-NR64/18
				NR73	PISTERA	41070-1017-NR73/18
		100/80X17				

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
PULSAR 180 (CLASSIC, DTS-i)	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18
				NF2	LINEAL	41070-2718-NF2/18
				NR53	PISTERA	41070-2718-NR53/18
			MAXING	SP1	SPORT	41070-2718-SP1/19
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-3018-SP1/19
DISCOVER 125 ST DISCOVER 125 DISCOVER 100 DISCOVER 135 KS/ES DISCOVER DTSI PULSAR 180 DTS-i TEC,BLACK, PULSAR II	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
		90/80-17		NR73TT	PISTERA	41070-9017-NR73TT/18
		70/90-17		NF63BZ	PISTERA	41070-7017-NF63BZ/18
		2.75X17	MAXING	SP1	SPORT	41070-2717-SP1/19
	TRASERA	3.00X17	IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18
				NR1	SPORT	41070-3017-NR1/18
		100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18
				MB99	PISTERA	41070-1017-MB99/18
				80/90-17	NR78YL	PISTERA
		PLATINO 125 5S, PLATINO CT, 100 SPORT, 125 XCD 125	DELANTERA	90/80-17	IRC	NR73TT
70/90-17	NF63BZ			PISTERA		41070-7017-NF63BZ/18
2.75X17	NR53			PISTERA		41070-2717-NR53/18
	GP1			TRIAL ROMBO		41070-2717-GP1/18
MAXING	SP1			SPORT	41070-2717-SP1/19	
TRASERA	100/80-17		IRC	NR73	PISTERA	41070-1017-NR73/18
				MB99	PISTERA	41070-1017-MB99/18
	3.00X17		IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18
NR1	SPORT	41070-3017-NR1/18				

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
BOXER CON RIN 17" BM150, CT 100, BM 100	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	41070-9017-NR73TT/18
		90/90-17		NR53	PISTERA	41070-2717-NR53/18
		2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
				GP1	TRIAL ROMBO	41070-2717-GP1/18
	TRASERA	100/80-17	IRC	SP1	SPORT	41070-2717-SP1/19
				NR73	PISTERA	41070-1017-NR73/18
		100/80-17	IRC	MB99	PISTERA	41070-1017-MB99/18
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18
BOXER CON RIN 18" 4T, UG, K-TEC	DELANTERA	2.50X18	IRC	NR1	SPORT	41070-3017-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-2518-SP1/19
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
BOXER BM 100 CLASSIC ES	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
	TRASERA	3.00X17		NR1	SPORT	41070-3017-NR1/18
BOXER CON RIN 18" (S1D) CALIBER 115 WIND 125	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18
				NF2	LINEAL	41070-2718-NF2/18
				NR53	PISTERA	41070-2718-NR53/18
	TRASERA	3.00X18	MAXING	SP1	SPORT	41070-2718-SP1/19
			IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-3018-SP1/19

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
AVANTI	DELANTERA	2.25X17	IRC	NF3	LINEAL	41070-2217-NF3/18
				NR53	PISTERA	41070-2217-NR53/18
		2.50X17	MAXING	TR1	TRIAL ROMBO	41070-2517-TR1/18
		2.25X17		MP1	LINEAL	41070-2217-MP1/19
	TRASERA	2.75X17	IRC	NR2	SPORT	41070-2717-NR2/18
				NR53	PISTERA	41070-2717-NR53/18
				GP1	TRIAL ROMBO	41070-2717-GP1/18
PLUS/CLASSIC/LEGEND	DELANTERA	3.50X10	IRC	SP1	SPORT	41070-2717-SP1/19
	TRASERA			MB-27	SPORT	41070-3510-27/18

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.auteco.com.co accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco-Kawasaki.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS

ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
Alejandro Posada	ASESOR COMERCIAL	Norte Área Metropolitana de Medellín	314 811 04 09	aposada@auteco.com.co
Alexánder Grajales	ASESOR COMERCIAL	Cordoba, Cauca y el Bagre	310 373 90 19	agrajales@auteco.com.co
Bernardo Muriel	ASESOR COMERCIAL	Arauca y Norte de Santander	310 436 27 42	bmuriel@auteco.com.co
Carlos Humberto Tobón	ASESOR COMERCIAL	Tolima	310 447 36 11	ctobon@auteco.com.co
Carlos Salazar	ASESOR COMERCIAL	Bucaramanga y Área Metropolitana	310 414 88 45	csalazar@auteco.com.co
Edwin Guzman Jiménez	ASESOR COMERCIAL	Atlántico	313 584 21 93	eguzman@auteco.com.co
Eliecer Zamora Vásquez	ASESOR COMERCIAL	Cali y Cauca	313 584 47 13	ezamora@auteco.com.co
Elkin Humberto Gallego	ASESOR COMERCIAL	Sur de Área Metropolitana de Medellín	310 436 25 98	egallego@auteco.com.co
Esmeralda Forero Acosta	ASESOR COMERCIAL	Centro Bogotá	313 585 22 07	eforero@auteco.com.co
Fredy Alexánder Jiménez	ASESOR COMERCIAL	Concesionarios, CSA de Bogotá y Amazonas	313 585 98 37	fjimenez@auteco.com.co
Gonzalo Saldarriaga	ASESOR COMERCIAL	Neiva y Norte del Huila	310 406 88 74	gsaldarriaga@auteco.com.co
Héctor Alonso Valencia	ASESOR COMERCIAL	Sucre	310 447 36 52	hvalencia@auteco.com.co
Héctor Jairo López	ASESOR COMERCIAL	Caldas y Norte de Risaralda	312 257 67 91	hlopez@auteco.com.co
Hernán Pedraza	ASESOR COMERCIAL	Pueblos de Condinamarca	311 899 7728	hpedraza@auteco.com.co
Hilde Alexánder García	ASESOR COMERCIAL BOUTIQUES	Área Metropolitana Medellín	321 641 50 63	hgarcia@auteco.com.co
Jaime Alfonso Villalba	ASESOR COMERCIAL	Bolívar	313 584 72 62	jvillalba@auteco.com.co
Jesús Enrique Quintero Restrepo	ASESOR COMERCIAL	Magdalena	313 585 60 28	jequintero@auteco.com.co
John Jairo López	ASESOR COMERCIAL	Risaralda, Quindío y Cartago	310 444 22 15	jlopez@auteco.com.co
Jorge Gil	ASESOR COMERCIAL	Casanare, Vichada, Boyacá	313 672 73 53	kgil@auteco.com.co
Jorge Mario Maya	ASESOR COMERCIAL	Cesar y Guajira	312 258 93 84	jmaya@auteco.com.co
Jovany Castro Betancur	ASESOR COMERCIAL	Sur del Huila y Caquetá	313 767 78 43	jcastro@auteco.com.co
Karen Lorena Candanoza	ASESOR COMERCIAL	Resto de Bogotá	313 585 35 61	kcandanoza@auteco.com.co
Mauricio Mejía	ASESOR COMERCIAL	Suroeste, Noreste y Chocó	312 257 61 75	mmejia@auteco.com.co
Miguel Ángel Guerrero	ASESOR COMERCIAL	Norte del Valle y Buenaventura	314 772 07 98	mguerreiro@auteco.com.co
Nestor Adarve	ASESOR COMERCIAL	Resto de Antioquia y Urabá	310 436 26 89	nadarve@auteco.com.co
Rubén Darío Campo Cárdena	ASESOR COMERCIAL	Nariño y Putumayo	321 799 79 06	rcampo@auteco.com.co
Uberney Ortiz Vélez	ASESOR COMERCIAL	Magdalena Medio	313 672 73 37	uortiz@auteco.com.co
William Gutiérrez	ASESOR COMERCIAL	Meta	310 407 40 72	wgutierrez@auteco.com.co
Sergio Restrepo Taborda	GERENTE CCIAL. REPUESTOS Y ACCS	Nacional	321 779 13 97	sgrestrepo@auteco.com.co
Daniel Ángel Neira	GERENTE CCIAL. ACCESORIOS	Nacional	313 716 85 65	dangel@auteco.com.co
Jhon Alexánder Estrada	JEFE CANAL CONCES. Y CSA	Nacional	311 737 37 48	jestrada@auteco.com.co
Juan Guillermo Ospina	JEFE CANAL MAYORISTA	Nacional	313 767 78 36	jgospina@auteco.com.co
Alejandro García P	Tutor CBU	Norte	320 682 0964	agarcia@auteco.com.co
Laura Ocampo	Tutor CBU	Sur	311 358 76 27	repuestoscbru@auteco.com.co

SERVICIO AL CLIENTE

LÍNEA ÚNICA DE SERVICIO AL CLIENTE CANAL (4) 444 81 90

UN DE REPUESTOS Y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO A CONCESIONARIO Y MAYORISTAS	WILLINGTON FRANCO	servicioadistribuidorseymayoristas@auteco.com.co		
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co		
COORDINADOR SERVICIO POSTVENTA	CARLOS ESTEBAN SUÁREZ	csuarez@auteco.com.co		(4) 373 83 94
GARANTÍAS	ALEJANDRO FERNÁNDEZ	garantias2@auteco.com.co		
DEVOLUCIONES - RECLAMOS	YUDY DUQUE	devolucionesrptos@auteco.com.co		
MOTO FUERA DE RUTA	RICARDO CUARTAS	motofueraderuta@auteco.com.co		(4) 306 84 86
LÍNEA DE ATENCIÓN AL CLIENTE	DANIEL RINCÓN		(4) 444 81 90	
	SERGIO OSORNO			
CARTERA		cartera@auteco.com.co		(4) 277 51 17
				(4) 306 81 54
VENTA MOTOS		pedidosmotos@auteco.com.co		(4) 372 62 95

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LÍNEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA No.	DESCRIPCIÓN	PÁG. No.
1	CULATA	1
2	MÚLTIPLE ADMISIÓN	2
3	VÁLVULAS	3
4	EJE LEVAS / TENSOR CADENILLA	4
5	CILINDRO / PISTÓN	5
6	CIGÜEÑAL	6
7	EJE BALANCEADOR	7
8	TRANSMISIÓN	8
9	SECTOR DE CAMBIOS	9
10	EJE DE CAMBIOS	10
11	CARCASA DERECHA	11
12	CARCASA IZQUIERDA	12
13	CUBIERTA CLUTCH	13
14	CUBIERTA VOLANTE / CUBIERTA CADENA	14
15	CLUTCH (PRENSA DE 4 RESORTES)	15
15A	CLUTCH (PRENSA DE 5 RESORTES)	16
16	RADIADOR	17
17	CARBURADOR	18
18	FILTRO DE AIRE	19
19	SILENCIADOR	20
20	SILLÍN	21
21	BOMBA DE ACEITE	22
22	MAGNETO / C.D.I. / BOBINA DE ALTA	23
23	MOTOR DE ARRANQUE	24
24	PARTES DEL CHASIS	25
25	CHASIS	26

FIGURA No.	DESCRIPCIÓN	PÁG. No.
26	AMORTIGUADOR TRAS. / BRAZO OSCILANTE	27
27	REPOSAPIE CONDUCTOR	28
28	REPOSAPIE PASAJERO	29
29	GUARDABARRO TRASERO	30
30	GATO CENTRAL- GATO LATERAL	31
31	LLANTAS / RINES	32
32	RUEDA DELANTERA	33
33	BOMBA FRENO DELANTERO	34
34	FRENO DISCO DELANTERO	35
35	RUEDA TRASERA	36-37
36	PEDAL FRENO	38
37	MANUBRIO	39-40
38	SUSPENSIÓN DELANTERA	41
39	TANQUE GASOLINA / TAPAS LATERALES	42
40	GRIFO DE GASOLINA	43
41	ANTIVIBRANTES TANQUE GASOLINA Y TAPAS LATERALES	44
42	VELOCÍMETRO	45
43	CABLES / GUARDA CADENA	46
44	FAROLA	47
45	DIRECCIONALES	48
46	STOP / PORTA PLACA	49
47	EQUIPO ETÉCTRICO	50
48	ACCESORIOS / HERRAMIENTAS	51
	LISTA DE KITS	52-53
	NOTAS IMPORTANTES	54
	INDICE DE REFERENCIAS	55-59

Esta publicación contiene las referencias para los vehículos ensamblados a partir del **MOTOR No. JCGBRC17185 (CHASÍS No. MD2JCB1Z09VC00894)**.

ÍNDICE DE GRÁFICOS

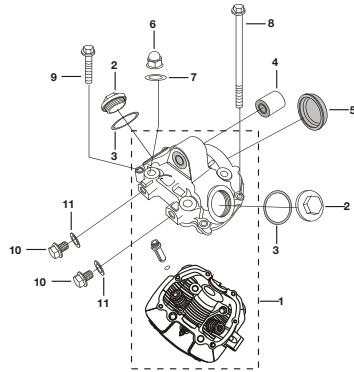


FIGURA N° 1 : CULATA

PÁG. No.
1

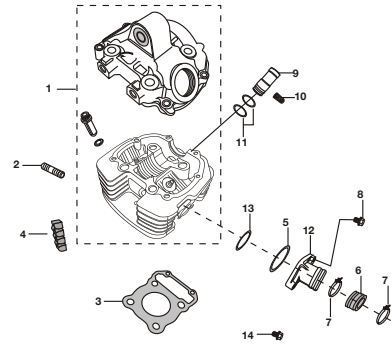


FIGURA N° 2 : MÚLTIPLE ADMISIÓN

PÁG. No.
2

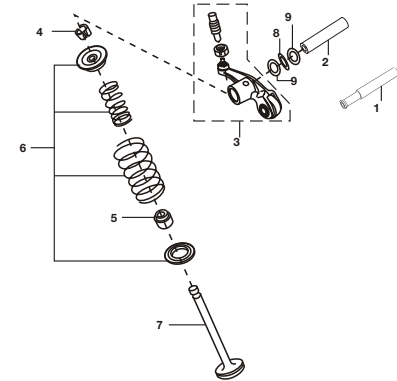


FIGURA N° 3 : VÁLVULAS

PÁG. No.
3

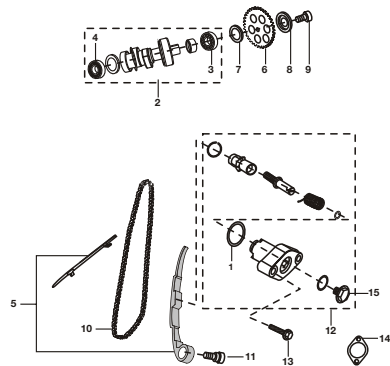


FIGURA N° 4 : EJE LEVAS / TENSOR CADENILLA

PÁG. No.
4

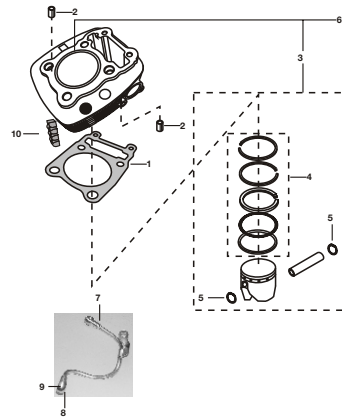


FIGURA N° 5 : CILINDRO / PISTÓN

PÁG. No.
5

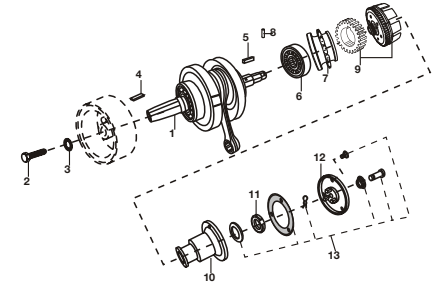


FIGURA N° 6 : CIGÜEÑAL

PÁG. No.
6

ÍNDICE DE GRÁFICOS

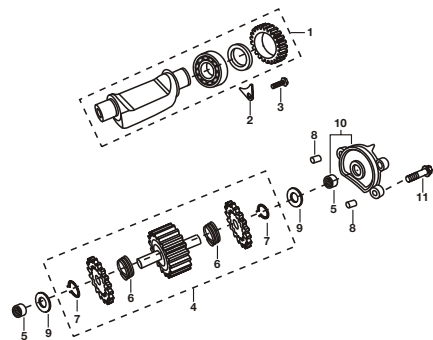


FIGURA N° 7 : EJE BALANCEADOR

PÁG. No.
7

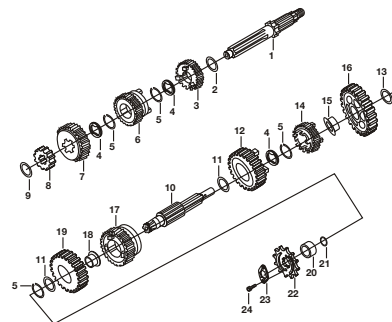


FIGURA N° 8 : TRANSMISIÓN

PÁG. No.
8

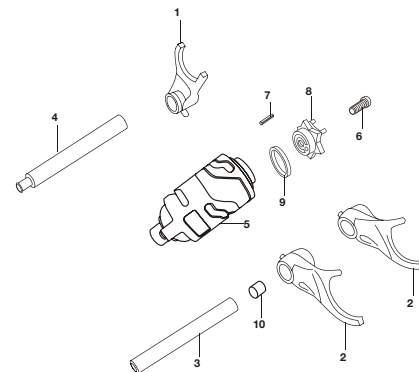


FIGURA N° 9 : SELECTOR DE CAMBIOS

PÁG. No.
9

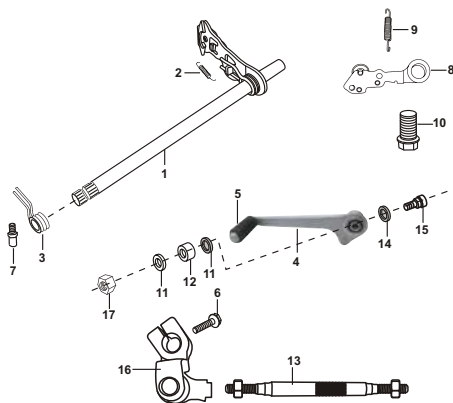


FIGURA N° 10 : EJE DE CAMBIOS

PÁG. No.
10


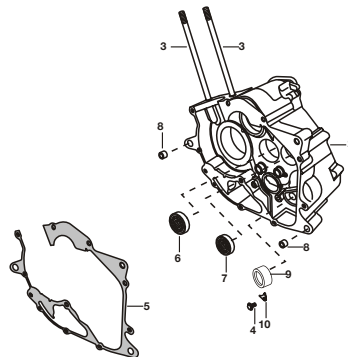


FIGURA N° 11 : CARCASA DERECHA

PÁG. No.
11

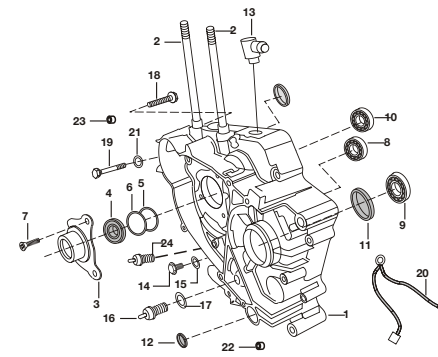

ÍNDICE DE GRÁFICOS


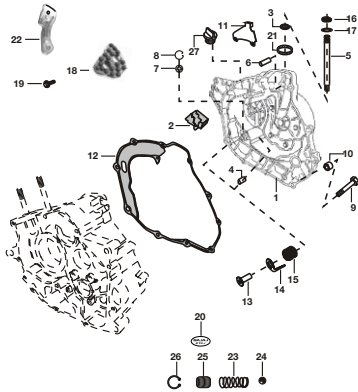



FIGURA N° 13 : CUBIERTA CLUTCH

PÁG. No.
13

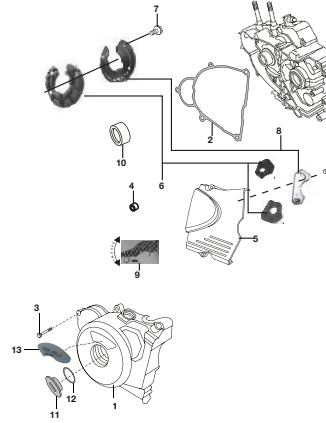


**FIGURA N° 14 : CUBIERTA VOLANTE /
CUBIERTA CADENA**

PÁG. No.
14

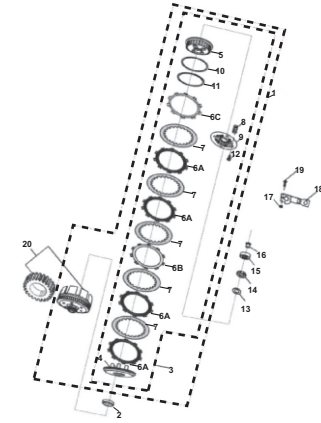

**FIGURA N° 15 : CLUTCH
(PRENSA DE 4 RESORTES)**

PÁG. No.
15

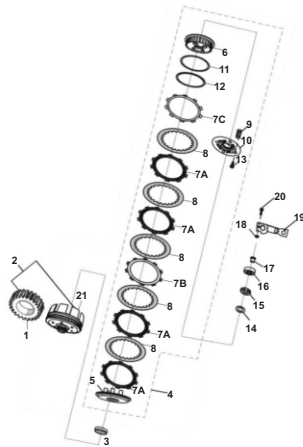

**FIGURA N° 15A : CLUTCH
(PRENSA DE 5 RESORTES)**

PÁG. No.
16

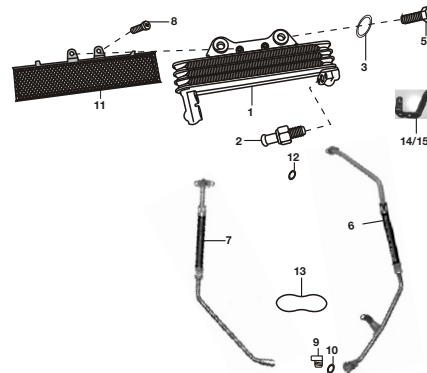


FIGURA N° 16 : RADIADOR

PÁG. No.
17

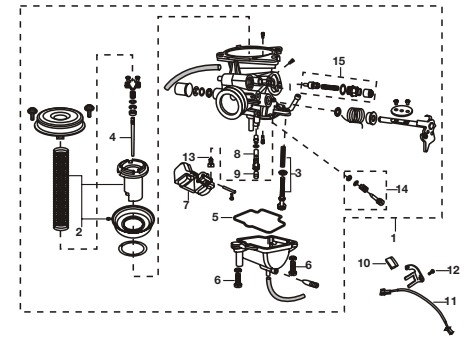
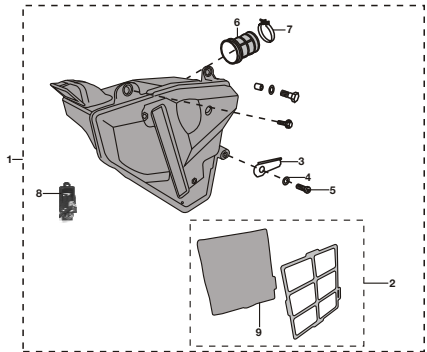
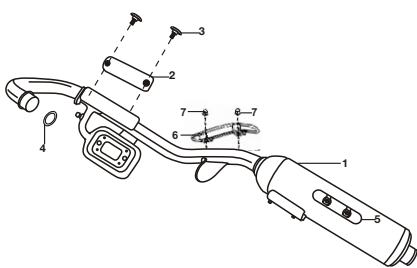
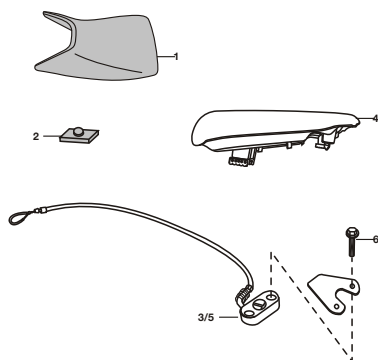
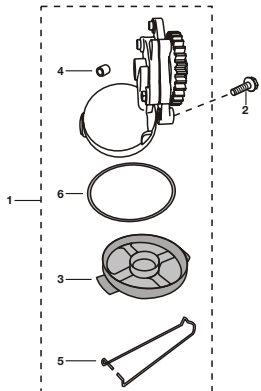
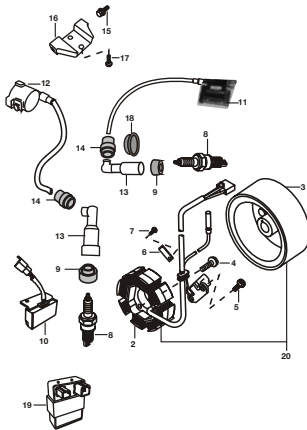
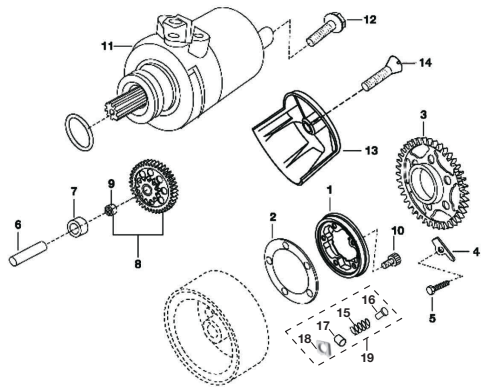








FIGURA N° 17 : CARBURADOR

PÁG. No.
18






ÍNDICE DE GRÁFICOS

	FIGURA N° 18 : FILTRO DE AIRE	PÁG. No. 19		FIGURA N° 19 : SILENCIADOR	PÁG. No. 20		FIGURA N° 20 : SILLÍN	PÁG. No. 21
	FIGURA N° 21 : BOMBA DE ACEITE	PÁG. No. 22		FIGURA N° 22 : MAGNETO / C.D.I. / BOBINA DE ALTA	PÁG. No. 23		FIGURA N° 23 : MOTOR DE ARRANQUE	PÁG. No. 24

ÍNDICE DE GRÁFICOS

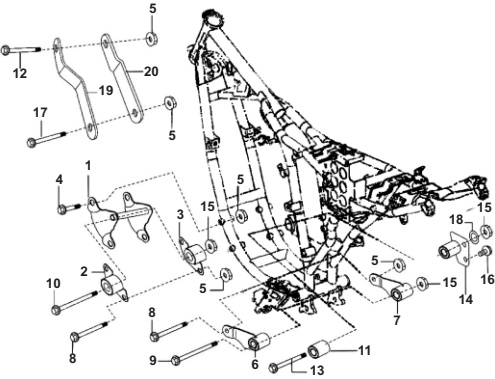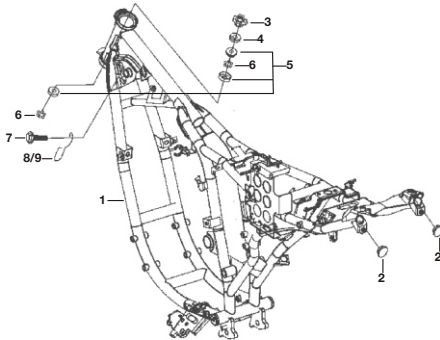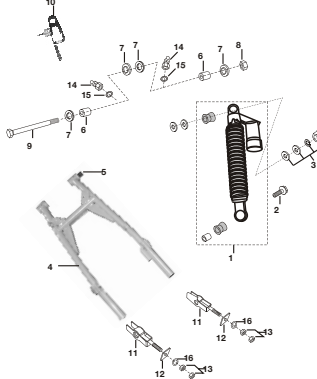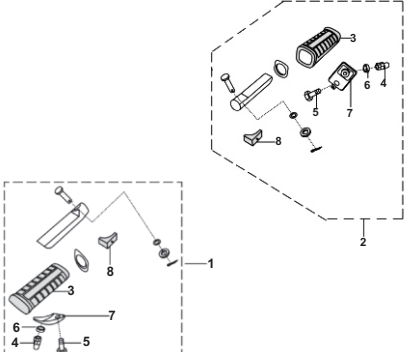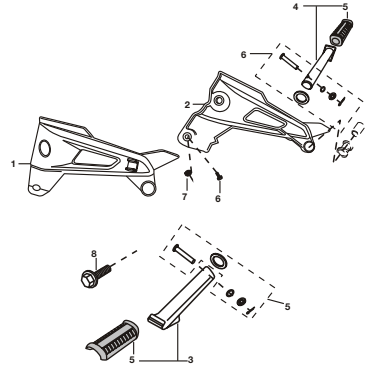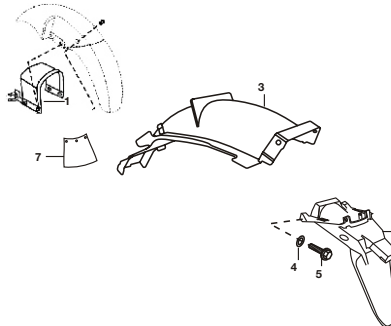		
FIGURA N° 24 : PARTES DEL CHASS	FIGURA N° 25 : CHASIS	FIGURA N° 26 : AMORTIGUADOR TRASERO / BRAZO OSCILANTE
		
FIGURA N° 27 : REPOSAPIE CONDUCTOR	FIGURA N° 28 : REPOSAPIE PASAJERO	FIGURA N° 29 : GUARDABARRO TRASERO

ÍNDICE DE GRÁFICOS

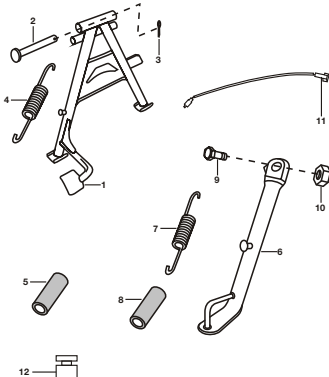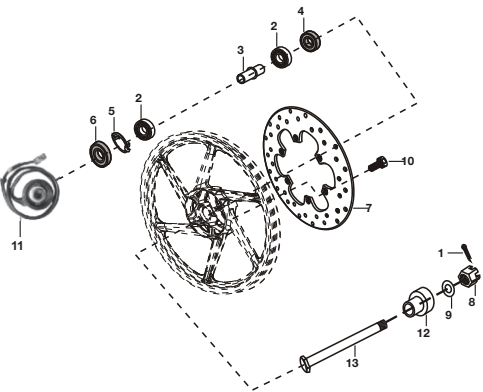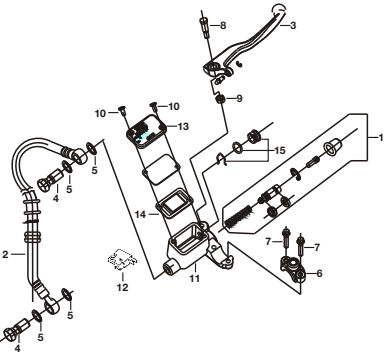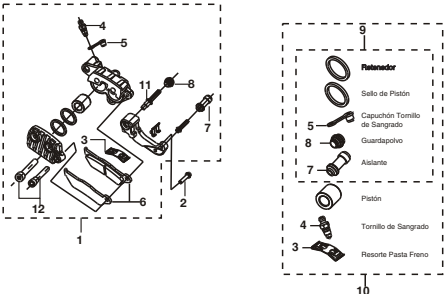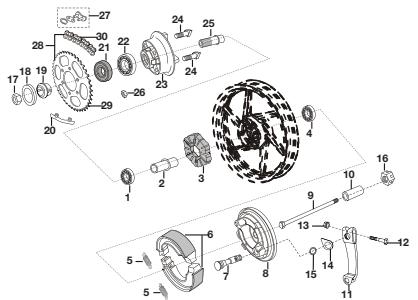	FIGURA N° 30 : GATO CENTRAL- GATO LATERAL	PÁG. No. 31		FIGURA N° 31 : LLANTAS / RINES	PÁG. No. 32		FIGURA N° 32 : RUEDA DELANTERA	PÁG. No. 33
	FIGURA N° 33 : BOMBA FRENO DELANTERO	PÁG. No. 34	 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284 285 286 287 288 289 290 291 292 293 294 295 296 297 298 299 300 301 302 303 304 305 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347 348 349 350 351 352 353 354 355 356 357 358 359 360 361 362 363 364 365 366 367 368 369 370 371 372 373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 392 393 394 395 396 397 398 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 425 426 427 428 429 430 431 432 433 434 435 436 437 438 439 440 441 442 443 444 445 446 447 448 449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 537 538 539 540 541 542 543 544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571 572 573 574 575 576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605 606 607 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637 638 639 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668 669 670 671 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698 699 700 701 702 703 704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733 734 735 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765 766 767 768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797 798 799 800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829 830 831 832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 869 870 871 872 873 874 875 876 877 878 879 880 881 882 883 884 885 886 887 888 889 890 891 892 893 894 895 896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925 926 927 928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956 957 958 959 960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987 988 989 990 991 992 993 994 995 996 997 998 999 1000	FIGURA N° 34 : FRENO DISCO DELANTERO	PÁG. No. 35		FIGURA N° 35 : RUEDA TRASERA	PÁG. No. 36-37

ÍNDICE DE GRÁFICOS

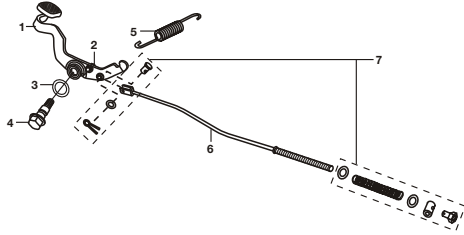


FIGURA N° 36 : PEDAL FRENO

PÁG. No.
38

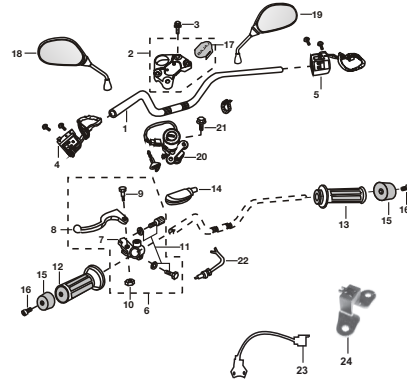


FIGURA N° 37: MANUBRIO

PÁG. No.
39-40

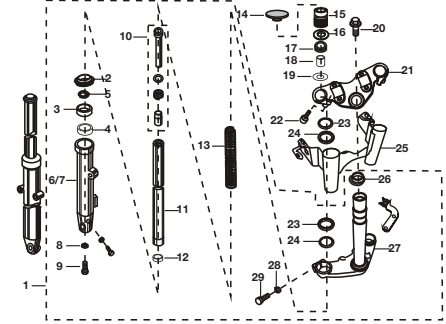


FIGURA N° 38: SUSPENSIÓN DELANTERA

PÁG. No.
41

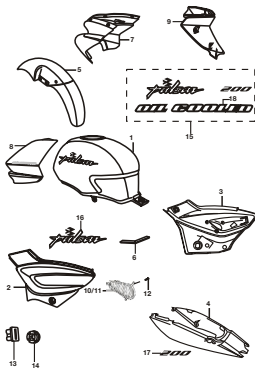


FIGURA N° 39: TANQUE GASOLINA /
TAPAS LATERALES

PÁG. No.
42


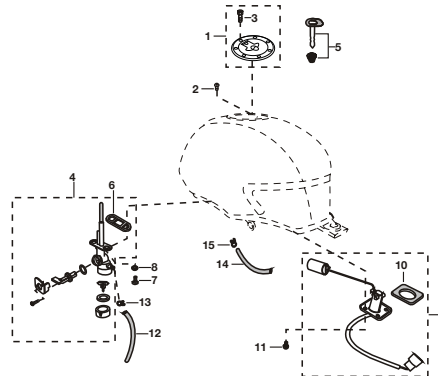


FIGURA N° 40: GRIFO DE GASOLINA

PÁG. No.
43

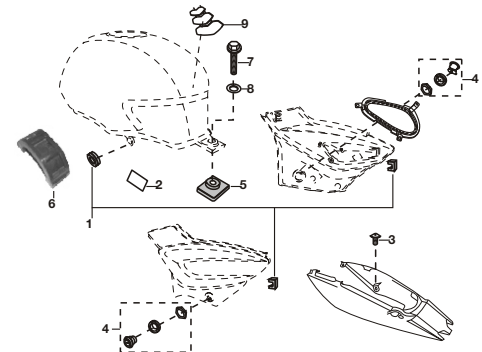

ÍNDICE DE GRÁFICOS

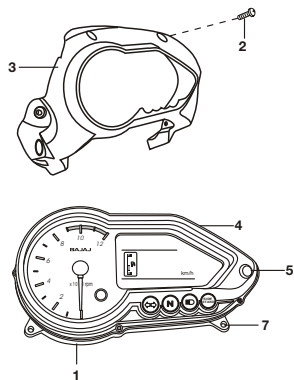


FIGURA N° 42: VELOCÍMETRO

PÁG. No.
45

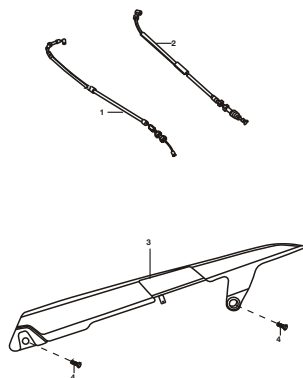


FIGURA N° 43: CABLES / GUARDACADENA

PÁG. No.
46



FIGURA N° 44 : FAROLA

PÁG. No.
47

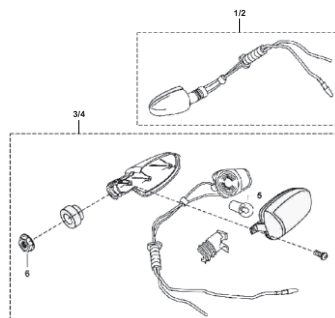


FIGURA N° 45 : DIRECCIONALES

PÁG. No.
48

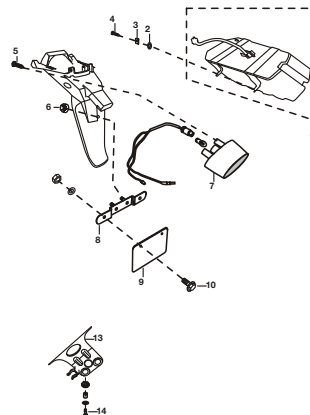


FIGURA N° 46 : STOP / PORTA PLACA

PÁG. No.
49

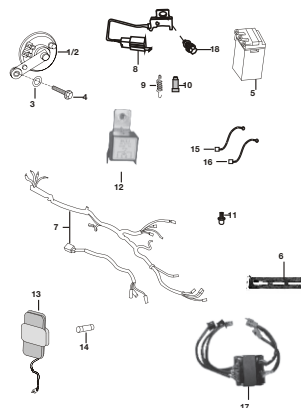


FIGURA N° 47 : EQUIPO ELÉCTRICO

PÁG. No.
50

ÍNDICE DE GRÁFICOS

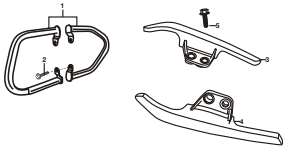


FIGURA N° 48 : ACCESORIOS /
HERRAMIENTAS

PÁG. No.
51

This exploded view diagram illustrates the assembly of a carburetor. The main body, labeled 1, is shown at the bottom. Various components are shown in their relative positions for assembly, with lines indicating their placement. The parts are numbered as follows:

- 1: Carburetor body
- 2: Two different types of O-rings or seals
- 3: A small circular gasket or seal
- 4: A cylindrical component, likely a float valve or needle
- 5: A large circular cover or cap
- 6: A small cap or plug
- 7: A small ring or gasket
- 8: A long, thin rod or pin
- 9: A long screw or bolt
- 10: Two different types of nuts or washers
- 11: Two different types of washers or spacers

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a carburetor. The components are numbered as follows:

- 1**: Main carburetor body (top).
- 2**: Jet needle screw.
- 3**: Gasket (bottom plate).
- 4**: Jet needle (float valve).
- 5**: Jet needle seal.
- 6**: Jet needle seal.
- 7**: Jet needle seal.
- 8**: Jet needle seal.
- 9**: Jet needle seal.
- 10**: Jet needle seal.
- 11**: Jet needle seal.
- 12**: Jet needle seal.
- 13**: Jet needle seal.
- 14**: Jet needle seal.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a mechanical component, likely a shock absorber or suspension part, shown in an exploded view. The components are numbered 1 through 9:

- 1**: A long, thin cylindrical rod or shaft.
- 2**: A short, thick cylindrical sleeve or bush.
- 3**: A complex mechanical bracket or housing with mounting points.
- 4**: A small, hexagonal nut or washer.
- 5**: A small, cylindrical bush or spacer.
- 6**: A large, rectangular plate or base with mounting holes.
- 7**: A long, thin cylindrical rod or shaft, similar to part 1 but with a different end profile.
- 8**: A small, circular washer or spacer.
- 9**: A small, circular washer or spacer, identical to part 8.

The assembly is shown in a disassembled state, with dashed lines indicating the intended alignment and fit of the parts. The main assembly path is shown vertically, starting from the base plate (6) and moving upwards through the various springs and bushings to the top nut (4). The side components (1, 2, 3, 7, 8, 9) are shown in their relative positions to the main assembly.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The components are numbered 1 through 15. The diagram is organized into three main sections:

- Top Section:** Shows a sub-assembly of components 2 through 9. Component 2 is a central shaft with a pinion gear (6) and a larger gear (7) mounted on it. A seal (4) is positioned at the front, and a bearing (3) is at the rear. A nut (8) and a washer (9) are shown at the very end.
- Bottom Left Section:** Features a long, flexible chain (10) and a long, thin rod (5). A bracket (11) is shown at the bottom, which will hold the chain and the rod.
- Bottom Right Section:** Shows a motor or actuator unit (1) with a mounting bracket (12) and a pin (13). A seal (14) is also shown. A nut (15) is shown at the bottom right, which will secure the mounting bracket to the motor unit.

Dashed lines indicate the assembly path and the relative positions of the components. The components are shown in a disassembled state to illustrate the correct assembly sequence.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a piston and connecting rod. The components are labeled as follows:

- 1**: Piston crown
- 2**: Piston pin
- 3**: Piston skirt
- 4**: Piston rings (four rings shown)
- 5**: Piston pin clips (two shown)
- 6**: Piston pin clip
- 7**: Connecting rod
- 8**: Connecting rod pin
- 9**: Connecting rod pin clip
- 10**: Piston pin clip

BAJAJ
Pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 19. The main assembly consists of a central shaft (1) with a pulley (2) and a gear (3) mounted on it. A bracket (4) is attached to the shaft. A pin (5) is used to secure the assembly. A gear (6) is mounted on the shaft, and a pin (7) is used to secure it. A gear (8) is mounted on the shaft, and a pin (9) is used to secure it. A gear (10) is mounted on the shaft, and a pin (11) is used to secure it. A gear (12) is mounted on the shaft, and a pin (13) is used to secure it. A gear (14) is mounted on the shaft, and a pin (15) is used to secure it. A gear (16) is mounted on the shaft, and a pin (17) is used to secure it. A gear (18) is mounted on the shaft, and a pin (19) is used to secure it.

BAJAJ
Pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The components are numbered 1 through 11:

- 1**: A large outer housing or cover with a flange.
- 2**: A small circular gasket or seal.
- 3**: A small screw or fastener.
- 4**: A central shaft with a large gear mounted on it.
- 5**: A small circular gasket or seal.
- 6**: A small gear or pinion.
- 7**: A small circular gasket or seal.
- 8**: A small rectangular component, possibly a bearing or bush.
- 9**: A small circular gasket or seal.
- 10**: A small rectangular component, possibly a bearing or bush.
- 11**: A large screw or fastener.

The diagram shows the assembly sequence: the central shaft (4) is inserted into the housing (1) through the gasket (2). The gear (6) is mounted on the shaft, and the gasket (7) is placed between the gear and the housing. The housing is then secured with the screw (3). The housing is then attached to the main assembly (10) using the screw (11). The gasket (5) is placed between the housing and the main assembly. The bearing (8) is placed between the housing and the main assembly. The gasket (9) is placed between the housing and the main assembly.

BAJAJ
Pulsar ₂₀₀ OIL/COOLED

FIGURA N° 8 : TRANSMISIÓN

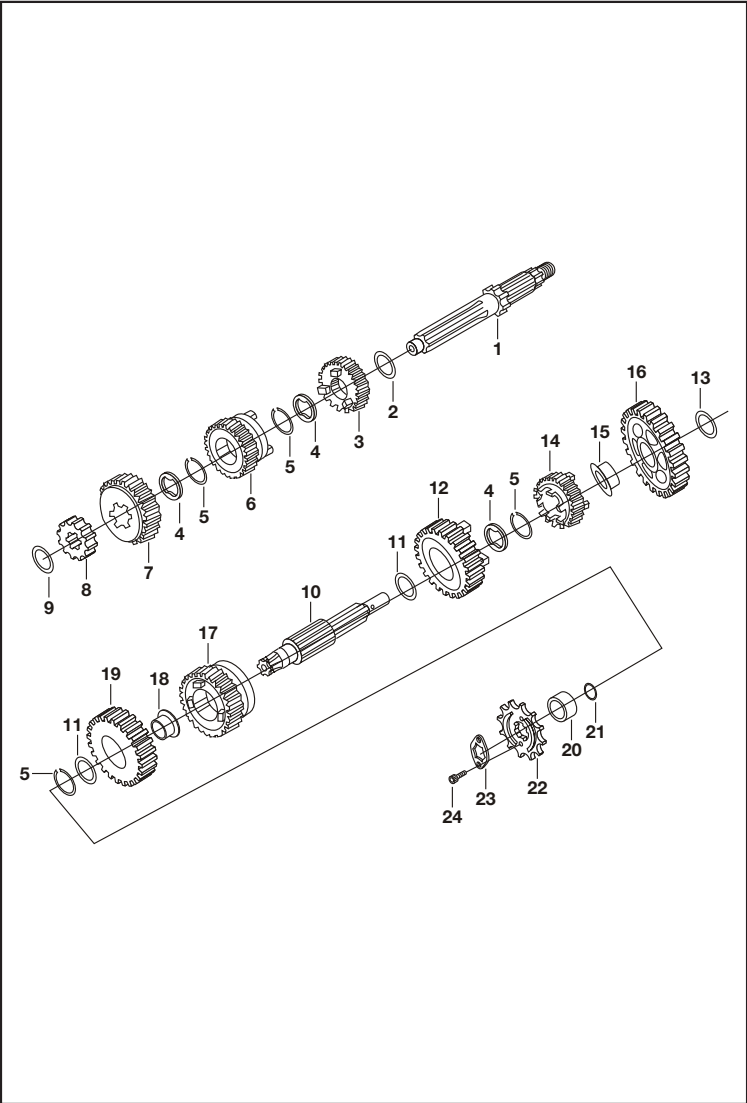


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DK101125	Eje Clutch	1	
2	39215811	Arandela Eje Caja	2	
3	DK101103	Piñón de 4a	1	
4	DH101079	Arandela Caja	3	
5	DH101235	Pin Piñones Caja	4	
6	DK101102	Piñón de 3a	1	
7	DK101104	Piñón de 5a	1	
8	DH101084	Piñón de 2a	1	
9	39216011	Arandela Caja	1	
10	DK101145	Eje Piñón Salida	1	
11	DH101336	Arandela Caja	2	
12	DK101105	Piñón de 3a	1	
13	DH101079	Arandela Caja	2	
14	DK101106	Piñón de 4a	1	
15	DH101111	Buje Piñón Caja	1	
16	DK101118	Piñón de 1a	1	
17	DK101107	Piñón de 5a	1	
18	DH101319	Buje Piñón Caja	1	
19	DH101333	Piñón de 2a	1	
20	DK101245	Buje Eje Piñón Salida	1	
21	30101061	Anillo Retenedor	1	
22	DV101048	Piñón de Salida	1	
23	DJ101063	Arandela Seguridad Piñón Salida	1	
24	39106204	Tornillo	2	

This diagram illustrates the exploded view of a bicycle seatpost assembly. The components are numbered as follows:

- 1**: A small, curved metal bracket or clamp.
- 2**: A larger, curved metal bracket or clamp, shown in two positions.
- 3**: A long, cylindrical metal tube, likely the seatpost itself.
- 4**: A shorter, cylindrical metal tube or sleeve.
- 5**: A complex metal bracket or clamp with multiple mounting points.
- 6**: A small, cylindrical metal pin or bolt.
- 7**: A small, cylindrical metal pin or bolt.
- 8**: A small, cylindrical metal pin or bolt.
- 9**: A small, cylindrical metal pin or bolt.
- 10**: A small, cylindrical metal pin or bolt.

BAJAJ
Pulsar 200 OIL/COOLED

This exploded view diagram illustrates the components of a rear suspension system. The parts are numbered as follows:

- 1**: A long, tapered shock absorber body.
- 2**: A small pin or clip located near the top of the shock absorber.
- 3**: A small, curved metal bracket.
- 4**: A dark, L-shaped control arm.
- 5**: A small, curved metal bracket, similar to part 3.
- 6**: A small bolt or screw.
- 7**: A small pin or clip.
- 8**: A metal bracket with a circular hole.
- 9**: A coiled spring.
- 10**: A threaded bolt or screw.
- 11**: A small, circular bush or spacer.
- 12**: A small, circular bush or spacer.
- 13**: A long, cylindrical shock absorber rod with a threaded end.
- 14**: A small, circular bush or spacer.
- 15**: A small bolt or screw.
- 16**: A metal bracket with two circular holes.
- 17**: A small bolt or screw.

Dashed lines indicate the assembly sequence and the relative positions of the components.

BAJAJ
pulsar 200 OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or valve. The main housing is labeled 2. Two long rods, labeled 3, are shown inserted into the top of the housing. A large, irregular gasket or seal, labeled 5, is positioned to the left of the housing. Various small components are shown in their assembly positions relative to the housing: a bolt labeled 4, a nut labeled 10, a small cap or plug labeled 6, a larger circular component labeled 7, a small ring or O-ring labeled 8, and a small cylindrical component labeled 9. Dashed lines indicate the alignment and assembly path for these parts.

BAJAJ
Pulsar *200* OIL/COOLED

FIGURA N° 12 : CARCASA IZQUIERDA

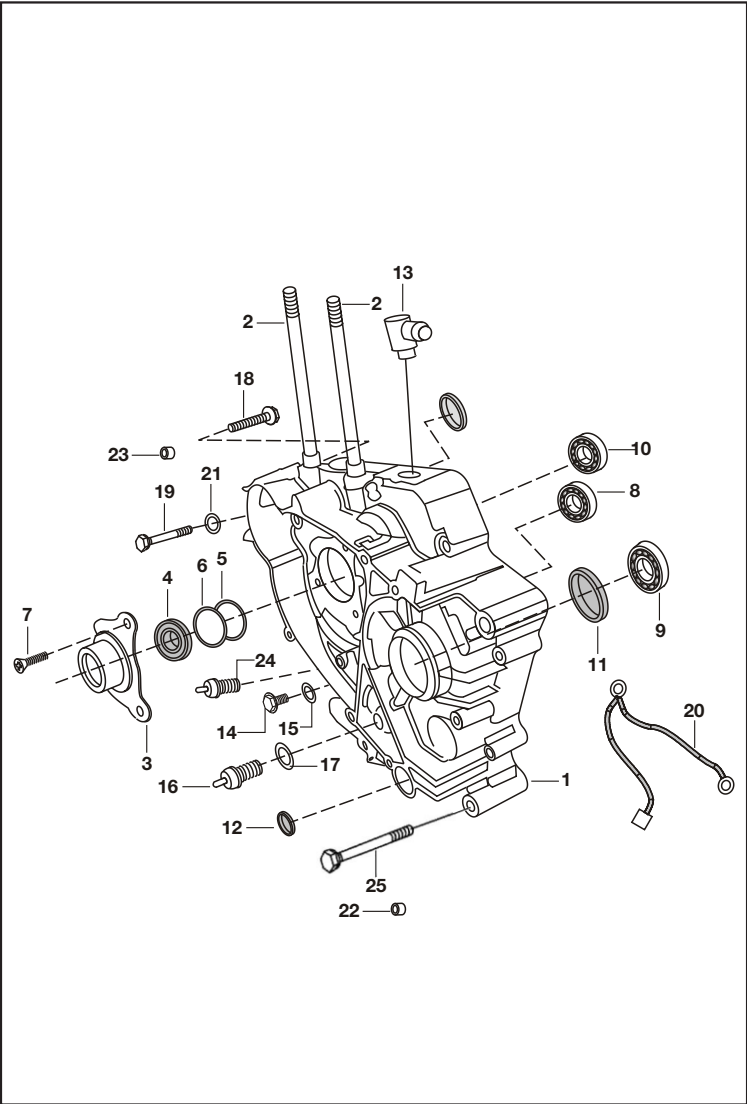


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC101016	Carcasa Izquierda	1	
	JC101045		1	Desde Abril 2009
2	59050008	Espárragos Cilindro	2	
3	DK101094	Platina Motor Arranque	1	
4	39218819	Retén Cigüeñal (22-35-7)	1	
5	59210006	Anillo Retén	1	
6	DK101097	Antivibrante	1	
7	39075201	Tornillo	3	
8	39260320	Rodamiento Bolas Clutch	1	
9	59200006	Rodamiento Bolas Eje Salida	1	
10	39218520	Rodamiento Bolas Izq. Balanceador	1	
11	30101014	Retén Eje Salida	1	
12	39219019	Retén Eje Cambios (12-22-9)	1	
13	DH101203	Conducto Aire	1	
14	DH101661	Tapón Drenaje Aceite	1	
15	31101106	Arandela Tapón Drenaje	1	
16	31201081	Swiche Neutro	1	
	DK101380	(No Intercambiable)	1	Desde Abril 2009
17	DH101784	Junta Swiche Neutro	1	Alt. 39101321
18	39184504	Tornillo 6x45	8	
19	39230504	Tornillo	1	
20	DJ201021	Cable Batería	1	
21	39244811	Arandela Tapón Drenaje	1	
22	39218006	Pin Guía Carcasa	2	
23	39218106	Pin Guía Carcasa	2	
24	DK101124	Sensor Térmico Con Empaque	1	
25	39167704	Tornillo 6 x 45	1	

FIGURA N° 13 : CUBIERTA CLUTCH

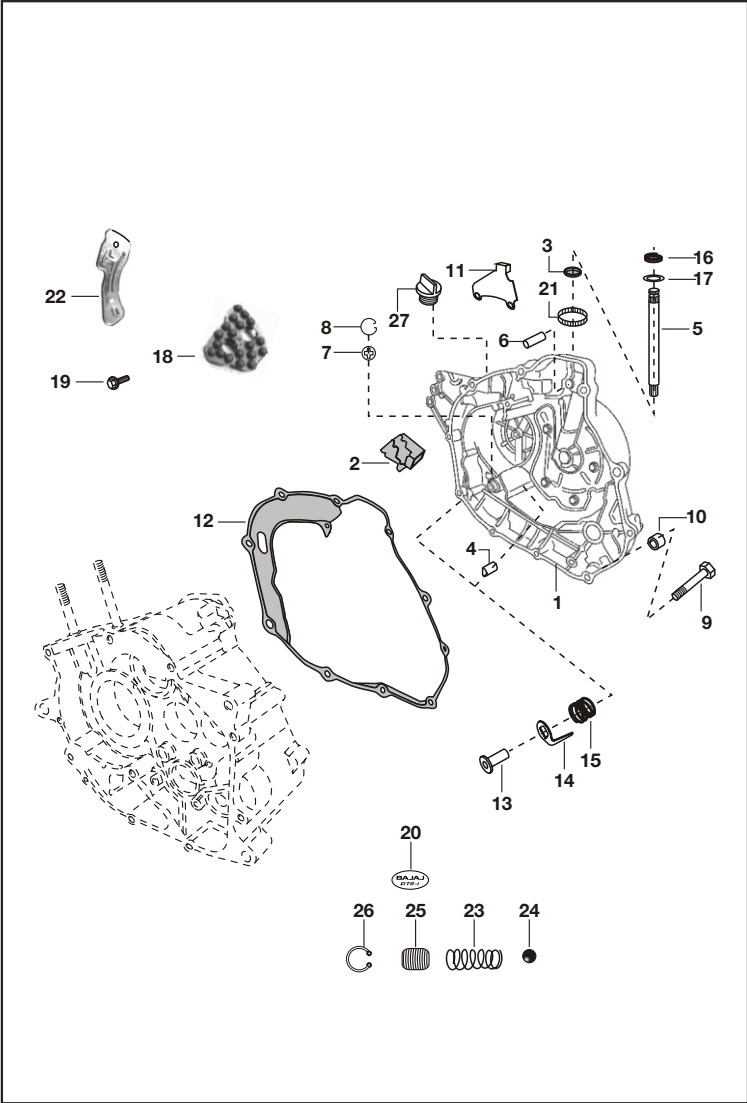


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC101030	Cubierta Clutch	1	
2	DH101197	Antivibrante Carcasa	1	
3	39104119	Retén Eje Leva De Clutch	1	
4	DH101141	Empujador Clutch	1	
5	DH101142	Eje Clutch	1	
6	DK101251	Pin Eje Clutch	1	
7	DG101418	Visor Nivel Aceite	1	
8	DS101215	Pin Seguridad	1	
9	DS101353	Tornillo	10	
10	39099906	Pin Guía Carcasa	2	
11	DK101252	Soporte Cable Clutch	1	
12	DH101154	Junta Cubierta Clutch	1	
13	DH121015	Tapón Aceite	1	
14	DH121011	Platina Tapón Aceite	1	
15	DH121012	Resorte	1	
16	DH101544	Resorte Eje Clutch	1	
17	39244311	Arandela	1	
18	DH101510	Antivibrante	1	
19	DH101388	Tornillo	8	
20	JC101040	Calcomanía Cubierta Clutch	1	
21	39199020	Rodamiento	2	
22	DH101482	Platina	1	
23	DK101122	Resorte	1	
24	30101236	Balín	1	
25	DK101123	Válvula Presión	1	
26	39254717	Pin Seguridad	1	
27	DS101263	Tapón Aceite	1	

This exploded view diagram illustrates the assembly of a motorcycle engine. The components are numbered as follows:

- 1**: Engine block/cylinder head assembly.
- 2**: Oil pan gasket.
- 3**: Bolt for the timing cover.
- 4**: Bolt for the oil pan.
- 5**: Oil pan.
- 6**: Bolt for the oil pan.
- 7**: Bolt for the timing cover.
- 8**: Bolt for the oil pan.
- 9**: Timing cover gasket.
- 10**: Timing cover.
- 11**: Timing cover gasket.
- 12**: Timing cover gasket.
- 13**: Timing cover gasket.

The diagram shows the engine block (1) with the oil pan (5) and timing cover (10) being attached. The gaskets (2, 9, 11, 12, 13) are shown in their respective positions. The bolts (3, 4, 6, 7, 8) are shown being inserted into the assembly. A small inset diagram shows the timing cover (10) being secured with a bolt (4).

BAJAJ
pulsar₂₀₀ OIL/COOLED

FIGURA N° 15 : CLUTCH (PRENSA DE 4 RESORTES)

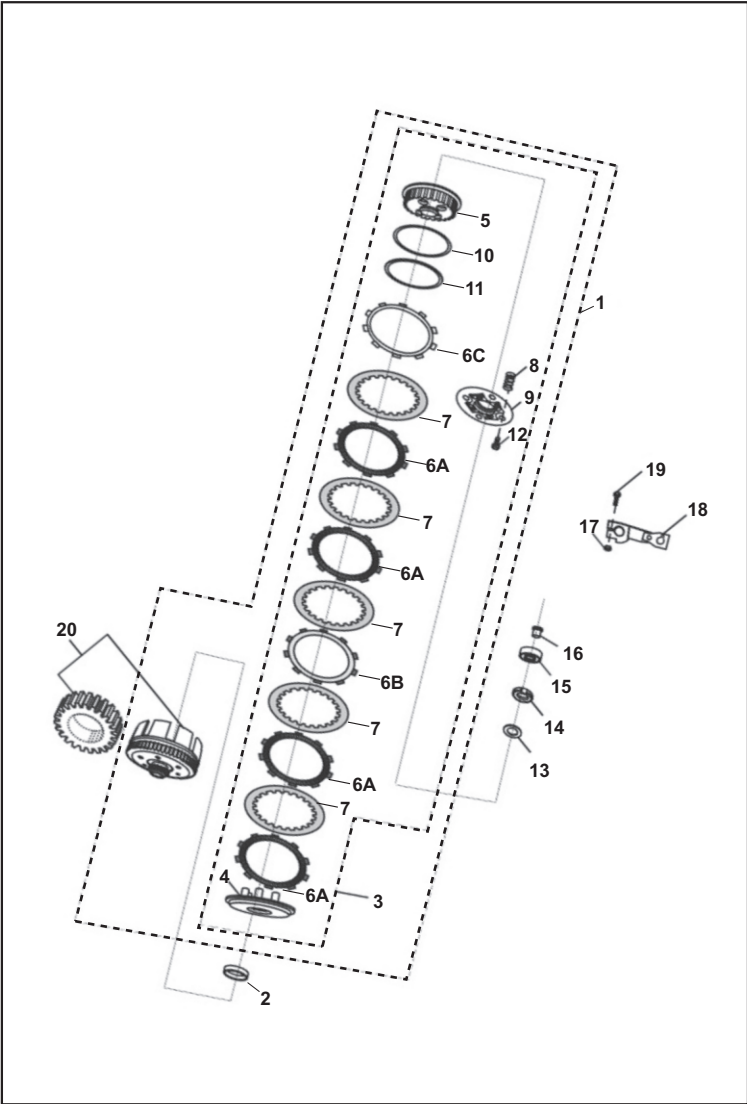


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DK101073	Clutch Completo	1	
2	DK101126	Espaciador Clutch	1	
3	DK101075	Clutch Completo Sin Corona	1	
4	DK101163	Base Prensa Clutch	1	
5	DK101001	Corona Interna Clutch	1	
6	DK101356	Kit Discos Clutch	1	Items: 6A, 6B y 6C
6A	DK101149	Disco Clutch "A" de 36 Corchos	4	
6B	DK101150	Disco Clutch "B" de 40 Corchos	1	
6C	DK101255	Disco Clutch "C" de 48 Corchos	1	
7	DK101151	Separador Clutch	5	Alt. DH101743
8	DK101152	Resortes Clutch	4	
9	DK101078	Empujador Clutch	1	
10	DK101153	Arandela Anti-brinco Plana	1	
11	DK101155	Arandela Anti-brinco Concava	1	
12	DK101154	Tornillo	4	
13	39220011	Arandela Especial	1	
14	DH101648	Tuerca Izquierda	1	
15	39188020	Rodamiento Clutch	1	
16	DK101072	Empujador	1	
17	DH101275	Tuerca Eje Clutch	1	
18	DH101180	Leva Clutch	1	
	DK101636	Leva Clutch	1	Desde Julio 09
19	39167404	Tornillo Leva Clutch	1	
20	36DK0029	Kit Corona y Piñón Primario	1	

FIGURA N° 15A : CLUTCH (PRENSA DE 5 RESORTES)

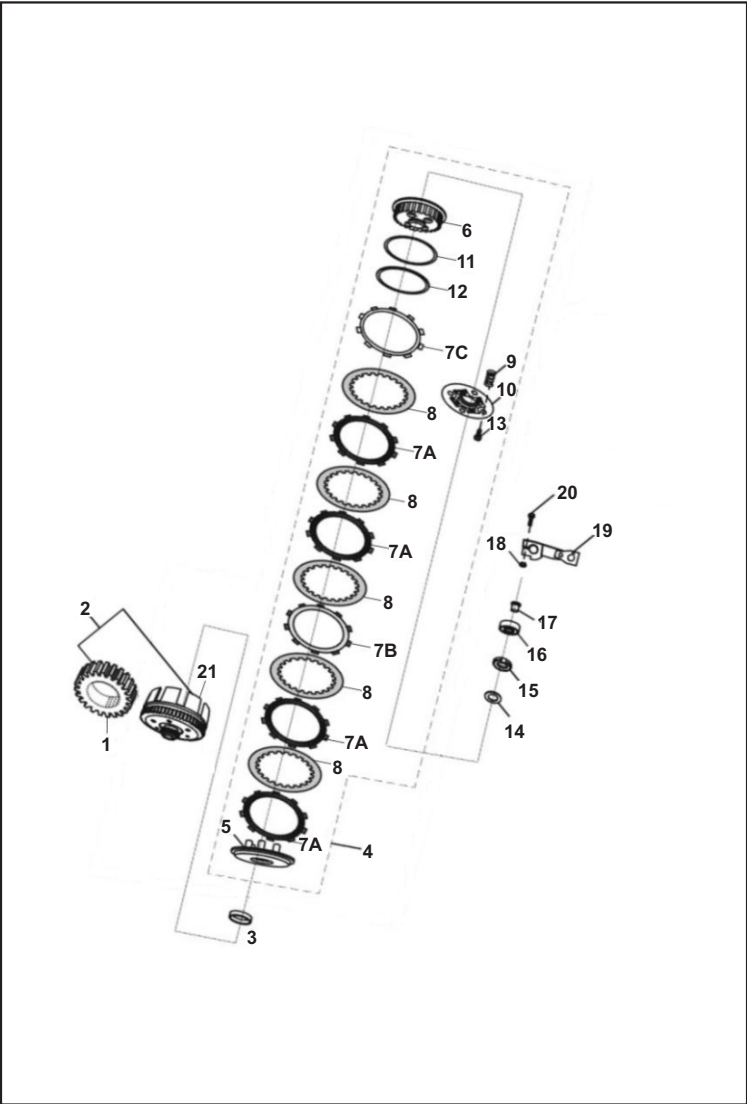


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DH101628	Piñon Primario	1	
2	36DK0038	Kit Corona y Piñon Primario	1	
3	DK101126	Espaciador Clutch	1	
4	DJ101350	Clutch Completo Sin Corona	1	
5	DK101569	Base Prensa Clutch	1	
6	DK101564	Corona Interna Clutch	1	
7	DJ101369	Kit Discos Clutch	1	(Items: 7A, 7B y 7C)
7A	DK101566	Disco Clutch "A" de 36 Corchos	4	
7B	DK101568	Disco Clutch "B" de 40 Corchos	1	
7C	DK101567	Disco Clutch "C" de 48 Corchos	1	
8	DK101565	Separador Clutch	5	
9	DH101861	Resortes Clutch	5	
10	DK101573	Empujador Clutch	1	
11	DK101570	Arandela Anti-brinco Plana	1	
12	DK101571	Arandela Anti-brinco Concava	1	
13	DK101574	Tornillo	5	
14	39220011	Arandela Especial	1	
15	DH101520	Tuerca Izquierda	1	
16	39188020	Rodamiento Clutch	1	
17	DK101072	Empujador	1	
18	DH101275	Tuerca Eje Clutch	1	
19	DH101180	Leva Clutch	1	
20	DK101574	Tornillo Leva Clutch	1	
21	DK101561	Corona Clutch (Sola)	1	

This exploded view diagram illustrates the assembly of a vehicle's rear suspension system. The components are labeled as follows:

- 1**: Main suspension bracket or cross-member.
- 2**: A small bolt or screw used for assembly.
- 3**: A circular washer or spacer.
- 4**: A small circular component, possibly a bush or washer.
- 5**: A large bolt used to secure the main bracket.
- 6**: A long, curved suspension arm or control arm.
- 7**: Another long, curved suspension arm or control arm.
- 8**: A small bolt or screw.
- 9**: A small bush or spacer.
- 10**: A small circular component, possibly a bush or washer.
- 11**: A rectangular component with a mesh or perforated surface, likely a brake pad or disc.
- 12**: A small bolt or screw.
- 13**: A small, irregularly shaped component, possibly a bush or washer.
- 14/15**: A small, L-shaped component, possibly a bracket or bush.

The diagram shows the relative positions and assembly points of these components, with dashed lines indicating the path of assembly.

BAJAJ
pulsar₂₀₀ OIL/COOLED

[illegible]

BAJAJ
pulsar₂₀₀ OIL/COOLED

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a power tool handle. The components are numbered as follows:

- 1**: The main handle body, which includes a trigger switch mechanism.
- 2**: A rectangular mounting bracket designed to attach to the handle body.
- 3**: Two screws used to secure the mounting bracket to the handle.
- 4**: A small O-ring or seal located at the end of the handle's shaft.
- 5**: Two screws that fasten the trigger switch lever to the handle body.
- 6**: The trigger switch lever, which is pivoted to the handle.
- 7**: Two screws that secure the trigger switch lever to its pivot point.
- 8**: A long, thin, light-colored component, likely a battery or a specialized switch actuator, that fits into the handle's body.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the components of the rear seat assembly in an exploded view. The parts are labeled as follows:

- 1**: A large, curved, grey-colored rear seat backrest.
- 2**: A small rectangular plate with a circular knob or fastener in the center.
- 3/5**: A rectangular metal bracket with two circular holes and a cable with a loop attached to one end.
- 4**: A long, narrow, white-colored rear seat cushion with a metal base.
- 6**: A small metal plate with a circular hole and a bolt passing through it.

BAJAJ
pulsar *200* OIL/COOLED

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: A large, circular, flat component, likely a base or cover plate.
- 2**: A small, cylindrical component, possibly a pin or a small bolt.
- 3**: A circular component with a central hub and four radial spokes, resembling a fan or a filter.
- 4**: A small, cylindrical component, similar to part 2.
- 5**: A long, thin, curved component, possibly a lever or a spring.
- 6**: A circular component with a central hub and four radial spokes, similar to part 3.

The diagram is enclosed in a dashed rectangular border. A dashed line connects part 2 to a specific point on the assembly, indicating its installation location.

BAJAJ
Pulsar *200* OIL/COOLED

This diagram illustrates the assembly of various components for a vehicle, likely a motorcycle or small car. The parts are numbered 1 through 20:

- 1**: A small electrical connector or plug.
- 2**: The engine block.
- 3**: A large circular component, possibly a headlight or wheel hub.
- 4**: A bolt or screw used for mounting.
- 5**: A small electrical component, possibly a relay or fuse.
- 6**: A small electrical connector or plug.
- 7**: A small screw or bolt.
- 8**: A spark plug.
- 9**: A small circular component, possibly a gasket or washer.
- 10**: A rectangular electrical component, possibly a battery or fuse box.
- 11**: A rectangular electronic control unit or module.
- 12**: A cable or hose with a connector.
- 13**: A small electrical connector or plug.
- 14**: A small electrical connector or plug.
- 15**: A small electrical connector or plug.
- 16**: A small electrical component, possibly a relay or fuse.
- 17**: A small screw or bolt.
- 18**: A small circular component, possibly a gasket or washer.
- 19**: A rectangular electrical component, possibly a battery or fuse box.
- 20**: A cable or hose with a connector.

BAJAJ
Pulsar 200 OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 18. The main assembly (11) features a central shaft (6) with a pin (7) and a gear (9) mounted on it. A large gear (3) is shown to the right, with a pin (4) and a screw (5) associated with it. A bracket (13) is shown with a pin (14) and a screw (12). A flange (2) and a bearing (1) are shown near the shaft. A dashed outline shows a large circular component. A dashed box contains parts 15, 16, 17, 18, and 19, which appear to be a small assembly or sub-component. A pin (10) is also shown near the bearing (1).

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The main assembly is shown in the center, with various parts numbered for identification. The parts are as follows:

- 1:** A small bracket or support piece.
- 2:** A small cylindrical component.
- 3:** A small cylindrical component.
- 4:** A small cylindrical component.
- 5:** A small cylindrical component.
- 6:** A small cylindrical component.
- 7:** A small cylindrical component.
- 8:** A small cylindrical component.
- 9:** A small cylindrical component.
- 10:** A small cylindrical component.
- 11:** A small cylindrical component.
- 12:** A small cylindrical component.
- 13:** A small cylindrical component.
- 14:** A small cylindrical component.
- 15:** A small cylindrical component.
- 16:** A small cylindrical component.
- 17:** A small cylindrical component.
- 18:** A small cylindrical component.
- 19:** A small cylindrical component.
- 20:** A small cylindrical component.

The diagram shows the assembly of these parts into a larger structure, with dashed lines indicating the alignment and fit of the components. The main assembly is a complex of various parts, including a large cylindrical component at the top, a central shaft or rod, and various mounting brackets and supports.

BAJAJ
Pulsar₂₀₀ OIL/COOLED

This diagram shows an exploded view of a mechanical assembly. The main component is a large, curved metal frame (1). At the top, there is a pivot point with a pin (3) and a nut (4). A bracket (5) is attached to the top of the frame. A cable or hose (6/10) is connected to the top of the frame. A small component (7) is attached to the side of the frame. A bracket (8/9) is attached to the bottom of the frame. At the rear, there is a complex assembly of pipes and fittings, including a valve (2) and a connector (2).

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a vehicle suspension system. The components are numbered as follows:

- 1**: Coil spring assembly, including the spring and upper control arm.
- 2**: A small bolt or screw.
- 3**: A bracket or plate for the coil spring.
- 4**: The main suspension arm or control arm.
- 5**: A small pin or clip at the top of the suspension arm.
- 6**: A bush or spacer.
- 7**: A bush or spacer.
- 8**: A small pin or clip.
- 9**: A long shaft or rod.
- 10**: A hook or bracket at the end of the shaft.
- 11**: A bracket or plate for the lower control arm.
- 12**: A bolt or screw.
- 13**: A bracket or plate for the lower control arm.
- 14**: A bolt or screw.
- 15**: A small pin or clip.
- 16**: A bracket or plate for the lower control arm.

The diagram shows the relative positions of these parts, with dashed lines indicating the assembly sequence and alignment. The main suspension arm (4) is shown in a larger, shaded perspective view, while the other parts are shown in a smaller, exploded view.

BAJAJ
pulsar₂₀₀ OIL/COOLED

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component. The main body is labeled 1. A bracket-like part, labeled 2, is shown with two screws, 6 and 7, being attached to its side. A long, angled arm, labeled 3, is shown with a textured, ribbed end, labeled 9. A dashed box, labeled 5, indicates the assembly of a pin, a washer, and a nut onto the arm. Another dashed box, labeled 4, shows a similar assembly of a pin, washer, and nut being attached to the main body (1). The diagram uses solid lines for the main components and dashed lines to show the placement and orientation of the smaller fasteners and sub-assemblies.

BAJAJ
Pulsar *200* OIL/COOLED

This exploded view diagram illustrates the assembly of a car seat headrest. The components are numbered as follows:

- 1**: A U-shaped metal bracket with mounting tabs.
- 2**: A curved, padded headrest cover.
- 3**: A large, flat rectangular metal plate that serves as the main base for the headrest.
- 4**: A small circular washer or spacer.
- 5**: A long bolt used to secure the assembly.
- 6**: A metal bracket that connects the main plate to the car seat's frame.
- 7**: A small rectangular piece, likely a foam pad or spacer.
- 8**: A small metal pin or clip.
- 9**: A small metal hook or clip used for final assembly.

Dashed lines indicate the alignment and assembly path for the parts, showing how the headrest cover (2) is positioned over the bracket (1), how the main plate (3) is attached to the seat frame via bracket (6) and bolt (5), and how the various spacers and pins (4, 7, 8, 9) are used to complete the structure.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a mechanical device, likely a door latch or handle mechanism, using 12 numbered components. The parts are shown in an exploded view to indicate their relative positions and assembly sequence.

- Component 1:** A rectangular base plate or mounting bracket.
- Component 2:** A long, thin cylindrical pin or screw.
- Component 3:** A small, dark, cylindrical component, possibly a bush or spacer.
- Component 4:** A coiled spring with hooks at both ends.
- Component 5:** A short, thick cylindrical sleeve or bush.
- Component 6:** A long, angled metal arm or lever with a hook at one end.
- Component 7:** A coiled spring with hooks at both ends.
- Component 8:** A short, thick cylindrical sleeve or bush.
- Component 9:** A small, dark, cylindrical component, possibly a bush or spacer.
- Component 10:** A hexagonal nut or washer.
- Component 11:** A long, thin, curved metal strip or spring.
- Component 12:** A small, rectangular component, possibly a latch or handle.

The diagram uses dashed lines to show the alignment and assembly path for components 2, 3, 9, and 10. Component 11 is shown separately, likely representing a cable or a long spring that connects to the main assembly.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a motorcycle wheel. It includes the following components:

- 1**: The wheel rim and hub assembly.
- 2**: The front tire, shown with a tread pattern and the text "ROAD GRIP" on the sidewall.
- 3**: The rear wheel rim and hub assembly.
- 4**: The rear tire, shown with a tread pattern and the text "ROAD GRIP" on the sidewall.
- 5**: A small component, likely a nut or washer, used for securing the tire to the wheel.

BAJAJ
pulsar 200 OIL/COOLED

This exploded view diagram illustrates the assembly of a bicycle wheel. The components are numbered as follows:

- 1:** A small screw or pin used to secure the hub.
- 2:** Two different types of bearings or spacers, one for the front and one for the rear.
- 3:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 4:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 5:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 6:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 7:** A circular disc with multiple holes, likely a brake disc or a fender.
- 8:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 9:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 10:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 11:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 12:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 13:** A long, thin cylindrical component, likely a spoke or a part of the hub assembly.
- 14:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 15:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 16:** A small cylindrical component, likely a spacer or a part of the hub assembly.

The diagram shows the wheel assembly in a disassembled state, with dashed lines indicating the relative positions and assembly sequence of the components. The central hub is shown with a five-spoke design. The brake disc (7) is shown with a central mounting area and a series of holes around its perimeter. The fender (11) is shown with a mounting bracket (16) and a small screw (14). The hub assembly (12) is shown with a long, thin cylindrical component (13) and a small cylindrical component (9).

BAJAJ
Pulsar *200* OIL/COOLED

This diagram illustrates the exploded view of a mechanical assembly, likely a door hinge or latch mechanism. The components are numbered as follows:

- 1**: Main rectangular housing or plate.
- 2**: Flexible conduit or cable with a curved section.
- 3**: Lever or handle component.
- 4**: Small cylindrical pin or bush.
- 5**: Small cylindrical pin or bush.
- 6**: Small cylindrical pin or bush.
- 7**: Small cylindrical pin or bush.
- 8**: Small cylindrical pin or bush.
- 9**: Small cylindrical pin or bush.
- 10**: Small cylindrical pin or bush.
- 11**: Small cylindrical pin or bush.
- 12**: Small rectangular component, possibly a switch or sensor.
- 13**: Small rectangular component, possibly a switch or sensor.
- 14**: Small rectangular component, possibly a switch or sensor.
- 15**: Small cylindrical pin or bush.

The diagram shows the relative positions and assembly sequence of these parts. The main housing (1) is the central component, with various pins (4, 5, 6, 7, 8, 9, 10, 11, 15) and the lever (3) attached to it. The flexible conduit (2) is shown with its own set of pins (4, 5). The small rectangular components (12, 13, 14) are also shown in their relative positions.

BAJAJ
pulsar₂₀₀ OIL/COOLED

Diagram illustrating the assembly of a motorcycle rear brake system, showing the main components and their sub-assemblies.

Main Assembly Components:

- 1: Main Brake Assembly
- 2: Master Cylinder
- 3: Slave Cylinder
- 4: Bleed Screw Cap
- 5: Dust Cap
- 6: Insulator
- 7: Piston
- 8: Bleed Screw
- 9: Piston Seal
- 10: Bleed Screw Cap
- 11: Dust Cap
- 12: Insulator

Sub-Assembly Details (Right Side):

- 9: Retenedor (Piston Seal)
- Sello de Pistón (Piston Seal)
- Capuchón Tornillo de Sangrado (Bleed Screw Cap)
- Guardapolvo (Dust Cap)
- Aislante (Insulator)
- Pistón (Piston)
- Tornillo de Sangrado (Bleed Screw)
- Resorte Pasta Freno (Brake Pad Spring)

BAJAJ
Pulsar₂₀₀ OIL/COOLED

FIGURA N° 35 : RUEDA TRASERA (1/2)

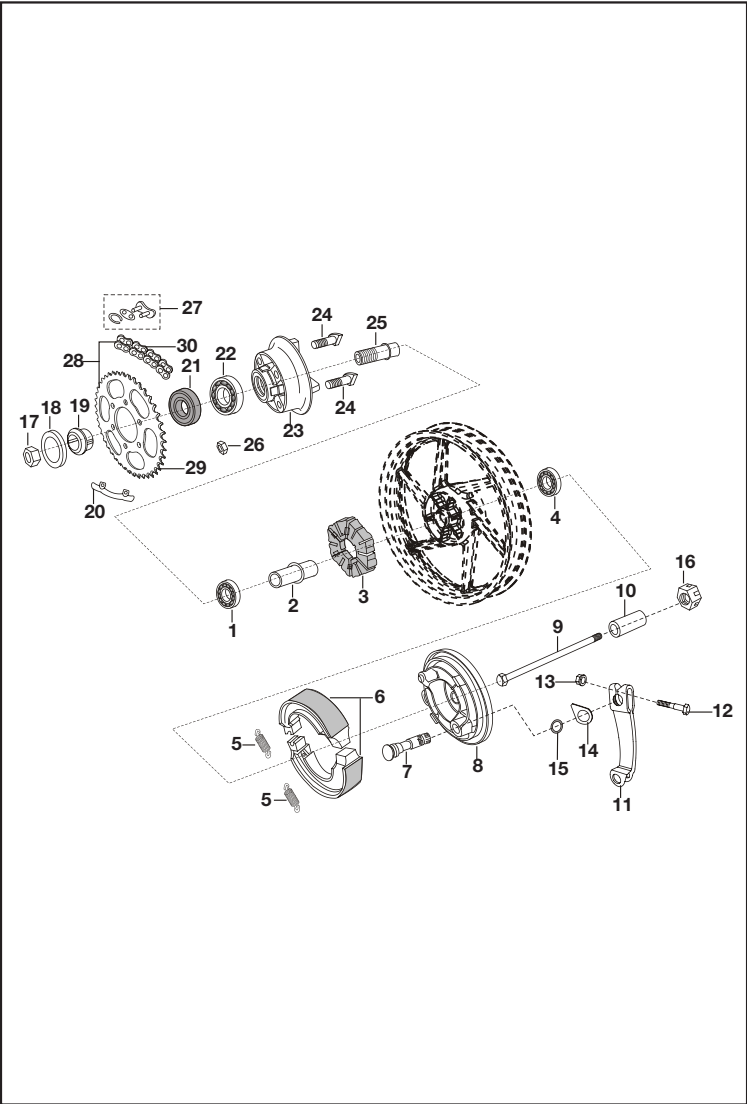


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	39224220	Rodamiento Rueda Trasera	1	
2	DK151022	Buje Rueda Trasera	1	
3	DJ151088	Antivibrante Rueda	1	
4	39224120	Rodamiento Rueda Trasera	1	
5	30151069	Resorte Bandas Freno	2	
6	30151068	Banda de Freno Trasero	1	
7	JC151005	Leva Freno Trasero	1	
8	JC151002	Plato Porta Bandas Tras. (Solo)	1	
9	DK151009	Eje Rueda Trasera	1	
10	JC151011	Buje	1	
11	JC151007	Leva Freno Trasero	1	
12	39244704	Tornillo Leva Freno	1	
13	39079815	Tuerca de 6mm.	1	
14	JC151006	Indicador Desgaste Bandas	1	
15	30151038	Anillo Retenedor	1	
16	DH171019	Tuerca Pasador Brazo Oscilante	1	
17	39199715	Tuerca Porta Sproket	2	
18	39122411	Arandela Porta Sproket	2	
19	DK151014	Buje Porta Sprocket	1	
20	DS151074	Arandela Tornillo Sprocket	3	
21	DK151012	Retén Porta Sproket	1	
22	DK151013	Rodamiento Porta Sprocket	1	
23	DK151005	Porta Sprocket	1	
24	DS151073	Tornillos Sprocket	6	
25	DK151015	Buje	1	

This exploded view diagram illustrates the assembly of a bicycle rear wheel. The components are numbered as follows:

- 1**: Small end cap or spacer.
- 2**: Small cylindrical spacer or bush.
- 3**: Large cylindrical hub or axle component.
- 4**: Small end cap or spacer.
- 5**: Two small pins or washers used for the brake arm.
- 6**: The main brake arm or caliper body.
- 7**: Small cylindrical spacer or bush.
- 8**: The brake disc or rotor.
- 9**: The long axle pin.
- 10**: Small cylindrical spacer or bush.
- 11**: The brake lever or arm.
- 12**: Small pin or bolt for the lever.
- 13**: Small pin or washer for the lever.
- 14**: Small pin or washer for the lever.
- 15**: Small pin or washer for the lever.
- 16**: Small cylindrical spacer or bush.
- 17**: Small end cap or spacer.
- 18**: Small end cap or spacer.
- 19**: Small end cap or spacer.
- 20**: Small pin or washer for the gear.
- 21**: Small cylindrical spacer or bush.
- 22**: Small cylindrical spacer or bush.
- 23**: Small cylindrical spacer or bush.
- 24**: Small pin or washer for the gear.
- 25**: Small cylindrical spacer or bush.
- 26**: Small pin or washer for the gear.
- 27**: Two small pins or washers for the gear.
- 28**: The main gear or sprocket.
- 29**: Small cylindrical spacer or bush.
- 30**: Small cylindrical spacer or bush.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a rear suspension system. The components are numbered as follows:

- 1**: Upper control arm
- 2**: Coil spring
- 3**: Lower control arm
- 4**: Shock absorber
- 5**: Rear axle
- 6**: Upper ball joint
- 7**: Lower ball joint
- 8**: Wheel hub
- 9**: Wheel nut
- 10**: Wheel
- 11**: Axle nut
- 12**: Axle lock
- 13**: Axle pin
- 14**: Axle cap

The diagram shows the following assembly steps:

- Install the upper control arm (1) and lower control arm (3) onto the chassis.
- Install the coil spring (2) and shock absorber (4) onto the control arms.
- Install the rear axle (5) and axle lock (12) onto the shock absorber.
- Install the upper ball joint (6) and lower ball joint (7) onto the control arms.
- Install the wheel hub (8) and wheel nut (9) onto the axle.
- Install the wheel (10) and axle nut (11) onto the axle.
- Install the axle pin (13) and axle cap (14) onto the axle.

BAJAJ
pulsar₂₀₀ OIL/COOLED

FIGURA N° 37: MANUBRIO

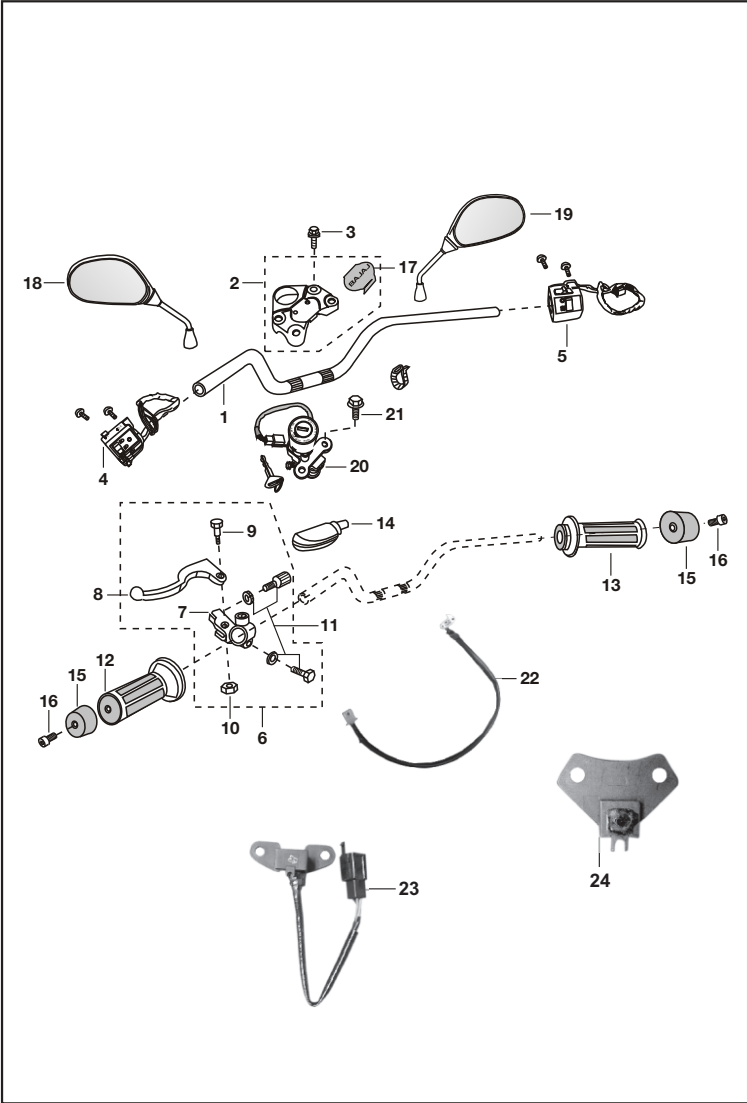


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC181005	Manubrio	1	
2	DH181053	Abrazadera Manubrio	1	
3	39171404	Tornillo	4	
4	DH201048	Comando Luces Izquierdo	1	
5	DH201049	Comando Luces Derecho	1	
6	DJ191053	Soporte Leva Clutch	1	
7	DJ191054	Soporte Izquierdo	1	
8	DJ191055	Leva Clutch	1	
9	DD191085	Tornillo Leva Clutch	1	
10	39118415	Tuerca Comando Izquierdo	1	
11	36DK0019	Juego Tornillos Leva Freno	1	Ref. Pag. No.53
12	DH191007	Manillar Izquierdo	1	
13	DH191014	Carretel Acelerador	1	
	DH191017	Tubo Interno Manillar Acelerador	1	
	DH191008	Caucho Manillar Acelerador (Solo)	1	
14	DH191019	Guardapolvo	1	
15	DJ181011	Bujes Manubrio	2	
16	DH181040	Tornillo	2	Alt. 39 2427 04
17	DJ181039	Emblema Manubrio	1	
18	DJ221003	Espejo Retrovisor Izquierdo	1	
19	DJ221004	Espejo Retrovisor Derecho	1	
20	DS181022	Switch Encendido	1	
21	39194304	Tornillos	2	
22	DJ201035	Swiche Clutch	1	
23	DJ201180	Sensor De Direccionales	1	
24	DJ201181	Imán Autocancelación Direccionales	1	

FIGURA N° 38: SUSPENSIÓN DELANTERA (1/2)

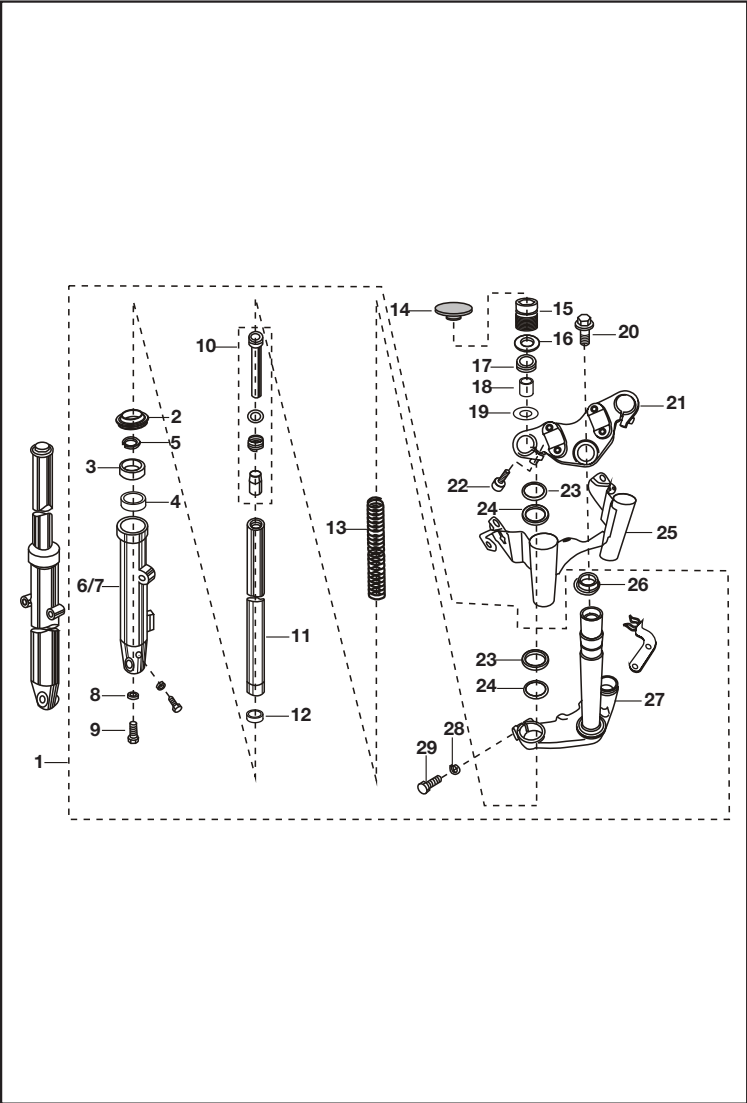


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC181001	Suspensión Delantera Completa	1	
2	DG181021	Guardapolvo Telescópico	2	
3	DG181023	Retén Tubo Telescópico	2	
4	DG181013	Buje Guía Tubo Telescópico	2	
5	DG181022	Pin de Seguridad	2	
6	JC181011	Camisa Tubo Telescópico Izquierda	1	
7	JC181012	Camisa Tubo Telescópico Derecha	1	
8	30181026	Junta Tornillo	2	
9	30181025	Tornillo Camisa Telescópico	2	
10	DS181077	Cilindro Interno Tubo Telescópico	2	
11	JC181021	Tubo Telescópico	2	
12	DG181011	Buje Guía Tubo Telescópico	2	
13	JC181017	Resorte Tubo Telescópico	2	
14	DH181009	Caucho Tapón Suspensión	2	
15	DH181015	Tornillo Telescópico	2	
16	30181029	Anillo Retén	2	
17	30181028	Arandela Resorte Suspensión	2	
18	DS181085	Buje Separador Cabeza Espiga	2	
19	DG181003	Arandela	2	
20	59040005	Tornillo Espiga	1	Alt. DG181025
21	JC181002	Cabeza Espiga	1	
22	DG181008	Tornillo Soporte Guardafango Del.	2	
23	JC181007	Caucho Espiga	2	
24	JC181006	Cubierta Caucho Espiga	4	
25	52JC0019	Soporte Farola	1	

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or actuator. The components are numbered 1 through 29. The assembly is organized into several vertical sections. On the left, a long cylindrical component (1) is shown with its internal parts (2, 3, 4, 5, 6/7, 8, 9) and a small pin (10). In the center, a long shaft (11) is shown with a spring (13) and a pin (12). On the right, a complex assembly (14) is shown, including a cap (14), a series of seals and rings (15, 16, 17, 18, 19), a pin (20), a bracket (21), a pin (22), a series of seals and rings (23, 24), a bracket (25), a pin (26), a bracket (27), a pin (28), and a pin (29). Dashed lines indicate the assembly sequence and the relative positions of the components.

BAJAJ
Pulsar 200 OIL/COOLED

This diagram illustrates the assembly of a Fuji 200 outboard motor. The components are numbered as follows:

- 1**: Main upper cowling with the 'Fuji' logo.
- 2**: Lower cowling with a mounting bracket.
- 3**: Internal transom plate with mounting points.
- 4**: Lower transom plate with mounting points.
- 5**: Small curved trim piece.
- 6**: Small L-shaped trim piece.
- 7**: Small curved trim piece.
- 8**: Small rectangular trim piece.
- 9**: Small curved trim piece.
- 10/11**: Propeller assembly.
- 12**: Propeller nut.
- 13**: Small rectangular trim piece.
- 14**: Small circular trim piece.
- 15**: The entire assembly, indicated by a dashed box.
- 16**: 'Fuji' logo.
- 17**: '200' logo.
- 18**: 'OIL COOLED' logo.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the components of a car stereo unit and their assembly sequence. The components are numbered 1 through 15:

- 1:** A circular faceplate with two mounting holes.
- 2:** A small screw used to secure the faceplate.
- 3:** A screw used to secure the faceplate.
- 4:** A bracket or mounting plate.
- 5:** A screw used to secure the bracket.
- 6:** A component, possibly a tuner or amplifier, with a sliding switch.
- 7:** A small screw used to secure the component.
- 8:** A small screw used to secure the component.
- 9:** A cable with a connector at one end and a plug at the other.
- 10:** A rectangular component, possibly a display or control unit.
- 11:** A small screw used to secure the component.
- 12:** A curved component, possibly a trim piece or antenna base.
- 13:** A small screw used to secure the component.
- 14:** A curved component, possibly a trim piece or antenna base.
- 15:** A small screw used to secure the component.

The diagram shows the following assembly steps:

- Attach the faceplate (1) to the bracket (4) using screws (2) and (3).
- Attach the component (6) to the bracket (4) using screws (7) and (8).
- Attach the component (10) to the bracket (4) using screw (11).
- Attach the cable (9) to the component (10).
- Attach the curved components (12) and (14) to the bracket (4) using screws (13) and (15).

BAJAJ
pulsar₂₀₀ OIL/COOLED

Exploded view diagram of the BAJAJ BS-103 instrument cluster assembly. The diagram shows the main instrument cluster (1) with a speedometer, tachometer, and odometer. It includes a mounting bracket (2) with a screw (3). The cluster has four indicator lights (4) and a reset button (5). The wiring harness (6) is shown at the bottom.

BAJAJ
pulsar *200* OIL/COOLED

This diagram illustrates the assembly of a rear wiper system. The components are labeled as follows:

- 1**: A long, thin wiper blade with a curved end.
- 2**: A shorter wiper blade with a curved end.
- 3**: The main wiper arm, which is a long, flat metal piece with a curved end and a mounting bracket.
- 4**: Two small, cylindrical fasteners or pins used to secure the wiper blades to the arm.
- 5**: A coiled cable with a connector at one end.
- 6**: A small, circular ring or washer.

BAJAJ
Pulsar *200* OIL/COOLED

This exploded view diagram illustrates the components of a car headlight assembly. The parts are numbered as follows:

- 1**: Main headlight housing.
- 2**: Lower headlight bezel.
- 3**: Upper headlight bezel.
- 4**: Small screw for bezel attachment.
- 5**: Screw for bezel attachment.
- 6**: Small screw for bezel attachment.
- 7**: Small plastic clip.
- 8**: Large screw for housing attachment.
- 9**: Headlight lens.
- 10**: Headlight bracket.
- 11**: Headlight mounting plate.
- 12**: Small plastic clip.
- 13**: Small screw for mounting plate.
- 14**: Small screw for mounting plate.
- 15**: Headlight bulb.
- 16**: Headlight wiring harness.

BAJAJ
Pulsar₂₀₀ OIL/COOLED

Diagram illustrating the assembly of a cable assembly, showing components labeled 1/2, 3/4, 5, and 6.

- 1/2**: A cable assembly with a connector and a coiled section.
- 3/4**: A cable assembly with a connector and a coiled section.
- 5**: A small cylindrical component, likely a connector or plug.
- 6**: A small cylindrical component, likely a connector or plug.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a car stereo unit. The components are numbered as follows:

- 1:** The main car stereo unit, shown in a dashed box at the top right.
- 2:** A small circular component, likely a push-button or indicator light, located near the top of the unit.
- 3:** A small rectangular component, possibly a fuse or a small switch, located below component 2.
- 4:** A small screw or fastener used to secure component 3.
- 5:** A screw used to attach the main unit to the dashboard.
- 6:** A screw used to secure the main unit to the dashboard.
- 7:** A rectangular component, likely a speaker or a subwoofer, connected to the main unit by a cable.
- 8:** A metal bracket or mounting plate used to secure the main unit to the dashboard.
- 9:** A rectangular plate, likely a faceplate or a decorative cover, located below the main unit.
- 10:** A screw used to secure the faceplate to the main unit.
- 11:** A control panel or a set of buttons, located at the bottom left of the diagram.
- 12:** A series of small components, including a screw and a small circular component, used to secure the control panel.

BAJAJ
pulsar *200* OIL/COOLED

This diagram illustrates the components of a vehicle's electrical system, numbered 1 through 19. The components are as follows:

- 1**: A circular component, likely a voltage regulator or alternator, with a mounting bracket.
- 2**: A bolt and a washer used for mounting.
- 3**: A small circular component, possibly a fuse or a terminal.
- 4**: A bolt and a washer used for mounting.
- 5**: A rectangular battery unit.
- 6**: A long, narrow component, likely a fuse block or a relay.
- 7**: A complex wiring harness with multiple branches and connectors.
- 8**: A component, possibly a starter motor or a solenoid, with a mounting bracket.
- 9**: A coiled spring.
- 10**: A small rectangular component, possibly a fuse or a terminal.
- 11**: A small cylindrical component, possibly a fuse or a terminal.
- 12**: A rectangular component, likely a fuse block or a relay.
- 13**: A component, possibly a fuse or a terminal, with a mounting bracket.
- 14**: A small cylindrical component, possibly a fuse or a terminal.
- 15**: A wire with a terminal.
- 16**: A wire with a terminal.
- 17**: A complex wiring harness with multiple branches and connectors.
- 18**: A small cylindrical component, possibly a fuse or a terminal.
- 19**: A bolt and a washer used for mounting.

BAJAJ
pulsar₂₀₀ OIL/COOLED

BAJAJ
pulsar₂₀₀ OIL/COOLED

LISTA DE KITS

Item	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36DH1006	Kit Antivibrantes Tapa Volante	DH101282	Antivibrante Tapa Volante	1
			DH101292	Antivibrante "A" Izquierdo	1
			DH101294	Antivibrante "B" Izquierdo	1
2	36DH1007	Kit Arandelas Tapa Volante	DH101283	Antivibrante Platina Plato Bobinas	1
			DH101293	Antivibrante Platina Tapa Volante	1
3	36DK0007	Kit Filtro Centrifugo	39220011	Arandela	1
			DH101234	Junta Filtro Centrifugo	1
			39226701	Tornillo Estrella	1
			DH101066	Conducto Aceite	1
			DH101067	Resorte Conducto Aceite	1
			39219908	Pin	1
4	36DK0011	Kit Tornillos Soportes de Motor	39231204	Tornillo	4
			39197015	Tuerca	8
			39241304	Tornillo	1
			DH161245	Tuerca	3
5	36DK0012	Kit Bujes Amortiguador	39071411	Arandela	8
			39071215	Tuerca	2
			39073712	Wasa	2
6	36DK0013	Kit Pines Reposapié Pasajero	DJ161186	Platina	2
			DH161061	Pin	2
			30141031	Anillo Retenedor	2
			39104011	Arandela	2
			39078408	Pin	2
7	36DK0017	Kit Varilla Freno	30191038	Pin	1
			39021911	Arandela 6 mm	1
			39080808	Pin	1
			30191035	Resorte Varilla Freno	1
			15191026	Pin Pasador Varilla Freno	1
			30191036	Tuerca	1

LISTA DE KITS

Item	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
8	36DK0019	Kit Soporte Leva Clutch	30191024	Tornillo Ajuste	1
			30191017	Tuerca	1
			39021911	Arandela	1
			39072504	Tornillo	1
9	36DK0021	Kit Bujes Soporte Carenaje	DJ181029	Buje Carenaje	1
			DJ181064	Antivibrante	1
			39021111	Arandela	1
			39155304	Tornillo	1
10	36DS1001	Kit Anillos Reten Culata	39239121	Anillo Retenedor	2
			39128321	Anillo Retenedor	2
11	36DV0003	Kit Cunas de Dirección	DG181045	Cuna Chasis	1
			DG181046	Cuna Dirección	1
			DG181047	Cuna Superior	1
12	36JC0001	Kit Calcomanías	JC141018	"Calcomanía" Oil Cooler Izquierda	1
			JC141019	"Calcomanía" Oil Cooler Derecha	1
			JC161019	Calcomanía Cubierta Sillín Izquierda	1
			JC161020	Calcomanía Cubierta Sillín Derecha	1
			DJ141044	Calcomanía Tanque Izquierda	1
			DJ141045	Calcomanía Tanque Derecha	1
13	36JC0002	Kit Sprocket y Cadena	DV101048	Piñón Salida 14 Dientes	1
			JC151044	Sprocket 38 Dientes	1
			DK151010	Cadena 520x104L	1
14	DK101326	Kit Resortes Válvula	DK101247	Arandela Resorte Válvula	2
			DK101108	Resorte Interno Válvula	2
			DK101110	Resorte Externo Válvula	2
			DK101246	Arandela Resorte Válvula	2
15	DK101327	Kit Válvulas	DK101052	Válvula de Admisión	1
			DK101011	Válvula de Escape	1
16	DK161185	Kit Antivibrantes Tapas Laterales	DH161158	Antivibrante Tapa Lateral Delantero	2
			DH161133	Antivibrante Tapa Lateral Trasero	2
17	JC101038	Kit Guías Cadenilla	DH101017	Guía Cadenilla	1
			DK101059	Guía Cadenilla	1

NOTAS IMPORTANTES

Pag. N°.	Item N°.	Referencia Anterior	Descripción	Cant.	Observaciones	Fecha
8	14	DK101106	Piñón de 4a.	1	El Piñón nuevo (DK101718) es intercambiable siempre y cuando se cambie también el piñón de primera (DK101717)	01-Ene-12
				1		
8	17	DK101118	Piñón de 1a.	1	El Piñón nuevo (DK101717) es intercambiable siempre y cuando se cambie también el piñón de cuarta (DK101718)	01-Ene-12
				1		
8	18	DK101633	Piñón de 5a.	1	El Piñón nuevo (DK101720) es intercambiable siempre y cuando se cambie también el piñón de segunda (DK101719)	01-Ene-12
				1		
8	20	DH101333	Piñón de 2a.	1	El Piñón nuevo (DK101719) es intercambiable siempre y cuando se cambie también el piñón de quinta (DK101720)	01-Ene-12
				1		

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
020251/00	13	31
15191026	7	52
30101014	11	12
30101061	21	8
30101236	24	13
30101236	6	26
30141031	6	52
30141032	11	43
30141039	6	43
30151038	15	36
30151068	6	36
30151069	5	36
30151095	7	38
30161157	2	31
30181025	9	40
30181026	8	40
30181028	17	40
30181029	16	40
30191017	8	53
30191024	8	53
30191035	7	52
30191036	7	52
30191038	7	52
30201085	14	50
30201104	13	50
31101106	11	1
31101106	15	12
31101173	4	6
31201081	16	12
35171033	14	27
36DH1006	6	14
36DH1006	1	52
36DH1007	8	14
36DH1007	2	52

PARTE No.	FIG. No.	PAG. No.
36DH1902	15	34
36DH4007	19	24
36DK0007	13	6
36DK0007	3	52
36DK0011	21	25
36DK0011	4	52
36DK0012	3	27
36DK0012	5	52
36DK0013	5	29
36DK0013	6	52
36DK0015	9	19
36DK0017	4	38
36DK0017	7	52
36DK0018	12	38
36DK0019	11	39
36DK0019	8	53
36DK0021	11	47
36DK0021	9	53
36DK0026	16	42
36DK0029	9	6
36DK0029	20	15
36DK0033	1	51
36DK0038	2	16
36DS1001	3	1
36DS1001	11	2
36DS1001	10	53
36DV0003	5	26
36DV0003	11	53
36JC0001	15	42
36JC0001	12	53
36JC0002	28	37
36JC0002	13	53
36JC0013	15	2
39000701	5	19

PARTE No.	FIG. No.	PAG. No.
39021111	9	53
39021911	7	52
39021911	8	53
39029215	7	29
39042215	10	31
39069415	9	38
39070501	5	49
39071111	4	30
39071215	5	52
39071411	5	52
39071601	13	47
39072504	8	53
39073712	5	52
39074011	15	27
39074011	8	43
39074601	7	23
39075201	7	12
39076101	5	23
39078408	6	52
39078708	3	31
39078708	1	33
39078912	8	38
39078912	28	41
39079415	26	37
39079815	13	36
39080708	10	38
39080808	7	52
39084001	2	43
39089704	5	28
39099906	10	13
39099906	4	14
39104011	6	52
39104119	3	13
39106204	24	8

PARTE No.	FIG. No.	PAG. No.
39106204	18	50
39106901	6	29
39107504	9	1
39118415	10	39
39122411	16	27
39122411	18	36
39128215	4	28
39128321	5	2
39128321	10	53
39150711	3	50
39152401	14	47
39154011	11	38
39155304	9	53
39155604	7	44
39162011	9	7
39166005	2	2
39166121	3	17
39167204	3	7
39167204	5	17
39167304	13	4
39167404	8	2
39167404	14	2
39167404	11	7
39167404	19	15
39167404	2	22
39167404	4	23
39167704	25	12
39168004	7	26
39168004	5	30
39168004	10	49
39168004	11	50
39168606	8	7
39168606	4	22
39171404	3	39

PARTE No.	FIG. No.	PAG. No.
39174104	8	29
39176511	4	19
39176904	2	35
39177304	12	49
39177802	2	45
39178001	12	18
39181304	29	41
39184504	18	12
39188020	4	4
39188020	15	15
39188020	16	16
39190204	6	21
39190204	15	23
39190701	8	47
39193120	6	6
39194304	21	39
39194404	17	23
39195604	4	50
39196704	12	25
39197015	5	25
39197015	6	48
39197015	4	52
39197215	6	49
39199020	21	13
39199715	17	36
39199819	11	10
39201719	5	3
39213217	5	5
39214124	5	47
39215220	5	7
39215320	20	6
39215704	8	25
39215811	2	8
39216011	9	8

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
39216511	3	6
39218006	8	11
39218006	22	12
39218106	2	5
39218106	23	12
39218304	2	6
39218304	3	14
39218520	10	12
39218819	4	12
39219019	12	12
39219421	6	22
39219908	15	6
39219908	3	52
39220011	14	6
39220011	13	15
39220011	14	16
39220011	3	52
39220307	8	6
39224120	4	36
39224220	1	36
39226701	18	6
39226701	3	52
39230504	19	12
39231004	16	25
39231004	2	51
39231004	5	51
39231104	17	25
39231204	4	25
39231204	4	52
39236220	2	33
39238104	3	43
39239121	10	53
39241204	9	25
39241304	10	25

PARTE No.	FIG. No.	PAG. No.
39241304	4	52
39241404	13	25
39242411	8	44
39243704	6	9
39244311	17	13
39244704	12	36
39244811	21	12
39245221	12	14
39245304	6	10
39245711	18	25
39253204	8	1
39254220	3	4
39254717	26	13
39255717	7	7
39258320	6	11
39260120	7	11
39260320	8	12
39260607	7	9
39260801	10	2
39263704	8	17
39264715	6	1
39266921	1	4
39275821	10	43
41070-1217-NR57TL/18	4	32
41070-9017-NF45/18	2	32
52DH0177	10	7
52DK0013	5	42
52DK0027	4	42
52DK5506	2	42
52DK5507	3	42
52JC0001	8	42
52JC0002	9	42
52JC0019	25	40
59010013	4	49

PARTE No.	FIG. No.	PAG. No.
59020001	12	42
59040005	20	40
59040031	9	4
59040040	2	30
59050008	3	11
59050008	2	12
59100002	1	23
59110002	9	3
59200006	9	12
59200007	9	24
59200027	9	11
59210006	5	12
59210008	13	2
59210029	6	46
AP101043	10	14
BA122003	13	43
BASE-AGUJA-PULSAR/00	19	18
CB121014	7	19
CS101128	14	4
DD101062	15	4
DD111012	14	23
DD141022	7	43
DD191085	9	39
DE151008	6	33
DE151012	5	33
DE191010	5	34
DE191011	4	34
DE191043	1	34
DF161102	9	31
DF181098	4	47
DG101029	4	3
DG101339	14	38
DG101418	7	13
DG111008	8	23

PARTE No.	FIG. No.	PAG. No.
DG141028	15	43
DG151005	4	33
DG151007	12	33
DG151008	9	33
DG151049	10	33
DG151089	1	35
DG161121	3	44
DG171018	5	27
DG171019	7	27
DG171020	12	27
DG171021	11	27
DG171022	13	27
DG171034	10	27
DG171038	2	27
DG181003	19	40
DG181005	26	41
DG181008	22	40
DG181011	12	40
DG181013	4	40
DG181021	2	40
DG181022	5	40
DG181023	3	40
DG181042	4	26
DG181045	11	53
DG181046	11	53
DG181047	11	53
DG181048	3	26
DH101006	5	11
DH101017	17	53
DH101048	8	4
DH101064	10	6
DH101065	12	6
DH101066	19	6
DH101066	3	52

PARTE No.	FIG. No.	PAG. No.
DH101067	17	6
DH101067	3	52
DH101072	2	7
DH101079	4	8
DH101079	13	8
DH101084	8	8
DH101111	15	8
DH101141	4	13
DH101142	5	13
DH101144	3	10
DH101146	3	9
DH101154	12	13
DH101157	11	14
DH101163	17	24
DH101164	15	24
DH101172	7	24
DH101180	18	15
DH101180	19	16
DH101188	8	24
DH101195	11	6
DH101197	2	13
DH101199	6	23
DH101203	13	12
DH101234	16	6
DH101234	3	52
DH101235	5	8
DH101272	10	1
DH101275	17	15
DH101275	18	16
DH101282	1	52
DH101283	2	52
DH101292	1	52
DH101293	2	52
DH101294	1	52

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DH101319	18	8
DH101323	13	14
DH101333	19	8
DH101336	11	8
DH101382	10	24
DH101383	4	11
DH101385	5	24
DH101388	19	13
DH101388	7	14
DH101389	14	24
DH101392	11	4
DH101393	7	10
DH101394	10	10
DH101412	7	4
DH101414	10	5
DH101482	22	13
DH101487	10	11
DH101493	4	9
DH101496	9	9
DH101503	8	10
DH101508	4	2
DH101509	5	10
DH101510	18	13
DH101520	15	16
DH101525	7	20
DH101533	18	24
DH101544	16	13
DH101581	4	24
DH101607	3	20
DH101628	1	16
DH101648	14	15
DH101658	3	24
DH101661	14	12
DH101705	1	10

PARTE No.	FIG. No.	PAG. No.
DH101714	2	10
DH101781	2	24
DH101782	1	24
DH101784	17	12
DH101805	6	20
DH101861	9	16
DH111012	9	2
DH111013	9	23
DH111015	13	23
DH111016	18	23
DH121001	1	22
DH121010	3	22
DH121011	14	13
DH121012	15	13
DH121015	13	13
DH121020	3	19
DH121035	5	22
DH121038	7	2
DH121101	10	18
DH121102	11	18
DH141020	6	42
DH141023	5	44
DH141024	14	43
DH141031	2	44
DH141048	5	43
DH141050	1	43
DH151029	6	38
DH161046	3	21
DH161053	3	28
DH161056	7	28
DH161061	6	52
DH161066	7	31
DH161100	6	28
DH161112	2	26

PARTE No.	FIG. No.	PAG. No.
DH161121	4	31
DH161133	16	53
DH161145	5	31
DH161146	8	31
DH161158	16	53
DH161189	2	25
DH161190	3	25
DH161245	15	25
DH161245	4	52
DH161273	11	25
DH161283	4	46
DH161292	11	49
DH161293	2	49
DH161293	13	49
DH171019	8	27
DH171019	8	33
DH171019	16	36
DH181009	14	40
DH181015	15	40
DH181040	16	39
DH181052	10	47
DH181053	2	39
DH191007	12	39
DH191008	13	39
DH191012	9	50
DH191014	13	39
DH191017	13	39
DH191019	14	39
DH201019	10	50
DH201048	4	39
DH201049	5	39
DH201064	11	31
DH201065	12	31
DH211005	9	51

PARTE No.	FIG. No.	PAG. No.
DH221004	8	51
DJ101022	1	7
DJ101063	23	8
DJ101064	4	20
DJ101109	16	24
DJ101133	6	7
DJ101134	4	7
DJ101209	1	14
DJ101217	2	1
DJ101278	13	24
DJ101350	3	15
DJ101350	4	16
DJ101369	7	16
DJ111023	19	23
DJ111059	2	23
DJ111061	3	23
DJ111062	20	23
DJ121051	2	18
DJ121052	3	18
DJ121053	5	18
DJ121054	6	18
DJ121055	7	18
DJ121057	18	18
DJ121058	14	18
DJ121059	15	18
DJ141006	12	43
DJ141007	4	43
DJ141008	6	44
DJ141044	12	53
DJ141045	12	53
DJ151068	3	35
DJ151069	4	35
DJ151070	5	35
DJ151071	6	35

PARTE No.	FIG. No.	PAG. No.
DJ151072	7	35
DJ151073	8	35
DJ151074	9	35
DJ151075	10	35
DJ151076	2	34
DJ151088	3	36
DJ151105	11	35
DJ151106	12	35
DJ161012	9	14
DJ161067	16	23
DJ161069	9	30
DJ161072	8	49
DJ161079	6	51
DJ161080	7	51
DJ161090	8	28
DJ161126	1	28
DJ161127	2	28
DJ161128	3	29
DJ161129	4	29
DJ161132	8	26
DJ161133	9	26
DJ161186	6	52
DJ161188	17	18
DJ161247	6	50
DJ181011	15	39
DJ181029	9	53
DJ181033	3	47
DJ181037	7	47
DJ181039	17	39
DJ181064	9	53
DJ181065	12	47
DJ181069	9	47
DJ181090	7	42
DJ181119	3	45

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DJ181120	2	47
DJ191027	6	34
DJ191028	7	34
DJ191029	8	34
DJ191030	9	34
DJ191031	10	34
DJ191034	13	34
DJ191035	14	34
DJ191053	6	39
DJ191054	7	39
DJ191055	8	39
DJ191056	11	34
DJ191057	3	34
DJ191061	1	46
DJ201020	16	50
DJ201021	20	12
DJ201035	22	39
DJ201100	12	34
DJ201126	5	50
DJ201140	15	50
DJ201146	3	48
DJ201147	4	48
DJ201148	1	48
DJ201149	2	48
DJ201159	4	45
DJ201163	5	45
DJ201164	10	23
DJ201165	17	50
DJ201180	23	39
DJ201181	24	39
DJ221003	18	39
DJ221004	19	39
DK101001	5	15
DK101003	3	2

PARTE No.	FIG. No.	PAG. No.
DK101011	15	53
DK101052	15	53
DK101059	17	53
DK101063	1	5
DK101072	16	15
DK101072	17	16
DK101073	1	15
DK101075	3	15
DK101078	9	15
DK101094	3	12
DK101097	6	12
DK101102	6	8
DK101103	3	8
DK101104	7	8
DK101105	12	8
DK101106	14	8
DK101107	17	8
DK101108	14	53
DK101110	14	53
DK101112	1	17
DK101118	16	8
DK101122	23	13
DK101123	25	13
DK101124	24	12
DK101125	1	8
DK101126	2	15
DK101126	3	16
DK101135	10	9
DK101144	10	8
DK101149	6A	15
DK101150	6B	15
DK101151	7	15
DK101152	8	15
DK101153	10	15

PARTE No.	FIG. No.	PAG. No.
DK101154	12	15
DK101155	11	15
DK101157	5	9
DK101159	1	9
DK101160	2	9
DK101163	4	15
DK101176	6	24
DK101177	16	10
DK101180	13	10
DK101182	4	10
DK101185	14	10
DK101186	15	10
DK101187	12	10
DK101225	2	17
DK101236	8	5
DK101236	9	17
DK101237	9	5
DK101237	10	17
DK101238	7	5
DK101238	4	17
DK101244	5	20
DK101245	20	8
DK101246	14	53
DK101247	14	53
DK101248	7	6
DK101251	6	13
DK101252	11	13
DK101253	9	10
DK101255	6C	15
DK101275	7	17
DK101276	6	17
DK101279	13	17
DK101289	11	17
DK101326	6	3

PARTE No.	FIG. No.	PAG. No.
DK101326	14	53
DK101327	7	3
DK101327	15	53
DK101328	4	5
DK101340	12	17
DK101356	6	15
DK101361	8	9
DK101380	16	12
DK101382	5	9
DK101475	8	20
DK101561	21	16
DK101564	6	16
DK101565	8	16
DK101566	7A	16
DK101567	7C	16
DK101568	7B	16
DK101569	5	16
DK101570	11	16
DK101571	12	16
DK101573	10	16
DK101574	13	16
DK101574	20	16
DK101595	1	24
DK101596	15	24
DK101605	2	24
DK101636	18	15
DK111010	8	19
DK121009	2	19
DK141015	9	44
DK151005	23	36
DK151006	2	32
DK151007	4	32
DK151008	13	33
DK151009	9	36

PARTE No.	FIG. No.	PAG. No.
DK151010	30	37
DK151010	13	53
DK151012	21	36
DK151013	22	36
DK151014	19	36
DK151015	25	36
DK151022	2	36
DK151026	5	32
DK151027	7	33
DK151028	3	33
DK151036	27	37
DK161085	6	30
DK161086	3	30
DK161096	1	25
DK161098	1	30
DK161122	1	31
DK161123	10	42
DK161124	11	42
DK161127	19	25
DK161128	20	25
DK161137	1	29
DK161147	3	51
DK161148	4	51
DK161153	3	49
DK161159	6	25
DK161160	7	25
DK161161	14	25
DK161164	14	49
DK161185	1	44
DK161185	16	53
DK161187	15	17
DK161189	14	17
DK161198	7	30
DK161199	3	46

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DK171003	9	27
DK171006	6	27
DK181034	4	44
DK181050	6	26
DK181051	10	26
DK191011	2	46
DK191013	2	38
DK201003	1	49
DK201024	7	49
DK201037	1	50
DK201038	2	50
DK201044	16	47
DK201052	6	45
DK201065	9	43
DK201077	14	33
DK201078	12	50
DK211001	1	21
DK211004	4	21
DK211008	5	21
DK221005/00	1A	51
DK221006/00	AB	51
DL181010	6	47
DP161145	9	49
DS101084	7	1
DS101096	5	1
DS101154	5	6
DS101166	4	1
DS101215	8	13
DS101263	27	13
DS101276	6	4
DS101333	3	3
DS101335	1	3
DS101336	2	3
DS101353	9	13

PARTE No.	FIG. No.	PAG. No.
DS101353	12	24
DS101366	8	3
DS151073	24	36
DS151074	20	36
DS161125	8	30
DS181022	20	39
DS181077	10	40
DS181085	18	40
DS211005	2	21
DV101042	2	14
DV101048	22	8
DV101048	13	53
F-SILLIN-PUL-200-DEL	7	21
F-SILLIN-PUL-200-TRA	8	21
GH201012	5	48
JC101001	1	6
JC101012	3	5
JC101014	1	20
JC101016	1	12
JC101018	1	11
JC101022	2	4
JC101029	2	11
JC101030	1	13
JC101033	5	14
JC101034	12	4
JC101035	10	4
JC101036	1	1
JC101036	1	2
JC101037	6	5
JC101038	5	4
JC101038	17	53
JC101040	20	13
JC101045	1	12
JC101046	1	20

PARTE No.	FIG. No.	PAG. No.
JC101085	4	4
JC101086	3	4
JC111003	11	23
JC111004	12	23
JC111007	11	24
JC120001	12	2
JC120002	6	19
JC120003	6	2
JC120004	1	19
JC120005	1	18
JC120006	9	18
JC120007	16	18
JC120009	4	18
JC120010	13	18
JC120011	8	18
JC141015	13	42
JC141017	14	42
JC141018	18	42
JC141018	12	53
JC141019	12	53
JC151002	8	36
JC151005	7	36
JC151006	14	36
JC151007	11	36
JC151008	5	38
JC151010	3	32
JC151011	10	36
JC151013	1	32
JC151014	29	37
JC151014	13	53
JC151019	11	33
JC161002	2	29
JC161017	6	31
JC161019	17	42

[illegible][illegible]

BAJAJ *pulsar* 200 OIL/COOLED

FICHA TÉCNICA PULSAR 200

Motor :	4T, monocilíndrico, con radiador de aceite.
Diámetro x Carrera :	67.00mm x 56.40mm
Desplazamiento :	198.80 cc
Índice de compresión :	9.5 + 0.5 : 1
Potencia máxima :	18 HP @ 8.000 rpm
Torque máximo :	17 Nm @ 6.000rpm
Sistema de ignición :	CDI digital con microprocesador
Bujías :	NGK CR8E ó Champion RG4HC (2 uds).
Tolerancia de las bujías :	0.6 a 0.8 mm
Lubricación :	Bomba húmeda de aceite, forzada.
Arranque :	Eléctrico.
Transmisión :	5 velocidades.
Freno delantero :	Disco hidráulico.

Freno trasero : Bandas expandibles.

Capacidad del tanque

Lleno :	15 litros
Reserva :	3.2 litros
Reserva utilizable :	2 litros

Dimensiones

Largo x Ancho x Alto :	2035 mm x 750 mm x 1165 mm
Distancia entre ejes :	1350 mm
Radio de giro :	2500 mm
Altura al piso :	165 mm (Min.)
Llantas Delantera :	90/90 x 17, 49P tubeless
Trasera :	120/80 x 17, 61P tubeless
Presión de aire Delantera :	28 PSI
Trasera (Solo) :	28 PSI
Trasera (Con Parrillero) :	30 PSI
Sistema Eléctrico :	12 Volts DC
Faro delantero :	35/35 W
Luz de día :	5 W c/u (2 Uds.)
Luz de Stop :	LED/LED
Luces direccionales :	10 W
Indicadores del tablero :	LED
Velocímetro :	Display digital
Pito :	12 V DC
Batería :	12V - 9 Ah
Peso en seco :	145 kg.





Línea Gratuita Nacional

01 8000 52 00 90

servicioalcliente@auteco.com.co

www.auteco.com.co

Medellín: 604 2511 • Bogotá: 744 8911

Cali: 487 9911 • Barranquilla: 386 0011