

---

# GROUP 0

# GENERAL

## CONTENTS

<b>HOW TO USE THIS MANUAL.....</b>	<b>0-2</b>	LUBRICANTS .....	0-3
<b>PRECAUTIONS BEFORE SERVICE .....</b>	<b>0-2</b>	BRAKE FLUID.....	0-4
PROTECTING THE VEHICLE .....	0-2	SERVICING THE ELECTRICAL SYSTEM .....	0-4
DOING SERVICE WORK IN GROUPS OF TWO OR MORE MECHANICS.....	0-2	APPLICATION OF ANTI-CORROSION AGENTS AND UNDERCOATS.....	0-4
REMOVAL AND DISASSEMBLY .....	0-2	PRE-INSPECTION CONDITION.....	0-4
SPECIAL TOOLS .....	0-3	VEHICLE WASHING.....	0-4
PARTS TO BE REPLACED .....	0-3	MULTI USE TESTER (M.U.T.-III) SUB ASSEMBLY.....	0-5
PARTS .....	0-3	IN ORDER TO PREVENT VEHICLES FROM FIRE .....	0-5
TUBES AND OTHER RUBBER PARTS...	0-3	ENGINE OILS .....	0-5

## HOW TO USE THIS MANUAL


This manual contains Pre-delivery inspection and Periodic inspection and maintenance.

M6000000100026  
Group 0 and 1 have the contents for all vehicle models, and Group 2 has contents for the relevant vehicle models.

## PRECAUTIONS BEFORE SERVICE

### PROTECTING THE VEHICLE

M6001000100029

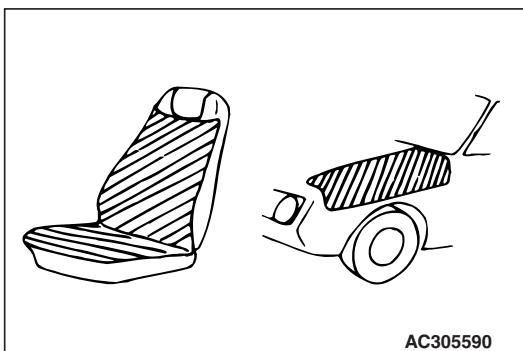


AC305590

If there is a likelihood of damaging interior or exterior parts during service operations, protect them with suitable covers (such as seat covers, fender covers, etc.).

### DOING SERVICE WORK IN GROUPS OF TWO OR MORE MECHANICS

M6001000200026

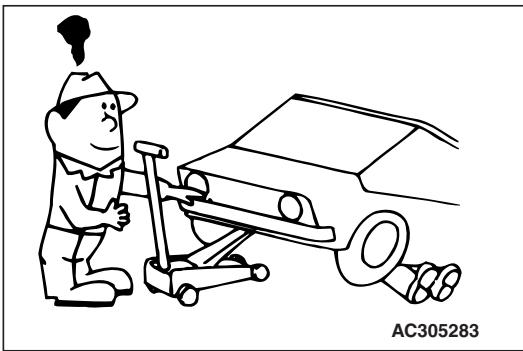

AC305283

If the service work is to be done by two or more mechanics working together, all the mechanics involved should take safety into consideration while they work.


### REMOVAL AND DISASSEMBLY

M6001000300023



AC305591

When checking a malfunction, find the cause of the problem. If it is determined that removal and/or disassembly is necessary, perform the work by following the procedures contained in this manual.

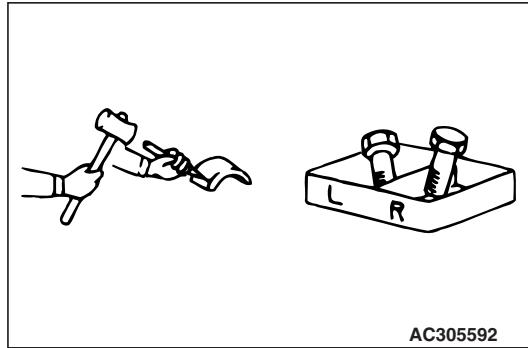


AC305592

If punch marks or mating marks are made to avoid error in assembly and facilitate the assembly work, be sure to make them in locations which will have no detrimental effect on performance and/or appearance. If an area having many parts, similar parts, and/or parts which are symmetrical right and left is disassembled, be sure to arrange the parts so that they do not become mixed during the assembly process.

1. Arrange the parts removed in the proper order.
2. Determine which parts are to be reused and which are to be replaced.
3. If bolts, nuts, etc., are to be replaced, be sure to use only the exact size specified.

## SPECIAL TOOLS

M6001000400031

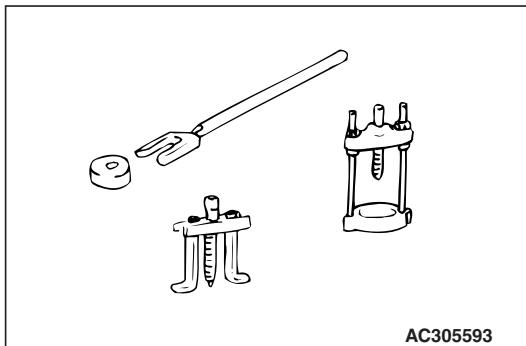


AC305593

If other tools are substituted for the special tools to do service or repair work, there is the danger that vehicle parts might be damaged, or the technician might be injured; therefore, be sure to use the special tool whenever doing any work for which the use of one is specified.

## PARTS TO BE REPLACED

M6001000500027

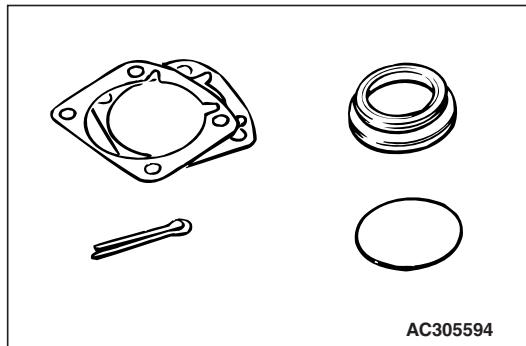

AC305594

If any of the following parts are removed, they must be replaced with new parts.

- Oil seals
- Gaskets (except rocker cover gasket)
- Packings
- O-rings
- Lock washers
- Split pins
- Self-locking nuts

## PARTS

M6001000600024




AC305284

When replacing parts, use MITSUBISHI MOTORS genuine parts.

## TUBES AND OTHER RUBBER PARTS

M6001000700021

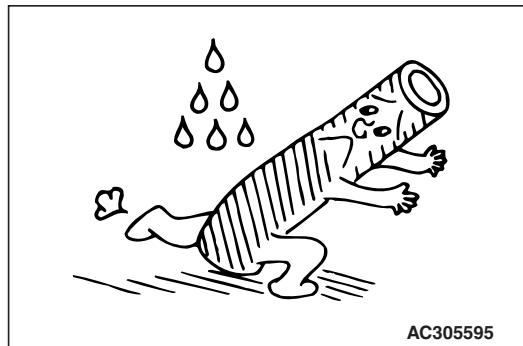


AC305595

Be careful to avoid spilling any petrol, oil, etc., because if it adheres to any tubes or other rubber parts, they might be adversely affected.

## LUBRICANTS

M6001000800028

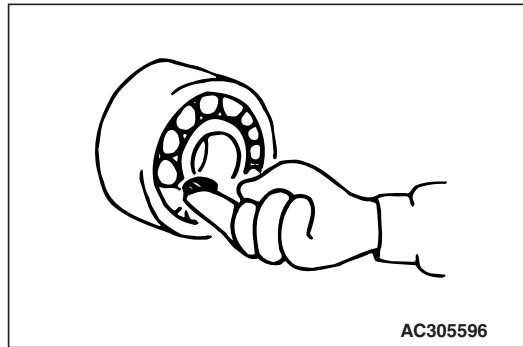


AC305596

In accordance with the instructions in this manual, apply the specified lubricants in the specified locations during assembly and installation.

## BRAKE FLUID

M6001000900025

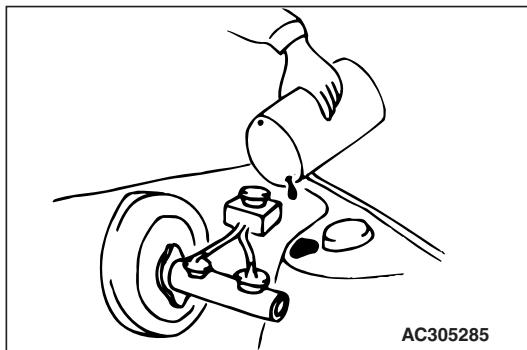


Be careful to avoid spilling any brake fluid, because if it adheres to the vehicle body, the paint coat might be discoloured.

## SERVICING THE ELECTRICAL SYSTEM

M6001001000081

**CAUTION**

**Before connecting or disconnecting the negative (-) cable, be sure to turn off the ignition switch and the lighting switch. (If this is not done, there is the possibility of semiconductor parts being damaged.)**

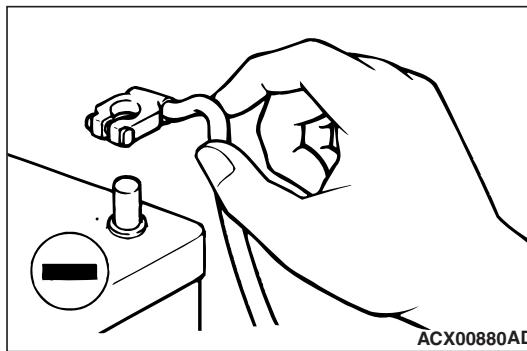

Before replacing a component related to the electrical system and before undertaking any repair procedures involving the electrical system, be sure to first disconnect the negative (-) cable from the battery in order to avoid damage caused by short-circuiting.

## APPLICATION OF ANTI-CORROSION AGENTS AND UNDERCOATS

M6001001100022

If oil or grease gets onto the oxygen sensor, it will cause a drop in the performance of the sensor. Cover the oxygen sensor with a protective cover when applying anti-corrosion agents and undercoats.

## PRE-INSPECTION CONDITION


M6001001200182

"Pre-inspection condition" refers to the condition that the vehicle must be in before proper engine inspection can be carried out. If you see the words "Set the vehicle to the pre-inspection condition". In this manual, it means to set the vehicle to the following condition.

- Engine coolant temperature: 80 to 90°C
- Lamps, electric cooling fan and all accessories: OFF
- M/T: Neutral
- A/T, CVT: P range

## VEHICLE WASHING

M6001001300082

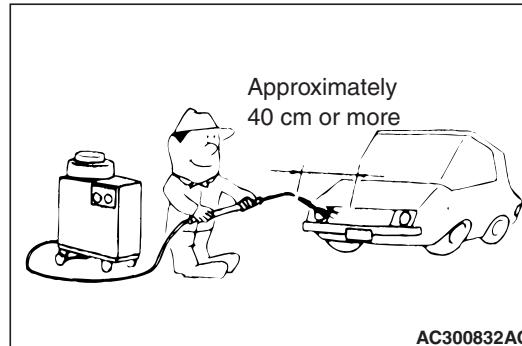

If high-pressure car-washing equipment or steam car-washing equipment is used to wash the vehicle, be sure to note the following information in order to avoid damage to plastic components, etc.

- Spray nozzle distance: Approximately 40 cm or more
- Spray pressure: 3,900 kPa or less
- Spray temperature: 82°C or less
- Time of concentrated spray to one point: within 30 sec.


## MULTI USE TESTER (M.U.T.-III) SUB ASSEMBLY

Refer to the "M.U.T.-III OPERATING INSTRUCTIONS" for instructions on handling the M.U.T.-III.

M6001001900169

### CAUTION

Turn the ignition switch to the LOCK (OFF) position before connecting or disconnecting the M.U.T.-III.

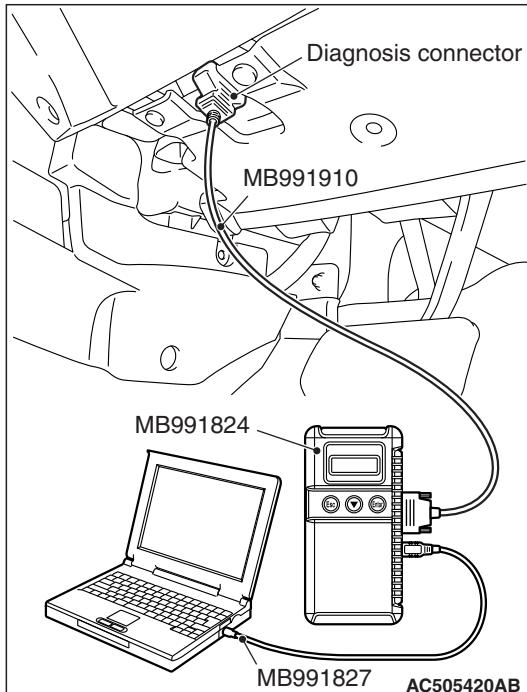

Connect the M.U.T.-III to the diagnosis connector as shown in the illustration.

## IN ORDER TO PREVENT VEHICLES FROM FIRE

"Improper installation of electrical or fuel related parts could cause a fire. In order to retain the high quality and safety of the vehicle, it is important that any accessories that may be fitted or modifications/repairs that may be carried out which involve the electrical or fuel systems, must be carried out in accordance with MMC's information/Instructions".

M6001001500064

## ENGINE OILS

M6001001600209

### HEALTH WARNING

Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer. Adequate means of skin protection and washing facilities must be provided.

### RECOMMENDED PRECAUTIONS

The most effective precaution is to adapt working practices which prevent, as far as practicable, the risk of skin contact with mineral oils, for example by using enclosed systems for handling used engine oil and by degreasing components, where practicable, before handling them.

#### Other precautions:

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Avoid contaminating clothes, particularly underpants, with oil.
- Do not put oily rags in pockets, the use of overalls without pockets will avoid this.
- Do not wear heavily soiled clothing and oil-impregnated foot-wear. Overalls must be cleaned regularly and kept separately from personal clothing.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.
- Obtain first aid treatment immediately for open cuts and wounds.
- Wash regularly with soap and water to ensure all oil is removed, especially before meals (skin cleansers and nail brushes will help). After cleaning, the application of preparations containing lanolin to replace the natural skin oils is advised.
- Do not use petrol, kerosine, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin after work.
- If skin disorders develop, obtain medical advice without delay.

---

**NOTES**

---

## GROUP 1

# PRE-DELIVERY INSPECTION

## CONTENTS

<b>NOTES CONCERNING ENTRIES . . . . .</b>	<b>1-3</b>	<b>UNDER VEHICLE . . . . .</b>	<b>1-16</b>
<b>PAINTWORK TERMS . . . . .</b>	<b>1-5</b>	14. TYRE AND SPARE TYRE PRESSURES . . . . .	1-16
<b>FIRST STEP . . . . .</b>	<b>1-6</b>	15. SUSPENSION SYSTEM . . . . .	1-16
1. CONNECTION OF DARK CURRENT CONNECTOR . . . . .	1-6	16. STEERING LINKAGE AND SPLIT PINS . . . . .	1-16
<b>BODY . . . . .</b>	<b>1-8</b>	17. UNDER BODY . . . . .	1-17
2. WRAP FILM . . . . .	1-8	<b>BEFORE ROAD TEST . . . . .</b>	<b>1-17</b>
3. WHEEL . . . . .	1-13	18. SEAT ADJUSTERS AND SEATBACK LATCHES . . . . .	1-17
4. EXTERIOR . . . . .	1-13	19. INHIBITOR SWITCH . . . . .	1-17
5. OPERATION OF DOOR LOCKING SYSTEMS AND DOOR HINGES . . . . .	1-13	20. IDLE CONTROL KNOB . . . . .	1-17
6. OPERATION OF DOOR MIRRORS, WINDOWS AND SUNROOF . . . . .	1-14	21. INSTRUMENT PANEL CONTROLS . . . . .	1-17
<b>UNDER HOOD . . . . .</b>	<b>1-14</b>	22. METERS, GAUGES, WARNING LAMPS AND INDICATION LAMPS . . . . .	1-17
7. ENGINE OIL LEVEL . . . . .	1-14	23. AIR CONDITIONER, HEATER AND DEFROSTER SYSTEM . . . . .	1-17
8. BRAKE MASTER CYLINDER FLUID LEVEL . . . . .	1-14	24. WIPERS AND WASHERS . . . . .	1-18
9. CLUTCH MASTER CYLINDER FLUID LEVEL . . . . .	1-15	25. OPERATION OF SERVICE BRAKES AND PARKING BRAKES . . . . .	1-18
10. WASHER FLUID LEVEL . . . . .	1-15	26. CLUTCH OPERATION . . . . .	1-18
11. BATTERY CONDITION AND CONNECTIONS . . . . .	1-15	27. OPERATION OF SEAT BELTS, SHOULDER BELTS AND RETRACTORS . . . . .	1-19
12. POWER STEERING FLUID LEVEL . . . . .	1-15		
13. ELECTRICAL WIRING . . . . .	1-15		

Continued on next page

---

<b>ROAD TEST.....</b>	<b>1-19</b>	38. MANUAL TRANSMISSION AND TRANSFER (4WD) OIL LEVEL.....	<b>1-21</b>
28. ENGINE PERFORMANCE AND EXHAUST GAS .....	1-19	39. AUTOMATIC TRANSMISSION FLUID LEVEL .....	1-22
29. TRANSMISSION IN ALL RANGES....	1-19	40. ENGINE, TRANSMISSION, STEERING GEAR BOX AND DIFFERENTIAL FOR LEAKS .....	1-22
30. BRAKES .....	1-20	41. FRONT AND REAR DIFFERENTIAL OIL LEVELS .....	1-22
31. STEERING CONTROL.....	1-20	42. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER VEHICLE .....	1-22
32. VIBRATION AND RATTLES.....	1-20		
33. ELECTRICAL EQUIPMENT .....	1-20		
<b>AFTER ROAD TEST .....</b>	<b>1-21</b>	<b>FINAL STEPS.....</b>	<b>1-23</b>
34. IDLE SPEED.....	1-21	43. HEADLAMP AIMING.....	1-23
35. IGNITION TIMING.....	1-21	44. EQUIPMENT.....	1-23
36. RADIATOR COOLANT LEVEL.....	1-21	45. EXTERIOR AND INTERIOR .....	1-23
37. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER HOOD .....	1-21	46. OWNER INSTRUCTIONS.....	1-23

## NOTES CONCERNING ENTRIES

M6010100100132

This section describes the details and the inspection methods employed for the pre-delivery inspection of vehicles.


The inspection should be conducted according to the sequence described in the TABLE OF PRE-DELIVERY INSPECTION.

Inspection methods are described following the TABLE OF PRE-DELIVERY INSPECTION.

*NOTE: The spaces for model, C/# (Chassis number), E/# (engine number), aggregate distance travelled in kilometres (miles), date of inspection, name of person conducting the inspection, and body colour must be completed without fail.*

*NOTE: The spaces for place of inspection, and name of owner should be completed as required.*

## TABLE OF PRE-DELIVERY INSPECTION

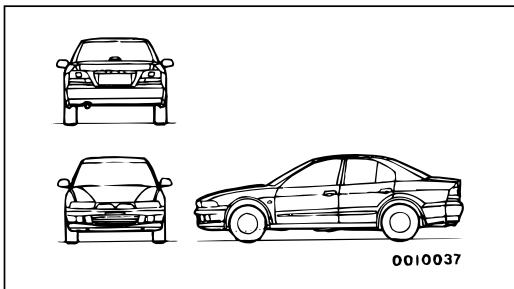

Model	
Chassis number	
Engine number	
Distance Travelled	km
Owner	
Date of inspection	
Place of inspection	
Inspector	
Body colour	

Symbols to be used					
✓	Good	A	Needs adjustment	T	Needs retightening
C	Needs cleaning	L	Needs replenishment of lubricant, water, etc.	X	Needs replenishment of repair

## INSPECTION PROCEDURE

## First Step

1.  Connection of the dark current connector

## Body

2.  Wrap film  
 3.  Exterior  
 4.  Operation of door locking systems and door hinges  
 5.  Operation of door mirrors, windows and sunroof

## Under Hood

6.  Engine oil level  
 7.  Brake master cylinder fluid level  
 8.  Clutch master cylinder fluid level  
 9.  Washer fluid level  
 10.  Battery condition and connections  
 11.  Power steering fluid level  
 12.  Electrical wiring

## Under Vehicle

13.  Tyre and spare tyre pressures  
 14.  Suspension system  
 15.  Steering linkage and split pins  
 16.  Under body

## Before Road Test

17.  Seat adjusters and seat back latches  
 18.  Choke system and inhibitor switch  
 19.  Idle control knob  
 20.  Instrument panel controls  
 21.  Meters, gauges, warning lamps and indication lamps  
 22.  Air conditioning, heater and defroster systems  
 23.  Wipers and washers  
 24.  Operation of service brakes and parking brakes  
 25.  Clutch operation  
 26.  Operation of seat belts, shoulder belts and retractors

## Road Test

27.  Engine performance and exhaust gas  
 28.  Transmission in all ranges  
 29.  Brakes  
 30.  Steering control  
 31.  Vibration and rattles  
 32.  Electrical equipment

## After Road Test

33.  Idle speed  
 34.  Ignition timing  
 35.  Radiator coolant level  
 36.  Hoses, fluid lines and connections located under hood  
 37.  Manual transmission and transfer (4WD) oil level  
 38.  Automatic transmission fluid level  
 39.  Engine, transmission, steering gear box and differential for leaks  
 40.  Front and rear differential oil levels  
 41.  Hoses, fluid lines and connections located under vehicle

## Final Steps

42.  Headlamp aiming  
 43.  Equipment  
 44.  Exterior and interior  
 45.  Owner instructions

## PAINTWORK TERMS

M6010200100098

Term	Definition	Remark
Blister	A raised bubble in the paint (from the base or the undercoat) caused by abnormal moisture. The bubble may contain either water or air.	
Change in tone	The colour tone of the painted surface is not uniform.	Including wrong colour, discolouration and decolouration.
Contact mark	A mark on the painted surface as a result of contact by hands or clothing at the time of paint application.	
Crack	A crack in the painted surface.	Cracks may be either shallow or deep.
Dirt in paintwork	Rough surface resulting from foreign material in the paint or from dust deposited on wet paint during painting or storage.	
Filed or ground traces	Deep scratches in sheet metal surface, resulting from improper use of buffer or sander, are not completely covered, and are visible through paint coating.	
Orange peel	The painted surface has the appearance of an orange peel.	
Peeling	The paint flakes off (partly or over a wide area).	The peeling may be minor, medium, or major.
Pin holes	Tiny holes in the painted surface.	
Runs	A visible trickle of dried paint on the surface.	Either undercoat or top-coat.
Scratches	Scratches on the painted surface.	
Shrink	The painted surface "shrinks", causing wrinkles.	
Smears	Spots of soot or other material deposited on the painted surface.	Including stains and water spots.
Spray mist	The painted surface includes fine particles of other paint.	
Uneven lustre	The lustre of the painted surface is not uniform.	
Uneven metallic dispersion	The metallic dispersion of the painted surface is not uniform.	
Visibly incomplete topcoating	A part of the undercoating visible.	


## FIRST STEP

## 1. CONNECTION OF DARK CURRENT CONNECTOR

<EXCEPT EV, PHEV>  
CONNECTING PROCEDURE**CAUTION**

Turn the ignition switch to the LOCK (OFF) position before connecting storage connector.



M6010300100493

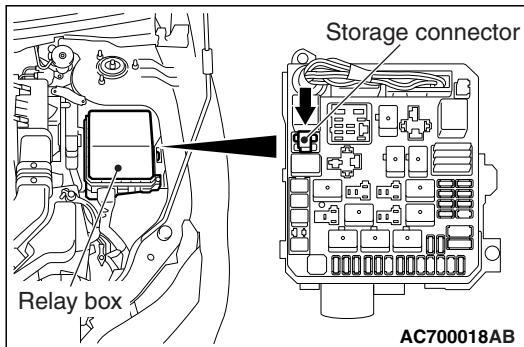

Press down the storage connector.

<EV>  
CONNECTING PROCEDURE**CAUTION**

Turn the electric motor switch to the LOCK (OFF) position before connecting storage connector.

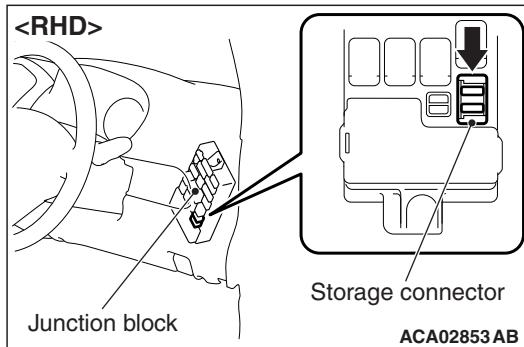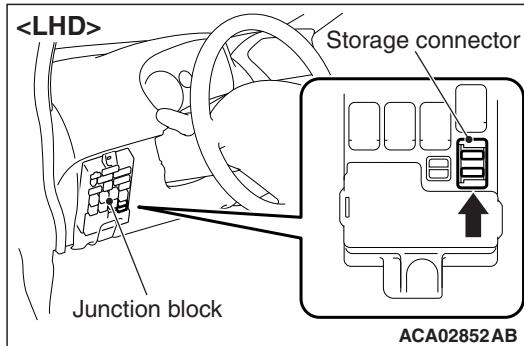

Press down the storage connector. After the connector has been pressed down once, never pull up it.

**CAUTION**

Never disconnect the negative terminal of the auxiliary battery even if a vehicle is stored for long term.


## CONFIRMATION OF PRODUCTION DATE OF MAIN BATTERY

Confirm the production date of the main battery to check whether the elapsed period after the main battery has been produced exceeds an estimated transportation period. If it exceeds, compensate the BMU by referring to the Workshop Manual.

For example:

If the estimated transportation period is three months and the production date of the main battery is April:

- Before July 31: Compensation is not necessary because the elapsed period does not exceed three months
- After August 1: Compensation is necessary because the elapsed period exceeds three months

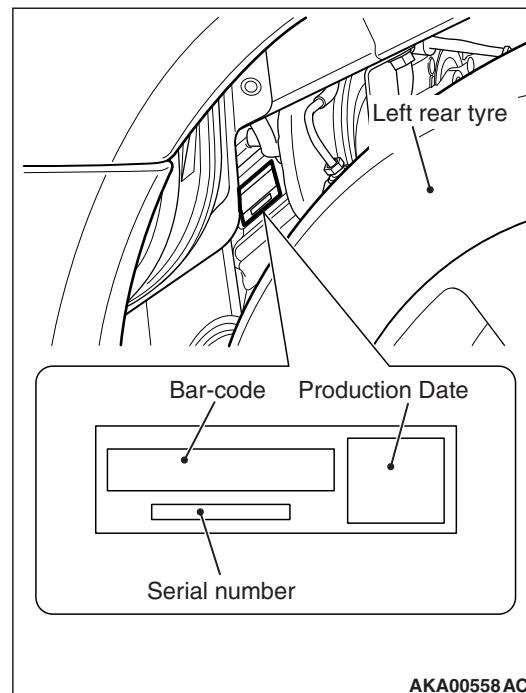


AKA00558 AC

1. Location of production date
  - The production date is labelled on the rear side of the main battery, and can be identified through the rear left wheelhouse.
2. Estimated vehicle transportation period
  - Europe: Three months

## <PHEV> CONNECTING PROCEDURE

### ⚠ CAUTION

Turn the electric motor switch to the LOCK (OFF) position before connecting storage connector.

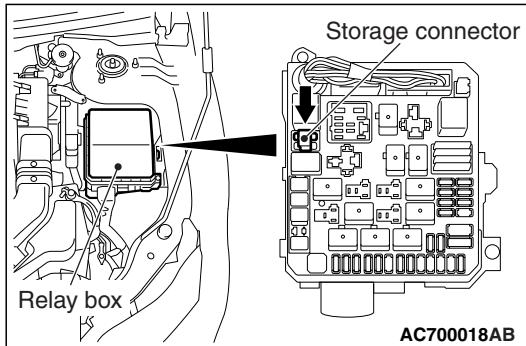

Press down the storage connector. After the connector has been pressed down once, never pull up it.

### ⚠ CAUTION

Never disconnect the negative terminal of the auxiliary battery even if a vehicle is stored for long term. If you turn the electric motor switch "ON" while the storage connector is disconnected, the warning message as "EV SYSTEM SERVICE REQUIRED" with a warning icon appears on the centre display.



It is the normal behaviour and nothing wrong with the vehicle. However, if you connect the storage connector under this condition, the diagnosis code will be stored in the ECU. Consequently you need to delete it before delivering the vehicle to your customer. In order to avoid this unnecessary diagnosis code, please make sure that the storage connector is connected only when the electric motor switch is turned "OFF".


## CONFIRMATION OF PRODUCTION DATE OF MAIN BATTERY

Confirm the production date of the main battery to check whether the elapsed period after the main battery has been produced exceeds an estimated transportation period. If it exceeds, compensate the BMU by referring to the Workshop Manual.

For example:

If the estimated transportation period is three months and the production date of the main battery is April:

- Before July 31: Compensation is not necessary because the elapsed period does not exceed three months
- After August 1: Compensation is necessary because the elapsed period exceeds three months

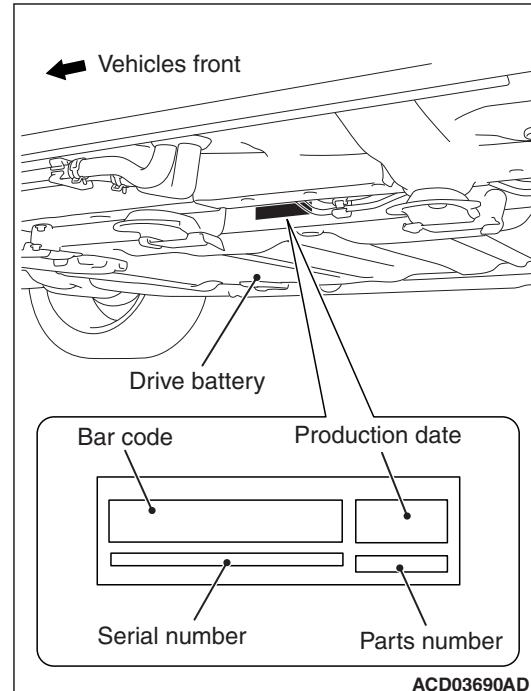

### 1. Location of production date

- The production date is labelled on the rear side of the main battery, and can be identified through the rear left wheelhouse.


### 2. Estimated vehicle transportation period

- Europe: Three months

## BODY

## 2. WRAP FILM

M6010400100241

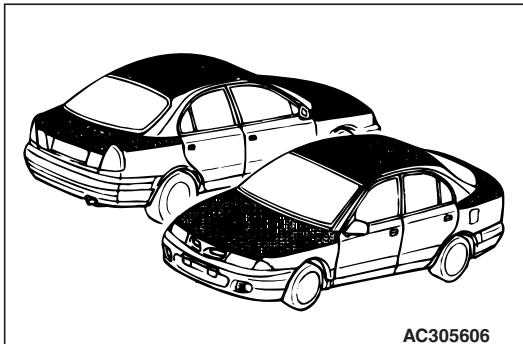


Vehicles may be shipped from the assembly plant to the distributors with a white plastic film or coating (wrap film) applied for the purpose of protecting the painted exterior from environmental elements where the assembly plant and point of embarkation is located.

Distributors are required to remove the wrap film immediately after receiving vehicles, which is necessary for PDI operations. Please refer to the following chart for the procedures.


## REMOVAL PROCEDURE

Flow Chart of Wrap Film Removal

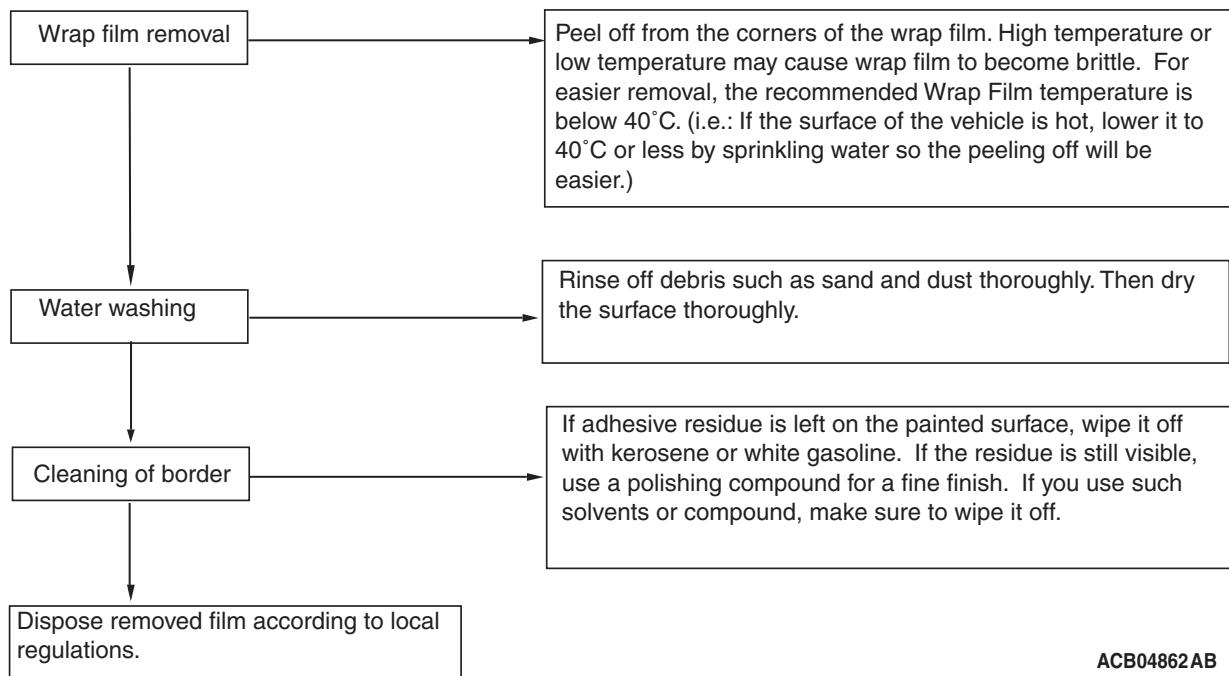

ACB04862AB

## The procedures to re-apply the wrap film

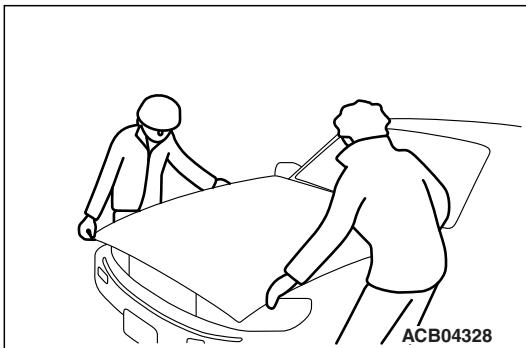

If there is an environment that the vehicles in stock may be exposed to elements such as acid rain, dust particles, it may be recommendable to re-apply the wrap film for the purpose of protecting the painted exterior from the environment. Please refer to the following chart for the procedures to re-apply the wrap film.

Steps.	Process	Tips
1	Remove old wrap film	Follow the "flow chart of removing the wrap film"
2	Prepare the surface to adhere the wrap film	Make sure there is no debris such as sand or dust. Dry the surface thoroughly. The temperature of the area to apply the wrap film should be below 40°C for workability.
3	Re-apply the wrap film	<p>The area to re-apply the wrap film is the same area where the original wrap film was applied.</p> <ol style="list-style-type: none"><li>1. Begin adhering the wrap film from the low part of the vehicle and move upward. Maintain some tension on the wrap film so it will not get wrinkled or trap air bubbles. Although air bubbles it self will not damage the paint, you can avoid trapping air by adhering the wrap film from the centre to the out side of the vehicle. Use a tool such as a squeezer to adhere the wrap film firmly to the vehicle.</li><li>2. For moving panels such as the hood and trunk lid, or portion where parts such as windshield washer nozzles are pointing out, cut the wrap film accordingly, so it will adhere to the paint surface firmly.</li><li>3. If the top side of the film (the side without the adhesive) is left to contact the painted surface, it may damage the paint surface. (for example, become lusterless). The edges of the wrap film and overlapping portions should be firmly adhered to prevent entry of rain under the wrap film.</li><li>4. To prevent colour difference to be recognised between the areas wrapped and unwrapped due to exposure to sunlight etc. during storage, we recommend the boundary of wrapped and unwrapped areas be on a vertical location.</li></ol>

Steps.	Process	Tips
<b>⚠ CAUTION</b>	<ul style="list-style-type: none"> <li>• Be careful not to damage the paint surface while cutting the wrap film.</li> <li>• Once the wrap film is adhered to the vehicle, it should remain on the vehicle for no more than 6 months. If it is necessary, a new wrap film should be adhered to the vehicle following the steps above, based on your inventory management schedule.</li> </ul>	

## Guidelines to give you an estimate of the labour costs

Approximate labour time to adhere wrap film

area to apply wrap film (m <sup>2</sup> )	labour time (min)
3.5 - 5.5	10 - 15
5.5 - 7.0	15 - 20

## How to acquire the wrap film

It will be a direct transaction between O-WELL. Fill the necessary information, contact information,\*1 and ordering quantity,\*2 in the specified portion of the document attached below and send to O-WELL Corporation. The necessary information is stated in the document attached below. O-WELL will give you a quotation in return.



To  
O-WELL CORPORATION

3-6-17, Kitashinagawa, Shinagawa-ku,  
Tokyo 140-0001 Japan  
Phone:81-3-6812-8607  
Telefax:81-3-6812-8614  
E-Mail:y-honda@owell.co.jp  
o-kagami@owell.co.jp  
n-kosaka@owell.co.jp  
please quote us as follows;

**Conditions**

(1) Payment; All amount (100%) should be paid by T/T remittance in advance is required.

Our banking information;

The bank of Tokyo Mitsubishi UFJ, Ltd Kamata Branch  
5-12-6 kamata, Ota-Ku, Tokyo 144-0052 Japan  
SWIFT; BOTKJPJT, Account # 117-1059643  
Accountee; O-WELL Corporation

(2) Delivery; By DHL or any other way by air.

Lead time to delivery; within 10 working days

Expected delivery by; \_\_\_\_\_ to (air-port) \_\_\_\_\_

(3) Trade Term; CPT(C&F) destination air-port in US Dollar

(4) Validity of quotation; by the end of next month

(5) Manufacturer and Specification;

Kansai Paint Co., Ltd. Japan

RAPGARD-F (Guard Film) with adhesive, thickness 45 micron polyolefin resin over 90%

Description	Required quantity	Unit Price	Amount
Width; _____ Length; _____	(Cartons)		CPT US Dollar
Delivery charges			
Country of origin; Japan			
Customs Tariff No. 3919.90 Self-adhesive film	(1)		
Total;G.W.(kg) cartons			

O-WELL Corporation

ACB04863



## RAPGARD-F; Ordering information

Width mm	Length Meter	Weight per roll Kg	Quantity per carton rolls	Carton		Ordering quantity carton
				Dimension W x D x H mm	Weight kg	
50	100	0.3	48	390x347x325	16.2	
70	100	0.4	32	390x347x325	13.5	
100	100	0.6	24	390x347x325	16.2	
150	100	0.8	16	380x337x305	14.8	
200	100	1.1	8	380x337x205	9.4	
250	100	1.4	8	380x337x255	11.8	
300	100	1.7	8	380x337x305	14.3	
600	100	3.3	4	1300x265x135	14.8	
720	100	4.0	2	740x250x125	9.5	
900	200	8.9	1	940x160x160	10.4	
1100	200	10.8	1	1140x160x160	12.3	
1200	200	11.8	1	1240x160x160	13.3	
1300	200	12.8	1	1340x160x160	13.9	

Film Thickness (micron);

film 35  $\mu$  + adhesive 10  $\mu$  = Total 45  $\mu$  (43g/M2)

\*2

RAPGARD Cutter	10 pcs/ctn	230x120x10	75 g/pcs	
Squeezer	10 pcs/ctn	400x250x80	150 g/pcs	


Attention;

1) Distributors have to fill in

2) O-WELL to fill out in

### 3. WHEEL

M6010400500012

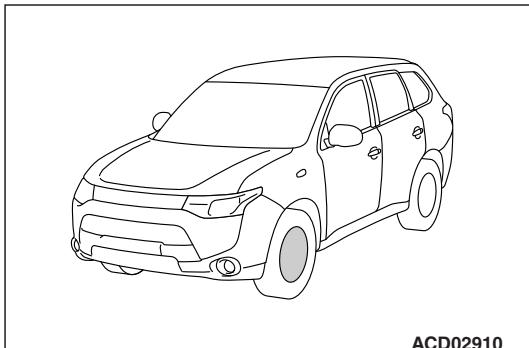

Vehicles may be shipped from the assembly plant to the distributors with a plastic film or cover (non-adhesive type) applied in order to avoid rust of the brake disc. Distributors should remove the plastic film or cover just before delivering the vehicle to your customer. However, the plastic film should be removed in five months after the vehicle is delivered to the distributor. The plastic cover can be kept for more than five months.

#### CAUTION

**Be careful not to damage the paint surface when removing the plastic film or cover.**

### 4. EXTERIOR

M6010400200301

1. Visually inspect the entire exterior.



- (1) Paint condition
- (2) Corrosion, scratches
- (3) Bent edges, dented panels

2. Coated surfaces maintenance

Touch up minor paint chips and flaws.  
(Refer to paintwork terms)


### 5. OPERATION OF DOOR LOCKING SYSTEMS AND DOOR HINGES

M6010400300137

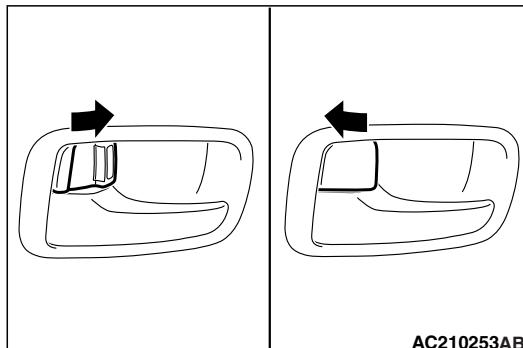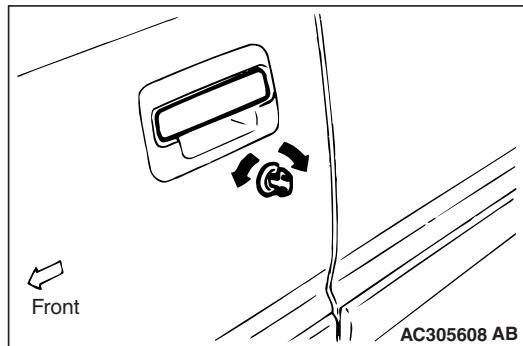

1. Open each door to check the release mechanism and ease of operation.
2. Close the door to check the latch and striker.
3. Open the door, operate the lock lever and close the door to check the lock.
4. Partially close the door to check the open-door detent.
5. Unlock each door with the key to check lock operation.
6. Verify that all doors can be locked by the lock buttons.

*NOTE: Adjust and lubricate the door latches, strikers and locks as required.*

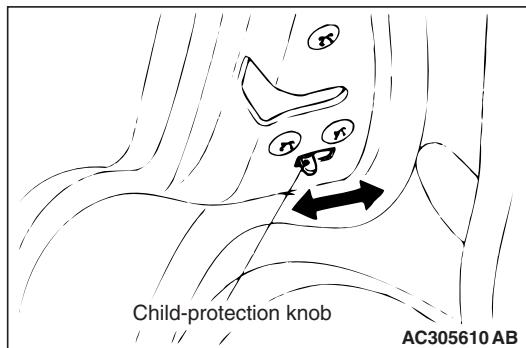

7. Verify that the rear doors can't be opened by the inner door handle when the child protection knob at the end of the door is shifted to the "LOCK" position with the inside lock plunger raised.

*NOTE: Set the lock to the "FREE" position on child protection of both rear doors. (For four door models)*

## 6. OPERATION OF DOOR MIRRORS, WINDOWS AND SUNROOF

M6010400400190

### 1. Door mirrors

Check that the mirror operate properly.

### 2. Door windows

Close all door windows to the fully closed position to check ease of operation.

### 3. Power windows

Check that the door windows operate when the respective switches are operated. Check that when the lock switches are depressed, the respective door windows can no more be opened or closed.

### 4. Slide window

Close the slide window to the fully closed position to check operation.


### 5. Sunroof

Close the sunroof to the fully closed position to check operation.

## UNDER HOOD

### 7. ENGINE OIL LEVEL


M6010500100293

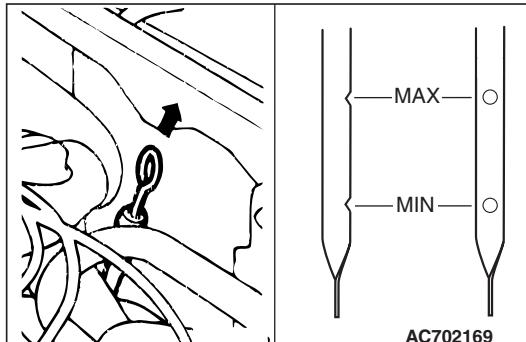

Check that the oil level is between "MAX" and "MIN". If it is at or below "MIN", add the necessary amount of the specified engine oil referring to GROUP 2, Periodic Inspection and Maintenance.

### 8. BRAKE MASTER CYLINDER FLUID LEVEL

M6010500200223

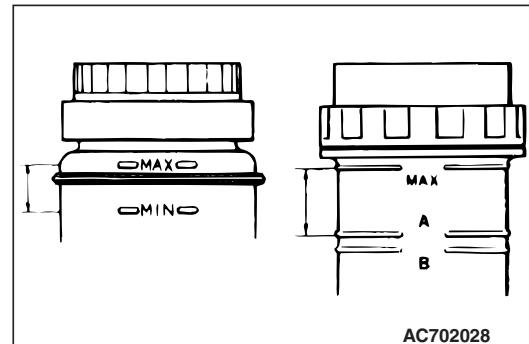


Check the fluid level.

If it is below the "MIN" mark, replenish fresh brake fluid up to the "MAX" mark.

**Specified Brake Fluid: DOT3 or DOT4**

## 9. CLUTCH MASTER CYLINDER FLUID LEVEL

M6010500300026

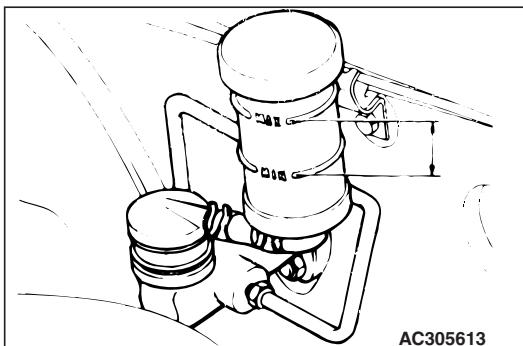


Check the fluid level.

If it is below the "MIN" mark, replenish fresh brake fluid up to the "MAX" mark.

**Specified Brake Fluid: DOT3 or DOT4**

## 10. WASHER FLUID LEVEL

M6010500400186

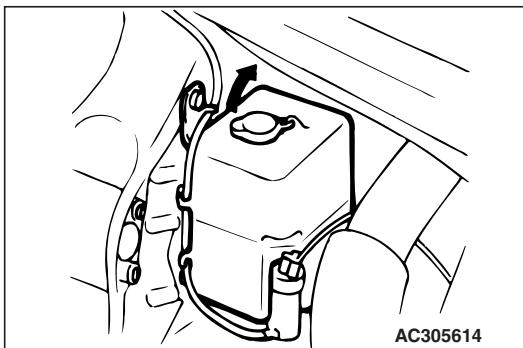


Check the fluid level; if it is low, replenish the washer fluid.

1. Windshield washer reservoir
2. Rear window washer reservoir

## 11. BATTERY CONDITION AND CONNECTIONS

M6010500500042

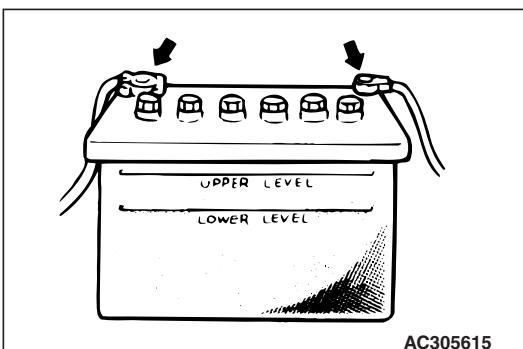


Inspect the battery connections. Verify that they are tightened.

**NOTE: Do not wipe the lubricant from the battery posts and cable clamps.**

## 12. POWER STEERING FLUID LEVEL

M6010500600072

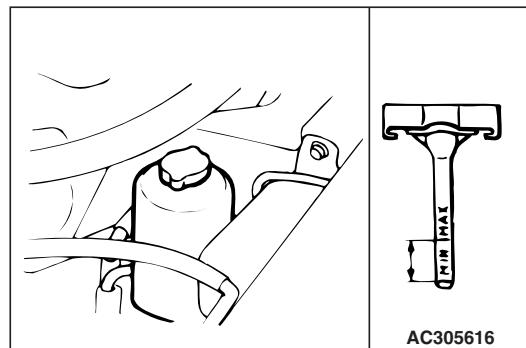


1. Check that the fluid level is between "MAX" and "MIN".
2. If the fluid is added, start the engine and turn the steering wheel from stop to stop several times to expel air from the system.

**Specified gear oil: Automatic transmission fluid DEXRON III or DEXRON II**

## 13. ELECTRICAL WIRING

M6010500700024

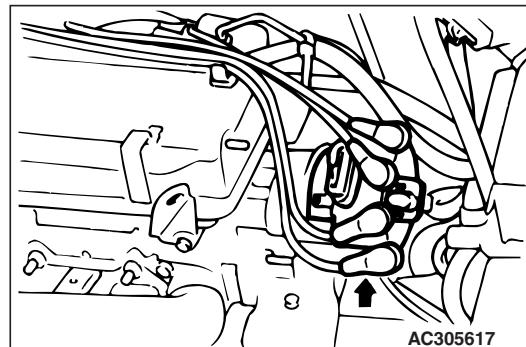


1. Each electrical wiring harness and connector
  - (1) Check each harness to be correctly routed and securely clipped.
  - (2) Confirm that all connections are tight.
2. Ignition cable
 

Be sure that all ignition cables are firmly attached to the spark plugs, distributor cap (or crank angle sensor) and ignition coil.

## UNDER VEHICLE

## 14. TYRE AND SPARE TYRE PRESSURES

M6010600100041

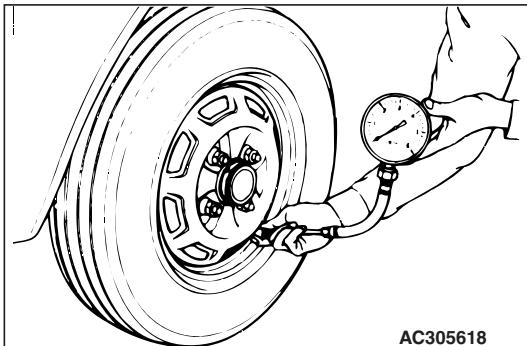

## 1. Tyre specification

Check the correct tyre specification.

## 2. Tyre pressures

Adjust each tyre pressure.

*NOTE: Recommended pressure is shown on the tyre pressure label.*


## 3. Valve stem extensions

Verify that the valve stem extensions are installed where necessary.

## 4. Install the wheel covers, wheel rings and hub caps.

## 15. SUSPENSION SYSTEM

M6010600200178

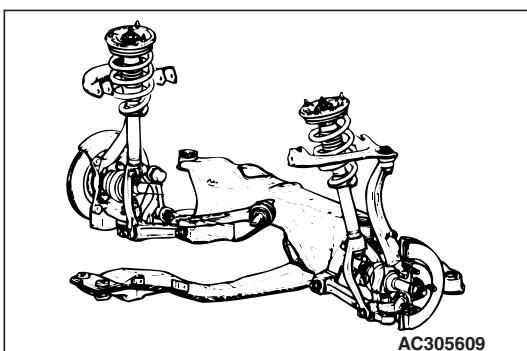

Check to be sure that each installation bolt and nut is tightened. If split pins are used, make sure that they are properly installed.

## 1. Lower arm, Upper arm


## 2. Stabilizer bar

## 3. Strut assembly

## REMOVE FRONT SPRING RESTRAINTS

## CAUTION


It is very important that these restraints must be removed during pre-delivery inspection. Failure to do so could cause ride and handling complaints.

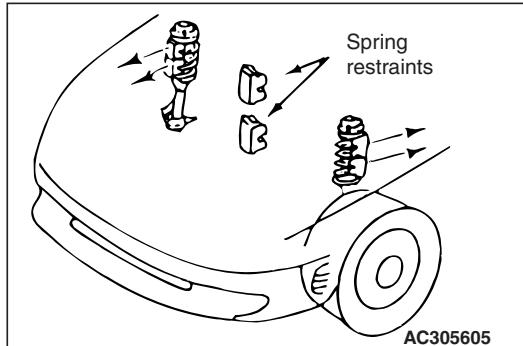

With the vehicle correctly positioned on the sub-frame contact points, and the suspension fully extended, remove the rubber restraints from the front springs.

## 16. STEERING LINKAGE AND SPLIT PINS

M6010600300023

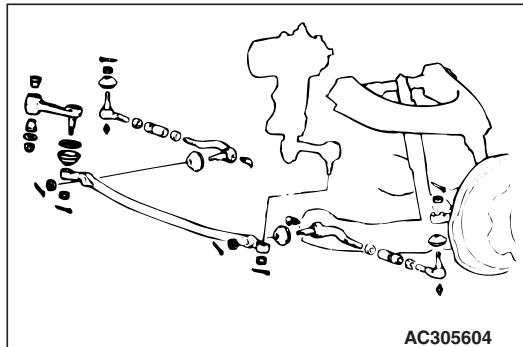

1. Steering linkage retaining nuts and split pins  
Check visually and by feel that the steering linkage retaining nuts are correctly tightened and the split pins are correctly installed.

## 2. Tie rods and relay rod

Check that the tie rods and relay rod of the steering linkage are not bent and that the tie rod end lock nuts are securely tightened.

## 3. Steering components

(1) Check that each of the steering components is tightened.

(2) Check the tie rod end, nuts and split pins for proper installation.

(3) Check the condition of bellows-type dust seals.

4. Split pins

Check the front axle nuts and rear wheel spindle nuts for split pins.

17. UNDER BODY


M6010600400020

Check under body and under body coating for damage.

## BEFORE ROAD TEST

**18. SEAT ADJUSTERS AND SEATBACK LATCHES**

M6010700100082

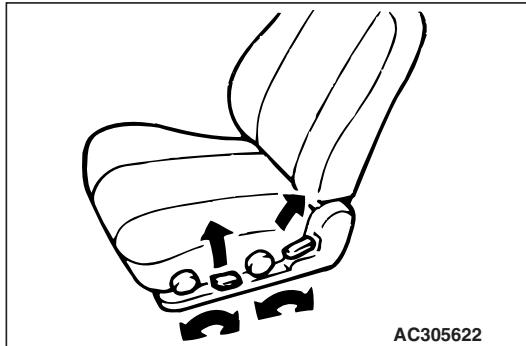

Check the operation of the various parts of the seats.

1. Mechanical adjusters of the seats
2. Operation of the latch for tilting the seatbacks forward and backward.

**19. INHIBITOR SWITCH**

M6010701100029

On models with an automatic transmission, be sure the engine starts in both "P" and "N" position, and does not start in other positions.

**20. IDLE CONTROL KNOB**

M6010700300020

Verify that the diesel engine revolution increases when the idle control knob is pulled out.

**21. INSTRUMENT PANEL CONTROLS**


M6010700400083

Check the operation of the following

1. Horn
2. Headlamps
3. Exterior and interior lamps
4. Instrument panel lamps
5. Instrument brightness control

**22. METERS, GAUGES, WARNING LAMPS AND INDICATION LAMPS**

M6010700500024

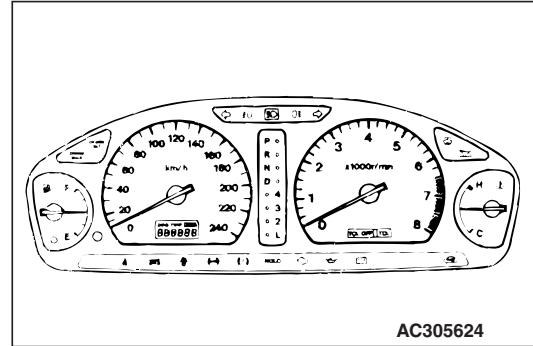


1. Check the meters and gauges are functioning properly.
2. Check each indicator lamp and warning lamp functions properly.

**23. AIR CONDITIONER, HEATER AND DEFROSTER SYSTEM**


M6010700600128

Check the systems for proper operation.

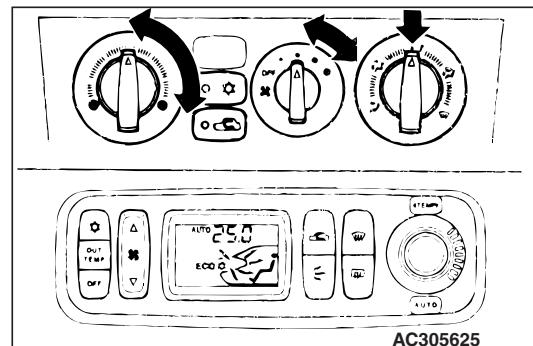

1. Air conditioner

- (1) Operate the air conditioner system.
- (2) Operate the air conditioner light.
- (3) Operate the control lever in all ranges.
- (4) Operate the blower motor switch in all ranges.

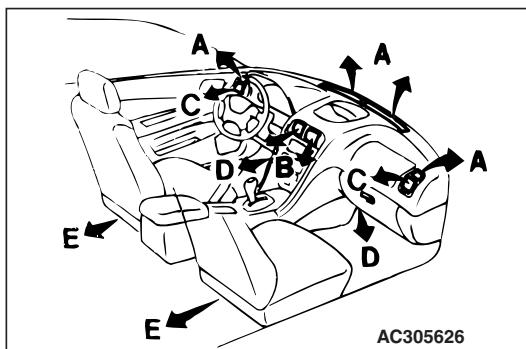


## 2. Heater and defroster

- (1) After the engine has warmed up, turn on the heater.
- (2) Operate the blower motor switch in all ranges.
- (3) Move the control to "Defrost" position.
  - A: From front and side defroster
  - B: From centre ventilators
  - C: From side ventilators
  - D: From under the instrument panel
  - E: From under the front seat (some models only)

## 24. WIPERS AND WASHERS

M6010700700028

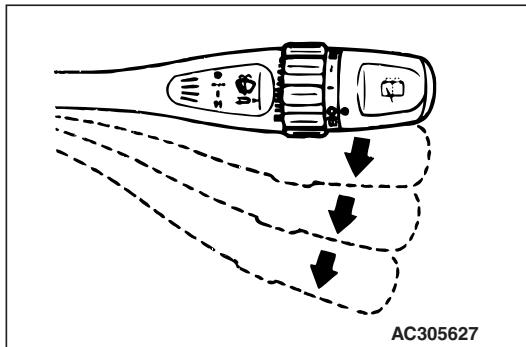

## 1. Front wiper and washer


- (1) Check operation of the front wipers in all ranges.
- (2) Check the aim of the front washer stream.
- (3) Check the wiper blade-stop positions.
- (4) Verify that the interval between cycles of wiping is shifted when timer knob is turned to any position.
- (5) Verify that the front wipers function by operating the washer switch.

## 2. Rear wiper and washer

- (1) Check the operation of the rear wiper.
- (2) Check the aim of the rear washer stream.
- (3) Check the wiper blade-stop positions.


## 25. OPERATION OF SERVICE BRAKES AND PARKING BRAKES

M6010700800382

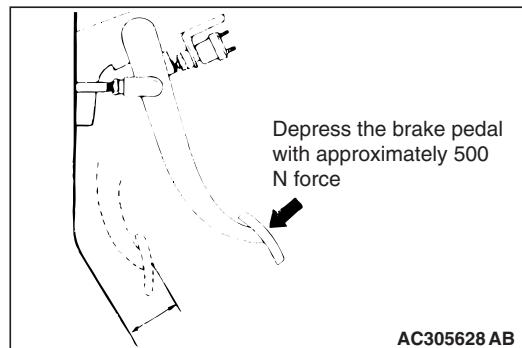

## 1. Service brakes

- (1) Check the clearance between the brake pedal and the floorboard when the brake pedal is depressed.

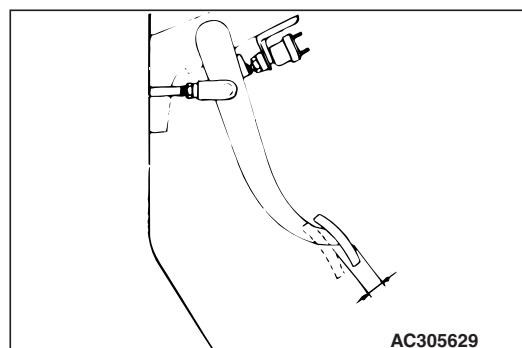

- (2) Verify correct brake pedal free play.

*NOTE: For inspection and adjustment of the service brake, refer to GROUP 2, Periodic Inspection and Maintenance.*


## 2. Parking brake

Check the parking brake drag and lever travel.

*NOTE: For inspection and adjustment of the parking brake, refer to GROUP 2, Periodic Inspection and Maintenance.*


## 26. CLUTCH OPERATION

M6010700900282

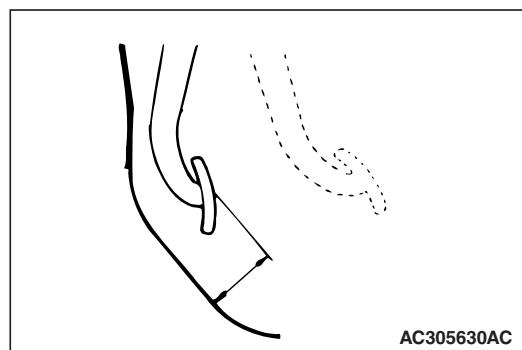

1. Check the clutch operation in all driving ranges.

2. Check the pedal to floorboard clearance when the clutch is just disengaged.

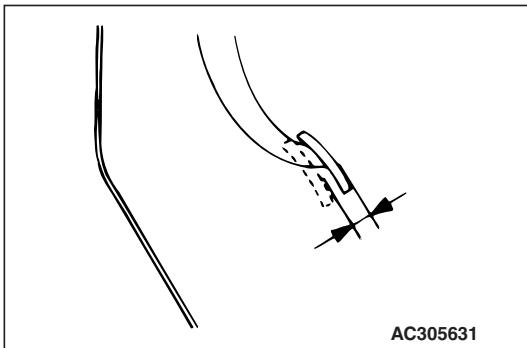


3. Verify correct clutch pedal free play.

*NOTE: For inspection and adjustment of the clutch pedal, refer to GROUP 2, Periodic Inspection and Maintenance.*

## 27. OPERATION OF SEAT BELTS, SHOULDER BELTS AND RETRACTORS

M6010701000022

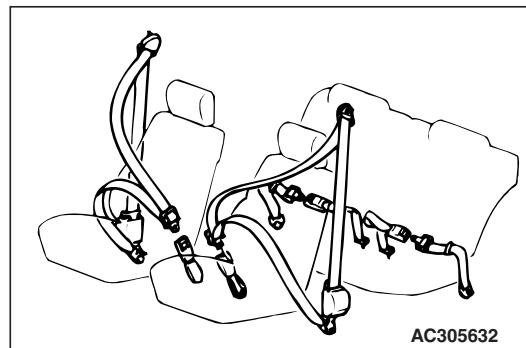


1. Verify that the seat belt warning lamp operates properly.
2. Check all seat belts and harnesses to assure that they connect and hold properly.
3. Lean forward to check that the shoulder harnesses allow movement.
4. Check the condition of the belts and anchors.
5. Check for proper seat belt retraction.

## ROAD TEST

### 28. ENGINE PERFORMANCE AND EXHAUST GAS

M6010800100023

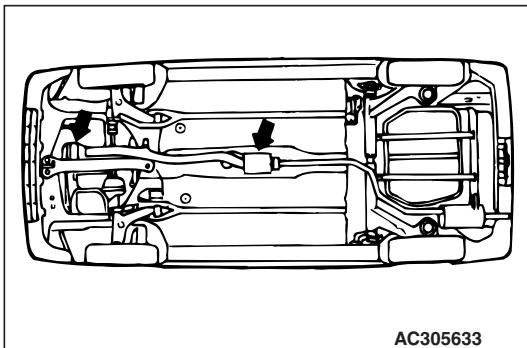

1. Engine performance


Check the engine for proper performance and accelerator pedal for smooth operation.

2. Exhaust system

- (1) Check the exhaust system components for gas leaks.
- (2) Verify that no black smoking is emitted from the end of the exhaust pipe (diesel-powered vehicles).


### 29. TRANSMISSION IN ALL RANGES

M6010800200020

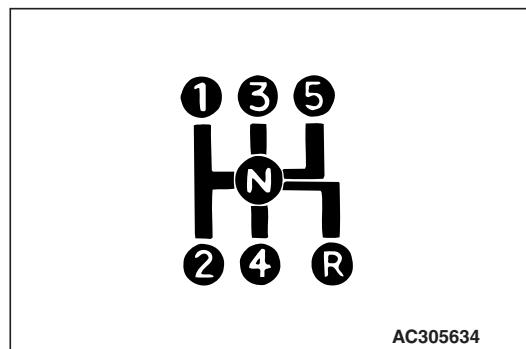

1. Manual transmission

Check the transmission in all forward ranges and in reverse.

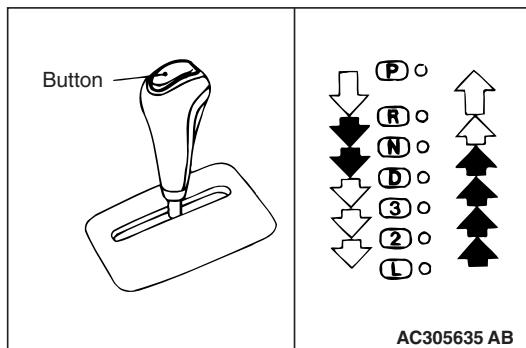

## 2. Automatic transmission

- (1) Make sure shift indicator lines up properly in all ranges.
- (2) Depress the accelerator completely to check that the manual kickdown is operating correctly.
- (3) Stop the vehicle on a steep incline.  
Put the automatic transmission in "P" position and slowly release the service brakes to see if "P" position lock holds. If it does not hold, the transmission requires further service.

## 30. BRAKES

M6010800300027

### 1. Service Brake


Put the vehicle in gear and apply the brakes while the vehicle is in motion. Be sure brake operation is smooth and positive.

### 2. Parking Brake

- (1) Stop the vehicle on a steep incline.  
With the service brakes firmly applied, place the transmission in "N" position, and set the parking brakes.
- (2) Slowly release the service brakes to see if the parking brakes will hold.

## 31. STEERING CONTROL

M6010800400024

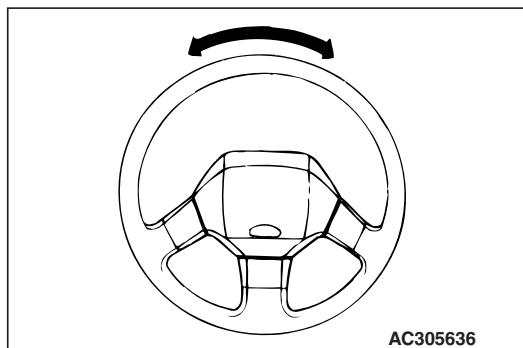

1. Check for excessive play or looseness.
2. Check the steering wheel centre.


## 32. VIBRATION AND RATTLES

M6010800500021

1. Locate squeaks, rattles and unusual vibrations.
2. Verify that no noise occurs from the engine, transmission, axle and body.

## 33. ELECTRICAL EQUIPMENT

M6010800600028

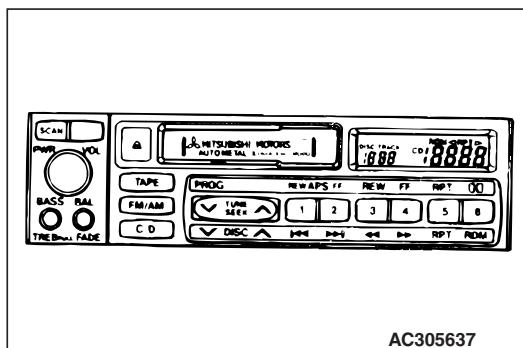

### 1. Radio

Tune the radio to a local broadcasting station and check the following:

- (1) Operate the volume, tone, balance and fader controls, etc.
- (2) Pull out the pushbuttons, dial another station and set each pushbuttons.
- (3) Operate the AM/FM switch.

### 2. Tape player

Insert a cassette tape in the tape player and check as follows:

- (1) Check the operation of the tape feeder and rewind.
- (2) Check the ejection.
- (3) Check the operation of volume, tone, balance and fader controls, etc.

## AFTER ROAD TEST

## 34. IDLE SPEED


Check the engine idle speed.

*NOTE: For specific idle speed adjustment procedure, refer to GROUP 2, Periodic Inspection and Maintenance.*

M6010900100172

## 35. IGNITION TIMING

M6010900200179

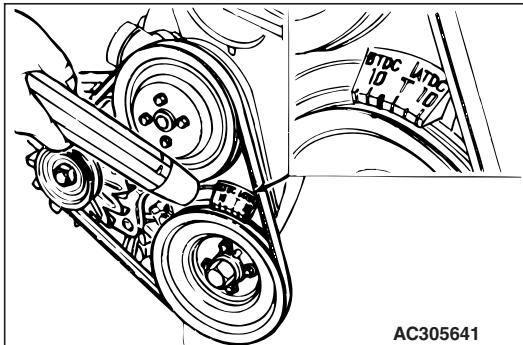

AC305641

Check the ignition timing. Except MPI vehicles with crankshaft-mounted crankshaft angle sensor.

*NOTE: For the inspection and adjustment of the ignition timing, refer to GROUP 2, Periodic Inspection and Maintenance.*


## 36. RADIATOR COOLANT LEVEL

M6010900300154

**CAUTION**

**Do not remove the radiator cap while the cooling system is under pressure.**

**When removing the radiator cap, be careful of steam and boiling water. Add coolant only to the reserve tank if it is required.**

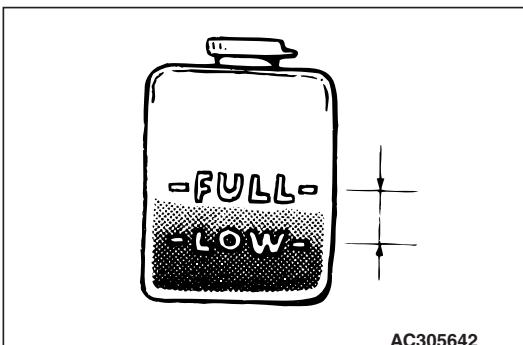

AC305642


1. Check that the coolant level in the reserve tank is at or above "LOW" mark at normal engine operating temperature. And check cooling system for leaks.
2. Check that the coolant concentration is 30% to 60%.

## 37. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER HOOD

M6010900400203

**CAUTION**

**Remember that the air conditioner system is under pressure.**

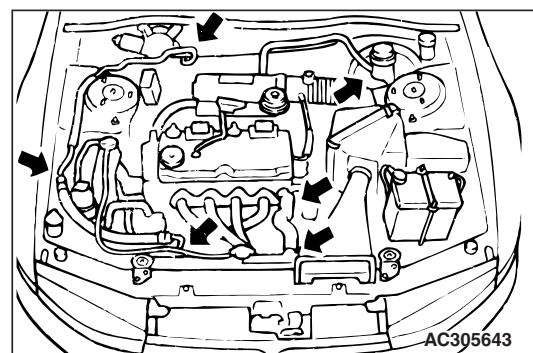


AC305643

1. Check all brake, fuel, power steering and air conditioner lines and connections; verify proper routing, check connections for leaks, tighten loose connector as required.
2. Inspect routing and connections of all vacuum, and radiator and heater houses.

*NOTE: Keep in mind that an oily residue around an air conditioner connector does not necessarily indicate a leak. Oil is used to lubricate fittings during assembly. Be sure lines are not twisted or kinked.*

## 38. MANUAL TRANSMISSION AND TRANSFER (4WD) OIL LEVEL

M6010900500211

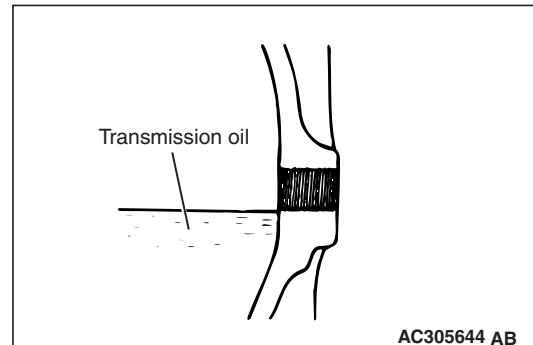


1. Remove the filler plug.
2. Check the oil level. If the oil level is at or slightly below the filler hole, it is in satisfactory condition.
3. If the level is low, replenish the transmission and transfer case with fresh oil by using a lubricator.

*NOTE: For the specified oil, refer to GROUP 2, Periodic Inspection and Maintenance.*

### 39. AUTOMATIC TRANSMISSION FLUID LEVEL

M6010900600230

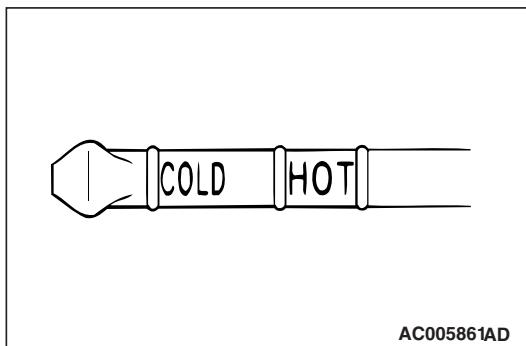

1. Remove the dipstick and check the fluid level.
2. Fluid level is okay if it is in the specified range as illustration at normal engine operating temperature.
3. If the level is below the lower notch, replenish fluid until the level reaches the upper notch.

*NOTE: For the specified automatic transmission fluid, refer to GROUP 2, Periodic Inspection and Maintenance.*

### 40. ENGINE, TRANSMISSION, STEERING GEAR BOX AND DIFFERENTIAL FOR LEAKS


M6010900700055

Check the engine, transmission, steering gear box and differential for oil leaks.

### 41. FRONT AND REAR DIFFERENTIAL OIL LEVELS

M6010900800342

1. Remove the filler plug.
2. Check the oil level. If the oil level is at or slightly below the filler hole, it is in satisfactory condition.

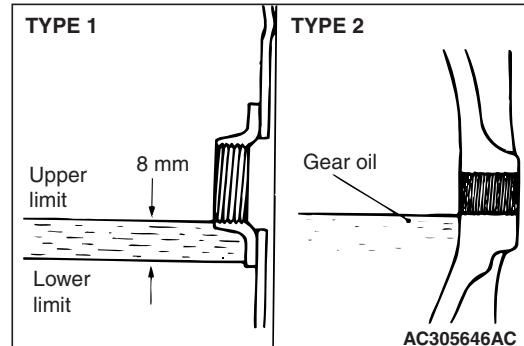


Type 1 only: Remove the filler plug, and check the gear oil level. Check that gear oil level is not 8 mm below the bottom of filler plug hole.

3. If the level is low, replenish the front and/or rear differential with fresh oil by using a lubricator.

*NOTE: For the specified oil, refer to GROUP 2, Periodic Inspection and Maintenance.*

### 42. HOSES, FLUID LINES AND CONNECTIONS LOCATED UNDER VEHICLE

M6010901000145

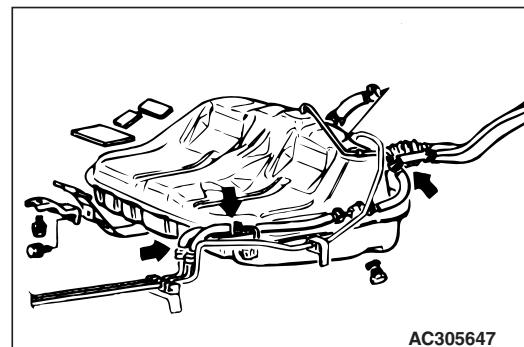


1. Check all hoses, fluid lines and connections for leaks.
2. Check all hoses and fluid lines for proper routing away from sharp edges and moving components.

## FINAL STEPS

### 43. HEADLAMP AIMING

M6011000100116

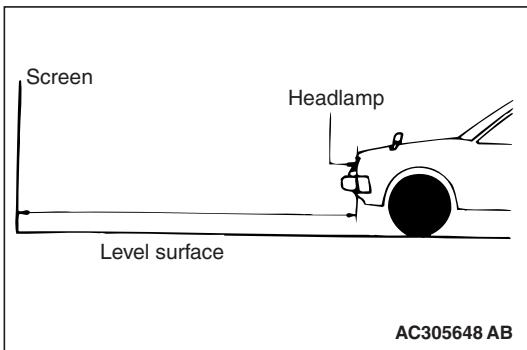


Check condition for headlamp aiming.

*NOTE: For headlamp aiming procedures, refer to the Workshop Manual for that model.*

### 44. EQUIPMENT

M6011000200209

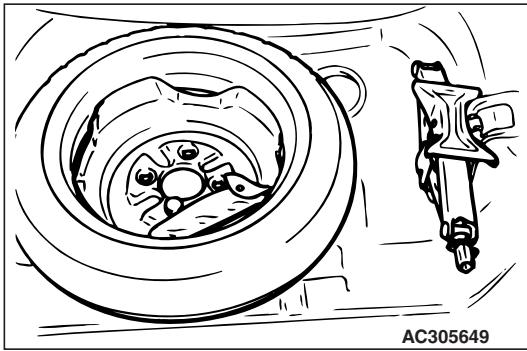

Check the installation of the various equipment.

1. Trunk room floor mats
2. Spare tyre
3. Jack, jack handle and tool set

### 45. EXTERIOR AND INTERIOR

M6011000300262

Finally check and clean the exterior and interior.

1. Wash the vehicle to remove all traces of road grime and other dirt on the vehicle as a result of new vehicle preparations.
2. Clean exterior and interior glass surface.
3. Remove all protective covers.
4. Remove undercoat overspray, excess window sealer, and excess weatherstrip adhesive.
5. Verify that the secondary key can not unlock the glove box and tailgate/boot lid (if so equipped).
6. Remove shipping and inspection stickers.

### 46. OWNER INSTRUCTIONS

M6011000400054

1. Verify that the owner's manual and service booklet is in the glove box.
2. Place the spare keys in envelope in the glove box before delivery.

---

**NOTES**

## GROUP 2

# PERIODIC INSPECTION AND MAINTENANCE

## CONTENTS

<b>PERIODIC INSPECTION AND MAINTENANCE SCHEDULE .....</b>	<b>2-3</b>	A8. ENGINE COOLANT CHANGE .....	<b>2-25</b>
<b>OPERATIONS INSIDE THE ENGINE COMPARTMENT .....</b>	<b>2-13</b>	A9. CHECK AIR CLEANER ELEMENT FOR CLOGGING AND DAMAGE .....	<b>2-29</b>
A1. CHECK DRIVE BELT FOR CRACKS, FRAYING, WEAR, AND ADJUST ITS TENSION .....	2-13	A10. REPLACE AIR CLEANER ELEMENT .....	<b>2-29</b>
A2. CHECK INTAKE AIR HOSE FOR DAMAGE (VEHICLES WITH A TURBOCHARGER) .....	2-17	A11. CHECK FLUID LEVEL IN BRAKE RESERVOIR AND CLUTCH RESERVOIR .....	<b>2-29</b>
A3. CHECK OPERATION OF CRANKCASE EMISSION CONTROL SYSTEM .....	2-17	A12. CHANGE BRAKE FLUID .....	<b>2-29</b>
A4. REPLACE SPARK PLUGS .....	2-18	A13. CHECK BATTERY CONDITION .....	<b>2-30</b>
A5. CHECK VALVE CLEARANCE (EXCEPT VEHICLES WITH AUTO-LASH ADJUSTER) .....	2-18	A14. REPLACE FUEL FILTER .....	<b>2-31</b>
A6. CHECK RADIATOR HOSES FOR DAMAGE AND PROPER CONNECTION .....	2-25	A15. CHECK HIGH VOLTAGE CABLE FOR DAMAGE AND PROPER CONNECTION .....	<b>2-34</b>
A7. CHECK ENGINE COOLANT LEVEL IN RESERVOIR .....	2-25	A16. CHECK FRONT MOTOR FOR COOLING OIL LEAKAGE .....	<b>2-37</b>
		A17. CHECK REAR MOTOR COOLANT LEVEL IN RESERVOIR .....	<b>2-37</b>
		A18. CHANGE REAR MOTOR COOLANT .....	<b>2-37</b>

Continued on next page

<b>OPERATIONS UNDER THE VEHICLE .....</b>	<b>2-40</b>	<b>OPERATIONS INSIDE THE VEHICLE.....</b>	<b>2-47</b>
B1. CHECK SUSPENSION SYSTEM FOR DAMAGE AND LOOSENESS .....	2-40	C1. CHECK BRAKE PEDAL AND CLUTCH PEDAL FOR FREE PLAY .....	2-47
B2. CHECK SUSPENSION ARM BALL JOINTS FOR PLAY, AND DUST COVERS FOR DAMAGE .....	2-41	C2. CHECK PARKING BRAKE LEVER STROKE AND PLAY .....	2-49
B3. CHECK DRIVESHAFT BOOTS FOR DAMAGE .....	2-41	C3. REPLACE AIR PURIFIER FILTER .....	2-50
B4. CHECK STEERING LINKAGE FOR DAMAGE AND LOOSE CONNECTIONS (INCLUDING SEALS AND BOOTS).....	2-41	<b>OPERATIONS OUTSIDE THE VEHICLE.....</b>	<b>2-50</b>
B5. CHECK MANUAL TRANSMISSION FOR OIL LEAKAGE (IN CASE OF LEAKAGE, CHECK THE OIL LEVEL).....	2-41	D1. CHECK WHEEL ALIGNMENT .....	2-50
B6. CHECK TRANSFER FOR OIL LEAKAGE (IN CASE OF LEAKAGE, CHECK THE OIL LEVEL) .....	2-42	D2. CHECK FRONT AND REAR WHEEL BEARINGS FOR PLAY .....	2-52
B7. CHANGE GEAR OIL IN MANUAL TRANSMISSION.....	2-43	D3. CHECK BRAKE HOSES AND PIPES FOR LEAKAGE .....	2-52
B8. CHANGE GEAR OIL IN TRANSFER.....	2-43	D4. CHECK BRAKE PADS AND DISCS FOR WEAR.....	2-53
B9. CHECK REAR DIFFERENTIAL FOR OIL LEAKAGE (IN CASE OF LEAKAGE, CHECK THE OIL LEVEL).....	2-44	D5. CHECK FUEL HOSES AND PIPES FOR LEAKAGE OR DETERIORATION.....	2-55
B10. CHANGE GEAR OIL IN REAR DIFFERENTIAL .....	2-44	<b>OPERATIONS AFTER ENGINE IS WARMED UP .....</b>	<b>2-55</b>
B11. CHECK EXHAUST PIPE CONNECTIONS FOR GAS LEAKAGE, AND CHECK PIPE INSTALLATION.....	2-44	E1. CHECK FLUID LEVEL IN AUTOMATIC TRANSMISSION AND CVT .....	2-55
B12. CHECK FRONT TRANSAXLE FOR OIL LEAKAGE (In case of leakage, check the oil level).....	2-45	E2. CHANGE AUTOMATIC TRANSMISSION FLUID AND CVT FLUID .....	2-56
B13. CHECK REAR TRANSAXLE FOR OIL LEAKAGE (In case of leakage, check the oil level).....	2-45	E3. CHANGE ENGINE OIL .....	2-59
B14. CHANGE FRONT TRANSAXLE OIL .....	2-46	E4. REPLACE ENGINE OIL FILTER .....	2-60
B15. CHANGE REAR TRANSAXLE OIL .....	2-46	E5. CHECK EXHAUST GAS RECIRCULATION (EGR) SYSTEM .....	2-61
		E6. CHECK ENGINE IDLING SPEED.....	2-62
		E7. CHECK CO CONCENTRATION.....	2-63
		<b>OTHERS .....</b>	<b>2-65</b>
		F1. CHECK BODY CONDITION FOR DAMAGE .....	2-65
		F2. CHECK THE COMMON RAIL ENGINE (SMALL INJECTION QUANTITY LEARNING) .....	2-65
		F3. ROAD TEST .....	2-65

# **PERIODIC INSPECTION AND MAINTENANCE SCHEDULE**

M6020100102344

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first.

## **VEHICLES FOR EUROPE <PETROL-POWERED VEHICLES>**

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
<b>OPERATIONS INSIDE THE ENGINE COMPARTMENT</b>				
A1	Check drive belt for cracks, fraying, wear, and adjust its tension	Inspection	Every 40,000 km or every 2 years	
A4	Replace spark plugs	Iridium-tipped type	Replace	Every 100,000 km
A5	Check valve clearance*1 (except vehicles with auto-lash adjuster)	Inspection	4B1 engine	Every 100,000 km
			4J1 engine	Every 60,000 km
A6	Check radiator hoses for damage and proper connection	Inspection	Every 40,000 km or every 2 years	
A7	Check engine coolant level in reservoir	Inspection	Every 40,000 km or every 2 years	
A8	Change engine coolant	Change	First 180,000 km or 9 years, thereafter every 120,000 km or 6 years	
A9	Check air cleaner element for clogging and damage	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
A10	Replace air cleaner element	Replace	Normal usage	Every 60,000 km or every 3 years
			Severe usage	More frequently
A11	Check fluid level in brake reservoir and clutch reservoir	Inspection	Every 20,000 km or every 12 months	
A12	Change brake fluid	Change	Every 40,000 km or every 2 years	
A13	Check battery condition	Inspection	Every 20,000 km or every 12 months	
A14	Replace fuel filter	Replace	Every 160,000 km or every 10 years	
<b>OPERATIONS UNDER THE VEHICLE</b>				
B1	Check suspension system for damage and looseness	Inspection	Every 20,000 km or every 12 months	
B2	Check suspension arm ball joints for play, and dust covers for damage	Inspection	Every 20,000 km or every 12 months	
B3	Check driveshaft boots for damage	Inspection	Normal usage	Every 40,000 km or every 2 years
			Severe usage	Every 10,000 km

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
B4	Check steering linkage for damage and loose connections (including seals and boots)	Inspection	Every 40,000 km or every 2 years	
B5	Check manual transmission for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B6	Check transfer for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B7	Change gear oil in manual transmission	Change	Normal usage	Every 200,000 km
			Severe usage	Every 100,000 km
B8	Change gear oil in transfer	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
B9	Check rear differential for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B10	Change gear oil in rear differential	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
B11	Check exhaust pipe connections for gas leakage, and check pipe installation	Inspection	Every 40,000 km or every 2 years	
<b>OPERATIONS INSIDE THE VEHICLE</b>				
C1	Check brake pedal and clutch pedal for free play	Inspection	Every 20,000 km or every 12 months	
C2	Check parking brake lever stroke and play	Inspection	Every 20,000 km or every 12 months	
C3	Replace air purifier filter	Replace	Normal usage	Every 20,000 km or every 12 months
			Severe usage	More frequently
<b>OPERATIONS OUTSIDE THE VEHICLE</b>				
D1	Check wheel alignment	Inspection	Every 20,000 km or every 12 months	
D2	Check front and rear wheel bearings for play	Inspection	Every 60,000 km or every 3 years	
D3	Check brake hoses and pipes for leakage	Inspection	Every 40,000 km or every 2 years	
D4	Check brake pads and discs for wear	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
D5	Check fuel hoses and pipes for leakage or deterioration	Inspection	Every 40,000 km or every 2 years	

**PERIODIC INSPECTION AND MAINTENANCE  
PERIODIC INSPECTION AND MAINTENANCE SCHEDULE**

**2-5**

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>				
E1	Check fluid level in automatic transmission and CVT	Inspection	Every 20,000 km or every 12 months	
E2	Change automatic transmission fluid and CVT fluid	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
E3	Change engine oil	Change	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km
E4	Replace engine oil filter	Replace	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km
<b>OTHERS</b>				
F1	Check body condition for damage	Inspection	Every year	
F3	Road test	Inspection	Every 20,000 km or every 12 months	

**< DIESEL-POWERED VEHICLES >**

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
<b>OPERATIONS INSIDE THE ENGINE COMPARTMENT</b>				
A1	Check drive belt for cracks, fraying, wear, and adjust its tension	Inspection	Every 40,000 km or every 2 years	
A2	Check intake air hose for damage (vehicles with turbocharger)	Inspection	Every 40,000 km or every 2 years	
A5	Check valve clearance*1 (except vehicles with auto-lash adjuster)	Inspection	Every 40,000km	
A6	Check radiator hoses for damage and proper connection	Inspection	Every 20,000 km or every 12 months	
A7	Check engine coolant level in reservoir	Inspection	Every 20,000 km or every 12 months	
A8	Change engine coolant	Change	First 180,000 km or 9 years, thereafter every 120,000 km or 6 years	
A9	Check air cleaner element for clogging and damage	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
A10	Replace air cleaner element	Replace	Normal usage	Every 40,000 km or every 2 years
			Severe usage	More frequently

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
A11	Check fluid level in brake reservoir and clutch reservoir	Inspection	Every 20,000 km or every 12 months	
A12	Change brake fluid	Change	Every 40,000 km or every 2 years	
A13	Check battery condition	Inspection	Every 20,000 km or every 12 months	
A14	Replace fuel filter	Replace	Every 60,000 km or every 3 years	
<b>OPERATIONS UNDER THE VEHICLE</b>				
B1	Check suspension system for damage and looseness	Inspection	Every 20,000 km or every 12 months	
B2	Check suspension arm ball joints for play, and dust covers for damage	Inspection	Every 20,000 km or every 12 months	
B3	Check driveshaft boots for damage	Inspection	Normal usage	Every 40,000 km or every 2 years
			Severe usage	Every 10,000 km
B4	Check steering linkage for damage and loose connections (including seals and boots)	Inspection	Every 40,000 km or every 2 years	
B5	Check manual transmission for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B6	Check transfer for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B7	Change gear oil in manual transmission	Change	Normal usage	Every 200,000 km
			Severe usage	Every 100,000 km
B8	Change gear oil in transfer	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
B9	Check rear differential for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B10	Change gear oil in rear differential	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
B11	Check exhaust pipe connections for gas leakage, and check pipe installation	Inspection	Every 40,000 km or every 2 years	

**PERIODIC INSPECTION AND MAINTENANCE**  
**PERIODIC INSPECTION AND MAINTENANCE SCHEDULE**

**2-7**

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
<b>OPERATIONS INSIDE THE VEHICLE</b>				
C1	Check brake pedal and clutch pedal for free play	Inspection	Every 20,000 km or every 12 months	
C2	Check parking brake lever stroke and play	Inspection	Every 20,000 km or every 12 months	
C3	Replace air purifier filter	Replace	Normal usage	Every 20,000 km or every 12 months
			Severe usage	More frequently
<b>OPERATIONS OUTSIDE THE VEHICLE</b>				
D1	Check wheel alignment	Inspection	Every 20,000 km or every 12 months	
D2	Check front and rear wheel bearings for play	Inspection	Every 60,000 km or every 3 years	
D3	Check brake hoses and pipes for leakage	Inspection	Every 40,000 km or every 2 years	
D4	Check brake pads and discs for wear	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
D5	Check fuel hoses and pipes for leakage or deterioration	Inspection	Every 40,000 km or every 2 years	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>				
E1	Check fluid level in automatic transmission and CVT	Inspection	Every 20,000 km or every 12 months	
E2	Change automatic transmission fluid and CVT fluid	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
E3	Change engine oil	Change	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km
E4	Replace engine oil filter	Replace	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km
<b>OTHERS</b>				
F1	Check body condition for damage	Inspection	Every year	
F2	Check the common rail engine (small injection quantity learning)	Inspection	Every 20,000 km or every 12 months	
F3	Road test	Inspection	Every 20,000 km or every 12 months	

## &lt;PHEV&gt;

Maintenance item		Maintenance operation	Maintenance interval	
<b>OPERATIONS INSIDE THE ENGINE COMPARTMENT</b>				
A1	Check drive belt for cracks, fraying, wear, and adjust its tension	Inspection	Every 40,000 km or every 2 years	
A4	Replace spark plugs	Iridium-tipped type	Replace	Every 100,000 km
A5	Check valve clearance*1 (except vehicles with auto-lash adjuster)	Inspection	Every 100,000 km	
A6	Check radiator hoses for damage and proper connection	Inspection	Every 40,000 km or every 2 years	
A7	Check engine coolant level in reservoir	Inspection	Every 40,000 km or every 2 years	
A8	Change engine coolant	Change	First 180,000 km or 9 years, thereafter every 120,000 km or 6 years	
A9	Check air cleaner element for clogging and damage	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
A10	Replace air cleaner element	Replace	Normal usage	Every 60,000 km or every 3 years
			Severe usage	More frequently
A11	Check fluid level in brake reservoir and clutch reservoir	Inspection	Every 20,000 km or every 12 months	
A12	Change brake fluid	Change	Every 40,000 km or every 2 years	
A13	Check battery condition (auxiliary battery)	Inspection	Every 20,000 km or every 12 months	
A14	Replace fuel filter	Replace	Every 160,000 km or every 10 years	
A15	Check high voltage cable for damage and proper connection	Inspection	Every 40,000 km or every 2 years	
A16	Check front motor for cooling oil leakage	Inspection	Every 20,000 km or every 12 months	
A17	Check rear motor coolant level in reservoir	Inspection	Every 40,000 km or every 2 years	
A18	Change rear motor coolant	Inspection	Every 20 years	
<b>OPERATIONS UNDER THE VEHICLE</b>				
B1	Check suspension system for damage and looseness	Inspection	Every 20,000 km or every 12 months	
B2	Check suspension arm ball joints for play, and dust covers for damage	Inspection	Every 20,000 km or every 12 months	
B3	Check driveshaft boots for damage	Inspection	Normal usage	Every 40,000 km or every 2 years
			Severe usage	Every 10,000 km
B4	Check steering linkage for damage and loose connections (including seals and boots)	Inspection	Every 40,000 km or every 2 years	

**PERIODIC INSPECTION AND MAINTENANCE  
PERIODIC INSPECTION AND MAINTENANCE SCHEDULE**

**2-9**

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
B11	Check exhaust pipe connections for gas leakage, and check pipe installation	Inspection	Every 40,000 km or every 2 years	
B12	Check front transaxle for oil leakage (in case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B13	Check rear transaxle for oil leakage (in case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B14	Change front transaxle oil	Change	Severe usage	Every 40,000 km
B15	Change rear transaxle oil	Change	Severe usage	Every 40,000 km
<b>OPERATIONS INSIDE THE VEHICLE</b>				
C1	Check brake pedal and clutch pedal for free play	Inspection	Every 20,000 km or every 12 months	
C2	Check parking brake lever stroke and play	Inspection	Every 20,000 km or every 12 months	
C3	Replace air purifier filter	Replace	Normal usage	Every 20,000 km or every 12 months
			Severe usage	More frequently
<b>OPERATIONS OUTSIDE THE VEHICLE</b>				
D1	Check wheel alignment	Inspection	Every 20,000 km or every 12 months	
D2	Check front and rear wheel bearings for play	Inspection	Every 60,000 km or every 3 years	
D3	Check brake hoses and pipes for leakage	Inspection	Every 40,000 km or every 2 years	
D4	Check brake pads and discs for wear	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
D5	Check fuel hoses and pipes for leakage or deterioration	Inspection	Every 40,000 km or every 2 years	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>				
E3	Change engine oil	Change	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km
E4	Replace engine oil filter	Replace	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km
E5	Check exhaust gas recirculation (EGR) system	Inspection	Every 20,000 km or every 12 months	
<b>OTHERS</b>				
F1	Check body condition for damage	Inspection	Every year	
F3	Road test	Inspection	Every 20,000 km or every 12 months	

**VEHICLES FOR GENERAL EXPORT**

Maintenance item		Maintenance operation	Maintenance interval	
<b>OPERATIONS INSIDE THE ENGINE COMPARTMENT</b>				
A1	Check drive belt for cracks, fraying, wear, and adjust its tension	Inspection	Every 20,000 km or every 12 months	
A3	Check operation of crankcase emission control system	Inspection	Every 40,000 km or every 2 years	
A4	Replace spark plugs	Iridium-tipped type	Replace	Every 100,000 km
A5	Check valve clearance*1 (except vehicles with auto-lash adjuster)	Inspection	4B1 engine	Every 100,000 km
			4J1 engine	Every 60,000 km
A6	Check radiator hoses for damage and proper connection	Inspection	Every 40,000 km or every 2 years	
A7	Check engine coolant level in reservoir	Inspection	Every 20,000 km or every 12 months	
A8	Change engine coolant	Change	First 160,000 km or 8 years, thereafter every 100,000 km or 5 years	
A9	Check air cleaner element for clogging and damage	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
A10	Replace air cleaner element	Replace	Normal usage	Every 40,000 km or every 2 years
			Severe usage	More frequently
A11	Check fluid level in brake reservoir and clutch reservoir	Inspection	Every 10,000 km or every 6 months	
A12	Change brake fluid	Change	Every 40,000 km or every 2 years	
A13	Check battery condition	Inspection	Every 10,000 km or every 6 months	
A14	Replace fuel filter	Replace	Every 60,000 km or every 3 years	
<b>OPERATIONS UNDER THE VEHICLE</b>				
B1	Check suspension system for damage and looseness	Inspection	Every 20,000 km or every 12 months	
B2	Check suspension arm ball joints for play, and dust covers for damage	Inspection	Every 20,000 km or every 12 months	
B3	Check driveshaft boots for damage	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 10,000 km or every 6 months
B4	Check steering linkage for damage and loose connections (including seals and boots)	Inspection	Every 20,000 km or every 12 months	

**PERIODIC INSPECTION AND MAINTENANCE  
PERIODIC INSPECTION AND MAINTENANCE SCHEDULE**

**2-11**

<b>Maintenance item</b>		<b>Maintenance operation</b>	<b>Maintenance interval</b>	
B5	Check manual transmission for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B6	Check transfer for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B7	Change gear oil in manual transmission	Change	Normal usage	Every 200,000 km
			Severe usage	Every 100,000 km
B8	Change gear oil in transfer	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
B9	Check rear differential for oil leakage (In case of leakage, check the oil level)	Inspection	Every 20,000 km or every 12 months	
B10	Change gear oil in rear differential	Change	Normal usage	Every 80,000 km
			Severe usage	Every 40,000 km
B11	Check exhaust pipe connections for gas leakage, and check pipe installation	Inspection	Every 20,000 km or every 12 months	
<b>OPERATIONS INSIDE THE VEHICLE</b>				
C1	Check brake pedal and clutch pedal for free play	Inspection	Every 10,000 km or every 6 months	
C2	Check parking brake lever stroke and play	Inspection	Every 20,000 km or every 12 months	
C3	Replace air purifier filter	Replace	Every 15,000 km or every 12 months	
<b>OPERATIONS OUTSIDE THE VEHICLE</b>				
D1	Check wheel alignment	Inspection	Every 20,000 km or every 12 months	
D2	Check front and rear wheel bearings for play	Inspection	Every 60,000 km or every 3 years	
D3	Check brake hoses and pipes for leakage	Inspection	Every 20,000 km or every 12 months	
D4	Check brake pads and discs for wear	Inspection	Normal usage	Every 20,000 km or every 12 months
			Severe usage	Every 5,000 km or every 6 months
D5	Check fuel hoses and pipes for leakage or deterioration	Inspection	Every 40,000 km or every 2 years	

Maintenance item		Maintenance operation	Maintenance interval	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>				
E1	Check fluid level in automatic transmission and CVT	Inspection	Every 20,000 km or every 12 months	
E2	Change automatic transmission fluid and CVT fluid	Change	Severe usage	Every 40,000 km
E3	Change engine oil	Change	Normal usage	Every 15,000 km or every 12 months
			Severe usage	Every 5,000 km
E4	Replace engine oil filter	Replace	Normal usage	Every 15,000 km or every 12 months
			Severe usage	Every 5,000 km
E6	Check engine idling speed	Inspection	Every 20,000 km or every 12 months	
E7	Check CO concentration (petrol-powered vehicles)	Inspection	Every 20,000 km or every 12 months	
<b>OTHERS</b>				
F1	Check body condition for damage	Inspection	Every year	
F3	Road test	Inspection	Every 20,000 km or every 12 months	

**NOTE:**

*\*1: If found any noise from the valve any time, please check the valve clearance.*

*"Severe usage" specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the following cases:*

1. *Driving in dusty area.*
2. *Driving on rough roads, on submerged roads, or hilly areas.*
3. *Driving cold zones.*
4. *Engine idling for a long time or short-distance travel during cold weather.*
5. *Frequent, sudden application of brakes.*
6. *Towing of a trailer.*
7. *Use as a taxi or as a rent-a-car.*
8. *When more than 50% of driving is in heavy city traffic and the ambient temperature is 32°C or more.*
9. *When more than 50% of driving is at 120 km/h or more and the ambient temperature is 30°C or more.*

# OPERATIONS INSIDE THE ENGINE COMPARTMENT

## A1. CHECK DRIVE BELT FOR CRACKS, FRAYING, WEAR, AND ADJUST ITS TENSION

M6020202900842


### DRIVE BELT CONDITION

Check the whole rounds of the drive belt for cracks, fraying and wear.

### DRIVE BELT TENSION CHECK <4B1 (except PHEV) and 4J1>

#### ⚠ CAUTION

Check the drive belt tension after turning the crankshaft clockwise one turn or more.

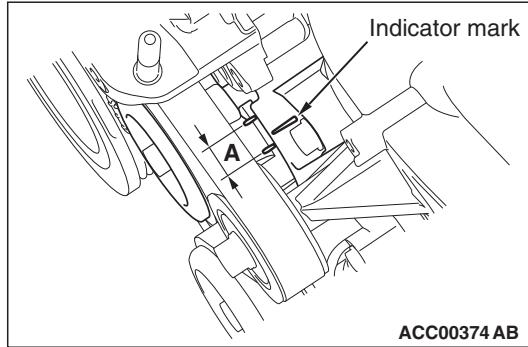


1. Make sure that the indicator mark on the drive belt auto-tensioner is within the area marked with A in the illustration.
2. If the mark is out of the area A, replace the drive belt.

*NOTE: The drive belt tension adjustment is not necessary as the drive belt auto-tensioner is adopted.*

### DRIVE BELT TENSION CHECK <4N1>

#### ⚠ CAUTION

Check the drive belt tension after turning the crankshaft clockwise one turn or more.

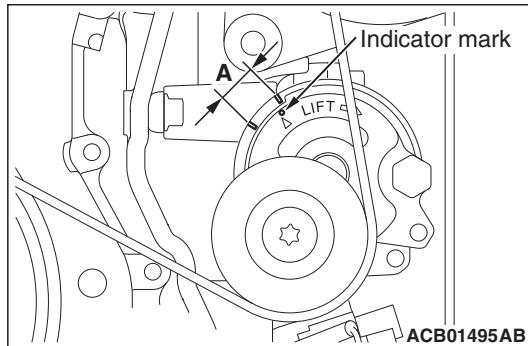

1. Make sure that the indicator mark is within the area marked with A in the illustration.

2. If the mark is out of the area, replace the drive belt.

*NOTE: The drive belt tension check is not necessary as drive belt auto-tensioner is adopted.*

### WATER PUMP DRIVE BELT TENSION CHECK <4N1>


#### NOTE:

- An elastic stretch-type belt is used for the water pump drive, therefore, the tension adjustment is not necessary.
- Perform the water pump drive belt tension check according to the following procedures.

### <When the vibration frequency is measured: recommendation>

#### ⚠ CAUTION

- When measuring the vibration frequency, make sure that the engine is cold.
- Measure the vibration frequency after turning the crankshaft clockwise one turn or more.

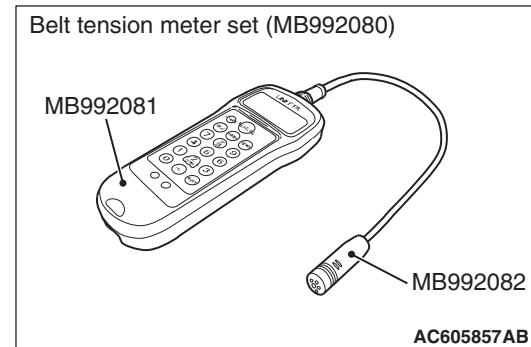

1. Connect the special tool microphone assembly (MB992082) to the special tool belt tension meter (MB992081) of the special tool belt tension meter set (MB992080).
2. Press the "POWER" button to turn on the power supply.

3. Press number key 1. Check to ensure that "No. 01" appears on the upper left of the display and that the following numeric values are displayed for individual items (M, W, and S):

M 000.9 g/m

W 010.0 mm/R

S 0100 mm

If numeric values have not been entered (new tool), set them according to the belt specifications as shown below. Once you set them, you do not have to set them again. The settings remain undeleted even after battery replacement.


*NOTE: This operation is to temporarily set the preset data such as the belt specifications, because if the measurement is taken without input of the belt specifications, conversion to tension value (N) cannot be made, resulting in judgement of error.*

**<Setting procedure>**

- (1) Press down the "MASS" button till the belt mass select display appears.
- (2) Press the "UP" or "DOWN" button to select "01 1.5GT 0.9" and press the "MEASURE" button to decide it. Check to ensure that "M 000.9 g/m" is displayed.
- (3) Press the "WIDTH" button to change to the belt width input display.
- (4) Press number keys 0, 1, 0, and 0 sequentially, and press the "SELECT" button to apply them. Check to ensure that "W 010.0 mm/R" appears on the display.
- (5) Press the "SPAN" button to change to the span length input display.
- (6) Press number keys 0, 1, 0, and 0 sequentially, and press the "SELECT" button to apply them. Check to ensure that "S 0100 mm" appears on the display.
4. Press "Hz" button twice to change the display to the frequency display (Hz).

**CAUTION**

- Do not allow any contaminants such as water or oil to get onto the microphone.
- If strong gusts of wind blow against the microphone or if there are any loud sources of noise nearby, the values measured by the microphone may not correspond to actual values.
- If the microphone is touching the belt while the measurement is being made, the values measured by the microphone may not correspond to actual values.
- Do not take the measurement while the vehicle's engine is running.

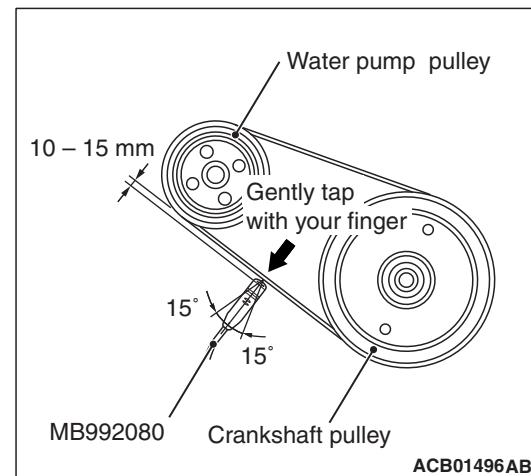

5. Hold the special tool MB992080 to the middle of the drive belt between the pulleys (at the place indicated by arrow), approximately 10 – 15 mm away from the rear surface of the drive belt so that it is perpendicular to the drive belt (within an angle of  $\pm 15^\circ$ ).
6. Press the "MEASURE" button.
7. Gently tap the middle of the drive belt between the pulleys (the place indicated by the arrow) with your finger as shown in the illustration, and measure that the vibration frequency of the drive belt is within the standard value.

**Standard value (Reference):**

113 – 264 Hz <M/T>

141 – 249 Hz <A/T>


*NOTE: To take the measurement repeatedly, fillip the water pump drive belt again.*

8. After the completion of the measurement, press and hold the "POWER" button to turn off the power supply.
9. If not within the standard value, replace the water pump drive belt.

## &lt;When the tension is measured&gt;

**CAUTION**

- When measuring the tension, make sure that the engine is cold.
- Measure the tension after turning the crankshaft clockwise one turn or more.

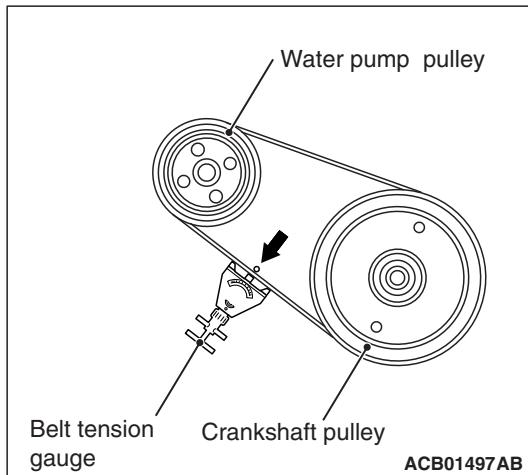

- Use a belt tension gauge in the middle of the drive belt between the pulleys shown in the figure (at the place indicated by the arrow) to check that the drive belt tension is within the standard value.

**Standard value (Reference):**

100 – 550 N &lt;M/T&gt;

158 – 496 N &lt;A/T&gt;

- If not within the standard value, replace the water pump drive belt.

**WATER PUMP DRIVE BELT TENSION  
CHECK <4B1-PHEV>**

*NOTE: An elastic stretch-type belt is used for the water pump drive belt, therefore, the tension adjustment is not necessary.*

Check the water pump drive belt tension in the following procedure.

**Standard value:**


Item	When checked	When adjusted	When replaced
Vibration frequency Hz (Reference)	116 – 337		
Deflection mm (Reference)	Less than 20.5		

## &lt;When the vibration frequency is measured {Special tool (MB992080) is used}: Recommendation&gt;

**CAUTION**

- When measuring the vibration frequency, make sure that the engine is cold.
- Measure the vibration frequency after turning the crankshaft clockwise one turn or more.

*NOTE: The vibration frequency measuring method is recommended for check of the water pump drive belt tension.*

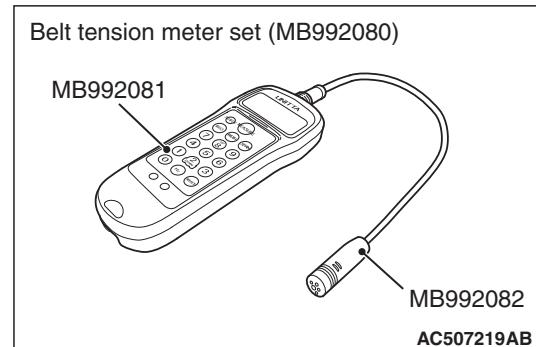

- Connect the Special tool microphone assembly (MB992082) to the Special tool belt tension meter (MB992081) of the Special tool belt tension meter set (MB992080).
- Press the "POWER" button to turn on the power supply.
- Press number key 1. Check to ensure that "No. 01" appears on the upper left of the display and that the following numeric values are displayed for individual items (M, W, and S):

M 000.9 g/m

W 010.0 mm/R

S 0100 mm


If numeric values have not been entered (new tool), set them according to the belt specifications as shown below. Once you set them, you do not have to set them again. The settings remain undeleted even after battery replacement.

*NOTE: This operation is to temporarily set the preset data such as the belt specifications, because if the measurement is taken without input of the belt specifications, conversion to tension value (N) cannot be made, resulting in judgement of error.*

## &lt;Setting procedure&gt;

- (1) Press down the "MASS" button till the belt mass select display appears.
- (2) Press the "UP" or "DOWN" button to select "01 1.5GT 0.9" and press the "MEASURE" button to decide it.  
Check to ensure that "M 000.9 g/m" is displayed.
- (3) Press the "WIDTH" button to change to the belt width input display.
- (4) Press number keys 0, 1, 0, and 0 sequentially, and press the "SELECT" button to apply them.  
Check to ensure that "W 010.0 mm/R" appears on the display.
- (5) Press the "SPAN" button to change to the span length input display.
- (6) Press number keys 0, 1, 0, and 0 sequentially, and press the "SELECT" button to apply them.  
Check to ensure that "S 0100 mm" appears on the display.

4. Press "Hz" button twice to change the display to the frequency display (Hz).

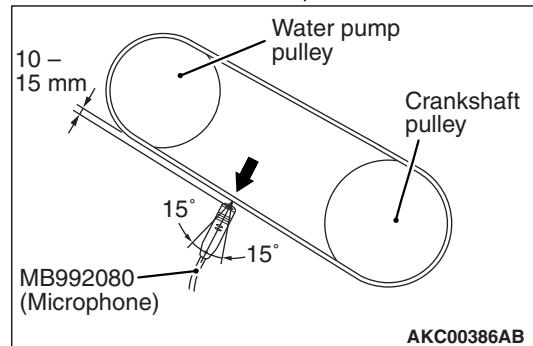**CAUTION**

- The temperature of the surface of the belt should be as close as possible to normal temperature.
- Do not let any contaminants such as water or oil get onto the microphone.
- If strong gusts of wind blow against the microphone or if there is loud sources of noise nearby, the values measured by the microphone may not correspond to actual values.
- If the microphone is touching the belt while the measurement is being made, the values measured by the microphone may not correspond to actual values.
- Do not take the measurement while the vehicle's engine is running.

5. Hold the microphone to the middle of the drive belt between the pulleys (at the place indicated by the arrow), about 10 – 15 mm away from the rear surface of the belt and so that it is perpendicular to the belt (within an angle of  $\pm 15^\circ$ ).
6. Press the "MEASURE" button.
7. Gently tap the middle of the belt between the pulleys (the place indicated by the arrow) with your finger as shown in the illustration, and check that the vibration frequency of the belt is within the standard value.


*NOTE: To take the measurement repeatedly, fillip the belt again.*

8. After the completion of the measurement, press and hold the "POWER" button to turn off the power supply.
9. If not within the standard value, replace the water pump drive belt.

## <Belt deflection check>

### CAUTION

- When measuring the deflection, make sure that the engine is cold.
- Measure the deflection after turning the crankshaft clockwise one turn or more.

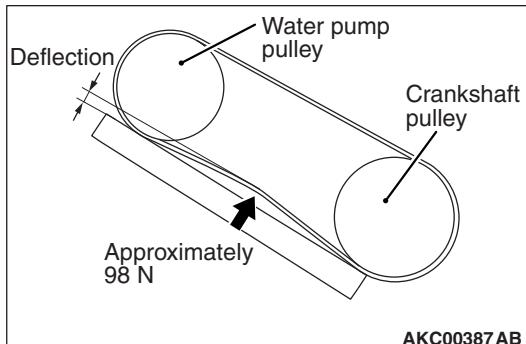


*NOTE: The belt deflection check should be just an emergency measure in case that you do not have tools for measuring the vibrational frequency.*

1. Apply approximately 98 N of force to the middle of the water pump drive belt between the pulleys (at the place indicated by the arrow) and check that the amount of deflection is within the standard value.
2. If not within the standard value, replace the water pump drive belt.

## A2. CHECK INTAKE AIR HOSE FOR DAMAGE (VEHICLES WITH A TURBOCHARGER)

M6020200500536

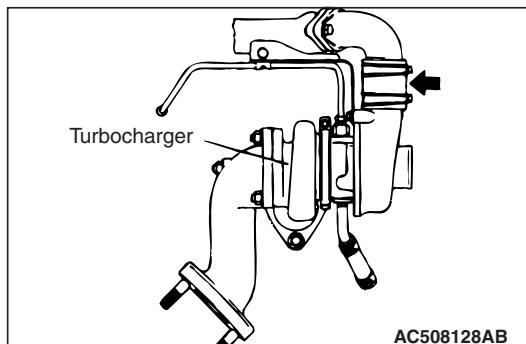


1. Inspect the intake air hoses for cracks or damage.

## A3. CHECK OPERATION OF CRANKCASE EMISSION CONTROL SYSTEM

M6020200700994

### BREATHER HOSE

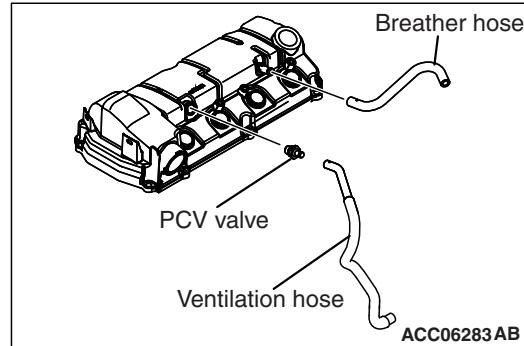


1. Inspect the breather hose for cracks or damage.
2. Clean the inside of the breather hose if necessary.
3. Inspect the ventilation filter for clogging.

### VENTILATION HOSE

1. Check entire circumference and length of hoses using a mirror as required.
2. Check all clamps for tightness and the connections for leakage.
3. Hoses should be replaced immediately if there is any evidence of deterioration or damage.

## POSITIVE CRANKCASE VENTILATION SYSTEM CHECK

1. Remove the ventilation hose from the PCV (Positive crankcase ventilation) valve.
2. Remove the PCV valve from the rocker cover.
3. Reinstall the PCV valve at the ventilation hose.
4. Start the engine and run at idle.

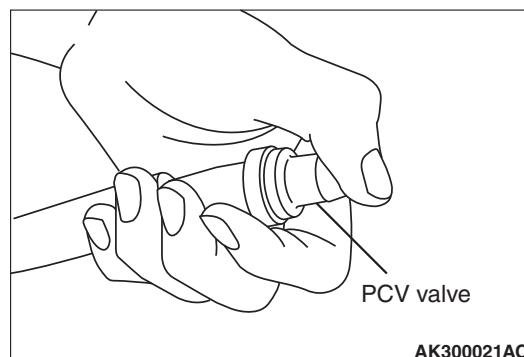


5. Place finger at the opening of the PCV valve and check that vacuum of the intake manifold is felt.

*NOTE: At this moment, the plunger in the PCV valve moves back and forth.*

6. If vacuum is not felt, clean the PCV valve or replace it.
7. Apply a small amount of new engine oil to the O-ring on the PCV valve, and tighten to the specified torque.

**Tightening torque:  $2.5 \pm 0.4 \text{ N}\cdot\text{m}$**

## PCV VALVE CHECK

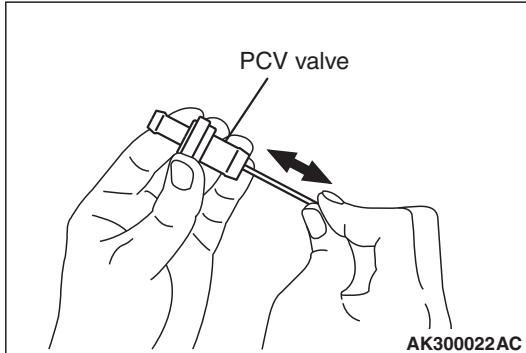

1. Insert a thin rod into the PCV valve from the side shown in the illustration (rocker cover installation side), and move the rod back and forth to check that the plunger moves.
2. If the plunger does not move, there is clogging in the PCV valve. In this case, clean or replace the PCV valve.

## A4. REPLACE SPARK PLUGS

M6020200800805

After removing old spark plugs, install new ones and tighten them at the specified torque.

## A5. CHECK VALVE CLEARANCE (EXCEPT VEHICLES WITH AUTO-LASH ADJUSTER)

M6020202401130


### <4B1>

*NOTE: Perform the valve clearance check and adjustment at the engine cold state.*


1. Remove all ignition coils.
2. Remove the cylinder head cover.

### CAUTION

Turn the crankshaft always clockwise.

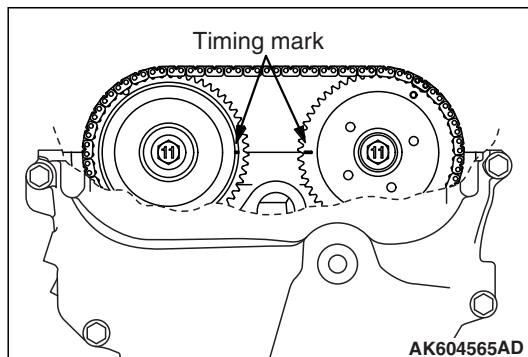

3. Turn the crankshaft clockwise, and align the timing mark on the exhaust camshaft sprocket against the upper face of the cylinder head as shown in Figure. Therefore, No.1 cylinder goes to the compression top dead centre.

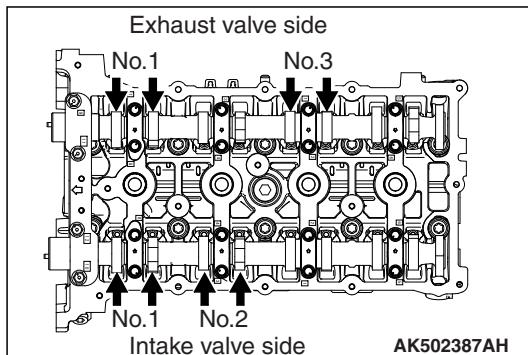


4. Using a thickness gauge, measure the valve clearance with the arrow shown in Figure. If deviated from the standard value, make note for the valve clearance.


**Standard value:**

**Intake valve  $0.20 \pm 0.03 \text{ mm}$**


**Exhaust valve  $0.30 \pm 0.03 \text{ mm}$**

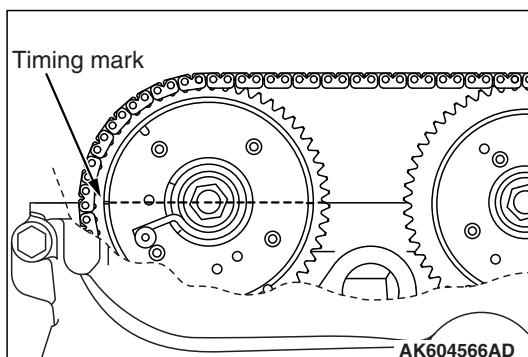

5. Turn the crankshaft clockwise 360 degrees, and put the timing mark on the exhaust camshaft sprocket in position shown in Figure. Therefore, No.4 cylinder goes to the compression top dead centre.

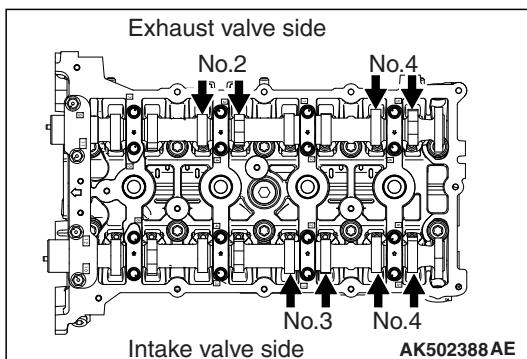

6. Check the valve clearance with the arrow shown in Figure. In the same procedure as 4.
7. If the valve clearance is deviated from the standard value, remove the camshaft and the valve tappet.

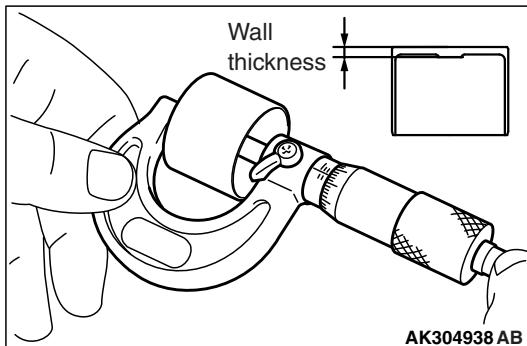


8. Using a micrometer, measure the thickness of the removed valve tappet.
9. Calculate the thickness of the newly installed valve tappet through the following equation.  
A: thickness of newly installed valve tappet  
B: thickness of removed valve tappet  
C: measured valve clearance

**Equation**

**Intake valve:  $A = B + (C - 0.20 \text{ mm})$**

**Exhaust valve:  $A = B + (C - 0.30 \text{ mm})$**

**NOTE:**

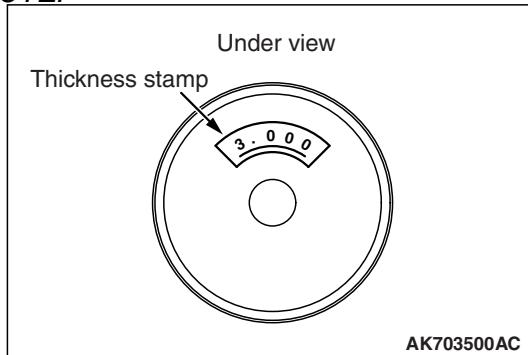

The valve tappet ranges 3,000 – 3,690 mm and has 47 types per 0.015 mm. The thickness below a decimal point is stamped on the reverse side of the valve tappet.

10. Install the valve tappet selected through the procedure 9, and put the camshaft in position.
11. After installing the timing chain, measure the valve clearance using the procedure 3 to 6. Confirm the clearance is within the standard value.


**⚠ CAUTION**

**Completely remove all the old liquid gasket, which might be remaining among the components.**

12. Remove any liquid gasket remaining on the cylinder head cover, the timing chain case and the cylinder head.
13. Using white gasoline and so on, degrease the cylinder head cover, timing chain case and cylinder head.

**⚠ CAUTION**


**The cylinder head cover should be installed within 3 minutes of applying liquid gasket.**

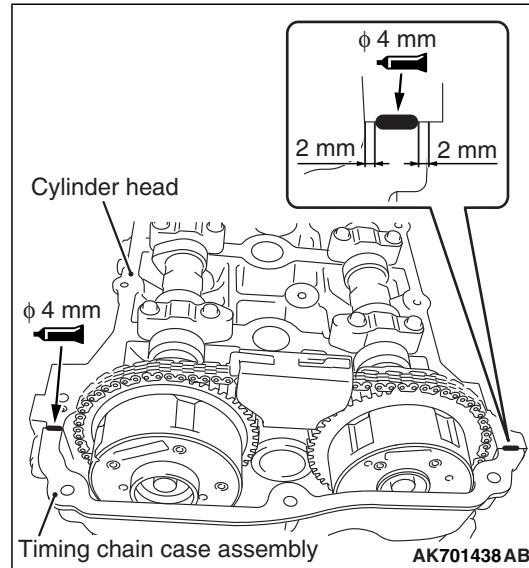

14. Apply a 4 mm bead of liquid gasket as illustrated.

**Specified sealant:**

**ThreeBond 1217G or equivalent**

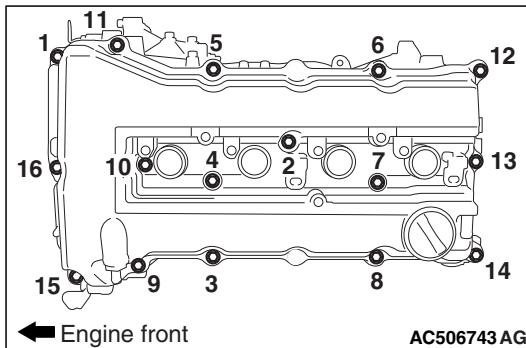


15. Install the cylinder head cover and tighten the tightening bolts using the following procedures.
  - (1) Temporarily tighten to the following torque in order shown in the illustration.  
**Tightening torque:  $3.0 \pm 1.0 \text{ N}\cdot\text{m}$**
  - (2) Tighten to the specified torque in order shown in the illustration.  
**Specified torque:  $5.5 \pm 0.5 \text{ N}\cdot\text{m}$**
16. Install the ignition coils.

<4J1>

**NOTE:** The inlet valve side has the inlet continuous variable valve lift system. The oil clearance between the arm and the shaft makes it difficult to measure the valve clearance with the usual feeler gauge. Therefore, use the dial gauge and check the amount of valve lift.


1. Let the engine be in cold state.
2. Turn the ignition switch to the "LOCK" (OFF) position.
3. Remove the rocker cover assembly.

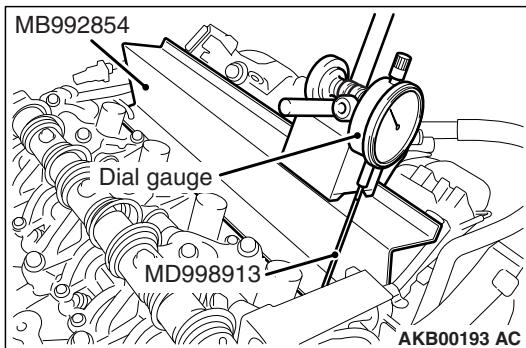

4. Install the special tool magnet base plate (MB992854) to the upper face of the cylinder head at the inlet side.

*NOTE: At that time, remove the injector connector and the fixed portion of the harness bracket so that the engine harness cannot interfere with the installation.*


5. Install the special tool dial gauge extension (MD998913) to the dial gauge.
6. When installing the dial gauge to the magnet base plate, the dial gauge must have almost the same angle as the inlet valve has.

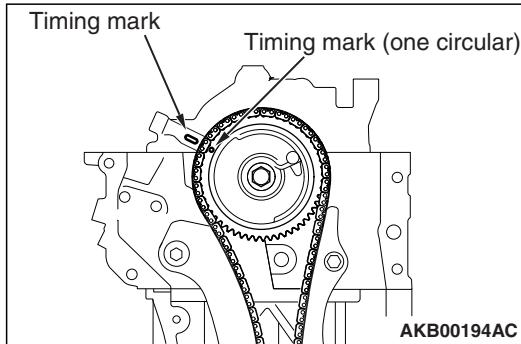

7. Rotate the crankshaft clockwise and align the timing mark of the rocker shaft holder with the one circular timing mark of the V.V.T. sprocket. Therefore, the No. 1 cylinder is set at the top dead centre on its compression stroke.
8. For the No. 1 cylinder inlet valve, check and adjust the valve clearance according to the following procedures.

**! CAUTION**


- Never loosen the five Torx bolts at the upper portions of the rocker arm and camshaft assembly.
- Never loosen the minimum lift stopper.
- When rotating the coupling, do not apply the torque more than 3 N·m to prevent the damage.
- Do not forcibly push the worm wheel to the minimum lift stopper and the maximum lift stopper.

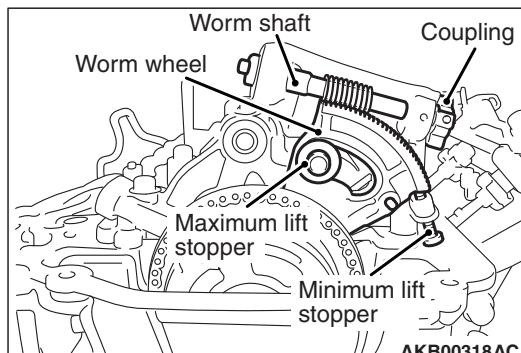


9. Slowly rotate the coupling clockwise. When lightly touching the worm wheel to the minimum lift stopper, stop the worm wheel at the position shown in the illustration.

**NOTE:** When rotating the coupling clockwise, the worm wheel should move in the minimum lift direction. When rotating the coupling anti-clockwise, the worm wheel should move in the maximum lift direction.

**NOTE:**

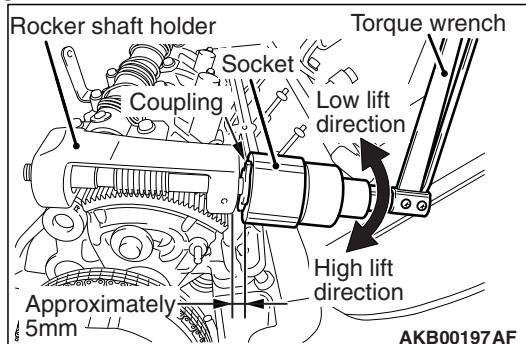

When manually rotating the coupling, insert a 12-point socket (24 mm) into the position on the coupling approximately 5 mm away from the rocker shaft holder. Connect the mini torque wrench and slowly rotate them.

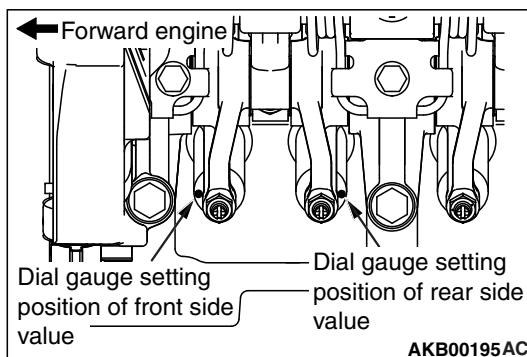


10. Set the dial gauge on the upper face of the valve spring retainer at the forward engine side. Set the dial gauge to 0.

**NOTE:** As shown in the illustration, prevent the measurement error caused by the tilted valve, install the rocker arm to the outside of the rocker arm.

**CAUTION**

- When rotating the coupling, do not apply the torque more than 3 N·m to prevent the damage.
- Do not forcibly push the worm wheel to the minimum lift stopper and the maximum lift stopper.

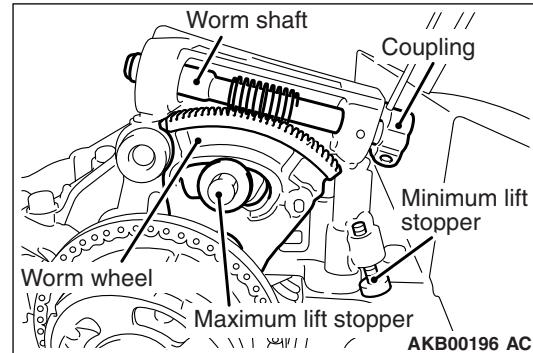


11. Slowly rotate the coupling. Place the worm wheel as shown in the illustration so that the centre of the worm wheel gear can engage with the worm shaft (at around the middle lift position).

**NOTE:** When rotating the coupling clockwise, the worm wheel should move in the minimum lift direction. When rotating the coupling anti-clockwise, the worm wheel should move in the maximum lift direction.

**CAUTION**

- Straightly insert the feeler gauge in the vertical direction not to touch the rocker arm roller guide.
- When inserting the feeler gauge too much, you cannot pull out the feeler gauge after the adjustment. Do not insert the feeler gauge by more than 5 mm.

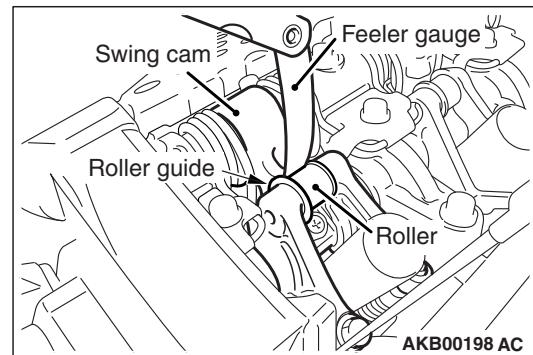


12. Pushing the feeler gauge with 0.15 mm in thickness between the swing cam and the roller of the rocker arm, rotate the coupling clockwise. Rotate the worm wheel to the minimum lift side. Insert the feeler gauge top by approximately 5 mm.

**NOTE:** If the valve clearance is excessive caused by the loosened adjusting screw and also if the feeler gauge can easily be inserted, perform the adjustment according to the overhaul valve clearance adjustment procedures.

**NOTE:** If not easily inserting the feeler gauge, you can insert the feeler gauge more easily by rotating the crankshaft clockwise 2 revolutions with pushing the feeler gauge.

**CAUTION**

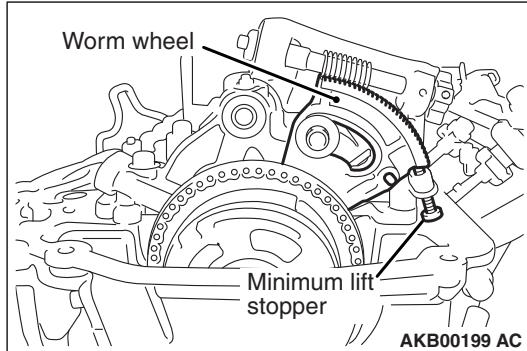

**Do not forcibly push the worm wheel to the minimum lift stopper.**

13. Check the worm wheel stopping at the position, as shown in the illustration, lightly touching to the minimum lift stopper. Check that the feeler gauge is securely inserted.
14. Check that the dial gauge reading is within the standard value.

**Standard value:  $-0.11 \pm 0.03$  mm**

**NOTE:** By inserting the 0.15 mm feeler gauge, the 0.26 mm-stroke occurs at the rocker arm adjusting screw side. Therefore, the valve clearance at the inlet side can be calculated by the following calculating formula using the dial gauge reading.

**Calculating formula:**

**valve clearance = 0.26 mm + (dial gauge reading)**

**<Example > If the dial gauge reading is  $-0.11$  mm,**

**valve clearance =  $0.26$  mm +  $(-0.11)$  =  $0.15$  mm**

15. If the dial gauge reading is not within the standard value, perform the adjustment according to the following procedures.

16. Loosen the rocker arm lock nut at the forward engine side. Pull up the adjusting screw once. From the upper portion of the adjusting screw, sufficiently apply the engine oil between the lower adjusting screw end and the valve axis end so that the engine oil can be provided enough. And then, perform the adjustment by rotating the adjusting screw so that the dial gauge can read  $-0.11$  mm.

17. After the adjustment, hold the driver to prevent the adjustment screw from rotating. Temporarily tighten the lock nut. Rotate the coupling anti-clockwise. Return the worm wheel to around the middle lift position. Pull out the feeler gauge.
18. For the valve at the backward engine side, check the valve clearance in the same procedure as that of the valve at the forward engine side. If the valve clearance is not within the standard value, perform the adjustment in the same procedure as that of the valve at the forward engine side.

19. After the adjustment, hold the driver to prevent the adjustment screw from rotating. Tighten the lock nut to the specified torque. And then, check that the dial gauge reading does not change.

**Tightening torque:  $9.0 \pm 1.0$  N·m**

20. Check again the valve clearance at the forward engine side. If the valve clearance is not within the standard value, perform the adjustment in the same procedure as the first adjustment.
21. After the adjustment, hold the driver to prevent the adjustment screw from rotating. Tighten the lock nut to the specified torque. And then, check that the dial gauge reading does not change.

**Specified torque:  $9.0 \pm 1.0$  N·m**


22. Rotate the coupling anti-clockwise. Return the worm wheel to around the middle lift position. Pull out the feeler gauge.
23. For the No. 2 cylinder inlet valve, check and adjust the valve clearance according to the procedures from Step 9 to Step 22.
24. For the No. 1 and No.3 cylinder exhaust valves, check and adjust the valve clearance according to the following procedures.
25. Insert the feeler gauge between the exhaust valve axis end and the adjusting screw. Measure the valve clearance.

**Standard value:  $0.20 \pm 0.03$  mm**

26.If the valve clearance is not within the standard value, loosen the lock nut. Adjust the adjusting screw so that the valve clearance can be within the standard value.

27.After the adjustment, hold the driver to prevent the adjustment screw from rotating. Tighten the lock nut to the specified torque.

**Tightening torque:  $9.0 \pm 1.0 \text{ N}\cdot\text{m}$**

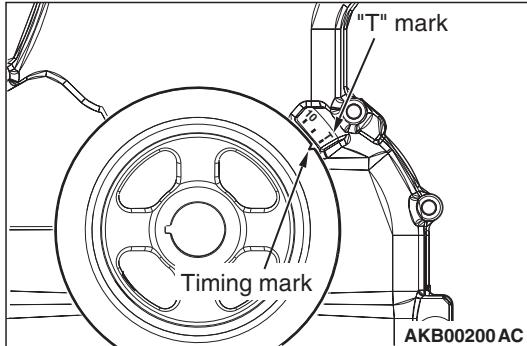

28.Rotate the crankshaft clockwise once. Align the crankshaft pulley timing mark (notch) with the "T" mark of the timing chain case. Therefore, the No. 4 cylinder is set at the top dead centre on its compression stroke.

29.For the No. 3 cylinder inlet valve, check and adjust the valve clearance according to the procedures from Step 9 to Step 22.

30.For the No. 4 cylinder inlet valve, check and adjust the valve clearance according to the procedures from Step 9 to Step 22.

31.For the No. 2 and No. 4 cylinder exhaust valves, check and adjust the valve clearance according to the procedures from Step 25 to Step 27.

32.Remove the special tool and return the engine harness to the original state.

33.Install the rocker cover assembly.


**<4N1>**

*NOTE: The valve clearance check and adjustment should be done when the engine is cold.*


1. Remove the fuel injector and common rail assembly and also the rocker cover assembly.

**⚠ CAUTION**


**The crankshaft should always be turned in a clockwise direction.**

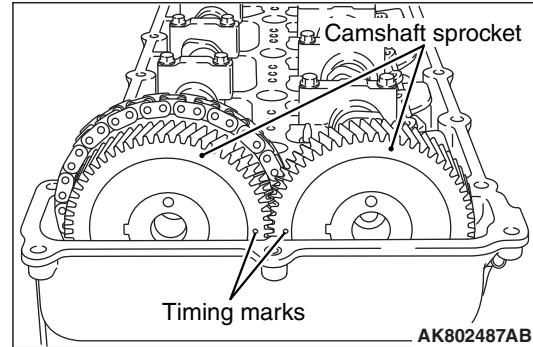

2. Align the camshaft sprocket timing marks and set the No. 1 cylinder at compression stroke top dead centre.

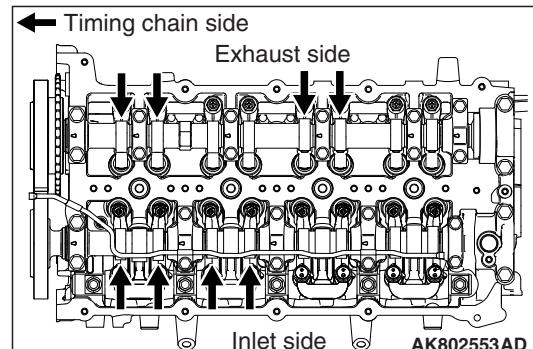

3. For the portions with the arrows shown below, measure and adjust the valve clearances by using the following procedures.

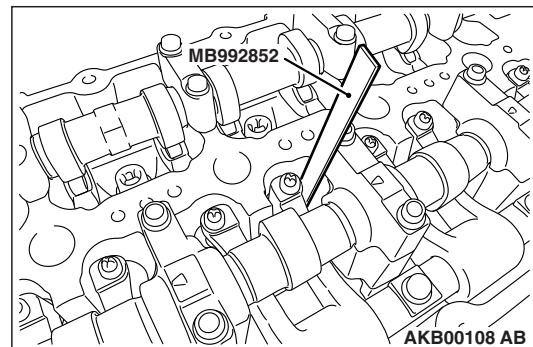

## &lt; Inlet side &gt;


1.) By using the special tool MB992852 (valve adjusting feeling gauge), check that the clearance is within the standard value between the valve stem and adjusting screw.

**Standard value (cold engine):  $0.14 \pm 0.03$  mm**

2.) If the valve clearance is not as specified, loosen the adjusting screw lock nut and adjust the clearance using the special tool MB992852 (valve adjusting feeling gauge) between the valve stem and the adjusting screw while turning the adjusting screw.

**CAUTION**

**Pay special attention that the tightening torque is not beyond this valve. If the tightening torque is beyond the valve, the valve stem would possibly bend.**

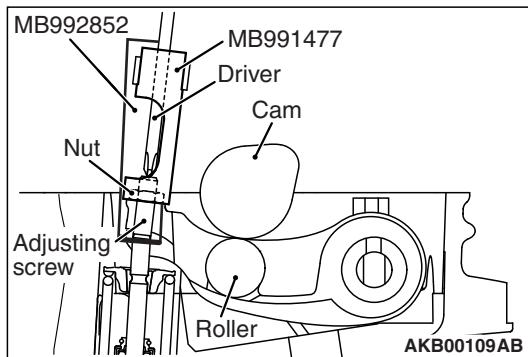

3.) While holding the adjusting screw with a screwdriver to prevent it from turning, tighten the lock nut to the specified torque using the special tool MB991477 (valve adjusting socket).

**Tightening torque:  $9 \pm 1$  N·m**

## &lt; Exhaust side &gt;


1.) By using the thickness gauge, measure the clearance between the cam and roller.

**Standard value (cold engine):  $0.16 \pm 0.03$  mm**

2.) By using the thickness gauge, measure the clearance between the cam and roller.


**CAUTION**

**Pay special attention that the tightening torque is not beyond this valve. If the tightening torque is beyond the valve, the valve stem would possibly bend.**

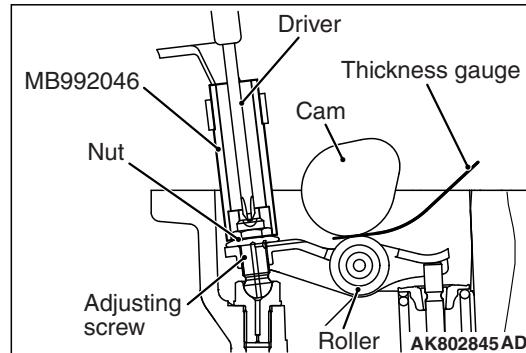

3.) While holding the adjusting screw with a screwdriver to prevent it from turning, tighten the lock nut to the specified torque using the special tool MB992046 (valve adjusting socket), valve adjusting socket.


**Tightening torque:  $9.8 \pm 1$  N·m**

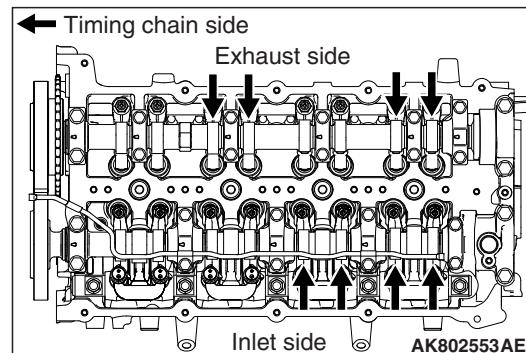

4. Turn the crankshaft  $360^\circ$  clockwise to bring No. 4 cylinder to the top dead centre position.
5. For the portions with the arrows shown below, measure and adjust the valve clearances by using the same procedures as ones in the Step 3.
6. Install the rocker cover assembly and also the fuel injector and common rail assembly.
7. Confirm there is no fuel leak from the joint for the injection pipe.

## A6. CHECK RADIATOR HOSES FOR DAMAGE AND PROPER CONNECTION


M6020200901333

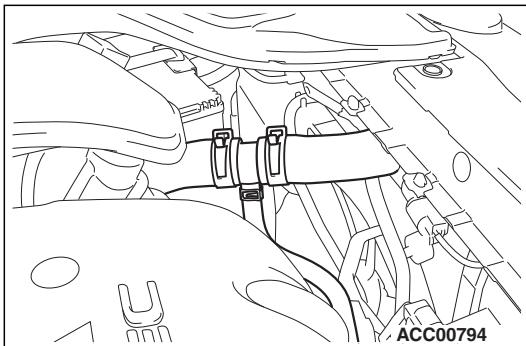

1. Check entire circumference and length of hoses, using a mirror as required.
2. Check that hoses installed in grommets pass through the centre of the grommets.
3. Check all clamps for tightness and connections for leakage.

## A7. CHECK ENGINE COOLANT LEVEL IN RESERVOIR

M6020201001270

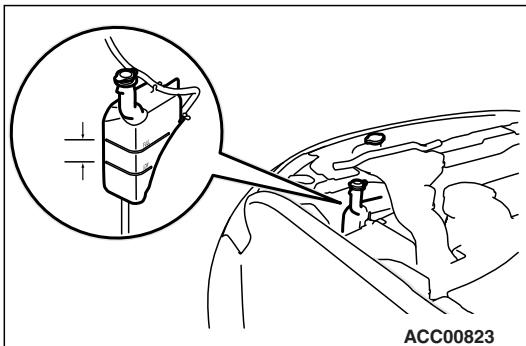

Check that the coolant level is between the "FULL" and "LOW" lines when the engine is at the normal operating temperature.

## A8. ENGINE COOLANT CHANGE

M6020201102009

### <4B1 and 4J1>

#### ⚠ CAUTION


Note that the following service procedures are not applicable for vehicles with electric heater (option for 4B1-PHEV).

#### ⚠ WARNING


*When removing the radiator cap, use care to avoid contact with hot engine coolant or steam. Place a shop towel over the radiator cap and turn the radiator cap anti-clockwise a little to let the pressure escape through the vinyl tube. After relieving the steam pressure, remove the radiator cap by slowly turning it anti-clockwise.*

### <4B1-Except PHEV, 4B1-PHEV (Vehicles without electric heater)>

1. Remove the engine room under cover front.
2. Drain the water from the radiator, heater core and engine after unplugging the radiator drain plug and removing the radiator cap.

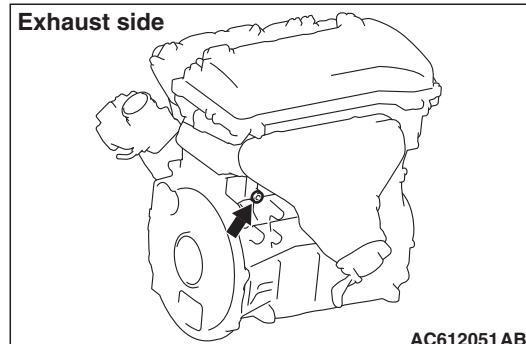

3. Drain the water in the water jacket by unplugging the drain plug of the cylinder block.
4. Remove the radiator condenser tank and drain the coolant.

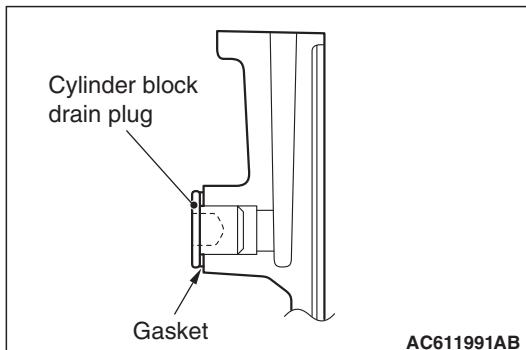


5. Replace the cylinder block drain plug gasket, and tighten the drain plug to the specified torque.

**Tightening torque:  $39 \pm 3 \text{ N}\cdot\text{m}$**

6. Securely tighten the radiator drain plug.
7. Reinstall the radiator condenser tank.

**⚠ CAUTION**

**Do not use alcohol or methanol anti-freeze or any engine coolants mixed with alcohol or methanol anti-freeze. The use of an improper anti-freeze can cause corrosion of the aluminium components.**

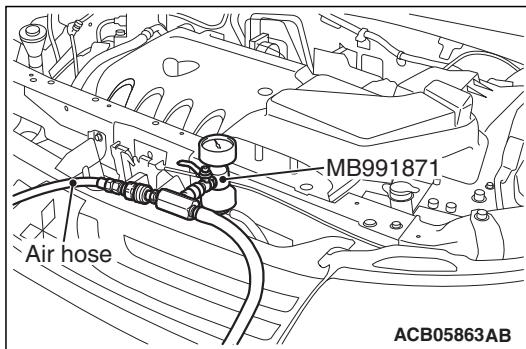

8. Use special tool LLC changer (MB991871) to refill the engine coolant up to the top of the radiator port.

**Recommended antifreeze: MITSUBISHI MOTORS GENUINE SUPER LONG LIFE COOLANT PREMIUM or equivalent\***

**NOTE: \*similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long life hybrid organic acid technology.**

**Quantity: Approximately 6.0 L <4B1-Except PHEV, 4J1> or 6.5L <4B1- PHEV(Vehicles without electric heater)>**

**NOTE: For how to use special tool (MB991871), refer to its manufacturer's instructions.**

9. Tighten the radiator cap securely.
10. Remove the radiator condenser tank cap, and add the engine coolant up to the "FULL" line.
11. Turn the A/C switch to OFF position to start the engine and warm up until the cooling fan operates.

*NOTE: This work is to open the thermostat fully.*

12. Rev the engine several times and then stop it. Check that there are no coolant leaks.
13. Remove the radiator cap with the engine cool, and then refill the engine coolant up to the top of the radiator port.
14. Tighten the radiator cap securely.


**⚠ CAUTION**

**Do not overfill the radiator condenser tank.**


15. Remove the radiator condenser tank cap, and add the engine coolant up to the "FULL" line.
16. Install the engine room under cover front.

**<4B1-PHEV (Vehicles with electric heater)>**


1. Remove the engine room under cover front

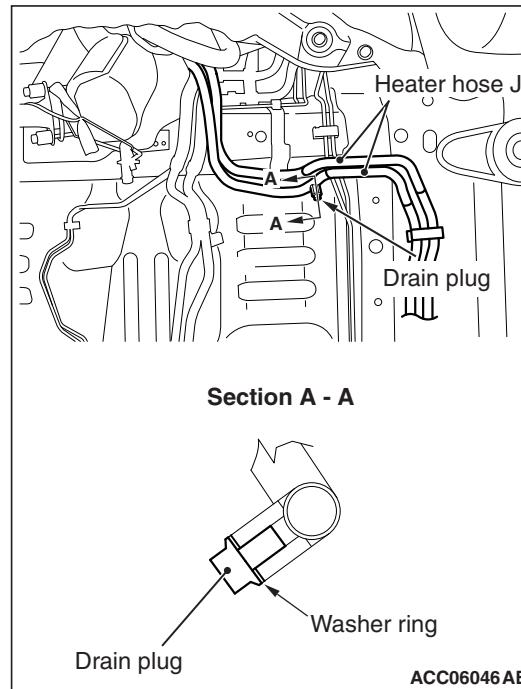

2. Remove the electric heater drain plug and the radiator cap in that order. Then drain the engine coolant from the radiator, the heater core and the electric heater.

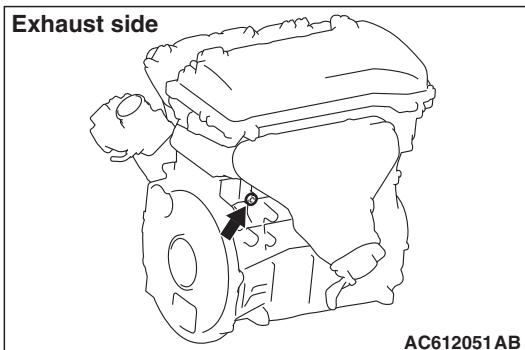


3. Drain the water in the water jacket by unplugging the drain plug of the cylinder block.
4. Remove the radiator condenser tank and drain the coolant.

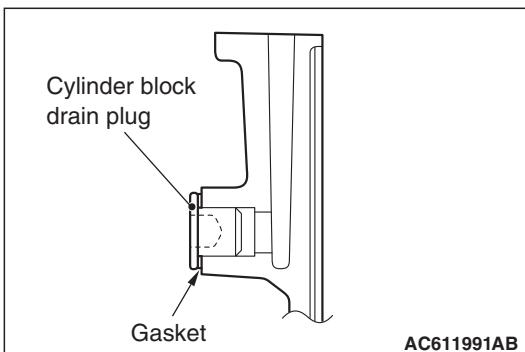


5. Replace the cylinder block drain plug gasket, and tighten the drain plug to the specified torque.

**Tightening torque:  $39 \pm 3 \text{ N}\cdot\text{m}$**

6. Securely tighten the radiator drain plug.
7. Reinstall the radiator condenser tank.

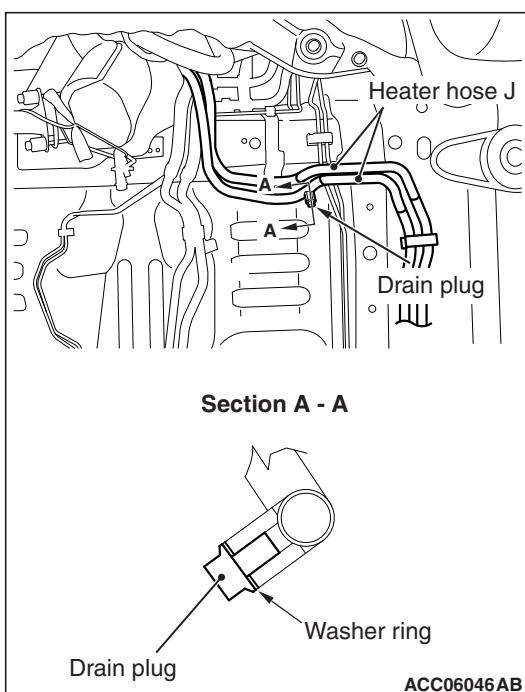

8. Tighten the electric heater drain plug.  
*NOTE: A new washer ring must be used.*

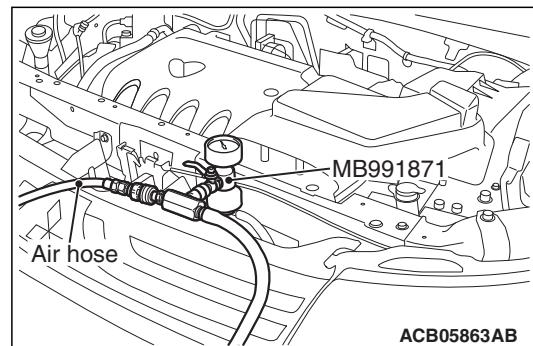

9. Use special tool LLC changer (MB991871) to refill the engine coolant up to the top of the radiator port.

**Recommended antifreeze: MITSUBISHI MOTORS GENUINE SUPER LONG LIFE COOLANT PREMIUM or equivalent\***

**NOTE: \*similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long life hybrid organic acid technology.**

**Quantity: Approximately 7.5 L**

10. Remove the bolt from the ventilation hole on heater pipe A. Then air-bleed the system.
11. Tighten the bolt into the ventilation hole.
12. Remove the radiator condenser tank cap, and add the engine coolant up to the "FULL" line.
13. Tighten the radiator condenser cap securely.
14. Turn off the air-conditioner switch, and then warm the engine until the cooling fan runs.  
*NOTE: This work is to open the thermostat fully.*
15. Rev the engine several times and then stop it. Check that there are no coolant leaks.
16. Remove the radiator cap with the engine cool, and then refill the engine coolant up to the top of the radiator port.
17. Tighten the radiator cap securely.
18. Remove the radiator condenser tank cap, and add the engine coolant up to the "FULL" line.
19. Tighten the radiator condenser cap securely.
20. Install the engine room under cover front.


## &lt;4N1&gt;

1. Remove the engine room under cover front.

**⚠️ WARNING**

**When removing the radiator cap, use care to avoid contact with hot engine coolant or steam. Place a shop towel over the radiator cap and turn the radiator cap anti-clockwise a little to let the pressure escape through the vinyl tube. After relieving the steam pressure, remove the radiator cap by slowly turning it anti-clockwise.**

2. Drain the engine coolant from the radiator, heater core and engine after unplugging the radiator drain plug and removing the radiator cap.
3. Remove the catalytic converter assembly.

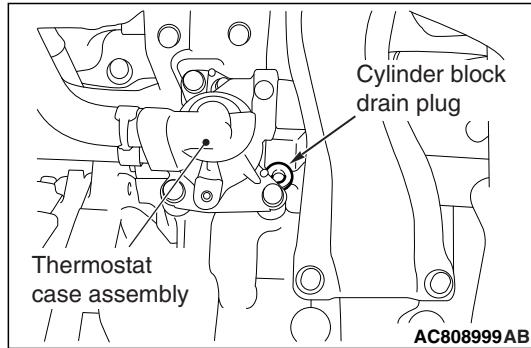


4. Drain the engine coolant in the water jacket by unplugging the cylinder block drain plug.
5. Remove the radiator condenser tank and drain the engine coolant.
6. Reinstall the radiator condenser tank.
7. Replace the gasket, and tighten the cylinder block drain plug to the specified torque.

**Tightening torque:  $39 \pm 3 \text{ N}\cdot\text{m}$**

8. Install the catalytic converter assembly.
9. Securely tighten the radiator drain plug.

**⚠️ CAUTION**

**Do not use alcohol or methanol anti-freeze or any engine coolants mixed with alcohol or methanol anti-freeze. The use of an improper anti-freeze can cause corrosion of the aluminium components.**

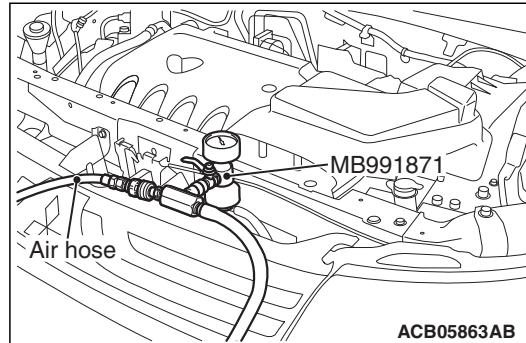

10. Use special tool LLC changer (MB991871) to refill the engine coolant up to the top of the radiator port.

**Recommended antifreeze: MITSUBISHI MOTORS GENUINE SUPER LONG LIFE COOLANT PREMIUM or equivalent\***

**NOTE: \*similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long life hybrid organic acid technology.**

**Quantity: 7.5 L <M/T> or 8.0L <A/T>  
(includes 0.65 L in the radiator condenser tank)**

**NOTE: For how to use special tool MB991871, refer to its manufacturer's instructions.**

11. Tighten the radiator cap securely.
12. Turn the A/C switch to OFF position to start the engine and warm up until the radiator fan operates.

**NOTE: This work is to open the thermostat fully.**

13. Rev the engine several times and then stop it. Check that there are no engine coolant leaks.


**⚠️ CAUTION**

**Do not overfill the radiator condenser tank.**

14. Remove the radiator condenser tank cap with the engine cool, and then refill the engine coolant again to the "FULL" line of the radiator condenser tank.
15. Reinstall the engine room under cover front.

## A9. CHECK AIR CLEANER ELEMENT FOR CLOGGING AND DAMAGE

M6020201201025

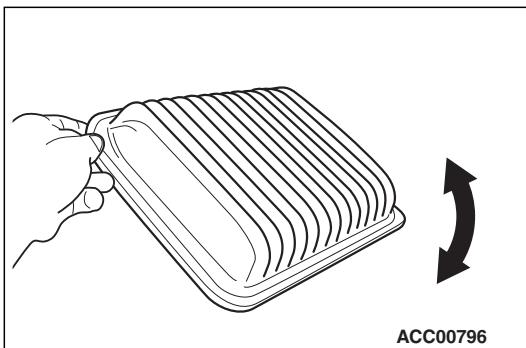


ACC00796

1. Check air cleaner element for clogging and damage.
2. Clean deposited dust from the element in the following manner.
  - (1) Lightly tap the element against the top of a bench.
  - (2) Blow compressed air from inside the element.
3. Wipe off dust on the air cleaner interior.
4. Install the air cleaner body.

## A10. REPLACE AIR CLEANER ELEMENT

M6020201301185

The air cleaner element will become dirty and loaded with dust during use, and the filtering effect will be substantially reduced. Replace it with a new one.

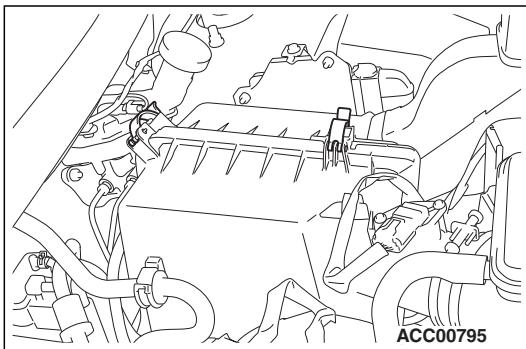


ACC00795

1. Unclasp the air cleaner cover clip.
2. Remove the air cleaner element and install a new one.
3. Be sure to close the air cleaner cover completely when clamping it.

## A11. CHECK FLUID LEVEL IN BRAKE RESERVOIR AND CLUTCH RESERVOIR

M6020203000518

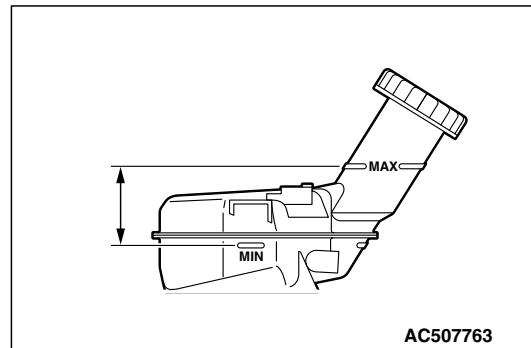


AC507763

1. Check that the fluid level is between the "MAX" and "MIN" mark.
2. If it is below the "MIN" marks, replenish with fresh brake fluid up to the "MAX" mark.

## A12. CHANGE BRAKE FLUID

M6020201601335

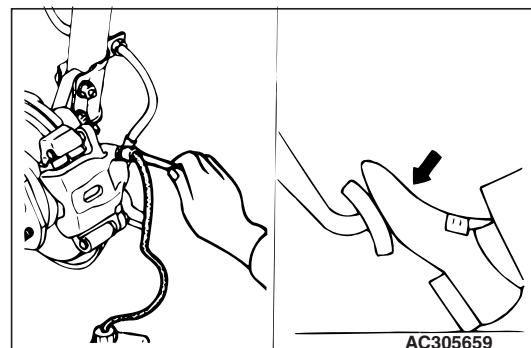

AC305659

1. Remove the cap of the bleeder screw, connect a vinyl tube, and place its other end in a receptacle.

### ⚠ CAUTION

If the reservoir tank completely runs out of fluid during operation, air will find way into the brake line. Pay attention, therefore, to the fluid level and replenish as necessary.

2. Loosen the bleeder screw and depress the brake pedal; supply new brake fluid when the level of the fluid within the reservoir tank decreases.


Specified brake fluid: DOT3 or DOT4

**CAUTION**

Use the specified brake fluid. Avoid using a mixture of the specified brake fluid and other fluid. If brake fluid is exposed to the air, it will absorb moisture; as water is absorbed from the atmosphere, the boiling point of the brake fluid will decrease and the braking performance will be seriously impaired. For this reason use a hermetically sealed 1 L or 0.5 L brake fluid container. Firmly close the cap of the brake fluid container after use.

- When fresh fluid has come to flow out from the vinyl tube, tighten the bleeder screw.

*NOTE: This change from existing to fresh fluid can be judged by change in colour of fluid that flows out.*

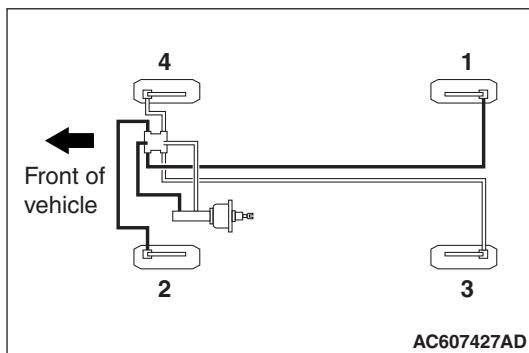


- Repeat above steps for other bleeder screws.

**MASTER CYLINDER BLEEDING**

When removed the master cylinder assembly, bleed the master cylinder in the following procedure to make bleeding of the brake pipeline easier (When no brake fluid is in the master cylinder).

- Fill the brake fluid reservoir with the brake fluid.
- Depress and hold the brake pedal.

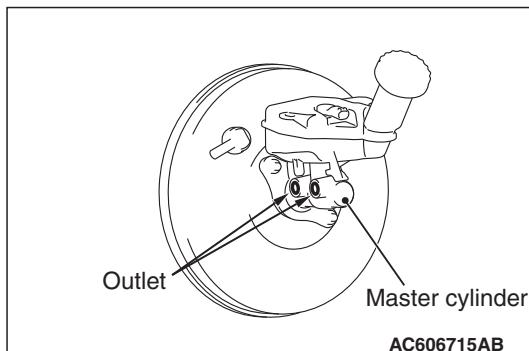


- Another operator closes the master cylinder outlets with his fingers.
- In this condition, release the brake pedal.
- Repeat Steps 2 to 4 for 3 or 4 times to fill the master cylinder with the brake fluid.

**A13. CHECK BATTERY CONDITION**

M6020203100548

**CAUTION**

- If the battery is used with the electrolyte level below the LOWER LEVEL indicator, there is the danger that explosions may occur, so add water to the battery until the electrolyte level is between the LOWER LEVEL and UPPER LEVEL indications.
- If too much water is added to make the level rise above the UPPER LEVEL indication, the electrolyte may leak out, so adjust so that the electrolyte level is between the LOWER LEVEL and UPPER LEVEL indications.

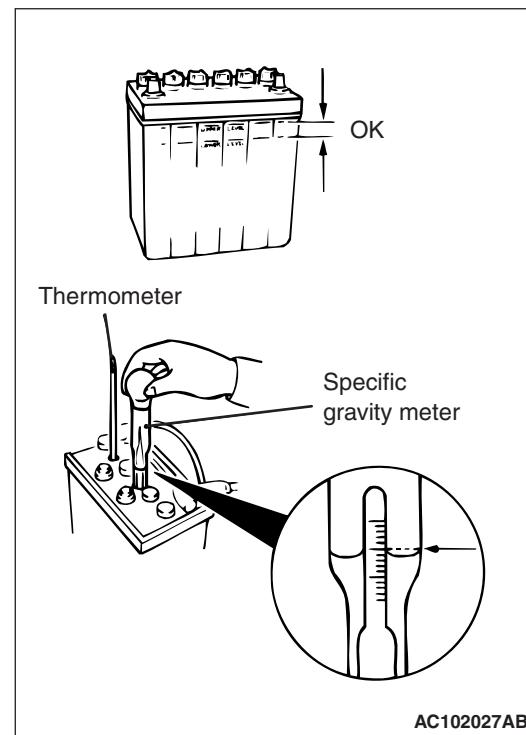

- Check that the battery electrolyte level is between the UPPER LEVEL and LOWER LEVEL indications.
- Use a specific gravity meter and a thermometer to measure the specific gravity.

**Standard value: 1.220 – 1.290 (electrolyte temperature 20°C)**

The specific gravity of the battery electrolyte changes according to the temperature, so the specific gravity when the electrolyte is at a temperature of 20°C can be calculated using the following formula. Use the converted value to judge whether the electrolyte is okay or not.

$$D_{20} = (t - 20) \times 0.0007 + D_t$$

**D<sub>20</sub>:** Specific gravity converted to a value for electrolyte temperature of 20°C

**t:** Electrolyte temperature at the time of measurement


**D<sub>t</sub>:** Actual specific gravity

## A14. REPLACE FUEL FILTER

M6020201901422

### <Petrol-powered vehicles>


1. Fuel line pressure reduction.

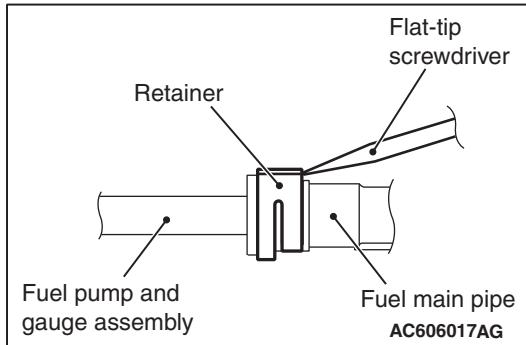


2. Insert a flat-tip screwdriver (6 mm wide and 1 mm thick) into the retainer of the fuel main pipe connector.

#### CAUTION

When pushing up the retainer of the fuel main pipe connector, pay attention to avoid damage to the retainer.

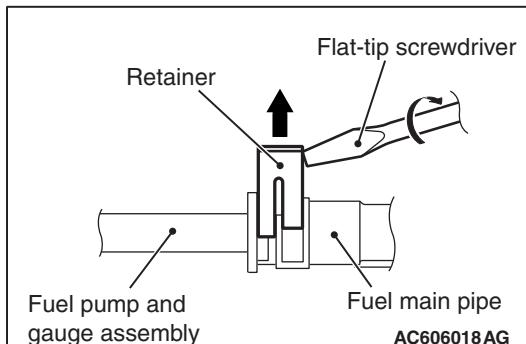

3. Turn the flat-tip screwdriver inserted into the retainer by 90 degrees to push up the retainer and unlock the fuel main pipe connector.

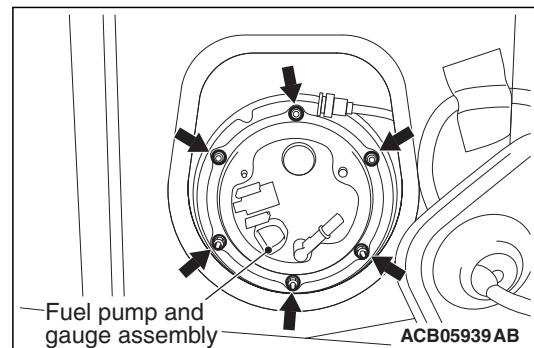

4. Remove the mounting nuts of fuel pump and gauge assembly.
5. Remove the fuel tank bracket and connector housing assembly and the fuel pump bracket plate.

#### CAUTION


Pay attention not to damage the gauge unit and the float of fuel pump and gauge assembly when withdrawing it from the service hole.

6. Remove the fuel pump and gauge assembly from the fuel tank. <2WD>

*NOTE: For disassembly and reassembly of the fuel pump and gauge assembly, refer to "Disassembly and reassembly of fuel pump and gauge assembly on the Workshop Manual.*



#### CAUTION

Pay attention not to damage the gauge unit and the float of fuel pump and gauge assembly when withdrawing it from the service hole.

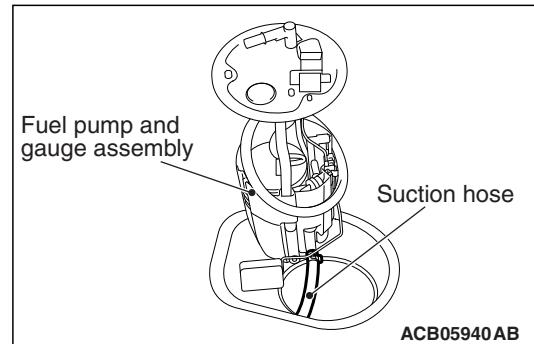

7. While withdrawing the fuel pump and gauge assembly from the service hole, disconnect the suction hose from the fuel pump and gauge assembly to remove the fuel pump and gauge assembly from the fuel tank. <4WD>

*NOTE: For disassembly and reassembly of the fuel pump and gauge assembly, refer to "Disassembly and reassembly of fuel pump and gauge assembly" on the Workshop Manual.*

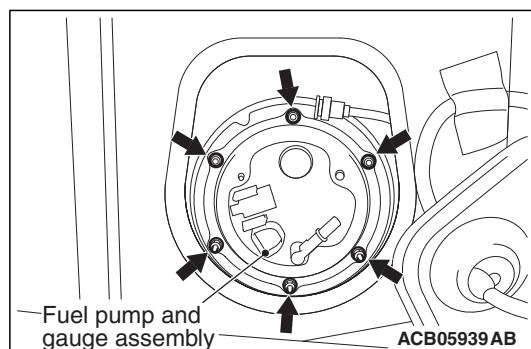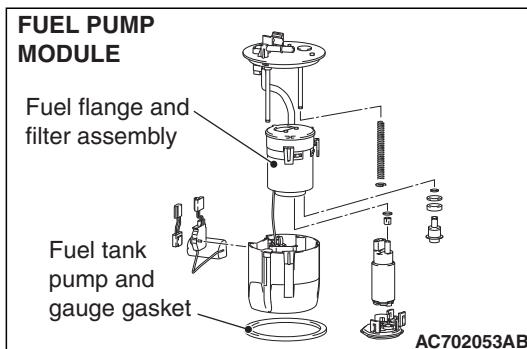

8. Replace the fuel flange and filter assembly and fuel tank pump and gauge gasket with a new one.


**CAUTION**

- Pay attention not to damage the gauge unit and the float of fuel pump and gauge assembly when installing it to the fuel tank from the service hole.
- When installing the fuel pump and gauge assembly to the fuel tank, check that the gauge moving area moves smoothly.

9. Install the fuel pump and gauge assembly to the fuel tank through the service hole. <2WD>

**CAUTION**

- Pay attention not to damage the gauge unit and the float of fuel pump and gauge assembly when installing it to the fuel tank from the service hole.
- Pay attention to prevent the float of fuel pump and gauge assembly from being trapped by the suction hose inside the fuel tank.
- When installing the fuel pump and gauge assembly to the fuel tank, check that the gauge moving area moves smoothly.

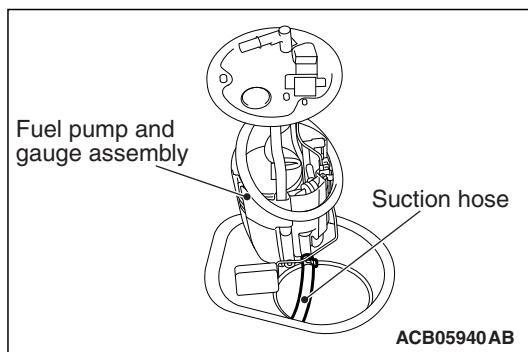


10. While inserting the fuel pump and gauge assembly into the fuel tank from the service hole, connect the suction hose to the fuel pump and gauge assembly to install the fuel pump and gauge assembly to the fuel tank. <4WD>

11. Install the fuel pump bracket plate and the fuel tank bracket and connector housing assembly.

12. Tighten the fuel pump and gauge assembly mounting nuts to the specified torque.


**Tightening torque:  $2.5 \pm 0.4 \text{ N}\cdot\text{m}$**

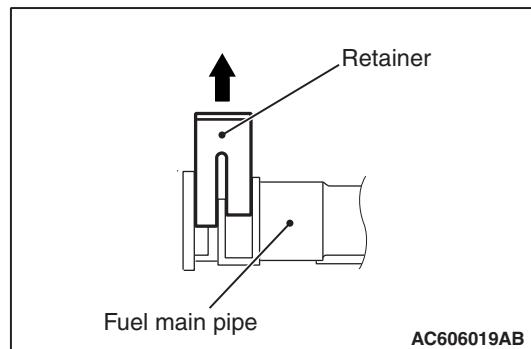


13. Pull up the retainer of fuel main pipe to unlock before installing.

**CAUTION**


- When pushing in the retainer of the fuel main pipe connector, pay attention to avoid damage to the retainer.
- After the installation of the fuel main pipe, slightly pull the fuel main pipe to check that it is connected securely. At this time, also check that there is approximately 1 mm play.

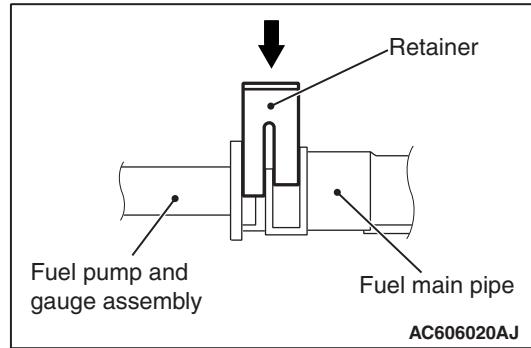

14. Install the fuel main pipe to the fuel pump and gauge assembly securely and push in the retainer of the fuel main pipe connector to lock the fuel main pipe and fuel pump and gauge assembly.

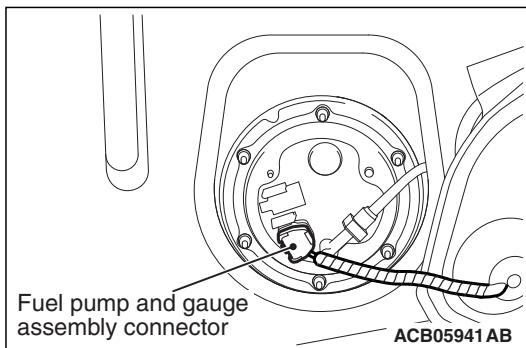


15. Connect the fuel pump and gauge assembly connector.

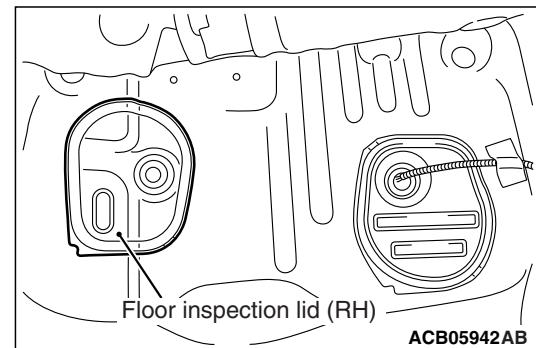


16. Install the floor inspection lid (LH).

17. Return the floor carpet to the original condition and install the second seat assembly.

**<Diesel-powered vehicles>**

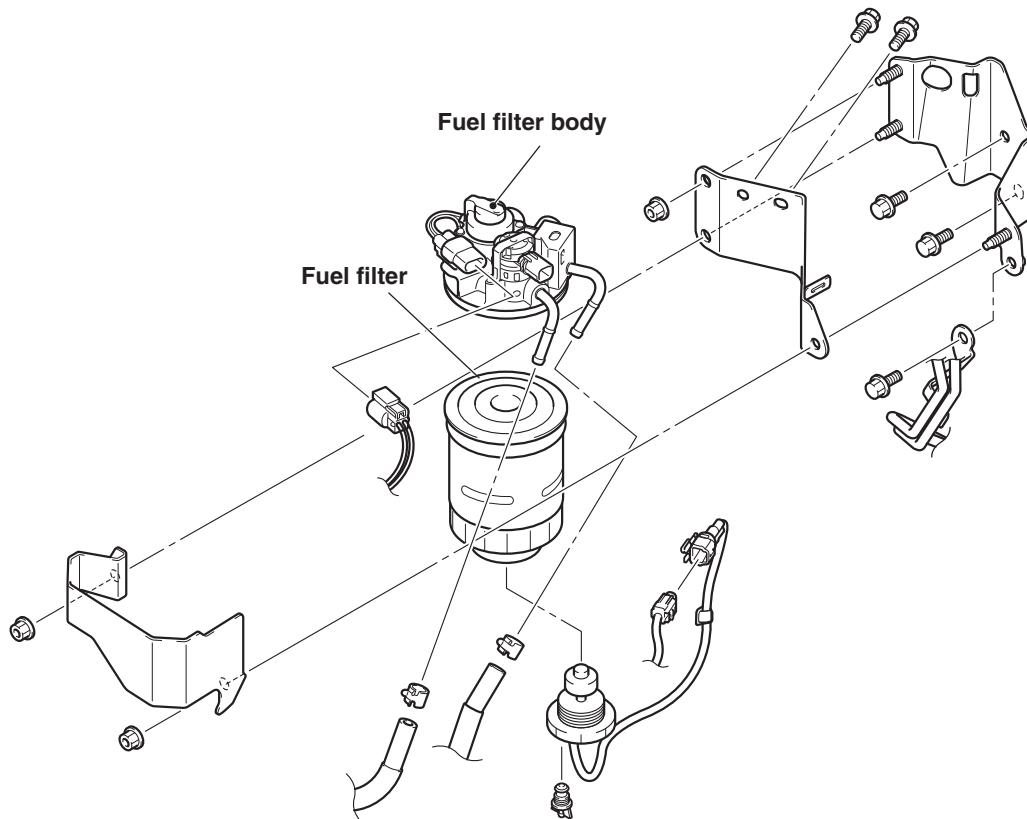

AC809283AC

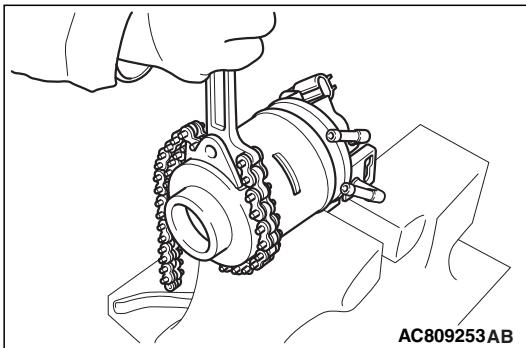

1. Fix the fuel filter body to a vice, and then remove the fuel filter using an oil filter wrench.
2. Clean the mounting surface on the fuel filter body side.
3. Tighten the fuel filter to the specified torque from the point where the gasket contacts the mounting surface.

**Tightening torque: Approximately 3/4 turn (17 ± 2 N·m)**

## A15.CHECK HIGH VOLTAGE CABLE FOR DAMAGE AND PROPER CONNECTION

M6020239500042

### HIGH-VOLTAGE COMPONENTS


The high-voltage components are described below. Also, wiring harness and connectors of high-voltage circuit are unified with a colour of orange.

- Main battery
- Front motor control unit [FPDU (Front Power Drive Unit)] (incorporating GCU [Generator Control Unit])
- Rear motor control unit [RMCU (Rear Motor Control Unit)]
- Motor (electric motor unit) <front and rear>
- Generator
- On-board charger/DC-DC converter
- Electric heater <Vehicles with electric heater>
- Main battery cable
- EV charger cable (regular charging)
- EV charger cable <Vehicles compatible with quick charging>
- Service plug
- Wiring harness and connector

### SERVICE PRECAUTIONS

#### **DANGER**


**When adjusting the high-voltage components, be sure to disconnect the service plug in order to shut off the high voltage.**

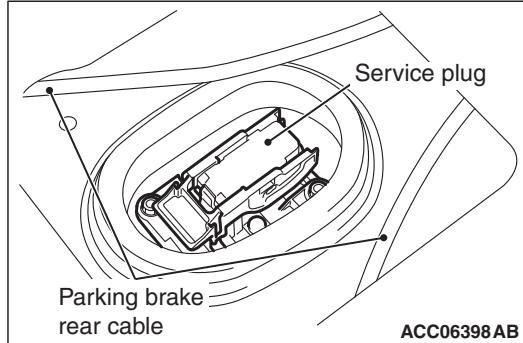


Remove the service plug under the rear centre seat according to the following procedure, which shuts off the high voltage to the high-voltage system.

### Service plug and service lid removal steps

1. Turn off the power supply mode of the electric motor switch.
2. Disconnect the negative terminal of the auxiliary battery.
3. Remove the service lid cover.

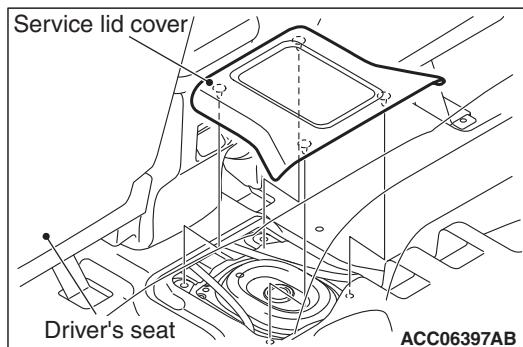

3. Remove the service lid cover.

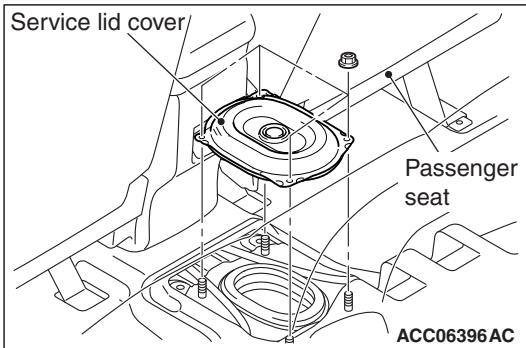

4. Remove the service lid mounting nut, and then remove the service lid.

**DANGER**


- **Wear the electric insulation gloves when pulling out the service plug.**
- **Do not lift the lever of service plug by halve. It is dangerous because the current is supplied during the lifting operation. Be sure to remove the service plugs all at once.**

**WARNING**



**The voltage of the smooth condenser in the inverter must be decreased thoroughly. Therefore, do not remove the service plug for 5 minutes after the negative terminal of the auxiliary battery is disconnected.**

**DANGER**

**After removing the service plug, insulate the plug installed part of the drive battery securely.**

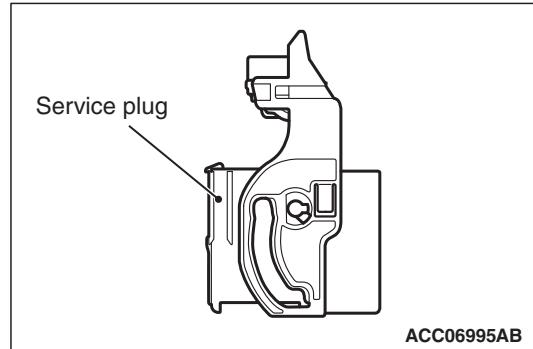


6. Remove the service plug.

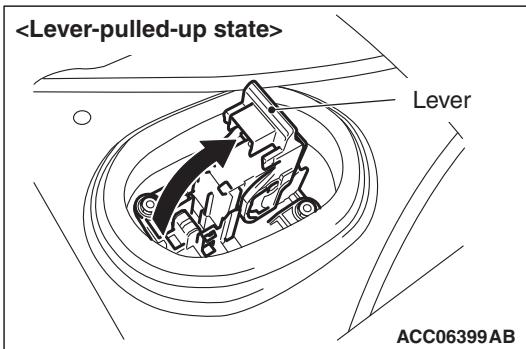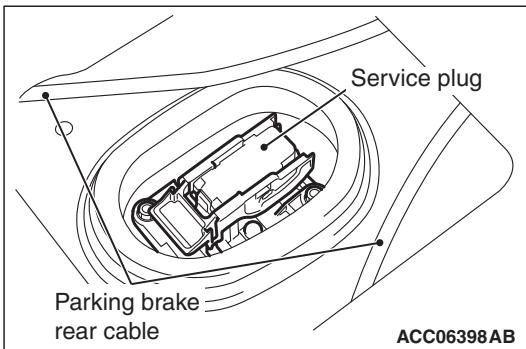


5. Lift the service plug lever.

## HIGH VOLTAGE CABLE CHECK

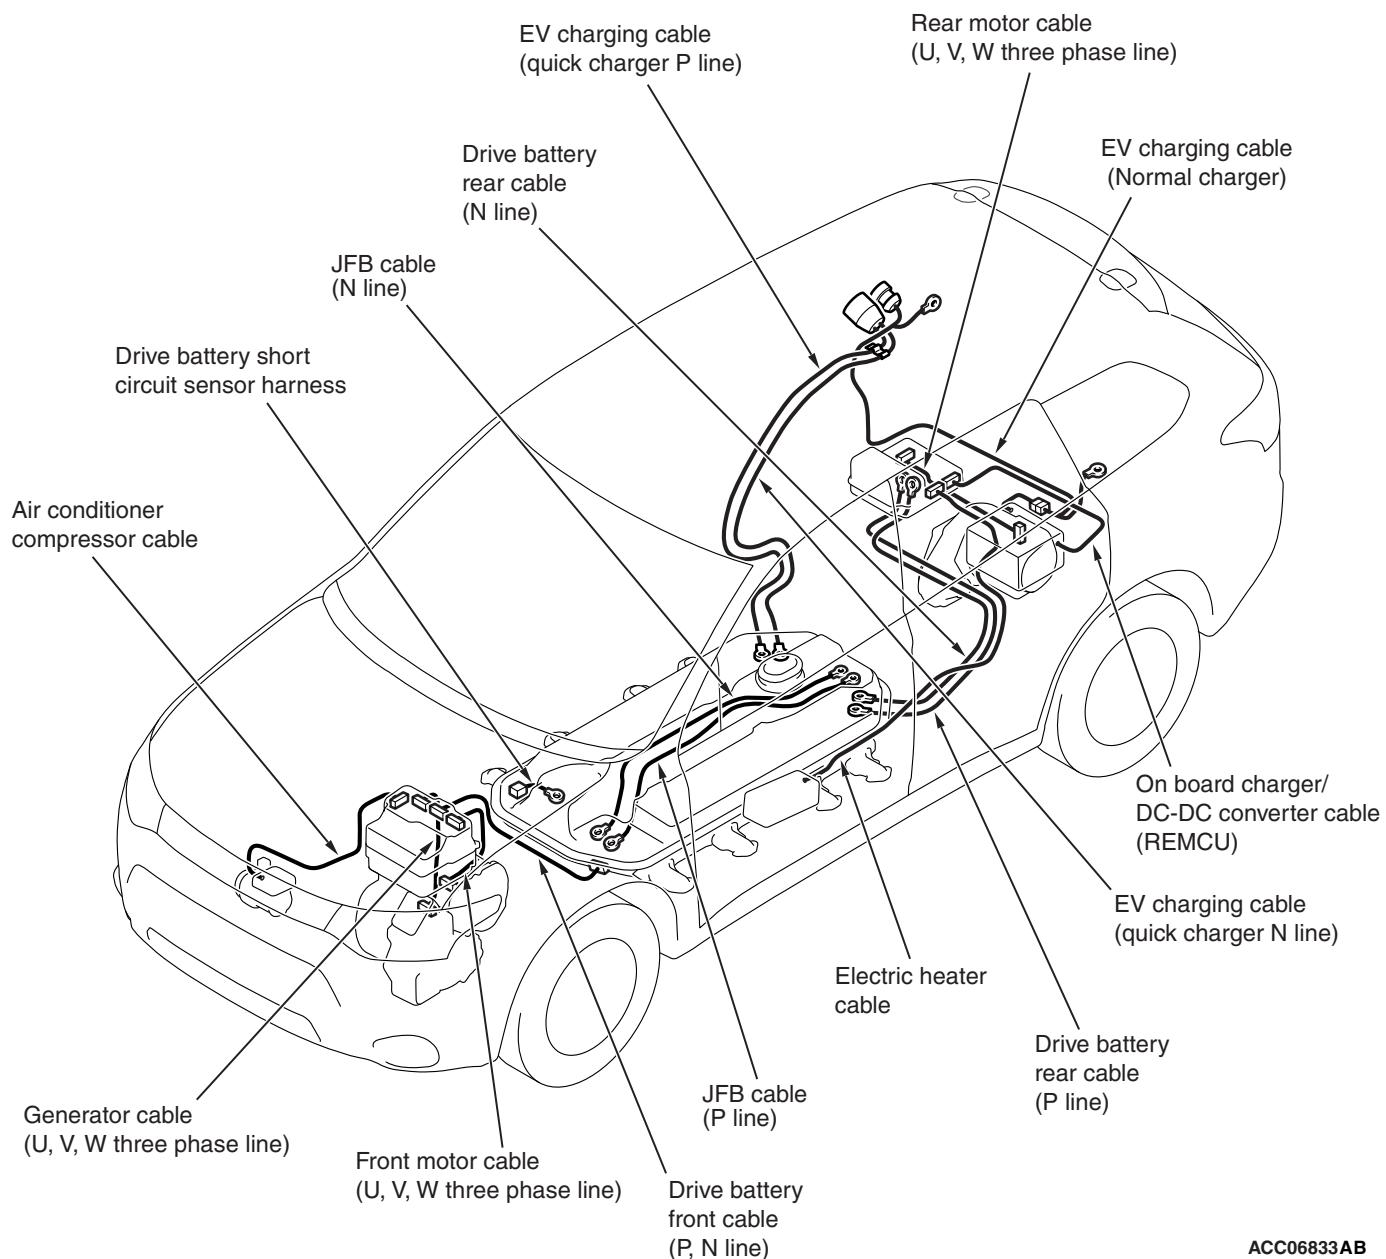

ACC06833AB

Check the high voltage cable for the following items:

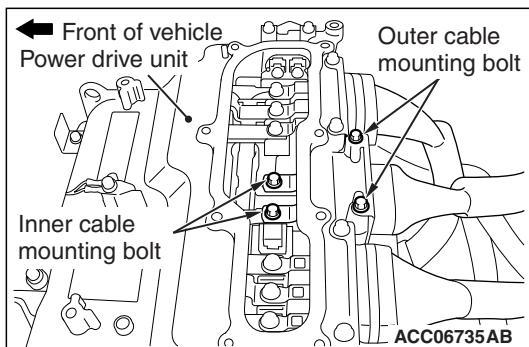

- Check the connections for looseness by wiggling connectors or checking tightening torque of threaded fasteners.
- Visually check electrical wires for damage and wire clamps for looseness.
- Check that electrical wires do not interfere with surrounding components.

## A16. CHECK FRONT MOTOR FOR COOLING OIL LEAKAGE

M6020209500049


1. Visually check the front motor, the generator and the electric oil pump for oil leaks.
2. If any oil leak is found, drain the oil.
3. Repair or replace the component where the oil leak is found.
4. Refill the oil, and then check that no oil leaks are found around the relevant component.

## A17. CECHK REAR MOTOR COOLANT LEVEL IN RESERVOIR

M6020209600046

### CAUTION

Do not operate the electric water pump when the coolant level in the radiator condenser tank is lower than the "LOW" line. If the electric water pump is operated, the electric water pump bearing may sustain damage, resulting in a electric water pump breakdown or service life reduction.

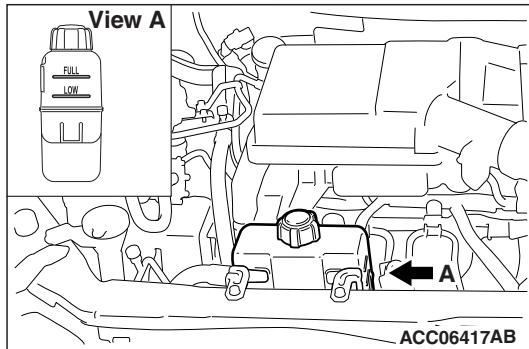

1. Check that the coolant level in the EV radiator condenser tank is in the range between the "FULL" line and "LOW" line.
2. Check that the coolant is not contaminated with oil and others.

*NOTE: The EV radiator condenser tank may contain sediment or the motor coolant may be discoloured. These are normal.*

## A18. CHANGE REAR MOTOR COOLANT

M6020209700043

### CAUTION


Do not operate the electric water pump when the coolant level in the radiator condenser tank is lower than the "LOW" line. If the electric water pump is operated, the electric water pump bearing may sustain damage, resulting in a electric water pump breakdown or service life reduction.

## MOTOR COOLANT DRAINING

### WARNING

*Be very careful because the coolant may be very hot.*

1. Remove the EV radiator condenser tank cap.

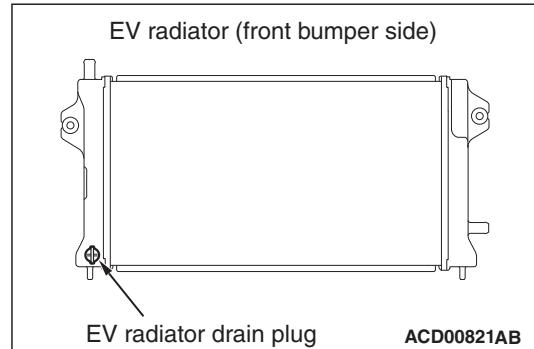

2. Remove the EV radiator drain plug, and drain the motor coolant.
3. Tighten the EV radiator drain plug to the specified torque.

**Tightening torque: 2.0 N·m**

## MOTOR COOLANT REFILLING

**CAUTION**

Use the Mitsubishi genuine Mitsubishi Motors Genuine Super Long Life Coolant Premium without adding water because the concentration is preadjusted to 50%.

1. Prepare the required volume of coolant using a jug so as to avoid running out of motor coolant during the refilling and causing any damage to the electric water pump.

**Recommended antifreeze: MITSUBISHI MOTORS GENUINE SUPER LONG LIFE COOLANT PREMIUM**

**Quantity: 6.5 L**

2. Remove the EV radiator condenser tank cap.
3. Fill the motor coolant up to the radiator condenser tank filler port.
4. According to either of the procedures below, start the "Coolant refilling control".

**(1) Not using M.U.T.-III**

- a. Pull the parking brake lever.
- b. Turn the power supply mode of the electric motor switch to ON.
- c. Press the ECO mode switch 10 times or more within seven seconds.

**(2) When using M.U.T.-III**

**CAUTION**

While the M.U.T.-III is communicating with the vehicle, the electric motor switch may not be turned off and no normally. Therefore, when you turn off the electric motor switch for that communication, wait for several seconds and then turn on it again (do not turn on it immediately).

- a. Turn off the power supply mode of the electric motor switch. Then connect the M.U.T.-III to the diagnosis connector.
- b. Turn the power supply mode of the electric motor switch to ON.
- c. From the system selection screen of M.U.T.-III, select "PHEV-ECU".
- d. From the PHEV-ECU screen, select "Special Function-test".
- e. Select the item No. 2 "Water pump actuate".

5. There will be a wait time of 20 seconds after the start of "Coolant refilling control" until the actuation of electric water pump. During this period, hold the prepared jug, and insert the jug tip into the EV radiator condenser tank filler port to be ready to fill the motor coolant.

6. Wait for 20 seconds. As the motor coolant level drops due to the intermittent operation of the electric water pump, refill the motor coolant up the radiator condenser tank filler port.

**NOTE:**

- In a case if the prepared coolant becomes about to run out, turn off the power supply mode of the electric motor switch beforehand, and stop the "Coolant refilling control" (at this time, perform the work with two people).
- Including the wait time, "Coolant refilling control" will be completed within ten minutes from the start (during this period, 31 times of 4-second operation are included).

If the motor coolant change is not completed, or if the control is stopped during the work, the refilling can be resumed by starting "Coolant refilling control" once again.

- The water pump cycles on and off follows:

**Not using the M.U.T.-III: ON for four seconds and OFF for 15 seconds**

**Using the M.U.T.-III: ON for four seconds and OFF for 30 seconds**

7. Until the motor coolant level stops decreasing by the electric water pump operation, repeat the step 6 above.

*NOTE: The motor coolant refilling will be complete in about 3 to 4 minutes.*

8. For the air bleeding of the EV cooling system, operate the electric water pump for at least one minute according to either of the procedures below.

**(1) Not using M.U.T.-III**

- a. Operate the electric motor switch with the brake pedal depressed.
- b. Turn on the power supply mode of the electric motor switch to make the READY (ready to drive) indicator illuminate for at least one minute.

*NOTE: The electric water pump will run as long as the READY (ready to drive) indicator illuminates. If the READY (ready to drive) indicator continues to illuminate for at least one minute, the electric water pump has been activated for at least one minute.*


**(2) When using M.U.T.-III**

**CAUTION**

**While the M.U.T.-III is communicating with the vehicle, the electric motor switch may not be turned off and no normally. Therefore, when you turn off the electric motor switch for that communication, wait for several seconds and then turn on it again (do not turn on it immediately).**

- a. Turn off the power supply mode of the electric motor switch. Then connect the M.U.T.-III to the diagnosis connector.
- b. Turn the power supply mode of the electric motor switch to ON.
- c. Make the READY (ready to drive) indicator illuminate.
- d. From the system selection screen of M.U.T.-III, select "PHEV-ECU".
- e. From the PHEV-ECU screen, select "Actuator test".
- f. Select the item No. 8 "Water pump actuate".

9. Turn off the power supply mode of the electric motor switch to deactivate the electric water pump.

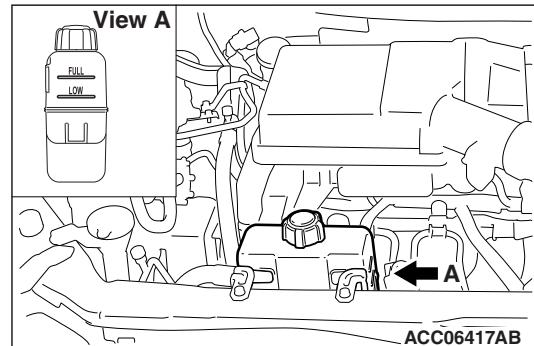

10. When the motor coolant level in EV radiator condenser tank is at the "LOW" line or higher, the air bleeding is complete.
11. If the motor coolant level in EV radiator condenser tank is at the "LOW" or lower, fill the motor coolant to the "FULL" line, and then perform the air bleeding of above step 8 again.
12. Adjust the coolant level so that the motor coolant level in EV radiator condenser tank comes to near the "FULL" line when the electric water pump is stopped.
13. Tighten the EV radiator condenser tank cap securely.


## OPERATIONS UNDER THE VEHICLE

### B1. CHECK SUSPENSION SYSTEM FOR DAMAGE AND LOOSENESS


M6020300100739

1. Check each portion of suspension for damage visually.

#### FRONT SUSPENSION

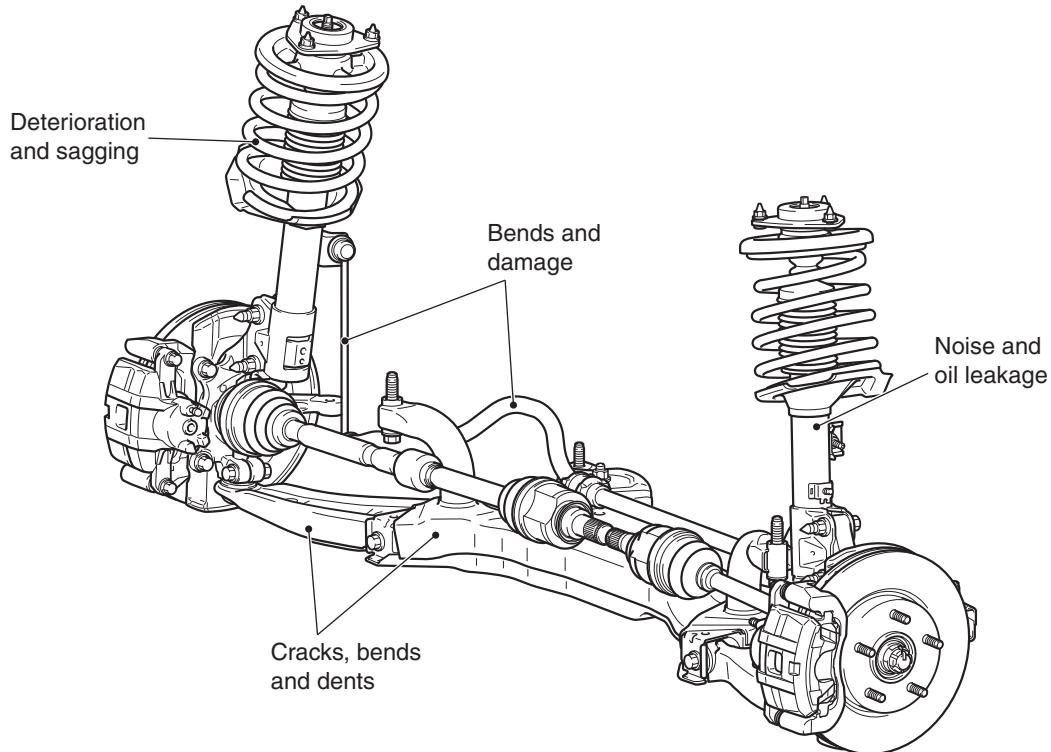

#### REAR SUSPENSION

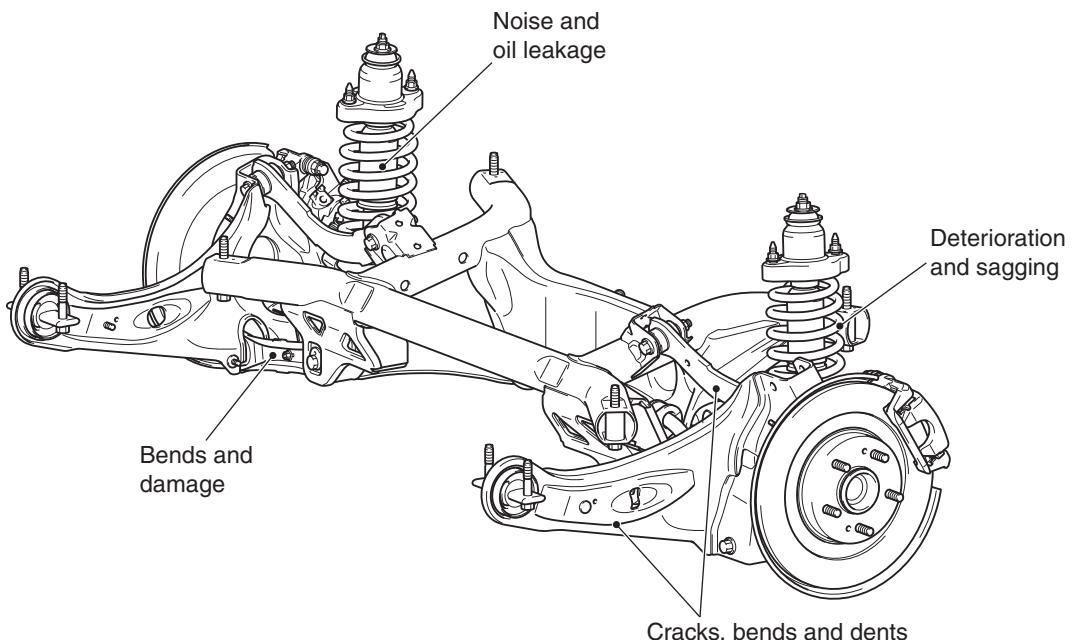


ACC00842

**B2. CHECK SUSPENSION ARM BALL JOINTS FOR PLAY, AND DUST COVERS FOR DAMAGE**

**LOWER ARM BALL JOINT AXIAL PLAY CHECK**

M6020300200491

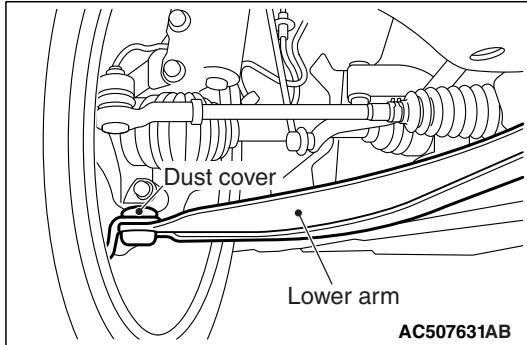


1. Raise the vehicle.
2. Move the lower arm up and down with your hands to check for an excessive play in the axial direction of the ball joint. If there is an excessive play, replace the lower arm assembly.

**DUST COVERS FOR DAMAGE**

Check dust covers for damage.

**B3. CHECK DRIVESHAFT BOOTS FOR DAMAGE**


M6020300400569

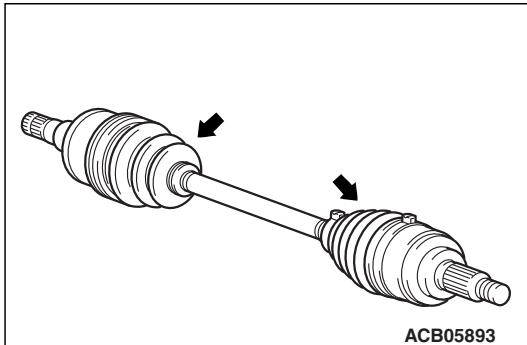


Check the driveshaft boots for damage.

**B4. CHECK STEERING LINKAGE FOR DAMAGE AND LOOSE CONNECTIONS (INCLUDING SEALS AND BOOTS)**

M6020300500522

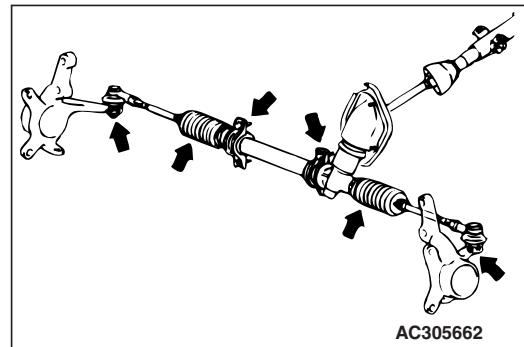

1. Move the steering wheel bit by bit to the left or right, and check to be sure that there is no play or looseness in the linkage coupling, that the installation is not loose, and that the rod or arm is not bent or damaged.

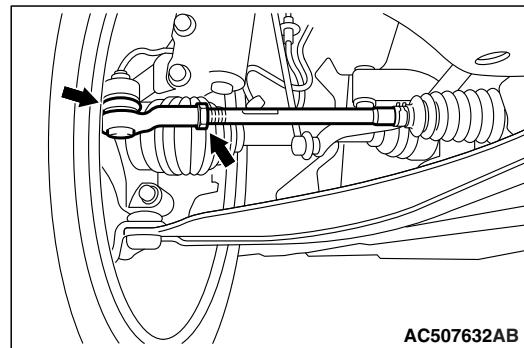

2. Check to be sure that the seal and boot of the ball joint are correctly installed (in the correct position), and that they are not damaged.
3. Check tie-rod end lock nut for looseness. If lock nut is loose, adjust toe-in and then tighten lock nut to the specified torque.

**Tightening torque:  $52 \pm 2 \text{ N}\cdot\text{m}$**

**B5. CHECK MANUAL TRANSMISSION FOR OIL LEAKAGE (IN CASE OF LEAKAGE, CHECK THE OIL LEVEL)**



M6020302300494

**CHECK OIL LEAKAGE**


Check the transmission case for oil leakage visually or by touching it with hand.

*NOTE: If an oil leakage is not detected, the oil level check is necessary.*

## CHECK OIL LEVEL

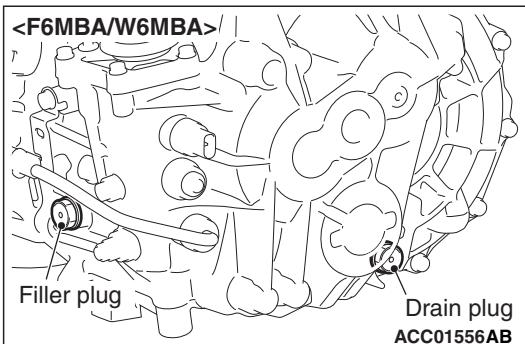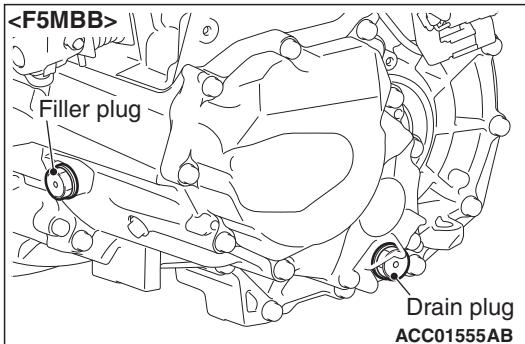

1. Remove the filler plug and gasket.

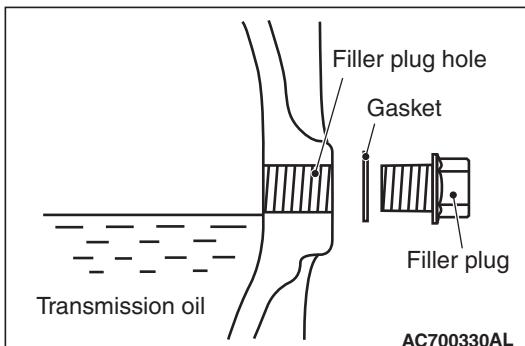

2. Check that the oil level is up to the lower edge of the filler plug hole.
3. Check that the oil is not noticeably dirty.
4. Install the filler plug and new gasket, then tighten them to the specified torque.

**Tightening torque:****<F5MBB>  $49 \pm 19 \text{ N}\cdot\text{m}$** **<F6MBA/W6MBA>  $39 \pm 11 \text{ N}\cdot\text{m}$** 

## B6. CHECK TRANSFER FOR OIL LEAKAGE

**(IN CASE OF LEAKAGE, CHECK THE OIL LEVEL)**


M6020302400457

**CHECK OIL LEAKAGE**


Check the transfer case for oil leakage visually or by touching it with hand.

*NOTE: If an oil leakage is not detected, the oil level check is necessary.*

## CHECK OIL LEVEL

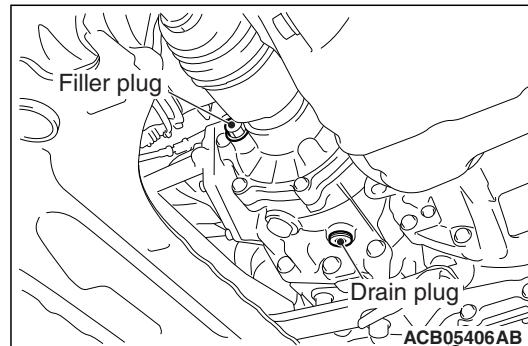

1. Remove the filler plug and gasket.

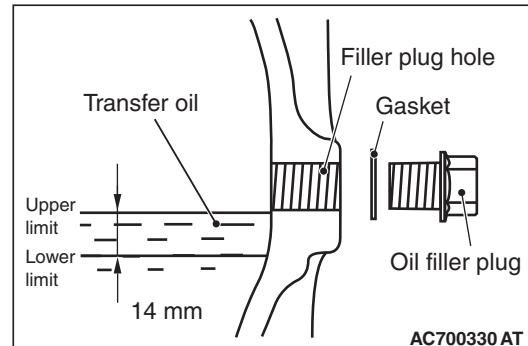

2. Check that the oil level is in between the upper limit (bottom of the filler plug hole) and the lower limit as shown.
3. Check that the oil is not excessively foul and has moderate viscosity.
4. If the oil level is not in between the upper limit and the lower limit, refill the specified oil to the bottom of the oil filler plug hole.




**Transfer oil: MITSUBISHI MOTORS GENUINE  
super hypoid gear oil API classification GL-5  
SAE80**

5. Install the filler plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

## B7. CHANGE GEAR OIL IN MANUAL TRANSMISSION

M6020300801021

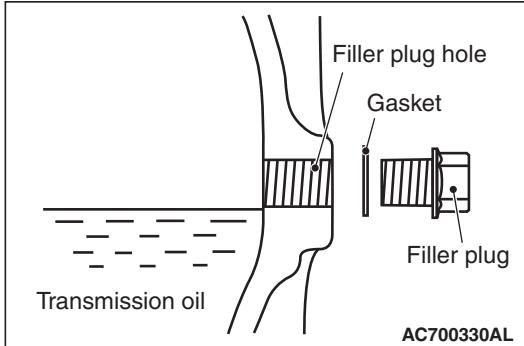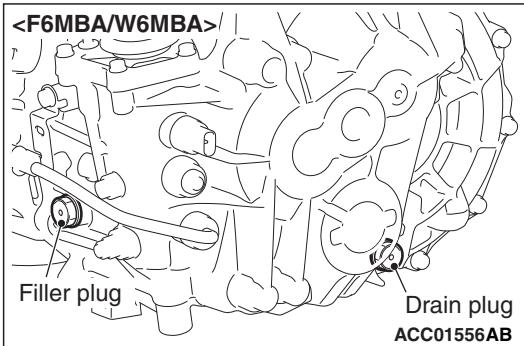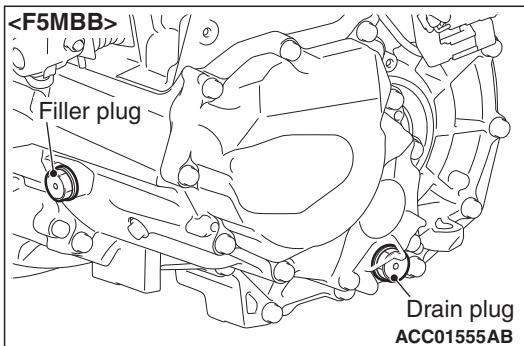

1. Remove the filler plug and gasket.
2. Remove the drain plug and gasket, and drain the oil.
3. Tighten the drain plug and new gasket, to the specified torque.

**Tightening torque:**

$49 \pm 19 \text{ N}\cdot\text{m}$  <F5MBB>

$39 \pm 11 \text{ N}\cdot\text{m}$  <F6MBA/W6MBA>

4. Fill with MITSUBISHI MOTORS GENUINE NEW MULTI GEAR OIL API classification GL-3 SAE 75W-80 until the level comes to the lower portion of filler plug hole.

**Quantity:**

2.5 L <F5MBB>

2.0 L <F6MBA/W6MBA>

5. Install the filler plug and new gasket, then tighten them to the specified torque.



**Tightening torque:**

$49 \pm 19 \text{ N}\cdot\text{m}$  <F5MBB>

$39 \pm 11 \text{ N}\cdot\text{m}$  <F6MBA/W6MBA>

## B8. CHANGE GEAR OIL IN TRANSFER

M6020302600495

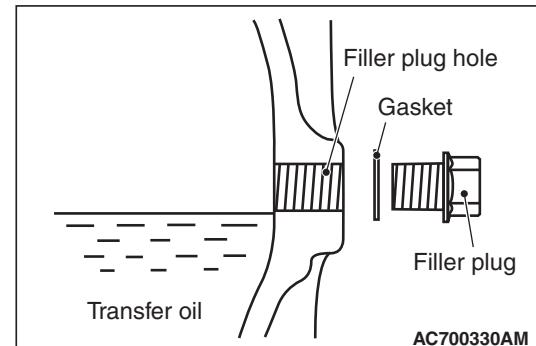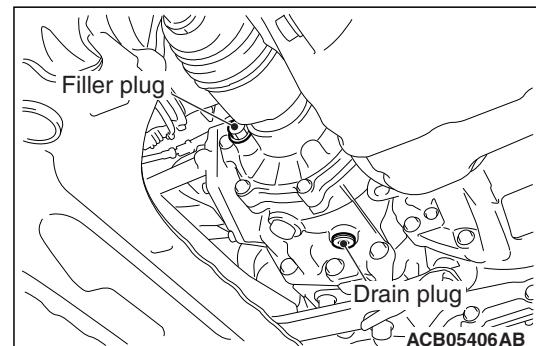

1. Remove the drain plug and gasket, to drain the transfer oil.
2. Install the drain plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

3. Remove the filler plug and gasket, and fill the transfer oil up to the lower edge of the filler plug hole.

**Transfer oil: MITSUBISHI MOTORS GENUINE Super hypoid gear oil API classification GL-5 SAE80**

**Filling amount: 0.47 L**

4. Install the filler plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

## B9. CHECK REAR DIFFERENTIAL FOR OIL LEAKAGE (IN CASE OF LEAKAGE, CHECK THE OIL LEVEL)


M6020302700298

### CHECK OIL LEAKAGE


Check the area around the differential for oil leakage visually or by touching it with hand.

*NOTE: If an oil leakage is not detected, the oil level check is necessary.*

### CHECK OIL LEVEL

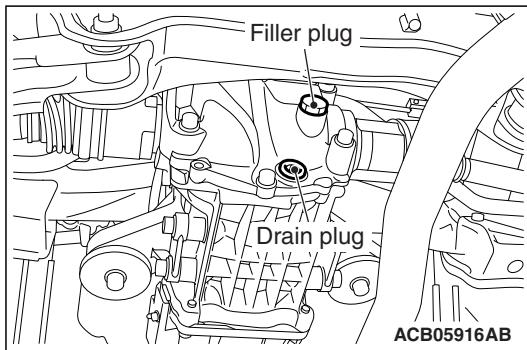

1. Remove the filler plug.

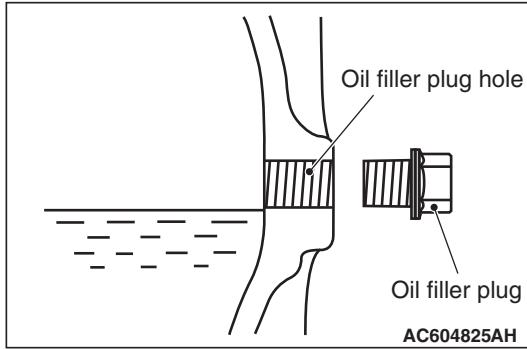


2. Check that the oil level is up to the lower edge of the oil filler plug hole.
3. Check that the oil is not noticeably dirty.
4. Tighten the filler plug to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**


## B10. CHANGE GEAR OIL IN REAR DIFFERENTIAL

M6020301800300

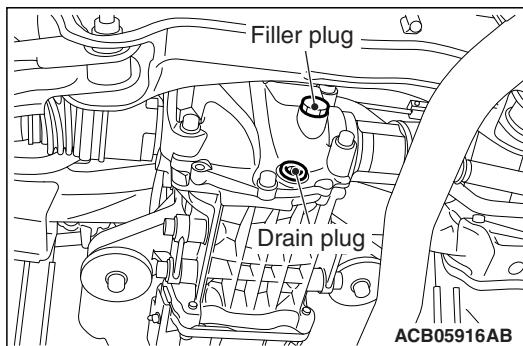

1. Remove the filler plug.
2. Remove the drain plug and drain oil.
3. Tighten the drain plug to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

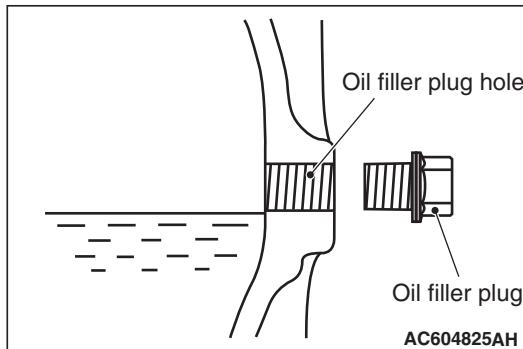

4. Fill the oil until the level comes to the lower portion of the filler plug hole.

**Specified gear oil: MITSUBISHI MOTORS GENUINE Super Hypoid gear oil API classification GL-5, SAE 80**  
**Amount to use: approx. 0.4 L**

5. Tighten the filler plug to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

## B11. CHECK EXHAUST PIPE CONNECTIONS FOR GAS LEAKAGE, AND CHECK PIPE INSTALLATION

M6020301200858

1. Confirm that the exhaust pipe does not interfere with any body components.
2. Check the exhaust pipe for damage by stones, etc.
3. Start the engine and check for gas leaks from the exhaust pipe connections.

**B12. CHECK FRONT TRANSAXLE FOR OIL LEAKAGE (In case of leakage, check the oil level)**


M6020303300011

**CHECK OIL LEAKAGE**


Check the transmission case for oil leakage visually or by touching it with your hand.

*NOTE: If an oil leakage is determined, check the oil level.*

**CHECK OIL LEVEL**

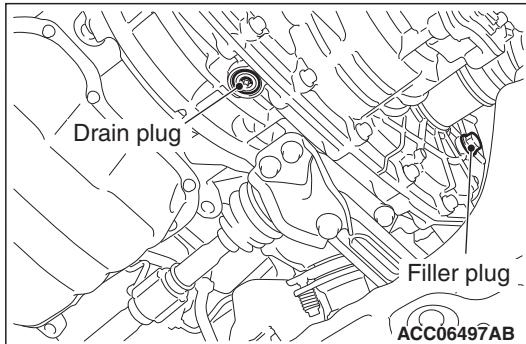

1. Remove the filler plug and gasket.

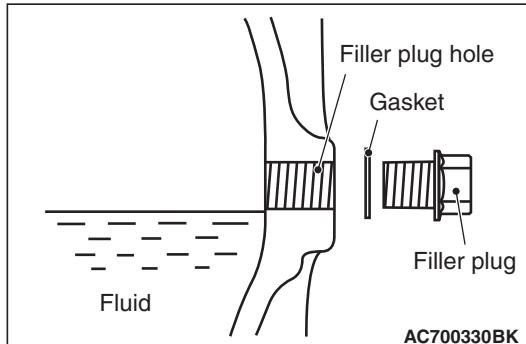

2. Check that the fluid level is just below the lower edge of the filler plug hole.
3. Check that the fluid is not excessively foul and has moderate viscosity.
4. If the level is below the filler plug hole, add the specified fluid up to the end of the filler plug hole.

**Brand name:**

**MITSUBISHI MOTORS GENUINE ATF SP III**

5. Install the filler plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

**B13. CHECK REAR TRANSAXLE FOR OIL LEAKAGE (In case of leakage, check the oil level)**

M6020303400018


**CHECK OIL LEAKAGE**

Check the transmission case for oil leakage visually or by touching it with your hand.


*NOTE: If an oil leakage is not detected, the oil level check is necessary.*

**CHECK OIL LEVEL**

1. Remove the weight from the rear suspension crossmember.

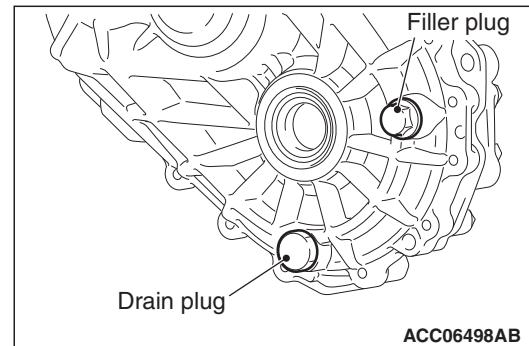

2. Remove the filler plug and gasket.

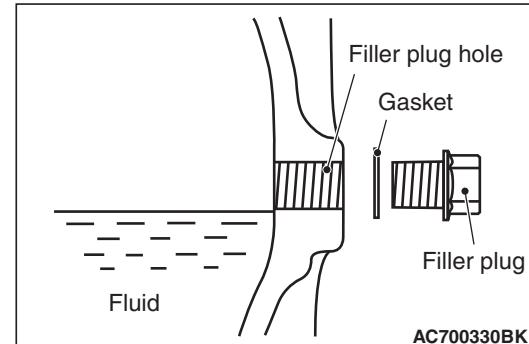

3. Check that the fluid level is just below the lower edge of the filler plug hole.
4. Check that the fluid is not excessively foul and has moderate viscosity.
5. If the level is below the filler plug hole, add the specified fluid up to the end of the filler plug hole.

**Brand name:**

**MITSUBISHI MOTORS GENUINE ATF SP III**



6. Install the filler plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

7. Install the weight to the rear suspension crossmember.

## B14. CHANGE FRONT TRANSAXLE OIL

M6020303500015

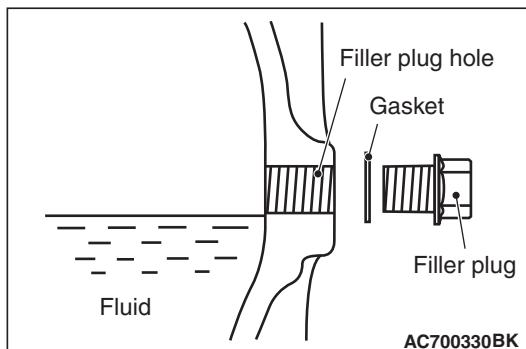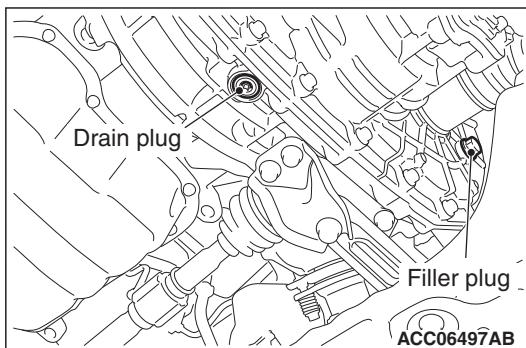

1. Remove the drain plug and gasket, to drain the fluid.
2. Install the drain plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $35 \pm 4 \text{ N}\cdot\text{m}$**

3. Remove the filler plug and gasket, and fill the fluid up to the lower edge of the filler plug hole.

**Brand name:**

**MITSUBISHI MOTORS GENUINE ATF SP III**

**Quantity: Approximately 3.1 L**



**NOTE:**

1. If the valve body assembly is replaced, refill the fluid and then install the filler plug with the gasket.  
**Quantity: Approximately 3.1 L**
2. Drive the vehicle at 40 km/h for at least five minutes, and then refill the fluid up to the lower edge of the filler plug hole.  
**Quantity: Addition of approximately 0.4 L**
4. Install the filler plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

## B15. CHANGE REAR TRANSAXLE OIL

M6020303600012

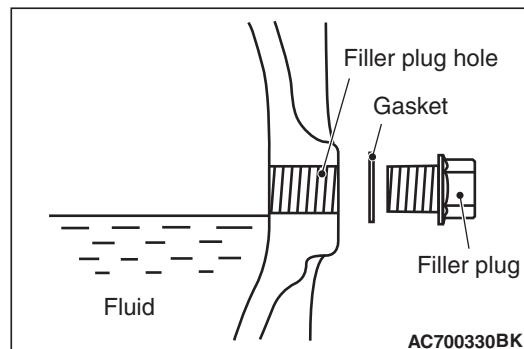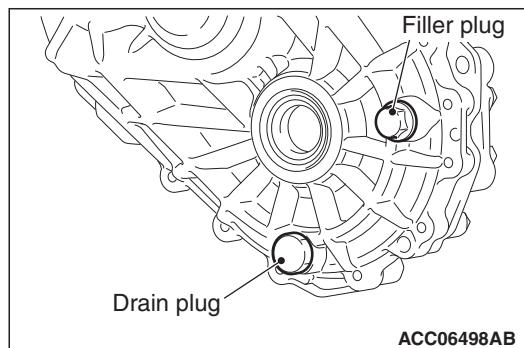

1. Remove the drain plug and gasket, to drain the fluid.
2. Install the drain plug and new gasket, and tighten to the specified torque.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

3. Remove the weight from the rear suspension crossmember.
4. Remove the filler plug and gasket, and fill the fluid up to the lower edge of the filler plug hole.

**Brand name:**

**MITSUBISHI MOTORS GENUINE ATF SP III**

**Quantity: 0.85 L**

5. Install the filler plug and new gasket, and tighten to the specified torque.
6. Install the weight to the rear suspension crossmember.

**Tightening torque:  $32 \pm 2 \text{ N}\cdot\text{m}$**

## OPERATIONS INSIDE THE VEHICLE

C1. CHECK BRAKE PEDAL AND CLUTCH  
PEDAL FOR FREE PLAY


M6020400100996

**CAUTION**

Do not apply grease or lubricant to the switch and the switch installation section to avoid malfunction of the switch. In addition, do not use gloves which have grease on them.

**BRAKE PEDAL HEIGHT CHECK**

1. Turn up the floor carpet under the brake pedal.
2. Remove the stop lamp switch.

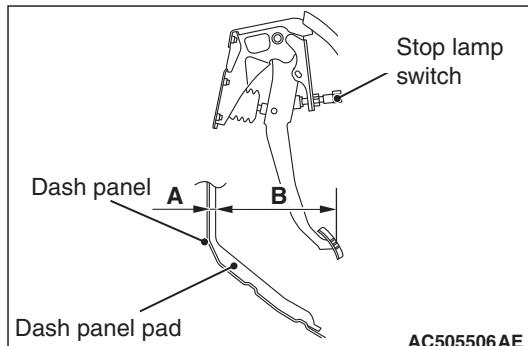


3. Use a needle or similar tool to measure the dimension A in the figure (distance from the dash panel pad surface to the dash panel).
4. Measure the dimension B in the figure (distance from the pedal pad surface to the dash panel pad surface).
5. Make sure that the total of the dimensions A and B measured in Steps 3 and 4 (brake pedal height) is within the standard value.

**Standard value (A+B): 221.8 – 227.8 mm**

6. When the brake pedal height is not within the standard value, inspect the brake pedal in the following procedure.
  - (1) Remove the brake pedal assembly.
  - (2) Check the removed brake pedal assembly for distortion, and replace it when deformed.
  - (3) Install the brake pedal assembly.


*NOTE: When installing, compress the dash panel pad.*

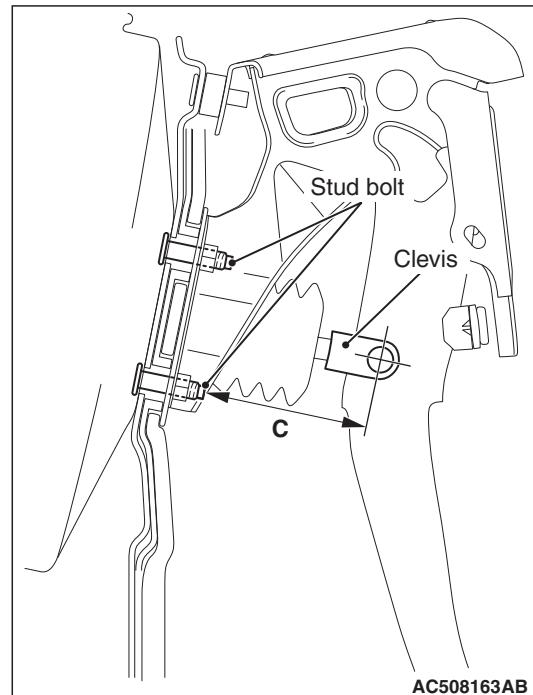

- (4) Measure the brake pedal height again, and make sure that it is within the standard value (A+B). When the measured value is not within the standard value, measure the dimension C in the figure (distance from the stud bolt end to the clevis hole centre), and make sure it is within the standard value (C).

**Standard value (C): 75.8 – 80.2 mm**

- (5) When the measured value is not within the standard value (C), replace the brake booster.

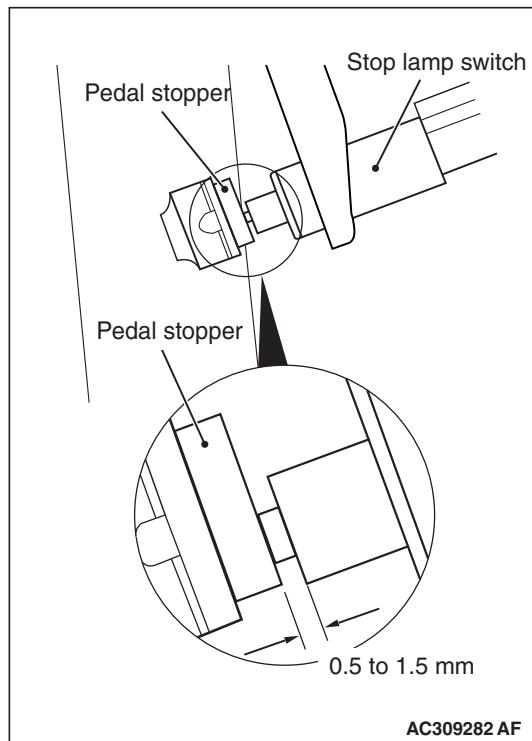


7. After checking the brake pedal height, install the stop lamp switch in the following procedure:
  - (1) Screw in the stop lamp switch until its thread contacts the pedal stopper, then turn the switch approximately one eighth of a clockwise turn to fix it. While doing this, pull and hold the brake pedal by hand.
  - (2) Check that the clearance between the stop lamp switch and the pedal stopper is as shown in the figure.

**CAUTION**

**Make sure that the stop lamp is not illuminated when the brake pedal is not depressed.**

- (3) Connect the stop lamp switch connector.
8. Recover the floor carpet under the brake pedal.

## BRAKE PEDAL FREE PLAY CHECK AND ADJUSTMENT

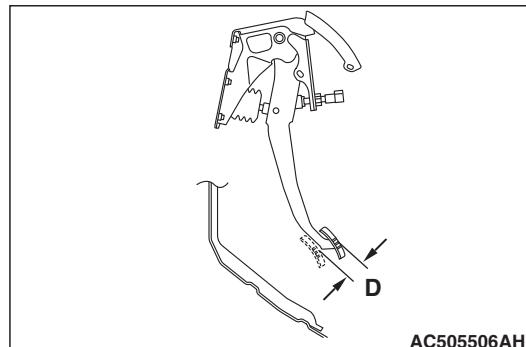


1. With the engine stopped, depress the brake pedal 2 or 3 times to relieve the vacuum in the brake booster. Then, press the brake pedal with your finger and check if the pedal stroke until the pedal becomes heavy (play) is within the standard value.

**Standard value (D): 3 – 8 mm**

2. When the brake pedal free play is not within the standard value, check the brake pedal-to-clevis pin looseness, clevis pin-to-booster operating rod looseness, brake pedal height, and stop lamp switch position, and adjust or replace as necessary.

## BRAKE PEDAL-TO-FLOOR PANEL CLEARANCE CHECK AND ADJUSTMENT

1. Turn up the floor carpet under the brake pedal.

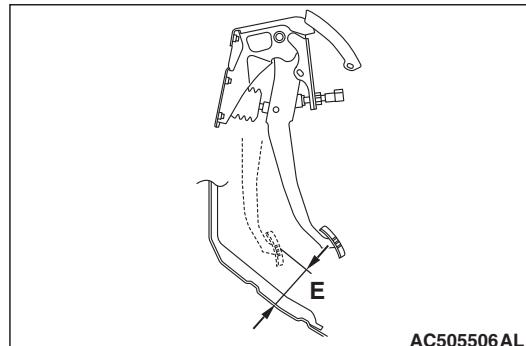


2. Start the engine and depress the brake pedal with approximately 500 N, and measure clearance between the brake pedal and the floor panel.

**Standard value (E): 65 mm or more**


3. When the clearance is not within the standard value, check for the air in the brake line and thickness of the disc brake pad, and correct or replace as necessary.
4. Recover the floor carpet under the brake pedal.

## CLUTCH PEDAL CHECK

*NOTE: This clutch pedal assembly is unadjustable because of its structure.*

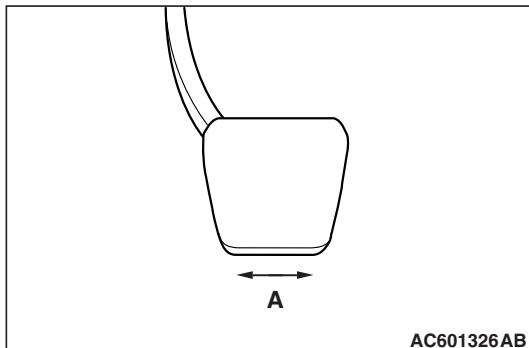

1. Measure the clutch pedal looseness (A).  
**Standard value (A): 4 mm or less**
2. When the clutch pedal looseness is not within the standard value, the clutch pedal assembly may be faulty. In this case, check the clutch pedal assembly, and replace it if necessary.

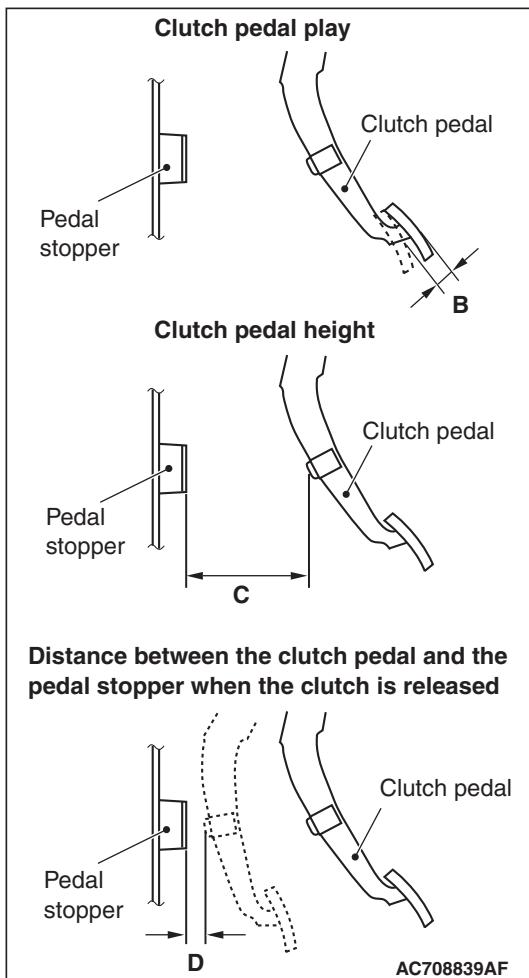

3. Check that the clutch pedal play (B), the clutch pedal height (C) and the clearance (D) between the clutch pedal and the pedal stopper when the clutch is disengaged are within the standard value.

**Standard value (B): 4 – 9 mm**

**Standard value (C):**

**99 – 105 mm <4J1-LHD>**

**110 – 116 mm <4N1-LHD>**

**77 – 82 mm <4N1-RHD>**

**Standard value (D):**

**15 mm or more <LHD>**

**11 mm or more <RHD>**

4. When the clutch pedal play, clutch pedal height and the clearance between the clutch pedal and pedal stopper when the clutch is disengaged are not within the standard value, the air may be intruded into the hydraulic system, or either the clutch master cylinder or the concentric slave cylinder may be faulty. In this case, perform air bleeding, or check the clutch master cylinder or the concentric slave cylinder, and replace it if necessary.

## C2. CHECK PARKING BRAKE LEVER STROKE AND PLAY

M6020400200904


### STROKE CHECK (CONTROL FORCE APPROXIMATELY 200 N)

**Standard value: 6 – 7 notches**

### STROKE ADJUSTMENT

If the parking brake lever stroke is out of the standard range, adjust as described below:

1. Remove the rear floor console front panel assembly.

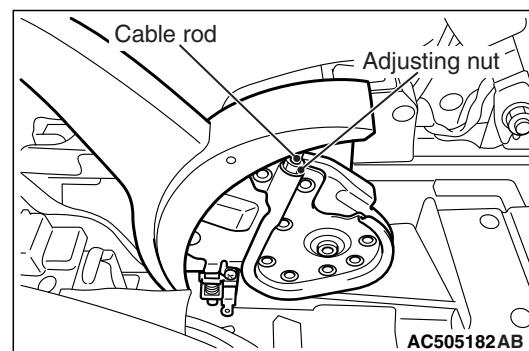

2. Loosen the adjusting nut to the end of the cable rod in order to allow slack in the cables.

3. Check that the parking brake lever on the caliper side is touching the parking brake lever bracket.

*NOTE: If the parking brake lever is not touching the parking brake lever bracket, the parking brake cable might be stuck or routed incorrectly, or there might be a problem with the automatic adjustment mechanism inside the rear brake calipers. Therefore, it is necessary to check the parking brake cable and to disassemble and inspect the rear brake calipers.*

4. Depress the brake pedal repeatedly until the brake pedal has no change in its stroke.

*NOTE: Depressing the brake pedal repeatedly adjusts pad clearance correctly.*

#### ⚠ CAUTION

**Be careful that the parking brake lever notch number should be within the standard range. If the notch number is too low, rear brake dragging can be caused.**


5. Adjust the parking brake lever stroke to the standard value by turning the adjusting nut. After adjustment, check that there is no free play between the adjusting nut and the parking brake lever.

6. After the parking brake lever stroke is adjusted, raise the rear of the vehicle. Release the parking brake, and turn the rear wheels to confirm that the rear brakes are not dragging.

### C3. REPLACE AIR PURIFIER FILTER


M6020400300495

1. Remove the glove box.
2. Loosen the two lugs as shown to replace the clean air filter.

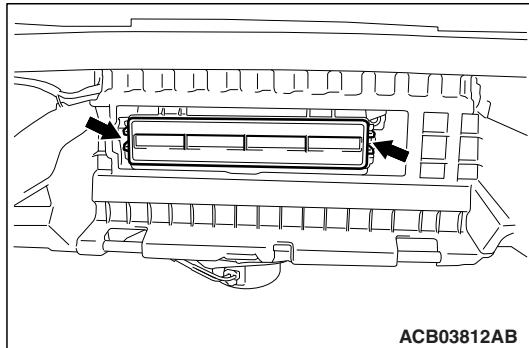

ACB03812AB

*NOTE: The arrow on the clean air filter should face downwards.*

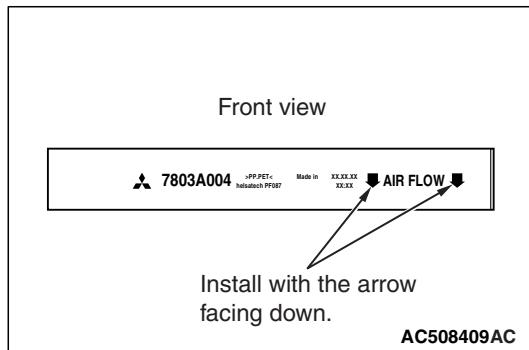

AC508409AC

3. Install the glove box.

## OPERATIONS OUTSIDE THE VEHICLE

### D1. CHECK WHEEL ALIGNMENT

M6020500101435

#### FRONT WHEEL ALIGNMENT

#### ⚠ CAUTION

**Perform a calibration for the ASC-ECU to learn the steering wheel sensor neutral point <Vehicles with ASC>.**


- Before the wheel alignment measurement, maintain the front suspension, the steering system and the wheel tyres in good condition.
- Park the vehicle on a level surface, and position the front wheel in the straight-ahead position to measure the wheel alignment.

#### TOE-IN

**Standard value:**


**At the centre of tyre tread:  $1 \pm 2$  mm**

**Toe-angle (per wheel):  $0^\circ 02' \pm 0^\circ 04'$**

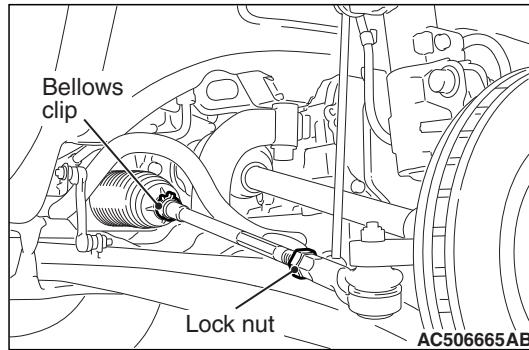

1. Loosen the lock nut with tie-rod bellows clip removed, and then perform the adjustment by turning the tie-rod left/right at the same degree in the opposite direction.


*NOTE: The toe moves to the outside by turning the tie-rod: left to the forward direction, and right to the reverse direction.*

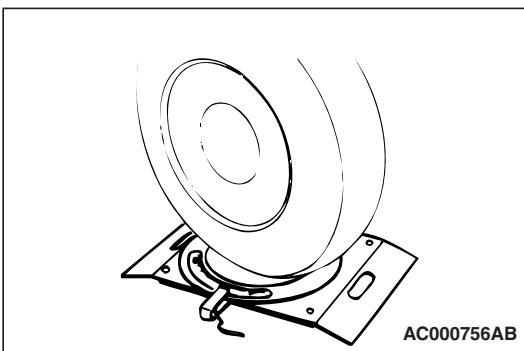

2. Place the front wheel onto the turning radius gauge, and measure the steering angle.

**Standard value:**

Inner wheel	$38^\circ 50' \pm 1^\circ 30'$ (Difference between right and left wheels must be $2^\circ 00'$ or less)
Outer wheel (Reference value)	$32^\circ 20'$

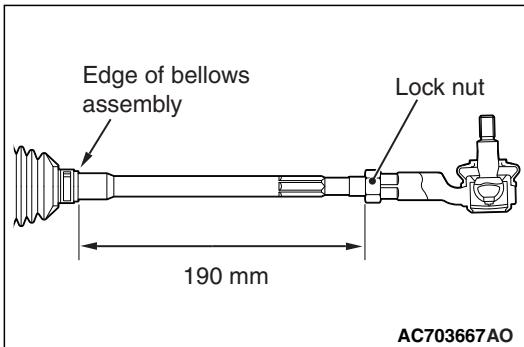

3. If the measured value is not within the standard value, adjust the tie-rod ends (right and left), and repeat Steps 1 and 2.  
4. If the measured value is not within the standard value after performing Step 3, replace the steering gear and linkage assembly.

## CAMBER, CASTER AND KINGPIN INCLINATION

### CAMBER

**Standard value:**  $0^\circ 20' \pm 0^\circ 30'$

### CASTER

**Standard value:**  $2^\circ 35' \pm 0^\circ 45'$

#### NOTE:

- Difference between right and left wheels must be  $0^\circ 30'$  or less.*
- The camber and the caster are pre-adjusted at factory and not adjustable.*

## KINGPIN INCLINATION


**Standard value:**  $12^\circ 45' \pm 1^\circ 30'$

#### ⚠ CAUTION

**Do not apply the vehicle weight to the wheel bearing while loosening the driveshaft nut.**

**NOTE:**

- The camber is pre-adjusted at factory and is not adjustable.*

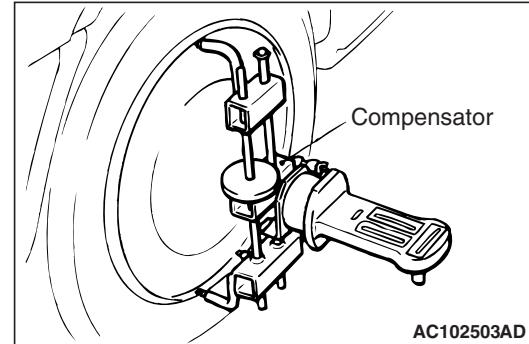

*As for vehicles with aluminium wheel, use a compensator to measure the camber and caster.*

## REAR WHEEL ALIGNMENT

- Before the wheel alignment measurement, adjust the rear suspension, wheel, and tyres in good condition.
- Park the vehicle on a level surface to measure the wheel alignment.


### TOE-IN

**Standard value:**

**At the centre of tyre tread:**  $3 \pm 2$  mm

**Toe-angle (per wheel):**  $0^\circ 02' - 0^\circ 12'$

If it is out of the standard range, adjust as follows:

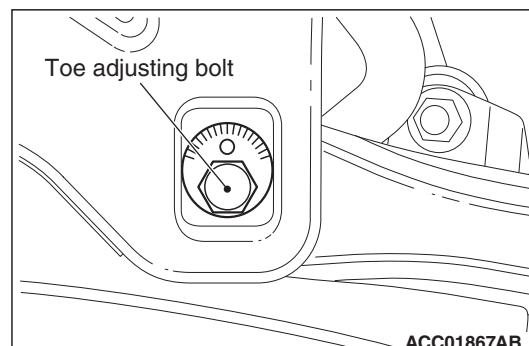

Turn the toe adjusting bolt (the mounting bolt inside the body on the control link) to adjust.

**Left wheels:** Clockwise (+) Toe in

**Right wheels:** Clockwise (-) Toe in


Toe-in varies approximately 3.2 mm (equivalent to  $0^{\circ}16'$  of the toe angle for one side) for each scale mark.

## CAMBER

Standard value:  $-0^{\circ}30' \pm 0^{\circ}45'$

**NOTE:**

- Difference between right and left wheels must be  $0^{\circ}30'$  or less.
- The camber is pre-adjusted at factory and is not adjustable.

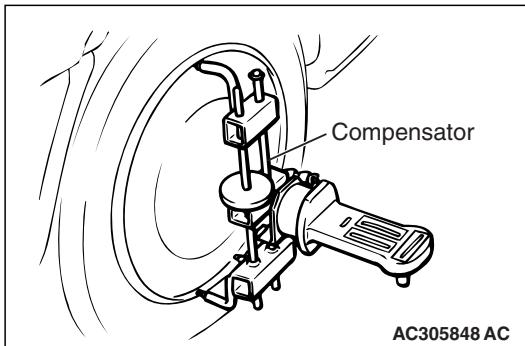


As for vehicles with aluminium wheel, use a compensator to measure the camber and caster.

## D2. CHECK FRONT AND REAR WHEEL BEARINGS FOR PLAY

M6020500200376

### <FRONT WHEEL>

1. Remove the front caliper assembly and front brake disc, and retain the front caliper assembly with a wire and the like to prevent from falling.

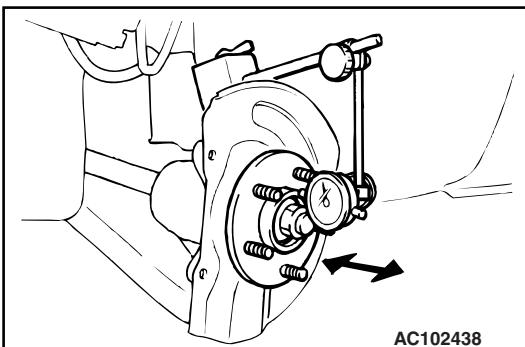


2. Set a dial gauge as shown in the figure. Move the hub in the axial direction and measure the looseness.

**Limit: 0.05 mm**

3. If the play exceeds the limit, disassemble hub knuckle to check each component. If the front hub bearing is faulty, replace it.
4. After checking, install the front brake disc and the front caliper assembly.

### <REAR WHEEL>

1. Remove the caliper assembly and the brake disc. Retain the caliper assembly with a wire and the like to prevent from falling.

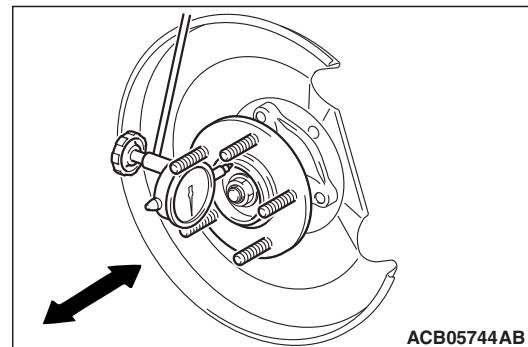

2. Set a dial gauge as shown in the figure. Move the hub in the axial direction and measure the looseness.

**Limit: 0.05 mm**

3. When the looseness exceeds the limit, replace the rear wheel hub assembly.

4. After checking, install the brake disc and the caliper assembly, and tighten the caliper mounting bolt to the specified torque.

**Tightening torque:  $58 \pm 7 \text{ N}\cdot\text{m}$**

## D3. CHECK BRAKE HOSES AND PIPES FOR LEAKAGE

M6020500300607



1. Check entire circumference and length of hoses and pipes.
2. Check all clamps for tightness and connections for leakage.

## D4. CHECK BRAKE PADS AND DISCS FOR WEAR

### <FRONT>

#### **CAUTION**

If there is a significant difference in thickness between the brake pads at right and left, check the sliding area and the run-out of the brake disc.

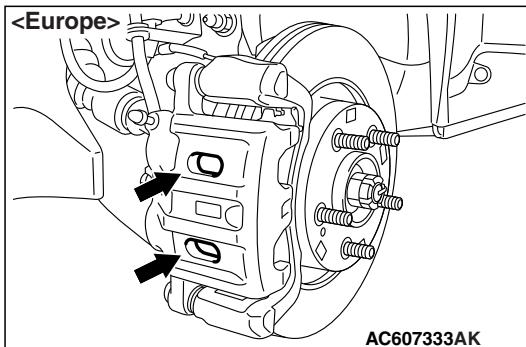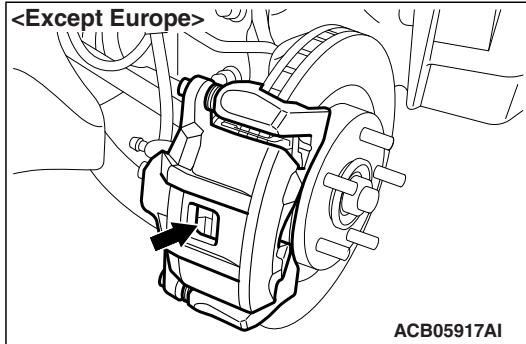

1. Visually check the thickness of brake pad from the inspection hole of the caliper body.

**Standard value: 10.0 mm**

**Limit: 2.0 mm**


2. If the brake pad thickness is less than the limit value, replace the brake pad.

M6020500401168

### <REAR>

#### **CAUTION**

If there is a significant difference in thickness between the brake pads at right and left, check the sliding area and the run-out of the brake disc.

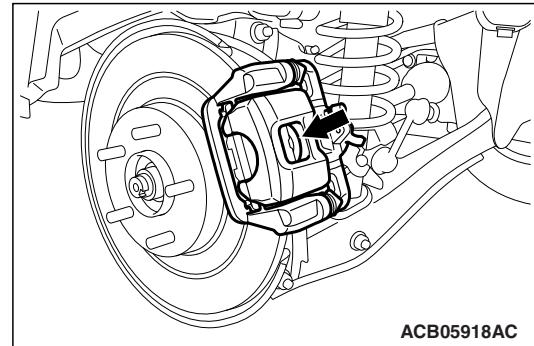

1. Visually check the thickness of brake pad from the inspection hole of the caliper body.

**9.0 mm**


**1.5 mm**

2. If the brake pad thickness is less than the limit value, replace the brake pad.

## BRAKE DISC CHECK

### BRAKE DISC THICKNESS CHECK

1. Remove contaminants or corrosion from the brake disc surface.

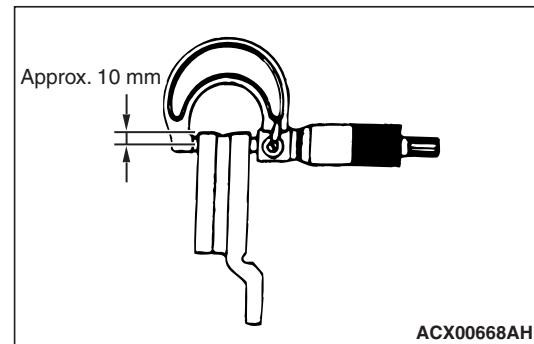

2. Use a micrometer to measure the brake disc thickness at minimum eight points which are 10 mm inward from its circumference.

### <Front>

**Standard value:**

**26.0 mm <Except Europe>, 24.0 mm <Europe>**

**Limit:**

**24.4 mm <Except Europe>, 22.4 mm <Europe>**

### <Rear>


**Standard value: 10.0 mm**

**Limit: 8.4 mm**

- If the brake disc thickness is worn beyond the limit value at more than one point, replace the brake disc and check its run-out.

## BRAKE DISC THICKNESS UNEVENNESS CHECK AND CORRECTION

- Remove contaminants or corrosion from the brake disc surface.

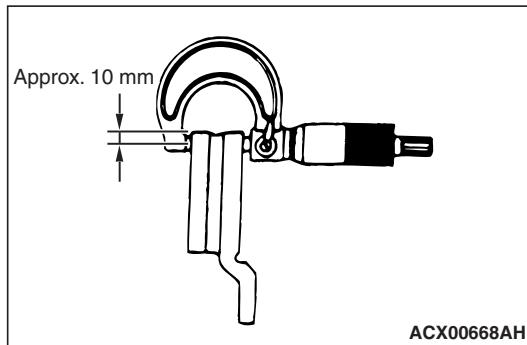


- Use a micrometer to measure the brake disc thickness at minimum eight points which are 10 mm inward from its circumference. Then record the measurements.
- If the brake disc thickness unevenness (the difference between the maximum and minimum values measured above) is 0.015 mm or less, it is within the standard value.
- If the brake disc thickness unevenness exceeds the standard value, grind it according to the procedure below while it is mounted on the vehicle.

*NOTE: If it is suspected that the brake disc thickness will become less than the limit value after the grinding, replace the brake disc and check its run-out.*

- (1) Check for wheel bearing looseness in the axial direction.


### CAUTION

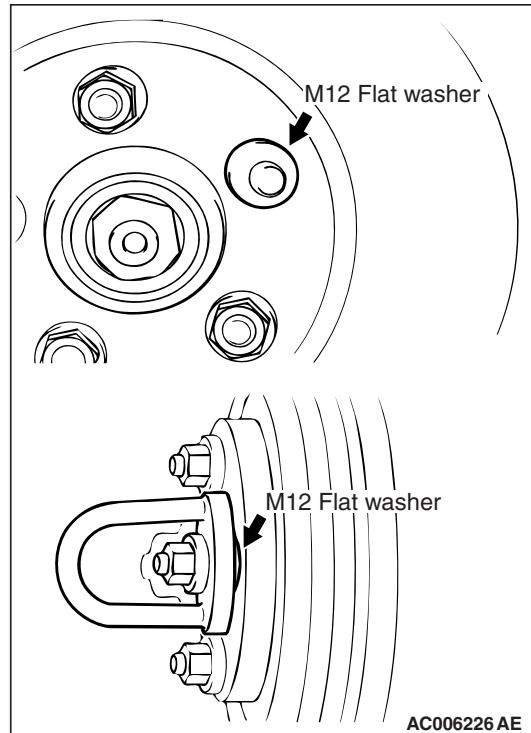

- Insert M12 plain washer and then install the adapter as shown before grinding. Failure to use the M12 plain washer will cause the brake disc to be deformed and earth incorrectly.
- To grind the brake disc, ensure that all the nuts (M12 X 1.5) are tightened evenly and in a diagonal sequence to the specified torque (100 N·m). Failure to use all the nuts (M12×1.5), excessive or uneven tightening torque will cause the brake disc to deform or judder.
  - (2) Correct the brake disc uneven thickness by grinding it while in place on the vehicle.

## BRAKE DISC RUN-OUT CHECK AND CORRECTION

- Check for wheel bearing looseness in the axial direction.
- If the axial play is within the limit value, secure the brake disc by tightening the nut (M12×1.5) evenly to the specified torque (100 N·m). If the axial play still exceeds the limit value, replace the wheel bearing. Then secure the brake disc by tightening the nut (M12×1.5) evenly to the specified torque (100 N·m).

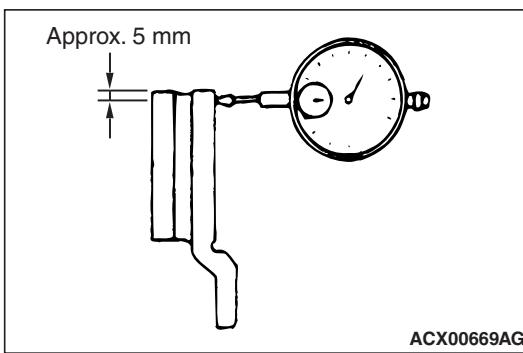

3. Place a dial gauge ca. 5 mm inward from the circumference of the brake disc to measure its run-out.

**Limit:**

0.06 mm <Front>  
0.08 mm <Rear>

4. If the brake disc run-out exceeds the limit value, rephase the brake disc to the hub so that the minimum brake disc run-out is obtained.

## D5. CHECK FUEL HOSES AND PIPES FOR LEAKAGE OR DETERIORATION

M6020500600619

1. Check entire circumference and length of hoses and pipes.
2. Check all clamps for tightness and connections for leakage.

# OPERATIONS AFTER ENGINE IS WARMED UP

## E1. CHECK FLUID LEVEL IN AUTOMATIC TRANSMISSION AND CVT


M6020601400466

### <F1CJA and W1CJA>

1. Drive the vehicle until the CVT fluid is warmed up to the normal operating temperature (70 to 80°C).

*NOTE: Use M.U.T.-III. to measure the CVT fluid temperature.*

*NOTE:*

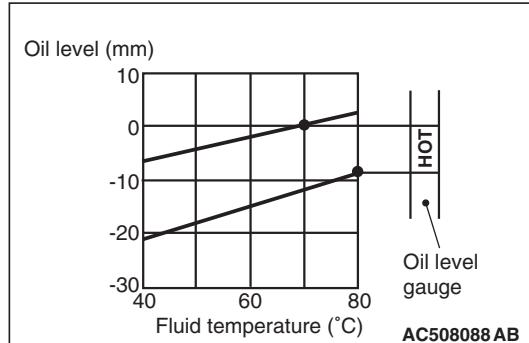


*When a certain amount of time is required to warm up the CVT fluid to the normal operating temperature (70 to 80°C), check the oil level referring to the characteristics chart.*

2. Park the vehicle on a level surface.
3. Move the selector lever to every position to fill the torque converter and the hydraulic circuit with the CVT fluid, and then move the selector lever to "P" or "N" range.

4. Wipe clean the area around the oil level gauge, and then remove the oil level gauge to check the condition of the CVT fluid.

*NOTE: If the CVT fluid smells burnt or is excessively deteriorated or dirty, the CVT fluid is contaminated with particles of the metal bushings and friction material. In these cases, the transmission must be overhauled.*

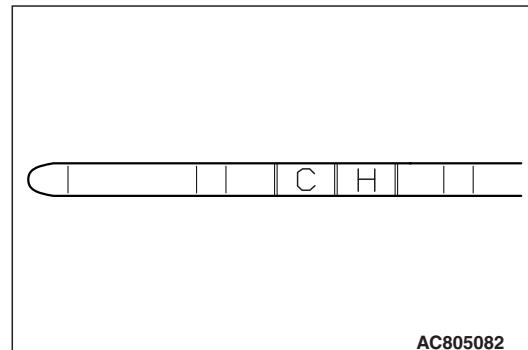

5. Check that the CVT fluid level is within the "HOT" area on the oil level gauge. If the fluid level is low, add the CVT fluid to the "HOT" level.

**CVT fluid: MITSUBISHI MOTORS GENUINE  
CVTF-J4**

**NOTE:** When the CVT fluid level is low, the oil pump sucks air together with the CVT fluid, and produces air bubbles in the hydraulic circuit. The air bubbles in the hydraulic circuit decreases the hydraulic pressure, causing the delayed gearshift or slippage of the belt, clutch, and brake. When the CVT fluid level is too high, the fluid is stirred by the gear and foams up, and the problems similar to those when the CVT fluid level is low will occur. In either case, air bubbles cause the overheat and oxidation of the CVT fluid, which prevents normal operation of the valve, clutch, and brake. Beside, when the CVT fluid is foamy, it flows out of the transmission vent hole. This may be taken as the fluid leakage by mistake.


6. Insert the oil level gauge securely.

#### <W6AJA>

1. Drive the vehicle until the A/T fluid temperature rises to the normal operating temperature (70 – 80°C).

**NOTE:** The A/T fluid temperature is measured with M.U.T.-III MB991958 (M.U.T.-III sub assembly).


**NOTE:**

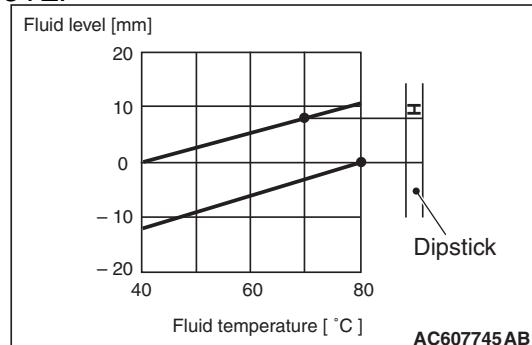

If it takes some amount of time until the A/T fluid reaches its normal operating temperature [70 – 80°C], check the A/T fluid level by referring to the left diagram.

2. Park the vehicle on a level surface.
3. Move the selector lever through all positions to fill the torque converter and the hydraulic circuits with fluid, and then move the selector lever to the "N" position.
4. After wiping off any dirt around the dipstick, remove the dipstick and check the condition of the A/T fluid.

**NOTE:** If the A/T fluid smells as if it is burnt, it means that the A/T fluid has been contaminated by fine particles from the bushings and friction materials. Transmission overhaul and cooler line flushing may be necessary.

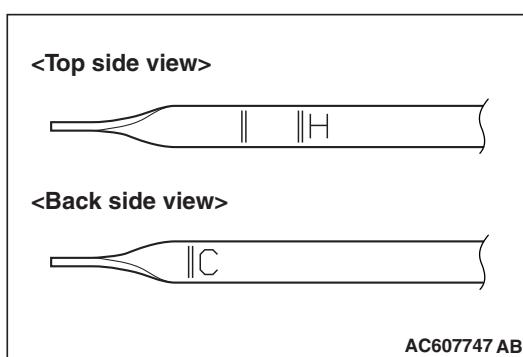

5. Check A/T fluid level is at the "H" mark on the dipstick. If the A/T fluid level is less than this, add MITSUBISHI MOTORS GENUINE ATF-J3 until the level reaches the "H" mark.

**NOTE:** If the A/T fluid level is too low, the oil pump will draw in air along with the A/T fluid, which will cause to form bubbles. If the A/T fluid level is too high, rotating components inside the transmission will churn the fluid and air into a foamy liquid. Both conditions (level too low or too high) will cause the hydraulic pressure to drop, which will result in late shifting and slipping of the clutches and brakes.

**NOTE:** In either case, air bubbles can interfere with normal valve, clutch, and brake operation. Also, foaming can cause A/T fluid to escape from the transmission vent where it may be mistaken for a leak.

6. Securely insert the dipstick.

**NOTE:** The A/T fluid should always be replaced under the following conditions:

- When troubleshooting the transmission.
- When overhauling the transmission.
- When the A/T fluid is noticeably dirty or burnt (driving under severe conditions).


## E2. CHANGE AUTOMATIC TRANSMISSION FLUID AND CVT FLUID SPECIFICATIONS

M6020601500463

CVT and Automatic transmission fluid	Quantity	Remark
MITSUBISHI MOTORS GENUINE CVTF-J4	7.1 L	F1CJA and W1CJA
MITSUBISHI MOTORS GENUINE ATF-J3	8.2 L	W6AJA

## CHANGE PROCEDURE

&lt;F1CJA and W1CJA&gt;

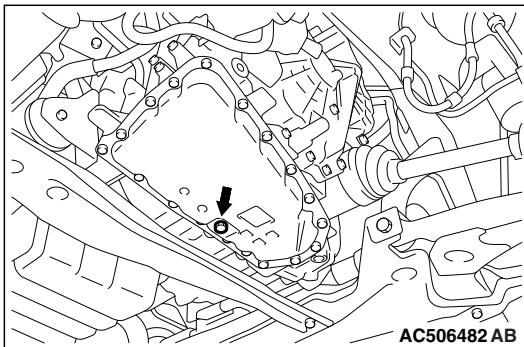


1. Remove the drain plug on the bottom of the transmission case to drain the CVT fluid.  
**Draining amount: Approximately 5.5 L**
2. Install the drain plug with a new gasket to the transmission case, and tighten it to the specified torque.  
**Tightening torque:  $34 \pm 2 \text{ N}\cdot\text{m}$**

**CAUTION**

If the transmission case becomes full before filling 5.5 L of CVT fluid, stop filling the CVT fluid.

3. Fill in the new CVT fluid through the oil filler tube.  
**Filling amount: Approximately 5.5 L**  
**CVT fluid: MITSUBISHI MOTORS GENUINE CVTF-J4**
4. Start up the engine and let it idle for 1 to 2 minutes.
5. Move the selector lever to every position, and then move it to the P or N range.
6. Stop the engine and perform the above steps 1 to 5 again.
7. Stop the engine, and discharge a small amount of CVT fluid to check for fouling. If fouling is found, repeat steps 1 to 5 until clean CVT fluid comes out.

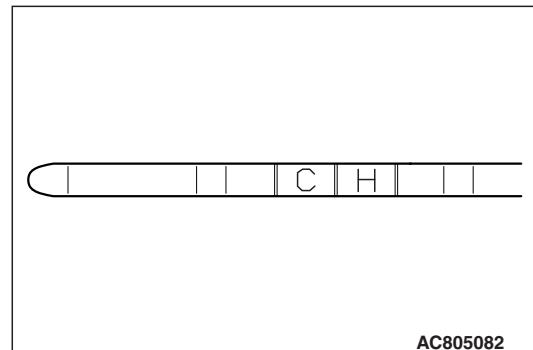


8. Drive the vehicle until the CVT fluid is warmed up to the normal operating temperature (70 to 80°C), and check the CVT fluid level. It must be within the "HOT" area on the oil level gauge.

*NOTE: The "COLD" level is for reference only. Use the "HOT" level as the criteria.*

*NOTE: Use M.U.T.-III. to measure the CVT fluid temperature.*

**NOTE:**

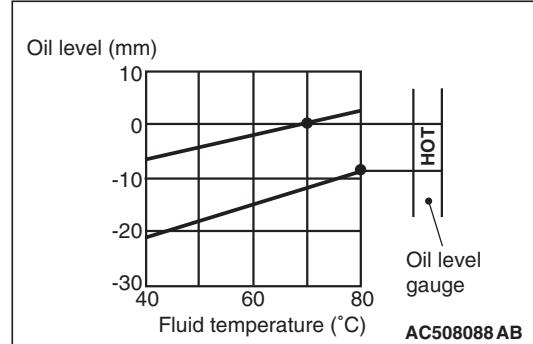


*When a certain amount of time is required to warm up the CVT fluid to the normal operating temperature (70 to 80°C), check the oil level referring to the characteristics chart.*

9. Adjust the CVT fluid level to the specified level. Refill the CVT fluid when the fluid level is low, and drain the CVT fluid through the drain plug when the fluid level is high.
10. Securely insert the oil level gauge into the oil filler tube.
11. CVT-ECU records the deterioration level of the CVT fluid. After replacing the CVT fluid with new one, use M.U.T.-III to reset the deterioration level recorded in CVT-ECU.

## &lt;W6AJA&gt;

If you have a A/T fluid changer, use this changer to replace the A/T fluid. If you do not have a A/T fluid changer, replace the A/T fluid by the following procedure.

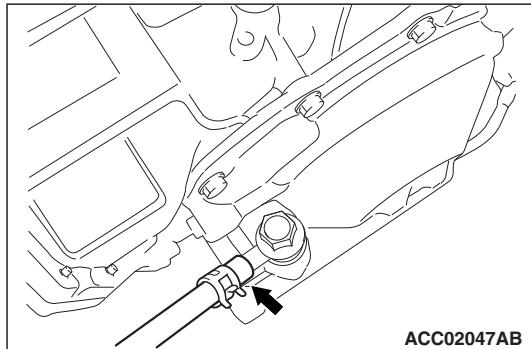

ACC02047AB


1. Disconnect the hose shown in the illustration which connects the transmission and the oil cooler (inside the radiator). Place a container under the hose to collect the discharge.

**CAUTION**

The engine should be stopped within one minute after it is started. If all the A/T fluid has drained out before then, the engine should be stopped at that point.

2. Start the engine and let the A/T fluid drain out.  
(Running conditions: "N" range with engine idling)

**Approximately 3.5 L of A/T fluid should be removed.**

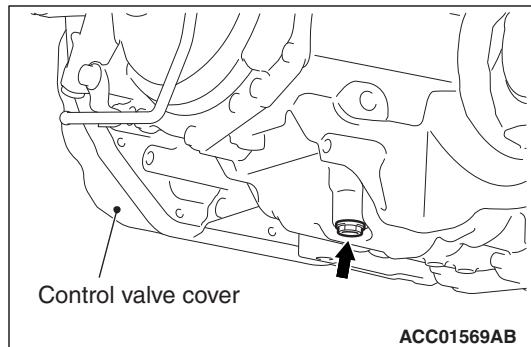

ACC01569AB

3. Remove the drain plug from the bottom of the transmission case to drain the A/T fluid.

**Approximately 2.0 L of A/T fluid should be removed.**

4. Install the drain plug with a new gasket, and tighten it to the specified torque.


**Tightening torque:  $7.4 \pm 2.4 \text{ N}\cdot\text{m}$**

**CAUTION**

Stop pouring if the full volume of A/T fluid can not be added.


5. Add new A/T fluid (MITSUBISHI MOTORS GENUINE ATF - J3) through the oil filter tube.  
**Approximately 5.5 L of A/T fluid should be added.**
6. Repeat the procedure in Step 2. (to pump out the rest of the contaminated A/T fluid)
7. Add new A/T fluid (MITSUBISHI MOTORS GENUINE ATF - J3) through the oil filter tube.  
**Approximately 3.5 L of A/T fluid should be added.**

*NOTE: Check for contamination or a burnt odour. If the A/T fluid is still contaminated or burnt, repeat Steps 6 and 7 before proceeding to Step 8.*

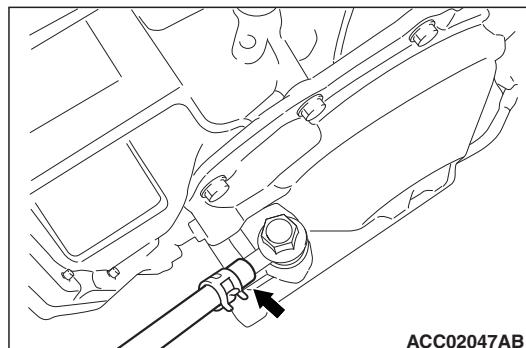

ACC02047AB

8. Reconnect the hose which was disconnected in step 1 above, and firmly insert the dipstick.
9. Start the engine and run it at idle for one to two minutes.
10. Move the selector lever through all positions, and then move it to the "N" position.

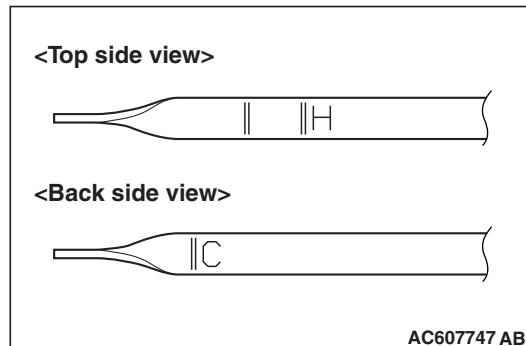

AC607747 AB


11. Check that the A/T fluid level is at the "C" mark on the dipstick. If the level is less than this, add A/T fluid.

12. Drive the vehicle until the A/T fluid temperature rises to the normal operating temperature (70 – 80°C), and then check the A/T fluid level again. The A/T fluid level must be at the "H" mark.

*NOTE: The A/T fluid temperature is measured with M.U.T.-III MB991955 (M.U.T.-III sub assembly).*

*NOTE: The "C" level is for reference only; the "H" level should be regarded as the standard level.*

*NOTE:*

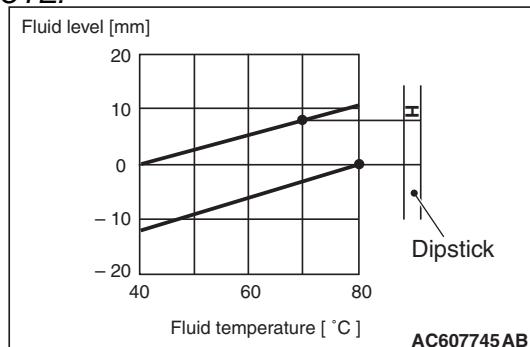

*If it takes some amount of time until the A/T fluid reaches its normal operating temperature (70 – 80°C), check the A/T fluid level by referring to the left diagram.*

13. When the A/T fluid is less than the specified level, add A/T fluid.

When the A/T fluid is greater than the specified level, drain the excess fluid through the drain plug to adjust the A/T fluid to the specified level.

14. Firmly insert the dipstick into the oil filler tube.

### E3. CHANGE ENGINE OIL

M6020600301889

#### <4B1, 4J1>

1. Start the engine and allow it to warm up until the temperature of the coolant reaches 80 °C to 90 °C.


#### **WARNING**

**Use care as engine oil could be hot.**

2. Remove the engine oil filler cap.
3. Remove the engine oil pan drain plug to drain engine oil.

4. Install a new engine oil pan drain plug gasket and then tighten the engine oil pan drain plug to the specified torque.

**Tightening torque: 39 ± 5 N·m**

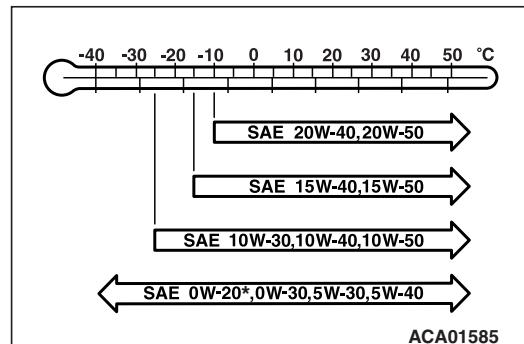

5. Refill with specified quantity of engine oil.

**Specified engine oil:**

- ACEA classification: A1/B1, A3/B3, A3/B4 or A5/B5
- ILSAC classification: ILSAC certificated oil
- API classification: SM or higher

**Total quantity (Includes volume inside engine oil filter and engine oil cooler):**

- <4B11-Except PHEV, 4J11>
  - <Vehicles without engine oil cooler> 4.3 L
  - <Vehicles with engine oil cooler> 4.4 L
- <4B11-PHEV, 4B12, 4J12>
  - <Vehicles without engine oil cooler> 4.6 L
  - <Vehicles with engine oil cooler> 4.7 L

*NOTE: SAE 0W-20\*, 0W-30, 5W-30, and 5W-40 engine oils can only be used if they meet ACEA A3/B3, A3/B4 or A5/B5 and API SM or higher specifications.*

*NOTE: \*: Vehicles to comply with the Euro 4 regulation*

6. Install the engine oil filler cap.
7. Let the engine run for a few minutes.
8. Stop the engine, and then check the engine oil level using the engine oil level gauge after a few minutes.

## &lt;4N1&gt;


1. Start the engine and allow it to warm up until the temperature of the engine coolant reaches 80°C to 90°C.

**WARNING**

**Use care as engine oil could be hot.**

2. Remove the engine oil filler cap.
3. Remove the engine room under cover front.
4. Remove the engine oil pan drain plug to drain engine oil.
5. Install a new engine oil pan drain plug gasket and then tighten the engine oil pan drain plug to the specified torque.

**Tightening torque:  $39 \pm 5 \text{ N}\cdot\text{m}$**

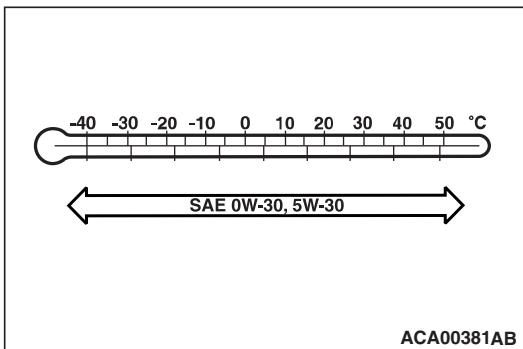

6. Refill with specified quantity of engine oil.

**Specified Engine Oil**

- ACEA classification: "For service C1, C2, C3 or C4"
- JASO classification: "For service DL-1"

**Total quantity (Includes volume inside engine oil filter and engine oil cooler):**


- <Vehicles without engine oil cooler> 7.4 L
- <Vehicles with engine oil cooler> 7.5 L

7. Install the engine oil filler cap.
8. Let the engine run for a few minutes.
9. Stop the engine, and then check the engine oil level using the engine oil level gauge after a few minutes.
10. Install the engine room under cover front.


#### E4. REPLACE ENGINE OIL FILTER

M6020600401284


1. Remove the engine oil pan drain plug to drain engine oil.

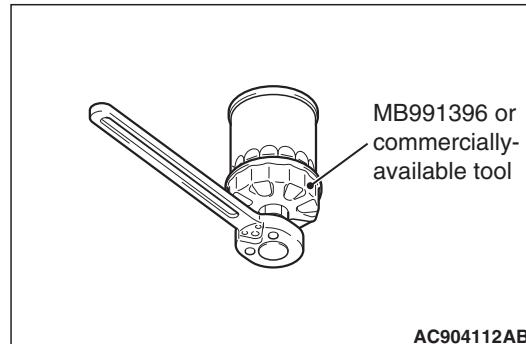

2. Use special tool oil filter wrench (MB991396) or commercially-available tool to remove the engine oil filter.
3. Clean the engine oil filter installing surface on the cylinder block side.

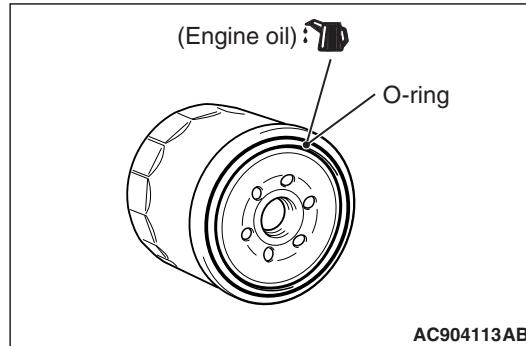

4. Apply a small amount of engine oil to the new engine oil filter O-ring.
5. Tighten the engine oil filter until the O-ring contacts with the installation surface.

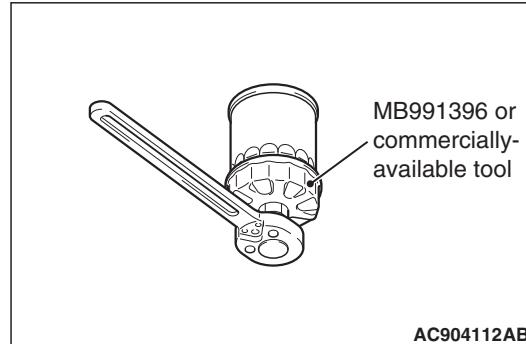

6. In the same manner as removal, use special tool oil filter wrench (MB991396) or commercially-available tool to tighten the engine oil filter to the specified torque.


**Tightening torque: Approximately 1 turn (14 ± 2 N·m)**

7. Install the engine oil pan drain plug and refill the engine oil.
8. Rev the engine a few times, and check to be sure that no engine oil leaks from the installation section of the engine oil filter.
9. Install the engine room under cover front.

## E5. CHECK EXHAUST GAS RECIRCULATION (EGR) SYSTEM

M6020600801044


### CHECKING THE OPERATION SOUND

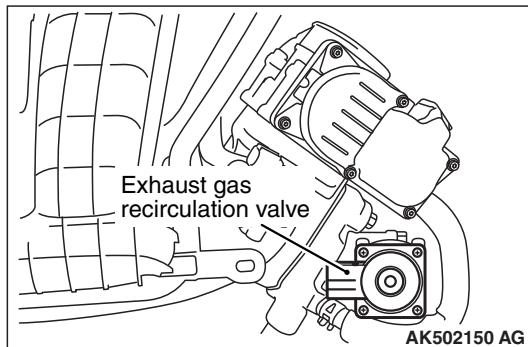

1. Check that the operation sound of the stepper motor can be heard from the exhaust gas recirculation valve when the power supply mode of the electric motor switch is ACC.
2. If the operation sound cannot be heard, inspect the drive circuit of the stepper motor.

*NOTE: If the circuit is normal, either the stepper motor or the engine-ECU may have failed.*

### CHECKING THE COIL RESISTANCE

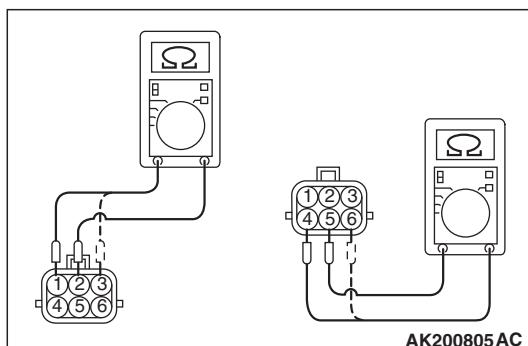


1. Disconnect the exhaust gas recirculation valve connector.
2. Measure the resistance between terminal No. 2 and either terminal No. 1 or terminal No. 3 of the connector at the exhaust gas recirculation valve.


**Standard value: 20 – 24 Ω (at 20°C)**

3. Measure the resistance between terminal No. 5 and either terminal No. 4 or terminal No. 6 of the connector at the exhaust gas recirculation valve.  
**Standard value: 20 – 24 Ω (at 20°C)**
4. If the value deviates from the standard value, replace the exhaust gas recirculation valve.

### OPERATION CHECK

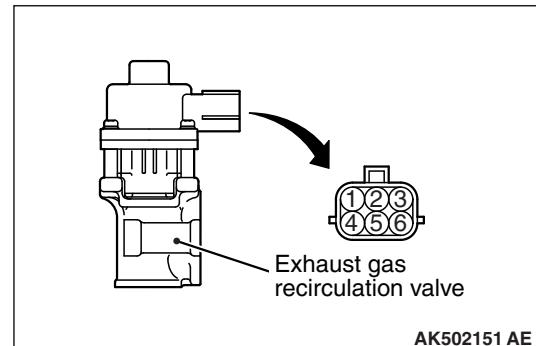

1. Remove the exhaust gas recirculation valve.
2. Attach a special tool test harness (MB991658) to the connector at the exhaust gas recirculation valve.

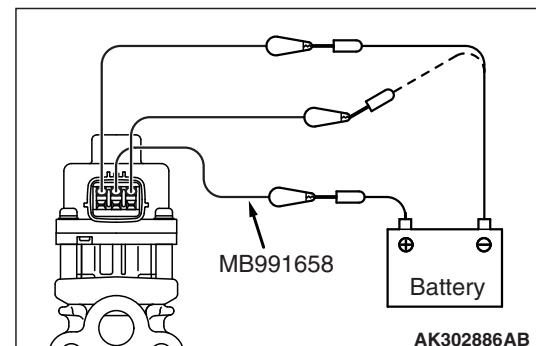


#### ⚠ CAUTION

Connecting battery voltage to the exhaust gas recirculation valve for a long term could damage the coil.

3. Connect the positive (+) terminal of the battery to terminal No. 2.
4. Connect terminals No. 1 and No. 3 to the negative (-) terminal of the battery, in order to test whether the stepper motor vibrates (with a slight shudder), indicating that the stepper motor is operating.

**CAUTION**

Connecting battery voltage to the exhaust gas recirculation valve for a long term could damage the coil.

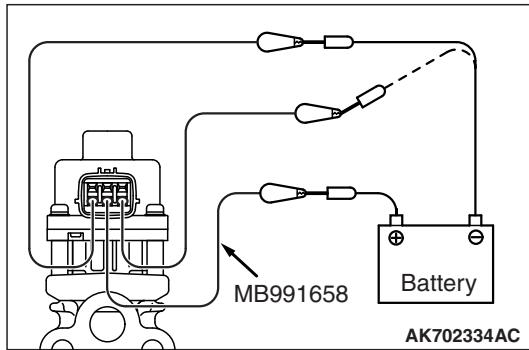

5. Connect the positive (+) terminal of the battery to terminal No. 5.
6. Connect terminals No. 4 and No. 6 to the negative (-) terminal of the battery, in order to test whether the stepper motor vibrates (with a slight shudder), indicating that the stepper motor is operating.
7. If a vibration can be felt during the test, the stepper motor is normal.
8. Using a new gasket, install the exhaust gas recirculation valve by tightening its mounting bolts to the specified torque.


**Tightening Torque:**

$24 \pm 3 \text{ N}\cdot\text{m}$


**E6. CHECK ENGINE IDLING SPEED**

M6020601300812

<4B1>

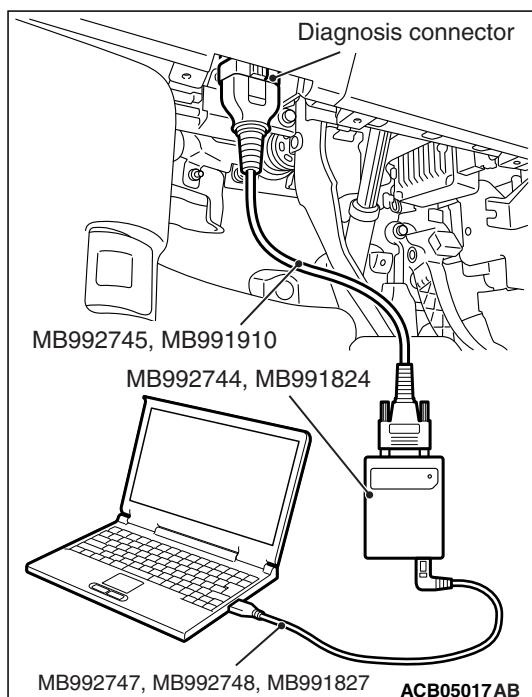

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Turn the ignition switch to "LOCK" (OFF) position.
3. Connect the M.U.T.-III to the diagnosis connector.

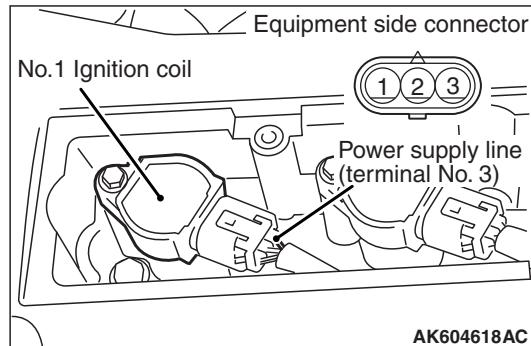

4. Set the timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.
5. Start the engine and let it run at idle.
6. Check that ignition timing is at the standard value.

**Standard value: approximately  $10^\circ$  BTDC**

**NOTE:**

- The ignition timing may fluctuate within  $\pm 7^\circ$ . This is normal.
- In higher altitude, the ignition timing is more advanced than the standard value by approximately  $5^\circ$ .
- Wait till approximately 1 minute passes after the engine started, and check the ignition timing when the engine stabilized.

7. Check the idle speed.

**Standard value:**

$650 \pm 100 \text{ r/min}$  <4B11>

$750 \pm 100 \text{ r/min}$  <4B12>


**NOTE:**

- The idle speed is controlled automatically by the idle speed control system.
- When using the M.U.T.-III, select item No. 2 and take a reading of the idle speed.

8. If the idle speed is outside the standard value, inspect the MPI system.
9. Remove the timing light.
10. Turn the ignition switch to the "LOCK" (OFF) position and then disconnect the M.U.T.-III.

## &lt;4J1&gt;

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Turn the ignition switch to the "LOCK" (OFF) position and then connect the M.U.T.-III to the diagnosis connector.

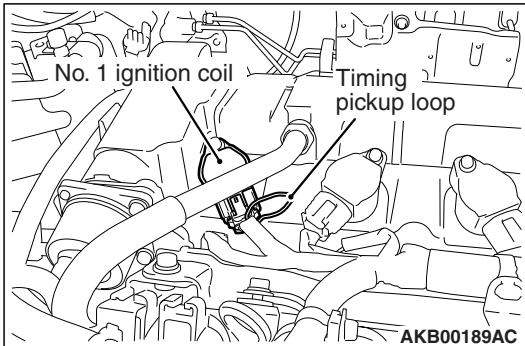

3. Set a timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.
- NOTE: The power supply line is looped and also longer than the other ones.*
4. Start the engine and let it run at idle.
5. Check that ignition timing is at the standard value.

**Standard value: approximately 10° BTDC**

**NOTE:**

- The ignition timing may fluctuate within  $\pm 7^\circ$ . This is normal.
- In higher altitude, the ignition timing is more advanced than the standard value by approximately  $5^\circ$ .
- Wait till approximately 1 minute passes after the engine started, and check the ignition timing when the engine stabilized.

6. Check the idle speed.

**Standard value:  $650 \pm 100$  r/min**

**NOTE:**


- The idle speed is controlled automatically by the idle speed control system.
- When using the M.U.T.-III, select engine data list item No. 2 and take a reading of the idle speed.

7. If the idle speed is outside the standard value, inspect the MPI system.
8. Remove the timing light.
9. Turn the ignition switch to "LOCK" (OFF) position and then disconnect the M.U.T.-III.


**E7. CHECK CO CONCENTRATION**

M6020601000952

## &lt;4B1&gt;

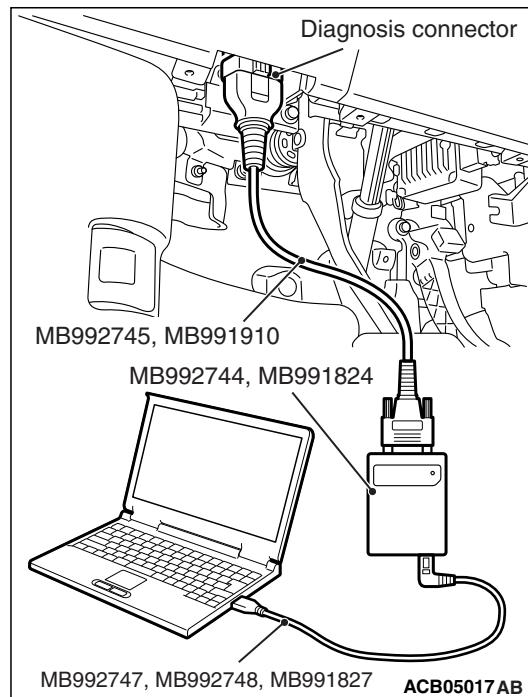

1. Before inspection, set the vehicle to the pre-inspection condition.
2. Turn the ignition switch to "LOCK" (OFF) position.
3. Connect the M.U.T.-III to the diagnosis connector.

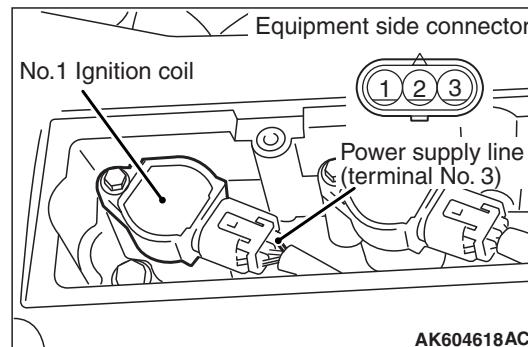

4. Set the timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.
5. Start the engine and let it run at idle.

- Check that ignition timing is at the standard value.

**Standard value: approximately 10° BTDC**

**NOTE:**

- The ignition timing may fluctuate within  $\pm 7^\circ$ . This is normal.*
- In higher altitude, the ignition timing is more advanced than the standard value by approximately 5°.*
- Wait till approximately 1 minute passes after the engine started, and check the ignition timing when the engine stabilized.*

- Run the engine at 2,000 – 3,000 r/min for 2 minutes.
- Set the CO, HC tester.
- Check the CO contents and the HC contents at idle.

**Standard value**


**CO contents: 0.3 % or less**

**HC contents: 200 ppm or less**

- If there is a deviation from the standard value, inspect the MPI system.
- Remove the HC, CO tester and timing light.
- Turn the ignition switch to the "LOCK" (OFF) position and then disconnect the M.U.T.-III.

#### <4J1>

- Before inspection, set the vehicle to the pre-inspection condition.
- Turn the ignition switch to the "LOCK" (OFF) position and then connect the M.U.T.-III to the diagnosis connector.

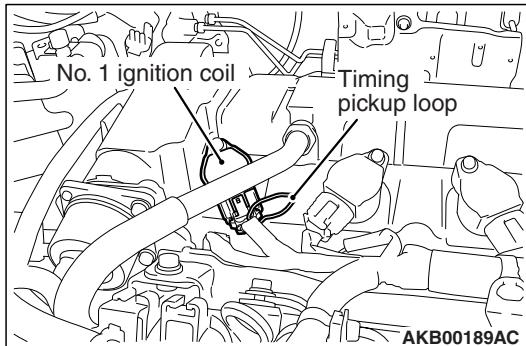

- Set a timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.

*NOTE: The power supply line is looped and also longer than the other ones.*

- Start the engine and let it run at idle.
- Check that ignition timing is at the standard value.

**Standard value: approximately 10° BTDC**

**NOTE:**

- The ignition timing may fluctuate within  $\pm 7^\circ$ . This is normal.*
- In higher altitude, the ignition timing is more advanced than the standard value by approximately 5°.*
- Wait till approximately 1 minute passes after the engine started, and check the ignition timing when the engine stabilized.*

- Run the engine at 2,000 – 3,000 r/min for 2 minutes.
- Set the CO, HC tester.
- Check the CO contents and the HC contents at idle.

**Standard value**

**CO contents: 0.3 % or less**

**HC contents: 200 ppm or less**

- If there is a deviation from the standard value, inspect the MPI system.
- Remove the timing light and CO, HC tester.
- Turn the ignition switch to "LOCK" (OFF) position and then disconnect the M.U.T.-III.

## OTHERS

### F1. CHECK BODY CONDITION FOR DAMAGE


1. Check underbody coating for damage.  
2. Check body painting for damage.

### F2. CHECK THE COMMON RAIL ENGINE (SMALL INJECTION QUANTITY LEARNING)

#### LEARNING PROCEDURE

##### **CAUTION**

To prevent damage to M.U.T.-III, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting M.U.T.-III.

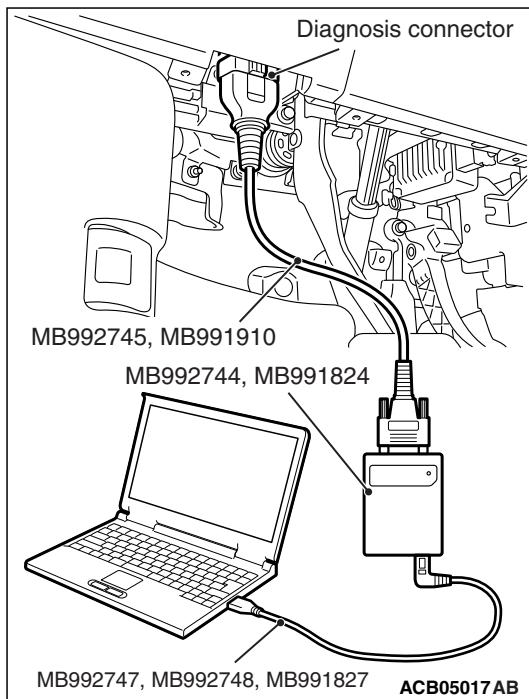

1. After the ignition switch is in "LOCK" (OFF) position, connect the M.U.T.-III to the diagnosis connector.

2. Put the vehicle in the following idling stable conditions:

- Engine coolant temperature: 76 – 100°C
- Fuel temperature: 30 – 100°C
- Intake air temperature: –30 to 100°C
- Barometric pressure: 70 kPa or more
- Lamps, radiator fan and all accessories: OFF
- Transmission: Neutral
- Power steering: Static state

3. Select "MPI/GDI/DIESEL" from System select Screen of the M.U.T.-III.
4. Select "Special Function" from MPI/GDI/DIESEL Screen.
5. Select "Learning" from Special Function Screen.
6. Select Item No. 1 "Small Injection qt. Learning" from the Learning Screen to execute learning.

##### **CAUTION**

If the vehicle conditions go out of the learning conditions during idling, learning is interrupted.

To reexecute learning, the ignition switch must once be turned off.

7. Continue idling for about 3 minutes before learning is completed.
8. Confirm that the engine warning lamp is off. If it still blinks, reexecute learning.

### F3. ROAD TEST

M6020700200756

Drive the vehicle and check for conditions.

1. Check free play of steering wheel.
2. Check efficiency of service brakes and parking brakes system.
3. Check driveability of engine/motor.
4. Check condition of instruments, gauges indicators, exterior lamps, heater and ventilators.
5. Check abnormal noise of each part.
6. Check the tyres for wear and for the correct air pressure.

---

**NOTES**