

# INTRODUCTION

# HOW TO USE THIS MANUAL

IN002-09

## INDEX

An INDEX is provided on the first page of each section to guide you to the item to be repaired. To assist you in finding your way through the manual, the Section Title and major heading are given at the top of every page.

## GENERAL DESCRIPTION

At the beginning of each section, a General Description is given that pertains to all repair operations contained in that section.

Read these precautions before starting any repair task.

## TROUBLESHOOTING

TROUBLESHOOTING tables are included for each system to help you diagnose the problem and find the cause.


## PREPARATION

Preparation lists the SST (Special Service Tools), recommended tools, equipment, lubricant and SSM (Special Service Materials) which should be prepared before beginning the operation and explains the purpose of each one.

## REPAIR PROCEDURES

Most repair operations begin with an overview illustration. It identifies the components and shows how the parts fit together.

Example:

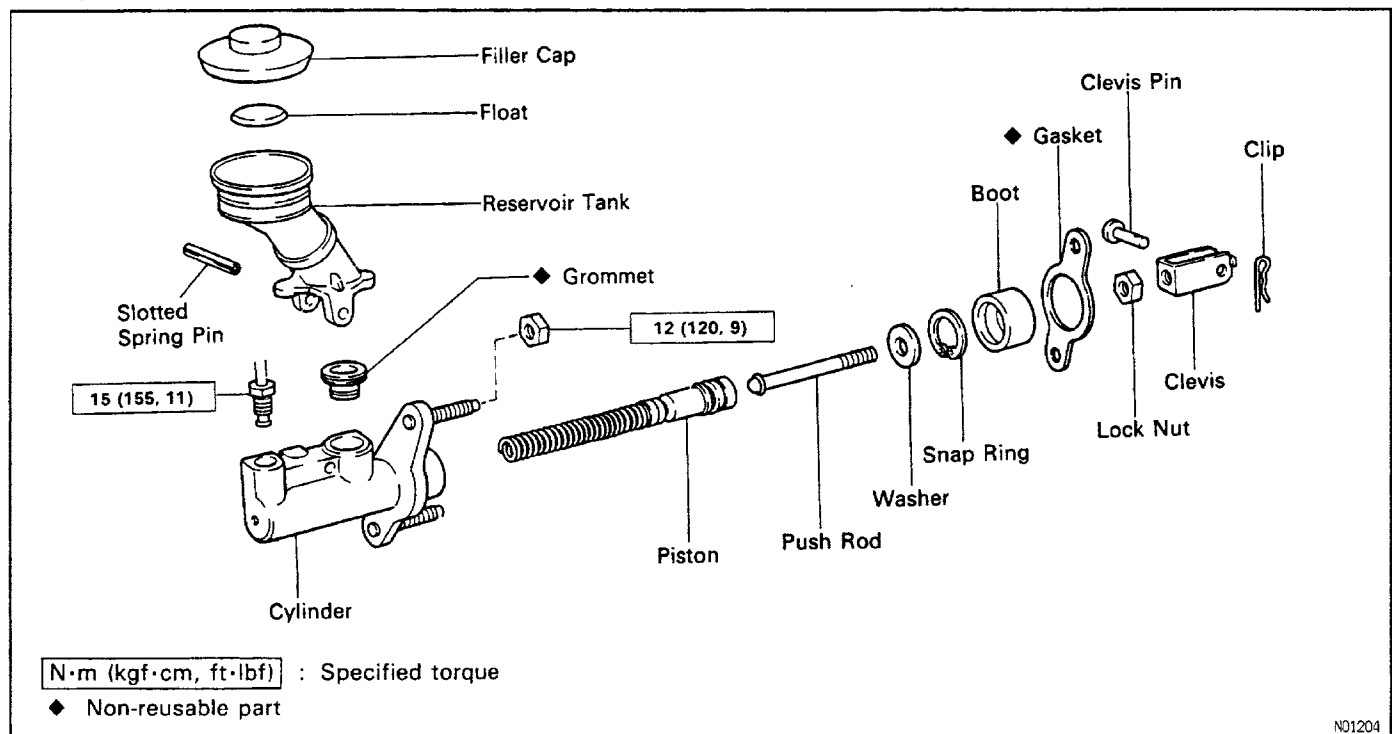

The procedures are presented in a step-by-step format:

Example:

- The illustration shows what to do and where to do it.
- The task heading tells what to do.
- The detailed text tells how to perform the task and gives other information such as specifications and warnings.

*Task heading: what to do*

**21. CHECK PISTON STROKE OF OVERDRIVE BRAKE**

(a) Place SST and a dial indicator onto the overdrive brake piston as shown in the illustration.  
**SST 09350-30020 (09350-06120)**  
*Set part No. Component part No.*

*Detailed text: how to do task*

(b) Measure the stroke applying and releasing the compressed air (392 — 785 kPa, 4 — 8 kgf/cm<sup>2</sup> or 57 — 114 psi) as shown in the illustration.

**Piston stroke: 1.40 — 1.70 mm (0.0551 — 0.0669 in.)**  
*Specification*

This format provides the experienced technician with a FAST TRACK to the information needed. The upper case task heading can be read at a glance when necessary, and the text below it provides detailed information. Important specifications and warnings always stand out in bold type.

## REFERENCES

References have been kept to a minimum. However, when they are required you are given the page to refer to.

## SPECIFICATIONS

Specifications are presented in bold type throughout the text where needed. You never have to leave the procedure to look up your specifications. They are also found at the end of each section, for quick reference.

## CAUTIONS, NOTICES, HINTS:


- **CAUTIONS** are presented in bold type, and indicate there is a possibility of injury to you or other people.
- **NOTICES** are also presented in bold type, and indicate the possibility of damage to the components being repaired.
- **HINTS** are separated from the text but do not appear in bold. They provide additional information to help you perform the repair efficiently.

## SI UNIT

The **UNITS** given in this manual are primarily expressed according to the **SI UNIT**(International System of Unit), and alternately expressed in the metric system and in the English System.

Example:

**Torque: 30 N–m (310 kgf–cm, 22 ft–lbf)**

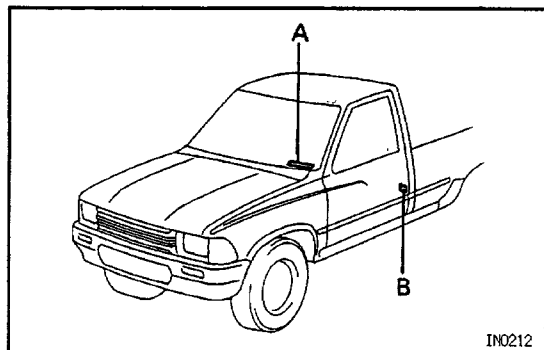


## IDENTIFICATION INFORMATION

### VEHICLE IDENTIFICATION NUMBER

IN003-01

The vehicle identification number is stamped on the vehicle identification number plate and certification label.


- A. Vehicle Identification Number Plate
- B. Certification Label

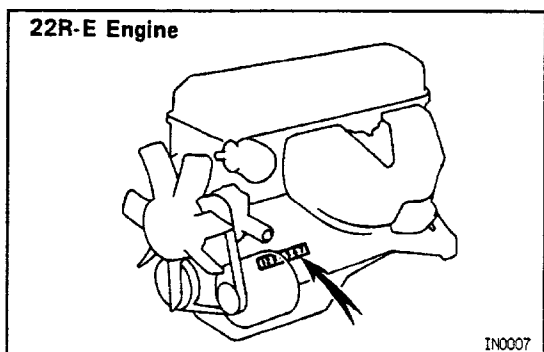


### ENGINE SERIAL NUMBER

IN00A-01


The engine serial number is stamped on the engine block as shown.

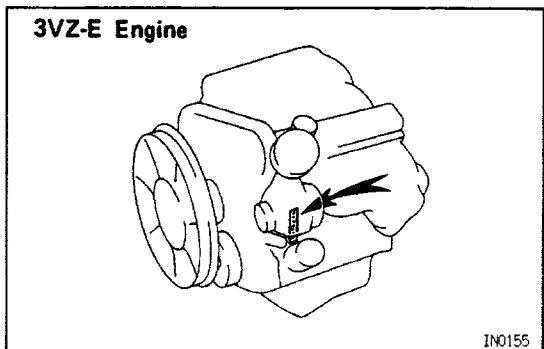

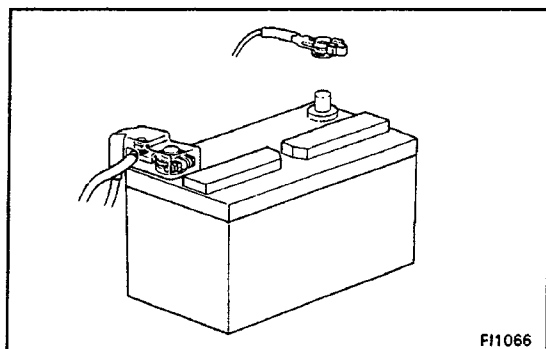

## GENERAL REPAIR INSTRUCTIONS

1. Use fender, seat and floor covers to keep the vehicle clean and prevent damage.
2. During disassembly, keep parts in the appropriate order to facilitate reassembly.
3. Observe the following:
  - (a) Before performing electrical work, disconnect the negative cable from the battery terminal.
  - (b) If it is necessary to disconnect the battery for inspection or repair, always disconnect the cable from the negative (–) terminal which is grounded to the vehicle body.
  - (c) To prevent damage to the battery terminal post, loosen the terminal nut and raise the cable straight up without twisting or prying it.
  - (d) Clean the battery terminal posts and cable terminals with a clean shop rag. Do not scrape them with a file or other abrasive objects.
  - (e) Install the cable terminal to the battery post with the nut loose, and tighten the nut after installation. Do not use a hammer to tap the terminal onto the post.
  - (f) Be sure the cover for the positive (+) terminal is properly in place.
4. Check hose and wiring connectors to make sure that they are secure and correct.
5. Non-reusable parts
  - (a) Always replace cotter pins, gaskets, O-rings and oil seals etc. with new ones.
  - (b) Non-reusable parts are indicated in the component illustrations by the “♦” symbol.

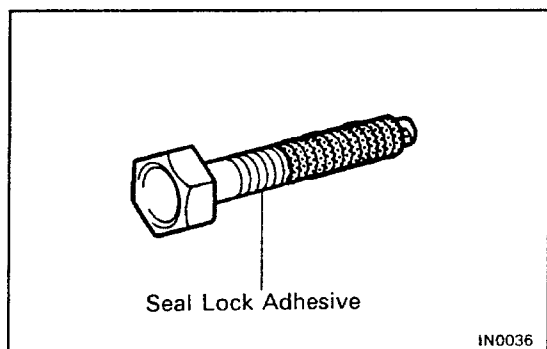


### 6. Precoated parts

Precoated parts are bolts and nuts, etc. that are coated with a seal lock adhesive at the factory.

- (a) If a precoated part is retightened, loosened or caused to move in any way, it must be recoated with the specified adhesive.




- (b) When reusing precoated parts, clean off the old adhesive and dry with compressed air. Then apply the specified seal lock adhesive to the bolt, nut or threads.
- (c) Precoated parts are indicated in the component illustrations by the "\*" symbol.
- 7. When necessary, use a sealer on gaskets to prevent leaks.
- 8. Carefully observe all specifications for bolt tightening torques. Always use a torque wrench.
- 9. Use of special service tools (SST) and special service materials (SSM) may be required, depending on the nature of the repair. Be sure to use SST and SSM where specified and follow the proper work procedure. A list of SST and SSM can be found in the preparation part at the front of each section in this manual.

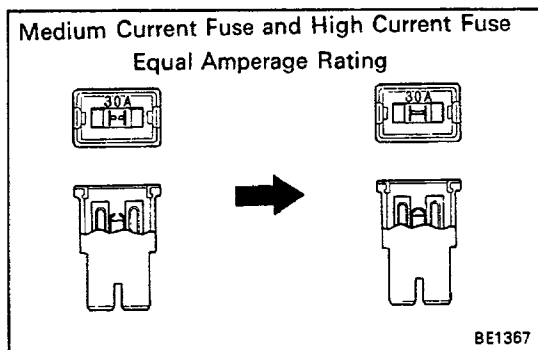

- 10. When replacing fuses, be sure the new fuse has the correct amperage rating. DO NOT exceed the rating or use one with a lower rating.

Illustration	Symbol	Part Name	Abbreviation
 BE5594	 IN0365	FUSE	FUSE
 BE5595	 IN0366	MEDIUM CURRENT FUSE	M-FUSE
 BE5596	 IN0367	HIGH CURRENT FUSE	H-FUSE
 BE5597	 IN0367	FUSIBLE LI1VK	FL
 BE5598	 IN0368	CIRCUIT BREAKER	CB

11. Care must be taken when jacking up and supporting the vehicle. Be sure to lift and support the vehicle at the proper locations (See page [IN-9](#)).
  - (a) If the vehicle is to be jacked up only at the front or rear end, be sure to block the wheels at the opposite end in order to ensure safety.
  - (6) After the vehicle is jacked up, be sure to support it on stands. It is extremely dangerous to do any work on a vehicle raised on a jack alone, even for a small job that can be finished quickly.
12. Observe the following precautions to avoid damage to the parts:
  - (a) Do not open the cover or case of the ECU, ECM, PCM or TCM unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)

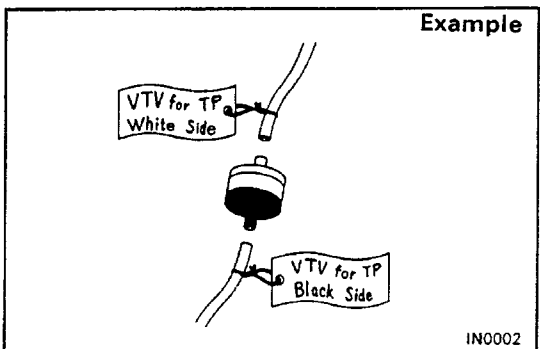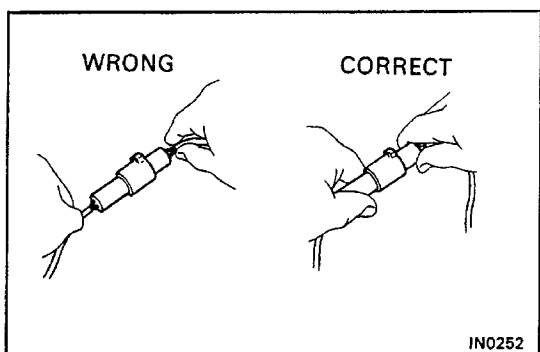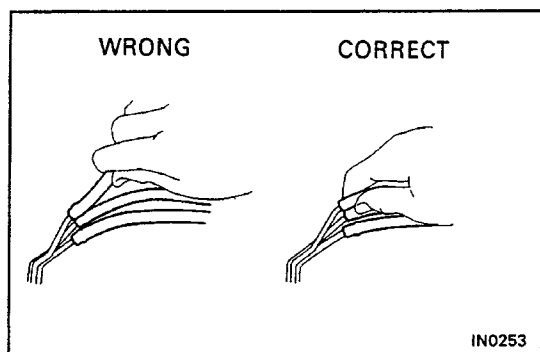

- (b) To disconnect vacuum hoses, pull on the end, not the middle of the hose.
  - (c) To pull apart electrical connectors, pull on the connector itself, not the wires.
  - (d) Be careful not to drop electrical components, such as sensors or relays. If they are dropped on a hard floor, they should be replaced and not reused.
  - (e) When steam cleaning an engine, protect the distributor, air filter, and VCV from water.
  - (f) Never use an impact wrench to remove or install temperature switches or temperature sensors.
  - (g) When checking continuity at the wire connector, insert the tester probe carefully to prevent terminals from bending.
  - (h) When using a vacuum gauge, never force the hose onto a connector that is too large. Use a step-down adapter instead. Once the hose has been stretched, it may leak.
13. Tag hoses before disconnecting them:
    - (a) When disconnecting vacuum hoses, use tags to identify how they should be reconnected.
    - (b) After completing a job, double check that the vacuum hoses are properly connected. A label under the hood shows the proper layout.

## PRECAUTION FOR VEHICLES EQUIPPED WITH A CATALYTIC CONVERTER

**CAUTION:** If large amounts of unburned gasoline flow into the converter, it may overheat and create a fire hazard. To prevent this, observe the following precautions and explain them to your customer.

**1. Use only unleaded gasoline.**

**2. Avoid prolonged idling.**

Avoid running the engine at idle speed for more than 20 minutes.

**3. Avoid spark jump test.**

(a) Perform spark jump test only when absolutely necessary. Perform this test as rapidly as possible.

(b) While testing, never race the engine.

**4. Avoid prolonged engine compression measurement.**


Engine compression tests must be done as rapidly as possible.

**5. Do not run engine when fuel tank is nearly empty.**

This may cause the engine to misfire and create an extra load on the converter.

**6. Avoid coasting with ignition turned off and prolonged braking.**

**7. Do not dispose of used catalyst along with parts contaminated with gasoline or oil.**

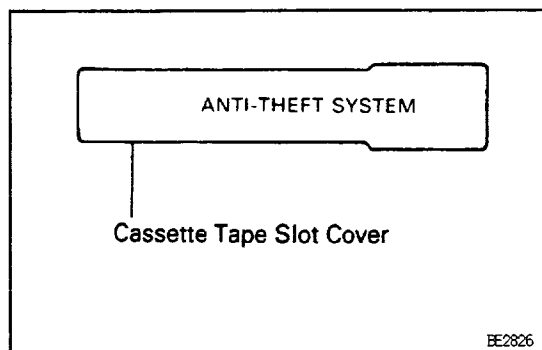

IN-01

## FOR VEHICLES WITH AN AUDIO SYSTEM WITH BUILT-IN ANTI-THEFT SYSTEM

Audio System displaying the sign "ANTI -THEFT SYSTEM" shown on the left has a built-in anti-theft system which makes the audio system soundless if stolen.


If the power source for the audio system is cut even once, the anti-theft system operates so that even if the power source is reconnected, the audio system will not produce any sound unless the ID number selected by the customer is input again. Accordingly, when performing repairs on vehicles equipped with this system, before disconnecting the battery terminals or removing the audio system the customer should be asked for the ID number so that the technician can input the ID number afterwards, or else a request made to the customer to input the ID number. For the method to input the ID number or cancel the anti-theft system, refer to the Owner's Manual.




# VEHICLE LIFT AND SUPPORT LOCATIONS


IN007-01

[2WD]

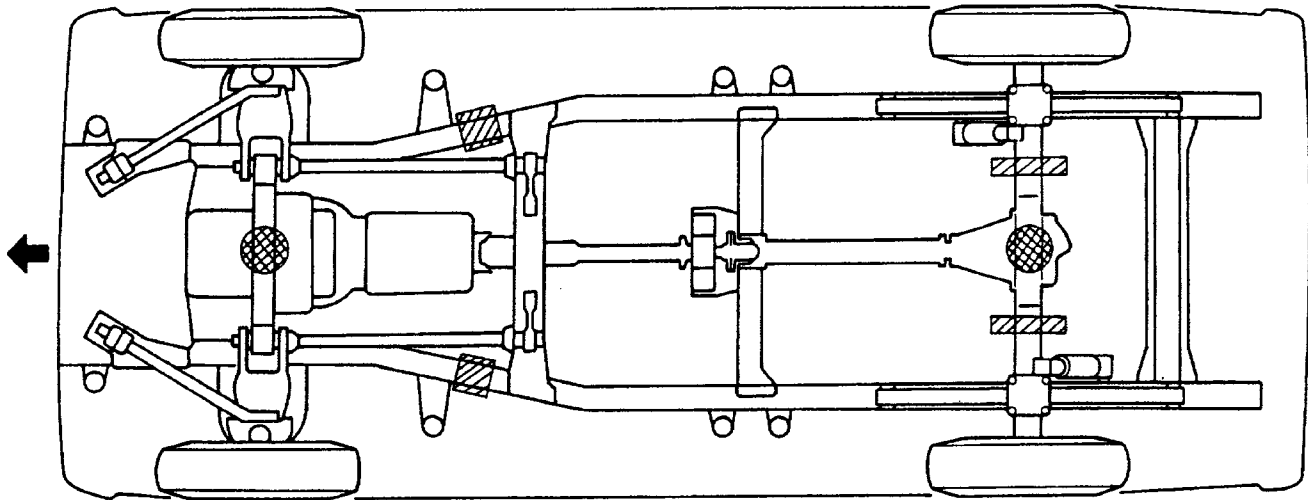

[4WD]

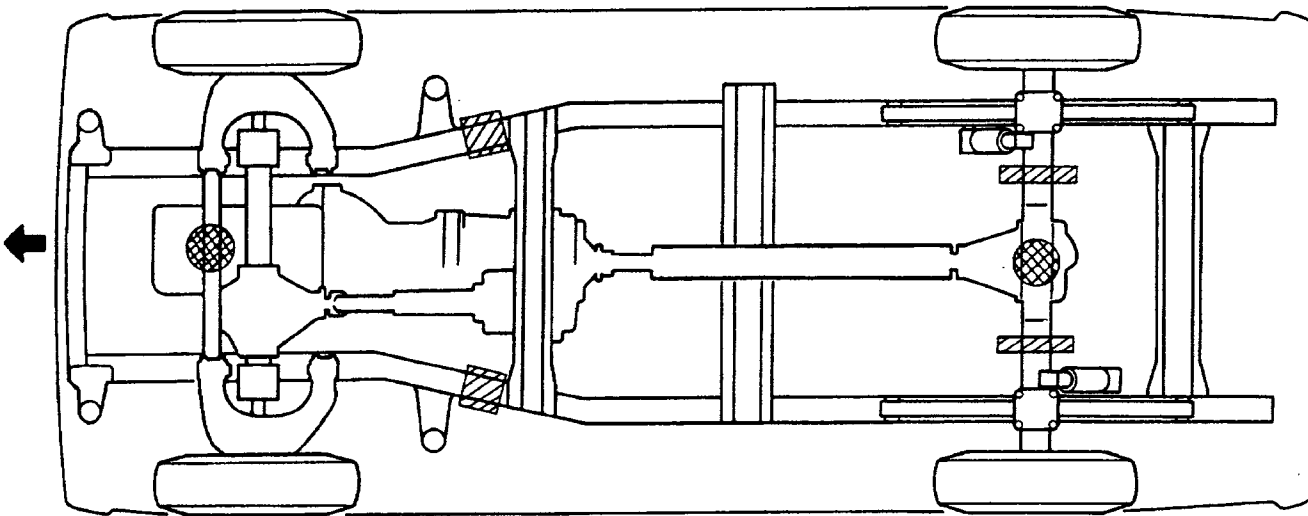

**JACK POSITION** .....   
 Front ..... Center of crossmember  
 Rear ..... Under the rear differential

**SUPPORT POSITION**  
 Safety stand ..... 

IN0012  
IN0108

Z04590

# ABBREVIATIONS USED IN THIS MANUAL

IN01D – 0C

ADD	Automatic Disconnecting Differential
ALR	Automatic Locking Retractor
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
BTDC	Before Top Dead Center
Calif.	California
CB	Circuit Breaker
C&C	Cab and Chassis
DP	Dash Pot
DRW	Double Rear Wheel
ECU	Electronic Control Unit
ELR	Emergency Locking Retractor
ESA	Electronic Spark Advance
EX	Exhaust (Manifold, Valve)
Ex.	Except
Fed.	Vehicles Sold in USA except California
FIPG	Formed in Place Gasket
FL	Fusible Link
Fr	Front
IG	Ignition
IN	Intake (Manifold, Valve)
J/6	Junction Block
LH	Left-Hand
LSPV	Load Sensing Proportioning Valve
LSP & BV	Load Sensing Proportioning and By-Pass Valve
Max.	Maximum
Min.	Minimum
MP	Multipurpose
M/T	Manual Transmission
O/D, OD	Overdrive
OHC	Over Head Camshaft
o/s	Oversize
PCV	Positive Crankcase Ventilation
PPS	Progressive Power Steering
PS	Power Steering
RH	Right-Hand
Rr	Rear
SRW	Single Rear Wheel
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
SW	Switch

TCCS	Toyota Computer Controlled System
TDC	Top Dead Center
TEMP.	Temperature
T/M	Transmission
U/S	Undersize
VCV	Vacuum Control Valve
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
w/o	Without
2WD	Two Wheel Drive Vehicles (4 x 2)
4WD	Four Wheel Drive Vehicles (4 x 4)

# GLOSSARY OF SAE AND TOYOTA TERMS

M078-03

This glossary lists all SAE–J 1930 terms and abbreviations used in this manual in compliance with SAE recommendations, as well as their Toyota equivalents.

SAE ABBRE- VIATIONS	SAE TERMS	TOYOTA TERMS ( )—ABBREVIATIONS
A/C	Air Conditioning	Air Conditioner
ACL	Air Cleaner	Air Cleaner
AIR	Secondary Air Injection	Air Injection (AD
AP	Accelerator Pedal	—
B +	Battery Positive Voltage	+ B, Battery Voltage
BARO	Barometric Pressure	--
CAC	Charge Air Cooler	Intercooler
CARB	Carburetor	Carburetor
CFI	Continuous Fuel Injection	—
CKP	Crankshaft Position	Crank Angle
CL	Closed Loop	Closed Loop
CMP	Camshaft Position	Cam Angle
CPP	Clutch Pedal Position	—
CTOX	Continuous Trap Oxidizer	—
CT P	Closed Throttle Position	—
D FI	Direct Fuel Injection (Diesel)	Direct Injection (DI)
DI	Distributor ignition	—
DLC1 DLC2 DLC3	Data Link Connector 1 Data Link Connector 2 Data Link Connector 3	1: Check Connector 2: Toyota Diagnosis Communication Link (TDCL) 3: OBDII Diagnostic Connector
DTC	Diagnostic Trouble Code	Diagnostic Code
DTM	Diagnostic Test Mode	—
ECL	Engine Control Level	—
ECM	Engine Control Module	Engine ECU (Electronic Control Unit)
ECT	Engine Coolant Temperature	Coolant Temperature, Water Temperature (THW)
EEPROM	Electrically Erasable Programmable Read Only Memory	Electrically Erasable Programmable Read Only Memory (EEPROM), Erasable Programmable Read Only Memory (EPROM)
EFE	Early Fuel Evaporation	Cold Mixture Heater (CMH), Heat Control Valve (HCV)
EGR	Exhaust Gas Recirculation	Exhaust Gas Recirculation (EGR)
EI	Electronic Ignition	Toyota Distributable Ignition (TDI)
EM	Engine Modification	Engine Modification (EM)
EPROM	Erasable Programmable Read Only Memory	Programmable Read Only Memory (PROM)
EVAP	Evaporative Emission	Evaporative Emission Control (EVAP)
FC	Fan Control	—
FEEPROM	Flash Electrically Erasable Programmable Read Only Memory	—
FEPROM	Flash Erasable Programmable Read Only Memory	—
FF	Flexible Fuel	—
FP	Fuel Pump	Fuel Pump
GEN	Generator	Alternator
GND	Ground	Ground (GND)
H02S	Heated Oxygen Sensor	Heated Oxygen Sensor (H02S)











IAC	Idle Air Control	Idle Speed Control (ISC)
IAT	Intake Air Temperature	Intake or Inlet Air Temperature
ICM	Ignition Control Module	—
IFI	Indirect Fuel Injection	Indirect injection
IFS	Inertia Fuel-Shutoff	—
ISC	Idle Speed Control	—
KS	Knock Sensor	Knock Sensor
MAF	Mass Air Flow	Air Flow Meter
MAP	Manifold Absolute Pressure	Manifold Pressure Intake Vacuum
MC	Mixture Control	Electric Bleed Air Control Valve (EBCV) Mixture Control Valve (MCV) Electric Air Control Valve (EACV)
MDP	Manifold Differential Pressure	—
MFt	Multiport Fuel Injection	Electronic Fuel Injection (EFI)
MIL	Malfunction Indicator Lamp	Check Engine Light
MST	Manifold Surface Temperature	—
MVZ	Manifold Vacuum Zone	—
NVRAM	Non-Volatile Random Access Memory	—
O2S	Oxygen Sensor	Oxygen Sensor, O <sub>2</sub> Sensor (O2S)
OBD	On-Board Diagnostic	On-Board Diagnostic (OBD)
OC	Oxidation Catalytic Converter	Oxidation Catalyst Converter (OC), CCo
OP	Open Loop	Open Loop
PAIR	Pulsed Secondary Air Injection	Air Suction (AS)
PCM	Powertrain Control Module	—
PNP	Park/Neutral Position	—
PROM	Programmable Read Only Memory	—
PSP	Power Steering Pressure	—
PTOX	Periodic Trap Oxidizer	Diesel Particulate Filter (DPF) Diesel Particulate Trap (DPT)
RAM	Random Access Memory	Random Access Memory (RAM)
RM	Relay Module	—
ROM	Read Only Memory	Read Only Memory (ROM)
RPM	Engine Speed	Engine Speed
SC	Supercharger	Supercharger
SCB	Supercharger Bypass	—
SFI	Sequential Multiport Fuel Injection	Electronic Fuel Injection (EFI), Sequential Injection
SPL	Smoke Puff Limiter	—
SRI	Service Reminder Indicator	—
SRT	System Readiness Test	—
ST	Scan Tool	—
TB	Throttle Body	Throttle Body
TBI	Throttle Body Fuel Injection	Single Point Injection Central Fuel Injection (Ci)
TC	Turbocharger	Turbocharger
TCC	Torque Converter Clutch	Torque Converter
TCM	Transmission Control Module	Transmission ECU (Electronic Control Unit)
TP	Throttle Position	Throttle Position
TR	Transmission Range	—

TVV	Thermal Vacuum Valve	Bimetal Vacuum Switching Valve (BVSV) Thermostatic Vacuum Switching Valve (TVSV)
twc	Three-Way Catalytic Converter	Three-Way Catalyst (TWC) CCRO
TWC+OC	Three-Way + Oxidation Catalytic Converter	CC <sub>R</sub> + CCo
VAF	Volume Air Flow	Air Flow Meter
VR	Voltage Regulator	Voltage Regulator
VSS	Vehicle Speed Sensor	Vehicle Speed Sensor (Read Switch Type)
wot	Wide Open Throttle	Full Throttle
WU –OC	Warm Up Oxidation Catalytic Converter	–
WU–TWC	Warm Up Three-Way Catalytic Converter	Manifold Converter
3GR	Third Gear	--
4GR	Fourth Gear	--

# STANDARD BOLT TORQUE SPECIFICATIONS

IN008-01

## HOW TO DETERMINE BOLT STRENGTH

	Mark	Class		Mark	Class
Hexagon head bolt	 Bolt head No 4— 5— 6— 8— 9— 10— 11—	4T 5T 6T 7T 8T 9T 10T 11T	Stud bolt	 No mark	4T
	 No mark	4T			
Hexagon flange bolt w/ washer hexagon bolt	 No mark	4T		 Grooved	6T
Hexagon head bolt	 Two protruding lines	5T			
Hexagon flange bolt w/ washer hexagon bolt	 Two protruding lines	6T	Welded bolt		
Hexagon head bolt	 Three protruding lines	7T			4T
Hexagon head bolt	 Four protruding lines	8T			

## SPECIFIED TORQUE FOR STANDARD BOLTS

Class	Diameter mm	Pitch mm	Specified torque					
			Hexagon head bolt			Hexagon flange bolt		
			N·m	kgf·cm	ft·lbf	N·m	kgf·cm	ft·lbf
4T	6	1	5	55	48 in.·lbf	6	60	52 in.·lbf
	8	1.25	12.5	130	9	14	145	10
	10	1.25	26	260	19	29	290	21
	12	1.25	47	480	35	53	540	39
	14	1.5	74	760	55	84	850	61
	16	1.5	115	1,150	83	—	—	—
5T	6	1	6.5	65	56 in.·lbf	7.5	75	65 in.·lbf
	8	1.25	15.5	160	12	17.5	175	13
	10	1.25	32	330	24	36	360	26
	12	1.25	59	600	43	65	670	48
	14	1.5	91	930	67	100	1,050	76
	16	1.5	140	1,400	101	—	—	—
6T	6	1	8	80	69 in.·lbf	9	90	78 in.·lbf
	8	1.25	19	195	14	21	210	15
	10	1.25	39	400	29	44	440	32
	12	1.25	71	730	53	80	810	59
	14	1.5	110	1,100	80	125	1,250	90
	16	1.5	170	1,750	127	—	—	—
7T	6	1	10.5	110	8	12	120	9
	8	1.25	25	260	19	28	290	21
	10	1.25	52	530	38	58	590	43
	12	1.25	95	970	70	105	1,050	76
	14	1.5	145	1,500	108	165	1,700	123
	16	1.5	230	2,300	166	—	—	—
8T	8	1.25	29	300	22	33	330	24
	10	1.25	61	620	45	68	690	50
	12	1.25	110	1,100	80	120	1,250	90
9T	8	1.25	34	340	25	37	380	27
	10	1.25	70	710	51	78	790	57
	12	1.25	125	1,300	94	140	1,450	105
10T	8	1.25	38	390	28	42	430	31
	10	1.25	78	800	58	88	890	64
	12	1.25	140	1,450	105	155	1,600	116
11T	8	1.25	42	430	31	47	480	35
	10	1.25	87	890	64	97	990	72
	12	1.25	155	1,600	116	175	1,800	130



# MAINTENANCE OPERATIONS ENGINE

## Cold Engine Operations

### 1. (3VZ-E ENGINE)

#### REPLACE TIMING BELT

- (a) Remove the timing belt.  
(See pages [EG-32](#))
- (b) Install the timing belt.  
(See pages [EG-41](#))

### 2. INSPECT DRIVE BELTS

- (a) Visually check the belt for excessive wear, frayed cords etc.

#### HINT:

Conventional type:



Check that the belt does not touch the bottom of the pulley groove.

If necessary, replace the drive belt.

V-Ribbed type:

Cracks on the ribbed side of the belt are considered acceptable.

If the belt has chunks missing from the ribs, it should be replaced.

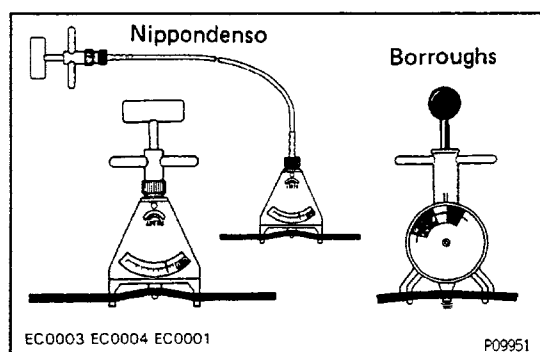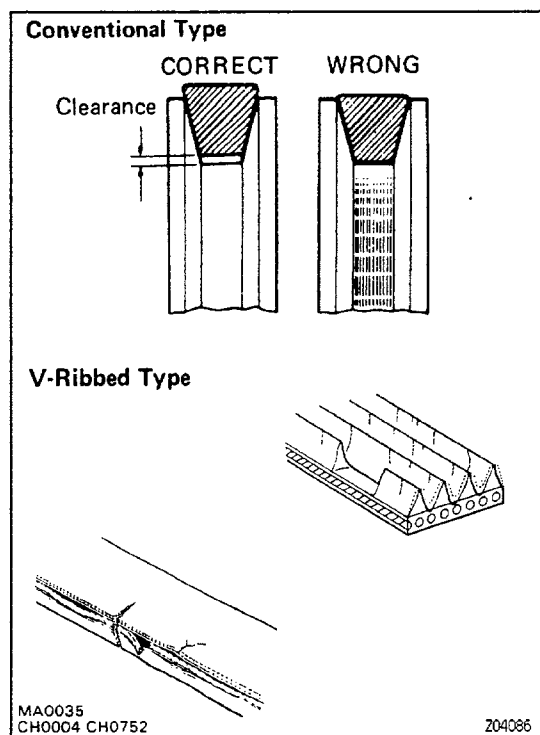

- (b) Using a belt tension gauge, check the drive belt tension.

#### Belt tension gauge:

Nippondenso BTG – 20 (95506-00020) or

Borroughs No. BT-33-73F

#### Drive belt tension:

22R-E Used belt  $80 \pm 20$  lbf

New belt  $125 \pm 25$  lbf

3VZ – E

Generator Used belt  $100 \pm 20$  lbf

New belt  $160 \pm 20$  lbf





PS Used belt  $80 \pm 20$  lbf

New belt  $125 \pm 25$  lbf

A/C Used belt  $80 \pm 20$  lbf

New belt  $125 \pm 25$  lbf

If necessary, adjust the drive belt tension.

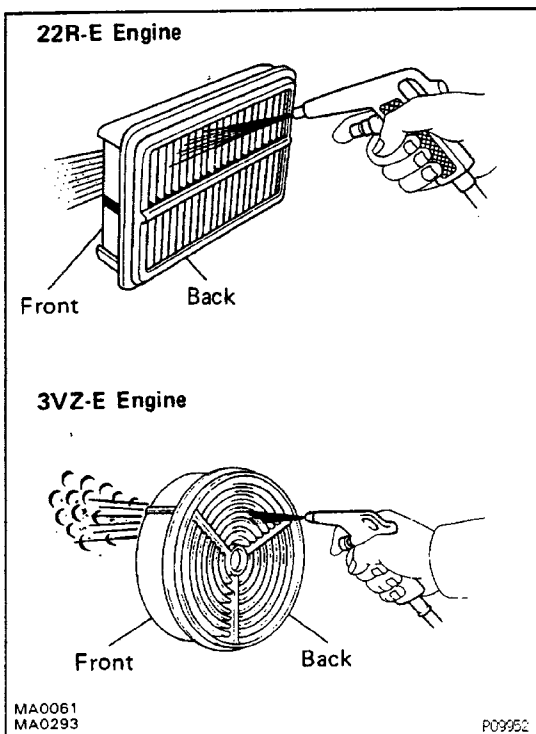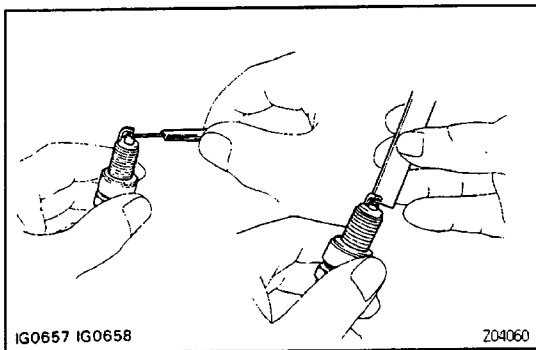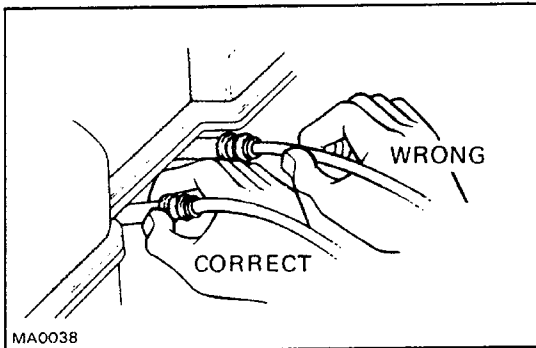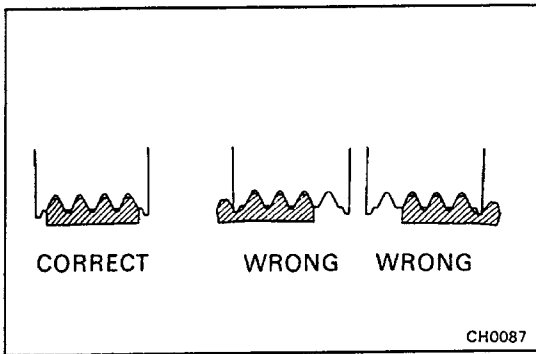**HINT:**

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.
- After replacing the drive belt, check that it fits properly in the ribbed grooves, especially in the places difficult to see.
- After installing a new belt, run the engine for approx. 5 minutes and then recheck the tension.

**3. REPLACE SPARK PLUGS**

- (a) Disconnect the high-tension cords at the boot.  
Do not pull on the cords.
- (b) (2213 – E)  
Remove the spark plugs.  
(3VZ – E)  
Using plug wrench (16 mm), remove the spark plugs.

- (c) Check the electrode gap of new spark plugs.

**Correct electrode gap:****0.8 mm (0.031 in.)****Recommended spark plugs:****22R-E ND W16EXR-U****NGK BPRSEY****3VZ-E ND K76R-U****NGK BKR5EYA****4. INSPECT AIR FILTER**

- (a) Visually check that the air cleaner element is not excessively dirty, damaged or oily.

**HINT:** Oiliness may indicate a stuck PCV valve.

If necessary, replace the air cleaner element.



- (b) Clean the element with compressed air.

First blow from back side thoroughly, then blow off the front side of the element.

**5. REPLACE AIR FILTER**

Replace the used air cleaner element with a new one.

**6. REPLACE ENGINE OIL AND OIL FILTER****22R – E (See page [EG-236](#))****3VZ– E (See page [EG-278](#))****Oil grade:****API grade SG Energy – Conserving II multigrade  
and recommended viscosity oil****Engine oil capacity:****Drain and refill**

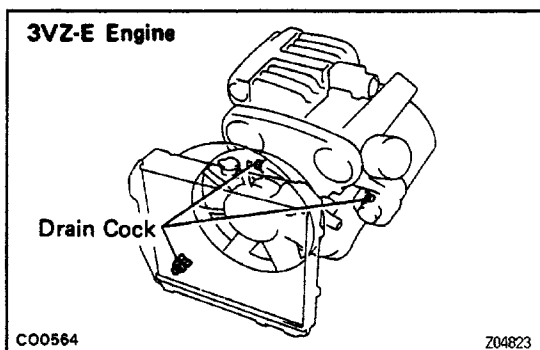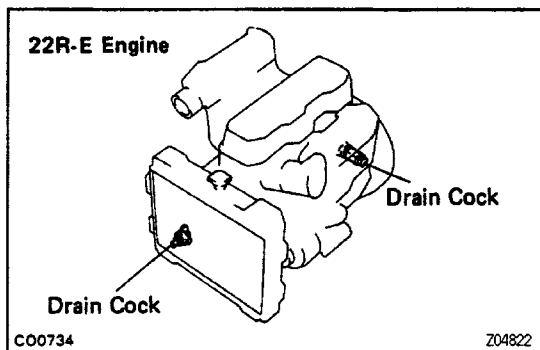**22 R – E****w/o Oil filter change****3.8 liters (4.0 US qts, 3.3 Imp. qts)****w/ Oil filter change****4.3 liters (4.5 US qts, 3.8 Imp. qts)****3VZ-E****w/o Oil filter change****2WD 4.0 liters (4.2 US qts, 3.5 Imp. qts)****4WD 4.2 liters (4.4 US qts, 3.7 Imp. qts)****w/ Oil filter change****2WD 4.3 liters (4.5 US qts, 3.8 Imp. qts)****4WD 4.5 liters (4.8 US qts, 4.0 Imp. qts)****7. REPLACE ENGINE COOLANT**

- (a) Drain the coolant from the radiator and engine drain cocks.
- (b) Close the drain cocks.
- (c) Fill system with coolant.


**Coolant capacity (w/ Heater or air conditioner):****22R-E****Ex. 4WD A/T 8.4 liters (8.8 US qts, 7.4 Imp. qts)****4WD A/T 9.1 liters 0.6 US qts, 8.0 Imp. qts)****3VZ-E****2WD M/T 10.4 liters (11.0 US qts, 9.2 Imp. qts)****A/T 10.2 liters (10.8 US qts, 9.5 Imp. qts)****4WD M/T 10.5 liters (11.1 US qts, 9.2 Imp. qts)****A/T 10.3 liters (10.9 US qts, 9.1 Imp. qts)****HINT:**

Use a good brand of ethylene-glycol base coolant, mixed according to the manufacturer's instructions.

Using coolant which has more than 50% ethylene-glycol (but not more than 70%) is recommended.

**NOTICE:**

- Do not use an alcohol type coolant.
- The coolant should be mixed with demineralized water or distilled water.

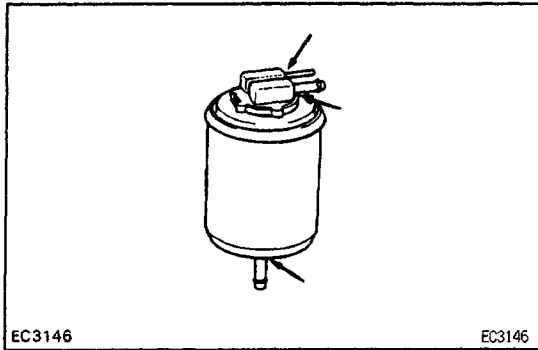


## 8. INSPECT CHARCOAL CANISTER

(a) Remove charcoal canister.

HINT: Label hoses for correct installation.

(b) Visually inspect canister case.

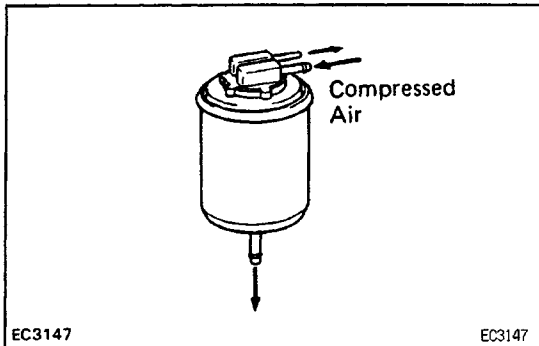


(c) Check for clogged filter and stuck check valve.

(1) Using low compressed air (4.71 kPa (48 gf/cm<sup>2</sup>, 0.68 psi), blow into the tank pipe and check that air flows without resistance from the other pipes.

(2) Blow air (4.71 kPa (48 gf/cm<sup>2</sup>, 0.68 psi) into the purge pipe and check that air does not flow from the other pipes.

If a problem is found, replace the charcoal canister.

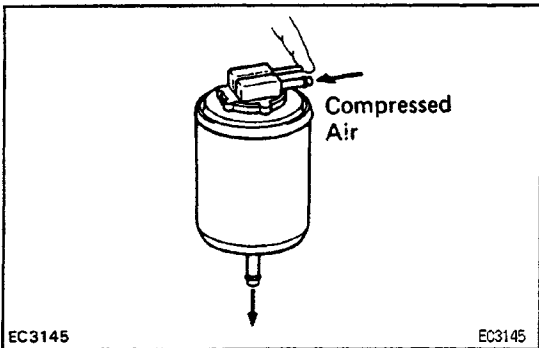


(d) Clean filter in canister.

(1) Clean the filter by blowing 294kPa (3 kgf/cm<sup>2</sup>, 43 psi) of compressed air into the tank pipe while holding the purge pipe closed.

### NOTICE:

- Do not attempt to wash the canister.
- No activated carbon should come out.

(e) Install charcoal canister.

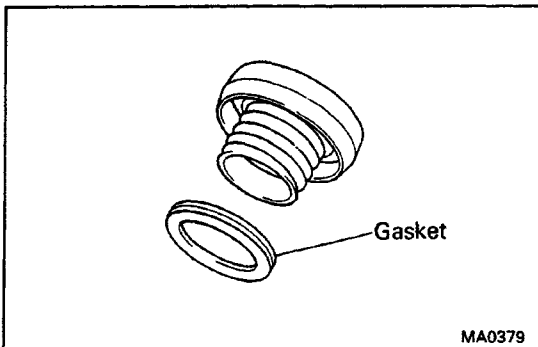

## 9. REPLACE GASKET IN FUEL TANK CAP

(a) Remove the old gasket (O-ring) from the tank cap.

Do not damage the cap.


(b) Install a new gasket by hand.

(c) Inspect the cap for damage or cracks.

(d) Install the cap and check the torque limiter.

## 10. INSPECT FUEL LINES AND CONNECTIONS

Visually inspect the fuel lines for cracks, leakage loose connections, deformation or tank band looseness.

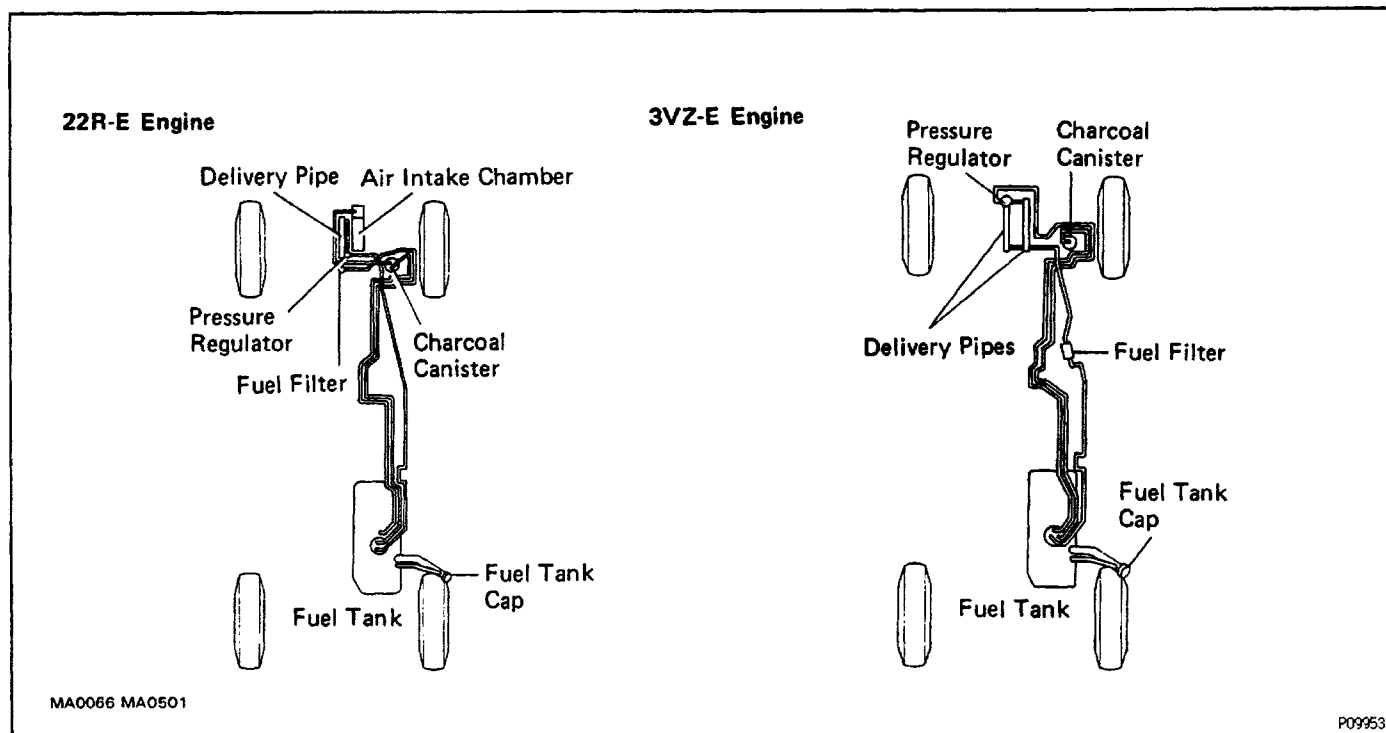


### 11. INSPECT EXHAUST PIPES AND MOUNTINGS

Visually inspect the pipes, hangers and connections for severe corrosion, leaks or damage.

### 12. (3VZ-E ENGINE)

#### ADJUST VALVE CLEARANCE

(See page [EG-18](#))

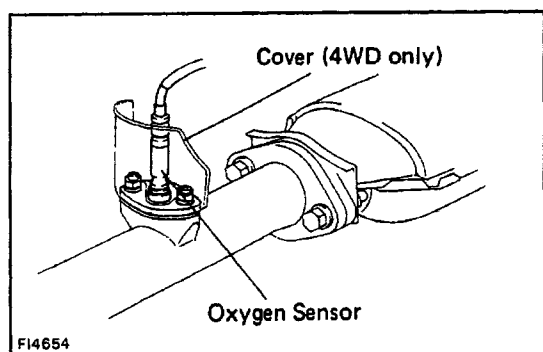

### 13. (FEDERAL AND CANADA)

#### REPLACE OXYGEN SENSOR

- Disconnect the oxygen sensor wiring connector.
- Remove the cover (4WD), oxygen sensor and gasket from the exhaust pipe.
- Install a new gasket, oxygen sensor and cover (4WD) to the exhaust pipe.


**Torque: 20 N-m (200 kgf-cm, 14 ft-lbf)**

- Inspect oxygen sensor operation.

Inspect feedback control.

22R-E (See page [EG-212](#))

3VZ-E (See page [EG-252](#))

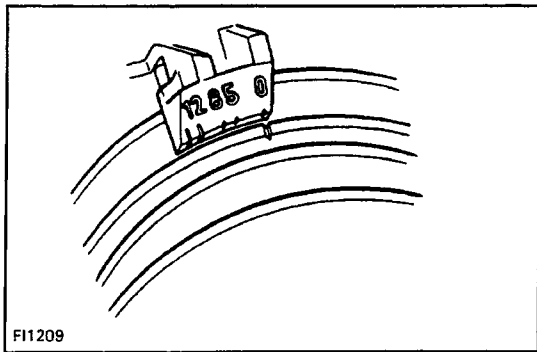

## Hot Engine Operations


### 14. (22R-E ENGINE)

#### ADJUST VALVE CLEARANCE

- Warm up the engine to normal operating temperature.
- Stop the engine and remove the cylinder head cover.
- Set No.1 cylinder to TDC/compression.

- Turn the crankshaft with a wrench to align the timing marks at TDC. Set the groove on the pulley to the "O" position.
- Check that the rocker arms on No.1 cylinder are loose and rocker arms on No.4 cylinder are tight.

If not, turn the crankshaft one complete revolution and align marks as above.

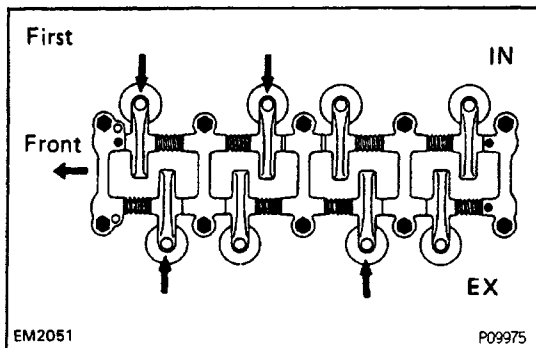


- Adjust the clearance of half of the valves.

- Adjust only the valves indicated by arrows.


#### Valve clearance:

Intake 0.20 mm (0.008 in.)

Exhaust 0.30 mm (0.012 in.)

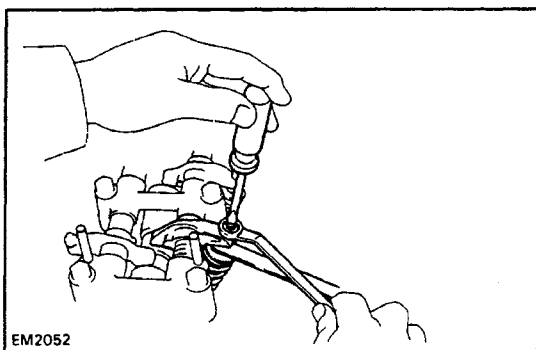

- Use a thickness gauge to measure between the valve stem and rocker arm. Loosen the lock nut and turn the adjusting screw to set the proper clearance. Hold the adjusting screw in position, and tighten the lock nut.
- Recheck the clearance. The thickness- gauge should move with a very slight drag.

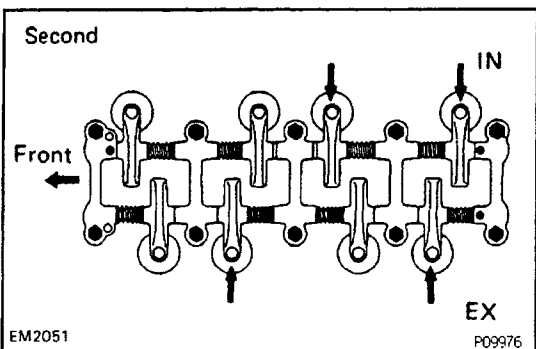


- Turn the crankshaft one complete revolution (360 °) and align timing marks in the manner mentioned above. Adjust only the valves indicated by arrows.

- Reinstall the cylinder head cover.

### 16. ADJUST IDLE SPEED

- Preparation

- Install air cleaner
- Connect all pipes and hoses of air intake system

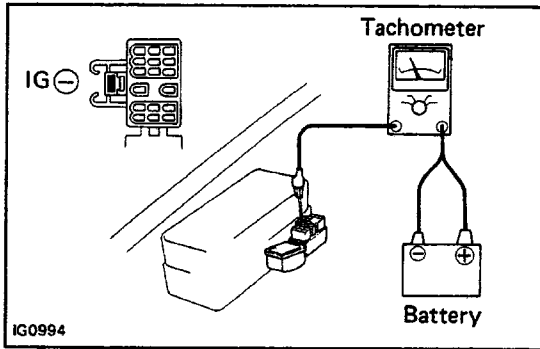


- Connect all vacuum lines (i.e., EVAP, EGR system, etc.)
- Make sure all MFI system wiring connectors are fully connected
- Engine should be at normal operating temperature
- Switch off accessories
- Set transmission in neutral

(b) Connect a tachometer– to the engine

Connect the tachometer– test probe to the iG E) terminal of the DLC1.

**NOTICE:**

- **NEVER** allow the tachometer terminal to touch ground as it could result in damage to the igniter and/or ignition coil.
- As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.

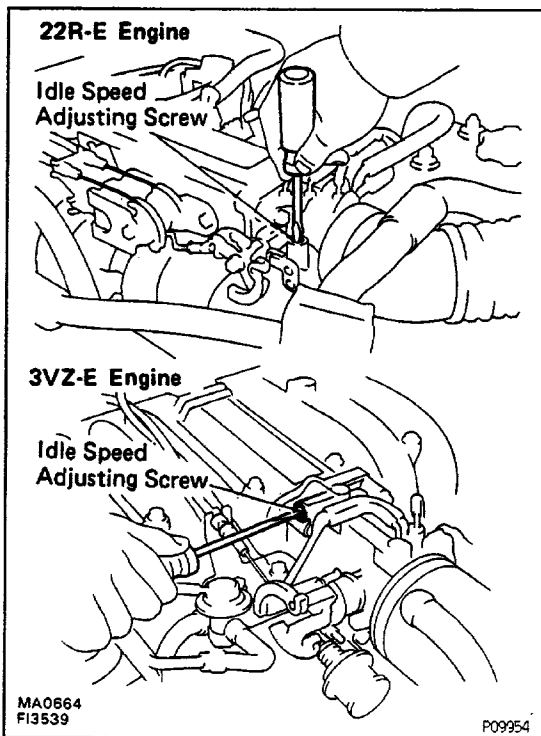

(c) Race the engine at 2,500 rpm for approx. 2 minutes.

(d) Set the idle speed by turning the idle speed adjusting screws.


**Idle speed:**

**22R–E 4WD A/T 850 rpm**

**Ex. 4WD A/T 750 rpm**

**3VZ–E 800 rpm**

(e) Remove the tachometer.

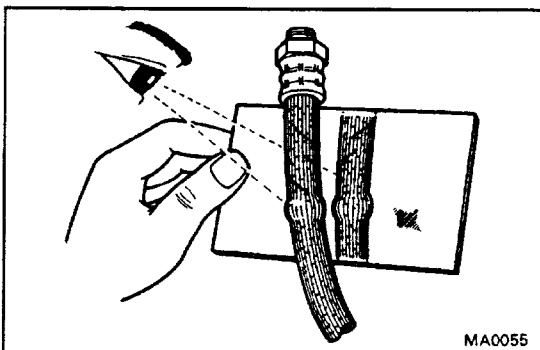


## BRAKES

### 16. INSPECT BRAKE LINE PIPES AND HOSES

**HINT:** Inspect in a well – lighted area. Inspect the entire circumference and length of the brake hoses using a mirror as required. Turn the front wheels fully right or left before inspecting the front brake.


(a) Check all brake lines and hoses for:

- Damage

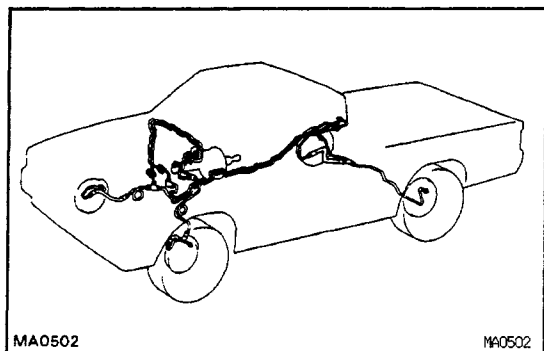

- Wear
- Deformation
- Cracks
- Corrosion
- Leaks
- Bends
- Twists

- (b) Check all clamps for tightness and connections for leakage. .
- (c) Check that the hoses and lines are clear of sharp edges, moving parts and the exhaust system.
- (d) Check that the lines installed in grommets pass through the center of the grommets.

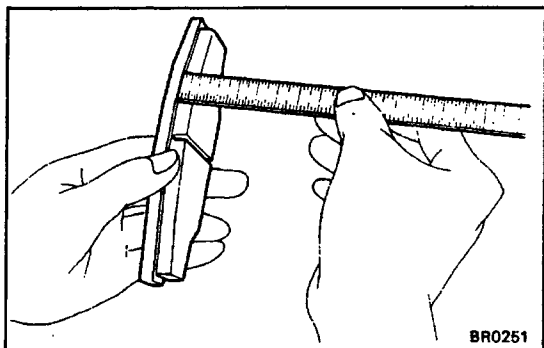


## 17. INSPECT FRONT BRAKE PADS AND DISCS

(See BR section)


- (a) Check the thickness of the disc brake pad and check for irregular wear.

**Minimum lining thickness:**

**1.0 mm (0.039 in.)**

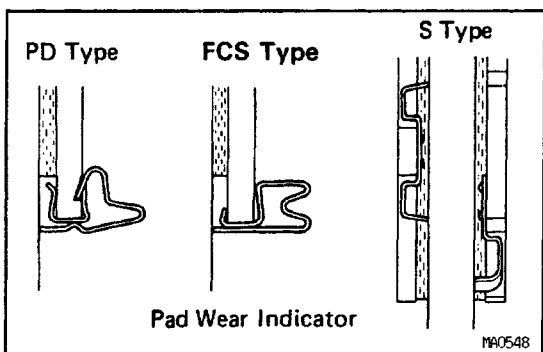

HINT: If a squealing or scraping noise occurs from the brake during driving, check the pad wear indicator. If there are traces of the indicator contacting the disc rotor, the disc pad should be replaced.

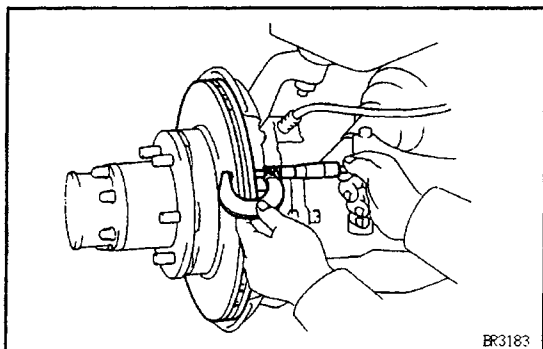

- (b) Check the disc for wear.

**Minimum disc thickness:**

**2WD FS17 type 21.0 mm (0.827 in.)**


**FS18 type 20.0 mm (0.787 in.)**

**PD60 type 23.0 mm (0.906 in.)**

**PD66 type 28.0 mm (1.102 in.)**

**4WD S 12 + 12 Type 18.0 mm (0.790 in.)**



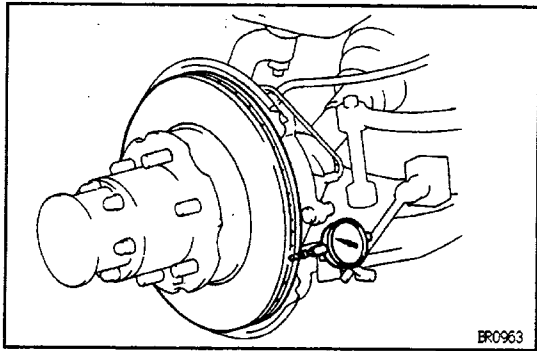


(c) Check the disc for runout.

**Minimum disc runout:**

**Ex. C & C 0.09 mm (0.0035 in.)**

**C & C 0.12 mm (0.0047 in.)**

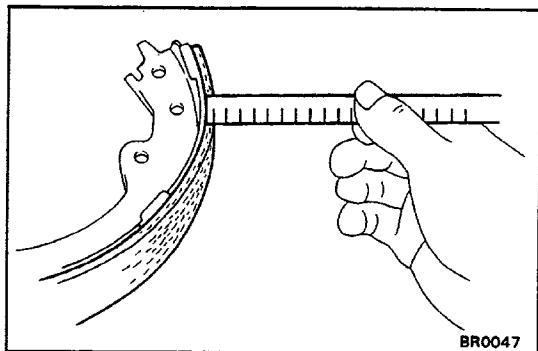


## 18. INSPECT REAR BRAKE LININGS AND DRUMS

(See BR section)

(a) Check the lining – to – drum contact condition and lining wear.

**Minimum lining thickness:**

**1.0 mm (0.0039 in.)**

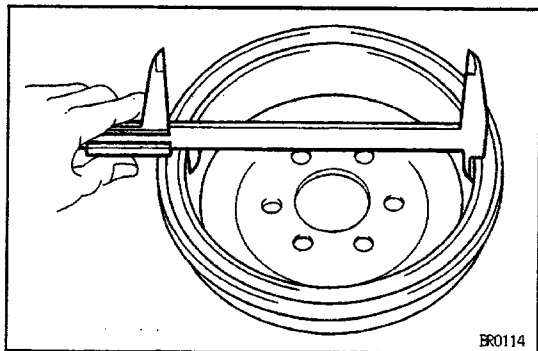

(b) Check the brake drum for scoring or wear.


**Maximum drum inside diameter:**

**2WD 256.0 mm (10.079 in.)**

**4WD 297.0 mm (11.693 in.)**

(c) Clean the brake parts with a damp cloth.

**NOTICE: Do not use compressed air to clean the brake parts.**

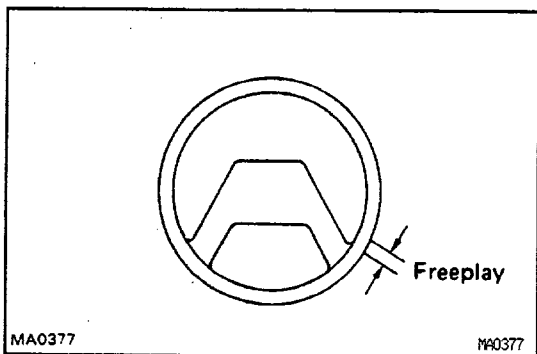

## CHASSIS

### 19. INSPECT STEERING LINKAGE


(a) Check the steering wheel freeplay.

**Maximum:**

**30 mm (1.18 in.)**

With the vehicle stopped and pointed straight ahead, rock the steering wheel gently back and forth with light finger pressure.

If incorrect, adjust or repair.

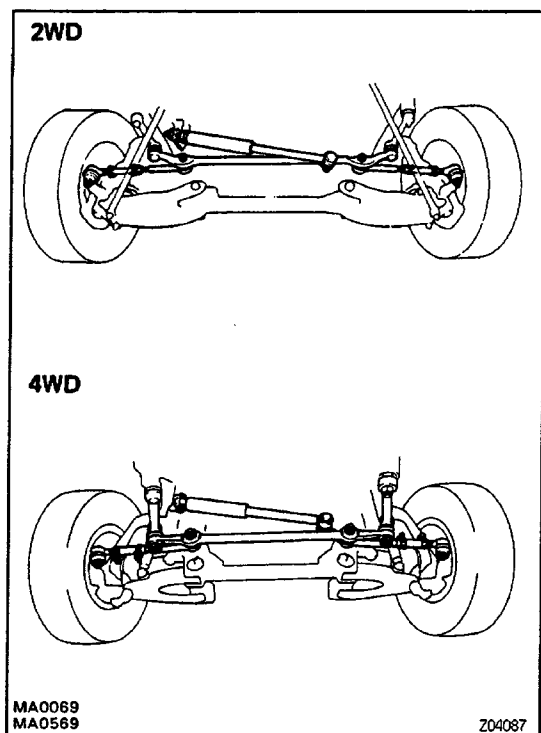

**(b) Check the steering linkage for looseness or damage.**


**Check that:**

- Tie rod ends and relay rod ends do not have excessive play.
- Dust seals are not damaged.

**20. INSPECT STEERING GEAR HOUSING**

Check the steering gear housing for oil leaks.

If leakage is found, check for cause and repair.

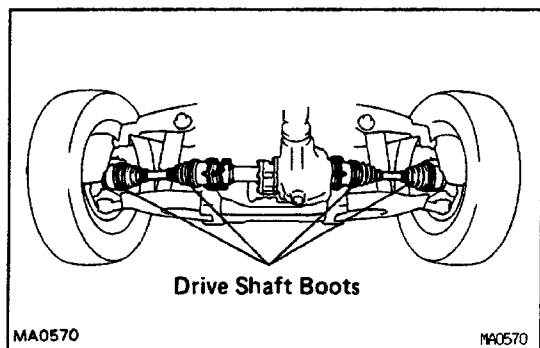


**21. (4WD)**


**INSPECT DRIVE SHAFT BOOTS**

Inspect the drive shaft boots for clamp looseness, grease leakage or damage.

**22. INSPECT BALL JOINTS AND DUST COVERS**

- Inspect the ball joints for excessive looseness.  
(See SA section)
- Inspect the dust cover for damage.

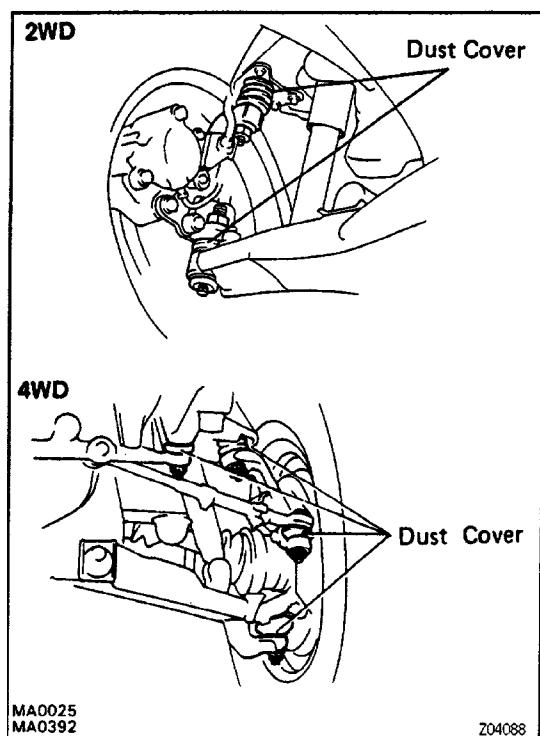

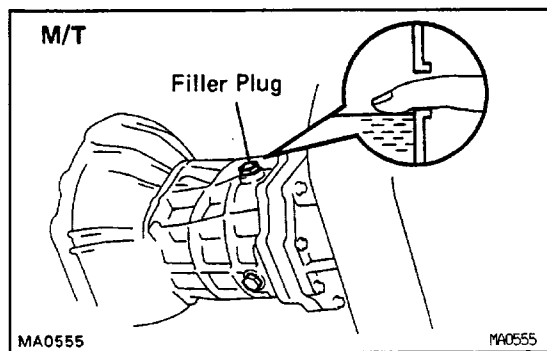**23. (2WD)****CHECK OIL LEVEL IN MANUAL TRANSMISSION, AUTOMATIC TRANSMISSION AND DIFFERENTIAL**


Remove the filler plug and feel inside the hole with your finger. Check that the oil comes to within 5 mm (0.20 in.) of the bottom edge of the hole. If the level is low, add oil until it begins to run out of the filler hole.

**Transmission oil (M/T) –****Oil grade:**

**API GL-4 or GL-5**

**Viscosity:**


**SAE 75W-90**

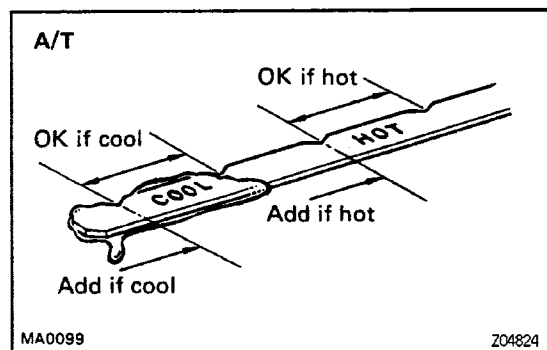

Check the automatic transmission for oil leakage. If leakage is found, check for cause and repair.

**Transmission fluid (A/T):**

**ATF DEXRON® II**

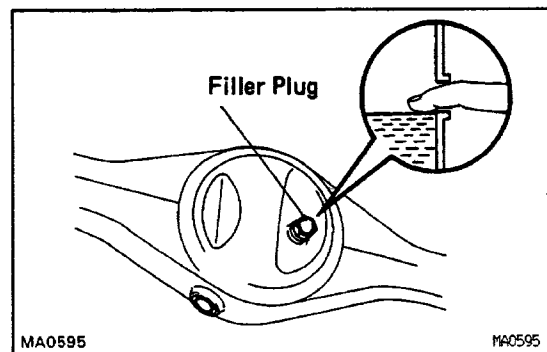

Remove the filler plug and feel inside the hole with your finger. Check that the oil comes to within 5 mm (0.20 in.) of the bottom edge of the hole. If the level is low, add oil until it begins to run out of the filler hole.


**Differential oil – –****Oil grade:**

**AN GL-5 hypoid gear oil**

**Viscosity:**

**Above -18 ° C (0 ° F) SAE 90**

**Below -18 ° C (0 ° F) SAE 80W-90 or 80W**

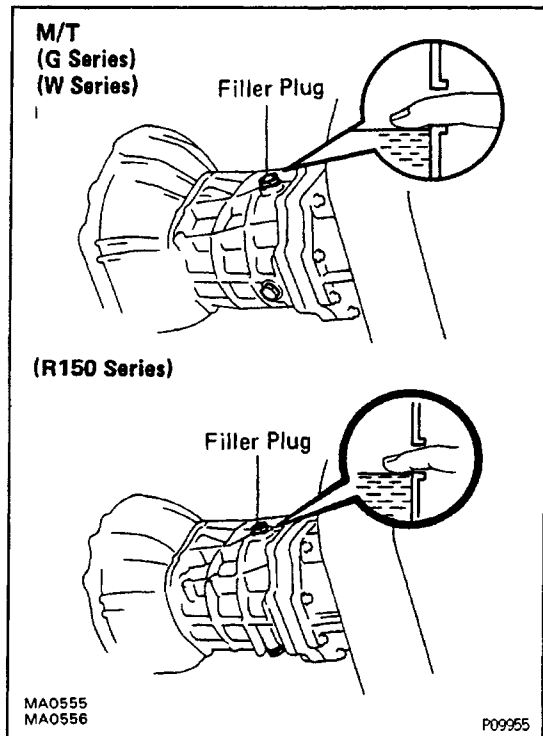

## 24. (4WD)

### CHECK OIL LEVEL IN MANUAL TRANSMISSION, AUTOMATIC TRANSMISSION, TRANSFER AND DIFFERENTIAL

Remove the filler plug and feel inside the hole with your finger. Check that the oil comes to within 5 mm (0.20 in.) of the bottom edge of the hole. If the level is low, add oil until it begins to run out of the filler hole.


#### Transmission oil (M/T) –

##### Oil grade:

API GL-4 or GL-5

##### Viscosity:

SAE 75W-90

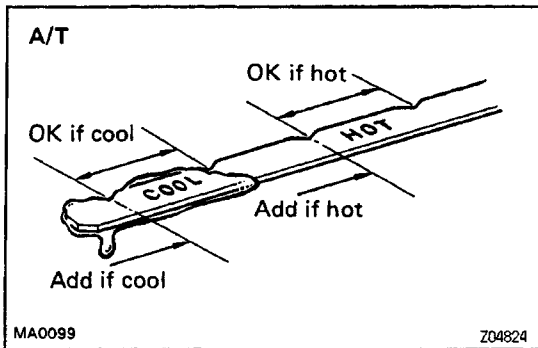


Check the automatic transmission for oil leakage.

If leakage is found, check for cause and repair.

#### Transmission fluid (A/T):

ATF DEXRON® II

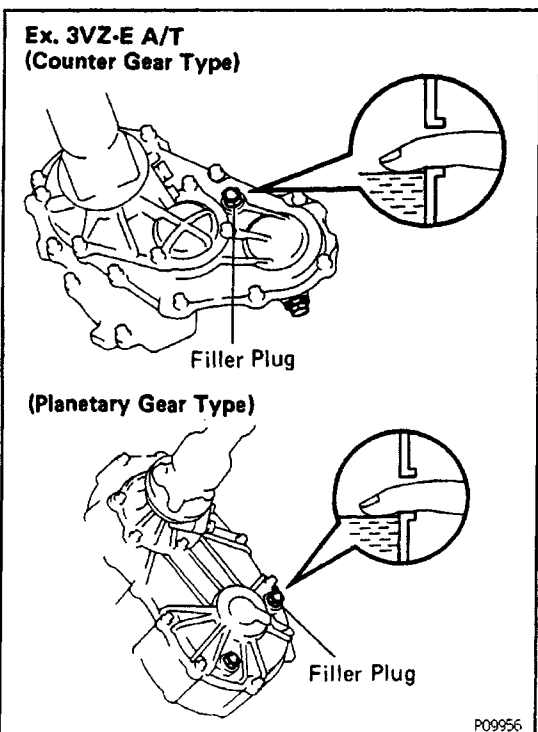

Remove the filler– plug and feel inside the hole with your finger. Check that the oil comes to within 5 mm (0.20 in.) of the bottom edge of the hole. If the level is low, add oil until it begins to run out of the filler hole.




#### Transfer oil (Ex. 3vZ – E A/T) –

##### Oil grade: AN GL-4 or GL-5

##### Viscosity: SAE 75W-90

#### Transfer fluid (3VZ– E A/T):

ATF DEXRON® II

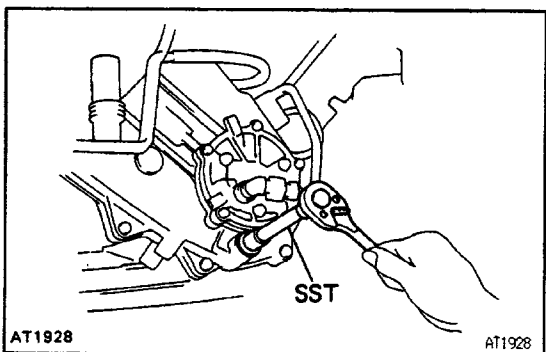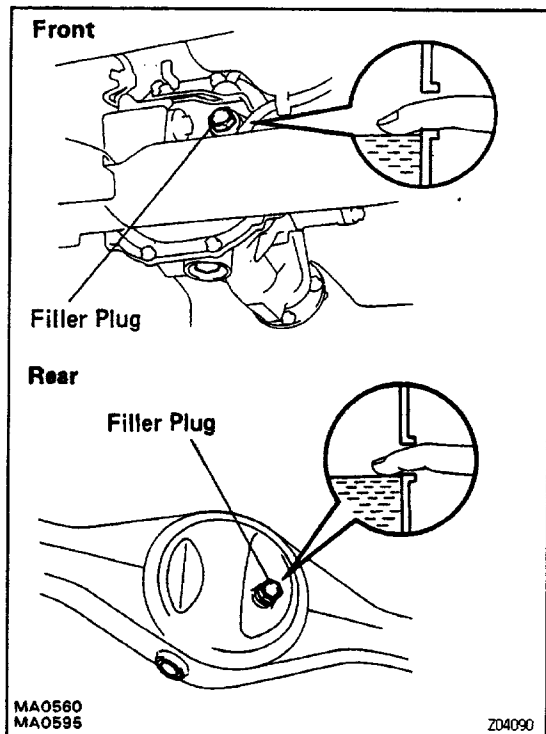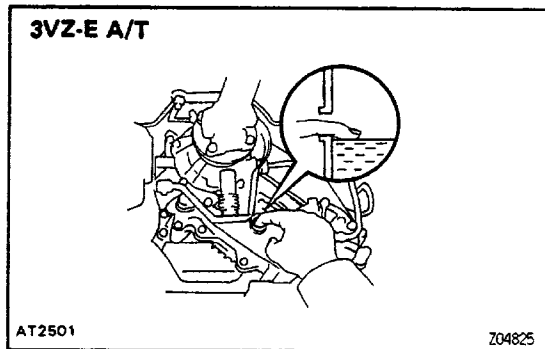

Remove the filler plug and feel inside the hole with your finger. Check that the oil comes to within 5 mm (0.20 in.) of the bottom edge of the hole. If the level is low, add oil until it begins to run out of the filler hole.

**Differential oil –**

**Standard differential**

**Oil grade:**

API GL-5 hypoid gear oil

**Viscosity:**

Above  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ) SAE 90

Below  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ) SAE 80W – 90 or 80W

**A.D.D.**

**Oil grade:**

Toyota 'GEAR OIL SUPER' oil or hypoid gear oil API GL-5

**Viscosity:**

SAE 75W-90

**25. REPLACE MANUAL TRANSMISSION. TRANSFER (4 WD) AND DIFFERENTIAL OIL**

(a) (Transfer)

Remove the transfer cover.

(b) Using SST (A340H Transfer), remove the drain plug and drain the oil.


SST 09043-38100

(c) Reinstall drain plug securely.

(d) Add new oil until it begins to run out of the filler hole.

**Oil grade and viscosity:**

See pages MA -16 to 18

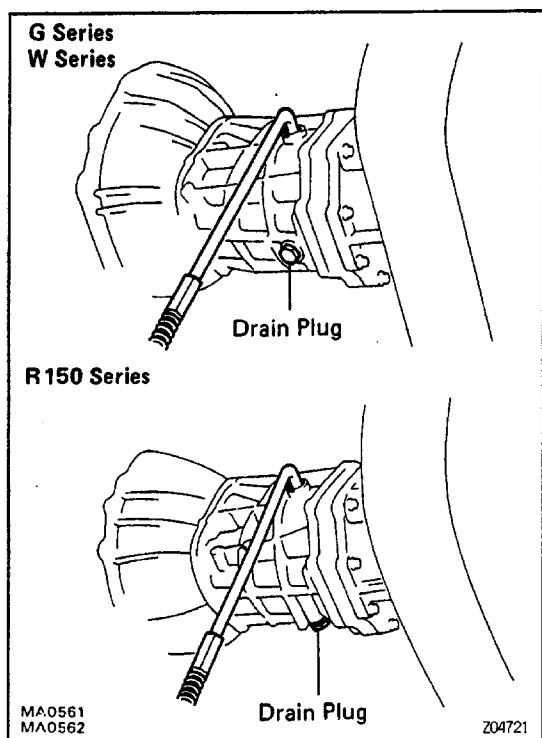**Oil capacity:****Transmission –****2WD**

W55 2.6 liters (2.7 US qts, 2.3 Imp. qts)


R150 3.0 liters (3.2 US qts, 2.6 Imp. qts)

**4WD**

G58 3.9 liters (4.1 US qts, 3.4 Imp. qts)

W56 2.9 liters (3.1 US qts, 2.5 Imp. qts)

RI 50F 3.0 liters (3.2 US qts, 2.6 Imp. qts)

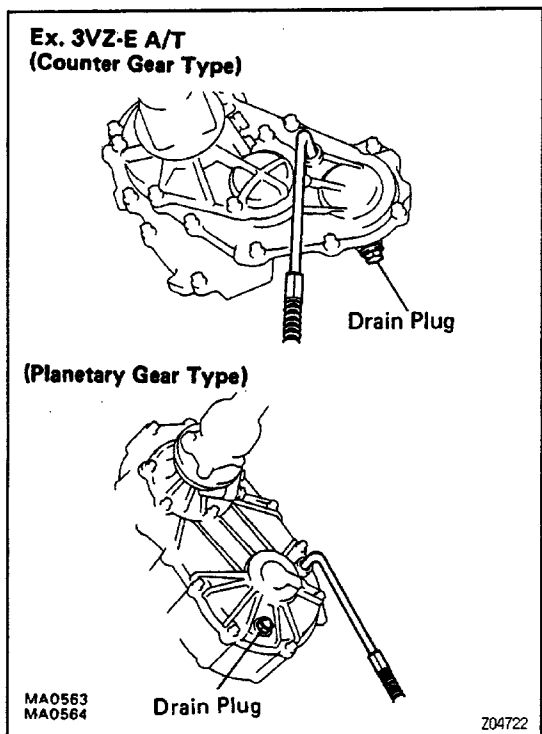**Transfer –****Counter Gear Type**


1.6 liters (1.7 US qts, 1.4 Imp. qts)


**Planetary Gear Type**

1.1 liters (1.2 US qts, 1.0 Imp. qts)

**A340H**

0.8 liters (0.8 US qts, 0.7 Imp. qts)

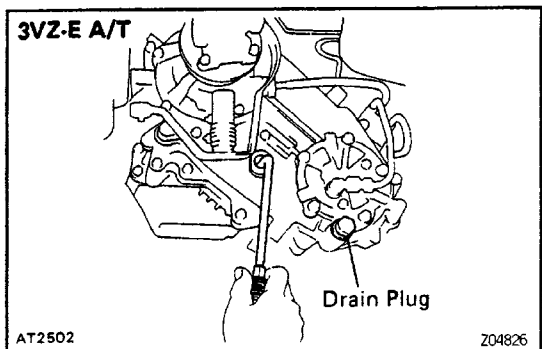

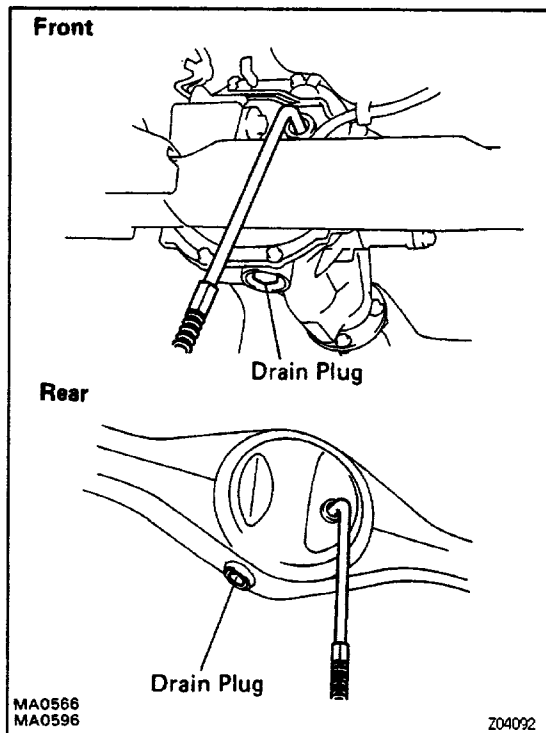**Differential –****2WD**

7.5 in. 1.35 liters (1.4 US qts, 1.2 Imp. qts)

8.0 in. 1.8 liters (1.9 US qts, 1.6 Imp. qts)

**4WD****Front Standard differential**


1.6 liters (1.7 US qts, 1.4 Imp. qts)

**A.D.D.**


1.86 liters (2.0 US qts, 1.6 Imp. qts)

**Rear**

2.2 liters 2.3 US qts, 1.9 Imp. qts)

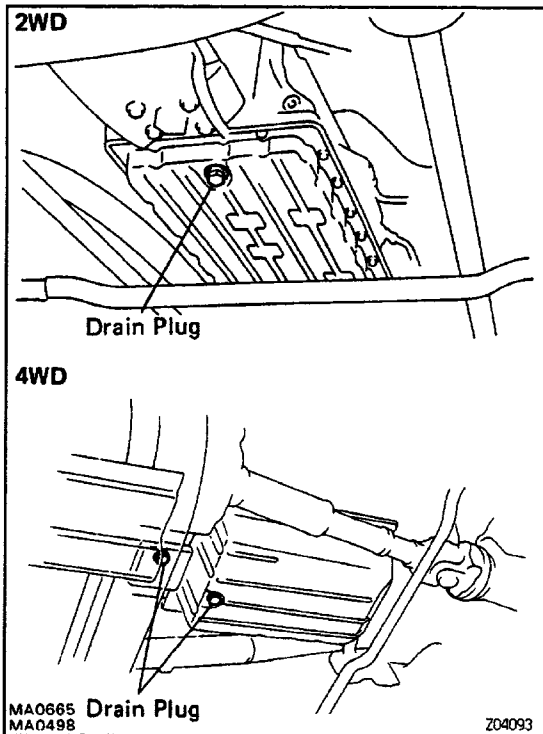**26. REPLACE AUTOMATIC TRANSMISSION FLUID**

- Remove the drain plug(s) and drain the fluid.
- Reinstall the drain plug(s) securely.
- With the engine OFF, add new fluid through the dipstick tube.

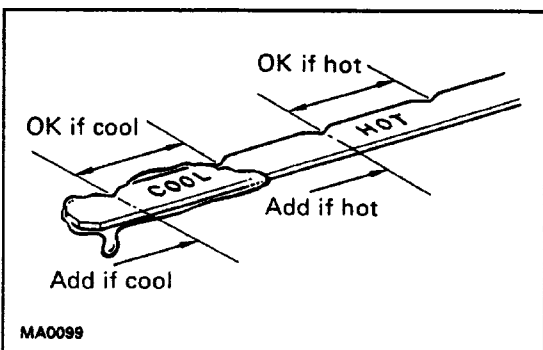**Fluid:****ATP DEXRON® II****Drain and refill capacity:****2WD****A43D 2.4 liters (2.5 US qts, 2.1 Imp. qts)****A340E 1.6 liters (1.7 US qts, 1.4 Imp. qts)****4WD****A340H 4.5 liters (4.8 US qts, 4.0 Imp. qts)****A340F 2.0 liters (2.1 US qts, 1.8 Imp. qts)**

- Start the engine and shift the selector into all positions from "P" through "L" and then shift into "P".

- (A340H)

Shift the transfer lever position: H2→H4→L4 and L4→H4→H2.

- With the engine idling, check the fluid level.

Add fluid up to the cool level on the dipstick.

- (g) Check that the fluid level is in the "HOT" range at the normal operating temperature (70 – 80 ° C or 158 – 176 °F) and add as necessary.

**NOTICE: Do not overfill.**

## **27. REPACK FRONT WHEEL BEARINGS AND THRUST BUSH**

- (a) Change the front wheel bearing grease.  
(See SA section)

### **2WD –**

**Grease grade:**

**Lithium base multipurpose grease (NLGI No.2)**

**Wheel bearing friction preload (at starting):**

**5.9–18N(0.6–1.8kgf, 1.3–4.0lbf)**

### **4WD –**

**Grease grade:**

**Lithium base multipurpose grease (NLGI No.2)**

**Wheel bearing friction preload (at starting):**

**27 – 55 N (2.8 – 5.6 kgf, 6.2 – 12.3 lbf)**

- (b) Repack the drive shaft thrust bush grease.  
(See SA section)

## **28. (4WD)**

### **LUBRICATE PROPELLER SHAFT**

Lubricate propeller shaft, referring to the lubrication chart. Before pumping in grease, wipe off any mud and dust on the grease fitting.

**Grease grade:**



**Propeller shaft (ex. Double–cardan joint) –**

**Lithium base chassis grease (NLGI No.2)**

**Double–cardan joint – Molybdenum disulphide**

**Lithium base chassis grease (NLGI No.2)**



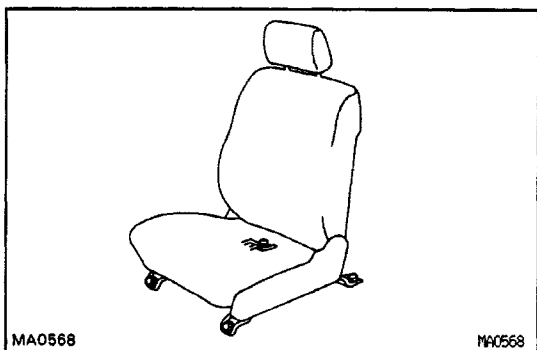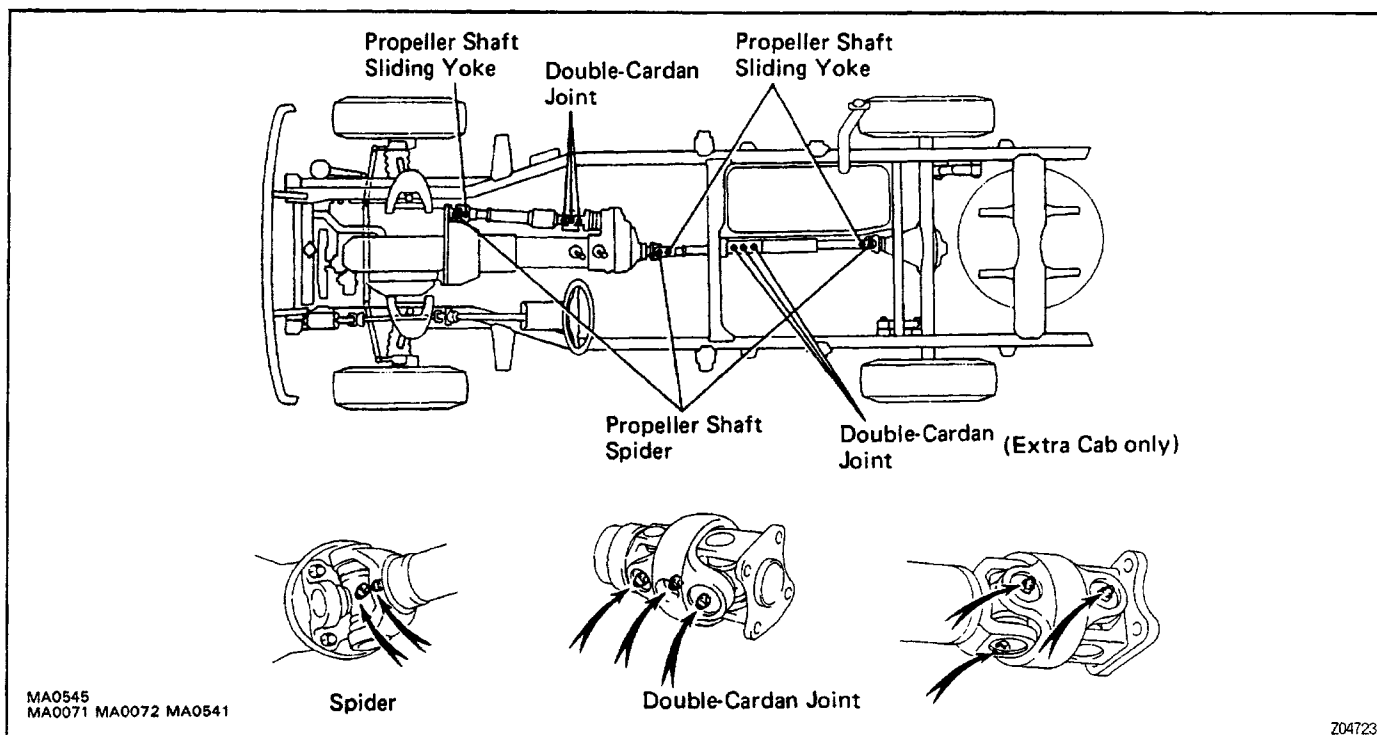


## 29. TIGHTEN BOLTS AND NUTS ON CHASSIS AND BODY

Tighten the following parts:


- Seat mounting bolts

**Torque: 37 N-m (375 kgf-cm, 27 ft-lbf)**

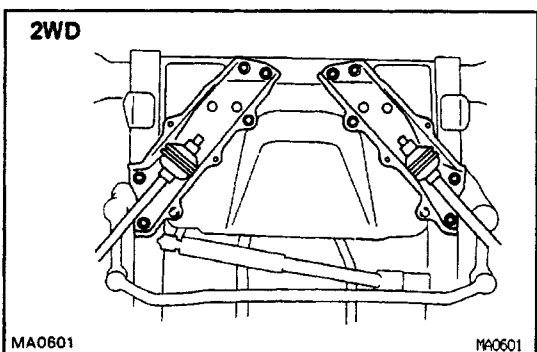

- Strut bar bracket-to-frame mounting bolts (2 WD)

**Torque: 52 N-m (530 kgf-cm, 38 ft-lbf)**

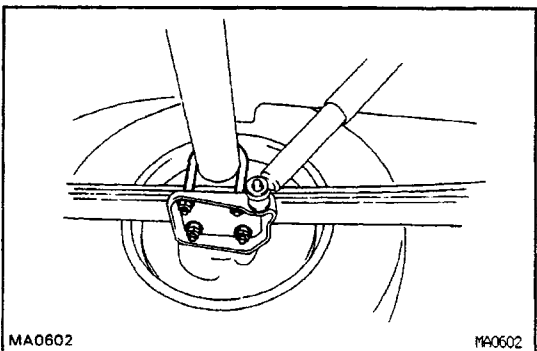

- Leaf spring U – bolt mounting nuts

**Torque:**

**2WD 0.5 ton 147 N-m (1,500 kgf-cm, 108 ft-lbf)**

**Others 123 N-m (1,250 kgf-cm, 90 ft-lbf)**

Under Severe Conditions:

In addition to the above maintenance items, check for loose or missing bolts and nuts on the following.

- Steering system
- Drive train

- Suspension system
- Fuel tank mounts
- Engine mounts, etc.

### **30. FINAL INSPECTION**

(a) Check operation of body parts:

- Hood  
Auxiliary catch operates properly
- Hood locks securely when closed  
Doors  
Door locks operate properly
- Doors close properly  
Seats
- Seat adjusts easily and locks securely in any positions  
Seat backs lock securely at any angle  
Fold-down seat backs lock securely

(b) Road test

- Engine and chassis parts do not have abnormal noises.
- Vehicle does not wander or pull to one side.
- Brakes work properly and do not drag.

(c) Be sure to deliver a clean vehicle and especially check:

- Steering wheel
- Shift lever knob
- All switch knobs
- Door handles
- Seats



# 22R-E ENGINE

# ENGINE MECHANICAL

## DESCRIPTION

The 22R-E engine is an in-line 4 cylinder 2.4 liter OHC 8 valve engine.

EG1UV-01

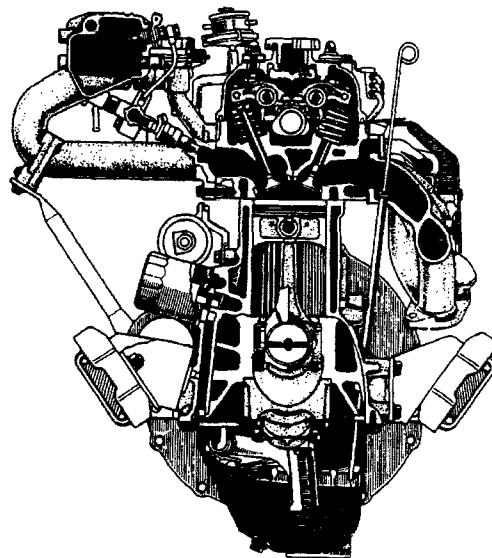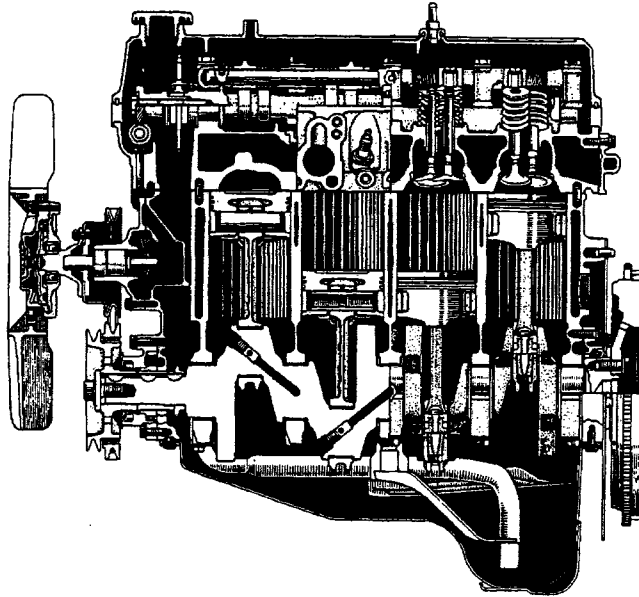

The 22R-E engine is in-line 4-cylinder engine with the cylinders numbered 1-2-3-4 from the front. The crankshaft is supported by 5 bearings inside the crankcase. These bearing are made of kelmet.

The crankshaft is integrated with 4 weights which are cast with it for balance. Oil holes are made in the center of the crankshaft to supply oil to the connecting rods, bearing, pistons and other components.

The firing order is 1-3-4-2. The cylinder head is made of aluminum alloy, with a cross flow type intake and exhaust layout and with pent roof type combustion chambers. The spark plugs are located to the left of the combustion chambers.

Coolant is introduced into the intake manifold, improving drivability during engine warm up.

Exhaust and intake valves are equipped with springs made, of special valve spring carbon steel which are capable of following no matter what the engine speed.

The camshaft is driven by a timing chain. The cam journal is supported at 3 places, located at the center and the front and rear of ends of each cylinder head. Lubrication of the cam journal gear is accomplished by oil supplied through the oil passage in the cylinder head.

Adjustment of the valve clearance is done by means of an adjusting screw on the rocker arm for easy adjustment.

The timing chain cover is made of aluminum alloy, with a water pump and oil pump on the outside.

Pistons are made of highly temperature-resistant aluminum alloy, and a depression is built into the piston head to prevent interference with valves.

Piston pins are the full-floating type, with the pins fastened to neither the connecting rods nor the piston boss, but with a snap ring fitted to both ends of each pin to prevent it from slipping out.

The No. 1 compression ring is made of stainless steel and the No. 2 compression ring is made of cast iron. The oil ring is made of stainless steel. The outer diameter of each piston ring is slightly larger than the diameter of the piston and the flexibility of the rings allows them to hug the cylinder walls when they are mounted on the piston. No. 1 and No. 2 compression rings work to prevent leakage of gas from the cylinder and the oil ring works to scrape oil off the cylinder walls to prevent it from entering the combustion chambers.














The cylinder block is made of cast iron. It has 4 cylinders which are approximately 2 times the length of the piston stroke. The top of each cylinder is closed off by the cylinder head and in the lower end of the cylinders the crankshaft is installed, supported by 5 journals. In addition, the cylinder block contains a water jacket, through which coolant is pumped to cool the cylinders.





The oil pan is bolted onto the bottom of the cylinder block. The oil pan is an oil reservoir made of pressed steel sheet. A dividing plate is included inside the oil pan to keep sufficient oil in the bottom of the pan even when the vehicle is tilted. The dividing plate prevents the intake of air and allows oil circulation to be maintained even if the oil forms waves when the vehicle brakes suddenly.

# PREPARATION

EG0AY-0A





## SST (SPECIAL SERVICE TOOLS)

	09201-41020 Valve Stem Oil Seal Replacer	
	09201 -60011 Valve Guide Bushing Remover & Replacer	
	09202-43013 Valve Spring Compressor	
	09213-31021 Crankshaft Pulley Puller	
	09213-36020 Timing Gear Remover	
	09213-60017 Crankshaft Pulley & Gear Puller Set	
	(09213-00020) Body With .Bolt	
	(00213-00030) Handle	
	(09213-00060) Bolt Set	
	09222-30010 Connecting Rod Bushing Remover & Replacer	
	09223-50010 Crankshaft Front oil Seal Replacer	Camshaft oil seal
	09223-41020 Crankshaft Rear Oil Seal Replacer	
	09213-70010 Crankshaft Pulley Holding Tool	

	09606-35014 Axle Hub & Drive Pinion Bearing Tool Set	
	(09608-06040) Front Hub Inner Bearing Cone Replacer	
	09330-00021 Companion Flange Holding Tool	Crankshaft pulley
	09843-18020 Diagnosis Check Wire	

EG0AZ-08

## RECOMMENDED TOOLS

	09090-04010 Engine Sling Device	For suspension engine
	09200-00010 Engine Adjust Kit	
	09258-00030 Hose Plug Set	Plug for the vacuum hose, fuel hose etc.
	09904-00010 Expander Set	

EG0B0-07

## EQUIPMENT

Battery specific gravity gauge	
Belt tension gauge	
Caliper gauge	
CO/HC meter	
Compression gauge	
Connecting rod aligner	
Cylinder gauge	
Dial indicator	

Dye penetrant	
Engine tune-up tester	
Heater	
Magnetic finger	
Micrometer	
Piston ring compressor	
Piston ring expander	
Plastigage	
Precision straight edge	
Soft brush	
Spring tester	Valve spring
Steel square	Valve spring
Thermometer	
Torque wrench	
Valve seat cutter	
Vernier calipers	

EG001-0C

## SSM (SERVICE SPECIAL MATERIALS)

08826-00080 Seal packing or equivalent	Camshaft bearing cap Cylinder head cover Rear oil seal retainer
08833-00070 Adhesive 1324, THREE BOND 1324 or equivalent	Flywheel or drive plate mounting bolt



# TROUBLESHOOTING

When the malfunction code is not confirmed in the diagnostic trouble code check and the problem still cannot be confirmed in the basic inspection, then proceed to this step and perform troubleshooting to the numbers in the order given in the table below.

See page		IG-5	IG-5	EG1-212	EG1-131.1 49 or 167	EG1-129 147 or 165	EG1-129 147 or 165	EG1-127 145 or 163	EG1-132 150 or 168	—	—	—	EG1-177	EG1-186	EG1-192	EG1-187	EG1-183 or 208	—
Suspect area		RPM Signal Circuit	Ignition Circuit	Main Oxygen Sensor Circuit	Engine Coolant Temp. Sensor Circuit	Intake Air Temp. Sensor Circuit	Volume Air Flow Meter Circuit	Throttle Position Sensor Circuit	STA Signal Circuit	Knock Sensor Circuit	PNP Switch Signal Circuit	A/C Signal Circuit	Fuel Pump	Fuel Pressure Regulator	Fuel Lines	Injectors	Cold Start System	Idle Air Control Valve
Does not start	Engine does not crank																	
	Starter runs – engine does not crank																	
	No initial combustion	12	2				5						6				13	8
	No complete combustion				4		1							3		9	10	2
Difficult to start	Engine cranks slowly											2						
	Under normal condition	12	13		4	14							7	6	8	16	17	3
	Cold engine				1	6			2				8	7	9	10	5	4
	Hot engine				1	5							8	7	9	10	6	3
Poor idling	Incorrect first idle				3													4
	High engine idle speed				4	6		7			9	8				10	11	5
	Low engine idle speed				1		4									5		2
	Rough idling		18		2		12						7	6	8	16	17	9
	Misfire		4		6		8									9	10	
Poor drivability	Hesitation			12	10	11	9	8					14	13	15	18	19	
	Poor acceleration			6	3	7	5	4					9	8	10	11		
	Back fire			8	3	7	5	6						4		9	10	
	Muffler explosion (after fire)													1		4		
	Serging									1								
Engine stall	Knocking																	
	Soon after starting				8		7						3	2	4	9	10	6
	After accelerator pedal depressed						1	3						5	6	7		
	After accelerator pedal released						3											1
	During A/C operation										1							2
Others	When N to D shift										1							2
	Poor fuel economy			21	16	22	18	17			19	20				14	15	
	Engine overheat									9								
	Engine overcool																	
	Excessive oil consumption																	
	Low oil pressure																	
	High oil pressure																	
	Starter keeps running																	
	Battery often discharges																	

**HINT:** When inspecting a wire harness or circuit, the electrical wiring diagrams at the end of repair manual should be referred to and the circuits of related systems also should be checked.

See page		EG1-198	EG1-199	CL section	EG1-14	MA-11	EG1-39	EG1-39	EG1-226	EG1-23	EG1-238	EG1-51	EG1-54	EG1-21	EG1-58	-	EG1-229
Suspect area		Dash Pot	Throttle Opener	Clutch	Compression	Valve Clearance	Valve Timing	Timing Belt	Water Pump	Valve Stem Guide Bushing	Oil Pump	Connecting Rod Bearing	Crankshaft Bearing	Cylinder Head	Piston Ring	Flywheel or Drive Plate	Radiator and Radiator Cap
Does not start	Engine does not crank																
	Starter runs – engine does not crank															2	
	No initial combustion				9		10	11									
	No complete combustion				5		7	8							6		
Difficult to start	Engine cranks slowly											3	4				
	Under normal condition				9		11								10		
	Cold engine																
	Hot engine																
Poor idling	Incorrect first idle	2	3														
	High engine idle speed	2															
	Low engine idle speed																
	Rough idling				10	13	14	15						20	11		
	Misfire				7												
Poor drivability	Hesitation			1	7	16	17										
	Poor acceleration																
	Back fire						2										
	Muffler explosion (after fire)						2										
	Serging																
Engine stall	Knocking						5		9								6
	Soon after starting																
	After accelerator pedal depressed																
	After accelerator pedal released																
	During A/C operation																
Others	When N to D shift																
	Poor fuel economy	4		5	11		13								12		
	Engine overheat						7	5	6		10			11			3
	Engine overcool																
	Excessive oil consumption				3					2				5	4		
	Low oil pressure										2	3	4				
	High oil pressure										1						
	Starter keeps running																
	Battery often discharges																

W01855

## TUNE-UP

EG1UX-01

### ENGINE COOLANT INSPECTION

(See steps 1 and 2 on page [EG1-225](#))

### ENGINE OIL INSPECTION

EG1UY-01

(See steps 1 and 2 on page [EG1-235](#))

### AIR FILTER INSPECTION

EG1UZ-01

(See step 4 on page [MA-7](#))

### BATTERY INSPECTION

EG1V0-02

(See CM section)

### HIGH-TENSION CORD INSPECTION

EG1V1-01

(See page [IG-6](#))

### SPARK PLUGS INSPECTION

EG1V2-01

(See page [IG-8](#))

### DRIVE BELTS INSPECTION

EG1V3-01

(See step 2 on page [MA-6](#))

### VALVE CLEARANCE INSPECTION AND ADJUSTMENT

EG1V4-01

(See step 14 on page [MA-11](#))

### IGNITION TIMING INSPECTION AND ADJUSTMENT

EG1V5-01

(See step 5 on page [IG-10](#))

### IDLE SPEED INSPECTION AND ADJUSTMENT

EG1V6-01

(See step 15 on page [MA-11](#))

---

HINT: Adjust idle mixture as necessary.

## **IDLE AND OR 2500 RPM CO HC CHECK**

HINT: This check method is used only to determine whether or not the idle and/or 2,500 rpm CO/HC complies with regulations.

### **1. INITIAL CONDITIONS**

- (a) Engine at normal operating temperature
- (b) Air cleaner installed
- (c) All pipes and hoses of air intake system connected
- (d) All accessories switched OFF
- (e) All vacuum lines properly connected

HINT: All vacuum hoses for the air suction, EGR systems, etc. should be properly connected.

- (f) MFI system wiring connectors fully plugged
- (g) Ignition timing set correctly
- (h) Transmission in neutral
- (i) Idle speed set correctly
- (j) Tachometer and CO/HC meter calibrated and at hand

### **2. START ENGINE**

### **3. RACE ENGINE AT 2,500 RPM FOR APPROX.3 MINUTES**

### **4. INSERT CO / HC METER TESTING PROBE INTO TAILPIPE AT LEAST 40 cm (1.3 ft)**

### **5. IMMEDIATELY CHECK CO/HC CONCENTRATION AT IDLE AND/OR 2,500 RPM**

HINT:

When performing the 2 mode (2,500 rpm and idle) test, follow the measurement order prescribed by the applicable local regulations.

## TROUBLESHOOTING

If the HC/CO concentration does not comply with regulations, perform troubleshooting in the order given below.

### 1. Check oxygen sensor operation

(See page [EG1–212](#))


### 2. See the table below for possible cause, and then inspect and correct the applicable causes if necessary.

HC	CO	Symptoms	Causes
High	Normal	Rough idle	1. Faulty ignition: <ul style="list-style-type: none"> <li>• Incorrect timing</li> <li>• Fouled, shorted or improperly gapped plugs</li> <li>• Open or crossed high-tension cords</li> <li>• Cracked distributor cap</li> </ul> 2. Incorrect valve clearance 3. Leaky EGR valve 4. Leaky exhaust valves 5. Leaky cylinder
High	Low	Rough idle (Fluctuating HC reading)	1. Vacuum leak: <ul style="list-style-type: none"> <li>• Vacuum hose</li> <li>• Intake manifold</li> <li>• Intake chamber</li> <li>• PCV line</li> <li>• Throttle body</li> </ul>
High	High	Rough idle (Black smoke from exhaust)	1. Clogged air filter 2. Plugged PCV valve 3. Pulsed Secondary Air Injection (PAIR) system problems 4. Faulty MFI system: <ul style="list-style-type: none"> <li>• Faulty pressure regulator</li> <li>• Clogged fuel return line</li> <li>• Faulty volume air flow meter</li> <li>• Defective engine coolant temp. sensor</li> <li>• Defective intake air temp. sensor</li> <li>• Faulty ECM</li> <li>• Faulty injector</li> <li>• Faulty cold start injector</li> </ul>

## COMPRESSION CHECK

HINT: If there is lack of power, excessive oil consumption or poor fuel mileage, measure the cylinder compression pressure.

1. WARM UP ENGINE
2. REMOVE SPARK PLUGS
3. DISCONNECT DISTRIBUTOR CONNECTOR
4. DISCONNECT COLD START INJECTOR CONNECTOR
5. MEASURE CYLINDER COMPRESSION PRESSURE

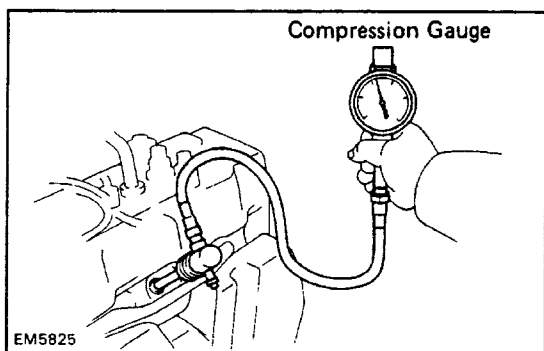

- (a) Insert a compression gauge into the spark plug hole.
- (b) Fully open the throttle.
- (c) While cranking the engine with the starter motor, measure the compression pressure.

**NOTICE: This test must be done for as short a time as possible to avoid overheating of the catalytic converter.**

HINT: A fully charged battery must be used to obtain at least 250 rpm.

- (d) Repeat steps
  - (a) through
  - (c) for each cylinder.

**Compression pressure:**

**1,177 kPa (12.0 kgf/cm<sup>2</sup>, 171 psi)**

**Minimum pressure:**

**981 kPa (10.0 kgf/cm<sup>2</sup>, 142 psi)**

**Difference between each cylinder:**

**98 kPa (1.0 kgf/cm<sup>2</sup>, 14 psi) or less**

(e) If cylinder compression in one or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat steps (a) through

(c) for the low compression cylinder.

- If adding oil helps the compression, chances are that the piston rings and /or cylinder bore are worn or damaged.
- If pressure stays low, a valve may be sticking or seating improperly, or there may be leakage past the gasket.


6. CONNECT COLD START INJECTOR CONNECTOR
7. CONNECT DISTRIBUTOR CONNECTOR
8. INSTALL SPARK PLUGS

**Torque: 18N-m (180 kgf-cm, 13ft-lbf)**



# CYLINDER HEAD COMPONENTS

EG1VA-01

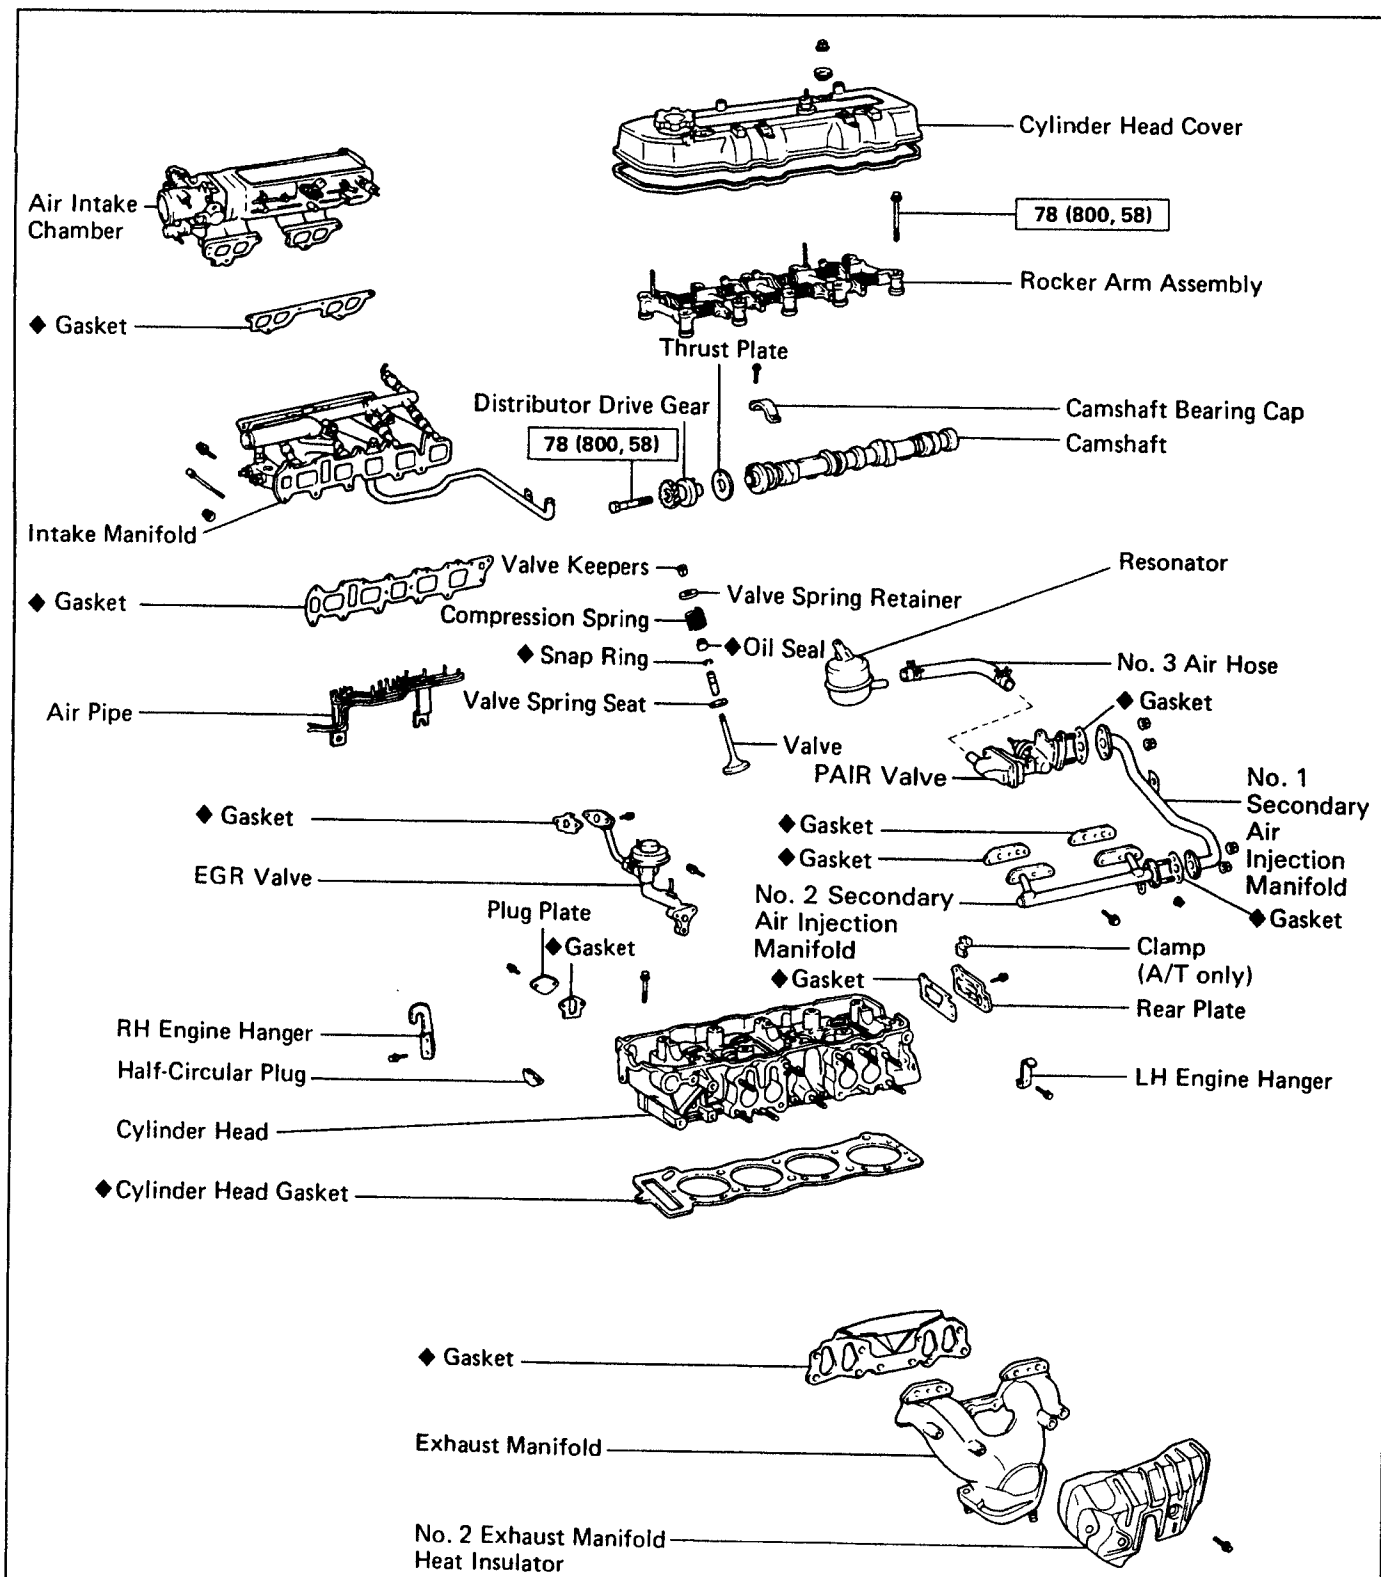

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

EM5699

## PREPARATION FOR REMOVAL

**1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY**

**2. DRAIN COOLANT FROM RADIATOR AND CYLINDER BLOCK**

(See step 3 on page [EG1-225](#))

**3. REMOVE INTAKE AIR CONNECTOR**

**4. DISCONNECT EXHAUST PIPE FROM EXHAUST MANIFOLD**

(a) Remove the exhaust pipe clamp.


(b) Remove the three nuts, and disconnect the exhaust pipe.

**5. REMOVE OIL DIPSTICK**

**6. REMOVE DISTRIBUTOR AND SPARK PLUGS**

**7. REMOVE RADIATOR INLET HOSE**

**8. DISCONNECT HEATER WATER INLET HOSE FROM HEATER WATER INLET PIPE**

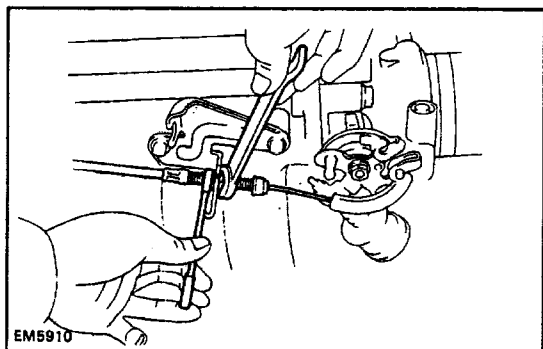

**9. DISCONNECT ACCELERATOR CABLE**

**10. (A/T)**

**DISCONNECT THROTTLE CABLE**

Disconnect the throttle cable from the bracket and clamp. .

**11. DISCONNECT GROUND STRAP FROM ENGINE REAR SIDE**

**12. DISCONNECT FOLLOWING PARTS:**

(a) No.1 and No. 2 PCV hoses

(b) Brake booster hose

(c) (w/PS)

Air control valve hoses

(d) (with A/C)

VSV hoses

(e) EVAP hose

(f) EGR vacuum modulator hose

(g) EGR valve hose

(h) Fuel pressure up hose

(i) PAIR valve hose

(j) Pressure regulator hose

(k) Vacuum hoses from throttle body

(l) No. 2 and No. 3 water by-pass hoses from the throttle body

(m) (w/Oil cooler)


Disconnect the No. 1 oil cooler hose from the intake manifold.

(w/o Oil cooler)

Disconnect the No. 1 water by-pass hose from the intake manifold. ‘

**13. REMOVE EGR VACUUM MODULATOR****14. DISCONNECT FOLLOWING WIRES:**


- (a) Cold start injector wire
- (b) Throttle position wire
- (c) (California only)  
EGR gas temp. sensor wire

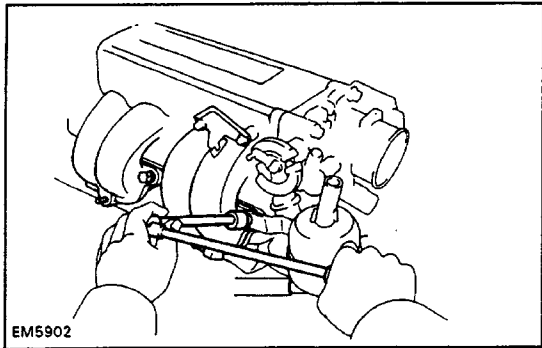**15. REMOVE CHAMBER WITH THROTTLE BODY**

- (a) Remove the union bolt holding the cold start injector pipe to the chamber.
- (b) Remove the bolts holding the No. 1 EGR pipe to the chamber.
- (c) Remove the bolts holding the manifold stay to the chamber.
- (d) Remove the four bolts, two nuts, bond strap and fuel hose clamp.
- (e) Remove the chamber with the throttle body, resonator and gasket.


**16. DISCONNECT FUEL RETURN HOSE****17. DISCONNECT FOLLOWING WIRES:**

- (a) Knock sensor wire
- (b) Oil pressure sender gauge wire
- (c) Starter wire (terminal 50)
- (d) Transmission wires
- (e) (with A/C)  
Compressor wires
- (f) Injector wires
- (g) Engine coolant temp. sender gauge wire
- (h) (A/T)  
OD temp. switch wire
- (i) Igniter wire
- (j) VSV wires
- (k) Start injector time switch wire
- (l) Engine Coolant temp. sensor wire

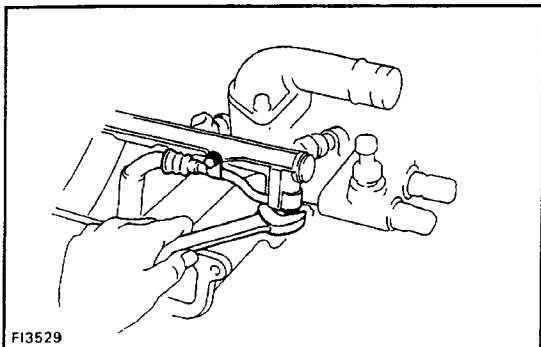
**18. DISCONNECT FUEL HOSE FROM DELIVERY PIPE**

Remove the bolt, union bolt and two gaskets.

**19. DISCONNECT BY – PASS HOSE FROM INTAKE MANIFOLD****20. (w/PS)****REMOVE PS BELT**

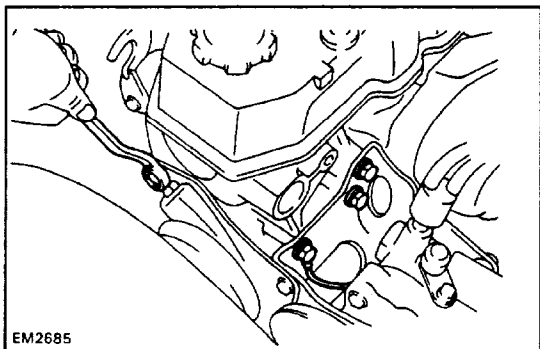**21. (w/PS)****DISCONNECT PS BRACKET FROM CYLINDER HEAD**

Remove the four bolts, disconnect the ground strap and bracket.

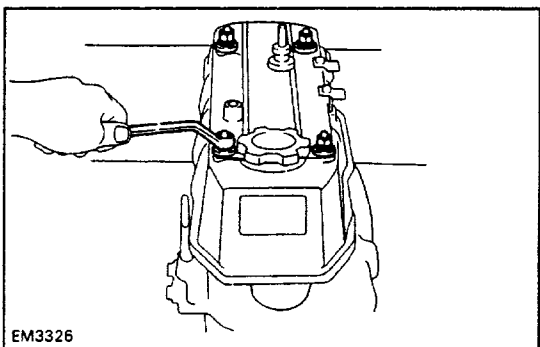
**CYLINDER HEAD REMOVAL**

EG1VC-01


**1. REMOVE HEAD COVER**

- (a) Remove the ground strap from the body.
- (b) Remove the four nuts and seals.
- (c) Remove the head cover.


**NOTICE:** Cover the oil return hole in the head with a rag to prevent objects from falling in.

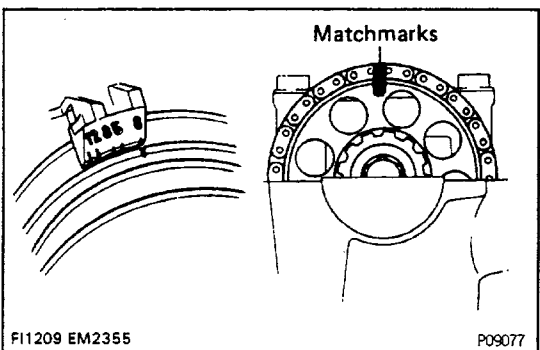
**2. REMOVE CAM SPROCKET BOLT**

- (a) Turn the crankshaft until the No. 1 cylinder position is set at TDC compression.
- (b) Place matchmarks on the sprocket and chain.
- (c) Remove the half-circular plug.

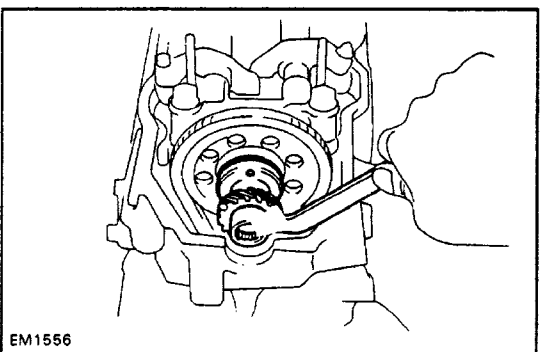


- (d) Remove the cam sprocket bolt.

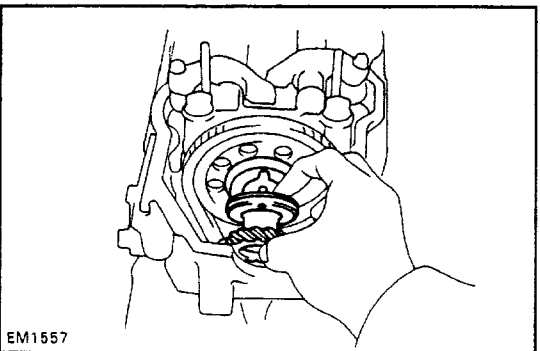**3. REMOVE DISTRIBUTOR DRIVE GEAR AND CAM-SHAFT THRUST PLATE**

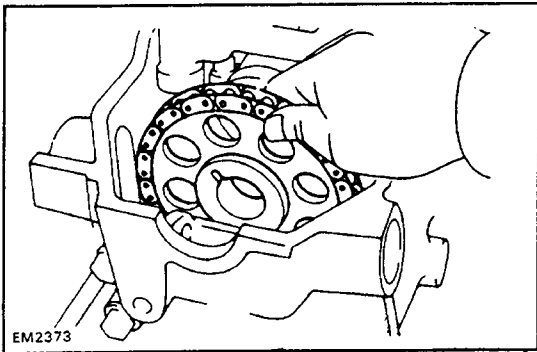


#### 4. REMOVE CAM SPROCKET

Remove the cam sprocket and chain from the camshaft and leave on the vibration damper.

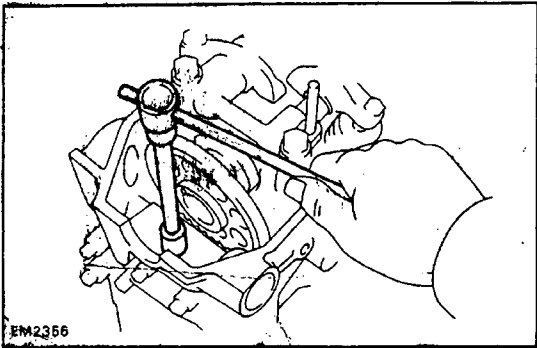

#### 5. REMOVE CHARY COVER BOLT

Remove the bolt in front of the head before the other head bolts are removed.

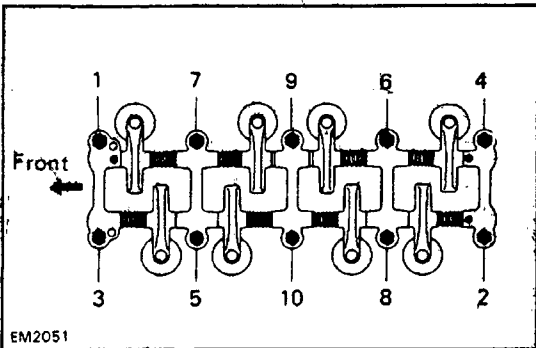


#### 6. REMOVE CYLINDER HEAD BOLTS

Remove the head bolts gradually in two or three passes and in the numerical order shown.

**NOTICE:** Head warpage or cracking could result from removing bolts incorrect order.

#### 7. REMOVE ROCKER ARM ASSEMBLY

If may be necessary to use a pry bar on the front and rear of the rocker arm assembly to separate it from the head.

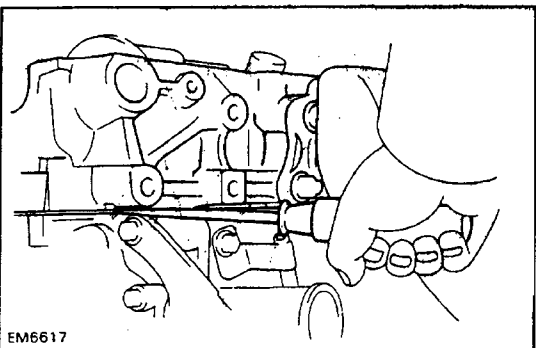


#### 8. REMOVE CYLINDER HEAD

Lift the cylinder head from the dowels on the cylinder block and place the head on wooden blocks on a bench.

**HINT:** If the cylinder head is difficult to lift off, pry with a screwdriver between the head and block saliences.

**NOTICE:** Be careful not to damage the cylinder head and block surfaces of the cylinder head gasket.

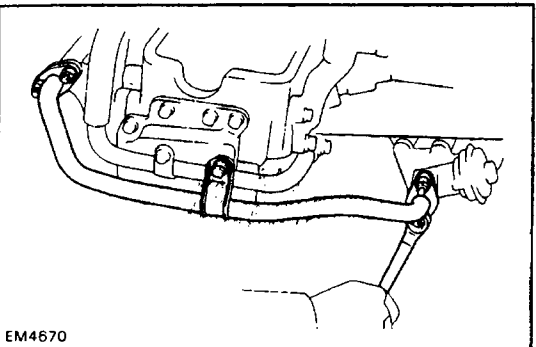


### CYLINDER HEAD DISASSEMBLY

(See page [EG1-15](#))


#### 1. REMOVE NO. 1 SECONDARY AIR INJECTION MANIFOLD

Remove the bolt, four nuts, No. 1 secondary air injection manifold and two gaskets.

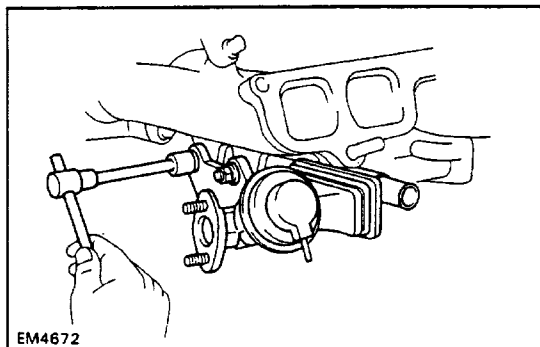

## 2. REMOVE INTAKE MANIFOLD WITH DELIVERY PIPE AND INJECTORS


(a) Remove the two nuts and reed valve.

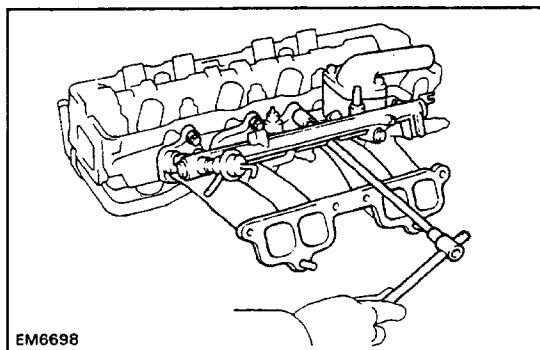


(b) Remove the bolt and the heater inlet pipe from the cylinder head.

(c) Remove the seven bolts, one hexagon bolt, two nuts and No. 1 air pipe.

(d) Remove the intake manifold together with the delivery pipe, injectors and heater water inlet pipe.

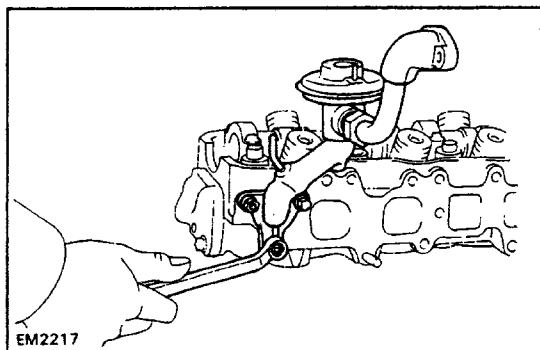


## 3. REMOVE EGR VALVE

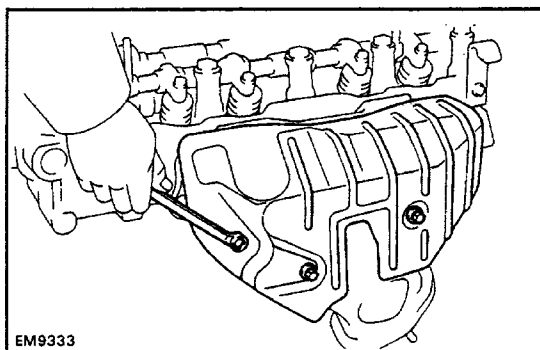

## 4. REMOVE EXHAUST MANIFOLD WITH NO. 2 SECONDARY AIR INJECTION MANIFOLD


(a) Remove the three bolts and No. 2 exhaust manifold heat insulator.

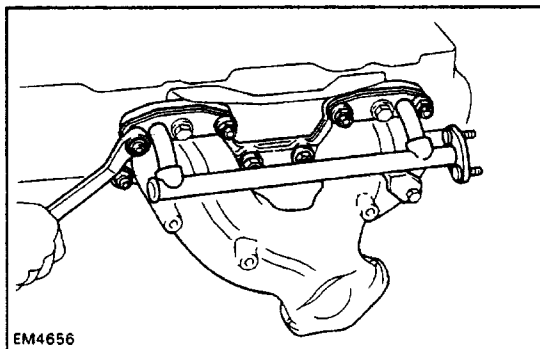

(b) Remove the eight nuts, exhaust manifold and No. 2 secondary air injection manifold.

## 5. REMOVE TWO ENGINE HANGERS AND GROUND STRAP

## 6. REMOVE CYLINDER HEAD REAR OVER

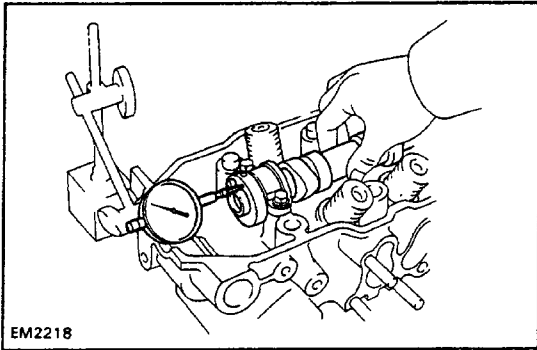

## 7. MEASURE CAMSHAFT THRUST CLEARANCE

Using a dial gauge, measure the camshaft thrust clearance.


**Standard clearance: 0.08 – 0.18 mm**

**(0.0031–0.0071 in.)**

**Maximum clearance: 0.25 mm (0.0098 in.)**

If clearance is greater than maximum, replace the head.

## 8. REMOVE CAM BEARING CAPS AND SHAFT

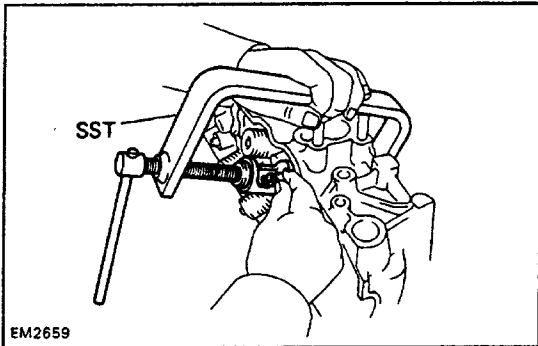

## 9. REMOVE VALVES

(a) Using SST, compress the valve retainer until the two keepers can be removed.

SST 09202-43013

(b) Remove the valve keepers, retainer, spring and valve.

(c) Pry out the oil seal.

(d) Using a small screwdriver or magnet, remove the valve spring seat.

**HINT:** Keep the valves arranged so they can be installed in the same order as removed.


# INSPECTION, CLEANING AND REPAIR OF CYLINDER HEAD COMPONENTS

## 1. CLEAN TOP OF PISTONS AND TOP OF CYLINDER BLOCK

(a) Turn the crankshaft and bring each piston to top dead center. Using a gasket scraper, remove all the carbon from the piston tops.

(b) Using a gasket scraper, remove all gasket material from the top of the block. Blow carbon and oil from the bolt holes.


**CAUTION:** Protect your eyes when using high pressure air.

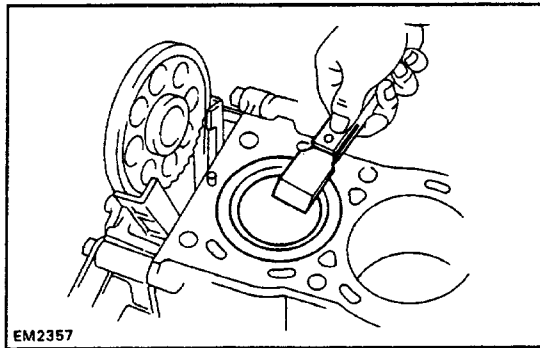


## 2. REMOVE GASKET MATERIAL

Using a gasket scraper, remove all gasket material from the head and manifold surfaces.

**NOTICE:** Be careful not to scratch the surfaces.

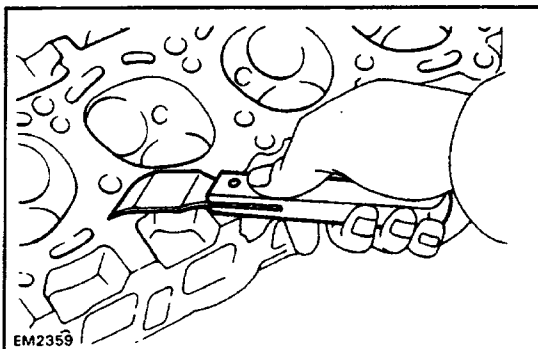


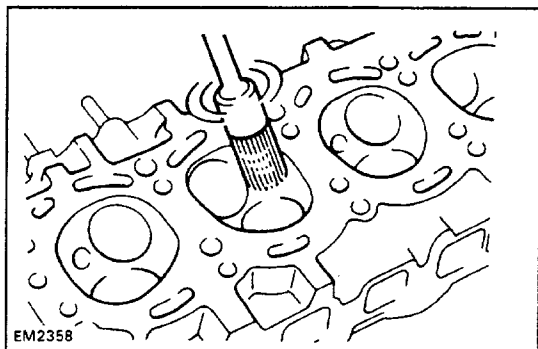

### 3. CLEAN COMBUSTION CHAMBERS


Using a wire brush, remove all the carbon from the combustion chambers.

**NOTICE:** Be careful not to scratch the head gasket contact surface.

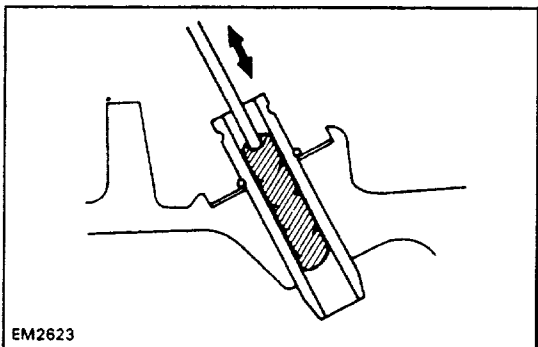

### 4. CLEAN VALVE GUIDE BUSHINGS


Using a valve guide brush and solvent, clean all the valve guide bushings.

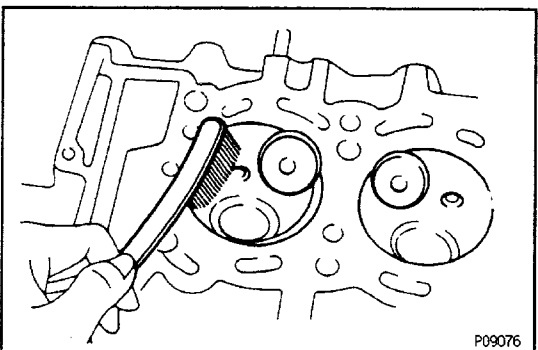

### 5. CLEAN CYLINDER HEAD

Using a soft brush and solvent, clean the head.

**NOTICE:** Do not clean the head in a hot tank as this will seriously damage it.

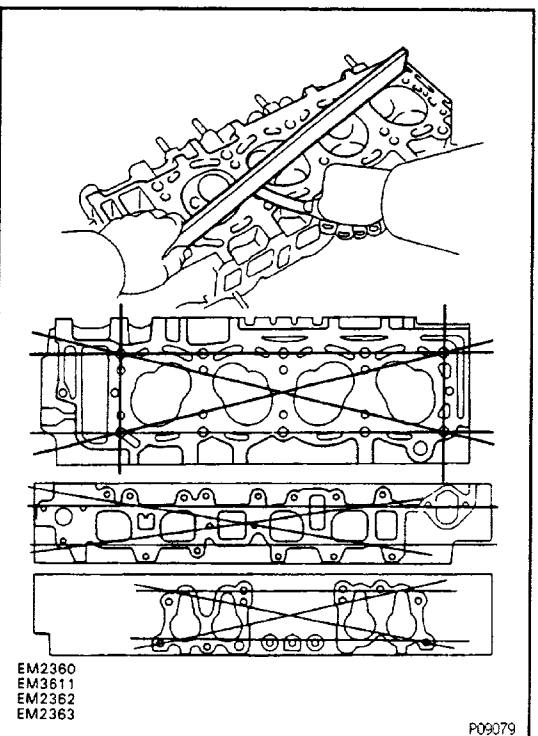

### 6. INSPECT CYLINDER HEAD FOR FLATNESS

Using a precision straight edge and thickness gauge, measure the surface contacting the cylinder block and manifold for warpage.

**Maximum head surface warpage:**


**0.15 mm (0.0059 in.)**

**Maximum manifold surface warpage:**

**0.20 mm (0.0079 in.)**

If warpage is greater than maximum, replace the cylinder head.




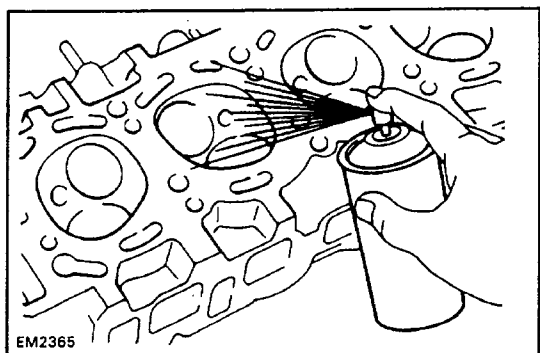

## 7. INSPECT CYLINDER HEAD FOR CRACKS

Using a dye penetrant, check the combustion chambers, intake and exhaust ports, head surface and the top of the head for cracks.


If a crack is found, replace the head.

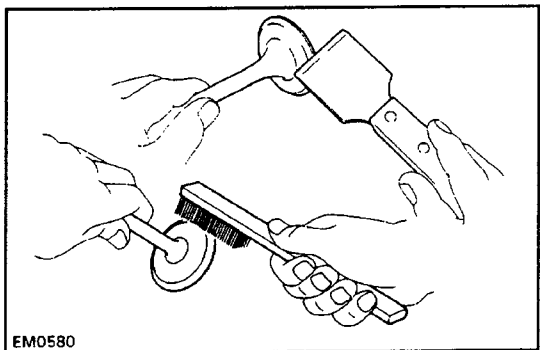

## 8. CLEAN VALVES

(a) Using a gasket scraper, chip off any carbon from the valve head.


(b) Using a wire brush, thoroughly clean the valve.

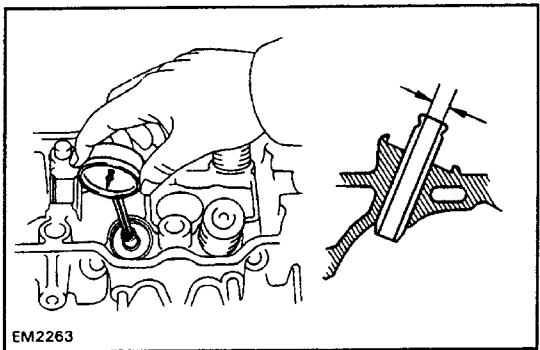

## 9. INSPECT VALVE STEMS AND GUIDE BUSHINGS

(a) Using a caliper gauge, measure the inside diameter of the valve guide bushing.

**Standard inside diameter: 8.01 – 8.03 mm**  
(0.3154 – 0.3161 in.)

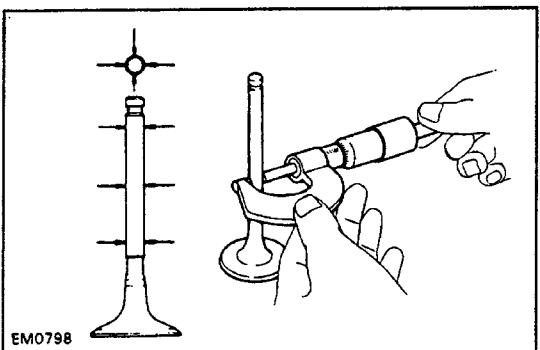

(b) Using a micrometer, measure the diameter of the valve stem.

**Standard valve stem diameter:**

**Intake 7.970 – 7.985 mm**

(0.3138 – 0.3144 in.)

**Exhaust 7.965 – 7.980 mm**

(0.3136 – 0.3142 in.)

(c) Subtract the valve stem diameter measurement from the valve guide bushing diameter measurement.

**Standard oil clearance:**

**Intake 0.025 – 0.060 mm**

(0.0010 – 0.0024 in.)

**Exhaust 0.030 – 0.650 mm**


(0.0012 – 0.0026 in.)

**Maximum stem oil clearance:**

**Intake 0.08 mm (0.0031 in.)**


**Exhaust 0.10 mm (0.0039 in.)**

If the clearance is greater than maximum, replace the valve and guide bushing.

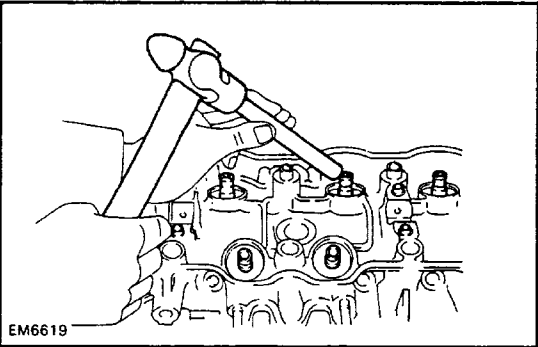


**10. IF NECESSARY, REPLACE VALVE GUIDE BUSHINGS**

(a) Using a brass bar and hammer, break the valve –guide bushing.

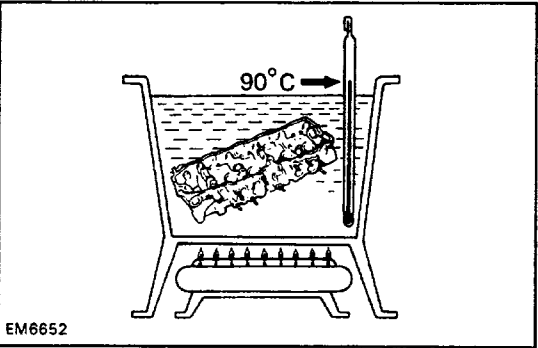


(b) Gradually heat the cylinder head to approx. 90•C (194•F).

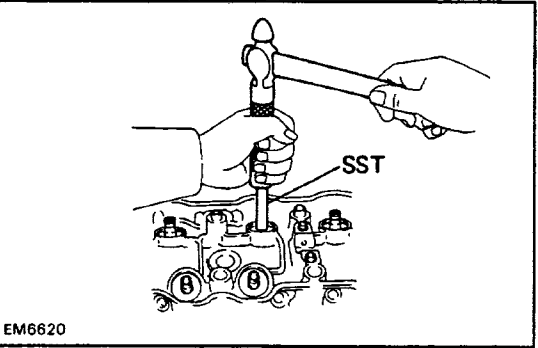

(c) Using SST and a hammer, drive out valve guide bushing.

SST 09201-60011

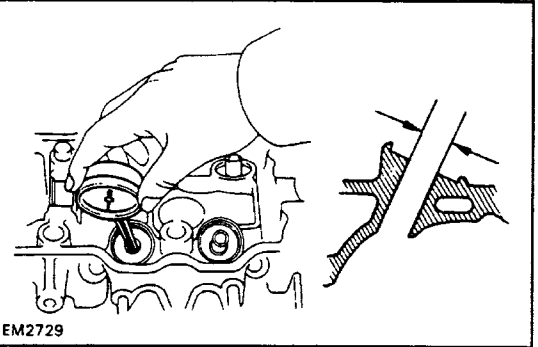

(d) Using a caliper gauge, measure the valve guide bushing bore of the cylinder head.

(e) Select a new valve guide bushing.


If the valve guide bushing bore of the cylinder head is more than 13.018 mm (0.512 in.), machine the bore to the following dimension.

**Rebored valve guide bushing bore dimension (cold):**

**13.050 – 13.068 mm (0.5138 – 0.5145 in.)**

Bore intake and exhaust


Bushing bore mm (in.)	Bushing size
13.000 – 13.018 (0.5118 – 0.5125)	Use STD
Over 13.018 (0.5125)	Use O/S 0.05

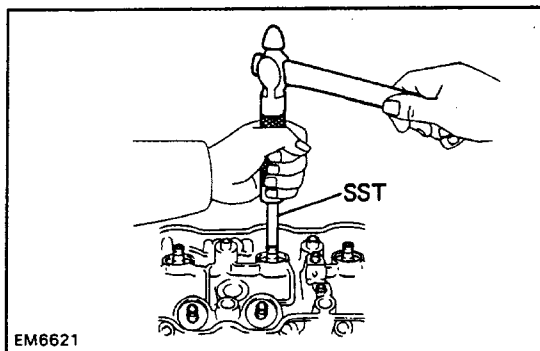


(f) Gradually heat the cylinder head to approx. 90°C (194°F).

(g) Using SST a and hammer, drive in a new valve guide bushing unit the snap ring makes contact with the cylinder head.

SST 09201-6001 1

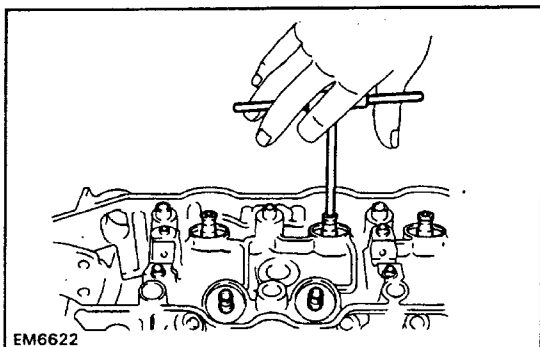

(h) Using a sharp 8 mm (0.31 mm) reamer, ream the valve guide bushing to obtain standard specified clearance (See page EG1-23) between the valve guide bushing and new valve.

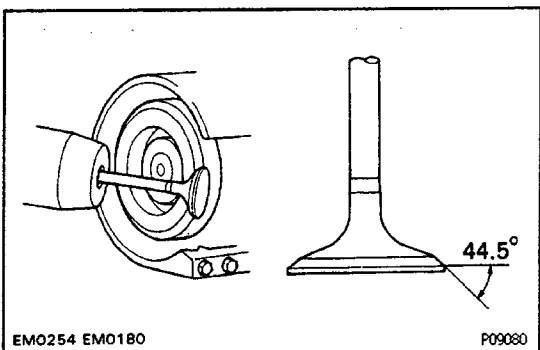


## 11. INSPECT AND GRIND VALVES

(a) Grind the valve only enough to remove pits and carbon.

(b) Check that valve is ground to the correct valve face angle.

**Valve face angle: 44.5°**

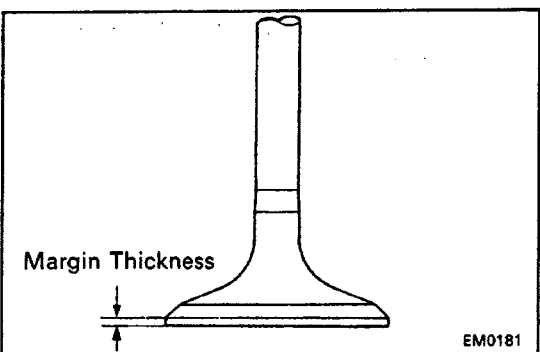


(c) Check the valve head margin thickness.

**Standard margin thickness: 1.0 mm (0.039 in.)**

**Minimum margin thickness: 0.6 mm (0.024 in.)**

If the valve head margin thickness is less than minimum, replace the valve.

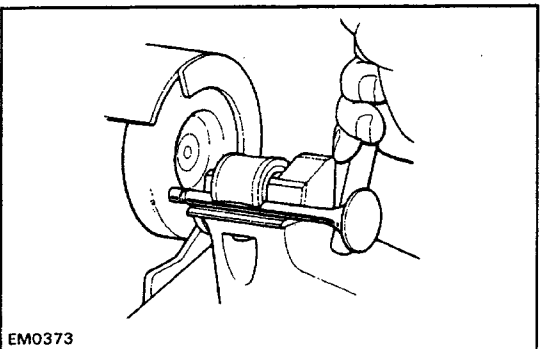

(d) Check the surface of the valve stem tip for wear.


If the valve stem tip is worn, regrind it with grinder or replace the valve if necessary.

**NOTICE: Do not grind off more than minimum overall length.**

**Minimum overall length:**

**Intake 113.0 mm (4.449 in.)**

**Exhaust 111.9 mm (4.406 in.)**

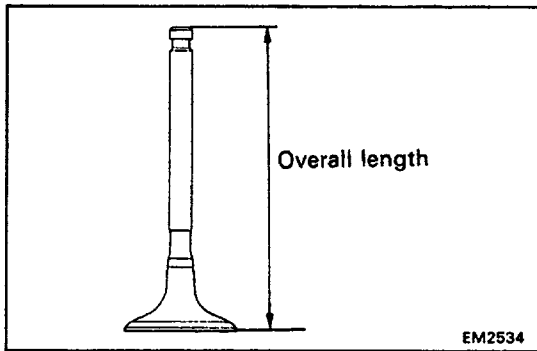

(e) Check the valve overall length.

**Standard overall length:**

**Intake 113.5 mm (4.468 in.)**


**Exhaust 112.4 mm (4.425 in.)**

**Minimum overall length:**

**Intake 113.0 mm (4.449 in.)**


**Exhaust 111.9 mm (4.406 in.)**

If the valve overall length is less than minimum, replace the valve.

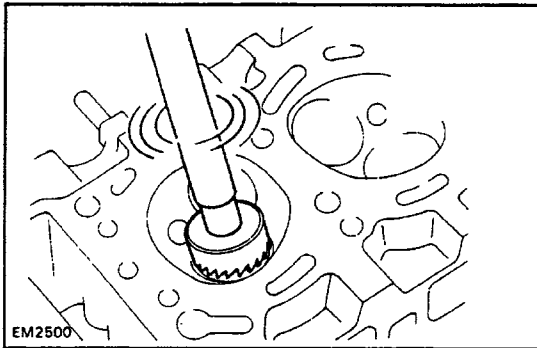

## 12. INSPECT AND CLEAN VALVE SEATS

(a) Using a 45° carbide cutter, resurface the valve seats. Remove only enough metal to clean the seats.

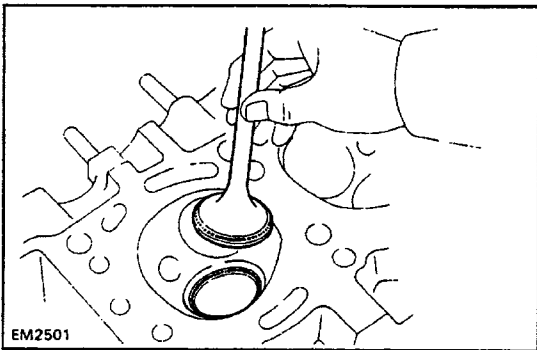

(b) Check the valve seating position.


Apply a light coat of prussian blue (or white lead) to the valve face. Install the valve. Lightly press the valve against the seat. Do not rotate the valve.

(c) Check the valve face and seat for the following:


- If blue appears 360° around the face, the valve is concentric. If not, replace the valve.
- If blue appears 360° around the valve seat, the guide and seat are concentric. If not, resurface the seat.
- Check that the seat contact is on the middle of the valve face with the following width:

**1.2 – 1.6 mm (0.047 – 0.063 in.)**


If not, correct the valve seat as follows:

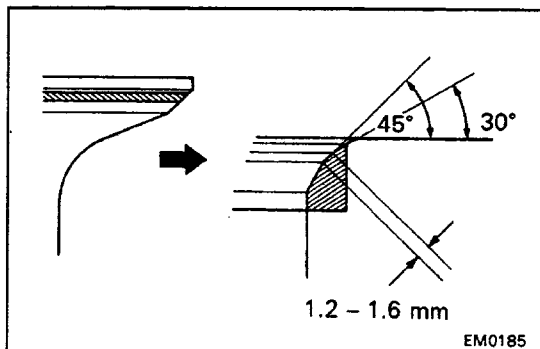


- If seating is too high on the valve face, use 30° and 45° cutters to correct the seat.

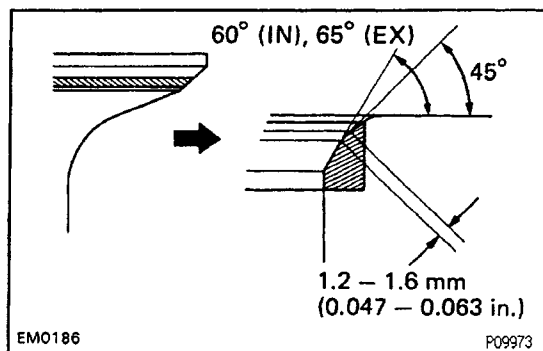

- If seating is too low on the valve face, use 60° (IN) or 65° (EX) and 45° cutters to correct the seat.

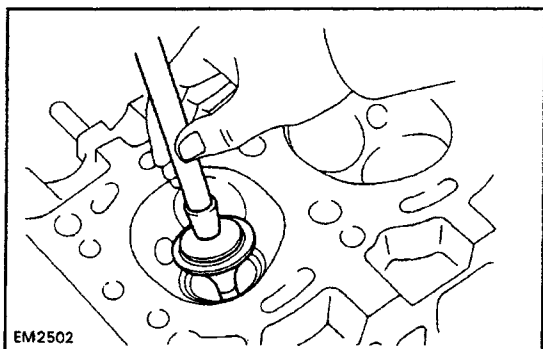

- (d) Hand-lap the valve and valve seat with abrasive compound.

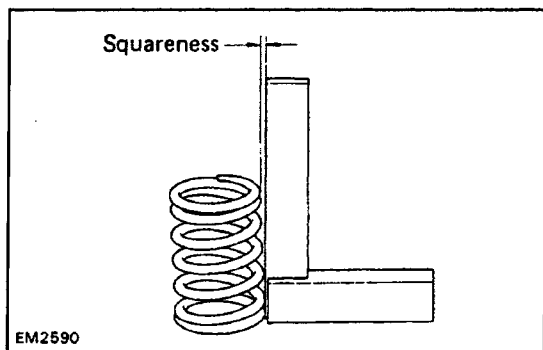


### 13. INSPECT VALVE SPRINGS

- (a) Using a steel square, measure the squareness of the valve spring.

**Maximum squareness: 1.6 mm. (0.063 in.)**


If squareness is greater than maximum, replace the valve spring.

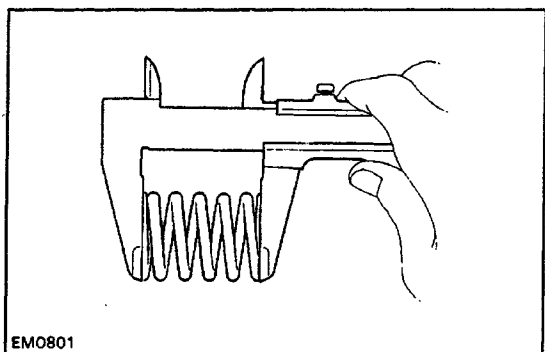

- (b) Using vernier calipers, measure the free length of the valve spring.

**Free length: 48.5 mm (1.909 in.)**

If the free length is not within specification, replace the valve spring.

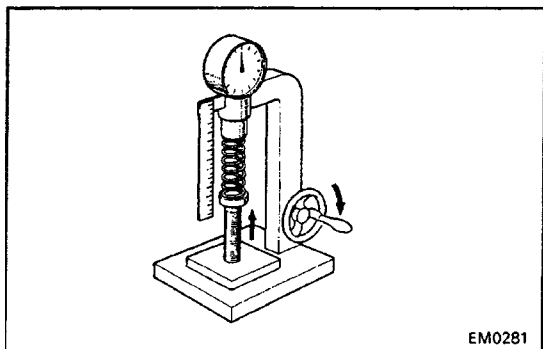


- (c) Using a spring tester, check the tension of each spring at the specified installed height.

Installed height: 40.5 mm (1.594 in.)

**Standard installed tension: 294 N (30.0 kgf, 66.1 lbf)**

**Minimum installed tension: 279 N (28.5 kgf, 62.8 lbf)**

If the installed tension is less than minimum, replace the spring.

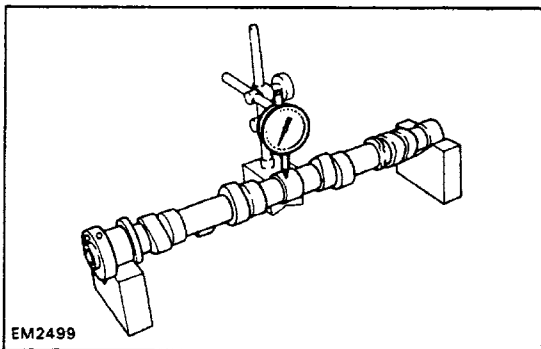


#### 14. INSPECT CAMSHAFT AND BEARING CAPS

(a) Place the cam shaft on V – blocks and , using a dial indicator, measure the circle runout at the center journal.

**Maximum circle runout: 0.2 mm (0.008 in.)**

If the circle runout is greater than maximum, replace the camshaft.

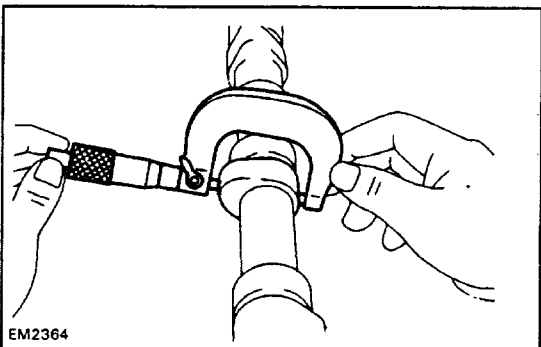

(b) Using a micrometer, measure the cam lobe height.

**Standard cam lobe height:**

**Intake 42.63 – 42.72 mm (1.6783 – 1.6818 in.)**


**Exhaust 42.69 – 42.78 mm (1.6807 – 1.6842 in.)**

**Maximum cam lobe height:**

**Intake 42.25 mm (1.6634 in.)**

**Exhaust 42.30 mm (1.6654 in.)**

If the lobe height is less than ,minimum, replace the camshaft.

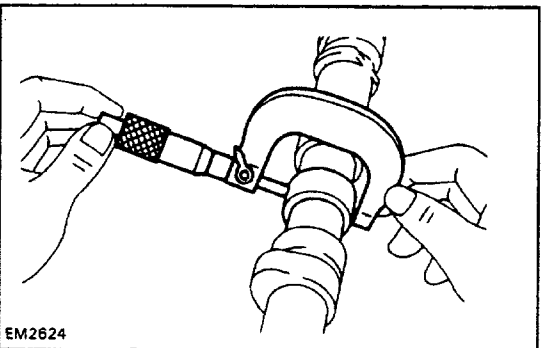


(c) Using a micrometer, measure the journal diameter.

**Standard diameter: 32.98 – 33.00 mm**

**(1.2984 – 1.2992 in.)**

If the journal diameter is less than specified, replace the camshaft.

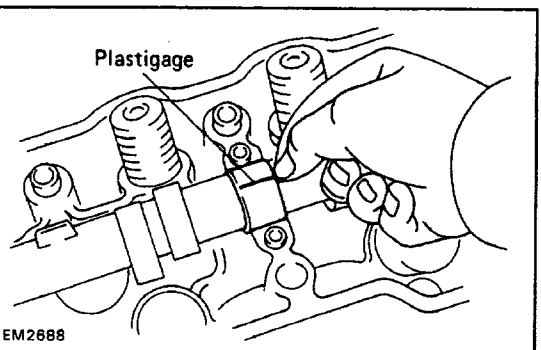


#### 15. INSPECT CAMSHAFT OIL CLEARANCE

(a) Clean the bearing caps and camshaft journal.

(b) Place the camshaft in the cylinder head.


(c) Lay a strip of Plastigage across each journal.

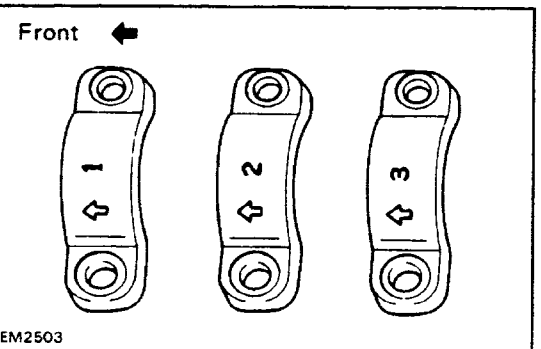

(d) Install the correct numbered bearing cap on each journal with the arrows pointing toward the front. Torque each bolt.

**Torque: 20 N·m (200kgf.-cm, 14ft-lbf)**

**HINT:** Do not turn the camshaft while the Plastigags is in place.

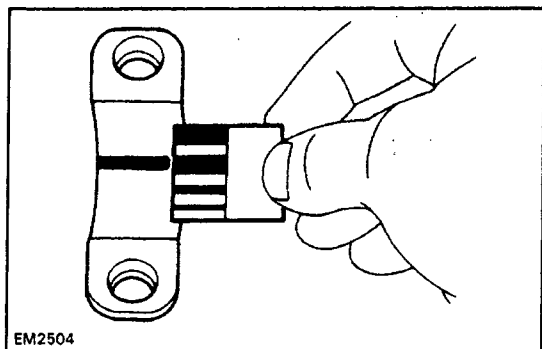

(e) Remove the caps and measure the Plastigage at its widest point.


**Standard clearance: 0.01 – 0.05 mm**

**(0.0004 – 0.0020 in.)**

**Maximum clearance: 0.1 mm (0.004 in.)**

If clearance is greater than maximum, replace the cylinder head and/or camshaft.

(f) Clean out the pieces of Plastigage from the bearing and journal.

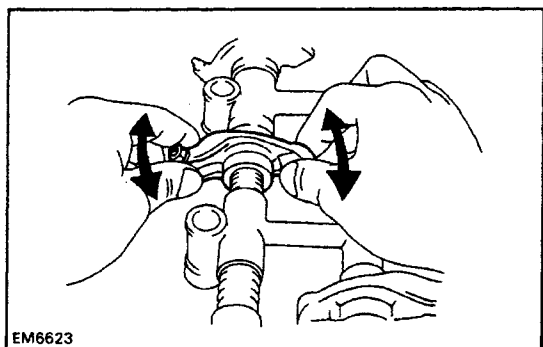

## 16. INSPECT ROCKER ARMS

Check the clearance between the rocker arms and shaft by moving the rocker arms as shown. Little or no movement should be felt.

If movement is felt, disassemble the rocker arm assembly and measure the oil clearance as follows:


(a) Disassemble rocker arm assembly.

- Remove the three screws.
- Slide the rocker stands, spring and rocker arms off the shafts.

(b) Using a dial indicator or telescoping gauge, measure the inside diameter of the rocker arm.

**Standard inside diameter: 16.000 – 16.018 mm.**

**(0.6299 – 0.6306 in.)**

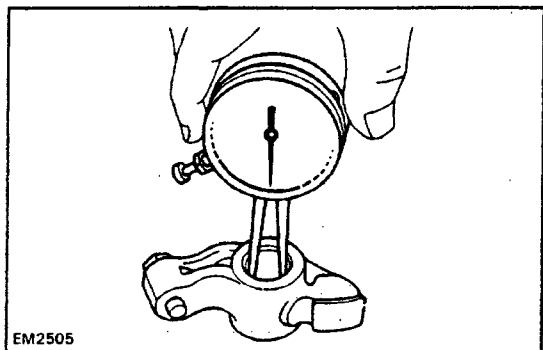

(c) Using a micrometer, measure the outside diameter of the shaft.

**Standard diameter: 15.97 – 15.99 mm**

**(0.6287 – 0.6295 in.)**

(d) Subtract the shaft diameter measurement from the rocker arm diameter measurement.

**Standard oil clearance: 0.01 – 0.05 mm**


**(0.0004 – 0.0020 in.)**



**Maximum oil clearance: 0.08 mm (0.0031 in.)**

If the oil clearance is greater than maximum, replace the rocker arm and/or shaft.

(e) Assemble the rocker arm assembly as shown, and install the three screws.

HINT: All rocker arms are the same but all rocker stands are different and must be assembled in the correct order.

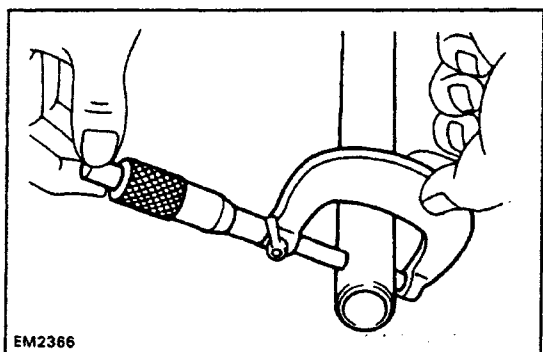

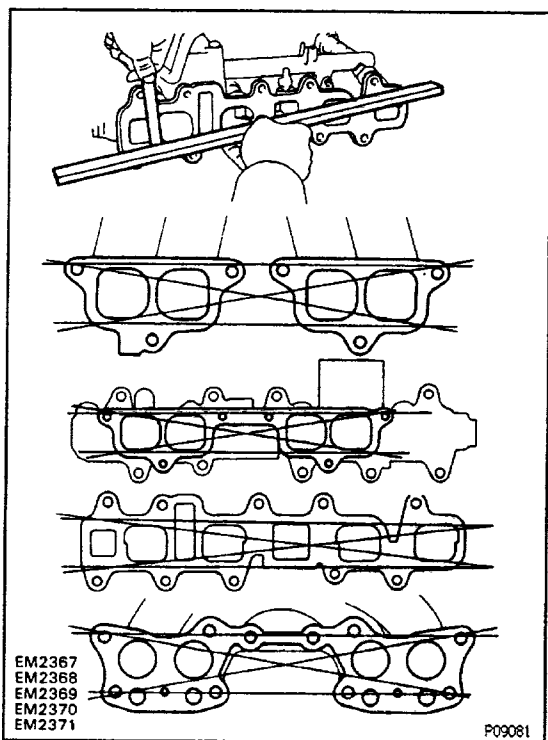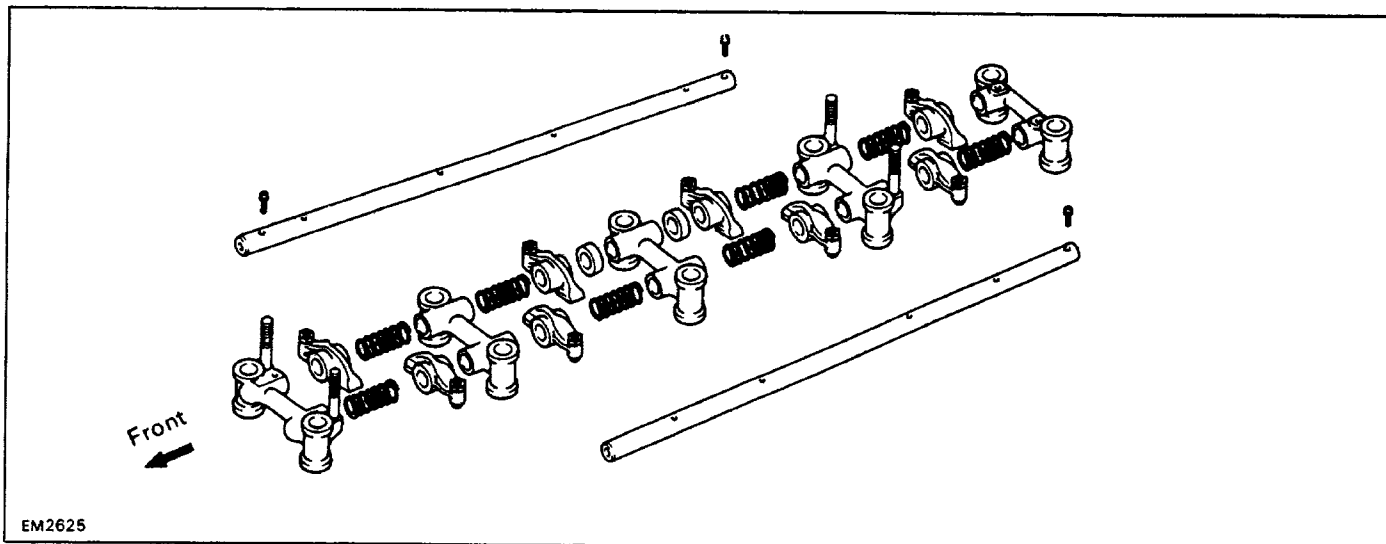

### 17. INSPECT INTAKE, EXHAUST MANIFOLDS AND AIR INTAKE CHAMBER

Using a precision straight edge and thickness gauge, check the surface contacting the cylinder head or intake manifold for warpage.

**Maximum intake warpage: 0.2 mm (0.008 in.)**

**Maximum exhaust warpage: 0.7 mm (0.28 in.)**

**Maximum air intake chamber warpage:**

**0.2 mm (0.008 in.)**

If warpage is greater than maximum, replace the manifold and/or air intake chamber.


## CYLINDER HEAD ASSEMBLY

(See page [EG1-15](#))

HINT:

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply new engine oil to all sliding and rotating surfaces.
- Replace all gaskets and oil seals with new parts.



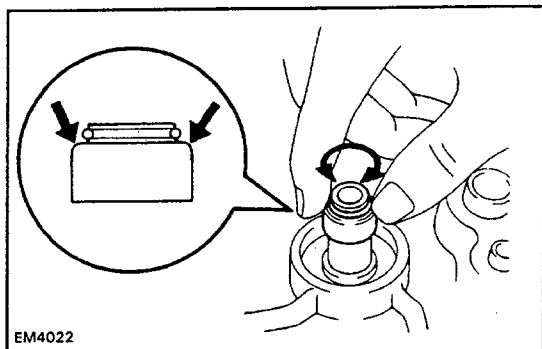

## 1. INSTALL VALVES

(a) Install a new oil seal on the valve guide bushing.  
HINT Pushing down at the place shown in the illustration.



(b) Rotate the oil seal to check that it is firmly installed.

(c) Lubricate and insert valve in the valve guide bushing.  
Check that valves are installed in the correct order.


(d) Install spring seat, spring and spring retainer on the cylinder head.

(e) Using SST, compress valve retainer and place two keepers around the valve stem.

SST 09202-43013

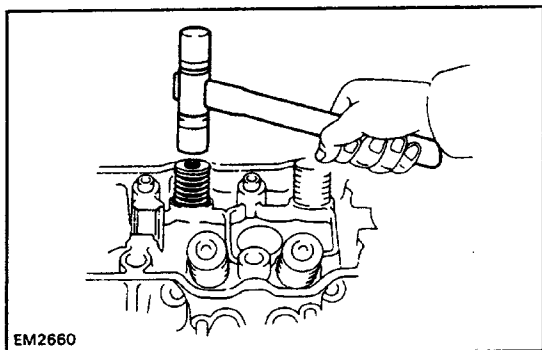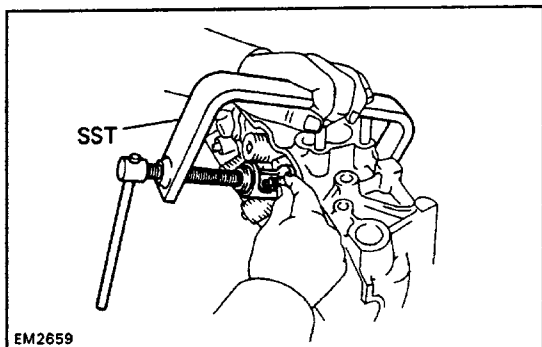

(f) Tap the stem lightly to assure proper fit.

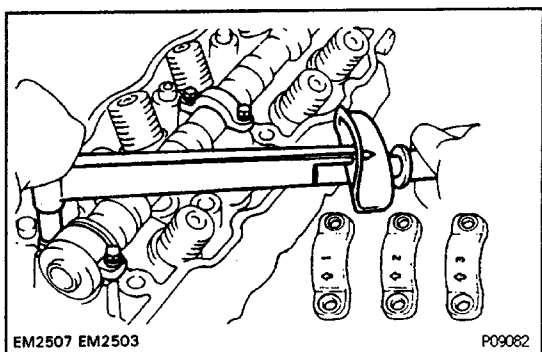


## 2. INSTALL CAMSHAFT

(a) Place the camshaft in the cylinder head and install the bearing caps in numbered order from the front with arrows pointed toward the front.

(b) Install and torque the cap bolts.

**Torque: 20N-m (200kgf-cm, 14ft-lbf)**

(c) Turn the camshaft to position the dowel at the top.

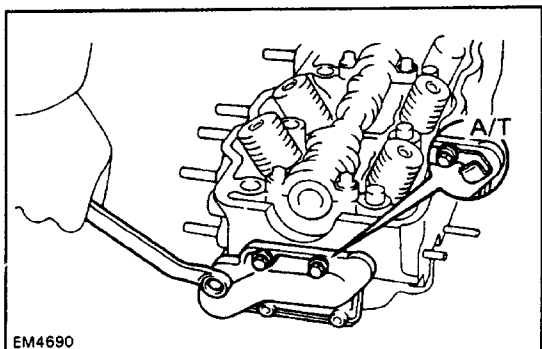


## 3. INSTALL CYLINDER HEAD REAR COVER

Install a new gasket, cylinder head rear cover and throttle cable clamp (for A/T) with the four bolts.


## 4. INSTALL LH ENGINE HANGER AND GROUND STRAP

## 5. INSTALL RH ENGINE HANGER

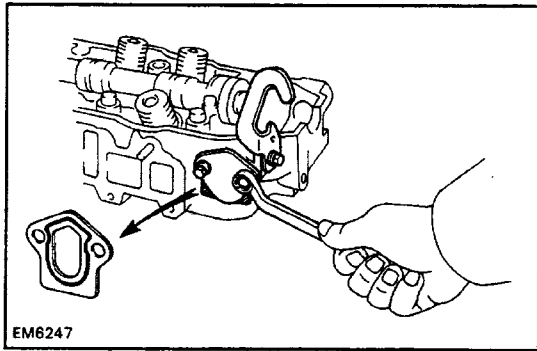

## 6. INSTALL PLUG PATE


Install a new gasket and plug plate with the two bolts.  
**HINT:** Attach the flat side of the gasket to the cylinder head.

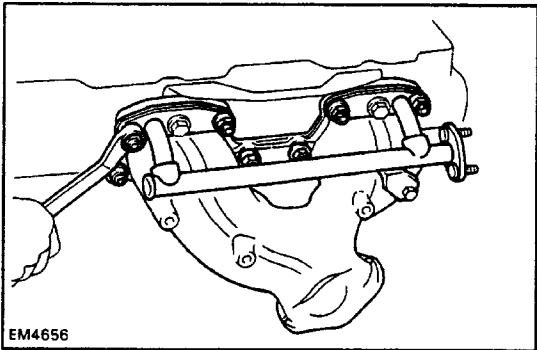

## 7. INSTALL EXHAUST MANIFOLD


- (a) Position a new gasket on the cylinder head.
- (b) Install the exhaust manifold with the eight nuts.  
 Torque the nuts.

**Torque: 44N-m (450kgf-cm, 33ft-lbf)**

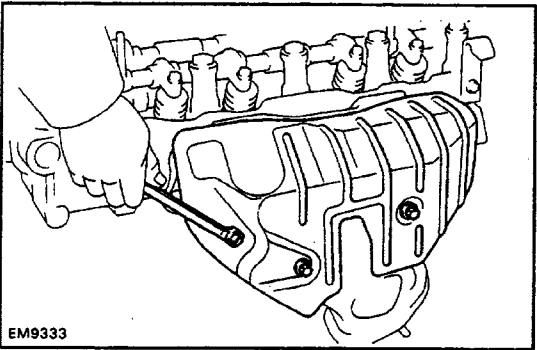

- (c) Install the No. 2 exhaust manifold heat insulator with the three bolts.

**Torque: 19N-m (195kgf-cm, 14ft.-lbf)**

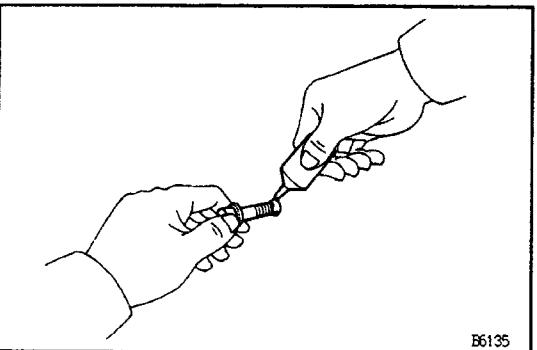

## 8. INSTALL EGR VALVE


- (a) Clean the set bolt (closest to the front) threads and cylinder head bolt holes of any sealer, oil or foreign particles.

Remove any oil with kerosene or gasoline.


- (b) Apply sealant to 2 or 3 threads of the bolt end.

**Sealant: Part No. 08833-00070, THREE BOND 1324 or equivalent**

- This adhesive will not harden while exposed to air. It will act as a sealer or binding agent only when applied to threads, etc. and air is cut off.

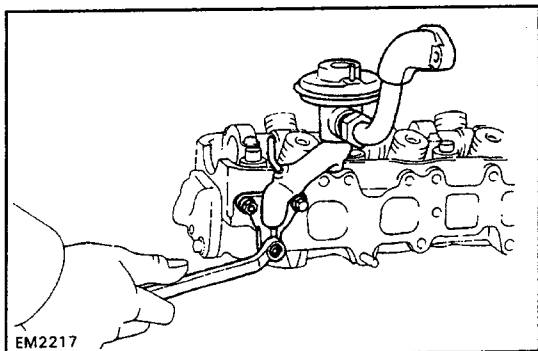

(c) Install the EGR valve with the two bolts and nut.

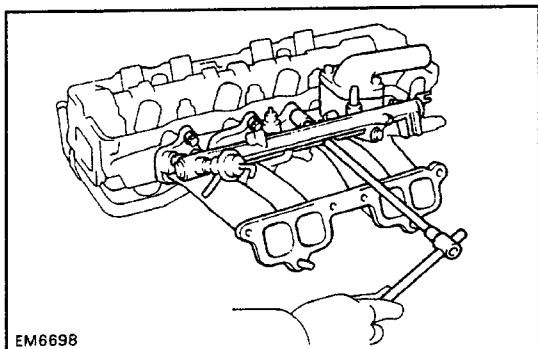


## 9. INSTALL INTAKE MANIFOLD

- (a) Position a new gasket on the cylinder head.
- (b) Install the intake manifold with the delivery pipe and injectors and No. 1 air pipe.
- (c) Install the seven bolts, one hexagon bolt and two nuts. Torque the bolts and nuts.


**Torque: 19Nm (195kgf-cm, 14ft-lbf)**

- (d) Install the heater inlet pipe to the cylinder head with the bolt.

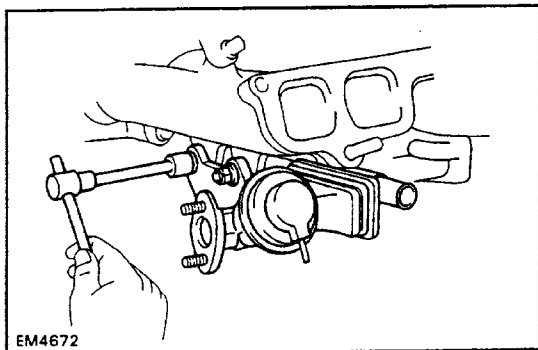

- (e) Install the PAIR valve with the two nuts.


**Torque: 13N-m (130kgf-cm, 9 ft-lbf)**

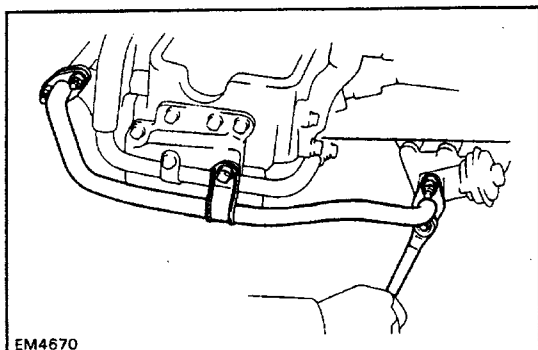

## 10. INSTALL NO. 1 SECONDARY AIR INJECTION MANIFOLD

- (a) Position new gaskets on the PAIR valve and No. 1 secondary air injection pipe.
- (b) Install the No. 1 secondary air injection pipe with the four nuts and bolt.

**Torque: 13Nm (130kgf-cm, 9ft-lbf)**

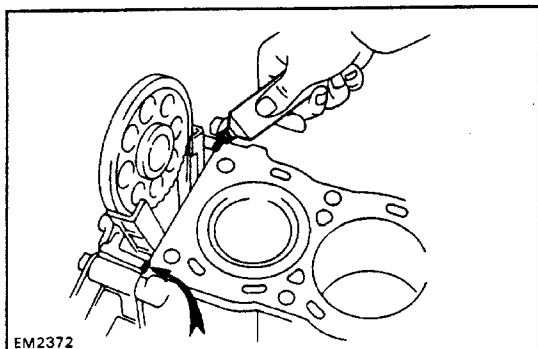

## CYLINDER HEAD INSTALLATION


(See page [EG1-15](#))

### 1. APPLY SEAL PACKING TO CYLINDER BLOCK

- (a) Apply seal packing to two locations as shown.  
**Seal packing: Part No. 08826-00080 or equivalent**
- (b) Place a new head gasket over dowels on the cylinder block.

### 2. INSTALL CYLINDER HEAD


- (a) If the sprocket was removed, align the alignment marks placed on the sprocket and chain during removal.
- (b) position the cylinder head over dowels on the block.

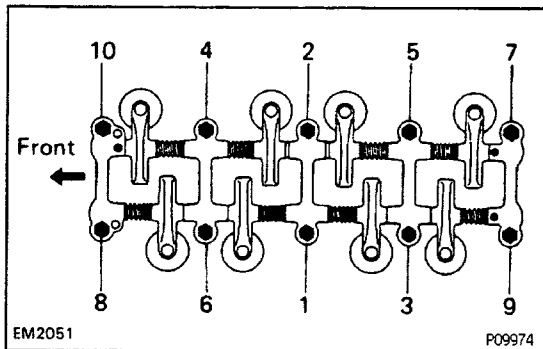

### 3. INSTALL ROCKER ARM ASSEMBLY

- (a) Place the rocker arm assembly over the dowels on the cylinder head.
- (b) Install and tighten the head bolts gradually in three passes in the sequence shown. Torque the bolts on the final pass.


**Torque: 78N-m (800kgf-cm, 58ft-lbf)**

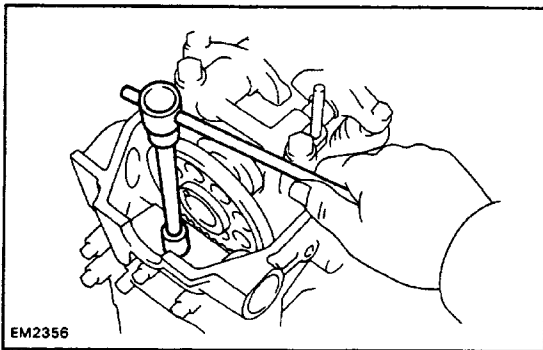

### 4. INSTALL CHAIN COVER BOLT


Torque the bolt.

**Torque: 13N-m (130kgf-cm, 9ft-lbf)**

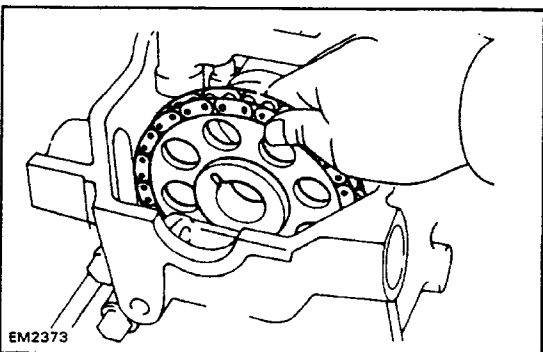

- (a) While holding up on the sprocket and chain, turn the crankshaft until the No. 1 and No. 4 cylinders are at top dead center.






(b) Place the chain sprocket over the camshaft dowel.  
HINT: If the chain does not seem long enough, turn the crankshaft back and forth while pulling up on the chain and sprocket.

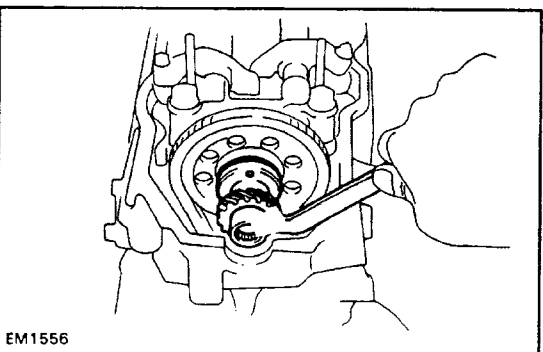

### 5. INSTALL DISTRIBUTOR DRIVE GEAR AND CAM-SHAFT THRUST PLATE

Place the distributor drive gear and camshaft thrust plate over the chain sprocket. Torque the bolt.

**Torque: 78N-m (800kgf-cm, 58ft-lbf)**

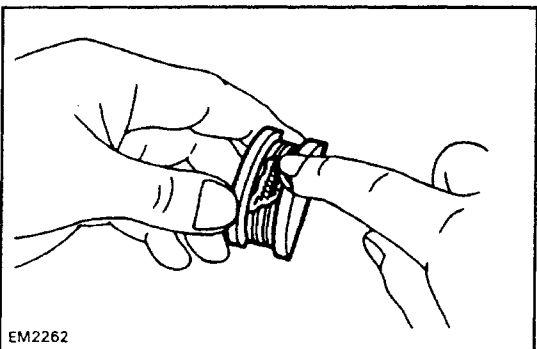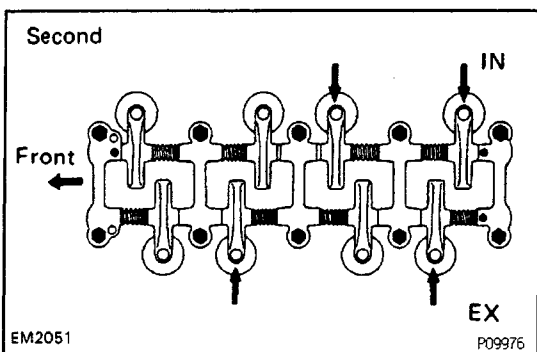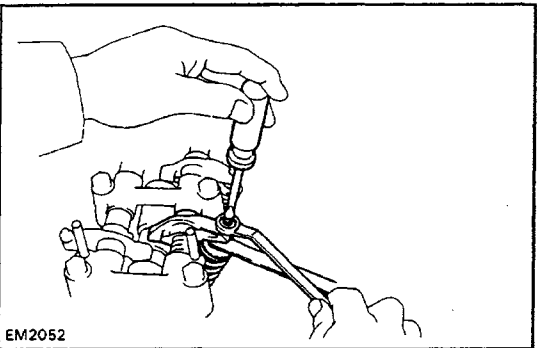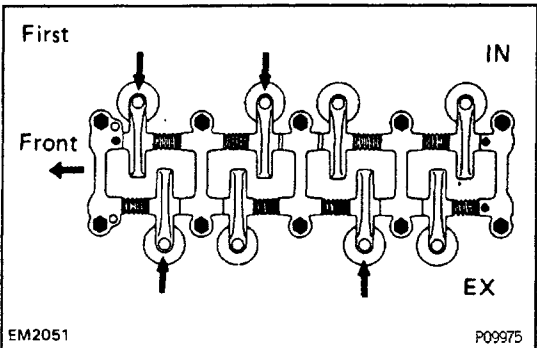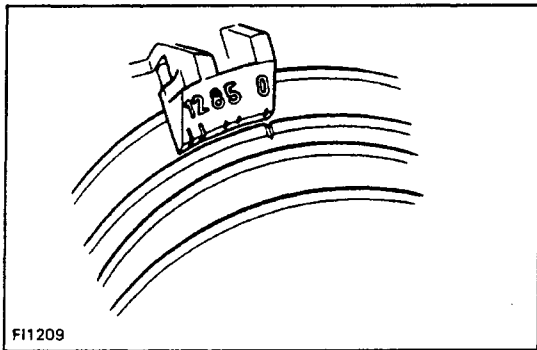

## 6. ADJUST VALVE CLEARANCE

(a) Set the No. 1 cylinder to TDC/compression.

- Turn the crankshaft with a wrench to align the timing, marks at TDC. Set the groove on the pulley at the "0" mark position of the chain cover.
- Check that the rocker arms on the No. 1 cylinder are loose and the rocker arms on No. 4 cylinder are tight.

If not, turn the crankshaft one complete revolution and align the marks as above.

(b) Adjust the clearance of half of the valves.

Adjust only the valves indicated by arrows as shown.

**Valve clearance (Cold):**

**Intake 0.20 mm (0.008 in.)**

**Exhaust 0.30 mm (0.012 in.)**

**HINT:** After installing the cylinder head, warm up the engine and adjust the valve clearance.

Use a thickness gauge to measure between the valve stem and rocker arm. Loosen the lock nut and turn the adjusting screw to set the proper clearance. Hold the adjusting screw in position and tighten the lock nut.

**Torque: 25N-m (250kgf-cm, 18ft-lbf)**

Recheck the clearance. The thickness gauge should move with a very slight drag.

(c) Turn the crankshaft one revolution and adjust the other valves.


(d) Set the No. 1 cylinder to TDC/compression.

## 7. INSTALL HALF-CIRCULAR PLUGS

(a) Apply seal packing to the cylinder head installation surface of the plug.

**Seal packing: Part No. 08826-00080 or equivalent**


(b) Install the half-circular plugs to the cylinder head.

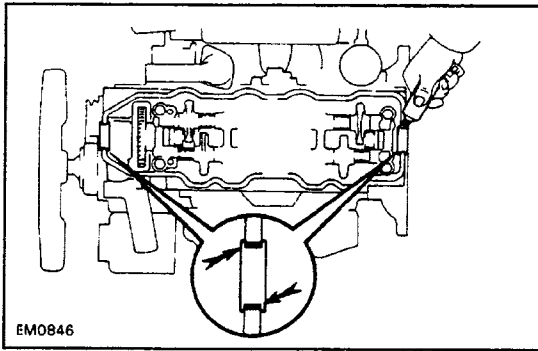

## 8. INSTALL HEAD COVER

(a) Apply seal packing to the four locations shown.


**Seal packing: Part No. 08826-00080 or equivalent**

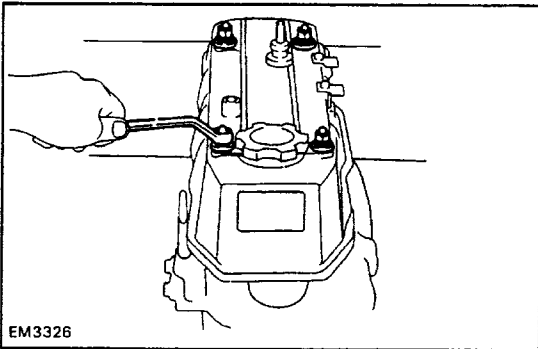

(b) Install the gasket to the cylinder head.

(c) Place the head cover on the cylinder head and install the four seals and nuts.

**Torque: 5.9N-m (60kgf-cm, 52in.-lbf)**

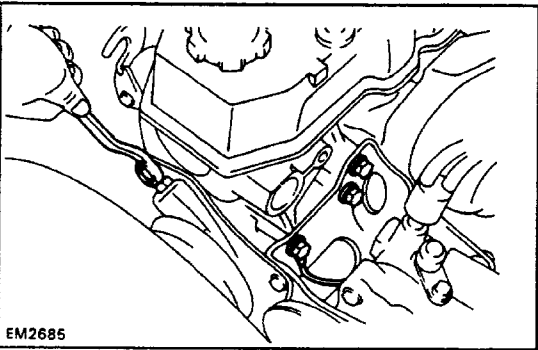

## POST INSTALLATION

EG1VM-02

### 1. (w/PS)

#### CONNECT PS BRACKET TO CYLINDER HEAD

Install the four bolts and bond strap. Torque the bolts.


**Torque: 44N-m (450kgf-cm, 33ft-lbf)**

### 2. (w/PS)

#### INSTALL DRIVE BELT AND ADJUST BELT TENSION

(See step 2 on page [MA-6](#))

### 3. CONNECT BY-PASS HOSE TO INTAKE MANIFOLD

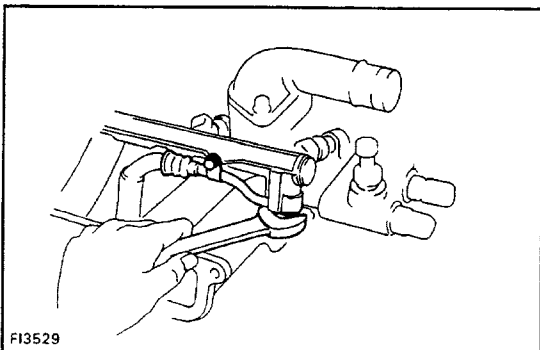

### 4. CONNECT FUEL HOSE TO DELIVERY PIPE

Install new gaskets and the fuel hose with union bolt.


**Torque: 44N-m (450kgf-cm, 33ft-lbf)**

### 5. CONNECT FOLLOWING WIRES:

- (a) Engine coolant temp. sensor wire
- (b) Cold start injector time switch wire
- (c) VSV wires
- (d) Igniter wire

- (e) (A/T)
- OD temp. switch wire
- (f) Engine coolant temp. sender gauge wire
- (g) Injector wires
- (h) (with A/C)
- Compressor wires
- (i) Transmission wires
- (j) Starter wire (terminal 50)
- (k) Oil pressure sender gauge wire
- (l) Knock sensor wire

## 6. CONNECT FUEL RETURN HOSE

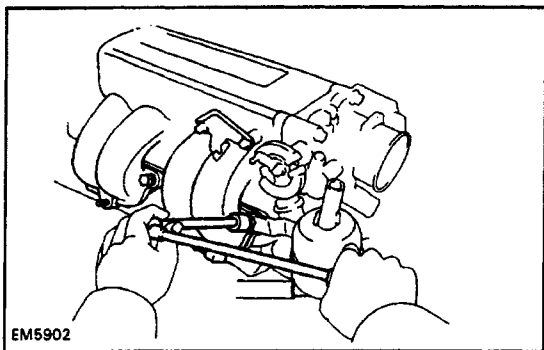

## 7. INSTALL CHAMBER WITH THROTTLE BODY

- (a) Position new gaskets on the intake manifold and No. 1 EGR pipe.
- (b)– Install the chamber, throttle body, fuel hose clamp, resonator and bond strap with the four bolts and two nuts.
- (c) Connect the chamber and stay with a bolt.
- (d) Install the bolts holding the EGR valve to the chamber.
- (e) Install the new gaskets and cold start injector pipe.

## 8. CONNECT FOLLOWING WIRES:


- (a) (California only)
- EGR gas temp. sensor wire
- (b) Throttle position wire
- (c) Cold start injector wire

## 9. INSTALL EGR VACUUM MODULATOR

## 10. CONNECT FOLLOWING PARTS:

- (a) (w/ Oil cooler)
- Connect the No. 1 oil cooler hose to the intake manifold.
- (w/o Oil cooler)
- Connect the No. 1 water by-pass hose to the intake manifold.
- (b) No. 2 and No. 3 water by-pass hoses to the throttle body
- (c) Vacuum hoses to throttle body
- (d) Pressure regulator hose
- (e) Fuel pressure up hose
- (f) PAIR valve hose
- (g) EGR valve hose

- (h) EGR vacuum modulator hose
- (i) EVAP hose
- (j) (with A/C)
- VSV hoses
- (k) (w/PS)
- Air control valve hoses
- (l) Brake booster hose
- (m) No. 1 and No. 2 PCV hoses

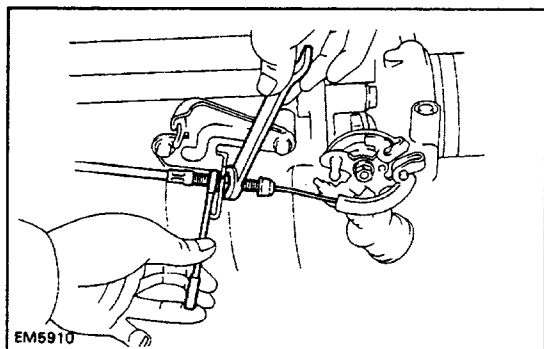**11. CONNECT GROUND STRAP TO ENGINE REAR SIDE****12. (A/T)****CONNECT THROTTLE CABLE**

Connect the throttle cable to the clamp and bracket.

**13. CONNECT ACCELERATOR CABLE****14. CONNECT HEATER WATER INLET HOSE TO HEATER WATER INLET PIPE****15. INSTALL RADIATOR INLET HOSE****16. INSTALL SPARK PLUGS AND DISTRIBUTOR**

(See pages [IG-6](#), [9](#))

**17. INSTALL OIL DIPSTICK****18. CONNECT EXHAUST PIPE TO EXHAUST MANIFOLD**

(a) Install the new gaskets, and connect the exhaust pipe to the exhaust manifold with the three nuts.

(b) Install the exhaust pipe clamp.

**19. INSTALL INTAKE AIR CONNECTOR****20. FILL WITH ENGINE OIL**

(See step 3 on page [EG1-236](#))

**21. FILL WITH COOLANT**

(See step 3 on page [EG1-225](#))

**22. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY****23. START ENGINE**

Warm up the engine and inspect for leaks.

**24. PERFORM ENGINE ADJUSTMENT**

(See page [EG1-10](#))

**25. RECHECK COOLANT AND ENGINE OIL LEVEL****26. ROAD TEST**


Road test the vehicle.

**27. RECHECK COOLANT AND ENGINE OIL LEVEL**



# TIMING CHAIN COMPONENTS

EG1VJ-01

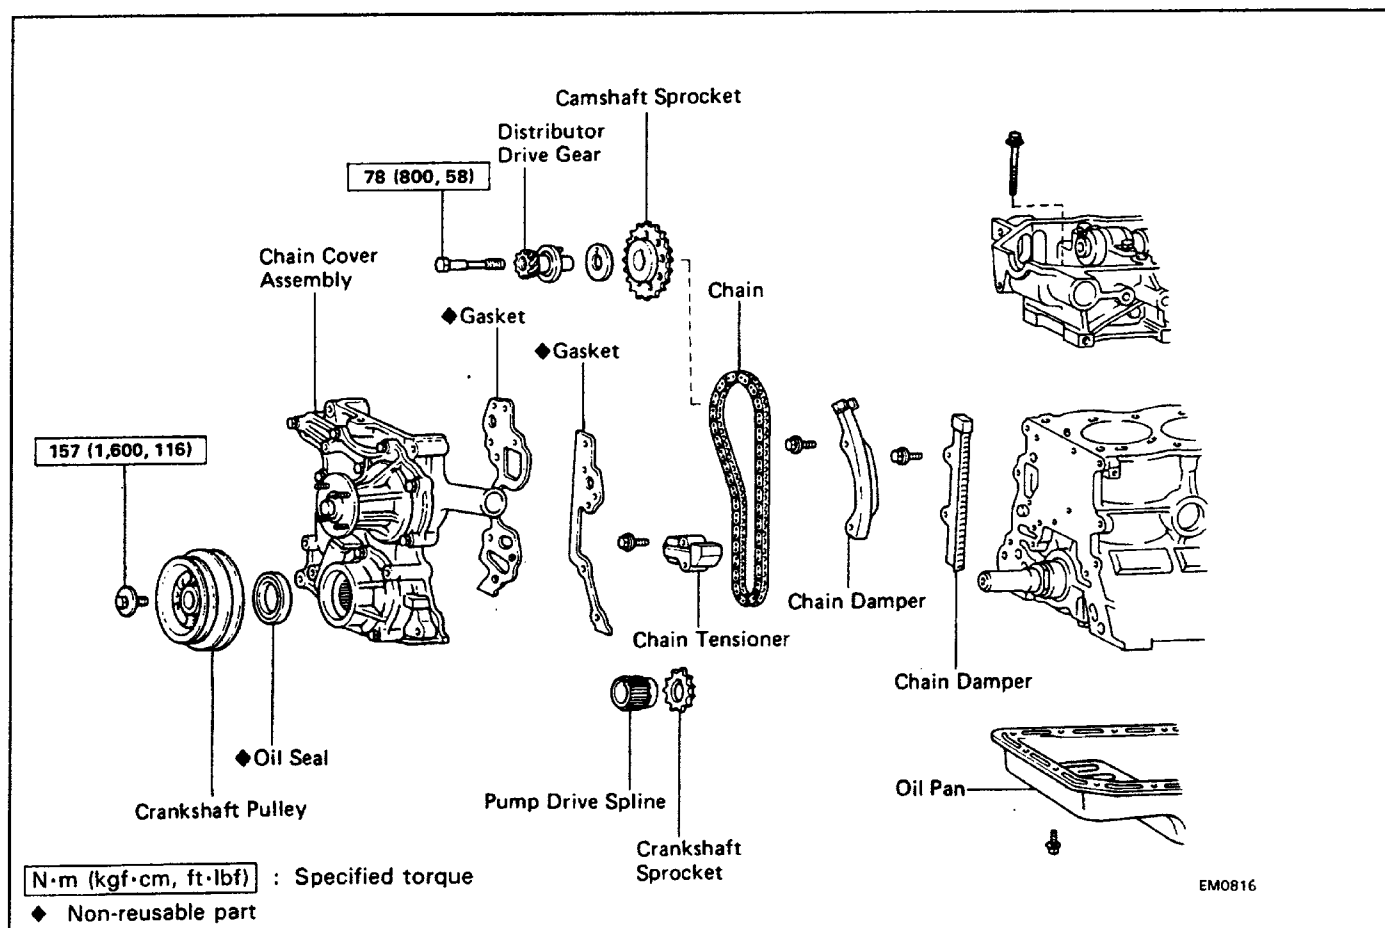

## PREPARATION OF REMOVAL

EG1VK-02

### 1. REMOVE CYLINDER HEAD

(See page [EG1-16](#))

### 2. REMOVE RADIATOR

(See page [EG1-230](#))

### 3. (4WD)

### REMOVE FRONT DIFFERENTIAL


(See SA section)

### 4. REMOVE OIL PAN

- (a) Remove the engine undercover.
- (b) Remove the engine mounting bolts.
- (c) (2WD)

Place a jack under the transmission and raise the engine approx. 25 mm (0.98 in.)

- (d) Remove the sixteen bolts and nuts.
- (e) Using SST and brass bar, separate the oil pan from the cylinder block.

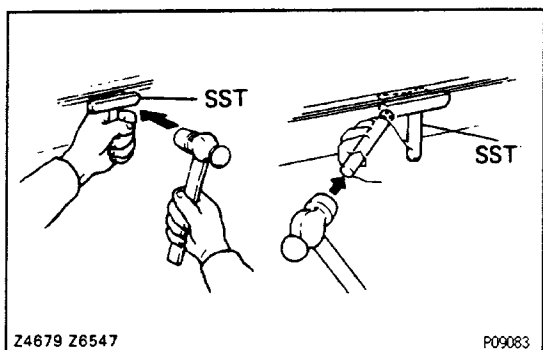

SST 09032 – 00100

HINT: When removing the oil pan, be careful not to damage the oil pan flange.

EG1VL-02


## TIMING CHAIN REMOVAL

### 1. (W/PS)

REMOVE PS BELT


### 2. (with A/C)

REMOVE A/C BELT, COMPRESSOR AND BRACKET

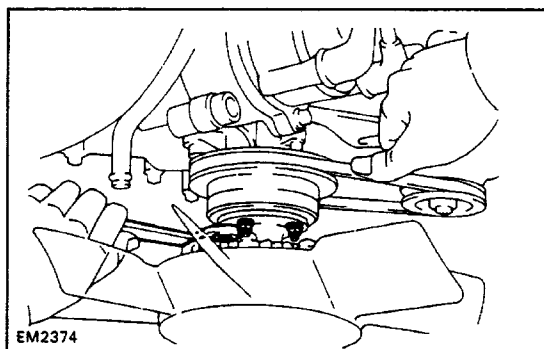

### 3. REMOVE FLUID COUPLING WITH FAN AND WATER PUMP PULLEY

- (a) Loosen the water pump pulley set bolts.
- (b) Loosen the belt adjusting bolt and pivot bolt of the generator, and remove the drive belt.
- (c) Remove the set nuts, fluid coupling with fan and water pump pulley.

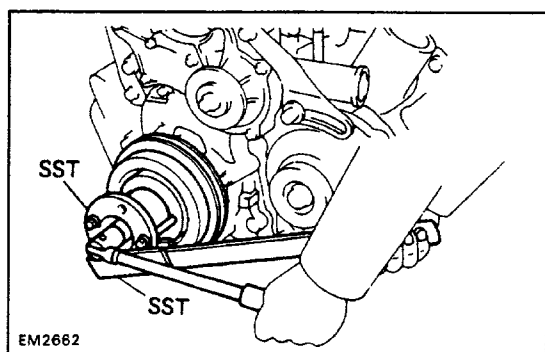


### 4. REMOVE CRANKSHAFT PULLEY

- (a) (with A/C (w/o Air pump) or w/PS (w/ Air pump))

Remove the No. 2 crankshaft pulley.

- (b) Using SST to hold the crankshaft pulley, loosen the pulley bolt.

SST 09213-70010 and 09330-00021

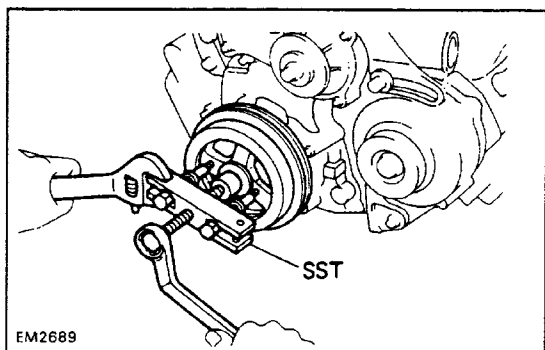


- (c) Using SST, remove the crankshaft pulley.

SST 09213-310231


HINT: If the front seal is to be replaced, see page

[EG1-236](#).

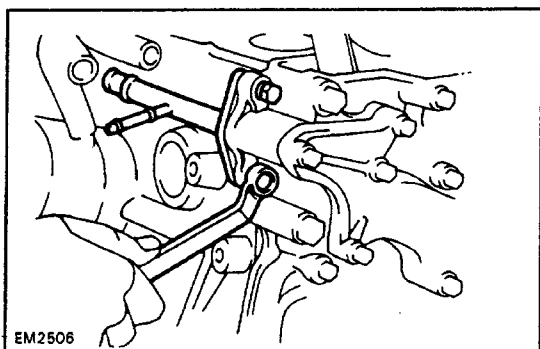

### 5. REMOVE NO. 1 WATER BY-PASS PIPE

Remove the two bolts and pipe.

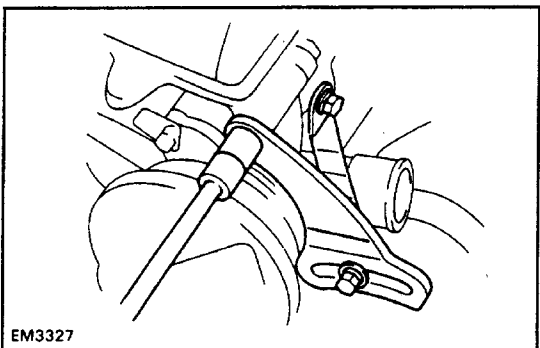


### 6. REMOVE FAN BELT ADJUSTING BAR

(a) (w/ PS)


Remove the bolt and PS lower bracket.

(b) Remove the three bolts and bar.

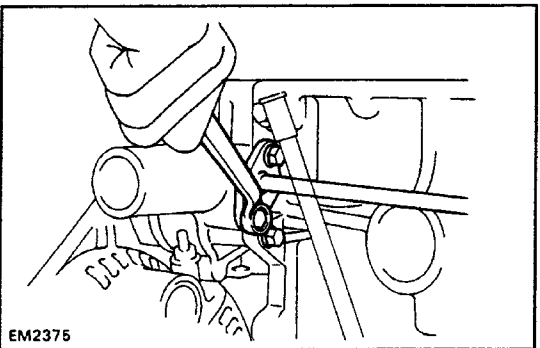

### 7. DISCONNECT HEATER WATER OUTLET PIPE


Remove the two bolts, and disconnect heater water outlet pipe.

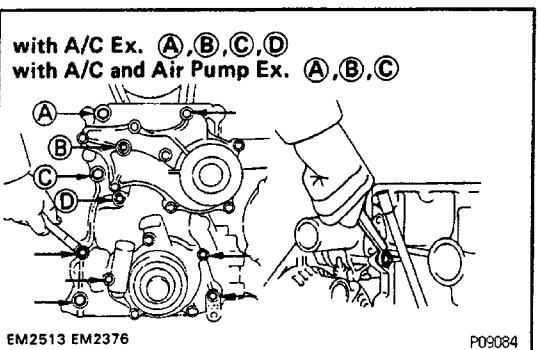

### 8. REMOVE CHAIN COVER ASSEMBLY

(a) Remove timing chain cover bolts shown by the arrows.


(b) Using a plastic faced hammer, loosen the chain cover and remove it.

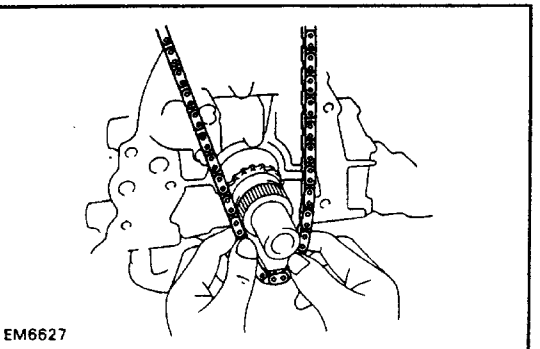

### 9. REMOVE CHAIN AND CAMSHAFT SPROCKET

(a) Remove the chain from the damper.


(b) Remove the cam sprocket and chain together.

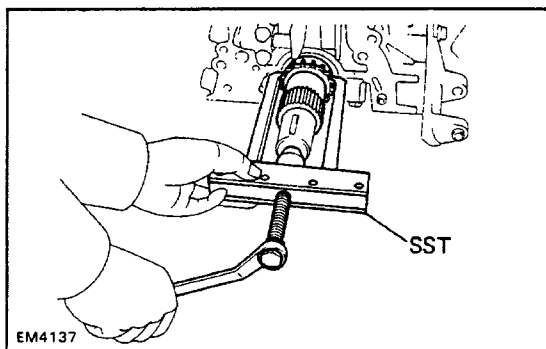

## 10. REMOVE PUMP DRIVE SPLINE AND CRANKSHAFT SPROCKET

If the oil pump drive spline and sprocket cannot be removed by hand, use SST to remove them together.  
SST 09213-36020

## 11. REMOVE GASKET MATERIAL ON CYLINDER BLOCK

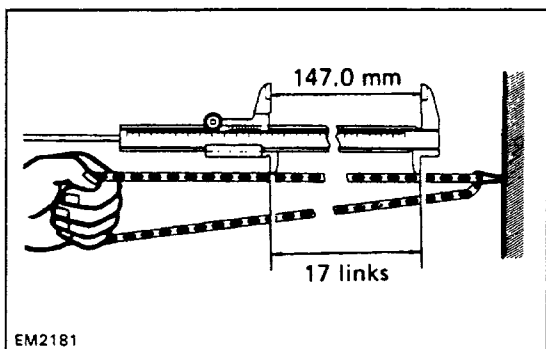

## COMPONENTS INSPECTION

EG1VM-01


### 1. MEASURE CHAIN AND SPROCKET WEAR

(a) Measure the length of 17 links with the chain fully stretched.

(b) Make the same measurements at least three other places selected at random.

**Chain elongation limit at 17 links: 147.0 mm (5.787 in.)**

If over the limit at any one place the chain.

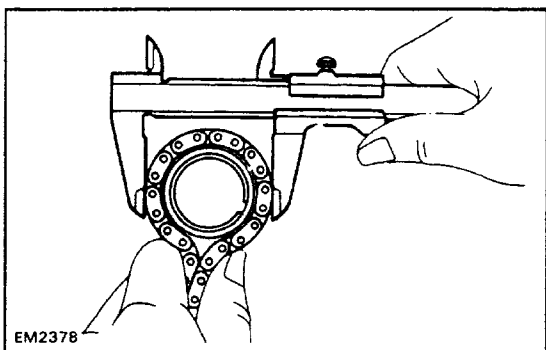


(c) Wrap the chain around the sprocket.

(d) Using a caliper gauge, measure the outer sides of the chain rollers as shown. Measure both sprockets.

**Crankshaft sprocket minimum: 59.4 mm (2.339 in.)**

**Camshaft sprocket minimum: 113.8 mm (4.480 in.)**

If the measurement is less than minimum, replace the chain and two sprockets.

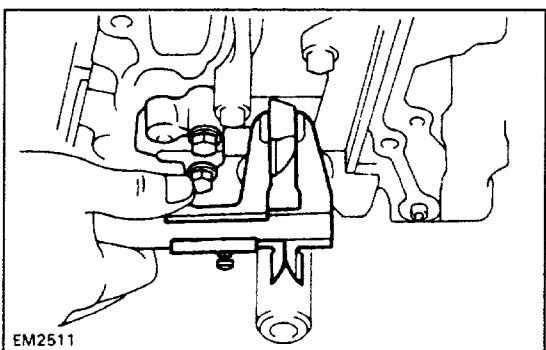


### 2. MEASURE CHAIN TENSIONER

Using a caliper gauge, measure the tensioner as shown.

**Tensioner minimum: 11.0 mm (0.433 in.)**

If the tensioner is worn or less than minimum, replace the chain tensioner.

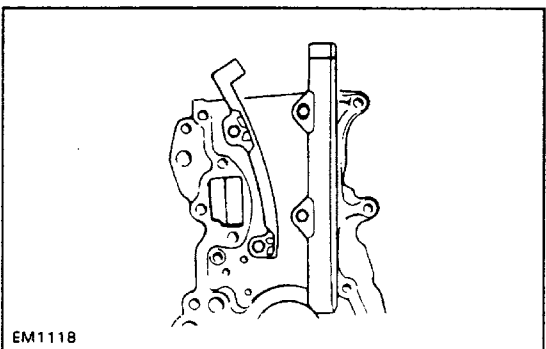


### 3. MEASURE CHAIN DAMPERS

Using a micrometer, measure each damper.

**Damper wear limit: 0.5 mm (0.020 in.)**

If either damper is worn or less than minimum, replace the damper.

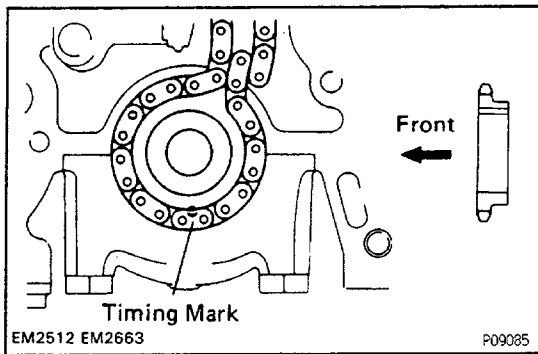


## TIMING CHAIN INSTALLATION

(See page [EG1-39](#))


### 1. INSTALL CRANKSHAFT SPROCKET AND CHAIN

- Turn the crankshaft until the shaft key is on top.
- Slide the sprocket over the key on the crankshaft.
- Place the timing chain on the sprocket with the single bright chain link aligned with the timing mark on the sprocket.

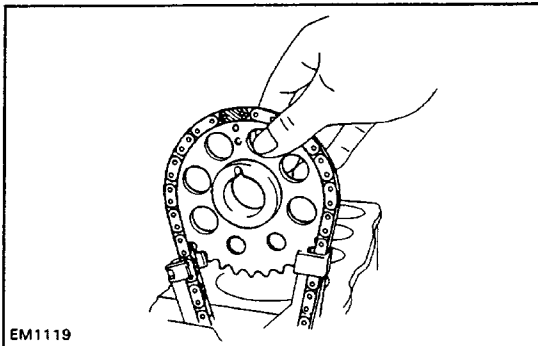

### 2. PLACE CHAIN ON CAMSHAFT SPROCKET

- Place the timing chain on the sprocket so that the bright chain link is aligned with the timing mark on the sprocket.
- Make sure the chain is positioned between the dampers.
- Turn the camshaft sprocket counterclockwise to take the slack out of the chain.

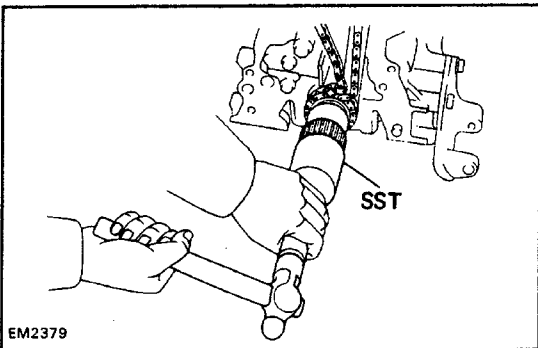


### 3. INSTALL OIL PUMP DRIVE SPLINE

Slide the oil pump drive spline over the crankshaft key.

HINT: If the oil pump drive spline is difficult to install by hand, install using SST.

SST 09608-35014 (09608-06040)

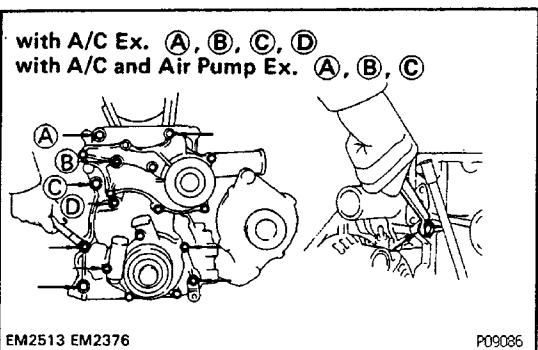


### 4. INSTALL TIMING CHAIN COVER ASSEMBLY

- Remove the old cover gaskets. Clean the gasket surface. Install new gaskets over the dowels.
- Slide the cover assembly over the dowels and pump spline.
- Insert the bolts as shown and torque them.

**Torque: 8 mm bolt 13 N-m(130kgf-cm, 9ft-lbf)**


**10 mm bolt 13 N-m(400kgf-cm, 29ft-lbf)**

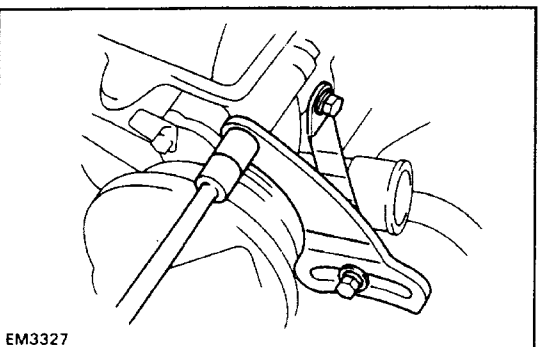


### 5. INSTALL FAN BELT ADJUSTING BAR

- Temporarily install the adjusting bar to the alternator.
- Install the adjusting bar to the chain cover and cylinder head.


**Torque: 13N-m(130kgf-cm, 9ft-lbf)**

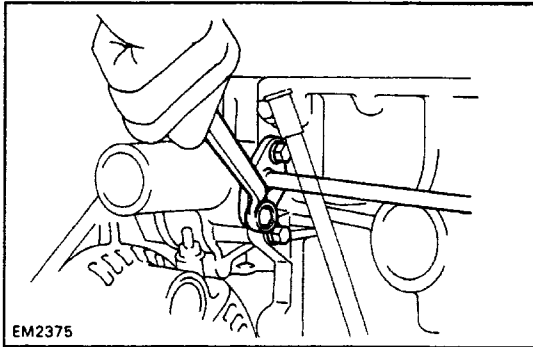**6. INSTALL HEATER WATER OUTLET PIPE**

Connect the heater water outlet pipe to the timing chain cover with the two bolts.

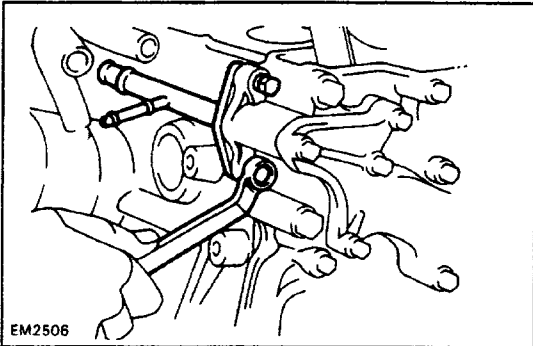**7. INSTALL NO.1 WATER BY-PASS PIPE**

Install the pipe with the two bolts.

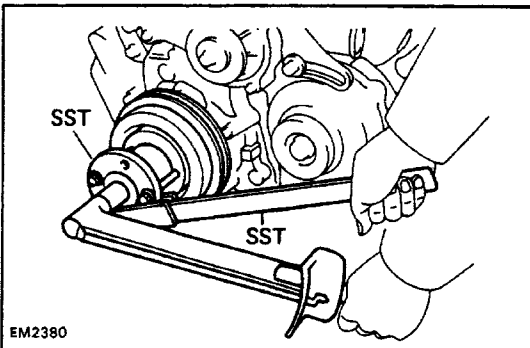**8. INSTALL CRANKSHAFT PULLEY**


(a) Install the crankshaft pulley and bolt.

(b) Using SST to hole the crankshaft pulley, torque the bolt.

SST 09213-70010 and 09660-00021

**Torque: 157N-m(1,600kgf-cm, 116ft-lbf)**

(c) (with A/C) Install the NO.2 crankshaft pulley.

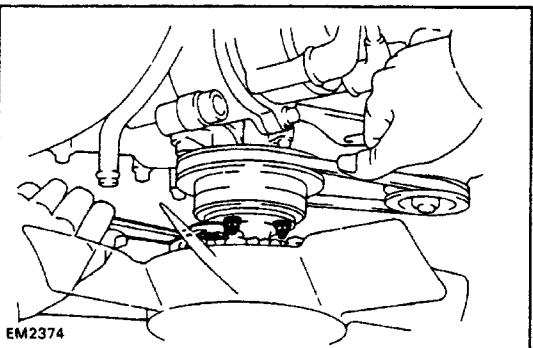**9. INSTALL WATER PUMP PULLEY AND FLUID COUPLING WITH FAN**

(a) Temporarily install the water pump pulley and fluid coupling with fan with the four nuts.

(b) Place the drive belt onto each pulley.

(c) Stretch the belt tight and tighten the four nuts.

**10. ADJUST DRIVE BELT TENSION**

(See page [MA-6](#))

**11. (with A/C) INSTALL A/C COMPRESSOR BRACKET, COMPRESSOR AND BELT**

(See page [MA-6](#))


**12. (w/PS) INSTALL PS BELT**

(See page [MA-6](#))

**13. INSTALL OIL PAN**

(a) Remove any old packing material and be careful not to drop any oil on the contacting surfaces of the oil pan and cylinder block.


- Using a razor blade and gasket scraper, remove all the packing (FIPG) material from the gasket surfaces.
- Thoroughly clean all components to remove all the loose material.
- Clean both sealing surfaces with a non-residue solvent.

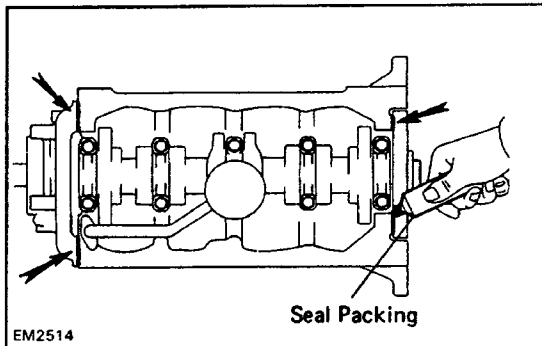

**NOTICE: Do not use a solvent which will affect the painted surfaces.**

(b) Apply seal packing to the joint part of the cylinder block and chain cover, cylinder block and rear oil seal retainer.

**Seal packing: Part No.08826-00080 or equivalent**

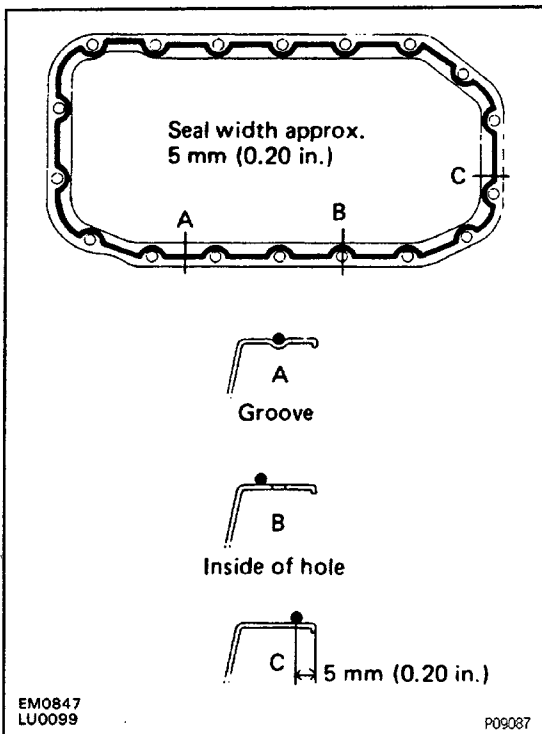

(c) Apply seal packing to the oil pan as shown in the illustration.

**Seal packing: Part No.08826-00080 or equivalent**

Install a nozzle that has been cut to a 5-mm (0.20 in.) opening.

HINT: Avoid applying an excess amount to the surface. Be especially careful near oil passages.

- If parts are not assembled within 5 minutes of applying the seal packing, the effectiveness of the seal packing is lost and the seal packing must be removed and reapplied.

- Immediately remove the nozzle from the tubs and reinstall the cap after using the seal packing.

(d) Install the oil pan over the studs on the block with the sixteen bolts and two nuts. Torque the bolts and nuts.

**Torque: 13N-m(130kgf-cm, 9ft-lbf)**

(e) Lower the engine and install the engine mounting bolts.

(f) Install the engine under cover.

## POST INSTALLATION

### 1. INSTALL RADIATOR

### 2. INSTALL CYLINDER HEAD


(See page [EG1-34](#))

### 3. (4WD) INSTALL FRONT DIFFERENTIAL

(See SA section)

# CYLINDER BLOCK COMPONENTS

EG1V0-01

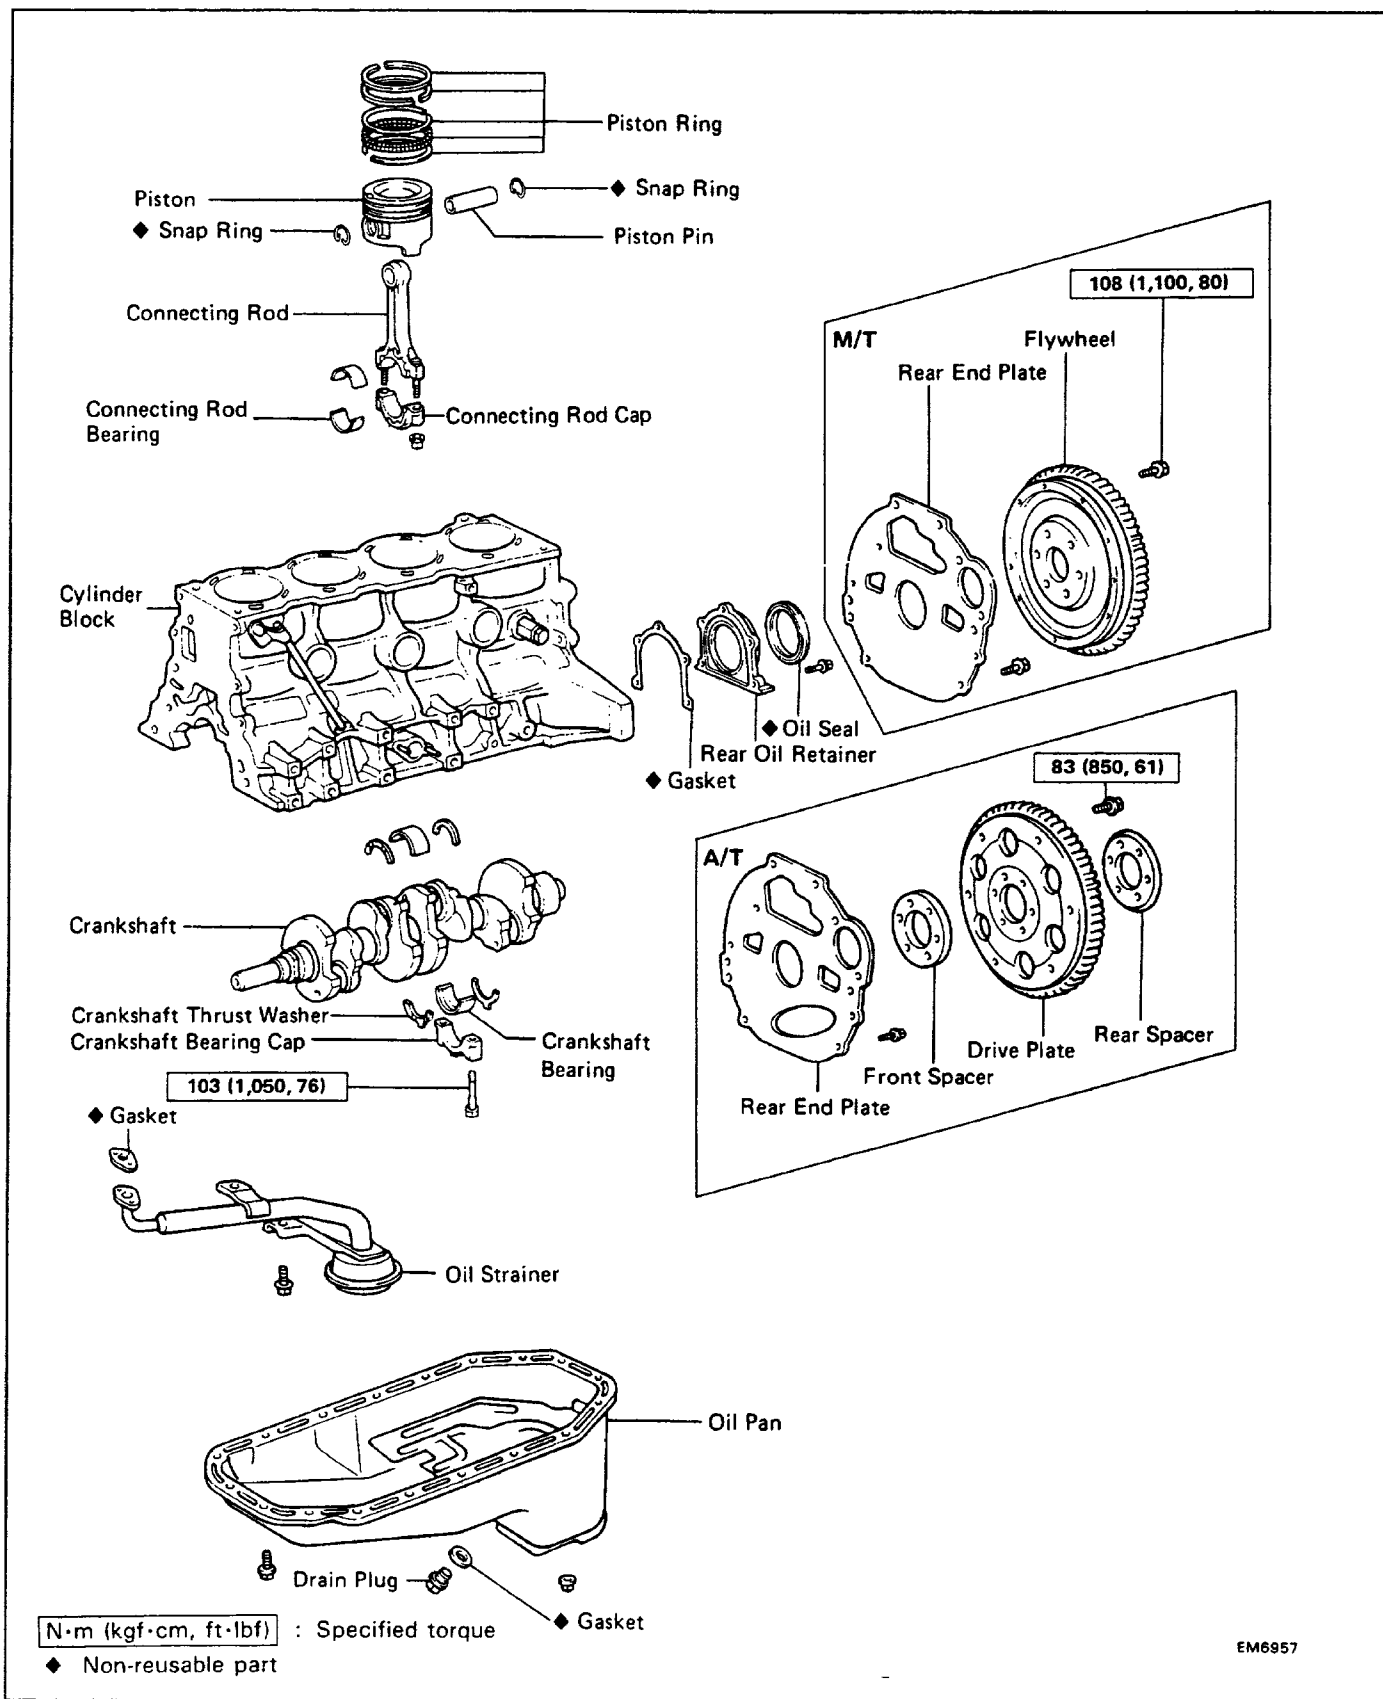

EM6957



## ENGINE REMOVAL

### 1. REMOVE HOOD

### 2. REMOVE BATTERY

### 3. REMOVE ENGINE UNDER COVER

### 4. DRAIN COOLANT FROM RADIATOR AND CYLINDER BLOCK

(See step 3 on page [EG1–225](#))

### 5. DRAIN ENGINE OIL

(See step 1 on page [EG1–236](#))

### 6. REMOVE AIR CLEANER CASE AND INTAKE AIR CONNECTOR

### 7. REMOVE RADIATOR

(See page [EG1–230](#))

### 8. REMOVE PS PUMP BELT

(a) Stretch the belt tight and loosen the PS pump pulley lock nut.

(b) Remove the PS belt.

### 9. (with A/C)

#### REMOVE A/C BELT

### 10. REMOVE GENERATOR DRIVE BELT, FLUID COUPLING AND FAN PULLEY

(See step 3 on page [EG1–40](#))

### 11. DISCONNECT FOLLOWING WIRES AND CONNECTORS:

(a) Ground strap from LH fender apron

(b) Generator connector and wire

(c) Igniter connector

(d) Generator wires

(e) High-tension cord for ignition coil

(f) Distributor wire from igniter

(g) Ground strap from engine rear side

(h) ECM connectors

(i) (M/T)

Starter relay connector

(j) Check connector

(k) (with A/C)

A/C compressor connector

### 12. DISCONNECT FOLLOWING HOSES:

(a) PS air hoses from gas filter and air pipe

(b) Brake booster hose

(c) (w/Cruise control)

Cruise control vacuum hose

(d) Charcoal canister hose from canister


### 13. DISCONNECT FOLLOWING CABLE:

(a) Accelerator cable

(b) (A/T)

Throttle cable

(c) (w/Cruise control)  
Cruise control cable

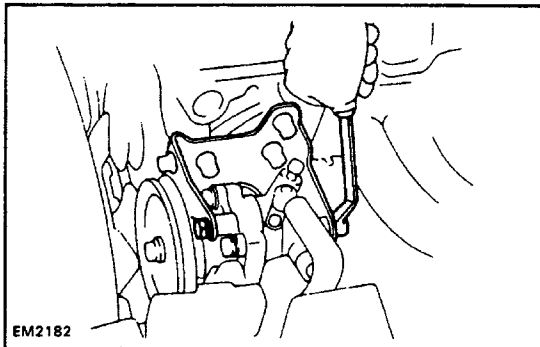

**14. (w/PS)**

**REMOVE PS PUMP FROM BRACKET**

- (a) Remove the drive belt.
- (b) Remove the four bolts.
- (c) Remove the PS pump.

HINT: Lay the PS pump to one side without disconnecting the hoses.

**15. DISCONNECT GROUND STRAP FROM PS PUMP BRACKET**

**16. (with A/C)**

**REMOVE COMPRESSOR FROM BRACKET**

- (a) Loosen the drive belt adjusting bolt and remove the drive belt.
- (6) Remove the compressor on the front side without disconnecting the hoses.

**17. DISCONNECT GROUND STRAPS FROM ENGINE REAR SIDE AND RH SIDE**

**18. (M/T)**


**REMOVE SHIFT LEVER(S) FROM INSIDE OF VEHICLE**

**19. REMOVE REAR PROPELLER SHAFT**

(See PR section)

**20. (2WD A/T)**


**DISCONNECT MANUAL SHIFT LINKAGE FROM PNP SWITCH**

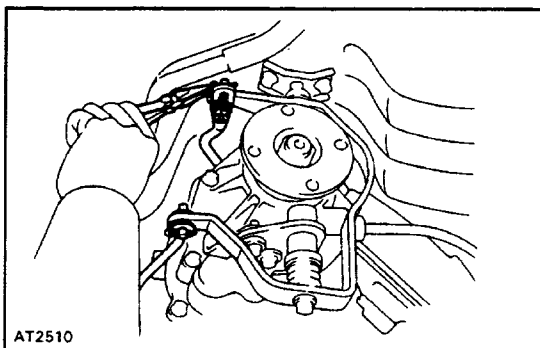

**21. (4WD A/T)**

**DISCONNECT TRANSFER SHIFT LINKAGE**

- (a) Disconnect the No.1 and No.2 transfer shift linkages from the cross shaft.

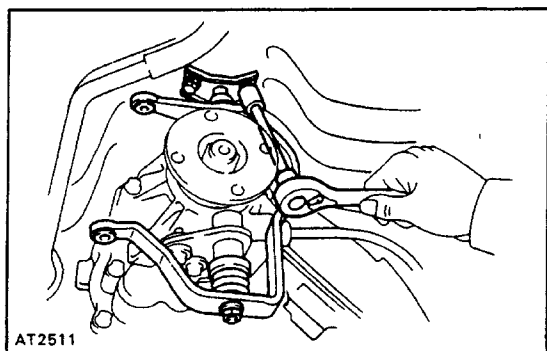

(b) Remove the cross shaft from the body.

## 22. DISCONNECT SPEEDOMETER CABLE

**NOTICE:** Do not lose the felt dust protector and washers.

## 23. (4WD)

**REMOVE TRANSFER UNDER COVER**

## 24. (4WD)


**REMOVE STABILIZER BAR**

## 25. (4WD)

**REMOVE FRONT PROPELLER SHAFT**

(See PR section)

## 26. REMOVE NO.1 FRAME CROSSMEMBER

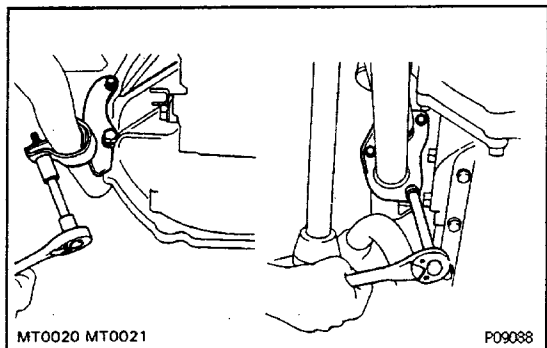


## 27. REMOVE FRONT EXHAUST PIPE

(a) Disconnect the oxygen sensor connector.

(b) Disconnect the exhaust pipe from the exhaust manifold.

(c) Remove the exhaust pipe clamp from the clutch housing.

(d) Remove the exhaust pipe from the catalytic converter.

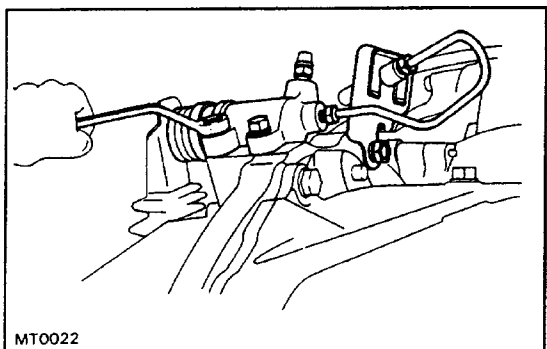


## 28. (M/T)

**REMOVE CLUTCH RELEASE CYLINDER WITH BRACKET FROM TRANSMISSION**

## 29. (4WD)

**REMOVE NO.1 FRONT FLOOR HEAT INSULATOR AND BRAKE TUBE HEAT INSULATOR**

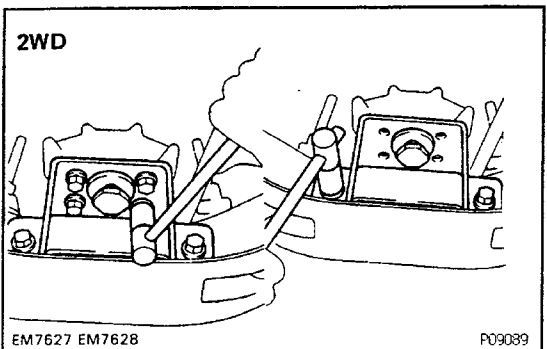


## 30. (2WD)

**REMOVE ENGINE REAR MOUNTING AND BRACKET**

(a) Remove the four bolts from the engine rear mounting.

(b) Raise the transmission slightly by raising the engine with a jack.

(c) Remove the four bolts from the support member.

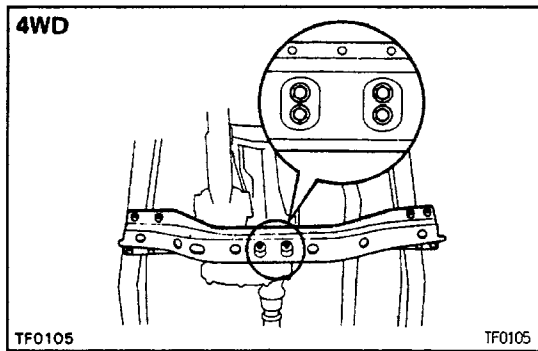**31. (4WD)****REMOVE NO.2 FRAME CROSSMEMBER FROM SIDE FRAME**

- (a) Remove the four bolts from the engine rear mounting.
- (b) Raise the transmission slightly with a jack.
- (c) Remove the four bolts from the side frame and remove the No.2 frame crossmember.

**32. REMOVE ENGINE WITH TRANSMISSION FOR VE-HICLE**

- (a) Attach the engine hoist chain to the lift brackets of the engine.
- (b) Remove the mounting nuts and bolts.
- (c) Lift engine out of the vehicle slowly and carefully.

HINT: Make sure the engine is clear of all wiring and hoses.

**33. REMOVE TRANSMISSION FROM ENGINE**

- (a) (A/T)  
Remove the A/T oil cooler pipes.
- (b) Remove the starter.
- (c) Remove the two stiffener plates and exhaust pipe bracket from engine.
- (d) Remove the transmission from the engine.

**34. (M/T)****REMOVE CLUTCH COVER AND DISC**

E01V8-02

**CYLINDER BLOCK DISASSEMBLY**

(See page [EG1-46](#))

1. REMOVE FLYWHEEL OR DRIVE PLATE
2. REMOVE REAR END PLATE
3. INSTALL ENGINE STAND FOR DISASSEMBLY
4. REMOVE CYLINDER HEAD

(See page [EG1-18](#))


5. REMOVE TIMING CHAIN (See page [EG1-40](#))
6. REMOVE GENERATOR (See CH section)
7. REMOVE LH ENGINE MOUNTING BRACKET AND GENERATOR BRACKET
8. REMOVE CHAIN DAMPERS
9. REMOVE CHAIN TENSIONER
10. REMOVE OIL FILTER

(See step 2 on page [EG1-236](#))


11. REMOVE RH ENGINE MOUNTING BRACKET, CHAMBER STAY AND GROUND STRAP
12. (A/T)

**REMOVE FLEXIBLE HOSE CLAMP**


13. REMOVE OIL PRESSURE SENDER GAUGE OR SWITCH
14. REMOVE KNOCK CONTROL SENSOR
15. REMOVE FUEL-FILTER AND BRACKET

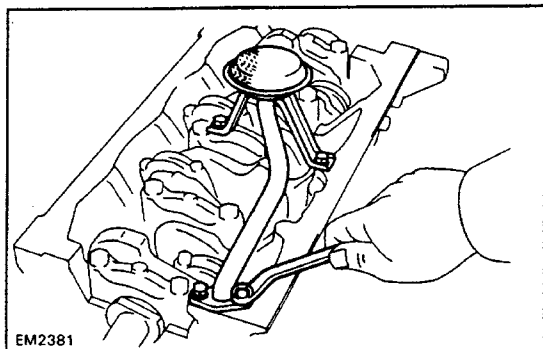**16. REMOVE OIL STRAINER**

Remove the four bolts, strainer and gasket.

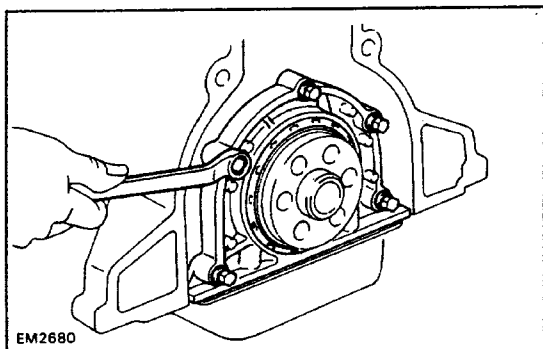**17. REMOVE REAR OIL SEAL RETAINER**

Remove the five bolts, rear oil seal retainer and gasket.

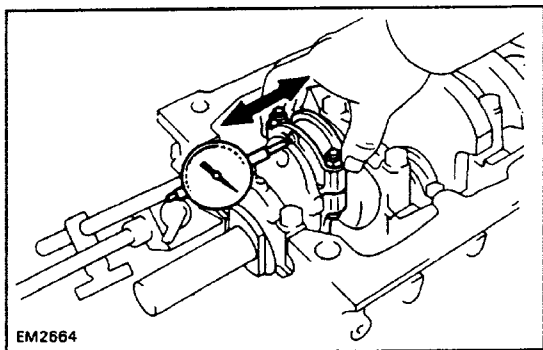**18. MEASURE CONNECTING ROD THRUST CLEARANCE**


Using a dial gauge, measure the thrust clearance.

**Standard clearance: 0.16 – 0.26 mm**

**(0.063 – 0.0102 in.)**


**Maximum clearance: 0.3 mm(0.012 in.)**

If clearance is greater than maximum, replace the connecting rod and/or crankshaft.

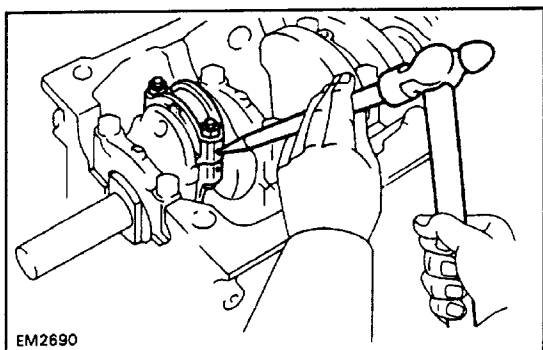**19. MEASURE CONNECTING ROD OIL CLEARANCE**

(a) Using a punch or numbering stamp, mark connecting rods and caps to ensure correct reassembly.

(b) Remove the rod cap nuts.

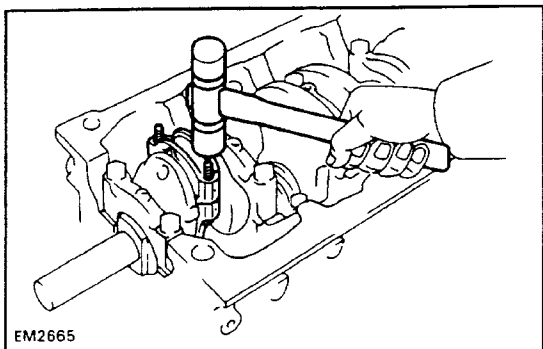


(c) Using a plastic-faced hammer, tap the rod bolts lightly and lift off the rod cap.


**HINT:** Keep the bearing inserted in the cap.

(d) Clean the bearing and crankshaft pins.

(e) Inspect each bearing for pitting and radial scratches. If bearing are damaged, replace the bearings.

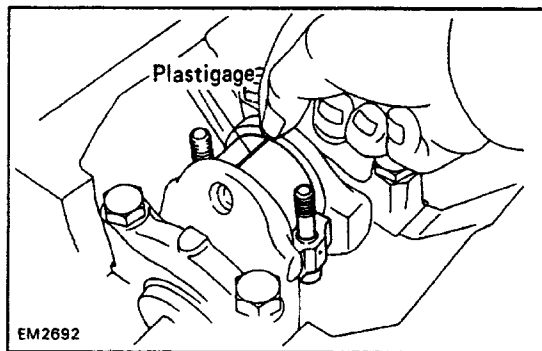

(f) Lay a strip of Plastigage across the crankshaft pin.

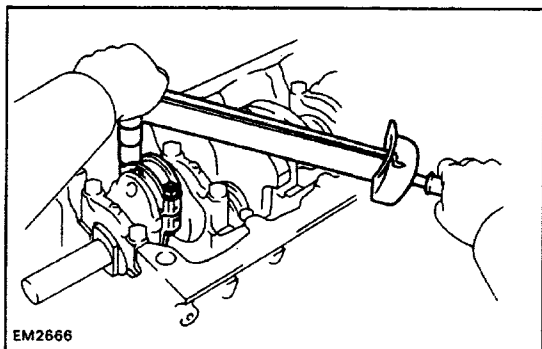


(g) Align the rod and cap marks and fit on the cap. Install and torque the cap nuts.

**Torque: 69 N-m(700 kgf-cm, 51 ft-lbf)**

**HINT:**

- Do not turn the crankshaft.
- Apply a light coat of engine oil on the nut threads and under the nut before installation.

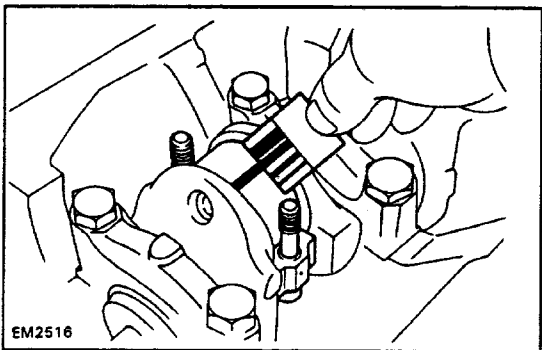

(h) Remove the rod cap.

(i) Measure the Plastigage at its widest point.

**Standard clearance: 0.025 – 0.055 mm**


**(0.0010 – 0.0020 in.)**

**Maximum clearance: 0.10 mm (0.0039 in.)**

If the clearance is greater than maximum, replace the bearings and/or grind the crank pins.

**Undersized bearing: U/S 0.25**


Clean any Plastigage from bearing and crankshaft pin.

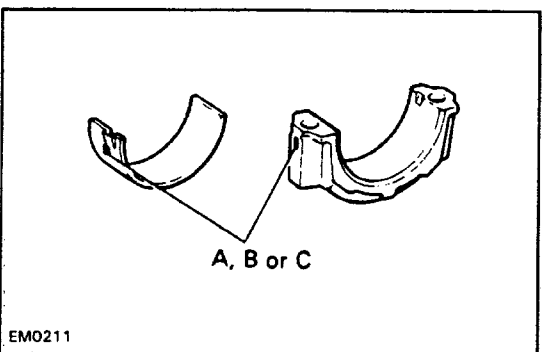

**HINT:** If replacing a standard size bearing, replace with one having the same letter as marked on the bearing cap. There are three sizes of standard bearings supplied, marked A, B or C respectively.


mm (in.)

Size	Big End Inner Diameter	Crank Pin Diameter	Bearing Center Wall Thickness
A	56.000 – 56.006 (2.2047 – 2.2050)	52.988 – 53.000 (2.0861 – 2.0866)	1.484 – 1.488 (0.0584 – 0.0586)
B	56.006 – 56.012 (2.2050 – 2.2052)		1.488 – 1.492 (0.0586 – 0.0587)
C	56.012 – 56.018 (2.2052 – 2.2054)		1.492 – 1.496 (0.0587 – 0.0589)
U/S 0.25	56.000 – 56.018 (2.2047 – 2.2054)	52.701 – 52.711 (2.0748 – 2.0752)	1.626 – 1.636 (0.0640 – 0.0644)

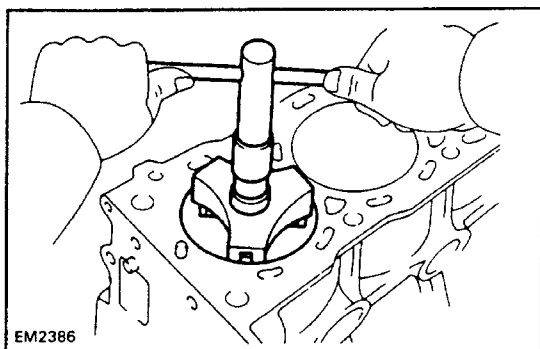


## 20. PUSH OUT PISTON AND CONNECTING ROD ASSEMBLY

(a) Remove all the carbon from top of the bore to the top of the cylinder.

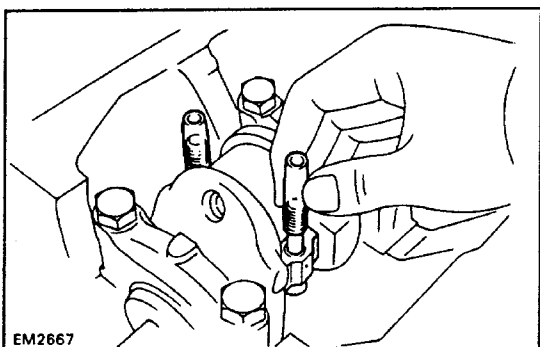


(b) Cover the rod bolts with a short piece of hose to protect the crank pin from damage.

(c) Push the piston and connecting rod assembly out through the top of the cylinder block.

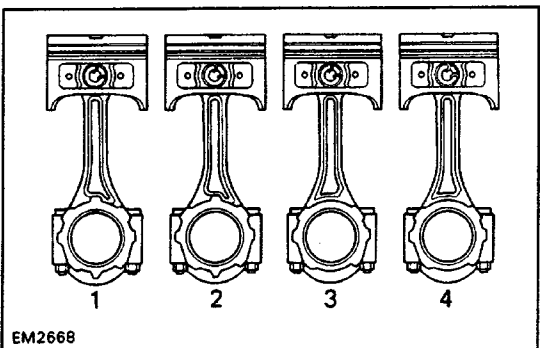

(d) Arrange the piston and connecting rod caps in order.

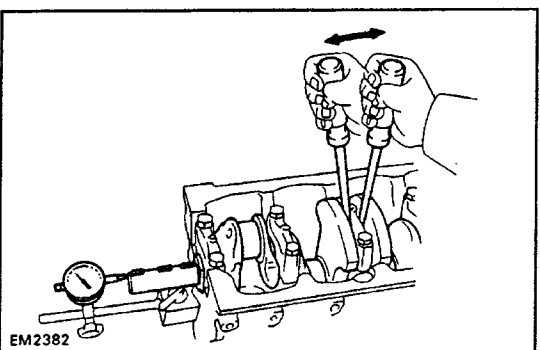

## 21. MEASURE CRANKSHAFT THRUST CLEARANCE

Using a dial gauge, measure the crankshaft thrust clearance while prying the crankshaft back and forth with a screwdriver.

**Standard clearance: 0.02 – 0.22 mm**  
(0.0008 – 0.0087 in.)

**Maximum clearance: 0.3 mm (0.012 in.)**

If the clearance is greater than maximum, replace the thrust washers as a set and/or crankshaft.

**Thrust washer thickness:**

**Standard**


**2.690 – 2.740 mm (0.1059 – 0.1079 in.)**

**0/S 1.25**

**2.753 – 2.803 mm (0.1084 – 0.1104 in.)**


**4/S 2.50**

**2.815 – 2.865 mm (0.1108 – 0.1128 in.)**

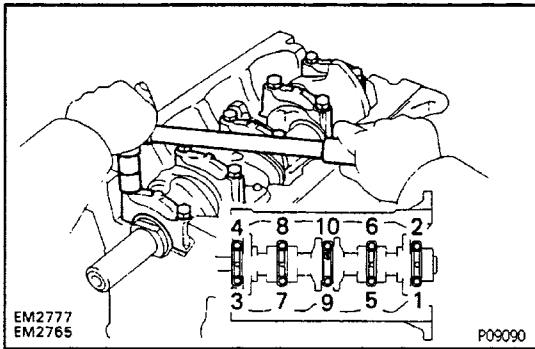

## 22. MEASURE CRANKSHAFT OIL CLEARANCE

(a) Gradually loosen and remove the bearing cap bolts in three passes and in numerical order shown.

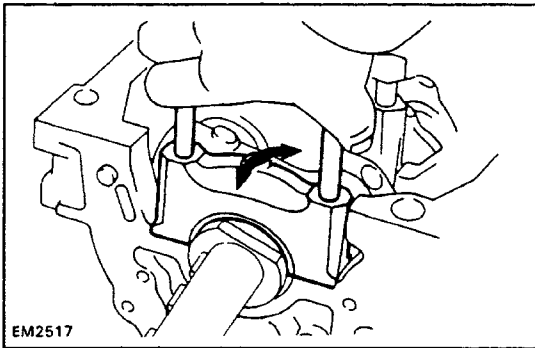

(b) Using the removed bearing cap bolts, pry the bearing cap fore and aft, and remove it with the lower bearing and thrust washers (No.3 journal only).

HINT:

- Keep the lower bearing inserted in the cap.
- Arrange the caps and lower thrust washers in correct order.


(c) Lift off the crankshaft.

HINT: Keep the upper bearings and upper thrust washers (for the No.3 journal only) inserted in the cylinder block.

(d) Clean the journals and bearings.


(e) Check the journals and bearings for pitting and scratches.

If the journal or bearing is damaged, grind or replace the crankshaft and replace the bearing.

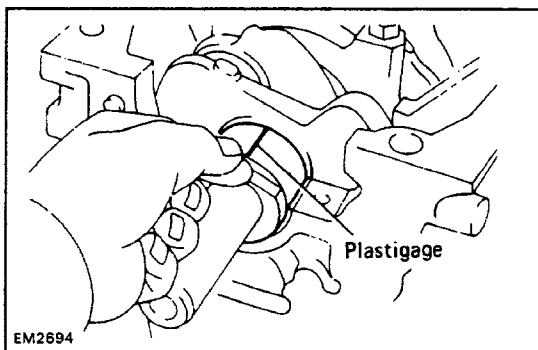

(f) Install the upper main bearings on the cylinder block and crankshaft.

(g) Lay a strip of Plastigage across the main journals.

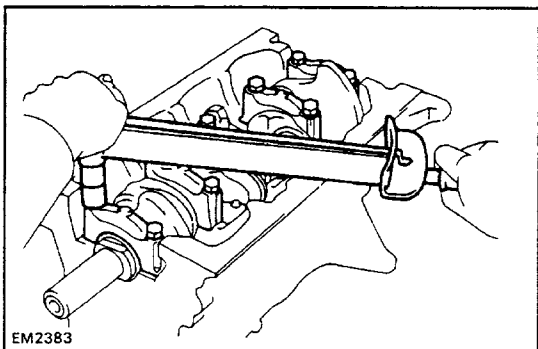

(h) Install the main bearing caps with the front mark facing forward. Install and torque the cap bolts.



**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

HINT:

Do not turn the crankshaft.

Apply a light coat of engine oil on the bolt threads before installation.



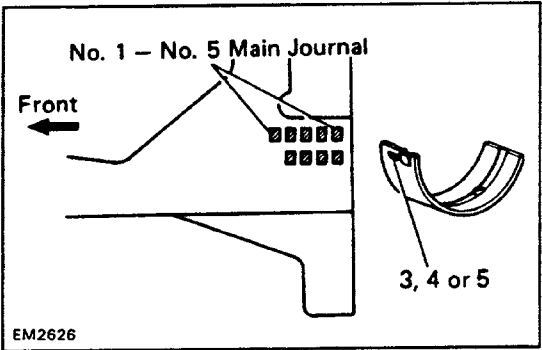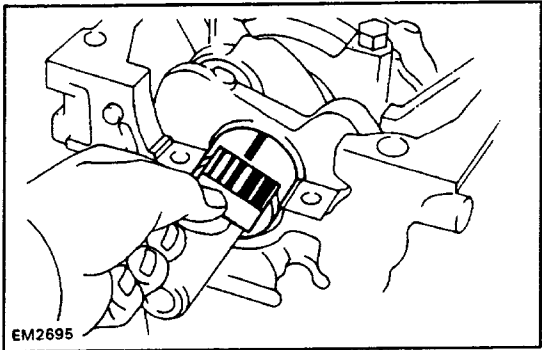

- (i) Remove the main bearing caps.
- (j) Measure the Plastigage at its widest point.

**Standard clearance: 0.025 – 0.055 mm  
(0.0010 – 0.0022 in.)**

**Maximum clearance: 0.08 mm (0.0031 in.)**

If the clearance is greater than maximum, replace the bearings and/or grind the main journals.

**Undersized bearing: U/S 0.25**

- (k) Clean out the pieces of Plastigage from the bearings and journals.

**HINT:** If using a standard bearing, replace with one having the same number as marked on the cylinder block. There are three sizes of standard bearings, marked 3, 4, 5 accordingly.


mm (in.)

Size	Cylinder Block Main Journal Bore	Main Journal Diameter	Bearing Center Wall Thickness
3	64.004 – 64.010 (2.5198 – 2.5201)	59.984 – 60.000 (2.3616 – 2.3622)	1.988 – 1.992 (0.0783 – 0.0784)
4	64.010 – 64.016 (2.5201 – 2.5203)		1.992 – 1.996 (0.0784 – 0.0786)
5	64.016 – 64.022 (2.5203 – 2.5205)		1.996 – 2.000 (0.0786 – 0.0787)
U/S Q.25	64.004 – 64.022 (2.5198 – 2.5205)	59.701 – 59.711 (2.3504 – 2.3508)	2.126 – 2.136 (0.0837 – 0.0841)

V01859

### 23. REMOVE CRANKSHAFT ,

- (a) Lift out the crankshaft.
- (b) Remove the upper main bearings from the cylinder block.
- (c) Arrange the caps and bearings in order.

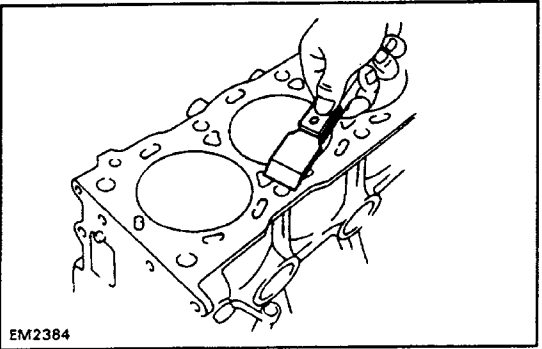

## CYLINDER BLOCK INSPECTION


### 1. REMOVE GASKET MATERIAL

Using a gasket scraper, remove all gasket material from cylinder block surfaces.

### 2. CLEAN CYLINDER BLOCK

Using a soft brush and solvent, clean the block.

EG1VT-01

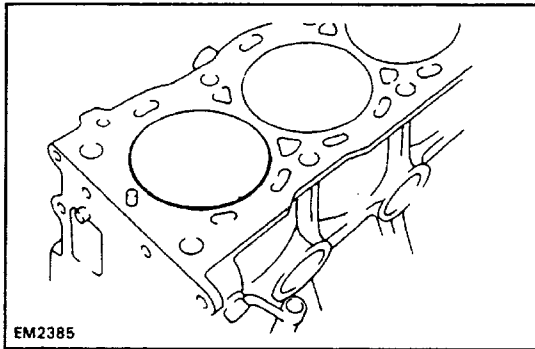


### 3. INSPECT CYLINDERS

Visually inspect cylinders for vertical scratches.

If deep scratches are present, rebore all four cylinders.


(See page [EG1-66](#))

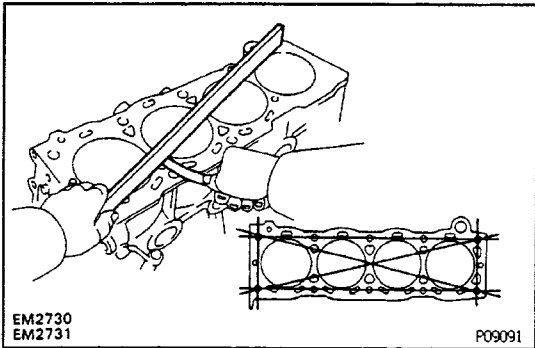

### 4. INSPECT CYLINDER BLOCK WARPAGE

**Warpage limit: 0.5 mm (0.0020 in.)**


If warpage is greater than specified value, replace the cylinder block.

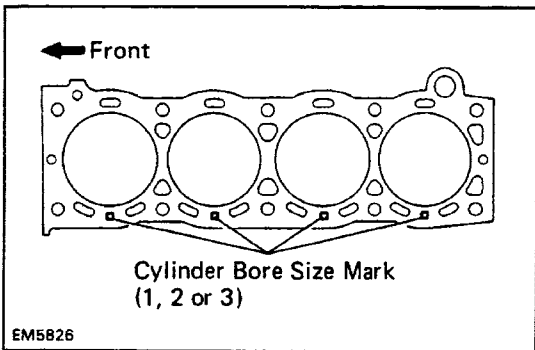

### 5. MEASURE CYLINDER BORE

**HINT:** There are three sizes of the standard cylinder bore diameter, marked "1", "2", and "3", accordingly.

The mark is stamped on the cylinder block.

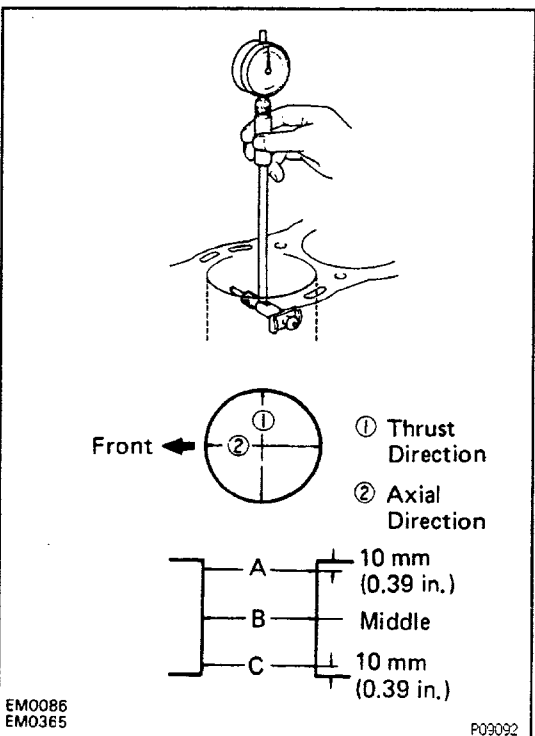

Using a cylinder gauge, measure the cylinder bore diameter at positions A, B and C in the thrust and axial directions.

**Standard diameter:**

**STD Mark '1'**

**92.00 – 92.01 mm**

**(3.6220 – 3.6224 in.)**

**Mark '2'**

**92.01 – 92.02 mm**

**(3.6224 – 3.6228 in.)**

**Mark '3'**

**92.02 – 92.03 mm**

**(3.6228 – 3.6232 in.)**

**O/S 0.50**

**92.50 – 92.53 mm**

**(3.6417 – 3.6429 in.)**


**1.00**

**93.00 – 93.03 mm**


**(3.6614 – 3.6626 in.)**

**Maximum diameter:****STD 92.23 mm (3.6311 in.)****O/S 0.50 92.73 mm (3.6508 in.)****O/S 1.00 93.23 mm (3.6705 in.)**

If the diameter is greater than maximum, rebore all four cylinders, or replace the cylinder block.

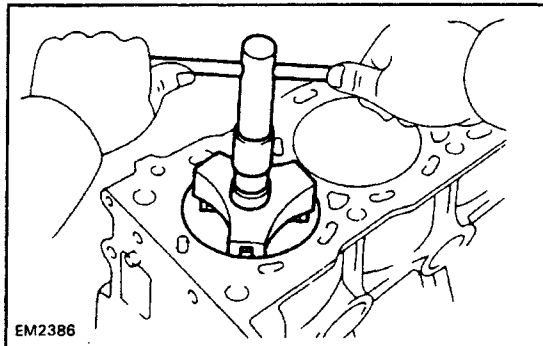**6.REMOVE CYLINDER RIDGE**


If wear is less than 0.2 mm (0.008 in.), use a ridge reamer to machine the top of the cylinder.

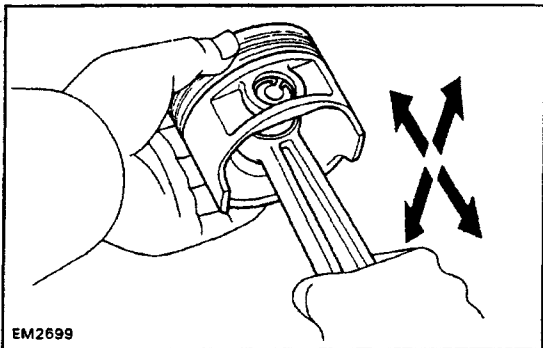**DISASSEMBLY OF PISTON AND CONNECTING ROD ASSEMBLY**


EQ1VU-01

**1. CHECK FIT BETWEEN PISTON AND PIN**

Try to move the piston back and forth on the piston pin. If any movement is felt, replace the piston and pin.

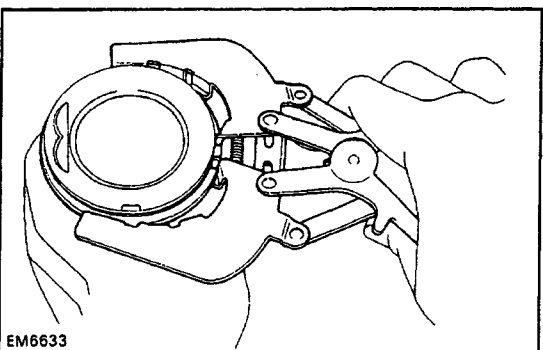
**2. REMOVE PISTON RINGS**

(a) Using a piston ring expander, remove the compression rings.

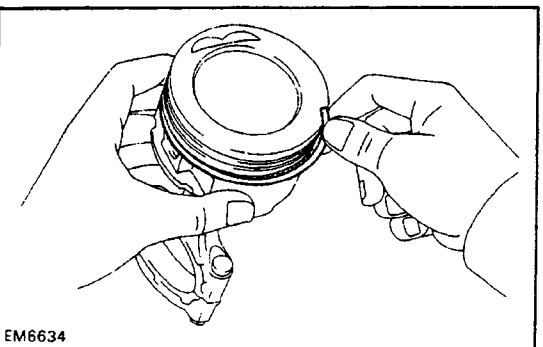


(b) Remove the two side rails and oil ring expander by hand.

HINT: Keep the rings for each cylinder separated.

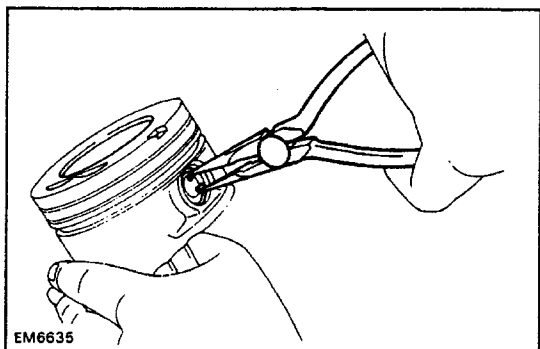


### 3. DISCONNECT CONNECTING ROD FROM PISTON


(a) Using needle – nose pliers, remove the snap rings from the piston.

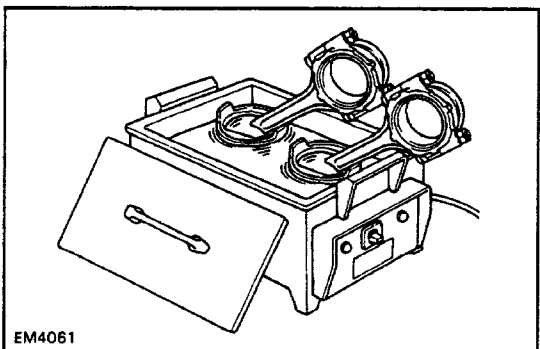

(b) Heat the piston in hot water approx. 60°C(140°F).

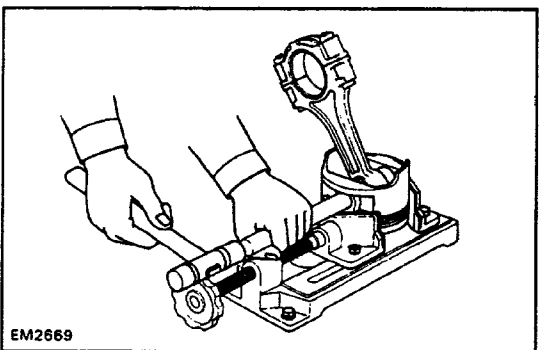


(c) Using a plastic-faced hammer and brass bar, lightly tap out the piston pin from the piston.

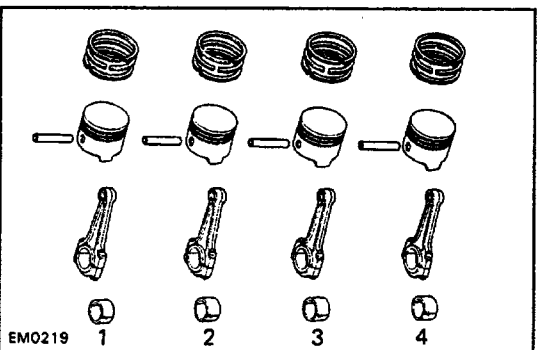

#### HINT:


- The piston and pin are a matched set.
- Keep the piston, pin, rings and connecting rod together for each cylinder.

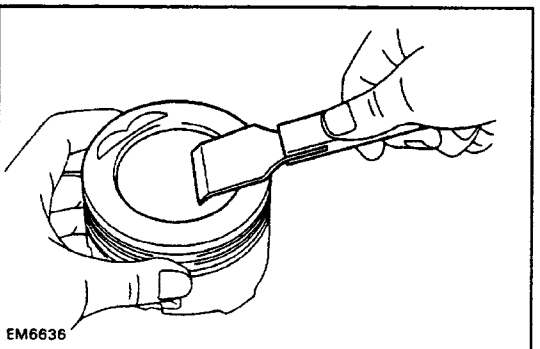


## INSPECTION OF PISTON AND CONNECTING ROD

### 1. CLEAN PISTON

(a) Using a gasket scraper, remove the carbon from the piston top.

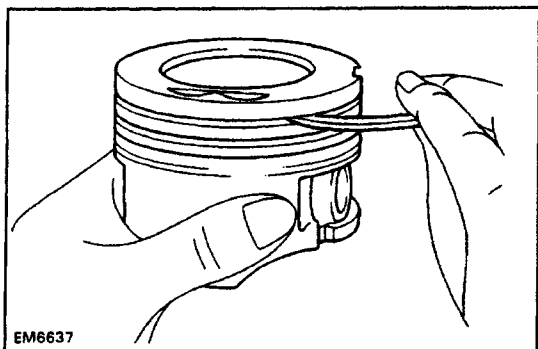


(b) Using a groove cleaning tool or broken ring, clean the ring grooves.

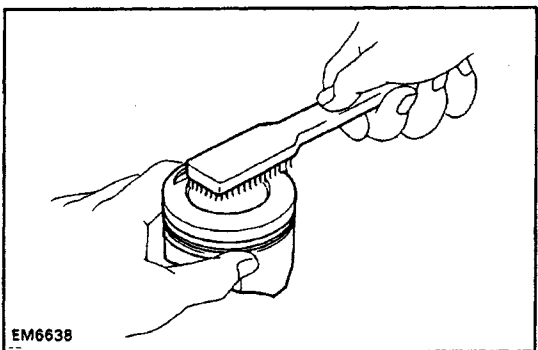


(c) Using solvent and a brush, thoroughly clean the piston.

**NOTICE:** Do not use a wire brush.

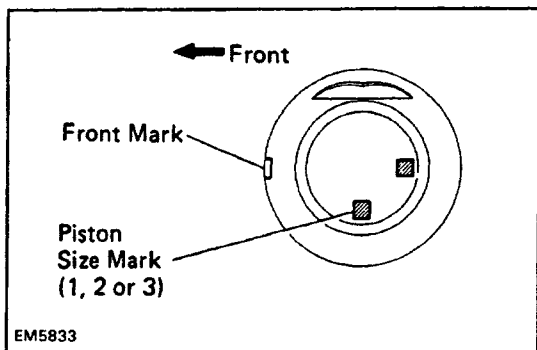


## 2. INSPECT PISTON DIAMETER AND OIL CLEARANCE

HINT: There are three sizes of the standard piston diameter, marked "1", "2", and "3", accordingly. The mark is stamped on the top of the piston.

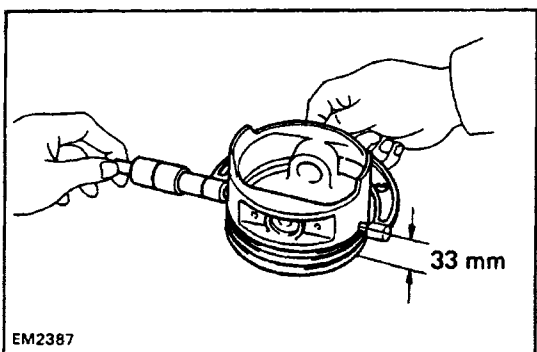

(a) Using a micrometer and with the piston upside down, measure the piston diameter at right angles to the piston pin hole center line, at the indicated distance from the piston head.

**Distance: 33 mm (1.30 in.)**

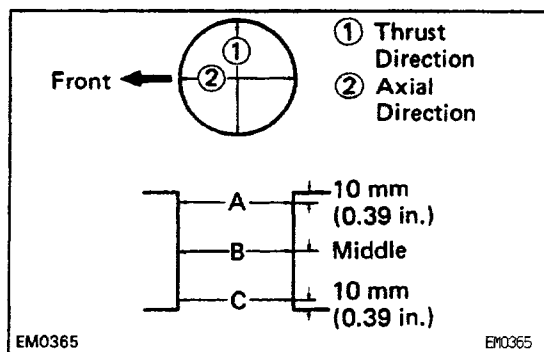**Piston diameter:****STD Mark "****91.975 – 91.985 mm****(3.6211 – 3.6214 in.)****Mark "2'****91.985 – 91.995 mm****(3.6214 – 3.6218 in.)****Mark "3"****91.995 – 92.005 mm****(3.6218 – 3.6222 in.)****O/S 0.50****92.475 – 92.505 mm****(3.6407 – 3.6419 in.)****1.00****92.975 – 93.005 mm****(3.6604 – 3.6616 in.)**


(b) Measure the cylinder bore diameter in thrust directions (See page [EG1-56](#)) and subtract the piston diameter measurement from the cylinder bore diameter measurement.

**Piston clearance: 0.015 – 0.035 mm****(0.0006 – 0.0014 in.)**

If not within specification, replace the pistons. If necessary, rebore or replace the cylinder block.

HINT: (Use cylinder block sub-assembly)


When installing a standard piston, install one with the same mark as the standard bore diameter mark on the cylinder block.

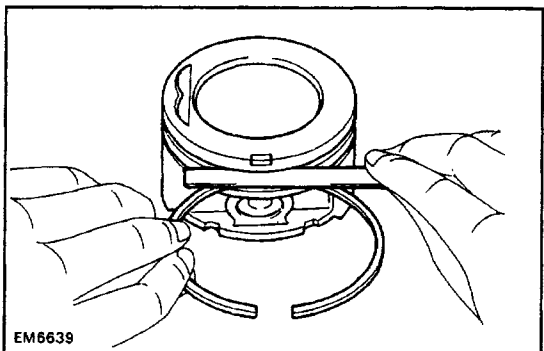**3. MEASURE CLEARANCE BETWEEN PISTON GROOVE AND PISTON RING**

Using a thickness gauge, measure the clearance between the piston ring and the ring land.


**Standard ring groove clearance: 0.03 – 0.07 mm****(0.0012 – 0.0028 in.)****Maximum ring groove clearance: 0.2 mm (0.008 in.)**

If the clearance is greater than maximum, replace the piston ring and/or piston.

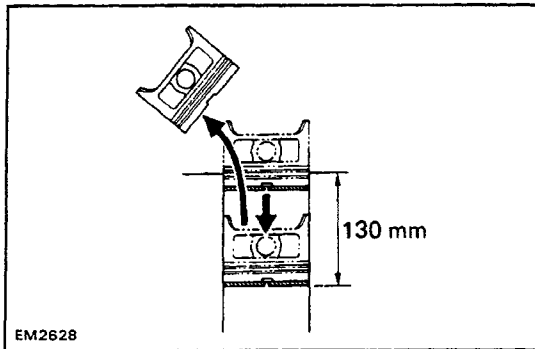

#### 4. MEASURE RING END GAP

- (a) Insert the piston ring into the cylinder.  
 (b) Using a piston, push the ring a little beyond the bottom of the ring travel.  
 (130 mm (5.12 in.) from top surface of cylinder block)

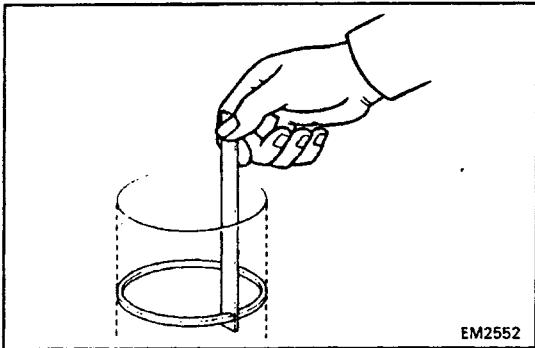

- (c) Using a thickness gauge, measure the end gap.

##### Ring end gap:

**Standard No.1 0.25 – 0.47 mm**

**(0.0098 – 0.0185 in.)**

**No-2 0.60 – 0.82 mm**

**(0.0236 – 0.0323 in.)**

**Oil 0.20 – 0.57 mm**


**(0.0079 – 0.0224 in.)**

**Maximum No.1 1.07 mm (0.0421 in.)**

**No.2 1.42 mm (0.0559 in.)**

**Oil 1.17 mm (0.0461 in.)**


If the gap is greater than maximum, replace the ring.  
 Do not file the ring end.

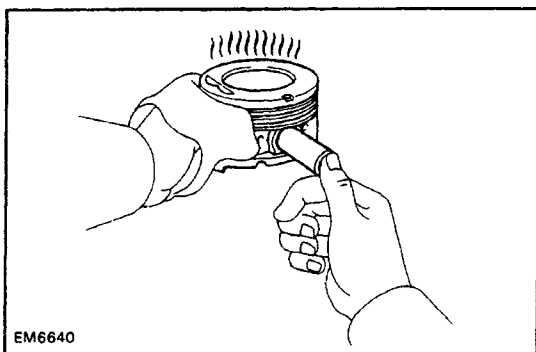

#### 5. INSPECT PISTON PIN FIT

At 80°C (176°F), you should be able to push the pin into the piston with your thumb.

If the pin can be installed at a lower temperature, replace it and the piston.

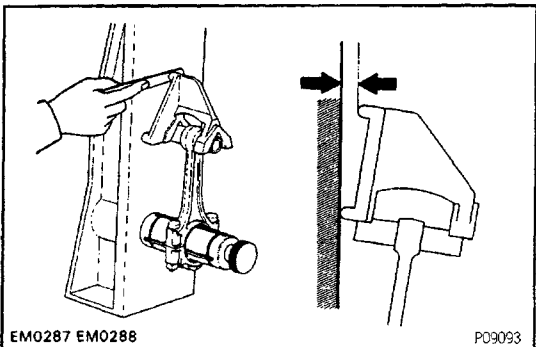

#### 6. INSPECT CONNECTING RODS


- (a) Using a rod aligner, check the connecting rod alignment.

If the rod is bent or twisted, replace the connecting rod.

- Check that the rod is not bent.

##### Maximum bend:


**0.05 mm (0.0020 in.) per 100 mm (3.94 in.)**

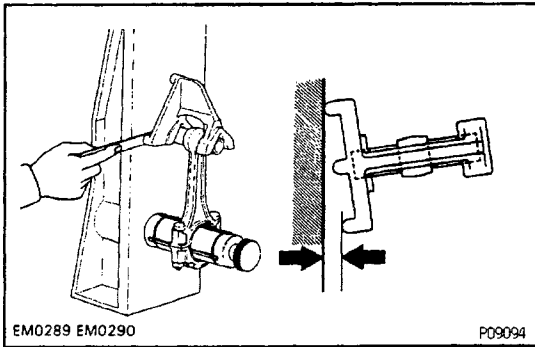

- Check that the rod is not twisted.


**Maximum twist:**

**0.15 mm (0.0059 in.) per 100 mm (3.94 in.)**

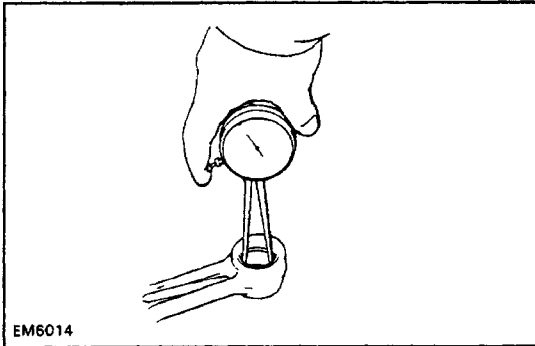

(b) Measure the oil clearance between the rod bushing and piston pin.

- Using an inside dial indicator, measure the inside diameter of the rod bushing.

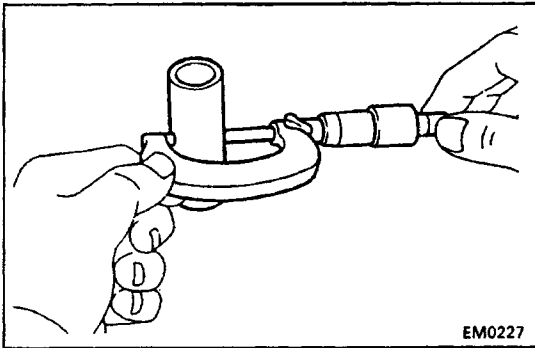


- Using a micrometer, measure the diameter of the piston pin.
- Check that the difference between the measurements is less than the oil clearance limit.

**Standard oil clearance: 0.005 – 0.011 mm  
(0.0002 – 0.0004 in.)**

**Maximum oil clearance: 0.015 mm (0.0006 in.)**

If the clearance is greater than maximum, replace the rod bushing.

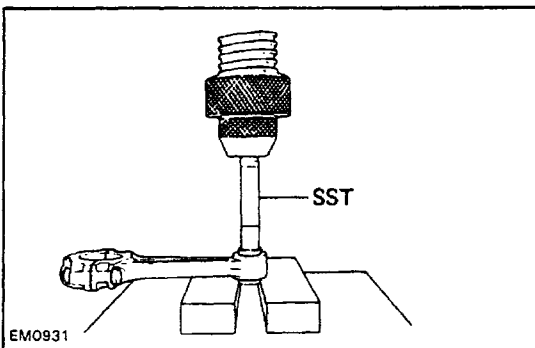


## ROD BUSHING REPLACEMENT

### 1. REMOVE ROD BUSHING

Using SST, remove the rod bushing from the connecting rod.

SST 09222-30010

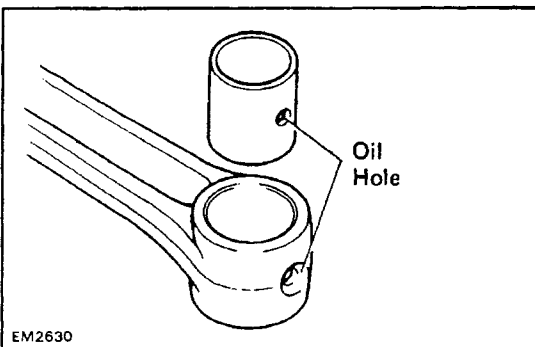


### 2. INSTALL NEW ROD BUSHING

Using SST, install the rod bushing to the connecting rod.

SST 09222 – 30010

**HINT:** Align the bushing oil hole with the connecting rod oil hole.



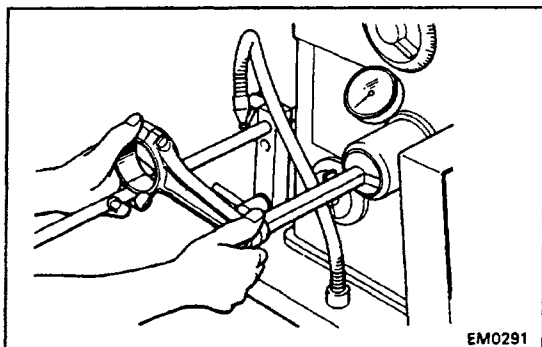


### 3. HONE NEW BUSHING AND CHECK PIN FIT IN CONNECTING ROD

(a) Hone the new bushing and check that the oil clearance is within standard specification.

**Standard oil clearance: 0.005 – 0.011 mm**

**(0.0002 – 0.0004 in.)**

(b) Check the pin fit at the normal room temperature. Coat the pin with engine oil and push the pin into the rod with thumb pressure.

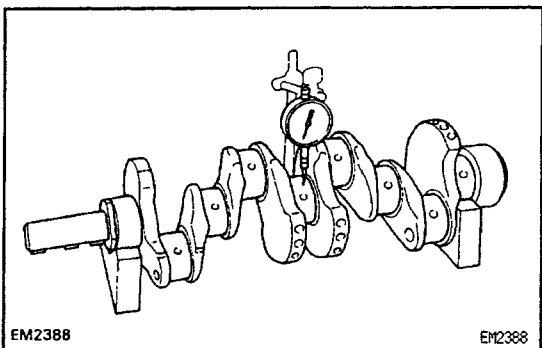

## CRANKSHAFT INSPECTION AND REPAIR

### 1. MEASURE CRANKSHAFT FOR RUNOUT

(a) Place the crankshaft on V-blocks.

(b) Using a dial gauge, measure the runout at the center journal.

**Maximum circle runout: 0.1 mm (0.004 in.)**

If the runout is greater than maximum, replace the crankshaft.

HINT: Use a long spindle on the dial gauge.

### 2. INSPECT MAIN JOURNALS AND CRANK PINS

(a) Using a micrometer, measure the diameter of the main journal and crank pin.



**Main journal diameter: 59.984 – 60.000 mm**

**(2.3616 – 2.3622 in.)**

**Crank pin diameter: 52.988 – 53.000 mm**

**(2.0861 – 2.0866 in.)**

If journals are worn, regrind or replace the crankshaft.

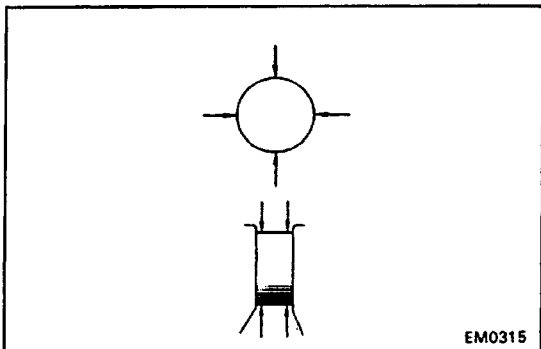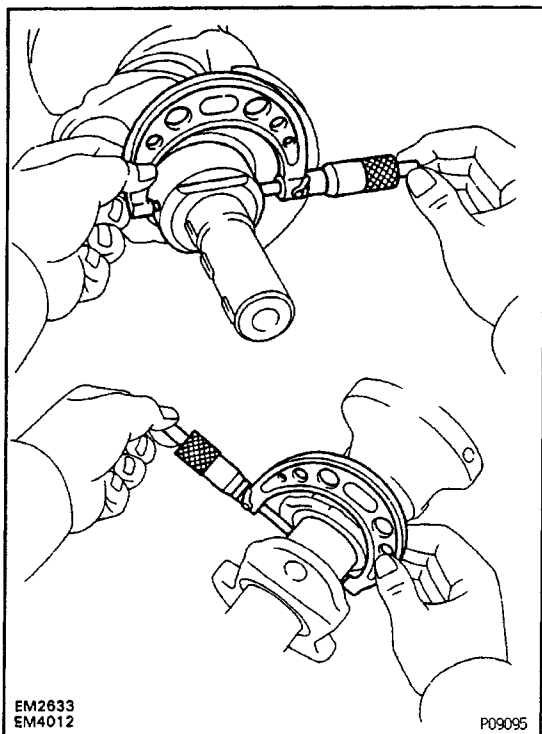

(b) Measure the journals for out-of-round and taper as shown.

**Maximum taper: 0.01 mm (0.0004 in.)**

**Maximum out-of-round: 0.01 mm (0.0004 in.)**

If taper and out-of-round are greater than maximum, regrind and/or replace the crankshaft.

### 3. GRIND CRANK PIN AND/OR MAIN JOURNAL, IF NECESSARY

(a) Grind the crank pins and/or main journals to the undersized finished diameter.

**Bearing size (U/S 0.25)**

**Main journal finished diameter:**

**59.701 – 59.711 mm (2.3504 – 2.3508 in.)**

**Crank pin finished diameter:**


**52.701 – 52.711 mm (2.0748 – 2.0752 in.)**

(b) Install a new pin and/or main undersized bearings.

## OIL SEALS REPLACEMENT


EG1VY-01

HINT: There are two ways of oil seal replacement in accordance with the timing chain cover or rear oil seal retainer condition.

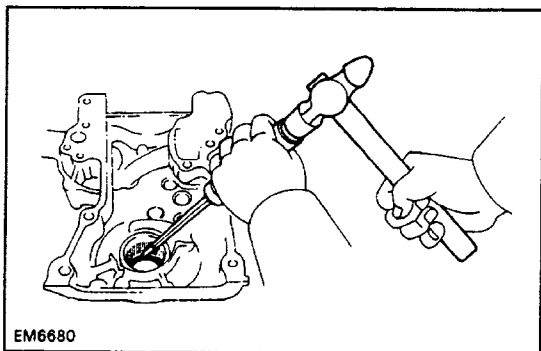

### 1. IF TIMING CHAIN COVER IS REMOVED FROM CYLINDER BLOCK (Replacement of front oil seal)


(a) Using a screwdriver, remove the oil seal.

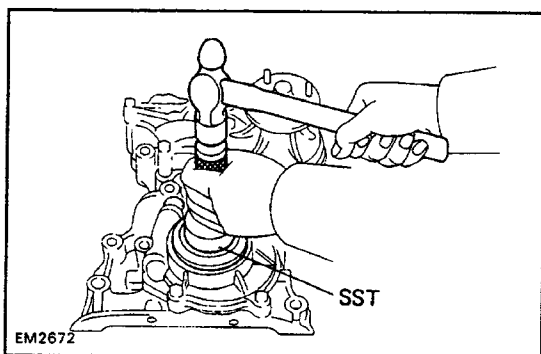

(b) Apply MP grease to a new oil seal lip.

(c) Using SST, install the oil seal.

SST 09223-50010

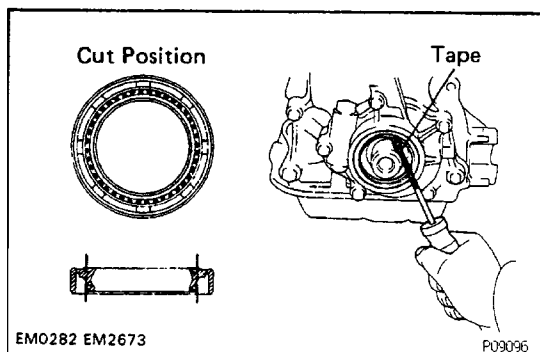


### 2. IF TIMING CHAIN COVER IS INSTALLED ON CYLINDER BLOCK (Replacement of front oil seal)

(a) Using a knife, cut off the oil seal lip.

(b) Using a screwdriver, pry out the oil seal.


**NOTICE: Be careful not to damage the crankshaft. Tape the screwdriver tip.**

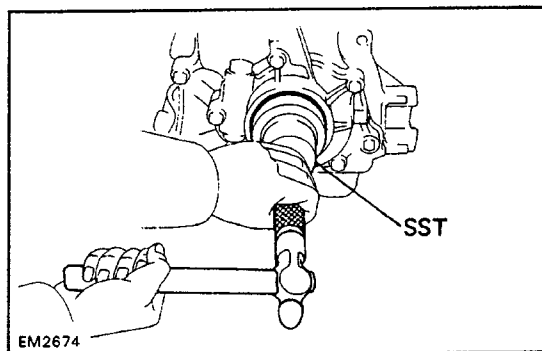

(c) Apply MP grease to a new oil seal lip.


(d) Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge.

SST 09223 – 50010

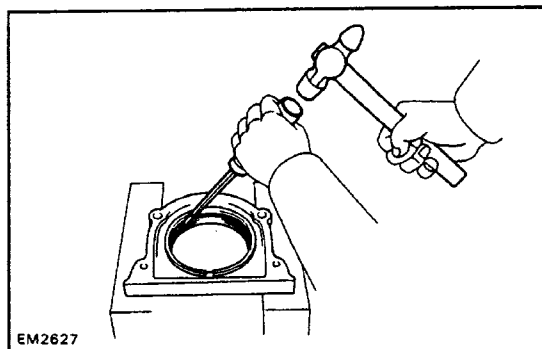

### 3. IF REAR OIL SEAL RETAINER IS REMOVED FROM CYLINDER BLOCK (Replacement of rear oil seal)


(a) Using a screwdriver, remove the oil seal.

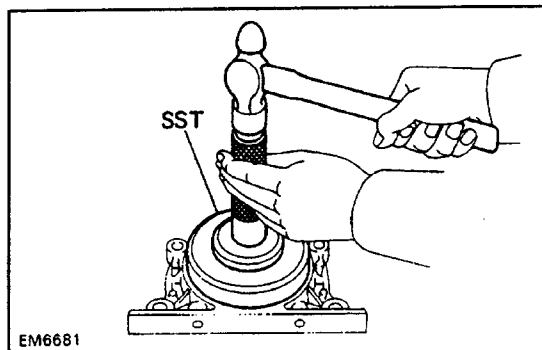

(b) Apply MP grease to a new oil seal lip.

(c) Using SST, install the oil seal.

SST 09223-41020

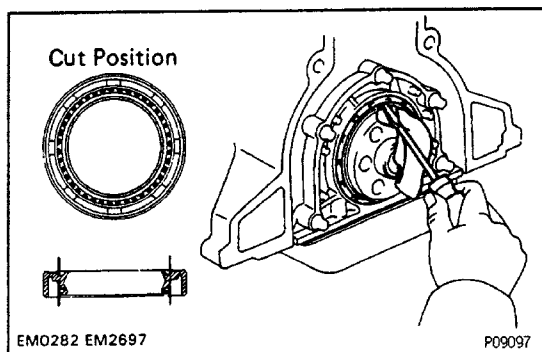


### 4. IF REAR OIL SEAL RETAINER IS INSTALLED ON CYLINDER BLOCK (Replacement of rear oil seal)

(a) Using a knife, cut off lip of oil seal.

(b) Using a screwdriver, pry out the oil seal.

**NOTICE:** Be careful not to damage the crankshaft. Tape the screwdriver tip.

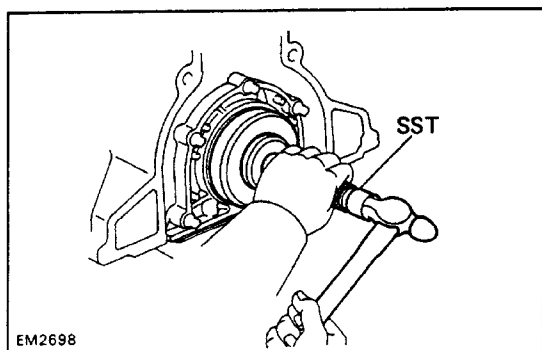


(c) Apply MP grease to a new oil seal lip.

(d) Using SST and a hammer, tap in the oil seal until its surface is flush with the rear oil seal retainer edge.

SST 09223-41020

Size	Outside Diameter mm (0 n. )
O/S 0.50	92.475 – 92.505 (3.6407 – 3.6419)
O/S 1.00	92.975 – 93.005 (3.6604 – 3.6616)

V01771

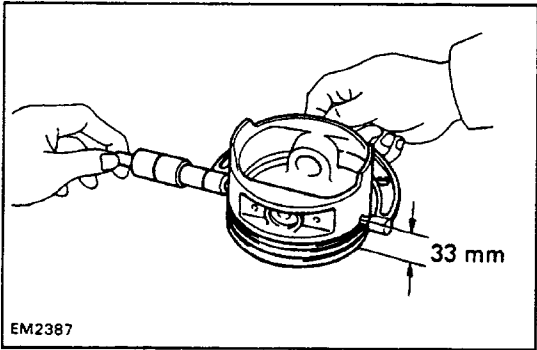

**CYLINDERS BORING**

**1. SELECT OVERSIZED PISTON**

O/S pistons with pins are available in the sizes listed. Replace pistons in matched sets. Take the largest bore measured and select the oversized piston for that bore. Bore all cylinders for the oversized piston selected.

**2. CALCULATE DIMENSION TO BORE CYLINDERS**

(a) Using a micrometer, measure the piston diameter at right angles to the piston pin center line, 33 mm (1.30 in.) from the piston head.

(b) Calculate the size each cylinder is to be rebored as follows:

Size to be rebored = P + C – H

P = piston diameter

C = piston clearance

0.015 – 0.035 mm (0.0006 – 0.0014 in.)


H = allowance for honing

0.02 mm (0.0008 in.) or less

**3. BORE AND HONE CYLINDERS TO CALCULATED DIMENSIONS**

Maximum honing: 0.02 mm (0.0008 in.)

**NOTICE:** Excess honing will destroy the finished roundness.

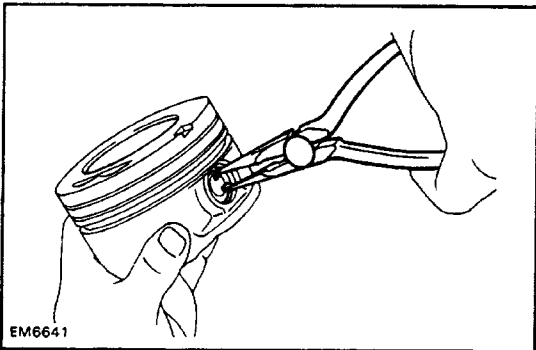


**PISTON AND CONNECTING ROD ASSEMBLY**


EG1W0-01

**1. ASSEMBLE PISTON AND CONNECTING ROD**

(a) Install a new snap ring on one side of the piston pin hole.

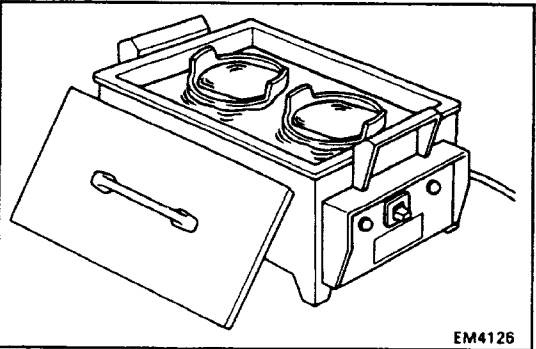


(b) Heat the piston in hot water to approx. 80°C(176°F).

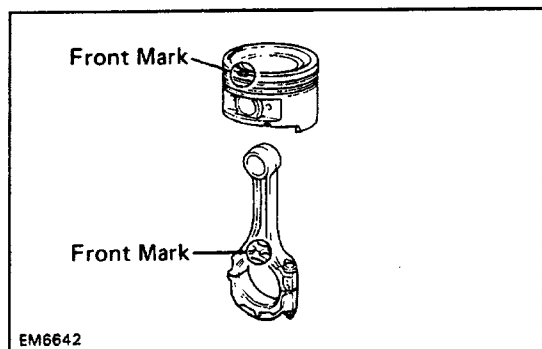


(c) Align the notch on the piston with the mark on the rod and push the piston pin in with your thumb.

(d) Install a new snap ring on the other side of the pin.

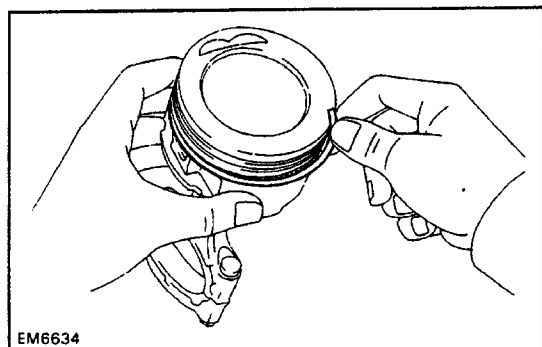


## 2. PLACE RINGS ON PISTON

(a) Install the oil ring expander and two side rails by hand.

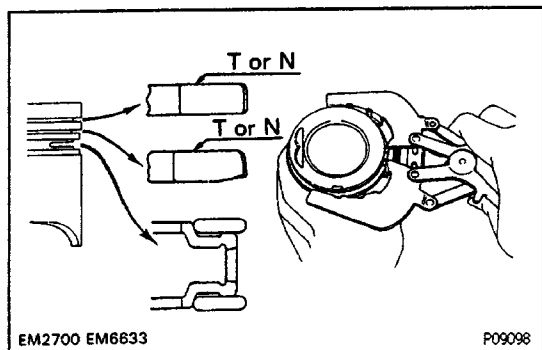


(b) Using a ring expander, install the two compression rings with the code marks facing upward.

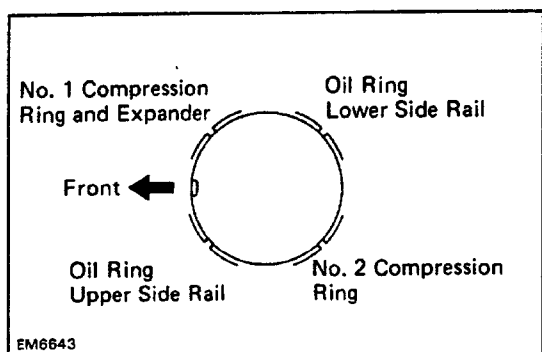

(c) Position the piston rings so that the ring end gaps are as shown.

**NOTICE: Do not align the end gaps.**

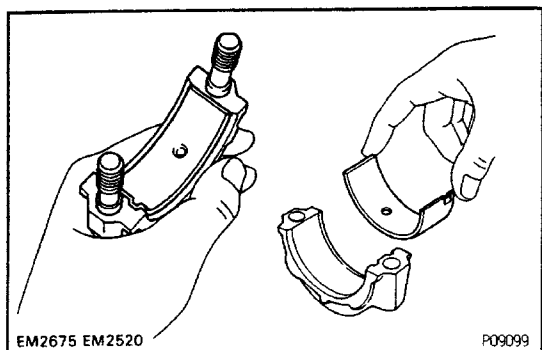

## 3. INSTALL BEARINGS

(a) Install the bearing in the connecting rod and rod cap.

(b) Lubricate the face of the bearings with engine oil.

**NOTICE: Install the bearings with the oil hole in the connecting rod.**

E61W1\_04

## INSTALLATION OF CRANKSHAFT, PISTON AND CONNECTING ROD ASSEMBLY

(See page [EG1-46](#))

### GENERAL ASSEMBLY


#### HINT:

- Thoroughly clean all parts to be assembled.
- Before installing parts, apply new engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-ring and oil seals with new parts.

#### 1. INSTALL MAIN BEARINGS

Install the bearing in the cylinder block and bearing caps.


**NOTICE:** Install the upper bearing with the oil hole in the block.

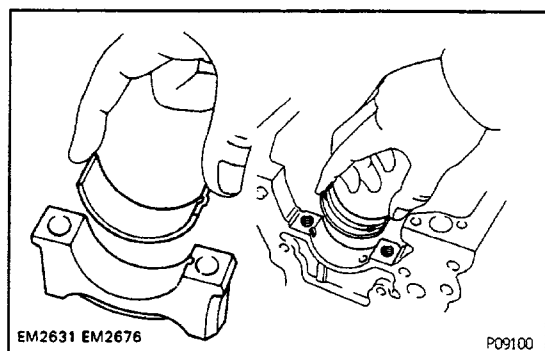

#### 2. INSTALL UPPER THRUST WASHERS

Install the thrust washers under the No.3 main bearing cap position of the block with the oil grooves facing outward.


#### 3. PLACE CRANKSHAFT ON CYLINDER BLOCK

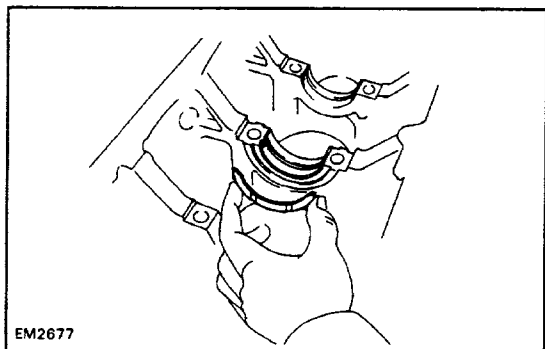


#### 4. INSTALL MAIN BEARING CAPS WITH LOWER THRUST WASHERS


HINT: Each bearing cap is numbered.

(a) Install the thrust washers on the No.3 bearing cap with the grooves facing outward.

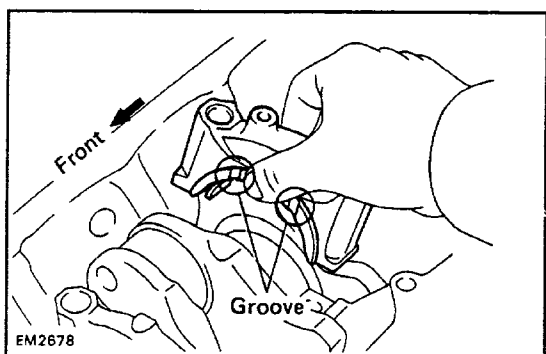

(b) Install the bearing caps in their proper locations.

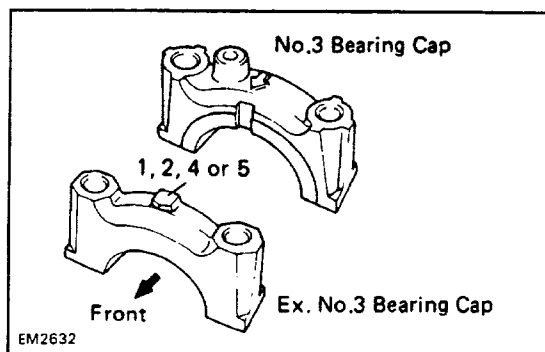

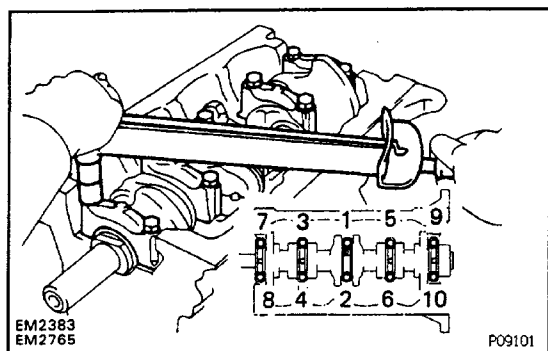

(c) Apply a light coat of engine oil on the threads and under the cap bolt heads.


(d) Install and tighten the cap bolts in two or three passes and in the sequence shown.

**Torque: 103 N-m(1,050 kgf-cm, 76 ft-lbf)**

(e) Check that the crankshaft turns smoothly.


(f) Check the crankshaft thrust clearance.

(See page [EG1-53](#))

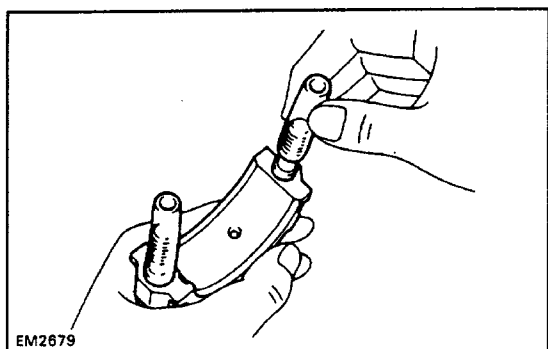

## 5. INSTALL PISTON AND CONNECTING ROD ASSEMBLY


(a) Cover the rod bolts with a short piece of hose to protect the crankshaft from damage.

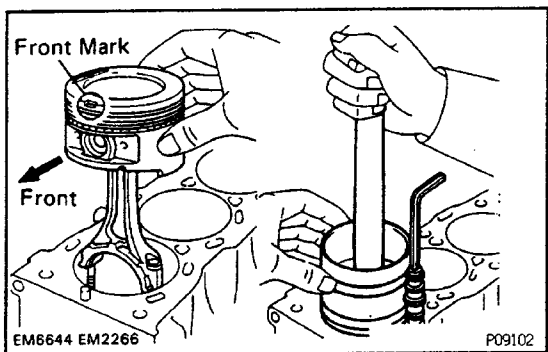

(b) Lubricate the cylinder bore and rod journal with clean engine oil.

(c) Using a ring compressor, tighten the compressor snugly but NOT tightly against the piston and gently tap the correctly numbered piston and rod assembly into its cylinders with a wooden hammer handle or like object. Make sure the notch and mark are facing forward.


**HINT:** If the ring compressor is wound too tightly around the piston, the bottom edge of the ring compressor will catch against the beveled surface at the top of the cylinder when tapping the piston in.

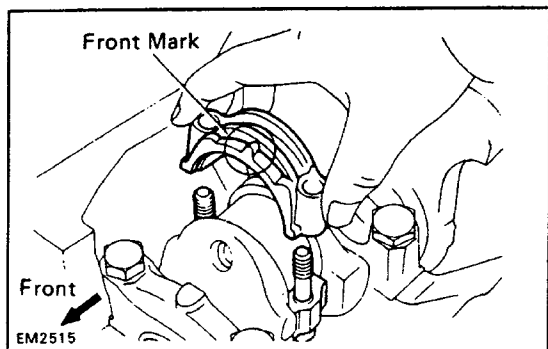

## 6. INSTALL CONNECTING ROD CAPS

(a) Match the numbered cap with the numbered rod.

(b) Install the cap with the front mark facing forward.

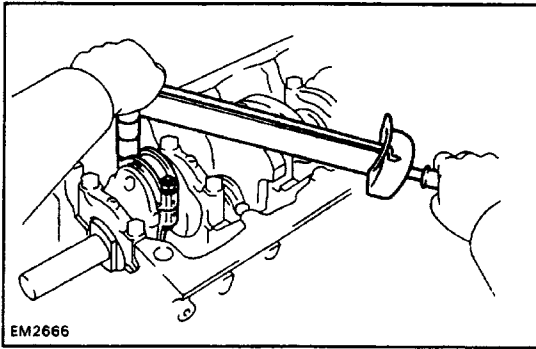

(c) Apply a light coat of engine oil on the threads and under the rod nuts.


(d) Install and tighten the rod nuts alternately and in two or three passes.

**Torque: 69 N-m (700 kgf-cm, 51 ft-lbf)**

(e) Check that the crankshaft turns smoothly.

(f) Check the rod thrust clearance.

(See page [EG1-51](#))

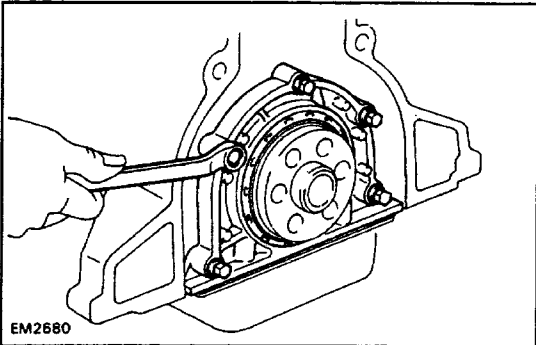

## CYLINDER BLOCK ASSEMBLY


EG1W2-01

(See page [EG1-46](#))

### 1. INSTALL REAR OIL SEAL RETAINER

Install a new gasket and the retainer with the four bolts. Torque the bolts.

**Torque: 18 N-m (180 kgf-cm, 13 ft-lbf)**

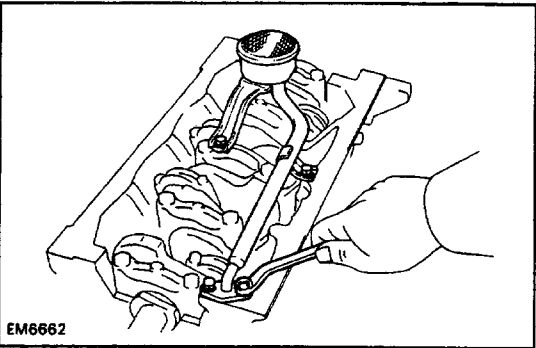

### 2. INSTALL OIL STRAINER

(a) Clean the oil strainer.

(b) Place the gasket in place and install the oil strainer assembly with the four bolts. Torque the bolts.

**Torque: 13 N-m (130 kgf-cm, 9 ft-lbf)**

### 3. INSTALL FUEL FILTER BRACKET AND FILTER

### 4. INSTALL KNOCK CONTROL SENSOR

### 5. INSTALL OIL PRESSURE SENDER GAUGE

### 6. (A/T)

### INSTALL FLEXIBLE HOSE CLAMP

### 7. INSTALL RH ENGINE MOUNTING BRACKET, CHAMBER STAY AND GROUND STRAP

### 8. INSTALL OIL FILTER

(See step 2 on page [EG1-236](#))

### 9. INSTALL CHAIN TENSIONER

**Torque: 19 N-m (195 kgf-cm, 14 ft-lbf)**

### 10. INSTALL CHAIN DAMPERS

**Torque: 22 N-m (220 kgf-cm, 16 ft-lbf)**

### 11. INSTALL GENERATOR BRACKET AND LH ENGINE MOUNTING BRACKET

### 12. INSTALL TIMING CHAIN (See page [EG1-43](#))

### 13. INSTALL GENERATOR

### 14. INSTALL CYLINDER HEAD (See page [EG1-34](#))

### 15. REMOVE ENGINE STAND

### 16. INSTALL REAR END PLATE

### 17. INSTALL FLYWHEEL OR DRIVE PLATE

Install the flywheel (M / T) or spacer, drive plate, spacer (A/T) on the crankshaft with the six bolts.

Torque the bolts.



**Torque: M/T 108 N-m (1,100 kgf-cm, 80 ft-lbf)**  
**A/T 83 N-m (850 kgf-cm, 61 ft-lbf)**

EG1W3-04

## ENGINE INSTALLATION

### 1. (M/T)

#### INSTALL CLUTCH DISC AND COVER TO FLY-WHEEL

(See CL section)

### 2. CONNECT TRANSMISSION TO ENGINE

### 3. PLACE ENGINE WITH TRANSMISSION IN VEHICLE

(a) Attach the engine hoist chain to the lifting brackets on the engine.

(b) Lower the engine with transmission into the engine compartment.

### 4. (4WD)

#### PLACE JACK UNDER TRANSMISSION

Be sure to put a wooden block between the jack and the transmission pan.

### 5. JACK UP AND PUT TRANSMISSION ONTO MEMBER

### 6. INSTALL ENGINE MOUNTING TO FRAME BRACKET

(a) Align the engine mounting and frame bracket.


(b) Install the engine mounting bolts on each side of the engine.

(c) Remove the hoist chain.

### 7. (2WD)

#### INSTALL ENGINE REAR MOUNTING AND BRACKET

(a) Raise the transmission slightly by raising the engine with a jack and a wooden block under the transmission.

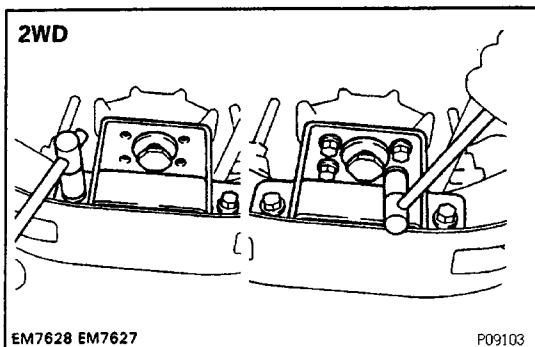


(b) Install the engine rear mounting bracket to the support member. Torque the bolts.

**Torque: 13 N-m (130 kgf-cm, 9 ft-lbf)**

(c) Lower the transmission and rest it on the extension housing.

(d) Install the bracket to the mounting. Torque the bolts.



**Torque: 25 N-m (260 kgf-cm, 19 ft-lbf)**

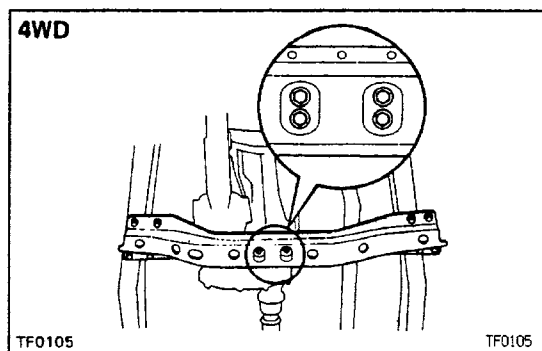**(4WD)****INSTALL NO.2 FRAME CROSSMEMBER**

- (a) Raise the transmission slightly with a jack.
- (b) Install the No.2 frame crossmember to the side frame with the bolts. Torque the bolts


**Torque: 95 N-m (970 kgf-cm, 70 ft-lbf)**

- (c) Lower the transmission and transfer.
- (d) Install the four mounting bolts to the engine rear mounting. Torque the bolts.

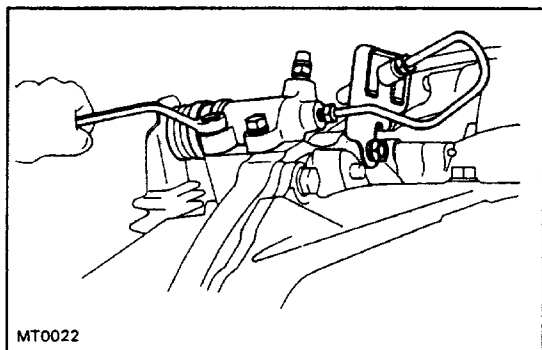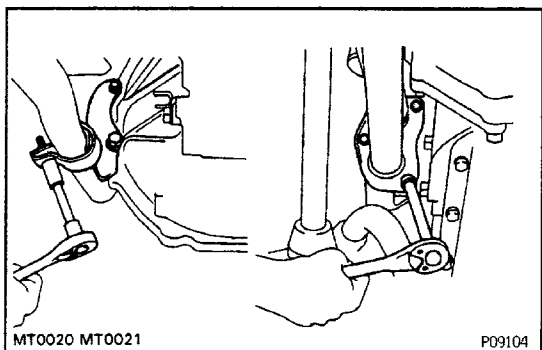
**Torque: 13 N-m (130 kgf-cm, 9 ft-lbf)****8. (4WD)****INSTALL BRAKE TUBE HEAT INSULATOR AND NO. 1 FRONT FLOOR HEAT INSULATOR****9. (M/T)****INSTALL CLUTCH RELEASE CYLINDER WITH BRACKET TO TRANSMISSION****Torque:****Bracket 39 N-m (400 kgf-cm, 28 ft-lbf)****Release cylinder 12 N-m (120 kgf-cm, 9 ft-lbf)****10. INSTALL EXHAUST PIPE**

- (a) Connect the exhaust pipe to the catalytic converter.
- (b) Connect the exhaust pipe to the exhaust manifold.
- (c) Install the exhaust pipe clamp.
- (d) Connect the oxygen sensor connector.


**11. INSTALL NO.1 FRAME CROSSMEMBER****12. (4WD)****INSTALL FRONT PROPELLER SHAFT****(See PR section)****13. (4WD)****INSTALL STABILIZER BAR****(See SA section)****14. (4WD)****INSTALL TRANSFER UNDER COVER****15. CONNECT SPEEDOMETER CABLE**

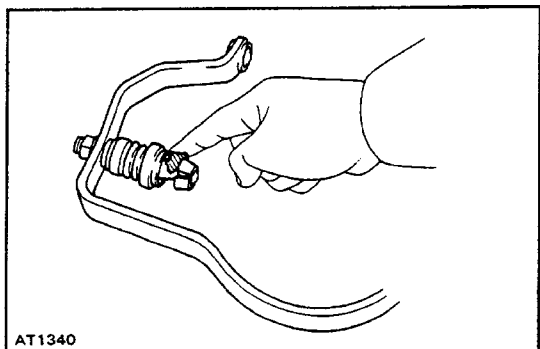**16. (4WD A/T)****CONNECT TRANSFER SHIFT LINKAGE**

(a) Apply MP grease to the cross shaft joint.

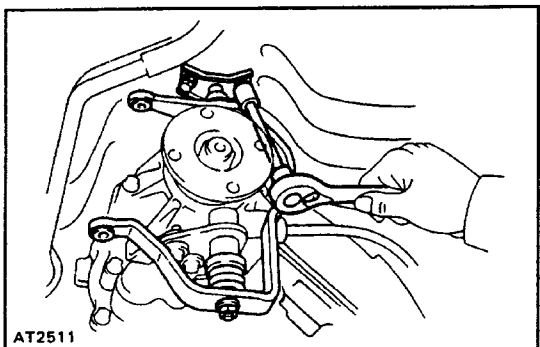


(b) Install the cross shaft to the body.

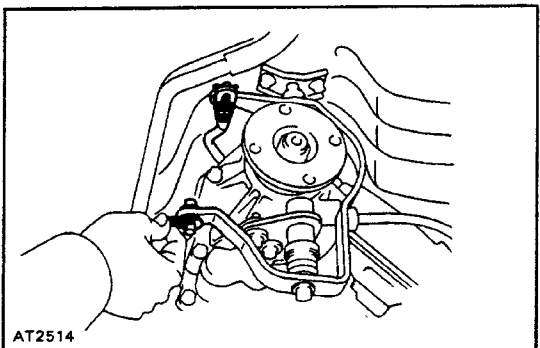

(c) Connect the No.1 and No.2 transfer shift linkage to the cross shaft.

**17. (A/T)****CONNECT MANUAL SHIFT LINKAGE TO PNP SWITCH****18. INSTALL PROPELLER SHAFT**

(See PR section)

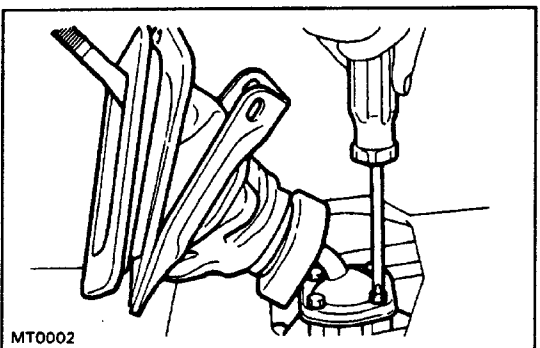**19. (R150)****INSTALL SHIFT LEVER RETAINER****20. (M/T)****INSTALL SHIFT LEVER**

(a) Apply MP grease to the shift lever.

(b) Install the shift lever to the transmission.

**21. CONNECT GROUND STRAPS TO ENGINE REAR SIDE AND RH SIDE****22. (with A/C)****INSTALL COMPRESSOR TO BRACKET**

(a) Install the compressor with the four bolts.

(b) Install the drive belt and adjust the belt tension.


**23. CONNECT GROUND STRAP FOR PS PUMP BRACKET****24. (w/PS)****INSTALL PS PUMP WITH PS PUMP BRACKET**

Install the PS pump with the four bolts.

**25. CONNECT FOLLOWING CABLES:**

(a) (A/T)

Throttle cable

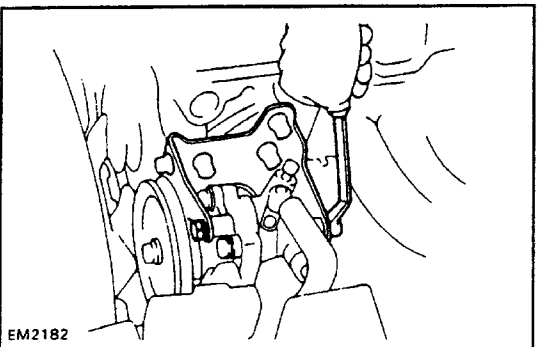

(b) (w/Cruise control)

Cruise control cable

(c) Accelerator cable

**26. CONNECT FOLLOWING HOSES:**

(a) Charcoal canister hose to canister

(b) (w/Cruise control)

Cruise control vacuum hose

(c) Brake booster hose

(d) PS air hoses to gas filter and air pipe

**27. CONNECT FOLLOWING WIRES AND CONNECTORS:**

(a) (with A/C)

A/C compressor connector

(b) Check connector

(c) (M/T)

Starter relay connectors

(d) ECM connectors

(e) Ground strap to engine rear side

(f) Distributor wire

(g) High-tension cords

(h) Generator wires

(i) Igniter connector

(j) Generator connector and wire

(k) Ground strap to LH fender apron

**28. INSTALL FAN PULLEY, BELT GUIDE, FLUID COUPLING AND GENERATOR DRIVE BELT**

(See step 9 on page [EG1-44](#))

**29. (with A/C)**

**INSTALL A/C BELT**

(see step 2 on page [MA-6](#))

**30. INSTALL PS PUMP AND BELT**

(a) Place the PS drive belt onto each pulley.

(b) Stretch the belt tight and tighten the nuts.

(c) Torque the PS pump pulley lock nut.

**Torque: 43 N-m (440 kgf-cm, 32 ft-lbf)**

(d) adjust the belt tension.

(See step 2 on page [MA-6](#))

**31. INSTALL RADIATOR**

**32. INSTALL AIR CLEANER CASE AND INTAKE AIR CONNECTOR**

**33. FILL WITH ENGINE OIL**

(See step 3 on page [EG1-236](#))

**34. FILL WITH COOLANT**

(See step 3 on page [EG1-225](#))

**35. INSTALL ENGINE UNDER COVER**

**36. INSTALL BATTERY**

**37. INSTALL HOOD**

**38. START ENGINE**

Warm up the engine and inspect for leaks.

**39. PERFORM ENGINE ADJUSTMENT**

(See page [EG1-10](#))


**40. ROAD TEST**

Road test the vehicle.

**41. RECHECK COOLANT AND ENGINE OIL LEVEL**

# EXHAUST SYSTEM COMPONENTS

EG1W4-01

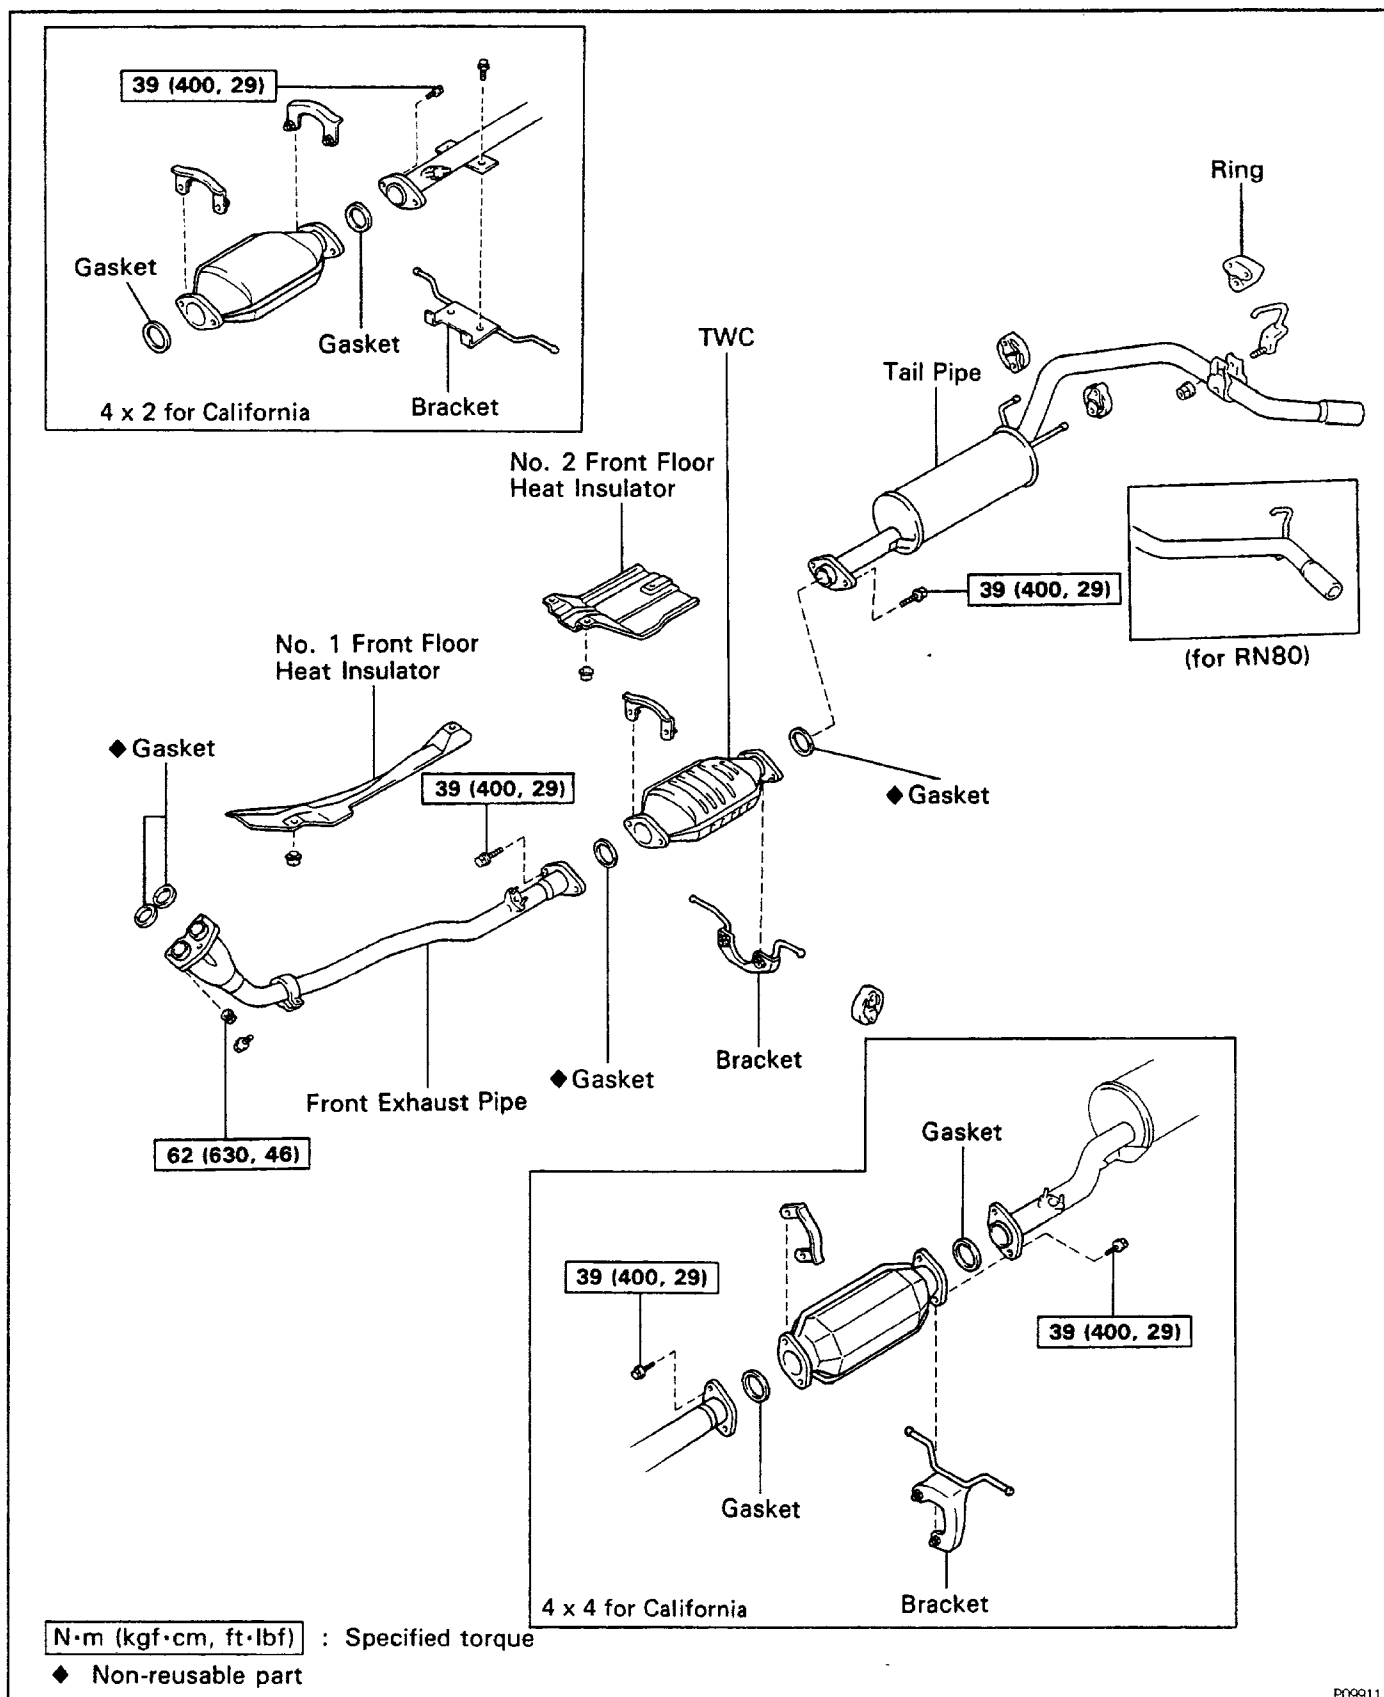

# SERVICE SPECIFICATIONS

E01W5-01

## SERVICE DATA

Compression pressure	STD Limit	1,177 kPa    12.0 kgf/cm <sup>2</sup> 171 psi 981 kPa    10.0 kgf/cm <sup>2</sup> 142 psi 980 kPa (1.0 kgf/cm <sup>2</sup> , 14 psi) or less
	Difference between each cylinder	
Cylinder head	Head surface warpage    Limit Manifold surface warpage    Limit Valve seat Refacing angle    Intake Exhaust Contacting angle Contacting width	0.15 mm    0.0059 in. 0.20 mm    0.0079 in. 30°, 45°, 60° 30°, 45°, 65° 45° 1.2 – 1.6 mm    0.047 – 0.063 in.
Valve guide bushing	Inner diameter    Intake Exhaust Outer diameter    STD O/S 0.05 Replacing temperature (cylinder head side)	8.01 – 8.03 mm    0.3154 – 0.3161 in. 8.01 – 8.03 mm    0.3154 – 0.3161 in. 13.040 – 13.051 mm    0.5134 – 0.5138 in. 13.090 – 13.101 mm    0.5154 – 0.5158 in. Approx. 90°C (194°F)
Valve	Valve overall length    STD    Intake Exhaust Valve face angle Stem diameter    STD    Intake Exhaust Stem end refacing    Limit Stem oil clearance    STD    STD Intake Exhaust Limit Intake Exhaust Valve head edge thickness    STD Limit	113.5 mm    4.468 in. 112.4 mm    4.425 in. 44.5° 7.970 – 7.985 mm    0.3138 – 0.3144 in. 7.965 – 7.980 mm    0.3136 – 0.3142 in. 0.5 mm    0.020 in. 0.025 – 0.06 mm    0.0010 – 0.0024 in. 0.03 – 0.065 mm    0.0012 – 0.0026 in. 0.08 mm    0.0031 in. 0.10 mm    0.0039 in. 1.0 mm    0.039 in. 0.6 mm    0.024 in.
Valve spring	Free length Installed load at 40.5 mm (1.594 in.) STD Limit Squareness    Limit	48.5 mm    1.909 in. 294 N    30.0 kgf    66.1 lbf 279 N    28.5 kgf    62.8 lbf 1.6 mm    0.063 in.
Rocker arm and shaft	Rocker arm inside diameter Rocker shaft diameter Shaft to arm oil clearance    STD Limit	16.000 – 16.018 mm    0.6299 – 0.6306 in. 15.97 – 15.99 mm    0.6287 – 0.6295 in. 0.01 – 0.05 mm    0.0004 – 0.0020 in. 0.08 mm    0.0031 in.
Intake, exhaust manifolds and air intake chamber	Manifold surface warpage Limit Intake Exhaust Air intake chamber	0.2 mm    0.008 in. 0.7 mm    0.028 in. 0.2 mm    0.008 in.
Chain and sprocket	Crankshaft sprocket wear    Limit Camshaft sprocket wear    Limit	59.4 mm    2.339 in. 113.8 mm    4.480 in.

Tension and damper	Tensioner head thickness	Limit	11.0 mm	0.433 in.
	No. 1 damper wear	Limit	0.5 mm	0.020 in.
	No. 2 damper wear	Limit	0.5 mm	0.020 in.
Camshaft	Thrust clearance	STD	0.08 — 0.18 mm	0.0031 — 0.0071 in.
		Limit	0.25 mm	0.0098 in.
	Journal oil clearance	STD	0.01 — 0.05 mm	0.0004 — 0.0020 in.
		Limit	0.1 mm	0.004 in.
	Journal diameter	STD	32.98 — 33.00 mm	1.2984 — 1.2992 in.
	Circle runout	Limit	0.2 mm	0.008 in.
	Cam height	STD	Intake 42.63 — 42.72 mm Exhaust 42.69 — 42.78 mm	1.6783 — 1.6891 in. 1.6807 — 1.6842 in.
		Limit	Intake 42.25 mm Exhaust 42.30 mm	1.6634 in. 1.6654 in.
Cylinder block	Cylinder head surface warpage	Limit	0.05 mm	0.0020 in.
	Cylinder bore STD	No. 1	92.00 — 92.01 mm	3.6220 — 3.6224 in.
		No. 2	92.01 — 92.02 mm	3.6224 — 3.6228 in.
		No. 3	92.02 — 92.03 mm	3.6228 — 3.6232 in.
	Cylinder bore wear	Limit	0.02 mm	0.008 in.
	Cylinder block main journal bore	STD	No. 3 64.004 — 64.010 mm No. 4 64.010 — 64.016 mm No. 5 64.016 — 64.022 mm	2.5198 — 2.5201 in. 2.5201 — 2.5203 in. 2.5203 — 2.5205 in.
		U/S 0.25	64.004 — 64.022 mm	2.5198 — 2.5205 in.
Piston and piston ring	Piston diameter	STD	No. 1 91.975 — 91.985 mm No. 2 91.985 — 91.995 mm No. 3 91.995 — 92.005 mm	3.6211 — 3.6214 in. 3.6214 — 3.6218 in. 3.6218 — 3.6222 in.
		O/S 0.50	92.475 — 92.505 mm	3.6407 — 3.6419 in.
		O/S 1.00	92.975 — 93.005 mm	3.6604 — 3.6616 in.
	Piston to cylinder clearance		0.015 — 0.035 mm	0.0006 — 0.0014 in.
	Ring to ring groove clearance	STD	0.03 — 0.07 mm	0.0012 — 0.0028 in.
		Limit	0.2 mm	0.008 in.
	Piston ring end gap	STD	No. 1 0.25 — 0.47 mm No. 2 0.60 — 0.82 mm Oil 0.20 — 0.57 mm	0.0098 — 0.0185 in. 0.0236 — 0.0323 in. 0.0079 — 0.0224 in.
		Limit	No. 1 1.07 mm No. 2 1.42 mm Oil 1.17 mm	0.0421 in. 0.0559 in. 0.0461 in.
	Piston pin installing temperature		80°C	176°F
Connecting rod and bearing	Thrust clearance	STD	0.16 — 0.26 mm	0.0063 — 0.0102 in.
		Limit	0.3 mm	0.012 in.
	Bearing oil clearance	STD	0.025 — 0.055 mm	0.0010 — 0.0022 in.
		Limit	0.10 mm	0.0039 in.



Connecting rod and bearing (cont'd)	Big end inner diameter	STD A	56.000 – 56.006 mm	2.2047 – 2.2050 in.
		B	56.006 – 56.012 mm	2.2050 – 2.2052 in.
		C	56.012 – 56.018 mm	2.2052 – 2.2054 in.
		U/S 0.25	56.000 – 56.018 mm	2.2047 – 2.2054 in.
	Connecting rod bearing center wall thickness			
		STD A	1.484 – 1.488 mm	0.0584 – 0.0586 in.
		B	1.488 – 1.492 mm	0.0586 – 0.0587 in.
		C	1.492 – 1.496 mm	0.0587 – 0.0589 in.
		U/S 0.25	1.626 – 1.636 mm	0.0640 – 0.0644 in.
	Pin to bushing oil clearance			
		STD	0.005 – 0.011 mm	0.0002 – 0.0004 in.
		Limit	0.015 mm	0.0006 in.
	Rod bend per 100 mm (3.94 in.)			
		Limit	0.05 mm	0.0020 in.
Crankshaft	Rod twist per 100 mm (3.94 in.)			
		Limit	0.15 mm	0.0059 in.
	Thrust clearance	STD	0.02 – 0.22 mm	0.0008 – 0.0087 in.
		Limit	0.3 mm	0.012 in.
	Thrust washer thickness	STD	2.690 – 2.740 mm	0.1059 – 0.1079 in.
		O/S 1.25	2.753 – 2.803 mm	0.1084 – 0.1104 in.
		O/S 2.50	2.815 – 2.865 mm	0.1108 – 0.1128 in.
	Main journal oil clearance	STD	0.025 – 0.055 mm	0.0010 – 0.0022 in.
		Limit	0.08 mm	0.0031 in.
	Main journal diameter	STD	59.984 – 60.000 mm	2.3616 – 2.3622 in.
	Main journal finished diameter			
		U/S 0.25	59.701 – 59.711 mm	2.3504 – 2.3508 in.
	Main bearing center wall thickness			
	STD	No. 3	1.988 – 1.992 mm	0.0783 – 0.0784 in.
		No. 4	1.992 – 1.996 mm	0.0784 – 0.0786 in.
		No. 5	1.996 – 2.000 mm	0.0786 – 0.0787 in.
		U/S 0.25	2.216 – 2.136 mm	0.0837 – 0.0841 in.
	Crank pin diameter	STD	52.988 – 53.000 mm	2.0861 – 2.0866 in.
	Crank pin finished diameter			
	U/S 0.25		52.701 – 52.711 mm	2.0748 – 2.0752 in.
	Circle runout Limit		0.1 mm	0.004 in.
	Main journal taper and out-of-round			
	Limit		0.01 mm	0.0004 in.
	Crank pin journal taper and out-of round			
	Limit		0.01 mm	0.0004 in.

# TORQUE SPECIFICATIONS

Part tightened	N·m	kgf·cm	ft·lbf
Cylinder head x Cylinder head cover	5.9	60	52 in.-lbf
Cylinder head x Camshaft bearing cap	20	200	14
Cylinder head x Spark plug	18	180	13
Cylinder head x Intake manifold	19	195	14
Cylinder head x No. 1 secondary air injection manifold	13	130	9
Cylinder head x EGR valve	13	130	9
Cylinder head x Exhaust manifold	44	450	33
Cylinder head x Cylinder head rear cover	13	130	9
Cylinder block x Cylinder head	78	800	58
Cylinder block x Chain damper	22	220	16
Cylinder block x Chain tensioner	19	195	14
Cylinder block x Engine mounting	39	400	29
Cylinder block x Rear oil seal retainer	18	180	13
Cylinder block x Fuel filter bracket	19	195	14
Oil cooler relief valve x Cylinder block	69	700	51
Cylinder block x Crankshaft bearing cap	103	1,050	76
Cylinder block x Oil strainer	13	130	9
Cylinder block x Oil pan	13	130	9
Cylinder block x Engine mounting bracket	44	400	33
Valve clearance adjusting screw	25	250	18
Camshaft x Distributor drive gear	78	800	58
Crankshaft pulley x No. 2 crankshaft pulley	19	195	14
Air intake chamber x EGR pipe	13	130	9
Air intake chamber x Intake manifold	19	195	14
Air intake chamber x Accelerator control cable bracket	13	130	9
Intake manifold x Water outlet	19	195	14
Intake manifold x PAIR valve	13	130	9
No. 1 secondary air injection manifold x PAIR valve	13	130	9
No. 1 secondary air injection manifold x No. 2 secondary air injection manifold	13	130	9
Exhaust manifold x No. 2 exhaust manifold heat insulator	19	195	14
Exhaust manifold x No. 2 secondary air injection manifold			
10 mm bolt	44	450	33
8 mm bolt	22	220	16
Connecting rod x Connecting rod cap	69	700	51
Crankshaft x Crankshaft pulley	157	1,600	116
Crankshaft x Flywheel	108	1,100	80
Crankshaft x Drive plate	83	850	61
Oil pan x Drain plug	25	250	18

# EMISSION CONTROL SYSTEMS

## SYSTEM PURPOSE


System	Abbreviation	Purpose
Positive crankcase ventilation	PCV	Reduces blow-by gas (HC)
Fuel evaporative emission control	EVAP	Reduces evaporative HC
Exhaust gas recirculation	EG R	Reduces NOx
Pulsed secondary air injection	PAIR	Reduces HC and CO
Three -way catalytic converter	TWC	Reduces HC CO and NOx
Multiport fuel injection *	MFI	Regulates all engine conditions for reduction of exhaust emissions.

Remark: \*For inspection and repair of the MFI system, refer to the MFI section this manual.

## PREPARATION


EG06U-01

### SST (SPECIAL SERVICE TOOLS)

	09843-18024 Diagnosis Check Wire	
---	----------------------------------	--

## RECOMMENDED TOOLS

EG06V-01

	09082-00015 TOYOTA Electrical Tester	
---	--------------------------------------	--

## EQUIPMENT

EG06W-06



Heater	TVV
Thermometer	TVV
Tachometer	
Torque wrench	
Vacuum gauge	

### SSM (SPECIAL SERVICE MATERIALS)



EG06X-06

08833-00070 Adhesive 1324, THREE BOND 1324 or equivalent	TVV
---	-----

# LAYOUT AND SCHEMATIC DRAWING (Federal and Canada)

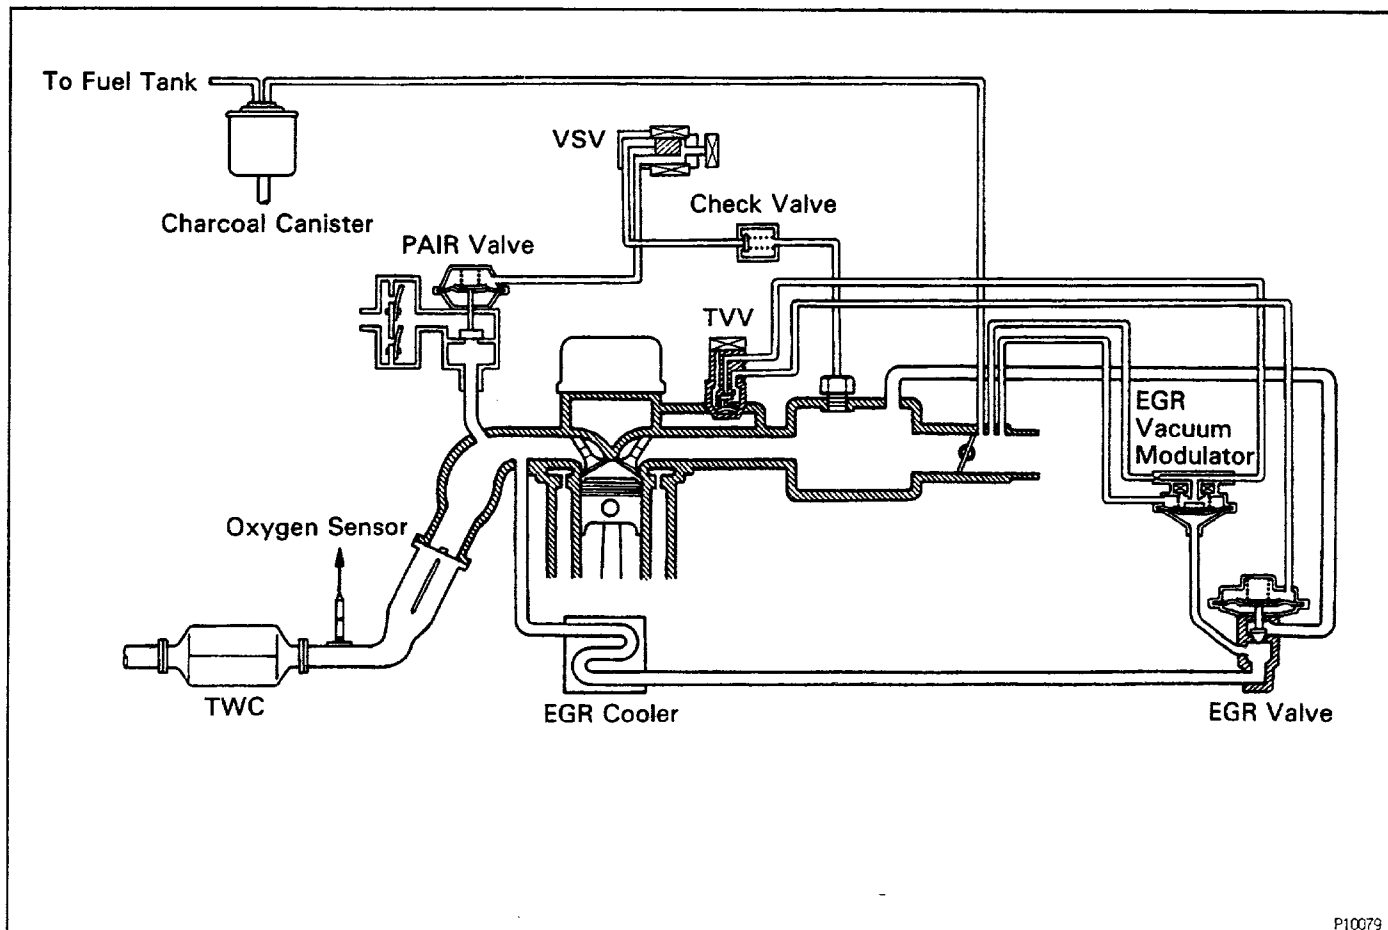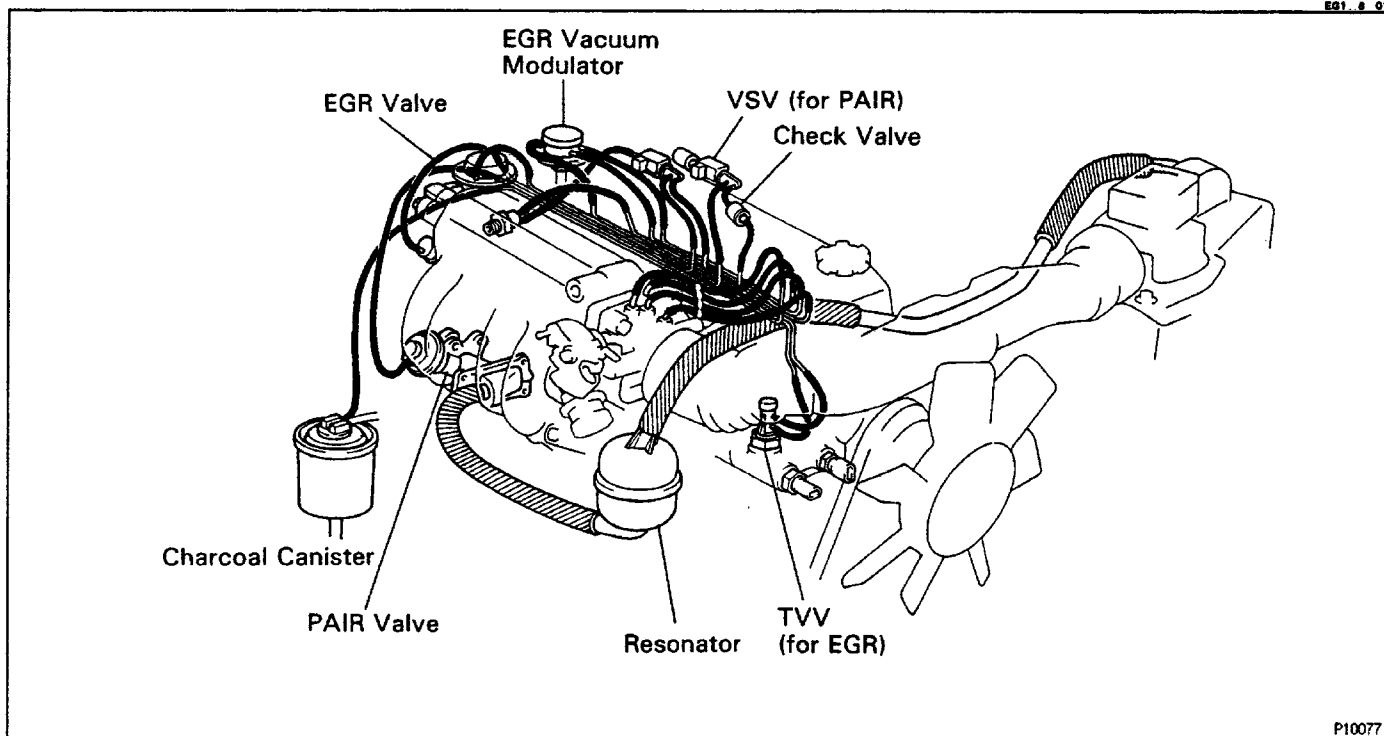


# LAYOUT AND SCHEMATIC DRAWING (Calif.)

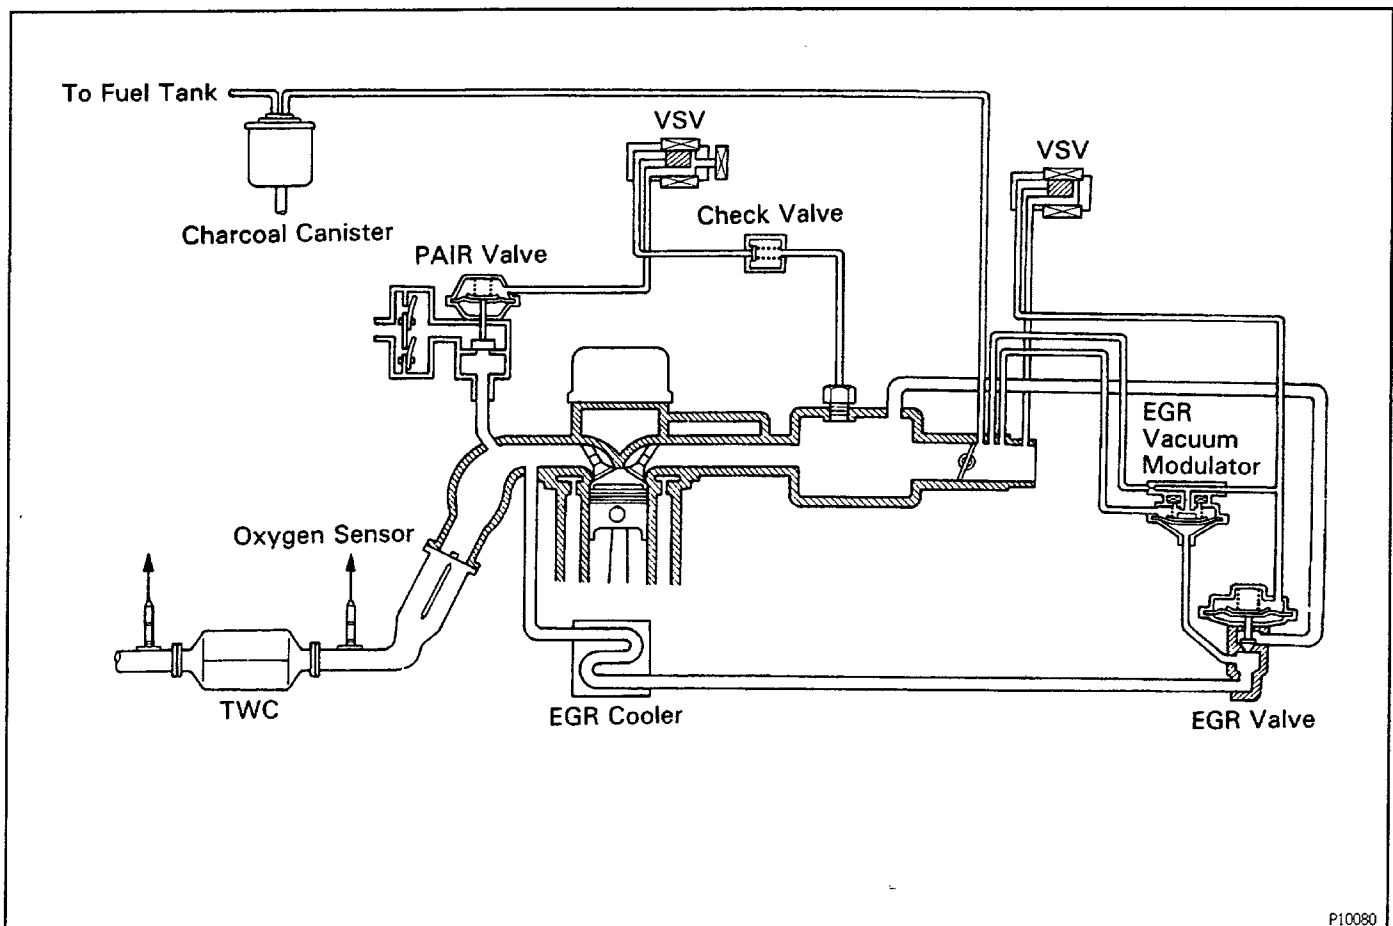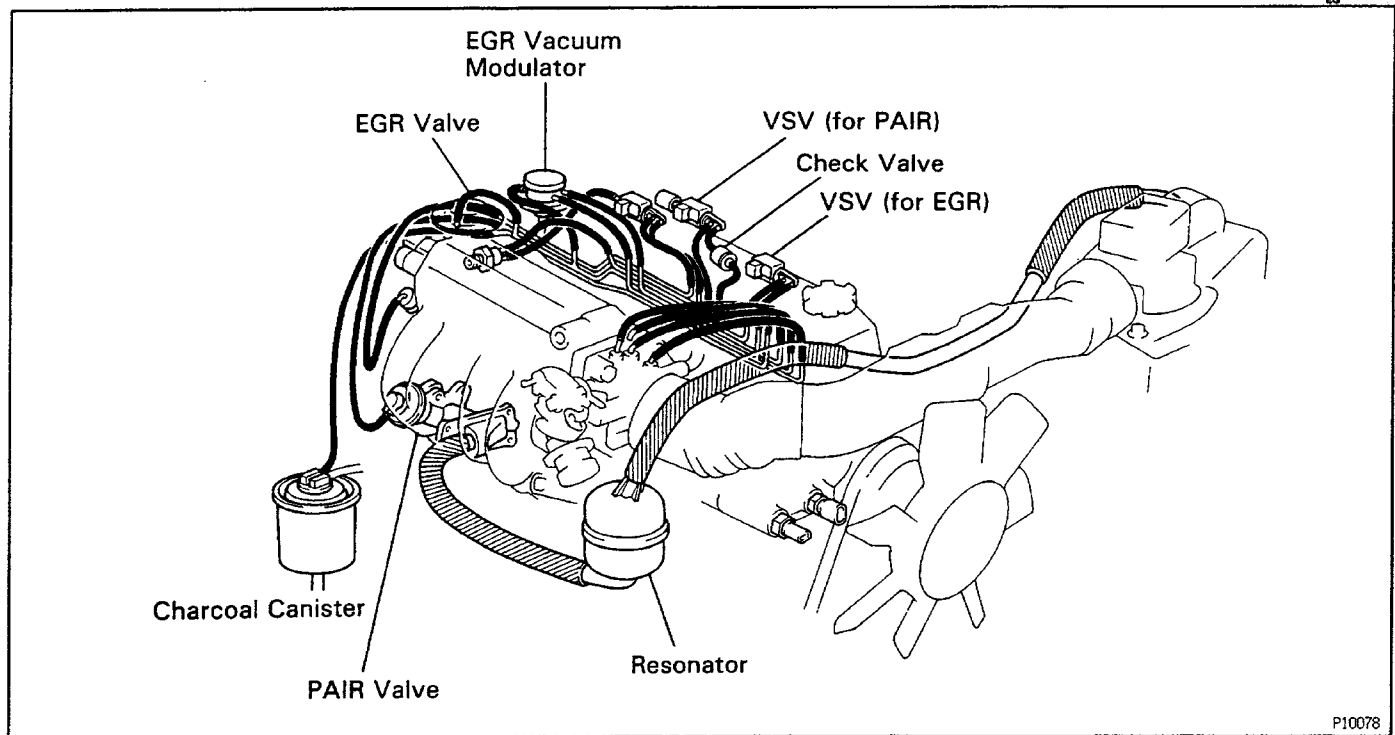

# POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM

EG1WA-01

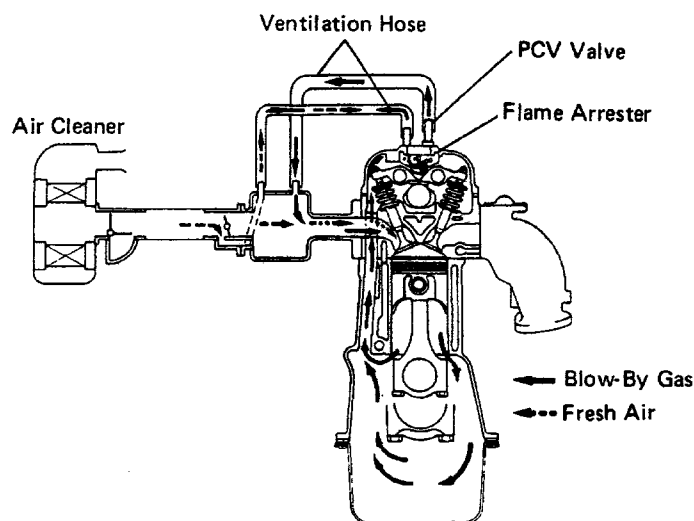


EC2572

To reduce HC emission, crankcase blow-by gas (HC) is routed through the PCV valve to the intake manifold for combustion in the cylinders.

## Engine not Running or Backfiring

Intake Manifold Side

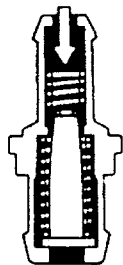


○ PCV VALVE IS CLOSED.

Cylinder Head Side

EC1001


## Normal Operation

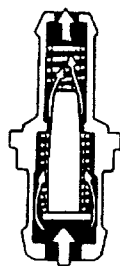

○ PCV VALVE IS OPEN.  
○ VACUUM PASSAGE IS LARGE.

EC1002


## Idling or Decelerating

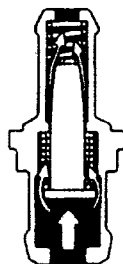

○ PCV VALVE IS OPEN.  
○ VACUUM PASSAGE IS SMALL.

EC1003

## Acceleration or Heavy Load




○ PCV VALVE IS FULLY OPEN.

EC1004

V01772

EG1WB-01

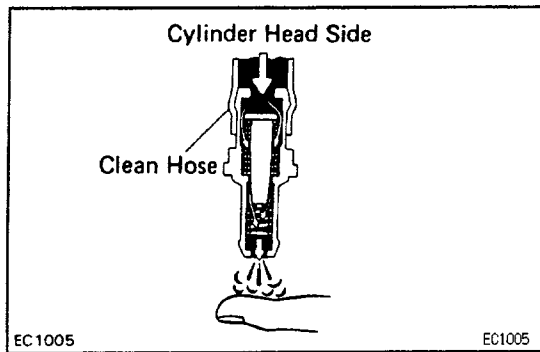


## PCV VALVE INSPECTION

1. REMOVE PCV VALVE
2. ATTACH CLEAN HOSE TO PCV VALVE
3. BLOW AIR FROM CYLINDER HEAD SIDE

Check that air passes through easily.

**NOTICE:** Do not suck air through the valve.


Petroleum substances inside the valve are harmful.

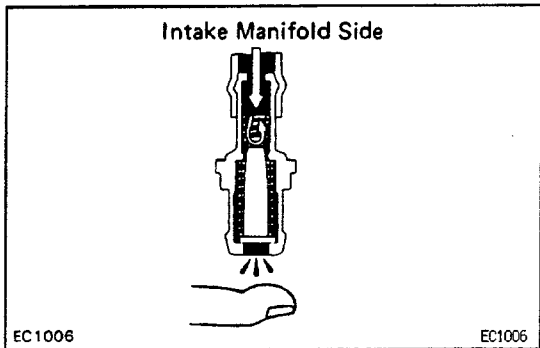

4. BLOW AIR FROM INTAKE MANIFOLD SIDE

Check that air passes through with difficulty. If the PCV valve fails either check, replace it.

5. REINSTALL PCV VALVE

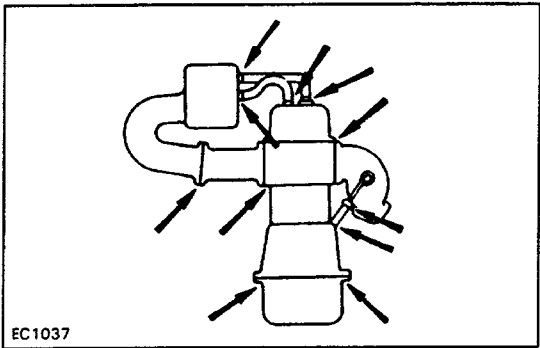

## PCV HOSES AND CONNECTIONS INSPECTION


**VISUALLY INSPECT HOSES, CONNECTIONS AND GASKETS**

Check for cracks, leaks or damage.

EG1WC-01

# EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM


EG1WD-01

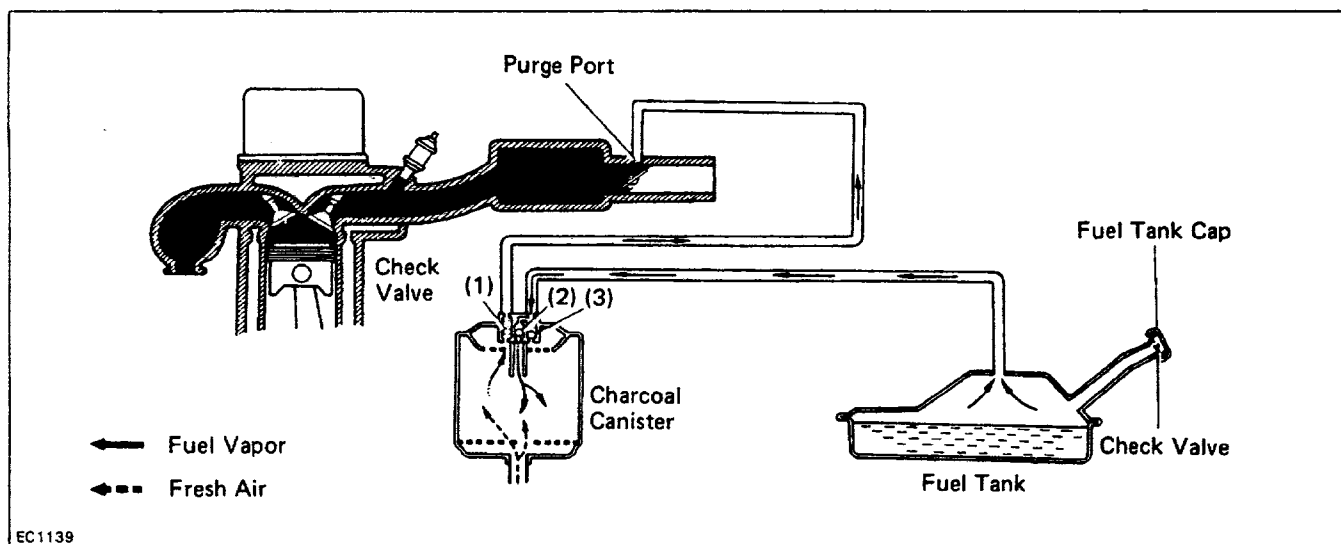

To reduce HC emission, evaporated fuel from the fuel tank is routed through the charcoal canister to the throttle body for combustion in the cylinders.

Throttle Valve Opening	Check Valve in Charcoal Canister			Check Valve in Fuel Tank Cap	Evaporated Fuel (HC)
	(1)	(2)	(3)		
Positioned below purge port	CLOSED	—			HC from tank is absorbed in the canister.
Positioned above purge port	OPEN		—		HC from canister is led into throttle body.
High pressure in tank		OPEN	CLOSED	CLOSED	HC from tank is absorbed in the canister.
High vacuum in tank	—	CLOSED	OPEN	OPEN	(Air is led into the tank.)

V01773

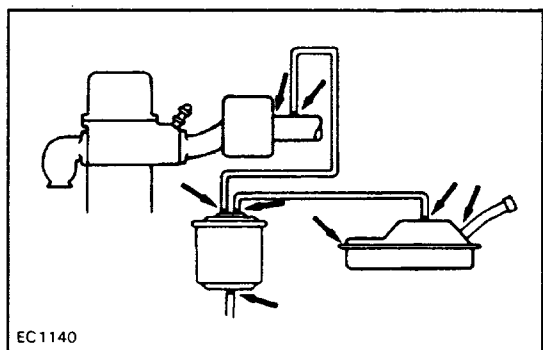

## INSPECTION OF FUEL VAPOR LINES, FUEL TANK AND TANK CAP


### 1. VISUALLY INSPECT LINES AND CONNECTIONS

Look for loose connections, sharp bends or damage.

### 2. VISUALLY INSPECT FUEL TANK


Look for deformation, cracks or fuel leakage.



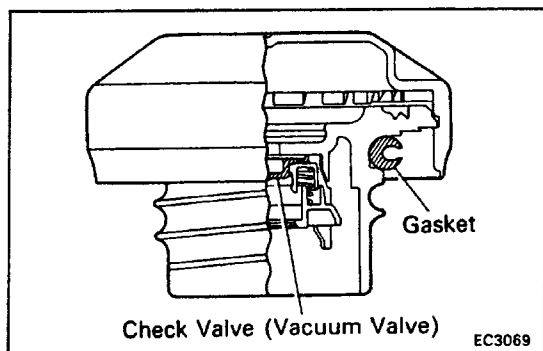

### 3. VISUALLY INSPECT FUEL TANK CAP

Look for a damaged or deformed gasket and cap. If necessary, repair or replace the cap.

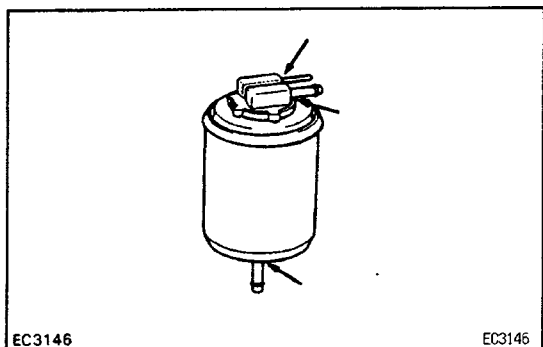


## CHARCOAL CANISTER INSPECTION

EG1WF-01

### 1. REMOVE CHARCOAL CANISTER

### 2. VISUALLY INSPECT CHARCOAL CANISTER CASE

Look for cracks or damage.

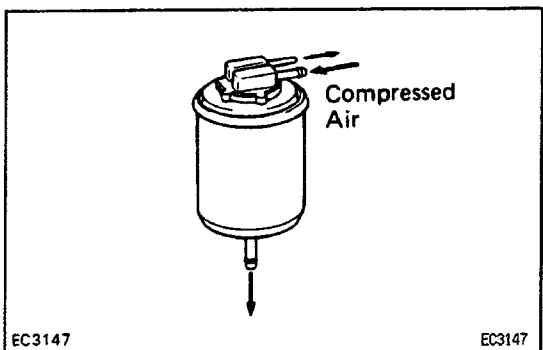


### 3. CHECK FOR CLOGGED FILTER AND STUCK CHECK VALVE

(a) Using low pressure compressed air, blow air into the tank pipe and check that the air flows without resistance from the other pipes.

(b) Blow into the purge pipe and check that the air does not flow from the other pipes.

If a problem is found, replace the charcoal canister.

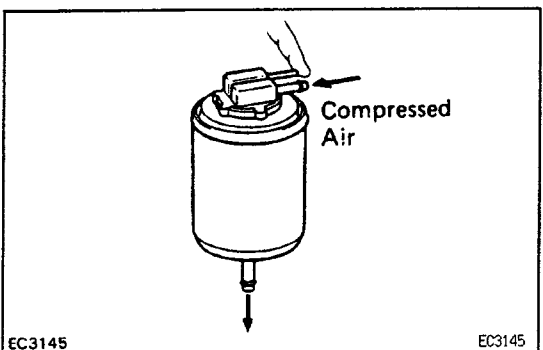

### 4. CLEAN FILTER IN CANISTER

Clean the filter by blowing 294 kPa (3 kgf/cm<sup>2</sup>, 43psi) of compressed air into the tank pipe, while holding the purge pipe closed.


HINT:

- Do not attempt to wash the canister.
- No activated carbon should come out.

### 5. INSTALL CHARCOAL CANISTER

# EXHAUST GAS RECIRCULATION (EGR) SYSTEM (Federal and Canada)

E01WG-01

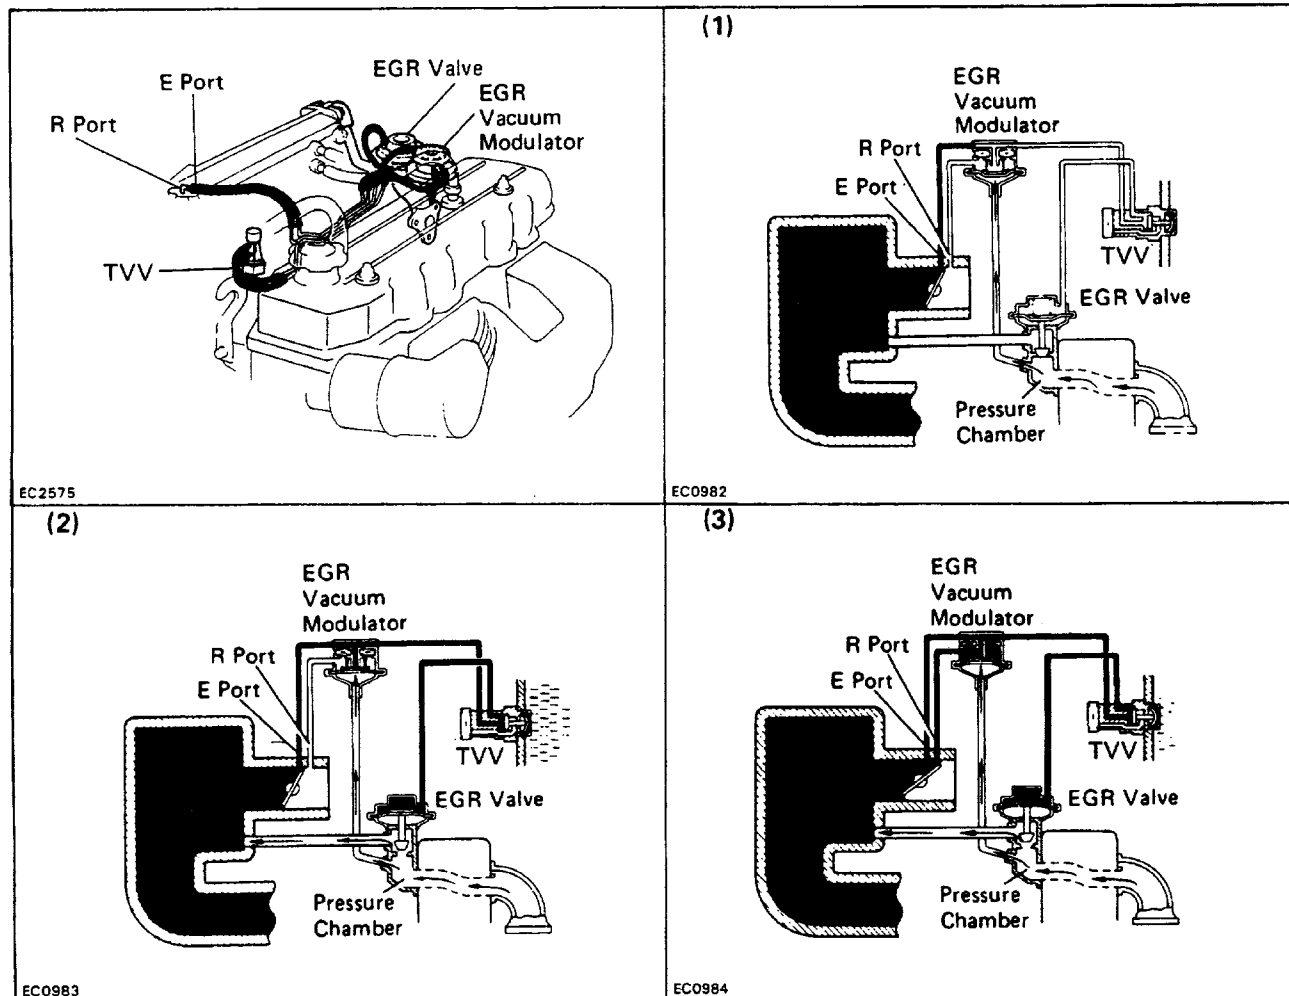


To reduce NO<sub>x</sub> emission, part of the exhaust gases are recirculated through the EGR valve to the intake manifold to lower the maximum combustion temperature.

Coolant Temp.	TVV	Throttle Valve Opening Angle	Pressure in the EGR Valve Pressure Chamber		EGR Vacuum Modulator	EGR Valve	Exhaust Gas
Below 30°C (86°F)	CLOSED	—	—		—	CLOSED	Not recirculated
Above 44°C (111°F)	OPEN	Positioned below E port	—		—	CLOSED	Not recirculated
		Positioned between E port and R port	(1) LOW	*Pressure constantly alternating between low and high	OPENS passage to atmosphere	CLOSED	Not recirculated
			(2) HIGH		CLOSES passage to atmosphere	OPEN	Recirculated
		Positioned above R port	(3) HIGH	**	CLOSES passage to atmosphere	OPEN	Recirculated (increase)

Remarks: \* Pressure increases → Modulator closes → EGR valve opens → Pressure drops —

← EGR valve closes ← Modulator opens ←


\*\* When the throttle valve is positioned above the R port, the EGR vacuum modulator will close the atmosphere passage and open the EGR valve to increase the EGR gas, even if the exhaust pressure is insufficiently low.

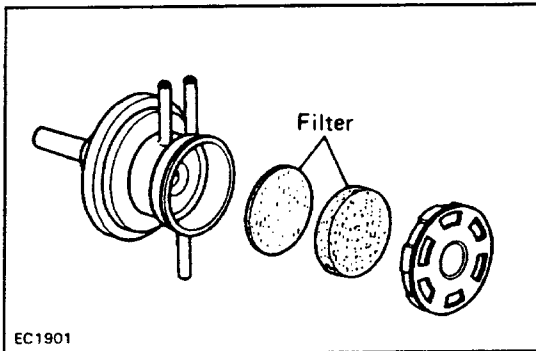

## EGR SYSTEM INSPECTION

### 1. CHECK AND CLEAN FILTER IN EGR VACUUM MODULATOR

- Check the filter for contamination or damage.
- Using compressed air, clean the filter.

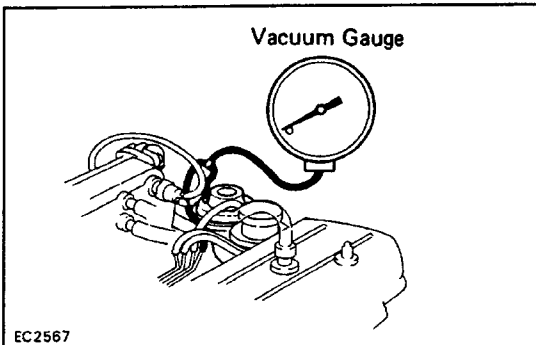


### 2. PREPARATION

Disconnect the vacuum hose from the EGR valve and, using a three way union, connect a vacuum gauge to it.


### 3. CHECK SEATING OF EGR VALVE

Start the engine and check that the engine starts and runs at idle.

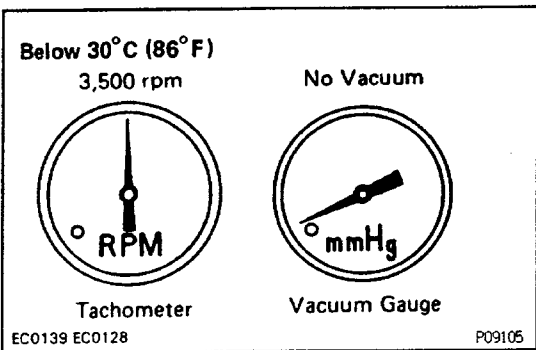


### 4. CHECK TVV WITH COLD ENGINE

- The coolant temperature should be below 30°C (86°F).
- Check that the vacuum gauge indicates zero at 3,500 rpm.

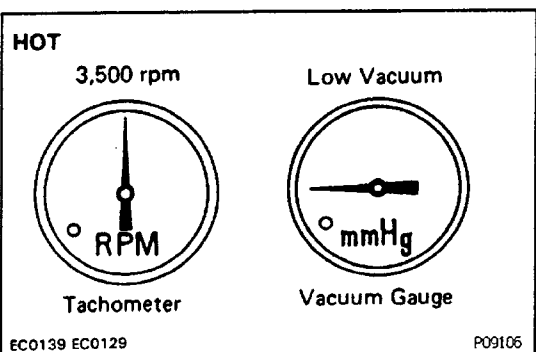

### 5. CHECK TVV AND EGR VACUUM MODULATOR WITH HOT ENGINE

- Warm up the engine.
- Check that the vacuum gauge indicates low vacuum at 3,500 rpm.

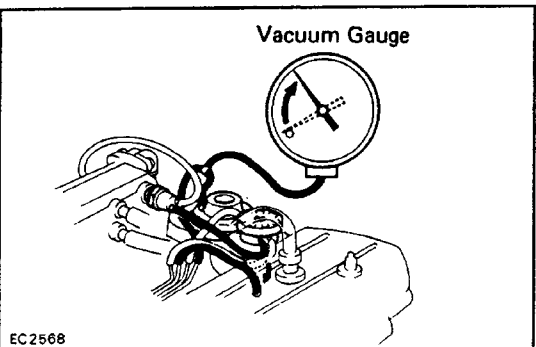


- Disconnect the vacuum hose from R port of the EGR vacuum modulator and connect R port directly to the intake manifold with another hose.

- Check that the vacuum gauge indicates high vacuum at 3,000 rpm.

HINT: As a large amount of EGR gas enters, the engine will misfire slightly at this time.


- Disconnect the vacuum gauge and reconnect the vacuum hoses to the proper locations.

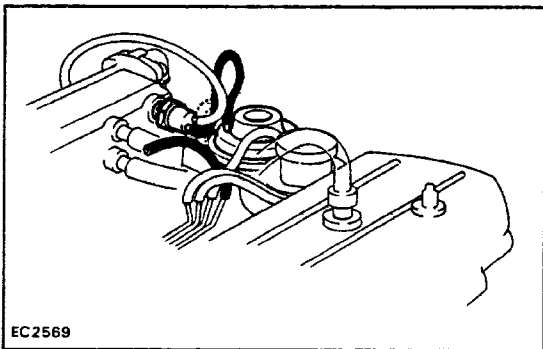

## 6. CHECK EGR VALVE

- Apply vacuum directly to the EGR valve with the engine idling.
- Check that the engine runs rough or dies.
- Reconnect the vacuum hoses to the proper locations.


**IF NO PROBLEM IS FOUND WITH THIS INSPECTION, THE SYSTEM IS OKAY; OTHERWISE INSPECT EACH PART**

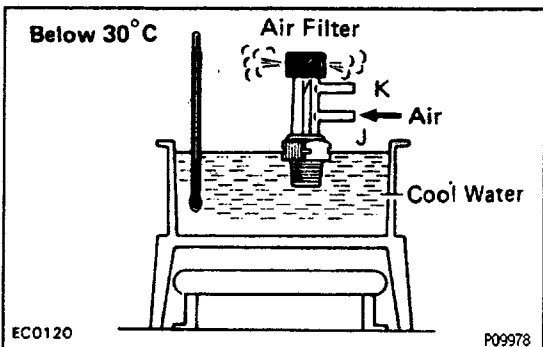

## TVV INSPECTION


### CHECK TVV BY BLOWING AIR INTO PIPE

- Drain the coolant from the radiator into a suitable container.
- Remove the TVV.
- Cool the TVV to below 30 •C(86•F).
- Check that the air flows from pipe J to the air filter.

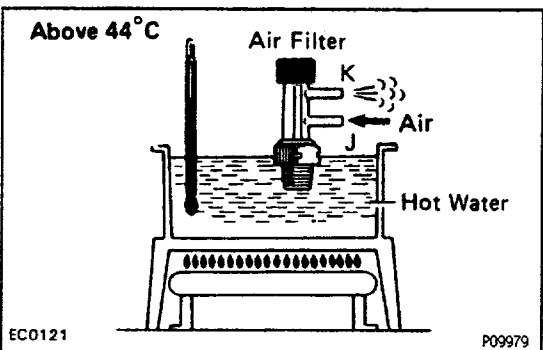

- Heat the TVV to above 44 •C(111 •F).
  - Check that the air flows from pipe J to pipe K.
  - Apply sealant to the threads of the TVV and reinstall.
- Sealant: Part No. 08833-00070, THREE BOND 1324 or equivalent**


- Fill the radiator with coolant.
- If a problem is found, replace the TVV.

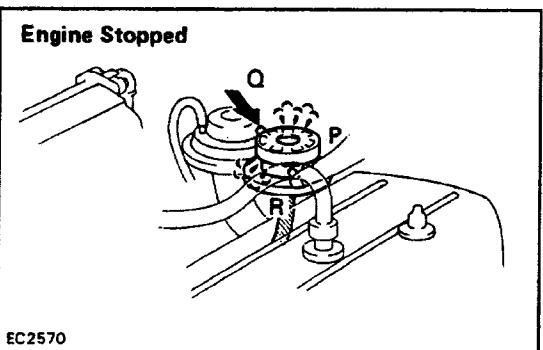

## EGR VACUUM MODULATOR INSPECTION

### CHECK EGR VACUUM MODULATOR OPERATION

- Disconnect the vacuum hoses from ports, Q and R of the EGR vacuum modulator.
- Plug ports P and R with your finger.
- Blow air into Q. Check that the air passes through to the air filter side freely.
- Start the engine and maintain the speed at 3,500 rpm.

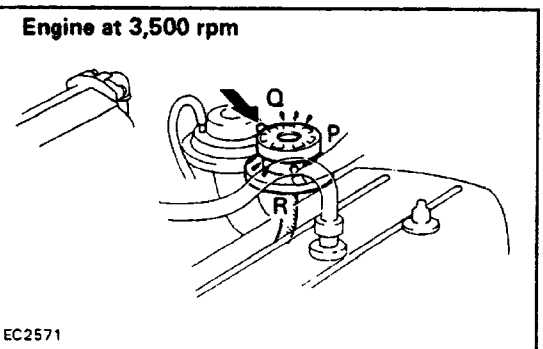

- Repeat the above test. Check that there is a strong resistance to air flow.
- Reconnect the vacuum hoses to the proper locations.

## EGR VALVE INSPECTION


### 1. REMOVE EGR VALVE

Check the valve for sticking and heavy carbon deposits. If a problem is found, replace it.

### 2. INSTALL EGR VALVE WITH NEW GASKET

# EXHAUST GAS RECIRCULATION (EGR) SYSTEM (Calif.)

EG1WM-01

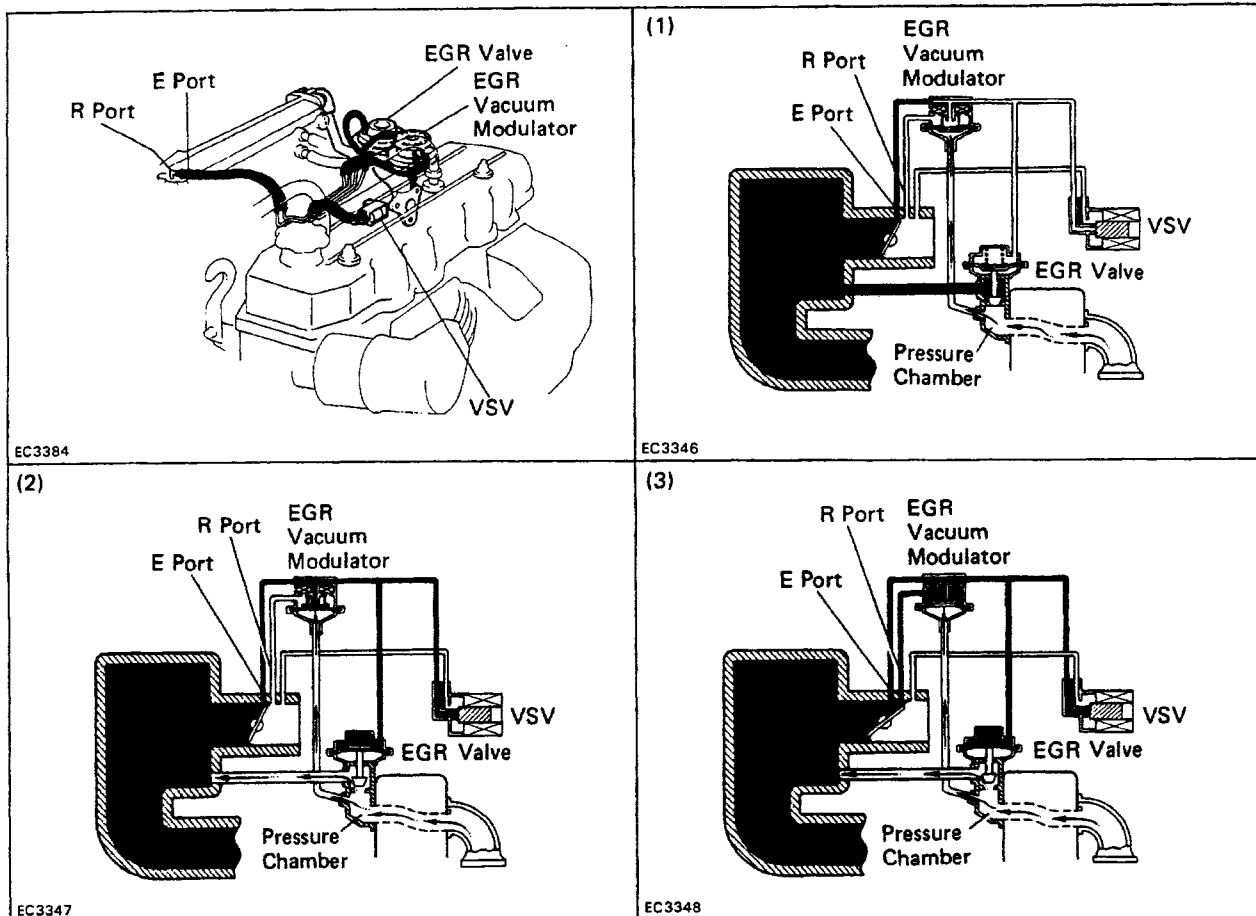


To reduce NO<sub>x</sub> emission, part of the exhaust gases are recirculated through the EGR valve to the intake manifold to lower the maximum combustion temperature.

Coolant Temp.	Driving Condition	VSV	Throttle Valve Opening Angle	Pressure in the EGR Valve Pressure Chamber		EGR Vacuum Modulator	EGR Valve	Exhaust Gas
Below 34°C (93°F)	—	ON	—	—	—	—	CLOSED	Not recirculated
Above 40°C (104°F)	Low load	ON	—	—	—	—	CLOSED	Not recirculated
	Heavy load, etc.	OFF	Positioned below E port	—	—	—	CLOSED	Not recirculated
			Positioned between E port and R port	(1) LOW	*Pressure constantly alternating between low and high	OPENS passage to atmosphere	CLOSED	Not recirculated
				(2) HIGH		CLOSES passage to atmosphere	OPEN	Recirculated
			Positioned above R port	(3) HIGH	**	CLOSES passage to atmosphere	OPEN	Recirculated (increase)

Remarks: \* Pressure increases → Modulator closes → EGR valve opens → Pressure drops

← EGR valve closes ← Modulator opens ←


\*\*When the throttle valve is positioned above the R port, the EGR vacuum modulator will close the atmosphere passage and open the EGR valve to increase the EGR gas, even if the exhaust pressure is insufficiently low.

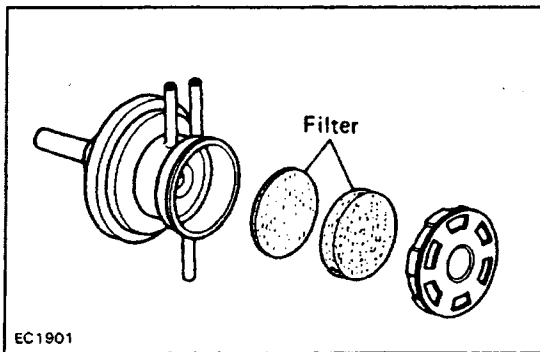

## EGR SYSTEM INSPECTION

### 1. CHECK AND CLEAN FILTER IN EGR VACUUM MODULATOR

- Check the filter for contamination or damage.
- Using compressed air, clean the filter.

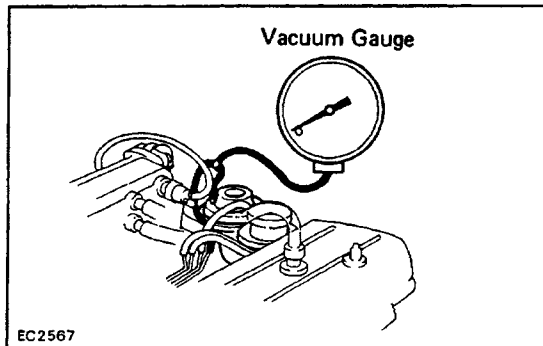


### 2. PREPARATION

Disconnect the vacuum hose from the EGR valve, and using a three way union, connect a vacuum gauge to it.


### 3. CHECK SEATING OF EGR VALVE

Start the engine and check that the engine starts and runs at idle.

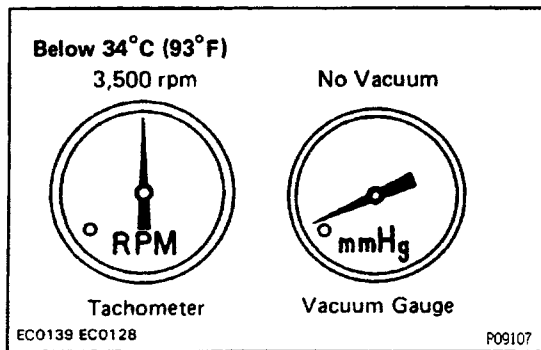


### 4. CHECK VSV WITH COLD ENGINE

- The coolant temperature should be below 34 °C (93° F).
- Check that the vacuum gauge indicates zero at 3,500 rpm.

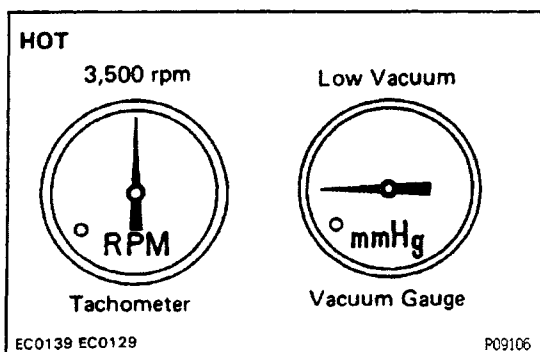

### 5. CHECK VSV AND EGR VACUUM MODULATOR WITH HOT ENGINE

- Warm up the engine.
- Check that the vacuum gauge indicates low vacuum at 3,500 rpm.

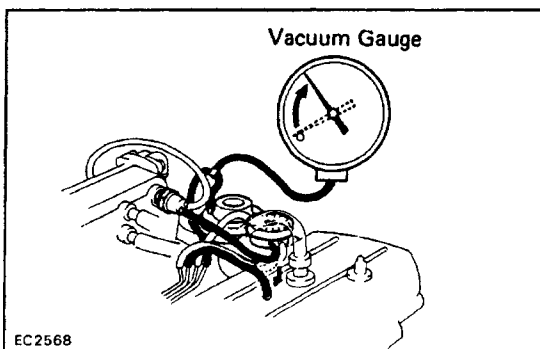


- Disconnect the vacuum hose from R port of the EGR vacuum modulator and connect R port directly to the intake manifold with another hose.

- Check that the vacuum gauge indicates high vacuum at 3,000 rpm.

**HINT:** As a large amount of EGR gas enters, the engine will misfire slightly at this time.


- Disconnect the vacuum gauge and reconnect the vacuum hoses to the proper locations.

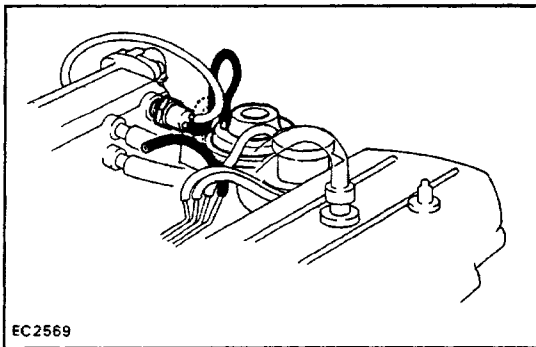

## 6. CHECK EGR VALVE

- Apply vacuum directly to the EGR valve with the engine idling.
- Check that the engine runs rough or dies.
- Reconnect the vacuum hoses to the proper locations.


**IF NO PROBLEM IS FOUND WITH THIS INSPECTION, THE SYSTEM IS OKAY; OTHERWISE INSPECT EACH PART**

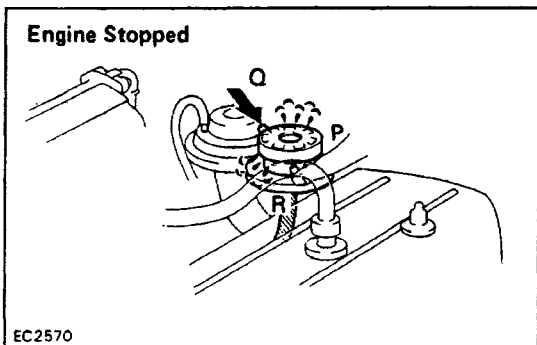


## EGR VACUUM MODULATOR INSPECTION

### CHECK EGR VACUUM MODULATOR OPERATION

- Disconnect the two vacuum hoses from ports P, Q and R of the EGR vacuum modulator.
- Plug ports P and R with your finger.
- Blow air into port Q. Check that the air passes through to the air filter side freely.

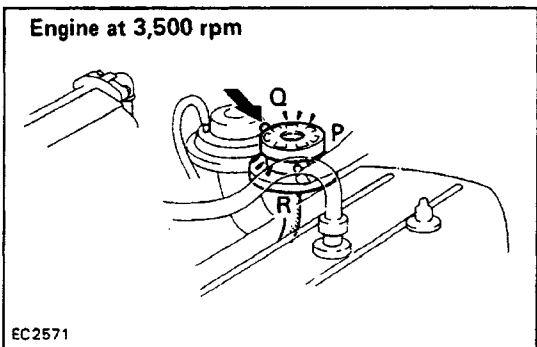


- Start the engine and maintain the speed at 3,500 rpm.
- Repeat the above test. Check that there is a strong resistance to air flow.
- Reconnect the vacuum hoses to the proper locations.

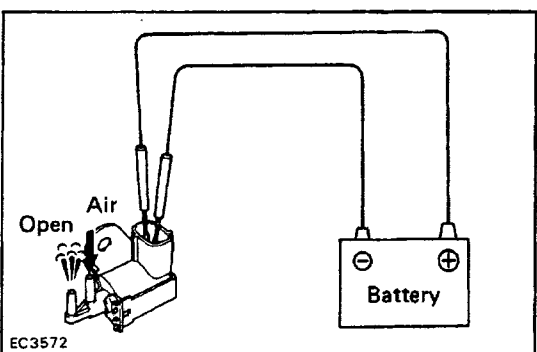

## VSV INSPECTION


### 1. CHECK VACUUM CIRCUIT CONTINUITY IN THE VSV BY BLOWING AIR INTO PIPE

- Connect the VSV terminals to the battery terminals as illustrated.
- Blow air into a pipe and check that the VSV is open.

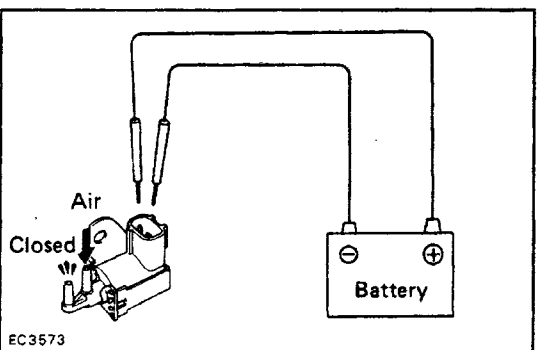


- Disconnect the battery.
  - Blow air into a pipe and check that VSV is closed.
- If a problem is found, replace the VSV.



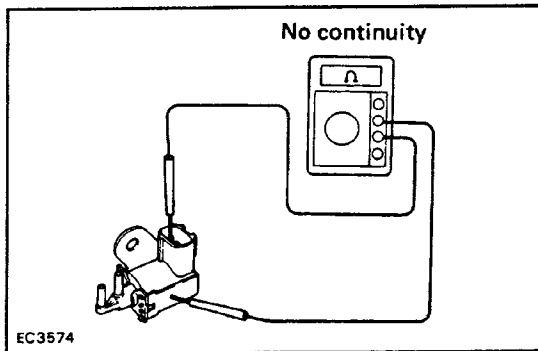

## 2. CHECK FOR SHORT CIRCUIT

Using an ohmmeter, check that there is no continuity between the terminals and the VSV body.

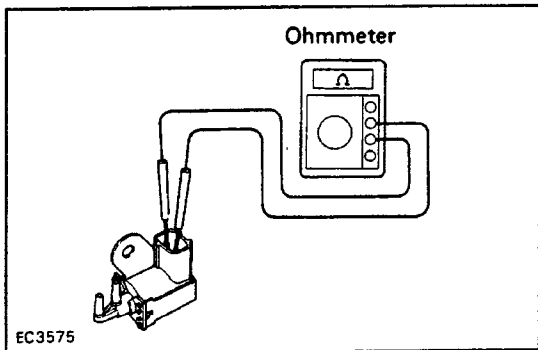

## 3. CHECK FOR OPEN CIRCUIT

Using an ohmmeter, measure the resistance between the terminals.

**Specified resistance: 30 – 50  $\Omega$  at 20• C(68• F)**

If the resistance is not within specification, replace the VSV.

# EGR VALVE INSPECTION

EG1WR-01



## 1. REMOVE EGR VALVE

Check the valve for sticking and heavy carbon deposits. If a problem is found, replace it.

## 2. INSTALL EGR VALVE WITH NEW GASKET

# PULSED SECONDARY AIR INJECTION (PAIR) SYSTEM


EG1W8-01

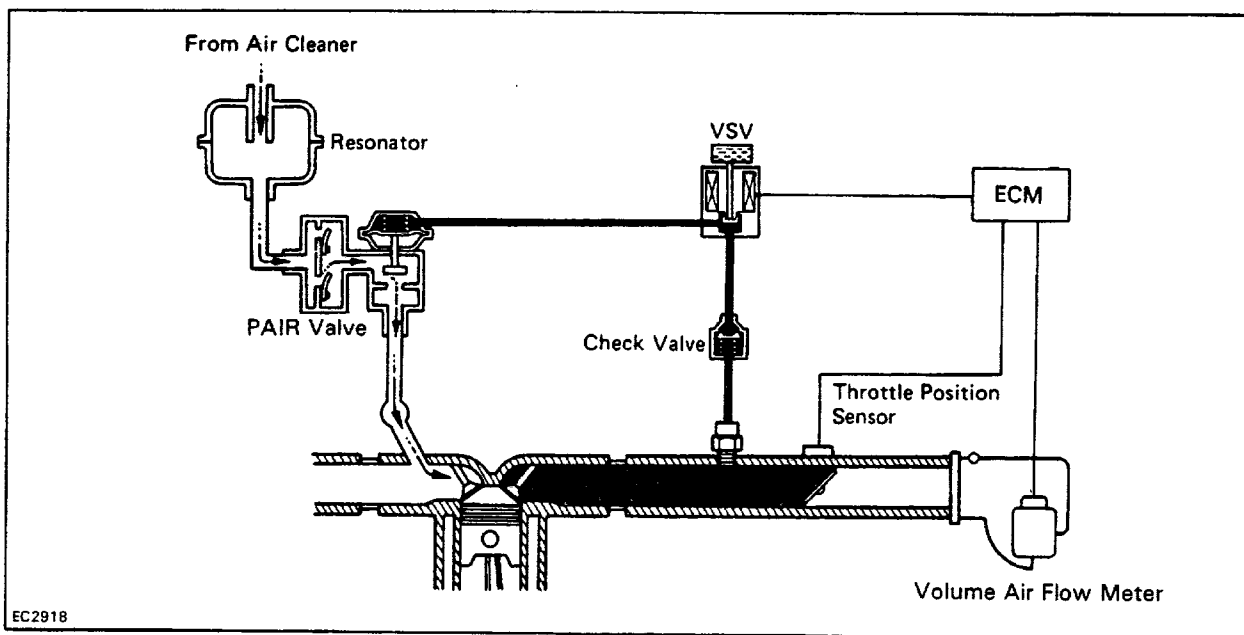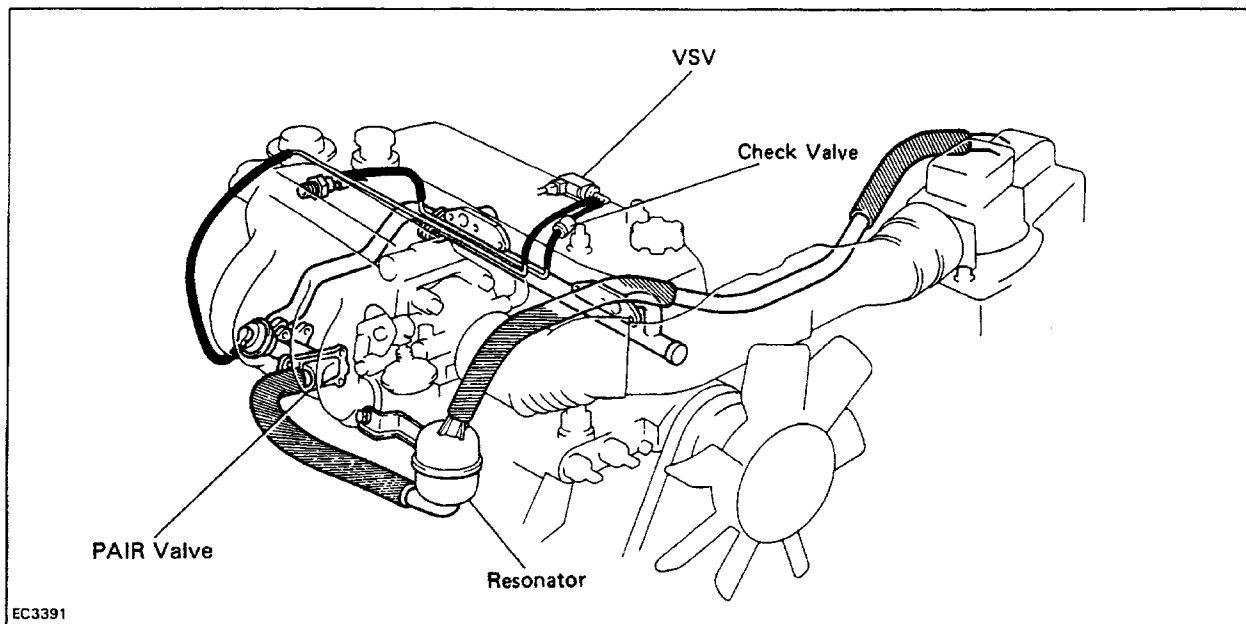

To reduce HC and CO emissions, this system draws in air into exhaust ports to accelerate oxidation, using vacuum generated by the exhaust pulsation in the exhaust manifold.

Condition	Coolant Temp.	Throttle valve position	Vehicle speed	Engine RPM	vsv	PAIR
Normal driving	Below 30°C (86°F)			Below 3,600 rpm	ON	ON
				Above 3,600 rpm	OFF	OFF
Deceleration	Above 40°C (104°F)	Idling	Below 4 km/h (2 mph)	Below 1,000 rpm	OFF	OFF
			Above 4 km/h (2 mph)	Above 1,000 rpm	ON	ON
				Below 1,000 rpm	ON	ON
				Above 1,000 rpm	ON	ON

Below 30°C (86°F)

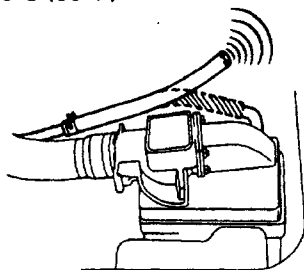

EC2934


## PAIR SYSTEM INSPECTION

**1. VISUALLY CHECK HOSES AND TUBES FOR CRACKS, KINKS, DAMAGE OR LOOSE CONNECTIONS**

**2. CHECK PAIR SYSTEM WITH COLD ENGINE**

- (a) The coolant temperature should be below 30 •C(86• F).
- (b) Disconnect the NO.1 PAIR hose from the air cleaner case.
- (c) Check that a bubbling noise is heard from the NO.1 PAIR hose at idle.

Above 40°C (104°F)

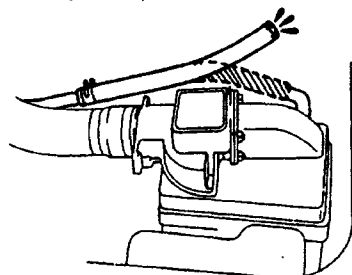


EC2936

**3. CHECK PAIR SYSTEM WITH WARM ENGINE**

- (a) Warm up the engine to above 40•C(104•F).
- (b) With the engine idling, check that a bubbling noise is not heard from the NO. 1 hose.


Momentarily

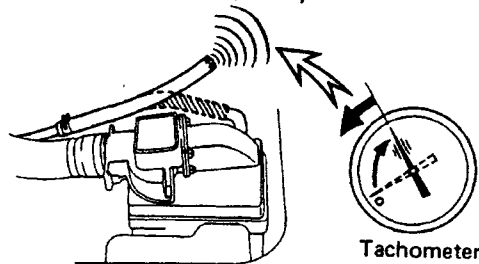

Tachometer

EC2935

- (c) Race the engine and quickly close the throttle valve. Check that a bubbling noise stops momentarily.

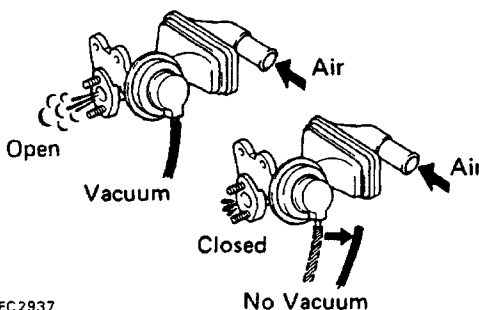


EC2937

## PAIR VALVE INSPECTION

**CHECK PAIR VALVE BY BLOWING AIR INTO PIPE**

- (a) Apply vacuum to the pair valve diaphragm.
- (b) Blow air into a pipe and check that the pair valve is closed.
- (c) Release the vacuum and check that the pair valve is closed.

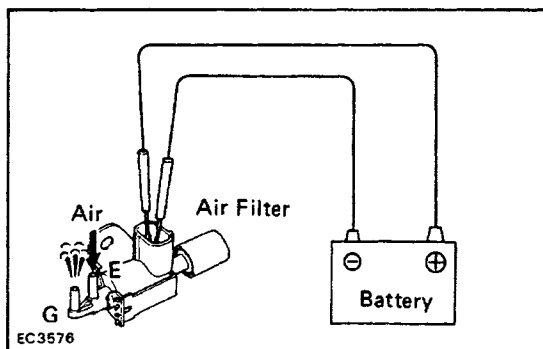


## VSV INSPECTION

### 1. CHECK VACUUM CIRCUIT CONTINUITY IN VSV BY BLOWING AIR INTO PIPE

(a) Connect the VSV terminals to the battery terminals as illustrated.


(b) Blow air into pipe E and check that air comes out of pipe G.

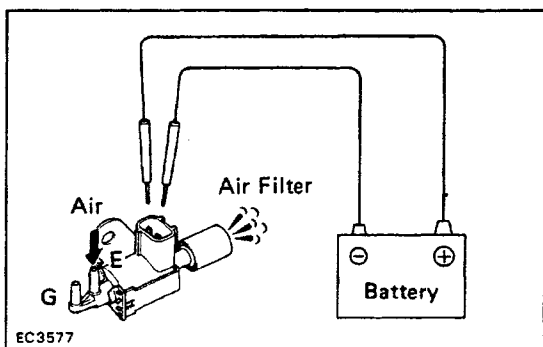

(c) Disconnect the battery.


(d) Blow air into pipe E and check that air comes out of air filter.

If a problem is found, repair the VSV.

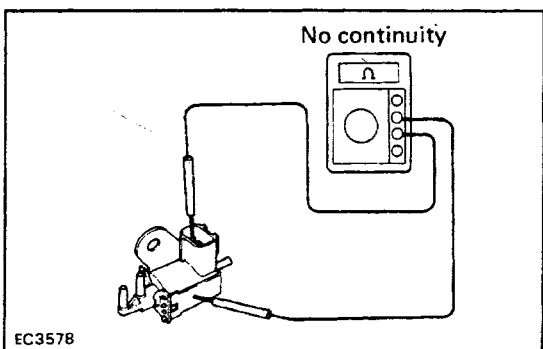

### 2. CHECK FOR SHORT CIRCUIT

Using an ohmmeter, check that there is no continuity between the terminal and the VSV body. If there is continuity, replace the VSV. –

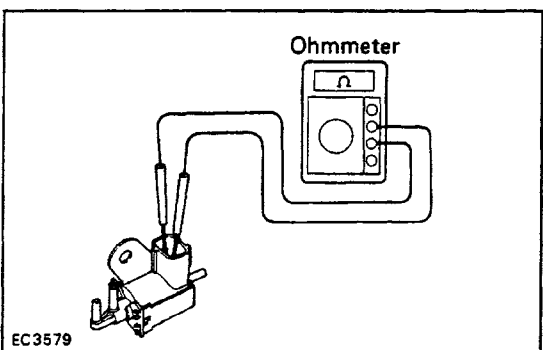


### 3. CHECK FOR OPEN CIRCUIT

Using an ohmmeter, measure the resistance between the terminals as shown.

**Specified resistance: 30–50  $\Omega$  at 20°C (68°F)**

If the resistance is not within specification, replace the VSV.

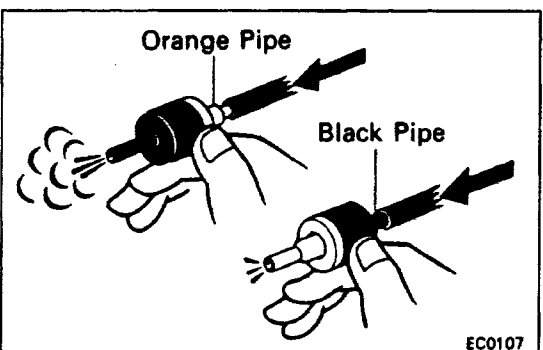

## CHECK VALVE INSPECTION


### CHECK VALVE BY BLOWING AIR INTO EACH PIPE

(a) Check that air flows from the orange pipe to the black pipe.

(b) Check that air does not flow from the black pipe to the orange pipe.

## THREE-WAY CATALYTIC CONVERTER (TWC) SYSTEM

EG1WX-01

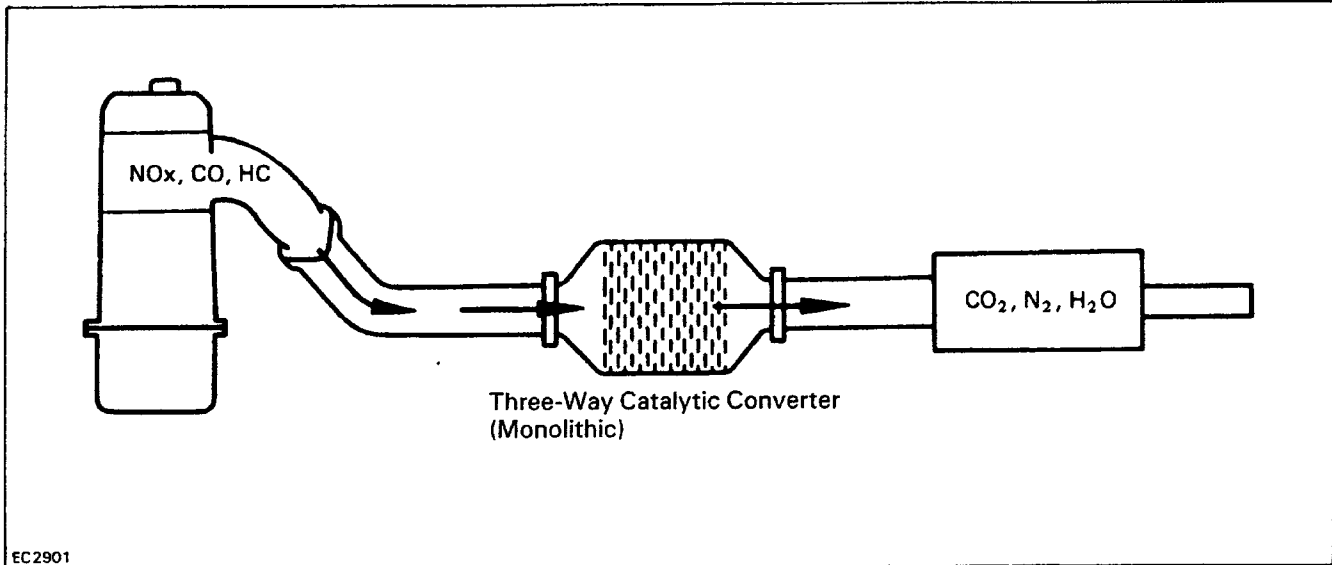

To reduce HC, CO and NO<sub>x</sub> emissions, they are oxidized, reduced and converted to nitrogen (N<sub>2</sub>), carbon dioxide (CO<sub>2</sub>) and water (H<sub>2</sub>O) by the catalytic converter.


Exhaust Port		TWC		Exhaust Gas
HC, CO and NO <sub>x</sub>	→	Oxidation and reduction	→	CO <sub>2</sub> H <sub>2</sub> O N <sub>2</sub>

V01777

## EXHAUST PIPE ASSEMBLY INSPECTION

1. CHECK CONNECTIONS FOR LOOSENESS OR DAMAGE
2. CHECK CLAMPS FOR WEAKNESS, CRACKS OR DAMAGE


EG1WZ-01

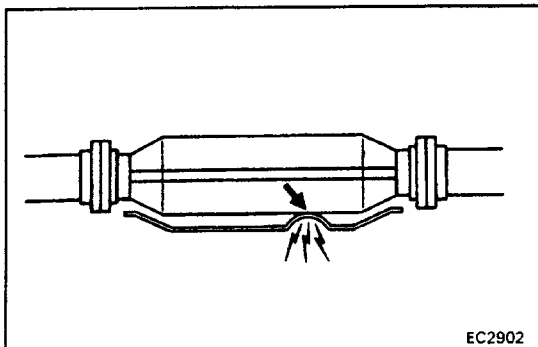

## CATALYTIC CONVERTER INSPECTION

### CHECK FOR DENTS OR DAMAGE


If any part of the protector is damaged or dented to the extent that it contacts the catalytic converter, repair or replace it.

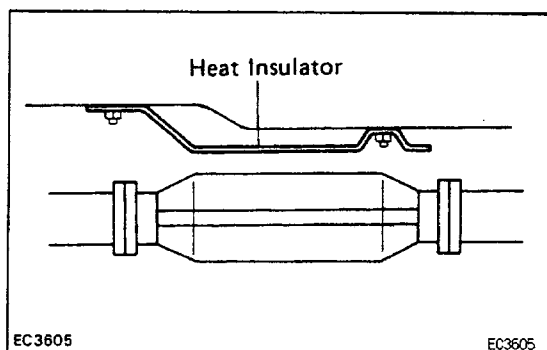

## HEAT INSULATOR INSPECTION

EG1X0-01

1. CHECK HEAT INSULATOR FOR DAMAGE
2. CHECK FOR ADEQUATE CLEARANCE BETWEEN CATALYTIC CONVERTER AND HEAT INSULATOR

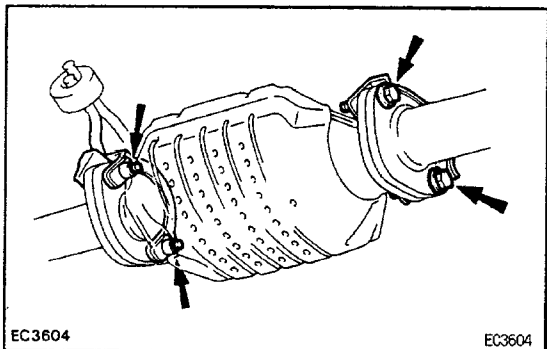

## CATALYTIC CONVERTER REPLACEMENT

### 1. REMOVE CONVERTER

- (a) Jack up the vehicle.
- (b) Check that the converter is cool.
- (c) Remove the bolts at the front and rear of the converter.
- (d) Remove the converter and gaskets.

### 2. INSTALL CONVERTER

- (a) Place new gaskets on the converter front and rear pipes, and connect the converter to the exhaust pipes.
- (b) Torque the bolts.

**Torque: Catalytic converter-Exhaust pipe**

**39 N-m (400kgf-cm, 29ft-lbf)**

- (c) Reinstall the bracket bolts and tighten them.

## SERVICE SPECIFICATIONS

## TORQUE SPECIFICATIONS


EG1X2-01

Part tightened

Cylinder Head x EGR Valve	N-m	kgf-cm	ft-lbf
Air Intake Chamber x EGR Pipe	13	130	9
Intake Manifold x PAIR Reed Valve	13	130	9
No. 1 Air Injection Manifold x PAIR Reed Valve	13	130	9
	13	130	9

# MFI SYSTEM

## DESCRIPTION

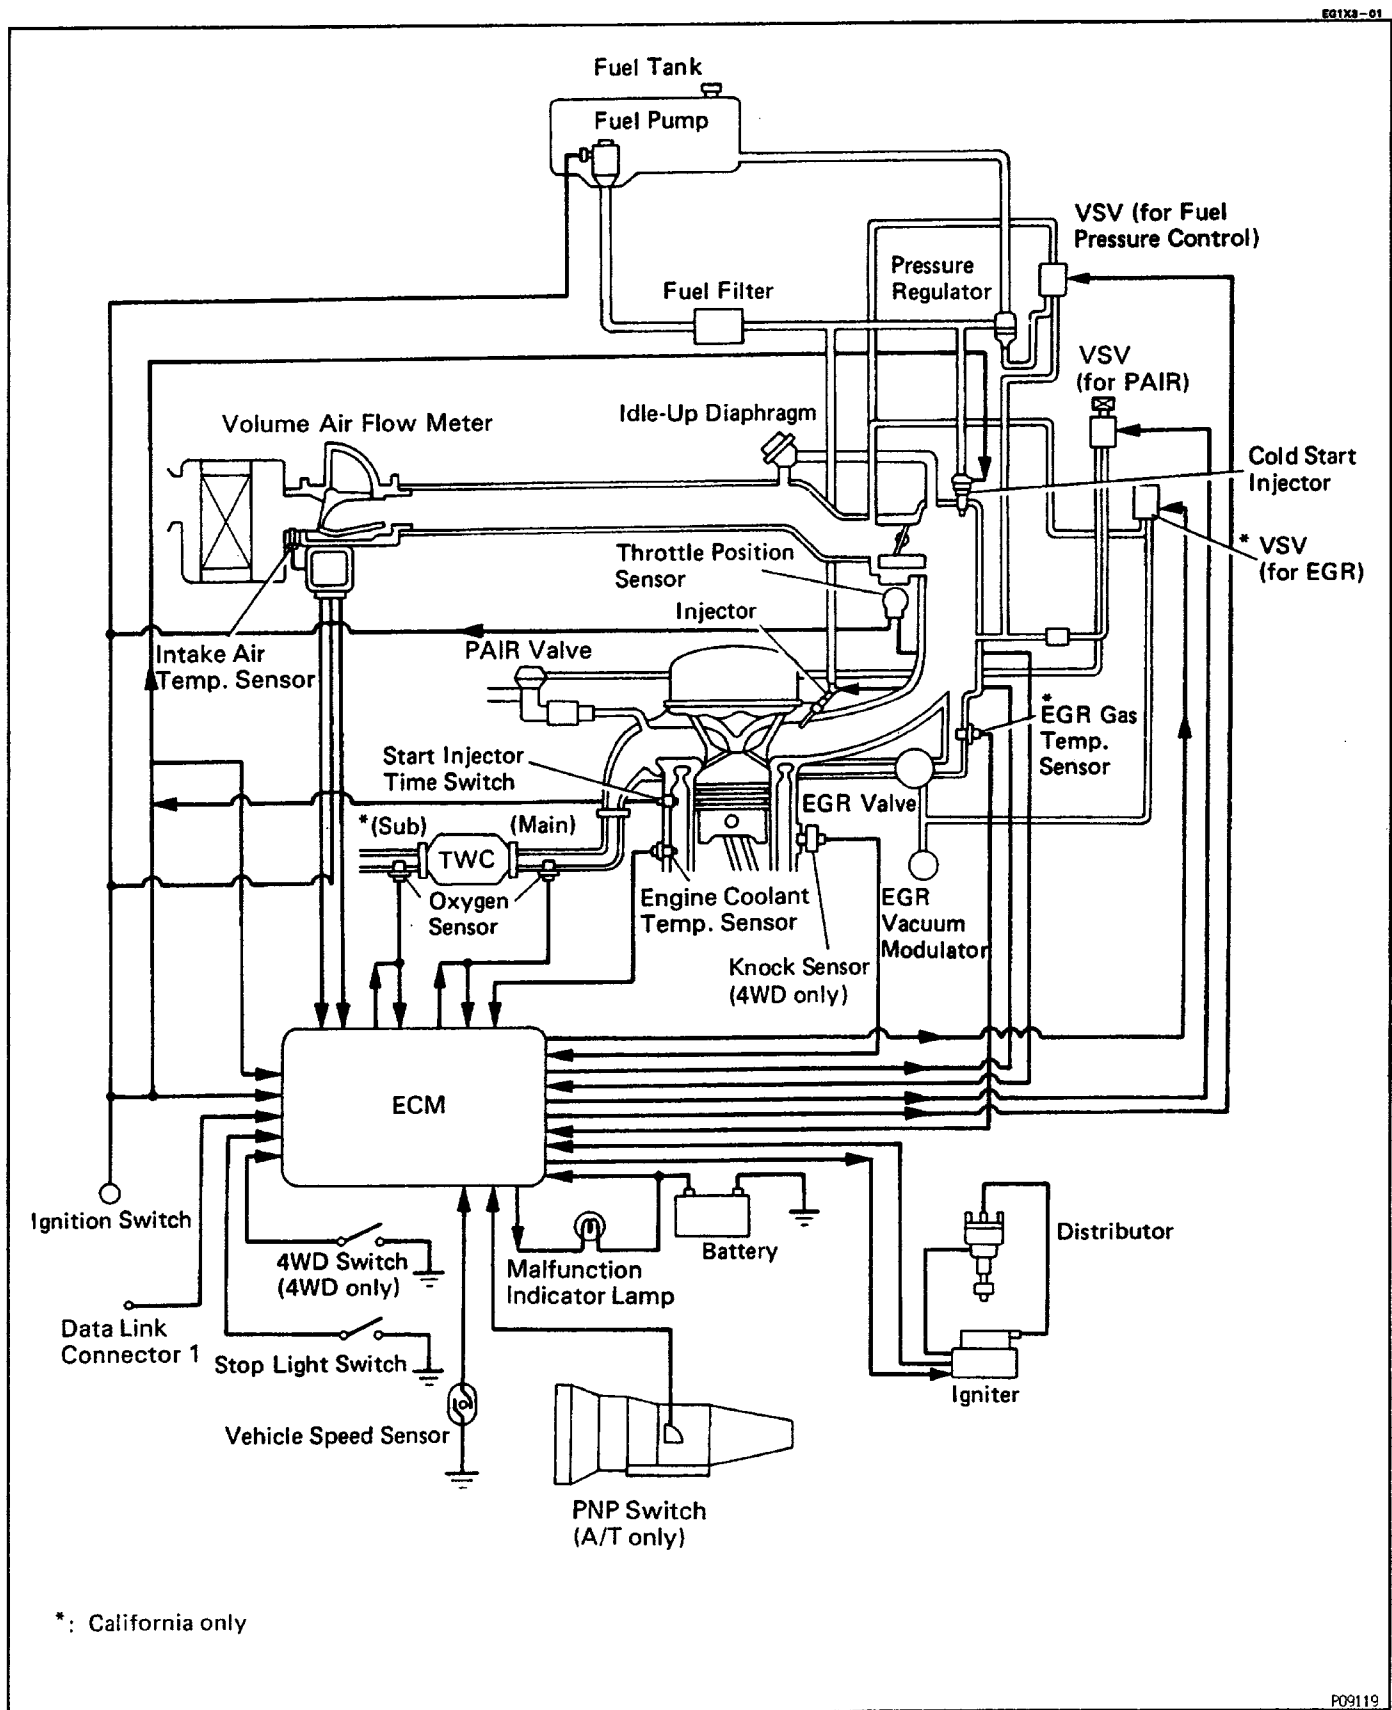

The MFI system is composed of three basic subsystems: Fuel, Air Induction and Electronic Control Systems.

### **FUEL SYSTEM**

An electric fuel pump supplies sufficient fuel, under a constant pressure, to the MFI injectors. In accordance with signals from the ECM, these injectors inject the most appropriate quantity of fuel for the engine condition into the intake manifold.

Each injector injects, at the same time, one half of the fuel required for ideal combustion with each engine revolution.

### **AIR INDUCTION SYSTEM**

The air induction system provides just the right amount of air for the engine operating condition.

### **ELECTRONIC CONTROL SYSTEM**

The 22R-E engine is equipped with a Toyota Computer Controlled System (TCCS) which centrally controls the MFI, ESA, A/T (4WD), diagnosis systems, etc. by means of an Engine Control Module (ECM, formerly the MFI computer) employing a microcomputer.

By means of the ECM, the TCCS controls the following functions:

#### **1. Multiport Fuel Injection (MFI)**

The receives signals from various sensors indicating changing engine operating conditions such as: Intake air volume

Intake air temperature

Coolant temperature

Engine rpm

Acceleration/deceleration

Exhaust oxygen content etc.

These signals are utilized by the ECM to determine the injection duration necessary for an optimum air-fuel ratio.

#### **2. Electronic Spark Advance (ESA)**

The ECM is programmed with data for optimum ignition timing under all operating conditions various engine functions (RPM, intake air volume, coolant temperature etc.), the microcomputer (ECM) triggers the spark at precisely the right instant. .

#### **3. Diagnosis Function**

When the ECM detects malfunction or abnormalities in the sensor network, it lights the Mal-function Indicator Lamp in the combination meter. At the same time, the trouble is identified and a diagnostic trouble code is recorded by the ECM. The diagnostic trouble code can be read by the number of blinks of the malfunction Indicator lamp when terminals TE1 and E1 are connected. The diagnostic trouble codes are explained on pages [EG1-114](#),115.

#### **4. Fail-Safe Function**









In the event of a sensor malfunction, a backup circuit will take over to provide minimal drivability, and the Malfunction Indicator Lamp will light up.



# PREPARATION




EGOCF-08

## SST (SPECIAL SERVICE TOOLS)

	09268-41045 Injection Measuring Tool Set	
	(09268-41080) No.6 Union	
	(09268-52010) Injection Measuring Attachment	
	(90405-09015) No.1 Union	
	09268-45012 EFI Fuel Pressure Gauge	
	09631-22020 Power Steering Hose Nut 14 x 17 mm Wrench Set	Fuel line flare nut
	09842-30070 Wiring "F" EFI Inspection	
	09843-18020 Diagnosis Check Wire	

EGOCG-08

## RECOMMENDED TOOLS

	09082-00015 TOYOTA Electrical Tester	
	09200-00010 Engine Adjust Kit	
	09258-00030 Hose Plug Set	Plug for the vacuum hose, fuel hose etc.

EQUIPMENT

Graduated cylinder	Injector
Carburetor cleaner	Throttle body
Sound scope	Injector
Tachometer	
Torque wrench	
Vacuum gauge	
Soft brush	Throttle body




## PRECAUTIONS

1. Before working on the system, disconnect the negative terminal from the battery.

HINT: Any diagnostic trouble code retained by the computer will be erased when the battery terminal is removed.

Therefore, if necessary, read the diagnosis before removing the battery terminal.

2. Do not smoke or work near an open flame when working on the fuel system.
3. Keep gasoline away from rubber or leather parts.

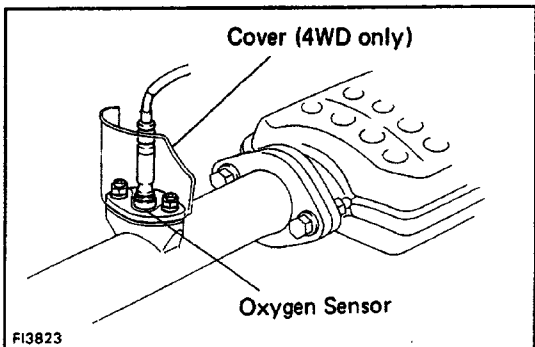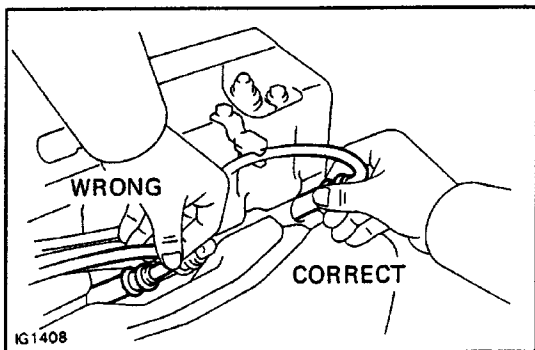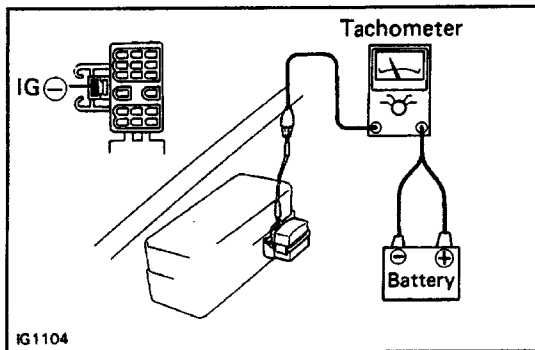

## MAINTENANCE PRECAUTIONS

1. CHECK CORRECT ENGINE TUNE-UP
2. PRECAUTION WHEN CONNECTING GAUGE

- (a) When a tachometer is connected to the system, connect the tachometer test probe to the IG(-) terminal of the DLC1.
- (b) Use the battery as the power source for the timing light, tachometer, etc.


3. IN EVENT OF ENGINE MISFIRE, THE FOLLOWING PRECAUTIONS SHOULD BE TAKEN

- (a) Check proper connection of battery terminals, etc.
- (b) Handle high-tension cords carefully.
- (c) After repair work, check that the ignition coil terminals and all other ignition system lines are reconnected securely.
- (d) When cleaning the engine compartment, be especially careful to protect the electrical system from water.

4. PRECAUTIONS WHEN HANDLING OXYGEN SENSOR

- (a) Do not allow the oxygen sensor to drop or hit against an object.
- (b) Do not allow the sensor to come into contact with water.

EG1X5-01

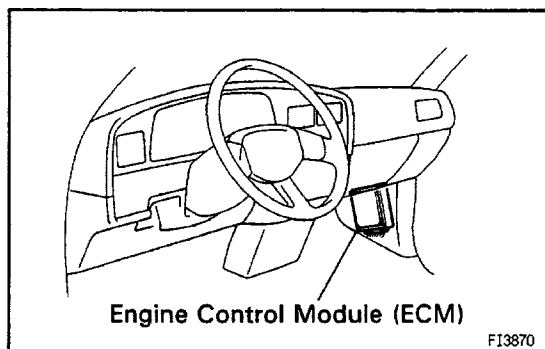

## IF VEHICLE EQUIPPED WITH A MOBILE RADIO SYSTEM (HAM, CB, ETC.)

The ECM is designed so that it will not be affected outside interference.

However, if your vehicle is equipped with an amateur radio transceiver, etc. (even one with about 10 W output), it may, at times, have an effect upon ECM operation, especially if the antenna and feeder are installed nearby. Therefore, observe the following precautions:

(a) Install the antenna as far away as possible from the ECM. The ECM is located in the right side kick panel so the antenna should be installed at the rear, left side of the vehicle.


If installing on the bumper, do so on the right side, if possible.

(b) Keep the antenna feeder as far away as possible from the ECM wires – at least 20 cm (7.87 in.) – and, especially, do not wind them together.

(c) Check that the feeder and antenna are properly adjusted.

(d) Do not equip your vehicle with a powerful mobile radio system.

(e) Do not open the cover or the ECM unless absolutely necessary. (If the terminals are touched, the IC may be destroyed by static electricity.)

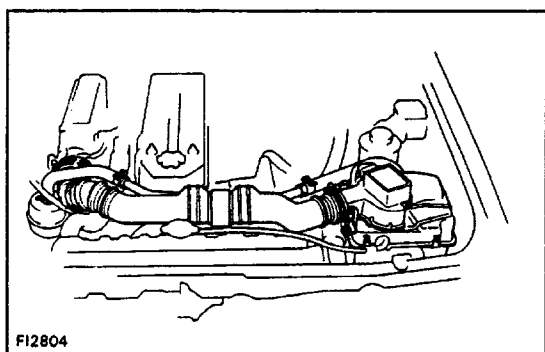


## AIR INDUCTION SYSTEM

EG1X7-01

1. Separation of the engine oil dipstick, oil filler cap, PCV hose, etc. may cause the engine to run out of tune.

2. Disconnection, looseness or cracks in the parts of the air induction system between the air flow meter and cylinder head will cause air suction and cause the engine to run out of tune.

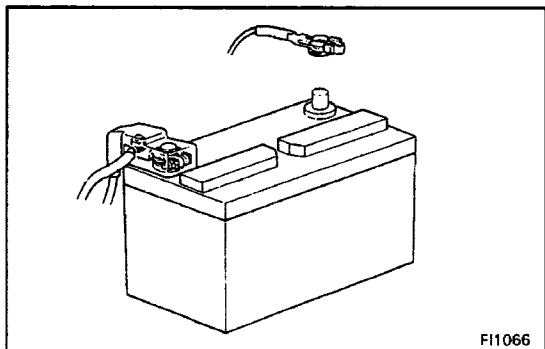


## ELECTRONIC CONTROL SYSTEM

EG1X8-01

1. Before removing MFI wiring connectors, terminals, etc., first disconnect power by either turning the ignition switch OFF or disconnecting the battery terminals.


2. When installing a battery, be especially careful not to incorrectly connect the positive and negative cables.

3. Do not permit parts to receive a severe impact during removal or installation. Handle all MFI parts carefully especially the ECM.
4. Take great care during troubleshooting as there are numerous transistor circuits and even slight terminal contact can cause further troubles.
5. Do not open the ECM cover.
6. When inspecting during rainy weather, take care to prevent entry of water. Also, when the engine compartment, prevent water from getting on the MFI parts and wiring connectors.
7. Parts should be replaced as an assembly.

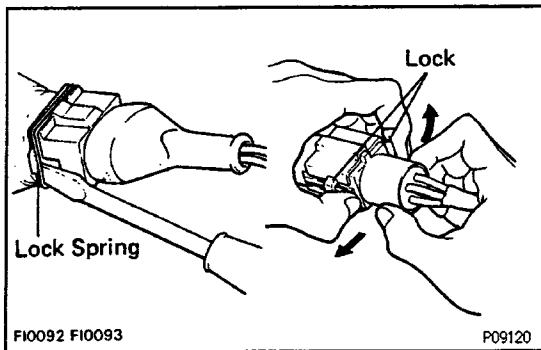


**8. Sufficient care is required when pulling out and inserting wiring connectors.**

- (a) To pull the connector out, release the lock and pull on the connector.

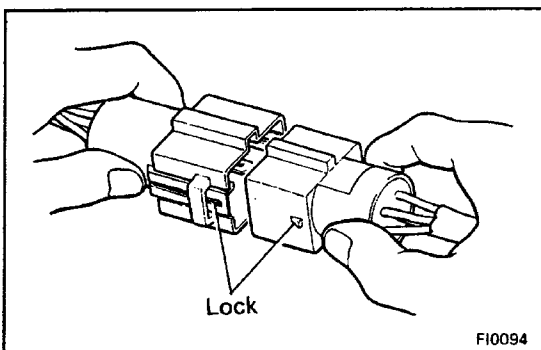


- (b) Fully insert the connector and check that it is locked.

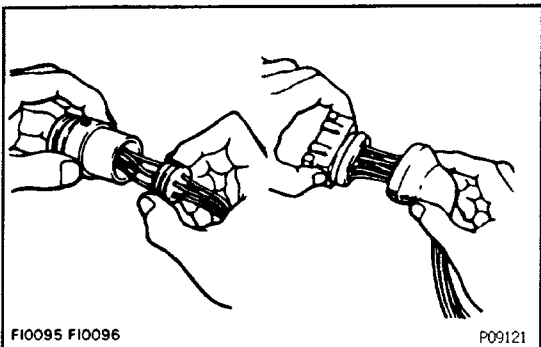

**9. When inspecting a connector with a volt/ohmmeter.**


- (a) Carefully take out the water-proofing rubber if it is a water-proof type connector.

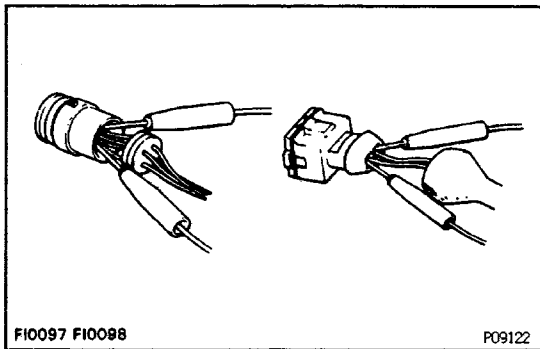

(b) Insert tester probe into the connector from the wiring side when checking the continuity, amperage or voltage.


(c) Do not apply unnecessary force to the terminal.

(d) After the check, securely install the water-proofing rubber on the connector.

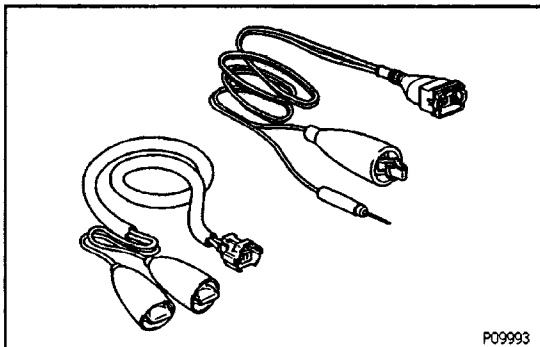

**10. Use SST for inspection or testing of the injector, cold start injector or their wiring connectors.**

SST 09842 - 30050 and 09842 - 30070

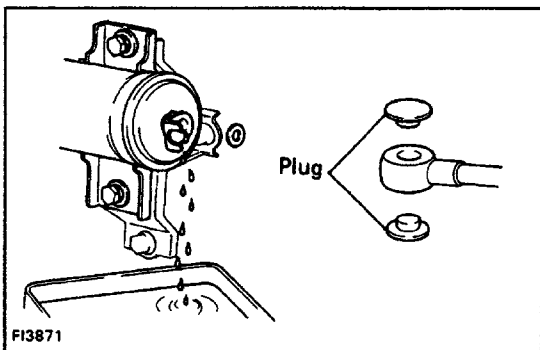

## FUEL SYSTEM

EG1X0-01

**1. When disconnecting the connection of the high fuel pressure line, a large amount of gasoline may come out so observe the following procedure:**



- Put a container under the connection.
- Slowly loosen the connection.
- Disconnect the connection.
- Plug the connection with a rubber plug.

**2. When connecting the flare nut or union bolt on the high pressure pipe union, observe the following procedure:**

(Union bolt type)

- always use a new gasket.
- Tighten the union bolt by hand.
- Torque the bolt to the specified torque.

**Torque: 30 N-m (310 kgf-cm, 22 ft-lbf)**

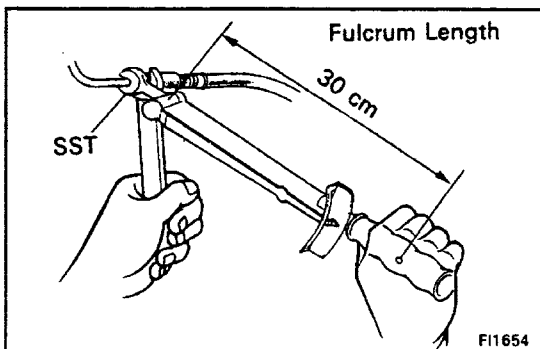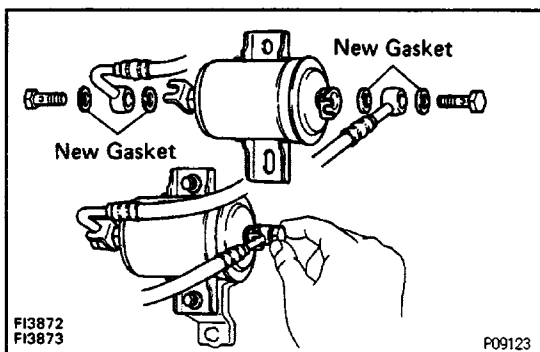

(Flare nut type)


(a) Apply a light coat of engine oil to the flare and tighten the flare nut by hand.

(b) Then using SST, tighten the nut to the specified torque.

SST 09631-22020


**Torque: 27 N-m (280 kgf-cm, 20 ft-lbf)**

**HINT:** use a torque with a fulcrum length of 30 cm (11.81 in.).

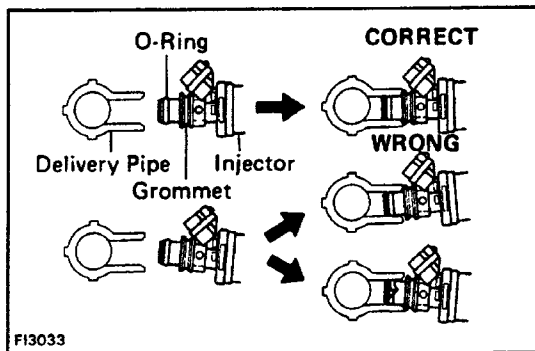


### 3. Take the following precautions when removing and installing the injectors.

- (a) Never re-use the O-ring.
- (b) When placing a new O-ring on the injector, take care not to damage it in any way.
- (c) Lubricate the O-ring spindle oil or gasoline before installing – never use engine, gear or brake oil.

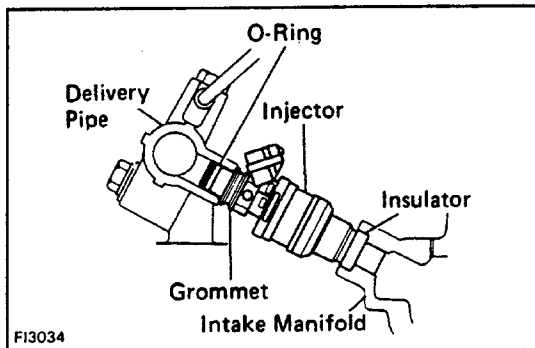


### 4. Install the injector to the delivery pipe and intake manifold as shown in the illustration.

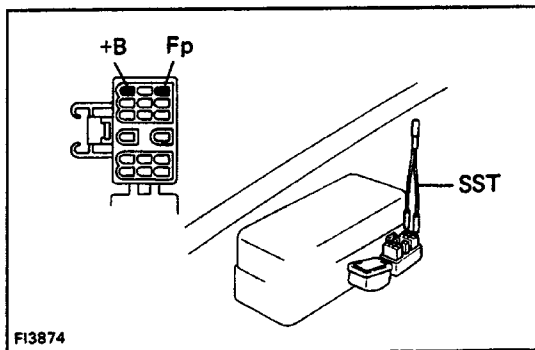

### 5. Check that there are no fuel leaks after performing any maintenance on the fuel system.

- (a) With engine stopped, turn the ignition switch On.
- (b) Using SST, connect terminals Fp and B of the DLC1. SST 09843-18020

HINT: The DLC1 is located near the No. 2 relay block.

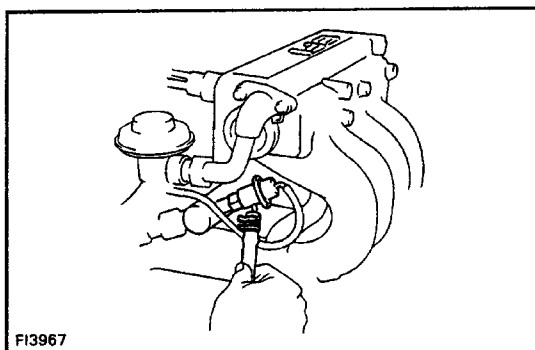

- (c) When the pressure regulator fuel return hose (shown in the illustration at left), is pinched, the pressure within the high pressure line will rise to approx. 392 kPa (4 kgf/cm<sup>2</sup>, 57 psi). In this state, check to see that there are no leaks from any part of the fuel system.

**NOTICE:** Always pinch the hose. Avoid bending the hose as it may cause the hose to crack.


## DIAGNOSIS SYSTEM DESCRIPTION

EG1XA-01

The ECM contains a built-in self-diagnosis system which detects troubles within the engine signal network and flashes the Malfunction Indicator Lamp in the combination meter.

By analyzing various signals shown in the table (See pages EG1-114, 115) the detects system malfunctions which are related to the various operating parameter sensors or to the actuator.

The ECM stores the failure code associated with the detected failure until the diagnosis system is cleared by removing the EFI fuse with the ignition switch off. The malfunction Indicator Lamp in the combination meter informs the driver that a malfunction has been detected. The light goes automatically when the malfunction has been corrected.

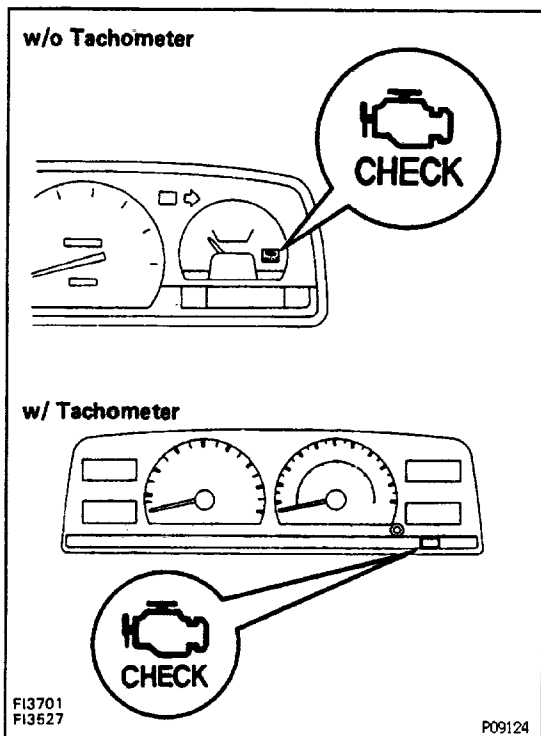


## MALFUNCTION INDICATOR LAMP

EG1XB-01

1. The Malfunction Indicator Lamp will come on when the ignition switch is placed at On and the engine is not running.
2. When the engine is started, the Malfunction Indicator Lamp should go off.

If the light remains on, the diagnosis system has detected a malfunction or abnormality in the system.

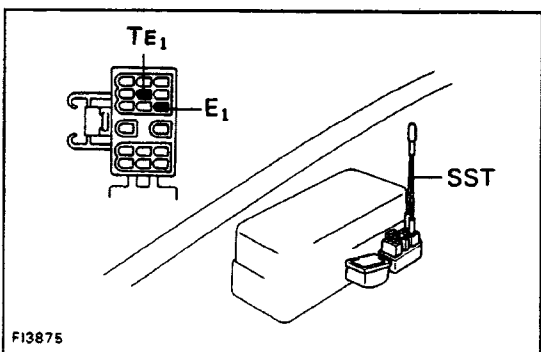

## DIAGNOSTIC TROUBLE CODES OUTPUT

To obtain an output of diagnostic trouble codes, proceed as follows:

### 1. Initial conditions

- (a) Battery voltage 11 volts or more.
- (b) Throttle valve fully closed (throttle position sensor IDL points closed).
- (c) Transmission in neutral range.



(d) Accessories switched OFF.

(e) Engine at normal operating temperature.

**2. Turn the ignition switch ON. Do not start the engine.**



**3. Using SST, connect terminals TE, and E, of the DLC**

**1.**

SST 09843-18020

HINT: The DLC1 is located near the No. 2 relay block.


**4. Read the diagnostic trouble code as indicated by the number of flashes of the Malfunction Indicator Lamp.**

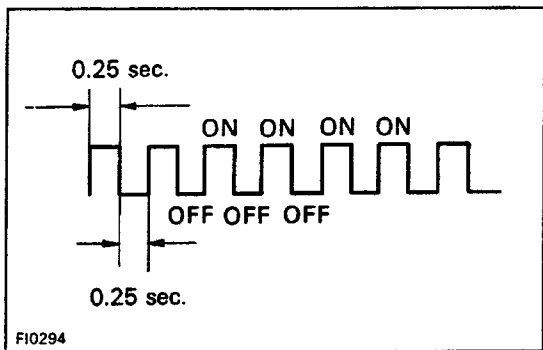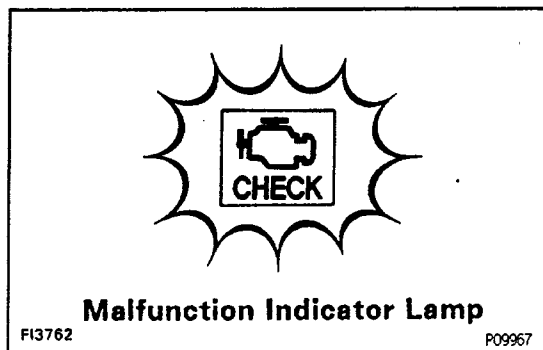

Diagnostic trouble code (See page [EG1-114](#) and 115)

(a) Normal System Operation

The lamp will blink 2 times per second.

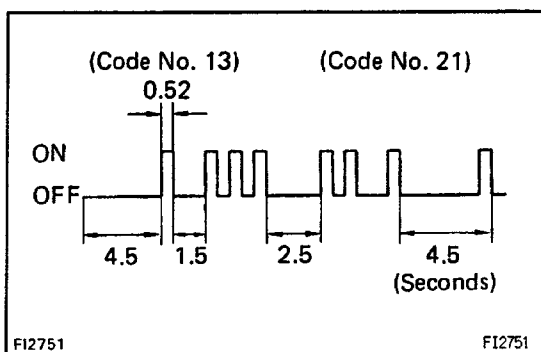


(b) Malfunction Code Indication

- The lamp will blink a number of times equal to the malfunction code with pauses as follows: 1. Between the first digit and second digit, 1.5 seconds. 2. Between code and code, 2.5 seconds. 3. Between all malfunction codes, 4.5 seconds.

The diagnostic trouble code series will be repeated as long as the DLC1 terminals TE1 and E1 are connected.

HINT: In the event of a number of trouble codes, indication will begin from the small value and continue to the larger in order.

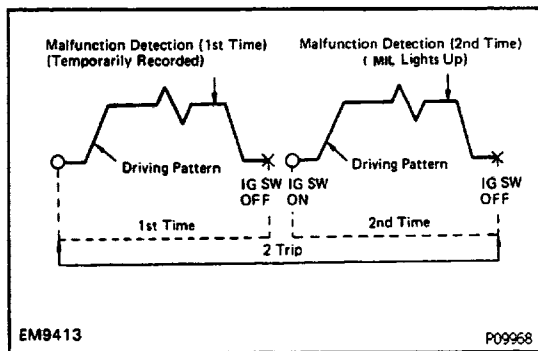


### (c) (2 trip detection logic)

The diagnostic trouble codes 21, 25, 26, 27 and 71 use "2 trip detection logic". With this logic, when a logic malfunction is first detected, the malfunction is temporarily stored in the ECM memory. If the same case is detected again during the second drive test, this second detection causes the Malfunction Indicator Lamp to light up.

The 2 trip repeats the same mode a 2nd time. (However, the IG SW must be turned OFF between the 1st time and 2nd time).

### 5. After the diagnostic check, remove SST.

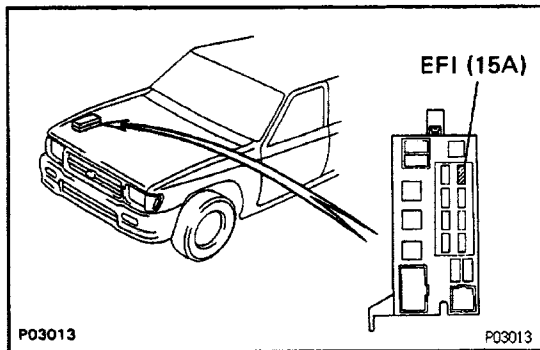

## DIAGNOSTIC TROUBLE CODES CANCELLATION

E01XC-01

1. After repair of the trouble area, the diagnostic trouble code retained in memory by the ECM must be canceled out by removing the EFI fuse (15A) 30 seconds or more, depending on ambient temperature (the lower the temperature, the longer the fuse must be left out) with the ignition switch off.

### HINT:

- Cancellation can also be done by removing the battery negative (-) terminal, but in this case other memory systems (radio ETR, etc.) will also be canceled out.
- If the diagnostic trouble code is not canceled out, it will be retained by the ECM and appear along with a new code in the event of future trouble.
- If it is necessary to work on engine components requiring removal of the battery terminal, a check must first be made to see if a diagnostic trouble code has been recorded.

2. After cancellation, road test the vehicle, if necessary, confirm that a 'normal' code is now read on the Malfunction Indicator Lamp.

If the same diagnostic trouble code appears, it indicates that the trouble area has not been repaired thoroughly.










## DIAGNOSIS INDICATION

- (1) When 2 or more codes are indicated, the lowest number (code) will appear first.
- (2) All detected diagnostic trouble codes, except for code No. 51 and No. 53, will be retained in memory by the ECM from the time of detection until canceled out.
- (3) Once the malfunction is cleared, the Malfunction Indicator Lamp on the instrument panel will go off but the diagnostic trouble code(s) remain stored in ECM memory (except for code 51 and 53).










# DIAGNOSTIC TROUBLE CODES

## HINT:

- If a malfunction is detected during the diagnostic trouble code check, refer to the circuit indicated in the table, and turn to the corresponding page.
- Your readings may vary from the parameters listed in the table, depending on the instruments used.

Code No.	Number of blinks Malfunction Indicator Lamp	System	MIL	Diagnosis	Trouble Area	*2 Memory	See Page
—	 FI1401	Normal	—	No trouble code is recorded.	—	—	—
12	 FI1389	RPM Signal	ON	No NE signal is input to the ECM for 2 secs. or more after STA turns ON.	<ul style="list-style-type: none"> <li>• Open or short in NE circuit</li> <li>• Distributor</li> <li>• Open or short in STA circuit</li> <li>• ECM</li> </ul>	○	IG-4 EG1-132 EG1-150 EG1-168
13	 FI1390	RPM Signal	ON	NE signal is not input to ECM for 300 msec. or more when engine speed is 1,500 rpm or more.	<ul style="list-style-type: none"> <li>• Open or short in NE circuit</li> <li>• Distributor</li> <li>• ECM</li> </ul>	○	IG-4
14	 FI1391	Ignition Signal	ON	IGF signal from igniter is not input to ECM for 4 consecutive ignition.	<ul style="list-style-type: none"> <li>• Open or short in IGF or IGT circuit from igniter to ECM</li> <li>• Igniter</li> <li>• ECM</li> </ul>	○	EG1-134 EG1-152 EG1-170
21	 FI1400	Main Oxygen Sensor Signal	ON	(1) Open or short in heater circuit of main oxygen sensor for 500 msec. or more. (HT) (2) At normal driving speed (below 60 mph and engine speed is above 1,700 rpm), amplitude of main oxygen sensor signal (OX 1) is reduced to between 0.35–0.70 V continuously for 60 secs. or more. *6 (2 trip detection logic) (2)	<ul style="list-style-type: none"> <li>• Open or short in heater circuit of main oxygen sensor</li> <li>• Main oxygen sensor heater</li> <li>• ECM</li> <li>• Open or short in main oxygen sensor circuit</li> <li>• Main oxygen sensor</li> <li>• ECM</li> </ul>	○	EG1-138 EG1-156 EG1-174
22	 FI1392	Engine Coolant Temp. Sensor Signal	ON	Open or short in engine coolant temp. sensor circuit for 500 msec. or more. (THW)	<ul style="list-style-type: none"> <li>• Open or short in engine coolant temp. sensor circuit</li> <li>• Engine coolant temp. sensor</li> <li>• ECM</li> </ul>	○	EG1-131 EG1-149 EG1-167
24	 FI1611	Intake Air Temp. Sensor Signal	*3 ON	Open or short in intake air temp. sensor circuit for 500 msec. or more. (THA)	<ul style="list-style-type: none"> <li>• Open or short in intake air temp. circuit</li> <li>• Intake air temp. sensor</li> <li>• ECM</li> </ul>	○	EG1-129 EG1-147 EG1-165
25	 FI2562	Air-Fuel Ratio Lean Mal-function	ON	(1) Oxygen sensor output is less than 0.45 V for at least 90 secs. when oxygen sensor is warmed up (racing at 2,000 rpm). —Only for code 25. *4 (2) When the air-fuel compensation value fluctuates more than 20% from the ECM set range within 60 secs. period while driving at 15 km/h (9 mph) or more at coolant temp. of 70°C (158°F) or above. *6 (2 trip detection logic) (1) and (2)	<ul style="list-style-type: none"> <li>• Engine ground bolt loose</li> <li>• Open in E1 circuit</li> <li>• Open in injector circuit</li> <li>• Fuel line pressure (injector blockage, etc.)</li> <li>• Open or short in oxygen sensor circuit</li> <li>• Oxygen sensor</li> <li>• Ignition system</li> <li>• Engine coolant temp. sensor</li> <li>• Volume air flow meter (Air intake)</li> <li>• ECM</li> </ul>	○	EG1-138 EG1-156 EG1-174 EG1-136 EG1-154 EG1-172
*5 26	 FI2563	Air-Fuel Ratio Rich Mal-function	ON		<ul style="list-style-type: none"> <li>• Engine ground bolt loose</li> <li>• Open in E1 circuit</li> <li>• Short in injector circuit</li> <li>• Fuel line pressure (injector leakage, etc.)</li> <li>• Open or short in cold start injector circuit</li> <li>• Cold start injector</li> <li>• Open or short in oxygen sensor circuit</li> <li>• Oxygen sensor</li> <li>• Engine coolant temp. sensor</li> <li>• Volume air flow meter</li> <li>• Compression pressure</li> <li>• ECM</li> </ul>	○	

## DIAGNOSTIC TROUBLE CODES (Cont'd)

Code No.	Number of blinks Malfunction Indicator Lamp	System	MIL	Diagnosis	Trouble Area	*2 Memory	See Page
*5 27	 F13294	Sub-Oxygen Sensor Signal	ON	(1) When sub-oxygen sensor is warmed up and full acceleration continued for 2 seconds, output of main oxygen sensor is 0.45 V or more (rich) and output of sub-oxygen sensor is 0.45 V or less (lean). (OX2) (2) Open or short detected continuously for 500 msec. or more in sub-oxygen sensor heater circuit *6 (2 trip detection logic) (1) and (2)	<ul style="list-style-type: none"> <li>Short or open in sub-oxygen sensor circuit</li> <li>Sub-oxygen sensor</li> <li>Open or short in sub-oxygen sensor heater</li> <li>ECM</li> </ul>	○	EG1-138 EG1-156 EG1-174
31	 F11394	Volume Air Flow Meter Signal	ON	Open or short detected continuously for 500 msec. or more in volume air flow meter circuit <ul style="list-style-type: none"> <li>Open - VC or E2</li> <li>Short - VC-E2 or VS-VC</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in volume air flow meter circuit</li> <li>Volume air flow meter</li> <li>ECM</li> </ul>	○	EG1-129 EG1-147 EG1-165
41	 F11396	Throttle Position Sensor Signal	-3 ON	Open or short detected in throttle position sensor signal (VTA) for 500 msec. or more.	<ul style="list-style-type: none"> <li>Open or short in throttle position sensor circuit</li> <li>Throttle position sensor</li> <li>ECM</li> </ul>	○	EG1-128 EG1-146 EG1-164
42	 F11397	Vehicle Speed Sensor Signal	OFF	SPD signal is not input to the ECM for at least 8 seconds during high load driving with engine speed between 2,200 rpm and 5,000 rpm.	<ul style="list-style-type: none"> <li>Open or short in vehicle speed sensor circuit</li> <li>Vehicle speed sensor</li> <li>ECM</li> </ul>	○	-
43	 F11398	Starter Signal	OFF	Starter signal (STA) is not input to ECM even once until engine reaches 800 rpm or more when cranking.	<ul style="list-style-type: none"> <li>Open or short in starter signal circuit</li> <li>Open or short in IG SW or main relay circuit</li> <li>ECM</li> </ul>	○	EG1-132 EG1-150 EG1-168
52	 F11618	Knock Sensor Signal	ON	With engine speed 2,000 rpm or more signal from knock sensor is not input to ECM for 25 revolution. (KNK)	<ul style="list-style-type: none"> <li>Open or short in knock signal circuit</li> <li>Knock sensor (looseness, ect.)</li> <li>ECM</li> </ul>	○	-
53	 F11619	Knock Control Signal	ON	The engine control computer (for knock control) malfunction is detected.	<ul style="list-style-type: none"> <li>ECM</li> </ul>	×	-
*5 71	 F12622	EGR System Malfunction	ON	With the coolant temp. at 65°C (149°F) or more, 50 seconds from start of EGR operation. The EGR gas temp. is less than 70°C (158°F) and the EGR gas temp. has risen less than 3°C during the 50 seconds. *6 (2 trip detection logic)	<ul style="list-style-type: none"> <li>Open in EGR gas temp. sensor circuit</li> <li>Open in VSV circuit for EGR</li> <li>EGR vacuum hose disconnected, valve stuck</li> <li>Clogged in EGR gas passage</li> <li>ECM</li> </ul>	○	EG1-140 EG1-158 EG1-176
51	 F11399	Switch Condition Signal	OFF	Displayed when IDL contact OFF or shift position in "R", "D", "2", or "1" ranges with the check terminals E1 and TE1 connected.	<ul style="list-style-type: none"> <li>Throttle position sensor IDL circuit</li> <li>PNP switch circuit</li> <li>Accelerator pedal, cable</li> <li>ECM</li> </ul>	×	EG1-127 EG1-145 EG1-163

## REMARKS

\*1: "ON" displayed in the diagnosis mode column indicates that the Malfunction Indicator Lamp is lighted up when a malfunction is detected.

"OFF" indicates that the MIL does not light up during malfunction diagnosis, even if a malfunction is detected.

\*2: "0" in the memory column indicates that a diagnostic code is recorded in the ECM memory when a malfunction occurs. "x" indicates that a diagnostic code is not recorded in the ECM memory even if a malfunction occurs. Accordingly, output of diagnostics results is performed with the IG SW ON.

\*3: The "Malfunction Indicator Lamp comes on if malfunction occurs only for California specifications.

\*4: No. (2) in the diagnostic contents of codes No.25 and 26 apply to California specification vehicles only. While

(1) applies to all models.

\*5: Codes 27 and 71 are used only for California specifications.

\*6: "2 trip detection logic" (See page [EG1-112](#))

**DIAGNOSTIC TROUBLE CODE DETECTION DRIVING PATTERN**

Purpose of the driving pattern.


- (a) To simulate diagnostic trouble code detecting condition after diagnostic trouble code is recorded.
- (b) To check that the malfunction is corrected when the repair is completed confirming that diagnostic trouble code is no longer detected.

DTC	21	Main Oxygen Sensor Circuit
<b>Malfunction: Main Oxygen Sensor Deterioration</b>		
<p>P02539</p>		
<p>(1) Disconnect the fuse EFI (15 A) for 10 sec. or more, with IG switch OFF.</p> <p>(2) Start the engine and warm the engine up with all ACC switch OFF.</p> <p>(3) After the engine is warmed up, let it idle for 3 min.</p> <p>(4) Accelerate gradually and maintain at approximately 1,500 rpm, or within the 1,300 to 1,700 rpm range. Turn the A/C on, and drive in "D" for A/T, or in case of M/T, upshift appropriately shift carefully so that the engine speed would not fall below 1,200 rpm. depress the accelerator pedal gradually and maintain a steady speed to avoid engine braking.</p> <p>(5) Maintain the vehicle speed at 40 – 50 mph. Keep the vehicle running for 1 – 2 min. after starting acceleration.</p> <p>(6) After driving, stop at a safe place and turn the IG switch OFF for 3 sec. or more.</p> <p>(7) Start the engine and perform steps (3), (4) and (5) again.</p> <p>HINT: If a malfunction is detected, the Malfunction Indicator Lamp will light up during step (7).</p> <p><b>NOTICE: If this procedure is not strictly followed, you can not detect the malfunctions.</b></p>		

## DIAGNOSTIC TROUBLE CODE DETECTION DRIVING PATTERN (Cont'd)

Purpose of the driving pattern.

- (a) To simulate diagnostic trouble code detecting condition after diagnostic trouble code is recorded.
- (b) To check that the malfunction is corrected when the repair is completed confirming that diagnostic trouble code is no longer detected.

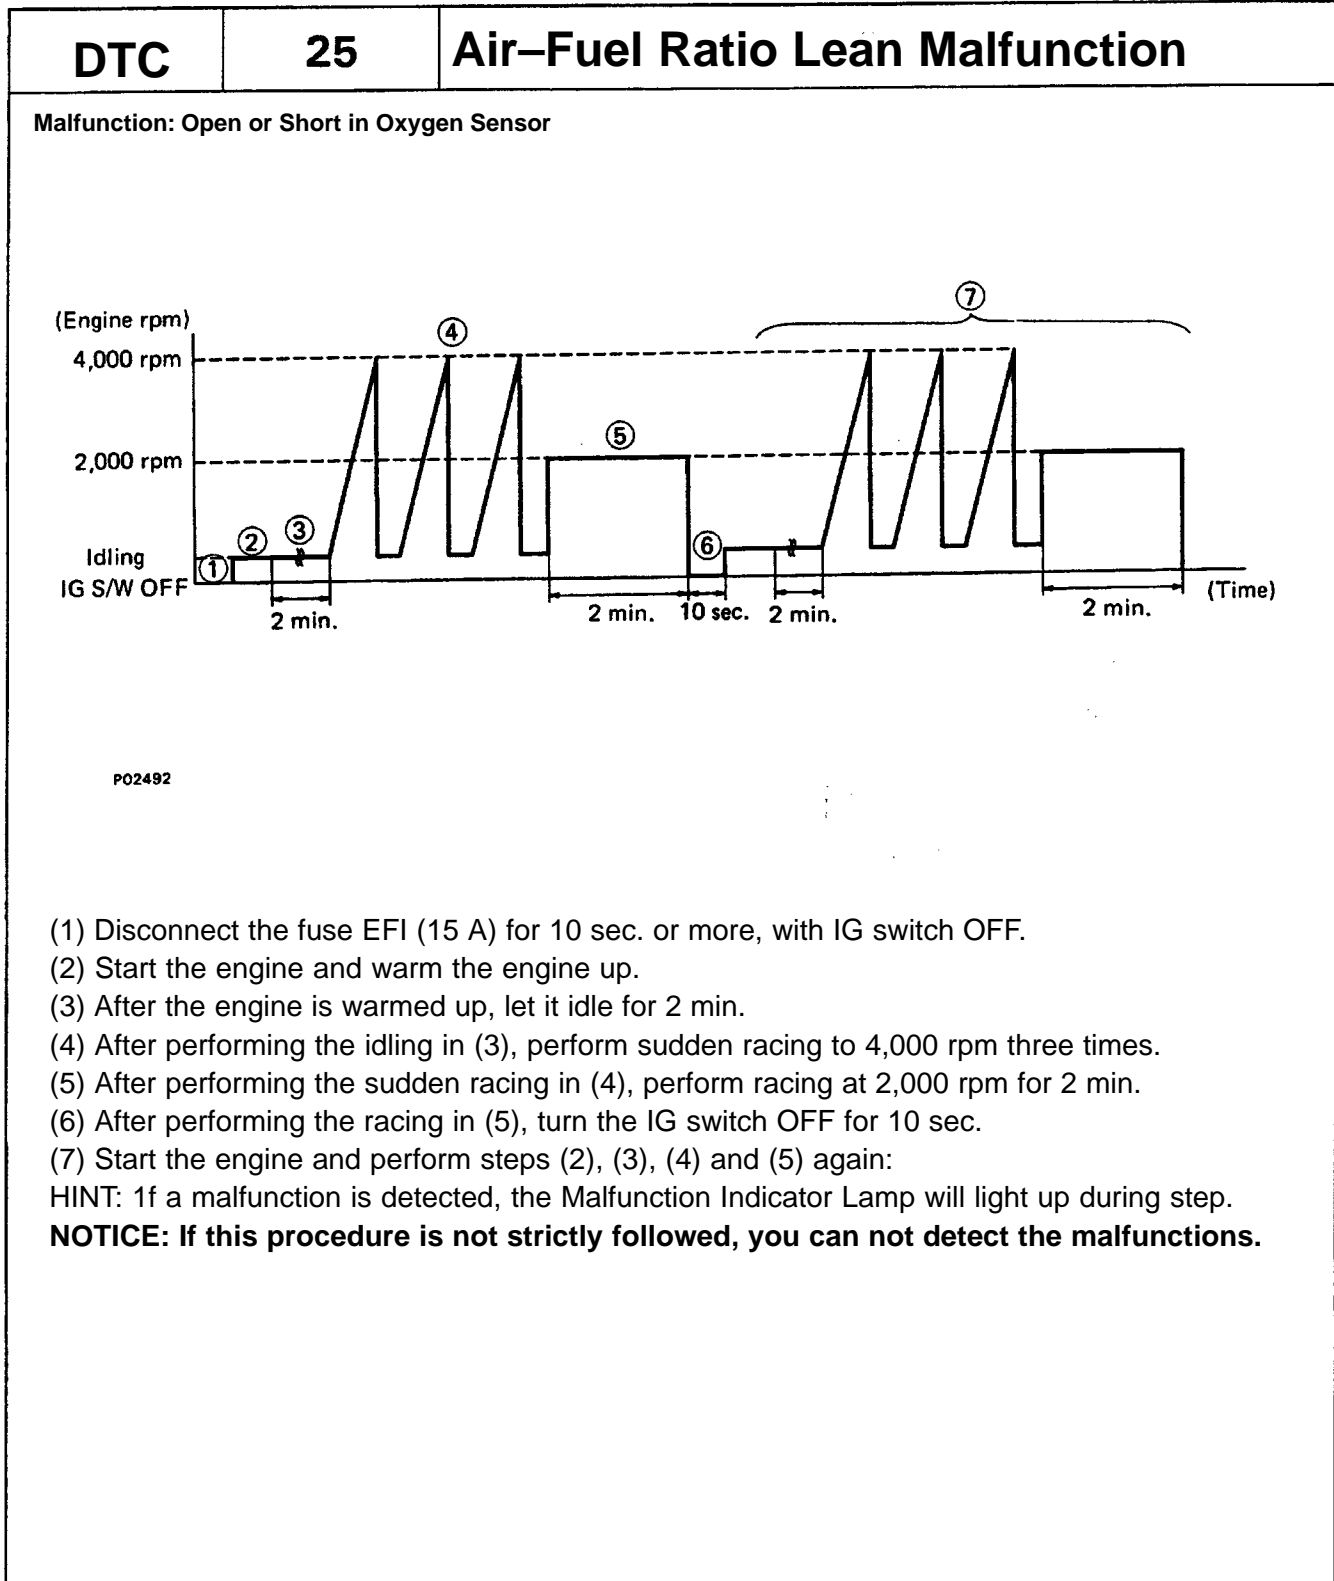


**DIAGNOSTIC TROUBLE CODE DETECTION DRIVING PATTERN (Cont'd)**

Purpose of the driving pattern.

- (a) To simulate diagnostic trouble code detecting condition after diagnostic trouble code is recorded.
- (b) To check that the malfunction is corrected when the repair is completed confirming that diagnostic trouble code is no longer detected.

<b>DTC</b>	<b>25</b>	<b>Air-Fuel Ratio Lean Malfunction (CALIFORNIA)</b>
	<b>26</b>	<b>Air-Fuel Ratio Rich Malfunction (CALIFORNIA)</b>

**Malfunction: Open or Short in Oxygen Sensor, Open or Short in Injector Leak, Blockage**

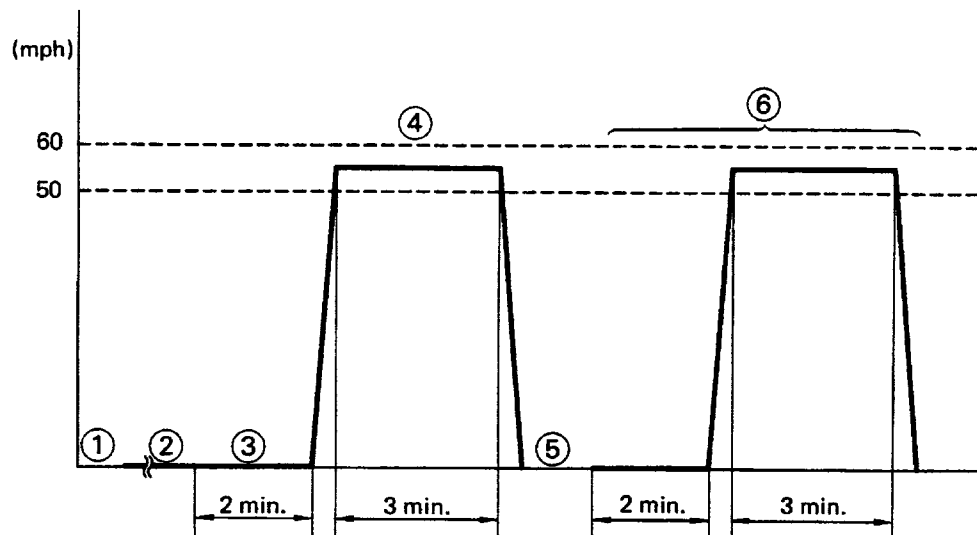

P02538

- ① Disconnect the EFI fuse (15 A) for 10 sec. or more, with IG switch OFF.
- ② Start the engine and warm the engine up with all ACC switch OFF.
- ③ After the engine is warmed up, let it idle for 2 min.
- ④ With the transmission in 5th gear ("D" range for A/T), drive at 50 – 60 mph for 3 min.
- ⑤ After driving, stop at a safe place and turn the IG switch OFF for 3 – 10 sec.
- ⑥ Start the engine and perform steps (3) and (4) again.

**HINT:** If a malfunction is detected, the Malfunction Indicator Lamp will light up during step (6).

**NOTICE:** If this procedure is not strictly followed, you can not detect the malfunctions.



**DIAGNOSTIC TROUBLE CODE DETECTION DRIVING PATTERN (Cont'd)**

Purpose of the driving pattern.

- (a) To simulate diagnostic trouble code detecting condition after diagnostic trouble code is recorded.
- (b) To check that the malfunction is corrected when the repair is completed confirming that diagnostic trouble code is no longer detected.

DTC	27	Sub-Oxygen Sensor Circuit
Malfunction: Open or Short in Sub-Oxygen Sensor		
P02541		
<ul style="list-style-type: none"> <li>① Disconnect the fuse EFI (15 A) for 10 sec. or more, with IG switch OFF.</li> <li>② Start the engine and warm the engine up with all ACC switch OFF.</li> <li>③ After the engine is warmed up, let it drive at 50 – 55 mph for 10 min. or more.</li> <li>④ After driving, stop at a safe place and perform idling for 2 min. or less.</li> <li>⑤ After performing the idling in (4) , perform acceleration to 60 mph with the throttle fully open and drive at 60 mph for 1 min.</li> <li>⑥ After driving, stop at a safe place and turn the IG switch OFF for 3 sec. or more..</li> <li>⑦ Start the engine and perform steps (3) , (4), and (5) again.</li> </ul>		
HINT: If a malfunction is detected, the Malfunction Indicator Lamp will light up during step (7).		
<b>NOTICE: If this procedure is not strictly followed, you can not detect the malfunctions.</b>		



**DIAGNOSTIC TROUBLE CODE DETECTION DRIVING PATTERN (Cont'd)**

Purpose of the driving pattern.

- (a) To simulate diagnostic trouble code detecting condition after diagnostic trouble code is recorded.
- (b) To check that the malfunction is corrected when the repair is completed confirming that diagnostic trouble code is no longer detected.

DTC	71	EGR System Malfunction
<b>Malfunction: Short in VSV Circuit for EGR, Loose EGR Hose, Valve Stuck</b>		
<p>The graph illustrates a driving pattern for detecting an EGR system malfunction. The vertical axis represents speed in miles per hour (mph), with dashed lines at 50 and 60 mph. The horizontal axis represents time. The pattern is as follows:</p> <ul style="list-style-type: none"> <li><b>Step 1:</b> Idle at 0 mph for 2 minutes. This segment is marked with circled numbers 1, 2, and 3.</li> <li><b>Step 4:</b> Accelerate to a speed between 50 and 60 mph and maintain it for 3 minutes. This segment is marked with circled number 4.</li> <li><b>Step 5:</b> Decelerate to 0 mph and idle for 2 minutes. This segment is marked with circled number 5.</li> <li><b>Step 6:</b> Accelerate to a speed between 50 and 60 mph and maintain it for 3 minutes. This segment is marked with circled number 6.</li> </ul>		
<p>P02538</p>		
<ul style="list-style-type: none"> <li>① Disconnect the EFI fuse (15 A) for 10 sec. or more, with IG switch OFF.</li> <li>② Start the engine and warm the engine up with all ACC switch OFF.</li> <li>③ After the engine is warmed up, let it idle for 2 min.</li> <li>④ With the transmission in 5th gear ("D" range for AIT), drive at 50 – 60 mph for 3 min.</li> <li>⑤ After driving, stop at a safe place and turn the IG switch OFF for 3 – 10 sec.</li> <li>⑥ Start the engine and perform steps (3), and (4) again.</li> </ul>		
<p>HINT: If a malfunction is detected, the Malfunction Indicator Lamp will light up during step (6).</p>		
<p><b>NOTICE: If this procedure is not strictly followed, you can not detect the malfunctions.</b></p>		

## INSPECTION OF DIAGNOSIS CIRCUIT

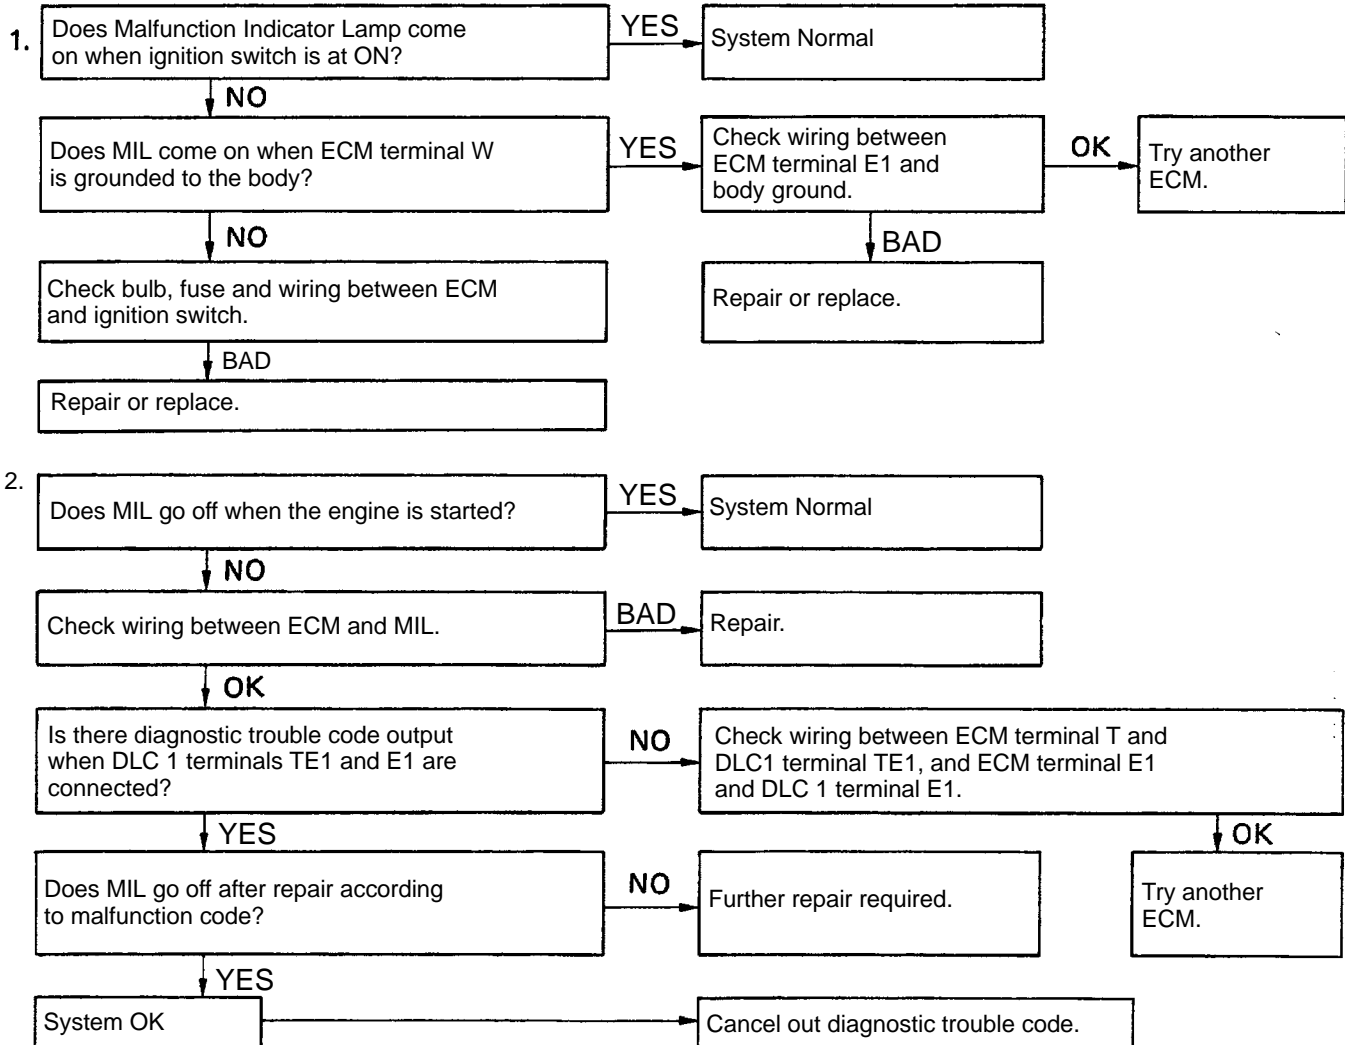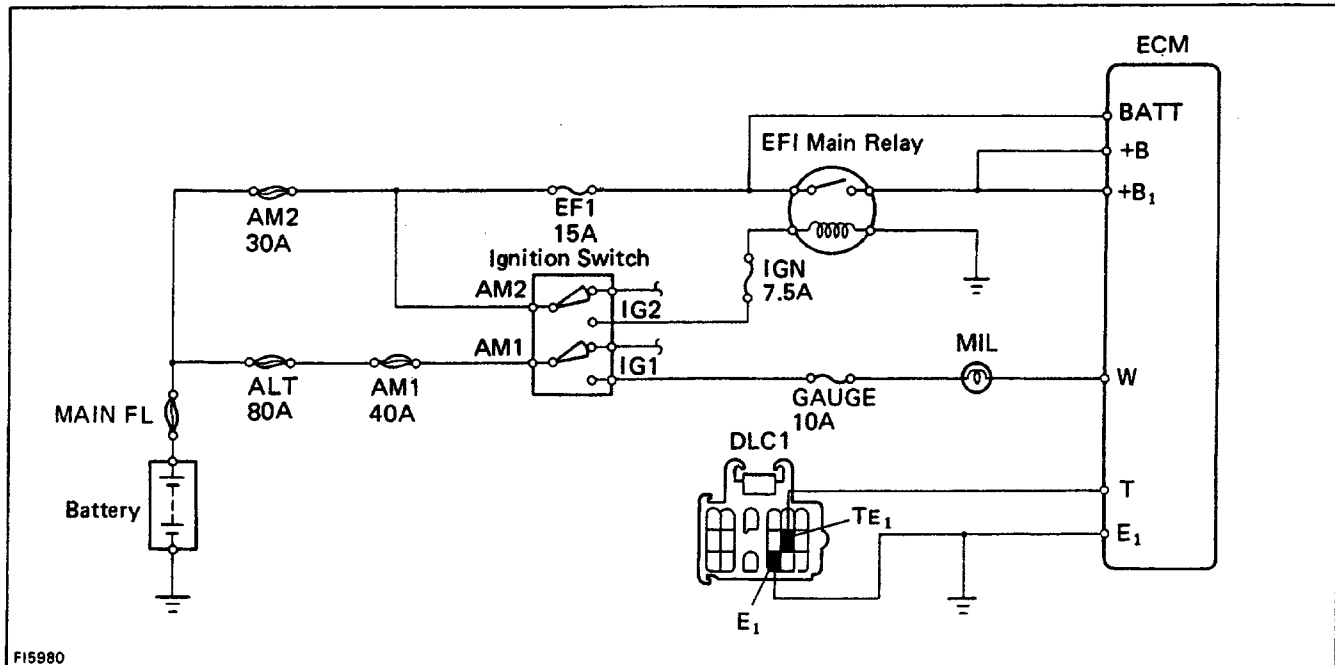

## TROUBLESHOOTING WITH VOLT OHMMETER

HINT: Because the following troubleshooting procedures are designed for inspection of each separate system, the actual troubleshooting procedure may vary somewhat.


However, please refer to these procedures and perform actual troubleshooting, conforming to the inspection methods described.

For example it is better to first make a simple check of the fuses, fusible links and connecting condition of the connectors before making your inspection according to the procedures listed.


The following troubleshooting procedures are based on the supposition that the trouble lies in either a short or open circuit in a component outside the computer or a short circuit within the computer. If engine trouble occurs even though proper operating voltage is detected in the computer connector, then the ECM is faulty and should be replaced.

### FUSES, H-FUSES AND FUSIBLE LINK LOCATION

EG1XG-01

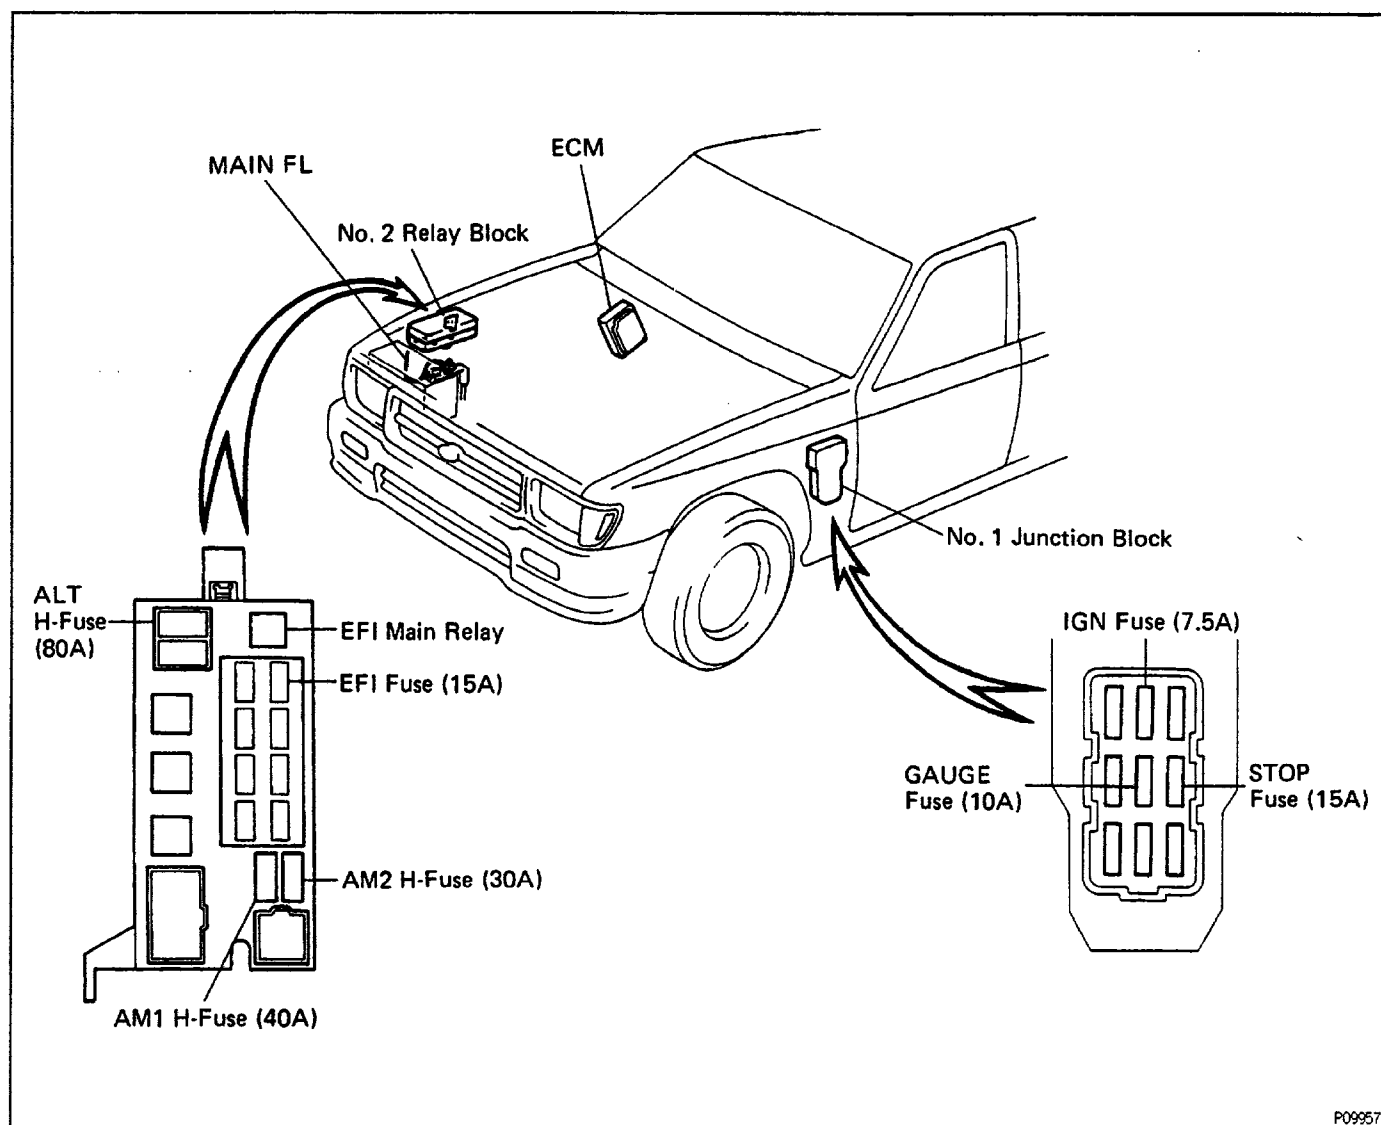

P09957

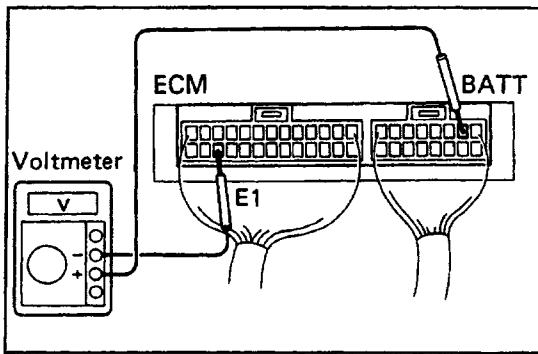

## SYSTEM CHECK PROCEDURE (2WD)

EG1KH-01

### HINT:


- Perform all voltage measurements with the connectors connected.
- Verify that the battery voltage is 11 V or more when the ignition switch is in "ON" position.  
Using a voltmeter with high impedance (10 kΩ/V minimum), measure the voltage at each terminal of the wiring connectors.

## Terminals of ECM (2WD)

Symbol	Terminal Name	Symbol	Terminal Name
E <sub>01</sub>	ENGINE GROUND	E <sub>2</sub>	SENSOR GROUND
E <sub>02</sub>	ENGINE GROUND	*2 NSW	PNP SWITCH
No.10	INJECTOR	STJ	COLD START INJECTOR
No.20	INJECTOR	HT <sub>1</sub>	OXYGEN SENSOR HEATER (MAIN)
STA	STARTER SWITCH	*1 HT <sub>2</sub>	OXYGEN SENSOR HEATER (SUB)
E <sub>1</sub>	ENGINE GROUND	TE <sub>1</sub>	DLC 1
Ox <sub>1</sub>	OXYGEN SENSOR (MAIN)	V <sub>F</sub>	DLC 1
*1 Ox <sub>2</sub>	OXYGEN SENSOR (SUB)	TE <sub>2</sub>	DLC 1
*1 THG	EGR GAS TEMP. SENSOR	AS	PAIR VALVE
Ne	DISTRIBUTOR	Fpu	FUEL PRESSURE CONTROL VSV
IGf	IGNITER	*2 ECT	OD relay
THA	INTAKE AIR TEMP. SENSOR	*1 EGR	EAR VSV
IGt	IGNITER	SPD	SPEED SENSOR
IDL	THROTTLE POSITION SENSOR	STP	STOP LIGHT SWITCH
Vc	VOLUME AIR FLOW METER	E <sub>21</sub>	SENSOR GROUND
Vcc	THROTTLE POSITION SENSOR	BATT	BATTERY POSITIVE VOLTAGE
Vs	VOLUME AIR FLOW METER	W	MALFUNCTION INDICATOR LAMP
VTA	THROTTLE POSITION SENSOR	+B <sub>1</sub>	MAIN RELAY
THW	ENGINE COOLANT TEMP. SENSOR	+B	MAIN RELAY

\*1: California only \*2: A/T only




### ECM Terminals

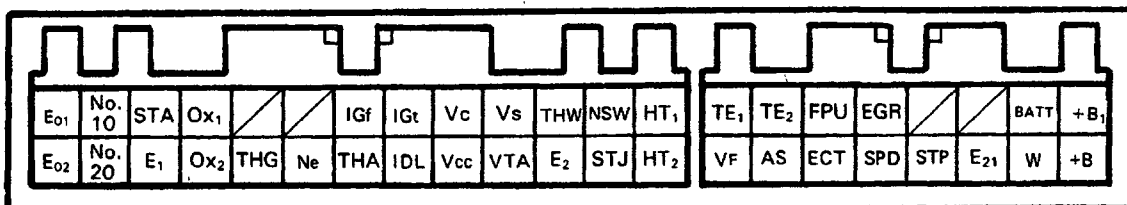


## Voltage at ECM Wiring Connectors (2WD)

No.	Terminals	Condition		STD voltage	See page
1	BATT – E <sub>1</sub>	–		9 – 14	EG1-125
	+B – E <sub>1</sub>	Ignition switch ON			
	+B <sub>1</sub> – E <sub>1</sub>				
2	IDL – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Throttle valve open	9 – 14	EG1-127
	Vcc – E <sub>2</sub> (E <sub>21</sub> )		–	4.5 – 5.5	
	VTA – E <sub>2</sub> (E <sub>21</sub> )		Throttle valve fully closed	0.3 – 0.8	
			Throttle valve fully open	3.2 – 4.9	
3	Vc – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	–	6 – 10	EG1-129
	Vs – E <sub>2</sub> (E <sub>21</sub> )		Measuring plate fully closed	0.5 – 2.5	
			Measuring plate fully open	5 – 10	
	THA – E <sub>2</sub> (E <sub>21</sub> )	Idling		2 – 8	
		Ignition switch ON	Intake air temperature 20°C (68° F)	0.5 – 3.4	
4	THW – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Coolant temperature 80°C (176° F)	0.2 – 1.0	EG1-131
5	STA – E <sub>1</sub>	Ignition switch START position		6 – 12	EG1-132
6	No. 10 – E <sub>01</sub> No. 20 – E <sub>02</sub>	Ignition switch ON		9 – 14	EG1-133
7	IGt – E <sub>1</sub>	Idling		0.7 – 1.0	EG1-134
8	W – E <sub>1</sub>	No trouble (MIL off) and engine running		9 – 14	EG1-135
9	STJ – E <sub>1</sub>	Ignition switch START position	Coolant temperature 80 °C (176°F)	6 – 12	EG1-136
10	STP – E <sub>1</sub>	Stop light switch ON		7.5 – 14	EG1-137



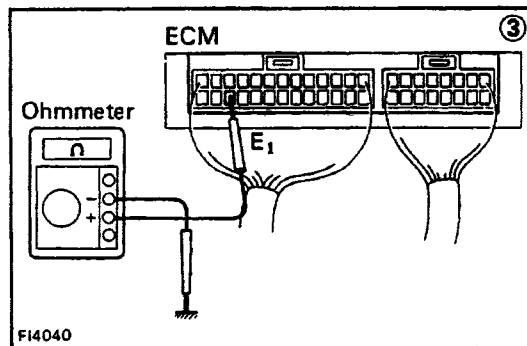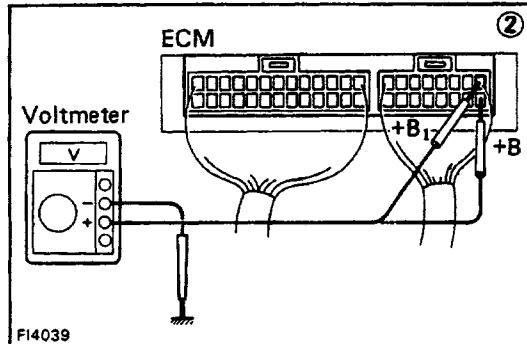
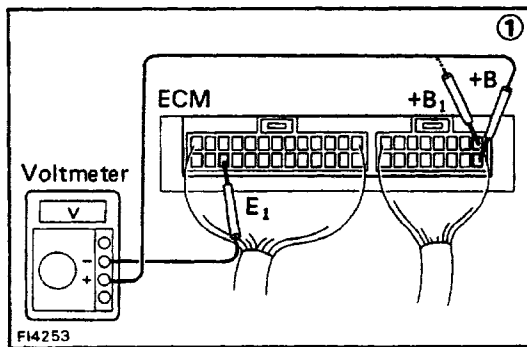


### • +B (+B1) - E 1

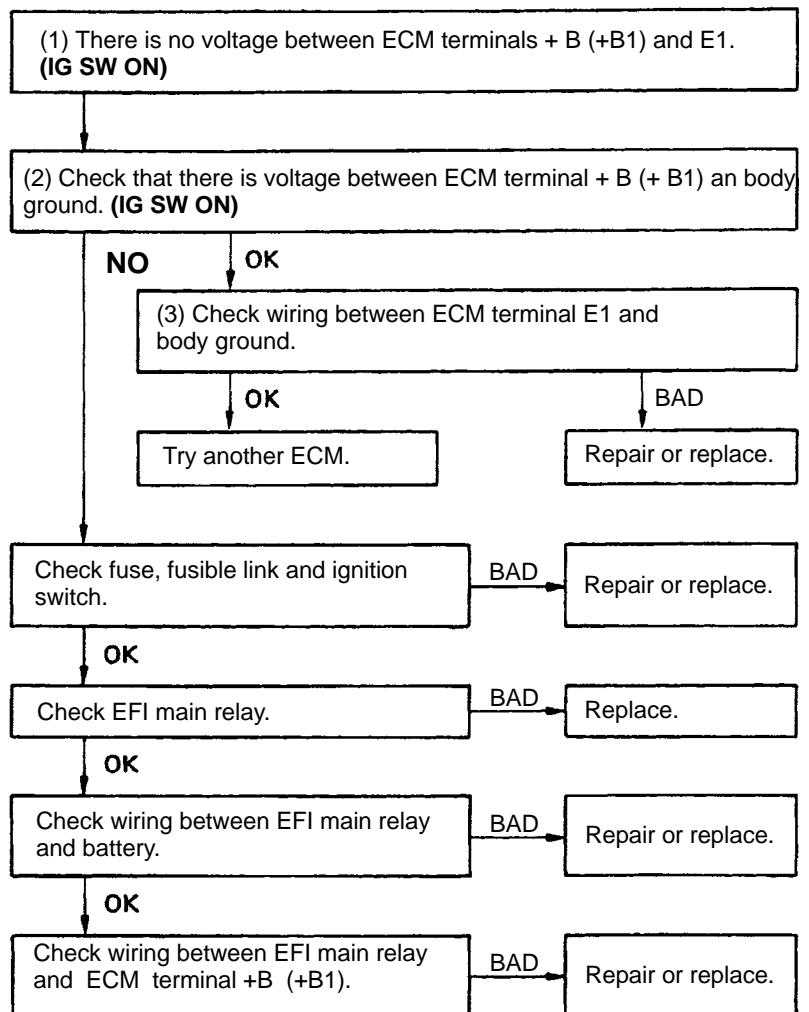



No.	Terminals	Trouble	Condition		STD Voltage
2	IDL – E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	Throttle valve open	9 – 14 V
	Vcc – E <sub>2</sub> (E <sub>21</sub> )			–	4.5 – 5.5 V
	VTA – E <sub>2</sub> (E <sub>21</sub> )			Throttle valve fully closed	0.3 – 0.8 V
				Throttle valve fully open	3.2 – 4.9 V

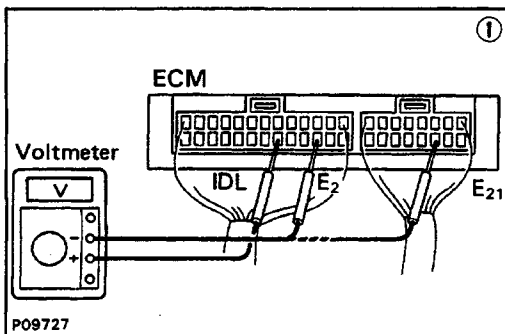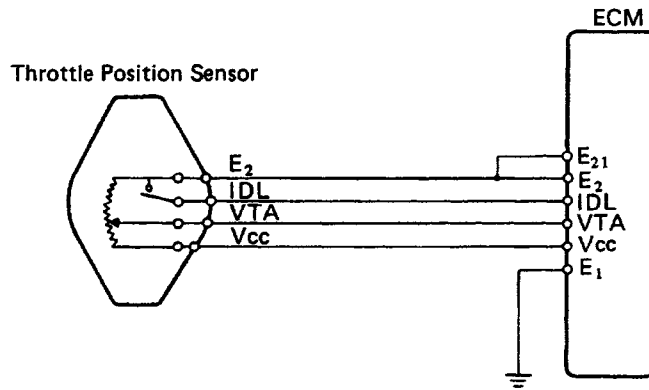

### • IDL - E2 (E21)

(1) There is no voltage between ECM terminals IDL and E2 (E21).  
(IG SW ON) (Throttle valve open)

(2) Check that there is voltage between ECM terminal +B (+B1) and body ground. (IG SW ON)

NO

Refer to No. 1.

BAD

Replace or repair.

OK

Check wiring between ECM terminal E1 and body ground.

OK

BAD

Replace or repair.

BAD

Check throttle position sensor.

BAD



Replace or repair throttle position sensor.






OK

Check wiring between ECM and throttle position sensor.


OK

Try another ECM.

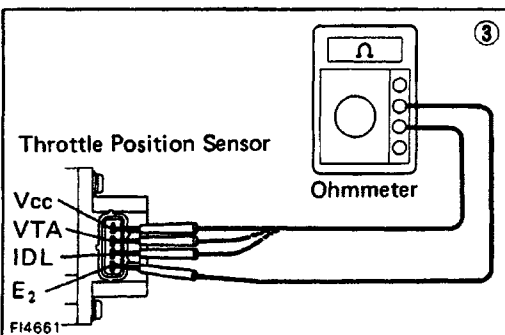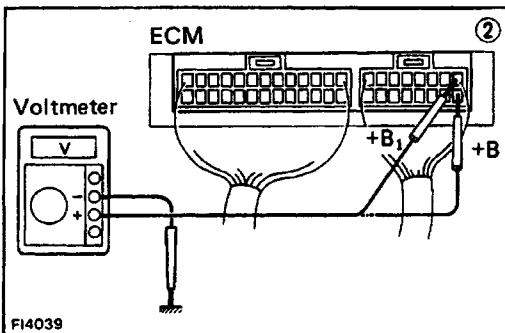


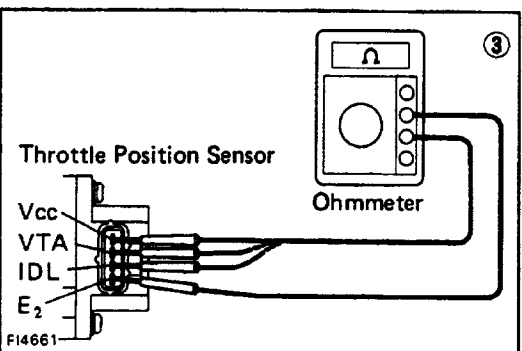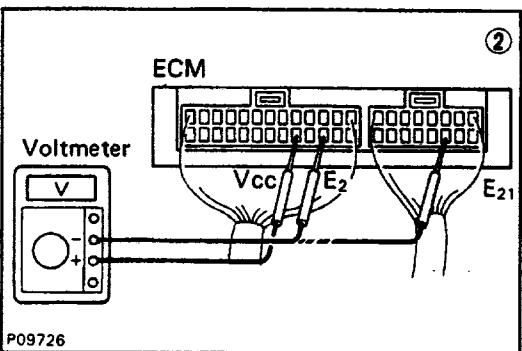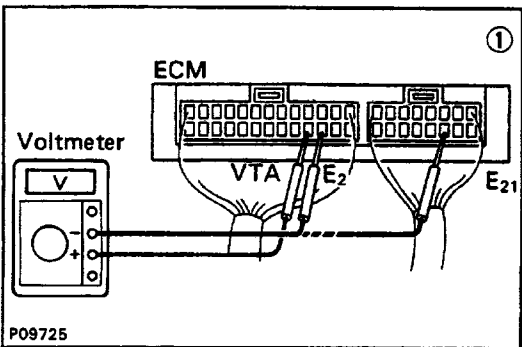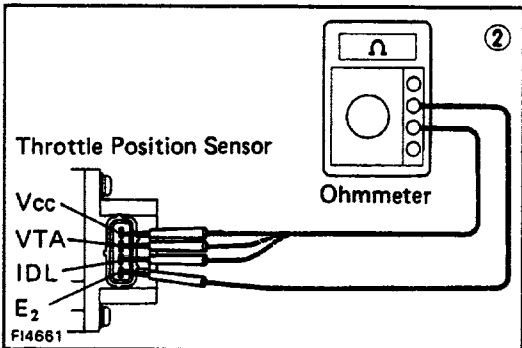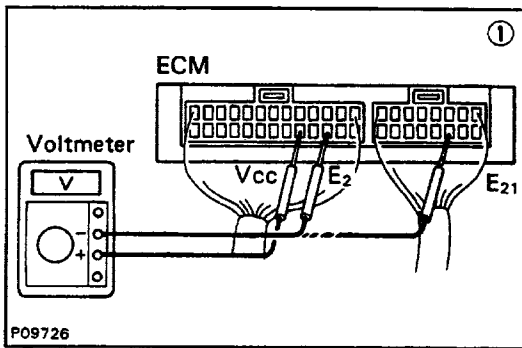


### • Vcc - E2 (E21)

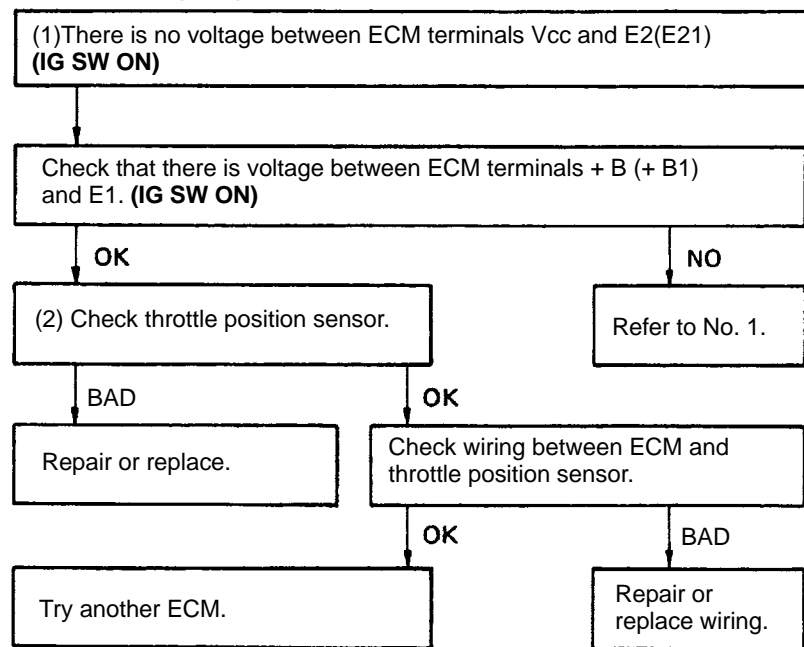


### • VTA - E2 (E21)

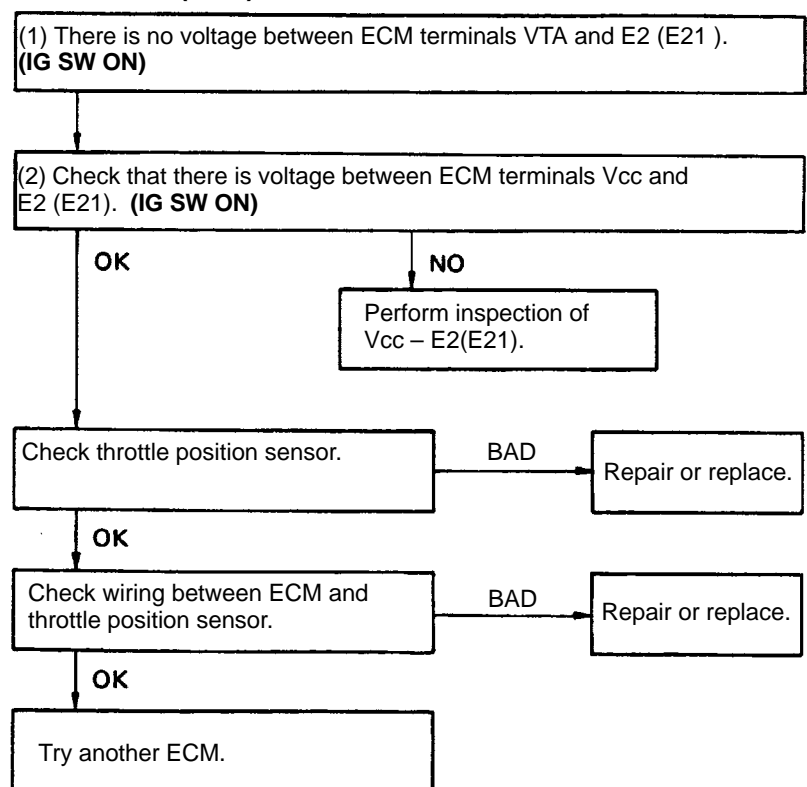

No.	Terminals	Trouble	Condition		STD Voltage
3	<b>V<sub>c</sub> – E<sub>2</sub> (E<sub>21</sub>)</b>	No voltage	Ignition switch	—	<b>6 – 10 V</b>
	Measuring plate fully closed			<b>0.5 – 2.5 V</b>	
	Measuring plate fully open			<b>5 – 10 V</b>	
	ON                      Idling		<b>2 – 8 V</b>		
	<b>THA – E<sub>2</sub> (E<sub>21</sub>)</b>		Ignition switch ON	Intake air temperature 20°C (68° F)	<b>0.5 – 3.4 V</b>

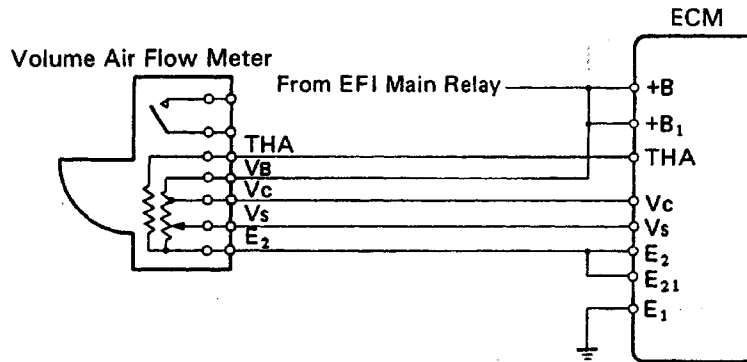

FI3881

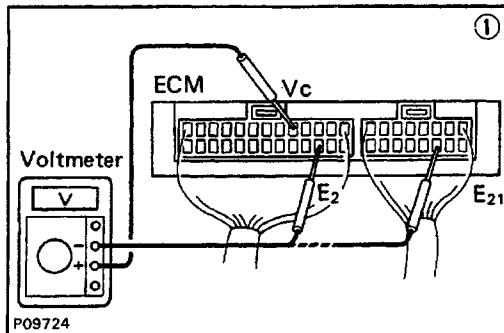

P09724

### • $V_c - E_2 (E_{21})$

(1) There is no voltage between ECM terminals  $V_c$  and  $E_2 (E_{21})$ . (IG SW ON)

(2) Check that there is voltage between ECM terminals + B (+ B1) and  $E_1$ . (IG SW ON)

OK

NO

(3) Check volume air flow meter.

Refer to No. 1.

BAD

OK

Replace or repair volume air flow meter.


Check wiring between ECM and volume air flow meter.

OK


BAD

Try another ECM.






Replace or repair wiring.

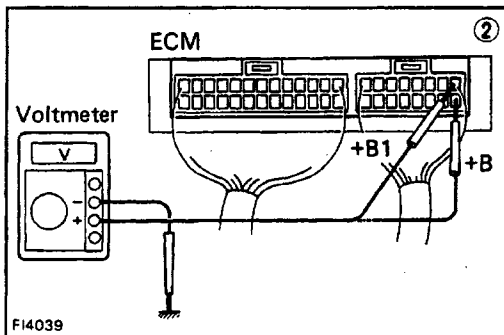


FI4039

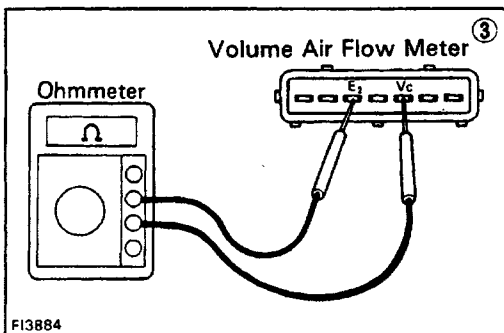


FI3884

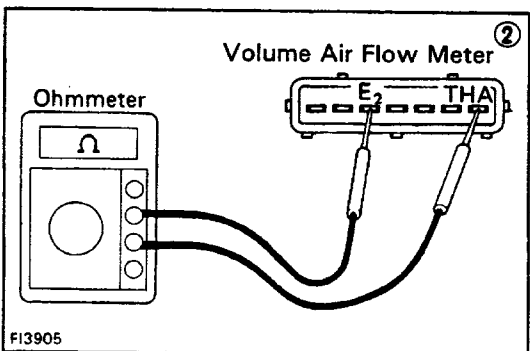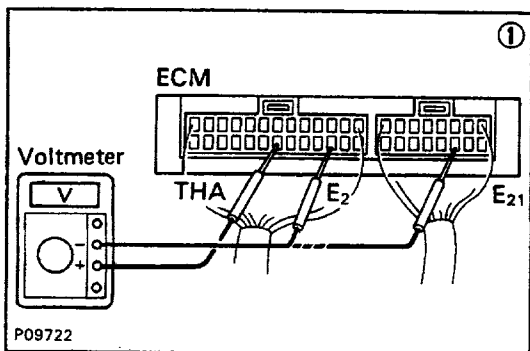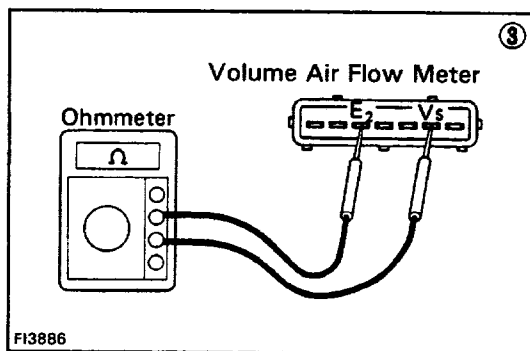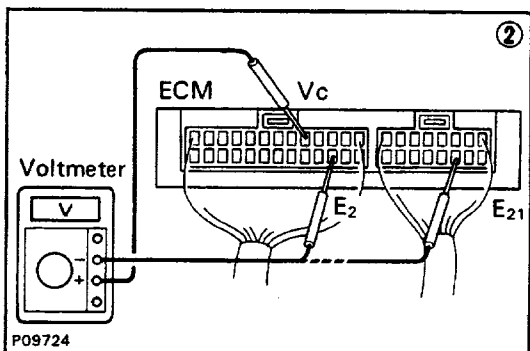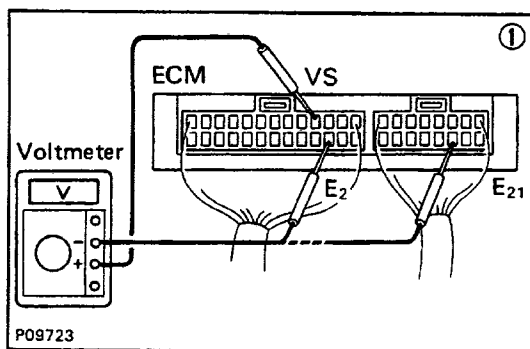


### • Vs - E2 (E21)

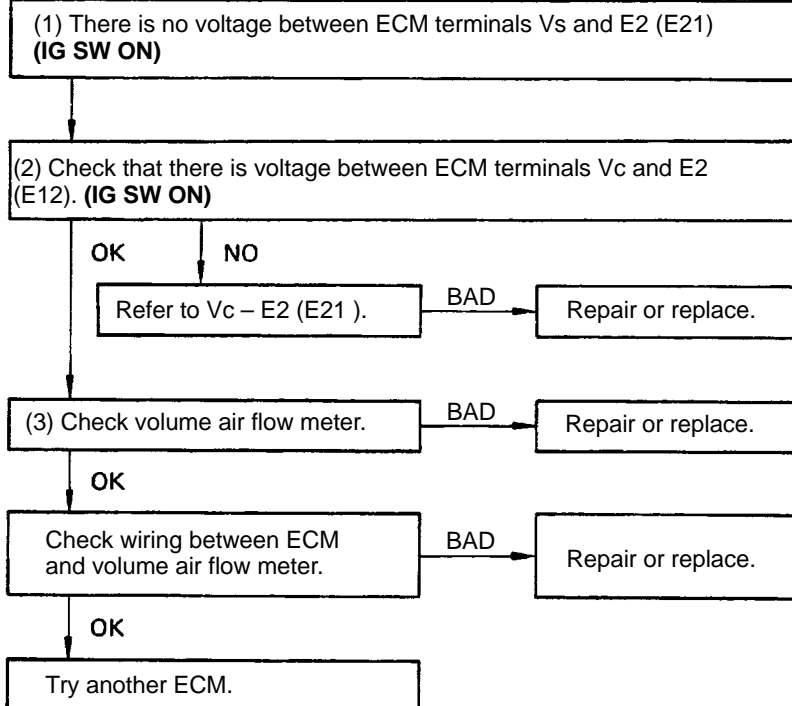


### • THA - E2 (E21)

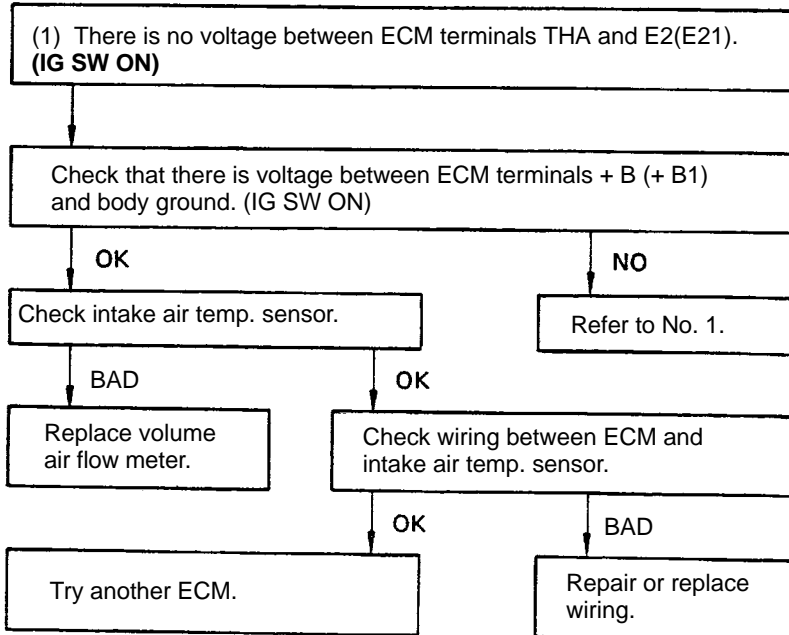

No.	Terminals	Trouble	Condition		STD Voltage
4	THW - E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	Coolant temperature 80°C (176° F)	0.2 - 1.0 V

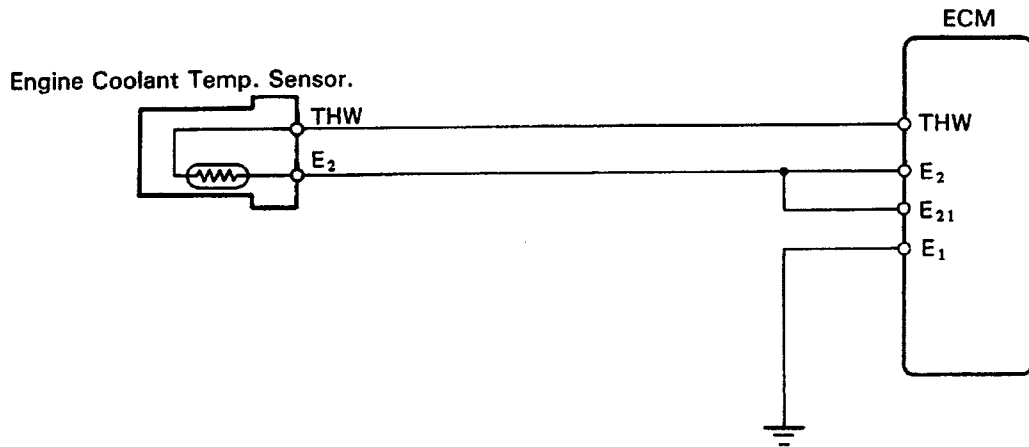

FI5971

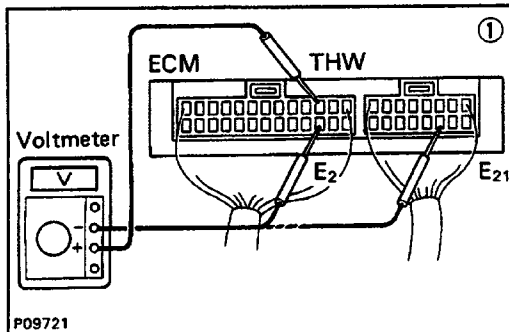

(1) There is no voltage between ECM terminals THW and E<sub>2</sub> (E<sub>21</sub>) (IG SW ON)

(2) Check that there is voltage between ECM terminal + B (+ B<sub>1</sub>) and body ground. (IG SW ON)

OK

NO

Refer to No. 1.

Check wiring between ECM terminal E<sub>1</sub> and body ground.

OK

BAD

(3) Check engine coolant temp. sensor.

Repair or replace.

BAD

Replace engine coolant temp. sensor.



Check wiring between ECM and engine coolant temp. sensor.


OK

BAD


Try another ECM

Repair or replace.

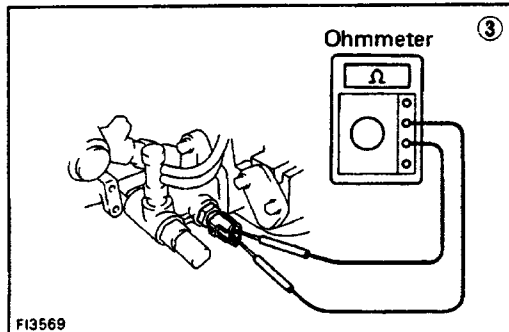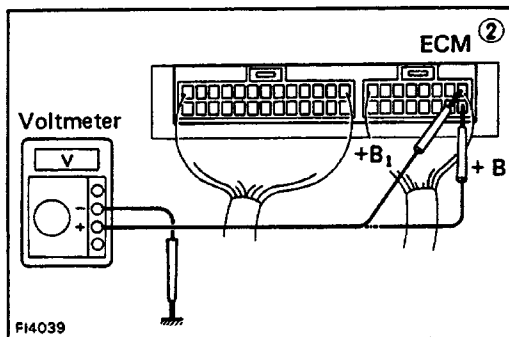


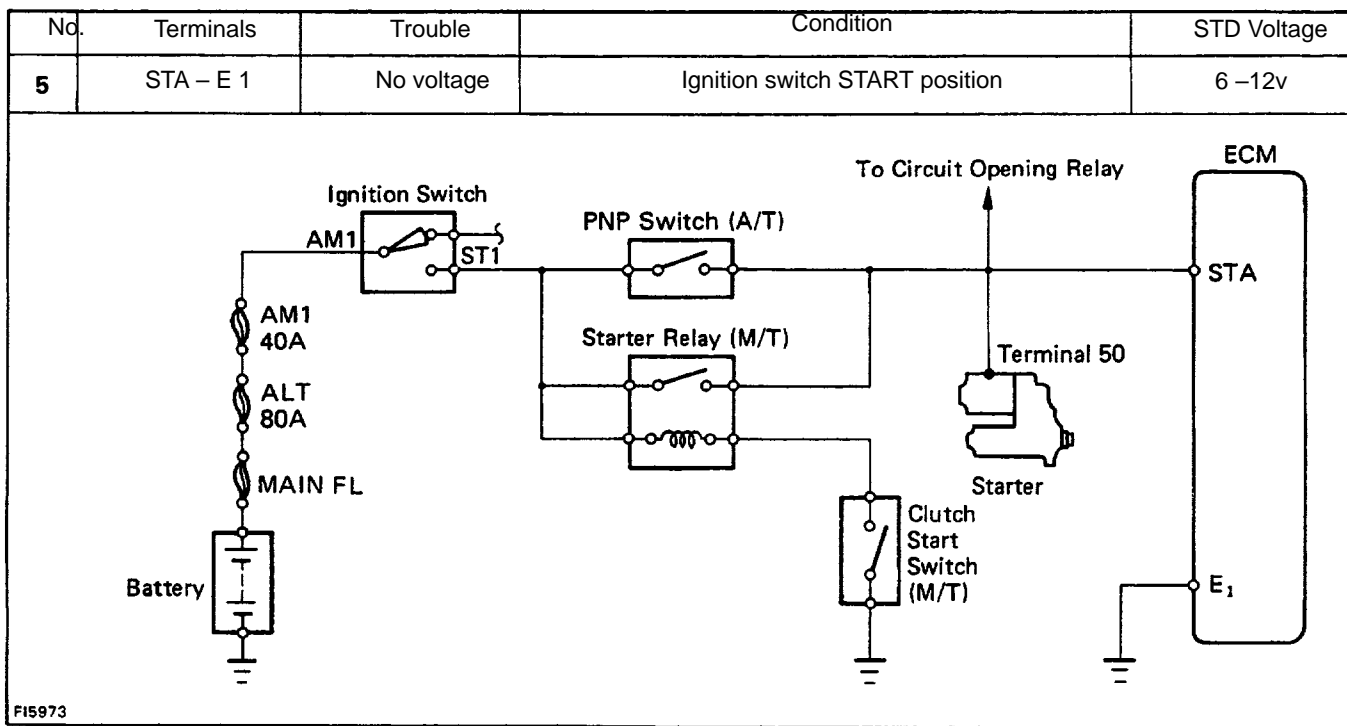


FI5973

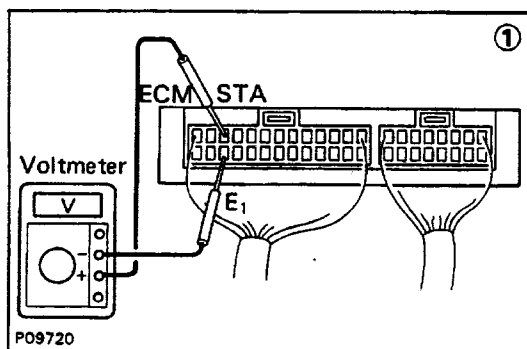


PO9720

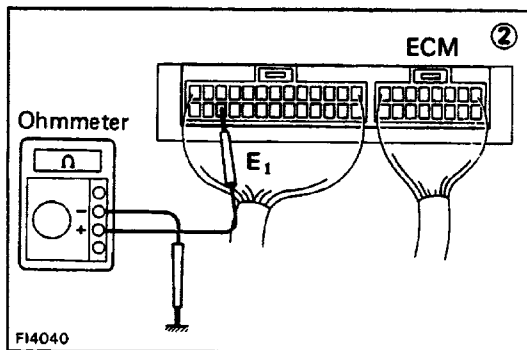


FI4040

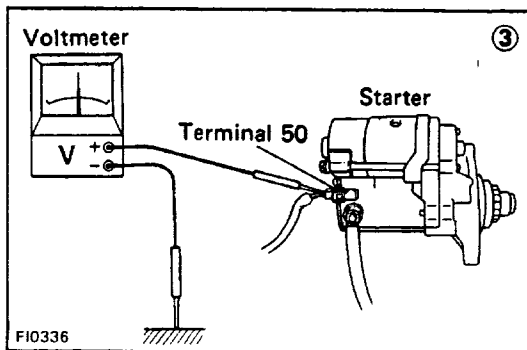


FI0336

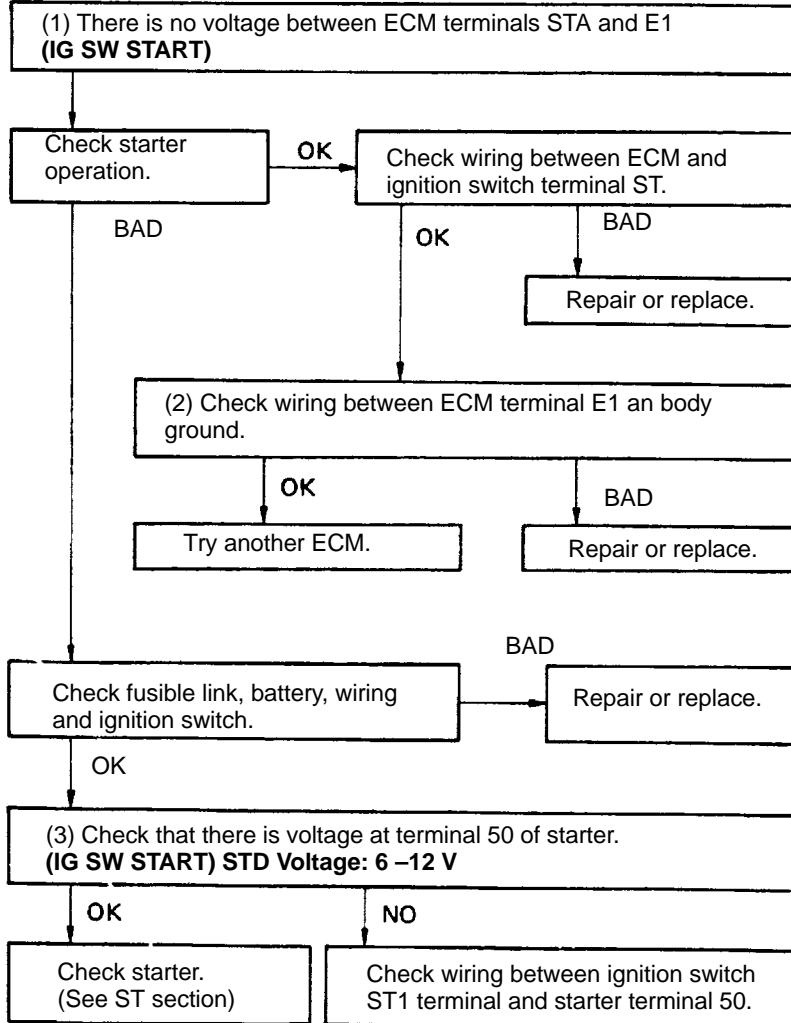


No.	Terminals	Trouble	Condition	STD Voltage
6	No. 10 - E <sub>01</sub> No. 20 - E <sub>02</sub>	No voltage	Ignition switch ON	9 - 14 V

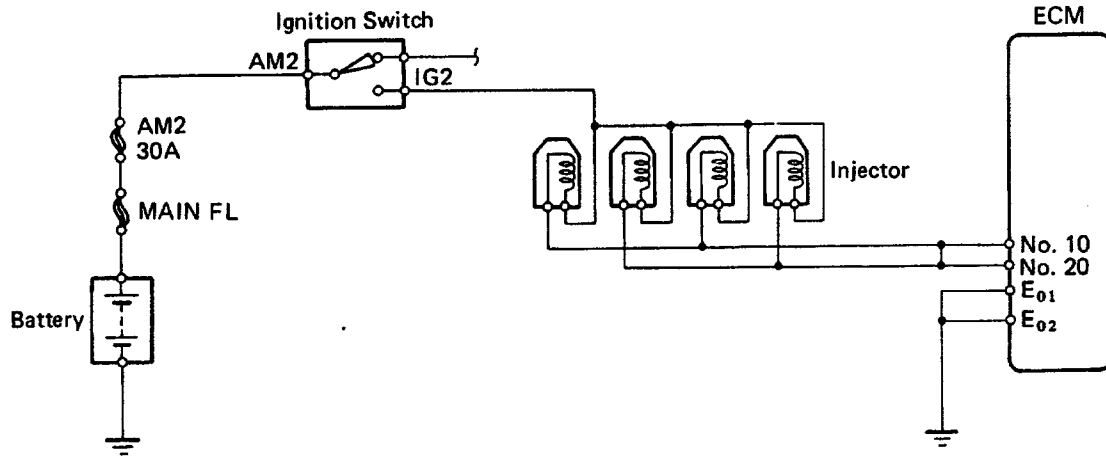


F15975

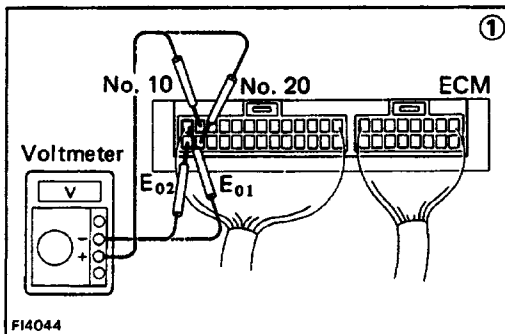

F14044

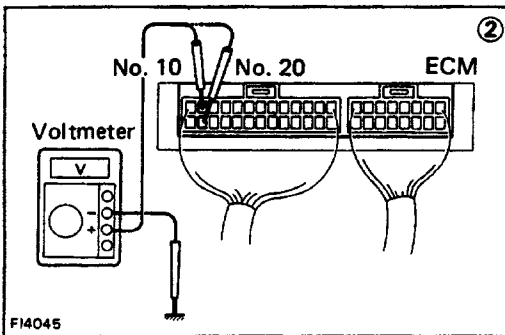

F14045

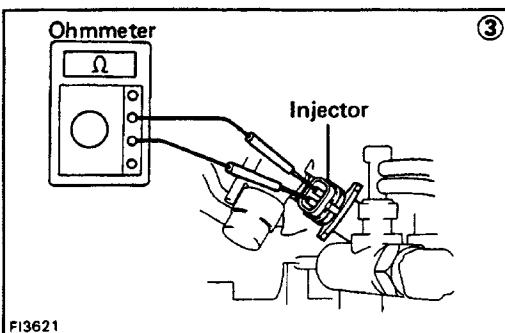

F13621

(1) There is no voltage between ECM terminals No. 10 and/or No. 20 and E<sub>01</sub>, and/or E<sub>02</sub>. (IG SW ON)

(2) Check that there is voltage between ECM terminal No. 10 and/or No. 20 and body ground.

NO

OK

Check wiring between ECM terminal E<sub>01</sub>, and/or E<sub>02</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check fusible link and ignition switch.

BAD

Repair or replace.

OK

(3) Check resistance of magnetic coil in each injector  
STD resistance: 13.4 - 14.2Ω

OK






NO

Replace injector.

Check wiring between ECM terminal No. 10 and/or No. 20 and battery.


BAD

Repair or replace.

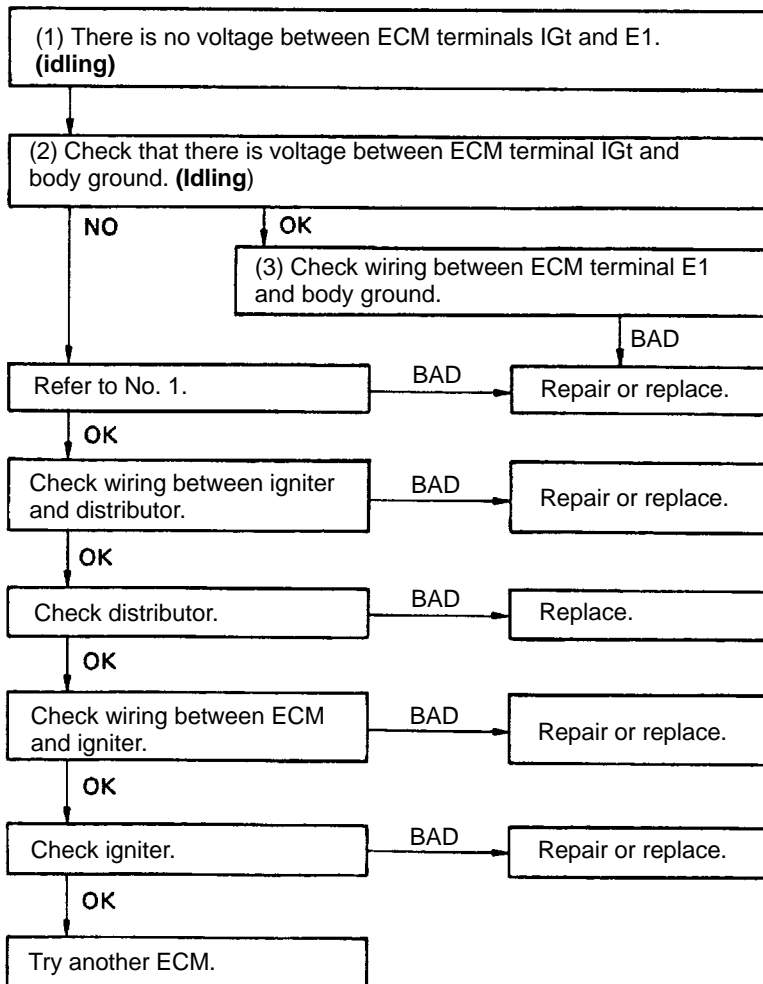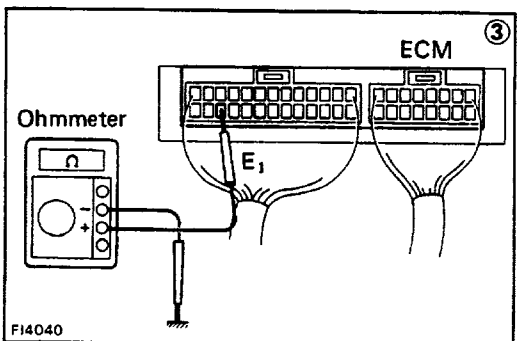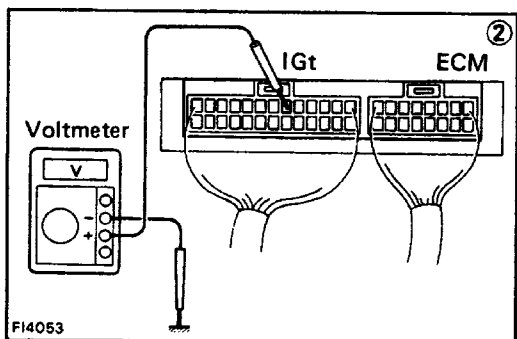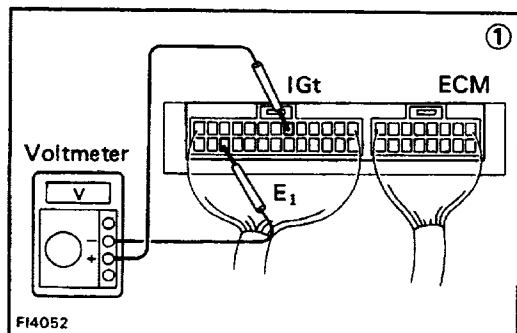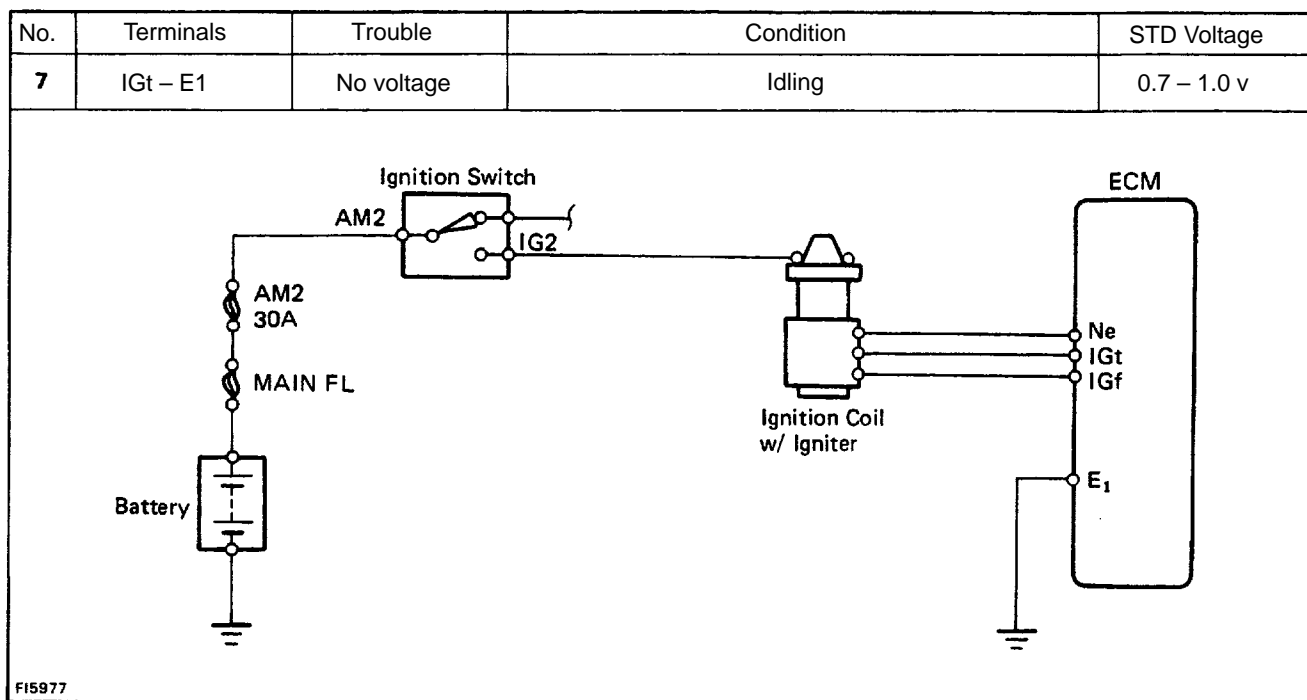




No.	Terminals	Trouble	Condition	STD Voltage
8	W - E1	No voltage	No trouble (MIL off) and engine running	9 - 14V

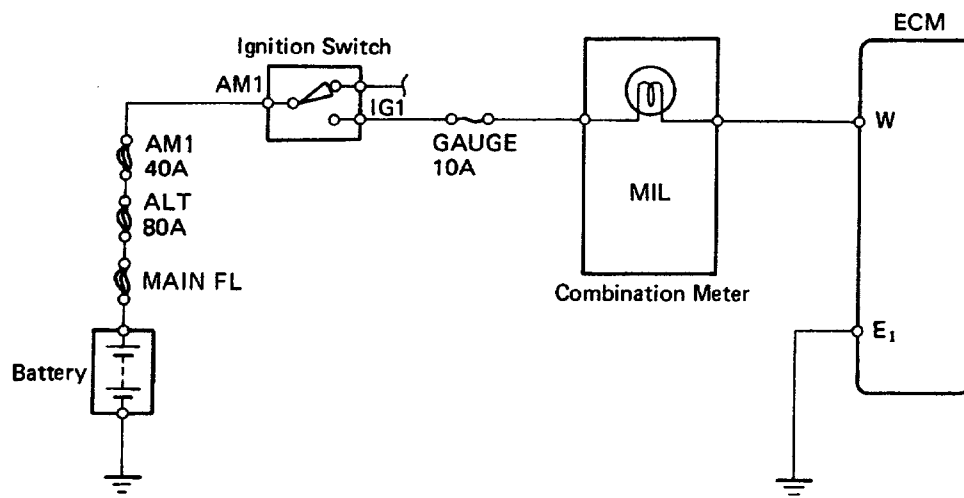

FI5979

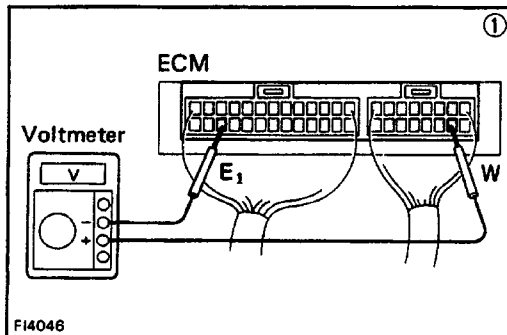

FI4046

(1) There is no voltage between ECM terminals W and E1.  
(Idling)

(2) Check that there is voltage between ECM terminal W and body ground.

NO

OK


(3) Check wiring between ECM terminal E1 and body ground.

OK

BAD

Try another ECM.

Repair or replace.

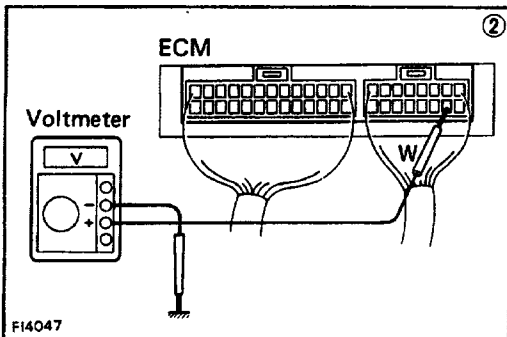

FI4047

Check GAUGE fuse (10 A) and MIL.

OK

BAD


Repair or replace.

Fuse blows again

Check wiring between ECM terminal W and fuse.


BAD

Repair or replace.

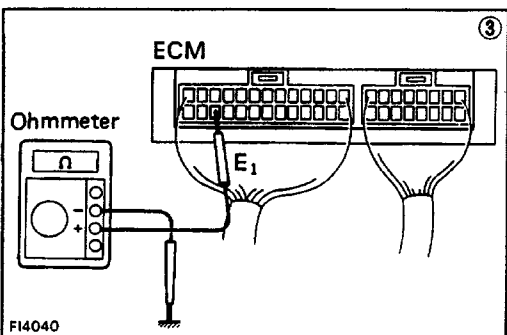


FI4040


No.	Terminal	Trouble	Condition		STD Voltage
9	STJ - E 1	No voltage	Ignition switch . START position	Coolant temperature 80°C (176° F)	6 -12V

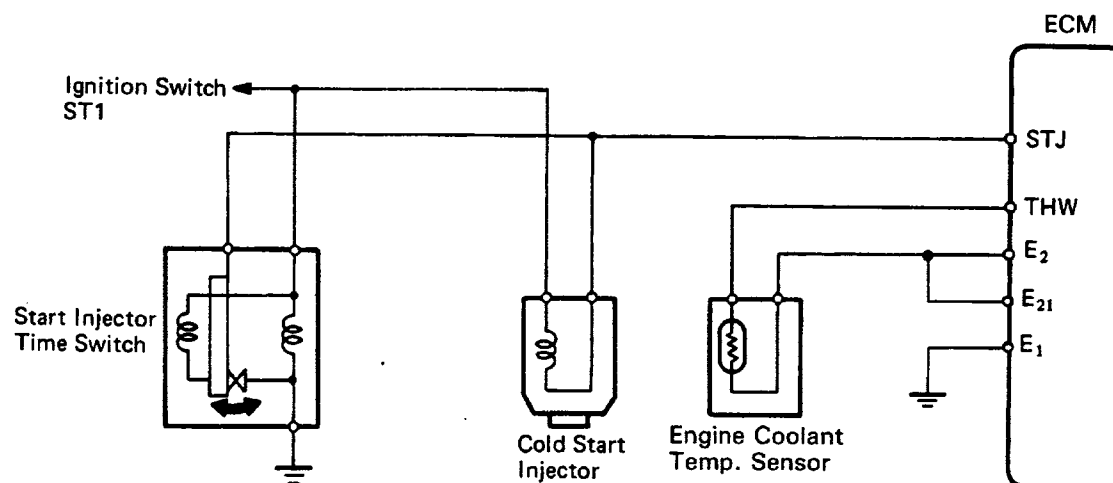


FI3893

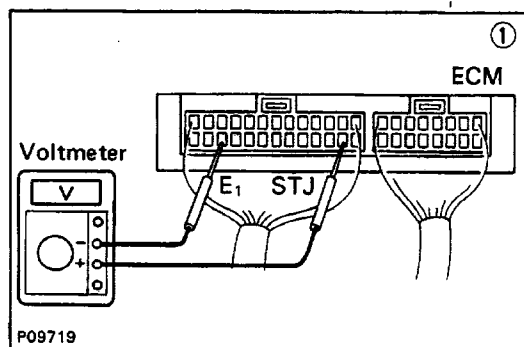

P09719

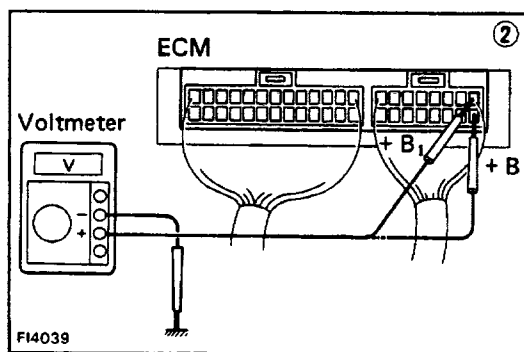

FI4039

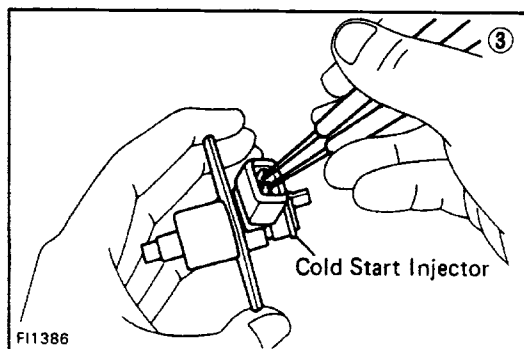

FI1386

(1) There is no voltage between ECM terminals STJ and E1.  
(IG SW START)

(2) Check that there is voltage between ECM terminal +B (+ B, and body ground. (IG SW ON)

OK

NO

(3) Check cold start injector.

BAD

OK

Refer to No. 1.

Replace cold start injector.

Check wiring between ECM and cold start injector.

OK

BAD


Check wiring between ECM terminal E1 and body ground.

OK


Try another ECM.

Repair or replace wiring.


No.	Terminals	Trouble	Condition	STD Voltage
10	STP - E1	No voltage	Stop light switch ON	7.5 - 14 V

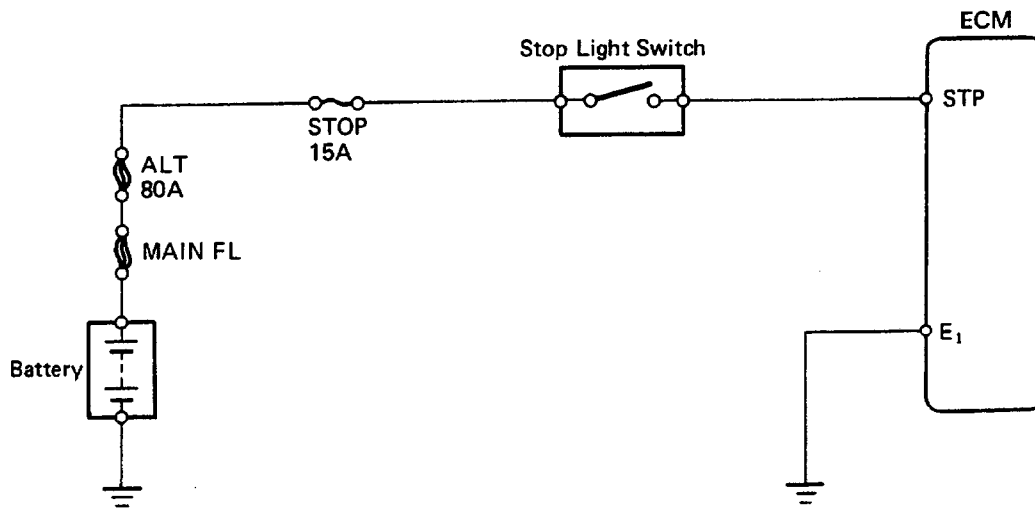


F15972

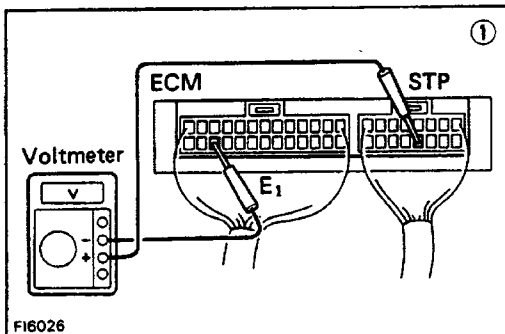


F16026

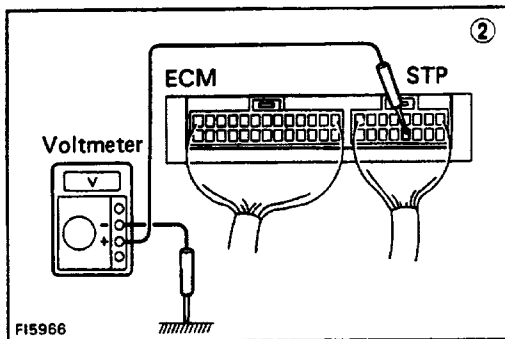


F15966

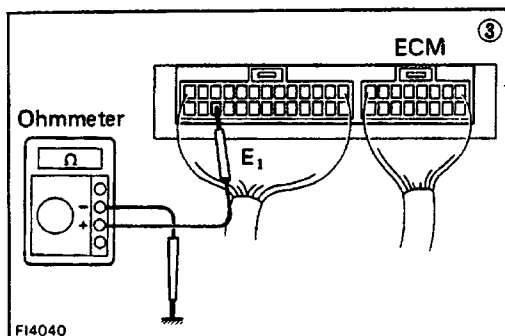


F14040

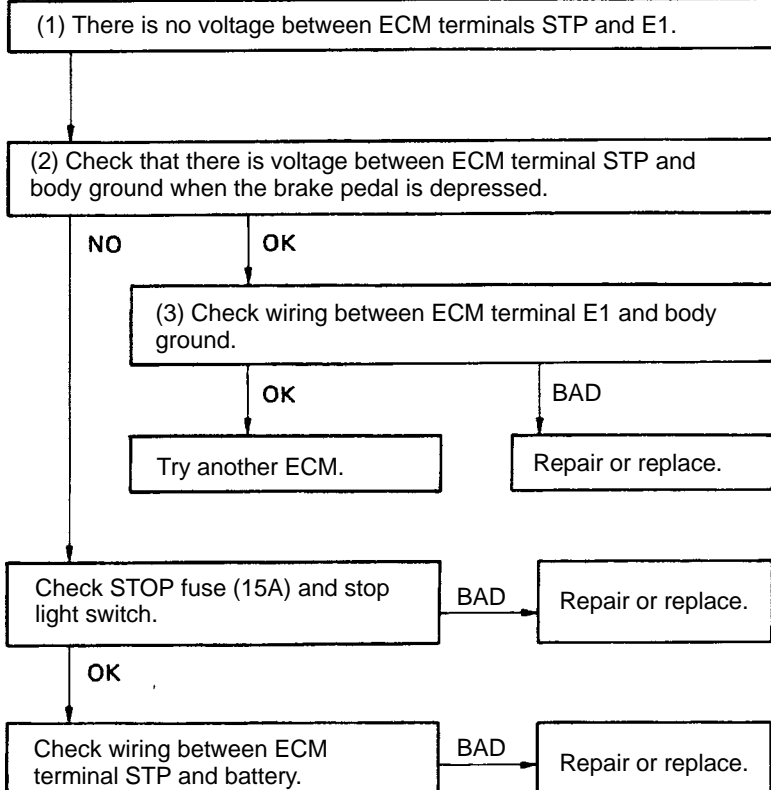

(California Vehicles only)

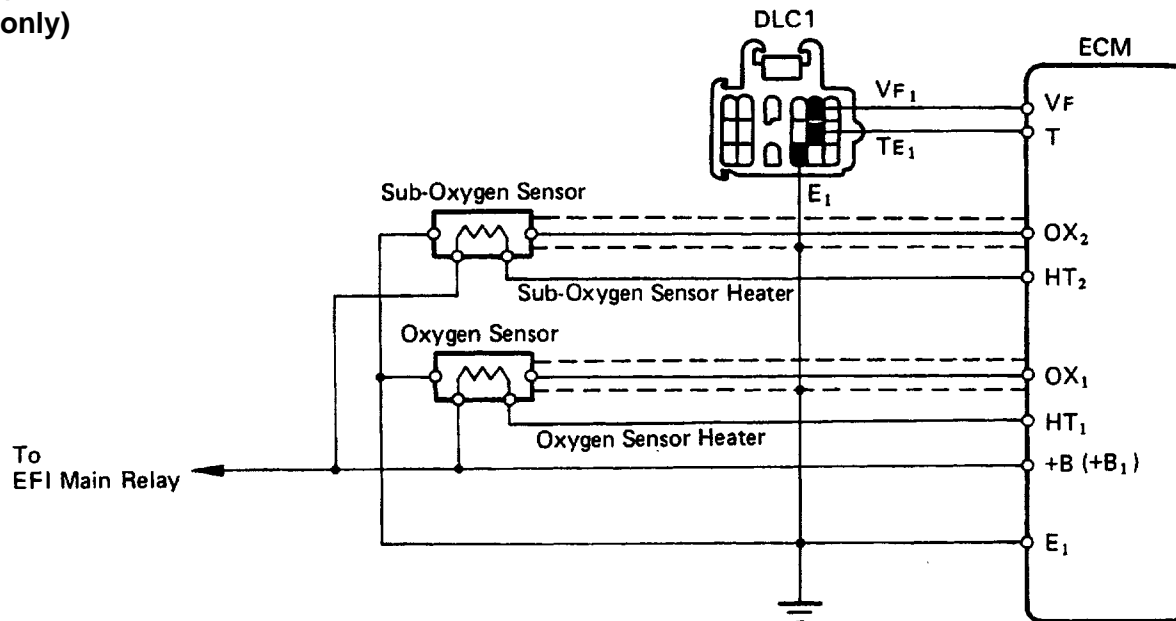

FI6077

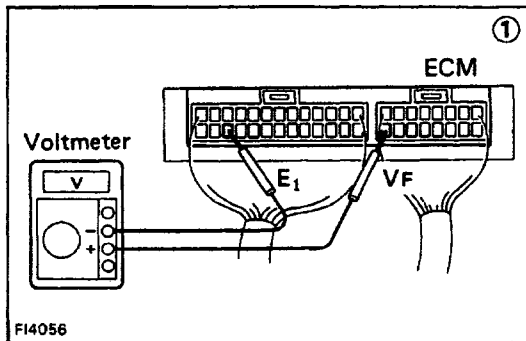

FI4056

(1) There is no voltage between ECM terminals VF and E<sub>1</sub>.

Check that there is voltage between ECM terminal VF and body ground.

NO

OK

Check wiring between ECM terminal E<sub>1</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Is air leaking into air induction system?

YES

Repair air leak.

NO

Check spark plugs.

BAD

Repair or replace.

OK



Check distributor and ignition system.


BAD

Repair or replace.


OK

CONTINUED ON PAGE [EG1-139](#)

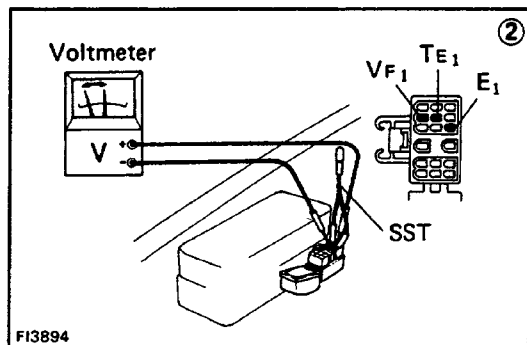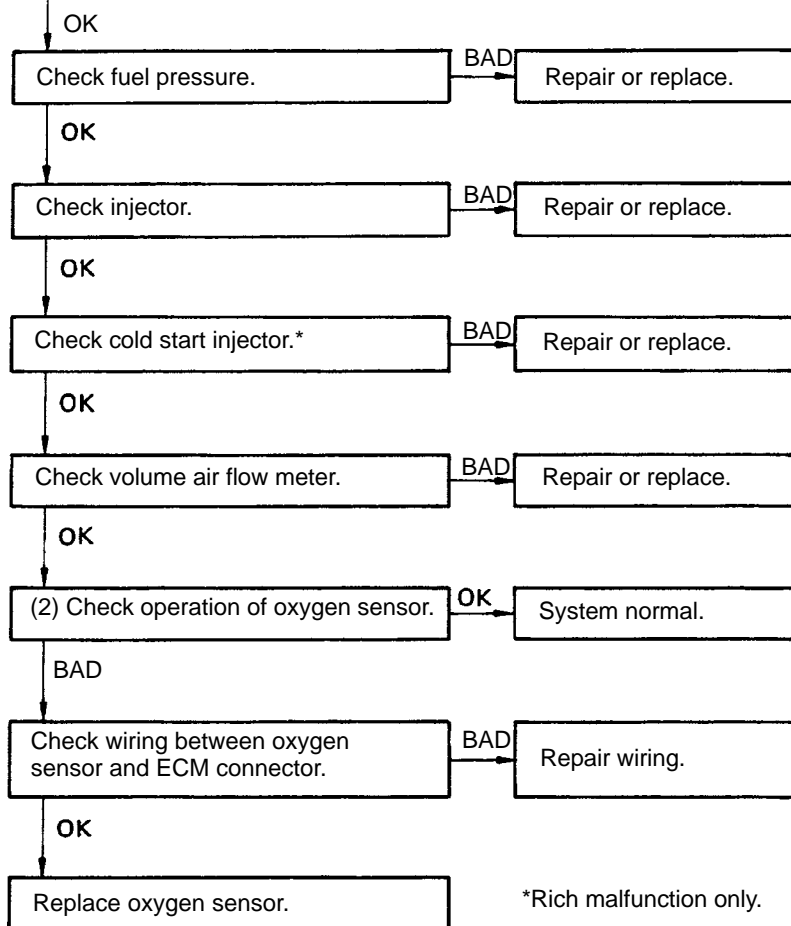CONTINUED FROM PAGE [EG1-138](#)

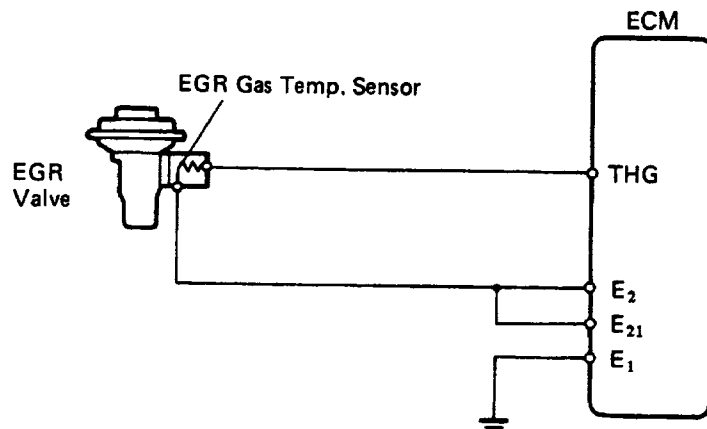**(California Vehicles only)**

F13895

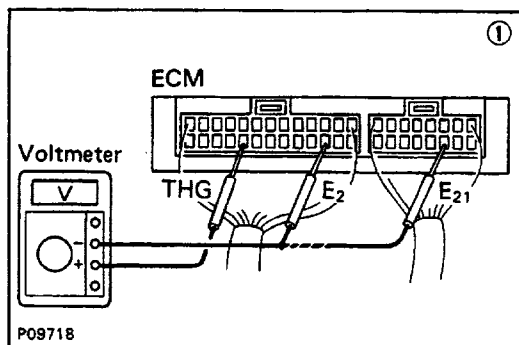


(1) There is no voltage between ECM terminals THG and E2 (E21).  
(Engine running at 2,000 rpm)

(2) Check that there is voltage between ECM terminal + B (+ B1) and body ground. (IG SW ON)

OK

NO

Refer to No. 1.

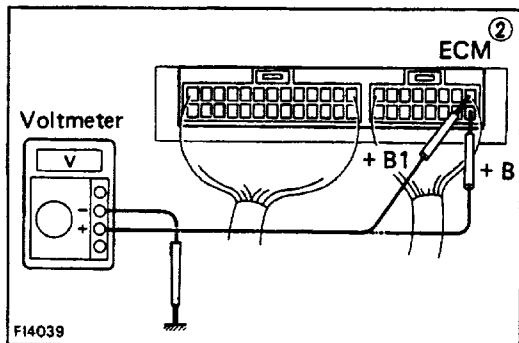

Check wiring between ECM terminal E1 and body ground.

OK

BAD

Repair or replace.

Check EGR system.

BAD

Repair or replace.

OK

(3) Check EGR gas temp. sensor.

BAD

OK

Replace EGR gas temp. sensor.


Check wiring between ECM and EGR gas temp. sensor.

OK


BAD

Try another ECM.

Repair or replace.

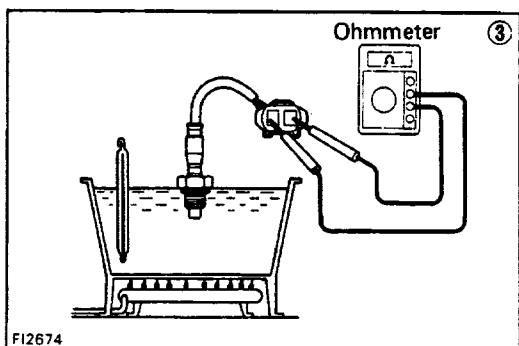

F12674

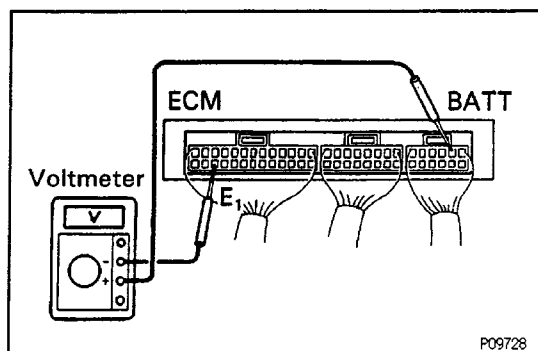

## MFI SYSTEM CHECK PROCEDURE (4WD M/T)

### HINT:


- Perform all voltage measurements with the connectors connected.
  - Verify that the battery voltage is 11 V or more when the ignition switch is in "ON" position.
- Using a voltmeter with high impedance (10 kΩ/V minimum), measure the voltage at each terminal of the wiring connector.

### Terminals of ECM KWD M/T)

Symbol	Terminal Name	Symbol	Terminal Name
E01	ENGINE GROUND	Ox1	OXYGEN SENSOR (MAIN)
E02	ENGINE GROUND	KNK	KNOCK SENSOR
No. 10	INJECTOR	* Ox2	OXYGEN SENSOR (SUB)
No. 20	INJECTOR	* THG	EGR GAS TEMP. SENSOR
STJ	COLD START INJECTOR	THW	ENGINE COOLANT TEMP. SENSOR
E1	ENGINE GROUND	IDL	THROTTLE POSITION SENSOR
Fpu	FUEL PRESSURE CONTROL VSV	Vc	VOLUME AIR FLOW METER
* EGR	EGR VSV	Vcc	THROTTLE POSITION SENSOR
AS	PAIR VSV	Vs	VOLUME AIR FLOW METER
IGt	IGNITER	VTA	-THROTTLE POSITION SENSOR
Ne	DISTRIBUTOR	THA	INTAKE AIR TEMP. SENSOR
IGf	IGNITER	E2	SENSOR GROUND
STA	STARTER SWITCH	4WD	4WD SWITCH
NSW	PNP SWITCH	STP	STOP LIGHT SWITCH
HT1	OXYGEN SENSOR HEATER (MAIN)	SPD	SPEED SENSOR
* HT2	OXYGEN SENSOR HEATER (SUB)	BATT	BATTERY POSITIVE VOLTAGE
VF	DLC 1	W	MALFUNCTION INDICATOR LAMP
E21	SENSOR GROUND	+B1	MAIN RELAY
TE2	D LC 1	+B	MAIN RELAY
TE1	D LC 1		

\* : California only

### ECM Terminals




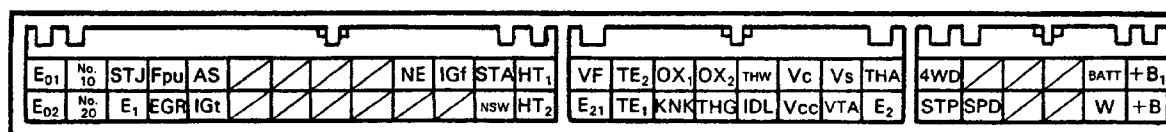


## Voltage at ECM Wiring Connectors (4WD M/T)

No.	Terminals	Condition		STD voltage	See page
1	BATT — E <sub>1</sub>	—		9 — 14	EG1-143
	+B — E <sub>1</sub>	Ignition switch ON			
	+B <sub>1</sub> — E <sub>1</sub>				
2	IDL — E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Throttle valve open	9 — 14	EG1-145
	Vcc — E <sub>2</sub> (E <sub>21</sub> )		—	4.5 — 5.5	
	VTA — E <sub>2</sub> (E <sub>21</sub> )		Throttle valve fully closed	0.3 — 0.8	
			Throttle valve fully open	3.2 — 4.9	
3	Vc — E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	—	6—10	EG1-147
	Vs — E <sub>2</sub> (E <sub>21</sub> )		Measuring plate fully closed	0.5—2.5	
			Measuring plate fully open	5—10	
		Idling		2—8	
	THA — E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Intake air temperature 20°C (68°F)	0.5 — 3.4	
4	THW — E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Coolant temperature 80°C (176°F)	0.2 — 1.0	EG1-149
5	STA — E <sub>1</sub>	Ignition switch START position		6—12	EG1-150
6	No. 10 — E <sub>01</sub> No. 20 — E <sub>02</sub>	Ignition switch ON		9 — 14	EG1-151
7	IGt — E <sub>1</sub>	Idling		0.7—1.0	EG1-152
8	W — E <sub>1</sub>	No trouble (MIL off) and engine running		9 — 14	EG1-153
9	STJ — E <sub>1</sub>	Ignition switch START position	Coolant temperature 80°C (176°F)	6—12	EG1-154
10	STP — E <sub>1</sub>	Stop light switch ON		7.5 — 14	EG1-155



No.	Terminals	Trouble	Condition	STD Voltage
1	BATT – E <sub>1</sub>	No voltage	–	9 – 14 V
	+B – E <sub>1</sub>		Ignition switch ON	
	+B <sub>1</sub> – E <sub>1</sub>			

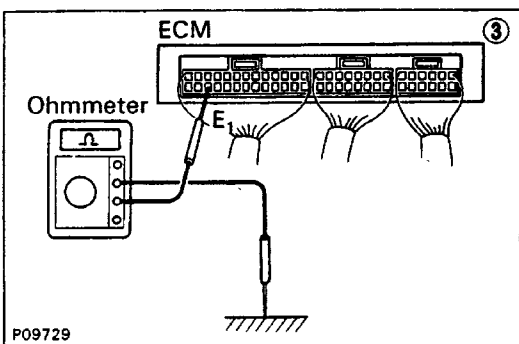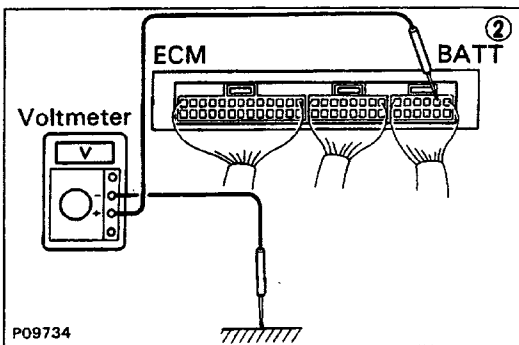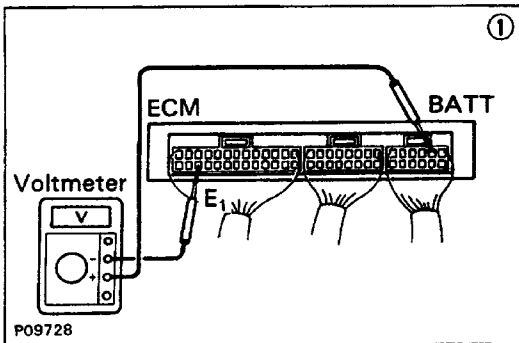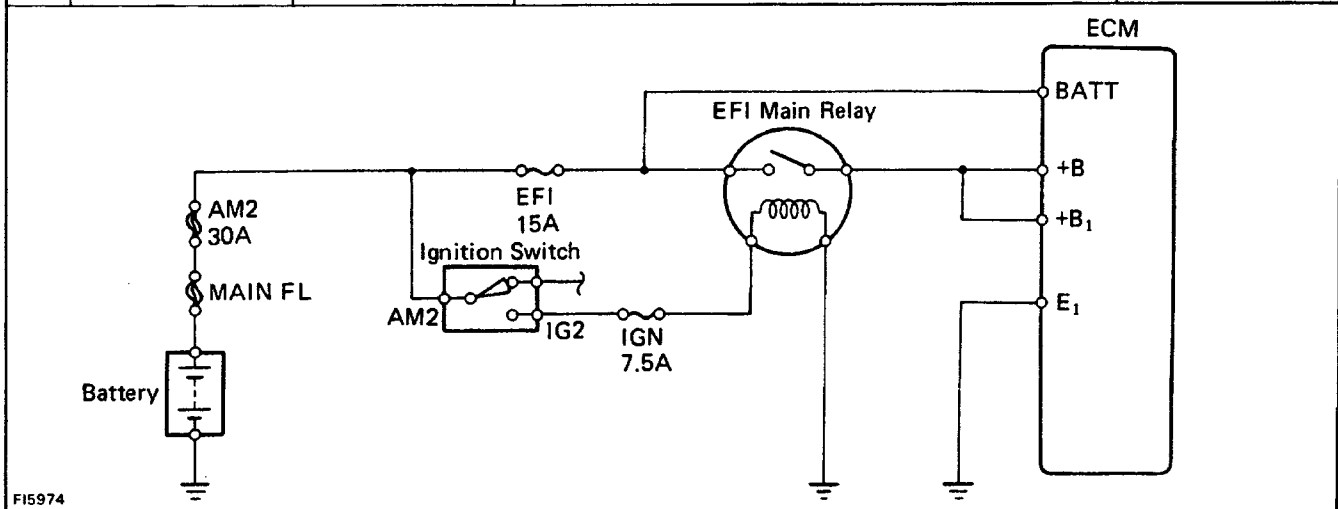

### • BATT - E<sub>1</sub>

(1) There is no voltage between ECM terminals BATT and E<sub>1</sub>.

(2) Check that there is voltage between ECM terminal BATT and body ground.

NO

OK

(3) Check wiring between ECM terminal E<sub>1</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check fuse and fusible link.

BAD




Replace.

OK


Check wiring between fuse and ECM.

BAD


Repair or replace.

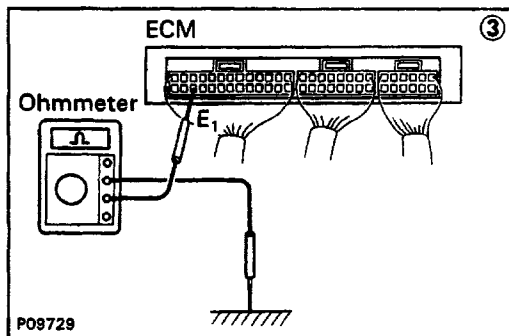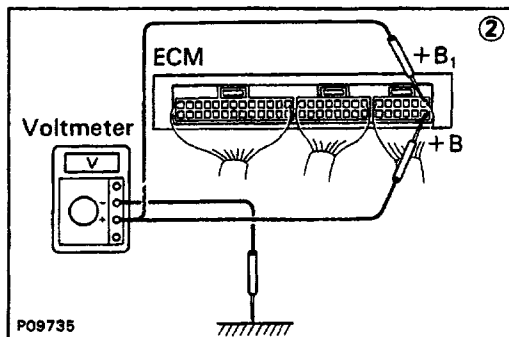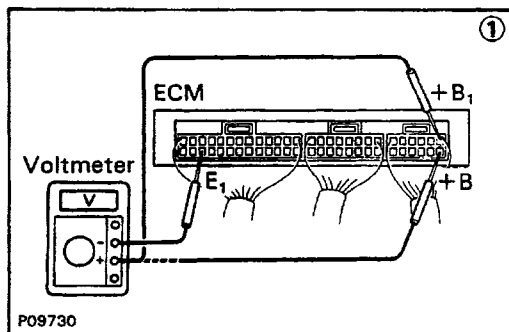




### • +B (B1) – E1

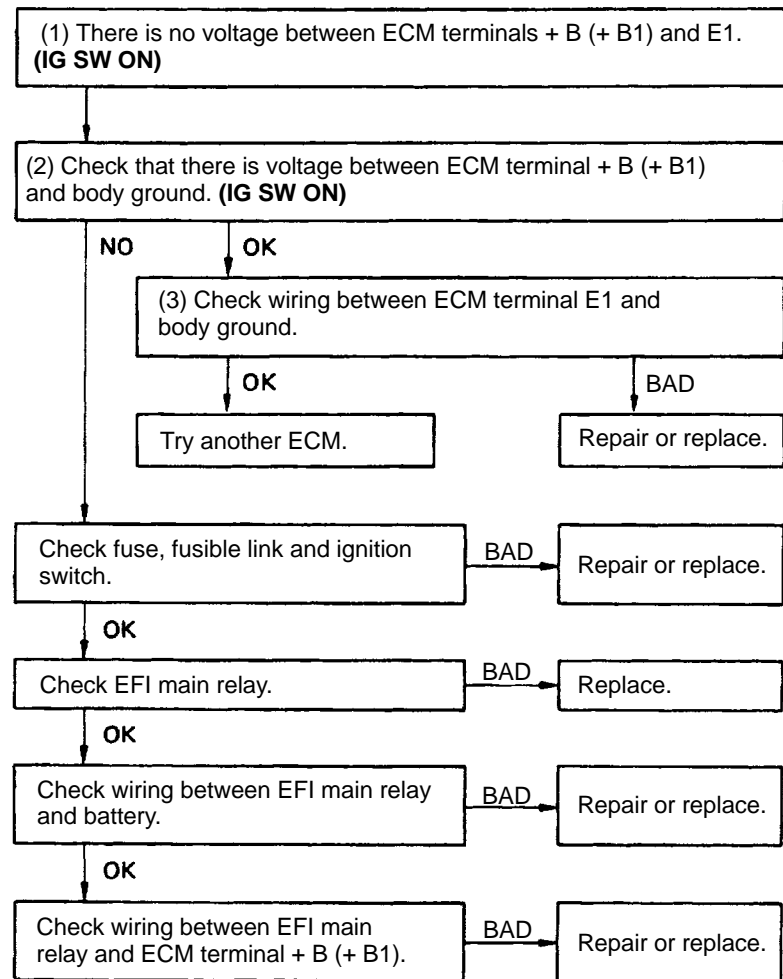

No.	Terminals	Trouble	Condition		STD Voltage
2	IDL – E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	Throttle valve open	9 – 14 V
	Vcc – E <sub>2</sub> (E <sub>21</sub> )			–	4.5 – 5.5 V
	VTA – E <sub>2</sub> (E <sub>21</sub> )			Throttle valve fully closed	0.3 – 0.8 V
				Throttle valve fully open	3.2 – 4.9 V

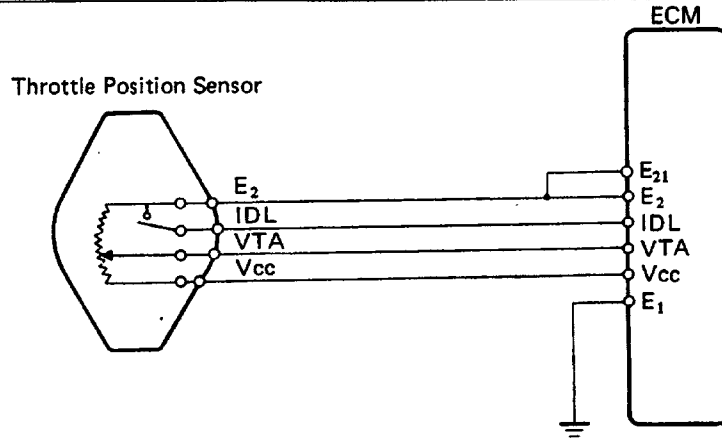


FI3877



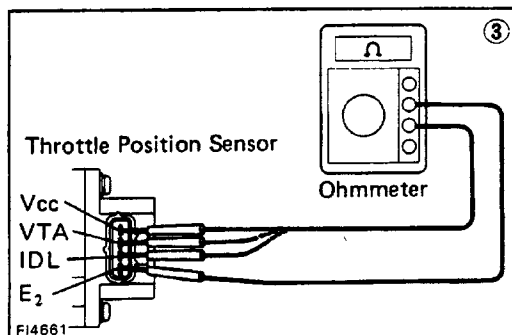
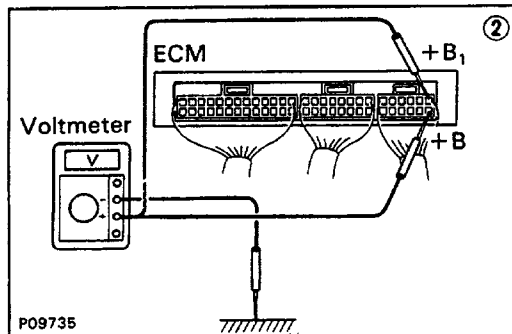
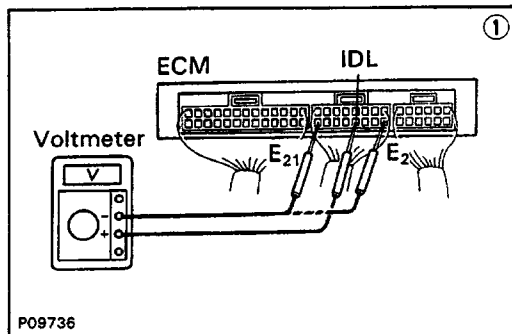


### • IDL - E2 (E21)

(1) There is no voltage between ECM terminals IDL and E2 (E21). (IG SW ON)

(2) Check that there is voltage between ECM terminal + B (+ B1) and body ground. (IG SW ON)

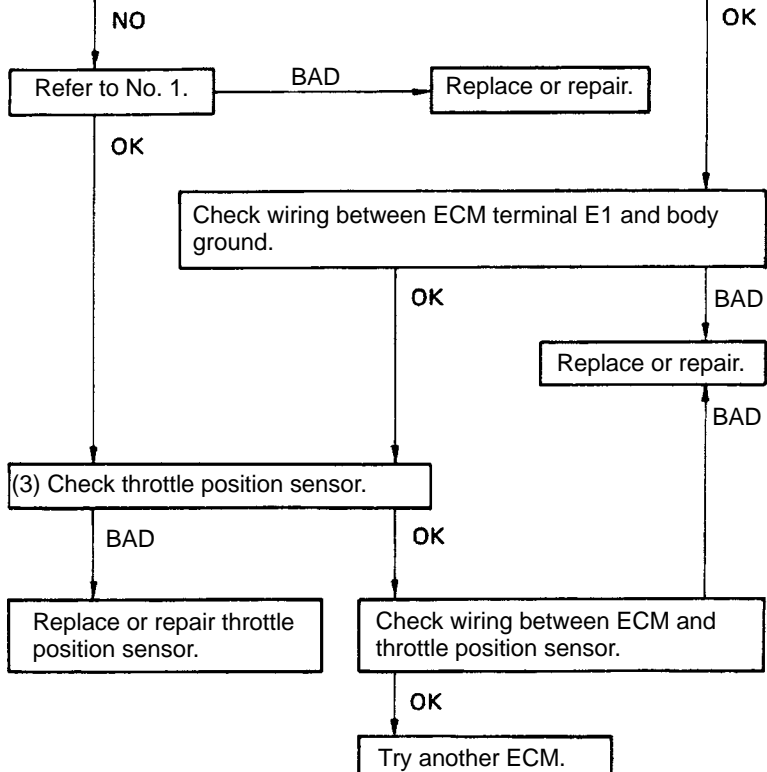

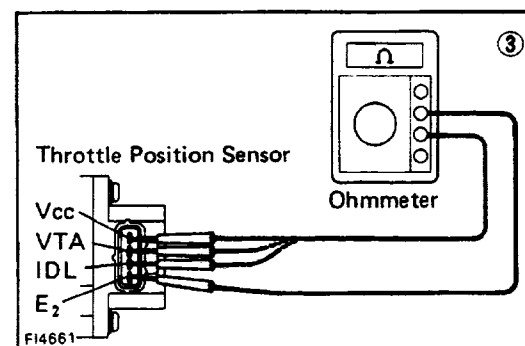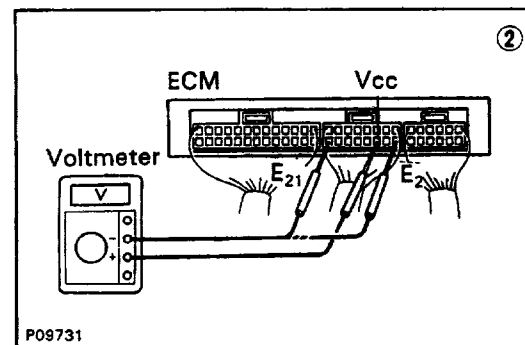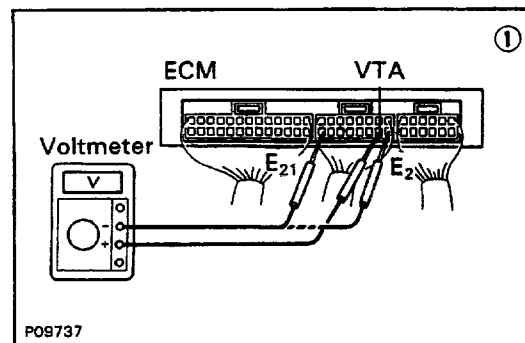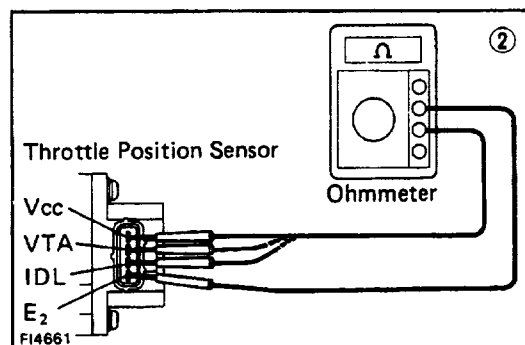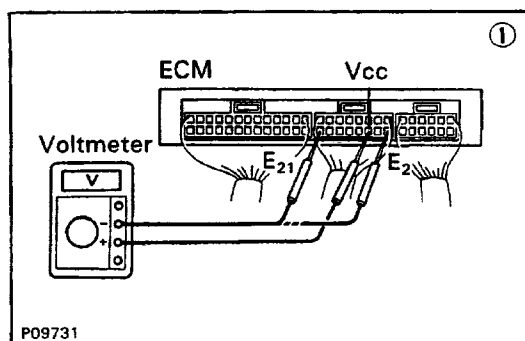

### • Vcc - E2 (E21)

(1) There is no voltage between ECM terminals Vcc and E2 (E21). (IG SW ON)

Check that there is voltage between ECM terminals + B (+ B1) and E1. (IG SW ON)

OK

NO

(2) Check throttle position sensor.

Refer to No. 1.

BAD

OK

Repair or replace.

Check wiring between ECM and throttle position sensor.

OK

BAD

Try another ECM.

Repair or replace wiring.

### • VTA - E2 (E21)

(1) There is no specified voltage between ECM terminals VTA and E2 (E21). (IG SW ON)

(2) Check that there is voltage between ECM terminals Vcc and E2 (E21). (IG SW ON)

OK

NO

Perform inspection of Vcc - E1 (E21)

(3) Check throttle position sensor.

BAD

Repair or replace.

OK

Check wiring between ECM and throttle position sensor.


BAD

Repair or replace.


OK

Try another ECM.

No.	Terminals	Trouble	Condition		STD Voltage
3	<b>Vc – E<sub>2</sub> (E<sub>21</sub>)</b>	No voltage	Ignition switch ON	—	<b>6 – 10 V</b>
	Measuring plate fully closed			<b>0.5 – 2.5 V</b>	
	Measuring plate fully open			<b>5 – 10 V</b>	
	Idling		<b>2 – 8 V</b>		
	<b>THA – E<sub>2</sub> (E<sub>21</sub>)</b>		Ignition switch ON	Intake air temperature 20°C (68° F)	<b>0.5 – 3.4 V</b>

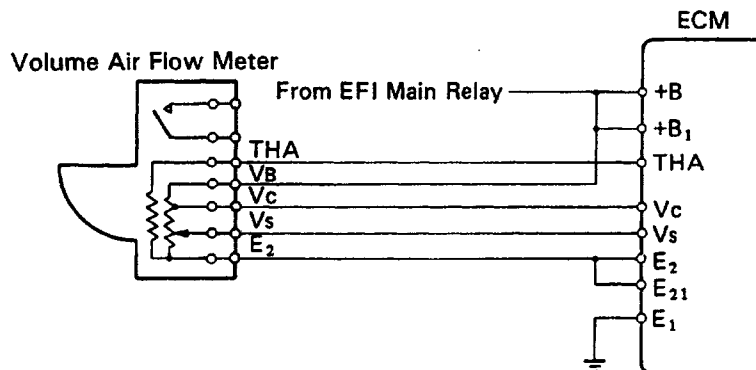

F13881

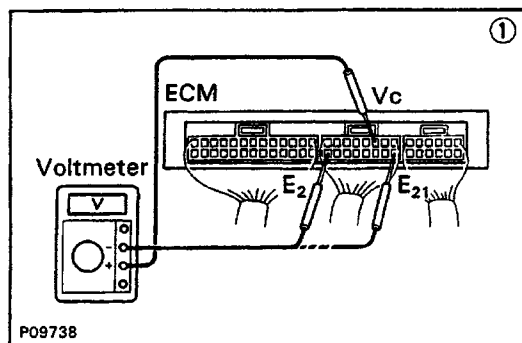

### • Vc - E2 (E21)

(1) There is no voltage between ECM terminals Vc and E2 (E21). (IG SW ON)

(2) Check that there is voltage between ECM terminals + B (+ B1) and E1. (IG SW ON)

OK

NO

(1) Check volume air flow meter.

Refer to No. 1.

BAD

OK

Replace or repair volume air flow meter.



Check wiring between ECM and volume air flow meter.






OK

BAD

Try another ECM.

Replace or repair wiring.

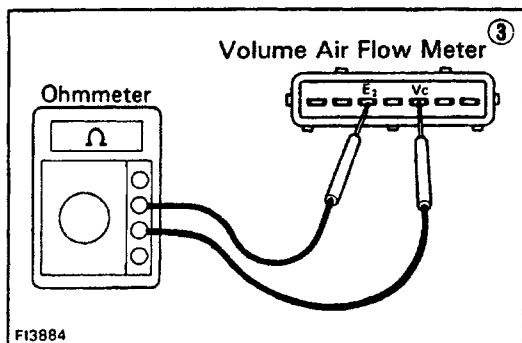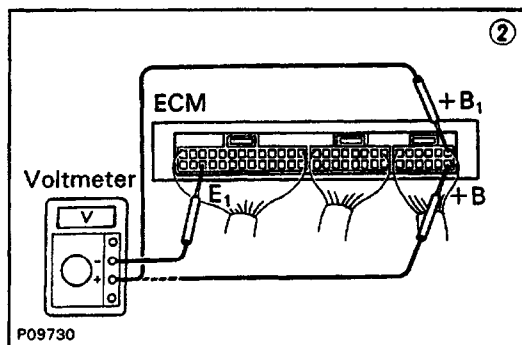

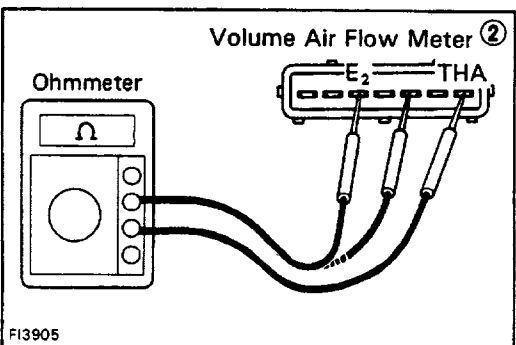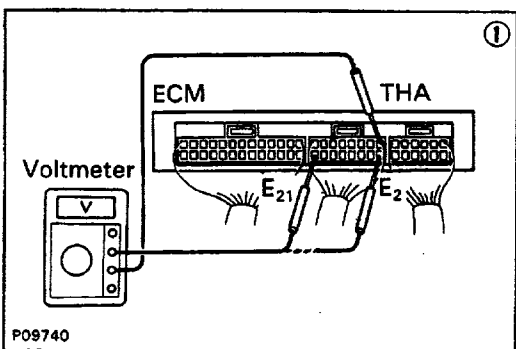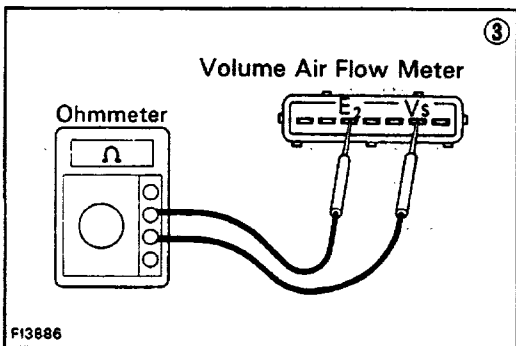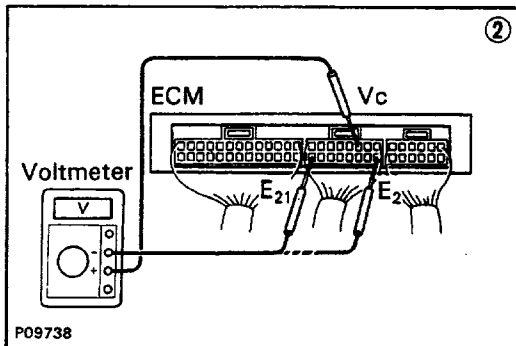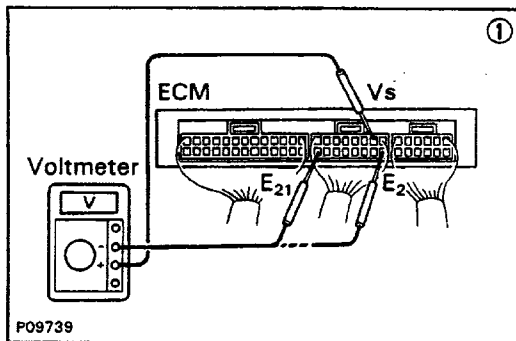

### • Vs - E2 (E21)

(1) There is no voltage between ECM terminals Vs and E2 (E21). (IG SW ON)

(2) Check that there is voltage between ECM terminals Vc and E2 (E21). (IG SW ON)

OK NO

Refer to Vc - E2 (E21)

BAD

Repair- or replace.

(3) Check volume air flow meter.

BAD

Repair or replace.

OK

Check wiring between ECM and volume air flow meter.

BAD

Repair or replace.

OK

Try another ECM.

### • THA - E2 (E21).

(1) There is no voltage between ECM terminals THA and E2 (E21). (IG SW ON)

Check that there is voltage between ECM terminal + B (+ B1) and body ground. (IG SW ON)

OK

NO

(2) Check intake air temp. sensor.

Refer to No. 1.

BAD

Replace volume air flow meter.

OK

Check wiring between ECM and intake air temp. sensor.


OK

Try another ECM.


BAD

Repair or replace wiring.

No.	Terminals	Trouble	Condition		STD- Voltage
4	THW - E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	Coolant temperature 80°C (176°)	0.2 - 1.0 V

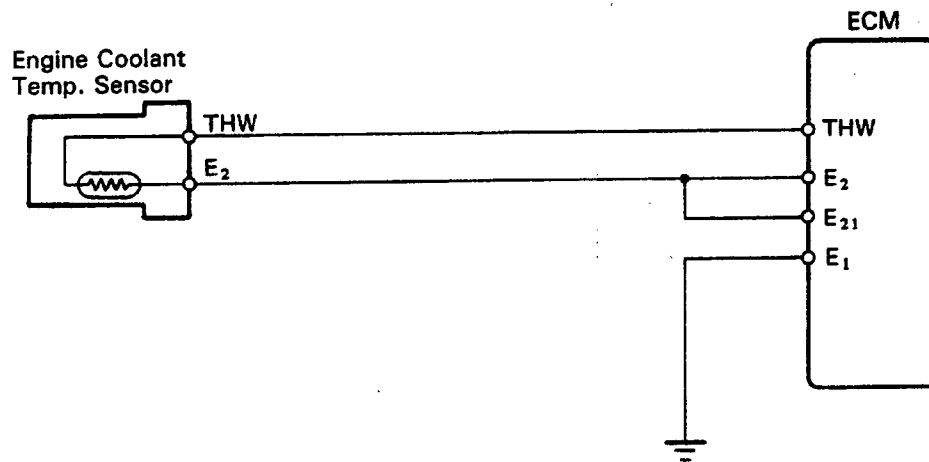

FI5971

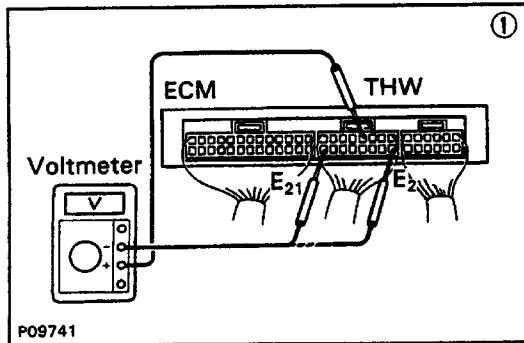


(1) There is no voltage between ECM terminals THW and E<sub>2</sub> (E<sub>21</sub>).  
(IG SW ON)

(2) Check that there is voltage between ECM terminal +B (+B<sub>1</sub>) and body ground.\* (IG SW ON)

OK

NO

Refer to No. 1.

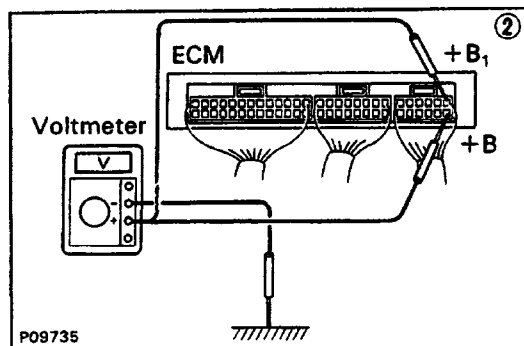

Check wiring between ECM terminal E<sub>1</sub> and body ground.

OK

BAD

Check engine coolant temp. sensor.

Repair or replace.

BAD

OK

Replace engine coolant temp. sensor.


Check wiring between ECM and engine coolant temp. sensor.






OK

BAD

Try another ECM.


Repair or replace.

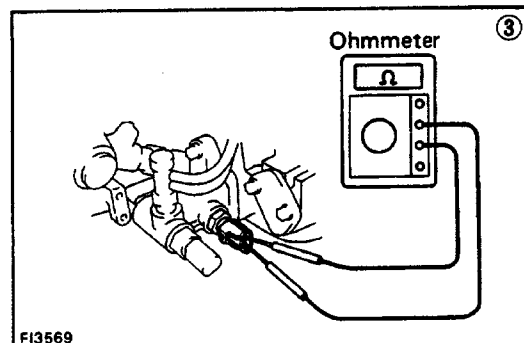

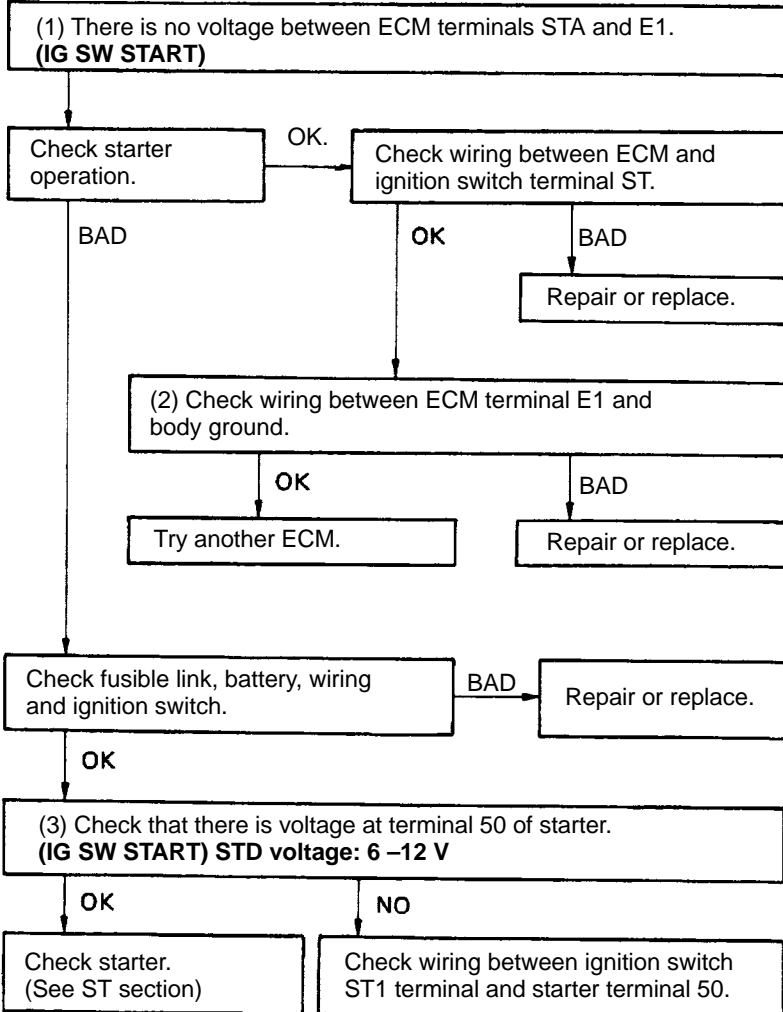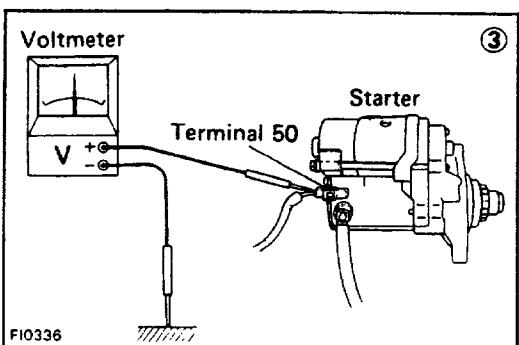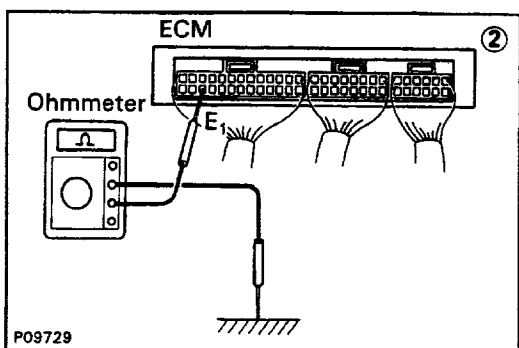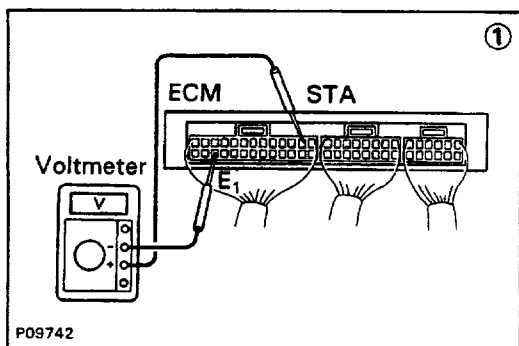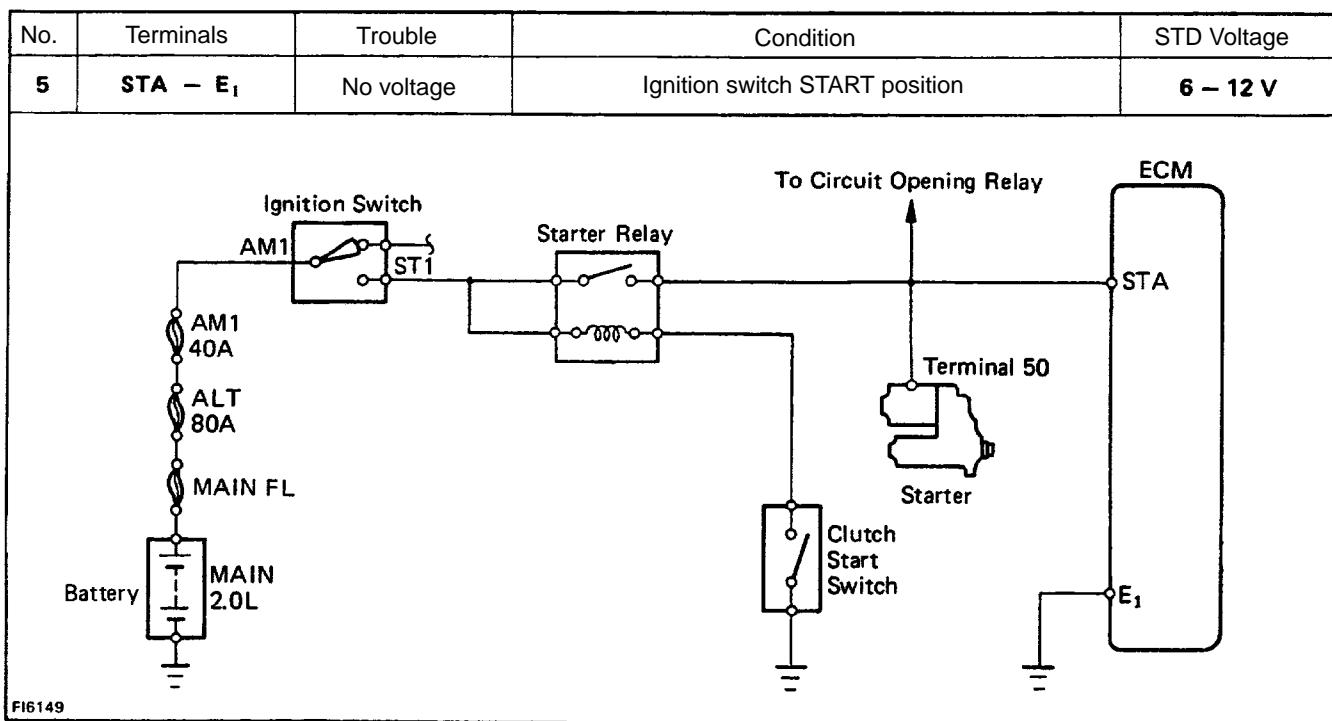





No.	Terminals	Trouble	Condition	STD Voltage
6	No. 10 - E <sub>01</sub> No. 20 - E <sub>02</sub>	No voltage	Ignition switch ON	9 - 14 V

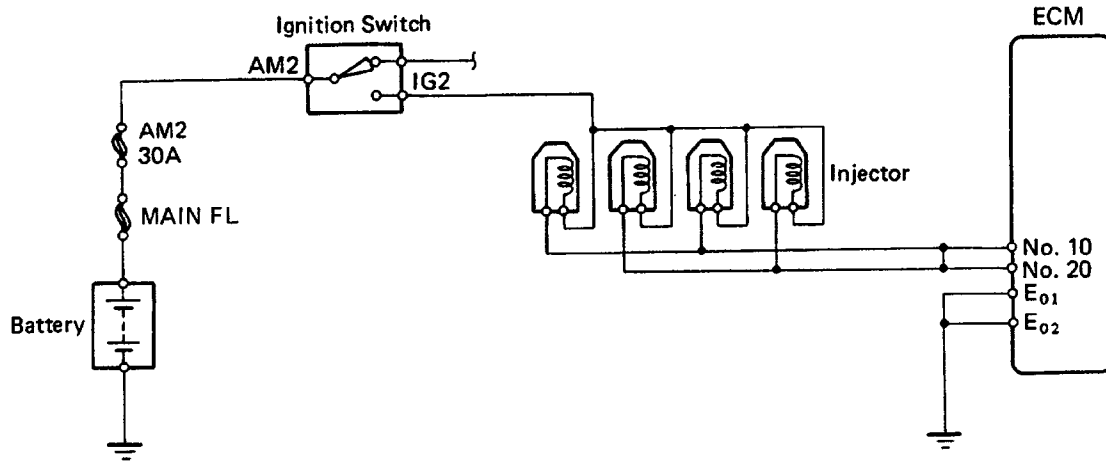


F15975

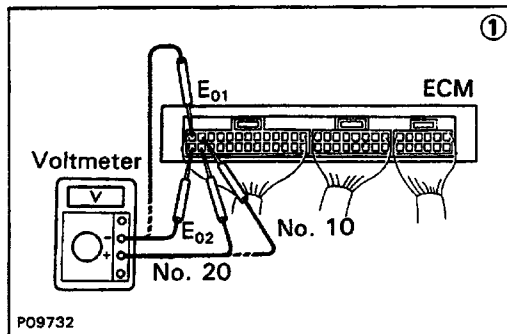

P09732

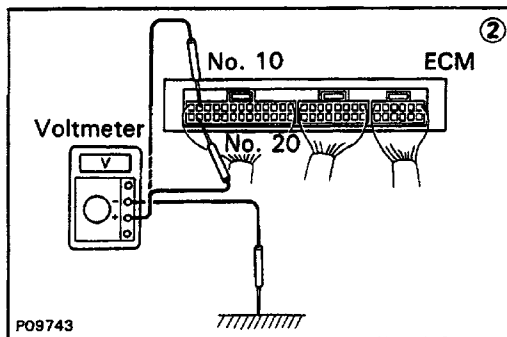

P09743

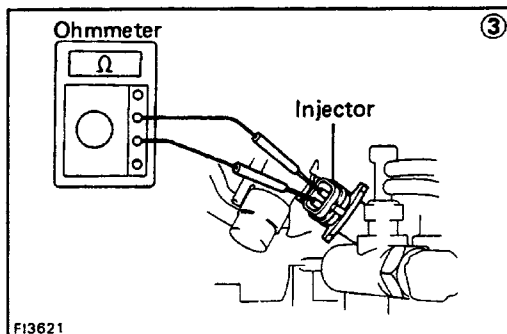

F13621

(1) There is no voltage between ECM terminals No. 10 and/or No. 20 and E<sub>01</sub>, and/or E<sub>02</sub>— (IG SW ON)

(2) Check that there is voltage between ECM terminal No. 10 and/or No. 20 and body ground.

NO

OK

Check wiring between ECM terminal E<sub>01</sub>, and/or E<sub>02</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check fusible link and ignition switch.

BAD

Repair or replace.

OK

(3) Check resistance of magnetic coil in each injector.  
STD resistance: 13.4 - 14.2Ω

OK

NO


Replace injector.

Check wiring between ECM terminal No. 10 and/or No. 20 and battery.





BAD

Repair or replace.


No.	Terminals	Trouble	Condition	STD Voltage
7	IGt - E <sub>1</sub>	No voltage	Idling	0.7 - 1.0 V

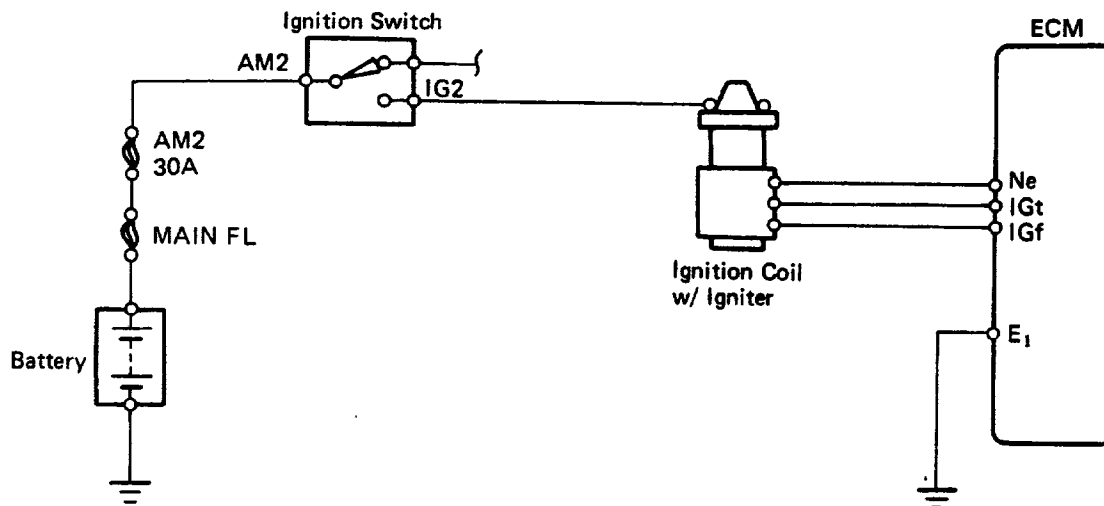





F15977

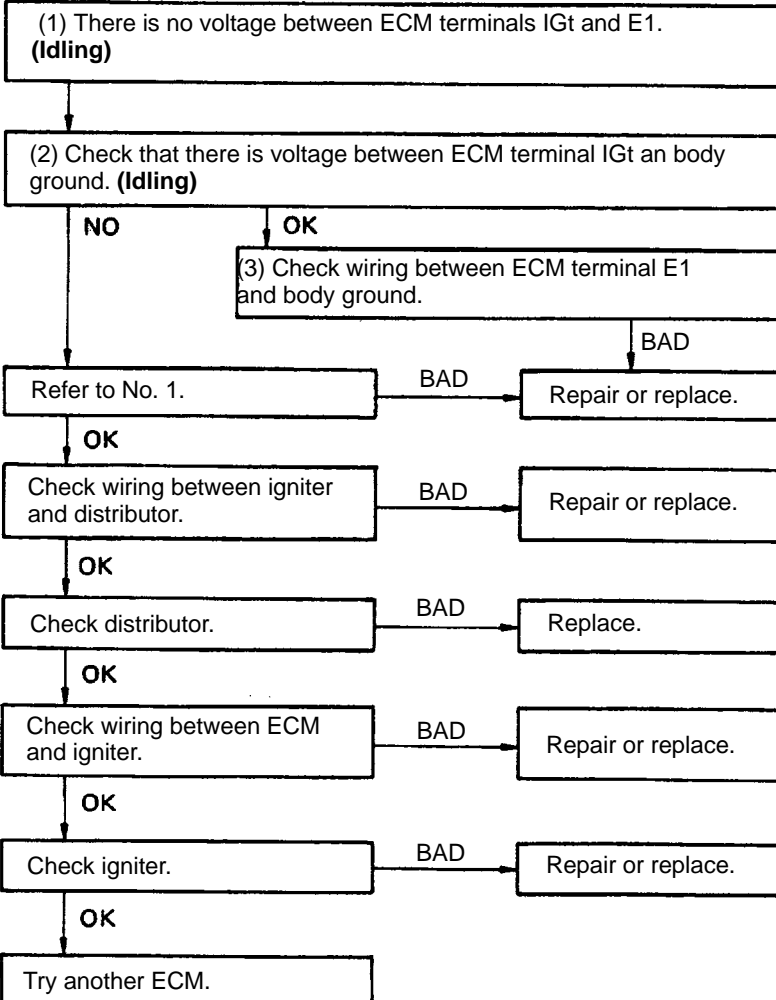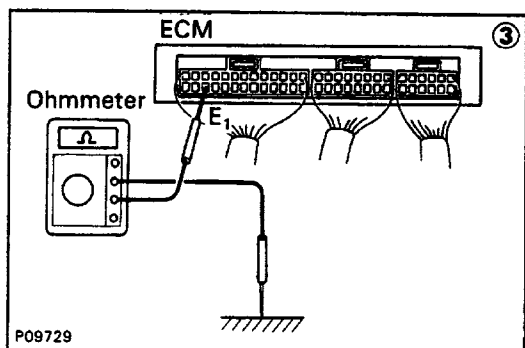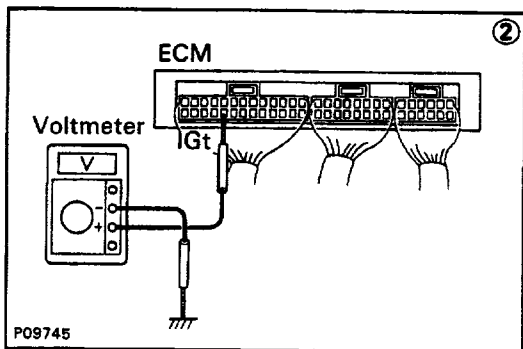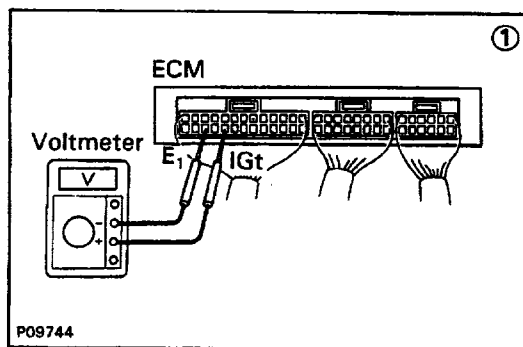


No.	Terminals	Trouble	Condition	STD Voltage
8	W - E <sub>1</sub>	No voltage	No trouble (MIL off) and engine running	9 - 14 V

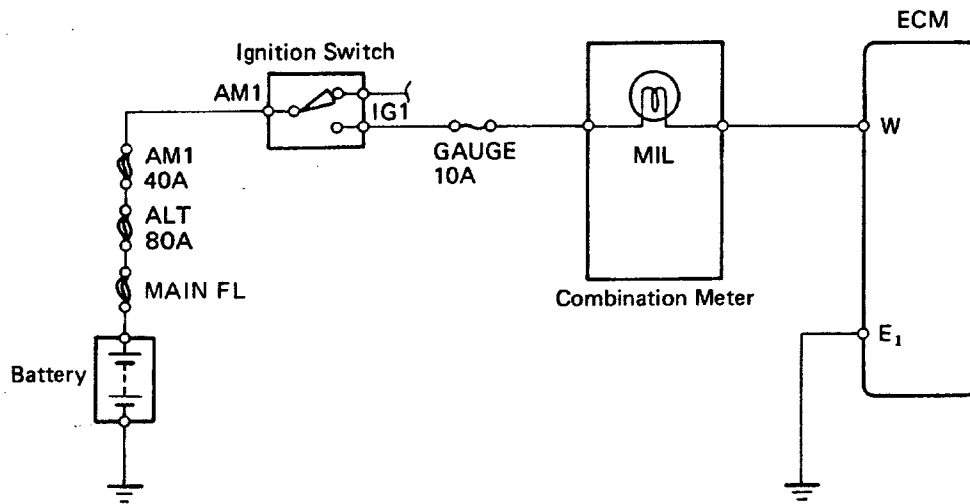


F15979

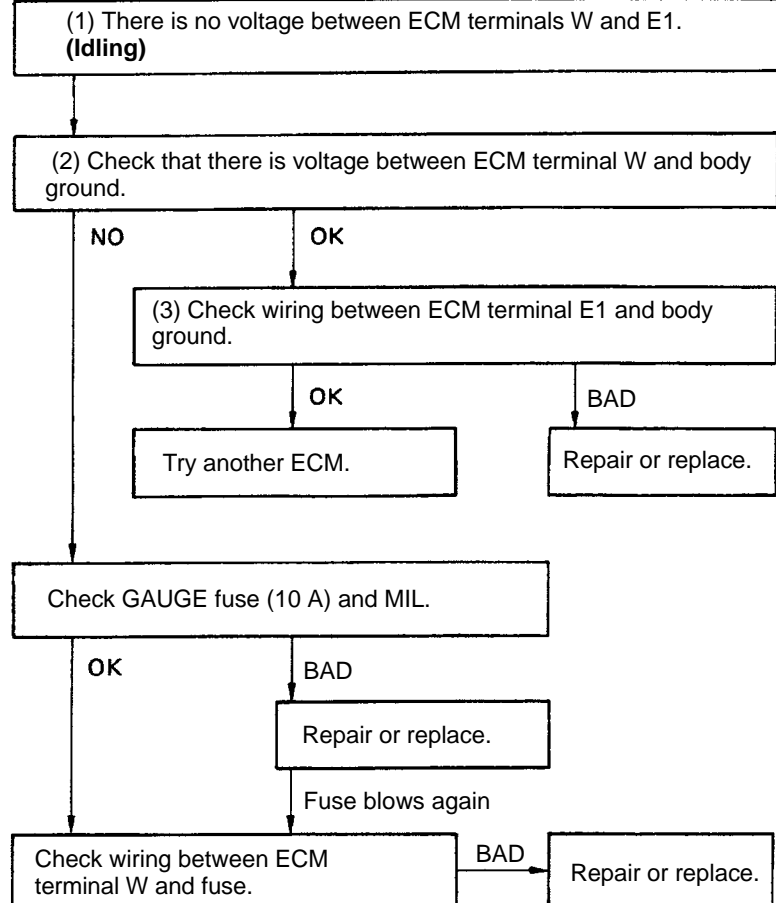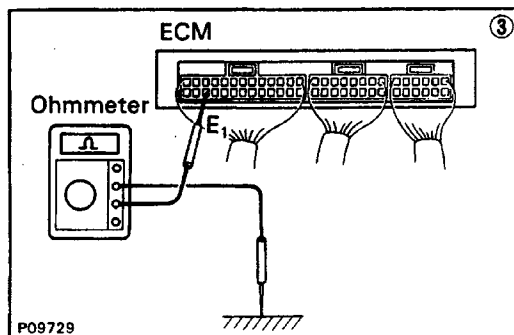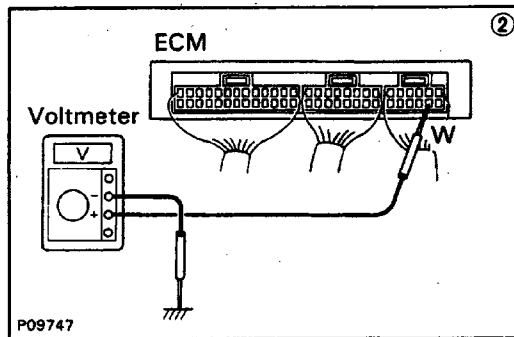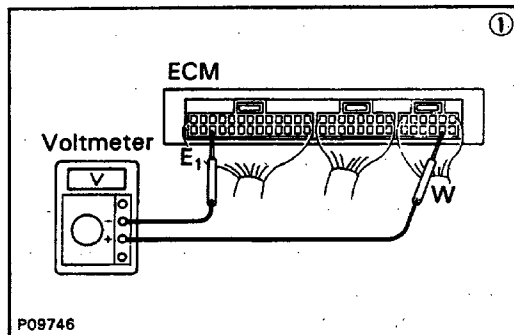


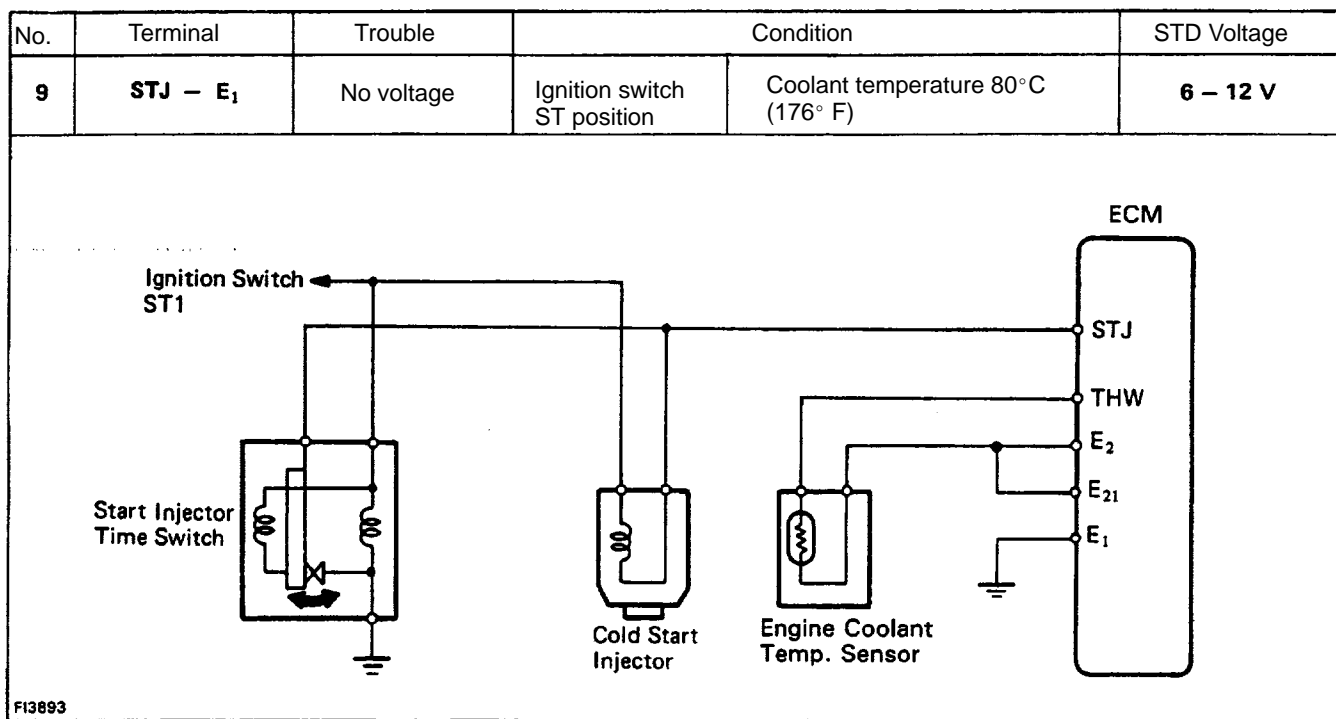


FI3893

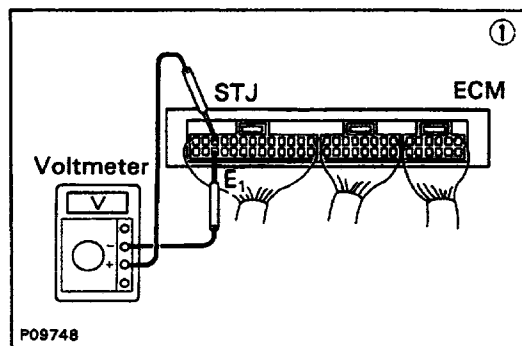


P09748

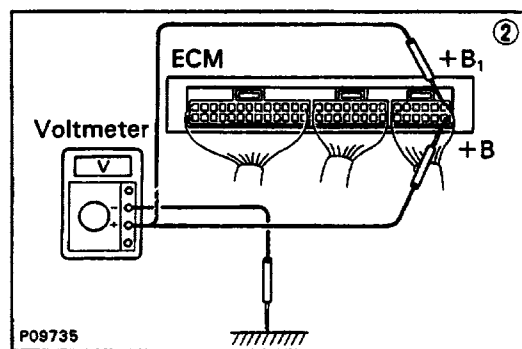


P09735

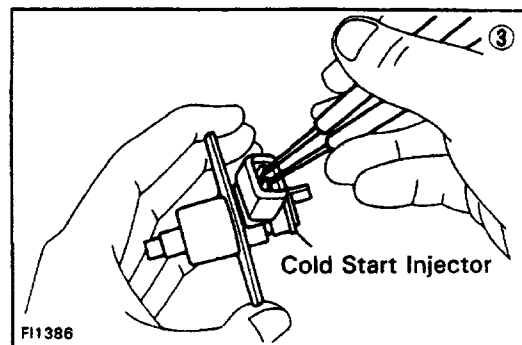


FI1386

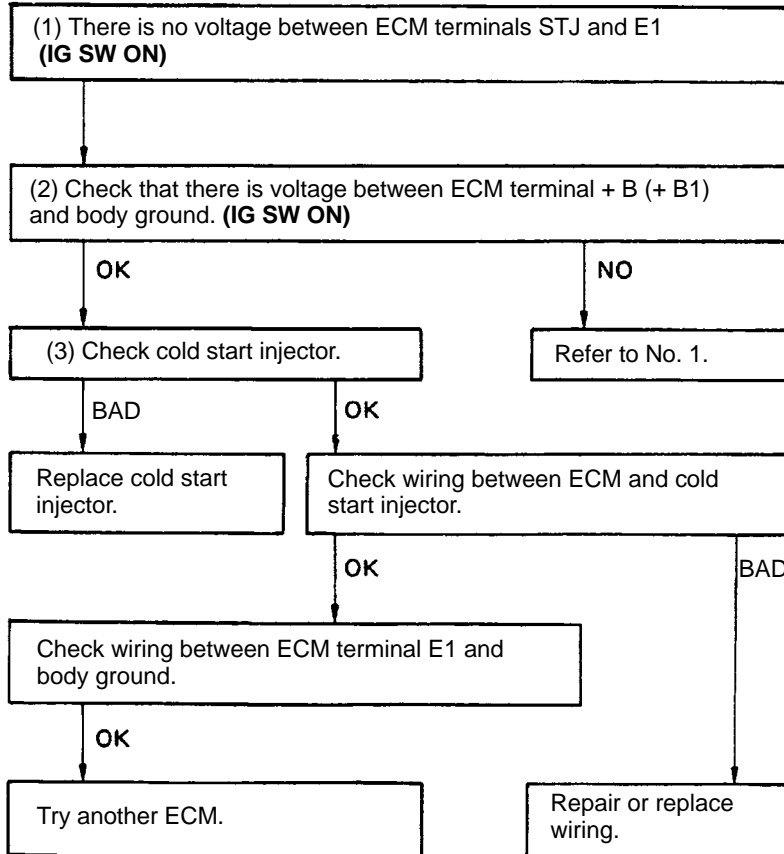


No.	Terminals	Trouble	Condition	STD Voltage
10	STP - E <sub>1</sub>	No voltage	Stop tight switch ON	7.5 - 14 V

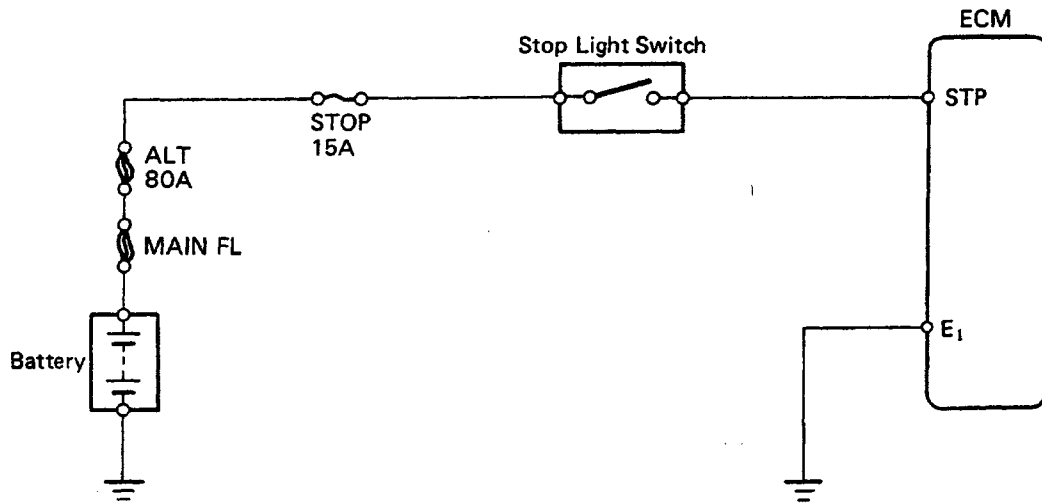


F15972

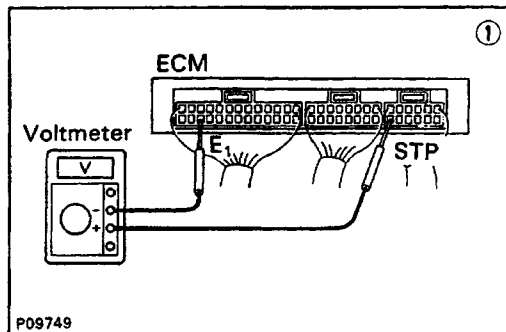

P09749

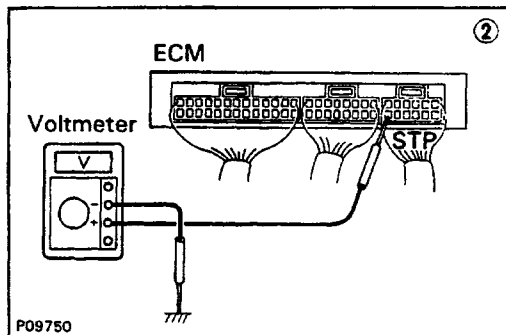

P09750

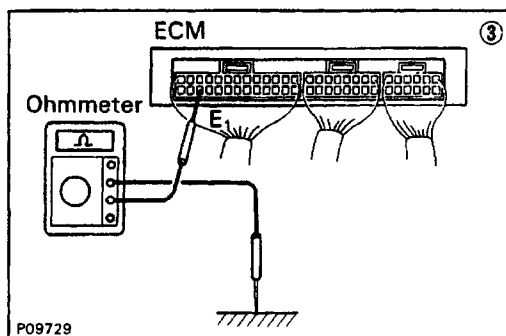

P09729

(1) There is no voltage between ECM terminals STP and E1.

(2) Check that there is voltage between ECM terminal STP and body ground when the brake pedal is depressed.

NO

OK

(3) Check wiring between ECM terminal E1 and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check STOP fuse (15A) and stop light switch.

BAD

Repair or replace.


OK

Check wiring between ECM terminal STP and battery.


BAD

Repair or replace.

(California Vehicles only)

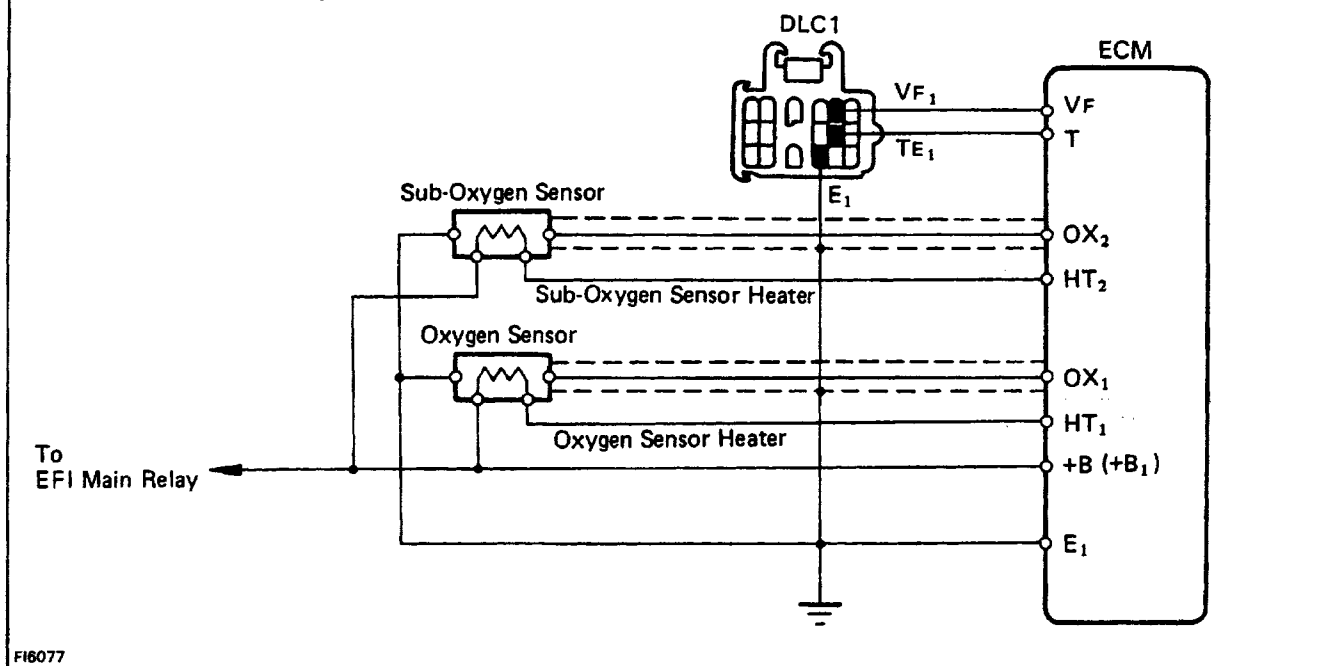

FI6077

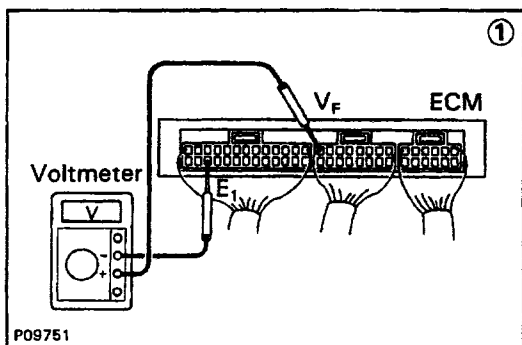

①

(1) There is no voltage between ECM terminals VF and E1.

(2) Check that there is voltage between ECM terminal VF and body ground.

NO

OK

Check wiring between ECM terminal E1 and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Is air leaking into air induction system?

YES

Repair air leak.

NO

Check spark plugs.

BAD

Repair or replace.

OK



Check distributor and ignition system.

BAD


Repair or replace.

OK


CONTINUED ON PAGE [EG1-157](#)

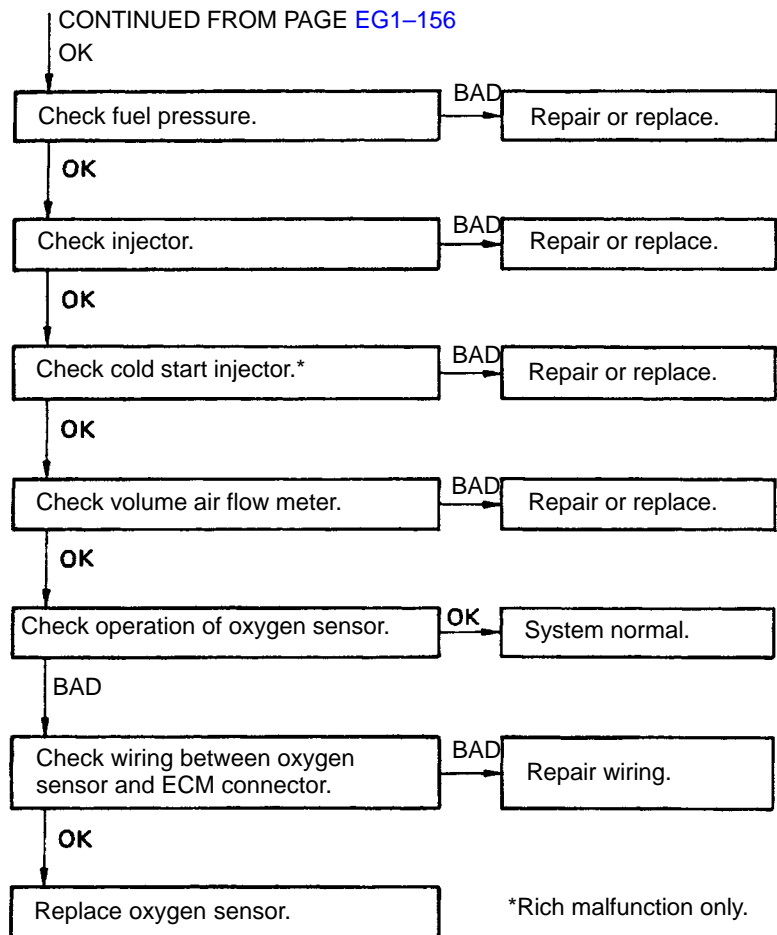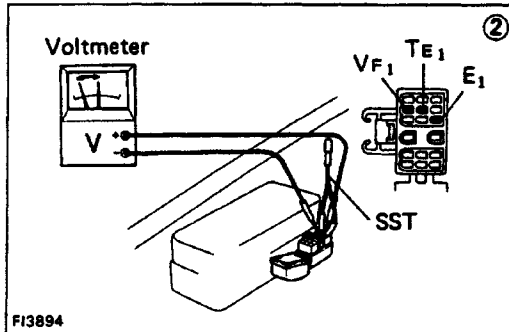


(California Vehicles only)

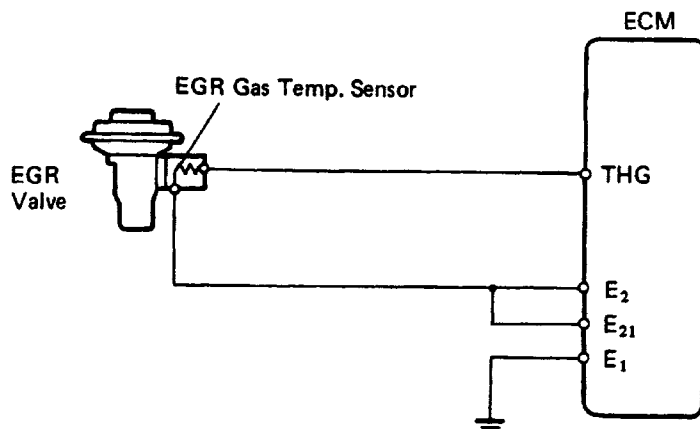


FI3895

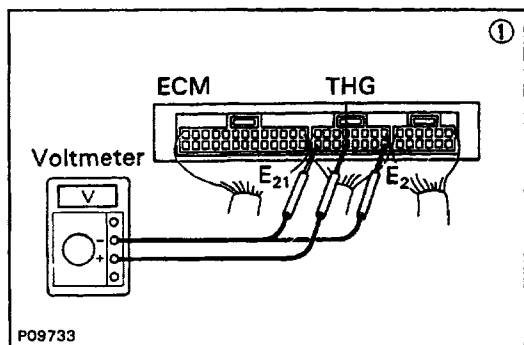

P09733

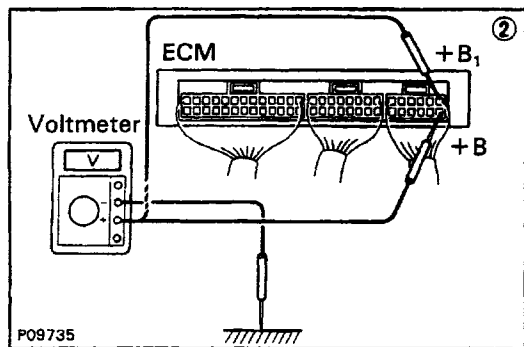

P09735

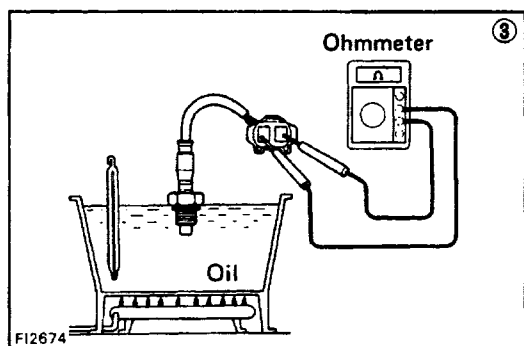

FI2674

(1) There is no voltage between ECM terminals THG and E<sub>2</sub> (E<sub>21</sub>) (Engine running at 2,000 rpm)

(2) Check that there is voltage between ECM terminal +B (+B<sub>1</sub>) and body ground. (IG SW ON)

OK

NO

Refer to No. 1.

Check wiring between ECM terminal E, and body ground.

OK

BAD

Repair or replace.

Check EGR system.

BAD

Repair or replace.

OK

(3) Check EGR gas temp. sensor.

BAD

Replace EGR gas temp. sensor.

OK

Check wiring between ECM and EGR gas temp. sensor.


OK

BAD

Try another ECM.

Repair or replace.



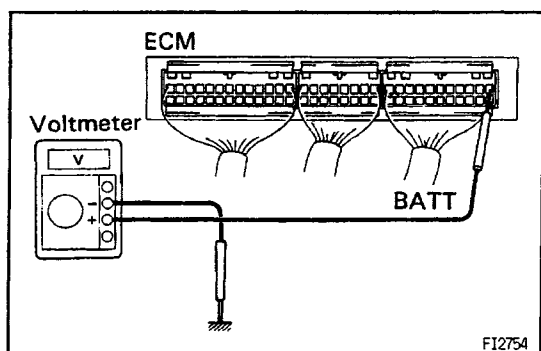

## MFI SYSTEM CHECK PROCEDURE (4WD A/T)

### HINT:


- Perform all voltage measurements with the connectors connected.
- Verify that the battery voltage is 11 V or more when the ignition switch is in "ON" position.

Using a voltmeter with high impedance (10 kΩ/V minimum), measure the voltage at each terminal of the wiring connector.

## Terminals of ECM (4WD A/T)



Symbol	Terminal Name	Symbol	Terminal Name
E <sub>01</sub>	ENGINE GROUND	TE <sub>2</sub>	DLC 1
E <sub>02</sub>	ENGINE GROUND	* O <sub>x2</sub>	OXYGEN SENSOR (SUB)
No.10	INJECTOR	* THG	EGR GAS TEMP. SENSOR
No.20	INJECTOR	THW	ENGINE COOLANT TEMP. SENSOR
Fpu	FUEL PRESSURE CONTROL VSV	IDL	THROTTLE POSITION SENSOR
N	PNP SWITCH	THA	INTAKE AIR TEMP. SENSOR
AS	PAIR VALVE	VTA	THROTTLE POSITION SENSOR
2	PNP SWITCH	Vs	VOLUME AIR FLOW METER
* EGR	EGR VSV	Vc	VOLUME AIR FLOW METER
L	PNP SWITCH	Vcc	THROTTLE POSITION SENSOR
S <sub>1</sub>	No.1 SOLENOID	E <sub>2</sub>	SENSOR GROUND
IGt	IGNITER	STA	STARTER SWITCH
S <sub>2</sub>	No.2 SOLENOID	OD <sub>1</sub>	CRUISE CONTROL COMPUTER
SPD <sub>2</sub>	SPEED SENSOR	SPD <sub>1</sub>	SPEED SENSOR
SL	SL SOLENOID	DG	DLC 1
Ne	DISTRIBUTOR	4WD	4WD SWITCH
IGf	IGNITER	L <sub>4</sub>	TRANSFER POSITION SWITCH
HT <sub>1</sub>	OXYGEN SENSOR HEATER (MAIN)	P	PATTERN SELECT SWITCH
* HT <sub>2</sub>	OXYGEN SENSOR HEATER (SUB)	STP	STOP LIGHT SWITCH
STJ	COLD START INJECTOR	W	MALFUNCTION INDICATOR LAMP
E <sub>1</sub>	ENGINE GROUND	OD <sub>2</sub>	CRUISE CONTROL COMPUTER
V <sub>F</sub>	DLC 1	E <sub>21</sub>	SENSOR GROUND
KNK	KNOCK SENSOR	+B <sub>1</sub>	MAIN RELAY
TE <sub>1</sub>	DLC 1	BATT	BATTERY POSITIVE VOLTAGE
O <sub>x1</sub>	OXYGEN SENSOR (MAIN)	+B	MAIN RELAY

\* : California only  
ECM Terminals

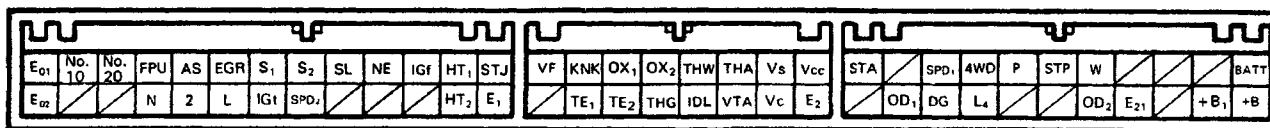

## Voltage at ECM Connectors (4WD A/T)

No.	Terminals	Condition		STD voltage	See page
1	BATT – E <sub>1</sub>	—		9 – 14	EG1-161
	+B – E <sub>1</sub>	Ignition switch ON			
	+B <sub>1</sub> – E <sub>1</sub>				
2	IDL – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Throttle valve open	9 – 14	EG1-163
	Vcc – E <sub>2</sub> (E <sub>21</sub> )		—	4.5 – 5.5	
	VTA – E <sub>2</sub> (E <sub>21</sub> )		Throttle valve fully closed	0.3 – 0.8	
			Throttle valve fully open	3.2 – 4.9	
3	Vc – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	—	6 – 10	EG1-165
	Vs – E <sub>2</sub> (E <sub>21</sub> )		Measuring plate fully closed	0.5 – 2.5	
			Measuring plate fully open	5 – 10	
	THA – E <sub>2</sub> (E <sub>21</sub> )	Idling		2 – 8	
		Ignition switch ON	Intake air temperature 20°C (68°F)	0.5 – 3.4	
4	THW – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Coolant temperature 80°C (176°F)	0.2 – 1.0	EG1-167
5	STA – E <sub>1</sub>	Ignition switch START position		6 – 12	EG1-168
6	No. 10 – E <sub>01</sub> No. 20 – E <sub>02</sub>	Ignition switch ON		9 – 14	EG1-169
7	IGt – E <sub>1</sub>	Idling		0.7 – 1.0	EG1-170
8	W – E <sub>1</sub>	No trouble (MIL off) and engine running		9 – 14	EG1-171
9	STJ – E <sub>1</sub>	Ignition switch START position	Coolant temperature 80°C (176°F)	6 – 12	EG1-172
10	STP – E <sub>1</sub>	Stop light switch ON		7.5 – 14	EG1-173

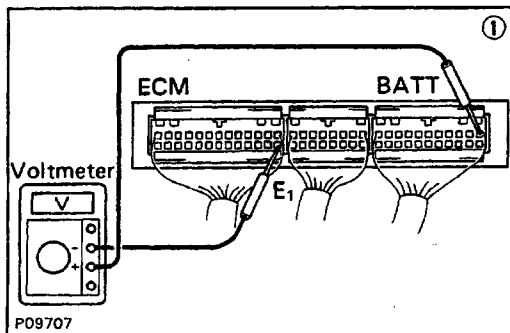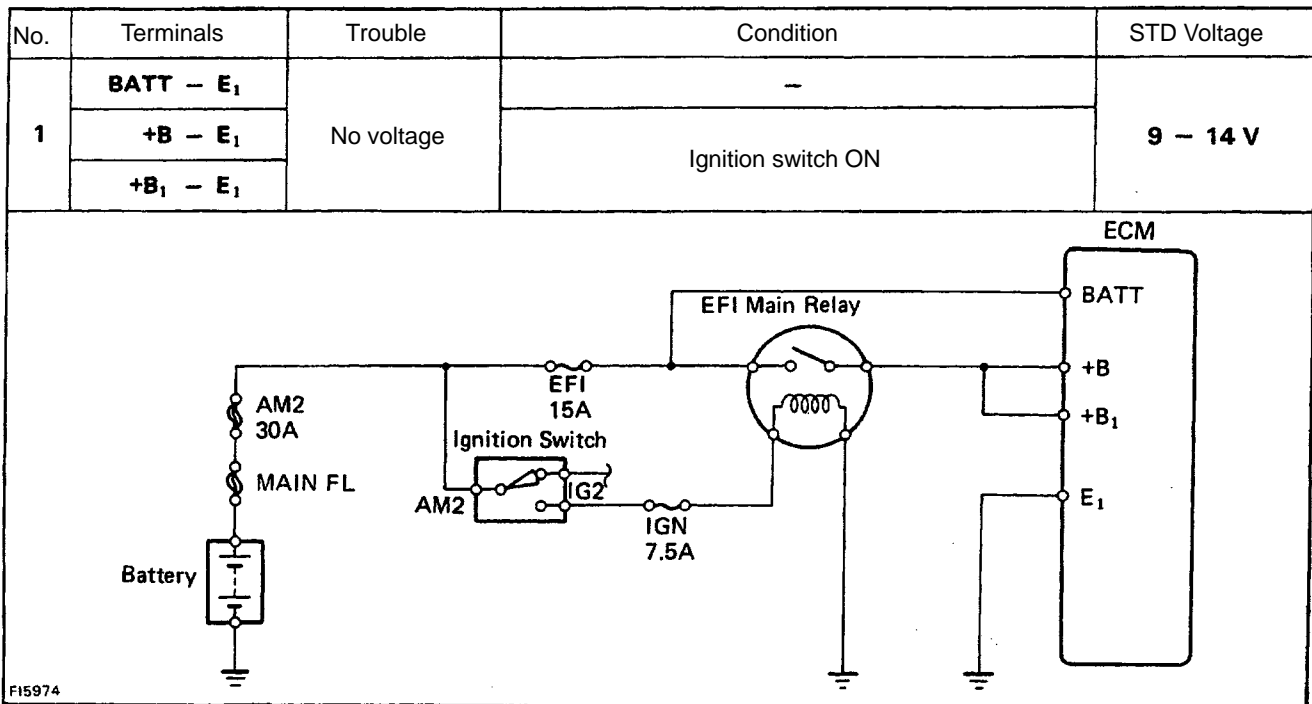

### • BATT - E<sub>1</sub>

(1) There is no voltage between ECM terminals BATT and E<sub>1</sub>.

(2) Check that there is voltage between ECM terminal BATT and body ground.

NO

OK

(3) Check wiring between ECM terminal E<sub>1</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check fuse and fusible link.

BAD



Replace.




OK

Check wiring between fuse and ECM.

BAD

Repair or replace.

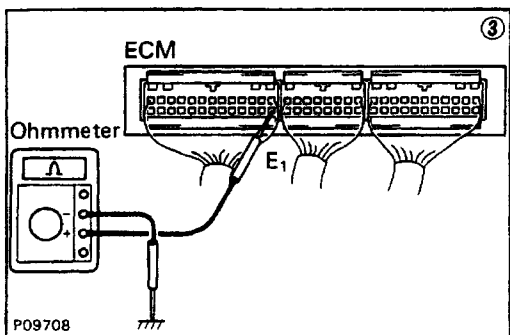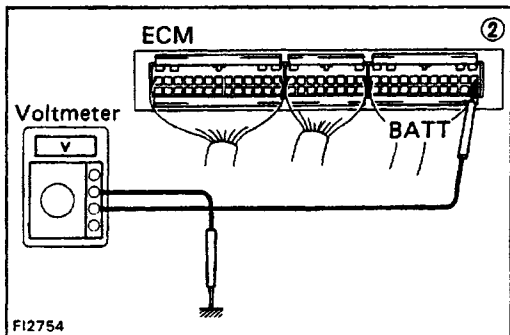

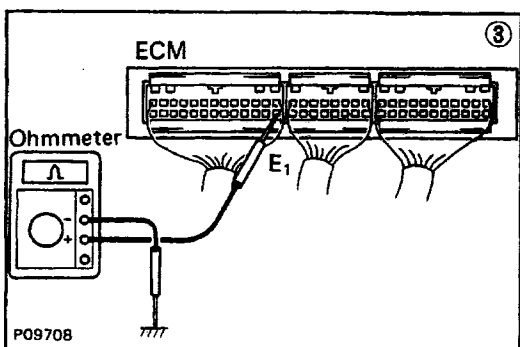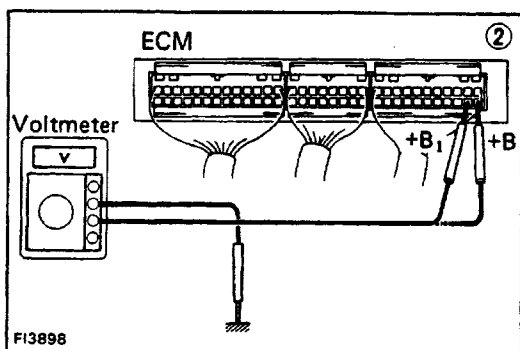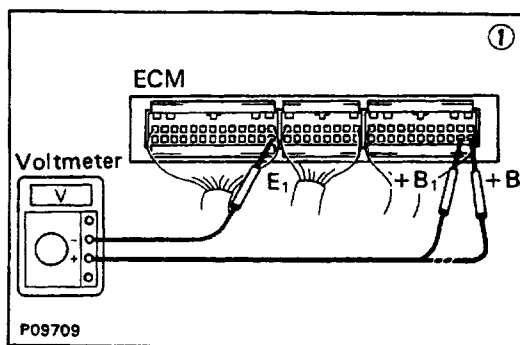

### • +B (B+) -E1

(1) There is no voltage between ECM terminals +B ( +B1) and E1. (IG SW ON)

(2) Check that there is voltage between ECM terminal + B (+B1 ) and body ground. (IG SW ON)

NO OK

(3) Check wiring between ECM terminal E1 and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check fuse, fusible link and ignition switch.

BAD

Repair or replace.

OK

Check EF I main relay.

BAD

Replace.

OK

Check wiring between EFI main relay and battery.

BAD

Repair or replace.


OK

Check wiring between EM main relay and ECM terminal +B (+B1).


BAD

Repair or replace.


No.	Terminals	Trouble	Condition		STD Voltage
2	IDL – E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	Throttle valve open	9 – 14V
	—			4.5 – 5.5 V	
	Throttle valve fully dosed			0.3 – 0.8 V	
	Throttle valve fully open			3.2 – 4.9 V	
	Vcc – E <sub>2</sub> (E <sub>21</sub> )				
	VTA – E <sub>2</sub> (E <sub>21</sub> )				

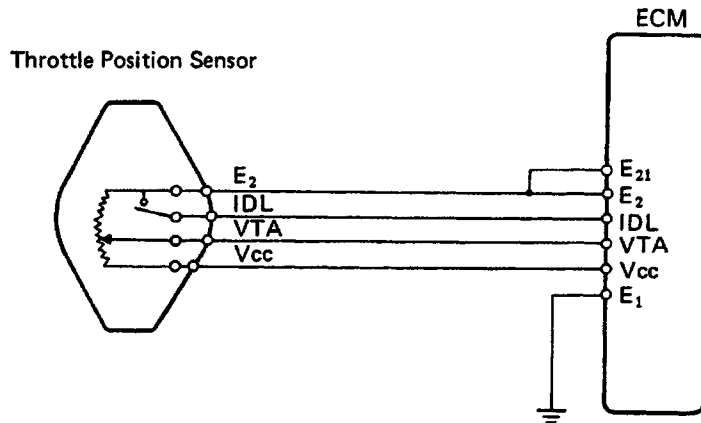


F13877

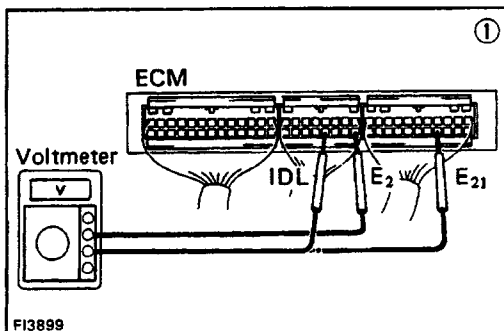

F13899

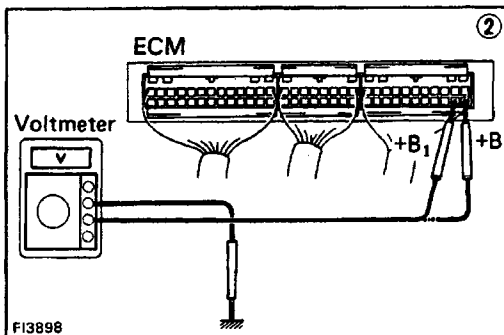



F13898

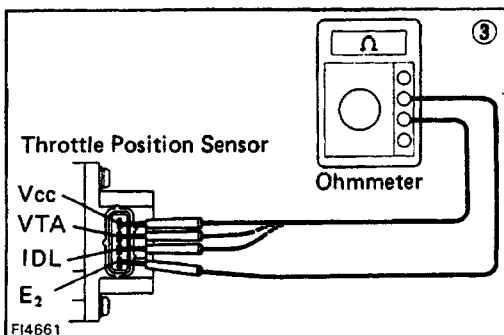

F14661

### • IDL - E<sub>2</sub> (E<sub>21</sub>)

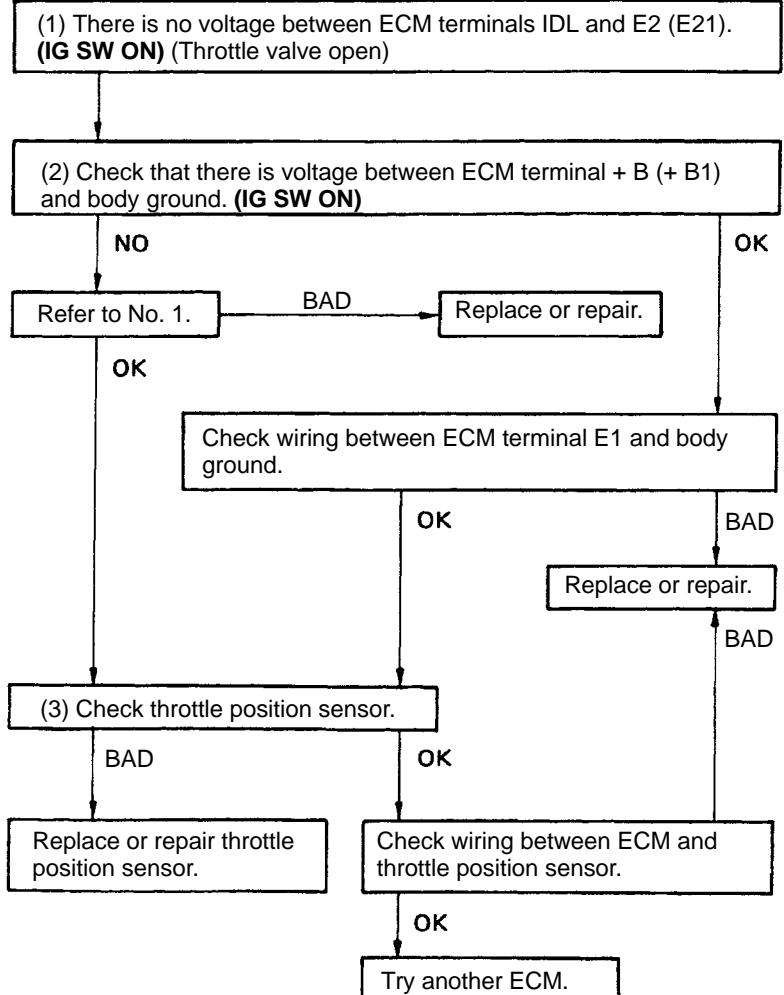

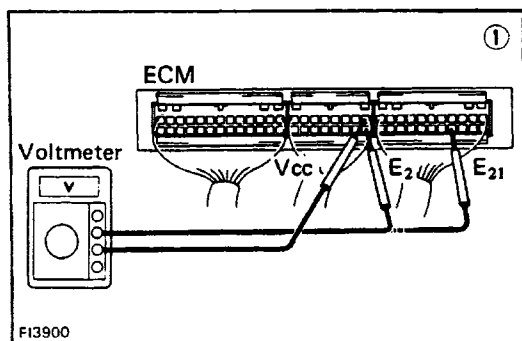

### • Vcc – E2 (E21 )

(1) There is no voltage between ECM terminals Vcc and E2. (IG SW ON)

(1) Check that there is voltage between ECM terminals + B (+ B1 ) and E1. (IG SW ON)

OK

Check throttle position sensor.

BAD

Repair or replace.

OK

Check wiring between ECM and throttle position sensor.

OK



Try another ECM.

NO

Refer to No. 11 .

BAD

Repair or replace wiring.

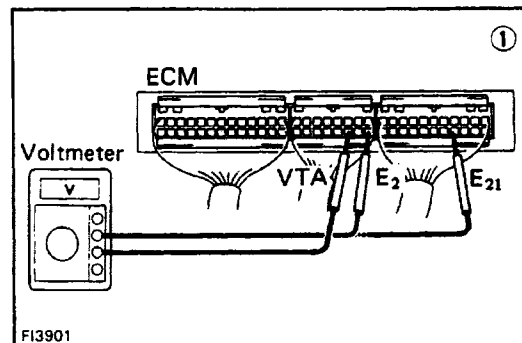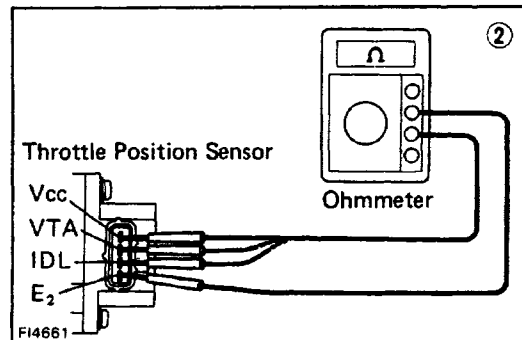

### • VTA – E2 (E21)

(1) There is no voltage between ECM terminals VTA and E2 (E21). (IG SW ON)

(2) Check that there is voltage between ECM terminals Vcc and E2 (E21). (IG SW ON)

OK

NO

Perform inspection of Vcc – E2 (E21 ).

(3) Check throttle position sensor.

BAD

Repair or replace.

OK



Check wiring between ECM and throttle position sensor.

BAD


Repair or replace.

OK


Try another ECM.

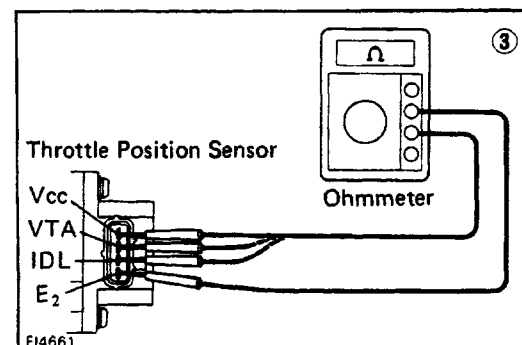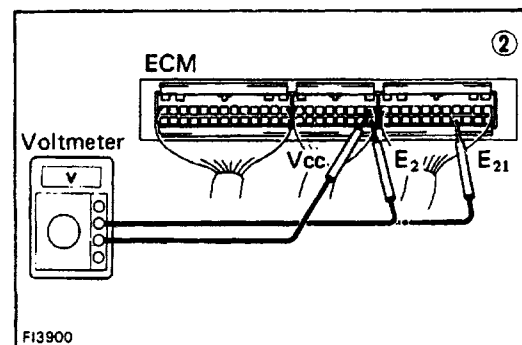


No.	Terminals	Trouble	Condition		STD Voltage
3	Vc – E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	–	6 – 10 V
	Measuring plate fully closed			0.5 – 2.5 V	
	Measuring plate fully open			5 – 10 V	
	Idling		2 – 8 V		
	THA – E <sub>2</sub> (E <sub>21</sub> )		Ignition switch ON	Intake air temperature 20°C (68°F)	0.5 – 3.4 V

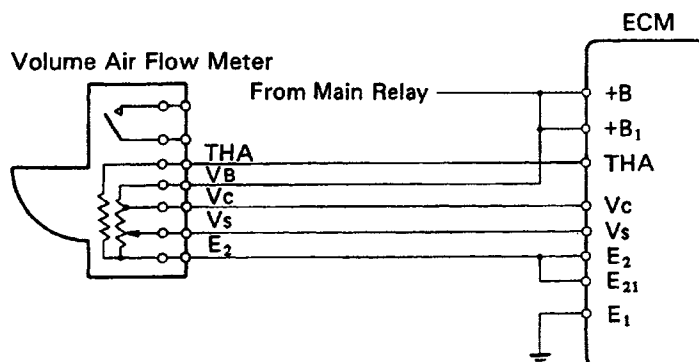


F13881

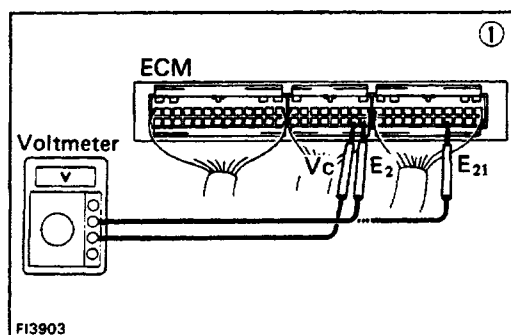

F13903

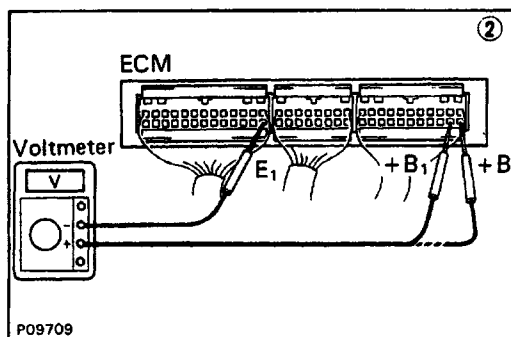

P09709

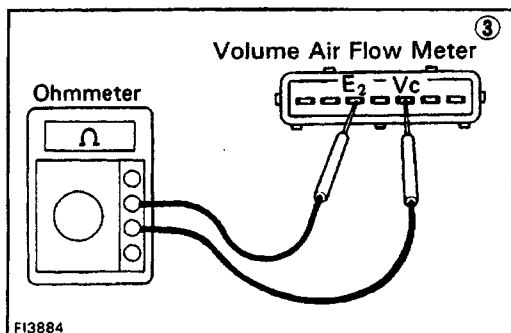

F13884

### • Vc - E2 (E21)

(1) There is no voltage between ECM terminals Vc and E2 (E21). (IG SW ON)

(2) Check that there is voltage between ECM terminals +B (+B1) and E1. (IG SW ON)

OK

NO

(3) Check volume air flow meter.

Refer to No. 1.

BAD

OK

Replace or repair volume air flow meter.






Check wiring between ECM and volume air flow meter.

OK


BAD

Try another ECM.


Replace or repair wiring.

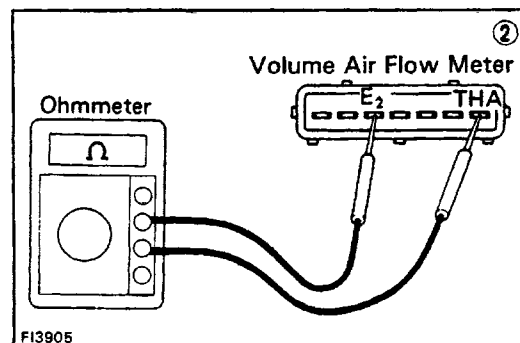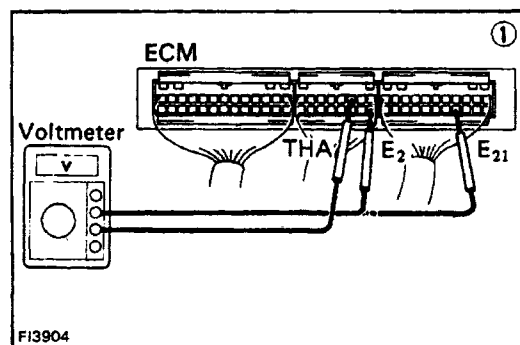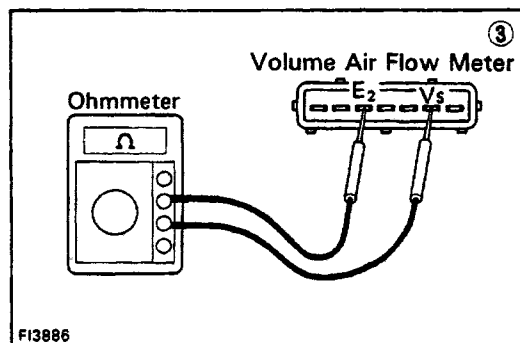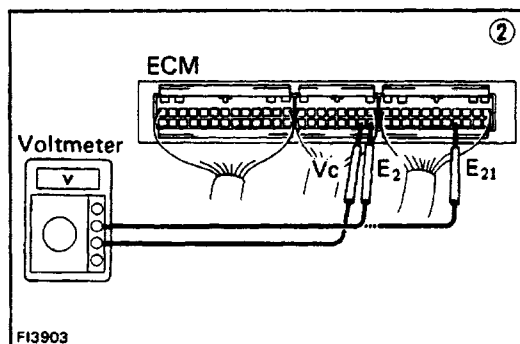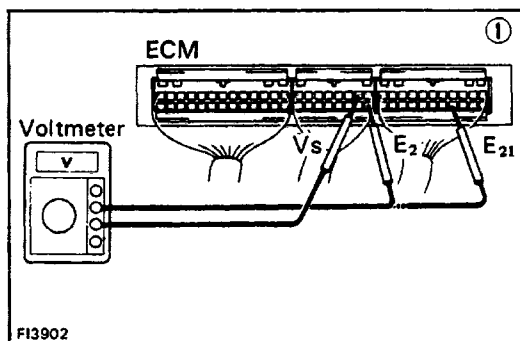

### • Vs - E2 (E21)

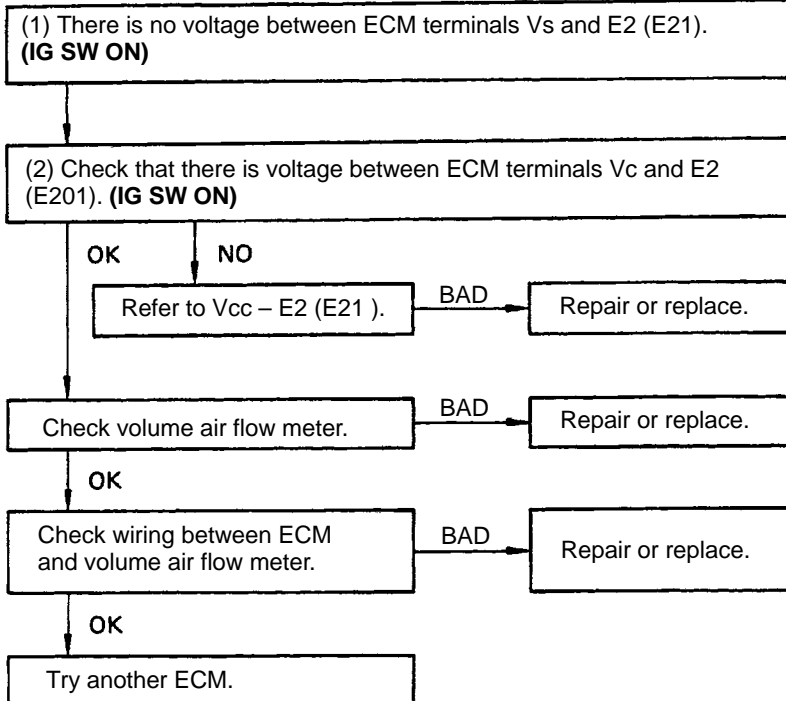


### • THA - E2 (E21)

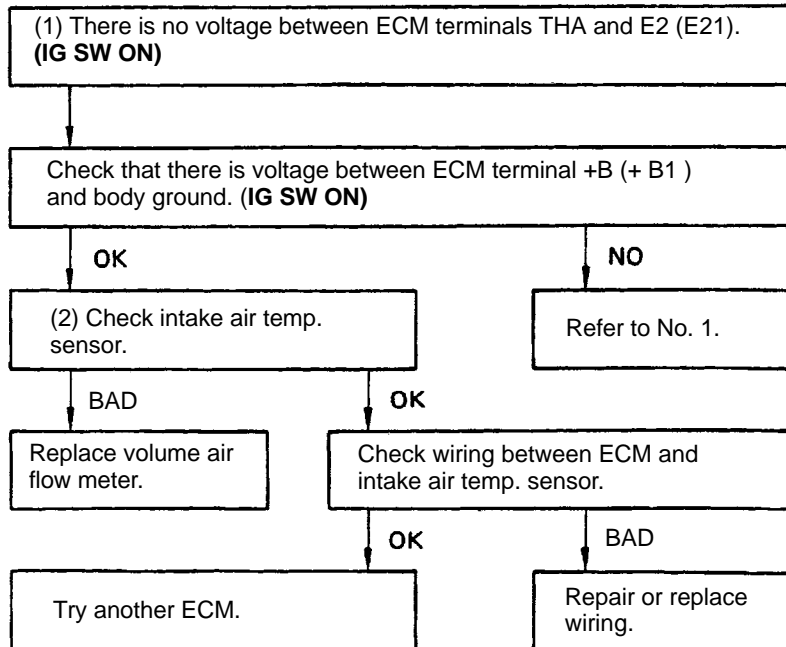




No.	Terminals	Trouble	Condition		STD Voltage
4	THW - E <sub>2</sub> (E <sub>21</sub> )	No voltage	Ignition switch ON	Coolant temperature 80°C (176°F)	0.2 - 1.0 V

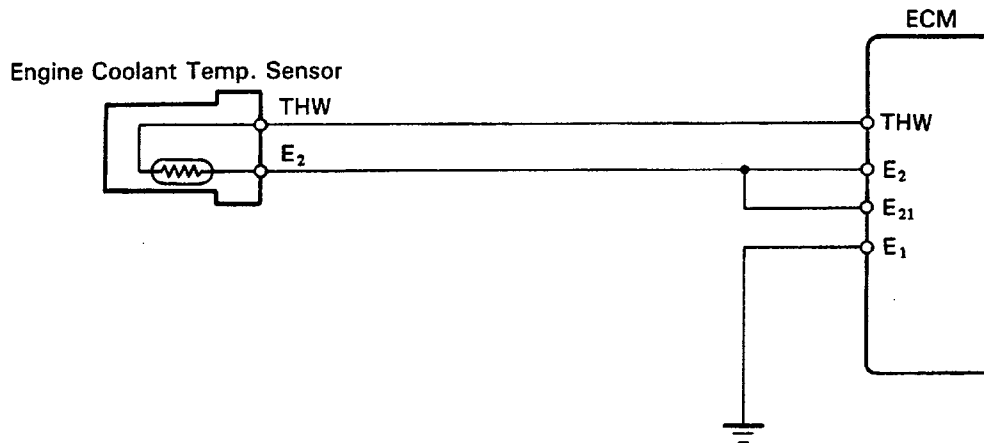

FI5971

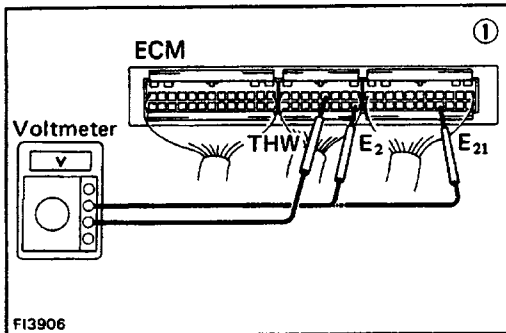

FI3906


(1) There is no voltage between ECM terminals THW and E2 (E21) (IG SW ON)

(2) Check that there is voltage between ECM terminal +B (+B1) and body ground. (IG SW ON)

OK

NO

Refer to No. 1.

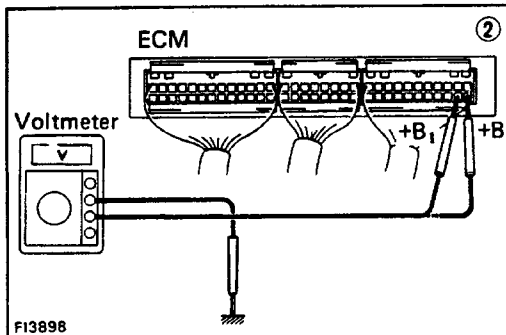

FI3898

Check wiring between ECM terminal E1 and body ground.

OK

BAD

Check engine coolant temp. sensor.

Repair or replace.

BAD

OK

Replace engine coolant temp. sensor.


Check wiring between ECM and engine coolant temp. sensor.

OK


BAD

Try another ECM.


Repair or replace.

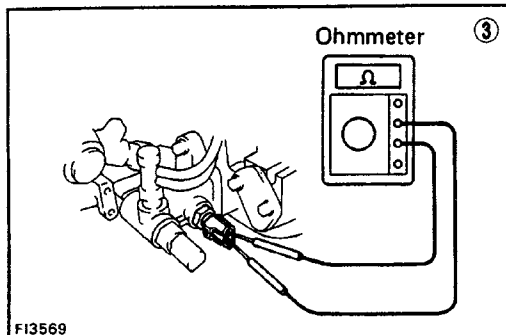


FI3569

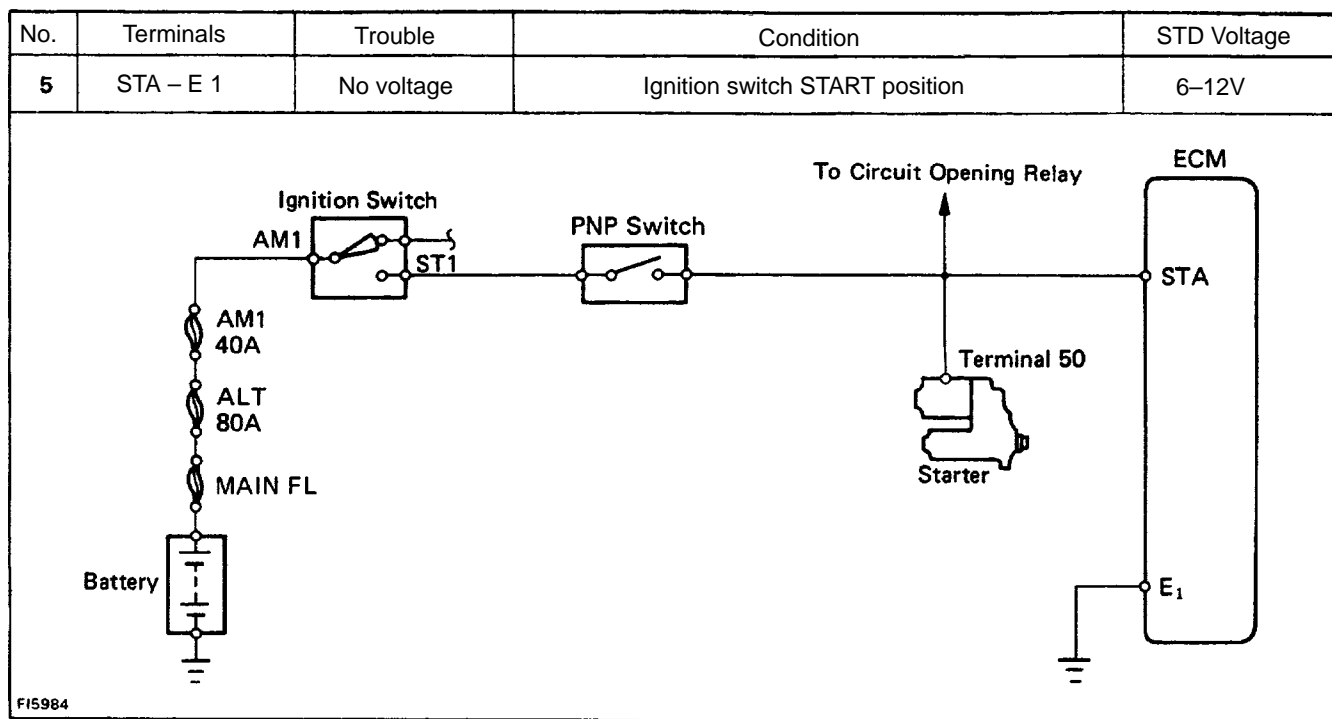


FI5984

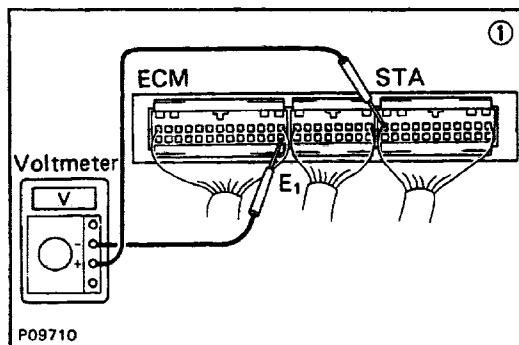

P09710

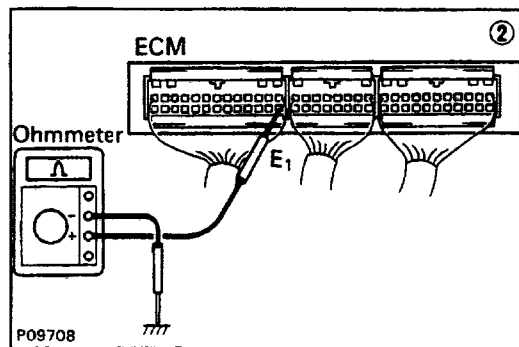


P09708

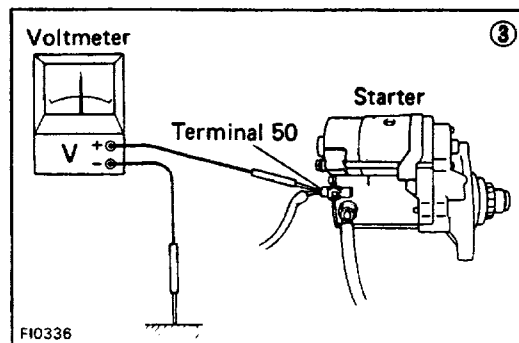


FI0336


(1) There is no voltage between ECM terminals STA and E1 (IG SW START)

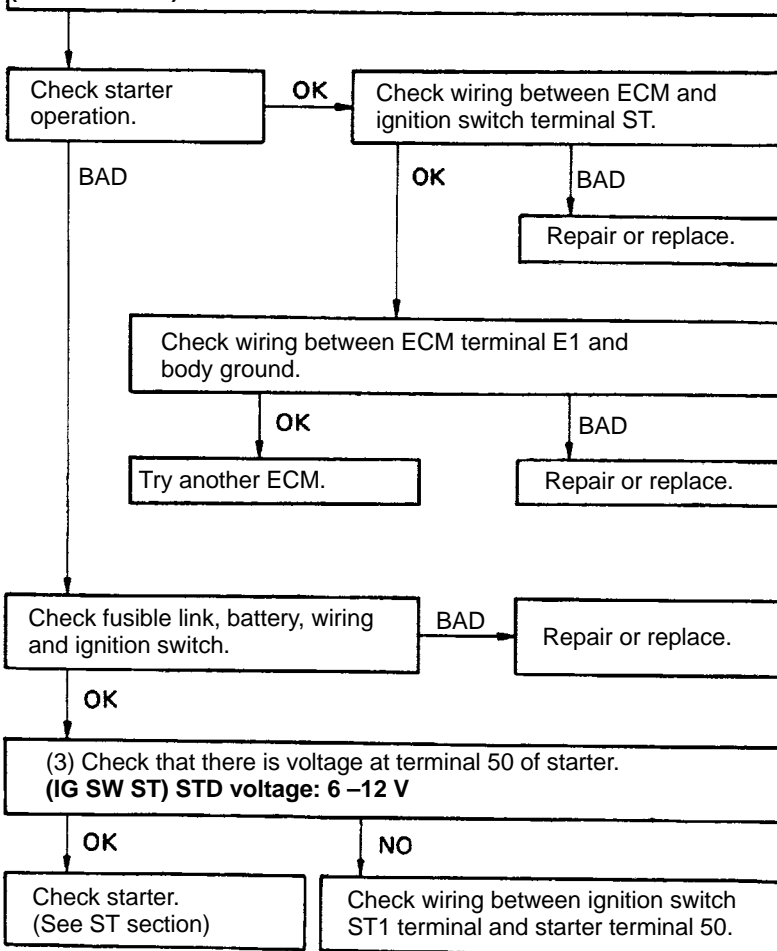

No.	Terminals	Trouble	Condition	STD Voltage
6	No. 10 - E <sub>01</sub> No. 20 E <sub>02</sub>	No voltage	Ignition switch ON	9 - 14 V

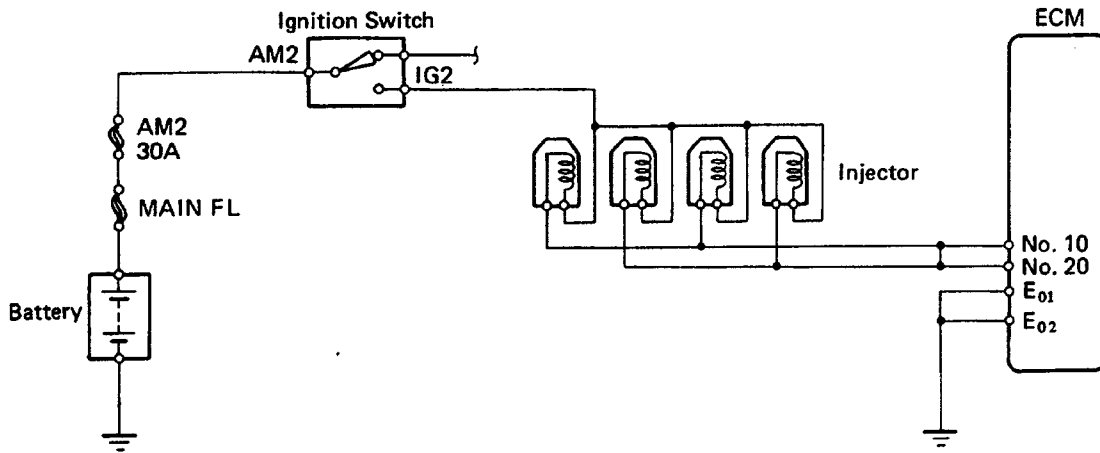

FI5975

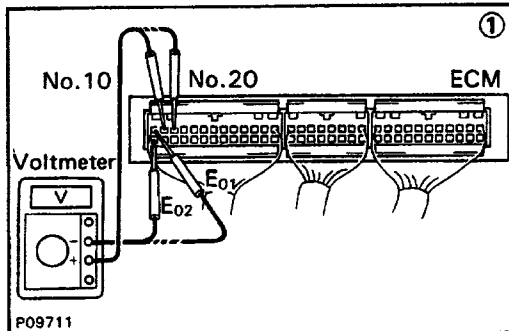

(1) There is no voltage between ECM terminals No. 10 and/or No. 20 and E<sub>01</sub>, and/or E<sub>02</sub>— (IG SW ON)

(2) Check that there is voltage between ECM terminal No. 10 a and/or No. 20 and body ground.

NO

OK

Check wiring between ECM terminal E<sub>01</sub>, and/or E<sub>02</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check fusible link and ignition switch.

BAD

Repair or replace.

OK

(3) Check resistance of magnetic coil in each injector  
STD resistance: 13.4 - 14.2  $\Omega$

OK



NO



Replace injector.

Check wiring between ECM terminal No. 10 and/or No. 20 and battery.

BAD

Repair or replace.

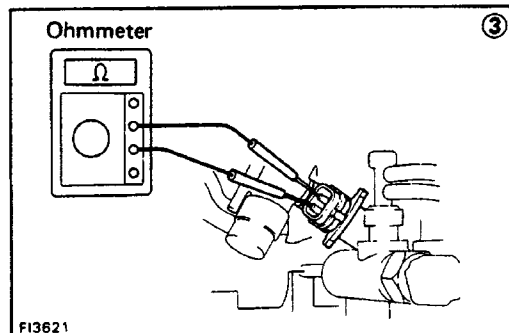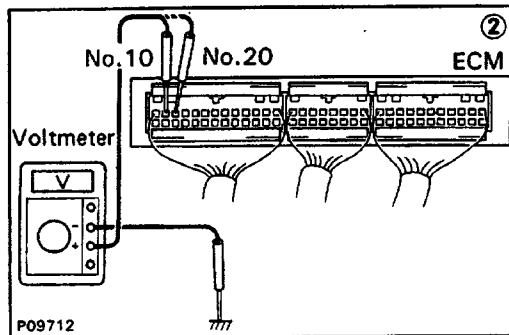

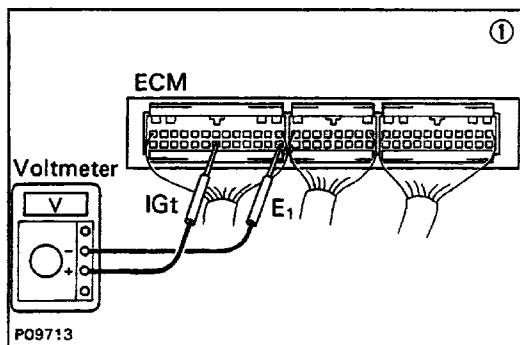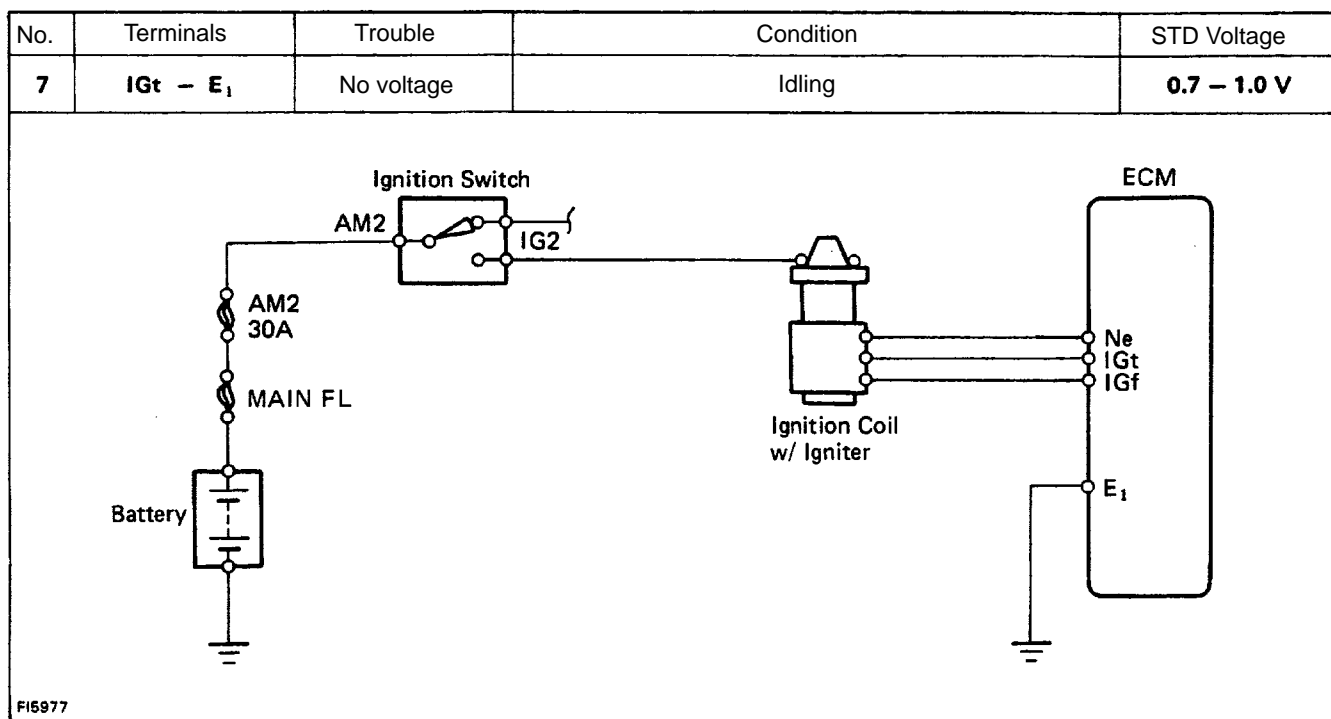

(1) There is no voltage between ECM terminals IGt and E1.  
(Idling)

(2) Check that there is voltage between ECM terminal IGt and body ground. (Idling)

NO

OK

(3) Check wiring between ECM terminal E1 and body ground.

BAD

Refer to No. 1.

BAD

Repair or replace.

OK

Check wiring between igniter and distributor.

BAD

Repair or replace.

OK

Check distributor.

BAD

Replace.

OK

Check wiring between ECM and igniter.

BAD

Repair or replace.

OK



Check igniter.

BAD


Repair or replace.

OK




Try another ECM.

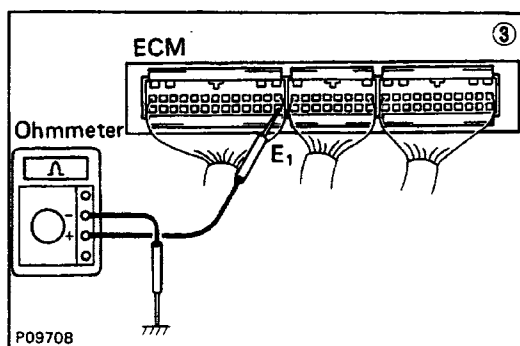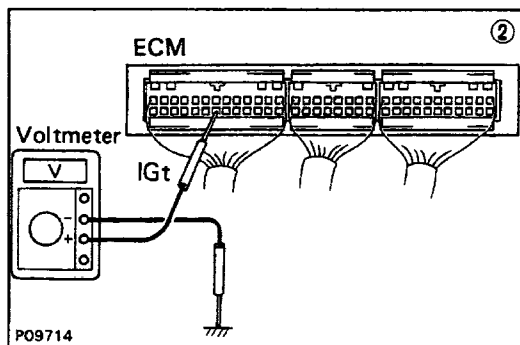

No.	Terminals	Trouble	Condition	STD Voltage.
8	W - E <sub>1</sub>	No voltage	No trouble (MIL off) and engine running	9 - 14 V

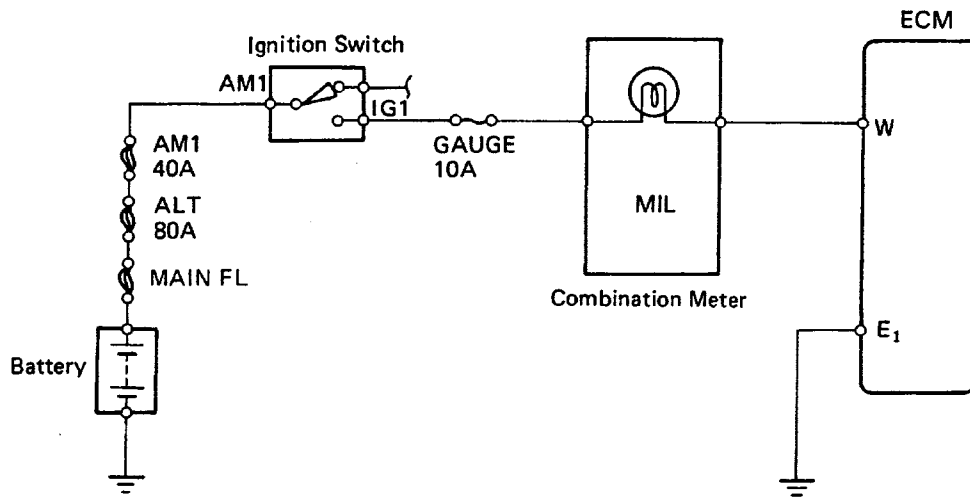

F15979

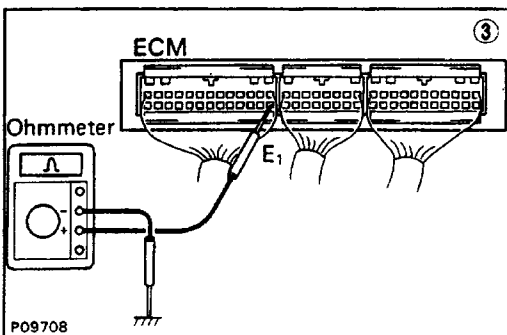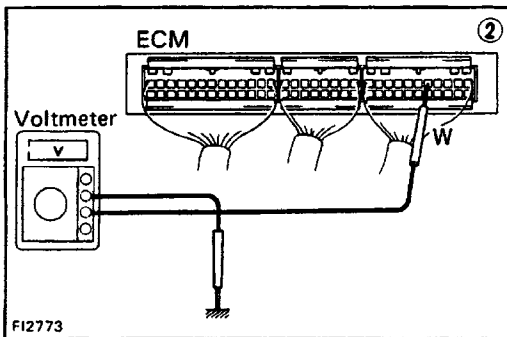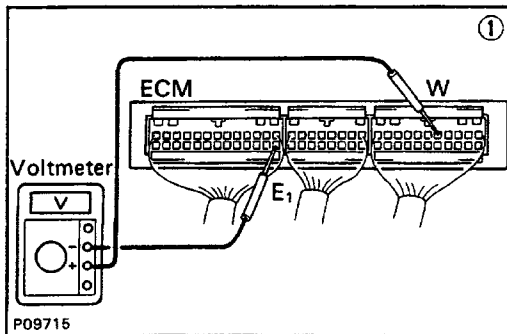

(1) There is no voltage between ECM terminals W and E<sub>1</sub>.  
(Idling)

(2) Check that there is voltage between ECM terminal W and body ground.

NO

OK

(3) Check wiring between ECM terminal E<sub>1</sub> and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Check GAUGE fuse (10 A) and MIL.

OK

BAD



Repair or replace.

Fuse blows again

Check wiring between ECM terminal W and fuse.

BAD

Repair or replace.

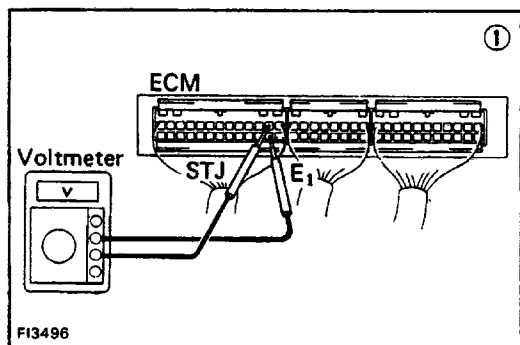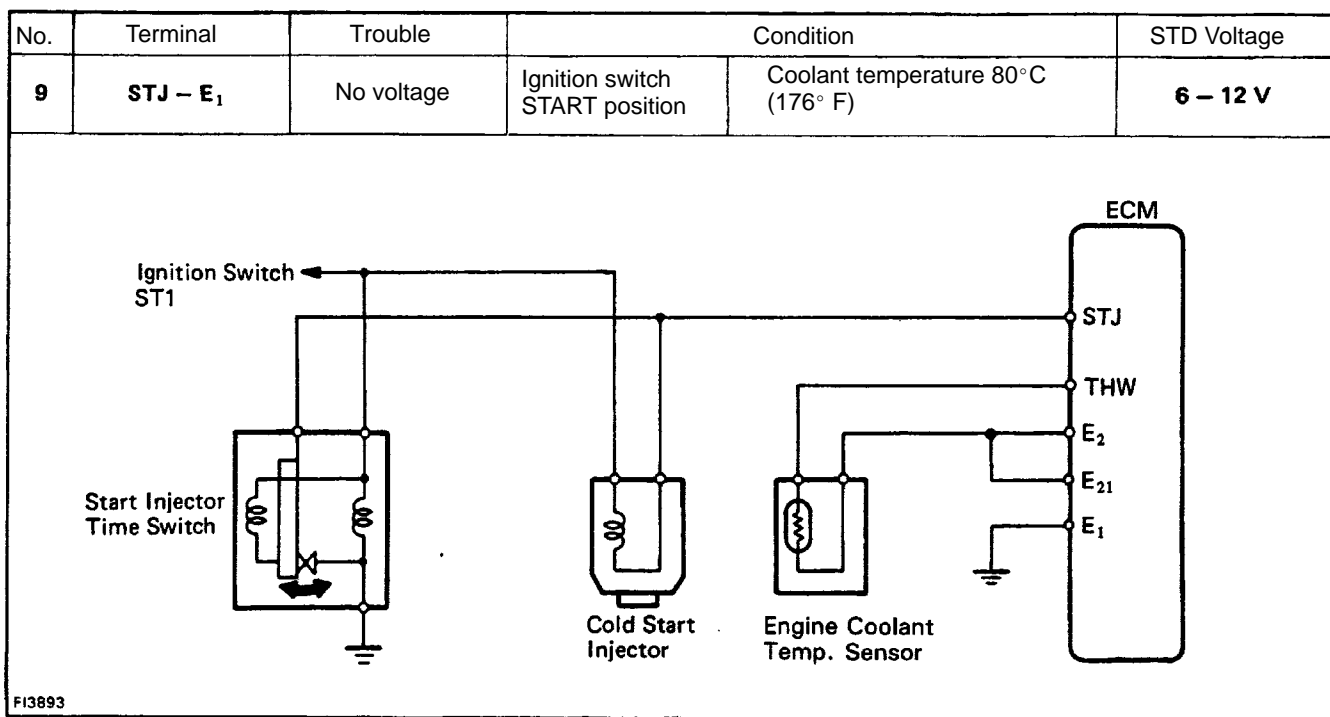

(1) There is no voltage between ECM terminals STJ and E<sub>1</sub>.  
(IG SW START)

(2) Check that there is voltage between ECM terminal +B (+ B1) and body ground. (IG SW ON)

OK

NO

(3) Check cold start injector.

Refer to No. 1.

BAD

OK

Replace cold start injector.

Check wiring between ECM and cold start injector.

OK



BAD

Check wiring between ECM terminal E<sub>1</sub> and body ground.


OK

Try another ECM.


Repair or replace wiring.

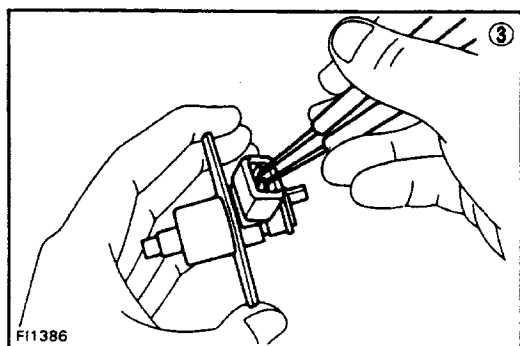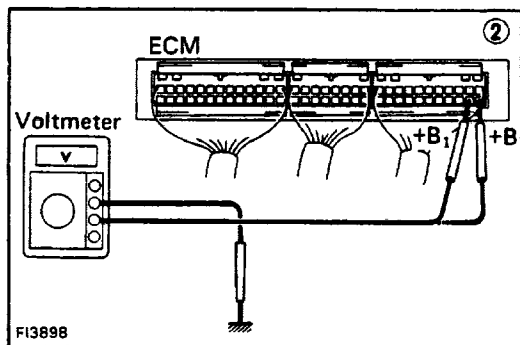


No.	Terminals	Trouble	Condition	STD Voltage
10	STP - E <sub>1</sub>	No voltage	Stop light switch ON	7.5 - 14 V

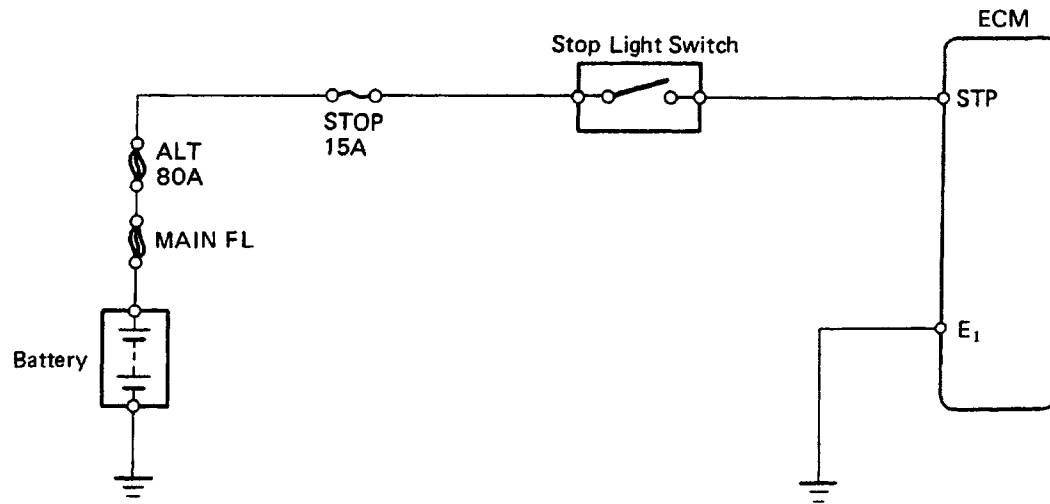


FI5972

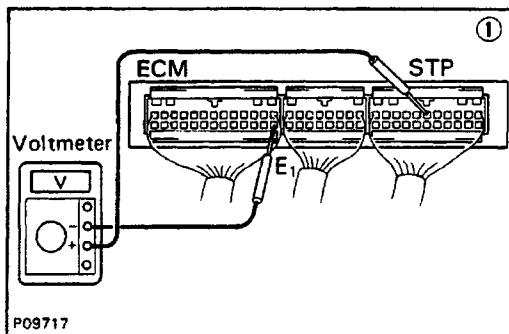


P09717

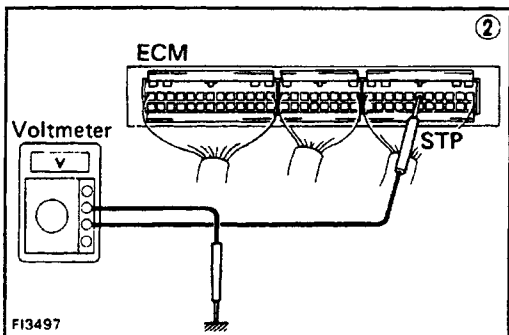


FI3497

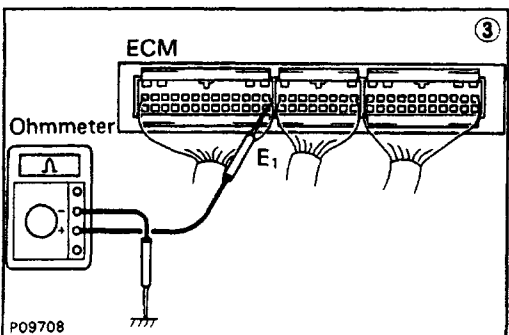


P09708

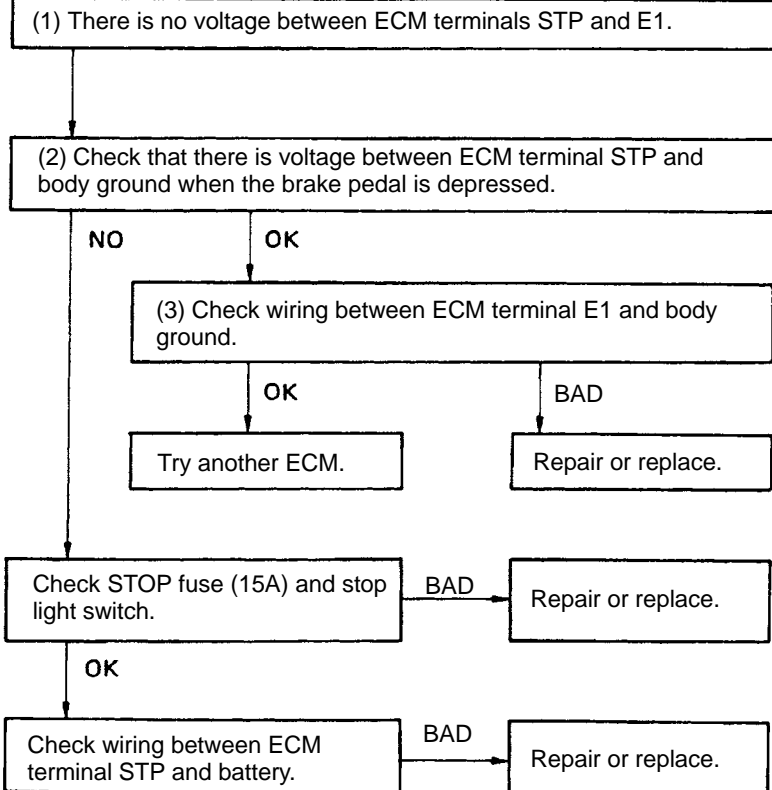

(California Vehicles only)

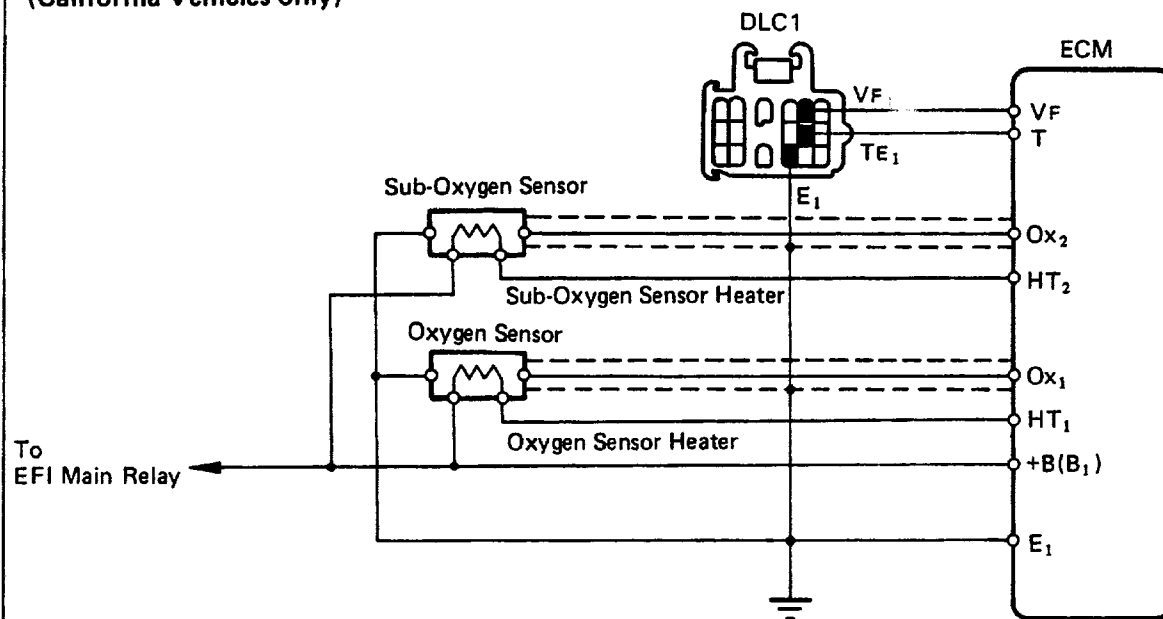

FI6077

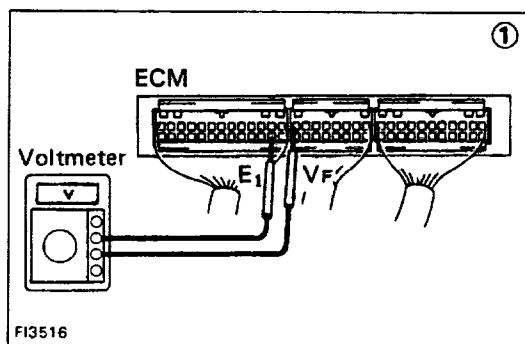

FI3516

(1) There is no voltage between ECM terminals VF and E1.

(2) Check that there is voltage between ECM terminal VF and body ground.

NO

OK

(3) Check wiring between ECM terminal E1 and body ground.

OK

BAD

Try another ECM.

Repair or replace.

Is air leaking into air induction system?

YES

Repair air leak.

NO

Check spark plugs.

BAD

Repair or replace.

OK

Check distributor and ignition system.

BAD


Repair or replace.

OK


CONTINUED 4N PAGE [EG1-175](#)




CONTINUED FROM PAGE EG1-174

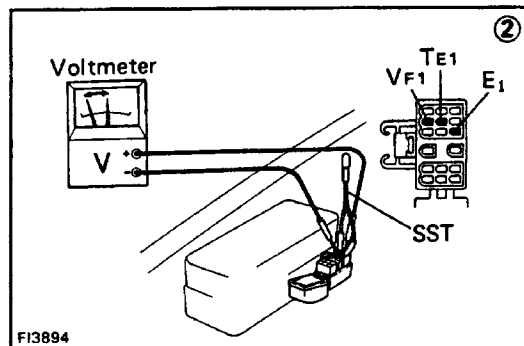


FI3894

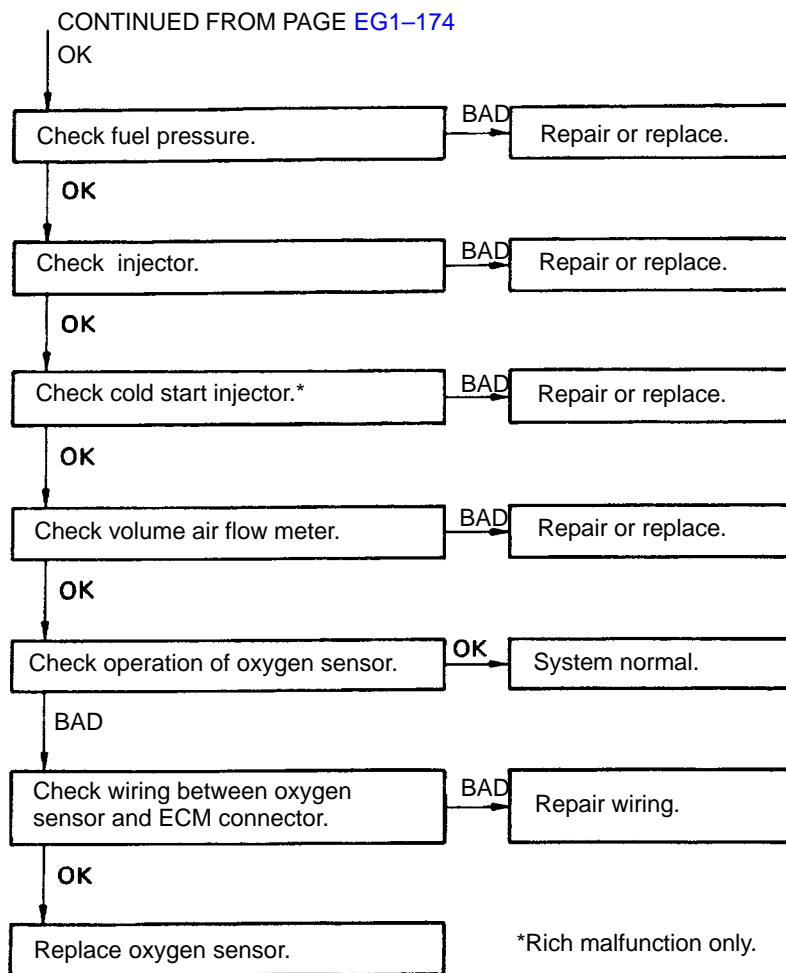

\*Rich malfunction only.

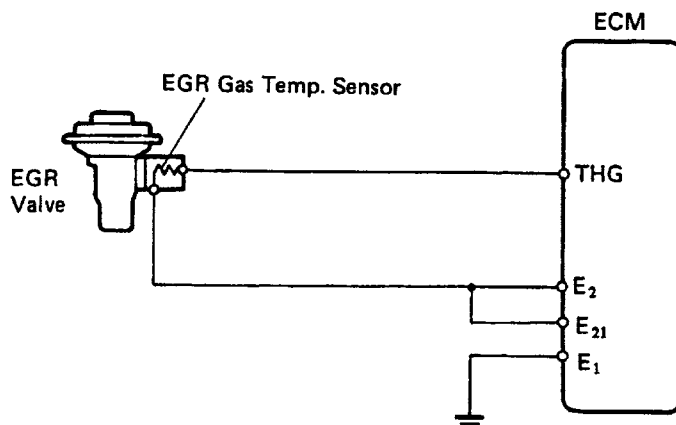**(California Vehicles only)**

FI3895

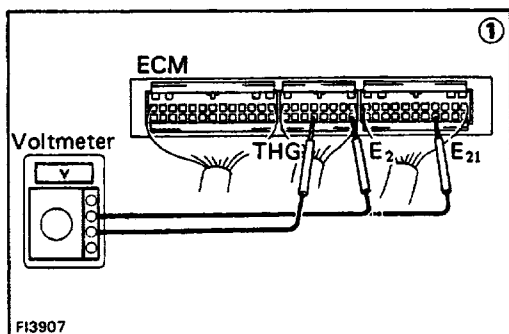

FI3907


(1) There is no voltage between ECM terminals THG and E2 (E21)  
(Engine running at 2,000 rpm)

(2) Check that there is voltage between ECM terminal +B (+B1)  
and body ground. **(IG SW ON)**

OK

NO

Refer to No. 1.

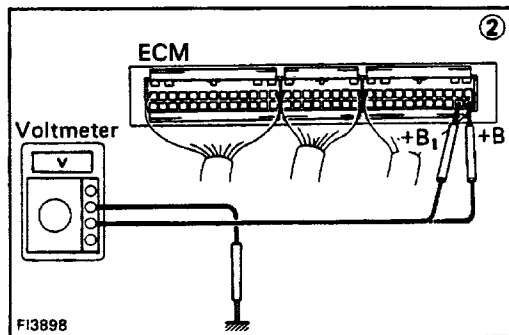

FI3898

Check wiring between ECM terminal E1 and body ground.

OK

BAD

Repair or replace.

Check EGR system.

BAD

Repair or replace.

OK

Check EGR gas temp. sensor.

BAD

Replace EGR gas temp.  
sensor.

OK


Check wiring between ECM and  
EGR gas temp. sensor.

OK

Try another ECM.

BAD



Repair or replace.

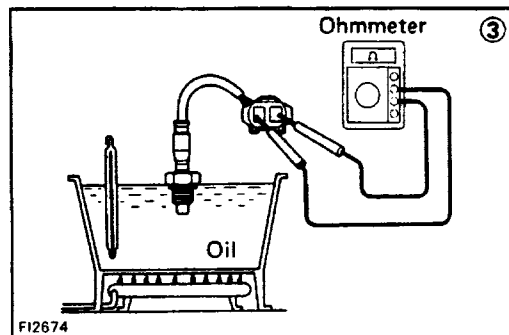

FI2674

**EG1XL-01**



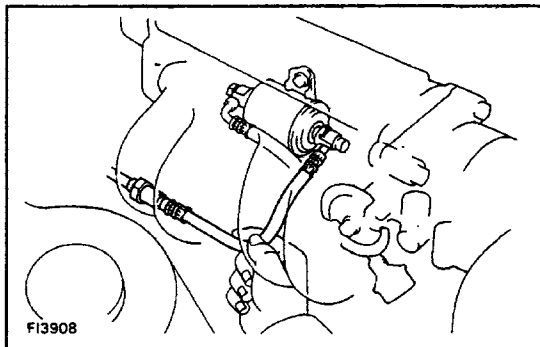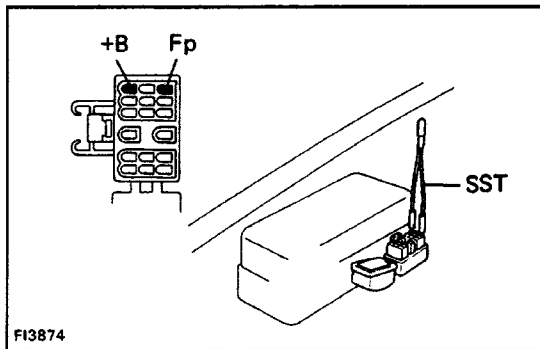

## ON-VEHICLE INSPECTION

### 1. CHECK FUEL PUMP OPERATION

(a) Turn the ignition switch ON.

HINT: Do not start the engine.

(b) Using SST, connect terminals Fp and +B of the DLC1.

SST 09843-18020

HINT: The DLC1 is located near the No. 2 relay block.

(c) Check that there is pressure in the fuel inlet hose.

HINT: At this time, you will hear fuel return noise from the pressure regulator.

(d) Remove SST from the DLC1.

(e) Turn the ignition switch OFF.


If there is no pressure, check the following parts:

- Fusible links
- Fuses (EFI 15A, IGN 7.5A)
- EFI main relay
- Circuit opening relay
- Fuel pump
- Wiring connections


### 2. CHECK FUEL PRESSURE

(a) Check that the battery voltage is above 12 volts.

(b) Disconnect the cable from the negative terminal of the battery.

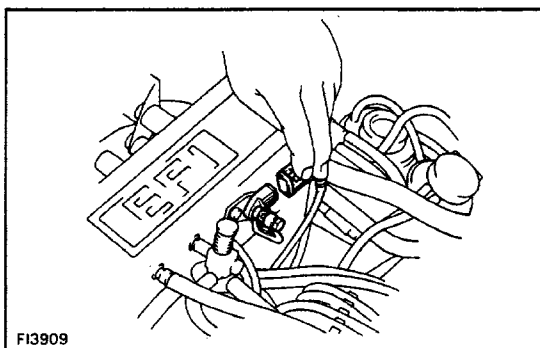


(c) Disconnect the wiring connector from the cold start injector.

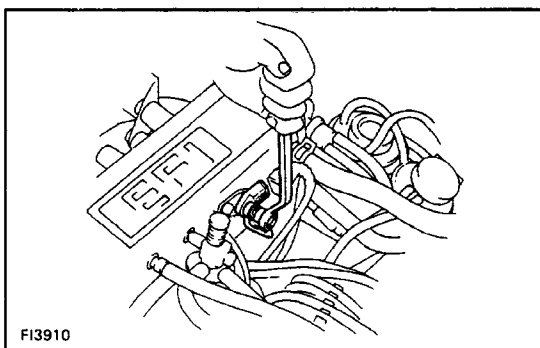

(d) Put a suitable container or shop towel under the cold start injector pipe.

(e) Slowly loosen the union bolts of the cold start injector pipe and remove the bolts, cold start injector pipe and four gaskets. ,


(f) Drain the fuel from the delivery pipe.

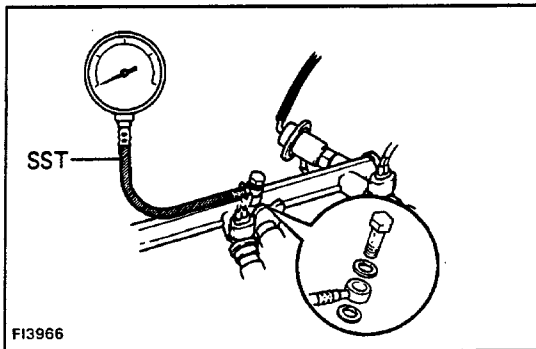

(g) Install a gasket, SST, another gasket and union bolt to the delivery pipe as shown in the illustration.

SST 09268-45012


(h) Wipe off any splattered gasoline.

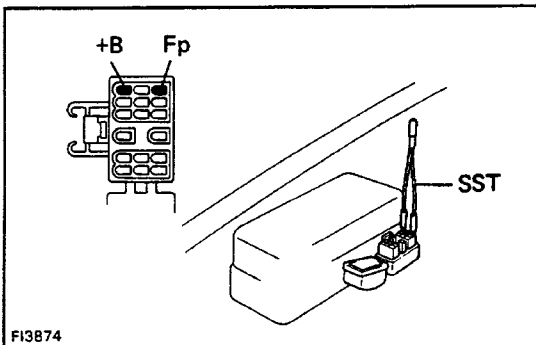

(i) Reconnect the battery negative terminal.

(j) Using SST, connect terminals Fp and +B of the DLC1.

SST 09843-18020

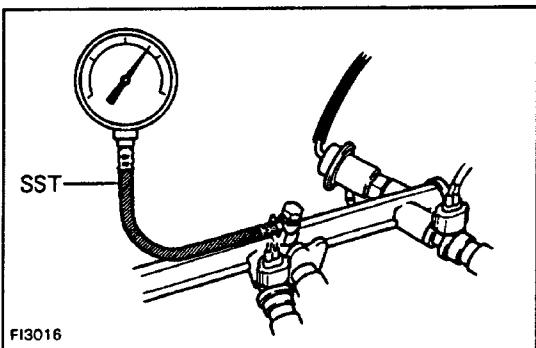

(k) Turn the ignition switch ON.

(l) Measure the fuel pressure.

**Fuel pressure: 265-304 kPa**

**(2.7-3.1 kgf/cm<sup>2</sup>, 38-44 psi)**

If high, replace the pressure regulator.

If low, check the following parts:

- Fuel hoses and connections
- Fuel pump
- Fuel filter
- Pressure regulator

(m) Remove SST from the DLC1.



(n) Start the engine.

(o) Disconnect the vacuum hose from the pressure regulator and plug it closed.

(p) Measure the fuel pressure at idling.

**Fuel pressure: 265-304 kPa**

**(2.7-3.1 kg f/cm<sup>2</sup>, 38-44 psi)**

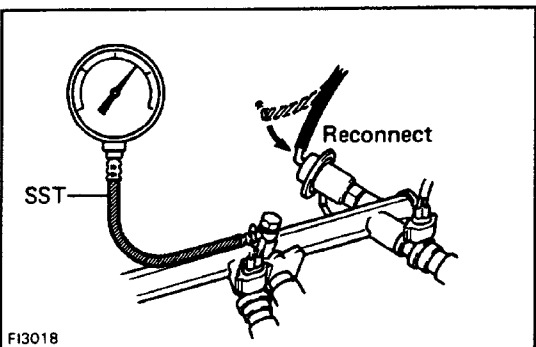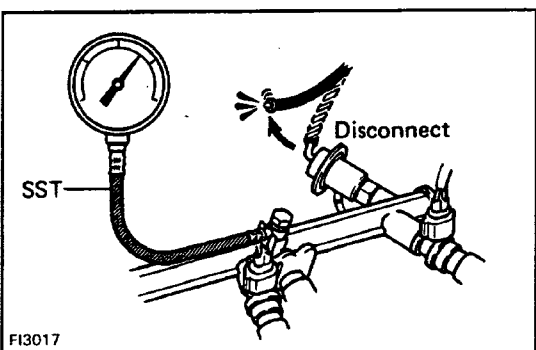

(q) Reconnect the vacuum hose to the pressure regulator.

(r) Measure the fuel pressure at idling.

**Fuel pressure: 226-265 kPa**

**(2.3-2.6 kgf/cm<sup>2</sup>, 33-37 psi)**

If not within the specified pressure, check the vacuum hose and pressure regulator.

(s) Stop the engine. Check that the fuel pressure remains above 147 kPa (1.5 kgf/cm<sup>2</sup>, 21 psi) for 5 minutes after the engine is turned off.

If not within the specification, check the fuel pump, pressure regulator and/or injectors.

(t) After checking fuel pressure, disconnect the battery ground strap and carefully remove the SST to prevent gasoline from splashing.


(u) Using new gaskets, reconnect the cold start injector pipe to the delivery pipe and cold start injector.

(v) Connect the wiring connector to the cold start injector.

(w) Start the engine and check for fuel leakage.

## FUEL PUMP REMOVAL

E01XN-01

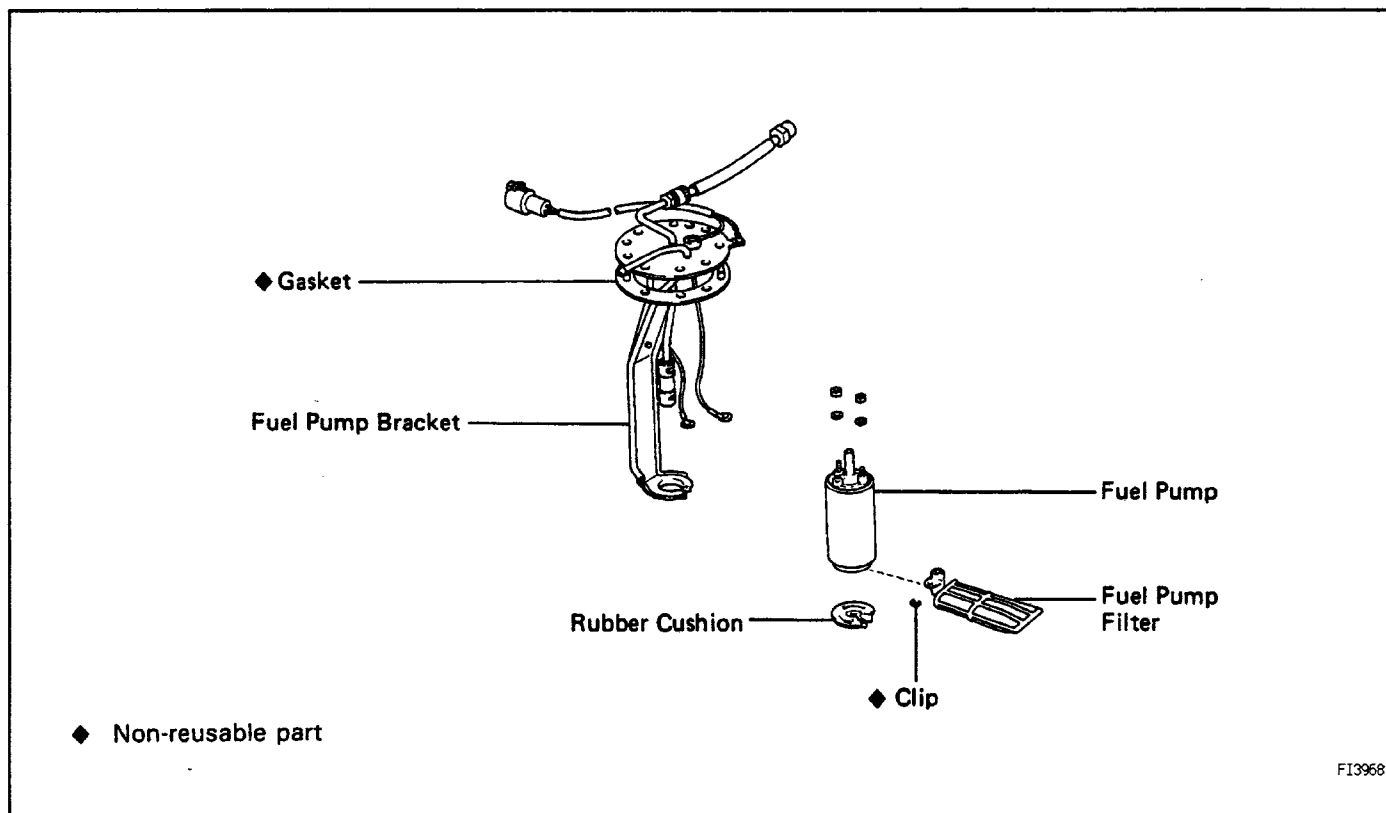

### 1. DRAIN FUEL FROM FUEL TANK


**CAUTION:** Do not smoke or work near an open flame when working on the fuel pump.


### 2. REMOVE FUEL TANK

### 3. REMOVE FUEL PUMP BRACKET

(a) Remove the seven bolts.


(b) Pull out the fuel pump bracket.

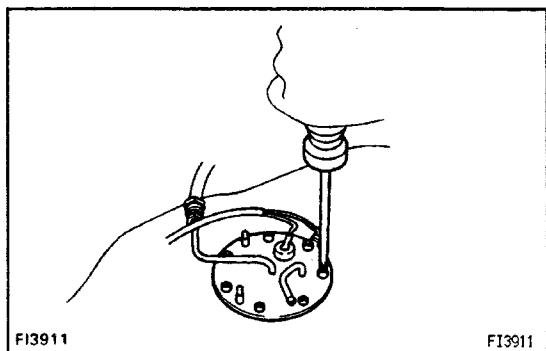

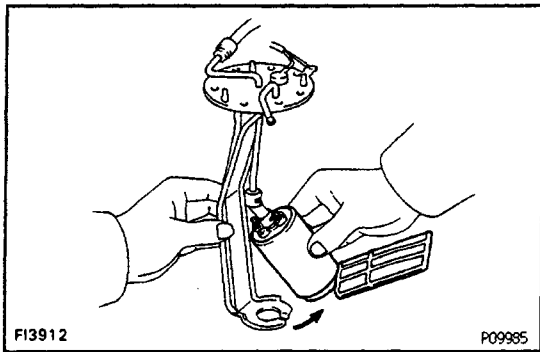


#### 4. REMOVE FUEL PUMP

- (a) Remove the two nuts and disconnect the wires from the fuel pump.
- (b) Pull off the fuel pump from the lower side of the bracket.
- (c) Remove the fuel pump from the fuel hose.

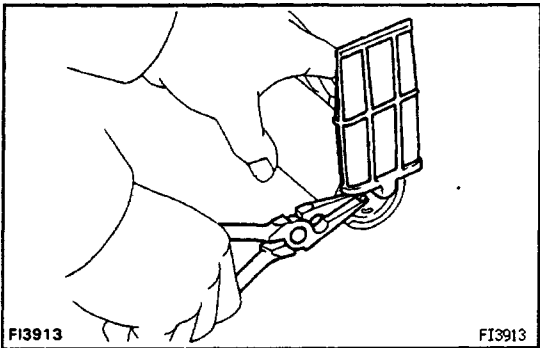

#### 5. REMOVE FUEL PUMP FILTER

- (a) Remove the rubber cushion.
- (b) Remove the clip and pull out the filter.

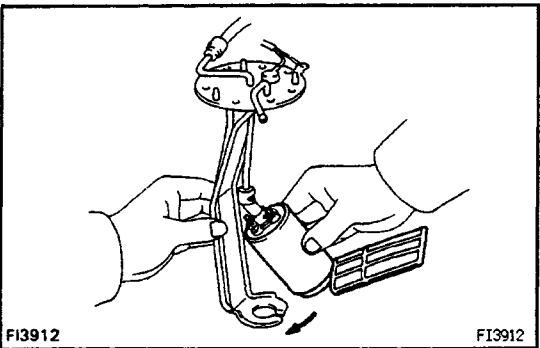

### FUEL PUMP INSTALLATION


EG1XP-01

(See page [EG1-180](#))

#### 1. INSTALL FUEL PUMP FILTER

#### 2. INSTALL FUEL PUMP

- (a) Insert the outlet port of the fuel pump into the fuel hose.
- (b) Install the rubber cushion to the lower side of the fuel pump.
- (c) Push the lower side of the pump, together with the rubber cushion, into the pump bracket.

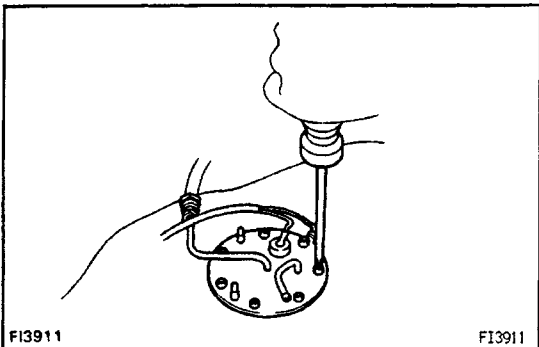

#### 3. INSTALL FUEL PUMP BRACKET

- (a) Place the bracket with a new gasket on the fuel tank.
- (b) Install and torque the seven screws.

**Torque: 3.8 N-m (40 kgf-cm, 34 in.-lbf)**

#### 4. INSTALL FUEL TANK

##### NOTICE:



- Tighten the fuel tank mounting bolts, etc. to the specified torque.

- Tighten the pipe and flare nut type hose to the specified torque.
- Push in the pipe and insert-type hose to the specified position, and install the clip to the specified location.
- If reusing the hose, reinstall the clip at the original location.

#### **5. REFILL WITH FUEL**



## COLD START INJECTOR

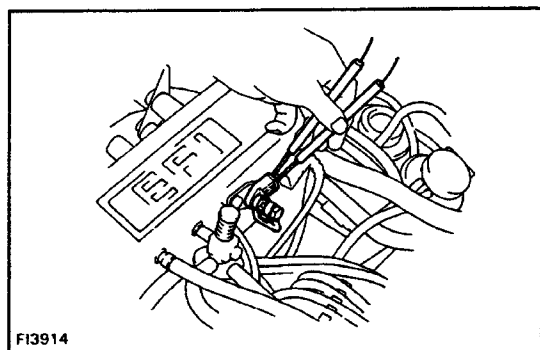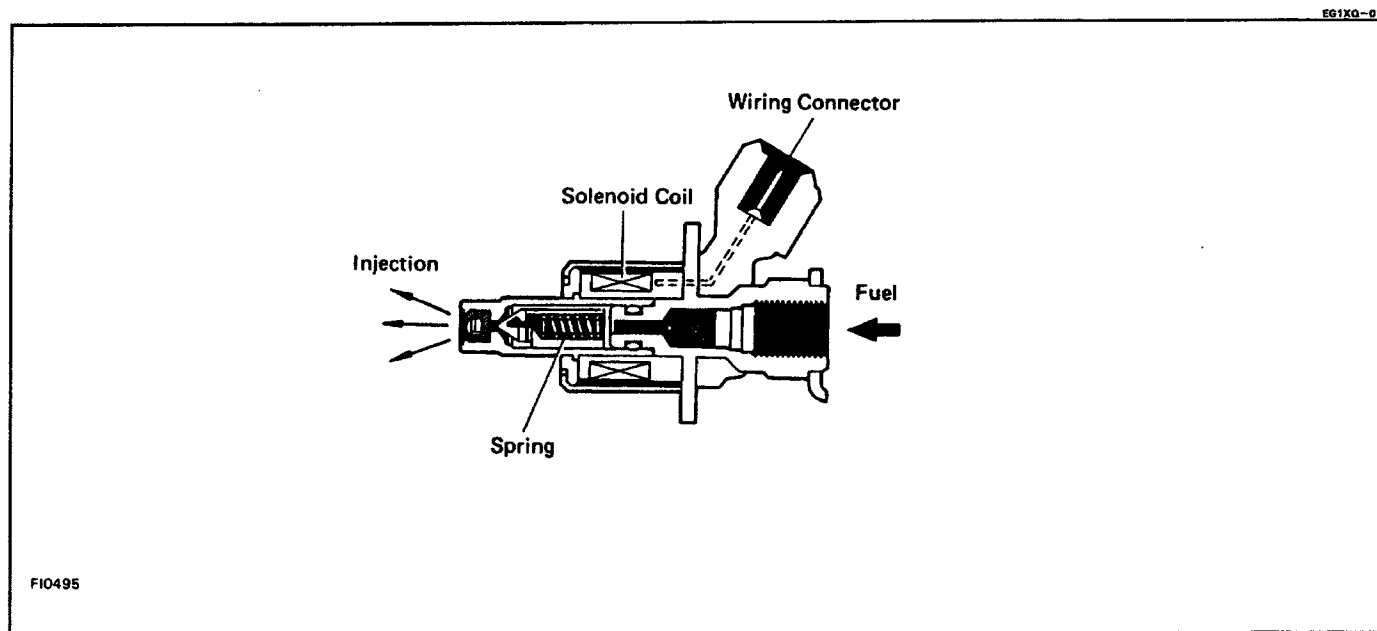

### ON-VEHICLE INSPECTION

#### MEASURE RESISTANCE OF COLD START INJECTOR

- (a) Disconnect the cold start injector connector.
- (b) Using ohmmeter, check the resistance of the injector.


**Resistance: 2 -4**

- (c) Connect the cold start injector connector.

### COLD START INJECTOR REMOVAL

#### 1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

#### 2. DISCONNECT COLD START INJECTOR CONNECTOR

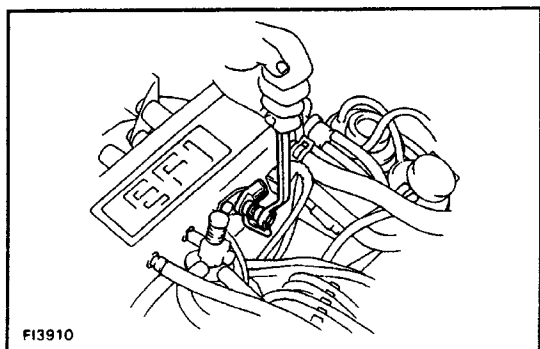

#### 3. REMOVE COLD START INJECTOR

- (a) Put a suitable container or shop towel under the cold start injector pipe.
- (b) Remove the union bolts and four gaskets, and remove the cold start injector pipe.

**HINT:** Slowly loosen the union bolt.


- (c) Remove the two bolts and cold start injector with the gasket.

## COLD START INJECTOR INSPECTION

### CHECK INJECTION OF COLD START INJECTOR

HINT: The engine should be cold.

(a) Remove the cold start injector.

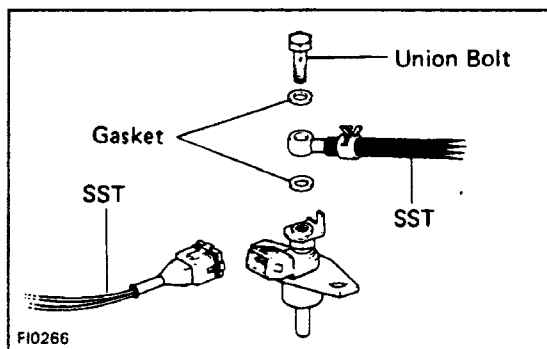

(b) Install a gasket, SST (two unions), another gasket and two union bolts to the delivery pipe and injector.

(c) Connect the SST (hose) to each union.

SST 09268-41045 (092368-41080)

(d) Connect the SST (wire) to the injector.


SST 09842-30050

**CAUTION: Position the injector as far away from the battery as possible.**

(e) Put a container under the injector.


(f) Turn the ignition switch ON.

HINT: Do not start the engine.

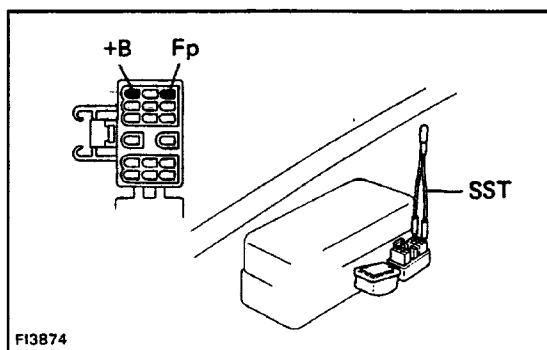

(g) Using SST, connect terminals Fp and + B of the DLC 1.


SST 09843-18020

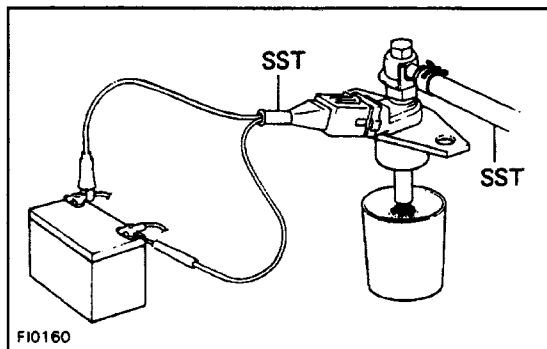

(h) Connect the test probes of the SST to the battery and check that the fuel injection is as shown.

SST 09842-30050

**NOTICE: Perform this check within the shortest possible time.**

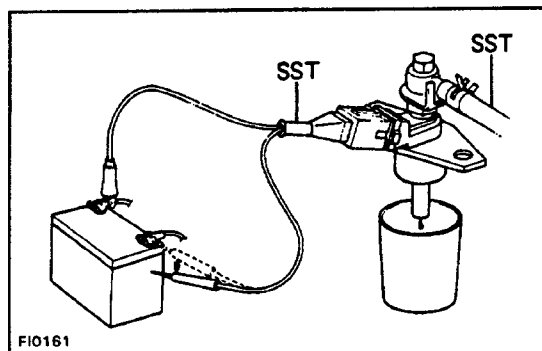


(i) Disconnect the test probes from the battery and check fuel leakage from the injector.

**Fuel drop: One drop or less per minute**

(j) After checking, remove SST and restore the following parts to their original conditions.

- DLC1
- Ignition switch
- Cold start injector
- Injector wiring

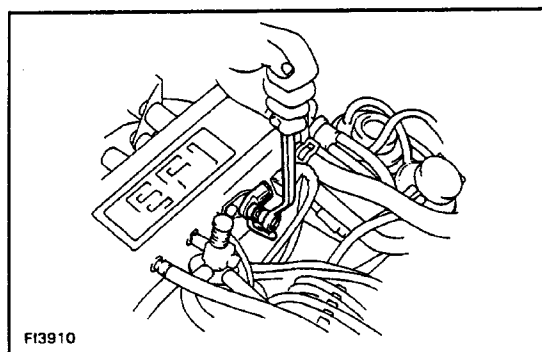

## COLD START INJECTOR INSTALLATION

### 1. INSTALL COLD START INJECTOR

(a) Using new gasket, install the cold start injector with the two bolts.

**Torque: 7.8 N-m (80 kgf-cm, 69 in.-lbf)**

(b) Install the fuel pipe between the cold start injector and fuel delivery pipe with new gaskets.


**Torque: 19 N-m (195 kgf-cm, 14 ft-lbf)**

### 2. CONNECT COLD START INJECTOR CONNECTOR

### 3. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

### 4. CHECK FOR FUEL LEAKAGE

# FUEL PRESSURE REGULATOR

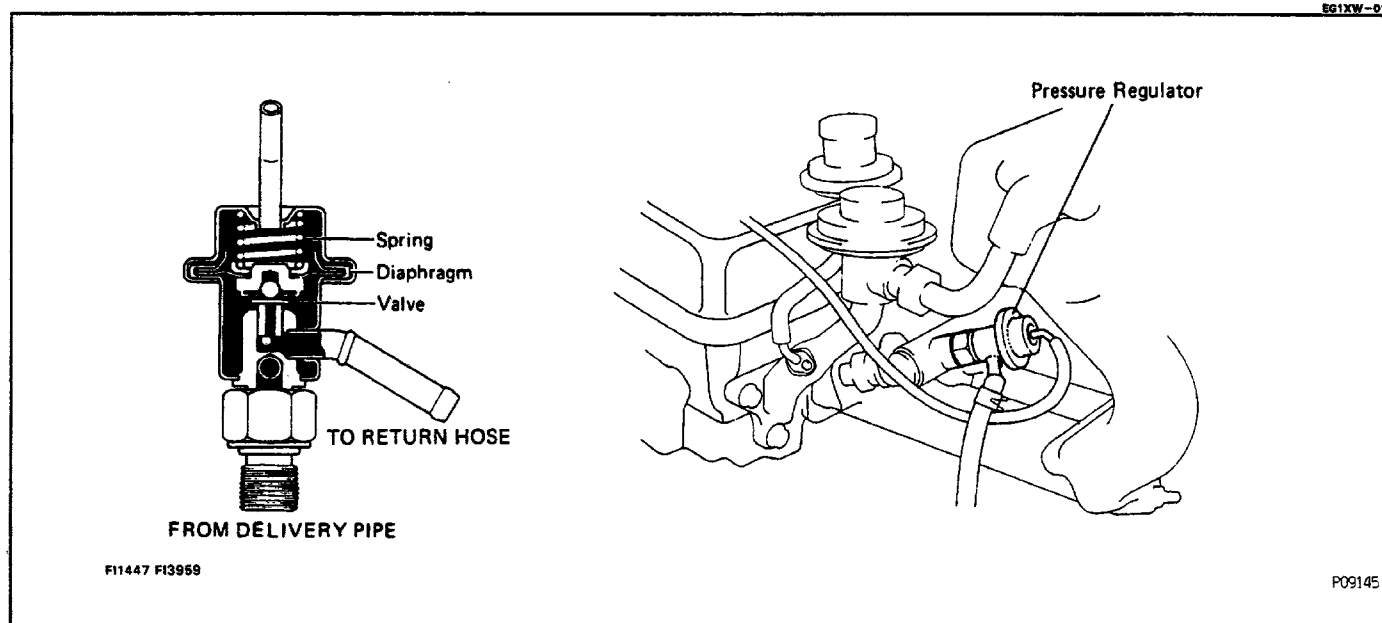


## ON-VEHICLE INSPECTION

CHECK FUEL PRESSURE (See page [EG1-178](#))

## PRESSURE REGULATOR REMOVAL

1. DISCONNECT VACUUM SENSING HOSE
2. REMOVE NO. 1 EGR PIPE

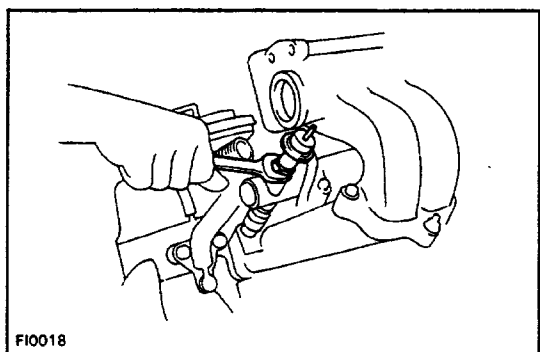

### 3. DISCONNECT FUEL HOSE

- (a) Put a suitable container or shop towel under the pressure regulator.
- (b) Disconnect the fuel hose the pressure regulator.

### 4. REMOVE PRESSURE REGULATOR

Loosen the lock nut, and remove pressure regulator.

## PRESSURE REGULATOR INSTALLATION

### 1. INSTALL PRESSURE REGULATOR

Install the pressure regulator. Torque the lock nut.

**Torque: 29 N-m (300 kgf-cm. 22 ft-lbf)**



### 2. CONNECT FUEL HOSE

### 3. INSTALL NO. 1 EGR PIPE

Install a new gasket and No. 1 EGR pipe.

### 4. CONNECT VACUUM SENSING HOSE

# INJECTOR

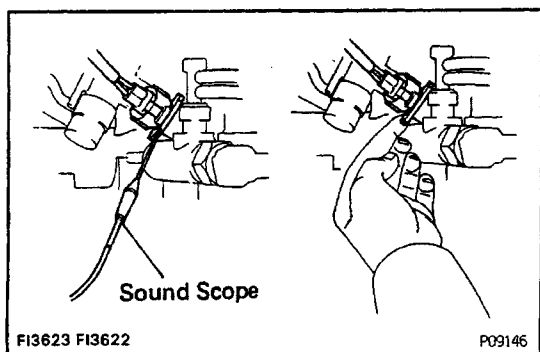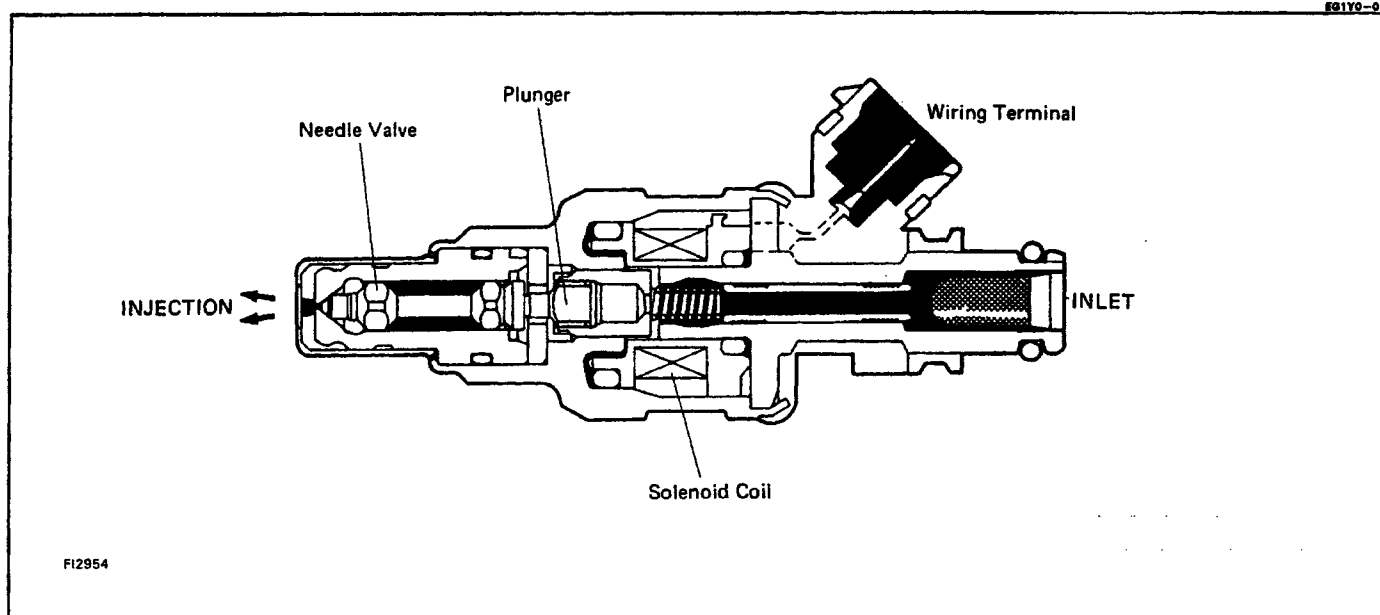


## ON-VEHICLE INSPECTION

### 1. CHECK INJECTOR OPERATION

Check for operating sound from each injector.

- (a) With the engine running or cranking, use a sound scope to check that there is normal operating noise in proportion to engine rpm.
- (b) If you have no sound scope, you can check the injector transmission operation with your finger.

If no sound or an unusual sound is heard, check the wiring connector, injector or injection signal from ECM.

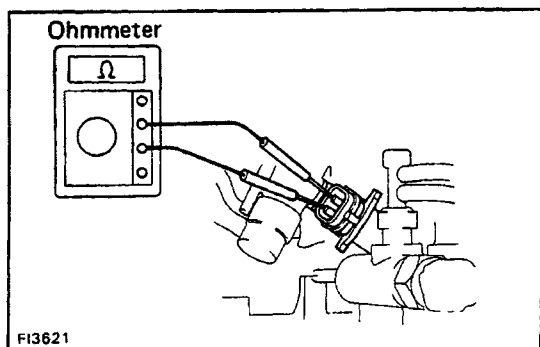

### 2. MEASURE RESISTANCE OF INJECTOR


- (a) Unplug the wiring connector from the injector.
- (b) Using an ohmmeter, measure the resistance of both terminals.

**Resistance: 13.4–14.2**


## INJECTORS REMOVAL

EG1Y2-01


1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY
2. DRAIN COOLANT
3. REMOVE CHAMBER WITH THROTTLE BODY  
(See steps 9 to 15 on pages [EG1-16](#),17)
4. DISCONNECT WIRES  
(See step 17 page [EG1-17](#))

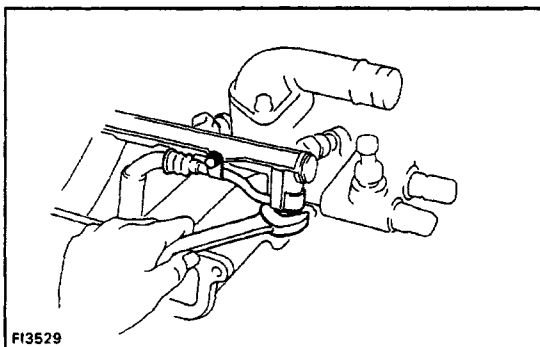

5. DISCONNECT FUEL HOSE FROM DELIVERY PIPE  
Remove the bolt, union bolt and two gaskets.

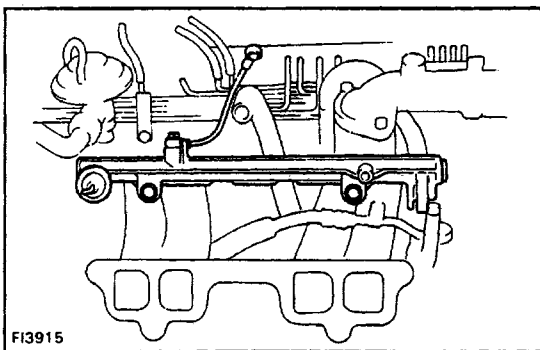


6. REMOVE DELIVERY PIPE WITH INJECTORS  
Remove two bolts and then remove the delivery pipe with the injectors.

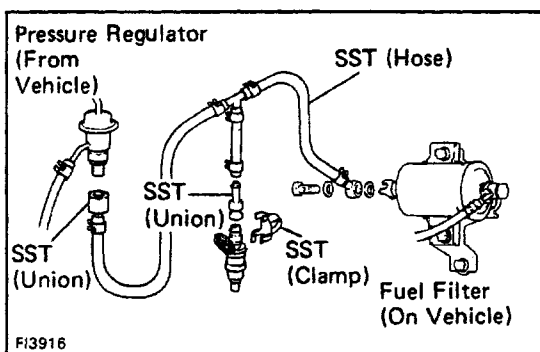


## INJECTORS INSPECTION

EG1Y3-01


1. TEST INJECTION OF INJECTOR  
**CAUTION:** Keep injector clear of sparks during the test.

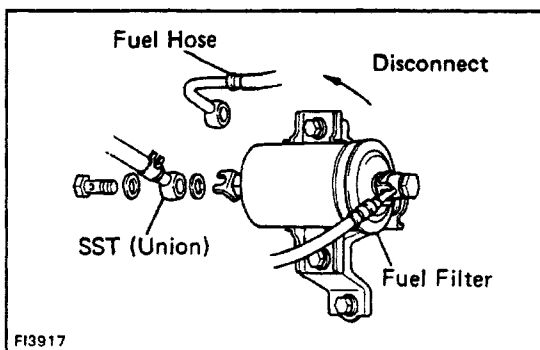

- (a) Disconnect the fuel hose from the fuel filter outlet.
  - (b) Connect SST (Union) to the fuel filter outlet.  
SST 09268-41045 (90405-09015)
- HINT: Use the vehicle's fuel filter.

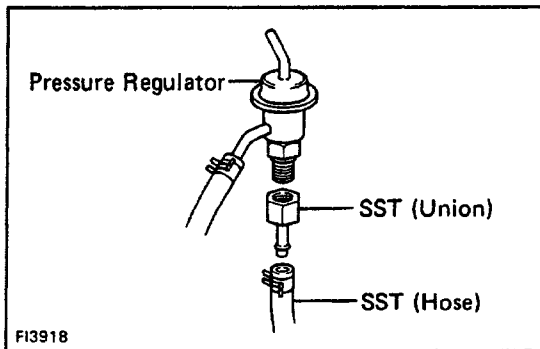

- (c) Install SST (Union) to the removed pressure regulator.  
SST 09268-41045 (09268-52010)

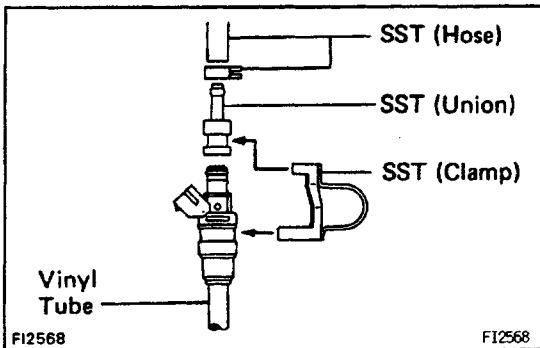

- (d) Install SST (Union) to the injector and hold the injector and union with SST (Clamp).

SST 09268-41045


- (e) Put the injector into the graduated cylinder.

HINT: Install a suitable vinyl tube unto the injector to prevent gasoline from splashing out.

- (f) Connect the battery cable.


- (g) Turn the ignition switch ON.

HINT: Do not start the engine.

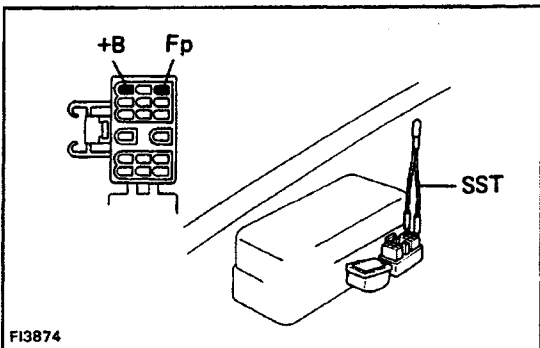

- (h) Using SST, connect terminals Fp and +B of the DLC1.  
SST 09843-18020

HINT: Fuel pump will operate.

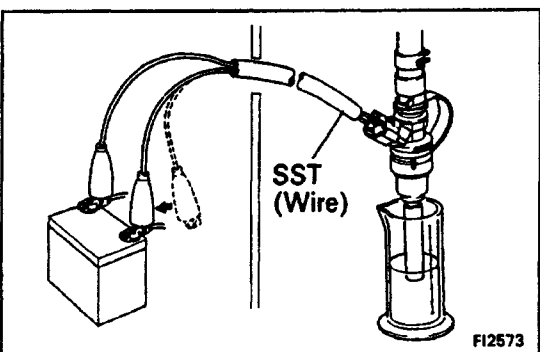

Connect SST (wire) to the injector and battery for 15 seconds and measure the injection volume with a graduated cylinder. Test each injector two or three times.


SST 09842 - 30070

**Volume: 45-55 cm<sup>3</sup>/15 sec. (2.7- 3.4 cu in.)**

**Difference between each injector:**

**6 cm<sup>3</sup> (0.4 cu in.) or less**

If not within specified volume, replace the injector.

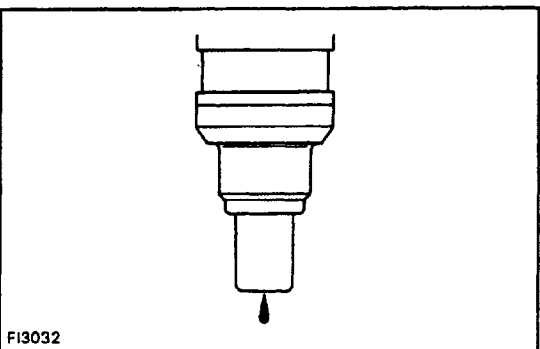

## 2. CHECK LEAKAGE


- (a) In the condition above, disconnect SST from the battery and check for fuel leakage from the injector nozzle.

SST 09842-30060

**Fuel drop: One drop or less per minute**

- (b) Disconnect the battery cable.


- (c) Remove SST.

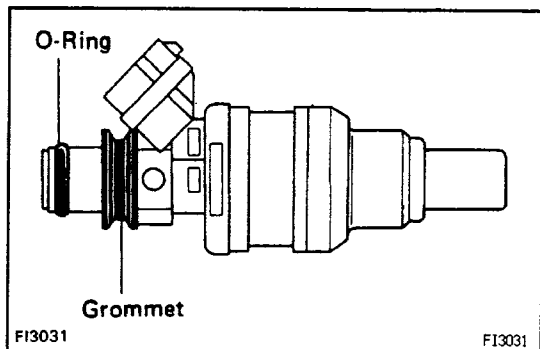


## INJECTORS INSTALLATION

### 1. INSTALL INJECTORS INTO DELIVERY PIPE


(a) Install the grommet and anew O -ring to the injector.

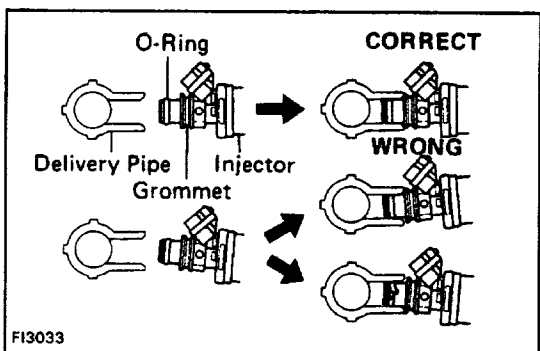

(b) Apply a light coat of gasoline to the O-rings and install the injectors into the delivery pipe.

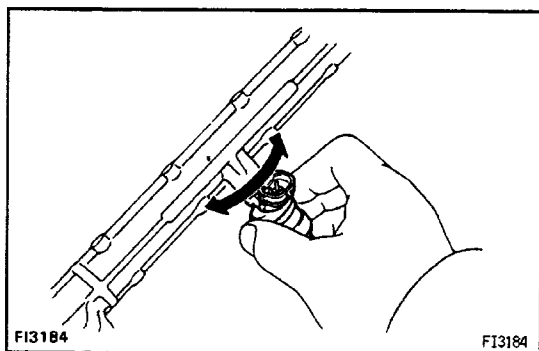


(c) Make sure that the injectors rotate smoothly.  
HINT: If the injectors do not rotate smoothly, the O-rings are probably incorrectly installed. Replace the O-rings.

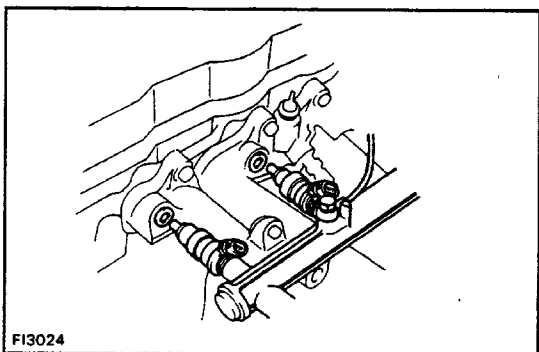

### 2. INSTALL DELIVERY PIPE WITH INJECTORS

(a) Install the four insulators into the injector hole of the intake manifold.


(b) Place the injectors together with the delivery pipe to the manifold.

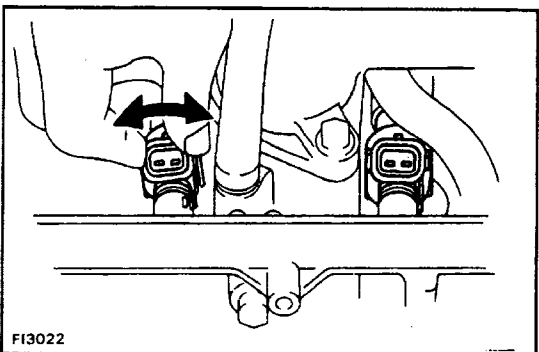

(c) Make sure that the injectors rotate smoothly.


HINT: If the injectors do not rotate smoothly, probable cause may be incorrect installation of O-rings. Replace O-rings again after removing the injectors.



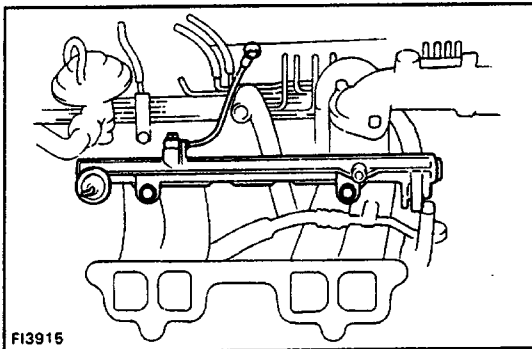

(d) install and torque the bolts.

**Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)**

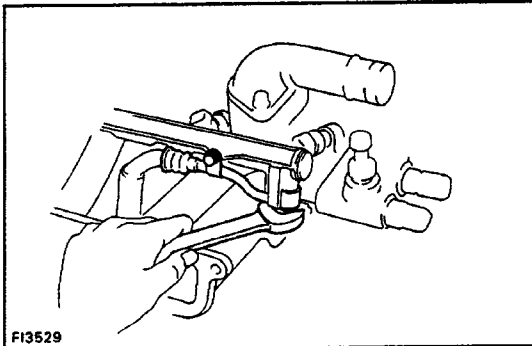


### 3. CONNECT FUEL HOSE TO DELIVERY PIPE

(a) Install the fuel hose with a bolt.

(b) Install the union bolt and new gaskets. Torque the union bolt.

**Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)**

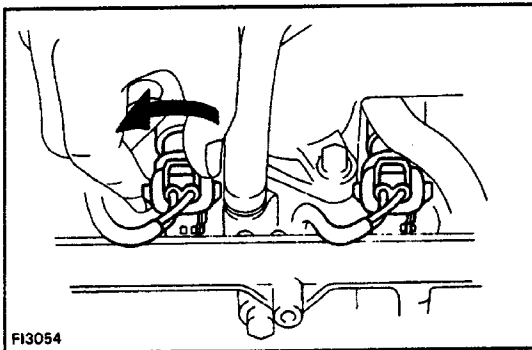

### 4. CONNECT WIRES

(See step 5 on page [EG1-36](#))

Turn the injector so that the injector positioning guide is aligned with the positioning rib of the delivery pipe.


### 5. INSTALL CHAMBER WITH THROTTLE BODY

(See steps 7 to 14 on pages [EG1-37](#), 38)

### 6. FILL WITH COOLANT

(See step 3 on page [EG1-225](#))

### 7. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

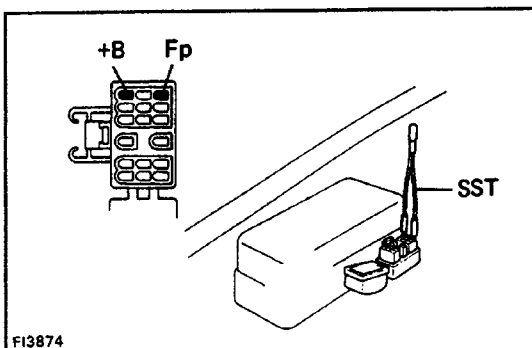

### 8. CHECK FOR FUEL LEAKAGE

(a) With the ignition switch ON, use SST to connect terminals Fp and +B of the DLC1.


SST 09843-18020

(b) Check for fuel leakage.

(c) Remove SST from the DLC1.

# FUEL TANK AND LINE COMPONENTS

E01Y8-01

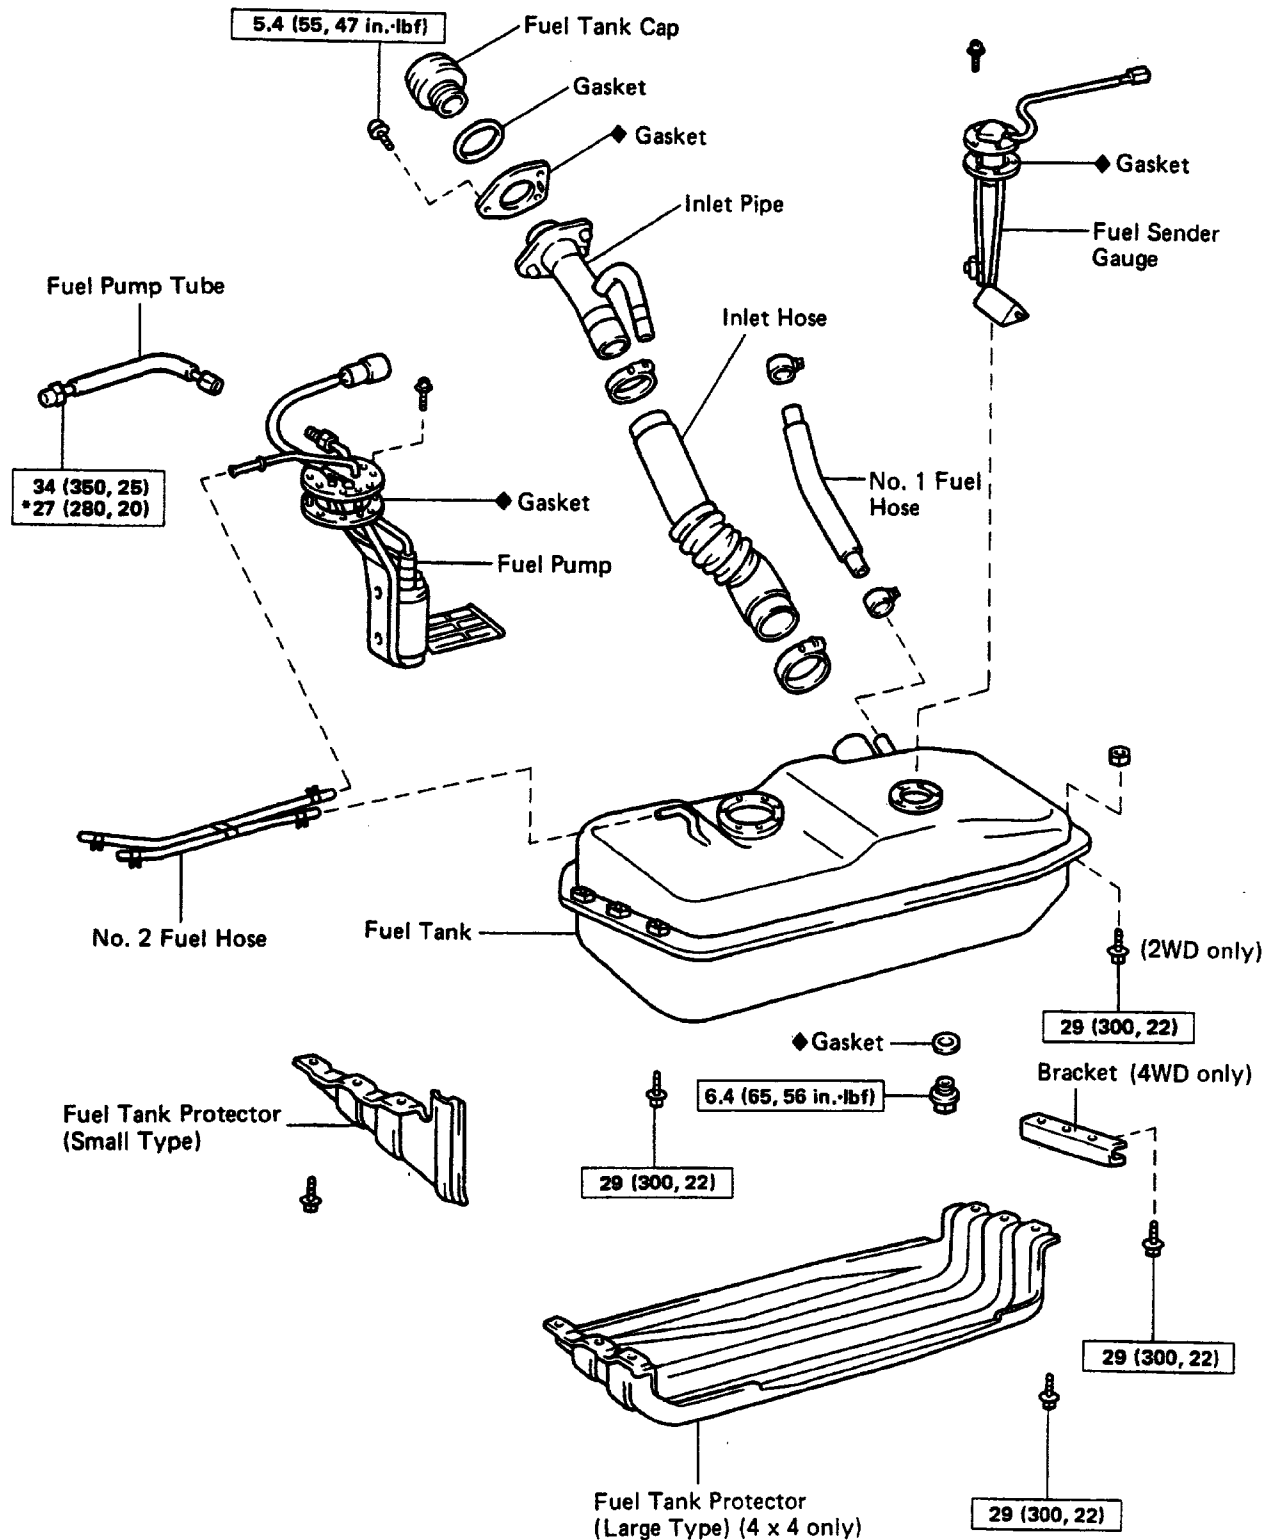

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

\* For use of SST

F15027

EG1Y6–01

**PRECAUTIONS**




1. Always use new gaskets when replacing the fuel tank or component part.
2. Apply the proper torque to all parts tightened.

EG1Y7–01



**FUEL LINES AND CONNECTIONS INSPECTION**

- (a) Inspect the fuel lines for cracks or leakage, and all connections for deformations.
- (b) Inspect the fuel tank vapor vent system hoses and connections for looseness, sharp bends or damage.
- (c) Inspect the fuel tank for deformations, cracks or fuel leakage.
- (d) Inspect the filler neck for damage or fuel leakage.
- (e) Hose and tube connections are as shown in the illustration.

If a problem is found, repair or replace the parts as necessary. .

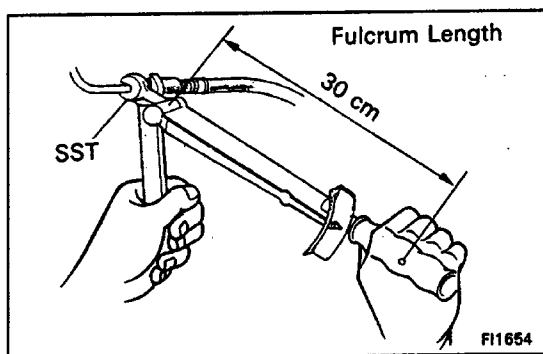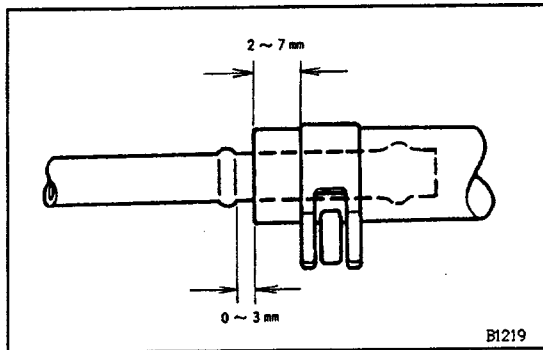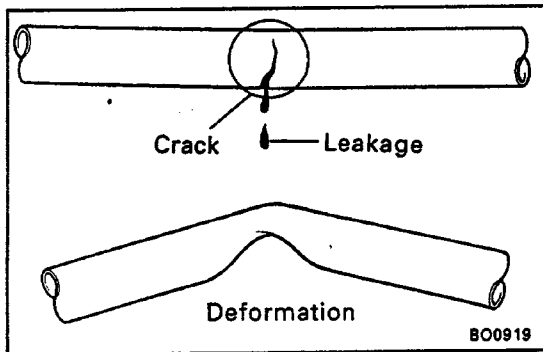


# VOLUME AIR FLOW (VAF) METER

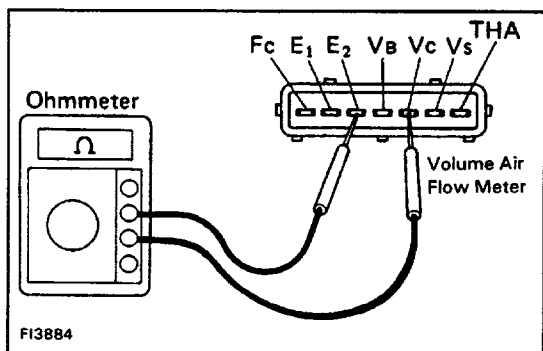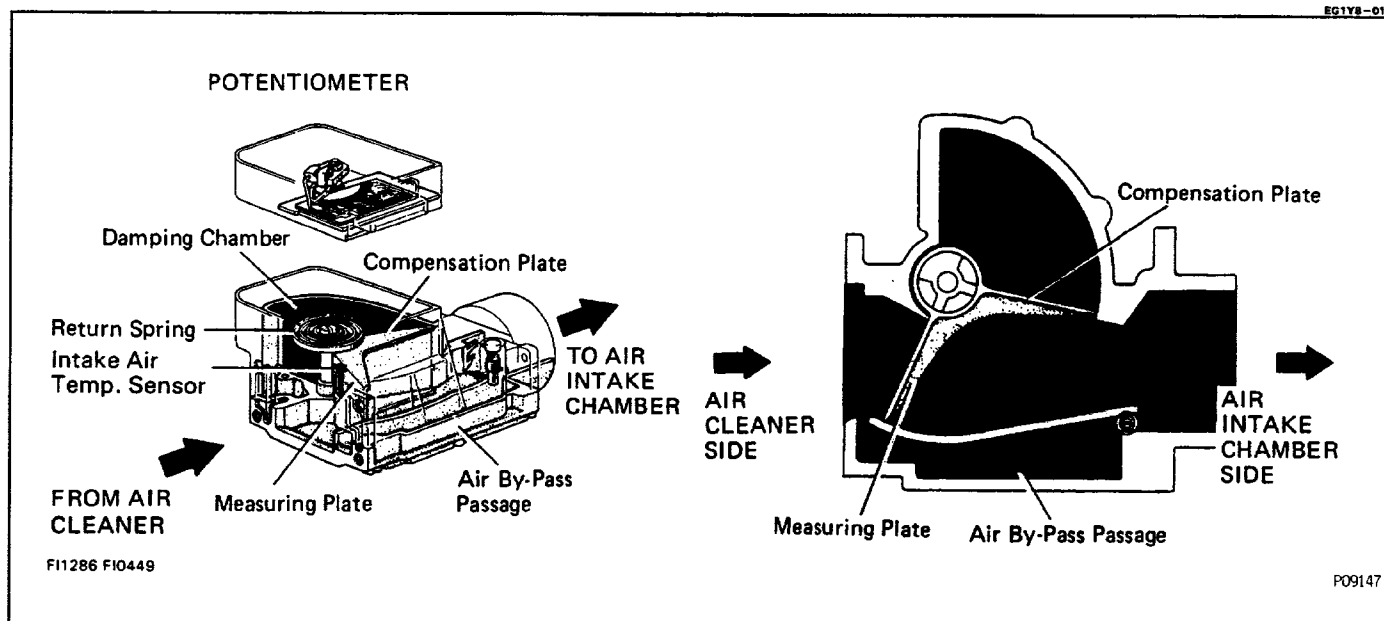

## ON-VEHICLE INSPECTION

### MEASURE RESISTANCE OF VOLUME AIR FLOW METER

- Disconnect the connector from the volume air flow meter.
- Using an ohmmeter, measure the resistance between each terminal.

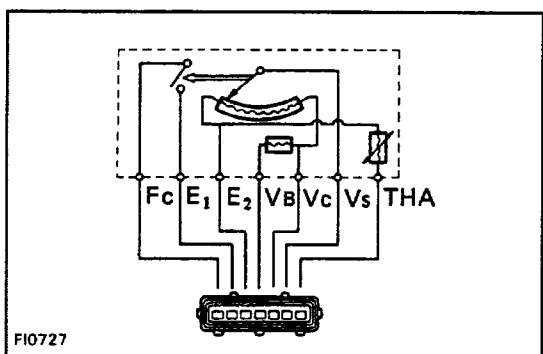


Between terminals	Resistance	Temperature
E <sub>2</sub> - V <sub>S</sub>	20 - 400 Ω	—
E <sub>2</sub> - V <sub>C</sub>	100 - 300 Ω	—
E <sub>2</sub> - V <sub>B</sub>	200 - 400 Ω	—
E <sub>2</sub> - THA	10 - 20 kΩ	-20°C (-4°F)
	4 - 7 kΩ	0°C (32°F)
	2 - 3 kΩ	20°C (68°F)
	0.9 - 1.3 kΩ	40°C (104°F)
	0.4 - 0.7 kΩ	60°C (140°F)
E <sub>1</sub> - F <sub>C</sub>	Infinity	—

V02175

If not within specification, replace the volume air flow meter.

EG1YA-01

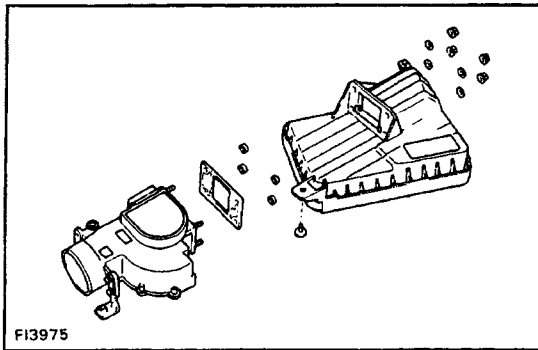


## VAF METER REMOVAL

1. DISCONNECT INTAKE AIR CONNECTOR
2. REMOVE AIR CLEANER CAP WITH VOLUME AIR FLOW METER

(a) Disconnect the volume air flow meter connector.  
 (b) Remove the air cleaner cap with volume air flow meter.

3. REMOVE VOLUME AIR FLOW METER

Remove the bolt, four nuts, washers, volume air flow meter and gasket.

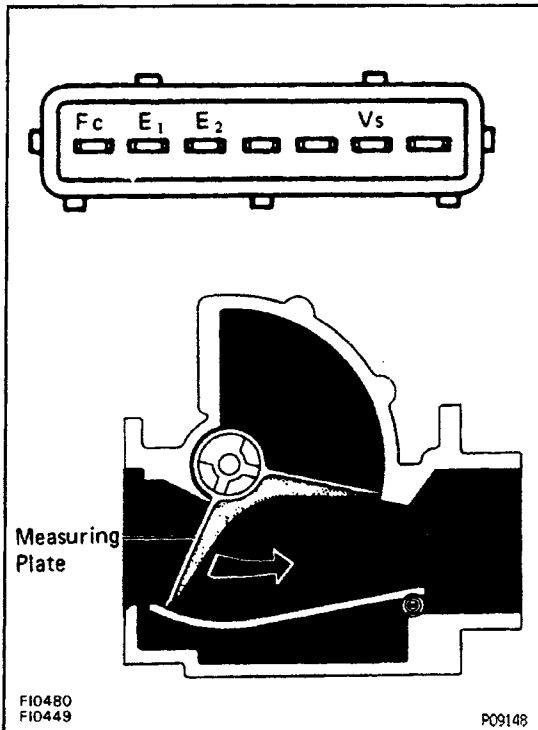

## VAF METER INSPECTION

EG1YB-01

### MEASURE RESISTANCE OF VAF METER

Using an ohmmeter, measure the resistance between each terminal by moving the measuring plate.

Between terminals	Resistance ( $\Omega$ )	Measuring plate opening
E1- Fc	Infinity	Fully closed
	Zero	Other than closed position
E2 - Vs	20-400	Fully closed
	20- 1,000	Fully open

HINT: Resistance between terminals E2 and Vs will change in a wave pattern as the measuring plate slowly opens.

## VAF METER INSTALLATION

EG1YC-01

1. INSTALL VOLUME AIR FLOW METER

Install the gasket, volume air flow meter, washers, nuts and bolt. Torque the nuts and bolt.

2. INSTALL AIR CLEANER CAP WITH VAF METER


(a) Install the air cleaner cap with VAF meter to the air cleaner case.

(b) Connect the VAF meter connector.

### **3. INSTALL INTAKE AIR CONNECTOR**

# THROTTLE BODY

EG1YD-01

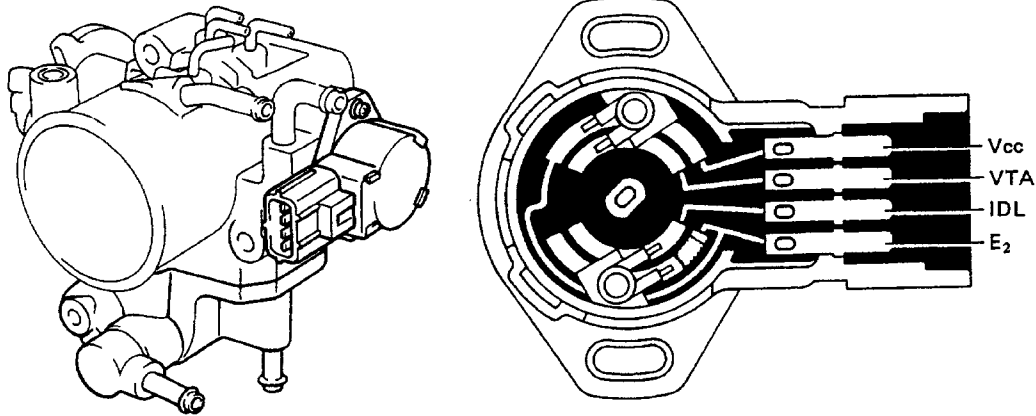

F16092 F14662


P09149

EG1YE-06

## ON-VEHICLE INSPECTION

### 1. INSPECT THROTTLE BODY


(a) Check that the throttle linkage moves smoothly.

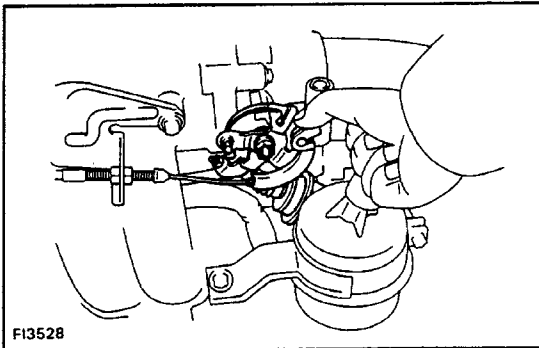

F13528

(b) Check the vacuum at each port.

- Start the engine.
- Check the vacuum with your finger.

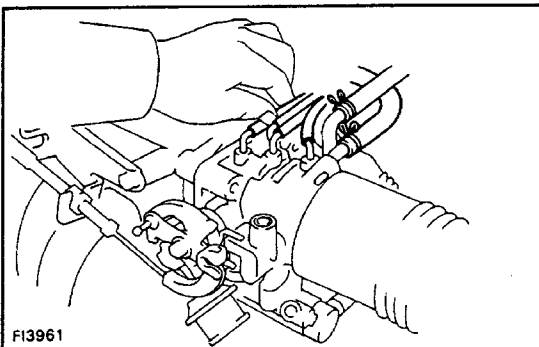


F13961

Port name	At idling	At 3,500 rpm
E	No vacuum	Vacuum
R	No vacuum	Vacuum
P	No vacuum	Vacuum


### 2. INSPECT THROTTLE POSITION SENSOR

Check the resistance between the terminals.

- Unplug the connector from the sensor.  
Insert a thickness gauge between the throttle stop screw and stop lever.
- Using an ohmmeter, check the resistance between each terminal.

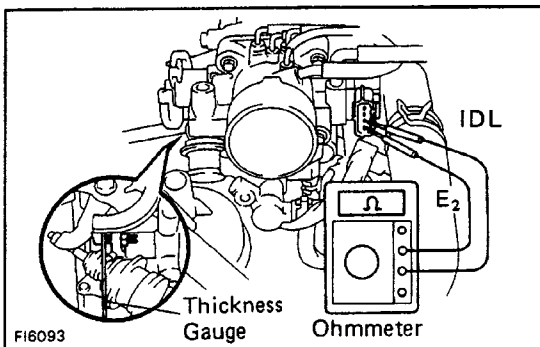

F16093

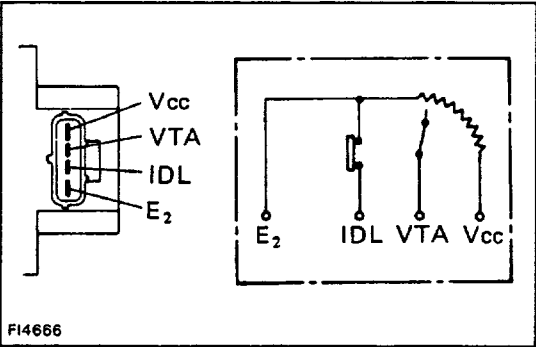

Clearance between lever and stop screw	Between terminals	Resistance
0 mm 10 in.	VTA – E2	0.47 – 8.1 kΩ
0.57 mm 10.0224 in.)	IDL – E2	2.3 kΩ or less
0.85 mm (0.0335 in.)	IDL – E2	Infinity
Throttle valve fully open	VTA – E2	3.1 – 12.1 kΩ
–	Vcc – E2	3.9 – 9.4 kΩ

W01951

3. (M/T)  
INSPECT DASH POT (DP)


A. Warm up engine

Allow the engine to warm up to normal operating temperature.


B. Check idle speed and adjust if necessary

(See page [MA-11](#))

Idle speed: 750 rpm

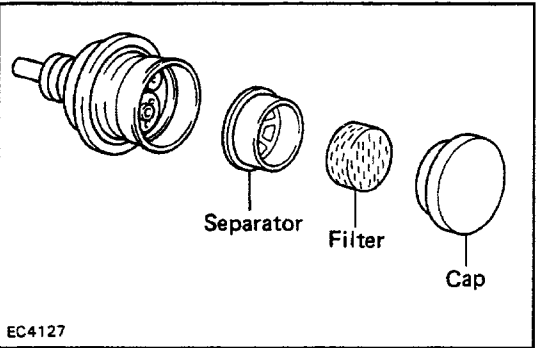


C. Remove cap, filter, and separator from DP

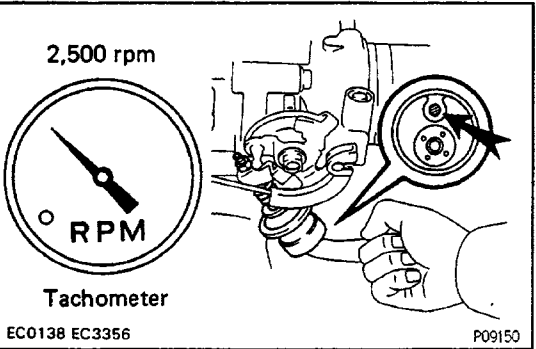

D. Check and adjust dash pot (DP) setting speed

(a) Maintain engine speed at 2,500 rpm.

(b) Plug the VTV hole with your finger.

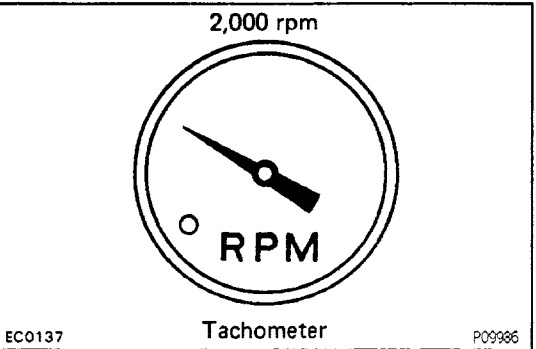


(c) Release the throttle valve.


(d) Check the DP is set.

DP setting speed: 2,000 rpm



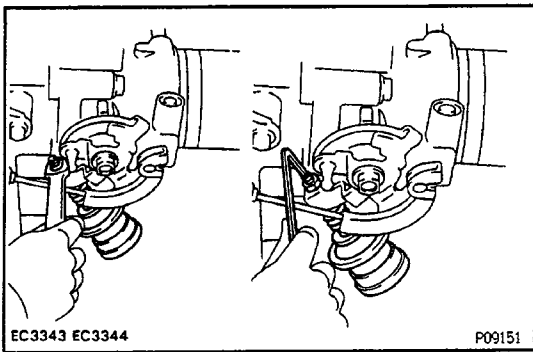

(e) If not as specified, adjust with the DP adjusting screw.

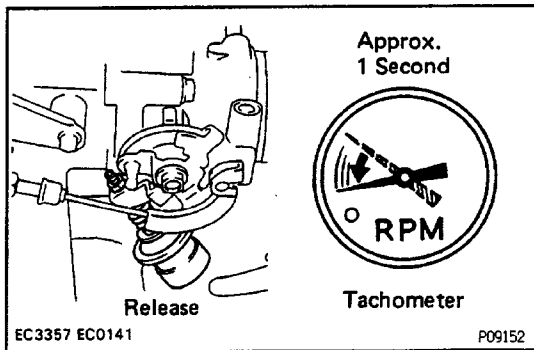

### E. Check operation of VTV

(a) Set the DP setting speed in the same procedure as above; (a) to (c).

(b) Remove your finger from the hole and check that the engine returns to idle speed in approx. 1 second.

### F. Reinstall DP separator, filter and cap

HINT: Install the filter with the coarser surface facing the atmospheric side (outward).

## 4. (A/T)

### INSPECT THROTTLE OPENER


#### A. Warm up engine

Allow the engine to warm up to normal operating temperature.

#### B. Check idle speed

Idle speed: 2WD 750  $\pm$  50 rpm


4WD 850  $\pm$  50 rpm

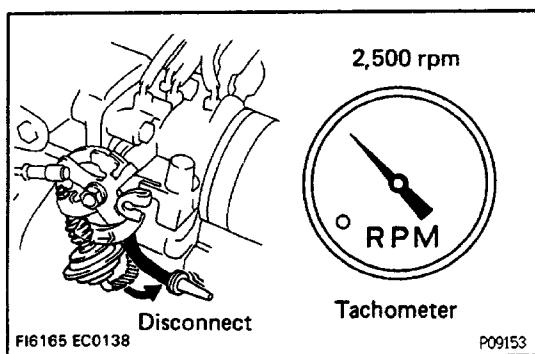

### C. Check and adjust throttle opener setting speed

(a) Disconnect the vacuum hose from the throttle opener, and plug the hose end.

(a) Disconnect the vacuum hose from the throttle opener, and plug the hose end.

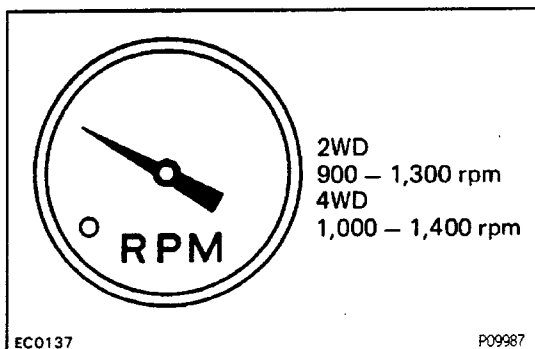


(c) Release the throttle valve.

(d) Check that the throttle opener is set.


### Throttle opener setting speed:

2WD 900–1,300 rpm

4WD 1,000–1,400 rpm

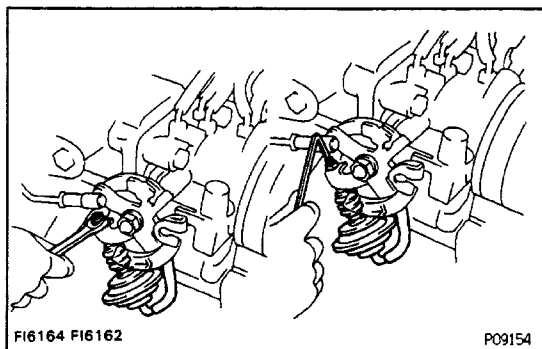

(e) If not as specified, adjust with the throttle opener adjusting screw.

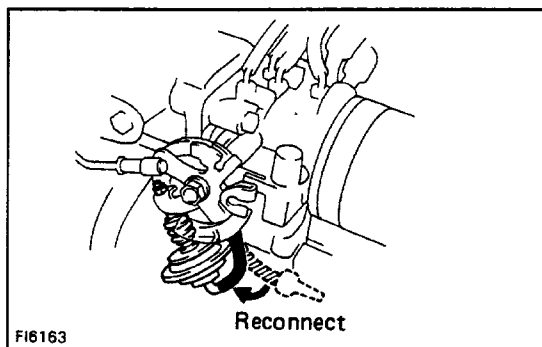


(f) Reconnect the vacuum hose to the throttle opener.

## THROTTLE BODY REMOVAL

EG1YF-01


1. REMOVE INTAKE AIR CONNECTOR
2. DRAIN COOLANT
3. DISCONNECT ACCELERATOR CABLE

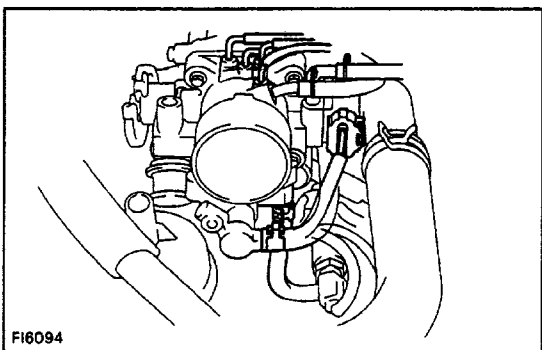

### 4. DISCONNECT FOLLOWING HOSES:


- (a) (with A/C)  
A/C idle up hose.
- (b) PCV hose
- (c) No. 2 and No. 3 water by-pass hoses.
- (d) Label and disconnect the emission control hoses.

### 5. DISCONNECT THROTTLE SENSOR CONNECTOR

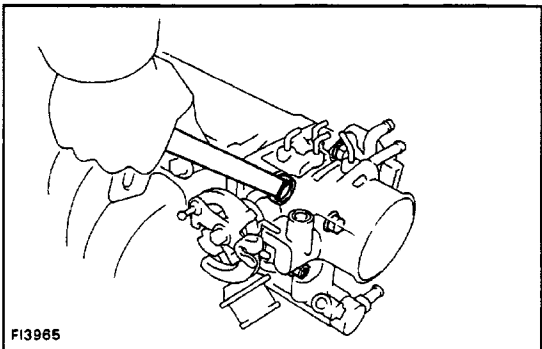

### 6. REMOVE THROTTLE BODY

Remove the three bolts and nut, and remove the throttle body and gasket.

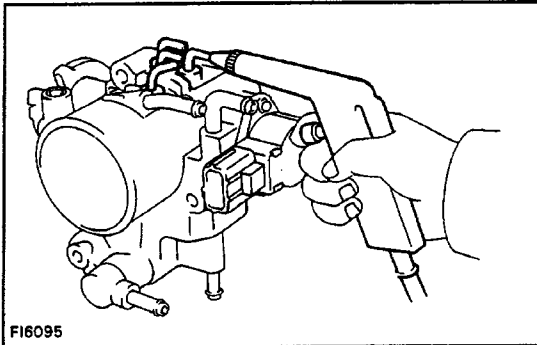


## THROTTLE BODY INSPECTION

### 1. CLEAN THROTTLE BODY BEFORE INSPECTION

(a) Wash and clean the cast parts with a soft brush in carburetor cleaner.

(b) Using compressed air, clean all the passages and apertures in the throttle body.

**NOTICE:** To prevent deterioration, do not clean the throttle position sensor.

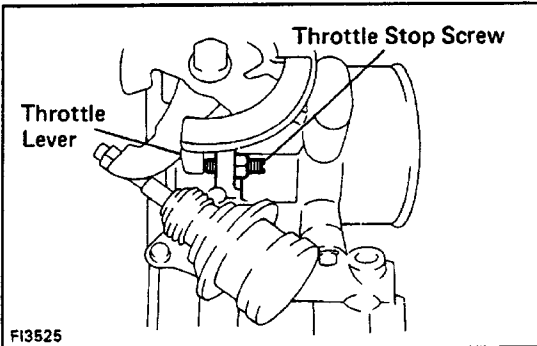


### 2. CHECK THROTTLE VALVE

Check that there is no clearance between the throttle stop screw and throttle lever when the throttle valve is fully closed.


### 3. CHECK THROTTLE POSITION SENSOR

(See step 2 on page [EG1–197](#))

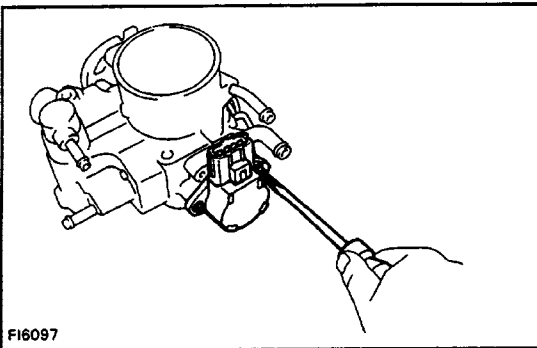


### 4. IF NECESSARY, ADJUST THROTTLE POSITION SENSOR

(a) Loosen the two screws of the sensor.

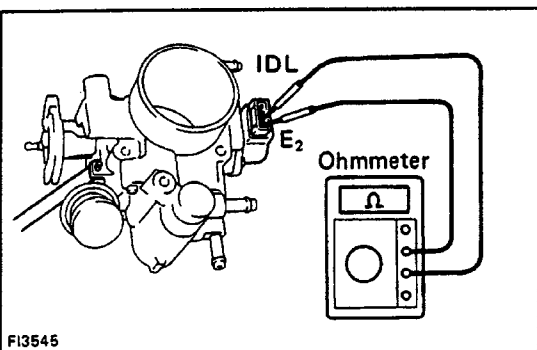


(b) Insert a thickness gauge (0.70 mm or 0.0276 in.) between the throttle stop screw and lever, and connect the ohmmeter to terminals IDL and E2.

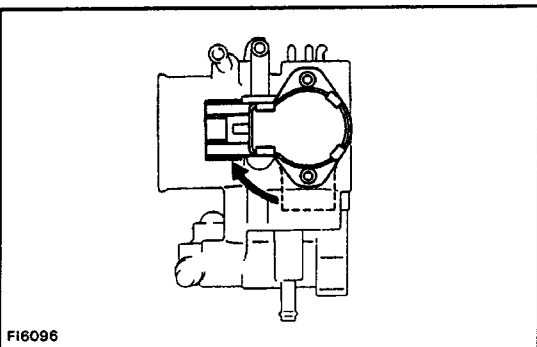

(c) Gradually turn the sensor clockwise until the ohmmeter deflects, and secure the sensor with the two screws.

(d) Using a thickness gauge, recheck the continuity between terminals IDL and E2.


Clearance between lever and stop screw	Continuity (IDLE – E2)
0.57 mm (0.0224 in.)	Continuity
0.85 mm (0.0335 in.)	No continuity

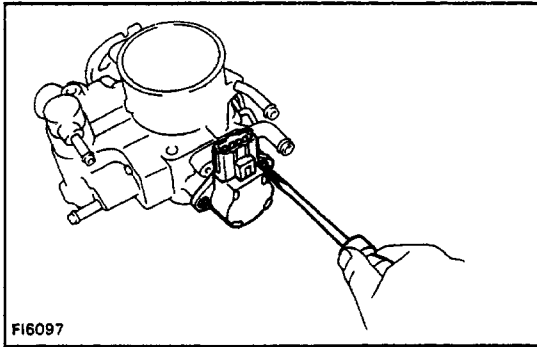

## THROTTLE BODY DISASSEMBLY

### 1. REMOVE THROTTLE POSITION SENSOR

Remove the two screws and sensor.

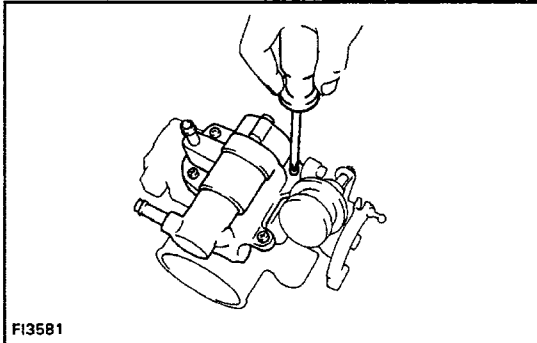

### 2. REMOVE AUXILIARY AIR VALVE


Remove the four screws, air valve and O-ring.

### 3. (M/T)

### REMOVE DASH POT

### 4. (A/T)

### REMOVE THROTTLE OPENER

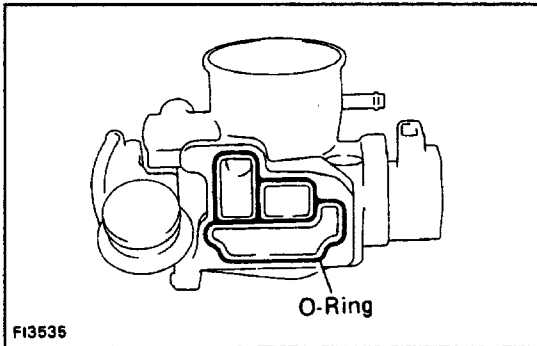

## THROTTLE BODY ASSEMBLY

### 1. (M/T)

### INSTALL DASH POT

### 2. (A/T)

### INSTALL THROTTLE OPENER

### 3. INSTALL AIR VALVE

(a) Place a new O-ring on the throttle body.

(b) Install the air valve with the four screws.

### 4. INSTALL THROTTLE POSITION SENSOR



(a) Check that the throttle valve is fully closed.

(b) Place the sensor on the throttle body as shown in the illustration.

(c) Turn the sensor clockwise, and temporarily install the two screws.

### 5. ADJUST THROTTLE POSITION SENSOR

(See step 4 on page [EG1-202](#))

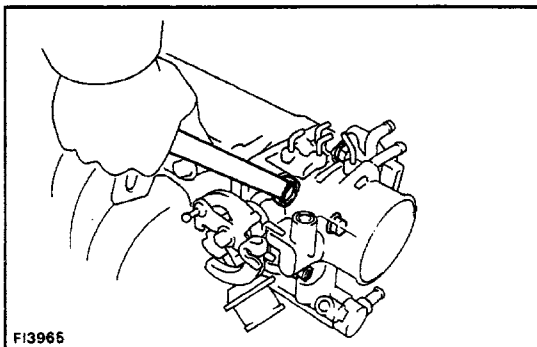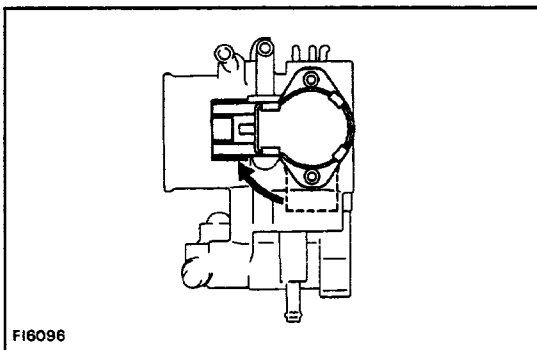


## THROTTLE BODY INSTALLATION

### 1. INSTALL THROTTLE BODY

Using a new gasket, install the throttle body, three bolts and nut.



**Torque: 19 N-m (195 kgf-cm. 14 ft-lbf)**

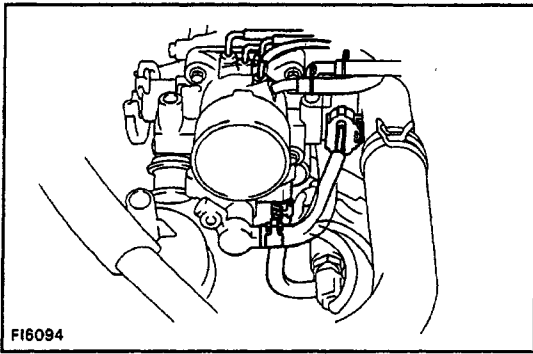**2. CONNECT THROTTLE SENSOR CONNECTOR****3. CONNECT FOLLOWING HOSES:**

- (a) Emission control hoses
- (b) No. 2 and No. 3 water by-pass hoses
- (c) PCV hose
- (d) (with A/C) A/C idle up hose

**4. CONNECT ACCELERATOR CABLE****5. INSTALL AIR INTAKE CONNECTOR****6. FILL WITH COOLANT**

## AUXILIARY AIR VALVE

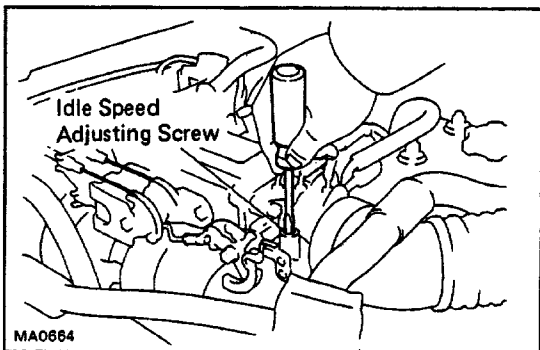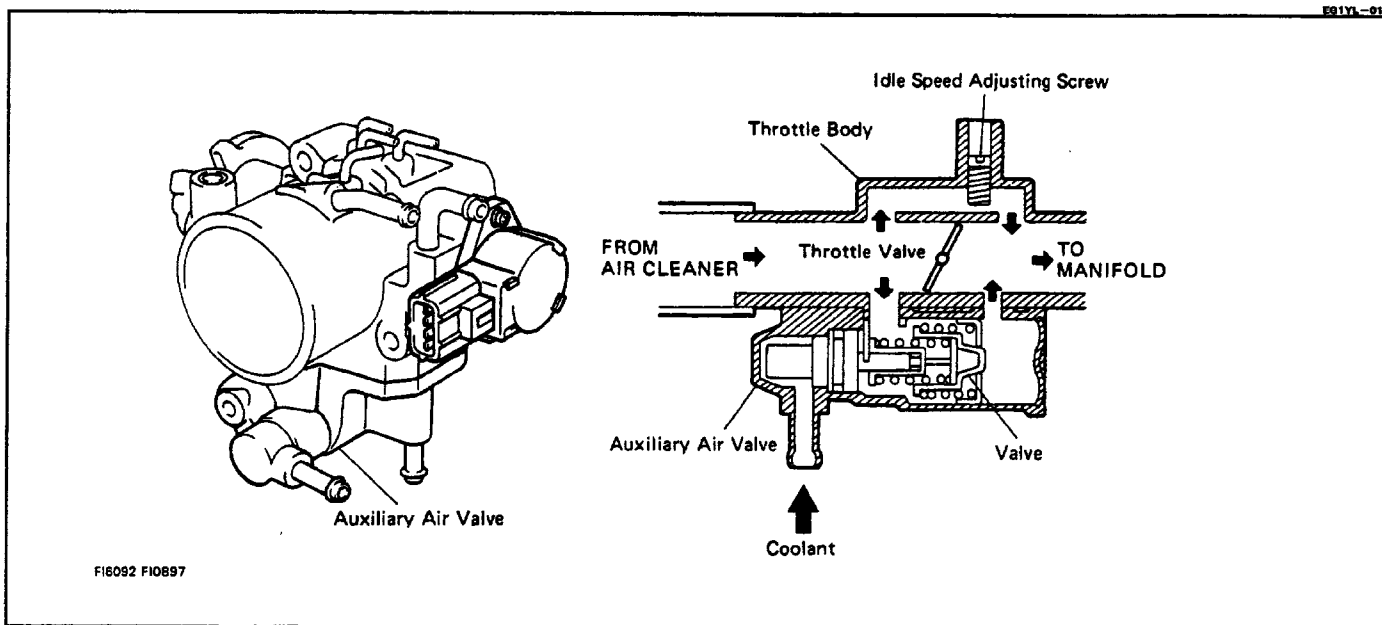

### ON -VEHICLE INSPECTION

EG1Y1-02

#### CHECK OPERATION OF AUXILIARY AIR VALVE

Check the engine rpm by fully screwing in the idle speed adjusting screw.

At low temp. (Coolant temp.: below 80°C/176°F)

- When the idle speed adjusting screw is in, the engine rpm should drop.

After warm-up

- When the idle speed adjusting screw is in, the engine rpm should drop below idle speed stop.

### AUXILIARY AIR VALVE REMOVAL

EG1Y1-01

#### 1. REMOVE THROTTLE BODY

(See page [EG1-200](#))

#### 2. REMOVE AUXILIARY AIR VALVE

(See step 2 on page [EG1-202](#))

### AUXILIARY AIR VALVE INSTALLATION w

#### 1. INSTALL AUXILIARY AIR VALVE


(See step 2 on page [EG1-202](#))

## 2. INSTALL THROTTLE BODY



(See page [EG1-202](#))

# ELECTRONIC PARTS LOCATION

EG1YQ-01

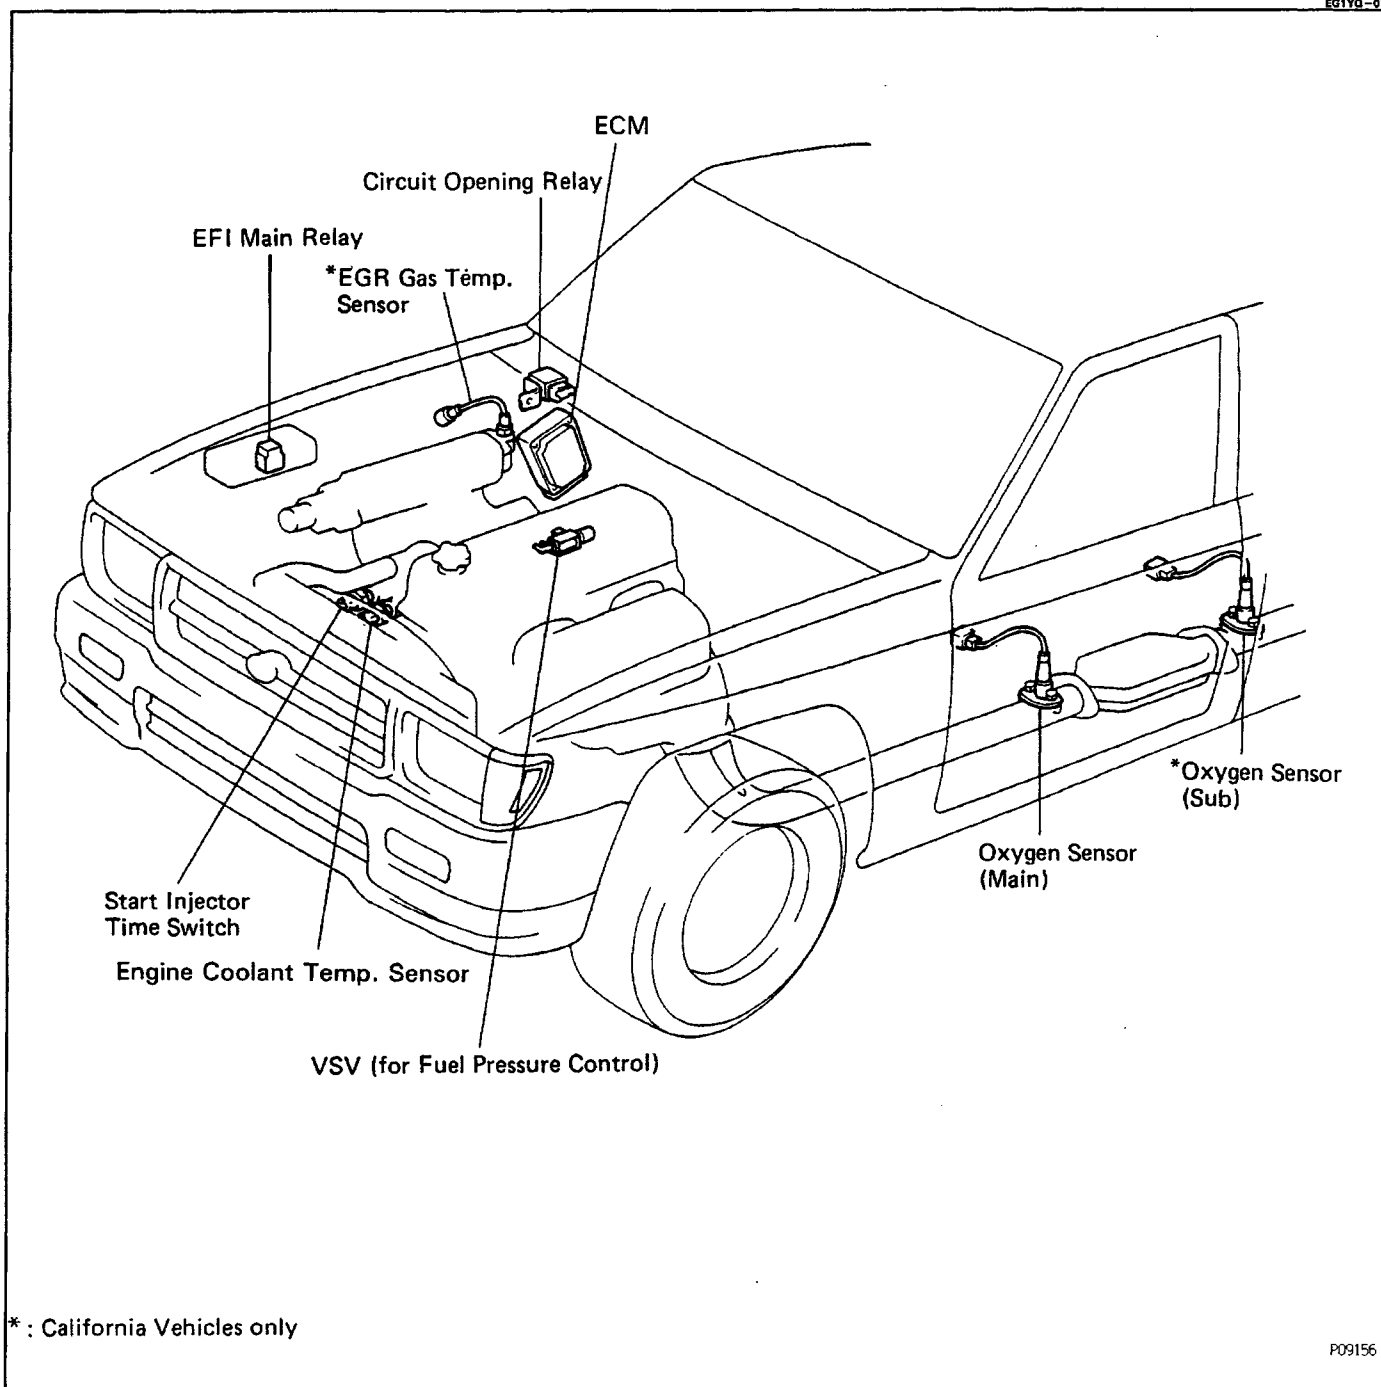

# EFI MAIN RELAY

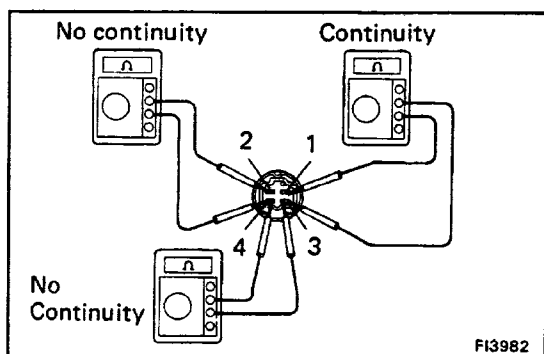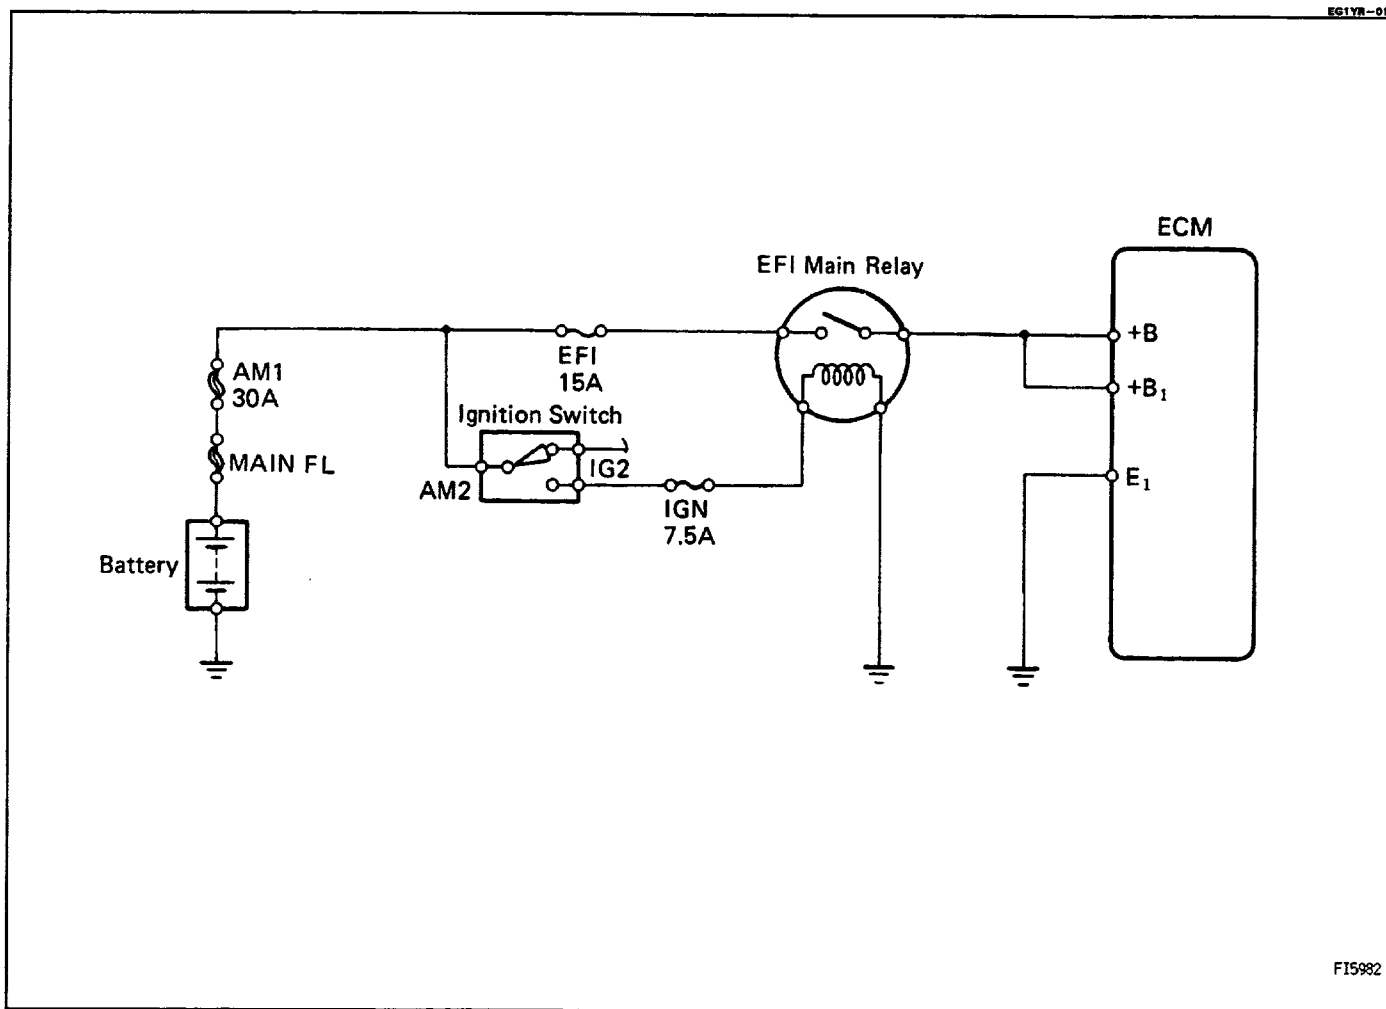

## EFI MAIN RELAY INSPECTION

### 1. INSPECT RELAY CONTINUITY


- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- (b) Check that there is no continuity between terminals 2 and 4.
- (c) Check that there is no continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

### 2. INSPECT RELAY OPERATION



- (a) Apply battery voltage across terminals 1 and 3.
- (b) Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

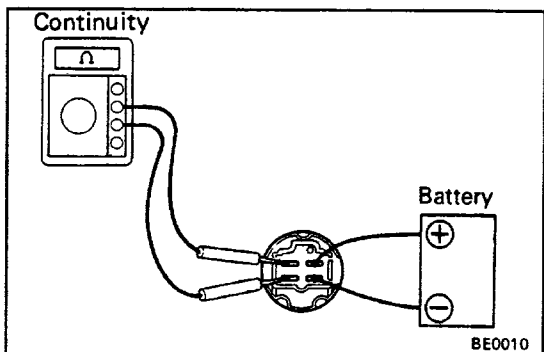



# CIRCUIT OPENING RELAY

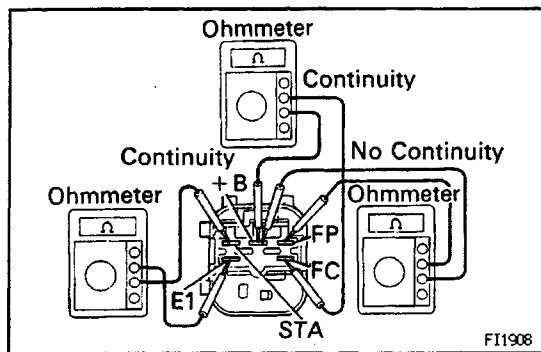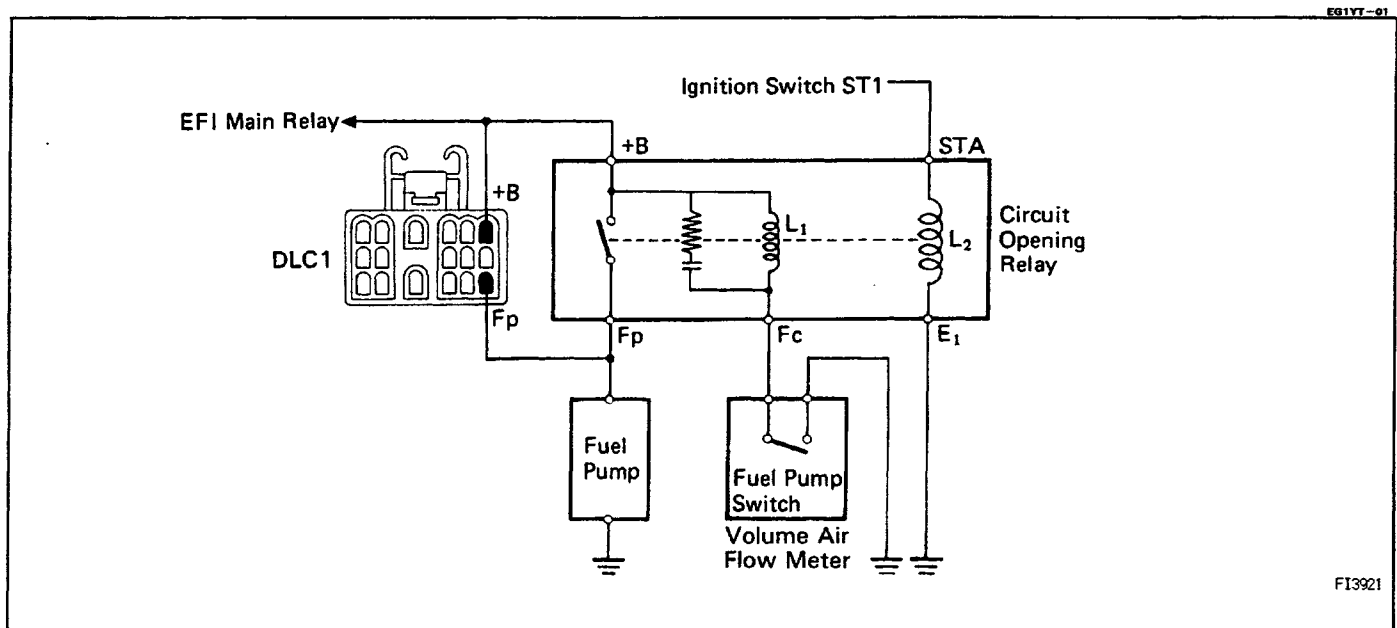

## CIRCUIT OPENING RELAY INSPECTION


### 1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is no continuity between terminals B and FC.
- Check that there is no continuity between terminals B and FP.

If continuity is not as specified, replace the relay.


### 2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals B and FP.


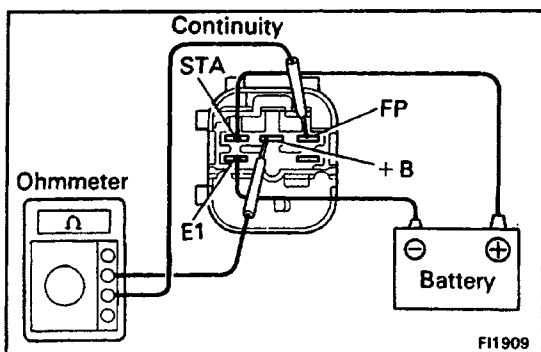


- Apply battery voltage across terminals B and FC.
- Check that there is continuity between terminals B and FP.

If operation is not as specified, replace the relay.

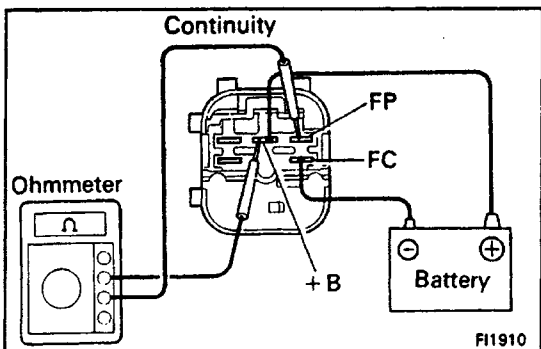

# COLD START INJECTOR TIME SWITCH

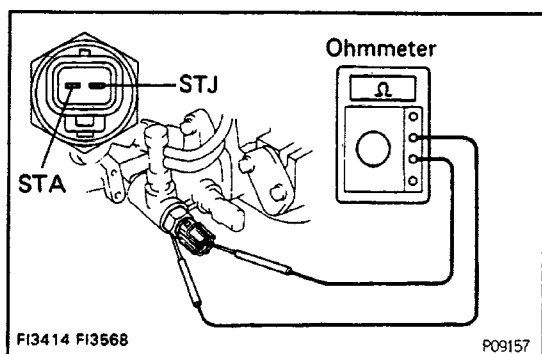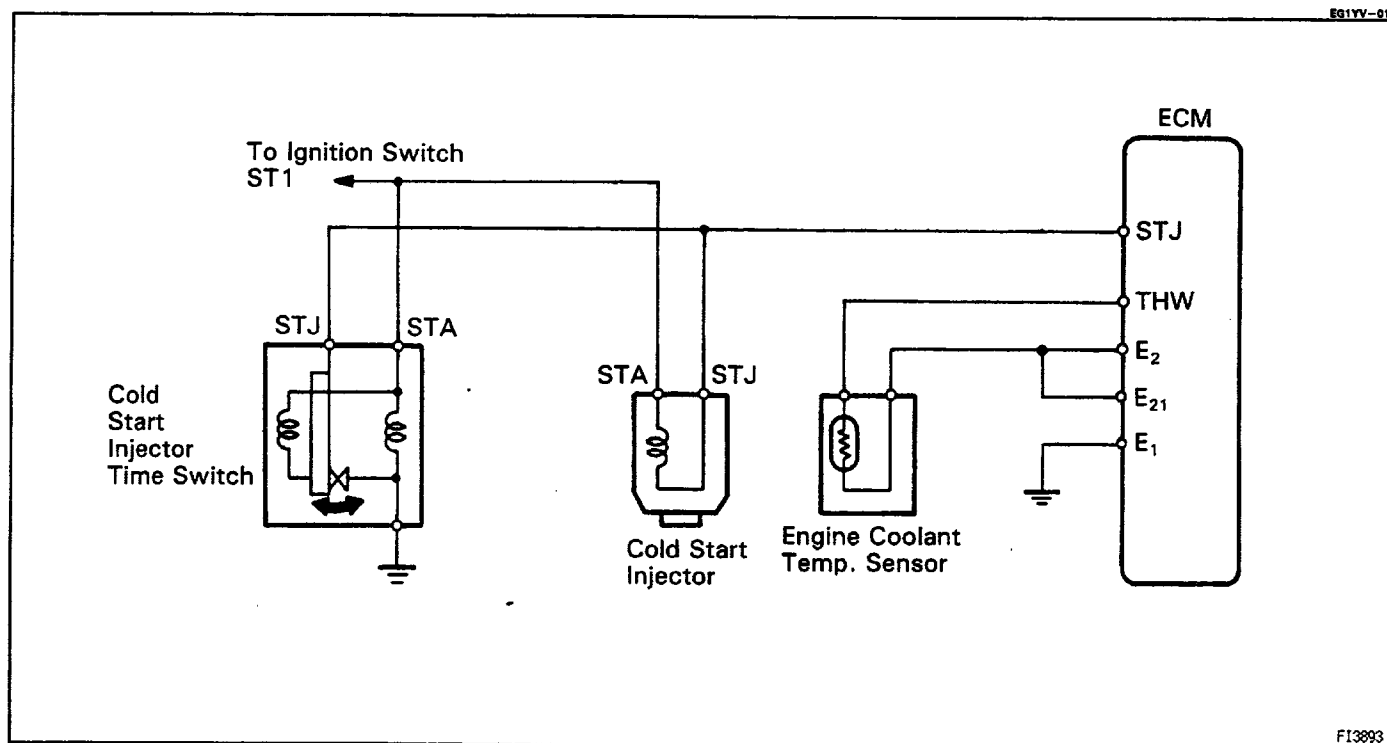

## START INJECTOR TIME SWITCH INSPECTION



EG1YW-01

### MEASURE RESISTANCE OF START INJECTOR TIME SWITCH

- Disconnect the connector.
- Using an ohmmeter, measure the resistance between terminals.

Between terminals	Resistance ( $\Omega$ )	Coolant temperature
STA - STJ	30-50	below 10°C (54°F)
	65-90	above 30°C (86°F)
STA - Ground	30-90	—

# ENGINE COOLANT TEMPERATURE (ECT) SENSOR

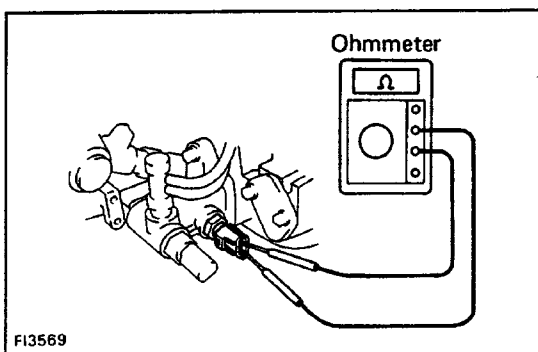
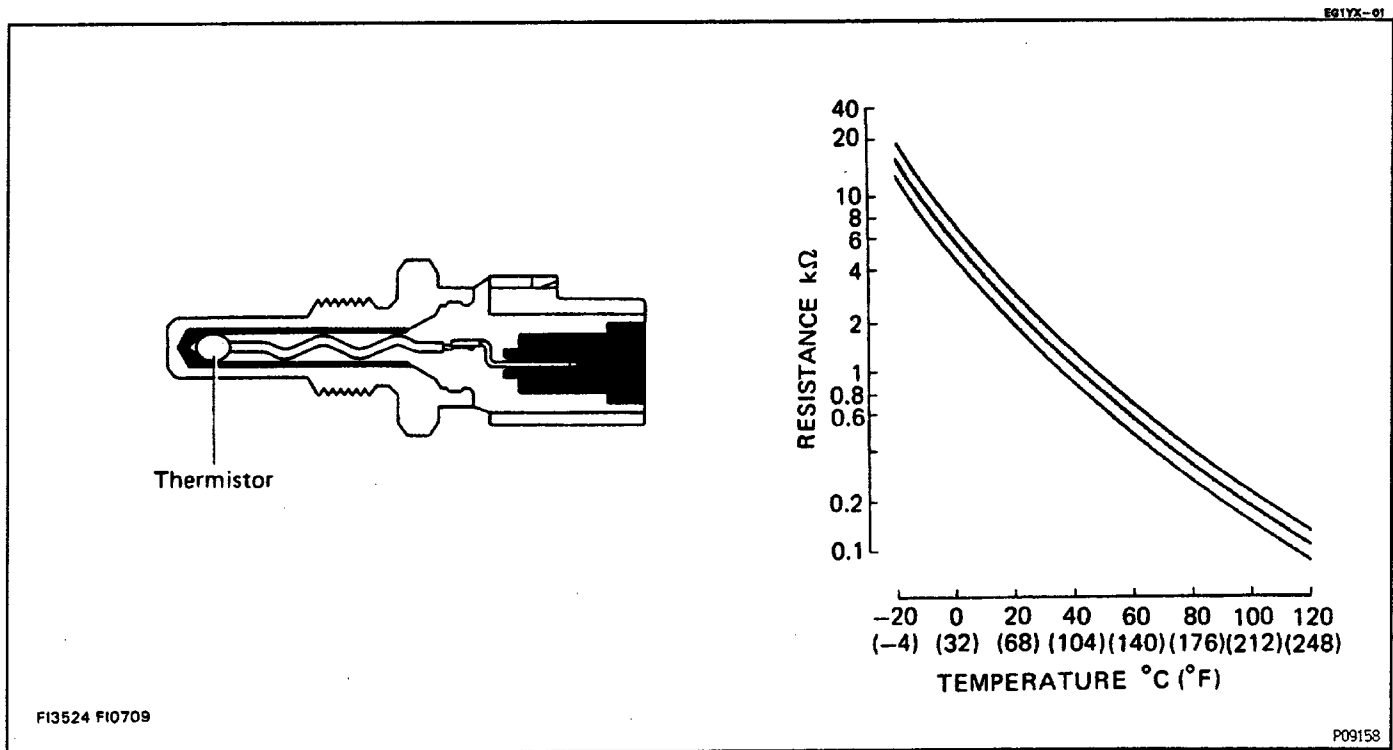


## ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION

- (a) Disconnect the connector.
- (b) Using an ohmmeter, measure the resistance between the terminals.

**Resistance:** Refer to the chart above.

# FUEL PRESSURE CONTROL SYSTEM

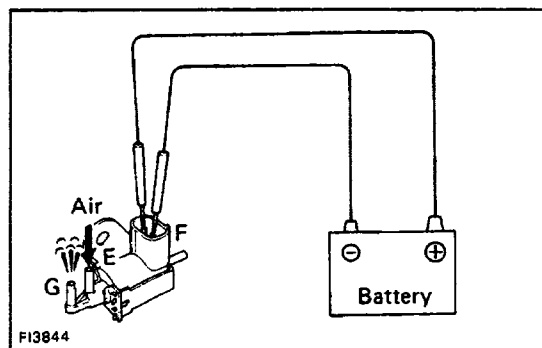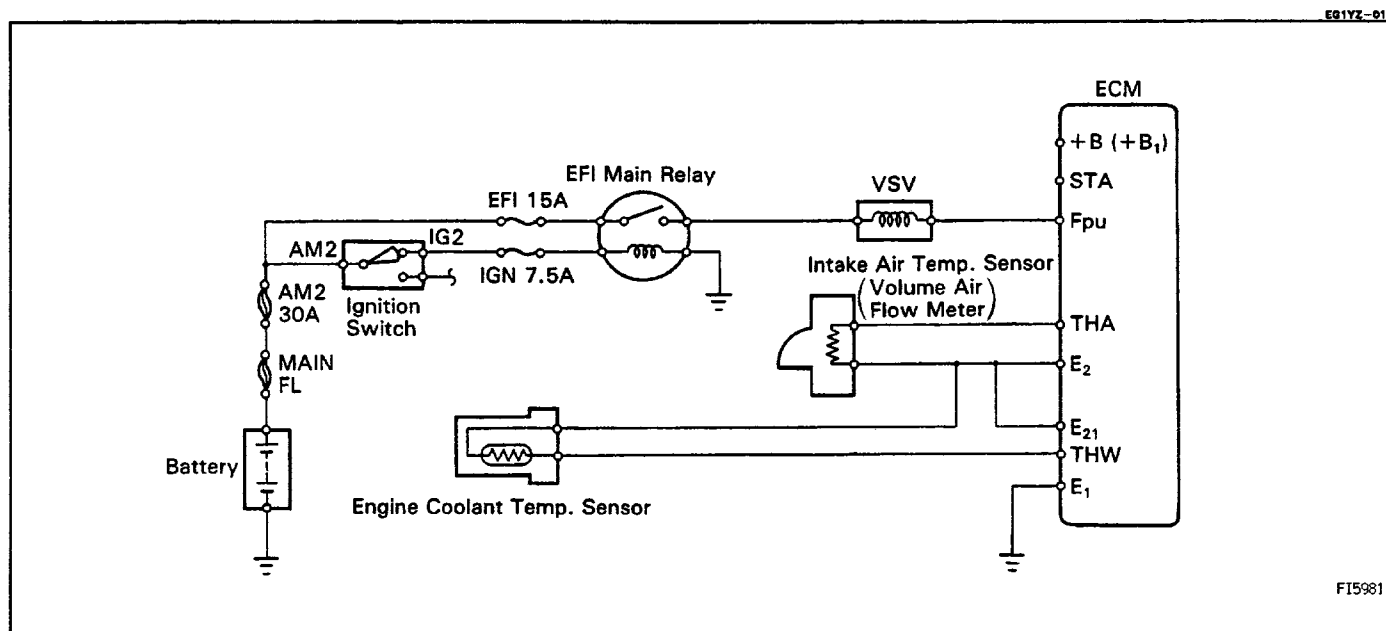


## VSV INSPECTION

### 1. CHECK VACUUM CIRCUIT CONTINUITY IN VSV BY BLOWING AIR INTO PIPE

(a) Connect the VSV terminals to the battery terminals as illustrated.


(b) Blow air into pipe E and check that air comes out of pipe G.

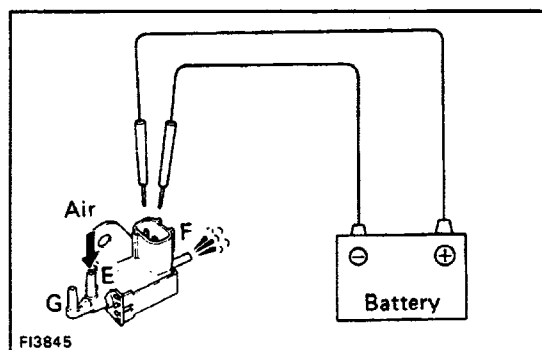

(c) Disconnect the battery.

(d) Blow air into pipe E and check that air comes out of pipe F.


If a problem is found, repair or replace the VSV.

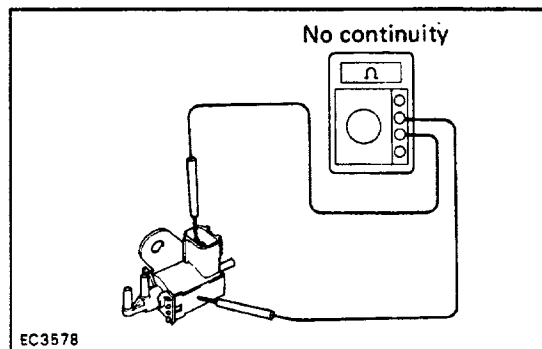

### 2. CHECK FOR SHORT CIRCUIT

Using an ohmmeter, check that there is no continuity between the terminal and the VSV body.

If there is continuity, replace the VSV.

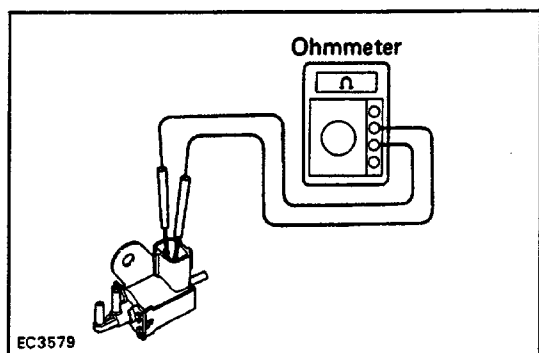


### 3. CHECK FOR OPEN CIRCUIT

Using an ohmmeter, measure the resistance between both terminals as illustrated.

**Specified resistance: 30–50  $\Omega$  at 20°C (68° F)**

If resistance is not within specification, replace the VSV.

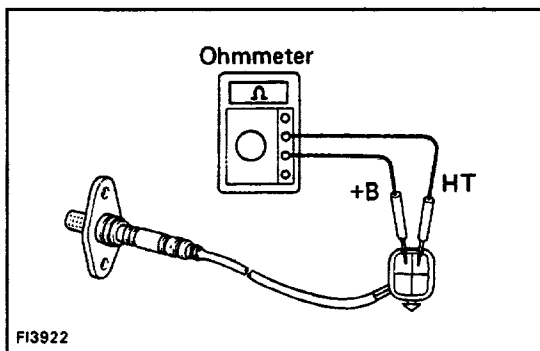

## OXYGEN SENSOR

EG121-01

### OXYGEN SENSOR INSPECTION

#### 1. INSPECT HEATER RESISTANCE OF OXYGEN SENSOR

Using an ohmmeter, measure the resistance between the terminals +B and HT.

**Resistance: 5.1.–6.3  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the oxygen sensor.



#### 2. INSPECTION OF FEEDBACK VOLTAGE (VF1)

(a) Warm up the engine.

(b) Connect the voltmeter to the DLC1 terminals VF, and E1.

HINT: Use SST when connecting between terminals TE1 and E1 of the DLC1.


SST 09843-18020

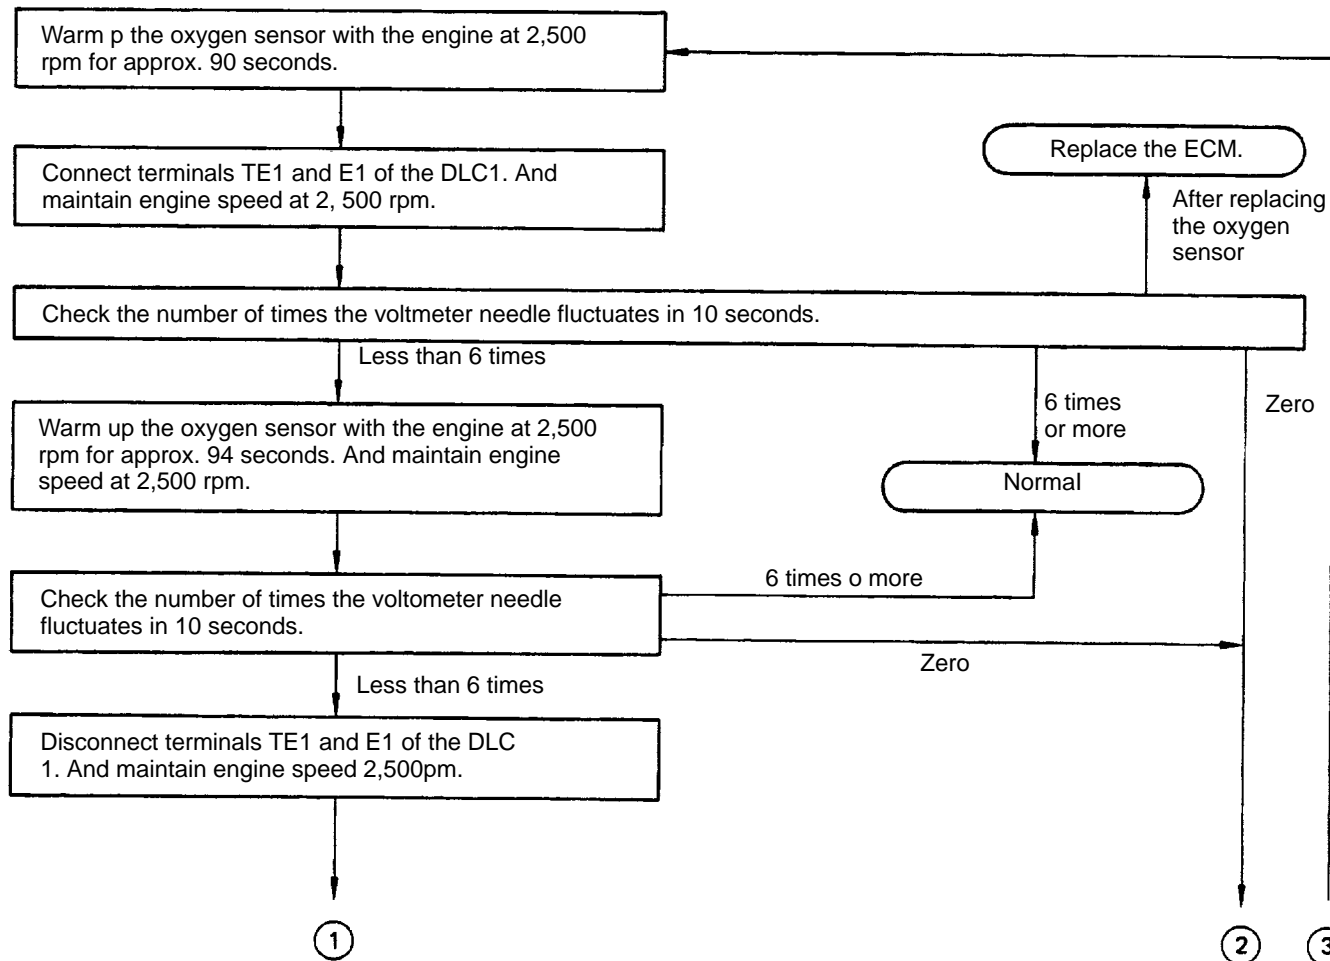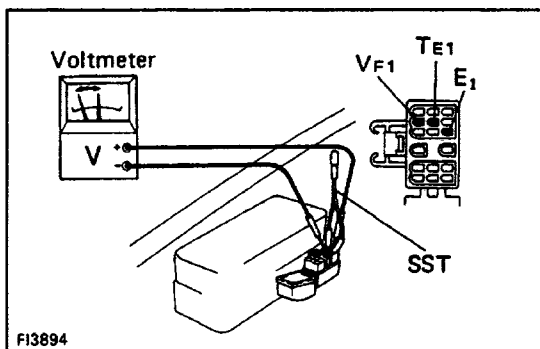

CONTINUED ON PAGE

EG1-213


CONTINUED FROM PAGE EG1-212

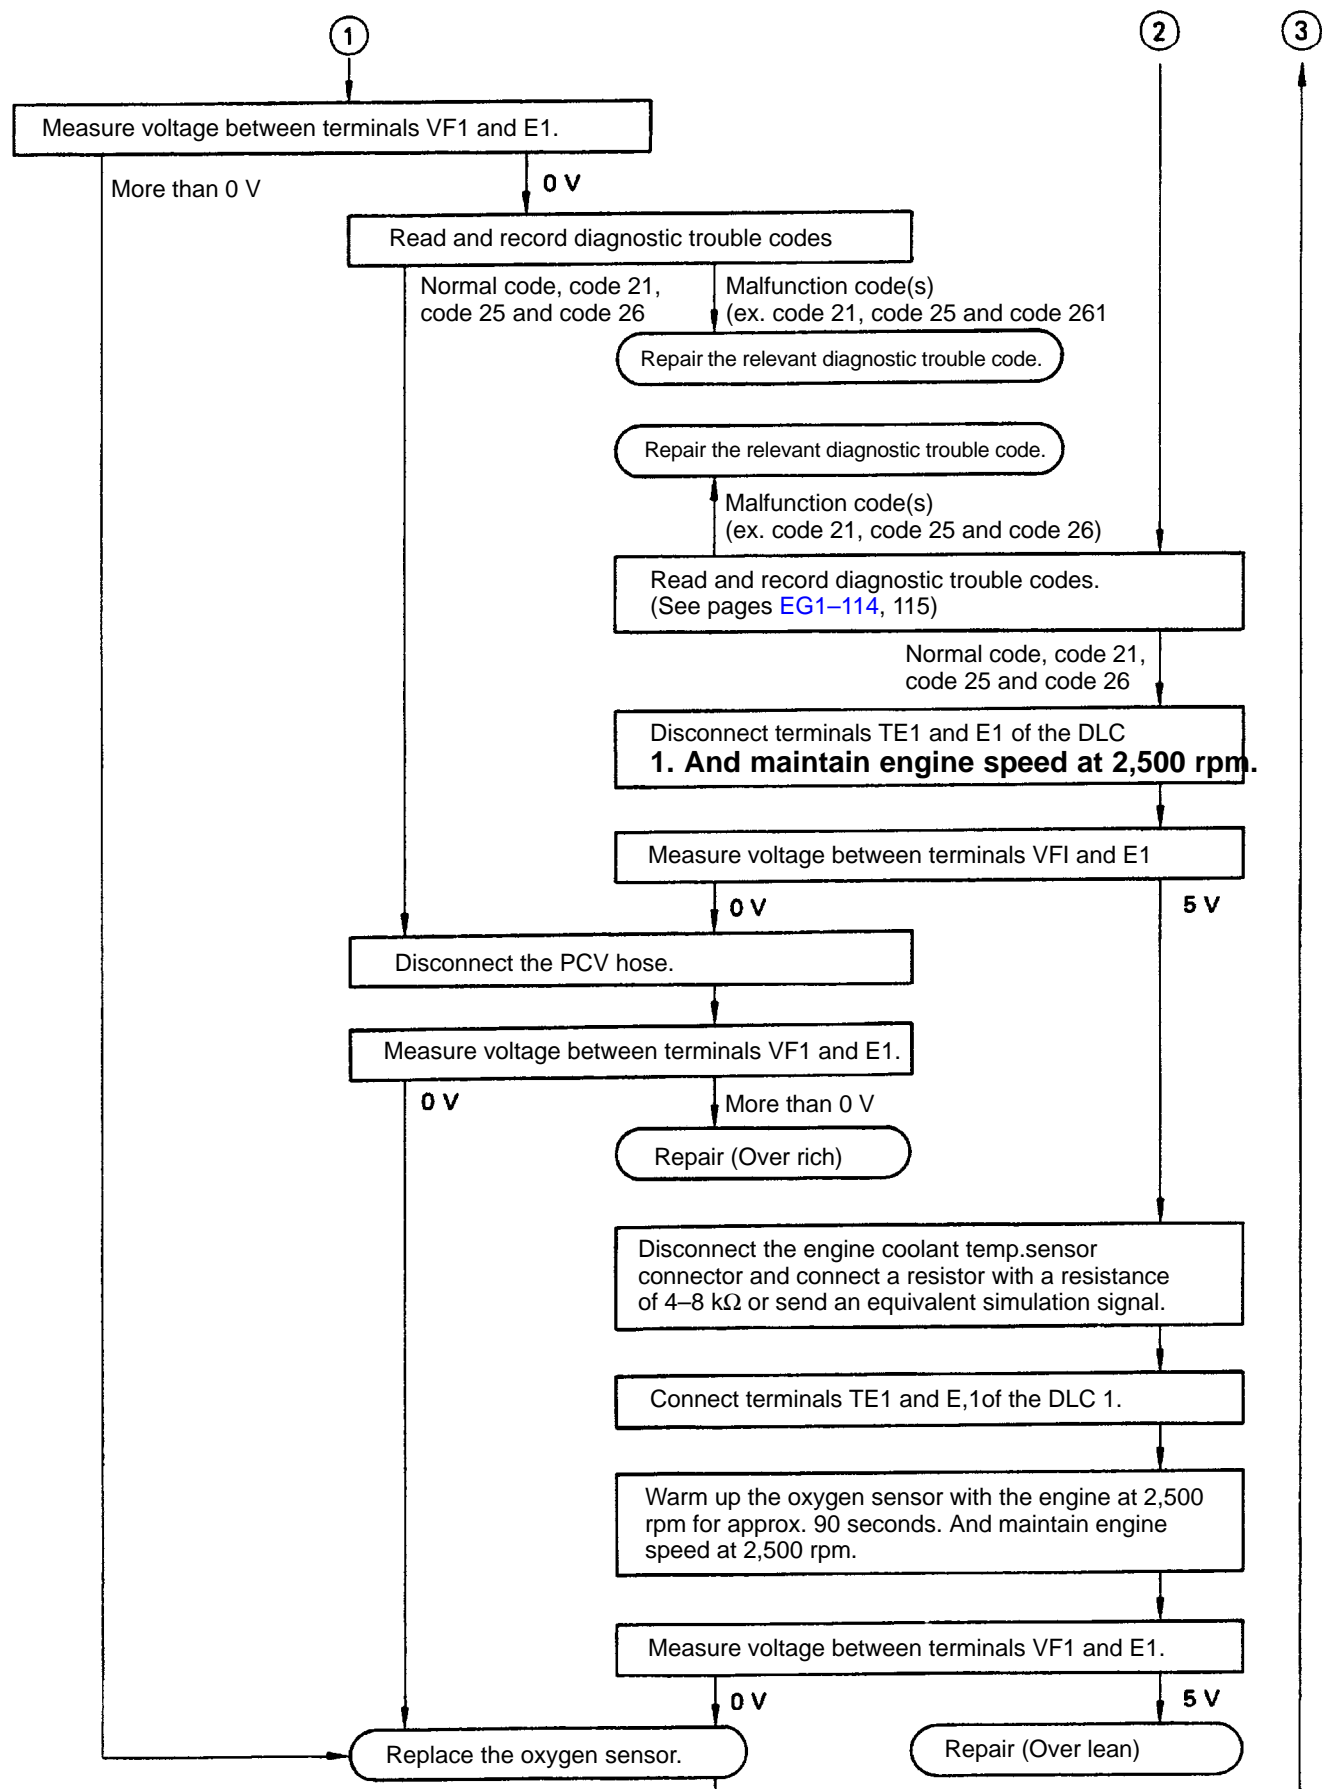


# EGR GAS TEMPERATURE SENSOR

EQ122-01

(California Vehicles only)

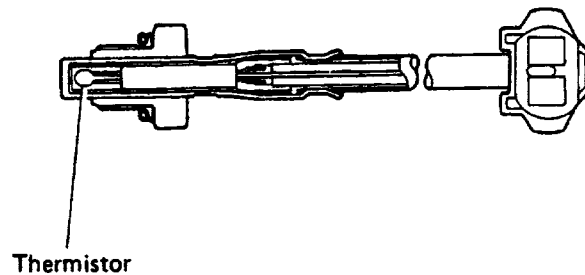

FI2673

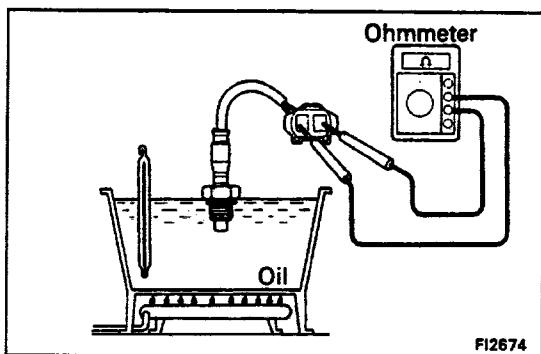

FI2674

## EGR GAS TEMP. SENSOR INSPECTION

EQ122-01

### MEASURE RESISTANCE OF EGR GAS TEMP. SENSOR

Using an ohmmeter, measure the resistance between both terminals.

#### Resistance:

69–89 k $\Omega$  at 50°C (122°F)

11–15 k $\Omega$  at 100°C (212°F)

2–4 k $\Omega$  at 150°C (302°F)


If the resistance is not as specified, replace the sensor.



# ENGINE CONTROL MODULE (ECM)

## ECM INSPECTION

HINT: The MFI circuit can be checked by measuring the voltage and resistance at the wiring connectors of the ECM.

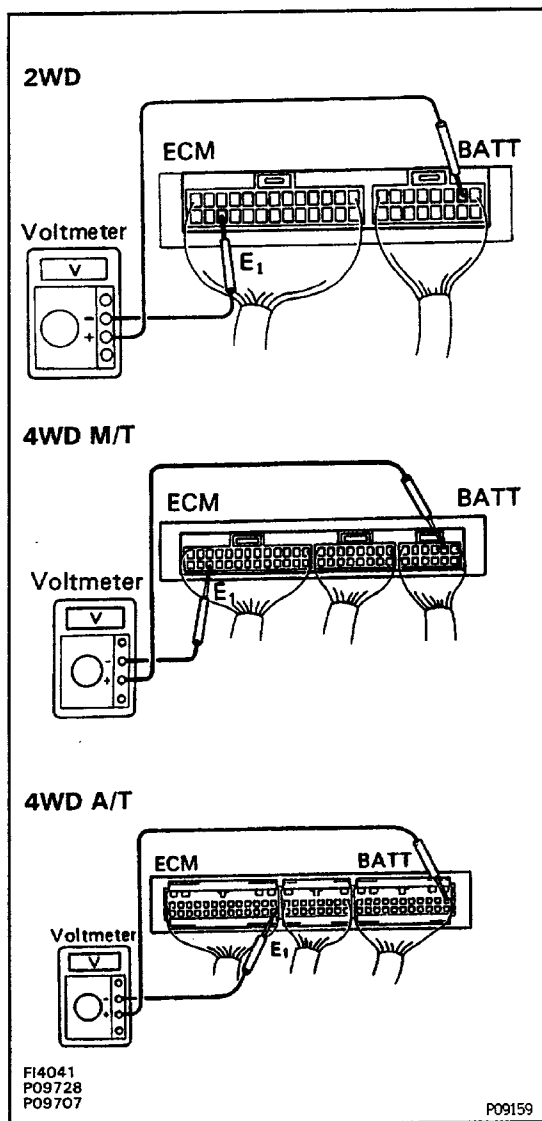

### INSPECT VOLTAGE OF ECM

Check the voltage between each terminal of the wiring connectors.

- Turn the ignition switch ON.
- Measure the voltage at each terminal.

HINT:

- Perform all voltage measurements with the connectors connected.
- Verify that the battery voltage is 11 V or more when the ignition switch is ON.

## Voltage at ECM Wiring Connectors

Terminals	Condition		STD voltage
BATT – E <sub>1</sub>	—		9 – 14
+B – E <sub>1</sub>	Ignition switch ON		
+B <sub>1</sub> – E <sub>1</sub>			
IDL – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Throttle valve open	9 – 14
Vcc – E <sub>2</sub> (E <sub>21</sub> )		—	4.5 – 5.5
VTA – E <sub>2</sub> (E <sub>21</sub> )		Throttle valve fully closed	0.3 – 0.8
		Throttle valve fully open	3.2 – 4.9
Vc – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	—	6 – 10
Vs – E <sub>2</sub> (E <sub>21</sub> )		Measuring plate fully closed	0.5 – 2.5
		Measuring plate fully open	5 – 10
		Idling .	
THA – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Intake air temperature 20°C (68°F)	0.5 – 3.4
THW – E <sub>2</sub> (E <sub>21</sub> )	Ignition switch ON	Coolant temperature 80 °C (176° F )	0.2 – 1.0
STA – E <sub>1</sub>	Ignition switch START position		6 – 12
No. 10 – E <sub>01</sub> No. 20 – E <sub>02</sub>	Ignition switch ON		9 – 14
IGt – E <sub>1</sub>	Idling		0.7 – 1.0
W – E <sub>1</sub>	No trouble (MIL off) and engine running		9 – 14
STJ – E <sub>1</sub>	Ignition switch START position	Coolant temperature 80°C (176°F)	6 – 12
STP – E <sub>1</sub>	Stop light switch ON		7.5 – 14

## ECM Terminals

## 2WD


E <sub>01</sub>	No. 10	STA	Ox <sub>1</sub>	/	/	IGf	IGt	Vc	Vs	THW	NSW	HT <sub>1</sub>	TE <sub>1</sub>	TE <sub>2</sub>	FPU	EGR	/	/	BATT	+B <sub>1</sub>
E <sub>02</sub>	No. 20	E <sub>1</sub>	Ox <sub>2</sub>	THG	Ne	THA	IDL	Vcc	VTA	E <sub>2</sub>	STJ	HT <sub>2</sub>	Vf	AS	ECT	SPD	STP	E <sub>21</sub>	W	+B

## 4WD M/T

E <sub>01</sub>	No. 10	STJ	Fpu	AS					NE	IGf	STA	HT <sub>1</sub>	VF	TE <sub>2</sub>	OX <sub>1</sub>	OX <sub>2</sub>	THW	V <sub>C</sub>	V <sub>S</sub>	THA	4WD				BATT	+B <sub>1</sub>	
E <sub>02</sub>	No. 20	E <sub>1</sub>	EGR	IGt								NSW	HT <sub>2</sub>	E <sub>21</sub>	TE <sub>1</sub>	KNK	THG	IDL	V <sub>CC</sub>	VTA	E <sub>2</sub>	STP	SPD			W	+B

## 4WD A/T

E <sub>01</sub>	No. 10	No. 20	FPU	AS	EGR	S <sub>1</sub>	S <sub>2</sub>	SL	NE	IGf	HT <sub>1</sub>	STJ	VF	KNK	OX <sub>1</sub>	OX <sub>2</sub>	THW	THA	V <sub>s</sub>	V <sub>cc</sub>	STA	SPD <sub>1</sub>	4WD	P	STP	W					BATT		
E <sub>02</sub>			N	2	L	IGt	SPD <sub>2</sub>				HT <sub>2</sub>	E <sub>1</sub>		TE <sub>1</sub>	TE <sub>2</sub>	THG	IDL	VTA	V <sub>c</sub>	E <sub>2</sub>		OD <sub>1</sub>	DG	L <sub>4</sub>			OD <sub>2</sub>	E <sub>21</sub>		+B <sub>1</sub>	+B		

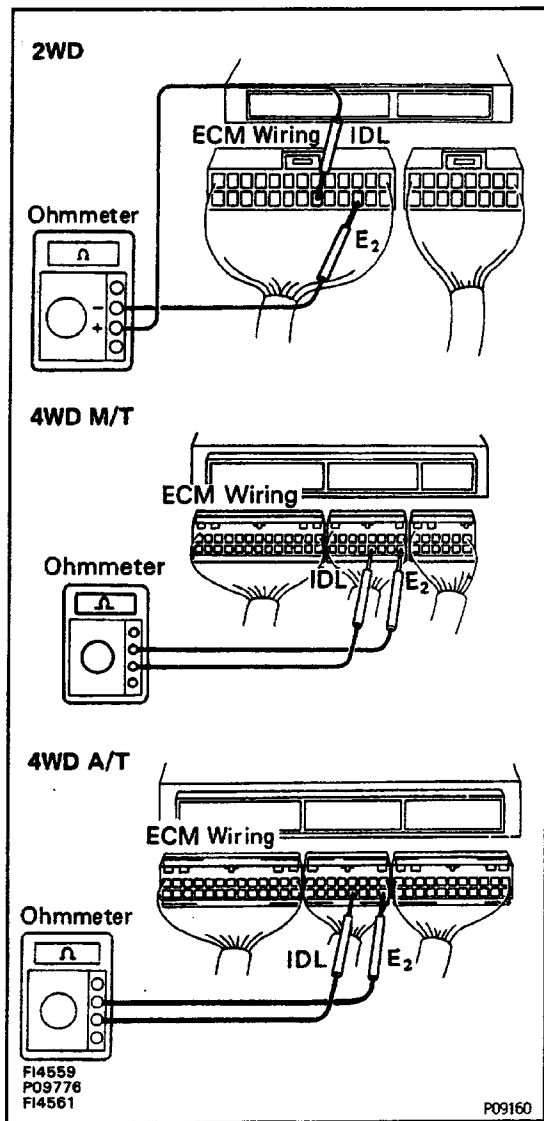

## 2. INSPECT RESISTANCE OF ECM

### NOTICE:

- Do not touch the ECM terminals.
- The tester probe should be inserted into the wiring connector from the wiring side.

Check the resistance between each terminal of the wiring connectors.

- Disconnect the connectors from the ECM.
- Measure the resistance at each terminal.

## Resistance of ECM Wiring Connectors

Terminals	Condition	Resistance 4kΩ1
IDL - E <sub>2</sub> (E <sub>21</sub> )	Throttle valve open	Infinity
	Throttle valve fully closed	2.3 or less
VTA - E <sub>2</sub> (E <sub>21</sub> )	Throttle valve fully open	3.1 - 12.1
	Throttle valve fully closed	0.47 - 6.1
Vcc - E <sub>2</sub> (E <sub>21</sub> )	—	3.9 - 9.0
THA - E <sub>2</sub> (E <sub>21</sub> )	Intake air temperature 20 °C (68 °F)	2 - 3
THW - E <sub>2</sub> (E <sub>21</sub> )	Coolant temperature 80 °C (176 °F)	0.2 - 0.4
+B - E <sub>2</sub> (E <sub>21</sub> )	—	0.2 - 0.4
Vc - E <sub>2</sub> (E <sub>21</sub> )	—	0.1 - 0.3
Vs - E <sub>2</sub> (E <sub>21</sub> )	Measuring plate fully closed	0.02 - 0.4
	Measuring plate fully open	0.02 - 1.00
Ne - E <sub>1</sub>	Cold	0.185 - 0.275
	Hot	0.240 - 0.325
STJ - E <sub>1</sub>	—	Infinity
FPU - E <sub>1</sub>	—	Infinity
HT <sub>1</sub> - E <sub>1</sub>	—	Infinity

## ECM Terminals

## 2WD


E <sub>01</sub>	No. 10	STA	Ox <sub>1</sub>	/	/	IGf	IGt	Vc	Vs	THW	NSW	HT <sub>1</sub>	TE <sub>1</sub>	TE <sub>2</sub>	FPU	EGR	/	/	BATT	+B <sub>1</sub>
E <sub>02</sub>	No. 20	E <sub>1</sub>	Ox <sub>2</sub>	THG	Ne	THA	IDL	Vcc	VTA	E <sub>2</sub>	STJ	HT <sub>2</sub>	V <sub>f</sub>	AS	ECT	SPD	STP	E <sub>21</sub>	W	+B

## 4WD M/T

E <sub>01</sub>	No. 10	STJ	Fpu	AS	/	/	/	/	NE	IGf	STA	HT <sub>1</sub>	VF	TE <sub>2</sub>	OX <sub>1</sub>	OX <sub>2</sub>	THW	Vc	Vs	THA	4WD	/	/	/	BATT	+B <sub>1</sub>
E <sub>02</sub>	No. 20	E <sub>1</sub>	EGR	IGt	/	/	/	/	/	/	NSW	HT <sub>2</sub>	E <sub>21</sub>	TE <sub>1</sub>	KNK	THG	IDL	Vcc	VTA	E <sub>2</sub>	STP	SPD	/	/	W	+B

## 4WD A/T

E <sub>01</sub>	No. 10	No. 20	FPU	AS	EGR	S <sub>1</sub>	S <sub>2</sub>	SL	NE	IGf	HT <sub>1</sub>	STJ	VF	KNK	OX <sub>1</sub>	OX <sub>2</sub>	THW	THA	Vs	Vcc	STA	/	SPD <sub>1</sub>	4WD	P	STP	W	/	/	/	BATT
E <sub>02</sub>	/	/	N	2	L	IGt	SPD <sub>2</sub>	/	/	/	HT <sub>2</sub>	E <sub>1</sub>	/	TE <sub>1</sub>	TE <sub>2</sub>	THG	IDL	VTA	Vc	E <sub>2</sub>	OD <sub>1</sub>	DG	L <sub>4</sub>	/	/	OD <sub>2</sub>	E <sub>21</sub>	/	/	+B <sub>1</sub>	+B

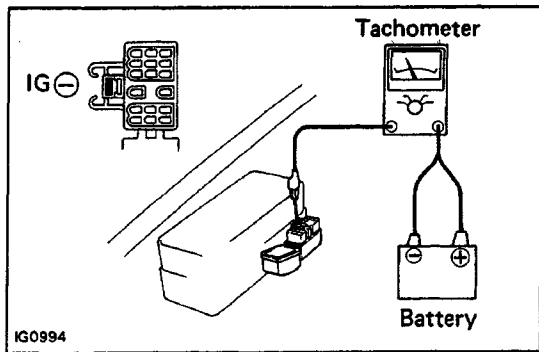

E0125-01

## FUEL CUT RPM

### FUEL CUT RPM INSPECTION

#### 1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

#### 2. CONNECT TACHOMETER

Connect the test probe of a tachometer to terminal IG (-) of the DLC1.

#### NOTICE

- Never allow the tachometer terminal to touch ground as it could result in damage to the igniter and/or ignition coil.
- As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of yours before use.

#### 3. INSPECT FUEL CUT OPERATION

- Increase the engine speed to at least 2,500 rpm.
- Check for injector operating sound.
- Check that when the throttle lever is released, injector operation sound stops momentarily and then resumes.

#### HINT:

- The vehicle should be stopped.
- Accessories switched OFF.

#### 2WD A/T (stop light switch ON)

Fuel cut rpm: 1,300 rpm

Fuel return rpm: 1,000 rpm

#### Others

Fuel cut rpm: 1,900 rpm

Fuel return rpm: 1,600 rpm

#### 4. REMOVE TACHOMETER

**EQ124-01**

V01953

## Specifications (Cont'd)

Oxygen sensor heater	Resistance	at 20°C (68°F)	5.1 – 6.3 $\Omega$
EGR gas temp. sensor	Resistance		69 – 89 k $\Omega$ (50°C, 122°F) 11 – 15 k $\Omega$ (100°C, 212°F) 2 – 4 k $\Omega$ (150°C, 302°F)
Fuel cut rpm	Fuel cut rpm 2WD A/T (stop light switch ON) Others Fuel return rpm 2WD A/T (stop light switch ON) Others		1,300 rpm 1,900 rpm 1,000 rpm 1,600 rpm
ECM (Voltage)	HINT: <ul style="list-style-type: none"> <li>Perform all voltage and resistance measurements with the ECM connected.</li> <li>Verify that the battery voltage is 11 V or above when the ignition switch is ON.</li> <li>The testing probes must not make contact with the ECM oxygen VF terminals.</li> </ul>		
	Terminals	STD voltage	Condition
	BATT – E <sub>1</sub>	9 – 14	–
	+B – E <sub>1</sub>		Ignition SW ON
	+B <sub>1</sub> – E <sub>1</sub>		
	IDL – E <sub>2</sub> (E <sub>21</sub> )	9 – 14	Throttle valve open
	Vcc – E <sub>2</sub> (E <sub>21</sub> )	4.5 – 5.5	Ignition SW ON Throttle valve fully closed Throttle valve fully open
	VTA – E <sub>2</sub> (E <sub>21</sub> )	0.3 – 0.8	
		3.2 – 4.9	
	Vc – E <sub>2</sub> (E <sub>21</sub> )	6 – 10	–
	Vs – E <sub>2</sub> (E <sub>21</sub> )	0.5 – 2.5	Ignition SW ON Measuring plate fully closed Measuring plate fully open
		5 – 10	
		2 – 8	Idling
	THA – E <sub>2</sub> (E <sub>21</sub> )	0.5 – 3.4	Ignition SW ON Intake air temperature 20°C (68°F) Coolant temperature 80°C (176°F)
	THW – E <sub>2</sub> (E <sub>21</sub> )	0.2 – 1.0	
	STA – E <sub>1</sub>	6 – 12	Ignition SW START position
	No. 10 – E <sub>01</sub> No. 20 – E <sub>02</sub>	9 – 14	Ignition SW ON
	IGt – E <sub>1</sub>	0.7 – 1.0	Cranking or idling
	W – E <sub>1</sub>	9 – 14	No trouble (MIL off) and engine running
	STJ – E <sub>1</sub>	6 – 12	Ignition SW START position Coolant temperature 80°C (176°F)
	STP – E <sub>1</sub>	7.5 – 14	Stop light switch ON

## Specifications (Cont'd)

ECM (Resistance)	Terminals	Resistance (k $\Omega$ )	Condition
	IDL – E <sub>2</sub> (E <sub>21</sub> )	Infinity	Throttle valve open
		2.3 or less	Throttle valve fully closed
	VTA – E <sub>2</sub> (E <sub>21</sub> )	3.1 – 12.1	Throttle valve fully open
		0.47 – 6.1	Throttle valve fully closed
	Vcc – E <sub>2</sub> (E <sub>21</sub> )	3.9 – 9.0	—
	THA – E <sub>2</sub> (E <sub>21</sub> )	2 – 3	Intake air temperature 20 °C (68°F)
	THW – E <sub>2</sub> (E <sub>21</sub> )	0.2 – 0.4	Coolant temperature 80 °C (176°F)
	+B – E <sub>2</sub> (E <sub>21</sub> )	0.2 – 0.4	—
	Vc – E <sub>2</sub> (E <sub>21</sub> )	0.1 – 0.3	—
	Vs – E <sub>2</sub> (E <sub>21</sub> )	0.02 – 0.4	Measuring plate fully closed
		0.02 – 1.00	Measuring plate fully open
	Ne – E <sub>1</sub>	0.185 – 0.275	Cold
		0.240 – 0.325	Hot
	STJ – E <sub>1</sub>	Infinity	—
	FPU – E <sub>1</sub>	Infinity	—
	HT – E <sub>1</sub>	Infinity	—

V01955

## TORQUE SPECIFICATIONS

EG1Z7-01


Part tightened	N·m	kgf·cm	ft·lbf
Fuel hose x Fuel filter	30	310	22
Fuel hose x Fuel main tube	30	310	22
Fuel filter x Fuel filter bracket	19	195	14
Delivery pipe x Pressure regulator	30	300	22
Delivery pipe x Intake manifold	19	195	14
Delivery pipe x Fuel tube	44	450	33
Delivery pipe x Fuel pipe	19	195	14
Fuel pipe x Cold start injector	19	195	14
Air intake chamber x Cold start injector	7.8	80	69 in·lbf
Air intake chamber x Throttle body	19	195	14
Fuel pump	3.9	40	35 in·lbf
Fuel drain plug	6.4	65	56 in·lbf
Fuel tank x Body	29	300	22



# COOLING SYSTEM

## DESCRIPTION

This engine utilizes a pressurized water faced circulation cooling system which includes a thermostat mounted on the outlet side.

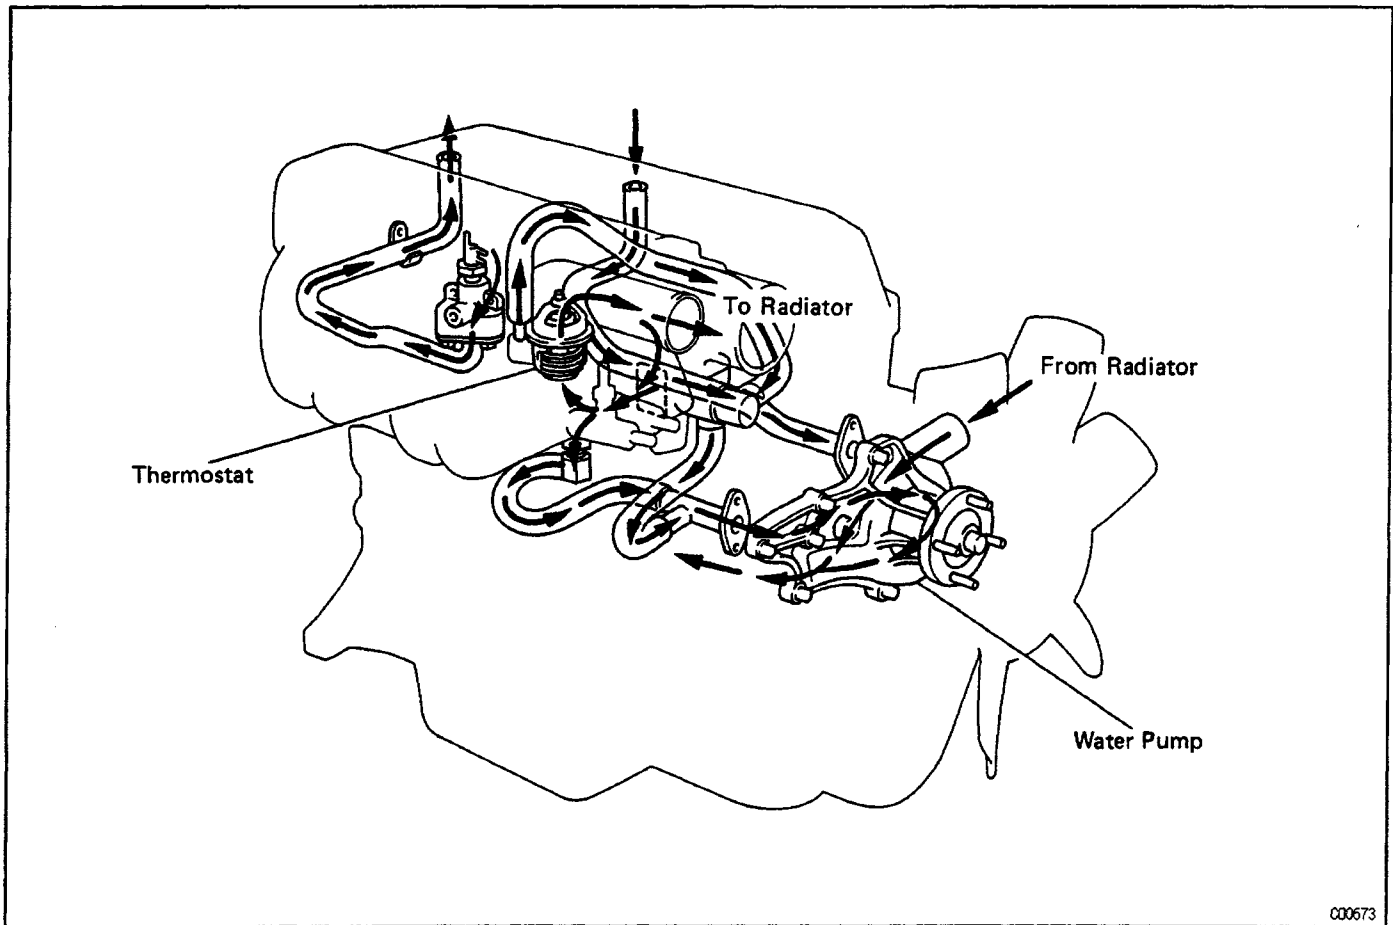

### RADIATOR CAP

The radiator cap is a pressure type cap which seals the radiator, resulting in pressurization of the radiator as the coolant expands. The pressurization prevents the coolant from boiling even when the coolant temperature exceeds 100°C (212°F). A relief valve (pressurization valve) and a vacuum valve (negative pressure valve) are built into the radiator cap. When the pressure generated inside the cooling system exceeds the limit (coolant temperature: 110–120°C (230–248°F) pressure: 58.8–103.0 kPa (0.6–1.05 kgf/cm<sup>2</sup>, 8.5–14.9 psi) the relief valve is opened by the pressure and lets steam escape through pipe. The vacuum valve opens to allow atmospheric air to enter to alleviate the vacuum which develops in the cooling system after the engine is stopped and the coolant temperature drops.

### RESERVOIR TANK

The reservoir tank is used to catch coolant which overflows the cooling system as a result of volumetric expansion when the coolant is heated. When the coolant temperature drops, the coolant in the reservoir tank returns to the radiator, thus keeping the radiator full at all times and

avoiding needless coolant loss. To find out if the coolant needs to be replenished, check the reservoir tank level.

**WATER PUMP**

The water pump is used for forced circulation of coolant through the cooling system. It is mounted on the front of the timing chain cover and driven by a V belt.


**THERMOSTAT**

The thermostat is a wax type and is mounted in the water outlet housing. The thermostat includes a type of automatic valve operated by fluctuations in the coolant temperature. When the coolant temperature drops, the valve closes, preventing the circulation of coolant through the engine and thus permitting the engine to warm up rapidly. When the coolant temperature has risen, the valve opens, allowing the coolant in the engine to circulate through the radiator. Wax inside the thermostat expands when heated and contracts when cooled. Heating the wax thus generates pressure which overpowers the force of the spring which keeps the valve closed, thus opening the valve. When the wax cools, its contraction causes the force of the spring to take effect once more, closing the valve. The thermostat in this engine operates at a temperature of 88•C (190•F).

**PREPARATION**

**RECOMMENDED TOOLS**


EG12V-08

	09082-00015 TOYOTA Electrical Tester	
---	--------------------------------------	--

**EQUIPMENT**

EG12W-03

Heater	
Radiator cap tester	
Thermometer	
Torque wrench	

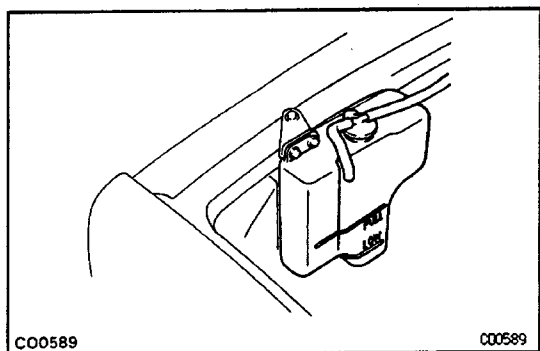


## COOLANT CHECK AND REPLACEMENT

### 1. CHECK ENGINE COOLANT LEVEL IN RESERVOIR TANK

The coolant level should be between the "LOW" and "Full" lines.


If low, check for leaks and add coolant up to the "FULL" line.

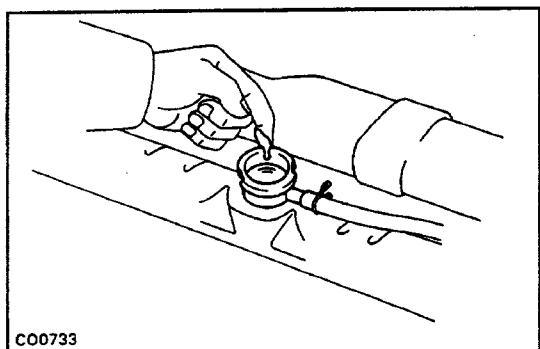

### 2. CHECK ENGINE COOLANT QUALITY

There should not be any excessive deposits of rust or scales around the radiator cap or radiator filler hole, and the coolant should be free from oil.

If excessively dirty, replace the coolant.

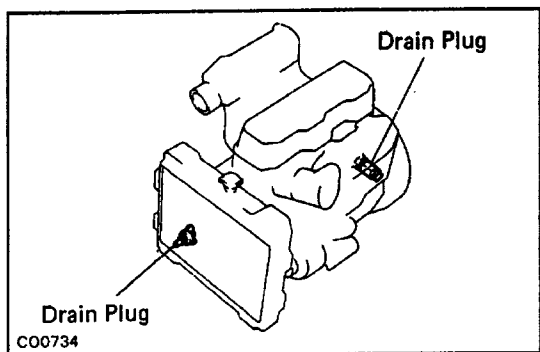

### 3. REPLACE ENGINE COOLANT

- (a) Remove the radiator cap.
- (b) Drain the coolant from the radiator and engine drain plugs.
- (c) Close the drain cocks.
- (d) Fill the system with coolant.

#### HINT:

- Use a good brand of ethylene-glycol base coolant, mixed according to the manufacturer's instructions.
- Using coolant which has more than 50% ethylene-glycol (but not more than 70 %) is recommended.

#### NOTICE:

- Do not use an alcohol type coolant.
- The coolant should be mixed with demineralized water or distilled water.

Coolant capacity (w/ heater or air conditioner):

Ex. 4WD A/T

8.4 liters (8.9 US qts, 7.4 Imp. qts)


4WD A/T

9.1 liters (9.6 US qts, 8.0 Imp. qts)

- (e) Install the radiator cap.
- (f) Start the engine and check for leaks.
- (g) Recheck the coolant level and refill as necessary.

# WATER PUMP COMPONENTS


EG1U3-01

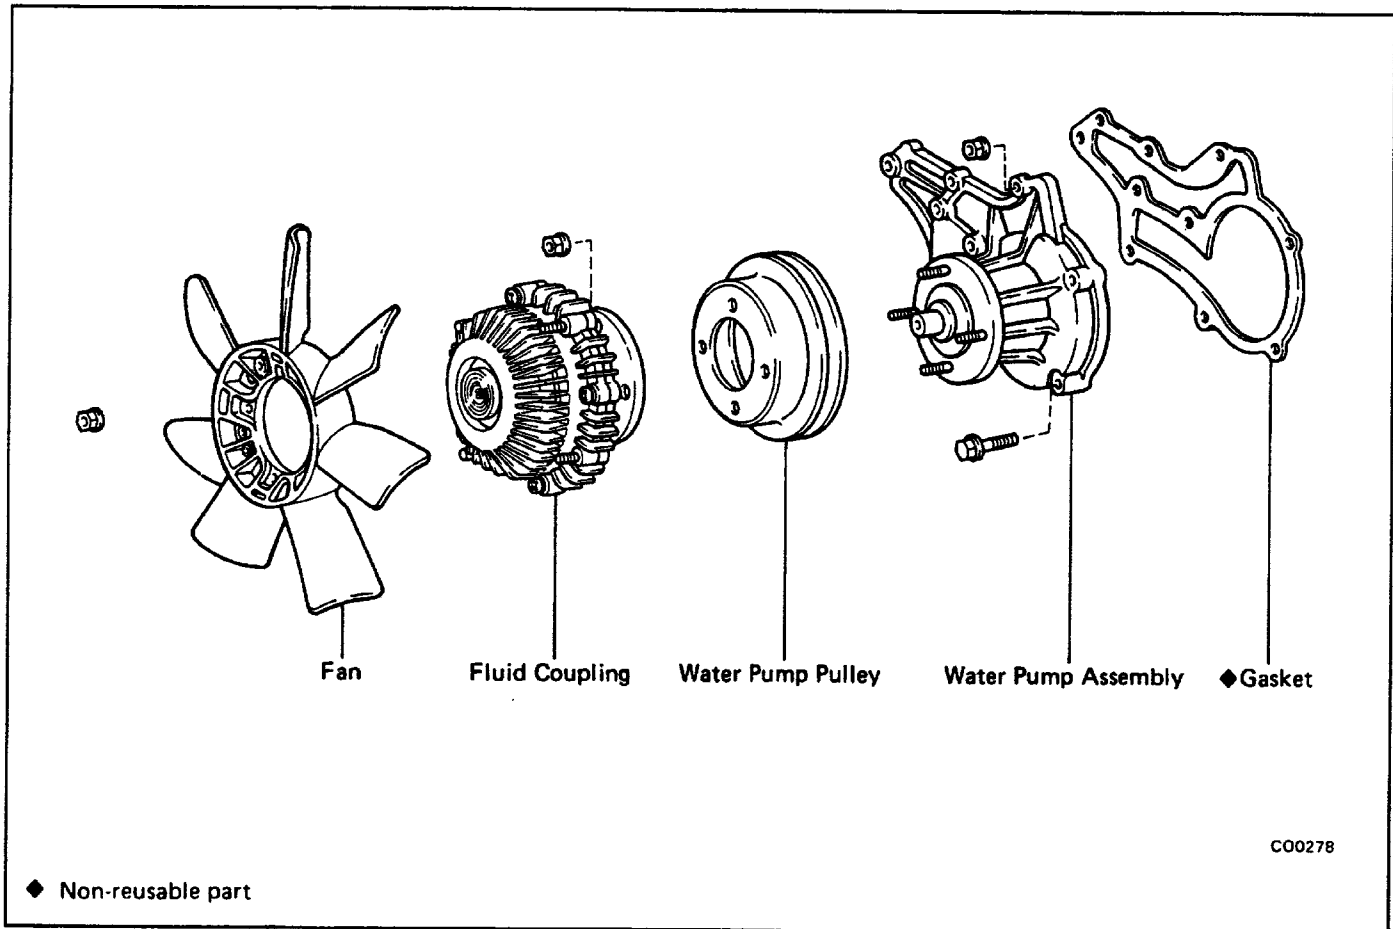

## WATER PUMP REMOVAL


EG1U4-01

1. DRAIN COOLANT  
(See step 3 on page [EG1-225](#))
2. (w/ PS)  
REMOVE PS BELT
3. (with A/C)  
REMOVE A/C BELT
4. REMOVE FLUID COUPLING WITH FAN AND  
WATER PUMP PULLEY  
(See step 3 on page [EG1-40](#))

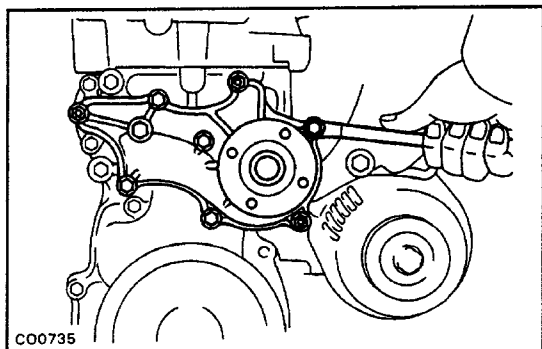

## 5. REMOVE WATER PUMP


Remove the six bolts, three nuts, water pump and gasket.

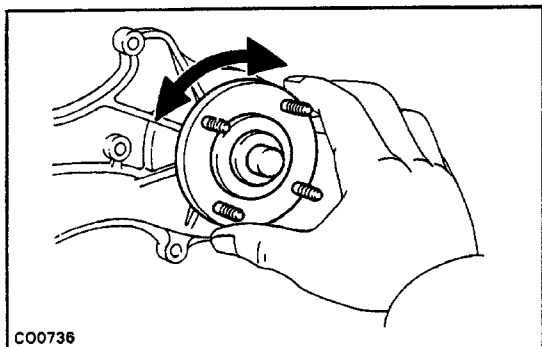

## WATER PUMP INSPECTION


### 1. INSPECT WATER PUMP BEARING

Check that the water pump bearing moves smoothly and quietly.

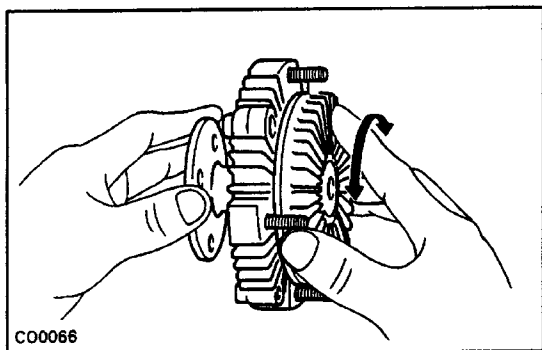

### 2. INSPECT FLUID COUPLING

Check the fluid coupling for damage and silicone oil leakage.

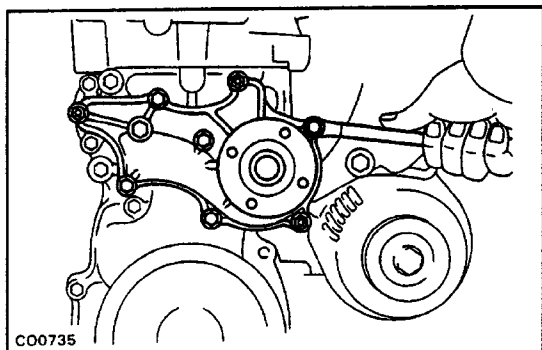

## WATER PUMP INSTALLATION

(See page [EG1-226](#))

### 1. INSTALL WATER PUMP OVER NEW GASKET

Install the water pump and a new gasket with the six bolts and three nuts.

### 2. INSTALL WATER PUMP PULLEY AND FLUID COUPLING WITH FAN

(See page [MA-6](#) step 9 on page [EG1-44](#))

### 3. (with A/C)

INSTALL A/C BELT (See page [MA-6](#))

### 4. (w/ PS)

INSTALL PS BELT (See page [MA-6](#))

### 5. REFILL COOLANT

(See page [EG1-225](#))

EG1U6-01

EG1U6-01

# THERMOSTAT

EG1U7-01

## THERMOSTAT REMOVAL

### 1. DRAIN COOLANT



### 2. DISCONNECT FOLLOWING HOSES:

- (a) Vacuum hoses
- (b) PCV hose
- (c) (with A/C)  
Idle-up hose

### 3. DISCONNECT RADIATOR INLET HOSE

### 4. REMOVE THERMOSTAT

- (a) Remove the two bolts and water outlet from the intake manifold.
- (b) Remove the thermostat with the gasket.
- (c) Remove the gasket from the thermostat.

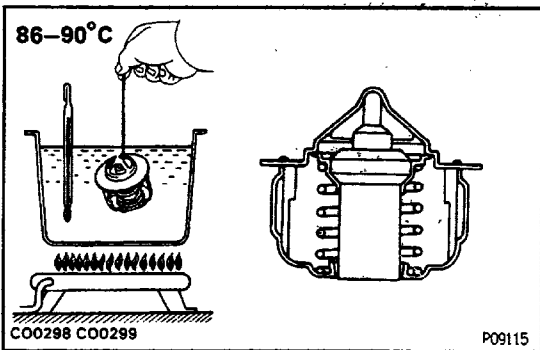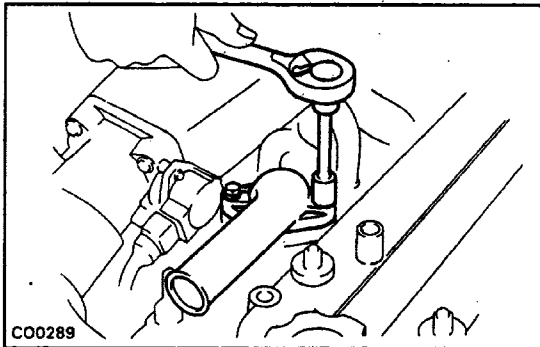

## THERMOSTAT INSPECTION

EG1U8-01

HINT: The thermostat is numbered according to the valve opening temperature.

- (a) Immerse the thermostat in water and heat the water gradually.
- (b) Check the valve opening temperature and valve lift.

### Valve opening temperature:


**86-90°C (187-184°F)**

### Valve lift:

**8 mm (0.31 in.) or more at 100°C (212°F)**

If the valve opening temperature and valve lift are not within specifications, replace the thermostat.

- (c) Check that the valve spring is tight when the thermostat is fully closed, and replace if it is not tight.

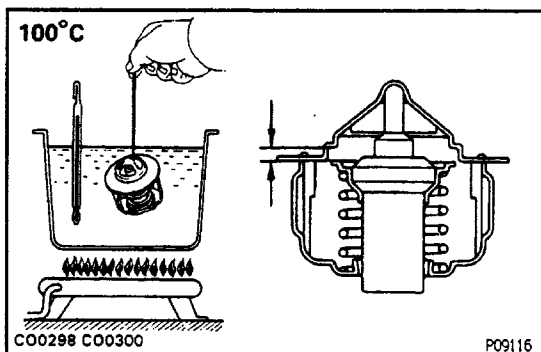

## THERMOSTAT INSTALLATION

EG1U9-01

### 1. PLACE THERMOSTAT IN INTAKE MANIFOLD

- (a) Place a new gasket to the thermostat.
- (b) Install the thermostat to the intake manifold.
- (c) Install the water outlet with the two bolts.

**Torque: 19 N·m (195 kgf-cm, 14 ft-lbf)**

### 2. CONNECT RADIATOR INLET HOSE

### 3. CONNECT FOLLOWING HOSES:

(a) (with A/C)

Idle-up hose

(b) PCV hose

(c) Vacuum hoses

#### 4. FILL WITH ,COOLANT

#### 5. START ENGINE AND CHECK FOR LEAKS


## RADIATOR

EG1UA–01

### RADIATOR CLEANING

Using water or a steam cleaner, remove mud and dirt from the radiator core.

**NOTICE:** If using a high-pressure type cleaner, be careful not to deform the fins of the radiator core. For example, keep a distance of more than 40–50 cm (15.75–19.69 in.) between the radiator core and cleaner nozzle when the cleaner nozzle pressure is 2.942–3.432 kPa (30–35 kgf/cm<sup>2</sup>, 427–498 psi).

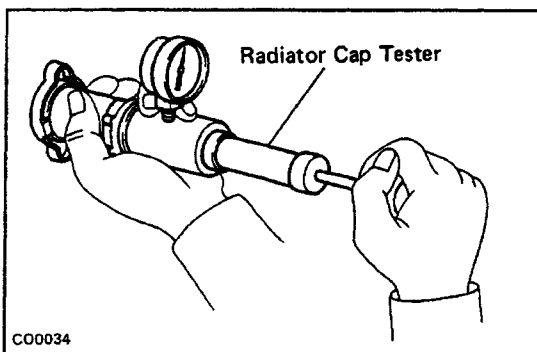

EG1UB–01


## RADIATOR INSPECTION

### 1. CHECK RADIATOR CAP

Using radiator cap tester, pump the tester until relief valve opens. Check that the valve opens between 174 kPa (0.75 kgf/cm<sup>2</sup>, 10.7 psi) and 103 kPa (1.05 kgf/cm<sup>2</sup>, 14.9 psi).

Check that pressure gauge does not drop rapidly when pressure on cap is below 59 kPa (0.6 kgf/cm<sup>2</sup>, 8.5 psi).

If either check is not within limit, replace the radiator cap.

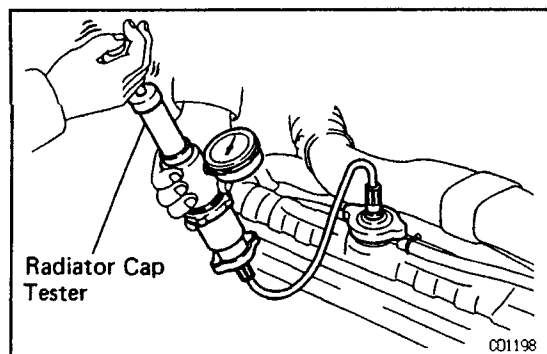


## 2. CHECK COOLING SYSTEM FOR LEAKS

- (a) Fill the radiator with coolant and attach a radiator cap tester.
  - (b) Warm up the engine.
  - (c) Pump it to 118 kPa (1.2 kgf/cm<sup>2</sup>, 17.1 psi), and check that the pressure does not drop.
- If the pressure drops, check for leaks from the hoses, radiator or water pump. If no external leaks are found, check the heater core, block and intake manifold.

## RADIATOR REMOVAL


EG1UC-01

1. DRAIN COOLANT
2. REMOVE ENGINE UNDER COVER
3. REMOVE AIR INTAKE CONNECTOR

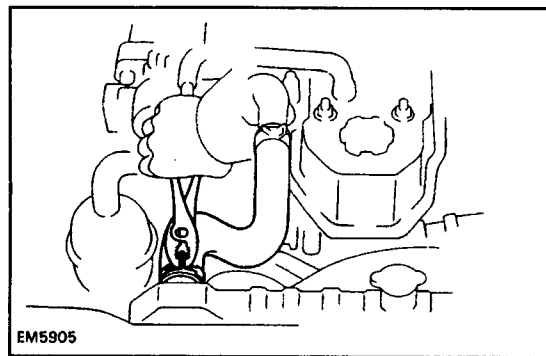

## 4. REMOVE RADIATOR

- (a) Disconnect the reservoir hose.
- (b) Remove the radiator hoses.

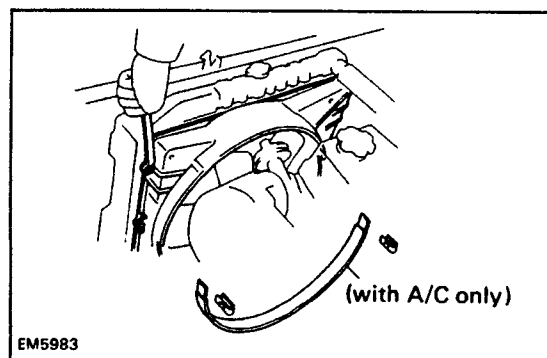

(c) (with A/C)

Remove the No. 2 fan shroud.

(d) Remove the No. 1 fan shroud.

(e) (A/T)

Disconnect the oil cooler hoses.

### HINT:

- Be careful as some oil will leak out. Catch it in a suitable container.
- Plug the hose to prevent oil from escaping.
- (f) Remove the four bolts and radiator.



# SERVICE SPECIFICATIONS

EG1UD–01

## SERVICE DATA

Radiator	Relief valve opening pressure	STD Limit	74 – 103 kPa 0.75 – 1.05 kgf/cm <sup>2</sup> 10.7 – 14.9 psi 59 kPa 0.6 kgf/cm <sup>2</sup> 8.5 psi
Thermostat	Valve opening temperature Starts to open at Fully opens at Valve opening travel		88°C 190°F 100°C 212°F 8 mm 0.30 in.

EG1UE–01

## TORQUE SPECIFICATIONS



Part tightened	N·m	kgf·cm	ft·lbf
Water Outlet x Intake Manifold	13	130	9

# LUBRICATION SYSTEM

## DESCRIPTION

A fully pressurized, fully filtered lubrication system is used in this engine.

EG1UF-01

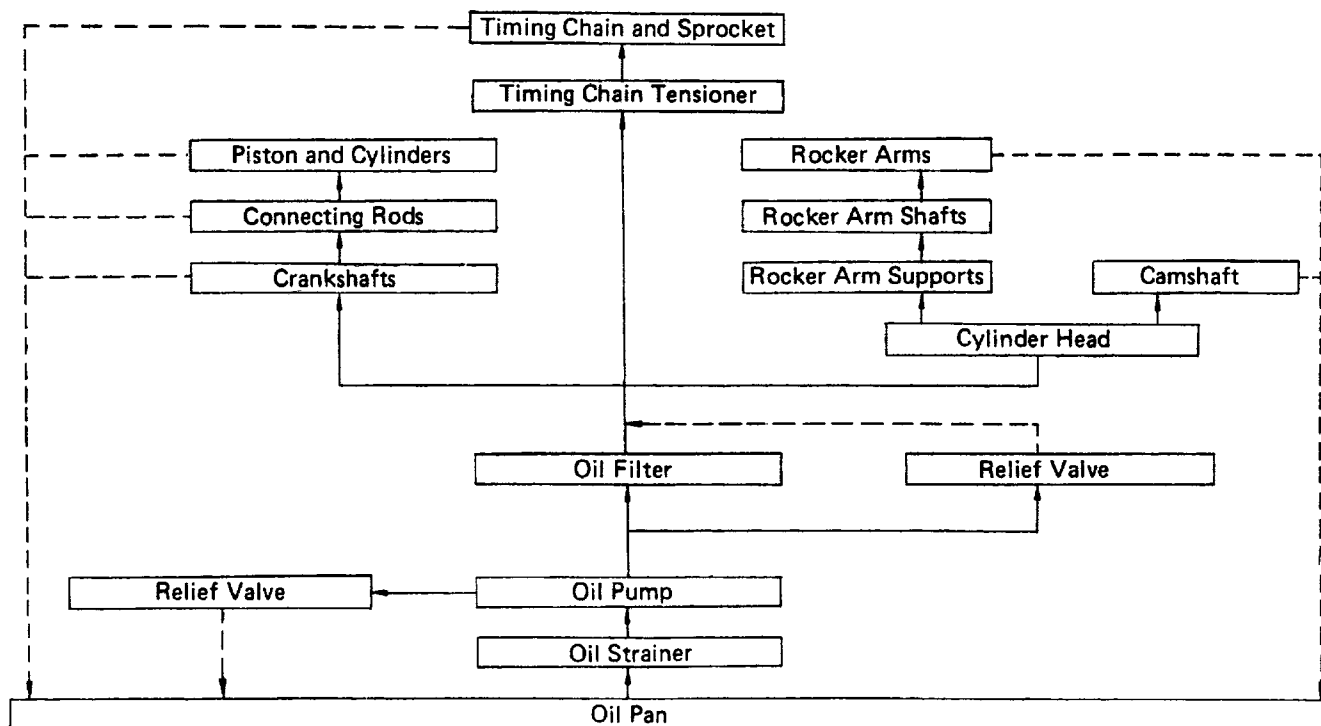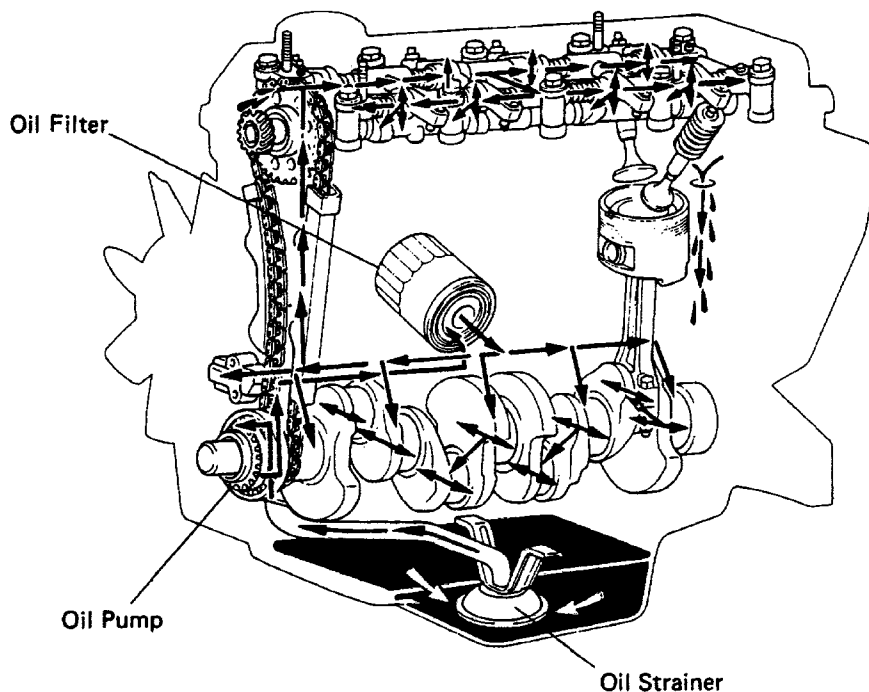

A pressure feeding lubrication system has been adopted to supply oil to the moving parts of this engine. The lubrication system consists of an oil pan, oil pump and oil filter, etc. The oil circuit is shown in the illustration at the top of the previous page. Oil—from the oil pan is pumped up by the oil pump. After it passes through the oil filter, it is fed through the various —oil holes in the crankshaft and cylinder block. After passing through the cylinder block and performing its lubricating function, the oil is returned by gravity to the oil pan. A dipstick on the side of the oil pump body is provided to check the oil level.

### **OIL PUMP**

The oil pumps up oil from the oil pan and sends it under pressure to the various parts of the engine. An oil strainer is mounted in front of the inlet to the oil —pump to remove impurities. The oil pump itself is an internal gear pump, which uses a drive gear and driven gear inside the pump body. When the drive gear rotates, the driven gear rotates in the same direction. When both gears rotate, the space between the two gears changes. Oil is draw in when this space widens, and is discharged when the space becomes narrow.

### **OIL PRESSURE REGULATOR (RELIEF VALVE)**

At high engine speeds, the oil pump supplies more oil to each part than is necessary. For this reason, an oil pressure regulator which works to prevent an oversupply oil is installed on the oil pump. During normal oil supply, a coil spring and valve keep the by—pass closed, but when too much oil is being supplied, the pressures become extremely high, over powering the force of the spring and opening the valve. This allows the excess oil to flow through the relief valve and return to the oil pan.





### **OIL FILTER**

The oil filter is a full flow type with— a paper filter element and built—in relief valve. Particles of metal from wear, airborne dirt, carbon and other impurities can get in the oil during use and could cause accelerated wear or seizing if allowed to circulate through the engine. The oil filter, integrated into the oil line, removes these impurities as the oil passes through it. The filter is mounted outside the engine to simplify replacement of the filter element. A .relief valve is also included ahead of the filter element to relieve the high oil pressure in case the filter element becomes clogged with impurities. The relief valve opens when the oil pressure overpowers the force of the spring. Oil passing through the relief valve by—passes the oil filter and flows directly into the main oil hole in the engine.

## PREPARATION




EG14U-06

### SST (SPECIAL SERVICE TOOLS)

	09032-00100 Oil Pan Seal Cutter	
	09223-50010 Crankshaft Front oil Seal Replacer	Crankshaft front oil seal
	09228-07500 Oil Filter Wrench	
	09213-36020 Timing Gear Remover	

EG14V-06

### RECOMMENDED TOOLS

	09090-04000 Engine Sting Device	For suspending engine
	09200-00010 Engine Adjust Kit	
	09905-00013 Snap Ring Pliers	

EG14W-06

### EQUIPMENT

Oil pressure gauge	
Torque wrench	


### LUBRICANT

EG1UG-01

Item	Capacity			Classification
	Liters	US qts	Imp. qts	
Engine oil				API grade SG Energy-Conserving II multigrade and recommended viscosity oil
Drain and refill				
w/o Oil filter change	3.8	4.0	3.3	
w/Oil filter change	4.3	4.5	3.8	
Dry fill	4.8	5.1	4.2	

## SSM (SPECIAL SERVICE MATERIALS)

08826–00080 Seal packing or equivalent	Oil pan
--	---------

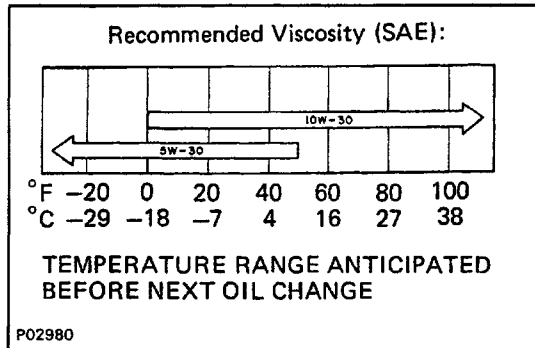

## OIL PRESSURE CHECK


### 1. CHECK OIL QUALITY

EG1UH–01

Check the oil for deterioration, entry of water, discoloring or thinning.


If oil quality is poor, replace.

**Oil grade: API grade SG Energy–Conserving II multigrade engine oil. Recommended viscosity is as shown.**

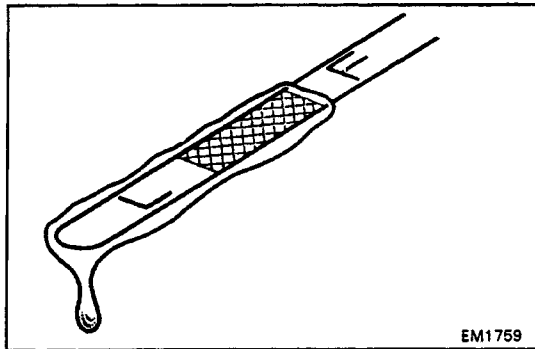

### 2. CHECK OIL LEVEL

The oil level should be between the "L" and "F" marks on the level gauge. If low, check for leakage and add oil up to the "F" mark.

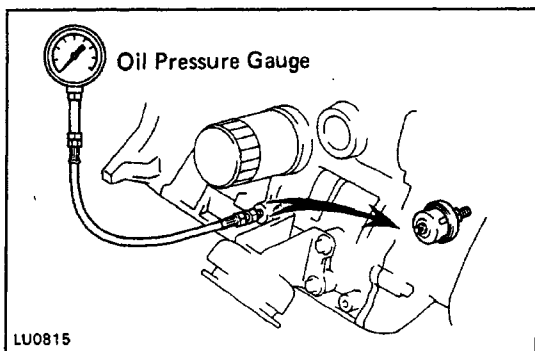

### 3. REMOVE OIL PRESSURE SENDER GAUGE

### 4. INSTALL OIL PRESSURE GAUGE

### 5. START ENGINE

Start the engine and warm it up to normal operating temperature.

### 6. MEASURE OIL PRESSURE

Oil pressure:

At idle speed

29 kPa (0.3 kgf/cm<sup>2</sup>, 4.3 psi) or more

At 3,000 rpm

245 – 490 kPa (2.5 – 5.0 kgf/cm<sup>2</sup>, 36 – 71 psi)

HINT: Check for oil leakage after reinstalling the oil pressure sender gauge.


# OIL AND FILTER REPLACEMENT

## CAUTION:

- Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer. Adequate means of skin protection and washing facilities should be provided.
- Care should be taken, therefore, when changing engine oil, to minimize the frequency and length of time your skin is exposed to used engine oil. Protective clothing and gloves, that cannot be penetrated by oil, should be worn. The skin should be thoroughly washed with soap and water, or use waterless hand cleaner, to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- In order to preserve the environment, used oil and used oil filters must be disposed of only at designated disposal sites.

### 1. DRAIN ENGINE OIL

- (a) Remove the oil filter cap.
- (b) Remove the oil dipstick.
- (c) Remove the oil drain plug and drain the oil into a container.

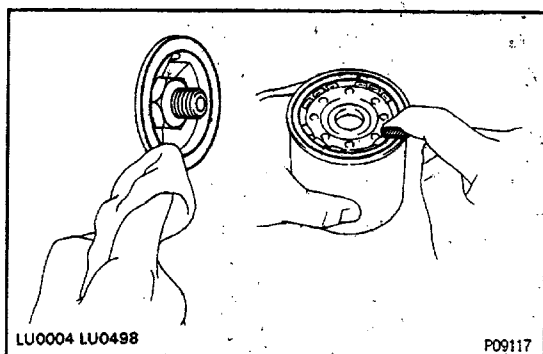


### 2. REPLACE OIL FILTER

- (a) Using SST, remove the oil filter (located on right side of the engine block).

SST 09228-07500

- (b) Clean the filter contact surface on the filter mounting.
- (c) Lubricate the filter rubber gasket with engine oil.

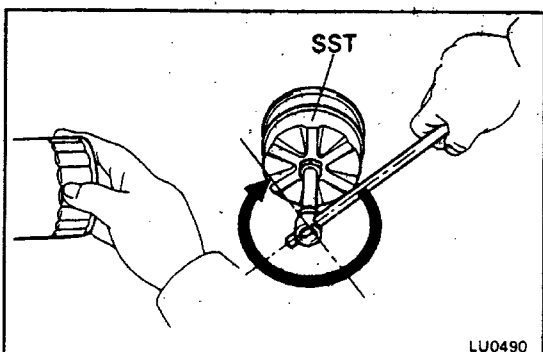


- (d) Tighten the filter by hand until the gasket contacts the seat of the filter mounting. Then using SST, give it an additional 3/4 turn to seat the filter.

SST 09228-07500

### 3. FILL WITH ENGINE OIL

- (a) Clean and install the oil drain plug with a new gasket.
- (b) Fill the engine with new oil, API grade SG multigrade, fuel efficient and recommended viscosity oil.

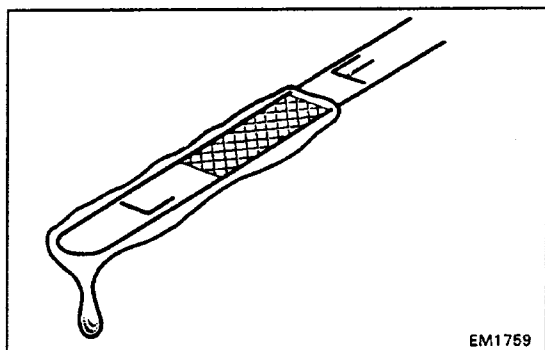
**Oil capacity:****Drain and refill****w/o Oil filter change****3.8 liters (4.0 US qts, 3.3 Imp. qts)****w/ Oil filter change****4.3 liters (4.5 US qts, 3.8 Imp. qts)****Dry fill****4.8 liters (5.1 US qts, 4.2 Imp. qts)****4. START ENGINE AND CHECK FOR LEAKS****5. RECHECK ENGINE OIL LEVEL**

Recheck the engine oil level and refill as necessary.

HINT: Insert the oil dipstick with the curved tip pointed toward the engine.

## OIL PUMP COMPONENTS

EG1UK-01

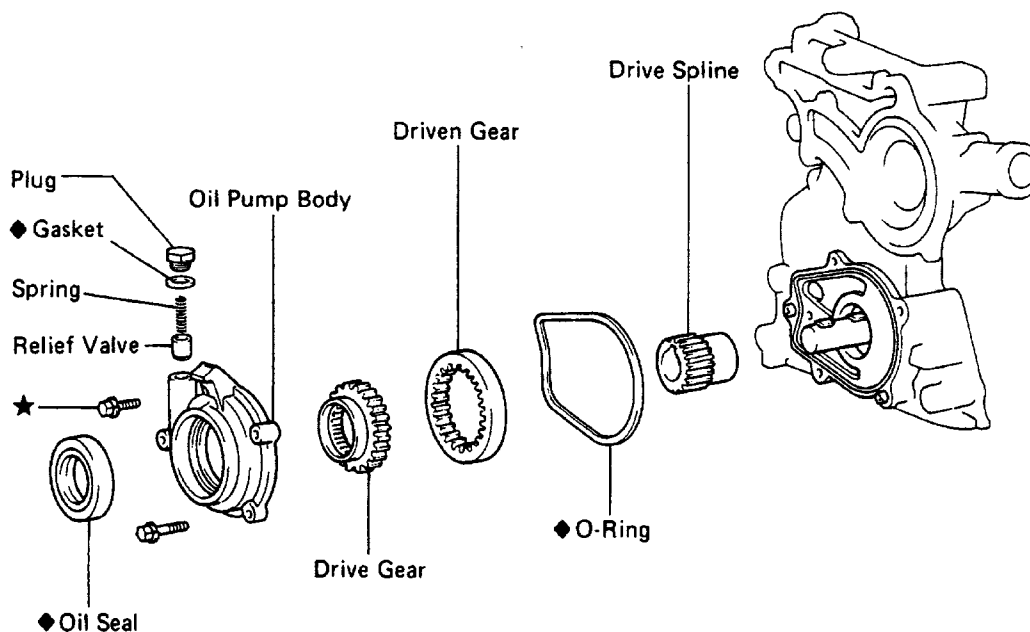

LU0687

- ◆ Non-reusable part
- ★ Precoated part

EG1UL-01

## OIL PUMP REMOVAL

HINT: When repairing the oil pump, the oil pan and strainer should be removed and cleaned.

### 1. REMOVE OIL PAN

(See steps 3 and 4 on page [EG1-39](#))

### 2. REMOVE OIL STRAINER

Remove the four bolts holding the oil strainer.

### 3. REMOVE DRIVE BELTS


### 4. REMOVE CRANKSHAFT PULLEY

(See steps 4 on page [EG1-40](#))

### 5. (with A/C)


REMOVE A/C COMPRESSOR AND BRACKET



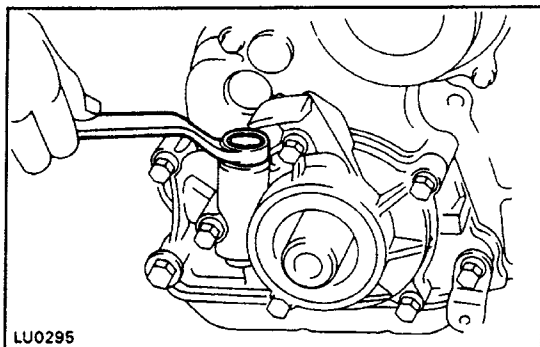


## 6. REMOVE OIL PUMP ASSEMBLY

(a) Loosen the oil pump relief valve plug.

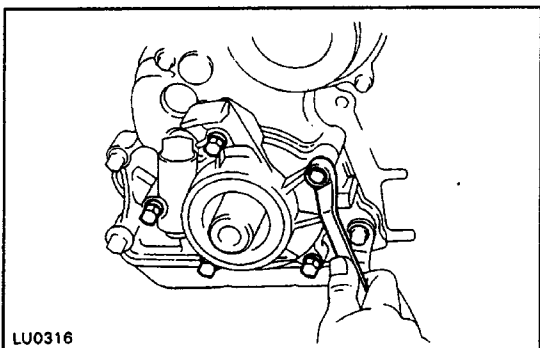

(b) Remove the five bolts, the oil pump assembly and O-ring.

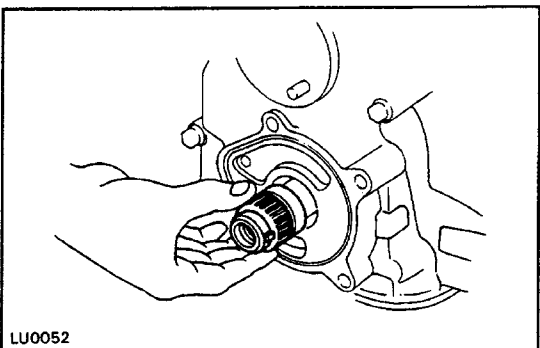


## 7. REMOVE OIL PUMP DRIVE SPLINE

HINT: If the oil pump drive spline cannot be removed by hand, use SST to remove the pump drive spline and crankshaft together.

(See page [EG1-42](#))

SST 09213-36020

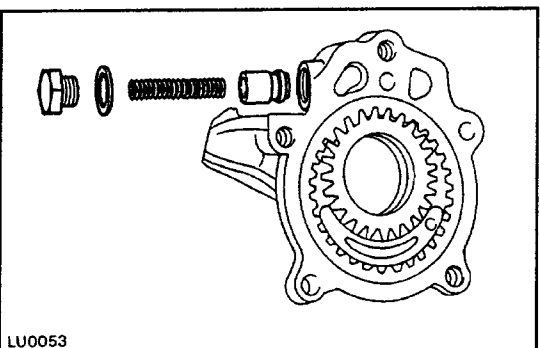


## OIL PUMP DISASSEMBLY

### 1. REMOVE RELIEF VALVE

Unscrew the relief valve plug and gasket, and remove the spring and the relief valve.

### 2. REMOVE DRIVEN AND DRIVE GEARS

EG1UM-01

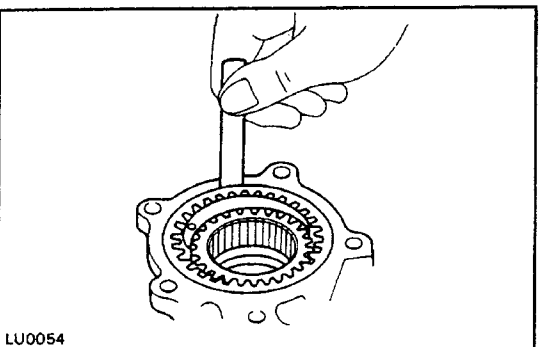

## OIL PUMP INSPECTION

### 1. MEASURE BODY CLEARANCE

Using a thickness gauge, measure the clearance between the driven gear and body.


**Standard clearance: 0.09–0.15 mm**

**(0.0035–0.0059 in.)**

**Maximum clearance: 0.2 mm (0.008 in.)**

EG1UM-01

If the clearance is greater than maximum, replace the gear and/or body.

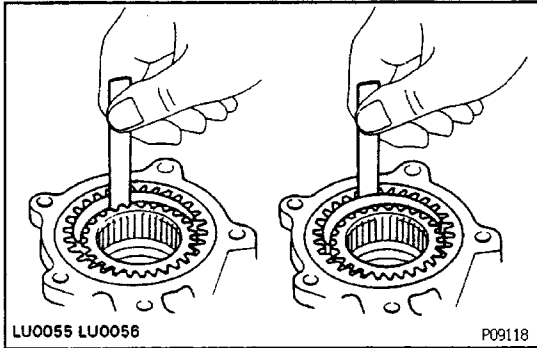

## 2. MEASURE TIP CLEARANCE

Using a thickness gauge, measure the clearance between both of the gear tips and crescent.


**Standard clearance:**

**Driven 0.15–0.21 mm (0.0059–0.0083 in.)**

**Drive 0.22–0.25 mm (0.0087–0.0098 in.)**

**Maximum clearance: 0.3 mm (0.012 in.)**

If the clearance is greater than maximum, replace the gears and/or body.

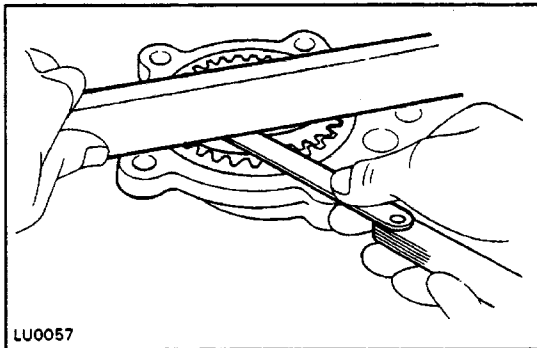

## 3. MEASURE SIDE CLEARANCE


Using a thickness gauge and flat block, measure the side clearance as shown.

**Standard clearance: 0.03–0.09 mm**

**(0.0012 – 0.0035 in.)**

**Maximum clearance: 0.15 mm (0.006 in.)**

If the clearance is greater than maximum, replace the gears and/or body.

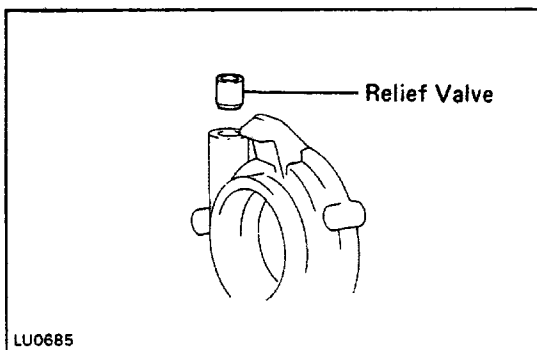


## PRESSURE REGULATOR INSPECTION

EG1UP-01

Coat the valve piston with engine oil and check that it falls smoothly into the valve hole by its own weight.

If the valve does not fall smoothly, replace the valve and/or oil pump assembly.

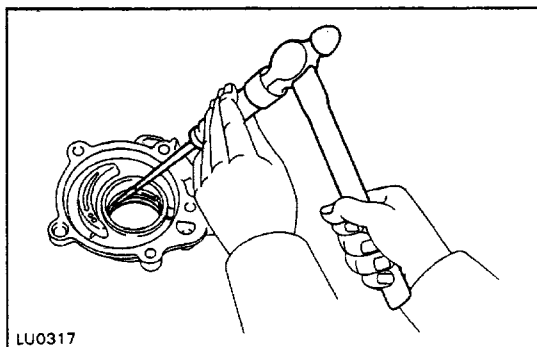


## FRONT OIL SEAL REPLACEMENT

EG1UQ-01

### 1. REMOVE OIL SEAL


(a) Remove the drive and driven gears.

(6) Using a screwdriver, remove the oil seal.

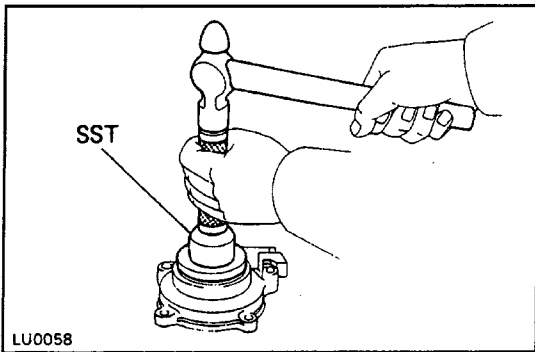

## 2. INSTALL OIL SEAL


- (a) Apply MP grease to a new oil seal lip.
  - (b) Using SST, drive in the new oil seal.
- SST 09223-50010

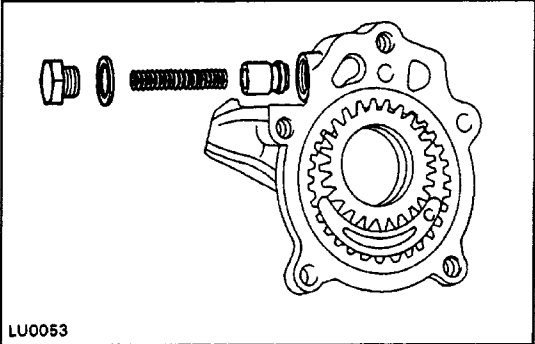

## OIL PUMP ASSEMBLY.

(See page [EG1-238](#))

- (a) Install the relief valve and spring in the body, and screw on the relief valve plug with a new gasket.
- (b) Insert the drive and driven gears into the pump body.

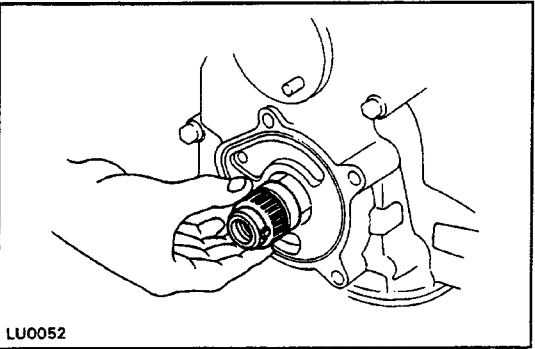

## OIL PUMP INSTALLATION

(See page [EG1-238](#))


### 1. INSTALL OIL PUMP DRIVE SPLINE AND O-RING

- (a) Slide the pump drive spline onto the crankshaft.
- HINT: If the oil pump drive spline cannot be installed by hand, use SST. (See page [EG1-43](#))
- (b) Place the O-ring into the groove.

### 2. INSTALL OIL PUMP

- (a) Clean the threads of the upper set bolt and timing chain cover bolt hole of any sealer, oil or foreign particles.


Remove any oil with kerosene or gasoline.

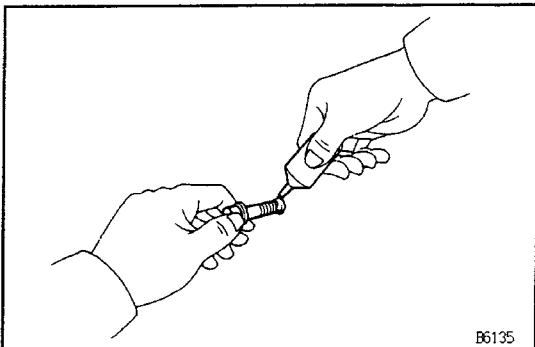

- (b) Apply sealant to 2 or 3 threads of the bolt end.

**Sealant: Part No. 08833-00070, THREE BOND 1324 or equivalent**

HINT: This adhesive will not harden while exposed to air. It will act as a sealant or binding agent only when applied to threads, etc. and air is cut off.

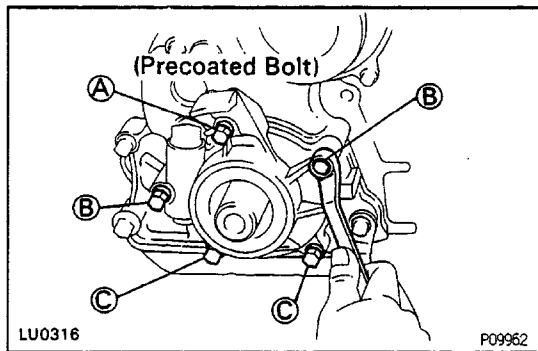

(c) Torque the five bolts.

**Torque: (A) 25 N-m (250 kgf-cm, 18 ft-lbf)**

**(B) 19 N-m (195 kgf-cm, 14 ft-lbf)**

**(C) 13 N-m (130 kgf-cm, 9 ft-lbf)**

(d) Torque the relief valve plug.

**Torque: 37 N-m (375 kgf-cm, 27 ft-lbf)**

### **3. INSTALL CRANKSHAFT PULLEY**

(See step 8 on page [EG1-44](#))

### **4. INSTALL AND ADJUST DRIVE BELT**

(See page [MA-6](#))

### **5. INSTALL OIL STRAINER**

(See step 2 on page [EG1-70](#))

### **6. INSTALL OIL PAN**

(See step 13 on page [EG1-44](#))

# SERVICE SPECIFICATIONS

EG1UT–01

## SERVICE DATA

Oil pressure (normal operating temperature) at Idle speed at 3,000 rpm			29 kPa (0.3 kgf/cm <sup>2</sup> , 4.3 psi) or more 245 – 490 kPa    2.5 – 5.0 kgf/cm <sup>2</sup> 36 – 71 psi		
Oil pump	Body clearance	STD	0.09 – 0.15 mm	0.0035 – 0.0059 in.	
		Limit	0.2 mm	0.008 in.	
	Tip clearance				
	Drive gear to crescent	STD	0.15 – 0.21 mm	0.0059 – 0.0083 in.	
		Limit	0.3 mm	0.012 in.	
	Drive gear to crescent	STD	0.22 – 0.25 mm	0.0087 – 0.0098 in.	
		Limit	0.3 mm	0.012 in.	
	Side clearance	STD	0.03 – 0.09 mm	0.0012 – 0.0035 in.	
		Limit	0.15 mm	0.0059 in.	
	Relief valve operating pressure		441 kPa	4.5 kgf/cm <sup>2</sup>	64 psi

V01957

EG1UU–01

## TORQUE SPECIFICATIONS

Part tightened	N·m	kgf·cm	ft·lbf
Cylinder Block x Rear Oil Seal Retainer	18	180	13
Cylinder Block x Oil Cooler Relief Valve	69	700	51
Cylinder Block x Oil Strainer	13	130	9
Cylinder Block x Oil Pan	13	130	9
Oil pan x Drain Plug	25	250	18