

# MITSUBISHI

# ENGINE F9Q

## WORKSHOP MANUAL

### FOREWORD

This Workshop Manual contains procedures for removal, disassembly, inspection, adjustment, reassembly and installation, etc. for service mechanics.

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

ENGINE ..... **11A**

#### FILING INSTRUCTION

Please keep these manual pages in the binder No. BN940001.

File these pages according to the signs "Added", "Revised" and "Deleted" on the "List of effective pages" which are interpreted below.

**Added:**

File the pages with this sign additionally in your manual.

**Revised, Deleted:**

Replace the existing pages with the corresponding pages with this sign.

Missing sheets will be supplied upon request.

 MITSUBISHI MOTORS CORPORATION

# INTRODUCTION

## EXPLANATION OF MANUAL CONTENTS

### Maintenance and Servicing Procedures

- (1) A diagram of the component parts is provided near the front of each section in order to give the reader a better understanding of the installed condition of component parts.
  - (2) The numbers provided within the diagram indicate the sequence for maintenance and servicing procedures.  
**N** : Indicates a non-reusable part.  
The tightening torque is provided where applicable.
- Removal steps:  
The part designation number corresponds to the number in the illustration to indicate removal steps.
  - Disassembly steps:  
The part designation number corresponds to the number in the illustration to indicate disassembly steps.
  - Installation steps:  
Specified in case installation is impossible in reverse order of removal steps. Omitted if installation is possible in reverse order of removal steps.
  - Reassembly steps:  
Specified in case reassembly is impossible in reverse order of disassembly steps. Omitted if reassembly is possible in reverse order of disassembly steps.

### Classification of Major Maintenance/Service Points

When there are major points relative to maintenance and servicing procedures (such as essential maintenance and service points, maintenance and service standard values, information regarding the use of special tools, etc.), these are arranged together as major maintenance and service points and explained in detail.

- ◀A▶ : Indicates that there are essential points for removal or disassembly.  
▶A◀ : Indicates that there are essential points for installation or reassembly.

### Symbols for Lubrication, Sealants and Adhesives

Information concerning the locations for lubrication and for application of sealants and adhesives is provided, by using symbols, in the diagram of component parts, or on the page following the component parts page, and explained.

-  : Grease  
(multipurpose grease unless there is a brand or type specified)
-  : Sealant or adhesive
-  : Brake fluid, automatic transmission fluid or air conditioner compressor oil
-  : Engine oil or gear oil

# INTRODUCTION

Indicates the group title.

Indicates the section title.

Indicates the group number.


Indicates the section number.

Indicates the page number.

F9Q ENGINE – Camshaft and Vacuum Pump

11A-10-1

## 10. CAMSHAFT AND VACUUM PUMP REMOVAL AND INSTALLATION

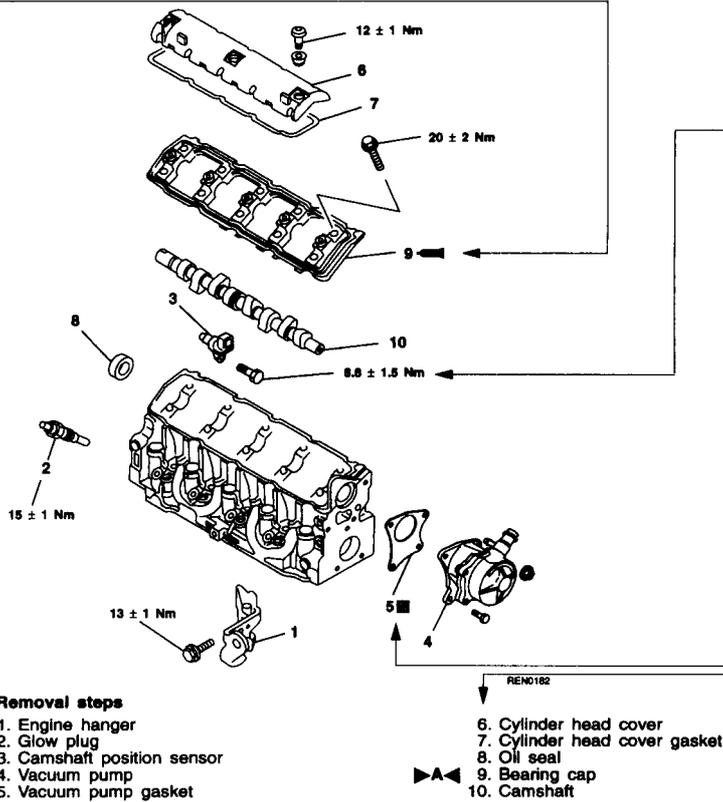


Denotes tightening torque.

Denotes non-reusable part.

This number corresponds to the number appearing in "Removal steps", "Disassembly steps", "Installation steps" or "Reassembly steps".

Operating procedures, cautions, etc. on removal, installation, disassembly and reassembly are described.

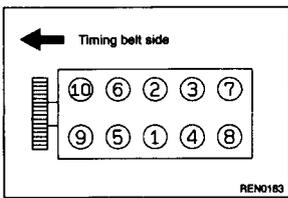

© Mitsubishi Motors Corporation Jun. 2000

PWEE0001

Issue date

Publication number-Revision code

---

# ENGINE

# F9Q SERIES

## CONTENTS

GENERAL INFORMATION .....	11A-0-3
1. SPECIFICATIONS .....	11A-1-1
SERVICE SPECIFICATIONS .....	11A-1-1
TORQUE SPECIFICATIONS .....	11A-1-2
2. SPECIAL TOOLS .....	11A-2-1
3. CRANKSHAFT PULLEY .....	11A-3-1
4. TIMING BELT .....	11A-4-1
5. OIL SEPARATOR AND OIL RETURN PIPE .....	11A-5-1
6. INJECTION PUMP AND FUEL INJECTOR .....	11A-6-1
7. VACUUM HOSE .....	11A-7-1
8. INTAKE AND EXHAUST .....	11A-8-1
9. WATER PUMP AND WATER PIPE .....	11A-9-1
10. CAMSHAFT AND VACUUM PUMP .....	11A-10-1
11. CYLINDER HEAD .....	11A-11-1
12. OIL PAN AND OIL PUMP .....	11A-12-1
13. PISTON .....	11A-13-1
14. CYLINDER BLOCK .....	11A-14-1

**NOTES**

**GENERAL INFORMATION**

Description		Specification
Type		F9Q1, F9Q2
Number and arrangement of cylinders		4 in-line
Total displacement		1870 cm <sup>3</sup>
Cylinder bore × Stroke		83 × 93
Compression ratio		19
Valve mechanism		Single overhead camshaft
Number of valve	Intake	4
	Exhaust	4
Valve timing	Intake opening	BTDC 3°
	Intake closing	ABDC 21°
	Exhaust opening	BBDC 46°
	Exhaust closing	BTDC 6°
Turbocharger		Exhaust gas turbocharger
Fuel injection system		Direct injection system (common rail fuel injection)

# 1. SPECIFICATIONS

## SERVICE SPECIFICATIONS









Item		Standard	Limit
<b>Timing belt</b>			
Timing belt tension Hz		90 ± 15	–
<b>Camshaft and vacuum pump</b>			
End play mm		0.05 – 0.13	–
<b>Cylinder head</b>			
Piston protrusion above cylinder block mm		0.653 – 0.786	–
Valve stem diameter mm		6.98 – 6.99	–
Valve seat angle		45°	–
Valve projection mm		–0.03 – 0.21	–
Cylinder head overall height mm		161.9 – 162.1	–
Flatness of cylinder head gasket surface mm		0.05	–
Valve spring free height mm		45.8	–
Valve guide inner diameter mm		7.00 – 7.02	–
Valve guide outer diameter mm		12.03 – 12.05	–
Valve guide installation height mm		80.7 – 81.4	–
Tappet height mm		34.97 – 34.99	–
Valve clearance mm	Intake	0.20	–
	Exhaust	0.40	–
<b>Piston</b>			
Piston outer diameter mm		80	–
Piston ring thickness mm	Piston ring No.1	2.5	–
	Piston ring No.2	2.0	–
	Oil ring	3.0	–
Connecting rod length mm		139	–








## TORQUE SPECIFICATIONS

Item	Nm
<b>Crankshaft pulley</b>	
Crankshaft pulley	$20 \pm 2 + 115^\circ \pm 15^\circ$
<b>Timing belt</b>	
Timing belt cover	$9 \pm 0.9$
Tensioner pulley nut	$50 \pm 5$
Tensioner plate bolt	$10 \pm 1$
Camshaft sprocket bolt	$60 \pm 6$
<b>Oil separator and oil return pipe</b>	
Oil return pipe bolt	$12 \pm 1$
Turbocharger oil feed pipe bolt	$24 \pm 10$
Turbo nipple	$26 \pm 2$
<b>Injection pump and fuel injector</b>	
High pressure pipe nut	$25 \pm 2$
Pressure sensor	$25 \pm 0.2$
Injection rail mounting bolt	$25 \pm 2$
Injection pump pulley	$15 \pm 1 + 60^\circ \pm 10^\circ$
Injection pump bracket bolt	$62 \pm 6$
Pressure regulator	$35 \pm 5$
<b>Intake and exhaust</b>	
Engine hanger bolt	$20 \pm 2$
EGR valve bolt	$23 \pm 2$
Turbocharger nut	$24 \pm 10$
Manifold nut	$28 \pm 2$
<b>Water pump and water pipe</b>	
Water pump bolt	$10 \pm 1$
Water inlet pipe bolt	$39 \pm 3$
<b>Camshaft and vacuum pump</b>	
Engine hanger bolt	$13 \pm 1$
Glow plug	$15 \pm 1$
Camshaft position sensor screw	$8.8 \pm 1.5$
Cylinder head cover bolt	$12 \pm 1$
Bearing cap bolt	$20 \pm 2$


Item	Nm
<b>Oil pan and oil pump</b>	
Oil pump bolt	25 ± 2
Cylinder block front plate bolt	15 ± 1.5
<b>Piston</b>	
Connecting rod cap bolt	50 ± 5
<b>Cylinder block</b>	
Flywheel bolt	55 ± 5
Bearing cap bolt	65 ± 6

## 2. SPECIAL TOOLS

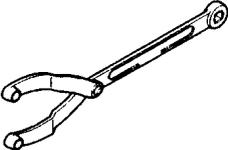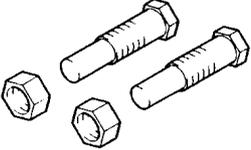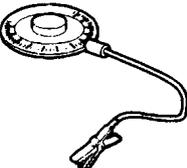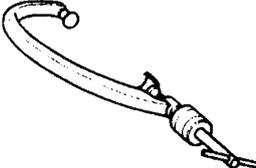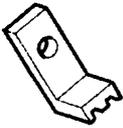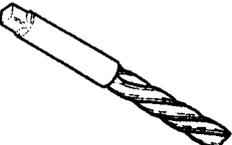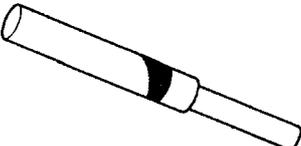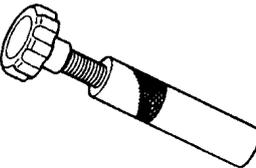Tool	Number	Name	Use
	MB990767	Camshaft sprocket holder	Removal of camshaft sprocket holder
	MD998715	Pulley holder pin	Retaining the camshaft sprocket (use together with MB990767)
	MB991614	Angle gauge	Tightening cylinder head bolts
	MB996014	Valve spring compressor	Removal of valve spring split cones
	MB996015	Flywheel stopper	Locking the flywheel
	MB996016	Reamer	Reaming valve guides
	MB996020	Valve guide remover	Pressing in valve guides
	MB996021	Valve stem seal remover	Removal of valve guide seal
	MB996024	Reamer	Reaming valve guides

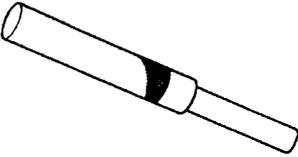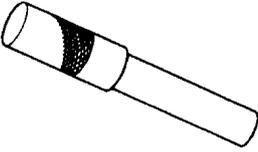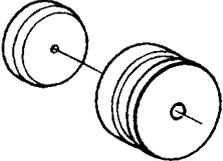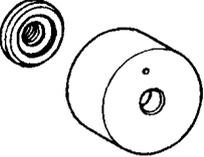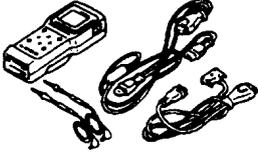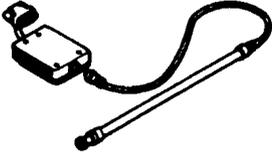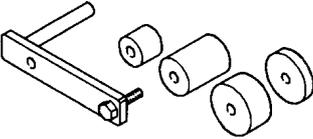Tool	Number	Name	Use
	MB996029	Valve guide installer	Pressing in valve guides
	MB996031	Valve stem seal installer	Installation of valve guide seal
	MB996038	Oil seal installer	Installation of crankshaft oil seal (flywheel end)
	MB996040	Oil seal installer	Installation of crankshaft oil seal (timing gear end)
	MB991502	MUT-II sub-assembly	<ul style="list-style-type: none"> <li>• Drive belt tension measurement</li> <li>• Fuel injection timing check and adjustment</li> <li>• Idle speed check</li> </ul>
	MB991668	Belt tension meter set	Timing belt tension measurements (Use with MUT-II)
	MB996048	Belt pretensioner	Installation of timing belt
	MB996043	Sprocket stopper	Locking the injection pump sprocket

### 3. CRANKSHAFT PULLEY REMOVAL AND INSTALLATION

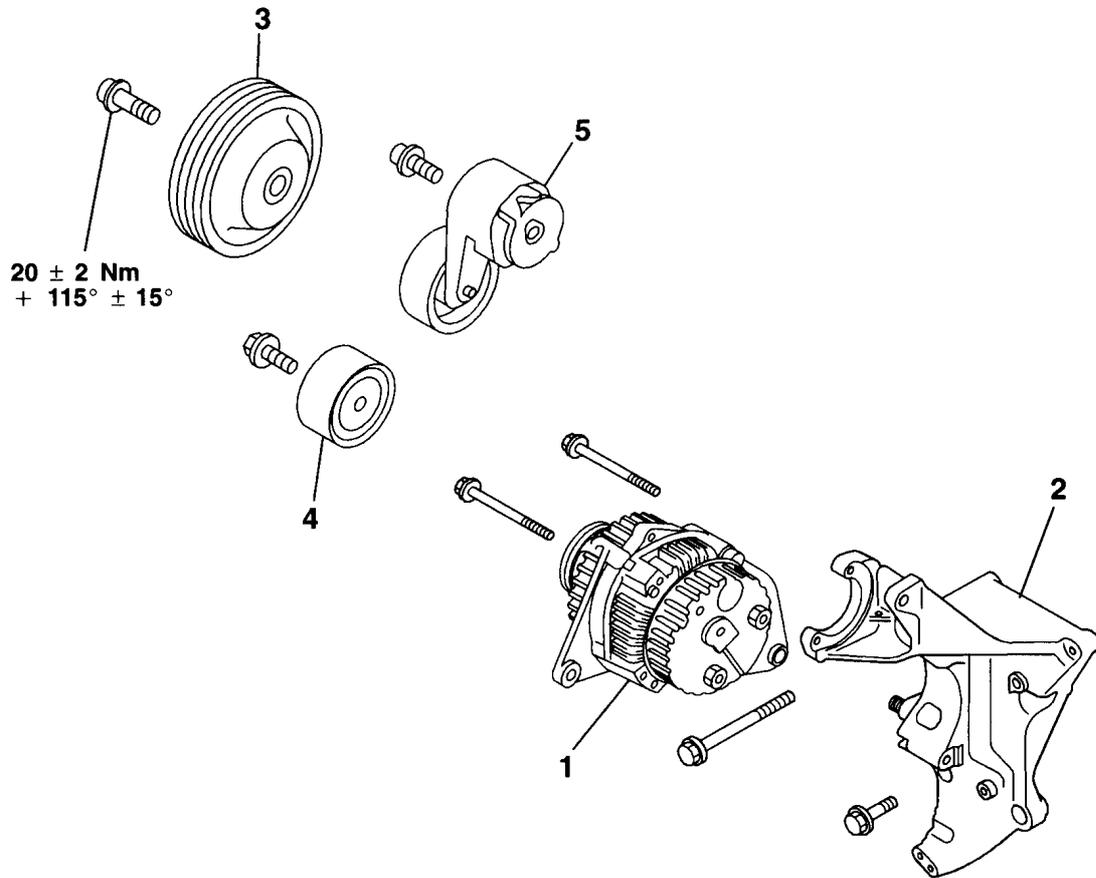


REN0165


#### Removal steps

1. Alternator
2. Bracket
3. Crankshaft pulley
4. Idler pulley
5. Auto tensioner

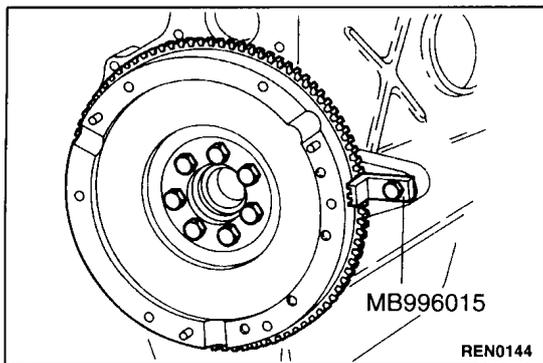

**REMOVAL SERVICE POINT****◀▶ CRANKSHAFT PULLEY REMOVAL**


- (1) Use special tool MB996015 to hold the flywheel during removal.

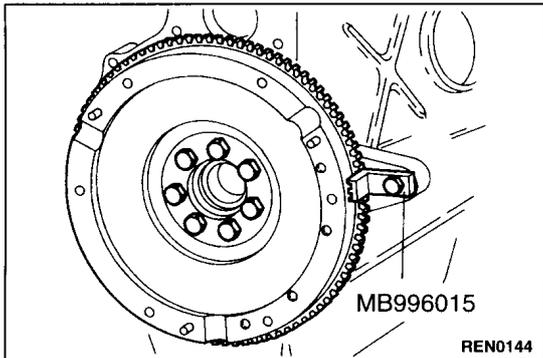**INSTALLATION SERVICE POINT****▶◀ CRANKSHAFT PULLEY INSTALLATION**

- (1) Use special tool MB996015 to hold the flywheel during installation.
- (2) Apply a coat of locking agent to the screw thread of the bolt.
- (3) Retighten the loosened bolt to 20 Nm in the tightening sequence shown.
- (4) Tighten the bolt further  $115^\circ \pm 15^\circ$  using an angle gauge.

## 4. TIMING BELT


### REMOVAL AND INSTALLATION

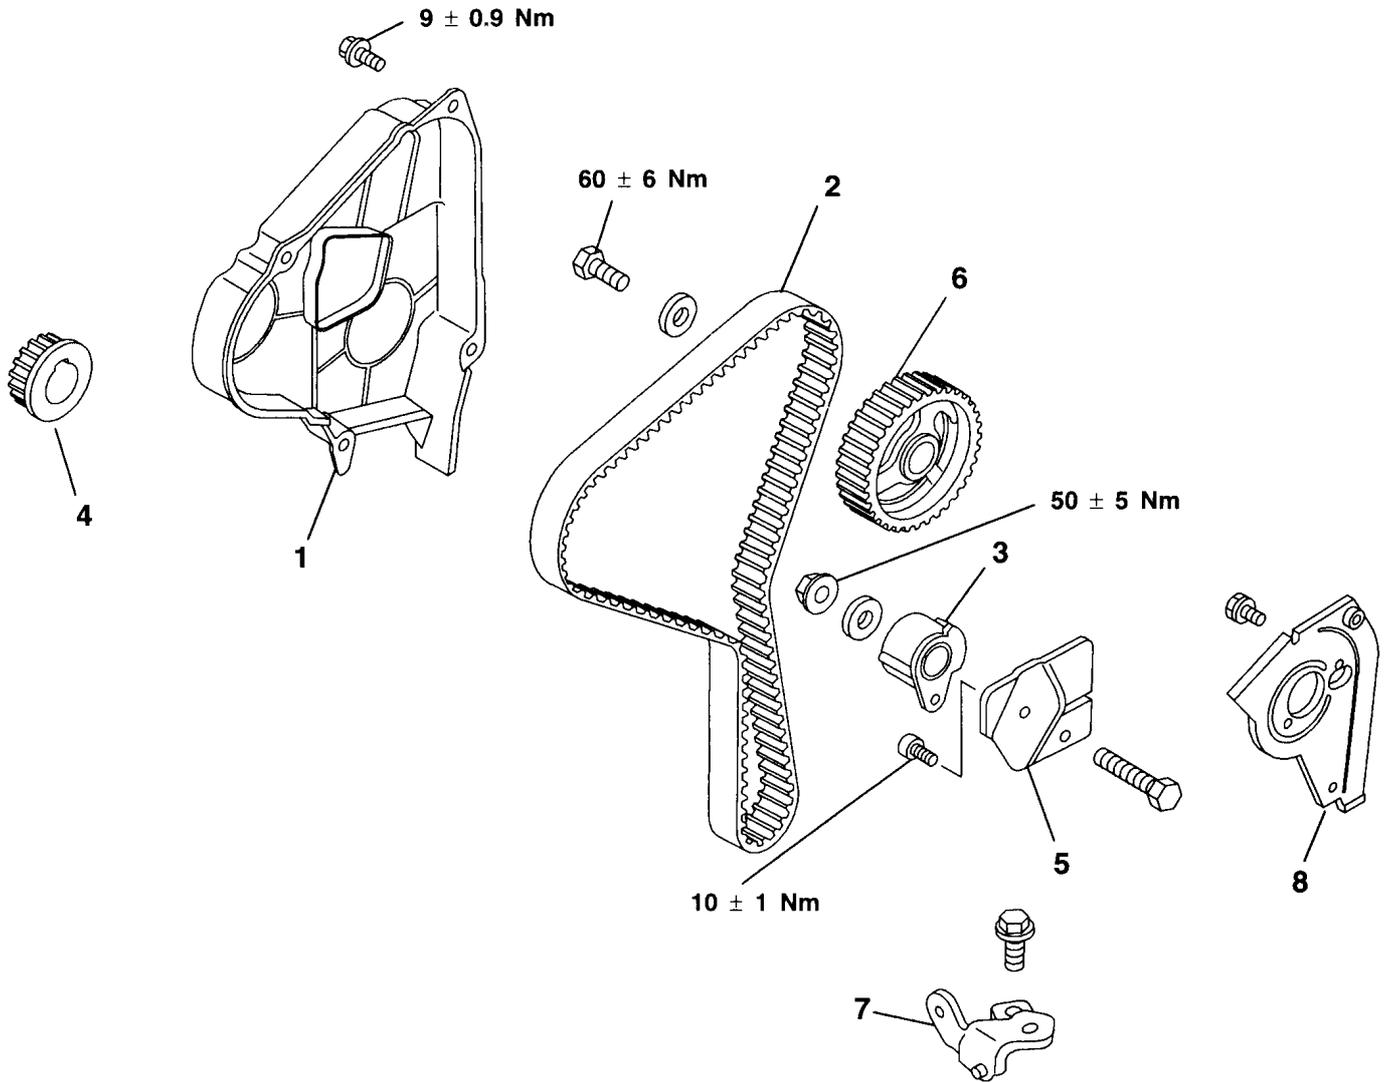


REN0166

#### Removal steps


- ◀A▶ ▶B▶
1. Timing belt cover, front
  2. Timing belt
  3. Tensioner pulley
  4. Crankshaft sprocket
  5. Tensioner plate
- ◀B▶ ▶A▶
6. Camshaft sprocket
  7. Engine cover bracket
  8. Timing belt cover, rear

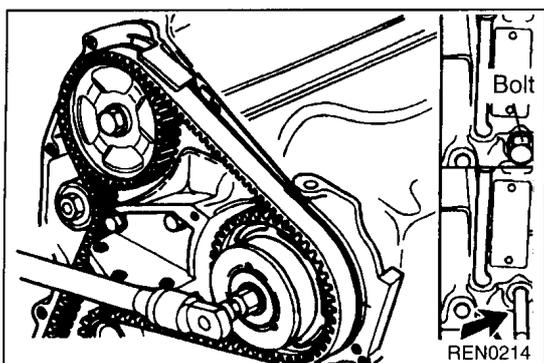**REMOVAL SERVICE POINTS****◀A▶ TIMING BELT REMOVAL**


- (1) Turn the crankshaft clockwise so that the piston of No. 1 cylinder is at TDC.
- (2) Insert an 8 mm diameter locking pin in the threaded hole of torx bolt so that it engages the recess in the crankshaft web.
- (3) Slacken the lock nut of the timing belt tensioner. Remove the timing belt.

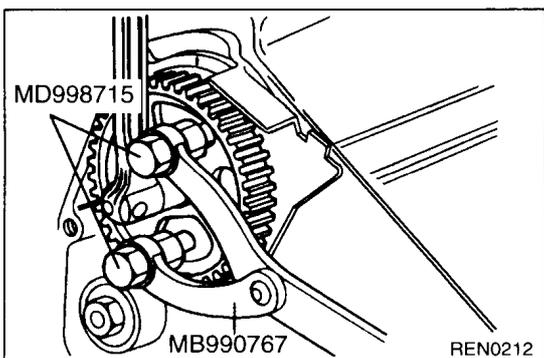**◀B▶ CAMSHAFT SPROCKET BOLT REMOVAL**


- (1) Use special tool MB990767, camshaft sprocket holder with pin MD998715 and remove the retaining bolt.

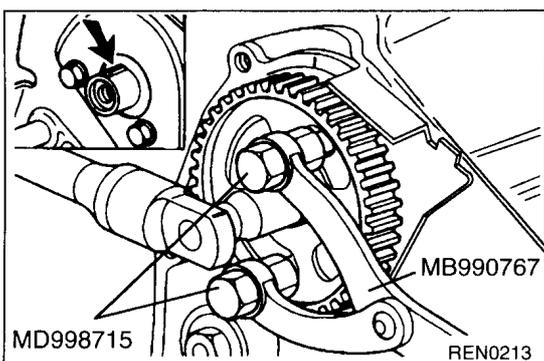**INSTALLATION SERVICE POINTS****▶A▶ CAMSHAFT SPROCKET BOLT INSTALLATION**


- (1) Smear the retaining bolt with a locking agent. Use special tool MB990767, camshaft sprocket holder with pin MD998715 to stop the sprocket turning and then tighten the camshaft sprocket retaining bolt to  $60 \pm 6$  Nm.

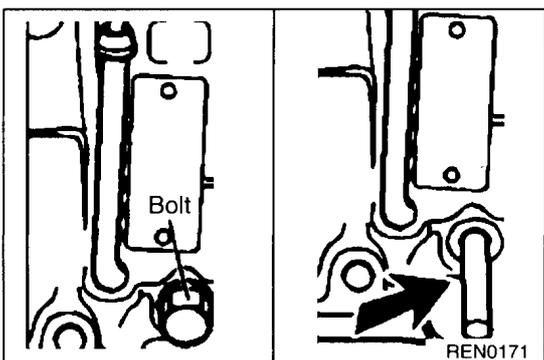**▶B▶ TIMING BELT INSTALLATION**


- (1) Turn the crankshaft to place the piston of No. 1 cylinder in the TDC on the compression stroke.
- (2) Remove the bolt at the rear right side of the cylinder block.
- (3) Insert a pin having a diameter of approx. 8 mm into the bolt hole to block the crankshaft.

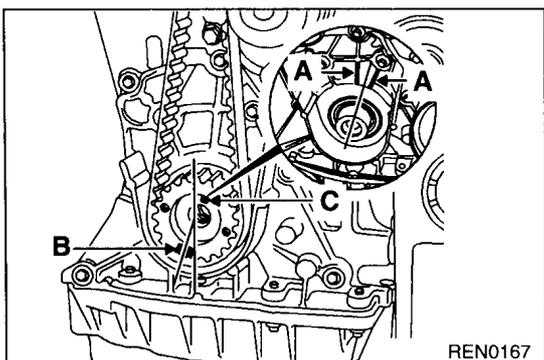


- (4) Check that the crankshaft groove C is located at the center between the two ribs A on the cylinder block front plate, and that the portion B of the crankshaft is in the illustrated position.

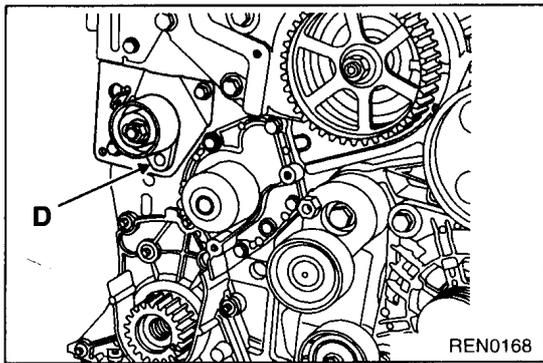

- (5) Check that the tensioner is securely positioned on the pin D.
- (6) Fit the timing belt, aligning marks on the belt with the marks on the camshaft and crankshaft sprockets. (77 teeth inserted between the two marks on the belt)

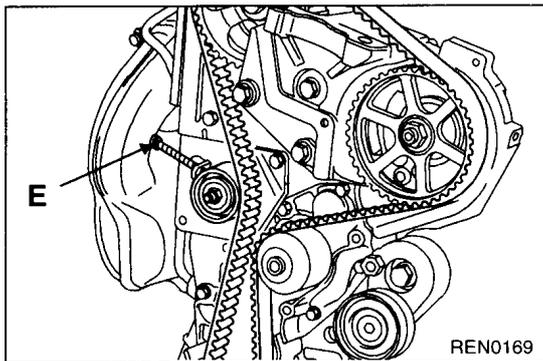


- (7) Place the tensioner pulley against the belt by tightening bolt E on the tensioner support.
- (8) Remove the pin installed in Step 3.

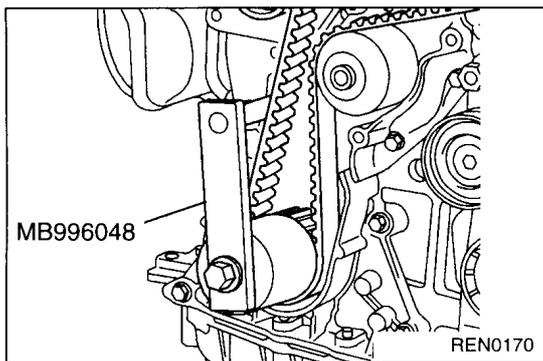

- (9) Set the special tools on the crankshaft sprocket.
- (10) Tighten the crankshaft to 11 Nm.

- (11) Connect the special tool (MB991704) to the MUT-II. Then, connect the MUT-II to the battery.
- (12) Connect the MUT-II to the diagnosis connector.
- (13) Turn the crankshaft clockwise to set the No. 1 cylinder to top dead center on the compression stroke.
- (14) Select "Belt tension measurement" from the MUT-II menu screen.

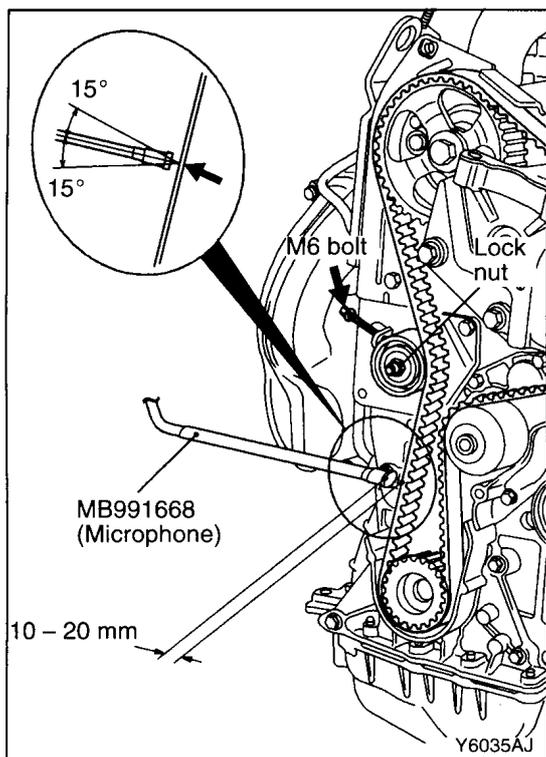

- (15) Slacken the lock nut of the timing belt tensioner.
- (16) Tension the timing belt with the aid of an M6 bolt.
- (17) As shown in the illustration, keep the microphone (MB991668) 10 to 20 mm away from the back side of the belt perpendicularly (within an inclination of  $\pm 15$  degrees).
- (18) With your finger tip, lightly tap on the belt at the centre between the tensioner and crankshaft sprocket in the location shown by the arrow in the illustration to check whether the belt frequency is within the standard value.

**Standard value:  $90 \pm 15$  Hz**

#### Caution

- Measure when the belt surface temperature is close to room temperature.
- Make sure that the water or oil, etc., does not get on the microphone.
- If a strong wind blow or noise is made close to the microphone during measurement, the meter will show a value that differs from the actual value.
- If the measurement is taken with the microphone touching the belt, the meter will show a value that differs from the actual value.

## INSPECTION




### TIMING BELT


Should either of the following defects be evident, replace the belt with a new one:

- (1) Hardened back surface rubber.  
Glossy, non-elastic and so hard that no mark is produced when scratched with a fingernail.


- (2) Cracked back surface rubber.
- (3) Cracked or separated canvas.
- (4) Cracked tooth bottom.
- (5) Cracks in back surface of belt.

- (6) Abnormal wear on the sides of the belt. A normal belt should have clear-cut sides as if cut by a sharp knife.

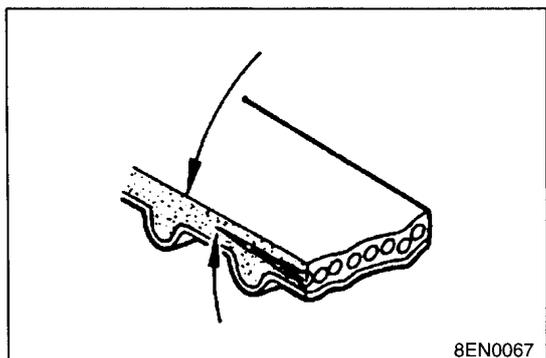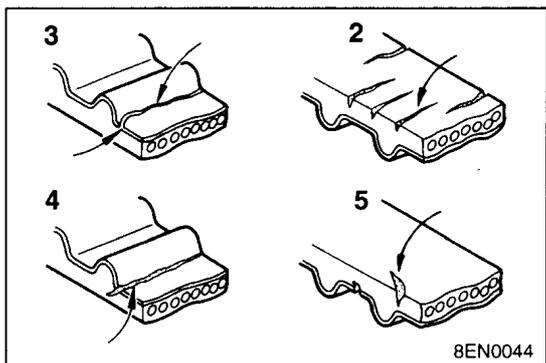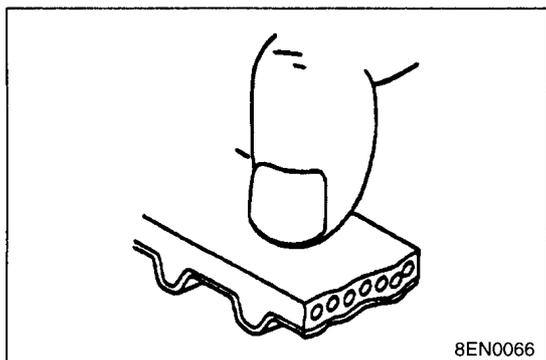

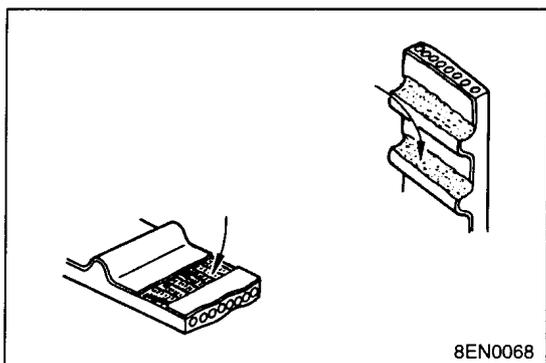


- (7) Abnormal wear in teeth.
- (8) Missing tooth.

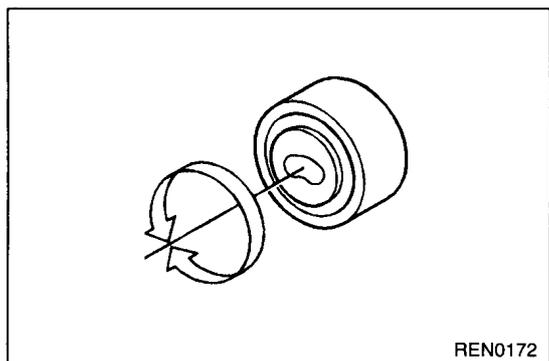

#### TIMING BELT TENSIONER AND IDLER

- (1) Check that the tensioner and idler rotate smoothly without excessive play or abnormal noise. Replace them with new ones if necessary.

## 5. OIL SEPARATOR AND OIL RETURN PIPE REMOVAL AND INSTALLATION

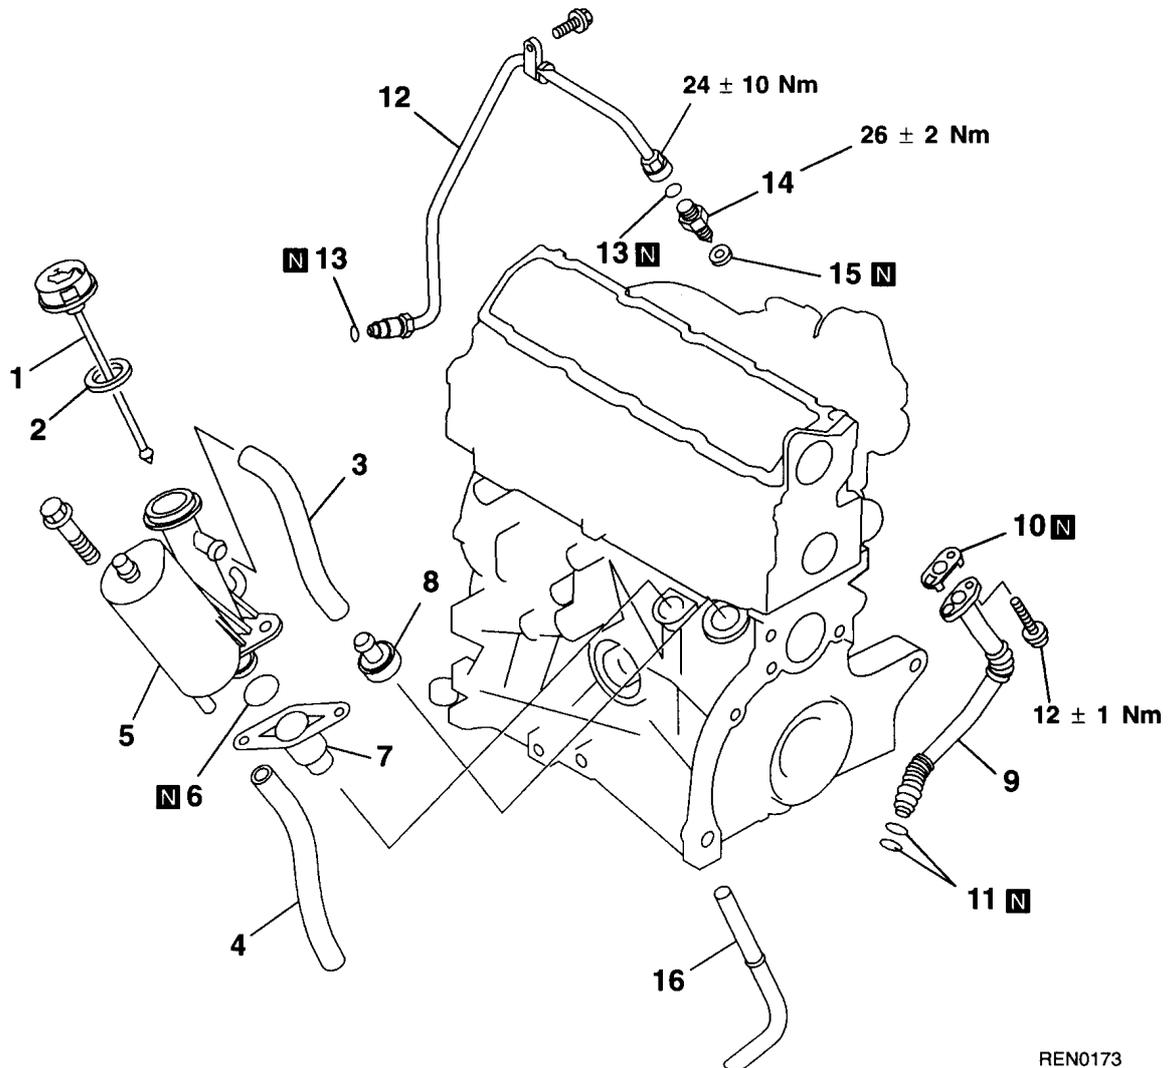

REN0173


### Removal steps

1. Oil dipstick
2. Oil dipstick seal
3. Oil separator hose
4. Oil separator return hose
5. Oil separator
6. O-ring
7. Oil separator holding ring
8. Engine breather pipe

9. Oil return pipe
10. Oil return pipe gasket
11. O-ring
12. Turbocharger oil feed pipe
13. O-ring
14. Turbo nipple
15. Gasket
16. Oil separator return pipe

## 6. INJECTION PUMP AND FUEL INJECTOR


### REMOVAL AND INSTALLATION

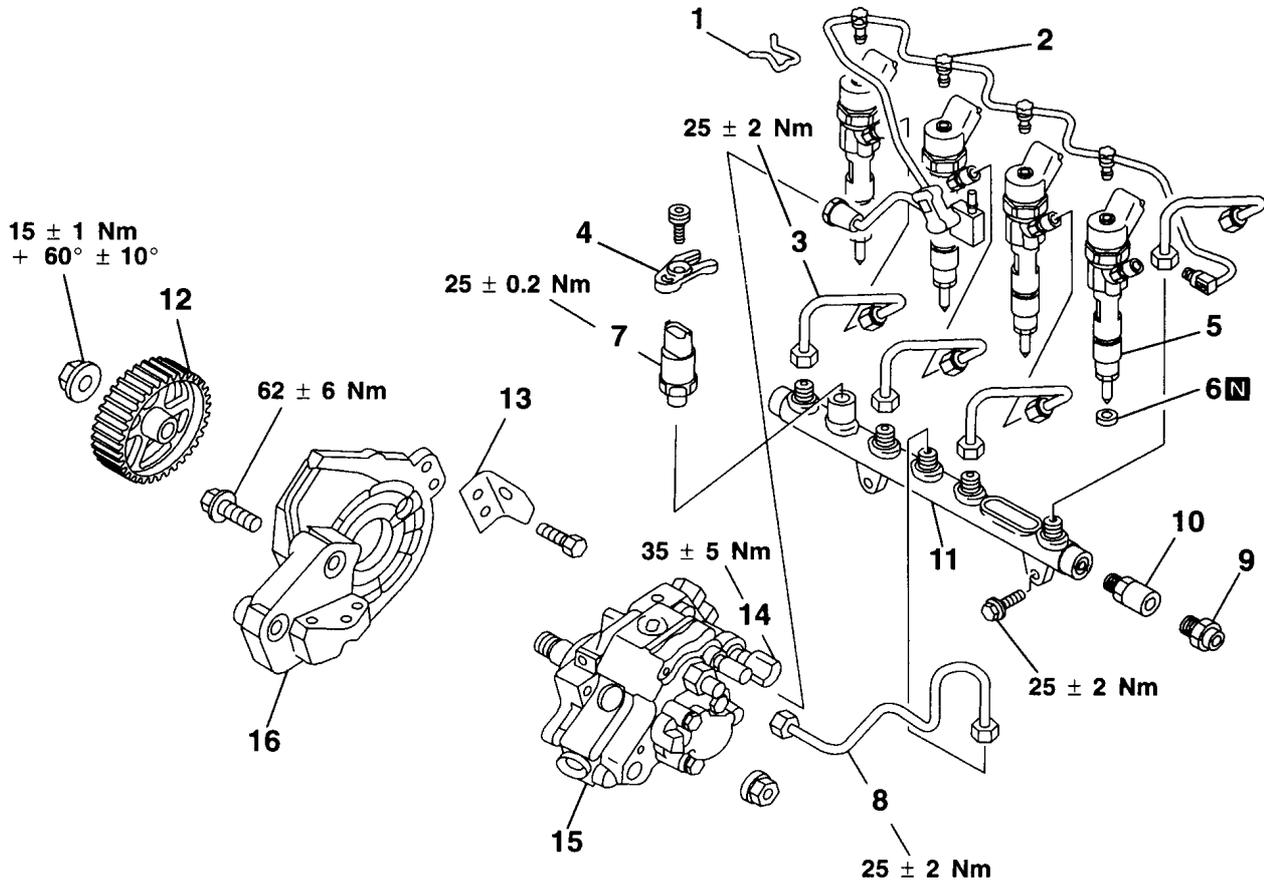

REN0174

#### Removal steps


- |     |                         |         |                             |
|-----|-------------------------|---------|-----------------------------|
|     | 1. Clip                 |         | 9. Pressure limiter         |
|     | 2. Fuel return ramp     |         | 10. Pressure limiter nipple |
| ▶B◀ | 3. High pressure pipe   | ▶A▶ ▶B▶ | 11. Fuel injection rail     |
|     | 4. Fuel injector flange |         | 12. Injection pump sprocket |
|     | 5. Fuel injector        |         | 13. Engine hanger           |
|     | 6. Adjusting washer     |         | 14. Pressure regulator      |
|     | 7. Pressure sensor      |         | 15. Injection pump          |
| ▶B◀ | 8. High pressure pipe   |         | 16. Injection pump bracket  |

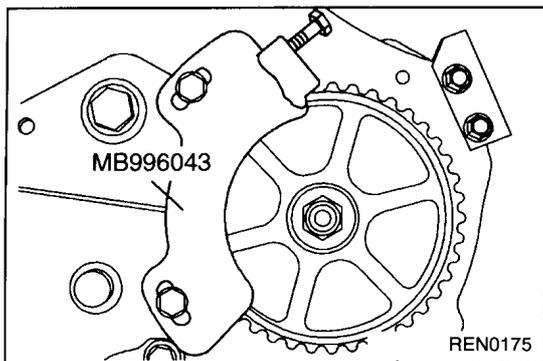

## REMOVAL SERVICE POINT

### ◀A▶ INJECTION PUMP SPROCKET REMOVAL


- (1) Set the special tools on the injection pump sprocket.
- (2) Remove the injection pump sprocket.

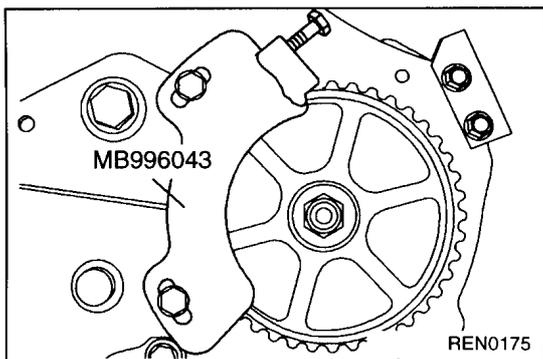

## INSTALLATION SERVICE POINT

### ▶A◀ INJECTION PUMP SPROCKET INSTALLATION


- (1) Using the special tools shown in the illustration, lock the injection pump sprocket in position.
- (2) Tighten the injection pump sprocket nut to the specified torque.

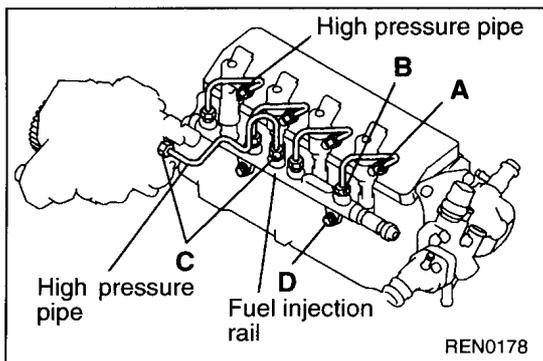

### ▶B◀ HIGH PRESSURE PIPE / FUEL INJECTION RAIL INSTALLATION

- (1) Position the fuel injection rail and finger tighten the mounting bolts (the rail should be floating).
- (2) Position all the high pressure pipes and finger tighten them.  
Tighten all the high pressure injection pipe connection (on the injector side A then on the fuel injection rail side B).
- (3) Tighten the high pressure pipe C.
- (4) Tighten the fuel injection rail bolts D.

## 7. VACUUM HOSE REMOVAL AND INSTALLATION

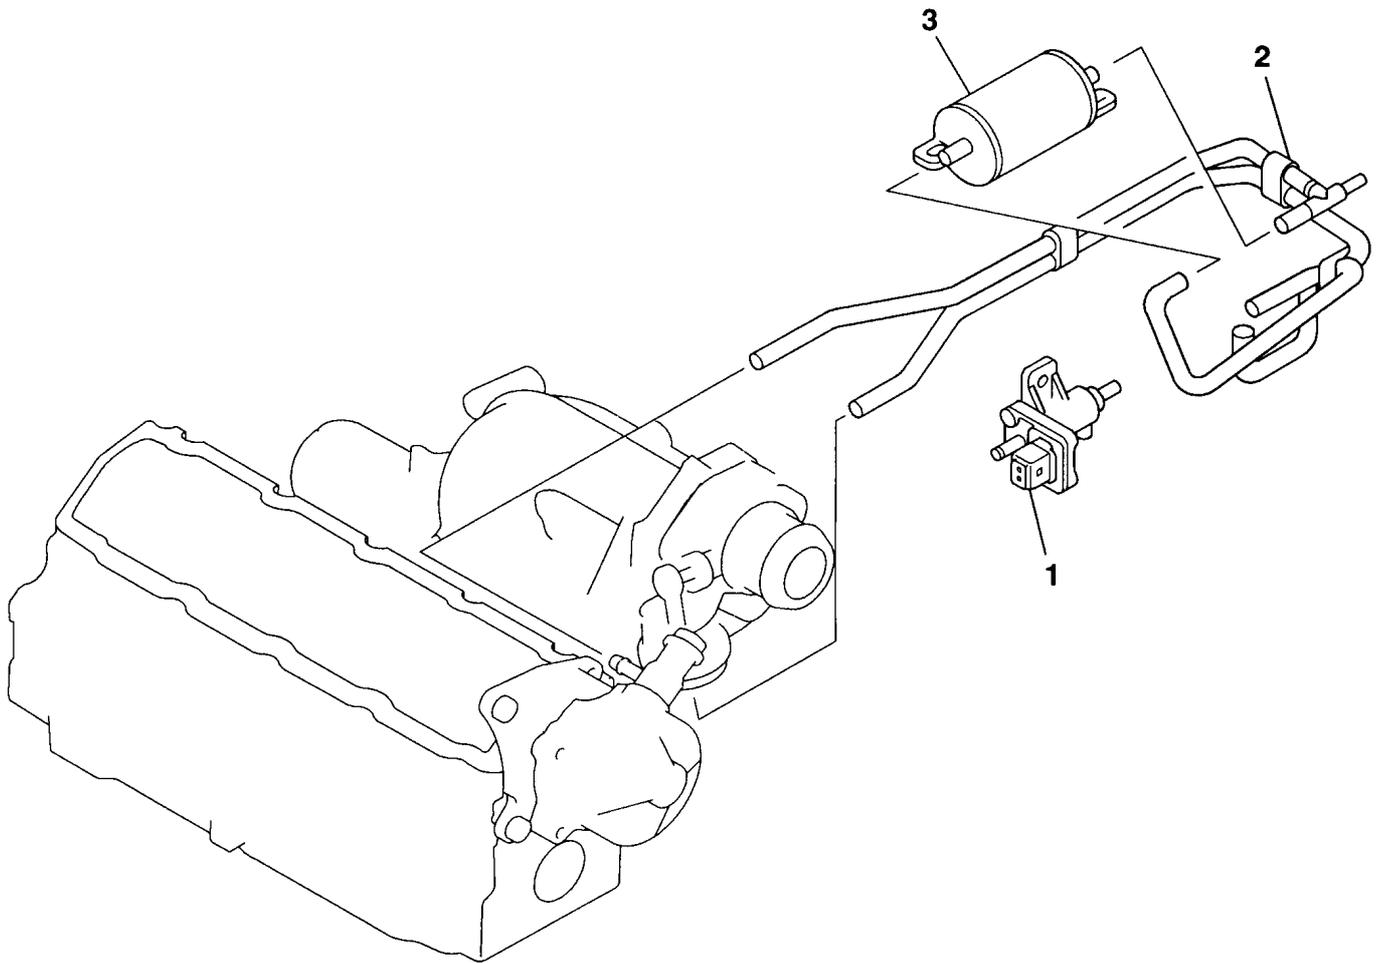


REN0179

### Removal steps

1. Solenoid valve
2. Vacuum hose
3. Vacuum tank

## 8. INTAKE AND EXHAUST REMOVAL AND INSTALLATION

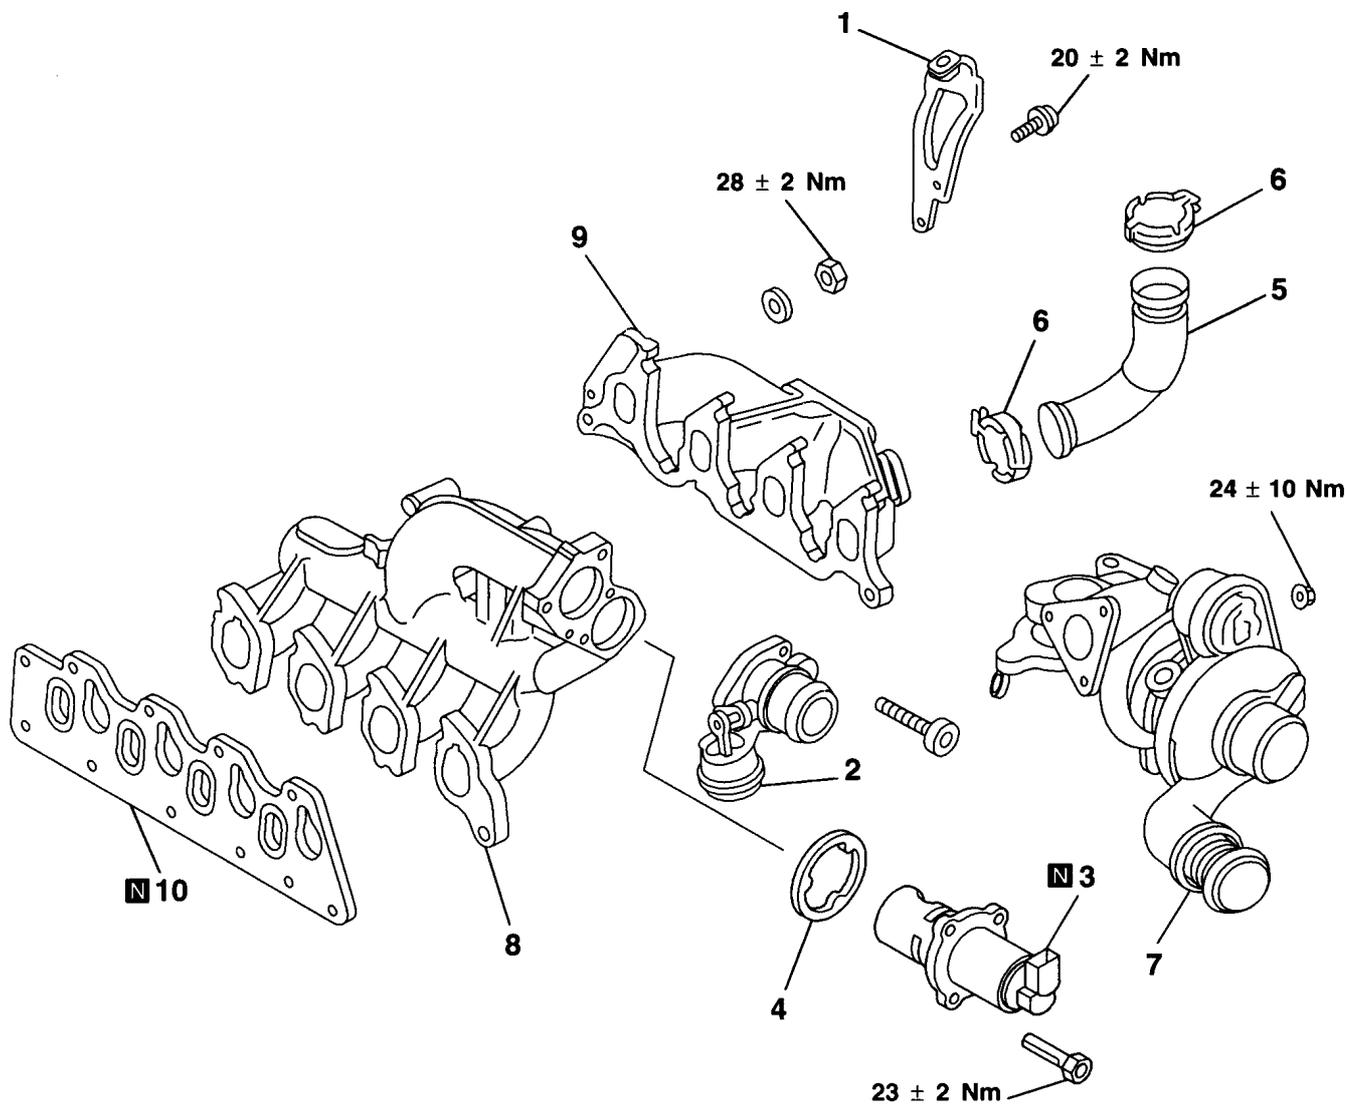


REN0180

### Removal steps

1. Engine hanger
2. Flap box
3. EGR valve
4. EGR valve gasket
5. EGR hose
6. EGR hose clamp
7. Turbocharger
8. Intake manifold
9. Exhaust manifold
10. Manifold gasket

## 9. WATER PUMP AND WATER PIPE REMOVAL AND INSTALLATION

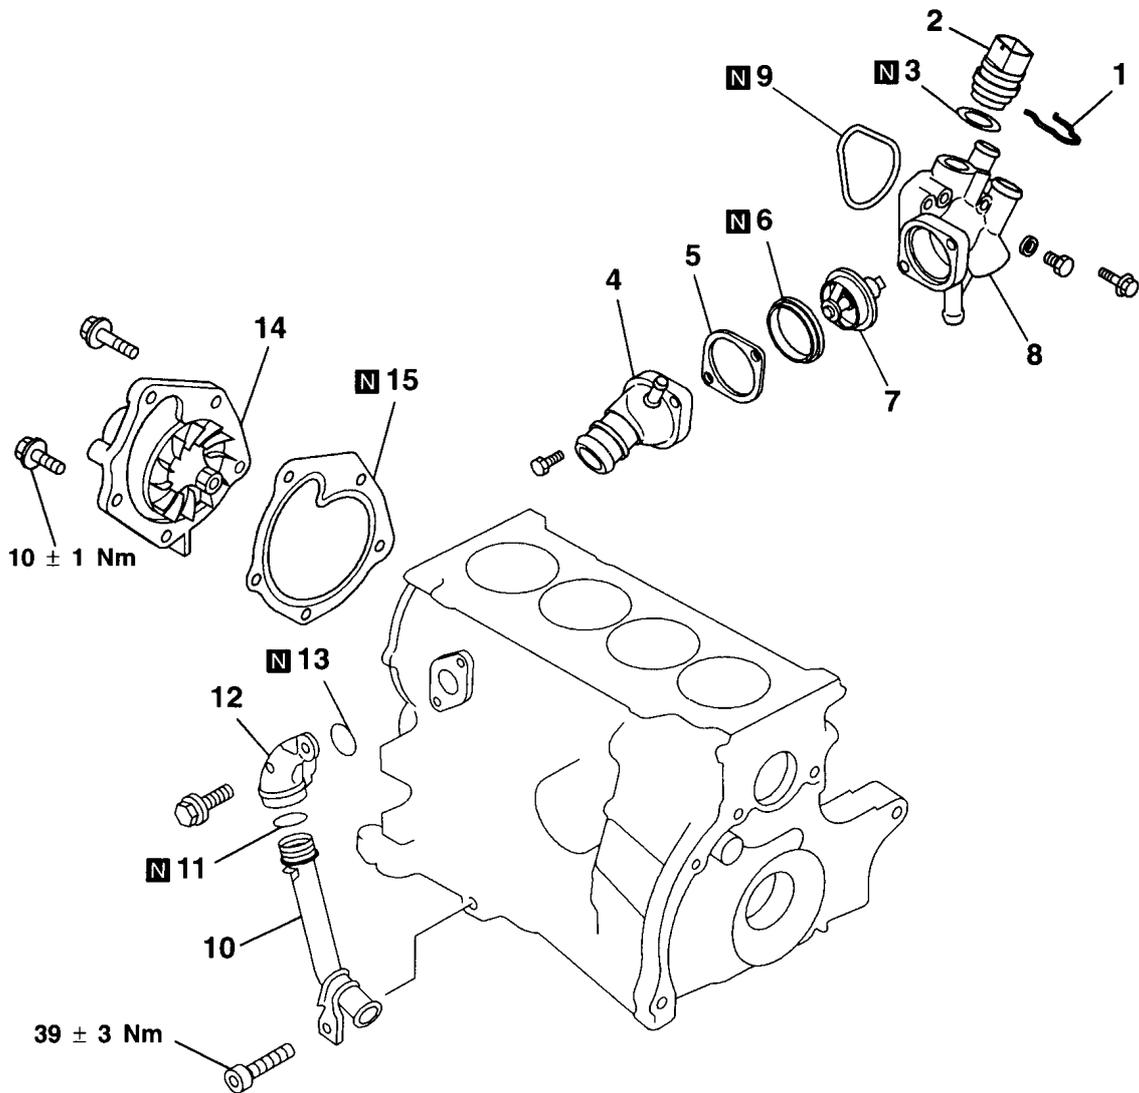


REN0181

### Removal steps

- |                                      |                             |
|--------------------------------------|-----------------------------|
| 1. Clip                              | 9. Thermostat case gasket   |
| 2. Engine coolant temperature sensor | 10. Cooling water line pipe |
| 3. Gasket                            | 11. O-ring                  |
| 4. Thermostat case cover             | 12. Cooling water line pipe |
| 5. Reinforcement                     | 13. O-ring                  |
| 6. Thermostat case cover gasket      | 14. Water pump              |
| 7. Thermostat                        | 15. Water pump gasket       |
| 8. Thermostat case                   |                             |

# 10. CAMSHAFT AND VACUUM PUMP

## REMOVAL AND INSTALLATION

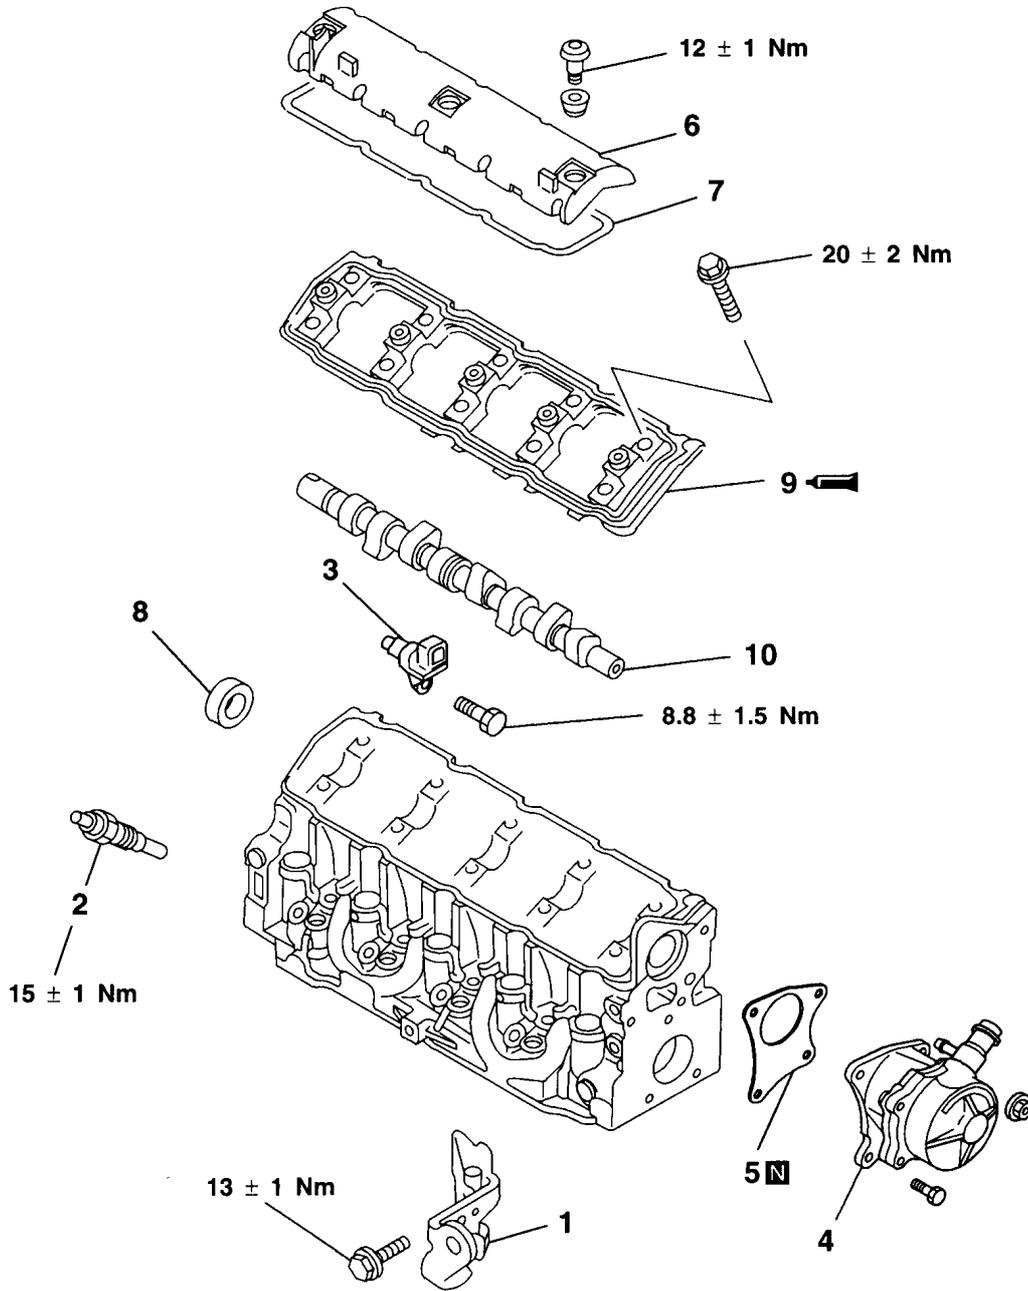


REN0182

### Removal steps

- ▶B◀
1. Engine hanger
  2. Glow plug
  3. Camshaft position sensor
  4. Vacuum pump
  5. Vacuum pump gasket

- ▶A◀
6. Cylinder head cover
  7. Cylinder head cover gasket
  8. Oil seal
  9. Bearing cap
  10. Camshaft

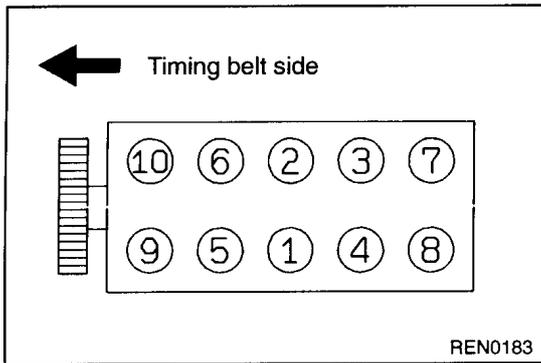


## INSTALLATION SERVICE POINTS

### ►A◄ BEARING CAP INSTALLATION

- (1) Apply sealant on the bearing cap at a position where it comes in contact with the cylinder head.
- (2) Tighten the bearing cap bolts to a torque of  $20 \pm 2$  Nm in the sequence given in the illustration.

### ►B◄ VACUUM PUMP INSTALLATION

Install the vacuum pump while aligning coupling section with the notch in the camshaft.

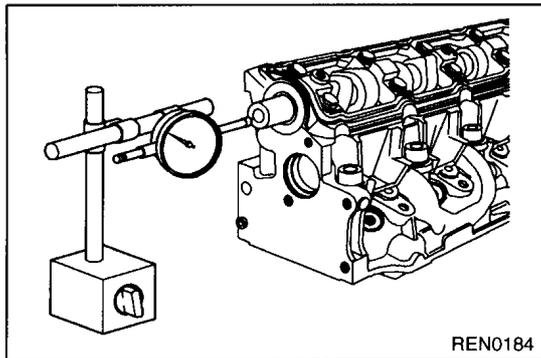

## INSPECTION


### CAMSHAFT

Measure the end play. Replace the camshaft if the measurement does not meet the standard value.

**Standard value: 0.05 – 0.13 mm**

# 11. CYLINDER HEAD


## REMOVAL AND INSTALLATION

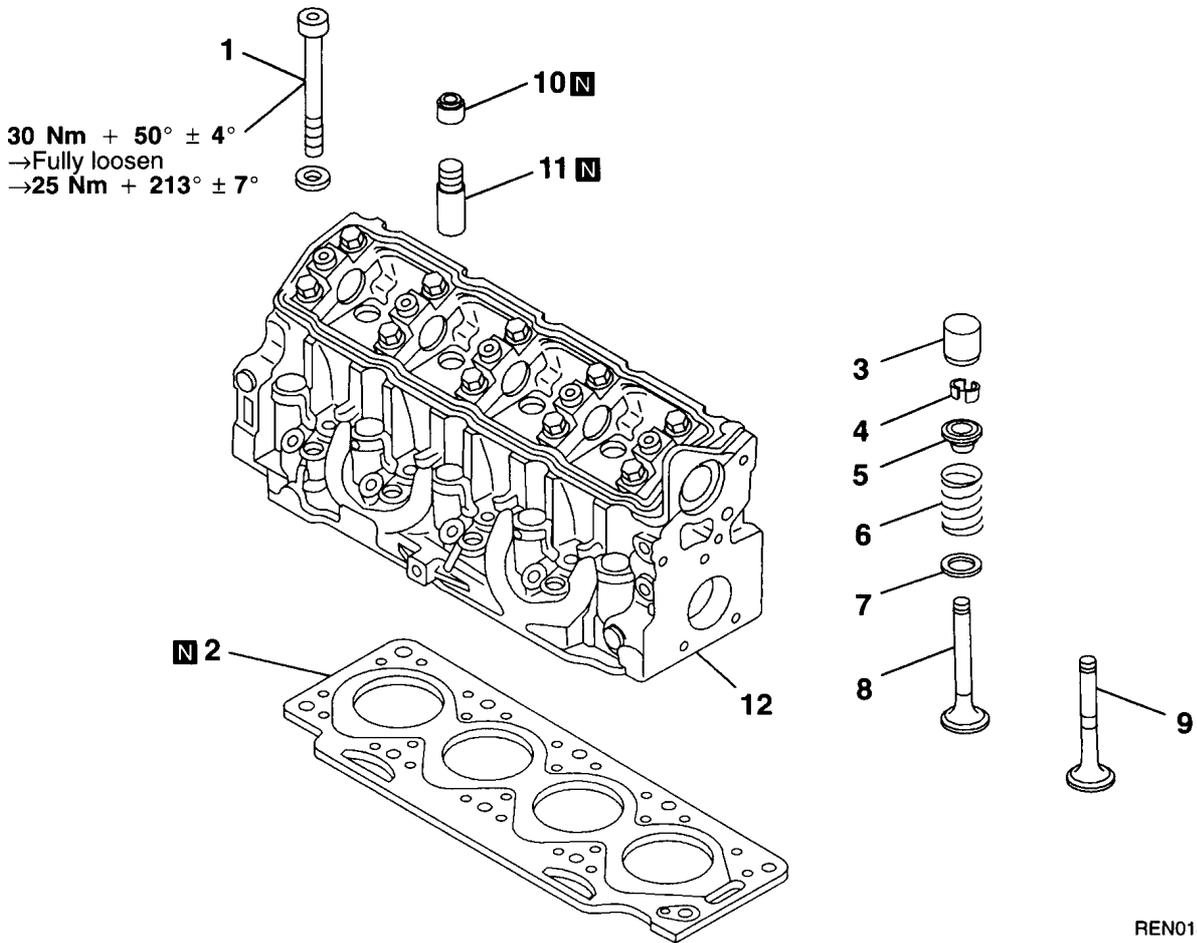

REN0185

### Removal steps


- |         |                          |                      |
|---------|--------------------------|----------------------|
| ◀E▶     | 1. Cylinder head bolt    | 7. Valve spring seat |
| ◀D▶     | 2. Cylinder head gasket  | 8. Intake valve      |
|         | 3. Tappet                | 9. Exhaust valve     |
| ◀A▶ ▶C▶ | 4. Retainer locks        | ◀B▶ ▶B▶              |
|         | 5. Valve spring retainer | ◀C▶ ▶A▶              |
| ◀A▶ ▶C▶ | 6. Valve spring          | 10. Valve stem seal  |
|         |                          | 11. Valve guide      |
|         |                          | 12. Cylinder head    |

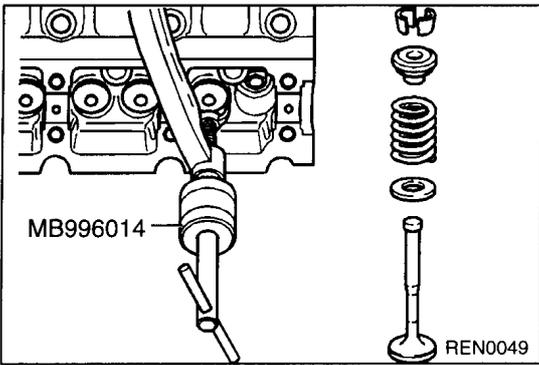

**REMOVAL SERVICE POINTS**


**◀A▶ RETAINER LOCKS REMOVAL**

- (1) Fit valve spring compressor MB996014 on the cylinder head as shown in the illustration.
- (2) Press down the valve spring retainer and remove the retainer locks.

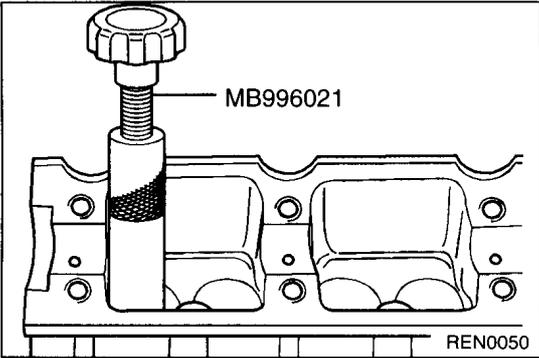


**◀B▶ VALVE STEM SEAL REMOVAL**

Remove the seal with valve stem seal remover MB996021.

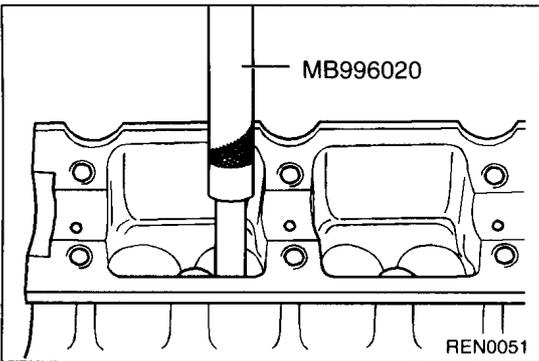

**◀C▶ VALVE GUIDE REMOVAL**

- (1) Support the cylinder head.
- (2) Press out the valve guides towards the valve seat with valve guide remover MB996020.

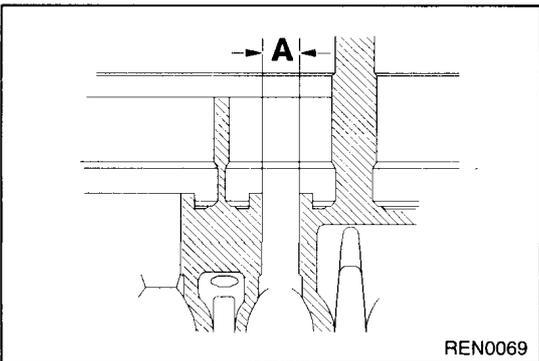

**INSTALLATION SERVICE POINTS**

**▶A◀ VALVE GUIDE INSTALLATION**


- (1) Measure the diameter of the bores for the valve guides in the cylinder head. If a measured value does not come within the specified tolerance range, select the oversize valve guide.


**Standard value:**  
**Diameter of bore (A): 13 mm**

- (2) Ream valve guide bore (dimension A) to the outside diameter of the selected oversize valve guides with reamer MB996016.

Oversize valve guide diameter = 13.3 mm  
 (two grooves)

- (3) Place the cylinder head on a flat surface.

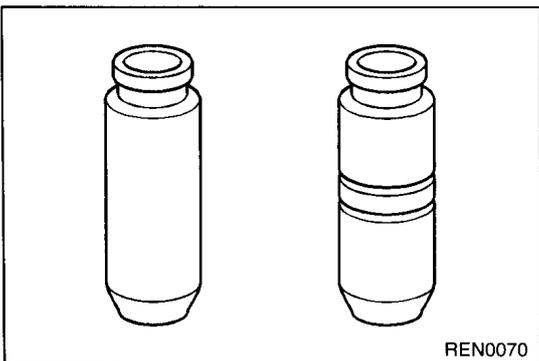


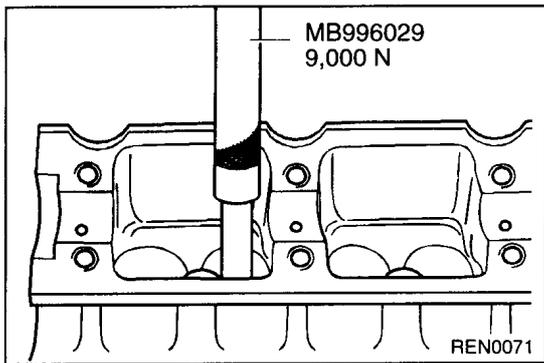


- (4) Locate the valve guides with the taper pointing down, on valve guide installer MB996029.
- (5) Press in the valve guides until the installer abuts the cylinder head.

**Caution**

- The pressure exerted on the valve guide must be at least 9,000 N. If the pressure is lower, the valve guide must be removed. Ream the valve guide bore in the cylinder head to the next oversize and press in the corresponding valve guide.

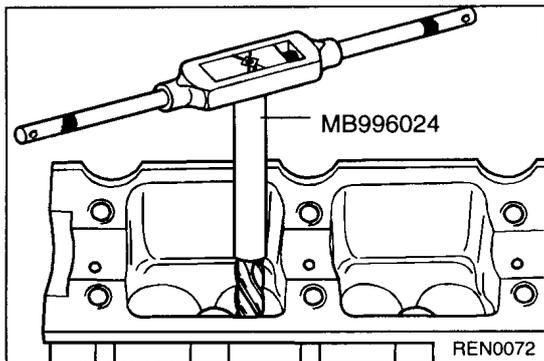

- (6) Clean the valve guide inner bores with reamer MB996024.

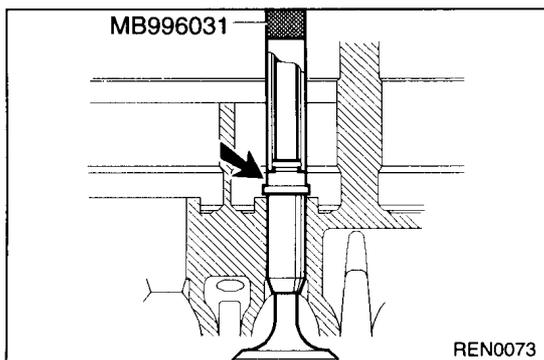


**►B◄ VALVE STEM SEAL INSTALLATION**

- (1) Lubricate the valve guides with engine oil. Introduce the valves through the valve guides. Locate the protective plastic cap over the valve stem.
- (2) Locate the valve stem oil seal. Press in the valve stem oil seal vertically until it abuts the cylinder head with valve stem seal installer MB996031. Remove the protective cap.


**Caution**

- To avoid damaging the valve stem oil seal, the valves must not be removed again.

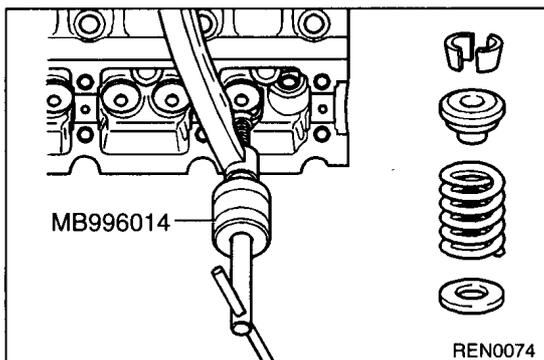

**►C◄ RETAINER LOCKS INSTALLATION**

- (1) Fit valve spring compressor MB996014 on the cylinder head as shown in the illustration.
- (2) Press down the valve spring retainer and fit the retainer locks.

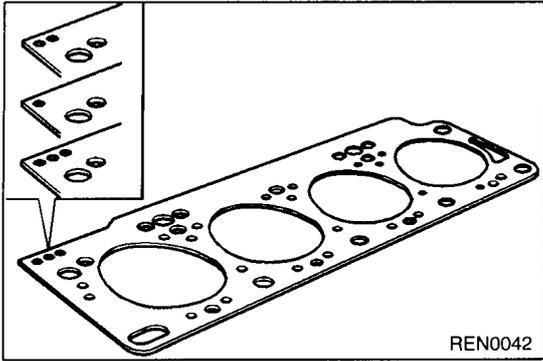

**►D◄ CYLINDER HEAD GASKET INSTALLATION**


- (1) Select a cylinder head gasket of the correct thickness according to the projecting height of the pistons. The available cylinder head gaskets are shown in the table below. The thickness of the gasket is indicated by the number of holes near the end of the gasket (see the illustration). Measure the projecting height of the pistons and calculate the average height. Then select a cylinder head gasket of the correct thickness from the table shown below.

Piston height above cylinder block mm	Number of holes	Gasket thickness mm
- 0.653	2	1.35
0.653 – 0.786	1	1.45
0.786 –	3	1.55

When only the gasket is to be replaced, check the hole pattern on the old gasket and select a gasket with the same number of holes.

**Caution**


- If a piston or connecting rod, etc. has been replaced, always measure the projecting height of the pistons because this may have changed after replacing these parts.

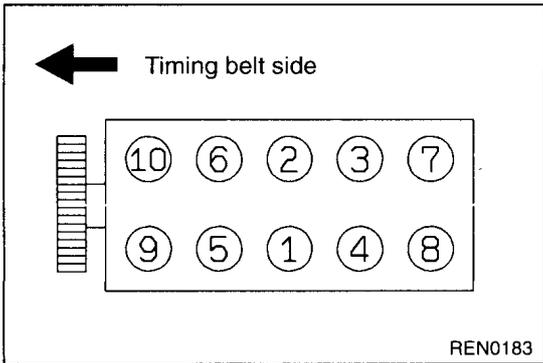

**►E◄ CYLINDER HEAD BOLT INSTALLATION**


**Caution**

- Do not reuse the cylinder head bolts once removed.
- (1) Fit the washers.
  - (2) Tighten all the bolts to 30 Nm, then angle-tighten by  $50^\circ \pm 4^\circ$  in the order shown in the illustration at left.
  - (3) Wait three minutes for gasket to settle.
  - (4) Slacken bolts 1 – 2 until they are completely free.
  - (5) Tighten bolts 1 – 2 to 25 Nm, then angle-tighten by  $213^\circ \pm 7^\circ$ .
  - (6) Carry out the same slackening and torque/angle tightening operations on the remaining bolts 3 – 4, 5 – 6, 7 – 8, 9 – 10.

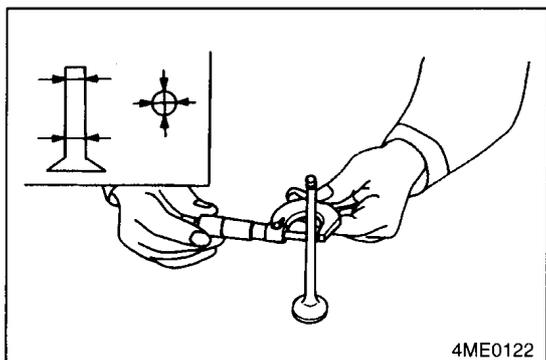**INSPECTION****INTAKE AND EXHAUST VALVES**


- (1) Measure the valve stem diameter and replace the valve if the measurement does not meet the standard value.

**Standard value: 6.98 – 6.99 mm**

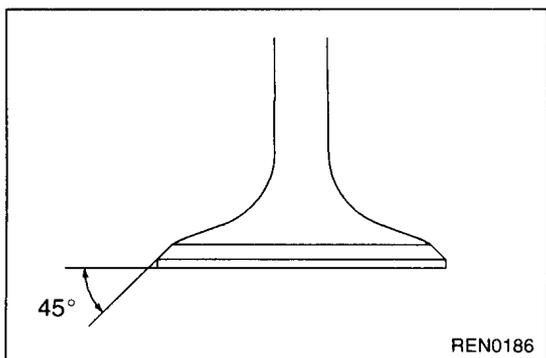

- (2) Measure the valve seat angle and correct if it does not meet the standard value.

**Standard value: 45°**

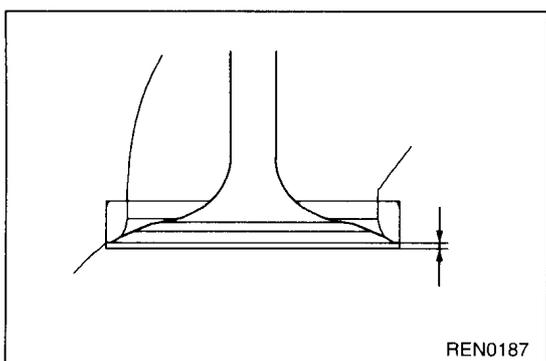

- (3) Insert the valve in the cylinder head and measure the valve projection from the cylinder head bottom surface. Replace the valve if the measurement does not meet the standard value.

**Standard value: -0.03 – 0.21 mm**


**CYLINDER HEAD**

- (1) Check the cylinder head bottom surface for distortion. Replace the cylinder head if the measurement does not meet the standard value.

**Standard value: 0.05 mm**

**Caution**

- The cylinder head may not be reground.

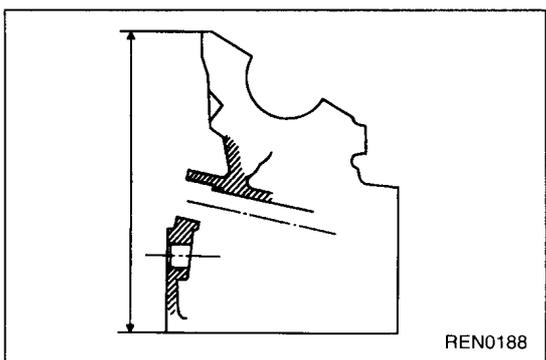


- (2) Measure the cylinder head height. Replace the cylinder head if the measurement does not meet the standard value.

**Standard value: 161.9 – 162.1 mm**

**Caution**


- The cylinder head may not be reground.

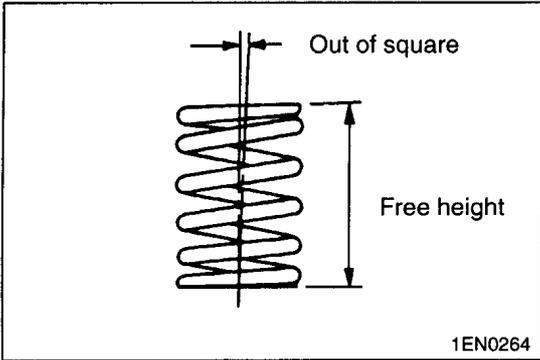

**VALVE SPRING**

- (1) Measure the valve spring free height. If the measurement does not meet the standard value, replace the valve spring.

**Standard value: 45.8 mm**

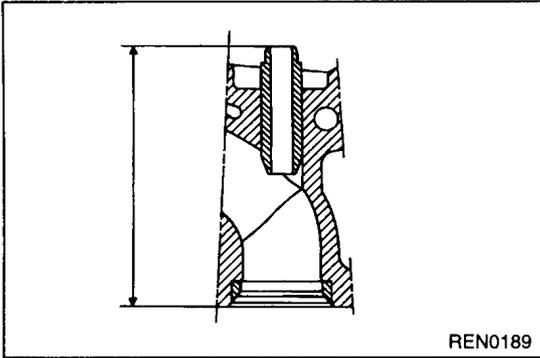

**VALVE GUIDE**

- (1) Measure the inner and outer diameters of the valve guide to confirm that they are within the standard value range.


**Standard value:**

**Inner diameter 7.00 – 7.02 mm**

**Outer diameter 12.03 – 12.05 mm**

- (2) Check that the dimension shown in the illustration meets the standard value when the valve guide is installed in the cylinder head.


**Standard value: 80.7 – 81.4 mm**

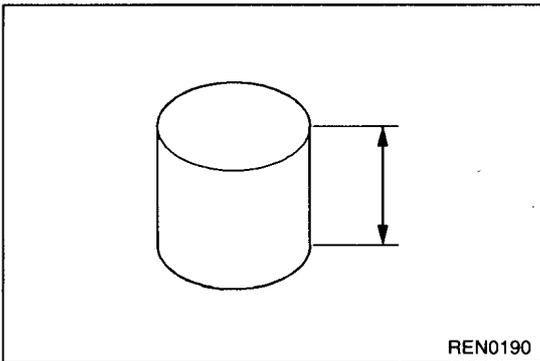

**TAPPET**

Measure the tappet height to check that it meets the standard value.


**Standard value: 34.97 – 34.99 mm**

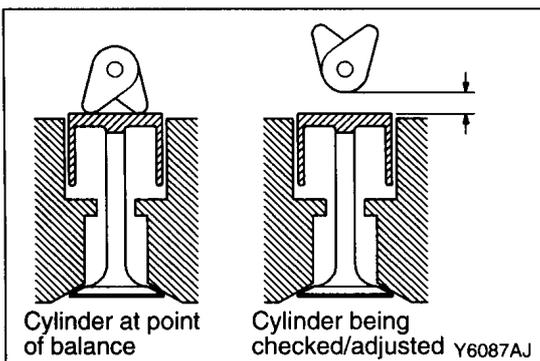

**VALVE CLEARANCE CHECK AND ADJUSTMENT**

- (1) The valve clearances have to be checked/adjusted in the following sequence.

Cylinder at point of balance	Cylinder being checked/adjusted
1	4
2	3
3	2
4	1

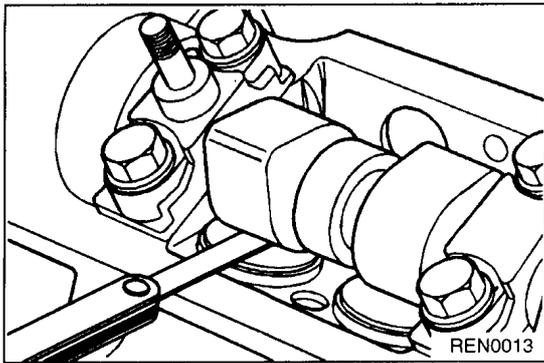


(2) Measure the valve clearance.

**Standard value:**

Cold engine	Checking	Adjusting
Intake valve mm	0.15–0.20	0.20
Exhaust valve mm	0.35–0.45	0.40

- (3) If the valve clearance is outside the standard value, adjust by replacing the tappets using the following procedure.  
 (4) Take valve clearance measurement again at the cylinder where the valve clearance is not within the tolerance, and record the measured value.

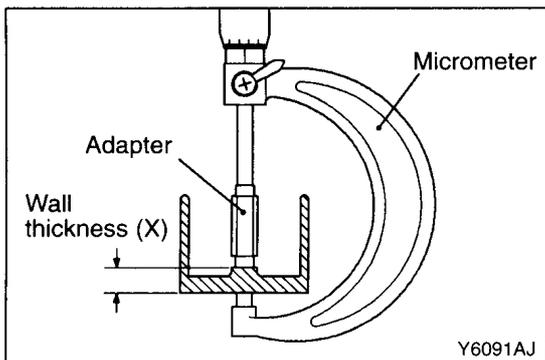

- (5) Measure the wall thickness (X) of the tappet using a micrometer, and record the measured value.  
 (6) Based on the measurements, select a tappet which will bring the valve clearance to the standard value.


**Wall thickness of tappet to be selected =  
 Wall thickness (X) of tappet having been installed  
 at checking + (Measured value – Standard value)**

**NOTE**

1. Always use new tappets.
  2. Tappets are available in thickness from 7.550 mm to 8.150 mm, increasing by increments of 0.025 mm.
- (7) Remove the camshaft. Install the selected tappet.  
 (8) Install the camshaft.  
 (9) Rotate the camshaft one turn, then check that the valve clearance meets the standard value.

# 12. OIL PAN AND OIL PUMP

## REMOVAL AND INSTALLATION

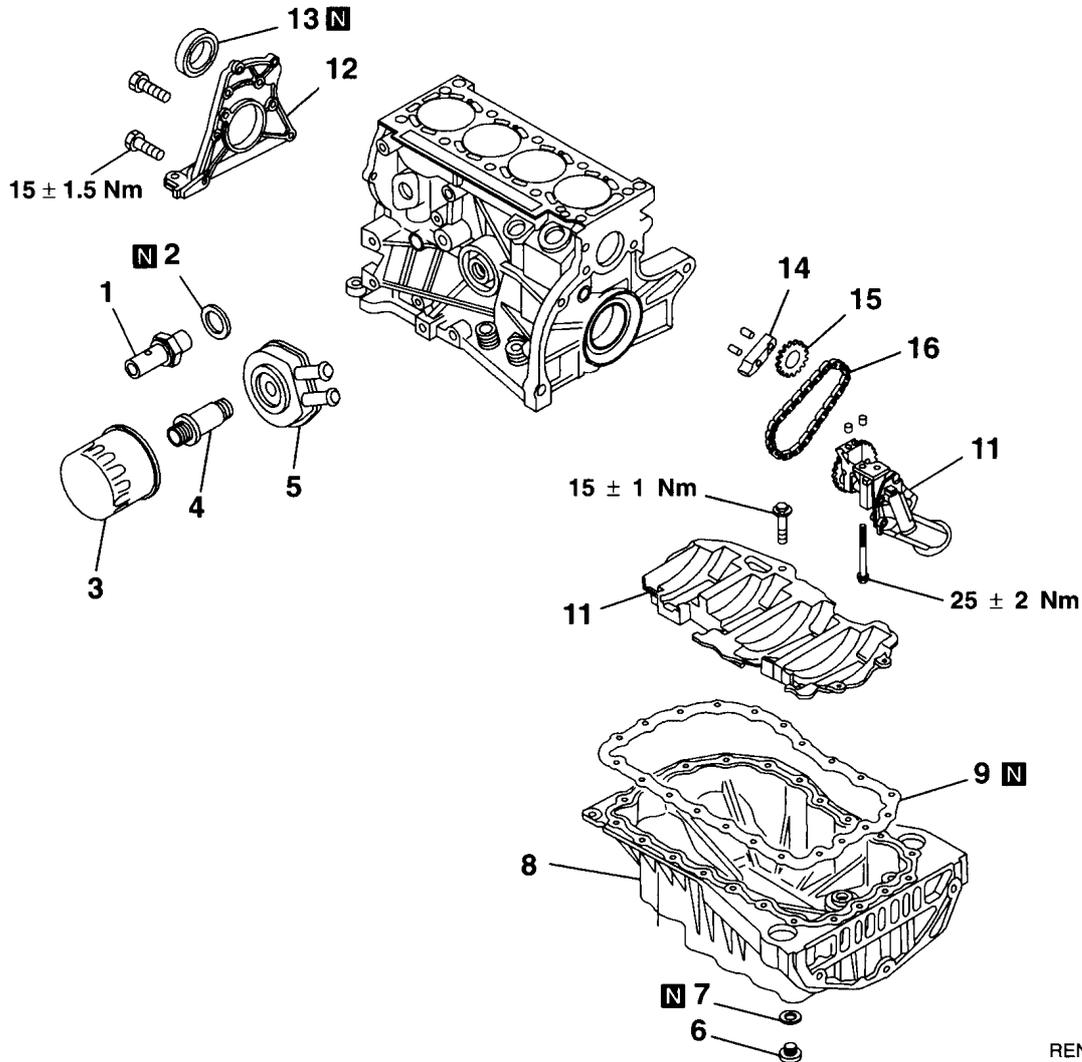


REN0191

### Removal steps

- 1. Oil pressure switch
- 2. Gasket
- 3. Oil filter
- 4. Oil cooler adaptor
- 5. Oil cooler
- 6. Drain plug
- 7. Drain plug gasket
- 8. Oil pan


- 9. Oil pan gasket
- 10. Oil plate
- 11. Oil pump
- 12. Cylinder block plate, front
- 13. Oil seal
- 14. Chain pad
- 15. Gear
- 16. Chain

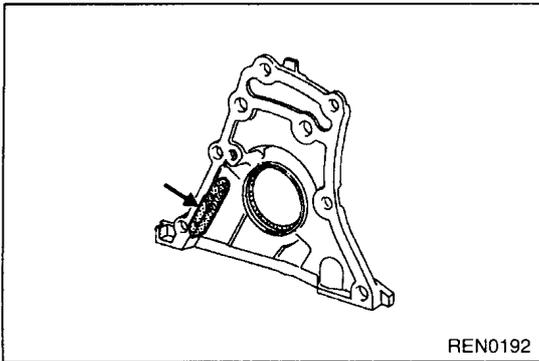**REMOVAL SERVICE POINT****◀A▶ CYLINDER BLOCK FRONT PLATE REMOVAL**

- (1) Remove the cylinder block front plate.

**NOTE**



Use care not to lose the pad attached on the cylinder block front plate.

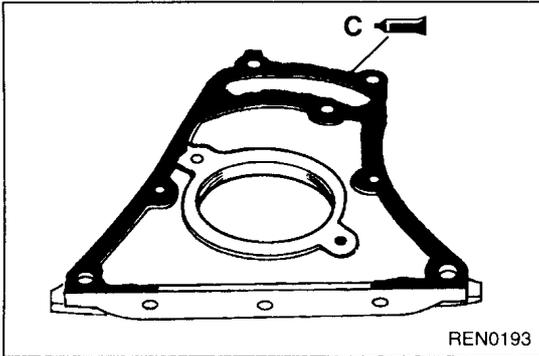**INSTALLATION SERVICE POINTS****▶A◀ CYLINDER BLOCK FRONT PLATE INSTALLATION**


- (1) Apply sealant to the cylinder block front plate.

**NOTE**

Do not apply too much sealant to avoid the risk of blocking the oilways in zone (C). Remember to fit the chain pad on the cylinder block front plate.

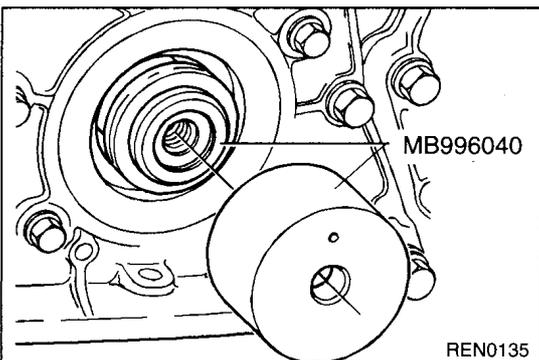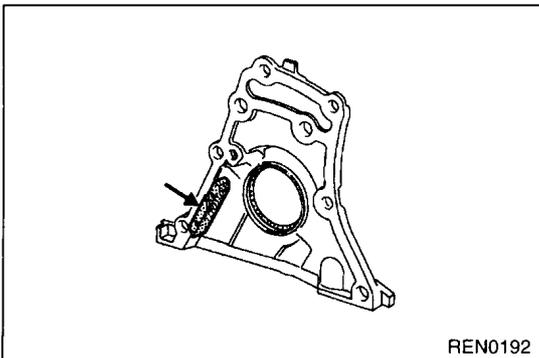**▶B◀ CRANKSHAFT FRONT OIL SEAL INSTALLATION**

- (1) Use the special tool to install the oil seal.

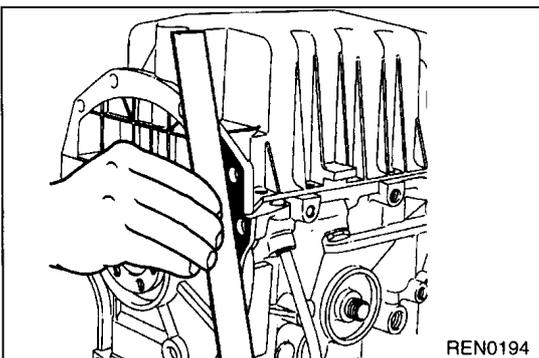**▶C◀ OIL PAN INSTALLATION**


- (1) Fit the oil pan on the cylinder block with a new gasket while aligning their flywheel side edges with each other. Tighten the bolts to a torque of  $14 \pm 1$  Nm.

**Caution**

- Be sure to perform the alignment at the flywheel side. Otherwise, the clutch housing could be damaged when the engine is combined with the transmission.

# 13. PISTON

## REMOVAL AND INSTALLATION

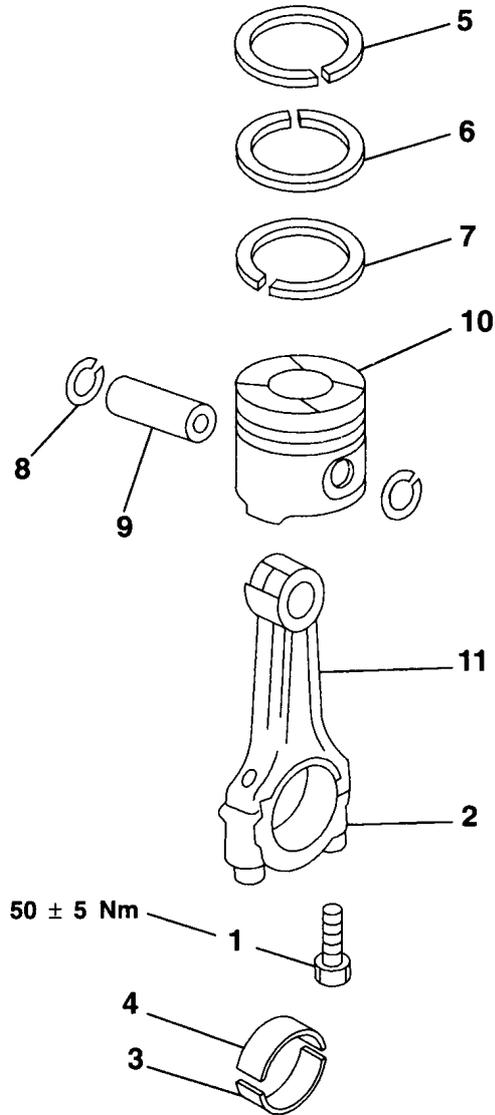

REN0195

### Removal steps

◀A▶


▶B▶  
▶B▶

1. Connecting rod bolt
2. Connecting rod cap
3. Connecting rod lower bearing
4. Connecting rod upper bearing
5. Piston ring No. 1
6. Piston ring No. 2

▶B▶  
▶B▶

▶A▶  
▶A▶  
▶C▶  
▶C▶

7. Oil ring
8. Snap ring
9. Piston pin
10. Piston
11. Connecting rod

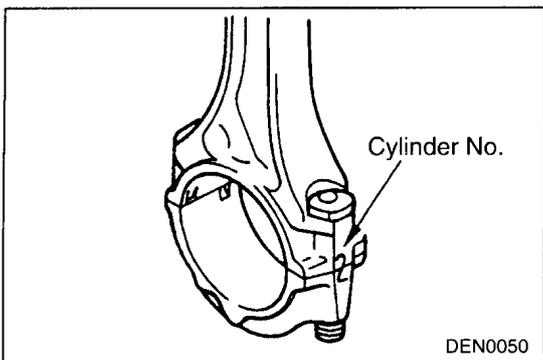


## REMOVAL SERVICE POINTS

### ◀A▶ CONNECTING ROD CAP REMOVAL

- (1) Mark the cylinder number on the side of the connecting rod big end for correct reassembly.


#### Caution

- Do not use a scribe tool for the marking, in order to avoid starting any cracks in the connecting rods.  
Use an indelible pencil instead.

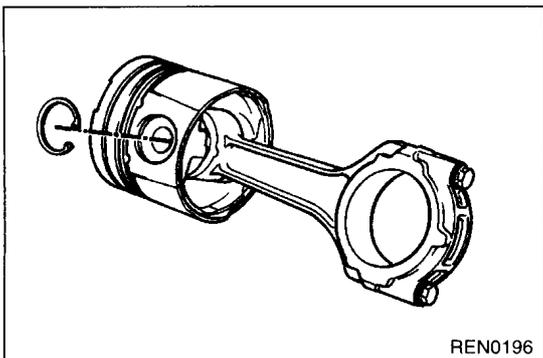

### ◀B▶ PISTON PIN REMOVAL

- (1) Remove the snap ring securing the piston pin.

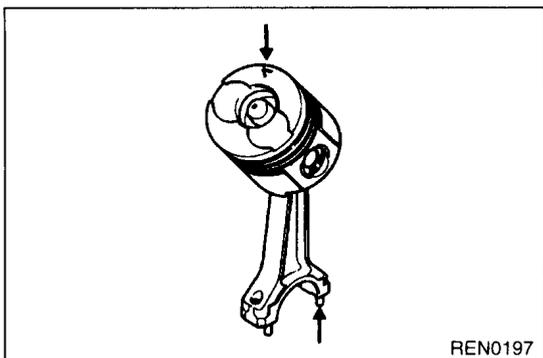

## INSTALLATION SERVICE POINTS


### ▶A▶ PISTON PIN INSTALLATION

- (1) Apply engine oil to the piston pin before inserting it into the piston and connecting rod.

#### Caution


- Put the V of the piston on the flywheel side. Put the big end bearing cap centring pins on the timing side.

- (2) Install the snap rings to secure the piston pin.

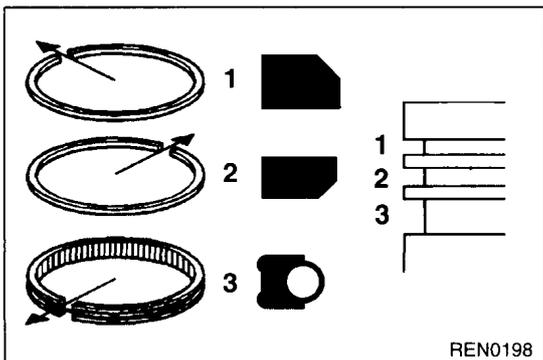


### ▶B▶ PISTON RING INSTALLATION

- (1) Install the piston rings with the side having T (top mark) upward.
- (2) Arrange the piston ring end gaps as shown in the illustration.

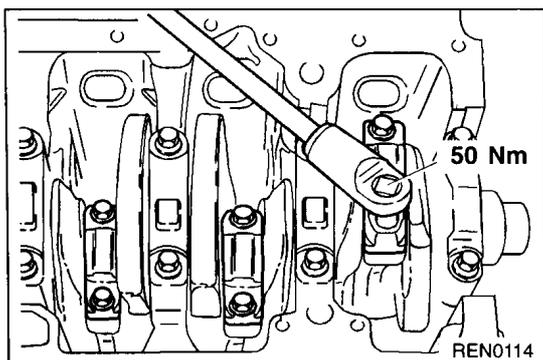

### ▶C▶ PISTON AND CONNECTING ROD INSTALLATION

- (1) Fit the connecting rod/piston assemblies into the cylinder block using a bush, taking care to ensure the fitting direction is correct (V towards flywheel).
- (2) Fit the connecting rods onto the lubricated crankshaft crankpins.
- (3) Fit the connecting rod bearing caps.
- (4) Tighten the new connecting rod bearing cap bolts to a torque of 50 Nm.

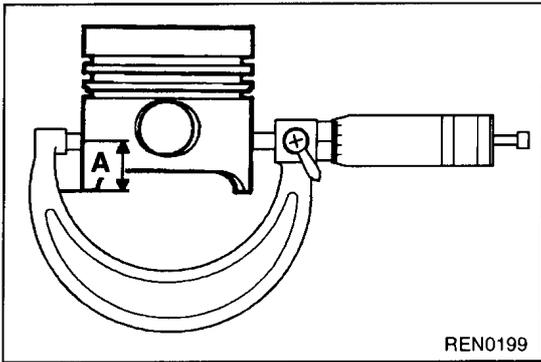


## INSPECTION

### PISTON

- (1) Measure the piston diameter at a point where  $A = 39$  mm

**Standard value: 80 mm**

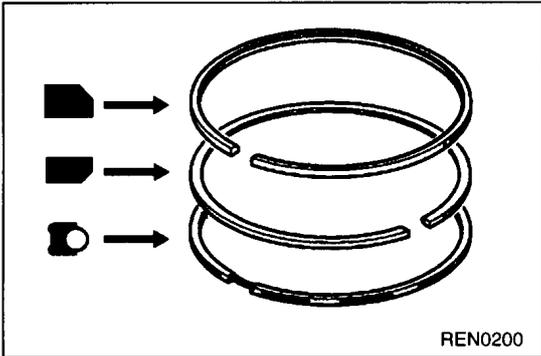

### PISTON RING


- (1) Measure the thickness of the piston rings to check for wear.

**Standard value**

**Piston ring No. 1: 2.5 mm**

**Piston ring No. 2: 2.0 mm**


**Oil ring: 3.0 mm**

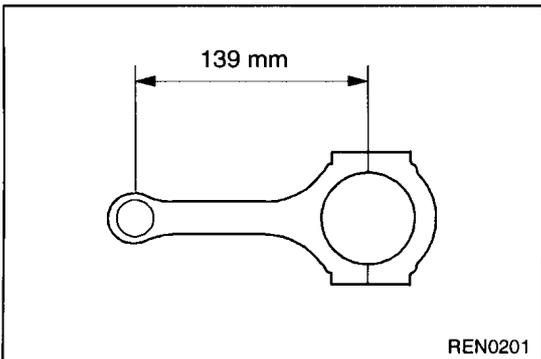

### CONNECTING ROD

- (1) Measure the distance from the big end to the small end to check for bend.

**Standard value: 139 mm**

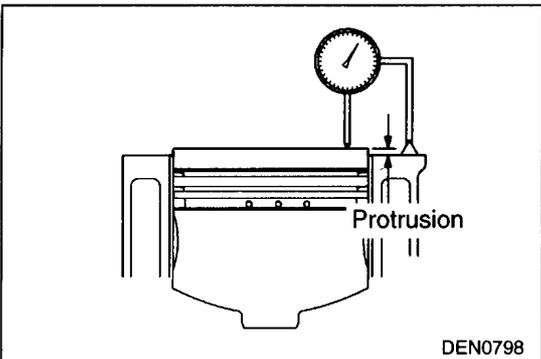

### PISTON PROTRUSION

- (1) Clean the piston crown to remove deposits.
- (2) Turn the crankshaft in the direction of operation to bring piston No. 1 to TDC.
- (3) Measure the protrusion of No. 1 piston using a dial gauge.


#### NOTE

Do not take measurement at valve recess.

- (4) Measure the piston protrusion on the remaining cylinders by following the same procedure.

# 14. CYLINDER BLOCK


## REMOVAL AND INSTALLATION

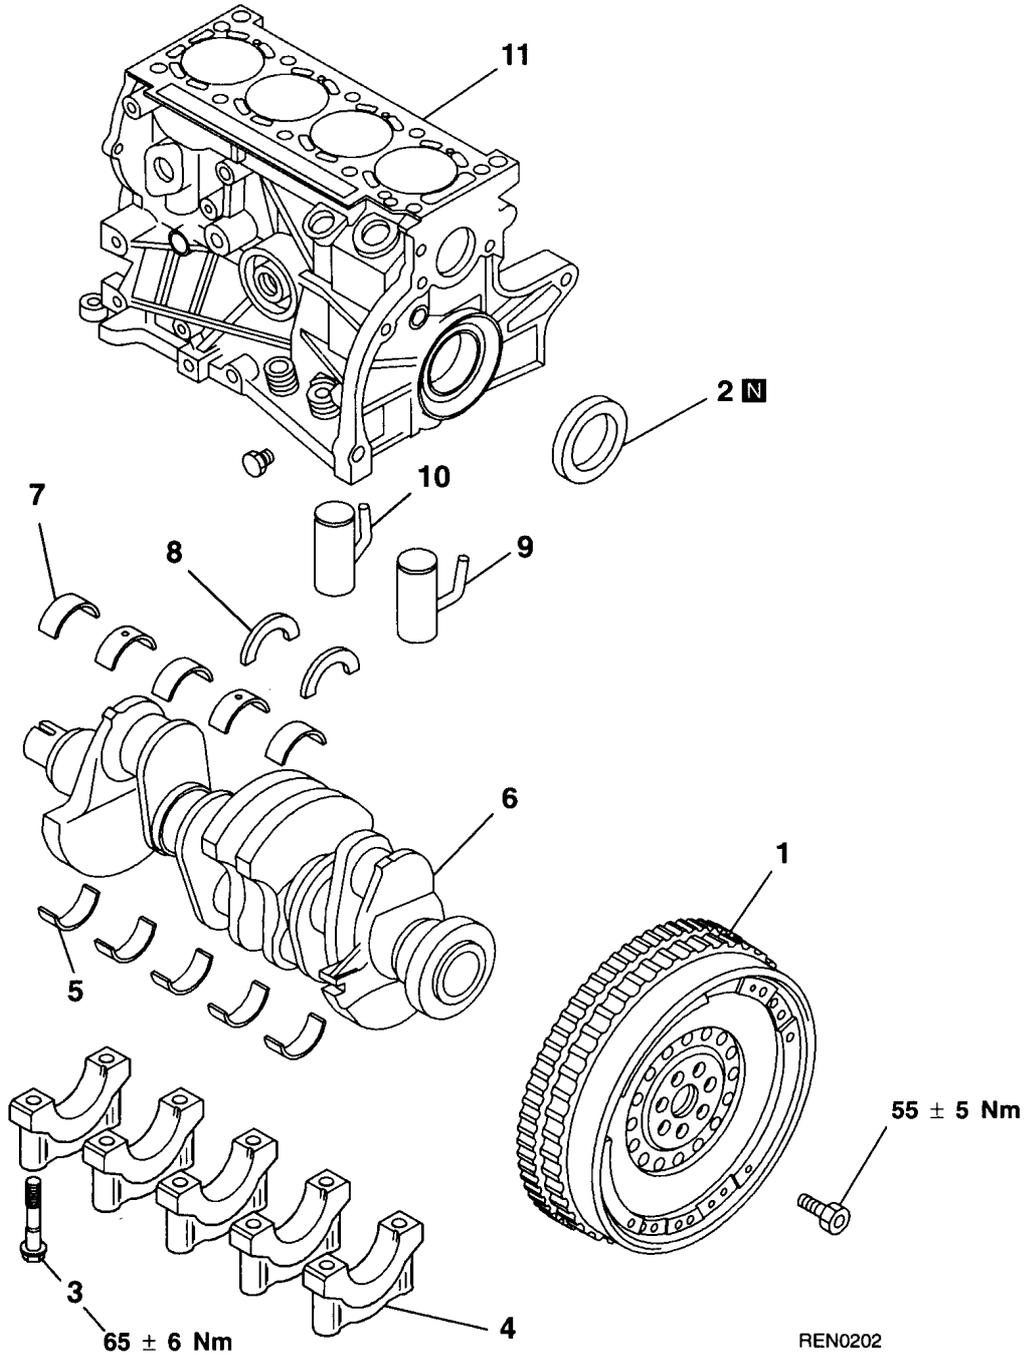


**Removal steps**

- ◀A▶ ▶D▶ 1. Flywheel
- ▶C▶ 2. Oil seal
- ▶B▶ 3. Bolt
- ▶A▶ 4. Bearing cap
- ▶A▶ 5. Crankshaft bearing, lower


- ▶A▶ 6. Crankshaft
- ▶A▶ 7. Crankshaft bearing, upper
- ▶A▶ 8. Thrust bearing
- ▶A▶ 9. Oil jet
- ▶A▶ 10. Oil jet
- ▶A▶ 11. Cylinder block

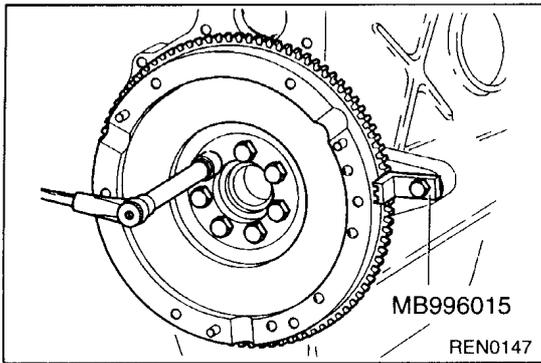**REMOVAL SERVICE POINT****◀▶ FLYWHEEL REMOVAL**


Use special tool MB996015 to hold the flywheel during removal.

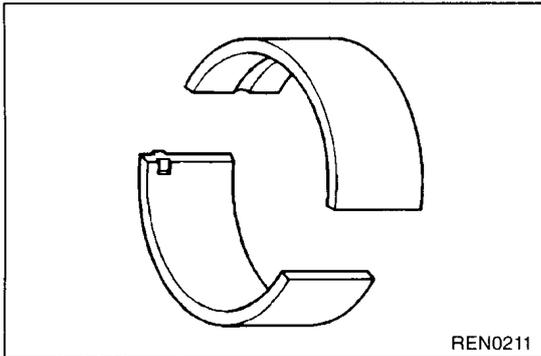**INSTALLATION SERVICE POINTS****▶◀ CRANKSHAFT BEARING INSTALLATION**

- (1) Install the bearings having an oil groove to the cylinder block.
- (2) Install the bearings having no oil groove on the bearing caps.

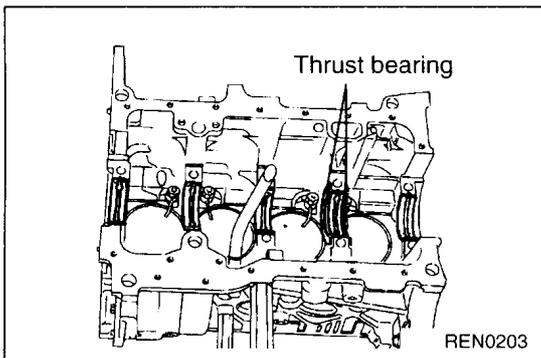


- (3) Install the thrust bearings at the No. 2 upper bearing with the grooved side towards the crank web.

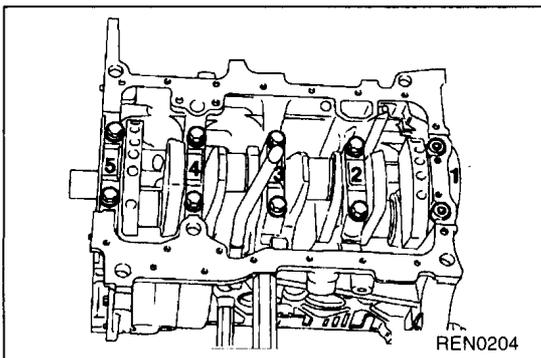
**▶◀ BEARING CAP INSTALLATION**

- (1) Install the bearing caps No. 3, 4 and 5. Each bearing cap is provided with an embossed identification number. Install the bearing caps in the correct positions according to the identification numbers.
- (2) Use engine oil to lubricate the threads and under the heads of the mounting bolts for the crankshaft bearing caps. Tighten the bearing cap bolts No.3, 4, 5 to a torque of 65 Nm. Fit the bearing cap No.2 without torque tightening the bolts.
- (3) Check the crankshaft side clearance.


**Standard value: 0.07 – 0.23 mm**

- (4) Tighten the bolts of the bearing cap No. 2 to a torque of 65 Nm.

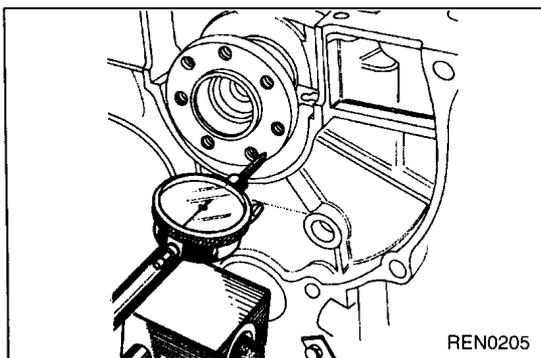


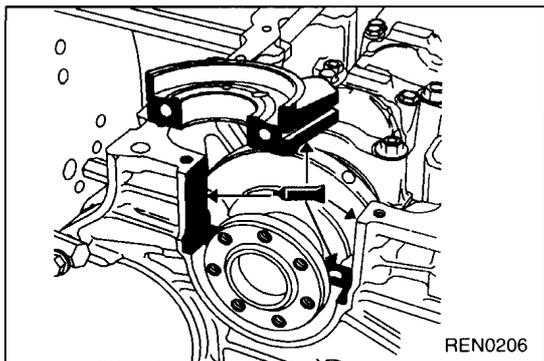



- (5) Remove the sealant residue completely from the illustrated position before installing the No. 1 bearing cap.

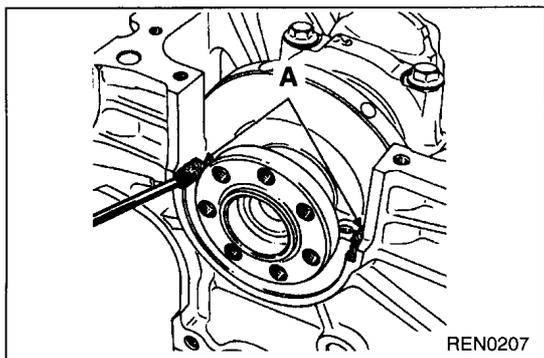


- (6) Lightly coat the lower faces of the cylinder block at A with Rhodorseal 5661.  
 (7) Fit the crankshaft bearing cap No. 1 and torque tighten to 65 Nm.

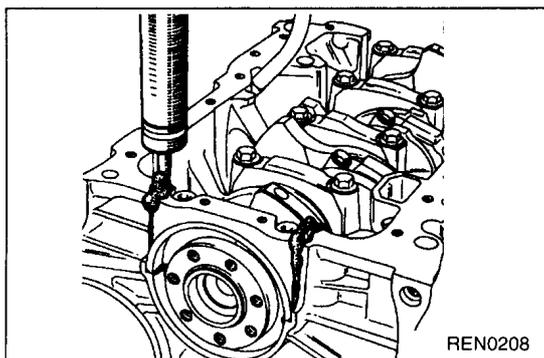


- (8) Mix 45 ml of Rhodorseal 5661 (approximately half a 100 grammes tube) with half measure of hardener using a small stick to give a slightly pink coloured, uniform mixture.  
 (9) Put the mixture into the syringe and inject it into the crankshaft bearing cap grooves.  
 (10) Allow the mixture to ooze out slightly from either side of the grooves in the crankshaft bearing cap to be sure that the mixture injected has completely filled the sealing groove.  
 (11) Use a cloth to wipe off any excess mixture, both on the inside and the outside of the cylinder block.

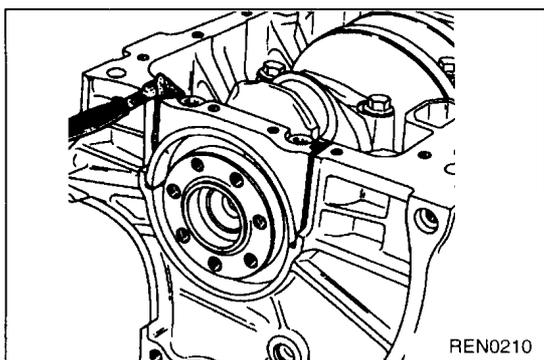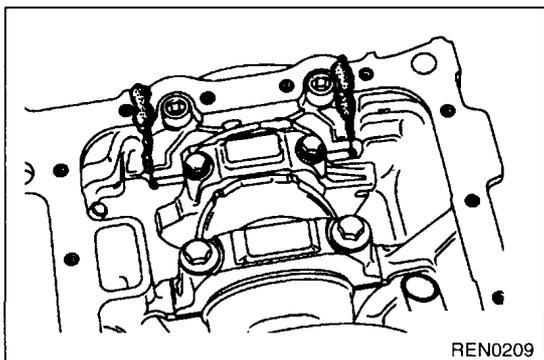

- (12) Leave to dry for a few moments then cut the surplus from the sealing face.  
 (13) Check that the crankshaft turns freely.

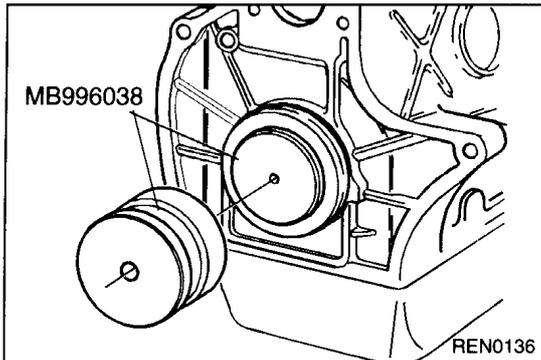**▶C◀ OIL SEAL INSTALLATION**

- (1) Coat the lip of the oil seal with a thin layer of engine oil.
- (2) Locate the installer oil seal guide MB996038 over the crankshaft.
- (3) Locate the oil seal over the oil seal installer guide.
- (4) Fit the oil seal with oil seal installer MB996038.

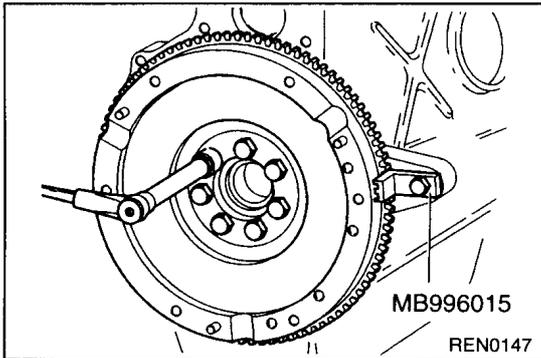**▶D◀ FLYWHEEL INSTALLATION**

- (1) Use special tool MB996015 to hold the flywheel during installation.