۸Т

D

Е

G

CONTENTS

INDEX FOR DTC	
Alphabetical Index	
DTC No. Index	
PRECAUTIONS	7
Precautions for Supplemental Restraint System	
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
SIONER"	7
$Precautions for On Board Diagnostic (OBD) \\ System$	
of A/T and Engine	
Precautions	
Service Notice or Precautions	
Wiring Diagrams and Trouble Diagnosis	10
PREPARATION	
Special Service Tools	
Commercial Service Tools	
A/T FLUID	17
Checking A/T Fluid	
Changing A/T Fluid	
A/T Fluid Cooler Cleaning	
A/T CONTROL SYSTEM	
Cross-Sectional View	
Shift Mechanism	
TCM Function	
CAN Communication	
Input/Output Signal of TCM	
Line Pressure Control	
Shift Control	
Lock-Up Control	35
Engine Brake Control (Overrun Clutch Control)	
Control Valve	
ON BOARD DIAGNOSTIC (OBD) SYSTEM	
Introduction	
OBD-II Function for A/T System	
One or Two Trip Detection Logic of OBD-II	
OBD-II Diagnostic Trouble Code (DTC)	
Malfunction Indicator Lamp (MIL)	
TROUBLE DIAGNOSIS	
DTC Inspection Priority Chart	
Fail-Safe	43
How to Perform Trouble Diagnoses for Quick and	

Accurate Repair	45
A/T Electrical Parts Location	
Circuit Diagram	51
Inspections before Trouble Diagnosis	52
Road Test	57
Check before Engine Is Started	57
Check at Idle	58
Cruise Test — Part 1	60
Cruise Test — Part 2	63
Cruise Test — Part 3	
Vehicle Speed When Shifting Gears	66
Vehicle Speed When Performing and Releasing	
Lock-Up	66
Symptom Chart	
TCM Terminals and Reference Value	
CONSULT-II Function (A/T)	80
Diagnostic Procedure Without CONSULT-II	
DTC U1000 CAN COMMUNICATION LINE	
Description	
On Board Diagnosis Logic	
Possible Cause	
DTC Confirmation Procedure	
Wiring Diagram — AT — CAN	
Diagnostic Procedure	97
DTC P0705 PARK/NEUTRAL POSITION (PNP)	
SWITCH	
Description	
CONSULT-II Reference Value	
On Board Diagnosis Logic	
Possible Cause	
DTC Confirmation Procedure	
Wiring Diagram — AT — PNP/SW	
Diagnostic Procedure	. 101
DTC P0710 A/T FLUID TEMPERATURE SENSOR	
CIRCUIT	
Description	
CONSULT-II Reference Value	
On Board Diagnosis Logic	. 104
Possible Cause	
DIC Contirmation Procedure	10/

Wiring Diagram — AT — FTS	105	DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP).	.147
Diagnostic Procedure	106	Description	.147
Component Inspection		CONSULT-II Reference Value	
DTC P0720 VEHICLE SPEED SENSOR-A/T (RE	V-	On Board Diagnosis Logic	.147
OLUTION SENSOR)	109	Possible Cause	.147
Description	109	DTC Confirmation Procedure	.148
CONSULT-II Reference Value	109	Wiring Diagram — AT — TCCSIG	.149
On Board Diagnosis Logic	109	Diagnostic Procedure	.150
Possible Cause	109	DTC P0745 LINE PRESSURE SOLENOID VALVE	.155
DTC Confirmation Procedure	109	Description	.155
Wiring Diagram — AT — VSSA/T	111	CONSULT-II Reference Value	.155
Diagnostic Procedure		On Board Diagnosis Logic	.155
DTC P0725 ENGINE SPEED SIGNAL		Possible Cause	
Description		DTC Confirmation Procedure	
CONSULT-II Reference Value		Wiring Diagram — AT — LPSV	
On Board Diagnosis Logic		Diagnostic Procedure	
Possible Cause		Component Inspection	
DTC Confirmation Procedure		DTC P0750 SHIFT SOLENOID VALVE A	
Wiring Diagram — AT — ENGSS		Description	
Diagnostic Procedure		CONSULT-II Reference Value	
DTC P0731 A/T 1ST GEAR FUNCTION		On Board Diagnosis Logic	
Description		Possible Cause	
On Board Diagnosis Logic		DTC Confirmation Procedure	
Possible Cause		Wiring Diagram — AT — SSV/A	
DTC Confirmation Procedure		Diagnostic Procedure	
Wiring Diagram — AT — 1STSIG		Component Inspection	
Diagnostic Procedure		DTC P0755 SHIFT SOLENOID VALVE B	
DTC P0732 A/T 2ND GEAR FUNCTION		Description	
Description		CONSULT-II Reference Value	
On Board Diagnosis Logic		On Board Diagnosis Logic	
Possible Cause		Possible Cause	167
DTC Confirmation Procedure		DTC Confirmation Procedure	
Wiring Diagram — AT — 2NDSIG		Wiring Diagram — AT — SSV/B	
Diagnostic Procedure		Diagnostic Procedure	
DTC P0733 A/T 3RD GEAR FUNCTION		Component Inspection	
Description		DTC P1705 ACCELERATOR PEDAL POSITION	. 1 / 1
On Board Diagnosis Logic		(APP) SENSOR	172
Possible Cause		Description	
DTC Confirmation Procedure		CONSULT-II Reference Value	
Wiring Diagram — AT — 3RDSIG		On Board Diagnosis Logic	
Diagnostic Procedure		Possible Cause	
DTC P0734 A/T 4TH GEAR FUNCTION		DTC Confirmation Procedure	
Description		Wiring Diagram — AT — TPS	
CONSULT-II Reference Value		Diagnostic Procedure	.175
On Board Diagnosis Logic		DTC P1760 OVERRUN CLUTCH SOLENOID	4
Possible Cause		VALVE	
DTC Confirmation Procedure		Description	
Wiring Diagram — AT — 4THSIG		CONSULT-II Reference Value	
Diagnostic Procedure	138	On Board Diagnosis Logic	
DTC P0740 TORQUE CONVERTER CLUTCH		Possible Cause	
SOLENOID VALVE		DTC Confirmation Procedure	
Description		Wiring Diagram — AT — OVRCSV	
CONSULT-II Reference Value		Diagnostic Procedure	
On Board Diagnosis Logic		Component Inspection	
Possible Cause		DTC VEHICLE SPEED SENSOR MTR	
DTC Confirmation Procedure		Description	
Wiring Diagram — AT — TCV		CONSULT-II Reference Value	
Diagnostic Procedure		On Board Diagnosis Logic	
Component Inspection	146	Possible Cause	.182

DTC Confirmation Procedure 182	"2" \rightarrow "1" on Position	. 237
Wiring Diagram — AT — VSSMTR 184	Vehicle Does Not Decelerate by Engine Brake	240
Diagnostic Procedure 185	TCM Self-Diagnosis Does Not Activate	
DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP	SHIFT CONTROL SYSTEM	
SENSOR CIRCUIT AND TCM POWER SOURCE) 187	Control Device Removal and Installation	
Description	Adjustment of A/T Position	
CONSULT-II Reference Value 187	Checking of A/T Position	
On Board Diagnosis Logic	A/T SHIFT LOCK SYSTEM	
Possible Cause	Description	
DTC Confirmation Procedure	Shift Lock System Electrical Parts Location	
	Wiring Diagram — AT — SHIFT	
Wiring Diagram — AT — BA/FTS		
Diagnostic Procedure	Diagnostic Procedure	
Component Inspection	KEY INTERLOCK CABLE	
MAIN POWER SUPPLY AND GROUND CIRCUIT. 194	Components	
Description	Removal	
On Board Diagnosis Logic	Installation	
Possible Cause	ON-VEHICLE SERVICE	
DTC Confirmation Procedure	Control Valve Assembly and Accumulators	
Wiring Diagram — AT — MAIN 195	Park/Neutral Position (PNP) Switch	
Diagnostic Procedure196	Differential Side Oil Seal Replacement	265
DTC CONTROL UNIT (RAM), CONTROL UNIT	Revolution Sensor Replacement	
(ROM)198	AIR BREATHER HOSE	268
Description 198	Removal and Installation	268
On Board Diagnosis Logic198	TRANSAXLE ASSEMBLY	269
Possible Cause 198	Removal and Installation	269
DTC Confirmation Procedure	OVERHAUL	
Diagnostic Procedure 199	Components	
DTC CONTROL UNIT(EEPROM)200	Oil Channel	
Description	Locations of Adjusting Shims, Needle Bearings,	
On Board Diagnosis Logic	Thrust Washers and Snap Rings	270
Possible Cause	DISASSEMBLY	
DTC Confirmation Procedure	Disassembly	
Diagnostic Procedure201	REPAIR FOR COMPONENT PARTS	
TROUBLE DIAGNOSES FOR SYMPTOMS 202	Manual Shaft	
Wiring Diagram — AT — NONDTC	Oil Pump	
	•	
O/D OFF Indicator Lamp Does Not Come On 205	Control Valve Assembly	
Engine Cannot Be Started in "P" and "N" Position 207	Control Valve Upper Body	
In "P" Position, Vehicle Moves Forward or Backward	Control Valve Lower Body	
When Pushed	Reverse Clutch	
In "N" Position, Vehicle Moves	High Clutch	
Large Shock. "N" \rightarrow "R" Position211	Forward and Overrun Clutches	
Vehicle Does Not Creep Backward in "R" Position 212	Low & Reverse Brake	
Vehicle Does Not Creep Forward in "D", "2" or "1"	Rear Internal Gear, Forward Clutch Hub and Over	
Position	run Clutch Hub	
Vehicle Cannot Be Started From D1 217	Output Shaft, Idler Gear, Reduction Pinion Gear and	
A/T Does Not Shift: D1 \rightarrow D2 or Does Not Kickdown:	Bearing Retainer	
$D4 \to D2 220$	Band Servo Piston Assembly	
A/T Does Not Shift: $D2 \rightarrow D3$	Final Drive	358
A/T Does Not Shift: D3 \rightarrow D4	ASSEMBLY	. 362
A/T Does Not Perform Lock-Up228	Assembly (1)	362
A/T Does Not Hold Lock-Up Condition 229	Adjustment (1)	363
Lock-Up Is Not Released231	Assembly (2)	
Engine Speed Does Not Return to Idle (Light Brak-	Adjustment (2)	
ing D4 \rightarrow D3)232	Assembly (3)	
A/T Does Not Shift: D4 → D3, When Overdrive Con-	SERVICE DATA AND SPECIFICATIONS (SDS)	
trol Switch "ON" → "OFF"	General Specifications	
A/T Does Not Shift: D ₃ → 2 ₂ , When Selector Lever	Vehicle Speed When Shifting Gears	
"D" \rightarrow "2" Position	Vehicle Speed When Performing and Releasing	
A/T Does Not Shift: 22 → 11 , When Selector Lever	Look-Up	385

Α

В

ΑT

D

Е

F

G

Н

J

Κ

Stall Revolution	385	Output Shaft	392
Line Pressure	385	Bearing Retainer	
Control Valves	386	Total End Play	
Accumulator	386	Reverse Clutch End Play	
Clutch and Brakes	387	Removal and Installation	393
Final Drive	389	Shift Solenoid Valves	393
Planetary Carrier and Oil Pump	390	Solenoid Valves	393
Input Shaft	390	A/T Fluid Temperature Sensor	393
Reduction Pinion Gear		Revolution Sensor	393
Band Servo	391	Dropping Resistor	393

INDEX FOR DTC

INDEX FOR DTC PFP:00024

Alphabetical Index

ACS008HT

D

F

G

Н

NOTE:

If DTC "U1000" is displayed with other DTC, first perform the trouble diagnosis for "DTC U1000 CAN COMMUNICATION LINE". Refer to $\Delta T-95$.

	DTC	
Items (CONSULT-II screen terms)	CONSULT-II	Reference page
(00.1002. 11.00.100.10.11.0)	GST*1	
A/T 1ST GR FNCTN	P0731	<u>AT-120</u>
A/T 2ND GR FNCTN	P0732	<u>AT-125</u>
A/T 3RD GR FNCTN	P0733	<u>AT-130</u>
A/T 4TH GR FNCTN	P0734	<u>AT-135</u>
A/T TCC S/V FNCTN	P0744	<u>AT-147</u>
ATF TEMP SEN/CIRC	P0710	<u>AT-104</u>
BATT/FLUID TEMP SEN	_	<u>AT-187</u>
CAN COMM CIRCUIT	U1000	<u>AT-95</u>
CONTROL UNIT (RAM)	_	<u>AT-198</u>
CONTROL UNIT (ROM)	_	<u>AT-198</u>
CONT UNIT(EEP ROM)	_	<u>AT-200</u>
ENGINE SPEED SIG	P0725	<u>AT-115</u>
LINE PRESSURE S/V	P0745	<u>AT-155</u>
OVERRUN CLUTCH S/V	P1760	<u>AT-177</u>
PNP SW/CIRC	P0705	<u>AT-98</u>
SHIFT SOLENOID/V A* ²	P0750	<u>AT-162</u>
SHIFT SOLENOID/V B*2	P0755	<u>AT-167</u>
T/C CLUTCH SOL/V	P0740	<u>AT-142</u>
THROTTLE POSI SEN* ²	P1705	<u>AT-172</u>
VHCL SPEED SEN-A/T*3	P0720	<u>AT-109</u>
VHCL SPEED SEN-MTR	_	AT-182

^{*1:} These numbers are prescribed by SAE J2012.

Revision: 2005 March AT-5 2005 X-Trail

^{*2:} When the fail-safe operation occurs, the MIL illuminates.

^{*3:} The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

INDEX FOR DTC

DTC No. Index

NOTE:

If DTC "U1000" is displayed with other DTC, first perform the trouble diagnosis for "DTC U1000 CAN COMMUNICATION LINE". Refer to $\frac{AT-95}{2}$.

DTC CONSULT-II GST*1	ltems (CONSULT-II screen terms)	Reference page
P0705	PNP SW/CIRC	<u>AT-98</u>
P0710	ATF TEMP SEN/CIRC	<u>AT-104</u>
P0720	VHCL SPEED SEN-A/T*3	<u>AT-109</u>
P0725	ENGINE SPEED SIG	<u>AT-115</u>
P0731	A/T 1ST GR FNCTN	<u>AT-120</u>
P0732	A/T 2ND GR FNCTN	<u>AT-125</u>
P0733	A/T 3RD GR FNCTN	AT-130
P0734	A/T 4TH GR FNCTN	<u>AT-135</u>
P0740	T/C CLUTCH SOL/V	AT-142
P0744	A/T TCC S/V FNCTN	<u>AT-147</u>
P0745	LINE PRESSURE S/V	<u>AT-155</u>
P0750	SHIFT SOLENOID/V A*2	AT-162
P0755	SHIFT SOLENOID/V B*2	<u>AT-167</u>
P1705	THROTTLE POSI SEN*2	AT-172
P1760	OVERRUN CLUTCH S/V	AT-177
U1000	CAN COMM CIRCUIT	<u>AT-95</u>
_	BATT/FLUID TEMP SEN	<u>AT-187</u>
_	CONTROL UNIT (RAM)	<u>AT-198</u>
_	CONTROL UNIT (ROM)	<u>AT-198</u>
_	CONT UNIT(EEP ROM)	<u>AT-200</u>
	VHCL SPEED SEN-MTR	<u>AT-182</u>

^{*1:} These numbers are prescribed by SAE J2012.

^{*2:} When the fail-safe operation occurs, the MIL illuminates.

^{*3:} The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

PRECAUTIONS PFP:00001

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT **BELT PRE-TENSIONER"**

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for On Board Diagnostic (OBD) System of A/T and Engine


The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect battery negative cable from battery negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connectors are free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect the rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

Precautions ACS007QN

Before connecting or disconnecting the TCM harness connector, turn ignition switch OFF and disconnect battery negative cable from battery negative terminal. Failure to do so may damage the TCM. Because battery voltage is applied to TCM even if ignition switch is turned off.

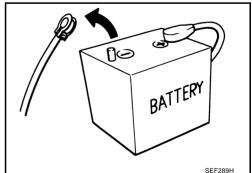


ΑT

Α


В

 When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break).

Make sure that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

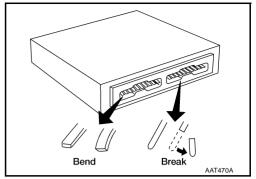

 Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. Refer to <u>AT-77</u>, "TCM Terminals and Reference <u>Value"</u>.

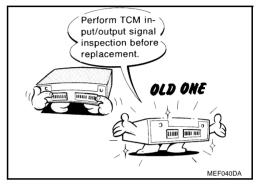

- After performing each TROUBLE DIAGNOSIS, perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCE-DURE".
 - The DTC should not be displayed in the "DTC Confirmation Procedure" if the repair is completed.
- Before proceeding with disassembly, thoroughly clean the outside of the transaxle. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transaxle.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transaxle is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced.
 Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- Clean or replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer. Refer to AT-9, "ATF COOLER SERVICE".
- After overhaul, refill the transaxle with new ATF.
- When the A/T drain plug is removed, only some of the fluid is drained. Old A/T fluid will remain in torque converter and ATF cooling system.
 - Always follow the procedures under "Changing A/T Fluid" in the AT section when changing A/T fluid. Refer to "Changing A/T Fluid", AT-17, "A/T FLUID".



Service Notice or Precautions ATF COOLER SERVICE

CS007QO

If A/T fluid contains frictional material (clutches, bands, etc.), or if an A/T is repaired, overhauled, or replaced, inspect and clean the A/T oil cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. Check Service Bulletins for latest A/T oil cooler cleaning procedure. For radiator replacement, refer to CO-11, "RADIATOR", CO-14, "RADIATOR (ALUMINUM TYPE)".

В

Α

TORQUE CONVERTER SERVICE

The torque converter should be replaced under any of the following conditions:

- External leaks in the hub weld area.
- Converter hub is scored or damaged.
- Converter pilot is broken, damaged or fits poorly into crankshaft.
- Steel particles are found after flushing the cooler and cooler lines.
- Pump is damaged or steel particles are found in the converter.
- Vehicle has TCC shudder and/or no TCC apply. Replace only after all hydraulic and electrical diagnoses have been made. (Converter clutch material may be glazed.)
- Converter is contaminated with engine coolant containing antifreeze.
- Internal malfunction of stator roller clutch.
- Heavy clutch debris due to overheating (blue converter).
- Steel particles or clutch lining material found in fluid filter or on magnet indicates that lining material came from converter when no internal parts in unit are worn or damaged.

The torque converter should not be replaced if:

- The fluid has an odor, is discolored, and there is no evidence of metal or clutch facing particles.
- The threads in one or more of the converter bolt holes are damaged.
- Transaxle malfunction did not display evidence of damaged or worn internal parts, steel particles or clutch plate lining material in unit and inside the fluid filter.
- Vehicle has been exposed to high mileage (only). The exception may be where the torque converter clutch damper plate lining has seen excess wear by vehicles operated in heavy and/or constant traffic, such as taxi, delivery or police use.

OBD-II SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through
 the blinking pattern of the O/D OFF indicator lamp or the malfunction indicator lamp (MIL). Refer to the
 table on <u>AT-82</u>, "<u>SELF-DIAGNOSTIC RESULT MODE</u>" for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.
 - Always perform the procedure "HOW TO ERASE DTC" on <u>AT-40, "HOW TO ERASE DTC"</u> to complete the repair and avoid unnecessary blinking of the MIL.
- The following self-diagnostic items can be detected using ECM self-diagnostic results mode* only when the O/D OFF indicator lamp does not indicate any malfunctions.
- PNP switch
- A/T 1st, 2nd, 3rd, or 4th gear function
- *: For details of OBD-II, refer to AT-39, "ON BOARD DIAGNOSTIC (OBD) SYSTEM".
- Certain systems and components, especially those related to OBD, may use a new style slidelocking type harness connector.

For description and how to disconnect, refer to PG-44, "HARNESS CONNECTOR".

ΑT

F

F

Н

K

Wiring Diagrams and Trouble Diagnosis

ACS007QP

When reading wiring diagrams, refer to the following:

- GI-14, "How to Read Wiring Diagrams"
- PG-2, "POWER SUPPLY ROUTING"

When performing trouble diagnosis, refer to the following:

- GI-10, "How to Follow Trouble Diagnoses"
- GI-26, "How to Perform Efficient Diagnosis for an Electrical Incident"

PREPARATION		PFP:00100	А
Special Service To	OIS re tools may differ from those of special servi	AC\$007QQ	
Tool number (Kent-Moore No.) Tool name	te tools may differ from those of special servi	Description	В
KV381054S0 (J-34286) Puller	a NT414	 Removing differential side bearing outer race Removing idler gear bearing outer race a: 250 mm (9.84 in) b: 160 mm (6.30 in) 	AT
ST33400001 (J-26082) Drift	a b NT086	 Installing differential side oil seal Installing oil pump housing oil seal a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia. 	F
KV40100621 (J-25273) Drift	a b	Installing differential side oil seal (With AWD models) a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	F
ST2505S001 (J-34301) Oil pressure gauge set 1. ST25051001 (J-34301)	NT086	Measuring line pressure	J
Oil pressure gauge 2. ST25052000 (J-34301)			K
Hose 3. ST25053000 (J-25695-3) Joint pipe			L
4. ST25054000 (J-25695-4) Adapter 5. ST25055000 (J-25695-5) Adapter	NT097		N
ST27180001 (J-25726-A) Puller	a NT424	Removing idler gear a: 100 mm (3.94 in) b: 110 mm (4.33 in) c: M8 x 1.25P	

Tool number (Kent-Moore No.) Tool name		Description
ST23540000 (J-25689-A) Pin punch	a b	Removing and installing parking rod plate and manual plate retaining pins a: 2.3 mm (0.091 in) dia. b: 4 mm (0.16 in) dia.
ST25710000 (J-25689-A) Pin punch	NT442	Aligning groove of manual shaft and hole of transaxle case a: 2 mm (0.08 in) dia.
KV32101000 (J-25689-A)	NT410	 Installing manual shaft retaining pin Removing and installing pinion mate shaft lock pin
Pin punch	a	a: 4 mm (0.16 in) dia.
KV31102400 (J-34285) Clutch spring compressor	NT410	Removing and installing clutch return springs a: 320 mm (12.60 in) b: 174 mm (6.85 in)
KV40100630		Installing reduction pinion gear bearing inner race
(J-26092) Drift	NT107	 Installing idler gear bearing inner race a: 67.5 mm (2.657 in) dia. b: 44 mm (1.73 in) dia. c: 38.5 mm (1.516 in) dia.
ST30720000 (J-25405) Bearing installer	a b	Installing idler gear bearing outer race a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.
ST35321000 (—) Drift	NT115	Installing output shaft bearing a: 49 mm (1.93 in) dia. b: 41 mm (1.61 in) dia.

Tool number (Kent-Moore No.) Tool name		Description	А
ST33230000 (J-25805-01) Drift	a b	Installing differential side bearing inner race a: 51 mm (2.01 in) dia. b: 28.5 mm (1.122 in) dia.	B AT
ST33220000 (—) Drift	NT084	Selecting differential side bearing adjusting shim a: 37 mm (1.46 in) dia. b: 31 mm (1.22 in) dia. c: 22 mm (0.87 in) dia.	D
ST3306S001	NT085	Pomoving differential side hearing inner race	F
ST3306S001 (J-22888-D) Differential side bearing puller set 1. ST33051001 (J-22888-D) Puller		Removing differential side bearing inner race a: 38 mm (1.50 in) dia. b: 28.5 mm (1.122 in) dia. c: 130 mm (5.12 in) d: 135 mm (5.31 in) e: 100 mm (3.94 in)	G
2. ST33061000 (J-8107-2) Adapter	B		
ST3127S000 (J-25765-A) Preload gauge		 Checking final drive assembly turning torque Checking reduction pinion gear turning torque 	I
1. GG91030000 (J-25765-A) Torque wrench			J
2. HT62940000 (—) Socket adapter	2—————————————————————————————————————		K
3. HT62900000 (—) Socket adapter	O NT124		L
ST35271000 (J-26091) Drift	a b	Installing idler gear a: 72 mm (2.83 in) dia. b: 63 mm (2.48 in) dia.	N
	NT115		

Tool number (Kent-Moore No.) Tool name		Description
KV38107700 (J-39713) Preload adapter		Selecting differential side bearing adjusting shim
	NT087	
KV38105210		Selecting differential side bearing adjusting shim
(J-39883) Preload adapter		Checking fluid drive assembly turning torque
	NT075	

Tool name		Description
Power tool		Loosening bolts and nuts
uller	PBIC0190E	Removing idler gear bearing inner race
	NT077	
Puller	a b NT411	Removing reduction pinion gear bearing inner race a: 60 mm (2.36 in) dia. b: 35 mm (1.38 in) dia.
Drift	a NTO83	Installing radial needle bearing on bearing retainer a: 36 mm (1.42 in) dia.
Drift	a	Installing manual shaft oil seal a: 22 mm (0.87 in) dia.
Drift	NT083	Removing radial needle bearing from bearing retainer a: 33.5 mm (1.319 in) dia.

Tool name		Description
Drift	a	Installing differential side bearing outer race (RH side) a: 75 mm (2.95 in) dia.
Drift	NT083	Installing differential side bearing outer race
		(LH side) a: 100 mm (3.94 in) dia.
	NT083	

A/T FLUID PFP:KLE40

Checking A/T Fluid

ACS007QS

Α


В

ΑT

F

Н

- Warm up engine.
- 2. Check for A/T fluid leakage.
- 3. Before driving, A/T fluid level can be checked at A/T fluid temperatures of 30 to 50°C (86 to 122°F) using "COLD" range on A/T fluid level gauge.
- a. Park vehicle on level surface and set parking brake.
- b. Start engine and move selector lever through each gear position. Leave selector lever in "P" position.
- c. Check A/T fluid level with engine idling.

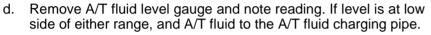

CAUTION:

When wiping away the A/T fluid level gauge, always use lint-free paper, not a cloth one.

e. Re-insert A/T fluid level gauge into A/T fluid charging pipe as far as it will go.

CAUTION:

Firmly fix the A/T fluid level gauge to the A/T fluid charging pipe using a stopper attached.

f. Remove A/T fluid level gauge and note reading. If reading is at low side of range, add A/T fluid to the A/T fluid charging pipe.

CAUTION:

Do not overfill.


- 4. Drive vehicle for approximately 5 minutes in urban areas.
- 5. Recheck A/T fluid level at A/T fluid temperatures of 50 to 80°C (122 to 176°F) using "HOT" range on A/T fluid level gauge.


CAUTION:

- When wiping away the A/T fluid level gauge, always use lint-free paper, not a cloth one.
- Firmly fix the A/T fluid level gauge to the A/T fluid charging pipe using a stopper attached.
- Check A/T fluid condition.
 - If A/T fluid is very dark or smells burned, checking operation of A/T. Flush cooling system after repair of A/T.
 - If A/T fluid contains frictional material (clutches, bands, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of A/T. Refer to <u>CO-11</u>, <u>"RADIATOR"</u>, <u>CO-14</u>, <u>"RADIATOR</u> (<u>ALUMINUM TYPE</u>)".
- 7. Install the removed A/T fluid level gauge in the A/T fluid charging pipe.

CAUTION:

Firmly fix the A/T fluid level gauge to the A/T fluid charging pipe using a stopper attached.

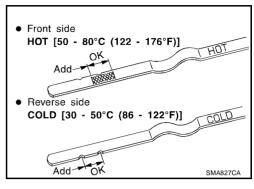

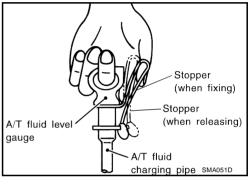

L

K



A/T FLUID

Changing A/T Fluid

ACS007QT

- 1. Warm up A/T fluid.
- 2. Stop engine.
- Drain A/T fluid from drain plug and refill with new A/T fluid. Always refill same volume with drained fluid.

CAUTION:

Do not reuse drain plug gasket.

Fluid grade:

NISSAN Automatic Transmission Fluid (ATF),
DEXRONTM III/MERCONTM, or equivalent ATF.
Refer to MA-11, "RECOMMENDED FLUIDS AND
LUBRICANTS".

Fluid capacity (With torque converter):

Approx. 8.5 ℓ (9 US qt, 7-1/2 Imp qt)

Drain plug

(3.5 kg-m, 25 ft-lb)

- 4. Run engine at idle speed for 5 minutes.
- 5. Check A/T fluid level and condition. Refer to AT-17, "Checking A/T Fluid" . If A/T fluid is still dirty, repeat steps 2 through 5.

A/T Fluid Cooler Cleaning

ACS008HQ

Whenever an automatic transaxle is repaired, overhauled, or replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of A/T fluid. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as A/T fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


A/T FLUID COOLER CLEANING PROCEDURE

- Position an oil pan under the automatic transaxle's inlet and outlet cooler hoses.
- 2. Identify the inlet and outlet fluid cooler hoses.
- 3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any A/T fluid that remains in the cooler hoses to drain into the oil pan.

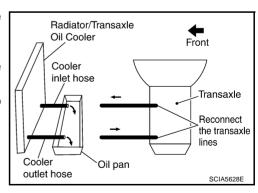



A/T FLUID

 Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray cooler cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.
- 6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.
- 7. Insert the tip of an air gun into the end of the cooler outlet hose.
- Wrap a shop rag around the air gun tip and of the cooler outlet hose.

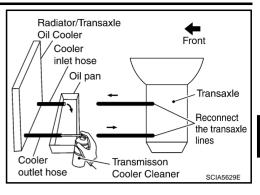

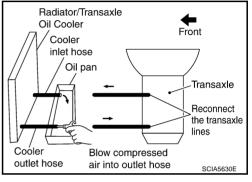

- Blow compressed air regulated to 5 9 kg/cm² (70 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining fluid.
- 10. Repeat steps 5 through 9 three additional times.
- 11. Position an oil pan under the banjo bolts that connect the fluid cooler steel lines to the transaxle.
- 12. Remove the banjo bolts.
- 13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.
- 14. Blow compressed air regulated to 5 9 kg/cm² (70 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining fluid.
- 15. Ensure all debris is removed from the steel cooler lines.
- 16. Ensure all debris is removed from the banjo bolts and fittings.
- 17. Perform AT-19, "A/T FLUID COOLER DIAGNOSIS PROCEDURE".


A/T FLUID COOLER DIAGNOSIS PROCEDURE

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

- Position an oil pan under the automatic transaxle's inlet and outlet cooler hoses.
- 2. Clean the exterior and tip of the cooler inlet hose.
- Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray cooler cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.
- 4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until fluid flows out of the cooler inlet hose for 5 seconds.

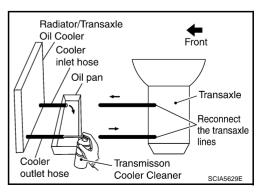

F

Α

В

ΑT

Н

ı


K

L


M

IVI

Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

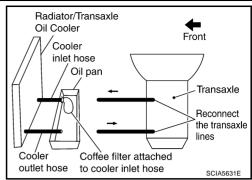


- 6. Insert the tip of an air gun into the end of the cooler outlet hose.
- 7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
- Blow compressed air regulated to 5 9 kg/cm² (70 130 psi) through the cooler outlet hose to force any remaining A/T fluid into the coffee filter.
- 9. Remove the coffee filter from the end of the cooler inlet hose.
- 10. Perform AT-20, "A/T FLUID COOLER INSPECTION PROCE-DURE".

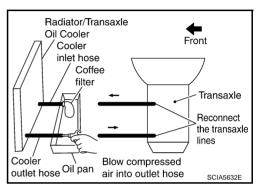


A/T FLUID COOLER INSPECTION PROCEDURE

- 1. Inspect the coffee filter for debris.
- a. If small metal debris less than 1mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.

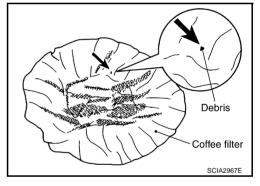

b. If one or more pieces of debris are found that are over 1mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

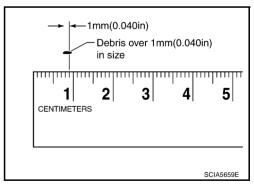


A/T FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

A/T CONTROL SYSTEM

PFP:31036

Cross-Sectional View ACS007JH

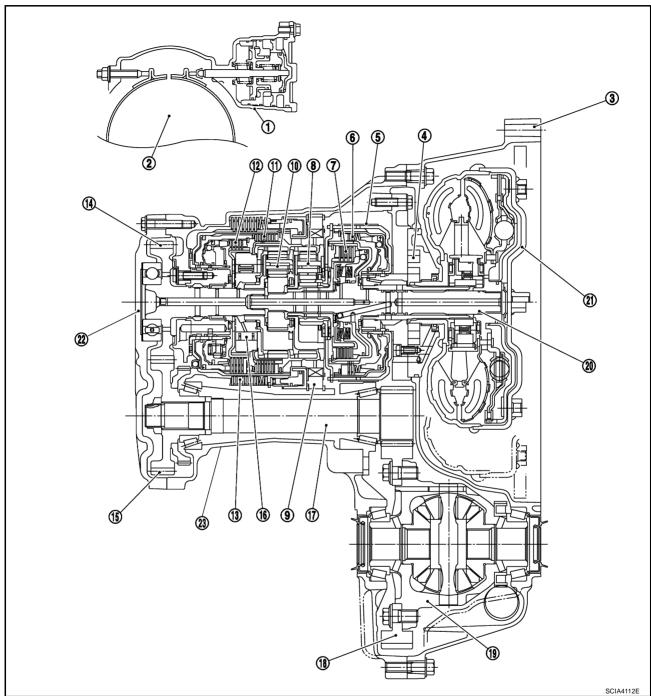

- Band servo piston assembly 1.
- Oil pump 4.
- High clutch 7.
- Rear planetary gear
- 13. Low & reverse brake
- Forward one-way clutch 16.
- Differential case 19.
- 22. Side cover

- 2. Reverse clutch drum
- 5. Brake band
- Front planetary gear 8.
- 11. Forward clutch
- 14. Output gear
- 17. Reduction pinion gear
- 20. Input shaft
- 23. Transaxle case

- 3. Converter housing
- 6. Reverse clutch
- Low one-way clutch 9.
- 12. Overrun clutch
- 15. Idler gear
- 18. Final gear
- 21. Torque converter

AT-21 Revision: 2005 March 2005 X-Trail В

ΑT


D

Е

Н

Shift Mechanism CONSTRUCTION

ACS007JI

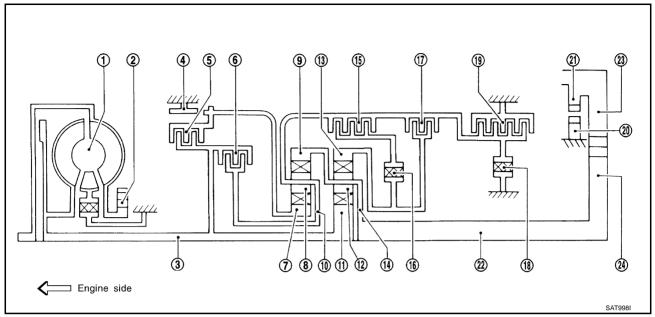

- 1. Torque converter
- 4. Brake band
- 7. Front sun gear
- 10. Front planetary carrier
- 13. Rear internal gear
- 16. Forward one-way clutch
- 19. Low & reverse brake
- 22. Output shaft

- 2. Oil pump
- 5. Reverse clutch
- 8. Front pinion gear
- 11. Rear sun gear
- 14. Rear planetary carrier
- 17. Overrun clutch
- 20. Parking pawl
- 23. Idler gear

- 3. Input shaft
- 6. High clutch
- 9. Front internal gear
- 12. Rear pinion gear
- 15. Forward clutch
- 18. Low one-way clutch
- 21. Parking gear
- 24. Output gear

FUNCTION OF CLUTCH AND BRAKE

	Clutch and brake components	Abbr.	Function
5	Reverse clutch	R/C	To transmit input power to front sun gear 7.
6	High clutch	H/C	To transmit input power to front planetary carrier 10.
15	Forward clutch	F/C	To connect front planetary carrier 10 with forward one-way clutch 16.
17	Overrun clutch	O/C	To connect front planetary carrier 10 with rear internal gear 13.
4	Brake band	B/B	To lock front sun gear 7.
16	Forward one-way clutch	F/O.C	When forward clutch 15 is engaged, to stop rear internal gear 13 from rotating in opposite direction against engine revolution.
18	Low one-way clutch	L/O.C	To stop front planetary carrier 10 from rotating in opposite direction against engine revolution.
19	Low & reverse brake	L & R/B	To lock front planetary carrier 10 .

CLUTCH AND BAND CHART Band servo F/O.C R/C H/C F/C O/C L/O.C L&R/B Shift posi-Lock-Remarks 2nd 3rd 4th 5 6 15 17 16 18 19 tion up apply release apply PARK Ρ **POSITION REVERSE** R 0 0 **POSITION NEUTRAL** Ν **POSITION** 0 *1D В В 1st Automatic 2nd 0 *1A 0 В shift D*4 $1 \Leftrightarrow 2 \Leftrightarrow 3$ В 3rd 0 0 *1A *2C С *10 ⇔ 4 0 С *3C С 4th 0 0 0 0 В В 1st Automatic 2 0 2nd 0 0 В shift $1 \Leftrightarrow 2 \Leftarrow 3$ 0 0 *2C С 0 В 3rd 0 0 В В 0 1st Locks (held stationary) 1 2nd 0 0 В 0 in 1st speed $1 \leftarrow 2 \leftarrow 3$ 3rd 0 0 0 *2C В

- *1: Operates when overdrive control switch is set in "OFF" position.
- *2: Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, brake band does not contract because oil pressure area on the "release" side is greater than that on the "apply" side.
- *3: Oil pressure is applied to 4th "apply" side in condition *2 above, and brake band contracts.
- *4: A/T will not shift to 4th when overdrive control switch is set in "OFF" position.
- O: Operates.
- A: Operates when throttle opening is less than 3/16, activating engine brake.
- B: Operates during "progressive" acceleration.
- C: Operates but does not affect power transmission.
- D: Operates when throttle opening is less than 3/16, but does not affect engine brake.

M

Α

В

ΑT

D

Е

F

Н


J

Revision: 2005 March AT-23 2005 X-Trail


POWER TRANSMISSION

"N" and "P" Positions

- "N" position
 - Power from the input shaft is not transmitted to the output shaft because the clutches do not operate.
- "P" position
 - Similar to the "N" position, the clutches do not operate. The parking pawl engages with the parking gear to mechanically hold the output shaft so that the power train is locked.

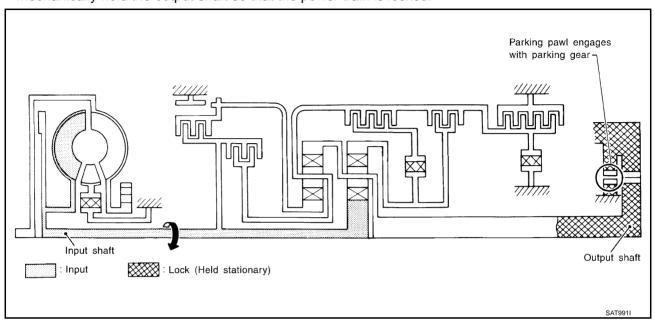

"11 " Position	
Forward clutch	As overrun clutch engages, rear internal gear is locked by the operation of low and
 Forward one-way clutch 	reverse brake.
Overrun clutch	This is different from that of D1 and 21.
Low & reverse brake	
Engine brake	Overrun clutch always engages, therefore engine brake can be obtained when decelerating.

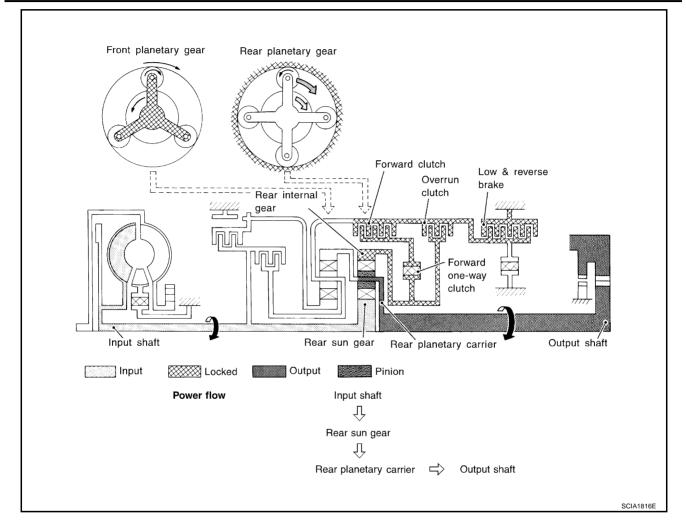

ΑT

Α

В

D

Е

F


G

Н

J


<

"D1 " and "21 " Positions Forward one-way clutch Forward clutch Low one-way clutch Overrun clutch engagement conditions (Engine brake) Rear internal gear is locked to rotate counterclockwise because of the functioning of these three clutches. D1: Overdrive control switch "OFF" and throttle opening is less than 3/16 21: Always engaged At D1 and 21 positions, engine brake is not activated due to free turning of low oneway clutch.

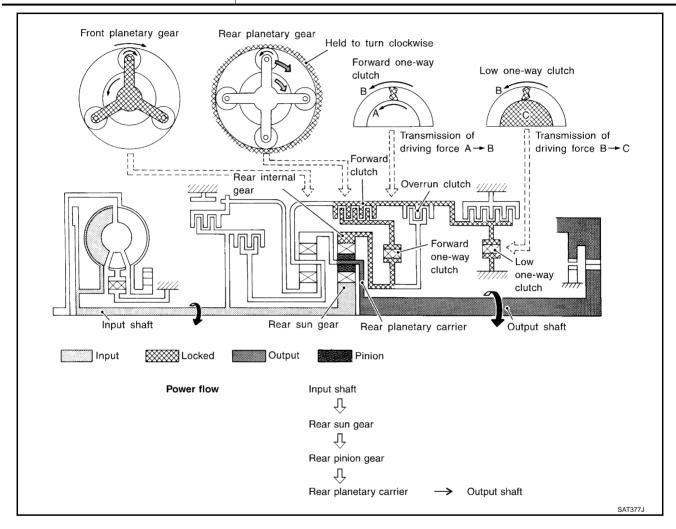

"D2 ", "22 " and "12 " Positions

Forward clutch	Rear sun gear drives rear planetary carrier and combined front internal gear. Front internal gear now
Forward one-way clutchBrake band	rotates around front sun gear accompanying front planetary carrier. As front planetary carrier transfers the power to rear internal gear through forward clutch and forward one-way clutch, this rotation of rear internal gear increases the speed of rear planetary carrier compared with that of the 1st speed.
Overrun clutch engagement conditions	D2: Overdrive control switch "OFF" and throttle opening is less than 3/16 22 and 12: Always engaged

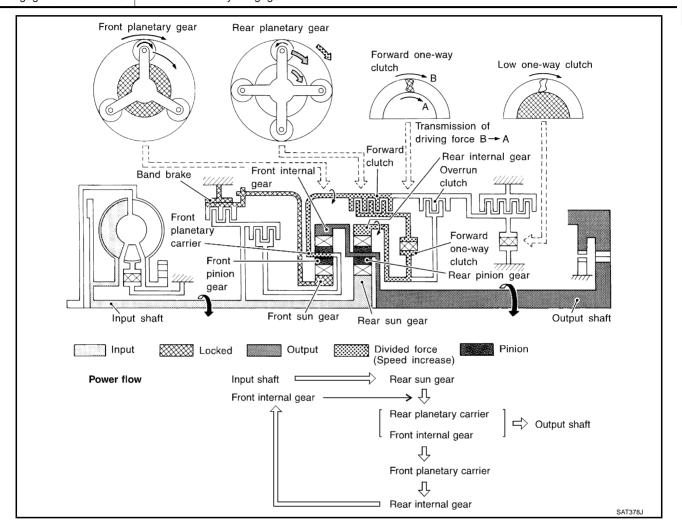

ΑТ

В

D

Е

G

Н

|

J

K

ı

"D3 ", "23 " and "13 " Positions


High clutchForward clutch

Input power is transmitted to front planetary carrier through high clutch. And front planetary carrier is connected to rear internal gear by operation of forward clutch and forward one-way clutch.


 Forward one-way clutch This rear internal gear rotation and another input (the rear sun gear) accompany rear planetary carrier to turn at the same speed.

Overrun clutch engagement conditions

D3: Overdrive control switch "OFF" and throttle opening is less than 3/16 23 and 13: Always engaged

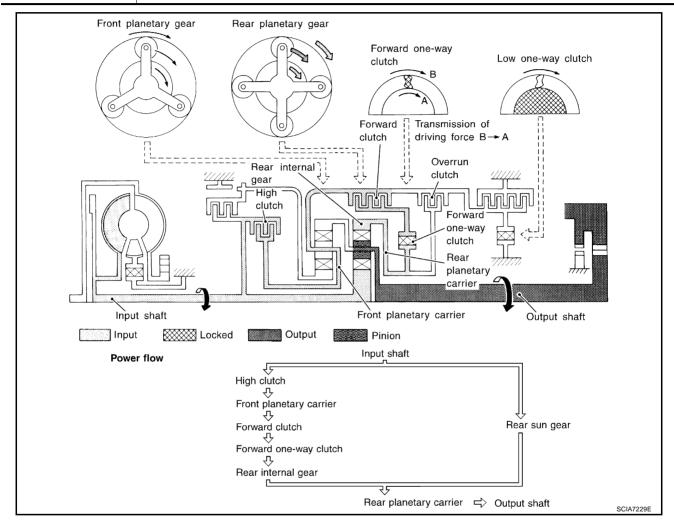

"D4" (OD) Position High clutch Brake band Forward clutch (Does not affect power transmission) Engine brake Input power is transmitted to front carrier through high clutch. This front carrier turns around the sun gear which is fixed by brake band and makes front internal gear (output) turn faster. At D4 position, there is no one-way clutch in the power transaxle line and engine brake can be obtained when decelerating.

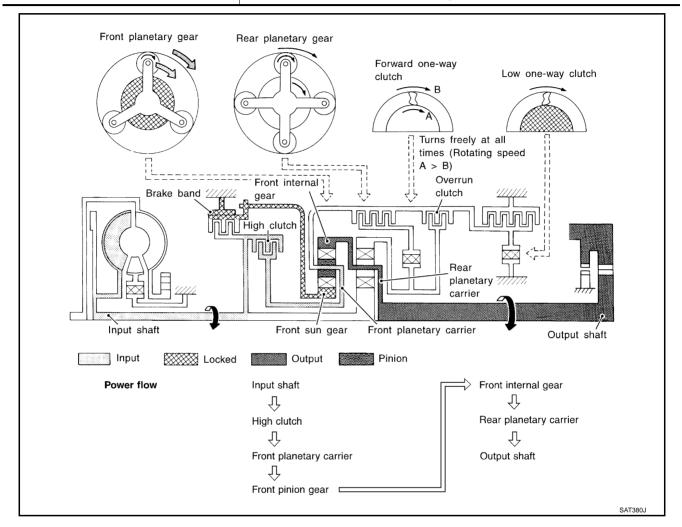

ΑT

Α

В


D

F

J

K

"R" Position Reverse clutch Low & reverse brake Engine brake Front planetary carrier is stationary because of the operation of low and reverse brake. Input power is transmitted to front sun gear through reverse clutch, which drives front internal gear in the opposite direction. As there is no one-way clutch in the power transaxle line, engine brake can be obtained when decelerating.

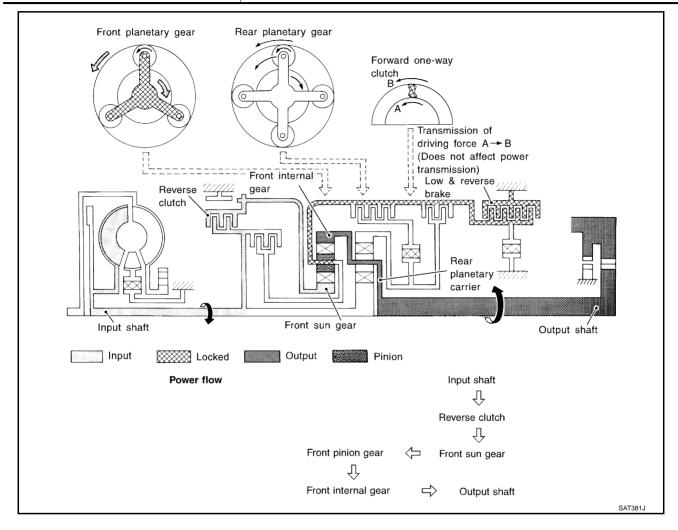

TCM Function

The function of the TCM is to:


- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, and engine brake operation.
- Send required output signals to the respective solenoids.

CONTROL SYSTEM OUTLINE

The automatic transmission senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

SWITCHES & SENSORS		TCM		ACTUATORS
PNP switch Accelerator pedal position (APP) sensor Closed throttle position signal Wide open throttle position signal Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed sensor Overdrive control switch signal Stop lamp switch signal	>	Shift control Line pressure control Lock-up control Overrun clutch control Timing control Fail-safe control Self-diagnosis CONSULT-II communication line control Duet-EU control	>	Shift solenoid valve A Shift solenoid valve B Overrun clutch solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve O/D OFF indicator lamp

CONTROL SYSTEM DIAGRAM

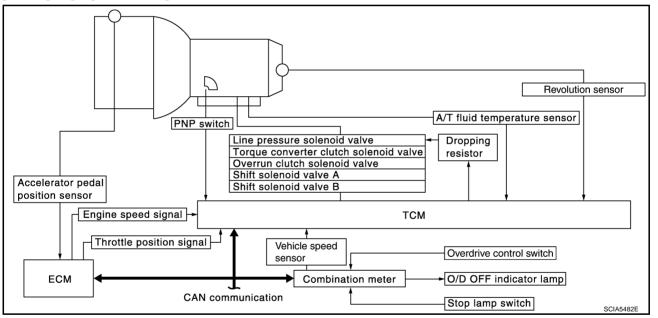

AT

Α

В

F

D

G

Н

I

J

K

L

N /I

CAN Communication SYSTEM DESCRIPTION

ACS007JK

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. For details, refer to LAN-16, "CAN Communication Unit".

Input/Output Signal of TCM

ACS007.II

	Control item	Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diag- nostics function
	Accelerator pedal position signal	Х	Х	Х	Х	Х	Х	Х
	Vehicle speed sensor A/T (Revolution sensor)	Х	Х	Х	Х		Х	Х
	Vehicle speed sensor MTR ^(*1)	Х	Х	Х	Х			Х
	Closed throttle position signal ^(*5)	(*2) X	(*2) X		Х			(*4) X
Input	Wide open throttle position signal ^(*5)	(*2) X	(*2) X					(*4) X
	Engine speed signal				Х			Х
	PNP switch	Х	Х	Х	Х	Х	Х	(*4) X
	Stop lamp switch signal ^(*5)		Х		Х	Х		(*4) X
	A/T fluid temperature sensors	Х	Х		Х	Х		Х
	TCM power supply voltage signal	Х						Х
	Shift solenoid valve A/B		Х				Х	Х
	Line pressure solenoid	Х					Х	Х
Out- put	Torque converter clutch solenoid valve				х		Х	Х
	Overrun clutch solenoid valve		Х			Х	Х	Х
	O/D OFF indicator lamp ^(*6)							Х

^{*1:} Spare for vehicle speed sensor-A/T (revolution sensor)

^{*2:} Spare for accelerator pedal position signal

^{*3:} If these input and output signals are different, the TCM triggers the fail-safe function.

^{*4:} Used as a condition for starting self-diagnostics; if self-diagnostics are not started, it is judged that there is some kind of error.

^{*5:} Input by CAN communications.

^{*6:} Output by CAN communications.

Line Pressure Control


ACS007JM

- TCM has various line pressure control characteristics to match the driving conditions.
- An ON-OFF duty signal is sent to the line pressure solenoid valve based on TCM characteristics.
- Hydraulic pressure on the clutch and brake is electronically controlled through the line pressure solenoid valve to accommodate engine torque. This results in smooth shift operation.

Α


NORMAL CONTROL

The characteristics of line pressure to throttle opening.

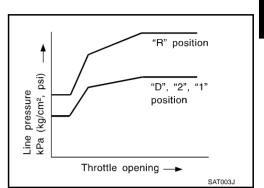


BACK-UP CONTROL (ENGINE BRAKE)

If the selector lever is shifted to "2" position while driving in D4, D3 great driving force is applied to the clutch inside the transaxle. Clutch operating pressure (line pressure) must be increased to deal with this driving force.

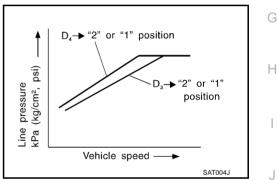

DURING SHIFT CHANGE

The line pressure is temporarily reduced corresponding to a change in engine torque when shifting gears (that is, when the shift solenoid valve is switched for clutch operation) to reduce shifting shock.

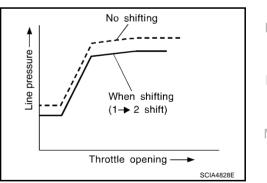


ΑT


F

AT LOW FLUID TEMPERATURE

- Fluid viscosity and frictional characteristics of the clutch facing change with fluid temperature. Clutch engaging or band-contacting pressure is compensated for, according to fluid temperature, to stabilize shifting quality.
- The line pressure is reduced below 60°C (140°F) to prevent shifting shock due to low viscosity of A/T fluid when temperature is low.

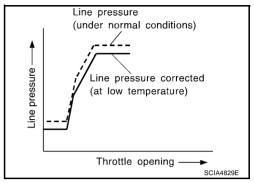

 Line pressure is increased to a maximum irrespective of the throttle opening when fluid temperature drops to −10°C (14°F). This pressure rise is adopted to prevent a delay in clutch and brake operation due to extreme drop of fluid viscosity at low temperature.

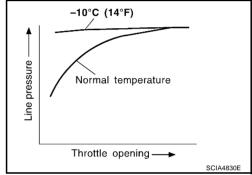

Shift Control


ACS007JN

The shift is regulated entirely by electronic control to accommodate vehicle speed and varying engine operations. This is accomplished by electrical signals transmitted by the revolution sensor and the ECM (accelerator pedal position sensor). This results in improved acceleration performance and fuel economy.

CONTROL OF SHIFT SOLENOID VALVES A AND B

The TCM activates shift solenoid valves A and B according to signals from the accelerator pedal position sensor and revolution sensor to select the optimum gear position on the basis of the shift schedule memorized in the TCM.


The shift solenoid valve performs simple ON-OFF operation. When set to "ON", the drain circuit closes and pilot pressure is applied to the shift valve.

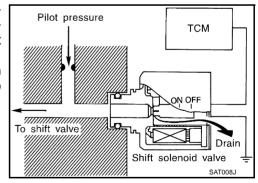

RELATION BETWEEN SHIFT SOLENOID VALVES A AND B AND GEAR POSITIONS

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

CONTROL OF SHIFT VALVES A AND B

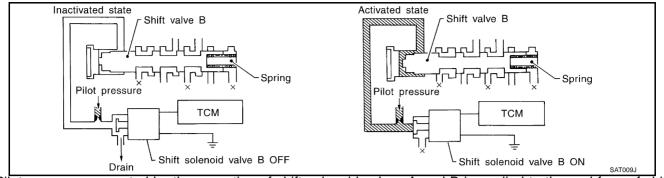

Pilot pressure generated by the operation of shift solenoid valves A and B is applied to the end face of shift valves A and B.

The figure above shows the operation of shift valve B. When the shift solenoid valve is "ON", pilot pressure applied to the end face of the shift valve overcomes spring force, moving the valve upward.

Lock-Up Control

The torque converter clutch piston in the torque converter is locked to eliminate torque converter slip to increase power transmission efficiency. The solenoid valve is controlled by an ON-OFF duty signal sent from the TCM. The signal is converted to an oil pressure signal which controls the torque converter clutch piston.


CONDITIONS FOR LOCK-UP OPERATION

When vehicle is driven in 3rd and 4th gear positions, vehicle speed and throttle opening are detected. If the detected values fall within the lock-up zone memorized in the TCM, lock-up is performed.

Overdrive control switch	ON	OFF	
Selector lever	"	D" position	
Gear position	D4	D3	
Vehicle speed sensor	More than set value		
Throttle position sensor	Less than set opening		
Closed throttle position switch	OFF		
A/T fluid temperature sensor	More than 40°C (104°F)		

TORQUE CONVERTER CLUTCH SOLENOID VALVE CONTROL

Lock-Up Control System Diagram

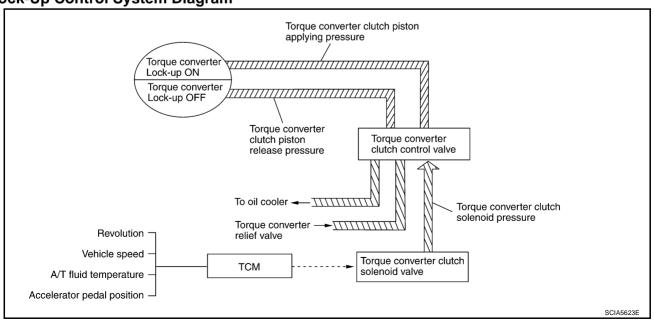

Revision: 2005 March AT-35 2005 X-Trail

Α

АТ

В

D

Е

F

ACS007JO

7

Н

|

K

Lock-Up Released

• In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by draining the torque converter clutch piston applying pressure and the torque converter clutch piston release pressure is generated.

In this way, the torque converter clutch piston is not coupled.

Lock-Up Applied

In the lock-up applied state, the torque converter clutch control valve is set into the locked state by generating the torque converter clutch piston applying pressure and the torque converter clutch piston release pressure is drained.

In this way, the torque converter clutch piston is pressed and coupled.

SMOOTH LOCK-UP CONTROL

When shifting from the lock-up released state to the lock-up applied state, the current output to the torque converter clutch solenoid is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

Half-Clutched State

The current output from the TCM to the torque converter clutch solenoid is varied to steadily increase the torque converter clutch solenoid pressure.


In this way, the lock-up applying pressure gradually rises and while the torque converter clutch piston is put into half-clutched status, the torque converter clutch piston applying pressure is increased and the coupling is completed smoothly.

Engine Brake Control (Overrun Clutch Control)

ACS007JP

Forward one-way clutch is used to reduce shifting shocks in downshifting operations. This clutch transmits engine torque to the wheels. However, drive force from the wheels is not transmitted to the engine because the one-way clutch rotates idle. This means the engine brake is not effective. The overrun clutch operates when the engine brake is needed.

OVERRUN CLUTCH OPERATING CONDITIONS

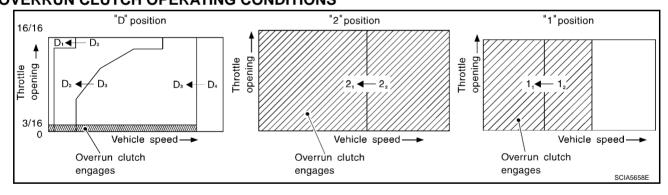

Selector lever position	Gear position	Throttle opening	
"D" position	D1, D2, D3 gear position	Less than 3/16	
"2" position	21, 22 gear position	At any position	
"1" position	11, 12 gear position	At any position	


A/T CONTROL SYSTEM

OVERRUN CLUTCH SOLENOID VALVE CONTROL

The overrun clutch solenoid valve is operated by an ON-OFF signal transmitted by the TCM to provide overrun clutch control (engine brake control).

When this solenoid valve is "ON", the pilot pressure drain port closes. When it is "OFF", the drain port opens.

During the solenoid valve "ON" pilot pressure is applied to the end face of the overrun clutch control valve.

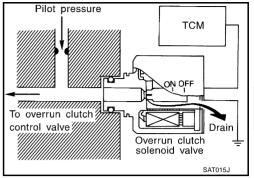


OVERRUN CLUTCH CONTROL VALVE OPERATION

When the solenoid valve is "ON", pilot pressure is applied to the overrun clutch control valve. This pushes up the overrun clutch control valve. The line pressure is then shut off so that the clutch does not engage.

When the solenoid valve is "OFF", pilot pressure is not generated. At this point, the overrun clutch control valve moves downward by spring force. As a result, overrun clutch operation pressure is provided by the overrun clutch reducing valve. This causes the overrun clutch to engage.

In the "2" and "1" positions, the overrun clutch control valve remains pushed down so that the overrun clutch is engaged at all times.

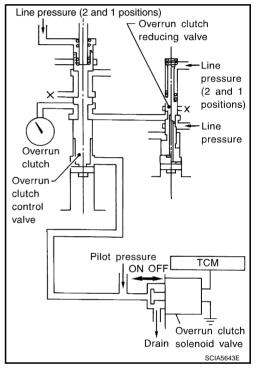

Α

AT

В

D

F

G

Н

|

1.7

M

A/T CONTROL SYSTEM

Control Valve FUNCTION OF CONTROL VALVES

ACS007JQ

Valve name	Function
Pressure regulator valve, plug and sleeve plug	Regulates oil discharged from the oil pump to provide optimum line pressure for all driving conditions.
Pressure modifier valve and sleeve	Used as a signal supplementary valve to the pressure regulator valve. Regulates pressure-modifier pressure (signal pressure) which controls optimum line pressure for all driving conditions.
Pilot valve	Regulates line pressure to maintain a constant pilot pressure level which controls lock-up mechanism, overrun clutch, shift timing.
Accumulator control valve	Regulates accumulator back-pressure to pressure suited to driving conditions.
Manual valve	Directs line pressure to oil circuits corresponding to select positions. Hydraulic pressure drains when the shift lever is in Neutral.
Shift valve A	Simultaneously switches three oil circuits using output pressure of shift solenoid valve A to meet driving conditions (vehicle speed, throttle opening, etc.). Provides automatic downshifting and upshifting (1st \rightarrow 2nd \rightarrow 3rd \rightarrow 4th gears/4th \rightarrow 3rd \rightarrow 2nd \rightarrow 1st gears) in combination with shift valve B.
Shift valve B	Simultaneously switches two oil circuits using output pressure of shift solenoid valve B in relation to driving conditions (vehicle speed, throttle opening, etc.). Provides automatic downshifting and upshifting (1st \rightarrow 2nd \rightarrow 3rd \rightarrow 4th gears/4th \rightarrow 3rd \rightarrow 2nd \rightarrow 1st gears) in combination with shift valve A.
Overrun clutch control valve	Switches hydraulic circuits to prevent engagement of the overrun clutch simultaneously with application of the brake band in D4 . (Interlocking occurs if the overrun clutch engages during D4 .)
1st reducing valve	Reduces low & reverse brake pressure to dampen engine-brake shock when downshifting from the 1st position 12 to 11.
Overrun clutch reducing valve	Reduces oil pressure directed to the overrun clutch and prevents engine-brake shock. In the 1st and 2nd positions, line pressure acts on the overrun clutch reducing valve to increase the pressure-regulating point, with resultant engine brake capability.
Torque converter relief valve	Prevents an excessive rise in torque converter pressure.
Torque converter clutch control valve, plug and sleeve	Activates or inactivates the lock-up function. Also provides smooth lock-up through transient application and release of the lock-up system.
1-2 accumulator valve and piston	Lessens the shock find when the 2nd gear band servo contracts, and provides smooth shifting.
3-2 timing valve	Switches the pace that oil pressure is released depending on vehicle speed; maximizes the high clutch release timing, and allows for soft downshifting.
Shuttle valve	Determines if the overrun clutch solenoid valve should control the 3-2 timing valve or the overrun clutch control valve and switches between the two.
Cooler check valve	At low speeds and with a small load when a little heat is generated, saves the volume of cooler flow, and stores the oil pressure for lock-up.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction ACS007011

A/T system has two self-diagnostic systems.

The first is emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the O/D OFF indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE".

OBD-II Function for A/T System

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to A/T system parts.

ACS007QW

One or Two Trip Detection Logic of OBD-II ONE TRIP DETECTION LOGIC

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st trip If the same malfunction as that experienced during the first test drive is sensed during the second test drive. the MIL will illuminate. — 2nd trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

ACS007QX

OBD-II Diagnostic Trouble Code (DTC) HOW TO READ DTC AND 1ST TRIP DTC

DTC and 1st trip DTC can be read by the following methods.

(P) with CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- 1st trip DTC No. is the same as DTC No.
- Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.

CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.

A sample of CONSULT-II display for DTC and 1st trip DTC is shown [on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CON-SULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

ΑT

Α

Н

2005 X-Trail

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RES		
DTC RESULTS	TIME	
PNP SW/CIRC [P0705]	0	
		SAT015H

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RES	ULTS	
DTC RESULTS	TIME	
PNP SW/CIRC [P0705]	1 t	
		SAT016K

Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For detail, refer to <u>EC-123, "CONSULT-II Function (ENGINE)"</u>.

Only one set of freeze frame data (either 1st trip freeze frame data of freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items		
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175	
2		Except the above items (Includes A/T related items)	
3	1st trip freeze frame data		

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.
- When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.


The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to <u>EC-48</u>, "<u>Emission-Related Diagnostic Information</u>".

- Diagnostic trouble codes (DTC)
- 1st trip diagnostic trouble codes (1st trip DTC)
- Freeze frame data

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

(I) HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
- 1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- 2. Turn CONSULT-II "ON" and touch "A/T".
- 3. Touch "SELF-DIAG RESULTS".
- 4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
- 5. Touch "ENGINE".
- 6. Touch "SELF-DIAG RESULTS".
- 7. Touch "ERASE". (The DTC in the ECM will be erased.)

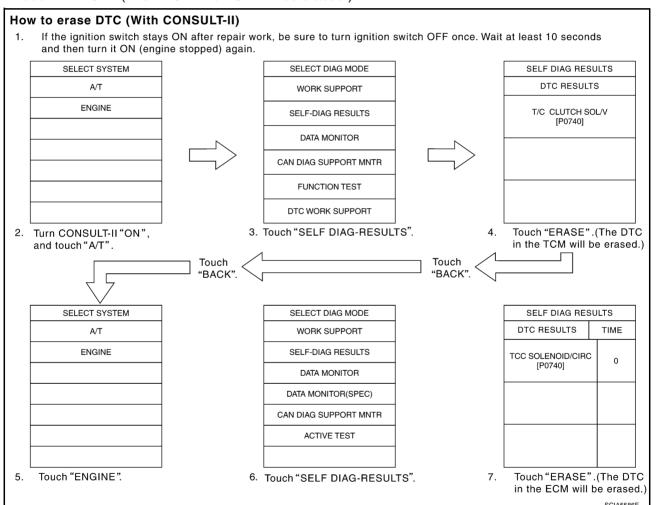

B HOW TO ERASE DTC (WITH GST)

- 1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- 2. Perform "TCM SELF-DIAGNOSTIC PROCEDURE (No Tools)". Refer to <u>AT-91, "TCM SELF-DIAGNOS-TIC PROCEDURE"</u>. (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
- 3. Select Mode 4 with Generic Scan Tool (GST). For details, refer to EC-136, "Generic Scan Tool (GST)

 Function".

Revision: 2005 March AT-41 2005 X-Trail

ΑT

В

F

G

Н

ı

K

./

HOW TO ERASE DTC (NO TOOLS)

The O/D OFF indicator lamp is located on the combination meter.


- 1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- Perform "TCM SELF-DIAGNOSTIC PROCEDURE (No Tools)". Refer to <u>AT-91, "TCM SELF-DIAGNOS-TIC PROCEDURE"</u>. (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
- 3. Perform "OBD-II SELF-DIAGNOSTIC PROCEDURE (No tools)". Refer to EC-60, "How to Erase DTC".

Malfunction Indicator Lamp (MIL) DESCRIPTION

ACS007QY

The MIL is located on the instrument panel.

- 1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to <u>DI-25, "WARNING LAMPS"</u>, or see <u>EC-659, "MIL AND DATA LINK CONNECTOR"</u>.
- 2. When the engine is started, the MIL should go off.
 - If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

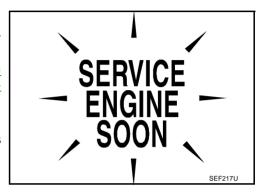

TROUBLE DIAGNOSIS

PFP:00004

DTC Inspection Priority Chart

ACS007JR

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC "U1000" is displayed with other DTCs, first perform the trouble diagnosis for "DTC U1000 CAN COMMUNICATION". Refer to AT-95.

Priority	Detected items
1	CAN communication line
2	Except above

Fail-Safe ACSOOBHS

The TCM has an electronic Fail-Safe (limp home mode). This allows the vehicle to be driven even if a major electrical input/output device circuit is damaged.

Under Fail-Safe, the vehicle always runs in third gear, even with a shift lever position of "1", "2" or "D". The customer may complain of sluggish or poor acceleration.

When the ignition switch is turned ON following Fail-Safe operation, O/D OFF indicator lamp blinks for about 8 seconds. Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

The blinking of the O/D OFF indicator lamp for about 8 seconds will appear only once and be cleared. The customer may resume normal driving conditions.

Always follow the "WORK FLOW", refer to AT-45, "WORK FLOW".

The SELF-DIAGNOSIS results will be as follows:

- The first SELF-DIAGNOSIS will indicate damage to the vehicle speed sensor or the revolution sensor.
- During the next SELF-DIAGNOSIS, performed after checking the sensor, no damages will be indicated.

FAIL-SAFE FUNCTION

The following fail-safe functions allow vehicles to be driven even when sensor, switch or solenoid malfunction occurs.

Vehicle Speed Sensor 1 (Revolution Sensor)

Vehicle speed sensor 2 signal is input from combination meter.

Accelerator Pedal Position Sensor Signal

 If the accelerator pedal position sensor from ECM to TCM outputs an erratic signal, the control unit detects the throttle position by the closed throttle position signal and wide-open throttle position signal sent via the CAN communication from ECM.

If an unexpected signal is sent from the accelerator pedal position sensor to ECM, ECM controls engine to maintain vehicle operation.

Closed throttle position signal	Wide open throttle position signal	Throttle position
-	ON	4/8
OFF	OFF	2/8
ON	OFF	0/8

ΑT

Α

В

F

G

Н

K

L

M

Revision: 2005 March AT-43 2005 X-Trail

Park/Neutral Position (PNP) Switch

• When the multiple PNP switch signals are input to TCM, the priority of selector lever position becomes "D". "N". "R". "2" and "1" in order by internal TCM determination.

The use of 4th gear is inhibited until normal operation resumes. Because the hydraulic circuit of the control valve is switched by manual valve according to the selector lever position, however, actual operating condition of vehicle becomes as follows.

Actual lever position	PNP switch input signal	Running status
"P"	"P" position and other position signals	Р
"R"	"R" position and other position signals	R
"N"	"N" position and other position signals	N
"D"	"D" position and other position signals	D1 ⇔D2 ⇔D3 ⇔D4
"?"	"2" position and other position signals (Except "1" position)	21 ⇔22 ⇔23
2	"2" position and "1" position signals	21 ⇔22
"4"	"1" position and other position signals (Except "2" position)	11 ⇔12 ⇔13
,	"1" position and "2" position signals	11 ⇔12

Shift Solenoid Valve A and B

If non-standard solenoid signal is sent to TCM, use of certain gears is limited. Refer to chart shown below.

Shift position	Normal		Malfunction in solenoid valve A		Malfunction in solenoid valve B		Malfunction in solenoid valves A and B					
	Α	В	Gear	Α	В	Gear	Α	В	Gear	Α	В	Gear
	•	•	1st	_	$\bullet \rightarrow \times$		$\bullet \rightarrow \times$	_		_	_	- 3rd
"D" position	×	•	2nd	-	lacktriangle $ o$ $ imes$		×	-	3rd	_	-	
"D" position –	×	×	3rd	_	х	3rd	×	-		=	_	
	•	×	4th	_	х		$\bullet \rightarrow \times$	-		_	-	
	•	•	1st	-	lacktriangle $ o$ $ imes$		$\bullet \rightarrow \times$	-		_	-	
"2" position	×	•	2nd	_	$\bullet \rightarrow \times$		×	-		=	_	
	×	×	3rd	_	х		×	-		_	_	
	•	•	1st	_	$\bullet \rightarrow \times$		$\bullet \rightarrow \times$	-		_	-	
"1" position	×	•	2nd	-	lacktriangle $ o$ $ imes$		×	-		_	-	
	×	×	3rd	-	х		×	-		-	_	

^{●:} Solenoid ON

Line Pressure Solenoid Valve

 If non-standard solenoid signal is sent to TCM, line pressure solenoid valve is turned OFF to achieve maximum oil pressure.

Torque Converter Clutch Solenoid Valve

 If non-standard solenoid signal is sent to TCM, torque converter clutch solenoid valve is turned OFF to release lock-up.

Overrun Clutch Solenoid Valve

• If non-standard solenoid signal is sent to TCM, overrun clutch solenoid valve is turned OFF to engage overrun clutch. This will result in more effective engine brake during deceleration.

^{×:} Solenoid OFF

^{-:} Non-standard condition

How to Perform Trouble Diagnoses for Quick and Accurate Repair INTRODUCTION

ACS007JT

The TCM receives a signal from the vehicle speed sensor, accelerator pedal position sensor or PNP switch and provides shift control or lock-up control via A/T solenoid valves.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.


It is much more difficult to diagnose a malfunction that occurs intermittently rather than continuously. Most intermittent malfunctions are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only, may not find the cause of the malfunctions. A road test with CONSULT-II or a circuit tester connected should be performed. Follow the <u>AT-45, "WORK FLOW"</u>.


Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a drivability complaint. The customer can supply good information about such malfunctions, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "DIAGNOSTIC WORKSHEET" like the example (AT-47, "DIAGNOSTIC WORKSHEET") should be used. Start your diagnosis by looking for "conventional" malfunctions first. This will help troubleshoot drivability malfunctions on an electroni-

Also check related Service bulletins for information.

cally controlled engine vehicle.

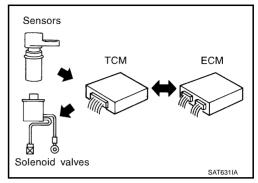

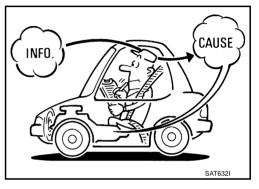

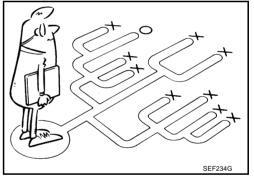

WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, <u>AT-47</u>, "<u>Information from Customer</u>" and <u>AT-48</u>, "<u>Diagnostic Worksheet</u>", to perform the best troubleshooting possible.

В

Α

ΑT

F

F


Н

J

K

M

Work Flow Chart

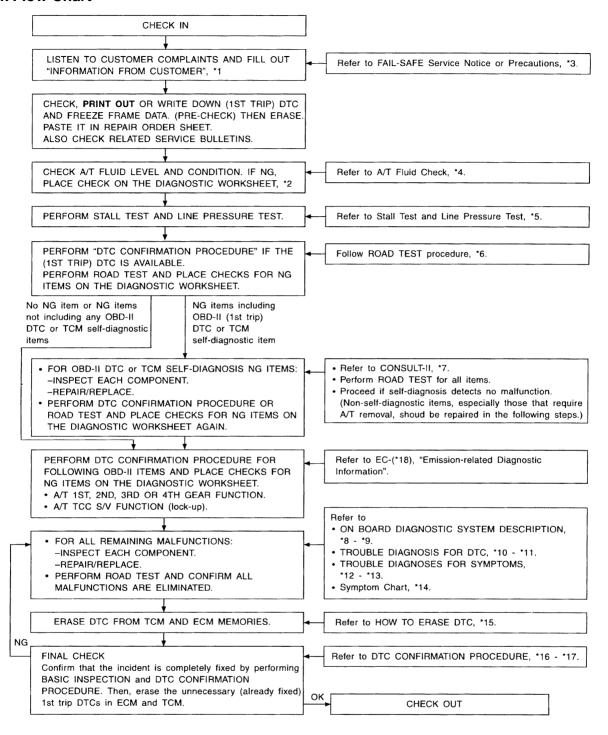

SAT086JI

```
*3
*1
      AT-47
                                           *2
                                                 AT-48
                                                                                           AT-9
                                                 AT-52, AT-55
                                                                                          AT-57
*4
      AT-17
                                           *5
                                                                                     *6
*7
                                           *8
                                                 AT-39
                                                                                     *9
      AT-80
                                                                                           AT-42
*10 AT-95
                                           *11 AT-200
                                                                                     *12 <u>AT-205</u>
                                           *14 <u>AT-67</u>
*13 AT-244
                                                                                     *15 <u>AT-40</u>
                                           *17 <u>AT-200</u>
*16 AT-95
                                                                                     *18 EC-48
```

DIAGNOSTIC WORKSHEET Α Information from Customer **KEY POINTS** WHAT..... Vehicle & A/T models В WHEN..... Date. Frequencies WHERE..... Road conditions **HOW.....** Operating conditions, Symptoms ΑT MR./MS Model & Year VIN Customer name Trans, model Engine Mileage D Malfunction Date Manuf. Date In Service Date Frequency ☐ Continuous ☐ Intermittent (times a day) Symptoms ☐ Vehicle does not move. (☐ Any position ☐ Particular position) F \square No up-shift (\square 1st \rightarrow 2nd \square 2nd \rightarrow 3rd \square 3rd \rightarrow O/D) \square No down-shift (\square O/D \rightarrow 3rd \square 3rd \rightarrow 2nd \square 2nd \rightarrow 1st) ☐ Lockup malfunction ☐ Shift point too high or too low. ☐ Shift shock or slip $(\square N \to D \square N \to R \square Lockup \square Any drive position)$ ■ Noise or vibration ■ No kick down Н ■ No pattern select □ Others) Blinks for about 8 seconds. O/D OFF indicator lamp ☐ Continuously lit ☐ No lit

☐ No lit

Malfunction indicator lamp (MIL)

☐ Continuously lit

Revision: 2005 March AT-47 2005 X-Trail

K

L


M


Diag	Diagnostic Worksheet					
1.	. □ Read the Fail-safe and listen to customer complaints.					
2.	□ Che	eck A/T fluid		<u>AT-17</u>		
	☐ Leakage (Follow specified procedure) ☐ Fluid condition ☐ Fluid level					
3.	□ Per	form "STALL TEST" and "LINE PRESSURE TEST".		AT-52,		
		☐ "STALL TEST" — Mark possible damaged componer	nts/others.	<u>AT-55</u>		
		 □ Torque converter one-way clutch □ Reverse clutch □ Forward clutch □ Overrun clutch □ Forward one-way clutch 	 □ Low & reverse brake □ Low one-way clutch □ Engine □ Line pressure is low □ Clutches and brakes except high clutch and brake band are OK 			
		□ "LINE PRESSURE TEST" — Suspected parts:				
4.	☐ Per	form "Road Test".		<u>AT-57</u>		
	4-1.	"Check Before Engine is Started"		<u>AT-57</u>		
		☐ <u>AT-205, "O/D OFF Indicator Lamp Does Not Come O</u> ☐ Perform self-diagnostics. Enter checks for detected it				
		□ AT-95, "DTC U1000 CAN COMMUNICATION LINE". □ AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH". □ AT-104, "DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT". □ AT-109, "DTC P0720 VEHICLE SPEED SENSOR.A/T (REVOLUTION SENSOR)". □ AT-115, "DTC P0725 ENGINE SPEED SIGNAL". □ AT-120, "DTC P0731 A/T 1ST GEAR FUNCTION". □ AT-125, "DTC P0732 A/T 2ND GEAR FUNCTION". □ AT-130, "DTC P0733 A/T 3RD GEAR FUNCTION". □ AT-135, "DTC P0734 A/T 4TH GEAR FUNCTION". □ AT-135, "DTC P0734 A/T 4TH GEAR FUNCTION". □ AT-142, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE". □ AT-147, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)". □ AT-155, "DTC P0745 LINE PRESSURE SOLENOID VALVE". □ AT-162, "DTC P0745 SHIFT SOLENOID VALVE A". □ AT-167, "DTC P0755 SHIFT SOLENOID VALVE B". □ AT-172. "DTC P1706 ACCELERATOR PEDAL POSITION (APP) SENSOR". □ AT-177, "DTC P1760 OVERRUN CLUTCH SOLENOID VALVE". □ AT-182, "DTC VEHICLE SPEED SENSOR MTR". □ AT-187, "DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE)". □ AT-194, "MAIN POWER SUPPLY AND GROUND CIRCUIT". □ AT-198, "DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)".				

4-2.	"Check at Idle"	<u>AT-58</u>			
	□ AT-207, "Engine Cannot Be Started in "P" and "N" Position".	1			
	☐ AT-208, "In "P" Position, Vehicle Moves Forward or Backward When Pushed".				
	□ AT-209, "In "N" Position, Vehicle Moves". □ AT-211, "Large Shock. "N" → "R" Position".				
	☐ AT-212, "Vehicle Does Not Creep Backward in "R" Position".				
	□ AT-215, "Vehicle Does Not Creep Forward in "D", "2" or "1" Position".				
4-3.	"Cruise Test"	<u>AT-60</u>			
	Part 1				
	□ AT-217, "Vehicle Cannot Be Started From D1".				
	□ AT-220, "A/T Does Not Shift: D1 \rightarrow D2 or Does Not Kickdown: D4 \rightarrow D2". □ AT-223, "A/T Does Not Shift: D2 \rightarrow D3".				
	\square AT-226, "A/T Does Not Shift: D3 \rightarrow D4".				
	□ AT-228, "A/T Does Not Perform Lock-Up" .				
	□ AT-229, "A/T Does Not Hold Lock-Up Condition". □ AT-231, "Lock-Up Is Not Released".				
	\square AT-231, E0ck-Op is Not Released. \square AT-232, "Engine Speed Does Not Return to Idle (Light Braking D ₄ \rightarrow D ₃)".				
	Part 2	AT-63			
	□ AT-217. "Vehicle Cannot Be Started From D1".				
	\square AT-220, "A/T Does Not Shift: \square 1 \rightarrow \square 2 or Does Not Kickdown: \square 4 \rightarrow \square 2".				
	\square AT-223, "A/T Does Not Shift: D2 \rightarrow D3".				
	□ <u>AT-226, "A/T Does Not Shift: D3 → D4"</u> .				
	Part 3	<u>AT-64</u>			
	\square AT-234, "A/T Does Not Shift: $\underline{D4} \rightarrow \underline{D3}$, When Overdrive Control Switch "ON" \rightarrow "OFF"".				
	□ AT-235, "A/T Does Not Shift: D ₃ → 2 ₂ , When Selector Lever "D" → "2" Position". □ AT-237, "A/T Does Not Shift: 2 ₂ → 1 ₁ , When Selector Lever "2" → "1" on Position".				
□ AT-237, "A/T Does Not Shift: 22 → 11, When Selector Lever "2" → "1" on Position". □ AT-240, "Vehicle Does Not Decelerate by Engine Brake".					
	☐ Perform self-diagnostics. Enter checks for detected items. AT-82, AT-91.				
	□ AT-95, "DTC U1000 CAN COMMUNICATION LINE" .				
	☐ AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH". ☐ AT-104, "DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT".				
	☐ AT-109, "DTC P0710 A/T PLOID TEMPERATURE SENSOR CIRCUIT."				
	□ AT-115, "DTC P0725 ENGINE SPEED SIGNAL".				
	☐ AT-120, "DTC P0731 A/T 1ST GEAR FUNCTION".				
	☐ <u>AT-125, "DTC P0732 A/T 2ND GEAR FUNCTION"</u> . ☐ <u>AT-130, "DTC P0733 A/T 3RD GEAR FUNCTION"</u> .				
	□ AT-135, "DTC P0734 A/T 4TH GEAR FUNCTION".				
	□ AT-142, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE".				
	☐ AT-147, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)". ☐ AT-155, "DTC P0745 LINE PRESSURE SOLENOID VALVE".				
	☐ AT-162, "DTC P0750 SHIFT SOLENOID VALVE A".				
	□ AT-167, "DTC P0755 SHIFT SOLENOID VALVE B" .				
	AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR".				
	☐ AT-177, "DTC P1760 OVERRUN CLUTCH SOLENOID VALVE". ☐ AT-182, "DTC VEHICLE SPEED SENSOR MTR".				
	☐ AT-187, "DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM				
	POWER SOURCE)".				
	☐ AT-194, "MAIN POWER SUPPLY AND GROUND CIRCUIT". ☐ AT-198, "DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)".				
	☐ AT-200, "DTC CONTROL UNIT(EEPROM)".				
□ Fo	r self-diagnosis NG items, inspect each component. Repair or replace the damaged parts.	AT-260			
□ Pe	rform "Road Test".	AT-57			
Refe	rform the Diagnostic Procedures for all remaining items marked NG. Repair or replace the damaged parts. r to the Symptom Chart when you perform the procedures. (The chart also shows some other possible stoms and the component inspection orders.)	AT-82, AT-91			
		AT-40, EC-			
III Err	ase DTC from TCM and ECM memories.	60			

A/T Electrical Parts Location

ACS007JU

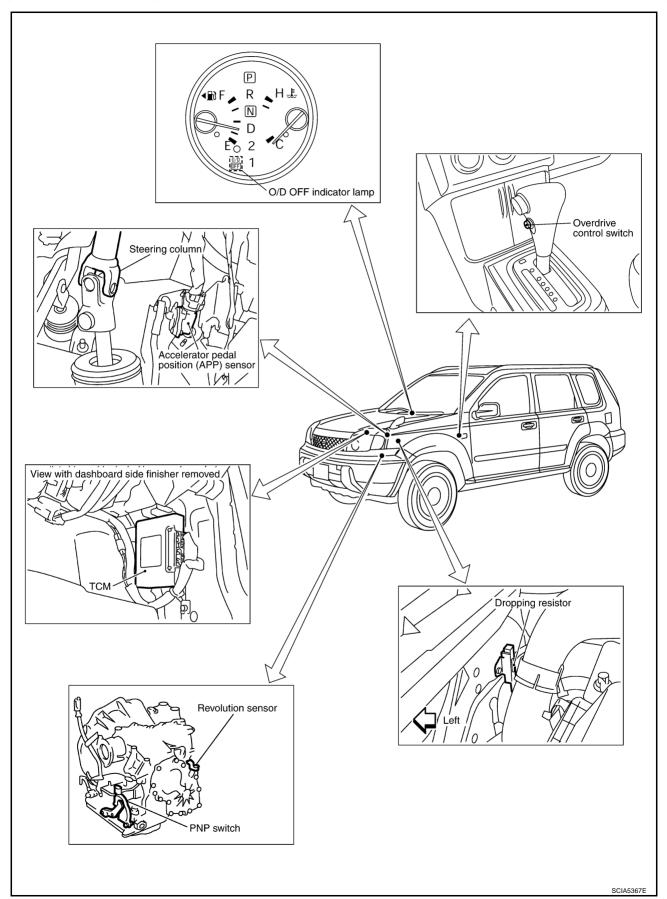

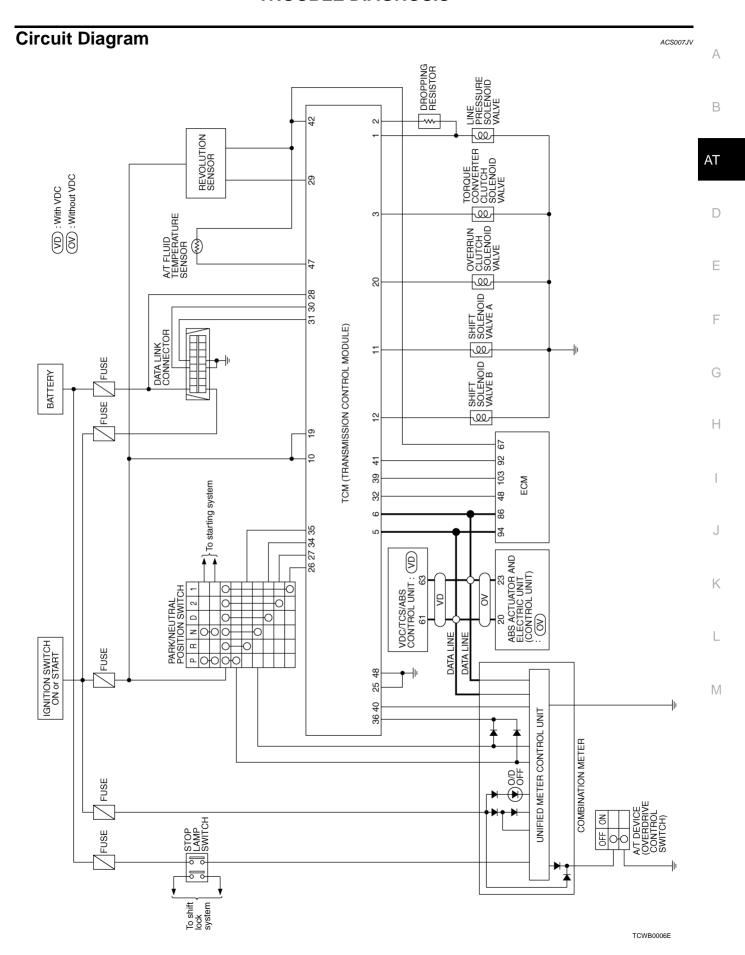

Inspections before Trouble Diagnosis A/T FLUID CHECK

ACS007JW

Fluid Leakage and Fluid Level Check

Inspect for fluid leakage and check the fluid level. Refer to AT-17, "Checking A/T Fluid".

Fluid Condition Check

Inspect the fluid condition.

Fluid status	Conceivable Cause	Required Operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the A/T fluid and check the A/T main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the A/T fluid and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within A/T	Replace the A/T fluid and check for improper operation of the A/T.




STALL TEST


Stall Test Procedure

- Check A/T fluid and engine oil levels. If necessary, add fluid and oil.
- 2. Drive vehicle for approximately 10 minutes or until fluid and oil reach operating temperature.


ATF operating temperature: 50 - 80°C (122 - 176°F)

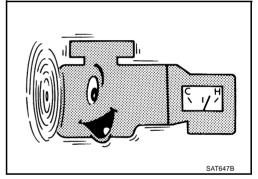

- 3. Set parking brake and block wheels.
- 4. Install a tachometer where it can be seen by driver during test.
 - It is good practice to mark the point of specified engine rpm on indicator.

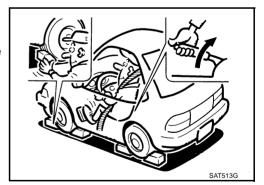


Start engine, apply foot brake, and place selector lever in "D" position.

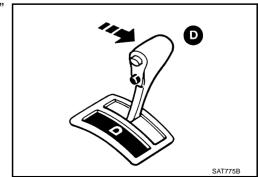

- Accelerate to wide open throttle gradually while applying foot brake.
- 7. Quickly note the engine stall revolution and immediately release throttle
 - During test, do not hold throttle wide open for more than 5 seconds.

Stall revolution: 2,300 - 2,750 rpm

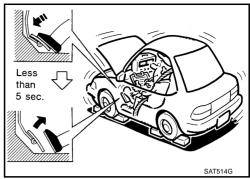

Α

ΑT


F

Н

J

M

- 8. Move selector lever to "N" position.
- 9. Cool off ATF.
 - Run engine at idle for at least 1 minute.
- 10. Repeat steps 5 through 9 with selector lever in "2", "1" and "R" positions.

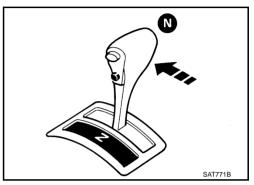

Judgement of Stall Test

The test result and possible damaged components relating to each result are shown in the illustrations on next page.

In order to pinpoint the possible damaged components, refer to AT-46, "Work Flow Chart".

NOTE:

Stall revolution is too high in "D", "2", or "1" position:

- Slippage occurs in 1st gear but not in 2nd and 3rd gears. Low one-way clutch slippage
- Slippage occurs in the following gears:
 1st through 3rd gears in "D" position and engine brake functions with overdrive control switch set to OFF.
 1st and 2nd gears in "2" position and engine brake functions with accelerator pedal released (fully closed throttle)...... Forward clutch or forward one-way clutch slippage

Stall revolution is too high in "R" position:

- Engine brake does not function in "1" position. Low & reverse brake slippage
- Engine brake functions in "1" position. Reverse clutch slippage

Stall revolution within specifications:

 Vehicle does not achieve speed of more than 80 km/h (50 MPH). One-way clutch seizure in torque converter housing


CAUTION:

Be careful since automatic fluid temperature increases abnormally.

- Slippage occurs in 3rd and 4th gears in "D" position. High clutch slippage
- Slippage occurs in 2nd and 4th gears in "D" position. Brake band slippage
- Engine brake does not function in 2nd and 3rd gears in "D" position, 2nd gear in "2" position, and 1st gear in "1" position with overdrive control switch set to OFF. Overrun clutch slippage

Stall revolution less than specifications:

Poor acceleration during starts. One-way clutch seizure in torque converter

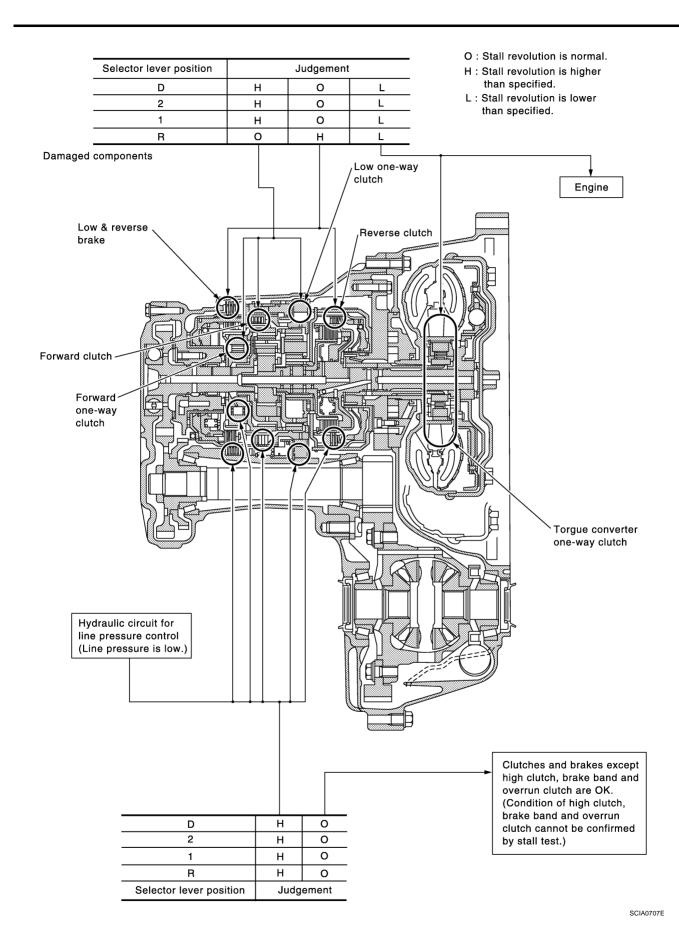


LINE PRESSURE TEST

Line Pressure Test Ports

Location of line pressure test ports are shown in the figure.


 Always replace pressure plugs as they are self-sealing bolts.

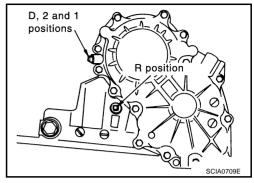


Line Pressure Test Procedure

- 1. Check A/T fluid and engine oil levels. If necessary, add fluid or oil.
- 2. Drive vehicle for approx. 10 minutes or until engine oil and ATF reach operating temperature.


ATF operating temperature: 50 - 80°C (122 -176°F)

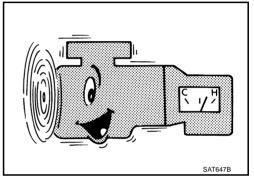

3. Install oil pressure gauge to corresponding line pressure port.

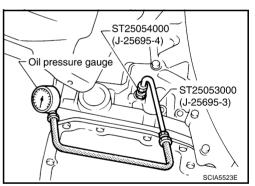

- 4. Set parking brake and block wheels.
 - Continue to depress brake pedal fully while line pressure test is being performed at stall speed.

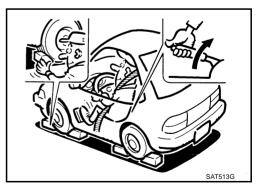

Α

AT

В

D

Е

Н

J

K

L

M

- 5. Start engine and measure line pressure at idle and stall speed.
 - When measuring line pressure at stall speed, follow the stall test procedure.



Line Pressure

Engine speed rpm	Line pressure	kPa (kg/cm ² , psi)
Engine speed ipin	"D", "2" and "1" positions	"R" position
Idle	500 (5.1, 73)	778 (7.9, 113)
Stall	1,233 (12.6, 179)	1,918 (19.6, 278)

Judgement of Line Pressure Test

	Judgement	Suspected parts
	Line pressure is low in all positions.	 Oil pump wear Control piston damage Pressure regulator valve or plug sticking Spring for pressure regulator valve damaged Fluid pressure leakage between oil strainer and pressure regulator valve Clogged strainer
At idle	Line pressure is low in particular position.	 Fluid pressure leakage between manual valve and particular clutch For example, line pressure is: Low in "R" and "1" positions, but Normal in "D" and "2" positions. Therefore, fluid leakage exists at or around low and reverse brake circuit. Refer to AT-23, "CLUTCH AND BAND CHART".
	Line pressure is high.	 Maladjustment of throttle position sensor A/T fluid temperature sensor damaged Line pressure solenoid valve sticking Short circuit of line pressure solenoid valve circuit Pressure modifier valve sticking Pressure regulator valve or plug sticking Open in dropping resistor circuit
At stall speed	Line pressure is low.	 Maladjustment of throttle position sensor Line pressure solenoid valve sticking Short circuit of line pressure solenoid valve circuit Pressure regulator valve or plug sticking Pressure modifier valve sticking Pilot valve sticking

Road Test DESCRIPTION

ACS007JX

Α

В

ΑT

- The purpose of the test is to determine overall performance of A/ T and analyze causes of malfunctions.
- The road test consists of the following three parts:
- Check before engine is started. Refer to AT-57.
- Check at idle. Refer to AT-58.
- 3. Cruise test
 - Inspection all the item from Part 1 to Part 3. Refer to AT-60, AT-63 and AT-64.
- **ROAD TEST PROCEDURE** 1. Check before engine is started. 2. Check at idle. 3. Cruise test. SAT786A
- Before road test, familiarize yourself with all test procedures and items to check.
- Perform tests on all items until specified symptom is found. Troubleshoot items which check out No Good after road test. Refer to the following.
 - Refer to AT-39, "ON BOARD DIAGNOSTIC (OBD) SYSTEM" and AT-202, "TROUBLE DIAGNOSES FOR SYMPTOMS".



Check before Engine Is Started


1. CHECK O/D OFF INDICATOR LAMP

- 1. Park vehicle on flat surface.
- Move selector lever to "P" position.
- 3. Turn ignition switch OFF. Wait at least 5 seconds.



4. Turn ignition switch ON. (Do not start engine.) Does O/D OFF indicator lamp come on for about 2 seconds?

- YES >> 1. Turn ignition switch OFF.
 - 2. Perform self-diagnosis and note NG items. Refer to AT-82, "SELF-DIAGNOSTIC MODE", AT-91, "Diagnostic Procedure Without CON-SULT-II".
 - 3. Go to AT-58, "Check at Idle".
- >> Stop "Road Test". Go to AT-205, "O/D OFF Indicator NO Lamp Does Not Come On".

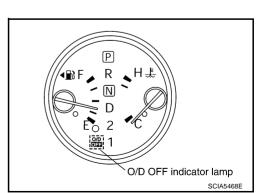

ACS007JY

Н

2005 X-Trail

Check at Idle

1. CHECK ENGINE START


- 1. Park vehicle on flat surface.
- 2. Turn ignition switch ON. (Do not start engine.)
- 3. Move selector lever to "P" or "N" position.
- 4. Turn ignition switch START position.

Is engine started?

YES >> GO TO 2.

NO

- >> Stop "Road Test". Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-207, "Engine Cannot Be Started in "P" and "N" Position".

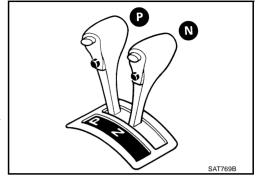

2. CHECK ENGINE START


- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Move selector lever to "R", "D", "2" or "1" position.
- Turn ignition switch START position.

Is engine started?

YES


- >> Stop "Road Test". Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-207, "Engine Cannot Be Started in "P" and "N" Position".
 - Continue "Road Test".

NO >> GO TO 3.

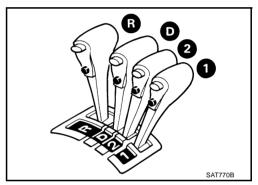

3. CHECK VEHICLE MOVE

- 1. Move selector lever to "P" position.
- 2. Turn ignition switch OFF.
- Release parking brake.

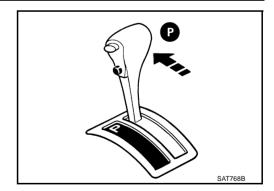


4. Push vehicle forward or backward.

Does vehicle move when it is pushed forward or backyard?

YES >> • Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.

- GO TO <u>AT-208</u>, "In "P" Position, Vehicle Moves Forward or Backward When Pushed".
- Continue "Road Test".

NO >> GO TO 4.

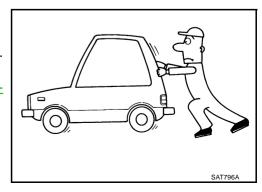

4. CHECK VEHICLE MOVE


- 1. Apply parking brake.
- 2. Start engine.
- 3. Move selector lever to "N" position.
- 4. Release parking brake.

Does vehicle move forward or backward?

YES >> • Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.


- GO TO AT-209, "In "N" Position, Vehicle Moves".
- Continue "Road Test".

NO >> GO TO 5.

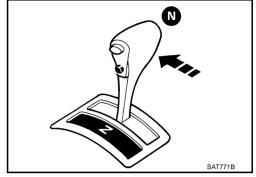

5. CHECK SHIFT SHOCK

1. Apply foot brake.

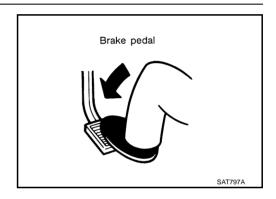


2. Move selector lever to "R" position.

Is there large shock when changing from "N" to "R" position?

>> • Mark the box on the "DIAGNOSTIC WORKSHEET". YES Refer to AT-47.

- GO TO AT-211, "Large Shock. "N" → "R" Position".
- Continue "Road Test".

>> GO TO 6. NO

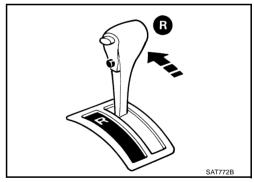

6. CHECK VEHICLE MOVE


Release foot brake for several seconds.

Does vehicle creep backward when foot brake is released?

YES >> GO TO 7.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-212, "Vehicle Does Not Creep Backward in "R" Position".
 - Continue "Road Test".

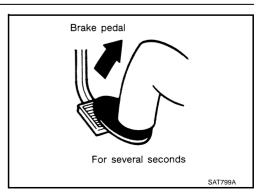

ΑT

D

В

F

Н


7. CHECK VEHICLE MOVE

Move selector lever to "D", "2" and "1" positions and check if vehicle creeps forward.

Does vehicle creep forward in all three positions?

YES NO

- >> Go to AT-60, "Cruise Test Part 1".
- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO <u>AT-215</u>, "Vehicle <u>Does Not Creep Forward in</u> "D", "2" or "1" Position".
 - Continue "Road Test".

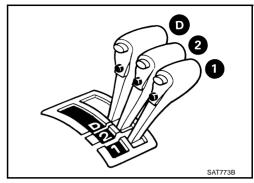

ACS007K0

Cruise Test — Part 1

1. CHECK STARTING GEAR (D1) POSITION

1. Drive vehicle for approximately 10 minutes to warm engine oil and ATF up to operating temperature.

ATF operating temperature: 50 - 80°C (122 - 176°F)

- 2. Park vehicle on flat surface.
- 3. Set overdrive control switch to ON position.
- 4. Move selector lever to "P" position.
- 5. Start engine.



6. Move selector lever to "D" position.




- 7. Accelerate vehicle by constantly depressing accelerator pedal half-way.
 - Read gear position. Refer to <u>AT-84, "DATA MONITOR MODE"</u>.

Does vehicle start from D1?

YES NO >> GO TO 2.

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO <u>AT-217</u>, "Vehicle Cannot Be Started From D1"
 - Continue "Road Test".

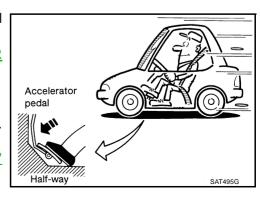

2. CHECK SHIFT-UP (D1 TO D2)

Check shift-up (D1 to D2).

Specified speed when shifting from D1 to D2. Refer to AT-66, "Vehicle Speed When Shifting Gears".


Read gear position, throttle opening and vehicle speed. Refer to <u>AT-84, "DATA MONITOR MODE"</u>.

Does A/T shift from D1 to D2 at the specified speed?

YES >> GO TO 3.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO <u>AT-220, "A/T Does Not Shift: D1 \rightarrow D2 or Does Not Kickdown: D4 \rightarrow D2".</u>
 - Continue "Road Test".

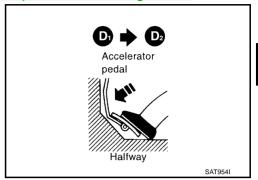

3. CHECK SHIFT-UP (D2 TO D3)

Check shift-up (D2 to D3).

Specified speed when shifting from D2 to D3. Refer to AT-66, "Vehicle Speed When Shifting Gears".


Read gear position, throttle opening and vehicle speed. Refer to <u>AT-84, "DATA MONITOR MODE"</u>.

Does A/T shift from D₂ to D₃ at the specified speed?

YES >> GO TO 4.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to <u>AT-47</u>.
 - GO TO AT-223, "A/T Does Not Shift: $D2 \rightarrow D3$ ".
 - Continue "Road Test".

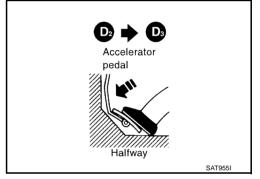

4. CHECK SHIFT-UP (D₃ TO D₄)

Check shift-up (D3 to D4).

Specified speed when shifting from D3 to D4. Refer to AT-66, "Vehicle Speed When Shifting Gears".

AT-61


Read gear position, throttle opening and vehicle speed. Refer to AT-84, "DATA MONITOR MODE".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 5.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-226, "A/T Does Not Shift: $D_3 \rightarrow D_4$ ".
 - Continue "Road Test".

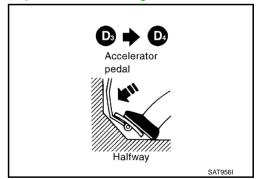

2005 X-Trail

Revision: 2005 March

D

ΑT

В

Е

G

Н

-

K

L

M

5. CHECK LOCK-UP (D4 TO D4 L/U)

Check lock-up (D4 to D4 L/U).

Specified speed when lock-up occurs. Refer to AT-66, "Vehicle Speed When Performing and Releasing Lock-Up".


Read vehicle speed, throttle opening when lock-up duty becomes 94%. Refer to AT-84, "DATA MONITOR MODE".

Does A/T perform lock-up at the specified speed?

YES >> GO TO 6.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-228. "A/T Does Not Perform Lock-Up".
 - Continue "Road Test".

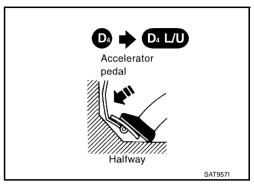

6. CHECK LOCK-UP HOLD

Check lock-up hold.

(I) When lock-up duty becomes 94%. Refer to AT-84, "DATA MONITOR MODE".

Does A/T hold lock-up condition for more than 30 seconds?

YES >> GO TO 7.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-229, "A/T Does Not Hold Lock-Up Condition".
 - Continue "Road Test".

7. CHECK SHIFT-DOWN (D4 L/U TO D4)

Release accelerator pedal.

When lock-up duty becomes 4%. Refer to AT-84, "DATA MONITOR MODE".

Is lock-up released when accelerator pedal is released?

YES >> GO TO 8.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-231, "Lock-Up Is Not Released".
 - Continue "Road Test".

8. CHECK SHIFT-DOWN (D4 TO D3)

Decelerate vehicle by applying foot brake lightly.

Read gear position and engine speed. Refer to AT-84, "DATA **MONITOR MODE".**


Does engine speed return to idle smoothly when A/T is shifted from D₄ to D₃?

YES >> 1. Stop vehicle.

2. Go to AT-63, "Cruise Test — Part 2".

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-232, "Engine Speed Does Not Return to Idle (Light Braking D₄ → D₃)".
 - Continue "Road Test".

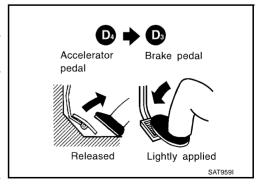

Cruise Test — Part 2

1. CHECK STARTING GEAR (D1) POSITION

Confirm gear selector lever is in "D" position.

- 2. Accelerate vehicle by half throttle again.
 - Read gear position. Refer to AT-84, "DATA MONITOR MODE".

Does vehicle start from D1?

YES >> GO TO 2.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-217. "Vehicle Cannot Be Started From D1"
 - Continue "Road Test".

2. CHECK SHIFT-UP AND SHIFT-DOWN (D $_{ m 3}$ TO D $_{ m 4}$ TO D $_{ m 2}$)

- Accelerate vehicle to 80 km/h (50 MPH) as shown in the figure.
- Release accelerator pedal and then quickly depress it fully.
 - Read gear position and throttle opening. Refer to AT-84, "DATA MONITOR MODE".

Does A/T shift from D4 to D2 as soon as accelerator pedal is depressed fully?

YES >> GO TO 3.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-220, "A/T Does Not Shift: $D_1 \rightarrow D_2$ or Does Not Kickdown: D4 → D2".
 - Continue "Road Test".

3. CHECK SHIFT-UP (D2 TO D3)

Check shift-up (D2 to D3)

Specified speed when shifting from D2 to D3. Refer to AT-66, "Vehicle Speed When Shifting Gears".


Read gear position, throttle opening and vehicle speed. Refer to AT-84, "DATA MONITOR MODE".

Does A/T shift from D₂ to D₃ at the specified speed?

YES >> GO TO 4.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-223, "A/T Does Not Shift: D2 → D3".
 - Continue "Road Test".

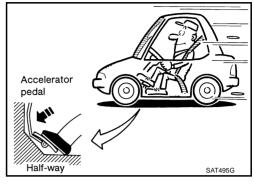

ACS007K1

Α


В

ΑT

D

F

Н

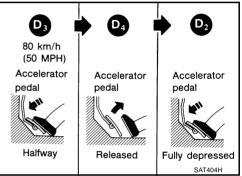

Accelerator

Fully depressed

pedal

M

SAT960I

AT-63 Revision: 2005 March 2005 X-Trail

4. CHECK SHIFT-UP (D₃ TO D₄) AND ENGINE BRAKE

Release accelerator pedal after shifting from D2 to D3.

Read gear position, throttle opening and vehicle speed. Refer to <u>AT-84, "DATA MONITOR MODE"</u>.

Does A/T shift from D₃ to D₄ and does vehicle decelerate by engine brake?

YES >> 1. Stop vehicle.

2. Go to AT-64, "Cruise Test — Part 3".


NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to <u>AT-47</u>.
 - GO TO AT-226, "A/T Does Not Shift: $D_3 \rightarrow D_4$ ".
 - Continue "Road Test".


Cruise Test — Part 3

1. CHECK SHIFT-DOWN (D4 TO 33)


- 1. Confirm overdrive control switch is ON position.
- 2. Confirm gear selector lever is in "D" position.
- 3. Accelerate vehicle using half-throttle to D4.

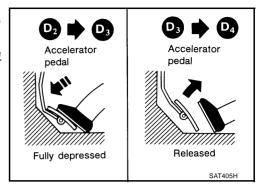

ACS007K2

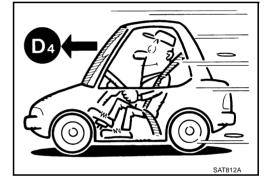

Release accelerator pedal.

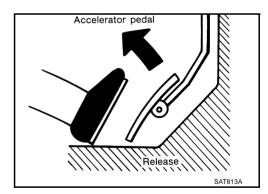


- 5. Set overdrive control switch to OFF position while driving in D4.
 - Read gear position and vehicle speed. Refer to <u>AT-84, "DATA MONITOR MODE"</u>.

Does A/T shift from D4 to D3 (O/D OFF)?

YES >> GO TO 2.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-234, "A/T Does Not Shift: D4 \rightarrow D3 , When Overdrive Control Switch "ON" \rightarrow "OFF" .
 - Continue "Road Test".

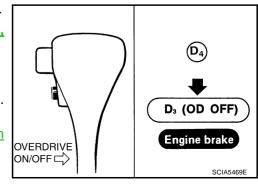

2. CHECK ENGINE BRAKE


Check engine brake.

Does vehicle decelerate by engine brake?

YES >> GO TO 3.

NO

- - GO TO AT-240, "Vehicle Does Not Decelerate by Engine Brake".
 - Continue "Road Test".

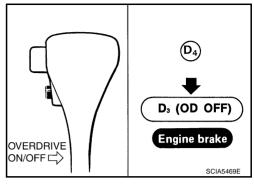

3. CHECK SHIFT-DOWN (D3 TO 22)

Move selector lever from "D" to "2" position while driving in D3 (O/D OFF).


Read gear position. Refer to <u>AT-84, "DATA MONITOR MODE"</u>

Does A/T shift from D3 (O/D OFF) to 22?

YES >> GO TO 4.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to <u>AT-47</u>.
 - \bullet GO TO AT-235, "A/T Does Not Shift: D3 \to 22 , When Selector Lever "D" \to "2" Position" .
 - Continue "Road Test".

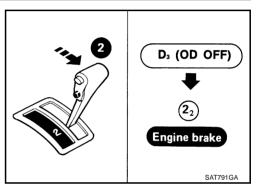

4. CHECK ENGINE BRAKE


Check engine brake.

Does vehicle decelerate by engine brake?

YES >> GO TO 5.

NO

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-240, "Vehicle Does Not Decelerate by Engine Brake".
 - Continue "Road Test".

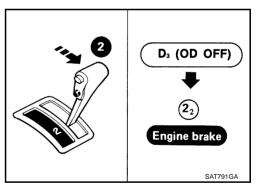

5. CHECK SHIFT-DOWN (22 TO 11)

Move selector lever from "2" to "1" position while driving in 22.


Read gear position. Refer to <u>AT-84, "DATA MONITOR MODE"</u>

Does A/T shift from 22 to 11 position?

YES >> GO TO 6.

NO >> •

- >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to $\underline{\text{AT-47}}$.
 - GO TO <u>AT-237</u>, "A/T <u>Does Not Shift: $22 \rightarrow 11$ </u>, When <u>Selector Lever "2" \rightarrow "1" on Position"</u>.
 - Continue "Road Test".

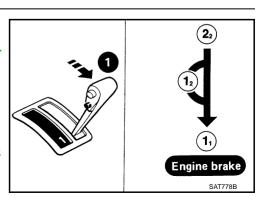

Revision: 2005 March AT-65 2005 X-Trail

В

ΑT

D

F

F

G

Н

J

K

IV


6. CHECK ENGINE BRAKE

Check engine brake.

Does vehicle decelerate by engine brake?

YES >> 1. Stop vehicle.

- 2. Perform self-diagnosis. Refer to <u>AT-82, "SELF-DIAG-NOSTIC RESULT MODE"</u>, <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.
- NO >> Mark the box on the "DIAGNOSTIC WORKSHEET". Refer to AT-47.
 - GO TO AT-240, "Vehicle Does Not Decelerate by Engine Brake".
 - Stop "Road Test".

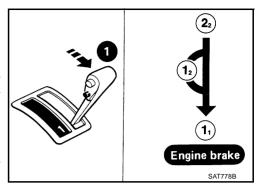

Vehicle Speed When Shifting Gears

ACS007K3

Throttle posi- tion	Shift pattorn	Vehicle speed km/h (MPH)					
	Shift pattern	D1 → D2	$D2 \rightarrow D3$	D3 → D4	D4 → D3	D3 → D2	$D2 \rightarrow D1$
Full throttle	Comfort	57 - 65 (35 - 40)	107 - 115 (66 - 71)	167 - 175 (104 - 109)	163 - 171 (101 - 106)	97 - 105 (60 - 65)	41 - 49 (25 - 30)
	Auto power	57 - 65 (35 - 40)	107 - 115 (66 - 71)	167 - 175 (104 - 109)	163 - 171 (101 - 106)	97 - 105 (60 - 65)	41 - 49 (25 - 30)
Half throttle	Comfort	36 - 44 (22 - 27)	71 - 79 (44 - 49)	131 - 139 (81 - 86)	77 - 85 (48 - 53)	38 - 46 (23 - 28)	5 - 13 (3 - 8)
	Auto power	42 - 50 (26 - 31)	79 - 87 (49 - 54)	131 - 139 (81 - 86)	77 - 85 (48 - 53)	45 - 53 (28 - 33)	5 - 13 (3 - 8)

Vehicle Speed When Performing and Releasing Lock-Up

ACS007K4

Throttle position	Overdrive control switch (Shift position)	Shift pattern	Vehicle speed km/h (MPH)	
			Lock-up "ON"	Lock-up "OFF"
1/8	ON [D4]	Comfort	61 - 69 (38 - 43)	51 - 59 (31 - 36)
1/6	ON [D4]	Power	61 - 69 (38 - 43)	51 - 59 (31 - 36)

Symptom Chart ACS007K5

Numbers are arranged in order of inspection. Perform inspections starting with number one and work up.

Items	Symptom	Condition	Diagnostic item	Reference page	
			Accelerator pedal position (APP) sensor	<u>AT-172</u>	В
		1	2. Vehicle speed sensor·A/T (Revolution sensor) and vehicle speed sensor·MTR	AT-109, AT-182	
			3. Engine speed signal	<u>AT-115</u>	AT
1	Torque converter	ON vehicle	4. A/T fluid temperature sensor	<u>AT-104</u>	
	is not locked up.		5. Line pressure test	<u>AT-55</u>	- - D
			6. Torque converter clutch solenoid valve	<u>AT-142</u>	- L
			7. Control valve assembly	<u>AT-260</u>	=
		OFF vehicle	8. Torque converter	<u>AT-280</u>	Е
			1. Fluid level	<u>AT-17</u>	_
No Lock-up Engagement/			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
TCC Inoperative Torque cor			3. Line pressure test	<u>AT-55</u>	
	Torque converter clutch piston slip.		4. Torque converter clutch solenoid valve	<u>AT-142</u>	_
	olutori piotori siip.		5. Line pressure solenoid valve	<u>AT-155</u>	-
			6. Control valve assembly	<u>AT-260</u>	_
		OFF vehicle	7. Torque converter	<u>AT-280</u>	_
		ock-up point is and vehicle speed sensor-A/T (Re and vehicle speed sensor-MTR	Accelerator pedal position (APP) sensor	<u>AT-172</u>	- -
	Lock-up point is extremely high or		2. Vehicle speed sensor·A/T (Revolution sensor) and vehicle speed sensor·MTR	AT-109, AT-182	_
	low.		3. Torque converter clutch solenoid valve	<u>AT-142</u>	-
			4. Control valve assembly	<u>AT-260</u>	_
			1. Engine idle speed	<u>EC-75</u>	
			Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
			3. Line pressure test	<u>AT-55</u>	_
Shift Shock shifting	Sharp shock in	ON vehicle	4. A/T fluid temperature sensor	<u>AT-104</u>	K
	shifting from "N"	ON VEHICLE	5. Engine speed signal	<u>AT-115</u>	_
	to "D" position.		6. Line pressure solenoid valve	<u>AT-155</u>	_
			7. Control valve assembly	<u>AT-260</u>	_
			8. Accumulator N-D	<u>AT-260</u>	=
		OFF vehicle	9. Forward clutch	AT-331	N

AT-67 Revision: 2005 March 2005 X-Trail Α

Items	Symptom	Condition	Diagnostic item	Reference page
		ON vehicle	Accelerator pedal position (APP) sensor	<u>AT-172</u>
	Too sharp a shock in change from D1 to D2.		2. Line pressure test	<u>AT-55</u>
			3. Accumulator servo release	<u>AT-260</u>
			4. Control valve assembly	<u>AT-260</u>
			5. A/T fluid temperature sensor	<u>AT-104</u>
		OFF vehicle	6. Brake band	<u>AT-352</u>
			Accelerator pedal position (APP) sensor	<u>AT-172</u>
	Too sharp a	ON vehicle	2. Line pressure test	<u>AT-55</u>
	shock in change		3. Control valve assembly	AT-260
	from D ₂ to D ₃ .		4. High clutch	<u>AT-325</u>
		OFF vehicle	5. Brake band	AT-352
			Accelerator pedal position (APP) sensor	<u>AT-172</u>
Shift Shock		ON vehicle	2. Line pressure test	<u>AT-55</u>
	Too sharp a		3. Control valve assembly	<u>AT-260</u>
	shock in change from D3 to D4.		4. Brake band	AT-352
	110111 23 10 24 .	OFF vehicle	5. Overrun clutch	AT-331
			6. Forward one-way clutch	<u>AT-342</u>
	Gear change shock felt during deceleration by releasing acceler- ator pedal.	ON vehicle	Accelerator pedal position (APP) sensor	<u>AT-172</u>
			2. Line pressure test	<u>AT-55</u>
			Overrun clutch solenoid valve	<u>AT-177</u>
			4. Control valve assembly	<u>AT-260</u>
	Large shock changing from 12 to 11 in "1" posi- tion.	ON vehicle	Control valve assembly	AT-260
		OFF vehicle	2. Low & reverse brake	<u>AT-338</u>
	Too high a gear change point from D1 to D2, from D2 to D3, from	ON vehicle	Accelerator pedal position (APP) sensor	<u>AT-172</u>
			Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-109, AT-182
			3. Shift solenoid valve A	<u>AT-162</u>
	D3 to D4.		4. Shift solenoid valve B	<u>AT-167</u>
	Gear change	ONtrakiala	1. Fluid level	<u>AT-17</u>
	directly from D1	ON vehicle	2. Accumulator servo release	AT-260
	to D ₃ occurs.	OFF vehicle	3. Brake band	AT-352
mproper Shift Fiming	Too high a		Accelerator pedal position (APP) sensor	<u>AT-172</u>
9	change point from D4 to D3, from D3 to D2, from D2 to D1.	ON vehicle	Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-109, AT-182
	Kickdown does		Accelerator pedal position (APP) sensor	<u>AT-172</u>
	not operate when depressing pedal	ON vehicle	Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-109, AT-182
	in D4 within kick- down vehicle		3. Shift solenoid valve A	<u>AT-162</u>
	speed.		4. Shift solenoid valve B	<u>AT-167</u>

Items	Symptom	Condition	Diagnostic item	Reference page	
	Kickdown oper- ates or engine		Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-109, AT-182	_
	overruns when depressing pedal	ON vehicle	2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
	in D4 beyond	OIV VEHICLE	3. Shift solenoid valve A	<u>AT-162</u>	_
kickdown vehicle speed limit.	kickdown vehicle speed limit.		4. Shift solenoid valve B	<u>AT-167</u>	_
Гiming	Gear change		Park/neutral position (PNP) switch adjustment	<u>AT-264</u>	-
	from 22 to 23 in "2" position.	ON vehicle	2. Control cable adjustment	<u>AT-252</u>	_
	Gear change		Park/neutral position (PNP) switch adjustment	<u>AT-264</u>	_
	from 11 to 12 in "1" position.	ON vehicle	2. Control cable adjustment	<u>AT-252</u>	_
Failure to change gear from D4 to D3.		1. Fluid level	<u>AT-17</u>	_	
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
		ONhists	3. Overrun clutch solenoid valve	<u>AT-177</u>	_
	-	ON vehicle	4. Shift solenoid valve A	<u>AT-162</u>	_
	_	OFF vehicle	5. Line pressure solenoid valve	<u>AT-155</u>	_
			6. Control valve assembly	<u>AT-260</u>	_
			7. Brake band	<u>AT-352</u>	_
			8. Overrun clutch	<u>AT-331</u>	
			1. Fluid level	<u>AT-17</u>	_
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
	Failure to change	ON vehicle	3. Shift solenoid valve A	<u>AT-162</u>	_
lo Down Shift	gear from D ₃ to D ₂ or from D ₄ to		4. Shift solenoid valve B	<u>AT-167</u>	_
	D2 .		5. Control valve assembly	<u>AT-260</u>	_
		OFF vehicle	6. High clutch	<u>AT-325</u>	_
		OFF vehicle	7. Brake band	<u>AT-352</u>	_
			1. Fluid level	<u>AT-17</u>	_
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
	Foilure to change	ON vehicle	3. Shift solenoid valve A	<u>AT-162</u>	_
	Failure to change gear from D2 to		4. Shift solenoid valve B	<u>AT-167</u>	_
	D1 or from D3 to D1.		5. Control valve assembly	<u>AT-260</u>	_
	. וט		6. Low one-way clutch	<u>AT-280</u>	_
		OFF vehicle	7. High clutch	<u>AT-325</u>	_
			8. Brake band	AT-352	

Items	Symptom	Condition	Diagnostic item	Reference page
	Failure to change	ON 1:1	Accelerator pedal position (APP) sensor	<u>AT-172</u>
	from D ₃ to 2 ₂		2. Shift solenoid valve B	<u>AT-167</u>
	when changing lever into "2" posi-	ON vehicle	3. Control valve assembly	<u>AT-260</u>
	tion.		4. Control cable adjustment	<u>AT-252</u>
	<u>AT-235</u>	OFF vehicle	5. Brake band	<u>AT-352</u>
			Park/neutral position (PNP) switch adjustment	<u>AT-264</u>
lo Down Shift			2. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	<u>AT-109</u> , <u>AT-18</u>
	Does not change	ON vehicle	3. Shift solenoid valve A	<u>AT-162</u>
	from 12 to 11 in "1" position.		4. Control valve assembly	<u>AT-260</u>
	. position		5. Overrun clutch solenoid valve	<u>AT-177</u>
		OFF vehicle	6. Overrun clutch	<u>AT-331</u>
		OFF vehicle	7. Low & reverse brake	<u>AT-338</u>
			Control cable adjustment	<u>AT-252</u>
			2. Shift solenoid valve A	<u>AT-162</u>
Failure to gear from D2.	Failure to change	ON vehicle	3. Control valve assembly	<u>AT-260</u>
	_	0.1. 100.0	4. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	<u>AT-109</u> , <u>AT-18</u>
			5. Accelerator pedal position (APP) sensor	<u>AT-172</u>
lo Up Shift		OFF vehicle	6. Brake band	<u>AT-352</u>
.o op o			Control cable adjustment	<u>AT-252</u>
			2. Shift solenoid valve B	<u>AT-167</u>
	Failure to change	ON vehicle	3. Control valve assembly	<u>AT-260</u>
	gear from D2 to D3.	0	Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	<u>AT-109</u> , <u>AT-18</u>
			5. Accelerator pedal position (APP) sensor	<u>AT-172</u>
		OFF vehicle	6. High clutch	<u>AT-325</u>
		Or i verilcie	7. Brake band	AT-352

Items	Symptom	Condition	Diagnostic item	Reference page
			Park/neutral position (PNP) switch adjustment	<u>AT-264</u>
			2. Overdrive control switch	<u>AT-249</u>
			3. Control cable adjustment	<u>AT-252</u>
	Failure to change gear from D3 to	ON vehicle	4. Shift solenoid valve A	<u>AT-162</u>
	D4 .		5. Vehicle speed sensor·A/T (Revolution sensor) and vehicle speed sensor·MTR	AT-109, AT-182
			6. A/T fluid temperature sensor	<u>AT-104</u>
		OFF vehicle	7. Brake band	<u>AT-352</u>
			Accelerator pedal position (APP) sensor	<u>AT-172</u>
la l la Chift			2. Park/neutral position (PNP) switch adjustment	<u>AT-264</u>
lo Up Shift			3. Overdrive control switch	<u>AT-249</u>
	A/T does not shift		4. Vehicle speed sensor·A/T (Revolution sensor) and vehicle speed sensor·MTR	AT-109, AT-182
	to D4 when driving with over-drive control switch ON.	ON vehicle OFF vehicle	5. Shift solenoid valve A	<u>AT-162</u>
			6. Overrun clutch solenoid valve	<u>AT-177</u>
			7. Control valve assembly	<u>AT-260</u>
			8. A/T fluid temperature sensor	<u>AT-104</u>
			9. Line pressure solenoid valve	<u>AT-155</u>
			10. Brake band	<u>AT-352</u>
			11. Overrun clutch	<u>AT-331</u>
			Control cable adjustment	<u>AT-252</u>
			2. Stall test	<u>AT-52</u>
	Vehicle will not run in "R" position	ON vehicle	3. Line pressure test	<u>AT-55</u>
	(but runs in "D",		4. Line pressure solenoid valve	<u>AT-155</u>
	"2" and "1" positions). Clutch		5. Control valve assembly	AT-260
	slips.		6. Reverse clutch	<u>AT-320</u>
Slips/Will Not	Very poor accel-		7. High clutch	AT-325
Engage	eration.	OFF vehicle	8. Forward clutch	AT-331
			9. Overrun clutch	<u>AT-331</u>
			10. Low & reverse brake	<u>AT-338</u>
	Vehicle will not	ON vehicle	Control cable adjustment	<u>AT-252</u>
run in "D" and "2" positions (but runs in "1" and "R" positions).	OFF vehicle	2. Low one-way clutch	<u>AT-280</u>	

Revision: 2005 March AT-71 2005 X-Trail

А

В

ΔT

D

Е

F

G

Н

J

K

L

M

Items	Symptom	Condition	Diagnostic item	Reference page
			1. Fluid level	<u>AT-17</u>
			2. Stall test	<u>AT-52</u>
		ON vehicle	3. Line pressure test	<u>AT-55</u>
	Vehicle will not run in "D", "1", "2"	On venicie	4. Line pressure solenoid valve	<u>AT-155</u>
	positions (but		5. Control valve assembly	AT-260
	runs in "R" posi- tion). Clutch slips.		6. Accumulator N-D	AT-260
	Very poor accel-		7. Reverse clutch	AT-320
	eration.		8. High clutch	<u>AT-325</u>
		OFF vehicle	9. Forward clutch	AT-331
			10. Forward one-way clutch	AT-331
			11. Low one-way clutch	AT-280
			1. Fluid level	<u>AT-17</u>
			2. Control cable adjustment	AT-252
			3. Accelerator pedal position (APP) sensor	<u>AT-172</u>
	Clutches or brakes slip some- what in starting.	ON vehicle	4. Line pressure test	<u>AT-55</u>
			5. Line pressure solenoid valve	<u>AT-155</u>
			6. Control valve assembly	AT-260
Slips/Will Not			7. Accumulator N-D	AT-260
Engage		OFF vehicle	8. Forward clutch	AT-331
			9. Reverse clutch	AT-320
			10. Low & reverse brake	AT-338
			11. Oil pump	AT-299
			12. Torque converter	AT-280
			1. Fluid level	<u>AT-17</u>
		ON vehicle	2. Line pressure test	<u>AT-55</u>
	No creep at all.		3. Control valve assembly	AT-260
	AT-212, AT-215		4. Forward clutch	AT-331
		OFF vehicle	5. Oil pump	AT-299
			6. Torque converter	AT-280
			1. Fluid level	<u>AT-17</u>
			2. Accelerator pedal position (APP) sensor	AT-172
	Almost no shock or clutches slip-	ON vehicle	3. Line pressure test	<u>AT-55</u>
	ping in change		4. Accumulator servo release	AT-260
	from D ₁ to D ₂ .		5. Control valve assembly	AT-260
		OFF vehicle	6. Brake band	AT-352

Items	Symptom	Condition	Diagnostic item	Reference page	
			1. Fluid level	<u>AT-17</u>	_
	Almost as about	ONLyabiala	2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	
	Almost no shock or slipping in change from Do	ON vehicle	3. Line pressure test	<u>AT-55</u>	_
or slipping in change from D2 to D3.		4. Control valve assembly	AT-260	_	
	055	5. High clutch	AT-325		
	Almost no shock or slipping in change from D3 to D4. Races extremely fast or slips in changing from D4.	OFF vehicle	6. Forward clutch	AT-331	Α
			1. Fluid level	<u>AT-17</u>	_
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
		ON vehicle	3. Line pressure test	<u>AT-55</u>	_
			4. Control valve assembly	AT-260	_
		OFF vehicle	5. Brake band	AT-352	_
			1. Fluid level	<u>AT-17</u>	_
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
		ast or slips in	3. Line pressure test	<u>AT-55</u>	_
			4. Line pressure solenoid valve	<u>AT-155</u>	_
changing from D4 to D3 when depressing pedal.		5. Shift solenoid valve A	<u>AT-162</u>	_	
		6. Control valve assembly	AT-260	_	
- Engage	Silps/ Will NOT	0== 1:1	7. Brake band	AT-352	_
		OFF vehicle	8. Forward clutch	AT-331	_
		Races extremely fast or slips in changing from D4 to D2 when depressing pedal.	1. Fluid level	<u>AT-17</u>	_
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_
			3. Line pressure test	<u>AT-55</u>	_
			4. Line pressure solenoid valve	<u>AT-155</u>	_
	changing from D4		5. Shift solenoid valve A	AT-162	_
	to D2 when		6. Shift solenoid valve B	AT-167	_
	depressing pedal.		7. Control valve assembly	AT-260	_
			8. Brake band	AT-352	_
Races extremely fast or slips in	OFF vehicle	9. Forward clutch	AT-331	_	
		1. Fluid level	<u>AT-17</u>	_	
		2. Accelerator pedal position (APP) sensor	<u>AT-172</u>	_	
	ONL	3. Line pressure test	<u>AT-55</u>	_	
	ON vehicle	4. Line pressure solenoid valve	<u>AT-155</u>	_	
	changing from D3 to D2 when		5. Shift solenoid valve B	<u>AT-167</u>	_
	depressing pedal.		6. Control valve assembly	<u>AT-260</u>	_
		0==	7. Brake band	<u>AT-352</u>	_
		OFF vehicle	8. High clutch	AT-325	_

Items	Symptom	Condition	Diagnostic item	Reference page
			1. Fluid level	<u>AT-17</u>
			2. Accelerator pedal position (APP) sensor	<u>AT-172</u>
Slips/Will Not Engage	Races extremely		3. Line pressure test	<u>AT-55</u>
	fast or slips in	ON vehicle	4. Line pressure solenoid valve	<u>AT-155</u>
	changing from D4 or D3 to D1		5. Shift solenoid valve A	<u>AT-162</u>
	when depressing		6. Shift solenoid valve B	<u>AT-167</u>
	pedal.		7. Control valve assembly	<u>AT-260</u>
			8. Forward clutch	AT-331
		OFF vehicle	9. Forward one-way clutch	<u>AT-342</u>
			10. Low one-way clutch	<u>AT-280</u>
			1. Fluid level	<u>AT-17</u>
		ON vehicle	2. Control cable adjustment	<u>AT-252</u>
		ON Verlicle	3. Line pressure test	<u>AT-55</u>
	Vehicle will not run in any position.		4. Line pressure solenoid valve	<u>AT-155</u>
		OFF vehicle	5. Oil pump	<u>AT-299</u>
			6. High clutch	AT-325
			7. Brake band	<u>AT-352</u>
			8. Low & reverse brake	<u>AT-338</u>
			9. Torque converter	<u>AT-280</u>
			10. Parking components	<u>AT-272</u>
	Engine cannot be started in "P" and "N" positions. AT-207 Engine starts in	ON vehicle	1. Ignition switch and starter	PG-2, SC-9
			2. Control cable adjustment	<u>AT-252</u>
			3. Park/neutral position (PNP) switch adjustment	<u>AT-264</u>
			Control cable adjustment	<u>AT-252</u>
	positions other than "P" and "N".		2. Park/neutral position (PNP) switch adjustment	<u>AT-264</u>
			1. Fluid level	<u>AT-17</u>
			2. Line pressure test	<u>AT-55</u>
	Transaxle noise	ON vehicle	3. Accelerator pedal position (APP) sensor	<u>AT-172</u>
Others	in "P" and "N" positions.		4. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-109, AT-182
		OFF vahiala	5. Oil pump	<u>AT-299</u>
		OFF vehicle	6. Torque converter	AT-280
	Vehicle moves	ON vehicle	Control cable adjustment	<u>AT-252</u>
	when changing into "P" position or parking gear does not disengage when shifted out of "P" position.	OFF vehicle	2. Parking components	<u>AT-272</u>

Items	Symptom	Condition	Diagnostic item	Reference page
		ON vehicle	Control cable adjustment	<u>AT-252</u>
	Vehicle runs in		2. Forward clutch	AT-331
	"N" position. AT-209	OFF vehicle	3. Reverse clutch	AT-320
			4. Overrun clutch	<u>AT-331</u>
			1. Fluid level	<u>AT-17</u>
			2. Control cable adjustment	AT-252
		ON vehicle	3. Line pressure test	<u>AT-55</u>
	Vehicle braked		4. Line pressure solenoid valve	<u>AT-155</u>
	when shifting into		5. Control valve assembly	<u>AT-260</u>
	"R" position.		6. High clutch	<u>AT-325</u>
		OFF vehicle	7. Brake band	AT-352
			8. Forward clutch	<u>AT-331</u>
			9. Overrun clutch	<u>AT-331</u>
	Excessive creep.	ON vehicle	1. Engine idle speed	EC-75
		ON vehicle	1. Engine idle speed	EC-75
ners	Engine stops when shifting		2. Fluid level	<u>AT-17</u>
	lever into "R", "D",		3. Torque converter clutch solenoid valve	<u>AT-142</u>
	"2" and "1" posi- tions.		4. Control valve assembly	AT-260
	tions.	OFF vehicle	5. Torque converter	<u>AT-280</u>
		ON vehicle	1. Fluid level	<u>AT-17</u>
	Vehicle braked by	e from	2. Reverse clutch	AT-320
	gear change from		3. Low & reverse brake	<u>AT-338</u>
	D1 to D2.	OFF vehicle	4. High clutch	<u>AT-325</u>
			5. Low one-way clutch	<u>AT-280</u>
	Vehicle braked by	ON vehicle	1. Fluid level	<u>AT-17</u>
	gear change from D2 to D3.	OFF vehicle	2. Brake band	AT-352
		ON vehicle	1. Fluid level	<u>AT-17</u>
	Vehicle braked by gear change from		2. Overrun clutch	<u>AT-331</u>
	D3 to D4.	OFF vehicle	3. Forward one-way clutch	<u>AT-342</u>
			4. Reverse clutch	AT-320

Revision: 2005 March AT-75 2005 X-Trail

В

Α

ΑT

D

Е

G

F

Н

Κ

M

Items	Symptom	Condition	Diagnostic item	Reference page
			1. Fluid level	<u>AT-17</u>
			2. Park/neutral position (PNP) switch adjustment	<u>AT-264</u>
			3. Overdrive control switch	<u>AT-249</u>
			4. Accelerator pedal position (APP) sensor	<u>AT-172</u>
		ON vehicle	5. Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	<u>AT-109</u> , <u>AT-182</u>
	Maximum speed		6. Shift solenoid valve A	<u>AT-162</u>
	not attained.		7. Shift solenoid valve B	<u>AT-167</u>
	Acceleration poor.		8. Control valve assembly	AT-260
			9. Reverse clutch	AT-320
			10. High clutch	AT-325
			11. Brake band	AT-352
		OFF vehicle	12. Low & reverse brake	AT-338
			13. Oil pump	<u>AT-299</u>
			14. Torque converter	AT-280
	Transaxle noise	ON vehicle	1. Fluid level	<u>AT-17</u>
	in "D", "2", "1" and "R" positions.	OFF vehicle	2. Torque converter	<u>AT-280</u>
	Engine brake does not operate in "1" position.	ON vehicle	Park/neutral position (PNP) switch adjustment	AT-264
			2. Control cable adjustment	AT-252
Others			Vehicle speed sensor-A/T (Revolution sensor) and vehicle speed sensor-MTR	AT-109, AT-182
			4. Control valve assembly	AT-260
			5. Overrun clutch solenoid valve	<u>AT-177</u>
		OFF walking	6. Overrun clutch	AT-331
		OFF vehicle	7. Low & reverse brake	<u>AT-338</u>
			1. Fluid level	<u>AT-17</u>
			2. Engine idle speed	EC-75
			3. Accelerator pedal position (APP) sensor	<u>AT-172</u>
		ON vehicle	4. Line pressure test	<u>AT-55</u>
			5. Line pressure solenoid valve	<u>AT-155</u>
			6. Control valve assembly	AT-260
	Transaxle over-		7. Oil pump	AT-299
	heats.		8. Reverse clutch	AT-320
			9. High clutch	AT-325
		0==	10. Brake band	AT-352
		OFF vehicle	11. Forward clutch	AT-331
			12. Overrun clutch	AT-331
			13. Low & reverse brake	<u>AT-338</u>
			14. Torque converter	AT-280

Items	Symptom	Condition	Diagnostic item	Reference page
		ON vehicle	1. Fluid level	<u>AT-17</u>
Others	ATF shoots out		2. Reverse clutch	AT-320
	during operation.		3. High clutch	<u>AT-325</u>
	White smoke emitted from	OFF vahiala	4. Brake band	AT-352
	exhaust pipe dur-	OFF vehicle	5. Forward clutch	<u>AT-331</u>
	ing operation.		6. Overrun clutch	<u>AT-331</u>
			7. Low & reverse brake	<u>AT-338</u>
		ON vehicle	1. Fluid level	<u>AT-17</u>
Mileis		OFF vehicle	2. Torque converter	<u>AT-280</u>
			3. Oil pump	<u>AT-299</u>
	Unusual smell at		4. Reverse clutch	<u>AT-320</u>
	fluid charging		5. High clutch	<u>AT-325</u>
	pipe.		6. Brake band	<u>AT-352</u>
			7. Forward clutch	AT-331
			8. Overrun clutch	<u>AT-331</u>
			9. Low & reverse brake	AT-338

TCM Terminals and Reference Value TCM CONNECTOR TERMINAL LAYOUT

ACS007K6

Α

В

ΑT

D


Е

F

G

Н

M

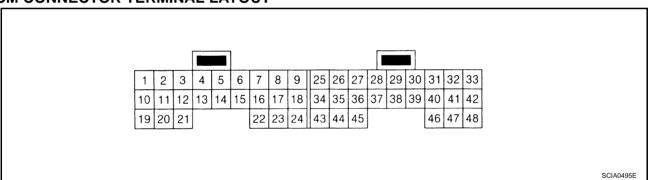

TCM INSPECTION TABLE

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item		Condition	Judgement stan- dard (Approx.)
4	R/W	Line pressure sole-		When releasing accelerator pedal after warming up engine.	1.5 - 3.0V
ı	K/VV	noid valve		When depressing accelerator pedal fully after warming up engine.	OV
2	P/B	Line pressure sole-		When releasing accelerator pedal after warming up engine.	5 - 14V
2	F/B	noid valve (with drop- ping resistor)	E STA OF	When depressing accelerator pedal fully after warming up engine.	0V
3	GY/R	Torque converter		When A/T performs lock-up.	8 - 15V
3	GY/K	clutch solenoid valve		When A/T does not perform lock-up.	0V
5	G/R	CAN H		_	_
6	GY/R	CAN L		_	_
			an an	When turning ignition switch ON.	Battery voltage
10	BR/W	Power source	(CON) OF (COFF)	When turning ignition switch OFF.	0V

Terminal	Wire color	ltem		Condition	Judgement stan- dard (Approx.)
11	L/W	Shift solenoid valve A		When shift solenoid valve A operates. (When driving in "D1" or "D4".)	Battery voltage
11	L/VV	Shift solehold valve A		When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	0V
12	L/Y	Shift solenoid valve B		When shift solenoid valve B operates. (When driving in "D1" or "D2".)	Battery voltage
12	L/ I	Shift solehold valve b		When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	0V
19	BR/W	Power source	CON OF COFF	Same as No. 10	
				When overrun clutch solenoid valve operates.	Battery voltage
20	L/B	Overrun clutch sole- noid valve		When overrun clutch solenoid valve does not operate.	0V
25	В	Ground		Always	0V
26	BR/Y	PNP switch "1" posi-		When setting selector lever to "1" position.	Battery voltage
20	DR/ I	tion		When setting selector lever to other positions.	0V
27	L	PNP switch "2" posi-	and A	When setting selector lever to "2" position.	Battery voltage
21	L	tion		When setting selector lever to other positions.	0V
28	L	Power source (Memory back-up)		Always	Battery voltage
				When moving at 20 km/h (12 MPH)	450 Hz
29	W/R	Revolution sensor		When vehicle parks.	Under 1.3V or over 4.5V
30 *2	G/B	CONSULT- II (RX)		-	_
31 * ²	W	CONSULT- II (TX)		_	_
	L	Sensor power	an an	When turning ignition switch ON.	4.5 - 5.5V

Terminal	Wire color	Item		Condition	Judgement stan- dard (Approx.)
24	W/G	PNP switch "D" posi-		When setting selector lever to "D" position.	Battery voltage
34	VV/G	tion		When setting selector lever to other positions.	0V
35	Y/G	PNP switch "R" posi-	CON and LI	When setting selector lever to "R" position.	Battery voltage
33	1/G	tion		When setting selector lever to other positions.	0V
36	G	PNP switch "N" or "P"		When setting selector lever to "N" or "P" position.	Battery voltage
30	G	position		When setting selector lever to other positions.	0V
39 * ¹	L/OR	Engine speed signal	CON and	Refer to EC-115, "ECM INSPECTION	TABLE" .
40	L/W	Vehicle speed sensor		When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Voltage varies between less than 0V and more than 4.5V
41 * ¹	G/Y	Accelerator pedal position (APP) sensor	CON	When depressing accelerator pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-closed throttle: 0.8V Fully-open throt- tle: 4.4V
42 * ¹	В	Sensor ground		Always	0V
47	BR	A/T fluid temperature		When ATF temperature is 20°C (68°F).	1.5V
41	DΝ	sensor	(Lon)	When ATF temperature is 80°C (176°F).	0.5V
48	В	Ground		Always	0V

^{*1:} These terminals are connected to ECM.

M

Α

В

D

Е

F

G

Н

^{*2:} These terminals are connected to data link connector.

CONSULT-II Function (A/T)

ACS007K7

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

FUNCTION

Diagnostic test mode	Function	Reference page
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-II.	_
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	<u>AT-82</u>
Data monitor	Input/Output data in the ECM can be read.	<u>AT-84</u>
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.	<u>AT-87</u>
Function test	Performed by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	_
DTC work support	Select the operating condition to confirm Diagnosis Trouble Codes.	<u>AT-87</u>
ECM (ECU,TCM) part number	ECM (ECU,TCM) part number can be read.	_

CONSULT-II REFERENCE VALUE

NOTICE:

- 1. The CONSULT-II electrically displays shift timing and lock-up timing (that is, operation timing of each sole-noid).
 - Check for time difference between actual shift timing and the CONSULT-II display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
- Shift schedule (which implies gear position) displayed on CONSULT-II and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
- Actual shift schedule has more or less tolerance or allowance.
- Shift schedule indicated in Service Manual refers to the point where shifts start, and
- Gear position displayed on CONSULT-II indicates the point where shifts are completed.
- 3. Shift solenoid valve "A" or "B" is displayed on CONSULT-II at the start of shifting. Gear position is displayed upon completion of shifting (which is computed by TCM).

Item name	Condition	Display value (Approx.)
VHCL/S SE·A/T	During driving	Approximately matches the speedometer
VHCL/S SE-MTR	During driving	reading.
	When depressing accelerator pedal slowly after	Fully-closed throttle: 0.8V
THRTL POS SEN	warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-open throttle: 4.4V
FLUID TEMP SE	When ATF temperature is 20°C (68°F).	1.5V
FLOID TEIVIP 3E	When ATF temperature is 80°C (176°F).	0.5V
BATTERY VOLT	When turning ignition switch to "ON".	Battery voltage
ENGINE SPEED	Engine running	Approximately matches the tachometer reading.
OVERDRIVE SW	When O/D OFF indicator lamp is off.	ON
OVERDRIVE SW	When O/D OFF indicator lamp is on.	OFF
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
K PUSITION SW	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
D FOSTHON SW	When setting selector lever to other positions.	OFF

Item name	Condition	Display value (Approx.)	
a BOOLTION OW	When setting selector lever to "2" position.	ON	/
2 POSITION SW	When setting selector lever to other positions.	OFF	-
4 DOCITION CW	When setting selector lever to "1" position.	ON	E
1 POSITION SW	When setting selector lever to other positions.	OFF	-
CLOCED THE ICM	Released accelerator pedal.	ON	
CLOSED THL/SW	Fully depressed accelerator pedal.	OFF	Α
W/O TUDI /D CW	Fully depressed accelerator pedal.	ON	-
W/O THRL/P-SW	Released accelerator pedal.	OFF	
SHIFT S/V A	When shift solenoid valve A operates. (When driving in "D1" or "D4".)	ON	
SHIFT S/V A	When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	OFF	[
OURET CAVE	When shift solenoid valve B operates. (When driving in "D1 " or "D2 ".)	ON	
SHIFT S/V B	When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	OFF	- [
	When overrun clutch solenoid valve operates.	ON	(
OVERRUN/C S/V	When overrun clutch solenoid valve does not operate.	OFF	`
DDAKE OW	Depressed brake pedal.	ON	ŀ
BRAKE SW	Released brake pedal.	OFF	-
GEAR	During driving	1, 2, 3, 4	-
	When setting selector lever to "N" or "P" position.	N · P	-
	When setting selector lever to "R" position.	R	-
SLCT LVR POSI	When setting selector lever to "D" position.	D	,
	When setting selector lever to "2" position.	2	-
	When setting selector lever to "1" position.	1	- -
VEHICLE SPEED	During driving	Approximately matches the speedometer reading.	-
LINE PRES DTY	Small throttle opening (Low line pressure) ⇔ Large throttle opening (High line pressure)	0% ⇔ 92%	
TCC S/V DUTY	Lock-up OFF ⇔ Lock-up ON	4% ⇔ 94%	-


Revision: 2005 March AT-81 2005 X-Trail

CONSULT-II SETTING PROCEDURE


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


- For details, refer to the separate "CONSULT-II Operations Manual".
- 1. Turn ignition switch OFF.
- Connect CONSULT-II and CONSULT-II CONVERTER to data link connector, which is located in instrument driver lower panel.

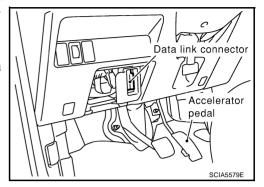

- 3. Turn ignition switch ON. (Do not start engine.)
- 4. Touch "START (NISSAN BASED VHCL)".

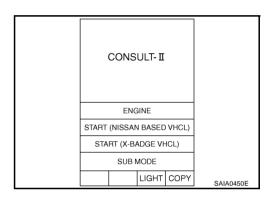

- Touch "A/T".
 If "A/T" is not indicated, go to GI-38, "CONSULT-II Data Link Connector (DLC) Circuit".
- Perform each diagnostic test mode according to each service procedure.

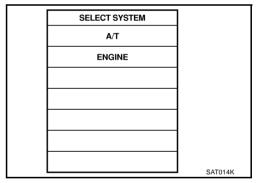


SELF-DIAGNOSTIC RESULT MODE

After performing <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>, place check marks for results on the <u>AT-47, "DIAGNOSTIC WORKSHEET"</u>. Reference pages are provided following the items.

Operation Procedure

- 1. Perform AT-82, "CONSULT-II SETTING PROCEDURE".
- Touch "SELF-DIAG RESULTS".
 Display shows malfunction experienced since the last erasing operation.

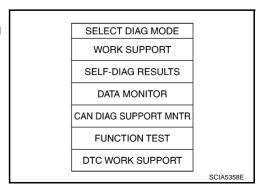


Items (CONSULT-II screen terms)	Malfunction is detected when	Reference page
CAN COMM CIRCUIT	Malfunction is detected in CAN communication line.	<u>AT-95</u>
VHCL SPEED SEN-A/T	T011 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	<u>AT-109</u>
/HCL SPEED SEN·MTR	TCM does not receive the proper voltage signal from the sensor.	<u>AT-182</u>
THROTTLE POSI SEN	TCM receives an excessively low or high voltage from this sensor	<u>AT-172</u>
SHIFT SOLENOID/V A	TCM detects an improper voltage drop when it tries to operate the sole- noid valve.	<u>AT-162</u>
SHIFT SOLENOID/V B	TCM detects an improper voltage drop when it tries to operate the sole- noid valve.	<u>AT-167</u>
OVERRUN CLUTCH S/V	TCM detects an improper voltage drop when it tries to operate the sole- noid valve.	<u>AT-177</u>
T/C CLUTCH SOL/V	TCM detects an improper voltage drop when it tries to operate the sole- noid valve.	<u>AT-142</u>
ATF TEMP SEN/CIRC	TCM receives an excessively low or high voltage from the sensor.	<u>AT-104</u>
BATT/FLUID TEMP SEN	Town receives an excessively low or night voltage from the sensor.	<u>AT-187</u>
ENGINE SPEED SIG	TCM does not receive the proper voltage signal from the ECM.	<u>AT-115</u>
VT 1ST GR FNCTN	A/T cannot be shifted to the 1st gear position even if electrical circuit is good.	<u>AT-120</u>
A/T 2ND GR FNCTN	A/T cannot be shifted to the 2nd gear position even if electrical circuit is good.	<u>AT-125</u>
A/T 3RD GR FNCTN	A/T cannot be shifted to the 3rd gear position even if electrical circuit is good.	AT-130
A/T 4TH GR FNCTN	A/T cannot be shifted to the 4th gear position even if electrical circuit is good.	<u>AT-135</u>
/T TCC S/V FNCTN	A/T cannot perform lock-up even if electrical circuit is good.	<u>AT-147</u>
INE PRESSURE S/V	TCM detects an improper voltage drop when it tries to operate the sole- noid valve.	AT-155
CONTROL UNIT (RAM)	TCM memory (RAM) is malfunctioning	<u>AT-198</u>
CONTROL UNIT (ROM)	TCM memory (ROM) is malfunctioning	<u>AT-198</u>
CONT UNIT(EEP ROM)	TCM memory (EEP ROM) is malfunctioning.	<u>AT-200</u>
PNP SW/CIRC	TCM does not receive the correct voltage signal (based on the gear position) from the switch.	<u>AT-98</u>
NITIAL START	This is not a malfunction message (Whenever shutting off a power supply to the TCM, this message appears on the screen). Refer to	


AT-83 Revision: 2005 March 2005 X-Trail

How to Erase Self-Diagnostic Results

- 1. Perform AT-82, "CONSULT-II SETTING PROCEDURE".
- 2. Touch "SELF-DIAG RESULTS".

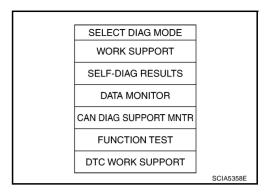

Touch "ERASE". (The self-diagnostic results will be erased.)

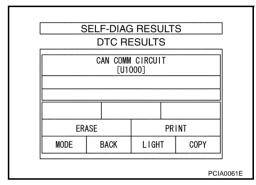


DATA MONITOR MODE

Operation Procedure

- 1. Perform AT-82, "CONSULT-II SETTING PROCEDURE".
- 2. Touch "DATA MONITOR".

NOTE:

When malfunction is detected, CONSULT-II performs "REAL-TIME DIAGNOSIS". Also, any malfunction detected while in this mode will be displayed at real time.

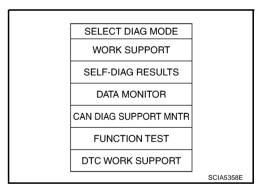

Display Items List

X: Standard, —: Not applicable, ▼: Option

	SELECT MONITOR ITEM			
Monitor item (Unit)	TCM INPUT SIGNALS	MAIN SIG- NALS	SELEC- TION FROM MENU	Remarks
VHCL/S SE-A/T (km/h)	Х	_	▼	Revolution sensor
VHCL/S SE·MTR (km/h)	Х	_	•	Vehicle speed display may not be accurate under approx. 10 km/h (6 mph). It may not indicate 0 km/h (0 mph) when vehicle is stationary.
THRTL POS SEN (V)	Х	_	▼	
FLUID TEMP SE (V)	Х	_	▼	
BATTERY VOLT (V)	Х	_	▼	
ENGINE SPEED (rpm)	Х	Х	▼	

	SELE	CT MONITOR	ITEM	
Monitor item (Unit)	TCM INPUT SIGNALS	MAIN SIG- NALS	SELEC- TION FROM MENU	Remarks
TURBINE REV (rpm)	Х	_	▼	
OVERDRIVE SW (ON/OFF)	Х	_	▼	
PN POSI SW (ON/OFF)	X	_	▼	
R POSITION SW (ON/OFF)	Х	_	▼	
D POSITION SW (ON/OFF)	Х	_	▼	
2 POSITION SW (ON/OFF)	X	_	▼	
1 POSITION SW (ON/OFF)	X	_	▼	
ASCD-CRUISE (ON/OFF)	X	_	▼	
ACC OD CUT (ON/OFF)	X	_	▼	Signal input with CAN communication.
KICKDOWN SW (ON/OFF)	X	_	▼	
POWERSHIFT SW (ON/OFF)	X	_	▼	Not mounted but displayed.
CLOSED THL/SW (ON/OFF)	X	_	▼	.
W/O THRL/P-SW (ON/OFF)	X	_	▼	Signal input with CAN communication.
*SHIFT S/V A (ON/OFF)	_	_	▼	Displays status of check signal (reinput
*SHIFT S/V B (ON/OFF)	_	_	▼	signal) for TCM control signal output. Remains unchanged when solenoid
*OVERRUN/C S/V (ON/OFF)	_	_	▼	valves are open or shorted.
HOLD SW (ON/OFF)	X	_	▼	Not mounted but displayed.
BRAKE SW (ON/OFF)	Х	_	▼	Stop lamp switch
GEAR	_	Х	▼	Gear position recognized by the TCM updated after gear-shifting
SLCT LVR POSI	_	Х	•	Selector lever position is recognized by the TCM. For fail-safe operation, the specific value used for control is displayed.
VEHICLE SPEED (km/h)	_	Х	▼	Vehicle speed recognized by the TCM.
THROTTLE POSI (0.0/8)	_	Х	•	Degree of opening for accelerator recognized by the TCM For fail-safe operation, the specific value used for control is displayed.
LINE PRES DTY (%)	_	Х	▼	
TCC S/V DUTY (%)	_	Х	▼	
SHIFT S/V A (ON/OFF)	_	Х	▼	
SHIFT S/V B (ON/OFF)	_	Х	▼	
OVERRUN/C S/V (ON/OFF)	_	Х	▼	
SELF-D DP LMP (ON/OFF)	_	Х	▼	
TC SLIP RATIO (0.000)	_	_	▼	
TC SLIP SPEED (rpm)	_	_	▼	Difference between engine speed and torque converter input shaft speed
Voltage (V)	_	_	▼	Displays the value measured by the voltage probe.

Revision: 2005 March AT-85 2005 X-Trail

ΛТ

D

Е

G

Н

1


<

VΙ

	SELE	ECT MONITOR	ITEM		
Monitor item (Unit)	TCM INPUT SIGNALS	MAIN SIG- NALS	SELEC- TION FROM MENU	Remarks	
Frequency (Hz)	_	_	▼		
DUTY·HI (high) (%)	_	_	▼		
DUTY-LOW (low) (%)	_	_	▼	The value measured by the pulse probe is displayed.	
PLS WIDTH·HI (ms)	_	_	▼		
PLS WIDTH-LOW (ms)	_	_	▼		

CAN DIAGNOSTIC SUPPORT MONITOR MODE Operation Procedure

- 1. Perform AT-82, "CONSULT-II SETTING PROCEDURE".
- Touch "CAN DIAG SUPPORT MNTR". Refer to LAN-13, "CAN Diagnostic Support Monitor".

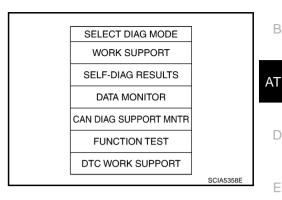

Α


В

D

DTC WORK SUPPORT MODE

Operation Procedure


- 1. Perform AT-82, "CONSULT-II SETTING PROCEDURE".
- Touch "DTC WORK SUPPORT".

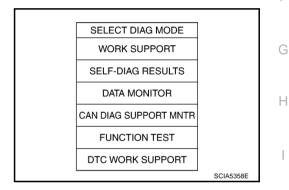

3. Touch select item menu (1ST, 2ND, etc.).

SELECT WORK ITEM 1ST GR FNCTN P0731 2ND GR FNCTN P0732 3RD GR FNCTN P0733 4TH GRFNCTN P0734 TCC S/V FNCTN P0744 SAT018K


Touch "START".

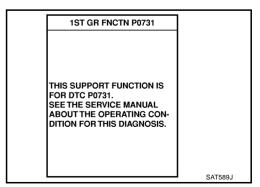


5. Perform driving test according to "DTC Confirmation Procedure" in "TROUBLE DIAGNOSIS FOR DTC".


1ST GR FNCTN I		
OUT OF COND		
MONITOR		
GEAR	xxx	
VEHICLE SPEED	XXXkm/h	
THROTTLE POSI	ххх	
TCC S/V DUTY	XXX %	SAT019K
		SATUTER

 When testing conditions are satisfied, CONSULT-II screen changes from "OUT OF CONDITION" to "TESTING".

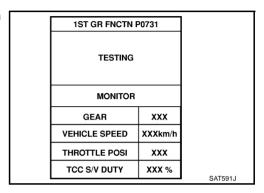

6. Stop vehicle. If "NG" appears on the screen, malfunction may exist. Go to "Diagnostic Procedure".

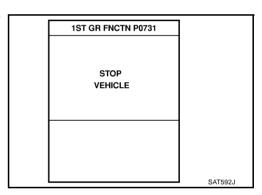


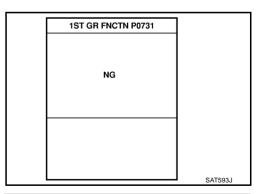


7. Perform test drive to check gear shift feeling in accordance with instructions displayed.

DRIVE VHCL IN D RANGE
SHIFTING 1→2→3→4 UNDER
NORMAL ACCELERATION.
DOES A/T SHFT NORMAL
CHECK FOR PROPER SHF
TIMING AND SHFT SHOCK

8. Touch "YES" or "NO".

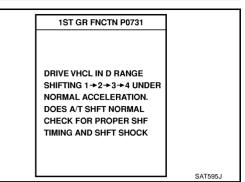

9. CONSULT-II procedure ended. If "NG" appears on the scene, a malfunction may exist. Go to "Diagnostic Procedure".

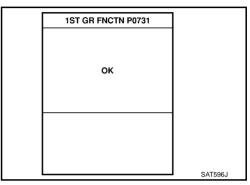

NG
SAT593J

L

Α

В

ΑT

D

G

Н

M

DTC work support item	Description	Check item
1ST GR FNCTN P0731	Following items for "A/T 1st gear function (P0731)" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	 Shift solenoid valve A Shift solenoid valve B Each clutch Hydraulic control circuit
2ND GR FNCTN P0732	Following items for "A/T 2nd gear function (P0732)" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	Shift solenoid valve BEach clutchHydraulic control circuit
3RD GR FNCTN P0733	Following items for "A/T 3rd gear function (P0733)" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	Shift solenoid valve AEach clutchHydraulic control circuit
4TH GR FNCTN P0734	Following items for "A/T 4th gear function (P0734)" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	 Shift solenoid valve A Shift solenoid valve B Overrun clutch solenoid valve Line pressure solenoid valve Each clutch Hydraulic control circuit
TCC S/V FNCTN P0744	Following items for "A/T TCC S/V function (lock-up) (P0744)" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	Torque converter clutch sole- noid valve Each clutch Hydraulic control circuit


Diagnostic Procedure Without CONSULT-II R TCM SELF-DIAGNOSTIC PROCEDURE

If a malfunction occurs in electrical system, turning ignition switch to ON will illuminate O/D OFF indicator lamp for 2 seconds. To detect a malfunction, entering a self-diagnosis start signal retrieves information on malfunctions from memory and indicates malfunction by blinking O/D OFF indicator lamp.

Diagnostic Procedure

1. CHECK O/D OFF INDICATOR LAMP

- Park vehicle on flat surface. 1.
- Move selector lever to "P" position.
- Turn ignition switch OFF. Wait at least 5 seconds.

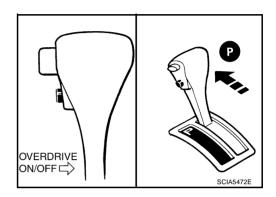


4. Turn ignition switch ON. (Do not start engine.)

Does O/D OFF indicator lamp come on about 2 seconds?

YES >> GO TO 2.

>> Stop procedure. Perform AT-205, "O/D OFF Indicator NO Lamp Does Not Come On" before proceeding.

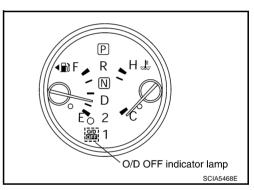

2. JUDGEMENT PROCEDURE STEP 1

- 1. Turn ignition switch OFF.
- 2. Keep pressing shift lock release button.
- Move selector lever from "P" to "D" position.
- 4. Turn ignition switch ON. (Do not start engine.)
- Keep pressing overdrive control switch while O/D OFF indicator lamp is lighting up for 2 seconds. (O/D 5. OFF indicator lamp is on.)
- Keep pressing overdrive control switch and shift selector lever to the position "2". (O/D OFF indicator lamp is on.)
- Stop pressing overdrive control switch. (O/D OFF indicator lamp is on.) 7.
- Shift selector lever to the position "1". (O/D OFF indicator lamp is on.)
- Keep pressing overdrive control switch. (O/D OFF indicator lamp is off.)
- 10. Depress accelerator pedal fully while pressing overdrive control switch.

>> GO TO 3.

3. CHECK SELF-DIAGNOSIS CODE

Check O/D OFF indicator lamp. Refer to AT-92, "JUDGEMENT OF SELF-DIAGNOSIS CODE".

>> DIAGNOSIS END

AT-91 Revision: 2005 March 2005 X-Trail

ΑT

Α


В

M

JUDGEMENT OF SELF-DIAGNOSIS CODE


O/D OFF indicator lamp

All judgement flickers are the same.

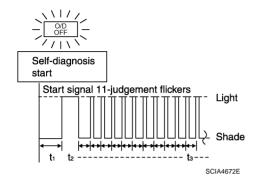

All circuits that can be confirmed by self-diagnosis are OK.


1st judgement flicker is longer than others.

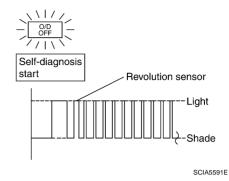

Revolution sensor circuit is short-circuited or disconnected. \Rightarrow Go to DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR).


Refer to AT-109

2nd judgement flicker is longer than others.

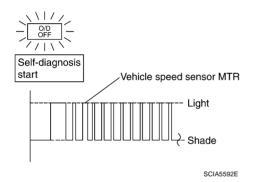

Vehicle speed sensor circuit is short-circuited or disconnected. \Rightarrow **Go to DTC VEHICLE SPEED SENSOR-MTR.** Refer to $\underline{\text{AT-}182}$

3rd judgement flicker is longer than others.

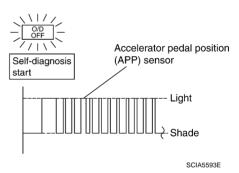


Accelerator pedal position (APP) sensor circuit is short-circuited or disconnected.

 \Rightarrow Go to DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR.


Refer to AT-172

4th judgement flicker is longer than others.

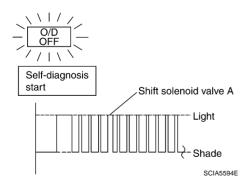

Shift solenoid valve A circuit is short-circuited or disconnected. \Rightarrow Go to DTC P0750 SHIFT SOLENOID VALVE A. Refer to AT-162

5th judgement flicker is longer than others.

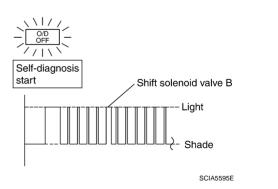

Shift solenoid valve B circuit is short-circuited or disconnected. \Rightarrow Go to DTC P0755 SHIFT SOLENOID VALVE B. Refer to AT-167


O/D OFF indicator lamp

6th judgement flicker is longer than others.

Overrun clutch solenoid valve circuit is short-circuited or disconnected.

 \Rightarrow Go to DTC P1760 OVERRUN CLUTCH SOLENOID VALVE. Refer to $\underline{\text{AT-}177}$


8th judgement flicker is longer than others.

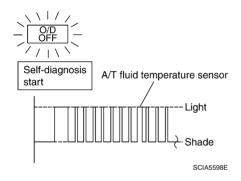

A/T fluid temperature sensor is disconnected or TCM power supply circuit is damaged.

 \Rightarrow Go to DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE). Refer to AT-187

7th judgement flicker is longer than others.

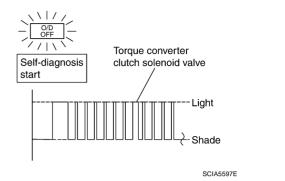


Torque converter clutch solenoid valve circuit is short-circuited or disconnected.

 \Rightarrow Go to DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE.

Refer to AT-142

9th judgement flicker is longer than others.

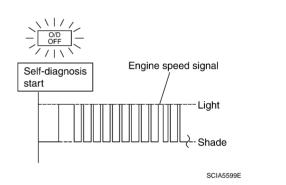

Engine speed signal circuit is short-circuited or disconnected.

⇒ Go to DTC P0725 ENGINE SPEED SIGNAL.

Refer to AT-115

M

Α

В

ΑT

D


F

G

Н

O/D OFF indicator lamp


10th judgement flicker is longer than others.

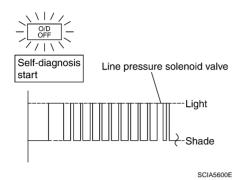

Line pressure solenoid valve circuit is short-circuited or disconnected.

 \Rightarrow Go to DTC P0745 LINE PRESSURE SOLENOID VALVE. Refer to $\underline{\text{AT-}155}$

11th judgement flicker is longer than others.

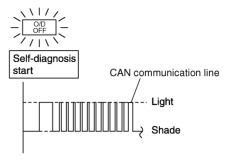


SCIA4673E

CAN communication line is damaged.

⇒Go to DTC U1000 CAN COMMUNICATION LINE.

Refer to AT-95

Lamp comes off.

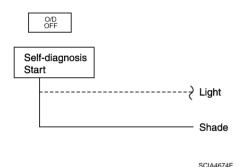


PNP switch, overdrive control switch, closed throttle position signal or wide open throttle position signal circuit is disconnected or TCM is damaged.

(Because closed throttle position signal and wide open throttle position signal are input via CAN communication line malfunction may continue after self-diagnosis.)

 \Rightarrow Go to TCM Self-diagnosis Does Not Activate Refer to $\underline{\text{AT-}244}$

Flickers as shown below.

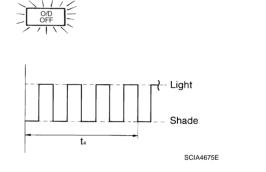

Battery power is low.

Battery has been disconnected for a long time.

Battery is connected conversely.

(When reconnecting TCM connectors.—This is not a malfunction).

⇒Go to MAIN POWER SUPPLY AND GROUND CIRCUIT.

Refer to AT-194

t1 = 2.5 seconds t2 = 2.0 seconds t3 = 1.0 second t4 = 1.0 second

NOW TO ERASE SELF-DIAGNOSTIC RESULTS

- 1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait for at least 5 seconds and then turn it ON again.
- 2. Perform AT-91, "Diagnostic Procedure Without CONSULT-II".
- Turn ignition switch OFF. (The self-diagnostic results will be erased.)

DTC U1000 CAN COMMUNICATION LINE

DTC U1000 CAN COMMUNICATION LINE

PFP:31940

Description

Α

ΑT

 D

F

Н

M

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

ACS007R0

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "CAN COMM CIRCUIT" with CONSULT-II or 11th judgement flicker without CON-SULT-II is detected when TCM does not receive the correct voltage signal from the switch based on the gear position.

Possible Cause ACS007R1

Harness or connectors (CAN communication line is open or shorted.)

DTC Confirmation Procedure

ACS007R2

CAUTION:

If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

(A) WITH CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Wait at least 6 seconds or start engine and wait for at least 6 seconds.
- If DTC is detected, go to AT-97, "Diagnostic Procedure".

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

WITH GST

Follow the procedure "WITH CONSULT-II"

WITHOUT CONSULT-II

- Turn ignition switch ON. (Do not start engine.) 1.
- Wait at least 6 seconds or start engine and wait at least 6 seconds.
- Perform self-diagnosis. Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".
- If DTC is detected, go to AT-97, "Diagnostic Procedure".


DTC U1000 CAN COMMUNICATION LINE


Wiring Diagram — AT — CAN

ACS007R3

AT-CAN-01

: DETECTABLE LINE FOR DTC
: NON-DETECTABLE LINE FOR DTC
: DATA LINE

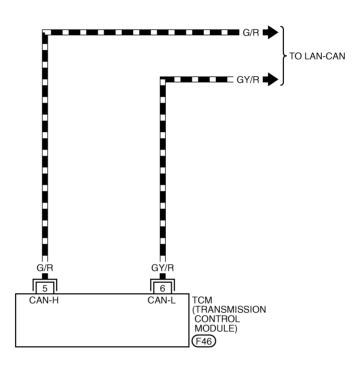

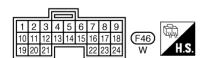

TCWA0234E

DTC U1000 CAN COMMUNICATION LINE

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Judgement standard (Approx.)
5	G/R	CAN H	_	_
6	GY/R	CAN L	_	_

Diagnostic Procedure

4CS007B4

Α

В

ΑT

D

F

1. CHECK CAN COMMUNICATION CIRCUIT

(I) With CONSULT-II


1. Turn ignition switch ON and start engine.

Select "SELF-DIAG RESULTS" mode for "A/T" with CONSULT-II

Is any malfunction of the "CAN COMM CIRCUIT" indicated?

YES >> Print out CONSULT-II screen, GO TO LAN section. Refer to <u>LAN-4</u>, "TROUBLE <u>DIAGNOSES WORK</u> FLOW".

NO >> INSPECTION END

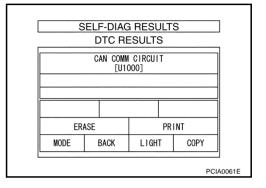

Н

K

L

M

DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH

PFP:32006

Description

ACS007R5

- The PNP switch assembly includes a transaxle range switch.
- The transaxle range switch detects the selector lever position and sends a signal to the TCM.

CONSULT-II Reference Value

ACS007Z0

Item name	Condition	Display value
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
FNFOSISW	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
K FOSITION SW	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
D F OSITION SW	When setting selector lever to other positions.	OFF
2 POSITION SW	When setting selector lever to "2" position.	ON
2 FOSITION SW	When setting selector lever to other positions.	OFF
1 POSITION SW	When setting selector lever to "1" position.	ON
T T COTTION OVV	When setting selector lever to other positions.	OFF

On Board Diagnosis Logic

ACS007R6

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "PNP SW/CIRC" with CONSULT-II is detected when TCM does not receive the correct voltage signal from the switch based on the gear position.

Possible Cause

- Harness or connectors
 [The park/neutral position (PNP) switch circuit is open or shorted.]
- Park/neutral position (PNP) switch

DTC Confirmation Procedure

ACS007R8

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 10 km/h (6 MPH) or more

THRTL POS SEN: More than 1.3V


SLCT LVR POSI: "D" position (OD ON or OFF)

4. If the check result is NG, go to AT-101, "Diagnostic Procedure" .

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

WITH GST

Follow the procedure "WITH CONSULT-II".

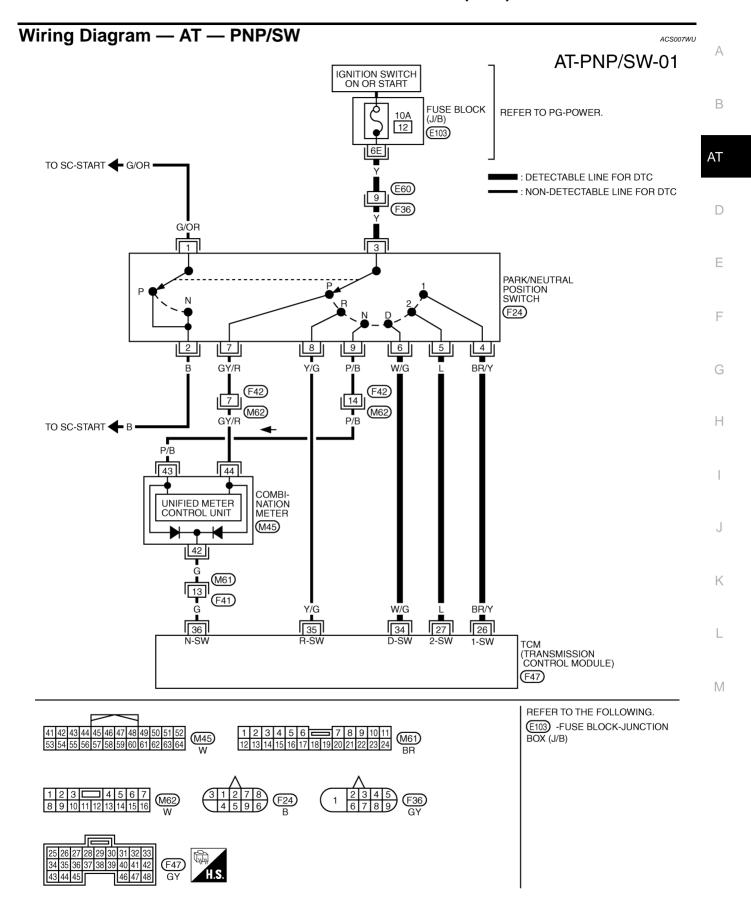

TCWA0229E

Terminal	Wire color	Item	C	ondition	Judgement stan dard (Approx.)
26		PNP switch "1"		When setting selector lever to "1" position.	
20	BR/Y	position		When setting selector lever to other positions.	OV
27	1	PNP switch "2"		When setting selector lever to "2" position.	Battery voltage
21	L	position		When setting selector lever to other positions.	OV
34	W/G	PNP switch "D"		When setting selector lever to "D" position.	Battery voltage
34	VV/G	position	and and	When setting selector lever to other positions.	OV
35	Y/G	PNP switch "R"		When setting selector lever to "R" position.	Battery voltage
33	1/G	position		When setting selector lever to other positions.	OV
36	G	PNP switch "N"		When setting selector lever to "N" or "P" position.	Battery voltage
30	G	or "P" position		When setting selector lever to other positions.	OV

Diagnostic Procedure

1. CHECK PNP SWITCH CIRCUIT (WITH CONSULT-II)

(I) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out "P", "R", "N", "D", "2" and "1" position switches moving selector lever to each position.

Item name	Condition	Display value
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
FIN FOSI SW	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
KT OSITION SW	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
D FOSITION SW	When setting selector lever to other positions.	OFF
2 POSITION SW	When setting selector lever to "2" position.	ON
2 FOSITION SW	When setting selector lever to other positions.	OFF
1 POSITION SW	When setting selector lever to "1" position.	ON
I FOSITION SW	When setting selector lever to other positions.	OFF

DATA MON	ITOR	
MONITORING		
PN POSI SW	OFF	1
R POSITION SW	OFF	
D POSITION SW	OFF	
2 POSITION SW	ON	
1 POSITION SW	OFF	
		SAT701J

OK or NG

OK >> GO TO 6.

NG >> GO TO 3.

Е

F

D

ACS007Z1

Α

В

ΑT

Н

G

ı

J

n

L

M

2. CHECK PNP SWITCH CIRCUIT (WITHOUT CONSULT-II)

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground while moving selector lever through each position.


Lever position	Terminal				
Level position	36	35	34	27	26
"P", "N"	В	0	0	0	0
"R"	0	В	0	0	0
"D"	0	0	В	0	0
"2"	0	0	0	В	0
"1"	0	0	0	0	В

B: Battery voltage

0: 0V

OK or NG


OK >> GO TO 6. NG >> GO TO 3.

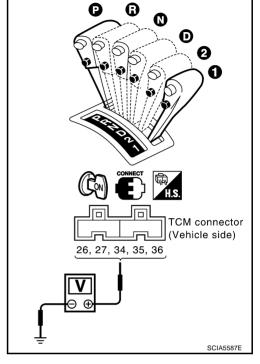

3. CHECK PNP SWITCH

- 1. Turn ignition switch OFF.
- 2. Disconnect PNP switch harness connector.
- 3. Check continuity between PNP switch harness connector terminals.

Lever position	Connector	Terminal	Continuity
"P"		1 - 2, 3 - 7	Yes
"R"	F24 -	3 - 8	*Continuity should not
"N"		1 - 2, 3 - 9	exist in posi- tions other than the specified positions.
"D"		3 - 6	
"2"		3 - 5	
"1"		3 - 4	

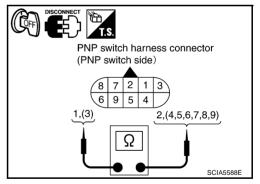

OK or NG

OK >> GO TO 5. NG >> GO TO 4.

4. CHECK CONTROL CABLE ADJUSTMENT

Check PNP switch again with control cable disconnected from manual shaft of A/T assembly. Refer to test group 3.

OK or NG

OK >> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.

NG >> Repair or replace PNP switch. Refer to AT-263, "Park/Neutral Position (PNP) Switch".

В

 \Box

F

Н

M

5. DETECT MALFUNCTIONING ITEMS Check the following. Harness for short or open between ignition switch and park/neutral position (PNP) switch. Harness for short or open between park/neutral position (PNP) switch and TCM. Harness for short or open between park/neutral position (PNP) switch and combination meter. Harness for short or open between combination meter and TCM. ΑT 10A fuse (NO.12, located in the fuse block) Combination meter. Refer to DI-4, "COMBINATION METERS". Ignition switch. Refer to PG-2, "POWER SUPPLY ROUTING". OK or NG OK >> GO TO 6. NG >> Repair or replace damaged parts. 6. CHECK DTC Perform AT-98, "DTC Confirmation Procedure". OK or NG OK >> INSPECTION END NG >> GO TO 7. 7. CHECK TOM Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value". 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector. OK or NG OK >> INSPECTION END NG >> Repair or replace damaged parts.

AT-103 Revision: 2005 March 2005 X-Trail

DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT

PFP:31940

Description

ACS007RA

The A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to the TCM.

CONSULT-II Reference Value

ACS007Z7

Item name	Condition	Display value (Approx.)
FLUID TEMP SE	When ATF temperature is 20°C (68°F).	1.5V
I LOID I LIVII OL	When ATF temperature is 80°C (176°F).	0.5V

On Board Diagnosis Logic

ACS007RB

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ATF TEMP SEN/CIRC" with CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

Possible Cause

Check the following.

- Harness or connector (The sensor circuit is open or shorted.)
- A/T fluid temperature sensor

DTC Confirmation Procedure

ACS007RD

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

(P) WITH CONSULT-II

- 1. Turn ignition switch ON and select "DATA MONITOR" mode for "ENGINE" with CONSULT-II.
- 2. Start engine and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)

ENG SPEED: 450 rpm or more

VHCL SPEED SE: 10 km/h (6 MPH) or more

THRTL POS SEN: More than 1.2V SLCT LVR POSI: "D" position (OD ON)

3. If the check result is NG, go to AT-106, "Diagnostic Procedure".

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

WITH GST

Follow the procedure "With CONSULT-II".

WITHOUT CONSULT-II

- 1. Start engine.
- Drive vehicle under the following conditions.

Selector lever: "D" position

Vehicle speed: higher than 20km/h (12MPH)

Perform self-diagnosis.

Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

If the check result is NG, go to <u>AT-106, "Diagnostic Procedure"</u>.

Wiring Diagram — AT — FTS

ACS007WV

AT-FTS-01

■: DETECTABLE LINE FOR DTC : NON-DETECTABLE LINE FOR DTC


ΑT

D

Е

Α

В

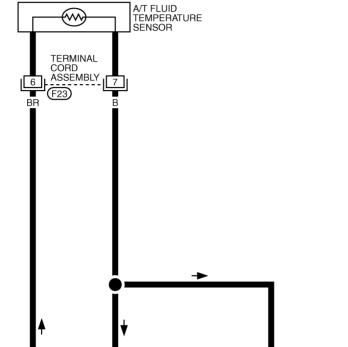

67

GND-A

ECM

(F43)


F

G

Н

K

M

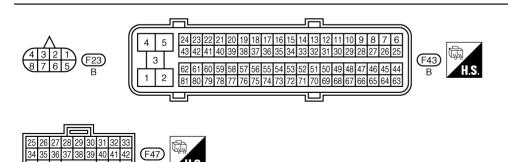

42

SENS GND

FLUID TEMP

SENS

TCM

(F47)

(TRANSMISSION CONTROL MODULE)

TCWB0007E

Data are ref	Pata are reference value and are measured between each terminal and ground.					
Terminal	Wire color	Item	Condition Judgement stated and (Approx			
42	В	Sensor ground	Always		0V	
47	DD	A/T fluid tempera-	(A)	When ATF temperature is 20°C (68°F).	1.5V	
47	BR	ture sensor	(Lon)	When ATF temperature is 80°C (176°F).	0.5V	

Diagnostic Procedure

ACS007RE

1. CHECK INPUT SIGNAL OF A/T FLUID TEMPERATURE SENSOR

(I) With CONSULT-II

- 1. Start engine.
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "FLUID TEMP SE".


Item name	Condition	Display value (Approx.)
FLUID TEMP SE	When ATF temperature is 20°C (68°F).	1.5V
I LOID I EIVIF SE	When ATF temperature is 80°C (176°F).	0.5V

DATA MONITOR					
V	MONIT	OR	N	O DTC	
V T F E E T C	/HCL/S THRTL FLUID T BATTER ENGINE TURBIN	S SE-MT POS SE FEMP S RY VOLT E SPEE NE REV PRIVE S	E 1.4 	n/h V V SV rpm om	
			REC	ORD	
N	MODE	BACK	LIGHT	COPY	SCIA4730E

8 Without CONSULT-II

- 1. Start engine.
- 2. Check voltage TCM connector while warming up A/T.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con-	FCM con- F47 47 (E	47 (BR)	When ATF temperature is 20°C (68°F).	1.5V
nector	F47 - 42 (B)		When ATF temperature is 80°C (176°F).	0.5V

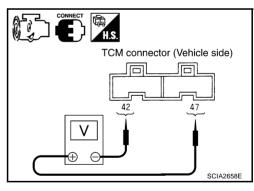

OK or NG

OK >> GO TO 7. NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEMS

Check the following.

- Harness for short or open between TCM, ECM and terminal cord assembly
- Ground circuit for ECM
 Refer to EC-155, "POWER SUPPLY AND GROUND CIRCUIT".

OK or NG

OK >> GO TO 3.

NG >> Repair or replace damaged parts.

3. CHECK FLUID TEMPERATURE SENSOR CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect the TCM connector.
- 3. Check resistance between TCM connector terminals.

Item	Connector	Terminal (Wire color)	Tempera- ture °C (°F)	Resistance (Approx.)
TCM con-	F47	47 (BR) - 42 (B)	20 (68)	2.5kΩ
nector	1 47	47 (BIX) - 42 (B)	80 (176)	0.3kΩ

TCM connector (Vehicle side) 47


OK or NG

OK >> GO TO 7. NG >> GO TO 4.

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR

- Turn ignition switch OFF.
- Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminals and TCM connector terminals.

Item	Connector Terminal (Wire color)		Continuity	
TCM connector	F47	42 (B)		
Terminal cord assembly harness connector	F23	7 (B)	Yes	
TCM connector	F47	47 (BR)		
Terminal cord assembly harness connector	F23	6 (BR)	Yes	

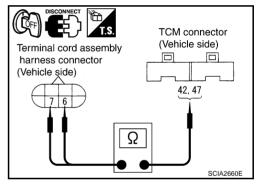

- 4. If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

>> GO TO 5. OK

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK A/T FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector in engine room.
- 3. Check resistance between terminal cord assembly harness connector terminals.


Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

4. Reinstall any part removed.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

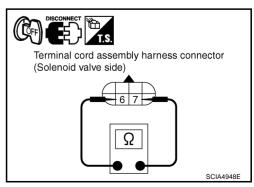

ΑT

В

F

Н

6. DETECT MALFUNCTIONING ITEM

- 1. Remove oil pan. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- A/T fluid temperature sensor
- Check resistance between terminal cord assembly harness connector terminals while changing temperature as shown.


Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

Harness of terminal cord assembly for short or open

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

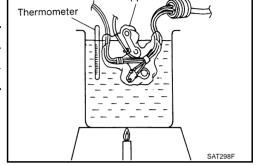

Wrapped

7. CHECK DTC

Perform AT-104, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 8.

8. CHECK TCM

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END


NG >> Repair or replace damaged parts.

Component Inspection A/T FLUID TEMPERATURE SENSOR

ACS007RF

- Remove oil pan. Refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u>.
- Check resistance between terminal cord assembly harness connector terminals while changing temperature as shown.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

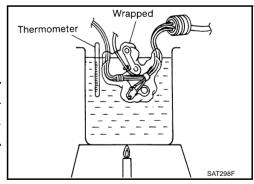

DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)

PFP:32702

Description

ACS007RG

Α

В

ΑT

 \Box

F

Н

The revolution sensor detects the revolution of the idler gear parking pawl lock gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.

CONSULT-II Reference Value

ACS00772

Item name	Condition	Display value
VHCL/S SE·A/T	During driving	Approximately matches the speedometer reading.

On Board Diagnosis Logic

ACC007BU

This is an OBD-II self-diagnostic item.

• Diagnostic trouble code "VECH SPEED SEN-AT" with CONSULT-II or 1st judgement flicker without CON-SULT-II is detected when TCM does not receive the proper voltage signal from the sensor.

Possible Cause

Check the following.

 Harness or connector (The sensor circuit is open or shorted.)

Revolution sensor

DTC Confirmation Procedure

ACS007RJ

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

WITH CONSULT-II

J

M

- Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Drive vehicle and check for an increase of "VHCL/S SE·MTR" value increase.

If the check result is NG, go to <u>AT-112, "Diagnostic Procedure"</u>. If the check result is OK, go to following step.

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

- Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 4. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE: 30 km/h (19 MPH) or more

THRTL POS SEN: More than 1.2V SLCT LVR POSI: "D" position (OD ON)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

If the check result is NG, go to <u>AT-112, "Diagnostic Procedure"</u>. If the check result is OK, go to following step.

Maintain the following conditions for at least 5 consecutive seconds.

ENGINE SPEED: 3,500 rpm or more THRTL POS SEN: More than 1.2V

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
FUNCTION TEST
DTC WORK SUPPORT

SLCT LVR POSI: "D" position (OD ON)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II

- 1. Start engine.
- 2. Drive vehicle under the following conditions for more than 5 seconds.

Selector lever: "D" position

Vehicle speed: 30 km/h (19 MPH) or more

Throttle position: greater than 1.0/8 of the full throttle position

3. Perform self-diagnosis.

Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

4. If the check result is NG, go to AT-112, "Diagnostic Procedure".

Wiring Diagram — AT — VSSA/T ACS007RK Α AT-VSSA/T-01 В IGNITION SWITCH ON OR START : DETECTABLE LINE FOR DTC : NON-DETECTABLE LINE FOR DTC FUSE BLOCK (J/B) REFER TO PG-POWER. 10A ΑT 12 (M1) BA BR/W D BR/W Е M61 (F41) BR/W REVOLUTION SENSOR (F15) G 2 3 Н W/R 29 42 67 TCM (TRANSMISSION CONTROL VSP-1 SENS GND GND-A **ECM** MODULE) (F43) (F47) M REFER TO THE FOLLOWING. M1) -FUSE BLOCK-JUNCTION BOX (J/B) 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 (F43) (F47 3 2

TCWB0008E

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Judgement stan- dard (Approx.)
				When moving at 20 km/h (12 MPH)	450 Hz
29	W/R	Revolution sensor		When vehicle parks.	Under 1.3V or over 4.5V
42	В	Sensor ground	Always		0V

Diagnostic Procedure

1. CHECK INPUT SIGNAL

ACS007RL

(I) With CONSULT-II

- 1. Start engine.
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "VHCL/S SE-A/T" while driving. Check the value changes according to driving speed.

Item name	Condition	Display value
VHCL/S SE-A/T	During driving	Approximately matches the speed- ometer reading.

MONITOR NO DTC VHCL/S SE-AT VHCL/S SE-MTR 5 km/h THRTL POS SEN 0.8 V FLUID TEMP SE 14 V BATTERY VOLT 11.6 V ENGINE SPEED 384 rpm TURBINE REV 0 rpm OVERDRIVE SW OFF PN POSI SW ON Page Down RECORD MODE BACK LIGHT COPY SCIA4730E

OK or NG

OK >> GO TO 8. NG >> GO TO 2.

2. CHECK REVOLUTION SENSOR

- Start engine.
- 2. Check power supply to revolution sensor by voltage between TCM connector terminals. Refer to <u>AT-195</u>, "Wiring Diagram AT MAIN" and AT-111, "Wiring Diagram AT VSSA/T".

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)
TCM connector	ctor F46, F47	10 (BR/W) - 42 (B)	Battery voltage
TOW CONTIECTOR	1 40, 1 47	19 (BR/W) - 42 (B)	Ballery Vollage


3. If OK, check the pulse when vehicle cruises.

Item	Condition
Revolution sensor	When moving at 20 km/h (12 MPH), use the CONSULT-II pulse frequency measuring function. CAUTION: Connect the diagnosis data link cable to the data link connector.

Item	Connector	Terminal (Wire color)	Data (Approx.)
TCM connector	F47	29 (W/R)	450 Hz

OK or NG


OK >> GO TO 8. NG >> GO TO 3.

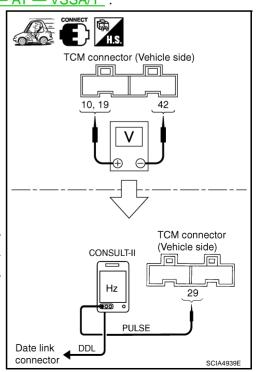

$\overline{3}$. CHECK POWER AND SENSOR GROUND

- 1. Turn ignition switch OFF.
- 2. Disconnect revolution sensor harness connector.
- Turn ignition switch ON. (Do not start engine.)
- Check voltage between revolution sensor harness connector terminals.

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)
Revolution sensor harness connector	F15	1 (BR/W) - 3 (B)	Battery voltage

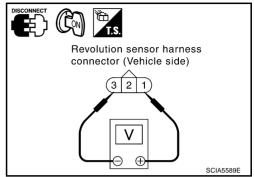

Check voltage between revolution sensor harness connector terminal and ground.

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)
Revolution sensor harness connector	F15	1 (BR/W) - ground	Battery voltage

- If OK, check harness for short to ground and short to power.
- 7. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG - 1 >> Battery voltage is not supplied between terminals 1 and 3, terminals 1 and ground: GO TO 6.

NG - 2 >> Battery voltage is not supplied between terminals 1 and 3 only: GO TO 7.

4. CHECK HARNESS BETWEEN TCM AND REVOLUTION SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector and revolution sensor harness connector.
- Check continuity between TCM connector terminal and revolution sensor harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F47	29 (W/R)	
Revolution sensor harness connector	F15	2 (W/R)	Yes

- 4. If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

>> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK TCM


- Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 8.

Revision: 2005 March

NG >> Repair or replace damaged parts.

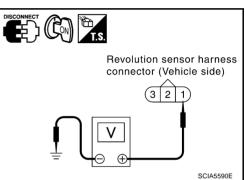

В

ΑT

F

Н









SCIA2616E

TCM connector

(Vehicle side)

Revolution sensor

harness connector


(Vehicle side)

Ω

6. CHECK HARNESS BETWEEN TCM AND REVOLUTION SENSOR (POWER)

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector and revolution sensor harness connector.
- 3. Check continuity between TCM connector terminal and revolution sensor harness connector terminal. Refer to <u>AT-51, "Circuit Diagram"</u> and <u>AT-195, "Wiring Diagram AT MAIN"</u>.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	10 (BR/W)	
Revolution sensor harness connector	F15	1 (BR/W)	Yes
TCM connector	F46	19 (BR/W)	
Revolution sensor harness connector	F15	1 (BR/W)	Yes

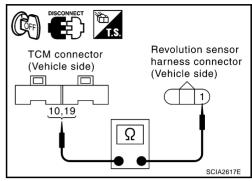

- 4. If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

OK >> 10A fuse (No.12, located in the fuse block) or ignition switch are malfunctioning.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK HARNESS BETWEEN TCM AND REVOLUTION SENSOR (SENSOR GROUND)

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector and revolution sensor harness connector.
- 3. Check continuity between TCM connector terminal and revolution sensor harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F47	42 (B)	
Revolution sensor harness connector	F15	3 (B)	Yes



5. Reinstall any part removed.

OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.


8. CHECK DTC

Perform AT-109, "DTC Confirmation Procedure" .

OK or NG

OK >> INSPECTION END

NG >> GO TO 5.

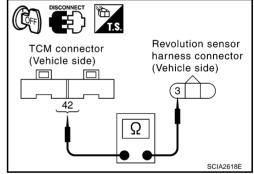

DTC P0725 ENGINE SPEED SIGNAL

PFP:24825

Description

ACS007RM

Α

ΑT

F

Н

The engine speed signal is sent from ECM to TCM.

CONSULT-II Reference Value

ACS007Z3

Item name	Condition	Display value
ENGINE SPEED	Engine running	Approximately matches the tachometer reading.

On Board Diagnosis Logic

ACS007RN

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "ENGINE SPEED SIG" with CONSULT-II or 9th judgement flicker without CON-SULT-II is detected when TCM does not receive the proper voltage signal from ECM.

Possible Cause

Harness or connector (The circuit is open or shorted.)

DTC Confirmation Procedure

ACS007RP


CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

(A) WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.

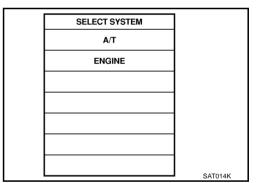


Start engine and maintain the following conditions for at least 10 consecutive seconds.

VHCL SPEED SE: 10 km/h (6 MPH) or more

THRTL POS SEN: More than 1.2V SLCT LVR POSI: "D" position (OD ON)

3. If the check result is NG, go to AT-118, "Diagnostic Procedure" .

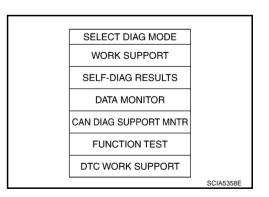

WITH GST

Follow the procedure "WITH CONSULT-II".

Revision: 2005 March AT-115 2005 X-Trail

WITHOUT CONSULT-II

1. Start engine.

2. Drive vehicle under the following conditions for more than 5 seconds.

Selector lever: "D" position (OD ON) Vehicle speed: 10 km/h (6 MPH) or more

Throttle position: greater than 1.0/8 of the full throttle position

3. Perform self-diagnosis.

Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

4. If the check result is NG, go to AT-118, "Diagnostic Procedure".


Wiring Diagram — AT — ENGSS

ACS007RQ

AT-ENGSS-01

В

Α

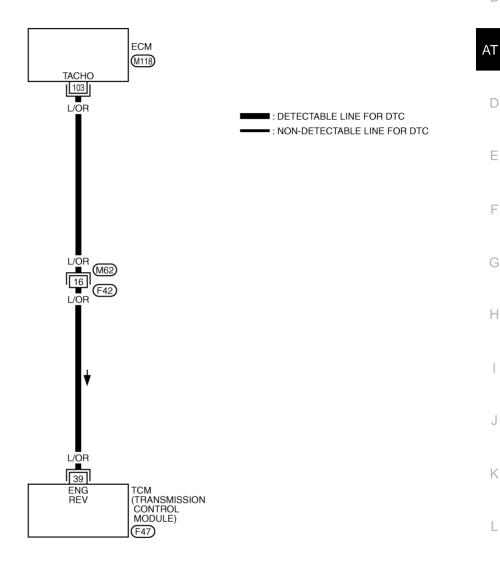

Е

F


D

G

Н

Κ

M

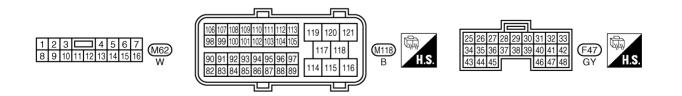

TCWA0232E

Data are reference value and are measured between each terminal and ground.

			•	
Terminal	Wire color	Item	Condition	Judgement standard (Approx.)
39	L/OR	Engine speed signal	CON) and	Refer to <u>EC-115</u> , <u>"ECM INSPECTION</u> <u>TABLE"</u> .

Diagnostic Procedure

ACS007RR

1. CHECK DTC WITH ECM

Perform diagnostic test mode II (self-diagnostic results) for engine control. Check ignition signal circuit condition.

OK or NG

OK >> GO TO 2.

NG >> Check ignition signal circuit for engine control. Refer to <u>EC-586, "IGNITION SIGNAL"</u>.

2. CHECK INPUT SIGNAL

(II) With CONSULT-II

- 1. Start engine.
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "ENGINE SPEED". Check engine speed changes according to throttle position.


Item name	Condition	Display value
ENGINE SPEED	Engine running	Approximately matches the tachometer reading.

	DATA M	ONITOR		
MONIT	OR	N	O DTC	
VHCL/S THRTL FLUID BATTER ENGINI TURBIN	S SE-AT S SE-MT POS SE TEMP S RY VOLT E SPEE NE REV DRIVE S	TR 5 km EN 0.8 E 1.4 T 11.6 D 384 i	n/h V V SV rpm om	
		Page	Down	
		REC	ORD	
MODE	BACK	LIGHT	COPY	SCIA4730E

Without CONSULT-II

- 1. Start engine.
- 2. Check voltage between TCM connector terminal and ground.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con- nector	F47	39 (L/OR) - Ground	Con and	Refer to EC-115. "ECM INSPECTION TABLE".

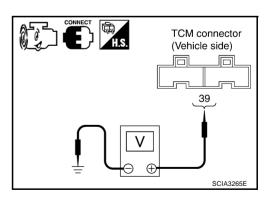

OK or NG

OK >> GO TO 4. NG >> GO TO 3.

3. CHECK HARNESS BETWEEN TCM AND ECM

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM connector and TCM connector.
- 3. Check continuity between ECM connector terminal and TCM connector terminal.


Item	Connector	Terminal (Wire color)	Continuity
TCM	F47	39 (L/OR)	Yes
ECM	M118	103 (L/OR)	165

- 4. If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

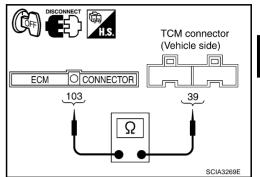

4. CHECK DTC

Perform AT-115, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 5.

5. CHECK TCM

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

ΑT

В

D

Е

F

G

Н

 \mathbb{N}

DTC P0731 A/T 1ST GEAR FUNCTION

PFP:31940

Description

ACS007RS

- This malfunction will not be detected while O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when the A/T does not shift into first gear position as instructed by TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

On Board Diagnosis Logic

ACS007RT

- This is an OBD-II self-diagnostic item.
- This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = $A \times C/B$

- A: Output shaft revolution signal from revolution sensor
- B: Engine speed signal from ECM
- C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is higher than the position (1st) supposed by TCM, the slip ratio will be more than normal. In case the ratio exceeds the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when either shift solenoid valve A is stuck open or shift solenoid valve B is stuck open.

Gear positions supposed by TCM are as follows.

In case of gear position with no malfunctions: 1, 2, 3 and 4 positions

In case of gear position with shift solenoid valve A stuck open: **2***, 2, 3 and 3 positions In case of gear position with shift solenoid valve B stuck open: **4***, 3, 3 and 4 positions to each gear position above

- *: P0731 is detected.
- Diagnostic trouble code "A/T 1ST GR FNCTN" with CONSULT-II is detected when A/T cannot be shifted to the 1st gear position even if electrical circuit is good.

Possible Cause ACS007RU

Check the following.

- Shift solenoid valve A
- Shift solenoid valve B
- Each clutch
- Hydraulic control circuit

DTC Confirmation Procedure

ACS007RV

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(A) WITH CONSULT-II

- Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SE: 0.4 - 1.5V

If out of range, drive vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

- 3. Select "1ST GR FNCTN P0731" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".
- Accelerate vehicle to 15 to 20 km/h (9 to 12 MPH) under the following condition and release accelerator pedal completely.
 THROTTLE POSI: Less than 1.0/8 (at all times during step 4) SLCT LVR POSI: "D" position (OD ON)
- Make sure that "GEAR" shows "2" after releasing pedal.
- Depress accelerator pedal to WOT (more than 7.0/8 of "THROT-TLE POSI") quickly from a speed of 15 to 20 km/h (9 to 12 MPH) until "TESTING" changes to "STOP VEHICLE" or "COM-PLETED". (It will take approximately 3 seconds.)
 If the check result NG appears on CONSULT-II screen, go to AT-123, "Diagnostic Procedure".
 If "STOP VEHICLE" appears on CONSULT-II screen, go to the following step.

SELECT SYSTEM

A/T

ENGINE

SAT014K

Α


R

ΑT

Н

J

M

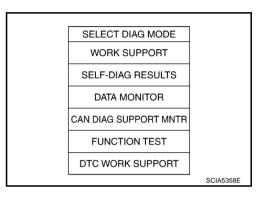

- Make sure that "GEAR" shows "1" when depressing accelerator pedal to WOT.
- If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0731 is shown, refer to applicable "TROUBLE DIAG-NOSIS FOR DTC".
- 6. Stop vehicle.
- 7. Follow the instruction displayed. (Check for normal shifting referring to the table below.)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 \rightarrow 2 \rightarrow 3 \rightarrow 4
No malfunction exists	$1 \rightarrow 2 \rightarrow 3 \rightarrow 4$
Malfunction for P0731	$2 \rightarrow 2 \rightarrow 3 \rightarrow 3$
exists.	$4 \rightarrow 3 \rightarrow 3 \rightarrow 4$

Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".) Refer to <u>AT-123, "Diagnostic Procedure"</u>. Refer to <u>AT-66, "Vehicle Speed When Shifting Gears"</u>.

WITH GST

Revision: 2005 March


Follow the procedure "WITH CONSULT-II".

AT-121 2005 X-Trail


Wiring Diagram — AT — 1STSIG

CS007WW

AT-1STSIG-01

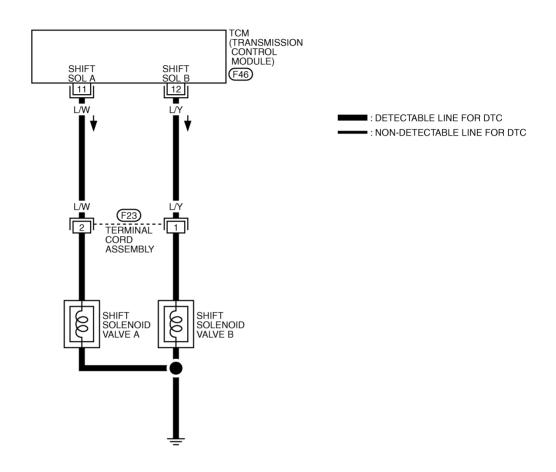



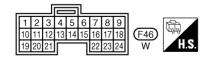

TCWA0049E

Terminal	Wire color	Item	Condition		Judgement stan dard (Approx.)	
				When shift solenoid valve A operates. (When driving in "D1" or "D4".)	Battery voltage	
11	L/W Shift solenoid valve A		When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	0V		
		L/Y Shift solenoid valve B	L/Y Shift solenoid valve B		When shift solenoid valve B operates. (When driving in "D1 " or "D2 ".)	Battery voltage
12	L/Y			When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	0V	

Diagnostic Procedure

1. CHECK VALVE RESISTANCE


- Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators" .
- Shift solenoid valve A
- Shift solenoid valve B
- Check resistance between terminal cord assembly harness connector terminals and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Shift solenoid valve A	2	Ground	20 - 30Ω
Shift solenoid valve B	1	Glound	5 - 20Ω

- 3. If OK, check harness for short to ground and short to power.
- 4. If OK, check continuity between ground and transaxle assembly. OK or NG

OK >> GO TO 2.

NG >> Repair or replace shift solenoid valve assembly.

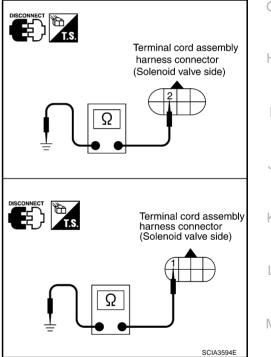

D

F

ACS007RW

Α

В

ΑT

F

Н

M


2. CHECK VALVE OPERATION

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Shift solenoid valve A
- Shift solenoid valve B
- 2. Check solenoid valve by listening for its operating sound while applying battery voltage to the terminals and ground.

OK or NG

OK >> GO TO 3.

NG >> Repair or replace shift solenoid valve assembly.

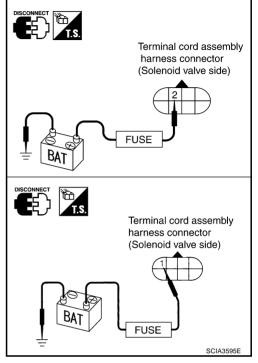

3. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- 2. Check to ensure that:
- Valve, sleeve and plug slide along valve bore under their own weight.
- Valve, sleeve and plug are free from burrs, dents and scratches.
- Control valve springs are free from damage, deformation and fatigue.
- Hydraulic line is free from obstacles.

OK or NG

OK >> GO TO 4.

NG >> Repair control valve assembly.

4. CHECK DTC

Perform AT-120, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> Check control valve again. Repair or replace control valve assembly.

DTC P0732 A/T 2ND GEAR FUNCTION

PFP:31940

Description

ACS007RX

- This malfunction will not be detected while O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when A/T does not shift into second gear position as instructed by TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

On Board Diagnosis Logic

ACS007RY

- This is an OBD-II self-diagnostic item.
- This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = $A \times C/B$

- A: Output shaft revolution signal from revolution sensor
- B: Engine speed signal from ECM
- C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is higher than the position (2nd) supposed by TCM, the slip ratio will be more than normal. In case the ratio exceeds the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve B is stuck open.

- Gear positions supposed by TCM are as follows.
 - In case of gear position with no malfunctions: 1, 2, 3 and 4 positions

In case of gear position with shift solenoid valve B stuck open: 4, 3*, 3 and 4 positions to each gear position above

- *: P0732 is detected.
- Diagnostic trouble code "A/T 2ND GR FNCTN" with CONSULT-II is detected when A/T cannot be shifted to the 2nd gear position even if electrical circuit is good.

Possible Cause ACS007RZ

Check the following.

- Shift solenoid valve B
- Each clutch
- Hydraulic control circuit

DTC Confirmation Procedure

ACS007S0

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

ΑT

D

F

Α

Н

M


(P) WITH CONSULT-II

- Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Make sure that output voltage of A/T fluid temperature sensor is within the range below.


FLUID TEMP SE: 0.4 - 1.5V

If out of range, drive vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

3. Select "2ND GR FNCTN P0732" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".

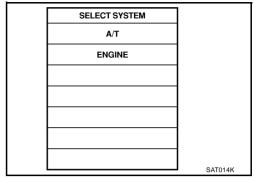

- Accelerate vehicle to 35 to 40 km/h (22 to 25 MPH) under the following condition and release accelerator pedal completely. THROTTLE POSI: Less than 1.0/8 (at all times during step 4) SLCT LVR POSI: "D" position (OD ON)
- Make sure that "GEAR" shows "3" or "4" after releasing pedal.
- Depress accelerator pedal to WOT (more than 7.0/8 of "THROT-TLE POSI") quickly from a speed of 35 to 40 km/h (22 to 25 MPH) until "TESTING" changes to "STOP VEHICLE" or "COM-PLETED". (It will take approximately 3 seconds.)
 If the check result NG appears on CONSULT-II screen, go to AT-128. "Diagnostic Procedure"

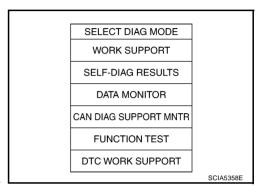

If "STOP VEHICLE" appears on CONSULT-II screen, go to following step.

- Make sure that "GEAR" shows "2" when depressing accelerator pedal to WOT.
- If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0732 is shown, refer to applicable "TROUBLE DIAG-NOSIS FOR DTC".
- 6. Stop vehicle.
- 7. Follow the instruction displayed. (Check for normal shifting referring to the table below.)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 \rightarrow 2 \rightarrow 3 \rightarrow 4
No malfunction exists	$1 \rightarrow 2 \rightarrow 3 \rightarrow 4$
Malfunction for P0732 exists.	$4 \rightarrow 3 \rightarrow 3 \rightarrow 4$

 Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".)
 Refer to AT-128, "Diagnostic Procedure".
 Refer to AT-66, "Vehicle Speed When Shifting Gears".

WITH GST

Follow the procedure "WITH CONSULT-II".

SHIFT

SOL B

12

TCM (TRANSMISSION CONTROL MODULE)

(F46)

TERMINAL CORD ASSEMBLY

> SHIFT SOLENOID VALVE B

Wiring Diagram — AT — 2NDSIG

CS007WX

AT-2NDSIG-01

■: DETECTABLE LINE FOR DTC
■: NON-DETECTABLE LINE FOR DTC

Α

В

ΑT

D

Е

F

G

Н


0

Κ

L

M



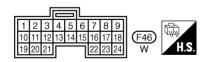

TCWA0050E

Data are reference value and are measured between each terminal and ground.							
Terminal	Wire color	Item	Condition Judgem dard (A				
				When shift solenoid valve B operates. (When driving in "D1 " or "D2 ".)	Battery voltage		
12	L/Y	Shift solenoid valve B	B	When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	0V		

Diagnostic Procedure

ACS007S1

1. CHECK VALVE RESISTANCE

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Shift solenoid valve B
- 2. Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Shift solenoid valve B	1	Ground	5 - 20Ω

- 3. If OK, check harness for short to ground and short to power.
- 4. If OK, check continuity between ground and transaxle assembly.

OK or NG

OK >> GO TO 2.

NG >> Repair or replace shift solenoid valve assembly.

Terminal cord assembly harness connector (Solenoid valve side)


2. CHECK VALVE OPERATION

- Remove control valve assembly. Refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u>.
- Shift solenoid valve B
- 2. Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

OK or NG

OK >> GO TO 3.

NG >> Repair to replace shift solenoid valve assembly.

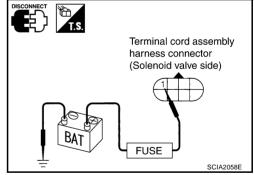

3. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- 2. Check to ensure that:
- Valve, sleeve and plug slide along valve bore under their own weight.
- Valve, sleeve and plug are free from burrs, dents and scratches.
- Control valve springs are free from damage, deformation and fatigue.
- Hydraulic line is free from obstacles.

OK or NG

OK >> GO TO 4.

NG >> Repair control valve assembly.

4. CHECK DTC

Perform AT-125, "DTC Confirmation Procedure" .

OK or NG

OK >> INSPECTION END

NG >> Check control valve again. Repair or replace control valve assembly.

АТ

В

D

Е

F

G

Н

I

J

K

L

M

DTC P0733 A/T 3RD GEAR FUNCTION

PFP:31940

Description

ACS007S2

- This malfunction will not be detected while O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when A/T does not shift into third gear position as instructed by TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning servo piston or brake band, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

On Board Diagnosis Logic

ACS007S3

- This is an OBD-II self-diagnostic item.
- This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = A x C/B

- A: Output shaft revolution signal from revolution sensor
- B: Engine speed signal from ECM
- C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is higher than the position (3rd) supposed by TCM, the slip ratio will be more than normal. In case the ratio exceeds the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve A is stuck closed.

- Gear positions supposed by TCM are as follows.
 - In case of gear position with no malfunctions: 1, 2, 3 and 4 positions

In case of gear position with shift solenoid valve A stuck closed: 1, 1, 4* and 4 positions to each gear position above

- *: P0733 is detected.
- Diagnostic trouble code "A/T 3RD GR FNCTN" with CONSULT-II is detected when A/T cannot be shifted to the 3rd gear position even if electrical circuit is good.

Possible Cause

Check the following.

- Shift solenoid valve A
- Each clutch
- Hydraulic control circuit

DTC Confirmation Procedure

ACS007S5

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

TESTING CONDITION:

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.


(A) WITH CONSULT-II

- Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SE: 0.4 - 1.5V


If out of range, drive vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

3. Select "3RD GR FNCTN P0733" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".

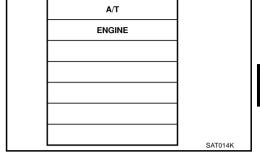

SELECT SYSTEM

- Accelerate vehicle to 55 to 70 km/h (34 to 44 MPH) under the following condition and release accelerator pedal completely.
 THROTTLE POSI: Less than 1.0/8 (at all times during step 4) SLCT LVR POSI: "D" position (OD ON)
- Make sure that "GEAR" shows "4" after releasing pedal.
- Depress accelerator pedal steadily with 3.5/8 4.5/8 of "THROT-TLE POSI" from a speed of 55 to 70 km/h (34 to 44 MPH) until "TESTING" changes to "STOP VEHICLE" or "COMPLETED". (It will take approximately 3 seconds.)
 If the check result NG appears on CONSULT-II screen, go to AT-133, "Diagnostic Procedure"
 If "STOP VEHICLE" appears on CONSULT-II screen, go to following step.

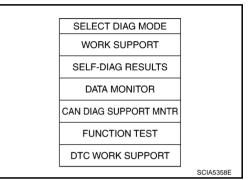

- Make sure that "GEAR" shows "3" when depressing accelerator pedal with 3.5/8 4.5/8 of "THROTTLE POSI".
- If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0733 is shown, refer to applicable "TROUBLE DIAG-NOSIS FOR DTC".
- 6. Stop vehicle.
- 7. Follow the instruction displayed. (Check for normal shifting referring to the table below.)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 \rightarrow 2 \rightarrow 3 \rightarrow 4	
No malfunction exists.	$1 \rightarrow 2 \rightarrow 3 \rightarrow 4$	
Malfunction for P0733 exists.	$1 \rightarrow 1 \rightarrow 4 \rightarrow 4$	

Make sure that "OK" is displayed. (If "NG" is displayed, refer to Diagnostic Procedure.)
 Refer to AT-133, "Diagnostic Procedure".
 Refer to AT-66, "Vehicle Speed When Shifting Gears".

WITH GST

Revision: 2005 March

Follow the procedure "With CONSULT-II".

AT-131 2005 X-Trail

В

ΑT

D

Е

F

G

Н

Κ


L

M


Wiring Diagram — AT — 3RDSIG

ACS007WY

AT-3RDSIG-01

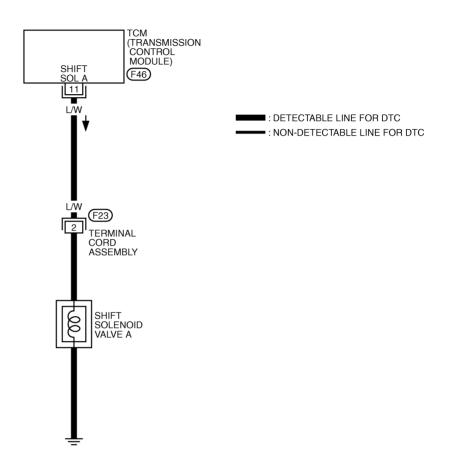



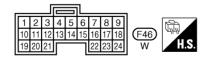

TCWA0051E

Terminal	Wire color	Item	Condition Judg dard		
				When shift solenoid valve A operates. (When driving in "D1 " or "D4 ".)	Battery voltage
11	L/W Shift solenoid valve A		When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	0V	

Diagnostic Procedure

ACS007S6

Α

В

ΑT

D

F

Н

M

1. CHECK VALVE RESISTANCE

- Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Shift solenoid valve A
- 2. Check resistance between terminal cord assembly harness connector terminal and ground.


Solenoid valve		Terminal	Resistance (Approx.)	
Shift solenoid valve A	2	Ground	20 - 30Ω	

- If OK, check harness for short to ground and short to power.
- If OK, check continuity between ground and transaxle assembly.

OK or NG

OK >> GO TO 2.

NG >> Repair or replace shift solenoid valve assembly.

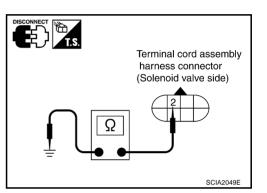


2. CHECK VALVE OPERATION

- Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Shift solenoid valve A
- 2. Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

OK or NG

OK >> GO TO 3.

NG >> Repair or replace shift solenoid valve assembly.

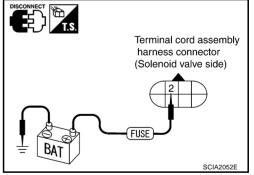

3. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- Check to ensure that: 2.
- Valve, sleeve and plug slide along valve bore under their own weight.
- Valve, sleeve and plug are free from burrs, dents and scratches.
- Control valve springs are free from damage, deformation and fatigue.
- Hydraulic line is free from obstacles.

OK or NG

OK >> GO TO 4.

NG >> Repair control valve assembly.

$\overline{4}$. CHECK DTC

Perform AT-130, "DTC Confirmation Procedure" .

OK or NG

OK >> INSPECTION END

NG >> Check control valve again. Repair or replace control valve assembly.

DTC P0734 A/T 4TH GEAR FUNCTION

PFP:31940

Description

40500757

- This malfunction will not be detected while O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when A/T does not shift into fourth gear position or line pressure is low as instructed by TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning oil pump or torque converter clutch, etc.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

CONSULT-II Reference Value

ACS00774

Item name	Condition	Display value (Approx.)
LINE PRES DTY	Small throttle opening (Low line pressure) ⇔ Large throttle opening (High line pressure)	0% ⇔ 92%

On Board Diagnosis Logic

ACS007S8

- This is an OBD-II self-diagnostic item.
- This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = $A \times C/B$

A: Output shaft revolution signal from revolution sensor

B: Engine speed signal from ECM

C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is much lower than the position (4th) supposed by TCM, the slip ratio will be much less than normal. In case the ratio does not reach the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve A is stuck open or shift solenoid valve B is stuck closed.

Gear positions supposed by TCM are as follows.

In case of gear position with no malfunctions: 1, 2, 3 and 4 positions

In case of gear position with shift solenoid valve A stuck open: 2, 2, 3 and 3* positions

In case of gear position with shift solenoid valve B stuck closed: 1, 2, 2 and 1* positions to each gear position above

*: P0734 is detected.

Diagnostic trouble code "A/T 4TH GR FNCTN" with CONSULT-II is detected when A/T cannot be shifted to the 4th gear position even if electrical circuit is good.

Possible Cause ACS007S9

Check the following.

- Shift solenoid valve A
- Shift solenoid valve B
- Line pressure solenoid valve
- Each clutch
- Hydraulic control circuit

DTC Confirmation Procedure

ACS007SA

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

TESTING CONDITION:

AT-135 Revision: 2005 March 2005 X-Trail

ΑT

Α

F

Н

Κ

M

Always drive vehicle on a level road to improve the accuracy of test.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.


WITH CONSULT-II

- 1. Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SE: 0.4 - 1.5V


If out of range, drive vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid).

 Select "4TH GR FNCTN P0734" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".

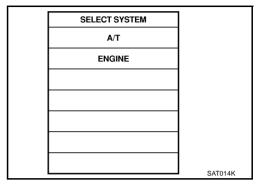

- Accelerate vehicle to 55 to 65 km/h (34 to 40 MPH) under the following condition and release accelerator pedal completely.
 THROTTLE POSI: Less than 5.5/8 (at all times during step 4) SLCT LVR POSI: "D" position (OD ON)
- Make sure that "GEAR" shows "3" after releasing pedal.
- Depress accelerator pedal steadily with 1.0/8 2.0/8 of "THROT-TLE POSI" from a speed of 55 to 65 km/h (34 to 40 MPH) until "TESTING" has turned to "STOP VEHICLE" or "COMPLETED". (It will take approximately 3 seconds.)
 If the check result NG appears on CONSULT-II screen, go to AT-138, "Diagnostic Procedure".

If "STOP VEHICLE" appears on CONSULT-II screen, go to following step.

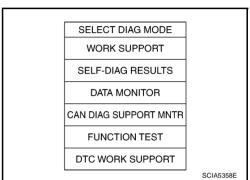

- Make sure that "GEAR" shows "4" when depressing accelerator pedal with 1.0/8 2.0/8 of "THROTTLE POSI".
- If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAGNOSIS" for "ENGINE". In case a 1st trip DTC other than P0734 is shown, refer to applicable "TROUBLE DIAG-NOSIS FOR DTC".
- Stop vehicle.
- 7. Follow the instruction displayed. (Check for normal shifting referring to the table below.)

Vehicle condition	Gear on actual transmission shift pattern when screen is changed to 1 \rightarrow 2 \rightarrow 3 \rightarrow 4
No malfunction exists	$1 \to 2 \to 3 \to 4$
Malfunction for P0734 exists.	$2 \to 2 \to 3 \to 3$
Manufiction for 1 07 54 exists.	$1 \rightarrow 2 \rightarrow 2 \rightarrow 1$

 Make sure that "OK" is displayed. (If "NG" is displayed, refer to Diagnostic Procedure.)
 Refer to <u>AT-138, "Diagnostic Procedure"</u>.
 Refer to <u>AT-66, "Vehicle Speed When Shifting Gears"</u>.

WITH GST


Follow the procedure "WITH CONSULT-II".

Wiring Diagram — AT — 4THSIG

CS007X6

Α


AT-4THSIG-01

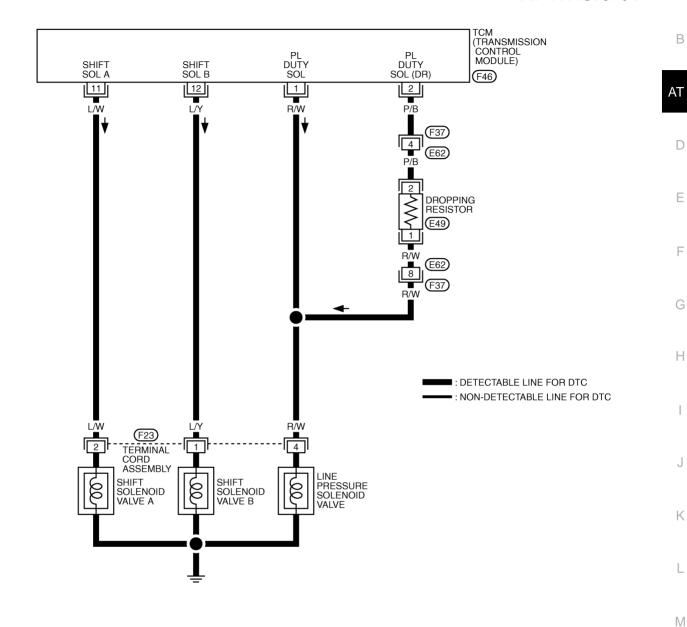







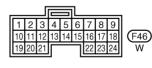



TCWA0052E

Data are	reference	ce value and are measu	ured between each ter	minal and ground.	
Terminal	Wire color	Item		Condition	
		Line processor coloreid		When releasing accelerator pedal after warming up engine.	1.5 - 3.0V
1	R/W	Line pressure solenoid valve		When depressing accelerator pedal fully after warming up engine.	0V
		Line pressure solenoid valve (with dropping resistor)		When releasing accelerator pedal after warming up engine.	5 - 14V
2	P/B			When depressing accelerator pedal fully after warming up engine.	0V
	1.00/			When shift solenoid valve A operates. (When driving in "D1" or "D4".)	Battery voltage
11 L/W		Shift solenoid valve A		When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	0V
12	1 /٧	L/Y Shift solenoid valve B		When shift solenoid valve B operates. (When driving in "D1" or "D2".)	Battery voltage
	L/Y			When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	0V


Diagnostic Procedure

1. CHECK SHIFT-UP (D3 TO D4)

During AT-60, "Cruise Test — Part 1".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 11. NO >> GO TO 2.

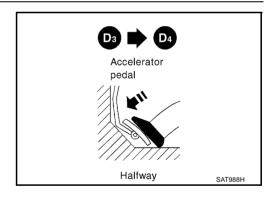

ACS007X9

2. CHECK LINE PRESSURE

Perform line pressure test.

Refer to AT-55, "LINE PRESSURE TEST" .

Engine speed rpm	Line pressure kPa (kg/cm ² , psi)		
Engine opeca ipin	"D", "2" and "1" positions	"R" position	
Idle	500 (5.1, 73)	778 (7.9, 113)	
Stall	1,233 (12.6, 179)	1,918 (19.6, 278)	

OK or NG

OK >> GO TO 3. NG >> GO TO 7.

3. CHECK VALVE RESISTANCE


- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Shift solenoid valve A
- Shift solenoid valve B
- 2. Check resistance between terminal cord assembly harness connector terminals and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Shift solenoid valve A	2	Ground	20 - 30Ω
Shift solenoid valve B	1	Ground	5 - 20Ω

- 3. If OK, check harness for short to ground and short to power.
- 4. If OK, check continuity between ground and transaxle assembly. OK or NG

OK >> GO TO 4.

NG >> Replace solenoid valve assembly.

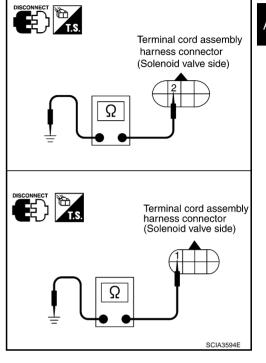


4. CHECK VALVE OPERATION

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Shift solenoid valve A
- Shift solenoid valve B
- 2. Check solenoid valve by listening for its operating sound while applying battery voltage to the terminals and ground.

OK or NG

OK >> GO TO 5.

NG >> Replace solenoid valve assembly.

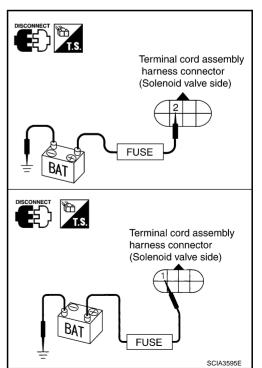

АТ

В

F

G

Н

Κ

L

IVI

5. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- 2. Check to ensure that:
- Valve, sleeve and plug slide along valve bore under their own weight.
- Valve, sleeve and plug are free from burrs, dents and scratches.
- Control valve springs are free from damage, deformation and fatigue.
- Hydraulic line is free from obstacles.

OK or NG

OK >> GO TO 6.

NG >> Repair control valve.


6. CHECK SHIFT-UP (D3 TO D4)

During AT-60, "Cruise Test — Part 1".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 11.

NO >> Check control valve again. Repair or replace control valve assembly.

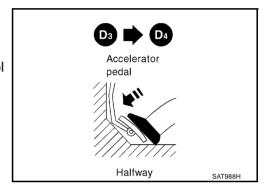

7. CHECK VALVE RESISTANCE


- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Line pressure solenoid valve
- Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Line pressure solenoid valve	4	Ground	2.5 - 5Ω

OK or NG

OK >> GO TO 8.

NG >> Replace solenoid valve assembly.

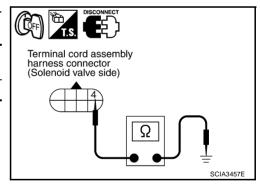


8. CHECK VALVE OPERATION

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Line pressure solenoid valve
- 2. Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

OK or NG

OK >> GO TO 9.

NG >> Replace solenoid valve assembly.

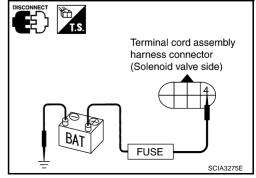

9. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- 2. Check line pressure circuit valves for sticking.
- Pilot valve
- Shift solenoid valve A
- Shift solenoid valve B

OK or NG

NO

OK >> GO TO 10.

NG >> Repair or replace control valve.


10. CHECK SHIFT-UP (D3 TO D4)

During AT-60, "Cruise Test — Part 1".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 11.

>> Check control valve again. Repair or replace control valve assembly.

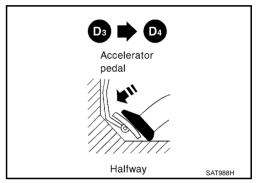

11. CHECK DTC

Perform AT-135, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> Perform AT-60, "Cruise Test — Part 1" again and return to the start point of this test group.

ΑТ

В

D

Ε

G

Н

IZ

 \mathbb{N}

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

Description

ACS007SC

Torque converter clutch solenoid valve is activated, with the gear in "D4", by TCM in response to signals sent from vehicle speed and throttle position sensors. Lock-up piston operation will then be controlled.

Lock-up operation, however, is prohibited when A/T fluid temperature is too low.

When the accelerator pedal is depressed (less than 2/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

CONSULT-II Reference Value

ACS007Z5

Item name	Condition	Display value (Approx.)	
TCC S/V DUTY	Lock-up OFF ⇔ Lock-up ON	4% ⇔ 94%	

On Board Diagnosis Logic

ACS007SD

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "T/C CLUTCH SOL/V" with CONSULT-II or 7th judgement flicker without CON-SULT-II is detected when TCM detects an improper voltage drop when it tries to operate solenoid valve.

Possible Cause

Check the following.

- Torque converter clutch solenoid valve
- Harness or connector (The solenoid circuit is open or shorted.)

DTC Confirmation Procedure

ACS007SE

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(P) WITH CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II and wait at least 1 second.
- 3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VEHICLE SPEED: 80 km/h (50 MPH) or more

THROTTLE POSI: 0.5/8 - 1.0/8

SLCT LVR POSI: "D" position (OD ON)

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

4. If the check result is NG go to AT-144, "Diagnostic Procedure".

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II

- 1. Start engine.
- 2. Drive vehicle in D1 \rightarrow D2 \rightarrow D3 \rightarrow D4 \rightarrow D4 lock-up position.
- Perform self-diagnosis.
 Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".
- If the check result is NG, go to <u>AT-144, "Diagnostic Procedure"</u>.

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

LU DUTY

GY/R

GY/R F23 TERMINAL CORD ASSEMBLY

TORQUE CONVERTER CLUTCH SOLENOID VALVE

TCM (TRANSMISSION CONTROL MODULE)

(F46)

Wiring Diagram — AT — TCV

ACS007SG

AT-TCV-01

■ : DETECTABLE LINE FOR DTC ■: NON-DETECTABLE LINE FOR DTC Α

В

ΑT

D

Е

F

G


Н

J

K

M



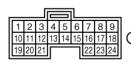



TCWA0043E

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Judgement stan- dard (Approx.)
				When A/T performs lock-up.	8 - 15V
3	Torque converter clutch solenoid valve		When A/T does not perform lock-up.	ov	

Diagnostic Procedure

ACS007SH

1. CHECK INPUT SIGNAL

(II) With CONSULT-II

- 1. Start engine.
- 2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "TCC S/V DUTY" while driving. Check the value changes according to driving speed.


Item name	Condition	Display value (Approx.)
TCC S/V DUTY	Lock-up OFF ⇔ Lock-up ON	4% ⇔ 94%

	DATA M	ONITOF	₹	
MONI	TOR	N	O DTC	
VEHIC THRO LINE I TCC S	VR POS CLE SPEE TTLE PO PRES DT G/V DUTY	ED 0 ISI (I Y	N/P km/h).0 /8 0 % 4 % ON	
OVER	SHIFT S/V B OVERRUN/C S/V SELF-D DP LMP			
Pa	ge Up			
		REC	ORD	
MODE	BACK	LIGHT	COPY	SCIA3257E

Without CONSULT-II

- 1. Start engine.
- 2. Check voltage between TCM connector terminal and ground.

Item	Connector	Terminal (Wire color)	Condition	Judge- ment stan- dard (Approx.)
TCM connector	F46	3 (GY/R) - Ground	When A/T performs lock-up.	8 - 15V
	1 40		When A/T does not perform lock-up.	0V

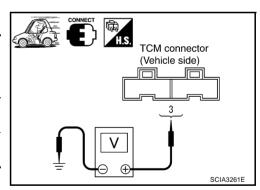

OK or NG

OK >> GO TO 5. NG >> GO TO 2.

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE


$\overline{2}$. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector.
- 3. Check resistance between TCM connector terminal and ground.

Solenoid Valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Torque converter clutch solenoid valve	F46	3 (GY/R) - Ground	5 - 20 Ω

OK or NG

OK >> GO TO 5. >> GO TO 3. NG

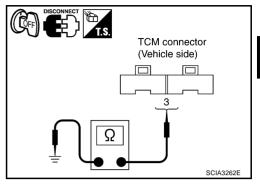

TCM connector

(Vehicle side)

3. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminal and TCM connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	3 (GY/R)	
Terminal cord assembly harness connector	F23	5 (GY/R)	Yes

- If OK, check harness for short to ground and short to power.
- If OK, check continuity between ground and transaxle assembly.
- Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK VALVE RESISTANCE

- Turn ignition switch OFF.
- Disconnect terminal cord assembly harness connector in engine room. 2.
- Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Torque converter clutch solenoid valve	F23	5 - Ground	5 - 20Ω

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

Terminal cord assembly harness connector (Solenoid valve side)

5. CHECK DTC

Perform AT-142, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.

AT-145 Revision: 2005 March 2005 X-Trail

ΑT

В

F

Terminal cord assembly harness connector

(Vehicle side)

Ω

Н

SCIA3263E

SCIA3456E

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

6. снеск тсм

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.


Component Inspection TORQUE CONVERTER CLUTCH SOLENOID VALVE

For removal, refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u>.

Resistance

Check resistance between terminal and ground.


Solenoid valve	Terr	Resistance (Approx.)	
Torque converter clutch solenoid valve	5	Ground	5 - 20Ω

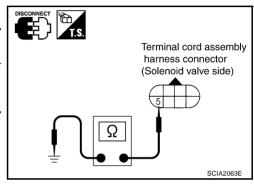

ACS007SI

Operation

 Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

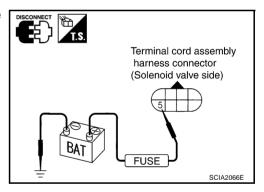

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PFP:31940

Description

ACS007NF

- This is an OBD-II self-diagnostic item and not available in TCM self-diagnosis.
- This malfunction will not be detected while O/D OFF indicator lamp is indicating another self-diagnosis malfunction.
- This malfunction is detected when A/T does not shift into fourth gear position or torque converter clutch does not lock-up as instructed by TCM. This is not caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, malfunctioning oil pump or torque converter clutch, etc.

Α

R

CONSULT-II Reference Value

ACS00776

Item name	Condition	Display value (Approx.)
TCC S/V DUTY	Lock-up OFF ⇔ Lock-up ON	4% ⇔ 94%
LINE PRES DTY	Small throttle opening (Low line pressure) ⇔ Large throttle opening (High line pressure)	0% ⇔ 92%

On Board Diagnosis Logic

ACS007NG

- This is an OBD-II self-diagnostic item.
- This diagnosis monitors actual gear position by checking the torque converter slip ratio calculated by TCM as follows:

Torque converter slip ratio = $A \times C/B$

- A: Output shaft revolution signal from revolution sensor
- B: Engine speed signal from ECM
- C: Gear ratio determined as gear position which TCM supposes

If the actual gear position is much lower than the position (4th) supposed by TCM, the slip ratio will be much less than normal. In case the ratio does not reach the specified value, TCM judges this diagnosis malfunction.

This malfunction will be caused when shift solenoid valve B is stuck closed.

Gear positions supposed by TCM are as follows.

In case of gear position with no malfunctions: 1, 2, 3 and 4 positions

In case of gear position with shift solenoid valve B stuck closed: 1, 2, 2 and 1* positions to each gear position above

- *: P0744 is detected.
- Diagnostic trouble code "A/T TCC S/V FNCTN" with CONSULT-II is detected when A/T cannot perform lock-up even if electrical circuit is good.

Possible Cause ACS007NH

Check the following.

Revision: 2005 March

- Line pressure solenoid valve
- Torque converter clutch solenoid valve
- Each clutch
- Hydraulic control circuit

AT-147

D

F

Н

J

M

2005 X-Trail

DTC Confirmation Procedure

ACS007N

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.


(II) WITH CONSULT-II

- 1. Start engine and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Make sure that output voltage of A/T fluid temperature sensor is within the range below.

FLUID TEMP SE: 0.4 - 1.5V

If out of range, drive vehicle to decrease voltage (warm up the fluid) or stop engine to increase voltage (cool down the fluid).

3. Select "TCC S/V FNCTN P0744" of "DTC WORK SUPPORT" mode for "A/T" with CONSULT-II and touch "START".

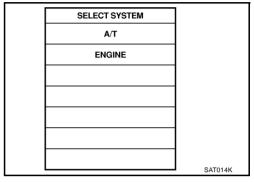

 Accelerate vehicle to more than 80 km/h (50 MPH) and maintain the following condition continuously until "TESTING" has turned to "COMPLETE". (It will take approximately 30 seconds after "TESTING" shows.)

THROTTLE POSI: 1.0/8 - 2.0/8 (at all times during step 4)


SLCT LVR POSI: "D" position

TCC S/V DUTY: 94%

VHCL/S SE-A/T: Constant speed of more than 80 km/h (50

MPH)

- Make sure that "GEAR" shows "4".
- For shift schedule, refer to <u>AT-66, "Vehicle Speed When Shifting Gears"</u>.

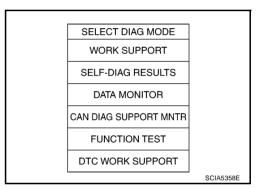


- If "TESTING" does not appear on CONSULT-II for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than "A/T TCC S/V FNCTN" is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".
- 5. Make sure that "OK" is displayed. (If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE".) Refer to <u>AT-150, "Diagnostic Procedure"</u>.

Refer to AT-66, "Vehicle Speed When Performing and Releasing Lock-Up".

Wiring Diagram — AT — TCCSIG

AT-TCCSIG-01

■ : DETECTABLE LINE FOR DTC : NON-DETECTABLE LINE FOR DTC

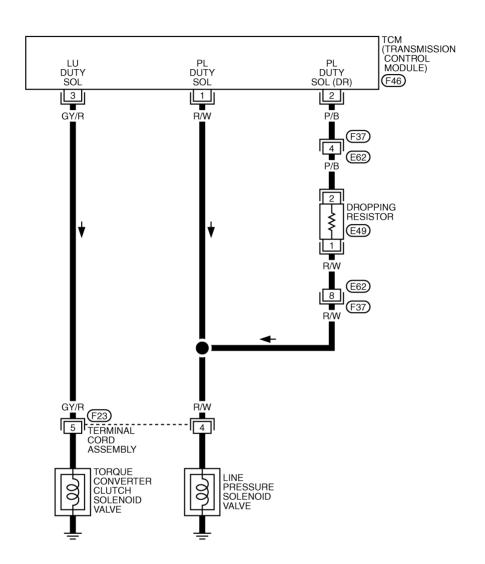

ΑT

Α

В

D

Е


G

Н


K

M



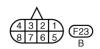



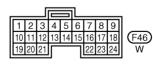



TCWB0009E

Termi- nal	Wire color	Item	Condition		Judgement stan dard (Approx.)
1	R/W	Line pressure solenoid		When releasing accelerator pedal after warming up engine.	1.5 - 3.0V
'	valve		When depressing accelerator pedal fully after warming up engine.	0V	
2	Line pressure solenoid		When releasing accelerator pedal after warming up engine.	5 - 14V	
2	P/B	valve (with dropping resistor)		When depressing accelerator pedal fully after warming up engine.	0V
	3 GY/R Torque converter clutch solenoid valve	Tanana and a shutah		When A/T performs lock-up.	8 - 15V
3			When A/T does not perform lock- up.	0V	


Diagnostic Procedure

1. CHECK SHIFT-UP (D3 TO D4)

During AT-60, "Cruise Test — Part 1".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 11. NO >> GO TO 2.

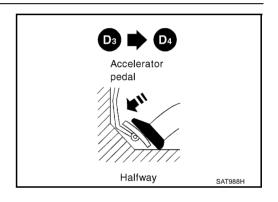

ACS007XA

2. CHECK LINE PRESSURE

Perform line pressure test. Refer to AT-55, "LINE PRESSURE TEST".

Engine speed rpm	Line pressure	kPa (kg/cm ² , psi)
Engine opeca ipin	"D", "2" and "1" positions	"R" position
Idle	500 (5.1, 73)	778 (7.9, 113)
Stall	1,233 (12.6, 179)	1,918 (19.6, 278)

OK or NG

OK >> GO TO 3. NG >> GO TO 6.

3. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- 2. Check to ensure that:
- Valve, sleeve and plug slide along valve bore under their own weight.
- Valve, sleeve and plug are free from burrs, dents and scratches.
- Control valve springs are free from damage, deformation and fatigue.
- Hydraulic line is free from obstacles.

OK or NG

OK >> GO TO 4.

NG >> Repair or replace control valve.

4. CHECK SHIFT-UP (D₃ TO D₄)


During AT-60, "Cruise Test — Part 1".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 5.

NO >> Check c

>> Check control valve again. Repair or replace control valve assembly.

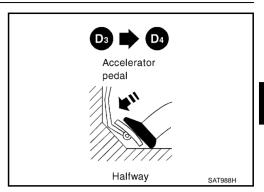

5. CHECK DTC

Perform AT-148, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 11.

6. CHECK VALVE RESISTANCE

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Line pressure solenoid valve
- 2. Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Line pressure solenoid valve	4 Ground		2.5 - 5Ω

OK or NG

OK >> GO TO 7.

NG >> Replace solenoid valve assembly.

Terminal cord assembly harness connector (Solenoid valve side)


7. CHECK VALVE OPERATION

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Line pressure solenoid valve
- 2. Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

OK or NG

OK >> GO TO 8.

NG >> Replace solenoid valve assembly.

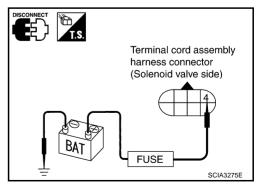

Д

В

ΑT

D

F

G

Н

J

N

8. CHECK CONTROL VALVE

- 1. Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly".
- 2. Check line pressure circuit valves for sticking.
- Pressure regulator valve
- Pilot valve
- Pressure modifier valve

OK or NG

OK >> GO TO 9.

NG >> Repair or replace control valve.


9. CHECK SHIFT-UP (D3 TO D4)

During AT-60, "Cruise Test — Part 1".

Does A/T shift from D₃ to D₄ at the specified speed?

YES >> GO TO 10.

NO >> Check control valve again. Repair or replace control valve assembly.

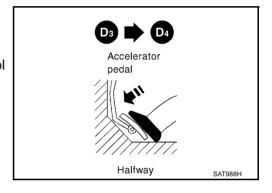

10. CHECK DTC

Perform AT-148, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 11.

11. CHECK LOCK-UP


During AT-60, "Cruise Test — Part 1".

A/T perform lock-up at the specified speed?

YES >> Perform AT-60, "Cruise Test — Part 1" again and return

to the start point of this test group.

NO >> GO TO 12.

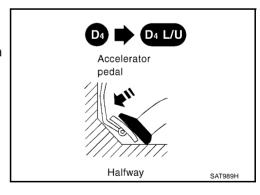

$\overline{1}2$. CHECK VALVE RESISTANCE


- Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Torque converter clutch solenoid valve
- 2. Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Torque converter clutch solenoid valve		Ground	5 - 20Ω

OK or NG

OK >> GO TO 13.

NG >> Replace solenoid valve assembly.

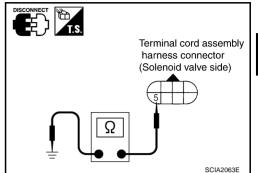


13. CHECK VALVE OPERATION

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Torque converter clutch solenoid valve
- Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

OK or NG

OK >> GO TO 14.

NG >> Replace solenoid valve assembly.

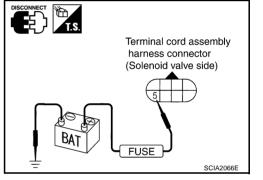

14. CHECK CONTROL VALVE

- Disassemble control valve assembly. Refer to AT-304, "Control Valve Assembly". 1.
- 2. Check control valves for sticking.
- Torque converter clutch control valve
- Torque converter clutch relief valve

OK or NG

NO

OK >> GO TO 15.

NG >> Repair or replace control valve.


15. CHECK LOCK-UP

During AT-60, "Cruise Test — Part 1".

A/T perform lock-up at the specified speed?

YES >> GO TO 16.

> >> Check control valve again. Repair or replace control valve assembly.

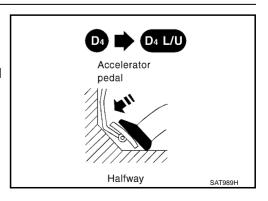

Н

В

ΑT

F

16. CHECK DTC

Perform AT-148, "DTC Confirmation Procedure" .

OK or NG

OK >> INSPECTION END

NG >> Perform AT-60, "Cruise Test — Part 1" again and return to the start point of this test group.

DTC P0745 LINE PRESSURE SOLENOID VALVE

PFP:31940

Description

ACS007SJ

Line pressure solenoid valve regulates oil pump discharge pressure to suit the driving condition in response to a signal sent from TCM.

The line pressure duty cycle value is not consistent when the closed throttle position switch is ON. To confirm the line pressure duty cycle at low pressure, accelerator (throttle) should be open until the closed throttle position switch is OFF.

CONSULT-II Reference Value

ACS007Z8

Item name	Condition	Display value (Approx.)
LINE PRES DTY	Small throttle opening (Low line pressure) ⇔ Large throttle opening (High line pressure)	0% ⇔ 92%

On Board Diagnosis Logic

ACS007SK

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "L/PRESS SOL/CIRC" with CONSULT-II or 10th judgement flicker without CON-SULT-II is detected when TCM detects an improper voltage drop when it tries to operate the solenoid valve.

Possible Cause

Check the following.

- Harness or connector (The solenoid circuit is open shorted.)
- Line pressure solenoid valve

DTC Confirmation Procedure

ACS007SM

CAUTION:

If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(P) WITH CONSULT-II

 Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

- 2. Depress accelerator pedal completely and wait at least 5 seconds
- 3. If check result is NG, go to AT-158, "Diagnostic Procedure".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
FUNCTION TEST
DTC WORK SUPPORT

Revision: 2005 March AT-155 2005 X-Trail

ΑT

Α

В

F

D

Н

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II

- 1. Start engine.
- 2. With brake pedal depressed, shift the lever from "P" \rightarrow "N" \rightarrow "D" \rightarrow "N" \rightarrow "P" positions.
- 3. Perform self-diagnosis. Refer to <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.
- 4. If the check result is NG, go to AT-158, "Diagnostic Procedure".

Wiring Diagram — AT — LPSV

ACS007SN

Α

В

D

Е

F

G


Н

J

K

M


AT-LPSV-01

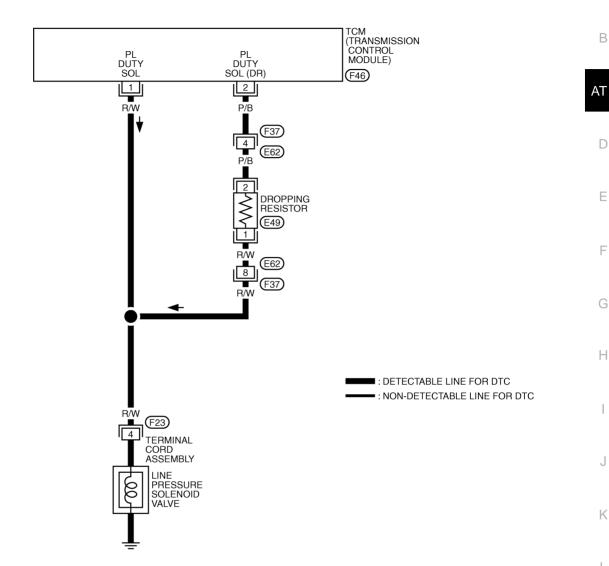







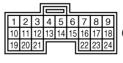



TCWA0046E

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Judgement stan- dard (Approx.)
	DAM	Line pressure		When releasing accelerator pedal after warming up engine.	1.5 - 3.0V
1 R/W	solenoid valve	23 -	When depressing accelerator pedal fully after warming up engine.	0V	
2	D/D	Line pressure solenoid valve		When releasing accelerator pedal after warming up engine.	5 - 14V
2 P/B	(with dropping resistor)		When depressing accelerator pedal fully after warming up engine.	OV	

Diagnostic Procedure

1. CHECK INPUT SIGNAL

ACS007SO

(I) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "LINE PRES DTY" while driving. Check the value changes according to driving speed.


Item name	Condition	Display value (Approx.)
LINE PRES DTY	Small throttle opening (Low line pressure) ⇔ Large throttle opening (High line pressure)	0% ⇔ 92%

DATA MONITOR					
MONIT	OR		N	DTC	
ENGINE SPEED GEAR		D	38	4 rpm 1	
SLCTL	/R POS	I	-	V/P	
VEHIC	LE SPE	ΞD	0	km/h	
THROT	TLE PO	SI	0	.0 /8	
LINE P	RES DT	Υ	() %	
TCC S/V DUTY		•	4	1 %	
SHIFT S/V A				ис ис	
SHIFT S/V B				ИС	
		Pa	ge	Down	
		RI	EC	ORD	
MODE	BACK	LIGH	ΗT	COPY	SCIA3251E

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground.

Item	Connector	Terminal (Wire color)	Condition	Judge- ment stan- dard (Approx.)
TCM con-	con- F46 1 (R/W) -		When releasing accelerator pedal after warming up engine.	1.5 - 3.0V
nector	1 40	Ground When depressing accelerator pedal fully after warming up engine.	0V	
TCM con-	F46	2 (P/B) -	When releasing accelerator pedal after warming up engine.	5 - 14V
nector	1 40	Ground	When depressing accelerator pedal fully after warming up engine.	0V

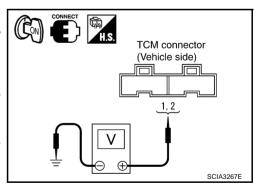

OK or NG

OK >> GO TO 5. NG >> GO TO 2.

2. CHECK DROPPING RESISTOR


- 1. Turn ignition switch OFF.
- 2. Disconnect dropping resistor harness connector in engine room.
- 3. Check resistance between terminals.

Item	Connector	Terminal	Resistance (Approx.)
Dropping resistor harness connector	E49	1 - 2	12 Ω

OK or NG

OK >> GO TO 3.

NG >> Repair or replace damaged parts.

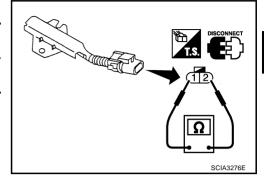

3. CHECK VALVE RESISTANCE


- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly connector in engine room.
- Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Line pressure solenoid valve	F23	4 - Ground	2.5 - 5.0 Ω

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

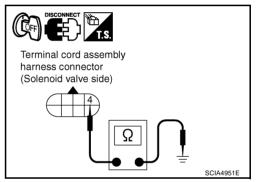

В

AT

D

Е

G

Н

J


K

ī

4. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR


- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminal and TCM connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	1 (R/W)	
Terminal cord assembly harness connector	F23	4 (R/W)	Yes

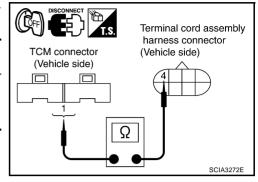

 Check continuity between terminal cord assembly harness connector terminal and dropping resistor harness connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
Dropping resistor harness connector	E49	1 (R/W)	Yes
Terminal cord assembly harness connector	F23	4 (R/W)	165

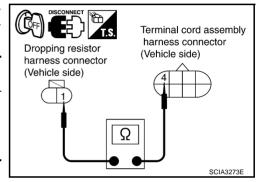

Check continuity between dropping resistor harness connector terminal and TCM connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	2 (P/B)	
Dropping resistor harness connector	E49	2 (P/B)	Yes

- 6. If OK, check harness for short to ground and short to power.
- 7. Reinstall any part removed.

OK or NG

OK >> GO TO 5

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK DTC

Perform AT-155, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.


6. снеск тсм

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

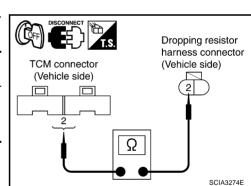

Component Inspection LINE PRESSURE SOLENOID VALVE


ACS007SP

For removal, refer to AT-260, "Control Valve Assembly and Accumulators" .

Resistance

Check resistance between terminal and ground.

Solenoid valve	Terr	Resistance (Approx.)	
Line pressure solenoid valve	4	Ground	2.5 - 5.0Ω

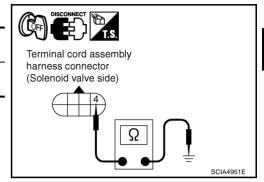

ΑT

Α


В

D

Е

Operation


Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

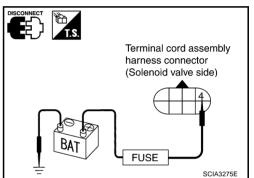

DROPPING RESISTOR

Check resistance between terminals.

Item	Connector	Terminal	Resistance (Approx.)
Dropping resistor harness connector	E49	1 - 2	12 Ω

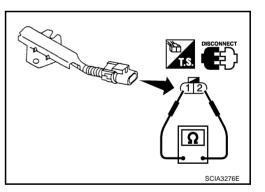

Н

DTC P0750 SHIFT SOLENOID VALVE A

PFP:31940

Description

ACS007SQ

Shift solenoid valves A and B are turned ON or OFF by TCM in response to signals sent from PNP switch, vehicle speed and throttle position sensors. Gears will then be shifted to the optimum position.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

CONSULT-II Reference Value

ACS007Z9

Item name	Condition	Display value
SHIFT S/V A	When shift solenoid valve A operates. (When driving in "D1 " or "D4 ".)	ON
SIIII I S/V A	When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	OFF

On Board Diagnosis Logic

ACS007SR

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "SHIFT SOLENOID/V A" with CONSULT-II or 4th judgement flicker without CON-SULT-II is detected when TCM detects an improper voltage drop when it tries to operate the solenoid valve.

Possible Cause

Check the following.

- Harness or connector (The solenoid circuit is open or shorted.)
- Shift solenoid valve A

DTC Confirmation Procedure

ACS007ST

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(P) WITH CONSULT-II

- Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Start engine.
- 3. Drive vehicle in "D" position and allow the transaxle to shift "1" \rightarrow "2" ("GEAR").
- 4. If the check result is NG, go to AT-164, "Diagnostic Procedure".

	1
SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II

- 1. Start engine.
- 2. Drive vehicle in "D1" \rightarrow "D2" position.
- 3. Perform self-diagnosis.

 Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".
- 4. If the check result is NG, go to AT-164, "Diagnostic Procedure".


Wiring Diagram — AT — SSV/A

ACS007SU

AT-SSV/A-01

Α

В

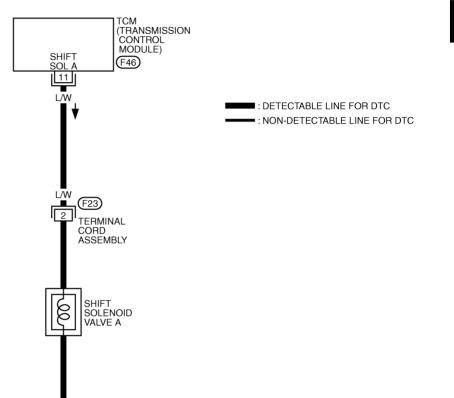

AT

D

Е

F

G


Н

J

Κ

M



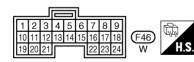

TCWA0040E

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Judgement stan- dard (Approx.)
11	L/W	Shift sole-		When shift solenoid valve A operates. (When driving in "D1" or "D4".)	Battery voltage
11	L/VV	noid valve A		When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	OV

Diagnostic Procedure

ACS007SV

1. CHECK INPUT SIGNAL

(II) With CONSULT-II

- 1. Start engine.
- 2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "SHIFT S/V A" while driving. Check the value changes according to driving speed.


Item name Condition		Display value
SHIFT S/V A	When shift solenoid valve A operates. (When driving in "D1" or "D4".)	ON
31111 1 3/V A	When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	OFF

DATA MONITOR					
MONIT	OR		NO	DTC	
GEAR	E SPEE	_		rpm 1	
	/R POS _E SPEI	•		/P m/h	
	TLE PO			2/8	
	RES DT V DUTY		0 4	%	
SHIFT				N	
SHIFT	S/V B		C	DN	
		Pag	ge D	own	
		RE	ECC	RD	
MODE	BACK	LIGH	IT (COPY	SCIA3251E

8 Without CONSULT-II

- Start engine.
- 2. Check voltage between TCM connector terminal and ground.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con-	F46	11 (L/W) -	When shift solenoid valve A operates. (When driving in "D1" or "D4".)	Battery volt- age
nector	1 40	Ground	When shift solenoid valve A does not operate. (When driving in "D2" or "D3".)	0V

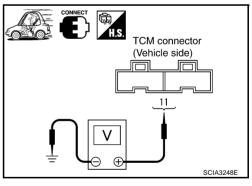

OK or NG

OK >> GO TO 5. NG >> GO TO 2.


2. CHECK SHIFT SOLENOID VALVE A CIRCUIT

- Turn ignition switch OFF. 1.
- 2. Disconnect TCM connector.
- Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Shift solenoid valve A	F46	11 (L/W) - Ground	20 - 30 Ω

OK or NG

OK >> GO TO 5. >> GO TO 3. NG

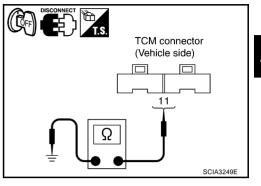

3. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminal and TCM connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	11 (L/W)	
Terminal cord assembly harness connector	F23	2 (L/W)	Yes

- If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK VALVE RESISTANCE

- Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector in engine room.
- 3. Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Shift solenoid valve A	F23	2 - Ground	20 - 30 Ω

4. If OK, check continuity between ground and transaxle assembly. OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

Terminal cord assembly harness connector (Solenoid valve side) SCIA3453E

5. CHECK DTC

Perform AT-162, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.

Terminal cord assembly harness connector TCM connector (Vehicle side) (Vehicle side) Ω

AT-165 Revision: 2005 March 2005 X-Trail

ΑT

В

Н

SCIA3250E

6. снеск тсм

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

Component Inspection SHIFT SOLENOID VALVE A


ACS007SW

• For removal, refer to AT-260, "Control Valve Assembly and Accumulators".

Resistance


Check resistance between terminal and ground.

Solenoid valve	Terr	Resistance (Approx.)	
Shift solenoid valve A	2	Ground	20 - 30Ω

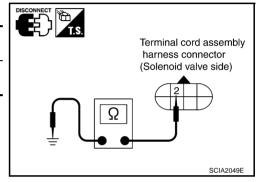

Operation

 Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

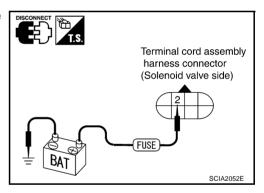

DTC P0755 SHIFT SOLENOID VALVE B

PFP:31940

Description

ACS007SX

Shift solenoid valves A and B are turned ON or OFF by TCM in response to signals sent from PNP switch, vehicle speed and throttle position sensors. Gears will then be shifted to the optimum position.

Gear position	1	2	3	4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Open)	ON (Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Open)	OFF (Open)

ΑT

D

F

Α

CONSULT-II Reference Value

ACS007ZA

Item name	Condition	Display value
SHIFT S/V B	When shift solenoid valve B operates. (When driving in "D1" or "D2".)	ON
SIIII I S/V B	When shift solenoid valve B does not operate. (When driving in "D3 " or "D4 ".)	OFF

On Board Diagnosis Logic

ACS007SY

This is an OBD-II self-diagnostic item.

 Diagnostic trouble code "SHIFT SOLENOID/V B" with CONSULT-II or 5th judgement flicker without CON-SULT-II is detected when TCM detects an improper voltage drop when it tries to operate the solenoid valve.

G

Possible Cause

ACS007SZ

Check the following.

Н

- Harness or connector (The solenoid circuit is open or shorted.)
- Shift solenoid valve B

ACS007T0

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

K

M

 If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

AT-167

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

WITH CONSULT-II

- 1. Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Start engine.
- 3. Drive vehicle in "D" position and allow the transaxle to shift "1" \rightarrow "2" \rightarrow "3" ("GEAR").
- 4. If the check result is NG, go to AT-169, "Diagnostic Procedure".

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II


- 1. Start engine.
- 2. Drive vehicle in "D" \rightarrow "D2" \rightarrow "D3" position.
- 3. Perform self-diagnosis.

 Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".
- If the check result is NG, go to <u>AT-169, "Diagnostic Procedure"</u>.


Wiring Diagram — AT — SSV/B

ACS007T1

AT-SSV/B-01

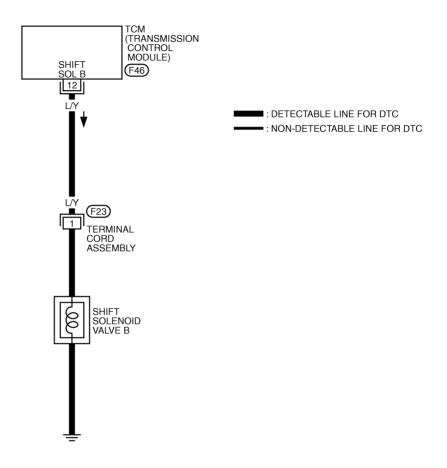



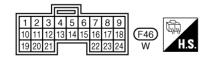

TCWA0041E

Data are reference value and are measured between each terminal and ground.

Termi- nal	Wire color	Item	Condition		Judgement stan- dard (Approx.)
42	L/Y	Shift solenoid		When shift solenoid valve B operates. (When driving in "D1" or "D2".)	Battery voltage
12	L/ Y	valve B		When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	0V

ΑT

D

F

G

Н

ACS007T2

Α

В

Diagnostic Procedure

1. CHECK INPUT SIGNAL

(II) With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out the value of "SHIFT S/V B" while driving. Check the value changes according to driving speed.


Item name	Condition	Display value
SHIFT S/V B	When shift solenoid valve B operates. (When driving in "D1" or "D2".)	ON
3HIF1 3/V B	When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	OFF

DATA MONITOR						
	MONIT	OR		NO DTO		
	ENGINE SPEED			384 rpm		
	GEAR SLCTLVR POSI			n/P		
		E SPE		0 km/h		
		TLE PC RES DT		0.078		
	TCC S/V DUTY			4 %		
	SHIFT			ON		
	SHIFT	S/V B	_	ON	_	
			Pag	e Down		
				CORD		
	MODE	BACK	LIGH	т СОР	Y SCIA3251E	

8 Without CONSULT-II

- Start engine.
- 2. Check voltage between TCM connector terminal and ground.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con-		12 (L/Y) -	When shift solenoid valve B operates. (When driving in "D1" or "D2".)	Battery voltage
nector	F46	Ground	When shift solenoid valve B does not operate. (When driving in "D3" or "D4".)	0V

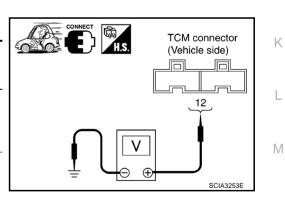

OK or NG

OK >> GO TO 5.

NG >> GO TO 2.


$\overline{2}$. CHECK SHIFT SOLENOID VALVE B CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector.
- 3. Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Shift solenoid valve B	F46	12 (L/Y) - Ground	5 - 20 Ω

OK or NG

OK >> GO TO 5. NG >> GO TO 3.

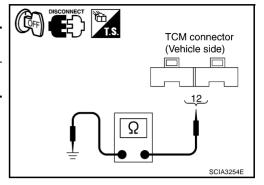

TCM connector

12

(Vehicle side)

Terminal cord assembly harness connector

SCIA4943E

(Vehicle side)

Ω

3. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminal and TCM connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	12 (L/Y)	
Terminal cord assembly harness connector	F23	1 (L/Y)	Yes

- 4. If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK VALVE RESISTANCE

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector in engine room.
- Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Shift solenoid valve B	F23	1 - Ground	5 - 20 Ω

4. If OK, check continuity between ground and transaxle assembly. OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

Terminal cord assembly harness connector (Solenoid valve side) Ω SCIA3454E

5. CHECK DTC

Perform AT-167, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.

6. снеск тсм

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> INSPECTION END
- NG >> Repair or replace damaged parts.

Component Inspection SHIFT SOLENOID VALVE B


ACS007T3

For removal, refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u>.

Resistance


Check resistance between terminal and ground.

Solenoid valve	Terr	minal	Resistance (Approx.)
Shift solenoid valve B	1	Ground	5 - 20Ω

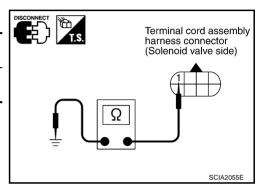

Operation

 Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

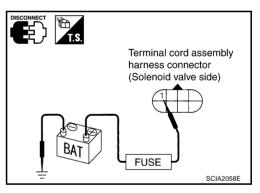

AT

D

F

В

J

Н

Κ

DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR

PFP:22620

Description

ACS007T4

Accelerator pedal position (APP) sensor is part of the system that controls throttle position. This system also uses an electric throttle control actuator, which consists of a throttle control motor and throttle position sensors. Accelerator pedal position signal is sent to the ECM.

CONSULT-II Reference Value

ACS007ZB

Item name	Condition	Display value (Approx.)
THRTL POS SEN	When depressing accelerator pedal slowly after warming up engine.	Fully-closed throttle: 0.8V
THINTE FOO SEN	(Voltage rises gradually in response to throttle position.)	Fully-open throttle: 4.4V

On Board Diagnosis Logic

ACS007T5

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "THROTTLE POSI SEN" with CONSULT-II or 3rd judgement flicker without CON-SULT-II is detected when TCM receives an excessively low or high voltage from the ECM.

Possible Cause

Harness or connector

(The sensor circuit is open shorted.)

DTC Confirmation Procedure

ACS007T7

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(R) WITH CONSULT-II

- 1. Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Check the following.

Accelerator pedal condition	THRTL POS SEN
Fully released	Approx. 0.8V
Partially depressed	0.8 - 4.4V
Fully depressed	Approx. 4.4V

If the check result is NG, go to <u>AT-175, "Diagnostic Procedure"</u>. If the check result is OK, go to following step.


- 3. Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Start engine and maintain the following conditions for at least 3 consecutive seconds. Then release accelerator pedal completely.

VEHICLE SPEED: 10 km/h (6 MPH) or more THRTL POS SEN: Approximately 3V or less SLCT LVR POSI: "D" position (OD ON)

If the check result is NG, go to AT-175, "Diagnostic Procedure". If the check result is OK, go to following step.

Maintain the following conditions for at least 3 consecutive seconds. Then release accelerator pedal completely.

VEHICLE SPEED: 10 km/h (6 MPH) or more THRTL POS SEN: Wide open throttle SLCT LVR POSI: "D" position (OD ON)

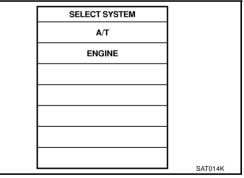

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
CAN DIAG SUPPORT MNTR	
FUNCTION TEST	
DTC WORK SUPPORT	
	SCIA5358E

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II

- 1. Start engine.
- 2. Drive vehicle under the following conditions for more than 3 seconds.

Selector lever position: "D" position Vehicle speed: 10km/h (6MPH) or more

Throttle position: greater than 4.0/8 of the full throttle position

3. Perform self-diagnosis. Refer to <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.

4. If the check result is NG, go to AT-175, "Diagnostic Procedure" .

Α

АТ

В

F

D

F

G

Н


K


L


Wiring Diagram — AT — TPS

ACS007T8

AT-TPS-01

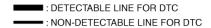

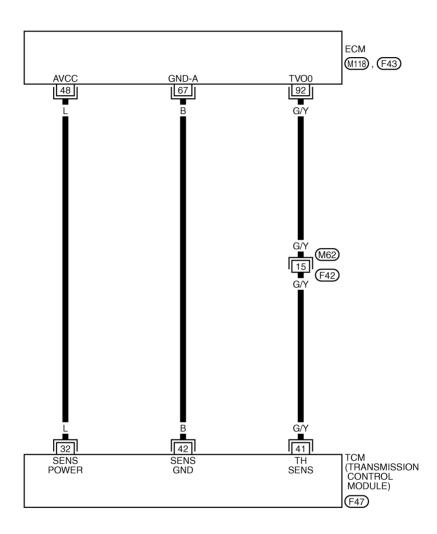

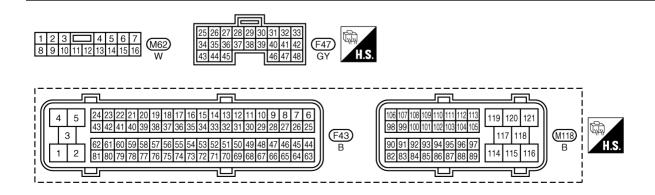

TCWB0010E

Data are	reference	value and are m	easured between eac	h terminal and ground.			
Terminal	Wire color	Item	Condition Judgement standar (Approx.)				
32	L	Sensor power	an an	When turning ignition switch to "ON".	4.5 - 5.5V		
			CON OL COLL	When turning ignition switch to "OFF".	0V		
41	G/Y	Accelerator pedal position (APP) sensor	CON	When depressing accelerator pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-closed throttle: 0.8V Fully-open throttle: 4.4V		
42	В	Sensor ground		Always	0V		

Diagnostic Procedure

ACS007XB

1. CHECK DTC WITH ECM

Check DTC with CONSULT-II "ENGINE".
 Turn ignition switch ON and select "SELF DIAGNOSTIC RESULTS" mode for "ENGINE" with CONSULT-II. Refer to EC-123, "CONSULT-II Function (ENGINE)".

OK or NG

OK >> GO TO 2.

NG >> Check accelerator pedal position (APP) sensor circuit for engine control. Refer to EC-555, "DTC P2122, P2123 APP SENSOR", EC-562, "DTC P2127, P2128 APP SENSOR" and EC-578, "DTC P2138 APP SENSOR". If CAN communication line is detected, GO TO AT-95, "DTC U1000 CAN COMMUNICATION LINE".

Revision: 2005 March AT-175 2005 X-Trail

AT

В

Α

Е

D

Н

G

Κ

L

2. CHECK INPUT SIGNAL

(II) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "THRTL POS SEN".


Item name	Condition	Display value (Approx.)	
	When depressing accelera-	Fully-closed throttle: 0.8V	
THRTL POS SEN	tor pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-open throttle: 4.4V	

DATA MONITOR				
MONI	TOR	N	O DTC	
VHCL THRTI FLUID BATTE ENGIN TURB OVER	'S SE-AT 'S SE-MT _ POS SI _ TEMP S ERY VOL' NE SPEE INE REV DRIVE S OSI SW	TR 5 kr EN 0.8 EE 1.4 T 11.0 D 384 O rp	m/h S V S V S O V rpm om FF	
		Page	Down	
		REC	ORD	
MODE	BACK	LIGHT	COPY	SCIA4730E

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con- nector	F47	41(G/Y) - 42(B)	When depressing accelerator pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-closed throttle: 0.8V Fully-open throttle: 4.4V

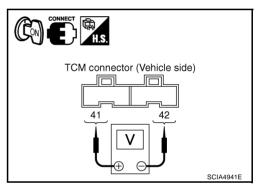

OK or NG

OK >> GO TO 3.

NG >> Check harness for short or open between ECM and TCM regarding throttle position sensor circuit.

3. CHECK DTC

Perform AT-172, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 4.

4. CHECK TCM

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

DTC P1760 OVERRUN CLUTCH SOLENOID VALVE

PFP:31940

Description

ACS007TA

Overrun clutch solenoid valve is activated by TCM in response to signals sent from PNP switch, overdrive control switch, vehicle speed and throttle position sensors. Overrun clutch operation will then be controlled.

CONSULT-II Reference Value

ACS007ZC

Item name	Condition	Display value
OVERRUN/C S/V	When overrun clutch solenoid valve operates.	ON
OVERNON/O S/V	When overrun clutch solenoid valve does not operate.	OFF

On Board Diagnosis Logic

ACS007TB

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "OVERRUN CLUTCH S/V" with CONSULT-II or 6th judgement flicker without CONSULT-II is detected when TCM detects an improper voltage drop when it tries to operate solenoid valve.

Possible Cause ACS007TC

Check the following.

- Harness or connector (The solenoid circuit is open or shorted.)
- Overrun clutch solenoid valve

DTC Confirmation Procedure

ACS007TD

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.


TESTING CONDITION:

Always drive vehicle on a level road to improve accuracy of test.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(P) WITH CONSULT-II

- Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 2. Start engine.
- Accelerate vehicle to a speed of more than 10 km/h (6 MPH) with "D" position (OD ON).
- Release accelerator pedal completely with "D" position (OD OFF).

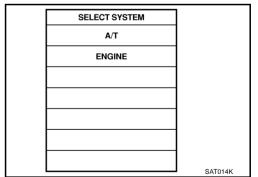

WITH GST

Follow the procedure "WITH CONSULT-II".

WITHOUT CONSULT-II

- Start engine.
- Drive vehicle under the following conditions: Selector lever in "D" position (OD ON), vehicle speed higher than 10 km/h (6 MPH).
- Perform self-diagnosis. Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".
- If the check result is NG, go to AT-179, "Diagnostic Procedure".

D

ΑT


Α

Н


Wiring Diagram — AT — OVRCSV

ACS007TE

AT-OVRCSV-01

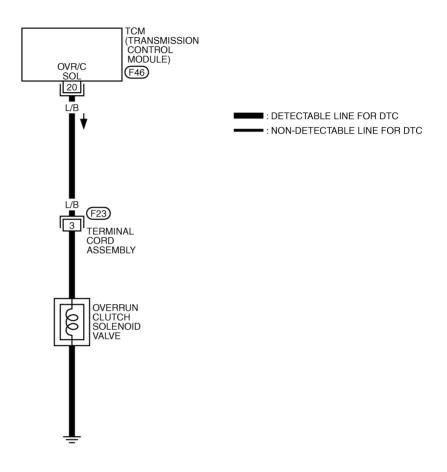



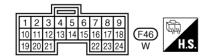

TCWA0042E

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	Item		Judgement stan- dard (Approx.)	
		Overrup eluteb		When overrun clutch solenoid valve operates.	Battery voltage
20	L/B	Overrun clutch solenoid valve		When overrun clutch solenoid valve does not operate.	0V

ACS007TF

Α

В

ΑT

D

F

G

Н

Diagnostic Procedure

1. CHECK INPUT SIGNAL

(I) With CONSULT-II

- 1. Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "OVERRUN/C S/V" while driving. Check the value changes according to driving speed.

Item name	Condition	Display value
	When overrun clutch solenoid valve operates.	ON
OVERRUN/C S/V	When overrun clutch solenoid valve does not operate.	OFF

DATA MONITOR					
	MONIT	OR	N	O DTC	
		/R POS		N/P km/h	
	THROT	TLE PC	SI C	0.0 /8	
		RES DT V DUTY		0 % 4 %	
	SHIFT:			ON ON	
	OVERF	RUN/C S	/V	OFF OFF	
		e Up	F '	OFF	
	1 49	- ОР	REC	ORD	
	MODE	BACK	LIGHT	COPY	SCIA3257E

® Without CONSULT-II

- Start engine.
- 2. Check voltage between TCM connector terminal and ground.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con-		F46 20 (L/B) - Ground	When overrun clutch solenoid valve operates.	Battery volt- age
nector	F46		When overrun clutch solenoid valve does not operate.	0V

TCM connector (Vehicle side)

OK or NG

OK >> GO TO 5. NG >> GO TO 2.


2. CHECK OVERRUN CLUTCH SOLENOID VALVE CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector.
- 3. Check resistance between TCM connector terminal and ground.

Solenoid valve	Connector	Terminal (Wire color)	Resistance (Approx.)
Overrun clutch solenoid valve	F46	20 (L/B) - Ground	20 - 30 Ω

OK or NG

OK >> GO TO 5. NG >> GO TO 3.

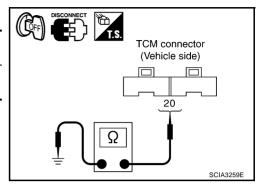

TCM connector

(Vehicle side)

20

Terminal cord assembly harness connector

SCIA3260F


SCIA4945E

(Vehicle side)

3. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminal and TCM connector terminal.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F46	20 (L/B)	
Terminal cord assembly harness connector	F23	3 (L/B)	Yes

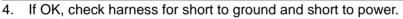

Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK VALVE RESISTANCE

- 1. Turn ignition switch OFF.
- 2. Disconnect terminal cord assembly harness connector in engine room.
- Check resistance between terminal cord assembly harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Overrun clutch solenoid valve	F23	3 - Ground	20 - 30 Ω

4. If OK, check continuity between ground and transaxle assembly. OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

Terminal cord assembly harness connector (Solenoid valve side)

Ω

5. CHECK DTC

Perform AT-177, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.

DTC P1760 OVERRUN CLUTCH SOLENOID VALVE

6. снеск тсм

- Check TCM input/output signal. Refer to <u>AT-77, "TCM Terminals and Reference Value"</u>.
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

Component Inspection OVERRUN CLUTCH SOLENOID VALVE


ACS007TG

For removal, refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u>.

Resistance


Check resistance between terminal and ground.

Solenoid valve	Terminal		Resistance (Approx.)
Overrun clutch solenoid valve	3	Ground	20 - 30Ω

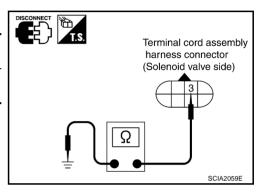

Operation

 Check solenoid valve by listening for its operating sound while applying battery voltage to the terminal and ground.

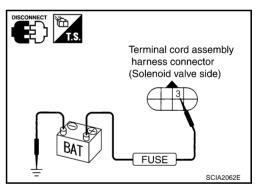

ΑT

D

F

В

G

Н

J

K

DTC VEHICLE SPEED SENSOR MTR

PFP:24814

Description

ACS007TH

Vehicle speed sensor MTR is built into speedometer assembly. The sensor functions is an auxiliary device to the revolution sensor when it is malfunctioning. TCM will then use a signal sent from vehicle speed sensor MTR.

CONSULT-II Reference Value

ACS007ZD

Item name	Condition	Display value	
VHCL/S SE·MTR	During driving	Approximately matches the speedometer reading.	

On Board Diagnosis Logic

ACS007TI

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "VHCL SPEED SEN·MTR" with CONSULT-II or 2nd judgement flicker without CONSULT-II is detected when TCM does not receive the proper voltage signal from the sensor.

Possible Cause

Check the following.

- Harness or connector (The sensor circuit is open or shorted.)
- Vehicle speed sensor

DTC Confirmation Procedure

ACS007TK

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.


After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(A) WITH CONSULT-II

 Turn ignition switch ON and select "DATA MONITOR" mode for "A/T" with CONSULT-II.

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

- 2. Start engine and accelerate vehicle from 0 to 25 km/h (0 to 16 MPH).
- 3. If the check result is NG, go to AT-185, "Diagnostic Procedure" .

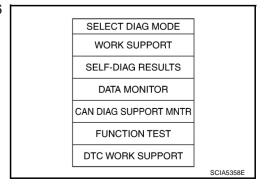

WITH GST

Follow the procedure "WITH CONSULT-II"

WITHOUT CONSULT-II

- 1. Start engine.
- Drive vehicle under the following conditions:
 Selector lever in "D" and vehicle speed higher than 25 km/h (16 MPH).
- 3. Perform self-diagnosis. Refer to <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.
- 4. If the check result is NG, go to AT-185, "Diagnostic Procedure" .

Α

ΑТ

В

D

Е

F

G

Н

K

L

Wiring Diagram — AT — VSSMTR ACS007TL AT-VSSMTR-01 ■: DETECTABLE LINE FOR DTC IGNITION SWITCH ON OR START -: NON-DETECTABLE LINE FOR DTC : DATA LINE (2W): 2WD MODELS FUSE BLOCK (J/B) REFER TO PG-POWER. 10A (AW): AWD MODELS 11 $\overline{M1}$ **⟨VD⟩**: WITH VDC 11A **⟨OV⟩**: WITHOUT VDC *1 2: 2W *2 1: 2W 14 : (AW) 5 : **(AW)** COMBINATION METER (M44) UNIFIED METER CONTROL UNIT 21 23 33 22 L/W M94): (2W) M62 (M75) AW 2W (F42) (E116): (AW) TO LAN-CAN VD R L/W 40 61 23 63 20 B/R B/R TCM (TRANSMISSION CONTROL VSP-2 CAN-H CAN-L VDC/TCS/ABS CONTROL CAN-H CAN-L ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) UNIT MODULE) (E122): (VD) (E69): (OV) (F47) (M70)(M27) REFER TO THE FOLLOWING. M1 -FUSE BLOCK-JUNCTION 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 M44 W BOX (J/B) 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 8 9 10 11 12 13 14 15 16 (E69), (E122) -ELECTRICAL UNITS (M75)

TCWB0012E

Data are reference value and are measured between each terminal and ground.

Terminal	Wire color	ltem	Condition		Judgement stan- dard (Approx.)
40	L/W	Vehicle speed sensor		When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Voltage varies between less than 0V and more than 4.5V

ACS007TM

В

ΑT

D

F

Н

M

Diagnostic Procedure

1. CHECK INPUT SIGNAL

(II) With CONSULT-II

- 1. Start engine.
- Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out the value of "VHCL/S SE-MTR" while driving. Check the value changes according to driving speed.

Item name	Condition	Display value
VHCL/S SE·MTR	During driving	Approximately matches the speedometer reading.

DATA MONITOR					
	MONITOR NO DTC			O DTC	
	VHCL/S SE-AT 0 km/h VHCL/S SE-MTR 5 km/h THRTL POS SEN 0.8 V FLUID TEMP SE 1.4 V BATTERY VOLT 11.6 V ENGINE SPEED 384 rpm TURBINE REV 0 rpm OVERDRIVE SW OFF PN POSI SW ON				
	Page Down				
			REC	ORD	
	MODE	BACK	LIGHT	COPY	SCIA4730E

Without CONSULT-II

- 1. Start engine.
- 2. Check voltage between TCM connector terminal and ground.

Item	Connector	Terminal (Wire color)	Condition	Judgement standard (Approx.)
TCM con- nector	F47	40(L/W) - Ground	When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Voltage varies between less than 0V and more than 4.5V

TCM connector (Vehicle side) 40 SCIA4940E

OK or NG

OK >> GO TO 3. NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following.

- Combination meter. Refer to <u>DI-4, "COMBINATION METERS"</u>.
- Harness for short or open between TCM and combination meter.

OK or NG

OK >> GO TO 3.

3. CHECK DTC

Perform AT-182, "DTC Confirmation Procedure" .

OK or NG

OK >> INSPECTION END

NG >> GO TO 4.

4. CHECK TCM

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

DTC BATT/FLUID TEMP SEN (A/T FLUID TEMP SENSOR CIRCUIT AND TCM POWER SOURCE) PFP:31940

ACS007TN

A/T fluid temperature sensor detects the A/T fluid temperature and sends a signal to TCM.

CONSULT-II Reference Value

Description

ACS007ZE

В

ΑT

D

Item name	Condition	Display value (Approx.)
FLUID TEMP SE	When ATF temperature is 20°C (68°F).	1.5V
TEOID TEIVIF SE	When ATF temperature is 80°C (176°F).	0.5V

On Board Diagnosis Logic

ACS007TO

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "BATT/FLUID TEMP SEN" with CONSULT-II or 8th judgement flicker without CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

Possible Cause

Check the following items.

- Harness or connector (Sensor circuit is open or shorted.)
- A/T fluid temperature sensor

DTC Confirmation Procedure

ACS007TP

Н

M

CAUTION:

- Always drive vehicle at a safe speed.
- If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

After the repair, perform the following procedure to confirm that the malfunction is eliminated.

(P) WITH CONSULT-II

- Start engine.
- Select "DATA MONITOR" mode for "A/T" with CONSULT-II.

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

Drive vehicle under the following conditions.
 SLCT LVR POSI: "D" position (OD ON)

VEHICLE SPEED: higher than 20 km/h (12 MPH)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
CAN DIAG SUPPORT MNTR	
FUNCTION TEST	
DTC WORK SUPPORT	
	SCIA5358E

WITH GST

Follow the procedure "WITH CONSULT-II".

Revision: 2005 March AT-187 2005 X-Trail

⊗ WITHOUT CONSULT-II


1. Start engine.

Drive vehicle under the following conditions.
 Selector lever: "D" position (OD ON)
 Vehicle speed: higher than 20 km/h (12 MPH)

3. Perform self-diagnosis.

Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

4. If the check result is NG, go to AT-190, "Diagnostic Procedure" .

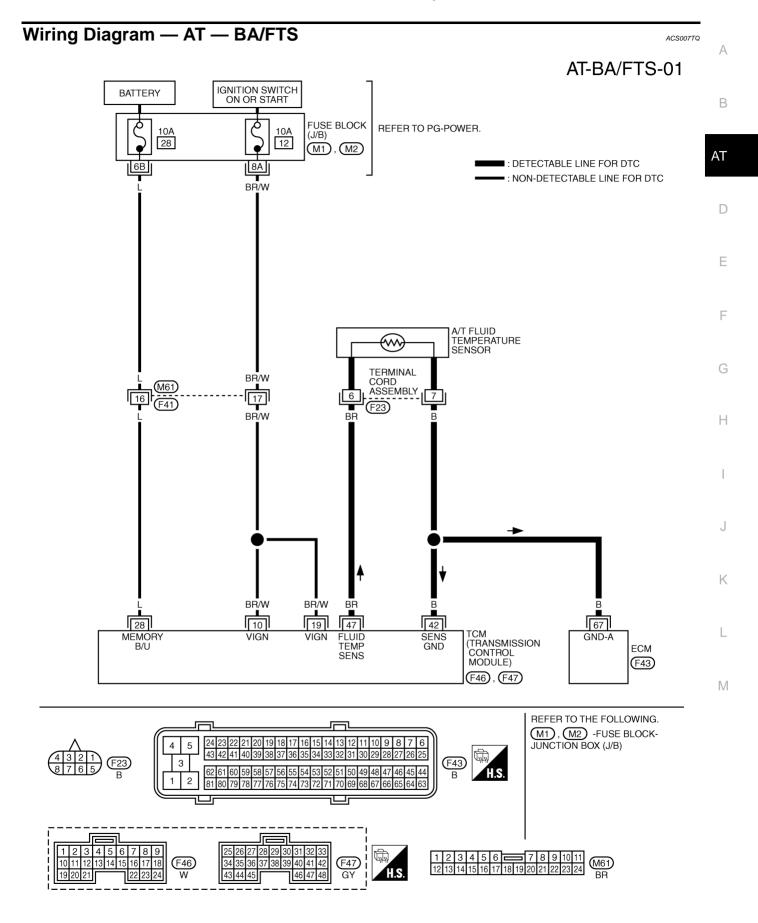

TCWB0011E

Data are reference value and are measured between each terminal and ground.


Terminal	Wire color	Item	Condition Judgeme da (App		
10	BR/W	Power source		When turning ignition switch ON.	Battery voltage
10	DR/VV	Power source	(CON) (COFF)	When turning ignition switch OFF.	0V
19	BR/W	Power source	or O	Same as No. 10	
28	L	Power source (Memory back-up)	Always		Battery voltage
42	В	Sensor ground	Always		0V
		A/T fluid tompore	(A)	When ATF temperature is 20°C (68°F).	1.5V
47	47 BR A/T fluid temperature sensor	(Con)	When ATF temperature is 80°C (176°F).	0.5V	

Diagnostic Procedure

1. CHECK TCM POWER SOURCE

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground.


Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)	
TCM connector	F46	10 (BR/W)		
	140	19 (BR/W)	Battery voltage	
	F47	28 (L)		

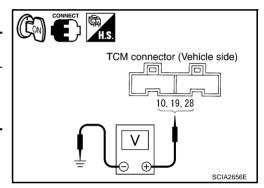

ACS007TR

- Turn ignition switch OFF.
- 4. Check voltage between TCM connector terminals and ground.

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)
TCM connector	F46	10 (BR/W)	0V
		19 (BR/W)	0V
	F47	28 (L)	Battery voltage

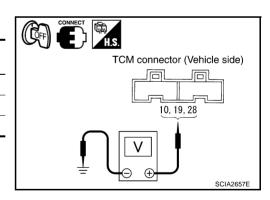

OK or NG

OK >> GO TO 3. NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and TCM connector terminals 10, 19.
- Harness for short or open between battery and TCM connector terminal 28.
- 10A fuse (No.12, No.28, located in the fuse block)
- Ignition switch. Refer to <u>PG-2</u>, "<u>POWER SUPPLY ROUTING</u>".

OK or NG

OK >> GO TO 9.

3. CHECK INPUT SIGNAL OF A/T FLUID TEMPERATURE SENSOR

(I) With CONSULT-II

- 1. Start engine.
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out the value of "FLUID TEMP SE".


Item name	Condition	Display value (Approx.)
FLUID TEMP SE	When ATF temperature is 20°C (68°F).	1.5V
I LOID I LIVIF 3L	When ATF temperature is 80°C (176°F).	0.5V

DATA MONITOR	
MONITOR NO DTC	
VHCL/S SE-AT 0 km/h VHCL/S SE-MTR 5 km/h THRTL POS SEN 0.8 V FLUID TEMP SE 1.4 V BATTERY VOLT 11.6 V ENGINE SPEED 384 rpm TURBINE REV 0 rpm OVERDRIVE SW OFF PN POSI SW ON	
Page Down	
RECORD	
MODE BACK LIGHT COPY	SCIA4730E

8 Without CONSULT-II

- 1. Start engine.
- 2. Check voltage TCM connector terminals while warming up A/T.

Item	Connector	Terminal (Wire color)	Condition	Judge- ment stan- dard (Approx.)
TCM con-	47 (BR) -	47 (BR) -	When ATF temperature is 20°C (68°F).	1.5V
nector	147	42 (B)	When ATF temperature is 80°C (176°F).	0.5V

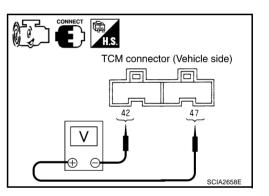

OK or NG

OK >> GO TO 9. NG >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between TCM, ECM and terminal cord assembly harness connector
- Ground circuit for ECM
 Refer to <u>PG-2</u>, "<u>POWER SUPPLY ROUTING</u>".

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

Revision: 2005 March AT-191 2005 X-Trail

AT

В

D

Е

G

F

Н

Κ

5. CHECK FLUID TEMPERATURE SENSOR CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector.
- 3. Check resistance between TCM connector terminals.

Item	Connector	Terminal (Wire color)	Tempera- ture °C (°F)	Resistance (Approx.)
TCM connector	F47	47 (BR) - 42 (B)	20 (68)	2.5 ΚΩ
1 OW COMPECTOR	1 47	77 (DIX) - 42 (D)	80 (176)	0.3 ΚΩ

TCM connector (Vehicle side) 47


OK or NG

OK >> GO TO 9. NG >> GO TO 6.

6. CHECK HARNESS BETWEEN TCM AND TERMINAL CORD ASSEMBLY HARNESS CONNECTOR

- 1. Turn ignition switch OFF.
- Disconnect terminal cord assembly harness connector and TCM connector.
- Check continuity between terminal cord assembly harness connector terminals and TCM connector terminals.

Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F47	42 (B)	
Terminal cord assembly harness connector	F23	7 (B)	Yes
TCM connector	F47	47 (BR)	
Terminal cord assembly harness connector	F23	6 (BR)	Yes

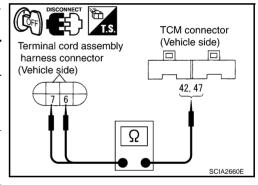

- If OK, check harness for short to ground and short to power.
- 5. Reinstall any part removed.

OK or NG

OK >> GO TO 7.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK A/T FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY


- 1. Turn ignition switch OFF.
- Disconnect terminal cord assembly harness connector in engine room.
- 3. Check resistance between terminal cord assembly harness terminals.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

4. Reinstall any part removed.

OK or NG

OK >> GO TO 8.

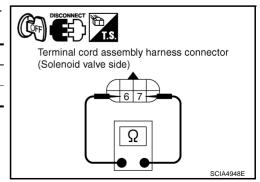

8. DETECT MALFUNCTIONING ITEM

- 1. Remove oil pan. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- A/T fluid temperature sensor
- Check resistance between terminal cord assembly harness terminals while changing temperature as shown.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

Harness of terminal cord assembly for short or open

OK or NG

OK >> GO TO 9.

NG >> Repair or replace damaged parts.

9. CHECK DTC

Perform AT-187, "DTC Confirmation Procedure".

OK or NG

OK >> INSPECTION END

NG >> GO TO 10.

10. снеск тсм

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG


OK >> INSPECTION END

NG >> Repair or replace damaged parts.

Component Inspection A/T FLUID TEMPERATURE SENSOR

- For removal, refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u>.
- Check resistance between two terminals while changing temperature as shown at left.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

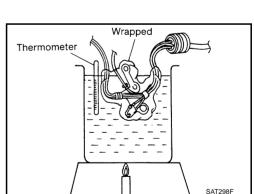

Thermometer

SAT298F

ΑТ

В

D

Е

Н

ACS007TS

L

IVI

MAIN POWER SUPPLY AND GROUND CIRCUIT

MAIN POWER SUPPLY AND GROUND CIRCUIT

PFP:00100

Description

ACS007TT

When the power supply to TCM is cut off, for example because battery is removed, and the self-diagnostics memory function stops, malfunction is detected.

On Board Diagnosis Logic

ACS007TU

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "INITIAL START" with CONSULT-II is detected when TCM dose not receive the voltage signal from the battery power supply.
- This is not a malfunction message. (Whenever shutting off a power supply to TCM, this message appears on the screen.)

Possible Cause

Harness or connector

(Battery or ignition switch and TCM circuit is open or shorted.)

DTC Confirmation Procedure

ACS007TW

CAUTION:


If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

(P) WITH CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Wait for at least 2 consecutive seconds.
- If DTC is detected, go to <u>AT-196, "Diagnostic Procedure"</u>.

SELECT SYSTEM	
A/T	
ENGINE	
	SAT014K

MAIN POWER SUPPLY AND GROUND CIRCUIT Wiring Diagram — AT — MAIN ACS007TX Α AT-MAIN-01 IGNITION SWITCH ON OR START В BATTERY FUSE BLOCK REFER TO PG-POWER. 10A 28 10A (J/B) 12 ΑT (M1), (M2)BR/W D ■: DETECTABLE LINE FOR DTC : NON-DETECTABLE LINE FOR DTC Е F BR/W 17 G BR/W Н BR/W BR/W 19 10 28 TCM (TRANSMISSION CONTROL MODULE) MEMORY B/U VIGN VIGN (F46), (F47) **GND** 25 48 В K

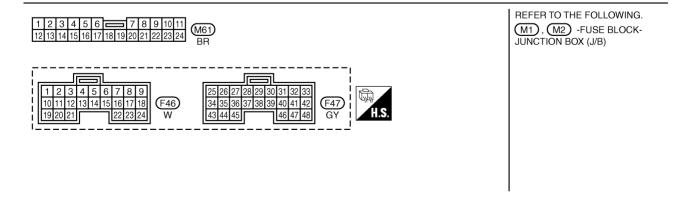

TCWA0240E

MAIN POWER SUPPLY AND GROUND CIRCUIT

Data are reference value and are measured between each terminal and ground.


Terminal	Wire color	Item	Condition		Judgement stan- dard (Approx.)
10	BR/W	Power source		When turning ignition switch ON.	Battery voltage
10	DR/W	Fower source	((CON) ((COFF))	When turning ignition switch OFF.	0V
19	BR/W	Power source	or or	Same as No. 10	
25	В	Ground	Always		0V
28	L	Power source (Memory back-up)	Always		Battery voltage
48	В	Ground	Always		0V

Diagnostic Procedure

1. CHECK TCM POWER SOURCE

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground.


Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)
TCM connector	F46	10 (BR/W)	Battery voltage
		19 (BR/W)	
	F47	28 (L)	

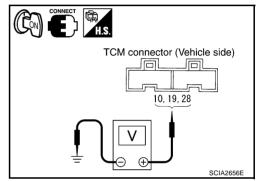

ACS007TY

- 3. Turn ignition switch OFF.
- 4. Check voltage between TCM connector terminals and ground.

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)	
TCM connector	F46	10 (BR/W)	0V	
		19 (BR/W)	0V	
	F47	28 (L)	Battery voltage	

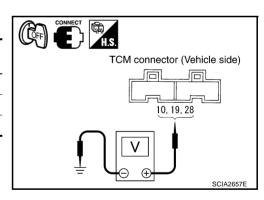

OK or NG

OK >> GO TO 3. NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and TCM connector terminals 10, 19
- Harness for short or open between battery and TCM connector terminal 28
- 10A fuse (No.12, No.28, located in the fuse block)
- Ignition switch. Refer to <u>PG-2</u>, "<u>POWER SUPPLY ROUTING</u>".

OK or NG

OK >> GO TO 3.

MAIN POWER SUPPLY AND GROUND CIRCUIT

$\overline{3}$. CHECK TCM GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector.
- Check continuity between TCM connector terminals and ground.


Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F47	25 (B), 48 (B) -Ground	Yes

OK or NG

OK >> GO TO 4.

NG

>> Repair open circuit or short to ground or short to power in harness or connectors.

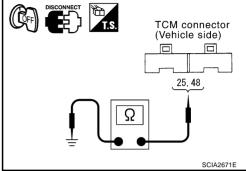

4. CHECK DTC

Perform AT-194, "DTC Confirmation Procedure" .

OK or NG

>> INSPECTION END OK

NG >> GO TO 5.

5. CHECK TCM

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

ΑT

В

D

G

Н

Е

DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)


DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)

PFP:31036

Description

ACS007TZ

TCM consists of a microcomputer and connectors for signal input and output and for power supply. The unit controls A/T.

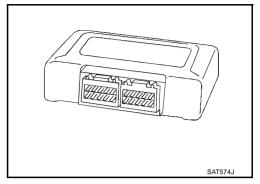

On Board Diagnosis Logic

ACS007U0

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "CONTROL UNIT (RAM)", "CONTROL UNIT (ROM)" with CONSULT-II is detected when TCM memory (RAM) or (ROM).

Possible Cause

TCM.

DTC Confirmation Procedure


ACS007U2

CALITION


If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

WITH CONSULT-II

- Turn ignition switch ON and select "DATA MONITOR" mode for A/T with CONSULT-II.
- Start engine.

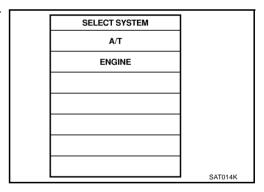

- 3. Run engine for at least 2 seconds at idle speed.
- 4. If the check result is NG, go to AT-199, "Diagnostic Procedure".

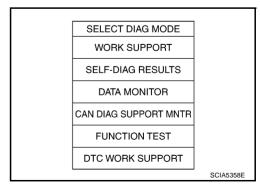

DTC CONTROL UNIT (RAM), CONTROL UNIT (ROM)

Α

В

D

F

F

G

Н

Κ

M

Diagnostic Procedure ACS007U3 1. CHECK DTC (I) With CONSULT-II 1. Turn ignition switch ON and select "SELF-DIAG RESULTS" mode for A/T with CONSULT-II. 2. Touch "ERASE". 3. Perform AT-198, "DTC Confirmation Procedure". ΑT Is the "CONTROL UNIT (RAM)" or "CONTROL UNIT (ROM)" displayed again? YES >> Replace TCM. NO >> INSPECTION END


DTC CONTROL UNIT(EEPROM)

DTC CONTROL UNIT(EEPROM)

PFP:31036

DescriptionACS007U4

TCM consists of a microcomputer and connectors for signal input and output and for power supply. The unit controls A/T.

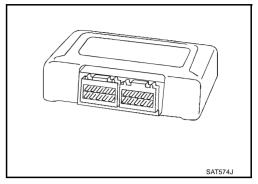

On Board Diagnosis Logic

ACS007U5

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "CONT UNIT (EEP ROM)" with CONSULT-II is detected when TCM memory (EEP ROM) is malfunctioning.

Possible Cause

TCM.

DTC Confirmation Procedure


ACS007U7

CAUTION


If performing this "DTC Confirmation Procedure" again, always turn ignition switch OFF and wait at least 10 seconds before continuing.

WITH CONSULT-II

- Turn ignition switch ON and select "DATA MONITOR" mode for A/T with CONSULT-II.
- 2. Start engine.

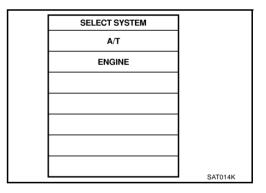

- 3. Run engine for at least 2 seconds at idle speed.
- 4. If the check result is NG, go to AT-201, "Diagnostic Procedure".

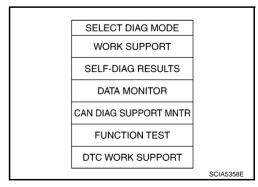

DTC CONTROL UNIT(EEPROM)

Α

В

D

F

F

G


Н

M


Diagnostic Procedure ACS007U8 1. CHECK DTC (I) With CONSULT-II Turn ignition switch ON and select "SELF-DIAG RESULTS" mode for A/T with CONSULT-II. Move selector lever to "R" position. Depress accelerator pedal (Full throttle position). ΑT 4. Touch "ERASE". Turn ignition switch OFF for 10 seconds. Perform AT-200, "DTC Confirmation Procedure". See previous page. Is the "CONT UNIT (EEP ROM)" displayed again? YES >> Replace TCM. NO >> INSPECTION END

AT-201 Revision: 2005 March 2005 X-Trail

TROUBLE DIAGNOSES FOR SYMPTOMS TROUBLE DIAGNOSES FOR SYMPTOMS PFP:00100 Wiring Diagram — AT — NONDTC ACS007U9 AT-NONDTC-01 IGNITION SWITCH ON OR START FUSE BLOCK (J/B) ■: DETECTABLE LINE FOR DTC REFER TO PG-POWER. 10A ■: NON-DETECTABLE LINE FOR DTC M1, E103 11 12 : DATA LINE Y = 9 - Y (E60) (F36) TO LAN-CAN TO SC-START ← G/OR **T** PARK/NEUTRAL POSITION G/OR COMBINATION METER **SWITCH** M44), M45) (F24) O/D OFF UNIFIED METER CONTROL UNIT GY/R Y/G P/R w/G BR/Y 44 21 43 56 42 L/OR P/B GY/R TO SC-START ◀ F42 7 13 14 (F41) A/T DEVICE (OVERDRIVE CONTROL SWITCH) P/B GY/R OFF (M58) ON Y/G w/G TCM (TRANSMISSION CONTROL MODULE) 34 26 36 35 27 B/R B/R N-SW R-SW D-SW 2-SW 1-SW (M70) (M27) REFER TO THE FOLLOWING. M1), E103) -FUSE BLOCK-JUNCTION BOX (J/B) 3 4 5 6 7 8 9 10 11 12 13 14 15

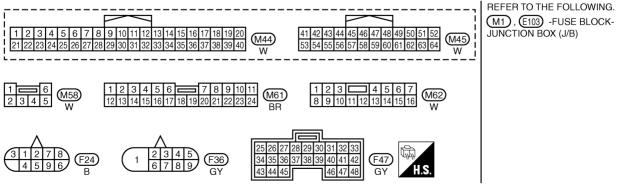

TCWB0013E

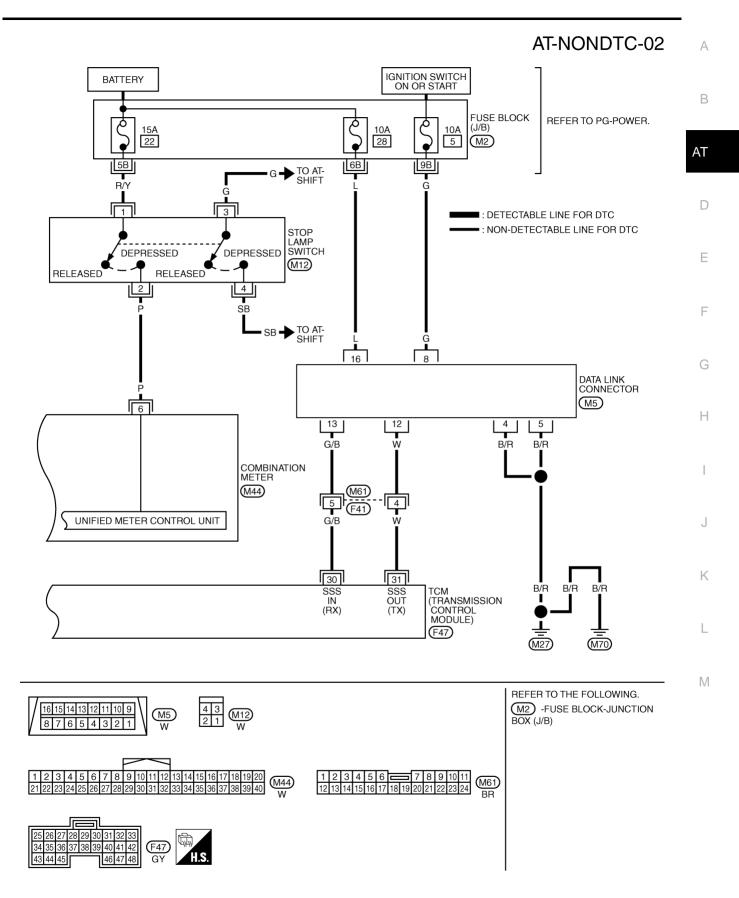

TCWB0014E

Terminal	Wire color	Item		Condition	Judgement stan dard (Approx.)
26 BR/Y	PNP switch "1" position		When setting selector lever to "1" position.	Battery voltage	
			When setting selector lever to other positions.	0V	
27	27 L PNP switch tion	PNP switch "2" posi-	and and	When setting selector lever to "2" position.	Battery voltage
21		tion		When setting selector lever to other positions.	0V
30	G/B	CONSULT- II (RX)		_	_
31	W	CONSULT- II (TX)			_
34 W/G PNF tion	PNP switch "D" position		When setting selector lever to "D" position.	Battery voltage	
			When setting selector lever to other positions.	0V	
35 Y/G	PNP switch "R" position		When setting selector lever to "R" position.	Battery voltage	
		and A	When setting selector lever to other positions.	0V	
36 G	G PNP switch "N" or "P" position		When setting selector lever to "N" or "P" position.	Battery voltage	
			When setting selector lever to other positions.	0V	

O/D OFF Indicator Lamp Does Not Come On

CSOOTUA

SYMPTOM:

O/D OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to ON.

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE".

Is a malfunction in CAN communication indicated in the results?

YES >> Check CAN communication line. Refer to AT-95, "DTC U1000 CAN COMMUNICATION LINE".


NO >> GO TO 2.

2. CHECK TCM POWER SOURCE

1. Turn ignition switch ON. (Do not start engine.)


 Check voltage between TCM connector terminals and ground. Refer to AT-195, "Wiring Diagram — AT — MAIN".

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)	
TCM connector	F46	10 (BR/W)		
		19 (BR/W)	Battery voltage	
	F47	28 (L)		

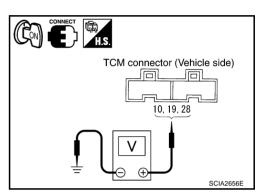

- Turn ignition switch OFF.
- 4. Check voltage between TCM connector terminals and ground.

Item	Connector	Terminal (Wire color)	Judgement standard (Approx.)	
TCM connector	F46	10 (BR/W)	0V	
		19 (BR/W)	0V	
	F47	28 (L)	Battery voltage	

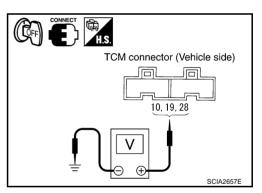

OK or NG

OK >> GO TO 4. NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and TCM connector terminals 10, 19
- Harness for short or open between battery and TCM connector terminal 28
- 10A fuse (No.12, No. 28, located in the fuse block)
- Ignition switch. Refer to PG-2, "POWER SUPPLY ROUTING".

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

ΑT

Α

В

D

Е

0

Н

|

K

4. CHECK TCM GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect TCM connector.
- Check continuity between TCM connector terminals and ground. Refer to <u>AT-195, "Wiring Diagram — AT — MAIN"</u>.


Item	Connector	Terminal (Wire color)	Continuity
TCM connector	F47	25 (B), 48 (B) -Ground	Yes

OK or NG

OK >> GO TO 5.

NG >

>> Repair open circuit or short to ground or short to power in harness or connectors.

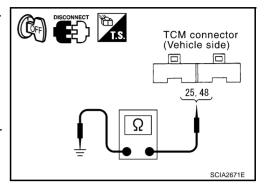

5. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and combination meter
- Combination meter. Refer to DI-4, "COMBINATION METERS".

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again. Refer to AT-57, "Check before Engine Is Started".

OK or NG

OK >> INSPECTION END

NG >> GO TO 7.

7. CHECK TCM

- 1. Check TCM input/output. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

Engine Cannot Be Started in "P" and "N" Position

ACS007ZF

SYMPTOM:

- Engine cannot be started with selector lever in "P" or "N" position.
- Engine can be started with selector lever in "D", "2", "1" or "R" position.

1. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE".

Do the self-diagnosis results indicate PNP switch circuit?


YES >> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH"</u>.

NO >> GO TO 2.

2. CHECK PARK/NEUTRAL POSITION (PNP) SWITCH

Check continuity between park/neutral position (PNP) switch harness connector terminals. Refer to <u>AT-202, "Wiring Diagram — AT — NONDTC"</u>.

Lever position	Connector	terminal	Continuity
"P", "N"	F24	1 - 2	Yes
Other positions	1 24		No

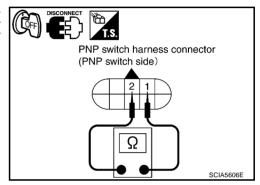

OK or NG

OK >> GO TO 4. NG >> GO TO 3.

3. CHECK CONTROL CABLE ADJUSTMENT

Check PNP switch again with control cable disconnected from manual shaft of A/T assembly. Refer to test group 2.

OK or NG

OK >> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.

NG

- >> 1. Check PNP switch (Refer to test group 2.) again after adjusting PNP switch (AT-264).
 - If OK. INSPECTION END
 - If NG, repair or replace PNP switch. Refer to <u>AT-263</u>, "REMOVAL AND INSTALLATION".

Control cable Control cable Manual shaft SCIA3156E

4. CHECK STARTING SYSTEM

Check starting system. Refer to SC-9, "STARTING SYSTEM".

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

ΑT

Α

В

F

D

Н

J

K

In "P" Position, Vehicle Moves Forward or Backward When Pushed SYMPTOM:

ACS007Z


Vehicle moves when it is pushed forward or backward with selector lever in "P" position.

1. CHECK CONTROL CABLE

Check control cable. Refer to $\underline{\text{AT-253, "Checking of A/T Position"}}$. OK or NG

OK >> GO TO 2.

NG >> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/</u> T Position".

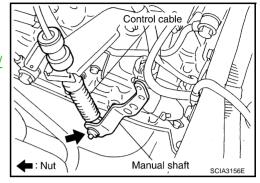


2. CHECK PARKING COMPONENTS

Check parking components. Refer to $\underline{\text{AT-272, "Components"}}$ and $\underline{\text{AT-280, "DISASSEMBLY"}}$.

OK or NG

OK >> INSPECTION END

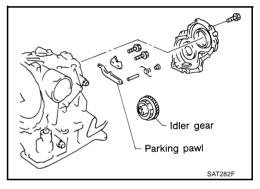

In "N" Position, Vehicle Moves

CSOOZZH

SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.


1. CHECK CONTROL CABLE

Check control cable. Refer to AT-253, "Checking of A/T Position".

OK or NG

OK >> GO TO 2.

NG >> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/</u> T Position".

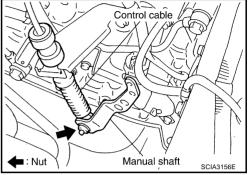

2. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to $\underline{\text{AT-17}}$, "Checking A/T Fluid" .

OK or NG

OK >> GO TO 3. NG >> Refill ATF.




3. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to $\underline{\text{AT-52, "Fluid Condition Check"}}$.

OK or NG

OK >> GO TO 5. NG >> GO TO 4.

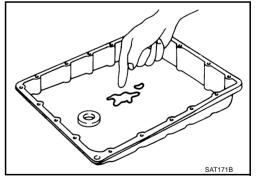

4. DETECT MALFUNCTIONING ITEM

- 1. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 2. Check the following.
- Forward clutch assembly. Refer to <u>AT-331, "Forward and Overrun Clutches"</u>.
- Overrun clutch assembly. Refer to <u>AT-331, "Forward and Overrun Clutches"</u>.
- Reverse clutch assembly. Refer to AT-320, "Reverse Clutch".

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

ΑT

Α

D

Е

G

Н

K

L

IV

5. CHECK SYMPTOM

Check again. Refer to AT-58, "Check at Idle".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.

6. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

Large Shock. "N" → "R" Position

ACS007Z

SYMPTOM:

Large shock when shifting from "N" to "R" position.

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE" or AT-91, "Diagnostic Procedure Without CONSULT-II".

Do the self-diagnosis results indicate A/T fluid temperature sensor, line pressure solenoid valve, accelerator pedal position (APP) sensor circuit?

>> Check damaged circuit. Refer to AT-104, "DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT", AT-155, "DTC P0745 LINE PRESSURE SOLENOID VALVE" or AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR".

NO >> GO TO 2.

2. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in "D" position. Refer to AT-55, "LINE PRESSURE TEST".

OK or NG

OK >> GO TO 4. NG >> GO TO 3.



3. DETECT MALFUNCTIONING ITEM

- Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators". 1.
- 2. Check the following.
- Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter)
- Line pressure solenoid valve
- Oil pump assembly. Refer to AT-299, "Oil Pump".

OK or NG

OK >> GO TO 4.

>> Repair or replace damaged parts. NG

4. CHECK SYMPTOM

Check again. Refer to AT-58, "Check at Idle".

OK or NG

OK >> INSPECTION END

NG >> GO TO 5.

5. CHECK TCM

- Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

AT-211

OK or NG

OK >> INSPECTION END

>> Repair or replace damaged parts.

ΑT

D

Α

В

F

Н

M

2005 X-Trail

Revision: 2005 March

Vehicle Does Not Creep Backward in "R" Position

ACS007ZJ

SYMPTOM:

Vehicle does not creep backward when selecting "R" position.

1. CHECK A/T FLUID LEVEL

Check A/T fluid level. Refer to AT-17, "Checking A/T Fluid".

OK or NG

OK >> GO TO 2. NG >> Refill ATF.



2. CHECK LINE PRESSURE

Check line pressure at idle with selector lever in "R" position. Refer to <u>AT-55</u>, "LINE PRESSURE TEST".

OK or NG

OK >> GO TO 4. NG >> GO TO 3.



3. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter)
- Line pressure solenoid valve
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 4. Check the following item:
- Oil pump assembly. Refer to <u>AT-299, "Oil Pump"</u>.

OK or NG

OK >> GO TO 4.

4. CHECK STALL REVOLUTION


Check stall revolution with selector lever in "1" and "R" positions. Refer to AT-52, "STALL TEST".

OK or NG

OK >> GO TO 6.

OK in "1" position, NG in "R" position>> GO TO 5.

NG in both "1" and "R" positions>> GO TO 7.

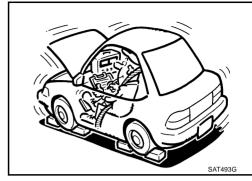

5. DETECT MALFUNCTIONING ITEM

- Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 2. Check the following.
- Low & reverse brake assembly. Refer to AT-338, "Low & Reverse Brake" .
- Reverse clutch assembly. Refer to AT-320, "Reverse Clutch".

OK or NG

OK >> GO TO 6.


NG >> Repair or replace damaged parts.

6. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52. "Fluid Condition Check".

OK or NG

OK >> GO TO 8. NG >> GO TO 7.

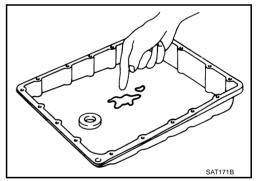

7. DETECT MALFUNCTIONING ITEM

- Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 2. Check the following.
- Reverse clutch assembly. Refer to AT-320, "Reverse Clutch".
- High clutch assembly. Refer to AT-325, "High Clutch".
- Low & reverse brake assembly. Refer to AT-338, "Low & Reverse Brake".
- Forward clutch assembly. Refer to AT-331, "Forward and Overrun Clutches".
- Overrun clutch assembly. Refer to AT-331, "Forward and Overrun Clutches".

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts. ΑT

В

D

F

Н

8. CHECK SYMPTOM

Check again. Refer to AT-58, "Check at Idle".

OK or NG

OK >> INSPECTION END

NG >> GO TO 9.

9. снеск тсм

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

Vehicle Does Not Creep Forward in "D", "2" or "1" Position

ACS007ZK

SYMPTOM:

Vehicle does not creep forward when selecting "D", "2" or "1" position.

1. CHECK A/T FLUID LEVEL

В

Check A/T fluid level. Refer to AT-17, "Checking A/T Fluid".

OK or NG

OK >> GO TO 2. NG >> Refill ATF.



ΑT

Α

D

Е

2. CHECK LINE PRESSURE

F

Check line pressure at idle with selector lever in "D" position. Refer to $\underline{\text{AT-55}}$, "LINE PRESSURE TEST" .

OK or NG

OK >> GO TO 4. NG >> GO TO 3.



3. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- Valves to control line pressure (Pressure regulator valve, pressure modifier valve, pilot valve and pilot filter)
- Line pressure solenoid valve
- Disassemble A/T. Refer to <u>AT-280, "DISASSEMBLY"</u>.
- 4. Check the following item:
- Oil pump assembly. Refer to <u>AT-299, "Oil Pump"</u>.

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

Н

K


L

4. CHECK STALL REVOLUTION

Check stall revolution with selector lever in "D" position. Refer to AT-52, "STALL TEST" .

OK or NG

OK >> GO TO 6. NG >> GO TO 5.

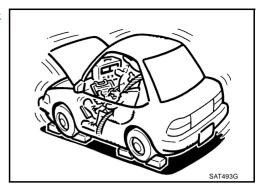

5. DETECT MALFUNCTIONING ITEM

- 1. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 2. Check the following.
- Oil pump assembly. Refer to AT-299, "Oil Pump" .
- Forward clutch assembly. Refer to <u>AT-331, "Forward and Overrun Clutches"</u>.
- Forward one-way clutch. Refer to <u>AT-342</u>, "Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub".
- Low one-way clutch. Refer to <u>AT-280, "DISASSEMBLY"</u>.
- Torque converter. Refer to <u>AT-280, "DISASSEMBLY"</u>.

OK or NG

OK >> GO TO 7.


NG >> Repair or replace damaged parts.

6. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 7. NG >> GO TO 5.

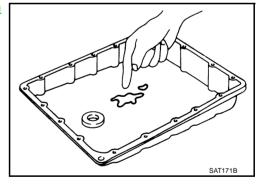

7. CHECK SYMPTOM

Check again. Refer to AT-58, "Check at Idle".

OK or NG

OK >> INSPECTION END

NG >> GO TO 8.

8. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

Revision: 2005 March AT-216 2005 X-Trail

Vehicle Cannot Be Started From D₁

ACS007ZL

SYMPTOM:

Vehicle cannot be started from D1 on "Cruise Test — Part 1" and "Cruise Test — Part 2"

CONFIRM THE SYMPTOM

Check if vehicle creep in "R" position.

OK or NG

OK >> GO TO 2.

NG >> GO TO AT-212, "Vehicle Does Not Creep Backward in "R" Position".

2. CHECK SELF-DIAGNOSTIC RESULTS

 \Box

Perform self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE" or AT-91, "Diagnostic Procedure Without CONSULT-II".

Do the self-diagnosis results indicate vehicle speed sensor A/T (revolution sensor), overrun clutch solenoid valve, torque converter clutch solenoid valve, shift solenoid valve A, B or vehicle speed sensor MTR circuit?

YES >> Check damaged circuit. Refer to AT-109, "DTC P0720 VEHICLE SPEED SENSOR-A/T (REVO-LUTION SENSOR)", AT-177, "DTC P1760 OVERRUN CLUTCH SOLENOID VALVE", AT-142, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE", AT-162, "DTC P0750 SHIFT SOLENOID VALVE A", AT-167, "DTC P0755 SHIFT SOLENOID VALVE B" or AT-182, "DTC VEHICLE SPEED SENSOR MTR".

NO >> GO TO 3.

3. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to AT-172, "DTC P1705 ACCELERATOR PEDAL POSI-TION (APP) SENSOR"

OK or NG

OK >> GO TO 4.

NG >> Repair or replace accelerator pedal position (APP) sensor.

4. CHECK LINE PRESSURE

Check line pressure at stall point with selector lever in "D" position. Refer to AT-55, "LINE PRESSURE TEST"

OK or NG

OK >> GO TO 6.

NG >> GO TO 5.



ΑT

Α

В

F

Н

5. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- Shift valve A
- Shift valve B
- Shift solenoid valve A
- Shift solenoid valve B
- Pilot valve
- Pilot filter
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 4. Check the following.
- Forward clutch assembly. Refer to <u>AT-331, "Forward and Overrun Clutches"</u>.
- Low one-way clutch. Refer to <u>AT-280, "DISASSEMBLY"</u>.
- Forward one-way clutch. Refer to <u>AT-342, "Rear Internal Gear, Forward Clutch Hub and Overrun Clutch</u> Hub".
- High clutch assembly. Refer to AT-325, "High Clutch".
- Torque converter. Refer to AT-280, "DISASSEMBLY".
- Oil pump assembly. Refer to <u>AT-299, "Oil Pump"</u>.

OK or NG

OK >> GO TO 8.


NG >> Repair or replace damaged parts.

6. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 7. NG >> GO TO 5.

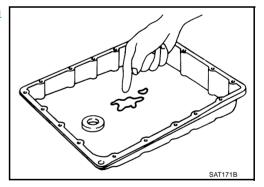

7. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following
- Shift valve A
- Shift valve B
- Shift solenoid valve A
- Shift solenoid valve B
- Pilot valve
- Pilot filter

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damage parts.

8. CHECK SYMPTOM	A
Check again. Refer to AT-60, "Cruise Test — Part 1" and AT-63, "Cruise Test — Part 2".	
OK or NG OK >> INSPECTION END	В
NG >> GO TO 9.	
9. CHECK TCM	AT
1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".	
 If NG, recheck TCM pin terminals for damage or loose connection with harness connector. OK or NG 	D
OK >> INSPECTION END NG >> Repair or replace damaged parts.	
NG >> Repair or replace damaged parts.	Е
	_
	F
	G
	0
	Н
	I
	J
	K
	L

A/T Does Not Shift: D1 \rightarrow D2 or Does Not Kickdown: D4 \rightarrow D2

ACS007ZM

SYMPTOM:

A/T does not shift from D1 to D2 at the specified speed on "Cruise Test — Part 1".

A/T does not shift from D₄ to D₂ when depressing accelerator pedal fully at the specified speed on "Cruise Test — Part 2".

1. CONFIRM THE SYMPTOM

Check if vehicle creep forward in "D" position and vehicle can be started from D1.

OK or NG

OK >> GO TO 2.

NG >> GO TO AT-215, "Vehicle Does Not Creep Forward in "D", "2" or "1" Position" and AT-217, "Vehicle Cannot Be Started From D1".


2. CHECK CONTROL CABLE

Check control cable. Refer to $\underline{\text{AT-253}}$, "Checking of $\underline{\text{A/T Position}}$ " . OK or NG

OK >> GO TO 3.

NG >> Adjust co

>> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.

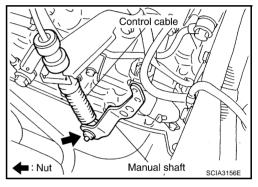

3. CHECK VEHICLE SPEED SENSOR-A/T AND VEHICLE SPEED SENSOR-MTR CIRCUIT

Check vehicle speed sensor·A/T (revolution sensor) and vehicle speed sensor·MTR circuit. Refer to AT-109, "DTC P0720 VEHICLE SPEED SENSOR·A/T (REVOLUTION SENSOR)" and AT-182, "DTC VEHICLE SPEED SENSOR MTR".

OK or NG

OK >> GO TO 4.

NG >> Repair or replace vehicle speed sensor·A/T (revolution sensor) and vehicle speed sensor·MTR circuits.

4. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to <u>AT-172, "DTC P1705 ACCELERATOR PEDAL POSI-</u>TION (APP) SENSOR".

OK or NG

OK >> GO TO 5.


NG >> Repair or replace accelerator pedal position (APP) sensor.

5. CHECK A/T FLUID CONDITION

- Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 7. NG >> GO TO 6.

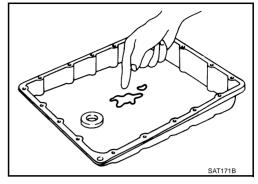

6. DETECT MALFUNCTIONING ITEM

- Remove control valve. Refer to AT-260, "Control Valve Assembly and Accumulators". 1.
- Check the following.
- Shift valve A
- Shift valve B
- Shift solenoid valve A
- Shift solenoid valve B
- Pilot valve
- Pilot filter
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 4. Check the following.
- Servo piston assembly
- Brake band

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

7. DETECT MALFUNCTIONING ITEM

- Remove control valve. Refer to AT-260, "Control Valve Assembly and Accumulators". 1.
- Check the following. 2.
- Shift valve A
- Shift valve B
- Shift solenoid valve A
- Shift solenoid valve B
- Pilot valve
- Pilot filter

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

8. CHECK SYMPTOM

Check again. Refer to AT-60, "Cruise Test — Part 1", AT-63, "Cruise Test — Part 2".

OK or NG

>> INSPECTION END

NG >> GO TO 9. В

ΑT

D

F

Н

M

OK

9. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector. OK or NG
- OK >> INSPECTION END
- NG >> Repair or replace damaged parts.

A/T Does Not Shift: D2 \rightarrow D3

ACS007ZN

SYMPTOM:

A/T does not shift from D₂ to D₃ at the specified speed on "Cruise Test — Part 1" and "Cruise Test — Part 2".

CONFIRM THE SYMPTOM

А

В

ΑT

Check symptom. Refer to AT-60, "Cruise Test — Part 1", AT-63, "Cruise Test — Part 2".

Are "Vehicle Does Not Creep Forward in "D", "2" or "1" Position" and "Vehicle Cannot Be Started From D1 "OK?

YES >> GO TO 2.

NO >> GO TO AT-215, "Vehicle Does Not Creep Forward in "D", "2" or "1" Position" and AT-217, "Vehicle Cannot Be Started From D1".

2. CHECK CONTROL CABLE

F


D

Check control cable. Refer to $\underline{\text{AT-253, "Checking of A/T Position"}}$. $\underline{\text{OK or NG}}$

OK >> GO TO 3.

NG >> Adjust

>> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.

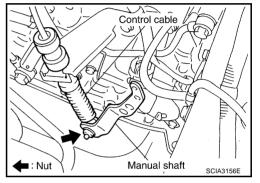

3. CHECK VEHICLE SPEED SENSOR-A/T AND VEHICLE SPEED SENSOR-MTR CIRCUIT

Н

Check vehicle speed sensor·A/T (revolution sensor) and vehicle speed sensor·MTR circuit. Refer to <u>AT-109</u>, "<u>DTC P0720 VEHICLE SPEED SENSOR·A/T (REVOLUTION SENSOR)</u>" and <u>AT-182</u>, "<u>DTC VEHICLE SPEED SENSOR MTR</u>".

OK or NG

OK >> GO TO 4.

NG >> Repair or replace vehicle speed sensor·A/T (revolution sensor) and vehicle speed sensor·MTR

·MTR

circuits.

4. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

_

Check accelerator pedal position (APP) sensor. Refer to <u>AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR"</u>.

OK or NG

OK >> GO TO 5.


NG >> Repair or replace accelerator pedal position (APP) sensor.

5. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 7. NG >> GO TO 6.

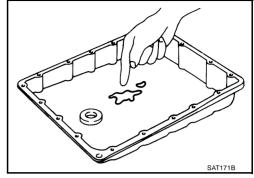

6. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators" .
- 2. Check the following.
- Shift valve B
- Shift solenoid valve B
- Pilot valve
- Pilot filter
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 4. Check the following.
- Servo piston assembly
- High clutch assembly. Refer to AT-325, "High Clutch" .
- Oil pump assembly. Refer to <u>AT-299, "Oil Pump"</u>.

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

7. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- Shift valve B
- Shift solenoid valve B
- Pilot valve
- Pilot filter

OK or NG

OK >> GO TO 8.

NG >> Repair or replace damaged parts.

8. CHECK SYMPTOM

Check again. Refer to AT-60, "Cruise Test — Part 1", AT-63, "Cruise Test — Part 2".

OK or NG

OK >> INSPECTION END

NG >> GO TO 9.

9. CHECK TCM

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts. В

ΑT

D

Е

F

G

Н

A/T Does Not Shift: D₃ → D₄

CS007Z0

SYMPTOM:

- A/T does not shift from D₃ to D₄ at the specified speed on "Cruise Test Part 1" and "Cruise Test
 Part 2".
- A/T must be warm before D₃ to D₄ shift will occur.

CONFIRM THE SYMPTOM

Check symptom. Refer to AT-60, "Cruise Test — Part 1", AT-63, "Cruise Test — Part 2".

Are "Vehicle Does Not Creep Forward in "D", "2" or "1" Position" and "Vehicle Cannot Be Started From D1 "OK?

YES >> GO TO 2.

NO >> GO TO <u>AT-215</u>, "Vehicle <u>Does Not Creep Forward in "D", "2" or "1" Position"</u> and <u>AT-217</u>, "Vehicle <u>Cannot Be Started From D1"</u>.

2. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to <u>AT-82, "SELF-DIAGNOSTIC RESULT MODE"</u> or <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.

Do the self-diagnosis results indicate PNP switch, A/T fluid temperature sensor, vehicle speed sensor-A/T (revolution sensor), shift solenoid valve A or B, vehicle speed sensor-MTR circuit?

YES >> Check damaged circuit. Refer to AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH", AT-104, "DTC P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT", AT-109, "DTC P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)", AT-162, "DTC P0750 SHIFT SOLENOID VALVE A", AT-167, "DTC P0755 SHIFT SOLENOID VALVE B" or AT-182, "DTC VEHICLE SPEED SENSOR MTR".

NO >> GO TO 3.

3. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to <u>AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR"</u>.

OK or NG

OK >> GO TO 4.


NG >> Repair or replace accelerator pedal position (APP) sensor.

4. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 6. NG >> GO TO 5.

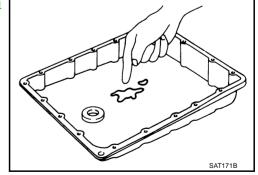

5. DETECT MALFUNCTIONING ITEM Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators". 2. Check the following. В Shift valve A Overrun clutch control valve Shift solenoid valve A ΑT Overrun clutch solenoid valve Pilot valve Pilot filter Disassemble A/T. Refer to AT-280, "DISASSEMBLY". 3. 4. Check the following. F Servo piston assembly Brake band Torque converter. Refer to AT-280, "DISASSEMBLY". Oil pump assembly. Refer to AT-299, "Oil Pump". OK or NG OK >> GO TO 7. NG >> Repair or replace damaged parts. 6. DETECT MALFUNCTIONING ITEM Н Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators". Check the following. Shift valve A Overrun clutch control valve Shift solenoid valve A Pilot valve Pilot filter OK or NG OK >> GO TO 7. NG >> Repair or replace damaged parts. 7. CHECK SYMPTOM Check again. Refer to AT-60, "Cruise Test — Part 1", AT-63, "Cruise Test — Part 2". OK or NG M OK >> INSPECTION END NG >> GO TO 8. 8. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

A/T Does Not Perform Lock-Up

ACS007ZP

SYMPTOM:

A/T does not perform lock-up at the specified speed on "Cruise Test — Part 1".

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to <u>AT-82, "SELF-DIAGNOSTIC RESULT MODE"</u> or <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.

Do the self-diagnosis results indicate vehicle speed sensor-A/T (revolution sensor), A/T fluid temperature sensor, vehicle speed sensor-MTR, engine speed signal, torque converter clutch solenoid valve circuit?

YES >> Check damaged circuit. Refer to <u>AT-109</u>, "DTC <u>P0720 VEHICLE SPEED SENSOR-A/T (REVOLUTION SENSOR)"</u>, AT-104, "DTC <u>P0710 A/T FLUID TEMPERATURE SENSOR CIRCUIT"</u>, <u>AT-182</u>, "DTC <u>VEHICLE SPEED SENSOR MTR"</u>, <u>AT-115</u>, "DTC <u>P0725 ENGINE SPEED SIGNAL"</u> or <u>AT-142</u>, "DTC <u>P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE"</u>.

NO >> GO TO 2.

2. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to <u>AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR"</u>.

OK or NG

OK >> GO TO 3.

NG >> Repair or replace accelerator pedal position (APP) sensor.

3. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators" .
- 2. Check the following.
- Torque converter clutch control valve
- Torque converter clutch solenoid valve
- Torque converter relief valve
- Pilot valve
- Pilot filter
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 4. Check the following.
- Torque converter. Refer to AT-280, "DISASSEMBLY".

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts.

4. снеск зумртом

Check again. Refer to AT-60, "Cruise Test — Part 1".

OK or NG

OK >> INSPECTION END

NG >> GO TO 5.

5. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

A/T Does Not Hold Lock-Up Condition

ACS007ZQ

SYMPTOM:

A/T does not hold lock-up condition for more than 30 seconds on "Cruise Test — Part 1".

1. CHECK SELF-DIAGNOSTIC RESULTS

В

Perform self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE" or AT-91, "Diagnostic Procedure Without CONSULT-II".

Do the self-diagnosis results indicate engine speed signal?

>> Check engine speed signal circuit. Refer to AT-115, "DTC P0725 ENGINE SPEED SIGNAL" . YES

NO >> GO TO 2.


2. CHECK A/T FLUID CONDITION

Remove oil pan. Refer to AT-272. "Components".

Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 4. >> GO TO 3. NG

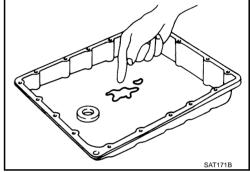

3. DETECT MALFUNCTIONING ITEM

1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".

2. Check the following.

- Torque converter clutch control valve
- Torque converter clutch solenoid valve
- Pilot valve
- Pilot filter
- Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- 4. Check the following.
- Torque converter. Refer to AT-280, "DISASSEMBLY".
- Oil pump assembly. Refer to AT-299, "Oil Pump".

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

4. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- Check the following.
- Torque converter clutch control valve
- Torque converter clutch solenoid valve
- Pilot valve
- Pilot filter

OK or NG

OK >> GO TO 5.

Revision: 2005 March

>> Repair or replace damaged parts. NG

ΑT

Α

 D

F

Н

5. CHECK SYMPTOM

Check again. Refer to AT-60, "Cruise Test — Part 1".

OK or NG

OK >> INSPECTION END

NG >> GO TO 6.

6. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value" .
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

А

В

D

Е

F

G

Н

Κ

	is not released when accelerator pedal is released on "Cruise Test — Part 1". CK ACCELERATOR PEDAL POSITION (APP) SENSOR CIRCUIT	
Perform s dure Withe Do the sel YES >	self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE" or AT-91, "Diagnout CONSULT-II". elf-diagnosis results indicate accelerator pedal position (APP) sensor circuit? >> Check accelerator pedal position (APP) sensor circuit. Refer to AT-172, "DTC P1705 ATOR PEDAL POSITION (APP) SENSOR". >> GO TO 2. CK SYMPTOM	
OK or NG OK >	>> INSPECTION END >> GO TO 3.	
1. Check 2. If NG, OK or NG	ck TCM input/output signals. Refer to <u>AT-77, "TCM Terminals and Reference Value"</u> . i, recheck TCM pin terminals for damage or loose connection with harness connector.	

Engine Speed Does Not Return to Idle (Light Braking D4 \rightarrow D3)

ACS007ZS

SYMPTOM:

Engine speed does not smoothly return to idle when A/T shifts from D4 to D3 on "Cruise Test — Part 1".

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis. Refer to <u>AT-82, "SELF-DIAGNOSTIC RESULT MODE"</u> or <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.

Do the self-diagnosis results indicate overrun clutch solenoid valve circuit?

YES >> Check overrun clutch solenoid valve circuit. Refer to <u>AT-177, "DTC P1760 OVERRUN CLUTCH SOLENOID VALVE"</u>.

NO >> GO TO 2.

2. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to <u>AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR"</u>.

OK or NG

OK >> GO TO 3.


NG >> Repair or replace accelerator pedal position (APP) sensor.

3. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 5. NG >> GO TO 4.

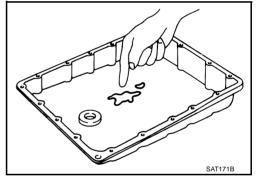

4. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators".
- 2. Check the following.
- Overrun clutch control valve
- Overrun clutch reducing valve
- Overrun clutch solenoid valve
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY".
- Check the following.
- Overrun clutch assembly. Refer to <u>AT-331, "Forward and Overrun Clutches"</u>.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

В

D

F

F

G

Н

M

5. DETECT MALFUNCTIONING ITEM Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators" . 1. 2. Check the following. Overrun clutch control valve Overrun clutch reducing valve Overrun clutch solenoid valve ΑT OK or NG >> GO TO 6. OK NG >> Repair or replace damaged parts. 6. CHECK SYMPTOM Check again. Refer to AT-60, "Cruise Test — Part 1". OK or NG OK >> INSPECTION END NG >> GO TO 7. **7.** снеск тсм Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value". 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector. OK or NG OK >> INSPECTION END NG >> Repair or replace damaged parts.

AT-233 2005 X-Trail Revision: 2005 March

A/T Does Not Shift: D4 $\, ightarrow$ D3 , When Overdrive Control Switch "ON" ightarrow "OFF"

SYMPTOM:

A/T does not shift from D₄ to D₃ when changing overdrive control switch to "OFF" position on "Cruise Test — Part 3".

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to <u>AT-82, "SELF-DIAGNOSTIC RESULT MODE"</u> or <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.

Is a malfunction in CAN communication indicated in the results?

YES >> Check CAN communication line. Refer to AT-95, "DTC U1000 CAN COMMUNICATION LINE".

NO >> GO TO 2.

2. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

(P) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out "OVERDRIVE SW".
 Check the signal of the overdrive control switch is indicated properly.
 (Overdrive switch "ON" displayed on CONSULT-II means over-drive "OFF".)


Item name	Overdrive control switch Condition	Display value
OVERDRIVE SW	ON	OFF
OVERDINIVE SW	OFF	ON

DATA MONITOR					
	MONIT	OR	N	O DTC	
	VHCL/S THRTL FLUID BATTEI ENGIN TURBIN	S SE-AT S SE-MT POS SE TEMP S RY VOLT E SPEE NE REV DRIVE S SI SW	R 5 kr EN 0.8 E 1.4 I 11.6 D 384 O rp	m/h V V 6 V rpm om	
			Page	Down	
			REC	ORD	
	MODE	BACK	LIGHT	COPY	SCIA4730E

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine)
- Check voltage between A/T device harness connector terminal and ground. Refer to <u>AT-202</u>, "Wiring <u>Diagram — AT — NON-DTC"</u>.

Item	Connector	Terminal (Wire color)	Overdrive con- trol switch Condi- tion	Data (Approx.)
A/T device harness con-	M58	1 (L/OR) - Ground	Releasing	Battery volt- age
nector		Giodila	Holding	0V

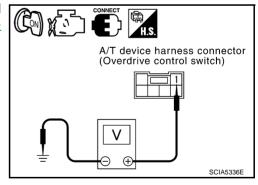

OK or NG

OK \Rightarrow GO TO AT-223, "A/T Does Not Shift: D2 \rightarrow D3".

NG >> Check overdrive control switch circuit. Refer to AT-244, "TCM Self-Diagnosis Does Not Activate".

A/T Does Not Shift: D3 \rightarrow 22 , When Selector Lever "D" \rightarrow "2" Position

ACS007UQ

SYMPTOM:

A/T does not shift from D₃ to 2₂ when changing selector lever from "D" to "2" position on "Cruise Test — Part 3".

CONFIRM THE SYMPTOM

Check symptom. Refer to AT-64, "Cruise Test — Part 3".

Is "A/T Does Not Shift: D1 \rightarrow D2 or Does Not Kickdown: D4 \rightarrow D2 " OK?

YES (With CONSULT-II) >>GO TO 2.

YES (Without CONSULT-II) >>GO TO 3.

NO >> GO TO AT-220, "A/T Does Not Shift: D1 \rightarrow D2 or Does Not Kickdown: D4 \rightarrow D2".

2. CHECK PNP SWITCH CIRCUIT (WITH CONSULT-II)

(P) With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)

- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out "P·N", "R", "D", "2" and "1" position switches moving selector lever to each position.

	+	
Item name	Condition	Display value
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
	When setting selector lever to other positions.	OFF
2 POSITION SW	When setting selector lever to "2" position.	ON
	When setting selector lever to other positions.	
1 POSITION SW	When setting selector lever to "1" position.	ON
. I COITION OW	When setting selector lever to other positions.	OFF

DATA MON	DATA MONITOR		
MONITORING			
PN POSI SW	OFF		
R POSITION SW	OFF		
D POSITION SW	OFF		
2 POSITION SW	ON		
1 POSITION SW	OFF		
		SAT701J	

OK or NG

OK >> INSPECTION END

NG >> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH"</u>.

Revision: 2005 March AT-235 2005 X-Trail

ΑT

Α

В

D

F

C

Н

J

Κ

3. CHECK PNP SWITCH CIRCUIT (WITHOUT CONSULT-II)

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground while moving selector lever through each position. Refer to <u>AT-202, "Wiring Diagram AT NONDTC"</u>.

Lover position	Terminal				
Lever position	36	35	34	27	26
"P", "N"	В	0	0	0	0
"R"	0	В	0	0	0
"D"	0	0	В	0	0
"2"	0	0	0	В	0
"1"	0	0	0	0	В

B: Battery voltage

0: 0V


OK or NG

OK

>> INSPECTION END

NG

>> Check park/neutral position (PNP) switch circuit. Refer to AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH" .

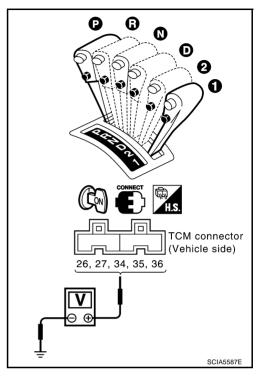

A/T Does Not Shift: 22 \rightarrow 11 , When Selector Lever "2" \rightarrow "1" on Position

SYMPTOM:

A/T does not shift from 22 to 11 when changing selector lever from "2" to "1" position on "Cruise Test — Part 3".

1. CHECK PNP SWITCH CIRCUIT (WITH CONSULT-II)

(P) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out "P·N", "R", "D", "2" and "1" position switches moving selector lever to each position.

Item name	Condition	Display value
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
FINFOSISW	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
KT GOITION SW	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
D FOSITION SW	When setting selector lever to other positions.	OFF
2 POSITION SW	When setting selector lever to "2" position.	ON
2 FOSITION SW	When setting selector lever to other positions.	OFF
1 POSITION SW	When setting selector lever to "1" position.	ON
I FOSITION SW	When setting selector lever to other positions.	OFF

DATA MONIT	OR	
MONITORING		
PN POSI SW	OFF	
R POSITION SW	OFF	
D POSITION SW	OFF	
2 POSITION SW	ON	
1 POSITION SW	OFF	
		SAT701J

OK or NG

OK >> GO TO 3.

NG >> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH"</u>.

ΑT

Α

В

ACS007UR

D

F

G

F

Н

2. CHECK PNP SWITCH CIRCUIT (WITHOUT CONSULT-II)

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- Check voltage between TCM connector terminals and ground while moving selector lever through each position. Refer to <u>AT-202, "Wiring Diagram — AT — NONDTC"</u>.

Loverposition	Terminal				
Lever position	36	35	34	27	26
"P", "N"	В	0	0	0	0
"R"	0	В	0	0	0
"D"	0	0	В	0	0
"2"	0	0	0	В	0
"1"	0	0	0	0	В


B: Battery voltage

0: 0V

OK or NG

OK NG >> GO TO 3.

>> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION</u> (PNP) SWITCH".

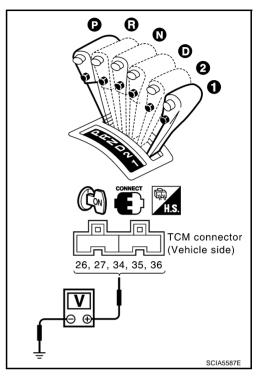


3. CHECK CONTROL CABLE

Check control cable. Refer to $\underline{\text{AT-253}}$, "Checking of $\underline{\text{A/T Position}}$ " . OK or NG

OK >> GO TO 4.

NG >> Adjust c

>> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.

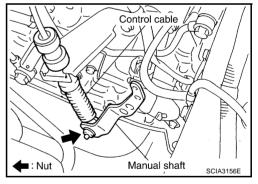

4. CHECK VEHICLE SPEED SENSOR-A/T AND VEHICLE SPEED SENSOR-MTR CIRCUIT

Check vehicle speed sensor·A/T (revolution sensor) and vehicle speed sensor·MTR circuit. Refer to <u>AT-109</u>, "DTC P0720 VEHICLE SPEED SENSOR·A/T (REVOLUTION SENSOR)" and <u>AT-182</u>, "DTC VEHICLE SPEED SENSOR MTR".

OK or NG

OK >> GO TO 5.


NG >> Repair or replace vehicle speed sensor-A/T (revolution sensor) and vehicle speed sensor-MTR circuits.

5. CHECK A/T FLUID CONDITION

- Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 7. NG >> GO TO 6.

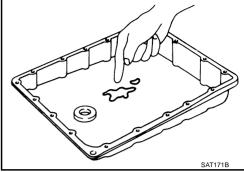

В

ΑT

D

F

G

Н

6. DETECT MALFUNCTIONING ITEM

- Remove control valve assembly. Refer to AT-260, "Control Valve Assembly and Accumulators". 1.
- Check the following.
- Shift valve A
- Shift solenoid valve A
- Overrun clutch control valve
- Overrun clutch solenoid valve
- 3. Disassemble A/T. Refer to AT-280, "DISASSEMBLY" .
- 4. Check the following.
- Servo piston assembly
- Brake band

OK or NG

>> GO TO 7. OK

NG >> Repair or replace damaged parts.


7. CHECK SYMPTOM

Check again. Refer to AT-64, "Cruise Test — Part 3".

OK or NG

OK >> INSPECTION END

NG >> GO TO 8.

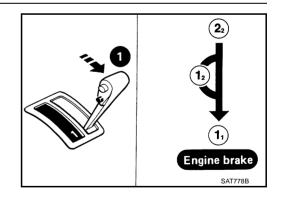

8. CHECK TCM

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

Vehicle Does Not Decelerate by Engine Brake

ACS007US

SYMPTOM:

- Vehicle does not decelerate by engine brake when shifting from 22 (12) to 11 "Cruise Test Part 3".
- Vehicle does not decelerate by engine brake when turning overdrive control switch OFF on "Cruise Test Part 3".
- Vehicle does not decelerate by engine brake when shifting A/T from "D" to "2" position on "Cruise Test — Part 3".

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to <u>AT-82, "SELF-DIAGNOSTIC RESULT MODE"</u> or <u>AT-91, "Diagnostic Procedure Without CONSULT-II"</u>.

Is a malfunction in CAN communication indicated in the results?

YES >> Check CAN communication line. Refer to AT-95, "DTC U1000 CAN COMMUNICATION LINE".

NO >> GO TO 2.

2. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

(P) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine)
- Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out "OVERDRIVE SW".
 Check the signal of the overdrive control switch is indicated properly.
 (Overdrive switch "ON" displayed on CONSULT-II means over-drive "OFF".)


Item name	Overdrive control switch Condition	Display value
OVERDRIVE SW	ON	OFF
	OFF	ON

DATA MONITOR					
	MONIT	OR	N	ота с	
	VHCL/S THRTL FLUID BATTER ENGINI TURBIN	POS SE FEMP S RY VOLT E SPEE NE REV PRIVE S	R 5 kr EN 0.8 E 1.4 Γ 11.6 D 384	n/h V V 6 V rpm om FF	
			Page	Down	
			REC	ORD	
	MODE	BACK	LIGHT	COPY	SCIA4730E

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine)
- 2. Check voltage between A/T device harness connector terminal and ground. Refer to <u>AT-202, "Wiring Diagram AT NON-DTC"</u>.

Item	Connector	Terminal (Wire color)	Overdrive con- trol switch Condi- tion	Data (Approx.)
A/T device harness con-	M58	1 (L/OR) - Ground	Releasing	Battery volt- age
nector		Giodila	Holding	0V

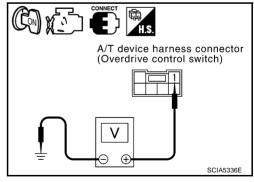

OK or NG

OK (With CONSULT-II)>>GO TO 3.

OK (Without CONSULT-II)>>GO TO 4.

NG >> Check overdrive control switch circuit. Refer to AT-244, "TCM Self-Diagnosis Does Not Activate".

3. CHECK PNP SWITCH CIRCUIT (WITH CONSULT-II)

(II) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out "P·N", "R", "D", "2" and "1" position switches moving selector lever to each position.

Item name	Condition	Display value
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
FINFOSISW	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
K FOSITION SW	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
	When setting selector lever to other positions.	OFF
2 POSITION SW	When setting selector lever to "2" position.	ON
2 POSITION SW	When setting selector lever to other positions.	OFF
1 POSITION SW	When setting selector lever to "1" position.	ON
TI OSITION SW	When setting selector lever to other positions.	OFF

DATA MONIT	OR	
MONITORING		
PN POSI SW	OFF	
R POSITION SW	OFF	
D POSITION SW	OFF	
2 POSITION SW	ON	
1 POSITION SW	OFF	
		SAT701J

OK or NG

OK >> GO TO 5. NG >> Check pa

>> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH"</u>.

D

F

ΑT

G

F

Н

Κ

4. CHECK PNP SWITCH CIRCUIT (WITHOUT CONSULT-II)

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground while moving selector lever through each position. Refer to AT-202, "Wiring Diagram AT NONDTC".

Lever position	Terminal					
Level position	36	35	34	27	26	
"P", "N"	В	0	0	0	0	
"R"	0	В	0	0	0	
"D"	0	0	В	0	0	
"2"	0	0	0	В	0	
"1"	0	0	0	0	В	


B: Battery voltage

0: 0V

OK or NG

OK NG >> GO TO 5.

>> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION</u> (PNP) SWITCH".

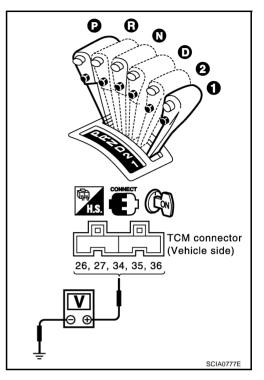


5. CHECK CONTROL CABLE

Check control cable. Refer to $\underline{\text{AT-253, "Checking of A/T Position"}}$. OK or NG

OK >> GO TO 6.

NG >> Adjust

>> Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.

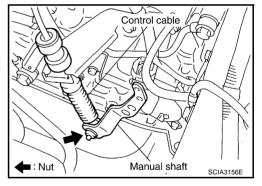

6. CHECK VEHICLE SPEED SENSOR-A/T AND VEHICLE SPEED SENSOR-MTR CIRCUIT

Check vehicle speed sensor·A/T (revolution sensor) and vehicle speed sensor·MTR circuit. Refer to AT-109, "DTC P0720 VEHICLE SPEED SENSOR·A/T (REVOLUTION SENSOR)" and AT-182, "DTC VEHICLE SPEED SENSOR MTR".

OK or NG

OK >> GO TO 7.

NG >> Repair or replace vehicle speed sensor-A/T (revolution sensor) and vehicle speed sensor-MTR circuits.

7. CHECK ACCELERATOR PEDAL POSITION (APP) SENSOR

Check accelerator pedal position (APP) sensor. Refer to $\underline{\text{AT-172}}$, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR".

OK or NG

OK >> GO TO 8.


NG >> Repair or replace accelerator pedal position (APP) sensor.

8. CHECK A/T FLUID CONDITION

- 1. Remove oil pan. Refer to AT-272, "Components".
- 2. Check A/T fluid condition. Refer to AT-52, "Fluid Condition Check".

OK or NG

OK >> GO TO 10. NG >> GO TO 9.

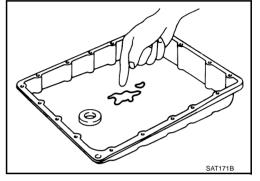

9. DETECT MALFUNCTIONING ITEM

- 1. Remove control valve assembly. Refer to <u>AT-260, "Control Valve Assembly and Accumulators"</u> .
- 2. Check the following.
- Shift valve A
- Overrun clutch solenoid valve
- 3. Disassemble A/T. Refer to.
- 4. Check the following.
- Overrun clutch assembly. Refer to AT-331, "Forward and Overrun Clutches".
- Low & reverse brake assembly. Refer to <u>AT-338, "Low & Reverse Brake"</u>.

OK or NG

OK >> GO TO 10.

NG >> Repair or replace damaged parts.

10. CHECK SYMPTOM

Check again. Refer to AT-64, "Cruise Test — Part 3".

OK or NG

OK >> INSPECTION END

NG >> GO TO 11.

11. снеск тсм

- 1. Check TCM input/output signals. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

ΑT

Α

В

D

Н

L

TCM Self-Diagnosis Does Not Activate

ACS007UT


SYMPTOM:

O/D OFF indicator lamp does not come on in TCM self-diagnostic procedure even if the lamp circuit is good.


DESCRIPTION

PNP switch

PNP switch assembly includes a transaxle position switch. The transaxle position switch detects the selector lever position and sends a signal to the TCM.

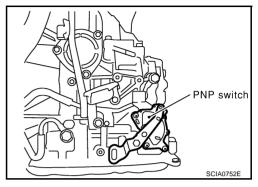


Overdrive control switch
 Overdrive control switch detects the switch position (ON or OFF)
 and sends a signal to the TCM.

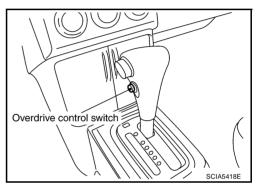

Closed throttle position signal and wide open throttle position signal

ECM judges throttle opening based on a signal from accelerator pedal position (APP) sensor, and sends the signal via CAN communication to TCM.

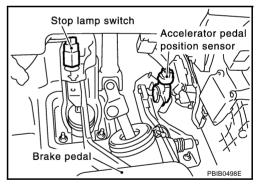

DIAGNOSTIC PROCEDURE

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to AT-82, "SELF-DIAGNOSTIC RESULT MODE".

Is a malfunction in the CAN communication indicated in the results?

YES >> Check CAN communication line. Refer to <u>AT-95, "DTC U1000 CAN COMMUNICATION LINE"</u>.

NO (With CONSULT-II) >>GO TO 2.

NO (Without CONSULT-II) >>GO TO 3.

2. CHECK PNP SWITCH CIRCUIT (WITH CONSULT-II)

(P) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- 3. Read out "P·N", "R", "D", "2" and "1" position switches moving selector lever to each position.

Item name	Condition	Display value
PN POSI SW	When setting selector lever to "N" or "P" position.	ON
PN POSI SW	When setting selector lever to other positions.	OFF
R POSITION SW	When setting selector lever to "R" position.	ON
K FOSITION SW	When setting selector lever to other positions.	OFF
D POSITION SW	When setting selector lever to "D" position.	ON
	When setting selector lever to other positions.	OFF
2 POSITION SW	When setting selector lever to "2" position.	ON
2 F OSITION SW	When setting selector lever to other positions.	OFF
1 POSITION SW	When setting selector lever to "1" position.	ON
11 OSITION SW	When setting selector lever to other positions.	OFF

DATA MON	DATA MONITOR			
MONITORING				
PN POSI SW	OFF			
R POSITION SW	OFF			
D POSITION SW	OFF			
2 POSITION SW	ON			
1 POSITION SW	OFF			
		SAT701J		

OK or NG

OK >> GO TO 4.

NG >> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION (PNP) SWITCH"</u>.

ΑT

Α

В

Е

D

G

Н

-

L

3. CHECK PNP SWITCH CIRCUIT (WITHOUT CONSULT-II)

Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between TCM connector terminals and ground while moving selector lever through each position. Refer to AT-202, "Wiring Diagram AT NONDTC".

Lever position	Terminal					
Level position	36	35	34	27	26	
"P", "N"	В	0	0	0	0	
"R"	0	В	0	0	0	
"D"	0	0	В	0	0	
"2"	0	0	0	В	0	
"1"	0	0	0	0	В	

B: Battery voltage


0: 0V

OK or NG

OK >> GO TO 4.

NG


>> Check park/neutral position (PNP) switch circuit. Refer to <u>AT-98, "DTC P0705 PARK/NEUTRAL POSITION</u> (PNP) SWITCH".

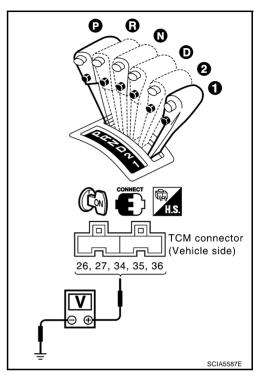

4. CHECK PNP SWITCH

- 1. Turn ignition switch OFF.
- 2. Disconnect PNP switch harness connector.
- 3. Check continuity between PNP switch harness connector terminals.

Lever position	Connector	Terminal	Continuity
"P"		1 - 2, 3 - 7	Yes
"R"		3 - 8	*Continuity should not
"N"	F24	1 - 2, 3 - 9	exist in posi-
"D"		3 - 6	tions other than the
"2"		3 - 5	specified
"1"		3 - 4	positions.

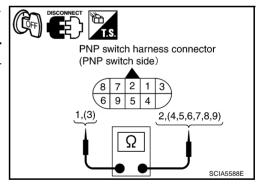

OK or NG

OK >> GO TO 6. NG >> GO TO 5.

5. CHECK CONTROL CABLE ADJUSTMENT

Check PNP switch again with control cable disconnected from manual shaft of A/T assembly. Refer to test group 4.

OK or NG

OK >> Adjust control cable. Refer to AT-252, "Adjustment of A/T Position".

NG >> Repair or replace PNP switch.

6. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and park/neutral position (PNP) switch
- Harness for short or open between park/neutral position (PNP) switch and TCM
- Harness for short or open between park/neutral position (PNP) switch and combination meter
- Harness for short or open between combination meter and TCM
- 10A fuse (NO.12, located in the fuse block)
- Combination meter. Refer to <u>DI-4, "COMBINATION METERS"</u>.
- Ignition switch. Refer to <u>PG-2</u>, "<u>POWER SUPPLY ROUTING</u>".

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

7. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

(II) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for "A/T" with CONSULT-II.
- Read out "OVERDRIVE SW".
 Check the signal of overdrive control switch is indicated properly.
 (Overdrive switch "ON" displayed on CONSULT-II means over-drive "OFF".)


Item name	Overdrive control switch condition	Display value
OVERDRIVE SW	ON	OFF
OVERDRIVE SW	OFF	ON

MONITOR NO DTC VHCL/S SE-AT 0 km/h VHCL/S SE-MTR 5 km/h THRTL POS SEN 0.8 V FLUID TEMP SE 1.4 V BATTERY VOLT 11.6 V ENGINE SPEED 384 rpm TURBINE REV 0 rpm OVERDRIVE SW OFF PN POSI SW ON Page Down RECORD MODE BACK LIGHT COPY SCIA4730E	DATA MONITOR					
VHCL/S SE-MTR 5 km/h THRTL POS SEN 0.8 V FLUID TEMP SE 1.4 V BATTERY VOLT 11.6 V ENGINE SPEED 384 rpm TURBINE REV 0 rpm OVERDRIVE SW OFF PN POSI SW ON Page Down RECORD	MONIT	OR	N	OTD C		
RECORD MODE BACK LIGHT COPY	VHCL/S THRTL FLUID BATTEI ENGIN TURBII OVERE	S SE-MT POS SE TEMP S RY VOLT E SPEE NE REV DRIVE S	R 5 kr EN 0.8 E 1.4 Γ 11.6 D 384 O rp W OF	m/h V V 6 V rpm om FF		
MODE BACK LIGHT COPY			Page	Down		
MODE BACK LIGHT COPY SCIA4730E			REC	ORD		
	MODE	BACK	LIGHT	COPY	SCIA4730E	

8 Without CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Check voltage between A/T device harness connector terminal and ground. Refer to <u>AT-202, "Wiring Diagram AT NON-DTC"</u>.

Item	Connector	Terminal (Wire color)	Overdrive control switch condition	Data (Approx.)
A/T device harness con-	MEO	1 (L/OR) -	Releasing	Battery voltage
nector (Over- drive control switch)	M58	Ground	Holding	0V

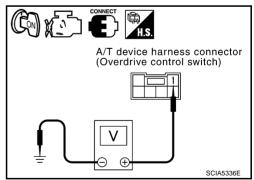

OK or NG

OK >> GO TO 10. NG >> GO TO 8.

Revision: 2005 March AT-247 2005 X-Trail

ΑT

В

Е

C

Н


I

J

8. CHECK OVERDRIVE CONTROL SWITCH

- 1. Turn ignition switch OFF.
- 2. Disconnect A/T device harness connector.
- Check continuity between A/T device harness connector terminals. Refer to <u>AT-202</u>, "Wiring Diagram AT <u>NONDTC</u>".

Item	Connector	Terminal	Overdrive control switch condition	Continuity
A/T device har-	ss connector	1 - 2	Releasing	No
ness connector (Overdrive control switch)			Holding	Yes

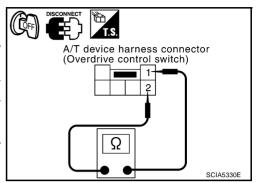

OK or NG

OK >> GO TO 9.

NG >> Repair or replace damaged parts.

9. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between combination meter and A/T device harness connector
- Harness for short or open between A/T device harness connector and ground
- Combination meter. Refer to <u>DI-4, "COMBINATION METERS"</u>.

OK or NG


OK >> GO TO 10.

NG >> Repair or replace damaged parts.

10. CHECK CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION SIGNAL CIR-CUIT

(II) With CONSULT-II

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Select "TCM INPUT SIGNALS" in "DATA MONITOR" mode for A/T with CONSULT-II.
- 3. Read out "CLOSED THL/SW" and "W/O THRL/P" depressing and releasing accelerator pedal. Check the signal of throttle position signal is indicated properly.

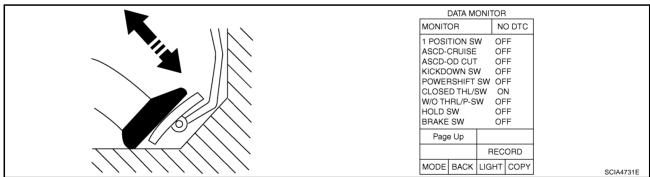

Accelerator pedal condition	Data monitor		
	CLOSED THL/SW	W/O THRL/P-SW	
Released	ON	OFF	
Fully depressed	OFF	ON	

OK or NG

OK >> GO TO 11.

NG

- >> Check the following. If any items are damaged, repair or replace damaged parts.
 - Accelerator pedal position (APP) sensor. Refer to AT-172, "DTC P1705 ACCELERATOR PEDAL POSITION (APP) SENSOR".

11. PERFORM SELF-DIAGNOSIS

Without CONSULT-II

Perform self-diagnosis. Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

OK or NG

OK >> INSPECTION END

NG – 1 >> Self-diagnosis does not activate: GO TO 12.

NG – 2 >> DTC is displayed: Check the malfunctioning system. Refer to AT-91, "Diagnostic Procedure Without CONSULT-II".

12. снеск тсм

- 1. Check TCM input/output signal. Refer to AT-77, "TCM Terminals and Reference Value".
- 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.

OK or NG

>> INSPECTION END OK


NG >> Repair or replace damaged parts.

COMPONENT INSPECTION

Overdrive Control Switch

Check continuity between A/T device harness connector termi-


Item	Connector	Terminal	Overdrive control switch condition	Continuity
A/T device har- ness connector (Overdrive control switch)	M58	1 - 2	Releasing	No
			Holding	Yes

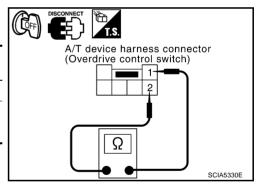

PNP Switch

1. Check continuity between PNP switch harness connector terminals.

Lever position	Connector	Terminal	Continuity
"P"		1 - 2, 3 - 7	Yes *Continuity should not exist in positions other than the specified positions.
"R"		3 - 8	
"N"	F24	1 - 2, 3 - 9	
"D"	1 24	3 - 6	
"2"		3 - 5	
"1"		3 - 4	

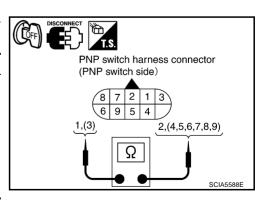

ΑT

Α


В

F

D

Н

- 2. If NG, check again with control cable disconnected from manual shaft of A/T assembly. Refer to step 1.
- 3. If OK on step 2, adjust control cable. Refer to AT-252, "Adjustment of A/T Position".
- 4. If NG on step 2, remove PNP switch from A/T and check continuity of PNP switch terminals. Refer to step 1.
- 5. If OK on step 4, adjust PNP switch. Refer to <u>AT-263, "Park/Neutral Position (PNP) Switch"</u>.
- 6. If NG on step 4, replace PNP switch.

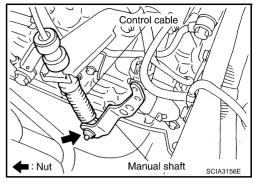


SHIFT CONTROL SYSTEM

SHIFT CONTROL SYSTEM

PFP:34901

ACS007OQ

Control Device Removal and Installation CONTROL DEVICE COMPONENTS

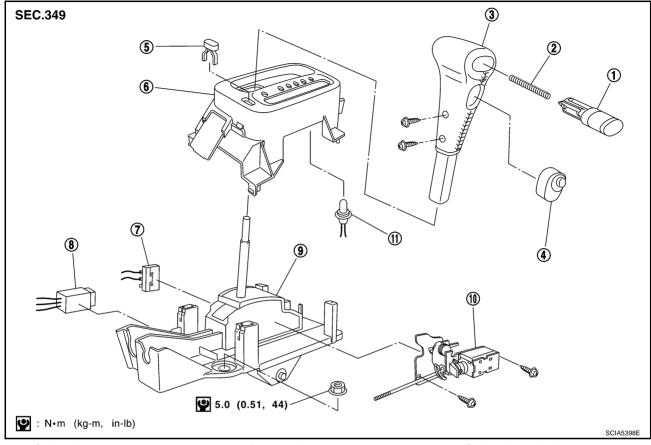

- 1. Selector button
- 4. Overdrive control switch
- 7. Park position switch
- 10. Shift lock solenoid assembly
- 2. Return spring
- 5. Shift lock release button cap
- 8. A/T device harness connector
- 11. Position lamp

- 3. Selector lever knob
- 6. Position indicator plate
- 9. Control device assembly

ΑT

Α

В

D

Е

F

G

Н

|


J

Κ

L

SHIFT CONTROL SYSTEM

CONTROL CABLE COMPONENTS

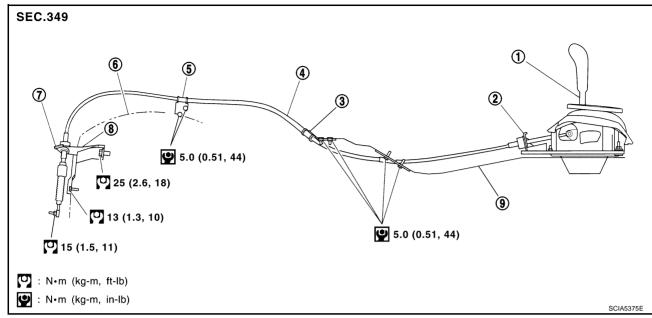

- Control device assembly
- 4. Control cable
- 7. Lock plate

- 2. Lock plate
- Bracket
- 8. Bracket

- 3. Bracket
- 6. Transaxle
- Floor panel

REMOVAL

- Remove A/T control finisher. Refer to <u>IP-10</u>, "INSTRUMENT PANEL ASSEMBLY".
- Remove center console. Refer to IP-10, "INSTRUMENT PANEL ASSEMBLY".
- Remove cluster lid finisher. Refer to IP-10, "INSTRUMENT PANEL ASSEMBLY".
- 4. Disconnect control cable of control device assembly.
- Disconnect key interlock cable of control device assembly. Refer to AT-258, "KEY INTERLOCK CABLE".
- 6. Disconnect A/T device harness connector.
- 7. Remove control device assembly from vehicle.

INSTALLATION

Note the following, and install in the reverse order of removal.

• After installation is completed, adjust and check A/T position. Refer to AT-252, "Adjustment of A/T Position" and AT-253, "Checking of A/T Position".

Adjustment of A/T Position

ACS007OR

Move selector lever from "P" position to "1" position. You should be able to feel the detents in each position. If the detents cannot be felt or if the pointer indicating the position is improperly aligned, the control cable needs adjustment.

- Place selector lever in "P" position.
- 2. Loosen control cable lock nut and place manual shaft in "P" position.

CAUTION:

Turn wheels more than 1/4 rotations and apply the park lock.

3. After pushing the control cable with the specified force, move your hands off the control cable.

Control cable

Schalbyze

Nut

Manual shaft

Schalbyze

Specified force: 9.8 N (1.0 kg, 2.2 lb)

4. Connect control cable on manual shaft.

CAUTION:

No application of a force to the manual lever.

SHIFT CONTROL SYSTEM

- 5. Tighten control cable lock nut.
- 6. Move selector lever from "P" to "1" position again. Make sure that selector lever moves smoothly.
- Apply grease to contacting areas of selector lever and control cable. Install any part removed.

Checking of A/T Position

ACS007OS

Α


В

ΑT

D

F

- Place selector lever in "P" position, and turn ignition switch ON (engine stop).
- Make sure selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure selector lever can be shifted from "P" position only when brake pedal is depressed.
- Move selector lever and check for excessive effort, sticking, noise or rattle.
- Confirm selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position selector lever is in matches the position shown by the shift position indicator and transaxle body.
- The method of operating selector lever to individual positions correctly should be as shown in the figure.
- Confirm back-up lamps illuminate only when lever is placed in "R" position. Confirm back-up lamps do not illuminate when selector lever is in "P" or "N" position with selector lever pushed against "R" position.
- Confirm engine can only be started with selector lever in "P" and "N" positions.
- 8. Make sure transaxle is locked completely in "P" position.

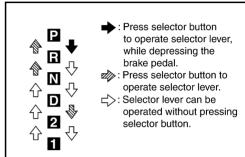

SCIA5443E

Н

A/T SHIFT LOCK SYSTEM


PFP:34950

DescriptionACS007UU

- The mechanical key interlock mechanism also operates as a shift lock:
 - With the key switch turned to ON, the selector lever cannot be shifted from "P" (parking) to any other position unless the brake pedal is depressed.
 - With the key removed, the selector lever cannot be shifted from "P" to any other position.
 - The key cannot be removed unless the selector lever is placed in "P".
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside the key cylinder.

Shift Lock System Electrical Parts Location

ACS007UV

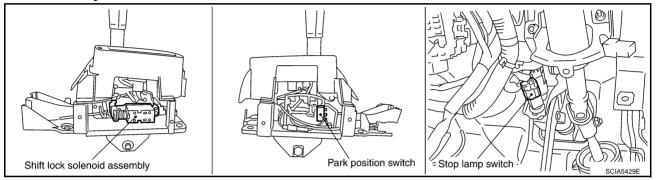

FUSE BLOCK (J/B)

R/Y

DEPRESSED

A/T DEVICE M58

(M2)

REFER TO PG-POWER.

R/Y TO LT-STOP/L

STOP LAMP SWITCH

TO LT-STOP/L

M12

IGNITION SWITCH ON OR START

9B

3

RELEASED

10A 5

DEPRESSED

SB

5

PARK

6

(M70)

RELEASED

SHIFT LOCK SOLENOID

PARK POSITION

OTHERS

M27

Wiring Diagram — AT — SHIFT

ACS007UW

AT-SHIFT-01

В

Α

ΑT

D

Е

G


Н

J

K

L

M

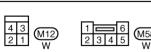

REFER TO THE FOLLOWING.

M2 -FUSE BLOCK-JUNCTION
BOX (J/B)

TCWB0015E

Diagnostic Procedure

ACS007UX

SYMPTOM 1:

- Selector lever cannot be moved from "P" position with key in ON position and brake pedal applied.
- Selector lever can be moved from "P" position with key in ON position and brake pedal released.
- Selector lever can be moved from "P" position when key is removed from key cylinder.

SYMPTOM 2:

- Ignition key cannot be removed when selector lever is set to "P" position.
- Ignition key can be removed when selector lever is set to any position except "P".

1. CHECK KEY INTERLOCK CABLE

Check key interlock cable for damage.

OK or NG

OK >> GO TO 2.

NG >> Repair key interlock cable. Refer to <u>AT-258, "KEY INTERLOCK CABLE"</u>.

2. CHECK A/T POSITION

Check A/T position. Refer to AT-253, "Checking of A/T Position".

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to AT-252, "Adjustment of A/T Position".

3. CHECK SHIFT LOCK SOLENOID AND PARK POSITION SWITCH

- 1. Turn ignition switch ON. (Do not start engine.)
- 2. Selector lever is set in "P" position.
- 3. Check operation sound.

Condition	Brake pedal	Operation sound
When ignition switch is turned ON posi-	Depressed	Yes
ion and selector lever is set in "P" posi- ion.	Released	No

OK or NG

OK >> INSPECTION END

NG >> GO TO 4.

4. CHECK POWER SOURCE

- 1. Turn ignition switch ON. (Do not start engine.)
- Check voltage between A/T device harness connector terminal and ground.


Voltage:

Brake pedal depressed: Battery voltage

Brake pedal released: 0V

OK or NG

OK >> GO TO 7. NG >> GO TO 5.

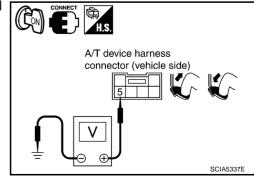

5. CHECK STOP LAMP SWITCH

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- Check continuity between stop lamp switch harness connector terminals.


Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check stop lamp switch after adjusting brake pedal — refer to BR-6, "BRAKE PEDAL".

OK or NG

OK >> GO TO 6.

NG >> Repair or replace damaged parts.

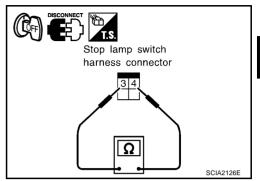

ΑT

В

D

Е

6. DETECT MALFUNCTIONING ITEM

Check the following. If any items are damaged, repair or replace damaged parts.

- 1. Harness for short or open between ignition switch and stop lamp switch harness connector
- 2. Harness for short or open between stop lamp switch harness connector and A/T device harness connector
- 10A fuse [No.5, located in the fuse block (J/B)]
- 4. Ignition switch. Refer to PG-2, "POWER SUPPLY ROUTING".

OK or NG

OK >> INSPECTION END

NG >> Repair or replace damaged parts.

7. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect A/T device harness connector.
- Check continuity between A/T device harness connector terminal and ground.


Continuity should exist.

4. Connect A/T device harness connector.

OK or NG

OK >> Replace shift lock solenoid or park position switch.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

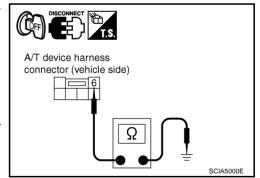

Н

2005 X-Trail

Revision: 2005 March


AT-257

KEY INTERLOCK CABLE

KEY INTERLOCK CABLE

PFP:34908

Components

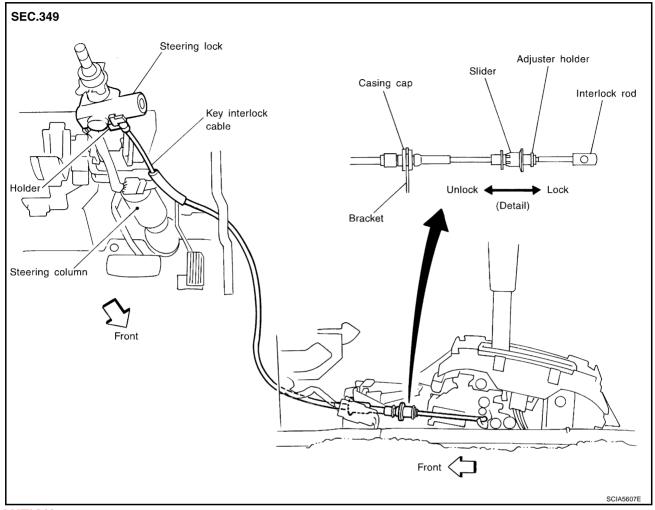


CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
- After installing key interlock cable to control device, make sure that casing cap and bracket are firmly secured in their positions.


Removal

 Unlock slider by squeezing lock tabs on slider from adjuster holder and remove interlock rod from key interlock cable.

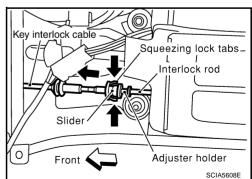

KEY INTERLOCK CABLE

Remove lock plate from steering lock assembly and remove key interlock cable.

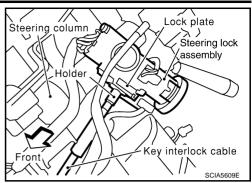


АТ


Installation

1. Turn ignition switch lock position.


- 2. Set selector lever to "P" position.
- 3. Set key interlock cable to steering lock assembly and install lock plate.
- 4. Clamp key interlock cable to steering column and fix to key interlock cable with band.

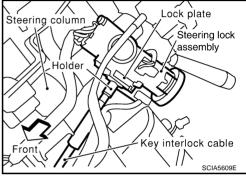

5. Insert interlock rod into adjuster holder.

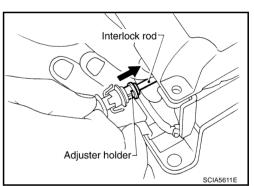

- 6. Install casing cap to bracket.
- 7. Move slider in order to fix adjuster holder to interlock rod.

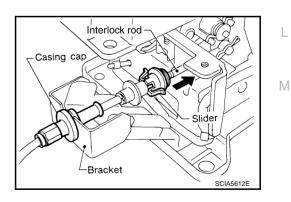

Revision: 2005 March AT-259 2005 X-Trail

В

Α

D

ACS007V0

F

G

Н

J


. .

. .

PFP:00000

Control Valve Assembly and Accumulators COMPONENTS

ACS007V1

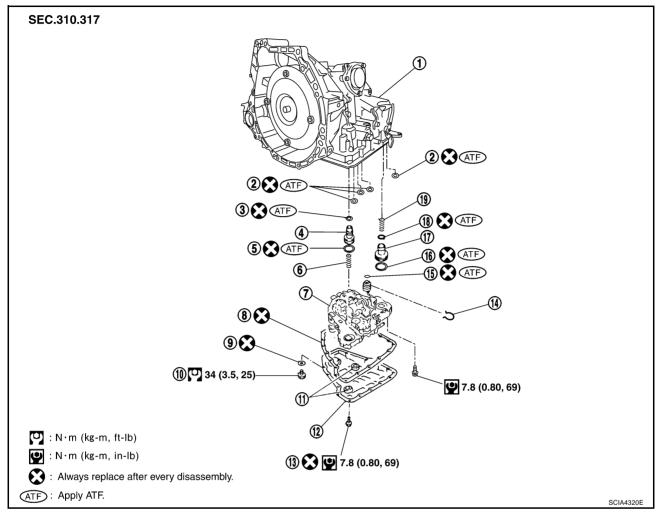


- 1. Transaxle
- 4. Servo release accumulator piston
- 7. Control valve assembly
- 10. Drain plug
- 13. Oil pan fitting bolt
- 16. O-ring
- 19. Return spring

- 2. Lip seal
- 5. O-ring
- 8. Oil pan gasket
- 11. Magnet
- 14. Snap ring
- 17. N-D accumulator piston
- 3. O-ring
- 6. Return spring
- 9. Drain plug gasket
- 12. Oil pan
- 15. O-ring
- 18. O-ring

REMOVAL AND INSTALLATION

Removal


- 1. Disconnect battery negative cable from battery negative terminal.
- 2. Drain ATF from transaxle. Refer to AT-18, "Changing A/T Fluid".
- Remove oil pan and oil pan gasket.

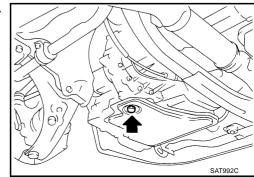

- Disconnect terminal cord assembly harness connector.
- 5. Remove snap ring from terminal body.

CAUTION:

Do not expand snap ring excessively.

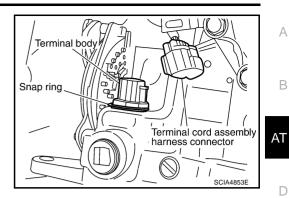


В

Н

M


6. Remove terminal cord assembly by pushing terminal body into transaxle case.

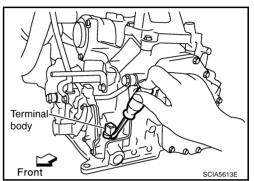

7. Remove control valve assembly fixing bolts A, B and C.

Bolt length, number and location:

Bolt symbol	Α	В	С
Bolt length " ℓ " mm (in)	40.0 (1.575)	33.0 (1.299)	43.5 (1.713)
Number of bolts	5	6	2

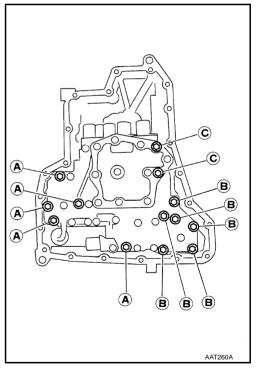

8. Remove control valve assembly from transaxle.

Be careful not to drop manual valve and servo release accumulator return spring.


AT-261 Revision: 2005 March 2005 X-Trail

9. Remove manual valve from control valve assembly.

CAUTION:

Be careful not to drop manual valve.


- 10. Remove O-ring from terminal body.
- Disassemble and inspect control valve assembly if necessary. Refer to <u>AT-304</u>, "Control Valve Assembly", <u>AT-313</u>, "Control Valve Upper Body" and <u>AT-317</u>, "Control Valve Lower Body".

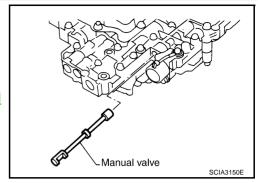

12. Remove servo release accumulator piston and N-D accumulator piston by applying compressed air if necessary.

CAUTION:


Hold each piston with a rag.

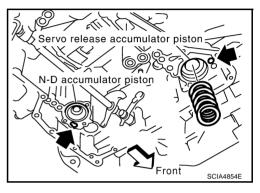

a. Blow air into the oil hole as shown in the figure and remove servo release accumulator piston from transaxle case.

CAUTION:


- Strong flow of air will push the accumulator piston out along with a splash of oil. Cover the area with paper towels and blow air little by little to avoid this.
- Wrap the removed accumulator piston in a paper towel.
- b. Remove O-rings from servo release accumulator piston.

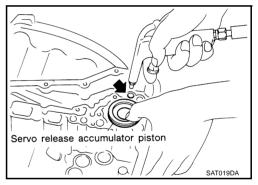

c. Blow air into the oil hole shown in the figure and remove N-D accumulator piston and return spring from transaxle case.

CAUTION:

- Strong flow of air will push the accumulator piston out along with a splash of oil. Cover the area with paper towels and blow air little by little to avoid this.
- Wrap the removed accumulator piston in a paper towel.
- d. Remove O-rings from N-D accumulator piston.
- 13. Remove lip seals from oil groove for band servo.
- 14. Remove magnets from oil pan.

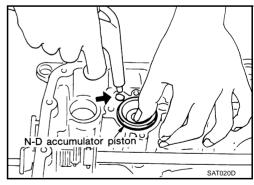

Installation


- Note the following, and install in the reverse order of removal.
- Set manual shaft in "N" position, then align manual plate with groove in manual valve.
- After installing control valve assembly to transaxle case, make sure that selector lever can be moved to all positions.
- After completing installation, check for A/T fluid leakage, and fluid level. Refer to AT-17, "Checking A/T Fluid".

CAUTION:

- Do not reuse O-rings and lip seals.
- Do not reuse oil pan gasket and oil pan fitting bolts.
- Do not reuse drain plug gasket.
- Apply ATF to manual valve.
- Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

Park/Neutral Position (PNP) Switch COMPONENTS

ACS007V2

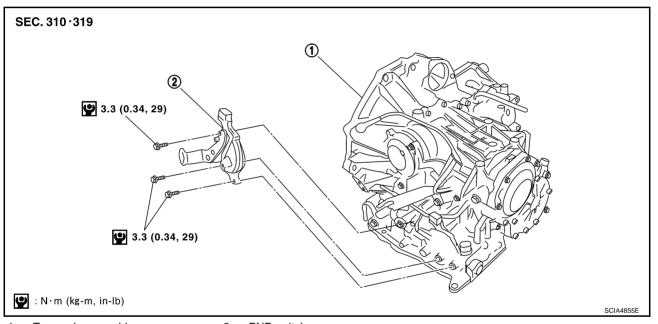


- 1. Transaxle assembly
- 2. PNP switch

REMOVAL AND INSTALLATION

Removal

- 1. Set selector lever in "N" position.
- 2. Remove engine under cover.
- Remove control cable end from manual shaft.

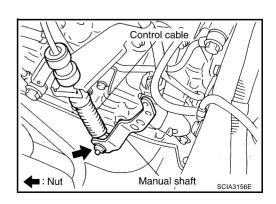

Manual shaft Manual plate

Manual valve

SAT497H

Revision: 2005 March AT-263 2005 X-Trail

ΑТ

Α

В

D

F


F

Н

J

K

- 4. Remove PNP switch fitting bolts.
- 5. Remove PNP switch from transaxle assembly.

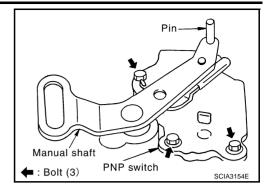


Installation

Note the following, and install in the reverse order of removal.


- Align PNP switch position when installing.
- After installation is completed, adjust and check A/T position. Refer to <u>AT-251, "SHIFT CONTROL SYS-TEM"</u>, <u>AT-264, "PARK/NEUTRAL POSITION (PNP) SWITCH ADJUSTMENT"</u>.
- After installation is completed, check continuity of PNP switch. Refer to <u>AT-244, "TCM Self-Diagnosis Does Not Activate"</u>.

PARK/NEUTRAL POSITION (PNP) SWITCH ADJUSTMENT

- 1. Set selector lever and manual shaft in "N" position.
- 2. Remove control cable end from manual shaft.

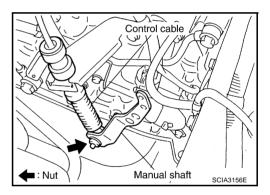


- 3. Loosen PNP switch fitting bolts.
- 4. Use a 3 mm (0.12 in) pin for this adjustment.
- a. Insert the pin straight into the manual shaft adjustment hole.
- b. Rotate PNP switch until the pin can also be inserted straight into the hole in PNP switch.
- 5. Tighten PNP switch fixing bolts.
- 6. Remove pin from adjustment hole after adjusting PNP switch.
- 7. Reinstall any part removed.
- 8. Adjust control cable. Refer to <u>AT-252, "Adjustment of A/T Position"</u>.
- 9. Check continuity of PNP switch. Refer to AT-249, "PNP Switch".

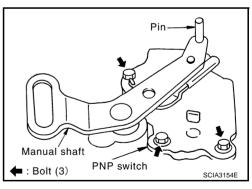

Differential Side Oil Seal Replacement COMPONENTS

ACS007V3

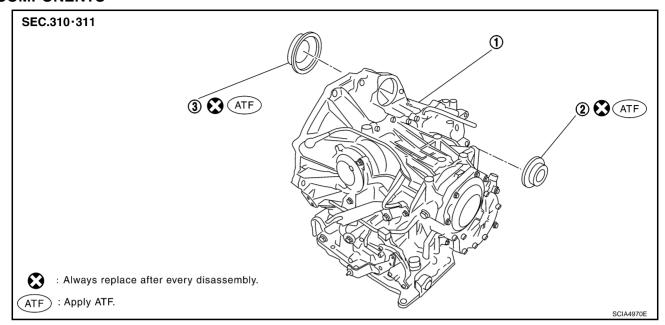


- Transaxle assembly
- 2. LH differential side oil seal
- B. RH differential side oil seal

REMOVAL AND INSTALLATION

Removal

- 1. Remove exhaust front tube. Refer to EX-3, "Removal and Installation".
- 2. Remove drive shaft. Refer to FAX-13, "FRONT DRIVE SHAFT".
- 3. Remove transfer assembly from right side of transaxle (For AWD models). Refer to <u>TF-48, "Removal and Installation"</u>.
- 4. Remove differential side oil seal using a flat-bladed screwdriver. **CAUTION:**

Be careful not to scratch transaxle case.

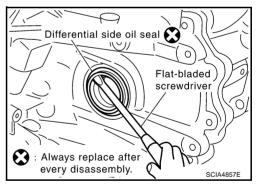

*v*з А

В

ΑT

D

G

Н

J

K

L

IVI

Installation


1. Drive the differential side oil seals into the case until it become flush using the drift below. Refer to dimensions A and B.


Transaxle case

Unit: mm (in)

NOTE:


The differential side oil seal pulling direction is used as the reference

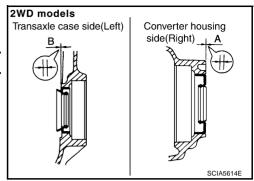

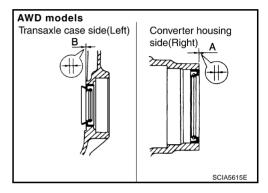

Drift to be used:

Location	2WD models	AWD models
Transaxle case side (Left) Tool number (Kent-Moore No.)	ST33400001 (J-26082)	ST33400001 (J-26082)
Converter housing side (Right) Tool number (Kent-Moore No.)	ST33400001 (J-26082)	KV40100621 (J-25273)

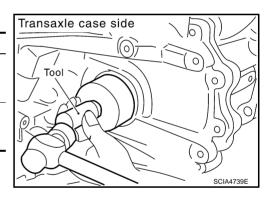

CAUTION:

- Apply ATF to differential side oil seals.
- Do not reuse differential side oil seals.
- 2. Reinstall any part removed.

CAUTION:

If lubricant leak has occurred, after finishing work, check A/T fluid level and fluid leakage. Refer to AT-17, "Checking A/T Fluid".

Revolution Sensor Replacement COMPONENTS


ACS007V4

Α

В

ΑT

D

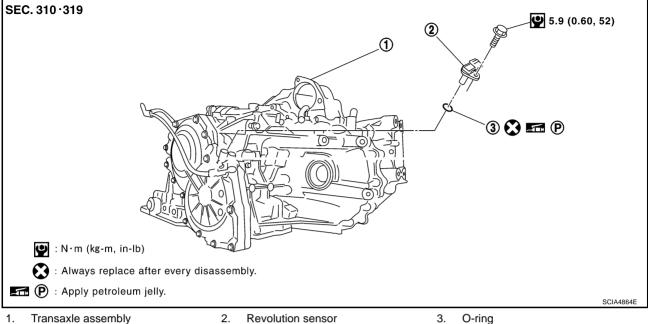


REMOVAL AND INSTALLATION

Revolution sensor

O-ring

Removal

- 1. Remove front tire LH from vehicle with power tool.
- Disconnect revolution sensor harness connector.
- 3. Remove revolution sensor from transaxle assembly.
- Remove O-ring from revolution sensor.

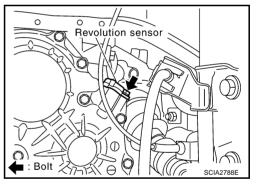

Installation

Note the following, and install in the reverse order of removal.

CAUTION:

- Do not reuse O-ring.
- Apply petroleum jelly to O-ring.


Н

AIR BREATHER HOSE

PFP:31098


Removal and Installation

ACS007ZW

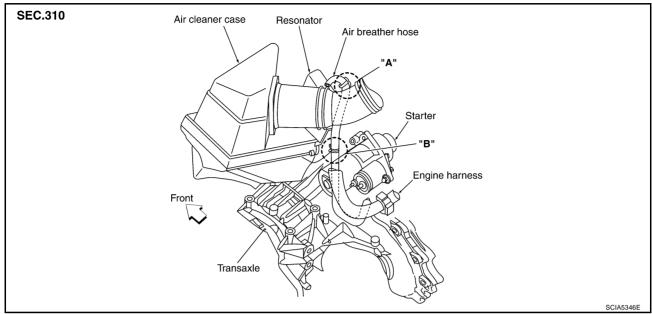


During removal and installation of air breather hose be careful of the following.

Secure a mark "A" when installing air breather hose to resonator.

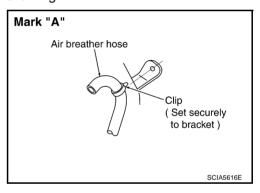

 Secure a mark "B" when installing air breather hose to air cleaner case.

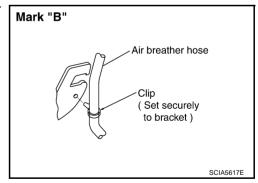

CAUTION:

- When installing an air breather hose, be careful not to be crushed or blocked by folding or bending the hose.
- When inserting a hose to the transaxle tube, be sure to insert it fully until its end reaches the tube bend R portion.
- When inserting a hose to the air breather tube, be sure to insert it fully until its end reaches the tube spool portion.

TRANSAXLE ASSEMBLY

PFP:32020

ACS007V5

В


ΑT

D

Н

M

Removal and Installation COMPONENTS

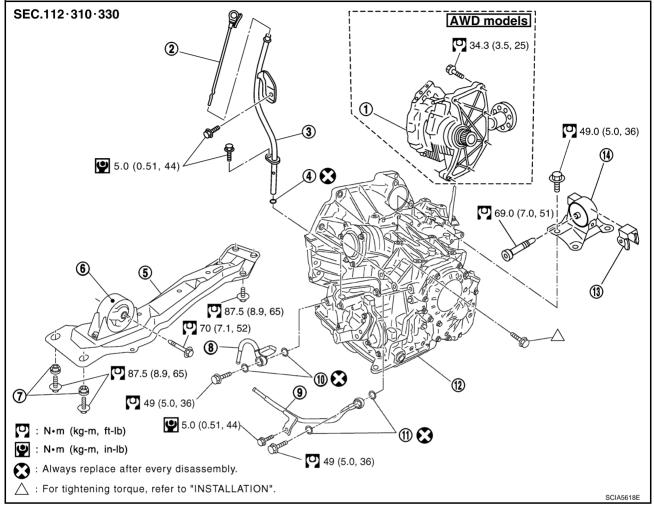

- 1. Transfer assembly
- 4. O-ring
- 7. Grommet
- 10. Copper washer
- 13. Stopper

- 2. A/T fluid level gauge
- 5. Center member
- 8. Fluid cooler tube
- 11. Copper washer
- 14. LH engine mounting insulator
- 3. A/T fluid charging pipe
- 6. Front engine mounting insulator
- 9. Fluid cooler tube
- 12. Transaxle assembly

REMOVAL

CAUTION:

Before separating transaxle from engine, remove the crankshaft position sensor (POS) from cylinder block. Be careful not to damage sensor.


- Remove battery and bracket, air cleaner and air duct.
- 2. Remove air breather hose. Refer to AT-268, "Removal and Installation".
- Disconnect terminal cord assembly harness connector, PNP switch harness connector and revolution sensor harness connector.
- Remove crankshaft position sensor (POS) from cylinder block. Refer to <u>EM-22</u>, "<u>OIL PAN AND OIL STRAINER</u>".


CALITION

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

TRANSAXLE ASSEMBLY

- Disconnect control cable from transaxle assembly. Refer to AT-252. "CONTROL CABLE COMPONENTS".
- 6. Remove exhaust front tube. Refer to EX-3, "Removal and Installation".
- 7. Disconnect A/T fluid cooler hoses.
- Remove front drive shaft. Refer to <u>FAX-13</u>, <u>"FRONT DRIVE SHAFT"</u>.
- 9. Remove transfer assembly. (For AWD models) Refer to <u>TF-48</u>, <u>"Removal and Installation"</u>.
- 10. Remove starter motor with power tool. Refer to <u>SC-16</u>, <u>"Removal and Installation"</u>.
- 11. Support transaxle assembly with a transmission jack.
- 12. Remove center member, front engine mounting insulator and LH engine mounting insulator with power tool.
- 13. Remove suspension member. Refer to <u>FSU-17</u>, "Removal and Installation".

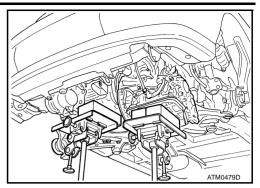

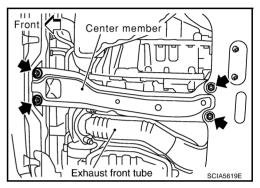


- 14. Remove rear plate cover. Refer to EM-22, "OIL PAN AND OIL STRAINER".
 - Rotate crankshaft to gain access to securing bolts.
- 15. Remove securing bolts between drive plate and torque converter. When turning crankshaft, turn it clockwise as viewed from the front of engine.
- 16. Support engine assembly with a transmission jack.
- 17. Remove bolts fixing transaxle assembly to engine assembly.
- 18. Lower transaxle assembly while supporting it with a transmission jack.
- 19. Remove A/T fluid level gauge from A/T fluid charging pipe.
- 20. Remove A/T fluid charging pipe from transaxle assembly.
- 21. Remove O-ring from A/T fluid charging pipe.


INSPECTION

Installation and Inspection of Torque Converter

 After inserting a torque converter to a transaxle, be sure to check dimension "A" to ensure it is within the reference value limit.

Distance "A": 14 mm (0.55 in) or more

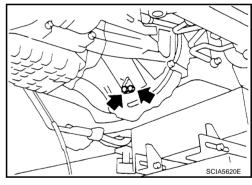

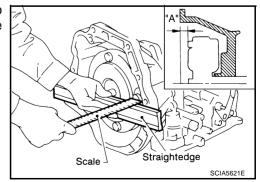

TRANSAXLE ASSEMBLY


INSTALLATION

Install the removed parts in the reverse order of the removal, while paying attention to the following work.

 When installing transaxle assembly to engine assembly, attach the fixing bolts in accordance with the following table.


2WD models

Bolt No.	1	2	3	4	5
Number of bolts	4	2	2	1	1
Bolt length " ℓ "mm (in)	49 (1.93)	40 (1.57)	30 (1.18)	40 (1.57)	45 (1.77)
Tightening torque N·m (kg-m, ft-lb)	75 (7.7,55)	42.7(4.4,31)		35(3	.6,26)

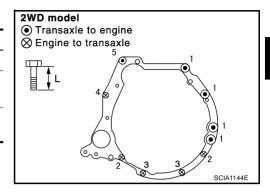

AWD models

Bolt No.	1	2	3	4	5	6
Number of bolts	4	1	2	2	1	1
Bolt length " ℓ "mm (in)	49 (1.93)	45 (1.77)	40 (1.57)	30 (1.18)	40 (1.57)	45 (1.77)
Tightening torque N·m (kg-m, ft-lb)	75 (7	.7,55)	42.7(4.4,31)		35(3	.6,26)

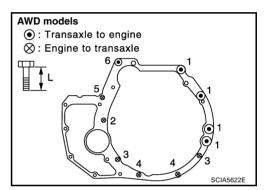


 Align the positions of tightening bolts for drive plate with those of torque converter, and temporarily tighten bolts. Then, tighten the bolts to specified torque.

: 52 N·m (5.3 kg-m, 38 ft-lb)

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of engine.
- When tightening the tightening bolts for torque converter after fixing crankshaft pulley bolts, be sure to confirm the tightening torque of crankshaft pulley mounting bolts.

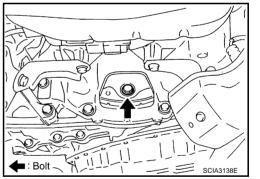

- After converter is installed to drive plate, rotate crankshaft several turns and make sure that transaxle rotates freely without binding.
- After completing installation, check for A/T fluid leakage, A/T fluid level, and the positions of A/T. Refer to AT-17, "Checking A/T Fluid", AT-252, "Adjustment of A/T Position".

Revision: 2005 March AT-271 2005 X-Trail

AT

В

Α

F

Н

ı


K

ı

. .

OVERHAUL PFP:00000

Components

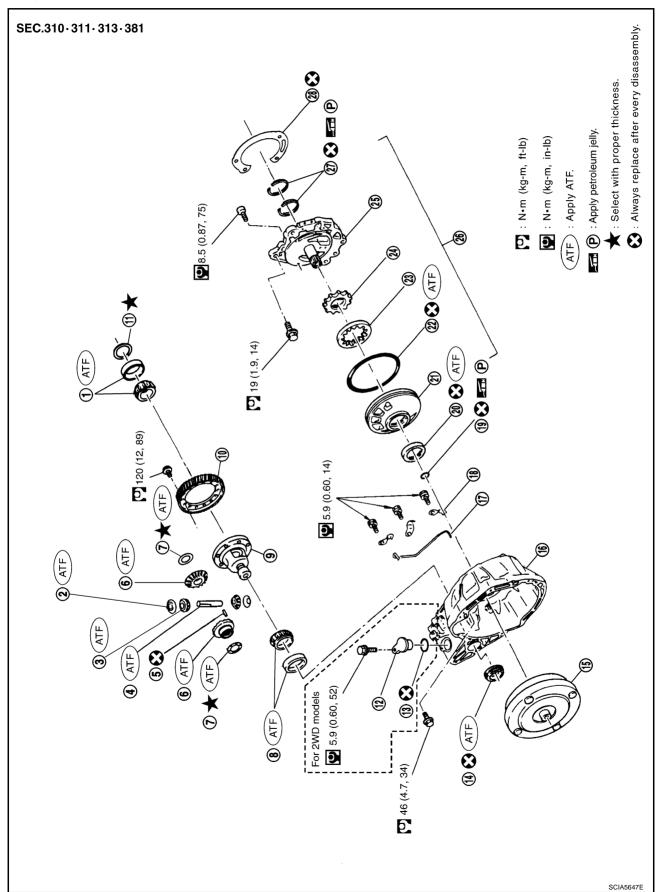

- Differential side bearing
 Pinion mate shaft
- 7. Side gear thrust washer
- 10. Final gear
- 13. O-ring
- 16. Converter housing
- 19. O-ring
- 22. O-ring
- 25. Oil pump cover
- 28. Gasket

- 2. Pinion mate gear thrust washer
- 5. Lock pin
- 8. Differential side bearing
- 11. Differential side bearing adjusting shim
- 14. RH differential side oil seal
- 17. Differential lubricant tube
- 20. Oil pump housing oil seal
- 23. Outer gear
- 26. Oil pump assembly

- 3. Pinion mate gear
- 6. Side gear
- 9. Differential case
- 12. Plug
- 15. Torque converter
- 18. Clip
- 21. Oil pump housing
- 24. Inner gear
- 27. Seal ring

Α

В

ΑT

D

Е

F

G


Н

ı

J

Κ

.

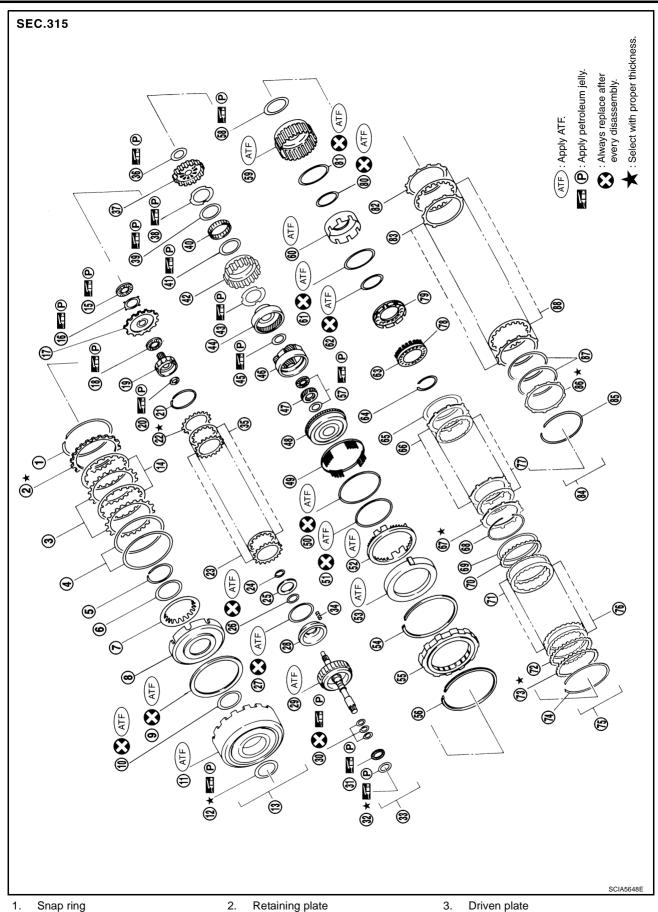

7. Return spring Revision: 2005 March

Dish plate

4.

- 2. Retaining plate
- 5. Snap ring
- Reverse clutch piston
- 3. Driven plate
- 6. Spring retainer
- 9. Seal ring

10.	D-ring	11.	Reverse clutch drum	12.	Thrust washer	
13.	Reverse clutch assembly	14.	Drive plate	15.	Needle bearing	
16.	Bearing race	17.	Front sun gear	18.	Needle bearing	
19.	High clutch hub	20.	Needle bearing	21.	Snap ring	
22.	Retaining plate	23.	Driven plate	24.	Snap ring	
25.	Spring retainer	26.	D-ring	27.	D-ring	_
28.	High clutch piston	29.	Input shaft assembly (high clutch drum)	30.	Seal ring	
31.	Needle bearing	32.	Bearing race	33.	High clutch assembly	
34.	Return spring	35.	Drive plate	36.	Needle bearing	
37.	Overrun clutch hub	38.	Thrust washer	39.	Bearing race	
40.	Forward one-way clutch	41.	Bearing race	42.	Forward clutch hub	
43.	Thrust washer	44.	Rear internal gear	45.	Needle bearing	
46.	Rear planetary carrier	47.	Rear sun gear	48.	Front planetary carrier	
49.	Spring retainer	50.	D-ring	51.	D-ring	
52.	Low & reverse brake piston	53.	Retainer	54.	Snap ring	
55.	Low one-way clutch	56.	Snap ring	57.	Needle bearing	
58.	Needle bearing	59.	Forward clutch drum	60.	Forward clutch piston	
61.	Seal ring	62.	D-ring	63.	Spring retainer	
64.	Snap ring	65.	Dish plate	66.	Driven plate	
67.	Retaining plate	68.	Snap ring	69.	Dish plate	
70.	Retaining plate	71.	Driven plate	72.	Retaining plate	
73.	Retaining plate	74.	Snap ring	75.	Forward clutch assembly and over- run clutch assembly	
76.	Drive plate	77.	Drive plate	78.	Return spring	
79.	Overrun clutch piston	80.	D-ring	81.	Seal ring	
82.	Retaining plate	83.	Driven plate	84.	Low & reverse brake assembly	
85.	Snap ring	86.	Retaining plate	87.	Dish plate	
88.	Drive plate					

AT-275 Revision: 2005 March 2005 X-Trail

А

В

D

Е


F

G

Н

J

Κ

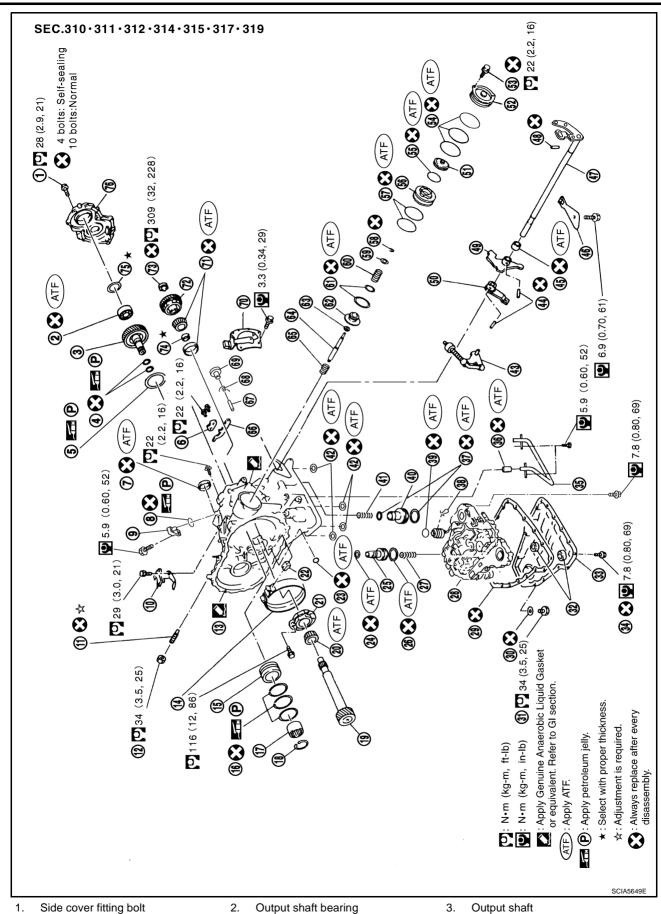

- 4. Seal ring
- 7. LH differential side oil seal
- 2. Output shaft bearing
- 5. Needle bearing
- O-ring

- Output shaft 3.
- 6. Parking actuator support
- 9. Revolution sensor

10.	Bracket	11.	Anchor end pin	12.	Lock nut	
13.	Transaxle case	14.	Brake band	15.	Bearing retainer	
16.	Seal ring	17.	Radial needle bearing	18.	Snap ring	
19.	Reduction pinion gear	20.	Reduction pinion gear bearing inner race	21.	Reduction pinion gear bearing outer race	
22.	Strut	23.	O-ring	24.	O-ring	
25.	Servo release accumulator piston	26.	O-ring	27.	Return spring	
28.	Control valve assembly	29.	Oil pan gasket	30.	Drain plug gasket	ľ
31.	Drain plug	32.	Magnet	33.	Oil pan	
34.	Oil pan fitting bolt	35.	Low & reverse brake tube	36.	Oil sleeve	
37.	O-ring	38.	Snap ring	39.	O-ring	
40.	N-D accumulator piston	41.	Return spring	42.	Lip seal	
43.	Parking rod	44.	Retaining pin	45.	Manual shaft oil seal	
46.	Detent spring	47.	Manual shaft	48.	Retaining pin	
49.	Manual plate	50.	Parking rod plate	51.	O/D servo piston	
52.	O/D servo piston retainer	53.	O/D servo piston retainer fitting bolt	54.	O-ring	
55.	D-ring	56.	Servo piston retainer	57.	O-ring	
58.	E-ring	59.	Spring retainer	60.	O/D servo return spring	
61.	D-ring	62.	Band servo piston	63.	Band servo thrust washer	
64.	Band servo piston stem	65.	2nd servo return spring	66.	Parking pawl	
67.	Parking shaft	68.	Return spring	69.	Parking pawl spacer	
70.	PNP switch	71.	Idler gear bearing	72.	Idler gear	
73.	ldler gear lock nut	74.	Reduction pinion gear adjusting shim	75.	Output shaft adjusting shim	
76.	Side cover					

Revision: 2005 March AT-277 2005 X-Trail

В

А

١I

D

Е

F


G

Н

K

J

Oil Channel

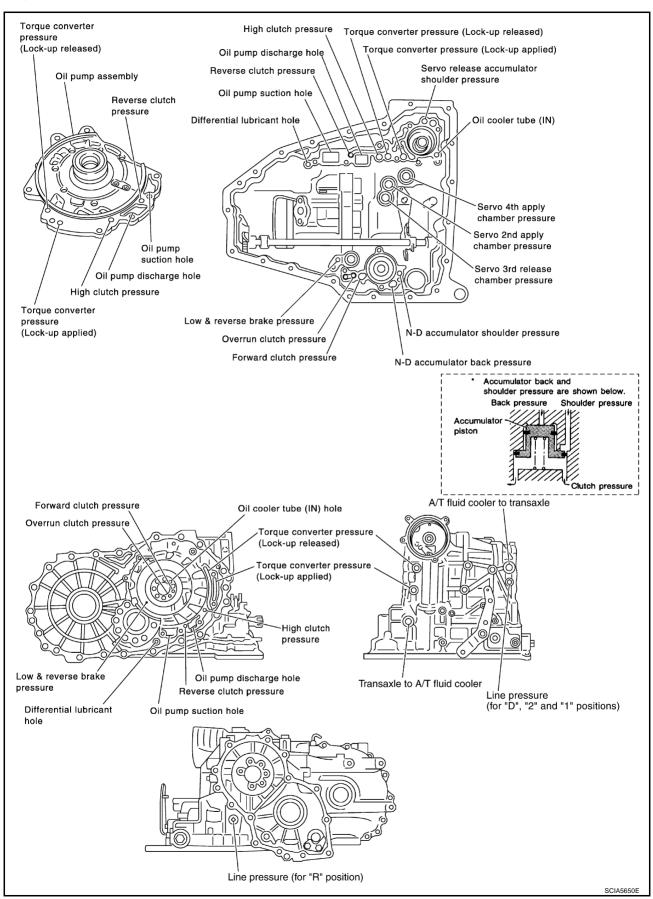

Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings

ACS007V9

Α

В

ΑT

D

Outer dia	meter of thrust	washers			Outer an	d inner diamete		
Item number	Outer diamete mm (in)	Part ni	umber*2		Item number	Outer diameter mm (in)	Inner diameter mm (in)	Part number*2
①*1	76.0 (2.992)		3 - 31508 80X20		(A)	49.1 (1.933)	35.2 (1.386)	31407 80X10
® ^{*1}	80.0 (3.150)	31438 80X60	- 31438 80X70		B	42.0 (1.654)	23.7 (0.933)	31407 80X01
					©	70.0 (2.756)	50.0 (1.969)	31407 80X09
					(D)	51.0 (2.008)	33.1 (1.303)	31407 80X02
		©	B (A))	Ē	48.0 (1.890)	30.0 (1.181)	31407 80X03
					Ē	49.1 (1.933)	35.1 (1.382)	31407 80X10
	S	B / [] \	G	56.5 (2.224)	38.5 (1.516)	31407 80X08
d		Pm \			H	87.0 (3.425)	69.0 (2.717)	31407 80X07
A			$\langle \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	ソ	①	108.0 (4.252)	85.15 (3.3524)	31407 80X24
H								D *¹
D)*1
① (III)								©
© ((F)	() () () () () () () () () ()						№ *1
	nner diameter o		,		Ħ	Outor dia	meter of snap ri	nge
	shims and adju			1			Outer diameter	
Item (number	Outer diameter mm (in)	Inner diameter mm (in)	Part numb	er*2		number	mm (in)	Part number*2
	` ,	. ,	31435 80X00 - 31			0	150 (5.91)	31506 80X13
L *1	51.0 (2.008)	36.0 (1.417)	31435 80X09 - 31			P	119.1 (4.689)	31506 80X06
			31439 85X01 - 31 31439 83X11 - 31			Q	182.8 (7,197)	31506 80X08
M *1	38.0 (1.496)	28.1 (1.106)	31439 81X00 - 31 31439 81X46 - 31	1439 81X24		®	144.8 (5.701)	31506 80X03
			31439 81X46 - 31 31439 81X60 - 31			S	173.8 (6.843)	31506 80X09

⁽N)*1 75.0 (2.953) 67. *1: Select proper thickness.

SCIA5660E

31506 80X01

133.9 (5.272)

1

Revision: 2005 March AT-279 2005 X-Trail

31439 81X60 - 31439 81X74

67.0 (2.638) 31438 80X00 - 31438 80X11


^{*2:} Always check with the Parts Department for the latest parts information.

DISASSEMBLY PFP:31020


Disassembly

ACS007VA


- 1. Drain ATF through drain plug.
- 2. Remove drain plug gasket from drain plug.

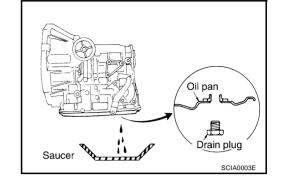


3. Remove torque converter.

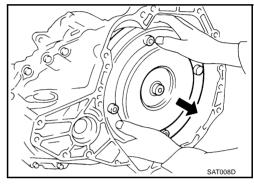

- Check torque converter one-way clutch using check tool as shown in the right figure.
- a. Insert check tool into groove of bearing support built into one-way clutch outer race.
- b. When fixing bearing support with check tool, rotate one-way clutch spline using screwdriver.
- Make sure that inner race rotates clockwise only. If not, replace torque converter assembly.

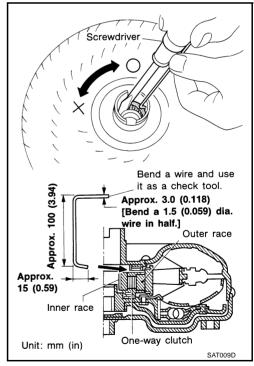


- Set manual shaft to "P" position.
- 6. Remove PNP switch.
- 7. Remove bracket from transaxle case.
- 8 Remove revolution sensor from transaxle case.
- Remove O-ring from revolution sensor.

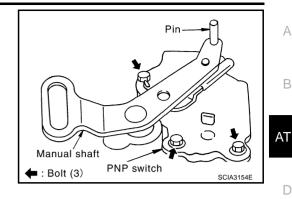


- 10. Remove oil pan fitting bolts.
- 11. Remove oil pan and oil pan gasket.
- 12. Check foreign materials in oil pan to help determine causes of malfunction. If the A/T fluid is very dark, smells burned, or contains foreign particles, frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.
 - If frictional material is detected, perform A/T fluid cooler cleaning. Refer to AT-18, "A/T Fluid Cooler Cleaning".
- 13. Remove magnets from oil pan.
- 14. Remove control valve assembly according to the following procedures.
- a. Remove snap ring from terminal body.

CAUTION:

Do not expand snap ring excessively.

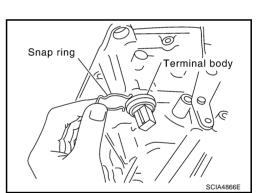

b. Push terminal body into transaxle case and draw out terminal cord assembly.

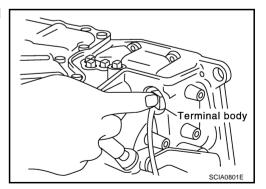

В

D


Н

SCIA3476E

c. Remove control valve assembly fixing bolts A, B and C.

Bolt length, number and location:

Bolt symbol	А	В	С
Bolt length " ℓ " mm (in)	40.0 (1.575)	33.0 (1.299)	43.5 (1.713)
Number of bolts	5	6	2

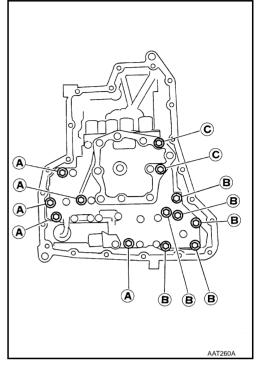


15. Remove manual valve from control valve assembly.


CAUTION:

Be careful not to drop manual valve.

16. Remove O-ring from terminal body.

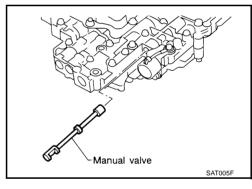


17. Remove return spring from servo release accumulator piston.

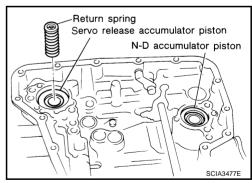

18. Remove servo release accumulator piston with compressed air.

CAUTION:


- Strong flow of air will push accumulator piston out along with a splash of oil. Cover the area with paper towels and blow air little by little to avoid this.
- Wrap the removed accumulator piston in a paper towel.

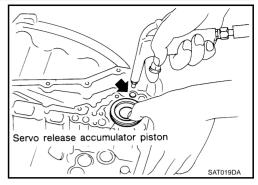


- 19. Remove O-rings from servo release accumulator piston.
- 20. Remove N-D accumulator piston and return spring with compressed air.

CAUTION:

- Strong flow of air will push accumulator piston out along with a splash of oil. Cover the area with paper towels and blow air little by little to avoid this.
- Wrap the removed accumulator piston in a paper towel.
- 21. Remove O-rings from N-D accumulator piston.

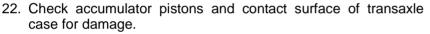

23. Check return springs for damage and free length.

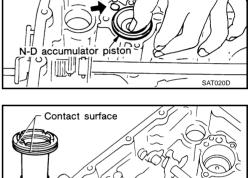


Contact surface

N-D accumulator piston

SAT023DA

24. Remove lip seals from oil groove for band servo.

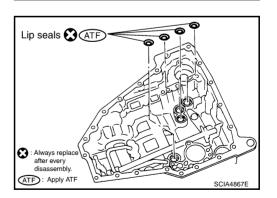

Servo release accumulator piston

Α

AT

В


D

0


Н

J


25. Remove low & reverse brake tube and oil sleeve.

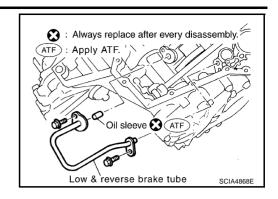


- 26. Remove converter housing according to the following procedures.
- a. Remove converter housing mounting bolts.
- b. Remove converter housing by lightly tapping it with a soft hammer.

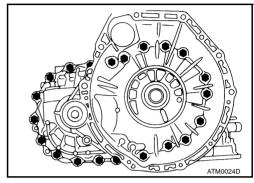


c. Remove O-ring from differential oil port.

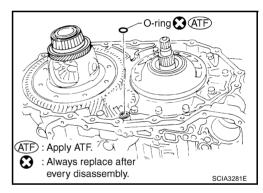


27. Remove final drive assembly from transaxle case.

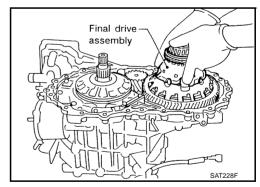

28. Remove differential side bearing outer race from transaxle case.

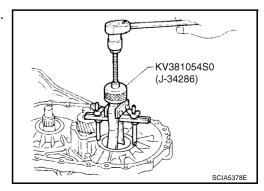

29. Remove differential side bearing adjusting shim from transaxle case.

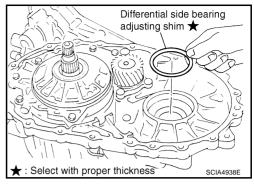

В


ΑT

D

Н

M


30. Remove differential side bearing outer race from converter housing.

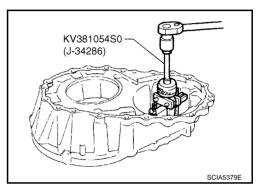


31. Remove RH differential side oil seal with flat-bladed screwdriver from converter housing.

CAUTION:


Be careful not to damage converter housing.

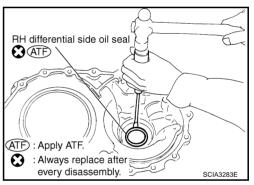


- 32. Remove differential lubricant tube from converter housing.
- 33. Remove plug from converter housing. (For 2WD models)
- 34. Remove O-ring from plug. (For 2WD models)

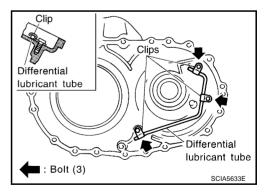


- 35. Remove oil pump assembly according to the following procedures.
- a. Remove O-ring from input shaft assembly (high clutch drum).

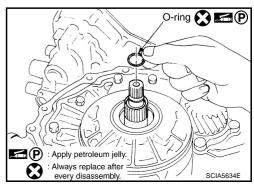


b. Remove oil pump assembly and gasket from transaxle case.

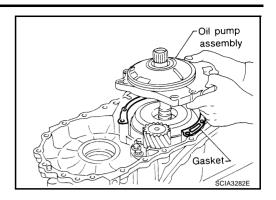


Remove thrust washer and bearing race from oil pump assembly.

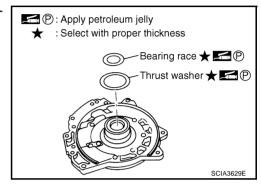

- 36. Remove brake band according to the following procedures.
- a. Loosen lock nut, then back off anchor end pin.

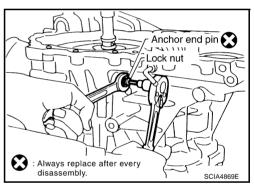


b. Remove brake band and strut from transaxle case.

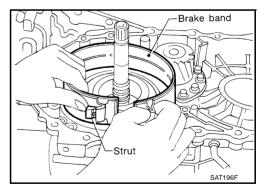


 To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing brake band, always secure it with a clip as shown in the right figure.

Leave the clip in position after removing brake band.

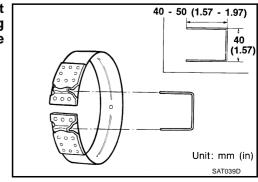

Check brake band facing for damage, cracks, wear or burns.

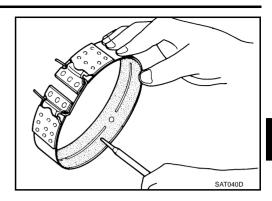

ΑT

D

Е

Н


M

В


37. Remove input shaft assembly (high clutch assembly) and reverse clutch assembly according to the following procedures.

AT-287


 Remove input shaft assembly (high clutch assembly) with reverse clutch assembly.

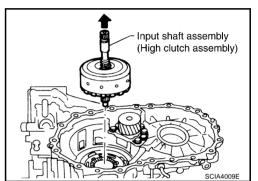

b. Remove input shaft assembly (high clutch assembly) from reverse clutch drum.

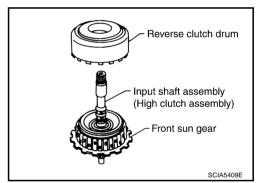


c. Remove needle bearing from input shaft assembly (high clutch drum) and check for damage or wear.

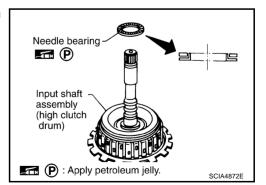


2005 X-Trail


d. Remove high clutch hub (with front sun gear) and needle bearing from input shaft assembly (high clutch drum) and check for damage or wear.

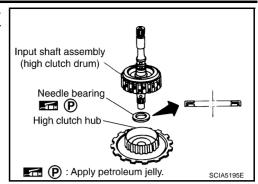


- e. Remove front sun gear and needle bearing from high clutch hub and check for damage or wear.
- f. Remove bearing race from front sun gear and check for damage or wear.

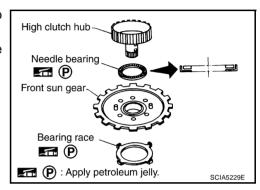


38. Remove needle bearing from transaxle case and check for damage or wear.

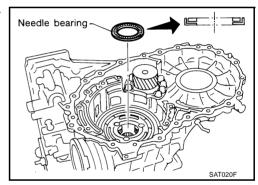


39. Apply compressed air and check to see that low & reverse brake operates.

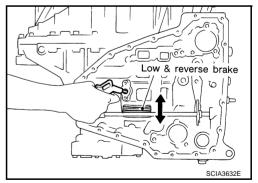


- 40. Remove low one-way clutch and front planetary carrier according to the following procedures.
- Remove snap ring with flat-bladed screwdriver.

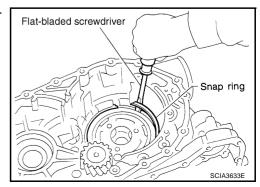


- b. Remove low one-way clutch with a hook made of wire.
- c. Check low one-way clutch for damage or wear.

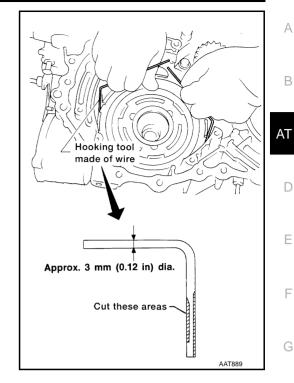

d. Remove snap ring with flat-bladed screwdriver.

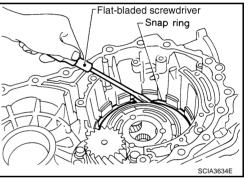

e. Remove front planetary carrier with low & reverse brake piston and retainer.

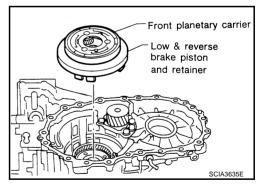


M


f. Remove spring retainer.

CAUTION:


Do not remove return springs from spring retainer.

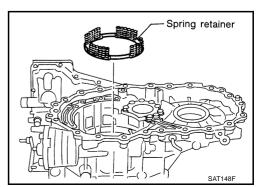

g. Make sure that low one-way clutch rotates in the direction of clockwise arrow and locks in opposite direction.

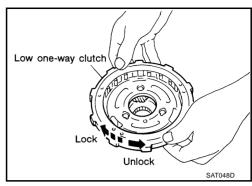

- h. Remove needle bearing, low & reverse brake piston and retainer from front planetary carrier.
- i. Check front planetary carrier, low & reverse brake piston, retainer and needle bearing for damage or wear.

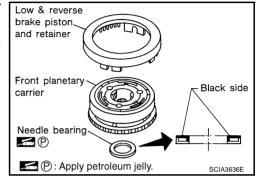


j. Check clearance between pinion washer and front planetary carrier with feeler gauge.

Standard clearance: 0.20 - 0.70 mm


(0.0079 - 0.0276 in)

Allowable limit: 0.80 mm (0.0315 in)


Replace front planetary carrier if the clearance exceeds allowable limit.

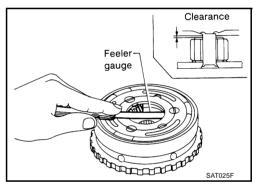


- 41. Remove rear planetary carrier and rear sun gear according to the following procedures.
- Remove rear planetary carrier (with rear sun gear) from transaxle case.

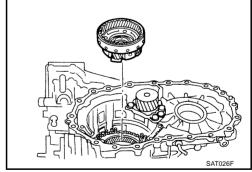

b. Remove rear sun gear from rear planetary carrier.

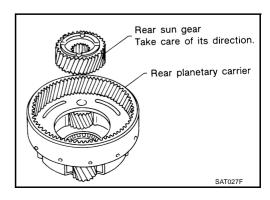

- c. Remove needle bearings from rear planetary carrier.
- d. Check rear planetary carrier, rear sun gear and needle bearings for damage or wear.

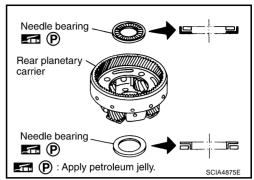

В

ΑT

D

M


e. Check clearance between pinion washer and rear planetary carrier with feeler gauge.

Standard clearance: 0.20 - 0.70 mm


(0.0079 - 0.0276 in)

Allowable limit: 0.80 mm (0.0315 in)


Replace rear planetary carrier if the clearance exceeds allowable limit.

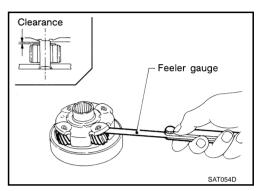


42. Remove rear internal gear and forward clutch hub from transaxle case.

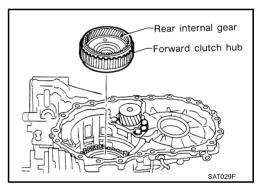

43. Remove overrun clutch hub from transaxle case.

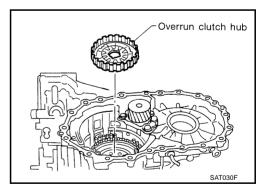


44. Remove needle bearing from overrun clutch hub and check for damage or wear.

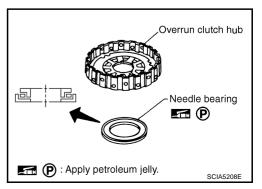


Revision: 2005 March AT-291 2005 X-Trail

45. Remove forward clutch assembly and overrun clutch assembly from transaxle case.

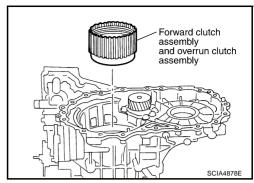


46. Remove needle bearing from transaxle case and check for damage or wear.

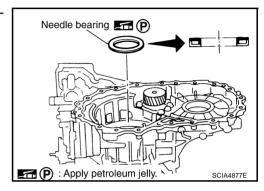

- Remove output shaft assembly according to the following procedures.
- a. Remove side cover fitting bolts.

CAUTION:


- Do not mix bolts A and B.
- Always replace bolts A as they are self-sealing bolts.

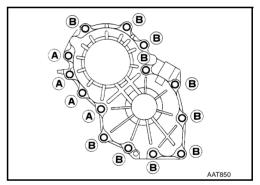


b. Remove side cover by lightly tapping it with a soft hammer.

CAUTION:


- Be careful not to drop output shaft assembly. It might come out when removing side cover.
- Be careful not to damage side cover.

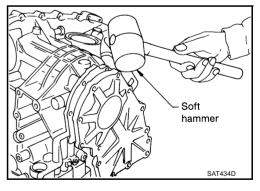

c. Remove output shaft adjusting shim.

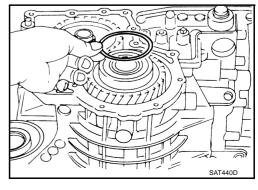

d. Remove output shaft assembly.

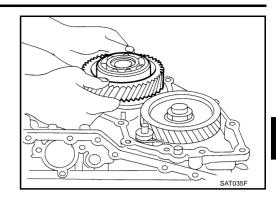

В

ΑT


D

M


• If output shaft assembly came off with side cover, tap side cover with a soft hammer to separate.

CAUTION:


Be careful not to damage side cover.

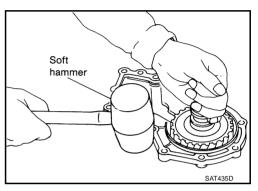


e. Remove needle bearing.

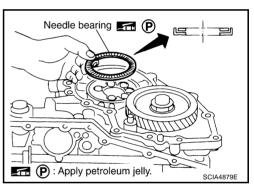

f. Remove bearing retainer from transaxle case.

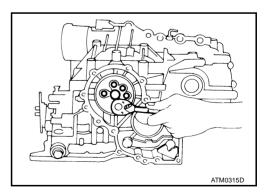


- 48. Disassemble reduction pinion gear according to the following procedures.
- a. Set manual shaft to "P" position to fix idler gear.
- b. Unlock idler gear lock nut, using a pin punch.

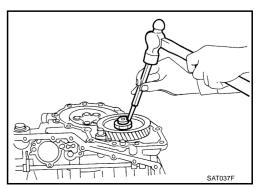


c. Remove idler gear lock nut.

CAUTION:


Do not reuse idler gear lock nut.

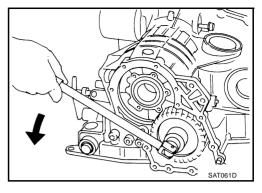


d. Remove idler gear with puller.

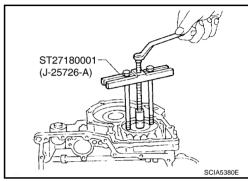


- e. Remove reduction pinion gear.
- f. Remove reduction pinion gear adjusting shim from reduction pinion gear.

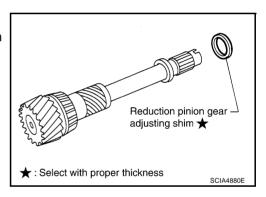

- 49. Remove return spring and parking pawl spacer with flat-bladed screwdriver from parking shaft.
- 50. Draw out parking shaft and remove parking pawl from transaxle case.
- 51. Check parking pawl and parking shaft for damage or wear.

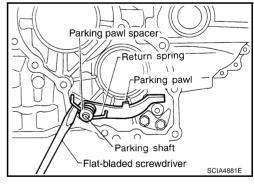


- 52. Remove parking actuator support from transaxle case.
- 53. Check parking actuator support for damage or wear.

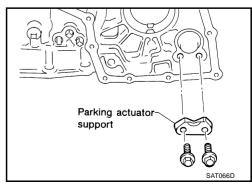

54. Remove LH differential side oil seal with flat-bladed screwdriver from transaxle case.

CAUTION:

Be careful not to scratch transaxle case.

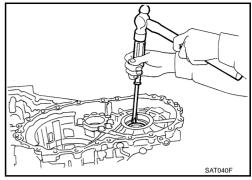

Α

В

ΑT

D

Е

G

F

Н

K


ı

REPAIR FOR COMPONENT PARTS

PFP:00000

Manual Shaft COMPONENTS

ACS007VB

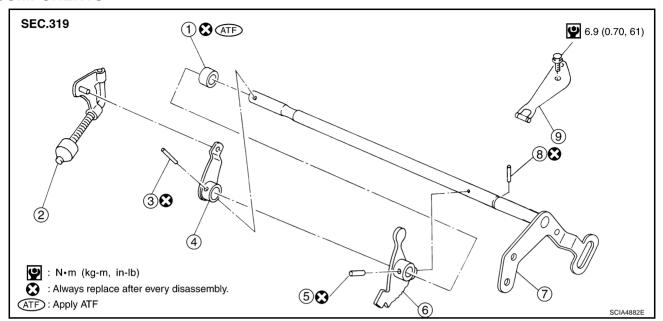


- 1. Manual shaft oil seal
- 4. Parking rod plate
- 7. Manual shaft

- 2. Parking rod
- 5. Retaining pin
- 8. Retaining pin


- 3. Retaining pin
- 6. Manual plate
- Detente spring

REMOVAL


1. Remove detente spring from transaxle case.

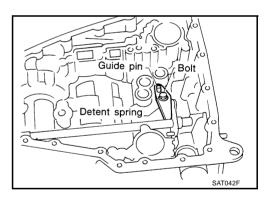


2. Drive out manual plate retaining pin.

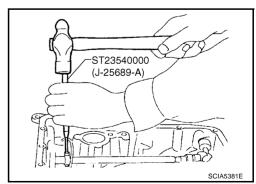

- 3. Drive and pull out parking rod plate retaining pin.
- 4. Remove parking rod plate (with parking rod) from manual shaft.
- Draw out parking rod (with parking rod plate) from transaxle case
- 6. Remove parking rod from parking rod plate.

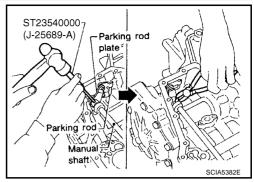


- 7. Pull out manual shaft retaining pin.
- 8. Remove manual shaft and manual plate from transaxle case.

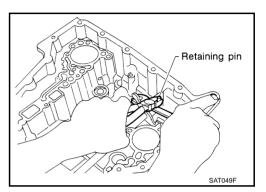

9. Remove manual shaft oil seal.

CAUTION:

Be careful not to scratch transaxle case.

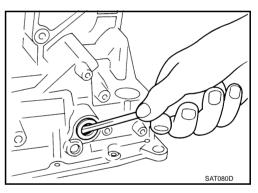

INSPECTION


• Check component parts for wear or damage. Replace if necessary.

INSTALLATION

1. Use a drift [commercial service tool ϕ 22 mm (0.87 in)] to drive manual shaft oil seal into the transaxle case.

CAUTION:

- Do not reuse manual shaft oil seal.
- Apply ATF to outer surface of manual shaft oil seal.
- 2. Install parking rod to parking rod plate.

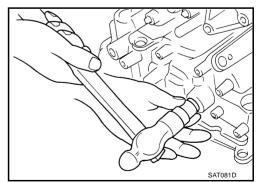

В

ΑТ


D

0

Н

I\ /I


- 3. Install manual shaft and manual plate.
- 4. Install parking rod plate (with parking rod) on manual shaft.

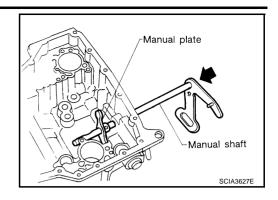

- 5. Align groove of manual shaft and hole of transaxle case.
- 6. Install manual shaft retaining pin up to bottom of hole.

CAUTION:


Do not reuse retaining pin.

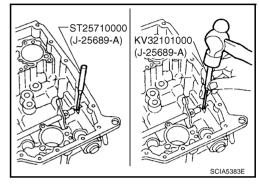

7. Set parking rod plate onto manual shaft and drive retaining pin.

CAUTION:


- Do not reuse retaining pin.
- Both ends of pin should protrude.

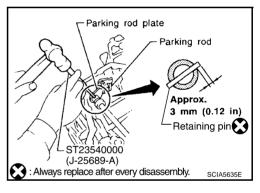


8. Install manual plate retaining pin.

CAUTION:

- Do not reuse retaining pin.
- Both ends of pin should protrude.

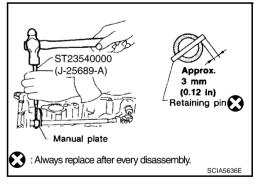

 Install detente spring on transaxle case. Tighten detente spring fitting bolt to the specified torque. Refer to <u>AT-296, "COMPO-NENTS"</u>.

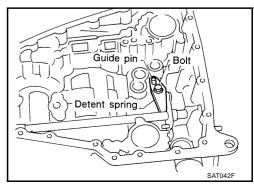

Oil Pump COMPONENTS

ACS007VC

SEC. 313

②

ATF

③

ST

ATF

Apply ATF

Apply ATF.

Apply ATF.

Apply ATF.

Apply ATF.

1. Oil pump housing oil seal

7 🐼 🗺 🕑


- 4. Outer gear
- 7. Seal ring

- 2. Oil pump housing
- 5. Inner gear


- 3. O-ring
- 6. Oil pump cover

DISASSEMBLY

1. Remove seal rings.

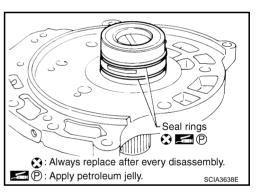

2. Loosen bolts in a crisscross pattern and remove oil pump cover.

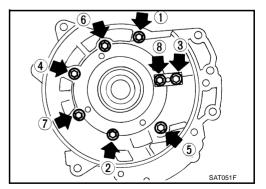

Α

В

ΑT

D

Е

G

SCIA3341E


Н

J


K

L

3. Remove inner gear and outer gear from oil pump housing.

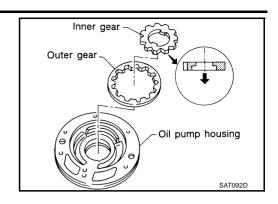


4. Remove O-ring from oil pump housing.

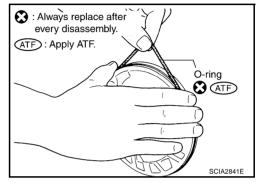

5. Remove oil pump housing oil seal with flat-bladed screwdriver. **CAUTION:**

Be careful not to scratch oil pump housing.

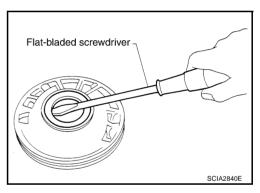

INSPECTION

Oil Pump Housing, Oil Pump Cover, Inner Gear and Outer Gear


Check for wear or damage.

Side Clearances

 Measure side clearance of inner gear and outer gear in at least four places around each outside edge. Maximum measured values should be within specified positions.

Standard clearance: 0.030 - 0.050 mm (0.0012 - 0.0020 in)

- If clearance is less than standard, select inner gear and outer gear as a set so that clearance is within specifications. Refer to AT-390, "Planetary Carrier and Oil Pump".
- If clearance is more than standard, replace whole oil pump assembly except oil pump cover.

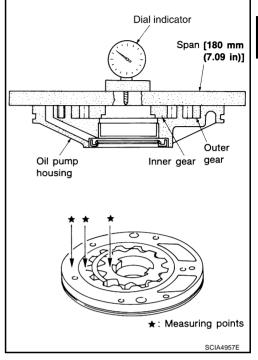


Measure clearance between outer gear and oil pump housing.

Standard clearance: 0.111 - 0.181 mm

(0.0044 - 0.0071 in)

Allowable limit: 0.181 mm (0.0071 in)

 If not within allowable limit, replace whole oil pump assembly except oil pump cover.

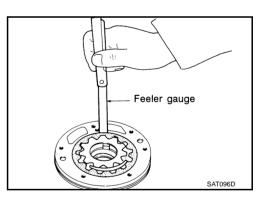


Seal Ring Clearance

Measure clearance between seal ring and ring groove.

Standard clearance: 0.1 - 0.25 mm (0.0039 - 0.0098 in)

Allowable limit: 0.25 mm (0.0098 in)

If not within allowable limit, replace oil pump cover assembly.

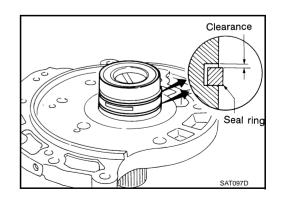

В

Α

ΑT

D

F

F

G

Н

J


Κ

ASSEMBLY

1. Install oil pump housing oil seal on oil pump housing.

CAUTION:


- Do not reuse oil pump housing oil seal.
- Apply ATF to outer surface of oil pump housing oil seal.

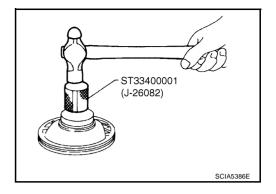

2. Install O-ring on oil pump housing.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.

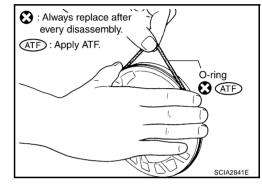

3. Install inner gear and outer gear on oil pump housing.

CAUTION:

Be careful of direction of inner gear.

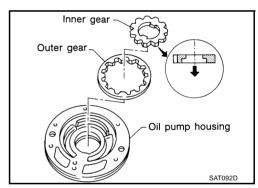


- 4. Install oil pump cover on oil pump housing.
- Wrap masking tape around splines of oil pump cover assembly to protect seal. Position oil pump cover assembly on oil pump housing assembly, then remove masking tape.
- b. Tighten bolts in a crisscross pattern. Tighten oil pump cover bolts to the specified torque. Refer to AT-299, "COMPONENTS"

5. Install new seal rings carefully after packing ring groove with petroleum jelly.

CAUTION:

- Do not spread gap of seal rings excessively while installing. The seal rings may be deformed.
- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

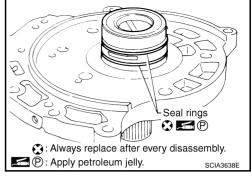

Α

В

ΑT

D

Е

G

F


Н

<

ı

Control Valve Assembly COMPONENTS

ACS007VD

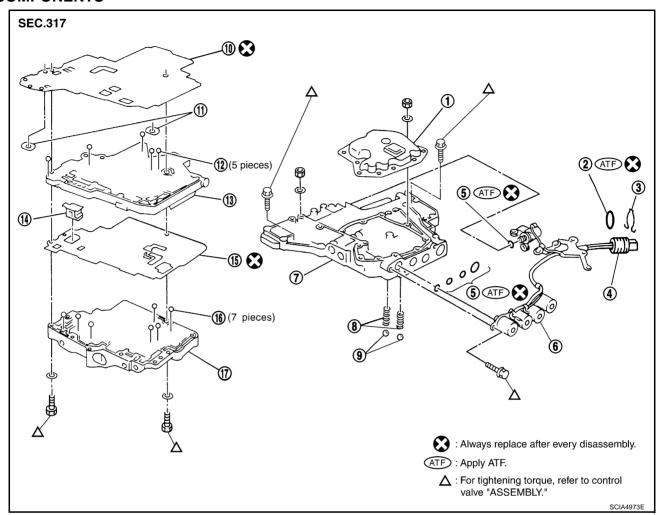

- 1. Oil strainer
- 4. Terminal body
- 7. Control valve lower body
- 10. Separating plate
- 13. Control valve inter body
- 16. Steel ball

- 2. O-ring
- 5. O-ring
- 8. Oil cooler relief valve spring
- 11. Support plate
- 14. Pilot filter
- 17. Control valve upper body
- 3. Snap ring
- 6. Solenoid valve assembly
- 9. Check ball
- 12. Steel ball
- 15. Separating plate


DISASSEMBLY

Disassemble control valve upper, inter and lower bodies.


Bolt length, number and location:

Bolt symbol	а	b	С	d	е	f	g
Bolt length " ℓ " mm (in)	13.5 (0.531)	58.0 (2.283)	40.0 (1.575)	66.0 (2.598)	33.0 (1.299)	78.0 (3.071)	18.0 (0.709)
Number of bolts	6	3	6	11	2	2	1


f: Reamer bolt and nut.

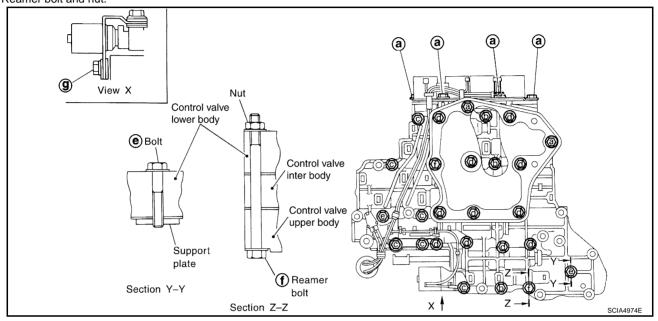

1. Remove bolts **a** , **d** , reamer bolt **f** and nut, and then remove oil strainer from control valve assembly.

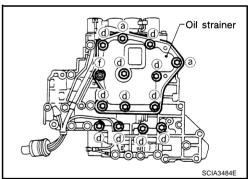

2. Remove bolts **a**, **c**, **g**, solenoid valve assembly and line pressure solenoid valve from control valve assembly.

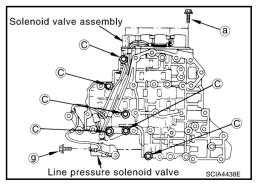

Α

В

АТ

D


Е

G

Н

IZ.


Remove O-rings from solenoid valves and terminal body.

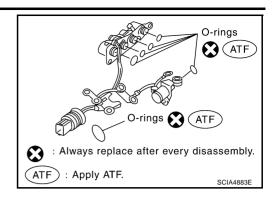


 Place control valve upper body facedown, and remove bolts b, and nut f.

CAUTION:


Remove bolts with control valve upper body facing down, because control valve upper body and control valve inter body may come off and steel ball may fall and be lost.

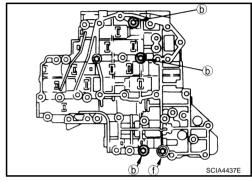

5. Remove control valve lower body from control valve inter body.

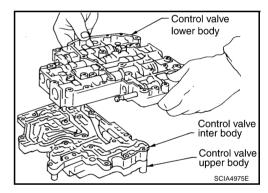


- 6. Turn over control valve lower body.
- 7. Remove bolts **e** , separating plate and support plates from control valve lower body.

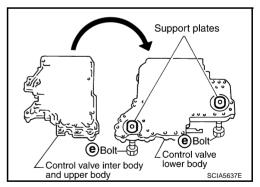


8. Remove check balls and oil cooler relief valve springs from control valve lower body.

CAUTION:

Be careful not to lose check balls and oil cooler relief valve springs.

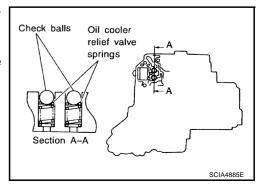

9. Remove control valve inter body from control valve upper body.

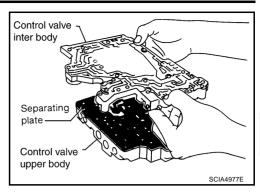


AT

10. Check to see that steel balls are properly positioned in control valve inter body and then remove them.

CAUTION:

Be careful not to lose steel balls.


- 11. Remove pilot filter from control valve upper body.
- 12. Remove separating plate from control valve upper body.

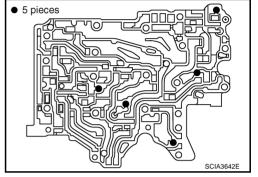

13. Check to see that steel balls are properly positioned in control valve upper body and then remove them.

CAUTION:

Be careful not to lose steel balls.

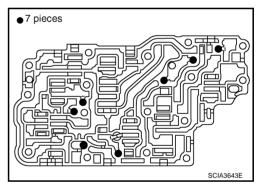


INSPECTION

Control Valve Lower Body and Upper Body

CAUTION:

Be careful not to lose these parts.

 Check to see that retainer plates are properly positioned in control valve lower body.

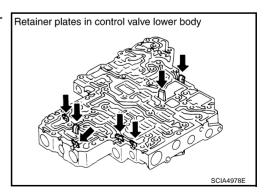

В

D

G


Н

J

K


IVI

 Check to see that retainer plates are properly positioned in control valve upper body.

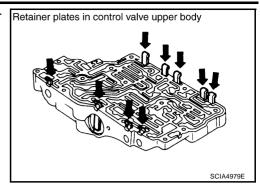

Oil Strainer

Check wire netting of oil strainer for damage.

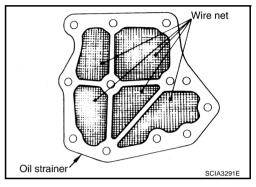


Shift Solenoid Valves "A" and "B", Line Pressure Solenoid Valve, Torque Converter Clutch Solenoid Valve and Overrun Clutch Solenoid Valve


- Measure resistance.
- For shift solenoid valve A, refer to <u>AT-166, "Component Inspection"</u>.
- For shift solenoid valve B, refer to <u>AT-171, "Component Inspection"</u>.
- For line pressure solenoid valve, refer to <u>AT-161, "Component Inspection"</u>.
- For torque converter clutch solenoid valve, refer to <u>AT-146</u>, <u>"Component Inspection"</u>.
- For overrun clutch solenoid valve, refer to <u>AT-181, "Component Inspection"</u>.
- For A/T fluid temperature sensor, refer to AT-108, "Component Inspection".



- Check springs for damage or deformation.
- Measure free length and outer diameter. Refer to <u>AT-386, "Control Valves"</u>.

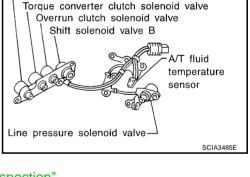


Shift solenoid valve A

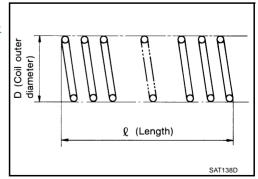

ASSEMBLY

- 1. Install control valve upper, inter and lower body.
- a. Place oil circuit of control valve upper body face up. Install steel balls in their proper positions.

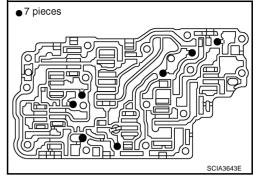

ΑT

D

F


Α

В


b. Install reamer bolts **f** from bottom of control valve upper body. Using reamer bolts as guides, install separating plate as a set.

CAUTION:


Do not reuse separating plate.

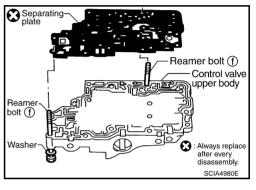

c. Install pilot filter.

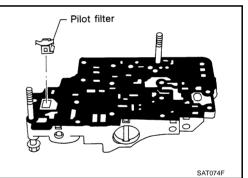

d. Place control valve inter body as shown in the figure (side of control valve lower body face up). Install steel balls in their proper positions.

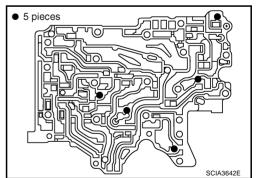

т

Н


J

K


e. Install control valve inter body on control valve upper body using reamer bolts **f** as guides.

CAUTION:

Be careful not to dislocate or drop steel balls.

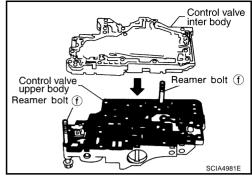

f. Install check balls and oil cooler relief valve springs in their proper positions in control valve lower body.

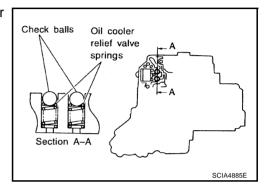


g. Install bolts **e** from bottom of control valve lower body. Using bolts **e** as guides, install separating plate as a set.


CAUTION:

Do not reuse separating plate.

h. Install support plates on control valve lower body.

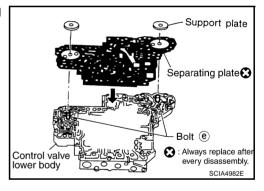


i. Install control valve lower body on control valve inter body using reamer bolts **f** as guides and tighten reamer bolts **f** slightly.

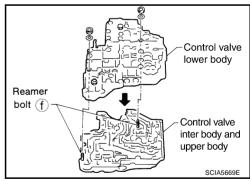

2. Install O-rings on solenoid valves and terminal body.

CAUTION:

- Do not reuse O-rings.
- Apply ATF to O-rings.

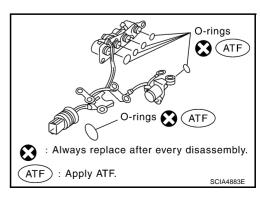


3. Install and tighten bolts.


Bolt length, number and location:

Bolt symbol	а	b	С	d	е	f	g
Bolt length " ℓ " mm (in)	13.5 (0.531)	58.0 (2.283)	40.0 (1.575)	66.0 (2.598)	33.0 (1.299)	78.0 (3.071)	18.0 (0.709)
Number of bolts	6	3	6	11	2	2	1
Tightening torque N·m (kg-m, in-lb)	7.8 (0.80, 69)			4.0 (0.41, 35)	7.8 (0.80, 69)		


f: Reamer bolt and nut.

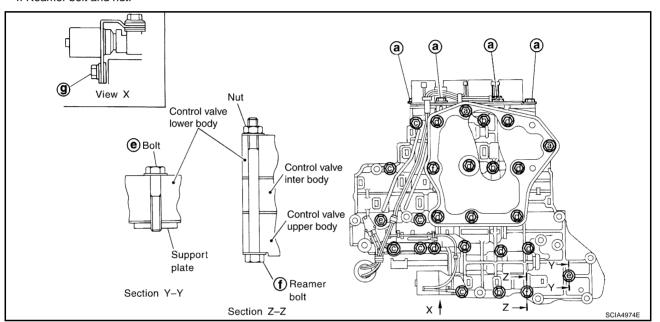

- a. Install and tighten bolts **b** and nut **f** to specified torque.
 - : 7.8 N-m (0.80 kg-m, 69 in-lb)

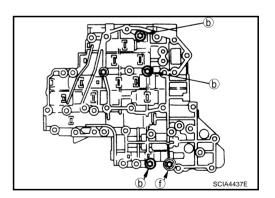

- b. Install solenoid valve assembly and line pressure solenoid valve on control valve assembly.
- c. Tighten bolts **a** , **c** and **g** to specified torque.
 - : 7.8 N·m (0.80 kg-m, 69 in-lb)

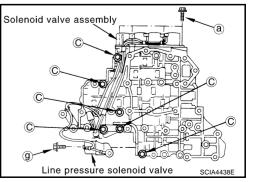

А

ΑТ

В

D

F

F

G

Н

1


K

L

d. Set oil strainer, then tighten bolts **a** , **d** and nut **f** to specified torque.




: 7.8 N-m (0.80 kg-m, 69 in-lb)

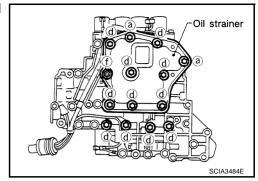

e. Tighten bolts e to specified torque.



: 4.0 N·m (0.41 kg-m, 35 in-lb)

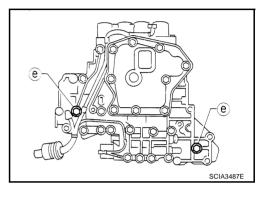

Control Valve Upper Body COMPONENTS ACS007VE Α SEC. 317 В ΑT (8) D Е G Н (%) (2) M

SCIA2960J


1.	Retainer plate	2.	Plug	3.	Cooler check valve spring
4.	Cooler check valve	5.	Control valve upper body	6.	Pilot valve
7.	Pilot valve spring	8.	Retainer plate	9.	1-2 accumulator retainer plate
10.	1-2 accumulator piston spring	11.	1-2 accumulator piston	12.	Plug
13.	Retainer plate	14.	Retainer plate	15.	Plug
16.	1st reducing valve	17.	1st reducing valve spring	18.	Retainer plate
19.	3-2 timing valve spring	20.	3-2 timing valve	21.	Retainer plate
22.	Plug	23.	Overrun clutch reducing valve	24.	Overrun clutch reducing valve spring
25.	Retainer plate	26.	Torque converter relief valve spring	27.	Torque converter relief valve
28.	Retainer plate	29.	Sleeve	30.	Plug
31.	Torque converter clutch control valve spring	32.	Torque converter clutch control valve	33.	Retainer plate
34.	Plug	35.	1-2 accumulator valve spring	36.	1-2 accumulator valve

DISASSEMBLY


1. Remove valves at retainer plates.

CAUTION:

Do not use a magnetic pick-up tool.

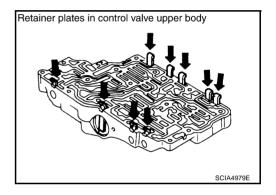


a. Use a screwdriver to remove retainer plates.

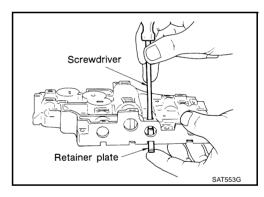

b. Remove retainer plates while holding spring, plugs or sleeves.

CAUTION:


Remove plugs slowly to prevent internal parts from jumping out.

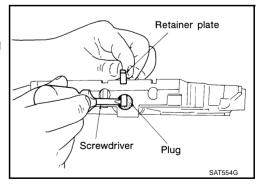

c. Place mating surface of valve body face down, and remove internal parts.

CAUTION:

- If a valve is hard to remove, place valve body face down and lightly tap it with a soft hammer.
- Be careful not to drop or damage valves and sleeves.

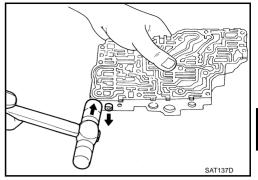

ΑT

D

F

Н


M

В

INSPECTION

Valve Springs

- Measure free length and outer diameter of each valve springs.
 Also check for damage or deformation. Refer to <u>AT-386, "Control Valves"</u>.
- Replace valve springs if deformed or fatigued.

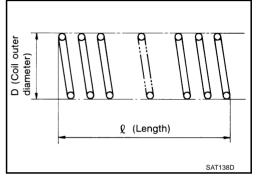


Control Valves

Check sliding surfaces of valves, sleeves and plugs.

ASSEMBLY

CAUTION:


- Apply ATF to all components before installation.
- Lay control valve body down when installing valves. Do not stand control valve body upright.

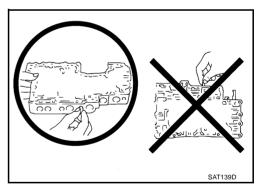


 Lubricate control valve body and all valves with ATF. Install control valves by sliding them carefully into their bores.

CAUTION:

- Install each control valve one by one.
- Install control valves after checking, because some of them are similar.
- Be careful not to scratch or damage valve body.

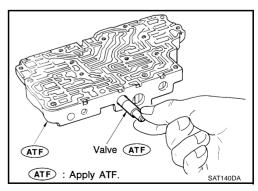


 Wrap a small screwdriver with vinyl tape and use it to insert valves into their proper positions.

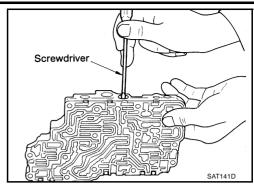


1-2 Accumulator Valve

- Install 1-2 accumulator valve. Align 1-2 accumulator retainer plate from opposite side of control valve body.
- Install 1-2 accumulator piston spring, 1-2 accumulator valve spring, 1-2 accumulator piston and plugs.

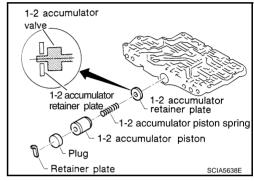


- Install retainer plates.
- While pushing plugs (with 1-2 accumulator piston spring and 1-2 accumulator valve spring), install retainer plate.

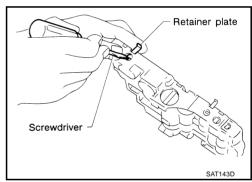

Retainer Plates (Control Valve Upper Body)

Install proper retainer plates. Refer to <u>AT-313</u>, "COMPONENTS"

			Unit: mm (in)
Loca tion	Name of control valve	Width A	Length B
L14	Pilot valve		
L16	1st reducing valve		21.5 (0.846)
L17	3-2 timing valve		21.5 (0.040)
L19	Torque converter relief valve		
L15	1-2 accumulator valve	6.0 (0.236)	40.5 (1.594)
	1-2 accumulator piston		40.5 (1.554)
L18	Overrun clutch reducing valve		24.0 (0.945)
L21	Cooler check valve		24.0 (0.943)
L20	Torque converter clutch control valve		28.0 (1.102)

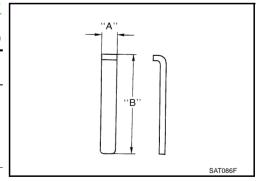

Control Valve Lower Body COMPONENTS ACS007VF Α SEC. 317 В ΑT (2) D Е G Н (∞) M

SCIA2959J


- 1 Retainer plate 4. Parallel pin 7. Pressure modifier valve 13. Plug 16. Overrun clutch control valve spring
- 10. Pressure regulator valve
- 19. Retainer plate
- 22. Plua 25. Shift valve A spring
- 28. Plug 31. Shuttle valve
- 34. Plug

- 2. Pressure modifier piston spring
- 5. Sleeve
- 8. Control valve lower body
- 11. Pressure regulator valve spring
- 14. Retainer plate
- 17. Overrun clutch control valve
- 20. Accumulator control valve spring
- 23. Retainer plate
- 26. Shift valve A
- 29. Shuttle plug
- 32. Shift valve B spring
- 35. Retainer plate

- 3 Pressure modifier piston
- 6. Pressure modifier valve spring
- 9. Manual valve
- 12. Spring seat
- 15. Sleeve
- 18. Plug
- 21. Accumulator control valve
- 24. Retainer plate
- 27. Retainer plate
- 30. Shuttle valve spring
- 33. Shift valve B

DISASSEMBLY


Remove valves at retainer plates. For removal procedures, refer to AT-317, "COMPONENTS".

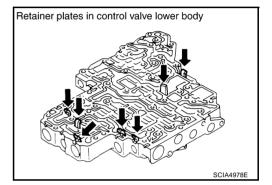

INSPECTION

Valve Springs

- Check each valve springs for damage or deformation. Also measure free length and outer diameter. Refer to AT-386, "Control Valves".
- Replace valve springs if deformed or fatigued.

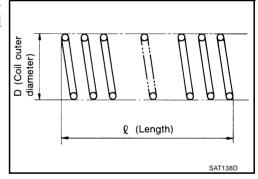


Control Valves

Check sliding surfaces of control valves, sleeves and plugs for damage.


ASSEMBLY

CAUTION:

- Apply ATF to all components before installation.
- Lay control valve body down when installing valves. Do not stand control valve body upright.

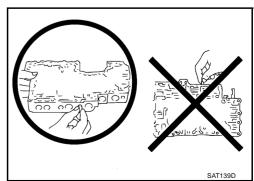

Install control valves.
 For installation procedures, refer to <u>AT-317, "COMPONENTS"</u>.

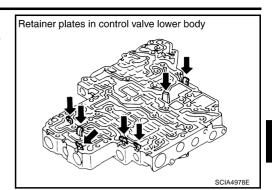

В


Α

AT

D

Retainer Plates (Control Valve Lower Body)

Loca tion	Name of control valve and plug	Width A	Length B	Туре
L3	Pressure regulator valve			
L5	Accumulator control valve	6.0 (0.236)	28.0 (1.102)	I
L6	Shift valve A			
L4	Overrun clutch control valve			
L13	Pressure modifier valve			
L7	Shuttle valve			
L12	Shift valve B	17.0 (0.669)	24.0 (0.945)	II

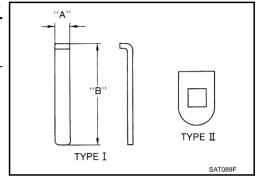

Е

F

G


Н

K

L

Reverse Clutch COMPONENTS

ACS007VG

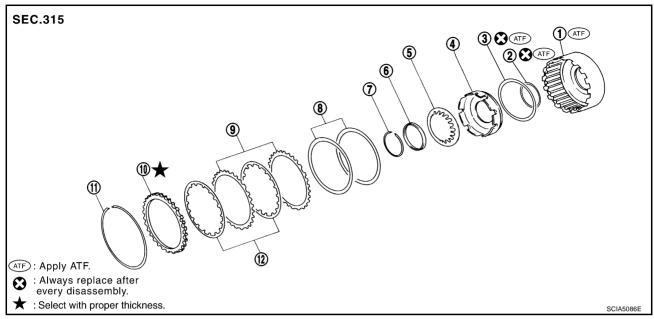

- 1. Reverse clutch drum
- 4. Reverse clutch piston
- 7. Snap ring
- 10. Retaining plate


- 2. D-ring
- 5. Return spring
- 8. Dish plate
- 11. Snap ring

- 3. Seal ring
- 6. Spring retainer
- 9. Driven plate
- 12. Drive plate

DISASSEMBLY

- Check operation of reverse clutch.
- Install seal ring onto drum support of oil pump cover and install reverse clutch assembly. Apply compressed air to oil hole.
- b. Check to see that retaining plate moves to snap ring.
- c. If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Seal ring might be damaged.
 - Fluid might be leaking past piston check ball.
- Oil pump assembly
 SAT092F


- 2. Remove snap ring with flat-bladed screwdriver.
- 3. Remove drive plates, driven plates, retaining plate, and dish plates.

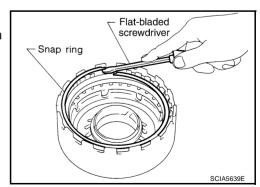

Set SST on spring retainer and remove snap ring from reverse clutch drum while compressing return spring.

CAUTION:

- Set SST directly over return spring.
- Do not expand snap ring excessively.
- Remove spring retainer and return spring.

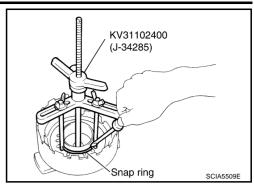

Α

В

ΑT


D

Н

M

Remove reverse clutch piston from reverse clutch drum by turning it.

7. Remove D-ring and seal ring from reverse clutch piston.

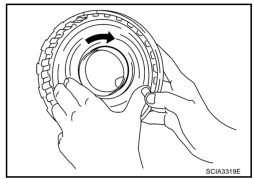

INSPECTION

Reverse Clutch Snap Rings, Spring Retainer and Return Spring

Check for deformation, fatigue or damage. If necessary, replace.

Reverse Clutch Drive Plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate

Standard: 1.6 mm (0.063 in) **Wear limit:** 1.4 mm (0.055 in)

If not within wear limit, replace.


Thickness Facing Core plate SAT162D

Reverse Clutch Dish Plates

- Check for deformation or damage.
- Measure thickness of dish plate.


Thickness of dish plate: 3.08 mm (0.1213 in)

If deformed or fatigued, replace.

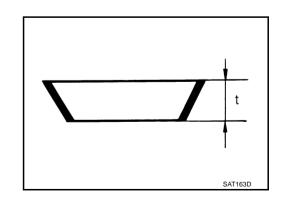

Reverse Clutch Piston

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole opposite return spring. Make sure there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure that air leaks past ball.

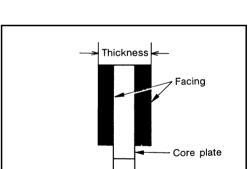


ASSEMBLY

1. Install D-ring and seal ring on reverse clutch piston.


CAUTION:


- Do not reuse D-ring and seal ring.
- Apply ATF to D-ring and seal ring.
- Be careful with the direction of seal ring.

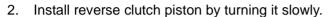

CAUTION:

Apply ATF to inner surface of reverse clutch drum.

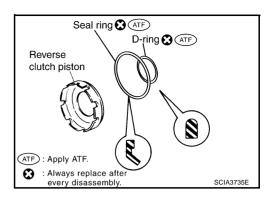


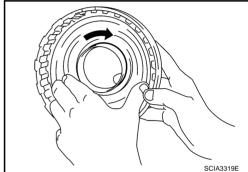

- 3. Install return spring and spring retainer on reverse clutch piston.
- 4. Set SST on spring retainer and install snap ring while compressing return spring.

CAUTION:


- Set SST directly over return spring.
- Do not expand snap ring excessively.

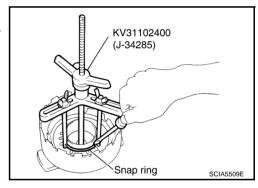

5. Install drive plates, driven plates, retaining plate and dish plates. Refer to <u>AT-387</u>, "<u>REVERSE CLUTCH</u>".


CAUTION:

Be careful with the order and the direction of plates.

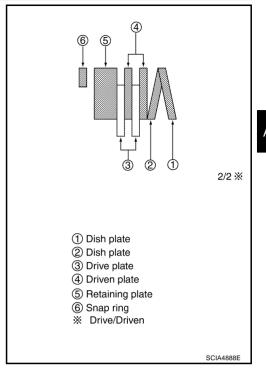


NOTE:

Install two dish plates fitting each installation direction with reverse clutch drum groove displaced slightly.

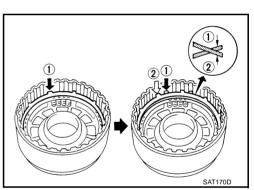

6. Install snap ring.

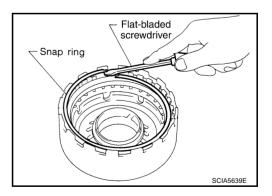

Α

В

ΑT

D

Е

F

G

Н

J


Κ

 Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate. Refer to <u>AT-387</u>, "REVERSE CLUTCH".


Specified clearance

Standard: 0.5 - 0.8 mm (0.020 - 0.031 in)

Allowable limit: 1.2 mm (0.047 in)

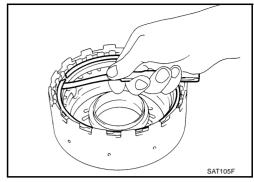


8. Check operation of reverse clutch. Refer to $\underline{\text{AT-320, "DISAS-SEMBLY"}}$.

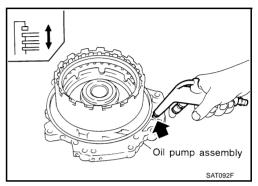

High Clutch COMPONENTS

ACS007VH

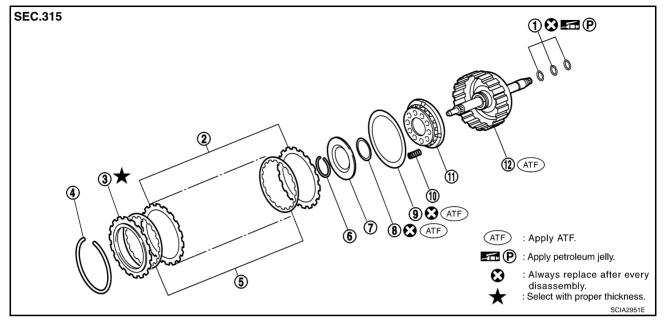

- 1. Seal ring
- 4. Snap ring
- 7. Spring retainer
- 10. Return spring

- 2. Driven plate
- 5. Drive plate
- 8. D-ring
- 11. High clutch piston
- 3. Retaining plate
- 6. Snap ring
- 9. D-ring
- 12. Input shaft assembly (high clutch drum)

DISASSEMBLY


- 1. Check operation of high clutch.
- Apply compressed air to oil hole of input shaft assembly (high clutch drum) with nylon cloth.


CAUTION:

Stop up hole on opposite side of input shaft assembly (high clutch drum) with nylon cloth.

- b. Check to see that retaining plate moves to snap ring.
- If retaining plate does not contact snap ring:
 - Fluid might be leaking past piston check ball.
- Remove seal rings from input shaft assembly (high clutch drum).CAUTION:

Always replace seal rings when removed.

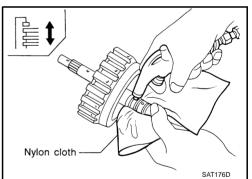

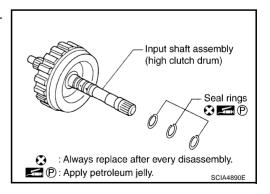

Α

В

ΑT

D

F

F


G

Н

J

B /


- Remove snap ring with flat-bladed screwdriver.
- 4. Remove drive plates, driven plates and retaining plate.

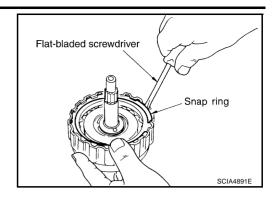


5. Set SST on spring retainer and remove snap ring from input shaft assembly (high clutch drum) while compressing return springs.

CAUTION:


- Set SST directly over springs.
- Do not expand snap ring excessively.
- 6. Remove spring retainer and return springs.

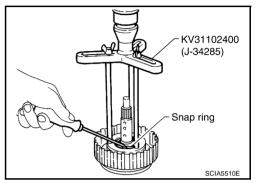

7. Remove high clutch piston from input shaft assembly (high clutch drum) by turning it.

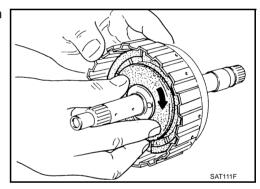

8. Remove D-rings from high clutch piston.

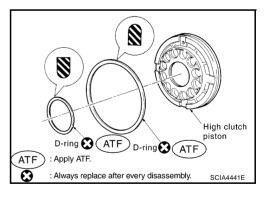

INSPECTION

High Clutch Snap Rings, Spring Retainer and Return Springs

- Check for deformation, fatigue or damage.
 If necessary, replace.
- When replacing spring retainer and return springs, replace them as a set.


High Clutch Drive Plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate

Standard: 1.6 mm (0.063 in)
Wear limit: 1.4 mm (0.055 in)

If not within wear limit, replace.

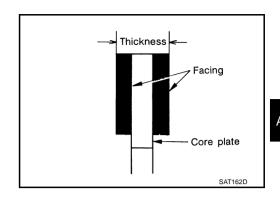

High Clutch Piston

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole opposite return spring. Make sure there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure that air leaks past ball.

Seal Ring Clearance

- Install new seal rings onto input shaft assembly (high clutch drum).
- Measure clearance between seal ring and ring groove.

Standard clearance: 0.08 - 0.23 mm

(0.0031 - 0.0091 in)

Allowable limit: 0.23 mm (0.0091 in)

 If not within allowable limit, replace input shaft assembly (high clutch drum).


Input shaft assembly (high clutch drum) SciA4901E

ASSEMBLY

1. Install D-rings on high clutch piston.

CAUTION:


- Apply ATF to D-rings.
- Do not reuse D-rings.

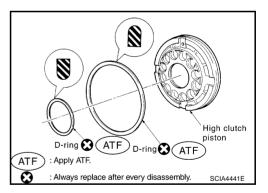

2. Install high clutch piston by turning it slowly.

CAUTION:

Apply ATF to inner surface of input shaft assembly (high clutch drum).

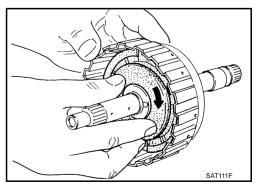

Α

В

AT

D

F


C

Н

K

L


3. Install return springs and spring retainer on high clutch piston.

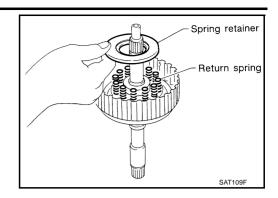

4. Set SST on spring retainer and install snap ring while slowly compressing return springs.


CAUTION:

- Set SST directly over return springs.
- Do not expand snap ring excessively.

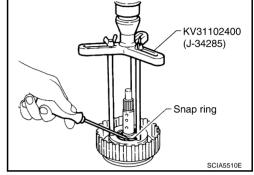

CAUTION:


Do not align snap ring gap with spring retainer stopper.

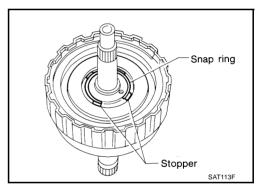


5. Install drive plates, driven plates and retaining plate. Refer to AT-387, "HIGH CLUTCH".

CAUTION:

Be careful with the order and the direction of plates.

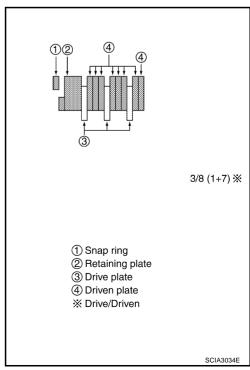

Install snap ring with flat-bladed screwdriver.

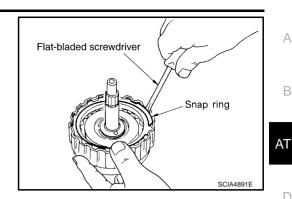

В

D

F

Н


M

Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate. Refer to AT-387, "HIGH CLUTCH" .


Specified clearance

Standard: 1.8 - 2.2 mm (0.071 - 0.087 in)


Allowable limit: 2.8 mm (0.110 in)

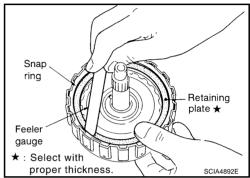

8. Check operation of high clutch. Refer to AT-325, "DISASSEM-BLY".

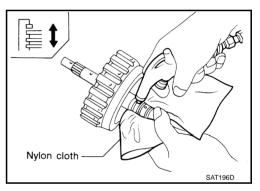


- 9. Install seal rings to input shaft assembly (high clutch drum).
 - **CAUTION:**
 - Do not reuse seal rings.
 - Apply petroleum jelly to seal rings.

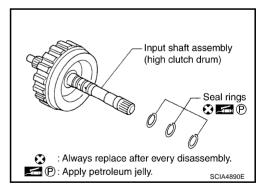


CAUTION:

Roll paper around seal rings to prevent seal rings from spreading.

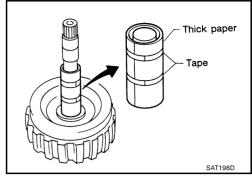

Forward and Overrun Clutches COMPONENTS

ACS007VI

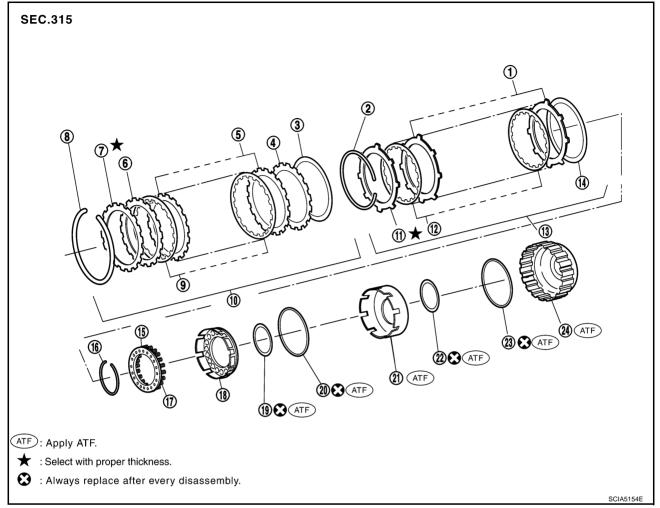

1.	Driven plate
4.	Retaining plat
_	


- 7. Retaining plate
- 10. Forward clutch13. Overrun clutch
- 16. Snap ring
- 19. D-ring
- 22. D-ring

- 2. Snap ring
- Driven plate
- 8. Snap ring
- 11. Retaining plate
- 14. Dish plate
- 17. Return spring
- 20. Seal ring
- 23. Seal ring

- 3. Dish plate
- 6. Retaining plate
- 9. Drive plate
- 12. Drive plate
- 15. Spring retainer
- 18. Overrun clutch piston
- 21. Forward clutch piston
- 24. Forward clutch drum

DISASSEMBLY

- Check operation of forward clutch and overrun clutch.
- a. Install bearing retainer of output shaft on forward clutch drum.
- b. Apply compressed air to oil hole of forward clutch drum.
- c. Check to see that retaining plate moves to snap ring.
- d. If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Seal ring might be damaged.
 - Fluid might be leaking past piston check ball.

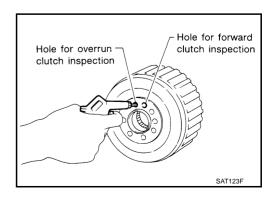

7VI A

В

ΑT

D

_

F


G

Н


J

. .

- Remove snap ring for forward clutch with flat-bladed screwdriver.
- 3. Remove drive plates, driven plates, retaining plates and dish plate for forward clutch.

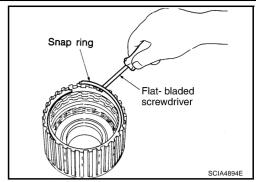

- 4. Remove snap ring for overrun clutch with flat-bladed screw-driver.
- 5. Remove drive plates, driven plates, retaining plate and dish plate for overrun clutch.

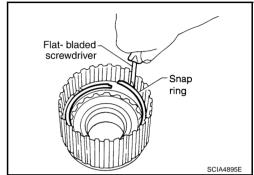


6. Set SST on spring retainer and remove snap ring from forward clutch drum while compressing return springs.

CAUTION:


- Set SST directly over return springs.
- Do not expand snap ring excessively.
- 7. Remove spring retainer and return springs.

CAUTION:


Do not remove return springs from spring retainer.

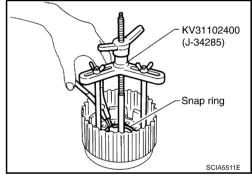


8. Remove forward clutch piston with overrun clutch piston from forward clutch drum by turning it.

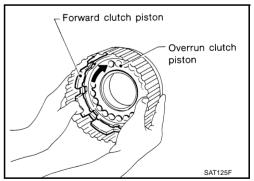

9. Remove overrun clutch piston from forward clutch piston by turning it.

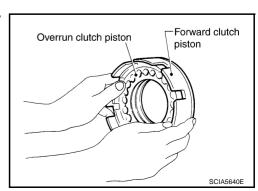

10. Remove D-rings and seal rings from forward clutch piston and overrun clutch piston.

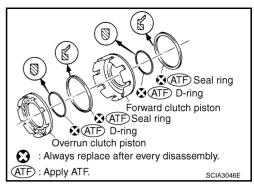

Α

В

ΑT

D

F

INSPECTION

Snap Rings, Spring Retainer and Return Springs

- Check for deformation, fatigue or damage.
- Replace if necessary.
- When replacing spring retainer and return springs, replace them as a set.

Forward Clutch and Overrun Clutch Drive Plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate

Forward clutch

Standard: 1.6 mm (0.063 in) Wear limit: 1.4 mm (0.055 in)

Overrun clutch

Standard: 1.6 mm (0.063 in) Wear limit: 1.4 mm (0.055 in)

If not within wear limit, replace.

Forward Clutch and Overrun Clutch Dish Plates


- Check for deformation or damage.
- Measure thickness of dish plate.

Thickness of dish plate

Forward clutch: 2.7 mm (0.106 in) 2.7 mm (0.106 in) Overrun clutch:


If deformed or fatigued, replace.

Thickness Facing Core plate SAT162D

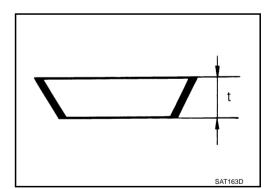


Forward Clutch Drum

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole from outside of forward clutch drum. Make sure air leaks past ball.
- Apply compressed air to oil hole from inside of forward clutch drum. Make sure there is no air leakage.

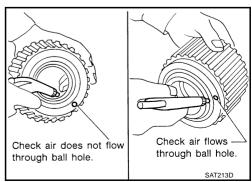

Overrun Clutch Piston

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole opposite return spring. Make sure there is no air leakage.
- Apply compressed air to oil hole on return spring side. Make sure that air leaks past ball.

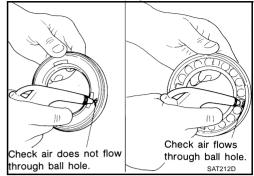


ASSEMBLY

1. Install D-rings and seal rings on forward clutch piston and overrun clutch piston.

CAUTION:


- Do not reuse D-rings and seal rings.
- Apply ATF to D-rings and seal rings.
- Take care with direction of seal rings.

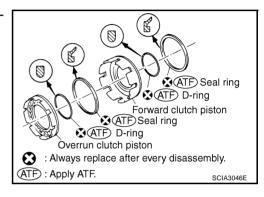

2. Install overrun clutch piston on forward clutch piston by turning it slowly.

CAUTION:


Apply ATF to inner surface of forward clutch piston.

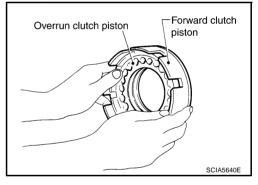


3. Install forward clutch piston with overrun clutch piston on forward clutch drum by turning it slowly.

CAUTION:

Apply ATF to inner surface of forward clutch drum.

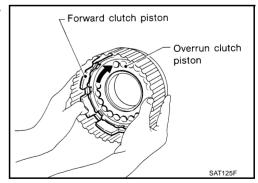

4. Install spring retainer and return springs on overrun clutch piston.

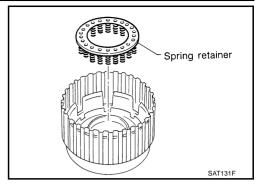

В

ΑT

D


F

G

Н

Α


• Align the mark on spring retainer with check ball in overrun clutch piston.

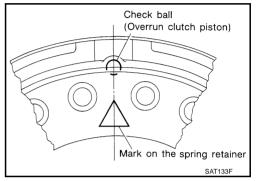

5. Set SST on spring retainer and install snap ring while compressing return springs.


CAUTION:

- Set SST directly over return springs.
- Do not expand snap ring excessively.

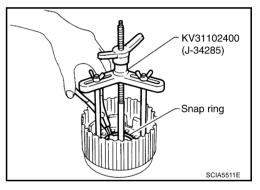

CAUTION:

Do not align snap ring gap with spring retainer stopper.

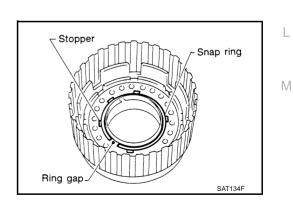


Revision: 2005 March AT-335 2005 X-Trail


6. Install drive plates, driven plates, retaining plate and dish plate for overrun clutch. Refer to <u>AT-388, "OVERRUN CLUTCH"</u>.

CAUTION:

Be careful with the order and the direction of plates.

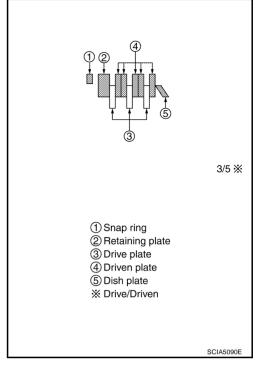

7. Install snap ring for overrun clutch with flat-bladed screwdriver.

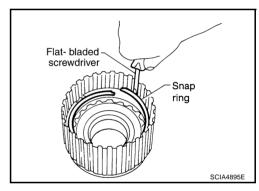


8. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate. Refer to AT-388, "OVERRUN CLUTCH".

Specified clearance

Standard: 0.7 - 1.1 mm (0.028 - 0.043 in)


Allowable limit: 1.7 mm (0.067 in)

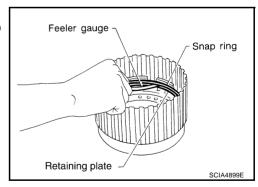

Install drive plates, driven plates, retaining plates and dish plate for forward clutch. Refer to AT-388, "FORWARD CLUTCH".

CAUTION:

Be careful with the order and the direction of plates.

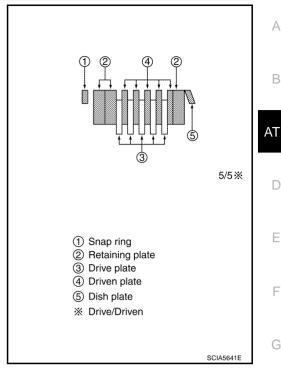


В

D

Н

M

10. Install snap ring for forward clutch with flat-bladed screwdriver.

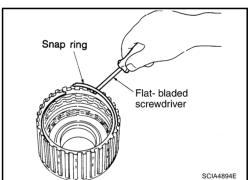


11. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate. Refer to AT-388, "FORWARD CLUTCH".


Specified clearance

Standard: 0.45 - 0.85 mm (0.0177 - 0.0335 in)

Allowable limit: 1.85 mm (0.0728 in)

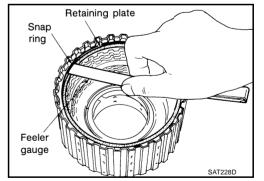


12. Check operation of forward clutch and overrun clutch. Refer to AT-331, "DISASSEMBLY".

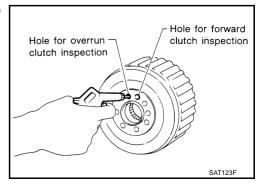

AT-337 Revision: 2005 March 2005 X-Trail

Low & Reverse Brake COMPONENTS

ACS007VJ

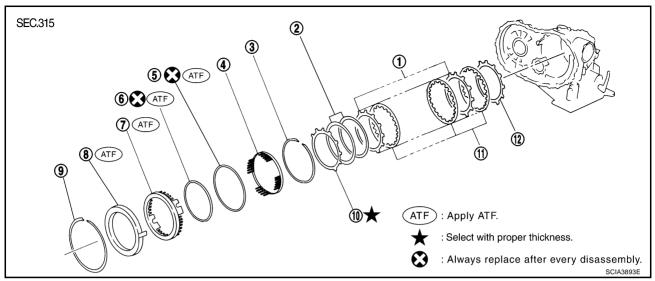


- 1. Driven plate
- 4. Spring retainer
- 7. Low & reverse brake piston
- 10. Retaining plate

- 2. Dish plate
- D-ring
- 8. Retainer
- 11. Drive plate


- 3. Snap ring
- 6. D-ring
- 9. Snap ring
- 12. Retaining plate

DISASSEMBLY

- 1. Check operation of low & reverse brake.
- a. Apply compressed air to oil hole of transaxle case.
- b. Check to see that retaining plate moves to snap ring.
- c. If retaining plate does not contact snap ring:
 - D-ring might be damaged.
 - Fluid might be leaking past piston check ball.
- 2. Remove snap ring with flat-bladed screwdriver.
- Remove low & reverse brake piston (with retainer) and spring retainer from transaxle case.

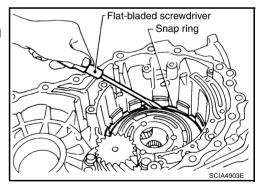


- 4. Remove snap ring with flat-bladed screwdriver.
- 5. Remove driven plates, drive plates, retaining plates and dish plates from transaxle case.

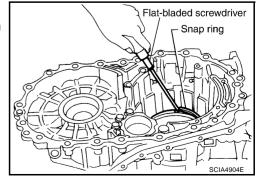


6. In order to remove low & reverse brake piston, apply compressed air to oil hole of retainer while holding low & reverse brake piston.

CAUTION:

Apply air gradually and allow low & reverse brake piston to come out evenly.

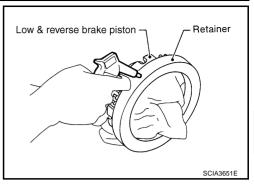

7. Remove D-rings from low & reverse brake piston.

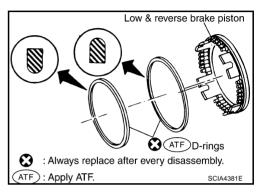

INSPECTION

Low & Reverse Brake Snap Rings, Spring Retainer and Return Springs

- Check for deformation, fatigue or damage. If necessary, replace.
- When replacing spring retainer and return springs, replace them as a set.


Low & Reverse Brake Drive Plate

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate

Standard: 1.8 mm (0.071 in)
Wear limit: 1.6 mm (0.063 in)

If not within wear limit, replace.

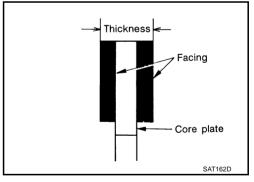


ASSEMBLY

1. Install D-rings on low & reverse brake piston.

CAUTION:

- Do not reuse D-rings.
- Apply ATF to D-rings.

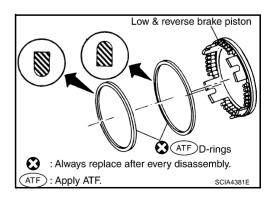

Revision: 2005 March AT-339 2005 X-Trail

Α

В

АТ

D

Н


K

L

Set and align low & reverse brake piston with retainer.

CAUTION:


- This operation is required in order to engage the protrusions of piston to return springs correctly.
 Further procedures are given in <u>AT-362</u>, "ASSEMBLY".
- Apply ATF to surface of low & reverse brake piston and retainer.

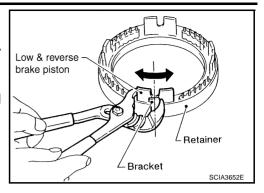


3. Install driven plates, drive plates, retaining plates and dish plates on transaxle case. Refer to <u>AT-389, "LOW & REVERSE BRAKE"</u>.

CAUTION:

Be careful with the order of plates and the direction of dish plates.

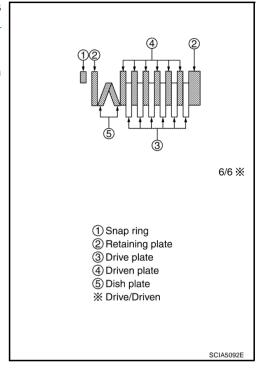

Install snap ring with flat-bladed screwdriver.

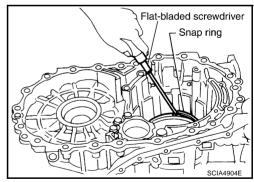


5. Measure clearance between retaining plate and transaxle case. If not within allowable limit, select proper retaining plate. (front side) Refer to AT-389, "LOW & REVERSE BRAKE".


Specified clearance

Standard: 1.7 - 2.1 mm (0.067 - 0.083 in)

Allowable limit: 3.3 mm (0.130 in)

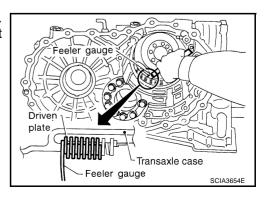

- 6. Install low & reverse brake piston (with retainer) and spring retainer on transaxle case.
- 7. Install snap ring with flat-bladed screwdriver.
- 8. Check operation of low & reverse brake. Refer to <u>AT-338, "DIS-ASSEMBLY"</u>.

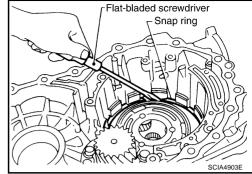

Α

В

ΑT

D

Е

F

G


Н

Κ

L

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub COMPONENTS


ACS007VK

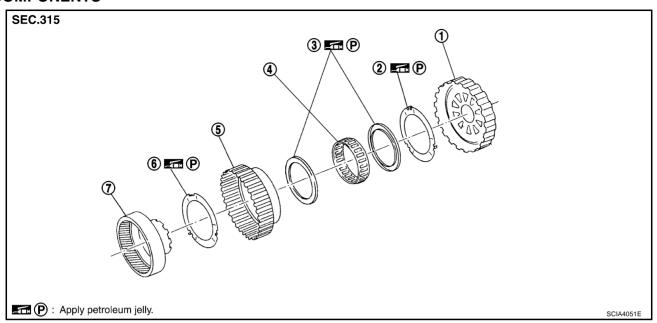


- Overrun clutch hub
- 4. Forward one-way clutch
- 7. Rear internal gear
- 2. Thrust washer
- 5. Forward clutch hub
- 3. Bearing race
- 6. Thrust washer

DISASSEMBLY


 Remove overrun clutch hub and thrust washer from forward clutch hub.

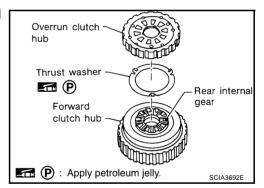

2. Remove forward clutch hub from rear internal gear.

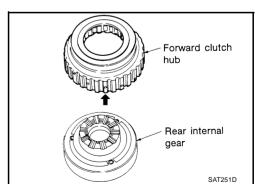

B. Remove bearing race from rear internal gear.

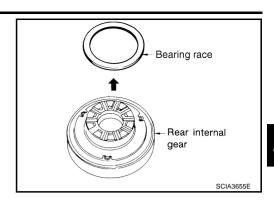

ΑT


D


Α

В


4. Remove thrust washer from rear internal gear.

5. Remove bearing race from forward one-way clutch.

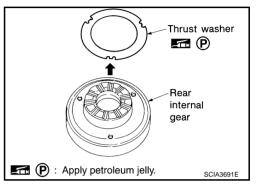

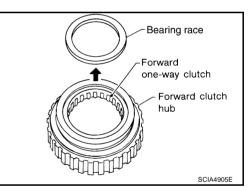


6. Remove forward one-way clutch from forward clutch hub.

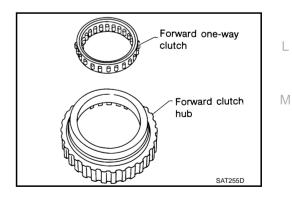

INSPECTION


Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub

Check rubbing surfaces for wear or damage.

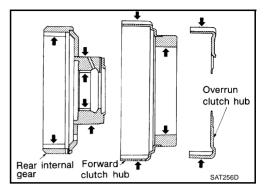

Bearing Races and Forward One-Way Clutch

- Check bearing races for deformation and damage.
- Check forward one-way clutch for wear and damage.

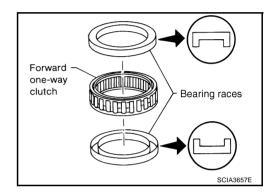


ASSEMBLY

1. Install forward one-way clutch on forward clutch hub.

CAUTION:


Be careful with the direction of forward one-way clutch.

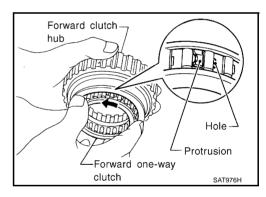

2. Install bearing race on forward one-way clutch.

CAUTION:


Apply petroleum jelly to bearing race.

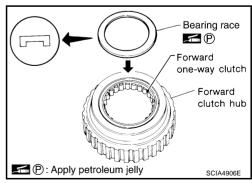

3. Install thrust washer on rear internal gear.

CAUTION:

- Apply petroleum jelly to thrust washer.
- Align pawls of thrust washer with holes of rear internal gear.

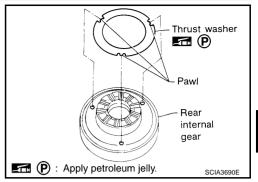

В

ΑT


D

F

4. Install bearing race on rear internal gear.

CAUTION:


Apply petroleum jelly to bearing race.

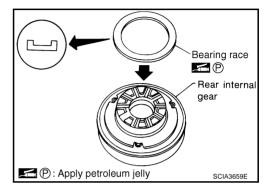

5. Install forward clutch hub on rear internal gear.

CAUTION:


- Check operation of forward one-way clutch.
 Hold rear internal gear and turn forward clutch hub.
 Check forward clutch hub for correct locking and unlocking directions.
- If not as shown in figure, check installation direction of forward one-way clutch.

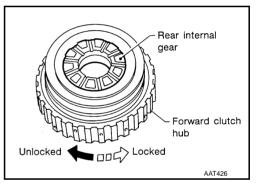

6. Install thrust washer and overrun clutch hub on forward clutch hub.

CAUTION:


- Apply petroleum jelly to thrust washer.
- Align pawls of thrust washer with holes of overrun clutch hub.
- Align projections of rear internal gear with holes of overrun clutch hub.

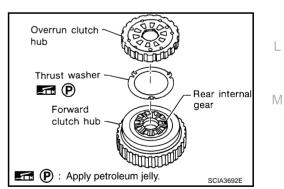

Revision: 2005 March AT-345 2005 X-Trail

Output Shaft, Idler Gear, Reduction Pinion Gear and Bearing Retainer COMPONENTS

ACS007VL

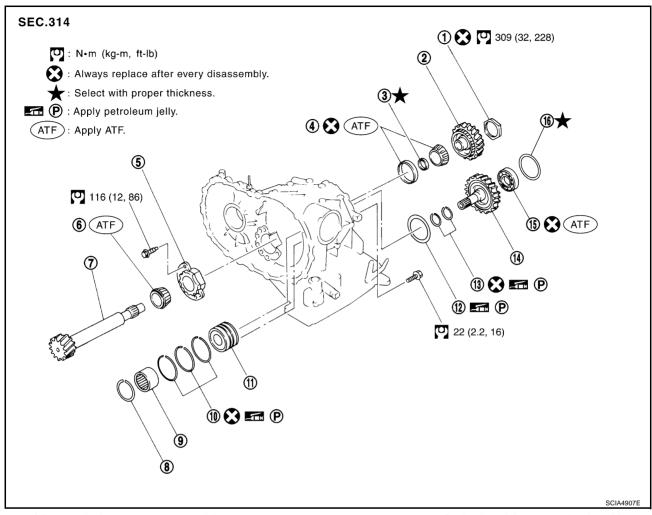


- 1. Idler gear lock nut
- 4. Idler gear bearing
- 7. Reduction pinion gear
- 10. Seal ring
- 13. Seal ring
- 16. Output shaft adjusting shim
- 2. Idler gear
- 5. Reduction pinion gear bearing outer race 6.
- 8. Snap ring
- 11. Bearing retainer
- 14. Output shaft


- 3. Reduction pinion gear adjusting shim
- 6. Reduction pinion gear bearing inner race
- 9. Radial needle bearing
- 12. Needle bearing
- 15. Output shaft bearing

DISASSEMBLY

1. Remove seal rings from output shaft and bearing retainer.

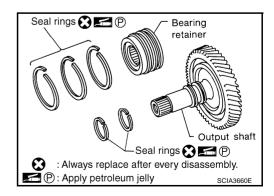

- 2. Remove output shaft bearing with flat-bladed screwdrivers. **CAUTION:**
 - Always replace bearing with a new one when removed.
 - Do not damage output shaft.

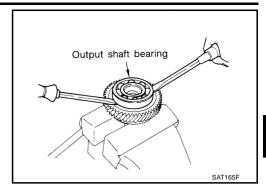


ΑT

D


В

3. Remove snap ring from bearing retainer.

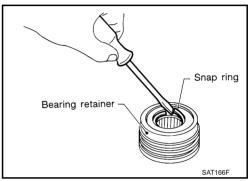


F

4. Remove radial needle bearing from bearing retainer.

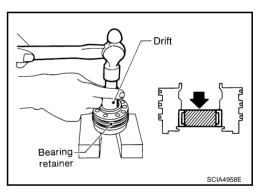


|

5. Remove idler gear bearing inner race from idler gear.

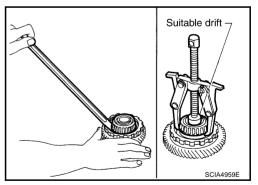


M


6. Remove idler gear bearing outer race from transaxle case.

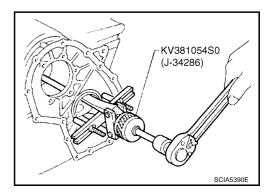

Press out reduction pinion gear bearing inner race from reduction pinion gear.

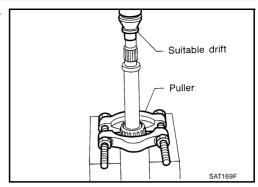

8. Remove reduction pinion gear bearing outer race from transaxle case.

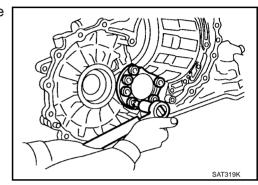


INSPECTION

Output Shaft, Idler Gear and Reduction Pinion Gear

- Check shafts for cracks, wear or bending.
- Check gears for wear, chips and cracks.

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- When replacing taper roller bearing, replace outer and inner race as a set.

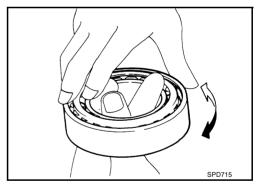

Seal Ring Clearance

- Install new seal rings to output shaft.
- Measure clearance between seal ring and ring groove of output shaft.

Standard clearance: 0.10 - 0.25 mm (0.0039 - 0.0098 in)


Allowable limit: 0.25 mm (0.0098 in)

- If not within allowable limit, replace output shaft.
- Install new seal rings to bearing retainer.
- Measure clearance between seal ring and ring groove of bearing retainer.

Standard clearance: 0.10 - 0.30 mm (0.0039 - 0.0118 in)

Allowable limit: 0.30 mm (0.0118 in)

If not within allowable limit, replace bearing retainer.

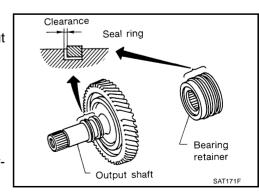


ASSEMBLY


1. Press reduction pinion gear bearing inner race on reduction pinion gear.

CAUTION:

Apply ATF to reduction pinion gear bearing inner race.

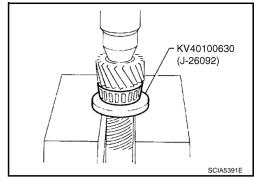


- 2. Install reduction pinion gear bearing outer race on transaxle case. Refer to <u>AT-346, "COMPONENTS"</u>.
- 3. Checking reduction pinion gear bearing preload. Refer to AT-364, "REDUCTION PINION GEAR BEARING PRELOAD".

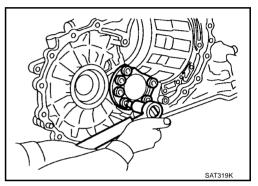

4. Press idler gear bearing inner race on idler gear.

CAUTION:


- Do not reuse idler gear bearing.
- Apply ATF to idler gear bearing.

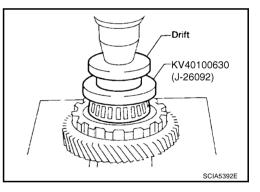

5. Install idler gear bearing outer race on transaxle case.

CAUTION:

- Do not reuse idler gear bearing.
- Apply ATF to idler gear bearing.

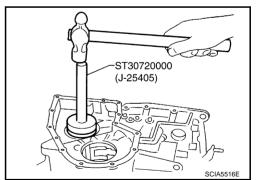

Α

AT

В

D

F

Η

J


Κ

L


6. Press output shaft bearing on output shaft.

CAUTION:


- Do not reuse output shaft bearing.
- Apply ATF to output shaft bearing.

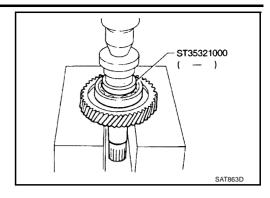

7. Press radial needle bearing on bearing retainer.

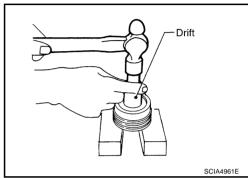


8. Install snap ring to bearing retainer.

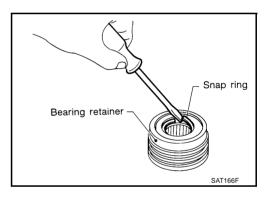

9. After packing ring grooves with petroleum jelly, carefully install new seal rings on output shaft and bearing retainer.


CAUTION:

- Do not reuse seal rings.
- Apply petroleum jelly to seal rings.

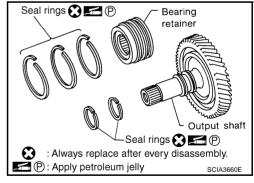

CAUTION:

Roll paper around seal rings to prevent seal rings from spreading.

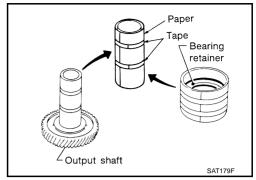

А

В

ΑT

D

Е

F

G


Н

J

Κ

Band Servo Piston Assembly COMPONENTS

ACS007VM

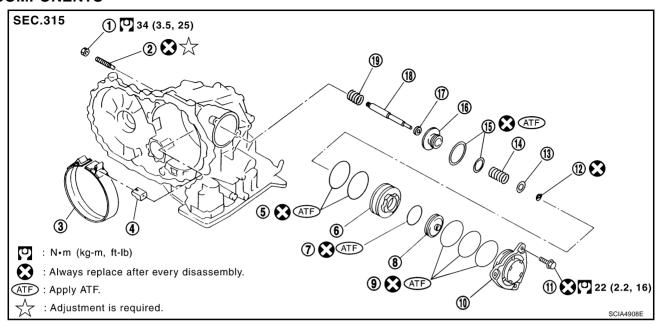


- 1. Lock nut
- 4. Strut
- 7. D-ring
- 10. O/D servo piston retainer
- 13. Spring retainer
- 16. Band servo piston
- 19. 2nd servo return spring

- 2. Anchor end pin
- 5. O-ring
- 8. O/D servo piston
- 11. O/D servo piston retainer fitting bolt
- 14. O/D servo return spring
- 17. Band servo thrust washer
- 3. Brake band
- 6. Servo piston retainer
- 9. O-ring
- 12. E-ring
- 15. D-ring
- 18. Band servo piston stem

DISASSEMBLY

1. Remove O/D servo piston retainer fitting bolts.

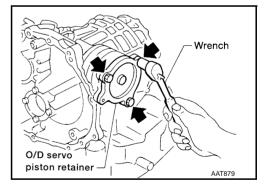


Apply compressed air to oil hole in transaxle case to remove O/ D servo piston retainer and band servo piston assembly.

CAUTION:

Hold band servo piston assembly with a rag or nylon waste.


3. Remove 2nd servo return spring from transaxle case.

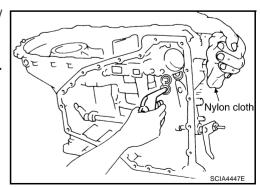

4. Apply compressed air to oil hole in O/D servo piston retainer to remove O/D servo piston from O/D servo piston retainer.

CAUTION:

Hold O/D servo piston while applying compressed air.

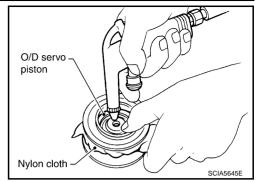

ΑT

D


Е

Н


M

В


5. Remove D-ring from O/D servo piston.

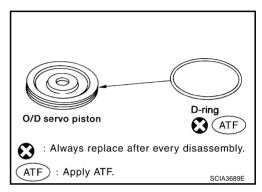


6. Remove O-rings from O/D servo piston retainer.

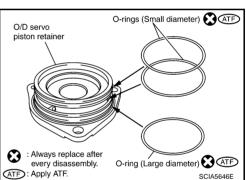


7. Remove band servo piston assembly from servo piston retainer by pushing it forward.

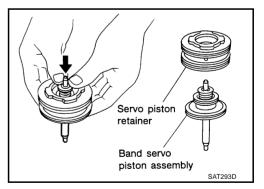


8. Place band servo piston stem end on a wooden block. While pushing spring retainer down, remove E-ring.

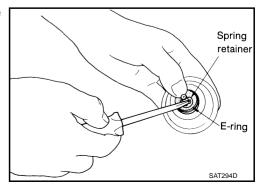


Remove spring retainer, O/D servo return spring, band servo thrust washer and band servo piston stem from band servo piston.

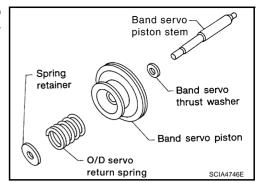

10. Remove O-rings from servo piston retainer.

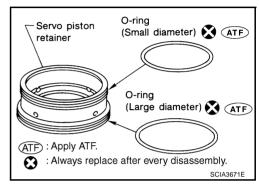

11. Remove D-rings from band servo piston.

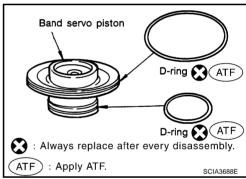


INSPECTION

Pistons, Retainers and Piston Stem

Check frictional surfaces for abnormal wear or damage.

Return Springs

- Check for deformation or damage.
- Measure free length and outer diameter. Refer to <u>AT-391, "Band Servo"</u>.

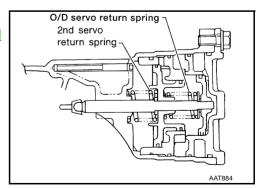


ASSEMBLY

1. Install D-rings to band servo piston.

CAUTION:

- Do not reuse D-rings.
- Apply ATF to D-rings.
- Pay attention to position of each D-rings.

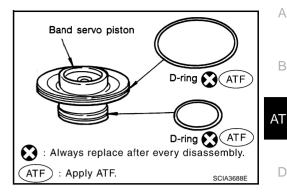

Α

В


D

F

Н

M


2. Install band servo piston stem, band servo thrust washer, O/D servo return spring and spring retainer to band servo piston.

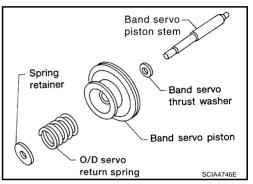

3. Place band servo piston stem end on a wooden block. While pushing spring retainer down, install E-ring.

CAUTION:


Do not reuse E-ring.

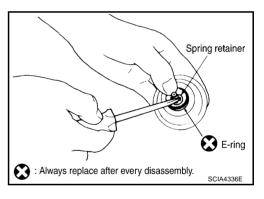

4. Install O-rings to servo piston retainer.


CAUTION:

- Do not reuse O-rings.
- Apply ATF to O-rings.
- Pay attention to position of each O-rings.

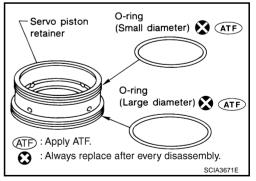

AT-355 Revision: 2005 March 2005 X-Trail


5. Install band servo piston assembly to servo piston retainer by pushing it inward.

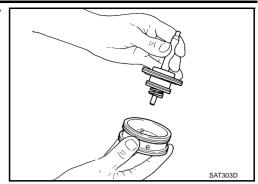


6. Install D-ring to O/D servo piston.

CAUTION:

- Do not reuse D-ring.
- Apply ATF to D-ring.

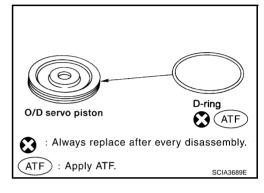


7. Install O/D servo piston to O/D servo piston retainer fitting the installation direction on it.

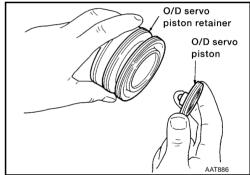

8. Install band servo piston assembly and 2nd servo return spring to transaxle case.

CAUTION:


Apply ATF to O-rings of band servo piston assembly and transaxle case.

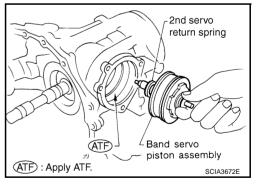

9. Install O-rings to O/D servo piston retainer.

CAUTION:


- Do not reuse O-rings.
- Apply ATF to O-rings.
- Pay attention to position of each O-rings.

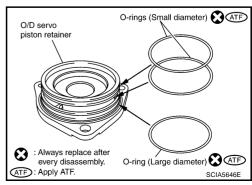

10. Install O/D servo piston retainer to transaxle case. Refer to $\underline{\text{AT-}}$ 352, "COMPONENTS" .

CAUTION:

- Do not reuse O/D servo piston retainer fitting bolts.
- Apply ATF to O-rings of O/D servo piston retainer and transaxle case.

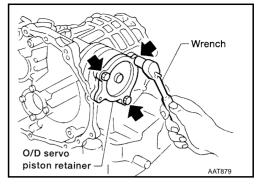

А

В

ΑT

D

Е

F


G

Н

Κ

Final Drive COMPONENTS


ACS007VN

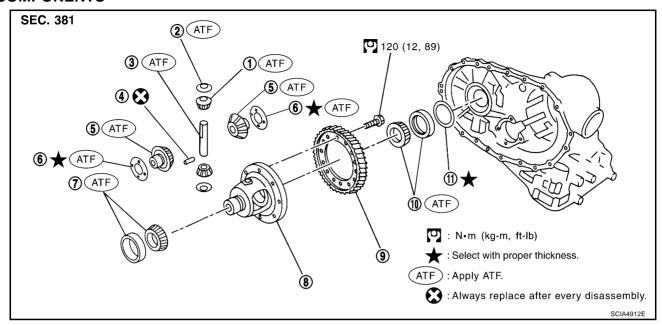

- 1. Pinion mate gear
- 4. Lock pin
- 7. Differential side bearing
- 10. Differential side bearing
- 2. Pinion mate gear thrust washer
- 5. Side gear
- 8. Differential case
- 11. Differential side bearing adjusting shim
- 3. Pinion mate shaft
- 6. Side gear thrust washer
- 9. Final gear

DISASSEMBLY


1. Remove final gear.

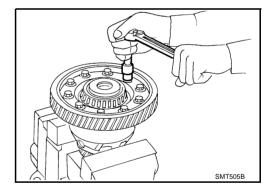


2. Press out differential side bearings.

CAUTION:

Be careful not to mix up the right and left bearings.

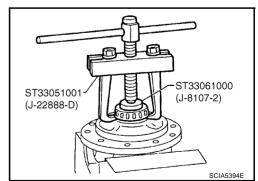

3. Remove differential side bearing outer race and differential side bearing adjusting shim from transaxle case.

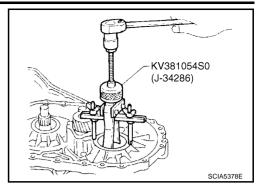


В

ΑT

D


4. Drive out lock pin.

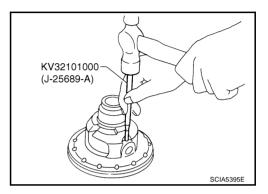

Е

G


- 5. Draw out pinion mate shaft.
- 6. Remove pinion mate gears, pinion mate gear thrust washers, side gears and side gear thrust washers.

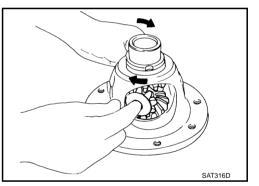

INSPECTION


Gears, Washers, Pinion Mate Shaft and Differential Case

- Check mating surfaces of differential case, side gears, pinion mate gears and pinion mate shaft.
- Check washers for wear.

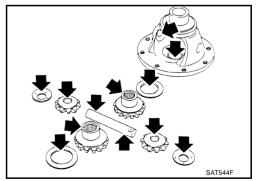

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- When replacing taper roller bearing, replace outer and inner race as a set.

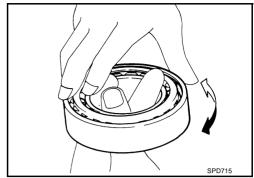


ASSEMBLY

1. Attach side gear thrust washers to side gears, then install pinion mate thrust washers and pinion mate gears in place.

CAUTION:


Apply ATF to any parts.

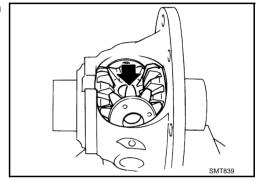


2. Insert pinion mate shaft.

CAUTION:

When inserting, be careful not to damage pinion mate gear thrust washers.

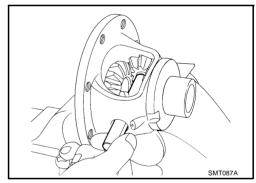

- 3. Measure clearance between side gear and differential case with washers following the procedure below:
- a. Set SST and dial indicator on side gear.

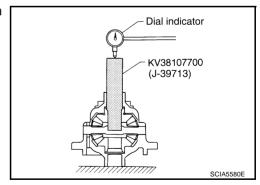


REPAIR FOR COMPONENT PARTS

Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.

> Clearance between side 0.1 - 0.2 mm (0.004 - 0.008 in) gear and differential case with washer:

c. If not within specification, adjust clearance by changing thickness of differential side gear thrust washers. Refer to AT-389, "Final Drive".

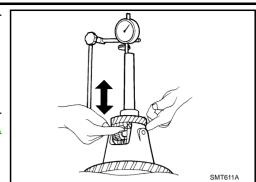


ΑT

Install lock pin.

CAUTION:

- Do not reuse lock pin.
- Make sure that lock pin is flush with case.

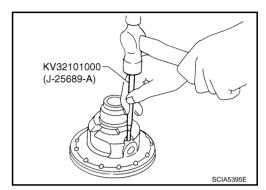


5. Press on differential side bearings.


CAUTION:

Apply ATF to differential side bearings.

6. Install differential side bearing outer race and differential side bearing adjusting shim on transaxle case. Refer to AT-363, "Adjustment (1)"

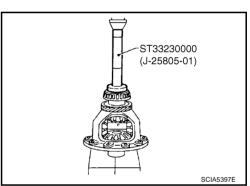

7. Tighten final gear and tighten fixing bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Refer to AT-358, "COMPONENTS".

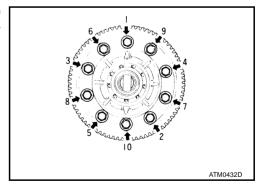

В

D

F

M

ASSEMBLY PFP:00000

Assembly (1)

ACS007VO


1. Install differential side oil seals on transaxle case and converter housing with tool.

CAUTION:

- Do not reuse differential side oil seals.
- Apply ATF to differential side oil seals.

Drift to be used:

Location	2WD models	AWD models
Transaxle case side (Left) Tool number (Kent-Moore No.)	ST33400001 (J-26082)	ST33400001 (J-26082)
Converter housing side (Right) Tool number (Kent-Moore No.)	ST33400001 (J-26082)	KV40100621 (J-25273)

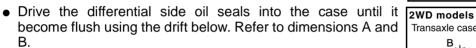



Unit: mm (in)


Dimensions A, B	0± 0.5 (0±0.020)
-----------------	------------------

NOTE:

The differential side oil seal pulling direction is used as the reference.

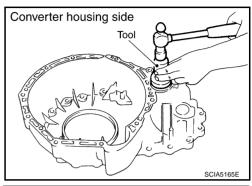

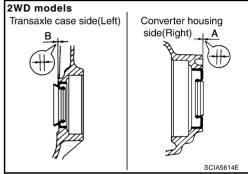


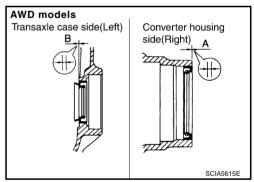


Install parking actuator support to transaxle case. Tighten parking actuator support bolts to the specified torque. Refer to <u>AT-272</u>, "Components".

CAUTION:

Be careful with the direction of parking actuator support.

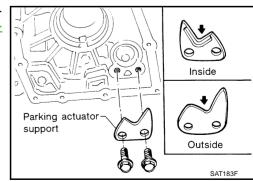

- 3. Install parking pawl on transaxle case and fix it with parking shaft.
- 4. Install return spring and parking pawl spacer.

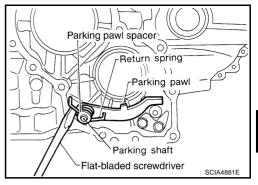

AT

D

Е

ACS007VP

Α

В

Adjustment (1) DIFFERENTIAL SIDE BEARING PRELOAD


1. Install differential side bearing outer race without differential side bearing adjusting shim on transaxle case.

CAUTION:

Apply ATF to differential side bearing outer race.


2. Install differential side bearing outer race on converter housing.

Apply ATF to differential side bearing outer race.

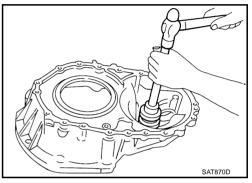

Н

- 3. Place final drive assembly on transaxle case.
- Install converter housing on transaxle case. Tighten converter housing mounting bolts to the specified torque. Refer to <u>AT-272</u>, <u>"Components"</u>.

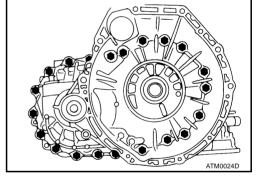


M

- Attach dial indicator on differential case at converter housing side.
- 6. Insert SST into differential side gear from transaxle case side.
- 7. Move SST up and down and measure dial indicator deflection.
- Select proper thickness of differential side bearing adjusting shim(s). Refer to <u>AT-390, "DIFFERENTIAL SIDE BEARING</u> <u>PRELOAD ADJUSTING SHIMS"</u>.

Suitable shim thickness = Dial indicator deflection + Specified bearing preload

Bearing preload: 0.05 - 0.09 mm (0.0020 - 0.0035 in)

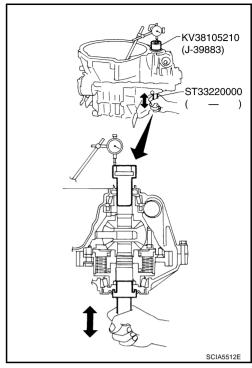


- 9. Remove converter housing from transaxle case.
- 10. Remove final drive assembly from transaxle case.
- 11. Remove differential side bearing outer race from transaxle case.
- Reinstall differential side bearing outer race and differential side bearing adjusting shim selected from SDS table on transaxle case. Refer to <u>AT-390</u>, "<u>DIFFERENTIAL SIDE BEARING PRE-LOAD ADJUSTING SHIMS</u>".
- 13. Reinstall converter housing on transaxle case and tighten converter housing mounting bolts to the specified torque. Refer to AT-272, "Components".
- 14. Insert SST and measure turning torque of final drive assembly.
 - Turn final drive assembly in both directions several times to seat bearing rollers correctly.


Turning torque of final drive assembly (New bearing): 0.78 - 1.37 N·m (8.0 - 14.0 kg-cm, 6.9 - 12.2 in-lb)


- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is within the specified range.

REDUCTION PINION GEAR BEARING PRELOAD

- Remove converter housing and final drive assembly from transaxle case.
- 2. Select proper thickness of reduction pinion gear adjusting shim using the following procedures.
- a. Place reduction pinion gear on transaxle case as shown.

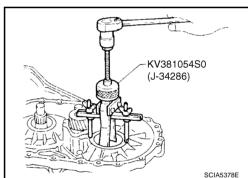

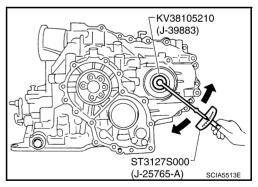


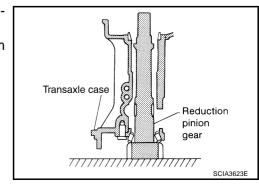

- b. Place idler gear bearing on transaxle case.
- c. Measure dimensions "B" "C" and "D" and calculate dimension "A".

$$A = D - (B + C)$$

"A": Distance between the surface of idler gear bearing inner race and the adjusting shim mating surface of reduction pinion gear.

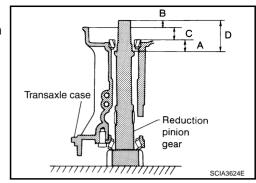

Α

В

ΑT


D

F


Н

M

- Measure dimension "B" between the end of reduction pinion gear and the surface of transaxle case.
- Measure dimension "B" in at least two places.

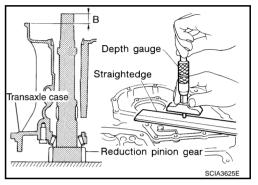


- Measure dimension "C" between the surface of idler gear bearing inner race and the surface of transaxle case.
- Measure dimension "C" in at least two places.

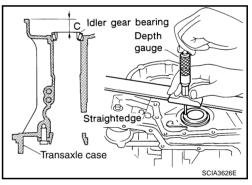

- Measure dimension "D" between the end of reduction pinion gear and the adjusting shim mating surface of reduction pinion gear.
- Measure dimension "D" in at least two places.
- Calculate dimension "A".


$$A = D - (B + C)$$

Revision: 2005 March

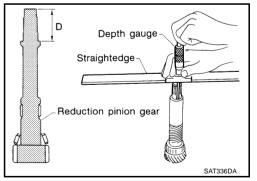

- d. Measure dimension "E" between the end of idler gear and idler gear bearing inner race mating surface of idler gear.
 - Measure dimension "E" in at least two places.
- e. Select proper thickness of reduction pinion gear adjusting shim. Refer to <u>AT-391, "REDUCTION PINION GEAR ADJUSTING SHIMS"</u>.

Proper shim thickness = A - E - 0.05 mm (0.0020 in)* (*: Bearing preload)

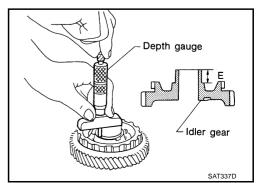

- 3. Install reduction pinion gear and reduction pinion gear adjusting shim selected in step 2-e on transaxle case.
- 4. Press idler gear bearing inner race on idler gear.

CAUTION:

- Do not reuse idler gear bearing.
- Apply ATF to idler gear bearing.
- 5. Press idler gear on reduction pinion gear.


CAUTION:


Press idler gear until idler gear fully contacts adjusting shim.

- 6. Set manual shaft to "P" position to fix idler gear.
- 7. Tighten idler gear lock nut to the specified torque. Refer to AT- 272, "Components".

CAUTION:

Lock idler gear with parking pawl when tightening lock nut.

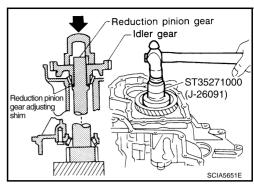

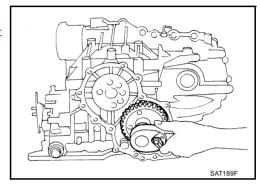


- 8. Measure turning torque of reduction pinion gear.
 - When measuring turning torque, turn reduction pinion gear in both directions several times to seat bearing rollers correctly.


Turning torque of 0.05 - 0.39 N·m (0.5 - 4.0 kg-cm, reduction pinion gear: 0.43 - 3.47 in-lb)

- If turning torque is out of specification, decrease or increase thickness of reduction pinion gear adjusting shim.
- 9. After properly adjusting turning torque, clinch idler gear lock nut as shown.

CAUTION:


Do not reuse idler gear lock nut.

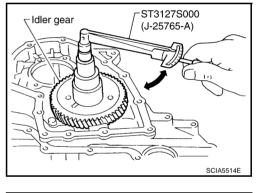

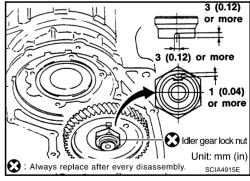


OUTPUT SHAFT END PLAY

- Measure clearance between side cover and the end of the output shaft bearing.
- Select proper thickness of output shaft adjusting shim so that clearance is within specifications.

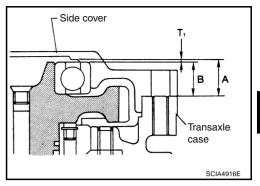


1. Install bearing retainer for output shaft. Refer to <u>AT-272, "Components"</u>.

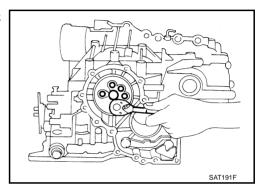


2. Install needle bearing on bearing retainer.

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

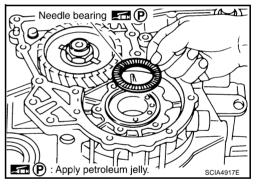

3. Install output shaft on transaxle case.

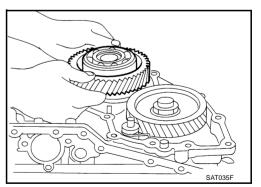

Α

AT

В

D

Н

J

K


M

- Measure dimensions " \ell 1" and " \ell 2" at side cover and then calculate dimension "A".
 - Measure dimension "ℓ1" and "ℓ2" in at least two places.

"A": Distance between transaxle case fitting surface and adjusting shim mating surface.

$$A = \ell 1 - \ell 2$$

 ℓ 2: Height of gauge

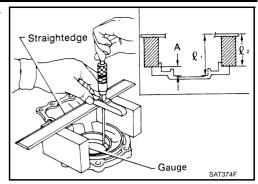


- 5. Measure dimensions " ℓ 2" and " ℓ 3" and then calculate dimension "B".
 - Measure dimension "\ell 2" and "\ell 3" in at least two places.

"B": Distance between the end of output shaft bearing outer race and the side cover fitting surface of transaxle case.

$$B = \ell 2 - \ell 3$$


 ℓ_2 : Height of gauge

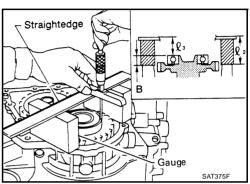

 Select proper thickness of output shaft adjusting shim so that output shaft end play (clearance between side cover and output shaft bearing) is within specifications. Refer to <u>AT-392, "OUT-PUT SHAFT ADJUSTING SHIMS"</u>.

Output shaft end play (A - B): 0 - 0.15 mm (0 - 0.0059 in)

7. Install output shaft adjusting shim on output shaft bearing.

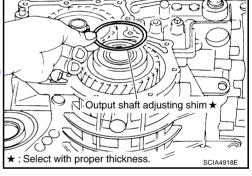

Assembly (2)


 Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to <u>GI-48</u>, "<u>Recommended Chemical Products and Sealants</u>" .) to transaxle case as shown in figure.

CAUTION:

Completely remove all moisture, oil and old sealant, etc. from the transaxle case and side cover mounting surface.

3 - 5 (0.12 - 0.20)


ACS007VO

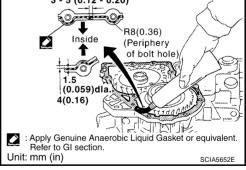

2. Fit mounting part of output shaft bearing on side cover to output shaft bearing, and after adjusting knock pin position, install it with light taps of a soft hammer and things like that.

CAUTION:


When installing, to avoid getting damaged and deformed, set mounting part straight to parallel with the mounting surface.

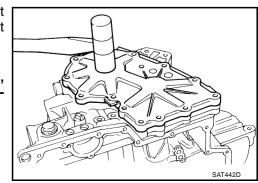

3. Tighten side cover fitting bolts to specified torque. Refer to AT-272, "Components".

CAUTION:


- Do not mix bolts A and B.
- Always replace bolts A as they are self-sealing bolts.

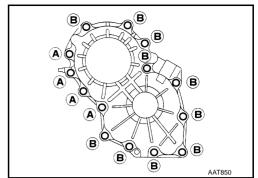

4. Install needle bearing on transaxle case.

CAUTION:


- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

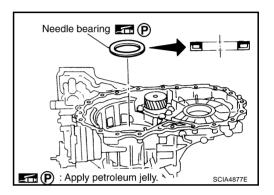

5. Install forward clutch assembly.

CAUTION:


- Align teeth of low & reverse brake before installing.
- Make sure that bearing retainer seal rings are not spread.
- If forward clutch assembly is correctly seated, points 1 and 2 are at almost same level.

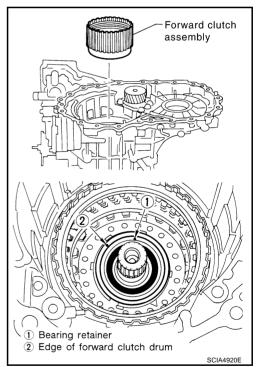

Install needle bearing.

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

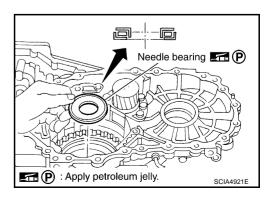

M

В

ΑT

D


F

Н

7. Install overrun clutch hub.

CAUTION:


Align teeth of overrun clutch before installing.

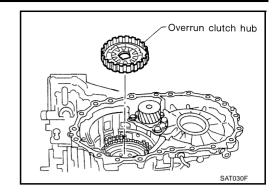

8. Check operation of forward one-way clutch.

CAUTION:


- Hold rear internal gear and turn forward clutch hub.
 Check forward clutch hub for correct locking and unlocking directions.
- If not as shown in figure, check installation direction of forward one-way clutch.

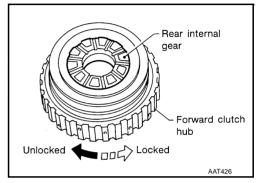

Install forward clutch hub and rear internal gear on transaxle case.

CAUTION:


- Align teeth of forward clutch before installing.
- Make sure that three pawls of thrust washer are correctly aligned after installing.

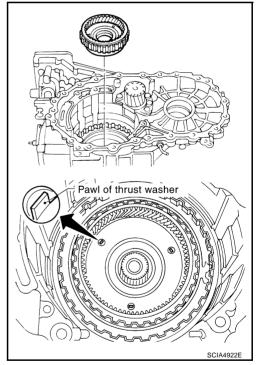

- Install rear planetary carrier and rear sun gear according to the following procedures.
- a. Install needle bearings on rear planetary carrier.

CAUTION:


- Apply petroleum jelly to needle bearings.
- Be careful with the direction of needle bearings.

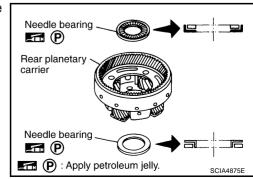


b. Install rear sun gear on rear planetary carrier.

CAUTION:

Be careful with the direction of rear sun gear.

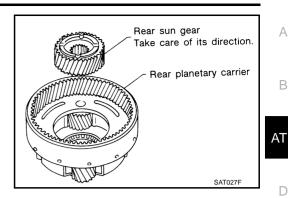


c. Install rear planetary carrier (with rear sun gear) on transaxle case.

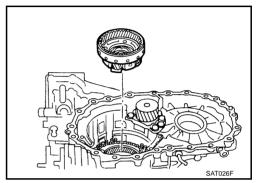


11. Install needle bearing on front planetary carrier, then install them together on transaxle case.

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

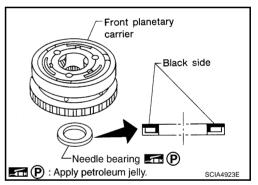


- 12. Install low & reverse brake piston according to the following procedures.
- Set and align return springs to transaxle case gutters as shown in figure.

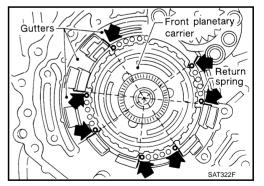

b. Set and align low & reverse brake piston with retainer.

Apply ATF to the surface of low & reverse brake piston and retainer.

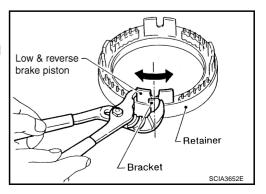

Α

В


ΑT

Н


 Install low & reverse brake piston and retainer on transaxle case.

CAUTION:


Align bracket to specified gutter as indicated in the figure.

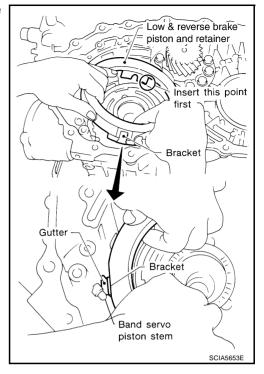


- d. Make sure that each protrusion of low & reverse brake piston is correctly set to corresponding return spring as follows.
 - Push low & reverse brake piston and retainer evenly and confirm they move smoothly.
 - If they cannot move smoothly, remove low & reverse brake piston and retainer and align return spring correctly as instructed in step "a".

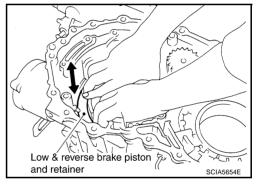

e. Push down low & reverse brake piston and retainer and install snap ring.

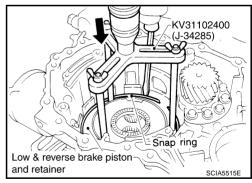


13. Install low one-way clutch to front planetary carrier by turning carrier in the direction of arrow shown.

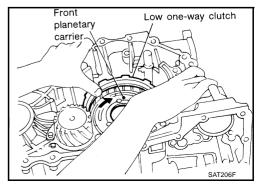

14. Install snap ring with flat-bladed screwdriver.

CAUTION:

Forward clutch and bearing must be correctly installed for snap ring to fit into groove of transaxle case.

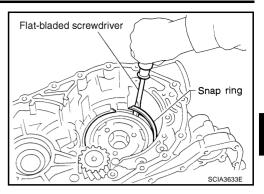

Α

В

ΑT

D

F

Н

M

15. Install front sun gear according to the following procedures.

a. Install bearing race on front sun gear.


CAUTION:

Apply petroleum jelly to bearing race.


b. Install needle bearing on front sun gear.

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

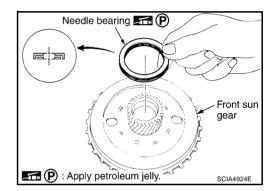


Install front sun gear on front planetary carrier.

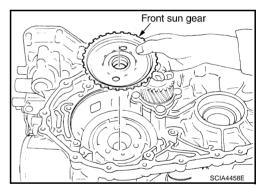


- 16. Install high clutch hub according to the following procedures.
- a. Install needle bearing on front sun gear.

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

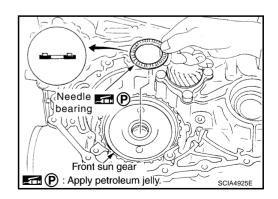


b. Install high clutch hub on front sun gear.

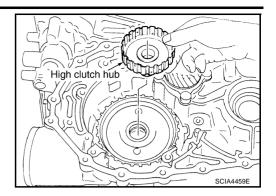


- 17. Install input shaft assembly (high clutch assembly) according to the following procedures.
- a. Install needle bearing on high clutch hub.

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

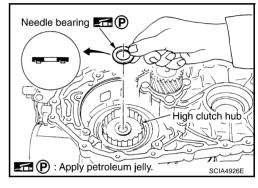


b. Install input shaft assembly (high clutch assembly) on high clutch hub.

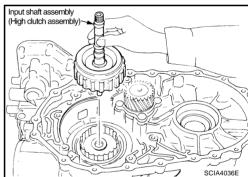


c. Install needle bearing on input shaft assembly (high clutch drum).

CAUTION:

- Apply petroleum jelly to needle bearing.
- Be careful with the direction of needle bearing.

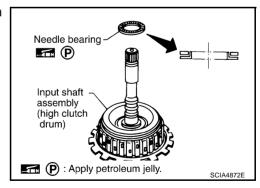

18. Install reverse clutch assembly on input shaft assembly (high clutch drum).

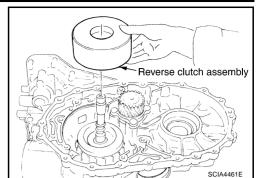

В

Α

ΑT

D

F

F

G

Н

M

Adjustment (2)


ACS007VR

When any parts listed below are replaced, adjust total end play and reverse clutch end play.


Part name	Total end play	Reverse clutch end play
transaxle case	•	•
Overrun clutch hub	•	•
Rear internal gear	•	•
Rear planetary carrier	•	•
Rear sun gear	•	•
Front planetary carrier	•	•
Front sun gear	•	•
High clutch hub	•	•
Input shaft assembly (high clutch drum)	•	•
Oil pump cover	•	•
Reverse clutch drum	_	•

TOTAL END PLAY


- Measure clearance between reverse clutch drum and needle bearing for oil pump cover.
- Select proper thickness of bearing race so that end play is within specifications.

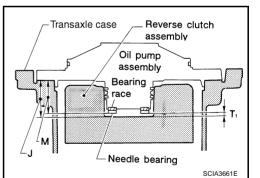

1. Measure dimensions "K" and "L" and then calculate dimension "J".

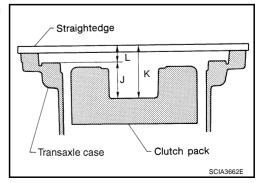


a. Measure dimension "K".

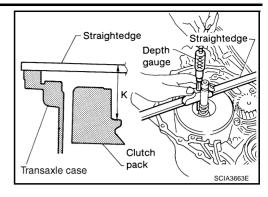


- b. Measure dimension "L".
- c. Calculate dimension "J".

"J": Distance between oil pump fitting surface of transaxle case and needle bearing mating surface of input shaft assembly (high clutch drum).

$$J = K - L$$

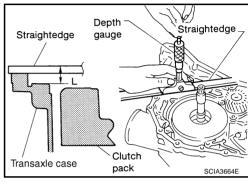


- 2. Measure dimension "M".
- a. Place bearing race and needle bearing on oil pump assembly.

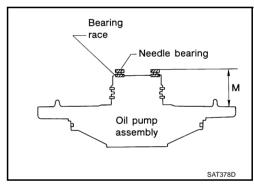

b. Measure dimension "M".


"M": Distance between transaxle case fitting surface of oil pump cover and needle bearing on oil pump cover.

"M1": Indication of gauge.

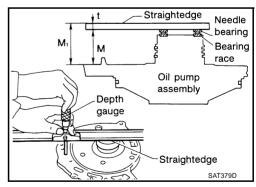

c. Measure thickness of straightedge "t".

 $M = M_1 - t$

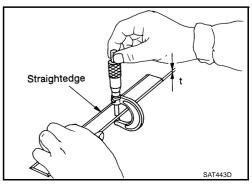

3. Adjust total end play "T1".

$$T_1 = J - M$$


Total end play "T1":

0.25 - 0.55 mm (0.0098 - 0.0217 in)


• Select proper thickness of bearing race so that total end play is within specifications. Refer to AT-392, "Total End Play".

REVERSE CLUTCH END PLAY


- Measure clearance between oil pump cover and thrust washer for reverse clutch drum.
- Select proper thickness of thrust washer so that end play is within specification.

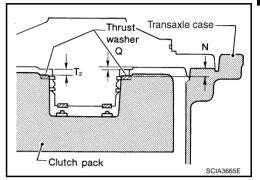

 Measure dimensions "O" and "P" and then calculate dimension "N".

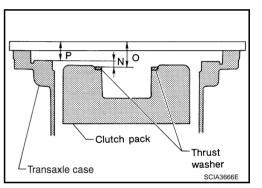


- a. Place thrust washer on reverse clutch drum.
- b. Measure dimension "O".

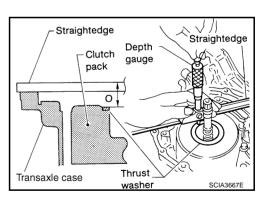

- c. Measure dimension "P".
- d. Calculate dimension "N".

"N": Distance between oil pump fitting surface of transaxle case and thrust washer on reverse clutch drum.

$$N = O - P$$

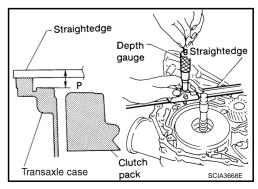

ΑT

Α

В

D

Е


Н

J


K

L

2. Measure dimensions "R" and "S" and then calculate dimension "Q".

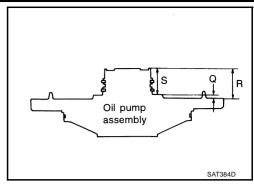


a. Measure dimension "R".

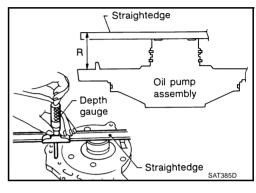

- b. Measure dimension "S".
- c. Calculate dimension "Q".

"Q": Distance between transaxle case fitting surface and thrust washer mating surface.

$$Q = R - S$$

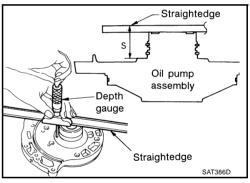

3. Adjust reverse clutch end play "T2".

$$T_2 = N - Q$$

Reverse clutch end play:

0.61 - 1.0 mm (0.0240 - 0.039 in)

 Select proper thickness of thrust washer so that reverse clutch end play is within specifications. Refer to <u>AT-392</u>, "<u>Reverse Clutch End Play</u>".

Assembly (3)


ACS007VS

1. Install anchor end pin and lock nut on transaxle case.

CAUTION:

Do not reuse anchor end pin.

2. Place brake band and strut on outside of reverse clutch drum. Tighten anchor end pin just enough so that brake band is evenly fitted on reverse clutch drum.

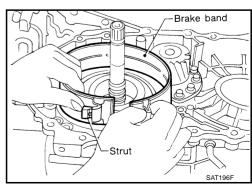

3. Place bearing race selected in total end play adjustment step on oil pump cover.

CAUTION:

Apply petroleum jelly to bearing race.

4. Place thrust washer selected in reverse clutch end play step on reverse clutch drum.

CAUTION:


Apply petroleum jelly to thrust washer.

5. Install oil pump assembly and gasket on transaxle case.

CAUTION:

Do not reuse gasket.


 Tighten oil pump fitting bolts to the specified torque. Refer to AT-272, "Components".

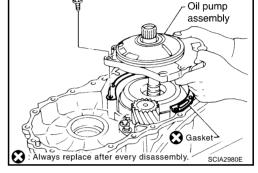

7. Install O-ring to input shaft assembly (high clutch drum).

CAUTION:

- Do not reuse O-ring.
- Apply petroleum jelly to O-ring.

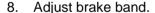


CAUTION:

Do not reuse anchor end pin.


a. Tighten anchor end pin to the specified torque.



- b. Back off anchor end pin two and a half turns.
- c. While holding anchor end pin, tighten lock nut. Refer to <u>AT-389</u>, "BRAKE BAND".
- 9. Apply compressed air to oil holes of transaxle case and check operation of brake band.

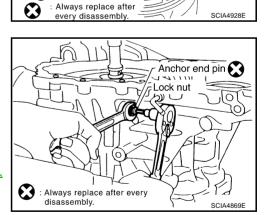

(P): Apply petroleum jelly

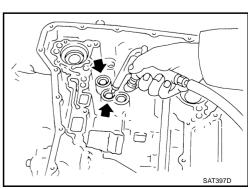

P: Apply petroleum jelly
★: Select with proper thickness

Bearing race ★ P

Thrust washer ★ P

SCIA3629E

AT

В

Α

Е

D

F

Н


O-ring 🔀 🗺 🗭

J


L

M

10. Install final drive assembly on transaxle case.

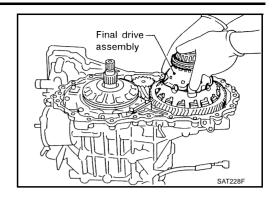


11. Install differential lubricant tube on converter housing. Tighten differential lubricant tube bolts to the specified torque. Refer to AT-272, "Components".

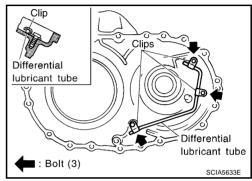

12. Install O-ring on differential oil port of transaxle case.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.

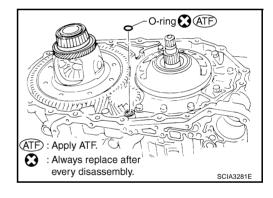

13. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to <u>GI-48</u>, "<u>Recommended Chemical Products and Sealants</u>" .) to transaxle case as shown in the figure.

CAUTION:

Completely remove all moisture, oil and old sealant, etc. from the transaxle case and converter housing mounting surface.

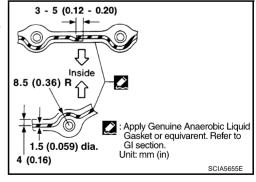


- 14. Install converter housing on transaxle case. Tighten converter housing mounting bolts to the specified torque. Refer to AT-272, <a href=""Components".
- 15. Install O-ring on plug. (For 2WD models)


CAUTION:

Do not reuse O-ring.

16. Install plug on converter housing. (For 2WD models)

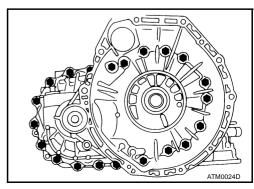


- 17. Install accumulator pistons.
- a. Check contact surface of accumulator piston for damage.

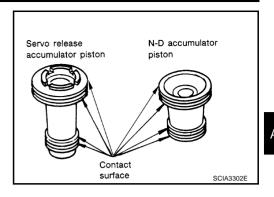

b. Install O-rings on accumulator pistons. Refer to AT-386, "O-RING".

CAUTION:


- Do not reuse O-rings.
- Apply ATF to O-rings.

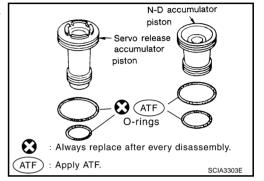

Install accumulator pistons and return springs on transaxle case. Refer to AT-387, "RETURN SPRING".

CAUTION:


Apply ATF to inner surface of transaxle case.

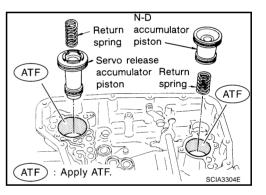

18. Install lip seals for band servo oil holes on transaxle case.

CAUTION:


- Do not reuse lip seals.
- Apply ATF to lip seals.

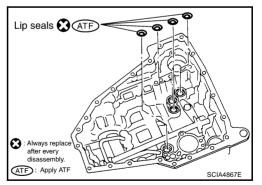

19. Install low & reverse brake tube and oil sleeve. Tighten Low & reverse brake tube bolts to the specified torque. Refer to AT-272, "Components".

CAUTION:

- Do not reuse oil sleeve.
- Apply ATF to oil sleeve.

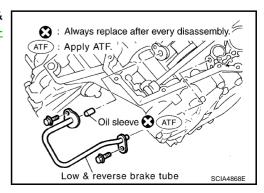

AT-381 Revision: 2005 March 2005 X-Trail В

Α

ΑT

D

M


- 20. Install control valve assembly.
- a. Install O-ring to terminal body.

CAUTION:


- Do not reuse O-ring.
- Apply ATF to O-ring.
- b. Insert manual valve into control valve assembly.

CAUTION:

Apply ATF to manual valve.

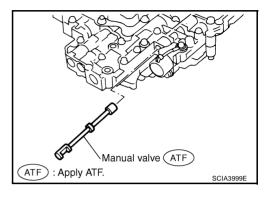


- c. Set manual shaft in "N" position.
- d. Install control valve assembly on transaxle case while aligning manual valve with manual plate.

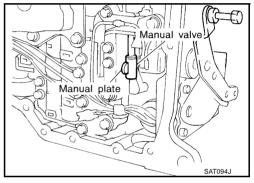

- e. Pass terminal cord assembly through transaxle case and install terminal body on transaxle case by pushing it.
- f. Install snap ring to terminal body.

CAUTION:


Do not expand snap ring excessively.

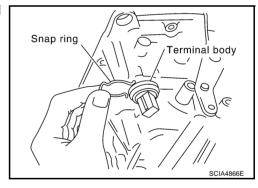

Tighten control valve assembly fixing bolts A, B and C to the specified torque. Refer to AT-272, "Components".

Bolt length, number and location:

Bolt symbol	А	В	С
Bolt length " ℓ" mm (in)	40.0 mm (1.575 in)	33.0 mm (1.299 in)	43.5 mm (1.713 in)
Number of bolts	5	6	2

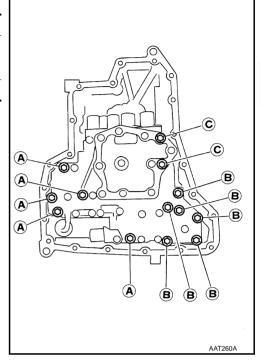

- 21. Install oil pan.
- a. Attach a magnets to oil pan.
- b. Install oil pan gasket on oil pan.

CAUTION:

- Do not reuse oil pan gasket.
- Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.
- c. Install oil pan (with oil pan gasket) on transaxle case.

CAUTION:

Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

d. Tighten oil pan fitting bolts to the specified torque. Refer to AT-272, "Components".

CAUTION:

- Always replace oil pan fitting bolts as they are self-sealing bolts.
- Tighten four bolts in a crisscross pattern to prevent dislocation of oil pan gasket.

AT-383

e. Install drain plug gasket on drain plug.


CAUTION:

Do not reuse drain plug gasket.

- Tighten drain plug to the specified torque. Refer to AT-272, "Components".
- 22. Install PNP switch.

Revision: 2005 March

- Set manual shaft in "P" position.
- Temporarily install PNP switch on manual shaft. b.
- Move manual shaft to "N" position.

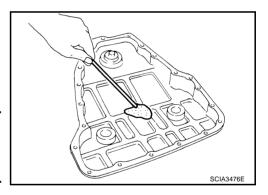

Manual shaft PNP switch : Bolt (3) SCIA3154E

2005 X-Trail

В

Α

ΑT

F

Н

M


- Use a 3 mm (0.12 in) pin for this adjustment.
- i. Insert the pin straight into the manual shaft adjustment hole.
- ii. Rotate PNP switch until the pin can also be inserted straight into hole in PNP switch.
- e. Tighten PNP switch fitting bolts. Refer to AT-272, "Components"
- f. Remove pin from adjustment hole after adjusting PNP switch.
- 23. Install bracket on transaxle case.
- 24. Install O-ring on revolution sensor.


CAUTION:

- Do not reuse O-ring.
- Apply petroleum jelly to O-ring.
- 25. Install revolution sensor on transaxle case.
- 26. Install torque converter.
- a. Pour ATF into torque converter.


CAUTION:

- Approximately 1 liter (1-1/8 US qt, 7/8 Imp qt) of fluid is required for a new torque converter.
- When reusing old torque converter, add the same amount of fluid as was drained.

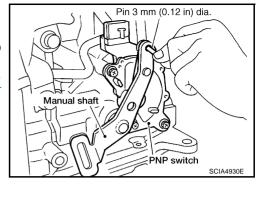

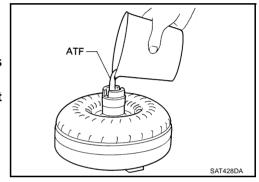


b. Install torque converter while aligning notches of torque converter with notches of oil pump.

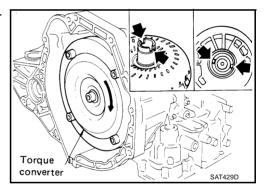

c. Measure distance "A" to Make sure that torque converter is in proper position.

Distance "A": 14 mm (0.55 in) or more

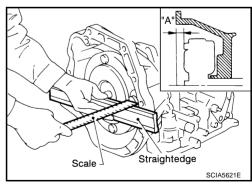

SERVICE DATA AND SPECIFICATION General Specifications				(2D2)			PFP:00030
Engine	рсопто				QR2	PSDE	ACS007V
Axle type				2'	WD		WD
Automatic trans	saxle mode	1			RE4F		
		T	mber	85	5X65		X64
Automatic transaxle assembly Model code numb				2.7			
		2nd			1.5		
		3rd			1.0	000	
Transaxle gear	ratio	4th			0.6	694	
		Reverse			2.2	272	
		Final drive			4.0)87	
Recommended	l fluid			NISSAN Auto	omatic Transmissio MERCONTM, or		
Fluid capacity	ℓ (US qt,	Imp qt)			8.5 (9,	7-1/2)	
Refer to MA-1	1, "Fluids a	nd Lubricants" .					
		01 :4:	_				
ehicle S _l	peed W	/hen Shifting	Gears				ACS007V
Throttle posi-	Shift pat	ttern		· ·	ed km/h (MPH)	Do Do	
<u> </u>		ttern $D1 \rightarrow D2$	D2 → D3	D3 → D4	D4 → D3	D3 → D2	D2 → D1
Throttle position		ttern $D1 \rightarrow D2$		· ·	. ,	D ₃ → D ₂ 97 - 105 (60 - 65)	
Throttle posi-	Shift pat	ttern $D1 \to D2$ $57 - 65$ $(35 - 40)$	D2 → D3 107 - 115	D3 → D4 167 - 175 (104 - 109) 167 - 175	D4 → D3 163 - 171 (101 - 106) 163 - 171	97 - 105	D2 → D1 41 - 49
Throttle position	Shift pat	ttern $D1 \rightarrow D2$ $57 - 65$ $(35 - 40)$ wer $57 - 65$ $(35 - 40)$	D2 → D3 107 - 115 (66 - 71) 107 - 115 (66 - 71)	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109)	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106)	97 - 105 (60 - 65) 97 - 105 (60 - 65)	$\begin{array}{c} D2 \to D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \end{array}$
Throttle position	Shift pat	ttern $D1 \rightarrow D2$ ort $57 - 65$ $(35 - 40)$ over $36 - 44$	$\begin{array}{c} D2 \to D3 \\ 107 - 115 \\ (66 - 71) \\ 107 - 115 \\ (66 - 71) \\ \hline 71 - 79 \end{array}$	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106) 77 - 85	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46	$\begin{array}{c} D2 \rightarrow D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \\ \\ 5 - 13 \end{array}$
Throttle position	Shift pat Comfo	ttern $D1 \rightarrow D2$ $57 - 65$ $(35 - 40)$ out $57 - 65$ $(35 - 40)$ out $36 - 44$ $(22 - 27)$ $42 - 50$	D2 → D3 107 - 115 (66 - 71) 107 - 115 (66 - 71)	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109)	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106)	97 - 105 (60 - 65) 97 - 105 (60 - 65)	$\begin{array}{c} D2 \to D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \end{array}$
Throttle position	Shift pat	ttern $D1 \rightarrow D2$ $57 - 65$ $(35 - 40)$ out $57 - 65$ $(35 - 40)$ out $36 - 44$ $(22 - 27)$ $42 - 50$	$\begin{array}{c} D2 \to D3 \\ 107 - 115 \\ (66 - 71) \\ 107 - 115 \\ (66 - 71) \\ \hline 71 - 79 \\ (44 - 49) \\ \end{array}$	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86)	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106) 77 - 85 (48 - 53)	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28)	$\begin{array}{c} D2 \to D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \\ \hline 5 - 13 \\ (3 - 8) \end{array}$
Throttle position Full throttle Half throttle	Shift pat Comfo Auto po Comfo	ttern $D1 \rightarrow D2$ ort $57 - 65$ $(35 - 40)$ ower $57 - 65$ $(35 - 40)$ ort $36 - 44$ $(22 - 27)$ over $42 - 50$	$\begin{array}{c} D2 \rightarrow D3 \\ 107 - 115 \\ (66 - 71) \\ 107 - 115 \\ (66 - 71) \\ \hline 71 - 79 \\ (44 - 49) \\ \hline 79 - 87 \\ (49 - 54) \\ \end{array}$	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86) 131 - 139 (81 - 86)	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106) 77 - 85 (48 - 53) 77 - 85 (48 - 53)	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28) 45 - 53	$\begin{array}{c} D2 \to D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \\ \hline 5 - 13 \\ (3 - 8) \\ \hline 5 - 13 \end{array}$
Throttle position Full throttle Half throttle	Shift pat Comfo Auto po Comfo Auto po	ttern $D1 \rightarrow D2$ $57 - 65$ $(35 - 40)$ out $57 - 65$ $(35 - 40)$ out $36 - 44$ $(22 - 27)$ out $42 - 50$ $(26 - 31)$ /hen Performi	$D2 \rightarrow D3$ 107 - 115 (66 - 71) 107 - 115 (66 - 71) 71 - 79 (44 - 49) 79 - 87 (49 - 54) 108 - 308	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86) 131 - 139 (81 - 86)	$\begin{array}{c} D4 \rightarrow D3 \\ 163 - 171 \\ (101 - 106) \\ 163 - 171 \\ (101 - 106) \\ \hline 77 - 85 \\ (48 - 53) \\ \hline 77 - 85 \\ (48 - 53) \\ \hline \textbf{OOK-Up} \\ \end{array}$	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28) 45 - 53	$\begin{array}{c} D2 \to D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \\ \hline 5 - 13 \\ (3 - 8) \\ \hline 5 - 13 \\ (3 - 8) \\ \end{array}$
Throttle position Full throttle Half throttle	Shift pat Comfo Auto po Comfo Auto po	ttern $D1 \rightarrow D2$ ort $57 - 65$ $(35 - 40)$ ower $57 - 65$ $(35 - 40)$ ort $36 - 44$ $(22 - 27)$ ower $42 - 50$ $(26 - 31)$ /hen Performi	$D2 \rightarrow D3$ 107 - 115 (66 - 71) 107 - 115 (66 - 71) 71 - 79 (44 - 49) 79 - 87 (49 - 54) 108 - 308	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86) 131 - 139 (81 - 86)	$\begin{array}{c} D4 \rightarrow D3 \\ 163 - 171 \\ (101 - 106) \\ 163 - 171 \\ (101 - 106) \\ \hline 77 - 85 \\ (48 - 53) \\ \hline 77 - 85 \\ (48 - 53) \\ \hline \textbf{OOK-Up} \\ \end{array}$	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28) 45 - 53 (28 - 33) Vehicle speed km/h (MPH)	$\begin{array}{c} D2 \rightarrow D1 \\ 41 - 49 \\ (25 - 30) \\ 41 - 49 \\ (25 - 30) \\ \\ 5 - 13 \\ (3 - 8) \\ \\ \hline 5 - 13 \\ (3 - 8) \\ \end{array}$
Throttle position Full throttle Half throttle Zehicle Si	Shift pat Comfo Auto po Comfo Auto po	ttern $D1 o D2$ ort $57 - 65$ $(35 - 40)$ ower $57 - 65$ $(35 - 40)$ ort $36 - 44$ $(22 - 27)$ ower $42 - 50$ $(26 - 31)$ /hen Performi Overdrive control switt (Shift position)	$D2 \rightarrow D3$ 107 - 115 (66 - 71) 107 - 115 (66 - 71) 71 - 79 (44 - 49) 79 - 87 (49 - 54) 20 - 30 - 30 - 30 - 30 - 30 - 30 - 30 -	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86) 131 - 139 (81 - 86)	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106) 77 - 85 (48 - 53) 77 - 85 (48 - 53) Ook-Up Lock-up "ON" 61 - 69 (38 - 43)	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28) 45 - 53 (28 - 33) Vehicle speed km/h (MPH)	D2 → D1 41 - 49 (25 - 30) 41 - 49 (25 - 30) 5 - 13 (3 - 8) 5 - 13 (3 - 8) ACSOOBQ
Throttle position Full throttle Half throttle	Shift pat Comfo Auto po Comfo Auto po	ttern $D1 \rightarrow D2$ $57 - 65$ $(35 - 40)$ out $57 - 65$ $(35 - 40)$ out $36 - 44$ $(22 - 27)$ out $42 - 50$ $(26 - 31)$ /hen Performi	$\begin{array}{c} D2 \to D3 \\ 107 - 115 \\ (66 - 71) \\ 107 - 115 \\ (66 - 71) \\ \hline 107 - 115 \\ (66 - 71) \\ \hline 71 - 79 \\ (44 - 49) \\ \hline 79 - 87 \\ (49 - 54) \\ \hline \mbox{\bf ng and } \mbox{\bf Re} \\ \mbox{\bf ch} \\ \hline \end{array}$	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86) 131 - 139 (81 - 86) eleasing Lo	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106) 77 - 85 (48 - 53) 77 - 85 (48 - 53) OOk-Up	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28) 45 - 53 (28 - 33) Vehicle speed km/h (MPH)	D2 → D1 41 - 49 (25 - 30) 41 - 49 (25 - 30) 5 - 13 (3 - 8) 5 - 13 (3 - 8) ACSOOBQ
Throttle position Full throttle Half throttle Zehicle Si	Shift pat Comfo Auto po Comfo Auto po Deed W	ttern $D1 o D2$ ort $57 - 65$ $(35 - 40)$ ower $57 - 65$ $(35 - 40)$ ort $36 - 44$ $(22 - 27)$ ower $42 - 50$ $(26 - 31)$ /hen Performi Overdrive control switt (Shift position)	$\begin{array}{c} D2 \to D3 \\ 107 - 115 \\ (66 - 71) \\ 107 - 115 \\ (66 - 71) \\ \hline 107 - 115 \\ (66 - 71) \\ \hline 71 - 79 \\ (44 - 49) \\ \hline 79 - 87 \\ (49 - 54) \\ \hline \mbox{\bf ng and } \mbox{\bf Re} \\ \mbox{\bf ch} \\ \hline \end{array}$	D3 → D4 167 - 175 (104 - 109) 167 - 175 (104 - 109) 131 - 139 (81 - 86) 131 - 139 (81 - 86) eleasing Leepstern	D4 → D3 163 - 171 (101 - 106) 163 - 171 (101 - 106) 77 - 85 (48 - 53) 77 - 85 (48 - 53) Ook-Up Lock-up "ON" 61 - 69 (38 - 43)	97 - 105 (60 - 65) 97 - 105 (60 - 65) 38 - 46 (23 - 28) 45 - 53 (28 - 33) Vehicle speed km/h (MPH)	D2 → D1 41 - 49 (25 - 30) 41 - 49 (25 - 30) 5 - 13 (3 - 8) 5 - 13 (3 - 8) ACSOOBQ

Engine speed	Line pressure	kPa (kg/cm ² , psi)
Lingino opeca	"D", "2" and "1" positions	"R" position
At idle speed	500 (5.1, 73)	778 (7.9, 113)
At stall speed	1,233 (12.6, 179)	1,918 (19.6, 278)

Control Valves CONTROL VALVE AND PLUG RETURN SPRINGS

ACS007VX

Unit: mm (in)

				Item	•
		Parts			
			Part No.*	Free length	Outer diameter
	L14	Pilot valve spring	31742-3AX03	38.98 (1.535)	8.9 (0.350)
	L15	1-2 accumulator valve spring	31742-3AX00	20.5 (0.807)	6.95 (0.274)
	LIS	1-2 accumulator piston spring	31742-3AX08	55.26 (2.176)	19.6 (0.772)
	L16	1st reducing valve spring	31742-80X05	27.0 (1.063)	7.0 (0.276)
Upper body	L17	3-2 timing valve spring	31736-01X00	23.29 (0.917)	6.65 (0.262)
	L18	Overrun clutch reducing valve spring	31742-80X15	37.5 (1.476)	6.9 (0.272)
	L19	Torque converter relief valve spring	31742-80X07	31.0 (1.220)	9.0 (0.354)
	L20	Torque converter clutch control valve spring	31742-85X00	57.0 (2.244)	6.5 (0.256)
	L21	Cooler check valve spring	31742-85X01	29.4 (1.157)	6.0 (0.236)
	L3	Pressure regulator valve spring	31742-80X13	45.0 (1.772)	15.0 (0.591)
	L4	Overrun clutch control valve spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	L5	Accumulator control valve spring	31742-80X02	22.0 (0.866)	6.5 (0.256)
	L6	Shift valve A spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
Lower body	L7	Shuttle valve spring	31762-41X04	51.0 (2.008)	5.65 (0.222)
	L12	Shift valve B spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	L13	Pressure modifier piston spring	31742-41X15	30.5 (1.201)	9.8 (0.386)
	L13	Pressure modifier valve spring	31742-80X16	32.0 (1.260)	6.9 (0.272)
	_	Oil cooler relief valve spring	31872-31X00	17.02 (0.670)	8.0 (0.315)

^{*:} Always check with the Parts Department for the latest parts information.

Accumulator O-RING

ACS007VY

Unit: mm (in)

Accumulator	Part No.*	Inner diameter (Small)	Part No.*	Inner diameter (Large)
Servo release accumulator	31526-41X03	26.9 (1.059)	31526-41X02	44.2 (1.740)
N-D accumulator	31526-31X08	34.6 (1.362)	31672-21X00	39.4 (1.551)

^{*:} Always check with the Parts Department for the latest parts information.

RETURN SPRING

Unit: mm (in)

Accumulator	Part number*	Free length	Outer diameter
Servo release accumulator	31605-80X00	52.5 (2.067)	20.1 (0.791)
N-D accumulator	31605-31X15	43.5 (1.713)	28.0 (1.102)

^{*:} Always check with the Parts Department for the latest parts information.

Clutch and Brakes REVERSE CLUTCH

В

D

Н

M

Model code number		85X64, 8	35X65	
Number of drive plates		2		
Number of driven plates		2		
D: - 1 (4): 1 ()	Standard	1.6 (0.0	063)	
Drive plate thickness mm (in)	Wear limit	1.4 (0.0	055)	
Driven plate thickness mm (in)	Standard	1.8 (0.0	071)	
Ole	Standard	0.5 - 0.8 (0.02	20 - 0.031)	
Clearance mm (in)	Wear limit	1.2 (0.047)		
	L	Thickness mm (in)	Part number*	
Thickness of retaining plates		6.6 (0.260) 6.8 (0.268) 7.0 (0.276) 7.2 (0.283) 7.4 (0.291) 7.6 (0.299) 7.8 (0.307)	31537-80X78 31537-80X79 31537-80X80 31537-80X81 31537-80X82 31537-80X20 31537-80X21	

^{*:} Always check with the Parts Department for the latest parts information.

HIGH CLUTCH

Model code number		85X64, 8	5X65		
Number of drive plates		3			
Number of driven plates	olates 7*1 + 1*2		1*2		
Standard		1.6 (0.0	063)		
Drive plate thickness mm (in)	Wea	ar limit	1.4 (0.0	055)	
Driven plate thickness _mm (in)	*1 Standard		1.4 (0.0	055)	
Driven plate thickness mm (in)	*2	Standard	2.0 (0.0	079)	
Clearence man (in)	Star	ndard	1.8 - 2.2 (0.071 - 0.087)		
Clearance mm (in)	Wea	ar limit	2.8 (0.110)		
			Thickness mm (in)	Part number*	
			3.2 (0.126)	31537-81X11	
Thickness of retaining plates		3.4 (0.134)	31537-81X12		
		3.6 (0.142)	31537-81X13		
			3.8 (0.150)	31537-81X14	
			4.0 (0.157)	31537-81X15	

^{*:} Always check with the Parts Department for the latest parts information.

Model code number		85X64, 8	85X64, 85X65		
Number of drive plates		5			
Number of driven plates		5			
Deive alete this leaves are (in)	Standard	1.6 (0.0	063)		
Drive plate thickness mm (in)	Wear limit	1.4 (0.0	955)		
Driven plate thickness mm (in)	Standard	1.8 (0.0	71)		
01	Standard	0.45 - 0.85 (0.01	0.45 - 0.85 (0.0177 - 0.0335)		
Clearance mm (in)	Wear limit	1.85 (0.0728)			
	I	Thickness mm (in)	Part number*		
Thickness of retaining plates		3.2 (0.126) 3.4 (0.134) 3.6 (0.142) 3.8 (0.150) 4.0 (0.157) 4.2 (0.165) 4.4 (0.173)	31537-80X76 31537-80X75 31537-80X70 31537-80X71 31537-80X72 31537-80X73 31537-80X74		

^{*:} Always check with the Parts Department for the latest parts information.

OVERRUN CLUTCH

Model code number		85X64, 8	85X64, 85X65	
Number of drive plates		3		
Number of driven plates		5	5	
Drive plate thickness mm (in) Standard Wear limit	Standard	1.6 (0.063)		
	Wear limit	1.4 (0.0	055)	
Driven plate thickness mm (in)	Standard	1.6 (0.0	063)	
Standard	0.7 - 1.1 (0.028 - 0.043)			
Clearance mm (in) Wear limit		1.7 (0.067)		
	-1	Thickness mm (in)	Part number*	
Thickness of retaining plates		3.0 (0.118) 3.2 (0.126) 3.4 (0.134) 3.6 (0.142) 3.8 (0.150)	31537-80X65 31537-80X66 31537-80X67 31537-80X68 31537-80X69	

^{*:} Always check with the Parts Department for the latest parts information.

Model code number		85X64, 85X65		
Number of drive plates		6	6	
Number of driven plates		6	6	
Drive plate this knows are visit	Standard	1.8 (0.0	071)	
Drive plate thickness mm (in) Wear limit		1.6 (0.0	063)	
Driven plate thickness mm (in)	Standard	1.8 (0.0	071)	
Ol (in)	Standard	1.7 - 2.1 (0.067 - 0.083)		
Clearance mm (in)	Wear limit 3.3 (0.130)		130)	
	1	Thickness mm (in)	Part number*	
		2.0 (0.079) 2.2 (0.087)	31667-80X10 31667-80X11	_
Thiskness of retaining plates		2.4 (0.094)	31667-80X12	
Thickness of retaining plates		2.6 (0.102)	31667-80X13	
		2.8 (0.110)	31667-80X14	
		3.0 (0.118)	31667-80X15	
		3.2 (0.126) 3.4 (0.134)	31667-80X16 31667-80X17	

CLUTCH AND BRAKE RETURN SPRINGS

Unit: mm (in)

Н

Κ

M

Parts	Part number*	Free length	Outer diameter
Forward clutch (Overrun clutch) (22 pcs)	31505-80X02	21.4 (0.843)	10.3 (0.406)
High clutch (12 pcs)	31505-80X05	22.5 (0.886)	10.8 (0.425)
Low & reverse brake (24 pcs)	31505-80X07	24.1 (0.949)	6.6 (0.260)

^{*:} Always check with the Parts Department for the latest parts information.

BRAKE BAND

Anchor end pin tightening torque N-m (kg-m, in-lb)	4.9 (0.50, 43)
Number of returning revolutions for anchor end pin	2.5
Lock nut tightening torque N-m (kg-m, ft-lb)	34 (3.5, 25)

Final Drive DIFFERENTIAL SIDE GEAR CLEARANCE

ACS007W0

Clearance between side gear and differential case with	0.1 - 0.2 (0.004 - 0.008)
washer mm (in)	0.1 - 0.2 (0.004 - 0.008)

DIFFERENTIAL SIDE GEAR THRUST WASHERS

Thickness mm (in)	Part number*
0.75 (0.0295)	38424-81X00
0.80 (0.0315)	38424-81X01
0.85 (0.0335)	38424-81X02
0.90 (0.0354)	38424-81X03
0.95 (0.0374)	38424-81X04

^{*:} Always check with the Parts Department for the latest parts information.

Thickness	mm (in)	Part number	er*	
0.48 (0.0		31438-80X00		
0.52 (0.0205)		31438-80X01		
0.56 (0.0220)		31438-80X02		
0.60 (0.0236)		31438-80X	31438-80X03	
0.64 (0.0252)		31438-80X04		
0.68 (0.0268)		31438-80X05		
0.72 (0.0283) 0.76 (0.0299)		31438-80X06		
0.76 (0.0		31438-80X07 31438-80X08		
0.80 (0.0		31438-80X		
0.88 (0.0	•	31438-80X		
0.92 (0.0	•	31438-80X		
*: Always check with the Parts Depa	rtment for the latest parts info	ormation.		
BEARING PRELOAD				
Differential side bearing preload r	nm (in)	0.05 - 0.09 (0.0020	0 - 0.0035)	
TURNING TORQUE				
Turning torque of final drive assem	bly N·m (kg-cm, in-lb)	0.78 - 1.37 (8.0 - 14.	0, 6.9 - 12.2)	
DI 4 C : :				
Planetary Carrier and PLANETARY CARRIER	Oil Pump		ACS007W	
PLANETARY CARRIER	- Oten dend	0.20 - 0.70 (0.0079		
	- Oten dend	0.20 - 0.70 (0.0079 0.80 (0.03	9 - 0.0276)	
PLANETARY CARRIER Clearance between planetary carrie	er Standard	`		
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in)	er Standard	`	9 - 0.0276) 15)	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP	er Standard	0.80 (0.03	9 - 0.0276) 15) 12 - 0.0020)	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP	er Standard	0.80 (0.03	9 - 0.0276) 15) 12 - 0.0020)	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP	er Standard	0.80 (0.03 ² 0.030 - 0.050 (0.00 ² Inner gea Thickness mm (in)	9 - 0.0276) 15) 12 - 0.0020) ar Part number*	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP	er Standard	0.80 (0.03 ² 0.030 - 0.050 (0.00 ² Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724)	9 - 0.0276) 15) 12 - 0.0020)	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in)	Standard Allowable limit	0.80 (0.03 ² 0.030 - 0.050 (0.00 ² Inner gea Thickness mm (in)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP	Standard Allowable limit	0.80 (0.03 ² 0.030 - 0.050 (0.00 ² Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X01 31346-80X02	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in)	Standard Allowable limit	0.80 (0.03 ² 0.030 - 0.050 (0.00 ² Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X01 31346-80X02	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in)	Standard Allowable limit	0.80 (0.037 0.030 - 0.050 (0.007 Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) Outer gea Thickness mm (in)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X01 31346-80X02 ar Part number*	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in)	Standard Allowable limit	0.80 (0.03 0.030 - 0.050 (0.00 Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) Outer gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X01 31346-80X02 ar Part number* 31347-80X00	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in)	Standard Allowable limit	0.80 (0.037 0.030 - 0.050 (0.007 Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) Outer gea Thickness mm (in)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X01 31346-80X02 ar Part number*	
Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in) Thickness of inner gears and outer	Standard Allowable limit	0.80 (0.03° 0.030 - 0.050 (0.00° Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) Outer gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720)	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X02 ar Part number* 31347-80X00 31347-80X00 31347-80X02	
PLANETARY CARRIER Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in)	Standard Allowable limit gears	0.80 (0.03 ² 0.030 - 0.050 (0.00 ² Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) Outer gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717)	9 - 0.0276) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X02 ar Part number* 31347-80X00 31347-80X00 31347-80X01 31347-80X02	
Clearance between planetary carrie and pinion washer mm (in) OIL PUMP Oil pump side clearance mm (in) Thickness of inner gears and outer Clearance between oil pump	Standard Allowable limit gears Standard	0.80 (0.03° 0.030 - 0.050 (0.00° Inner gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) Outer gea Thickness mm (in) 11.99 - 12.0 (0.4720 - 0.4724) 11.98 - 11.99 (0.4717 - 0.4720) 11.97 - 11.98 (0.4713 - 0.4717) 0.111 - 0.181 (0.004	9 - 0.0276) 15) 12 - 0.0020) ar Part number* 31346-80X00 31346-80X02 ar Part number* 31347-80X00 31347-80X00 31347-80X02 44 - 0.0071)	

^{*:} Always check with the Parts Department for the latest parts information.

Input Shaft SEAL RING CLEARANCE

ACS007W2

Input shaft seal ring clearance mm (in)	Standard	0.08 - 0.23 (0.0031 - 0.0091)
input shart searting dearance thin (iii)	Allowable limit	0.23 (0.0091)

SEAL RING

Outer diameter mm (in)	Inner diameter mm (in)	Width mm (in)	Part number*
26 (1.024)	22.4 (0.882)	1.97 (0.078)	31525 80X02

^{*:} Always check with the Parts Department for the latest parts information.

Revision: 2005 March AT-390 2005 X-Trail

Reduction Pinion Gear ACS007W3 **TURNING TORQUE** Α Turning torque of reduction pinion gear N·m (kg-cm, in-lb) 0.05 - 0.39 (0.5 - 4.0, 0.43 - 3.47) REDUCTION PINION GEAR ADJUSTING SHIMS В NO. Thickness mm (in) Part number NO. Thickness mm (in) Part number* 1 5.00 (0.1969) 31439-81X00 33 5.64 (0.2220) 31439-81X63 ΑT 2 5.02 (0.1976) 31439-81X01 34 5.66 (0.2228) 31439-81X64 3 5.04 (0.1984) 31439-81X02 35 5.68 (0.2236) 31439-81X65 4 5.70 (0.2244) 5.06 (0.1992) 31439-81X03 36 31439-81X66 D 5.08 (0.2000) 5 31439-81X04 37 5.72 (0.2252) 31439-81X67 6 5.10 (0.2008) 31439-81X05 38 5.74 (0.2260) 31439-81X68 F 7 5.12 (0.2016) 31439-81X06 39 5.76 (0.2268) 31439-81X69 8 5.14 (0.2024) 31439-81X07 40 5.78 (0.2276) 31439-81X70 9 5.16 (0.2031) 31439-81X08 41 5.80 (0.2283) 31439-81X71 10 5.18 (0.2039) 31439-81X09 42 5.82 (0.2291) 31439-81X72 11 5.20 (0.2047) 31439-81X10 43 5.84 (0.2299) 31439-81X73 12 5.22 (0.2055) 31439-81X11 44 5.86 (0.2307) 31439-81X74 13 5.24 (0.2063) 31439-81X12 4.60 (0.1811) 31439-85X01 45 14 5.26 (0.2071) 31439-81X13 46 4.62 (0.1819) 31439-85X02 15 5.28 (0.2079) 31439-81X14 47 4.64 (0.1827) 31439-85X03 16 5.30 (0.2087) 31439-81X15 48 4.66 (0.1835) 31439-85X04 17 5.32 (0.2094) 31439-81X16 49 4.68 (0.1843) 31439-85X05 18 5.34 (0.2102) 31439-81X17 50 4.70 (0.1850) 31439-85X06 19 31439-81X18 51 31439-83X11 5.36 (0.2110) 4.72 (0.1858) 5.38 (0.2118) 31439-81X19 4.74 (0.1866) 31439-83X12 20 52 5.40 (0.2126) 53 4.76 (0.1874) 31439-83X13 21 31439-81X20 22 5.42 (0.2134) 31439-81X21 54 4.78 (0.1882) 31439-83X14 23 5.44 (0.2142) 31439-81X22 55 4.80 (0.1890) 31439-83X15 24 5.46 (0.2150) 31439-81X23 56 4.82 (0.1898) 31439-83X16 5.48 (0.2157) 31439-83X17 25 31439-81X24 57 4.84 (0.1906) 5.50 (0.2165) 31439-81X46 31439-83X18 26 58 4.86 (0.1913) 4.88 (0.1921) 27 5.52 (0.2173) 31439-81X47 59 31439-83X19 28 5.54 (0.2181) 31439-81X48 60 4.90 (0.1929) 31439-83X20 29 5.56 (0.2189) 31439-81X49 61 4.92 (0.1937) 31439-83X21 30 5.58 (0.2197) 31439-81X60 62 4.94 (0.1945) 31439-83X22 5.60 (0.2205) 31 31439-81X61 63 4.96 (0.1953) 31439-83X23 31439-81X62 64

5.62 (0.2213)

Band Servo RETURN SPRING

ACS007W4

Unit: mm (in)

31439-83X24

Return spring	Part number*	Free length	Outer diameter
2nd servo return spring	31605-31X20	32.5 (1.280)	25.9 (1.020)
OD servo return spring	31605-80X07	62.6 (2.465)	21.7 (0.854)

4.98 (0.1961)

^{*:} Always check with the Parts Department for the latest parts information.

^{*:} Always check with the Parts Department for the latest parts information.

Output Shaft ACS007W5 **SEAL RING CLEARANCE** 0.10 - 0.25 (0.0039 - 0.0098) Standard Output shaft seal ring clearance mm (in) Allowable limit 0.25 (0.0098) **SEAL RING**

Outer diameter mm (in)	Inner diameter mm (in)	Width mm (in)	Part number*
33.71 (1.327)	30.25 (1.191)	1.95 (0.077)	31525 80X09

^{*:} Always check with the Parts Department for the latest parts information.

END PLAY

Output shaft end play mm (in)	0 - 0.15 (0 - 0.0059)	
OUTPUT SHAFT ADJUSTING SHIMS		
Thickness mm (in)	Part number*	
0.80 (0.0315)	31438-80X60	

Thickness mm (in)	Part number*		
0.80 (0.0315)	31438-80X60		
0.84 (0.0331)	31438-80X61		
0.88 (0.0346)	31438-80X62		
0.92 (0.0362)	31438-80X63		
0.96 (0.0378)	31438-80X64		
1.00 (0.0394)	31438-80X65		
1.04 (0.0409)	31438-80X66		
1.08 (0.0425)	31438-80X67		
1.12 (0.0441)	31438-80X68		
1.16 (0.0457)	31438-80X69		
1.20 (0.0472)	31438-80X70		

^{*:} Always check with the Parts Department for the latest parts information.

Bearing Retainer SEAL RING CLEARANCE

ACS007W6

Bearing retainer seal ring clearance mm (in)	Standard	0.10 - 0.30 (0.0039 - 0.0118)	
	Allowable limit	0.30 (0.0118)	
Total End Play			
Total end play mm (in)		0.25 - 0.55 (0.0098 - 0.0217)	

BEARING RACE FOR ADJUSTING TOTAL END PLAY

Thickness mm (in)	Part number*
0.8 (0.031)	31435-80X00
1.0 (0.039)	31435-80X01
1.2 (0.047)	31435-80X02
1.4 (0.055)	31435-80X03
1.6 (0.063)	31435-80X04
1.8 (0.071)	31435-80X05
2.0 (0.079)	31435-80X06
0.9 (0.035)	31435-80X09
1.1 (0.043)	31435-80X10
1.3 (0.051)	31435-80X11
1.5 (0.059)	31435-80X12
1.7 (0.067)	31435-80X13
1.9 (0.075)	31435-80X14

^{*:} Always check with the Parts Department for the latest parts information.

Reverse Clutch End Play

ACS007W8

Reverse clutch end play mm (in)	0.61 - 1.0 (0.0240 - 0.039)

FUDITET WASHEDS EAT		EVEDSE CLUTC	H DDIIM END	DLAV	
THRUST WASHERS FOR ADJUSTING REVERS Thickness mm (in)				number*	
0.80 (0		31508-80X13			
0.95 (0		31508	3-80X14		
1.10 (0.0433) 1.25 (0.0492)				3-80X15 3-80X16	
1.40 (0).0551)		31508	3-80X17	
1.55 (0 1.70 (0	,			3-80X18 3-80X19	A
1.85 (0	,			3-80X20	
*: Always check with the Parts Dep	partment for the latest p	parts information.			
Removal and Installa	ation				ACS007W9
					Unit: mm (in)
Distance between end of convert	er housing and torque	converter	14	(0.55)	
Shift Solenoid Valve	S				ACS007WA
Gear position	1	2	3		4
Shift solenoid valve A	ON (Closed)	OFF (Open)	OFF (Ope	en) ON	(Closed)
Shift solenoid valve B	ON (Closed)	ON (Closed)	OFF (Ope	en) OF	F (Open)
Solenoid Valves					ACS007WB
Solenoid valves	R	Resistance (Approx.) Ω		Terminal	
Shift solenoid valve A		20 - 30		2	
Shift solenoid valve B		5 - 20		1	
Overrun clutch solenoid valve		20 - 30		3	
Line pressure solenoid valve	olenoid valve 2.5		4		
Torque converter clutch solenoid	d valve	5 - 20		5	
A/T Fluid Temperatu	re Sensor				ACS007WC
Condition		Specification (Approximate			
Cold [20°C (68°F)]		1.5V		2.5 kΩ	
↓ Hot [80°C (176°F)]		↓ 0.5V		↓ 0.3 kΩ	
Revolution Sensor	1		<u> </u>		ACS007WD
Condition				Judgement :	standard
When moving at 20 km/h (12 MPH), use the CONSULT-II pulse frequency measuring function.			450 Hz (Approx.)		
When vehicle parks.			Under 1.3V or over 4.5V		
Dropping Resistor					ACS007WE
Resistance 12 Ω (Approx.)				Approx.)	